

# SECTION **SEC**

## SECURITY CONTROL SYSTEM

A  
B  
C  
D  
E

F  
G  
H  
I  
J

SEC

L  
M  
N  
O  
P

### CONTENTS

#### **WITH INTELLIGENT KEY SYSTEM**

<b>BASIC INSPECTION</b> .....	5
<b>DIAGNOSIS AND REPAIR WORKFLOW</b> .....	5
Work Flow .....	5
<b>PRE-INSPECTION FOR DIAGNOSTIC</b> .....	8
Basic Inspection .....	8
Vehicle Security Operation Check .....	8
<b>INSPECTION AND ADJUSTMENT</b> .....	10
<b>ADDITIONAL SERVICE WHEN REPLACING</b>	
<b>CONTROL UNIT</b> .....	10
ADDITIONAL SERVICE WHEN REPLACING	
CONTROL UNIT : Special Repair Requirement ....	10
<b>ECM RE-COMMUNICATING FUNCTION</b> .....	10
ECM RE-COMMUNICATING FUNCTION : De-	
scription .....	10
ECM RE-COMMUNICATING FUNCTION : Spe-	
cial Repair Requirement .....	10
<b>FUNCTION DIAGNOSIS</b> .....	11
<b>INTELLIGENT KEY SYSTEM/ENGINE</b>	
<b>START FUNCTION</b> .....	11
System Diagram .....	11
System Description .....	11
Component Parts Location .....	13
Component Description .....	14
<b>NVIS (NISSAN VEHICLE IMMOBILIZER SYS-</b>	
<b>TEM-NATS)</b> .....	15
System Diagram .....	15
System Description .....	15
Component Parts Location .....	17
Component Description .....	17
<b>VEHICLE SECURITY SYSTEM</b> .....	19
System Diagram .....	19
System Description .....	19

Component Parts Location .....	20
Component Description .....	21
<b>DIAGNOSIS SYSTEM (BCM)</b> .....	22
<b>COMMON ITEM</b> .....	22
COMMON ITEM : CONSULT-III Function (BCM -	
COMMON ITEM) .....	22
<b>IMMU</b> .....	22
IMMU : CONSULT-III Function (BCM - IMMU) .....	23
<b>THEFT ALM</b> .....	23
THEFT ALM : CONSULT-III Function (BCM -	
THEFT ALM) .....	23
<b>DIAGNOSIS SYSTEM (INTELLIGENT KEY</b>	
<b>UNIT)</b> .....	25
CONSULT-III Function (INTELLIGENT KEY) .....	25
<b>COMPONENT DIAGNOSIS</b> .....	27
<b>U1000 CAN COMM CIRCUIT</b> .....	27
Description .....	27
DTC Logic .....	27
Diagnosis Procedure .....	27
<b>U1010 CONTROL UNIT (CAN)</b> .....	28
Description .....	28
DTC Logic .....	28
Diagnosis Procedure .....	28
Special Repair Requirement .....	28
<b>B2013 ID DISCORD I-KEY-STRG</b> .....	29
Description .....	29
DTC Logic .....	29
Diagnosis Procedure .....	29
<b>B2190, P1614 NATS ANTENNA AMP.</b> .....	32
Description .....	32
DTC Logic .....	32
Diagnosis Procedure .....	32

<b>B2191, P1615 DIFFERENCE OF KEY .....</b>	35	Component Function Check .....	52
Description .....	35	Diagnosis Procedure .....	52
DTC Logic .....	35		
Diagnosis Procedure .....	35		
<b>B2192, P1611 ID DISCORD, IMMU-ECM .....</b>	36	<b>ECU DIAGNOSIS .....</b>	54
Description .....	36	<b>BCM (BODY CONTROL MODULE) .....</b>	54
DTC Logic .....	36	Reference Value .....	54
Diagnosis Procedure .....	36	Terminal Layout .....	57
<b>B2193, P1612 CHAIN OF ECM-IMMU .....</b>	38	Physical Values .....	57
Description .....	38	Wiring Diagram - NVIS .....	63
DTC Logic .....	38	Wiring Diagram - VEHICLE SECURITY SYSTEM... .....	69
Diagnosis Procedure .....	38	Fail Safe .....	78
<b>B2194 ID DISCORD IMMU-I-KEY .....</b>	39	DTC Inspection Priority Chart .....	79
Description .....	39	DTC Index .....	79
DTC Logic .....	39		
Diagnosis Procedure .....	39		
<b>B2552 INTELLIGENT KEY .....</b>	40	<b>INTELLIGENT KEY UNIT .....</b>	81
Description .....	40	Reference Value - Intelligent Key Unit .....	81
DTC Logic .....	40	Reference Value - Steering Lock Solenoid .....	83
Diagnosis Procedure .....	40	Wiring Diagram - INTELLIGENT KEY SYSTEM/	
Special Repair Requirement .....	40	ENGINE START FUNCTION - .....	85
<b>B2590 ID DISCORD BCM-I-KEY .....</b>	41	Fail Safe .....	97
Description .....	41	DTC Inspection Priority Chart .....	98
DTC Logic .....	41	DTC Index .....	98
Diagnosis Procedure .....	41		
<b>P1610 LOCK MODE .....</b>	42	<b>IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) .....</b>	99
Description .....	42	Reference Value .....	99
DTC Logic .....	42	Terminal Layout .....	100
Diagnosis Procedure .....	42	Physical Values .....	101
<b>POWER SUPPLY AND GROUND CIRCUIT .....</b>	43	Wiring Diagram .....	105
<b>INTELLIGENT KEY UNIT .....</b>	43	Fail Safe .....	109
INTELLIGENT KEY UNIT : Diagnosis Procedure... .....	43	DTC Index .....	111
<b>BCM .....</b>	43		
BCM : Diagnosis Procedure .....	43		
<b>KEY CYLINDER SWITCH .....</b>	45	<b>SYMPTOM DIAGNOSIS .....</b>	112
Description .....	45	<b>INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION SYMPTOMS .....</b>	112
Component Function Check .....	45	Symptom Table .....	112
Diagnosis Procedure .....	45		
<b>GLASS HATCH AJAR SWITCH .....</b>	47	<b>VEHICLE SECURITY SYSTEM SYMPTOMS .....</b>	113
Description .....	47	Symptom Table .....	113
Component Function Check .....	47		
Diagnosis Procedure .....	47	<b>NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS SYMPTOMS .....</b>	114
<b>IGNITION KNOB SWITCH .....</b>	49	Symptom Table .....	114
Ignition Knob Switch Check .....	49		
<b>HORN FUNCTION .....</b>	51	<b>PRECAUTION .....</b>	115
Symptom Table .....	51		
<b>VEHICLE SECURITY INDICATOR .....</b>	52	<b>PRECAUTIONS .....</b>	115
Description .....	52	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	115
		Precaution Necessary for Steering Wheel Rotation After Battery Disconnect .....	115
		<b>ON-VEHICLE REPAIR .....</b>	117
		<b>NATS ANTENNA AMP. .....</b>	117
		Removal and Installation .....	117
		<b>INTELLIGENT KEY UNIT .....</b>	118

Removal and Installation .....	118
<b>REMOTE KEYLESS ENTRY RECEIVER .....</b>	<b>119</b>
Removal and Installation .....	119
<b>WITHOUT INTELLIGENT KEY SYSTEM</b>	
<b>BASIC INSPECTION .....</b>	<b>120</b>
<b>DIAGNOSIS AND REPAIR WORKFLOW .....</b>	<b>120</b>
Work Flow .....	120
<b>PRE-INSPECTION FOR DIAGNOSTIC .....</b>	<b>123</b>
Basic Inspection .....	123
<b>INSPECTION AND ADJUSTMENT .....</b>	<b>124</b>
<b>ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT .....</b>	<b>124</b>
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement ..	124
<b>ECM RE-COMMUNICATING FUNCTION .....</b>	<b>124</b>
ECM RE-COMMUNICATING FUNCTION : Description .....	124
ECM RE-COMMUNICATING FUNCTION : Special Repair Requirement .....	124
<b>FUNCTION DIAGNOSIS .....</b>	<b>125</b>
<b>NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS) .....</b>	<b>125</b>
System Diagram .....	125
System Description .....	125
Component Parts Location .....	126
Component Description .....	127
<b>VEHICLE SECURITY SYSTEM .....</b>	<b>128</b>
System Diagram .....	128
System Description .....	128
Component Parts Location .....	129
Component Description .....	130
<b>DIAGNOSIS SYSTEM (BCM) .....</b>	<b>131</b>
<b>COMMON ITEM .....</b>	<b>131</b>
COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM) .....	131
<b>IMMU .....</b>	<b>131</b>
IMMU : CONSULT-III Function (BCM - IMMU) ....	132
<b>THEFT ALM .....</b>	<b>132</b>
THEFT ALM : CONSULT-III Function (BCM - THEFT ALM) .....	132
<b>COMPONENT DIAGNOSIS .....</b>	<b>134</b>
<b>U1000 CAN COMM CIRCUIT .....</b>	<b>134</b>
Description .....	134
DTC Logic .....	134
Diagnosis Procedure .....	134
<b>U1010 CONTROL UNIT (CAN) .....</b>	<b>135</b>
Description .....	135
DTC Logic .....	135
Diagnosis Procedure .....	135
Special Repair Requirement .....	135
<b>B2190, P1614 NATS ANTENNA AMP. ....</b>	<b>136</b>
Description .....	136
DTC Logic .....	136
Diagnosis Procedure .....	136
<b>B2191, P1615 DIFFERENCE OF KEY .....</b>	<b>139</b>
Description .....	139
DTC Logic .....	139
Diagnosis Procedure .....	139
<b>B2192, P1611 ID DISCORD, IMMU-ECM .....</b>	<b>140</b>
Description .....	140
DTC Logic .....	140
Diagnosis Procedure .....	140
<b>B2193, P1612 CHAIN OF ECM-IMMU .....</b>	<b>142</b>
Description .....	142
DTC Logic .....	142
Diagnosis Procedure .....	142
<b>P1610 LOCK MODE .....</b>	<b>143</b>
Description .....	143
DTC Logic .....	143
Diagnosis Procedure .....	143
<b>POWER SUPPLY AND GROUND CIRCUIT ..</b>	<b>144</b>
<b>BCM .....</b>	<b>144</b>
BCM : Diagnosis Procedure .....	144
<b>KEY CYLINDER SWITCH .....</b>	<b>146</b>
Description .....	146
Component Function Check .....	146
Diagnosis Procedure .....	146
<b>GLASS HATCH AJAR SWITCH .....</b>	<b>148</b>
Description .....	148
Component Function Check .....	148
Diagnosis Procedure .....	148
<b>HORN FUNCTION .....</b>	<b>150</b>
Symptom Table .....	150
<b>VEHICLE SECURITY INDICATOR .....</b>	<b>151</b>
Description .....	151
Component Function Check .....	151
Diagnosis Procedure .....	151
<b>ECU DIAGNOSIS .....</b>	<b>153</b>
<b>BCM (BODY CONTROL MODULE) .....</b>	<b>153</b>
Reference Value .....	153
Terminal Layout .....	156
Physical Values .....	156
Wiring Diagram - NVIS - .....	162
Wiring Diagram - VEHICLE SECURITY SYSTEM. ....	166
Fail Safe .....	175

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P  
SEC

---

DTC Inspection Priority Chart .....	176	Symptom Table .....	192
DTC Index .....	176		
<b>IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) .....</b>	<b>178</b>	<b>PRECAUTION .....</b>	<b>193</b>
Reference Value .....	178	<b>PRECAUTIONS .....</b>	<b>193</b>
Terminal Layout .....	179	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	193
Physical Values .....	180	Precaution Necessary for Steering Wheel Rotation After Battery Disconnect .....	193
Wiring Diagram .....	184		
Fail Safe .....	188		
DTC Index .....	190		
<b>SYMPTOM DIAGNOSIS .....</b>	<b>191</b>	<b>ON-VEHICLE REPAIR .....</b>	<b>195</b>
<b>VEHICLE SECURITY SYSTEM SYMPTOMS .</b>	<b>191</b>	<b>NATS ANTENNA AMP. .....</b>	<b>195</b>
Symptom Table .....	191	Removal and Installation .....	195
<b>NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS SYMPTOMS .....</b>	<b>192</b>	<b>REMOTE KEYLESS ENTRY RECEIVER .....</b>	<b>196</b>
		Removal and Installation .....	196

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[WITH INTELLIGENT KEY SYSTEM]


## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORKFLOW

#### Work Flow

INFOID:000000005258935

#### OVERALL SEQUENCE

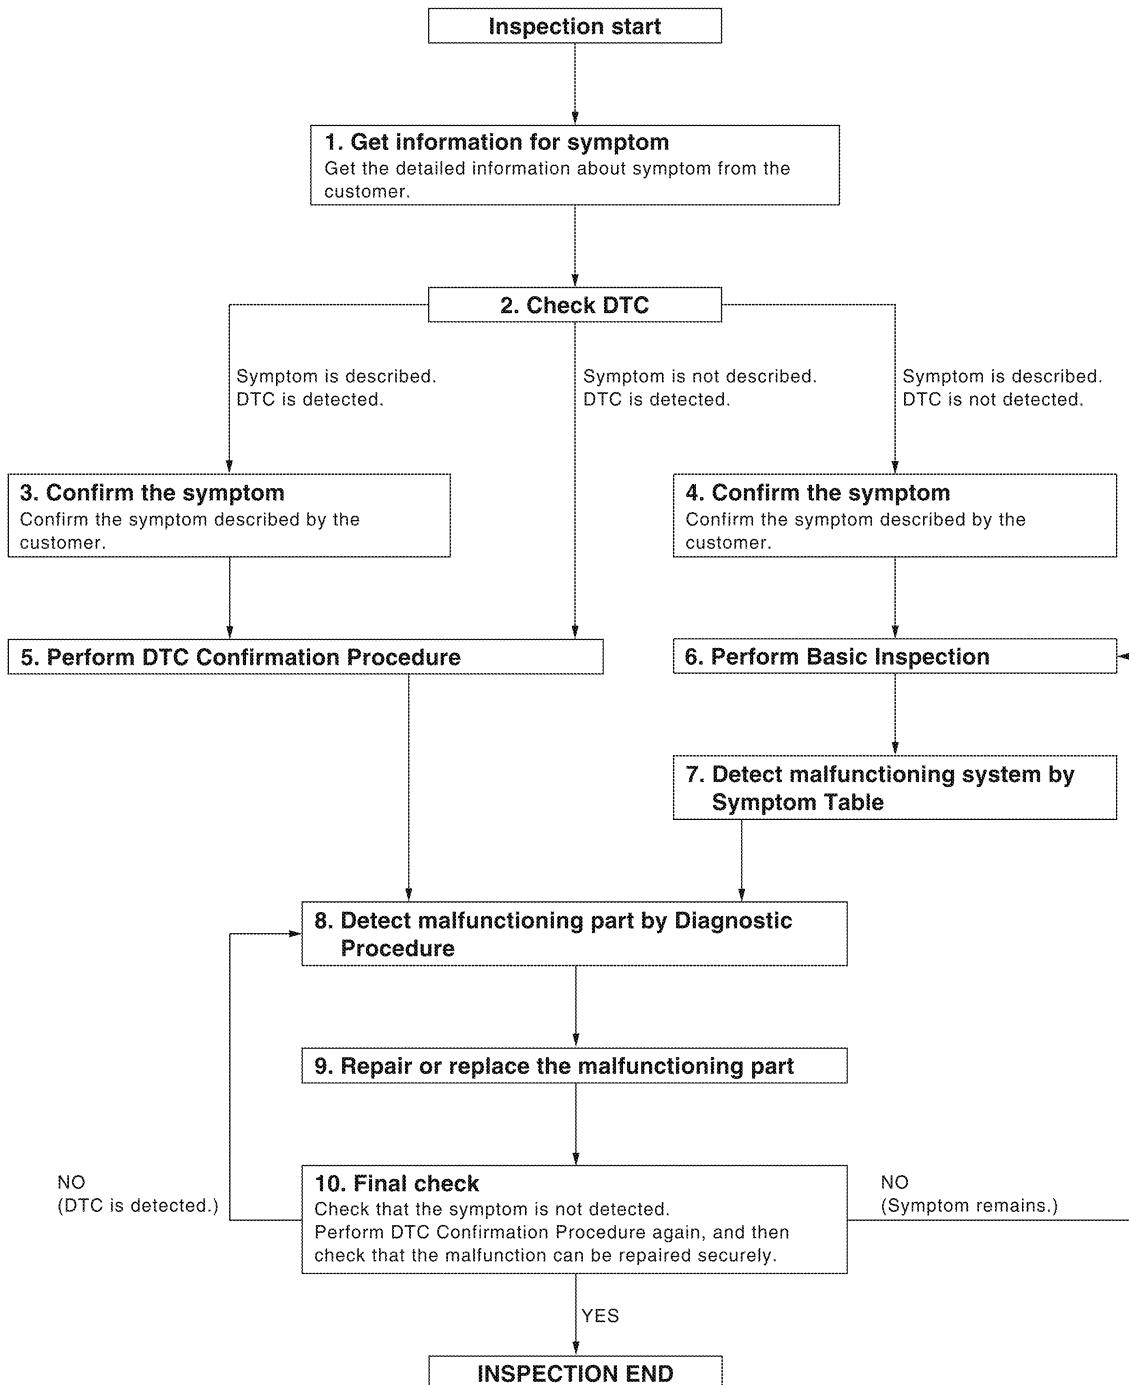

#### DETAILED FLOW

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[WITH INTELLIGENT KEY SYSTEM]

---

## 1. GET INFORMATION FOR SYMPTOM

Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred).

>> GO TO 2

## 2. CHECK DTC

1. Check DTC for Intelligent Key unit and BCM.
2. Perform the following procedure if DTC is displayed.
  - Erase DTC.
  - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

Is any symptom described and any DTC detected?

Symptom is described, DTC is displayed>>GO TO 3

Symptom is described, DTC is not displayed>>GO TO 4

Symptom is not described, DTC is displayed>>GO TO 5

## 3. CONFIRM THE SYMPTOM

Confirm the symptom described by the customer.

Connect CONSULT-III to the vehicle in "DATA MONITOR" mode and check real-time diagnosis results.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5

## 4. CONFIRM THE SYMPTOM

Confirm the symptom described by the customer.

Connect CONSULT-III to the vehicle in "DATA MONITOR" mode and check real-time diagnosis results.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6

## 5. PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC Confirmation Procedure for the displayed DTC, and then check that DTC is detected again.

If two or more DTCs are detected, refer to [SEC-98, "DTC Inspection Priority Chart"](#) (Intelligent Key unit), [SEC-79, "DTC Inspection Priority Chart"](#) (BCM) and determine trouble diagnosis order.

Is DTC detected?

YES >> GO TO 8

NO >> Refer to [GI-37, "Intermittent Incident"](#).

## 6. PERFORM BASIC INSPECTION

Perform Basic Inspection. Refer to [SEC-8, "Basic Inspection"](#).

>> GO TO 7

## 7. DETECT MALFUNCTIONING SYSTEM BY SYMPTOM TABLE

Detect malfunctioning system according to Symptom Table based on the confirmed symptom in step 4.

>> GO TO 8

## 8. DETECT MALFUNCTIONING PART BY DIAGNOSTIC PROCEDURE

Inspect according to Diagnostic Procedure of the system.

**NOTE:**

The Diagnostic Procedure is described based on open circuit inspection. A short circuit inspection is also required for the circuit check in the Diagnostic Procedure.

>> GO TO 9

# DIAGNOSIS AND REPAIR WORKFLOW

[WITH INTELLIGENT KEY SYSTEM]

< BASIC INSPECTION >

## 9. REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnostic Procedure again after repair and replacement.
3. Check DTC. If DTC is displayed, erase it.

>> GO TO 10

## 10. FINAL CHECK

When DTC was detected in step 9, perform DTC Confirmation Procedure or Component Function Check again, and then check that the malfunctions have been fully repaired.

When symptom was described by the customer, refer to the confirmed symptom in step 3 or 4, and check that the symptom is not detected.

### Does the symptom reappear?

YES (DTC is detected)>>GO TO 8

YES (Symptom remains)>>GO TO 6

NO      >> Inspection End.

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

# PRE-INSPECTION FOR DIAGNOSTIC

< BASIC INSPECTION >

[WITH INTELLIGENT KEY SYSTEM]

## PRE-INSPECTION FOR DIAGNOSTIC

### Basic Inspection

INFOID:0000000005259026

The engine start function, door lock function, power distribution system and NATS-IVIS/NVIS in the Intelligent Key system are closely related to each other regarding control. Narrow down the functional area in question by performing basic inspection to identify which function is malfunctioning. The vehicle security function can operate only when the door lock and power distribution system are operating normally. Therefore, it is easy to identify any factor unique to the vehicle security system by performing the vehicle security operation check after basic inspection.

#### 1.CHECK DOOR LOCK OPERATION

Check the door lock for normal operation with the Intelligent Key controller and door request switch. Successful door lock operation with the Intelligent Key and request SW indicates that the remote keyless entry receiver and inside key antenna required for engine start are functioning normally.

Identify the malfunctioning point by referring to the DLK section if the door cannot be unlocked.

Can the door be locked with the Intelligent Key and door request switch?

YES >> GO TO 2

NO >> Refer to [DLK-169, "Symptom Table"](#).

#### 2.CHECK ENGINE STARTING

Check that the engine starts when operating the Intelligent Key.

Does the engine start?

YES >> GO TO 3

NO >> Refer to [SEC-112, "Symptom Table"](#).

#### 3.CHECK STEERING LOCK

Does the steering lock when operating door switch after switching the power supply from ON position (or ACC position) to LOCK position?

If door switch is malfunctioning, BCM cannot lock the steering. If BCM does not detect DTC, steering lock unit is normal.

Does steering lock?

YES >> GO TO 4

NO >> Refer to [DLK-94, "Diagnosis Procedure"](#).

#### 4.CHECK IGNITION KNOB SWITCH OPERATION

Press ignition knob to check switch operation.

Does the combination meter display any message?

YES >> GO TO 5

NO >> Refer to [SEC-49, "Ignition Knob Switch Check"](#).

#### 5.CHECK VEHICLE SECURITY SYSTEM

Check the vehicle security system for normal operation.

The vehicle security function can operate only when the door lock and power distribution functions are operating normally.

Therefore, it is easy to identify any factor unique to the vehicle security by performing the vehicle security operation check after this basic inspection.

>> Refer to [SEC-8, "Vehicle Security Operation Check"](#).

### Vehicle Security Operation Check

INFOID:0000000005259027

#### 1.INSPECTION START

Turn ignition switch "OFF".

**NOTE:**

Before starting operation check, open front windows.

>> GO TO 2

# PRE-INSPECTION FOR DIAGNOSTIC

[WITH INTELLIGENT KEY SYSTEM]

< BASIC INSPECTION >

## 2.CHECK SECURITY INDICATOR LAMP

1. Lock doors using Intelligent Key or mechanical key.
2. Check that security indicator lamp illuminates for 30 seconds.

Does security indicator lamp illuminate?

YES >> GO TO 3

NO >> Perform diagnosis and repair. Refer to [SEC-52, "Diagnosis Procedure"](#).

## 3.CHECK ALARM FUNCTION

1. After 30 seconds, security indicator lamp will start to blink.
2. Open any door before unlocking with Intelligent Key or mechanical key, or open back door or glass hatch without the presence of Intelligent Key.

Does the alarm function properly?

YES >> GO TO 4

NO >> Check the following.

- The vehicle security system does not phase in alarm mode. Refer to [SEC-112, "Symptom Table"](#).
- Alarm (horn and headlamps) does not operate. Refer to [SEC-112, "Symptom Table"](#).

## 4.CHECK ALARM CANCEL OPERATION

Unlock any door using Intelligent Key or mechanical key.

Does alarm (horn and headlamps) stop?

YES >> Inspection End.

NO >> Check door lock function. Refer to [SEC-113, "Symptom Table"](#).

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

# INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[WITH INTELLIGENT KEY SYSTEM]

## INSPECTION AND ADJUSTMENT

### ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement

INFOID:000000005258936

Refer to the CONSULT-III Operation Manual-NATS.

### ECM RE-COMMUNICATING FUNCTION

#### ECM RE-COMMUNICATING FUNCTION : Description

INFOID:000000005258937

Performing following procedure can automatically perform re-communication of ECM and BCM, but only when the ECM has been replaced with a new one (\*1).

\*1: New one means an ECM which has never been energized on-board.

(In this step, initialization procedure by CONSULT-III is not necessary)

#### NOTE:

- When registering new Key IDs or replacing the ECM that is not brand new, refer to CONSULT-III Operation Manual NATS.
- If multiple keys are attached to the key holder, separate them before work.
- Distinguish keys with unregistered key ID from those with registered ID.

#### ECM RE-COMMUNICATING FUNCTION : Special Repair Requirement

INFOID:000000005258938

#### 1 .PERFORM ECM RE-COMMUNICATING FUNCTION

1. Install ECM.
2. Using a registered key (\*2), turn ignition switch to "ON".  
\*2: To perform this step, use the key that has been used before performing ECM replacement.
3. Maintain ignition switch in "ON" position for at least 5 seconds.
4. Turn ignition switch to "OFF".
5. Start engine.

#### Can engine be started?

YES    >> Procedure is completed.


NO      >> Initialize control unit. Refer to CONSULT-III Operation Manual.

# FUNCTION DIAGNOSIS

## INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

### System Diagram

INFOID:000000005258939

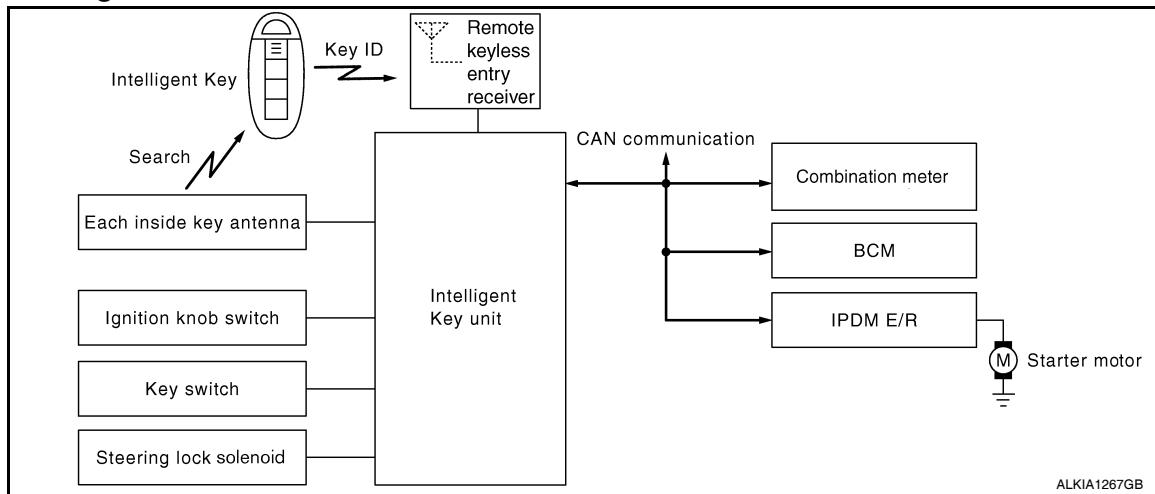

### System Description

INFOID:000000005258940

#### INPUT/OUTPUT SIGNAL CHART

##### Intelligent Key Unit

Switch/Input signal	Input signal to Intelligent Key unit	Intelligent Key unit function	Actuator/Output signal
Key switch	Mechanical key (insert/remove)	Engine start function	<ul style="list-style-type: none"> <li>• KEY warning lamp/buzzer</li> <li>• Steering lock unit</li> <li>• Starter relay request (to IPDM E/R)</li> <li>• Inside key antenna (Instrument panel, center console, luggage areas)</li> <li>• Key interlock solenoid</li> </ul>
Ignition knob switch	Ignition knob (push/release)		
Steering lock unit	Steering lock (lock/unlock)		
Inside key antenna (Front and rear center console, luggage areas)	Intelligent key (inside antenna detection area or not.)		

##### IPDM E/R

Switch/Input signal	Input signal to IPDM E/R	IPDM E/R function	Actuator/Output signal
Transmission range switch	P, N range	Engine start function	<ul style="list-style-type: none"> <li>• Starter relay</li> <li>• Starter motor</li> </ul>

##### BCM

Switch/Input signal	Input signal to BCM	BCM function	Actuator/Output signal
Key switch	Brake (press/release)	Engine start function	<ul style="list-style-type: none"> <li>• Inside key antenna (Instrument panel, center console, luggage areas)</li> </ul>

#### SYSTEM DESCRIPTION

- The engine start function of Intelligent Key system is a system that makes it possible to start and stop the engine without using the key. It verifies the electronic ID using two-way communications when pressing the ignition knob switch while carrying the Intelligent Key, which operates based on the results of electronic ID verification for Intelligent Key using two-way communications between the Intelligent Key and the vehicle.

##### NOTE:

The driver should carry the Intelligent Key at all times.

# INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

## < FUNCTION DIAGNOSIS >

## [WITH INTELLIGENT KEY SYSTEM]

- Intelligent Key has 2 IDs (for Intelligent Key and for NATS). It can perform the door lock/unlock operation and the engine start operation when the registered Intelligent Key is carried.
  - When the Intelligent Key battery is discharged, it can be used as emergency back-up by inserting the mechanical key set in the Intelligent Key to the ignition key cylinder. At that time, perform the NATS ID verification. If it is used when the Intelligent Key is carried, perform the Intelligent Key ID verification.
  - If the ID is successfully verified, and when the ignition knob switch is pressed, steering lock will be released and initiating the engine will be possible.
  - The door lock/unlock operation can be performed when the Intelligent Key battery is discharged, by operating the driver door key cylinder using the mechanical key set in the Intelligent Key.
  - Up to 4 Intelligent Keys can be registered (including the standard Intelligent Key) on request from the owner.
- NOTE:**
- Refer to [SEC-22, "COMMON ITEM : CONSULT-III Function \(BCM - COMMON ITEM\)"](#) for any functions other than engine start function of Intelligent Key system.

## PRECAUTIONS FOR INTELLIGENT KEY SYSTEM

- For vehicles equipped with the Intelligent Key system, the transponder [the chip for NATS ID verification] is integrated into the Intelligent Key. Therefore, the Intelligent Key alone is capable of providing security clearance for the engine to start. Also, when the mechanical key alone is inserted into the key cylinder, performs the NATS ID verification to allow the engine to start. For vehicles without Intelligent Key system, the transponder is integrated into the mechanical key which must be inserted into the key cylinder to perform the NATS ID verification to allow the engine to start.

## OPERATION WHEN INTELLIGENT KEY IS CARRIED

1. When the ignition knob switch is ON, the Intelligent Key unit transmits the request signal to the Intelligent Key.
2. The Intelligent Key receives the request signal and transmits the Intelligent Key ID signal to the Intelligent Key unit.
3. The Intelligent Key unit receives the Intelligent Key ID signal and verifies it with the registered ID.
4. Intelligent Key unit transmits the steering lock/unlock signal to steering lock unit if the verification results are OK. For detail of key warning lamp operation, refer to [SEC-19, "System Description"](#).
5. Release of the steering lock.
6. BCM transmits the starter request signal via CAN communication to IPDM E/R and turns the starter relay in IPDM E/R ON if BCM judges that the engine start condition is satisfied.
7. IPDM E/R turns the starter control relay ON when receiving the starter request signal.
8. When shift position is in P or N position, battery power is supplied through the starter relay and operate the starter motor and to start the cranking.

### CAUTION:

If a malfunction is detected in the Intelligent Key system, the "NO KEY" warning message will be displayed in the combination meter. At that time, the engine cannot be started.

## OPERATION RANGE

Engine can be started when Intelligent Key is inside the vehicle. However, sometimes engine might not start when Intelligent Key is on instrument panel or in glove box.

## OPERATION WHEN MECHANICAL KEY IS USED

When the Intelligent Key battery is discharged, performs the NATS ID verification between the integrated transponder and BCM by inserting the mechanical key into the key cylinder, and then the engine can be started. For details relating to starting the engine using mechanical key, refer to [SEC-15, "System Description"](#).

## STEERING LOCK OPERATION

Steering is locked by steering lock unit when ignition switch is in the LOCK position (the ignition knob is released) and key switch is OFF (key is removed from ignition key cylinder).


# INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< FUNCTION DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## Component Parts Location

INFOID:000000005258941

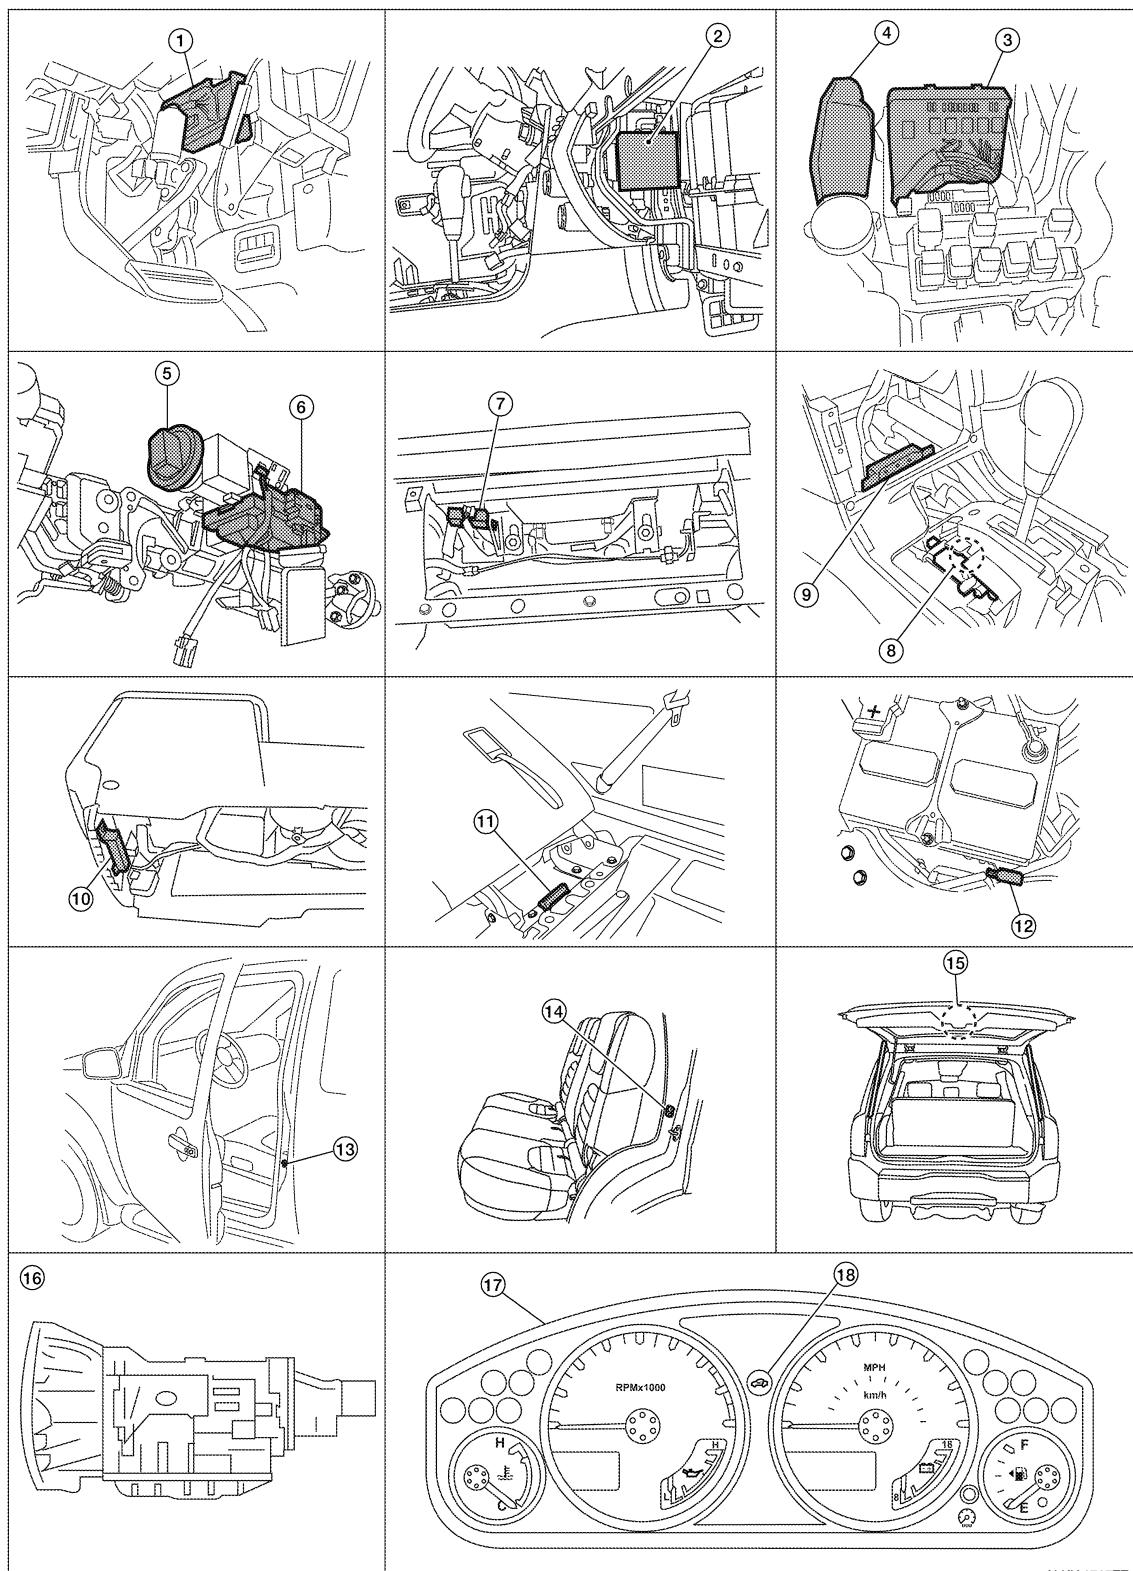

A  
B  
C  
D  
E  
F  
G  
H  
I  
J

**SEC**  
L  
M  
N  
O  
P

1. BCM M18, M19, M20  
(view with instrument panel LH removed)
2. Intelligent Key unit M164  
(view with glove box removed)
3. IPDM E/R  
E119, E120, E122, E124
4. ECM E16
5. Key switch and ignition knob switch M66  
(view with steering column removed)
6. Steering lock solenoid M65

# INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

## [WITH INTELLIGENT KEY SYSTEM]

### < FUNCTION DIAGNOSIS >

- |   |  |  |
|---|--|--|
| 7. Remote keyless entry receiver M67<br>(view with instrument panel RH removed) | 8. A/T shift selector (park position switch)<br>M158<br>(view with center console removed) | 9. Instrument panel area antenna M68<br>(view with center console removed) |
| 10. Center console area antenna M212<br>(view with center console removed)      | 11. Luggage area antenna B129<br>(behind 3 <sup>rd</sup> row seat)                         | 12. Intelligent Key warning buzzer E60                                     |
| 13. Front door switch LH B8<br>RH B108  | 14. Rear door switch LH B18<br>RH B116   | 15. Back door latch (door ajar switch)<br>D502                             |
| 16. A/T assembly F9   | 17. Combination meter M24  | 18. Vehicle security indicator lamp  |

### Component Description

INFOID:0000000005258942

Item	Function
Intelligent Key unit	Receives lock/unlock signal from remote keyless entry receiver, and then transmits to BCM.
BCM	Verifies the received signal from Intelligent Key, then informs ECM whether to allow engine start.
Remote keyless entry receiver	Receives lock/unlock signal from the Intelligent Key, and then transmits to Intelligent Key unit.
Intelligent Key	Transmits button operation to remote keyless entry receiver.
Ignition knob switch	Monitors the status of the ignition knob switch.
Steering lock solenoid	Locks the steering wheel when the ignition key is off and the Intelligent Key is outside the vehicle.
Inside key antenna	Detects if Intelligent Key is inside the vehicle.
Intelligent Key warning buzzer	Warns the user of the lock/unlock condition and inappropriate operations with the buzzer sound.
A/T shift selector (park position switch)	Detects whether the shift lever is in park.

# NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)


< FUNCTION DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)

### System Diagram

INFOID:0000000005258943

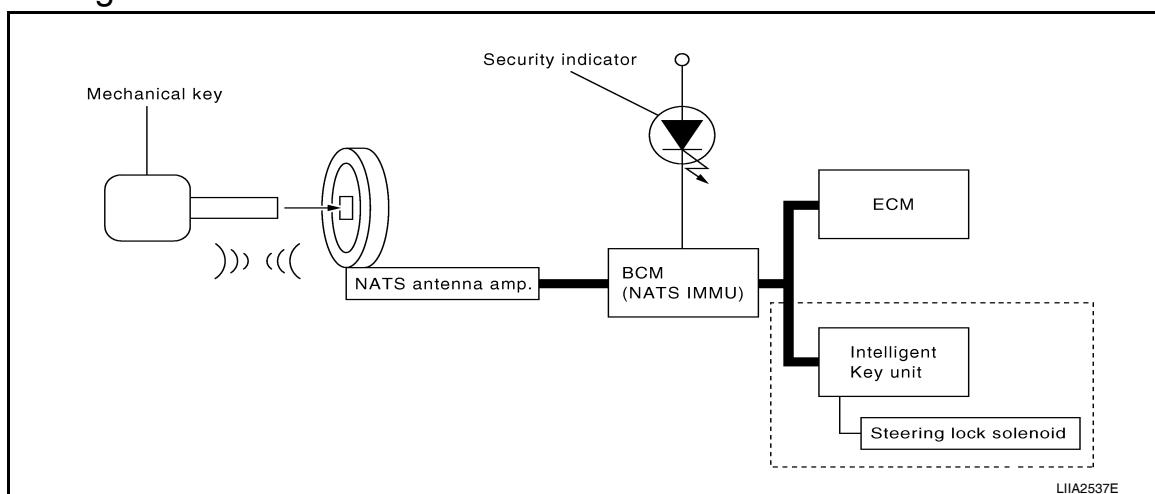

### System Description

INFOID:0000000005258944

#### INPUT/OUTPUT SIGNAL CHART

##### Intelligent Key Unit

Switch/Input signal	Input signal to BCM	BCM function	Actuator/Output signal
Ignition knob switch	Ignition knob (push/release)	NATS	• Steering lock unit
Key switch	Mechanical key (Insert/remove)		
Steering lock unit	Steering (lock/unlock)		
ECM	Engine status signal		

##### BCM

Switch/Input signal	Input signal to BCM	BCM function	Actuator/Output signal
NATS antenna amp.	Key ID	NATS	• Security indicator lamp • Starter request
ECM	Engine status signal		

#### SYSTEM DESCRIPTION

NATS (Nissan Anti-Theft System) has the following immobilizer functions:

- Engine immobilizer shows high anti-theft performance to prevent engine from starting by other than the owner.
- Only a key with key ID registered in BCM and ECM can start engine, and shows high anti-theft performance to prevent key from being copied or stolen.
- Security indicator always flashes with mechanical key removed condition (key switch: OFF) and ignition knob released condition on LOCK position (ignition knob switch: OFF).
- Therefore, NATS warns outsiders that the vehicle is equipped with the anti-theft system. Refer to [SEC-19, "System Description"](#).
- If system detects malfunction, security indicator illuminates when ignition switch is turned to ON position.
- If the owner requires, ignition key ID or mechanical key ID can be registered for up to 4 keys.
- During trouble diagnosis or when the following parts have been replaced, and if mechanical key is added, registration\* is required.

\*<sup>1</sup>: All keys kept by the owner of the vehicle should be registered with mechanical key.

- ECM
- BCM

- Mechanical key
- Intelligent Key unit
- Remote keyless entry receiver
- Steering lock solenoid
- NATS trouble diagnosis, system initialization and additional registration of other mechanical key IDs must be carried out using CONSULT-III.  
When NATS initialization has been completed, the ID of the inserted mechanical key or mechanical key IDs can be carried out.
- Possible symptom of NATS malfunction is "Engine cannot start". Identify the possible causes according to "Work Flow", Refer to [SEC-5, "Work Flow"](#).
- If ECM other than Genuine NISSAN is installed, the engine cannot be started. For ECM replacement procedure, refer to [SEC-10, "ECM RE-COMMUNICATING FUNCTION : Description"](#).

### PRECAUTIONS FOR KEY REGISTRATION

- The key registration is a procedure that erases the current NATS ID once, and then re-registers a new ID. Therefore the registered Intelligent Key is necessary for this procedure. Before starting the registration operation collect all registered Intelligent Keys from the customer.
- The NATS ID registration is the procedure that registers the ID stored into the transponder (integrated in mechanical key) to BCM.  
The Intelligent Key ID registration is the procedure that registers the ID to Intelligent Key unit.
- When performing the Intelligent Key system registration only, the engine cannot be started by inserting the key into the key cylinder. When performing the NATS registration only, the engine cannot be started by using the mechanical key.

### SECURITY INDICATOR

- Always flashes with ignition knob released (ignition knob switch: LOCK) condition on ignition knob LOCK position.
- Always flashes with ignition knob released (ignition knob switch: LOCK) condition on mechanical key removed position.

### MAINTENANCE INFORMATION

#### **CAUTION:**

**It is necessary to perform NATS ID registration when replacing any of the following part.  
If it's not (or fail to do so), the electrical system may not operate properly.**

- Intelligent Key unit
- BCM
- ECM
- Mechanical key
- Steering lock solenoid
- NATS antenna amp.


# NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)

< FUNCTION DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## Component Parts Location

INFOID:000000005258945

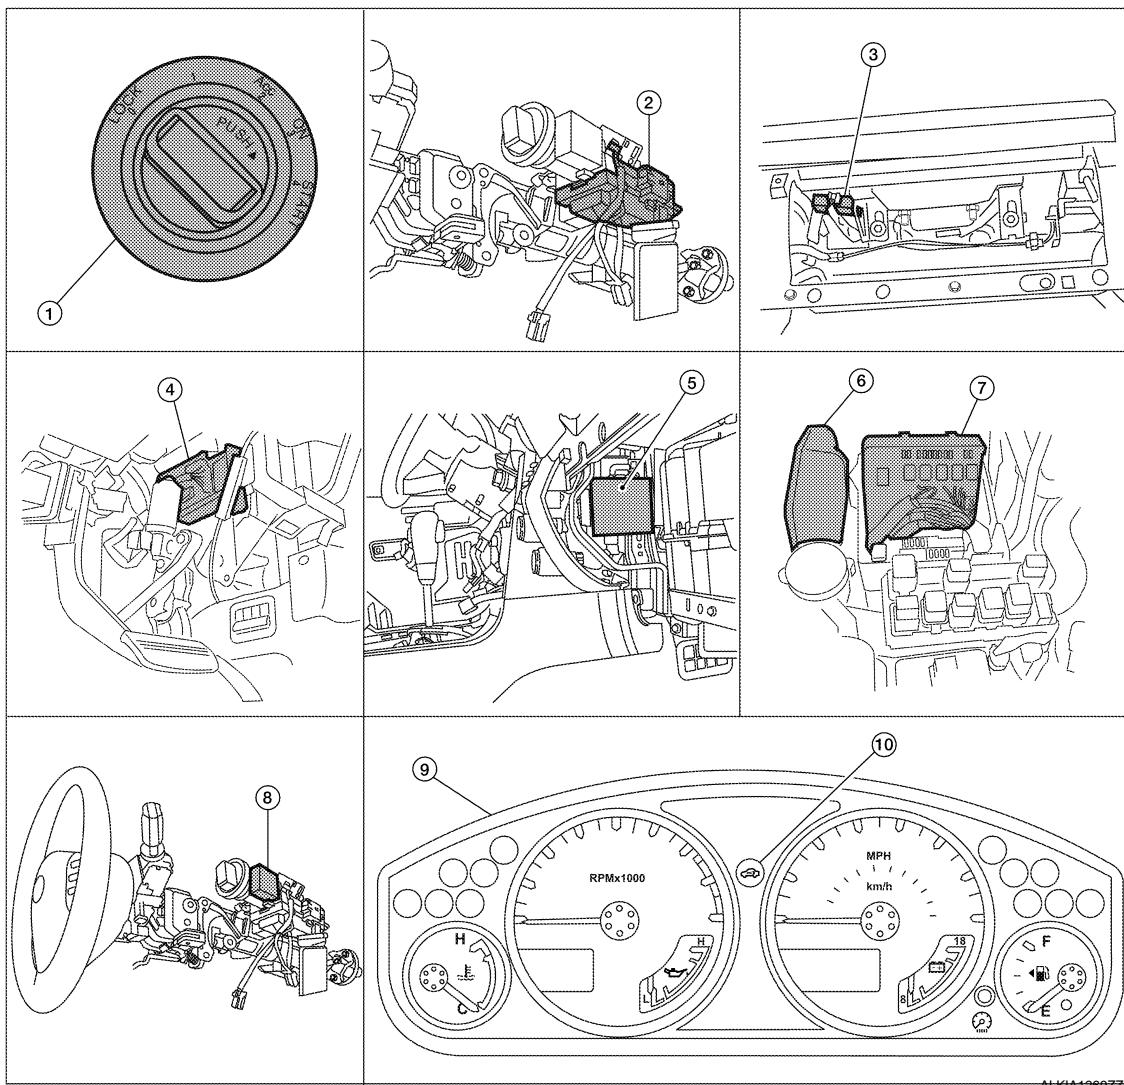

ALKIA1269ZZ

1. Key switch and ignition knob switch M66
2. Steering lock solenoid M65  
(view with steering column removed)
3. Remote keyless entry receiver M67  
(view with glove box removed)
4. BCM M18, M20  
(view with instrument panel LH removed)
5. Intelligent Key unit M164  
(view with glove box removed)
6. ECM E16
7. IPDM E/R E121  
(view with cover removed)
8. NATS antenna amp. M21
9. Combination meter M24
10. Security indicator lamp

## Component Description

INFOID:000000005258946

Item	Function
Intelligent Key unit	Receives lock/unlock signal from remote keyless entry receiver, and then transmits to BCM.
BCM	Controls the door lock function and room lamp function.
Remote keyless entry receiver	Receives lock/unlock signal from the Intelligent Key, and then transmits to Intelligent Key unit.
Intelligent Key	Transmits button operation to remote keyless entry receiver.
Steering lock solenoid	Locks the steering wheel when the ignition key is off and the Intelligent Key is outside the vehicle.
NATS antenna amp.	Detects the mechanical key presence in the ignition key cylinder.

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

**NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)**  
**< FUNCTION DIAGNOSIS >** **[WITH INTELLIGENT KEY SYSTEM]**

Item	Function
Security indicator	Indicates the status of the security system.
IPDM E/R	Monitors the ignition switch and the park switch signal from the TCM.

# VEHICLE SECURITY SYSTEM


< FUNCTION DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## VEHICLE SECURITY SYSTEM

### System Diagram

INFOID:0000000005258947

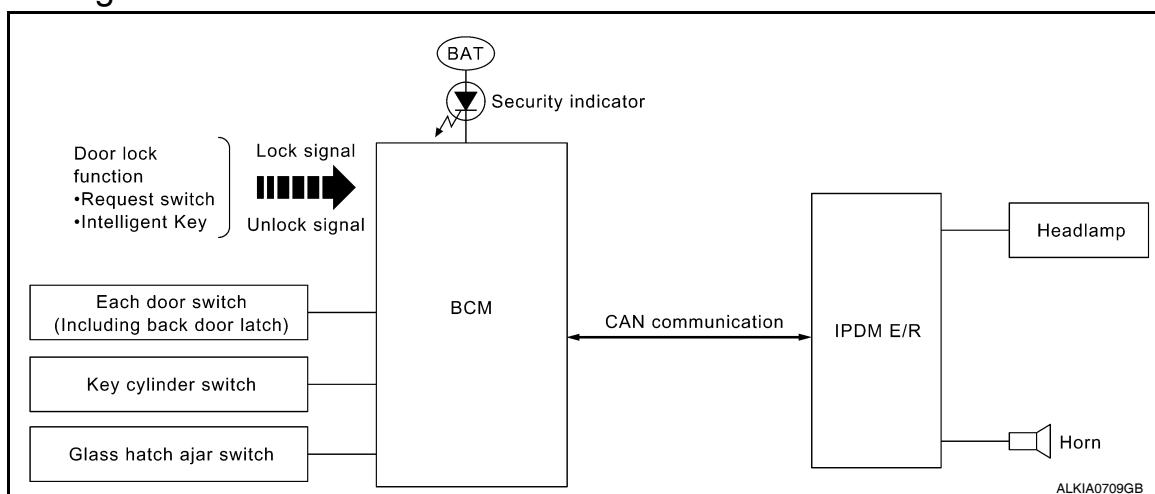

### System Description


INFOID:0000000005258948

#### DESCRIPTION

The security system provides an audible and visual alarm when an unauthorized access to the vehicle is detected while the system is in armed phase.

The security system consists of the BCM managing the audible alarm (horn) and the visual alarm (headlamps).

#### OPERATION FLOW

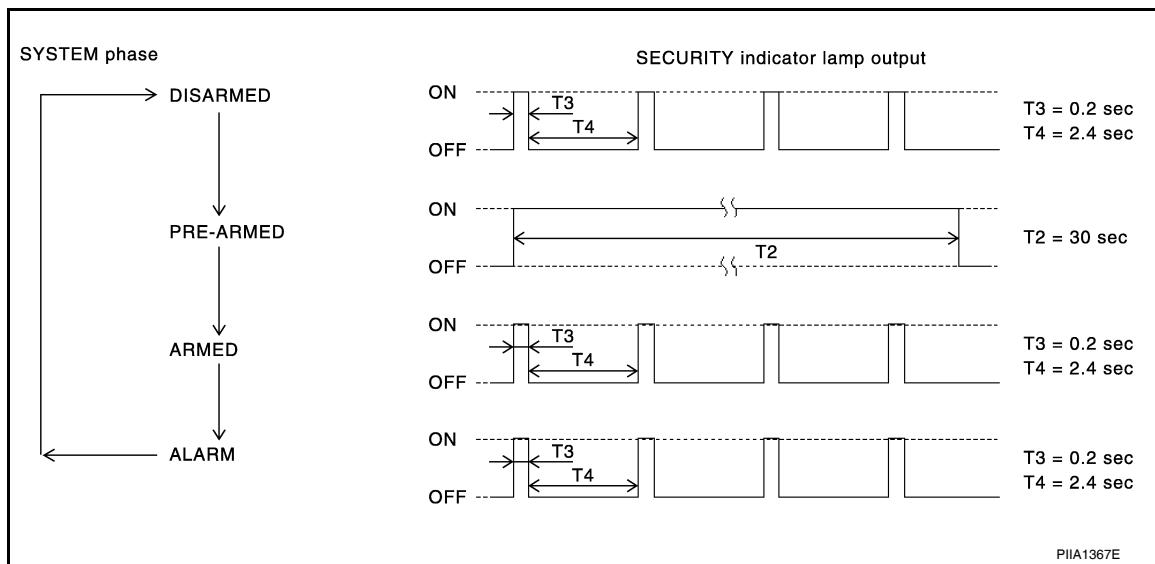

#### Disarmed Phase

When the vehicle is being driven or when doors are open, the theft warning system is set in the disarmed phase on the assumption that the owner is inside or near the vehicle.

#### Pre-Armed Phase And Armed Phase

The vehicle security system turns into the pre-armed phase when ignition switch is in OFF position, all doors including glass hatch are closed and locked (using Intelligent Key, door request switch or auto relock function). The system automatically shifts into the armed phase.

#### Condition of Activating The System

When the following condition is performed in armed phase, the system sounds the horns and flashes the headlamps for about 50 seconds.

- Any door is opened.

# VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

## < FUNCTION DIAGNOSIS >


### Condition of Deactivating The System

When one of the following operations is performed, the armed phase is canceled.

- Unlock the doors with Intelligent Key or door request switch.
- Use the mechanical key to unlock the driver door using the door key cylinder.

## Component Parts Location

INFOID:0000000005258949

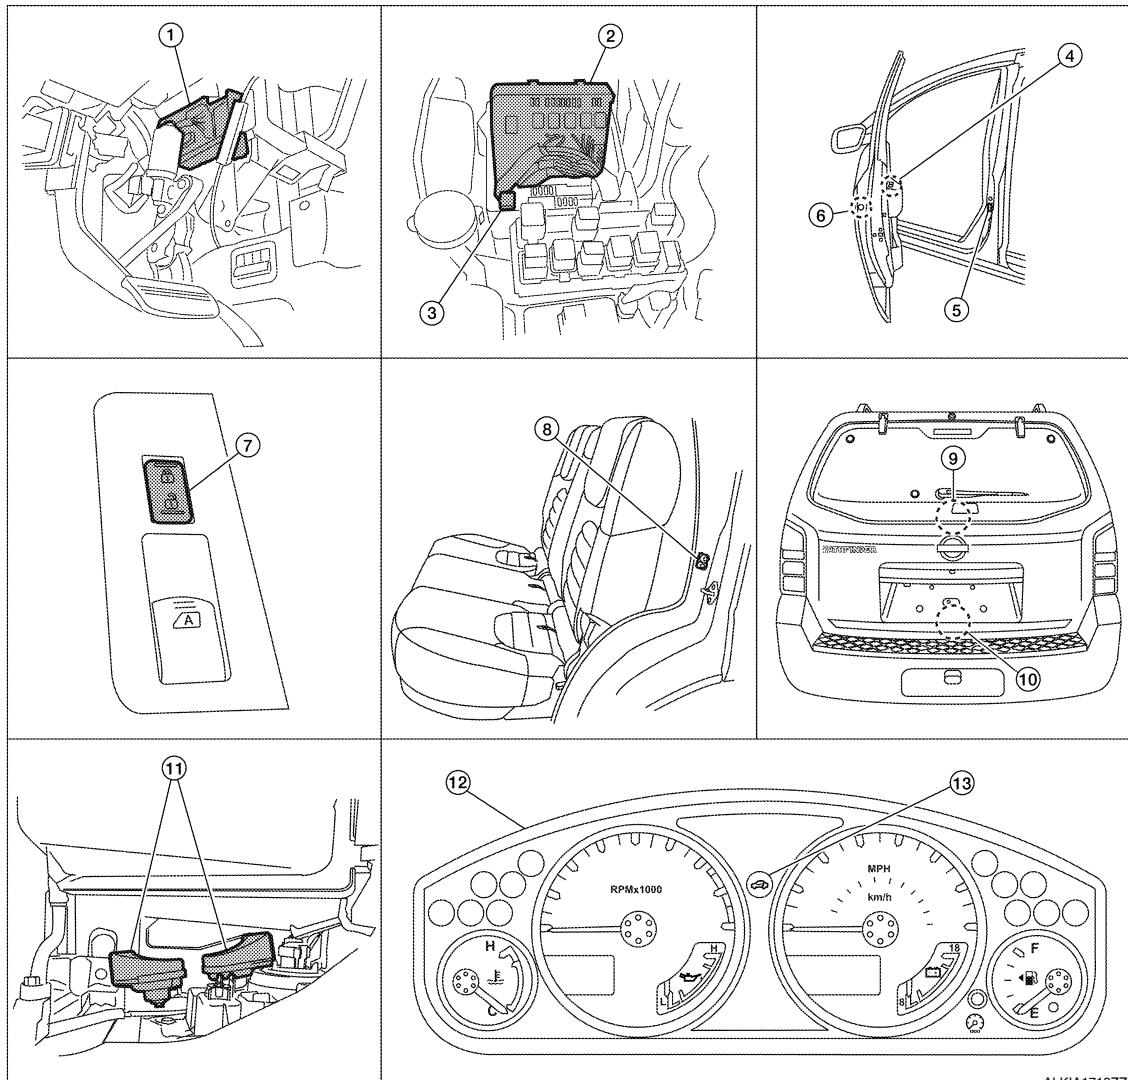

1. BCM M18, M19, M20  
(view with instrument panel LH removed)
2. IPDM E/R E122, E123, E124  
(view with cover removed)
3. Horn relay H-1
4. Main power window and door lock/unlock switch D7, D8
5. Front door switch LH B8  
RH B108
6. Front door lock assembly LH (key cylinder switch) D14
7. Power window and door lock/unlock switch RH D105
8. Rear door switch LH B18  
RH B116
9. Glass hatch ajar switch D503
10. Back door latch (door ajar switch)  
D502  
Glass hatch ajar switch D503
11. Horn E3  
(behind front combination lamp LH)
12. Combination meter M24
13. Security indicator lamp

# VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< FUNCTION DIAGNOSIS >

## Component Description

INFOID:000000005258950

Item	Function
BCM	Controls the door lock function and room lamp function.
Door switch	Provides the BCM with the status of each monitored door.
Security indicator	Indicates the status of the security system.
IPDM E/R	Controls the horn and headlamp operation.
Horn	Sounds when the vehicle security system is triggered.

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

# DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## DIAGNOSIS SYSTEM (BCM)

### COMMON ITEM

#### COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)

INFOID:000000005484550

#### APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
WORK SUPPORT	Changes the setting for each system function.
SELF-DIAG RESULTS	Displays the diagnosis results judged by BCM. Refer to <a href="#">BCS-54, "DTC Index"</a> .
CAN DIAG SUPPORT MNTR	Monitors the reception status of CAN communication viewed from BCM.
DATA MONITOR	The BCM input/output signals are displayed.
ACTIVE TEST	The signals used to activate each device are forcibly supplied from BCM.
ECU IDENTIFICATION	The BCM part number is displayed.
CONFIGURATION	<ul style="list-style-type: none"><li>• Enables to read and save the vehicle specification.</li><li>• Enables to write the vehicle specification when replacing BCM.</li></ul>

#### SYSTEM APPLICATION

BCM can perform the following functions for each system.

#### NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

System	Sub system selection item	Diagnosis mode		
		WORK SUPPORT	DATA MONITOR	ACTIVE TEST
BCM	BCM	×		
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP	×	×	×
Remote keyless entry system <sup>1</sup>	MULTI REMOTE ENT	×	×	×
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER		×	×
Air conditioner	AIR CONDITIONER		×	
Intelligent Key system <sup>2</sup>	INTELLIGENT KEY		×	
Combination switch	COMB SW		×	
Immobilizer	IMMU		×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
Back door open	TRUNK		×	×
RAP (retained accessory power)	RETAINED PWR	×	×	×
Signal buffer system	SIGNAL BUFFER		×	×
TPMS (tire pressure monitoring system)	AIR PRESSURE MONITOR	×	×	×
Vehicle security system	THEFT ALM	×	×	×
Panic alarm	PANIC ALARM			×

1: With remote keyless entry system

2: With Intelligent Key

IMMU

# DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

< FUNCTION DIAGNOSIS >

IMMU : CONSULT-III Function (BCM - IMMU)

INFOID:000000005484551

## DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [ON/OFF]	Indicates condition of ignition switch in ON position.

## ACTIVE TEST

Test Item	Description
THEFT IND	This test is able to check security indicator operation [ON/OFF].

## THEFT ALM

THEFT ALM : CONSULT-III Function (BCM - THEFT ALM)

INFOID:000000005484552

## WORK SUPPORT

Test Item	Description
SECURITY ALARM SET	This mode is able to confirm and change security alarm ON-OFF setting.
THEFT ALM TRG	The switch which triggered vehicle security alarm is recorded. This mode is able to confirm and erase the record of vehicle security alarm. The trigger data can be erased by touching "CLEAR" on CONSULT-III screen.

## DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [ON/OFF]	Indicates ignition switch (ON) status judged from IGN signal (ignition power supply)
ACC ON SW [ON/OFF]	Indicates ignition switch (ACC) status judged from ACC signal (accessory power supply)
I-KEY LOCK <sup>1</sup> [ON/OFF]	Indicates lock signal status received from Intelligent Key unit by CAN communication
I-KEY UNLOCK <sup>1</sup> [ON/OFF]	Indicates unlock signal status received from Intelligent Key unit by CAN communication
I-KEY TRUNK <sup>1</sup> [ON/OFF]	Indicates condition of back door opener switch
KEYLESS LOCK <sup>2</sup> [ON/OFF]	Indicates lock signal status received from remote keyless entry receiver (integrated in the BCM)
KEYLESS UNLOCK <sup>2</sup> [ON/OFF]	Indicates unlock signal status received from remote keyless entry receiver (integrated in the BCM)
TRNK OPNR SW [ON/OFF]	Indicates switch status of back door opener switch
TRNK OPN MNTR [ON/OFF]	Indicates switch status of back door latch
DOOR SW-DR [ON/OFF]	Indicates switch status input from front door switch LH
DOOR SW-AS [ON/OFF]	Indicates switch status input from front door switch RH
DOOR SW-RR [ON/OFF]	Indicates switch status input from rear door switch RH
DOOR SW-RL [ON/OFF]	Indicates switch status input from rear door switch LH
BACK DOOR SW [ON/OFF]	Indicates switch status input from back door switch
KEY CYL LK-SW [ON/OFF]	Indicates lock switch status from door key cylinder switch
KEY CYL UN-SW [ON/OFF]	Indicates unlock switch status from door key cylinder switch
CDL LOCK SW [ON/OFF]	Indicates lock switch status from door lock and unlock switch
CDL UNLOCK SW [ON/OFF]	Indicates unlock switch status from door lock and unlock switch

1: With Intelligent Key

2: With remote keyless entry system

## ACTIVE TEST

## DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

< FUNCTION DIAGNOSIS >

Test Item	Description
THEFT IND	This test is able to check security indicator lamp operation. The lamp will be turned on when "ON" on CONSULT-III screen is touched.
VEHICLE SECURITY HORN	This test is able to check vehicle security horn operation. The horns will be activated for 0.5 seconds after "ON" on CONSULT-III screen is touched.
HEAD LAMP(HI)	This test is able to check vehicle security lamp operation. The headlamps will be activated for 0.5 seconds after "ON" on CONSULT-III screen is touched.

# DIAGNOSIS SYSTEM (INTELLIGENT KEY UNIT)

< FUNCTION DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## DIAGNOSIS SYSTEM (INTELLIGENT KEY UNIT)

### CONSULT-III Function (INTELLIGENT KEY)

INFOID:000000005484805

#### APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with Intelligent Key unit.

Diagnosis mode	Function Description
SELF-DIAG RESULTS	Displays the diagnosis results judged by Intelligent Key unit.
DATA MONITOR	The Intelligent Key unit input/output signals are displayed.
ACTIVE TEST	The signals used to activate each device are forcibly supplied from Intelligent Key unit.
ECU IDENTIFICATION	The Intelligent Key unit part number is displayed.

#### SELF-DIAG RESULT

Refer to [DLK-143, "DTC Index"](#).

#### DATA MONITOR

Monitor Item	Condition
PUSH SW	Indicates [ON (pushed)/OFF (released)] condition of ignition knob switch.
KEY SW	Indicates [ON (inserted)/OFF (removed)] condition of key switch.
DR REQ SW	Indicates [ON (pressed)/OFF (released)] condition of door request switch (driver side).
AS REQ SW	Indicates [ON (pressed)/OFF (released)] condition of door request switch (passenger side).
BD/TR REQ SW	This item is shown but not monitored.
IGN SW	Indicates [ON (ON or START position)/OFF (other than ON and START position)] condition of ignition switch ON position.
ACC SW	Indicates [ON/OFF] condition of ignition switch ACC position.
STOP LAMP SW	Indicates [ON/OFF] condition of stop lamp switch.
P RANGE SW	Indicates [ON/OFF] position of shift lever park position switch.
BD OPEN SW	This item is shown but not monitored.
TR CANCEL SW	This item is shown but not monitored.
DOOR LOCK SIG	Indicates [ON/OFF] condition of LOCK signal from Intelligent Key.
DOOR UNLOCK SIG	Indicates [ON/OFF] condition of UNLOCK signal from Intelligent Key.
KEYLESS TRUNK	This item is shown but not monitored.
KEYLESS PANIC	Indicates [ON (pressed)/OFF (released)] condition of Intelligent Key panic button.
KEYLS PSD LH	This item is shown but not monitored.
KEYLS PSD RH	This item is shown but not monitored.
KEYLS PBD SIG	Indicates [ON (pressed)/OFF (released)] condition of Intelligent Key back door button.
DOOR SW DR	Indicates [OPEN/CLOSE] condition of front door switch (driver side) from BCM via CAN communication.
DOOR SW AS	Indicates [OPEN/CLOSE] condition of front door switch (passenger side) from BCM via CAN communication.
DOOR SW RR	Indicates [OPEN/CLOSE] condition of rear door switch (RH) from BCM via CAN communication.
DOOR SW RL	Indicates [OPEN/CLOSE] condition of rear door switch (LH) from BCM via CAN communication.
DOOR BK SW	Indicates [OPEN/CLOSE] condition of back door switch from BCM via CAN communication.

# DIAGNOSIS SYSTEM (INTELLIGENT KEY UNIT)

< FUNCTION DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

Monitor Item	Condition
TRUNK SW	This item is shown but not monitored.
VEHICLE SPEED	Displays the vehicle speed signal received from combination meter by numerical value [km/h].

## ACTIVE TEST

Test item	Description
DOOR LOCK/UNLOCK	<p>This test is able to check door lock/unlock operation.</p> <ul style="list-style-type: none"> <li>• ALL UNLK: All door lock actuators are unlocked.</li> <li>• DR UNLK: Door lock actuator (driver side) is unlocked.</li> <li>• AS UNLK: Door lock actuator (passenger side) is unlocked.</li> <li>• BK UNLK: This item is indicated, but inactive.</li> <li>• LOCK: All door lock actuator is locked.</li> </ul>
ANTENNA	<p>This test is able to check Intelligent Key antenna operation.</p> <p>When the following condition are met, hazard warning lamps flash.</p> <ul style="list-style-type: none"> <li>• ROOM ANT1: Instrument panel area antenna detects Intelligent Key when "ROOM ANT1" is selected.</li> <li>• ROOM ANT2: Center console and luggage area antennas detect Intelligent Key when "ROOM ANT2" is selected.</li> <li>• LUG ANT: This selection is not used.</li> <li>• DRIVER ANT: Outside key antenna (driver side) detects Intelligent Key when "DR ANT" is selected.</li> <li>• ASSIST ANT: Outside key antenna (passenger side) detects Intelligent Key when "AS ANT" is selected.</li> <li>• BK DOOR ANT: Outside key antenna (rear bumper) detects Intelligent Key when "BK DR ANT" is selected.</li> </ul>
OUTSIDE BUZZER	<p>This test is able to check Intelligent Key warning buzzer operation.</p> <ul style="list-style-type: none"> <li>• ON</li> <li>• OFF</li> </ul>
INSIDE BUZZER	<p>This test is able to check warning chime in combination meter operation.</p> <ul style="list-style-type: none"> <li>• TAKE OUT: Take away warning chime sounds.</li> <li>• KNOB: Ignition knob switch warning chime sounds.</li> <li>• KEY: Key warning chime sounds.</li> <li>• OFF</li> </ul>
INDICATOR	<p>This test is able to check Intelligent Key warning lamps operation.</p> <ul style="list-style-type: none"> <li>• Green "KEY" warning lamp illuminates when "BLUE ON" on CONSULT-III screen is touched.</li> <li>• Red "KEY" warning lamp illuminates when "RED ON" on CONSULT-III screen is touched.</li> <li>• Shift to park warning lamp illuminates when "KNOB ON" on CONSULT-III screen is touched.</li> <li>• Green "KEY" warning lamp flashes when "BLUE IND" on CONSULT-III screen is touched.</li> <li>• Red "KEY" warning lamp flashes when "RED IND" on CONSULT-III screen is touched.</li> <li>• Shift to park warning lamp (P-SHIFT) flashes when "KNOB IND" on CONSULT-III screen is touched.</li> <li>• OFF</li> </ul>

# COMPONENT DIAGNOSIS

## U1000 CAN COMM CIRCUIT

### Description

INFOID:000000005258955

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Signal Chart, refer to [LAN-53, "CAN Communication Signal Chart"](#).

### DTC Logic

INFOID:000000005258956

### DTC DETECTION LOGIC

DTC	CONSULT-III display description	DTC Detection Condition	Possible cause
U1000	CAN COMM CIRCUIT	When Intelligent Key unit cannot communicate CAN communication signal continuously for 2 seconds or more.	<p>In CAN communication system, any item (or items) of the following listed below is malfunctioning.</p> <ul style="list-style-type: none"> <li>• Transmission</li> <li>• Receiving (BCM)</li> <li>• Receiving (ECM)</li> <li>• Receiving (METER/M&amp;A)</li> </ul>

### Diagnosis Procedure

INFOID:000000005258957

#### 1. PERFORM SELF DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Check "Self Diagnostic Result".

#### Is "CAN COMM CIRCUIT" displayed?

YES >> Refer to [LAN-5, "CAN Communication Control Circuit"](#).

NO >> Refer to [GI-37, "Intermittent Incident"](#).

SEC

---

**U1010 CONTROL UNIT (CAN)****Description**

INFOID:0000000005258958

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only. CAN Communication Signal Chart, refer to [LAN-53, "CAN Communication Signal Chart"](#).

**DTC Logic**

INFOID:0000000005258959

**DTC DETECTION LOGIC**

DTC	CONSULT-III display de-scription	DTC Detection Condition	Possible cause
U1010	CONTROL UNIT (CAN)	When detecting error during the initial diagnosis of CAN controller of Intelligent Key unit.	Intelligent Key unit

**Diagnosis Procedure**

INFOID:0000000005258960

**1 .REPLACE INTELLIGENT KEY UNIT**

When DTC [U1010] is detected, replace Intelligent Key unit.

>> Replace Intelligent Key unit. Refer to [SEC-118, "Removal and Installation"](#).

**Special Repair Requirement**

INFOID:0000000005258961

**1 .REQUIRED WORK WHEN REPLACING INTELLIGENT KEY UNIT**

Initialize control unit. Refer to CONSULT-III Operation Manual.

>> Inspection End.

**B2013 ID DISCORD I-KEY-STRG****Description**

INFOID:0000000005258962

Intelligent Key unit performs the ID verification with the steering lock unit and releases the steering lock if both Intelligent Key unit and steering lock unit ID are same. Intelligent Key unit starts the communication with the steering lock unit when Intelligent Key is carried into the vehicle and the ignition knob switch is pressed.

**DTC Logic**

INFOID:0000000005258963

**DTC DETECTION LOGIC**

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2013	STRG COMM 1	The ID verification results between Intelligent Key unit and steering control unit are NG. The registration is necessary.	Steering lock unit

**DTC CONFIRMATION PROCEDURE****1. PERFORM DTC CONFIRMATION PROCEDURE**

1. Press the ignition knob switch
2. Check "Self diagnostic result" with CONSULT-III.

**Is DTC detected?**

YES >> Refer to [SEC-29, "Diagnosis Procedure"](#).

NO >> Inspection End.

**Diagnosis Procedure**

INFOID:0000000005258964

Regarding Wiring Diagram information, refer to [SEC-85, "Wiring Diagram - INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION -"](#).

**1. PERFORM INITIALIZATION**

Perform initialization with CONSULT-III. Re-register all mechanical keys.

For initialization and registration of mechanical key. Refer to "CONSULT-III Operation Manual".

**Can the system be initialized and can steering lock be released with re-registered mechanical key?**

YES >> Steering lock solenoid was unregistered.

NO >> GO TO 2

**2. CHECK STEERING LOCK SOLENOID POWER SUPPLY-1**


1. Turn ignition switch OFF.
2. Disconnect steering lock solenoid connector.
3. Check voltage between steering lock solenoid harness connector and ground.

Terminals		Voltage (V) (Approx.)
(+)	(-)	
Steering lock solenoid connector	Terminal	
M65	1	Ground
		Battery voltage

**Is the inspection result normal?**

YES >> GO TO 3

NO >> Repair or replace harness.

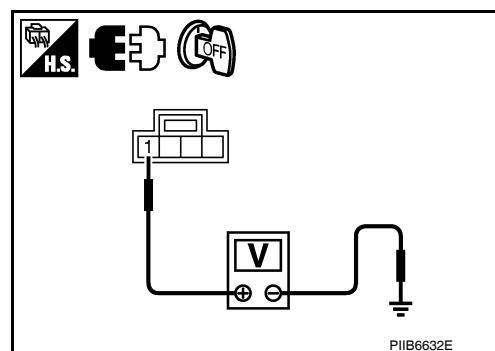**3. CHECK STEERING LOCK SOLENOID GROUND CIRCUIT**

PIIB6632E

# B2013 ID DISCORD I-KEY-STRG

## < COMPONENT DIAGNOSIS >

## [WITH INTELLIGENT KEY SYSTEM]


Check continuity between steering lock solenoid harness connector and ground.

Terminals		Continuity
(+)	(-)	
Steering lock solenoid connector	Terminal	
M65	4	Ground Yes

Is the inspection result normal?

YES >> GO TO 4

NO >> Repair or replace harness.

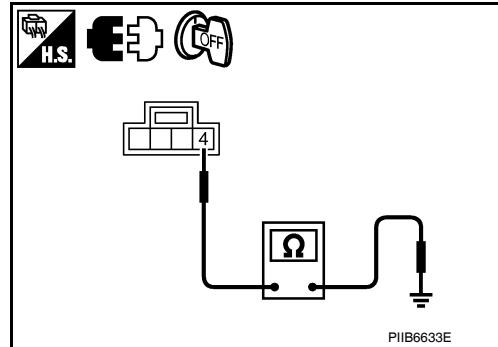


## 4.CHECK STEERING LOCK SOLENOID COMMUNICATION CIRCUITS

1. Disconnect Intelligent Key unit connector.
2. Check continuity between steering lock solenoid connector M65 (A) terminals 2, 3 and Intelligent Key unit connector M164 (B) terminals 1, 32.

Terminals				Continuity
Steering lock sole-noid connector	Terminal	Intelligent Key unit connector	Terminal	
M65	2	M164	1	Yes
	3		32	

3. Check continuity between steering lock solenoid connector M65 (A) terminals 2, 3 and ground.

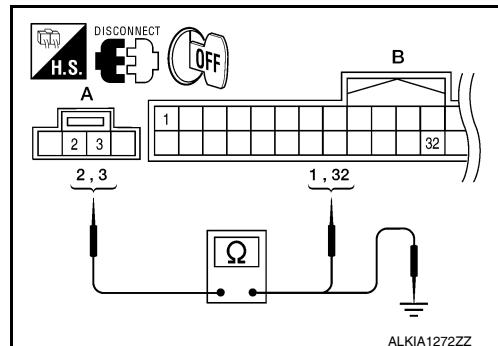

Is the inspection result normal?

YES >> GO TO 5

NO >> Repair or replace harness.

## 5.CHECK INTELLIGENT KEY UNIT POWER SUPPLY-2


1. Connect Intelligent Key unit connector.
2. Check voltage between Intelligent Key unit harness connector and ground.

Terminals		Voltage (V) (Approx.)
(+)	(-)	
Intelligent Key unit connector	Terminal	
M164	1	Ground 5

Is the inspection result normal?

YES >> GO TO 6

NO >> Replace Intelligent Key unit. Refer to [SEC-118, "Removal and Installation".](#)

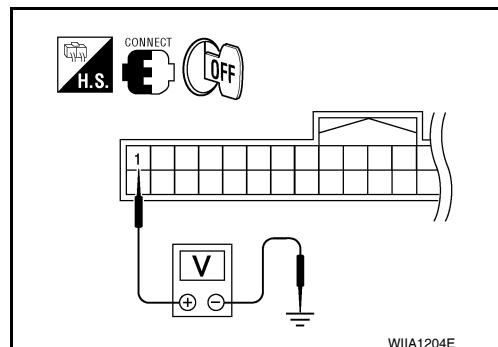


## 6.CHECK STEERING LOCK SOLENOID COMMUNICATION CIRCUIT



# B2013 ID DISCORD I-KEY-STRG

## < COMPONENT DIAGNOSIS >

## [WITH INTELLIGENT KEY SYSTEM]

1. Connect steering lock solenoid connector.
2. Using an oscilloscope, check voltage between Intelligent Key unit connector and ground.

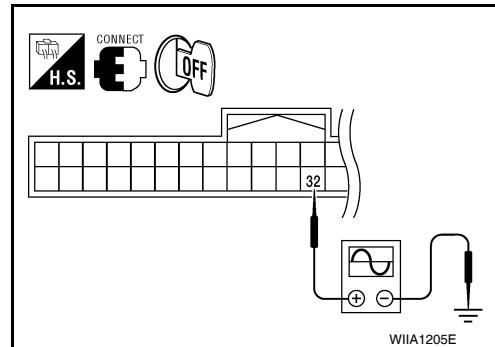

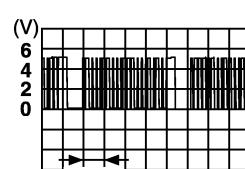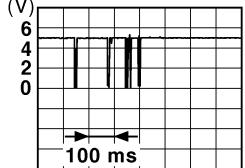Terminals		Condition	Voltage (V) (Approx.)
(+)	(-)		
Intelligent Key unit connector	Terminal		
M164	32	Steering lock	Ignition knob is pushed
			 SIIA1911J
			LOCK status
			5
			 JMKA0433ZZ
			LOCK ⇌ UNLOCK
			For 15 seconds after UNLOCK
			5
			15 seconds later UN- LOCK
			0

Is the inspection result normal?

YES >> Replace Steering lock solenoid.

NO >> Replace Intelligent Key unit. Refer to [SEC-118, "Removal and Installation"](#).

**B2190, P1614 NATS ANTENNA AMP.****Description**

INFOID:0000000005258965

Performs ID verification through BCM and NATS antenna amplifier when ignition knob switch is pressed.  
Prohibits the release of steering lock or start of engine when an unregistered ID of mechanical key is used.

**DTC Logic**

INFOID:0000000005258966

**DTC DETECTION LOGIC**

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2190			
P1614	NATS ANTENNA AMP	<ul style="list-style-type: none"> <li>• Inactive communication between NATS antenna amp. and BCM.</li> <li>• Mechanical key is malfunctioning.</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connectors (The NATS antenna amp. circuit is open or shorted)</li> <li>• Mechanical key</li> <li>• NATS antenna amp.</li> <li>• BCM</li> </ul>

**DTC CONFIRMATION PROCEDURE****1. PERFORM DTC CONFIRMATION PROCEDURE**

1. Insert mechanical key into the key cylinder.
2. Press the ignition knob switch.
3. Check "Self diagnostic result" with CONSULT-III.

**Is DTC detected?**

YES    >> Refer to [SEC-32, "Diagnosis Procedure"](#).

NO    >> Inspection End.

**Diagnosis Procedure**

INFOID:0000000005258967

Regarding Wiring Diagram information, refer to [SEC-63, "Wiring Diagram - NVIS"](#).

**1. CHECK NATS ANTENNA AMP. INSTALLATION**

Check NATS antenna amp. installation. Refer to [SEC-117, "Removal and Installation"](#).

**Is the inspection result normal?**

YES    >> GO TO 2

NO    >> Reininstall NATS antenna amp. correctly.

**2. CHECK NVIS (NATS) IGNITION KEY ID CHIP**

Start engine with another registered NATS ignition key.

**Does the engine start?**

YES    >> • Ignition key ID chip is malfunctioning.

    • Replace the ignition key.

    • Perform initialization with CONSULT-III.

        For initialization, refer to "CONSULT-III Operation Manual".

NO    >> GO TO 3

**3. CHECK POWER SUPPLY FOR NATS ANTENNA AMP.**


1. Turn ignition switch ON.

2. Check voltage between NATS antenna amp. connector M21 terminal 1 and ground.

**1 - Ground : Battery voltage**Is the inspection result normal?

YES &gt;&gt; GO TO 4

NO &gt;&gt; Repair or replace fuse or harness.

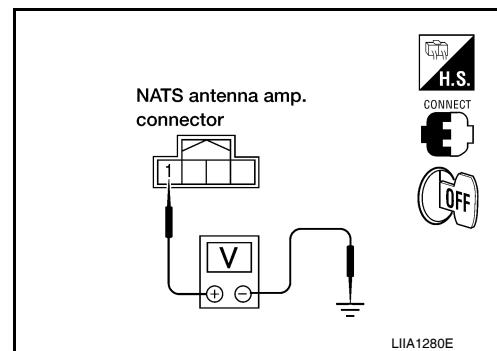**4.CHECK NATS ANTENNA AMP. GROUND LINE CIRCUIT**

1. Turn ignition switch OFF.
2. Disconnect NATS antenna amp. connector.
3. Check continuity between NATS antenna amp. connector M21 terminal 3 and ground.


**3 - Ground : Continuity should exist.**Is the inspection result normal?

YES &gt;&gt; GO TO 5


NO &gt;&gt; • Repair or replace harness.

**NOTE:**

If harness is OK, replace BCM, refer to [BCS-59, "Removal and Installation"](#). Perform initialization with CONSULT-III. For initialization, refer to "CONSULT-III Operation Manual".

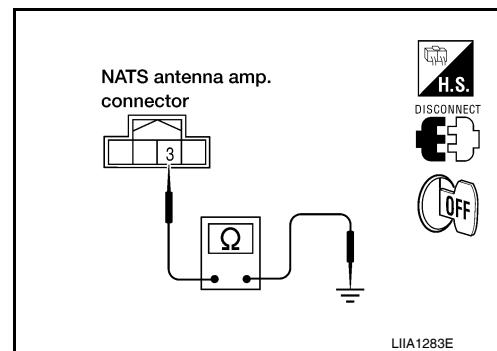**5.CHECK NATS ANTENNA AMP. SIGNAL LINE- 1**

1. Connect NATS antenna amp. connector.
2. Turn ignition switch ON.
3. Check voltage between NATS antenna amp. connector M21 terminal 2 and ground with analog tester.

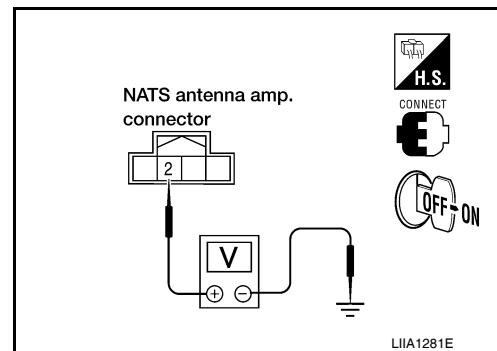

Terminals		Position of ignition key cylinder	Voltage (V) (Approx.)
( + )	( - )		
2	Ground	Before inserting ignition key	Battery voltage
		After inserting ignition key	Pointer of tester should move for approx. 30 seconds, then return to battery voltage
		Just after turning ignition switch ON	Pointer of tester should move for approx. 1 second, then return to battery voltage

Is the inspection result normal?

YES &gt;&gt; GO TO 6

NO &gt;&gt; • Repair or replace harness.

**NOTE:**

If harness is OK, replace BCM, refer to [BCS-59, "Removal and Installation"](#). Perform initialization with CONSULT-III. For initialization, refer to "CONSULT-III Operation Manual".

A  
B  
C  
D  
EF  
G  
H  
I  
J

SEC

L

M


N

O

P

**6.CHECK NATS ANTENNA AMP. SIGNAL LINE- 2**

Check voltage between NATS antenna amp. connector M21 terminal 4 and ground with analog tester.

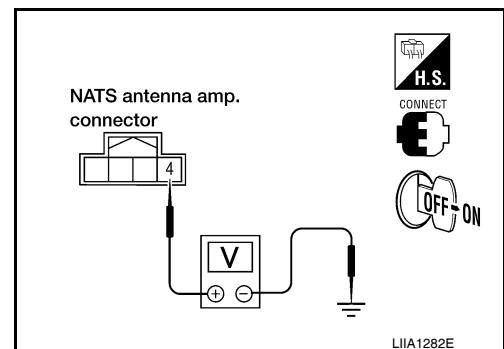

Terminals		Position of ignition key cylinder	Voltage (V) (Approx.)
( + )	( - )		
4	Ground	Before inserting ignition key	Battery voltage
		After inserting ignition key	Pointer of tester should move for approx. 30 seconds, then return to battery voltage
		Just after turning ignition switch ON	Pointer of tester should move for approx. 1 second, then return to battery voltage

Is the inspection result normal?

YES >> NATS antenna amp. is malfunctioning.

NO >> • Repair or replace harness.

**NOTE:**

If harness is OK, replace BCM, refer to [BCS-59, "Removal and Installation"](#). Perform initialization with CONSULT-III. For initialization, refer to "CONSULT-III Operation Manual".

**B2191, P1615 DIFFERENCE OF KEY****Description**

INFOID:0000000005258968

Performs ID verification through BCM when ignition knob switch is pressed.

Prohibits the release of steering lock or start of engine when an unregistered ID of mechanical key is used.

**DTC Logic**

INFOID:0000000005258969

**DTC DETECTION LOGIC**

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2191	DIFFERENCE OF KEY	The ID verification results between BCM and mechanical key are NG. The registration is necessary.	Mechanical key
P1615			

**DTC CONFIRMATION PROCEDURE****1. PERFORM DTC CONFIRMATION PROCEDURE**

1. Insert mechanical key into the key cylinder.
2. Press the ignition knob switch.
3. Check "Self diagnostic result" with CONSULT-III.

Is DTC detected?

YES >> Refer to [SEC-35, "Diagnosis Procedure"](#).

NO >> Inspection End.

**Diagnosis Procedure**

INFOID:0000000005258970

**1. PERFORM INITIALIZATION**

Perform initialization with CONSULT-III. Re-register all mechanical keys.

For initialization and registration of mechanical key. Refer to "CONSULT-III Operation Manual".

Can the system be initialized and can the engine be started with re-registered mechanical key?

YES >> Mechanical key was unregistered.

NO >> BCM is malfunctioning.

- Replace BCM. Refer to [BCS-59, "Removal and Installation"](#).
- Perform initialization again.

SEC

L

M

N

O

P

**B2192, P1611 ID DISCORD, IMMU-ECM****Description**

INFOID:0000000005258971

BCM performs the ID verification with ECM that allows the engine to start. BCM starts the communication with ECM if ignition switch is turned ON and starts the engine if the ID is OK. ECM prevents the engine from starting if the ID is not registered.

**DTC Logic**

INFOID:0000000005258972

**DTC DETECTION LOGIC****NOTE:**

- If DTC B2192 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-27, "DTC Logic"](#).
- If DTC B2192 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-28, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2192	ID DISCORD BCM-ECM	The ID verification results between BCM and ECM are NG. The registration is necessary.	• BCM • ECM
P1611			

**DTC CONFIRMATION PROCEDURE****1. PERFORM DTC CONFIRMATION PROCEDURE**

1. Turn ignition switch ON.
2. Check "Self diagnostic result" with CONSULT-III.

**Is DTC detected?**

- YES    >> Refer to [SEC-36, "Diagnosis Procedure"](#).  
NO      >> Inspection End.

**Diagnosis Procedure**

INFOID:0000000005258973

**1. PERFORM INITIALIZATION**

Perform initialization with CONSULT-III. Re-register all mechanical keys.

For initialization and registration of mechanical key. Refer to "CONSULT-III Operation Manual".

**Can the system be initialized and can the engine be started with re-registered mechanical key?**

- YES    >> ID was unregistered.  
NO      >> GO TO 2

**2. PEPLACE BCM**

1. Replace BCM. Refer to [BCS-59, "Removal and Installation"](#).
2. Perform initialization with CONSULT-III. Re-register all mechanical keys.  
For initialization and registration of mechanical key. Refer to "CONSULT-III Operation Manual".

**Can the system be initialized and can the engine be started with re-registered mechanical key?**

- YES    >> BCM is malfunctioning.  
NO      >> GO TO 3

**3. PEPLACE ECM**

1. Replace ECM. Refer to Removal and Installation.
2. Perform initialization with CONSULT-III. Re-register all mechanical keys.  
For initialization and registration of mechanical key. Refer to "CONSULT-III Operation Manual".

**Can the system be initialized and can the engine be started with re-registered mechanical key?**

- YES    >> ECM is malfunctioning.  
NO      >> GO TO 4

**4. CHECK INTERMITENT INCIDENT**

Refer to [GI-37, "Intermittent Incident"](#).

>> Inspection End.

A

B

C

D

E

F

G

H

I

J

**SEC**

L

M

N

O

P

**B2193, P1612 CHAIN OF ECM-IMMU****Description**

INFOID:0000000005258974

BCM performs the ID verification with ECM that allows the engine to start. BCM starts the communication with ECM if ignition switch is turned ON and starts the engine if the ID is OK. ECM prevents the engine from starting if the ID is not registered.

**DTC Logic**

INFOID:0000000005258975

**DTC DETECTION LOGIC****NOTE:**

- If DTC B2193 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-27, "DTC Logic"](#).
- If DTC B2193 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-28, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2193			
P1612	CHAIN OF BCM-ECM	Inactive communication between ECM and BCM	<ul style="list-style-type: none"><li>• Harness or connectors (The CAN communication line is open or short)</li><li>• BCM</li><li>• ECM</li></ul>

**DTC CONFIRMATION PROCEDURE****1. PERFORM DTC CONFIRMATION PROCEDURE**

1. Turn ignition switch ON.
2. Check "Self diagnostic result" with CONSULT-III.

**Is DTC detected?**

YES >> Refer to [SEC-38, "Diagnosis Procedure"](#).

NO >> Inspection End.

**Diagnosis Procedure**

INFOID:0000000005258976

**1. REPLACE BCM**

1. Replace BCM. Refer to [BCS-59, "Removal and Installation"](#).
2. Perform initialization with CONSULT-III.  
For initialization, refer to "CONSULT-III Operation Manual".

**Does the engine start?**

YES >> BCM was malfunctioning.

NO >> ECM is malfunctioning.

- Replace ECM.
- Perform ECM re-communicating function.

**B2194 ID DISCORD IMMU-I-KEY****Description**

INFOID:0000000005258977

BCM performs the ID verification with Intelligent Key unit that allows the engine to start. BCM starts the communication with Intelligent Key unit if ignition switch is turned ON and starts the engine if the ID is OK. BCM prevents the engine from starting if the ID is not registered.

**DTC Logic**

INFOID:0000000005258978

**DTC DETECTION LOGIC**

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2194	DISCORD BCM-I-KEY	The ID verification results between BCM and Intelligent Key unit are NG. The registration is necessary.	<ul style="list-style-type: none"> <li>• BCM</li> <li>• Intelligent Key unit</li> </ul>

**DTC CONFIRMATION PROCEDURE****1. PERFORM DTC CONFIRMATION PROCEDURE**

1. Turn ignition switch ON.
2. Check "Self diagnostic result" with CONSULT-III.

Is DTC detected?

YES >> Refer to [SEC-39, "Diagnosis Procedure"](#).

NO >> Inspection End.

**Diagnosis Procedure**

INFOID:0000000005258979

**1. PERFORM INITIALIZATION**

1. Perform initialization with CONSULT-III. Re-register all mechanical keys.  
For initialization and registration of mechanical key. Refer to "CONSULT-III Operation Manual".
2. Check "Self diagnostic result" with CONSULT-III.

Is DTC detected?

YES >> GO TO 2

NO >> ID was unregistered.

**2. REPLACE BCM**

1. Turn ignition switch OFF.
2. Replace BCM. Refer to [BCS-59, "Removal and Installation"](#).
3. Perform initialization with CONSULT-III. Re-register all mechanical keys.  
For initialization and registration of mechanical key. Refer to "CONSULT-III Operation Manual".

Can the system be initialized and can the engine be started?

YES >> BCM is malfunctioning.

NO >> GO TO 3

**3. CHECK INTERMITTENT INCIDENT**

Refer to [GI-37, "Intermittent Incident"](#).

>> Inspection End.

**B2552 INTELLIGENT KEY****Description**

INFOID:0000000005258980

Intelligent Key unit performs engine start operation and steering lock control by crosschecking ID with the Intelligent Key.

**DTC Logic**

INFOID:0000000005258981

**DTC DETECTION LOGIC**

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2552	INTELLIGENT KEY UNIT	Malfunction is detected inside Intelligent key unit.	Intelligent Key unit

**DTC CONFIRMATION PROCEDURE****1. PERFORM DTC CONFIRMATION PROCEDURE**

1. Turn ignition switch ON.
2. Check "Self diagnostic result" with CONSULT-III.

**Is DTC detected?**

- YES >> Refer to [SEC-40, "Diagnosis Procedure"](#).  
NO >> Inspection End.

**Diagnosis Procedure**

INFOID:0000000005258982

**1. REPLACE INTELLIGENT KEY UNIT**

1. Replace Intelligent Key unit.
2. Perform initialization with CONSULT-III. Re-register all mechanical keys. Refer to "CONSULT-III Operation Manual".
3. Start the engine.

**Does the engine start?**

- YES >> Inspection End.  
NO >> Perform "DTC confirmation procedure". Refer to [SEC-40, "DTC Logic"](#).

**Special Repair Requirement**

INFOID:0000000005258983

**1. REQUIRED WORK WHEN REPLACING INTELLIGENT KEY UNIT**

Initialize control unit. Refer to CONSULT-III Operation Manual.

>> Inspection End.

**B2590 ID DISCORD BCM-I-KEY****Description**

INFOID:0000000005258984

Intelligent Key unit performs the ID verification with BCM that allows the engine to start. BCM starts the engine if the ID is OK and prevents the engine from starting if the ID is not registered.

**DTC Logic**

INFOID:0000000005258985

**DTC DETECTION LOGIC****NOTE:**

- If DTC B2590 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-27, "DTC Logic"](#).
- If DTC B2590 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-28, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2590	ID DISCORD BCM-I-KEY	The ID verification results between BCM and Intelligent Key unit are NG. The registration is necessary.	<ul style="list-style-type: none"> <li>• BCM</li> <li>• Intelligent Key unit</li> </ul>

**DTC CONFIRMATION PROCEDURE****1. PERFORM DTC CONFIRMATION PROCEDURE**

1. Turn ignition switch ON.
2. Check "Self diagnostic result" with CONSULT-III.

**Is DTC detected?**

- YES    >> Refer to [SEC-41, "Diagnosis Procedure"](#).  
 NO    >> Inspection End.

**Diagnosis Procedure**

INFOID:0000000005258986

**1. PERFORM INITIALIZATION**

Perform initialization with CONSULT-III. Re-register all mechanical keys.

For initialization and registration of mechanical key. Refer to "CONSULT-III Operation Manual".

**Can the system be initialized and can the engine be started with re-registered mechanical key?**

- YES    >> ID was unregistered.  
 NO    >> BCM is malfunctioning.
  - Replace BCM. Refer to [BCS-59, "Removal and Installation"](#).
  - Perform initialization again

SEC

L

M

N

O

P

**P1610 LOCK MODE****Description**

INFOID:0000000005258987

When the starting operation is carried more than five times consecutively under the following conditions, NATS will shift to the mode which prevents the engine from being started.

- Unregistered mechanical key is used.
- BCM or ECM's malfunctioning.

**DTC Logic**

INFOID:0000000005258988

**DTC DETECTION LOGIC**

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1610	LOCK MODE	When the starting operation is carried out five or more times consecutively under the following conditions. <ul style="list-style-type: none"><li>• Unregistered mechanical key</li><li>• BCM or ECM's malfunctioning.</li></ul>	—

**DTC CONFIRMATION PROCEDURE****1. PERFORM DTC CONFIRMATION PROCEDURE**

1. Turn ignition switch ON.
2. Check "Self diagnostic result" with CONSULT-III.

**Is DTC detected?**

YES >> Refer to [SEC-42, "Diagnosis Procedure"](#).

NO >> Inspection End.

**Diagnosis Procedure**

INFOID:0000000005258989

**1. CHECK ENGINE START FUNCTION**

1. Perform the check for DTC except DTC P1610.
2. Use CONSULT-III to erase DTC after fixing.
3. Check that engine can start with registered mechanical key.

**Does the engine start?**

YES >> Inspection End.

NO >> GO TO 2

**2. CHECK INTERMITTENT INCIDENT**

Refer to [GI-37, "Intermittent Incident"](#).

>> Inspection End.

# POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## POWER SUPPLY AND GROUND CIRCUIT INTELLIGENT KEY UNIT

### INTELLIGENT KEY UNIT : Diagnosis Procedure

INFOID:000000005258990

Regarding Wiring Diagram information, refer to [SEC-85, "Wiring Diagram - INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION -"](#).

#### 1. CHECK POWER SUPPLY CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect Intelligent Key unit connector.
3. Check voltage between Intelligent Key unit harness connector M70 terminals 6, 11 and ground.

Connector	Terminals		Ignition switch position	
	(+)	(-)	OFF	ON
M70	6	Ground	0V	Battery voltage
	11		Battery voltage	Battery voltage

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace Intelligent Key power supply circuit.

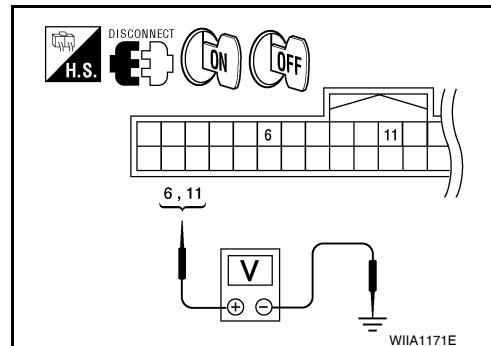

#### 2. CHECK GROUND CIRCUIT


1. Turn ignition switch OFF.
2. Check continuity between Intelligent Key unit harness connector M70 terminal 12 and ground.

**12 - Ground : Continuity should exist.**

Is the inspection result normal?

YES >> Power supply and ground circuits are OK.

NO >> Repair or replace the Intelligent Key unit ground circuit.

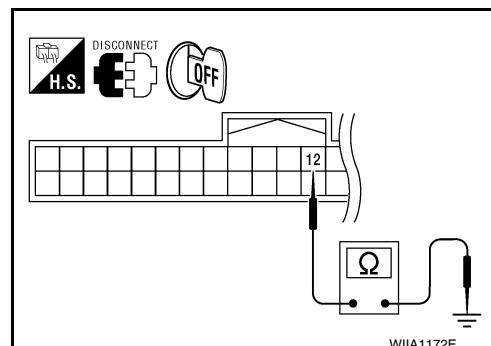

BCM

### BCM : Diagnosis Procedure

INFOID:000000005258991

Regarding Wiring Diagram information, refer to [BCS-50, "Wiring Diagram"](#).

#### 1. CHECK FUSES AND FUSIBLE LINK

Check that the following fuses and fusible link are not blown.

Terminal No.	Signal name	Fuses and fusible link No.
57	Battery power supply	18 (10A)
70		G (50A)
11	Ignition ACC or ON	4 (10A)
38	Ignition ON or START	1 (10A)

Is the fuse blown?

# POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

YES >> Replace the blown fuse or fusible link after repairing the affected circuit.

NO >> GO TO 2

## 2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM.
3. Check voltage between BCM harness connector and ground.

Connector	Terminals		Power source	Condition	Voltage (V) (Approx.)
	(+)	(-)			
M18	11	Ground	ACC power supply	Ignition switch ACC or ON	Battery voltage
	38	Ground	Ignition power supply	Ignition switch ON or START	Battery voltage
M20	57	Ground	Battery power supply	Ignition switch OFF	Battery voltage
	70	Ground	Battery power supply	Ignition switch OFF	Battery voltage

Is the measurement value normal?

YES >> GO TO 3

NO >> Repair or replace harness.

## 3. CHECK GROUND CIRCUIT



Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M20	67		Yes

Does continuity exist?

YES >> Inspection End.

NO >> Repair or replace harness.

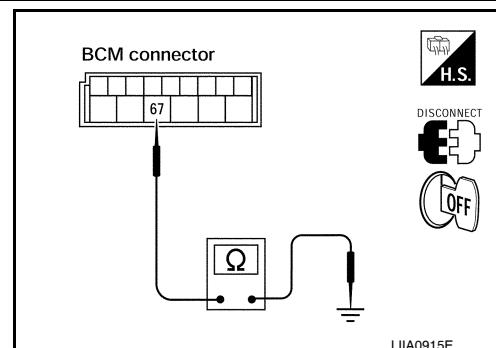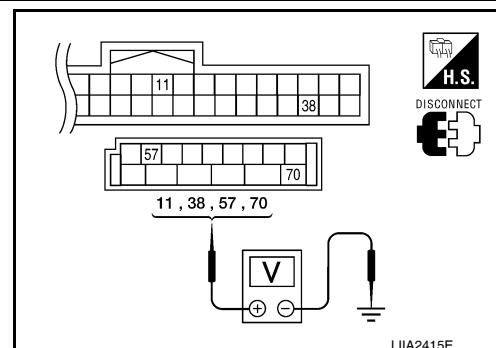

# KEY CYLINDER SWITCH

< COMPONENT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## KEY CYLINDER SWITCH

### Description

INFOID:0000000005258992

The main power window and door lock/unlock switch detects condition of the door key cylinder switch and transmits to BCM as the LOCK or UNLOCK signal.

### Component Function Check

INFOID:0000000005258993

#### 1.CHECK DOOR KEY CYLINDER SWITCH INPUT SIGNAL

Check "KEY CYL LK-SW" AND "KEY CYL UN-SW" in DATA MONITOR mode for "POWER DOOR LOCK SYSTEM" with CONSULT-III.

Monitor item	Condition	
KEY CYL LK-SW	Lock	: ON
	Neutral / Unlock	: OFF
KEY CYL UN-SW	Unlock	: ON
	Neutral / Lock	: OFF

Is the inspection result normal?

YES >> Key cylinder switch is OK.

NO >> Refer to [SEC-45, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:0000000005258994

Regarding Wiring Diagram information, refer to [SEC-69, "Wiring Diagram - VEHICLE SECURITY SYSTEM"](#).

#### 1.CHECK DOOR KEY CYLINDER SWITCH LH

(P)With CONSULT-III

Check front door lock assembly LH (key cylinder switch) ("KEY CYL LK-SW") and ("KEY CYL UN-SW") in DATA MONITOR mode with CONSULT-III.

- When key inserted in left front key cylinder is turned to LOCK:

**KEY CYL LK-SW : ON**


- When key inserted in left front key cylinder is turned to UNLOCK:

**KEY CYL UN-SW : ON**

(X)Without CONSULT-III

Check voltage between main power window and door lock/unlock switch connector D7 terminals 4, 6 and ground.

Connector	Terminals		Condition of left front key cylinder	Voltage (V) (Approx.)	
	(+)	(-)			
D7	4	Ground	Neutral/Unlock	5	
			Lock	0	
	6		Neutral/Lock	5	
			Unlock	0	

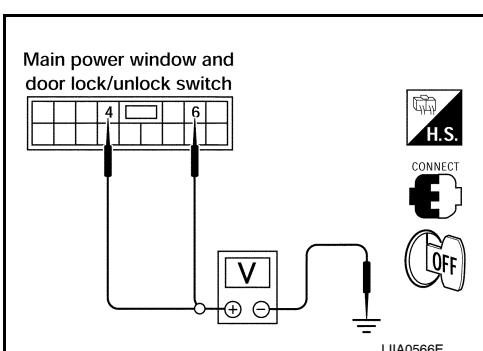

Is the inspection result normal?

YES >> Key cylinder switch signal is OK.

# KEY CYLINDER SWITCH

< COMPONENT DIAGNOSIS >


[WITH INTELLIGENT KEY SYSTEM]

NO >> GO TO 2

## 2. CHECK DOOR KEY CYLINDER SWITCH LH GROUND HARNESS

- Turn ignition switch OFF.
- Disconnect front door lock assembly LH (key cylinder switch).
- Check continuity between front door lock assembly LH (key cylinder switch) connector (A) D14 terminal 4 and body ground.

Connector	Terminals	Continuity
D14	4 – Ground	Yes

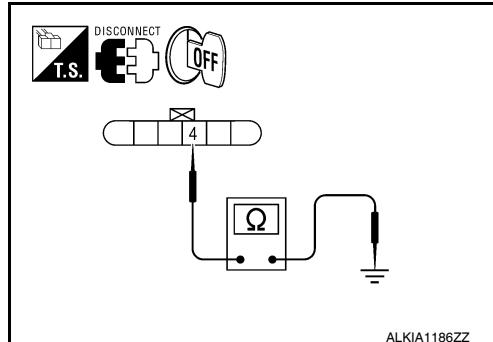

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace harness.

## 3. CHECK DOOR KEY CYLINDER SWITCH LH

Check continuity between front door lock assembly LH (key cylinder switch) terminals.

Terminals	Condition	Continuity
3 – 4	Key is turned to LOCK or neutral.	No
	Key is turned to UNLOCK.	Yes
4 – 5	Key is turned to UNLOCK or neutral.	No
	Key is turned to LOCK.	Yes

Is the inspection result normal?


YES >> GO TO 4

NO >> Replace front door lock assembly LH (key cylinder switch). Refer to [DLK-199, "Removal and Installation".](#)

## 4. CHECK DOOR KEY CYLINDER HARNESS

Check continuity between main power window and door lock/unlock switch connector (A) D7 terminals 4, 6 and front door lock assembly LH (key cylinder switch) connector (B) D14 terminals 3, 5 and body ground.


Connector	Terminals	Connector	Terminals	Continuity
A: Main power window and door lock/unlock switch	4	B: Front door lock assembly LH (key cylinder switch)	5	Yes
	6		3	Yes
	4, 6		Ground	No

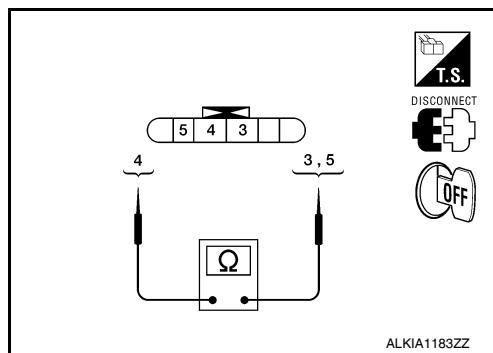

Is the inspection result normal?

YES >> Replace main power window and door lock/unlock switch.

NO >> Repair or replace harness.

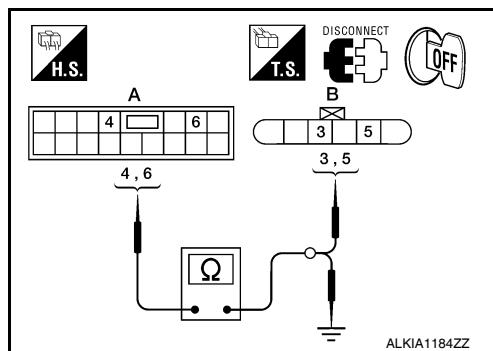

# GLASS HATCH AJAR SWITCH

< COMPONENT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## GLASS HATCH AJAR SWITCH

### Description

INFOID:000000005258995

Detects glass hatch open/close condition.

### Component Function Check

INFOID:000000005258996

#### 1.CHECK FUNCTION

##### With CONSULT-III

Check glass hatch switch in data monitor mode with CONSULT-III.

Monitor item	Condition
GLASS HATCH SW	CLOSE → OPEN: OFF → ON

##### Is the inspection result normal?

YES >> Glass hatch switch is OK.

NO >> Refer to [SEC-47, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000005258997

Regarding Wiring Diagram information, refer to [SEC-69, "Wiring Diagram - VEHICLE SECURITY SYSTEM"](#).

#### 1.CHECK GLASS HATCH AJAR SWITCH INPUT SIGNAL

##### With CONSULT-III

Check glass hatch ajar switch "GLASS HATCH SW" in DATA MONITOR mode with CONSULT-III.

- When glass hatch is open:

GLASS HATCH SW :ON

- When glass hatch is closed:

GLASS HATCH SW :OFF

##### Without CONSULT-III


Check voltage between BCM connector M19 terminal 42 and ground.

Connector	Item	Terminals		Condition	Voltage (V) (Approx.)
		(+)	(-)		
M19	BCM	42	Ground	Open ↓ Closed	0 ↓ Battery voltage

##### Is the inspection result normal?

YES >> Glass hatch ajar switch circuit is OK.

NO >> GO TO 2

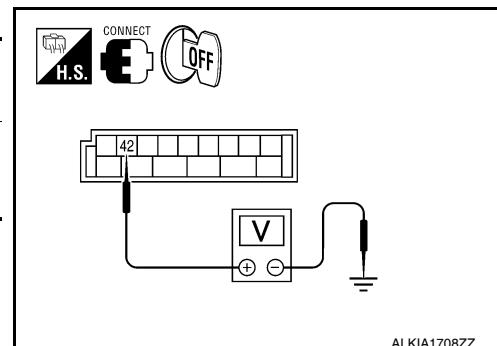

#### 2.CHECK GLASS HATCH AJAR SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect glass hatch ajar switch and BCM.
3. Check continuity between BCM connector M19 (A) terminal 42 and glass hatch ajar switch connector D503 (B) terminal 1.

# GLASS HATCH AJAR SWITCH

< COMPONENT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

**42 - 1**

**:Continuity should exist**

4. Check continuity between BCM connector M19 (A) terminal 42 and ground.


**42 - Ground**

**:Continuity should not exist**

Is the inspection result normal?

YES    >> GO TO 3

NO      >> Repair or replace harness.

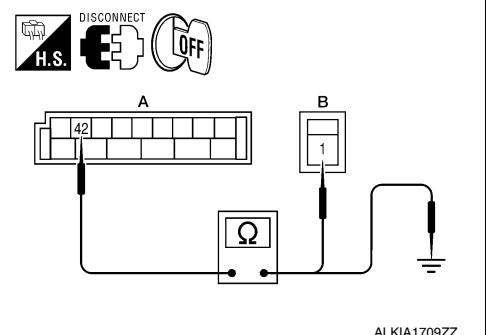

## 3.CHECK GLASS HATCH AJAR SWITCH


Check continuity between glass hatch ajar switch connector terminal 1 and ground.

	Terminals	Condition	Continuity
Glass hatch ajar switch	1 – Ground	Open	Yes
		Closed	No

Is the inspection result normal?

YES    >> Refer to [GI-37, "Intermittent Incident"](#).

NO      >> Replace glass hatch ajar switch.

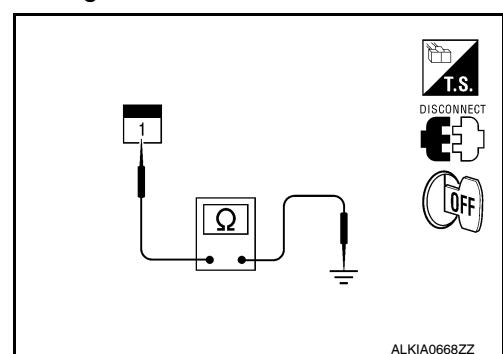

## IGNITION KNOB SWITCH

## Ignition Knob Switch Check

INFOID:0000000005258998

Regarding Wiring Diagram information, refer to [SEC-85, "Wiring Diagram - INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION -"](#).

## 1. CHECK IGNITION KNOB SWITCH

 With CONSULT-III

Display "PUSH SW" on DATA MONITOR screen, and check if ON/OFF display is linked to ignition switch operation.

Monitor item	Condition
PUSH SW	Ignition switch is pushed: ON
	Ignition switch is released: OFF


 Without CONSULT-III

1. Turn ignition switch OFF.
2. Disconnect Intelligent Key unit connector.
3. Check voltage between Intelligent Key unit harness connector M164 terminal 27 and ground.

Connector	Terminals		Condition	Voltage (V) (Approx.)
	(+)	(-)		
M164	27	Ground	Ignition switch is pushed	Battery voltage
			Ignition switch is released	0

Is the inspection result normal?

- YES >> Ignition knob switch is OK.  
NO >> GO TO 2

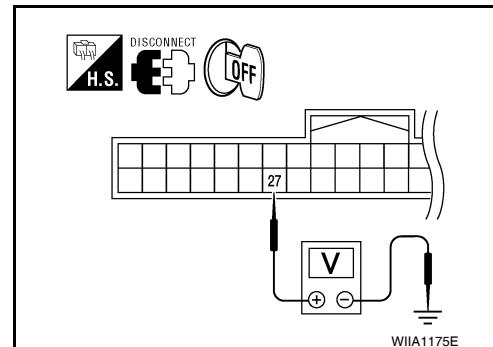

## 2. CHECK IGNITION KNOB SWITCH POWER SUPPLY CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect key switch and ignition knob switch connector.
3. Check voltage between key switch and ignition knob switch harness connector M66 terminal 1 and ground.

**1 - Ground**

**: Battery voltage**

Is the inspection result normal?

- YES >> GO TO 3  
NO >> Repair or replace key switch and ignition knob switch power supply circuit.

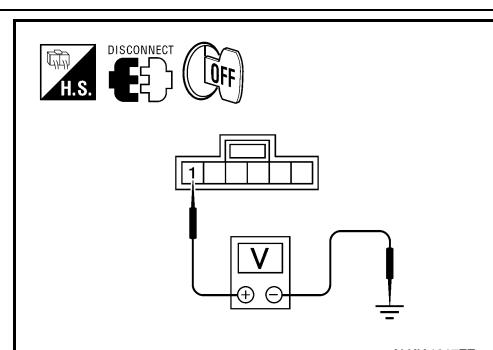

## 3. CHECK IGNITION KNOB SWITCH OPERATION

# IGNITION KNOB SWITCH

## < COMPONENT DIAGNOSIS >

## [WITH INTELLIGENT KEY SYSTEM]


Check continuity between key switch and ignition knob switch terminals 1 and 2.

Component	Terminals		Condition	Continuity
Ignition knob switch	1	2	Ignition switch is pushed	Yes
			Ignition switch is released	No

Is the inspection result normal?

YES >> GO TO 4

NO >> Replace key switch and ignition knob switch.

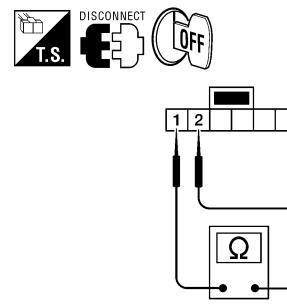

ALKIA1218ZZ

## 4. CHECK IGNITION KNOB SWITCH CIRCUIT

1. Check continuity between Intelligent Key unit harness connector M164 (A) terminal 27 and key switch and ignition knob switch harness connector M66 (B) terminal 2.

**27 - 2 : Continuity should exist.**


2. Check continuity between Intelligent Key unit harness connector M164 (A) terminal 27 and ground.

**27 - Ground : Continuity should not exist.**

Is the inspection result normal?

YES >> Check the condition of harness and harness connector.

NO >> Repair or replace harness between Intelligent Key unit and key switch and ignition knob switch.

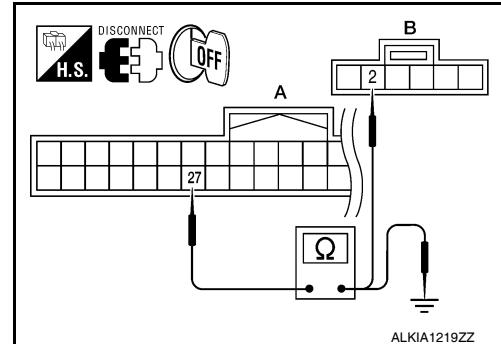

ALKIA1219ZZ

**HORN FUNCTION****Symptom Table**

INFOID:000000005258999

**HAZARD AND HORN REMINDER FUNCTION MALFUNCTION****NOTE:**

- Before performing the diagnosis in the following table, check "Work flow". Refer to [SEC-5, "Work Flow"](#).
- If the following symptoms" are detected, check systems shown in the "Diagnosis/service procedure" column in this order.

## Conditions of Vehicle (Operating Conditions)

- "ANSWER BACK FUNCTION" is ON when setting on CONSULT-III.
- Ignition switch is in OFF position.
- All doors are closed.

Symptom	Diagnosis/service procedure	Reference page
Hazard reminder does not operate by request switch. (Horn reminder operate.)	1. Check "HAZARD ANSWER BACK" setting in "WORK SUPPORT".	<a href="#">DLK-41</a>
	2. Check hazard function.	<a href="#">EXL-4</a>
	3. Check Intermittent Incident.	<a href="#">GI-37</a>
Hazard reminder does not operate by Intelligent Key. (Horn reminder operate.)	1. Check "HAZARD ANSWER BACK" setting in "WORK SUPPORT".	<a href="#">DLK-41</a>
	2. Check hazard function.	<a href="#">EXL-4</a>
	3. Check Intelligent Key battery inspection.	<a href="#">DLK-101</a>
Horn reminder does not operate by request switch. (Hazard reminder operate.)	Check "ANSWER BACK WITH I-KEY LOCK" or "ANSWER BACK WITH I-KEY UNLOCK" setting in "WORK SUPPORT".	<a href="#">DLK-41</a>
	1. SWER BACK WITH I-KEY UNLOCK" setting in "WORK SUPPORT".	<a href="#">DLK-87</a>
	2. Check Intelligent Key warning buzzer.	<a href="#">GI-37</a>
Horn reminder does not operate by Intelligent Key. (Hazard reminder operate.)	1. Check "HORN WITH KEYLESS LOCK" setting in "WORK SUPPORT".	<a href="#">DLK-41</a>
	2. Check horn function.	<a href="#">HRN-4</a>
	3. Check Intermittent Incident.	<a href="#">GI-37</a>

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

# VEHICLE SECURITY INDICATOR

< COMPONENT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## VEHICLE SECURITY INDICATOR

### Description

INFOID:0000000005259000

- Vehicle security indicator is built in combination meter.
- NATS (Nissan Anti-Theft System) and vehicle security system conditions are indicated by blink or illumination of vehicle security indicator.

### Component Function Check

INFOID:0000000005259001

#### 1.CHECK FUNCTION

- Perform "THEFT IND" in the "Active Test" mode with CONSULT-III.
- Check vehicle security indicator operation.

Test item		Description	
THEFT IND	ON	Vehicle security indicator	ON
	OFF		OFF

Is the inspection result normal?

YES >> Inspection End.

NO >> Refer to [SEC-52, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:0000000005259002

Regarding Wiring Diagram information, refer to [SEC-85, "Wiring Diagram - INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION -"](#).

#### 1.SECURITY INDICATOR LAMP ACTIVE TEST

(B)With CONSULT-III

Check "THEFT IND" in "ACTIVE TEST" mode with CONSULT-III.

(X)Without CONSULT-III


- Disconnect BCM.
- Turn ignition switch ON.
- Check voltage between BCM harness connector M18 terminal 23 and ground.

Connector	Terminals		Condition	Voltage (V) (Approx.)
	(+)	(-)		
M18	23	Ground	ON	0
			OFF	Battery voltage

Is the inspection result normal?

YES >> Security indicator lamp is OK.

NO >> GO TO 2

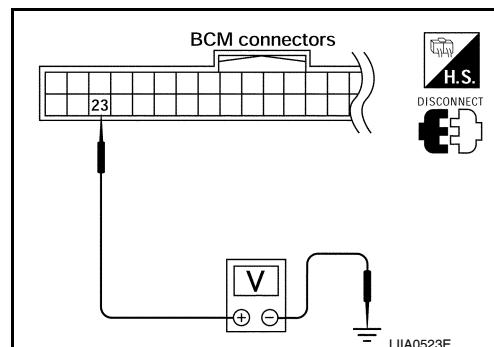

#### 2.SECURITY INDICATOR LAMP CHECK

Check security indicator lamp condition.

Is the inspection result normal?

YES >> GO TO 3

NO >> Replace security indicator lamp.

#### 3.CHECK HARNESS CONTINUITY

- Turn ignition switch OFF.
- Disconnect BCM and security indicator lamp connector.

# VEHICLE SECURITY INDICATOR

< COMPONENT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

3. Check continuity between BCM connector M18 (A) terminal 23 and combination meter connector M24 (B) terminal 39.

**23 - 39**

: Continuity should exist.

4. Check continuity between BCM connector M18 (A) terminal 23 and ground.

**23 - Ground**


: Continuity should not exist.

Is the inspection result normal?

YES >> Check the following:

- 10A fuse [No. 19, located in fuse block (J/B)]
- Harness for open or short between security indicator lamp and fuse

NO >> Repair or replace harness.

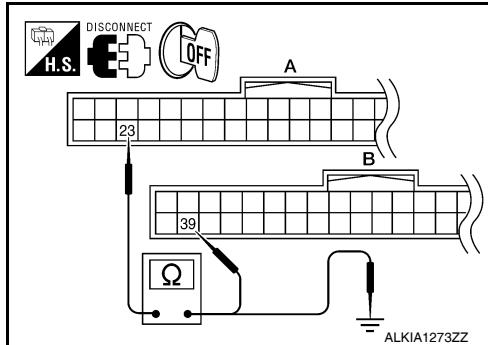

# BCM (BODY CONTROL MODULE)

[WITH INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS >

## ECU DIAGNOSIS

### BCM (BODY CONTROL MODULE)

#### Reference Value

INFOID:0000000005484809

#### VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition	Value/Status
AIR COND SW	A/C switch OFF	OFF
	A/C switch ON	ON
AUT LIGHT SYS	Outside of the room is dark	OFF
	Outside of the room is bright	ON
AUTO LIGHT SW	Lighting switch OFF	OFF
	Lighting switch AUTO	ON
BACK DOOR SW	Back door closed	OFF
	Back door opened	ON
CDL LOCK SW	Door lock/unlock switch does not operate	OFF
	Press door lock/unlock switch to the LOCK side	ON
CDL UNLOCK SW	Door lock/unlock switch does not operate	OFF
	Press door lock/unlock switch to the UNLOCK side	ON
DOOR SW-AS	Front door RH closed	OFF
	Front door RH opened	ON
DOOR SW-DR	Front door LH closed	OFF
	Front door LH opened	ON
DOOR SW-RL	Rear door LH closed	OFF
	Rear door LH opened	ON
DOOR SW-RR	Rear door RH closed	OFF
	Rear door RH opened	ON
ENGINE RUN	Engine stopped	OFF
	Engine running	ON
FR FOG SW	Front fog lamp switch OFF	OFF
	Front fog lamp switch ON	ON
FR WASHER SW	Front washer switch OFF	OFF
	Front washer switch ON	ON
FR WIPER LOW	Front wiper switch OFF	OFF
	Front wiper switch LO	ON
FR WIPER HI	Front wiper switch OFF	OFF
	Front wiper switch HI	ON
FR WIPER INT	Front wiper switch OFF	OFF
	Front wiper switch INT	ON
FR WIPER STOP	Any position other than front wiper stop position	OFF
	Front wiper stop position	ON
HAZARD SW	When hazard switch is not pressed	OFF
	When hazard switch is pressed	ON
LIGHT SW 1ST	Lighting switch OFF	OFF
	Lighting switch 1st	ON

# BCM (BODY CONTROL MODULE)

[WITH INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status
HEAD LAMP SW1	Headlamp switch OFF	OFF
	Headlamp switch 1st	ON
HEAD LAMP SW2	Headlamp switch OFF	OFF
	Headlamp switch 1st	ON
HI BEAM SW	High beam switch OFF	OFF
	High beam switch HI	ON
IGN ON SW	Ignition switch OFF or ACC	OFF
	Ignition switch ON	ON
IGN SW CAN	Ignition switch OFF or ACC	OFF
	Ignition switch ON	ON
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	1 - 7
I-KEY LOCK <sup>1</sup>	LOCK button of Intelligent Key is not pressed	OFF
	LOCK button of Intelligent Key is pressed	ON
I-KEY UNLOCK <sup>1</sup>	UNLOCK button of Intelligent Key is not pressed	OFF
	UNLOCK button of Intelligent Key is pressed	ON
KEY ON SW	Mechanical key is removed from key cylinder	OFF
	Mechanical key is inserted to key cylinder	ON
KEYLESS LOCK <sup>2</sup>	LOCK button of key fob is not pressed	OFF
	LOCK button of key fob is pressed	ON
KEYLESS UNLOCK <sup>2</sup>	UNLOCK button of key fob is not pressed	OFF
	UNLOCK button of key fob is pressed	ON
OIL PRESS SW	• Ignition switch OFF or ACC • Engine running	OFF
	Ignition switch ON	ON
PASSING SW	Other than lighting switch PASS	OFF
	Lighting switch PASS	ON
PUSH SW <sup>1</sup>	Return to ignition switch to LOCK position	OFF
	Press ignition switch	ON
REAR DEF SW	Rear window defogger switch OFF	OFF
	Rear window defogger switch ON	ON
RR WASHER SW	Rear washer switch OFF	OFF
	Rear washer switch ON	ON
RR WIPER INT	Rear wiper switch OFF	OFF
	Rear wiper switch INT	ON
RR WIPER ON	Rear wiper switch OFF	OFF
	Rear wiper switch ON	ON
RR WIPER STOP	Rear wiper stop position	OFF
	Other than rear wiper stop position	ON
TAIL LAMP SW	Lighting switch OFF	OFF
	Lighting switch 1ST	ON
TRNK OPNR SW	When back door opener switch is not pressed	OFF
	When back door opener switch is pressed	ON
TURN SIGNAL L	Turn signal switch OFF	OFF
	Turn signal switch LH	ON

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

**BCM (BODY CONTROL MODULE)****[WITH INTELLIGENT KEY SYSTEM]**

&lt; ECU DIAGNOSIS &gt;

Monitor Item	Condition	Value/Status
TURN SIGNAL R	Turn signal switch OFF	OFF
	Turn signal switch RH	ON
VEHICLE SPEED	While driving	Equivalent to speedometer reading

1: With Intelligent Key

2: With remote keyless entry system

# BCM (BODY CONTROL MODULE)

[WITH INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS >

Terminal Layout

INFOID:000000005484810

A

B

C

D

E

F

G

H

I

J

SEC


L

M

N

O

P

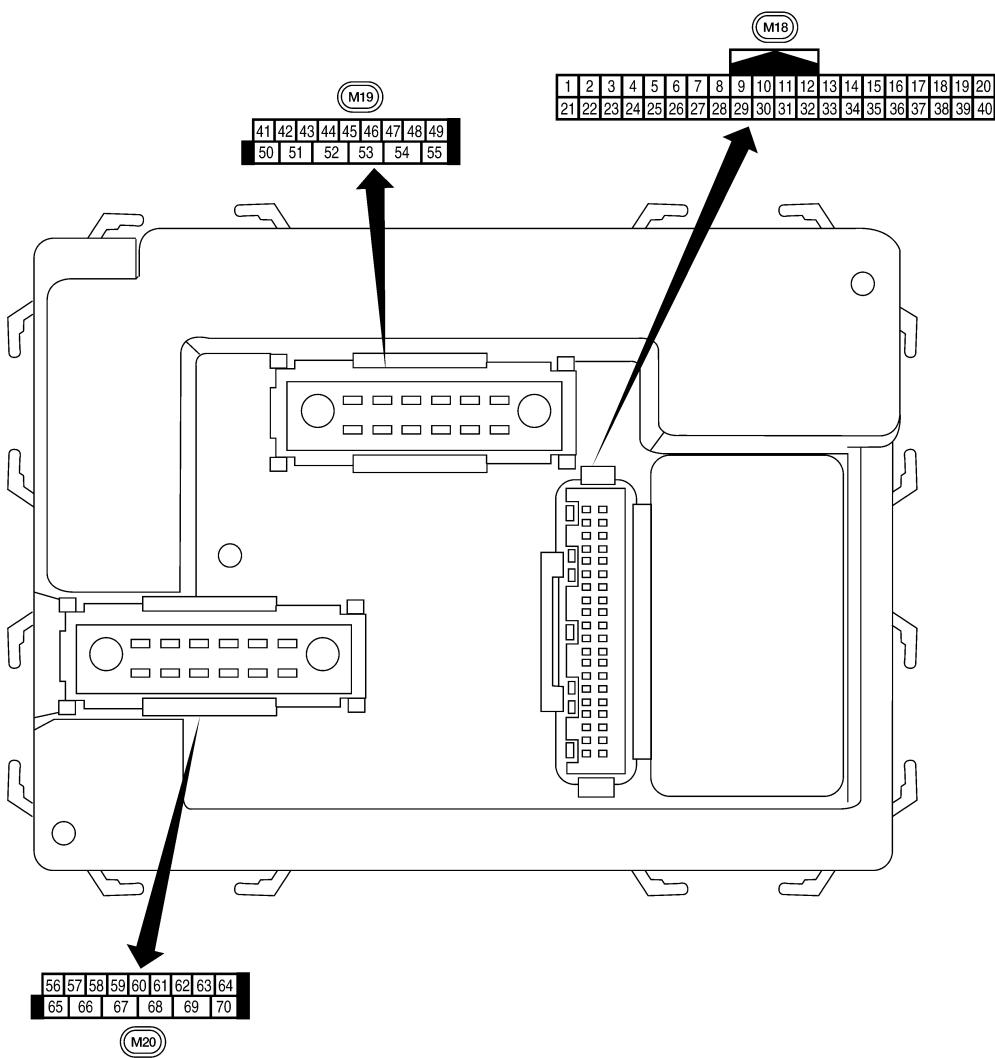

Physical Values





LIIA2443E

INFOID:000000005484811

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >





[WITH INTELLIGENT KEY SYSTEM]

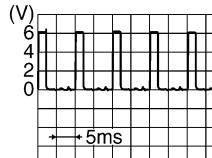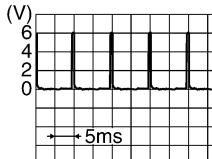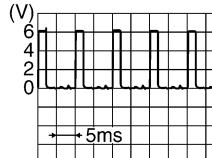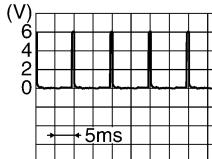Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
1	BR	Ignition keyhole illumination	Output	OFF	Door is locked (SW OFF)	Battery voltage
					Door is unlocked (SW ON)	0V
2	P	Combination switch input 5	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
3	SB	Combination switch input 4	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
4	V	Combination switch input 3	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
5	L	Combination switch input 2	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
6	R	Combination switch input 1				
9	Y	Rear window defogger switch	Input	ON	Rear window defogger switch ON	0V
					Rear window defogger switch OFF	5V
11	G/B	Ignition switch (ACC or ON)	Input	ACC or ON	Ignition switch ACC or ON	Battery voltage
12	LG	Front door switch RH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
13	L	Rear door switch RH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
15	W	Tire pressure warning check connector	Input	OFF	—	5V
18	BR	Remote keyless entry receiver and optical sensor (ground)	Output	OFF	—	0V

# BCM (BODY CONTROL MODULE)

[WITH INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS >

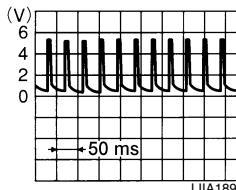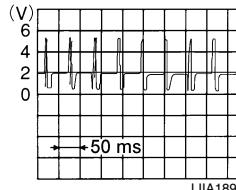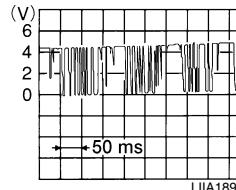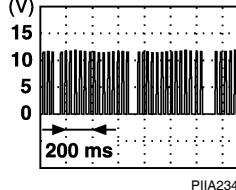Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
19	V	Remote keyless entry receiver (power supply)	Output	OFF	Ignition switch OFF	 LIIA1893E
20	G	Remote keyless entry receiver (signal)	Input	OFF	Stand-by (keyfob buttons released)	 LIIA1894E
					When remote keyless entry receiver receives signal from keyfob (keyfob buttons pressed)	 LIIA1895E
21	GR	NATS antenna amp.	Input	OFF → ON	Ignition switch (OFF → ON)	Just after turning ignition switch ON: Pointer of tester should move for approx. 1 second, then return to battery voltage.
22	V	BUS	—	—	Ignition switch ON or power window timer operates	 PIIA2344E
23	G	Security indicator lamp	Output	OFF	Goes OFF → illuminates (Every 2.4 seconds)	Battery voltage → 0V
25	BR	NATS antenna amp.	Input	OFF → ON	Ignition switch (OFF → ON)	Just after turning ignition switch ON: Pointer of tester should move for approx. 1 second, then return to battery voltage.
27	W	Compressor ON signal	Input	ON	A/C switch OFF	5V
					A/C switch ON	0V
28	LG	Front blower monitor	Input	ON	Front blower motor OFF	Battery voltage
					Front blower motor ON	0V
29	G	Hazard switch	Input	OFF	ON	0V
					OFF	5V
30 <sup>1</sup>	G	Back door opener switch	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
30 <sup>2</sup>	SB	Back door opener switch	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N



O

P

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >



[WITH INTELLIGENT KEY SYSTEM]

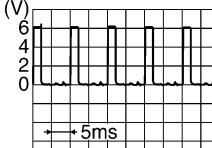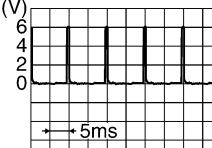Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
32	O	Combination switch output 5	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
33	GR	Combination switch output 4	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
34	G	Combination switch output 3	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
35	BR	Combination switch output 2	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
36	LG	Combination switch output 1				
37 <sup>1</sup>	B	Key switch and key lock solenoid	Input	OFF	Key inserted	Battery voltage
					Key inserted	0V
37 <sup>2</sup>	B	Key switch and ignition knob switch	Input	OFF	Intelligent Key inserted	Battery voltage
					Intelligent Key inserted	0V
38	W/R	Ignition switch (ON)	Input	ON	—	Battery voltage
39	L	CAN-H	—	—	—	—
40	P	CAN-L	—	—	—	—
42	LG	Glass hatch ajar switch	Input	ON	Glass hatch open	0V
					Glass hatch closed	Battery voltage
43	P	Back door latch switch	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage

# BCM (BODY CONTROL MODULE)

[WITH INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS >

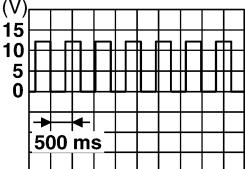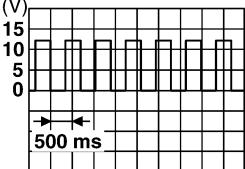Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
44	O	Rear wiper auto stop switch	Input	ON	Rise up position (rear wiper arm on stopper)	0V
					A Position (full clockwise stop position)	Battery voltage
					Forward sweep (counterclockwise direction)	Fluctuating
					B Position (full counterclockwise stop position)	0V
					Reverse sweep (clockwise direction)	Fluctuating
47	GR	Front door switch LH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
48	P	Rear door switch LH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
49	L	Cargo lamp	Output	OFF	Any door open (ON)	0V
					All doors closed (OFF)	Battery voltage
51	O	Trailer turn signal (right)	Output	ON	Turn right ON	 SKIA3009J
52	LG	Trailer turn signal (left)	Output	ON	Turn left ON	 SKIA3009J
53	L	Back door latch actuator	Output	OFF	OFF	0
					ON	Battery voltage
55	W	Rear wiper output circuit 1	Output	ON	OFF	0
					ON	Battery voltage
56	R/Y	Battery saver output	Output	OFF	30 minutes after ignition switch is turned OFF	0V
					ON	—
57	R/Y	Battery power supply	Input	OFF	—	Battery voltage
58	W	Optical sensor	Input	ON	When optical sensor is illuminated	3.1V or more
					When optical sensor is not illuminated	0.6V or less
59	GR	Front door lock assembly LH actuator (unlock)	Output	OFF	OFF (neutral)	0V
					ON (unlock)	Battery voltage

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N



O

P

# BCM (BODY CONTROL MODULE)

[WITH INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS >

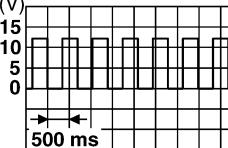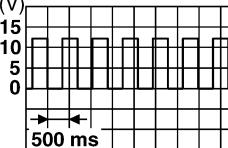Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
60	LG	Turn signal (left)	Output	ON	Turn left ON	 SKIA3009J
61	G	Turn signal (right)	Output	ON	Turn right ON	 SKIA3009J
63	BR	Interior room/map lamp	Output	OFF	Any door switch ON (open) OFF (closed)	0V Battery voltage
65	V	All door lock actuators (lock)	Output	OFF	OFF (neutral) ON (lock)	0V Battery voltage
66	L	Front door lock actuator RH, rear door lock actuators LH/RH and glass hatch lock actuator (unlock)	Output	OFF	OFF (neutral) ON (unlock)	0V Battery voltage
67	B	Ground	Input	ON	—	0V
68	O	Power window power supply (RAP)	Output	—	Ignition switch ON	Battery voltage
					Within 45 seconds after ignition switch OFF	Battery voltage
					More than 45 seconds after ignition switch OFF	0V
					When front door LH or RH is open or power window timer operates	0V
69	L	Power window power supply	Output	—	—	Battery voltage
70	W	Battery power supply	Input	OFF	—	Battery voltage

1: With remote keyless entry system

2: With Intelligent Key system


## **BCM (BODY CONTROL MODULE)**

## < ECU DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## Wiring Diagram - NVIS

INFOID:000000005259006

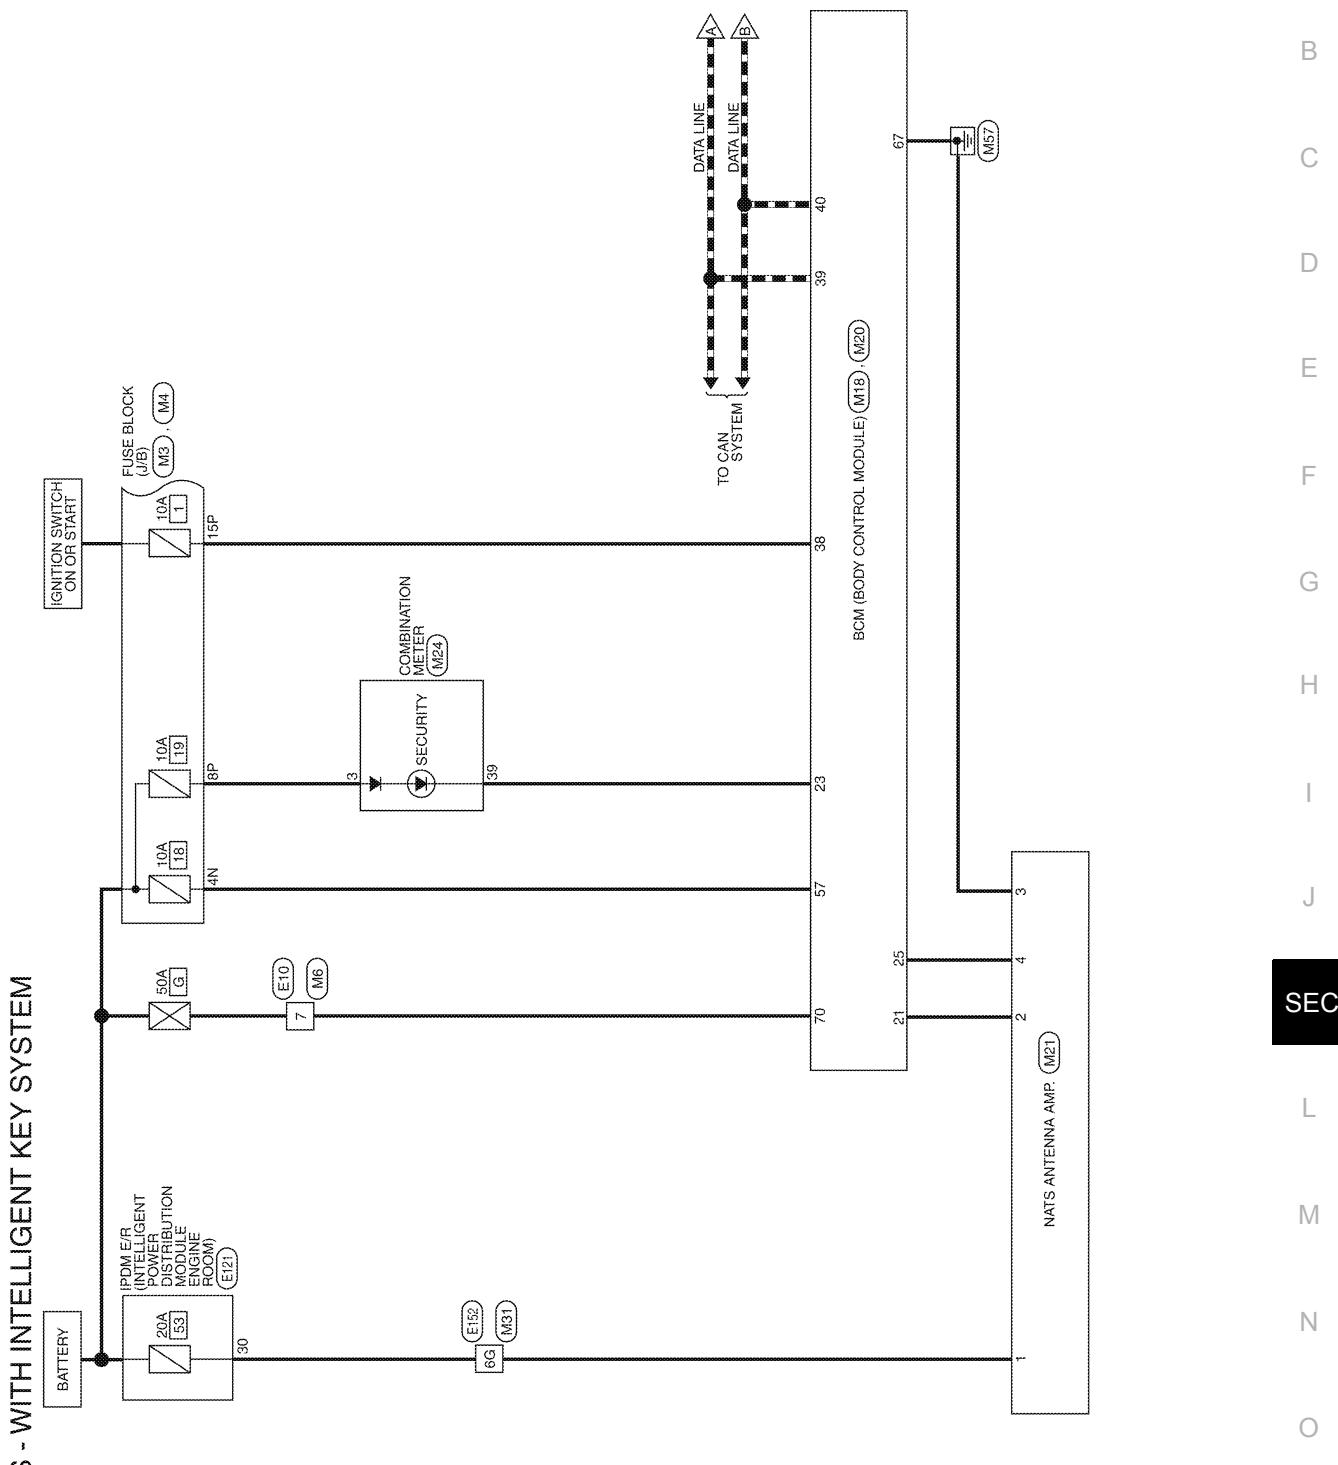


ABKWA0600GB

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

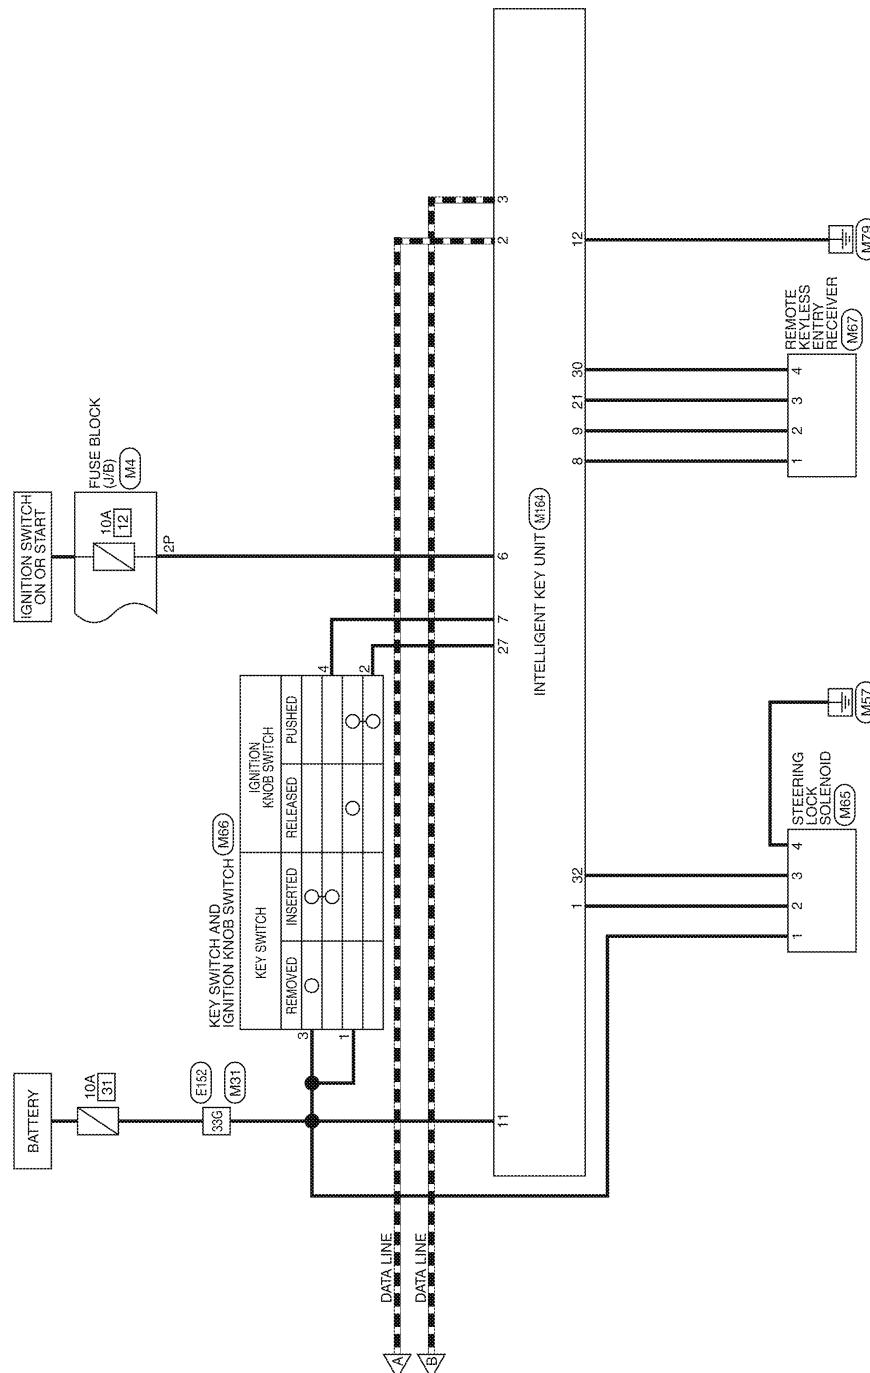

# BCM (BODY CONTROL MODULE)

[WITH INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS >

## NVIS CONNECTORS - WITH INTELLIGENT KEY SYSTEM

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2P	W/G	—
8P	R/Y	—
15P	W/R	—

Terminal No.	Color of Wire	Signal Name
4N	R/Y	—
2P	W/G	—
8P	R/Y	—
15P	W/R	—

Terminal No.	Color of Wire	Signal Name
7	W	—

Terminal No.	Color of Wire	Signal Name
21	GR	IMMOBILIZER ANTENNA SIG (CLOCK)
23	G	SECURITY INDICATOR OUTPUT
25	BR	IMMOBILIZER ANTENNA SIG (TX,RX)
38	W/R	IGN SW
39	L	CAN-H
40	P	CAN-L

Terminal No.	Color of Wire	Signal Name
57	R/Y	BAT (FUSE)
67	B	GND (POWER)
70	W	BAT (F/L)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P  
SEC

ABKIA1759GB

# BCM (BODY CONTROL MODULE)

**< ECU DIAGNOSIS >**

**[WITH INTELLIGENT KEY SYSTEM]**

Connector No.	M21
Connector Name	NATS ANTENNA AMP.
Connector Color	WHITE




20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21

Terminal No.	Color of Wire	Signal Name
1	R/B	VB (12V)
2	GR	CLOCK
3	B	GND
4	BR	RX/TX

5G	4G	3G	2G	1G
10G	9G	8G	7G	6G

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
6G	R/B	-
33G	R/B	-

Connector No.	M65
Connector Name	STEERING LOCK SOLENOID
Connector Color	WHITE



21G	20G	19G	18G	17G	16G	15G	14G	13G	12G	11G
30G	29G	28G	27G	26G	25G	24G	23G	22G		

Terminal No.	Color of Wire	Signal Name
1	R/B	+B
2	O	+5V
3	V	SIG
4	SB	GND

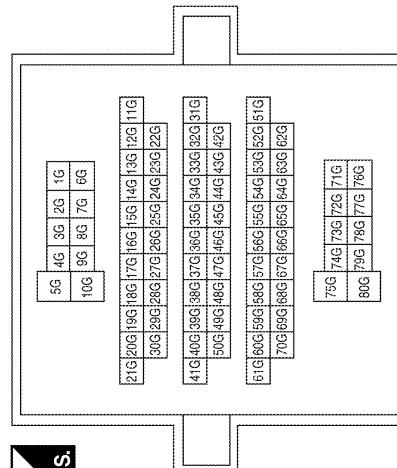


ABKIA1760GB

# BCM (BODY CONTROL MODULE)


[WITH INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS >


Connector No.	M66
Connector Name	KEY SWITCH AND IGNITION
Connector Color	KNOB SWITCH GRAY



Terminal No.	Color of Wire	Signal Name
1	R	-
2	G	-
3	R/B	-
4	SB	-



Connector No.	M164
Connector Name	INTELLIGENT KEY UNIT
Connector Color	WHITE



Connector No.	E10
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
8	O	GND
9	R	SINGAL
11	RB	BAT
12	B	GND
21	BR	RSSI
27	G	PUSH SW INPUT
30	W	5V
32	V	STRG LOCK SIG

Connector No.	M164
Connector Name	INTELLIGENT KEY UNIT
Connector Color	WHITE



Connector No.	E10
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	O	5V OUTPUT
2	L	CAN-H
3	P	CAN-L
6	W/G	IGN SW INPUT
7	SB	KEY SW INPUT




ABKIA1761GB

A B C D E F G H I J K L M N O P SEC

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

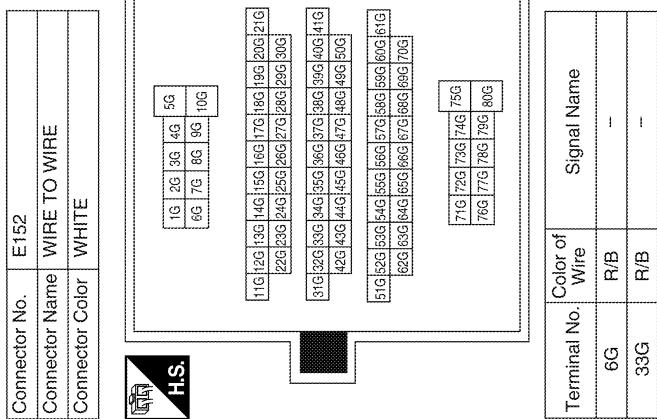

Terminal No.	Color of Wire	Signal Name
30	R/B	ECM_BAT

ABKIA1762GB


# BCM (BODY CONTROL MODULE)

[WITH INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS >

## Wiring Diagram - VEHICLE SECURITY SYSTEM

INFO ID: 0000000005259007

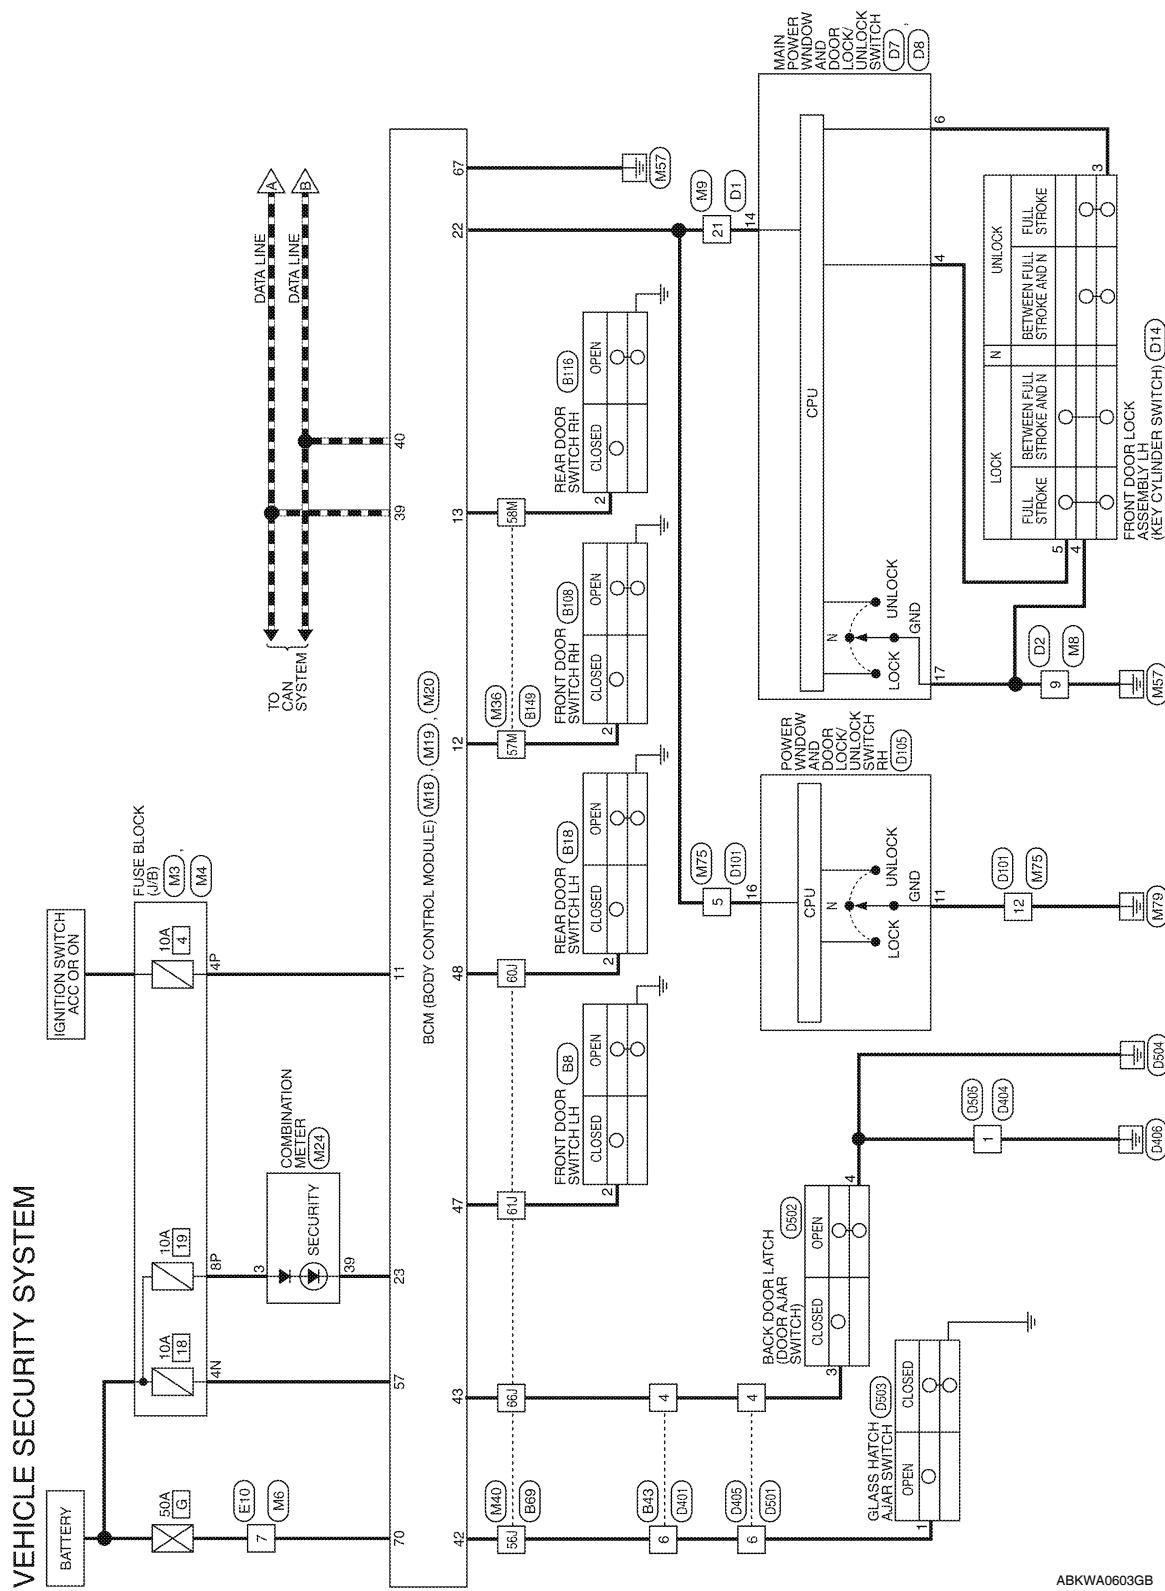


ABKWA0603GB

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

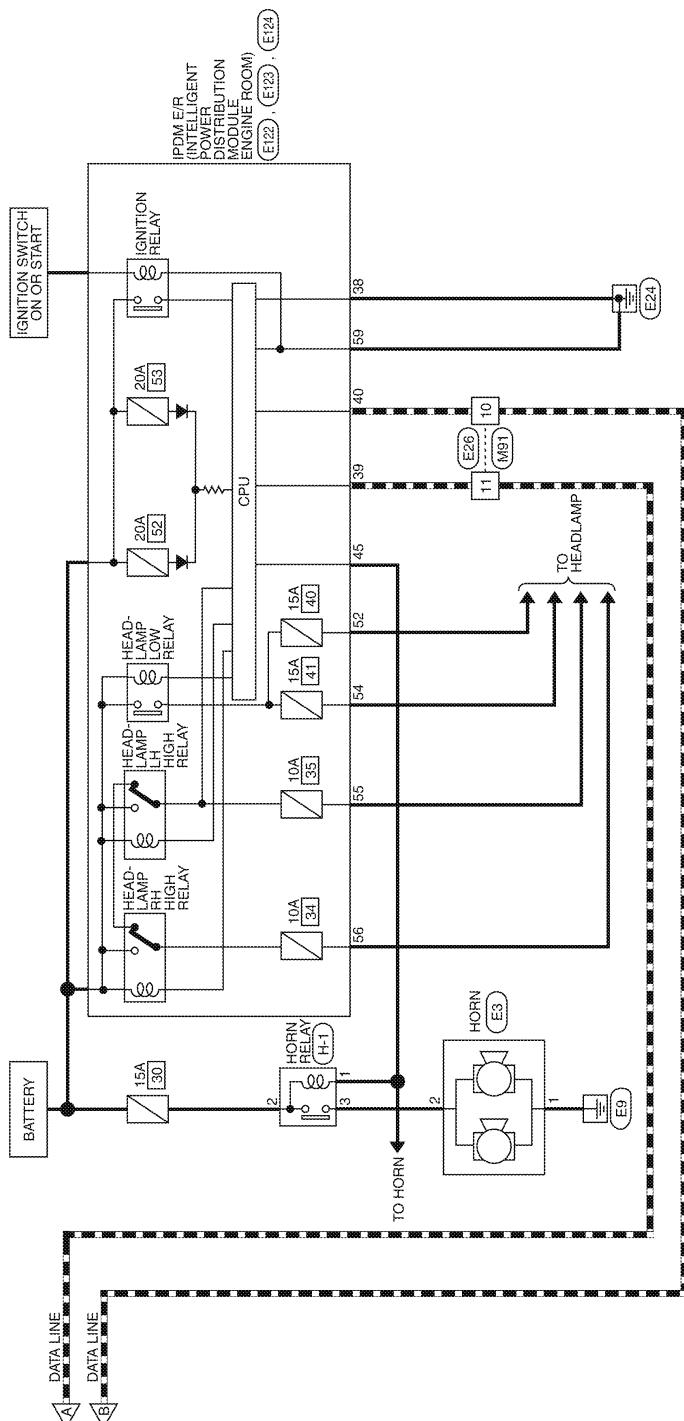

ABKWA0604GB

## **BCM (BODY CONTROL MODULE)**

[WITH INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS >

VEHICLE SECURITY SYSTEM CONNECTORS

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE
Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE
Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE







Terminal No.	Color of Wire	Signal Name
4N	R/Y	—
4P	G/B	—
8P	R/Y	—

Terminal No.	Color of Wire	Signal Name
7	W	—
		—

Connector No.	M8
Connector Name	WIRE TO WIRE
Connector Color	BROWN

Connector No.	M9
Connector Name	WIRE TO WIRE
Connector Color	WHITE

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE


ABKIA1765GB

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]


Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE



20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21



Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK




41	42	43	44	45	46	47	48	49
50	51	52	53	54	55			



Terminal No.	Color of Wire	Signal Name
42	LG	GLASS HATCH SW
43	P	BACK DOOR SW
47	GR	DOOR SW (DR)
48	P	DOOR SW (RL)

Terminal No.	Color of Wire	Signal Name
42	LG	GLASS HATCH SW
43	P	BACK DOOR SW
47	GR	DOOR SW (DR)
48	P	DOOR SW (RL)

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE




5M	4M	3M	2M	1M
10M	9M	8M	7M	6M



Terminal No.	Color of Wire	Signal Name
57M	LG	—
58M	L	—

Connector No.	M36
Connector Name	WIRE TO WIRE
Connector Color	WHITE

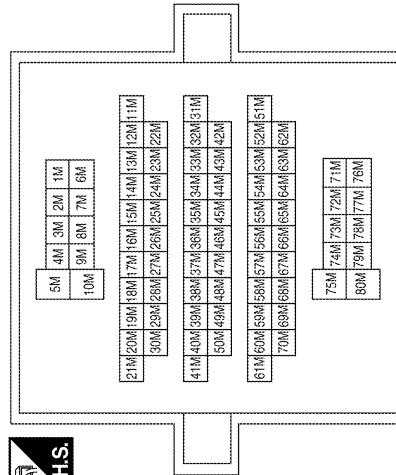


# BCM (BODY CONTROL MODULE)

**< ECU DIAGNOSIS >**

**[WITH INTELLIGENT KEY SYSTEM]**



Connector No.	M75
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
56J	LG	-
60J	P	-
61J	GR	-
66J	P	-




Terminal No.	Color of Wire	Signal Name
5	4	C3
	3	21
	1	14
10J	9L	8L
	7L	6L

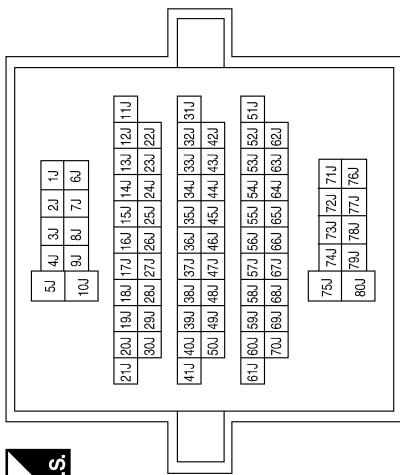

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
5	V	-
12	B	-



Connector No.	E10
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
7	W	-
		-

Connector No.	E3
Connector Name	HORN
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	B	-
2	G	-



A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P  
SEC  
Z  
M  
Z  
P

ABKIA037GB

# BCM (BODY CONTROL MODULE)

**< ECU DIAGNOSIS >**

**[WITH INTELLIGENT KEY SYSTEM]**

Connector No.	E123
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN
	

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					
42	41	40	39	38	37	
48	47	46	45	44	43	

Connector No.	E122
Connector Name	PDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					
42	41	40	39	38	37	
48	47	46	45	44	43	

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					
42	41	40	39	38	37	
48	47	46	45	44	43	

Connector No.	E26
Connector Name	WIRE TO WIRE
Connector Color	WHITE

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					
42	41	40	39	38	37	
48	47	46	45	44	43	

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					
42	41	40	39	38	37	
48	47	46	45	44	43	

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					
42	41	40	39	38	37	
48	47	46	45	44	43	

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					
42	41	40	39	38	37	
48	47	46	45	44	43	

Connector No.	E122
Connector Name	PDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					
42	41	40	39	38	37	
48	47	46	45	44	43	

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					
42	41	40	39	38	37	
48	47	46	45	44	43	

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					
42	41	40	39	38	37	
48	47	46	45	44	43	

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					
42	41	40	39	38	37	
48	47	46	45	44	43	

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					
42	41	40	39	38	37	
48	47	46	45	44	43	

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					
42	41	40	39	38	37	
48	47	46	45	44	43	

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					
42	41	40	39	38	37	
48	47	46	45	44	43	

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK

Connector No.	E124


<tbl\_r cells="


# BCM (BODY CONTROL MODULE)

[WITH INTELLIGENT KEY SYSTEM]


< ECU DIAGNOSIS >

Terminal No.	Color of Wire	Signal Name
56J	LG	-
60J	P	-
61J	GR	-
66J	P	-

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
4	P	-
6	LG	-

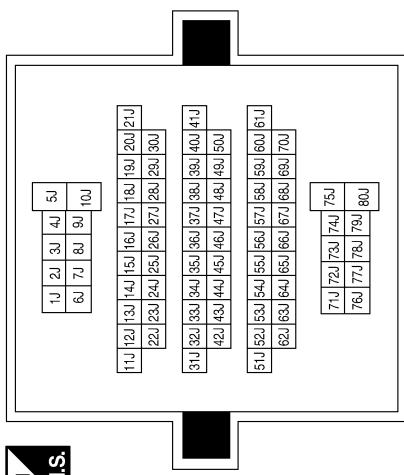

Connector No.	B116
Connector Name	REAR DOOR SWITCH RH
Connector Color	WHITE




Connector No.	B108
Connector Name	FRONT DOOR SWITCH RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	LG	-



Terminal No.	Color of Wire	Signal Name
2	L	-



SEC

P

L

M

Z

O

J

F

G

H

A

B

C

D

E

F

G

H

I

P

R

S

T

U

V

W

X

Y

Z


ABKIA0339GB

# BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]


Connector No.	D2
Connector Name	WIRE TO WIRE
Connector Color	BROWN




Connector No.	D1
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Connector No.	B149
Connector Name	WIRE TO WIRE
Connector Color	WHITE

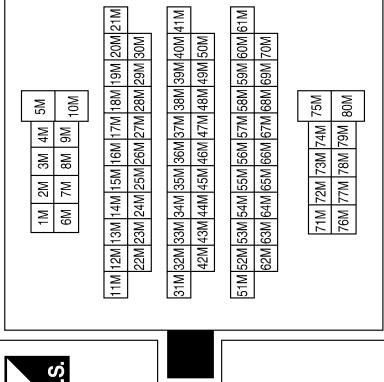


Terminal No.	Color of Wire	Signal Name
21	V	-




Terminal No.	Color of Wire	Signal Name
9	B	-




Connector No.	D8
Connector Name	MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH
Connector Color	WHITE



Connector No.	D7
Connector Name	MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
17	B	GND



Terminal No.	Color of Wire	Signal Name
3	R/W	-
4	B	-
5	SB	-



Terminal No.	Color of Wire	Signal Name
4	SB	KEY CYL LOCK SW
6	R/W	KEY CYL UNLOCK SW
14	V	POWER WINDOW SERIAL LINK


ABKIA0340GB

# BCM (BODY CONTROL MODULE)

[WITH INTELLIGENT KEY SYSTEM]


< ECU DIAGNOSIS >

Connector No.	D401
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
4	P	—
6	LG	—

Connector No.	D105
Connector Name	POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
11	B	GND
16	V	POWER WINDOW SERIAL LINK

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
5	V	—
12	B	—


Terminal No.	Color of Wire	Signal Name
4	P	—
6	LG	—



Terminal No.	Color of Wire	Signal Name
4	P	—
6	LG	—



Terminal No.	Color of Wire	Signal Name
4	P	—
6	LG	—



A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P  
SEC  
Z  
M  
P

ABKIA1770GB

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

Connector No.	D505
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	LG	—
—	—	—

Connector No.	D503
Connector Name	GLASS HATCH AJAR SWITCH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	LG	—
—	—	—

Connector No.	D502
Connector Name	BACK DOOR LATCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	P	—
4	BR	—

Connector No.	H-1
Connector Name	FUSE AND FUSIBLE LINK BOX (HORN RELAY)
Connector Color	—

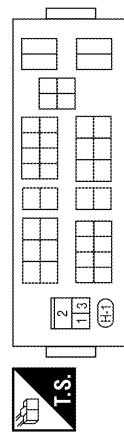

Terminal No.	Color of Wire	Signal Name
1	BR	—
2	O	—
3	G	—

ABKIA1771GB

INFOID:0000000005484812

## Fail Safe

### Fail-safe index

BCM performs fail-safe control when any DTC listed below is detected.

# BCM (BODY CONTROL MODULE)

[WITH INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS >

Display contents of CONSULT	Fail-safe	Cancellation
U1000: CAN COMM CIRCUIT	Inhibit engine cranking	When the BCM re-establishes communication with the other modules.

## DTC Inspection Priority Chart

INFOID:000000005484813

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	<ul style="list-style-type: none"><li>• U1000: CAN COMM CIRCUIT</li></ul>
2	<ul style="list-style-type: none"><li>• B2190: NATS ANTENNA AMP</li><li>• B2191: DIFFERENCE OF KEY</li><li>• B2192: ID DISCORD BCM-ECM</li><li>• B2193: CHAIN OF BCM-ECM</li><li>• B2013: STRG COMM 1</li><li>• B2552: INTELLIGENT KEY</li><li>• B2590: NATS MALFUNCTION</li></ul>
3	<ul style="list-style-type: none"><li>• C1729: VHCL SPEED SIG ERR</li><li>• C1735: IGNITION SIGNAL</li></ul>
4	<ul style="list-style-type: none"><li>• C1704: LOW PRESSURE FL</li><li>• C1705: LOW PRESSURE FR</li><li>• C1706: LOW PRESSURE RR</li><li>• C1707: LOW PRESSURE RL</li><li>• C1708: [NO DATA] FL</li><li>• C1709: [NO DATA] FR</li><li>• C1710: [NO DATA] RR</li><li>• C1711: [NO DATA] RL</li><li>• C1712: [CHECKSUM ERR] FL</li><li>• C1713: [CHECKSUM ERR] FR</li><li>• C1714: [CHECKSUM ERR] RR</li><li>• C1715: [CHECKSUM ERR] RL</li><li>• C1716: [PRESSDATA ERR] FL</li><li>• C1717: [PRESSDATA ERR] FR</li><li>• C1718: [PRESSDATA ERR] RR</li><li>• C1719: [PRESSDATA ERR] RL</li><li>• C1720: [CODE ERR] FL</li><li>• C1721: [CODE ERR] FR</li><li>• C1722: [CODE ERR] RR</li><li>• C1723: [CODE ERR] RL</li><li>• C1724: [BATT VOLT LOW] FL</li><li>• C1725: [BATT VOLT LOW] FR</li><li>• C1726: [BATT VOLT LOW] RR</li><li>• C1727: [BATT VOLT LOW] RL</li></ul>

## DTC Index

INFOID:000000005484814

### NOTE:

- Details of time display
- CRNT: Displays when there is a malfunction now or after returning to the normal condition until turning ignition switch OFF → ON again.
  - 1 - 39: Displayed if any previous malfunction is present when current condition is normal. It increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The counter remains at 39 even if the number of cycles exceeds it. It is counted from 1 again when turning ignition switch OFF → ON after returning to the normal condition if the malfunction is detected again.

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

CONSULT display	Fail-safe	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
No DTC is detected. further testing may be required.	—	—	—	—
U1000: CAN COMM CIRCUIT	—	—	—	<a href="#">BCS-33</a>
B2013: STRG COMM 1	—	—	—	<a href="#">SEC-29</a>
B2190: NATS ANTENNA AMP	—	—	—	<a href="#">SEC-32</a> (with I-Key), <a href="#">SEC-136</a> (without I-Key)
B2191: DIFFERENCE OF KEY	—	—	—	<a href="#">SEC-35</a> (with I-Key), <a href="#">SEC-139</a> (without I-Key)
B2192: ID DISCORD BCM-ECM	—	—	—	<a href="#">SEC-36</a> (with I-Key), <a href="#">SEC-140</a> (without I-Key)
B2193: CHAIN OF BCM-ECM	—	—	—	<a href="#">SEC-38</a> (with I-Key), <a href="#">SEC-142</a> (without I-Key)
B2552: INTELLIGENT KEY	—	—	—	<a href="#">SEC-40</a>
B2590: NATS MALFUNCTION	—	—	—	<a href="#">SEC-41</a>
C1708: [NO DATA] FL	—	—	—	<a href="#">WT-14</a>
C1709: [NO DATA] FR	—	—	—	<a href="#">WT-14</a>
C1710: [NO DATA] RR	—	—	—	<a href="#">WT-14</a>
C1711: [NO DATA] RL	—	—	—	<a href="#">WT-14</a>
C1712: [CHECKSUM ERR] FL	—	—	—	<a href="#">WT-16</a>
C1713: [CHECKSUM ERR] FR	—	—	—	<a href="#">WT-16</a>
C1714: [CHECKSUM ERR] RR	—	—	—	<a href="#">WT-16</a>
C1715: [CHECKSUM ERR] RL	—	—	—	<a href="#">WT-16</a>
C1716: [PRESSDATA ERR] FL	—	—	—	<a href="#">WT-18</a>
C1717: [PRESSDATA ERR] FR	—	—	—	<a href="#">WT-18</a>
C1718: [PRESSDATA ERR] RR	—	—	—	<a href="#">WT-18</a>
C1719: [PRESSDATA ERR] RL	—	—	—	<a href="#">WT-18</a>
C1720: [CODE ERR] FL	—	—	—	<a href="#">WT-16</a>
C1721: [CODE ERR] FR	—	—	—	<a href="#">WT-16</a>
C1722: [CODE ERR] RR	—	—	—	<a href="#">WT-16</a>
C1723: [CODE ERR] RL	—	—	—	<a href="#">WT-16</a>
C1724: [BATT VOLT LOW] FL	—	—	—	<a href="#">WT-16</a>
C1725: [BATT VOLT LOW] FR	—	—	—	<a href="#">WT-16</a>
C1726: [BATT VOLT LOW] RR	—	—	—	<a href="#">WT-16</a>
C1727: [BATT VOLT LOW] RL	—	—	—	<a href="#">WT-16</a>
C1729: VHCL SPEED SIG ERR	—	—	—	<a href="#">WT-19</a>
C1735: IGNITION SWITCH	—	—	—	—

# INTELLIGENT KEY UNIT

[WITH INTELLIGENT KEY SYSTEM]


< ECU DIAGNOSIS >

## INTELLIGENT KEY UNIT

### Reference Value - Intelligent Key Unit

INFOID:0000000005484806

#### TERMINAL LAYOUT

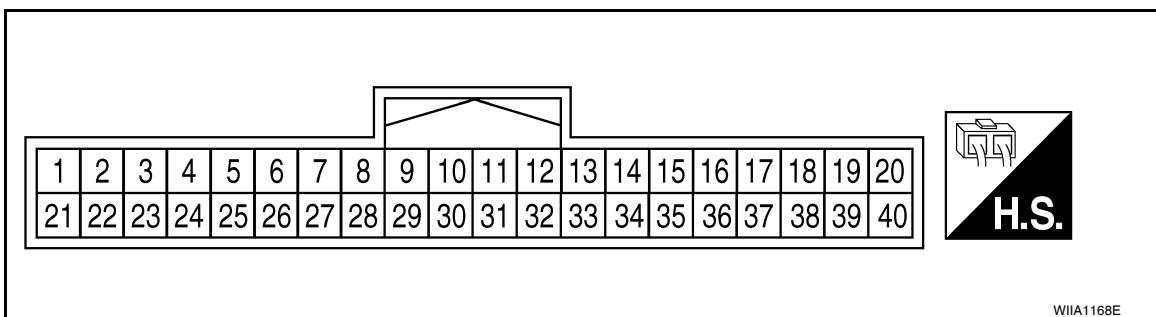






#### PHYSICAL VALUES

Terminal	Wire Color	Item	Condition		Voltage (V) Approx.
			Ignition Switch Position	Operation or Conditions	
1	O	Steering lock solenoid power supply	LOCK	—	5
2	L	CAN-H	—	—	—
3	P	CAN-L	—	—	—
4	GR	Intelligent Key warning buzzer (front of vehicle)	LOCK	Operate door request switch.	Battery voltage
				Buzzer ON	0
5	LG	Front door request switch LH	—	Press front door request switch LH.	0
				Other than above	Battery voltage
6	W/G	Ignition switch (ON)	ON	—	Battery voltage
7	SB	Key switch	LOCK	Insert mechanical key into ignition key cylinder.	Battery voltage
				Remove mechanical key from ignition key cylinder.	0
8	O	Remote keyless entry receiver ground	—	—	0
9	R	Remote keyless entry receiver signal	—	When remote keyless entry receiver receives signal from keyfob.  Stand-by	(V) 6 4 2 0 — 0.2s  (V) 6 4 2 0 — 0.2s
11	R/B	Power source (Fuse)	—	—	Battery voltage
12	B	Ground	—	—	0

# INTELLIGENT KEY UNIT

[WITH INTELLIGENT KEY SYSTEM]




< ECU DIAGNOSIS >

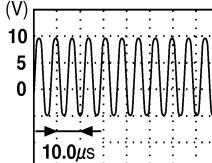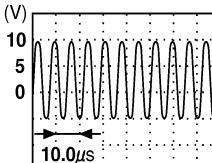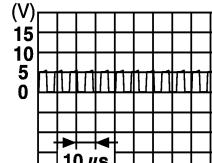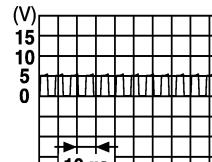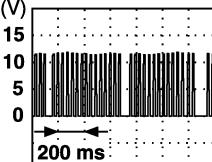Terminal	Wire Color	Item	Condition		Voltage (V) Approx.
			Ignition Switch Position	Operation or Conditions	
13	W	Luggage area antenna (+) signal	LOCK	Press ignition knob switch: ON (Ignition knob switch)	 PIIB7441E
14	BR	Luggage area antenna (-) signal			
15	V	Instrument panel area antenna (+) signal	LOCK	Any door open → all doors closed	 PIIB7441E
16	LG	Instrument panel area antenna (-) signal			
17	R	Rear bumper antenna (+) signal	LOCK	Press back door request switch.	 SIIA1910J
18	L	Rear bumper antenna (-) signal			
19	Y	Front outside antenna LH (+) signal	LOCK	Press front door request switch LH.	 SIIA1910J
20	W	Front outside antenna LH (-) signal			
21	BR	Remote keyless entry receiver RSSI signal	—	—	 PIIA2344E
23	SB	Back door control unit signal	—	Back door release switch ON.	0
				Back door release switch OFF.	Battery voltage
24	W	Back door opener switch input	—	Back door opener switch ON.	0
				Back door opener switch OFF.	5
25	R	Front door request switch RH	—	Press front door request switch RH.	0
				Other than above	Battery voltage
27	G	Ignition knob switch	—	Press ignition switch.	Battery voltage
				Return ignition switch to LOCK position.	0
28	P	Unlock sensor (driver side)	—	Door (driver side) is locked.	5
				Door (driver side) is unlocked.	0

# INTELLIGENT KEY UNIT

< ECU DIAGNOSIS >


[WITH INTELLIGENT KEY SYSTEM]

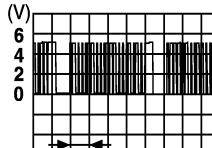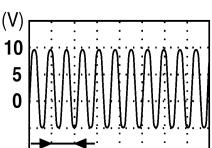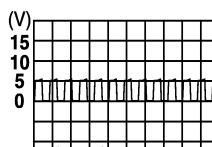Terminal	Wire Color	Item	Condition		Voltage (V) Approx.
			Ignition Switch Position	Operation or Conditions	
29	GR	Back door request switch	—	Back door request switch ON.	0
				Back door request switch OFF.	5
30	W	Remote keyless entry receiver power supply	—	—	
32	V	Steering lock solenoid communication signal	LOCK	When Intelligent Key is inside vehicle, press ignition knob switch.	(V) 6 4 2 0  SIIA1911J
				Other than above	5
33	G	Center console area antenna (+) signal	LOCK		
34	R	Center console area antenna (-) signal		Any door open → all doors closed	(V) 10 5 0  PIIB7441E
37	P	Front outside antenna (+) signal RH	LOCK		
38	V	Front outside antenna (-) signal RH		Press front door request switch RH.	(V) 15 10 5 0  SIIA1910J
39	SB	P range switch	—	Selector lever is in "P" position.	0
				Other than above	Battery voltage
40	R	AS select unlock output	—	UNLOCK with rear door locks disabled.	0
				Other than above	Battery voltage

## Reference Value - Steering Lock Solenoid

INFOID:000000005484807

## TERMINAL LAYOUT

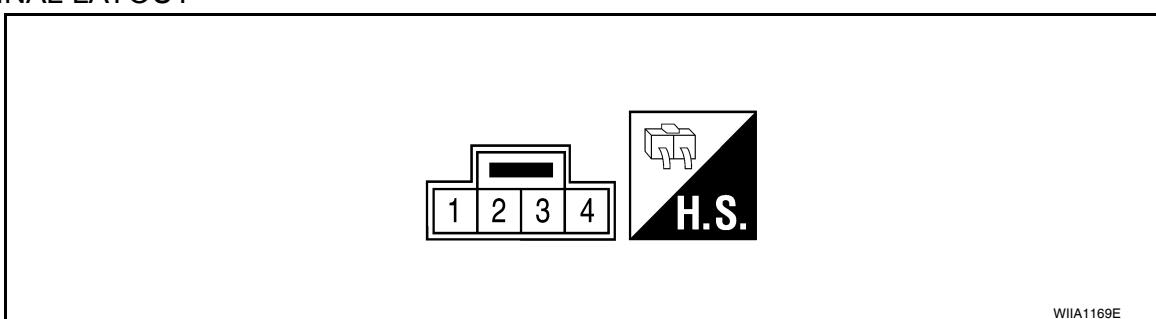


## PHYSICAL VALUES

# INTELLIGENT KEY UNIT

[WITH INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS >

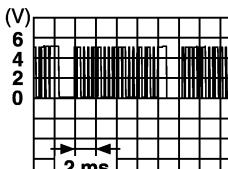Terminal	Wire Color	Signal Designation	Condition		Voltage (V) Approx.
			Ignition Switch Position	Operation or Conditions	
1	R/B	Power source (fuse)	LOCK	—	Battery voltage
2	O	Steering lock solenoid power supply	LOCK	—	5
3	V	Steering lock solenoid communication signal	LOCK	When Intelligent Key is inside vehicle, press ignition knob switch.	(V)  SIIA1911J
				Other than the above	5
4	SB	Steering lock solenoid ground	—	—	0

# INTELLIGENT KEY UNIT


< ECU DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## Wiring Diagram - INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION -

INFOID:000000005259013


### INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

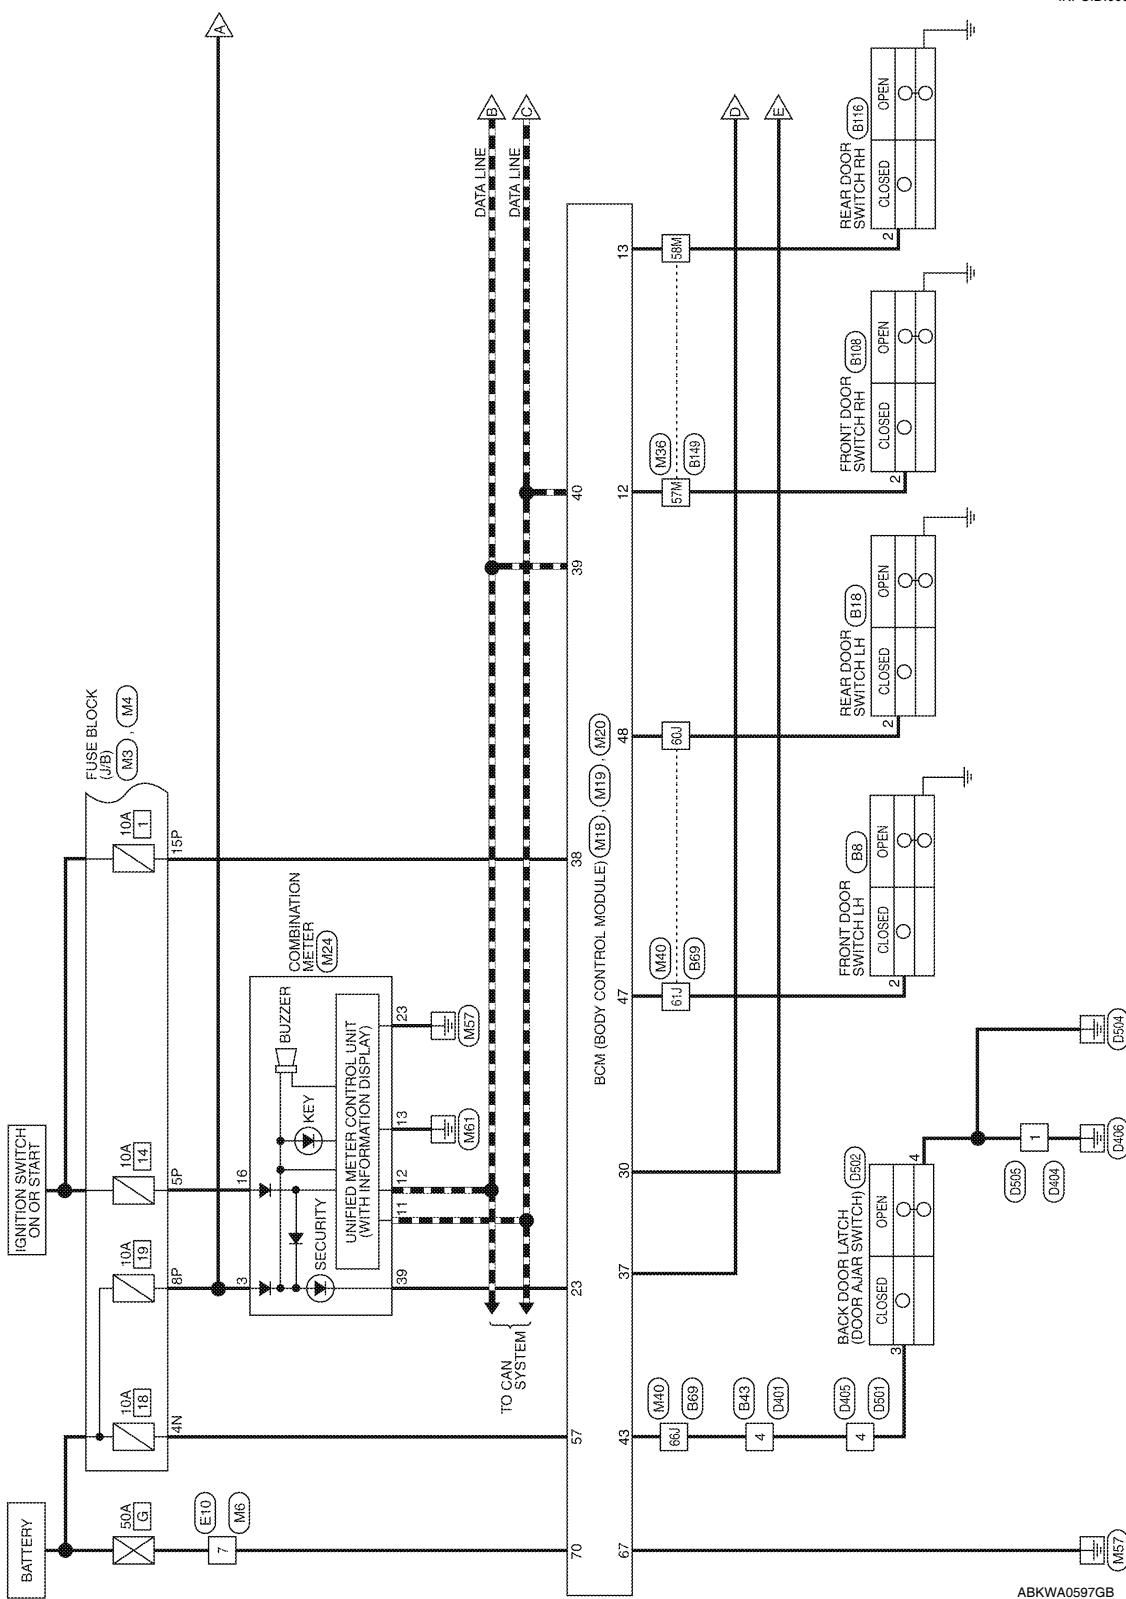

# INTELLIGENT KEY UNIT

< ECU DIAGNOSIS >


[WITH INTELLIGENT KEY SYSTEM]

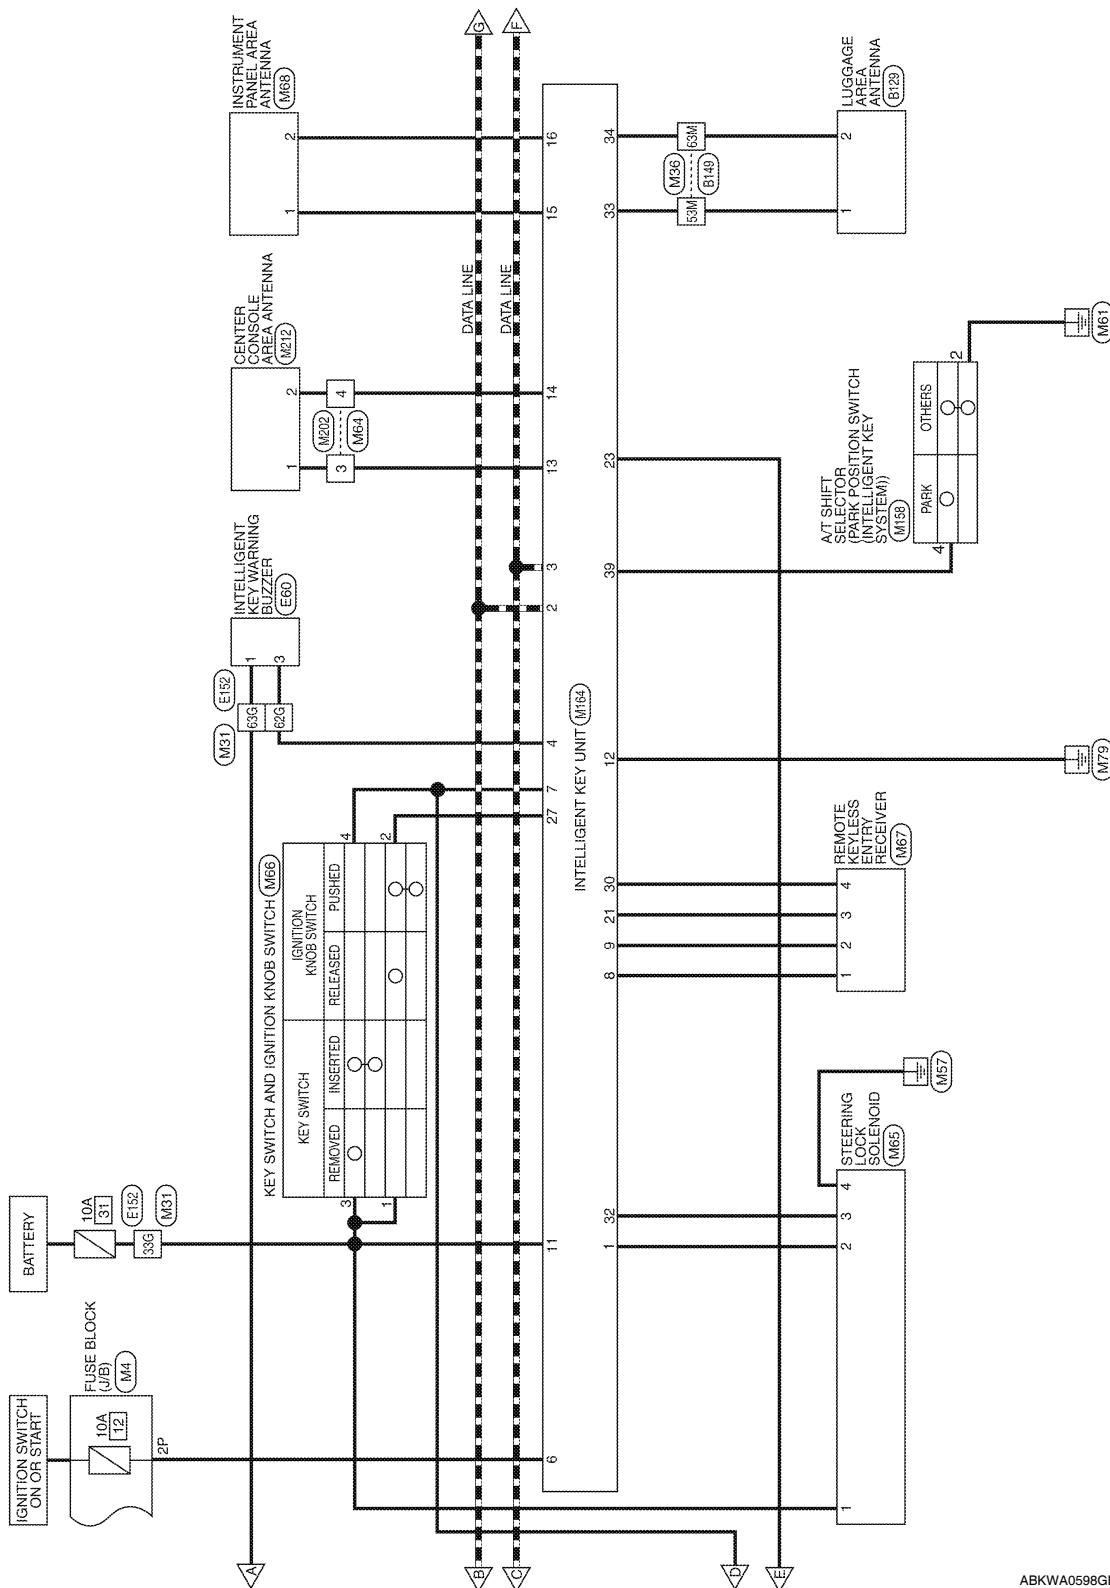

# INTELLIGENT KEY UNIT

< ECU DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

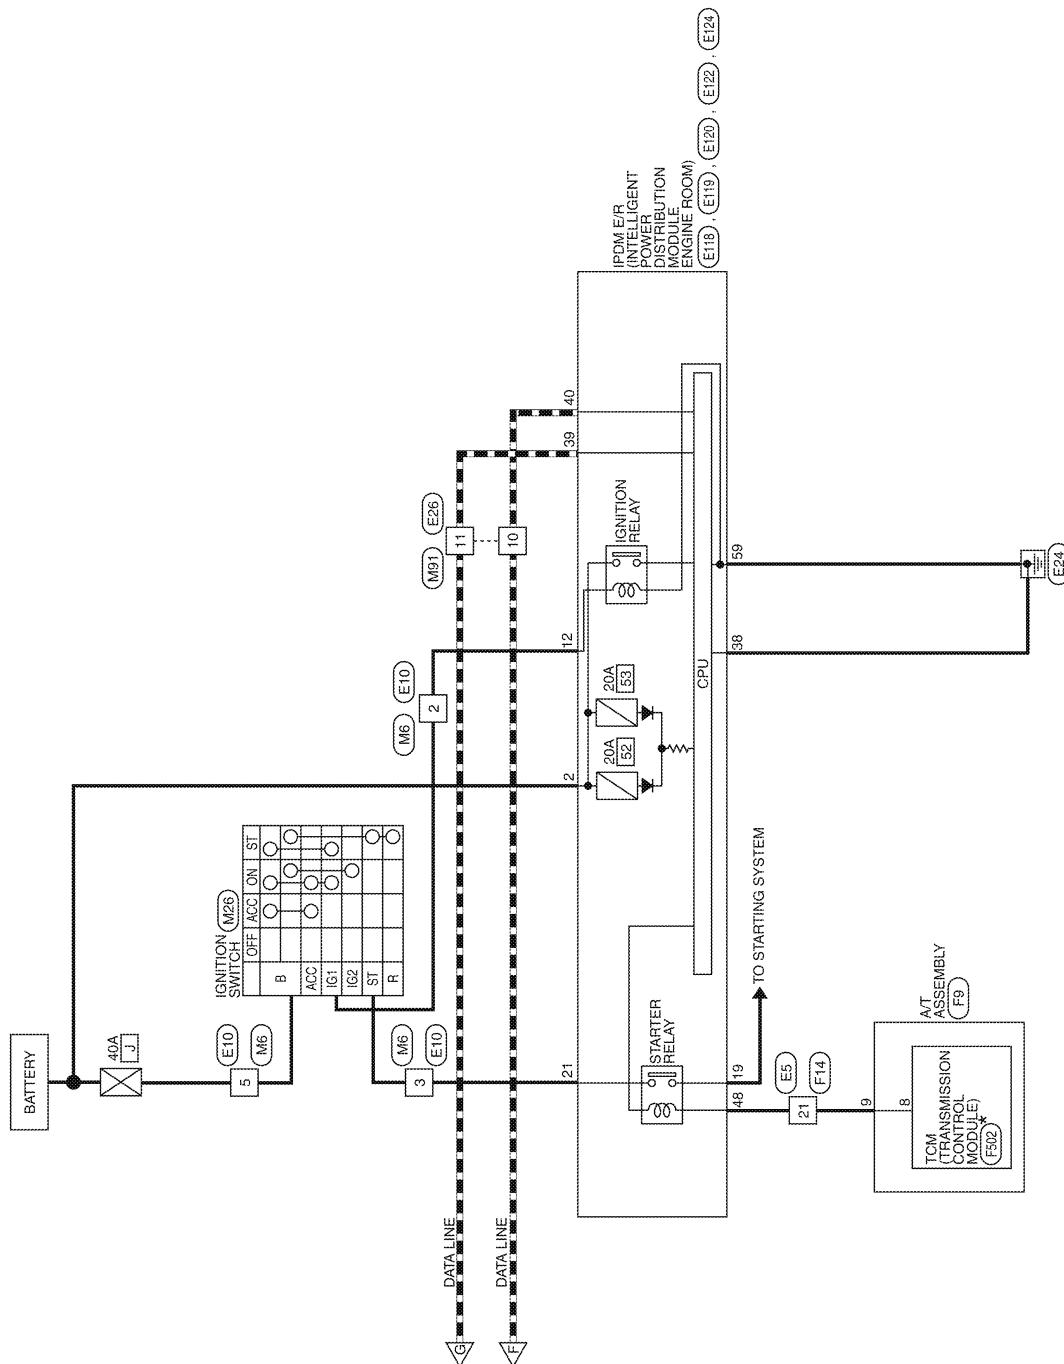

\* : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

ABKWA0599GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC


# INTELLIGENT KEY UNIT

**< ECU DIAGNOSIS >**



**[WITH INTELLIGENT KEY SYSTEM]**

## INTELLIGENT KEY SYSTEM / ENGINE START FUNCTION CONNECTORS

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE


Terminal No.	Color of Wire	Signal Name
4N	R/Y	—

Terminal No.	Color of Wire	Signal Name
2P	W/G	—
5P	W/G	—
8P	R/Y	—
15P	W/R	—

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
12	LG	DOOR SW (AS)
13	L	DOOR SW (RR)
23	G	SECURITY INDICATOR OUTPUT
30	SB	BACK DOOR AUTO CLOSURE
37	B	KEY SW
38	W/R	IGN SW
39	L	CAN-H
40	P	CAN-L




ABKIA1749GB

# INTELLIGENT KEY UNIT

**< ECU DIAGNOSIS >**

**[WITH INTELLIGENT KEY SYSTEM]**


Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE



Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
3	R/Y	BATTERY
11	P	CAN-L
12	L	CAN-H
13	GR	GROUND
16	W/G	RUN START
23	B	POWER GND
39	G	SECURITY



Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	56	4G	3G	2G	1G
	10G	9G	8G	7G	6G

Terminal No.	33G	R/B	Signal Name
	62G	GR	—
	63G	R/B	—

Connector No.	M26
Connector Name	IGNITION SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
B	G	—
ST	GR	—
IG1	W/G	—

Terminal No.	Color of Wire	Signal Name
21G	1G6	1G6
30G	2G6	2G6
41G	3G6	3G6
50G	4G6	4G6
61G	5G6	5G6
70G	6G6	6G6
75G	7G6	7G6
80G	8G6	8G6

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P  
SEC


ABKIA1750GB

# INTELLIGENT KEY UNIT


< ECU DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

Connector No.	M36	Terminal No.	Color of Wire	Signal Name
Connector Name	WIRE TO WIRE			
Connector Color	WHITE			
				
		53M	G	-
		57M	LG	-
		58M	L	-
		63M	R	-

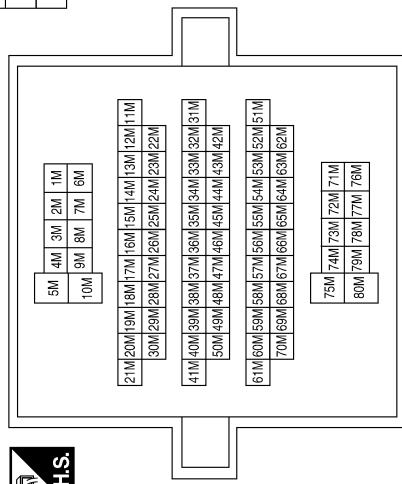


Connector No.	M40	Terminal No.	Color of Wire	Signal Name
Connector Name	WIRE TO WIRE			
Connector Color	WHITE			
				
		60J	P	-
		61J	GR	-
		66J	P	-

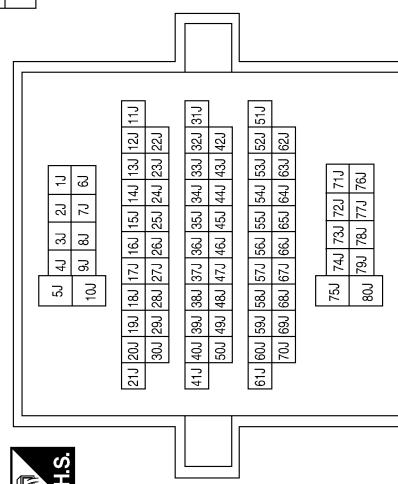

Connector No.	M64	Terminal No.	Color of Wire	Signal Name
Connector Name	WIRE TO WIRE			
Connector Color	WHITE			
				
		2	1	-
		6	5	-
		5	4	-
		1	3	-

Connector No.	M64	Terminal No.	Color of Wire	Signal Name
Connector Name	WIRE TO WIRE			
Connector Color	WHITE			
				
		60J	P	-
		61J	GR	-
		66J	P	-

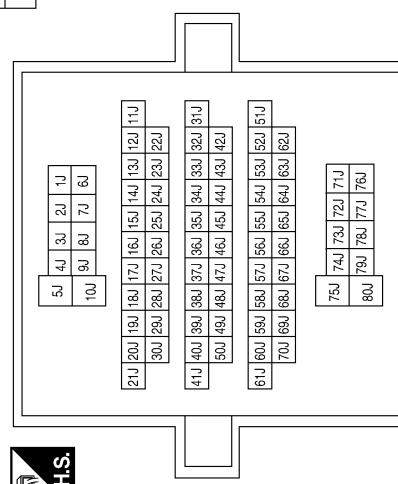

ABKIA0351GB

# INTELLIGENT KEY UNIT

**< ECU DIAGNOSIS >**


**[WITH INTELLIGENT KEY SYSTEM]**

Connector No.	M66
Connector Name	STEERING LOCK SOLENOID
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	R/B	+B
2	O	+5V
3	V	SIG
4	SB	GND

Connector No.	M67
Connector Name	REMOTE KEYLESS ENTRY RECEIVER
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	O	-
2	R	-
3	BR	-
4	W	-

Connector No.	M691
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Connector No.	M158
Connector Name	AIT SHIFT SELECTOR (WITH MANUAL MODE SWITCH AND INTELLIGENT KEY SYSTEM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	B	-
4	SB	-

Connector No.	M68
Connector Name	INSTRUMENT PANEL AREA ANTENNA
Connector Color	GRAY



Connector No.	M68
Connector Name	INSTRUMENT PANEL AREA ANTENNA
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
10	P	-
11	L	-

SEC

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P  
Q  
R  
S  
T  
U  
V  
W  
X  
Y  
Z

ABKIA1751GB


# INTELLIGENT KEY UNIT

**< ECU DIAGNOSIS >**


**[WITH INTELLIGENT KEY SYSTEM]**

Terminal No.	Color of Wire	Signal Name
32	V	STRG_LOCK_SIG
33	G	3RD_ROW_ANTI(+)
34	R	3RD_ROW_ANTI(-)
39	SB	P_RANGE_SW

Terminal No.	Color of Wire	Signal Name
7	SB	KEY_SW_INPUT
8	O	GND
9	R	SIGNAL
11	RB	BAT
12	B	GND
13	W	ANT_2(+)
14	BR	ANT_2(-)
15	V	ANT_1(+)
16	LG	ANT_1(-)
21	BR	RSSI
23	SB	BACKDOOR_AUTO_CLOSURE
27	G	PUSH_SW_INPUT
30	W	5V


Connector No.	M164	
Connector Name	INTELLIGENT KEY UNIT	
Connector Color	WHITE	
		
	1	2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40
	1	O
	2	L
	3	P
	4	GR
	6	W/G
		IGN_SW_INPUT

Terminal No.	Color of Wire	Signal Name
32	V	STRG_LOCK_SIG
33	G	3RD_ROW_ANTI(+)
34	R	3RD_ROW_ANTI(-)
39	SB	P_RANGE_SW

Connector No.	M212	
Connector Name	CENTER CONSOLE AREA ANTENNA	
Connector Color	GRAY	
		
	1	2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24
	1	5V OUTPUT
	2	CAN-H
	3	CAN-L
	4	BUZZER_DR_OUTPUT
	6	IGN_SW_INPUT

Connector No.	M202	
Connector Name	WIRE TO WIRE	
Connector Color	WHITE	
		
	1	2
	3	4 5 6

Terminal No.	Color of Wire	Signal Name
21	R	-
2	BR	-

Connector No.	E5	
Connector Name	WIRE TO WIRE	
Connector Color	WHITE	
		
	1	2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24
	1	5V
	2	IGN_SW

Terminal No.	Color of Wire	Signal Name
3	W	-
4	BR	-

ABKIA1752GB

# INTELLIGENT KEY UNIT


< ECU DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

Connector No.	E60
Connector Name	INTELLIGENT KEY
Connector Color	WARNING BUZZER BROWN




Connector No.	E26
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
10	P	-
11	L	-

Terminal No.	Color of Wire	Signal Name
2	W/G	-
3	GR	-
5	G	-
7	W	-

Connector No.	E10
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
9	8	6
18	17	16
15	14	13
12	11	10

Terminal No.	Color of Wire	Signal Name
1	R/B	-
3	GR	-



Terminal No.	Color of Wire	Signal Name
10	P	-
11	L	-
12	W/G	IGN_SW_(IG)



Terminal No.	Color of Wire	Signal Name
19	W	START_MTR
21	GR	IGN_SW_(ST)

SEC

P

L

M

Z

O

J

T

G

I

M

A

B

C

D

E

F

H

K

N

P

R

S

U

V

W

X

Y

Z

ABKIA1753GB

# INTELLIGENT KEY UNIT

< ECU DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
59	B	GND (POWER)
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L
48	R	INHIBIT SW



Terminal No.	Color of Wire	Signal Name
12	10	9
11	8	7
20	19	18
21	17	16
22	15	14
23	13	12
24	11	10
5	4	3
4	2	1
10	9	8
9	8	7
8	7	6




Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



16	20	33	4G	5G
66	7G	8G	9G	10G
23	24G	25G	26G	27G
2G	3G	34G	35G	36G
4G	43G	44G	45G	46G
5G	53G	54G	55G	56G
6G	63G	64G	65G	66G
8G	83G	84G	85G	86G
9G	93G	94G	95G	96G
10G	103G	104G	105G	106G


1G	2G	3G	4G	5G	6G	7G	8G	9G	10G
2G	3G	34G	35G	36G	37G	38G	39G	40G	41G
4G	43G	44G	45G	46G	47G	48G	49G	50G	
5G	53G	54G	55G	56G	57G	58G	59G	60G	
6G	63G	64G	65G	66G	67G	68G	69G	70G	
8G	83G	84G	85G	86G	87G	88G	89G	90G	
9G	93G	94G	95G	96G	97G	98G	99G	100G	
10G	103G	104G	105G	106G	107G	108G	109G	110G	

Terminal No.	Color of Wire	Signal Name
33G	R/B	---
62G	GR	---
63G	R/B	---



Terminal No.	Color of Wire	Signal Name
8	G	START-RLY

Connector No.	F14
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
21	R	---

Terminal No.	Color of Wire	Signal Name
9	R	---


ABKIA1754GB

# INTELLIGENT KEY UNIT

< ECU DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

Connector No.	B43
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	P	—

Terminal No.	Color of Wire	Signal Name
2	GR	—

Connector No.	B18
Connector Name	FRONT DOOR SWITCH LH
Connector Color	WHITE



Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
4	P	—


Terminal No.	Color of Wire	Signal Name
60J	P	—
61J	GR	—
66J	P	—

Connector No.	B108
Connector Name	FRONT DOOR SWITCH RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	LG	—

Terminal No.	Color of Wire	Signal Name
1J	2J	3J
6J	7J	8J
3J	4J	5J

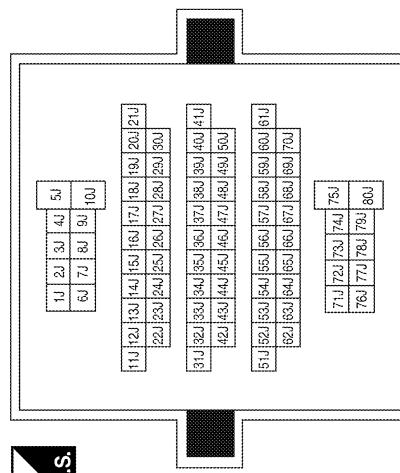

ABKIA1755GB

A

B

C

D

E

F

G

H

I

SEC

J

M

Z

O

P

# INTELLIGENT KEY UNIT


< ECU DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

Connector No.	B116
Connector Name	REAR DOOR SWITCH RH
Connector Color	WHITE




Connector No.	B116
Connector Name	REAR DOOR SWITCH RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	L	-

Terminal No.	Color of Wire	Signal Name
1	G	-
2	R	-


Connector No.	D401
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
53M	G	-
57M	LG	-
58M	L	-
63M	R	-

Connector No.	P
Connector Name	-

Connector No.	B149
Connector Name	WIRE TO WIRE
Connector Color	WHITE




1M	12M	13M	14M	15M	16M	17M	18M	19M	20M	21M
2M	12M	13M	14M	15M	16M	17M	18M	19M	20M	21M
3M	12M	13M	14M	15M	16M	17M	18M	19M	20M	21M
4M	12M	13M	14M	15M	16M	17M	18M	19M	20M	21M
5M	12M	13M	14M	15M	16M	17M	18M	19M	20M	21M
6M	12M	13M	14M	15M	16M	17M	18M	19M	20M	21M
7M	12M	13M	14M	15M	16M	17M	18M	19M	20M	21M
8M	12M	13M	14M	15M	16M	17M	18M	19M	20M	21M
9M	12M	13M	14M	15M	16M	17M	18M	19M	20M	21M
10M	12M	13M	14M	15M	16M	17M	18M	19M	20M	21M

# INTELLIGENT KEY UNIT

< ECU DIAGNOSIS >


[WITH INTELLIGENT KEY SYSTEM]

Connector No.	D501
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
4	P	—

Connector No.	D405
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
4	P	—

Connector No.	D404
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	B	—

Connector No.	D505
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B	—

Connector No.	D502
Connector Name	BACK DOOR LATCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	P	—
4	BR	—

SEC

P

ABKIA1757GB

INFOID:0000000005484808

## Fail Safe

### Fail-safe operation

The Intelligent Key system operation will be interrupted if the Intelligent Key unit loses power or communication with the BCM.

# INTELLIGENT KEY UNIT

[WITH INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS >

## DTC Inspection Priority Chart

INFOID:000000005259015

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	<ul style="list-style-type: none"><li>• U1000: CAN COMM CIRCUIT</li><li>• U1010: CONTROL UNIT (CAN)</li><li>• B2552: INTELLIGENT KEY</li></ul>
2	<ul style="list-style-type: none"><li>• B2013: STRG COMM 1</li><li>• B2590: NATS MALFUNCTION</li></ul>

## DTC Index

INFOID:000000005259016

### NOTE:

Details of time display

- CRNT: Displays when there is a malfunction now or after returning to the normal condition until turning ignition switch OFF → ON again.
- 1 - 39: Displayed if any previous malfunction is present when current condition is normal. It increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The counter remains at 39 even if the number of cycles exceeds it. It is counted from 1 again when turning ignition switch OFF → ON after returning to the normal condition if the malfunction is detected again.

CONSULT display	Detection condition	Fail-safe	Diagnosis
No DTC is detected. further testing may be required.	—	—	—
U1000: CAN COMM CIRCUIT	Intelligent Key unit cannot receive CAN communication signal continuously for 2 seconds or more.	—	Check CAN communication system. Refer to <a href="#">SEC-27</a> .
U1010: CONTROL UNIT (CAN)	Intelligent Key unit detects internal CAN communication circuit malfunction.	—	Replace Intelligent Key unit. Refer to <a href="#">SEC-118</a> .
B2013: STRG COMM 1	The ID verification result between Intelligent key unit and steering lock solenoid are NG. Or Intelligent Key unit cannot communicate with steering lock solenoid.	×	Perform steering lock unit ID registration with CONSULT-III
B2552: INTELLIGENT KEY	Intelligent Key unit internal malfunction.	×	Replace Intelligent Key unit. Refer to <a href="#">SEC-118</a> .
B2590: NATS MALFUNCTION	The ID verification result between Intelligent key unit and BCM are NG. Or Intelligent Key unit cannot communicate with BCM.	×	Check NATS Refer to <a href="#">SEC-41</a> .

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

### Reference Value

INFOID:000000005484815

### VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition	Value/Status
MOTOR FAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc. 0 - 100 %
AC COMP REQ	A/C switch OFF	OFF
	A/C switch ON	ON
TAIL&CLR REQ	Lighting switch OFF	OFF
	Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated)	ON
HL LO REQ	Lighting switch OFF	OFF
	Lighting switch 2ND HI or AUTO (Light is illuminated)	ON
HL HI REQ	Lighting switch OFF	OFF
	Lighting switch HI	ON
FR FOG REQ	Lighting switch 2ND or AUTO (Light is illuminated)	Front fog lamp switch OFF OFF
		• Front fog lamp switch ON • Daytime light activated (Canada only) ON
FR WIP REQ	Ignition switch ON	Front wiper switch OFF STOP
		Front wiper switch INT 1LOW
		Front wiper switch LO LOW
		Front wiper switch HI HI
WIP AUTO STOP	Ignition switch ON	Front wiper stop position STOP P
		Any position other than front wiper stop position ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally OFF
		Front wiper stops at fail-safe operation BLOCK
ST RLY REQ	Ignition switch OFF or ACC	OFF
		ON
IGN RLY	Ignition switch START	OFF
		ON
RR DEF REQ	Rear defogger switch OFF	OFF
		ON
OIL P SW	Ignition switch OFF, ACC or engine running	Open
		Close
DTRL REQ	Daytime light system requested OFF with CONSULT-III.	OFF
		ON
THFT HRN REQ	Not operated	OFF
	• Panic alarm is activated • Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM	ON


**IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)**  
**< ECU DIAGNOSIS >** [WITH INTELLIGENT KEY SYSTEM]

Monitor Item	Condition	Value/Status
HORN CHIRP	Not operated	OFF
	Door locking with keyfob or Intelligent Key (if equipped) (horn chirp mode)	ON

## Terminal Layout

INFOID:000000005484816

### TERMINAL LAYOUT — TYPE A

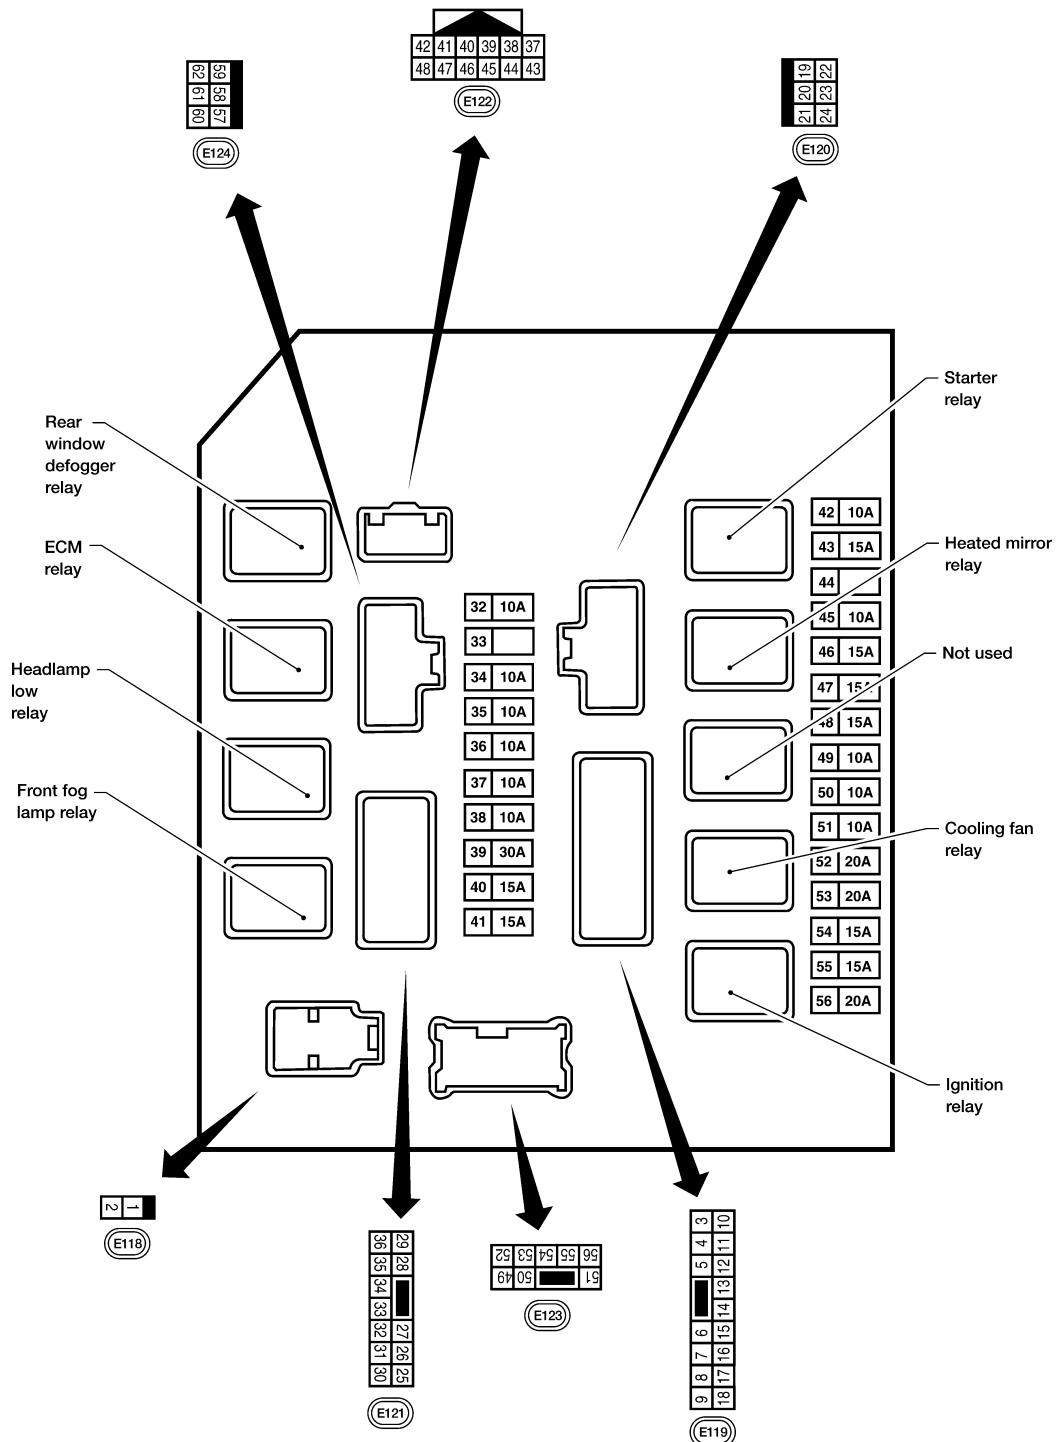


WKIA5852E

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

TERMINAL LAYOUT — TYPE B

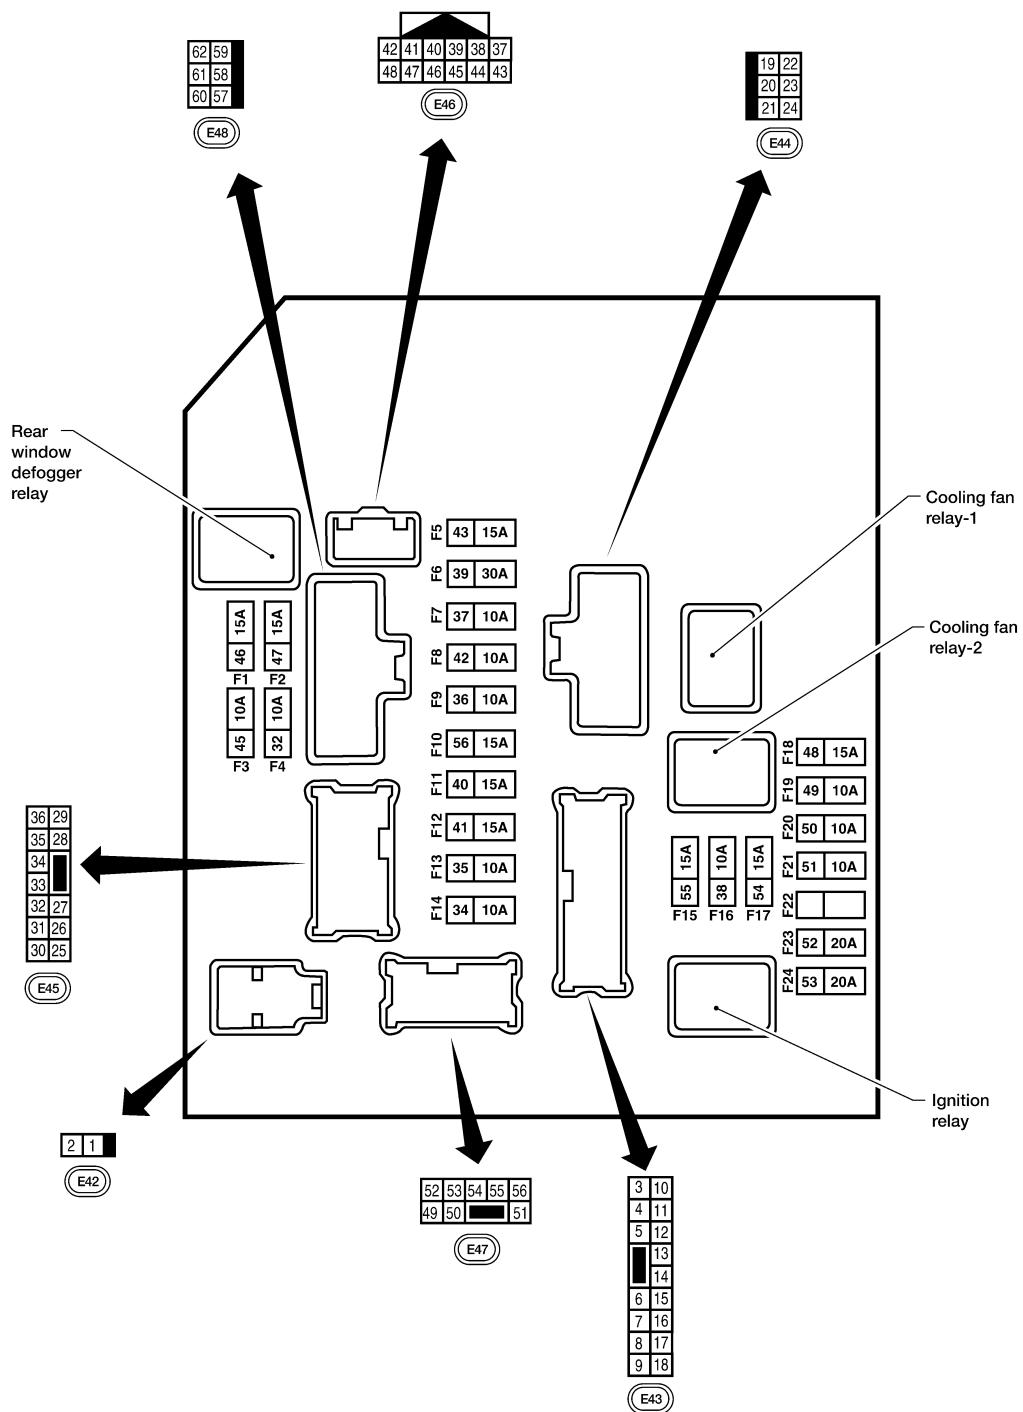

## NOTE:

Numbers preceded by an "F" represent the fuse numbers imprinted on the IPDM E/R. The other numbers represent the fuse numbers as they appear in the wiring diagrams.

AAMIA0364GB

## Physical Values




INFOID:0000000005484817

## PHYSICAL VALUES

**IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)**  
**<ECU DIAGNOSIS>** [WITH INTELLIGENT KEY SYSTEM]

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)
				Ignition switch	Operation or condition	
1	W	Battery power supply	Input	OFF	—	Battery voltage
2	R	Battery power supply	Input	OFF	—	Battery voltage
3	G	ECM relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
4	P	ECM relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
6	V	Throttle control motor relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
7	BR	ECM relay control	Input	—	Ignition switch ON or START	0V
					Ignition switch OFF or ACC	Battery voltage
8	W/R	Fuse 54	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
10	R/B	Fuse 45	Output	ON	Daytime light system active	0V
					Daytime light system inactive	Battery voltage
11	Y	A/C compressor	Output	ON or START	A/C switch ON or defrost A/C switch	Battery voltage
					A/C switch OFF or defrost A/C switch	0V
12	W/G	Ignition switch supplied power	Input	—	OFF or ACC	0V
					ON or START	Battery voltage
13	R	Fuel pump relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
14	W/G	Fuse 49	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
15	W/R	Fuse 50 (ABS)	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
16	W/G	Fuse 51	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
17	W/G	Fuse 55	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
19	W	Starter motor	Output	START	—	Battery voltage
20	BR	Cooling fan motor (low)	Output	ON or START	—	Battery voltage
21	GR	Ignition switch supplied power	Input	—	OFF or ACC	0V
					START	Battery voltage
22	G	Battery power supply	Output	OFF	—	Battery voltage
23	LG	Door mirror defogger output signal	Output	—	When rear defogger switch is ON	Battery voltage
					When raker defogger switch is OFF	0V

**IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)**  
**< ECU DIAGNOSIS >** [WITH INTELLIGENT KEY SYSTEM]

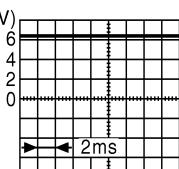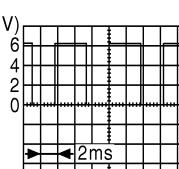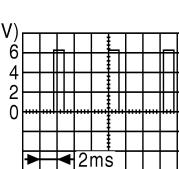Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)
				Ignition switch	Operation or condition	
24	P	Cooling fan motor (high)	Output	—	Conditions correct for cooling fan operation	Battery voltage
					Conditions not correct for cooling fan operation	0V
27	W	Fuse 38	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
28	R	LH front parking and front side marker lamp	Output	OFF	Lighting switch 1st position	OFF 0V
					ON	Battery voltage
29	G	Trailer tow relay	Output	ON	Lighting switch 1st position	OFF 0V
					ON	Battery voltage
30	R/B	Fuse 53	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
32	GR	Wiper low speed signal	Output	ON or START	Wiper switch	OFF Battery voltage
					LO or INT	0V
35	L	Wiper high speed signal	Output	ON or START	Wiper switch	OFF, LO, INT Battery voltage
					HI	0V
37	Y	Power generation command signal	Output	—	Ignition switch ON	(V)  6.3 V JPMIA0001GB
					40% is set on "Active test," "ALTERNATOR DUTY" of "ENGINE"	(V)  3.8 V JPMIA0002GB
					40% is set on "Active test," "ALTERNATOR DUTY" of "ENGINE"	(V)  1.4 V JPMIA0003GB
38	B	Ground	Input	—	—	0V
39	L	CAN-H	—	ON	—	—
40	P	CAN-L	—	ON	—	—
42	GR	Oil pressure switch	Input	—	Engine running	Battery voltage
					Engine stopped	0V

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P  
SEC

**IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)**  
**<ECU DIAGNOSIS>** **[WITH INTELLIGENT KEY SYSTEM]**

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)
				Ignition switch	Operation or condition	
43	G	Wiper auto stop signal	Input	ON or START	Wiper switch OFF, LO, INT	Battery voltage
44	R	Daytime light relay control	Input	ON	Daytime light system active	0V
					Daytime light system inactive	Battery voltage
45	LG	Horn relay control	Input	ON	When door locks are operated using keyfob or Intelligent Key (if equipped) (OFF → ON)*	Battery voltage → 0V
46	V	Fuel pump relay control	Input	—	Ignition switch ON or START	0V
					Ignition switch OFF or ACC	Battery voltage
47	O	Throttle control motor relay control	Input	—	Ignition switch ON or START	0V
					Ignition switch OFF or ACC	Battery voltage
48	R	Starter relay (inhibit switch)	Input	ON or START	Selector lever in "P" or "N"	0V
					Selector lever any other position	Battery voltage
49	GR	Front RH parking and front side marker lamp	Output	OFF	Lighting switch 1st position	0V
					ON	Battery voltage
50	W	Front fog lamp (LH)	Output	ON or START	Lighting switch must be in the 2nd position (LOW beam is ON) and the front fog lamp switch	0V
					ON	Battery voltage
51	V	Front fog lamp (RH)	Output	ON or START	Lighting switch must be in the 2nd position (LOW beam is ON) and the front fog lamp switch	0V
					ON	Battery voltage
52	P	LH low beam head-lamp	Output	—	Lighting switch in 2nd position	Battery voltage
54	R	RH low beam head-lamp	Output	—	Lighting switch in 2nd position	Battery voltage
55	G	LH high beam head-lamp	Output	—	Lighting switch in 2nd position and placed in HIGH or PASS position	Battery voltage
56	L	RH high beam head-lamp	Output	—	Lighting switch in 2nd position and placed in HIGH or PASS position	Battery voltage
57	GR	Parking, license, and tail lamp	Output	ON	Lighting switch 1st position	0V
					ON	Battery voltage
59	B	Ground	Input	—	—	0V
60	GR	Rear window defogger relay	Output	ON or START	Rear defogger switch ON	Battery voltage
					Rear defogger switch OFF	0V
61	R/B	Fuse 32	Output	OFF	—	Battery voltage

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)


< ECU DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

\*: When horn reminder is ON

## Wiring Diagram

INFOID:000000005484880

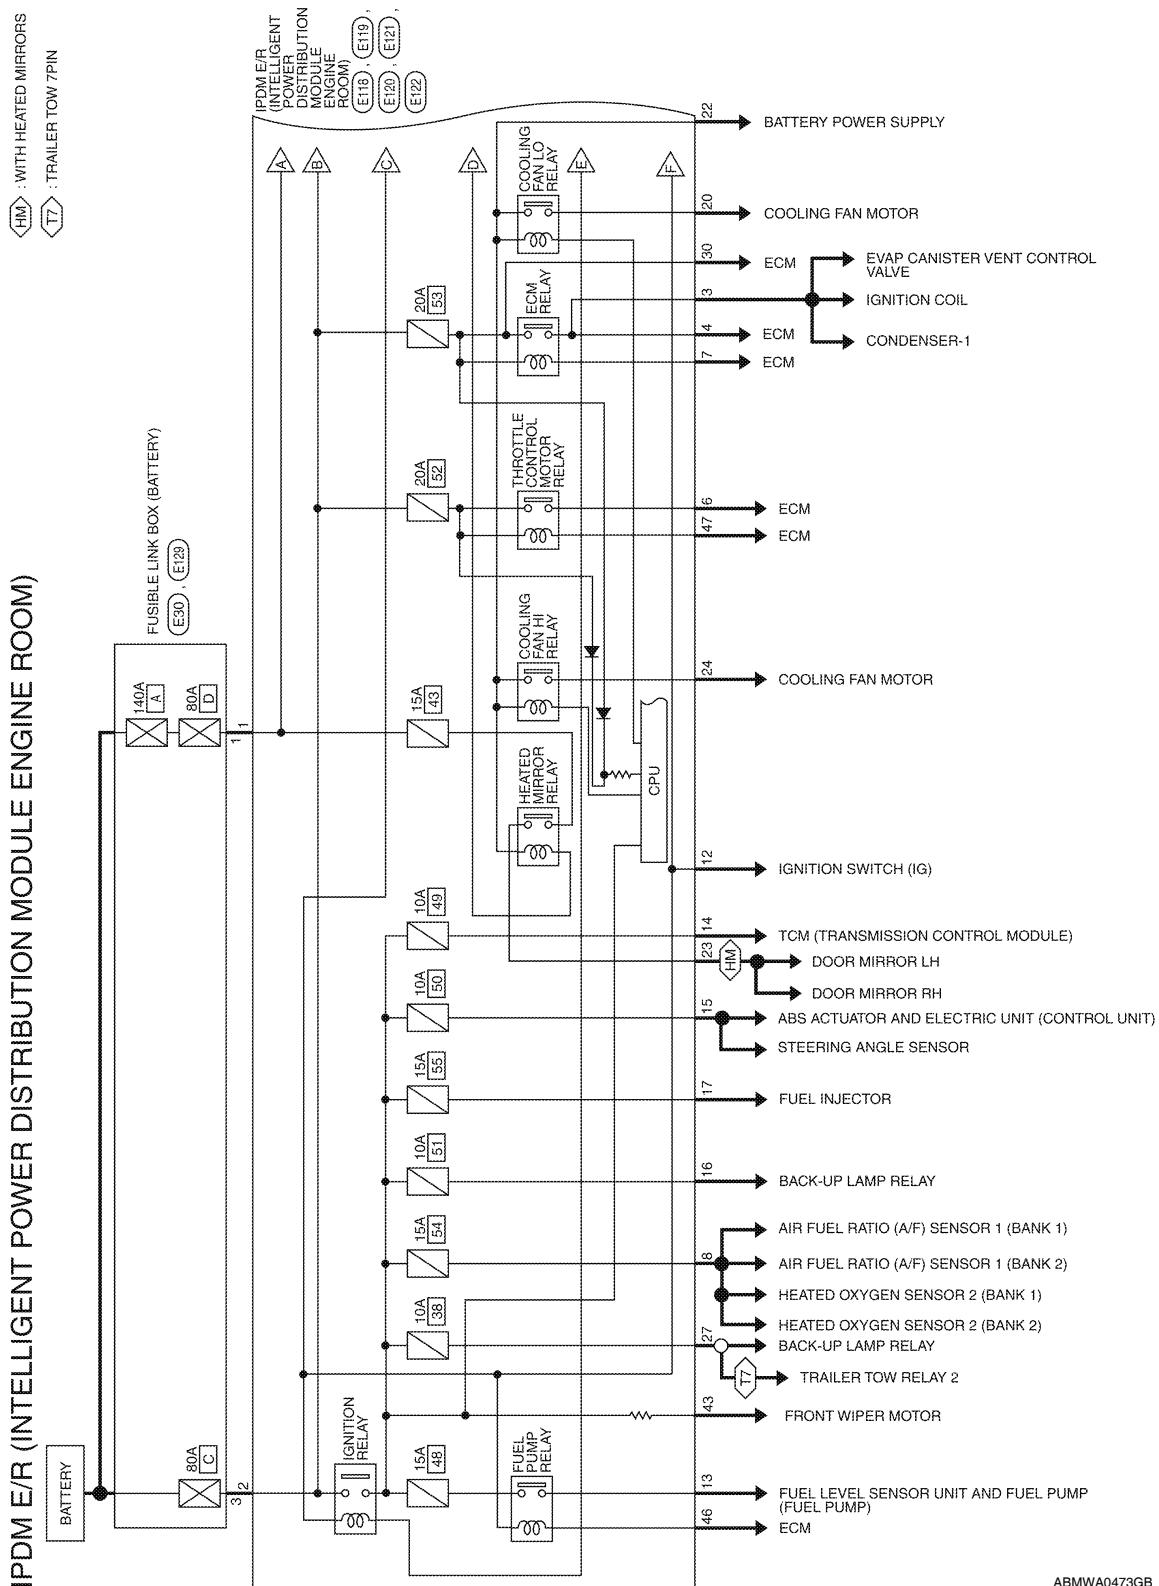

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P  
SEC

SEC


L  
M  
N  
O  
P

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

(FL) : WITH FRONT FOG LAMPS  
(N) : FOR CANADA

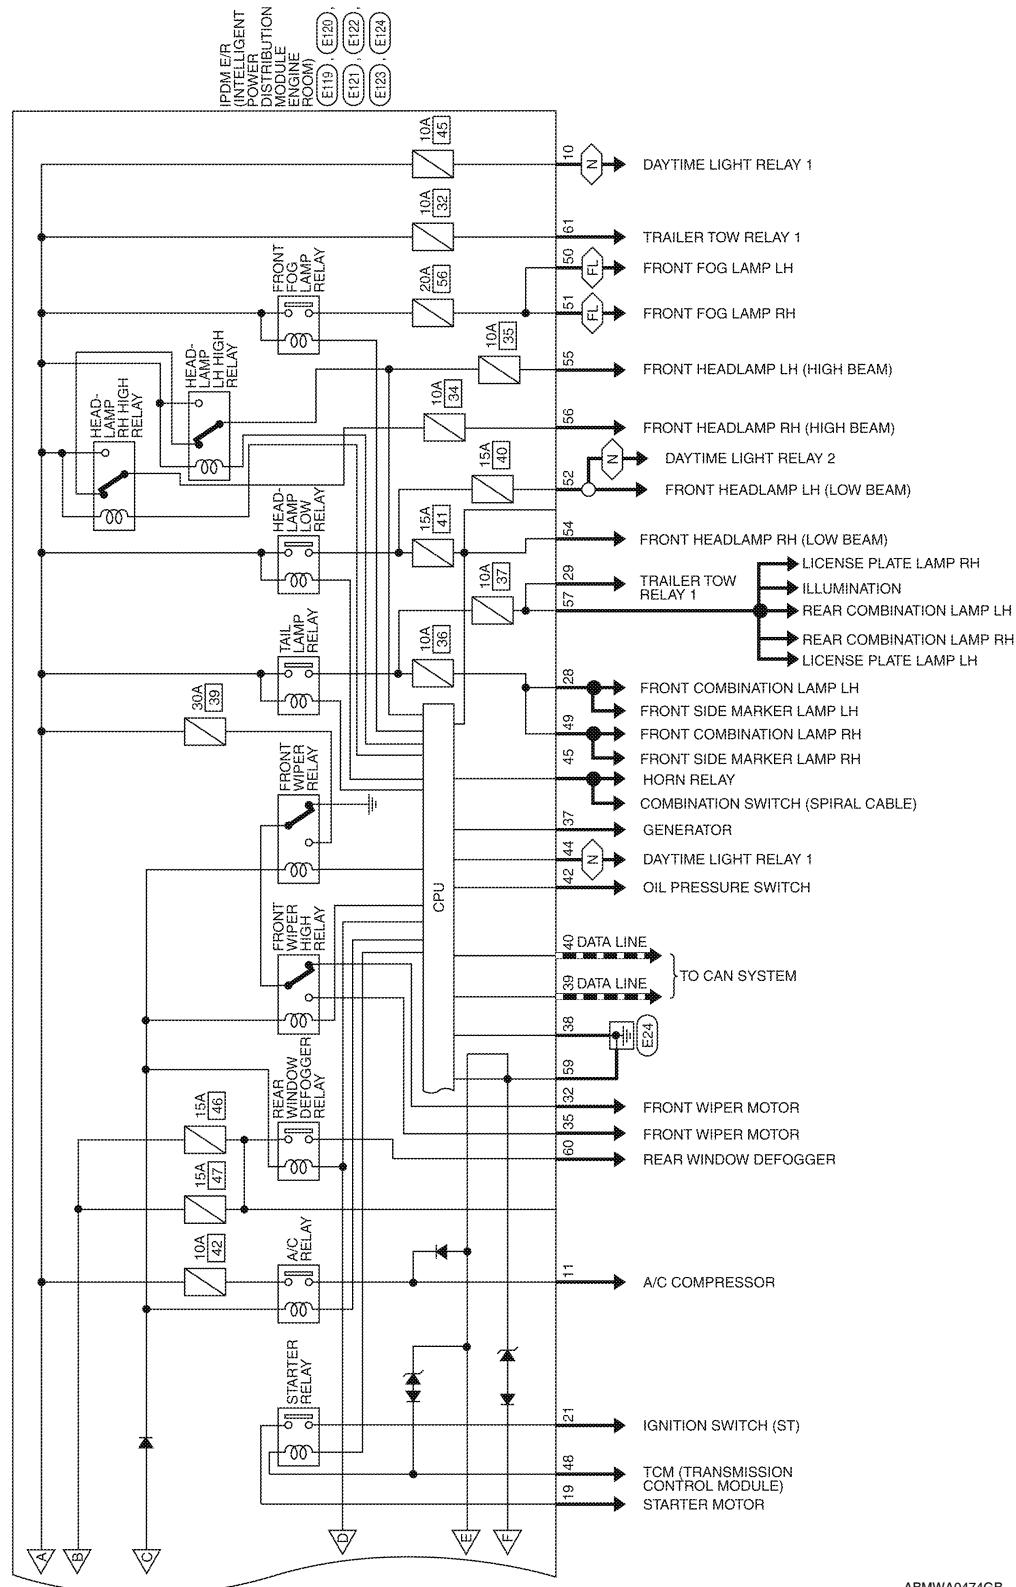

ABMWA0474GB

**IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) CONNECTORS**

Connector No.	E30
Connector Name	FUSIBLE LINK BOX (BATTERY)
Connector Color	-



Terminal No.	Color of Wire	Signal Name
3	R	-

Connector No.	E118
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	W	F/L USM
2	R	F/L MAIN

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	G	IGN COIL
4	P	ECM
5	-	-
6	W/G	FUEL PUMP
7	R	A/T CU IGN SUPPLY
14	W/G	ABS IGN SUPPLY
15	W/R	REVERSE LAMP
16	W/G	INJECTOR
17	W/G	-
18	-	-
19	W	STARTER MTR
20	BR	MOTOR FAN 1
21	GR	IGN SW (ST)
22	G	F/L MOTOR FAN
23	LG	HEATED MIRROR
24	P	MOTOR FAN 2

ABMIA1290GB


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P  
SEC

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

Connector No.	Color of Wire	Signal Name
25	—	—
26	—	—
27	W	TTOW REV LAMP
28	R	CLEARANCE FRONT LH
29	G	TRAILER RLY CONT
30	R/B	ECM BAT




Connector No.	Color of Wire	Signal Name
37	Y	ALT-C CONT
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L
41	—	—
42	GR	OIL PRESSURE SW
43	G	AUTO STOP SW
44	R	DTRL RLY CONT
45	LG	ANT THEFT HORN
46	V	FUEL PUMP RLY CONT
47	O	ETC RLY CONT
48	R	INHIBIT SW



Terminal No.	Color of Wire	Signal Name
31	—	—
32	GR	FR WIPER LO
33	—	—
34	—	—
35	L	FR WIPER HI
36	—	—




Connector No.	Color of Wire	Signal Name
51	—	—
52	—	—
53	—	—
54	—	—
55	—	—
56	—	—
57	—	—
58	—	—
59	B	GND (POWER)
60	GR	RR DEF
61	R/B	TRAIL RLY SUPPLY
62	—	—



Connector No.	Color of Wire	Signal Name
49	GR	ILLUMINATION
50	W	FR FOG LAMP LH
51	V	FR FOG LAMP RH
52	P	H/LAMP LO LH
53	—	—
54	R	H/LAMP LO RH
55	G	H/LAMP HI LH
56	L	H/LAMP HI RH



Terminal No.	Color of Wire	Signal Name
57	GR	TAIL LAMP
58	—	—
59	B	GND (POWER)
60	GR	RR DEF
61	R/B	TRAIL RLY SUPPLY
62	—	—



Terminal No.	Color of Wire	Signal Name
37	Y	ALT-C CONT
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L
41	—	—
42	GR	OIL PRESSURE SW
43	G	AUTO STOP SW
44	R	DTRL RLY CONT
45	LG	ANT THEFT HORN
46	V	FUEL PUMP RLY CONT
47	O	ETC RLY CONT
48	R	INHIBIT SW

ABMIA1291GB

A

B

C

D

E

F

G

H

I

J

**SEC**

L

M

N

O

Connector No.	E129
Connector Name	FUSIBLE LINK BOX (BATTERY)
Connector Color	BLACK





Terminal No.	Color of Wire	Signal Name
1	W	-

ABMIA1292GB

INFOID:000000005484818

P

## Fail Safe

### CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

**IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)**  
**<ECU DIAGNOSIS>** **[WITH INTELLIGENT KEY SYSTEM]**

Control part	Fail-safe in operation
Cooling fan	<ul style="list-style-type: none"> <li>• Turns ON the cooling fan relay when the ignition switch is turned ON</li> <li>• Turns OFF the cooling fan relay when the ignition switch is turned OFF</li> </ul>

If No CAN Communication Is Available With BCM

Control part	Fail-safe in operation
Headlamp	<ul style="list-style-type: none"> <li>• Turns ON the headlamp low relay when the ignition switch is turned ON</li> <li>• Turns OFF the headlamp low relay when the ignition switch is turned OFF</li> <li>• Headlamp (LH/RH) high relays OFF</li> </ul>
• Parking lamps • License plate lamps • Tail lamps	<ul style="list-style-type: none"> <li>• Turns ON the tail lamp relay when the ignition switch is turned ON</li> <li>• Turns OFF the tail lamp relay when the ignition switch is turned OFF</li> </ul>
Front wiper	<ul style="list-style-type: none"> <li>• The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed.</li> <li>• The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.</li> </ul>
Rear window defogger	Rear window defogger relay OFF
A/C compressor	A/C relay OFF
Front fog lamps (if equipped)	Front fog lamp relay OFF

#### IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

Ignition switch	Ignition relay	Tail lamp relay
ON	ON	—
OFF	OFF	—

**NOTE:**

The tail lamp turns OFF when the ignition switch is turned ON.

#### FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper auto stop signal.

When a front wiper auto stop signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 second activation and 20 second stop five times.

Ignition switch	Front wiper switch	Auto stop signal
ON	OFF	Front wiper stop position signal cannot be input 10 seconds.
	ON	The signal does not change for 10 seconds.

**NOTE:**

This operation status can be confirmed on the IPDM E/R “DATA MONITOR” that displays “Block” for the item “WIP PROT” while the wiper is stopped.

#### STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

**DTC Index**

INFOID:000000005484819

A

B

C

D

E

F

G

H

I

J

**SEC**

L

M

N

O

P

CONSULT-III display	Fail-safe	TIME <sup>NOTE</sup>	Refer to
No DTC is detected. further testing may be required.	—	—	—
U1000: CAN COMM CIRCUIT	×	CRNT	1 – 39

**NOTE:**

The details of TIME display are as follows.

- CRNT: The malfunctions that are detected now
- 1 - 39: The number is indicated when it is normal at present and a malfunction was detected in the past. It increases like 0 → 1 → 2 … 38 → 39 after returning to the normal condition whenever IGN OFF → ON. It is fixed to 39 until the self-diagnosis results are erased if it is over 39. It returns to 0 when a malfunction is detected again in the process.

## SYMPTOM DIAGNOSIS

### INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION SYMPTOMS

#### Symptom Table

INFOID:000000005259023

**NOTE:**

- Before performing the diagnosis in the following table, check "[SEC-5. "Work Flow"](#)".
- Check that vehicle is under the condition shown in "Conditions of vehicle" before starting diagnosis, and check each symptom.
- Engine cranking is enabled when the shift lever is in the "Park" position, and in the "Neutral" position only if the brake pedal is depressed.
- If the following symptoms are detected, check systems shown in the "Diagnosis/service procedure" column in this order.

#### CONDITIONS OF VEHICLE (OPERATING CONDITIONS)

- Engine start function is ON when setting on CONSULT-III.
- Mechanical key is not inserted in key cylinder.
- One or more of Intelligent Keys with registered Intelligent Key ID is in the vehicle.

Symptom	Diagnosis/service procedure	Reference page
Ignition switch does not turn on with Intelligent Key. [green "KEY" lamp is displayed]	1. Check steering lock solenoid. 2. Replace Intelligent Key unit.	<a href="#">SEC-29</a> <a href="#">SEC-118</a>
Ignition switch does not turn on with Intelligent Key. ["KEY" lamp does not display]	1. Check Intelligent Key unit power supply and ground circuit. 2. Check ignition knob switch. 3. Check key switch (BCM input). 4. Check key switch (Intelligent Key unit input). 5. Replace Intelligent Key unit. 6. Check green "KEY" indicator. 7. Check red "KEY" indicator.	<a href="#">DLK-53</a> <a href="#">DLK-111</a> <a href="#">DLK-110</a> <a href="#">DLK-108</a> <a href="#">SEC-118</a> <a href="#">DLK-90</a> <a href="#">DLK-90</a>
Ignition switch does not turn on with Intelligent Key. [red "KEY" lamp is displayed]	1a. Check inside key antenna 1 (instrument panel). 1b. Check inside key antenna 2 (luggage compartment). 1c. Check inside key antenna 3 (center console).	<a href="#">DLK-47</a> <a href="#">DLK-49</a> <a href="#">DLK-51</a>
Ignition switch does not turn on with mechanical key	2. Replace Intelligent Key unit.	<a href="#">SEC-118</a>
Engine cannot be cranked with transmission in "Park" or in "Neutral" position with brake pedal depressed	1. Check transmission signal. 2. Check stop lamp switch.	<a href="#">TM-50</a> <a href="#">EXL-90</a>
"P-SHIFT" indicator does not operate properly	1. Check "P-SHIFT" indicator.	<a href="#">DLK-90</a>

# VEHICLE SECURITY SYSTEM SYMPTOMS

[WITH INTELLIGENT KEY SYSTEM]

< SYMPTOM DIAGNOSIS >

## VEHICLE SECURITY SYSTEM SYMPTOMS

### Symptom Table

INFOID:0000000005259024

Procedure		Diagnostic procedure	Refer to page
Symptom			
1	Vehicle security system cannot be set by ....	Door switch	Check door switch (LF, RF, LR, RR, back)
		Glass ajar switch	Check glass ajar switch
		Intelligent Key	Check Intelligent Key system
		Key cylinder switch	Check key cylinder switch
		—	Check Intermittent Incident
	Security indicator does not turn ON.		Check vehicle security indicator Check Intermittent Incident
2	* Vehicle security system does not sound alarm when ....	Any door is opened.	Check door switch (LF, RF, LR, RR, back)
		Glass ajar switch	Check glass ajar switch
		—	Check Intermittent Incident
3	Vehicle security alarm does not activate.	Horn alarm	Check horn switch
			Check Intermittent Incident
4	Vehicle security system cannot be canceled by ....	Intelligent Key	Check Intelligent Key system
		Key cylinder switch	Check key cylinder switch
		—	Check Intermittent Incident

\*: Check the system is in the armed phase.

A

B

C

D

E

F

G

H

J

SEC

L

M

N

O

P

# NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS SYMPTOMS

<SYMPTOM DIAGNOSIS>

[WITH INTELLIGENT KEY SYSTEM]

## NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS SYMPTOMS

### Symptom Table

INFOID:000000005259025

#### NOTE:

- Before performing the diagnosis in the following table, check “[SEC-5. "Work Flow"](#)”.
- Check that vehicle is under the condition shown in “Conditions of vehicle” before starting diagnosis, and check each symptom.
- If the following symptoms are detected, check systems shown in the “Diagnosis/service procedure” column in this order.

#### CONDITIONS OF VEHICLE (OPERATING CONDITIONS)

- Mechanical key is not inserted into key cylinder.
- Ignition knob switch is not depressed.

Symptom	Diagnosis/service procedure	Reference page
Security indicator does not turn ON or flash.	1. Check vehicle security indicator	<a href="#">SEC-52</a>
	2. Check Intermittent Incident	<a href="#">GI-37</a>

&lt; PRECAUTION &gt;

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000005510397

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

#### Precaution Necessary for Steering Wheel Rotation After Battery Disconnect

INFOID:0000000005259029

SEC

#### **NOTE:**

- This Procedure is applied only to models with Intelligent Key system and NATS (NISSAN ANTI-THEFT SYSTEM).
- Remove and install all control units after disconnecting both battery cables with the ignition knob in the "LOCK" position.
- Always use CONSULT-III to perform self-diagnosis as a part of each function inspection after finishing work. If DTC is detected, perform trouble diagnosis according to self-diagnostic results.

For models equipped with the Intelligent Key system and NATS, an electrically controlled steering lock mechanism is adopted on the key cylinder.

For this reason, if the battery is disconnected or if the battery is discharged, the steering wheel will lock and steering wheel rotation will become impossible.

If steering wheel rotation is required when battery power is interrupted, follow the procedure below before starting the repair operation.

#### OPERATION PROCEDURE

1. Connect both battery cables.

#### **NOTE:**

Supply power using jumper cables if battery is discharged.

2. Use the Intelligent Key or mechanical key to turn the ignition switch to the "ACC" position. At this time, the steering lock will be released.
3. Disconnect both battery cables. The steering lock will remain released and the steering wheel can be rotated.
4. Perform the necessary repair operation.

## **PRECAUTIONS**

### **< PRECAUTION >**

### **[WITH INTELLIGENT KEY SYSTEM]**

- 
- 5. When the repair work is completed, return the ignition switch to the "LOCK" position before connecting the battery cables. (At this time, the steering lock mechanism will engage.)
  - 6. Perform a self-diagnosis check of all control units using CONSULT-III.

## ON-VEHICLE REPAIR

### NATS ANTENNA AMP.

#### Removal and Installation


INFOID:000000005259030

**NOTE:**

- If NATS antenna amp. is not installed correctly, NVIS (NATS) system will not operate properly and "SELF-DIAG RESULTS" on CONSULT-III screen will show "LOCK MODE" or "CHAIN OF IMMU-KEY".
- Initialization is not necessary when only the NATS antenna amp. is replaced with a new one.

#### REMOVAL

1. Disconnect the battery negative terminal. Refer to [PG-78, "Removal and Installation"](#).
2. Remove cluster lid A. Refer to [IP-11, "Exploded View"](#).
3. Remove the bolt, disconnect the electrical connector (1), and remove the NATS antenna amp (2).

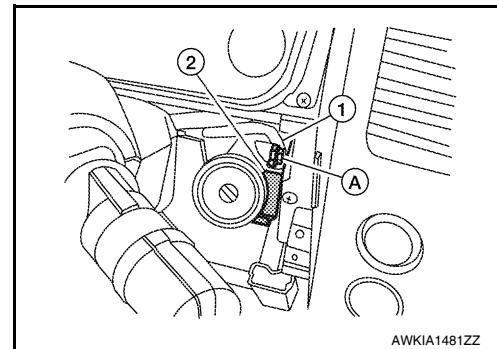

#### INSTALLATION

Installation is in the reverse order of removal.

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P


## INTELLIGENT KEY UNIT

### Removal and Installation

INFOID:0000000005259031

#### REMOVAL

1. Disconnect the battery negative terminal. Refer to [PG-78, "Removal and Installation"](#).
2. Remove the lower glove box. Refer to [IP-11, "Exploded View"](#).
3. Remove the bolt (A), disconnect the electrical connector (1), and remove the intelligent key module (2).
  - ⇵: Front

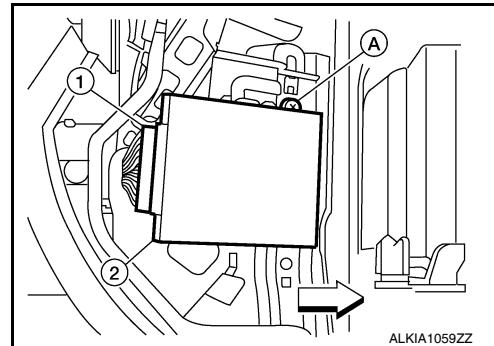

#### INSTALLATION

Installation is in the reverse order of removal.


## REMOTE KEYLESS ENTRY RECEIVER

### Removal and Installation

INFOID:000000005259032

#### REMOVAL

1. Disconnect the battery negative cable. Refer to [PG-78, "Removal and Installation"](#).
2. Remove the front pillar upper finisher (RH). Refer to [INT-16, "Component"](#).
3. Remove the side ventilator grille (RH). Refer to [IP-11, "Exploded View"](#).
4. Remove the instrument side finisher. Refer to [IP-11, "Exploded View"](#).
5. Remove the upper glove box. Refer to [IP-11, "Exploded View"](#).
6. Remove the bolt (A), disconnect the harness connector (1) and remove the remote keyless entry receiver (2).

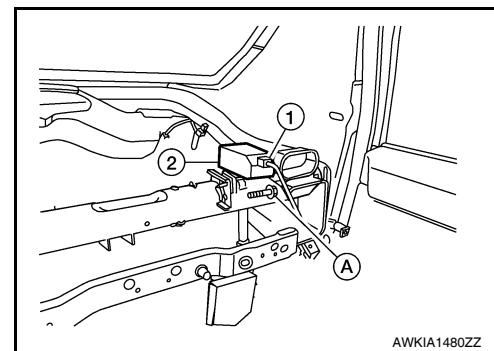

AWKIA1480ZZ

#### INSTALLATION

Installation is in the reverse order of removal.

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

# DIAGNOSIS AND REPAIR WORKFLOW

[WITHOUT INTELLIGENT KEY SYSTEM]

< BASIC INSPECTION >


## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000005259033

OVERALL SEQUENCE

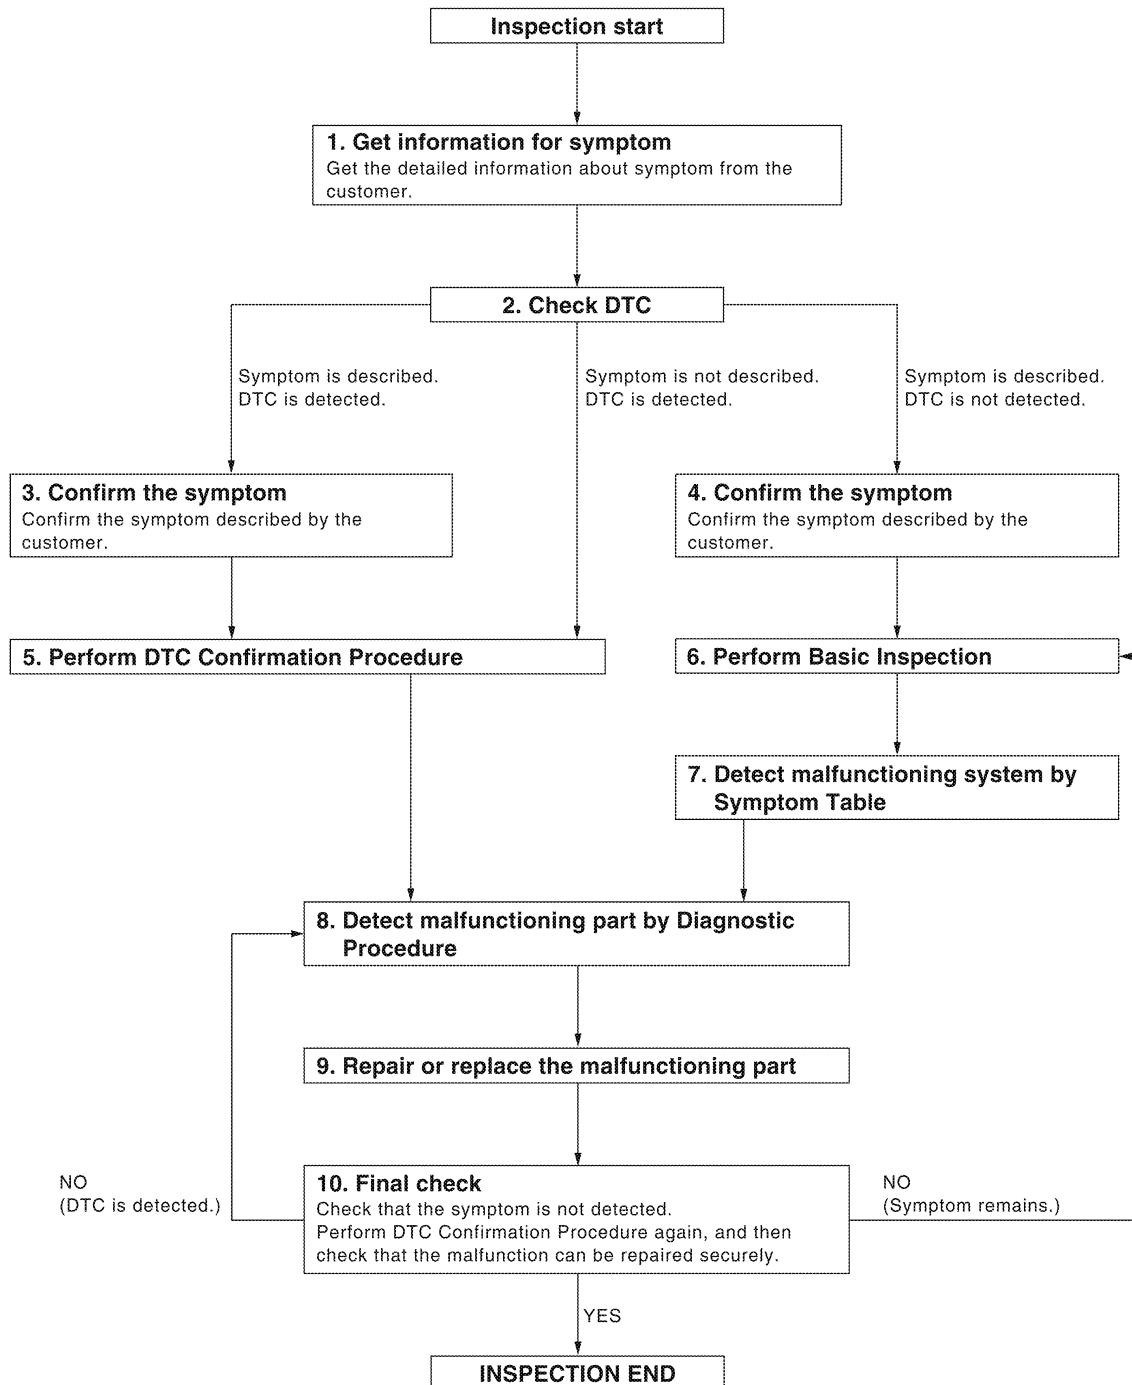

DETAILED FLOW

# DIAGNOSIS AND REPAIR WORKFLOW

[WITHOUT INTELLIGENT KEY SYSTEM]

< BASIC INSPECTION >

## 1. GET INFORMATION FOR SYMPTOM

Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred).

>> GO TO 2

## 2. CHECK DTC

1. Check DTC for BCM.
2. Perform the following procedure if DTC is displayed.
  - Erase DTC.
  - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

Is any symptom described and any DTC detected?

Symptom is described, DTC is displayed>>GO TO 3

Symptom is described, DTC is not displayed>>GO TO 4

Symptom is not described, DTC is displayed>>GO TO 5

## 3. CONFIRM THE SYMPTOM

Confirm the symptom described by the customer.

Connect CONSULT-III to the vehicle in "DATA MONITOR" mode and check real-time diagnosis results.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5

## 4. CONFIRM THE SYMPTOM

Confirm the symptom described by the customer.

Connect CONSULT-III to the vehicle in "DATA MONITOR" mode and check real-time diagnosis results.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6

## 5. PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC Confirmation Procedure for the displayed DTC, and then check that DTC is detected again.

If two or more DTCs are detected, refer to [DLK-298, "DTC Inspection Priority Chart"](#) (BCM) and determine trouble diagnosis order.

Is DTC detected?

YES >> GO TO 8

NO >> Refer to [GI-37, "Intermittent Incident"](#).

## 6. PERFORM BASIC INSPECTION

Perform Basic Inspection. Refer to [SEC-123, "Basic Inspection"](#).

>> GO TO 7

## 7. DETECT MALFUNCTIONING SYSTEM BY SYMPTOM TABLE

Detect malfunctioning system according to Symptom Table based on the confirmed symptom in step 4.

>> GO TO 8

## 8. DETECT MALFUNCTIONING PART BY DIAGNOSTIC PROCEDURE

Inspect according to Diagnostic Procedure of the system.

**NOTE:**

The Diagnostic Procedure is described based on open circuit inspection. A short circuit inspection is also required for the circuit check in the Diagnostic Procedure.

>> GO TO 9

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P  
**SEC**

## DIAGNOSIS AND REPAIR WORKFLOW

[WITHOUT INTELLIGENT KEY SYSTEM]

< BASIC INSPECTION >

### 9. REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnostic Procedure again after repair and replacement.
3. Check DTC. If DTC is displayed, erase it.

>> GO TO 10

### 10. FINAL CHECK

When DTC was detected in step 9, perform DTC Confirmation Procedure or Component Function Check again, and then check that the malfunctions have been fully repaired.

When symptom was described by the customer, refer to the confirmed symptom in step 3 or 4, and check that the symptom is not detected.

#### Does the symptom reappear?

YES (DTC is detected)>>GO TO 8

YES (Symptom remains)>>GO TO 6

NO      >> Inspection End.

# PRE-INSPECTION FOR DIAGNOSTIC

[WITHOUT INTELLIGENT KEY SYSTEM]

< BASIC INSPECTION >

## PRE-INSPECTION FOR DIAGNOSTIC

### Basic Inspection

INFOID:0000000005259097

#### 1. INSPECTION START

Turn ignition switch "OFF".

**NOTE:**

Before starting operation check, open front windows.

>> GO TO 2

#### 2. CHECK SECURITY INDICATOR LAMP

1. Lock doors using keyfob or mechanical key.
2. Check that security indicator lamp illuminates for 30 seconds.

Does the security indicator lamp illuminate?

YES >> GO TO 3

NO >> Perform diagnosis and repair. Refer to [SEC-128, "System Description"](#).

#### 3. CHECK ALARM FUNCTION

1. After 30 seconds, security indicator lamp will start to blink.
2. Open any door before unlocking with keyfob or mechanical key, or open back door or glass hatch without keyfob.

Does the alarm function properly?

YES >> GO TO 4

NO >> Check the following.

- The vehicle security system does not phase in alarm mode. Refer to [SEC-191, "Symptom Table"](#).
- Alarm (horn and headlamps) does not operate. Refer to [SEC-191, "Symptom Table"](#).

#### 4. CHECK ALARM CANCEL OPERATION

Unlock any door using keyfob or mechanical key.

Alarm (horn and headlamps) should stop.

YES >> Inspection End.

NO >> Check door lock function. Refer to [DLK-212, "DOOR LOCK AND UNLOCK SWITCH : System Description"](#).

SEC

L

M

N

O

P

# INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

## INSPECTION AND ADJUSTMENT

### ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement

INFOID:000000005259034

Refer to the CONSULT-III Operation Manual-NATS.

### ECM RE-COMMUNICATING FUNCTION

#### ECM RE-COMMUNICATING FUNCTION : Description

INFOID:000000005259035

Performing following procedure can automatically perform re-communication of ECM and BCM, but only when the ECM has been replaced with a new one (\*1).

\*1: New one means an ECM which has never been energized on-board.

(In this step, initialization procedure by CONSULT-III is not necessary)

#### NOTE:

- When registering new Key IDs or replacing the ECM that is not brand new, refer to CONSULT-III Operation Manual.
- If multiple keys are attached to the key holder, separate them before work.
- Distinguish keys with unregistered key ID from those with registered ID.

#### ECM RE-COMMUNICATING FUNCTION : Special Repair Requirement

INFOID:000000005259036

#### 1 .PERFORM ECM RE-COMMUNICATING FUNCTION

1. Install ECM.
2. Using a registered key (\*2), turn ignition switch to "ON".  
\*2: To perform this step, use the key that has been used before performing ECM replacement.
3. Maintain ignition switch in "ON" position for at least 5 seconds.
4. Turn ignition switch to "OFF".
5. Start engine.

#### Can engine be started?

YES    >> Procedure is completed.


NO    >> Initialize control unit. Refer to CONSULT-III Operation Manual.

## FUNCTION DIAGNOSIS

### NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)

#### System Diagram

INFOID:000000005259037

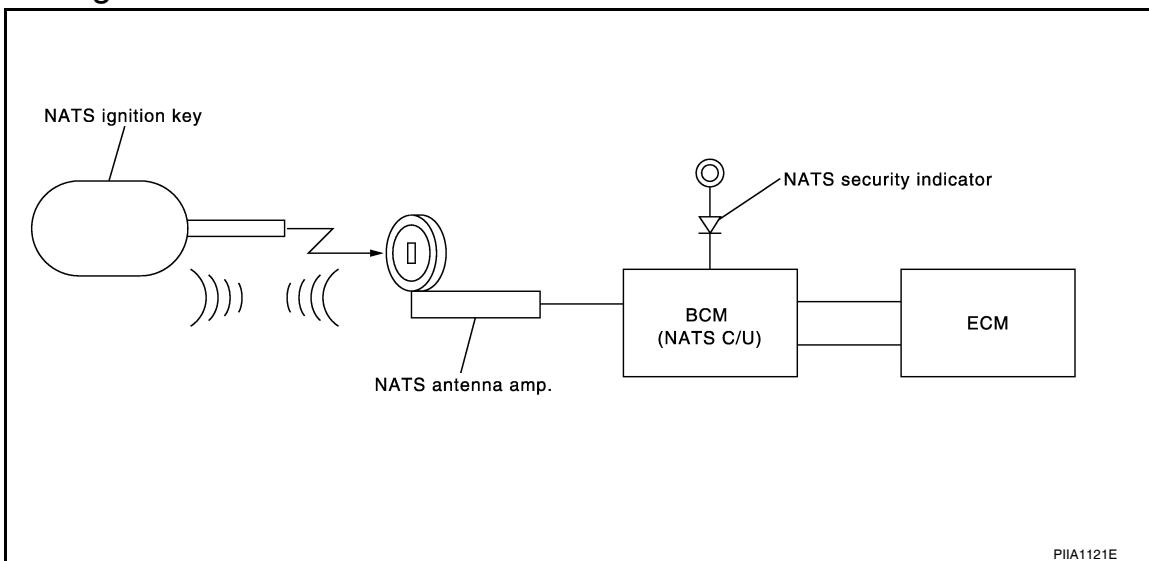

PIIA1121E

#### System Description

INFOID:000000005259038

#### INPUT/OUTPUT SIGNAL CHART

##### BCM

Switch/Input signal	Input signal to BCM	BCM function	Actuator/Output signal
NATS antenna amp.	Key ID	NATS	• Security indicator lamp
ECM	Engine status signal		• Starter request

#### SYSTEM DESCRIPTION

NATS (Nissan Anti-Theft System) has the following immobilizer functions:

- Engine immobilizer shows high anti-theft performance to prevent engine from starting by other than the owner.
- Only a key with key ID registered in BCM and ECM can start engine, and shows high anti-theft performance to prevent key from being copied or stolen.
- Security indicator always flashes with mechanical key removed condition (key switch: OFF) and ignition knob released condition on LOCK position (ignition knob switch: OFF).
- Therefore, NATS warns outsiders that the vehicle is equipped with the anti-theft system. Refer to [SEC-128, "System Description"](#).
- If system detects malfunction, security indicator illuminates when ignition switch is turned to ON position.
- If the owner requires, ignition key ID or mechanical key ID can be registered for up to 5 keys.
- During trouble diagnosis or when the following parts have been replaced, and if ignition key is added, registration\* is required.

\*<sup>1</sup>: All keys kept by the owner of the vehicle should be registered with mechanical key.

- ECM
- BCM
- Ignition key
- Remote keyless entry receiver
- NATS trouble diagnosis, system initialization and additional registration of other mechanical key IDs must be carried out using CONSULT-III.

When NATS initialization has been completed, the ID of the inserted mechanical key or mechanical key IDs can be carried out.

# NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)

[WITHOUT INTELLIGENT KEY SYSTEM]

## < FUNCTION DIAGNOSIS >

- Possible symptom of NATS malfunction is "Engine cannot start". Identify the possible causes according to "Work Flow", Refer to [SEC-120, "Work Flow"](#).
- If ECM other than Genuine NISSAN is installed, the engine cannot be started. For ECM replacement procedure, refer to [SEC-124, "ECM RE-COMMUNICATING FUNCTION : Description"](#).

## PRECAUTIONS FOR KEY REGISTRATION

- The key registration is a procedure that erases the current NATS ID once, and then re-registers a new ID. Therefore the registered key is necessary for this procedure. Before starting the registration operation collect all registered Keys from the customer.
- The NATS ID registration is the procedure that registers the ID stored into the transponder (integrated in mechanical key) to BCM.  
The key ID registration is the procedure that registers the ID to the BCM.
- When performing the key system registration only, the engine cannot be started by inserting the key into the key cylinder. When performing the NATS registration only, the engine cannot be started by using the ignition key.

## SECURITY INDICATOR

- Always flashes with ignition key in the OFF position.

## MAINTENANCE INFORMATION


### CAUTION:

**It is necessary to perform NATS ID registration when replacing any of the following part.  
If it's not (or fail to do so), the electrical system may not operate properly.**

- BCM
- ECM
- IPDM E/R
- Ignition key
- NATS antenna amp.
- Combination meter

## Component Parts Location

INFOID:0000000005259039

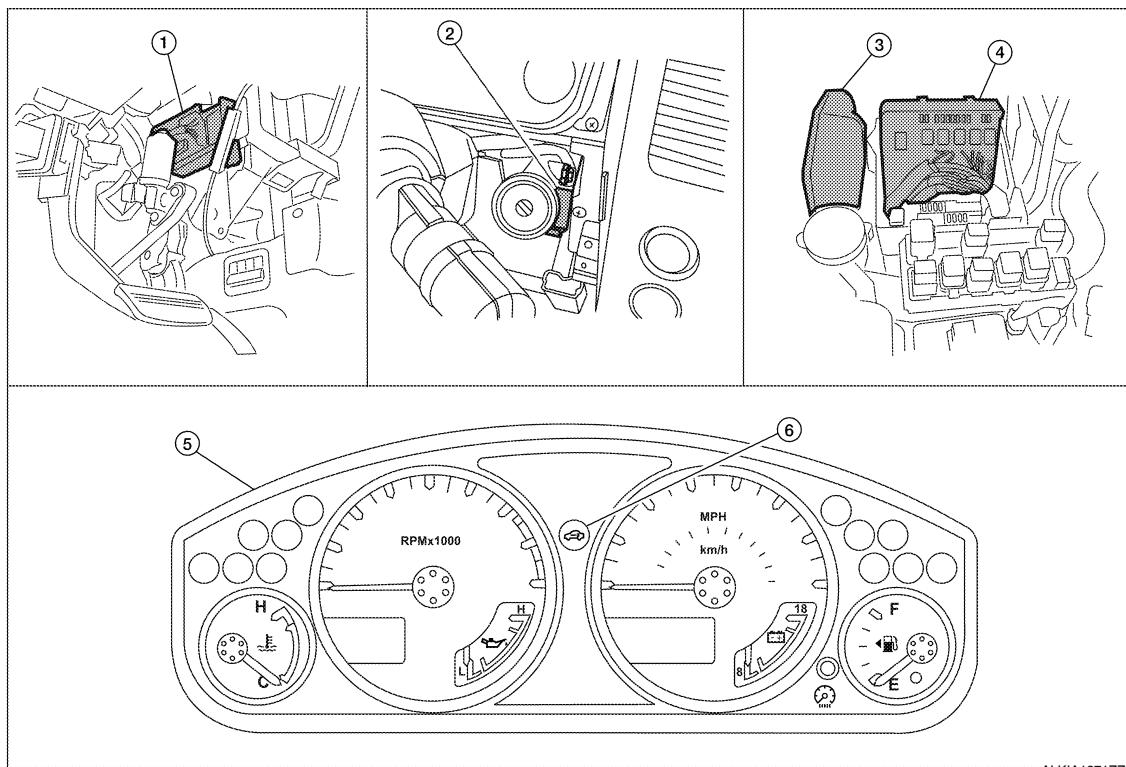

ALKIA1271ZZ

# NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)

< FUNCTION DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

- |  |                          |                            |
|--|--------------------------|----------------------------|
| 1. BCM M18, M20<br>(view with instrument panel LH removed) | 2. NATS antenna amp. M21 | 3. ECM E16                 |
| 4. IPDM E/R E121<br>(view with cover removed)              | 5. Combination meter M24 | 6. Security indicator lamp |

## Component Description

INFOID:000000005259040

Item	Function
BCM	Verifies the received signal from the ignition key ID, then informs ECM whether to allow engine start.
Remote keyless entry receiver	Receives lock/unlock signal from the keyfob, and then transmits to the BCM.
A/T shift selector (park position switch)	Detects whether the shift lever is in park.
NATS antenna amp.	Detects the ignition key presence in the ignition key cylinder.
Security indicator	Indicates the status of the security system.
IPDM E/R	Powers-up the horn and the headlamps in case of a security breach.

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

# VEHICLE SECURITY SYSTEM


< FUNCTION DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

## VEHICLE SECURITY SYSTEM

### System Diagram

INFOID:0000000005259041

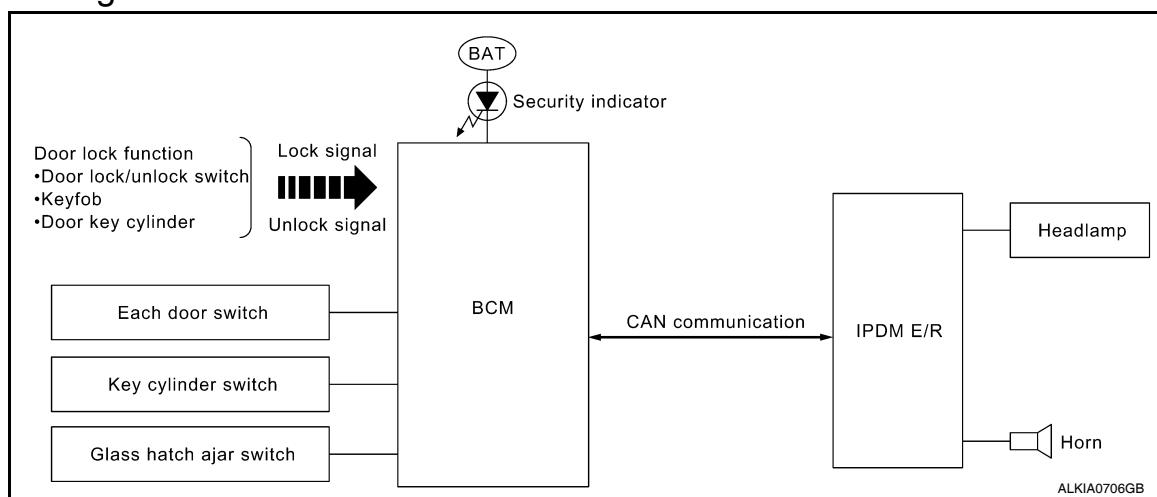

### System Description


INFOID:0000000005259042

#### DESCRIPTION

The security system provides an audible and visual alarm when an unauthorized access to the vehicle is detected while the system is in armed phase.

The security system consists of the BCM managing the audible alarm (horn) and the visual alarm (headlamps).

#### OPERATION FLOW

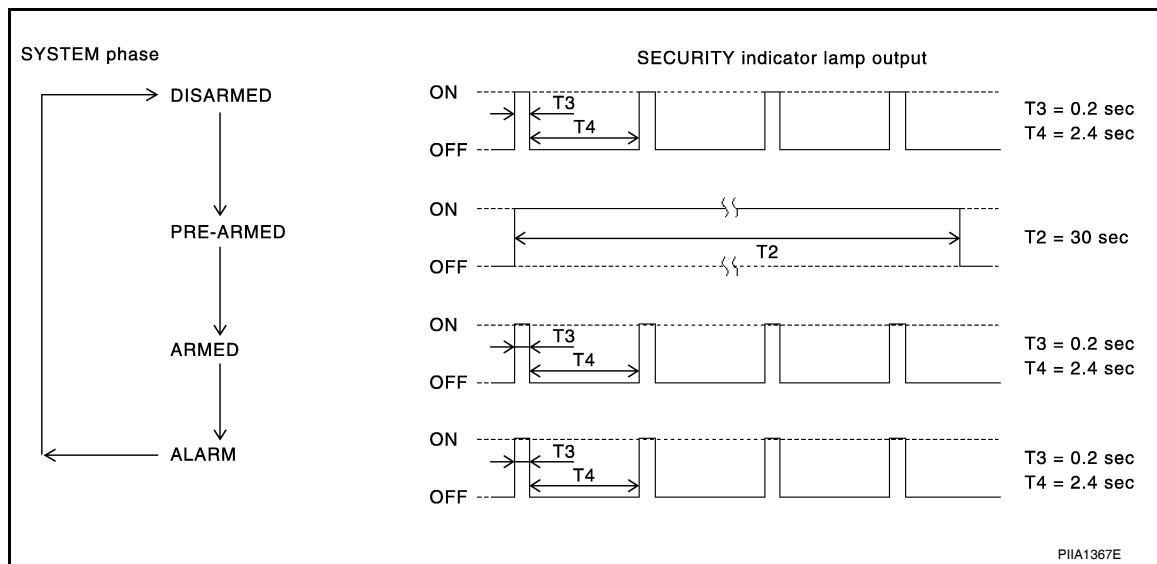

#### Disarmed Phase

When the vehicle is being driven or when doors are open, the theft warning system is set in the disarmed phase on the assumption that the owner is inside or near the vehicle.

#### Pre-Armed Phase And Armed Phase

The vehicle security system turns into the pre-armed phase when ignition switch is in OFF position, all doors including glass hatch are closed and locked (using keyfob, doorlock/unlock switch, driver key cylinder or auto relock function). The system automatically shifts into the armed phase.

#### Condition of Activating The System

When the following condition is performed in armed phase, the system sounds the horns and flashes the headlamps for about 50 seconds.

- Any door is opened.

# VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]

## < FUNCTION DIAGNOSIS >


Condition of Deactivating The System

When one of the following operations is performed, the armed phase is canceled.

- Unlock the doors with keyfob.
- Use the mechanical key to unlock the driver door using the door key cylinder.

## Component Parts Location

INFOID:000000005259043

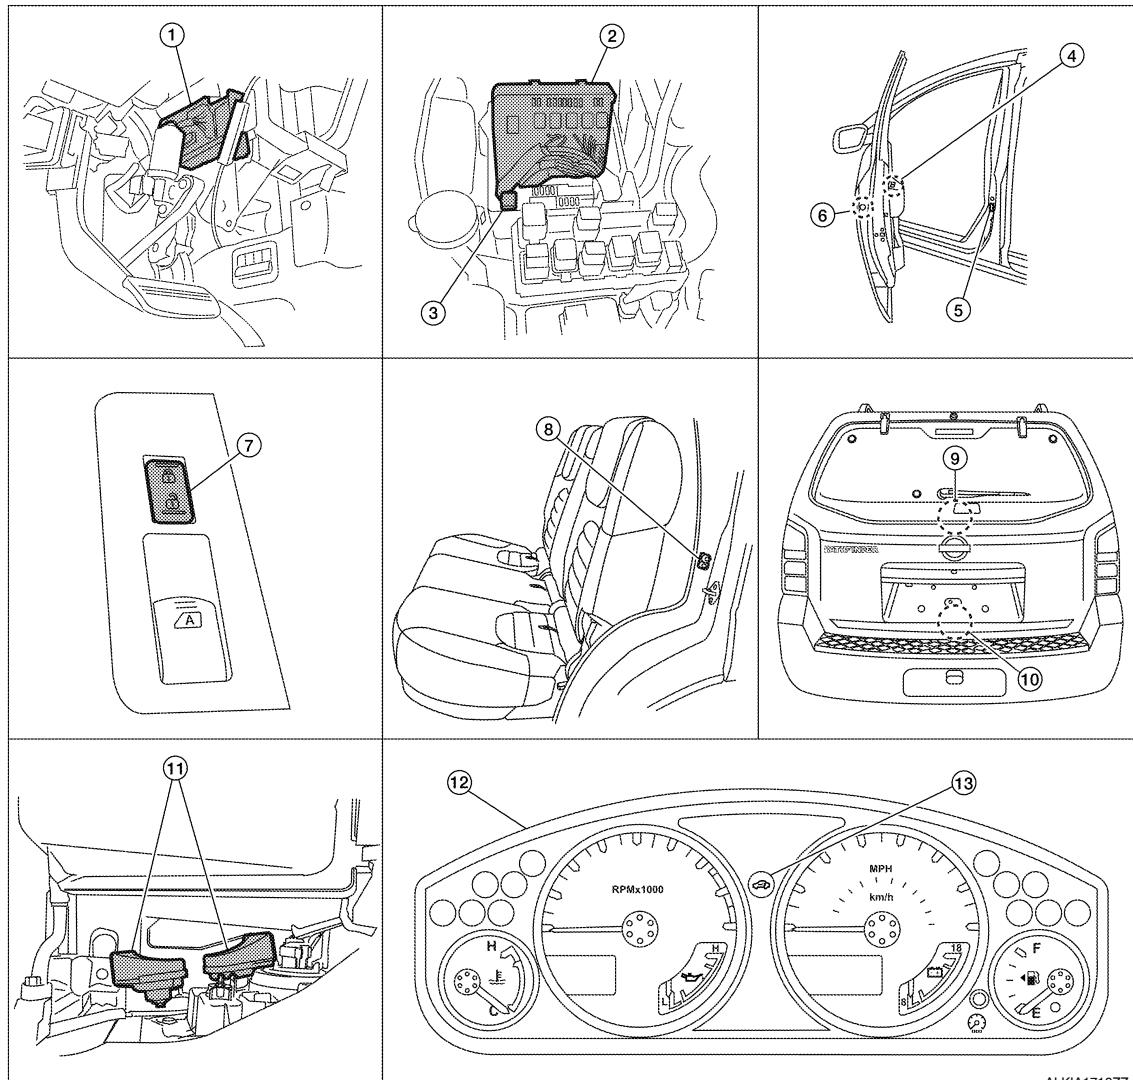

ALKIA1710ZZ

1. BCM M18, M19, M20  
(view with instrument panel LH removed)
2. IPDM E/R E122, E123, E124  
(view with cover removed)
3. Horn relay H-1
4. Main power window and door lock/unlock switch D7, D8
5. Front door switch LH B8 RH B108
6. Front door lock assembly LH (key cylinder switch) D14
7. Power window and door lock/unlock switch RH D105
8. Rear door switch LH B18 RH B116
9. Glass hatch ajar switch D503
10. Back door latch (door ajar switch) D502  
Glass hatch ajar switch D503
11. Horn E3  
(behind front combination lamp LH)
12. Combination meter M24
13. Security indicator lamp

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

# VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]

< FUNCTION DIAGNOSIS >

## Component Description

INFOID:000000005259044

Item	Function
BCM	Verifies the received signal from ignition key, then informs ECM whether to allow engine start.
Door switch	Provides the BCM with the status of each monitored door.
Security indicator	Indicates the status of the security system.
IPDM E/R	Controls the horn and headlamps operation.
Horn	Sounds when the vehicle security system is triggered.

# DIAGNOSIS SYSTEM (BCM)

[WITHOUT INTELLIGENT KEY SYSTEM]

< FUNCTION DIAGNOSIS >

## DIAGNOSIS SYSTEM (BCM)

### COMMON ITEM

#### COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)

INFOID:000000005484820

##### APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
WORK SUPPORT	Changes the setting for each system function.
SELF-DIAG RESULTS	Displays the diagnosis results judged by BCM. Refer to <a href="#">SEC-176, "DTC Index"</a> .
CAN DIAG SUPPORT MNTR	Monitors the reception status of CAN communication viewed from BCM.
DATA MONITOR	The BCM input/output signals are displayed.
ACTIVE TEST	The signals used to activate each device are forcibly supplied from BCM.
ECU IDENTIFICATION	The BCM part number is displayed.
CONFIGURATION	<ul style="list-style-type: none"><li>• Enables to read and save the vehicle specification.</li><li>• Enables to write the vehicle specification when replacing BCM.</li></ul>

##### SYSTEM APPLICATION

BCM can perform the following functions for each system.

##### NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

System	Sub system selection item	Diagnosis mode		
		WORK SUPPORT	DATA MONITOR	ACTIVE TEST
BCM	BCM	x		
Door lock	DOOR LOCK	x	x	x
Rear window defogger	REAR DEFOGGER		x	x
Warning chime	BUZZER		x	x
Interior room lamp timer	INT LAMP	x	x	x
Remote keyless entry system <sup>1</sup>	MULTI REMOTE ENT	x	x	x
Exterior lamp	HEAD LAMP	x	x	x
Wiper and washer	WIPER	x	x	x
Turn signal and hazard warning lamps	FLASHER		x	x
Air conditioner	AIR CONDITIONER		x	
Intelligent Key system <sup>2</sup>	INTELLIGENT KEY		x	
Combination switch	COMB SW		x	
Immobilizer	IMMU		x	x
Interior room lamp battery saver	BATTERY SAVER	x	x	x
Back door open	TRUNK		x	x
RAP (retained accessory power)	RETAINED PWR	x	x	x
Signal buffer system	SIGNAL BUFFER		x	x
TPMS (tire pressure monitoring system)	AIR PRESSURE MONITOR	x	x	x
Vehicle security system	THEFT ALM	x	x	x
Panic alarm	PANIC ALARM			x

1: With remote keyless entry system

2: With Intelligent Key

### IMMU

# DIAGNOSIS SYSTEM (BCM)

[WITHOUT INTELLIGENT KEY SYSTEM]

< FUNCTION DIAGNOSIS >

IMMU : CONSULT-III Function (BCM - IMMU)

INFOID:000000005484821

## DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [ON/OFF]	Indicates condition of ignition switch in ON position.

## ACTIVE TEST

Test Item	Description
THEFT IND	This test is able to check security indicator operation [ON/OFF].

## THEFT ALM

THEFT ALM : CONSULT-III Function (BCM - THEFT ALM)

INFOID:000000005484822

## WORK SUPPORT

Test Item	Description
SECURITY ALARM SET	This mode is able to confirm and change security alarm ON-OFF setting.
THEFT ALM TRG	The switch which triggered vehicle security alarm is recorded. This mode is able to confirm and erase the record of vehicle security alarm. The trigger data can be erased by touching "CLEAR" on CONSULT-III screen.

## DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [ON/OFF]	Indicates ignition switch (ON) status judged from IGN signal (ignition power supply)
ACC ON SW [ON/OFF]	Indicates ignition switch (ACC) status judged from ACC signal (accessory power supply)
I-KEY LOCK <sup>1</sup> [ON/OFF]	Indicates lock signal status received from Intelligent Key unit by CAN communication
I-KEY UNLOCK <sup>1</sup> [ON/OFF]	Indicates unlock signal status received from Intelligent Key unit by CAN communication
I-KEY TRUNK <sup>1</sup> [ON/OFF]	Indicates condition of back door opener switch
KEYLESS LOCK <sup>2</sup> [ON/OFF]	Indicates lock signal status received from remote keyless entry receiver (integrated in the BCM)
KEYLESS UNLOCK <sup>2</sup> [ON/OFF]	Indicates unlock signal status received from remote keyless entry receiver (integrated in the BCM)
TRNK OPNER SW [ON/OFF]	Indicates switch status of back door opener switch
TRNK OPN MNTR [ON/OFF]	Indicates switch status of back door latch
DOOR SW-DR [ON/OFF]	Indicates switch status input from front door switch LH
DOOR SW-AS [ON/OFF]	Indicates switch status input from front door switch RH
DOOR SW-RR [ON/OFF]	Indicates switch status input from rear door switch RH
DOOR SW-RL [ON/OFF]	Indicates switch status input from rear door switch LH
BACK DOOR SW [ON/OFF]	Indicates switch status input from back door switch
KEY CYL LK-SW [ON/OFF]	Indicates lock switch status from door key cylinder switch
KEY CYL UN-SW [ON/OFF]	Indicates unlock switch status from door key cylinder switch
CDL LOCK SW [ON/OFF]	Indicates lock switch status from door lock and unlock switch
CDL UNLOCK SW [ON/OFF]	Indicates unlock switch status from door lock and unlock switch

1: With Intelligent Key

2: With remote keyless entry system

## ACTIVE TEST

## DIAGNOSIS SYSTEM (BCM)

[WITHOUT INTELLIGENT KEY SYSTEM]

< FUNCTION DIAGNOSIS >

Test Item	Description
THEFT IND	This test is able to check security indicator lamp operation. The lamp will be turned on when "ON" on CONSULT-III screen is touched.
VEHICLE SECURITY HORN	This test is able to check vehicle security horn operation. The horns will be activated for 0.5 seconds after "ON" on CONSULT-III screen is touched.
HEAD LAMP(HI)	This test is able to check vehicle security lamp operation. The headlamps will be activated for 0.5 seconds after "ON" on CONSULT-III screen is touched.

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

&lt; COMPONENT DIAGNOSIS &gt;

# COMPONENT DIAGNOSIS

## U1000 CAN COMM CIRCUIT

### Description

INFOID:0000000005259048

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Signal Chart, refer to [LAN-53, "CAN Communication Signal Chart"](#)

### DTC Logic

INFOID:0000000005259049

### DTc DETECTION LOGIC

DTC	CONSULT-III display description	DTc Detection Condition	Possible cause
U1000	CAN COMM CIRCUIT	When BCM cannot communicate CAN communication signal continuously for 2 seconds or more.	<p>In CAN communication system, any item (or items) of the following listed below is malfunctioning.</p> <ul style="list-style-type: none"> <li>• Receiving (TCM)</li> <li>• Receiving (IPDM E/R)</li> <li>• Receiving (ECM)</li> <li>• Receiving (METER/M&amp;A)</li> <li>• Receiving (MULTI AV)</li> </ul>

### Diagnosis Procedure

INFOID:0000000005259050

#### 1. PERFORM SELF DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Check "Self Diagnostic Result".

#### Is "CAN COMM CIRCUIT" displayed?

- YES    >> Refer to [LAN-5, "CAN Communication Control Circuit"](#).  
 NO    >> Refer to [GI-37, "Intermittent Incident"](#).

&lt; COMPONENT DIAGNOSIS &gt;

## U1010 CONTROL UNIT (CAN)

### Description

INFOID:0000000005259051

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Signal Chart, refer to [LAN-53, "CAN Communication Signal Chart"](#).

### DTC Logic

INFOID:0000000005259052

### DTC DETECTION LOGIC

DTC	CONSULT-III display de- scription	DTC Detection Condition	Possible cause
U1010	CONTROL UNIT (CAN)	When detecting error during the initial diagnosis of CAN controller of BCM.	BCM

### Diagnosis Procedure

INFOID:0000000005259053

#### 1.REPLACE BCM

When DTC [U1010] is detected, replace BCM.

>> Replace BCM. Refer to [BCS-59, "Removal and Installation"](#).

### Special Repair Requirement

INFOID:0000000005259054

#### 1 .REQUIRED WORK WHEN REPLACING BCM

Initialize BCM. Refer to CONSULT-III Operation Manual.

>> Inspection End.

SEC

L

M

N

O

P

**B2190, P1614 NATS ANTENNA AMP.****Description**

INFOID:0000000005259055

Performs ID verification through BCM and NATS antenna amplifier when ignition key is inserted and ignition switch turned ON.

Prohibits the start of engine when an unregistered ID of ignition key is used.

**DTC Logic**

INFOID:0000000005259056

**DTC DETECTION LOGIC**

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2190			<ul style="list-style-type: none"> <li>• Harness or connectors (The NATS antenna amp. circuit is open or shorted)</li> <li>• Ignition key</li> <li>• NATS antenna amp.</li> <li>• BCM</li> </ul>
P1614	NATS ANTENNA AMP	<ul style="list-style-type: none"> <li>• Inactive communication between NATS antenna amp. and BCM.</li> <li>• Ignition key is malfunctioning.</li> </ul>	

**DTC CONFIRMATION PROCEDURE****1. PERFORM DTC CONFIRMATION PROCEDURE**

1. Insert ignition key into the key cylinder.
2. Turn ignition switch ON.
3. Check "Self diagnostic result" with CONSULT-III.

**Is DTC detected?**

- YES    >> Refer to [SEC-136, "Diagnosis Procedure"](#).  
 NO    >> Inspection End.

**Diagnosis Procedure**

INFOID:0000000005259057

Regarding Wiring Diagram information, refer to [SEC-162, "Wiring Diagram - NVIS -"](#).

**1. CHECK NATS ANTENNA AMP. INSTALLATION**

Check NATS antenna amp. installation. Refer to [SEC-195, "Removal and Installation"](#).

**Is the inspection result normal?**

- YES    >> GO TO 2  
 NO    >> Reinstall NATS antenna amp. correctly.

**2. CHECK NVIS (NATS) IGNITION KEY ID CHIP**

Start engine with another registered NATS ignition key.

**Does the engine start?**

- YES    >> • Ignition key ID chip is malfunctioning.  
           • Replace the ignition key.  
           • Perform initialization with CONSULT-III.  
             For initialization, refer to "CONSULT-III Operation Manual".

- NO    >> GO TO 3


**3. CHECK POWER SUPPLY FOR NATS ANTENNA AMP.**

1. Turn ignition switch OFF.
2. Check voltage between NATS antenna amp. connector M21 terminal 1 and ground.

**1 - Ground : Battery voltage**Is the inspection result normal?

YES &gt;&gt; GO TO 4

NO &gt;&gt; Repair or replace fuse or harness.

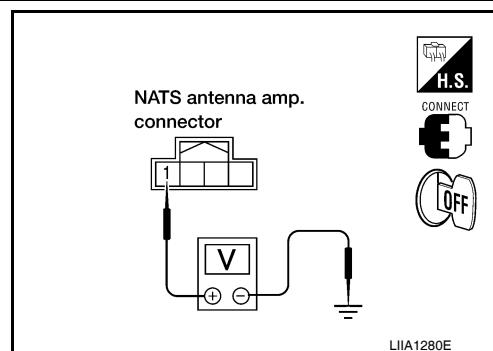**4.CHECK NATS ANTENNA AMP. GROUND LINE CIRCUIT**

1. Disconnect NATS antenna amp. connector.
2. Check continuity between NATS antenna amp. connector M21 terminal 3 and ground.


**3 - Ground : Continuity should exist.**Is the inspection result normal?

YES &gt;&gt; GO TO 5


NO &gt;&gt; • Repair or replace harness.

**NOTE:**If harness is OK, replace BCM, refer to [BCS-59](#),["Removal and Installation"](#). Perform initialization with

CONSULT-III. For initialization, refer to "CONSULT-III Operation Manual".

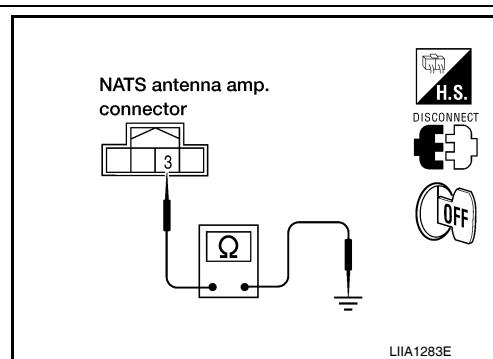**5.CHECK NATS ANTENNA AMP. SIGNAL LINE- 1**

1. Connect NATS antenna amp. connector.
2. Turn ignition switch ON.
3. Check voltage between NATS antenna amp. connector M21 terminal 2 and ground with analog tester.

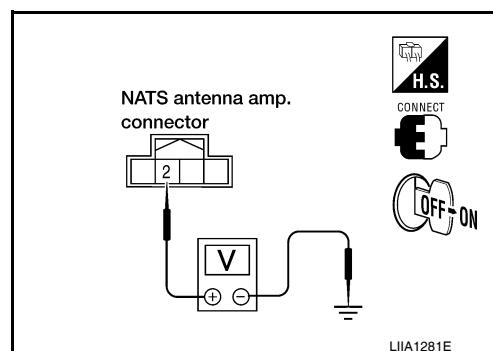

Terminals		Position of ignition key cylinder	Voltage (V) (Approx.)
( + )	( - )		
2	Ground	Before inserting ignition key	Battery voltage
		After inserting ignition key	Pointer of tester should move for approx. 30 seconds, then return to battery voltage
		Just after turning ignition switch ON	Pointer of tester should move for approx. 1 second, then return to battery voltage

Is the inspection result normal?

YES &gt;&gt; GO TO 6

NO &gt;&gt; • Repair or replace harness.


**NOTE:**If harness is OK, replace BCM, refer to [BCS-59, "Removal and Installation"](#). Perform initialization with CONSULT-III. For initialization, refer to "CONSULT-III Operation Manual".**6.CHECK NATS ANTENNA AMP. SIGNAL LINE- 2**

## B2190, P1614 NATS ANTENNA AMP.

< COMPONENT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

Check voltage between NATS antenna amp. connector M21 terminal 4 and ground with analog tester.

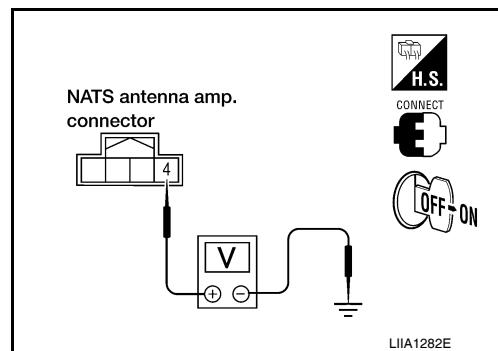

Terminals		Position of ignition key cylinder	Voltage (V) (Approx.)
( + )	( - )		
4	Ground	Before inserting ignition key	Battery voltage
		After inserting ignition key	Pointer of tester should move for approx. 30 seconds, then return to battery voltage
		Just after turning ignition switch ON	Pointer of tester should move for approx. 1 second, then return to battery voltage

Is the inspection result normal?

YES >> NATS antenna amp. is malfunctioning.

NO >> • Repair or replace harness.

**NOTE:**

If harness is OK, replace BCM, refer to [BCS-59, "Removal and Installation"](#). Perform initialization with CONSULT-III. For initialization, refer to "CONSULT-III Operation Manual".

&lt; COMPONENT DIAGNOSIS &gt;

**B2191, P1615 DIFFERENCE OF KEY****Description**

INFOID:0000000005259058

Performs ID verification through BCM when ignition knob switch is pressed.

Prohibits the release of steering lock or start of engine when an unregistered ID of mechanical key is used.

**DTC Logic**

INFOID:0000000005259059

**DTC DETECTION LOGIC**

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2191	DIFFERENCE OF KEY	The ID verification results between BCM and mechanical key are NG. The registration is necessary.	Mechanical key
P1615			

**DTC CONFIRMATION PROCEDURE****1. PERFORM DTC CONFIRMATION PROCEDURE**

1. Insert mechanical key into the key cylinder.
2. Check "Self diagnostic result" with CONSULT-III.

**Is DTC detected?**

- YES    >> Refer to [SEC-139, "Diagnosis Procedure"](#).  
NO     >> Inspection End.

**Diagnosis Procedure**

INFOID:0000000005259060

**1. PERFORM INITIALIZATION**

Perform initialization with CONSULT-III. Re-register all mechanical keys.

For initialization and registration of mechanical key. Refer to "CONSULT-III Operation Manual".

**Can the system be initialized and can the engine be started with re-registered mechanical key?**

- YES    >> Mechanical key was unregistered.  
NO     >> BCM is malfunctioning.
  - Replace BCM. Refer to [BCS-59, "Removal and Installation"](#).
  - Perform initialization again.

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

**B2192, P1611 ID DISCORD, IMMU-ECM****Description**

INFOID:0000000005259061

BCM performs the ID verification with ECM that allows the engine to start. BCM starts the communication with ECM if ignition switch is turned ON and starts the engine if the ID is OK. ECM prevents the engine from starting if the ID is not registered.

**DTC Logic**

INFOID:0000000005259062

**DTC DETECTION LOGIC****NOTE:**

- If DTC B2192 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-134, "DTC Logic"](#).
- If DTC B2192 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-135, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2192	ID DISCORD BCM-ECM	The ID verification results between BCM and ECM are NG. The registration is necessary.	• BCM • ECM
P1611			

**DTC CONFIRMATION PROCEDURE****1. PERFORM DTC CONFIRMATION PROCEDURE**

1. Turn ignition switch ON.
2. Check "Self diagnostic result" with CONSULT-III.

**Is DTC detected?**

- YES    >> Refer to [SEC-140, "Diagnosis Procedure"](#).  
NO    >> Inspection End.

**Diagnosis Procedure**

INFOID:0000000005259063

**1. PERFORM INITIALIZATION**

Perform initialization with CONSULT-III. Re-register all mechanical keys.

For initialization and registration of mechanical key. Refer to "CONSULT-III Operation Manual".

**Can the system be initialized and can the engine be started with re-registered mechanical key?**

- YES    >> ID was unregistered.  
NO    >> GO TO 2

**2. PEPLACE BCM**

1. Replace BCM. Refer to [BCS-59, "Removal and Installation"](#).
2. Perform initialization with CONSULT-III. Re-register all mechanical keys.  
For initialization and registration of mechanical key. Refer to "CONSULT-III Operation Manual".

**Can the system be initialized and can the engine be started with re-registered mechanical key?**

- YES    >> BCM is malfunctioning.  
NO    >> GO TO 3

**3. PEPLACE ECM**

1. Replace ECM. Refer to Removal and Installation.
2. Perform initialization with CONSULT-III. Re-register all mechanical keys.  
For initialization and registration of mechanical key. Refer to "CONSULT-III Operation Manual".

**Can the system be initialized and can the engine be started with re-registered mechanical key?**

- YES    >> ECM is malfunctioning.  
NO    >> GO TO 4

**4. CHECK INTERMITTENT INCIDENT**

Refer to [GI-37, "Intermittent Incident"](#).

>> Inspection End.

A

B

C

D

E

F

G

H

I

J

**SEC**

L

M

N

O

P

**B2193, P1612 CHAIN OF ECM-IMMU****Description**

INFOID:0000000005259064

BCM performs the ID verification with ECM that allows the engine to start. BCM starts the communication with ECM if ignition switch is turned ON and starts the engine if the ID is OK. ECM prevents the engine from starting if the ID is not registered.

**DTC Logic**

INFOID:0000000005259065

**DTC DETECTION LOGIC****NOTE:**

- If DTC B2193 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-134, "DTC Logic"](#).
- If DTC B2193 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-135, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2193			
P1612	CHAIN OF BCM-ECM	Inactive communication between ECM and BCM	<ul style="list-style-type: none"><li>• Harness or connectors (The CAN communication line is open or short)</li><li>• BCM</li><li>• ECM</li></ul>

**DTC CONFIRMATION PROCEDURE****1. PERFORM DTC CONFIRMATION PROCEDURE**

1. Turn ignition switch ON.
2. Check "Self diagnostic result" with CONSULT-III.

**Is DTC detected?**

YES >> Refer to [SEC-142, "Diagnosis Procedure"](#).

NO >> Inspection End.

**Diagnosis Procedure**

INFOID:0000000005259066

**1. REPLACE BCM**

1. Replace BCM. Refer to [BCS-59, "Removal and Installation"](#).
2. Perform initialization with CONSULT-III.  
For initialization, refer to "CONSULT-III Operation Manual".

**Does the engine start?**

YES >> BCM was malfunctioning.

NO >> ECM is malfunctioning.

- Replace ECM.
- Perform ECM re-communicating function.

**P1610 LOCK MODE****Description**

INFOID:0000000005259067

When the starting operation is carried more than five times consecutively under the following conditions, NATS will shift to the mode which prevents the engine from being started.

- Unregistered mechanical key is used.
- BCM or ECM's malfunctioning.

**DTC Logic**

INFOID:0000000005259068

**DTC DETECTION LOGIC**

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1610	LOCK MODE	When the starting operation is carried out five or more times consecutively under the following conditions. • Unregistered mechanical key • BCM or ECM's malfunctioning.	—

**DTC CONFIRMATION PROCEDURE****1. PERFORM DTC CONFIRMATION PROCEDURE**

1. Turn ignition switch ON.
2. Check "Self diagnostic result" with CONSULT-III.

Is DTC detected?

YES    >> Refer to [SEC-143, "Diagnosis Procedure"](#).

NO    >> Inspection End.

**Diagnosis Procedure**

INFOID:0000000005259069

**1. CHECK ENGINE START FUNCTION**

1. Perform the check for DTC except DTC P1610.
2. Use CONSULT-III to erase DTC after fixing.
3. Check that engine can start with registered mechanical key.

Does the engine start?

YES    >> Inspection End.

NO    >> GO TO 2

**2. CHECK INTERMITTENT INCIDENT**

Refer to [GI-37, "Intermittent Incident"](#).

>> Inspection End.

# POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

## POWER SUPPLY AND GROUND CIRCUIT

BCM

### BCM : Diagnosis Procedure

INFOID:000000005520621

Regarding Wiring Diagram information, refer to [BCS-50, "Wiring Diagram"](#).

#### 1. CHECK FUSES AND FUSIBLE LINK

Check that the following fuses and fusible link are not blown.

Terminal No.	Signal name	Fuses and fusible link No.
57	Battery power supply	18 (10A)
70		G (50A)
11	Ignition ACC or ON	4 (10A)
38	Ignition ON or START	1 (10A)

Is the fuse blown?


YES >> Replace the blown fuse or fusible link after repairing the affected circuit.

NO >> GO TO 2

#### 2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM.
3. Check voltage between BCM harness connector and ground.

Connector	Terminals		Power source	Condition	Voltage (V) (Approx.)
	(+)	(-)			
M18	11	Ground	ACC power supply	Ignition switch ACC or ON	Battery voltage
	38	Ground	Ignition power supply	Ignition switch ON or START	Battery voltage
M20	57	Ground	Battery power supply	Ignition switch OFF	Battery voltage
	70	Ground	Battery power supply	Ignition switch OFF	Battery voltage

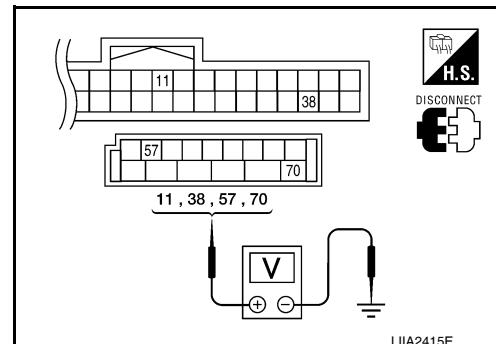

Is the measurement value normal?

YES >> GO TO 3

NO >> Repair or replace harness.

#### 3. CHECK GROUND CIRCUIT

# POWER SUPPLY AND GROUND CIRCUIT

[WITHOUT INTELLIGENT KEY SYSTEM]


< COMPONENT DIAGNOSIS >

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M20	67		Yes

Does continuity exist?

- YES >> Inspection End.  
NO >> Repair or replace harness.

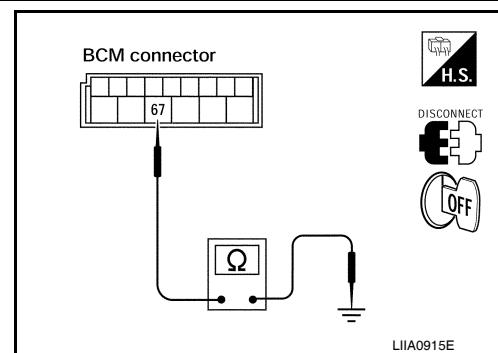

A  
B  
C  
D  
E  
F  
G  
H  
I  
J

SEC

L  
M  
N  
O  
P

# KEY CYLINDER SWITCH

[WITHOUT INTELLIGENT KEY SYSTEM]

< COMPONENT DIAGNOSIS >

## KEY CYLINDER SWITCH

### Description

INFOID:0000000005259071

The main power window and door lock/unlock switch detects condition of the door key cylinder switch and transmits to BCM as the LOCK or UNLOCK signal.

### Component Function Check

INFOID:0000000005259072

#### 1.CHECK DOOR KEY CYLINDER SWITCH INPUT SIGNAL

Check "KEY CYL LK-SW" AND "KEY CYL UN-SW" in DATA MONITOR mode for "POWER DOOR LOCK SYSTEM" with CONSULT-III.

Monitor item	Condition	
KEY CYL LK-SW	Lock	: ON
	Neutral / Unlock	: OFF
KEY CYL UN-SW	Unlock	: ON
	Neutral / Lock	: OFF

Is the inspection result normal?

YES >> Key cylinder switch is OK.

NO >> Refer to [SEC-146, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:0000000005259073

Regarding Wiring Diagram information, refer to [SEC-166, "Wiring Diagram - VEHICLE SECURITY SYSTEM"](#).

#### 1.CHECK DOOR KEY CYLINDER SWITCH LH

##### (P)With CONSULT-III

Check front door lock assembly LH (key cylinder switch) ("KEY CYL LK-SW") and ("KEY CYL UN-SW") in DATA MONITOR mode with CONSULT-III.

- When key inserted in left front key cylinder is turned to LOCK:

**KEY CYL LK-SW : ON**


- When key inserted in left front key cylinder is turned to UNLOCK:

**KEY CYL UN-SW : ON**

##### (X)Without CONSULT-III

1. Turn ignition switch OFF.
2. Check voltage between main power window and door lock/unlock switch connector D7 terminals 4, 6 and ground.

Connector	Terminals		Condition of left front key cylinder	Voltage (V) (Approx.)	
	(+)	(-)			
D7	4	Ground	Neutral/Unlock	5	
			Lock	0	
	6		Neutral/Lock	5	
			Unlock	0	

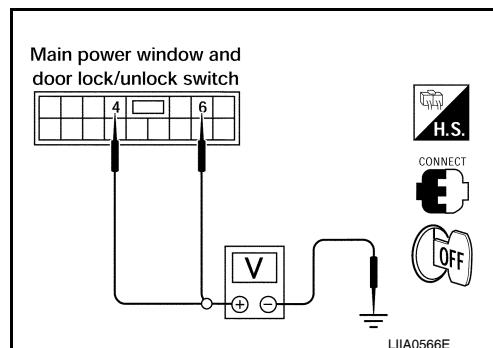

Is the inspection result normal?

# KEY CYLINDER SWITCH

[WITHOUT INTELLIGENT KEY SYSTEM]

< COMPONENT DIAGNOSIS >


YES >> Key cylinder switch signal is OK.

NO >> GO TO 2

## 2.CHECK DOOR KEY CYLINDER SWITCH LH GROUND HARNESS

1. Turn ignition switch OFF.
2. Disconnect front door lock assembly LH (key cylinder switch).
3. Check continuity between front door lock assembly LH (key cylinder switch) connector D14 terminal 4 and body ground.

Connector	Terminals	Continuity
D14	4 – Ground	Yes

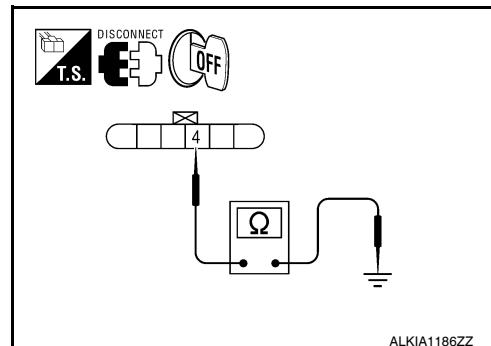

ALKIA1186ZZ

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace harness.

## 3.CHECK DOOR KEY CYLINDER SWITCH LH


Check continuity between front door lock assembly LH (key cylinder switch) terminals.

Terminals	Condition	Continuity
3 – 4	Key is turned to LOCK or neutral.	No
	Key is turned to UNLOCK.	Yes
4 – 5	Key is turned to UNLOCK or neutral.	No
	Key is turned to LOCK.	Yes

Is the inspection result normal?

YES >> GO TO 4

NO >> Replace front door lock assembly LH (key cylinder switch). Refer to [DLK-322, "Removal and Installation".](#)

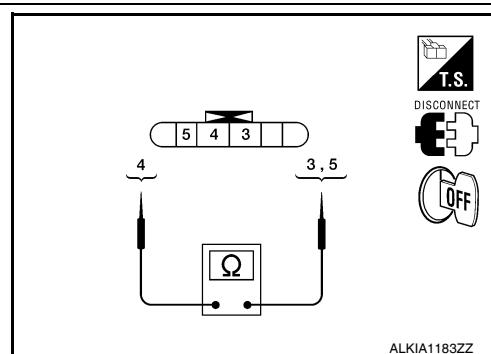


ALKIA1183ZZ

## 4.CHECK DOOR KEY CYLINDER HARNESS

Check continuity between main power window and door lock/unlock switch connector D7 (

A) terminals 4, 6 and front door lock assembly LH (key cylinder switch) connector D14 (B) terminals 3, 5 and body ground.

Connector	Terminals	Connector	Terminals	Continuity
A: Main power window and door lock/unlock switch	4	B: Front door lock assembly LH (key cylinder switch)	5	Yes
	6		3	Yes
	4, 6		Ground	No

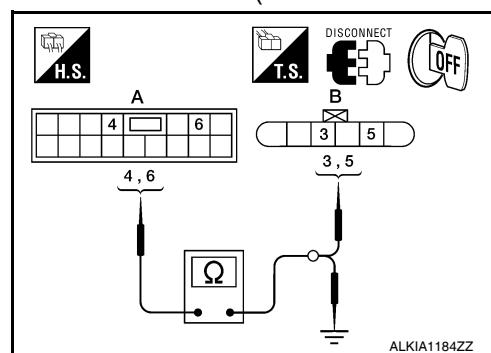

ALKIA1184ZZ

Is the inspection result normal?

YES >> Replace main power window and door lock/unlock switch.

NO >> Repair or replace harness.

# GLASS HATCH AJAR SWITCH

< COMPONENT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

## GLASS HATCH AJAR SWITCH

### Description

INFOID:0000000005259074

Detects glass hatch open/close condition.

### Component Function Check

INFOID:0000000005259075

#### 1.CHECK FUNCTION

##### With CONSULT-III

Check glass hatch switch in data monitor mode with CONSULT-III.

Monitor item	Condition
GLASS HATCH SW	CLOSE → OPEN: OFF → ON

##### Is the inspection result normal?

YES >> Glass hatch switch is OK.

NO >> Refer to [SEC-148, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:0000000005259076

Regarding Wiring Diagram information, refer to [SEC-166, "Wiring Diagram - VEHICLE SECURITY SYSTEM"](#).

#### 1.CHECK GLASS HATCH AJAR SWITCH INPUT SIGNAL

##### With CONSULT-III

Check glass hatch ajar switch "GLASS HATCH SW" in DATA MONITOR mode with CONSULT-III.

- When glass hatch is open:

**GLASS HATCH SW :ON**

- When glass hatch is closed:

**GLASS HATCH SW :OFF**

##### Without CONSULT-III


1. Turn ignition switch OFF.
2. Check voltage between BCM connector M19 terminals 42 and ground.

Connector	Item	Terminals		Condition	Voltage (V) (Approx.)
		(+)	(-)		
M19	BCM	42	Ground	Open ↓ Closed	0 ↓ Battery voltage

##### Is the inspection result normal?

YES >> Glass hatch ajar switch circuit is OK.

NO >> GO TO 2

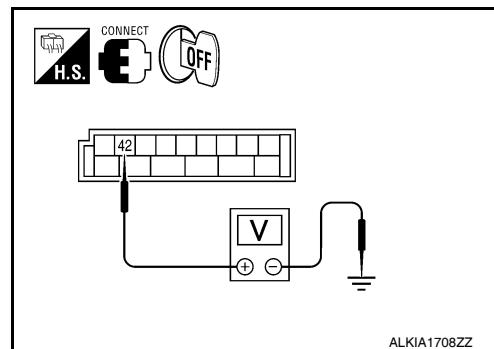

#### 2.CHECK GLASS HATCH AJAR SWITCH CIRCUIT

1. Disconnect glass hatch ajar switch and BCM.
2. Check continuity between BCM connector M19 (A) terminal 42 and glass hatch ajar switch connector D503 (B) terminal 1.

# GLASS HATCH AJAR SWITCH

< COMPONENT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

**42 - 1**

**:Continuity should exist**

3. Check continuity between BCM connector M19 (A) terminal 42 and ground.


**42 - Ground**

**:Continuity should not exist**

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace harness.

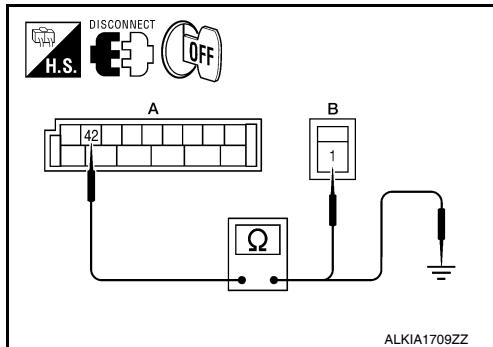

ALKIA1709ZZ

## 3.CHECK GLASS HATCH AJAR SWITCH


Check continuity between glass hatch ajar switch connector terminal 1 and ground.

	Terminals	Condition	Continuity
Glass hatch ajar switch	1 – Ground	Open	Yes
		Closed	No

Is the inspection result normal?

YES >> Refer to [GI-37, "Intermittent Incident"](#).

NO >> Replace glass hatch ajar switch.

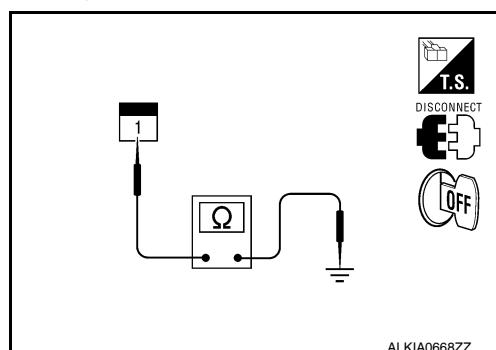

ALKIA0668ZZ

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

## HORN FUNCTION

### Symptom Table

INFOID:000000005259077

#### HAZARD AND HORN REMINDER FUNCTION MALFUNCTION

**NOTE:**

- Before performing the diagnosis in the following table, check "Work flow". Refer to [SEC-120, "Work Flow"](#).
- If the following symptoms" are detected, check systems shown in the "Diagnosis/service procedure" column in this order.

#### Conditions of Vehicle (Operating Conditions)

- "ANSWER BACK FUNCTION" is ON when setting on CONSULT-III.
- Ignition switch is in OFF position.
- All doors are closed.

Symptom	Diagnosis/service procedure	Reference page
Hazard reminder does not operate by key fob. (Horn reminder operate.)	1. Check "HAZARD ANSWER BACK" setting in "WORK SUPPORT".	<a href="#">DLK-220</a>
	2. Check hazard function.	<a href="#">EXL-4</a>
	3. Check keyfob battery inspection.	<a href="#">DLK-251</a>
Horn reminder does not operate by key fob. (Hazard reminder operate.)	1. Check "HORN WITH KEYLESS LOCK" setting in "WORK SUPPORT".	<a href="#">DLK-220</a>
	2. Check horn function.	<a href="#">HRN-4</a>
	3. Check Intermittent Incident.	<a href="#">GI-37</a>

# VEHICLE SECURITY INDICATOR

< COMPONENT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

## VEHICLE SECURITY INDICATOR

### Description

INFOID:0000000005259078

- Vehicle security indicator is built in combination meter.
- NATS (Nissan Anti-Theft System) and vehicle security system conditions are indicated by blink or illumination of vehicle security indicator.

### Component Function Check

INFOID:0000000005259079

#### 1.CHECK FUNCTION

- Perform "THEFT IND" in the "Active Test" mode with CONSULT-III.
- Check vehicle security indicator operation.

Test item		Description	
THEFT IND	ON	Vehicle security indicator	ON
	OFF		OFF

Is the inspection result normal?

YES >> Inspection End.

NO >> Refer to [SEC-151, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:0000000005259080

Regarding Wiring Diagram information, refer to [SEC-162, "Wiring Diagram - NVIS -"](#).

#### 1.SECURITY INDICATOR LAMP ACTIVE TEST

With CONSULT-III

Check "THEFT IND" in "ACTIVE TEST" mode with CONSULT-III.

Without CONSULT-III

- Disconnect BCM.
- Turn ignition switch ON.
- Check voltage between BCM harness connector M18 terminal 23 and ground.

Connector	Terminals		Condition	Voltage (V) (Approx.)
	(+)	(-)		
M18	23	Ground	ON	0
			OFF	Battery voltage

Is the inspection result normal?

YES >> Security indicator lamp is OK.

NO >> GO TO 2

#### 2.SECURITY INDICATOR LAMP CHECK

Check security indicator lamp condition.


Is the inspection result normal?

YES >> GO TO 3

NO >> Replace security indicator lamp.

#### 3.CHECK HARNESS CONTINUITY

- Turn ignition switch OFF.
- Disconnect BCM and security indicator lamp connector.

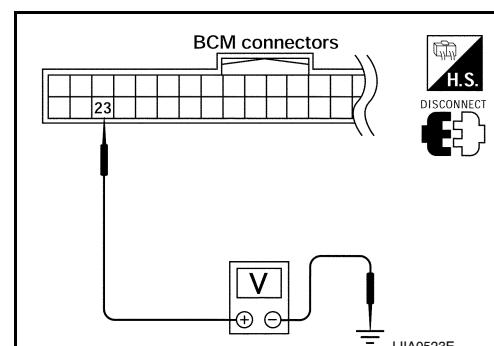

## VEHICLE SECURITY INDICATOR

[WITHOUT INTELLIGENT KEY SYSTEM]

< COMPONENT DIAGNOSIS >

3. Check continuity between BCM connector M18 (A) terminal 23 and combination meter connector M24 (B) terminal 39.

**23 - 39**

: Continuity should exist.

4. Check continuity between BCM connector M18 (A) terminal 23 and ground.

**23 - Ground**


: Continuity should not exist.

Is the inspection result normal?

YES >> Check the following:

- 10A fuse [No. 19, located in fuse block (J/B)]
- Harness for open or short between security indicator lamp and fuse

NO >> Repair or replace harness.

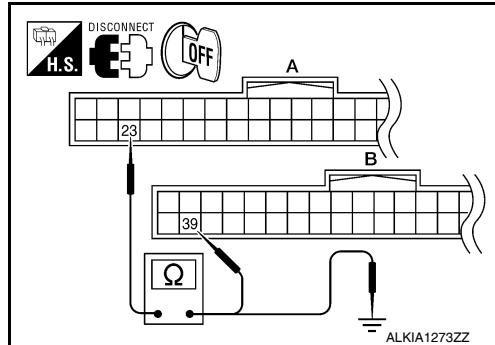

# BCM (BODY CONTROL MODULE)

[WITHOUT INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS >

## ECU DIAGNOSIS

### BCM (BODY CONTROL MODULE)

Reference Value

INFOID:000000005484823

#### VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition	Value/Status
AIR COND SW	A/C switch OFF	OFF
	A/C switch ON	ON
AUT LIGHT SYS	Outside of the room is dark	OFF
	Outside of the room is bright	ON
AUTO LIGHT SW	Lighting switch OFF	OFF
	Lighting switch AUTO	ON
BACK DOOR SW	Back door closed	OFF
	Back door opened	ON
CDL LOCK SW	Door lock/unlock switch does not operate	OFF
	Press door lock/unlock switch to the LOCK side	ON
CDL UNLOCK SW	Door lock/unlock switch does not operate	OFF
	Press door lock/unlock switch to the UNLOCK side	ON
DOOR SW-AS	Front door RH closed	OFF
	Front door RH opened	ON
DOOR SW-DR	Front door LH closed	OFF
	Front door LH opened	ON
DOOR SW-RL	Rear door LH closed	OFF
	Rear door LH opened	ON
DOOR SW-RR	Rear door RH closed	OFF
	Rear door RH opened	ON
ENGINE RUN	Engine stopped	OFF
	Engine running	ON
FR FOG SW	Front fog lamp switch OFF	OFF
	Front fog lamp switch ON	ON
FR WASHER SW	Front washer switch OFF	OFF
	Front washer switch ON	ON
FR WIPER LOW	Front wiper switch OFF	OFF
	Front wiper switch LO	ON
FR WIPER HI	Front wiper switch OFF	OFF
	Front wiper switch HI	ON
FR WIPER INT	Front wiper switch OFF	OFF
	Front wiper switch INT	ON
FR WIPER STOP	Any position other than front wiper stop position	OFF
	Front wiper stop position	ON
HAZARD SW	When hazard switch is not pressed	OFF
	When hazard switch is pressed	ON
LIGHT SW 1ST	Lighting switch OFF	OFF
	Lighting switch 1st	ON

# BCM (BODY CONTROL MODULE)

[WITHOUT INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status
HEAD LAMP SW1	Headlamp switch OFF	OFF
	Headlamp switch 1st	ON
HEAD LAMP SW2	Headlamp switch OFF	OFF
	Headlamp switch 1st	ON
HI BEAM SW	High beam switch OFF	OFF
	High beam switch HI	ON
IGN ON SW	Ignition switch OFF or ACC	OFF
	Ignition switch ON	ON
IGN SW CAN	Ignition switch OFF or ACC	OFF
	Ignition switch ON	ON
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	1 - 7
I-KEY LOCK <sup>1</sup>	LOCK button of Intelligent Key is not pressed	OFF
	LOCK button of Intelligent Key is pressed	ON
I-KEY UNLOCK <sup>1</sup>	UNLOCK button of Intelligent Key is not pressed	OFF
	UNLOCK button of Intelligent Key is pressed	ON
KEY ON SW	Mechanical key is removed from key cylinder	OFF
	Mechanical key is inserted to key cylinder	ON
KEYLESS LOCK <sup>2</sup>	LOCK button of key fob is not pressed	OFF
	LOCK button of key fob is pressed	ON
KEYLESS UNLOCK <sup>2</sup>	UNLOCK button of key fob is not pressed	OFF
	UNLOCK button of key fob is pressed	ON
OIL PRESS SW	<ul style="list-style-type: none"> <li>• Ignition switch OFF or ACC</li> <li>• Engine running</li> </ul>	OFF
	Ignition switch ON	ON
PASSING SW	Other than lighting switch PASS	OFF
	Lighting switch PASS	ON
PUSH SW <sup>1</sup>	Return to ignition switch to LOCK position	OFF
	Press ignition switch	ON
REAR DEF SW	Rear window defogger switch OFF	OFF
	Rear window defogger switch ON	ON
RR WASHER SW	Rear washer switch OFF	OFF
	Rear washer switch ON	ON
RR WIPER INT	Rear wiper switch OFF	OFF
	Rear wiper switch INT	ON
RR WIPER ON	Rear wiper switch OFF	OFF
	Rear wiper switch ON	ON
RR WIPER STOP	Rear wiper stop position	OFF
	Other than rear wiper stop position	ON
TAIL LAMP SW	Lighting switch OFF	OFF
	Lighting switch 1ST	ON
TRNK OPNR SW	When back door opener switch is not pressed	OFF
	When back door opener switch is pressed	ON
TURN SIGNAL L	Turn signal switch OFF	OFF
	Turn signal switch LH	ON

## **BCM (BODY CONTROL MODULE)**

**[WITHOUT INTELLIGENT KEY SYSTEM]**

< ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status
TURN SIGNAL R	Turn signal switch OFF	OFF
	Turn signal switch RH	ON
VEHICLE SPEED	While driving	Equivalent to speedometer reading

1: With Intelligent Key

2: With remote keyless entry system

A

B

C

D

E

F

G

H

I

J

**SEC**

L

M

N

O

P


# BCM (BODY CONTROL MODULE)

[WITHOUT INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS >

Terminal Layout

INFOID:000000005484824

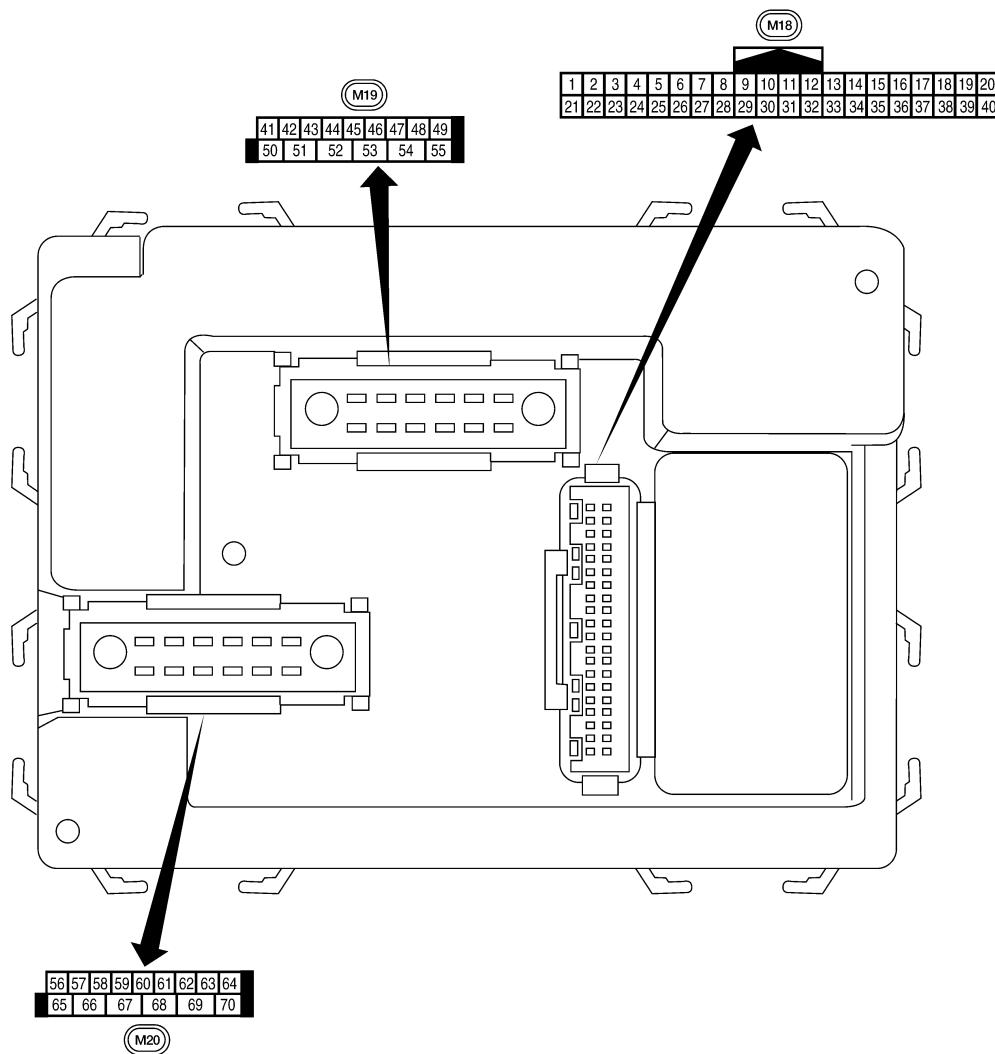

LIIA2443E


Physical Values

INFOID:000000005484825

# BCM (BODY CONTROL MODULE)

[WITHOUT INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS >

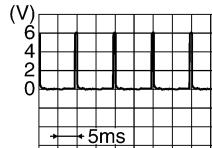Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
1	BR	Ignition keyhole illumination	Output	OFF	Door is locked (SW OFF)	Battery voltage
					Door is unlocked (SW ON)	0V
2	P	Combination switch input 5	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
3	SB	Combination switch input 4	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
4	V	Combination switch input 3	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
5	L	Combination switch input 2	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
6	R	Combination switch input 1				
9	Y	Rear window defogger switch	Input	ON	Rear window defogger switch ON	0V
					Rear window defogger switch OFF	5V
11	G/B	Ignition switch (ACC or ON)	Input	ACC or ON	Ignition switch ACC or ON	Battery voltage
12	LG	Front door switch RH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
13	L	Rear door switch RH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
15	W	Tire pressure warning check connector	Input	OFF	—	5V
18	BR	Remote keyless entry receiver and optical sensor (ground)	Output	OFF	—	0V

A

B

C

D

E

F

G

H

I

SEC

L

M

N




O

P

# BCM (BODY CONTROL MODULE)

[WITHOUT INTELLIGENT KEY SYSTEM]





< ECU DIAGNOSIS >

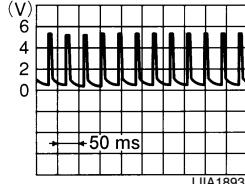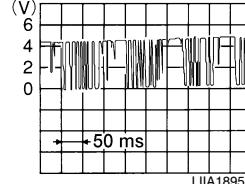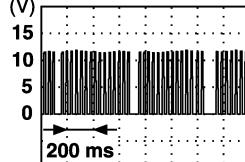Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
19	V	Remote keyless entry receiver (power supply)	Output	OFF	Ignition switch OFF	 LIA1893E
20	G	Remote keyless entry receiver (signal)	Input	OFF	Stand-by (keyfob buttons released)	 LIA1894E
					When remote keyless entry receiver receives signal from keyfob (keyfob buttons pressed)	 LIA1895E
21	GR	NATS antenna amp.	Input	OFF → ON	Ignition switch (OFF → ON)	Just after turning ignition switch ON: Pointer of tester should move for approx. 1 second, then return to battery voltage.
22	V	BUS	—	—	Ignition switch ON or power window timer operates	 PIA2344E
23	G	Security indicator lamp	Output	OFF	Goes OFF → illuminates (Every 2.4 seconds)	Battery voltage → 0V
25	BR	NATS antenna amp.	Input	OFF → ON	Ignition switch (OFF → ON)	Just after turning ignition switch ON: Pointer of tester should move for approx. 1 second, then return to battery voltage.
27	W	Compressor ON signal	Input	ON	A/C switch OFF	5V
					A/C switch ON	0V
28	LG	Front blower monitor	Input	ON	Front blower motor OFF	Battery voltage
					Front blower motor ON	0V
29	G	Hazard switch	Input	OFF	ON	0V
					OFF	5V
30 <sup>1</sup>	G	Back door opener switch	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
30 <sup>2</sup>	SB	Back door opener switch	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage

# BCM (BODY CONTROL MODULE)

[WITHOUT INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS >

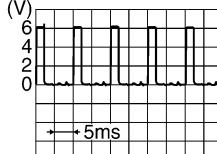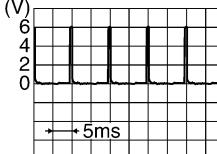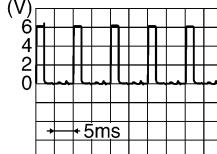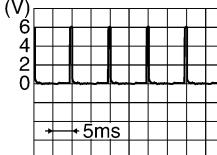Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
32	O	Combination switch output 5	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
33	GR	Combination switch output 4	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
34	G	Combination switch output 3	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
35	BR	Combination switch output 2	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
36	LG	Combination switch output 1				
37 <sup>1</sup>	B	Key switch and key lock solenoid	Input	OFF	Key inserted	Battery voltage
					Key inserted	0V
37 <sup>2</sup>	B	Key switch and ignition knob switch	Input	OFF	Intelligent Key inserted	Battery voltage
					Intelligent Key inserted	0V
38	W/R	Ignition switch (ON)	Input	ON	—	Battery voltage
39	L	CAN-H	—	—	—	—
40	P	CAN-L	—	—	—	—
42	LG	Glass hatch ajar switch	Input	ON	Glass hatch open	0V
					Glass hatch closed	Battery voltage
43	P	Back door latch switch	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N



O

P

# BCM (BODY CONTROL MODULE)

[WITHOUT INTELLIGENT KEY SYSTEM]



< ECU DIAGNOSIS >

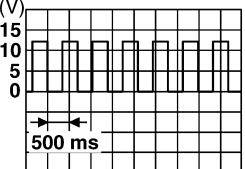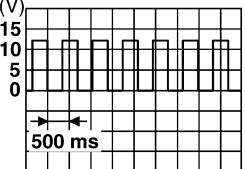Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
44	O	Rear wiper auto stop switch	Input	ON	Rise up position (rear wiper arm on stopper)	0V
					A Position (full clockwise stop position)	Battery voltage
					Forward sweep (counterclockwise direction)	Fluctuating
					B Position (full counterclockwise stop position)	0V
					Reverse sweep (clockwise direction)	Fluctuating
47	GR	Front door switch LH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
48	P	Rear door switch LH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
49	L	Cargo lamp	Output	OFF	Any door open (ON)	0V
					All doors closed (OFF)	Battery voltage
51	O	Trailer turn signal (right)	Output	ON	Turn right ON	 SKIA3009J
52	LG	Trailer turn signal (left)	Output	ON	Turn left ON	 SKIA3009J
53	L	Back door latch actuator	Output	OFF	OFF	0
					ON	Battery voltage
55	W	Rear wiper output circuit 1	Output	ON	OFF	0
					ON	Battery voltage
56	R/Y	Battery saver output	Output	OFF	30 minutes after ignition switch is turned OFF	0V
					—	Battery voltage
57	R/Y	Battery power supply	Input	OFF	—	Battery voltage
58	W	Optical sensor	Input	ON	When optical sensor is illuminated	3.1V or more
					When optical sensor is not illuminated	0.6V or less
59	GR	Front door lock assembly LH actuator (unlock)	Output	OFF	OFF (neutral)	0V
					ON (unlock)	Battery voltage

# BCM (BODY CONTROL MODULE)

**[WITHOUT INTELLIGENT KEY SYSTEM]**

< ECU DIAGNOSIS >

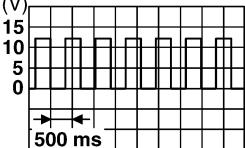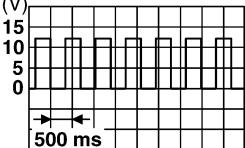Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
60	LG	Turn signal (left)	Output	ON	Turn left ON	 SKIA3009J
61	G	Turn signal (right)	Output	ON	Turn right ON	 SKIA3009J
63	BR	Interior room/map lamp	Output	OFF	Any door switch	0V
					ON (open)	Battery voltage
65	V	All door lock actuators (lock)	Output	OFF	OFF (neutral)	0V
					ON (lock)	Battery voltage
66	L	Front door lock actuator RH, rear door lock actuators LH/RH and glass hatch lock actuator (unlock)	Output	OFF	OFF (neutral)	0V
					ON (unlock)	Battery voltage
67	B	Ground	Input	ON	—	0V
68	O	Power window power supply (RAP)	Output	—	Ignition switch ON	Battery voltage
					Within 45 seconds after ignition switch OFF	Battery voltage
					More than 45 seconds after ignition switch OFF	0V
					When front door LH or RH is open or power window timer operates	0V
69	L	Power window power supply	Output	—	—	Battery voltage
70	W	Battery power supply	Input	OFF	—	Battery voltage

1: With remote keyless entry system

2: With Intelligent Key system

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

# BCM (BODY CONTROL MODULE)


[WITHOUT INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS >

Wiring Diagram - NVIS -

INFOID:0000000005259084

## NVIS - WITHOUT INTELLIGENT KEY SYSTEM

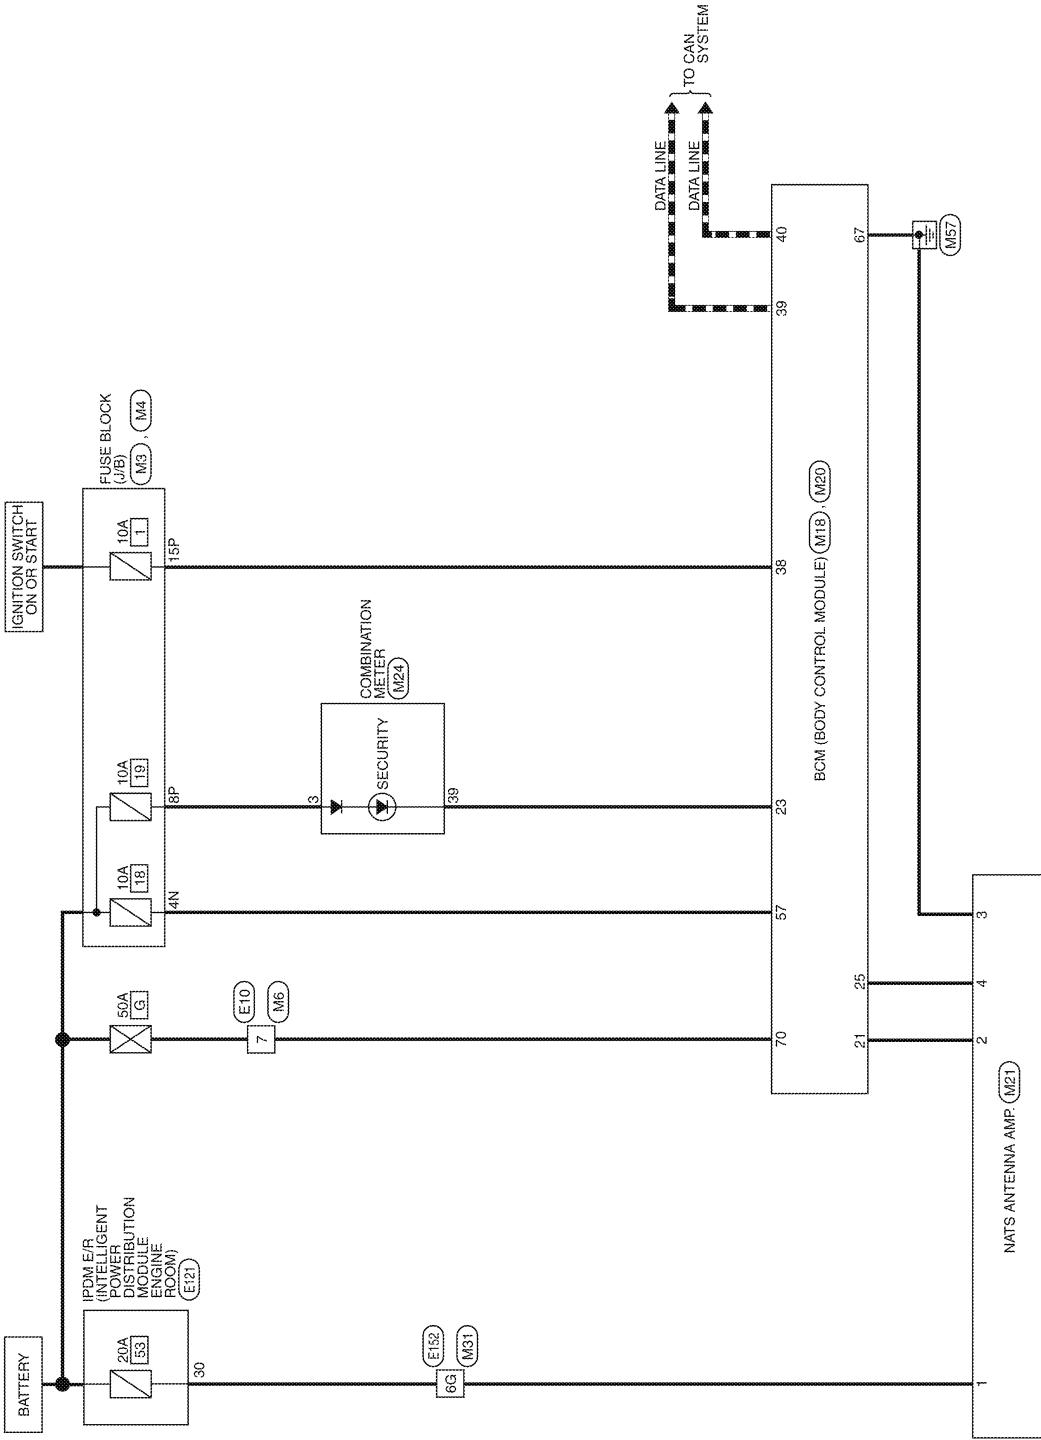

ABKWA0602GB



# BCM (BODY CONTROL MODULE)

[WITHOUT INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS >

## NVIS CONNECTORS - WITHOUT INTELLIGENT KEY SYSTEM

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
4N	R/Y	-
15P	W/R	-

Terminal No.	Color of Wire	Signal Name
8P	R/Y	-
15P	W/R	-


Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE




Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
7	W	-
-	-	-

Connector No.	M21
Connector Name	NATS ANTENNA AMP.
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R/B	VB (12V)
2	G/R	CLOCK
3	B	GND
4	BR	RX,TX

Terminal No.	Color of Wire	Signal Name
57	R/Y	BAT (FUSE)
67	B	GND (POWER)
70	W	BAT (F/L)

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

21	GR	IMMOBILIZER ANTENNA SIG (CLOCK)
23	G	SECURITY INDICATOR OUTPUT
25	BR	IMMOBILIZER ANTENNA SIG (TX,RX)
38	W/R	IGN SW
39	L	CAN-H
40	P	CAN-L

SEC

P

Z

O

L


A B C D E F G H I J K L M N P Q R S T

# BCM (BODY CONTROL MODULE)

[WITHOUT INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS >

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE

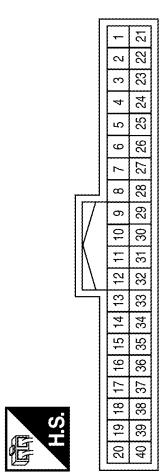


Connector No.	E10
Connector Name	WIRE TO WIRE
Connector Color	WHITE


# BCM (BODY CONTROL MODULE)

[WITHOUT INTELLIGENT KEY SYSTEM]

Terminal No.	Color of Wire	Signal Name
6G	R/B	-

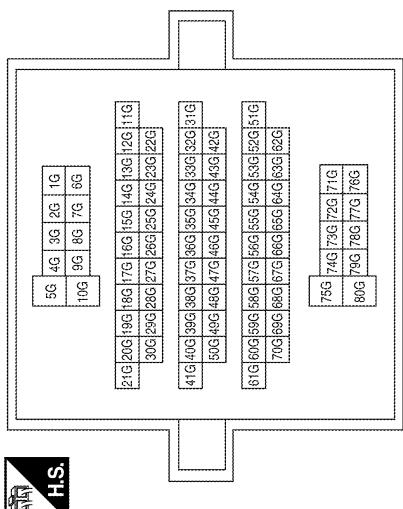

Connector No.	E121
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
30	R/B	ECM_BAT


ABKIA1764GB

# BCM (BODY CONTROL MODULE)

[WITHOUT INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS >

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

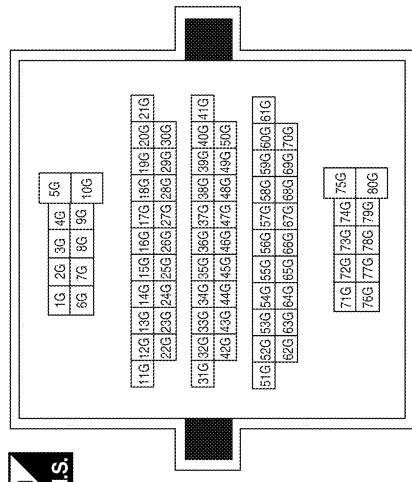

Terminal No.	Color of Wire	Signal Name
6G	R/B	-

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

ABKIA1849GB


# BCM (BODY CONTROL MODULE)

[WITHOUT INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS >

## Wiring Diagram - VEHICLE SECURITY SYSTEM

INFO ID: 0000000005259085

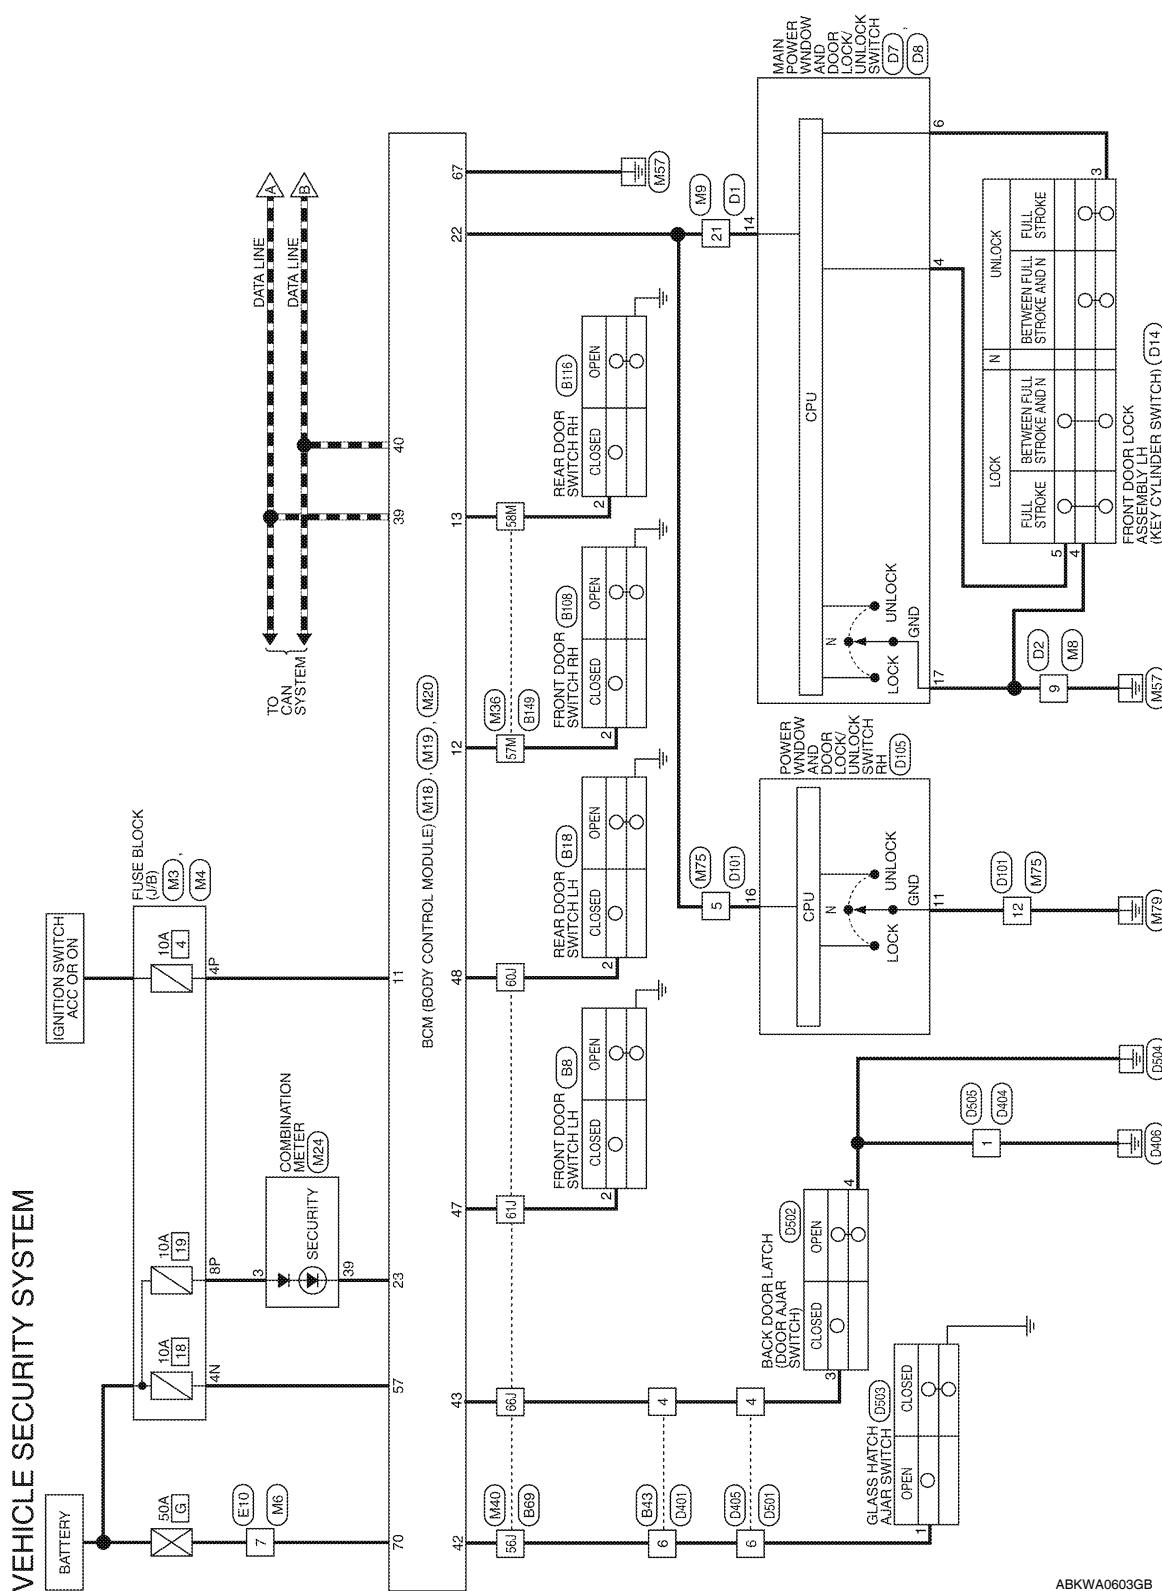


ABKWA0603GB

# BCM (BODY CONTROL MODULE)

[WITHOUT INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS >

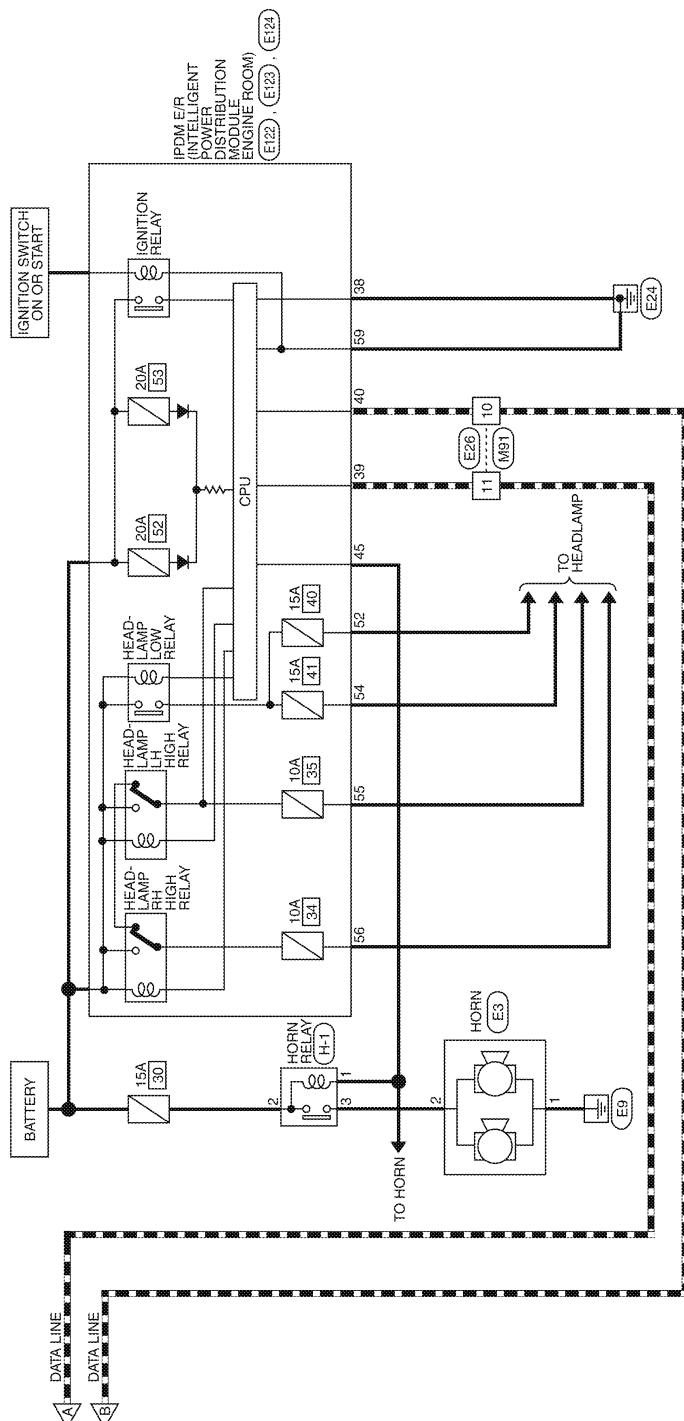



ABKWA0604GB



# BCM (BODY CONTROL MODULE)

[WITHOUT INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS >

## VEHICLE SECURITY SYSTEM CONNECTORS

Connector No.	M3	Connector No.	M4
Connector Name	FUSE BLOCK (J/B)	Connector Name	WIRE TO WIRE
Connector Color	WHITE	Connector Color	WHITE
			
			
Terminal No.	Color of Wire	Terminal No.	Color of Wire
4N	R/Y	4P	G/B
	—		—
21	V	8P	R/Y
	—		—

Connector No.	M6	Connector No.	M18
Connector Name	FUSE BLOCK (J/B)	Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE	Connector Color	WHITE
			
			
Terminal No.	Color of Wire	Terminal No.	Color of Wire
9	B	21	V
	—		—
22	V	23	G
	—		—
24	P	39	L
	—		CAN-H
25	G	40	P
	—		CAN-L

Terminal No.	Color of Wire	Signal Name	Signal Name
1	2	3	4
2	1	5	6
3	4	7	8
4	6	9	10
5	7	11	12
6	8	13	14
7	9	15	16
8	10	17	18
9	11	19	20
10	12	21	22
11	13	23	24
12	14	25	26
13	15	27	28
14	16	29	30
15	17	31	32
16	18	33	34
17	19	35	36
18	20	37	38
19	21	39	40
20	22		


ABKIA1765GB

# BCM (BODY CONTROL MODULE)

[WITHOUT INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS >

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
57	R/Y	BAT (FUSE)
67	B	GND (POWER)
70	W	BAT (F/L)
3	R/Y	BATTERY
39	G	SECURITY

A

B

C

D

E

F

G

H

I

J

SEC

K

L


M

N

O

P


Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
42	LG	GLASS HATCH SW
43	P	BACK DOOR SW
47	GR	DOOR SW (DR)
48	P	DOOR SW (RL)



Terminal No.	Color of Wire	Signal Name
57M	LG	..
58M	L	..

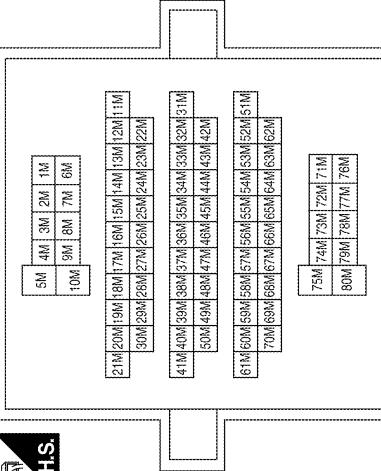

Connector No.	M36
Connector Name	WIRE TO WIRE
Connector Color	WHITE




ABKIA1766GB

# BCM (BODY CONTROL MODULE)

[WITHOUT INTELLIGENT KEY SYSTEM]


< ECU DIAGNOSIS >

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
56J	LG	-
60J	P	-
61J	GR	-
66J	P	-

Terminal No.	Color of Wire	Signal Name
5	V	-
12	B	-



Terminal No.	Color of Wire	Signal Name
7	W	-
12	B	-

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	WHITE

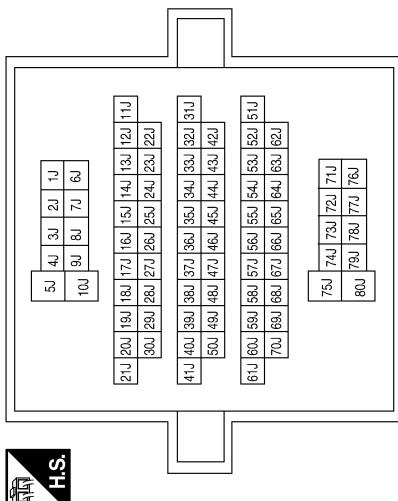



Connector No.	E3
Connector Name	HORN
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	B	-
2	G	-

Terminal No.	Color of Wire	Signal Name
7	W	-
12	B	-

Connector No.	M91
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	P	-
2	L	-

# BCM (BODY CONTROL MODULE)


[WITHOUT INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS >

Connector No.	E123	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	
Connector Color	BROWN	



Connector No.	E122	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	
Connector Color	WHITE	




Terminal No.	Color of Wire	Signal Name	Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)	52	P	H/LAMP LO LH
39	L	CAN-H	54	R	H/LAMP LO RH
40	P	CAN-L	55	G	H/LAMP HI LH
45	LG	ANT THEFT HORN	56	L	H/LAMP HI RH

Terminal No.	Color of Wire	Signal Name
52	P	H/LAMP LO LH
54	R	H/LAMP LO RH
55	G	H/LAMP HI LH
56	L	H/LAMP HI RH



Connector No.	E26	WIRE TO WIRE
Connector Name	WIRE TO WIRE	
Connector Color	WHITE	



Terminal No.	Color of Wire	Signal Name
10	P	—
11	L	—

Connector No.	E124	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	
Connector Color	BLACK	



Terminal No.	Color of Wire	Signal Name
2	GR	—

Signal Name  
—

Terminal No.	Color of Wire	Signal Name
2	P	—

Signal Name  
—

A B C D E F G H I J K L M O P SEC

ABKIA1767GB

# BCM (BODY CONTROL MODULE)

[WITHOUT INTELLIGENT KEY SYSTEM]


< ECU DIAGNOSIS >

Terminal No.	Color of Wire	Signal Name
56J	LG	—
60J	P	—
61J	GR	—
66J	P	—

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
4	P	—
6	LG	—

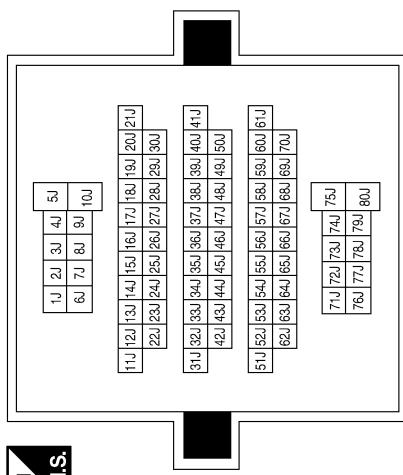

Connector No.	B116
Connector Name	REAR DOOR SWITCH RH
Connector Color	WHITE



Connector No.	B108
Connector Name	FRONT DOOR SWITCH RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	L	—


ABKIA0339GB

# BCM (BODY CONTROL MODULE)


[WITHOUT INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS >

Connector No.	D2
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Connector No.	D1
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
21	V	-

Terminal No.	Color of Wire	Signal Name
21	V	-

Terminal No.	Color of Wire	Signal Name
9	B	-

Terminal No.	Color of Wire	Signal Name
9	B	-



Terminal No.	Color of Wire	Signal Name
6	R/W	-
4	SB	KEY CYL LOCK SW
14	V	POWER WINDOW SERIAL LINK

Terminal No.	Color of Wire	Signal Name
6	R/W	-
4	SB	KEY CYL UNLOCK SW
14	V	POWER WINDOW SERIAL LINK

ABKIA0340B


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P  
SEC  
Z  
M  
L  
O  
P

# BCM (BODY CONTROL MODULE)

[WITHOUT INTELLIGENT KEY SYSTEM]


< ECU DIAGNOSIS >

Connector No.	D401
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
4	P	—
6	LG	—

Terminal No.	Color of Wire	Signal Name
4	P	—
6	LG	—




Connector No.	D105
Connector Name	POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
11	B	GND
16	V	POWER WINDOW SERIAL LINK

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
5	V	—
12	B	—

Terminal No.	Color of Wire	Signal Name
4	P	—
6	LG	—



Terminal No.	Color of Wire	Signal Name
4	P	—
6	LG	—

Terminal No.	Color of Wire	Signal Name
4	P	—
6	LG	—




# BCM (BODY CONTROL MODULE)

[WITHOUT INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS >

Connector No.	D505
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	B	--
2	W	--

Connector No.	D503
Connector Name	GLASS HATCH AJAR SWITCH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	LG	--
2	LG	--

Connector No.	D502
Connector Name	BACK DOOR LATCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	P	--
4	BR	--

Connector No.	H-1
Connector Name	FUSE AND FUSIBLE LINK BOX (HORN RELAY)
Connector Color	--

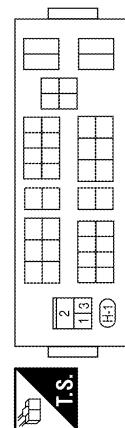

Terminal No.	Color of Wire	Signal Name
1	BR	--
2	O	--
3	G	--

ABKIA1771GB

INFOID:0000000005484826

## Fail Safe

### Fail-safe index

BCM performs fail-safe control when any DTC listed below is detected.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P  
SEC

# BCM (BODY CONTROL MODULE)

[WITHOUT INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS >

Display contents of CONSULT	Fail-safe	Cancellation
U1000: CAN COMM CIRCUIT	Inhibit engine cranking	When the BCM re-establishes communication with the other modules.

## DTC Inspection Priority Chart

INFOID:000000005484827

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	<ul style="list-style-type: none"><li>• U1000: CAN COMM CIRCUIT</li></ul>
2	<ul style="list-style-type: none"><li>• B2190: NATS ANTENNA AMP</li><li>• B2191: DIFFERENCE OF KEY</li><li>• B2192: ID DISCORD BCM-ECM</li><li>• B2193: CHAIN OF BCM-ECM</li><li>• B2013: STRG COMM 1</li><li>• B2552: INTELLIGENT KEY</li><li>• B2590: NATS MALFUNCTION</li></ul>
3	<ul style="list-style-type: none"><li>• C1729: VHCL SPEED SIG ERR</li><li>• C1735: IGNITION SIGNAL</li></ul>
4	<ul style="list-style-type: none"><li>• C1704: LOW PRESSURE FL</li><li>• C1705: LOW PRESSURE FR</li><li>• C1706: LOW PRESSURE RR</li><li>• C1707: LOW PRESSURE RL</li><li>• C1708: [NO DATA] FL</li><li>• C1709: [NO DATA] FR</li><li>• C1710: [NO DATA] RR</li><li>• C1711: [NO DATA] RL</li><li>• C1712: [CHECKSUM ERR] FL</li><li>• C1713: [CHECKSUM ERR] FR</li><li>• C1714: [CHECKSUM ERR] RR</li><li>• C1715: [CHECKSUM ERR] RL</li><li>• C1716: [PRESSDATA ERR] FL</li><li>• C1717: [PRESSDATA ERR] FR</li><li>• C1718: [PRESSDATA ERR] RR</li><li>• C1719: [PRESSDATA ERR] RL</li><li>• C1720: [CODE ERR] FL</li><li>• C1721: [CODE ERR] FR</li><li>• C1722: [CODE ERR] RR</li><li>• C1723: [CODE ERR] RL</li><li>• C1724: [BATT VOLT LOW] FL</li><li>• C1725: [BATT VOLT LOW] FR</li><li>• C1726: [BATT VOLT LOW] RR</li><li>• C1727: [BATT VOLT LOW] RL</li></ul>

## DTC Index

INFOID:000000005484828

### NOTE:

- Details of time display
- CRNT: Displays when there is a malfunction now or after returning to the normal condition until turning ignition switch OFF → ON again.
  - 1 - 39: Displayed if any previous malfunction is present when current condition is normal. It increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The counter remains at 39 even if the number of cycles exceeds it. It is counted from 1 again when turning ignition switch OFF → ON after returning to the normal condition if the malfunction is detected again.

# BCM (BODY CONTROL MODULE)

**[WITHOUT INTELLIGENT KEY SYSTEM]**

< ECU DIAGNOSIS >

CONSULT display	Fail-safe	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
No DTC is detected. further testing may be required.	—	—	—	—
U1000: CAN COMM CIRCUIT	—	—	—	<a href="#">BCS-33</a>
B2013: STRG COMM 1	—	—	—	<a href="#">SEC-29</a>
B2190: NATS ANTENNA AMP	—	—	—	<a href="#">SEC-32</a> (with I-Key), <a href="#">SEC-136</a> (without I-Key)
B2191: DIFFERENCE OF KEY	—	—	—	<a href="#">SEC-35</a> (with I-Key), <a href="#">SEC-139</a> (without I-Key)
B2192: ID DISCORD BCM-ECM	—	—	—	<a href="#">SEC-36</a> (with I-Key), <a href="#">SEC-140</a> (without I-Key)
B2193: CHAIN OF BCM-ECM	—	—	—	<a href="#">SEC-38</a> (with I-Key), <a href="#">SEC-142</a> (without I-Key)
B2552: INTELLIGENT KEY	—	—	—	<a href="#">SEC-40</a>
B2590: NATS MALFUNCTION	—	—	—	<a href="#">SEC-41</a>
C1708: [NO DATA] FL	—	—	—	<a href="#">WT-14</a>
C1709: [NO DATA] FR	—	—	—	<a href="#">WT-14</a>
C1710: [NO DATA] RR	—	—	—	<a href="#">WT-14</a>
C1711: [NO DATA] RL	—	—	—	<a href="#">WT-14</a>
C1712: [CHECKSUM ERR] FL	—	—	—	<a href="#">WT-16</a>
C1713: [CHECKSUM ERR] FR	—	—	—	<a href="#">WT-16</a>
C1714: [CHECKSUM ERR] RR	—	—	—	<a href="#">WT-16</a>
C1715: [CHECKSUM ERR] RL	—	—	—	<a href="#">WT-16</a>
C1716: [PRESSDATA ERR] FL	—	—	—	<a href="#">WT-18</a>
C1717: [PRESSDATA ERR] FR	—	—	—	<a href="#">WT-18</a>
C1718: [PRESSDATA ERR] RR	—	—	—	<a href="#">WT-18</a>
C1719: [PRESSDATA ERR] RL	—	—	—	<a href="#">WT-18</a>
C1720: [CODE ERR] FL	—	—	—	<a href="#">WT-16</a>
C1721: [CODE ERR] FR	—	—	—	<a href="#">WT-16</a>
C1722: [CODE ERR] RR	—	—	—	<a href="#">WT-16</a>
C1723: [CODE ERR] RL	—	—	—	<a href="#">WT-16</a>
C1724: [BATT VOLT LOW] FL	—	—	—	<a href="#">WT-16</a>
C1725: [BATT VOLT LOW] FR	—	—	—	<a href="#">WT-16</a>
C1726: [BATT VOLT LOW] RR	—	—	—	<a href="#">WT-16</a>
C1727: [BATT VOLT LOW] RL	—	—	—	<a href="#">WT-16</a>
C1729: VHCL SPEED SIG ERR	—	—	—	<a href="#">WT-19</a>
C1735: IGNITION SWITCH	—	—	—	—

A

B

C

D

E

F

G

H

J

SEC

L

M

N

O

P

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## Reference Value

INFOID:000000005484829

### VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition	Value/Status
MOTOR FAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc. 0 - 100 %
AC COMP REQ	A/C switch OFF	OFF
	A/C switch ON	ON
TAIL&CLR REQ	Lighting switch OFF	OFF
	Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated)	ON
HL LO REQ	Lighting switch OFF	OFF
	Lighting switch 2ND HI or AUTO (Light is illuminated)	ON
HL HI REQ	Lighting switch OFF	OFF
	Lighting switch HI	ON
FR FOG REQ	Lighting switch 2ND or AUTO (Light is illuminated)	Front fog lamp switch OFF OFF
		• Front fog lamp switch ON • Daytime light activated (Canada only) ON
FR WIP REQ	Ignition switch ON	Front wiper switch OFF STOP
		Front wiper switch INT 1LOW
		Front wiper switch LO LOW
		Front wiper switch HI HI
WIP AUTO STOP	Ignition switch ON	Front wiper stop position STOP P
		Any position other than front wiper stop position ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally OFF
		Front wiper stops at fail-safe operation BLOCK
ST RLY REQ	Ignition switch OFF or ACC	OFF
		ON
IGN RLY	Ignition switch START	OFF
		ON
RR DEF REQ	Rear defogger switch OFF	OFF
		ON
OIL P SW	Ignition switch OFF, ACC or engine running	Open
		Close
DTRL REQ	Daytime light system requested OFF with CONSULT-III.	OFF
		ON
THFT HRN REQ	Not operated  • Panic alarm is activated • Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM	OFF
		ON


**IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)  
< ECU DIAGNOSIS > [WITHOUT INTELLIGENT KEY SYSTEM]**

Monitor Item	Condition	Value/Status
HORN CHIRP	Not operated	OFF
	Door locking with keyfob or Intelligent Key (if equipped) (horn chirp mode)	ON

**Terminal Layout**

INFOID:000000005484830


**TERMINAL LAYOUT —TYPE A**

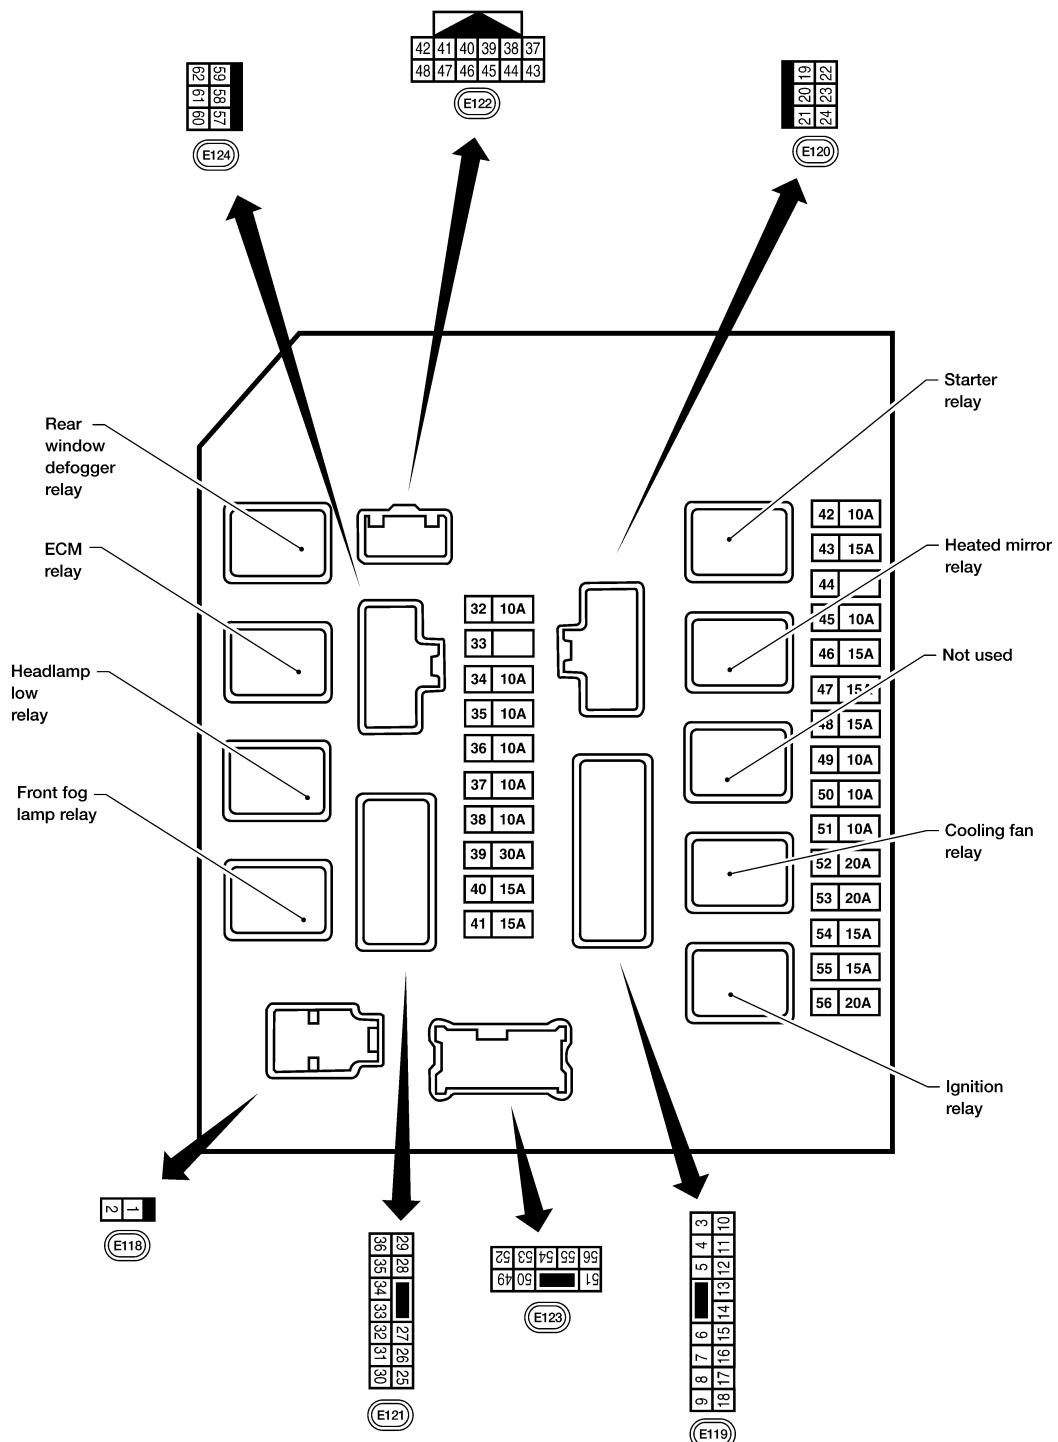

**IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)**  
**[WITHOUT INTELLIGENT KEY SYSTEM]**

< ECU DIAGNOSIS >

TERMINAL LAYOUT — TYPE B

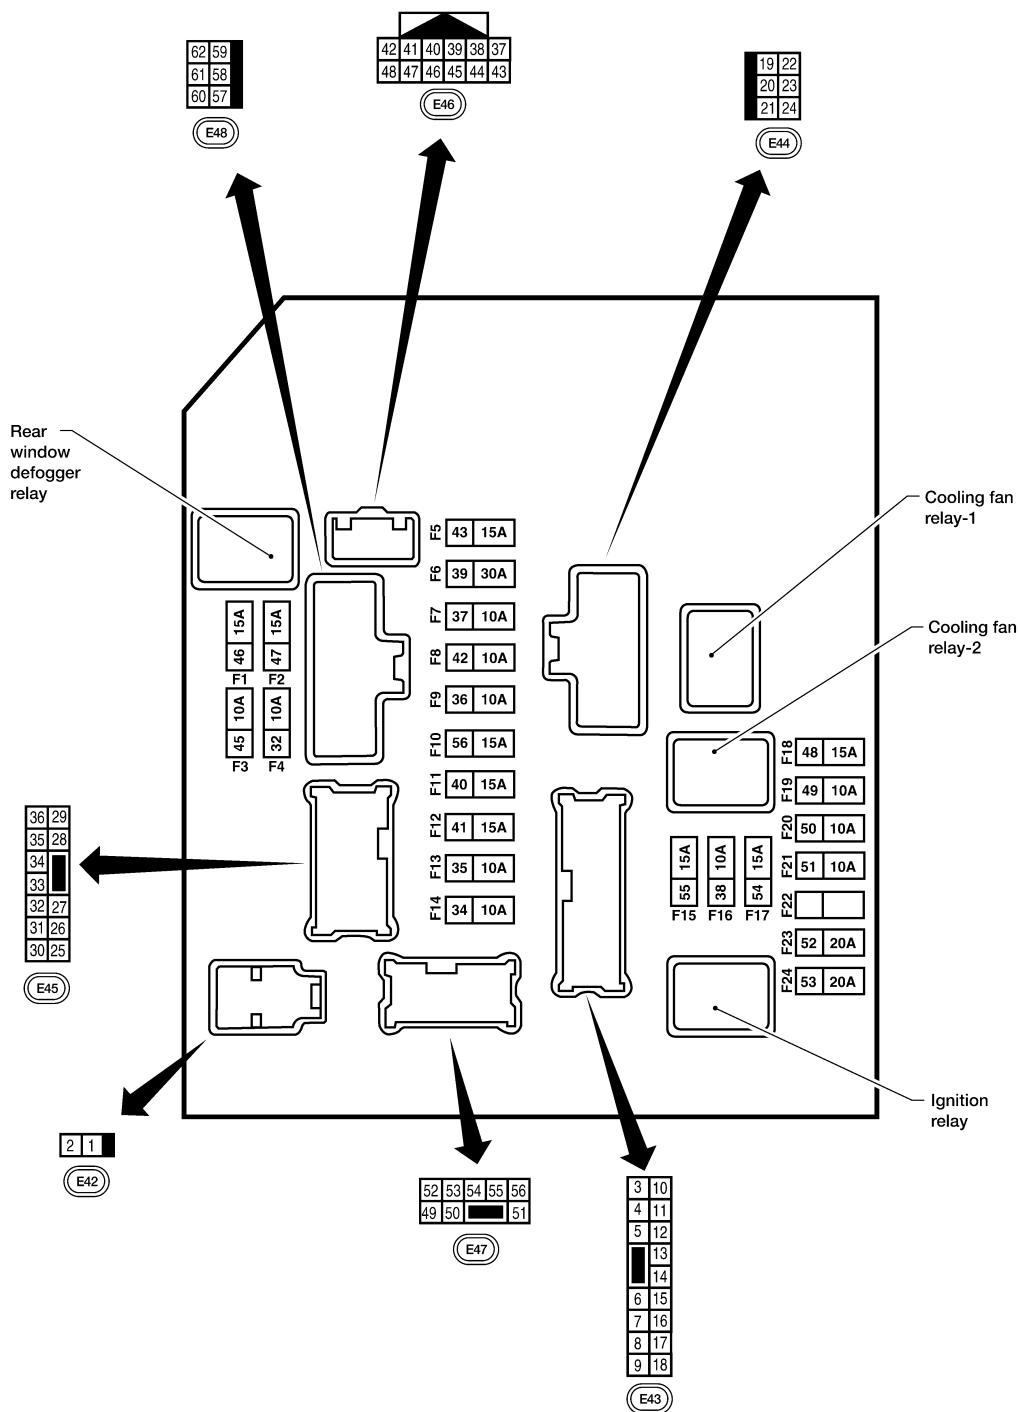

**NOTE:**

Numbers preceded by an "F" represent the fuse numbers imprinted on the IPDM E/R. The other numbers represent the fuse numbers as they appear in the wiring diagrams.

AAMIA0364GB

**Physical Values**

INFOID:0000000005484831




**PHYSICAL VALUES**

**IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)**  
**< ECU DIAGNOSIS >** **[WITHOUT INTELLIGENT KEY SYSTEM]**

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)
				Ignition switch	Operation or condition	
1	W	Battery power supply	Input	OFF	—	Battery voltage
2	R	Battery power supply	Input	OFF	—	Battery voltage
3	G	ECM relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
4	P	ECM relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
6	V	Throttle control motor relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
7	BR	ECM relay control	Input	—	Ignition switch ON or START	0V
					Ignition switch OFF or ACC	Battery voltage
8	W/R	Fuse 54	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
10	R/B	Fuse 45	Output	ON	Daytime light system active	0V
					Daytime light system inactive	Battery voltage
11	Y	A/C compressor	Output	ON or START	A/C switch ON or defrost A/C switch	Battery voltage
					A/C switch OFF or defrost A/C switch	0V
12	W/G	Ignition switch supplied power	Input	—	OFF or ACC	0V
					ON or START	Battery voltage
13	R	Fuel pump relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
14	W/G	Fuse 49	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
15	W/R	Fuse 50 (ABS)	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
16	W/G	Fuse 51	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
17	W/G	Fuse 55	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
19	W	Starter motor	Output	START	—	Battery voltage
20	BR	Cooling fan motor (low)	Output	ON or START	—	Battery voltage
21	GR	Ignition switch supplied power	Input	—	OFF or ACC	0V
					START	Battery voltage
22	G	Battery power supply	Output	OFF	—	Battery voltage
23	LG	Door mirror defogger output signal	Output	—	When rear defogger switch is ON	Battery voltage
					When raker defogger switch is OFF	0V

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
**SEC**  
L  
M  
N  
O  
P

**IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)**  
**<ECU DIAGNOSIS> [WITHOUT INTELLIGENT KEY SYSTEM]**

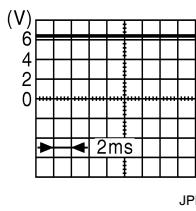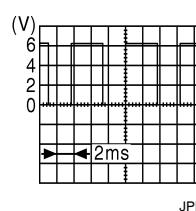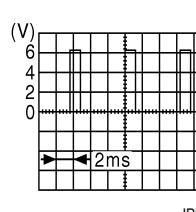Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)
				Ignition switch	Operation or condition	
24	P	Cooling fan motor (high)	Output	—	Conditions correct for cooling fan operation	Battery voltage
					Conditions not correct for cooling fan operation	0V
27	W	Fuse 38	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
28	R	LH front parking and front side marker lamp	Output	OFF	Lighting switch 1st position	OFF 0V
					ON	Battery voltage
29	G	Trailer tow relay	Output	ON	Lighting switch 1st position	OFF 0V
					ON	Battery voltage
30	R/B	Fuse 53	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
32	GR	Wiper low speed signal	Output	ON or START	Wiper switch	OFF Battery voltage
					LO or INT	0V
35	L	Wiper high speed signal	Output	ON or START	Wiper switch	OFF, LO, INT Battery voltage
					HI	0V
37	Y	Power generation command signal	Output	—	Ignition switch ON	(V)  6.3 V JPMIA0001GB
					40% is set on "Active test," "ALTERNATOR DUTY" of "ENGINE"	(V)  3.8 V JPMIA0002GB
					40% is set on "Active test," "ALTERNATOR DUTY" of "ENGINE"	(V)  1.4 V JPMIA0003GB
38	B	Ground	Input	—	—	0V
39	L	CAN-H	—	ON	—	—
40	P	CAN-L	—	ON	—	—
42	GR	Oil pressure switch	Input	—	Engine running	Battery voltage
					Engine stopped	0V

**IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)**  
**< ECU DIAGNOSIS > [WITHOUT INTELLIGENT KEY SYSTEM]**

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)
				Ignition switch	Operation or condition	
43	G	Wiper auto stop signal	Input	ON or START	Wiper switch OFF, LO, INT	Battery voltage
44	R	Daytime light relay control	Input	ON	Daytime light system active	0V
					Daytime light system inactive	Battery voltage
45	LG	Horn relay control	Input	ON	When door locks are operated using keyfob or Intelligent Key (if equipped) (OFF → ON)*	Battery voltage → 0V
46	V	Fuel pump relay control	Input	—	Ignition switch ON or START	0V
					Ignition switch OFF or ACC	Battery voltage
47	O	Throttle control motor relay control	Input	—	Ignition switch ON or START	0V
					Ignition switch OFF or ACC	Battery voltage
48	R	Starter relay (inhibit switch)	Input	ON or START	Selector lever in "P" or "N"	0V
					Selector lever any other position	Battery voltage
49	GR	Front RH parking and front side marker lamp	Output	OFF	Lighting switch 1st position	0V
					ON	Battery voltage
50	W	Front fog lamp (LH)	Output	ON or START	Lighting switch must be in the 2nd position (LOW beam is ON) and the front fog lamp switch	0V
					ON	Battery voltage
51	V	Front fog lamp (RH)	Output	ON or START	Lighting switch must be in the 2nd position (LOW beam is ON) and the front fog lamp switch	0V
					ON	Battery voltage
52	P	LH low beam head-lamp	Output	—	Lighting switch in 2nd position	Battery voltage
54	R	RH low beam head-lamp	Output	—	Lighting switch in 2nd position	Battery voltage
55	G	LH high beam head-lamp	Output	—	Lighting switch in 2nd position and placed in HIGH or PASS position	Battery voltage
56	L	RH high beam head-lamp	Output	—	Lighting switch in 2nd position and placed in HIGH or PASS position	Battery voltage
57	GR	Parking, license, and tail lamp	Output	ON	Lighting switch 1st position	0V
					ON	Battery voltage
59	B	Ground	Input	—	—	0V
60	GR	Rear window defogger relay	Output	ON or START	Rear defogger switch ON	Battery voltage
					Rear defogger switch OFF	0V
61	R/B	Fuse 32	Output	OFF	—	Battery voltage

A  
B  
C  
D  
E  
F  
G  
H  
I  
J

SEC  
L  
M  
N  
O  
P

## **IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)**

## < ECU DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

\*: When horn reminder is ON


## Wiring Diagram

INFOID:000000005484877

 WITH HEATED MIRRORS  
 TRAILER TOW 7PIN


**T7 : TRAILER TOW 7PIN**

## IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

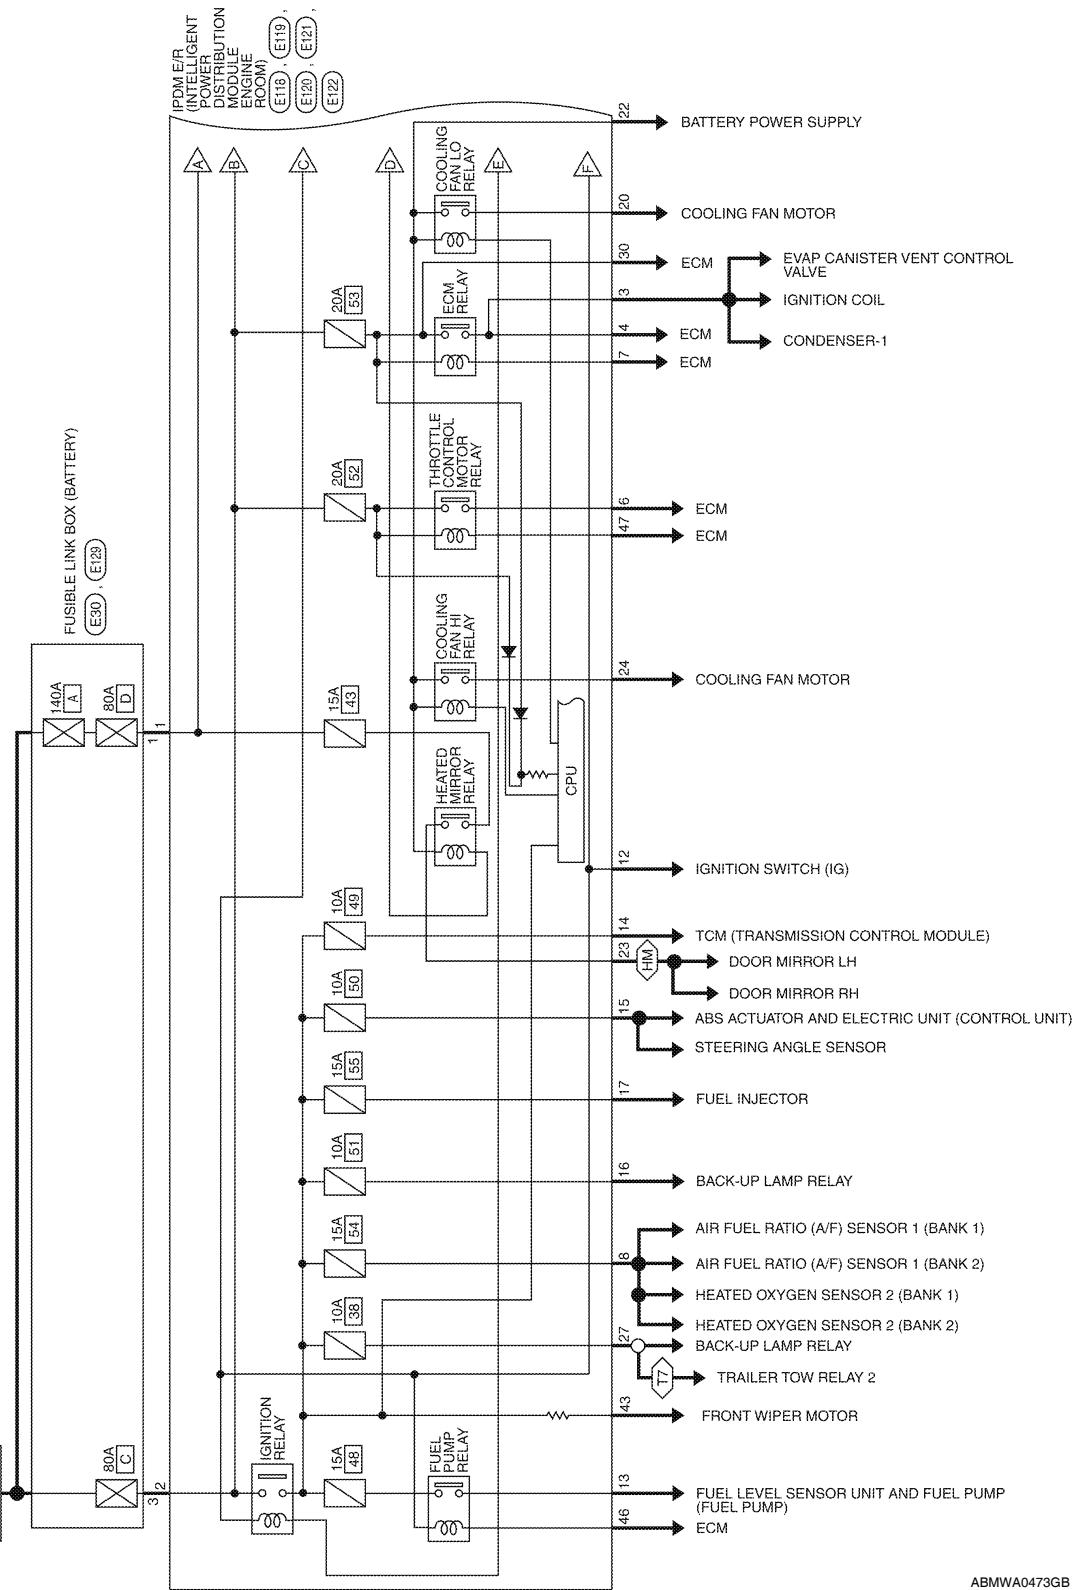

ABMWA0473GB

 : WITH FRONT FOG LAMPS  
 : FOR CANADA

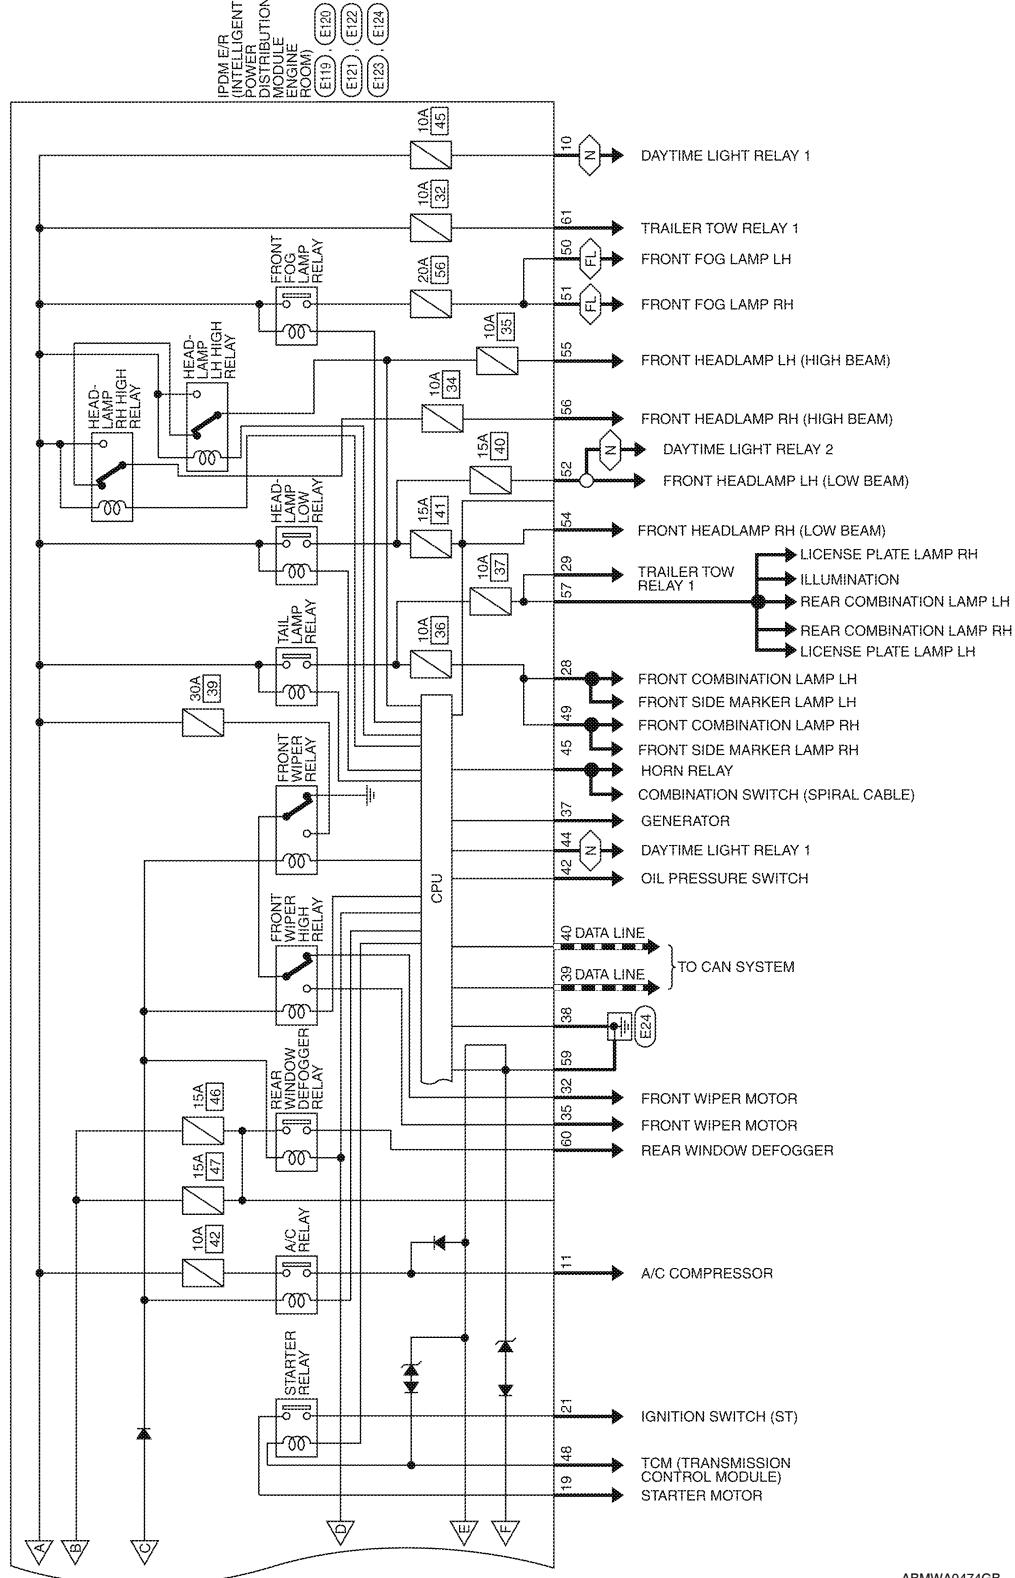

ABMWA0474GB

**IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) CONNECTORS**

Connector No.	E30
Connector Name	FUSIBLE LINK BOX (BATTERY)
Connector Color	—



Terminal No.	Color of Wire	Signal Name
3	R	—

Connector No.	E118
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	W	F/L USM
2	R	F/L MAIN


Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
6	V	ETC
7	BR	ECM RLY CONT
8	W/R	O2 SENSOR
9	—	—
10	R/B	DTRL RLY SUPPLY
11	Y	A/C COMPRESSOR
12	W/G	IGN SW (IG)
13	R	FUEL PUMP
14	W/G	A/T CU IGN SUPPLY
15	W/R	ABS IGN SUPPLY
16	W/G	REVERSE LAMP
17	W/G	INJECTOR
18	—	—



Connector No.	E120
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
19	W	STARTER MTR
20	BR	MOTOR FAN 1
21	GR	IGN SW (ST)
22	G	F/L MOTOR FAN
23	LG	HEATED MIRROR
24	P	MOTOR FAN 2

ABMIA1290GB

**IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)**  
**[WITHOUT INTELLIGENT KEY SYSTEM]**

< ECU DIAGNOSIS >

Terminal No.	Color of Wire	Signal Name
25	—	—
26	—	—
27	W	TTOW REV LAMP
28	R	CLEARANCE FRONT LH
29	G	TRAILER RLY CONT
30	R/B	ECM BAT

Connector No.	Color	Signal Name
E121	BROWN	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
		29 28 36 35 34 33 32 31 30
	H.S.	

Connector No.	Color	Signal Name
E122	WHITE	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
		32 41 40 39 38 37 36 44 43 48 47 46
	H.S.	

Terminal No.	Color of Wire	Signal Name
31	—	—
32	GR	FR WIPER LO
33	—	—
34	—	—
35	L	FR WIPER HI
36	—	—

Connector No.	Color	Signal Name
E123	BROWN	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
		51 50 49 56 55 54 53 52
	H.S.	

Terminal No.	Color of Wire	Signal Name
57	GR	TAIL LAMP
58	—	—
59	B	GND (POWER)
60	GR	RR DEF
61	R/B	TRAIL RLY SUPPLY
62	—	—

Terminal No.	Color of Wire	Signal Name
49	GR	ILLUMINATION
50	W	FR FOG LAMP LH
51	V	FR FOG LAMP RH
52	P	H/LAMP LO LH
53	—	—
54	R	H/LAMP LO RH
55	G	H/LAMP HI LH
56	L	H/LAMP HI RH

Terminal No.	Color of Wire	Signal Name
37	Y	ALT-C CONT
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L
41	—	—
42	GR	OIL PRESSURE SW
43	G	AUTO STOP SW
44	R	DTRL RLY CONT
45	LG	ANT THEFT HORN
46	V	FUEL PUMP RLY CONT
47	O	ETC RLY CONT
48	R	INHIBIT SW

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P  
Q  
R  
S  
T  
U  
V  
W  
X  
Y  
Z  
SEC

ABMIA1291GB

Connector No.	E129
Connector Name	FUSIBLE LINK BOX (BATTERY)
Connector Color	BLACK


Terminal No.	Color of Wire	Signal Name
1	W	-

ABMIA1292GB

## Fail Safe

INFOID:0000000005484832

### CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

**IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)  
<ECU DIAGNOSIS> [WITHOUT INTELLIGENT KEY SYSTEM]**

Control part	Fail-safe in operation
Cooling fan	<ul style="list-style-type: none"> <li>• Turns ON the cooling fan relay when the ignition switch is turned ON</li> <li>• Turns OFF the cooling fan relay when the ignition switch is turned OFF</li> </ul>

If No CAN Communication Is Available With BCM

Control part	Fail-safe in operation
Headlamp	<ul style="list-style-type: none"> <li>• Turns ON the headlamp low relay when the ignition switch is turned ON</li> <li>• Turns OFF the headlamp low relay when the ignition switch is turned OFF</li> <li>• Headlamp (LH/RH) high relays OFF</li> </ul>
• Parking lamps • License plate lamps • Tail lamps	<ul style="list-style-type: none"> <li>• Turns ON the tail lamp relay when the ignition switch is turned ON</li> <li>• Turns OFF the tail lamp relay when the ignition switch is turned OFF</li> </ul>
Front wiper	<ul style="list-style-type: none"> <li>• The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed.</li> <li>• The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.</li> </ul>
Rear window defogger	Rear window defogger relay OFF
A/C compressor	A/C relay OFF
Front fog lamps (if equipped)	Front fog lamp relay OFF

#### IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

Ignition switch	Ignition relay	Tail lamp relay
ON	ON	—
OFF	OFF	—

**NOTE:**

The tail lamp turns OFF when the ignition switch is turned ON.

SEC

#### FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper auto stop signal.

When a front wiper auto stop signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 second activation and 20 second stop five times.

Ignition switch	Front wiper switch	Auto stop signal
ON	OFF	Front wiper stop position signal cannot be input 10 seconds.
	ON	The signal does not change for 10 seconds.

**NOTE:**

This operation status can be confirmed on the IPDM E/R “DATA MONITOR” that displays “Block” for the item “WIP PROT” while the wiper is stopped.

#### STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

**IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)**  
**<ECU DIAGNOSIS>** **[WITHOUT INTELLIGENT KEY SYSTEM]**

**DTC Index**

INFOID:000000005484833

CONSULT-III display	Fail-safe	TIME <sup>NOTE</sup>	Refer to
No DTC is detected. further testing may be required.	—	—	—
U1000: CAN COMM CIRCUIT	×	CRNT	1 – 39

**NOTE:**

The details of TIME display are as follows.

- CRNT: The malfunctions that are detected now
- 1 - 39: The number is indicated when it is normal at present and a malfunction was detected in the past. It increases like 0 → 1 → 2 ⋯ 38 → 39 after returning to the normal condition whenever IGN OFF → ON. It is fixed to 39 until the self-diagnosis results are erased if it is over 39. It returns to 0 when a malfunction is detected again in the process.

# VEHICLE SECURITY SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

## SYMPTOM DIAGNOSIS

### VEHICLE SECURITY SYSTEM SYMPTOMS

#### Symptom Table

INFOID:000000005259095

Procedure		Diagnostic procedure	Refer to page
Symptom			
1 Vehicle security system cannot be set by ....	Door switch	Check door switch (LF, RF, LR, RR, back)	<a href="#">DLK-226</a>
	Glass ajar switch	Check glass hatch ajar switch	<a href="#">DLK-229</a>
	Key cylinder switch	Check key cylinder switch	<a href="#">DLK-238</a>
	—	Check Intermittent Incident	<a href="#">GI-37</a>
	Security indicator does not turn ON.		<a href="#">SEC-151</a>
		Check vehicle security indicator	<a href="#">GI-37</a>
		Check Intermittent Incident	<a href="#">GI-37</a>
2 * Vehicle security system does not sound alarm when ....	Any door is opened.	Check door switch (LF, RF, LR, RR, back)	<a href="#">DLK-226</a>
	Glass ajar switch	Check glass hatch ajar switch	<a href="#">DLK-229</a>
	—	Check Intermittent Incident	<a href="#">GI-37</a>
3 Vehicle security alarm does not activate.	Horn alarm	Check horn switch	<a href="#">HRN-4</a>
		Check Intermittent Incident	<a href="#">GI-37</a>
4 Vehicle security system cannot be canceled by ....	Key cylinder switch	Check key cylinder switch	<a href="#">DLK-238</a>
		Check Intermittent Incident	<a href="#">GI-37</a>

\*: Check the system is in the armed phase.

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

# NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS SYMPTOMS

< SYMPTOM DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

## NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS SYMPTOMS

### Symptom Table

INFOID:0000000005259096

#### NOTE:

- Before performing the diagnosis in the following table, check “[SEC-120, "Work Flow"](#)”.
- Check that vehicle is under the condition shown in “Conditions of vehicle” before starting diagnosis, and check each symptom.
- If the following symptoms are detected, check systems shown in the “Diagnosis/service procedure” column in this order.

#### CONDITIONS OF VEHICLE (OPERATING CONDITIONS)

- Mechanical key is not inserted into key cylinder.
- Ignition knob switch is not depressed.

Symptom	Diagnosis/service procedure	Reference page
Security indicator does not turn ON or flash.	1. Check vehicle security indicator	<a href="#">SEC-151</a>
	2. Check Intermittent Incident	<a href="#">GI-37</a>

&lt; PRECAUTION &gt;

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000005510398

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

##### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

##### **WARNING:**

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

#### Precaution Necessary for Steering Wheel Rotation After Battery Disconnect

INFOID:0000000005259099

SEC

##### **NOTE:**

- This Procedure is applied only to models with Intelligent Key system and NATS (NISSAN ANTI-THEFT SYSTEM).
- Remove and install all control units after disconnecting both battery cables with the ignition knob in the "LOCK" position.
- Always use CONSULT-III to perform self-diagnosis as a part of each function inspection after finishing work. If DTC is detected, perform trouble diagnosis according to self-diagnostic results.

For models equipped with the Intelligent Key system and NATS, an electrically controlled steering lock mechanism is adopted on the key cylinder.

For this reason, if the battery is disconnected or if the battery is discharged, the steering wheel will lock and steering wheel rotation will become impossible.

If steering wheel rotation is required when battery power is interrupted, follow the procedure below before starting the repair operation.

#### OPERATION PROCEDURE

1. Connect both battery cables.

##### **NOTE:**

Supply power using jumper cables if battery is discharged.

2. Use the Intelligent Key or mechanical key to turn the ignition switch to the "ACC" position. At this time, the steering lock will be released.
3. Disconnect both battery cables. The steering lock will remain released and the steering wheel can be rotated.
4. Perform the necessary repair operation.

## **PRECAUTIONS**

**[WITHOUT INTELLIGENT KEY SYSTEM]**

< PRECAUTION >

5. When the repair work is completed, return the ignition switch to the "LOCK" position before connecting the battery cables. (At this time, the steering lock mechanism will engage.)
6. Perform a self-diagnosis check of all control units using CONSULT-III.

&lt; ON-VEHICLE REPAIR &gt;

## ON-VEHICLE REPAIR

### NATS ANTENNA AMP.

#### Removal and Installation


INFOID:000000005259100

**NOTE:**

- If NATS antenna amp. is not installed correctly, NVIS (NATS) system will not operate properly and "SELF-DIAG RESULTS" on CONSULT-III screen will show "LOCK MODE" or "CHAIN OF IMMU-KEY".
- Initialization is not necessary when only the NATS antenna amp. is replaced with a new one.

#### REMOVAL

1. Disconnect the battery negative terminal. Refer to [PG-78, "Removal and Installation"](#).
2. Remove cluster lid A. Refer to [IP-11, "Exploded View"](#).
3. Remove the bolt (A), disconnect the electrical connector (1) and remove the NATS antenna amp (2).

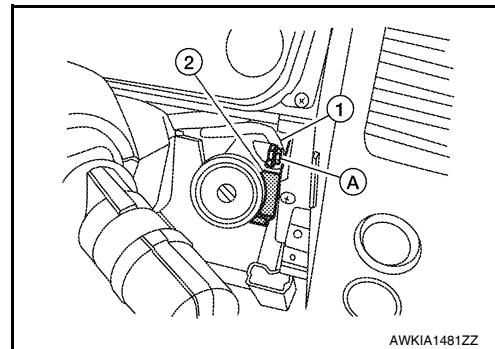

#### INSTALLATION

Installation is in the reverse order of removal.

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

## REMOTE KEYLESS ENTRY RECEIVER

< ON-VEHICLE REPAIR >


[WITHOUT INTELLIGENT KEY SYSTEM]

### REMOTE KEYLESS ENTRY RECEIVER

#### Removal and Installation

INFOID:0000000005259101

1. Disconnect the battery negative cable. Refer to [PG-78, "Removal and Installation"](#).
2. Remove the front pillar upper finisher. Refer to [INT-16, "Component"](#).
3. Remove the side ventilator grille. Refer to [IP-11, "Exploded View"](#).
4. Remove the instrument side finisher. Refer to [IP-11, "Exploded View"](#).
5. Remove the upper glove box. Refer to [IP-11, "Exploded View"](#).
6. Remove the bolt (A), disconnect the harness connector (1) and remove the remote keyless entry receiver (2).

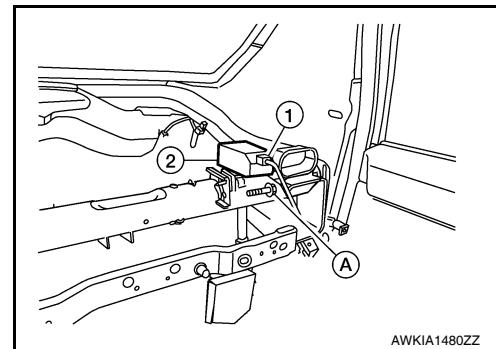

Installation is in the reverse order of removal.