

LT  
**SECTION**  
**LIGHTING SYSTEM**

A  
B  
C

**CONTENTS**

D  
E

<p><b>PRECAUTIONS</b> ..... 4</p> <p>  Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" ..... 4</p> <p>  General Precautions for Service Operations ..... 4</p> <p>  Wiring Diagrams and Trouble Diagnosis ..... 4</p> <p><b>HEADLAMP (FOR USA)</b> ..... 5</p> <p>  Component Parts and Harness Connector Location... 5</p> <p>  System Description ..... 5</p> <p>    <b>OUTLINE</b> ..... 5</p> <p>    <b>BATTERY SAVER CONTROL</b> ..... 7</p> <p>    <b>AUTO LIGHT OPERATION</b> ..... 7</p> <p>    <b>VEHICLE SECURITY SYSTEM</b> ..... 7</p> <p>    <b>XENON HEADLAMP</b> ..... 7</p> <p>  Schematic ..... 9</p> <p>  Wiring Diagram — H/LAMP — ..... 10</p> <p>  Terminals and Reference Value for Battery Saver Control Unit ..... 15</p> <p>  Terminals and Reference Value for BCM ..... 17</p> <p>  Work Flow ..... 18</p> <p>  Preliminary Check ..... 18</p> <p>    <b>SETTING CHANGE FUNCTION FOR AUTO LIGHT SYSTEM</b> ..... 18</p> <p>    <b>INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT</b> ..... 18</p> <p>  CONSULT-II Function for Auto Light System ..... 19</p> <p>    <b>CONSULT-II BASIC OPERATION PROCEDURE</b> ..... 19</p> <p>    <b>WORK SUPPORT</b> ..... 20</p> <p>    <b>DATA MONITOR</b> ..... 20</p> <p>    <b>ACTIVE TEST</b> ..... 21</p> <p>  On Board Diagnosis ..... 21</p> <p>    <b>DIAGNOSIS ITEM</b> ..... 21</p> <p>    <b>SWITCH MONITOR</b> ..... 21</p> <p>  Symptom Chart ..... 23</p> <p>    <b>HEADLAMP SYSTEM</b> ..... 23</p> <p>    <b>AUTO LIGHT SYSTEM</b> ..... 24</p> <p>  Lighting Switch (AUTO) System Check ..... 25</p> <p>  Optical Sensor System Check ..... 26</p> <p>  Headlamp Relay System Check ..... 28</p>	<p>  Tail Lamp Relay System Check ..... 28</p> <p>  Driver Door Switch System Check ..... 29</p> <p>  Aiming Adjustment ..... 30</p> <p>    <b>LOW BEAM AND HIGH BEAM</b> ..... 31</p> <p>  Bulb Replacement ..... 32</p> <p>    <b>HEADLAMP (OUTER SIDE), FOR LOW BEAM..</b> 32</p> <p>    <b>HEADLAMP (INNER SIDE), FOR HIGH BEAM..</b> 32</p> <p>    <b>PARKING LAMP (CLEARANCE LAMP)</b> ..... 32</p> <p>    <b>FRONT TURN SIGNAL LAMP</b> ..... 32</p> <p>    <b>FRONT SIDE MARKER LAMP</b> ..... 32</p> <p>  Removal and Installation ..... 33</p> <p>    <b>REMOVAL</b> ..... 33</p> <p>    <b>INSTALLATION</b> ..... 33</p> <p>  Disassembly and Assembly ..... 34</p> <p>    <b>DISASSEMBLY</b> ..... 34</p> <p>    <b>ASSEMBLY</b> ..... 35</p> <p><b>HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -</b> ..... 36</p> <p>  Component Parts and Harness Connector Location.. 36</p> <p>  System Description ..... 36</p> <p>    <b>HEADLAMP OPERATION</b> ..... 37</p> <p>    <b>BATTERY SAVER CONTROL</b> ..... 38</p> <p>    <b>AUTO LIGHT OPERATION</b> ..... 38</p> <p>    <b>DAYTIME LIGHT OPERATION</b> ..... 38</p> <p>    <b>OPERATION</b> ..... 39</p> <p>  Schematic ..... 40</p> <p>  Wiring Diagram — DTRL — ..... 41</p> <p>  Terminals and Reference Value for Daytime Light Control Unit ..... 49</p> <p>  Symptom Chart ..... 51</p> <p>  Aiming Adjustment ..... 53</p> <p>  Bulb Replacement ..... 53</p> <p>  Removal and Installation ..... 53</p> <p>  Disassembly and Assembly ..... 53</p> <p><b>HEADLAMP AIMING CONTROL</b> ..... 54</p> <p>  Wiring Diagram — H/AIM — ..... 54</p> <p>  Removal and Installation ..... 56</p> <p>  Switch Circuit Inspection ..... 56</p> <p><b>TURN SIGNAL AND HAZARD WARNING LAMPS..</b> 57</p> <p>  System Description ..... 57</p>
--	--

F  
G  
H  
I  
J  
K  
L  
M



TURN SIGNAL OPERATION .....	57	Wiring Diagram — INT/L — .....	85
HAZARD LAMP OPERATION .....	57	Terminals and Reference Value for BCM .....	93
MULTI-REMOTE CONTROL SYSTEM OPERA- TION .....	58	Terminals and Reference Value for Driver Door Con- trol Unit (LCU01) .....	94
LOW TIRE PRESSURE WARNING CONTROL SYSTEM .....	58	Work Flow .....	94
Schematic .....	59	Preliminary Check .....	94
Wiring Diagram — TURN — .....	60	SETTING CHANGE FUNCTION .....	94
Symptom Chart .....	64	INSPECTION FOR POWER AND GROUND CIRCUIT .....	95
Electrical Components Inspection .....	65	CONSULT-II Function .....	95
COMBINATION FLASHER UNIT CHECK .....	65	CONSULT-II BASIC OPERATION PROCEDURE .....	96
Bulb Replacement .....	65	WORK SUPPORT .....	96
FRONT TURN SIGNAL LAMP .....	65	DATA MONITOR .....	97
REAR TURN SIGNAL LAMP .....	65	ACTIVE TEST .....	97
Removal and Installation .....	65	On Board Diagnosis .....	98
FRONT TURN SIGNAL LAMP .....	65	DIAGNOSIS ITEM .....	98
SIDE TURN SIGNAL LAMP .....	65	SWITCH MONITOR .....	98
REAR TURN SIGNAL LAMP .....	65	Symptom Chart .....	99
<b>LIGHTING AND TURN SIGNAL SWITCH .....</b>	<b>66</b>	Interior Lamp Ill Switch System Check .....	100
Removal and Installation .....	66	Personal Lamp Switch System Check .....	101
Switch Circuit Inspection .....	66	Door Switch System Check .....	102
<b>HAZARD SWITCH .....</b>	<b>67</b>	Key-in Detection Switch System Check .....	104
Removal and Installation .....	67	Bulb Replacement .....	105
<b>STOP LAMP .....</b>	<b>68</b>	MAP LAMP AND CONSOLE LAMP .....	105
Wiring Diagram — STOP/L — .....	68	PERSONAL LAMP .....	106
Bulb Replacement .....	69	Removal and Installation .....	106
STOP LAMP .....	69	FRONT INTERIOR LAMP .....	106
HIGH-MOUNTED STOP LAMP .....	69	REAR INTERIOR LAMP .....	106
Removal and Installation .....	69	IGNITION KEY HOLE ILLUMINATION .....	106
STOP LAMP .....	69	<b>STEP LAMP .....</b>	<b>107</b>
HIGH-MOUNTED STOP LAMP .....	69	Component Parts and Harness Connector Location .....	107
<b>BACK-UP LAMP .....</b>	<b>70</b>	System Description .....	107
Wiring Diagram — BACK/L — .....	70	POWER SUPPLY AND GROUND .....	107
Bulb Replacement .....	70	OPERATING PROCEDURE .....	108
Removal and Installation .....	70	Schematic .....	109
<b>PARKING, LICENSE PLATE AND TAIL LAMPS .....</b>	<b>71</b>	Wiring Diagram — STEP/L — .....	110
System Description .....	71	Terminals and Reference Value for BCM .....	116
LIGHTING OPERATION BY LIGHTING SWITCH .....	71	Terminals and Reference Value for Driver Door Con- trol Unit (LCU01) .....	116
BATTERY SAVER CONTROL .....	71	Terminals and Reference Value for Passenger and Rear LH, RH Door Control Unit .....	116
Schematic .....	72	Work Flow .....	117
Wiring Diagram — TAIL/L — .....	73	Preliminary Check .....	117
Trouble Diagnoses .....	77	INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT .....	117
Bulb Replacement .....	77	CONSULT-II Function .....	118
LICENSE PLATE LAMP .....	77	CONSULT-II BASIC OPERATION PROCEDURE .....	118
FRONT COMBINATION LAMP .....	78	DATA MONITOR .....	119
REAR COMBINATION LAMP .....	78	ACTIVE TEST .....	119
Removal and Installation .....	78	On Board Diagnosis .....	120
LICENSE PLATE LAMP .....	78	DIAGNOSIS ITEM .....	120
FRONT COMBINATION LAMP .....	78	SWITCH MONITOR .....	120
REAR COMBINATION LAMP .....	78	Symptom Chart .....	121
<b>INTERIOR ROOM LAMP .....</b>	<b>80</b>	DIAGNOSTIC PROCEDURE .....	121
System Description .....	80	Bulb Replacement .....	124
OUTLINE .....	80	Removal and Installation .....	124
TIMER FUNCTION .....	80	<b>ILLUMINATION .....</b>	<b>125</b>
LAMP OUTPUT CONTROL FUNCTION .....	81		
AUTO OFF FUNCTION .....	81		
LIGHTS ON/OFF MODES .....	81		
Major Components and Their Functions .....	83		
Schematic .....	84		

System Description .....	125	GLOVE BOX LAMP .....	136
LIGHTING OPERATION BY LIGHTING SWITCH	125	Removal and Installation .....	137
BATTERY SAVER CONTROL .....	125	FRONT CIGARETTE LIGHTER ILLUMINATION	137
Schematic .....	126	REAR ASHTRAY ILLUMINATION .....	137
Wiring Diagram — ILL — .....	127	<b>VANITY MIRROR AND TRUNK ROOM LAMPS ...</b>	<b>138</b>
Removal and Installation .....	136	Wiring Diagram — INT/L — .....	138
ILLUMINATION CONTROL SWITCH .....	136	Bulb Replacement .....	139
POWER WINDOW MAIN SWITCH ILLUMINA-		VANITY MIRROR LAMP .....	139
TION .....	136	TRUNK ROOM LAMP .....	139
CONSOLE BOX LAMP .....	136	<b>BULB SPECIFICATIONS .....</b>	<b>140</b>
		Headlamp .....	140
		Exterior Lamp .....	140
		Interior Lamp/Illumination .....	140

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

LT

# PRECAUTIONS

## PRECAUTIONS

PFP:00011

### Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

EKS001B4

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.



#### WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

### General Precautions for Service Operations

EKS000XN

- Never work with wet hands.
- Xenon headlamp includes high voltage generating part. Be sure to disconnect battery negative cable (negative terminal) or power fuse before removing, installing, or touching the xenon headlamp (including lamp bulb).
- Turn the lighting switch OFF before disconnecting and connecting the connector.
- When turning the xenon headlamp on and while it is illuminated, never touch the harness, bulb, and socket of the headlamp.
- When checking the headlamp on/off operation, check it on vehicle and with the power connected to the vehicle-side connector.
- Do not touch the headlamp bulb glass surface with bare hands or allow oil or grease to get on it. Do not touch the headlamp bulb just after the headlamp is turned off, because it is very hot.
- Install the xenon headlamp bulb socket correctly. If it is installed improperly, high-voltage leak or corona discharge may occur that can melt the bulb, connector, and housing. Do not illuminate the xenon headlamp bulb out of the headlamp housing. Doing so can cause fire and harm your eyes.
- When the bulb has burned out, wrap it in a thick vinyl bag and discard. Do not break the bulb.
- Leaving the bulb removed from the headlamp housing for long period of time can deteriorate performance of the lens and reflector (dirt, clouding). Always prepare a new bulb and have it on hand when replacing the bulb.
- When adjusting the headlamp aiming, turn the aiming adjustment screw only in the tightening direction. (If it is necessary to turn the screw in loosening direction, first fully loosen the screw, and then turn it in tightening direction.)
- Do not use organic solvent (paint thinner or gasoline) to clean lamps and to remove old sealant.

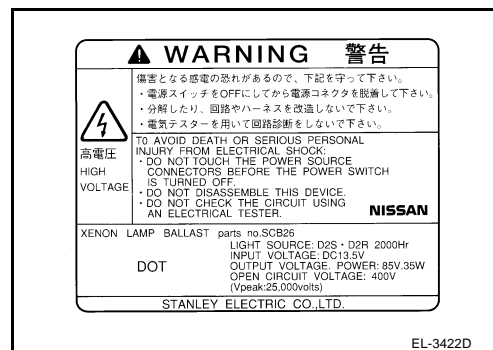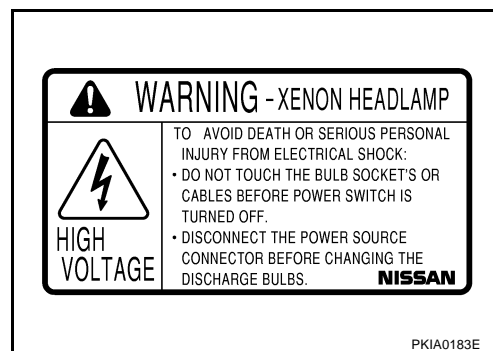

### Wiring Diagrams and Trouble Diagnosis

EKS0014T

When you read wiring diagrams, refer to the followings:

- Refer to [GI-14, "How to Read Wiring Diagrams"](#) in GI section
- Refer to [PG-2, "POWER SUPPLY ROUTING"](#) for power distribution circuit in PG section

When you perform trouble diagnosis, refer to the followings:

- Refer to [GI-10, "HOW TO FOLLOW TEST GROUPS IN TROUBLE DIAGNOSES"](#) in GI section
- Refer to [GI-26, "How to Perform Efficient Diagnosis for an Electrical Incident"](#) in GI section


# HEADLAMP (FOR USA)

PFP:26010

## HEADLAMP (FOR USA)

### Component Parts and Harness Connector Location

EKS000UL

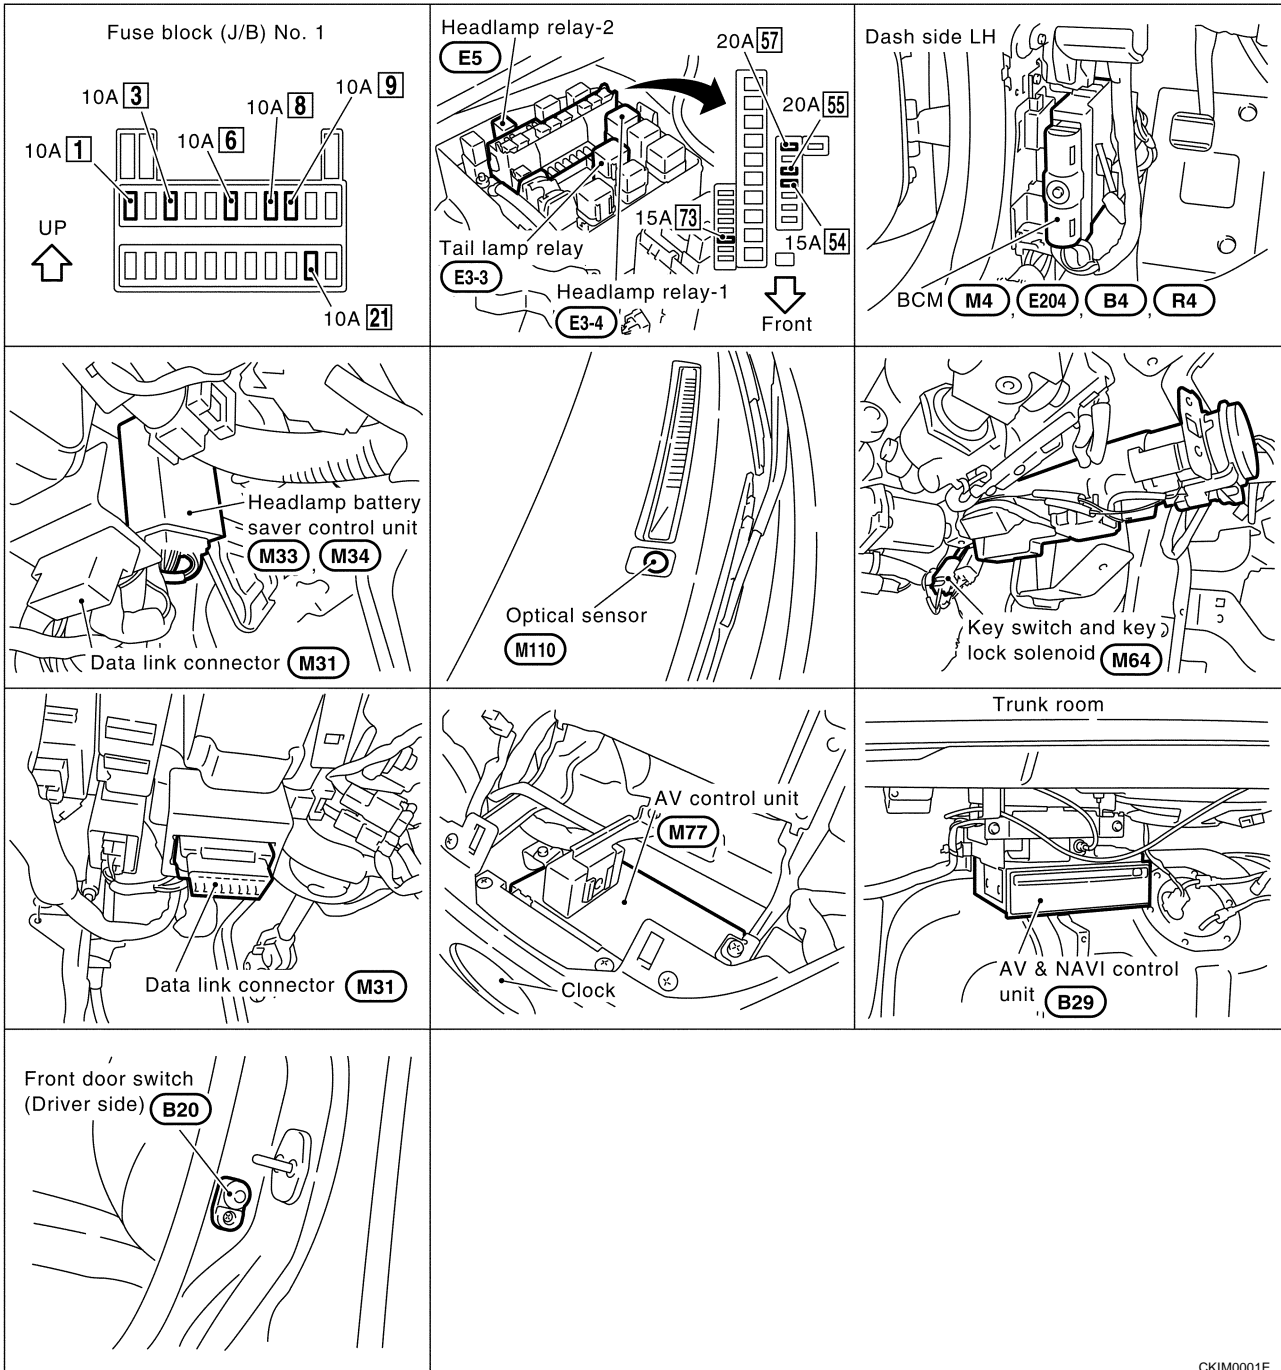

CKIM0001E

## System Description

EKS000SX

The headlamp operation is controlled by the lighting switch which is built into the spiral cable and headlamp battery saver control unit. And the headlamp battery saver system is controlled by the headlamp battery saver control unit and BCM.

## OUTLINE

Power is supplied at all times

- to headlamp relay-1 terminal 2, and
- to headlamp relay-1 terminal 3
- through 20A fuse [No. 57, located in the fuse, fusible link and relay block (J/B)], and
- to headlamp relay-1 terminal 7

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# HEADLAMP (FOR USA)

---

- through 20A fuse [No. 55, located in the fuse, fusible link and relay block (J/B)], and
- to headlamp relay-2 terminals 2 and 5
- through 15A fuse [No. 73, located in the fuse, fusible link and relay block (J/B)], and
- to headlamp battery saver control unit terminal 7
- through 10A fuse [No. 6, located in the fuse block (J/B) No.1].

When the ignition switch is in the ON or START position, power is supplied

- to headlamp battery saver control unit terminal 1
- to BCM terminal 68
- through 10A fuse [No. 1, located in the fuse block (J/B) No.1].

When the ignition switch is in the ACC or ON position, power is supplied

- to BCM terminal 60
- through 10A fuse [No. 21, located in the fuse block (J/B) No.1].

Ground is supplied

- to headlamp battery saver control unit terminals 4 and 11
- through body grounds M25 and M115.

## Power Supply to Low Beam and High Beam

When lighting switch is in 2ND or PASS position, ground is supplied

- to headlamp relay-1 and 2 terminals 1 from headlamp battery saver control unit terminals 2 and 8
- through headlamp battery saver control unit terminals 3 and 9,
- through lighting switch terminal 12 and 5
- through body ground M25 and M115.

Headlamp relays are energized and then power is supplied to headlamps.

## Low Beam Operation

When lighting switch is turned to the 2ND position and placed in LOW position, power is supplied

- from terminals 5 and 6 of headlamp relay-1
- to terminal 7 of each headlamp

Ground is supplied

- to terminal 8 of each headlamp
- through body grounds E42 and E62

With power and ground supplied, low beam headlamps illuminate.

## High Beam Operation/Flash-to-pass Operation

When lighting switch is turned to the 2ND position and placed in HIGH position or PASS position, power is supplied

- from terminal 3 of headlamp relay-2
- to terminal 13 of each headlamp, and
- to combination meter terminal 48 for the HIGH BEAM indicator.

Ground is supplied

- to headlamp LH terminal 14
- to combination meter terminal 47 for the HIGH BEAM indicator
- through lighting switch terminals 9 and 8
- through body grounds M25 and M115, and
- to headlamp RH terminal 14
- through lighting switch terminals 6 and 5
- through body grounds M25 and M115.

With power and ground supplied, the high beams headlamps and the HIGH BEAM indicator illuminate.

## NOTE:

**The lamp will be force to turn off when the driver door is opened with the ignition switch in OFF or ACC position.**

# HEADLAMP (FOR USA)

## BATTERY SAVER CONTROL

When the ignition switch is turned from ON (or START) to OFF (or ACC) positions while headlamps are illuminated, the RAP signal is supplied to terminal 10 of the headlamp battery saver control unit from BCM terminal 135.

After counting 45 seconds by the RAP signal from the BCM to headlamp battery saver control unit, the ground supply to terminal 1 of the headlamp relay-1 and -2 from headlamp battery saver control unit terminals 2 and 8 is terminated.

Then the headlamps are turned off.

The headlamps are turned off when driver or passenger side door is opened even if 45 seconds have not passed after ignition switch is turned from ON (or START) to OFF (or ACC) positions while headlamps are illuminated.

When the lighting switch is turned from OFF to 2ND after headlamps are turned to off by the battery saver control, ground is supplied

- to headlamp battery saver control unit terminals 5 and 13 from lighting switch terminal 11, and then,
- to headlamp relay-1 and 2 terminals 1 from headlamp battery saver control unit terminals 2 and 8
- through headlamp battery saver control unit terminals 3 and 9, and
- through lighting switch terminal 12.

Then headlamps illuminate again.

## AUTO LIGHT OPERATION

The auto light control system has an optical sensor inside it that detects outside brightness.

When the lighting switch is in AUTO position, it automatically turns on/off the parking (clearance) lamps and the headlamps in accordance with the ambient light. Sensitivity can be adjusted in four steps. For the details of the setting, refer to [LT-18, "SETTING CHANGE FUNCTION FOR AUTO LIGHT SYSTEM"](#).

When lighting switch is in "AUTO" position, ground is supplied

- to BCM terminal 14
- from lighting switch terminal 42.

When ignition switch is turn to "ON" or "START" position and Outside brightness is darker than prescribed level, ground is supplied

- to headlamp relay-1 and 2 terminals 1
- through headlamp battery saver control unit terminal 2, 8 and 4, 11, and
- to tail lamp relay terminal 1
- through headlamp battery saver control unit terminals 6, 14 and 4,11.

Then headlamp relay-1, 2 and tail lamp relay are energized, headlamps (low or high) and tail lamps are illuminate according to switch position.

## Shut Off Delay

While the headlamps are lit in the auto-light operation mode, the ignition switch is turned from "ON" to "OFF" position. The BCM no longer receives a voltage signal at terminal 68. This starts the auto light shut off delay timer. The timer is set based on the resistance value at BCM terminal 6. With the timer running, the headlamps remain lit. When the timer reaches the end of its cycle, the headlamps turn off. Headlamp lighting time can be adjusted from about 0 to 3 minutes. (This function is not applicable to the tail lamps.)

Auto light shut off delay timer can be adjusted in seven steps. For the details of the setting, refer to [LT-18, "SETTING CHANGE FUNCTION FOR AUTO LIGHT SYSTEM"](#).

## VEHICLE SECURITY SYSTEM

The vehicle security system will flash the high beams if the system is triggered. Refer to [BL-100, "VEHICLE SECURITY \(THEFT WARNING\) SYSTEM"](#).

## XENON HEADLAMP

Xenon type headlamp is adopted to the low beam headlamps. Xenon bulbs do not use a filament. Instead, they produce light when a high voltage current is passed between two tungsten electrodes through a mixture of xenon (an inert gas) and certain other metal halides. In addition to added lighting power, electronic control of the power supply gives the headlamps stable quality and tone color.

Followings are some of the many advantages of the xenon type headlamp.

- The light produced by the headlamps is white color approximating to sunlight that is easy on the eyes.
- Light output is nearly double that of halogen headlamps, affording increased area of illumination.

## HEADLAMP (FOR USA)

---

- The light features a high relative spectral distribution at wavelengths to the human eye is most sensitive, which means that even in the rain, more light is reflected back from the road surface toward the vehicle, for added visibility.
- Power consumption is approximately 25 percent less than halogen headlamps, reducing battery load.




# HEADLAMP (FOR USA)

## Schematic

EKS000SY

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

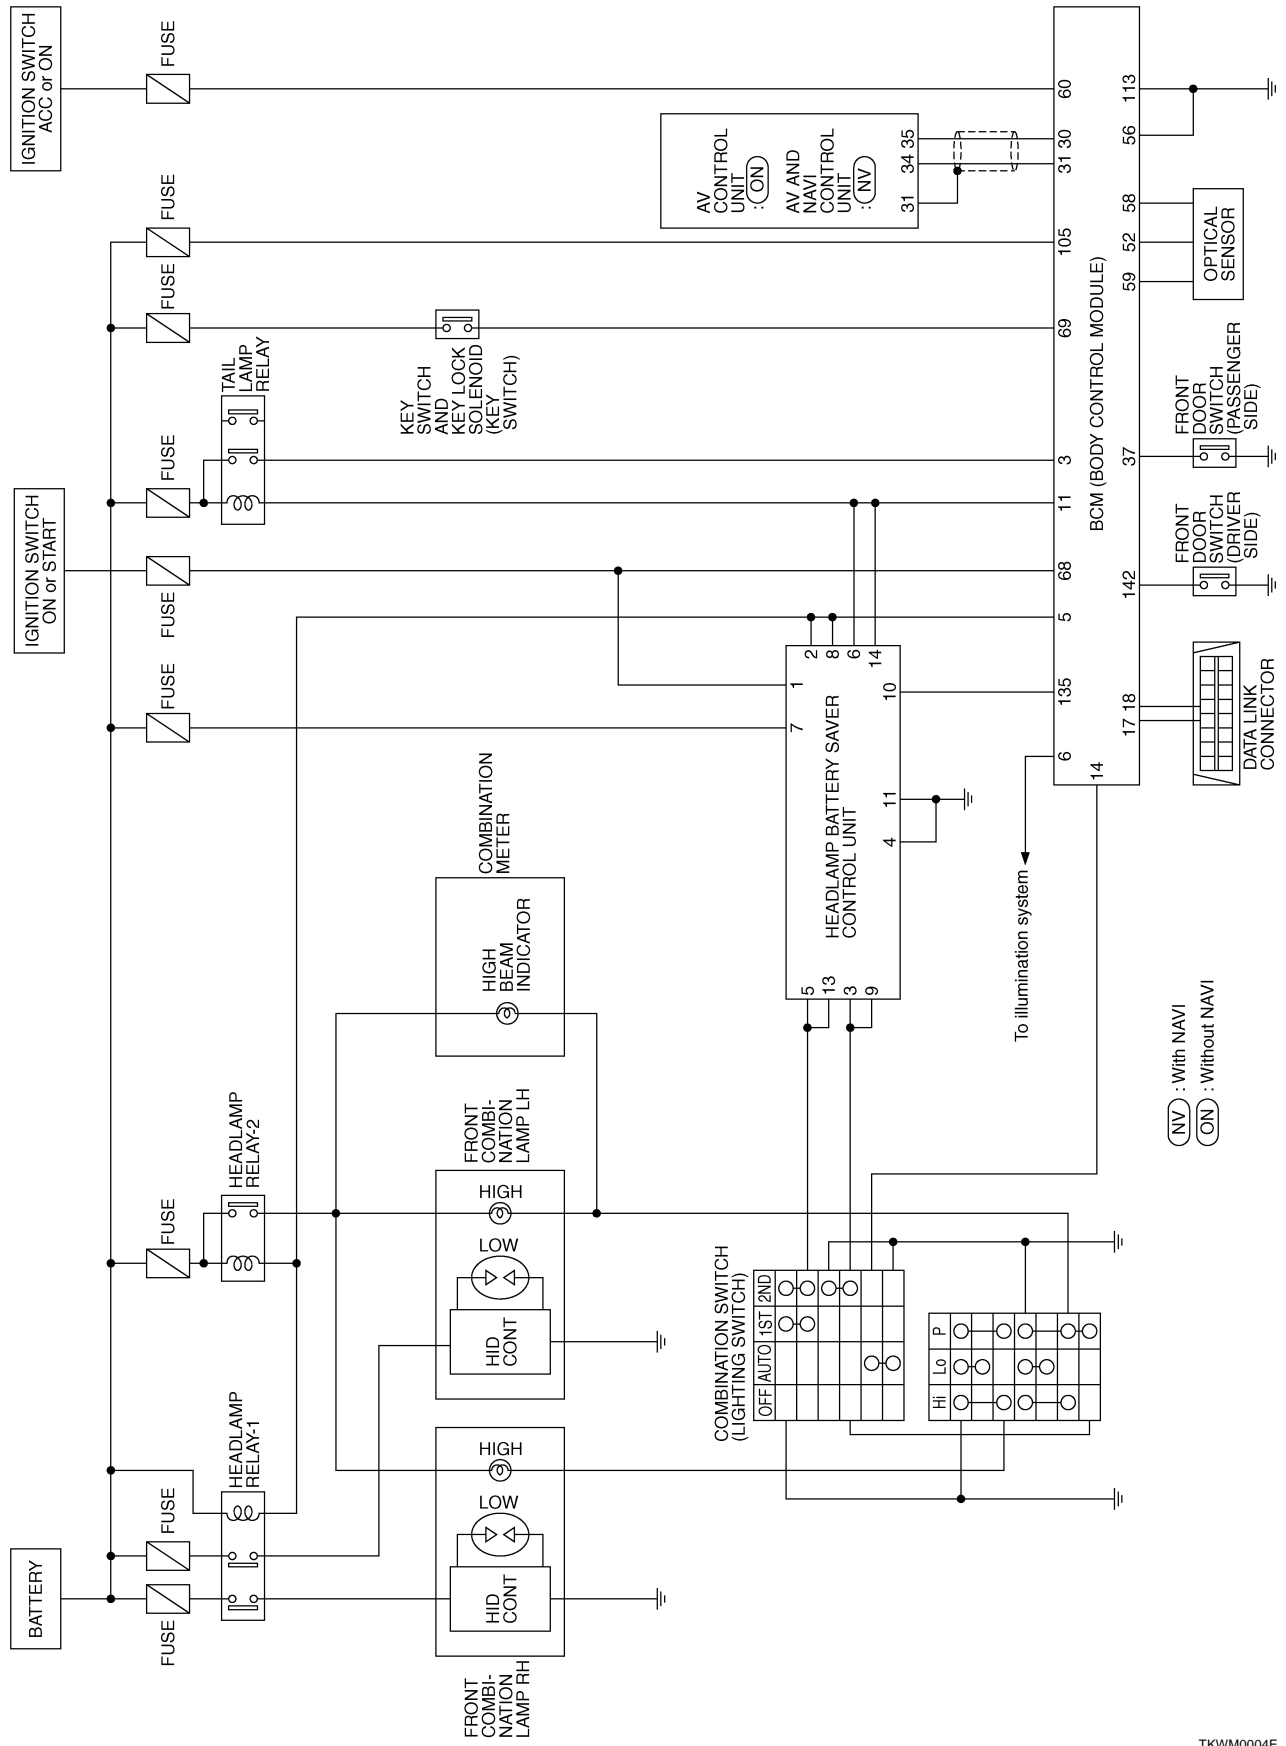

(NV) : With NAVI  
(ON) : Without NAVI

To illumination system


TKWM0004E

# HEADLAMP (FOR USA)

EKS000SZ


## Wiring Diagram — H/LAMP —

LT-H/LAMP-01

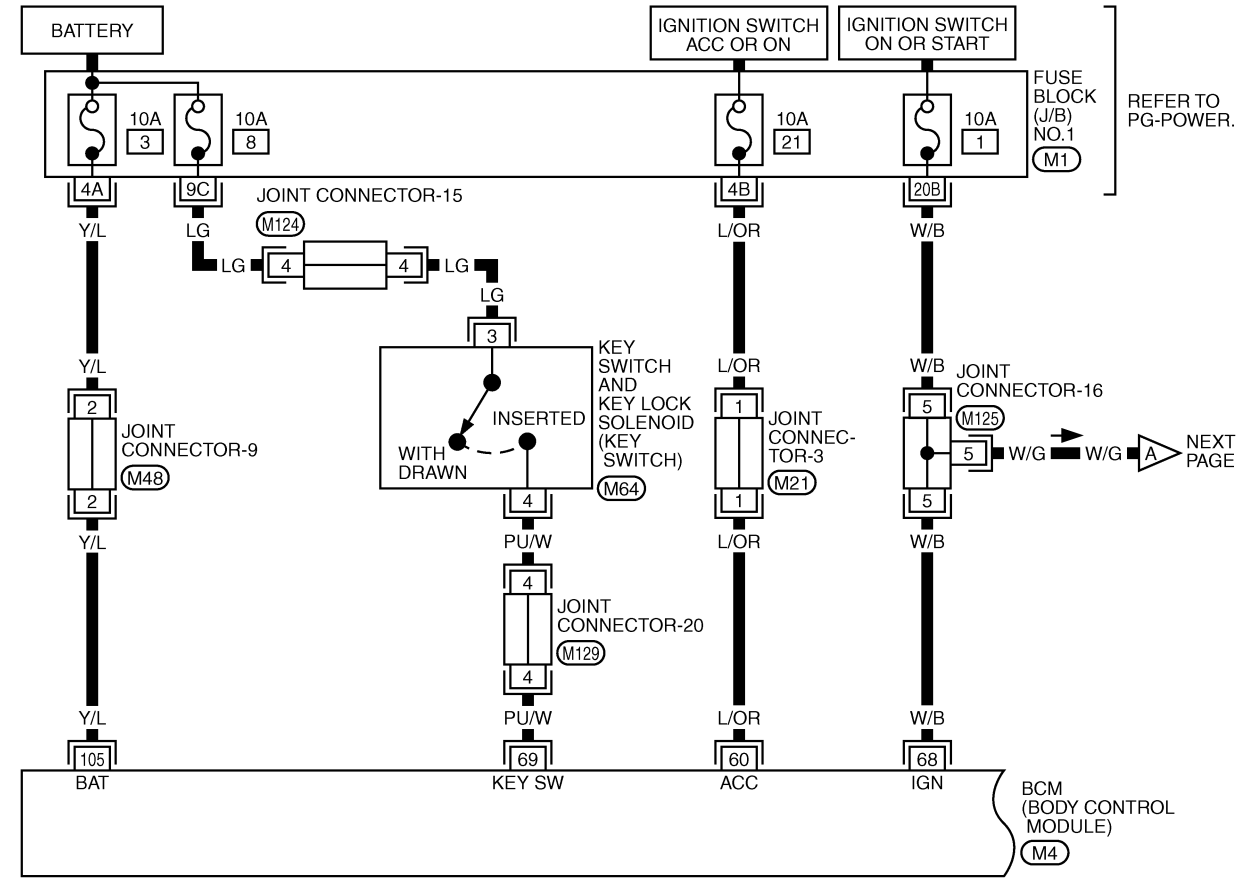

REFER TO PG-POWER.



REFER TO THE FOLLOWING.  
 (M1) - FUSE BLOCK-JUNCTION BOX (J/B) NO.1  
 (M4) - ELECTRICAL UNITS

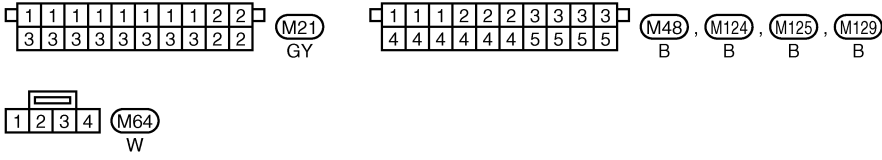

TKWM0005E

# HEADLAMP (FOR USA)

LT-H/LAMP-02

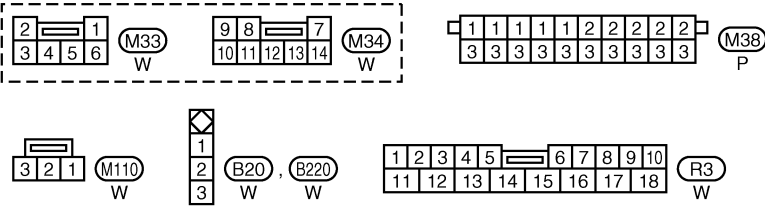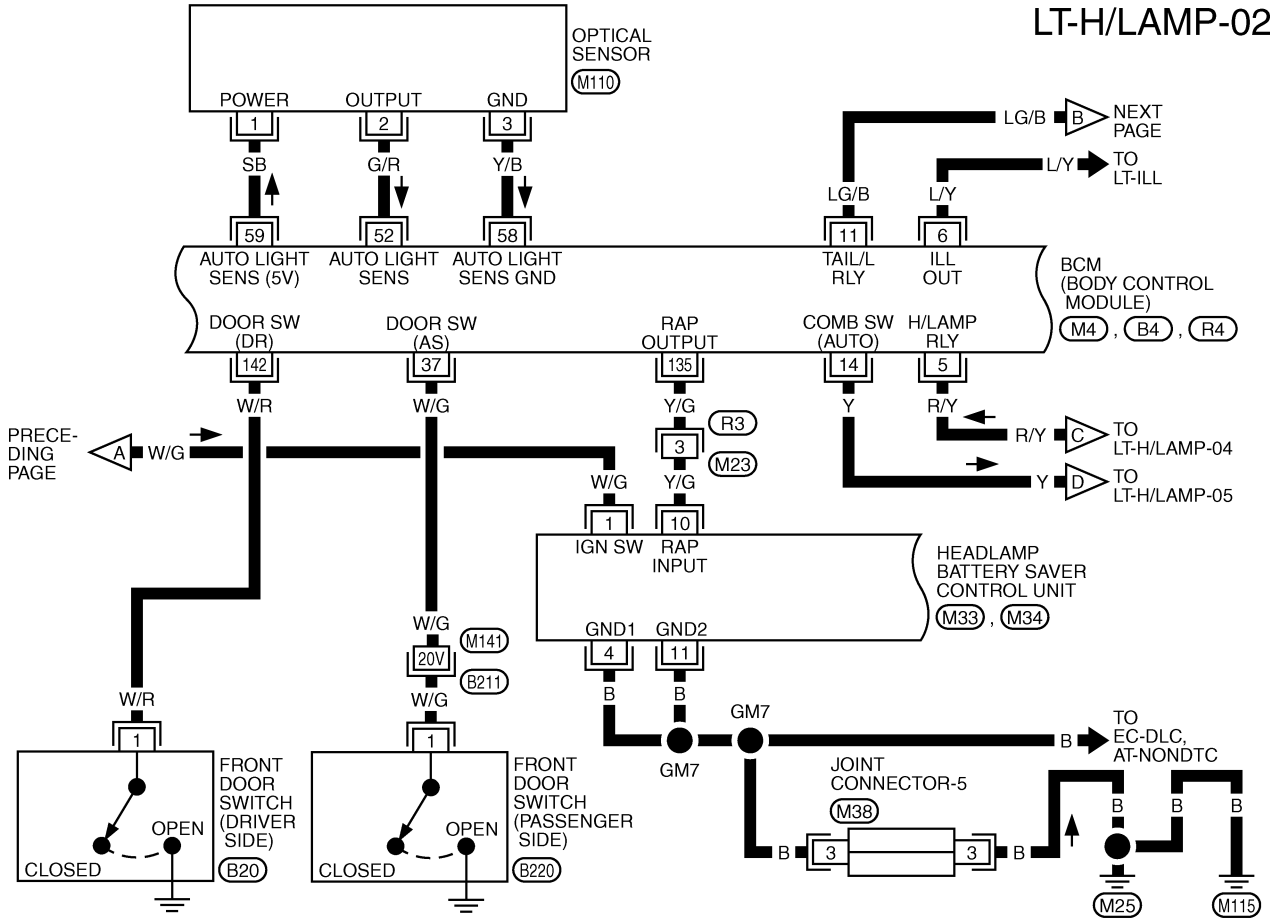


REFER TO THE FOLLOWING.

- (B211) -SUPER MULTIPLE JUNCTION (SMJ)
- (M4), (B4), (R4) -ELECTRICAL UNITS

TKWM0006E

# HEADLAMP (FOR USA)


LT-H/LAMP-03

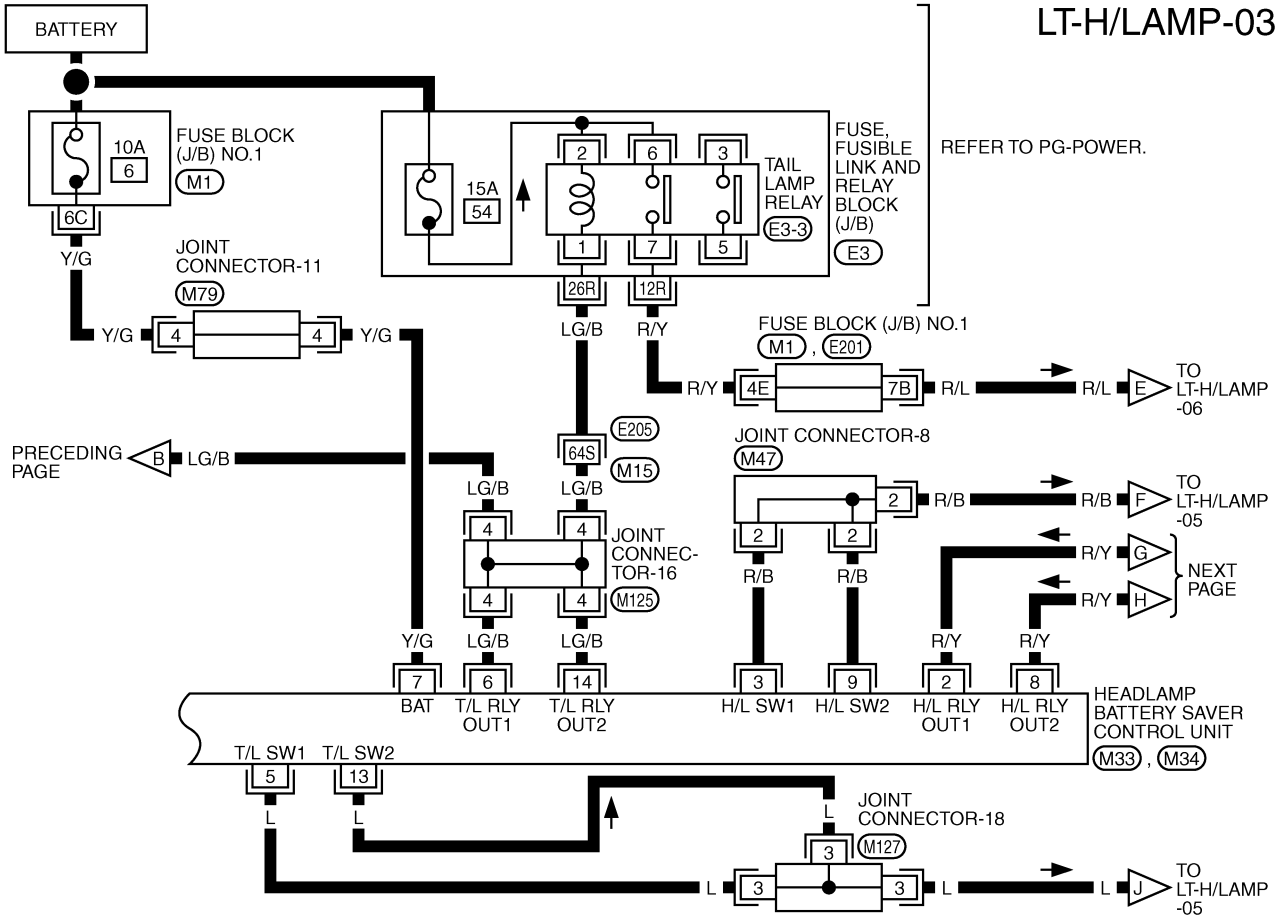

REFER TO PG-POWER.

PRECEDING PAGE

NEXT PAGE

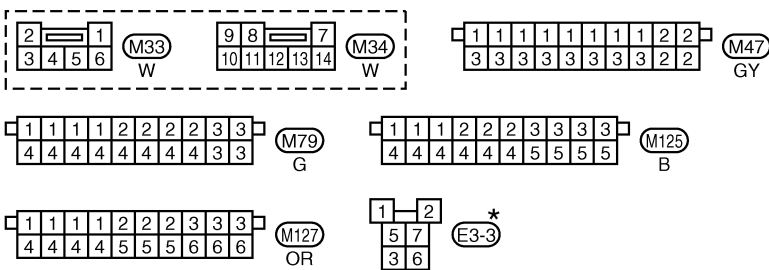

REFER TO THE FOLLOWING.

- (E205) -SUPER MULTIPLE JUNCTION (SMJ)
- (M1, E201) -FUSE BLOCK-JUNCTION BOX (J/B) NO.1
- (E3) -FUSE, FUSIBLE LINK AND RELAY BLOCK (J/B)


\*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.

TKWM0007E

# HEADLAMP (FOR USA)

LT-H/LAMP-04


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M

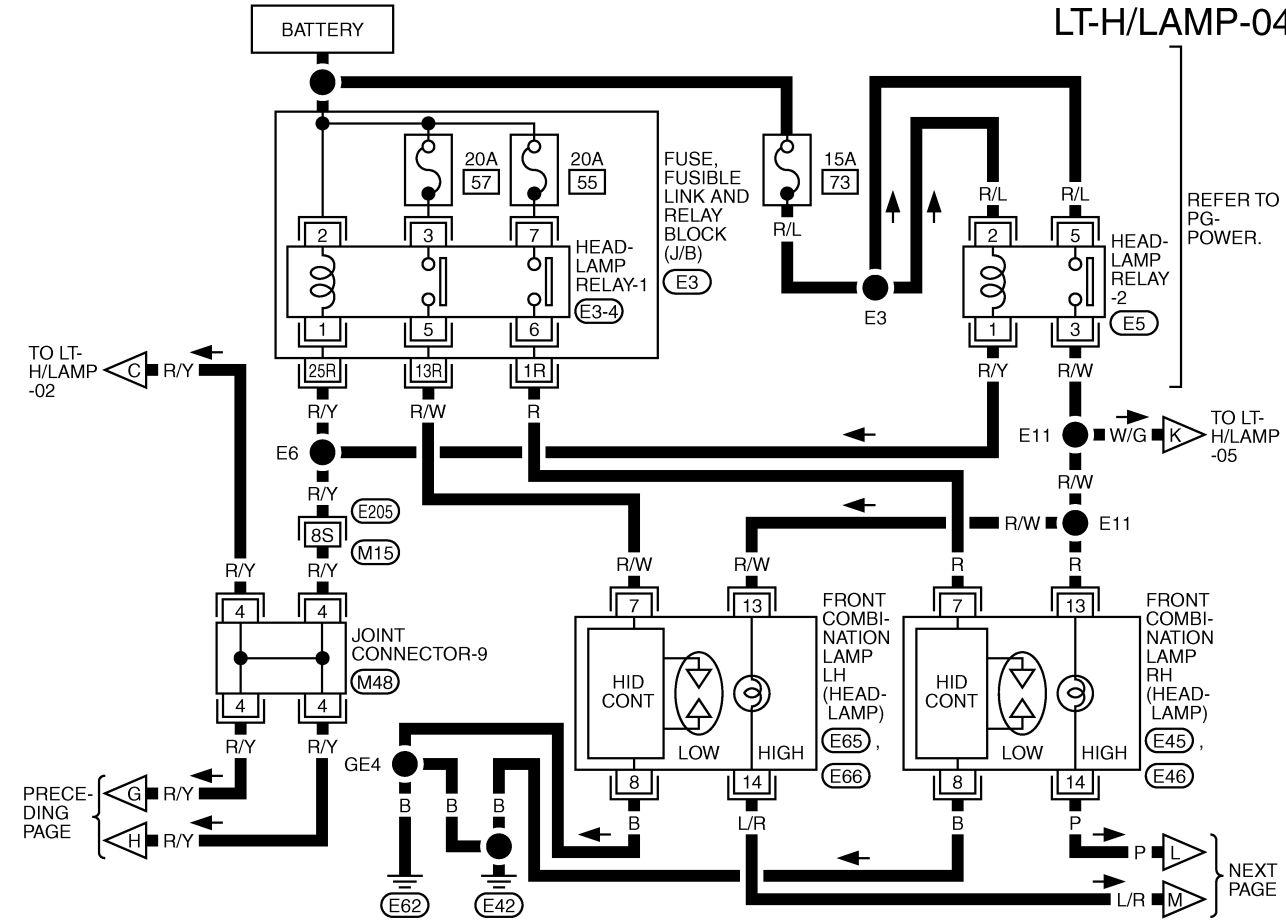

REFER TO PG-POWER.

TO LT-H/LAMP-05

NEXT PAGE

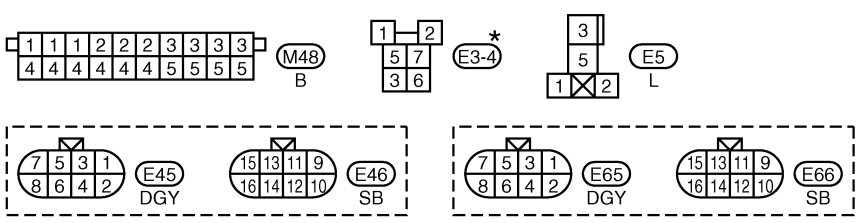





REFER TO THE FOLLOWING.  
 (E205) -SUPER MULTIPLE JUNCTION (SMJ)  
 (E3) -FUSE,FUSIBLE LINK AND RELAY BLOCK (J/B)

\*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.

TKWM0008E

# HEADLAMP (FOR USA)


LT-H/LAMP-05

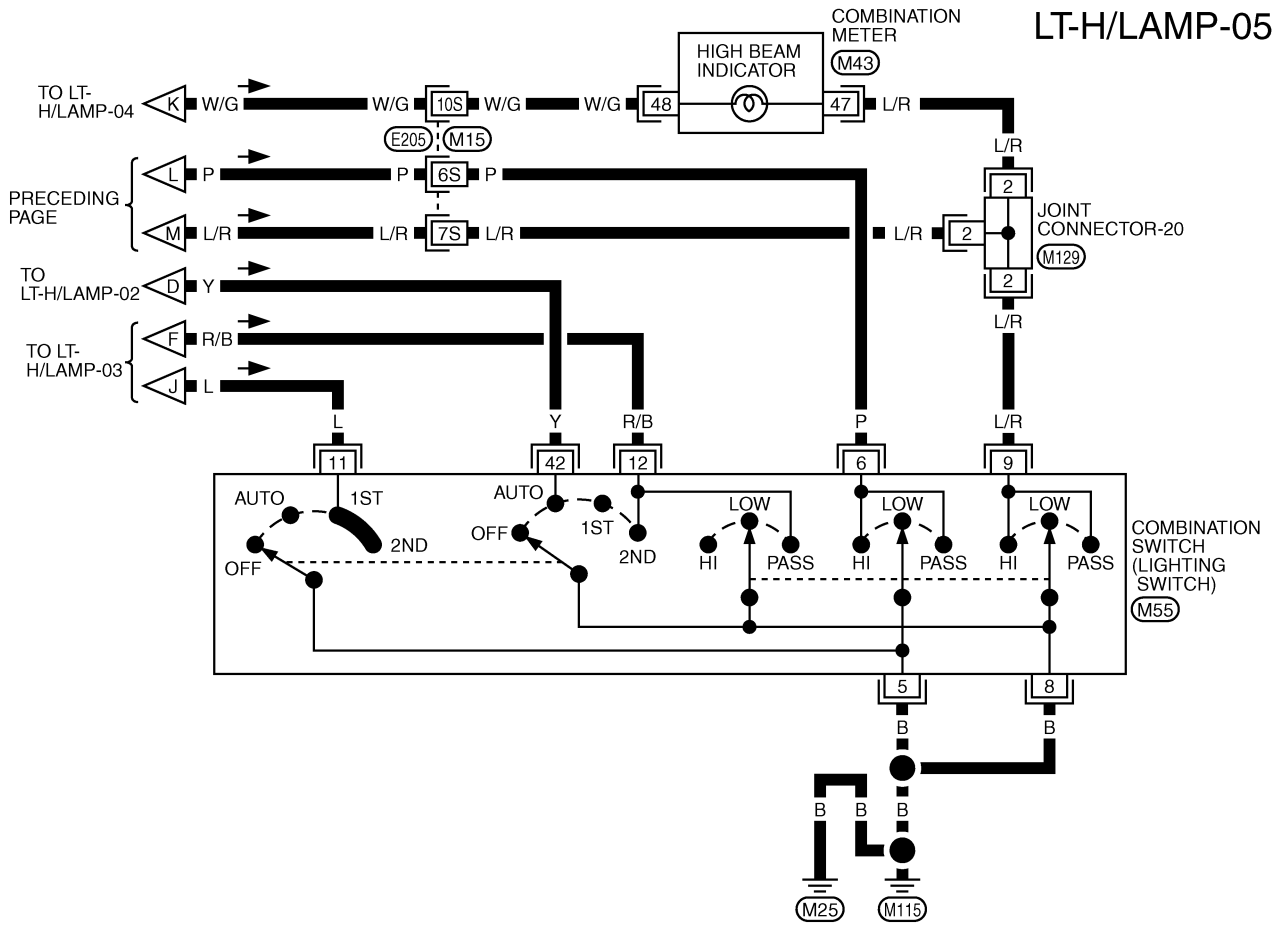


REFER TO THE FOLLOWING.  
 (E205) -SUPER MULTIPLE JUNCTION (SMJ)

TKWM0009E

# HEADLAMP (FOR USA)

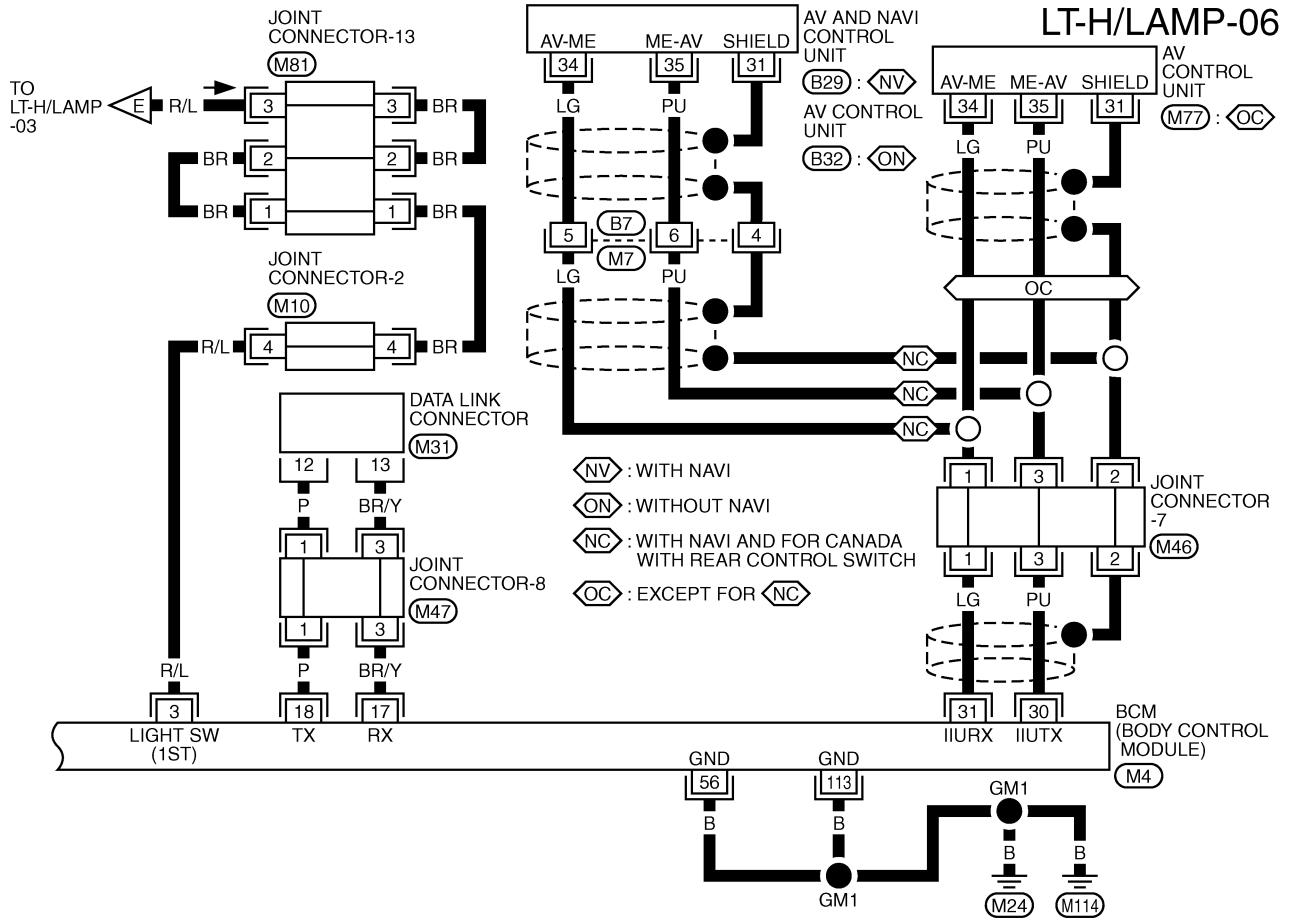

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

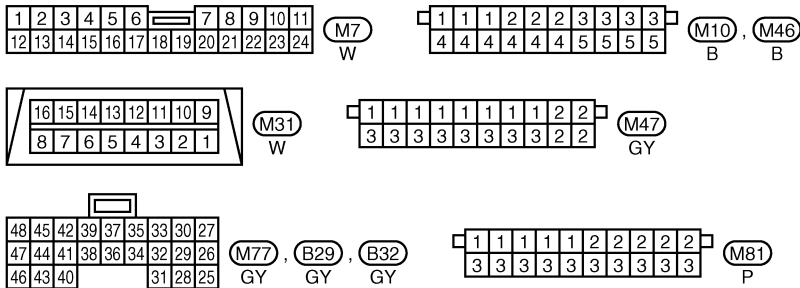

REFER TO THE FOLLOWING.  
(M4) -ELECTRICAL UNITS

LT

TKWM0153E

EKS00074

## Terminals and Reference Value for Battery Saver Control Unit

Terminal No.	Wire color	Item	Condition		Voltage (Approximate values)
1	W/G	Ignition ON power supply	Ignition switch	OFF or ACC	Less than 1V
				ON or START	Battery voltage
2	R/Y	Headlamp LH relay	Ignition switch (with lighting switch except OFF or 1ST)	OFF or ACC	More than 45 seconds after ignition switch is turned OFF or ACC
				OFF or ACC	Within 45 seconds after ignition switch is turned OFF or ACC
				ON or START	Less than 1V
				ON or START	Less than 1V
Headlamps illuminate by auto light control.					Less than 1V

## HEADLAMP (FOR USA)

Terminal No.	Wire color	Item	Condition			Voltage (Approximate values)
3	R/B	Headlamp switch	Lighting switch	1ST		2.4V
				PASS or 2ND		Less than 1V
			Headlamps illuminate by auto light control.			
4	B	Ground	—			—
5	L	Tail lamp switch	lighting switch	OFF		Battery voltage
				1ST or 2ND		Less than 1V
6	LG/B	Tail lamp relay	Ignition switch (with lighting switch 1ST or 2ND)	OFF or ACC	More than 45 seconds after ignition switch is turned OFF or ACC	Battery voltage
					Within 45 seconds after ignition switch is turned OFF or ACC	Less than 1V
				ON or START		Less than 1V
			Headlamps illuminate by auto light control.			
7	Y/G	Power supply	—			Battery voltage
8	R/Y	Headlamp RH relay	Ignition switch (with lighting switch except OFF or 1ST)	OFF or ACC	More than 45 seconds after ignition switch is turned OFF or ACC	Battery voltage
					With 45 seconds after ignition switch is turned OFF or ACC	Less than 1V
				ON or START		Less than 1V
			Headlamps illuminate by auto light control.			
9	R/B	Headlamp switch	Lighting switch	1ST		2.4V
				PASS or 2ND		Less than 1V
			Headlamps illuminate by auto light control.			
10	Y/G	RAP signal	Ignition switch	OFF or ACC (After more than 45 seconds with ignition switch turned OFF or ACC)		Battery voltage
				ON or START		Less than 1V
11	B	Ground	—			—
13	L	Tail lamp switch	Lighting switch	OFF		Battery voltage
				1ST or 2ND		Less than 1V
14	LG/B	Tail lamp relay	Ignition switch (with lighting switch 1ST or 2ND)	OFF or ACC	More than 45 seconds after ignition switch is turned OFF or ACC	Battery voltage
					Within 45 seconds after ignition switch is turned OFF or ACC	Less than 1V
				ON or START		Less than 1V
			Headlamps illuminate by auto light control.			



# HEADLAMP (FOR USA)

## Terminals and Reference Value for BCM

EKS000XP

Terminal NO.	Wire color	Item	Measuring condition			Voltage (Approximate values)
			Ignition switch	Operation or condition		
3	R/L	Parking (clearance) lamp signal	ON	Lighting switch: AUTO	Light is applied to optical sensor.	Less than 1V
					Light is not applied to optical sensor.	Battery voltage
5	R/Y	Headlamp relay control signal	ON	Lighting switch: AUTO	Light is applied to optical sensor.	Battery voltage
					Light is not applied to optical sensor.	Less than 1V
6	L/Y	Automatic brightness adjustment signal	ON	Lighting switch: ON	Light is applied to optical sensor.	Less than 1V
					Light is not applied to optical sensor.	Battery voltage
11	LG/B	Tail lamp relay control signal	ON	Light switch: AUTO	Light is applied to optical sensor.	Battery voltage
					Light is not applied to optical sensor.	Less than 1V
14	Y	Lighting switch AUTO signal	ON	Lighting switch	AUTO	Less than 1V
					OFF	8V
17	BR/Y	Data link RX	—	—	—	—
18	P	Data link TX	—	—	—	—
30	PU	Communication signal TX (BCM-AV: Transmission)	—	—	—	—
31	LG	Communication signal RX (AV-BCM: Receiving)	—	—	—	—
37	W/G	Passenger door switch signal	OFF	Passenger door switch	ON (open)	Less than 1V
					OFF (close)	Battery voltage
52	G/R	Optical sensor signal	ON	Light is applied to optical sensor.		3V
				Light is not applied to optical sensor.		Less than 1V
56	B	Ground	—	—	—	—
58	Y/B	Optical sensor ground	ON	—	—	Less than 1V
59	SB	Optical sensor power supply	ON	—	—	5V
60	L/OR	Accessory power supply	ACC	—	—	Battery voltage
68	W/B	Ignition power supply	ON	—	—	Battery voltage
69	PU/W	Key-in detection switch signal	OFF	Key withdrawn (OFF)		Less than 1V
				Key inserted (ON)		Battery voltage
105	Y/L	Battery power supply	OFF	—	—	Battery voltage
113	B	Ground	—	—	—	—
135	Y/G	Headlamp battery saver control unit	OFF	When headlamp battery saver timer is operated.		Less than 1V
142	W/R	Driver door switch signal	OFF	Driver door switch	ON (open)	Less than 1V
					OFF (close)	Battery voltage

# HEADLAMP (FOR USA)

## Work Flow

EKS0014U

1. Confirm the symptom or customer complaint.
2. Understand system description. Refer to [LT-5, "System Description"](#) .
3. Perform the preliminary check. Refer to [LT-18, "Preliminary Check"](#) .
4. Find the cause of trouble following the symptom chart and repair or replace as necessary. Refer to [LT-23, "Symptom Chart"](#) .
5. Does the auto light system operate normally? When yes, go to step 6. When no, go to step 4.
6. Inspection END.

## Preliminary Check

EKS0014V

### SETTING CHANGE FUNCTION FOR AUTO LIGHT SYSTEM

- Setting for each operation can be changed using CONSULT-II and a display unit.

Setting mode change	Explanation	CONSULT-II (Work support)	Display Unit (Preset at each vehicle status)	Factory-preset data
AUTO LIGHT SENS ADJ (CONSULT-II) Automatic light sensitivity (Display unit)	Auto light sensitivity is set at four grades.	Mode 1	Dull (Left) ↑ ↓ Sensitive (Right)	
		Mode 2		
		Normal		X
		Mode 3		
Automatic headlights off delay (Display unit)	Auto light time delay is set at seven grades.	-	OFF	
			20 sec.	
			45 sec.	X
			90 sec.	
			120 sec.	
			150 sec.	
			180 sec.	

Note: When setting is changed, even though the battery is removed, mode will be after setting mode.

PKIA0173E

## INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT

### 1. FUSE CHECK

Check if any of the following fuses in BCM are blown.

Unit	Power source	Fuse No.
BCM	Battery power supply	3
	ACC power supply	21
	IGN power supply	1

Refer to [LT-10, "Wiring Diagram — H/LAMP —"](#) .

#### OK or NG

- OK >> GO TO 2.  
 NG >> Replace the fuse.

# HEADLAMP (FOR USA)

## 2. POWER POWER CIRCUIT CHECK

Remove the connectors for BCM and driver door LCU or passenger, rear LH, RH door control units, measure the voltage between terminal No. (refer to the "Chart" below) of connector and body ground.

Unit	Terminals (wire color)		Power source	condition	Voltage	
	Connector	(+)				(-)
BCM (M4)		105 (Y/L)	Body ground	Battery power supply	Ignition switch OFF	Battery voltage
		68 (W/B)		IGN power supply	Ignition switch ON	Battery voltage
		60 (L/OR)		ACC power supply	Ignition switch ACC	Battery voltage

OK or NG

- OK >> GO TO 3.
- NG >> Check harness for opened short.

## 3. GROUND CIRCUIT CHECK

Check continuity between BCM harness connector M4 terminals 56, 113 and body ground.

Unit	Terminal (wire color)		Signal	Ignition switch	Continuity
	Connector	(+)			
BCM (M4)		56 (B) and 113 (B)	Ground	Ignition switch OFF	Continuity should exist

OK or NG

- OK >> Inspection end.
- NG >> Repair or replace harness.

## CONSULT-II Function for Auto Light System


EKS000VO

- CONSULT-II has the display function for the work support, data monitor and active test for each part by combining data receiving and sending via the communication line from the BCM.

IVMS diagnosis position	Diagnosis mode	Description
Auto light	Work support	Changes setting of each function.
	Data monitor	Displays input data of the BCM and each LCU in real-time.
	Active test	Operation of electrical loads can be checked by sending driving signal to them.
BCM PART NUMBER		Displays BCM part No.


## CONSULT-II BASIC OPERATION PROCEDURE

1. With the ignition switch OFF, connect CONSULT-II to the data link connector, and turn the ignition switch ON.

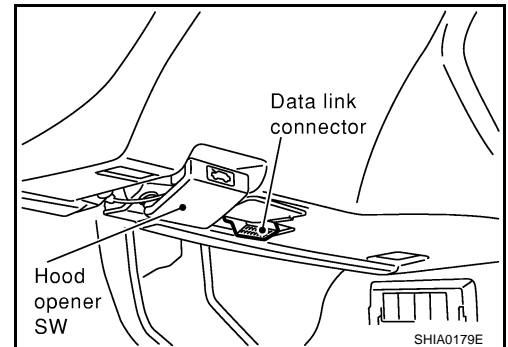


# HEADLAMP (FOR USA)


2. Touch "START".

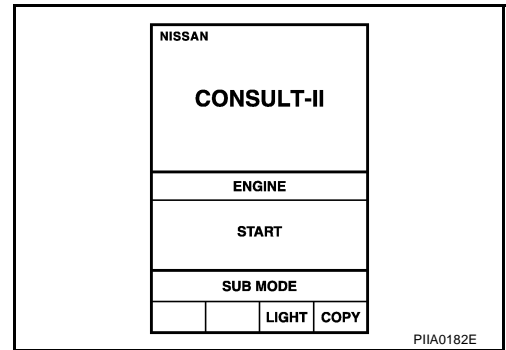

3. Touch "IVMS".

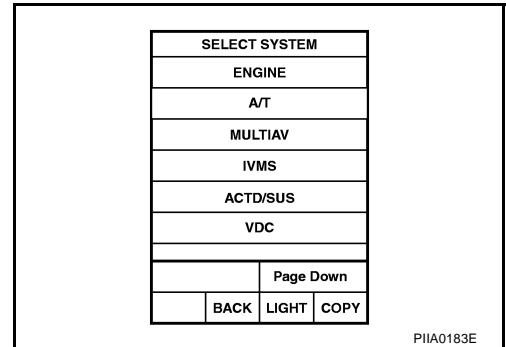

4. Check the model specification, touch either "WITH SUNROOF" or "WITHOUT SUNROOF".
5. Touch "OK". If the selection is wrong, touch "CANCEL".

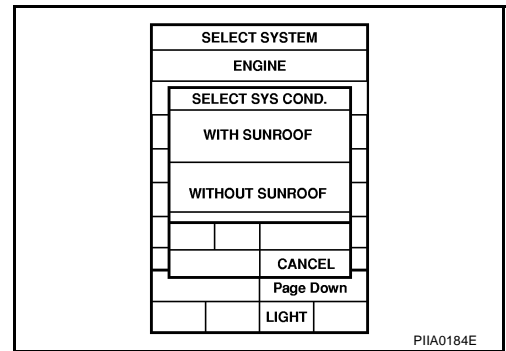

6. Select the desired part to be diagnosed on the "SELECT TEST ITEM" screen.

## WORK SUPPORT

### Operation Procedure

1. Touch "AUTO LIGHT SYSTEM" on the "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on the "SELECT DIAG MODE" screen.
3. Touch "AUTO LIGHT SENS ADJ" on the "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "NORMAL". "MODE 1 - 3" of which setting is to be changed.
6. Touch "CHANGE SETT".
7. The setting will be changed and "CURRENT SETTING STATUS" will be displayed.
8. Touch "END".

### Display Item List

Refer to [LT-18, "SETTING CHANGE FUNCTION FOR AUTO LIGHT SYSTEM"](#).

## DATA MONITOR

### Operation Procedure

1. Touch "AUTO LIGHT SYSTEM" on the "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on the "SELECT DIAG MODE" screen.
3. Touch "ALL SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

# HEADLAMP (FOR USA)

MAIN SIGNALS	Monitors the main items.
SELECTION FROM MENU	Selects and monitors the items.

4. Touch "START".
5. When selected "SELECTION FROM MENU", touch items to be monitored. When "ALL SIGNALS" is selected all items will be monitored.
6. Touch "RECORD" while monitoring and status of the item being monitored can be recorded. To stop recording, touch "STOP".

## Data Monitor Item

Monitored item ["OPERATION OR UNIT"]	Description
IGN ON SW [ON/OFF]	Displays status of the ignition switch as judged from the ignition switch signal. (Key is in ON position: ON/Key is in ACC or OFF position: OFF)
DOOR SW-DR [ON/OFF]	Displays status of the driver door as judged from the driver door switch signal. (Door is open: ON/Door is closed: OFF)
AUTO LIGHT SW [ON/OFF]	Displays status of the lighting switch as judged from the lighting switch signal. (AUTO position: ON/Other than AUTO position: OFF)
HD/LMP 1ST SW [ON/OFF]	Displays status of the lighting switch as judged from the lighting switch signal. (OFF or AUTO position: OFF/Other than OFF and AUTO position: ON)
OPTICAL SEN [ON/OFF]	Displays "Illumination outside of the vehicle (close to 5V when light/close to 0V when dark)" as judged from the optical sensor signal.

## ACTIVE TEST

### Operation Procedure

1. Touch "AUTO LIGHT SYSTEM" on the "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on the "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. Touch "STOP" while testing and the operation will be stopped.

### Active Test Item

Test items	Display on CONSULT-II screen	Description
Headlamp relay output	HEAD LAMP RELAY	Headlamp relay can be operated by any on-off operation of the headlamp.
Tail lamp relay output	TAIL LAMP RELAY	Tail lamp relay can be operated by any on-off operation of the tail lamp.
Auto light adjustment output	ILL DIM SIGNAL	Night time dimming signal can be operated by any on-off operation.

## On Board Diagnosis

EKS001HB

BCM can check malfunction in each local control unit (LCU), switches, loads and communications using the self-diagnosis function.

### DIAGNOSIS ITEM


Diagnosis item	Description
Switch monitor	Checks for malfunction in switch systems that input to BCM and each LCU.

### SWITCH MONITOR

- Perform the diagnosis on the switch system to each control unit.


# HEADLAMP (FOR USA)

## How to Perform Switch Monitor

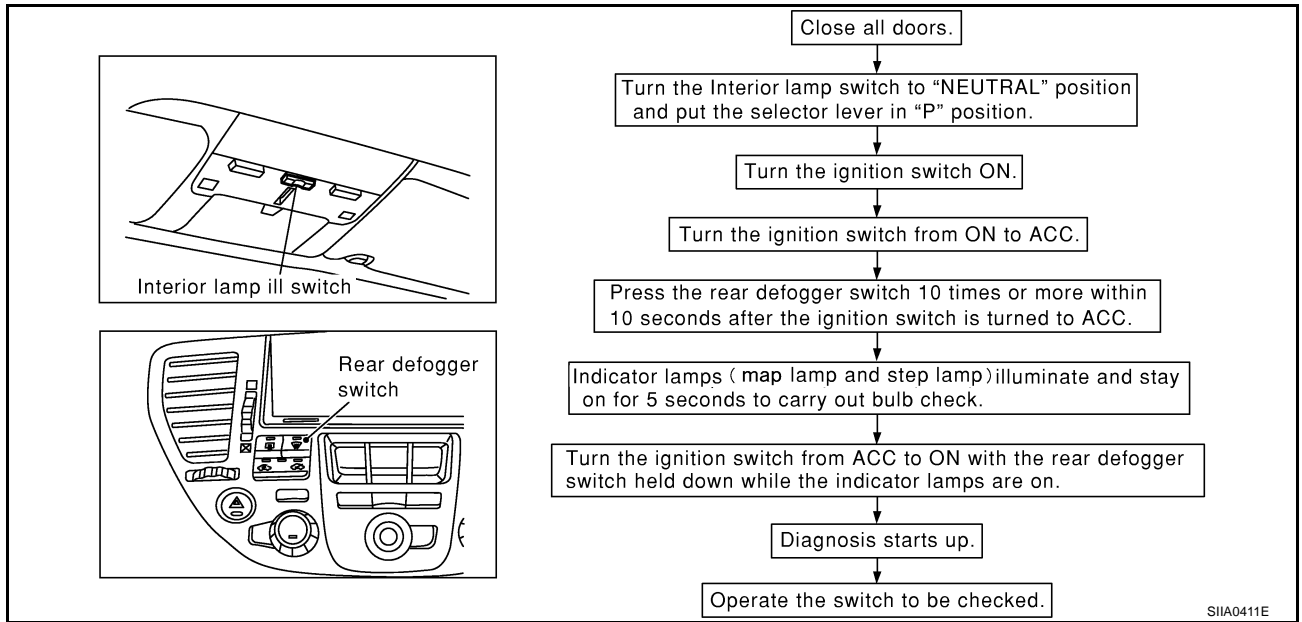

## Description

- In this mode, when BCM detects the input signal from a switch in IVMS as shown below, the detection is indicated by the front map lamp and front step lamps with buzzer.

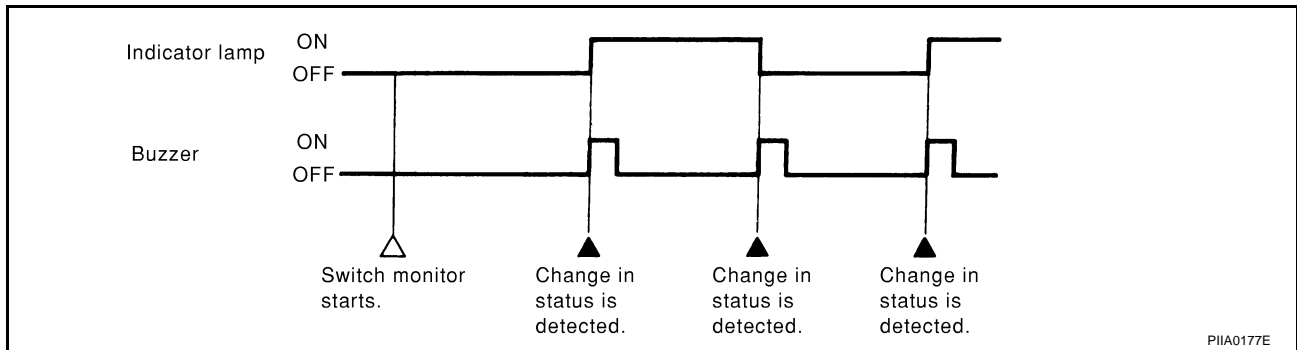

## Switch Monitor Item

- The status of the switch (except the ignition switch, interior lamp ill switch, and map lamp switch) as input to each control unit can be monitored.

Control unit	Item
BCM	Lighting switch (AUTO, 1ST position)
	Driver door switch

## Cancel of Switch Monitor

If the following conditions are satisfied, the communication diagnosis is cancelled.

- Turn ignition switch OFF.
- Drive the vehicle more than 7 km/h (4 MPH).

# HEADLAMP (FOR USA)

## Symptom Chart HEADLAMP SYSTEM

EKS001HC

Symptom	Repair Procedure
Neither headlamp operates.	<ol style="list-style-type: none"> <li>1. Check 10A fuse [No. 6, located in fuse block (J/B)]. Verify battery positive voltage is present at terminal 7 of headlamp battery saver control unit.</li> <li>2. Check lighting switch. Refer to <a href="#">LT-66, "Switch Circuit Inspection"</a>.</li> <li>3. Check headlamp battery saver control unit. Refer to <a href="#">LT-15, "Terminals and Reference Value for Battery Saver Control Unit"</a>.</li> </ol>
Headlamp (low beam) does not operate, but headlamp (high beam) does operate.	<ol style="list-style-type: none"> <li>1. Check 20A fuse [No. 57, located in fuse, fusible link and relay block (J/B)]. Verify battery positive voltage is present at terminals 2 and 3 of headlamp relay-1.</li> <li>2. Check headlamp relay-1.</li> <li>3. Check harness between headlamp relay-1 and headlamp battery saver control unit.</li> <li>4. Check headlamp battery saver control unit. Refer to <a href="#">LT-15, "Terminals and Reference Value for Battery Saver Control Unit"</a>.</li> </ol>
Headlamp (high beam) does not operate, but headlamp (low beam) does operate.	<ol style="list-style-type: none"> <li>1. Check 15A fuse (No. 73, located in fuse, fusible link and relay box). Verify battery positive voltage is present at terminals 2 and 5 of headlamp relay-2.</li> <li>2. Check headlamp relay-2.</li> <li>3. Check harness between headlamp relay-2 and battery saver control unit.</li> <li>4. Check headlamp battery saver control unit. Refer to <a href="#">LT-15, "Terminals and Reference Value for Battery Saver Control Unit"</a>.</li> </ol>
RH low beam does not operate, but LH low beam does operate.	<ol style="list-style-type: none"> <li>1. Check 20A fuse [No. 55, located in fuse, fusible link and relay block (J/B)]. Verify battery positive voltage is present at terminal 7 of headlamp relay-1.</li> <li>2. Check headlamp relay-1.</li> <li>3. Check harness between headlamp relay-1 terminal 6 and RH headlamp for open circuit.</li> <li>4. Check RH low beam ground circuit.</li> <li>5. Replace the xenon bulb with other side bulb or new one. (If eclampsia illuminate correctly, replace the bulb.)</li> <li>6. Replace the HID control unit with other side control unit or new one. (If eclampsia illuminate correctly, replace the HID control unit.)</li> </ol>
LH low beam does not operate, but RH low beam does operate.	<ol style="list-style-type: none"> <li>1. Check 20A fuse [No. 57, located in fuse, fusible link and relay block (J/B)]. Verify battery positive voltage is present at terminal 3 of headlamp relay-1.</li> <li>2. Check headlamp relay-1.</li> <li>3. Check harness between headlamp relay-1 terminal 5 and LH headlamp for open circuit.</li> <li>4. Check LH low beam ground circuit.</li> <li>5. Replace the xenon bulb with other side bulb or new one. (If eclampsia illuminate correctly, replace the bulb.)</li> <li>6. Replace the HID control unit with other side control unit or new one. (If headlamps illuminate correctly, replace the HID control unit.)</li> </ol>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M

LT

# HEADLAMP (FOR USA)

Symptom	Repair Procedure
RH high beam does not operate, but LH high beam does operate.	<ol style="list-style-type: none"> <li>1. Check bulb.</li> <li>2. Check harness between headlamp relay-2 terminal 3 and headlamp RH terminal 13.</li> <li>3. Check lighting switch. Refer to <a href="#">LT-66, "Switch Circuit Inspection"</a>.</li> <li>4. Check harness between headlamp RH terminal 14 and lighting switch.</li> <li>5. Check lighting switch ground circuit.</li> </ol>
LH high beam does not operate, but RH high beam does operate.	<ol style="list-style-type: none"> <li>1. Check bulb.</li> <li>2. Check harness between headlamp relay-2 terminal 3 and headlamp LH terminal 13.</li> <li>3. Check lighting switch. Refer to <a href="#">LT-66, "Switch Circuit Inspection"</a>.</li> <li>4. Check harness between headlamp LH terminal 14 and lighting switch.</li> <li>5. Check lighting switch ground circuit.</li> </ol>
High beam indicator does not work.	<ol style="list-style-type: none"> <li>1. Check bulb in combination meter.</li> <li>2. Check harness between headlamp relay-2 terminal 3 and lighting switch for open circuit.</li> </ol>
Battery saver control does not operate properly.	<ol style="list-style-type: none"> <li>1. Verify 12 positive voltage from BCM is present at terminal 10 of headlamp battery saver control unit: <ul style="list-style-type: none"> <li>- Within 45 seconds after ignition switch turns off.</li> <li>- When front door LH and RH is closed.</li> </ul> </li> <li>2. Check the following. <ul style="list-style-type: none"> <li>- Harness between BCM and LH or RH front door switch for open or short circuit.</li> <li>- LH or RH front door switch ground circuit.</li> <li>- LH or RH front door switch.</li> </ul> </li> <li>3. Check the following. <ul style="list-style-type: none"> <li>- Harness between headlamp battery saver control unit terminals 5 or 13 and lighting switch terminal 11 for open or short circuit.</li> <li>- Harness between lighting switch terminal 5 and ground.</li> <li>- Lighting switch. Refer to <a href="#">LT-66, "Switch Circuit Inspection"</a>.</li> </ul> </li> <li>4. Check headlamp battery saver control unit. Refer to <a href="#">LT-15, "Terminals and Reference Value for Battery Saver Control Unit"</a>.</li> <li>5. Check BCM. Refer to <a href="#">LT-17, "Terminals and Reference Value for BCM"</a>.</li> </ol>

## AUTO LIGHT SYSTEM

Symptom	Malfunctioning system and reference
<ul style="list-style-type: none"> <li>● Clearance lamps and headlamps will not illuminate when outside of the vehicle becomes dark. (Lighting switch 1st position and 2nd position operate normally.)</li> <li>● Clearance lamps and headlamp will not go out when outside of the vehicle becomes light. (Lighting switch 1st position and 2nd position operate normally.)</li> <li>● Headlamps go out when outside of the vehicle becomes light, but clearance lamps stay on.</li> </ul>	<ul style="list-style-type: none"> <li>● Lighting switch (AUTO) system. Refer to <a href="#">LT-25, "Lighting Switch (AUTO) System Check"</a>.</li> <li>● Optical sensor system. Refer to <a href="#">LT-26, "Optical Sensor System Check"</a>.</li> </ul> <p>If above systems are normal, replace the BCM.</p>
<p>Clearance lamps illuminate when outside of the vehicle becomes dark, but headlamp stay off. (Lighting switch 1st position and 2nd position operate normally.)</p>	<ul style="list-style-type: none"> <li>● Headlamp relay system. Refer to <a href="#">LT-28, "Headlamp Relay System Check"</a>.</li> <li>● Optical sensor system. Refer to <a href="#">LT-26, "Optical Sensor System Check"</a>.</li> </ul> <p>If above systems are normal, replace the BCM.</p>



# HEADLAMP (FOR USA)

Symptom	Malfunctioning system and reference
Headlamps illuminate when outside of the vehicle becomes dark, but clearance lamps stay off. (Lighting switch 1st position and 2nd position operate normally.)	<ul style="list-style-type: none"> <li>Tail lamp relay system. Refer to <a href="#">LT-28. "Tail Lamp Relay System Check"</a> .</li> </ul> If above system is normal, replace the BCM.
<ul style="list-style-type: none"> <li>Headlamps and clearance lamps will not illuminate when the driver door is opened with ignition switch in OFF position.</li> <li>Headlamps and clearance lamps go out as soon as the ignition switch is turned OFF with the driver door closed.</li> </ul>	<ul style="list-style-type: none"> <li>Driver door switch system. Refer to <a href="#">LT-29. "Driver Door Switch System Check"</a> .</li> </ul> If above system is normal, replace the BCM.

## Lighting Switch (AUTO) System Check

EKS001HD


### 1. CHECK LIGHTING SWITCH AUTO SIGNAL

 With CONSULT-II

- Operate the lighting switch via "AUTO LIGHT SWITCH" on DATA MONITOR screen and check that the lamp turns on and off as commanded.

**Lighting switch AUTO : ON**

**Lighting switch OFF : OFF**

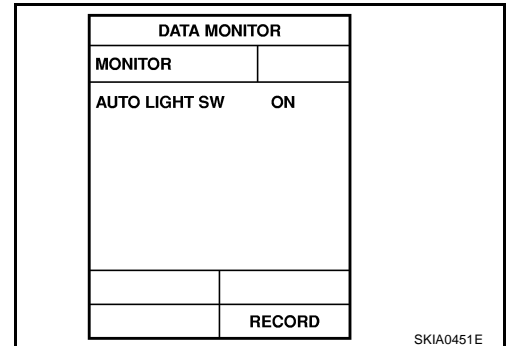

 Without CONSULT-II

- Operate the lighting switch via "switch monitor" of self-diagnosis function check that the lamp turns on and off as commanded.

OK or NG

OK >> Lighting switch (AUTO) is OK.

NG >> GO TO 2.

### 2. CHECK LIGHTING SWITCH AUTO SIGNAL HARNESS

- Turn the ignition switch OFF.
- Disconnect the BCM connector.
- Check continuity between BCM harness connector M4 terminal 14(Y) and body ground while operating the lighting switch in AUTO.


**Lighting switch AUTO**

**14 - Body ground : Continuity should exist.**

OK or NG

OK >> Lighting switch (AUTO) is OK.

NG >> GO TO 3.

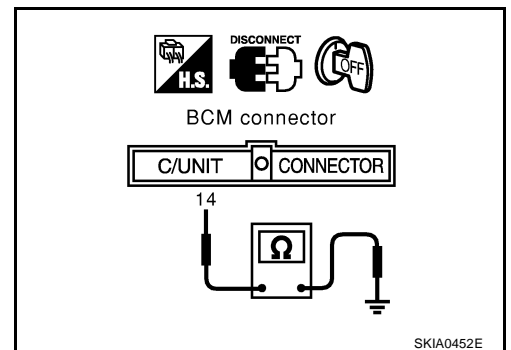


# HEADLAMP (FOR USA)

## 3. CHECK WIRE HARNESS CONTINUITY

1. Disconnect the lighting switch connector.
2. Check continuity at the harness between BCM harness connector M4 terminal 14(Y) and the lighting switch harness connector M55 terminal 42(Y).
3. Check continuity between BCM harness connector M4 terminal 14(Y) and body ground.

**14(Y) - 42(Y) : Continuity should exist.**  
**14(Y) - Body ground : Continuity should not exist.**

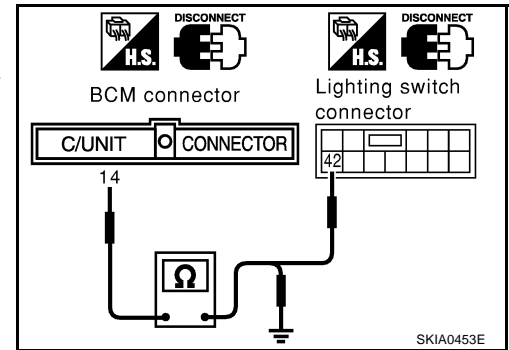

OK or NG

- OK >> GO TO 4.  
 NG >> Repair or replace harness.

## 4. CHECK LIGHTING SWITCH

Check continuity of the lighting switch. Refer to [LT-66, "Switch Circuit Inspection"](#).

OK or NG

- OK >> Check harness between the lighting switch and body ground.  
 NG >> Replace the lighting switch.

## Optical Sensor System Check


EKS001HE

### 1. CHECK OUTPUT SIGNAL

With CONSULT-II

- Using "OPTICAL SEN" on DATA MONITOR screen, check difference in the voltage when light is applied to optical sensor and light is not applied to optical sensor.


**Light is applied**  
**Optical sensor : More than 3.0V**  
**Light is not applied**  
**Optical sensor : Approx. 0.5V**

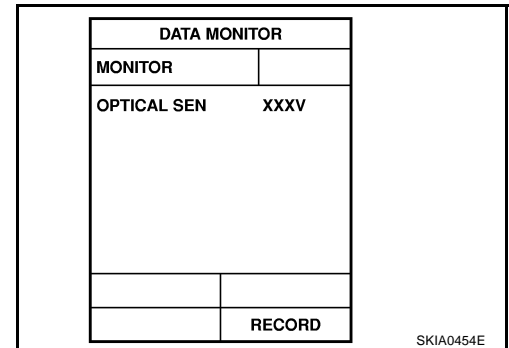

Without CONSULT-II

- Turn the ignition switch to ACC position.
- Check voltage between BCM harness connector M4 terminal 52(G/R) and body ground when light is applied to optical sensor and light is not applied to optical sensor.

**52 - Body ground**  
**Light is applied : More than 3.0V**  
**Light is not applied : Approx. 0.5V**

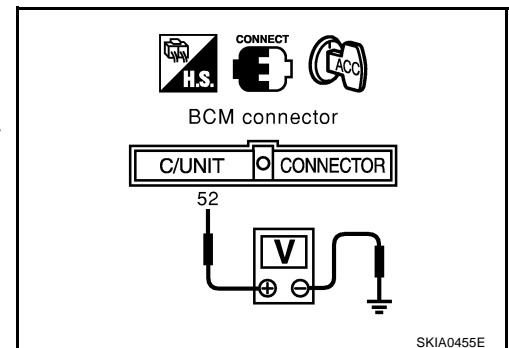

OK or NG


- OK >> Optical sensor is OK.  
 NG >> GO TO 2.

# HEADLAMP (FOR USA)

## 2. CHECK POWER SUPPLY CIRCUIT CONTINUITY.

1. Disconnect the BCM connector and the optical sensor connector.
2. Check continuity at the harness between BCM harness connector M4 terminal 59(SB) and the optical sensor harness connector M110 terminal 1(SB).
3. Check continuity between BCM harness connector M4 terminal 59(SB) and body ground.

**59(SB) - 1(SB) : Continuity should exist.**  
**59(SB) - Body ground : Continuity should not exist.**

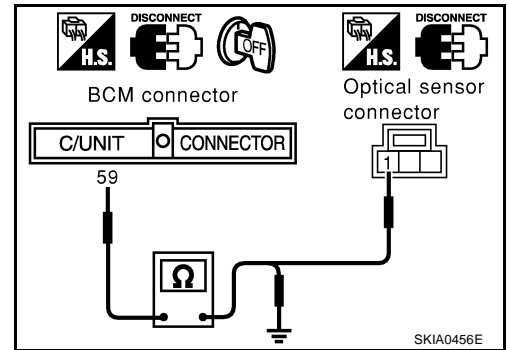


OK or NG

- OK >> GO TO 3.  
NG >> Repair or replace harness.

## 3. CHECK OUTPUT CIRCUIT CONTINUITY

1. Check continuity at the harness between BCM harness connector M4 terminal 52(G/R) and the optical sensor harness connector M110 terminal 2(G/R).
2. Check continuity between BCM harness connector M4 terminal 52(G/R) and body ground.

**52(G/R) - 2(G/R) : Continuity should exist.**  
**52(G/R) - Body ground : Continuity should not exist.**

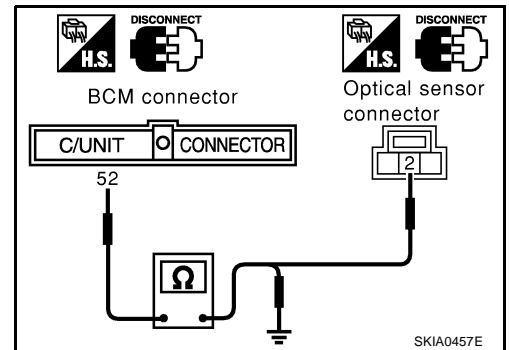


OK or NG

- OK >> GO TO 4.  
NG >> Repair or replace harness.

## 4. CHECK GROUND CIRCUIT CONTINUITY

1. Check continuity at the harness between BCM harness connector M4 terminal 58(Y/B) and the optical sensor harness connector M110 terminal 3(Y/B).
2. Check continuity between BCM harness connector M4 terminal 58(Y/B) and body ground.

**58(Y/B) - 3(Y/B) : Continuity should exist.**  
**58(Y/B) - Body ground : Continuity should not exist.**

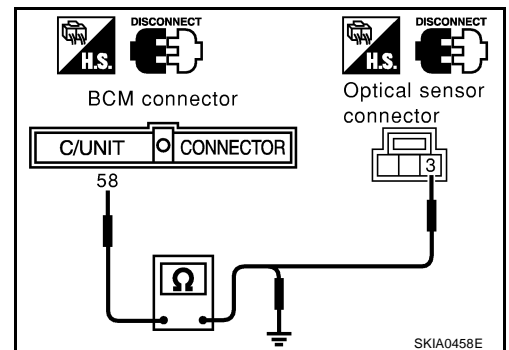

OK or NG

- OK >> GO TO 5.  
NG >> Check harness between BCM and the optical sensor.

# HEADLAMP (FOR USA)

## 5. CHECK OPTICAL SENSOR

1. Apply 5V between optical sensor terminals 1 (power) and 3 (ground).
2. Check voltage between optical sensor terminal 2 and body ground when light is applied to optical sensor and light is not applied to optical sensor.

**2 - Body ground**


**Lighting is applied : More than 3.0V**

**Lighting is not applied : Approx. 0.5V**

OK or NG

OK >> Optical sensor is OK.

NG >> Replace the optical sensor.

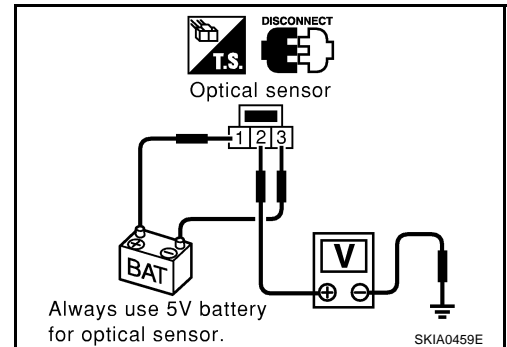

## Headlamp Relay System Check

### 1. CHECK HEADLAMP RELAY CONTROL SIGNAL VOLTAGE

1. Turn the ignition switch OFF.
2. Disconnect the BCM connector.
3. Check voltage between BCM harness connector M4 terminal 5(R/Y) and body ground while operating the lighting switch in OFF.


**Lighting switch OFF**

**5 - Body ground : Battery voltage should exist.**

OK or NG

OK >> Headlamp relay is OK.

NG >> Check harness for open or short between BCM and headlamp relay-1 and 2.

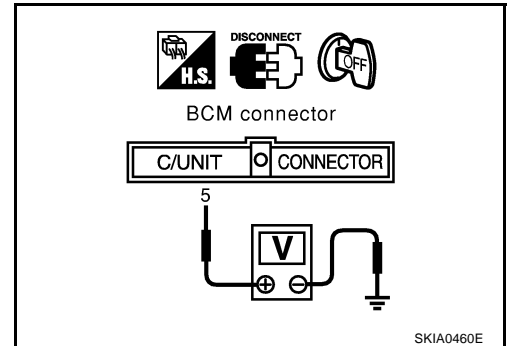

## Tail Lamp Relay System Check

### 1. CHECK TAIL LAMP RELAY CONTROL SIGNAL VOLTAGE

1. Turn the ignition switch OFF.
2. Disconnect the BCM connector.
3. Check voltage between BCM harness connector M4 terminal 11(LG/B) and body ground while operating the lighting switch in OFF.


**Lighting switch OFF**

**11 - Body ground : Battery voltage should exist.**

OK or NG

OK >> GO TO 2.

NG >> Check harness between BCM and tail lamp relay.

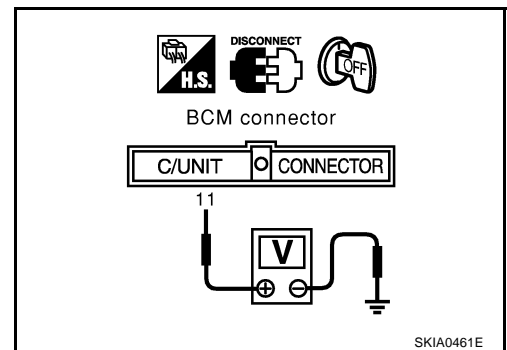

# HEADLAMP (FOR USA)

## 2. CHECK TAIL LAMP SIGNAL VOLTAGE


Check voltage between BCM harness connector M4 terminal 3(R/L) and body ground while operating lighting switch in 1ST position.

**Lighting switch in  
1ST position**

**3 - Body ground : Battery voltage should exist.**

OK or NG

- OK >> Tail lamp relay is OK.
- NG >> GO TO 3.

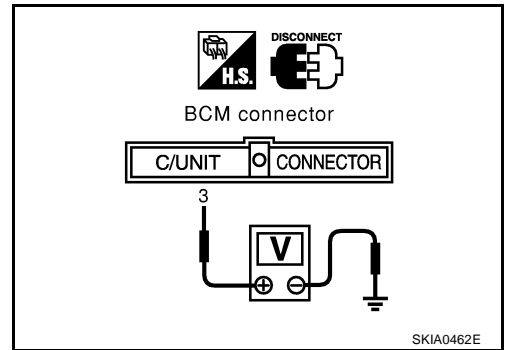

## 3. CHECK TAIL LAMP RELAY


1. Remove the tail lamp relay.
2. Apply 12V between tail lamp relay terminals 2 and 1, and check continuity between terminals 3 and 5 and between 6 and 7.

**3 - 5 : Continuity should exist.**

**6 - 7 : Continuity should exist.**

OK or NG

- OK >> Check harness for open or short between BCM harness connector M4 terminal 3 (R/L) and the tail lamp relay harness connector E3-3 terminal 12R.
- NG >> Replace the tail lamp relay.

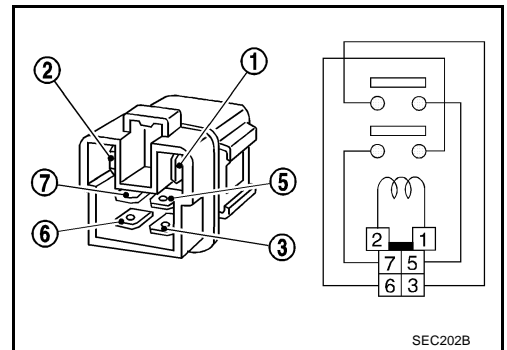


## Driver Door Switch System Check

### 1. CHECK DOOR SWITCH SIGNAL

With CONSULT-II

- Open and close the driver door via “DOOR SW-DR” on “DATA MONITOR” screen and check that the switch turns on and off as commanded.

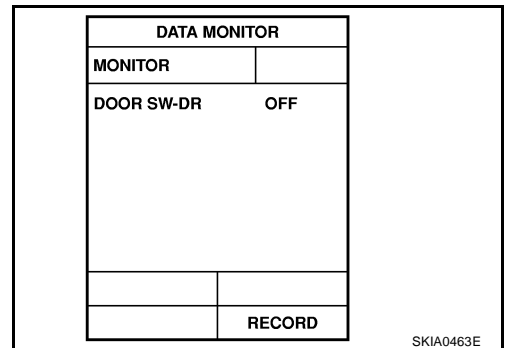

Without CONSULT-II

- Open and close the driver door and check that the switch turns on and off by “switch monitor” in the self-diagnosis function.

OK or NG


- OK >> Driver door switch is OK.
- NG >> GO TO 2.

# HEADLAMP (FOR USA)

## 2. CHECK WIRE HARNESS CONTINUITY

1. Disconnect the BCM connector and the driver door switch connector.
2. Check continuity at the harness between BCM harness connector B4 terminal 142(W/R) and the driver door switch harness connector B20 terminal 1(W/R).
3. Check continuity between BCM connector B4 terminal 142(W/R) and body ground.

**142(W/R) - 1(W/R) : Continuity should exist.**  
**142(W/R) - Body ground : Continuity should not exist.**

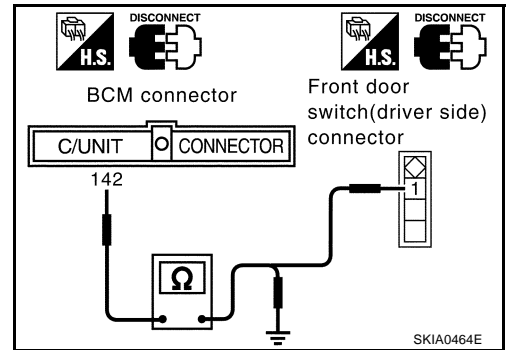


OK or NG

- OK >> GO TO 3.  
NG >> Repair or replace harness.

## 3. CHECK FRONT DOOR SWITCH (DRIVE SIDE)

Check continuity between front door switch (driver side) connector B20 terminal 1 (W/R) and body ground while turning front door switch (driver side) ON (switch released) and OFF (switch pressed).


**1 - Body ground**  
**ON (switch released) : Continuity should exist.**  
**OFF (switch pressed) : Continuity should not exist.**

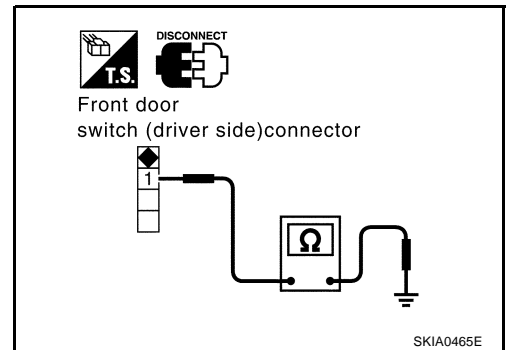

OK or NG

- OK >> Front door switch (driver side) is OK.  
NG >> Replace the front door switch (driver side).

## Aiming Adjustment

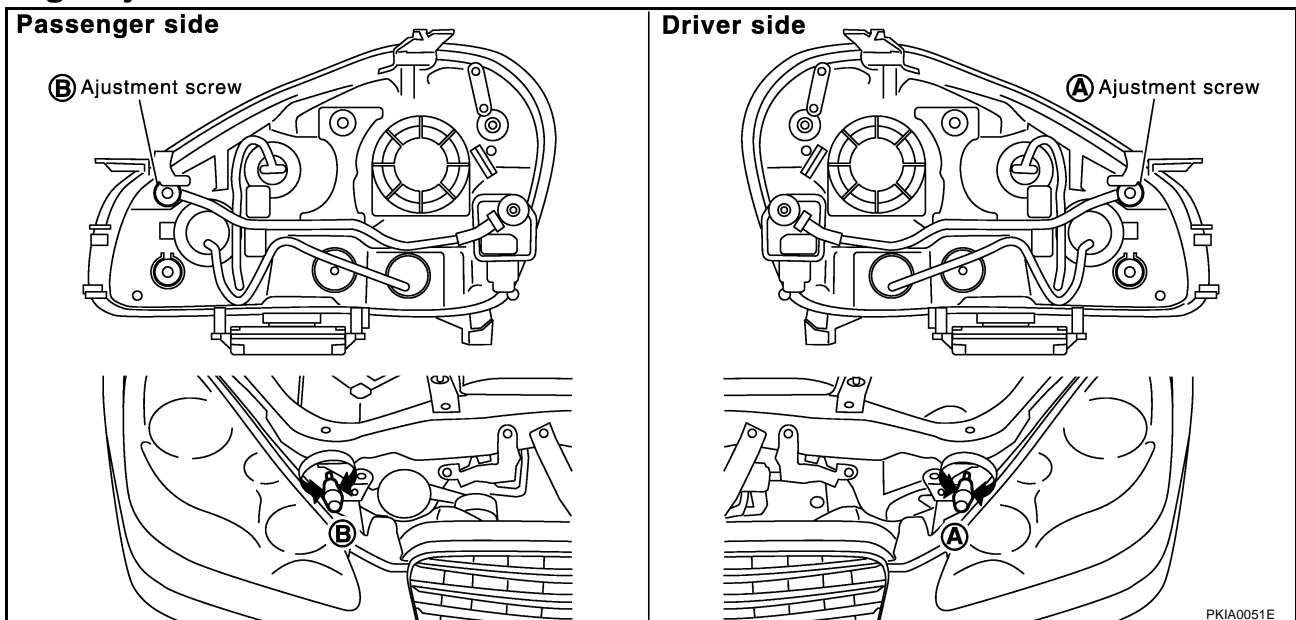

**For details, refer to the regulations in your own country.**


Before performing aiming adjustment, check the following.

1. Keep all tires inflated to correct pressures.
2. Place vehicle on flat surface.
3. See that there is no-load in vehicle other than the driver (or equivalent weight placed in driver's position). Coolant, engine oil filled up to correct level and full fuel tank.

# HEADLAMP (FOR USA)

## LOW BEAM AND HIGH BEAM

1. Turn headlamp low beam on.
2. Use adjusting screws to perform aiming adjustment.
  - **First tighten the adjusting screw all the way and then make adjustment by loosening the screw.**

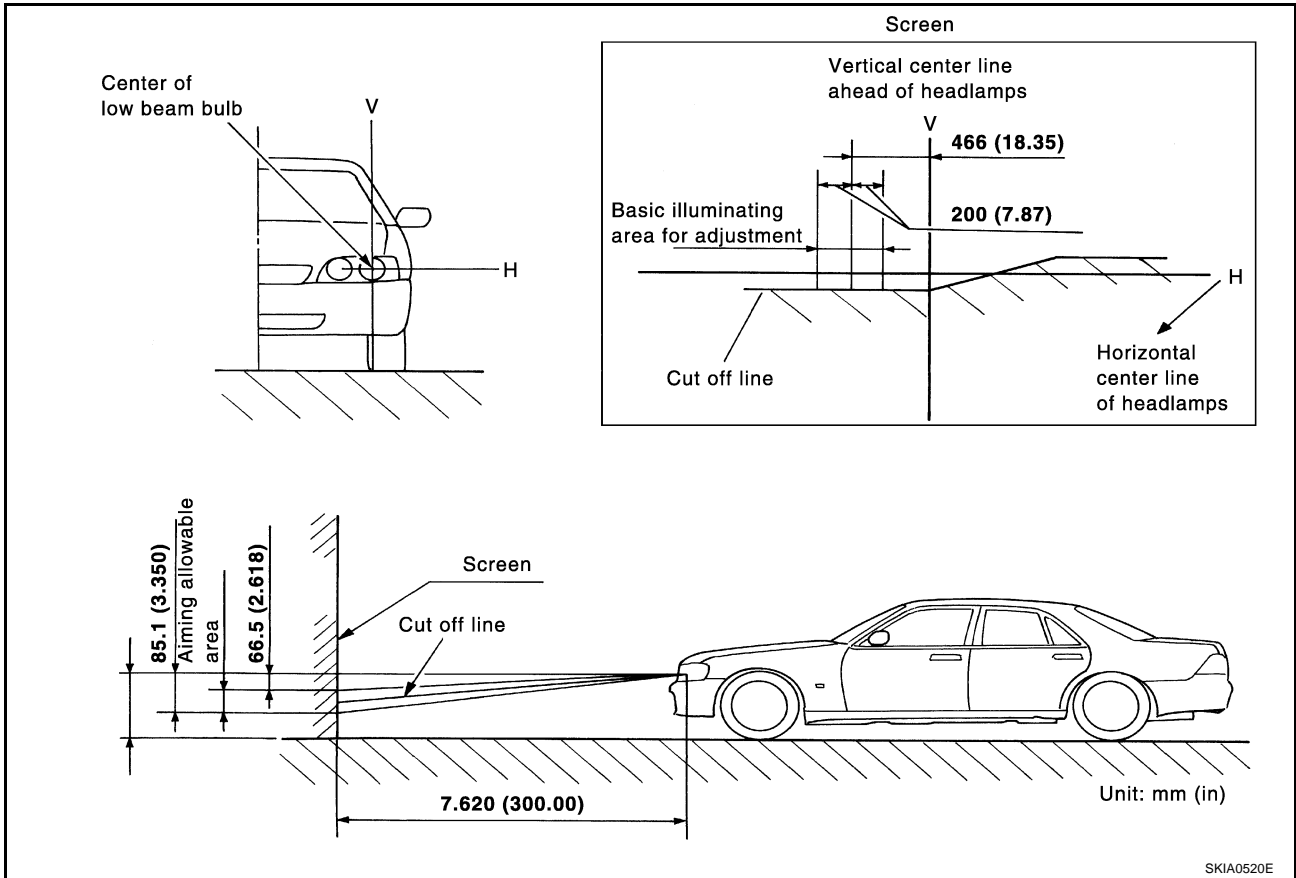


If the vehicle front body has been repaired and/or the headlamp assembly has been replaced, check aiming. Use the aiming chart shown in the figure.

- **Basic illuminating area for adjustment should be within the range shown on the aiming chart. Adjust headlamps accordingly.**

### CAUTION:

Be sure aiming switch is set to "0" when performing aiming adjustment.

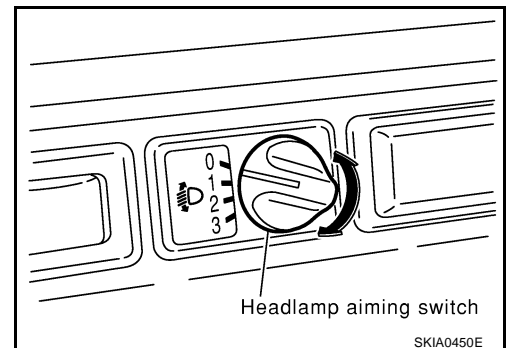

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M


LT

# HEADLAMP (FOR USA)

EKS001HJ

## Bulb Replacement HEADLAMP (OUTER SIDE), FOR LOW BEAM

1. Remove the headlamps. Refer to [LT-33, "Removal and Installation"](#).
2. Turn the plastic cap counterclockwise and unlock it.
3. Disconnect the headlamp connector.
4. Turn the bulb socket counterclockwise and unlock it.
5. Unlock the retaining spring and remove the bulb from the headlamp.

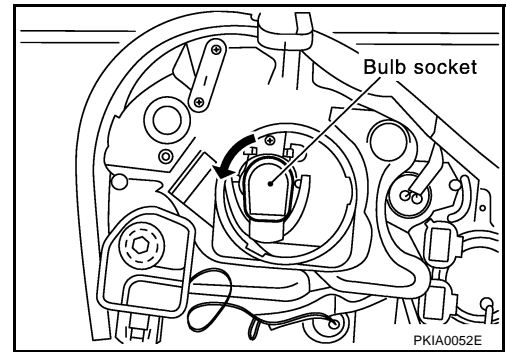

## HEADLAMP (INNER SIDE), FOR HIGH BEAM

1. Turn the lighting switch OFF.
2. Disconnect the negative battery cable or remove the power fuse.
3. Disconnect the headlamp connector.
4. Remove the mass airflow sensor cover and the air cleaner (when replacing LH bulb). Refer to [EM-15, "AIR CLEANER AND AIR DUCT"](#) in "ENGINE MECHANICAL (EM)" section.
5. Remove the battery cover and the battery (when replacing RH bulb). Refer to [SC-8, "Removal and Installation"](#) in "STARTING AND CHARGING SYSTEM (SC)" section.
6. Turn the plastic cap counterclockwise and unlock it.
7. Disconnect the terminal connected to the bulb.
8. Unlock the retaining spring and remove the bulb from the headlamp.

## PARKING LAMP (CLEARANCE LAMP)

1. Turn the lighting switch OFF.
2. Disconnect the negative battery cable or remove the power fuse.
3. Disconnect the headlamp connector.
4. Remove the mass airflow sensor cover and the air cleaner (when replacing LH bulb). Refer to [EM-15, "AIR CLEANER AND AIR DUCT"](#) in "ENGINE MECHANICAL (EM)" section.
5. Remove the battery cover and the battery (when replacing RH bulb). Refer to [SC-8, "Removal and Installation"](#) in "STARTING AND CHARGING SYSTEM (SC)" section.
6. Turn the bulb socket counterclockwise and unlock it.
7. Remove the bulb from its socket.

## FRONT TURN SIGNAL LAMP

1. Turn the lighting switch OFF.
2. Disconnect the negative battery cable or remove the power fuse.
3. Disconnect the headlamp connector.
4. Remove the mass airflow sensor cover and the air cleaner assembly (when replacing LH bulb). Refer to [EM-15, "Removal and Installation"](#) in "ENGINE MECHANICAL (EM)" section.
5. Remove the battery cover and the battery (when replacing RH bulb). Refer to [SC-8, "Removal and Installation"](#) in "STARTING AND CHARGING SYSTEM (SC)" section.
6. Turn the bulb socket counterclockwise and unlock it.
7. Remove the bulb from its socket.

## FRONT SIDE MARKER LAMP

1. Turn the lighting switch OFF.
2. Disconnect the negative battery cable or remove the power fuse.
3. Disconnect the headlamp connector.
4. Remove the engine undercover and fender protector.
5. Remove the washer tank (when replacing LH bulb).
6. Turn the bulb socket counterclockwise and unlock it.



# HEADLAMP (FOR USA)

7. Remove the bulb from its socket.

**Headlamp (outer side), for low beam** : 12V 35W (D2S)

**Headlamp (inner side), for high beam** : 12V 55W (H1)

**Parking lamp (clearance lamp)** : 12V 5W

**Front turn signal lamp** : 12V 27W (amber)

**Front side marker lamp** : 12V 5W


## CAUTION:

After installing the bulb, be sure to install the plastic cap and the bulb socket securely to ensure watertightness.


## Removal and Installation

### REMOVAL

1. Remove the front grille. Refer to [EI-20, "FRONT GRILLE"](#) in "EXTERIOR & INTERIOR (EI)" section.
2. Remove the filler cap on the washer tank and the front air guide.
3. Remove the front undercover and the fender protector. Refer to [EI-22, "FENDER PROTECTOR"](#) in "EXTERIOR & INTERIOR (EI)" section.
4. Remove mounting clip on top of the front bumper and mounting bolts on the side of the front bumper. Refer to [EI-15, "FRONT BUMPER"](#) in "EXTERIOR & INTERIOR (EI)" section.

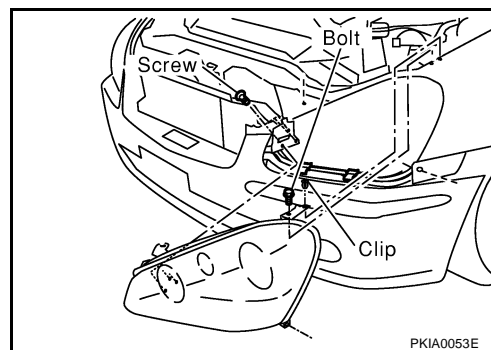

5. Pull the side of the front bumper toward the front of the vehicle and disengage it from clips on the body.
6. Remove the headlamp mounting bolts and clip.
7. Remove the headlamp mounting screws inside the headlamp.
8. Pull the headlamp toward the front of the vehicle, disconnect the connector, and remove from the vehicle.

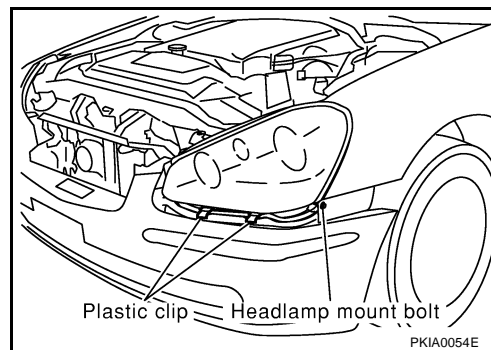

## CAUTION:

When removing the headlamp, place a rag between the headlamp and the bumper to protect the bumper.

### INSTALLATION

Install in the reverse order of removal, taking care of the following points.

**Headlamp mounting bolt:**

 : 4.4 - 6.5 N·m (0.45 - 0.66 kg·m, 39 - 57 in·lb)


**Headlamp mounting screw:**

 : 4.4 - 6.5 N·m (0.45 - 0.66 kg·m, 39 - 57 in·lb)

# HEADLAMP (FOR USA)


EKS001HL

## Disassembly and Assembly DISASSEMBLY

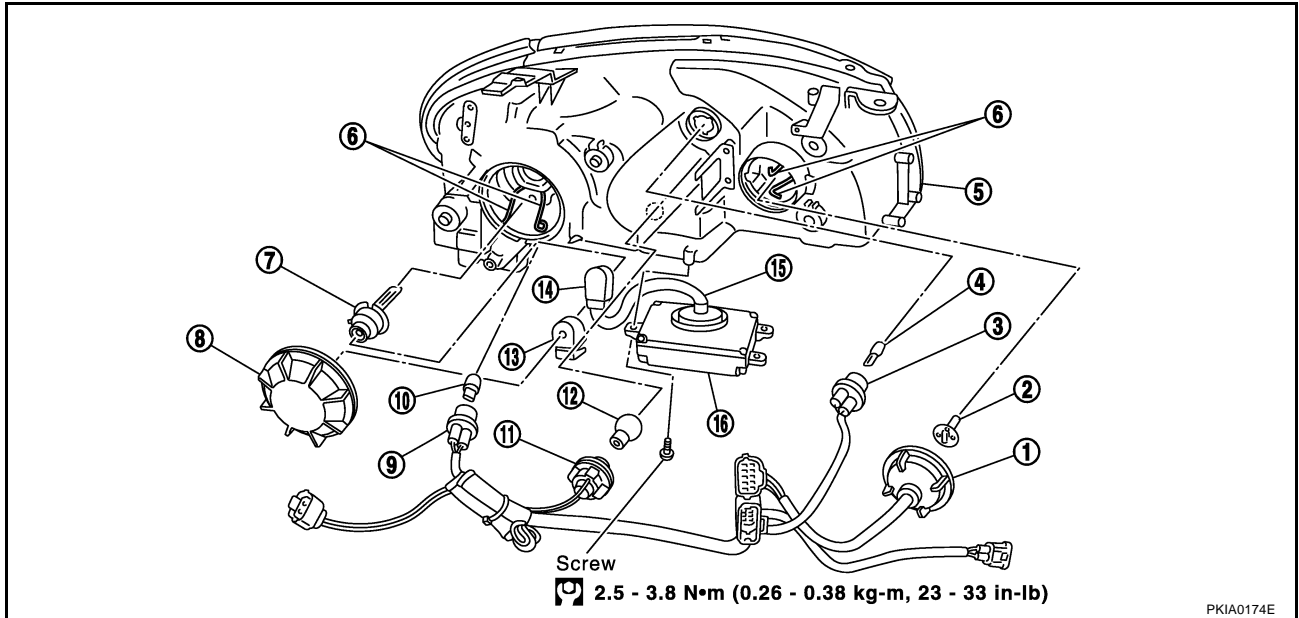


- |                                       |  |  |
|---------------------------------------|--|--|
| 1. Plastic cap (high)                 | 2. Halogen bulb                        | 3. Parking lamp (Clearance lamp) bulb socket |
| 4. Parking lamp (Clearance lamp) bulb | 5. Xenon headlamp assembly             | 6. Retaining springs                         |
| 7. Xenon bulb                         | 8. Plastic cap (low)                   | 9. Front side marker lamp bulb socket        |
| 10. Front side marker lamp bulb       | 11. Front turn signal lamp bulb socket | 12. Front turn signal lamp bulb              |
| 13. Socket cover                      | 14. Xenon bulb socket                  | 15. Mesh cord                                |
| 16. H.I.D control unit                |  |  |

1. Turn the plastic cap (low) counterclockwise and unlock it.
2. Turn the xenon bulb socket counterclockwise and unlock it.
3. Unlock the retaining spring and remove the xenon bulb (low).
4. Expand calking of socket cover, and then remove socket cover from the xenon valve socket.
5. Disconnect the H.I.D control unit connector and remove the H.I.D control unit mounting screws.

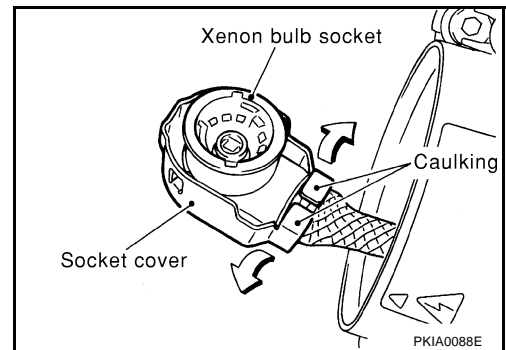


6. Turn the dipped beam vertical aiming adjustment screw counterclockwise to secure space in the headlamp for the xenon bulb socket to pass through. Tie a cord to the bulb socket to facilitate removal and insertion.

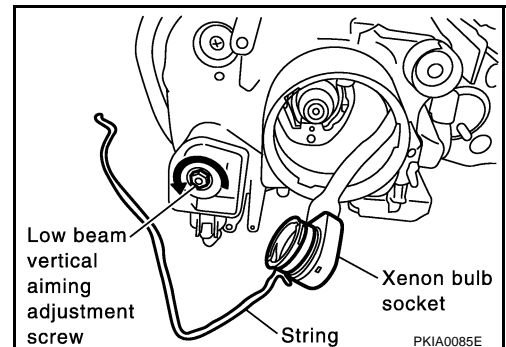


## HEADLAMP (FOR USA)

7. Face the xenon bulb socket as shown in the figure, and pull it while maintaining its direction by turning the mesh cord from the H.I.D control unit side.

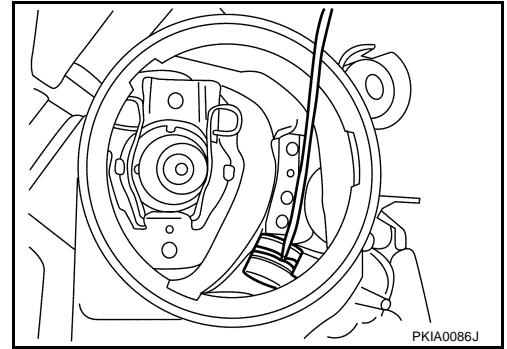


8. Face the xenon bulb socket as shown in the figure, and pull it up in the direction of arrow using the mesh cord.
9. Turn the plastic cap (high) counterclockwise and unlock it.
10. Disconnect the terminal connected to the halogen bulb.
11. Unlock the retaining spring and remove the halogen bulb (high).
12. Turn the parking lamp (clearance lamp) bulb socket counterclockwise and unlock it.
13. Remove the parking lamp (clearance lamp) bulb from its socket.
14. Turn the front side marker lamp bulb socket counterclockwise and unlock it.
15. Remove the front side marker lamp bulb from its socket.
16. Turn the front turn signal lamp bulb socket counterclockwise and unlock it.
17. Remove the front turn signal lamp bulb from its socket.

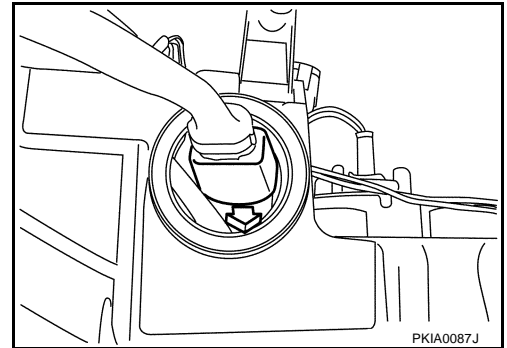

### ASSEMBLY

Assemble in the reverse order of disassembly, taking care of the following points.

#### H.I.D control unit:

 : 2.5 - 3.8 N·m (0.26 - 0.38 kg·m, 23 - 33 in·lb)

### CAUTION:

- When the H.I.D control unit is removed, reinstall it securely and avoid any looseness.
- After installing the bulb, be sure to install the plastic cap and the bulb socket securely to ensure watertightness.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M


# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

## HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

PF:26010

### Component Parts and Harness Connector Location

EKS000SK

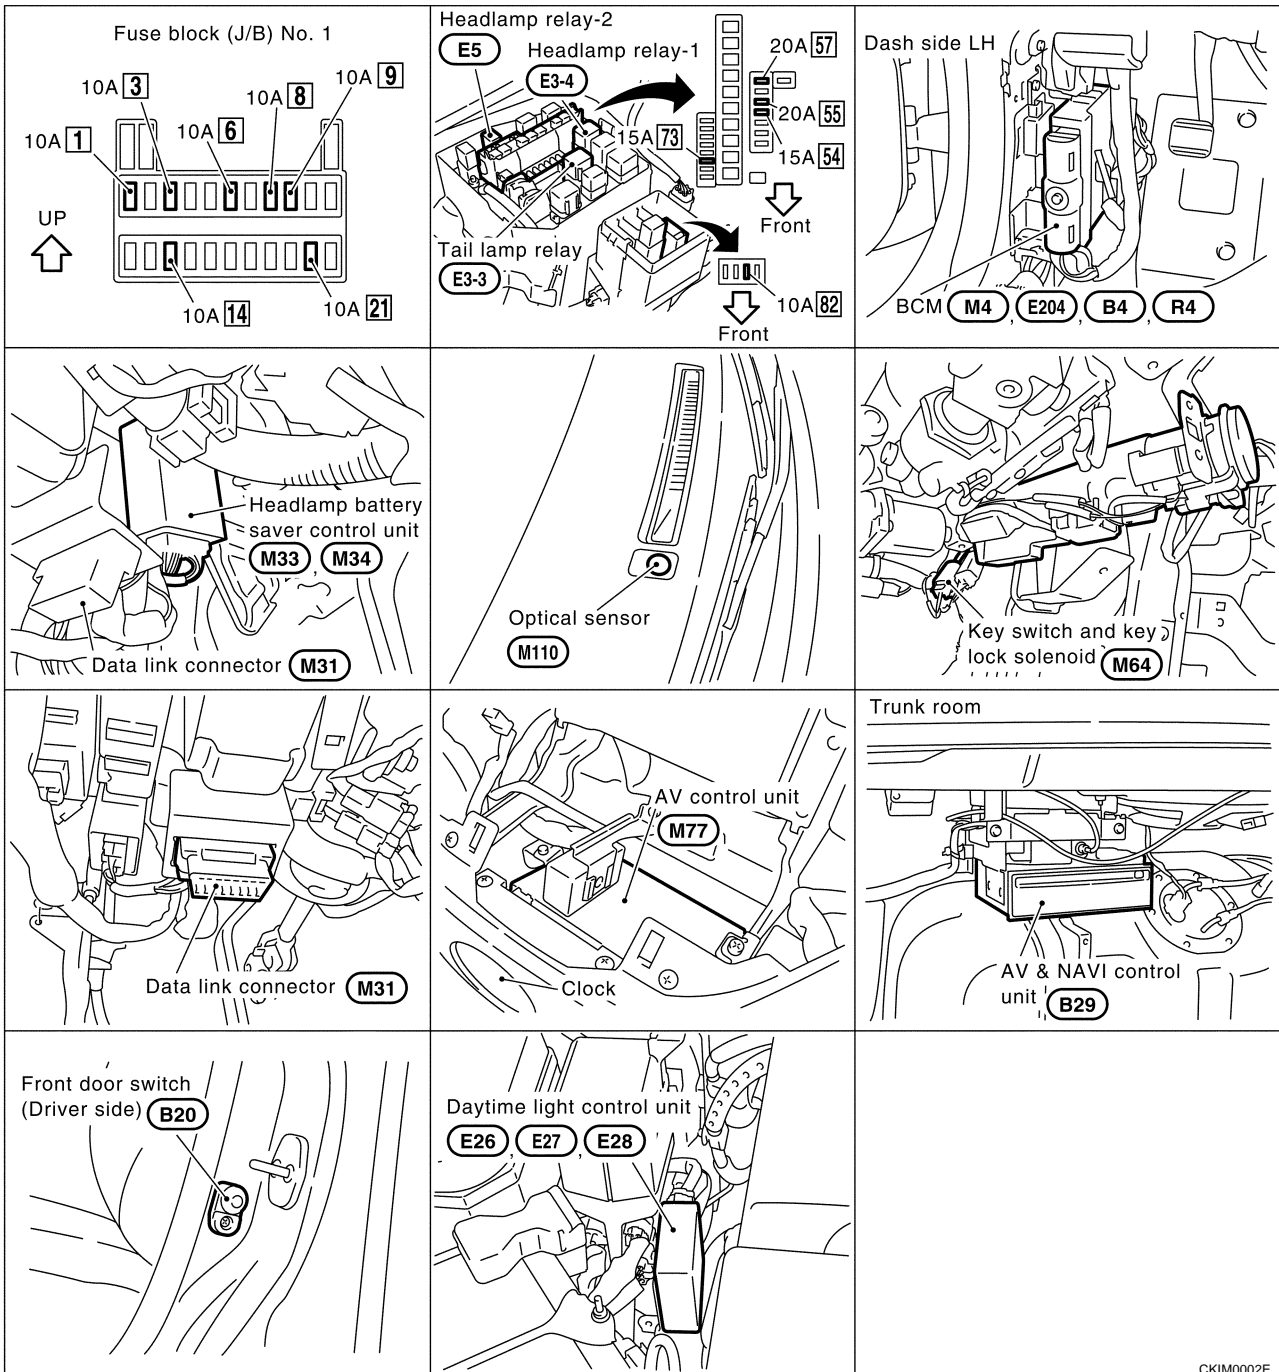

CKIM0002E

### System Description

EKS000SL

The headlamp system for Canada vehicles is equipped with a daytime light control unit that activates the high beam headlamps at approximately half illumination whenever the engine is running. If the parking brake is applied before the engine is started the daytime lights will not be illuminated. The daytime lights will illuminate once the parking brake is released. Thereafter, the daytime lights will continue to operate when the parking brake is applied.

And battery saver system is controlled by the headlamp battery saver control unit and BCM.

Power is supplied at all times

- to headlamp relay-1 terminal 2,
- to headlamp relay-1 terminal 3
- through 20A fuse [No. 57, located in the fuse, fusible link and relay block (J/B)],

# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

- to headlamp relay-1 terminal 7
- through 20A fuse [No. 55, located in the fuse, fusible link and relay block (J/B)],
- to headlamp relay-2 terminals 2 and 5
- through 15A fuse (No. 73, located in the fuse, fusible link and relay box), and
- to headlamp battery saver control unit terminal 7
- through 10A fuse [No. 6, located in the fuse block (J/B) NO.1].

Ground is supplied

- to daytime light control unit terminal 16
- through body grounds E62 and E42, and
- to headlamp battery control unit terminals 4 and 11
- through body grounds M25 and M115.

When the ignition switch is in the ON or START position, power is also supplied

- to daytime light control unit terminal 3
- through 10A fuse (No. 82, located in the fuse block),
- to headlamp battery saver control unit terminal 1, and
- to BCM terminal 68
- through 10A fuse [No. 1, located in the fuse block (J/B) NO.1].

When the ignition switch is in the ACC or ON position, power is supplied

- to BCM terminal 60
- through 10A fuse [No. 21, located in the fuse block (J/B) NO.1].

When the ignition switch is in the START position, power is supplied

- to daytime light control unit terminal 2
- through 10A fuse [No. 14, located in the fuse block (J/B) NO.1].

## HEADLAMP OPERATION

### Power Supply to Low Beam and High Beam

When lighting switch is in 2ND or PASS position, ground is supplied

- to headlamp relay-1 and 2 terminals 1
- from headlamp battery saver control unit terminal 2 and 8
- through headlamp battery saver control unit terminals 3 and 9
- through lighting switch terminal 12 and 8
- through body grounds M25 and M115.

Headlamp relays are energized and then power is supplied to headlamps.

### Low Beam Operation

When the lighting switch is turned to 2ND position and placed in LOW positions, power is supplied

- from terminal 5 and 6 of headlamp relay-1
- to terminal 7 of each headlamp

Ground is supplied

- to terminal 8 of each headlamp
- through body grounds E42 and E62.

With power and ground supplied, the low beam headlamps illuminate.

### High Beam Operation/Flash-to-pass Operation

When the lighting switch is turned to 2ND position and placed in HIGH position or PASS position, power is supplied

- through terminal 3 of headlamp relay-2
- through terminals 4 and 5 of daytime light control unit,
- to combination meter terminal 48 for the HIGH BEAM indicator.

Ground is supplied

- to terminal 14 of LH headlamp

A

B

C

D

E

F

G

H

I

J

LT

L

M

## HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

---

- through daytime light control unit terminals 10 and 13, and
- to combination meter terminal 47 for the HIGH BEAM indicator
- through lighting switch terminals 9 and 8
- through body grounds M25 and M115, and
- to terminal 14 of RH headlamp
- through daytime light control unit terminals 9 and 14
- through lighting switch terminals 6 and 5
- through body grounds M25 and M115.

With power and ground supplied, the high beam headlamps and HIGH BEAM indicator illuminate.

### BATTERY SAVER CONTROL

When the ignition switch is turned from ON (or START) to OFF (or ACC) positions while headlamps are illuminated, The RAP signal is supplied to terminal 10 of the headlamp battery saver control unit from BCM terminal 135.

After counting 45 seconds by the RAP signal from the BCM to headlamp battery saver control unit, the ground supply to terminal 1 of headlamp relay-1 and 2 from headlamp battery saver control unit terminals 2 and 8 is terminated.

Then headlamps are turned off.

The headlamps are turned off when driver or passenger door is opened even if 45 seconds have not passed after the ignition switch is turned from ON (or START) to OFF (or ACC) positions while headlamps are illuminated.

When the lighting switch is turned from OFF to 2ND after headlamps are turned to off by the battery saver control, ground is supplied

- to headlamp battery saver control unit terminals 5 and 13 from lighting switch terminal 11, and then
- to headlamp relay-1 and 2 terminals 1 from headlamp battery saver control unit terminals 2 and 8
- through headlamp battery saver control unit terminals 3 and 9, and
- through lighting switch terminal 12.

Then headlamps illuminate again.

### AUTO LIGHT OPERATION

For auto light operation, refer to [LT-7, "AUTO LIGHT OPERATION"](#) in "HEADLAMP (USA)".

### DAYTIME LIGHT OPERATION

With the engine running, the lighting switch in the OFF or 1ST position and parking brake released, power is supplied

- through daytime light control unit terminal 7
- to terminal 13 of RH headlamp
- through terminal 14 of RH headlamp
- to daytime light control unit terminal 9
- through daytime light control unit terminal 6
- to terminal 13 of LH headlamp.
- through terminal 14 of LH headlamp to daytime light control unit terminal 10

Ground is supplied

- to daytime light control unit terminals 10 and 16
- through body grounds E42 and E62.

Because the high beam headlamps are now wired in series, they operate at half illumination.

# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

## OPERATION

After starting the engine with the lighting switch in the "OFF" or "1ST" position, the headlamp high beam automatically turns on. Lighting switch operations other than the above are the same as conventional light systems.

Engine		With engine stopped									With engine running								
Lighting switch		OFF			1ST			2ND			OFF			1ST			2ND		
		Hi	Lo	P	Hi	Lo	P	Hi	Lo	P	Hi	Lo	P	Hi	Lo	P	Hi	Lo	P
Headlamp	High beam	-	-	-	-	-	×	×	-	×	●*	●*	×	●*	●*	×	×	-	×
	Low beam	-	-	-	-	-	×	×	×	×	-	-	×	-	-	×	×	×	×
Parking (clearance), side marker and tail lamp		-	-	-	×	×	×	×	×	×	-	-	-	×	×	×	×	×	×
License and instrument illumination lamp		-	-	-	×	×	×	×	×	×	-	-	-	×	×	×	×	×	×


- Hi: "HIGH BEAM" position
- Lo: "LOW BEAM" position
- P: "FLASH TO PASS" position
- ×: Lamp "ON"
- -: Lamp "OFF"
- ●: Lamp dims. (Added functions)
- \*: When starting the engine with the parking brake released, the daytime light will come ON.  
When starting the engine with the parking brake pulled, the daytime light won't come ON.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

## Schematic

EKS000SM

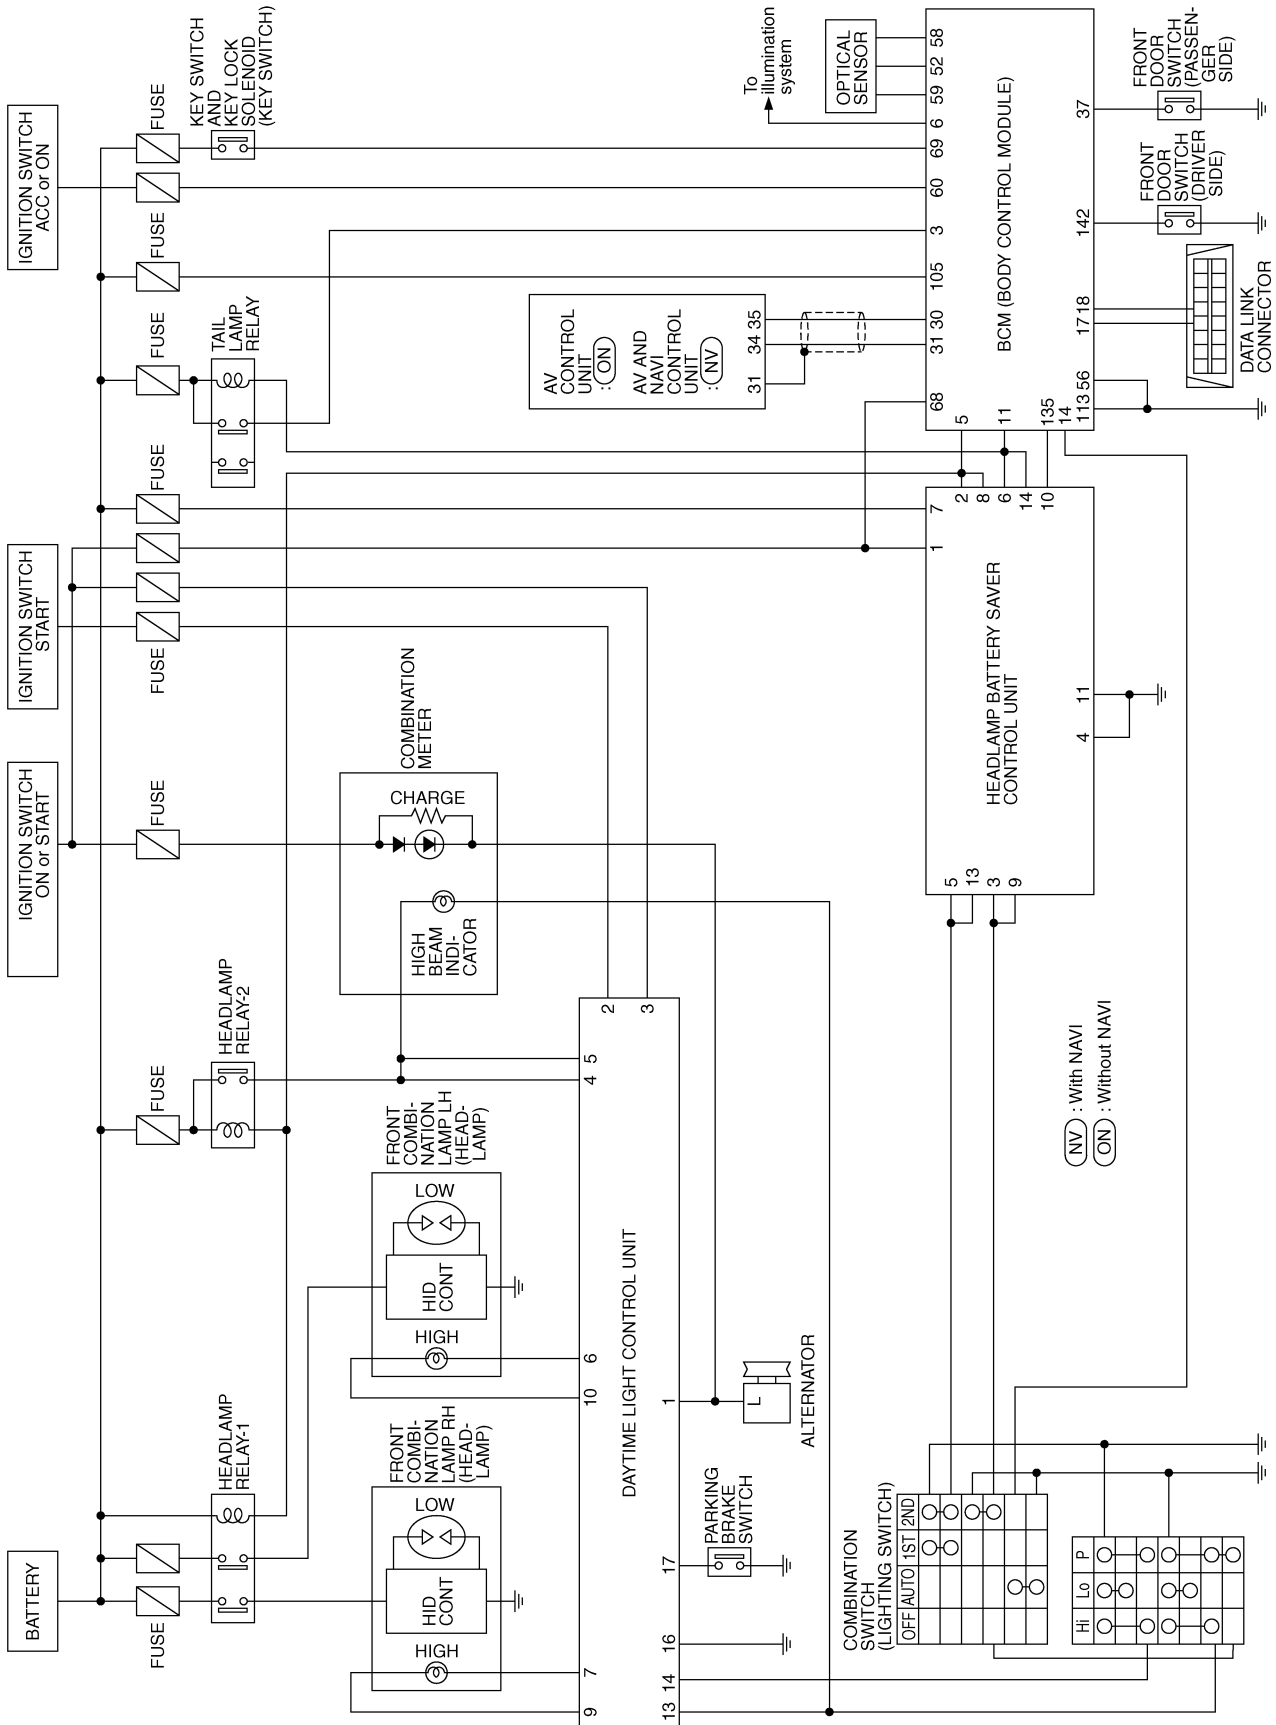



TKWM0228E





# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

LT-DTRL-02

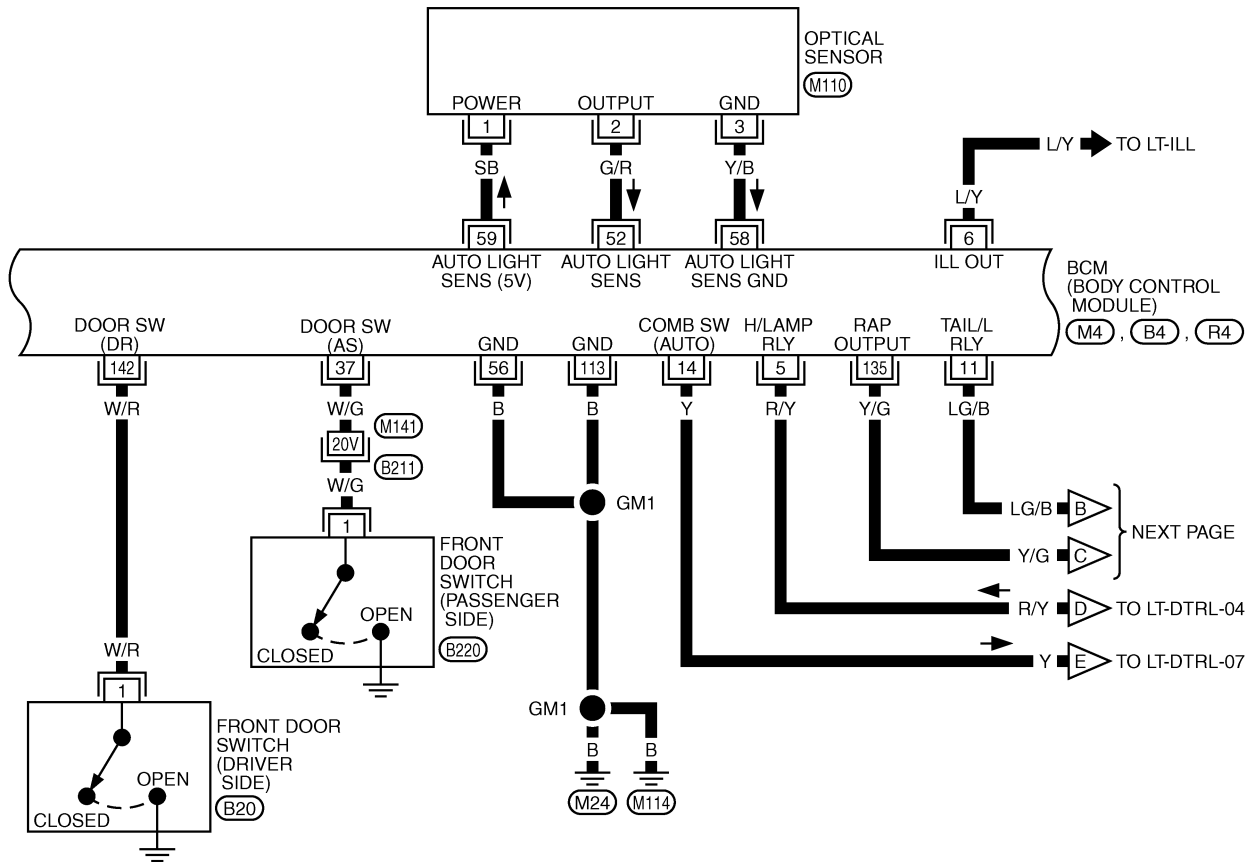

REFER TO THE FOLLOWING.


- (B211) -SUPER MULTIPLE JNCTION (SMJ)
- (M4), (B4), (R4) -ELECTRICAL UNITS

TKWM0013E

# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

LT-DTRL-03


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M

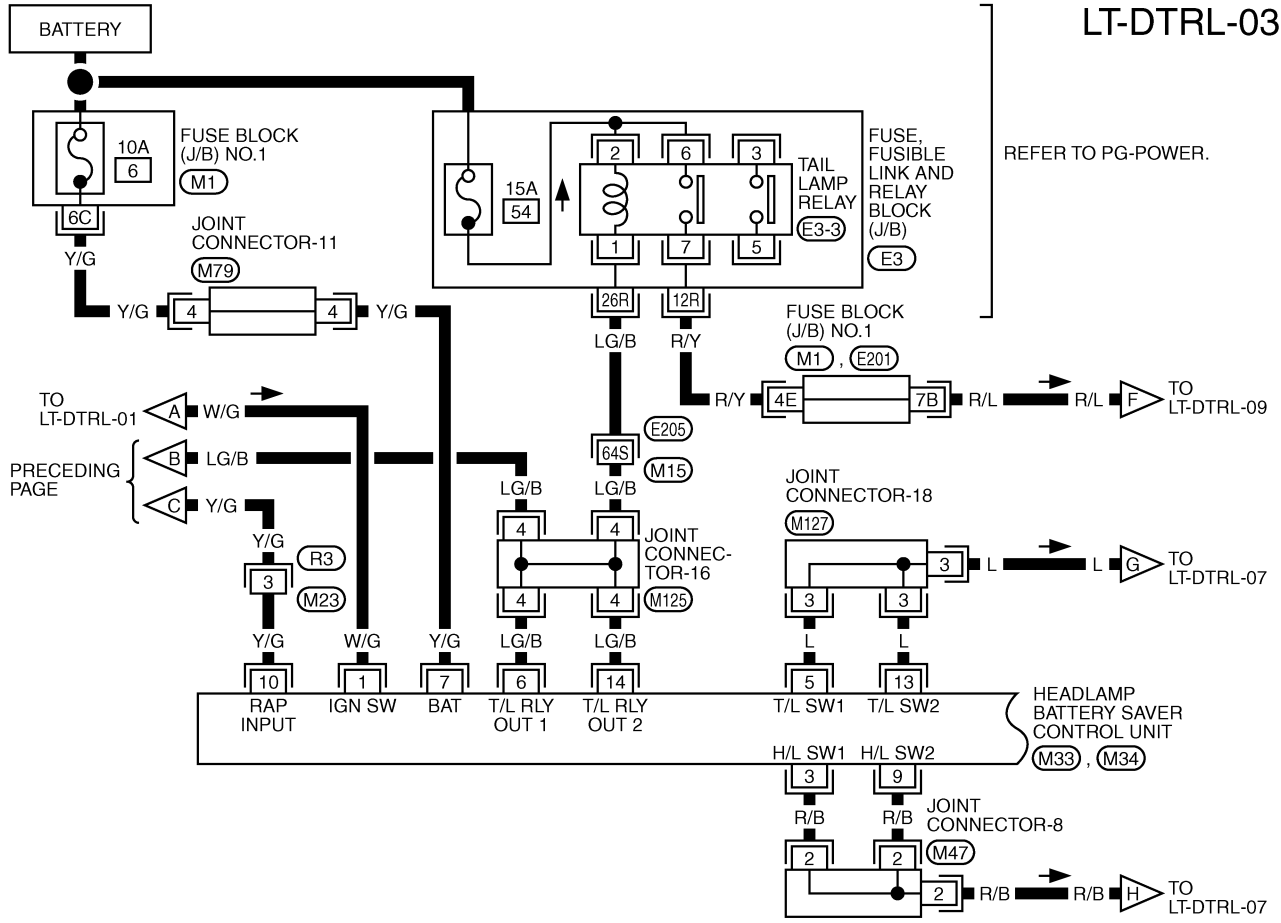

REFER TO PG-POWER.

REFER TO THE FOLLOWING.

- (E205) -SUPER MULTIPLE JUNCTION (SMJ)
- (M1), (E201) -FUSE BLOCK-JUNCTION BOX (J/B) NO.1
- (E3) -FUSE, FUSIBLE LINK AND RELAY BLOCK (J/B)

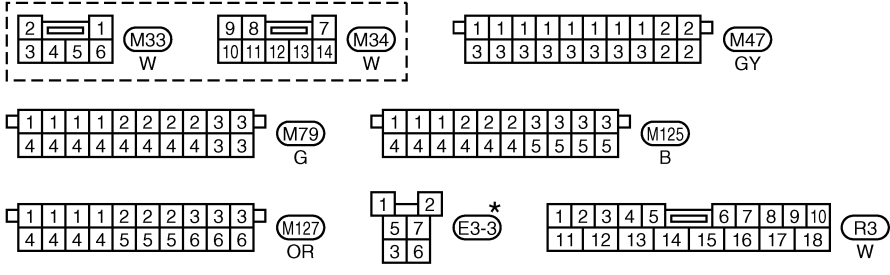


\*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.

TKWM0014E

# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

LT-DTRL-04

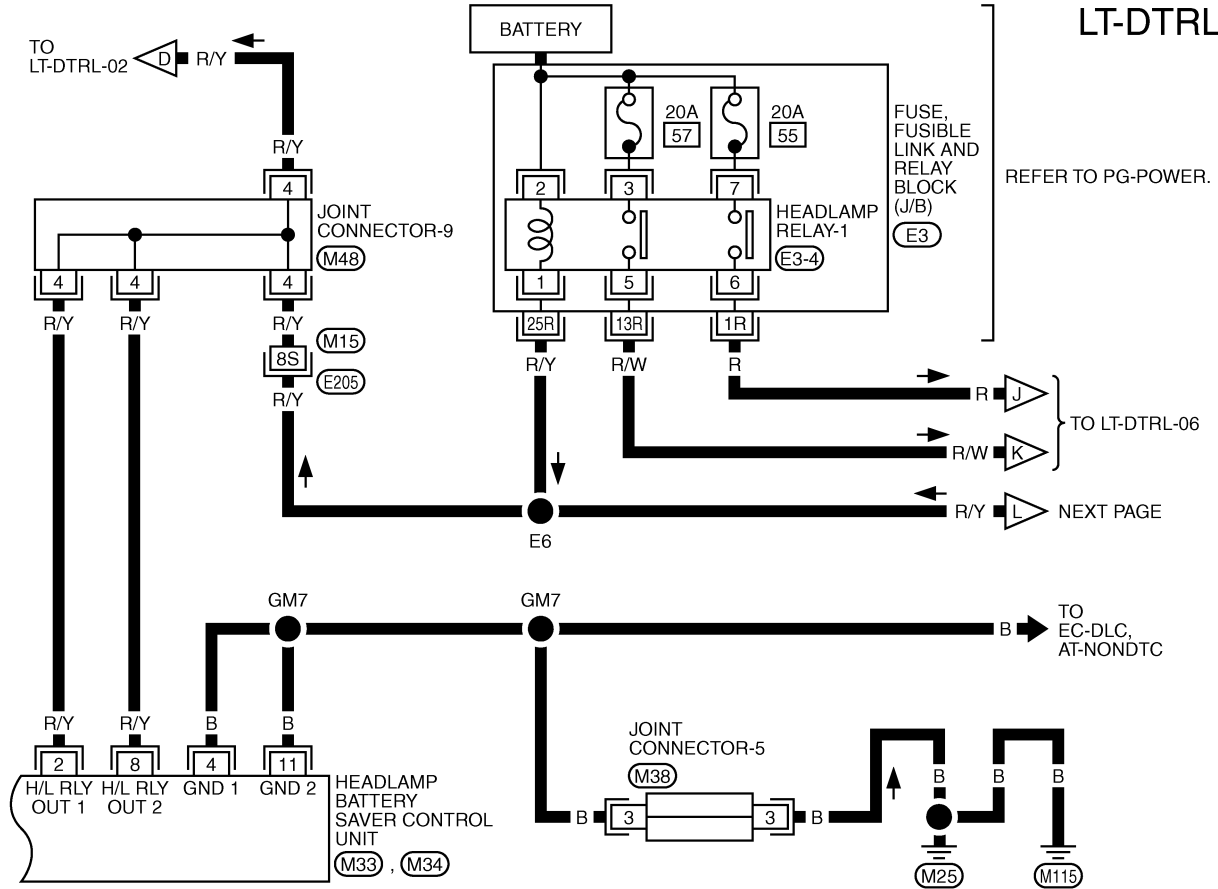


REFER TO PG-POWER.

TO LT-DTRL-06

NEXT PAGE

TO EC-DLC, AT-NONDTC

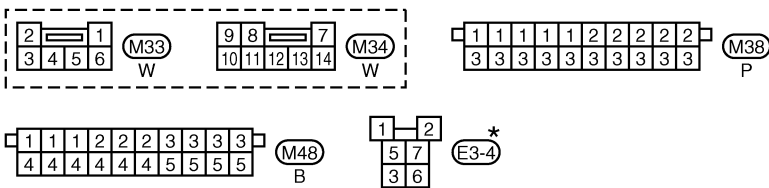

REFER TO THE FOLLOWING.

(E205) -SUPER MULTIPLE JUNCTION (SMJ)

(E3) -FUSE,FUSIBLE LINK AND RELAY BLOCK (J/B)



\*: THIS CONNECTOR IS NOT SHOWN IN "HARNES LAYOUT", PG SECTION.

TKWM0015E



# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

LT-DTRL-06

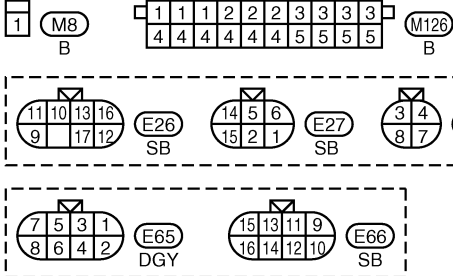
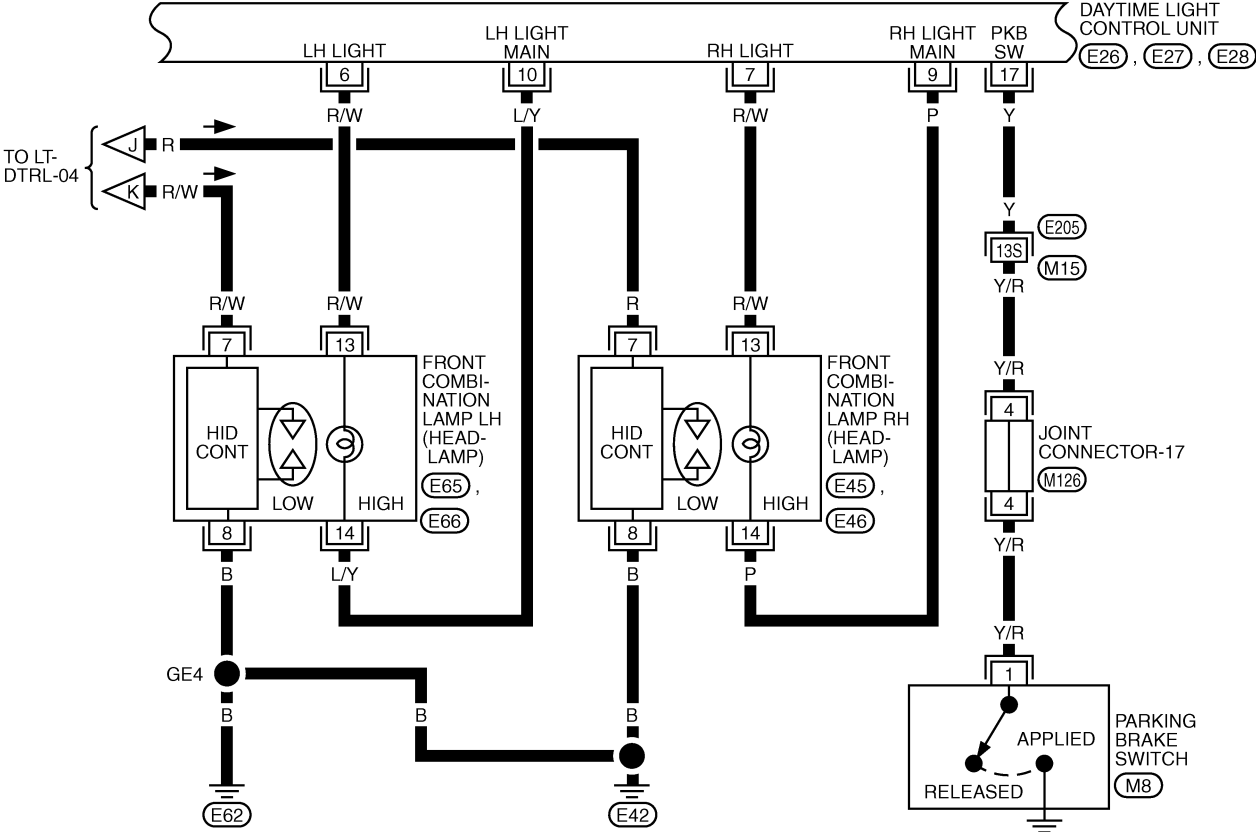


REFER TO THE FOLLOWING.  
 (E205) -SUPER MULTIPLE JUNCTION (SMJ)

TKWM0017E

# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

LT-DTRL-07



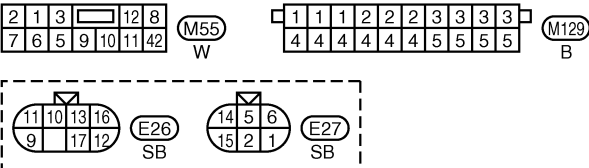
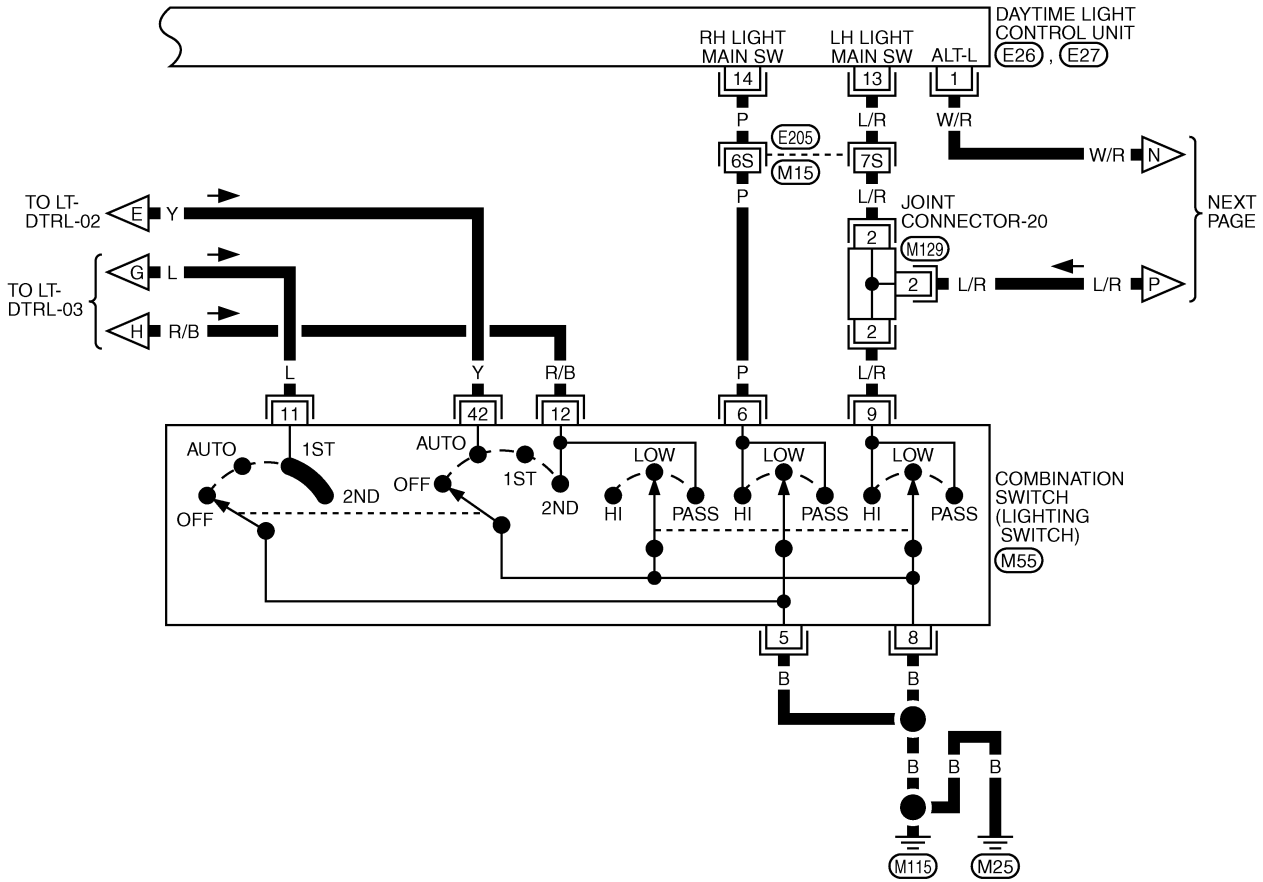


REFER TO THE FOLLOWING.  
 (E205) -SUPER MULTIPLE JUNCTION (SMJ)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

LT-DTRL-08

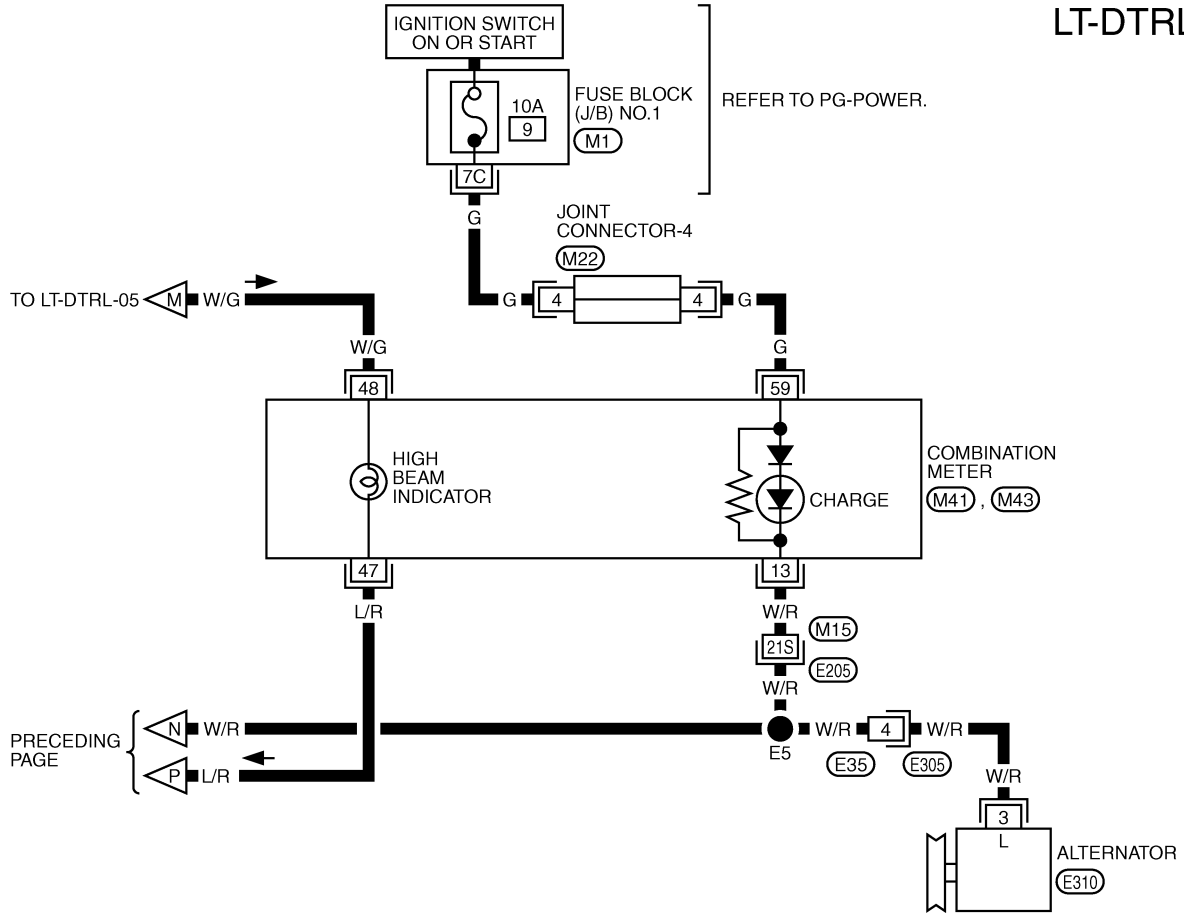

REFER TO THE FOLLOWING.



- (E205) -SUPER MULTIPLE JUNCTION (SMJ)
- (M1) -FUSE BLOCK-JUNCTION BOX (J/B) NO.1

TKWM0229E



# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

LT-DTRL-09

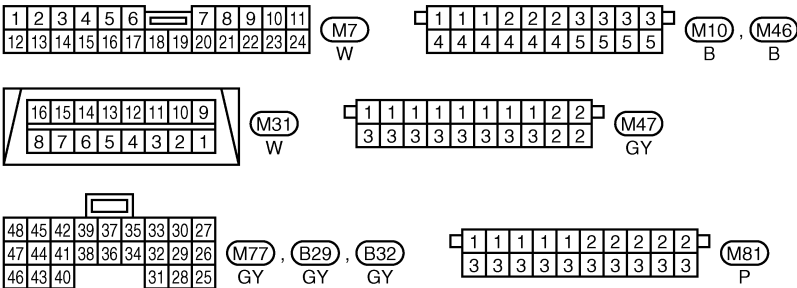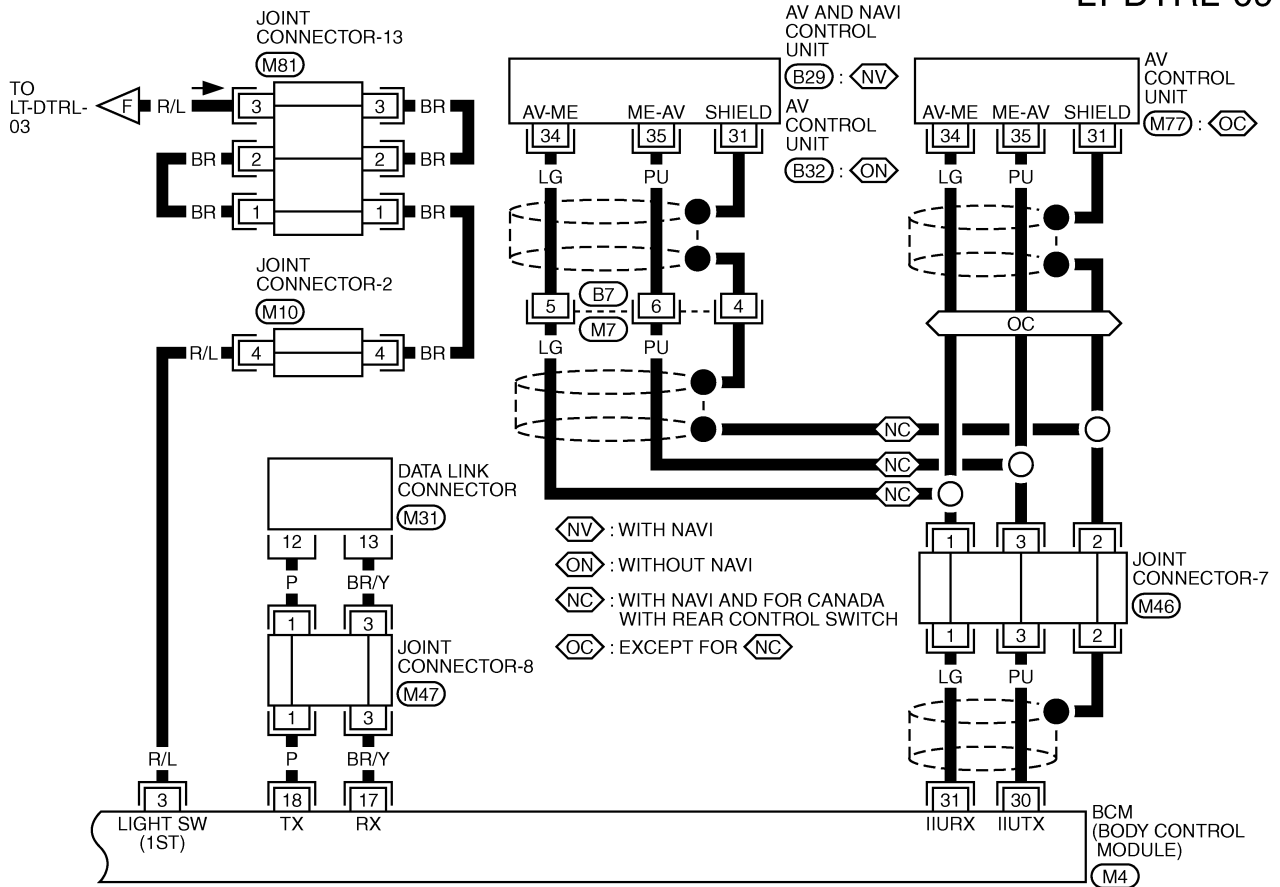

REFER TO THE FOLLOWING.  
M4 -ELECTRICAL UNITS

TKWM0154E

EKS001BH

## Terminals and Reference Value for Daytime Light Control Unit

Terminal No.	Wire color	Item	Condition	Voltage (Approximate values)
1	W/R	Alternator	When turning ignition switch to "ON"	Less than 1V
			When engine is running	Battery voltage
			When turning ignition switch to "OFF"	Less than 1V
2	SB	Start signal	When turning ignition switch to "START"	Battery voltage
			When turning ignition switch to "ON" from "START"	Less than 1V
			When turning ignition switch to "OFF"	Less than 1V

## HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

Terminal No.	Wire color	Item	Condition	Voltage (Approximate values)
3	W/G	Power source	When turning ignition switch to "ON"	Battery voltage
			When turning ignition switch to "START"	Battery voltage
			When turning ignition switch to "OFF"	Less than 1V
4	R	RH light fuse	When lighting switch is turned to the 2ND position with "HI BEAM" or "FLASH TO PASS" position	Battery voltage
			When lighting switch is turned to "FLASH TO PASS" position with ignition switch "ON" position	Battery voltage
5	W/G	LH light fuse	When lighting switch is turned to the 2ND position with "HI BEAM" or "FLASH TO PASS" position	Battery voltage
			When lighting switch is turned to "FLASH TO PASS" position with ignition switch "ON" position	Battery voltage
6	R/W	LH hi beam	When lighting switch is turned to the 2ND position with "HI BEAM" or "FLASH TO PASS" position	Battery voltage
			When releasing parking brake with engine running and turning lighting switch to "OFF" (daytime light operation) <b>CAUTION:</b> <b>Block wheels and ensure selector lever is in N or P position.</b>	Half battery voltage
7	R/W	RH hi beam	When lighting switch is turned to the 2ND position with "HI BEAM" or "FLASH TO PASS" position	Battery voltage
			When releasing parking brake with engine running and turning lighting switch to "OFF" (daytime light operation) <b>CAUTION:</b> <b>Block wheels and ensure selector lever is in N or P position.</b>	Battery voltage
9	P	RH hi beam (ground)	When turning lighting switch to the 2ND position with "HI BEAM" or "FLASH TO PASS" position	Less than 1V
			When releasing parking brake with engine running and turning lighting switch to "OFF" (daytime light operation) <b>CAUTION:</b> <b>Block wheels and ensure selector lever is in N or P position.</b>	Half battery voltage
10	L/Y	LH hi beam (ground)	When turning lighting switch to the 2ND position with "HI BEAM" or "FLASH TO PASS" position	Less than 1V
			When releasing parking brake with engine running and turning lighting switch to "OFF" (daytime light operation) <b>CAUTION:</b> <b>Block wheels and ensure selector lever is in N or P position.</b>	Less than 1V
13	L/R	Lighting switch (Hi beam)	When turning lighting switch to the 2ND position with "HI BEAM" or "FLASH TO PASS" position	Less than 1V
14	P	Lighting switch (Hi beam)	When turning lighting switch to the 2ND position with "HI BEAM" or "FLASH TO PASS" position	Less than 1V
16	B	Ground	—	—
17	Y	Parking brake switch	When parking brake is released	Battery voltage
			When parking brake is set	Less than 1.7V

# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

## Symptom Chart

EKS00050

Symptom	Repair Procedure
Neither headlamp operates.	<ol style="list-style-type: none"> <li>1. Check 10A fuse [No. 6, located in fuse block (J/B)]. Verify battery positive voltage is present at terminal 7 of headlamp battery saver control unit.</li> <li>2. Check lighting switch. Refer to <a href="#">LT-66, "Switch Circuit Inspection"</a>.</li> <li>3. Check headlamp battery saver control unit. Refer to <a href="#">LT-15, "Terminals and Reference Value for Battery Saver Control Unit"</a>.</li> </ol>
Headlamp (low beam) does not operate, but headlamp (high beam) does operate.	<ol style="list-style-type: none"> <li>1. Check 20A fuse [No. 57, located in fuse, fusible link and relay block (J/B)]. Verify battery positive voltage is present at terminals 2 and 3 of headlamp relay-1.</li> <li>2. Check headlamp relay-1.</li> <li>3. Check harness between headlamp relay-1 and headlamp battery saver control unit.</li> <li>4. Check headlamp battery saver control unit. Refer to <a href="#">LT-15, "Terminals and Reference Value for Battery Saver Control Unit"</a>.</li> </ol>
Headlamp (high beam) does not operate, but headlamp (low beam) does operate.	<ol style="list-style-type: none"> <li>1. Check 15A fuse (No. 73, located in fuse, fusible link and relay box). Verify battery positive voltage is present at terminals 2 and 5 of headlamp relay-2.</li> <li>2. Check headlamp relay-2.</li> <li>3. Check harness between headlamp relay-2 and headlamp battery saver control unit.</li> <li>4. Check headlamp battery saver control unit. Refer to.</li> </ol>
RH low beam does not operate, but LH low beam does operate.	<ol style="list-style-type: none"> <li>1. Check 20A fuse [No. 55, located in fuse, fusible link and relay block (J/B)]. Verify battery positive voltage is present at terminal 7 of headlamp relay-1.</li> <li>2. Check headlamp relay-1.</li> <li>3. Check harness between headlamp relay-1 terminal 6 and RH headlamp for open circuit.</li> <li>4. Check RH low beam ground circuit.</li> <li>5. Replace the xenon bulb with other side bulb or new one. (If headlamps illuminate correctly, replace the bulb.)</li> <li>6. Replace the HID control unit with other side control unit or new one. (If headlamps illuminate correctly, replace the HID control unit.)</li> </ol>
LH low beam does not operate, but RH low beam does operate.	<ol style="list-style-type: none"> <li>1. Check 20A fuse [No. 57, located in fuse, fusible link and relay block (J/B)]. Verify battery positive voltage is present at terminal 3 of headlamp relay-1.</li> <li>2. Check headlamp relay-1.</li> <li>3. Check harness between headlamp relay-1 terminal 5 and LH headlamp for open circuit.</li> <li>4. Check LH low beam ground circuit.</li> <li>5. Replace the xenon bulb with other side bulb or new one. (If headlamps illuminate correctly, replace the bulb.)</li> <li>6. Replace the HID control unit with other side control unit or new one. (If headlamps illuminate correctly, replace the HID control unit.)</li> </ol>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M

LT

## HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

Symptom	Repair Procedure
RH high beam does not operate, but LH high beam does operate.	<ol style="list-style-type: none"> <li>1. Check bulb.</li> <li>2. Check the following. <ul style="list-style-type: none"> <li>- Check harness between headlamp relay-2 terminal 3 and daytime light control unit terminal 4.</li> <li>- Check harness between daytime light control unit and headlamp RH.</li> </ul> </li> <li>3. Check lighting switch. Refer to <a href="#">LT-66, "Switch Circuit Inspection"</a> .</li> <li>4. Check harness between daytime light control unit and lighting switch.</li> <li>5. Check daytime light control unit. Refer to <a href="#">LT-49, "Terminals and Reference Value for Daytime Light Control Unit"</a> .</li> </ol>
LH high beam does not operate, but RH high beam does operate.	<ol style="list-style-type: none"> <li>1. Check bulb.</li> <li>2. Check the following. <ul style="list-style-type: none"> <li>- Check harness between headlamp relay-2 terminal 3 and daytime light control unit terminal 5.</li> <li>- Check harness between daytime light control unit and headlamp LH.</li> </ul> </li> <li>3. Check lighting switch. Refer to <a href="#">LT-66, "Switch Circuit Inspection"</a> .</li> <li>4. Check harness between daytime light control unit and lighting switch.</li> <li>5. Check daytime light control unit. Refer to <a href="#">LT-49, "Terminals and Reference Value for Daytime Light Control Unit"</a> .</li> </ol>
High beam indicator does not work.	<ol style="list-style-type: none"> <li>1. Check bulb in combination meter.</li> <li>2. Check harness between headlamp relay-2 terminal 3 and combination meter for open circuit.</li> </ol>

# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

Symptom	Repair Procedure
Battery saver control does not operate properly.	<ol style="list-style-type: none"> <li>1. Verify 12 positive voltage from BCM is present at terminal 10 of headlamp battery saver control unit: <ul style="list-style-type: none"> <li>- Within 45 seconds after ignition switch turns off.</li> <li>- When front door LH and RH is closed.</li> </ul> </li> <li>2. Check the following. <ul style="list-style-type: none"> <li>- Harness between BCM and LH or RH front door switch for open or short circuit.</li> <li>- LH or RH front door switch ground circuit.</li> <li>- LH or RH front door switch.</li> </ul> </li> <li>3. Check the following. <ul style="list-style-type: none"> <li>- Harness between headlamp battery saver control unit terminals 5 or 13 and lighting switch terminal 11 for open or short circuit.</li> <li>- Harness between lighting switch terminal 5 and ground.</li> <li>- Lighting switch. Refer to <a href="#">LT-66, "Switch Circuit Inspection"</a>.</li> </ul> </li> <li>4. Check headlamp battery saver control unit.</li> <li>5. Check BCM. Refer to <a href="#">LT-17, "Terminals and Reference Value for BCM"</a>.</li> </ol>
Daytime light control does not operate properly.	<ol style="list-style-type: none"> <li>1. Check 10A fuse [No. 82, located in fuse block]. Verify battery positive voltage is present at terminal 3 of daytime light control unit.</li> <li>2. Check parking brake switch.</li> <li>3. Check harness between parking brake switch and daytime light control unit.</li> <li>4. Check harness between alternator and daytime light control unit.</li> <li>5. Check daytime light control unit. Refer to <a href="#">LT-49, "Terminals and Reference Value for Daytime Light Control Unit"</a>.</li> </ol>

## Aiming Adjustment

EKS000SQ

Refer to [LT-30, "Aiming Adjustment"](#) in "HEADLAMP (FOR USA)".

## Bulb Replacement

EKS000SP

Refer to [LT-32, "Bulb Replacement"](#) in "HEADLAMP (FOR USA)".

## Removal and Installation

EKS000T5

Refer to [LT-33, "Removal and Installation"](#) in "HEADLAMP (FOR USA)".

## Disassembly and Assembly

EKS000UN

Refer to [LT-34, "Disassembly and Assembly"](#) in "HEADLAMP (FOR USA)".

# HEADLAMP AIMING CONTROL


PF2:26010

EKS00077


## HEADLAMP AIMING CONTROL

### Wiring Diagram — H/AIM —

### LT-H/AIM-01

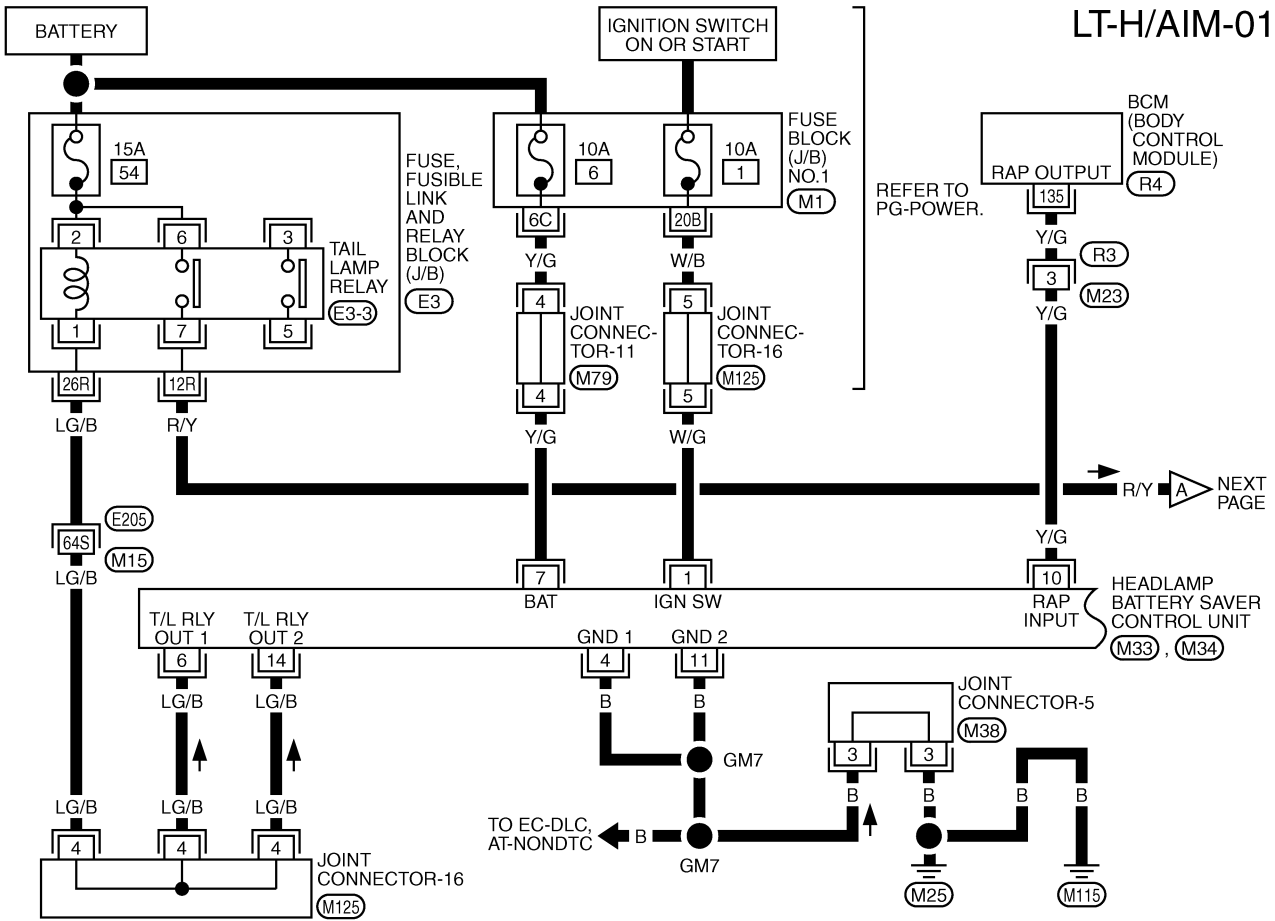

NEXT PAGE

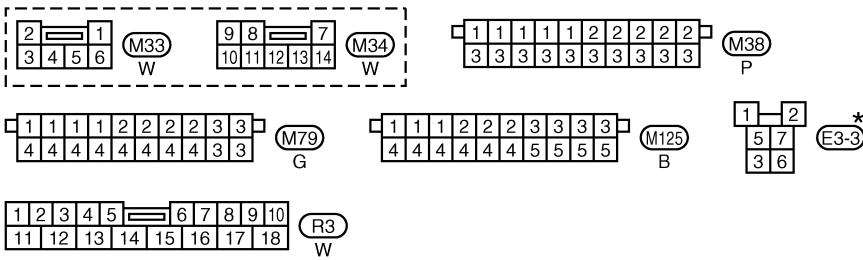

REFER TO THE FOLLOWING.



- (E205) -SUPER MULTIPLE JUNCTION (SMJ)
- (M1) -FUSE BLOCK-JUNCTION BOX (J/B) NO.1
- (E3) -FUSE, FUSIBLE LINK AND RELAY BLOCK (J/B)
- (R4) -ELECTRICAL UNITS

\*: THIS CONNECTOR IS NOT SHOWN IN "HARNES LAYOUT", PG SECTION.

TKWM0020E

# HEADLAMP AIMING CONTROL

LT-H/AIM-02

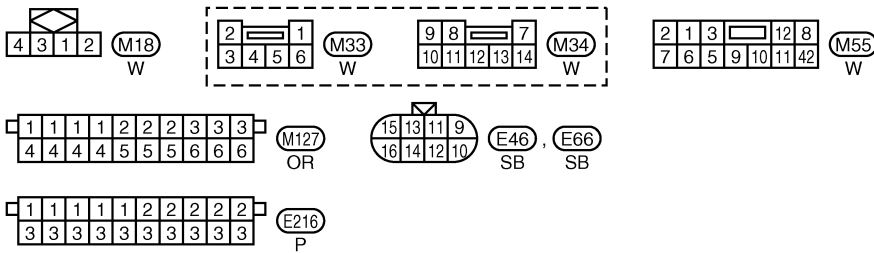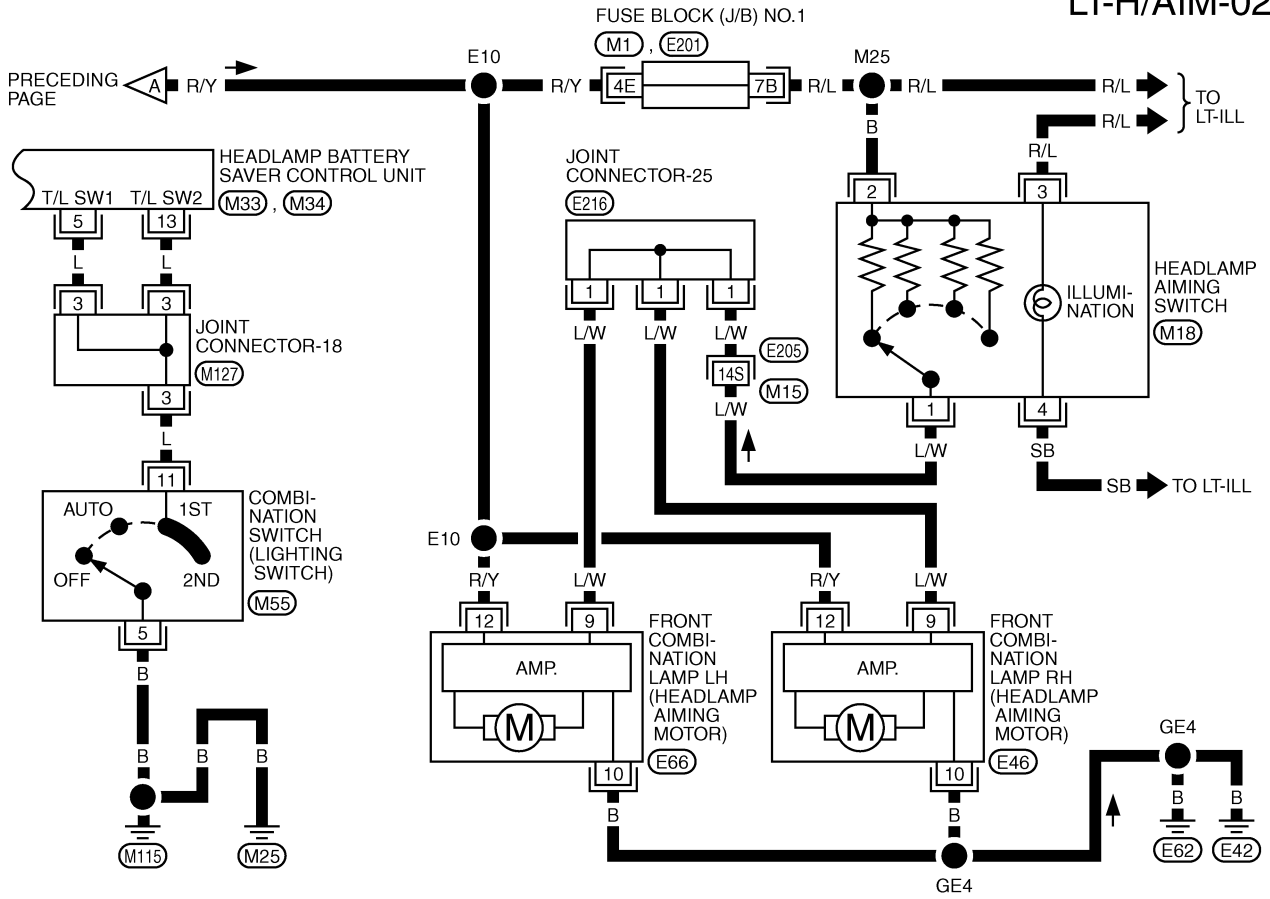

REFER TO THE FOLLOWING.

- (E205) -SUPER MULTIPLE JUNCTION (SMJ)
- (M1), (E201) -FUSE BLOCK-JUNCTION BOX (J/B) NO.1


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

TKWM0021E

# HEADLAMP AIMING CONTROL


## Removal and Installation

1. Remove the lower instrument panel (driver side). Refer to [IP-10. "Removal and Installation"](#) in "INSTRUMENT PANEL (IP)" section.
2. Press the headlamp aiming switch fixing tabs and remove the unit from the instrument lower panel (driver side).

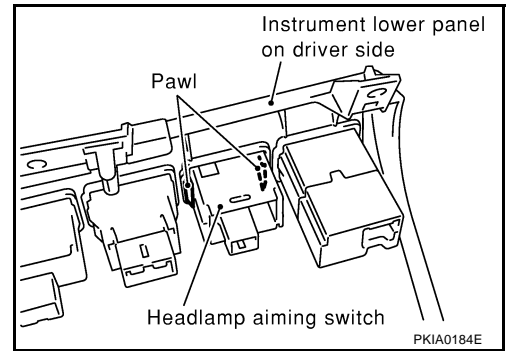

## Switch Circuit Inspection

Using a circuit tester, check continuity between the headlamp aiming switch connector terminals in each operation status of the aiming switch.

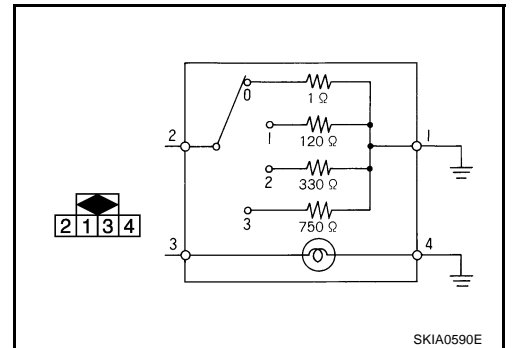



# TURN SIGNAL AND HAZARD WARNING LAMPS

## TURN SIGNAL AND HAZARD WARNING LAMPS

PPF:26120

### System Description

EKS00078

#### TURN SIGNAL OPERATION

When the ignition switch in the ON or START position, power is supplied

- through 10A fuse [No. 5, located in the fuse block (J/B) NO.1]
- to combination flasher unit terminal 1
- through terminal 2 of the combination flasher unit
- to terminal 1 of combination switch.

Ground is supplied to combination flasher unit terminal 7 through body grounds M24 and M114.

#### LH Turn

When the turn signal switch is moved to the L position, power is supplied from turn signal switch terminal 3

- to front turn signal lamp LH terminal 1
- to rear turn signal lamp LH terminal 5
- to door mirror (driver side) terminal 7
- to combination meter terminal 45.

Ground is supplied to the front turn signal lamp LH terminal 2 through body grounds E42 and E62.

Ground is supplied to the rear turn signal lamp LH terminal 6 through body grounds B17 and B57.

Ground is supplied to the door mirror (driver side) terminal 5 through body grounds M24 and M114.

Ground is supplied to combination meter terminal 62 through body grounds M24 and M114.

With power and ground supplied, the combination flasher unit controls the flashing of the LH turn signal lamps.

#### RH Turn

When the turn signal switch is moved to the R position, power is supplied from turn signal switch terminal 2

- to front turn signal lamp RH terminal 1
- to rear turn signal lamp RH terminal 5
- to door mirror (passenger side) terminal 7
- to combination meter terminal 46.

Ground is supplied to the front turn signal lamp RH terminal 2 through body grounds E42 and E62.

Ground is supplied to the rear turn signal lamp RH terminal 6 through body grounds B17 and B57.

Ground is supplied to the door mirror (passenger side) terminal 5 through body grounds M24 and M114.

Ground is supplied to combination meter terminal 62 through body grounds M24 and M114.

With power and ground supplied, the combination flasher unit controls the flashing of the RH turn signal lamps.

#### HAZARD LAMP OPERATION

Power is supplied at all times to hazard switch terminal 1

- through 15A fuse [No. 22, located in the fuse block (J/B) NO.1]
- to combination flasher unit terminal 4
- through combination flasher unit terminal 6
- to hazard switch terminal 1.

With the hazard switch in the ON position, power is supplied

Ground is supplied to hazard switch terminal 2 through body grounds M24 and M114.

Power is supplied through terminal 8 of the combination flasher unit

- to front combination lamp LH terminal 1
- to rear combination lamp LH terminal 5
- to door mirror (driver side) terminal 7
- to combination meter terminal 45.

Power is supplied through terminal 3 of the combination flasher unit

- to front turn signal lamp RH terminal 1
- to rear turn signal lamp RH terminal 5
- to door mirror (passenger side) terminal 7
- to combination meter terminal 46.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# TURN SIGNAL AND HAZARD WARNING LAMPS

---

Ground is supplied to terminal 2 of each front turn signal lamp through body grounds E42 and E62.

Ground is supplied to terminal 6 of each rear turn signal lamp through body grounds B17 and B57.

Ground is supplied to terminal 5 of each door mirror through body grounds M24 and M114.

Ground is supplied to combination meter terminal 62 through body grounds M24 and M114.

With power and ground supplied, the combination flasher unit controls the flashing of the hazard warning lamps.

## MULTI-REMOTE CONTROL SYSTEM OPERATION

Power is supplied at all times

- through 15A fuse [No. 22, located in the fuse block (J/B) NO.1]
- to combination flasher unit terminal 4.

Ground is supplied to combination flasher unit terminal 6, when the multi-remote control system is triggered through the BCM.

Refer to [BL-45, "REMOTE KEYLESS ENTRY SYSTEM"](#) in "BODY, LOCK & SECURITY SYSTEM (BS)" section.

The BCM is energized.

Power is supplied through terminal 8 of the combination flasher unit

- to front turn signal lamp LH terminal 1
- to rear turn signal lamp LH terminal 5
- to door mirror (driver side) terminal 7
- to combination meter terminal 45.

Power is supplied through terminal 3 of the combination flasher unit

- to front turn signal lamp RH terminal 1
- to rear turn signal lamp RH terminal 5
- to door mirror (passenger side) terminal 7
- to combination meter terminal 46.

Ground is supplied to terminal 2 of each front turn signal lamp through body grounds E42 and E62.

Ground is supplied to terminal 6 of each rear turn signal lamp through body grounds B17 and B57.

Ground is supplied to terminal 5 of each door mirror through body grounds M24 and M114.

Ground is supplied to combination meter terminal 62 through body grounds M24 and M114.

With power and ground supplied, the BCM controls the flashing of the hazard warning lamps.


## LOW TIRE PRESSURE WARNING CONTROL SYSTEM

When ID is normally registered to each transmitter in the LOW TIRE PRESSURE WARNING CONTROL UNIT, the hazard warning lamp flashes twice. Refer to [WT-13, "ID Registration Procedure"](#) in "ROAD WHEELS & TIRES (WT)" section.

# TURN SIGNAL AND HAZARD WARNING LAMPS

## Schematic

EKS000VD

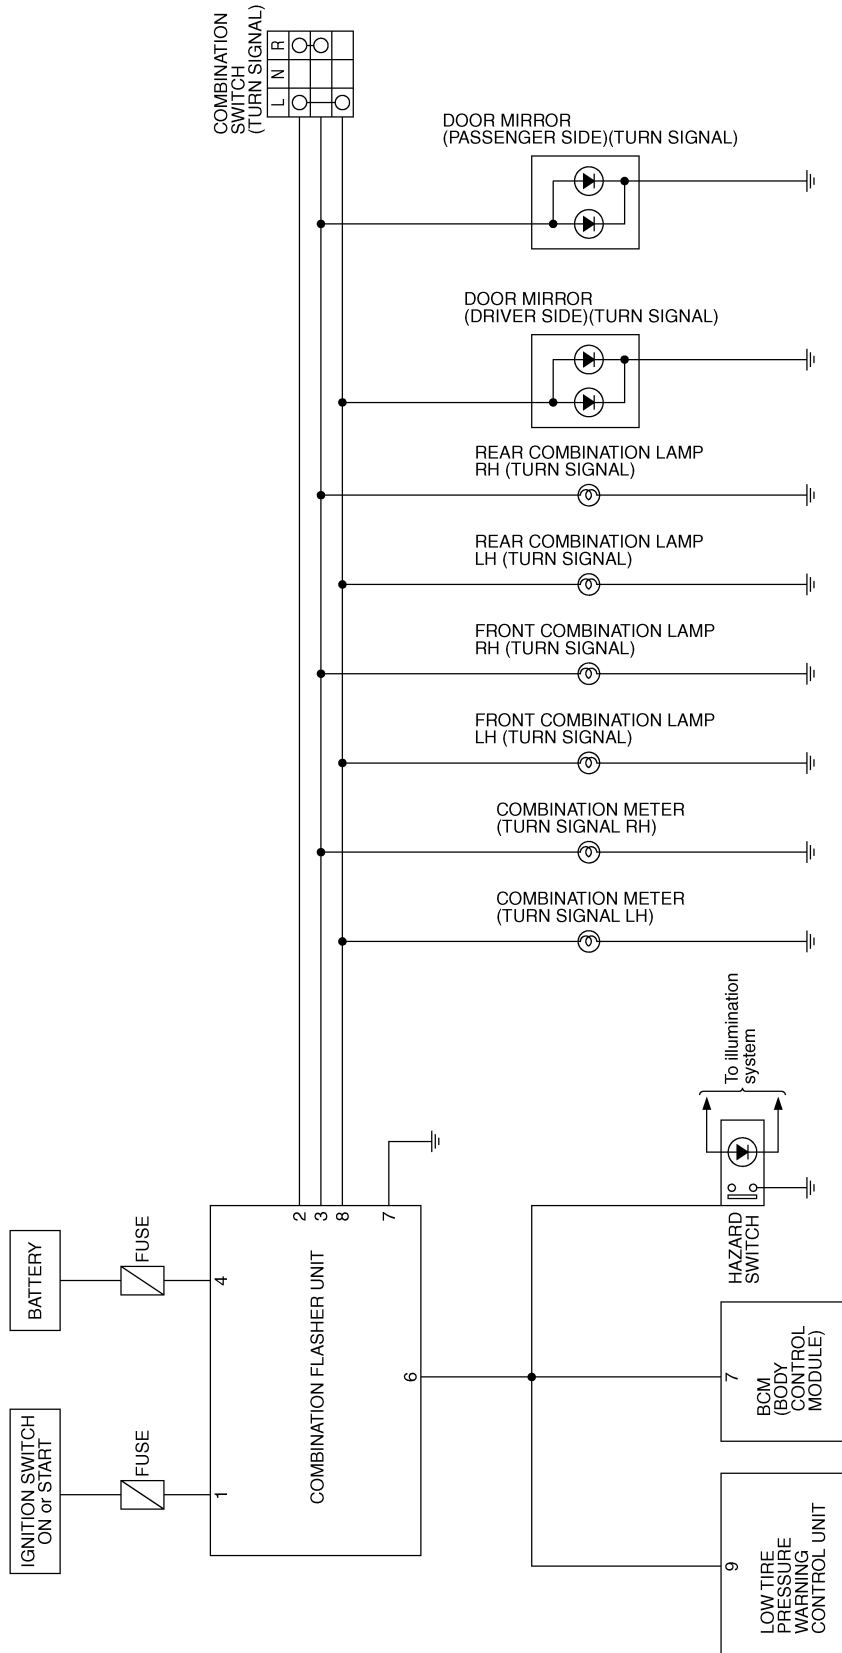

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M


TKWM0029E

# TURN SIGNAL AND HAZARD WARNING LAMPS

## Wiring Diagram — TURN —

EKS00079

### LT-TURN-01

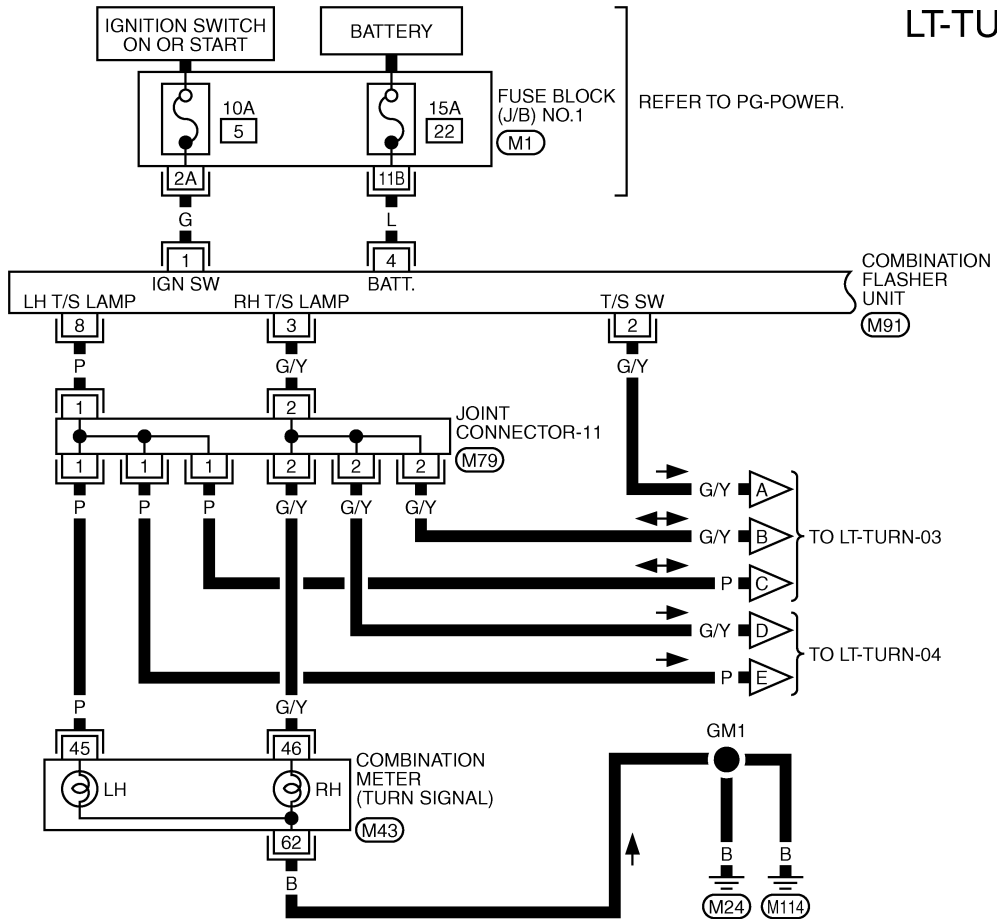

45	46	47	48	49	50	51	52	53	54	55		
56	57	58	59	60	61	62	63	64	65	66	67	68

(M43)  
W

1	1	1	1	2	2	2	2	3	3
4	4	4	4	4	4	4	4	3	3

(M79)  
G

3	2	1		
8	7	6	5	4

(M91)  
W






REFER TO THE FOLLOWING.

(M1) - FUSE BLOCK-JUNCTION BOX (J/B) NO.1

TKWM0030E

# TURN SIGNAL AND HAZARD WARNING LAMPS

LT-TURN-02

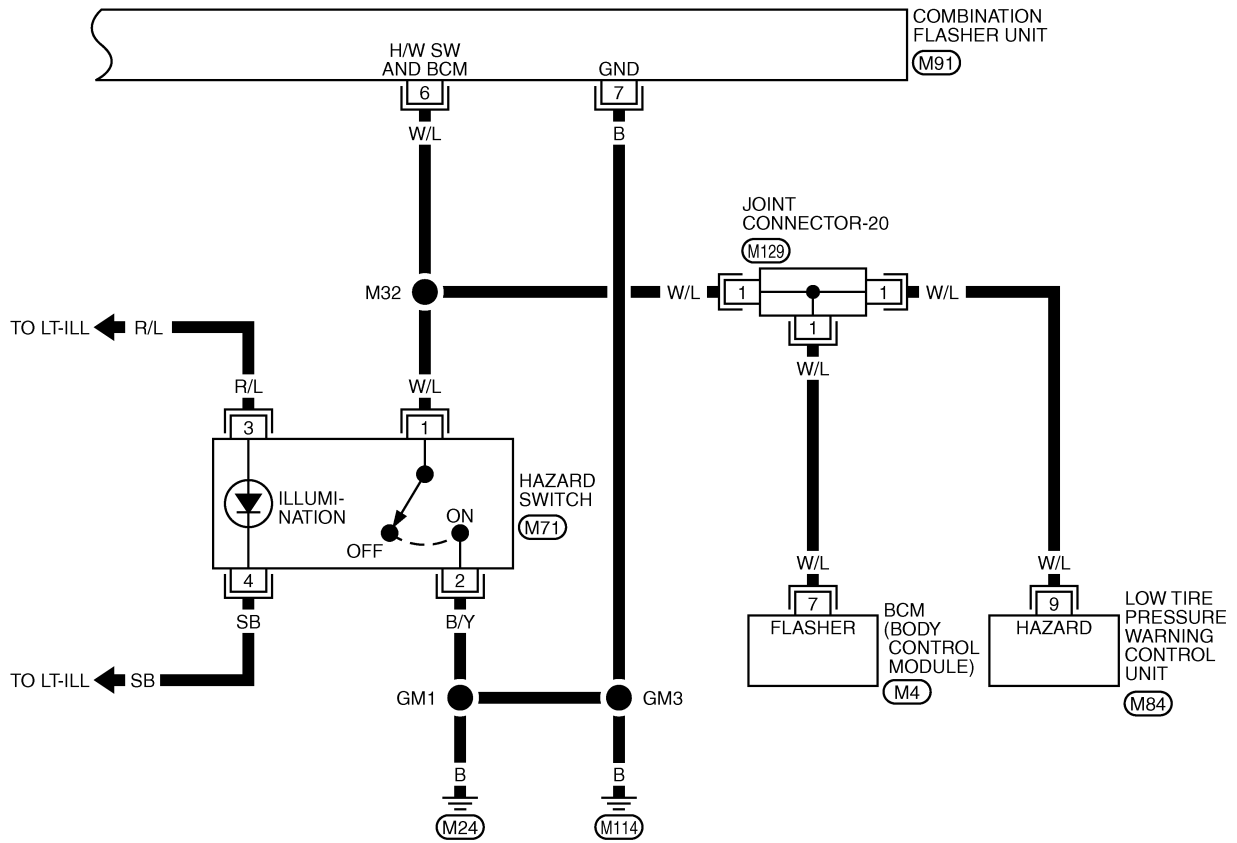

REFER TO THE FOLLOWING.  
 (M4) -ELECTRICAL UNITS





A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

LT

TKWM0204E

# TURN SIGNAL AND HAZARD WARNING LAMPS

LT-TURN-03


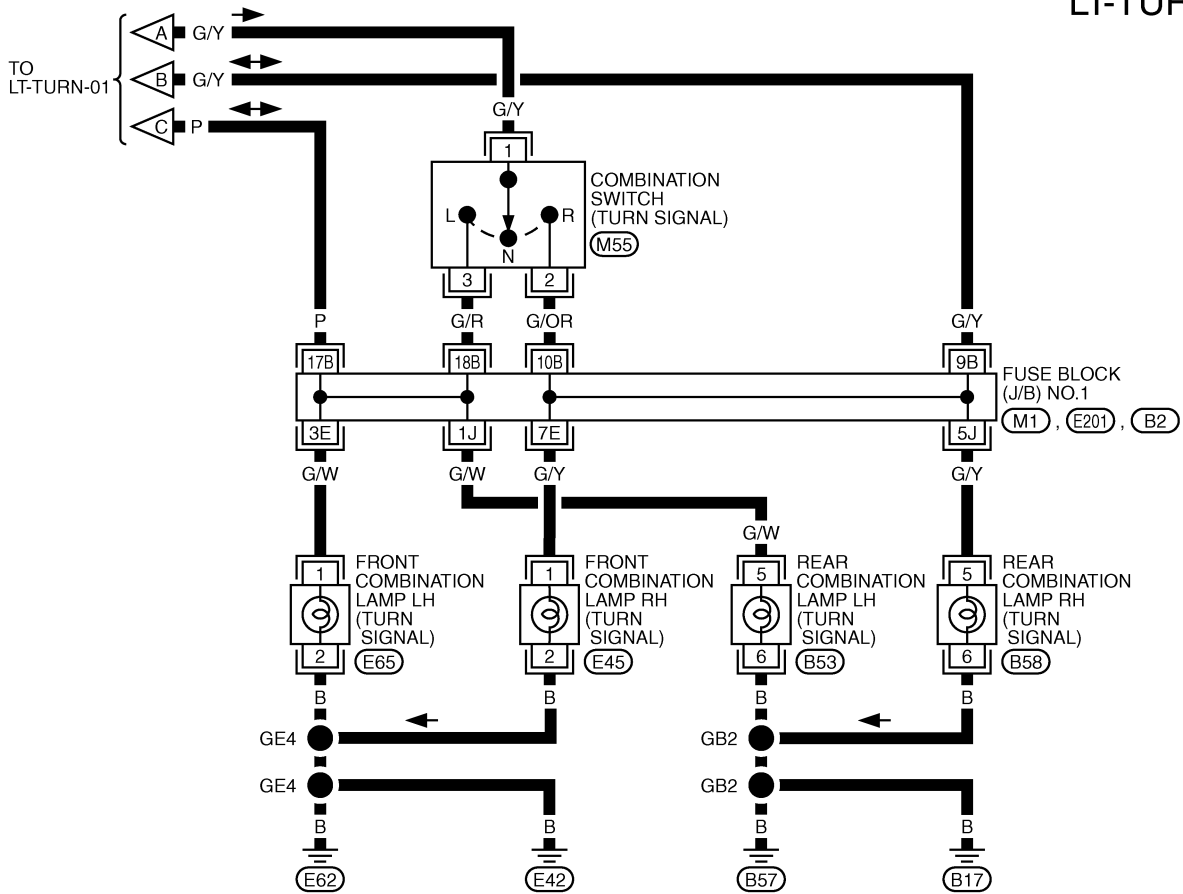


REFER TO THE FOLLOWING.  
 (M1), (E201), (B2) - FUSE BLOCK-JUNCTION BOX (J/B) NO.1


TKWM0032E

# TURN SIGNAL AND HAZARD WARNING LAMPS

LT-TURN-04

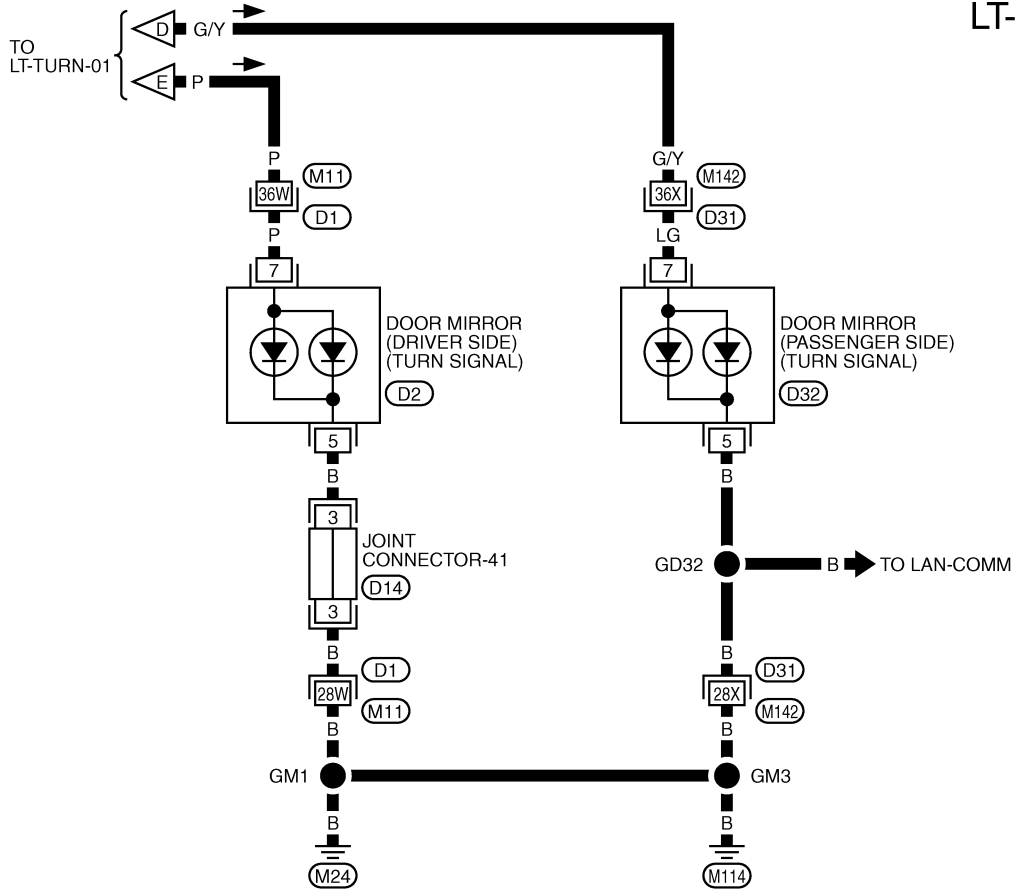

(D2), (D32)  
BR BR



(D14)  
P

REFER TO THE FOLLOWING.

(D1), (D31) -SUPER MULTIPLE JUNCTION (SMJ)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

TKWM0033E

# TURN SIGNAL AND HAZARD WARNING LAMPS

## Symptom Chart

EKS0007A

Symptom	Possible cause	Repair Procedure
Turn signal and hazard warning lamps do not operate.	<ol style="list-style-type: none"> <li>1. Combination flasher unit</li> <li>2. Open in combination flasher unit circuit</li> </ol>	<ol style="list-style-type: none"> <li>1. Check combination flasher unit. Refer to <a href="#">LT-65, "Electrical Components Inspection"</a>.</li> <li>2. Check wiring to combination flasher unit for open circuit.</li> </ol>
Turn signal lamps do not operate but hazard warning lamps operate.	<ol style="list-style-type: none"> <li>1. 10A fuse</li> <li>2. Combination flasher unit</li> <li>3. Turn signal switch</li> <li>4. Open in turn signal switch circuit</li> </ol>	<ol style="list-style-type: none"> <li>1. Check 10A fuse [No. 5, located in fuse block (J/B) NO.1]. Turn ignition switch ON and verify battery positive voltage is present at terminal 1 of combination flasher unit.</li> <li>2. Check combination flasher unit. Refer to <a href="#">LT-65, "Electrical Components Inspection"</a>.</li> <li>3. Check turn signal switch. Refer to <a href="#">LT-66, "Switch Circuit Inspection"</a>.</li> <li>4. Check harness between combination flasher unit terminal 2 and turn signal switch terminal 1 for open circuit.</li> </ol>
Hazard warning lamps do not operate but turn signal lamps operate.	<ol style="list-style-type: none"> <li>1. 15A fuse</li> <li>2. Combination flasher unit</li> <li>3. Hazard switch</li> <li>4. Open in hazard switch circuit</li> <li>5. Grounds M24 and M114</li> </ol>	<ol style="list-style-type: none"> <li>1. Check 15A fuse [No. 22, located in fuse block (J/B) NO.1]. Verify battery positive voltage is present at terminal 4 of combination flasher unit.</li> <li>2. Check combination flasher unit. Refer to <a href="#">LT-65, "Electrical Components Inspection"</a>.</li> <li>3. Check hazard switch.</li> <li>4. Check harness between combination flasher unit terminal 6 and hazard switch terminal 1 for open circuit.</li> <li>5. Check grounds M24 and M114.</li> </ol>
Front turn signal lamp LH or RH does not operate.	<ol style="list-style-type: none"> <li>1. Bulb</li> <li>2. Grounds E42 and E62</li> <li>3. Open in front turn signal lamp circuit</li> </ol>	<ol style="list-style-type: none"> <li>1. Check bulb.</li> <li>2. Check grounds E42 and E62.</li> <li>3. Check harness between combination switch and front turn signal lamp for open circuit.</li> </ol>
Rear turn signal lamp LH or RH does not operate.	<ol style="list-style-type: none"> <li>1. Bulb</li> <li>2. Grounds B17 and B57</li> <li>3. Open in rear turn signal lamp circuit</li> </ol>	<ol style="list-style-type: none"> <li>1. Check bulb.</li> <li>2. Check grounds B17 and B57.</li> <li>3. Check harness between combination switch and rear turn signal lamp for open circuit.</li> </ol>
LH and RH turn indicators do not operate.	<ol style="list-style-type: none"> <li>1. Grounds M24 and M114</li> </ol>	<ol style="list-style-type: none"> <li>1. Check grounds M24 and M114.</li> </ol>
LH or RH turn indicator does not operate.	<ol style="list-style-type: none"> <li>1. Bulb</li> <li>2. Open in turn indicator circuit</li> </ol>	<ol style="list-style-type: none"> <li>1. Check bulb in combination meter.</li> <li>2. Check harness between combination flasher unit and combination meter (turn indicator) for open circuit.</li> </ol>




# TURN SIGNAL AND HAZARD WARNING LAMPS

## Electrical Components Inspection COMBINATION FLASHER UNIT CHECK

EKS000TB

- Before checking, ensure that bulbs meet specifications.
- Connect a battery and test lamp to the combination flasher unit, as shown. Combination flasher unit is properly functioning if it blinks when power is supplied to the circuit.

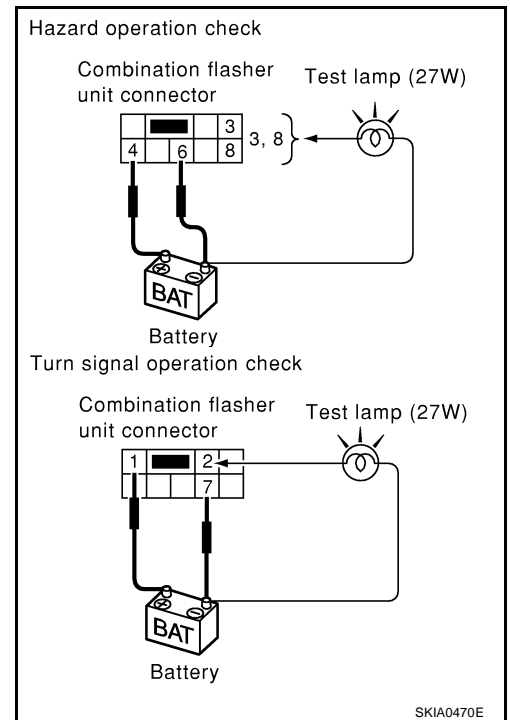

## Bulb Replacement FRONT TURN SIGNAL LAMP

Refer to [LT-32, "Bulb Replacement"](#) in "HEADLAMP (USA)".

## REAR TURN SIGNAL LAMP

Refer to [LT-78, "REAR COMBINATION LAMP"](#) in "PARKING, LICENSE PLATE AND TAIL LAMPS".

## Removal and Installation FRONT TURN SIGNAL LAMP

Refer to [LT-33, "Removal and Installation"](#) in "HEADLAMP (USA)".

## SIDE TURN SIGNAL LAMP

Refer to [GW-106, "Disassembly and Assembly"](#) in "GLASSES, WINDOW SYSTEM & MIRRORS (GW)" section.

## REAR TURN SIGNAL LAMP

Refer to [LT-78, "REAR COMBINATION LAMP"](#) in "PARKING, LICENSE PLATE AND TAIL LAMPS".

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M

LT

# LIGHTING AND TURN SIGNAL SWITCH


PFP:25540

## LIGHTING AND TURN SIGNAL SWITCH

### Removal and Installation

EKS000TG

1. Remove the steering column cover. Refer to [PS-11, "STEERING COLUMN"](#) in "POWER STEERING SYSTEM (PS)" section.
2. Remove lighting and turn signal switch mounting screw and remove the lighting and turn signal switch from the spiral cable.
3. Disconnect the lighting and turn signal switch connector.

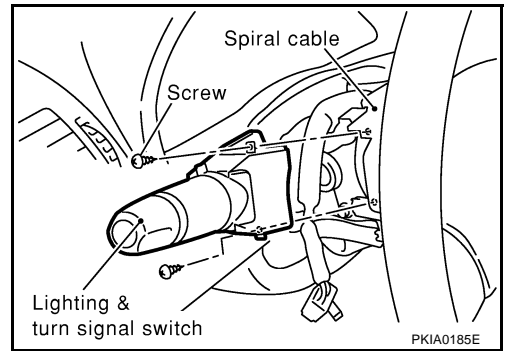

PKIA0185E

### Switch Circuit Inspection

EKS000TH

Using circuit tester, check continuity between the lighting and turn signal switch connector terminals in each operation status of the switch.

	OFF	AUTO	1ST	2ND
5			○	○
11			○	○
8				○
12				○
42		○		
(8)		○		

	Hi	Lo	P
(5)	○	○	○
7	○	○	○
6	○		○
(8)	○	○	○
10	○	○	○
9	○		○
(12)			○

	L	N	R
1	○		○
2			○
3	○		

8	12		3	1	2	
42	11	10	9	5	6	7

○—○ : Continuity should exist.

SKIA0469E

Hi: "HIGH BEAM" position, Lo: "LOW BEAM" position, P: "FLASH TO PASS" position

# HAZARD SWITCH


## HAZARD SWITCH

PPF:25290

### Removal and Installation

EKS00071

Refer to [DI-135. "Disassembly and Assembly for Multifunction Switch"](#) in "DRIVER INFORMATION SYSTEM (DI)" section.

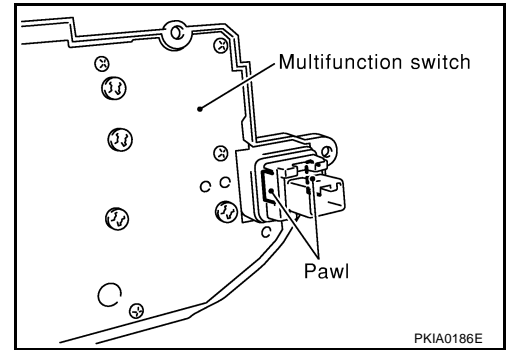

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# STOP LAMP









PF:26550

EKS000V1

## LT-STOP/L-01

### STOP LAMP

### Wiring Diagram — STOP/L —

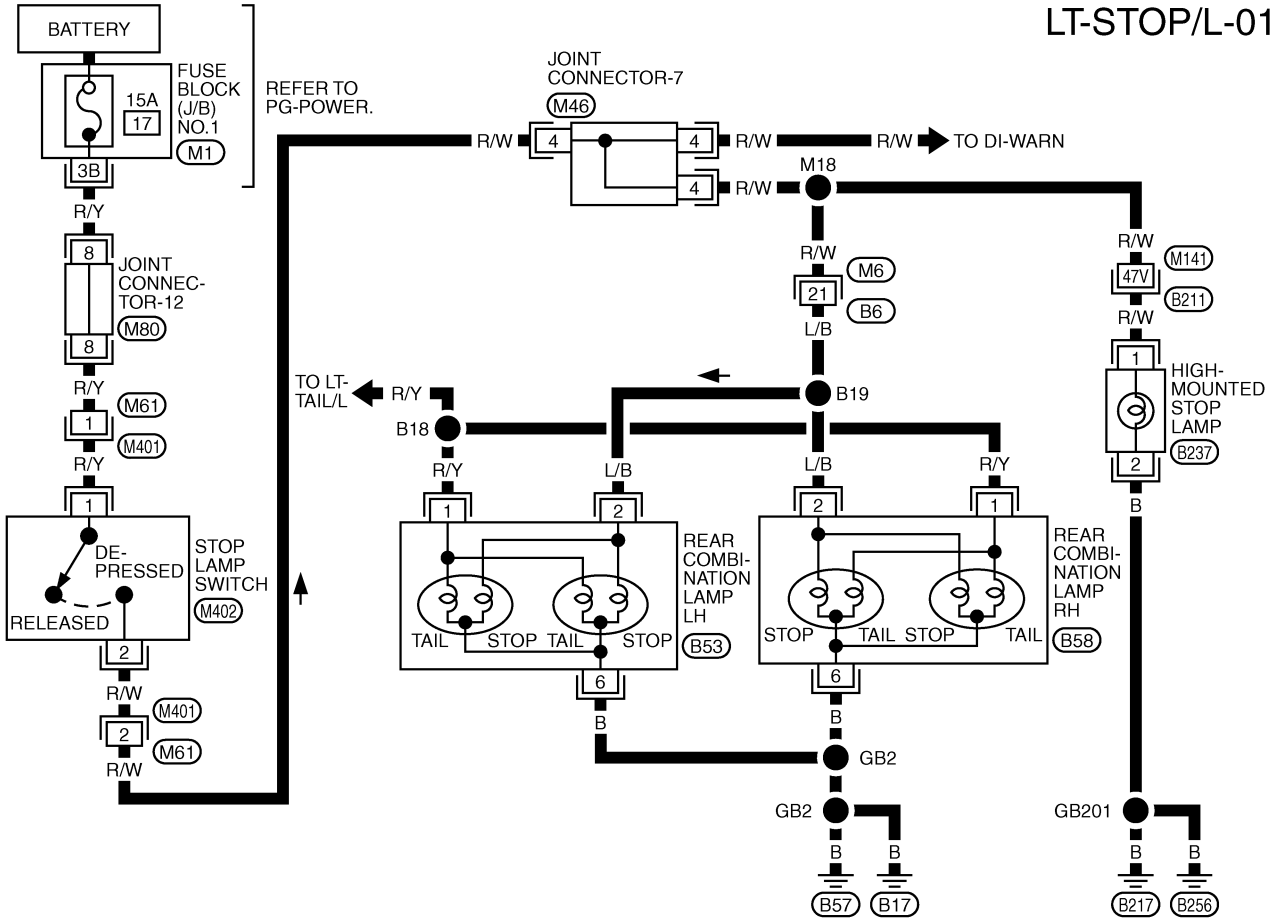

REFER TO THE FOLLOWING.

(B211) -SUPER MULTIPLE JUNCTION (SMJ)

(M1) -FUSE BLOCK-JUNCTION BOX (J/B) NO.1

TKWM0027E

# STOP LAMP

## Bulb Replacement STOP LAMP


EKS0014S

Refer to [LT-78, "REAR COMBINATION LAMP"](#) in "PARKING, LICENSE PLATE AND TAIL LAMPS".

### HIGH-MOUNTED STOP LAMP

1. Remove the high-mounted stop lamp. Refer to [LT-69, "HIGH-MOUNTED STOP LAMP"](#) in "Removal and Installation".
2. Turn the high-mounted stop lamp bulb socket counterclockwise and unlock it.
3. Remove the bulb.

**High-mounted Stop Lamp : 12V 18W**

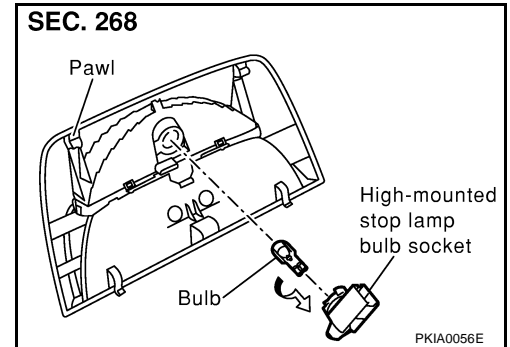


## Removal and Installation STOP LAMP

EKS000WD

Refer to [LT-78, "REAR COMBINATION LAMP"](#) in "PARKING, LICENSE PLATE AND TAIL LAMPS".

### HIGH-MOUNTED STOP LAMP

1. Pull up the high-mounted stop lamp while pressing it toward rear of the vehicle and remove from the vehicle.
2. Disconnect the high-mounted stop lamp connector.

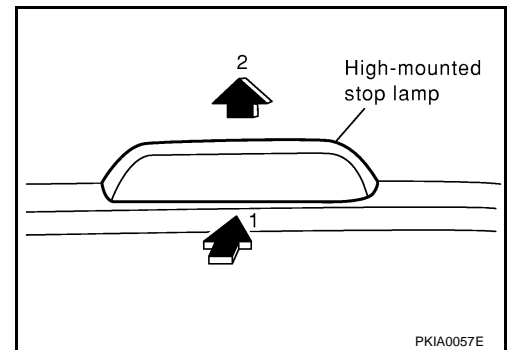

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# BACK-UP LAMP



PFP:26550

## BACK-UP LAMP

### Wiring Diagram — BACK/L —

EKS000V6

## LT-BACK/L-01

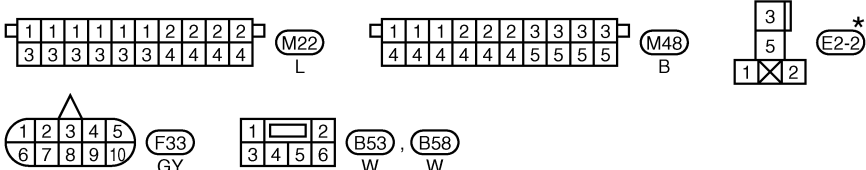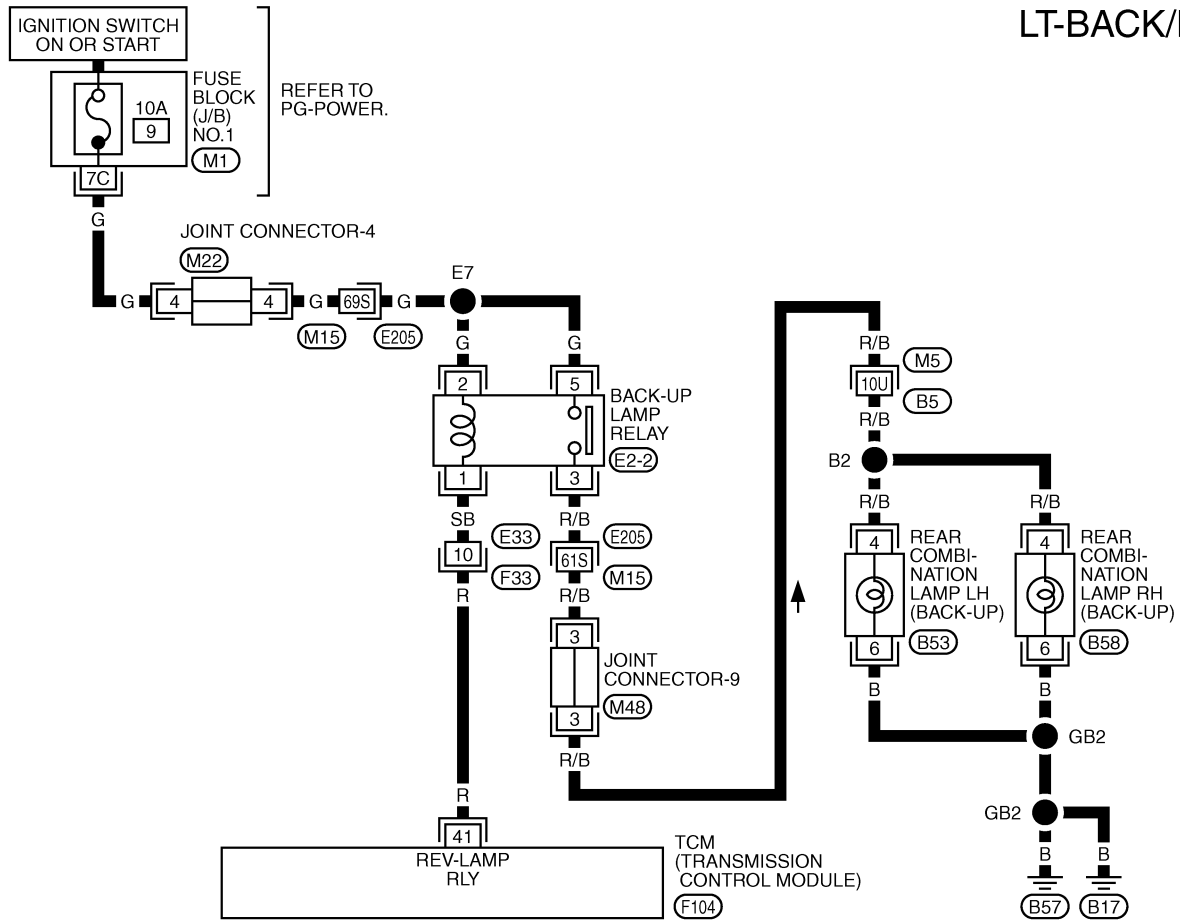

REFER TO THE FOLLOWING.  
 (M5), (E205) -SUPER MULTIPLE JUNCTION (SMJ)  
 (M1) -FUSE BLOCK-JUNCTION BOX (J/B) NO.1  
 (F104) -ELECTRICAL UNITS

\*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.

TKWM0028E

### Bulb Replacement

EKS000V7

Refer to [LT-78, "REAR COMBINATION LAMP"](#) in PARKING, LICENSE PLATE AND TAIL LAMPS.

### Removal and Installation

EKS000V8

Refer to [LT-78, "REAR COMBINATION LAMP"](#) in PARKING, LICENSE PLATE AND TAIL LAMPS.

# PARKING, LICENSE PLATE AND TAIL LAMPS

## PARKING, LICENSE PLATE AND TAIL LAMPS

PPF:26550

### System Description

EKS000TK

The parking, license and tail lamp operation is controlled by the lighting switch which is built into the spiral cable and BCM. The battery saver system is controlled by the headlamp battery saver control unit and BCM. Power is supplied at all times

- to tail lamp relay terminals 2 and 6
- through 15A fuse [No. 54, located in the fuse, fusible link and relay block (J/B)], and
- to headlamp battery saver control unit terminal 7
- through 10A fuse [No. 6, located in the fuse block (J/B) NO.1].

When ignition switch is in ON or START position, power is supplied

- to headlamp battery saver control unit terminal 1
- through 10A fuse [No. 1, located in the fuse block (J/B) NO.1].

Ground is supplied to headlamp battery saver control unit terminals 4 and 11.

- to headlamp battery saver control unit terminals 4 and 11
- through body grounds M25 and M115.

### LIGHTING OPERATION BY LIGHTING SWITCH

When lighting switch is in 1ST (or 2ND) position, ground is supplied

- to tail lamp relay terminal 1 from headlamp battery saver control unit terminals 6 and 14
- through headlamp battery saver control unit terminals 5 and 13, and
- through lighting switch and body grounds M25 and M115.

Tail lamp relay is then energized and the parking, license, side marker and tail lamps illuminate.

### BATTERY SAVER CONTROL

When the ignition switch is turned from ON (or START) to OFF (or ACC) positions while parking, license, side marker and tail lamps are illuminated, the RAP signal is supplied to terminal 10 of headlamp battery saver control unit terminal from BCM terminal 135.

After counting 45 seconds by the RAP signal from the BCM to headlamp battery saver control unit, the ground supply to terminal 1 of the tail lamp relay from headlamp battery saver control unit terminals 6 and 14 is terminated.

Then the parking, license, side marker and tail lamps are turned off.

The parking, license, side marker and tail lamps are turned off when driver or passenger side door is opened even if 45 seconds have not passed after the ignition switch is turned from ON (or START) to OFF (or ACC) positions while the parking, license, side marker and tail lamps are illuminated.

When the lighting switch is turned from OFF to 1ST (or 2ND) after the parking, license, side marker and tail lamps are turned off by the headlamp battery saver control, ground is supplied.

- to headlamp battery saver control unit terminals 5 and 13 from lighting switch terminal 11, and
- to tail lamp relay terminal 1 from headlamp battery saver control unit terminals 6 and 14.


Then the parking, license, side marker and tail lamps illuminate again.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# PARKING, LICENSE PLATE AND TAIL LAMPS

## Schematic

EKS000TL

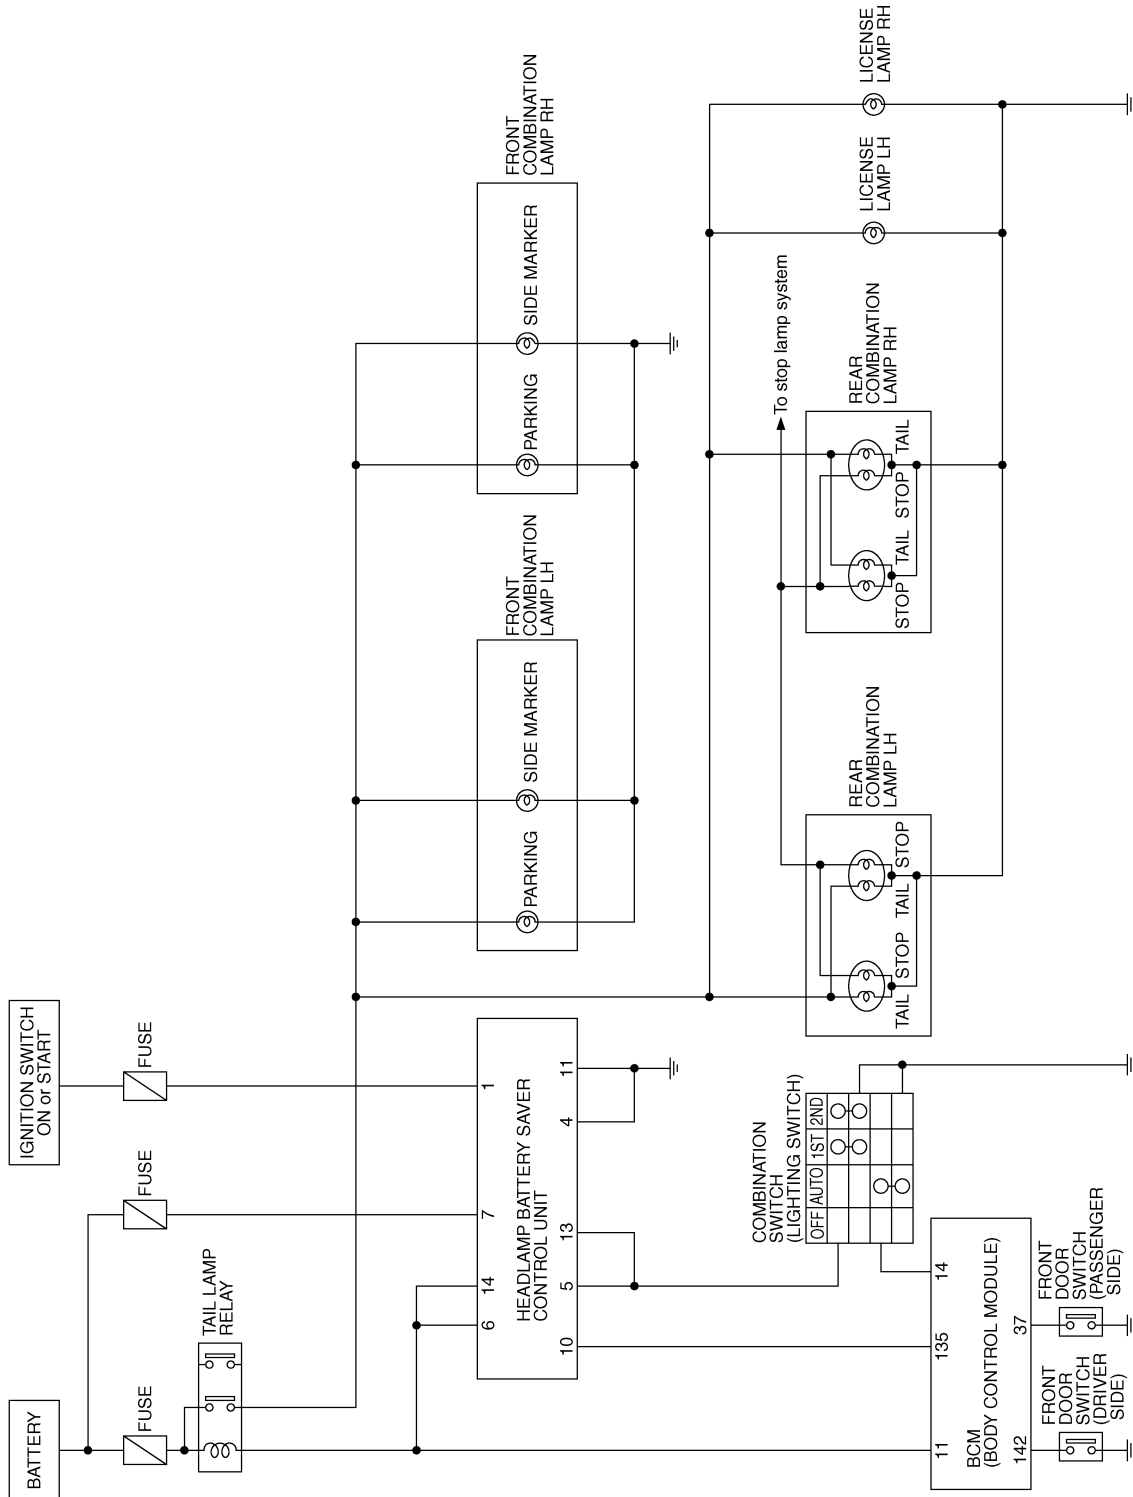

TKWM0022E





# PARKING, LICENSE PLATE AND TAIL LAMPS

## Wiring Diagram — TAIL/L —

EKS000TM

### LT-TAIL/L-01

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

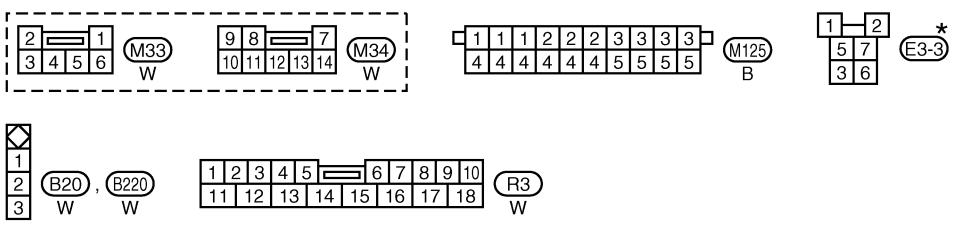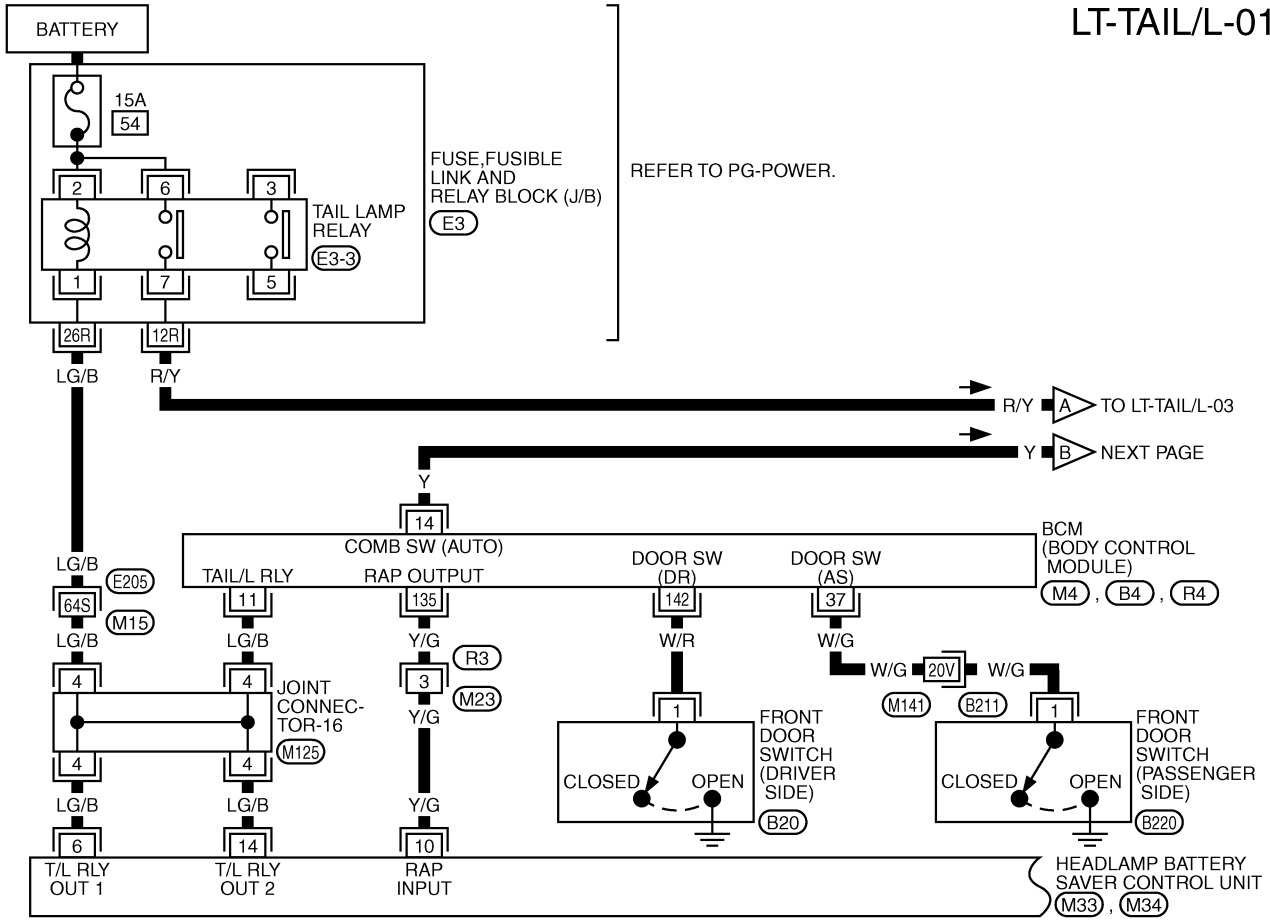



REFER TO THE FOLLOWING.  
 (E205), (B211) -SUPER MULTIPLE JUNCTION (SMJ)  
 (E3) -FUSE,FUSIBLE LINK AND RELAY BLOCK (J/B)  
 (M4), (B4), (R4) -ELECTRICAL UNITS

\*: THIS CONNECTOR IS NOT SHOWN IN "HARNES LAYOUT", PG SECTION.

TKWM0023E

# PARKING, LICENSE PLATE AND TAIL LAMPS

LT-TAIL/L-02


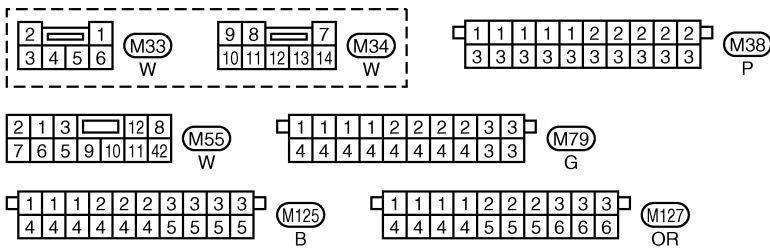
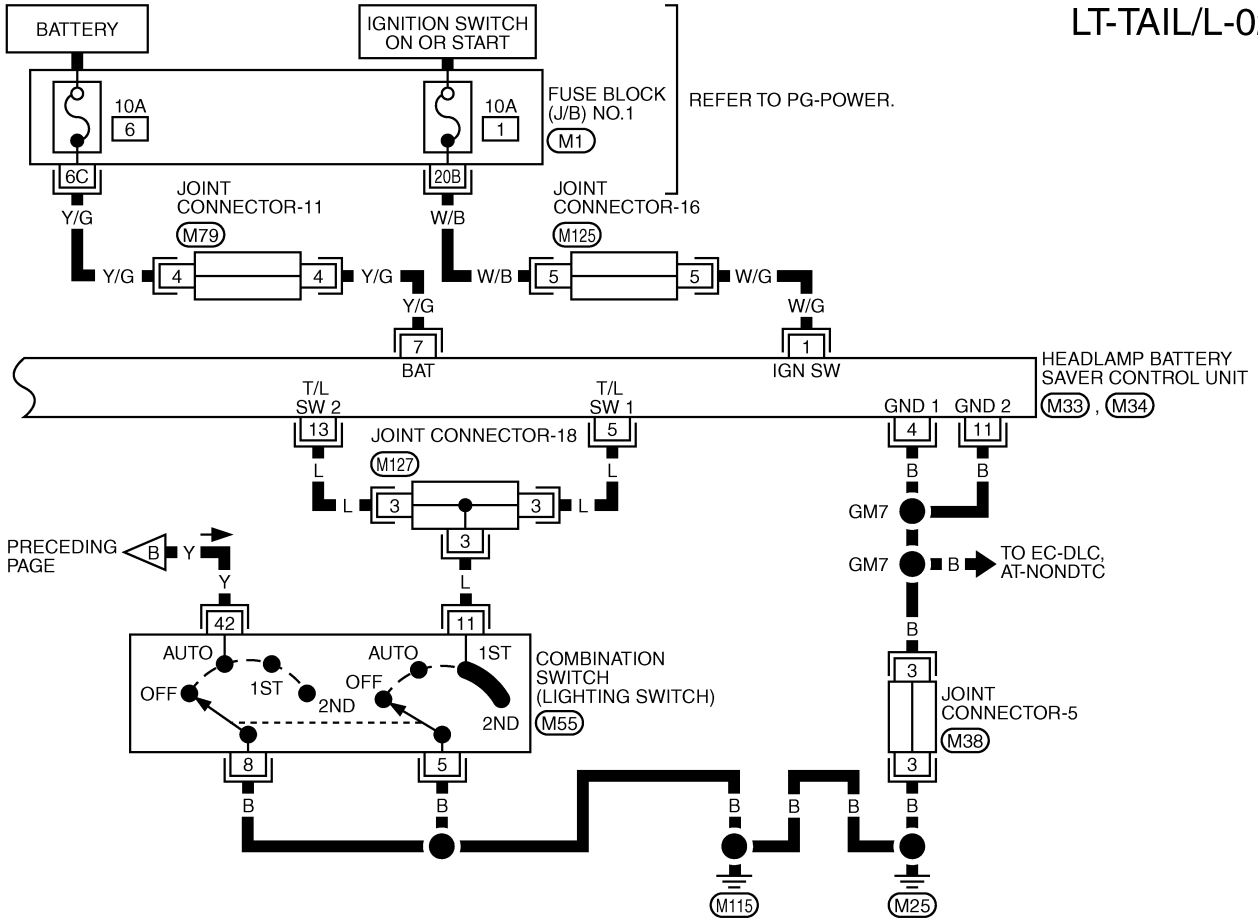


REFER TO THE FOLLOWING.  
 (M1) -FUSE BLOCK-JUNCTION BOX (J/B) NO.1

TKWM0024E

# PARKING, LICENSE PLATE AND TAIL LAMPS

LT-TAIL/L-03

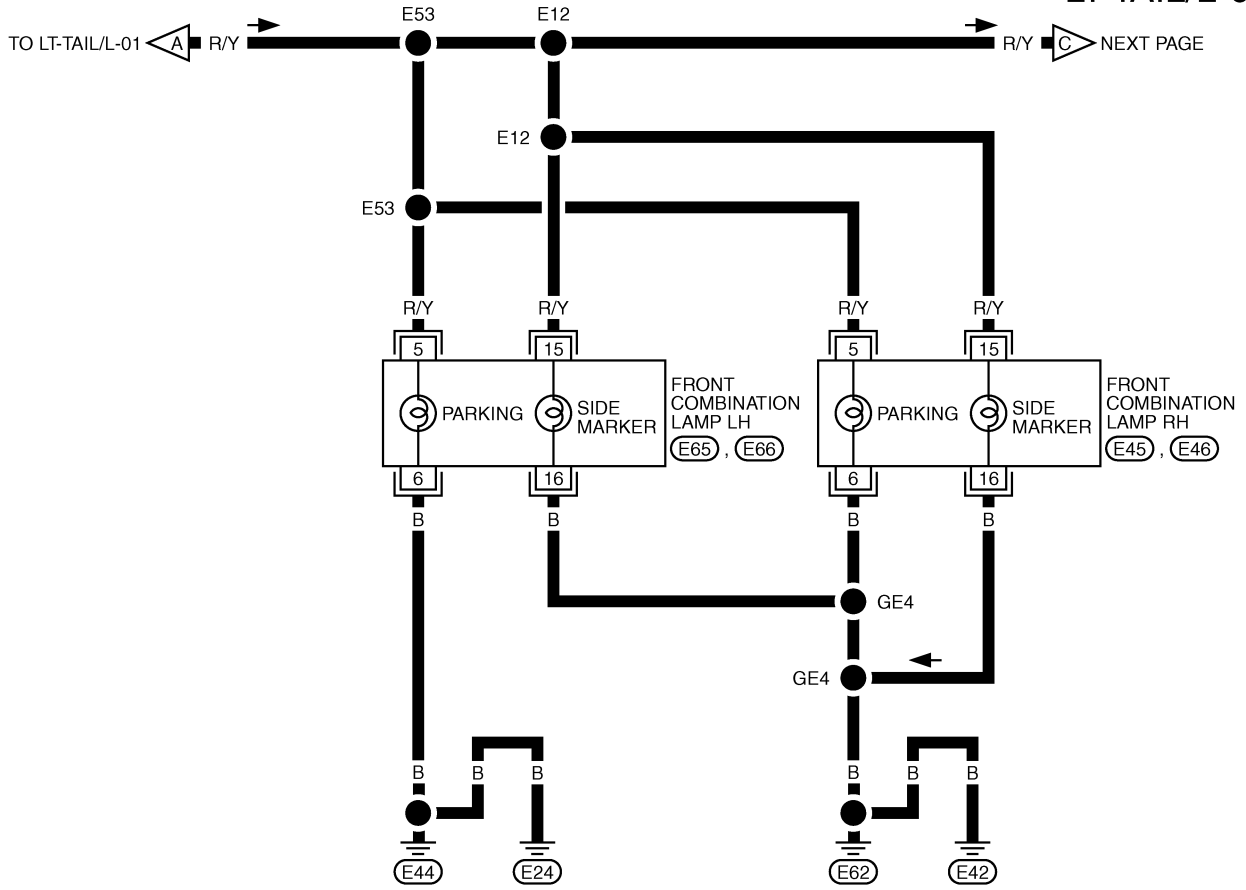

A  
B  
C  
D  
E  
F  
G  
H  
I  
J



LT

L  
M

TKWM0025E

# PARKING, LICENSE PLATE AND TAIL LAMPS

LT-TAIL/L-04

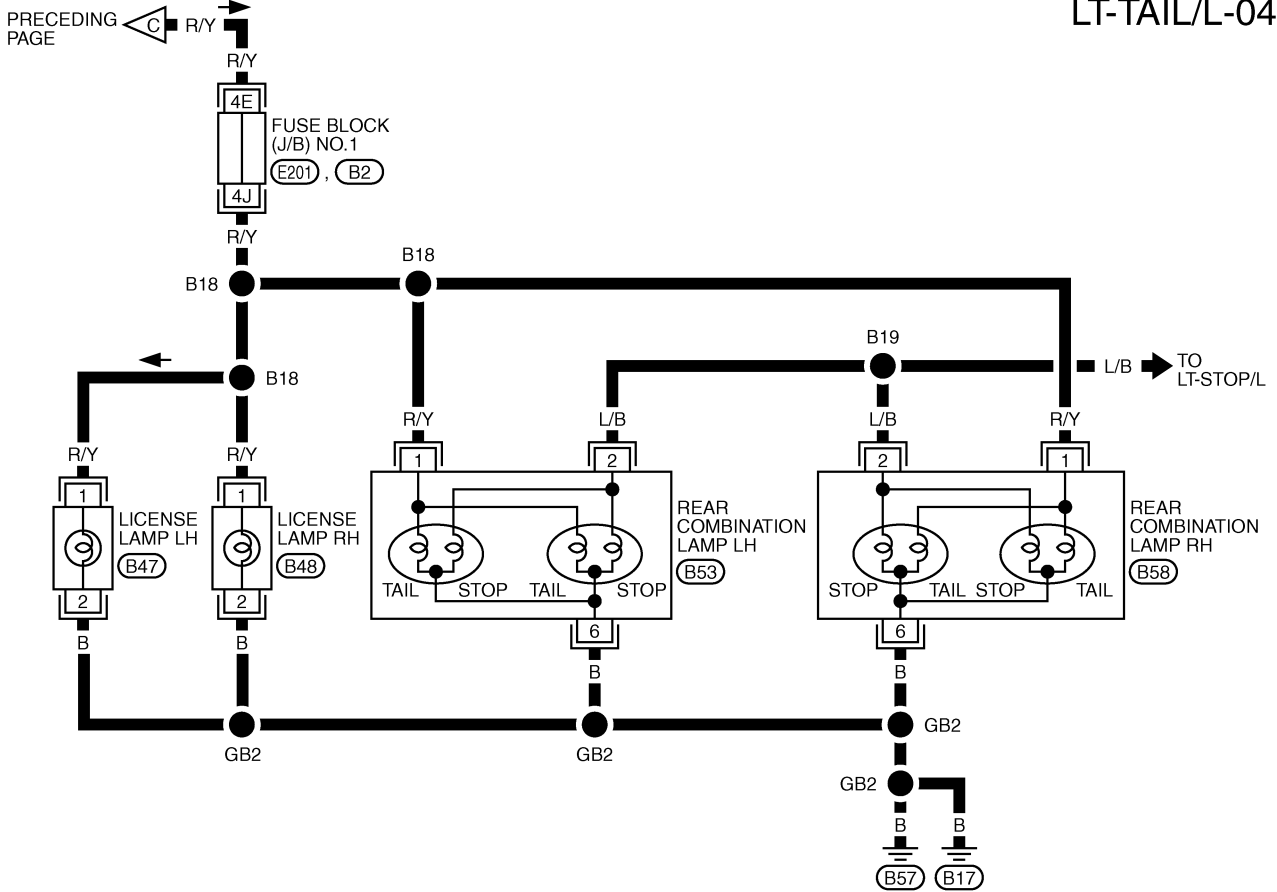

REFER TO THE FOLLOWING.  
E201, B2 - FUSE BLOCK-  
JUNCTION BOX (J/B) NO.1

TKWM0026E

# PARKING, LICENSE PLATE AND TAIL LAMPS

## Trouble Diagnoses

EKS0007N


Symptom	Repair Procedure
No lamps operate (including headlamps).	<ol style="list-style-type: none"> <li>1. Check 10A fuse [No. 6, located in fuse block (J/B) NO.1]. Verify battery positive voltage is present at terminal 7 of headlamp battery saver control unit.</li> <li>2. Check lighting switch. Refer to <a href="#">LT-66, "Switch Circuit Inspection"</a>.</li> <li>3. Check headlamp battery saver control unit. Refer to <a href="#">LT-15, "Terminals and Reference Value for Battery Saver Control Unit"</a>.</li> </ol>
No parking, side marker, license and tail lamps operate, but headlamps do operate.	<ol style="list-style-type: none"> <li>1. Check 15A fuse [No. 54, located in fuse, fusible link and relay block (J/B)]. Verify battery positive voltage is present at terminals 6 and 2 of tail lamp relay.</li> <li>2. Check tail lamp relay.</li> <li>3. Check harness between headlamp battery saver control unit terminals 6 and 14 and tail lamp relay terminal 1. Check harness between tail lamp relay terminal 7 and terminals of each combination lamp.</li> <li>4. Check lighting switch. Refer to <a href="#">LT-66, "Switch Circuit Inspection"</a>.</li> <li>5. Check harness between lighting switch terminal 11 and headlamp battery saver control unit terminals 5 and 13. Check harness between lighting switch terminal 5 and ground.</li> <li>6. Check headlamp battery saver control unit. Refer to <a href="#">LT-15, "Terminals and Reference Value for Battery Saver Control Unit"</a>.</li> </ol>
Battery saver control does not operate properly.	<ol style="list-style-type: none"> <li>1. Check RAP signal. Verify 12 positive voltage from BCM is present at terminal 10 of headlamp battery saver control unit: <ul style="list-style-type: none"> <li>- Within 45 seconds after ignition switch turns off.</li> <li>- When front door LH and RH is closed.</li> </ul> </li> <li>2. Check the following. <ul style="list-style-type: none"> <li>- Harness between BCM and LH or RH door switch for open or short circuit.</li> <li>- LH or RH door switch ground circuit.</li> <li>- LH or RH door switch.</li> </ul> </li> <li>3. Check the following. <ul style="list-style-type: none"> <li>- Harness between headlamp battery saver control unit terminals 5 or 13 and lighting switch terminal 11 for open or short circuit.</li> <li>- Harness between lighting switch terminal 5 and ground.</li> <li>- Lighting switch. Refer to <a href="#">LT-66, "Switch Circuit Inspection"</a>.</li> </ul> </li> <li>4. Check headlamp battery saver control unit. Refer to <a href="#">LT-15, "Terminals and Reference Value for Battery Saver Control Unit"</a>.</li> <li>5. Check BCM. Refer to <a href="#">LT-17, "Terminals and Reference Value for BCM"</a>.</li> </ol>

## Bulb Replacement LICENSE PLATE LAMP

EKS000WE


1. Open the trunk and remove the trunk lid finisher. Refer to [EI-51, "TRUNK ROOM TRIM & TRUNK LID FINISHER"](#) in "EXTERIOR & INTERIOR (EI)" section.
2. Disconnect the license plate lamp connector.
3. Turn the bulb socket counterclockwise and unlock it.
4. Remove the bulb from its socket.

**License plate lamp : 12V 5W**

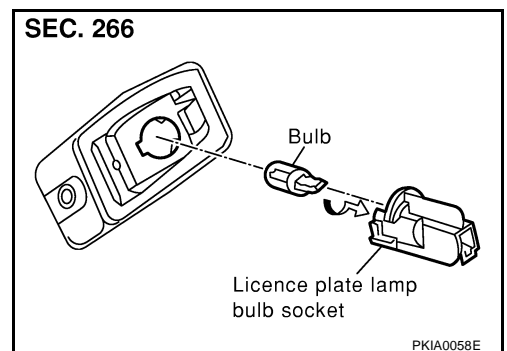

# PARKING, LICENSE PLATE AND TAIL LAMPS

## License plate lamp mounting screw:

 : 1.86 - 2.94 N·m (0.19 - 0.29kg·m, 17 - 26 in·lb)

## FRONT COMBINATION LAMP

Refer to [LT-32, "Bulb Replacement"](#) in "HEADLAMP (FOR USA)".


## REAR COMBINATION LAMP

1. Open the trunk and remove the trunk side finisher. Refer to [EI-51, "TRUNK ROOM TRIM & TRUNK LID FINISHER"](#) in "EXTERIOR & INTERIOR (EI)" section.
2. Turn the bulb socket counterclockwise and unlock it.
3. Remove the bulb.

**Stop/Tail lamp (outer-inner side) : 12V 21/5W**

**Rear turn signal lamp : 12V 21W**

**Buck-up lamp : 12V 18W**

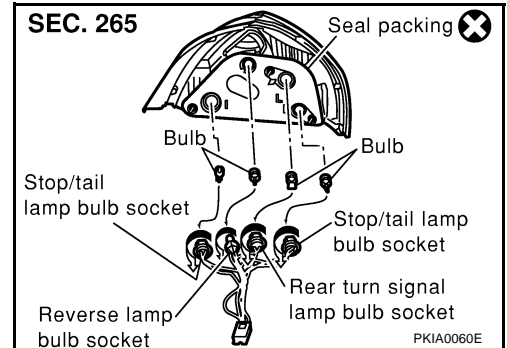


EKS000W

## Removal and Installation LICENSE PLATE LAMP

### Removal


1. Remove the license plate finisher. Refer to [EI-51, "TRUNK ROOM TRIM & TRUNK LID FINISHER"](#) in "EXTERIOR & INTERIOR (EI)" section.
2. Disconnect the license plate lamp connector.
3. Remove the license plate lamp mounting screw and remove the license plate lamp from the vehicle.

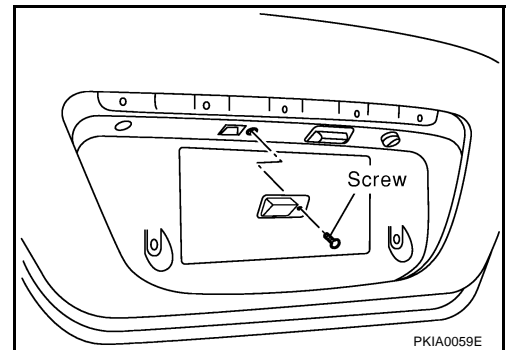

### Installation

Install in the reverse order of removal, taking care of the following points.

## License plate lamp mounting screw:

 : 1.86 - 2.94 N·m (0.19 - 0.29 kg·m, 17 - 26 in·lb)


## FRONT COMBINATION LAMP

Refer to [LT-33, "Removal and Installation"](#) in "HEADLAMP (FOR USA)".

## REAR COMBINATION LAMP

### Removal

1. Open the trunk and remove the trunk side finisher. Refer to [EI-51, "TRUNK ROOM TRIM & TRUNK LID FINISHER"](#) in "EXTERIOR & INTERIOR (EI)" section.
2. Disconnect the rear combination lamp connector.
3. Remove the rear combination lamp mounting nuts.
4. Pull the rear combination lamp toward rear of the vehicle and remove from the vehicle.
5. Remove the seal packing from the vehicle.

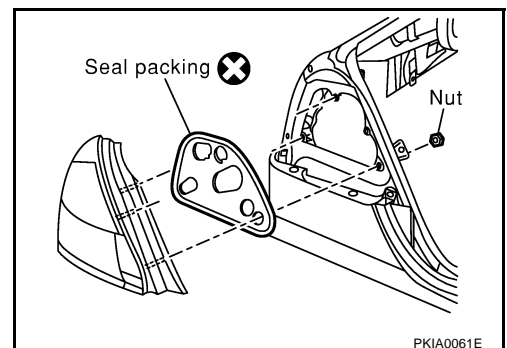

# PARKING, LICENSE PLATE AND TAIL LAMPS

---

## Installation

Install in the reverse order of removal, taking care of the following points.

- Install a new seal packing to the rear combination lamp.

**CAUTION:**

**Seal packing cannot be reused.**

**Rear combination lamp mounting nut:**

 : 2.5 - 3.8 N·m (0.26 - 0.38 kg·m, 23 - 33 in·lb)

A

B

C

D

E

F

G

H

I

J

LT

L

M

# INTERIOR ROOM LAMP


## INTERIOR ROOM LAMP

PFP:26410

### System Description OUTLINE

EKS0017P

Controls on/off and afterglow time of the map lamp, personal lamp, and ignition key hole illumination.

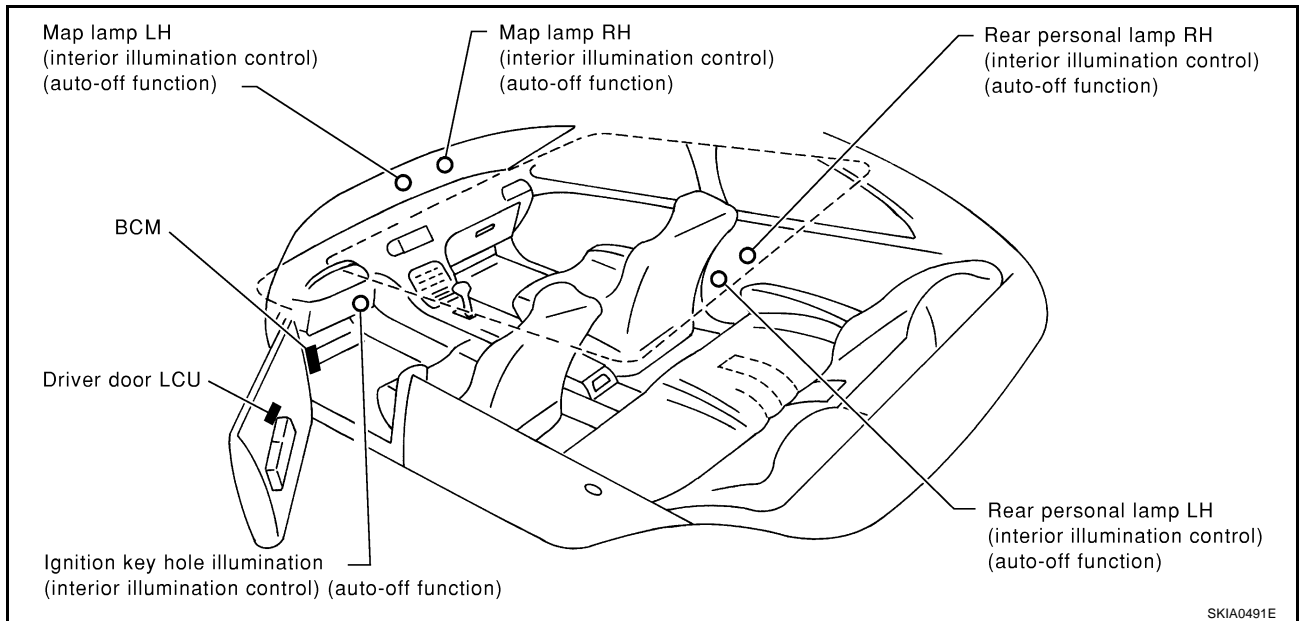

### TIMER FUNCTION

Controls the illumination duration of the lamps and illuminations according to the signals from the driver door locking detection switch, driver door switch, ignition switch, and key-in detection switch.

- The timer operates for approx. 30 seconds.
- The timer will be actuated or cancelled by the signals from the following switches.

Function	Operation
Driver door locking detection switch	<ul style="list-style-type: none"> <li>● Timer will be actuated by input of the switch ON (door unlocked) signal when the driver door switch is OFF (door closed) and the key-in detection switch is OFF (key withdrawn).</li> <li>● Timer will be cancelled by input of the switch OFF (door locked) signal.</li> </ul>
Driver door switch	<ul style="list-style-type: none"> <li>● Timer will be cancelled by input of the switch ON (door open) signal.</li> <li>● Timer will be actuated by input of the switch ON→OFF (door open→closed) signal when the key-in detection switch is OFF.</li> </ul>
Ignition switch	<ul style="list-style-type: none"> <li>● Timer will be cancelled by input of the switch ACC or ON signal.</li> </ul>
Key-in detection switch	<ul style="list-style-type: none"> <li>● Timer will be actuated by input of the switch ON→OFF (key inserted→withdrawn) signal when the driver door switch is OFF (door closed).</li> </ul>

- If a new timer actuation signal is input while the timer is operating, the later input will have priority.
- If any lamp switch is operated and a separate actuation signal is input while the timer is operating, the lamp operation will be prioritized. However, the timer operation will not be renewed or cancelled.



# INTERIOR ROOM LAMP


## LAMP OUTPUT CONTROL FUNCTION

Controls output of lamps except for the ignition key hole illumination.

- In case from full illumination to off, from full illumination to half illumination, and from half illumination to off.

### NOTE:


In full illumination, brightness of the lamps is 100%. In half illumination, it is 35% (25% for the personal lamp).

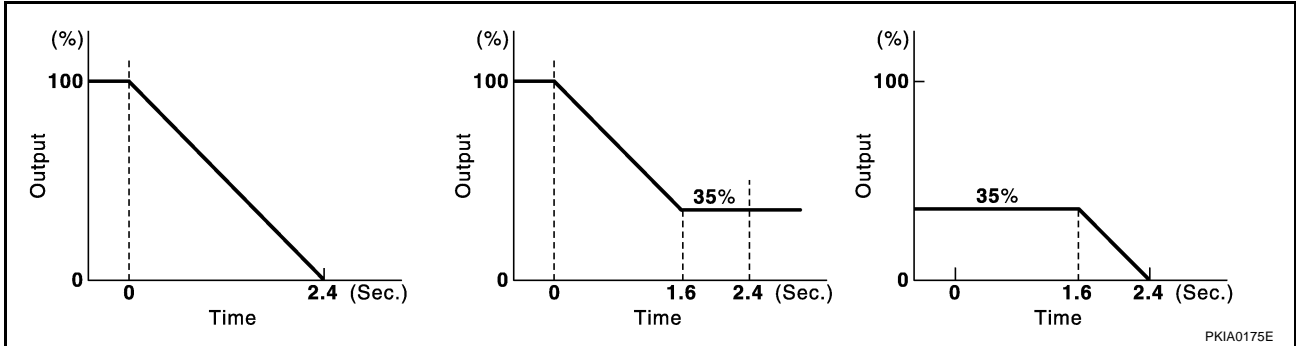

- In case from off to full illumination, from half illumination to full illumination, and from off to half illumination.

### NOTE:

In full illumination, brightness of the lamps is 100%. In half illumination, it is 35% (25% for the personal lamp).

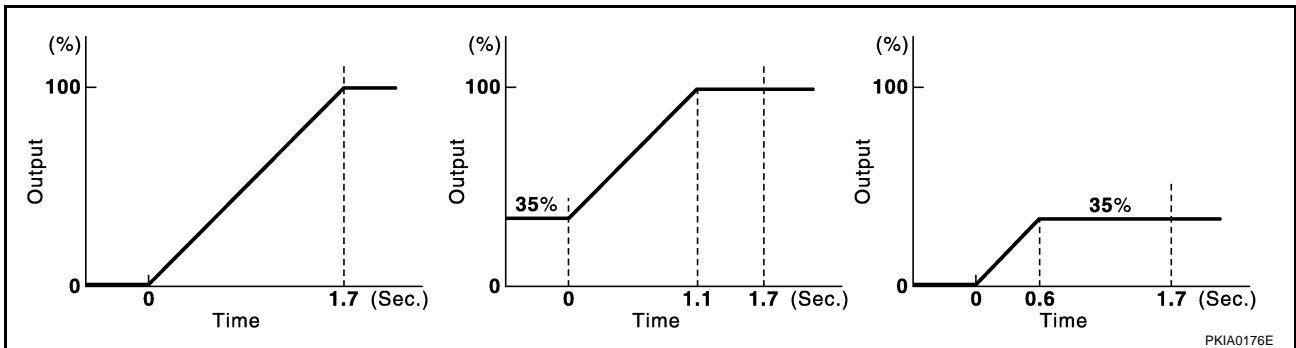

## AUTO OFF FUNCTION

When ignition switch is in OFF, and following condition is continued for approximately 30 minutes without the change, then interior room lamps are automatically turned OFF.

- Interior lamp ill switch and personal lamps switch are "AUTO" position, and then door switch of either is opened.
- Interior lamp ill switch is "ON" position.
- Personal lamp switch is "FULL" position.

The auto off function is turned OFF when the one of following change is operated, and executes a usual operation control thereafter.


- Ignition switch is turned from OFF to ON.
- Each door switch is switched from OFF to ON. (Door closed → open)
- Interior lamp ill switch is switched from OFF to ON.
- Personal lamp switch is switched from AUTO to ON.

## LIGHTS ON/OFF MODES


Separate signal from each switch and signals of higher output have priority over these modes.

# INTERIOR ROOM LAMP

## 1. Lights on-off modes when each lamp switch is operated

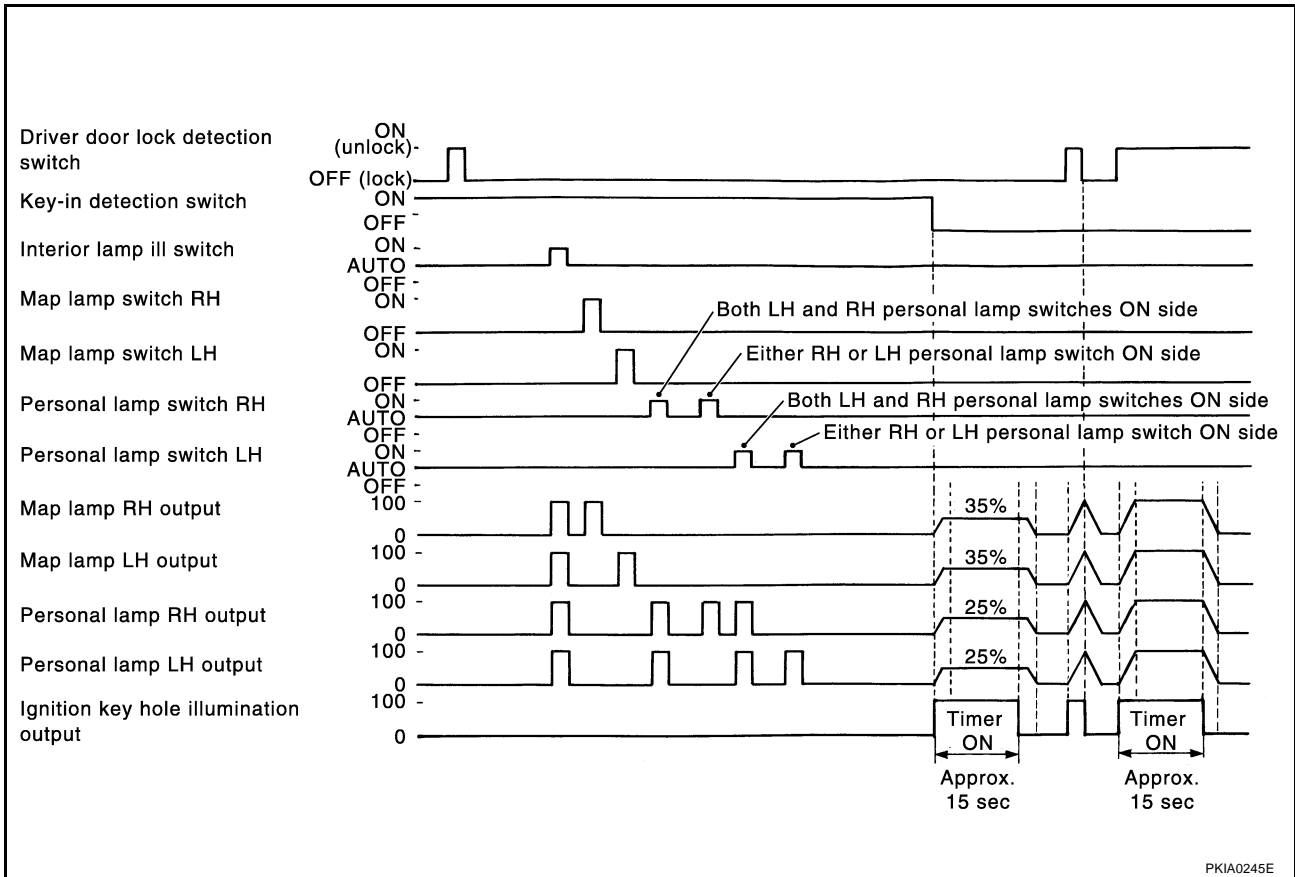


## 2. Lights on-off modes when the driver door is opened and closed

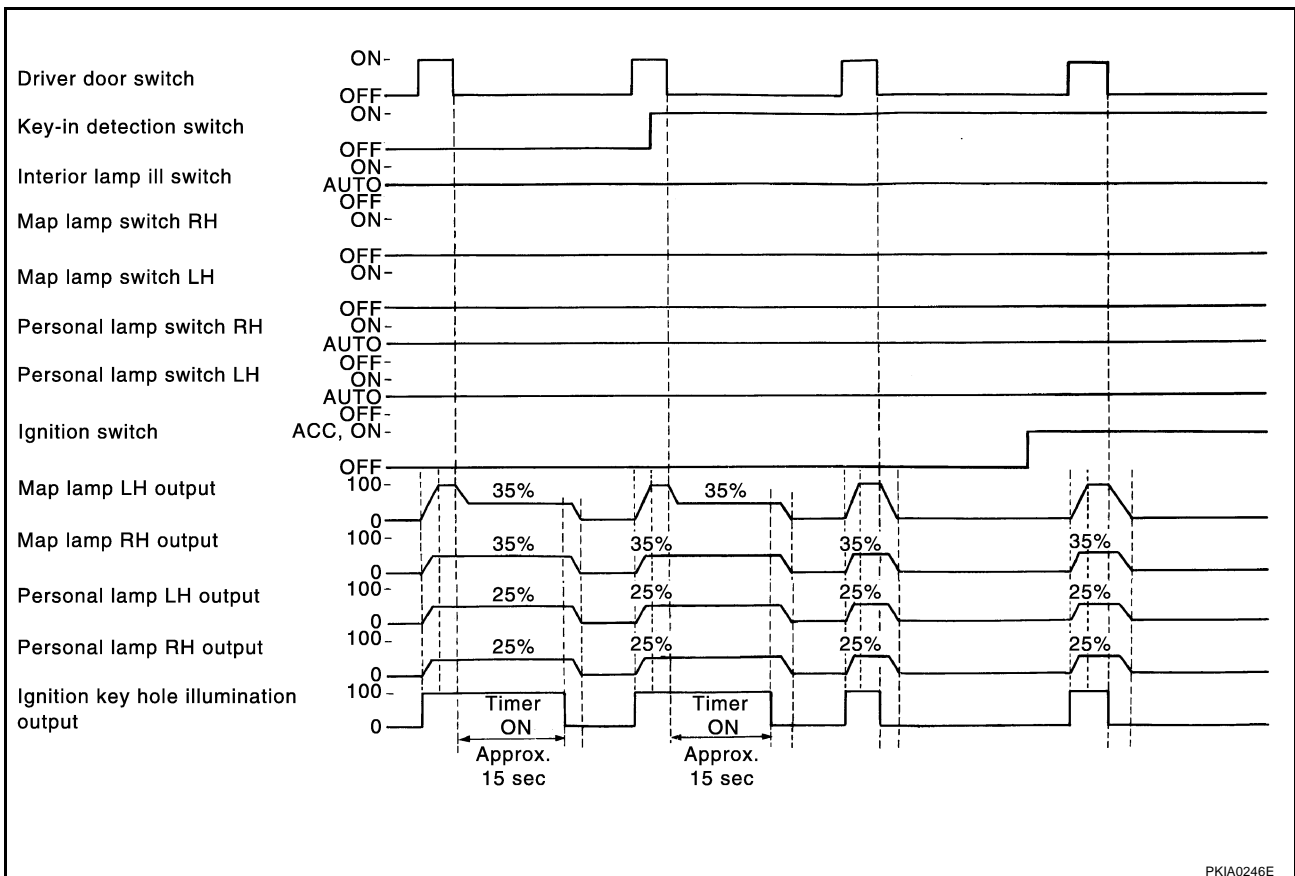

# INTERIOR ROOM LAMP

3. Lights on-off modes when the passenger door is opened and closed, lights on-off modes when rear doors (LH, RH) are opened and closed

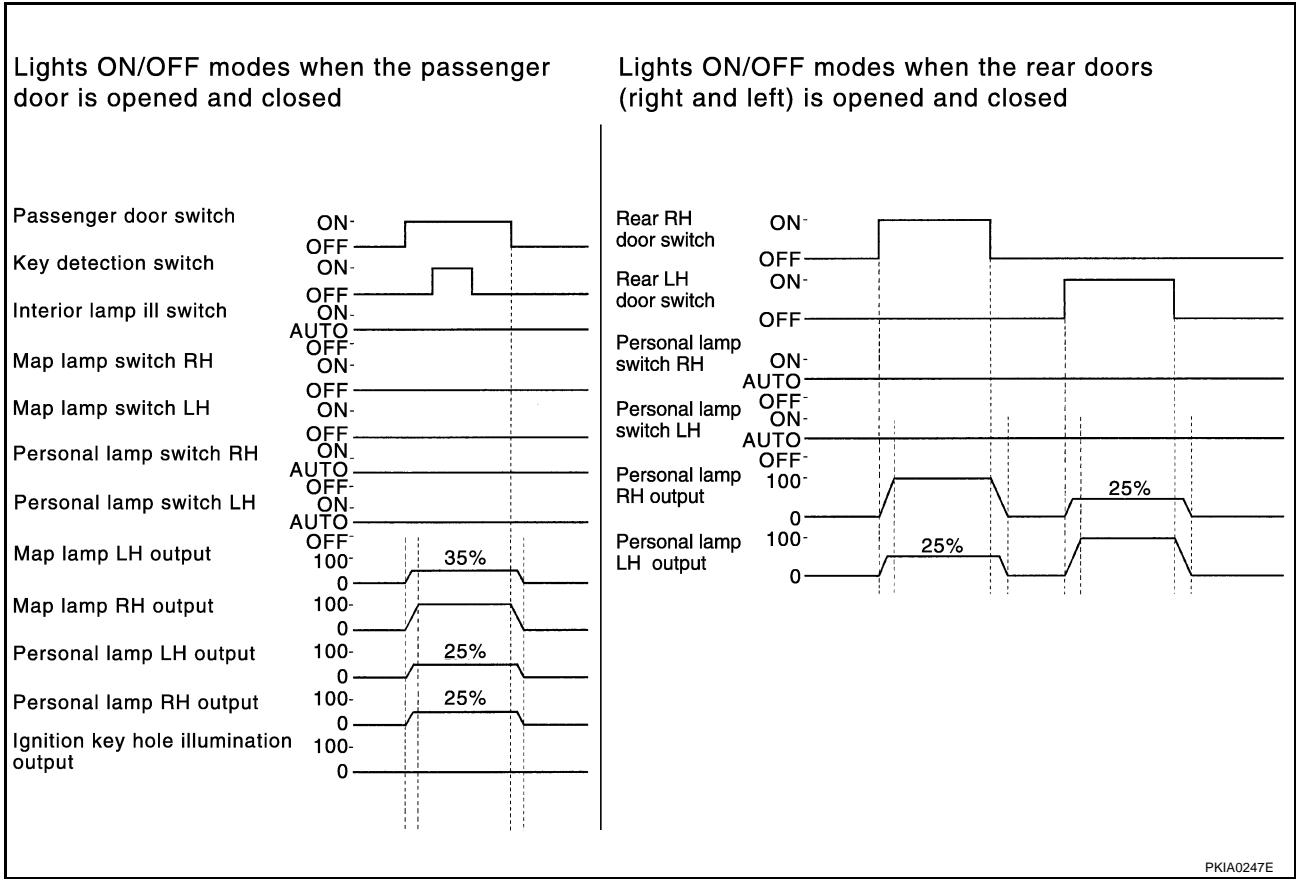

## Major Components and Their Functions


EKS0017R

Components	Functions
BCM	<ul style="list-style-type: none"> <li>Controls on/off and afterglow time of the interior lamps and illuminations according to the signals from the ignition switch, key-in detection switch, lighting switch, each door switch, driver door locking detection switch, and each lamp switch.</li> </ul> <p><b>CAUTION:</b> On/off control varies with signal input from each switch. Refer to <a href="#">LT-81, "LIGHTS ON/OFF MODES"</a>.</p>
Driver door locking detection switch	<ul style="list-style-type: none"> <li>Detects driver door lock (switch OFF)/unlock (switch ON) status and inputs it to the BCM via the driver door LCU.</li> </ul>
Driver door switch	<ul style="list-style-type: none"> <li>Detects driver door open (switch ON)/closed (switch OFF) status and inputs it to the BCM.</li> </ul>
Ignition switch	<ul style="list-style-type: none"> <li>Detects ignition switch OFF (OFF), ACC-IGN (ON) status and inputs it to the BCM.</li> </ul>
Key-in detection switch	<ul style="list-style-type: none"> <li>Detects ignition key inserted (ON)/withdrawn (OFF) status and inputs it to the BCM.</li> </ul>

# INTERIOR ROOM LAMP

## Schematic

EKS000TZ

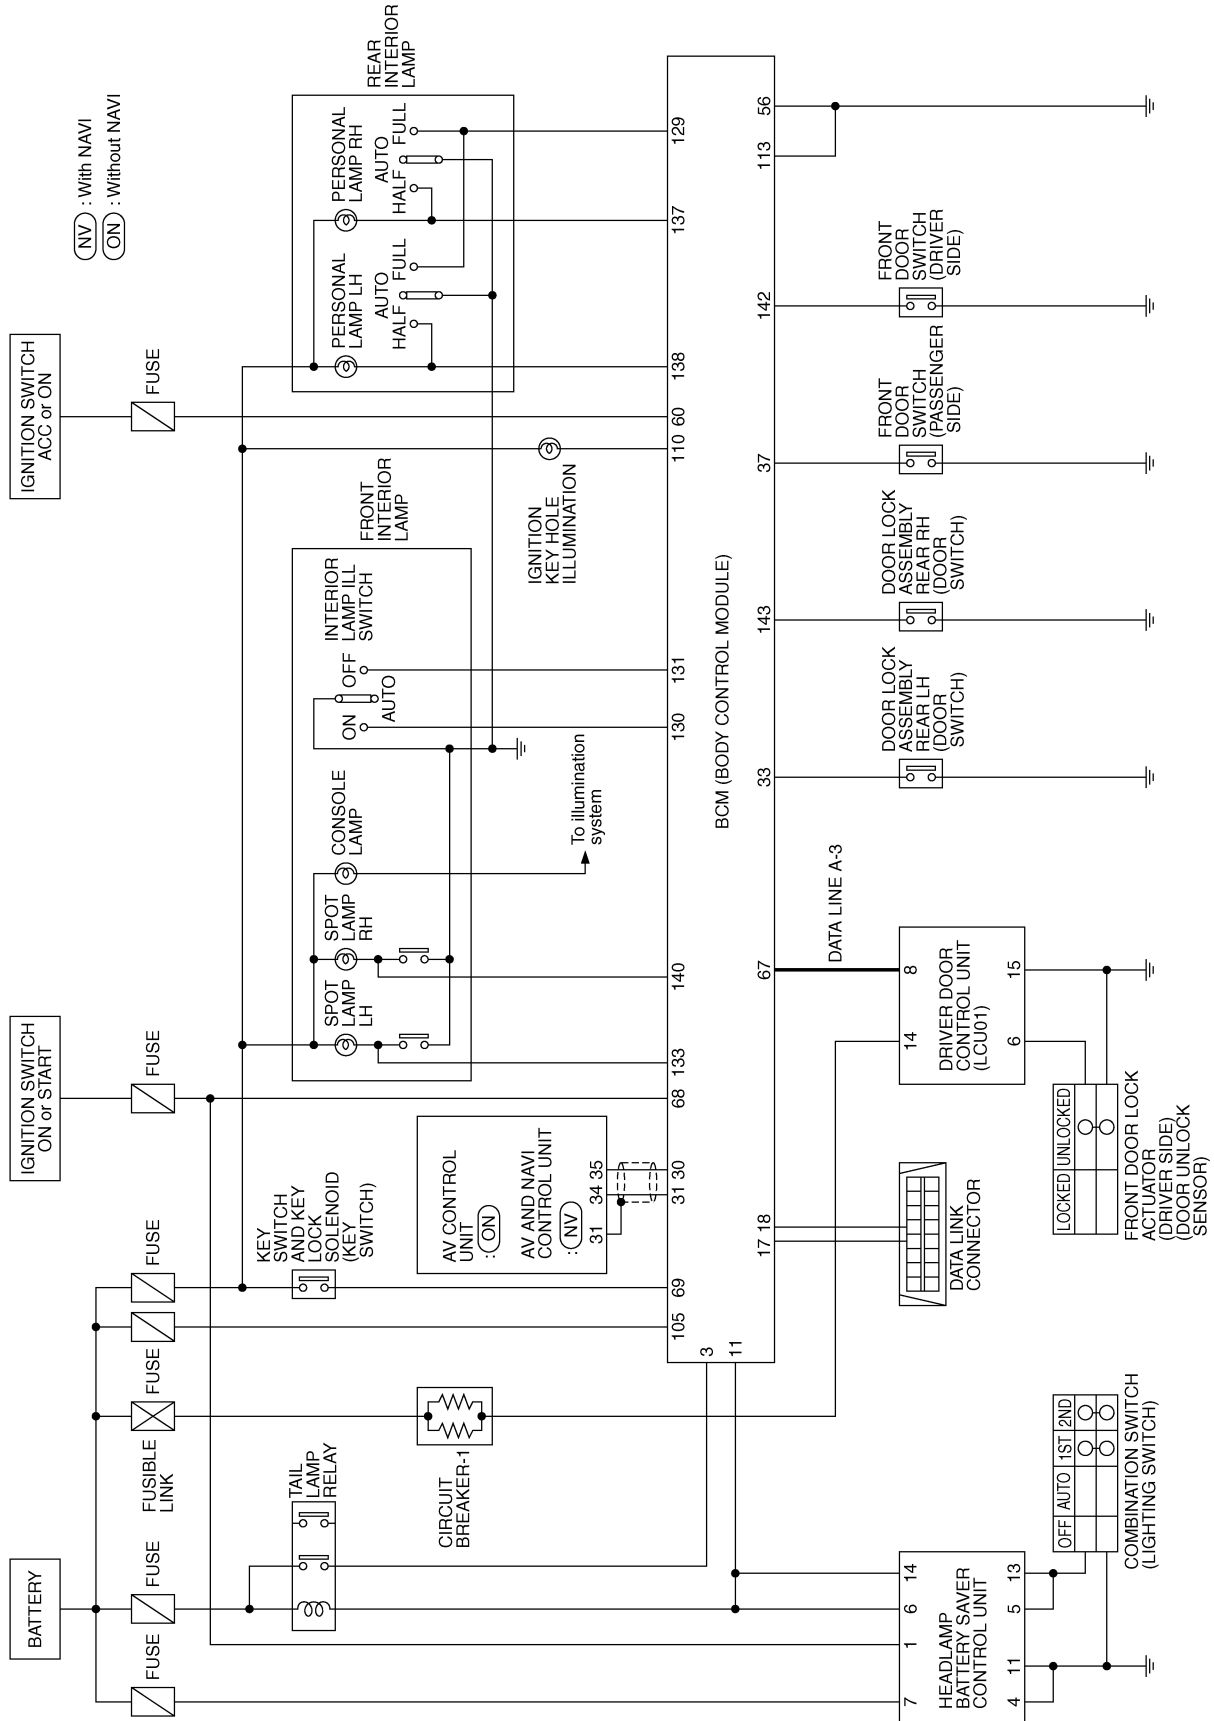






TKWM0233E

# INTERIOR ROOM LAMP

## Wiring Diagram — INT/L —

EKS000U0

### LT-ROOM/L-01

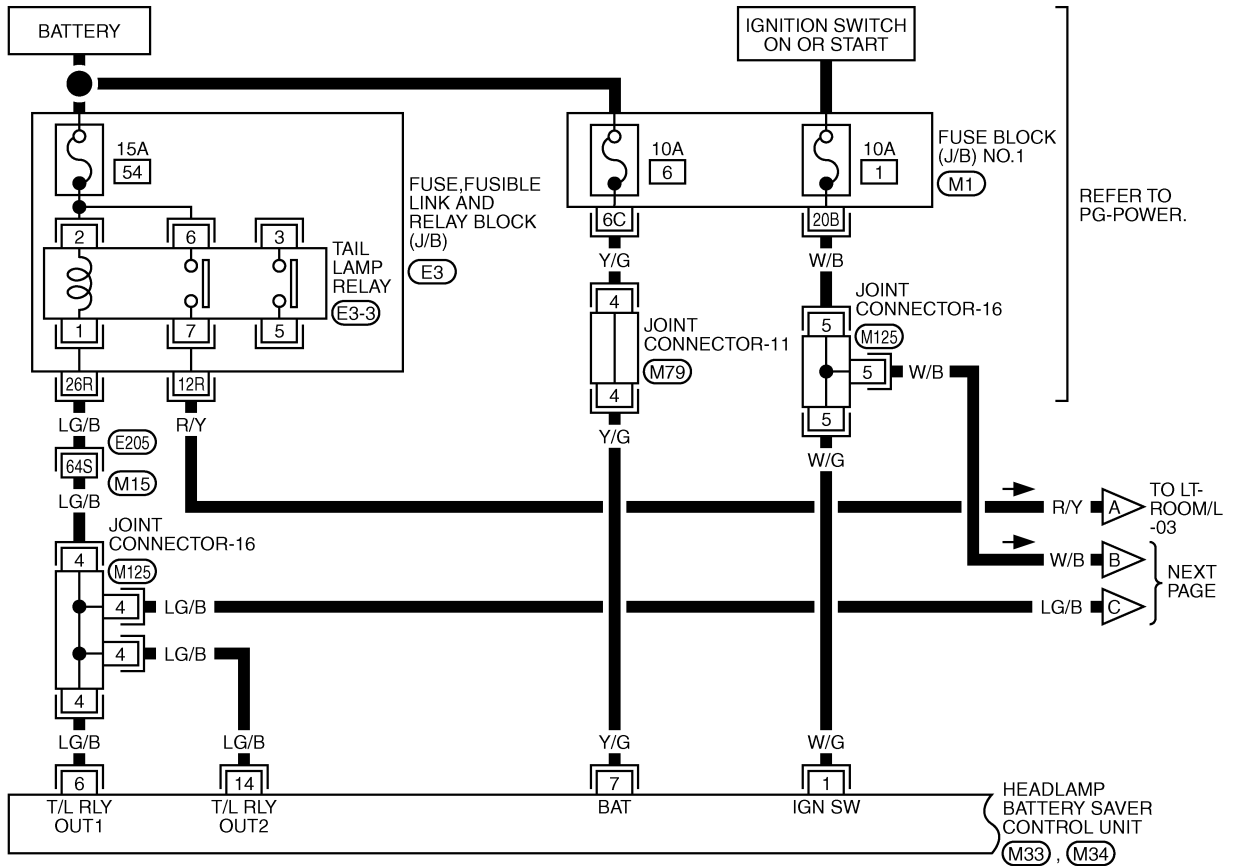

- REFER TO THE FOLLOWING.
- (E205) -SUPER MULTIPLE JUNCTION (SMJ)
  - (M1) -FUSE BLOCK-JUNCTION BOX (J/B) NO.1
  - (E3) -FUSE,FUSIBLE LINK AND RELAY BLOCK (J/B)



\*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

TKWM0046E

# INTERIOR ROOM LAMP



LT-ROOM/L-02

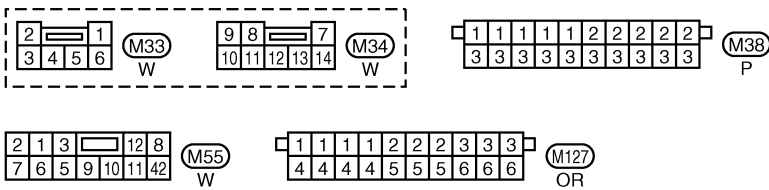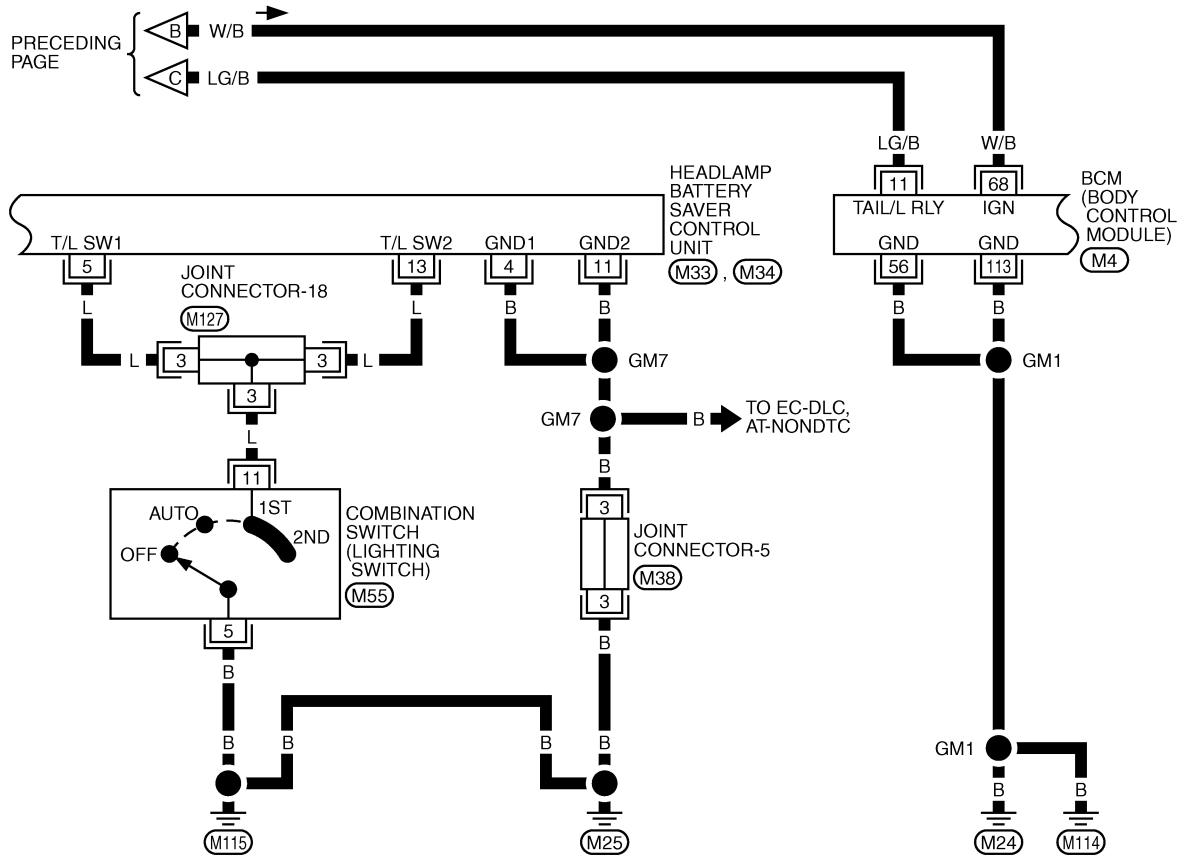

REFER TO THE FOLLOWING.  
 (M4) -ELECTRICAL UNITS

TKWM0047E

# INTERIOR ROOM LAMP

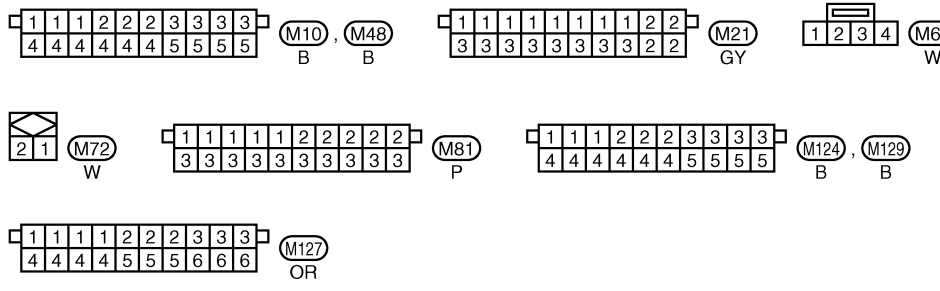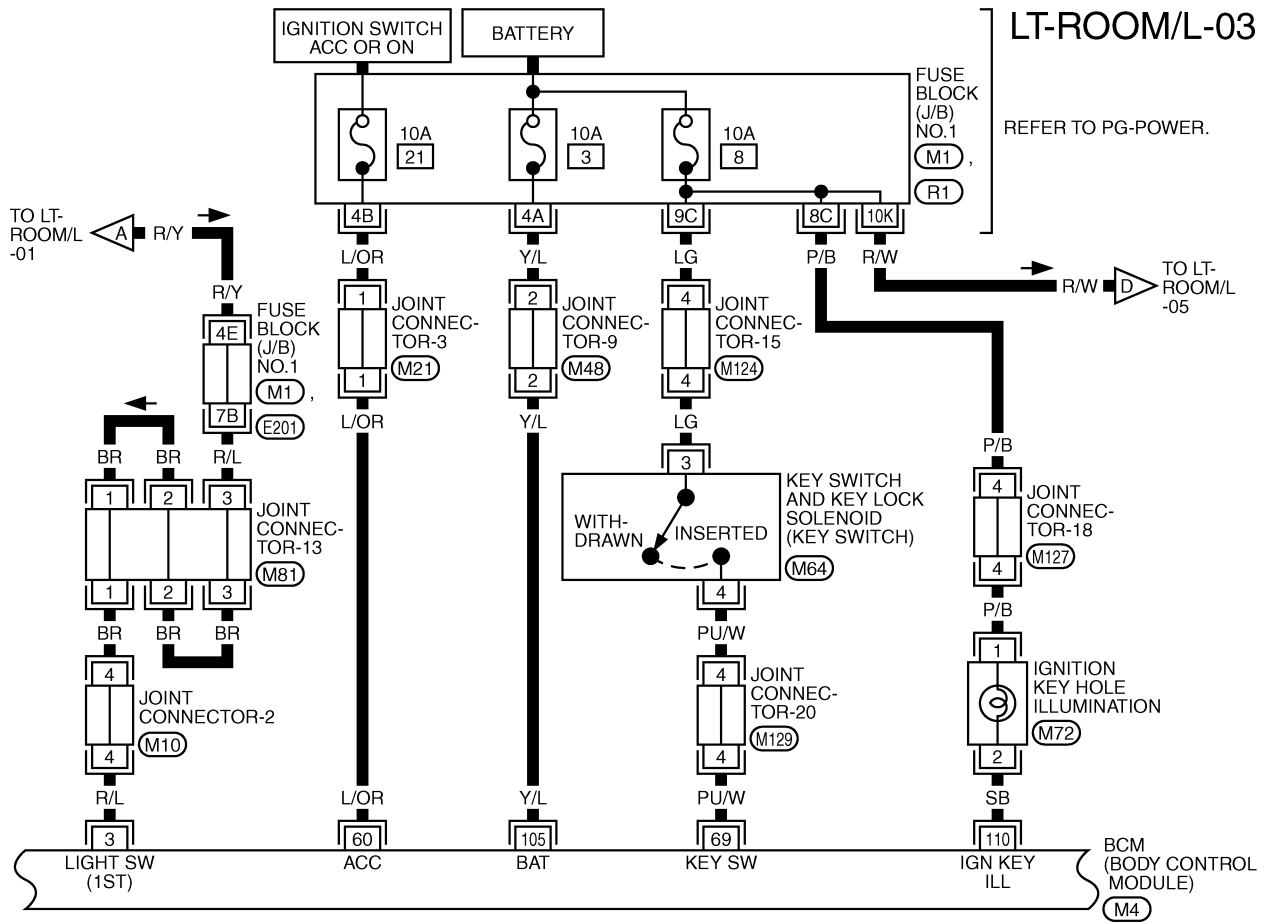

REFER TO THE FOLLOWING.

(M1), (E201), (R1) - FUSE BLOCK-JUNCTION BOX (J/B) NO.1

(M4) - ELECTRICAL UNITS

A

B

C

D

E

F

G

H

I

J

LT



L

M

TKWM0048E

# INTERIOR ROOM LAMP

LT-ROOM/L-04

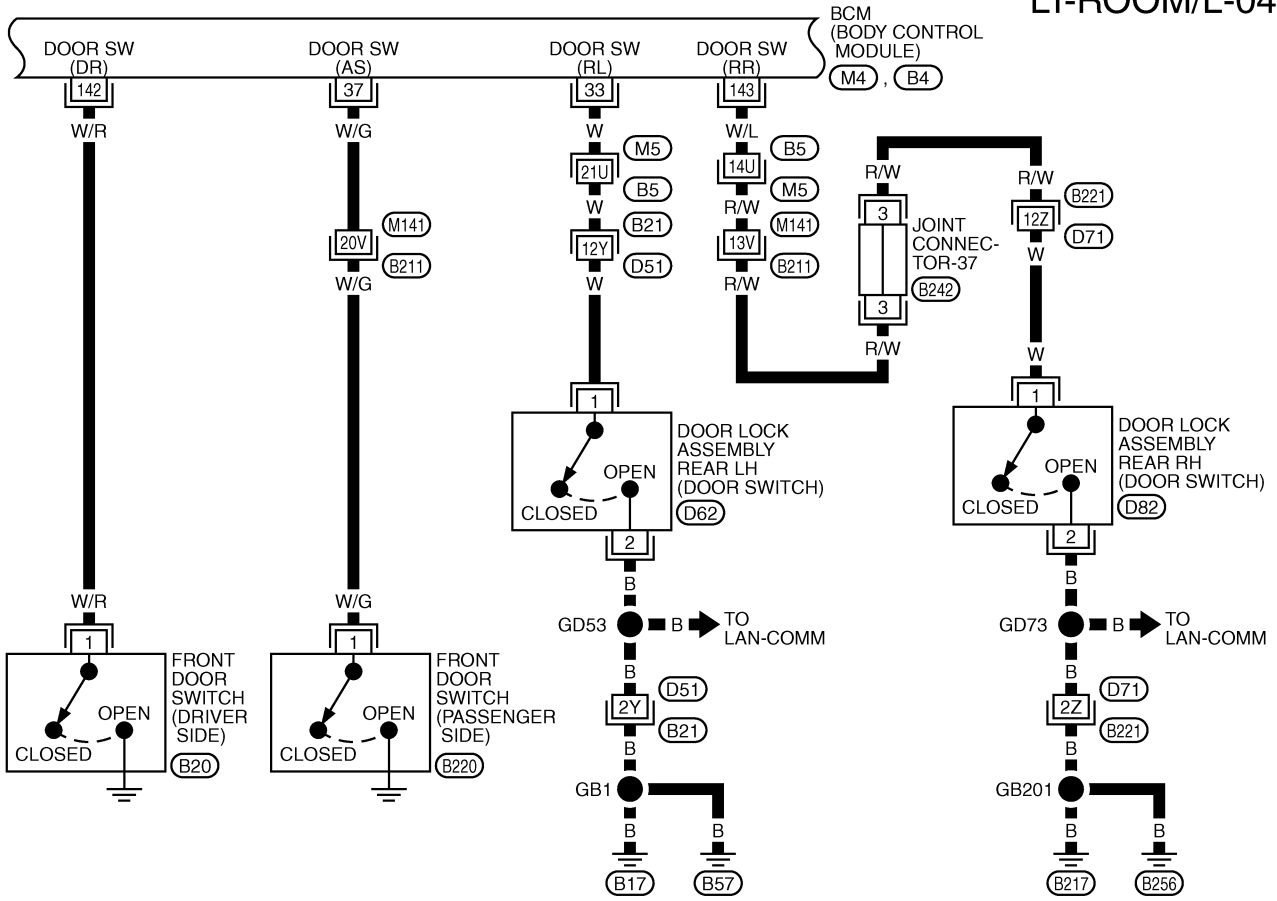



REFER TO THE FOLLOWING.  
 (M5), (B21), (B211), (B221)  
 -SUPER MULTIPLE JUNCTION (SMJ)  
 (M4), (B4) -ELECTRICAL UNITS

TKWM0049E



# INTERIOR ROOM LAMP

LT-ROOM/L-05

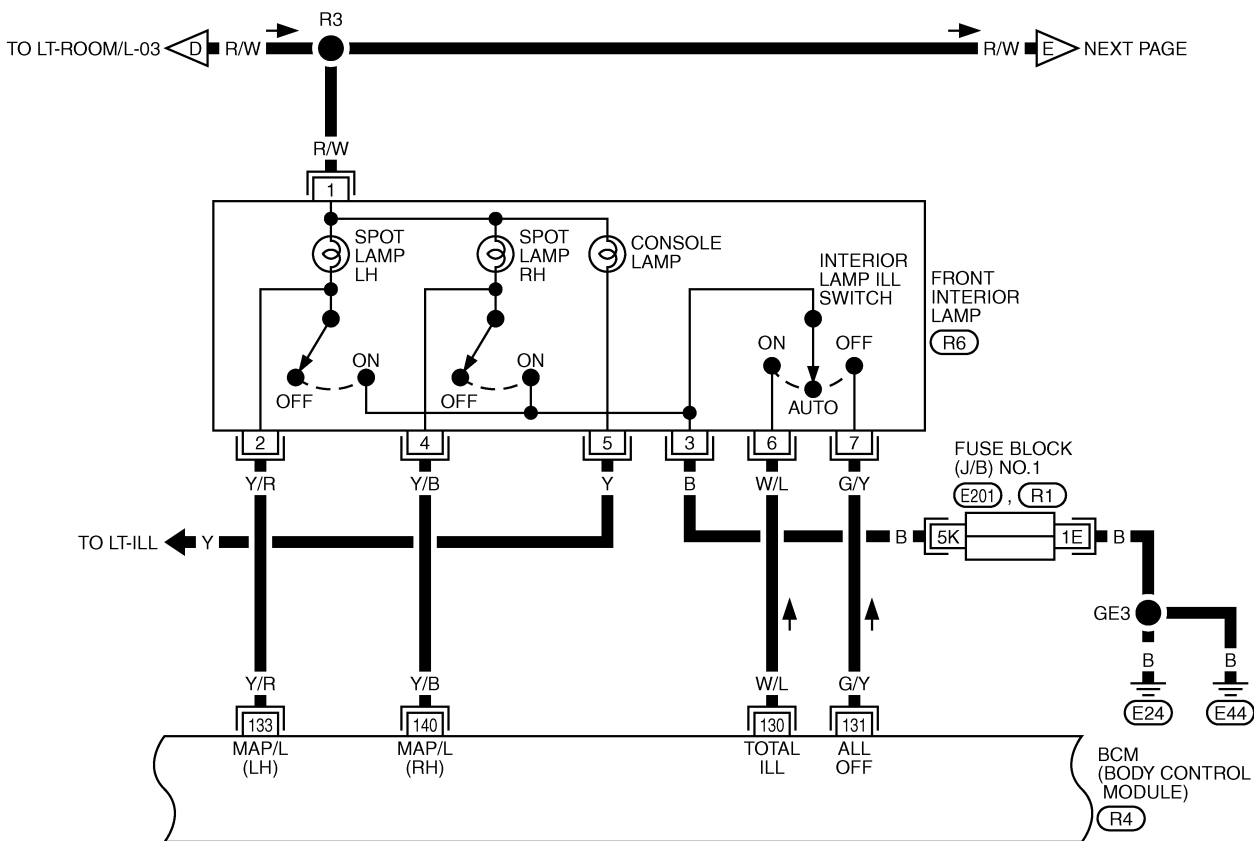



REFER TO THE FOLLOWING.  
 (E201), (R1) - FUSE BLOCK-JUNCTION BOX (J/B) NO.1  
 (R4) - ELECTRICAL UNITS

LT

TKWM0234E

# INTERIOR ROOM LAMP

LT-ROOM/L-06

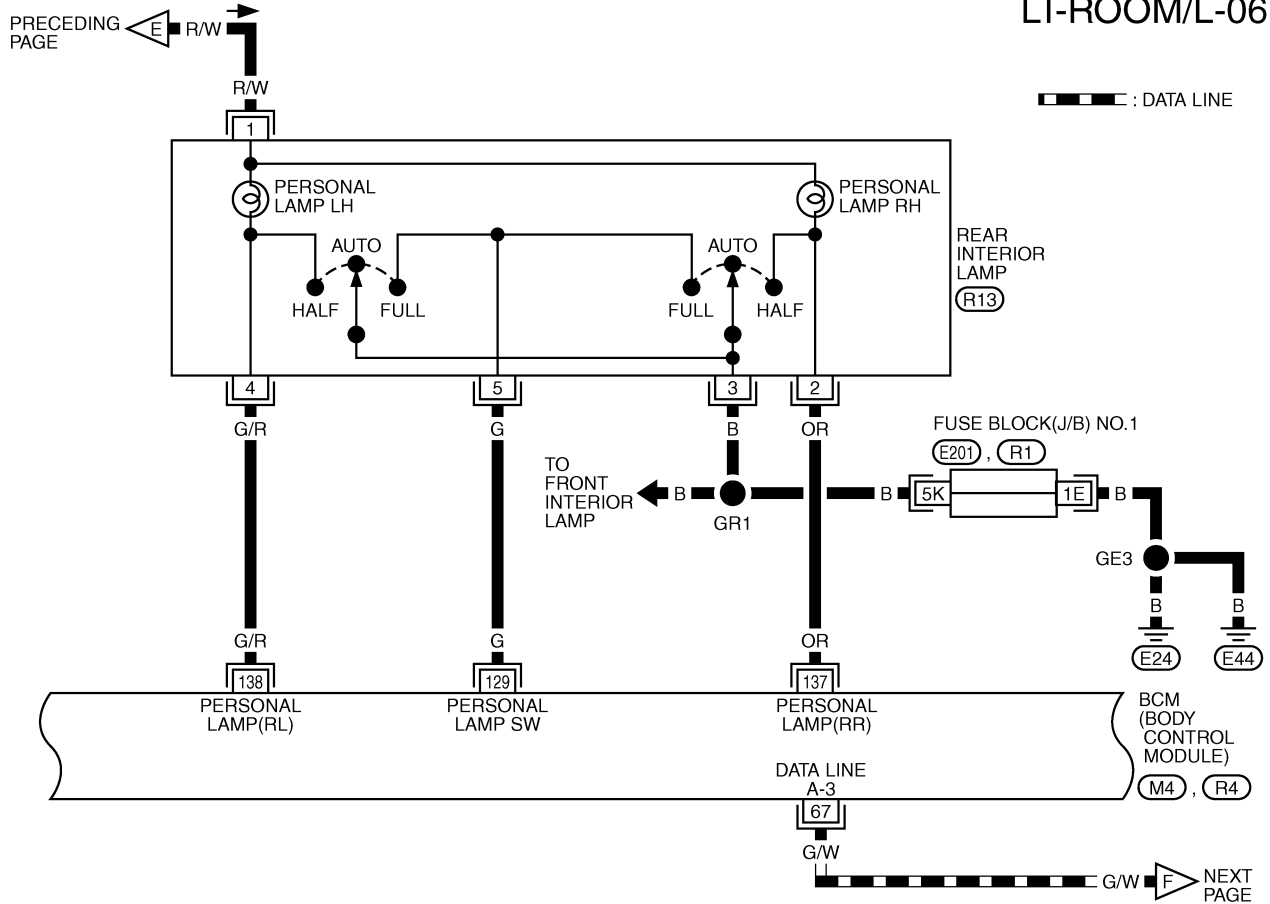


REFER TO THE FOLLOWING.  
 (E201), (R1) - FUSE BLOCK-  
 JUNCTION BOX (J/B) NO.1  
 (M4), (R4) - ELECTRICAL  
 UNITS

TKWM0051E


# INTERIOR ROOM LAMP

LT-ROOM/L-07

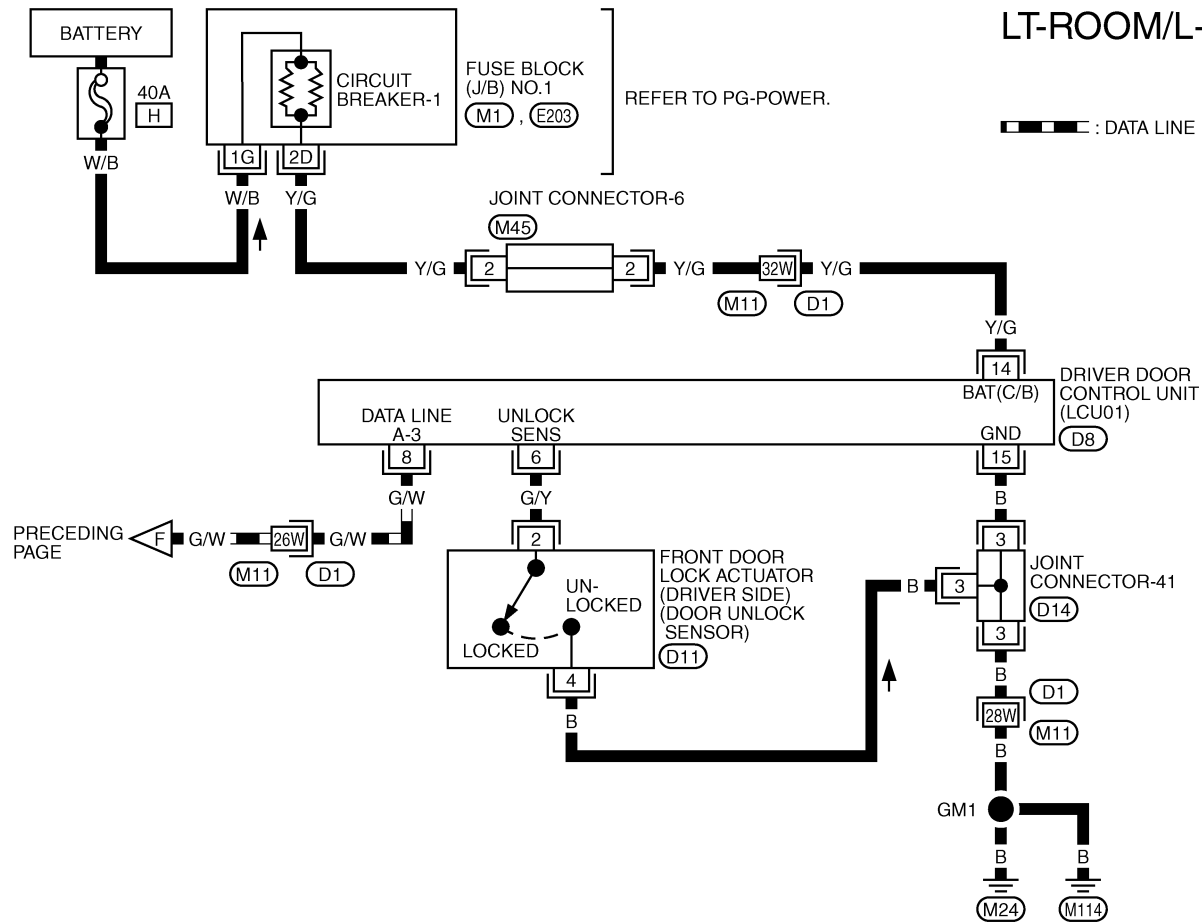

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M

LT


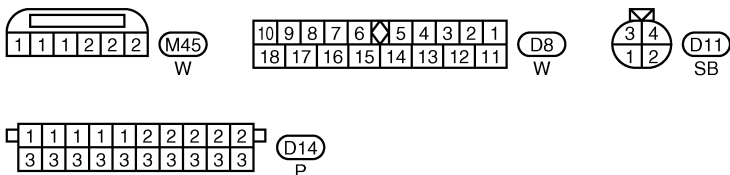


REFER TO THE FOLLOWING.  
 (D1) -SUPER MULTIPLE JUNCTION (SMJ)  
 (M1), (E203) -FUSE BLOCK-JUNCTION BOX (J/B) NO.1

TKWM0052E

# INTERIOR ROOM LAMP

LT-ROOM/L-08

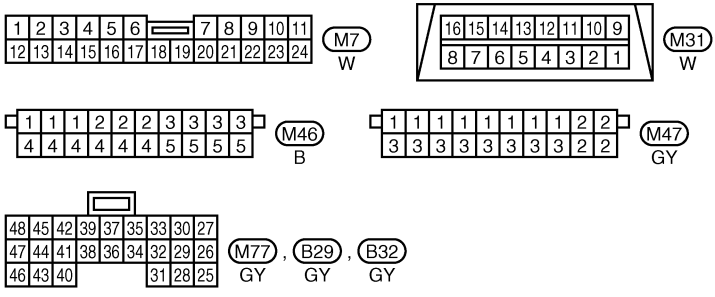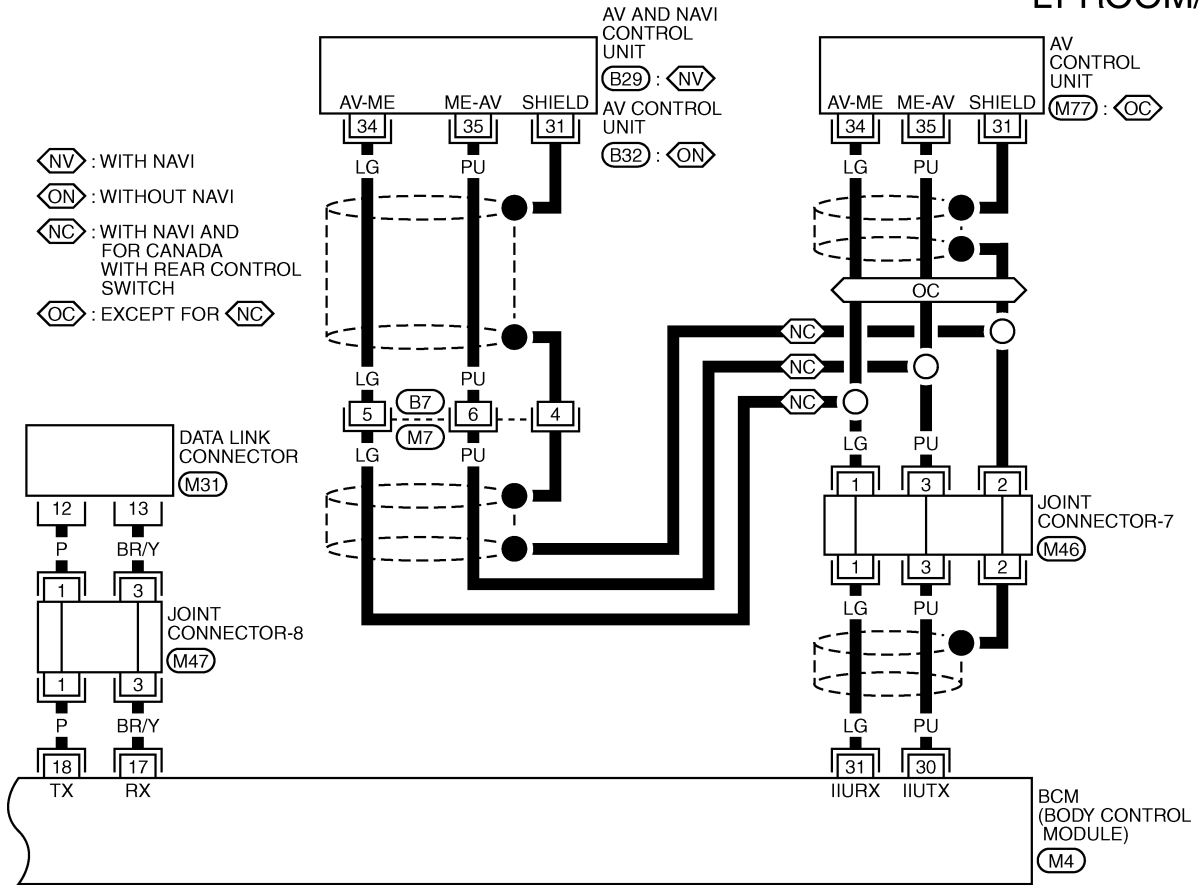

REFER TO THE FOLLOWING.  
 (M4) -ELECTRICAL UNITS

TKWM0156E

# INTERIOR ROOM LAMP

## Terminals and Reference Value for BCM

EKS00174

Terminal No.	Wire color	Signal description	Measuring condition			Voltage (Approximate values)
			Ignition switch	Operation or condition		
3	R/L	Small lamp signal	—	Lighting switch: 1st	ON	Battery voltage
					OFF	Less than 1V
11	LG/B	Tail lamp relay control signal	ON	Light switch: AUTO	Light is applied to optical sensor.	Battery voltage
					Light is not applied to optical sensor.	Less than 1V
17	BR/Y	Data link RX	—	—	—	
18	P	Data link TX	—	—	—	
30	PU	Communication signal TX (BCM-AV: Transmission)	—	—	—	
31	LG	Communication signal RX (AV-BCM: Receiving)	—	—	—	
33	W	Rear LH door switch signal	OFF	Rear LH door switch	ON (open)	Less than 1V
					OFF (closed)	Battery voltage
37	W/G	Passenger door switch signal	OFF	Passenger door switch	ON (open)	Less than 1V
					OFF (closed)	Battery voltage
56	B	Ground	—	—	—	
60	L/OR	ACC power supply	ACC	—	Battery voltage	
67	G/W	LAN communication	—	—	—	
68	W/B	Ignition power supply	ON	—	Battery voltage	
69	PU/W	Key-in detection switch signal	OFF	Key withdrawn (OFF)	Less than 1V	
				Key inserted (ON)	Battery voltage	
105	Y/L	Battery power supply	OFF	—	Battery voltage	
110	SB	Ignition switch illumination signal	OFF	Turned OFF	Battery voltage	
				Turned ON	Less than 1V	
113	B	Ground	—	—	—	
129	G	Personal lamp switch signal	OFF	Personal lamp switch	One switch ON	5V
					AUTO	5V
					Both switch ON	Less than 1V
130	W/L	Room lamp switch ON signal	OFF	Room lamp switch	ON	Less than 1V
					AUTO	5V
					OFF	5V
131	G/Y	Room lamp switch OFF signal	OFF	Room lamp switch	ON	5V
					AUTO	5V
					OFF	Less than 1V
133	Y/R	Map lamp LH signal	OFF	Turned OFF	Battery voltage	
				Dimming	8V	
				Turned ON	Less than 1V	
137	OR	Personal lamp RH signal	OFF	Turned OFF	Battery voltage	
				Dimming	8V	
				Turned ON	Less than 1V	

# INTERIOR ROOM LAMP

Terminal No.	Wire color	Signal description	Measuring condition		Voltage (Approximate values)
			Ignition switch	Operation or condition	
138	G/R	Personal lamp LH signal	OFF	Turned OFF	Battery voltage
				Dimming	8V
				Turned ON	Less than 1V
140	Y/B	Map lamp RH signal	OFF	Turned OFF	Battery voltage
				Dimming	8V
				Turned ON	Less than 1V
142	W/R	Driver door switch signal	OFF	Driver door switch	ON (open) Less than 1V OFF (closed) Battery voltage
143	W/L	Rear RH door switch signal	OFF	Rear RH door switch	ON (open) Less than 1V OFF (closed) Battery voltage

## Terminals and Reference Value for Driver Door Control Unit (LCU01)

EKS000X1

Terminal No.	Wire color	Item	Condition	Voltage (Approximate values)
6	G/Y	Door unlock sensor	OFF (Locked) → ON (unlocked)	5V → 0V
8	G/W	Data line A-3	—	—
14	Y/G	Power source (PTC)	—	Battery voltage
15	B	Ground	—	0V

## Work Flow

EKS000X1

1. Confirm the symptom or customer complaint.
2. Understand system description. Refer to [LT-80, "System Description"](#) .
3. Perform the preliminary check. Refer to [LT-94, "Preliminary Check"](#) .
4. Does the door lock system operate normally? When yes, go to step 5. When no, go to Power door lock system [BL-40, "Symptom Chart"](#) in "BODY LOCK & SECURITY SYSTEM (BL)" section.
5. Find the cause of trouble following the trouble diagnosis chart by symptom and repair or replace as necessary. Refer to [LT-99, "Symptom Chart"](#) .
6. Does the total coordinated interior illumination operate normally? When yes, go to step 7. When no, go to step 5.
7. Inspection END.

## Preliminary Check SETTING CHANGE FUNCTION

EKS000X2

- Setting for each operation can be changed using CONSULT-II and a display unit.

Item	Description	CONSULT-II (Work support)	Display unit (Setting of various vehicle conditions)	Factory setting
SET I/L LGC-D- UNLCK (CONSULT-II) Illuminate Interior When Unlocking Vehicle (display unit)	Selects ON-OFF of the interior lamp illumination at the time the driver door is unlocked.	ON	ON: Indicator ON	×
		OFF	OFF: indicator OFF	—
SET INT- L LOGIC-TIM (CONSULT-II) Interior Lights Off Delay (display unit)	Selects interior lamp timer set time in four steps.	Mode 1 (off)	OFF: Display OFF	—
		Mode 2 (15 seconds)	15 seconds: Display 15 sec.	—
		Normal (30 seconds)	30 seconds: Display 30 sec.	×
		Mode 3 (45 seconds)	45 seconds: Display 45 sec.	—

# INTERIOR ROOM LAMP

**CAUTION:**

After the setting is changed, the new setting will be maintained even if the battery is disconnected.

## INSPECTION FOR POWER AND GROUND CIRCUIT

### 1. FUSE CHECK

Check if any of the following fuses in BCM are blown.

Unit	Power source	Fuse No.
BCM	Battery power supply	3
	ACC power supply	21
	IGN power supply	1

Refer to [LT-85, "Wiring Diagram — INT/L —"](#).

**OK or NG**

- OK >> GO TO 2.
- NG >> Replace the fuse.

### 2. POWER SUPPLY CIRCUIT CHECK

Remove the connectors for the BCM and driver door LCU, or passenger, rear LH, RH door control units, measure the voltage between terminal No. (Refer to the "Chart" below) of connector and body ground.

Unit	Terminals (wire color)		Power source	condition	Voltage
	Connector	(+)      (-)			
BCM (M4)		105 (Y/L)	Battery power supply	Ignition switch OFF	Battery voltage
		68 (W/B)	Body ground	IGN power supply	Ignition switch ON
Driver door LCU (D8)		14 (Y/G)		Battery power supply	Ignition switch OFF

**OK or NG**

- OK >> GO TO 3.
- NG >> Check harness for opened short.

### 3. GROUND CIRCUIT CHECK

Check continuity between the following harness connector terminal of the BCM and driver door LCU, passenger or RH, LH door control units and body ground.

Unit	Terminal (wire color)		Signal	Ignition switch	Continuity
	Connector	(+)      (-)			
BCM (M4)		56 (B) and 113 (B)	Ground	Ignition switch OFF	Continuity should exist
Driver door LCU (D8)		15 (B)			

**OK or NG**

- OK >> Inspection END.
- NG >> Repair or replace harness.

## CONSULT-II Function

EKS000X3


- CONSULT-II has the display function for the work support, data monitor and active test for each part by combining data receiving and sending via the communication line from the BCM.

IVMS diagnosis position	Diagnosis mode	Description
Interior illumination	Work support	Changes setting of each function.
	Data monitor	Displays input data of the BCM and each LCU in real-time.
	Active test	Operation of electrical loads can be checked by sending driving signal to them.
BCM PART NUMBER		Displays BCM part No.


# INTERIOR ROOM LAMP

## CONSULT-II BASIC OPERATION PROCEDURE


1. With the ignition switch OFF, connect CONSULT-II to the data link connector, and turn the ignition switch ON.

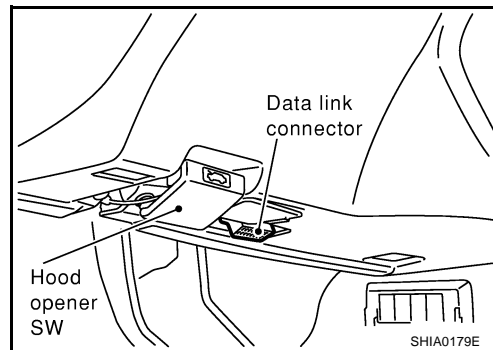


2. Touch "START".

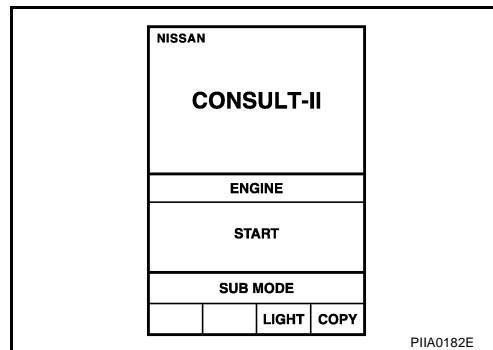

3. Touch "IVMS".

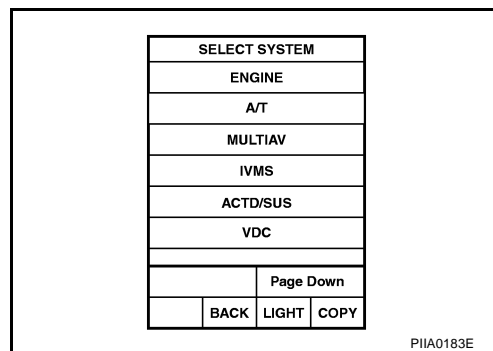

4. Check the model specification, touch either "WITH SUNROOF" or "WITHOUT SUNROOF".
5. Touch "OK". If the selection is wrong, touch "CANCEL".

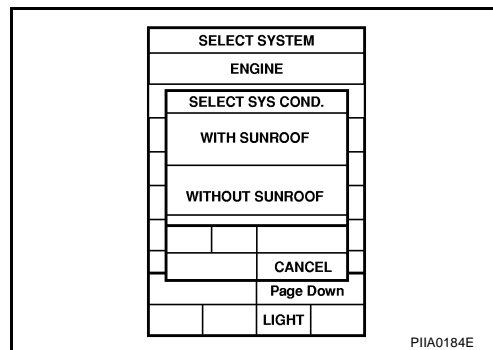

6. Select the desired part to be diagnosed on the "SELECT TEST ITEM" screen.

## WORK SUPPORT

### Operation procedure

1. Touch "INTERIOR ILLUMINATION" on the "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on the "SELECT DIAG MODE" screen.
3. Touch "SET INT-L LOGIC-TIM" or "SET I/L LGC-D-UNLCK" on the "SELECT WORK ITEM" screen.
4. Touch "START".



# INTERIOR ROOM LAMP

5. Touch "NORMAL"/"MODE 1 - 3" of which setting is to be changed (for the interior lamp logic timer setting only).
6. Touch "CHANGE SET".
7. The setting will be changed and the current setting status will be displayed.
8. Touch "END".

## Display item list

Refer to [LT-94, "SETTING CHANGE FUNCTION"](#) .

## DATA MONITOR

### Operation procedure

1. Touch "INTERIOR ILLUMINATION" on the "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on the "SELECT DIAG MODE" screen.
3. Touch "ALL SIGNALS" or "SELECTION FROM MENU" on the "DATA MONITOR" screen.

MAIN SIGNALS	Monitors the main items.
SELECTION FROM MENU	Selects and monitors the items.

4. Touch "START".
5. When selected "SELECTION FROM MENU", touch items to be monitored. When "ALL SIGNALS" is selected all items will be monitored.
6. Touch "RECORD" while monitoring and status of the item being monitored can be recorded. To stop recording, touch "STOP".

## Display item list

Monitored item ["OPERATION OR UNIT"]	Description
IGN ON SW [ON/OFF]	Displays status of the ignition switch as judged from the ignition switch signal. (Key is in ON position: ON/Key is in ACC or OFF position: OFF)
DOOR SW-DR [ON/OFF]	Displays status of the driver door as judged from the driver door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-AS [ON/OFF]	Displays "Door open (ON)/door closed (OFF)" status judged from the door switch AS signal.
DOOR SW-RR [ON/OFF]	Displays "Door open (ON)/door closed (OFF)" status judged from the door switch RR signal.
DOOR SW-RL [ON/OFF]	Displays "Door open (ON)/door closed (OFF)" status judged from the door switch RL signal.
HD/LMP 1ST SW [ON/OFF]	Displays status of the lighting switch as judged from the lighting switch signal. (OFF or AUTO position: OFF/Other than OFF and AUTO position: ON)
IGN KEY SW [ON/OFF]	Displays "Key inserted (ON)/key withdrawn (OFF)" status judged from the key remainder detection switch signal.
IGN ACC SW [ON/OFF]	Displays "Ignition ON or ACC (ON)/ignition OFF (OFF)" status judged from the ignition switch signal.
LOCK SIG-DR [LOCK/UNLK]	Displays "Door locked (LOCK)/door unlocked (UNLK)" status judged from the locking detection switch DR signal.

## ACTIVE TEST

### Operation procedure

1. Touch "INTERIOR ILLUMINATION" on the "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on the "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. Touch "STOP" while testing and the operation will be stopped.

## Display item list

Test items	Display on CONSULT-II screen	Description
Map lamp output	FR PERSONAL LAMP	Map lamp can be operated by any ON-OFF operation of lights.

# INTERIOR ROOM LAMP

Personal lamp output	RR PERSONAL LAMP	Personal lamp can be operated by any ON-OFF operation of lights.
Ignition key hole illumination output	KEY RING ILLUM	Ignition key hole illumination can be operated by any ON-OFF operation of lights.

**CAUTION:**

Active test should be conducted with the lamp switch in AUTO position.

## On Board Diagnosis

EKS000X4

ON BOARD DIAGNOSTIC RESULTS INDICATOR LAMP.

- Front map lamps and step lamps (all seats) act as the indicators for the on board diagnosis.


### DIAGNOSIS ITEM

Diagnosis item	Description
Switch monitor	Checks for malfunction in switch systems that input to BCM and each LCU.

### SWITCH MONITOR

- Perform the diagnosis on the switch system to each control unit.


#### How to perform switch monitor

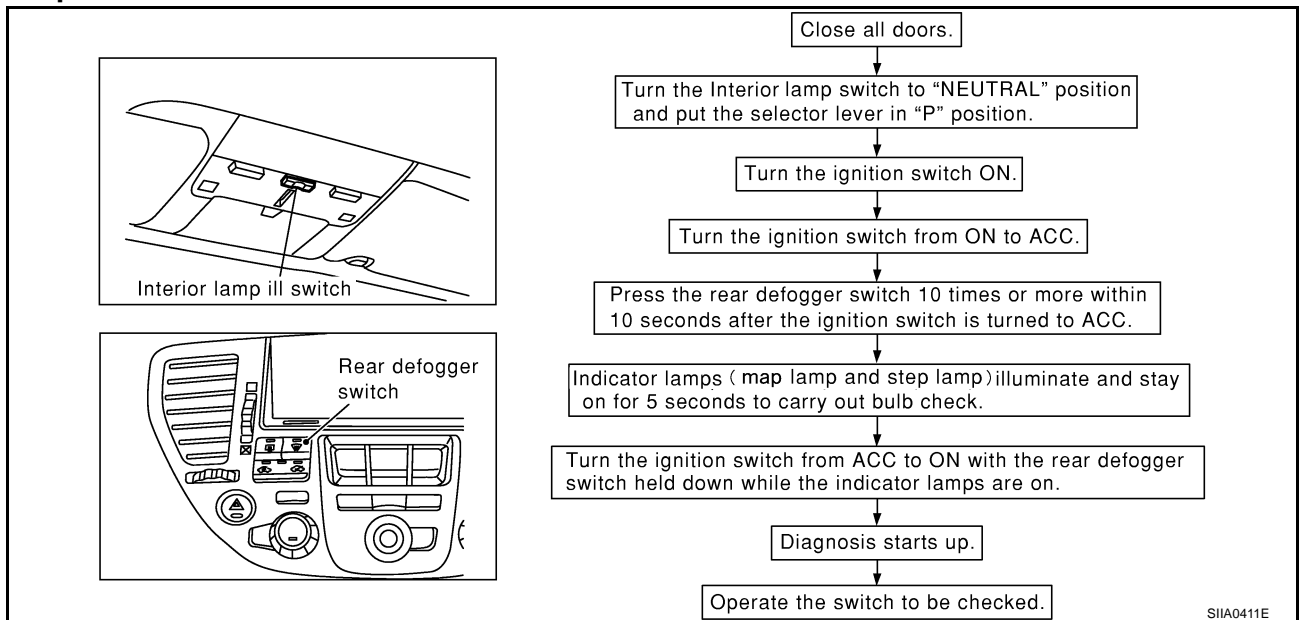

SIIA0411E

#### Description

- In this mode, when BCM detects the input signal from a switch in IVMS as shown below, the detection is indicated by the front map lamp and front step lamps with buzzer.

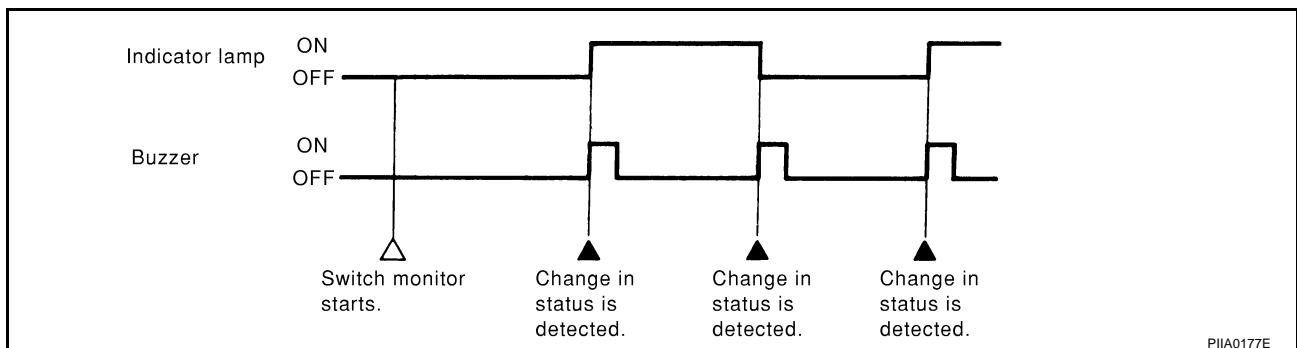

PIIA0177E

#### Switch monitor item

- The status of the switch (except the ignition switch, interior lamp ill switch, and map lamp switch) as input to each control unit can be monitored.

# INTERIOR ROOM LAMP

Control unit	Item
BCM	Lighting switch (AUTO, 1st position)
	Each door switch
Driver door LCU	Door locking detection switch

## Cancel of Switch Monitor

If the following conditions are satisfied, the communication diagnosis is cancelled.

- Turn ignition switch OFF.
- Drive the vehicle more than 7 km/h (4 MPH).

## Symptom Chart

EKS000X5

Symptom	Malfunctioning system and reference
<ul style="list-style-type: none"> <li>● Map lamp, and personal lamp will not illuminate when the interior lamp ill switch is turned ON with the personal lamp switch in AUTO position.</li> <li>● Map lamp, and personal lamp will not go out when the interior lamp ill switch is turned OFF with the personal lamp switch in AUTO position.</li> </ul>	<ul style="list-style-type: none"> <li>● Interior lamp ill switch system. Refer to <a href="#">LT-100, "Interior Lamp Ill Switch System Check"</a>.</li> </ul> <p>If above systems are normal, replace the BCM.</p>
<ul style="list-style-type: none"> <li>● Personal lamp will not illuminate when RH personal lamp switch is turned ON with LH personal lamp switch in AUTO position.</li> <li>● Personal lamp will not illuminate when LH personal lamp switch is turned ON with RH personal lamp switch in AUTO position.</li> <li>● Personal lamp switch will not go out when both RH and LH personal lamp switches are turned to AUTO position.</li> </ul>	<ul style="list-style-type: none"> <li>● Personal lamp switch system. Refer to <a href="#">LT-101, "Personal Lamp Switch System Check"</a>.</li> </ul> <p>If above system is normal, replace the BCM.</p>
<ul style="list-style-type: none"> <li>● All lamps (except step lamp) will not illuminate in the lamp illumination conditions with the interior lamp ill switch and RH and LH personal lamp switches in AUTO position.</li> <li>● All lamps (except step lamp) will not go out in the lamp off conditions with the interior lamp switch and RH and LH personal lamp switches in AUTO position.</li> </ul>	<ul style="list-style-type: none"> <li>● Interior lamp ill switch system. Refer to <a href="#">LT-100, "Interior Lamp Ill Switch System Check"</a>.</li> <li>● Door switch system. Refer to <a href="#">LT-102, "Door Switch System Check"</a>.</li> <li>● Key-in detection switch system. Refer to <a href="#">LT-104, "Key-in Detection Switch System Check"</a>.</li> </ul> <p>If above system is normal, replace the BCM.</p>
<ul style="list-style-type: none"> <li>● Timer function will not operate when the timer operation conditions are satisfied.</li> <li>● Lamps illuminate fully in half illumination conditions.</li> </ul>	<ul style="list-style-type: none"> <li>● Door switch system. Refer to <a href="#">LT-102, "Door Switch System Check"</a>.</li> <li>● Key-in detection switch system. Refer to <a href="#">LT-104, "Key-in Detection Switch System Check"</a>.</li> </ul> <p>If above systems are normal, replace the BCM. ☆</p>
Dimming function will not operate when turning the lamp off.	Replace the BCM. ☆

☆: When BCM input/output signal are normal.


# INTERIOR ROOM LAMP

EKS000X6

## Interior Lamp Ill Switch System Check

### 1. CHECK INTERIOR LAMP ILL SWITCH SIGNAL

1. Turn the ignition switch OFF.
2. Disconnect the BCM connector.
3. Check continuity between BCM harness connector R4 terminal 130(W/L), 131(G/Y) and body ground while operating the interior lamp ill switch.

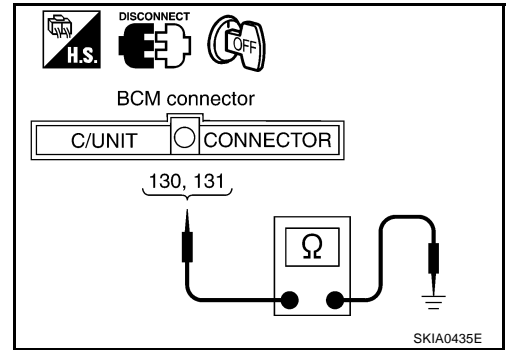


		Terminals		Condition	Continuity
		(+)	(-)		
Con- nector	Terminal	Termi- nal			
R4	130(W/L)	Body ground	Interior lamp ill switch ON	Yes	
			Interior lamp ill switch OFF and AUTO	No	
	131(G/Y)	Body ground	Interior lamp ill switch ON	Yes	
			Interior lamp ill switch OFF and AUTO	No	

OK or NG

- OK >> Interior lamp ill switch is OK.  
 NG >> GO TO 2.

### 2. CHECK WIRE HARNESS CONTINUITY

1. Disconnect the front interior lamp connector.
2. Check continuity at the harness between BCM harness connector R4 terminals 130(W/L), 131(G/Y) and front interior lamp harness connector R6 terminals 6(W/L), 7(G/Y).
3. Check continuity between BCM harness connector R4 terminals 130(W/L), 131(G/Y) and body ground.

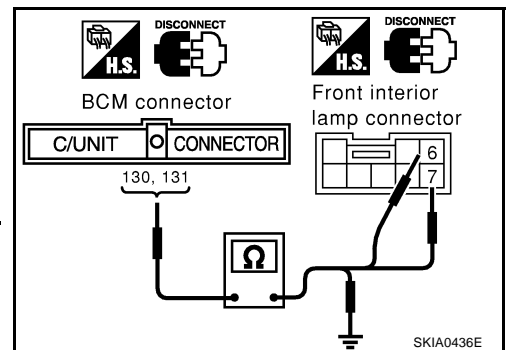

		Terminals		Continuity
		(+)	(-)	
Connector	Terminal	Connector	Terminal	
R4	130(W/L)	R6	6(W/L)	Yes
	131(G/Y)	R6	7(G/Y)	Yes
	130(W/L)	Body ground		No
	131(G/Y)	Body ground		

OK or NG

- OK >> GO TO 3.  
 NG >> Repair or replace harness.

# INTERIOR ROOM LAMP


## 3. CHECK GROUND CIRCUIT

Check continuity between the front interior lamp harness connector R6 terminal 3(B) and body ground.

**3(B) - Body ground : Continuity should exist.**

OK or NG

- OK >> Check interior lamp ill switch.
- NG >> Repair or replace harness.

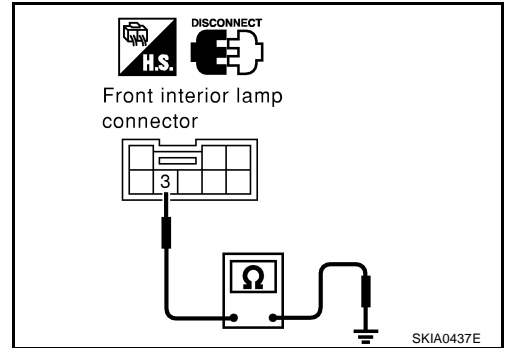


## Personal Lamp Switch System Check

### 1. CHECK PERSONAL LAMP SWITCH SIGNAL

1. Turn the ignition switch OFF.
2. Disconnect the BCM connector.
3. Check continuity between BCM harness connector R4 terminal 129(G) and body ground while operating the personal lamp switch.

**RH and LH personal lamp switches in HALF or AUTO position : Continuity should not exist.**

**RH or LH personal lamp switch in FULL position : Continuity should exist.**

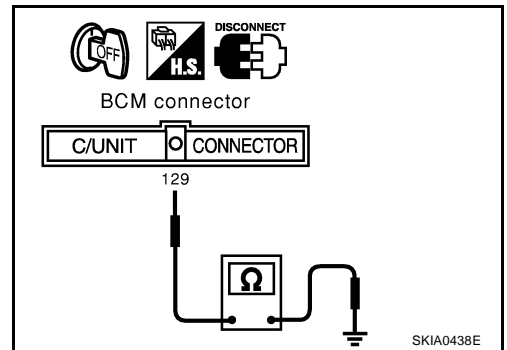

OK or NG

- OK >> Personal lamp switch is OK.
- NG >> GO TO 2.

### 2. CHECK WIRE HARNESS CONTINUITY


1. Disconnect the rear interior lamp connector.
2. Check continuity between BCM harness connector R4 terminal 129(G) and the rear interior lamp harness connector R13 terminal 5(G) while operating the personal lamp switch.
3. Check continuity between BCM harness connector R4 terminal 129(G) and body ground.

**129(G) - 5(G) : Continuity should exist.**

**129(G) - Body ground : Continuity should not exist.**

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace harness.

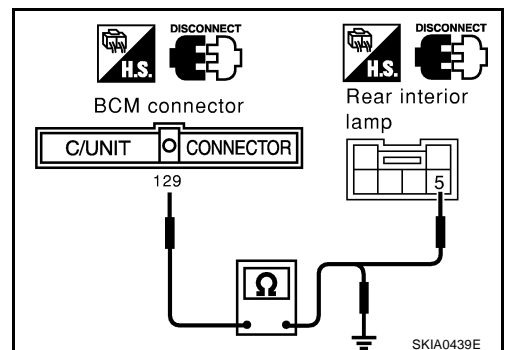

# INTERIOR ROOM LAMP


## 3. CHECK GROUND CIRCUIT

Check continuity between the rear interior lamp harness connector R13 terminal 3(B) and body ground.

**3(B) - Body ground : Continuity should exist.**

OK or NG

- OK >> Check personal lamp switch.
- NG >> Repair or replace harness.

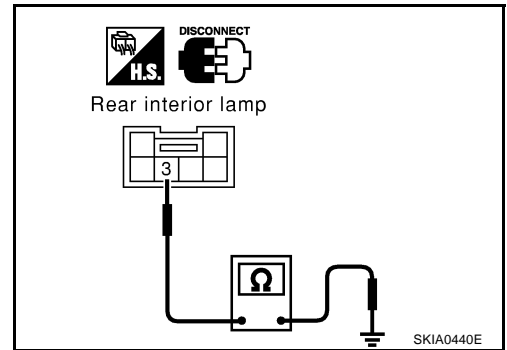

## Door Switch System Check

### 1. CHECK DOOR SWITCH SIGNAL

 With CONSULT-II

- Operate each door via “DOOR SW” on DATA MONITOR screen and check that the switch turns on and off as commanded.

DATA MONITOR	
MONITOR	
DOOR SW-DR	OFF
DOOR SW-AS	OFF
DOOR SW-RR	OFF
DOOR SW-RL	OFF
RECORD	

SKIA0441E

 Without CONSULT-II

- Operate each door and via “switch monitor” of the self-diagnosis function and check that the switch turns on and off as commanded.

OK or NG


- OK >> Door switch is OK.
- NG >> GO TO 2.

# INTERIOR ROOM LAMP

## 2. CHECK FRONT DOOR SWITCH HARNESS CONTINUITY

1. Disconnect connectors of the BCM and front door switch.
2. Check continuity between BCM harness connector M4, B4 terminals 37(W/G), 142(W/R) and the door switches harness connectors B20, B220 terminal 1(LH:W/R, RH:W/G).
3. Check continuity between BCM harness connector M4, B4 terminals 37(W/G), 142(W/R) and body ground.

Terminals				Continuity
(+)		(-)		
Connector	Terminal	Connector	Terminal	
B4	142(W/R)	B20	1(W/R)	Yes
M4	37(W/G)	B220	1(W/G)	
B4	142(W/R)	Body ground		No
M4	37(W/G)			

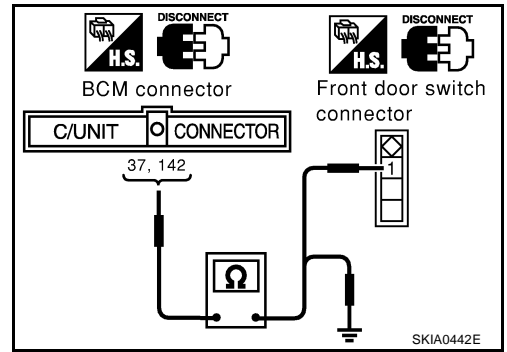


OK or NG

- OK >> GO TO 3.  
 NG >> Repair or replace harness.

## 3. CHECK REAR DOOR SWITCH HARNESS CONTINUITY

1. Disconnect connectors of rear door switch.
2. Check continuity at the harnesses between BCM harness connector M4, B4 terminals 33(W), 143(W/L) and the door switches harness connectors D62, D82 terminal 1(W).
3. Check continuity between BCM harness connector M4, B4 terminals 33(W), 143(W/L) and body ground.

Terminals				Continuity
(+)		(-)		
Connector	Terminal	Connector	Terminal	
M4	33(W)	D62	1(W)	Yes
B4	143(W/L)	D82	1(W)	Yes
M4	33(W)	Body ground		No
B4	143(W/L)			

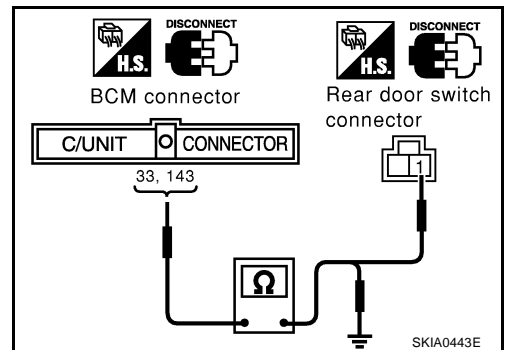

OK or NG

- OK >> GO TO 4.  
 NG >> Repair or replace harness.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# INTERIOR ROOM LAMP


## 4. CHECK DOOR SWITCH

Check continuity between door switch connector B20, B220 terminal 1 (W/R, W/G) and body ground, and between the rear door switch connector D62, D82 terminals 1(W) and 2(B) while turning the door switches ON (open) and OFF (closed).

Con- nector	Terminals		Condition	Continuity
	(+) Terminal	(-) Termi- nal		
B20	1(W/R)	Body ground	ON (Open)	Yes
B220	1(W/G)		OFF (Closed)	No
D62	1(W)	2(B)	ON (Open)	Yes
D82			OFF (Closed)	No

OK or NG

- OK >> Check door switch ground circuit or door switch ground condition.  
 NG >> Replace door switch.

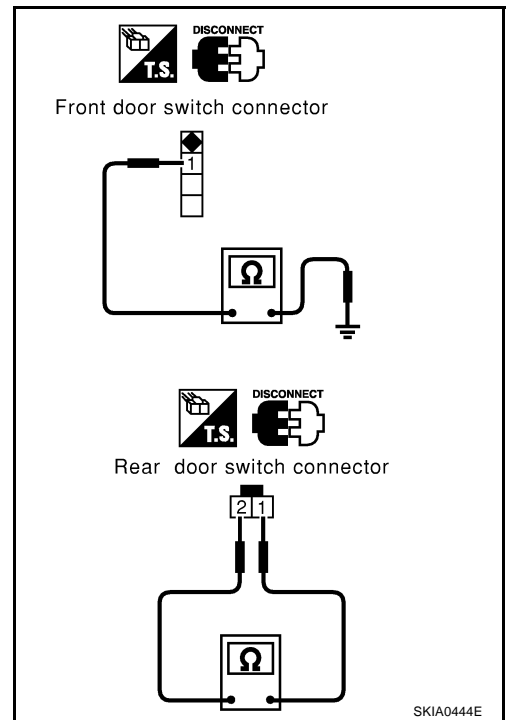


## Key-in Detection Switch System Check

### 1. CHECK KEY-IN DETECTION SWITCH SIGNAL

With CONSULT-II

- Insert and withdrawn the key via "IGN KEY SW" on DATA MONITOR screen and check that the switch turns on and off accordingly.

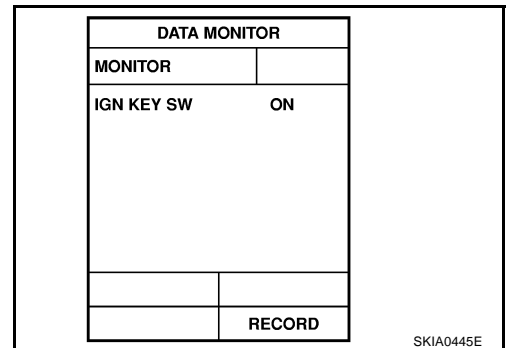


Without CONSULT-II

- Check voltage between BCM connector M4 terminal 69(PU/W) and body ground while inserting and withdrawn the key.

**Key withdrawn (switch OFF) : approx. 0V**  
**Key inserted (switch ON) : approx. 12V**

OK or NG

- OK >> Key-in detection switch is OK.  
 NG >> GO TO 2.

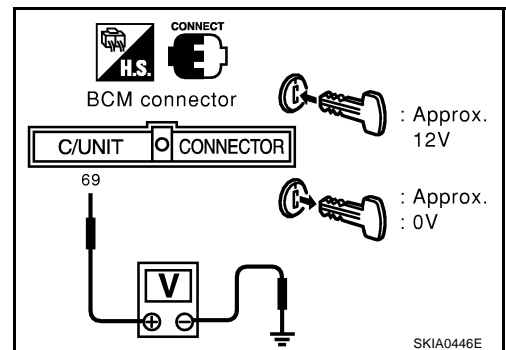



# INTERIOR ROOM LAMP

## 2. CHECK HARNESS CONTINUITY

1. Disconnect the BCM connector.
2. Check continuity at the harness between BCM harness connector M4 terminal 69(PU/W) and the key-in detection switch harness connector M64 terminal 4(PU/W).
3. Check continuity between BCM harness connector M4 terminal 69(PU/W) and body ground.


**69(PU/W) - 4(PU/W) : Continuity should exist.**

**69(PU/W) - Body ground : Continuity should not exist.**

OK or NG

OK >> GO TO 3.

NG >> Repair or replace harness.

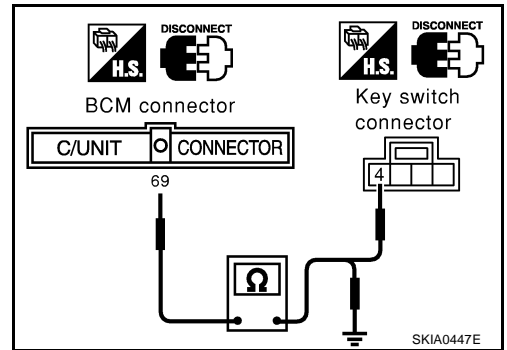

## 3. CHECK KEY-IN DETECTION SWITCH

1. Disconnect the key-in detection switch connector.
2. Check continuity between the key-in detection switch harness connector M64 terminals 3(LG) and 4(PU/W) while inserting and withdrawing the ignition key.


**Key withdrawn (switch OFF) : Continuity should not exist.**

**Key inserted (switch ON) : Continuity should exist.**

OK or NG?

OK >> GO TO 4.

NG >> Replace the key-in detection switch.

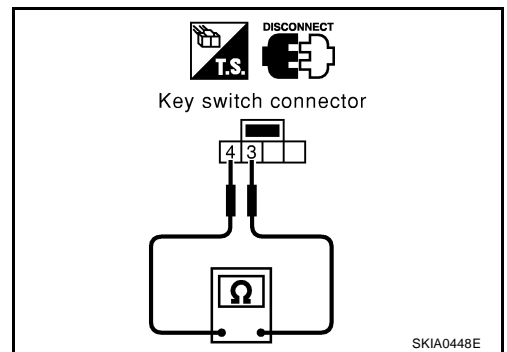

## 4. CHECK POWER SUPPLY CIRCUIT


Check voltage between the key-in detection switch harness connector M64 terminal 3(LG) and body ground.

**3(LG) - Body ground : Battery voltage should exist.**

OK or NG

OK >> Key-in detection switch is OK.

NG >> Check harness for open and short between key-in detection switch power circuit.

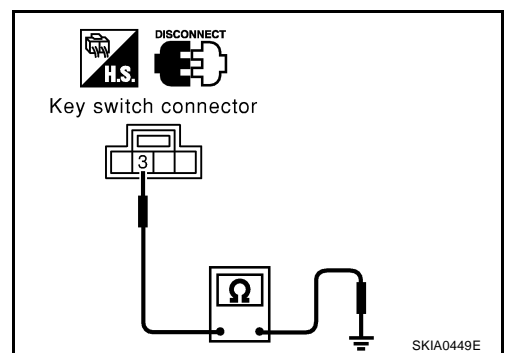


## Bulb Replacement MAP LAMP AND CONSOLE LAMP

### Map Lamp

1. Remove the finisher using a clip driver or a suitable tool.
2. Insert a thin screwdriver in the notch and remove the lens.
3. Remove the screw and remove the shade.
4. Remove the bulb.

**Map lamp : 12V 8W**

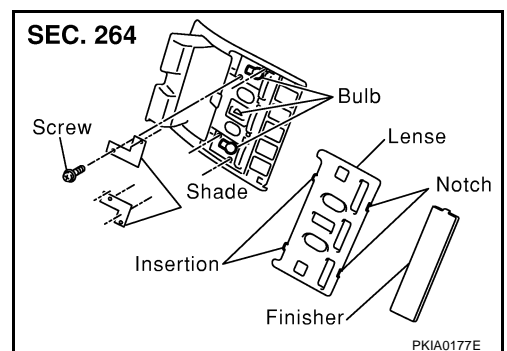

# INTERIOR ROOM LAMP

## Console Lamp


1. Remove the front interior lamp.
2. Turn the console lamp bulb socket counterclockwise and unlock it.

**Console lamp : 12V 1.4W**

## PERSONAL LAMP


1. Remove the rear interior lamp. Refer to [LT-106, "REAR INTERIOR LAMP"](#) in "Removal and Installation".
2. Unfold the tabs and remove the lens.
3. Remove the shade mounting screw and remove the shade from the personal lamp.
4. Remove the bulb.

**Personal lamp : 12V 8W**

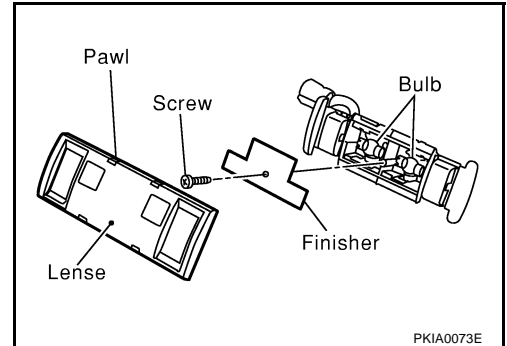


## Removal and Installation FRONT INTERIOR LAMP

1. Open the front interior lamp box and remove the screw.
2. Insert a clip driver or a suitable tool and disengage the metal clip fittings of the front interior lamp.
3. Disconnect the connector and remove the front interior lamp.

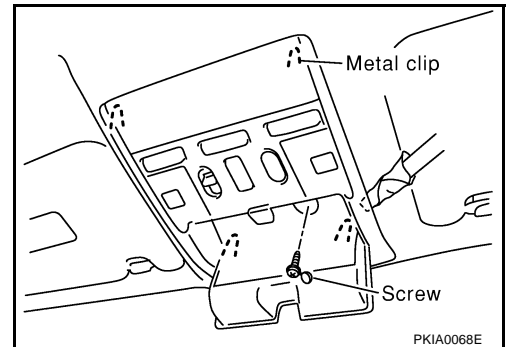

## REAR INTERIOR LAMP


1. Using a clip driver or a suitable tool, press and remove the metal clip of the rear interior lamp.
2. Disconnect the rear interior lamp connector.

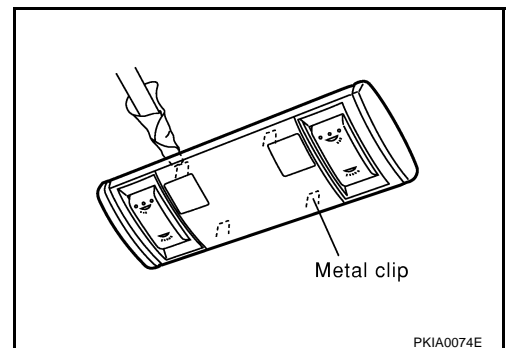

## IGNITION KEY HOLE ILLUMINATION

1. Remove the lower instrument panel (driver side). Refer to [IP-10, "Removal and Installation"](#) in "INSTRUMENT PANEL (IP)" section.
2. Turn the bulb socket counterclockwise and unlock it.

**Ignition key hole illumination : 12V 1.4W**

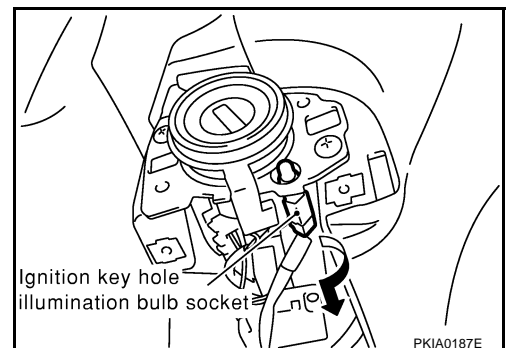


# STEP LAMP

PPF:26420

EKS000ZR

## STEP LAMP

### Component Parts and Harness Connector Location

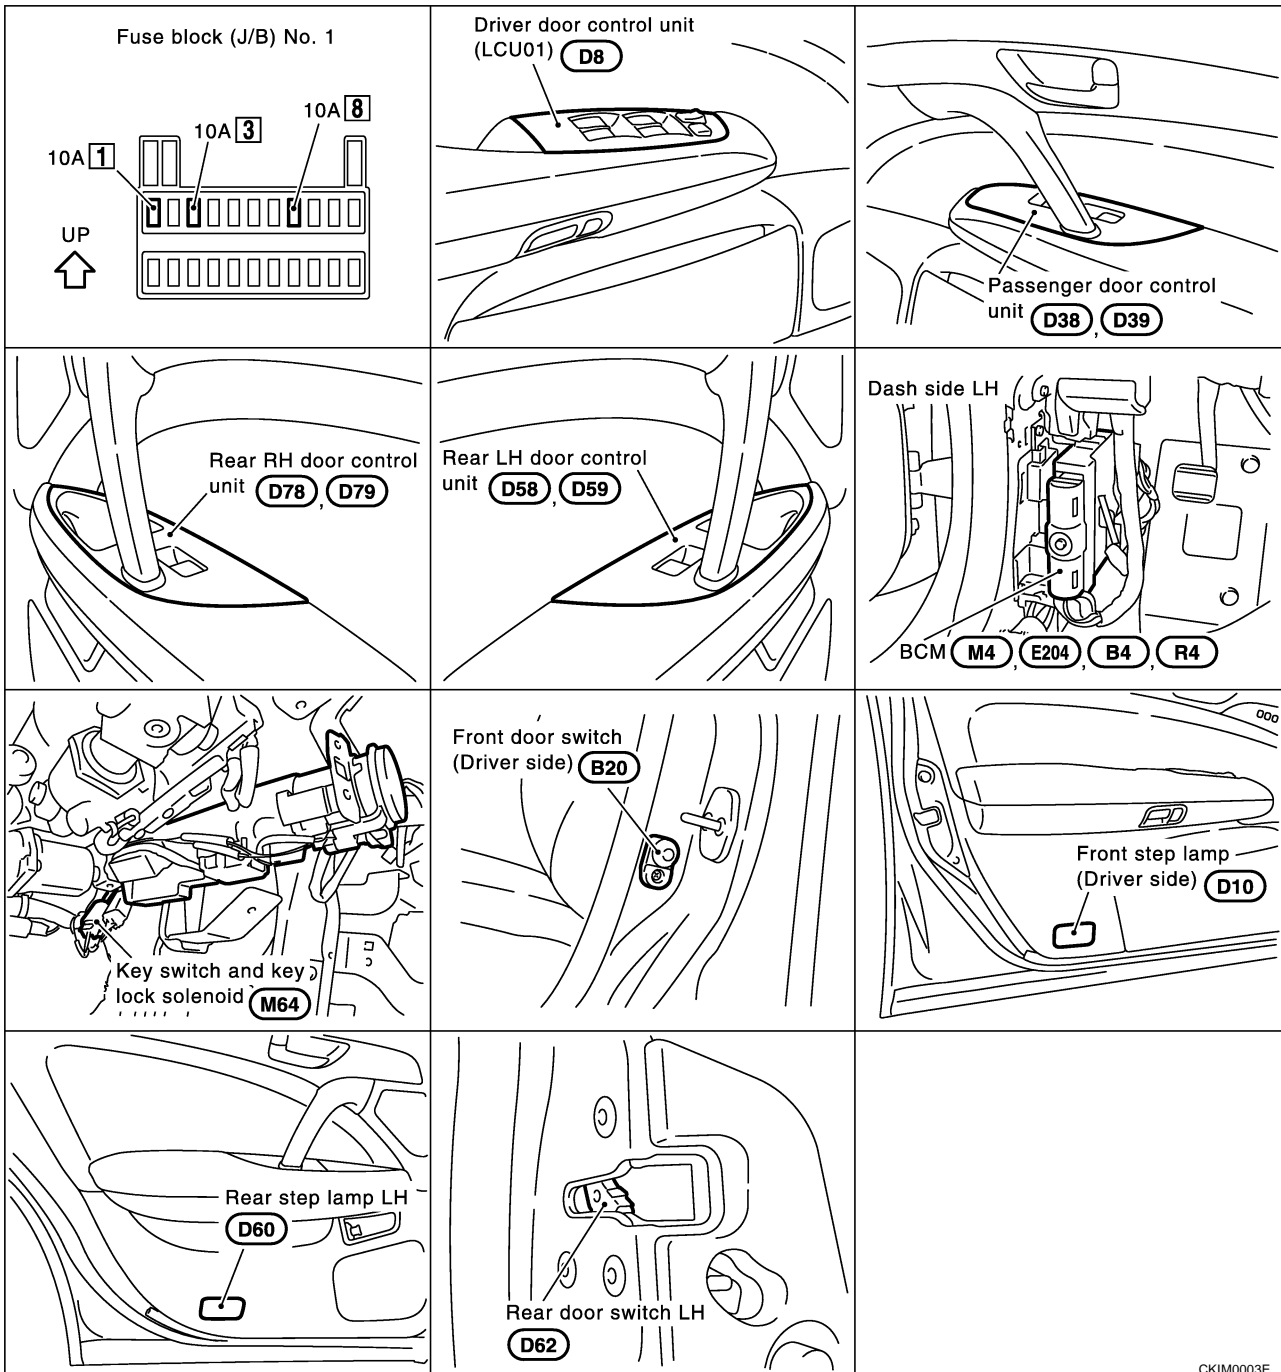

CKIM0003E

### System Description POWER SUPPLY AND GROUND

EKS0017S

Power is supplied at all times

- to BCM terminal 105
- through 10A fuse [No. 3, located in the fuse block (J/B) NO.1], and
- to all step lamps terminal 1
- through 10A fuse [No.8, located in the fuse block (J/B) NO.1].

Ground is supplied to terminal 15 of driver door control unit through body grounds M24 and M114.

Ground is supplied to terminal 7 of passenger door control unit through body grounds M24 and M114.

Ground is also supplied to terminal 7 of rear LH door control unit and rear RH door control unit through body grounds B17 and B57 or B217 and B256.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# STEP LAMP

---

## OPERATING PROCEDURE

BCM is connected to driver door control unit as DATA LINE A-3.

Then driver door control unit is connected to each door control unit.

When any door switch is in OPEN position, ground is supplied


- to BCM terminal 33, 37, 142, or 143
- through driver side, passenger side, rear LH or RH door switch.

Then BCM sends a signal to the driver door control unit (LCU 01) to turn on step lamp. With ground supplied, step lamp turns on.

# STEP LAMP

## Schematic

EKS000V9

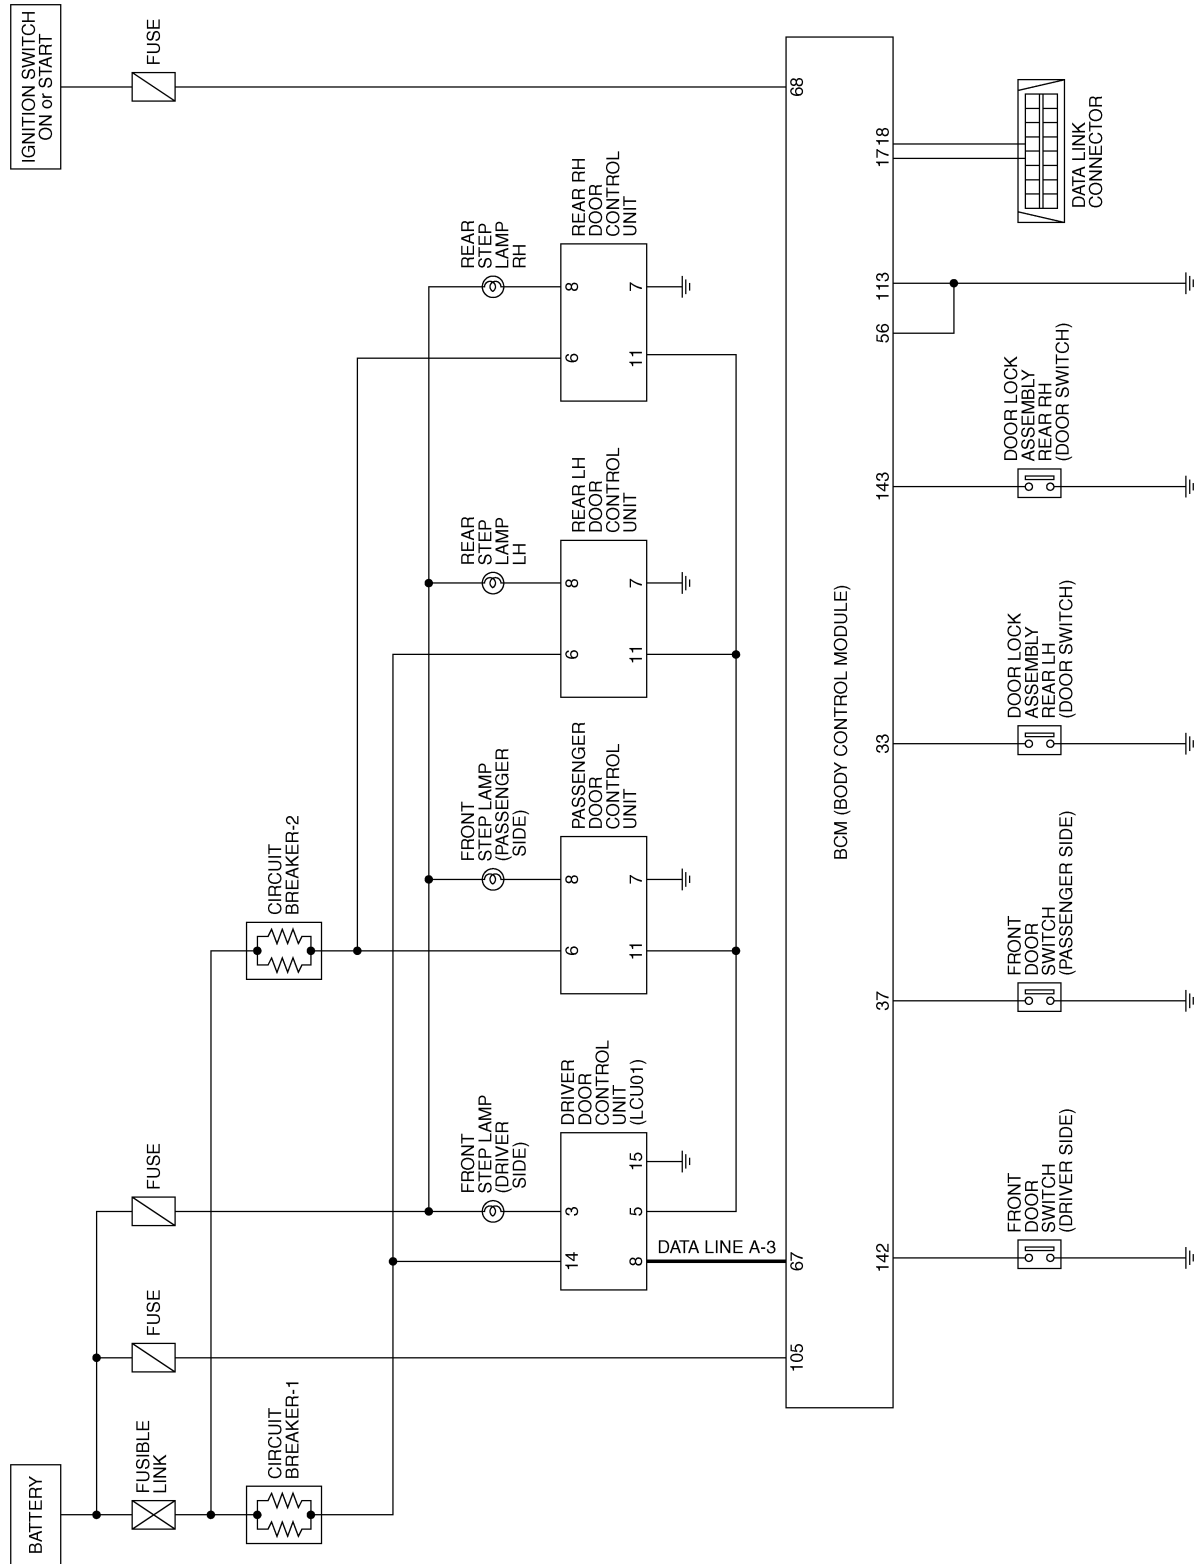

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M






TKWM0205E

# STEP LAMP

EKS000VA

## Wiring Diagram — STEP/L —

LT-STEP/L-01

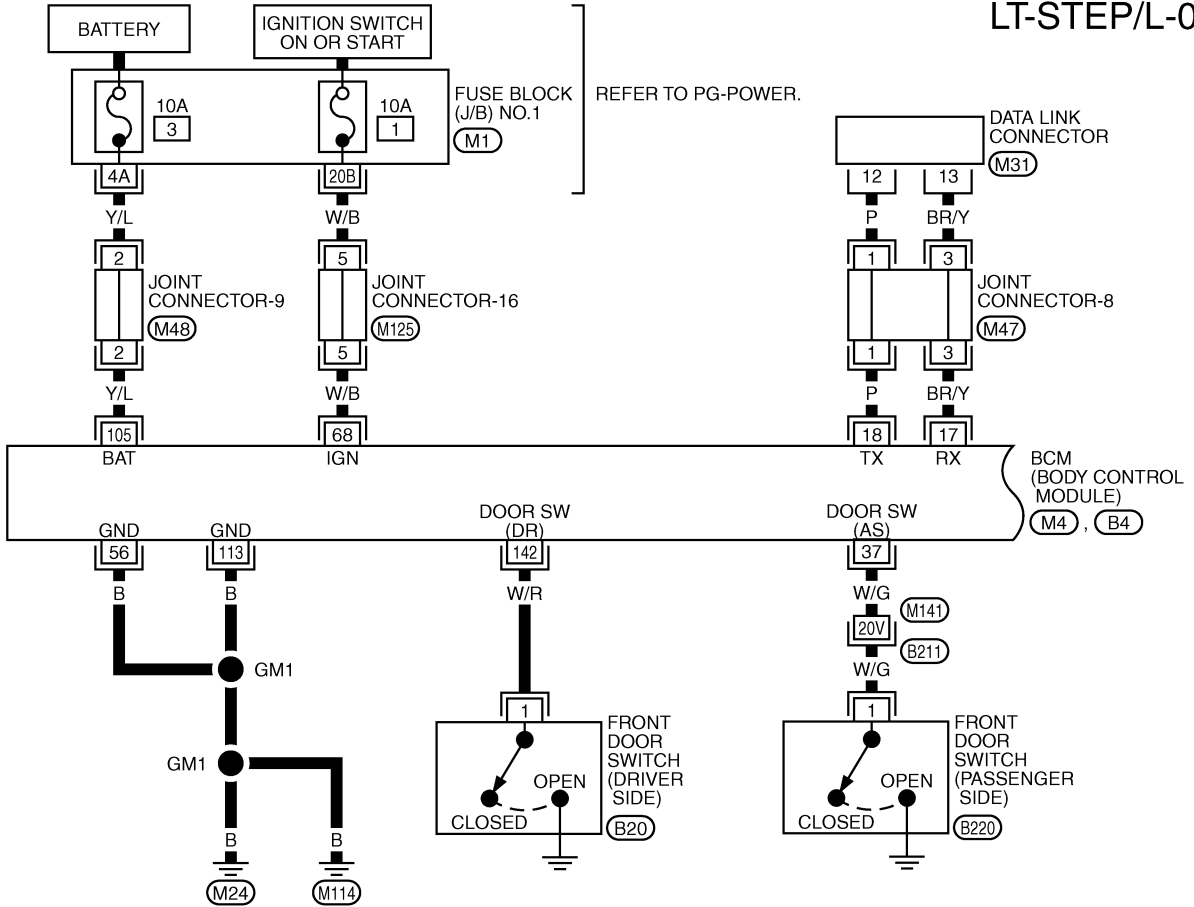



REFER TO THE FOLLOWING.

- (B21) -SUPER MULTIPLE JUNCTION (SMJ)
- (M1) -FUSE BLOCK-JUNCTION BOX (J/B) NO.1
- (M4) , (B4) -ELECTRICAL UNITS

TKWM0206E

# STEP LAMP

LT-STEP/L-02

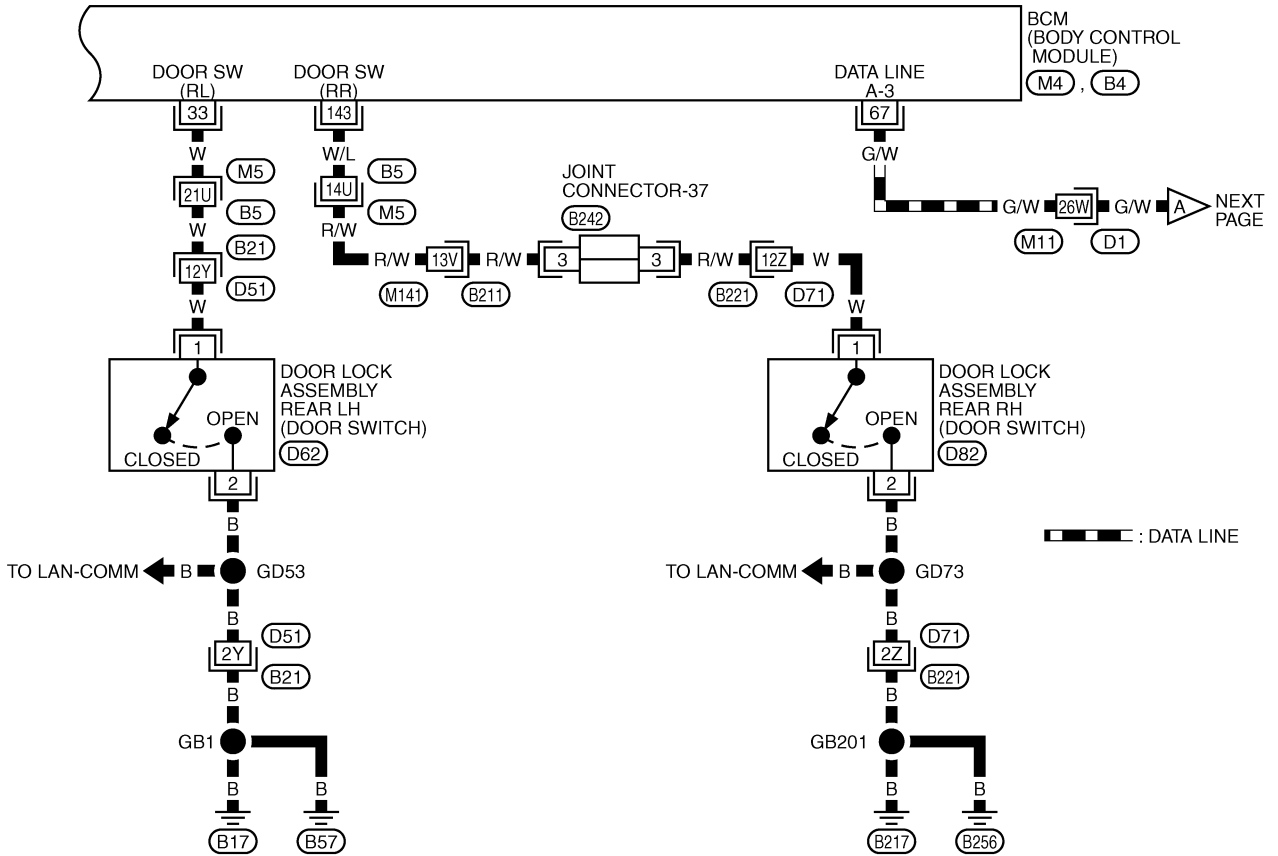



REFER TO THE FOLLOWING.  
 (M5), (B21), (B211), (B221),  
 (D1) -SUPER MULTIPLE  
 JUNCTION (SMJ)  
 (M4), (B4) -ELECTRICAL  
 UNITS

TKWM0055E

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# STEP LAMP



LT-STEP/L-03

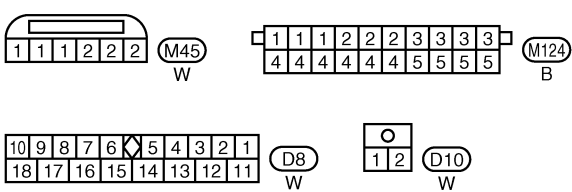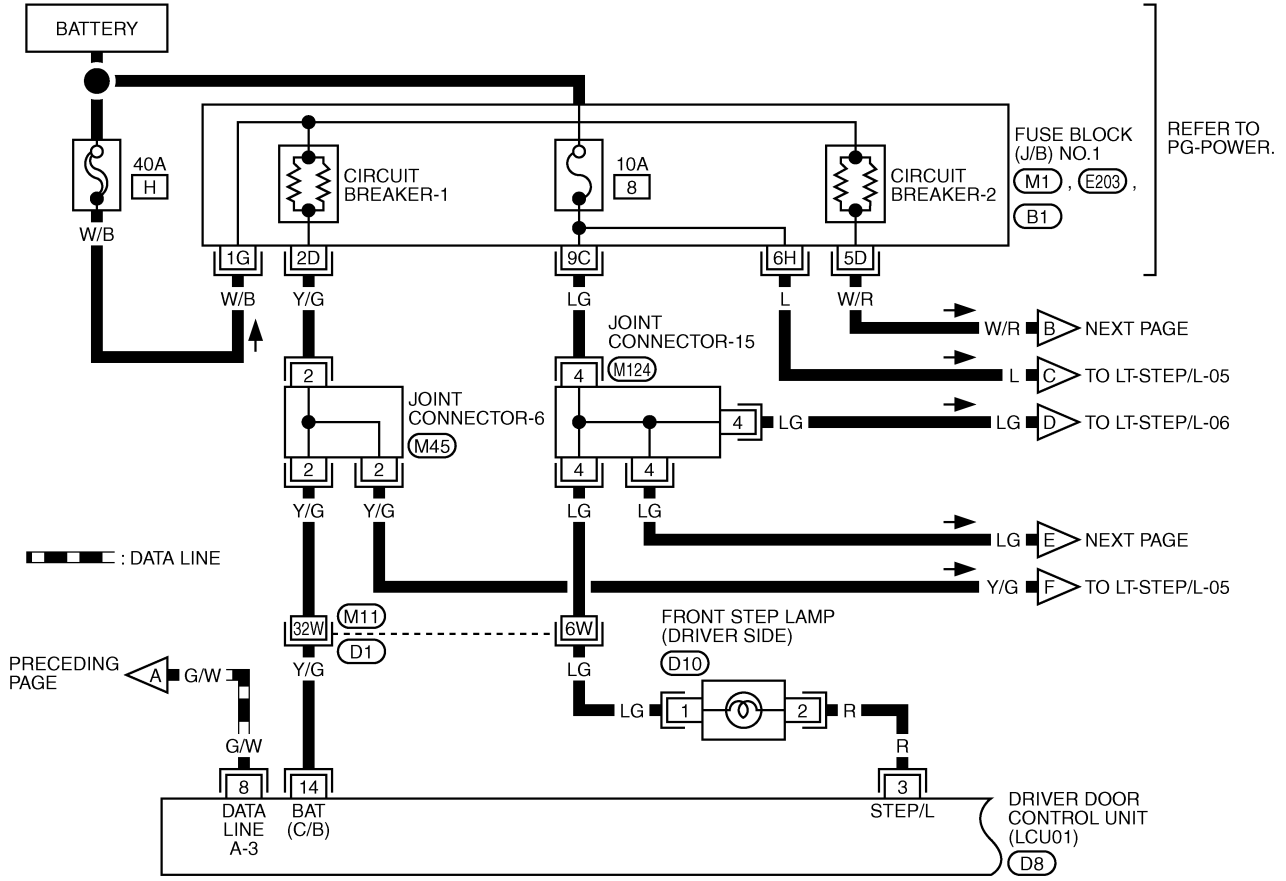



# STEP LAMP

LT-STEP/L-04

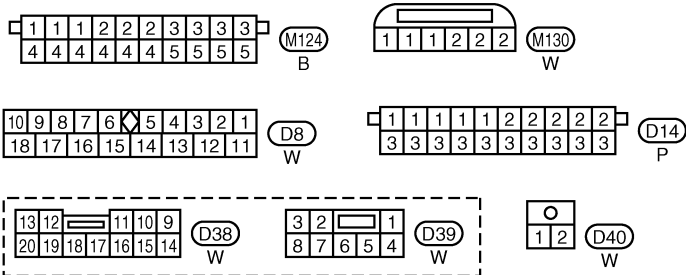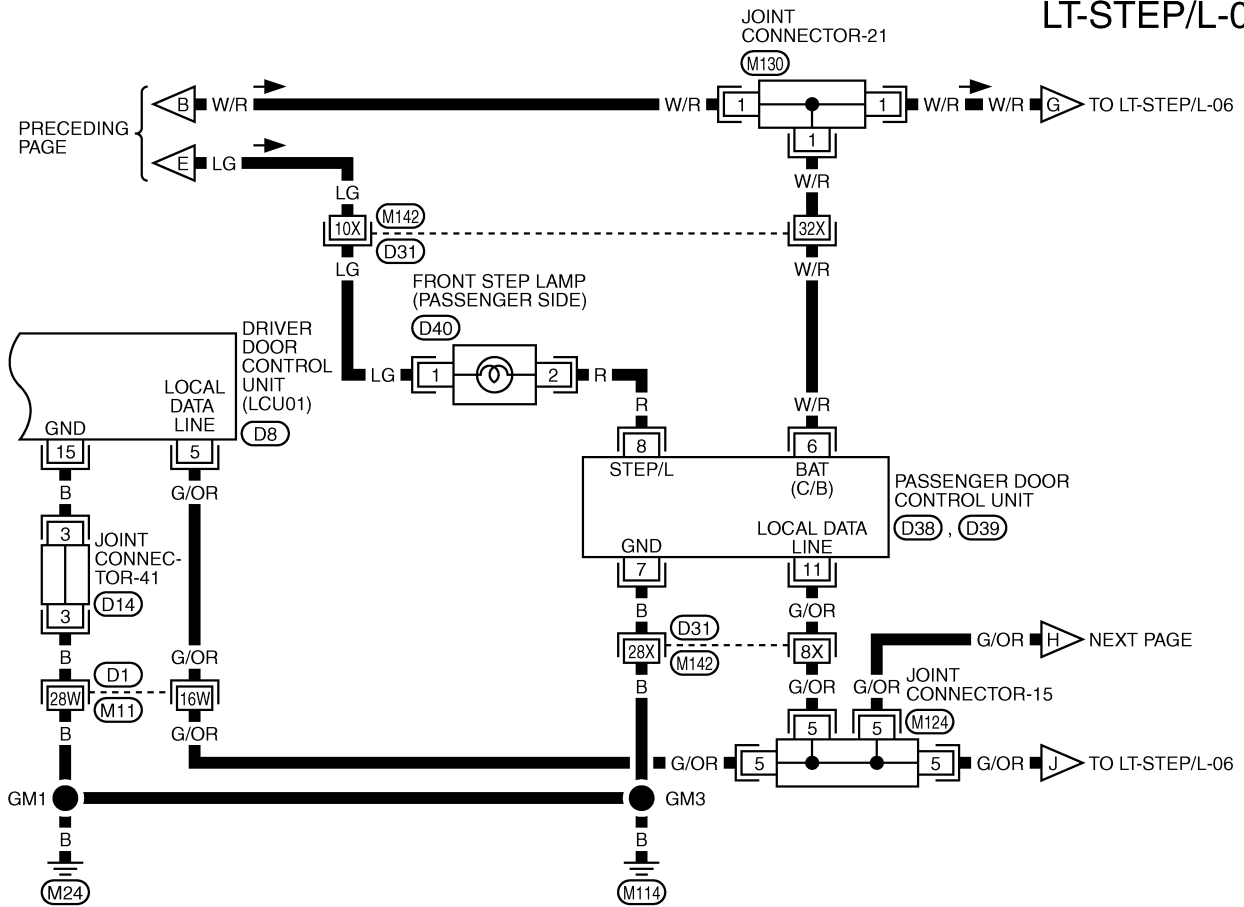

REFER TO THE FOLLOWING.




(D1), (D31) -SUPER MULTIPLE JUNCTION (SMJ)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M

LT

# STEP LAMP

LT-STEP/L-05

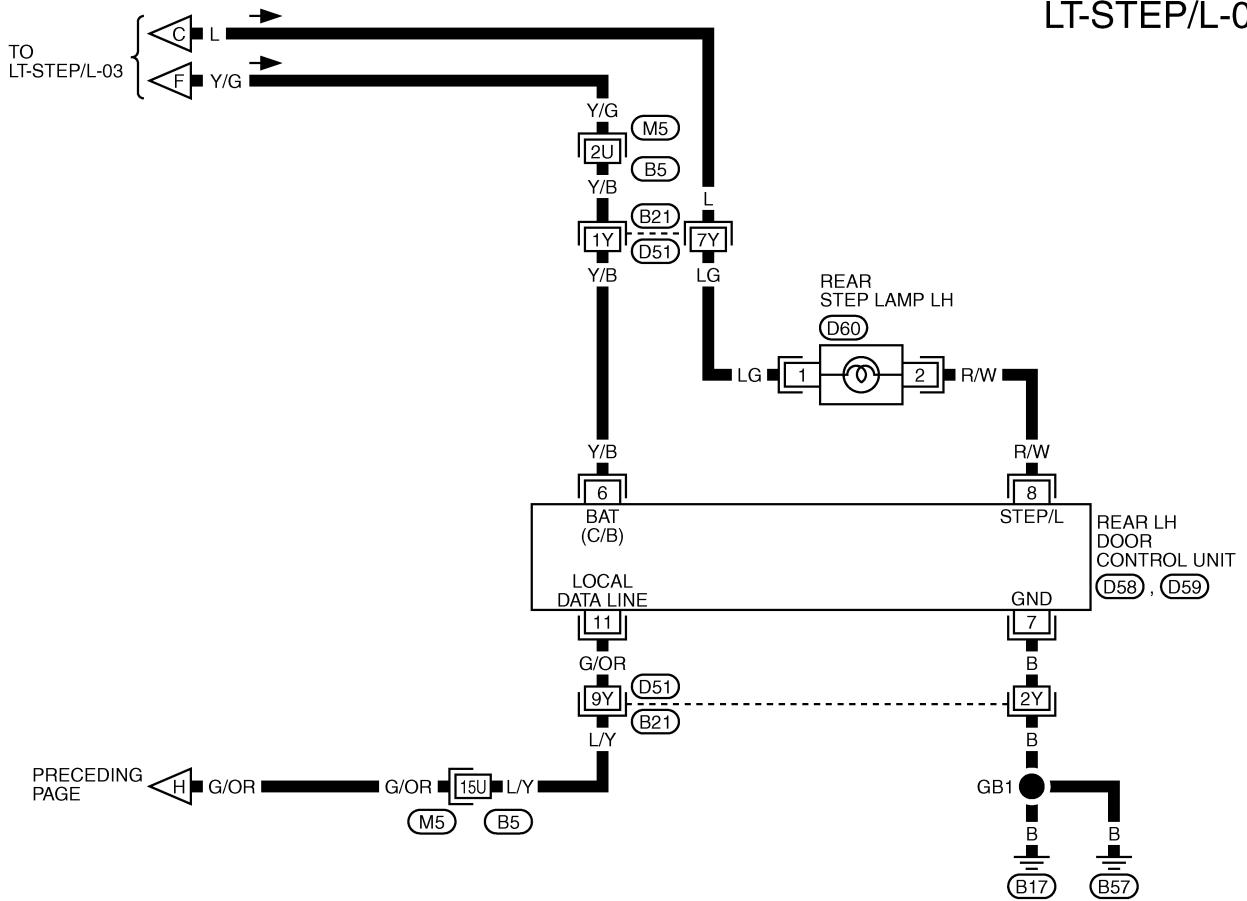



REFER TO THE FOLLOWING.

(M5), (B21) -SUPER MULTIPLE JUNCTION (SMJ)

TKWM0058E

# STEP LAMP

LT-STEP/L-06

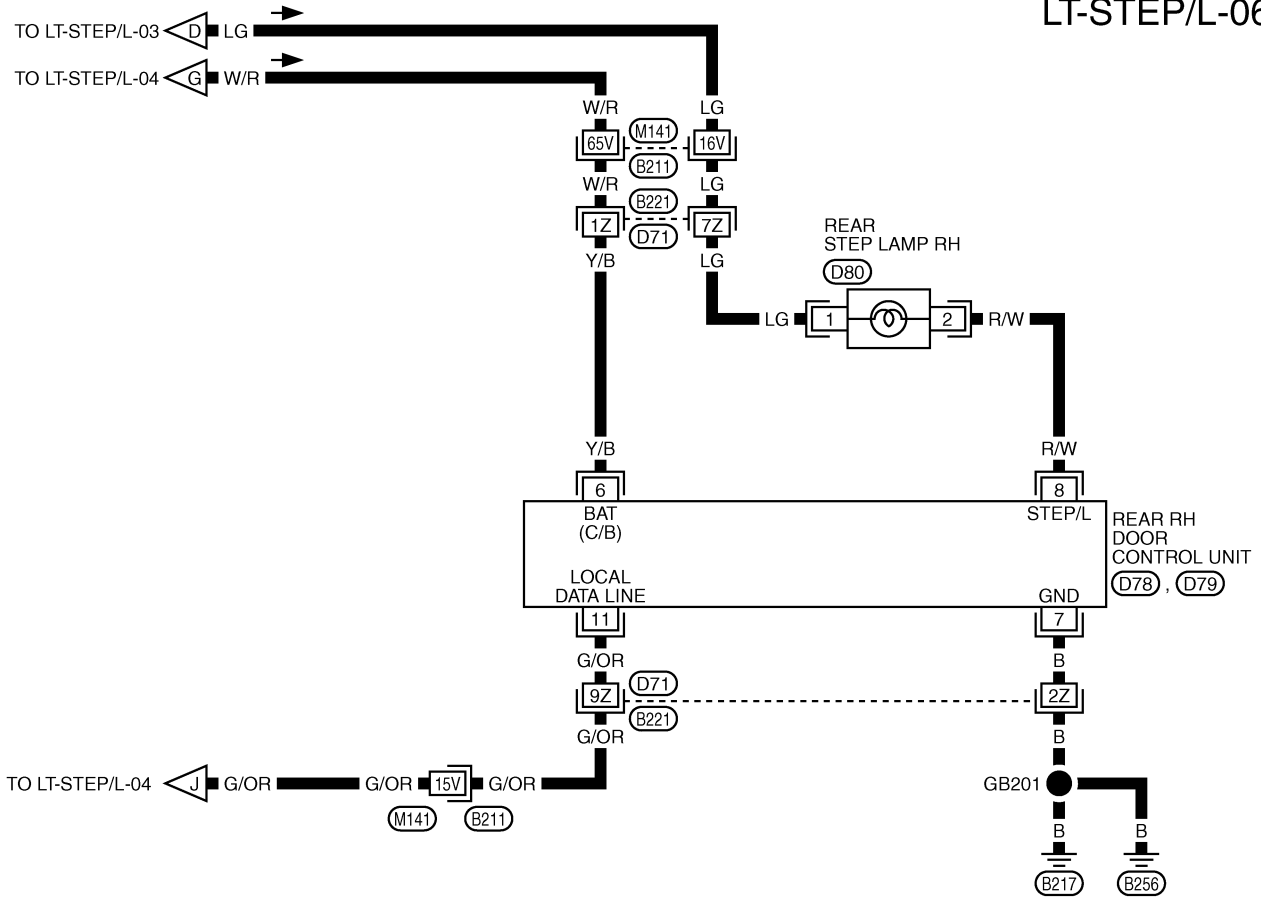

REFER TO THE FOLLOWING.  
(B211), (B221) -SUPER MULTIPLE JUNCTION (SMJ)

TKWM0059E

A  
B  
C  
D  
E  
F  
G  
H  
I  
J

LT

L  
M

# STEP LAMP


## Terminals and Reference Value for BCM

EKS0017T

Terminal No.	Wire color	Signal description	Measuring condition			Voltage (Approximate values)
			Ignition switch	Operation or condition		
33	W	Rear LH door switch signal	OFF	Rear LH door switch	ON (open)	Less than 1V
					OFF (closed)	Battery voltage
37	W/G	Passenger door switch signal	OFF	Passenger door switch	ON (open)	Less than 1V
					OFF (closed)	Battery voltage
56	B	Ground	—	—	—	—
67	G/W	LAN communication	—	—	—	—
68	W/B	Ignition power supply	ON	—	—	Battery voltage
105	Y/L	Battery power supply	OFF	—	—	Battery voltage
113	B	Ground	—	—	—	—
142	W/R	Driver door switch signal	OFF	Driver door switch	ON (open)	Less than 1V
					OFF (closed)	Battery voltage
143	W/L	Rear RH door switch signal	OFF	Rear RH door switch	ON (open)	Less than 1V
					OFF (closed)	Battery voltage


## Terminals and Reference Value for Driver Door Control Unit (LCU01)

EKS0017U

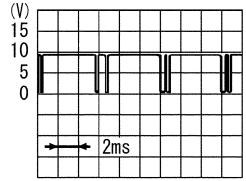Terminal No.	Wire color	Item	Condition		Voltage (Approximate values)
3	R	Step lamp	Each door switch	ON (open)	Less than 1V
				OFF (closed)	Battery voltage
5	G/OR	Local communication line	—	—	 <p style="text-align: right; font-size: small;">SIIA0591J</p>
8	G/W	Data line A-3	—	—	—
14	Y/G	Power source (PTC)	—	—	Battery voltage
15	B	Ground	—	—	Less than 1V

## Terminals and Reference Value for Passenger and Rear LH, RH Door Control Unit

EKS001G7

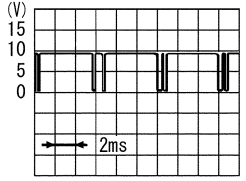Terminal No.	Wire color	Item	Condition		Voltage (Approximate values)
6	Y/B	Power source (PTC)	—	—	Battery voltage
7	B	Ground	—	—	Less than 1V
8	R/W	Step lamp	Each door switch	ON (open)	Less than 1V
				OFF (closed)	Battery voltage
11	G/OR	Local communication line	—	—	 <p style="text-align: right; font-size: small;">SIIA0591J</p>

# STEP LAMP

## Work Flow

EKS0017V

1. Confirm the symptom or customer complaint.
2. Understand system description. Refer to [LT-107, "System Description"](#) .
3. Perform preliminary check. Refer to [LT-117, "Preliminary Check"](#) .
4. Does the door lock system operate normally? When yes, GO TO step 5. When no, GO TO Power door lock system [BL-40, "Symptom Chart"](#) in "BODY LOCK & SECURITY SYSTEM (BL)" section.
5. Find the cause of trouble following the trouble diagnosis chart by symptom and repair or replace as necessary. Refer to [LT-121, "Symptom Chart"](#) .
6. Does the total coordinated interior illumination operate normally? When yes, GO TO step 7. When no, GO TO step 5.
7. Inspection END.

## Preliminary Check

EKS0017W

### INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT

#### 1. FUSE CHECK

Check if any of the following fuses in BCM are blown.

Unit	Power source	Fuse No.
BCM	Battery power supply	3
	IGN power supply	1

Refer to [LT-110, "Wiring Diagram — STEP/L —"](#) .

#### OK or NG

- OK >> GO TO 2.  
 NG >> Replace the fuse.

#### 2. POWER CIRCUIT CHECK

Remove the connectors for the BCM and driver door LCU, or passenger, rear LH, RH door control units, measure the voltage between terminal No. (refer to the "Chart" below) of connector and body ground.

Unit Connector	Terminals (wire color)		Power source	condition	Voltage
	(+)	(-)			
BCM (M4)	105 (Y/L)	Body ground	Battery power supply	Ignition switch OFF	Battery voltage
	68 (W/B)		IGN power supply	Ignition switch ON	Battery voltage
Driver door LCU (D8)	14 (Y/G)		Battery power supply	Ignition switch OFF	Battery voltage
Passenger door control unit (D39)	6 (W/R)		Battery power supply	Ignition switch OFF	Battery voltage
Rear LH door control unit (D59)	6 (Y/B)				
Rear RH door control unit (D79)	6 (Y/B)				

#### OK or NG

- OK >> GO TO 3.  
 NG >> Check harness for opened short.

# STEP LAMP

## 3. GROUND CIRCUIT CHECK

Check continuity between the following harness connector terminal of the BCM and driver door LCU, passenger or RH, LH door control units and body ground.

Unit Connector	Terminal (wire color)		Signal	Ignition switch	Continuity
	(+)	(-)			
BCM (M4)	56 (B) and 113 (B)		Ground	Ignition switch OFF	Continuity should exist
Driver door LCU (D8)	15 (B)		Ground	Ignition switch OFF	Continuity should exist
Passenger door control unit (D39)	7 (B)		Ground	Ignition switch OFF	Continuity should exist
Rear LH door control unit (D59)					
Rear RH door control unit (D79)					

### OK or NG

- OK >> Inspection END.  
 NG >> Repair or replace harness.

## CONSULT-II Function


EKS0017Z

- CONSULT-II has the display function for the work support, data monitor and active test for each part by combining data receiving and sending via the communication line from the BCM.


IVMS diagnosis position	Diagnosis mode	Description
Step lamp	Data monitor	Displays input data of the BCM and each LCU in real-time.
	Active test	Operation of electrical loads can be checked by sending driving signal to them.
BCM PART NUMBER		Displays BCM part No.

## CONSULT-II BASIC OPERATION PROCEDURE

- With the ignition switch OFF, connect CONSULT-II to the data link connector, and turn the ignition switch ON.

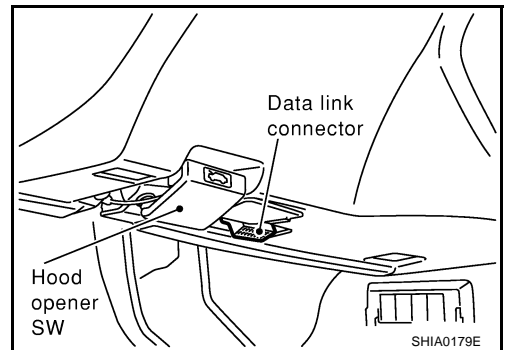


- Touch "START".

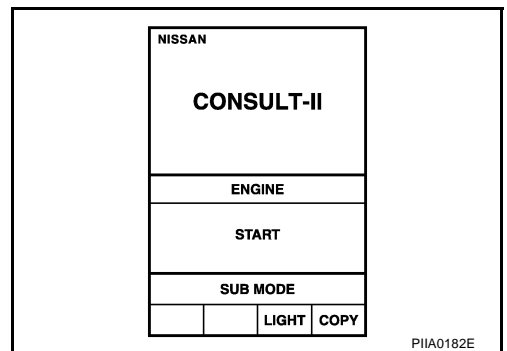


# STEP LAMP

3. Touch "IVMS".

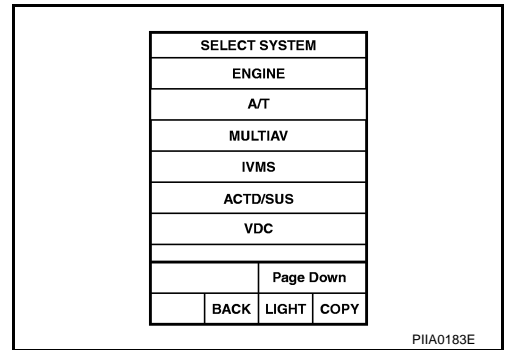

4. Check the model specification, touch either "WITH SUNROOF" or "WITHOUT SUNROOF".

5. Touch "OK". If the selection is wrong, touch "CANCEL".

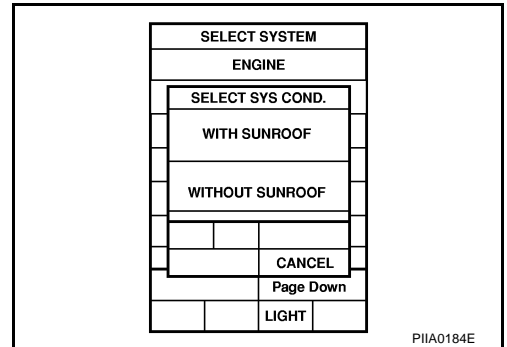

6. Select the desired part to be diagnosed on the "SELECT TEST ITEM" screen.

## DATA MONITOR

### Operation Procedure

1. Touch "STEP LAMP" on the "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on the "SELECT DIAG MODE" screen.
3. Touch "ALL SIGNALS" or "SELECTION FROM MENU" on the "DATA MONITOR" screen.

MAIN SIGNALS	Monitors the main items.
SELECTION FROM MENU	Selects and monitors the items.

4. Touch "START".
5. When selected "SELECTION FROM MENU", touch items to be monitored. When "ALL SIGNALS" is selected all items will be monitored.
6. Touch "RECORD" while monitoring and status of the item being monitored can be recorded. To stop recording, touch "STOP".

### Data Monitor Item

Monitored item ["OPERATION OR UNIT"]	Description
DOOR SW-DR [ON/OFF]	Displays status of the driver door as judged from the driver door switch signal. (Door is open: ON/ Door is closed: OFF)
DOOR SW-AS [ON/OFF]	Displays "Door open (ON)/door closed (OFF)" status judged from the passenger door switch signal.
DOOR SW-RR [ON/OFF]	Displays "Door open (ON)/door closed (OFF)" status judged from the Rear RH door switch signal.
DOOR SW-RL [ON/OFF]	Displays "Door open (ON)/door closed (OFF)" status judged from the Rear LH door switch signal.

## ACTIVE TEST

### Operation Procedure

1. Touch "STEP LAMP" on the "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on the "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. Touch "STOP" while testing and the operation will be stopped.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# STEP LAMP

## Active Test Item

Test items	Display on CONSULT-II screen	Description
Driver door step lamp output	STEP LAMP-DR	Driver door step lamp can be operated by any ON-OFF operation of lights.
Passenger door step lamp output	STEP LAMP-AS	Passenger door step lamp can be operated by any ON-OFF operation of lights.
Rear RH door step lamp output	STEP LAMP-RR/RH	Rear right door step lamp can be operated by any ON-OFF operation of lights.
Rear LH door step lamp output	STEP LAMP-RR/LH	Left rear door step lamp can be operated by any ON-OFF operation of lights.

## On Board Diagnosis

EKS00180

### ON BOARD DIAGNOSTIC RESULTS INDICATOR LAMP.

- Front map lamps and step lamps (all seats) act as the indicators for the on board diagnosis.


### DIAGNOSIS ITEM

Diagnosis item	Description
Switch monitor	Checks for malfunction in switch systems that input to BCM and each LCU.

### SWITCH MONITOR


- Perform the diagnosis on the switch system to each control unit.

### How to Perform Switch Monitor

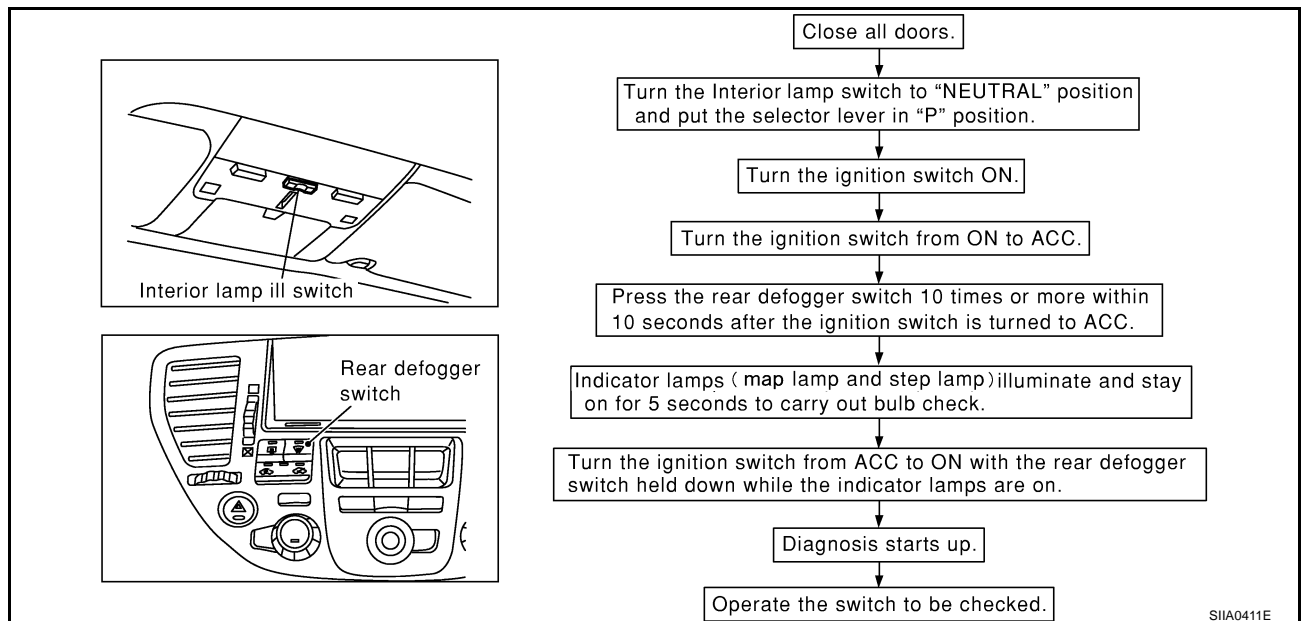

### Description

- In this mode, when BCM detects the input signal from a switch in IVMS as shown below, the detection is indicated by the front map lamp and front step lamps with buzzer.

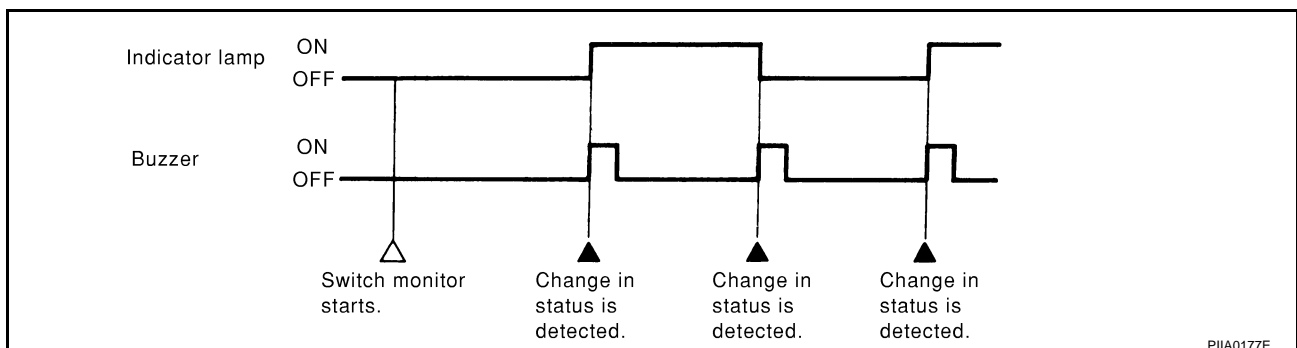



# STEP LAMP

## Switch Monitor Item

- The status of the switch (except the ignition switch, interior lamp ill switch, and map lamp switch) as input to each control unit can be monitored.

Control unit	Item
BCM	Each door switch

## Cancel of Switch Monitor

If the following conditions are satisfied, the communication diagnosis is cancelled.

- Turn ignition switch OFF.
- Drive the vehicle more than 7 km/h (4 MPH).

## Symptom Chart

### DIAGNOSTIC PROCEDURE

EKS00181

**SYMPTOM: Step lamp does not illuminate/dose not go off when door is opened/closed.**

### 1. CHECK DOOR SWITCH SIGNAL

 With CONSULT-II

- Operate each door via "DOOR SW" on DATA MONITOR screen and check that the switch turns on and off as commanded.

DATA MONITOR	
MONITOR	
DOOR SW-DR	OFF
DOOR SW-AS	OFF
DOOR SW-RR	OFF
DOOR SW-RL	OFF
	RECORD

SKIA0441E

 Without CONSULT-II

- Operate each door and via "switch monitor" of the self-diagnosis function and check that the switch turns on and off as commanded.

### OK or NG

- OK >> GO TO 5
- NG >> GO TO 2.


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M

LT

# STEP LAMP

## 2. CHECK FRONT DOOR SWITCH HARNESS CONTINUITY

1. Disconnect connectors of the BCM and front door switch.
2. Check continuity between BCM harness connector M4, B4 terminals 37(W/G), 142(W/R) and the door switches harness connectors B20, B220 terminal 1(W/R, W/G).
3. Check continuity between BCM harness connector M4, B4 terminals 37(W/G), 142(W/R) and body ground.

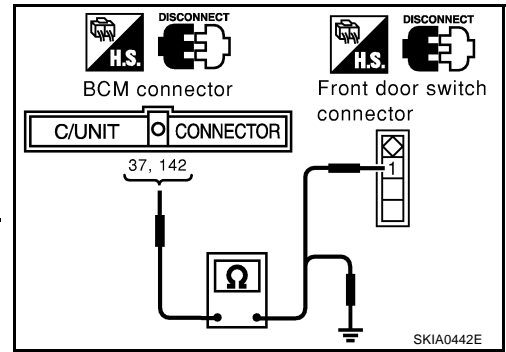

Terminals				Continuity
(+)		(-)		
Connector	Terminal	Connector	Terminal	
B4	142(W/R)	B20	1(W/R)	Yes
M4	37(W/G)	B220	1(W/G)	
B4	142(W/R)	Body ground		No
M4	37(W/G)			


OK or NG

OK >> GO TO 3.

NG >> Repair or replace harness.

## 3. CHECK REAR DOOR SWITCH HARNESS CONTINUITY

1. Disconnect connectors of rear door switch.
2. Check continuity between BCM harness connector M4, B4 terminals 33(W), 143(W/L) and the door switches harness connectors D62, D82 terminal 1(W).
3. Check continuity between BCM harness connector M4, B4 terminals 33(W), 143(W/L) and body ground.

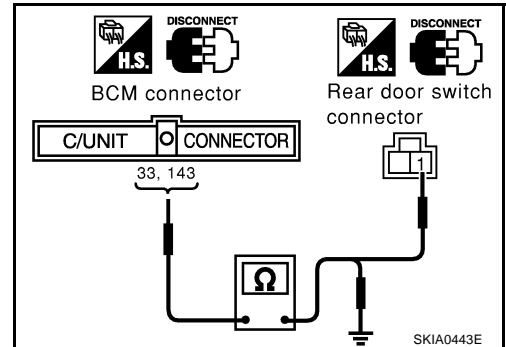

Terminals				Continuity
(+)		(-)		
Connector	Terminal	Connector	Terminal	
M4	33(W)	D62	1(W)	Yes
B4	143(W/L)	D82	1(W)	Yes
M4	33(W)	Body ground		No
B4	143(W/L)			

OK or NG

OK >> GO TO 4.

NG >> Repair or replace harness.

# STEP LAMP


## 4. CHECK DOOR SWITCH

Check continuity between front door switch connector B20, B220 terminal 1 (W/R, W/G) and body ground, and between the rear door switch connector D62, D82 terminals 1(W) and 2(B) while turning the door switches ON (open) and OFF (closed).

Con- nector	Terminals		Condition	Continuity
	(+) Terminal	(-) Termi- nal		
B20	1(W/R)	Body ground	ON (Open)	Yes
B220	1(W/G)		OFF (Closed)	No
D62	1(W)	2(B)	ON (Open)	Yes
D82			OFF (Closed)	No

OK or NG

- OK >> Check door switch ground circuit or door switch ground condition.  
 NG >> Replace Door switch.

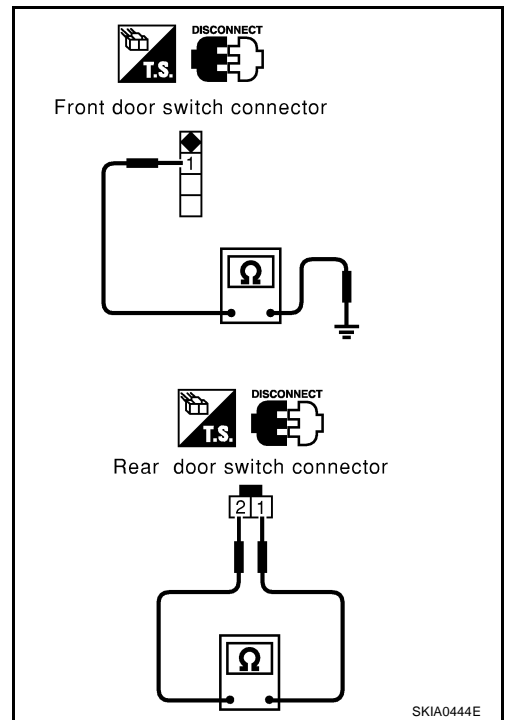

## 5. CHECK BULB

Check step lamp bulb.

OK or NG

- OK >> GO TO 6.  
 NG >> Replace bulb.


## 6. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect step lamp connector.
3. Check voltage between step lamp connector D10, D40, D60, D80 terminal 1(LG) and ground.

**1(LG) - Body ground : Battery voltage should exist.**

OK or NG

- OK >> Check harness for open or short between step lamp and door control unit.  
 NG >> **Check the following.**
- 10A fuse [No.8, located in the fuse block (J/B) NO.1]
  - Harness for open or short between fuse and step lamp.

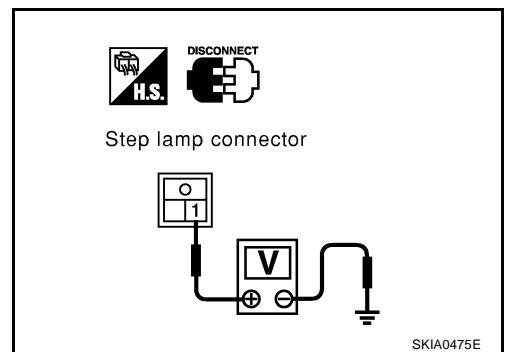

# STEP LAMP


## Bulb Replacement

EKS00182

1. Remove the step lamp. Refer to [LT-124, "Removal and Installation"](#) in "Step Lamp".
2. Insert a screwdriver in the notch and remove the lens.
3. Remove the bulb.

**Step lamp**


**: 12V 2.7W**

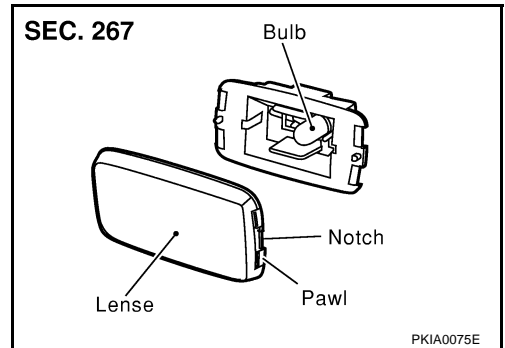

## Removal and Installation

EKS00183

1. Using a clip driver or a suitable tool, press and remove the metal clip of the step lamp.
2. Disconnect the step lamp connector.

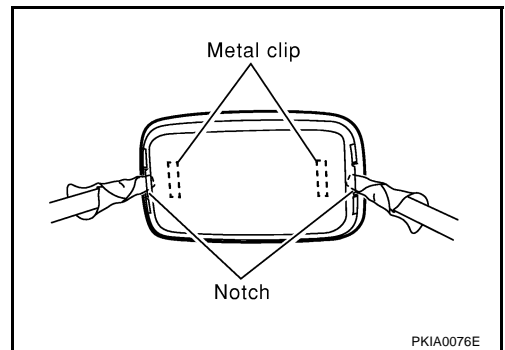

## ILLUMINATION

PFP:27545

### System Description

EKS000U6

The illumination lamp operation is controlled by the lighting switch which is built into the spiral cable and headlamp battery saver control unit. The battery saver system is controlled by headlamp battery saver control unit and BCM.

Power is supplied at all times

- to tail lamp relay terminals 2 and 6
- through 15A fuse [No. 54, located in the fuse, fusible link and relay block (J/B)], and
- to headlamp battery saver control unit terminal 7
- through 10A fuse [No. 6, located in the fuse block (J/B) NO.1].

When ignition switch is in ON or START position, power is supplied

- to headlamp battery saver control unit terminal 1
- through 10A fuse [No. 1, located in the fuse block (J/B) NO.1].

Ground is supplied

- to headlamp battery saver control unit terminals 4 and 11
- through body ground M115 and M25.

### LIGHTING OPERATION BY LIGHTING SWITCH

When lighting switch is 1ST (or 2ND) position, ground is supplied

- to tail lamp relay terminal 1 from headlamp battery saver control unit terminals 6 and 14
- through headlamp battery saver control unit terminals 5 and 13, and
- through lighting switch and body grounds M25 and M115.

Tail lamp relay is then energized and illumination lamps illuminate.

The lighting switch must be in the 1ST or 2ND position for illumination.

The illumination control switch that controls the amount of current to the illumination system. As the amount of current increases, the illumination becomes brighter.

The ground for all of the components except for door mirror remote control switch, grove box lamp, cigarette lighter socket, ashtray, auto return cancel switch, rear control switch, rear sunshade rear switch, rear power seat switch and console box lamp are controlled through terminals 2 and 3 of the illumination control switch and body grounds M25 and M115.

### BATTERY SAVER CONTROL

When the ignition switch is turned from ON (or START) to OFF (or ACC) positions while illumination lamps are illuminated, the RAP signal is supplied to terminal 10 of the headlamp battery saver control unit from BCM terminal 135.

After counting 45 seconds by the RAP signal from the BCM to headlamp battery saver control unit, the ground supply to terminal 1 of the tail lamp relay from headlamp battery saver control unit terminals 6 and 14 is terminated.

Then illumination lamps are turned off.

Illumination lamps are turned off when driver or passenger side door is opened even if 45 seconds have not passed after the ignition switch is turned from ON (or START) to OFF (or ACC) positions while illumination lamps are illuminated.

When the lighting switch is turned from OFF to 1ST (or 2ND) after illumination lamps are turned off by the battery saver control, ground is supplied

- to headlamp battery saver control unit terminals 5 and 13 from lighting switch terminal 11, and
- to tail lamp relay terminal 1 from headlamp battery saver control unit terminals 6 and 14.


Then illumination lamps illuminate again.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# ILLUMINATION

## Schematic

EKS000U7

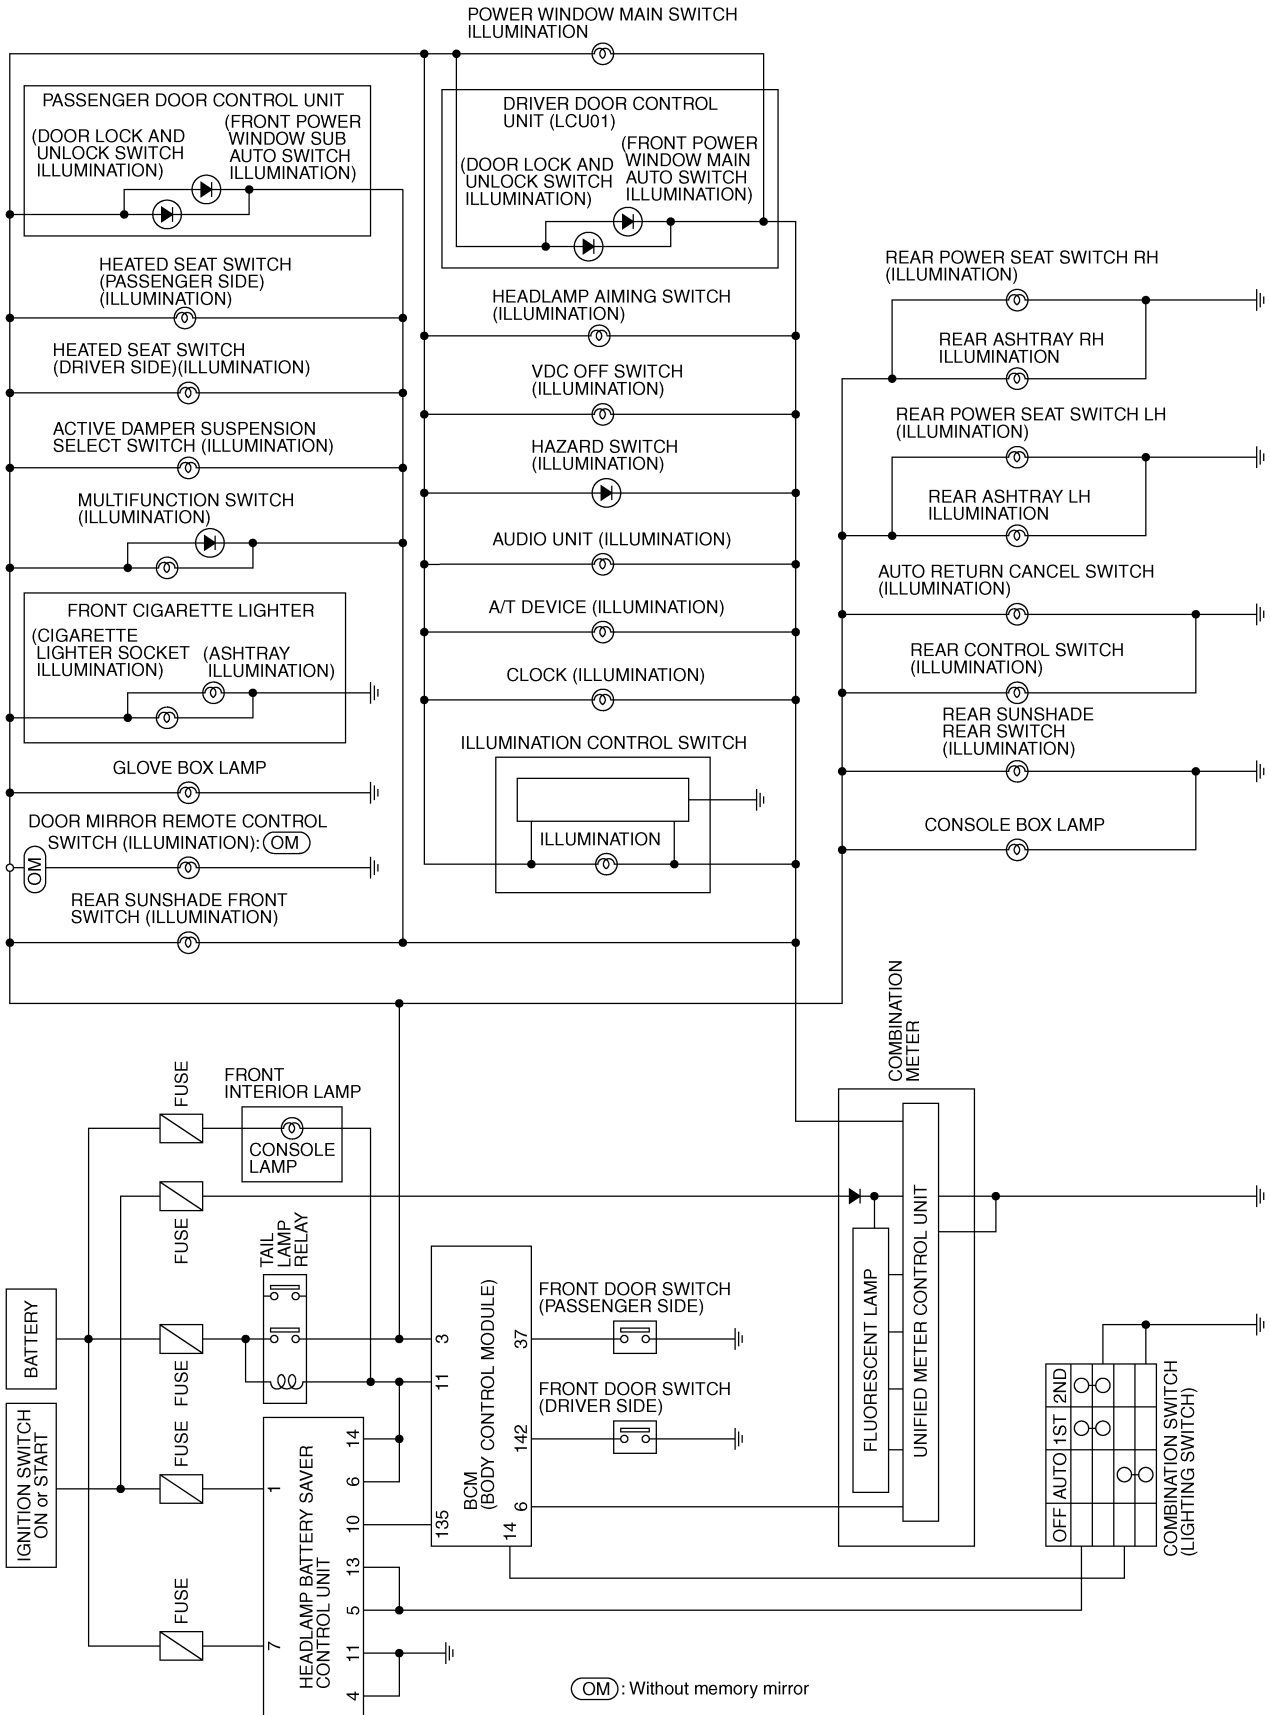


TKWM0034E

# ILLUMINATION

## Wiring Diagram — ILL —

EKS000UB

LT-ILL-01

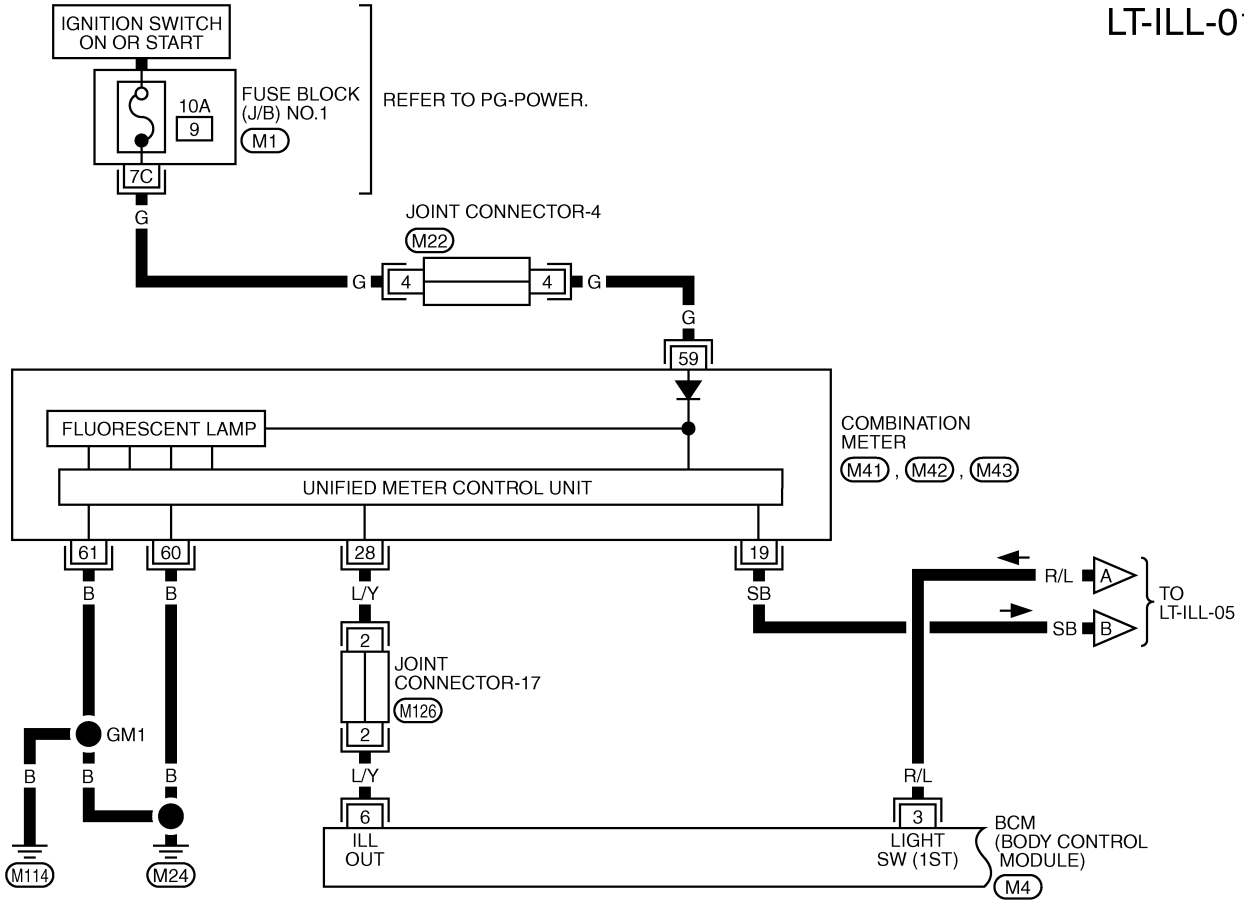

1	1	1	1	1	2	2	2	2
3	3	3	3	3	4	4	4	4

(M22)  
L

1	2	3	4	5	6	7	8	9	21	22	23	24	25	26	27	28	29	30	31				
10	11	12	13	14	15	16	17	18	19	20	32	33	34	35	36	37	38	39	40	41	42	43	44

(M41) BR  
(M42) BR  
(M43) W

1	1	1	2	2	2	3	3	3	3
4	4	4	4	4	4	5	5	5	5



(M126)  
B

REFER TO THE FOLLOWING.  
 (M1) - FUSE BLOCK-JUNCTION BOX (J/B) NO.1  
 (M4) - ELECTRICAL UNITS

TKWM0035E

# ILLUMINATION

LT-ILL-02

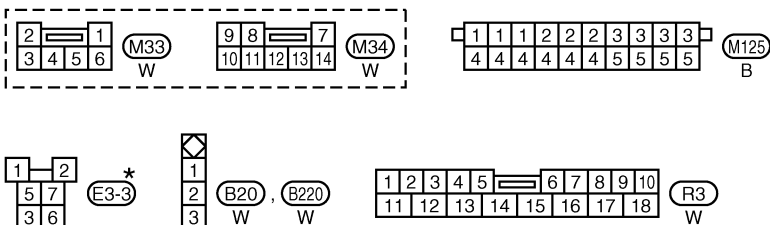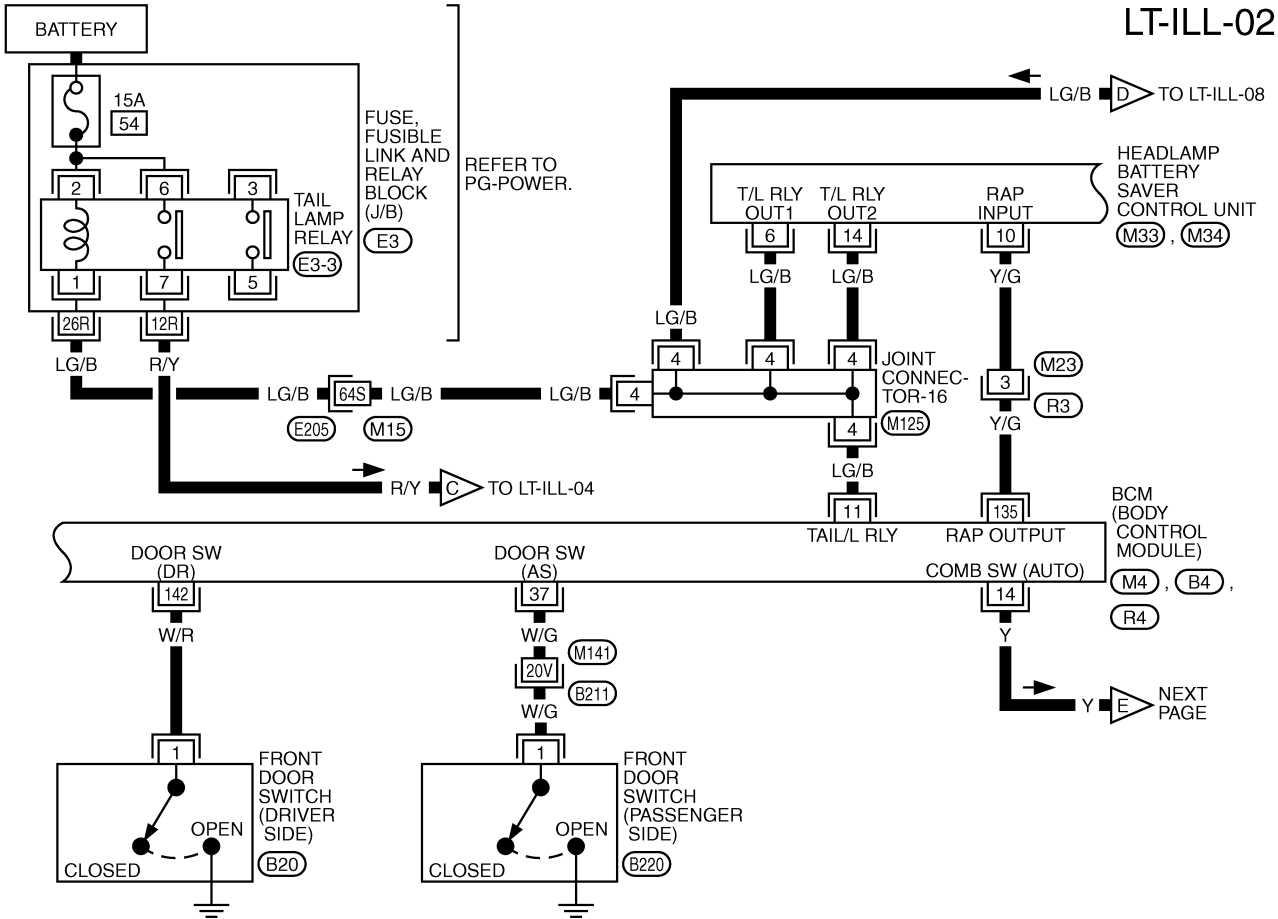

\*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.

REFER TO THE FOLLOWING.



- (E205), (B211) -SUPER MULTIPLE JUNCTION (SMJ)
- (E3) -FUSE, FUSIBLE LINK AND RELAY BLOCK (J/B)
- (M4), (B4), (R4) -ELECTRICAL UNITS

TKWM0036E



# ILLUMINATION

LT-ILL-03

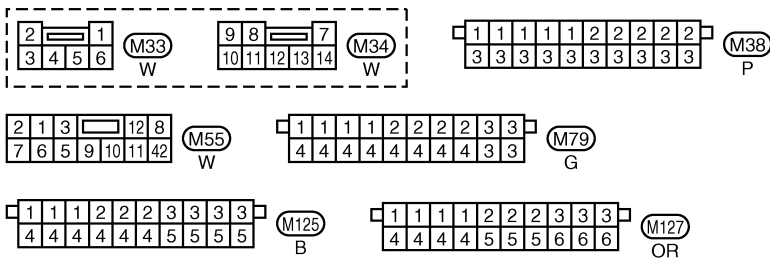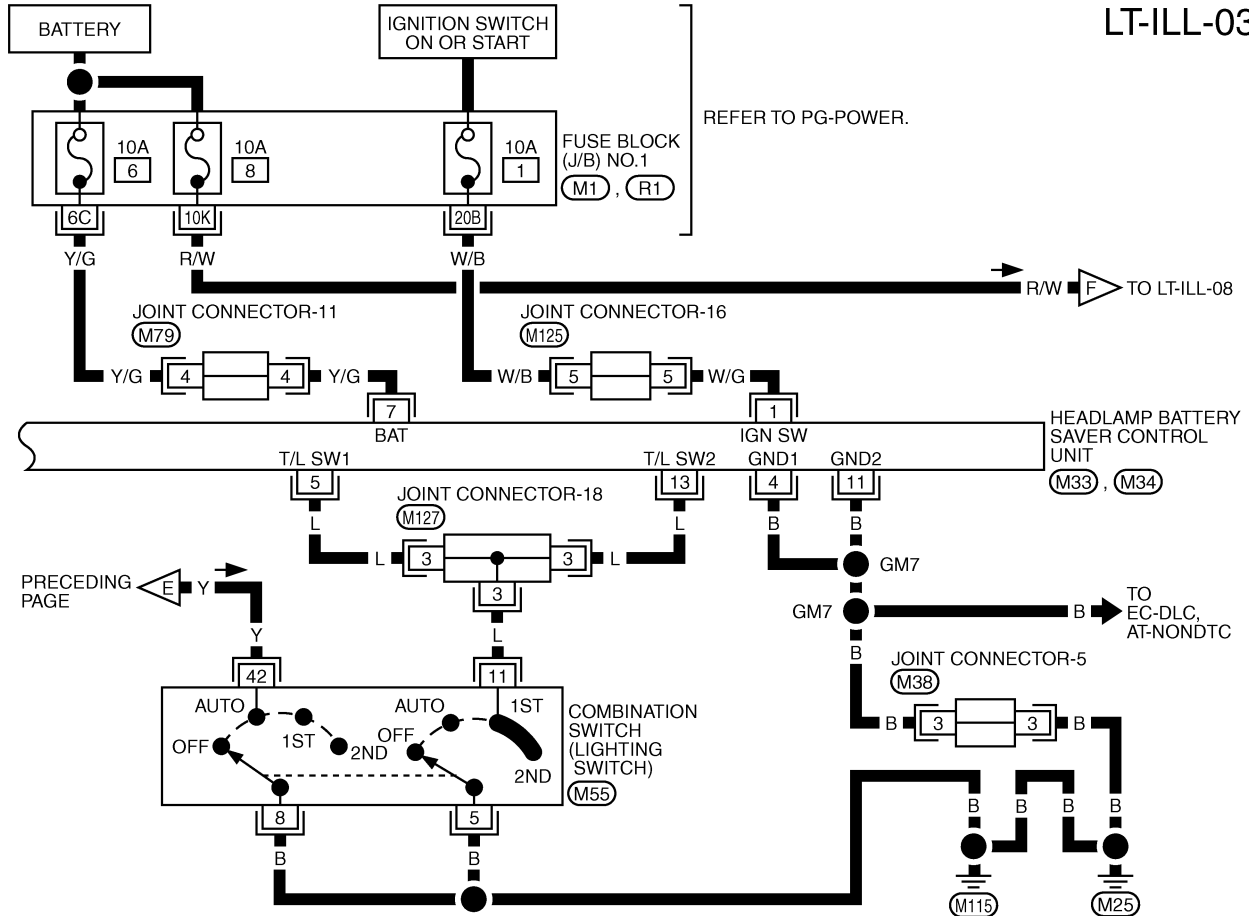



A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

LT

TKWM0037E

# ILLUMINATION

LT-ILL-04





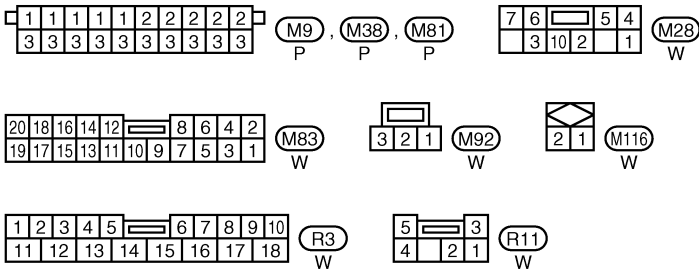
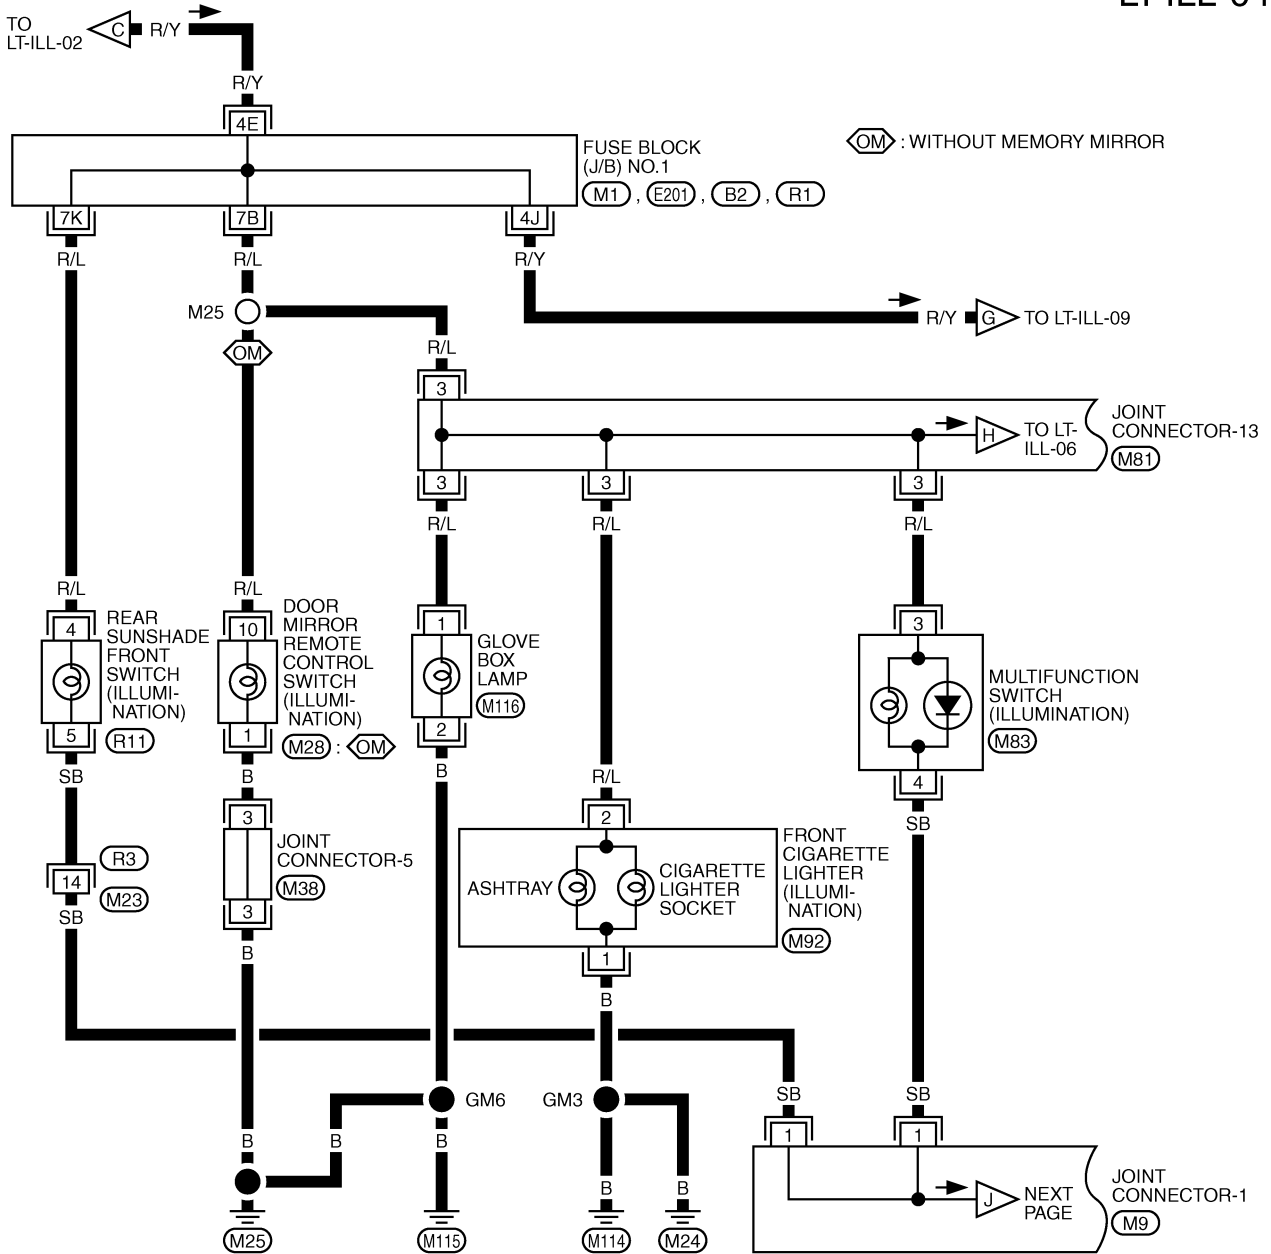


REFER TO THE FOLLOWING.  
(M1), (E201), (B2), (R1)  
-FUSE BLOCK-JUNCTION BOX (J/B) NO.1

TKWM0039E

# ILLUMINATION

LT-ILL-05

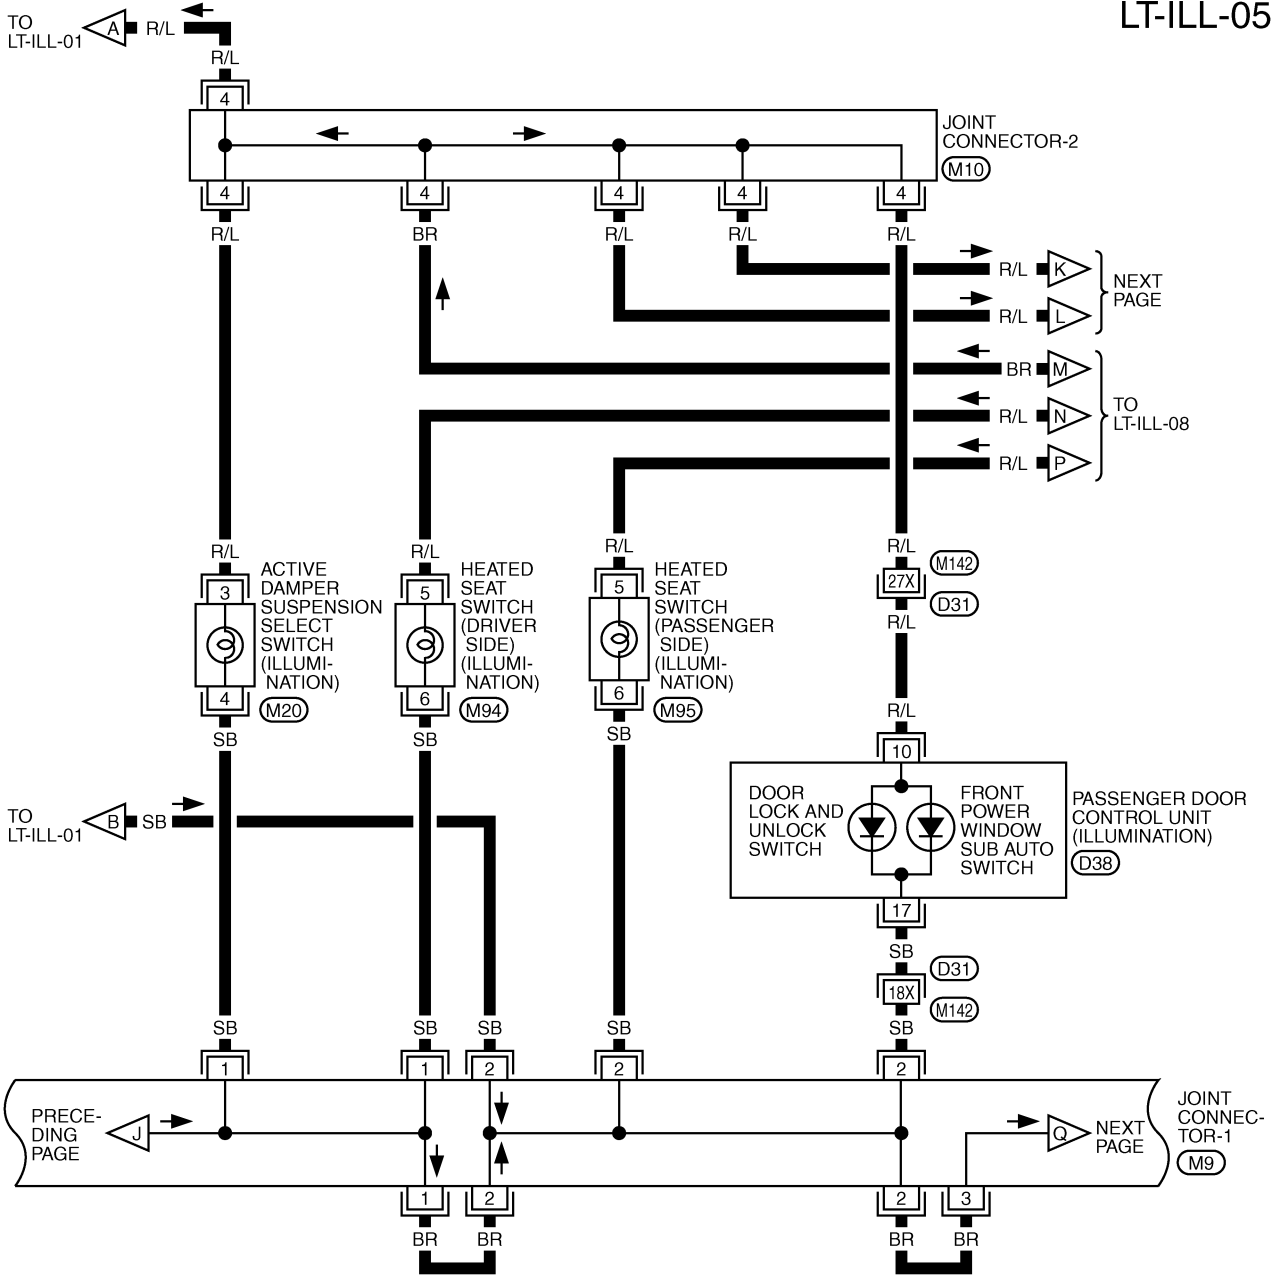







REFER TO THE FOLLOWING.  
 (D31) -SUPER MULTIPLE JUNCTION (SMJ)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

LT

# ILLUMINATION

LT-ILL-06

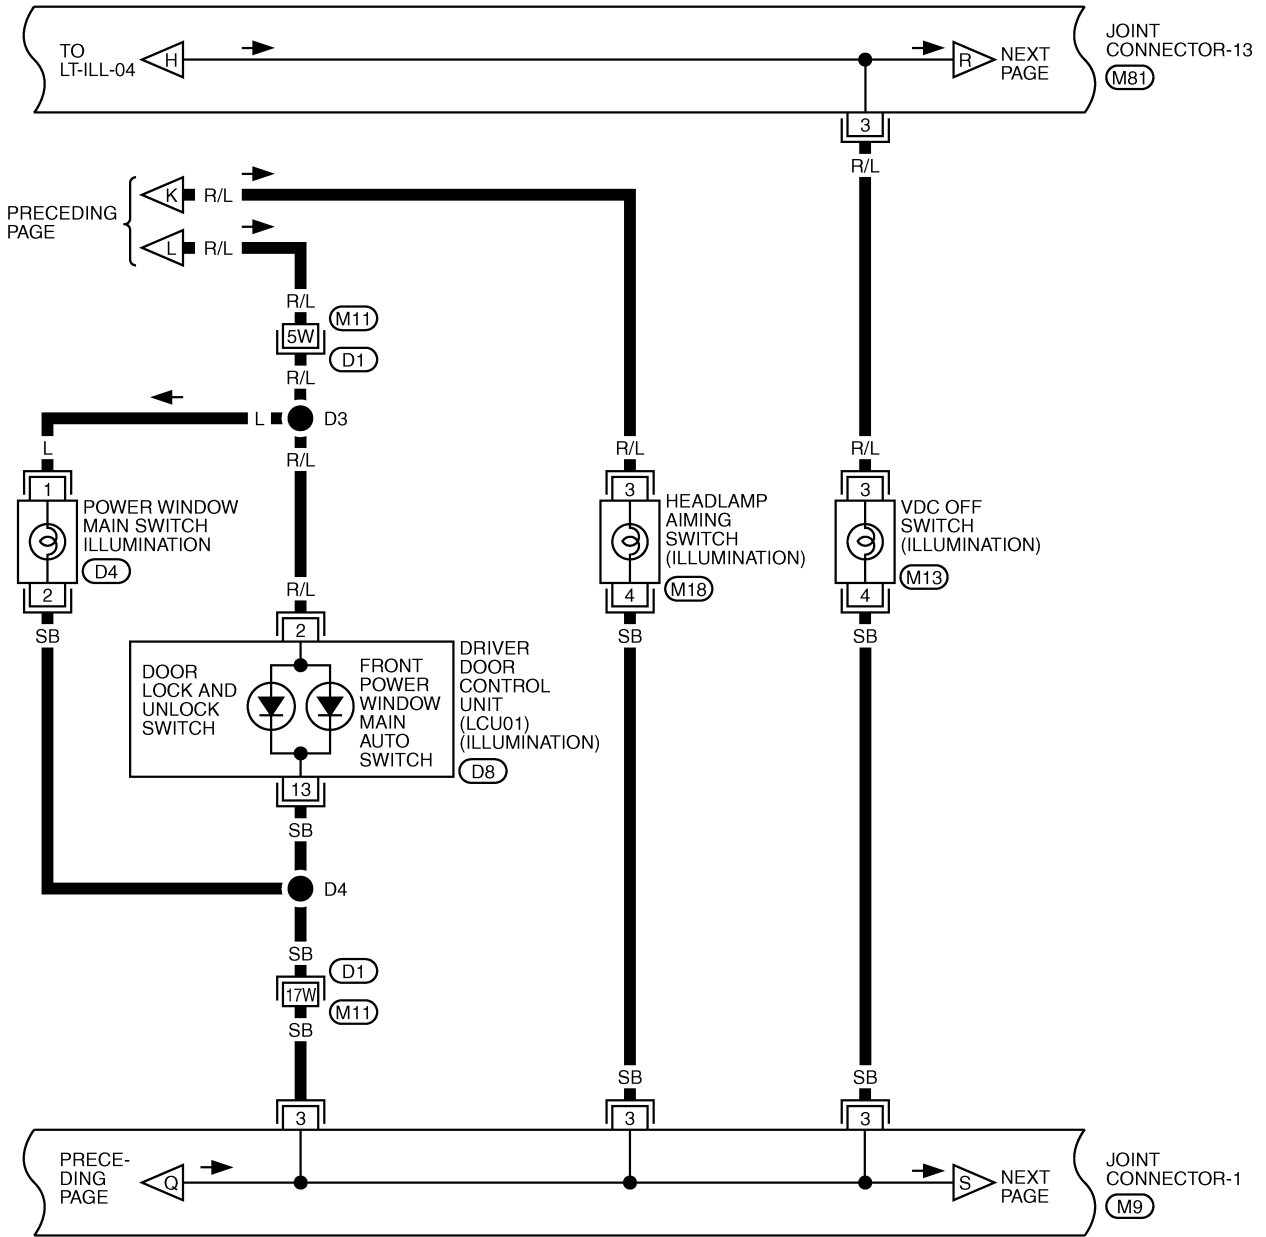



REFER TO THE FOLLOWING.  
 (D1) -SUPER MULTIPLE JUNCTION (SMJ)

TKWM0041E

# ILLUMINATION

LT-ILL-07



A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

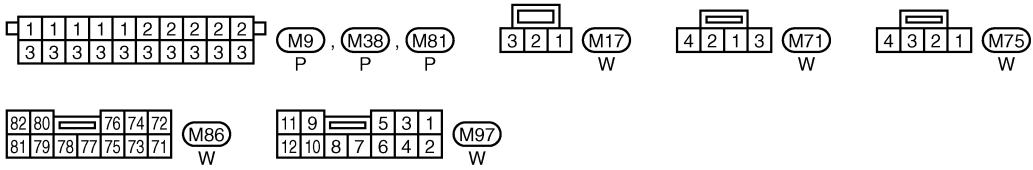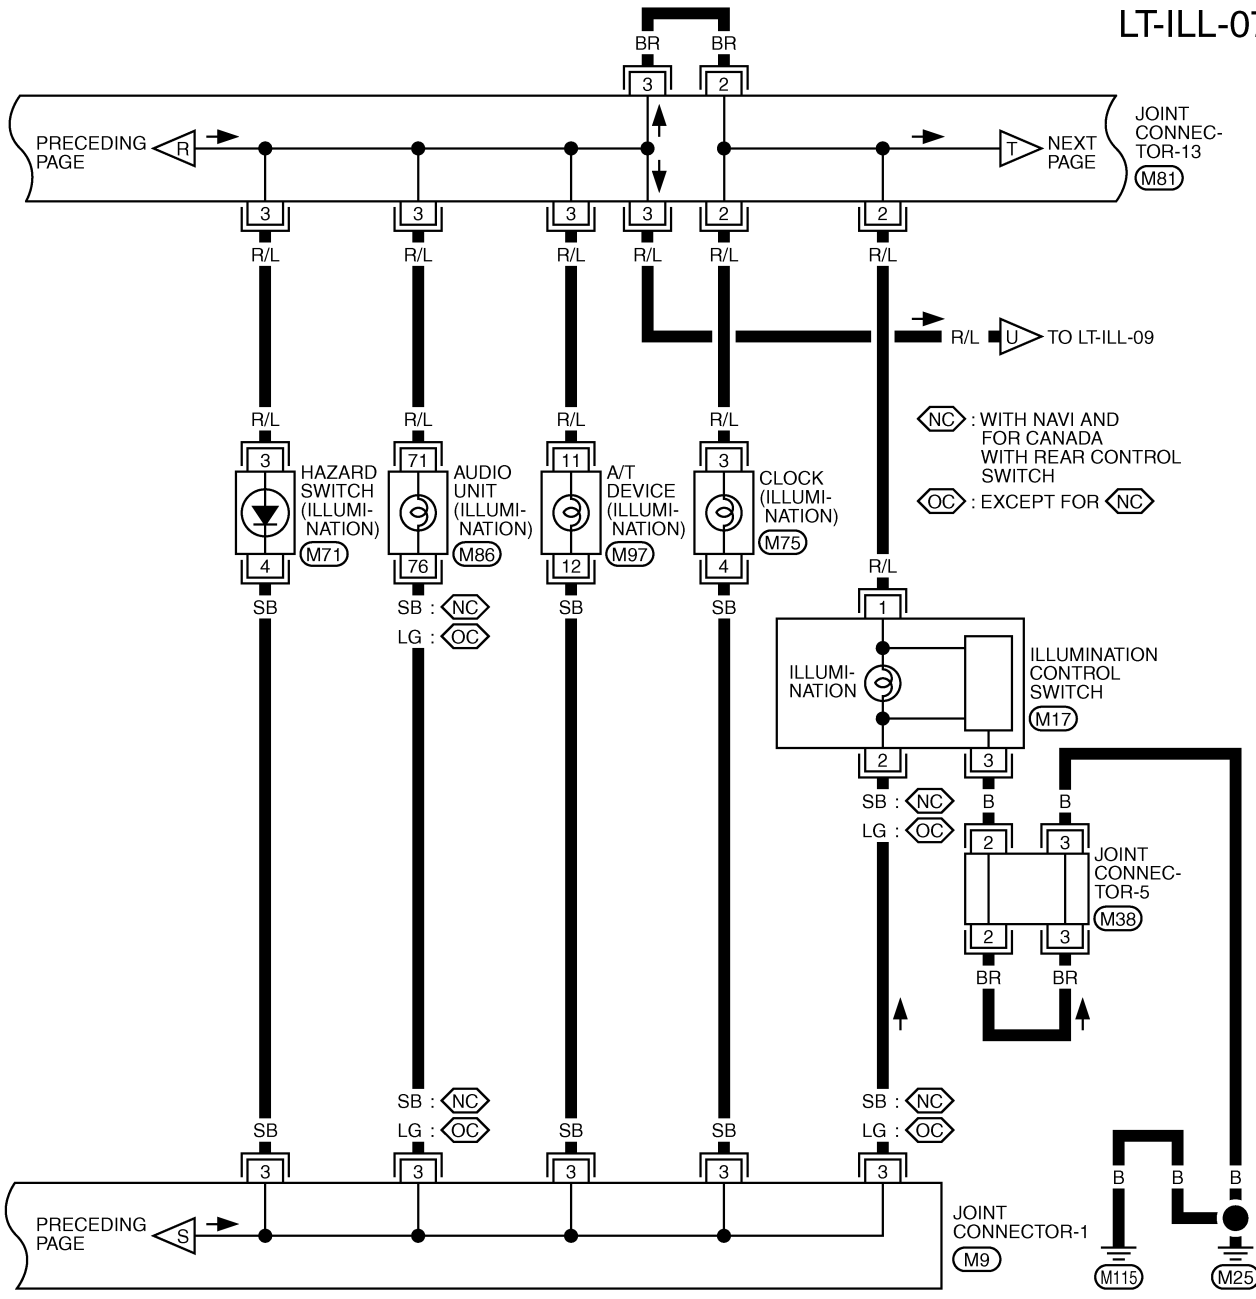

TKWM0042E

# ILLUMINATION


LT-ILL-08

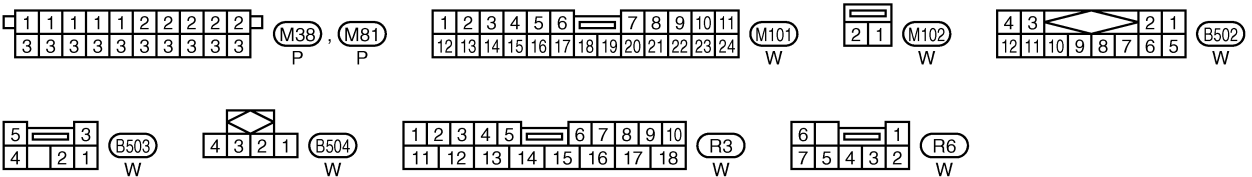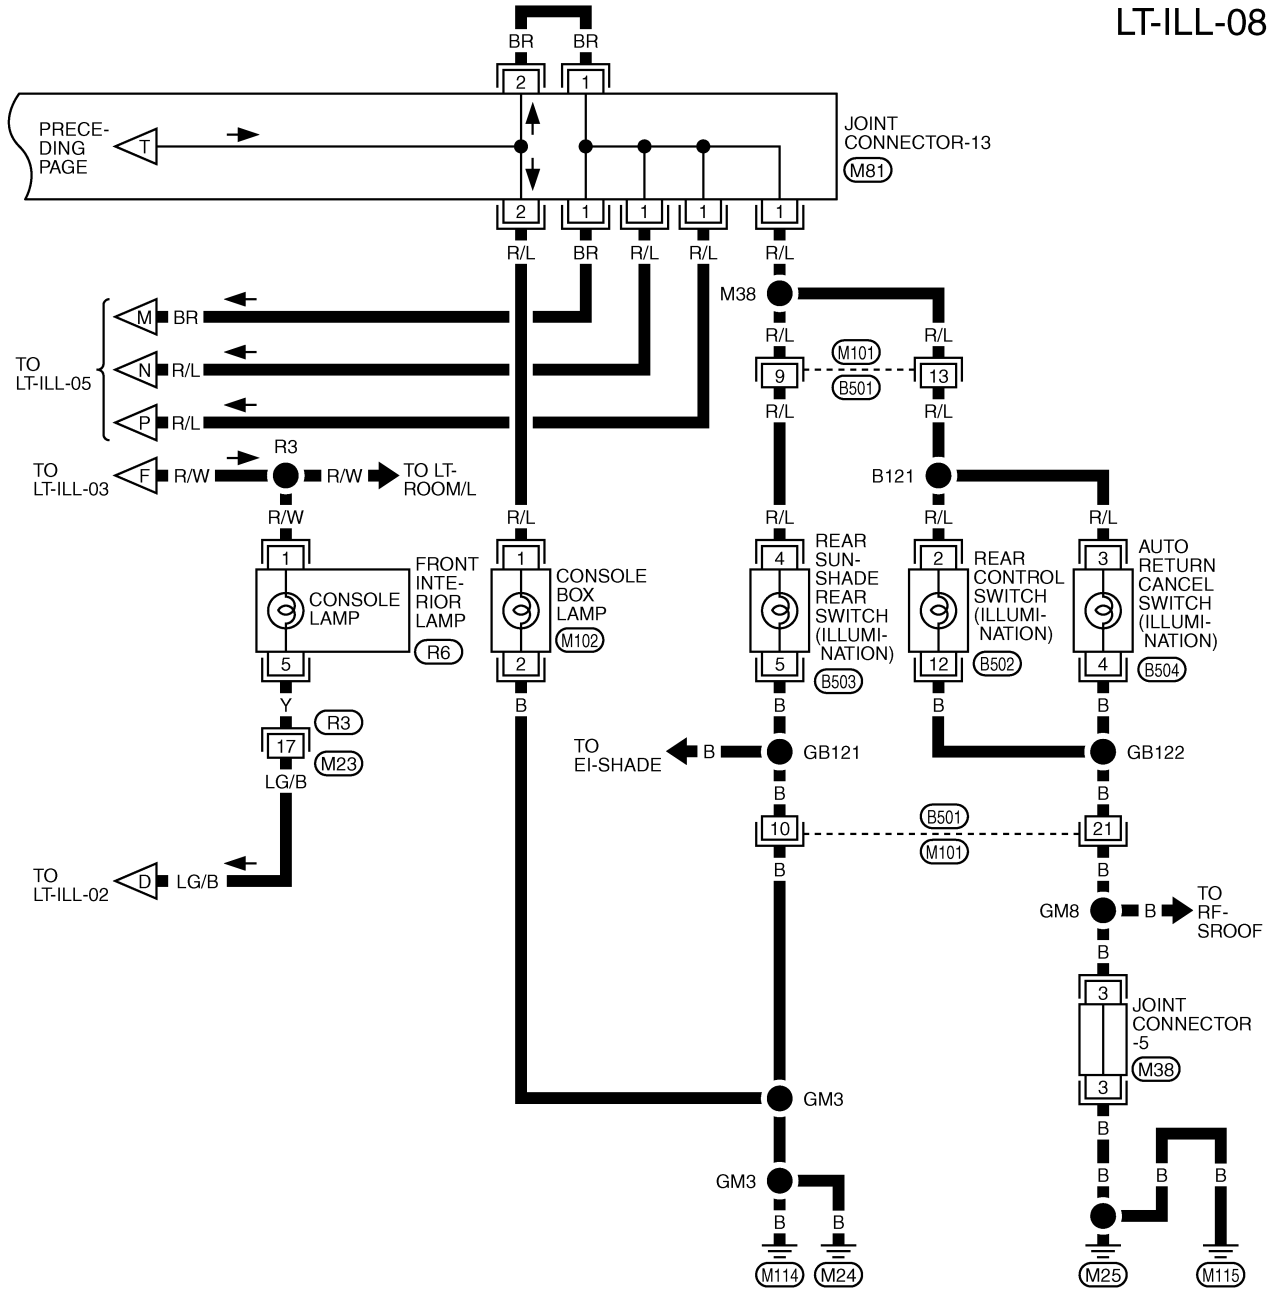


TKWM0232E

# ILLUMINATION

LT-ILL-09

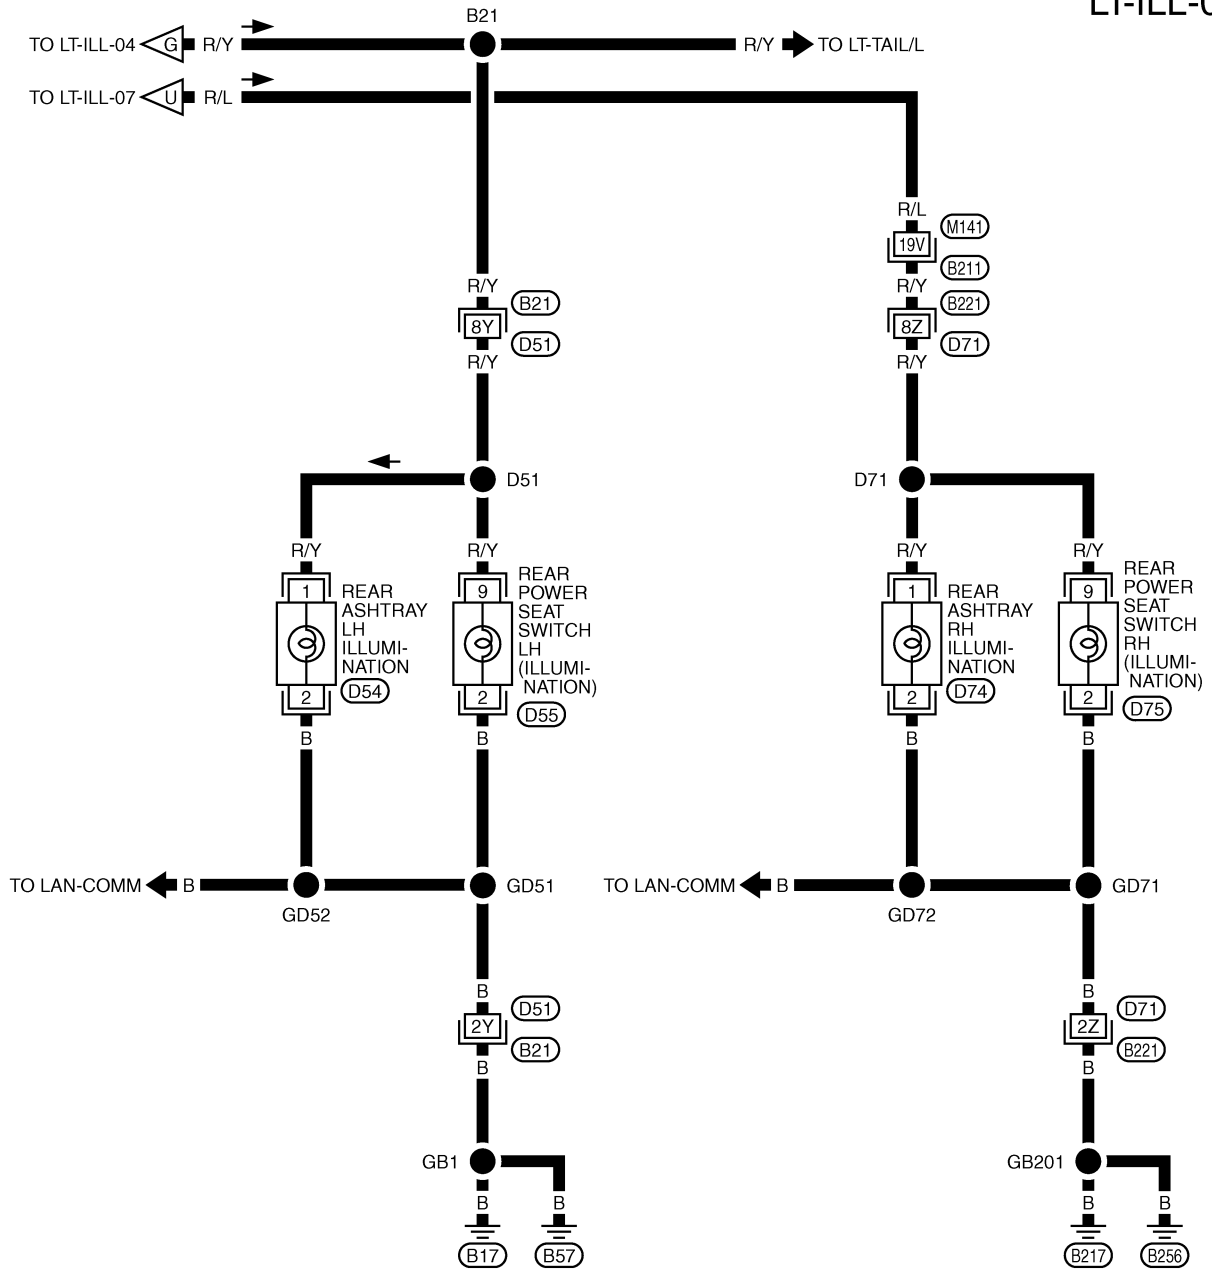

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M



REFER TO THE FOLLOWING.  
 (B21), (B211), (B221) -SUPER  
 MULTIPLE JUNCTION (SMJ)


TKWM0155E

# ILLUMINATION

EKS0017N

## Removal and Installation ILLUMINATION CONTROL SWITCH


1. Remove the lower instrument panel (driver side). Refer to [IP-10, "Removal and Installation"](#) in "INSTRUMENT PANEL (IP)" section.
2. Press the illumination control switch fixing tabs and remove the unit from the lower instrument panel (driver side).

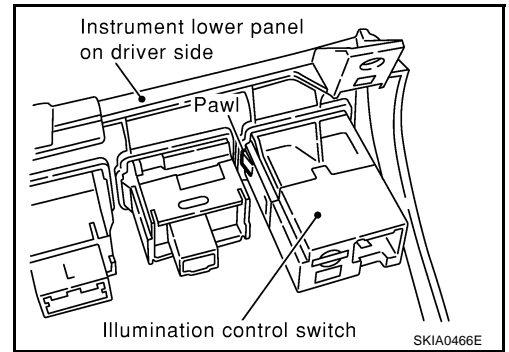

## POWER WINDOW MAIN SWITCH ILLUMINATION

1. Remove the front door finisher (RH). Refer to [EI-32, "FRONT DOOR FINISHER"](#) in "EXTERIOR & INTERIOR (EI)" section.
2. Turn the bulb socket counterclockwise and unlock it.


**Power window main switch illumination** : 12V 1.4W

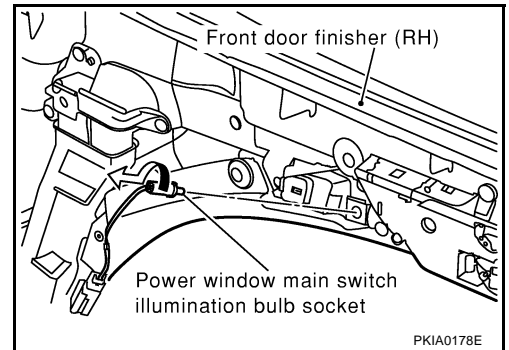

## CONSOLE BOX LAMP

1. Remove the center console box assembly. Refer to [IP-10, "Removal and Installation"](#) in "INSTRUMENT PANEL (IP)" section.
2. Remove the console box finisher. Refer to [IP-17, "Disassembly and Assembly"](#) in "INSTRUMENT PANEL (IP)" section.
3. Turn the bulb socket and unlock it.


**Console box lamp** : 12V 1.4W

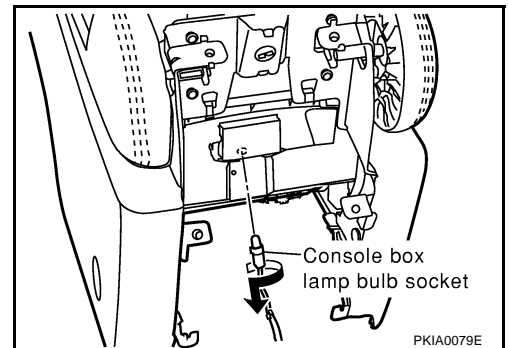

## GLOVE BOX LAMP

1. Remove the glove box cover. Refer to [IP-10, "Removal and Installation"](#) in "INSTRUMENT PANEL (IP)" section.
2. Turn the bulb socket counterclockwise and unlock it.

**Glove box lamp** : 12V 1.4W

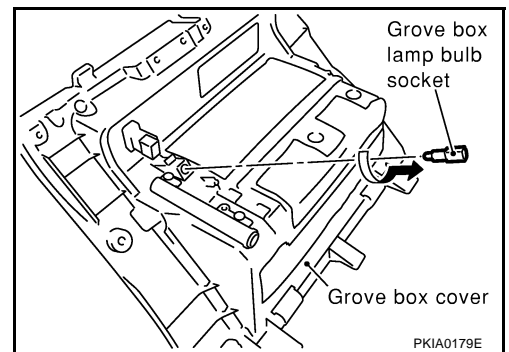



# ILLUMINATION


EKS000X1

## Removal and Installation FRONT CIGARETTE LIGHTER ILLUMINATION

### Cigarette Lighter Socket Illumination

1. Remove the instrument panel ashtray. Refer to [IP-10, "Removal and Installation"](#) in "INSTRUMENT PANEL (IP)" section.
2. Unfold three notches and remove the bulb socket.


**Cigarette lighter illumination : 12V 1.4W**

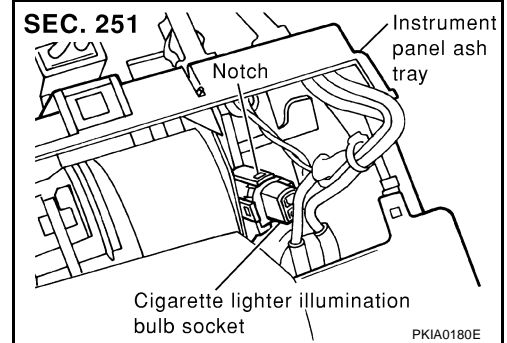

### Ashtray Illumination

1. Remove the instrument panel ashtray. Refer to [IP-10, "Removal and Installation"](#) in "INSTRUMENT PANEL (IP)" section.
2. Remove the ashtray finisher mounting screws and remove the ashtray finisher.
3. Turn the bulb socket counterclockwise and unlock it.


**Ashtray illumination : 12V 1.4W**

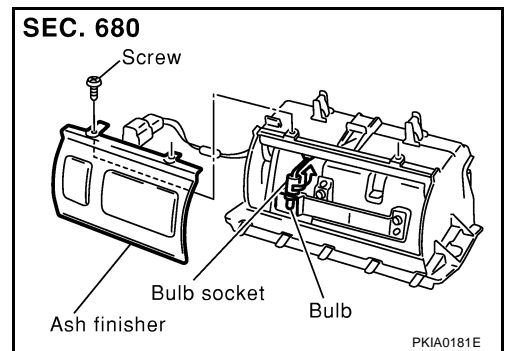

### REAR ASHTRAY ILLUMINATION

1. Remove the rear door armrest finisher. Refer to [EI-33, "REAR DOOR FINISHER"](#) in "EXTERIOR & INTERIOR (EI)" section.
2. Turn the bulb socket counterclockwise and unlock it.
3. Disconnect the ashtray illumination connector.

**Ashtray illumination : 12V 1.4W**

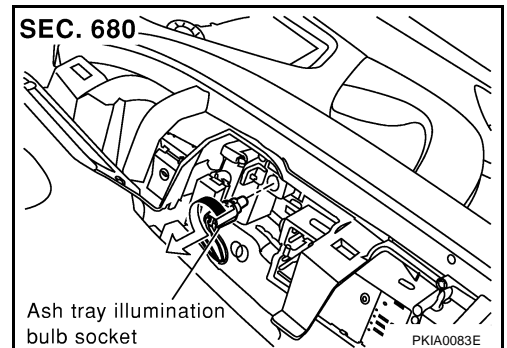

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# VANITY MIRROR AND TRUNK ROOM LAMPS



PFP:26470

## VANITY MIRROR AND TRUNK ROOM LAMPS

EKS000UC

### Wiring Diagram — INT/L —

LT-INT/L-01

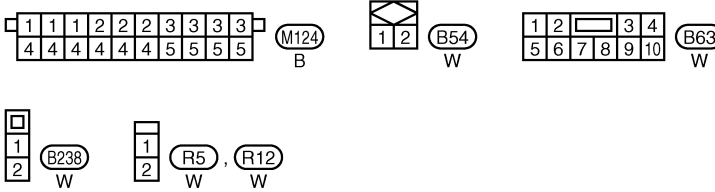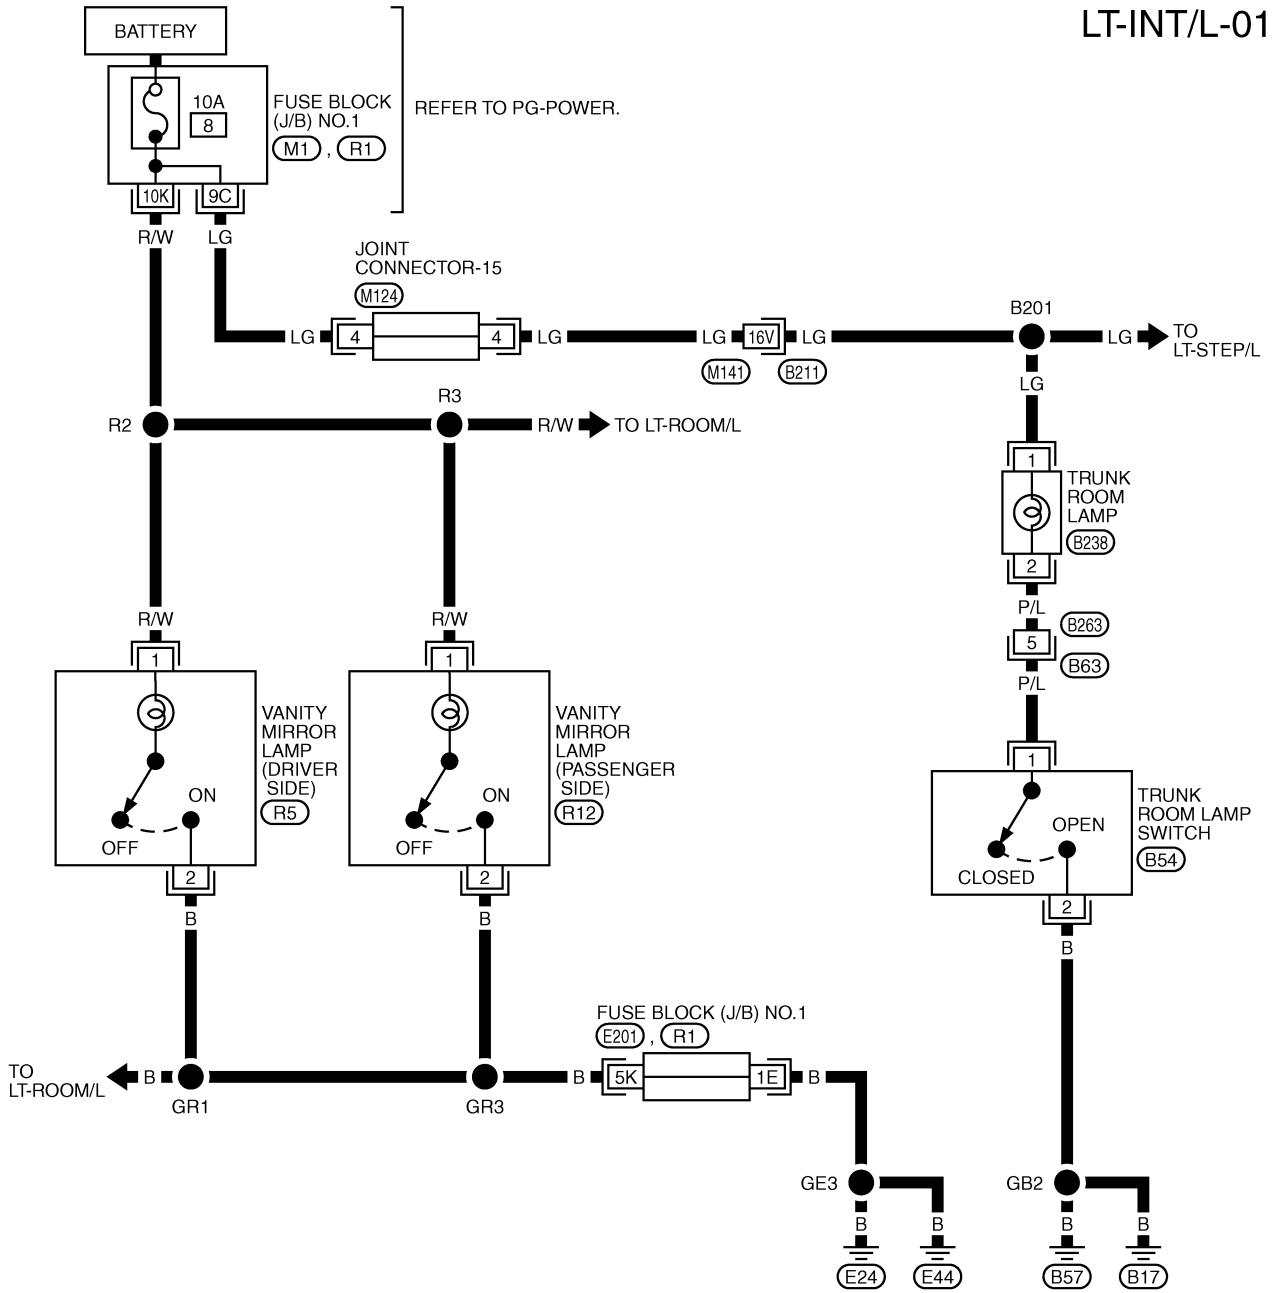

REFER TO THE FOLLOWING.  
 (B211) -SUPER MULTIPLE JUNCTION (SMJ)  
 (M1) , (E201) , (R1) -FUSE BLOCK-JUNCTION BOX (J/B) NO.1

TKWM0044E


# VANITY MIRROR AND TRUNK ROOM LAMPS

## Bulb Replacement VANITY MIRROR LAMP

EKS000UD

1. Insert a thin screwdriver in the notch and remove the lens.
2. Remove the bulb.


**Vanity mirror lamp : 12V 1.4W**

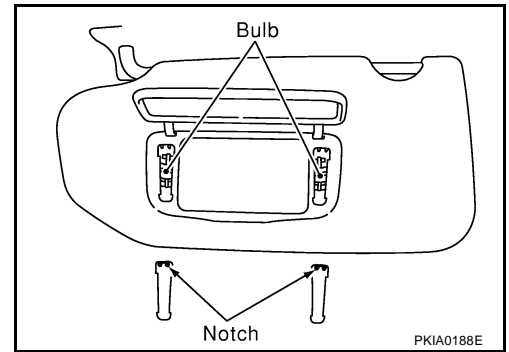

## TRUNK ROOM LAMP

1. Unfold pawl A and remove the lens.
2. Remove the bulb.
3. Remove the trunk room lamp while pressing pawl B in the direction of the arrow.
4. Disconnect the trunk room lamp connector.

**Trunk room lamp : 12V 3.4W**

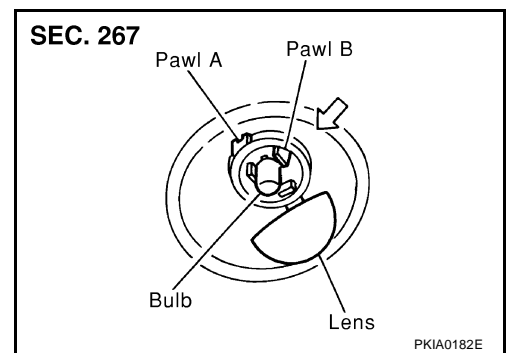

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# BULB SPECIFICATIONS

## BULB SPECIFICATIONS

PFP:26297

### Headlamp

EKS0018Q

Item	Wattage (W)
Low	35 (D2S)
High	55W (H1)

### Exterior Lamp

EKS0018R

Item	Wattage (W)	
Front combination lamp	Turn signal lamp	27(amber)
	Parking lamp (Clearance lamp)	5
	Side marker lamp	5
Rear combination lamp	Stop/Tail lamp	21/5
	Turn signal lamp	21
	Back-up lamp	18
License plate lamp	5	
High-mounted stop lamp	18	

### Interior Lamp/Illumination

EKS0018S

Item	Wattage (W)
Map lamp	8
Personal lamp	8
Step lamp	2.7
Vanity mirror lamp	1.4
Trunk room lamp	3.4