

SECTION **HA**

HEATER & AIR CONDITIONING SYSTEM

A
B
C
D
E
F
G
H
HA
J
K
L
M
N
O
P

CONTENTS

<p>2.0L TURBO GASOLINE ENGINE</p> <p>PRECAUTION 4</p> <p>PRECAUTIONS 4</p> <p style="padding-left: 20px;">Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"4</p> <p style="padding-left: 20px;">Precautions for Removing Battery Terminal4</p> <p style="padding-left: 20px;">Precaution for Procedure without Cowl Top Cover.....5</p> <p style="padding-left: 20px;">Precautions For Refrigerant System Service5</p> <p style="padding-left: 20px;">Service Equipment8</p> <p>PREPARATION10</p> <p>PREPARATION10</p> <p style="padding-left: 20px;">Special Service Tool10</p> <p style="padding-left: 20px;">Commercial Service Tool12</p> <p style="padding-left: 20px;">Sealant or/and Lubricant12</p> <p>SYSTEM DESCRIPTION14</p> <p>COMPONENT PARTS14</p> <p>REFRIGERATION SYSTEM14</p> <p style="padding-left: 20px;">REFRIGERATION SYSTEM : Component Parts Location 14</p> <p>HEATER & COOLING UNIT ASSEMBLY14</p> <p style="padding-left: 20px;">HEATER & COOLING UNIT ASSEMBLY : Heater & Cooling Unit15</p> <p style="padding-left: 20px;">HEATER & COOLING UNIT ASSEMBLY : Evaporator15</p> <p style="padding-left: 20px;">HEATER & COOLING UNIT ASSEMBLY : Expansion Valve15</p> <p>CONDENSER15</p> <p style="padding-left: 20px;">CONDENSER : Condenser15</p> <p style="padding-left: 20px;">CONDENSER : Liquid Tank16</p> <p style="padding-left: 20px;">Compressor16</p> <p>SYSTEM17</p> <p style="padding-left: 20px;">System Diagram17</p>	<p style="padding-left: 20px;">System Description17</p> <p>BASIC INSPECTION18</p> <p>DIAGNOSIS AND REPAIR WORKFLOW18</p> <p style="padding-left: 20px;">Work Flow18</p> <p>REFRIGERANT20</p> <p style="padding-left: 20px;">Description20</p> <p style="padding-left: 20px;">Leak Test20</p> <p style="padding-left: 20px;">Recycle Refrigerant22</p> <p style="padding-left: 20px;">Charge Refrigerant22</p> <p>LUBRICANT24</p> <p style="padding-left: 20px;">Description24</p> <p style="padding-left: 20px;">Inspection24</p> <p style="padding-left: 20px;">Perform Lubricant Return Operation24</p> <p style="padding-left: 20px;">Lubricant Adjusting Procedure for Components Replacement Except Compressor24</p> <p style="padding-left: 20px;">Lubricant Adjusting Procedure for Compressor Replacement25</p> <p>PERFORMANCE TEST26</p> <p style="padding-left: 20px;">Inspection26</p> <p>SYMPTOM DIAGNOSIS28</p> <p>REFRIGERATION SYSTEM SYMPTOMS28</p> <p style="padding-left: 20px;">Trouble Diagnosis For Unusual Pressure28</p> <p style="padding-left: 20px;">Symptom Table28</p> <p>NOISE30</p> <p style="padding-left: 20px;">Symptom Table30</p> <p>REMOVAL AND INSTALLATION31</p> <p>COMPRESSOR31</p> <p style="padding-left: 20px;">Exploded View31</p> <p style="padding-left: 20px;">Removal and Installation31</p> <p style="padding-left: 20px;">Inspection32</p> <p>COOLER PIPE AND HOSE33</p> <p style="padding-left: 20px;">Exploded View33</p>
--	---

LOW-PRESSURE FLEXIBLE HOSE	34	PRECAUTIONS	53
LOW-PRESSURE FLEXIBLE HOSE : Removal and Installation	34	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER"	53
HIGH-PRESSURE FLEXIBLE HOSE	34	Precautions for Removing Battery Terminal	53
HIGH-PRESSURE FLEXIBLE HOSE : Removal and Installation	34	Precaution for Procedure without Cowl Top Cover... ..	54
LOW-PRESSURE PIPE	35	Precautions For Refrigerant System Service	54
LOW-PRESSURE PIPE : Removal and Installa- tion	35	Service Equipment	57
HIGH-PRESSURE PIPE	36	PREPARATION	59
HIGH-PRESSURE PIPE : Removal and Installa- tion	36	PREPARATION	59
CONDENSER	38	Special Service Tool	59
Exploded View	38	Commercial Service Tool	61
CONDENSER	38	Sealant or/and Lubricant	61
CONDENSER : Removal and Installation	38	SYSTEM DESCRIPTION	63
CONDENSER PIPE ASSEMBLY	39	COMPONENT PARTS	63
CONDENSER PIPE ASSEMBLY : Removal and Installation	40	REFRIGERATION SYSTEM	63
REFRIGERANT PRESSURE SENSOR	40	REFRIGERATION SYSTEM : Component Parts Location	63
REFRIGERANT PRESSURE SENSOR : Remov- al and Installation	40	HEATER & COOLING UNIT ASSEMBLY	63
HEATER & COOLING UNIT ASSEMBLY	42	HEATER & COOLING UNIT ASSEMBLY : Heater & Cooling Unit	64
Exploded View	42	HEATER & COOLING UNIT ASSEMBLY : Evap- orator	64
HEATER & COOLING UNIT ASSEMBLY	44	HEATER & COOLING UNIT ASSEMBLY : Expan- sion Valve	64
HEATER & COOLING UNIT ASSEMBLY : Re- moval and Installation	44	CONDENSER	64
HEATER CORE	46	CONDENSER : Condenser	64
HEATER CORE : Removal and Installation	46	CONDENSER : Liquid Tank	65
EVAPORATOR	47	Compressor	65
EVAPORATOR : Removal and Installation	47	SYSTEM	66
EVAPORATOR PIPE ASSEMBLY	48	System Diagram	66
EVAPORATOR PIPE ASSEMBLY : Removal and Installation	48	System Description	66
EXPANSION VALVE	49	BASIC INSPECTION	67
EXPANSION VALVE : Removal and Installation ...	50	DIAGNOSIS AND REPAIR WORKFLOW	67
SERVICE DATA AND SPECIFICATIONS (SDS)	52	Work Flow	67
SERVICE DATA AND SPECIFICATIONS (SDS)	52	REFRIGERANT	69
Compressor	52	Description	69
Lubricant	52	Leak Test	69
Refrigerant	52	Recycle Refrigerant	71
Engine Idling Speed	52	Charge Refrigerant	71
Belt Tension	52	LUBRICANT	73
VR30DDTT		Description	73
PRECAUTION	53	Inspection	73
		Perform Lubricant Return Operation	73
		Lubricant Adjusting Procedure for Components Replacement Except Compressor	73
		Lubricant Adjusting Procedure for Compressor Replacement	74
		PERFORMANCE TEST	75

Inspection	75	CONDENSER	88	
SYMPTOM DIAGNOSIS	77	CONDENSER : Removal and Installation	88	A
REFRIGERATION SYSTEM SYMPTOMS	77	CONDENSER PIPE ASSEMBLY	90	
Trouble Diagnosis For Unusual Pressure	77	CONDENSER PIPE ASSEMBLY : Removal and Installation	90	B
Symptom Table	77	REFRIGERANT PRESSURE SENSOR	90	
NOISE	79	REFRIGERANT PRESSURE SENSOR : Removal and Installation	90	C
Symptom Table	79	HEATER & COOLING UNIT ASSEMBLY	92	
REMOVAL AND INSTALLATION	80	Exploded View	92	D
COMPRESSOR	80	HEATER & COOLING UNIT ASSEMBLY	94	
Exploded View	80	HEATER & COOLING UNIT ASSEMBLY : Removal and Installation	94	E
Removal and Installation	80	HEATER CORE	96	
Inspection	82	HEATER CORE : Removal and Installation	96	F
COOLER PIPE AND HOSE	83	EVAPORATOR	97	
Exploded View	83	EVAPORATOR : Removal and Installation	97	G
LOW-PRESSURE FLEXIBLE HOSE	83	EVAPORATOR PIPE ASSEMBLY	98	
LOW-PRESSURE FLEXIBLE HOSE : Removal and Installation	84	EVAPORATOR PIPE ASSEMBLY : Removal and Installation	99	H
HIGH-PRESSURE FLEXIBLE HOSE	84	EXPANSION VALVE	100	
HIGH-PRESSURE FLEXIBLE HOSE : Removal and Installation	84	EXPANSION VALVE : Removal and Installation ..	100	HA
LOW-PRESSURE PIPE 1	85	SERVICE DATA AND SPECIFICATIONS (SDS)	102	
LOW-PRESSURE PIPE 1 : Removal and Installation	85	SERVICE DATA AND SPECIFICATIONS (SDS)	102	J
LOW-PRESSURE PIPE 2	86	Compressor	102	
LOW-PRESSURE PIPE 2 : Removal and Installation	86	Lubricant	102	K
HIGH-PRESSURE PIPE	86	Refrigerant	102	
HIGH-PRESSURE PIPE : Removal and Installation	86	Engine Idling Speed	102	L
CONDENSER	88	Belt Tension	102	
Exploded View	88			M
				N
				O
				P

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000012794026

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, it is recommended that all maintenance and repair be performed by an authorized NISSAN/INFINITI dealer.
- Improper repair, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery or batteries, and wait at least 3 minutes before performing any service.


Precautions for Removing Battery Terminal

INFOID:000000013525344

When disconnecting the battery terminal, pay attention to the following.

- Always use a 12V battery as power source.
- Never disconnect battery terminal while engine is running.
- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.
- For vehicles with the engine listed below, remove the battery terminal after a lapse of the specified time:

BR08DE	: 4 minutes	V9X engine	: 4 minutes
D4D engine	: 20 minutes	YD25DDTi	: 2 minutes
HR09DET	: 12 minutes	YS23DDT	: 4 minutes
HRA2DDT	: 12 minutes	YS23DDTT	: 4 minutes
K9K engine	: 4 minutes	ZD30DDTi	: 60 seconds
M9R engine	: 4 minutes	ZD30DDTT	: 60 seconds
R9M engine	: 4 minutes		

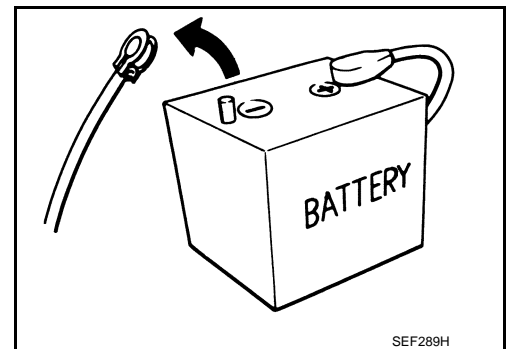

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- After high-load driving, if the vehicle is equipped with the V9X engine, turn the ignition switch OFF and wait for at least 15 minutes to remove the battery terminal.

NOTE:

PRECAUTIONS

[2.0L TURBO GASOLINE ENGINE]

< PRECAUTION >

- Turbocharger cooling pump may operate in a few minutes after the ignition switch is turned OFF.
- Example of high-load driving
 - Driving for 30 minutes or more at 140 km/h (86 MPH) or more.
 - Driving for 30 minutes or more on a steep slope.
- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.

NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.


NOTE:

The removal of 12V battery may cause a DTC detection error.

Precaution for Procedure without Cowl Top Cover

INFOID:000000012794027

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

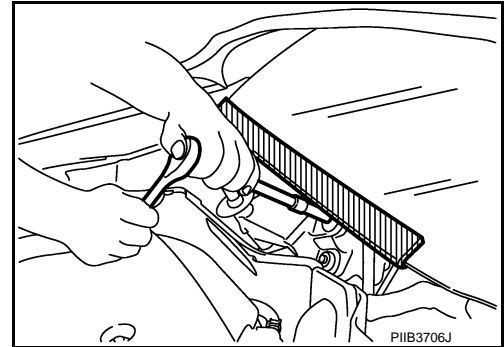

Precautions For Refrigerant System Service

INFOID:000000013525347

GENERAL REFRIGERANT PRECAUTION

WARNING:

- Never breathe A/C refrigerant and lubricant vapor or mist. Exposure may irritate eyes, nose and throat. Remove HFC-134a (R-134a) from the A/C system, using certified service equipment meeting requirements of SAE J-2210 [HFC-134a (R-134a) recycling equipment], or J-2209 [HFC-134a (R-134a) recovery equipment]. Ventilate work area before resuming service if accidental system discharge occurs. Additional health and safety information may be obtained from refrigerant and lubricant manufacturers.
- Never release refrigerant into the air. Use approved recovery/recycling recharging equipment to capture the refrigerant each time an air conditioning system is discharged.
- Wear always eye and hand protection (goggles and gloves) when working with any refrigerant or air conditioning system.
- Never store or heat refrigerant containers above 52°C (126°F).
- Never heat a refrigerant container with an open flame; Place the bottom of the container in a warm pail of water if container warming is required.
- Never intentionally drop, puncture, or incinerate refrigerant containers.
- Keep refrigerant away from open flames: poisonous gas is produced if refrigerant burns.
- Refrigerant displaces oxygen, therefore be certain to work in well ventilated areas to prevent suffocation.
- Never pressure test or leakage test HFC-134a (R-134a) service equipment and/or vehicle air conditioning systems with compressed air during repair. Some mixtures of air and HFC-134a (R-134a) have been shown to be combustible at elevated pressures. These mixtures, if ignited, may cause injury or property damage. Additional health and safety information may be obtained from refrigerant manufacturers.

WORKING WITH HFC-134a (R-134a)

CAUTION:

- CFC-12 (R-12) refrigerant and HFC-134a (R-134a) refrigerant are not compatible. Compressor malfunction is likely to occur if the refrigerants are mixed, refer to "CONTAMINATED REFRIGERANT" below. To determine the purity of HFC-134a (R-134a) in the vehicle and recovery tank, use Refrigerant recovery/recycling recharging equipment and Refrigerant Identifier.

PRECAUTIONS

[2.0L TURBO GASOLINE ENGINE]

< PRECAUTION >

- Use only specified lubricant for the HFC-134a (R-134a) A/C system and HFC-134a (R-134a) components. Compressor malfunction is likely to occur if lubricant other than that specified is used.
- The specified HFC-134a (R-134a) lubricant rapidly absorbs moisture from the atmosphere. The following handling precautions must be observed:
 - Cap (seal) immediately the component to minimize the entry of moisture from the atmosphere when removing refrigerant components from a vehicle.
 - Never remove the caps (unseal) until just before connecting the components when installing refrigerant components to a vehicle. Connect all refrigerant loop components as quickly as possible to minimize the entry of moisture into system.
 - Use only the specified lubricant from a sealed container. Reseal immediately containers of lubricant. Lubricant becomes moisture saturated and should not be used without proper sealing.
 - Never allow lubricant to come in contact with styrene foam parts. Damage may result.

CONTAMINATED REFRIGERANT

Take appropriate steps shown below if a refrigerant other than pure HFC-134a (R-134a) is identified in a vehicle:

- Explain to the customer that environmental regulations prohibit the release of contaminated refrigerant into the atmosphere.
- Explain that recovery of the contaminated refrigerant could damage service equipment and refrigerant supply.
- Suggest the customer return the vehicle to the location of previous service where the contamination may have occurred.
- In case of repairing, recover the refrigerant using only **dedicated equipment and containers. Never recover contaminated refrigerant into the existing service equipment.** Contact a local refrigerant product retailer for available service if the facility does not have dedicated recovery equipment. This refrigerant must be disposed of in accordance with all federal and local regulations. In addition, replacement of all refrigerant system components on the vehicle is recommended.
- The air conditioner warranty is void if the vehicle is within the warranty period. Please contact Nissan Customer Affairs for further assistance.

REFRIGERANT CONNECTION

A new type refrigerant connection has been introduced to all refrigerant lines except the following location.

- Expansion valve to evaporator
- Refrigerant pressure sensor to condenser & liquid tank assembly

WARNING:

Check that all refrigerant is discharged into the recycling equipment and the pressure in the system is less than atmospheric pressure. Then gradually loosen the discharge side hose fitting and remove it.

CAUTION:

Observe the following when replacing or cleaning refrigerant cycle components.

- Store it in the same way as it is when mounted on the car when the compressor is removed. Failure to do so will cause lubricant to enter the low-pressure chamber.
- Use always a torque wrench and a back-up wrench when connecting tubes.
- Plug immediately all openings to prevent entry of dust and moisture after disconnecting tubes.
- Connect the pipes at the final stage of the operation when installing an air conditioner in the vehicle. Never remove the seal caps of pipes and other components until just before required for connection.
- Allow components stored in cool areas to warm to working area temperature before removing seal caps. This prevents condensation from forming inside A/C components.
- Remove thoroughly moisture from the refrigeration system before charging the refrigerant.
- Replace always used O-rings.
- Apply lubricant to circle of the O-rings shown in illustration when connecting tube. Be careful not to apply lubricant to threaded portion.

Name : ND-OIL 12


- O-ring must be closely attached to the groove portion of tube.
- Be careful not to damage O-ring and tube when replacing the O-ring.
- Connect tube until a click can be heard. Then tighten the nut or bolt by hand. Check that the O-ring is installed to tube correctly.

PRECAUTIONS

[2.0L TURBO GASOLINE ENGINE]

< PRECAUTION >

- Perform leakage test and make sure that there is no leakage from connections after connecting line. Disconnect that line and replace the O-ring when the refrigerant leaking point is found. Then tighten connections of seal seat to the specified torque.

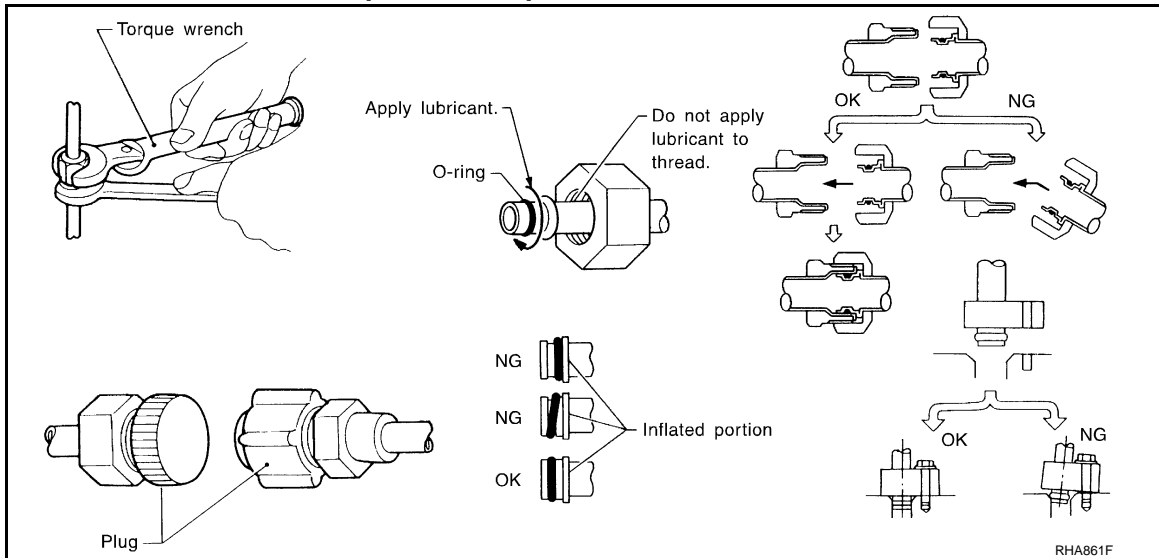

COMPRESSOR

CAUTION:

- Plug all openings to prevent moisture and foreign matter from entering.
- Store it in the same way as it is when mounted on the car when the compressor is removed.
- Follow "Maintenance of Lubricant Quantity in Compressor" exactly when replacing or repairing compressor. Refer to [HA-24, "Description"](#).
- Keep friction surfaces between clutch and pulley clean. Wipe it off by using a clean waste cloth moistened with thinner if the surface is contaminated with lubricant.
- Turn the compressor shaft by hand more than five turns in both directions after compressor service operation. This distributes equally lubricant inside the compressor. Let the engine idle and operate the compressor for one hour after the compressor is installed.
- Apply voltage to the new one and check for normal operation after replacing the compressor magnet clutch.

LEAK DETECTION DYE

CAUTION:

- The A/C system contains a fluorescent leak detection dye used for locating refrigerant leakages. An ultraviolet (UV) lamp is required to illuminate the dye when inspecting for leakages.
- Wear always fluorescence enhancing UV safety goggles to protect eyes and enhance the visibility of the fluorescent dye.
- The fluorescent dye leak detector is not a replacement for an electrical leak detector (SST: J-41995). The fluorescent dye leak detector should be used in conjunction with an electrical leak detector (SST: J-41995) to pin-point refrigerant leakages.
- Read and follow all manufacturer's operating instructions and precautions prior to performing the work for the purpose of safety and customer's satisfaction.
- A compressor shaft seal should not necessarily be repaired because of dye seepage. The compressor shaft seal should only be repaired after confirming the leakage with an electrical leak detector (SST: J-41995).
- Remove always any remaining dye from the leakage area after repairs are completed to avoid a misdiagnosis during a future service.
- Never allow dye to come into contact with painted body panels or interior components. Clean immediately with the approved dye cleaner if dye is spilled. Fluorescent dye left on a surface for an extended period of time cannot be removed.
- Never spray the fluorescent dye cleaning agent on hot surfaces (engine exhaust manifold, etc.).
- Never use more than one refrigerant dye bottle [1/4 ounce (7.4 cc)] per A/C system.
- Leak detection dyes for HFC-134a (R-134a) and CFC-12 (R-12) A/C systems are different. Never use HFC-134a (R-134a) leak detection dye in CFC-12 (R-12) A/C system, or CFC-12 (R-12) leak detection dye in HFC-134a (R-134a) A/C system, or A/C system damage may result.
- The fluorescent properties of the dye remains for three or more years unless a compressor malfunction occurs.

PRECAUTIONS

[2.0L TURBO GASOLINE ENGINE]

< PRECAUTION >

Service Equipment

INFOID:000000013525348

RECOVERY/RECYCLING RECHARGING EQUIPMENT

Be certain to follow the manufacturer's instructions for machine operation and machine maintenance. Never introduce any refrigerant other than that specified into the machine.

ELECTRICAL LEAK DETECTOR


Be certain to follow the manufacturer's instructions for tester operation and tester maintenance.

VACUUM PUMP

The lubricant contained inside the vacuum pump is not compatible with the specified lubricant for HFC-134a (R-134a) A/C systems. The vent side of the vacuum pump is exposed to atmospheric pressure. So the vacuum pump lubricant may migrate out of the pump into the service hose. This is possible when the pump is switched OFF after evacuation (vacuuming) and hose is connected to it. To prevent this migration, use a manual valve placed near the hose-to-pump connection, as per the following.


- Vacuum pumps usually have a manual isolator valve as part of the pump. Close this valve to isolate the service hose from the pump.
- Use a hose equipped with a manual shut-off valve near the pump end for pumps without an isolator. Close the valve to isolate the hose from the pump.
- Disconnect the hose from the pump if the hose has an automatic shut-off valve. As long as the hose is connected, the valve is open and lubricating oil may migrate.

Some one-way valves open when vacuum is applied and close under no vacuum condition. Such valves may restrict the pump's ability to pull a deep vacuum and are not recommended.

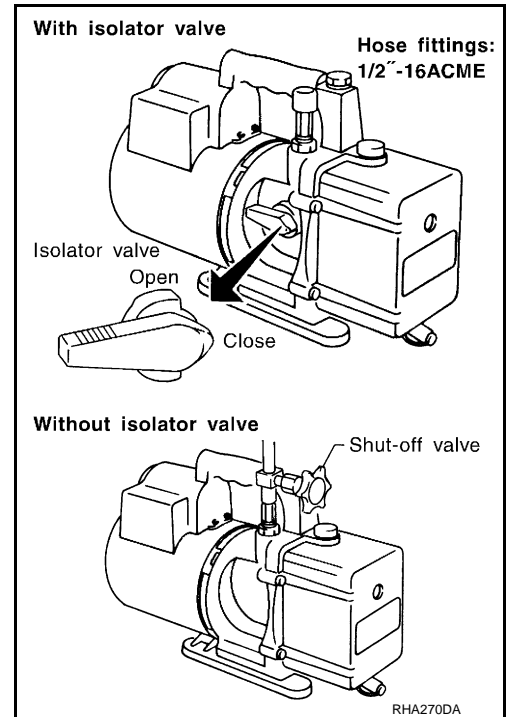


MANIFOLD GAUGE SET

Be certain that the gauge face indicates HFC-134a or R-134a. Be sure the gauge set has 1/2"-16 ACME threaded connections for service hoses. Confirm the set has been used only with refrigerant HFC-134a (R-134a) and specified lubricants.

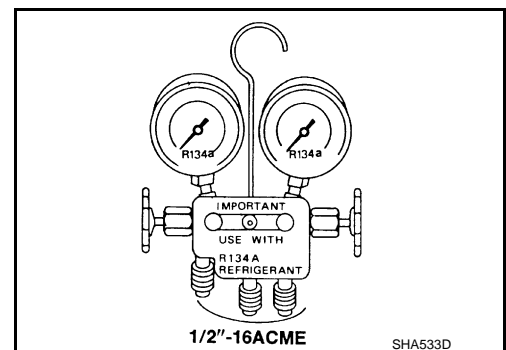

SERVICE HOSES

Be certain that the service hoses display the markings described (colored hose with black stripe). All hoses must equip positive shut-off devices (either manual or automatic) near the end of the hoses opposite to the manifold gauge.

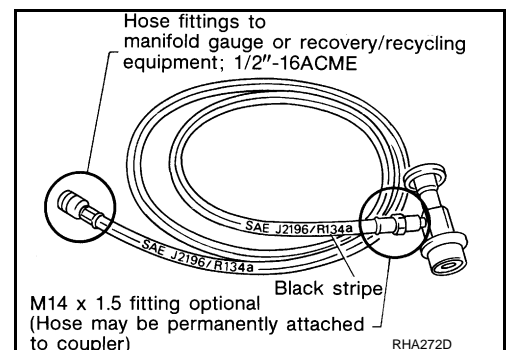

SERVICE COUPLERS


PRECAUTIONS

< PRECAUTION >

[2.0L TURBO GASOLINE ENGINE]


Never attempt to connect HFC-134a (R-134a) service couplers to the CFC-12 (R-12) A/C system. The HFC-134a (R-134a) couplers do not properly connect to the CFC-12 (R-12) system. However, if an improper connection is attempted, discharging and contamination may occur.

Shut-off valve rotation	A/C service valve
Clockwise	Open
Counterclockwise	Close

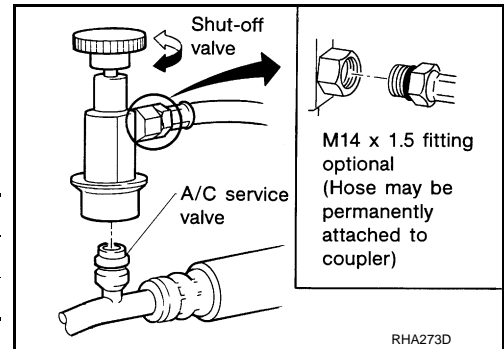

REFRIGERANT WEIGHT SCALE

Verify that no refrigerant other than HFC-134a (R-134a) and specified lubricants have been used with the scale. The hose fitting must be 1/2"-16 ACME if the scale controls refrigerant flow electronically.

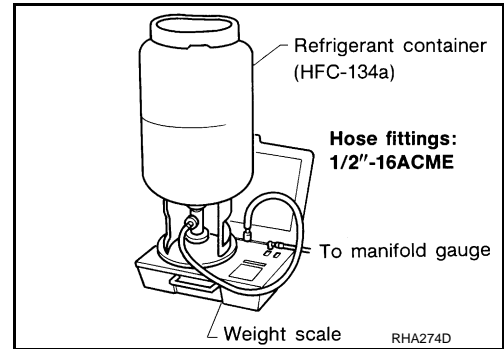

CHARGING CYLINDER

Using a charging cylinder is not recommended. Refrigerant may be vented into air from cylinder's top valve when filling the cylinder with refrigerant. Also, the accuracy of the cylinder is generally less than that of an electronic scale or of quality recycle/recharge equipment.

A
B
C
D
E
F
G
H
HA
J
K
L
M
N
O
P

PREPARATION

PREPARATION


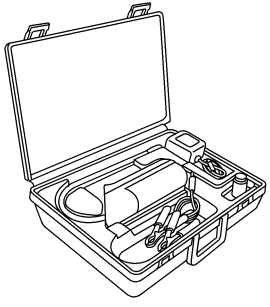
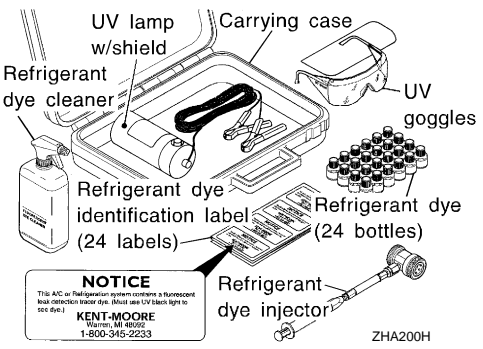
Special Service Tool

INFOID:000000012794031

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

HFC-134a (R-134a) Service Tool and Equipment



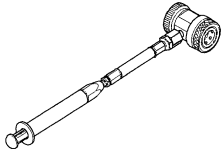

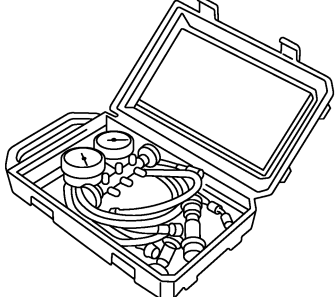
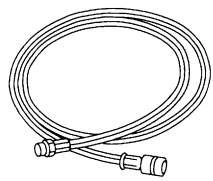
- Never mix HFC-134a (R-134a) refrigerant and/or its specified lubricant with CFC-12 (R-12) refrigerant and/or its lubricant.
- Separate and non-interchangeable service equipment must be used for handling each type of refrigerant/lubricant.
- Refrigerant container fittings, service hose fittings and service equipment fittings (equipment which handles refrigerant and/or lubricant) are different between CFC-12 (R-12) and HFC-134a (R-134a). This is to avoid mixed use of the refrigerants/lubricant.
- Never use adapters that convert one size fitting to another: refrigerant/lubricant contamination occurs and compressor malfunction may result.

Tool number (Kent-Moore No.) Tool name	Description
(ACR2005-NI) ACR5 A/C Service Center	 Function: Refrigerant recovery, recycling and recharging
(J-41995) Electrical leak detector	 Power supply: DC 12 V (Battery terminal)
(J-43926) Refrigerant dye leak detection kit Kit includes: (J-42220) UV lamp and UV safety goggles (J-41459) HFC-134a (R-134a) dye injector Use with J-41447, 1/4 ounce bottle (J-41447) HFC-134a (R-134a) fluorescent leak detection dye (Box of 24, 1/4 ounce bottles) (J-43872) Refrigerant dye cleaner	 Power supply: DC 12 V (Battery terminal)

PREPARATION

< PREPARATION >




[2.0L TURBO GASOLINE ENGINE]

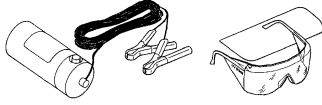Tool number (Kent-Moore No.) Tool name	Description	A
(J-42220) UV lamp and UV safety goggles  SHA438F	Power supply: DC 12 V (Battery terminal) For checking refrigerant leakage when fluorescent dye is equipped in A/C system Includes: UV lamp and UV safety goggles	B C
(J-41447) HFC-134a (R-134a) fluorescent leak detection dye (Box of 24, 1/4 ounce bottles)  Refrigerant dye (24 bottles) SHA439F	Application: For HFC-134a (R-134a) PAG oil Container: 1/4 ounce (7.4 cc) bottle (Includes self-adhesive dye identification labels for affixing to vehicle after charging system with dye.)	D E F
(J-41459) HFC-134a (R-134a) dye injector Use with J-41447, 1/4 ounce bottle  SHA440F	For injecting 1/4 ounce of fluorescent leak detection dye into A/C system	G H
(J-43872) Refrigerant dye cleaner  SHA441F	For cleaning dye spills	HA J
(J-39183) Manifold gauge set (with hoses and couplers)  RJIA0196E	Identification: <ul style="list-style-type: none"> The gauge face indicates HFC-134a (R-134a). Fitting size: Thread size <ul style="list-style-type: none"> 1/2"-16 ACME 	K L M
Service hoses <ul style="list-style-type: none"> High-pressure side hose (J-39501-72) Low-pressure side hose (J-39502-72) Utility hose (J-39476-72)  S-NT201	Hose color: <ul style="list-style-type: none"> Low-pressure side hose: Blue with black stripe High-pressure side hose: Red with black stripe Utility hose: Yellow with black stripe or green with black stripe Hose fitting to gauge: <ul style="list-style-type: none"> 1/2"-16 ACME 	N O P

PREPARATION


< PREPARATION >

[2.0L TURBO GASOLINE ENGINE]

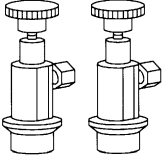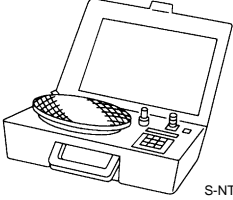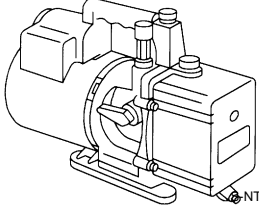Tool number (Kent-Moore No.) Tool name	Description
<p>Service couplers</p> <ul style="list-style-type: none"> • High-pressure side coupler (J-39500-20) • Low-pressure side coupler (J-39500-24) <div style="text-align: center;">  <p style="font-size: small;">S-NT202</p> </div>	<p>Hose fitting to service hose: M14 x 1.5 fitting is optional or permanently attached.</p>
<p>(J-39650) Refrigerant weight scale</p> <div style="text-align: center;">  <p style="font-size: small;">S-NT200</p> </div>	<p>For measuring of refrigerant Fitting size: Thread size 1/2"-16 ACME</p>
<p>(J-39649) Vacuum pump (Including the isolator valve)</p> <div style="text-align: center;">  <p style="font-size: small;">S-NT203</p> </div>	<p>Capacity:</p> <ul style="list-style-type: none"> • Air displacement: 4 CFM • Micron rating: 20 microns • Oil capacity: 482 g (17 oz) <p>Fitting size: Thread size</p> <ul style="list-style-type: none"> • 1/2"-16 ACME

Commercial Service Tool

INFOID:000000012794032

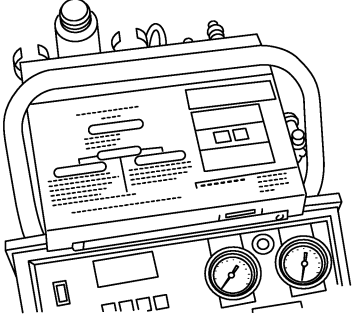Tool name	Description
<p>Refrigerant identifier equipment</p> <div style="text-align: center;">  <p style="font-size: x-small;">RJA0197E</p> </div>	<p>Checking for refrigerant purity and system contamination</p>

Sealant or/and Lubricant

INFOID:000000012794033



HFC-134a (R-134a) Service Tool and Equipment

- Never mix HFC-134a (R-134a) refrigerant and/or its specified lubricant with CFC-12 (R-12) refrigerant and/or its lubricant.
- Separate and non-interchangeable service equipment must be used for handling each type of refrigerant/lubricant.
- Refrigerant container fittings, service hose fittings and service equipment fittings (equipment which handles refrigerant and/or lubricant) are different between CFC-12 (R-12) and HFC-134a (R-134a). This is to avoid mixed use of the refrigerants/lubricant.
- Never use adapters that convert one size fitting to another: refrigerant/lubricant contamination occurs and compressor malfunction may result.

PREPARATION

< PREPARATION >

[2.0L TURBO GASOLINE ENGINE]

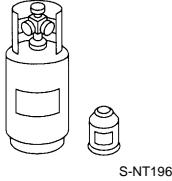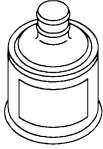Tool name	Description
<p>HFC-134a (R-134a) refrigerant</p>  <p style="text-align: center;">S-NT196</p>	<p>Container color: Light blue Container marking: HFC-134a (R-134a) Fitting size: Thread size</p> <ul style="list-style-type: none"> • Large container 1/2"-16 ACME
<p>A/C System Oil ND-OIL 12</p>  <p style="text-align: center;">JMIA1759ZZ</p>	<p>Type: Polyalkylene glycol oil (PAG), Application: HFC-134a (R-134a) swash plate compressors Capacity: 40 mℓ (1.4 US fl oz., 1.4 Imp fl oz)</p>

A
B
C
D
E
F
G
H
HA
J
K
L
M
N
O
P

HA


< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

COMPONENT PARTS REFRIGERATION SYSTEM

REFRIGERATION SYSTEM : Component Parts Location

INFOID:000000012794034

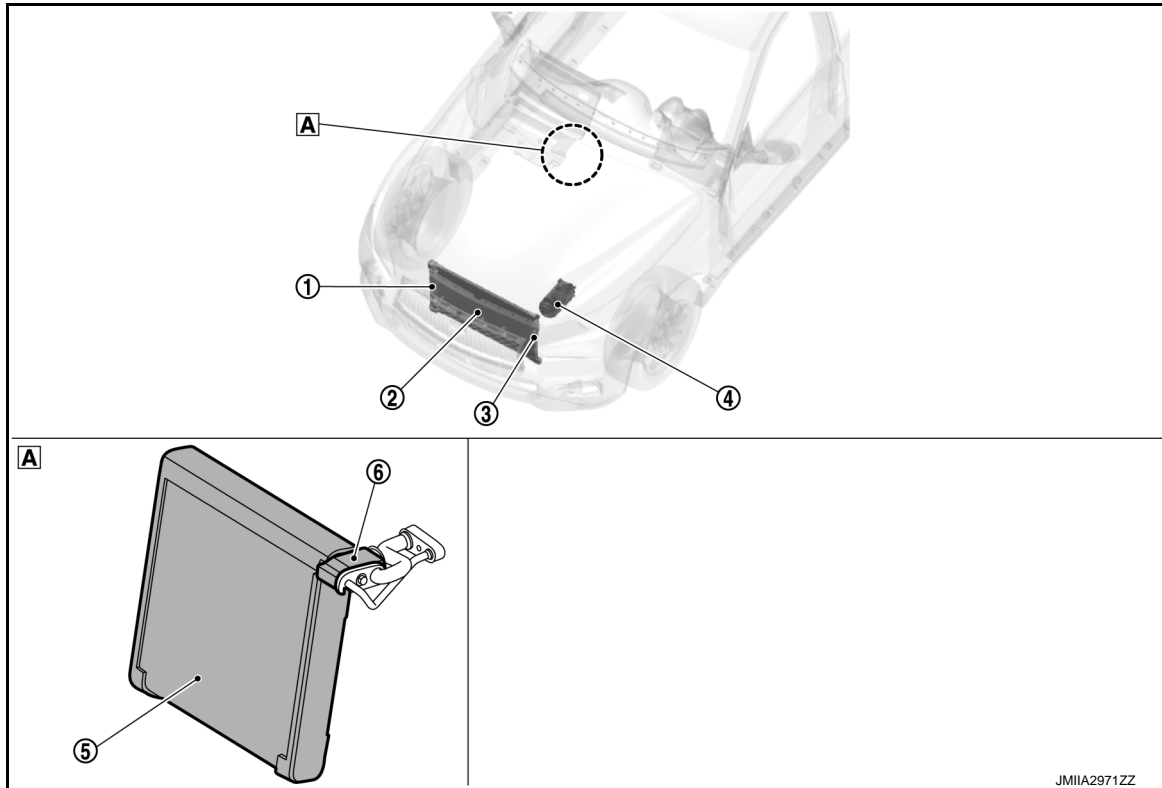

A In the heater & cooling unit assembly

No.	Location	Function
①	Liquid tank (Condenser & liquid tank assembly)	Refer to HA-16, "CONDENSER : Liquid Tank" .
②	Condenser (Condenser & liquid tank assembly)	Refer to HA-15, "CONDENSER : Condenser" .
③	Refrigerant pressure sensor	Refer to HAC-16, "Refrigerant Pressure Sensor" .
④	Compressor	Refer to HA-16, "Compressor" .
⑤	Evaporator	Refer to HA-15, "HEATER & COOLING UNIT ASSEMBLY : Evaporator" .
⑥	Expansion valve	Refer to HA-15, "HEATER & COOLING UNIT ASSEMBLY : Expansion Valve" .

HEATER & COOLING UNIT ASSEMBLY

COMPONENT PARTS

< SYSTEM DESCRIPTION >


[2.0L TURBO GASOLINE ENGINE]

HEATER & COOLING UNIT ASSEMBLY : Heater & Cooling Unit

INFOID:000000012794035

This system utilizes a heater & cooling unit that combines blower unit, heater unit, and cooling unit.


↶ : Vehicle front

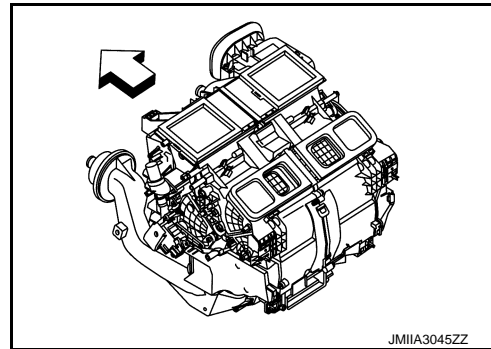

HEATER & COOLING UNIT ASSEMBLY : Evaporator

INFOID:000000012794036


- A thin laminate pipeless evaporator is used.
- The mist from liquid refrigerant transforms to gas by evaporation by the air conveyed from blower motor. The air is cooled by the heat by evaporation.

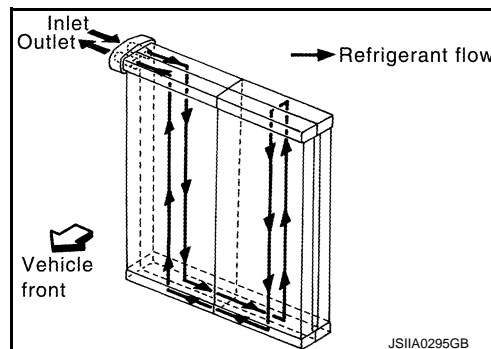

HEATER & COOLING UNIT ASSEMBLY : Expansion Valve

INFOID:000000012794037

The refrigerant temperature is detected by the temperature sensing part located in low-pressure refrigerant path inside expansion valve. The lift amount of high-pressure side ball valve is changed to regulate the refrigerant flow.

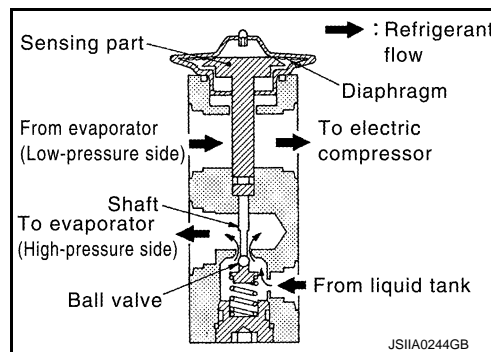

CONDENSER

CONDENSER : Condenser

INFOID:000000012794038

DESCRIPTION

- A sub-cool condenser that combines a parallel-flow condenser and liquid tank in the sub-cool cycle is used.
- Cools refrigerant discharged from compressor, and transforms it to liquid refrigerant.


STRUCTURE AND OPERATION

COMPONENT PARTS

[2.0L TURBO GASOLINE ENGINE]

< SYSTEM DESCRIPTION >

The sub-cool section is installed on the condenser, and the liquid refrigerant that exits the liquid tank is further cooled by the condenser sub-cool section, increasing the amount of heat that the liquid refrigerant can absorb and improving cooling performance.

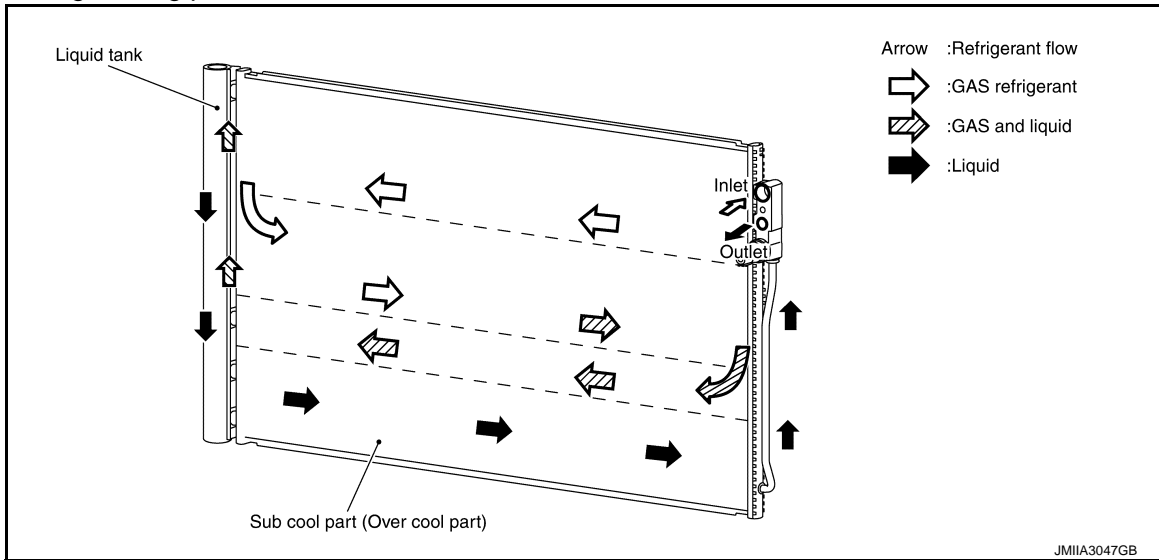

CONDENSER : Liquid Tank


INFOID:000000012794039

- A liquid tank compatible with HFC-134a refrigerant is used.
- Eliminates foreign matter in refrigerant, and stores temporarily liquid refrigerant.

Compressor


INFOID:000000012794040

Intakes, compresses, and discharges refrigerant, to circulate refrigerant inside the refrigerant cycle.

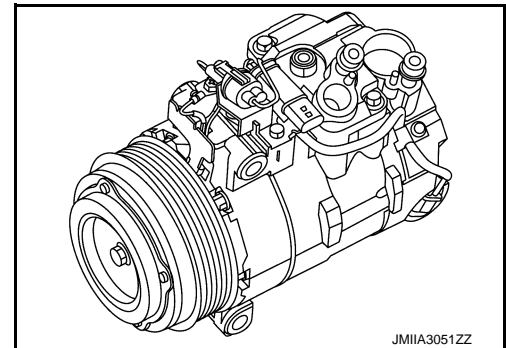

SYSTEM

System Diagram

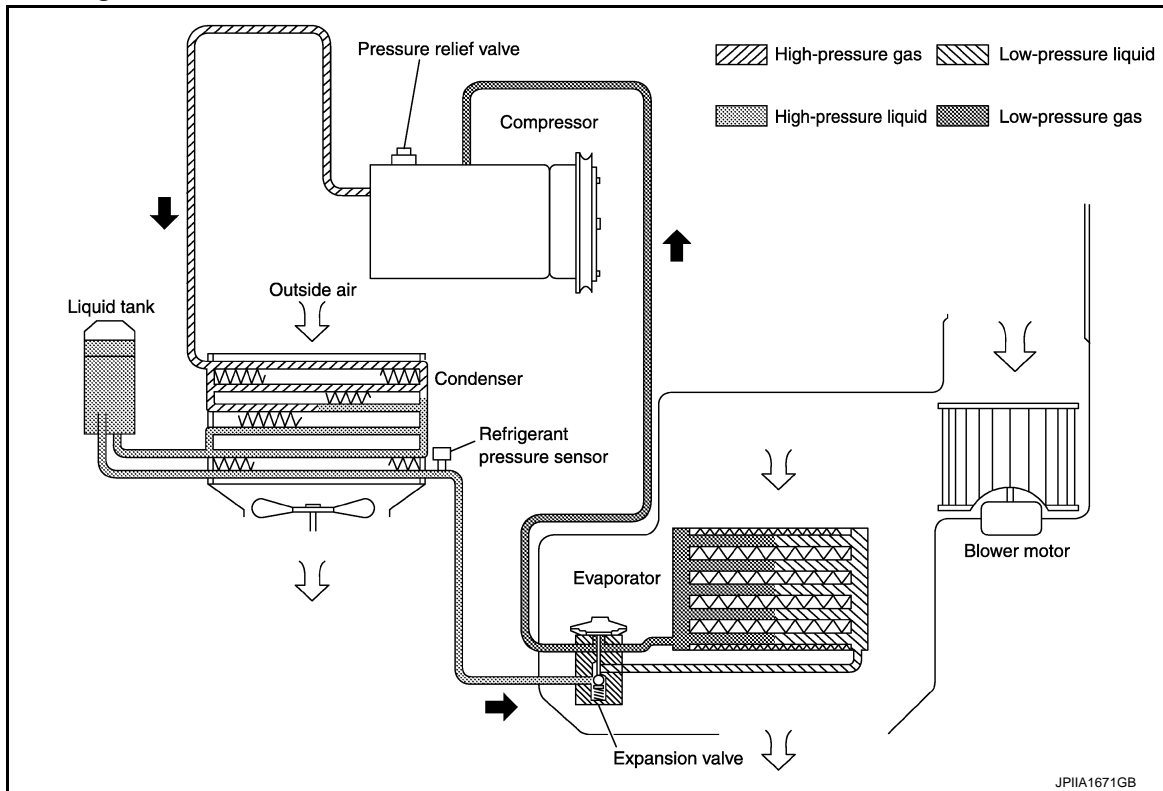

System Description

INFOID:000000012794042

REFRIGERANT CYCLE

Refrigerant Flow

The refrigerant from the compressor, flows the condenser & liquid tank assembly, the evaporator, and returns to the compressor. The refrigerant evaporation in the evaporator is controlled by an expansion valve.

Freeze Protection

To prevent evaporator from freezing up, the evaporator air temperature is monitored, and the voltage signal to the A/C auto amp. makes the A/C relay go OFF and stop the compressor.

REFRIGERANT SYSTEM PROTECTION

Refrigerant Pressure Sensor

- The refrigerant system is protected against excessively high- or low-pressures by the refrigerant pressure sensor, located to the condenser & liquid tank assembly. The refrigerant pressure sensor detects the pressure inside the refrigerant line and sends the voltage signal to the ECM if the system pressure rises above, or falls below the specifications.
- ECM turns the A/C relay to OFF and stops the compressor when the high-pressure side detected by refrigerant pressure sensor is following conditions;
 - Approximately 3,120 kPa (31.8 kg/cm², 452 psi) or more (Engine speed is 1,500 rpm or more.)
 - Approximately 2,740 kPa (27.9 kg/cm², 397 psi) or more (Engine speed is less than 1,500 rpm.)
 - Approximately 120 kPa (1.2 kg/cm², 17 psi) or less

Pressure Relief Valve

The refrigerant system is also protected by a pressure relief valve, located in the rear head of the compressor. The release port on the pressure relief valve automatically opens and releases refrigerant into the atmosphere when the pressure of refrigerant in the system increases to an unusual level [more than 3,800 kPa (38.8 kg/cm², 551 psi)].

A
B
C
D
E
F
G
H
HA

DIAGNOSIS AND REPAIR WORKFLOW

[2.0L TURBO GASOLINE ENGINE]

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000012794043

OVERALL SEQUENCE

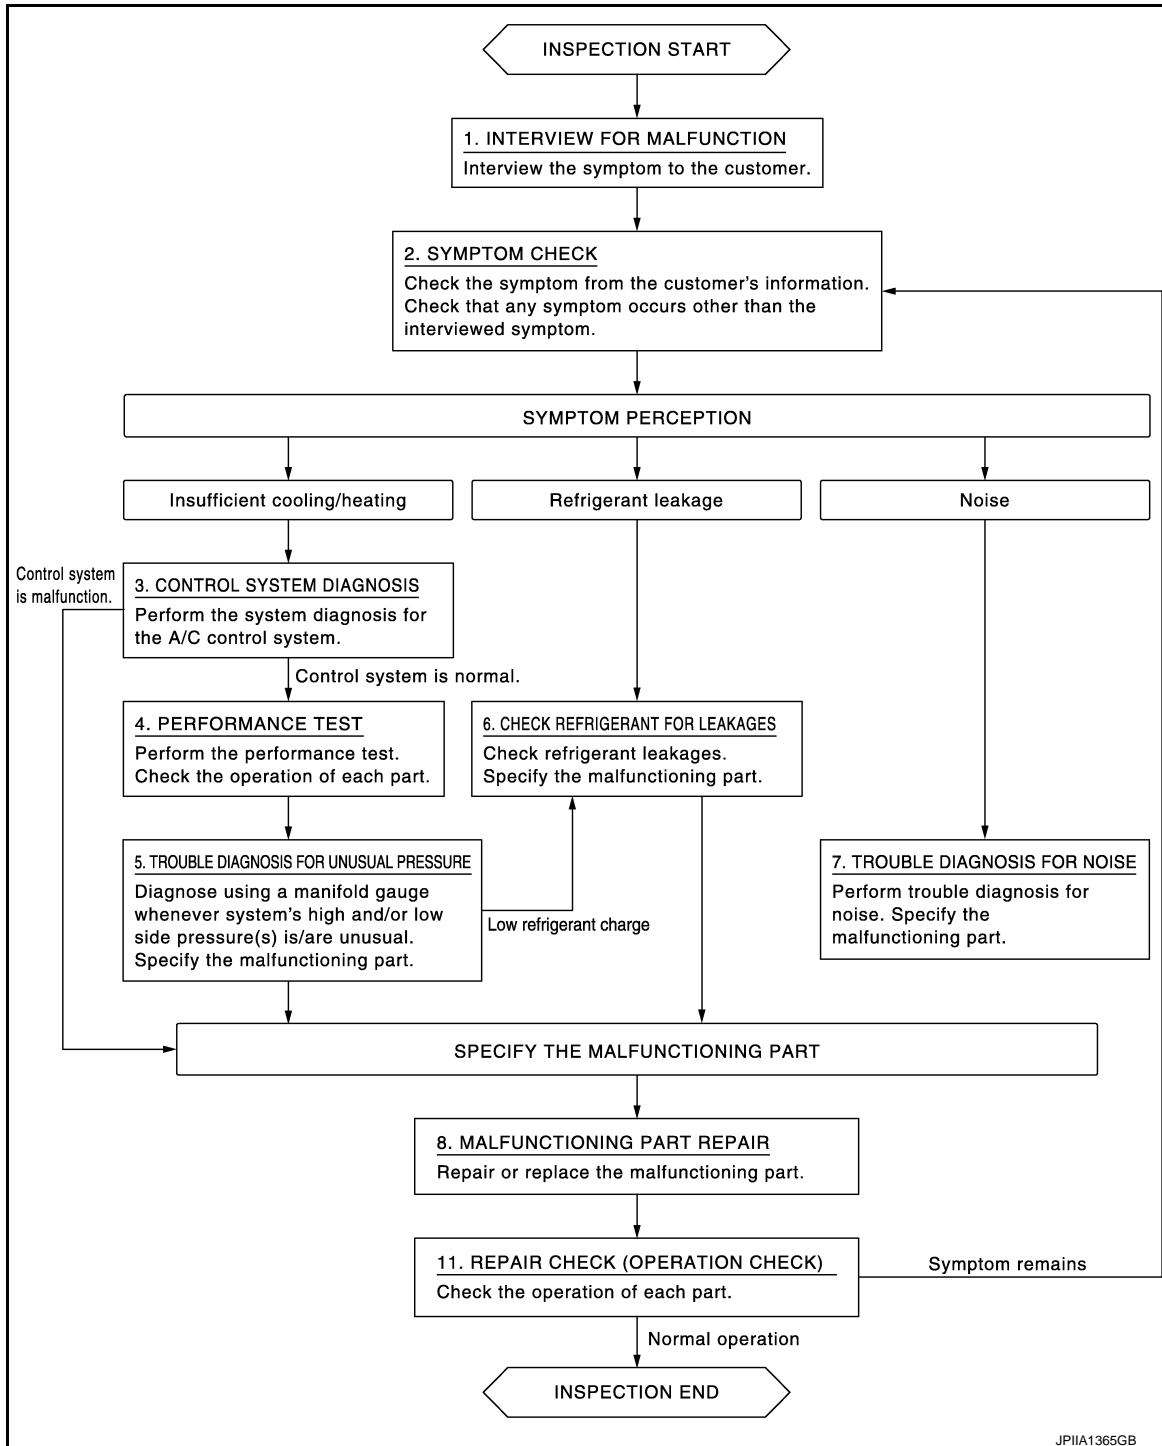

DETAILED FLOW

1. INTERVIEW FOR MALFUNCTION

Interview the symptom to the customer.

DIAGNOSIS AND REPAIR WORKFLOW

[2.0L TURBO GASOLINE ENGINE]

< BASIC INSPECTION >

>> GO TO 2.

2. SYMPTOM CHECK

Check the symptom from the customer's information. Check that any symptom occurs other than the interviewed symptom.

Insufficient cooling/heating>>GO TO 3.

Refrigerant leakage>>GO TO 6.

Noise >> GO TO 7.

3. CONTROL SYSTEM DIAGNOSIS

Perform the system diagnosis for the A/C control system. Refer to [HAC-70, "Work Flow"](#).

Is A/C control system normal?

YES >> GO TO 4.

NO >> GO TO 8.

4. PERFORMANCE TEST

Perform the performance test. Check the operation of each part. Refer to [HA-26, "Inspection"](#).

>> GO TO 5.

5. TROUBLE DIAGNOSIS FOR UNUSUAL PRESSURE

Diagnose using a manifold gauge whenever system's high and/or low side pressure(s) is/are unusual. Specify the malfunctioning part. Refer to [HA-28, "Symptom Table"](#).

Low refrigerant charge>>GO TO 6.

Except above>>GO TO 8.

6. CHECK REFRIGERANT FOR LEAKAGES

Check refrigerant for leakages. Specify the malfunctioning part. Refer to [HA-20, "Leak Test"](#).

>> GO TO 8.

7. TROUBLE DIAGNOSIS FOR NOISE

Perform trouble diagnosis for noise. Specify the malfunctioning part. Refer to [HA-30, "Symptom Table"](#).

>> GO TO 8.

8. MALFUNCTION PART REPAIR

Repair or replace the malfunctioning part.

>> GO TO 9.

9. REPAIR CHECK (OPERATION CHECK)

Check the operation of each part.

Does it operate normally?

YES >> INSPECTION END

NO >> GO TO 2.

A
B
C
D
E
F
G
H
HA
J
K
L
M
N
O
P

REFRIGERANT

< BASIC INSPECTION >


[2.0L TURBO GASOLINE ENGINE]

REFRIGERANT

Description

INFOID:000000012794044

CONNECTION OF SERVICE TOOLS AND EQUIPMENT

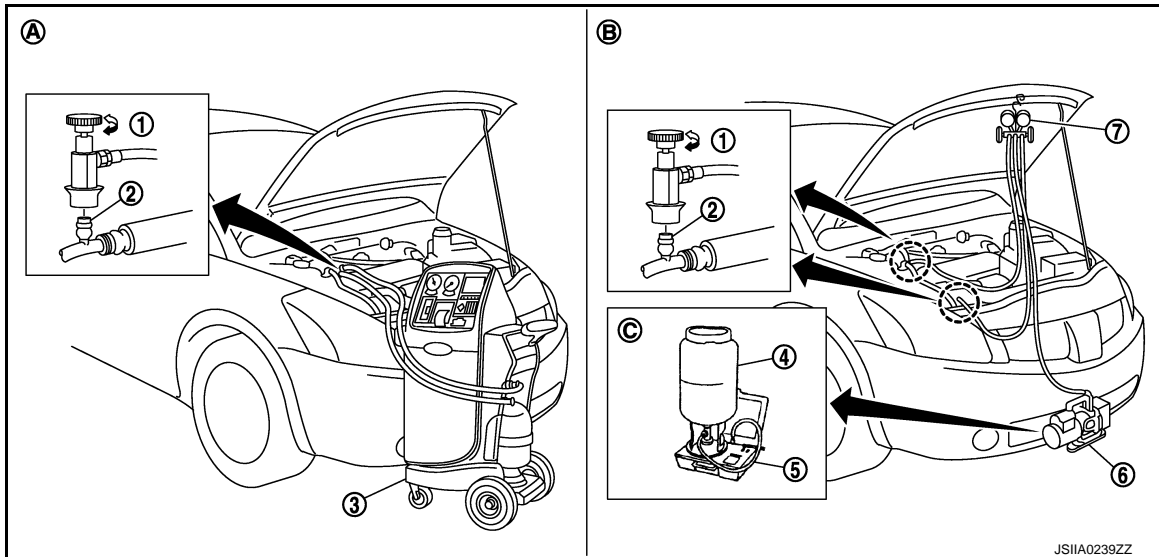


- ① Shut-off valve
- ② A/C service valve
- ③ Recovery/recycling/recharging equipment
- ④ Refrigerant container (HFC-134a)
- ⑤ Weight scale (J-39650)
- ⑥ Vacuum pump (J-39649)
- ⑦ Manifold gauge set (J-39183)
- ⑧ Preferred (best) method
- ⑨ Alternative method
- ⑩ For charging

Leak Test

INFOID:000000012794045

CHECK REFRIGERANT LEAKAGE USING FLUORESCENT LEAK DETECTION DYE

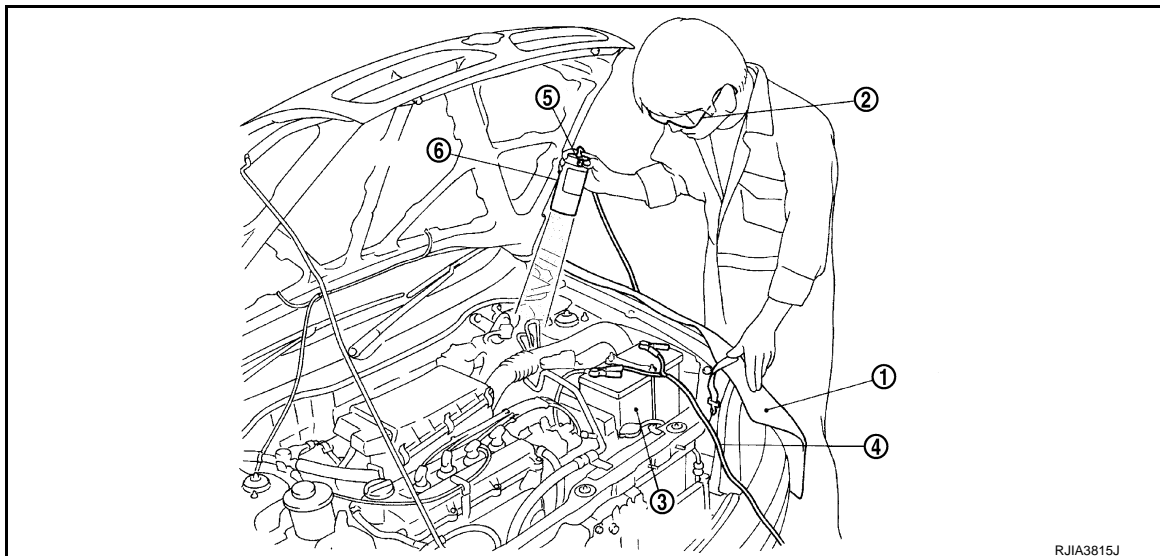

1. Install a fender cover ①.
2. Wear UV safety goggles ② provided with refrigerant dye leak detection kit (J-43926).
3. Connect power cable ④ of UV lamp ⑥ to positive and negative terminals of the battery ③.
4. Press UV lamp switch ⑤ and check A/C system for refrigerant leakage. (Where refrigerant leakage occurs, fluorescent leak detection dye appears in green color.)

REFRIGERANT

< BASIC INSPECTION >

[2.0L TURBO GASOLINE ENGINE]

WARNING:

Never look directly into UV lamp light source.

NOTE:

- For continuous operating time of UV lamp, follow the manufacturer operating instructions.
- Illuminate piping joints from different angles using UV lamp and check that there is no leakage.
- Use a mirror in area that is difficult to see to check refrigerant leakage.
- Refrigerant leakage from evaporator can be detected by soaking cotton swab or a similar material with drain hose water and illuminating it using UV lamp.
- Dust, dirt, and packing materials adhesive used for condenser, evaporator, and other locations may fluoresce. Be careful not to misidentify leakage.

5. Repair or replace parts where refrigerant leakage occurs and wipe off fluorescent leak detection dye.

NOTE:

Completely wipe off fluorescent leak detection dye from gaps between parts, screw threads, and others using a cotton swab or similar materials.

6. Use a UV lamp to check that no fluorescent leak detection dye remains after finishing work.

WARNING:

Never look directly into UV lamp light source.

NOTE:

- For continuous operating time of UV lamp, follow the manufacturer operating instructions.
- Dust, dirt, and packing materials adhesive used for condenser, evaporator, and other locations may fluoresce. Be careful not to misidentify leakage.

CHECK REFRIGERANT LEAKAGE USING ELECTRICAL LEAK DETECTOR

WARNING:

Never check refrigerant leakage while the engine is running.

CAUTION:

Be careful of the following items so that inaccurate checks or misidentifications are avoided.

- **Never allow refrigerant vapor, shop chemical vapors, cigarette smoke, or others around the vehicle.**
- **Always check refrigerant leakage in a low air flow environment so that refrigerant may not disperse when leakage occurs.**

1. Stop the engine.
2. Connect recovery/recycling/recharging equipment or manifold gauge set (J-39183) to A/C service valve.
3. Check that A/C refrigerant pressure is 345 kPa (3.52 kg/cm², 50 psi) or more when temperature is 16°C (61°F) or more. When pressure is lower than the specified value, recycle refrigerant completely and fill refrigerant to the specified level.

NOTE:

Leakages may not be detected if A/C refrigerant pressure is 345 kPa (3.52 kg/cm², 50 psi) or less when temperature is less than 16°C (61°F).

4. Clean area where refrigerant leakage check is performed, and check refrigerant leakage along all surfaces of pipe connections and A/C system components using electrical leak detector (J-41995) probe.

CAUTION:

- **Continue checking when a leakage is found. Always continue and complete checking along all pipe connections and A/C system components for additional leakage.**
- **When a leakage is detected, clean leakage area using compressed air and check again.**
- **When checking leakage of cooling unit inside, always clean inside of drain hose so that the probe surface may not be exposed to water or dirt.**

NOTE:

- Always check leakage starting from high-pressure side and continue to low-pressure side.
- When checking leakage of cooling unit inside, operate blower fan motor for 15 minutes or more at the maximum fan speed while the engine is stopped, and then insert electrical leak detector probe into drain hose and hold for 10 minutes or more.
- When disconnecting shut-off valve that is connected to A/C service valve, always evacuate remaining refrigerant so that misidentification can be avoided.

5. Repair or replace parts where refrigerant leakage is detected. (Leakage is detected but leakage area is unknown. GO TO 6.)
6. Start the engine and set A/C control in the following conditions.
 - A/C switch ON
 - Air flow: VENT (ventilation)

A

B

C

D

E

F

G

H

HA

J

K

L

M

N

O

P

REFRIGERANT

< BASIC INSPECTION >

[2.0L TURBO GASOLINE ENGINE]


- Intake door position: Recirculation
 - Temperature setting: Full cold
 - Fan (blower) speed: Maximum speed set
7. Run the engine at approximately 1,500 rpm for 2 minutes or more.
 8. Stop the engine. Check again for refrigerant leakage. GO TO 4.

WARNING:

Be careful not to get burned when the engine is hot.

NOTE:

- Start refrigerant leakage check immediately after the engine is stopped.
- When refrigerant circulation is stopped, pressure on the low-pressure side rises gradually, and after this, pressure on the high-pressure side falls gradually.
- The higher the pressure is, the easier it is to find the refrigerant leakage.

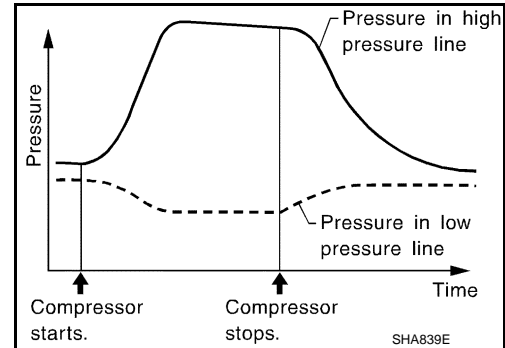

Recycle Refrigerant

INFOID:000000012794046

WARNING:

- Always use HFC-134a for A/C refrigerant. If CFC-12 is accidentally charged, compressor is damaged due to insufficient lubrication.
 - Always observe and follow precautions described on refrigerant container. Incorrect handling may result in an explosion of refrigerant container, frostbite, or the loss of eyesight.
 - Never breathe A/C refrigerant and lubricant vapor or mist. Exposure may irritate eyes, nose, or throat.
 - Never allow HFC-134a to be exposed to an open flame or others because it generates poisonous gas when in contact with high temperature objects. Keep workshop well ventilated.
1. Perform lubricant return operation. Refer to [HA-24, "Perform Lubricant Return Operation"](#). (If refrigerant or lubricant leakage is detected in a large amount, omit this step, and then GO TO 2.)

CAUTION:

Never perform lubricant return operation if a large amount of refrigerant or lubricant leakage is detected.

2. Check gauge pressure readings of recovery/recycling/recharging equipment. When remaining pressure exists, recycle refrigerant from high-pressure hose and low-pressure hose.

NOTE:

Follow manufacturer instructions for the handling or maintenance of the equipment. Never fill the equipment with non-specified refrigerant.

3. Remove A/C service valve cap from the vehicle.
4. Connect recovery/recycling/recharging equipment to A/C service valve.
5. Operate recovery/recycling/recharging equipment, and recycle refrigerant from the vehicle.
6. Evacuate air for 10 minutes or more to remove any remaining refrigerant integrated to compressor lubricant, etc.
7. Refrigerant recycle operation is complete.

Charge Refrigerant

INFOID:000000012794047

WARNING:

- Always use HFC-134a for A/C refrigerant. If CFC-12 is accidentally charged, compressor is damaged due to insufficient lubrication.
- Always observe and follow precautions described on refrigerant container. Incorrect handling may result in an explosion of refrigerant container, frostbite, or the loss of eyesight.
- Never breathe A/C refrigerant and lubricant vapor or mist. Exposure may irritate eyes, nose, or throat.
- Never allow HFC-134a to be exposed to an open flame or others because it generates poisonous gas when in contact with high temperature objects. Keep workshop well ventilated.

REFRIGERANT

< BASIC INSPECTION >

[2.0L TURBO GASOLINE ENGINE]

1. Connect recovery/recycling/recharging equipment to the A/C service valve.
2. Operate recovery/recycling/recharging equipment, and evacuate air from A/C system for 25 minutes or more.
CAUTION:
Evacuate air for 15 minutes or more if the parts are replaced.
3. Check the airtightness of A/C system for 25 minutes or more. If pressure raises more than the specified level, charge A/C system with approximately 200 g refrigerant and check that there is no refrigerant leakage. Refer to [HA-20, "Leak Test"](#).
CAUTION:
Check the airtightness for 15 minutes or more if the parts are replaced.
4. If parts other than compressor are replaced, fill compressor lubricant according to parts that are replaced.
5. Charge the specified amount of refrigerant to A/C system.
6. Check that A/C system operates normally.
7. Disconnect recovery/recycling/recharging equipment. (Collect the refrigerant from the high-pressure hose and low-pressure hose of recovery/recycling/recharging equipment.)
8. Install A/C service valve cap.
9. Refrigerant charge is complete.

A
B
C
D
E
F
G
H
HA
J
K
L
M
N
O
P

HA

LUBRICANT

Description

INFOID:000000012794048

MAINTENANCE OF LUBRICANT LEVEL

The compressor lubricant is circulating in the system together with the refrigerant. It is necessary to fill compressor with lubricant when replacing A/C system parts or when a large amount of refrigerant leakage is detected. It is important to always maintain lubricant level within the specified level. Or otherwise, the following conditions may occur.

- Insufficient lubricant amount: Stuck compressor
- Excessive lubricant amount: Insufficient cooling (caused by insufficient heat exchange)

Name : ND-OIL 12


Inspection

INFOID:000000012794049

If a compressor is malfunctioning (internal noise, insufficient cooling), check the compressor oil.

1. COMPRESSOR OIL JUDGMENT

1. Remove compressor. Refer to [HA-31, "Removal and Installation"](#).
2. Sample a compressor oil and judge on the figure.

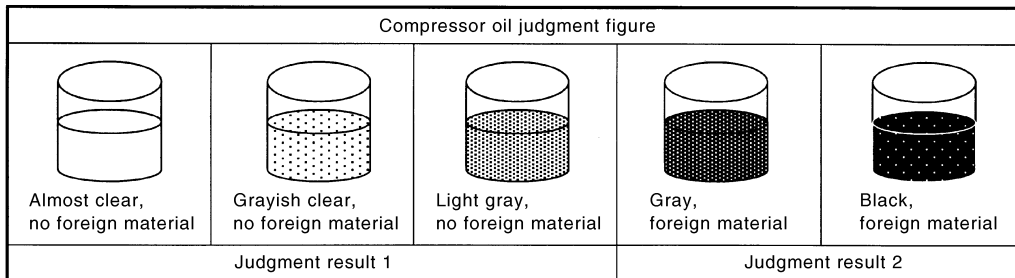

JSIA0927GB

Judgement result 1>>Replace compressor only.

Judgement result 2>>Replace compressor and condenser & liquid tank assembly.

Perform Lubricant Return Operation

INFOID:000000012794050

CAUTION:

If a large amount of refrigerant or lubricant leakage is detected, never perform lubricant return operation.

1. Start the engine and set to the following conditions.
 - Engine speed: Idling to 1,200 rpm
 - A/C switch: ON
 - Fan (blower) speed: Maximum speed set
 - Intake door position: Recirculation
 - Temperature setting: Full cold
2. Perform lubricant return operation for approximately 10 minutes.
3. Stop the engine.
4. Lubricant return operation is complete.

Lubricant Adjusting Procedure for Components Replacement Except Compressor

INFOID:000000012794051

Fill with lubricant for the amount that is calculated according to the following conditions.

Example: Lubricant amount to be added when replacing evaporator and condenser & liquid tank assembly
 $[m\ell \text{ (US fl oz., Imp fl oz.)}] = 45 (1.5, 1.6) + 15 (0.5, 0.5) + \alpha$

LUBRICANT

< BASIC INSPECTION >


[2.0L TURBO GASOLINE ENGINE]

Conditions		Lubricant amount to be added to A/C system m ℓ (US fl oz., Imp fl oz.)
Replace evaporator		45 (1.5, 1.6)
Replace condenser & liquid tank assembly		30 (1.0, 1.1)
Refrigerant leakage is detected	Large amount leakage	30 (1.0, 1.1)
	Small amount leakage	—
Lubricant amount that is recycled together with refrigerant during recycle operation		α

Lubricant Adjusting Procedure for Compressor Replacement

INFOID:0000000012794052

- Drain lubricant from removed compressor and measure lubricant amount.
 - Drain lubricant from high-pressure port ① and low-pressure port ② while rotating magnet clutch.
 - Measure total amount of lubricant that is drained from removed compressor.

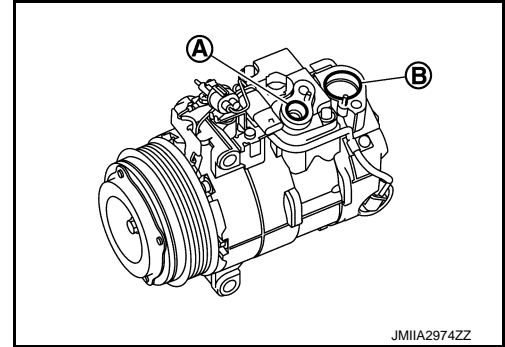

- Drain lubricant from a new compressor that is calculated according to the following conditions.

Amount to be drained (A) [m ℓ (Imp fl oz.)]
 $= F - (D + S + R + \alpha)$


F : Lubricant amount that a new compressor contains [120 (4.1, 4.2)]

D : Lubricant amount that is drained from removed compressor

S : Lubricant amount that remains inside of removed compressor [20 (0.7, 0.7)]

R : Lubricant amount to be added according to components that are removed except compressor

α : Lubricant amount that is recycled together with refrigerant during recycle operation

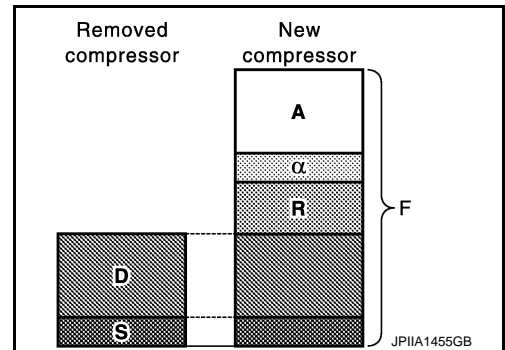

CAUTION:

If lubricant amount that is drained from removed compressor is less than 60 m ℓ (2.0 US fl oz., 2.1 Imp fl oz.), perform calculation by setting “D” as 40 m ℓ (1.4 US fl oz., 1.4 Imp fl oz.).

Conditions	Lubricant amount to be added to A/C system m ℓ (US fl oz., Imp fl oz.)
Replace evaporator	45 (1.5, 1.6)
Replace condenser & liquid tank assembly	30 (1.0, 1.1)

Example: Lubricant amount to be drained from a new compressor when replacing compressor and condenser & liquid tank assembly [m ℓ (US fl oz., Imp fl oz.)] [D = 60 (2.0, 2.1), α = 5 (0.2, 0.2)]
 $120 (4.1, 4.2) - [60 (2.0, 2.1) + 20 (0.7, 0.7) + 30 (1.0, 1.1) + 5 (0.2, 0.2)] = 5 (0.2, 0.2)$

- Install compressor and check the operation.

PERFORMANCE TEST

< BASIC INSPECTION >

[2.0L TURBO GASOLINE ENGINE]

PERFORMANCE TEST

Inspection

INFOID:000000012794053

INSPECTION PROCEDURE

1. Connect recovery/recycling/recharging equipment (for HFC-134a) or manifold gauge. Refer to [HA-20](#), "Description".
2. Start the engine, and set to the following condition.

Test condition		
Surrounding condition		Indoors or in the shade (in a well-ventilated place)
Vehicle condition	Door	Closed
	Door glass	Full open
	Hood	Open
	Engine speed	Idle speed
A/C condition	Temperature control switch or dial	Full cold
	A/C switch	ON
	Air outlet	VENT (ventilation)
	Intake door position	Recirculation
	Fan (blower) speed	Maximum speed set

3. Maintain test condition until A/C system becomes stable. (Approximately 10 minutes)
4. Check that test results of "recirculating-to-discharge air temperature" and "ambient air temperature-to-operating pressure" are within the specified value.
5. When test results are within the specified value, inspection is complete.
If any of test result is out of the specified value, perform diagnosis by gauge pressure. Refer to [HA-28](#), "Symptom Table".

RECIRCULATING-TO-DISCHARGE AIR TEMPERATURE TABLE

Inside air (Recirculating air) at blower assembly inlet		Discharge air temperature from center ventilator °C (°F)
Relative humidity %	Air temperature °C (°F)	
50 – 60	20 (68)	8.3 – 10.4 (47 – 51)
	25 (77)	8.1 – 10.6 (47 – 51)
	30 (86)	14.5 – 17.5 (58 – 64)
	35 (95)	18.6 – 22.1 (65 – 72)
60 – 70	20 (68)	10.4 – 12.4 (51 – 54)
	25 (77)	10.6 – 13.1 (51 – 56)
	30 (86)	17.5 – 20.5 (64 – 69)
	35 (95)	22.1 – 25.6 (72 – 78)

AMBIENT AIR TEMPERATURE-TO-OPERATING PRESSURE TABLE

PERFORMANCE TEST

< BASIC INSPECTION >

[2.0L TURBO GASOLINE ENGINE]

Fresh air		High-pressure (Discharge side) kPa (kg/cm ² , psi)	Low-pressure (Suction side) kPa (kg/cm ² , psi)
Relative humidity %	Air temperature °C (°F)		
50 – 70	25 (77)	1,262 – 1,542 (12.9 – 15.9, 183.0 – 223.6)	247 – 301 (2.5 – 3.1, 35.8 – 43.6)
	30 (86)	1,293 – 1,580 (13.2 – 16.1, 187.4 – 229.0)	260 – 318 (2.7 – 3.2, 37.7 – 46.1)
	35 (95)	1,494 – 1,826 (15.2 – 18.6, 216.7 – 264.7)	297 – 363 (3.0 – 3.7, 43.1 – 52.6)
	40 (104)	1,698 – 2,075 (17.3 – 21.2, 246.2 – 300.8)	334 – 407 (3.4 – 4.2, 48.4 – 59.1)

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

HA

REFRIGERATION SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[2.0L TURBO GASOLINE ENGINE]

SYMPTOM DIAGNOSIS

REFRIGERATION SYSTEM SYMPTOMS




Trouble Diagnosis For Unusual Pressure

INFOID:000000012794054

Diagnose using a manifold gauge whenever system's high and/or low side pressure(s) is/are unusual. The marker above the gauge scale in the following tables indicates the standard (usual) pressure range. Refer to above table (Ambient air temperature-to-operating pressure table) since the standard (usual) pressure, however, differs from vehicle to vehicle.

Symptom Table



INFOID:000000012794055

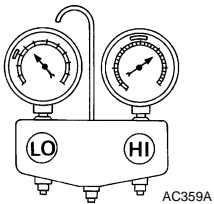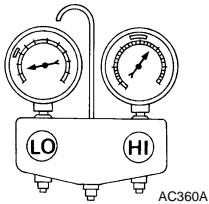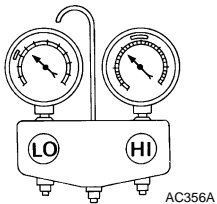Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>Both high- and low-pressure sides are too high.</p>  <p>AC359A</p>	<p>The pressure returns to normal soon after sprinkling water on condenser.</p>	<p>Overfilled refrigerant.</p>	<p>Collect all refrigerant, evacuate refrigerant cycle again, and then refill it with the specified amount of refrigerant.</p>
	<p>Air flow to condenser is insufficient.</p>	<p>Insufficient condenser cooling performance.</p> <ul style="list-style-type: none"> Poor fan rotation of radiator and condenser. Improper installation of air guide. Clogged or dirty condenser fins. 	<ul style="list-style-type: none"> Repair or replace malfunctioning parts. Clean and repair condenser fins.
	<p>When compressor is stopped, a high-pressure reading quickly drops by approximately 196 kPa (2 kg/cm², 28 psi). It then gradually decreases.</p>	<p>Air mixed in refrigerant cycle.</p>	<p>Collect all refrigerant, evacuate refrigerant cycle again, and then refill it with the specified amount of refrigerant.</p>
	<ul style="list-style-type: none"> Low-pressure pipe is cooler than the outlet of evaporator. Low-pressure pipe is frosted. 	<p>Expansion valve opened too much (excessive flow of refrigerant).</p>	<p>Replace expansion valve.</p>
<p>High-pressure side is excessively high and low-pressure side is too low.</p>  <p>AC360A</p>	<p>High-pressure pipe and upper side of condenser become hot, however, liquid tank does not become so hot.</p>	<p>Clogged or crushed high-pressure pipe located between compressor and condenser.</p>	<p>Repair or replace the malfunctioning parts.</p>
<p>High-pressure side is too low and low-pressure side is too high.</p>  <p>AC356A</p>	<ul style="list-style-type: none"> The readings of both sides become equal soon after compressor operation stops. There is no temperature difference between high- and low-pressure sides. 	<p>Malfunction in compressor system (insufficient compressor pressure operation).</p> <ul style="list-style-type: none"> Damage or breakage of valve. Malfunctioning gaskets. 	<p>Replace compressor.</p>

REFRIGERATION SYSTEM SYMPTOMS

[2.0L TURBO GASOLINE ENGINE]

< SYMPTOM DIAGNOSIS >

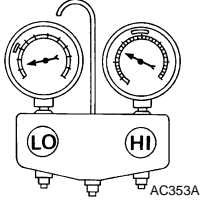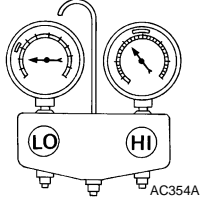Gauge indication	Refrigerant cycle	Probable cause	Corrective action
Both high- and low-pressure sides are too low. 	<ul style="list-style-type: none"> The area around evaporator outlet does not become cold. The area around evaporator inlet becomes frosted. 	Clogged expansion valve. <ul style="list-style-type: none"> Breakage of temperature sensor. Clogging by foreign material. 	Eliminate foreign material from expansion valve, or replace it.
	<ul style="list-style-type: none"> There is a temperature difference between the areas around outlet and inlet pipes of liquid tank. Liquid tank becomes frosted. 	Malfunction in inner liquid tank (clogged strainer).	Replace condenser assembly.
	Evaporator becomes frosted.	Clogged or crushed low-pressure pipe. Malfunction in intake air temperature sensor.	Repair or replace malfunctioning parts. Check intake sensor system. Refer to HAC-92, "Diagnosis Procedure" .
	There is a small temperature difference between the high and low pressure pipes for refrigerant cycle.	<ul style="list-style-type: none"> Shortage of refrigerant. Leakage of refrigerant. 	<ul style="list-style-type: none"> Check for leakage. Collect all refrigerant, evacuate refrigerant cycle again, and then refill it with the specified amount of refrigerant.
Low-pressure side sometimes becomes negative. 	<ul style="list-style-type: none"> Sometimes the area around evaporator outlet does not become cold. Sometimes the area around evaporator inlet is frosted. 	<ul style="list-style-type: none"> Icing caused by the mixing of water in cooler cycle. Deteriorated dryer in liquid tank. 	<ul style="list-style-type: none"> Collect all refrigerant. Evacuate refrigerant cycle completely, and then refill it with the specified amount of refrigerant. At this time, always replace liquid tank.
Hunting in high-pressure side.	There is no temperature difference between high- and low-pressure sides.	Malfunctioning variable valve in compressor.	<ul style="list-style-type: none"> Replace compressor. Check ECV system. Refer to HAC-124, "Diagnosis Procedure".

A
B
C
D
E
F
G
H
HA
J
K
L
M
N
O
P

NOISE

< SYMPTOM DIAGNOSIS >

[2.0L TURBO GASOLINE ENGINE]

NOISE

Symptom Table

INFOID:000000012794056

Symptom	Noise source	Probable cause	Corrective action
Unusual noise from compressor when A/C is ON.	Inside of compressor	Wear, breakage, or clogging of foreign material in inner parts.	Check compressor oil. Refer to HA-24, "Inspection" .
	Magnet clutch	Contact of clutch disc with pulley.	Check clearance between clutch disc and pulley. Refer to HA-32, "Inspection" .
	Compressor body	Loosened compressor mounting bolts.	Check bolts for tightness. Refer to HA-31, "Exploded View" .
Unusual noise from cooler piping.	Cooler piping (pipe and flexible hose)	Improper installation of clip and bracket.	Check the installation condition of the cooler piping. Refer to HA-33, "Exploded View" .
Unusual noise from expansion valve when A/C is ON.	Expansion valve	Shortage of refrigerant.	<ul style="list-style-type: none"> • Check for leakage. • Collect all refrigerant, evacuate refrigerant cycle again, and then refill it with the specified amount of refrigerant.
		Wear, breakage, or clogging of foreign material in inner parts.	Eliminate foreign material from expansion valve, or replace it.
Unusual noise from belt.	—	Loosened belt	Check belt tension. Refer to EM-17, "Inspection" .
		Internal compressor parts get locked	Replace compressor.

COMPRESSOR

< REMOVAL AND INSTALLATION >

[2.0L TURBO GASOLINE ENGINE]


REMOVAL AND INSTALLATION

COMPRESSOR


Exploded View

INFOID:0000000012794057

REMOVAL

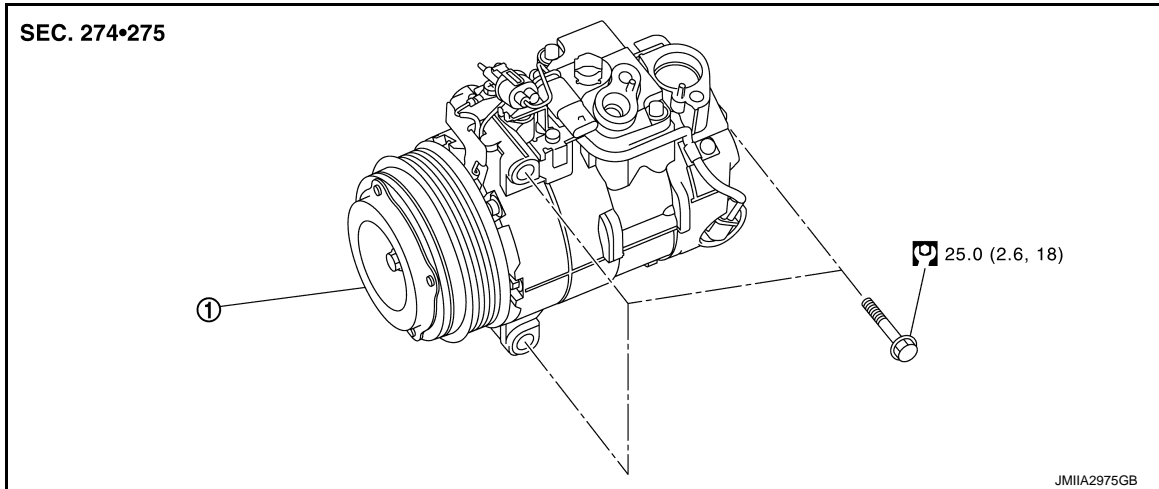

① Compressor

 : N·m (kg-m, ft-lb)

Removal and Installation

INFOID:0000000012794058

REMOVAL


CAUTION:

Perform lubricant return operation before each refrigeration system disassembly. However, if a large amount of refrigerant or lubricant is detected, never perform lubricant return operation. Refer to [HA-24, "Perform Lubricant Return Operation"](#).

1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant. Refer to [HA-22, "Recycle Refrigerant"](#).
2. Remove drive belt. Refer to [EM-16, "Removal and Installation"](#).
3. Remove mounting bolts **A**, and then disconnect low-pressure flexible hose **1** and high-pressure flexible hose **2** from compressor.

CAUTION:

Cap or wrap the joint of the A/C piping and compressor with suitable material such as vinyl tape to avoid the entry of air.

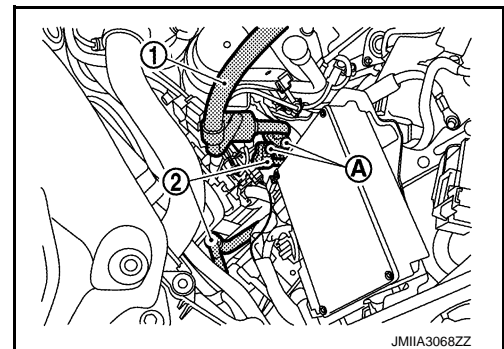

4. Disconnect harness connector, and then remove mounting bolts from compressor.
5. Remove compressor from lower side of the vehicle.

INSTALLATION

Note the following items, and then install in the reverse order of removal.

CAUTION:

- Replace O-rings with new ones. Then apply compressor oil to them when installing.

COMPRESSOR

< REMOVAL AND INSTALLATION >

[2.0L TURBO GASOLINE ENGINE]

- Use a refrigerant collecting equipment (for HFC-134a) to charge the refrigerant. Refer to [HA-22, "Charge Refrigerant"](#).
- Check for leakages when recharging refrigerant. Refer to [HA-20, "Leak Test"](#).
- Check tension of the drive belt after installing compressor. Refer to [EM-17, "Inspection"](#).

Inspection

INFOID:000000012794059


CHECK DISC TO PULLEY CLEARANCE

Check the clearance (B) between pulley assembly ① and clutch disc ② along the entire periphery with a feeler gauge (A).

Clearance : Refer to [HA-52, "Compressor"](#).

CAUTION:

Replace compressor if specified clearance is not obtained, replace adjusting spacer and readjust.

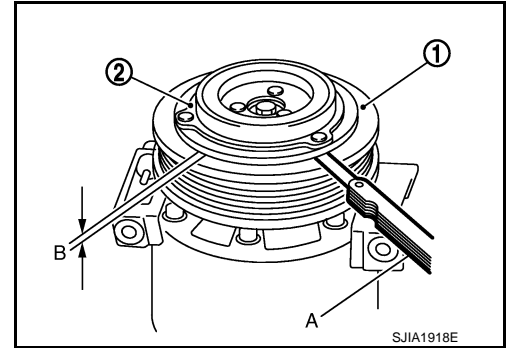

COOLER PIPE AND HOSE


< REMOVAL AND INSTALLATION >

[2.0L TURBO GASOLINE ENGINE]

COOLER PIPE AND HOSE

Exploded View

INFOID:000000012794060

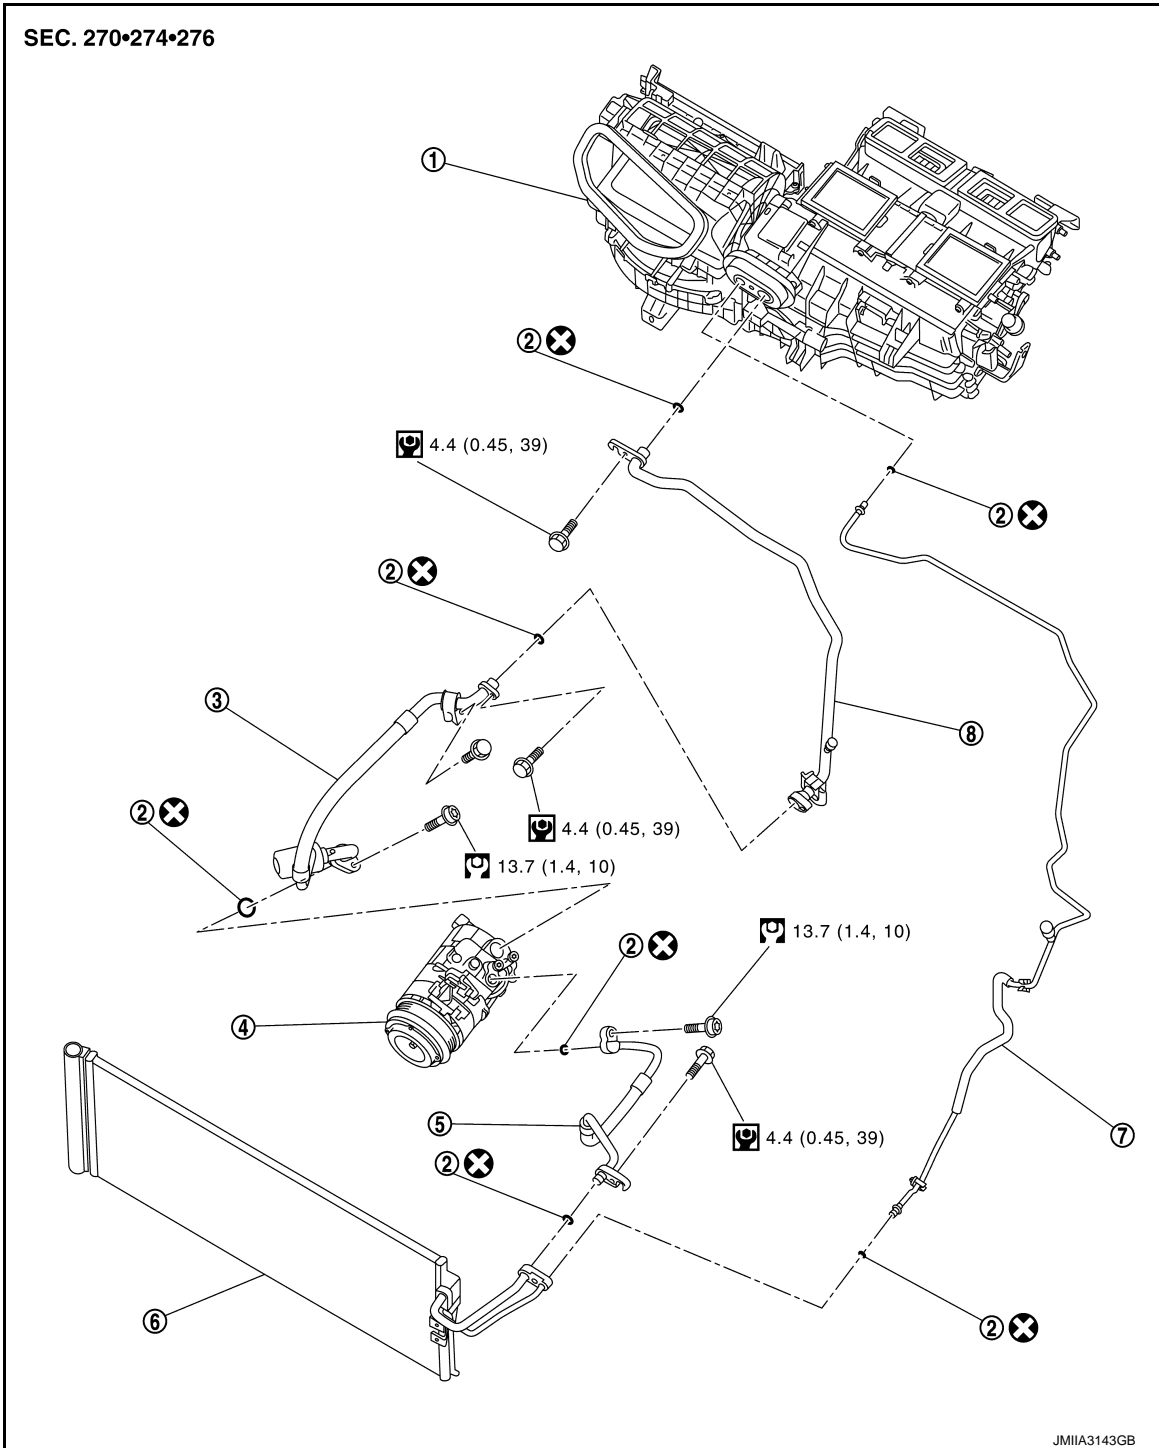


- | | | |
|----------------------|-------------------------------|------------------------------|
| ① A/C unit assembly | ② O-ring | ③ Low-pressure flexible hose |
| ④ Compressor | ⑤ High-pressure flexible hose | ⑥ Condenser assembly |
| ⑦ High-pressure pipe | ⑧ Low-pressure pipe | |
- ⊗ : Always replace after disassembly.


A
B
C
D
E
F
G
H
HA
J
K
L
M
N
O
P

COOLER PIPE AND HOSE

< REMOVAL AND INSTALLATION >

[2.0L TURBO GASOLINE ENGINE]

 : N·m (kg-m, in-lb)

 : N·m (kg-m, ft-lb)

LOW-PRESSURE FLEXIBLE HOSE

LOW-PRESSURE FLEXIBLE HOSE : Removal and Installation

INFOID:000000012794061

REMOVAL


CAUTION:

Perform lubricant return operation before each refrigeration system disassembly. However, if a large amount of refrigerant or lubricant is detected, never perform lubricant return operation. Refer to [HA-24, "Perform Lubricant Return Operation"](#).

1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant. Refer to [HA-22, "Recycle Refrigerant"](#).
2. Remove mounting bolts (A), and then disconnect low-pressure flexible hose (1) from low-pressure pipe (2).

CAUTION:


Cap or wrap the joint of the A/C piping with suitable material such as vinyl tape to avoid the entry of air.

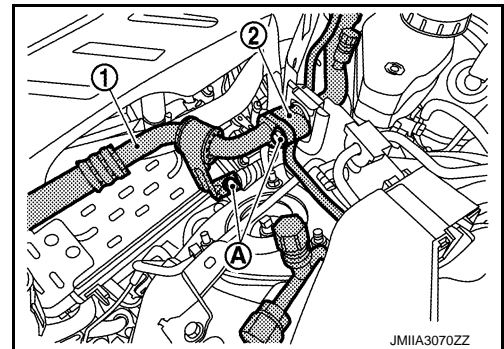

3. Remove mounting bolt (A), and then remove low-pressure flexible hose (1) from compressor.

CAUTION:

Cap or wrap the joint of the A/C piping and compressor with suitable material such as vinyl tape to avoid the entry of air.

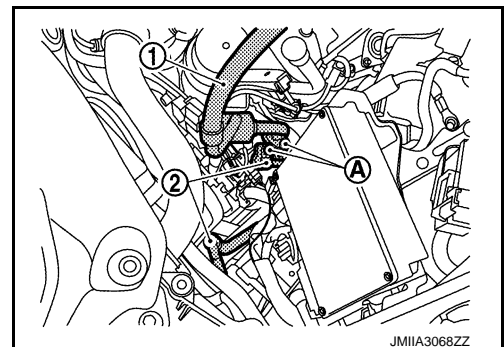

(2) : High-pressure flexible hose

4. Remove low-pressure flexible hose from the vehicle.

INSTALLATION

Note the following items, and then install in the reverse order of removal.

CAUTION:

- Replace O-rings with new ones. Then apply compressor oil to them when installing.
- Use a refrigerant collecting equipment (for HFC-134a) to charge the refrigerant. Refer to [HA-22, "Charge Refrigerant"](#).
- Check for leakages when recharging refrigerant. Refer to [HA-20, "Leak Test"](#).

HIGH-PRESSURE FLEXIBLE HOSE

HIGH-PRESSURE FLEXIBLE HOSE : Removal and Installation

INFOID:000000012794062

REMOVAL

CAUTION:

Perform lubricant return operation before each refrigeration system disassembly. However, if a large amount of refrigerant or lubricant is detected, never perform lubricant return operation. Refer to [HA-24, "Perform Lubricant Return Operation"](#).

1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant. Refer to [HA-22, "Recycle Refrigerant"](#).

COOLER PIPE AND HOSE

< REMOVAL AND INSTALLATION >

[2.0L TURBO GASOLINE ENGINE]


- Remove engine cover. Refer to [EM-22, "Removal and Installation"](#).
- Remove mounting bolt (A), and then disconnect high-pressure flexible hose (2) from condenser pipe assembly.

CAUTION:

Cap or wrap the joint of the A/C piping with suitable material such as vinyl tape to avoid the entry of air.

① : High-pressure pipe

↔ : Vehicle front

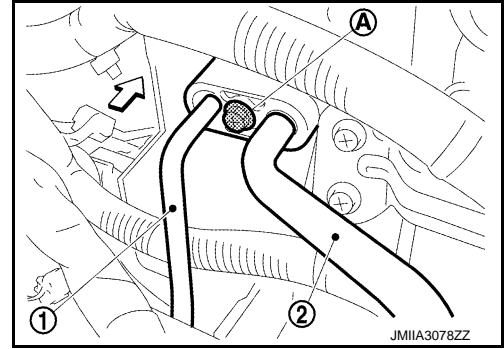


- Remove mounting bolt (A), and then disconnect high-pressure flexible hose (2) from compressor.

CAUTION:

Cap or wrap the joint of the A/C piping and compressor with suitable material such as vinyl tape to avoid the entry of air.

① : Low-pressure flexible hose

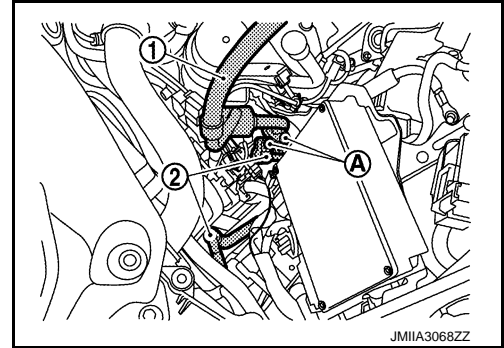

- Remove high-pressure flexible hose from the vehicle.

INSTALLATION

Note the following items, and then install in the reverse order of removal.

CAUTION:

- Replace O-rings with new ones. Then apply compressor oil to them when installing.
- Use a refrigerant collecting equipment (for HFC-134a) to charge the refrigerant. Refer to [HA-22, "Charge Refrigerant"](#).
- Check for leakages when recharging refrigerant. Refer to [HA-20, "Leak Test"](#).

LOW-PRESSURE PIPE

LOW-PRESSURE PIPE : Removal and Installation

INFOID:0000000012794063

REMOVAL


CAUTION:

Perform lubricant return operation before each refrigeration system disassembly. However, if a large amount of refrigerant or lubricant is detected, never perform lubricant return operation. Refer to [HA-24, "Perform Lubricant Return Operation"](#).

- Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant. Refer to [HA-22, "Recycle Refrigerant"](#).
- Remove cowl top cover. Refer to [EXT-27, "Removal and Installation"](#).
- Remove mounting bolts (A), and then low-pressure flexible hose (1) from low-pressure pipe (2).

CAUTION:

Cap or wrap the joint of the A/C piping with suitable material such as vinyl tape to avoid the entry of air.

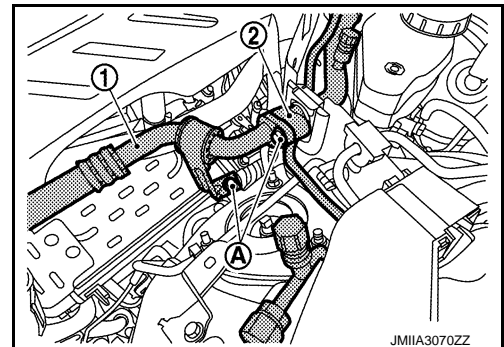

COOLER PIPE AND HOSE

< REMOVAL AND INSTALLATION >


[2.0L TURBO GASOLINE ENGINE]

4. Remove mounting bolt (A), and then disconnect low-pressure pipe ① from evaporator pipe assembly.

CAUTION:

Cap or wrap the joint of the A/C piping with suitable material such as vinyl tape to avoid the entry of air.

② : High-pressure pipe

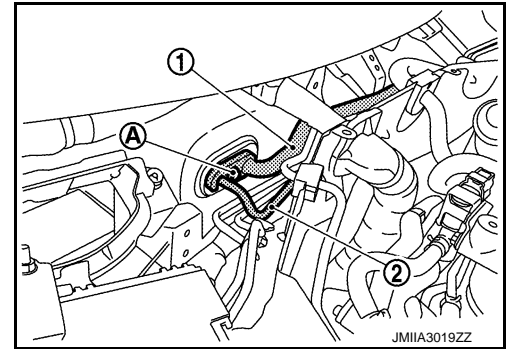

5. Remove low-pressure pipe from the vehicle.

INSTALLATION

Note the following items, and then install in the reverse order of removal.

CAUTION:

- Replace O-rings with new ones. Then apply compressor oil to them when installing.
- Use a refrigerant collecting equipment (for HFC-134a) to charge the refrigerant. Refer to [HA-22, "Charge Refrigerant"](#).
- Check for leakages when recharging refrigerant. Refer to [HA-20, "Leak Test"](#).

HIGH-PRESSURE PIPE

HIGH-PRESSURE PIPE : Removal and Installation

INFOID:000000012794064

REMOVAL

CAUTION:


Perform lubricant return operation before each refrigeration system disassembly. However, if a large amount of refrigerant or lubricant is detected, never perform lubricant return operation. Refer to [HA-24, "Perform Lubricant Return Operation"](#).

1. Remove low-pressure pipe. Refer to [HA-35, "LOW-PRESSURE PIPE : Removal and Installation"](#).
2. Disconnect vacuum hose and vacuum piping. Refer to [BR-49, "2.0L TURBO GASOLINE ENGINE : Removal and Installation"](#).
3. Remove power steering oil pump mounting bolts. Refer to [ST-50, "Exploded View"](#). (HYDRAULIC PUMP ELECTRIC P/S models)
4. Move power steering oil pump to secure work space.
5. Remove mounting bolt (A), and then disconnect high-pressure pipe ① and high-pressure flexible hose ② from condenser pipe assembly.

CAUTION:

Cap or wrap the joint of the A/C piping with suitable material such as vinyl tape to avoid the entry of air.

↔ : Vehicle front

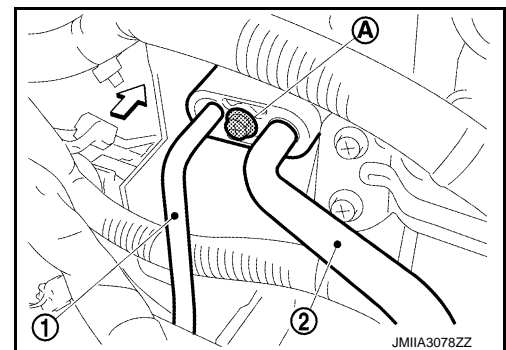


6. Disconnect high-pressure pipe from evaporator pipe assembly.

COOLER PIPE AND HOSE

< REMOVAL AND INSTALLATION >

[2.0L TURBO GASOLINE ENGINE]

7. Disengage high-pressure pipe from vehicle clips (A), and then remove high-pressure pipe from the vehicle.

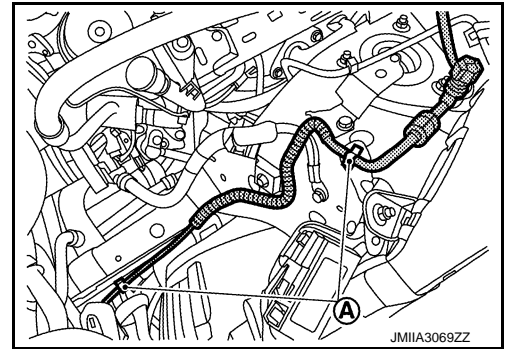

INSTALLATION

Note the following items, then install in the reverse order of removal.

CAUTION:

- Replace O-rings with new ones. Then apply compressor oil to them when installing.
- Use a refrigerant collecting equipment (for HFC-134a) to charge the refrigerant. Refer to [HA-22, "Charge Refrigerant"](#).
- Check for leakages when recharging refrigerant. Refer to [HA-20, "Leak Test"](#).

A
B
C
D
E
F
G
H
HA
J
K
L
M
N
O
P

CONDENSER


< REMOVAL AND INSTALLATION >

[2.0L TURBO GASOLINE ENGINE]

CONDENSER

Exploded View

INFOID:000000012794065

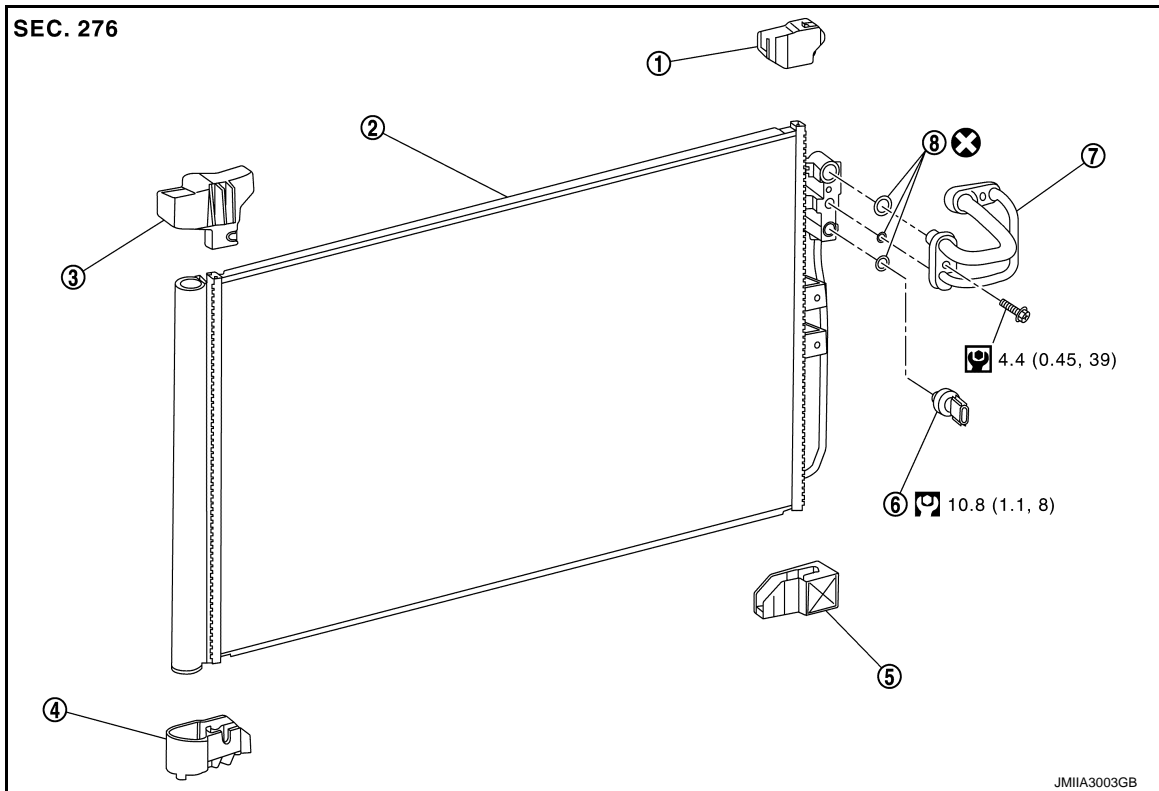

- | | | |
|------------------------------|------------------------------|-------------------------------|
| ① Condenser upper bracket LH | ② Condenser | ③ Condenser upper bracket RH |
| ④ Condenser lower bracket RH | ⑤ Condenser lower bracket LH | ⑥ Refrigerant pressure sensor |
| ⑦ Condenser pipe assembly | ⑧ O-ring | |

⊗ : Always replace after disassembly.

Ⓜ : N·m (kg-m, in-lb)

Ⓜ : N·m (kg-m, ft-lb)

CONDENSER

CONDENSER : Removal and Installation

INFOID:000000012794066

REMOVAL

CAUTION:

Perform lubricant return operation before each refrigeration system disassembly. However, if a large amount of refrigerant or lubricant is detected, never perform lubricant return operation. Refer to [HA-24, "Perform Lubricant Return Operation"](#).


1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant. Refer to [HA-22, "Recycle Refrigerant"](#).
2. Remove cooling fan. Refer to [CO-13, "Removal and Installation"](#).
3. Removal front bumper upper retainer. Refer to [DLK-188, "2.0L TURBO GASOLINE ENGINE : Removal and Installation"](#).

CONDENSER


< REMOVAL AND INSTALLATION >

[2.0L TURBO GASOLINE ENGINE]


4. Remove mounting bolt (A), and then disconnect condenser pipe assembly from condenser.

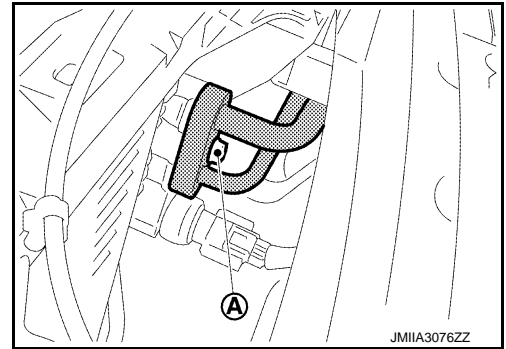


5. Disconnect refrigerant pressure sensor harness connector (A).

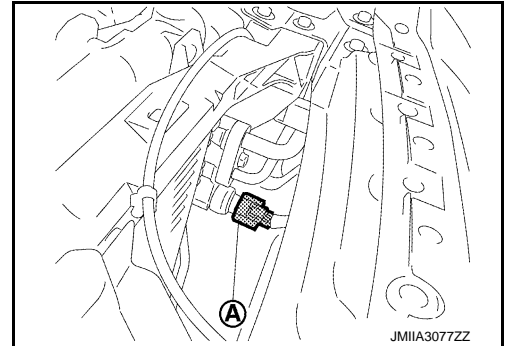

6. Move top of the condenser and radiator to vehicle rear side.
7. Disengage condenser fixing pawls.

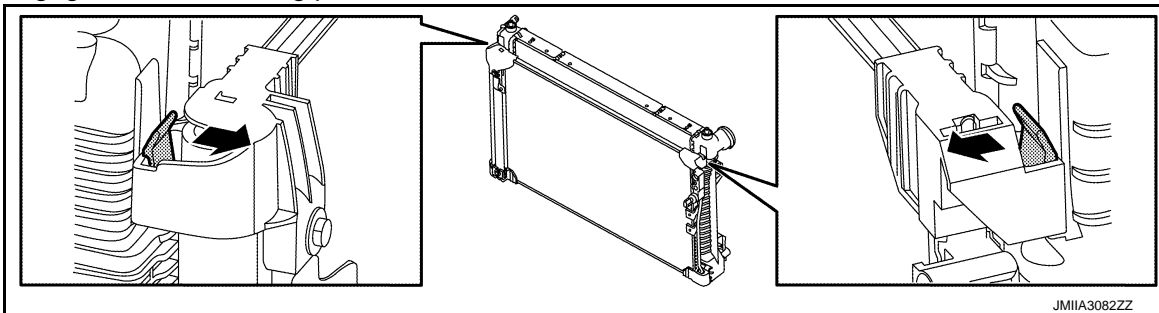

8. Lift the condenser upwards, and then remove condenser from vehicle.

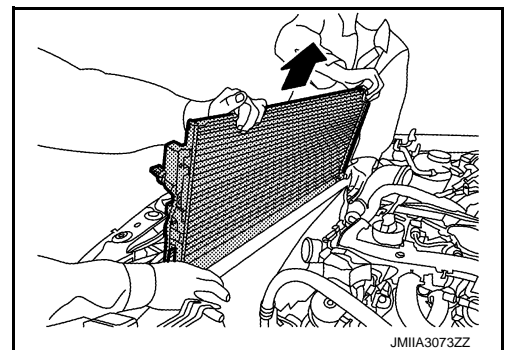

INSTALLATION

Note the following items, and then install in the reverse order of removal.

CAUTION:

- Replace O-rings with new ones. Then apply compressor oil to them when installing.
- Use a refrigerant collecting equipment (for HFC-134a) to charge the refrigerant. Refer to [HA-22, "Charge Refrigerant"](#).
- Check for leakages when recharging refrigerant. Refer to [HA-20, "Leak Test"](#).

CONDENSER PIPE ASSEMBLY

CONDENSER

< REMOVAL AND INSTALLATION >

[2.0L TURBO GASOLINE ENGINE]

CONDENSER PIPE ASSEMBLY : Removal and Installation

INFOID:000000012794067

REMOVAL

CAUTION:


Perform lubricant return operation before each refrigeration system disassembly. However, if a large amount of refrigerant or lubricant is detected, never perform lubricant return operation. Refer to [HA-24, "Perform Lubricant Return Operation"](#).

1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant. Refer to [HA-22, "Recycle Refrigerant"](#).
2. Remove front bumper fascia assembly. Refer to [EXT-15, "Removal and Installation"](#).
3. Remove mounting bolt (A), and then disconnect high-pressure flexible hose (2) and high-pressure pipe (1) from condenser pipe assembly.

CAUTION:

Cap or wrap the joint of the A/C piping with suitable material such as vinyl tape to avoid the entry of air.


⇐ : Vehicle front

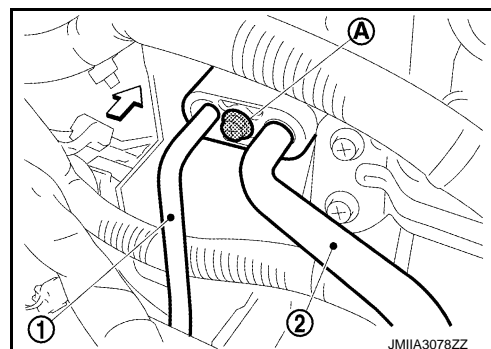

4. Remove mounting bolt (A), and then disconnect condenser pipe assembly from condenser.

CAUTION:

Cap or wrap the joint of the A/C piping and condenser with suitable material such as vinyl tape to avoid the entry of air.

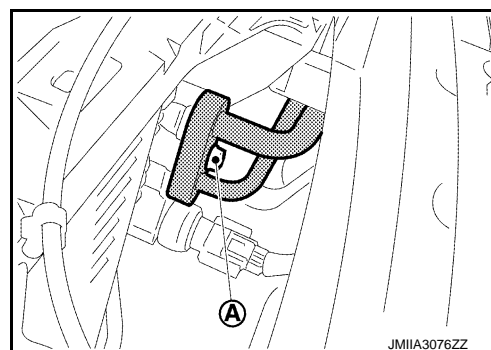

5. Remove condenser pipe assembly from the vehicle

INSTALLATION

Note the following items, and then install in the reverse order of removal.

CAUTION:

- Replace O-rings with new ones. Then apply compressor oil to them when installing.
- Use a refrigerant collecting equipment (for HFC-134a) to charge the refrigerant. Refer to [HA-22, "Charge Refrigerant"](#).
- Check for leakages when recharging refrigerant. Refer to [HA-20, "Leak Test"](#).

REFRIGERANT PRESSURE SENSOR

REFRIGERANT PRESSURE SENSOR : Removal and Installation

INFOID:000000012794068

REMOVAL

CAUTION:

Perform lubricant return operation before each refrigeration system disassembly. However, if a large amount of refrigerant or lubricant is detected, never perform lubricant return operation. Refer to [HA-24, "Perform Lubricant Return Operation"](#).

1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant. Refer to [HA-22, "Recycle Refrigerant"](#).
2. Remove front bumper fascia assembly. Refer to [EXT-15, "Removal and Installation"](#).

CONDENSER


< REMOVAL AND INSTALLATION >

[2.0L TURBO GASOLINE ENGINE]

3. Remove mounting bolt (A), and then disconnect condenser pipe from condenser.

CAUTION:

Cap or wrap the joint of condenser pipe and condenser with suitable material such as vinyl tape to avoid the entry of air.

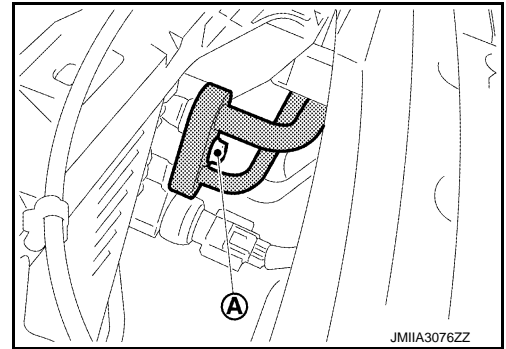

4. Clean refrigerant pressure sensor and its surrounding area, and then remove dust and rust from refrigerant pressure sensor.

CAUTION:

Be sure to clean carefully.

5. Disconnect refrigerant pressure sensor connector.
6. Use an adjustable wrench or other tool to hold the refrigerant pressure sensor mounting block, and then remove the refrigerant pressure sensor from the condenser.

CAUTION:

- Never to damage core surface of condenser.
- Cap or wrap the joint of the condenser with suitable material such as vinyl tape to avoid the entry of air.

INSTALLATION

Note the following items, and then install in the reverse order of removal.

CAUTION:

- Replace O-ring with new one. Then apply compressor oil to them when installing.
- Use a refrigerant collecting equipment (for HFC-134a) to charge the refrigerant. Refer to [HA-22, "Charge Refrigerant"](#).
- Check for leakages when recharging refrigerant. Refer to [HA-20, "Leak Test"](#).

A
B
C
D
E
F
G
H
HA
J
K
L
M
N
O
P

HEATER & COOLING UNIT ASSEMBLY

< REMOVAL AND INSTALLATION >


[2.0L TURBO GASOLINE ENGINE]

HEATER & COOLING UNIT ASSEMBLY

Exploded View

INFOID:000000012794069

REMOVAL

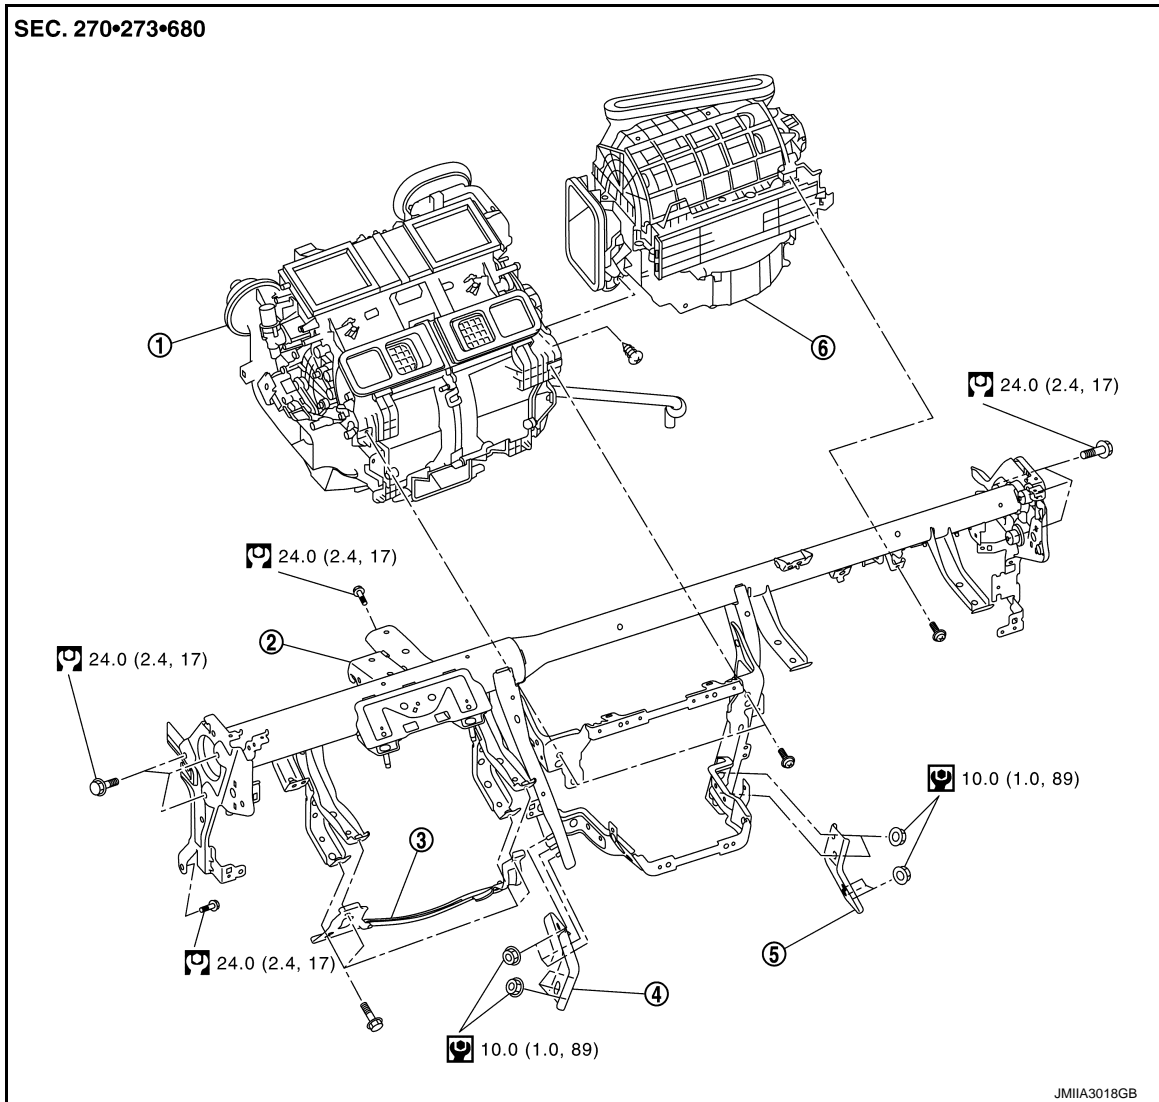

① Heater & cooling unit assembly


② Steering member


③ Knee protector

④ Instrument stay LH

⑤ Instrument stay RH

⑥ Blower unit assembly

 : N·m (kg·m, in·lb)


 : N·m (kg·m, in·lb)

DISASSEMBLY

HEATER & COOLING UNIT ASSEMBLY

< REMOVAL AND INSTALLATION >

[2.0L TURBO GASOLINE ENGINE]

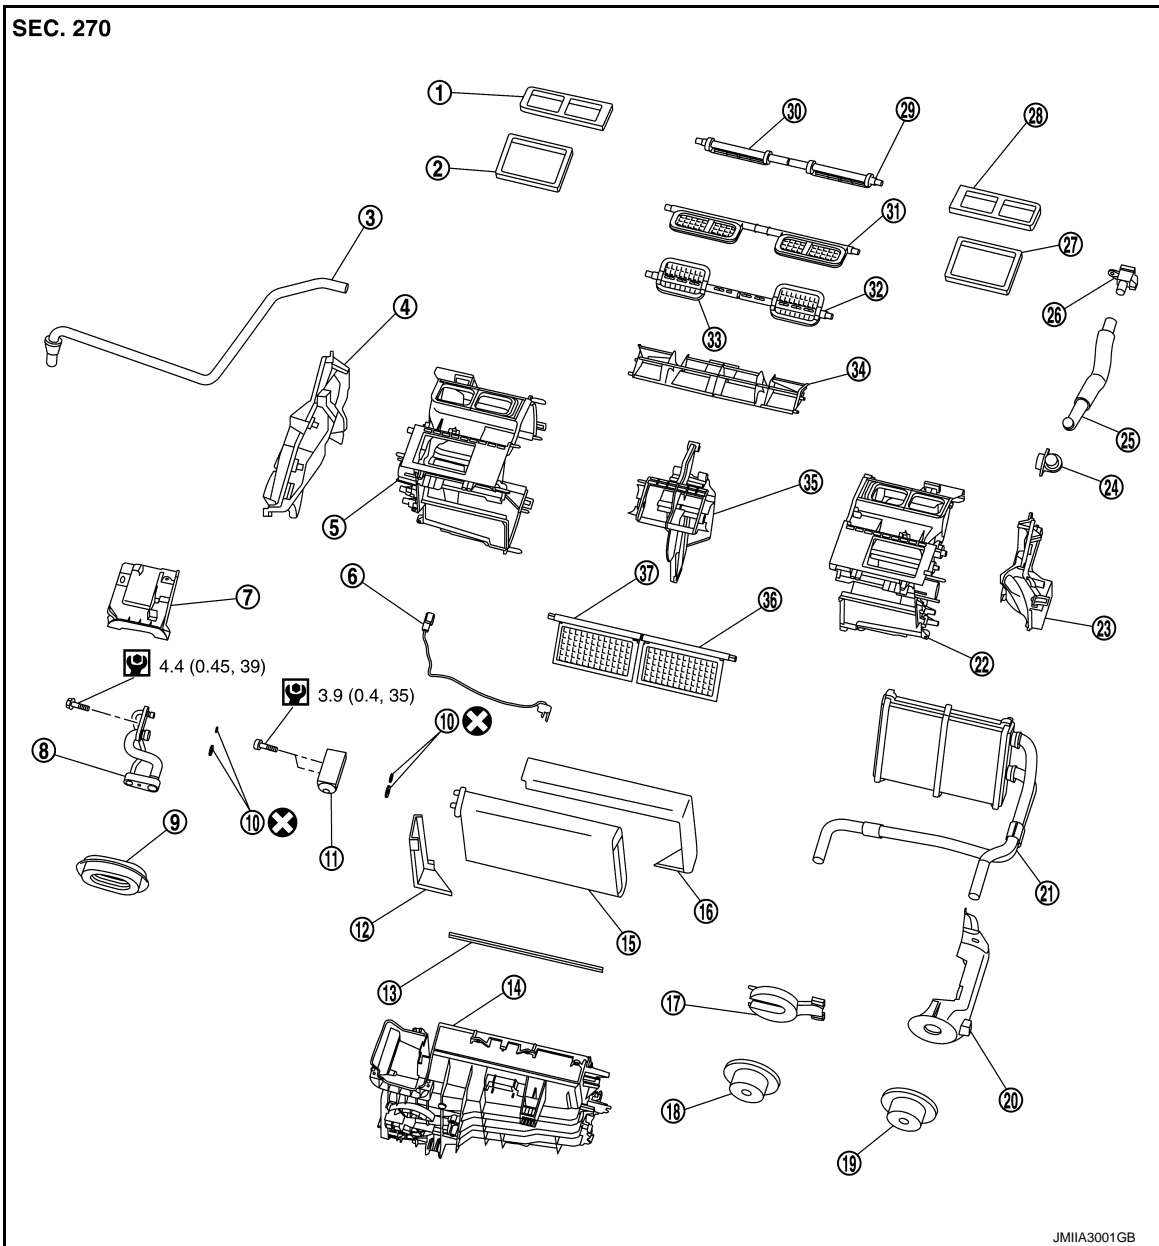

- | | | |
|--------------------------|----------------------------|---------------------------|
| ① Ventilator packing RH | ② Defroster packing RH | ③ Drain hose |
| ④ Foot duct RH | ⑤ Heater case RH | ⑥ Intake sensor |
| ⑦ Case cover | ⑧ Evaporator pipe assembly | ⑨ Evaporator pipe grommet |
| ⑩ O-ring | ⑪ Expansion valve | ⑫ Insulator |
| ⑬ Insulator | ⑭ Lower case | ⑮ Evaporator |
| ⑯ Insulator | ⑰ Heater pipe bracket | ⑱ Heater pipe grommet RH |
| ⑲ Heater pipe grommet LH | ⑳ Heater pipe cover | ㉑ Heater core |
| ㉒ Heater case LH | ㉓ Foot duct LH | ㉔ Aspirator |
| ㉕ Aspirator duct | ㉖ In-vehicle sensor | ㉗ Defroster packing LH |
| ㉘ Ventilator packing LH | ㉙ Foot door LH | ㉚ Foot door RH |
| ㉛ Ventilator door | ㉜ Defroster door LH | ㉝ Defroster door RH |
| ㉞ Air guide | ㉟ Center case | ㊱ Air mix door LH |
| ㊲ Air mix door RH | | |

A
B
C
D
E
F
G
H
HA
J
K
L
M
N
O
P

HEATER & COOLING UNIT ASSEMBLY

< REMOVAL AND INSTALLATION >

[2.0L TURBO GASOLINE ENGINE]

⊗ : Always replace after disassembly.

⊙ : N·m (kg·m, in·lb)

HEATER & COOLING UNIT ASSEMBLY

HEATER & COOLING UNIT ASSEMBLY : Removal and Installation

INFOID:000000012794070

CAUTION:

Perform lubricant return operation before each refrigeration system disassembly. However, if a large amount of refrigerant or lubricant is detected, never perform lubricant return operation. Refer to [HA-24, "Perform Lubricant Return Operation"](#).


REMOVAL

1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant. Refer to [HA-22, "Recycle Refrigerant"](#).
2. Drain engine coolant from cooling system. Refer to [CO-7, "Draining"](#).
3. Remove wiper drive assembly. Refer to [WW-59, "WIPER DRIVE ASSEMBLY : Removal and Installation"](#).
4. Remove engine cover. Refer to [EM-22, "Removal and Installation"](#).


5. Remove mounting bolt (A), and then disconnect low-pressure pipe (1) and high-pressure pipe (2) from evaporator pipe assembly.

CAUTION:


Cap or wrap the joint of the A/C piping with suitable material such as vinyl tape to avoid the entry of air.

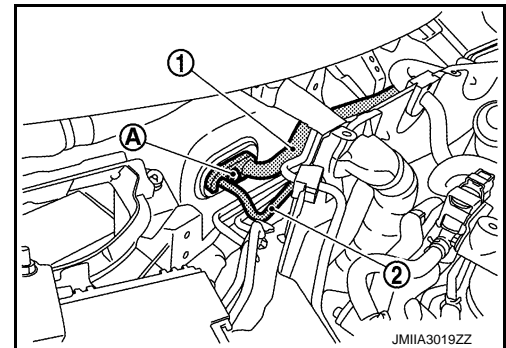

6. Remove fixing clamps (A), and then disconnect heater hoses (1).

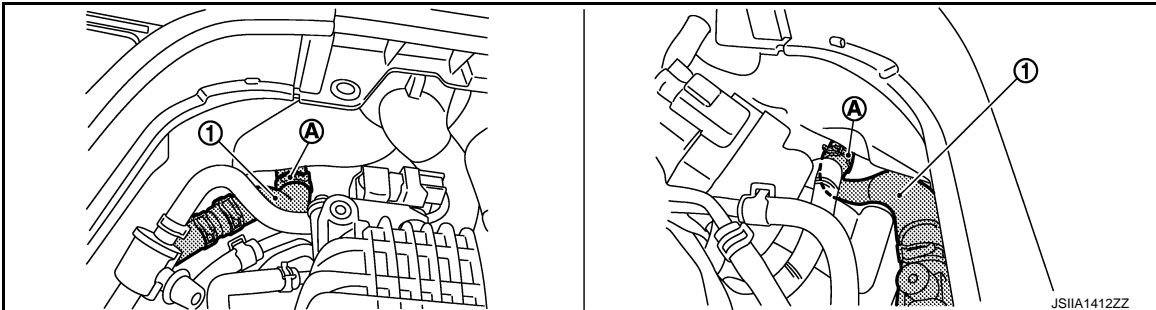

7. Remove instrument panel assembly. Refer to [IP-13, "Removal and Installation"](#).
8. Remove front defroster nozzle, side defroster nozzle and ventilator duct. Refer to [VTL-10, "FRONT DEFROSTER NOZZLE : Removal and Installation"](#), [VTL-9, "SIDE DEFROSTER NOZZLE : Removal and Installation"](#) and [VTL-8, "VENTILATOR DUCT : Removal and Installation"](#).
9. Remove front floor duct LH and RH. Refer to [VTL-12, "FRONT FLOOR DUCT : Removal and Installation"](#).
10. Remove mounting nuts (A), and then remove instrument stay LH (1) and RH (2).

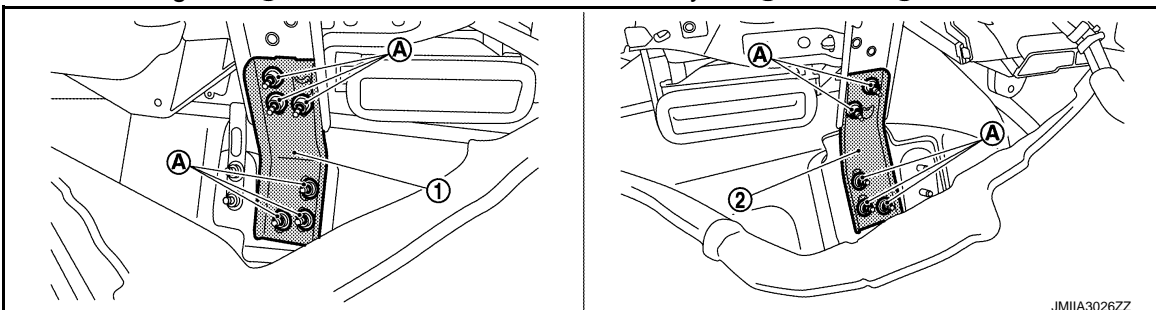


HEATER & COOLING UNIT ASSEMBLY


[2.0L TURBO GASOLINE ENGINE]

< REMOVAL AND INSTALLATION >

11. Disconnect drain hose from A/C unit assembly.
12. Remove ground wire mounting bolts (A).

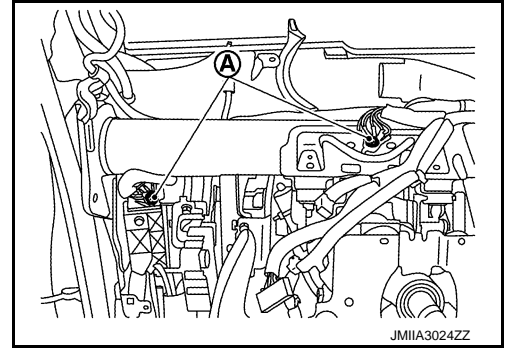

13. Remove mounting bolts (A), and then remove knee protector.

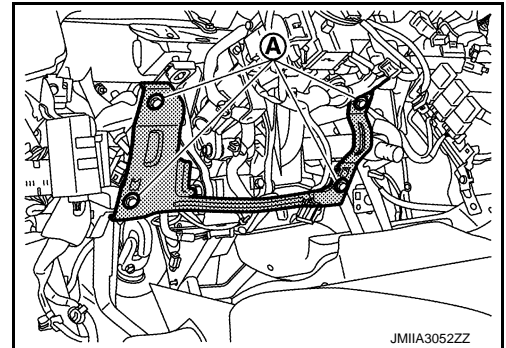

14. Remove harness connector, harness clips, and bracket necessary to remove steering member. Move vehicle harness aside.
15. Remove steering column mounting bolts and nuts, and then move steering column assembly to secure work space. Refer to the following.
 - HYDRAULIC PUMP ELECTRIC P/S
 - WITHOUT ELECTRIC MOTOR: Refer to [ST-33, "WITHOUT ELECTRIC MOTOR : Exploded View"](#).
 - WITH ELECTRIC MOTOR: Refer to [ST-36, "WITH ELECTRIC MOTOR : Exploded View"](#).
 - DUAL PINION ELECTRIC P/S: Refer to [ST-85, "WITH ELECTRIC MOTOR : Exploded View"](#).
 - DIRECT ADAPTIVE STEERING: Refer to [ST-135, "Exploded View"](#).


A
B
C
D
E
F
G
H
HA
J
K
L
M
N
O
P

HEATER & COOLING UNIT ASSEMBLY

< REMOVAL AND INSTALLATION >

[2.0L TURBO GASOLINE ENGINE]

16. Remove steering member mounting bolts (A), heater & cooling unit mounting bolts (B) and blower unit mounting bolt (C).

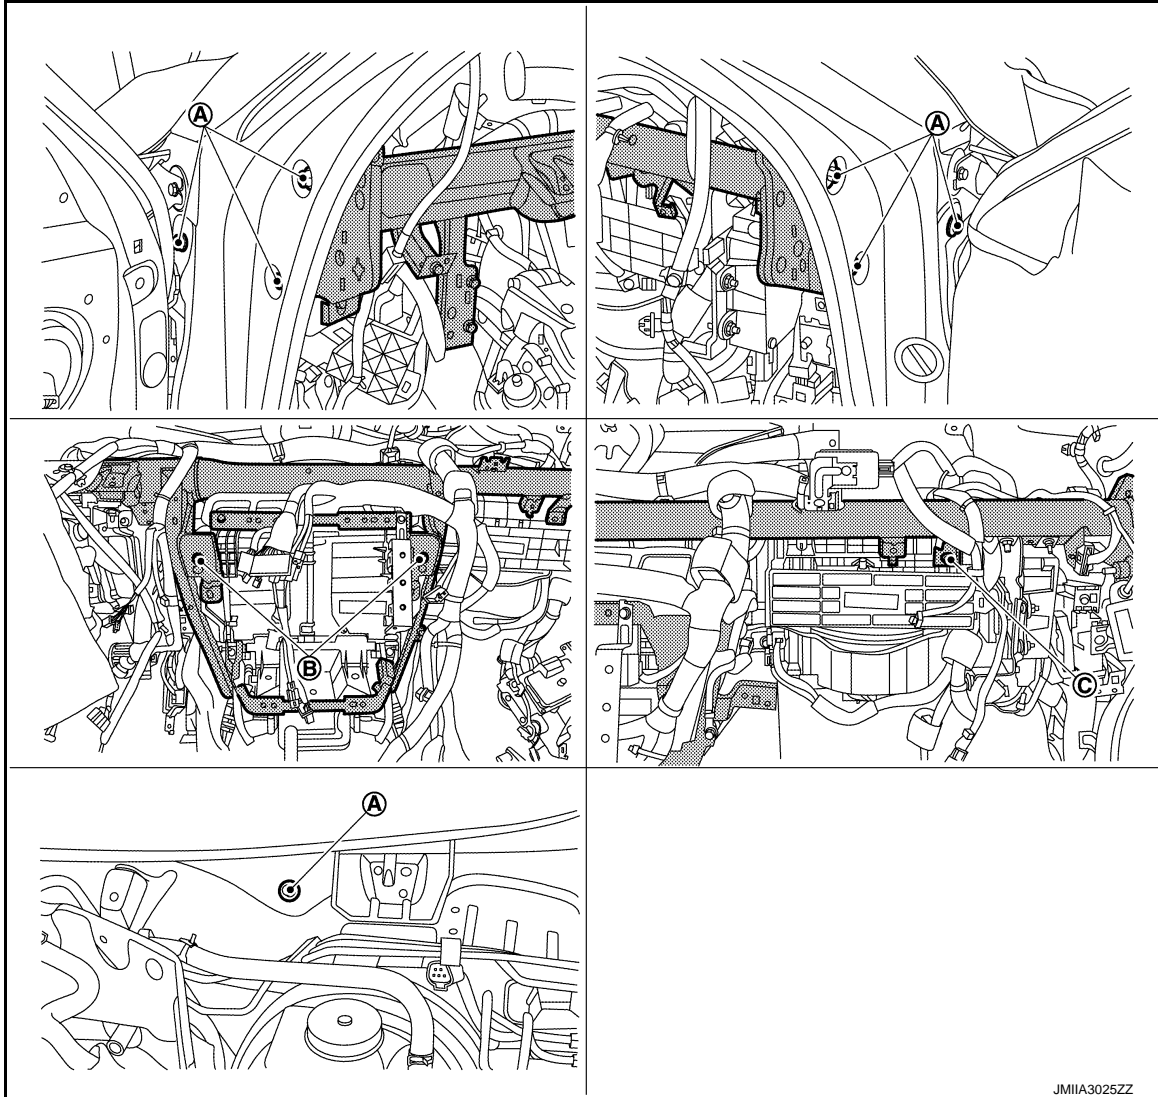

17. Remove steering member from vehicle.
18. Remove A/C unit assembly from vehicle.
19. Remove fixing screw, and then separate blower unit and heater & cooling unit assembly.

INSTALLATION

Note the following items, and then install in the reverse order of removal.

CAUTION:

- Replace O-rings with new ones. Then apply compressor oil to them when installing.
- Use a refrigerant collecting equipment (for HFC-134a) to charge the refrigerant. Refer to [HA-22, "Charge Refrigerant"](#).
- Check for leakages when recharging refrigerant. Refer to [HA-20, "Leak Test"](#).

NOTE:

Refer to [CO-8, "Refilling"](#) when filling radiator with engine coolant.

HEATER CORE

HEATER CORE : Removal and Installation

INFOID:000000012794071

REMOVAL


1. Remove heater & cooling unit assembly. Refer to [HA-44, "HEATER & COOLING UNIT ASSEMBLY : Removal and Installation"](#).
2. Remove foot duct LH. Refer to [VTL-11, "FOOT DUCT : Removal and Installation"](#).

HEATER & COOLING UNIT ASSEMBLY


[2.0L TURBO GASOLINE ENGINE]

< REMOVAL AND INSTALLATION >


3. Remove heater pipe grommet.
4. Remove fixing screws (A), and then remove heater pipe bracket.

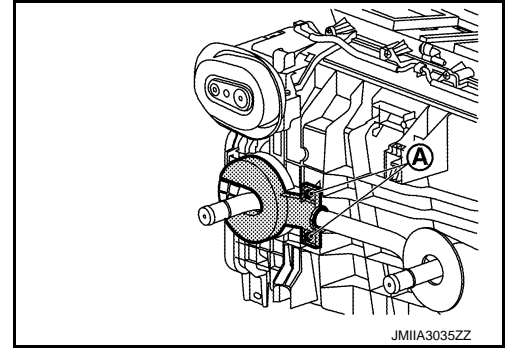

5. Remove fixing screws (A), and then remove heater pipe cover.

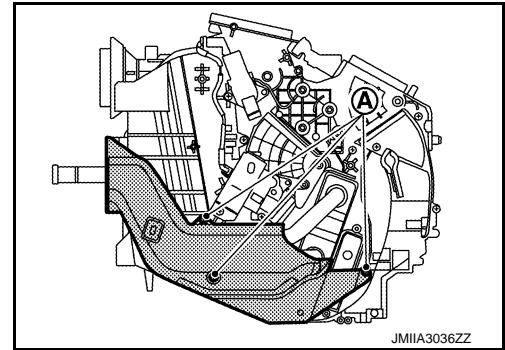

6. Slide heater core to left side, and then remove heater core.

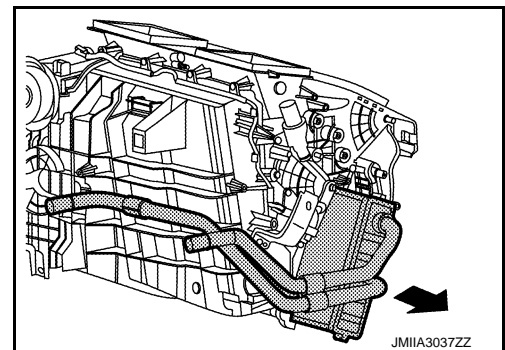

INSTALLATION

Note the following item, and then install in the reverse order of removal.

NOTE:

Refer to [CO-8, "Refilling"](#) when filling radiator with engine coolant.

EVAPORATOR

EVAPORATOR : Removal and Installation

INFOID:000000012794072

REMOVAL

1. Remove heater & cooling unit assembly. Refer to [HA-44, "HEATER & COOLING UNIT ASSEMBLY : Removal and Installation"](#).
2. Remove heater core. Refer to [HA-46, "HEATER CORE : Removal and Installation"](#).
3. Remove foot duct RH. Refer to [VTL-11, "FOOT DUCT : Removal and Installation"](#).
4. Remove air mix door motor LH and RH. Refer to [HAC-145, "AIR MIX DOOR MOTOR : Removal and Installation"](#).
5. Remove fixing screw, and then remove aspirator.

A
B
C
D
E
F
G
H
HA

J
K
L


M
N
O
P

HEATER & COOLING UNIT ASSEMBLY


< REMOVAL AND INSTALLATION >

[2.0L TURBO GASOLINE ENGINE]


6. Remove fixing screws (A), and then remove lower case.

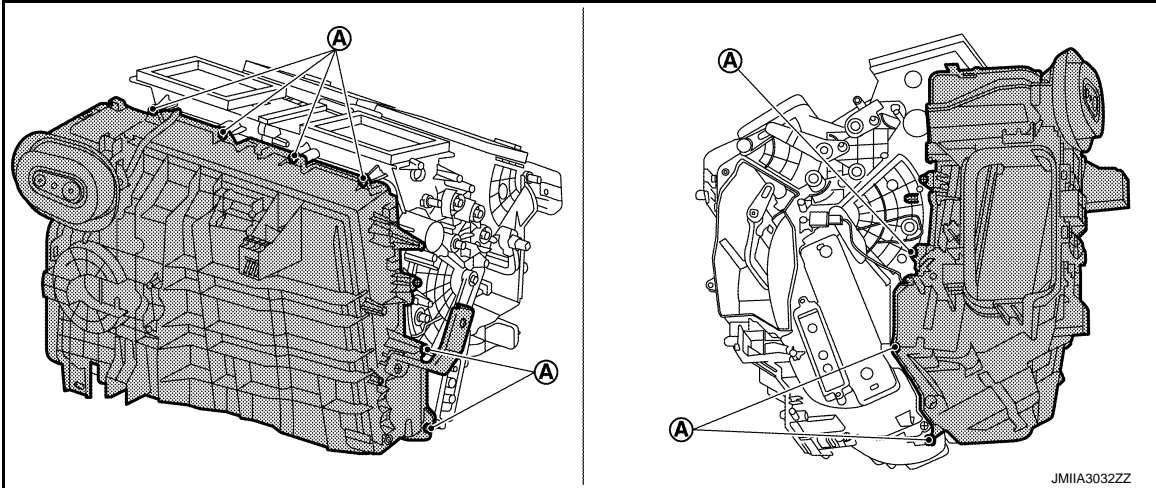

7. Remove evaporator pipe grommet.
8. Remove fixing screws (A), and then remove case cover.

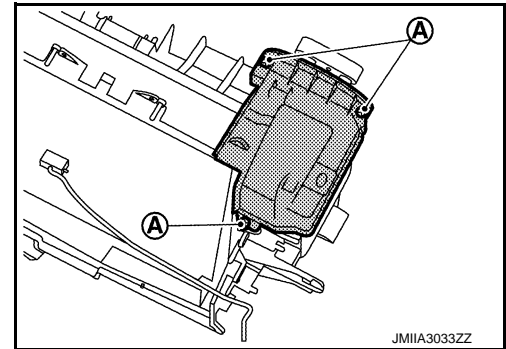

9. Remove evaporator assembly from lower case.

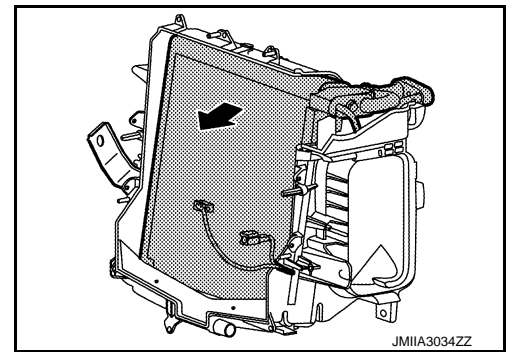

10. Remove the following parts after removing evaporator.
- Evaporator pipe assembly
 - Expansion valve
 - Intake sensor

INSTALLATION

Note the following items, and then install in the reverse order of removal.

CAUTION:

- Replace O-rings with new ones. Then apply compressor oil to them when installing.
- Mark the mounting position of intake sensor bracket prior to removal so that the reinstalled sensor can be located in the same position.
- Check for leakages when recharging refrigerant. Refer to [HA-20. "Leak Test"](#).

EVAPORATOR PIPE ASSEMBLY

EVAPORATOR PIPE ASSEMBLY : Removal and Installation

INFOID:000000012794073


REMOVAL

HEATER & COOLING UNIT ASSEMBLY


[2.0L TURBO GASOLINE ENGINE]

< REMOVAL AND INSTALLATION >

1. Remove heater & cooling unit assembly. Refer to [HA-44. "HEATER & COOLING UNIT ASSEMBLY : Removal and Installation"](#).
2. Remove heater core. Refer to [HA-46. "HEATER CORE : Removal and Installation"](#).
3. Remove foot duct RH. Refer to [VTL-11. "FOOT DUCT : Removal and Installation"](#).
4. Remove air mix door motor LH and RH. Refer to [HAC-145. "AIR MIX DOOR MOTOR : Removal and Installation"](#).
5. Remove fixing screw, and then remove aspirator.
6. Remove fixing screws (A), and then remove lower case.

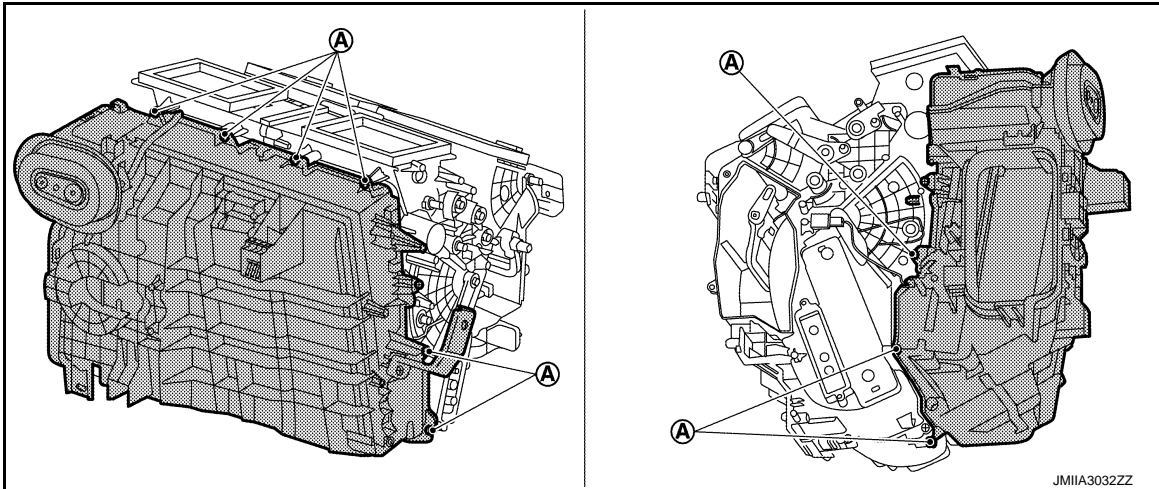


7. Remove evaporator pipe grommet.
8. Remove fixing screws (A), and then remove case cover.

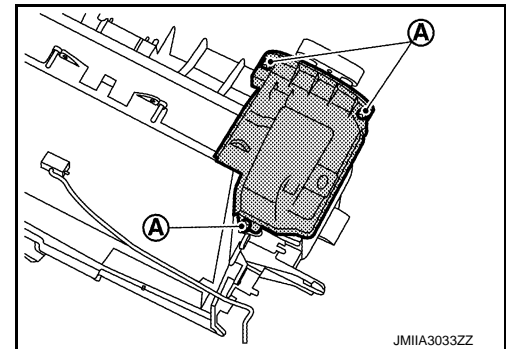

9. Remove mounting bolt (A), and then disconnect evaporator pipe assembly from expansion valve.

CAUTION:

Cap or wrap the joint of evaporator pipe assembly and expansion valve with suitable material such as vinyl tape to avoid the entry of air.

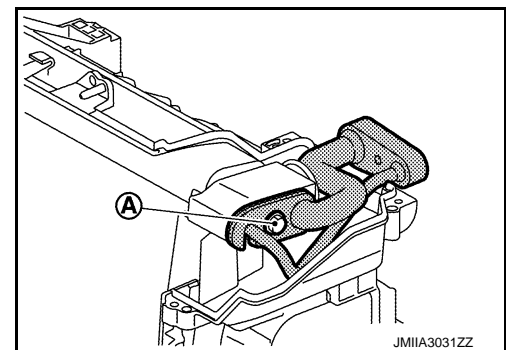

INSTALLATION

Note the following items, and then install in the reverse order of removal.

CAUTION:

- Replace O-rings with new ones. Then apply compressor oil to them when installing.
- Use a refrigerant collecting equipment (for HFC-134a) to charge the refrigerant. Refer to [HA-22. "Charge Refrigerant"](#).
- Check for leakages when recharging refrigerant. Refer to [HA-20. "Leak Test"](#).

EXPANSION VALVE

A
B
C
D
E
F
G
H
HA
J
K
L
M
N
O
P

HEATER & COOLING UNIT ASSEMBLY

< REMOVAL AND INSTALLATION >


[2.0L TURBO GASOLINE ENGINE]

EXPANSION VALVE : Removal and Installation


INFOID:000000012794074

REMOVAL

1. Remove heater & cooling unit assembly. Refer to [HA-44. "HEATER & COOLING UNIT ASSEMBLY : Removal and Installation"](#).
2. Remove heater core. Refer to [HA-46. "HEATER CORE : Removal and Installation"](#).
3. Remove foot duct RH. Refer to [VTL-11. "FOOT DUCT : Removal and Installation"](#).
4. Remove air mix door motor LH and RH. Refer to [HAC-145. "AIR MIX DOOR MOTOR : Removal and Installation"](#).
5. Remove fixing screw, and then remove aspirator.
6. Remove fixing screws (A), and then remove lower case.

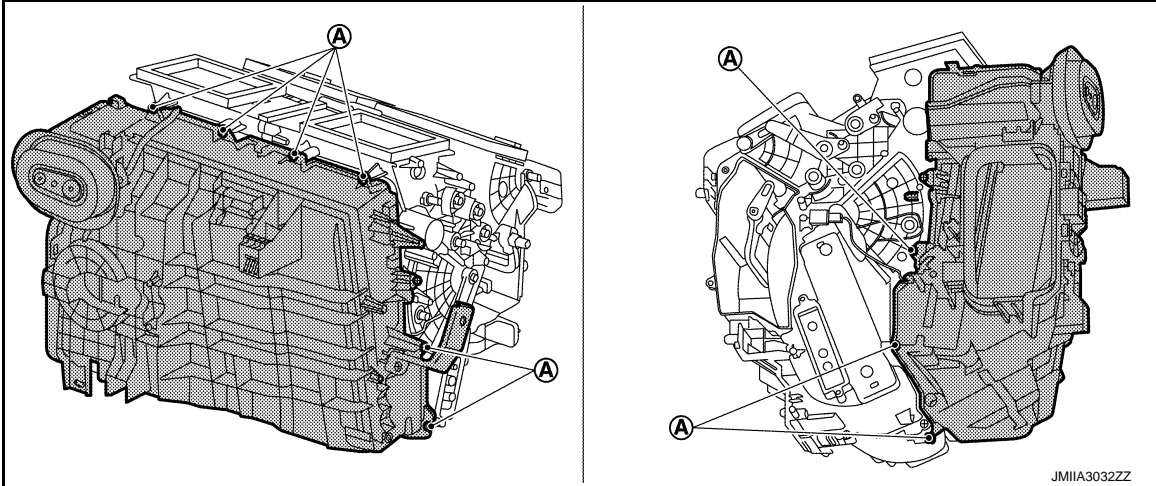


7. Remove evaporator pipe grommet.
8. Remove fixing screws (A), and then remove case cover.

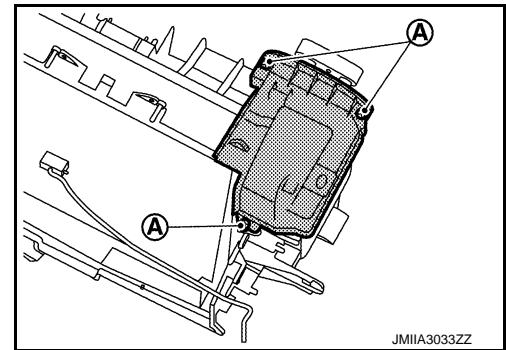

9. Remove mounting bolt (A), and then disconnect evaporator pipe assembly from expansion valve.

CAUTION:

Cap or wrap the joint of evaporator pipe assembly and expansion valve with suitable material such as vinyl tape to avoid the entry of air.

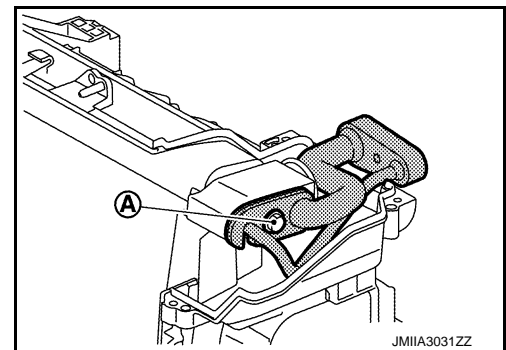

HEATER & COOLING UNIT ASSEMBLY


[2.0L TURBO GASOLINE ENGINE]

< REMOVAL AND INSTALLATION >

10. Remove mounting bolts (A), and then remove expansion valve from evaporator.

CAUTION:

Cap or wrap the joint of evaporator and expansion valve with suitable material such as vinyl tape to avoid the entry of air.

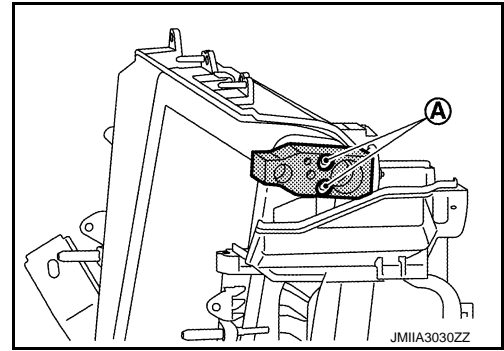

INSTALLATION

Note the following items, and then install in the reverse order of removal.

CAUTION:

- Replace O-rings with new ones. Then apply compressor oil to them when installing.
- Use a refrigerant collecting equipment (for HFC-134a) to charge the refrigerant. Refer to [HA-22, "Charge Refrigerant"](#).
- Check for leakages when recharging refrigerant. Refer to [HA-20, "Leak Test"](#).

A
B
C
D
E
F
G
H
HA
J
K
L
M
N
O
P

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[2.0L TURBO GASOLINE ENGINE]

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Compressor

INFOID:0000000012794075

Model		DENSO make 6SBU16C
Type		Variable displacement swash plate
Displacement cm ³ (cu in)/rev	Maximum	170 (10.4)
Number of cylinders		6
Cylinder bore × stroke (Maximum) mm (in.)		34.8 (1.37) × 29.8 (1.17)
Direction of rotation		Clockwise (viewed from clutch)
Drive belt		Poly V
Disc to pulley clearance mm (in.)	Standard	0.3 – 0.6 (0.012 – 0.024)

Lubricant

INFOID:0000000012794076

Name		ND-OIL12
Capacity mℓ (US fl oz., Imp fl oz.)	Total in system	120 (4.1, 4.2)
	Compressor (service part) charging amount	120 (4.1, 4.2)

Refrigerant

INFOID:0000000012794077

Type		HFC-134a (R-134a)
Capacity kg (lb)		0.5 (1.1)

Engine Idling Speed

INFOID:0000000012794078

Refer to [EC4-973. "Idle Speed"](#).

Belt Tension

INFOID:0000000012794079

Refer to [EM-17. "Adjustment"](#).

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000013611488

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, it is recommended that all maintenance and repair be performed by an authorized NISSAN/INFINITI dealer.
- Improper repair, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery or batteries, and wait at least 3 minutes before performing any service.


Precautions for Removing Battery Terminal

INFOID:000000013611489

When disconnecting the battery terminal, pay attention to the following.

- Always use a 12V battery as power source.
- Never disconnect battery terminal while engine is running.
- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.
- For vehicles with the engine listed below, remove the battery terminal after a lapse of the specified time:

BR08DE	: 4 minutes	V9X engine	: 4 minutes
D4D engine	: 20 minutes	YD25DDTi	: 2 minutes
HR09DET	: 12 minutes	YS23DDT	: 4 minutes
HRA2DDT	: 12 minutes	YS23DDTT	: 4 minutes
K9K engine	: 4 minutes	ZD30DDTi	: 60 seconds
M9R engine	: 4 minutes	ZD30DDTT	: 60 seconds
R9M engine	: 4 minutes		

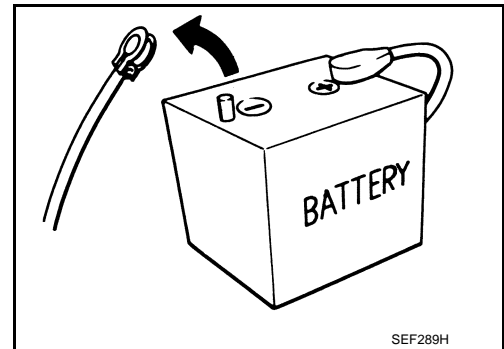

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- After high-load driving, if the vehicle is equipped with the V9X engine, turn the ignition switch OFF and wait for at least 15 minutes to remove the battery terminal.

NOTE:

A
B
C
D
E
F
G
H
HA
J
K
L
M
N
O
P

PRECAUTIONS

[VR30DDTT]

< PRECAUTION >

- Turbocharger cooling pump may operate in a few minutes after the ignition switch is turned OFF.
- Example of high-load driving
 - Driving for 30 minutes or more at 140 km/h (86 MPH) or more.
 - Driving for 30 minutes or more on a steep slope.
- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.

NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.


NOTE:

The removal of 12V battery may cause a DTC detection error.

Precaution for Procedure without Cowl Top Cover

INFOID:000000013611490

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

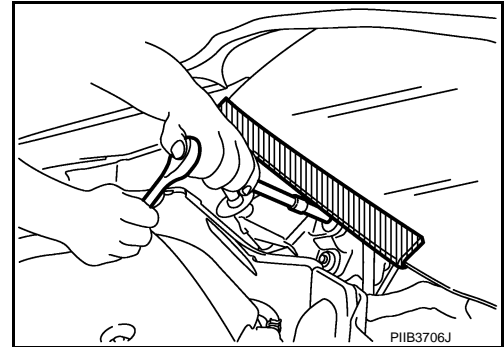

Precautions For Refrigerant System Service

INFOID:000000013611491

GENERAL REFRIGERANT PRECAUTION

WARNING:

- **Never breathe A/C refrigerant and lubricant vapor or mist. Exposure may irritate eyes, nose and throat. Remove HFC-134a (R-134a) from the A/C system, using certified service equipment meeting requirements of SAE J-2210 [HFC-134a (R-134a) recycling equipment], or J-2209 [HFC-134a (R-134a) recovery equipment]. Ventilate work area before resuming service if accidental system discharge occurs. Additional health and safety information may be obtained from refrigerant and lubricant manufacturers.**
- **Never release refrigerant into the air. Use approved recovery/recycling recharging equipment to capture the refrigerant each time an air conditioning system is discharged.**
- **Wear always eye and hand protection (goggles and gloves) when working with any refrigerant or air conditioning system.**
- **Never store or heat refrigerant containers above 52°C (126°F).**
- **Never heat a refrigerant container with an open flame; Place the bottom of the container in a warm pail of water if container warming is required.**
- **Never intentionally drop, puncture, or incinerate refrigerant containers.**
- **Keep refrigerant away from open flames: poisonous gas is produced if refrigerant burns.**
- **Refrigerant displaces oxygen, therefore be certain to work in well ventilated areas to prevent suffocation.**
- **Never pressure test or leakage test HFC-134a (R-134a) service equipment and/or vehicle air conditioning systems with compressed air during repair. Some mixtures of air and HFC-134a (R-134a) have been shown to be combustible at elevated pressures. These mixtures, if ignited, may cause injury or property damage. Additional health and safety information may be obtained from refrigerant manufacturers.**

WORKING WITH HFC-134a (R-134a)

CAUTION:

- **CFC-12 (R-12) refrigerant and HFC-134a (R-134a) refrigerant are not compatible. Compressor malfunction is likely to occur if the refrigerants are mixed, refer to "CONTAMINATED REFRIGERANT" below. To determine the purity of HFC-134a (R-134a) in the vehicle and recovery tank, use Refrigerant recovery/recycling recharging equipment and Refrigerant Identifier.**

PRECAUTIONS

[VR30DDTT]

< PRECAUTION >

- Use only specified lubricant for the HFC-134a (R-134a) A/C system and HFC-134a (R-134a) components. Compressor malfunction is likely to occur if lubricant other than that specified is used.
- The specified HFC-134a (R-134a) lubricant rapidly absorbs moisture from the atmosphere. The following handling precautions must be observed:
 - Cap (seal) immediately the component to minimize the entry of moisture from the atmosphere when removing refrigerant components from a vehicle.
 - Never remove the caps (unseal) until just before connecting the components when installing refrigerant components to a vehicle. Connect all refrigerant loop components as quickly as possible to minimize the entry of moisture into system.
 - Use only the specified lubricant from a sealed container. Reseal immediately containers of lubricant. Lubricant becomes moisture saturated and should not be used without proper sealing.
 - Never allow lubricant to come in contact with styrene foam parts. Damage may result.

CONTAMINATED REFRIGERANT

Take appropriate steps shown below if a refrigerant other than pure HFC-134a (R-134a) is identified in a vehicle:

- Explain to the customer that environmental regulations prohibit the release of contaminated refrigerant into the atmosphere.
- Explain that recovery of the contaminated refrigerant could damage service equipment and refrigerant supply.
- Suggest the customer return the vehicle to the location of previous service where the contamination may have occurred.
- In case of repairing, recover the refrigerant using only **dedicated equipment and containers. Never recover contaminated refrigerant into the existing service equipment.** Contact a local refrigerant product retailer for available service if the facility does not have dedicated recovery equipment. This refrigerant must be disposed of in accordance with all federal and local regulations. In addition, replacement of all refrigerant system components on the vehicle is recommended.
- The air conditioner warranty is void if the vehicle is within the warranty period. Please contact Nissan Customer Affairs for further assistance.

REFRIGERANT CONNECTION

A new type refrigerant connection has been introduced to all refrigerant lines except the following location.

- Expansion valve to evaporator
- Refrigerant pressure sensor to condenser & liquid tank assembly

WARNING:

Check that all refrigerant is discharged into the recycling equipment and the pressure in the system is less than atmospheric pressure. Then gradually loosen the discharge side hose fitting and remove it.

CAUTION:

Observe the following when replacing or cleaning refrigerant cycle components.

- Store it in the same way at it is when mounted on the car when the compressor is removed. Failure to do so will cause lubricant to enter the low-pressure chamber.
- Use always a torque wrench and a back-up wrench when connecting tubes.
- Plug immediately all openings to prevent entry of dust and moisture after disconnecting tubes.
- Connect the pipes at the final stage of the operation when installing an air conditioner in the vehicle. Never remove the seal caps of pipes and other components until just before required for connection.
- Allow components stored in cool areas to warm to working area temperature before removing seal caps. This prevents condensation from forming inside A/C components.
- Remove thoroughly moisture from the refrigeration system before charging the refrigerant.
- Replace always used O-rings.
- Apply lubricant to circle of the O-rings shown in illustration when connecting tube. Be careful not to apply lubricant to threaded portion.

Name : SP-10


- O-ring must be closely attached to the groove portion of tube.
- Be careful not to damage O-ring and tube when replacing the O-ring.
- Connect tube until a click can be heard. Then tighten the nut or bolt by hand. Check that the O-ring is installed to tube correctly.

PRECAUTIONS

[VR30DDTT]

< PRECAUTION >

- Perform leakage test and make sure that there is no leakage from connections after connecting line. Disconnect that line and replace the O-ring when the refrigerant leaking point is found. Then tighten connections of seal seat to the specified torque.

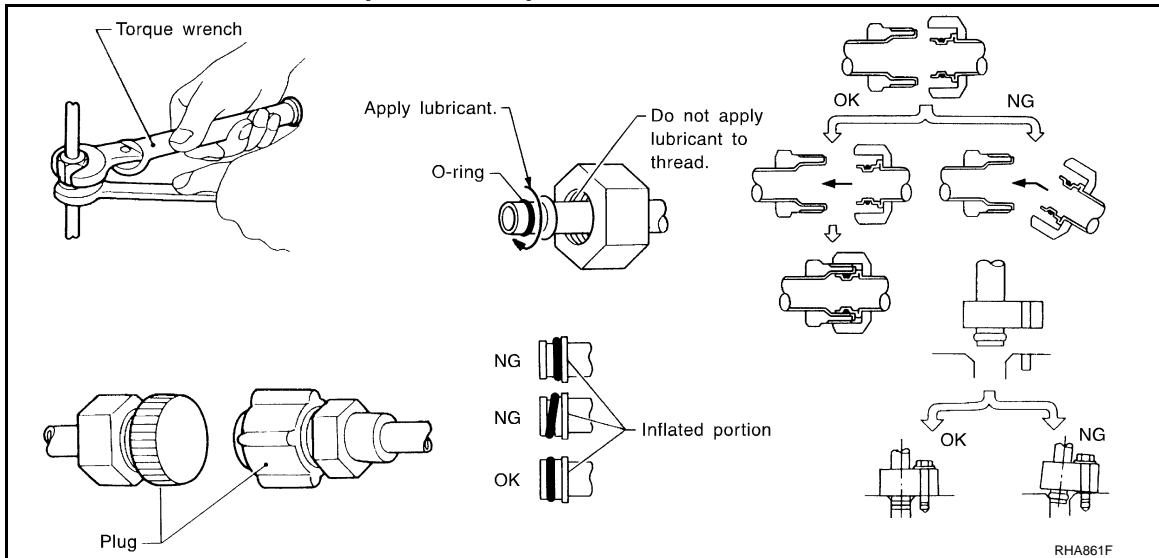

COMPRESSOR

CAUTION:

- Plug all openings to prevent moisture and foreign matter from entering.
- Store it in the same way at it is when mounted on the car when the compressor is removed.
- Follow "Maintenance of Lubricant Quantity in Compressor" exactly when replacing or repairing compressor. Refer to [HA-73, "Description"](#).
- Keep friction surfaces between clutch and pulley clean. Wipe it off by using a clean waste cloth moistened with thinner if the surface is contaminated with lubricant.
- Turn the compressor shaft by hand more than five turns in both directions after compressor service operation. This distributes equally lubricant inside the compressor. Let the engine idle and operate the compressor for one hour after the compressor is installed.
- Apply voltage to the new one and check for normal operation after replacing the compressor magnet clutch.

LEAK DETECTION DYE

CAUTION:

- The A/C system contains a fluorescent leak detection dye used for locating refrigerant leakages. An ultraviolet (UV) lamp is required to illuminate the dye when inspecting for leakages.
- Wear always fluorescence enhancing UV safety goggles to protect eyes and enhance the visibility of the fluorescent dye.
- The fluorescent dye leak detector is not a replacement for an electrical leak detector (SST: J-41995). The fluorescent dye leak detector should be used in conjunction with an electrical leak detector (SST: J-41995) to pin-point refrigerant leakages.
- Read and follow all manufacturer's operating instructions and precautions prior to performing the work for the purpose of safety and customer's satisfaction.
- A compressor shaft seal should not necessarily be repaired because of dye seepage. The compressor shaft seal should only be repaired after confirming the leakage with an electrical leak detector (SST: J-41995).
- Remove always any remaining dye from the leakage area after repairs are completed to avoid a misdiagnosis during a future service.
- Never allow dye to come into contact with painted body panels or interior components. Clean immediately with the approved dye cleaner if dye is spilled. Fluorescent dye left on a surface for an extended period of time cannot be removed.
- Never spray the fluorescent dye cleaning agent on hot surfaces (engine exhaust manifold, etc.).
- Never use more than one refrigerant dye bottle [1/4 ounce (7.4 cc)] per A/C system.
- Leak detection dyes for HFC-134a (R-134a) and CFC-12 (R-12) A/C systems are different. Never use HFC-134a (R-134a) leak detection dye in CFC-12 (R-12) A/C system, or CFC-12 (R-12) leak detection dye in HFC-134a (R-134a) A/C system, or A/C system damage may result.
- The fluorescent properties of the dye remains for three or more years unless a compressor malfunction occurs.

PRECAUTIONS

[VR30DDTT]

< PRECAUTION >

Service Equipment

INFOID:000000013611492

RECOVERY/RECYCLING RECHARGING EQUIPMENT

Be certain to follow the manufacturer's instructions for machine operation and machine maintenance. Never introduce any refrigerant other than that specified into the machine.

ELECTRICAL LEAK DETECTOR


Be certain to follow the manufacturer's instructions for tester operation and tester maintenance.

VACUUM PUMP

The lubricant contained inside the vacuum pump is not compatible with the specified lubricant for HFC-134a (R-134a) A/C systems. The vent side of the vacuum pump is exposed to atmospheric pressure. So the vacuum pump lubricant may migrate out of the pump into the service hose. This is possible when the pump is switched OFF after evacuation (vacuuming) and hose is connected to it. To prevent this migration, use a manual valve placed near the hose-to-pump connection, as per the following.


- Vacuum pumps usually have a manual isolator valve as part of the pump. Close this valve to isolate the service hose from the pump.
- Use a hose equipped with a manual shut-off valve near the pump end for pumps without an isolator. Close the valve to isolate the hose from the pump.
- Disconnect the hose from the pump if the hose has an automatic shut-off valve. As long as the hose is connected, the valve is open and lubricating oil may migrate.

Some one-way valves open when vacuum is applied and close under no vacuum condition. Such valves may restrict the pump's ability to pull a deep vacuum and are not recommended.

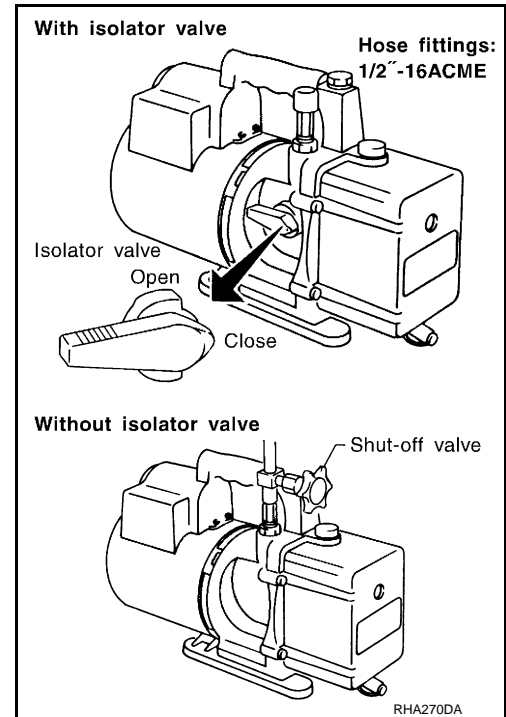


MANIFOLD GAUGE SET

Be certain that the gauge face indicates HFC-134a or R-134a. Be sure the gauge set has 1/2"-16 ACME threaded connections for service hoses. Confirm the set has been used only with refrigerant HFC-134a (R-134a) and specified lubricants.

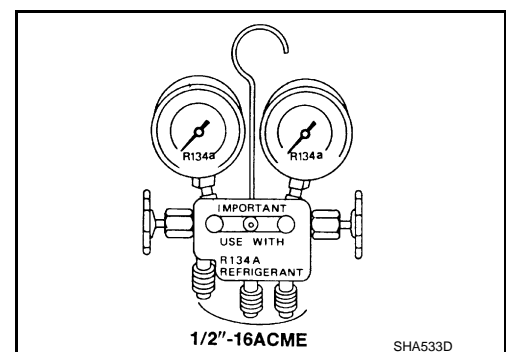

SERVICE HOSES

Be certain that the service hoses display the markings described (colored hose with black stripe). All hoses must equip positive shut-off devices (either manual or automatic) near the end of the hoses opposite to the manifold gauge.

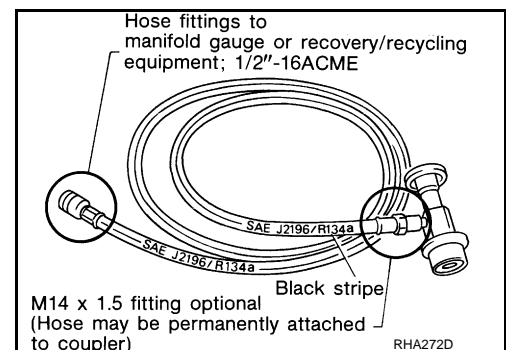

SERVICE COUPLERS

A
B
C
D
E
F
G
H
HA
J
K
L
M
N
O
P


PRECAUTIONS

[VR30DDTT]

< PRECAUTION >


Never attempt to connect HFC-134a (R-134a) service couplers to the CFC-12 (R-12) A/C system. The HFC-134a (R-134a) couplers do not properly connect to the CFC-12 (R-12) system. However, if an improper connection is attempted, discharging and contamination may occur.

Shut-off valve rotation	A/C service valve
Clockwise	Open
Counterclockwise	Close

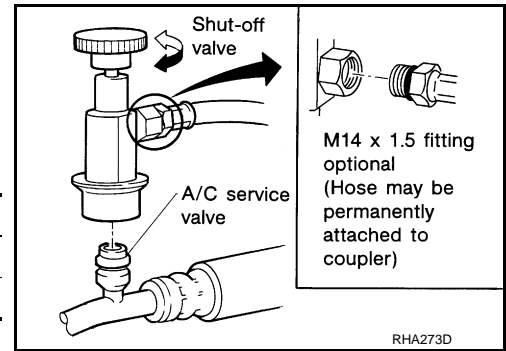

REFRIGERANT WEIGHT SCALE

Verify that no refrigerant other than HFC-134a (R-134a) and specified lubricants have been used with the scale. The hose fitting must be 1/2"-16 ACME if the scale controls refrigerant flow electronically.

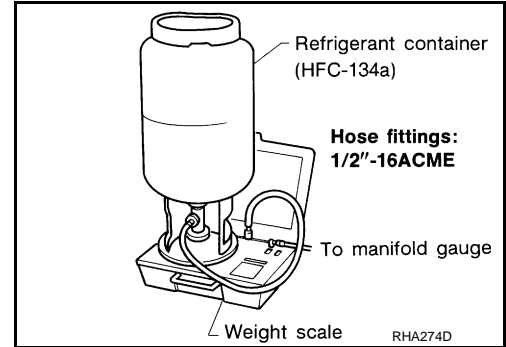

CHARGING CYLINDER

Using a charging cylinder is not recommended. Refrigerant may be vented into air from cylinder's top valve when filling the cylinder with refrigerant. Also, the accuracy of the cylinder is generally less than that of an electronic scale or of quality recycle/recharge equipment.

PREPARATION

PREPARATION


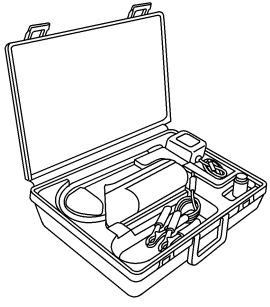
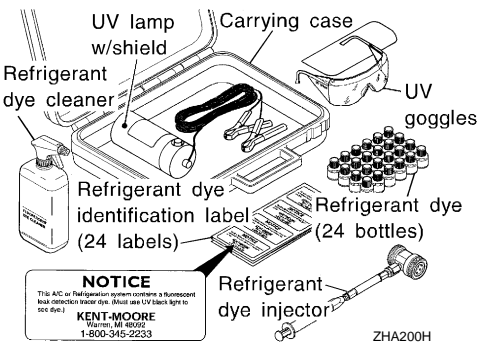
Special Service Tool

INFOID:000000013611493

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

HFC-134a (R-134a) Service Tool and Equipment



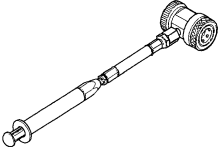

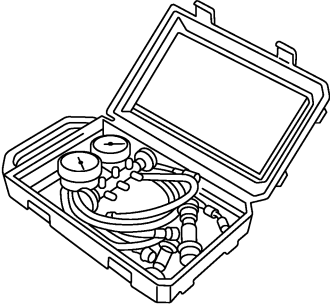
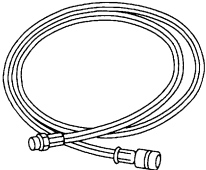
- Never mix HFC-134a (R-134a) refrigerant and/or its specified lubricant with CFC-12 (R-12) refrigerant and/or its lubricant.
- Separate and non-interchangeable service equipment must be used for handling each type of refrigerant/lubricant.
- Refrigerant container fittings, service hose fittings and service equipment fittings (equipment which handles refrigerant and/or lubricant) are different between CFC-12 (R-12) and HFC-134a (R-134a). This is to avoid mixed use of the refrigerants/lubricant.
- Never use adapters that convert one size fitting to another: refrigerant/lubricant contamination occurs and compressor malfunction may result.

Tool number (Kent-Moore No.) Tool name	Description
<p>(ACR2005-NI) ACR5 A/C Service Center</p>  <p style="text-align: right; font-size: small;">WJIA0293E</p>	<p>Function: Refrigerant recovery, recycling and recharging</p>
<p>(J-41995) Electrical leak detector</p>  <p style="text-align: right; font-size: small;">AHA281A</p>	<p>Power supply: DC 12 V (Battery terminal)</p>
<p>(J-43926) Refrigerant dye leak detection kit</p> <p>Kit includes:</p> <ul style="list-style-type: none"> (J-42220) UV lamp and UV safety goggles (J-41459) HFC-134a (R-134a) dye injector Use with J-41447, 1/4 ounce bottle (J-41447) HFC-134a (R-134a) fluorescent leak detection dye (Box of 24, 1/4 ounce bottles) (J-43872) Refrigerant dye cleaner  <p style="text-align: right; font-size: small;">ZHA200H</p>	<p>Power supply: DC 12 V (Battery terminal)</p>

PREPARATION

< PREPARATION >




[VR30DDTT]

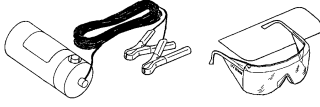Tool number (Kent-Moore No.) Tool name	Description
<p>(J-42220) UV lamp and UV safety goggles</p> <div style="text-align: center;">  <p>SHA438F</p> </div>	<p>Power supply: DC 12 V (Battery terminal) For checking refrigerant leakage when fluorescent dye is equipped in A/C system Includes: UV lamp and UV safety goggles</p>
<p>(J-41447) HFC-134a (R-134a) fluorescent leak detection dye (Box of 24, 1/4 ounce bottles)</p> <div style="text-align: center;">  <p>Refrigerant dye (24 bottles)</p> <p>SHA439F</p> </div>	<p>Application: For HFC-134a (R-134a) PAG oil Container: 1/4 ounce (7.4 cc) bottle (Includes self-adhesive dye identification labels for affixing to vehicle after charging system with dye.)</p>
<p>(J-41459) HFC-134a (R-134a) dye injector Use with J-41447, 1/4 ounce bottle</p> <div style="text-align: center;">  <p>SHA440F</p> </div>	<p>For injecting 1/4 ounce of fluorescent leak detection dye into A/C system</p>
<p>(J-43872) Refrigerant dye cleaner</p> <div style="text-align: center;">  <p>SHA441F</p> </div>	<p>For cleaning dye spills</p>
<p>(J-39183) Manifold gauge set (with hoses and couplers)</p> <div style="text-align: center;">  <p>RJIA0196E</p> </div>	<p>Identification:</p> <ul style="list-style-type: none"> • The gauge face indicates HFC-134a (R-134a). <p>Fitting size: Thread size</p> <ul style="list-style-type: none"> • 1/2" -16 ACME
<p>Service hoses</p> <ul style="list-style-type: none"> • High-pressure side hose (J-39501-72) • Low-pressure side hose (J-39502-72) • Utility hose (J-39476-72) <div style="text-align: center;">  <p>S-NT201</p> </div>	<p>Hose color:</p> <ul style="list-style-type: none"> • Low-pressure side hose: Blue with black stripe • High-pressure side hose: Red with black stripe • Utility hose: Yellow with black stripe or green with black stripe <p>Hose fitting to gauge:</p> <ul style="list-style-type: none"> • 1/2" -16 ACME

PREPARATION

< PREPARATION >


[VR30DDTT]

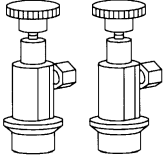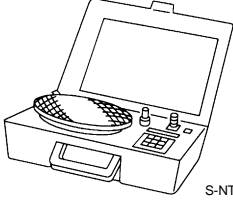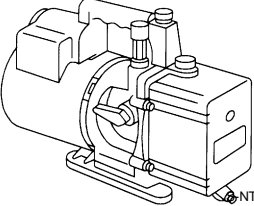Tool number (Kent-Moore No.) Tool name		Description
<p>Service couplers</p> <ul style="list-style-type: none"> • High-pressure side coupler (J-39500-20) • Low-pressure side coupler (J-39500-24) 	 <p style="text-align: center; font-size: small;">S-NT202</p>	<p>Hose fitting to service hose: M14 x 1.5 fitting is optional or permanently attached.</p>
<p>(J-39650) Refrigerant weight scale</p>	 <p style="text-align: center; font-size: small;">S-NT200</p>	<p>For measuring of refrigerant Fitting size: Thread size 1/2" -16 ACME</p>
<p>(J-39649) Vacuum pump (Including the isolator valve)</p>	 <p style="text-align: center; font-size: small;">S-NT203</p>	<p>Capacity:</p> <ul style="list-style-type: none"> • Air displacement: 4 CFM • Micron rating: 20 microns • Oil capacity: 482 g (17 oz) <p>Fitting size: Thread size</p> <ul style="list-style-type: none"> • 1/2" -16 ACME

Commercial Service Tool

INFOID:000000013611494

HA

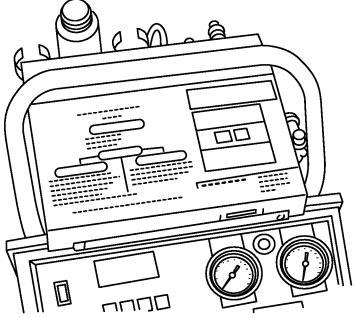Tool name	Description
<p>Refrigerant identifier equipment</p>	 <p style="text-align: center; font-size: x-small;">RJIA0197E</p>
	<p>Checking for refrigerant purity and system contamination</p>

Sealant or/and Lubricant

INFOID:000000013611495



HFC-134a (R-134a) Service Tool and Equipment

- Never mix HFC-134a (R-134a) refrigerant and/or its specified lubricant with CFC-12 (R-12) refrigerant and/or its lubricant.
- Separate and non-interchangeable service equipment must be used for handling each type of refrigerant/lubricant.
- Refrigerant container fittings, service hose fittings and service equipment fittings (equipment which handles refrigerant and/or lubricant) are different between CFC-12 (R-12) and HFC-134a (R-134a). This is to avoid mixed use of the refrigerants/lubricant.
- Never use adapters that convert one size fitting to another: refrigerant/lubricant contamination occurs and compressor malfunction may result.

PREPARATION

< PREPARATION >

[VR30DDTT]

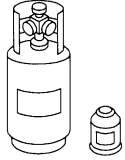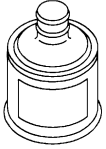
Tool name	Description
<p>HFC-134a (R-134a) refrigerant</p>  <p>S-NT196</p>	<p>Container color: Light blue Container marking: HFC-134a (R-134a) Fitting size: Thread size</p> <ul style="list-style-type: none">• Large container 1/2" -16 ACME
<p>A/C System Oil SP-10</p>  <p>JMIIA1759ZZ</p>	<p>Type: Polyalkylene glycol oil (PAG), Application: HFC-134a (R-134a) swash plate compressors Capacity: 40 mℓ (1.4 US fl oz., 1.4 Imp fl oz.)</p>

SYSTEM DESCRIPTION

COMPONENT PARTS
REFRIGERATION SYSTEM

REFRIGERATION SYSTEM : Component Parts Location

INFOID:000000013611496

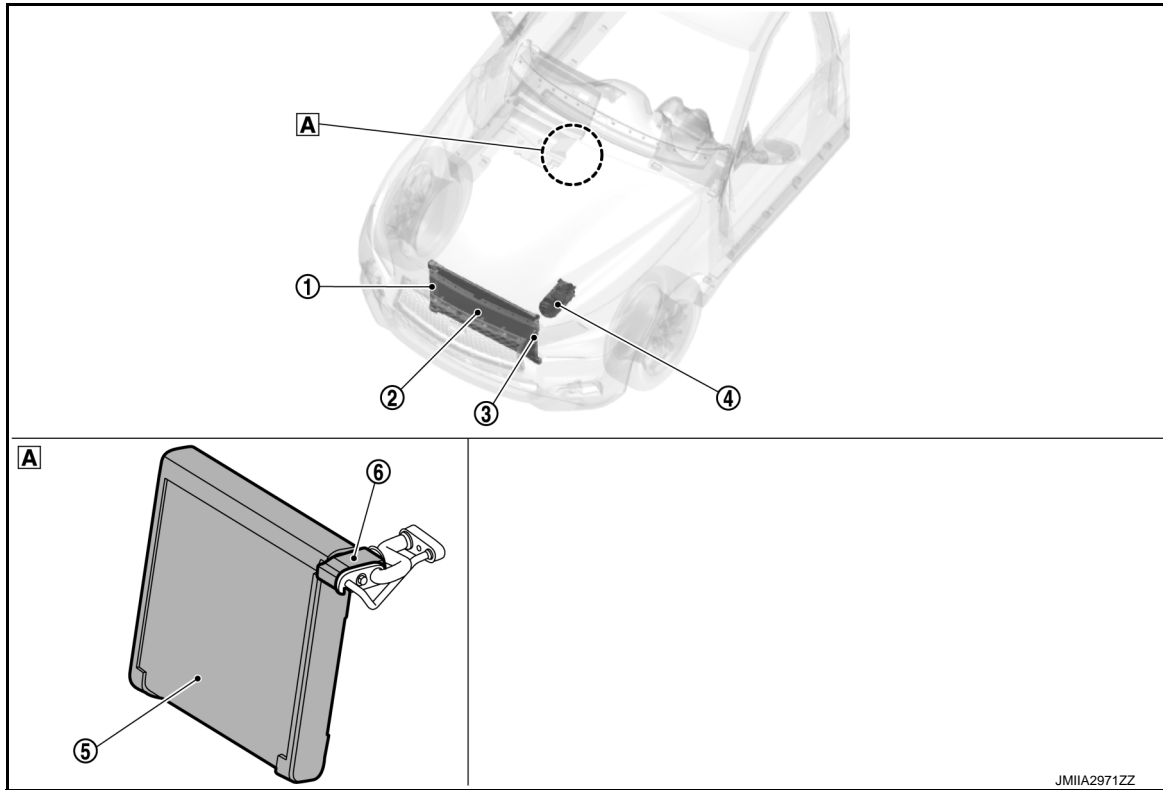

A In the heater & cooling unit assembly

No.	Location	Function
①	Liquid tank (Condenser & liquid tank assembly)	Refer to HA-65, "CONDENSER : Liquid Tank" .
②	Condenser (Condenser & liquid tank assembly)	Refer to HA-64, "CONDENSER : Condenser" .
③	Refrigerant pressure sensor	Refer to HAC-16, "Refrigerant Pressure Sensor" .
④	Compressor	Refer to HA-65, "Compressor" .
⑤	Evaporator	Refer to HA-64, "HEATER & COOLING UNIT ASSEMBLY : Evaporator" .
⑥	Expansion valve	Refer to HA-64, "HEATER & COOLING UNIT ASSEMBLY : Expansion Valve" .

HEATER & COOLING UNIT ASSEMBLY

COMPONENT PARTS

< SYSTEM DESCRIPTION >


[VR30DDTT]

HEATER & COOLING UNIT ASSEMBLY : Heater & Cooling Unit

INFOID:000000013611497

This system utilizes a heater & cooling unit that combines blower unit, heater unit, and cooling unit.


↔ : Vehicle front

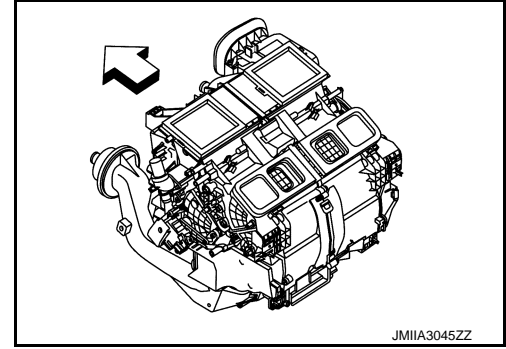

HEATER & COOLING UNIT ASSEMBLY : Evaporator

INFOID:000000013611498


- A thin laminate pipeless evaporator is used.
- The mist from liquid refrigerant transforms to gas by evaporation by the air conveyed from blower motor. The air is cooled by the heat by evaporation.

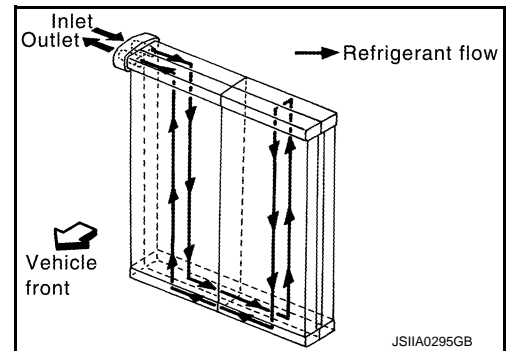

HEATER & COOLING UNIT ASSEMBLY : Expansion Valve

INFOID:000000013611499

The refrigerant temperature is detected by the temperature sensing part located in low-pressure refrigerant path inside expansion valve. The lift amount of high-pressure side ball valve is changed to regulate the refrigerant flow.

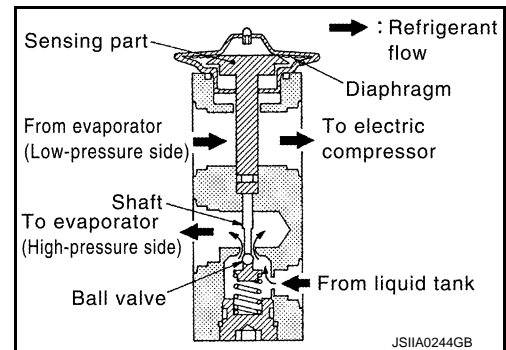

CONDENSER

CONDENSER : Condenser

INFOID:000000013611500

DESCRIPTION

- A sub-cool condenser that combines a parallel-flow condenser and liquid tank in the sub-cool cycle is used.
- Cools refrigerant discharged from compressor, and transforms it to liquid refrigerant.


STRUCTURE AND OPERATION

COMPONENT PARTS

[VR30DDTT]

< SYSTEM DESCRIPTION >

The sub-cool section is installed on the condenser, and the liquid refrigerant that exits the liquid tank is further cooled by the condenser sub-cool section, increasing the amount of heat that the liquid refrigerant can absorb and improving cooling performance.

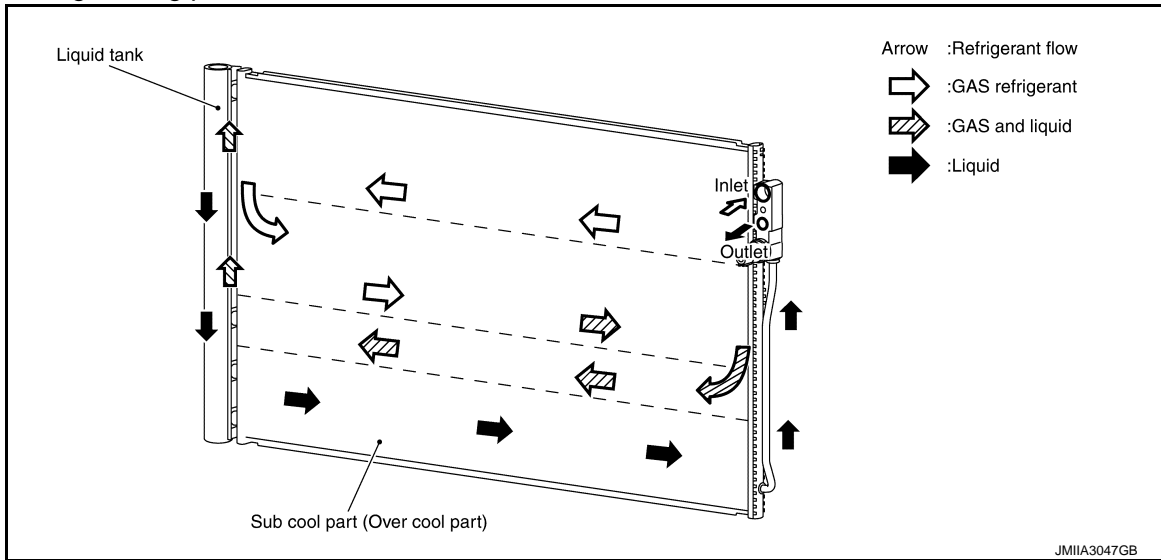

CONDENSER : Liquid Tank


INFOID:000000013611501

- A liquid tank compatible with HFC-134a refrigerant is used.
- Eliminates foreign matter in refrigerant, and stores temporarily liquid refrigerant.

Compressor


INFOID:000000013611502

Intakes, compresses, and discharges refrigerant, to circulate refrigerant inside the refrigerant cycle.

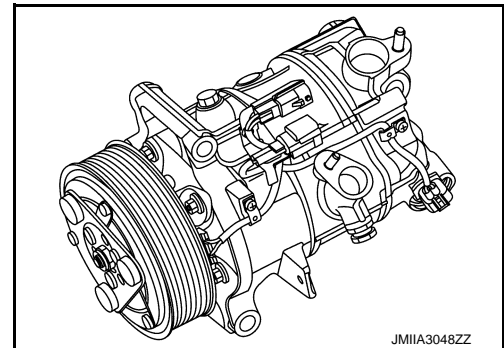

SYSTEM

System Diagram

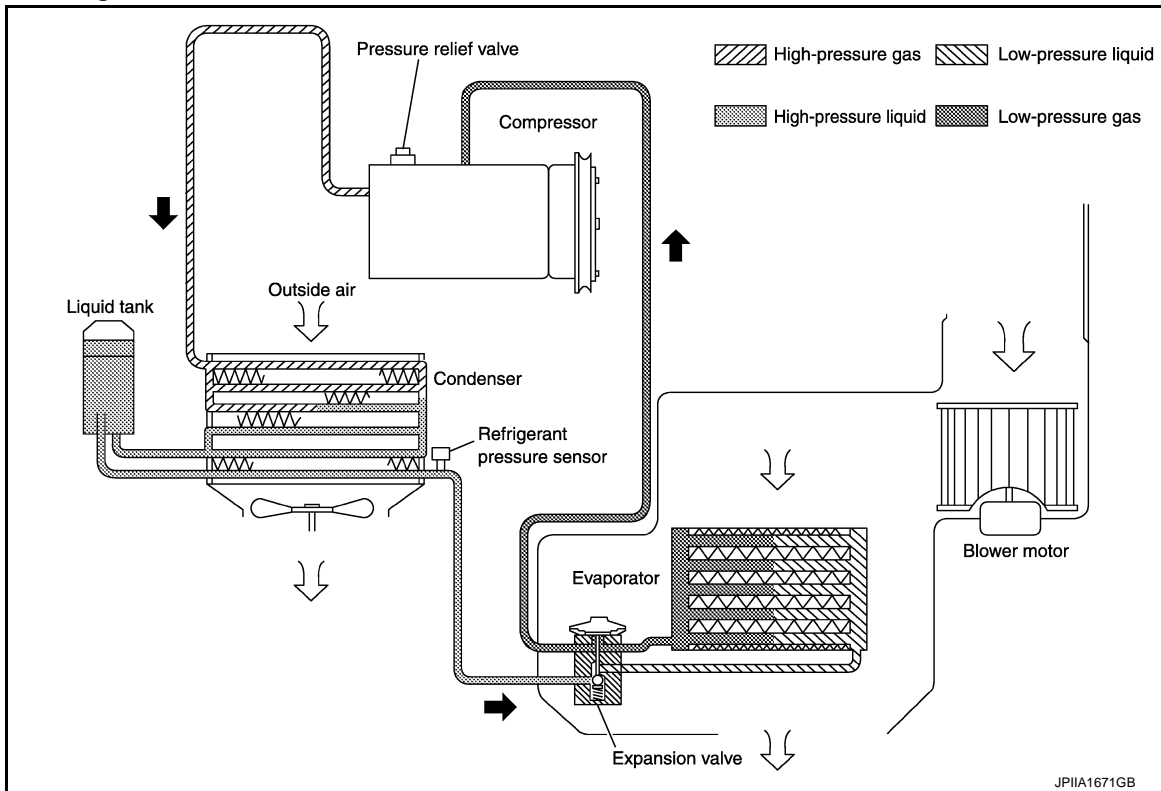

System Description

INFOID:000000013611504

REFRIGERANT CYCLE

Refrigerant Flow

The refrigerant from the compressor, flows the condenser & liquid tank assembly, the evaporator, and returns to the compressor. The refrigerant evaporation in the evaporator is controlled by an expansion valve.

Freeze Protection

To prevent evaporator from freezing up, the evaporator air temperature is monitored, and the voltage signal to the A/C auto amp. makes the A/C relay go OFF and stop the compressor.

REFRIGERANT SYSTEM PROTECTION

Refrigerant Pressure Sensor

- The refrigerant system is protected against excessively high- or low-pressures by the refrigerant pressure sensor, located to the condenser & liquid tank assembly. The refrigerant pressure sensor detects the pressure inside the refrigerant line and sends the voltage signal to the ECM if the system pressure rises above, or falls below the specifications.
- ECM turns the A/C relay to OFF and stops the compressor when the high-pressure side detected by refrigerant pressure sensor is following conditions;
 - Approximately 3,120 kPa (31.8 kg/cm², 452 psi) or more (Engine speed is 1,500 rpm or more.)
 - Approximately 2,740 kPa (27.9 kg/cm², 397 psi) or more (Engine speed is less than 1,500 rpm.)
 - Approximately 120 kPa (1.2 kg/cm², 17 psi) or less

Pressure Relief Valve

The refrigerant system is also protected by a pressure relief valve, located in the rear head of the compressor. The release port on the pressure relief valve automatically opens and releases refrigerant into the atmosphere when the pressure of refrigerant in the system increases to an unusual level [more than 3,800 kPa (38.8 kg/cm², 551 psi)].


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000013611505

OVERALL SEQUENCE

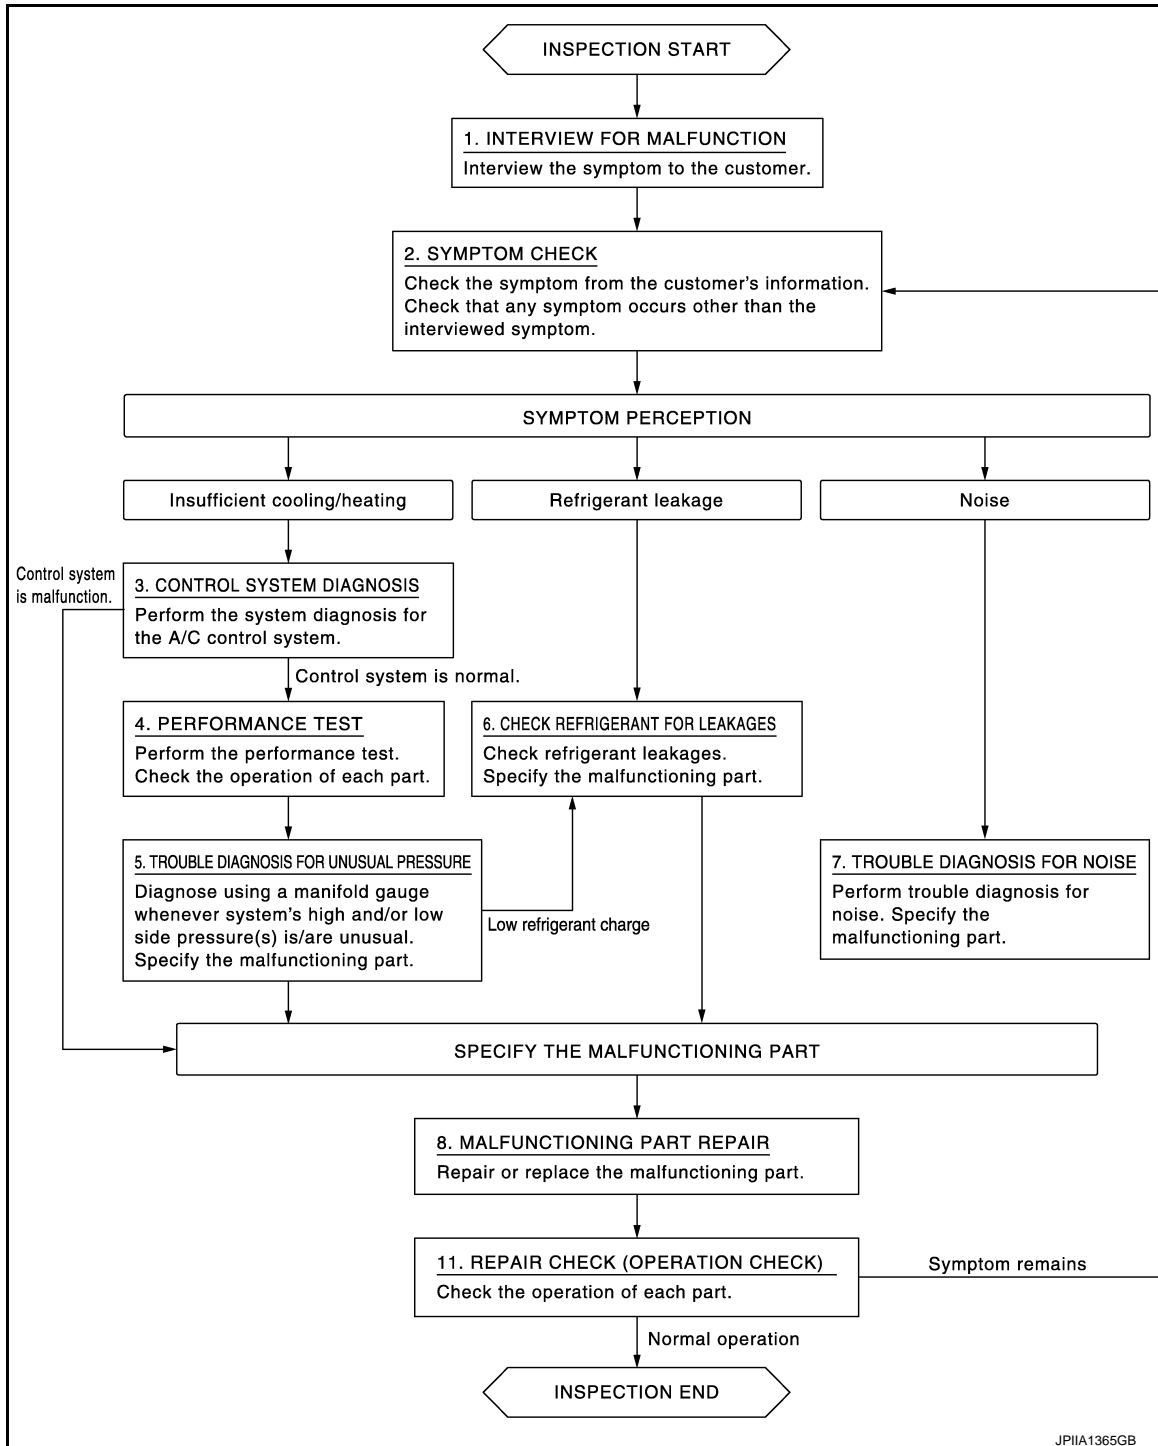

DETAILED FLOW

1. INTERVIEW FOR MALFUNCTION

Interview the symptom to the customer.

DIAGNOSIS AND REPAIR WORKFLOW

[VR30DDTT]

< BASIC INSPECTION >

>> GO TO 2.

2. SYMPTOM CHECK

Check the symptom from the customer's information. Check that any symptom occurs other than the interviewed symptom.

Insufficient cooling/heating>>GO TO 3.

Refrigerant leakage>>GO TO 6.

Noise >> GO TO 7.

3. CONTROL SYSTEM DIAGNOSIS

Perform the system diagnosis for the A/C control system. Refer to [HAC-70, "Work Flow"](#).

Is A/C control system normal?

YES >> GO TO 4.

NO >> GO TO 8.

4. PERFORMANCE TEST

Perform the performance test. Check the operation of each part. Refer to [HA-75, "Inspection"](#).

>> GO TO 5.

5. TROUBLE DIAGNOSIS FOR UNUSUAL PRESSURE

Diagnose using a manifold gauge whenever system's high and/or low side pressure(s) is/are unusual. Specify the malfunctioning part. Refer to [HA-77, "Symptom Table"](#).

Low refrigerant charge>>GO TO 6.

Except above>>GO TO 8.

6. CHECK REFRIGERANT FOR LEAKAGES

Check refrigerant for leakages. Specify the malfunctioning part. Refer to [HA-69, "Leak Test"](#).

>> GO TO 8.

7. TROUBLE DIAGNOSIS FOR NOISE

Perform trouble diagnosis for noise. Specify the malfunctioning part. Refer to [HA-79, "Symptom Table"](#).

>> GO TO 8.

8. MALFUNCTION PART REPAIR

Repair or replace the malfunctioning part.

>> GO TO 9.

9. REPAIR CHECK (OPERATION CHECK)

Check the operation of each part.

Does it operate normally?

YES >> INSPECTION END

NO >> GO TO 2.

REFRIGERANT

< BASIC INSPECTION >


[VR30DDTT]

REFRIGERANT

Description

INFOID:000000013611506

CONNECTION OF SERVICE TOOLS AND EQUIPMENT

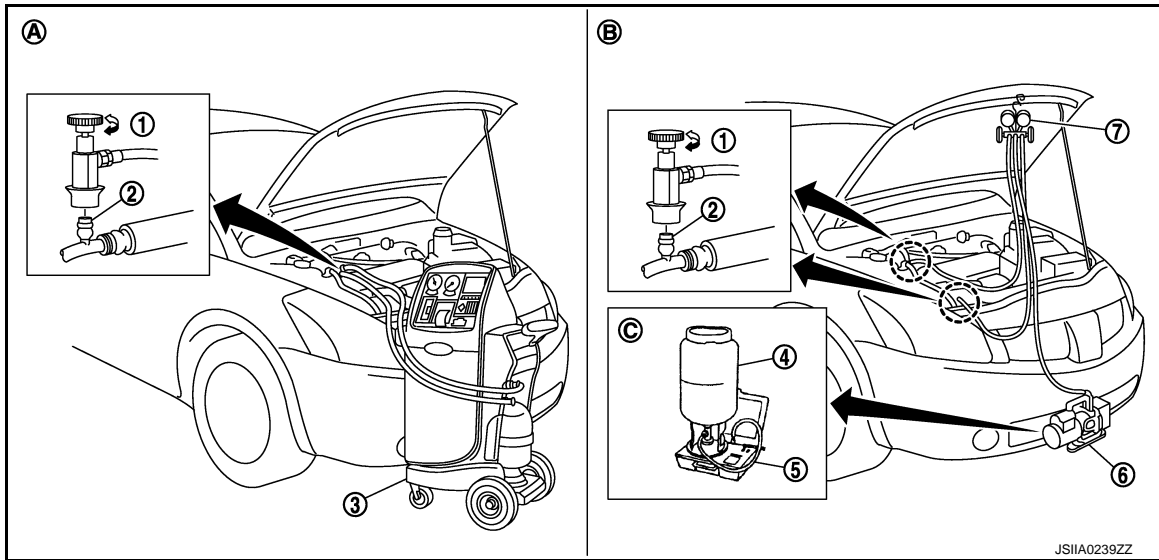


- | | | |
|------------------------------------|--------------------------|---|
| ① Shut-off valve | ② A/C service valve | ③ Recovery/recycling/recharging equipment |
| ④ Refrigerant container (HFC-134a) | ⑤ Weight scale (J-39650) | ⑥ Vacuum pump (J-39649) |
| ⑦ Manifold gauge set (J-39183) | | |
| (A) Preferred (best) method | (B) Alternative method | (C) For charging |

Leak Test

INFOID:000000013611507

CHECK REFRIGERANT LEAKAGE USING FLUORESCENT LEAK DETECTION DYE

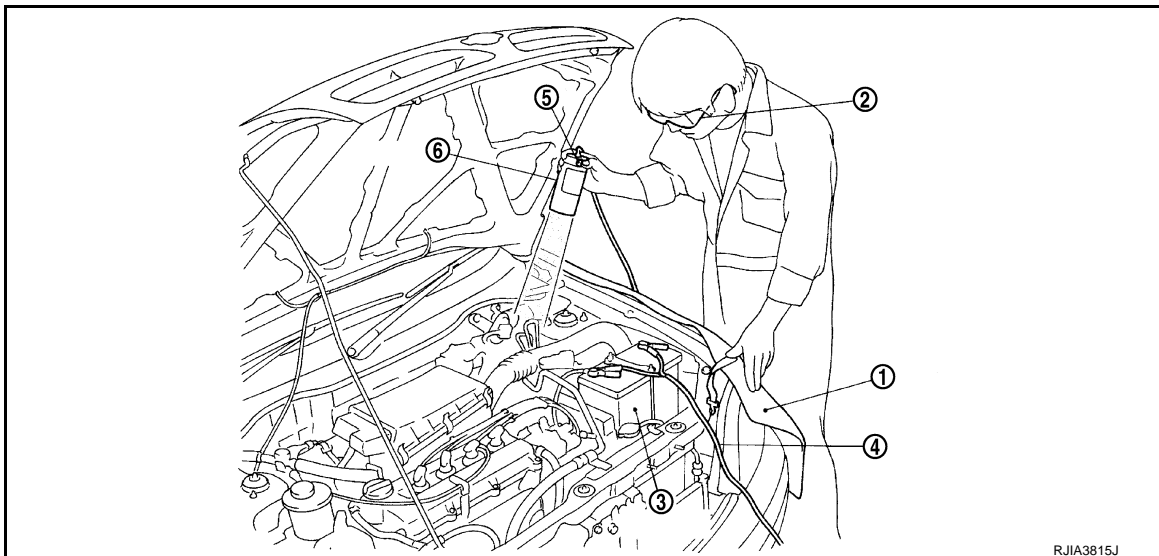

1. Install a fender cover ①.
2. Wear UV safety goggles ② provided with refrigerant dye leak detection kit (J-43926).
3. Connect power cable ④ of UV lamp ⑥ to positive and negative terminals of the battery ③.
4. Press UV lamp switch ⑤ and check A/C system for refrigerant leakage. (Where refrigerant leakage occurs, fluorescent leak detection dye appears in green color.)

REFRIGERANT

< BASIC INSPECTION >

[VR30DDTT]

WARNING:

Never look directly into UV lamp light source.

NOTE:

- For continuous operating time of UV lamp, follow the manufacturer operating instructions.
- Illuminate piping joints from different angles using UV lamp and check that there is no leakage.
- Use a mirror in area that is difficult to see to check refrigerant leakage.
- Refrigerant leakage from evaporator can be detected by soaking cotton swab or a similar material with drain hose water and illuminating it using UV lamp.
- Dust, dirt, and packing materials adhesive used for condenser, evaporator, and other locations may fluoresce. Be careful not to misidentify leakage.

5. Repair or replace parts where refrigerant leakage occurs and wipe off fluorescent leak detection dye.

NOTE:

Completely wipe off fluorescent leak detection dye from gaps between parts, screw threads, and others using a cotton swab or similar materials.

6. Use a UV lamp to check that no fluorescent leak detection dye remains after finishing work.

WARNING:

Never look directly into UV lamp light source.

NOTE:

- For continuous operating time of UV lamp, follow the manufacturer operating instructions.
- Dust, dirt, and packing materials adhesive used for condenser, evaporator, and other locations may fluoresce. Be careful not to misidentify leakage.

CHECK REFRIGERANT LEAKAGE USING ELECTRICAL LEAK DETECTOR

WARNING:

Never check refrigerant leakage while the engine is running.

CAUTION:

Be careful of the following items so that inaccurate checks or misidentifications are avoided.

- **Never allow refrigerant vapor, shop chemical vapors, cigarette smoke, or others around the vehicle.**
- **Always check refrigerant leakage in a low air flow environment so that refrigerant may not disperse when leakage occurs.**

1. Stop the engine.
2. Connect recovery/recycling/recharging equipment or manifold gauge set (J-39183) to A/C service valve.
3. Check that A/C refrigerant pressure is 345 kPa (3.52 kg/cm², 50 psi) or more when temperature is 16°C (61°F) or more. When pressure is lower than the specified value, recycle refrigerant completely and fill refrigerant to the specified level.

NOTE:

Leakages may not be detected if A/C refrigerant pressure is 345 kPa (3.52 kg/cm², 50 psi) or less when temperature is less than 16°C (61°F).

4. Clean area where refrigerant leakage check is performed, and check refrigerant leakage along all surfaces of pipe connections and A/C system components using electrical leak detector (J-41995) probe.

CAUTION:

- **Continue checking when a leakage is found. Always continue and complete checking along all pipe connections and A/C system components for additional leakage.**
- **When a leakage is detected, clean leakage area using compressed air and check again.**
- **When checking leakage of cooling unit inside, always clean inside of drain hose so that the probe surface may not be exposed to water or dirt.**

NOTE:

- Always check leakage starting from high-pressure side and continue to low-pressure side.
 - When checking leakage of cooling unit inside, operate blower fan motor for 15 minutes or more at the maximum fan speed while the engine is stopped, and then insert electrical leak detector probe into drain hose and hold for 10 minutes or more.
 - When disconnecting shut-off valve that is connected to A/C service valve, always evacuate remaining refrigerant so that misidentification can be avoided.
5. Repair or replace parts where refrigerant leakage is detected. (Leakage is detected but leakage area is unknown. GO TO 6.)
 6. Start the engine and set A/C control in the following conditions.
 - A/C switch ON
 - Air flow: VENT (ventilation)

REFRIGERANT

[VR30DDTT]

< BASIC INSPECTION >


- Intake door position: Recirculation
 - Temperature setting: Full cold
 - Fan (blower) speed: Maximum speed set
7. Run the engine at approximately 1,500 rpm for 2 minutes or more.
 8. Stop the engine. Check again for refrigerant leakage. GO TO 4.

WARNING:

Be careful not to get burned when the engine is hot.

NOTE:

- Start refrigerant leakage check immediately after the engine is stopped.
- When refrigerant circulation is stopped, pressure on the low-pressure side rises gradually, and after this, pressure on the high-pressure side falls gradually.
- The higher the pressure is, the easier it is to find the refrigerant leakage.

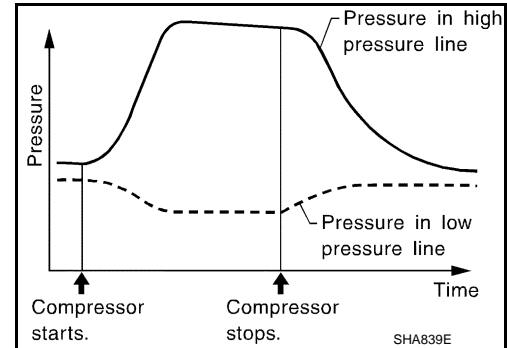

Recycle Refrigerant

INFOID:0000000013611508

WARNING:

- Always use HFC-134a for A/C refrigerant. If CFC-12 is accidentally charged, compressor is damaged due to insufficient lubrication.
- Always observe and follow precautions described on refrigerant container. Incorrect handling may result in an explosion of refrigerant container, frostbite, or the loss of eyesight.
- Never breathe A/C refrigerant and lubricant vapor or mist. Exposure may irritate eyes, nose, or throat.
- Never allow HFC-134a to be exposed to an open flame or others because it generates poisonous gas when in contact with high temperature objects. Keep workshop well ventilated.

1. Perform lubricant return operation. Refer to [HA-73, "Perform Lubricant Return Operation"](#). (If refrigerant or lubricant leakage is detected in a large amount, omit this step, and then GO TO 2.)

CAUTION:

Never perform lubricant return operation if a large amount of refrigerant or lubricant leakage is detected.

2. Check gauge pressure readings of recovery/recycling/recharging equipment. When remaining pressure exists, recycle refrigerant from high-pressure hose and low-pressure hose.

NOTE:

Follow manufacturer instructions for the handling or maintenance of the equipment. Never fill the equipment with non-specified refrigerant.

3. Remove A/C service valve cap from the vehicle.
4. Connect recovery/recycling/recharging equipment to A/C service valve.
5. Operate recovery/recycling/recharging equipment, and recycle refrigerant from the vehicle.
6. Evacuate air for 10 minutes or more to remove any remaining refrigerant integrated to compressor lubricant, etc.
7. Refrigerant recycle operation is complete.

Charge Refrigerant

INFOID:0000000013611509

WARNING:

- Always use HFC-134a for A/C refrigerant. If CFC-12 is accidentally charged, compressor is damaged due to insufficient lubrication.
- Always observe and follow precautions described on refrigerant container. Incorrect handling may result in an explosion of refrigerant container, frostbite, or the loss of eyesight.
- Never breathe A/C refrigerant and lubricant vapor or mist. Exposure may irritate eyes, nose, or throat.
- Never allow HFC-134a to be exposed to an open flame or others because it generates poisonous gas when in contact with high temperature objects. Keep workshop well ventilated.

REFRIGERANT

< BASIC INSPECTION >

[VR30DDTT]

1. Connect recovery/recycling/recharging equipment to the A/C service valve.
2. Operate recovery/recycling/recharging equipment, and evacuate air from A/C system for 25 minutes or more.
CAUTION:
Evacuate air for 15 minutes or more if the parts are replaced.
3. Check the airtightness of A/C system for 25 minutes or more. If pressure raises more than the specified level, charge A/C system with approximately 200 g refrigerant and check that there is no refrigerant leakage. Refer to [HA-69, "Leak Test"](#).
CAUTION:
Check the airtightness for 15 minutes or more if the parts are replaced.
4. If parts other than compressor are replaced, fill compressor lubricant according to parts that are replaced.
5. Charge the specified amount of refrigerant to A/C system.
6. Check that A/C system operates normally.
7. Disconnect recovery/recycling/recharging equipment. (Collect the refrigerant from the high-pressure hose and low-pressure hose of recovery/recycling/recharging equipment.)
8. Install A/C service valve cap.
9. Refrigerant charge is complete.

LUBRICANT

Description

INFOID:000000013611510

MAINTENANCE OF LUBRICANT LEVEL

The compressor lubricant is circulating in the system together with the refrigerant. It is necessary to fill compressor with lubricant when replacing A/C system parts or when a large amount of refrigerant leakage is detected. It is important to always maintain lubricant level within the specified level. Or otherwise, the following conditions may occur.

- Insufficient lubricant amount: Stuck compressor
- Excessive lubricant amount: Insufficient cooling (caused by insufficient heat exchange)

Name : SP-10


Inspection

INFOID:000000013611511

If a compressor is malfunctioning (internal noise, insufficient cooling), check the compressor oil.

1. COMPRESSOR OIL JUDGMENT

1. Remove compressor. Refer to [HA-80, "Removal and Installation"](#).
2. Sample a compressor oil and judge on the figure.

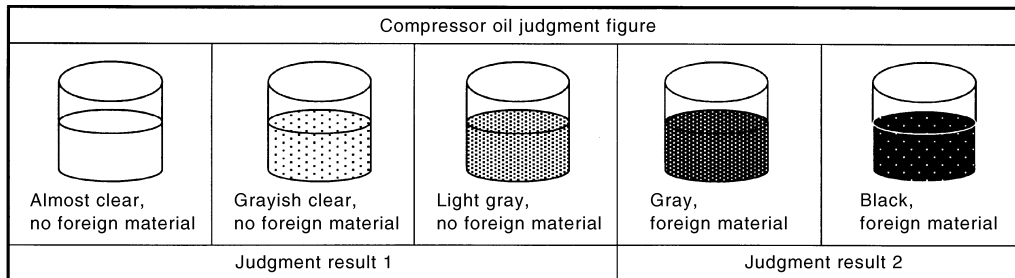

JSIIA0927GB

Judgement result 1>>Replace compressor only.

Judgement result 2>>Replace compressor and condenser & liquid tank assembly.

Perform Lubricant Return Operation

INFOID:000000013611512

CAUTION:

If a large amount of refrigerant or lubricant leakage is detected, never perform lubricant return operation.

1. Start the engine and set to the following conditions.
 - Engine speed: Idling to 1,200 rpm
 - A/C switch: ON
 - Fan (blower) speed: Maximum speed set
 - Intake door position: Recirculation
 - Temperature setting: Full cold
2. Perform lubricant return operation for approximately 10 minutes.
3. Stop the engine.
4. Lubricant return operation is complete.

Lubricant Adjusting Procedure for Components Replacement Except Compressor

INFOID:000000013611513

Fill with lubricant for the amount that is calculated according to the following conditions.

Example: Lubricant amount to be added when replacing evaporator and condenser & liquid tank assembly
 $[m\ell \text{ (US fl oz., Imp fl oz.)}] = 45 (1.5, 1.6) + 30 (1.0, 1.1) + \alpha$

LUBRICANT

< BASIC INSPECTION >

[VR30DDTT]


Conditions		Lubricant amount to be added to A/C system m ℓ (US fl oz., Imp fl oz.)
Replace evaporator		45 (1.5, 1.6)
Replace condenser & liquid tank assembly		30 (1.0, 1.1)
Refrigerant leakage is detected	Large amount leakage	30 (1.0, 1.1)
	Small amount leakage	—
Lubricant amount that is recycled together with refrigerant during recycle operation		α

Lubricant Adjusting Procedure for Compressor Replacement

INFOID:000000013611514

1. Drain lubricant from removed compressor and measure lubricant amount.

- Drain lubricant from high-pressure port (A) and low-pressure port (B) while rotating magnet clutch.
- Measure total amount of lubricant that is drained from removed compressor.

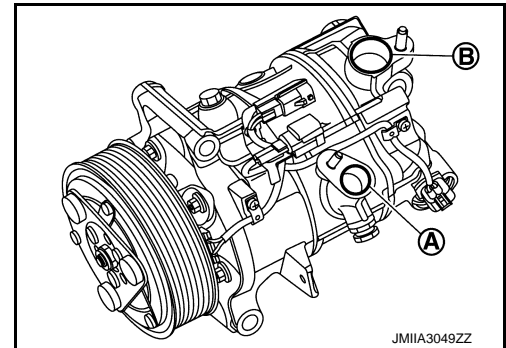

JMIA3049ZZ

2. Drain lubricant from a new compressor that is calculated according to the following conditions.

Amount to be drained (A) [m ℓ (Imp fl oz.)]
 $= F - (D + S + R + \alpha)$


F : Lubricant amount that a new compressor contains [90 (3.0, 3.2)]

D : Lubricant amount that is drained from removed compressor

S : Lubricant amount that remains inside of removed compressor [20 (0.7, 0.7)]

R : Lubricant amount to be added according to components that are removed except compressor

α : Lubricant amount that is recycled together with refrigerant during recycle operation

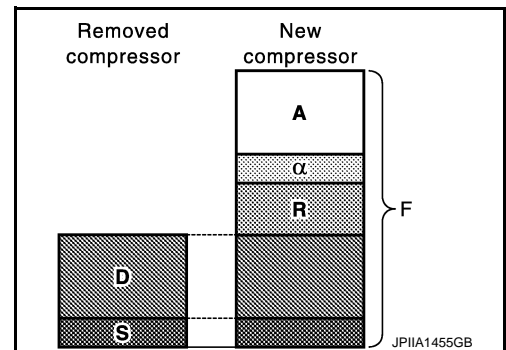

JPIA1455GB

CAUTION:

If lubricant amount that is drained from removed compressor is less than 60 m ℓ (2.0 US fl oz., 2.1 Imp fl oz.), perform calculation by setting "D" as 40 m ℓ (1.4 US fl oz., 1.4 Imp fl oz.).

Conditions	Lubricant amount to be added to A/C system m ℓ (US fl oz., Imp fl oz.)
Replace evaporator	30 (1.0, 1.1)
Replace condenser & liquid tank	30 (1.0, 1.1)

Example: Lubricant amount to be drained from a new compressor when replacing compressor and condenser & liquid tank [m ℓ (US fl oz., Imp fl oz.)] [D = 60 (2.0, 2.1), α = 5 (0.2, 0.2)]
 $90 (3.0, 3.2) - [60 (2.0, 2.1) + 20 (0.7, 0.7) + 5 (0.2, 0.2)] = 5 (0.2, 0.2)$

3. Install compressor and check the operation.

PERFORMANCE TEST

< BASIC INSPECTION >

[VR30DDTT]

PERFORMANCE TEST

Inspection

INFOID:000000013611515

INSPECTION PROCEDURE

1. Connect recovery/recycling/recharging equipment (for HFC-134a) or manifold gauge. Refer to [HA-69](#), "[Description](#)".
2. Start the engine, and set to the following condition.

Test condition		
Surrounding condition		Indoors or in the shade (in a well-ventilated place)
Vehicle condition	Door	Closed
	Door glass	Full open
	Hood	Open
	Engine speed	Idle speed
A/C condition	Temperature control switch or dial	Full cold
	A/C switch	ON
	Air outlet	VENT (ventilation)
	Intake door position	Recirculation
	Fan (blower) speed	Maximum speed set

3. Maintain test condition until A/C system becomes stable. (Approximately 10 minutes)
4. Check that test results of "recirculating-to-discharge air temperature" and "ambient air temperature-to-operating pressure" are within the specified value.
5. When test results are within the specified value, inspection is complete.
If any of test result is out of the specified value, perform diagnosis by gauge pressure. Refer to [HA-77](#), "[Symptom Table](#)".

RECIRCULATING-TO-DISCHARGE AIR TEMPERATURE TABLE

Inside air (Recirculating air) at blower assembly inlet		Discharge air temperature from center ventilator °C (°F)
Relative humidity %	Air temperature °C (°F)	
50 – 60	20 (68)	4.7 – 6.7 (40 – 44)
	25 (77)	8.6 – 11.1 (47 – 52)
	30 (86)	12.6 – 15.6 (55 – 60)
	35 (95)	19.0 – 22.5 (66 – 73)
60 – 70	20 (68)	6.7 – 8.7 (44 – 48)
	25 (77)	11.1 – 13.6 (52 – 56)
	30 (86)	15.6 – 18.6 (60 – 65)
	35 (95)	22.5 – 26.0 (73 – 79)

AMBIENT AIR TEMPERATURE-TO-OPERATING PRESSURE TABLE

PERFORMANCE TEST

< BASIC INSPECTION >

[VR30DDTT]

Fresh air		High-pressure (Discharge side) kPa (kg/cm ² , psi)	Low-pressure (Suction side) kPa (kg/cm ² , psi)
Relative humidity %	Air temperature °C (°F)		
50 – 70	25 (77)	909 – 1,112 (9.2 – 11.3, 131.8 – 161.2)	159 – 194 (1.6 – 2.0, 23.1 – 28.1)
	30 (86)	1,073 – 1,312 (10.9 – 13.4, 155.6 – 190.2)	211 – 259 (2.2 – 2.6, 30.6 – 37.6)
	35 (95)	1,445 – 1,766 (14.7 – 18.0, 209.5 – 256.1)	247 – 300 (2.5 – 3.1, 35.8 – 43.5)
	40 (104)	1,650 – 2,017 (16.8 – 20.6, 239.3 – 292.5)	290 – 355 (3.0 – 3.6, 42.1 – 51.5)

SYMPTOM DIAGNOSIS

REFRIGERATION SYSTEM SYMPTOMS




Trouble Diagnosis For Unusual Pressure

INFOID:0000000013611516

Diagnose using a manifold gauge whenever system's high and/or low side pressure(s) is/are unusual. The marker above the gauge scale in the following tables indicates the standard (usual) pressure range. Refer to above table (Ambient air temperature-to-operating pressure table) since the standard (usual) pressure, however, differs from vehicle to vehicle.

Symptom Table



INFOID:0000000013611517

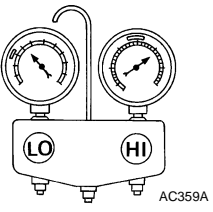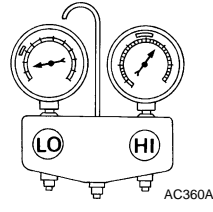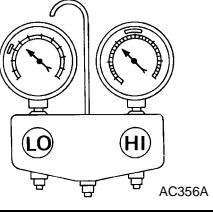Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>Both high- and low-pressure sides are too high.</p> 	<p>The pressure returns to normal soon after sprinkling water on condenser & liquid tank assembly.</p>	<p>Overfilled refrigerant.</p>	<p>Collect all refrigerant, evacuate refrigerant cycle again, and then refill it with the specified amount of refrigerant.</p>
	<p>Air flow to condenser is insufficient.</p>	<p>Insufficient condenser cooling performance.</p> <ul style="list-style-type: none"> Poor fan rotation of radiator and condenser. Improper installation of air guide. Clogged or dirty condenser & liquid tank assembly fins. 	<ul style="list-style-type: none"> Repair or replace malfunctioning parts. Clean and repair condenser & liquid tank assembly fins.
	<p>When compressor is stopped, a high-pressure reading quickly drops by approximately 196 kPa (2 kg/cm², 28 psi). It then gradually decreases.</p>	<p>Air mixed in refrigerant cycle.</p>	<p>Collect all refrigerant, evacuate refrigerant cycle again, and then refill it with the specified amount of refrigerant.</p>
	<ul style="list-style-type: none"> Low-pressure pipe is cooler than the outlet of evaporator. Low-pressure pipe is frosted. 	<p>Expansion valve opened too much (excessive flow of refrigerant).</p>	<p>Replace expansion valve.</p>
<p>High-pressure side is excessively high and low-pressure side is too low.</p> 	<p>High-pressure pipe and upper side of condenser become hot, however, condenser & liquid tank assembly does not become so hot.</p>	<p>Clogged or crushed high-pressure pipe located between compressor and condenser & liquid tank assembly.</p>	<p>Repair or replace the malfunctioning parts.</p>
<p>High-pressure side is too low and low-pressure side is too high.</p> 	<ul style="list-style-type: none"> The readings of both sides become equal soon after compressor operation stops. There is no temperature difference between high- and low-pressure sides. 	<p>Malfunction in compressor system (insufficient compressor pressure operation).</p> <ul style="list-style-type: none"> Damage or breakage of valve. Malfunctioning gaskets. 	<p>Replace compressor.</p>

REFRIGERATION SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[VR30DDTT]

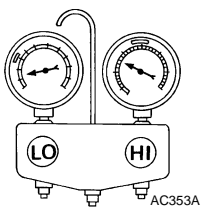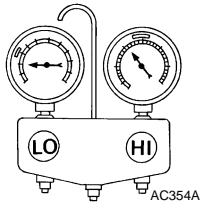Gauge indication	Refrigerant cycle	Probable cause	Corrective action
<p>Both high- and low-pressure sides are too low.</p> 	<ul style="list-style-type: none"> The area around evaporator outlet does not become cold. The area around evaporator inlet becomes frosted. 	<p>Clogged expansion valve.</p> <ul style="list-style-type: none"> Breakage of temperature sensor. Clogging by foreign material. 	<p>Eliminate foreign material from expansion valve, or replace it.</p>
	<ul style="list-style-type: none"> There is a temperature difference between the areas around outlet and inlet pipes of condenser & liquid tank assembly. Liquid tank becomes frosted. 	<p>Malfunction in inner condenser & liquid tank assembly. (clogged strainer).</p>	<p>Replace condenser & liquid tank assembly.</p>
	<p>Evaporator becomes frosted.</p>	<p>Clogged or crushed low-pressure pipe.</p>	<p>Repair or replace malfunctioning parts.</p>
		<p>Malfunction in intake air temperature sensor.</p>	<p>Check intake sensor system. Refer to HAC-92, "Diagnosis Procedure".</p>
<p>There is a small temperature difference between the high and low pressure pipes for refrigerant cycle.</p>	<ul style="list-style-type: none"> Shortage of refrigerant. Leakage of refrigerant. 	<ul style="list-style-type: none"> Check for leakage. Collect all refrigerant, evacuate refrigerant cycle again, and then refill it with the specified amount of refrigerant. 	
<p>Low-pressure side sometimes becomes negative.</p> 	<ul style="list-style-type: none"> Sometimes the area around evaporator outlet does not become cold. Sometimes the area around evaporator inlet is frosted. 	<ul style="list-style-type: none"> Icing caused by the mixing of water in cooler cycle. Deteriorated dryer in liquid tank. 	<ul style="list-style-type: none"> Collect all refrigerant. Evacuate refrigerant cycle completely, and then refill it with the specified amount of refrigerant. At this time, always replace condenser & liquid tank assembly.
<p>Hunting in high-pressure side.</p>	<p>There is no temperature difference between high- and low-pressure sides.</p>	<p>Malfunctioning variable valve in compressor.</p>	<ul style="list-style-type: none"> Replace compressor. Check ECV system. Refer to HAC-124, "Diagnosis Procedure".

NOISE

< SYMPTOM DIAGNOSIS >

[VR30DDTT]

NOISE

Symptom Table

INFOID:000000013611518

Symptom	Noise source	Probable cause	Corrective action
Unusual noise from compressor when A/C is ON.	Inside of compressor	Wear, breakage, or clogging of foreign material in inner parts.	Check compressor oil. Refer to HA-73, "Inspection" .
	Magnet clutch	Contact of clutch disc with pulley.	Check clearance between clutch disc and pulley. Refer to HA-82, "Inspection" .
	Compressor body	Loosened compressor mounting bolts.	Check bolts for tightness. Refer to HA-80, "Exploded View" .
Unusual noise from cooler piping.	Cooler piping (pipe and flexible hose)	Improper installation of clip and bracket.	Check the installation condition of the cooler piping. Refer to HA-83, "Exploded View" .
Unusual noise from expansion valve when A/C is ON.	Expansion valve	Shortage of refrigerant.	<ul style="list-style-type: none"> • Check for leakage. • Collect all refrigerant, evacuate refrigerant cycle again, and then refill it with the specified amount of refrigerant.
		Wear, breakage, or clogging of foreign material in inner parts.	Eliminate foreign material from expansion valve, or replace it.
Unusual noise from belt.	—	Loosened belt	Check belt tension. Refer to EM-17, "Inspection" .
		Internal compressor parts get locked	Replace compressor.

A
B
C
D
E
F
G
H
HA
J
K
L
M
N
O
P


REMOVAL AND INSTALLATION

COMPRESSOR


Exploded View

INFOID:000000013611519

REMOVAL

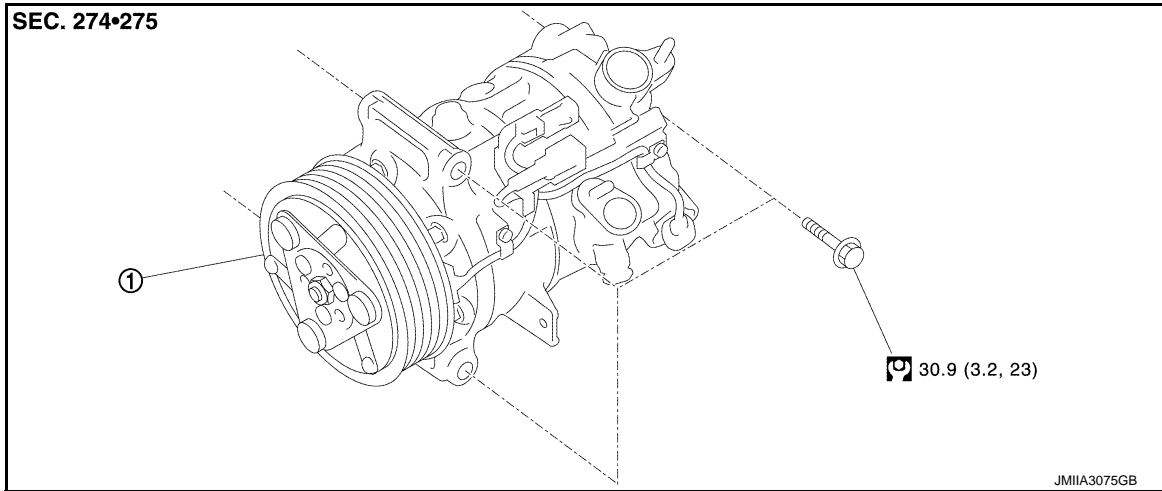

① Compressor

 : N·m (kg-m, ft-lb)

Removal and Installation

INFOID:000000013611520


CAUTION:

Perform lubricant return operation before each refrigeration system disassembly. However, if a large amount of refrigerant or lubricant is detected, never perform lubricant return operation. Refer to [HA-73, "Perform Lubricant Return Operation"](#).

REMOVAL

1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant. Refer to [HA-71, "Recycle Refrigerant"](#).
2. Remove air duct (bank 2). Refer to [EM-165, "Exploded View"](#).
3. Disconnect harness connectors [A](#).

 : Vehicle front

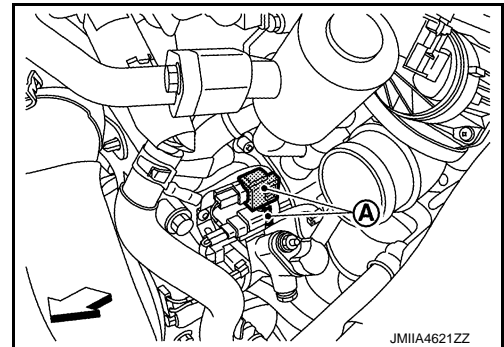

COMPRESSOR


[VR30DDTT]

< REMOVAL AND INSTALLATION >

4. Remove mounting bolt (A), and then disconnect low-pressure flexible hose.

CAUTION:


Cap or wrap the joint of the A/C piping with suitable material such as vinyl tape to avoid the entry of air.

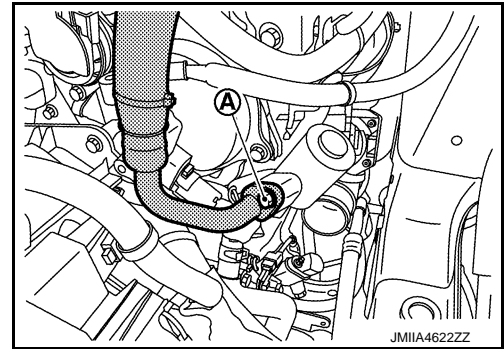


5. Remove mounting nut (A), and then disconnect high-pressure flexible hose.

CAUTION:

Cap or wrap the joint of the A/C piping and compressor with suitable material such as vinyl tape to avoid the entry of air.

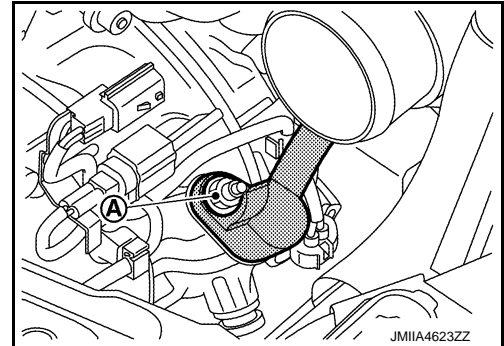


6. Remove front under cover. Refer to [EXT-35, "FRONT UNDER COVER : Removal and Installation"](#).
7. Disengage fixing clamp, and then disconnect radiator hose (lower) from water inlet. Refer to [CO-39, "Exploded View"](#).
8. Disengage fixing hose clamp, and then disconnect water hose A or water hose B from heater tube. Refer to [TM-320, "VR30DDTT : Exploded View"](#).
9. Remove cooling fan assembly. Refer to [CO-45, "Removal and Installation"](#).
10. Remove drive belt. Refer to [EM-154, "Removal and Installation"](#).
11. Remove mounting bolts (A), and then remove compressor (1) and low-pressure pipe 2 (2) as a set from lower side of the vehicle.

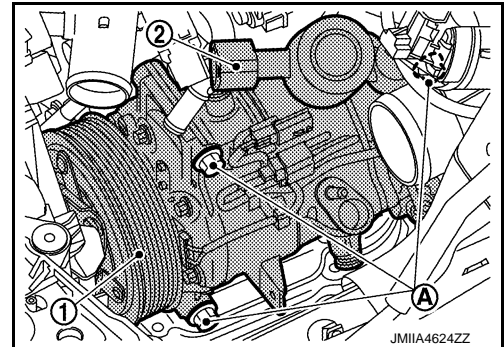

12. Remove mounting nut (A), and then remove low-pressure pipe 2 from compressor.

CAUTION:

Cap or wrap the joint of the compressor with suitable material such as vinyl tape to avoid the entry of air.

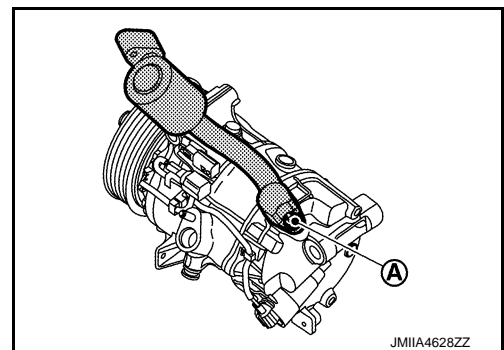

INSTALLATION

Note the following items, and then install in the reverse order of removal.

CAUTION:

- Replace O-rings with new ones. Then apply compressor oil to them when installing.

A
B
C
D
E
F
G
H
HA
J
K
L
M
N
O
P

COMPRESSOR

[VR30DDTT]

< REMOVAL AND INSTALLATION >

- Perform lubricant adjusting procedure before installing new compressor. Refer to [HA-74, "Lubricant Adjusting Procedure for Compressor Replacement"](#).
- Check tension of the drive belt after installing compressor. Refer to [EM-155, "Inspection"](#).
- Use a refrigerant collecting equipment (for HFC-134a) to charge the refrigerant. Refer to [HA-71, "Charge Refrigerant"](#).
- Check for leakages when recharging refrigerant. Refer to [HA-69, "Leak Test"](#).

Inspection

INFOID:000000013611521


CHECK DISC TO PULLEY CLEARANCE

Check the clearance (B) between pulley assembly ① and clutch disc ② along the entire periphery with a feeler gauge (A).

Clearance : Refer to [HA-102, "Compressor"](#).

CAUTION:

Replace compressor if specified clearance is not obtained, replace adjusting spacer and readjust.

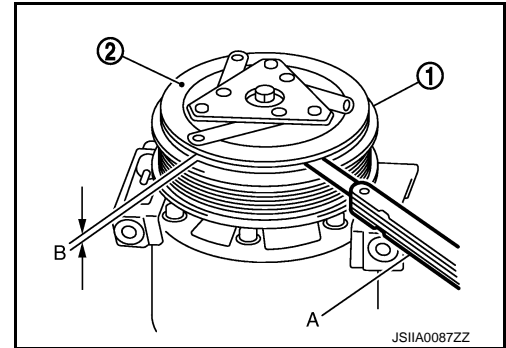

COOLER PIPE AND HOSE


< REMOVAL AND INSTALLATION >

[VR30DDTT]

COOLER PIPE AND HOSE

Exploded View

INFOID:000000013611522

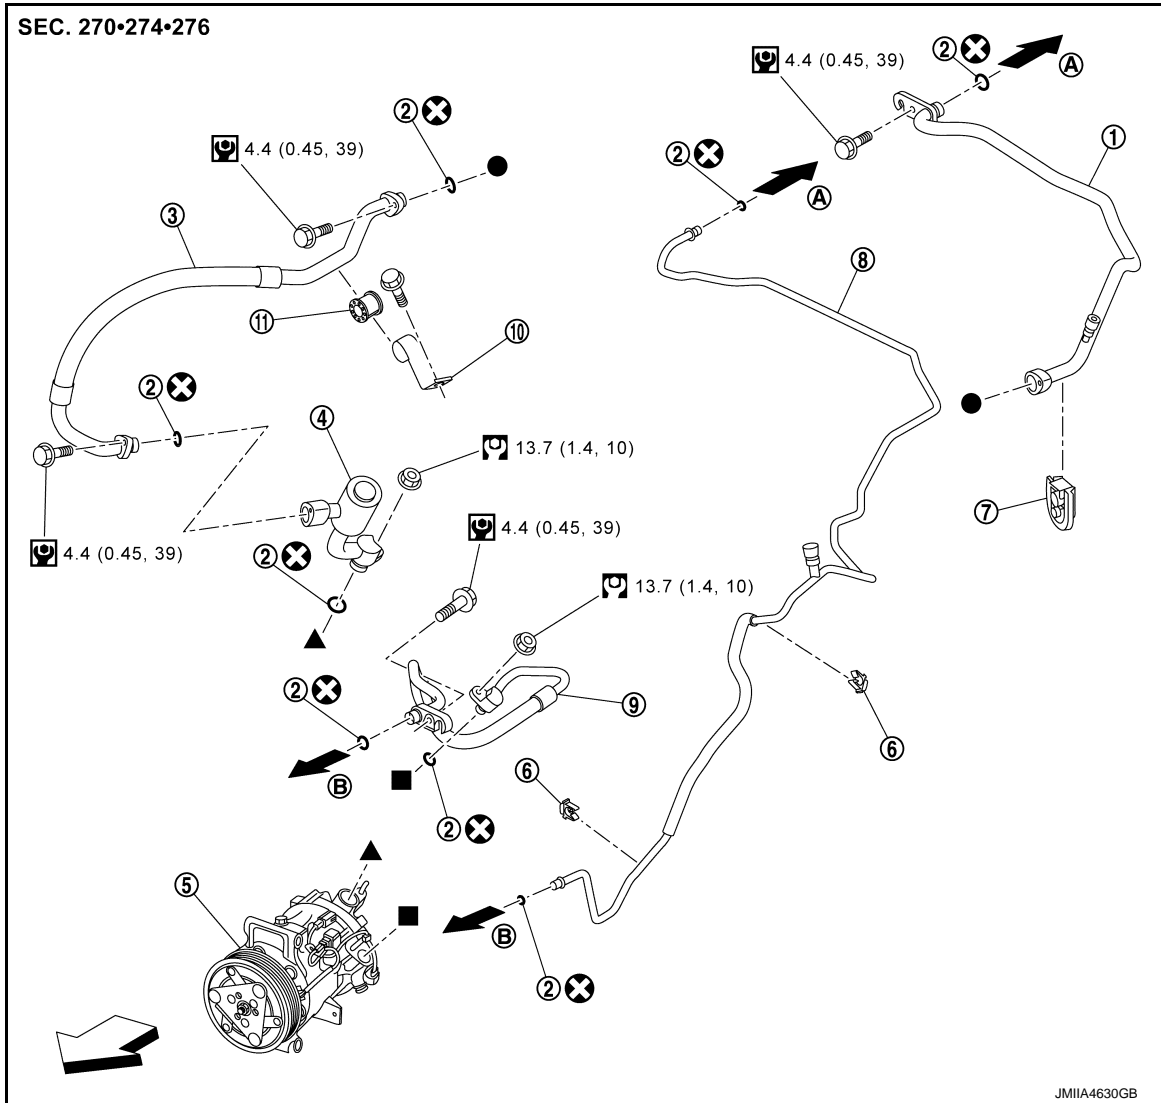

- | | | |
|-----------------------|------------------------------|-------------------------------|
| ① Low-pressure pipe 1 | ② O-ring | ③ Low-pressure flexible hose |
| ④ Low-pressure pipe 2 | ⑤ Compressor | ⑥ Tube clip |
| ⑦ Grommet | ⑧ High-pressure pipe | ⑨ High-pressure flexible hose |
| ⑩ Pipe bracket | ⑪ Tube mounting rubber | |
| Ⓐ To expansion valve | Ⓑ To condenser pipe assembly | |

↔ : Vehicle front

⊗ : Always replace after disassembly.

Ⓜ : N·m (kg-m, in-lb)

Ⓝ : N·m (kg-m, ft-lb)

●, ▲, ■: Indicates that the part is connected at points with same symbol in actual vehicle.

LOW-PRESSURE FLEXIBLE HOSE

COOLER PIPE AND HOSE

< REMOVAL AND INSTALLATION >

[VR30DDTT]

LOW-PRESSURE FLEXIBLE HOSE : Removal and Installation

INFOID:000000013611523

CAUTION:

Perform lubricant return operation before each refrigeration system disassembly. However, if a large amount of refrigerant or lubricant is detected, never perform lubricant return operation. Refer to [HA-73, "Perform Lubricant Return Operation"](#).


REMOVAL

1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant. Refer to [HA-71, "Recycle Refrigerant"](#).
2. Remove air duct (bank 2). Refer to [EM-165, "Exploded View"](#).
3. Remove mounting bolts (A), and then remove low-pressure flexible hose (1) and pipe bracket (2) as a set.

CAUTION:

Cap or wrap the joint of the A/C piping with suitable material such as vinyl tape to avoid the entry of air.

← : Vehicle front

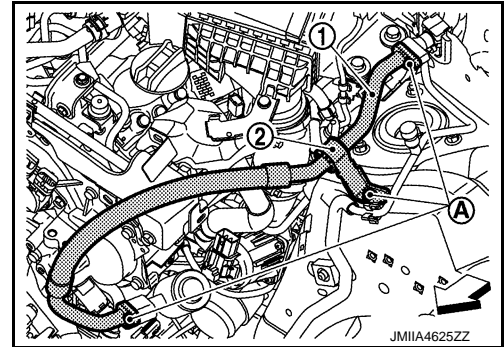

INSTALLATION

Note the following items, and then install in the reverse order of removal.

CAUTION:

- Replace O-rings with new ones. Then apply compressor oil to them when installing.
- Use a refrigerant collecting equipment (for HFC-134a) to charge the refrigerant. Refer to [HA-71, "Charge Refrigerant"](#).
- Check for leakages when recharging refrigerant. Refer to [HA-69, "Leak Test"](#).

HIGH-PRESSURE FLEXIBLE HOSE

HIGH-PRESSURE FLEXIBLE HOSE : Removal and Installation

INFOID:000000013611524

CAUTION:

Perform lubricant return operation before each refrigeration system disassembly. However, if a large amount of refrigerant or lubricant is detected, never perform lubricant return operation. Refer to [HA-73, "Perform Lubricant Return Operation"](#).


REMOVAL

1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant. Refer to [HA-71, "Recycle Refrigerant"](#).
2. Remove engine cover. Refer to [EM-163, "Removal and Installation"](#).
3. Remove air duct (bank 2). Refer to [EM-165, "Exploded View"](#).
4. Remove mounting bolt (A), and then disconnect high-pressure pipe (1) and high-pressure flexible hose (2) as a set from condenser pipe assembly.

CAUTION:

Cap or wrap the joint of the A/C piping with suitable material such as vinyl tape to avoid the entry of air.

← : Vehicle front

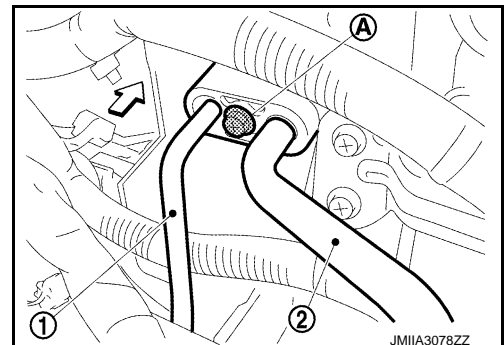

COOLER PIPE AND HOSE

[VR30DDTT]


< REMOVAL AND INSTALLATION >

5. Remove mounting nut (A), and then disconnect high-pressure flexible hose.

CAUTION:

Cap or wrap the joint of the A/C piping and compressor with suitable material such as vinyl tape to avoid the entry of air.

← : Vehicle front

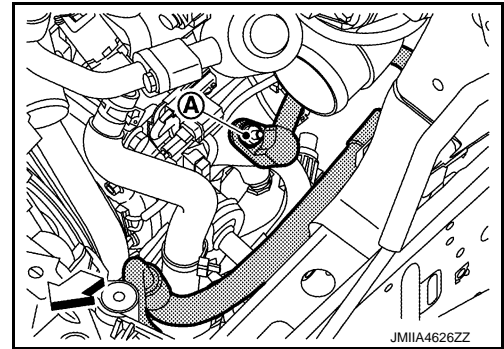

6. Remove high-pressure flexible hose from the vehicle.

INSTALLATION

Note the following items, and then install in the reverse order of removal.

CAUTION:

- Replace O-rings with new ones. Then apply compressor oil to them when installing.
- Use a refrigerant collecting equipment (for HFC-134a) to charge the refrigerant. Refer to [HA-71, "Charge Refrigerant"](#).
- Check for leakages when recharging refrigerant. Refer to [HA-69, "Leak Test"](#).

LOW-PRESSURE PIPE 1

LOW-PRESSURE PIPE 1 : Removal and Installation

INFOID:000000013611525

CAUTION:

Perform lubricant return operation before each refrigeration system disassembly. However, if a large amount of refrigerant or lubricant is detected, never perform lubricant return operation. Refer to [HA-73, "Perform Lubricant Return Operation"](#).

REMOVAL


1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant. Refer to [HA-71, "Recycle Refrigerant"](#).
2. Remove cowl top cover. Refer to [EXT-27, "Removal and Installation"](#).

3. Remove mounting bolt (A), and then disconnect low-pressure pipe 1 (1) from low-pressure flexible hose (2).

CAUTION:

Cap or wrap the joint of the A/C piping with suitable material such as vinyl tape to avoid the entry of air.


← : Vehicle front

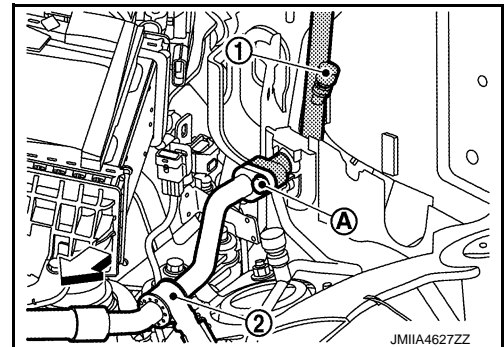

4. Remove mounting bolt (A), and then disconnect low-pressure pipe 1 (1) and high-pressure pipe (2) from expansion valve.

CAUTION:

Cap or wrap the joint of the A/C piping and expansion valve with suitable material such as vinyl tape to avoid the entry of air.

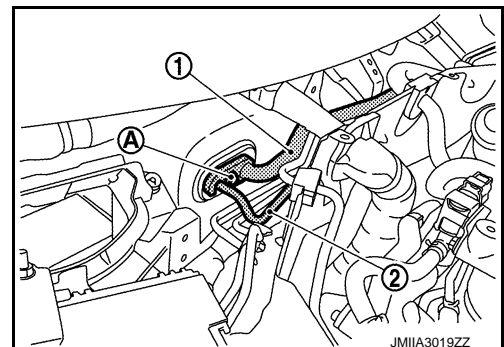

5. Remove low-pressure pipe 1 from the vehicle.

INSTALLATION

COOLER PIPE AND HOSE

[VR30DDTT]

< REMOVAL AND INSTALLATION >

Note the following items, and then install in the reverse order of removal.

CAUTION:

- Replace O-rings with new ones. Then apply compressor oil to them when installing.
- Use a refrigerant collecting equipment (for HFC-134a) to charge the refrigerant. Refer to [HA-71, "Charge Refrigerant"](#).
- Check for leakages when recharging refrigerant. Refer to [HA-69, "Leak Test"](#).

LOW-PRESSURE PIPE 2

LOW-PRESSURE PIPE 2 : Removal and Installation

INFOID:000000013611548

CAUTION:


Perform lubricant return operation before each refrigeration system disassembly. However, if a large amount of refrigerant or lubricant is detected, never perform lubricant return operation. Refer to [HA-73, "Perform Lubricant Return Operation"](#).

REMOVAL

1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant. Refer to [HA-71, "Recycle Refrigerant"](#).
2. Remove compressor. Refer to [HA-80, "Removal and Installation"](#).
3. Remove mounting nut (A), and then remove low-pressure pipe 2.

CAUTION:

Cap or wrap the joint of the compressor with suitable material such as vinyl tape to avoid the entry of air.

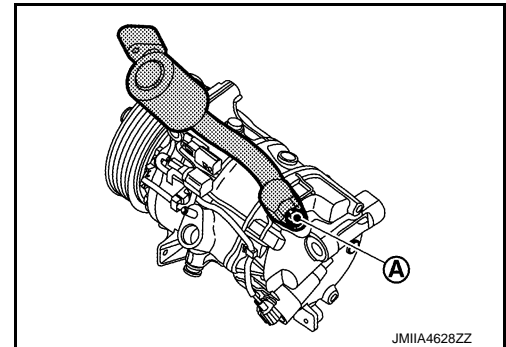

INSTALLATION

Note the following items, and then install in the reverse order of removal.

CAUTION:

- Replace O-rings with new ones. Then apply compressor oil to them when installing.
- Use a refrigerant collecting equipment (for HFC-134a) to charge the refrigerant. Refer to [HA-71, "Charge Refrigerant"](#).
- Check for leakages when recharging refrigerant. Refer to [HA-69, "Leak Test"](#).

HIGH-PRESSURE PIPE

HIGH-PRESSURE PIPE : Removal and Installation

INFOID:000000013611526

CAUTION:

Perform lubricant return operation before each refrigeration system disassembly. However, if a large amount of refrigerant or lubricant is detected, never perform lubricant return operation. Refer to [HA-73, "Perform Lubricant Return Operation"](#).

REMOVAL


1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant. Refer to [HA-71, "Recycle Refrigerant"](#).
2. Remove low-pressure pipe 1. Refer to [HA-85, "LOW-PRESSURE PIPE 1 : Removal and Installation"](#).
3. Disconnect vacuum hose and vacuum piping. Refer to [BR-49, "2.0L TURBO GASOLINE ENGINE : Removal and Installation"](#).

COOLER PIPE AND HOSE

[VR30DDTT]

< REMOVAL AND INSTALLATION >

4. Remove ground bolts (A).

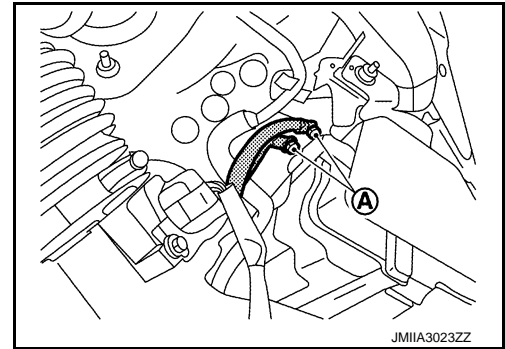


5. Remove mounting bolt (A), and then disconnect high-pressure pipe (1) and high-pressure flexible hose (2) from condenser pipe assembly.

CAUTION:

Cap or wrap the joint of the A/C piping with suitable material such as vinyl tape to avoid the entry of air.


← : Vehicle front

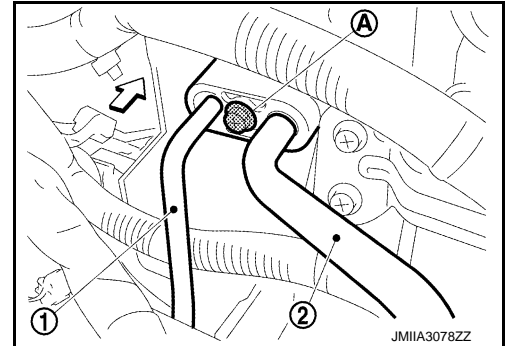


6. Remove mounting bolt (A), and then disconnect low-pressure pipe (1) and high-pressure pipe (2) from expansion valve.

CAUTION:

Cap or wrap the joint of the A/C piping and expansion valve with suitable material such as vinyl tape to avoid the entry of air.

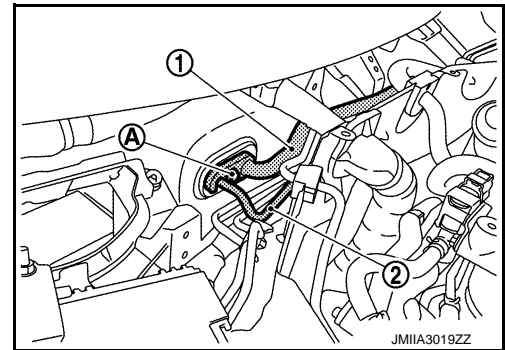

7. Disengage high-pressure pipe fixing clips (A), and then remove high-pressure pipe from the vehicle.

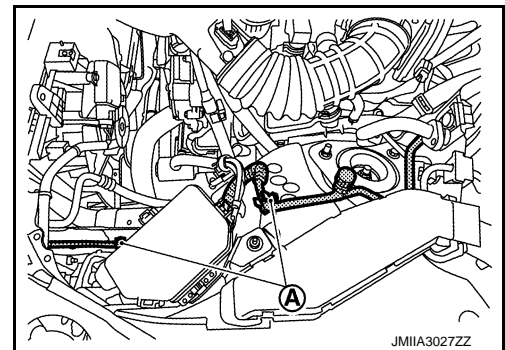

INSTALLATION

Note the following items, and then install in the reverse order of removal.

CAUTION:

- Replace O-rings with new ones. Then apply compressor oil to them when installing.
- Use a refrigerant collecting equipment (for HFC-134a) to charge the refrigerant. Refer to [HA-71](#), "[Charge Refrigerant](#)".
- Check for leakages when recharging refrigerant. Refer to [HA-69](#), "[Leak Test](#)".

A
B
C
D
E
F
G
H
HA
J
K
L
M
N
O
P

CONDENSER


< REMOVAL AND INSTALLATION >

[VR30DDTT]

CONDENSER

Exploded View

INFOID:000000013611527

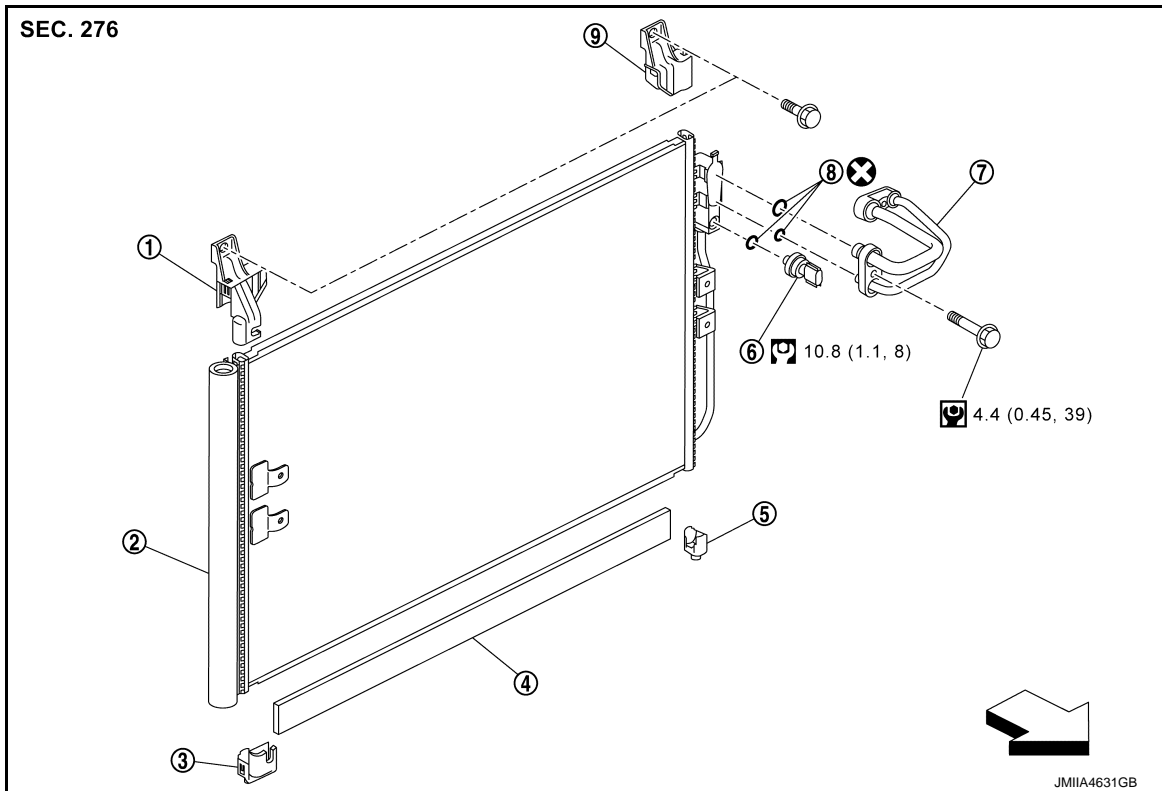

- | | | |
|------------------------------|------------------------------------|-------------------------------|
| ① Condenser upper bracket RH | ② Condenser & liquid tank assembly | ③ Condenser lower bracket RH |
| ④ Radiator seal lower | ⑤ Condenser lower bracket LH | ⑥ Refrigerant pressure sensor |
| ⑦ Condenser pipe assembly | ⑧ O-ring | ⑨ Condenser upper bracket LH |

← : Vehicle front

⊗ : Always replace after disassembly.

🔧 : N·m (kg-m, in-lb)

🔧 : N·m (kg-m, ft-lb)

CONDENSER

CONDENSER : Removal and Installation

INFOID:000000013611528

CAUTION:

Perform lubricant return operation before each refrigeration system disassembly. However, if a large amount of refrigerant or lubricant is detected, never perform lubricant return operation. Refer to [HA-73, "Perform Lubricant Return Operation"](#).

REMOVAL


1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant. Refer to [HA-71, "Recycle Refrigerant"](#).
2. Removal air cleaner body (bank 2) and air cleaner cover (bank 2) as a set. Refer to [EM-165, "Exploded View"](#).
3. Removal front bumper upper retainer. Refer to [DLK-194, "VR30DDTT : Removal and Installation"](#).

CONDENSER


[VR30DDTT]

< REMOVAL AND INSTALLATION >

4. Remove mounting bolt (A), and then disconnect condenser pipe assembly.

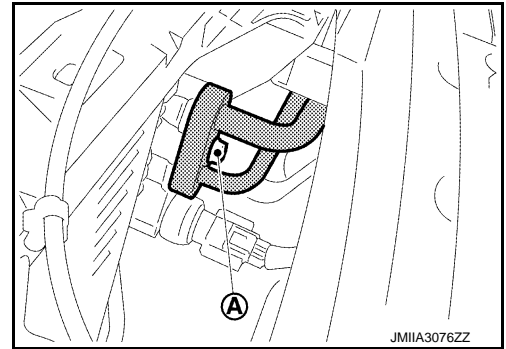

5. Disconnect harness connector (A).

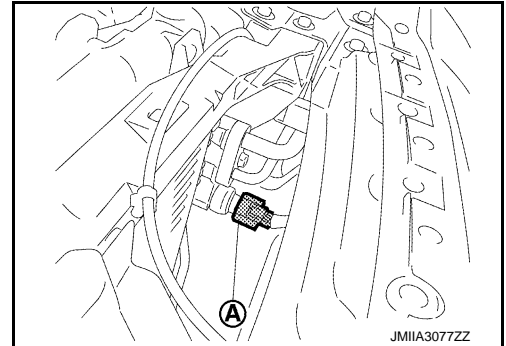


6. Remove sub radiator mounting bolt and fixing clips, and then move sub radiator to secure work space. Refer to [CO-49, "Exploded View"](#).

CAUTION:

Be careful not damage sub radiator core surface.

7. Move top of the condenser and radiator to vehicle rear side.
8. Remove condenser mounting bolts (A).

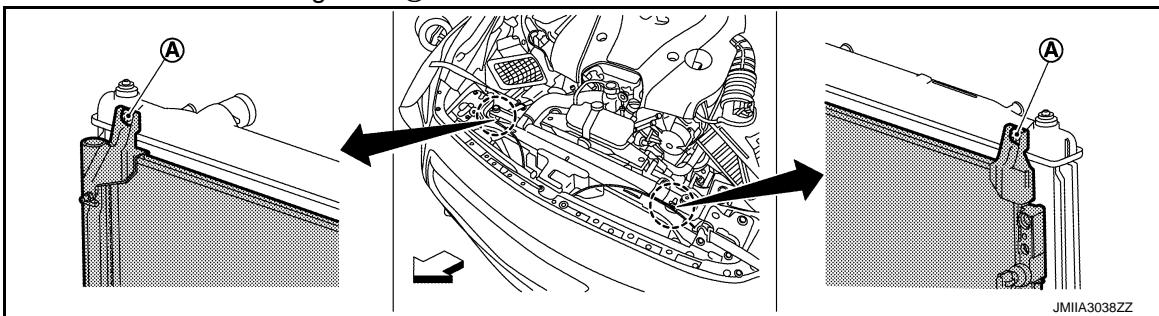


← : Vehicle front

9. Lift the condenser upwards, and then remove condenser (1) from vehicle.

CAUTION:

Be careful not damage condenser core surface.

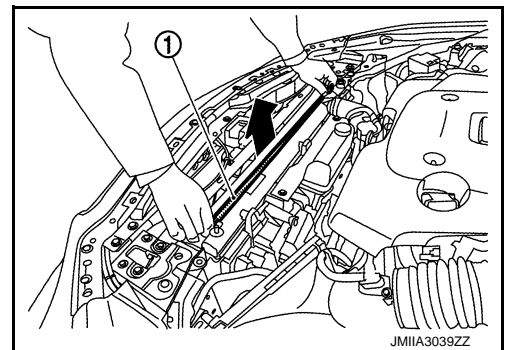

INSTALLATION

Note the following items, and then install in the reverse order of removal.

CAUTION:

CONDENSER

[VR30DDTT]

< REMOVAL AND INSTALLATION >

- Perform lubricant adjusting procedure after installing new condenser & liquid tank assembly. Refer to [HA-73, "Lubricant Adjusting Procedure for Components Replacement Except Compressor"](#).
- Use a refrigerant collecting equipment (for HFC-134a) to charge the refrigerant. Refer to [HA-71, "Charge Refrigerant"](#).
- Check for leakages when recharging refrigerant. Refer to [HA-69, "Leak Test"](#).

CONDENSER PIPE ASSEMBLY

CONDENSER PIPE ASSEMBLY : Removal and Installation

INFOID:000000013611529

CAUTION:

Perform lubricant return operation before each refrigeration system disassembly. However, if a large amount of refrigerant or lubricant is detected, never perform lubricant return operation. Refer to [HA-73, "Perform Lubricant Return Operation"](#).


REMOVAL

1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant. Refer to [HA-71, "Recycle Refrigerant"](#).
2. Remove front bumper fascia assembly. Refer to [EXT-15, "Removal and Installation"](#).
3. Remove mounting bolt (A), and then disconnect high-pressure flexible hose (2) and high-pressure pipe (1) from condenser pipe assembly.

CAUTION:

Cap or wrap the joint of the A/C piping with suitable material such as vinyl tape to avoid the entry of air.


⇐ : Vehicle front

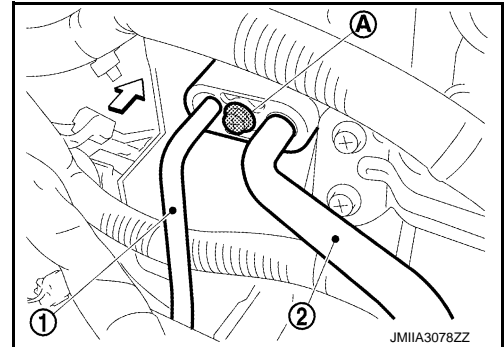

4. Remove mounting bolt (A), and then disconnect condenser pipe assembly from condenser.

CAUTION:

Cap or wrap the joint of the A/C piping and condenser with suitable material such as vinyl tape to avoid the entry of air.

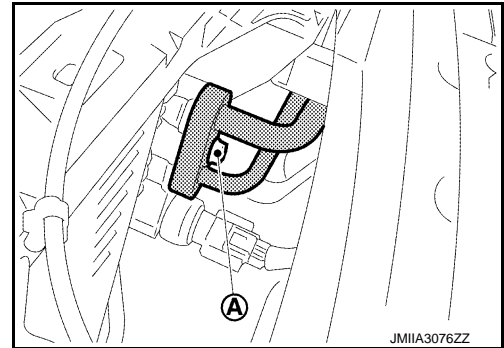

5. Remove condenser pipe assembly from the vehicle

INSTALLATION

Note the following items, and then install in the reverse order of removal.

CAUTION:

- Replace O-rings with new ones. Then apply compressor oil to them when installing.
- Use a refrigerant collecting equipment (for HFC-134a) to charge the refrigerant. Refer to [HA-71, "Charge Refrigerant"](#).
- Check for leakages when recharging refrigerant. Refer to [HA-69, "Leak Test"](#).

REFRIGERANT PRESSURE SENSOR

REFRIGERANT PRESSURE SENSOR : Removal and Installation

INFOID:000000013611530

CAUTION:

Perform lubricant return operation before each refrigeration system disassembly. However, if a large amount of refrigerant or lubricant is detected, never perform lubricant return operation. Refer to [HA-73, "Perform Lubricant Return Operation"](#).

REMOVAL

CONDENSER


[VR30DDTT]

< REMOVAL AND INSTALLATION >

1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant. Refer to [HA-71. "Recycle Refrigerant"](#).
2. Remove front bumper fascia assembly. Refer to [EXT-15. "Removal and Installation"](#).
3. Remove mounting bolt (A), and then disconnect condenser pipe from condenser.

CAUTION:

Cap or wrap the joint of condenser pipe and condenser with suitable material such as vinyl tape to avoid the entry of air.

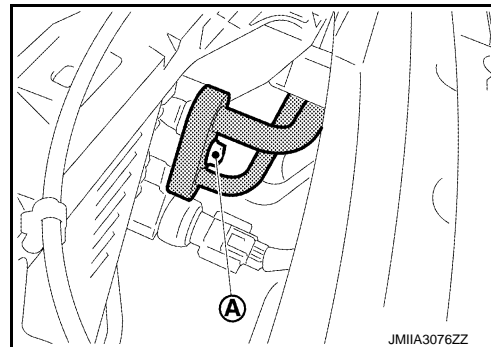

4. Clean refrigerant pressure sensor and its surrounding area, and then remove dust and rust from refrigerant pressure sensor.

CAUTION:

Be sure to clean carefully.

5. Disconnect refrigerant pressure sensor connector.
6. Use an adjustable wrench or other tool to hold the refrigerant pressure sensor mounting block, and then remove the refrigerant pressure sensor from the condenser.

CAUTION:

- Never to damage core surface of condenser.
- Cap or wrap the joint of the condenser with suitable material such as vinyl tape to avoid the entry of air.

INSTALLATION

Note the following items, and then install in the reverse order of removal.

CAUTION:

- Replace O-ring with new one. Then apply compressor oil to them when installing.
- Use a refrigerant collecting equipment (for HFC-134a) to charge the refrigerant. Refer to [HA-71. "Charge Refrigerant"](#).
- Check for leakages when recharging refrigerant. Refer to [HA-69. "Leak Test"](#).

A
B
C
D
E
F
G
H
HA
J
K
L
M
N
O
P

HEATER & COOLING UNIT ASSEMBLY

< REMOVAL AND INSTALLATION >


[VR30DDTT]

HEATER & COOLING UNIT ASSEMBLY

Exploded View

INFOID:000000013611531

REMOVAL

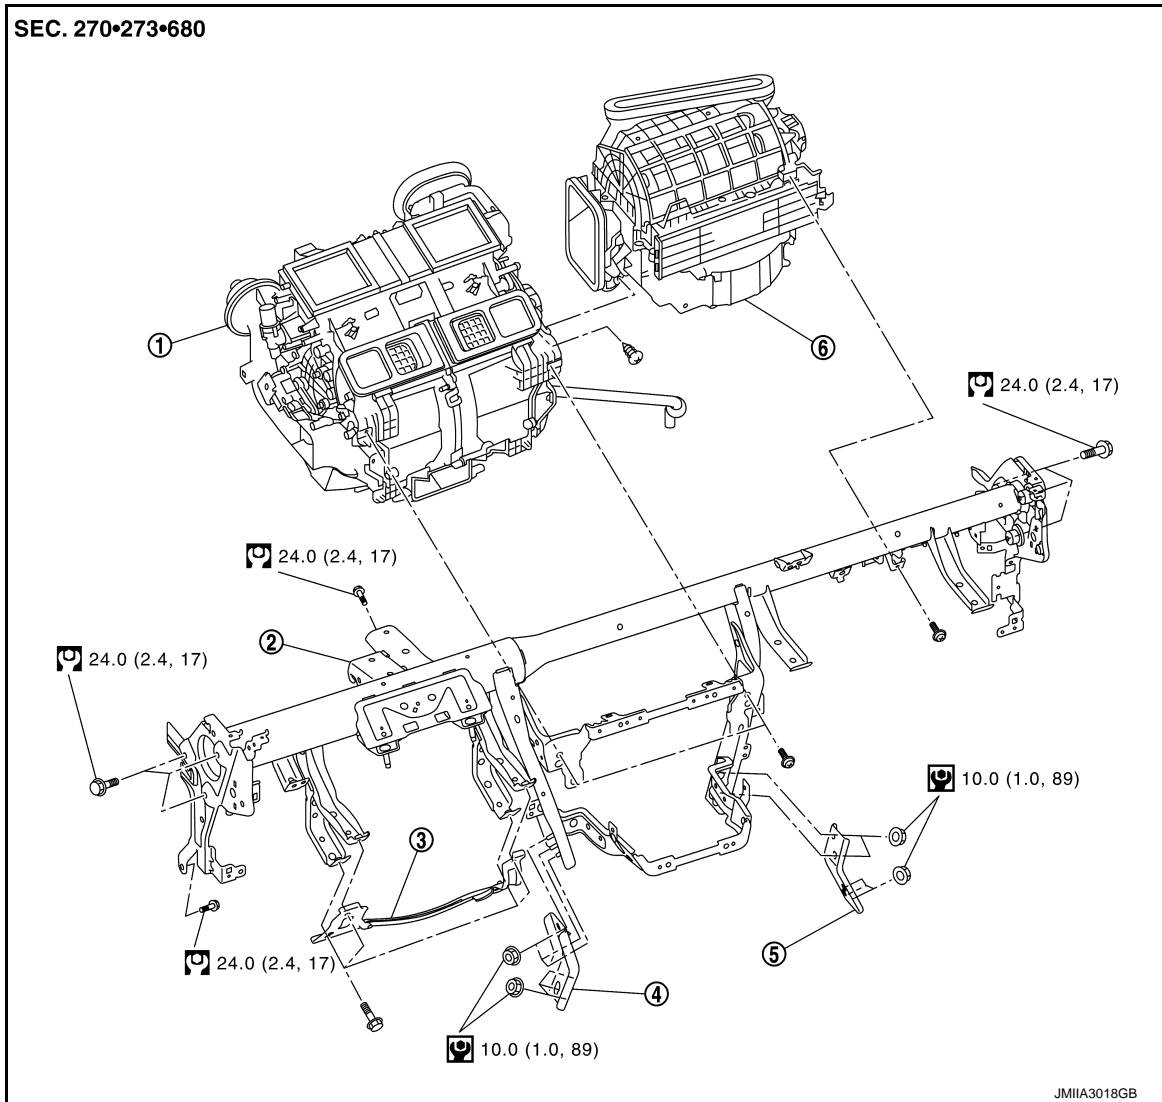

① Heater & cooling unit assembly


② Steering member


③ Knee protector

④ Instrument stay LH

⑤ Instrument stay RH

⑥ Blower unit assembly

 : N·m (kg·m, in·lb)


 : N·m (kg·m, in·lb)

DISASSEMBLY

HEATER & COOLING UNIT ASSEMBLY

< REMOVAL AND INSTALLATION >

[VR30DDTT]

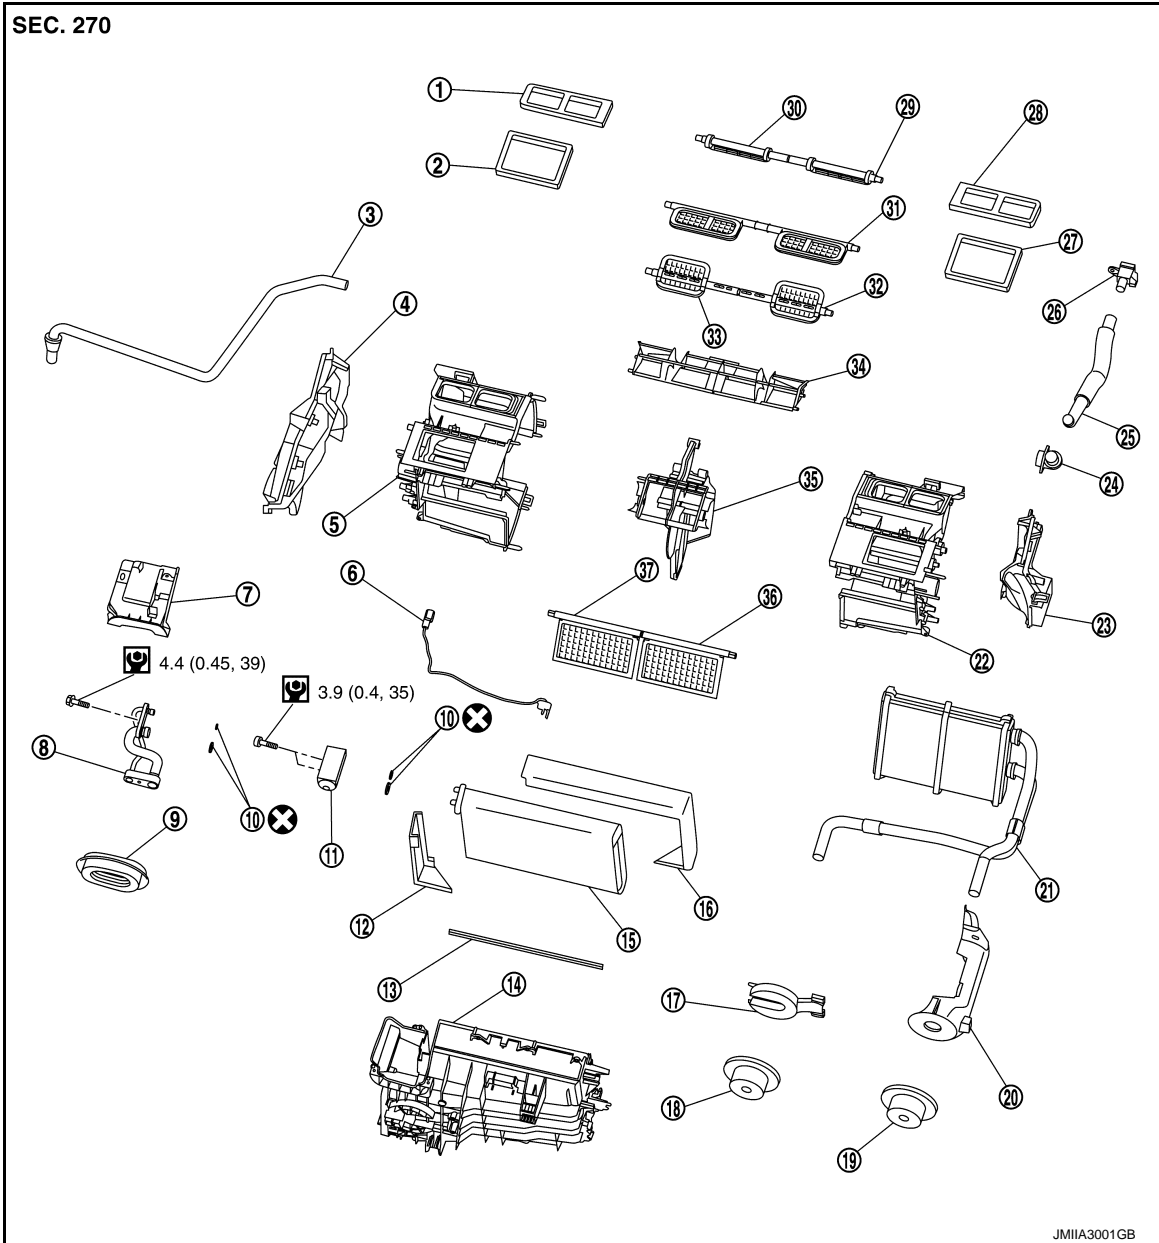

- | | | |
|--------------------------|----------------------------|---------------------------|
| ① Ventilator packing RH | ② Defroster packing RH | ③ Drain hose |
| ④ Foot duct RH | ⑤ Heater case RH | ⑥ Intake sensor |
| ⑦ Case cover | ⑧ Evaporator pipe assembly | ⑨ Evaporator pipe grommet |
| ⑩ O-ring | ⑪ Expansion valve | ⑫ Insulator |
| ⑬ Insulator | ⑭ Lower case | ⑮ Evaporator |
| ⑯ Insulator | ⑰ Heater pipe bracket | ⑱ Heater pipe grommet RH |
| ⑲ Heater pipe grommet LH | ⑳ Heater pipe cover | ㉑ Heater core |
| ㉒ Heater case LH | ㉓ Foot duct LH | ㉔ Aspirator |
| ㉕ Aspirator duct | ㉖ In-vehicle sensor | ㉗ Defroster packing LH |
| ㉘ Ventilator packing LH | ㉙ Foot door LH | ㉚ Foot door RH |
| ㉛ Ventilator door | ㉜ Defroster door LH | ㉝ Defroster door RH |
| ㉞ Air guide | ㉞ Center case | ㉟ Air mix door LH |
| ㊱ Air mix door RH | | |

A
B
C
D
E
F
G
H
HA
J
K
L
M
N
O
P

HEATER & COOLING UNIT ASSEMBLY

< REMOVAL AND INSTALLATION >

[VR30DDTT]

⊗ : Always replace after disassembly.

⊙ : N·m (kg·m, in·lb)

HEATER & COOLING UNIT ASSEMBLY

HEATER & COOLING UNIT ASSEMBLY : Removal and Installation

INFOID:000000013611532

CAUTION:


Perform lubricant return operation before each refrigeration system disassembly. However, if a large amount of refrigerant or lubricant is detected, never perform lubricant return operation. Refer to [HA-73, "Perform Lubricant Return Operation"](#).

REMOVAL


1. Use a refrigerant collecting equipment (for HFC-134a) to discharge the refrigerant. Refer to [HA-71, "Recycle Refrigerant"](#).
2. Drain engine coolant from cooling system. Refer to [CO-7, "Draining"](#).
3. Remove wiper drive assembly. Refer to [WW-59, "WIPER DRIVE ASSEMBLY : Removal and Installation"](#).
4. Remove engine cover. Refer to [EM-22, "Removal and Installation"](#).
5. Remove mounting bolt (A), and then disconnect low-pressure pipe (1) and high-pressure pipe (2) from evaporator pipe assembly.

CAUTION:


Cap or wrap the joint of the A/C piping with suitable material such as vinyl tape to avoid the entry of air.

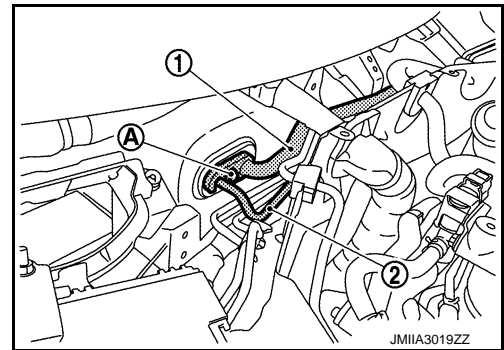

6. Remove fixing clamps (A), and then disconnect heater hoses (1).

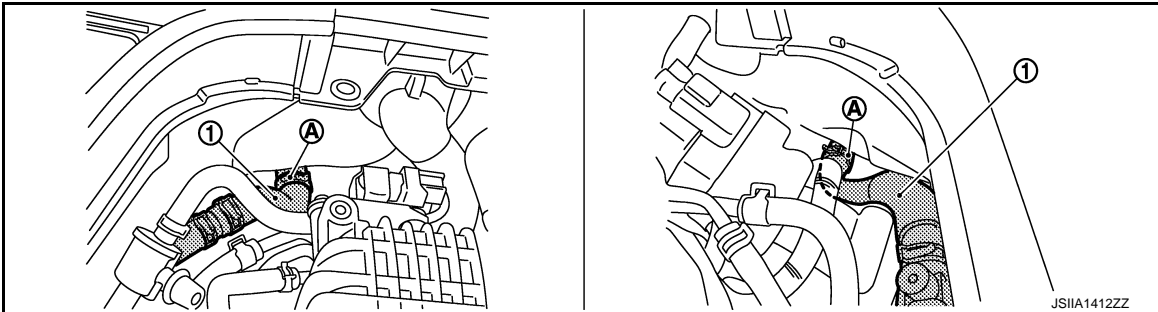

7. Remove instrument panel assembly. Refer to [IP-13, "Removal and Installation"](#).
8. Remove front defroster nozzle, side defroster nozzle and ventilator duct. Refer to [VTL-10, "FRONT DEFROSTER NOZZLE : Removal and Installation"](#), [VTL-9, "SIDE DEFROSTER NOZZLE : Removal and Installation"](#) and [VTL-8, "VENTILATOR DUCT : Removal and Installation"](#).
9. Remove front floor duct LH and RH. Refer to [VTL-12, "FRONT FLOOR DUCT : Removal and Installation"](#).
10. Remove mounting nuts (A), and then remove instrument stay LH (1) and RH (2).

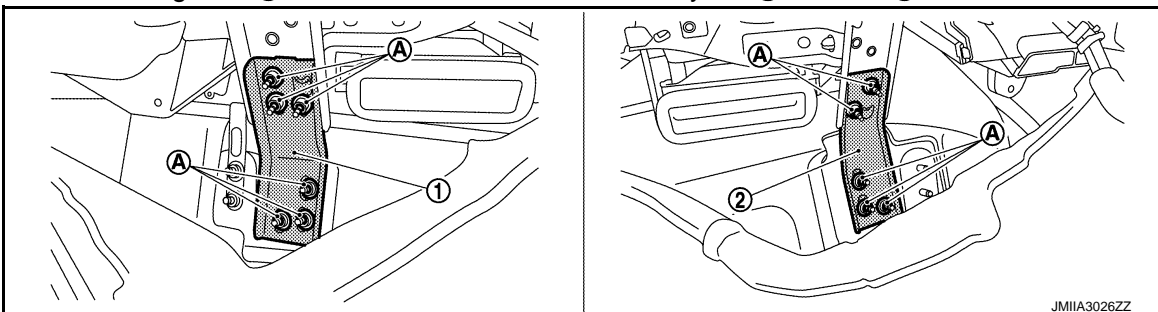


HEATER & COOLING UNIT ASSEMBLY


[VR30DDTT]

< REMOVAL AND INSTALLATION >

11. Disconnect drain hose from A/C unit assembly.
12. Remove ground wire mounting bolts (A).

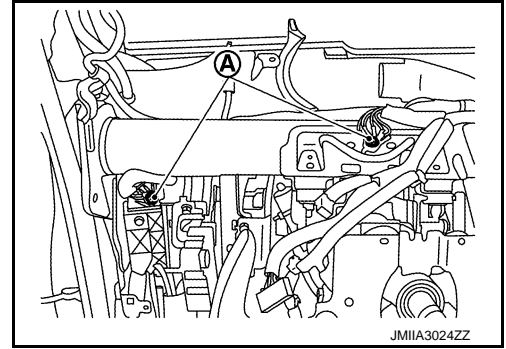

13. Remove mounting bolts (A), and then remove knee protector.

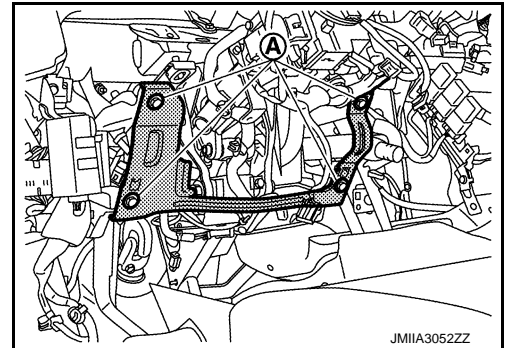

14. Remove harness connector, harness clips, and bracket necessary to remove steering member. Move vehicle harness aside.
15. Remove steering column mounting bolts and nuts, and then move steering column assembly to secure work space. Refer to the following.
 - HYDRAULIC PUMP ELECTRIC P/S
 - WITHOUT ELECTRIC MOTOR: Refer to [ST-33, "WITHOUT ELECTRIC MOTOR : Exploded View"](#).
 - WITH ELECTRIC MOTOR: Refer to [ST-36, "WITH ELECTRIC MOTOR : Exploded View"](#).
 - DUAL PINION ELECTRIC P/S: Refer to [ST-85, "WITH ELECTRIC MOTOR : Exploded View"](#).
 - DIRECT ADAPTIVE STEERING: Refer to [ST-135, "Exploded View"](#).


A
B
C
D
E
F
G
H
HA
J
K
L
M
N
O
P

HEATER & COOLING UNIT ASSEMBLY

[VR30DDTT]

< REMOVAL AND INSTALLATION >

16. Remove steering member mounting bolts (A), heater & cooling unit mounting bolts (B) and blower unit mounting bolt (C).

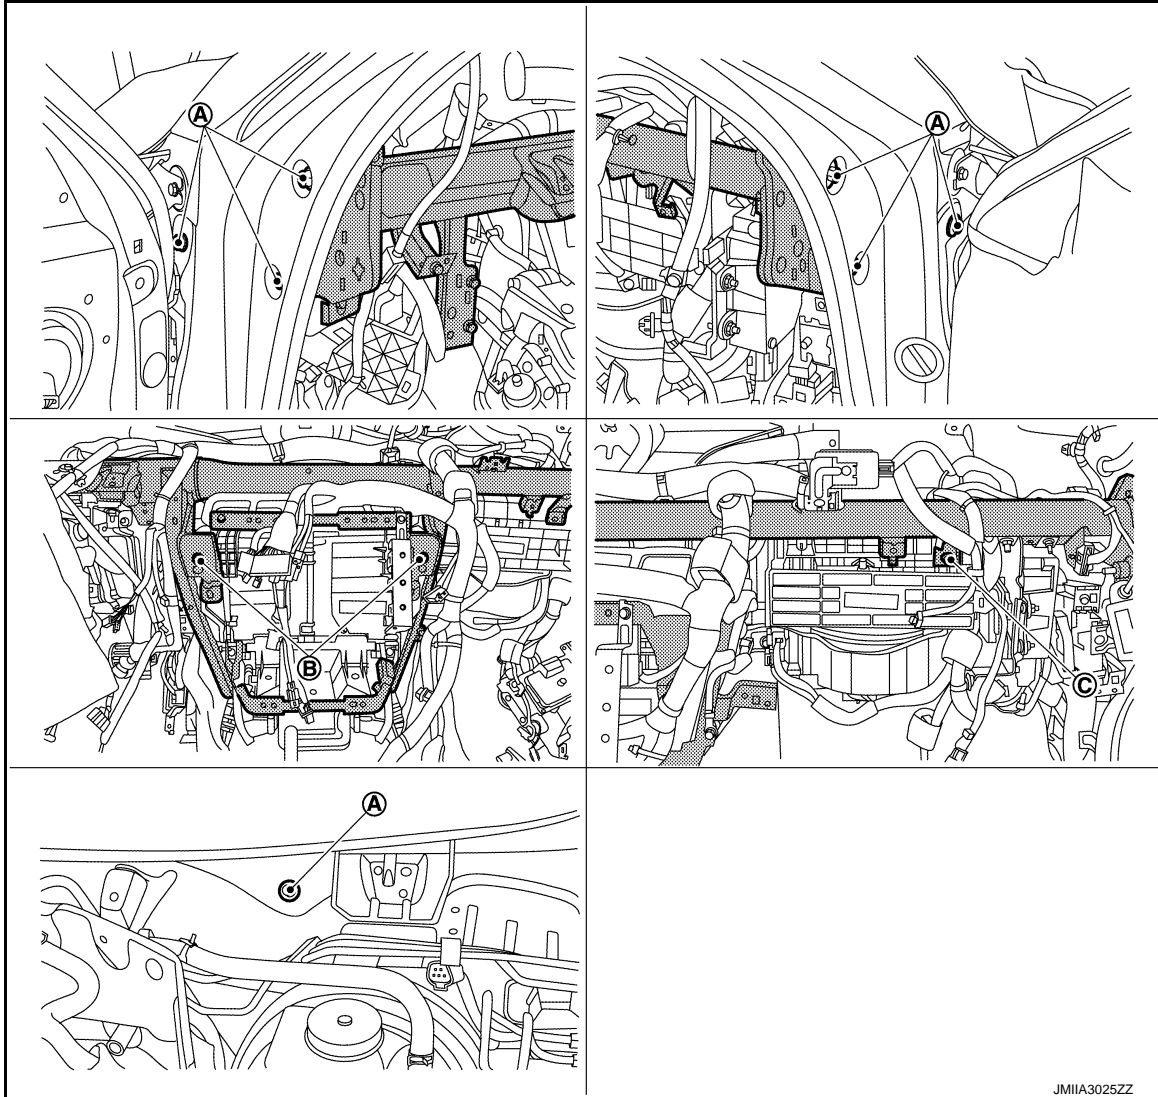

17. Remove steering member from vehicle.
18. Remove A/C unit assembly from vehicle.
19. Remove fixing screw, and then separate blower unit and heater & cooling unit assembly.

INSTALLATION

Note the following items, and then install in the reverse order of removal.

CAUTION:

- Replace O-rings with new ones. Then apply compressor oil to them when installing.
- Use a refrigerant collecting equipment (for HFC-134a) to charge the refrigerant. Refer to [HA-71, "Charge Refrigerant"](#).
- Check for leakages when recharging refrigerant. Refer to [HA-69, "Leak Test"](#).

NOTE:

Refer to [CO-8, "Refilling"](#) when filling radiator with engine coolant.

HEATER CORE

HEATER CORE : Removal and Installation

INFOID:000000013611533

REMOVAL


1. Remove heater & cooling unit assembly. Refer to [HA-94, "HEATER & COOLING UNIT ASSEMBLY : Removal and Installation"](#).
2. Remove foot duct LH. Refer to [VTL-11, "FOOT DUCT : Removal and Installation"](#).

HEATER & COOLING UNIT ASSEMBLY


[VR30DDTT]

< REMOVAL AND INSTALLATION >


3. Remove heater pipe grommet.
4. Remove fixing screws (A), and then remove heater pipe bracket.

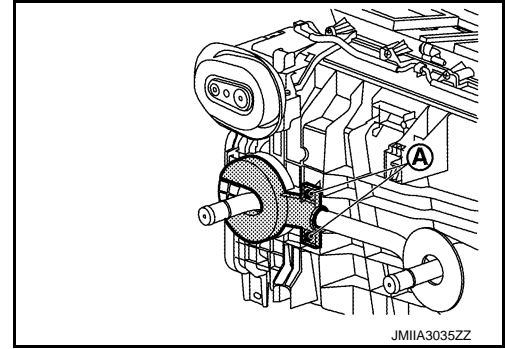

5. Remove fixing screws (A), and then remove heater pipe cover.

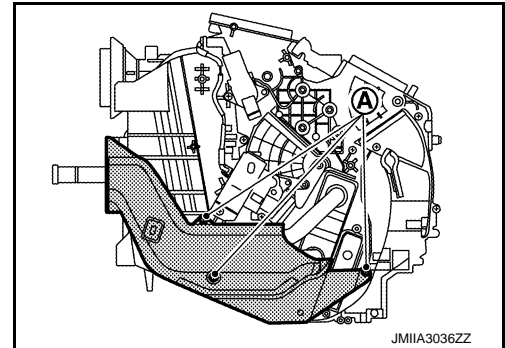

6. Slide heater core to left side, and then remove heater core.

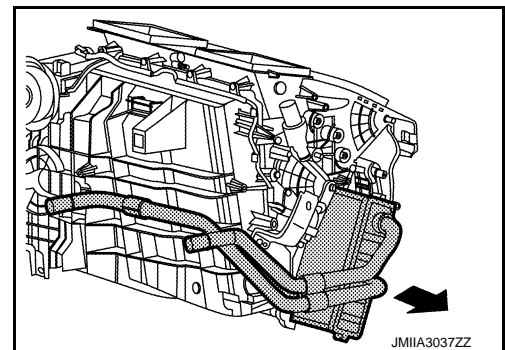

INSTALLATION

Note the following item, and then install in the reverse order of removal.

NOTE:

Refer to [CO-8, "Refilling"](#) when filling radiator with engine coolant.

EVAPORATOR

EVAPORATOR : Removal and Installation

INFOID:000000013611534

REMOVAL


1. Remove heater & cooling unit assembly. Refer to [HA-94, "HEATER & COOLING UNIT ASSEMBLY : Removal and Installation"](#).
2. Remove heater core. Refer to [HA-96, "HEATER CORE : Removal and Installation"](#).
3. Remove foot duct RH. Refer to [VTL-11, "FOOT DUCT : Removal and Installation"](#).
4. Remove air mix door motor LH and RH. Refer to [HAC-145, "AIR MIX DOOR MOTOR : Removal and Installation"](#).
5. Remove fixing screw, and then remove aspirator.

HEATER & COOLING UNIT ASSEMBLY


< REMOVAL AND INSTALLATION >

[VR30DDTT]


6. Remove fixing screws (A), and then remove lower case.

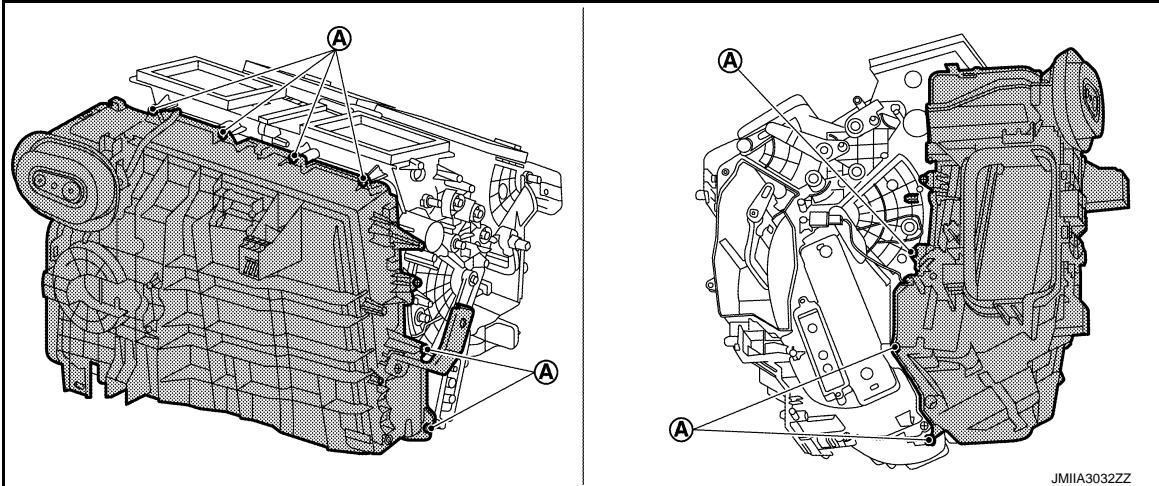

7. Remove evaporator pipe grommet.
8. Remove fixing screws (A), and then remove case cover.

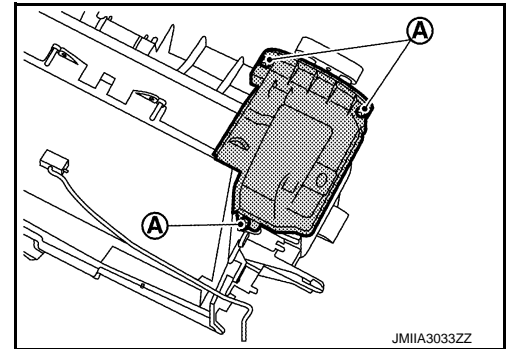

9. Remove evaporator assembly from lower case.

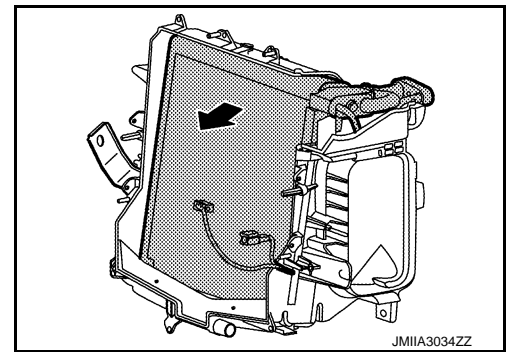

10. Remove the following parts after removing evaporator.
- Evaporator pipe assembly
 - Expansion valve
 - Intake sensor

INSTALLATION

Note the following items, and then install in the reverse order of removal.

CAUTION:

- Replace O-rings with new ones. Then apply compressor oil to them when installing.
- Mark the mounting position of intake sensor bracket prior to removal so that the reinstalled sensor can be located in the same position.
- Perform lubricant adjusting procedure after installing new evaporator. Refer to [HA-73, "Lubricant Adjusting Procedure for Components Replacement Except Compressor"](#).
- Use a refrigerant collecting equipment (for HFC-134a) to charge the refrigerant. Refer to [HA-71, "Charge Refrigerant"](#).
- Check for leakages when recharging refrigerant. Refer to [HA-69, "Leak Test"](#).

EVAPORATOR PIPE ASSEMBLY

HEATER & COOLING UNIT ASSEMBLY

< REMOVAL AND INSTALLATION >


[VR30DDTT]

EVAPORATOR PIPE ASSEMBLY : Removal and Installation


INFOID:000000013611535

REMOVAL

1. Remove heater & cooling unit assembly. Refer to [HA-94, "HEATER & COOLING UNIT ASSEMBLY : Removal and Installation"](#).
2. Remove heater core. Refer to [HA-96, "HEATER CORE : Removal and Installation"](#).
3. Remove foot duct RH. Refer to [VTL-11, "FOOT DUCT : Removal and Installation"](#).
4. Remove air mix door motor LH and RH. Refer to [HAC-145, "AIR MIX DOOR MOTOR : Removal and Installation"](#).
5. Remove fixing screw, and then remove aspirator.
6. Remove fixing screws (A), and then remove lower case.

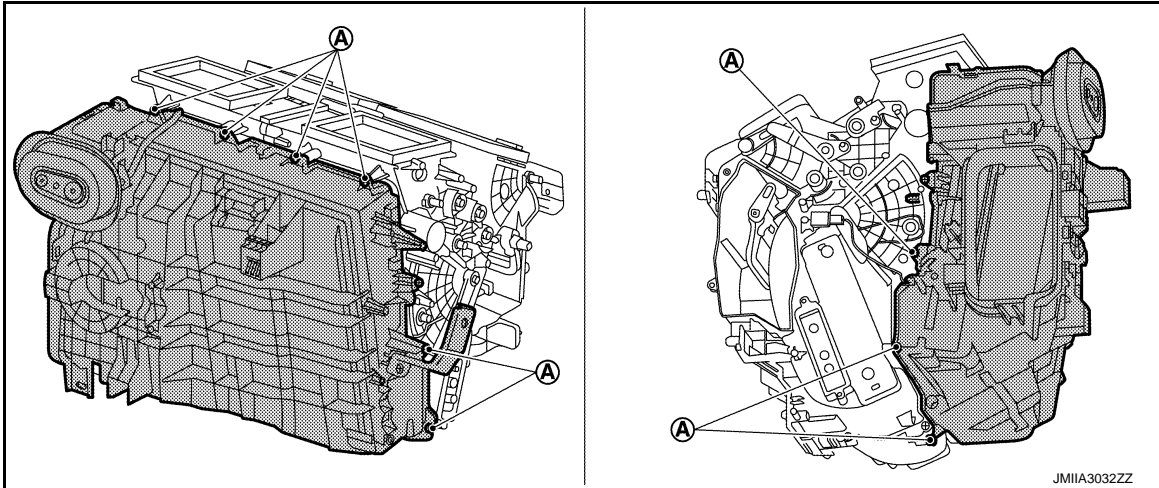


7. Remove evaporator pipe grommet.
8. Remove fixing screws (A), and then remove case cover.

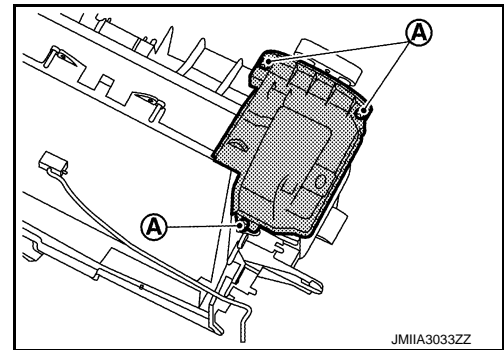

9. Remove mounting bolt (A), and then disconnect evaporator pipe assembly from expansion valve.

CAUTION:

Cap or wrap the joint of evaporator pipe assembly and expansion valve with suitable material such as vinyl tape to avoid the entry of air.

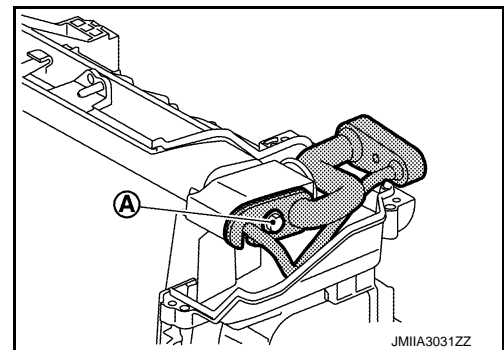

INSTALLATION

Note the following items, and then install in the reverse order of removal.

CAUTION:

- Replace O-rings with new ones. Then apply compressor oil to them when installing.

HEATER & COOLING UNIT ASSEMBLY

[VR30DDTT]

< REMOVAL AND INSTALLATION >

- Use a refrigerant collecting equipment (for HFC-134a) to charge the refrigerant. Refer to [HA-71, "Charge Refrigerant"](#).
- Check for leakages when recharging refrigerant. Refer to [HA-69, "Leak Test"](#).


EXPANSION VALVE

EXPANSION VALVE : Removal and Installation


INFOID:000000013611536

REMOVAL

1. Remove heater & cooling unit assembly. Refer to [HA-94, "HEATER & COOLING UNIT ASSEMBLY : Removal and Installation"](#).
2. Remove heater core. Refer to [HA-96, "HEATER CORE : Removal and Installation"](#).
3. Remove foot duct RH. Refer to [VTL-11, "FOOT DUCT : Removal and Installation"](#).
4. Remove air mix door motor LH and RH. Refer to [HAC-145, "AIR MIX DOOR MOTOR : Removal and Installation"](#).
5. Remove fixing screw, and then remove aspirator.
6. Remove fixing screws (A), and then remove lower case.

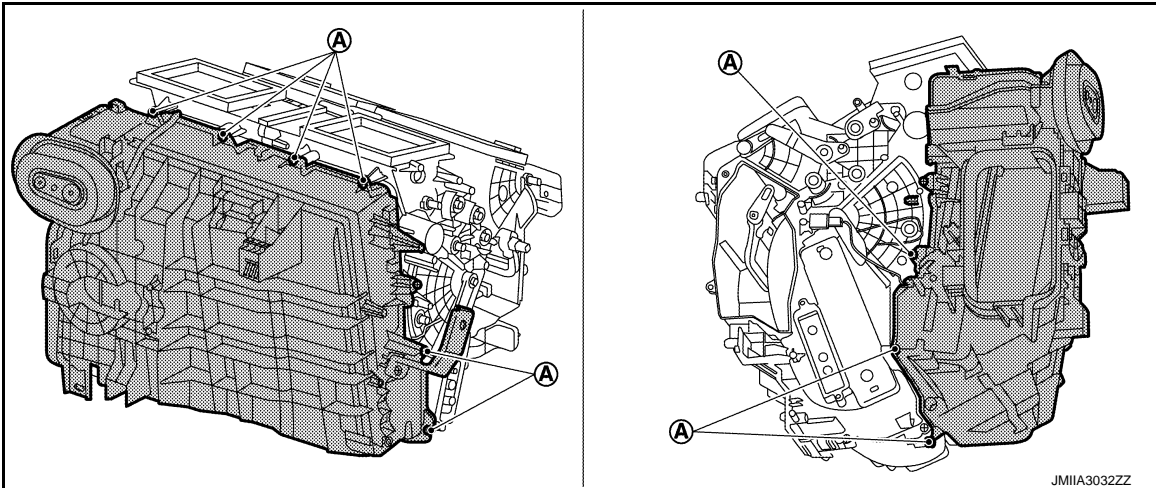


7. Remove evaporator pipe grommet.
8. Remove fixing screws (A), and then remove case cover.

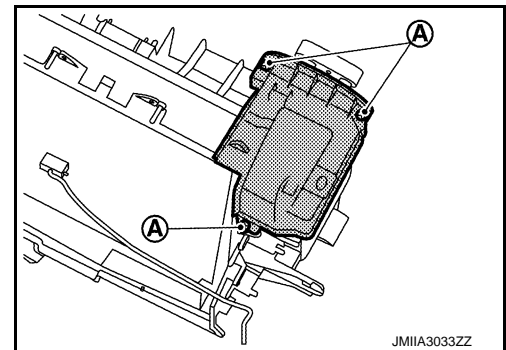

9. Remove mounting bolt (A), and then disconnect evaporator pipe assembly from expansion valve.

CAUTION:

Cap or wrap the joint of evaporator pipe assembly and expansion valve with suitable material such as vinyl tape to avoid the entry of air.

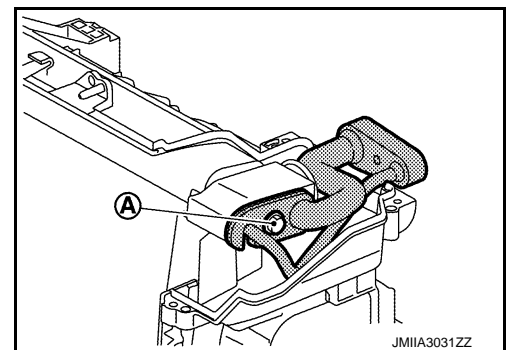

HEATER & COOLING UNIT ASSEMBLY


[VR30DDTT]

< REMOVAL AND INSTALLATION >

10. Remove mounting bolts (A), and then remove expansion valve from evaporator.

CAUTION:

Cap or wrap the joint of evaporator and expansion valve with suitable material such as vinyl tape to avoid the entry of air.

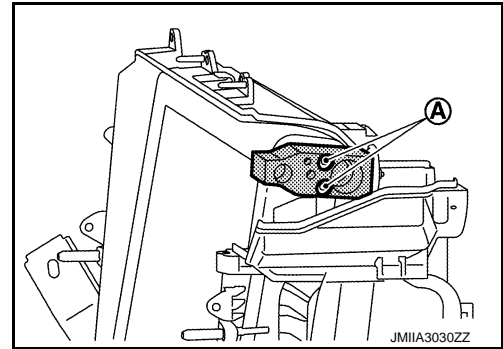

INSTALLATION

Note the following items, and then install in the reverse order of removal.

CAUTION:

- Replace O-rings with new ones. Then apply compressor oil to them when installing.
- Use a refrigerant collecting equipment (for HFC-134a) to charge the refrigerant. Refer to [HA-71, "Charge Refrigerant"](#).
- Check for leakages when recharging refrigerant. Refer to [HA-69, "Leak Test"](#).

A
B
C
D
E
F
G
H
HA
J
K
L
M
N
O
P

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[VR30DDTT]

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Compressor

INFOID:0000000013611537

Model	SANDEN make PXC14	
Type	Variable displacement swash plate	
Displacement cm ³ (cu in)/rev	Maximum	137.2 (8.4)
Number of cylinders	6	
Cylinder bore × stroke (Maximum) mm (in.)	31.6 (1.25) × 29.2 (1.16)	
Direction of rotation	Clockwise (viewed from clutch)	
Drive belt	Poly V	
Disc to pulley clearance mm (in.)	Standard	0.35 – 0.65 (0.014 – 0.026)

Lubricant

INFOID:0000000013611538

Name	SP-10	
Capacity mℓ (US fl oz., Imp fl oz.)	Total in system	90 (3.0, 3.2)
	Compressor (service part) charging amount	90 (3.0, 3.2)

Refrigerant

INFOID:0000000013611539

Type	HFC-134a (R-134a)	
Capacity kg (lb)	0.5 (1.1)	

Engine Idling Speed

INFOID:0000000013611540

Refer to [EC6-1017. "Idle Speed"](#).

Belt Tension

INFOID:0000000013611541

Refer to [EM-155. "Adjustment"](#).