

CONTENTS

VQ37VHR		
PRECAUTION	2	
PRECAUTIONS	2	
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	2	
Precautions for Removing Battery Terminal	2	
PREPARATION	3	
PREPARATION	3	
Commercial Service Tools	3	
SYSTEM DESCRIPTION	4	
DESCRIPTION	4	
Engine Cooling System	4	
Engine Cooling System Schematic	5	
SYMPTOM DIAGNOSIS	6	
OVERHEATING CAUSE ANALYSIS	6	
Troubleshooting Chart	6	
PERIODIC MAINTENANCE	8	
ENGINE COOLANT	8	
Inspection	8	
Draining	8	
Refilling	9	
Flushing	11	
RADIATOR	13	
RESERVOIR TANK CAP	13	
RESERVOIR TANK CAP : Inspection	13	
RADIATOR CAP	13	
RADIATOR CAP : Inspection	13	
RADIATOR	14	
RADIATOR : Inspection	14	
REMOVAL AND INSTALLATION	15	
RADIATOR	15	
Exploded View	15	
Removal and Installation	16	
Inspection	19	
COOLING FAN	20	
Exploded View	20	
Removal and Installation	20	
Disassembly and Assembly	21	
Inspection	21	
WATER PUMP	22	
Exploded View	22	
Removal and Installation	22	
Inspection	24	
WATER INLET AND THERMOSTAT ASSEMBLY	25	
Exploded View	25	
Removal and Installation	25	
Inspection	26	
WATER OUTLET AND WATER PIPING	27	
Exploded View	27	
Removal and Installation	28	
Inspection	29	
SERVICE DATA AND SPECIFICATIONS (SDS)	30	
SERVICE DATA AND SPECIFICATIONS (SDS)	30	
Periodical Maintenance Specification	30	
Radiator	30	
Thermostat	30	

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000011283049

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precautions for Removing Battery Terminal

INFOID:000000011564788

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

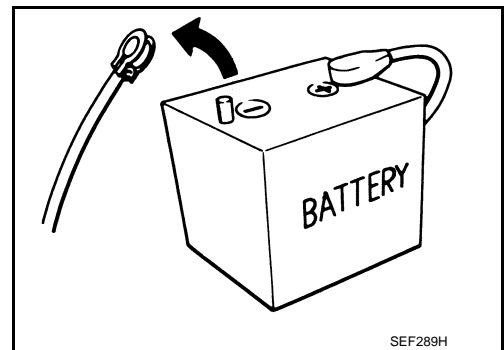

SEF289H

PREPARATION

< PREPARATION >

[VQ37VHR]

PREPARATION




PREPARATION

Commercial Service Tools

INFOID:000000011283050

A

CO

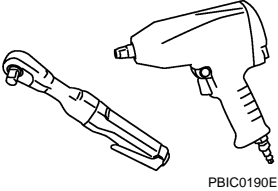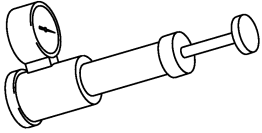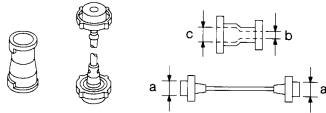Tool name	Description
<p>Power tool</p>  <p>PBIC0190E</p>	<p>Loosening nuts and bolts</p>
<p>Radiator cap tester</p>  <p>PBIC1982E</p>	<p>Checking radiator and radiator cap</p>
<p>Radiator cap tester adapter</p>  <p>S-NT564</p>	<p>Adapting radiator cap tester to radiator cap and water outlet (front) filler neck a: 28 (1.10) dia. b: 31.4 (1.236) dia. c: 41.3 (1.626) dia. Unit: mm (in)</p>

C

D

E

F

G

H

I

J

K

L

M

N

O

P

DESCRIPTION

< SYSTEM DESCRIPTION >

[VQ37VHR]


SYSTEM DESCRIPTION

DESCRIPTION


Engine Cooling System

INFOID:000000011283051

WITH PRESSURIZED RADIATOR RESERVOIR TANK

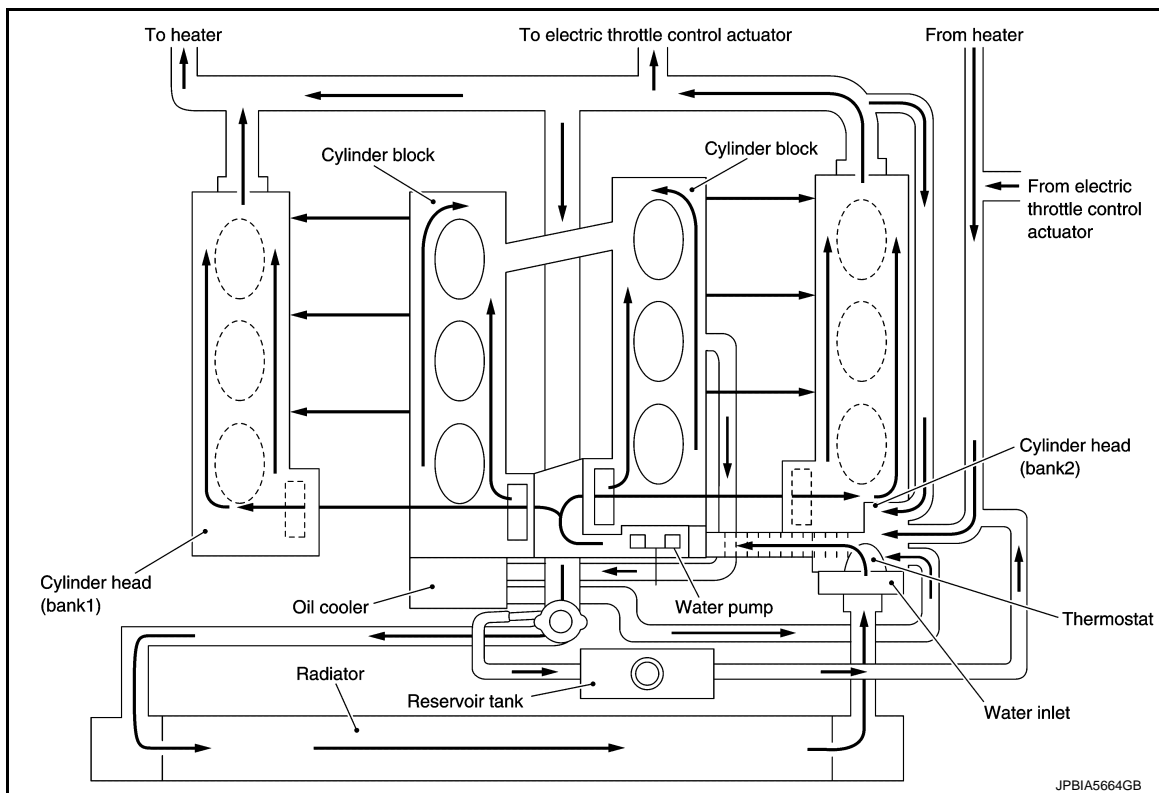

WITH NON-PRESSURIZED RADIATOR RESERVOIR TANK

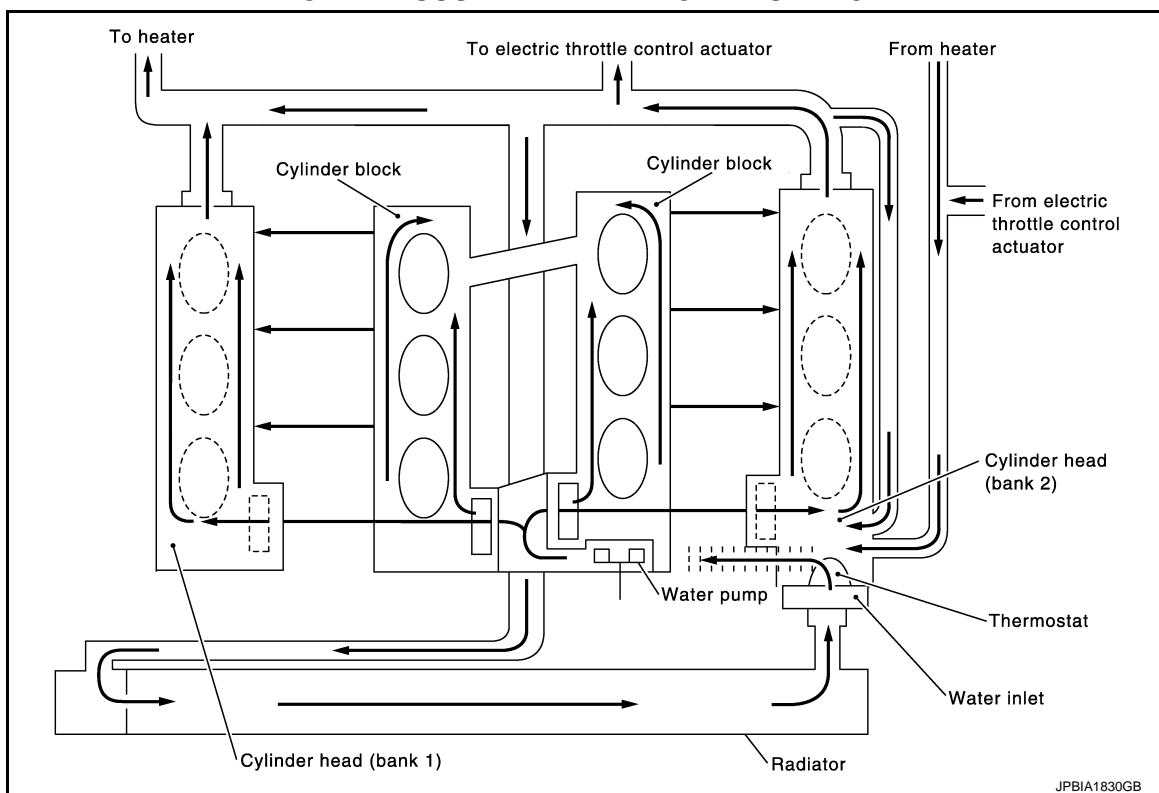

DESCRIPTION

< SYSTEM DESCRIPTION >

[VQ37VHR]

Engine Cooling System Schematic

INFOID:000000011283052

A

CO

C

D

E

F

G

H

I

J

K

L


M

N


O

P

WITH PRESSURIZED RADIATOR RESERVOIR TANK

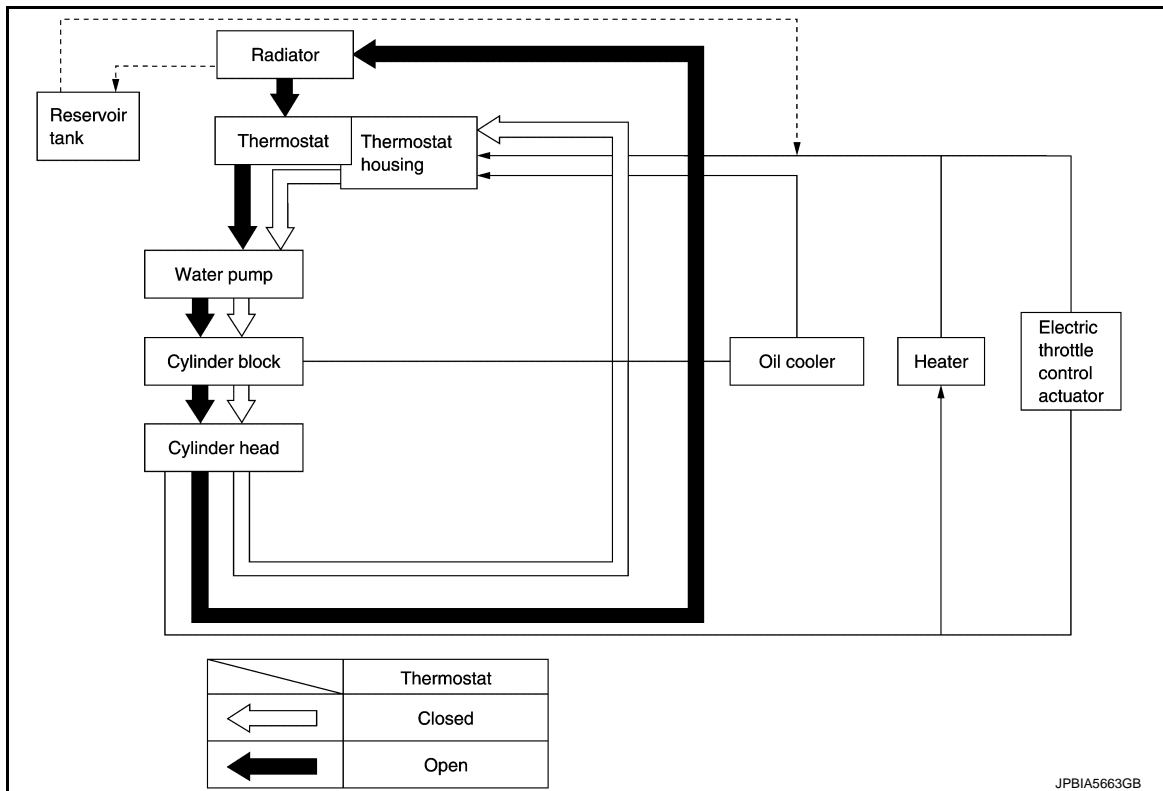

WITH NON-PRESSURIZED RADIATOR RESERVOIR TANK

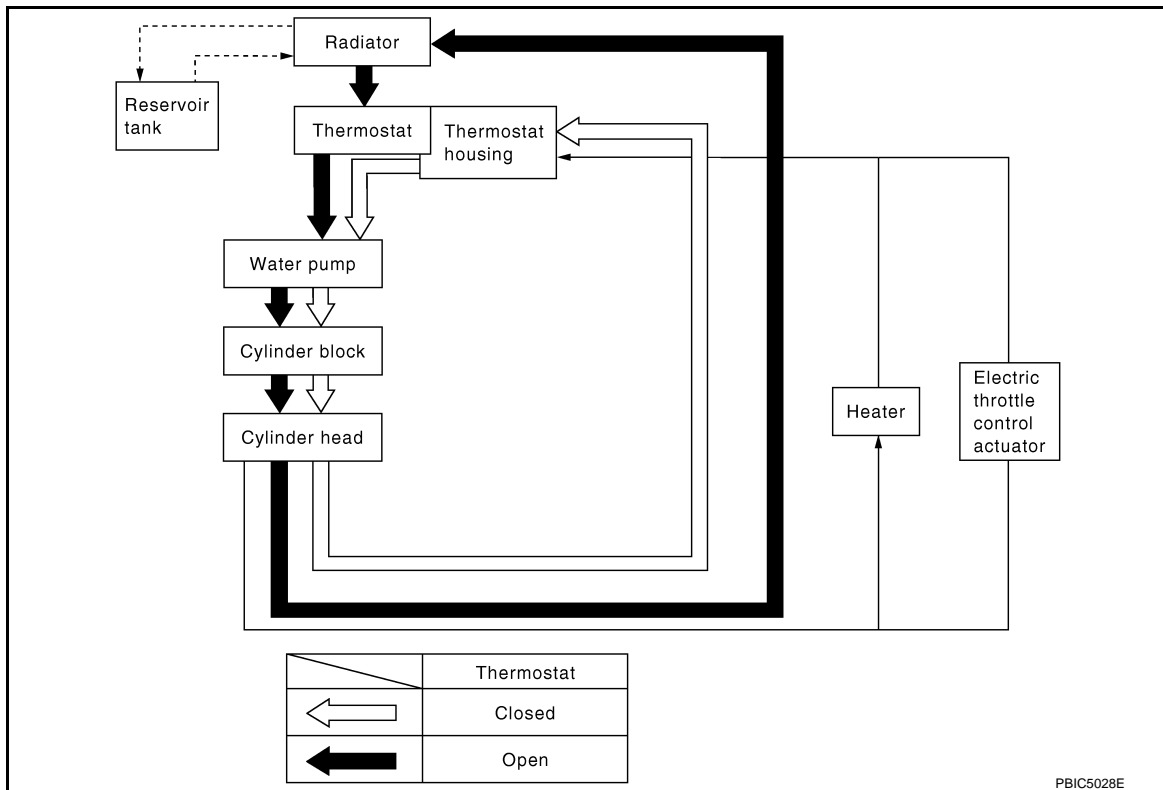

OVERHEATING CAUSE ANALYSIS

< SYMPTOM DIAGNOSIS >

[VQ37VHR]

SYMPTOM DIAGNOSIS

OVERHEATING CAUSE ANALYSIS

Troubleshooting Chart

INFOID:000000011283053

		Symptom	Check items		
Cooling system parts malfunction	Poor heat transfer	Water pump malfunction	Worn or loose drive belt	—	
		Thermostat stuck closed	—		
		Damaged fins	Dust contamination or paper clogging		
			Physical damage		
		Clogged radiator cooling tube	Excess foreign material (rust, dirt, sand, etc.)		
	Reduced air flow	Cooling fan does not operate	Fan assembly	—	
		High resistance to fan rotation			
		Damaged fan blades			
		Damaged radiator shroud	—	—	
		Improper engine coolant mixture ratio	—	—	
		Poor engine coolant quality	—	Engine coolant density	—
	Insufficient engine coolant	Engine coolant leakage	Cooling hose	Loose clamp	
				Cracked hose	
			Water pump	Poor sealing	
Radiator cap			Loose		
			Poor sealing		
Radiator			O-ring for damage, deterioration or improper fitting		
		Cracked radiator tank			
		Reservoir tank	Cracked reservoir tank		
Overflowing reservoir tank	Exhaust gas leakage into cooling system	Cylinder head deterioration			
		Cylinder head gasket deterioration			

OVERHEATING CAUSE ANALYSIS

< SYMPTOM DIAGNOSIS >

[VQ37VHR]

	Symptom		Check items			
Except cooling system parts malfunction	—	Overload on engine	Abusive driving	High engine rpm under no load	A	
				Driving in low gear for extended time	CO	
				Driving at extremely high speed		
				Powertrain system malfunction		C
				Installed improper size wheels and tires	—	D
				Dragging brakes		
		Improper ignition timing		E		
	Blocked or restricted air flow	Blocked bumper	—		E	
		Blocked radiator grille	Installed car brassiere			
			Mud contamination or paper clogging	—	F	
		Blocked radiator	—			
		Blocked condenser	Blocked air flow		G	
Installed large fog lamp						

A
CO
C
D
E
F
G
H
I
J
K
L
M
N
O
P

PERIODIC MAINTENANCE

ENGINE COOLANT

Inspection

INFOID:0000000011283054

LEVEL

- Check if the reservoir tank engine coolant level is within the “MIN” to “MAX” when the engine is cool.

Ⓐ : MAX


Ⓑ : MIN

- Adjust the engine coolant level if necessary.

CAUTION:

Refill Genuine NISSAN Long Life Antifreeze/Coolant (blue) or equivalent in its quality mixed with water (distilled or demineralized). Refer to [MA-10, "Fluids and Lubricants"](#).

- Check that the reservoir tank cap is tightened.

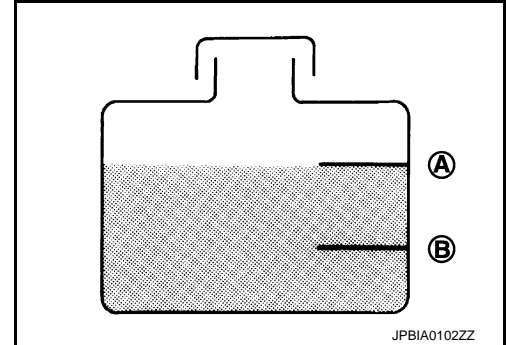

JPBIA0102ZZ

LEAKAGE

- To check for leakage, apply pressure to the cooling system with the radiator cap tester (commercial service tool) (A) and radiator cap tester adapter (commercial service tool) (B).

Testing pressure : Refer to [CO-30, "Radiator"](#).

WARNING:

Never remove radiator cap and reservoir tank cap when engine is hot. Serious burns could occur from high-pressure engine coolant escaping from engine cooling system.


CAUTION:

Higher test pressure than specified may cause radiator damage.

NOTE:

In a case that engine coolant decreases, replenish radiator with engine coolant.

- If anything is found, repair or replace damaged parts.

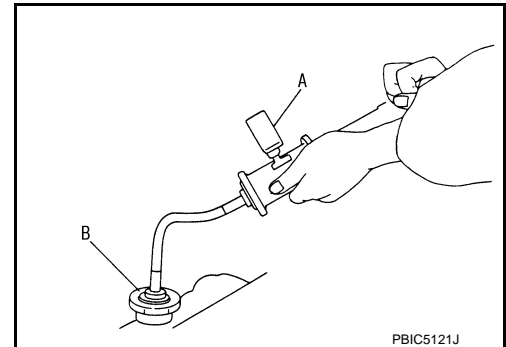

PBIC5121J

Draining

INFOID:0000000011283055

WARNING:

- To avoid being scalded, never change engine coolant when the engine is hot.
- Wrap a thick cloth around reservoir tank cap and carefully remove reservoir tank cap. First, turn reservoir tank cap a quarter of a turn to release built-up pressure. Then turn reservoir tank cap all the way.
- Never spill engine coolant on drive belt.


1. Remove front under cover. Refer to [EXT-33, "FRONT UNDER COVER : Exploded View"](#).
2. Connect drain hose.

NOTE:

Use a general-purpose hose with the dimensions shown in the figure.

A : ϕ 8 - 9 mm (0.31 - 0.35 in)

B : 145 mm (5.71 in) or more

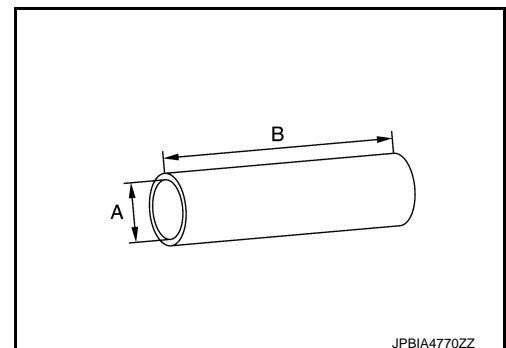

JPBIA4770ZZ

ENGINE COOLANT

< PERIODIC MAINTENANCE >


[VQ37VHR]

3. Open radiator drain cock ① at the bottom of radiator, and then remove radiator cap and reservoir tank cap.

② : Drain hose

↔ : Vehicle front

When draining all of engine coolant in the system, open water drain plugs on cylinder block. Refer to [EM-89, "Setting"](#).

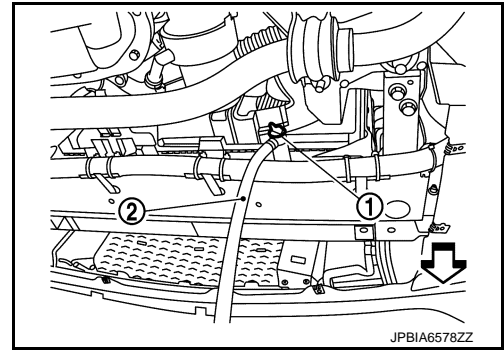

4. Remove reservoir tank if necessary, and drain engine coolant and clean reservoir tank before installing. (WITH NON-PRESSURIZED RADIATOR RESERVOIR TANK)
5. Check drained engine coolant for contaminants such as rust, corrosion or discoloration. If contaminated, flush the engine cooling system. Refer to [CO-11, "Flushing"](#).
6. Disconnect drain hose.

Refilling

INFOID:000000011283056

CAUTION:

- Do not reuse O-rings.
- Do not put additive such as waterleak preventive, since it may cause cooling waterway clogging.
- When refilling use Genuine NISSAN Long Life Antifreeze/Coolant (blue) or equivalent in its quality mixed with water (distilled or demineralized). Refer to [MA-10, "Fluids and Lubricants"](#).

WITH PRESSURIZED RADIATOR RESERVOIR TANK

1. Remove air duct (inlet). Refer to [EM-30, "Exploded View"](#).
2. Install reservoir tank if removed, and radiator drain cock.

CAUTION:

Be sure to clean drain cock and install with new O-ring.

Tightening torque : Refer to [CO-15, "Exploded View"](#).

If water drain plugs on cylinder block are removed, close and tighten them. Refer to [EM-132, "Disassembly and Assembly"](#).

3. Check that each hose clamp has been firmly tightened.
4. Fill up the engine cooling system with engine coolant.


Ⓐ : MAX

Ⓑ : MIN

Pour engine coolant through reservoir tank filler neck slowly of less than 3 ℓ (3-1/8 US qt, 2-5/8 Imp qt) a minute to allow air in system to escape.

Engine coolant capacity (With reservoir tank at "MAX" level) : Refer to [CO-30, "Periodical Maintenance Specification"](#).

Reservoir tank engine coolant capacity (At "MAX" level) : Refer to [CO-30, "Periodical Maintenance Specification"](#).

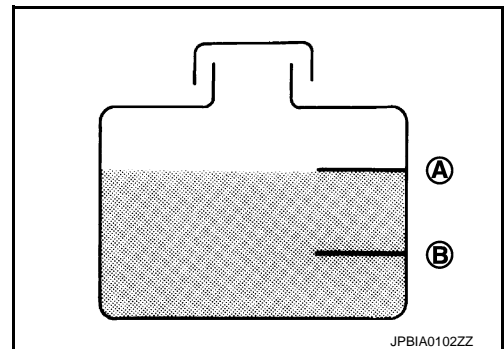

5. Install reservoir tank cap.
6. Start engine, and stop at once.
7. Leave engine for about 10sec. Then check the coolant level at the reservoir tank.
8. Refill reservoir tank to "MAX" level line with engine coolant.
9. Repeat step 5 through 8 until engine coolant level no longer drops.

ENGINE COOLANT

[VQ37VHR]

< PERIODIC MAINTENANCE >

10. Install reservoir tank cap.
11. Warm up engine until opening thermostat. Standard for warming-up time is approximately 10 minutes at 2,000 rpm.
 - Check thermostat opening condition by touching radiator hose (lower) to see a flow of warm water.**CAUTION:**
Watch water temperature gauge so as not to overheat engine.
12. Stop the engine and cool down to less than approximately 50°C (122°F).
 - Cool down using fan to reduce the time.
 - Check the engine coolant level. If the level is low, refill with engine coolant and repeat the steps from Step 4.
13. Refill reservoir tank to "MAX" level line with engine coolant.
14. Check cooling system for leakage with engine running.
15. Check flow noise, according to the following steps.
CAUTION:
To check flow noise, turn OFF the radio and close the windows, doors, and the hood.
 - a. Allow the engine to become cold [approximately 50°C (122°F) or less].
 - b. Start the engine, maintain 1000 rpm for approximately 30 seconds, and increase the engine speed from 1000 to 3000 rpm. Repeat this cycle three times.
 - c. Check that flow noise can be heard from the heater core during the Step b operation.
 - d. If flow noise can be heard, repeat from Step 15 of Refilling to Step c of Flow Noise Verification Method.
 - e. Check that the reservoir tank cap is tightened.
16. Install air duct (inlet). Refer to [EM-30, "Exploded View"](#).

WITH NON-PRESSURIZED RADIATOR RESERVOIR TANK

1. Remove air duct (inlet). Refer to [EM-30, "Exploded View"](#).
2. Install reservoir tank if removed, and radiator drain cock.

CAUTION:

Be sure to clean drain cock and install with new O-ring.

Tightening torque : Refer to [CO-15, "Exploded View"](#).

If water drain plugs on cylinder block are removed, close and tighten them. Refer to [EM-132, "Disassembly and Assembly"](#).

3. Check that each hose clamp has been firmly tightened.
4. Fill up the engine cooling system with cooling water.
Pour engine coolant through engine coolant filler neck slowly of less than 3 ℓ (3-1/8 US qt, 2-5/8 Imp qt) a minute to allow air in system to escape.



Engine coolant capacity (With reservoir tank at "MAX" level) : Refer to [CO-30, "Periodical Maintenance Specification"](#).

Reservoir tank engine coolant capacity (At "MAX" level) : Refer to [CO-30, "Periodical Maintenance Specification"](#)

Ⓐ : MAX

Ⓑ : MIN

5. Install radiator cap and reservoir tank cap.
6. Start engine, and stop at once.

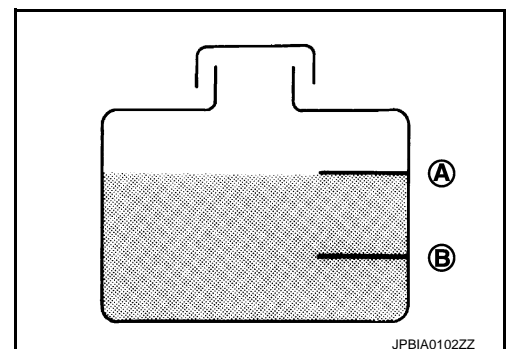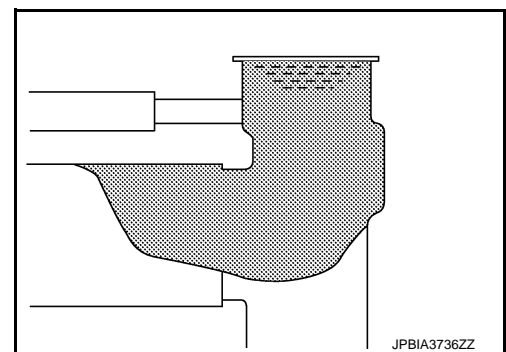

ENGINE COOLANT

[VQ37VHR]

< PERIODIC MAINTENANCE >

7. Leave engine for about 10sec. Then check the coolant level at the engine coolant filler neck.
 8. Refill engine coolant filler neck with engine coolant.
 9. Repeat step 5 through 8 until engine coolant level no longer drops.
 10. Install radiator cap.
 11. Warm up engine until opening thermostat. Standard for warming-up time is approximately 10 minutes at 2,000 rpm.
 - Check thermostat opening condition by touching radiator hose (lower) to see a flow of warm water.
- CAUTION:**
Watch water temperature gauge so as not to overheat engine.
12. Stop the engine and cool down to less than approximately 50°C (122°F).
 - Cool down using fan to reduce the time.
 - Check the engine coolant level. If the level is low, refill with engine coolant and repeat the steps from Step 4.
 13. Refill reservoir tank to "MAX" level line with engine coolant.
 14. Check cooling system for leakage with engine running.
 15. Check flow noise, according to the following steps.

CAUTION:
To check flow noise, turn OFF the radio and close the windows, doors, and the hood.

 - a. Allow the engine to become cold [approximately 50°C (122°F) or less].
 - b. Start the engine, maintain 1000 rpm for approximately 30 seconds, and increase the engine speed from 1000 to 3000 rpm. Repeat this cycle three times.
 - c. Check that flow noise can be heard from the heater core during the Step b operation.
 - d. If flow noise can be heard, repeat from Step 15 of Refilling to Step c of Flow Noise Verification Method.
 - e. Check that the radiator cap is tightened.
 16. Install air duct (inlet). Refer to [EM-30, "Exploded View"](#).

Flushing

INFOID:000000011283057

WITH PRESSURIZED RADIATOR RESERVOIR TANK

1. Install reservoir tank if removed, and radiator drain cock.

CAUTION:

Be sure to clean drain cock and install with new O-ring.

Tightening torque : Refer to [CO-15, "Exploded View"](#).

If water drain plugs on cylinder block are removed, close and tighten them. Refer to [EM-89, "Setting"](#).

2. Fill radiator and reservoir tank with water and reinstall reservoir tank cap.
3. Run the engine and warm it up to normal operating temperature.
4. Rev the engine two or three times under no-load.
5. Stop the engine and wait until it cools down.
6. Drain water from the system. Refer to [CO-8, "Draining"](#).
7. Repeat steps 1 through 6 until clear water begins to drain from radiator.
8. Check that the reservoir tank cap is tightened.

WITH NON-PRESSURIZED RADIATOR RESERVOIR TANK

1. Install reservoir tank if removed, and radiator drain cock.

CAUTION:

Be sure to clean drain cock and install with new O-ring.

Tightening torque : Refer to [CO-15, "Exploded View"](#).

If water drain plugs on cylinder block are removed, close and tighten them. Refer to [EM-89, "Setting"](#).

2. Fill radiator and reservoir tank with water, and reinstall radiator cap and reservoir tank cap.
3. Run the engine and warm it up to normal operating temperature.

ENGINE COOLANT

[VQ37VHR]

< PERIODIC MAINTENANCE >

4. Rev the engine two or three times under no-load.
5. Stop the engine and wait until it cools down.
6. Drain water from the system. Refer to [CO-8, "Draining"](#).
7. Repeat steps 1 through 6 until clear water begins to drain from radiator.
8. Check that the radiator cap and reservoir tank cap is tightened.

RADIATOR RESERVOIR TANK CAP

RESERVOIR TANK CAP : Inspection

INFOID:000000011283058

A

CO


NOTE:

This check applies to "WITH PRESSURIZED RADIATOR RESERVOIR TANK".

- Check valve seat (A) of reservoir tank cap.

(B) : Metal plunger

- Check if valve seat is swollen to the extent that the edge of the plunger (B) cannot be seen when watching it vertically from the top.
- Check if valve seat has no soil and damage.

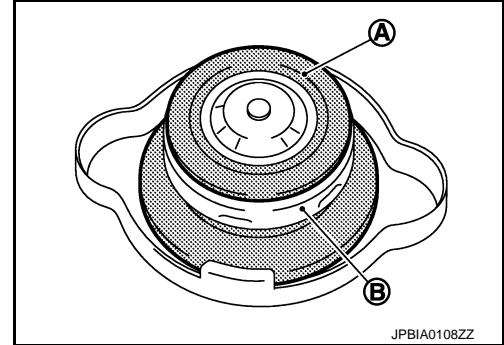


C

D

E

F

- Pull negative-pressure valve to open it, and check that it close completely when released.
- Check that there is no dirt or damage on the valve seat of reservoir tank cap negative-pressure valve.
- Check that there are no unusualness in the opening and closing conditions of negative-pressure valve.

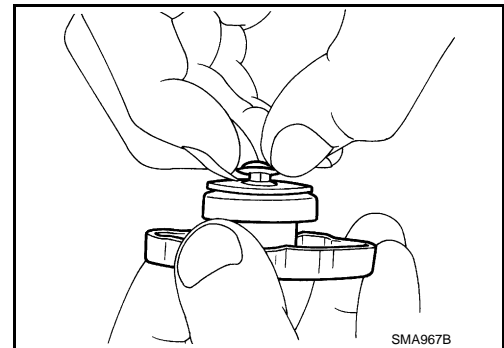

G

H


I

J

- Check reservoir tank cap relief pressure.

Standard and limit : Refer to [CO-30, "Radiator"](#).

- When connecting reservoir tank cap to the radiator cap tester and the radiator cap tester adapter (commercial service tool) (A), apply engine coolant to the cap seal surface.

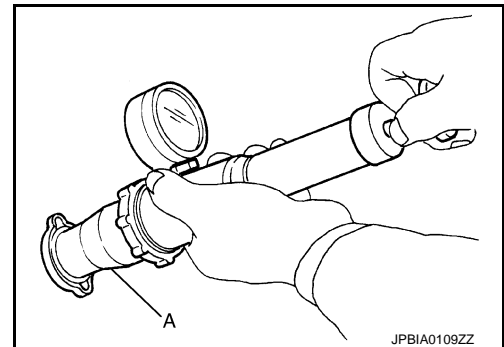

K

L

M

- Replace reservoir tank cap if there is an unusualness related to the above three.

CAUTION:

When installing reservoir tank cap, thoroughly wipe out the reservoir tank to remove any waxy residue or foreign material.

RADIATOR CAP

RADIATOR CAP : Inspection

INFOID:000000011503607

P

NOTE:

This check applies to "WITH NON-PRESSURIZED RADIATOR RESERVOIR TANK".

RADIATOR


[VQ37VHR]

< PERIODIC MAINTENANCE >


- Check valve seat (A) of radiator cap.

(B) : Metal plunger

- Check if valve seat is swollen to the extent that the edge of the plunger (B) cannot be seen when watching it vertically from the top.
- Check if valve seat has no soil and damage.

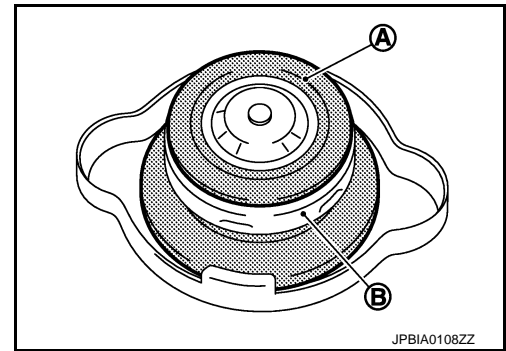


- Pull negative-pressure valve to open it, and check that it close completely when released.
- Check that there is no dirt or damage on the valve seat of reservoir tank cap negative-pressure valve.
- Check that there are no unusualness in the opening and closing conditions of negative-pressure valve.

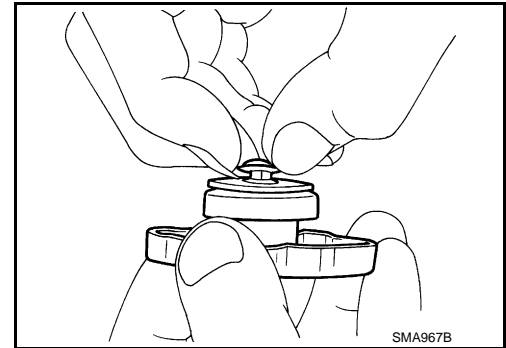

- Check radiator cap relief pressure.

Standard and limit : Refer to [CO-30, "Radiator"](#).

- When connecting radiator cap to the radiator cap tester and the radiator cap tester adapter (commercial service tool) (A), apply engine coolant to the cap seal surface.

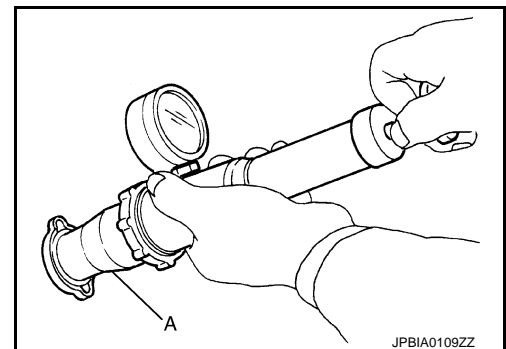

- Replace radiator cap if there is an unusualness related to the above three.

CAUTION:

When installing radiator cap, thoroughly wipe out the water outlet (front) to remove any waxy residue or foreign material.

RADIATOR

RADIATOR : Inspection

INFOID:000000011283059

Check radiator for mud or clogging. If necessary, clean radiator as follows:

- Be careful not to bend or damage radiator fins.
 - When radiator is cleaned without removal, remove all surrounding parts such as radiator cooling fan assembly and horns. Then tape harness and connectors to prevent water from entering.
1. Apply water by hose to the back side of the radiator core vertically downward.
 2. Apply water again to all radiator core surfaces once per minute.
 3. Stop washing if any stains no longer flow out from radiator.
 4. Blow air into the back side of radiator core vertically downward.
 - Use compressed air lower than 490 kPa (5 kg/cm², 71 psi) and keep distance more than 30 cm (11.8 in).
 5. Blow air again into all the radiator core surfaces once per minute until no water sprays out.

RADIATOR

< REMOVAL AND INSTALLATION >

[VQ37VHR]


REMOVAL AND INSTALLATION

RADIATOR

Exploded View

INFOID:000000011283060

WITH PRESSURIZED RADIATOR RESERVOIR TANK

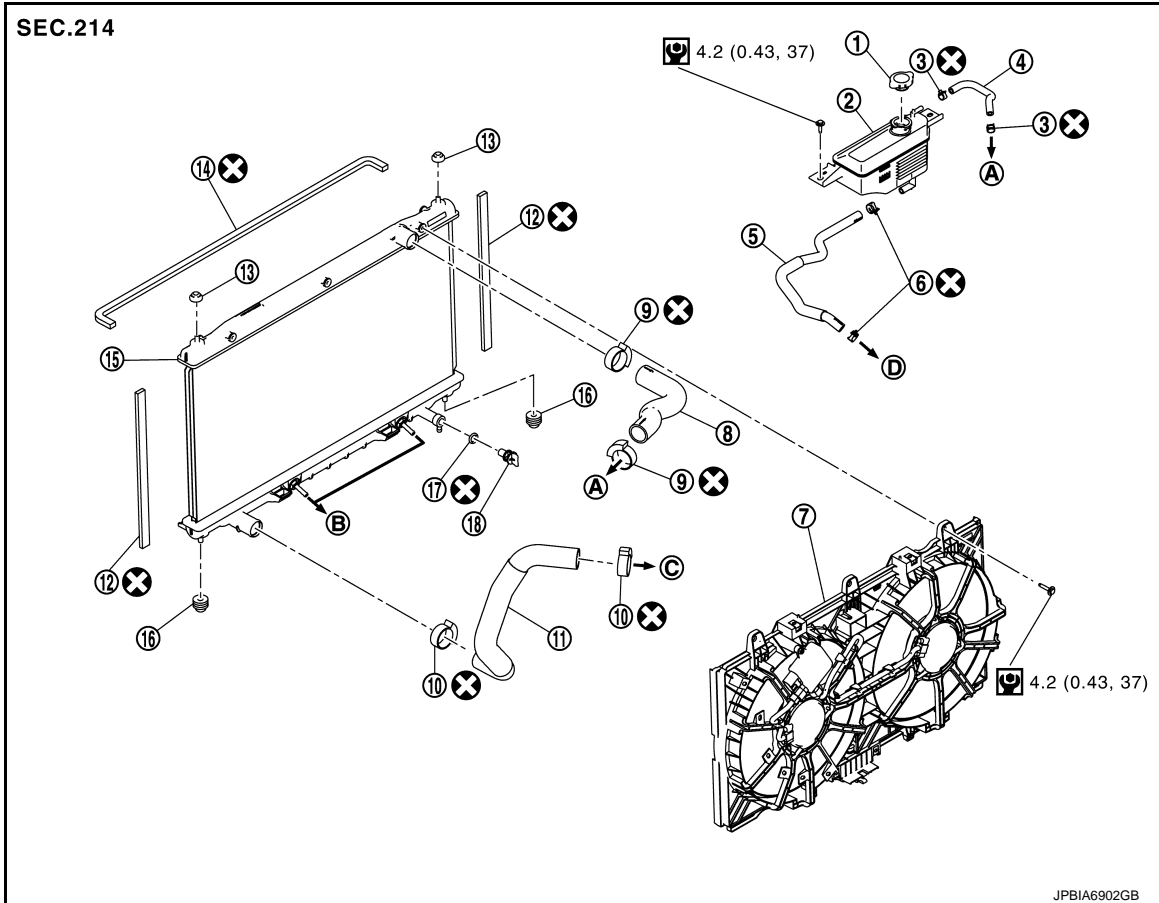

- | | | |
|---------------------------|-------------------------|------------------|
| ① Reservoir tank cap | ② Reservoir tank | ③ Clamp |
| ④ Reservoir tank hose | ⑤ Reservoir tank hose | ⑥ Clamp |
| ⑦ Cooling fan assembly | ⑧ Radiator hose (Upper) | ⑨ Clamp |
| ⑩ Clamp | ⑪ Radiator hose (lower) | ⑫ Seal |
| ⑬ Mounting rubber (upper) | ⑭ Seal | ⑮ Radiator |
| ⑯ Mounting rubber (lower) | ⑰ O-ring | ⑱ Drain cock |
| Ⓐ To water outlet (front) | Ⓑ To transmission | Ⓒ To water inlet |
| Ⓓ To heater pipe | | |

: N·m (kg-m, in-lb)


: Always replace after every disassembly.

RADIATOR

< REMOVAL AND INSTALLATION >

[VQ37VHR]

WITH NON-PRESSURIZED RADIATOR RESERVOIR TANK

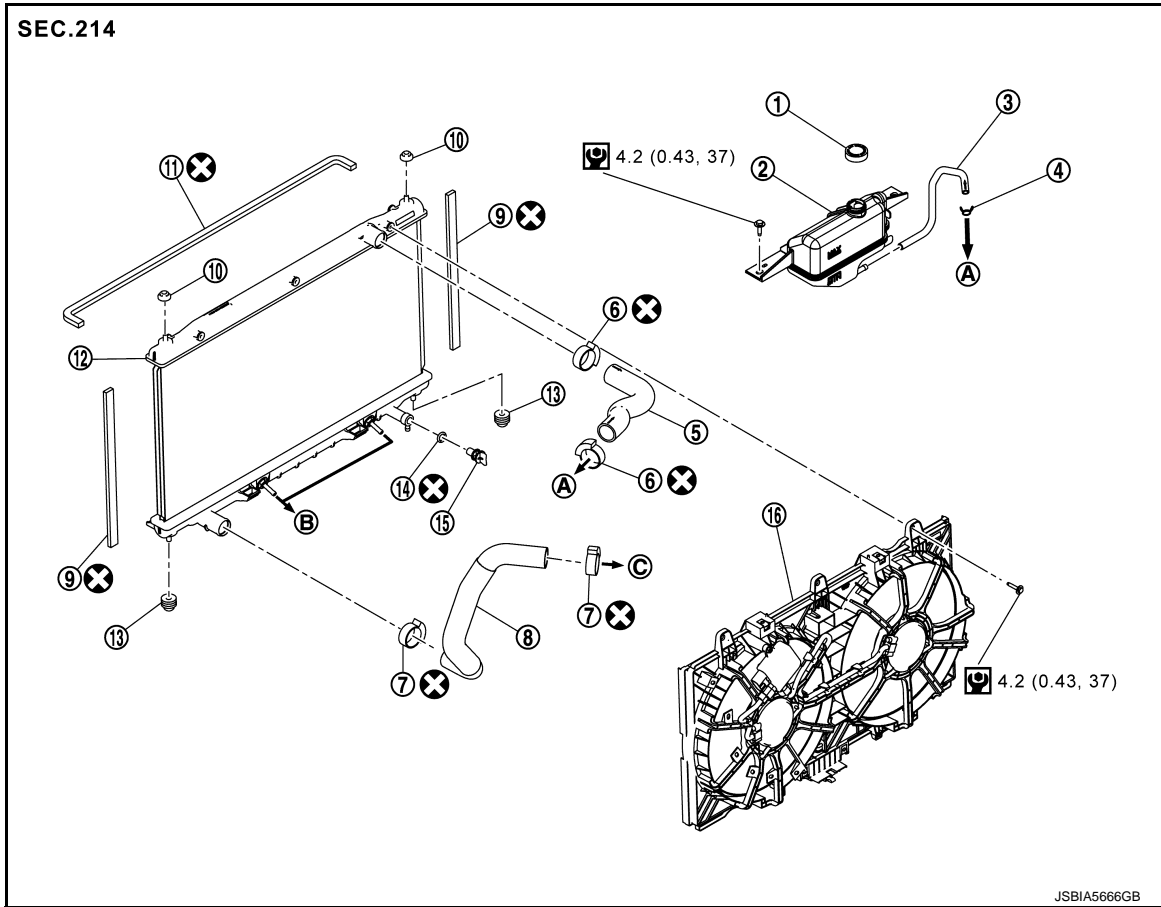

- | | | |
|-----------------------------|-------------------------|-----------------------|
| ① Reservoir tank cap | ② Reservoir tank | ③ Reservoir tank hose |
| ④ Clamp | ⑤ Radiator hose (Upper) | ⑥ Clamp |
| ⑦ Clamp | ⑧ Radiator hose (lower) | ⑨ Seal |
| ⑩ Mounting rubber (upper) | ⑪ Seal | ⑫ Radiator |
| ⑬ Mounting rubber (lower) | ⑭ O-ring | ⑮ Drain cock |
| ⑯ Cooling fan assembly | | |
| (A) To water outlet (front) | (B) To transmission | (C) To water inlet |

: N-m (kg-m, in-lb)

: Always replace after every disassembly.

Removal and Installation

INFOID:000000011283061

REMOVAL

WARNING:

Never remove radiator cap and reservoir tank cap when engine is hot. Serious burns could occur from high-pressure engine coolant escaping from engine cooling system. Wrap a thick cloth around the cap. Slowly turn it a quarter of a turn to release built-up pressure. Carefully remove radiator cap and reservoir tank cap by turning it all the way.

NOTE:

When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.

- Remove the following parts:
 - Front under cover with power tool: Refer to [EXT-35. "FRONT UNDER COVER : Removal and Installation"](#).
 - Engine cover: Refer to [EM-27. "Exploded View"](#).


RADIATOR

[VQ37VHR]

< REMOVAL AND INSTALLATION >

- Air duct (inlet): Refer to [EM-30, "Exploded View"](#).
2. Drain engine coolant from radiator. Refer to [CO-8, "Draining"](#).
CAUTION:
 - Perform this step when the engine is cold.
 - Never spill engine coolant on drive belt.
 3. Remove reservoir tank and reservoir tank hose.
 4. Disconnect A/T fluid cooler hoses from radiator.
 5. Remove radiator hoses (upper and lower).
 6. Remove cooling fan assembly. Refer to [CO-20, "Exploded View"](#).
CAUTION:
Never damage or scratch radiator core when removing.
 7. Remove radiator core support ornament. Refer to [DLK-181, "Exploded View"](#).
 8. Move condenser as following steps:
 - a. Remove condenser mounting screw.
 - i. Lift up and pull the radiator ① with condenser backward, and then remove the mounting rubber (lower) ③ from the radiator core support ②.

← : Vehicle front

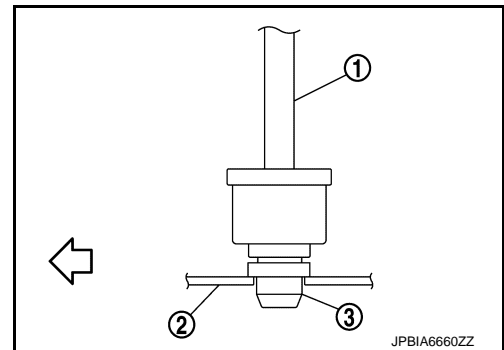

- ii. Remove condenser mounting screw.
- b. Set the radiator with condenser to the radiator core support.
- c. Lift the lower left side of condenser ① to remove it from the condenser mounting part (A) of radiator.


NOTE:

- Hold radiator ② to prevent it from leaning backward.
- Remove lower right side in the same manner.

9. Remove radiator.

CAUTION:

Be careful not to damage radiator core.

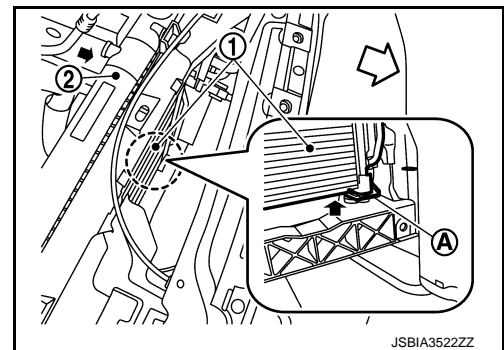

INSTALLATION

Note the following, and install in the reverse order of removal.

CAUTION:

- Do not reuse O-rings.
- Replace water hose clamp if it is removed.
- Use genuine mounting bolts for the cooling fan assembly and strictly observe the tightening torque. (Breakage prevention for radiator)


NOTE:

- Insert the radiator hose ① all the way to the stopper ② or by 33 mm (1.30 in) (hose without a stopper).

RADIATOR

< REMOVAL AND INSTALLATION >

[VQ37VHR]





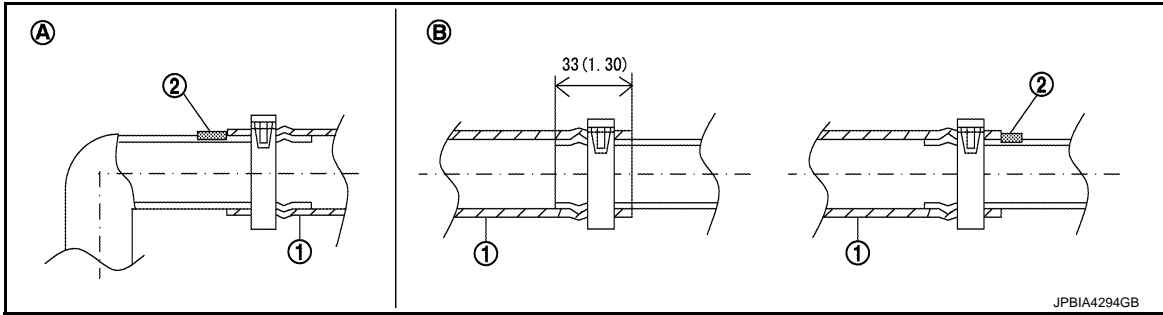


Unit mm (in)

Ⓐ Radiator side

Ⓑ Engine side

- Refer to the following table when installing the hose clamps.

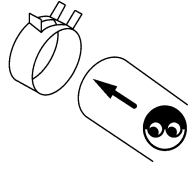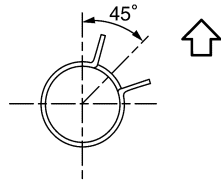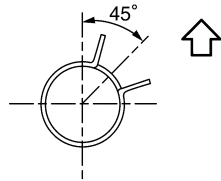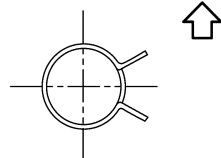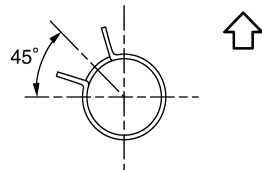
Hose location	Hose end	Direction of paint mark	Direction of hose clamp tabs  JPCIA0366ZZ ⇐: Vehicle upper ⇐: Vehicle front
Radiator hose (upper)	Radiator side	Vehicle upper	 JPCIA0363ZZ
	Engine side	Vehicle upper	 JPCIA0363ZZ
Radiator hose (lower)	Radiator side	Vehicle lower	 JPCIA0360ZZ
	Engine side	Vehicle upper left	 JPCIA0365ZZ

RADIATOR

[VQ37VHR]


< REMOVAL AND INSTALLATION >

- The direction of the hose clamp tabs must be within $\pm 30^\circ$ (b) of the indicated position (A).

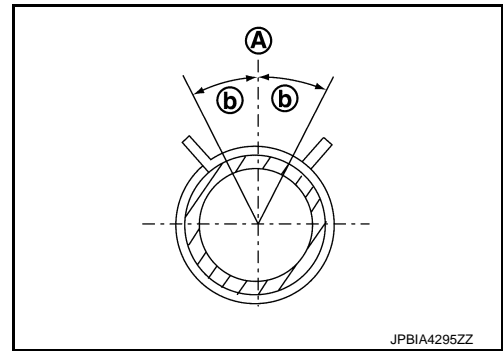

- When installing hose clamp (1), check that the distance "A" between the end of the radiator hose paint mark (2) and the hose clamp is within the standard range.

**Dimension "A" : (-1) - (+1) mm
(-0.04) - (+0.04) in**

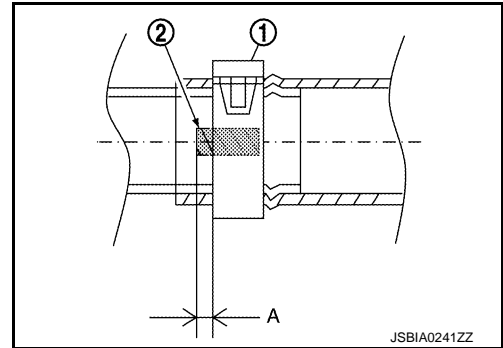

Inspection

INFOID:0000000011283062

INSPECTION AFTER INSTALLATION

- Check that the reservoir tank cap is tightened.
- Check for leakage of engine coolant using the radiator cap tester adapter and the radiator cap tester (commercial service tool). Refer to [CO-8. "Inspection"](#).
- Start and warm up the engine. Visually check that there is no leakage of engine coolant and A/T fluid (A/T models).

COOLING FAN


< REMOVAL AND INSTALLATION >

[VQ37VHR]

COOLING FAN

Exploded View

INFOID:000000011283063

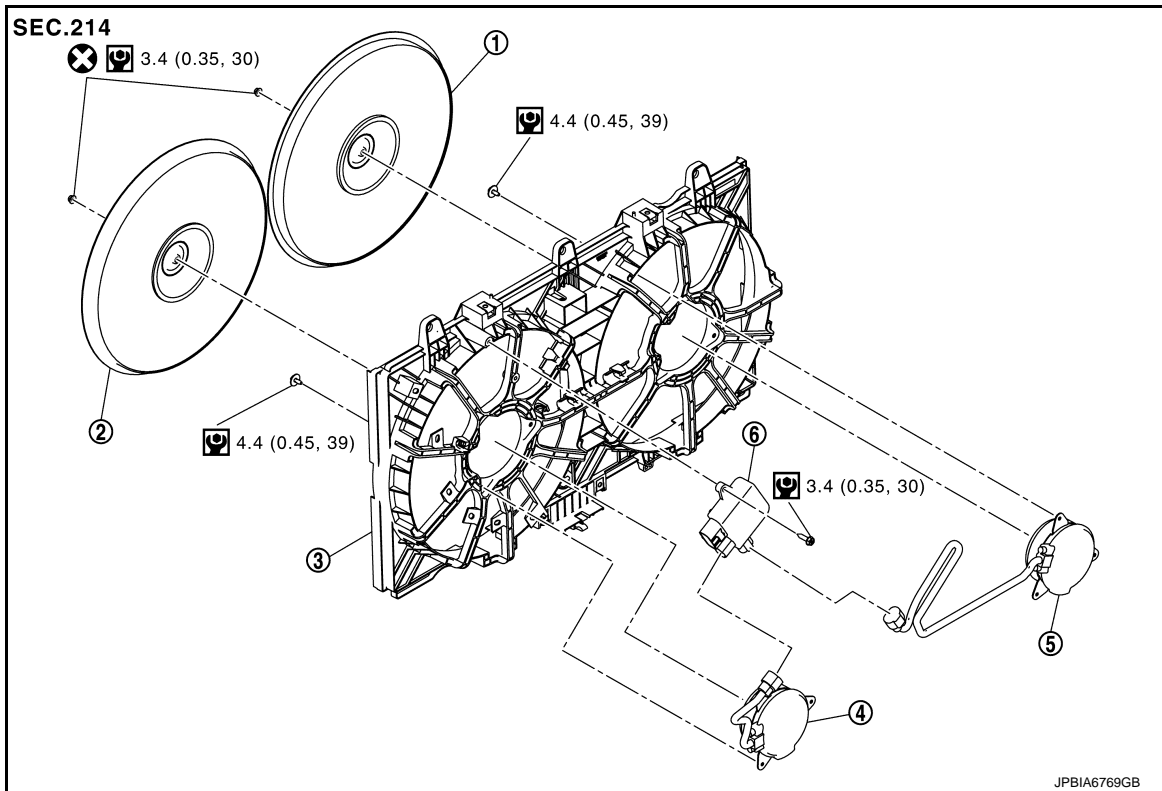

- ① Cooling fan (RH)
- ② Cooling fan (LH)
- ③ Fan shroud
- ④ Fan motor 1
- ⑤ Fan motor 2
- ⑥ Cooling fan control module

ⓐ Apply on fan motor shaft

Ⓜ : N-m (kg-m, in-lb)

ⓧ : Always replace after every disassembly.

Removal and Installation

INFOID:000000011283064

REMOVAL

1. Remove front under cover, using a power tool. Refer to [EXT-35, "FRONT UNDER COVER : Removal and Installation"](#).
2. Drain engine coolant. Refer to [CO-8, "Draining"](#).
3. Remove reservoir tank and reservoir tank hose. Refer to [CO-15, "Exploded View"](#)
4. Remove air duct (inlet) and air cleaner assembly (bank 1 and bank 2). Refer to [EM-30, "Exploded View"](#).
5. Disconnect harness connector from cooling fan control module, and move harness to aside.
6. Remove harness clips.
7. Remove radiator hose (upper). Refer to [CO-15, "Exploded View"](#).
8. Remove A/T oil cooler tube from fanshroud.
9. Remove cooling fan assembly.

CAUTION:

Be careful not to damage or scratch on radiator core.

INSTALLATION

Note the following, and install in the reverse order of removal.

CAUTION:

COOLING FAN

< REMOVAL AND INSTALLATION >

[VQ37VHR]

Only use genuine parts for cooling fan mounting bolt and observe the specified torque (to prevent core support from being damaged).

Disassembly and Assembly

INFOID:0000000011283065

DISASSEMBLY

1. Disconnect fan motor harness connectors from cooling fan control module.
2. Remove cooling fan control module from cooling fan assembly.
CAUTION:
Handle carefully to avoid dropping and shocks.
3. Remove cooling fan mounting nuts, and then remove the cooling fan (RH and LH).
4. Remove fan motors (1 and 2).

ASSEMBLY

Note the following, and assemble in the reverse order of disassembly.

CAUTION:

RH and LH cooling fans are different. Be careful not to misassemble them.

- Install each fan in the following position.

Right side : 9 blades

Left side : 7 blades

- Secure the harness tightly to the fan shroud to prevent the fan rotation area from being loose.

Inspection

INFOID:0000000011283066

INSPECTION AFTER REMOVAL

Check that fan motors operate normally.

NOTE:

Cooling fans are controlled by cooling fan control module. For details, refer to [EC-51. "COOLING FAN CONTROL : System Description"](#).

INSPECTION AFTER DISASSEMBLY

Cooling Fan

Inspect cooling fan for crack or unusual bend.

- If anything is found, replace cooling fan.

A
CO
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WATER PUMP


< REMOVAL AND INSTALLATION >

[VQ37VHR]

WATER PUMP

Exploded View

INFOID:000000011283067

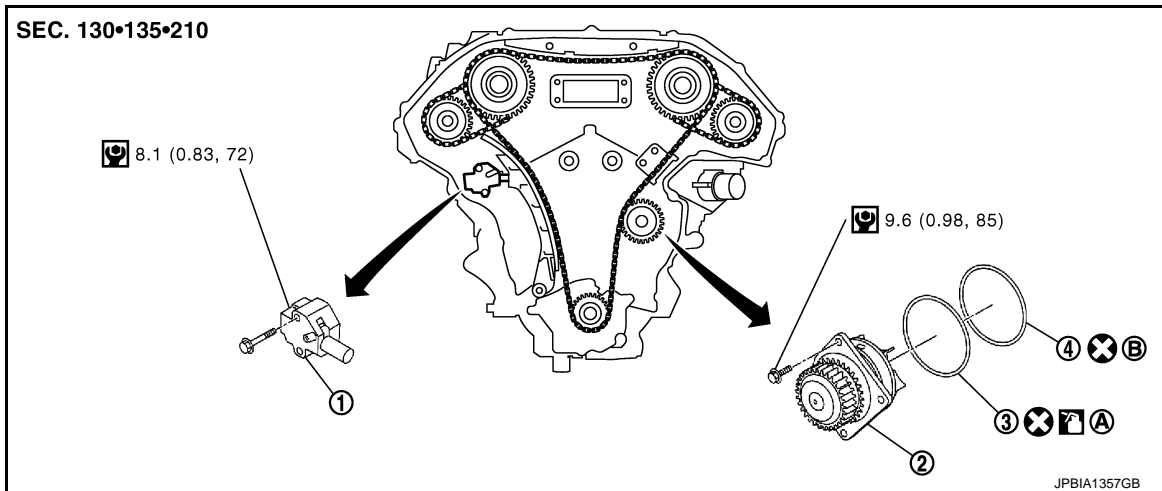

- ① Timing chain tensioner (primary) ② Water pump ③ O-ring
④ O-ring
Ⓐ Identify with yellow paint mark Ⓑ Identify with light blue paint mark
Apply engine coolant
⊗ : Always replace after every disassembly.
Ⓕ : Should be lubricated with oil.
Ⓖ : N·m (kg·m, in·lb)

Removal and Installation

INFOID:000000011283068

CAUTION:

- When removing water pump assembly, be careful not to get engine coolant on drive belt.
- Water pump cannot be disassembled and should be replaced as a unit.
- After installing water pump, connect hose and clamp securely, then check for leakage using the radiator cap tester and the radiator cap tester adapter (commercial service tool).

REMOVAL

1. Remove engine cover. Refer to [EM-27, "Exploded View"](#).
2. Release the fuel pressure. Refer to [EC-168, "Work Procedure"](#).
3. Disconnect the battery cable from the negative terminal.
4. Remove air duct (inlet) and air cleaner assembly (bank 1 and bank 2). Refer to [EM-30, "Exploded View"](#).
5. Separate engine harness removing their brackets from front timing chain case.
6. Remove front under cover, using a power tool. Refer to [EXT-35, "FRONT UNDER COVER : Removal and Installation"](#).
7. Drain engine oil. Refer to [CO-8, "Draining"](#).
CAUTION:
 - Perform this step when the engine is cold.
 - Never spill engine oil on drive belt.
8. Drain engine coolant from radiator. Refer to [CO-8, "Draining"](#).
CAUTION:
 - Perform this step when the engine is cold.
 - Never spill engine coolant on drive belt.
9. Remove reservoir tank. Refer to [CO-15, "Exploded View"](#).
10. Remove cooling fan assembly. Refer to [CO-20, "Exploded View"](#).

WATER PUMP

[VQ37VHR]


< REMOVAL AND INSTALLATION >

11. Remove radiator hose (lower). Refer to [CO-15, "Exploded View"](#).
12. Remove front timing chain case. Refer to [EM-55, "Exploded View"](#).
13. Remove timing chain tensioner (primary) ③ as follows:

- a. Remove lower mounting bolt ①.
- b. Loosen upper mounting bolt ② slowly, and then turn chain tensioner (primary) on the upper mounting bolt so that plunger ④ is fully expanded.

NOTE:

Even if plunger is fully expanded, it is not dropped from the body of timing chain tensioner (primary).

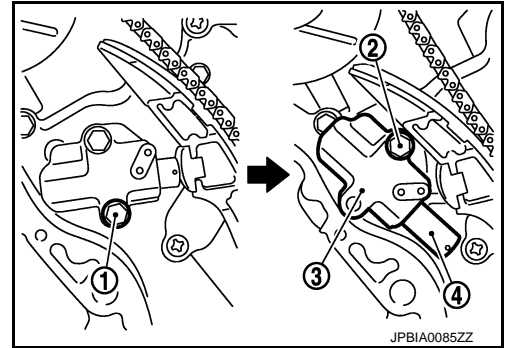

- c. Remove upper mounting bolt, and then remove timing chain tensioner (primary).

14. Remove water pump as follows:

- a. Remove three water pump mounting bolts. Secure a gap between water pump gear and timing chain, by turning crankshaft counterclockwise until timing chain looseness on water pump sprocket becomes maximum.

- b. Screw M8 bolts ① [pitch: 1.25 mm (0.049 in) length: approx. 50 mm (1.97 in)] into water pumps upper and lower mounting bolt holes until they reach timing chain case. Then, alternately tighten each bolt for a half turn, and pull out water pump ①.


CAUTION:

- Pull straight out while preventing vane from contacting socket in installation area.
- Remove water pump without causing sprocket to contact timing chain.

- c. Remove M8 bolts and O-rings from water pump.

CAUTION:

Never disassemble water pump.

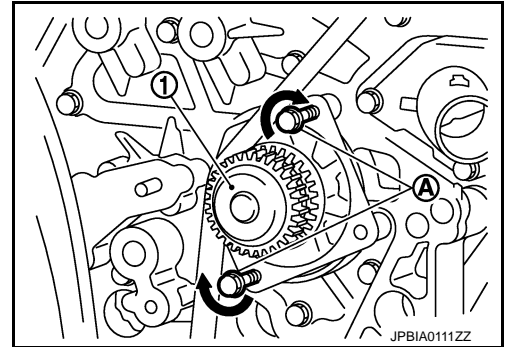

INSTALLATION

CAUTION:

Do not reuse O-rings.

1. Install new O-rings to water pump.


CAUTION:

Do not reuse O-rings.

- Apply engine oil to O-ring ① and engine coolant to O-ring ③ as shown in the figure.

② : Water pump

- Locate O-ring with yellow paint mark ① to front side.
- Locate O-ring with light blue paint mark ② to rear side.

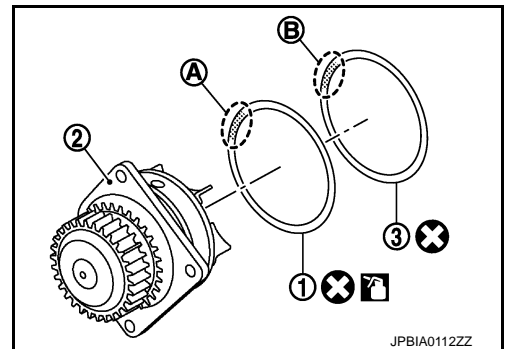

2. Install water pump.

CAUTION:

Never allow cylinder block to nip O-rings when installing water pump.

- Check timing chain and water pump sprocket are engaged.
- Insert water pump by tightening mounting bolts alternately and evenly.

3. Install timing chain tensioner (primary) as follows:

WATER PUMP

[VQ37VHR]

< REMOVAL AND INSTALLATION >

a. Turn crankshaft clockwise so that timing chain on the timing chain tensioner (primary) side is loose.

b. Pull plunger stopper tab (A) up (or turn lever downward) so as to remove plunger stopper tab from the ratchet of plunger (D).

NOTE:

Plunger stopper tab and lever (C) are synchronized.

c. Push plunger into the inside of tensioner body.

d. Hold plunger in the fully compressed position by engaging plunger stopper tab with the tip of ratchet.

e. To secure lever, insert stopper pin (E) through hole of lever into tensioner body hole (B).

- The lever parts and the tab are synchronized. Therefore, the plunger will be secured under this condition.

NOTE:

Figure shows the example of 1.2 mm (0.047 in) diameter thin screwdriver being used as the stopper pin.

f. Install timing chain tensioner (primary).

- Remove dust and foreign material completely from backside of timing chain tensioner (primary) and from installation area of rear timing chain case.


g. Remove stopper pin.

h. Check again that timing chain and water pump sprocket are engaged.

4. Install in the reverse order of removal for remaining parts.

CAUTION:

After starting engine, let idle for three minutes, then rev engine up to 3,000 rpm under no load to purge air from the high-pressure chamber of chain tensioner. Engine may produce a rattling noise. This indicates that air still remains in the chamber and is not a matter of concern.

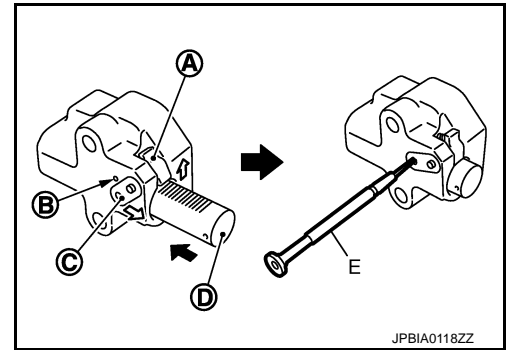


Inspection

INFOID:0000000011283069

INSPECTION AFTER REMOVAL

- Check for badly rusted or corroded water pump body assembly.
- Check for rough operation due to excessive end play.
- If anything is found, replace water pump.

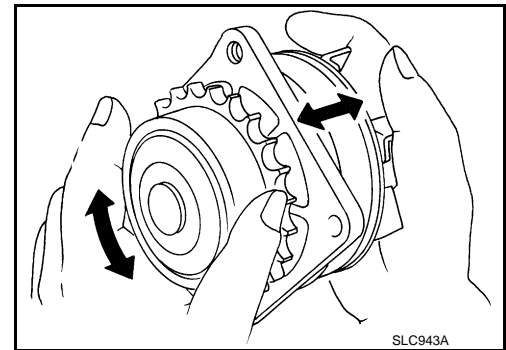

INSPECTION AFTER INSTALLATION

- Check that the reservoir tank cap is tightened.
- Check for leakage of engine coolant using the radiator cap tester adapter and the radiator cap tester (commercial service tool). Refer to [CO-8, "Inspection"](#).
- Start and warm up the engine. Visually check that there is no leakage of engine coolant.

WATER INLET AND THERMOSTAT ASSEMBLY


< REMOVAL AND INSTALLATION >

[VQ37VHR]


WATER INLET AND THERMOSTAT ASSEMBLY


Exploded View

INFOID:000000011283070

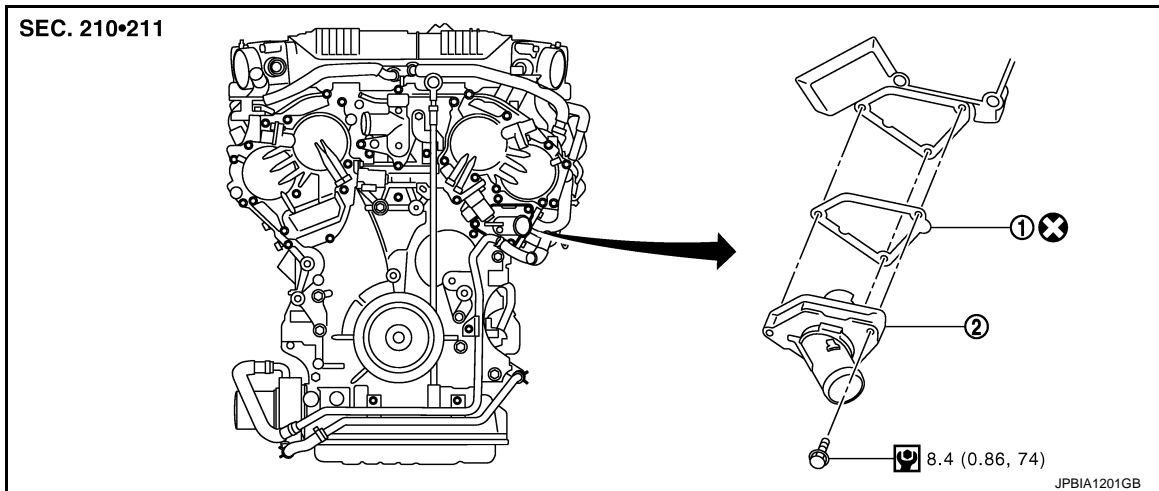

- ① Gasket ② Water inlet and thermostat assembly

 : N-m (kg-m, in-lb)

 : Always replace after every disassembly.

Removal and Installation


INFOID:000000011283071

REMOVAL

1. Remove engine cover. Refer to [EM-27, "Exploded View"](#).
2. Remove air duct (inlet) and air cleaner assembly (bank 2). Refer to [EM-30, "Exploded View"](#).
3. Remove front under cover, using a power tool. Refer to [EXT-35, "FRONT UNDER COVER : Removal and Installation"](#).
4. Drain engine coolant. Refer to [CO-8, "Draining"](#).
CAUTION:
 - Perform this step when the engine is cold.
 - Never spill engine coolant on drive belt.
5. Remove reservoir tank. Refer to [CO-15, "Exploded View"](#).
6. Disconnect radiator hose (lower). Refer to [CO-15, "Exploded View"](#).
7. Disconnect intake valve timing control valve harness connector (LH), and remove intake valve timing control solenoid.
8. Remove water inlet and thermostat assembly ①.

(A) : Do not loosen these screw.

CAUTION:
Never disassemble water inlet and thermostat assembly.
Replace them as a unit, if necessary.

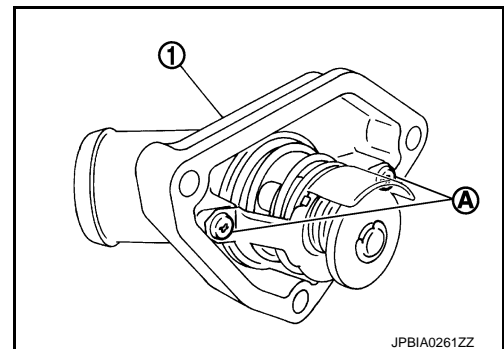

INSTALLATION

Note the following, and install in the reverse order of removal.

CAUTION:

WATER INLET AND THERMOSTAT ASSEMBLY

< REMOVAL AND INSTALLATION >

[VQ37VHR]

Be careful not to spill engine coolant over engine room. Use rag to absorb engine coolant.

Inspection


INFOID:000000011283072

INSPECTION AFTER REMOVAL

1. Check valve seating condition at ordinary room temperatures. It should seat tightly.
2. Check valve operation.

Thermostat (Standard) : Refer to [CO-30. "Thermostat"](#).

- If the malfunctioning condition, when valve seating at ordinary room temperature, or measured values are out of the standard, replace water inlet and thermostat assembly.

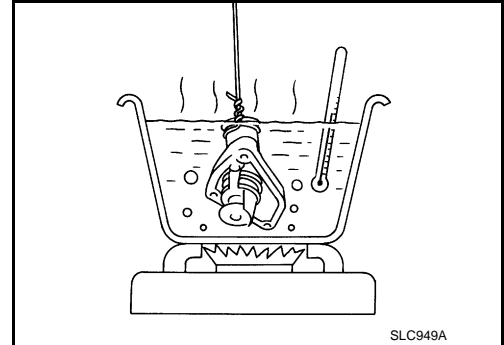

INSPECTION AFTER INSTALLATION

- Check that the reservoir tank cap is tightened.
- Check for leakage of engine coolant using the radiator cap tester adapter and the radiator cap tester (commercial service tool). Refer to [CO-8. "Inspection"](#).
- Start and warm up the engine. Visually check that there is no leakage of engine coolant.

WATER OUTLET AND WATER PIPING

< REMOVAL AND INSTALLATION >


[VQ37VHR]

WATER OUTLET AND WATER PIPING

Exploded View

INFOID:000000011283073

WITH PRESSURIZED RADIATOR RESERVOIR TANK

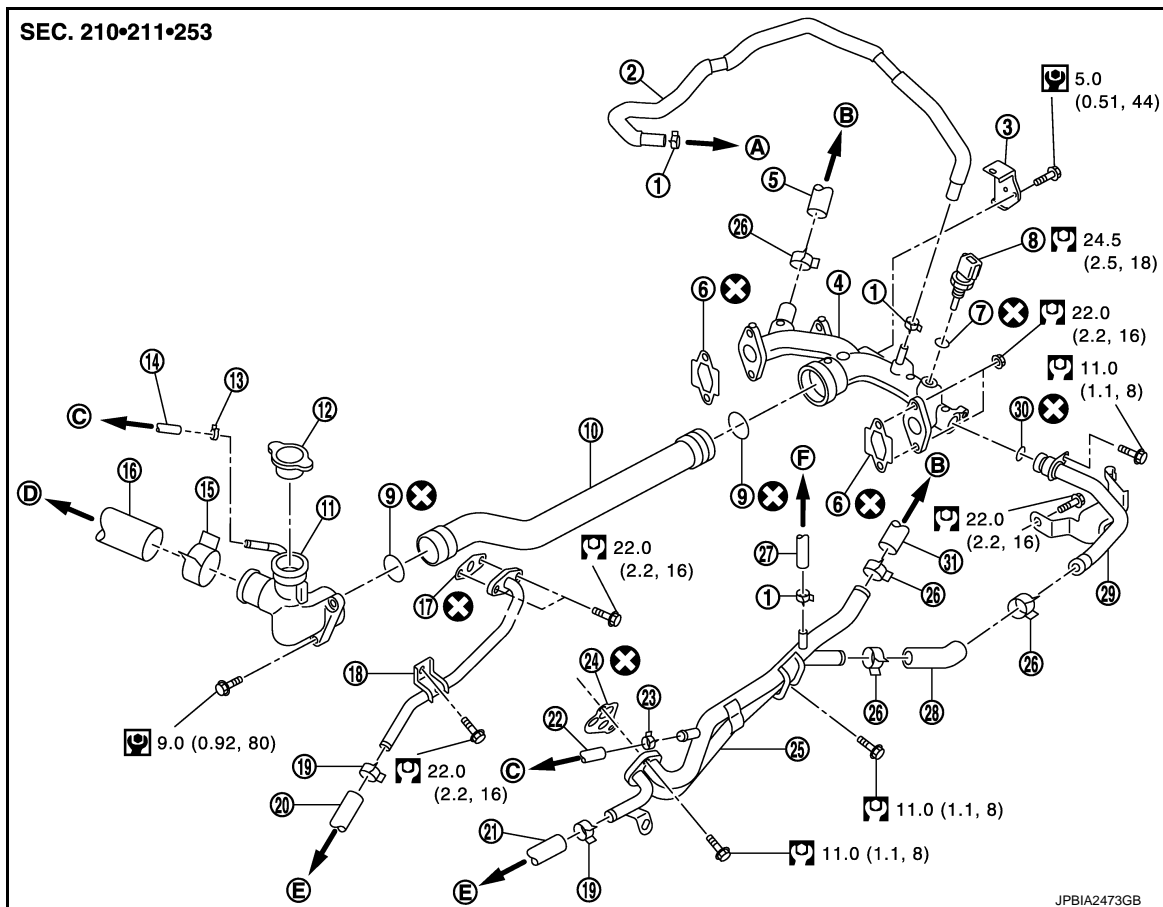

- | | | |
|--|-------------------------------------|--|
| ① Clamp | ② Water hose | ③ Harness bracket |
| ④ Water outlet (rear) | ⑤ Heater hose | ④ Gasket |
| ⑦ Washer | ⑧ Engine coolant temperature sensor | ⑨ O-ring |
| ⑩ Water outlet pipe | ⑪ Water outlet (front) | ⑫ Radiator cap |
| ⑬ Clamp | ⑭ Reservoir tank hose | ⑮ Clamp |
| ⑯ Radiator hose (upper) | ⑰ Gasket | ⑱ Water pipe |
| ⑲ Clamp | ⑳ Water hose | ㉑ Water hose |
| ㉒ Reservoir tank hose | ㉓ Clamp | ㉔ Gasket |
| ㉕ Heater pipe | ㉖ Clamp | ㉗ Water hose |
| ㉘ Water hose | ㉙ Water bypass pipe | ㉚ O-ring |
| ㉛ Heater hose | | |
| Ⓐ To electric throttle control actuator (bank 1) | Ⓑ To heater core | Ⓒ To reservoir tank |
| Ⓓ To radiator | Ⓔ To oil cooler | Ⓕ To electric throttle control actuator (bank 2) |

: N·m (kg·m, ft·lb)

: N·m (kg·m, in·lb)


: Always replace after every disassembly.

WATER OUTLET AND WATER PIPING

< REMOVAL AND INSTALLATION >

[VQ37VHR]

WITH NON-PRESSURIZED RADIATOR RESERVOIR TANK

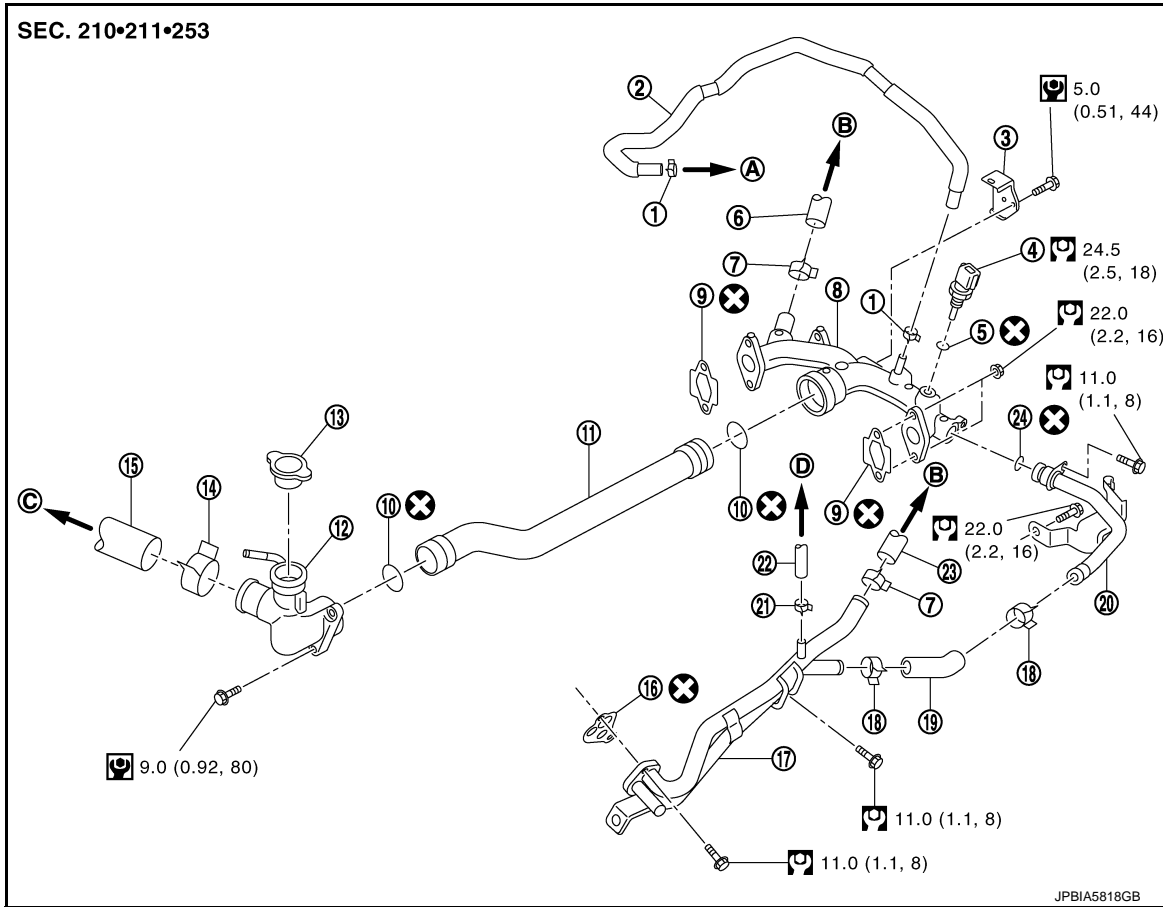

- | | | |
|--|-----------------------|-------------------------|
| ① Clamp | ② Water hose | ③ Harness bracket |
| ④ Engine coolant temperature sensor | ⑤ Washer | ⑥ Heater hose |
| ⑦ Clamp | ⑧ Water outlet (rear) | ⑨ Gasket |
| ⑩ O-ring | ⑪ Water outlet pipe | ⑫ Water outlet (front) |
| ⑬ Radiator cap | ⑭ Clamp | ⑮ Radiator hose (upper) |
| ⑯ Gasket | ⑰ Heater pipe | ⑱ Clamp |
| ⑲ Water hose | ⑳ Water bypass pipe | ㉑ Clamp |
| ㉒ Water hose | ㉓ Heater hose | ㉔ O-ring |
| Ⓐ To electric throttle control actuator (bank 1) | Ⓑ To heater core | Ⓒ To radiator |
| Ⓓ To electric throttle control actuator (bank 2) | | |

: N·m (kg·m, ft·lb)

: N·m (kg·m, in·lb)

: Always replace after every disassembly.

Removal and Installation

INFOID:000000011283074

REMOVAL

1. Remove engine cover. Refer to [EM-27, "Exploded View"](#).
2. Remove oil level gauge and guide. Refer to [EM-91, "2WD : Exploded View"](#) (2WD models) or [EM-95, "AWD : Exploded View"](#) (AWD models).
3. Remove air duct (inlet) and air cleaner assembly (bank 1 and bank 2). Refer to [EM-30, "Exploded View"](#).

WATER OUTLET AND WATER PIPING

[VQ37VHR]

< REMOVAL AND INSTALLATION >

4. Remove front under cover, using a power tool. Refer to [EXT-35. "FRONT UNDER COVER : Removal and Installation"](#). A
5. Drain engine coolant. Refer to [CO-8. "Draining"](#).
CAUTION:
 - Perform this step when the engine is cold.
 - Never spill engine coolant on drive belts.
6. Remove reservoir tank. Refer to [CO-15. "Exploded View"](#).
7. Remove radiator hose (upper) and heater hose. Refer to [CO-15. "Exploded View"](#). C
8. Separate engine harness removing their bracket from water outlet (rear).
9. Remove engine coolant temperature sensor if necessary.
CAUTION:
Be careful not to damage engine coolant temperature sensor.
10. Remove heater pipe, water bypass pipe and water outlet pipe.
11. Remove water outlet (rear) if necessary. E
NOTE:
Removing engine assembly is required. Refer to [EM-78. "2WD : Exploded View"](#) (2WD models) or [EM-83. "AWD : Exploded View"](#) (AWD models). F

INSTALLATION

Note the following, and install in the reverse order of removal.

CAUTION:

- Do not reuse O-rings.
- Never allow water outlet (rear) to nip O-rings when installing water outlet pipe and water bypass pipe.
- Securely insert each hose, and install clamp at a position where it does not interfere with the pipe bulge.
- When inserting water outlet pipe and water bypass pipe into water outlet, apply neutral detergent to O-ring.

Inspection

INFOID:000000011283075 I

INSPECTION AFTER INSTALLATION

- Check that the reservoir tank cap is tightened.
- Check for leakage of engine coolant using the radiator cap tester adapter and the radiator cap tester (commercial service tool). Refer to [CO-8. "Inspection"](#). J
- Start and warm up the engine. Visually check that there is no leakage of engine coolant. K

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[VQ37VHR]

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Periodical Maintenance Specification

INFOID:0000000011283076

ENGINE COOLANT CAPACITY (APPROXIMATE)

Unit: ℓ (US qt, Imp qt)

Engine coolant capacity [With reservoir tank ("MAX" level)]	With pressurized radiator reservoir tank	10.9 (11-4/8, 9-5/8)
	With non-pressurized radiator reservoir tank	10.4 (11, 9-1/8)
Reservoir tank engine coolant capacity (At "MAX" level)	With pressurized radiator reservoir tank	0.9 (1, 6/8)
	With non-pressurized radiator reservoir tank	0.8 (7/8, 6/8)

Radiator

INFOID:0000000011283077

Unit: kPa (kg/cm², psi)

Cap relief pressure	Standard	122.3 - 151.7 (1.2 - 1.5, 18 - 22)
	Limit	107 (1.1, 16)
Leakage testing pressure		200 (2.04, 29)

Thermostat

INFOID:0000000011283078

Thermostat	Standard
Valve opening temperature	82°C (180°F)
Maximum valve lift	8.6 mm/95°C (0.339 in/203°F)
Valve closing temperature	77°C (171°F)