

SECTION **LAN**
LAN SYSTEM

A
B
C

CONTENTS

D

E

F

G

H

I

J

K

L

LAN

N

O

P

CAN FUNDAMENTAL		Abbreviation List	32
PRECAUTION	17	PRECAUTION	33
PRECAUTIONS	17	PRECAUTIONS	33
Precautions for Trouble Diagnosis	17	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	33
Precautions for Harness Repair	17	Precautions for Removing Battery Terminal	33
SYSTEM DESCRIPTION	18	Precautions for Trouble Diagnosis	34
SYSTEM	18	Precautions for Harness Repair	34
CAN COMMUNICATION SYSTEM	18	SYSTEM DESCRIPTION	35
CAN COMMUNICATION SYSTEM : System Description	18	COMPONENT PARTS	35
CAN COMMUNICATION SYSTEM : System Diagram	18	Component Parts Location	35
CAN COMMUNICATION SYSTEM : CAN Communication Control Circuit	19	SYSTEM	36
DIAG ON CAN	19	CAN COMMUNICATION SYSTEM	36
DIAG ON CAN : Description	19	CAN COMMUNICATION SYSTEM : CAN System Specification Chart	36
DIAG ON CAN : System Diagram	20	CAN COMMUNICATION SYSTEM : CAN Communication Signal Chart	37
TROUBLE DIAGNOSIS	21	WIRING DIAGRAM	44
Condition of Error Detection	21	CAN SYSTEM (WITH ICC)	44
Symptom When Error Occurs in CAN Communication System	21	Wiring Diagram	44
CAN Diagnosis with CONSULT	24	CAN SYSTEM (WITHOUT ICC)	63
Self-Diagnosis	24	Wiring Diagram	63
CAN Diagnostic Support Monitor	24	BASIC INSPECTION	78
How to Use CAN Communication Signal Chart	26	DIAGNOSIS AND REPAIR WORKFLOW	78
BASIC INSPECTION	27	Interview Sheet	78
DIAGNOSIS AND REPAIR WORKFLOW	27	DTC/CIRCUIT DIAGNOSIS	79
Trouble Diagnosis Flow Chart	27	MALFUNCTION AREA CHART	79
CAN		System Diagram	79
HOW TO USE THIS MANUAL	32	CAN Communication Circuit	80
HOW TO USE THIS SECTION	32		
Caution	32		

ITS Communication Circuit	81	MAIN LINE BETWEEN 4WD AND ABS CIR- CUIT	102
MAIN LINE BETWEEN DLC AND A-BAG CIR- CUIT	83	Diagnosis Procedure	102
Diagnosis Procedure	83	MAIN LINE BETWEEN DLC AND AVM CIR- CUIT	104
MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT	84	Diagnosis Procedure	104
Diagnosis Procedure	84	MAIN LINE BETWEEN AVM AND ADP CIR- CUIT	105
MAIN LINE BETWEEN M&A AND TCU CIR- CUIT	85	Diagnosis Procedure	105
Diagnosis Procedure	85	MAIN LINE BETWEEN DLC AND ICC CIR- CUIT	106
MAIN LINE BETWEEN M&A AND TPMS CIR- CUIT	86	Diagnosis Procedure	106
Diagnosis Procedure	86	MAIN LINE BETWEEN RDR-L AND RDR-R CIRCUIT	108
MAIN LINE BETWEEN TCU AND TPMS CIR- CUIT	87	Diagnosis Procedure	108
Diagnosis Procedure	87	MAIN LINE BETWEEN RDR-R AND APA CIR- CUIT	109
MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT	88	Diagnosis Procedure	109
Diagnosis Procedure	88	MAIN LINE BETWEEN APA AND LANE CIR- CUIT	111
MAIN LINE BETWEEN HVAC AND AV CIR- CUIT	89	Diagnosis Procedure	111
Diagnosis Procedure	89	ECM BRANCH LINE CIRCUIT	112
MAIN LINE BETWEEN AV AND BCM CIR- CUIT	90	Diagnosis Procedure	112
Diagnosis Procedure	90	DLC BRANCH LINE CIRCUIT	114
MAIN LINE BETWEEN BCM AND TCM CIR- CUIT	91	Diagnosis Procedure	114
Diagnosis Procedure	91	DLC BRANCH LINE CIRCUIT (CAN COMMU- NICATION CIRCUIT 1)	115
MAIN LINE BETWEEN TCM AND STRG CIR- CUIT	92	Diagnosis Procedure	115
Diagnosis Procedure	92	DLC BRANCH LINE CIRCUIT (CAN COMMU- NICATION CIRCUIT 2)	116
MAIN LINE BETWEEN STRG AND ADP CIR- CUIT	93	Diagnosis Procedure	116
Diagnosis Procedure	93	A-BAG BRANCH LINE CIRCUIT	117
MAIN LINE BETWEEN STRG AND CGW CIR- CUIT	95	Diagnosis Procedure	117
Diagnosis Procedure	95	M&A BRANCH LINE CIRCUIT	118
MAIN LINE BETWEEN CGW AND 4WD CIR- CUIT	96	Diagnosis Procedure	118
Diagnosis Procedure	96	TCU BRANCH LINE CIRCUIT	119
MAIN LINE BETWEEN CGW AND ABS CIR- CUIT	98	Diagnosis Procedure	119
Diagnosis Procedure	98	TPMS BRANCH LINE CIRCUIT	120
MAIN LINE BETWEEN ADP AND ABS CIR- CUIT	100	Diagnosis Procedure	120
Diagnosis Procedure	100	HVAC BRANCH LINE CIRCUIT	121
		Diagnosis Procedure	121
		AV BRANCH LINE CIRCUIT	122
		Diagnosis Procedure	122
		BCM BRANCH LINE CIRCUIT	124
		Diagnosis Procedure	124

TCM BRANCH LINE CIRCUIT	125	Diagnosis Procedure	125	
STRG BRANCH LINE CIRCUIT	127	Diagnosis Procedure	127	A
CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)	128	Diagnosis Procedure	128	
CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)	129	Diagnosis Procedure	129	
4WD BRANCH LINE CIRCUIT	130	Diagnosis Procedure	130	
ABS BRANCH LINE CIRCUIT	131	Diagnosis Procedure	131	
AFS BRANCH LINE CIRCUIT	132	Diagnosis Procedure	132	
IPDM-E BRANCH LINE CIRCUIT	133	Diagnosis Procedure	133	
AVM BRANCH LINE CIRCUIT	134	Diagnosis Procedure	134	
SONAR BRANCH LINE CIRCUIT	135	Diagnosis Procedure	135	
ADP BRANCH LINE CIRCUIT	136	Diagnosis Procedure	136	
ICC BRANCH LINE CIRCUIT	137	Diagnosis Procedure	137	
PSB BRANCH LINE CIRCUIT	138	Diagnosis Procedure	138	
RDR-L BRANCH LINE CIRCUIT	139	Diagnosis Procedure	139	
BSW/BUZZER BRANCH LINE CIRCUIT	140	Diagnosis Procedure	140	
RDR-R BRANCH LINE CIRCUIT	141	Diagnosis Procedure	141	
APA BRANCH LINE CIRCUIT	142	Diagnosis Procedure	142	
LANE BRANCH LINE CIRCUIT	143	Diagnosis Procedure	143	
LASER BRANCH LINE CIRCUIT	144	Diagnosis Procedure	144	
CAN COMMUNICATION CIRCUIT	145	Diagnosis Procedure	145	
CAN COMMUNICATION CIRCUIT 1	147	Diagnosis Procedure	147	
CAN COMMUNICATION CIRCUIT 2	149	Diagnosis Procedure	149	
ITS COMMUNICATION CIRCUIT	151	Diagnosis Procedure	151	B
CAN GATEWAY				C
PRECAUTION	153			
PRECAUTIONS	153	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	153	D
		Precautions for Removing Battery Terminal	153	E
SYSTEM DESCRIPTION	155			
COMPONENT PARTS	155	Component Parts Location	155	F
SYSTEM	156	System Description	156	G
DIAGNOSIS SYSTEM (CAN GATEWAY)	157	CONSULT Function	157	H
ECU DIAGNOSIS INFORMATION	158			
CAN GATEWAY	158	Reference Value	158	I
		DTC Inspection Priority Chart	158	J
		DTC Index	158	
WIRING DIAGRAM	160			
CAN GATEWAY SYSTEM	160	Wiring Diagram	160	K
BASIC INSPECTION	162			L
ADDITIONAL SERVICE WHEN REPLACING CAN GATEWAY	162	Description	162	
		Work Procedure	162	LAN
CONFIGURATION (CAN GATEWAY)	163	Description	163	N
		Work Procedure	163	
DTC/CIRCUIT DIAGNOSIS	164			O
U1000 CAN COMM CIRCUIT	164	Description	164	P
		DTC Logic	164	
		Diagnosis Procedure	164	
U1010 CONTROL UNIT (CAN)	165	Description	165	
		DTC Logic	165	
		Diagnosis Procedure	165	

B2600 CONFIG ERROR	166	A-BAG BRANCH LINE CIRCUIT	184
Description	166	Diagnosis Procedure	184
DTC Logic	166	M&A BRANCH LINE CIRCUIT	185
Diagnosis Procedure	166	Diagnosis Procedure	185
POWER SUPPLY AND GROUND CIRCUIT ..	167	TPMS BRANCH LINE CIRCUIT	186
Diagnosis Procedure	167	Diagnosis Procedure	186
REMOVAL AND INSTALLATION	168	HVAC BRANCH LINE CIRCUIT	187
CAN GATEWAY	168	Diagnosis Procedure	187
Removal and Installation	168	AV BRANCH LINE CIRCUIT	188
CAN SYSTEM (TYPE 1)		Diagnosis Procedure	188
DTC/CIRCUIT DIAGNOSIS	169	BCM BRANCH LINE CIRCUIT	190
MAIN LINE BETWEEN DLC AND A-BAG CIR-		Diagnosis Procedure	190
CUIT	169	TCM BRANCH LINE CIRCUIT	191
Diagnosis Procedure	169	Diagnosis Procedure	191
MAIN LINE BETWEEN A-BAG AND M&A		STRG BRANCH LINE CIRCUIT	193
CIRCUIT	170	Diagnosis Procedure	193
Diagnosis Procedure	170	ABS BRANCH LINE CIRCUIT	194
MAIN LINE BETWEEN M&A AND TPMS CIR-		Diagnosis Procedure	194
CUIT	171	IPDM-E BRANCH LINE CIRCUIT	195
Diagnosis Procedure	171	Diagnosis Procedure	195
MAIN LINE BETWEEN TPMS AND HVAC		ADP BRANCH LINE CIRCUIT	196
CIRCUIT	172	Diagnosis Procedure	196
Diagnosis Procedure	172	CAN COMMUNICATION CIRCUIT	197
MAIN LINE BETWEEN HVAC AND AV CIR-		Diagnosis Procedure	197
CUIT	173	CAN SYSTEM (TYPE 2)	
Diagnosis Procedure	173	DTC/CIRCUIT DIAGNOSIS	199
MAIN LINE BETWEEN AV AND BCM CIR-		MAIN LINE BETWEEN DLC AND A-BAG CIR-	
CUIT	174	CUIT	199
Diagnosis Procedure	174	Diagnosis Procedure	199
MAIN LINE BETWEEN BCM AND TCM CIR-		MAIN LINE BETWEEN A-BAG AND M&A	
CUIT	175	CIRCUIT	200
Diagnosis Procedure	175	Diagnosis Procedure	200
MAIN LINE BETWEEN TCM AND STRG CIR-		MAIN LINE BETWEEN M&A AND TPMS CIR-	
CUIT	176	CUIT	201
Diagnosis Procedure	176	Diagnosis Procedure	201
MAIN LINE BETWEEN STRG AND ADP CIR-		MAIN LINE BETWEEN TPMS AND HVAC	
CUIT	177	CIRCUIT	202
Diagnosis Procedure	177	Diagnosis Procedure	202
MAIN LINE BETWEEN ADP AND ABS CIR-		MAIN LINE BETWEEN HVAC AND AV CIR-	
CUIT	179	CUIT	203
Diagnosis Procedure	179	Diagnosis Procedure	203
ECM BRANCH LINE CIRCUIT	181	MAIN LINE BETWEEN AV AND BCM CIR-	
Diagnosis Procedure	181	CUIT	204
DLC BRANCH LINE CIRCUIT	183	Diagnosis Procedure	204
Diagnosis Procedure	183		

MAIN LINE BETWEEN BCM AND TCM CIRCUIT	205	CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)	227	A
Diagnosis Procedure	205	Diagnosis Procedure	227	
MAIN LINE BETWEEN TCM AND STRG CIRCUIT	206	ABS BRANCH LINE CIRCUIT	228	B
Diagnosis Procedure	206	Diagnosis Procedure	228	
MAIN LINE BETWEEN STRG AND CGW CIRCUIT	207	IPDM-E BRANCH LINE CIRCUIT	229	C
Diagnosis Procedure	207	Diagnosis Procedure	229	
MAIN LINE BETWEEN CGW AND ABS CIRCUIT	208	AVM BRANCH LINE CIRCUIT	230	D
Diagnosis Procedure	208	Diagnosis Procedure	230	
MAIN LINE BETWEEN DLC AND AVM CIRCUIT	210	SONAR BRANCH LINE CIRCUIT	231	E
Diagnosis Procedure	210	Diagnosis Procedure	231	
MAIN LINE BETWEEN AVM AND ADP CIRCUIT	211	ADP BRANCH LINE CIRCUIT	232	F
Diagnosis Procedure	211	Diagnosis Procedure	232	
ECM BRANCH LINE CIRCUIT	212	CAN COMMUNICATION CIRCUIT 1	233	G
Diagnosis Procedure	212	Diagnosis Procedure	233	
DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)	214	CAN COMMUNICATION CIRCUIT 2	235	H
Diagnosis Procedure	214	Diagnosis Procedure	235	
DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)	215	CAN SYSTEM (TYPE 3)		
Diagnosis Procedure	215	DTC/CIRCUIT DIAGNOSIS	237	I
A-BAG BRANCH LINE CIRCUIT	216	MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT	237	J
Diagnosis Procedure	216	Diagnosis Procedure	237	
M&A BRANCH LINE CIRCUIT	217	MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT	238	K
Diagnosis Procedure	217	Diagnosis Procedure	238	
TPMS BRANCH LINE CIRCUIT	218	MAIN LINE BETWEEN M&A AND TCU CIRCUIT	239	L
Diagnosis Procedure	218	Diagnosis Procedure	239	
HVAC BRANCH LINE CIRCUIT	219	MAIN LINE BETWEEN TCU AND TPMS CIRCUIT	240	LAN
Diagnosis Procedure	219	Diagnosis Procedure	240	
AV BRANCH LINE CIRCUIT	220	MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT	241	N
Diagnosis Procedure	220	Diagnosis Procedure	241	
BCM BRANCH LINE CIRCUIT	222	MAIN LINE BETWEEN HVAC AND AV CIRCUIT	242	O
Diagnosis Procedure	222	Diagnosis Procedure	242	
TCM BRANCH LINE CIRCUIT	223	MAIN LINE BETWEEN AV AND BCM CIRCUIT	243	P
Diagnosis Procedure	223	Diagnosis Procedure	243	
STRG BRANCH LINE CIRCUIT	225	MAIN LINE BETWEEN BCM AND TCM CIRCUIT	244	
Diagnosis Procedure	225	Diagnosis Procedure	244	
CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)	226	MAIN LINE BETWEEN TCM AND STRG CIRCUIT	245	
Diagnosis Procedure	226			

Diagnosis Procedure	245	ABS BRANCH LINE CIRCUIT	268
MAIN LINE BETWEEN STRG AND CGW CIR- CUIT	246	Diagnosis Procedure	268
Diagnosis Procedure	246	IPDM-E BRANCH LINE CIRCUIT	269
MAIN LINE BETWEEN CGW AND ABS CIR- CUIT	247	Diagnosis Procedure	269
Diagnosis Procedure	247	AVM BRANCH LINE CIRCUIT	270
MAIN LINE BETWEEN DLC AND AVM CIR- CUIT	249	Diagnosis Procedure	270
Diagnosis Procedure	249	SONAR BRANCH LINE CIRCUIT	271
MAIN LINE BETWEEN AVM AND ADP CIR- CUIT	250	Diagnosis Procedure	271
Diagnosis Procedure	250	ADP BRANCH LINE CIRCUIT	272
ECM BRANCH LINE CIRCUIT	251	Diagnosis Procedure	272
Diagnosis Procedure	251	CAN COMMUNICATION CIRCUIT 1	273
DLC BRANCH LINE CIRCUIT (CAN COMMU- NICATION CIRCUIT 1)	253	Diagnosis Procedure	273
Diagnosis Procedure	253	CAN COMMUNICATION CIRCUIT 2	275
DLC BRANCH LINE CIRCUIT (CAN COMMU- NICATION CIRCUIT 2)	254	Diagnosis Procedure	275
Diagnosis Procedure	254	CAN SYSTEM (TYPE 4)	
A-BAG BRANCH LINE CIRCUIT	255	DTC/CIRCUIT DIAGNOSIS	277
Diagnosis Procedure	255	MAIN LINE BETWEEN DLC AND A-BAG CIR- CUIT	277
M&A BRANCH LINE CIRCUIT	256	Diagnosis Procedure	277
Diagnosis Procedure	256	MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT	278
TCU BRANCH LINE CIRCUIT	257	Diagnosis Procedure	278
Diagnosis Procedure	257	MAIN LINE BETWEEN M&A AND TCU CIR- CUIT	279
TPMS BRANCH LINE CIRCUIT	258	Diagnosis Procedure	279
Diagnosis Procedure	258	MAIN LINE BETWEEN TCU AND TPMS CIR- CUIT	280
HVAC BRANCH LINE CIRCUIT	259	Diagnosis Procedure	280
Diagnosis Procedure	259	MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT	281
AV BRANCH LINE CIRCUIT	260	Diagnosis Procedure	281
Diagnosis Procedure	260	MAIN LINE BETWEEN HVAC AND AV CIR- CUIT	282
BCM BRANCH LINE CIRCUIT	262	Diagnosis Procedure	282
Diagnosis Procedure	262	MAIN LINE BETWEEN AV AND BCM CIR- CUIT	283
TCM BRANCH LINE CIRCUIT	263	Diagnosis Procedure	283
Diagnosis Procedure	263	MAIN LINE BETWEEN BCM AND TCM CIR- CUIT	284
STRG BRANCH LINE CIRCUIT	265	Diagnosis Procedure	284
Diagnosis Procedure	265	MAIN LINE BETWEEN TCM AND STRG CIR- CUIT	285
CGW BRANCH LINE CIRCUIT (CAN COM- MUNICATION CIRCUIT 1)	266	Diagnosis Procedure	285
Diagnosis Procedure	266	MAIN LINE BETWEEN STRG AND CGW CIR- CUIT	286
CGW BRANCH LINE CIRCUIT (CAN COM- MUNICATION CIRCUIT 2)	267		
Diagnosis Procedure	267		

Diagnosis Procedure	286	CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)	311	A
MAIN LINE BETWEEN CGW AND ABS CIRCUIT	287	Diagnosis Procedure	311	
Diagnosis Procedure	287	ABS BRANCH LINE CIRCUIT	312	B
MAIN LINE BETWEEN DLC AND ICC CIRCUIT	289	Diagnosis Procedure	312	
Diagnosis Procedure	289	AFS BRANCH LINE CIRCUIT	313	C
MAIN LINE BETWEEN RDR-L AND RDR-R CIRCUIT	291	Diagnosis Procedure	313	
Diagnosis Procedure	291	IPDM-E BRANCH LINE CIRCUIT	314	D
MAIN LINE BETWEEN RDR-R AND APA CIRCUIT	292	Diagnosis Procedure	314	
Diagnosis Procedure	292	AVM BRANCH LINE CIRCUIT	315	E
MAIN LINE BETWEEN APA AND LANE CIRCUIT	294	Diagnosis Procedure	315	
Diagnosis Procedure	294	SONAR BRANCH LINE CIRCUIT	316	F
ECM BRANCH LINE CIRCUIT	295	Diagnosis Procedure	316	
Diagnosis Procedure	295	ADP BRANCH LINE CIRCUIT	317	G
DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)	297	Diagnosis Procedure	317	
Diagnosis Procedure	297	ICC BRANCH LINE CIRCUIT	318	H
DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)	298	Diagnosis Procedure	318	
Diagnosis Procedure	298	PSB BRANCH LINE CIRCUIT	319	I
A-BAG BRANCH LINE CIRCUIT	299	Diagnosis Procedure	319	
Diagnosis Procedure	299	RDR-L BRANCH LINE CIRCUIT	320	J
M&A BRANCH LINE CIRCUIT	300	Diagnosis Procedure	320	
Diagnosis Procedure	300	BSW/BUZZER BRANCH LINE CIRCUIT	321	K
TCU BRANCH LINE CIRCUIT	301	Diagnosis Procedure	321	
Diagnosis Procedure	301	RDR-R BRANCH LINE CIRCUIT	322	L
TPMS BRANCH LINE CIRCUIT	302	Diagnosis Procedure	322	
Diagnosis Procedure	302	APA BRANCH LINE CIRCUIT	323	LAN
HVAC BRANCH LINE CIRCUIT	303	Diagnosis Procedure	323	
Diagnosis Procedure	303	LANE BRANCH LINE CIRCUIT	324	N
AV BRANCH LINE CIRCUIT	304	Diagnosis Procedure	324	
Diagnosis Procedure	304	LASER BRANCH LINE CIRCUIT	325	O
BCM BRANCH LINE CIRCUIT	306	Diagnosis Procedure	325	
Diagnosis Procedure	306	CAN COMMUNICATION CIRCUIT 1	326	P
TCM BRANCH LINE CIRCUIT	307	Diagnosis Procedure	326	
Diagnosis Procedure	307	CAN COMMUNICATION CIRCUIT 2	328	
STRG BRANCH LINE CIRCUIT	309	Diagnosis Procedure	328	
Diagnosis Procedure	309	ITS COMMUNICATION CIRCUIT	330	
CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)	310	Diagnosis Procedure	330	
Diagnosis Procedure	310	CAN SYSTEM (TYPE 5)		
Revision: September 2015		DTC/CIRCUIT DIAGNOSIS	332	
LAN-7		MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT	332	
2016 Q70		Diagnosis Procedure	332	

MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT	333	M&A BRANCH LINE CIRCUIT	351
Diagnosis Procedure	333	Diagnosis Procedure	351
MAIN LINE BETWEEN M&A AND TCU CIRCUIT	334	TCU BRANCH LINE CIRCUIT	352
Diagnosis Procedure	334	Diagnosis Procedure	352
MAIN LINE BETWEEN TCU AND TPMS CIRCUIT	335	TPMS BRANCH LINE CIRCUIT	353
Diagnosis Procedure	335	Diagnosis Procedure	353
MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT	336	HVAC BRANCH LINE CIRCUIT	354
Diagnosis Procedure	336	Diagnosis Procedure	354
MAIN LINE BETWEEN HVAC AND AV CIRCUIT	337	AV BRANCH LINE CIRCUIT	355
Diagnosis Procedure	337	Diagnosis Procedure	355
MAIN LINE BETWEEN AV AND BCM CIRCUIT	338	BCM BRANCH LINE CIRCUIT	357
Diagnosis Procedure	338	Diagnosis Procedure	357
MAIN LINE BETWEEN BCM AND TCM CIRCUIT	339	TCM BRANCH LINE CIRCUIT	358
Diagnosis Procedure	339	Diagnosis Procedure	358
MAIN LINE BETWEEN TCM AND STRG CIRCUIT	340	STRG BRANCH LINE CIRCUIT	360
Diagnosis Procedure	340	Diagnosis Procedure	360
MAIN LINE BETWEEN STRG AND CGW CIRCUIT	341	CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)	361
Diagnosis Procedure	341	Diagnosis Procedure	361
MAIN LINE BETWEEN CGW AND ABS CIRCUIT	342	CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)	362
Diagnosis Procedure	342	Diagnosis Procedure	362
MAIN LINE BETWEEN DLC AND AVM CIRCUIT	344	ABS BRANCH LINE CIRCUIT	363
Diagnosis Procedure	344	Diagnosis Procedure	363
MAIN LINE BETWEEN AVM AND ADP CIRCUIT	345	IPDM-E BRANCH LINE CIRCUIT	364
Diagnosis Procedure	345	Diagnosis Procedure	364
ECM BRANCH LINE CIRCUIT	346	AVM BRANCH LINE CIRCUIT	365
Diagnosis Procedure	346	Diagnosis Procedure	365
DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)	348	SONAR BRANCH LINE CIRCUIT	366
Diagnosis Procedure	348	Diagnosis Procedure	366
DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)	349	ADP BRANCH LINE CIRCUIT	367
Diagnosis Procedure	349	Diagnosis Procedure	367
A-BAG BRANCH LINE CIRCUIT	350	CAN COMMUNICATION CIRCUIT 1	368
Diagnosis Procedure	350	Diagnosis Procedure	368
		CAN COMMUNICATION CIRCUIT 2	370
		Diagnosis Procedure	370
		CAN SYSTEM (TYPE 6)	
		DTC/CIRCUIT DIAGNOSIS	372
		MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT	372
		Diagnosis Procedure	372
		MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT	373
		Diagnosis Procedure	373

MAIN LINE BETWEEN M&A AND TPMS CIRCUIT	374	M&A BRANCH LINE CIRCUIT	394	A
Diagnosis Procedure	374	Diagnosis Procedure	394	
MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT	375	TPMS BRANCH LINE CIRCUIT	395	B
Diagnosis Procedure	375	Diagnosis Procedure	395	
MAIN LINE BETWEEN HVAC AND AV CIRCUIT	376	HVAC BRANCH LINE CIRCUIT	396	C
Diagnosis Procedure	376	Diagnosis Procedure	396	
MAIN LINE BETWEEN AV AND BCM CIRCUIT	377	AV BRANCH LINE CIRCUIT	397	D
Diagnosis Procedure	377	Diagnosis Procedure	397	
MAIN LINE BETWEEN BCM AND TCM CIRCUIT	378	BCM BRANCH LINE CIRCUIT	399	E
Diagnosis Procedure	378	Diagnosis Procedure	399	
MAIN LINE BETWEEN TCM AND STRG CIRCUIT	379	TCM BRANCH LINE CIRCUIT	400	F
Diagnosis Procedure	379	Diagnosis Procedure	400	
MAIN LINE BETWEEN STRG AND CGW CIRCUIT	380	STRG BRANCH LINE CIRCUIT	402	G
Diagnosis Procedure	380	Diagnosis Procedure	402	
MAIN LINE BETWEEN CGW AND ABS CIRCUIT	381	CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)	403	H
Diagnosis Procedure	381	Diagnosis Procedure	403	
MAIN LINE BETWEEN DLC AND ICC CIRCUIT	383	CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)	404	I
Diagnosis Procedure	383	Diagnosis Procedure	404	
MAIN LINE BETWEEN RDR-L AND RDR-R CIRCUIT	385	ABS BRANCH LINE CIRCUIT	405	J
Diagnosis Procedure	385	Diagnosis Procedure	405	
MAIN LINE BETWEEN RDR-R AND APA CIRCUIT	386	AFS BRANCH LINE CIRCUIT	406	K
Diagnosis Procedure	386	Diagnosis Procedure	406	
MAIN LINE BETWEEN APA AND LANE CIRCUIT	388	IPDM-E BRANCH LINE CIRCUIT	407	L
Diagnosis Procedure	388	Diagnosis Procedure	407	
ECM BRANCH LINE CIRCUIT	389	AVM BRANCH LINE CIRCUIT	408	LAN
Diagnosis Procedure	389	Diagnosis Procedure	408	
DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)	391	SONAR BRANCH LINE CIRCUIT	409	N
Diagnosis Procedure	391	Diagnosis Procedure	409	
DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)	392	ADP BRANCH LINE CIRCUIT	410	O
Diagnosis Procedure	392	Diagnosis Procedure	410	
A-BAG BRANCH LINE CIRCUIT	393	ICC BRANCH LINE CIRCUIT	411	P
Diagnosis Procedure	393	Diagnosis Procedure	411	
		PSB BRANCH LINE CIRCUIT	412	
		Diagnosis Procedure	412	
		RDR-L BRANCH LINE CIRCUIT	413	
		Diagnosis Procedure	413	
		BSW/BUZZER BRANCH LINE CIRCUIT	414	
		Diagnosis Procedure	414	
		RDR-R BRANCH LINE CIRCUIT	415	
		Diagnosis Procedure	415	
		APA BRANCH LINE CIRCUIT	416	

Diagnosis Procedure	416	Diagnosis Procedure	435
LANE BRANCH LINE CIRCUIT	417	MAIN LINE BETWEEN DLC AND ICC CIR-	437
Diagnosis Procedure	417	CUIT	437
LASER BRANCH LINE CIRCUIT	418	Diagnosis Procedure	437
Diagnosis Procedure	418	MAIN LINE BETWEEN RDR-L AND RDR-R	439
CAN COMMUNICATION CIRCUIT 1	419	CIRCUIT	439
Diagnosis Procedure	419	Diagnosis Procedure	439
CAN COMMUNICATION CIRCUIT 2	421	MAIN LINE BETWEEN RDR-R AND APA CIR-	440
Diagnosis Procedure	421	CUIT	440
ITS COMMUNICATION CIRCUIT	423	Diagnosis Procedure	440
Diagnosis Procedure	423	MAIN LINE BETWEEN APA AND LANE CIR-	442
CAN SYSTEM (TYPE 7)		CUIT	442
DTC/CIRCUIT DIAGNOSIS	425	Diagnosis Procedure	442
MAIN LINE BETWEEN DLC AND A-BAG CIR-	425	ECM BRANCH LINE CIRCUIT	443
CUIT	425	Diagnosis Procedure	443
Diagnosis Procedure	425	DLC BRANCH LINE CIRCUIT (CAN COMMU-	445
MAIN LINE BETWEEN A-BAG AND M&A	426	UNICATION CIRCUIT 1)	445
CIRCUIT	426	Diagnosis Procedure	445
Diagnosis Procedure	426	DLC BRANCH LINE CIRCUIT (CAN COMMU-	446
MAIN LINE BETWEEN M&A AND TCU CIR-	427	UNICATION CIRCUIT 2)	446
CUIT	427	Diagnosis Procedure	446
Diagnosis Procedure	427	A-BAG BRANCH LINE CIRCUIT	447
MAIN LINE BETWEEN TCU AND TPMS CIR-	428	Diagnosis Procedure	447
CUIT	428	M&A BRANCH LINE CIRCUIT	448
Diagnosis Procedure	428	Diagnosis Procedure	448
MAIN LINE BETWEEN TPMS AND HVAC	429	TCU BRANCH LINE CIRCUIT	449
CIRCUIT	429	Diagnosis Procedure	449
Diagnosis Procedure	429	TPMS BRANCH LINE CIRCUIT	450
MAIN LINE BETWEEN HVAC AND AV CIR-	430	Diagnosis Procedure	450
CUIT	430	HVAC BRANCH LINE CIRCUIT	451
Diagnosis Procedure	430	Diagnosis Procedure	451
MAIN LINE BETWEEN AV AND BCM CIR-	431	AV BRANCH LINE CIRCUIT	452
CUIT	431	Diagnosis Procedure	452
Diagnosis Procedure	431	BCM BRANCH LINE CIRCUIT	454
MAIN LINE BETWEEN BCM AND TCM CIR-	432	Diagnosis Procedure	454
CUIT	432	TCM BRANCH LINE CIRCUIT	455
Diagnosis Procedure	432	Diagnosis Procedure	455
MAIN LINE BETWEEN TCM AND STRG CIR-	433	STRG BRANCH LINE CIRCUIT	457
CUIT	433	Diagnosis Procedure	457
Diagnosis Procedure	433	CGW BRANCH LINE CIRCUIT (CAN COM-	458
MAIN LINE BETWEEN STRG AND CGW CIR-	434	MUNICATION CIRCUIT 1)	458
CUIT	434	Diagnosis Procedure	458
Diagnosis Procedure	434	CGW BRANCH LINE CIRCUIT (CAN COM-	459
MAIN LINE BETWEEN CGW AND ABS CIR-	435	MUNICATION CIRCUIT 2)	459
CUIT	435	Diagnosis Procedure	459

ABS BRANCH LINE CIRCUIT	460	MAIN LINE BETWEEN M&A AND TPMS CIR-		
Diagnosis Procedure	460	CUIT	482	A
AFS BRANCH LINE CIRCUIT	461	Diagnosis Procedure	482	
Diagnosis Procedure	461	MAIN LINE BETWEEN TPMS AND HVAC		B
IPDM-E BRANCH LINE CIRCUIT	462	CIRCUIT	483	
Diagnosis Procedure	462	Diagnosis Procedure	483	
AVM BRANCH LINE CIRCUIT	463	MAIN LINE BETWEEN HVAC AND AV CIR-		C
Diagnosis Procedure	463	CUIT	484	
SONAR BRANCH LINE CIRCUIT	464	Diagnosis Procedure	484	
Diagnosis Procedure	464	MAIN LINE BETWEEN AV AND BCM CIR-		D
ADP BRANCH LINE CIRCUIT	465	CUIT	485	
Diagnosis Procedure	465	Diagnosis Procedure	485	E
ICC BRANCH LINE CIRCUIT	466	MAIN LINE BETWEEN BCM AND TCM CIR-		
Diagnosis Procedure	466	CUIT	486	F
PSB BRANCH LINE CIRCUIT	467	Diagnosis Procedure	486	
Diagnosis Procedure	467	MAIN LINE BETWEEN TCM AND STRG CIR-		G
RDR-L BRANCH LINE CIRCUIT	468	CUIT	487	
Diagnosis Procedure	468	Diagnosis Procedure	487	
BSW/BUZZER BRANCH LINE CIRCUIT	469	MAIN LINE BETWEEN STRG AND ADP CIR-		H
Diagnosis Procedure	469	CUIT	488	
RDR-R BRANCH LINE CIRCUIT	470	Diagnosis Procedure	488	
Diagnosis Procedure	470	MAIN LINE BETWEEN ADP AND ABS CIR-		I
APA BRANCH LINE CIRCUIT	471	CUIT	490	
Diagnosis Procedure	471	Diagnosis Procedure	490	
LANE BRANCH LINE CIRCUIT	472	ECM BRANCH LINE CIRCUIT	492	J
Diagnosis Procedure	472	Diagnosis Procedure	492	
LASER BRANCH LINE CIRCUIT	473	DLC BRANCH LINE CIRCUIT	494	K
Diagnosis Procedure	473	Diagnosis Procedure	494	
CAN COMMUNICATION CIRCUIT 1	474	A-BAG BRANCH LINE CIRCUIT	495	L
Diagnosis Procedure	474	Diagnosis Procedure	495	
CAN COMMUNICATION CIRCUIT 2	476	M&A BRANCH LINE CIRCUIT	496	
Diagnosis Procedure	476	Diagnosis Procedure	496	
ITS COMMUNICATION CIRCUIT	478	TPMS BRANCH LINE CIRCUIT	497	
Diagnosis Procedure	478	Diagnosis Procedure	497	
CAN SYSTEM (TYPE 8)				
DTC/CIRCUIT DIAGNOSIS	480	HVAC BRANCH LINE CIRCUIT	498	N
MAIN LINE BETWEEN DLC AND A-BAG CIR-		Diagnosis Procedure	498	
CUIT	480	AV BRANCH LINE CIRCUIT	499	O
Diagnosis Procedure	480	Diagnosis Procedure	499	
MAIN LINE BETWEEN A-BAG AND M&A		BCM BRANCH LINE CIRCUIT	501	P
CIRCUIT	481	Diagnosis Procedure	501	
Diagnosis Procedure	481	TCM BRANCH LINE CIRCUIT	502	
		Diagnosis Procedure	502	
		STRG BRANCH LINE CIRCUIT	504	
		Diagnosis Procedure	504	

4WD BRANCH LINE CIRCUIT	505	MAIN LINE BETWEEN 4WD AND ABS CIR-	CUIT	523
Diagnosis Procedure	505	Diagnosis Procedure	523	
ABS BRANCH LINE CIRCUIT	506	MAIN LINE BETWEEN DLC AND AVM CIR-	CUIT	525
Diagnosis Procedure	506	Diagnosis Procedure	525	
IPDM-E BRANCH LINE CIRCUIT	507	MAIN LINE BETWEEN AVM AND ADP CIR-	CUIT	526
Diagnosis Procedure	507	Diagnosis Procedure	526	
ADP BRANCH LINE CIRCUIT	508	ECM BRANCH LINE CIRCUIT	527	
Diagnosis Procedure	508	Diagnosis Procedure	527	
CAN COMMUNICATION CIRCUIT	509	DLC BRANCH LINE CIRCUIT (CAN COMMU-	NICATION CIRCUIT 1)	529
Diagnosis Procedure	509	Diagnosis Procedure	529	
CAN SYSTEM (TYPE 9)				
DTC/CIRCUIT DIAGNOSIS	511	DLC BRANCH LINE CIRCUIT (CAN COMMU-	NICATION CIRCUIT 2)	530
MAIN LINE BETWEEN DLC AND A-BAG CIR-	CUIT	Diagnosis Procedure	530	
Diagnosis Procedure	511	A-BAG BRANCH LINE CIRCUIT	531	
MAIN LINE BETWEEN A-BAG AND M&A	CIRCUIT	Diagnosis Procedure	531	
Diagnosis Procedure	512	M&A BRANCH LINE CIRCUIT	532	
MAIN LINE BETWEEN M&A AND TCU CIR-	CUIT	Diagnosis Procedure	532	
Diagnosis Procedure	513	TCU BRANCH LINE CIRCUIT	533	
MAIN LINE BETWEEN TCU AND TPMS CIR-	CUIT	Diagnosis Procedure	533	
Diagnosis Procedure	514	TPMS BRANCH LINE CIRCUIT	534	
MAIN LINE BETWEEN TPMS AND HVAC	CIRCUIT	Diagnosis Procedure	534	
Diagnosis Procedure	515	HVAC BRANCH LINE CIRCUIT	535	
MAIN LINE BETWEEN HVAC AND AV CIR-	CUIT	Diagnosis Procedure	535	
Diagnosis Procedure	516	AV BRANCH LINE CIRCUIT	536	
MAIN LINE BETWEEN AV AND BCM CIR-	CUIT	Diagnosis Procedure	536	
Diagnosis Procedure	517	BCM BRANCH LINE CIRCUIT	538	
MAIN LINE BETWEEN BCM AND TCM CIR-	CUIT	Diagnosis Procedure	538	
Diagnosis Procedure	518	TCM BRANCH LINE CIRCUIT	539	
MAIN LINE BETWEEN TCM AND STRG CIR-	CUIT	Diagnosis Procedure	539	
Diagnosis Procedure	519	STRG BRANCH LINE CIRCUIT	541	
MAIN LINE BETWEEN STRG AND CGW CIR-	CUIT	Diagnosis Procedure	541	
Diagnosis Procedure	520	CGW BRANCH LINE CIRCUIT (CAN COM-	MUNICATION CIRCUIT 1)	542
MAIN LINE BETWEEN CGW AND 4WD CIR-	CUIT	Diagnosis Procedure	542	
Diagnosis Procedure	521	CGW BRANCH LINE CIRCUIT (CAN COM-	MUNICATION CIRCUIT 2)	543
Diagnosis Procedure	521	Diagnosis Procedure	543	
4WD BRANCH LINE CIRCUIT	544	4WD BRANCH LINE CIRCUIT	544	
Diagnosis Procedure	544	Diagnosis Procedure	544	
ABS BRANCH LINE CIRCUIT	545	ABS BRANCH LINE CIRCUIT	545	
Diagnosis Procedure	545	Diagnosis Procedure	545	

IPDM-E BRANCH LINE CIRCUIT	546	MAIN LINE BETWEEN CGW AND 4WD CIR- CUIT	564	A
Diagnosis Procedure	546	Diagnosis Procedure	564	
AVM BRANCH LINE CIRCUIT	547	MAIN LINE BETWEEN 4WD AND ABS CIR- CUIT	566	B
Diagnosis Procedure	547	Diagnosis Procedure	566	
SONAR BRANCH LINE CIRCUIT	548	MAIN LINE BETWEEN DLC AND ICC CIR- CUIT	568	C
Diagnosis Procedure	548	Diagnosis Procedure	568	
ADP BRANCH LINE CIRCUIT	549	MAIN LINE BETWEEN RDR-L AND RDR-R CIRCUIT	570	D
Diagnosis Procedure	549	Diagnosis Procedure	570	
CAN COMMUNICATION CIRCUIT 1	550	MAIN LINE BETWEEN RDR-R AND APA CIR- CUIT	571	E
Diagnosis Procedure	550	Diagnosis Procedure	571	
CAN COMMUNICATION CIRCUIT 2	552	MAIN LINE BETWEEN APA AND LANE CIR- CUIT	573	G
Diagnosis Procedure	552	Diagnosis Procedure	573	
CAN SYSTEM (TYPE 10)		ECM BRANCH LINE CIRCUIT	574	H
DTC/CIRCUIT DIAGNOSIS	554	Diagnosis Procedure	574	
MAIN LINE BETWEEN DLC AND A-BAG CIR- CUIT	554	DLC BRANCH LINE CIRCUIT (CAN COMMU- NICATION CIRCUIT 1)	576	I
Diagnosis Procedure	554	Diagnosis Procedure	576	
MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT	555	DLC BRANCH LINE CIRCUIT (CAN COMMU- NICATION CIRCUIT 2)	577	J
Diagnosis Procedure	555	Diagnosis Procedure	577	
MAIN LINE BETWEEN M&A AND TCU CIR- CUIT	556	A-BAG BRANCH LINE CIRCUIT	578	K
Diagnosis Procedure	556	Diagnosis Procedure	578	
MAIN LINE BETWEEN TCU AND TPMS CIR- CUIT	557	Diagnosis Procedure	578	L
Diagnosis Procedure	557	M&A BRANCH LINE CIRCUIT	579	
MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT	558	Diagnosis Procedure	579	
Diagnosis Procedure	558	TCU BRANCH LINE CIRCUIT	580	LAN
MAIN LINE BETWEEN HVAC AND AV CIR- CUIT	559	Diagnosis Procedure	580	
Diagnosis Procedure	559	TPMS BRANCH LINE CIRCUIT	581	N
MAIN LINE BETWEEN AV AND BCM CIR- CUIT	560	Diagnosis Procedure	581	
Diagnosis Procedure	560	HVAC BRANCH LINE CIRCUIT	582	O
MAIN LINE BETWEEN BCM AND TCM CIR- CUIT	561	Diagnosis Procedure	582	
Diagnosis Procedure	561	AV BRANCH LINE CIRCUIT	583	P
MAIN LINE BETWEEN TCM AND STRG CIR- CUIT	562	Diagnosis Procedure	583	
Diagnosis Procedure	562	BCM BRANCH LINE CIRCUIT	585	
MAIN LINE BETWEEN STRG AND CGW CIR- CUIT	563	Diagnosis Procedure	585	
Diagnosis Procedure	563	TCM BRANCH LINE CIRCUIT	586	
		Diagnosis Procedure	586	
		STRG BRANCH LINE CIRCUIT	588	
		Diagnosis Procedure	588	

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)	589
Diagnosis Procedure	589
CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)	590
Diagnosis Procedure	590
4WD BRANCH LINE CIRCUIT	591
Diagnosis Procedure	591
ABS BRANCH LINE CIRCUIT	592
Diagnosis Procedure	592
AFS BRANCH LINE CIRCUIT	593
Diagnosis Procedure	593
IPDM-E BRANCH LINE CIRCUIT	594
Diagnosis Procedure	594
AVM BRANCH LINE CIRCUIT	595
Diagnosis Procedure	595
SONAR BRANCH LINE CIRCUIT	596
Diagnosis Procedure	596
ADP BRANCH LINE CIRCUIT	597
Diagnosis Procedure	597
ICC BRANCH LINE CIRCUIT	598
Diagnosis Procedure	598
PSB BRANCH LINE CIRCUIT	599
Diagnosis Procedure	599
RDR-L BRANCH LINE CIRCUIT	600
Diagnosis Procedure	600
BSW/BUZZER BRANCH LINE CIRCUIT	601
Diagnosis Procedure	601
RDR-R BRANCH LINE CIRCUIT	602
Diagnosis Procedure	602
APA BRANCH LINE CIRCUIT	603
Diagnosis Procedure	603
LANE BRANCH LINE CIRCUIT	604
Diagnosis Procedure	604
LASER BRANCH LINE CIRCUIT	605
Diagnosis Procedure	605
CAN COMMUNICATION CIRCUIT 1	606
Diagnosis Procedure	606
CAN COMMUNICATION CIRCUIT 2	608
Diagnosis Procedure	608
ITS COMMUNICATION CIRCUIT	610
Diagnosis Procedure	610

CAN SYSTEM (TYPE 11)

DTC/CIRCUIT DIAGNOSIS	612
MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT	612
Diagnosis Procedure	612
MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT	613
Diagnosis Procedure	613
MAIN LINE BETWEEN M&A AND TCU CIRCUIT	614
Diagnosis Procedure	614
MAIN LINE BETWEEN TCU AND TPMS CIRCUIT	615
Diagnosis Procedure	615
MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT	616
Diagnosis Procedure	616
MAIN LINE BETWEEN HVAC AND AV CIRCUIT	617
Diagnosis Procedure	617
MAIN LINE BETWEEN AV AND BCM CIRCUIT	618
Diagnosis Procedure	618
MAIN LINE BETWEEN BCM AND TCM CIRCUIT	619
Diagnosis Procedure	619
MAIN LINE BETWEEN TCM AND STRG CIRCUIT	620
Diagnosis Procedure	620
MAIN LINE BETWEEN STRG AND CGW CIRCUIT	621
Diagnosis Procedure	621
MAIN LINE BETWEEN CGW AND 4WD CIRCUIT	622
Diagnosis Procedure	622
MAIN LINE BETWEEN 4WD AND ABS CIRCUIT	624
Diagnosis Procedure	624
MAIN LINE BETWEEN DLC AND AVM CIRCUIT	626
Diagnosis Procedure	626
MAIN LINE BETWEEN AVM AND ADP CIRCUIT	627
Diagnosis Procedure	627
ECM BRANCH LINE CIRCUIT	628
Diagnosis Procedure	628

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)	630	CAN COMMUNICATION CIRCUIT 2	653	
Diagnosis Procedure	630	Diagnosis Procedure	653	A
DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)	631	CAN SYSTEM (TYPE 12)		
Diagnosis Procedure	631	DTC/CIRCUIT DIAGNOSIS	655	B
A-BAG BRANCH LINE CIRCUIT	632	MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT	655	C
Diagnosis Procedure	632	Diagnosis Procedure	655	
M&A BRANCH LINE CIRCUIT	633	MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT	656	D
Diagnosis Procedure	633	Diagnosis Procedure	656	
TCU BRANCH LINE CIRCUIT	634	MAIN LINE BETWEEN M&A AND TCU CIRCUIT	657	E
Diagnosis Procedure	634	Diagnosis Procedure	657	
TPMS BRANCH LINE CIRCUIT	635	MAIN LINE BETWEEN TCU AND TPMS CIRCUIT	658	F
Diagnosis Procedure	635	Diagnosis Procedure	658	
HVAC BRANCH LINE CIRCUIT	636	MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT	659	G
Diagnosis Procedure	636	Diagnosis Procedure	659	
AV BRANCH LINE CIRCUIT	637	MAIN LINE BETWEEN HVAC AND AV CIRCUIT	660	H
Diagnosis Procedure	637	Diagnosis Procedure	660	
BCM BRANCH LINE CIRCUIT	639	MAIN LINE BETWEEN AV AND BCM CIRCUIT	661	J
Diagnosis Procedure	639	Diagnosis Procedure	661	
TCM BRANCH LINE CIRCUIT	640	MAIN LINE BETWEEN BCM AND TCM CIRCUIT	662	K
Diagnosis Procedure	640	Diagnosis Procedure	662	
STRG BRANCH LINE CIRCUIT	642	MAIN LINE BETWEEN TCM AND STRG CIRCUIT	663	L
Diagnosis Procedure	642	Diagnosis Procedure	663	
CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)	643	MAIN LINE BETWEEN STRG AND CGW CIRCUIT	664	LAN
Diagnosis Procedure	643	Diagnosis Procedure	664	
CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)	644	MAIN LINE BETWEEN CGW AND 4WD CIRCUIT	665	N
Diagnosis Procedure	644	Diagnosis Procedure	665	
4WD BRANCH LINE CIRCUIT	645	MAIN LINE BETWEEN 4WD AND ABS CIRCUIT	667	O
Diagnosis Procedure	645	Diagnosis Procedure	667	
ABS BRANCH LINE CIRCUIT	646	MAIN LINE BETWEEN DLC AND ICC CIRCUIT	669	P
Diagnosis Procedure	646	Diagnosis Procedure	669	
IPDM-E BRANCH LINE CIRCUIT	647	MAIN LINE BETWEEN RDR-L AND RDR-R CIRCUIT	671	
Diagnosis Procedure	647	Diagnosis Procedure	671	
AVM BRANCH LINE CIRCUIT	648			
Diagnosis Procedure	648			
SONAR BRANCH LINE CIRCUIT	649			
Diagnosis Procedure	649			
ADP BRANCH LINE CIRCUIT	650			
Diagnosis Procedure	650			
CAN COMMUNICATION CIRCUIT 1	651			
Diagnosis Procedure	651			

MAIN LINE BETWEEN RDR-R AND APA CIRCUIT	672	4WD BRANCH LINE CIRCUIT	692
Diagnosis Procedure	672	Diagnosis Procedure	692
MAIN LINE BETWEEN APA AND LANE CIRCUIT	674	ABS BRANCH LINE CIRCUIT	693
Diagnosis Procedure	674	Diagnosis Procedure	693
ECM BRANCH LINE CIRCUIT	675	AFS BRANCH LINE CIRCUIT	694
Diagnosis Procedure	675	Diagnosis Procedure	694
DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)	677	IPDM-E BRANCH LINE CIRCUIT	695
Diagnosis Procedure	677	Diagnosis Procedure	695
DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)	678	AVM BRANCH LINE CIRCUIT	696
Diagnosis Procedure	678	Diagnosis Procedure	696
A-BAG BRANCH LINE CIRCUIT	679	SONAR BRANCH LINE CIRCUIT	697
Diagnosis Procedure	679	Diagnosis Procedure	697
M&A BRANCH LINE CIRCUIT	680	ADP BRANCH LINE CIRCUIT	698
Diagnosis Procedure	680	Diagnosis Procedure	698
TCU BRANCH LINE CIRCUIT	681	ICC BRANCH LINE CIRCUIT	699
Diagnosis Procedure	681	Diagnosis Procedure	699
TPMS BRANCH LINE CIRCUIT	682	PSB BRANCH LINE CIRCUIT	700
Diagnosis Procedure	682	Diagnosis Procedure	700
HVAC BRANCH LINE CIRCUIT	683	RDR-L BRANCH LINE CIRCUIT	701
Diagnosis Procedure	683	Diagnosis Procedure	701
AV BRANCH LINE CIRCUIT	684	BSW/BUZZER BRANCH LINE CIRCUIT	702
Diagnosis Procedure	684	Diagnosis Procedure	702
BCM BRANCH LINE CIRCUIT	686	RDR-R BRANCH LINE CIRCUIT	703
Diagnosis Procedure	686	Diagnosis Procedure	703
TCM BRANCH LINE CIRCUIT	687	APA BRANCH LINE CIRCUIT	704
Diagnosis Procedure	687	Diagnosis Procedure	704
STRG BRANCH LINE CIRCUIT	689	LANE BRANCH LINE CIRCUIT	705
Diagnosis Procedure	689	Diagnosis Procedure	705
CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)	690	LASER BRANCH LINE CIRCUIT	706
Diagnosis Procedure	690	Diagnosis Procedure	706
CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)	691	CAN COMMUNICATION CIRCUIT 1	707
Diagnosis Procedure	691	Diagnosis Procedure	707
		CAN COMMUNICATION CIRCUIT 2	709
		Diagnosis Procedure	709
		ITS COMMUNICATION CIRCUIT	711
		Diagnosis Procedure	711

PRECAUTION

PRECAUTIONS

Precautions for Trouble Diagnosis

INFOID:000000012355293

CAUTION:

- Never apply 7.0 V or more to the measurement terminal.
- Use a tester with open terminal voltage of 7.0 V or less.
- Turn the ignition switch OFF and disconnect the battery cable from the negative terminal when checking the harness.


Precautions for Harness Repair

INFOID:000000012355294

- Solder the repaired area and wrap tape around the soldered area.

NOTE:


A fray of twisted lines must be within 110 mm (4.33 in).

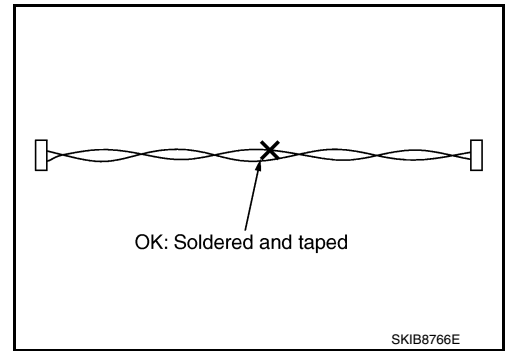

- Bypass connection is never allowed at the repaired area.

NOTE:

Bypass connection may cause CAN communication error. The spliced wire becomes separated and the characteristics of twisted line are lost.

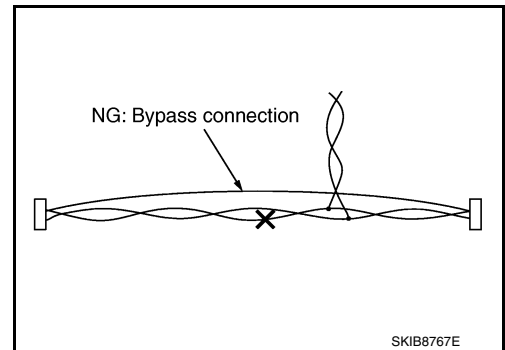

- Replace the applicable harness as an assembly if error is detected on the shield lines of CAN communication line.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

SYSTEM DESCRIPTION

SYSTEM

CAN COMMUNICATION SYSTEM


CAN COMMUNICATION SYSTEM : System Description

INFOID:000000012355295

- CAN communication is a multiplex communication system. This enables the system to transmit and receive large quantities of data at high speed by connecting control units with two communication lines (CAN-H and CAN-L).
- Control units on the CAN network transmit signals using the CAN communication control circuit. They receive only necessary signals from other control units to operate various functions.
- CAN communication lines adopt twisted-pair line style (two lines twisted) for noise immunity.

CAN COMMUNICATION SYSTEM : System Diagram

INFOID:000000012355296

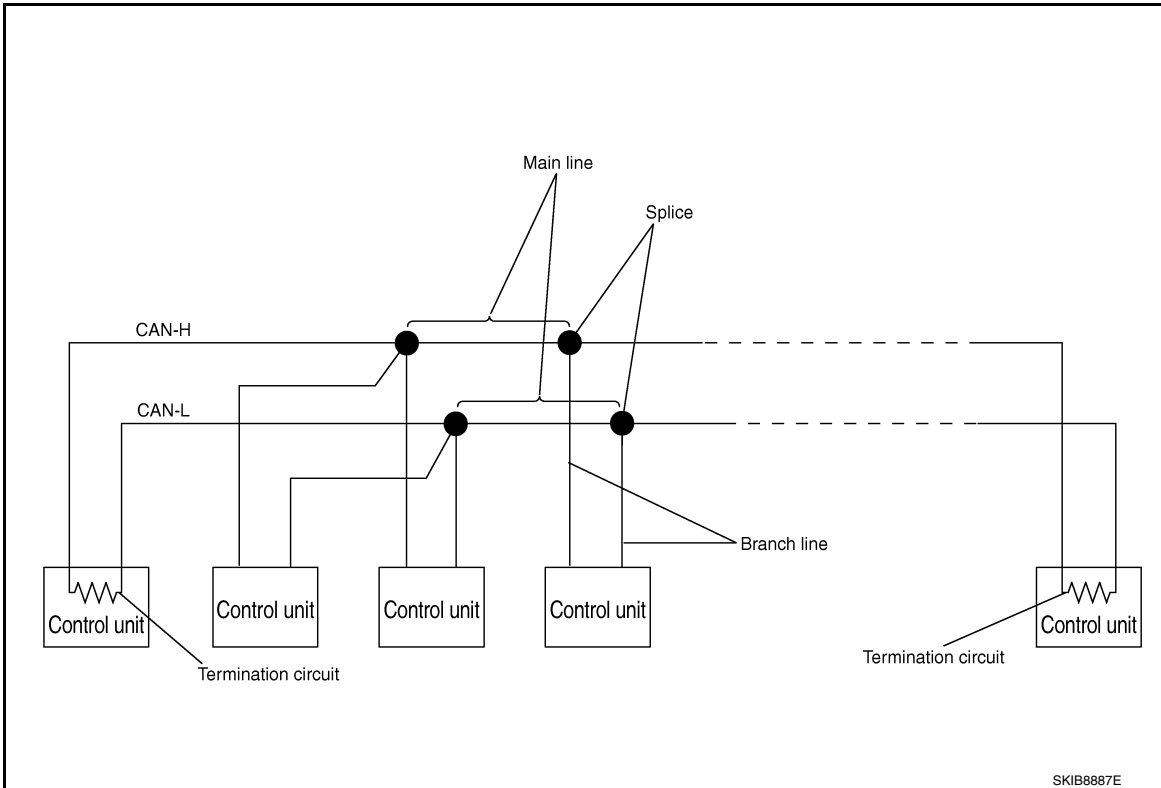


Each control unit passes an electric current to the termination circuits when transmitting CAN communication signal. The termination circuits produce an electrical potential difference between CAN-H and CAN-L. CAN communication system transmits and receives CAN communication signals by the potential difference.

Component	Description
Main line	CAN communication line between splices
Branch line	CAN communication line between splice and a control unit
Splice	A point connecting a branch line with a main line
Termination circuit	Refer to LAN-19, "CAN COMMUNICATION SYSTEM : CAN Communication Control Circuit" .

CAN COMMUNICATION SYSTEM : CAN Communication Control Circuit

INFOID:000000012355297

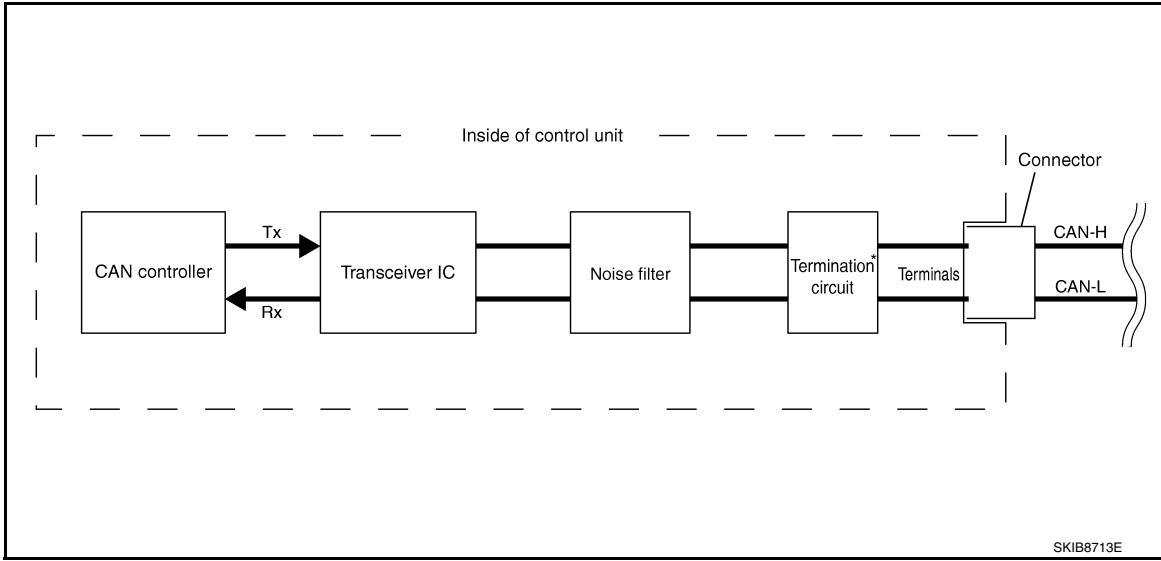

Component	System description
CAN controller	It controls CAN communication signal transmission and reception, error detection, etc.
Transceiver IC	It converts digital signal into CAN communication signal, and CAN communication signal into digital signal.
Noise filter	It eliminates noise of CAN communication signal.
Termination circuit* (Resistance of approx. 120 Ω)	It produces potential difference.

*: These are the only control units wired with both ends of CAN communication system.

DIAG ON CAN

DIAG ON CAN : Description

INFOID:000000012355298


“Diag on CAN” is a diagnosis using CAN communication instead of previous DDL1 and DDL2 communication lines, between control units and diagnosis unit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

DIAG ON CAN : System Diagram

INFOID:000000012355299

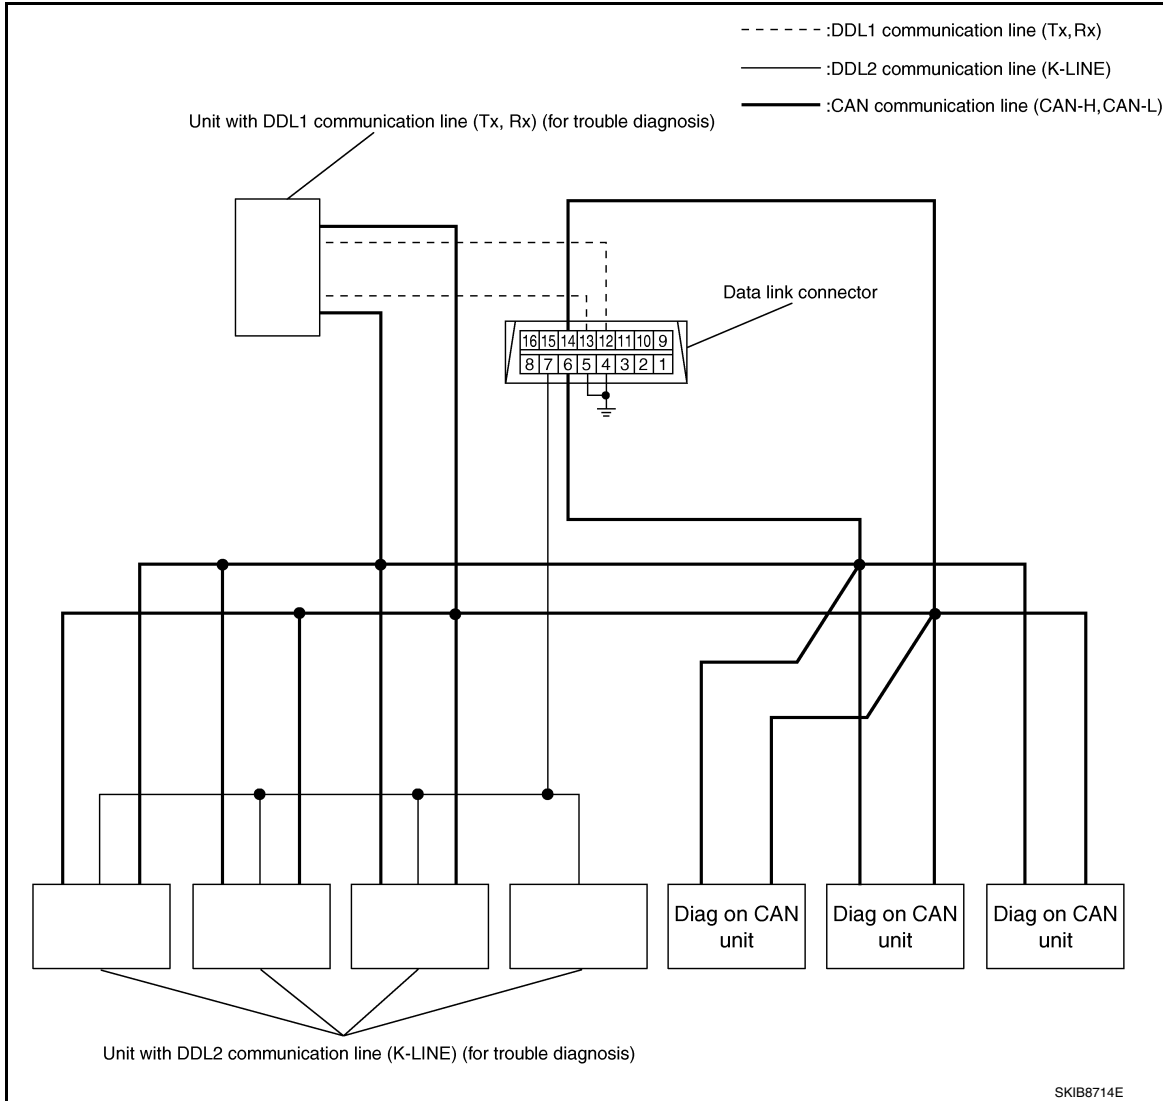

Name	Harness	Description
DDL1	Tx Rx	It is used for trouble diagnosis. (CAN-H and CAN-L are used for controlling)
DDL2	K-LINE	It is used for trouble diagnosis. (CAN-H and CAN-L are used for controlling)
Diag on CAN	CAN-H CAN-L	It is used for trouble diagnosis and control.

TROUBLE DIAGNOSIS

Condition of Error Detection

INFOID:000000012355300

DTC (e.g. U1000 and U1001) of CAN communication is indicated on SELF-DIAG RESULTS on CONSULT if a CAN communication signal is not transmitted or received between units for 2 seconds or more.

CAN COMMUNICATION SYSTEM ERROR

- CAN communication line open (CAN-H, CAN-L, or both)
- CAN communication line short (ground, between CAN communication lines, other harnesses)
- Error of CAN communication control circuit of the unit connected to CAN communication line

WHEN DTC OF CAN COMMUNICATION IS INDICATED EVEN THOUGH CAN COMMUNICATION SYSTEM IS NORMAL

- Removal/installation of parts: Error may be detected when removing and installing CAN communication unit and related parts while turning the ignition switch ON. (A DTC except for CAN communication may be detected.)
- Fuse blown out (removed): CAN communication of the unit may cease.
- Voltage drop: Error may be detected if voltage drops due to discharged battery when turning the ignition switch ON (Depending on the control unit which carries out CAN communication).
- Error may be detected if the power supply circuit of the control unit, which carries out CAN communication, malfunctions (Depending on the control unit which carries out CAN communication).
- Error may be detected if reprogramming is not completed normally.

CAUTION:

CAN communication system is normal if DTC of CAN communication is indicated on SELF-DIAG RESULTS of CONSULT under the above conditions. Erase the memory of the self-diagnosis of each unit.

Symptom When Error Occurs in CAN Communication System

INFOID:000000012355301


In CAN communication system, multiple units mutually transmit and receive signals. Each unit cannot transmit and receive signals if any error occurs on CAN communication line. Under this condition, multiple control units related to the root cause malfunction or go into fail-safe mode.

ERROR EXAMPLE

NOTE:

- Each vehicle differs in symptom of each unit under fail-safe mode and CAN communication line wiring.
- Refer to [LAN-32, "Abbreviation List"](#) for the unit abbreviation.

Example: TCM branch line open circuit

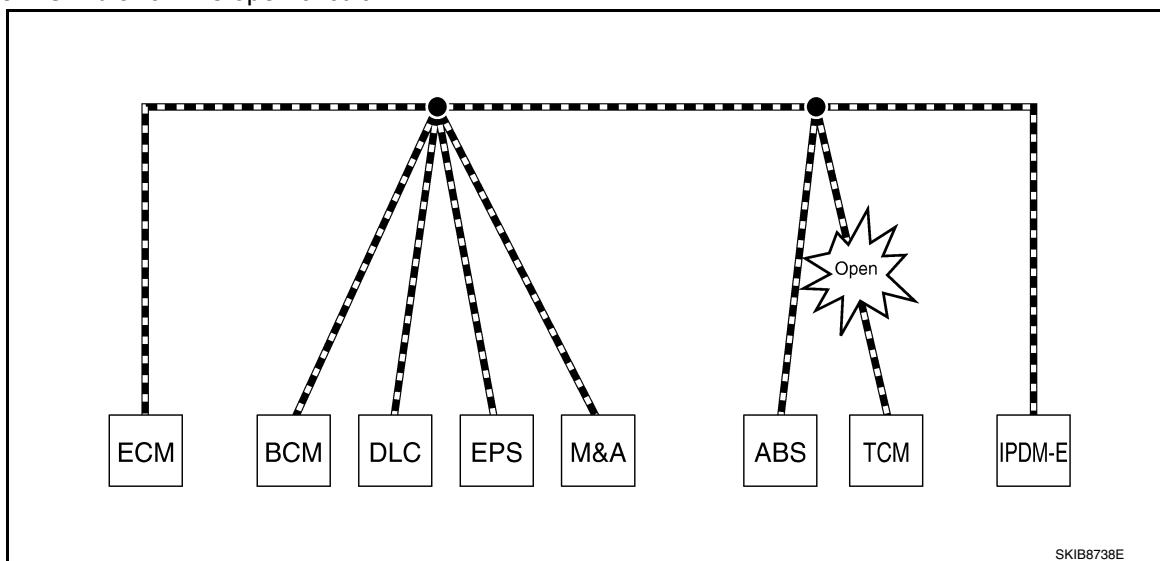

Unit name	Major symptom
ECM	Engine torque limiting is affected, and shift harshness increases.
BCM	Reverse warning chime does not sound.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN


TROUBLE DIAGNOSIS

< SYSTEM DESCRIPTION >

[CAN FUNDAMENTAL]

Unit name	Major symptom
EPS control unit	Normal operation.
Combination meter	<ul style="list-style-type: none"> Shift position indicator and OD OFF indicator turn OFF. Warning lamps turn ON.
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	Normal operation.

Example: Data link connector branch line open circuit

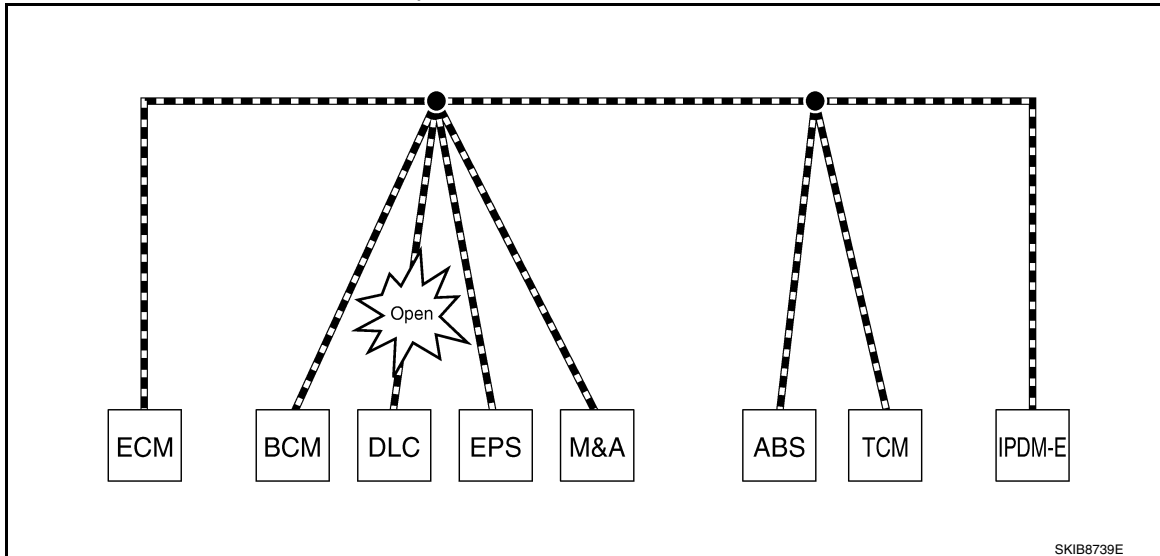

Unit name	Major symptom
ECM	Normal operation.
BCM	
EPS control unit	
Combination meter	
ABS actuator and electric unit (control unit)	
TCM	
IPDM E/R	

NOTE:

- When data link connector branch line is open, transmission and reception of CAN communication signals are not affected. Therefore, no symptoms occur. However, be sure to repair malfunctioning circuit.
- The model (all units on CAN communication system are Diag on CAN) cannot perform CAN diagnosis with CONSULT if the following error occurs. The error is judged by the symptom.


Error	Difference of symptom
Data link connector branch line open circuit	Normal operation.
CAN-H, CAN-L harness short-circuit	Most of the units which are connected to the CAN communication system enter fail-safe mode or are deactivated.

TROUBLE DIAGNOSIS

< SYSTEM DESCRIPTION >


[CAN FUNDAMENTAL]

Example: Main Line Between Data Link Connector and ABS Actuator and Electric Unit (Control Unit) Open Circuit

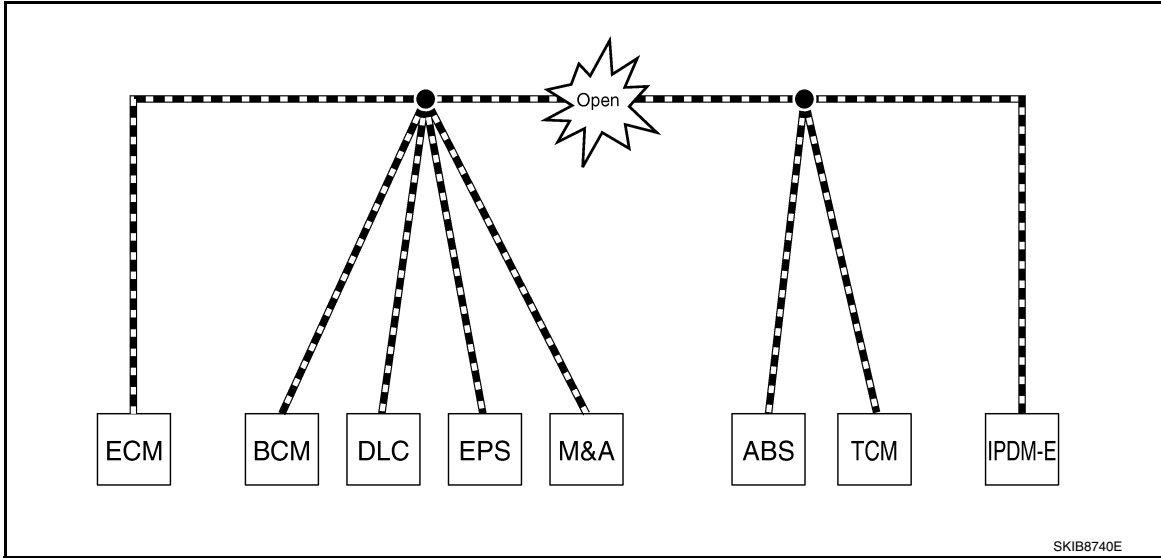

Unit name	Major symptom
ECM	Engine torque limiting is affected, and shift harshness increases.
BCM	<ul style="list-style-type: none"> • Reverse warning chime does not sound. • The front wiper moves under continuous operation mode even though the front wiper switch being in the intermittent position.
EPS control unit	The steering effort increases.
Combination meter	<ul style="list-style-type: none"> • The shift position indicator and OD OFF indicator turn OFF. • The speedometer is inoperative. • The odo/trip meter stops.
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	When the ignition switch is ON, <ul style="list-style-type: none"> • The headlamps (Lo) turn ON. • The cooling fan continues to rotate.

Example: CAN-H, CAN-L Harness Short Circuit

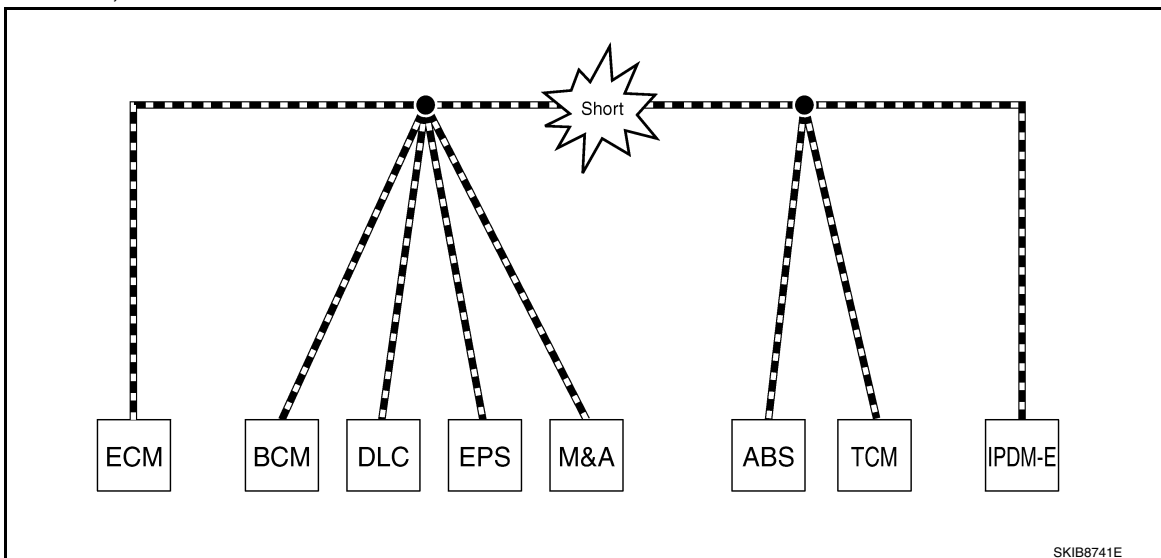

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

TROUBLE DIAGNOSIS

< SYSTEM DESCRIPTION >

[CAN FUNDAMENTAL]

Unit name	Major symptom
ECM	<ul style="list-style-type: none"> Engine torque limiting is affected, and shift harshness increases. Engine speed drops.
BCM	<ul style="list-style-type: none"> Reverse warning chime does not sound. The front wiper moves under continuous operation mode even though the front wiper switch being in the intermittent position. The room lamp does not turn ON. The engine does not start (if an error or malfunction occurs while turning the ignition switch OFF.) The steering lock does not release (if an error or malfunction occurs while turning the ignition switch OFF.)
EPS control unit	The steering effort increases.
Combination meter	<ul style="list-style-type: none"> The tachometer and the speedometer do not move. Warning lamps turn ON. Indicator lamps do not turn ON.
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	When the ignition switch is ON, <ul style="list-style-type: none"> The headlamps (Lo) turn ON. The cooling fan continues to rotate.

CAN Diagnosis with CONSULT

INFOID:0000000012355302

CAN diagnosis on CONSULT extracts the root cause by receiving the following information.

- Response to the system call
- Control unit diagnosis information
- Self-diagnosis
- CAN diagnostic support monitor

Self-Diagnosis

INFOID:0000000012355303

If communication signals cannot be transmitted or received among units communicating via CAN communication line, CAN communication-related DTC is displayed on the CONSULT "Self Diagnostic Result" screen.

NOTE:

The following table shows examples of CAN communication-related DTC. For other DTC, refer to the applicable sections.

DTC	Self-diagnosis item (CONSULT indication)	DTC detection condition		Inspection/Action
U1000	CAN COMM CIRCUIT	ECM	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) for 2 seconds or more.	Start the inspection. Refer to the applicable section of the indicated control unit.
		Except for ECM	When a control unit (except for ECM) is not transmitting or receiving CAN communication signal for 2 seconds or more.	
U1001	CAN COMM CIRCUIT	When ECM is not transmitting or receiving CAN communication signal other than OBD (emission-related diagnosis) for 2 seconds or more.		
U1002	SYSTEM COMM	When a control unit is not transmitting or receiving CAN communication signal for 2 seconds or less.		
U1010	CONTROL UNIT(CAN)	When an error is detected during the initial diagnosis for CAN controller of each control unit.		

CAN Diagnostic Support Monitor

INFOID:0000000012355304

MONITOR ITEM (CONSULT)

TROUBLE DIAGNOSIS

< SYSTEM DESCRIPTION >

[CAN FUNDAMENTAL]

Example: CAN DIAG SUPPORT MNTR indication

Without PAST			With PAST		
BCM			ENGINE		
MONITOR ITEM	PRESENT	PAST	MONITOR ITEM	PRESENT	PAST
INITIAL DIAG	OK	-	TRANSMIT DIAG	OK	OK
TRANSMIT DIAG	OK	-	VDC/TCS/ABS	OK	5
ECM	OK	-	METER/M&A	Not diagnosed	-
METER/M&A	OK	-	BCM/SEC	OK	OK
TCM	OK	-	ICC	Not diagnosed	-
IPDM E/R	OK	-	HVAC	Not diagnosed	-
I-KEY	OK	-	TCM	OK	OK
			EPS	OK	OK
			IPDM E/R	OK	5
			e4WD	Not diagnosed	-
			AWD/4WD	Not diagnosed	-

JSMIA0964GB

Without PAST

Item	PRESENT	Description
Initial diagnosis	OK	Normal at present
	NG	Control unit error (Except for some control units)
Transmission diagnosis	OK	Normal at present
	UNKWN	Unable to transmit signals for 2 seconds or more. Diagnosis not performed
Control unit name (Reception diagnosis)	OK	Normal at present
	UNKWN	Unable to receive signals for 2 seconds or more. Diagnosis not performed
	UNKWN	No control unit for receiving signals. (No applicable optional parts)

With PAST

Item	PRESENT	PAST	Description
Transmission diagnosis	OK	OK	Normal at present and in the past
		1 – 39	Normal at present, but unable to transmit signals for 2 seconds or more in the past. (The number indicates the number of ignition switch cycles from OFF to ON.)
	UNKWN	0	Unable to transmit signals for 2 seconds or more at present.
Control unit name (Reception diagnosis)	OK	OK	Normal at present and in the past
		1 – 39	Normal at present, but unable to receive signals for 2 seconds or more in the past. (The number indicates the number of ignition switch cycles from OFF to ON.)
	UNKWN	0	Unable to receive signals for 2 seconds or more at present.
	Not diagnosed	-	Diagnosis not performed. No control unit for receiving signals. (No applicable optional parts)

MONITOR ITEM (ON-BOARD DIAGNOSIS)

NOTE:

For some models, CAN communication diagnosis result is received from the vehicle monitor.

TROUBLE DIAGNOSIS

[CAN FUNDAMENTAL]

< SYSTEM DESCRIPTION >

Example: Vehicle Display

Item	Result indicated	Error counter	Description
CAN_COMM (Initial diagnosis)	OK	0	Normal at present
	NG	1 – 50	Control unit error (The number indicates how many times diagnosis has been run.)
CAN_CIRC_1 (Transmission diagnosis)	OK	0	Normal at present
	UNKWN	1 – 50	Unable to transmit for 2 seconds or more at present. (The number indicates how many times diagnosis has been run.)
CAN_CIRC_2 – 9 (Reception diagnosis of each unit)	OK	0	Normal at present
	UNKWN	1 – 50	Unable to transmit for 2 seconds or more at present. (The number indicates how many times diagnosis has been run.)
			Diagnosis not performed.
			No control unit for receiving signals. (No applicable optional parts)

How to Use CAN Communication Signal Chart

INFOID:000000012355305

The CAN communication signal chart lists the signals needed for trouble diagnosis. It is useful for detecting the root cause by finding a signal related to the symptom, and by checking transmission and reception unit.

Example: Tachometer does not move even though the engine rotates.

T: Transmit R: Receive

Signal name/Connecting unit	ECM	BCM	M&A	STRG	ABS	IPDM-E
A/C compressor feedback signal	T		R			
A/C compressor request signal	T					R
Accelerator pedal position signal	T				R	
Cooling fan motor operation signal	T					R
Engine coolant temperature signal	T		R			
Engine speed signal	T		R		R	
Fuel consumption monitor signal	T		R			
Malfunction indicator lamp signal	T		R			
A/C switch signal	R	T				
Ignition switch signal		T				R
Sleep/wake up signal		T	R			R

↓

It indicates that an error occurs between ECM and M&A (Shaded area).

CAN-H, CAN-L

SKIB8715E


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Trouble Diagnosis Flow Chart

INFOID:0000000012355306

DESCRIPTION

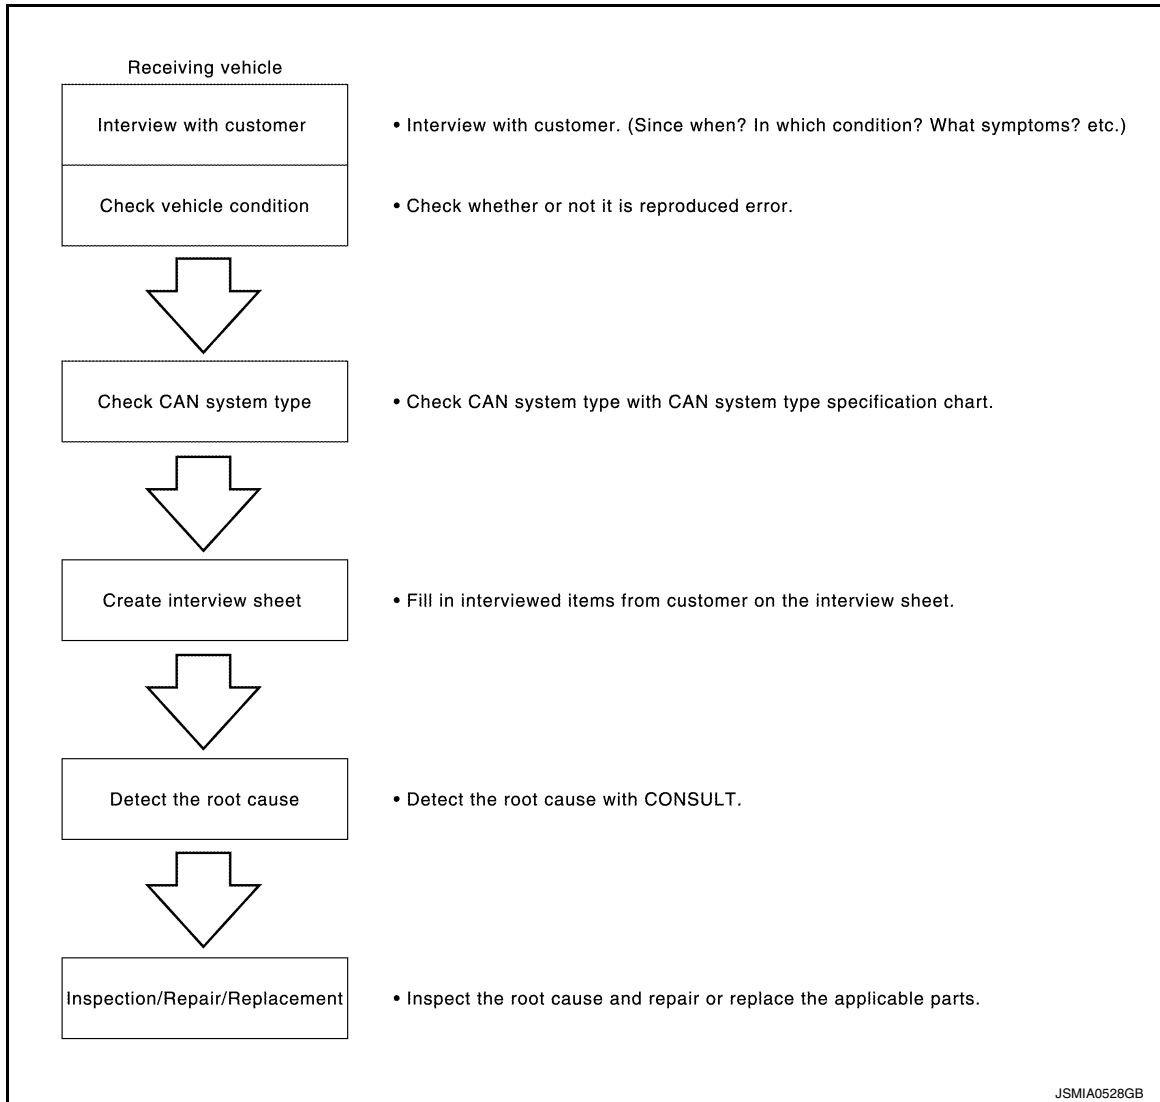

DETAIL OF TROUBLE DIAGNOSIS FLOW CHART

1. INTERVIEW WITH CUSTOMER

Interview with the customer is important to detect the root cause of CAN communication system errors and to understand vehicle condition and symptoms for proper trouble diagnosis.

Points in interview

- What: Parts name, system name
- When: Date, Frequency
- Where: Road condition, Place
- In what condition: Driving condition/environment
- Result: Symptom

Notes for checking error symptoms:

- Check normal units as well as error symptoms.
- Example: Circuit between ECM and the combination meter is judged normal if the customer indicates tachometer functions normally.

A
B
C
D
E
F
G
H
I
J
K
L

LAN


N
O
P

DIAGNOSIS AND REPAIR WORKFLOW

[CAN FUNDAMENTAL]

< BASIC INSPECTION >

- When a CAN communication system error is present, multiple control units may malfunction or go into fail-safe mode.
- Indication of the combination meter is important to detect the root cause because it is the most obvious to the customer, and it performs CAN communication with many units.

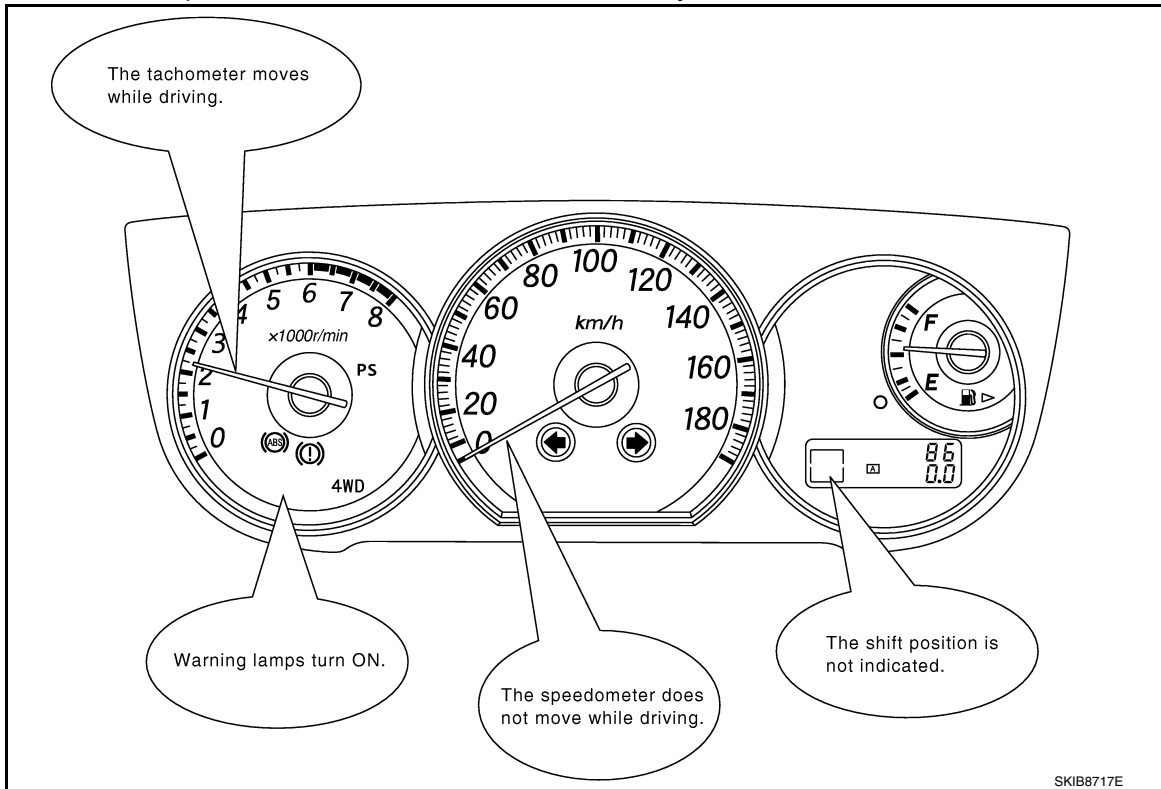

>> GO TO 2.

2. INSPECTION OF VEHICLE CONDITION

Check whether the symptom is reproduced or not.

NOTE:

Do not turn the ignition switch OFF or disconnect the 12V battery cable while reproducing the error. The error may temporarily correct itself, making it difficult to determine the root cause.

>> GO TO 3.

3. CHECK OF CAN SYSTEM TYPE (HOW TO USE CAN SYSTEM TYPE SPECIFICATION CHART)

Determine CAN system type based on vehicle equipment.

NOTE:

- This chart is used if CONSULT does not automatically recognize CAN system type.
- There are two styles for CAN system type specification charts. Depending on the number of available system types, either style A or style B may be used.
- CAN System Type Specification Chart (Style A)

NOTE:

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

CAN system type is easily checked with the vehicle equipment identification information shown in the chart.


Example:
Vehicle is equipped as follows: Wagon, AWD, VQ35DE, CVT, VDC, and Intelligent Key system. (○ shows an example of CAN system type.)

CAN System Specification Chart
Determine CAN system type from the following specification chart.


Body type	Wagon					
Axle	2WD			AWD		
Engine	QR25DE			VQ35DE		
Transmission	A/T			CVT		
Brake control	ABS			VDC		
Intelligent Key system		×		×		×
CAN system type	1	2	3	4	5	6
CAN communication control unit						
ECM	×	×	×	×	×	×
AWD control unit					×	×
Air bag diagnosis sensor unit	×	×	×	×	×	×
BCM	×	×	×	×	×	×
Intelligent Key unit		×		×		×
Steering angle sensor					×	×
EPS control unit	×	×	×	×	×	×
Combination meter	×	×	×	×	×	×
ABS actuator and electric unit (control unit)	×	×	×	×	×	×
TCM	×	×	×	×	×	×
IPDM E/R	×	×	×	×	×	×

× : Applicable

VEHICLE EQUIPMENT IDENTIFICATION INFORMATION
NOTE:
Check CAN system type from the vehicle shape and equipment.

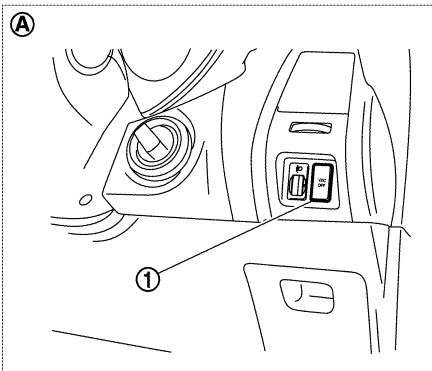

1. VDC OFF switch
A. With VDC

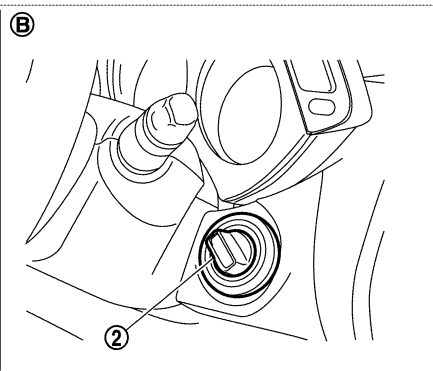

2. Ignition knob
B. With Intelligent Key system

For the above case, CAN system type is "6".

JSMIA0529GB

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

• CAN System Type Specification Chart (Style B)

NOTE:

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

CAN system type is easily checked with the vehicle equipment identification information shown in the chart.

Example:
Vehicle is equipped as follows: Sedan, 2WD, MR20DE, CVT, ABS, Active AFS, Intelligent Key system, Navigation system and Automatic drive positioner. (○ shows an example of CAN system type.)

CAN System Specification Chart
Refer to the specification as shown in the chart.

Body type	Sedan		
Axle	2WD		AWD
Engine	HR15DE	MR20DE	HR15DE
Transmission	A/T	CVT	A/T
Brake control	ABS		
Specification chart	XX.XX... SPECIFICATION CHART A.	XX.XX... SPECIFICATION CHART B.	XX.XX... SPECIFICATION CHART C.

×: Applicable

Check the vehicle equipment with the vehicle identification number plate.
Check the vehicle equipment.
Select the applicable vehicle equipment. Refer to the specification chart.

SPECIFICATION CHART B
Determine CAN system type from the following specification chart.

Body type	Sedan											
Axle	2WD											
Engine	MR20DE											
Transmission	CVT											
Brake control	ABS											
Active AFS		×			×	×		×	×	×		
Intelligent Key system			×		×		×	×	×	×		
Navigation system				×		×		×		×		
Automatic drive positioner								×	×	×		
CAN system type	9	10	11	12	13	14	15	16	17	18	19	20
CAN communication control unit												
ECM	×	×	×	×	×	×	×	×	×	×	×	×
AFS control unit		×			×	×			×	×		×
BCM	×	×	×	×	×	×	×	×	×	×	×	×
IPDM E/R	×	×	×	×	×	×	×	×	×	×	×	×

×: Applicable

Check the vehicle equipment.
The number indicates the CAN system type of the vehicle.

VEHICLE EQUIPMENT IDENTIFICATION INFORMATION
NOTE:
Check CAN system type from the vehicle shape and equipment.

In the above example,

- Checking Xenon bulb and bending lamp lead to judge whether or not Active AFS is equipped.
- Checking the ignition knob leads to judge whether or not Intelligent Key system is equipped.
- Checking display and multifunction switch lead to judge whether or not Navigation system is equipped.
- Checking seat memory switch leads to judge whether or not Automatic drive positioner is equipped.

1. Bending lamp 2. Xenon bulb 3. Ignition knob
4. Display 5. Multifunction switch 6. Seat memory switch
A. With active AFS B. With Intelligent Key system C. With navigation system
D. With automatic drive positioner

For the above case, CAN system type is "20".

JSMIA0530GB

>> GO TO 4.

4. CREATE INTERVIEW SHEET

Fill out the symptom described by the customer, vehicle condition, and CAN system type on the interview sheet.

NOTE:

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

Interview Sheet (Example)

CAN Communication System Diagnosis Interview Sheet	
Date received:	3, Feb. 2006
Type: DBA-KG11	VIN No.: KG11-005040
Model: BDRARGZG11EDA-E-J-	
First registration: 10, Jan. 2001	Mileage: 62,140
CAN system type: Type 19	
Symptom (Results from interview with customer)	
<ul style="list-style-type: none">• Headlamps suddenly turn ON while driving the vehicle.• The engine does not restart after stopping the vehicle and turning the ignition switch OFF.• The cooling fan continues rotating while turning the ignition switch ON.	
Condition at inspection	
Error Symptom: <u>Present</u> / Past	
<p>The engine does not start. While turning the ignition switch ON,</p> <ul style="list-style-type: none">• The headlamps (Lo) turn ON, and the cooling fan continues rotating.• The interior lamp does not turn ON.	

JSMIA0531GB

>> GO TO 5.

5. DETECT THE ROOT CAUSE

CAN diagnosis function of CONSULT detects a root cause.

>> GO TO 6.

6. REPAIR OR REPLACE MALFUNCTIONING PART

Repair or replace malfunctioning parts identified by CAN diagnosis function of CONSULT.

CAN communication circuit>> Refer to [LAN-80, "CAN Communication Circuit"](#).
ITS communication circuit>> Refer to [LAN-81, "ITS Communication Circuit"](#).

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

HOW TO USE THIS SECTION

< HOW TO USE THIS MANUAL >

[CAN]

HOW TO USE THIS MANUAL

HOW TO USE THIS SECTION

Caution

INFOID:0000000012355307

- This section describes information peculiar to a vehicle and inspection procedures.
- For trouble diagnosis procedure, refer to [LAN-27, "Trouble Diagnosis Flow Chart"](#).

Abbreviation List

INFOID:0000000012355308

Unit name abbreviations in CONSULT CAN diagnosis and in this section are as per the following list.

Abbreviation	Unit name
4WD	AWD control unit
A-BAG	Air bag diagnosis sensor unit
ABS	ABS actuator and electric unit (control unit)
ADP	Driver seat control unit
AFS	AFS control unit
APA	Accelerator pedal actuator
AV	AV control unit
AVM	Around view monitor control unit
BCM	BCM
BSW/BUZZER	Driver assistance buzzer control module
CGW	CAN gateway
DLC	Data link connector
ECM	ECM
HVAC	A/C auto amp.
ICC	ADAS control unit
IPDM-E	IPDM E/R
LANE	Lane camera unit
LASER	ICC sensor
M&A	Combination meter
PSB	Pre-crash seat belt control unit (driver side)
RDR-L	Side radar LH
RDR-R	Side radar RH
SONAR	Sonar control unit
STRG	Steering angle sensor
TCM	TCM
TCU	TCU
TPMS	Low tire pressure warning control unit

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000012355309

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.


Precautions for Removing Battery Terminal

INFOID:000000013042976

When disconnecting the battery terminal, pay attention to the following.

- Always use a 12V battery as power source.
- Never disconnect battery terminal while engine is running.
- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.
- For vehicles with the engine listed below, remove the battery terminal after a lapse of the specified time:

D4D engine	: 20 minutes	YS23DDT	: 4 minutes
HRA2DDT	: 12 minutes	YS23DDTT	: 4 minutes
K9K engine	: 4 minutes	ZD30DDTi	: 60 seconds
M9R engine	: 4 minutes	ZD30DDTT	: 60 seconds
R9M engine	: 4 minutes		
V9X engine	: 4 minutes		
YD25DDTi	: 2 minutes		

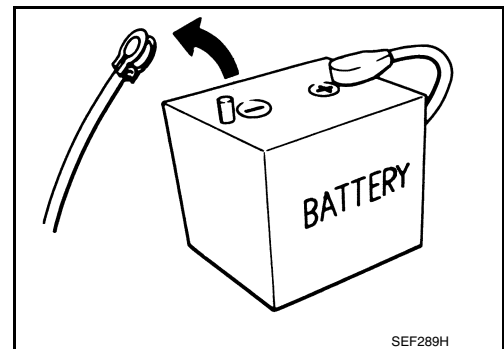

N
O
P

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- After high-load driving, if the vehicle is equipped with the V9X engine, turn the ignition switch OFF and wait for at least 15 minutes to remove the battery terminal.

NOTE:

PRECAUTIONS

[CAN]

< PRECAUTION >

- Turbocharger cooling pump may operate in a few minutes after the ignition switch is turned OFF.
- Example of high-load driving
 - Driving for 30 minutes or more at 140 km/h (86 MPH) or more.
 - Driving for 30 minutes or more on a steep slope.
- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.

NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

Precautions for Trouble Diagnosis

INFOID:000000012355311

CAUTION:

- **Never apply 7.0 V or more to the measurement terminal.**
- **Use a tester with open terminal voltage of 7.0 V or less.**
- **Turn the ignition switch OFF and disconnect the battery cable from the negative terminal when checking the harness.**


Precautions for Harness Repair

INFOID:000000012355312

- Solder the repaired area and wrap tape around the soldered area.

NOTE:


A fray of twisted lines must be within 110 mm (4.33 in).

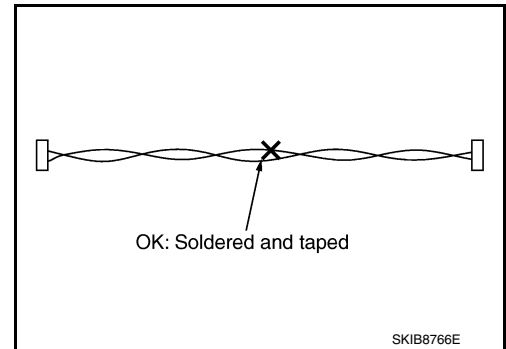

- Bypass connection is never allowed at the repaired area.

NOTE:

Bypass connection may cause CAN communication error. The spliced wire becomes separated and the characteristics of twisted line are lost.

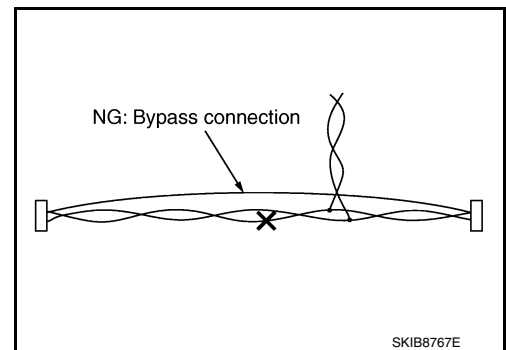


- Replace the applicable harness as an assembly if error is detected on the shield lines of CAN communication line.

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:0000000012355313

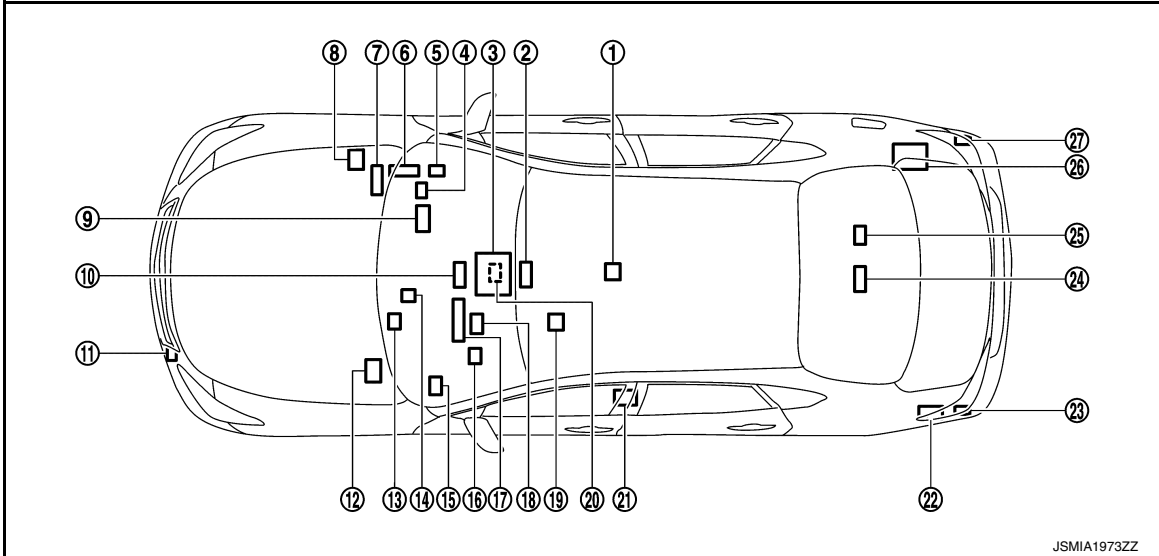

- | | | |
|---|---|--|
| 1. Air bag diagnosis sensor unit | 2. Lane camera unit | 3. A/T assembly |
| 4. CAN gateway | 5. Low tire pressure warning control unit | 6. A/C auto amp. |
| 7. ECM | 8. IPDM E/R | 9. TCU |
| 10. AV control unit | 11. ICC sensor | 12. ABS actuator and electric unit (control unit) |
| 13. BCM | 14. Accelerator pedal actuator | 15. AFS control unit |
| 16. Data link connector | 17. Combination meter | 18. Steering angle sensor |
| 19. Driver seat control unit | 20. Sonar control unit | 21. Pre-crash seat belt control unit (driver side) |
| 22. AWD control unit | 23. Side radar LH | 24. ADAS control unit |
| 25. Driver assistance buzzer control module | 26. Around view monitor control unit | 27. Side radar RH |

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

SYSTEM

< SYSTEM DESCRIPTION >

[CAN]

SYSTEM

CAN COMMUNICATION SYSTEM

CAN COMMUNICATION SYSTEM : CAN System Specification Chart

INFOID:0000000012355314

Determine CAN system type from the following specification chart.

NOTE:

Refer to [LAN-27. "Trouble Diagnosis Flow Chart"](#) for how to use CAN system specification chart.

Body type	Sedan											
Axle	2WD						AWD					
Engine	VQ37VHR			VK56VD			VQ37VHR			VK56VD		
Transmission	A/T											
Brake control	VDC											
Telematics system			x	x	x		x		x	x	x	x
Active AFS				x		x	x			x		x
Around view monitor system		x	x	x	x	x	x		x	x	x	x
CAN system type	1	2	3	4	5	6	7	8	9	10	11	12
CAN communication unit												
ECM	x	x	x	x	x	x	x	x	x	x	x	x
Air bag diagnosis sensor unit	x	x	x	x	x	x	x	x	x	x	x	x
Data link connector	x	x	x	x	x	x	x	x	x	x	x	x
Combination meter	x	x	x	x	x	x	x	x	x	x	x	x
TCU			x	x	x		x		x	x	x	x
AV control unit	x	x	x	x	x	x	x	x	x	x	x	x
BCM	x	x	x	x	x	x	x	x	x	x	x	x
CAN gateway		x	x	x	x	x	x		x	x	x	x
A/C auto amp.	x	x	x	x	x	x	x	x	x	x	x	x
Low tire pressure warning control unit	x	x	x	x	x	x	x	x	x	x	x	x
Steering angle sensor	x	x	x	x	x	x	x	x	x	x	x	x
TCM	x	x	x	x	x	x	x	x	x	x	x	x
AWD control unit								x	x	x	x	x
ABS actuator and electric unit (control unit)	x	x	x	x	x	x	x	x	x	x	x	x
AFS control unit				x		x	x			x		x
IPDM E/R	x	x	x	x	x	x	x	x	x	x	x	x
Around view monitor control unit		x	x		x				x		x	
Sonar control unit		x	x		x				x		x	
Driver seat control unit	x	x	x	x	x	x	x	x	x	x	x	x
ADAS control unit				x		x	x			x		x
Pre-crash seat belt control unit (driver side)				x		x	x			x		x
ITS communication unit												
ADAS control unit				x		x	x			x		x
Side radar LH				x		x	x			x		x
Around view monitor control unit				x		x	x			x		x
Driver assistance buzzer control module				x		x	x			x		x
Sonar control unit				x		x	x			x		x
Side radar RH				x		x	x			x		x

SYSTEM

< SYSTEM DESCRIPTION >

[CAN]


Body type	Sedan											
Axle	2WD						AWD					
Engine	VQ37VHR			VK56VD			VQ37VHR			VK56VD		
Transmission	A/T											
Brake control	VDC											
Telematics system			×	×	×		×		×	×	×	×
Active AFS				×		×	×			×		×
Around view monitor system		×	×	×	×	×	×		×	×	×	×
CAN system type	1	2	3	4	5	6	7	8	9	10	11	12
Accelerator pedal actuator				×		×	×			×		×
Lane camera unit				×		×	×			×		×
ICC sensor				×		×	×			×		×

×: Applicable

VEHICLE EQUIPMENT IDENTIFICATION INFORMATION

NOTE:

Check CAN system type from the vehicle shape and equipment.

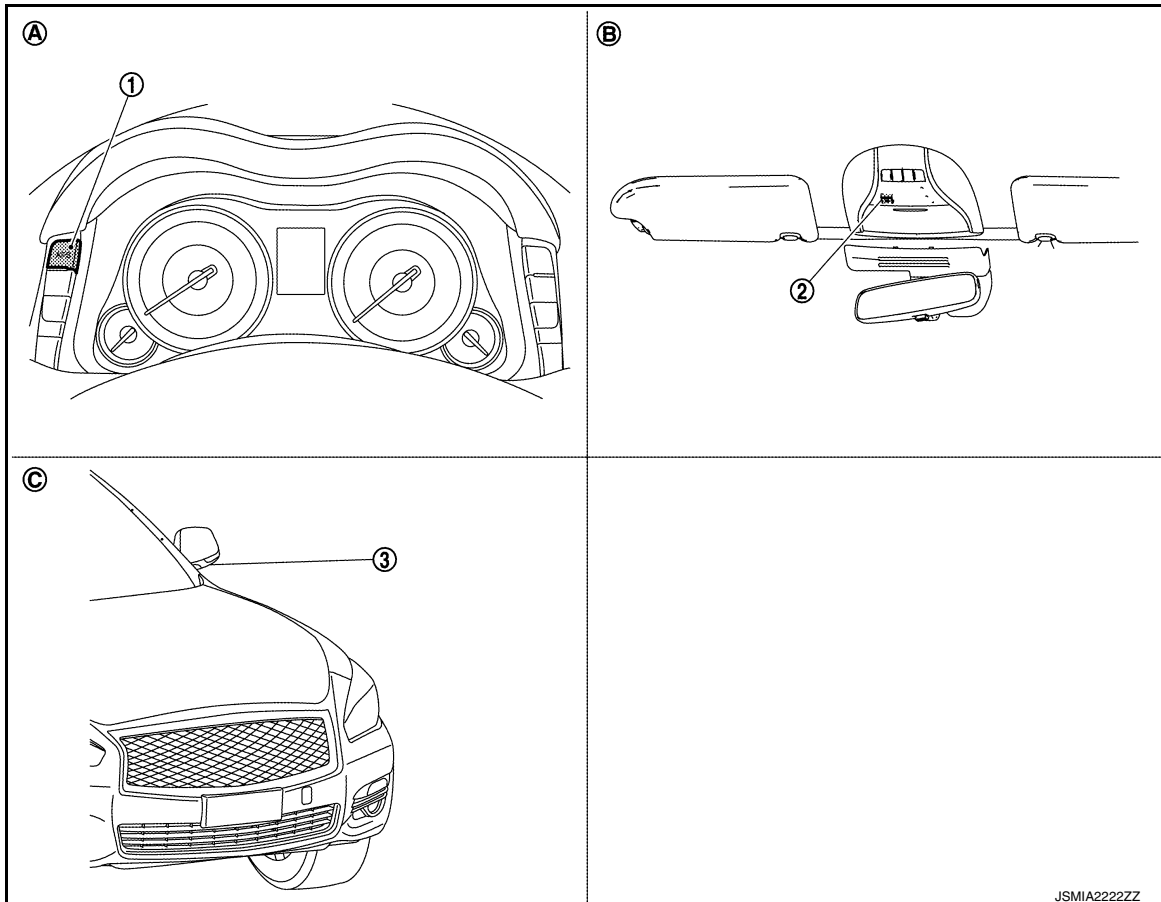

1. AFS switch

2. Telematics switch

3. Side camera LH

A. With active AFS

B. With telematics system

C. With around view monitor system

CAN COMMUNICATION SYSTEM : CAN Communication Signal Chart

INFOID:000000012355315

Refer to [LAN-26, "How to Use CAN Communication Signal Chart"](#) for how to use CAN communication signal chart.

NOTE:

SYSTEM

< SYSTEM DESCRIPTION >

[CAN]

Refer to [LAN-32. "Abbreviation List"](#) for the abbreviations of the connecting units.

T: Transmit R: Receive

Signal name	ECM	A-BAG	M&A	TCU	AV	BCM	CGW	HVAC	TPMS	STRG	TCM	4WD	ABS	AFS	IPDM-E	AVM*1	SONAR*1	ADP	ICC	PSB
A/C compressor request signal	T														R					
Accelerator pedal position signal	T										R	R	R						R	
ASCD OD cancel request signal	T										R									
ASCD operation signal	T										R									
ASCD status signal	T		R																	
Closed throttle position signal	T										R								R	
Cooling fan speed request signal	T														R					
ECO drive indicator control signal	T		R																	
ECO pedal reaction force control signal	T																		R	
ECO pedal reaction force setting signal	T				R															
	R				T															
Engine and A/T integrated control signal	T										R									
	R										T									
Engine coolant temperature signal	T		R					R												
Engine speed signal	T		R								R	R	R	R					R	
Engine status signal	T		R	R	R	R														
Fuel consumption monitor signal	T		R		R															
ICC brake switch signal	T																		R	
ICC operation signal	T										R									
	R												R						T	
ICC prohibition signal	T																		R	
ICC steering switch signal	T																		R	
Malfunctioning indicator lamp signal	T		R	R																
N idle instruction signal	R										T									
	T										R									
Oil pressure warning lamp signal	T		R																	
Power generation command value signal	T														R					
Snow mode switch signal	T												R						R	
Stop lamp switch signal	T																		R	
						T					R									R
												R	T							R
Wide open throttle position signal	T										R									

SYSTEM

< SYSTEM DESCRIPTION >

[CAN]

Signal name	ECM	A-BAG	M&A	TCU	AV	BCM	CGW	HVAC	TPMS	STRG	TCM	4WD	ABS	AFS	IPDM-E	AVM ^{*1}	SONAR ^{*1}	ADP	ICC	PSB	
Car crash information signal		T		R																	A
Sleep-ready signal				T		R															B
			T			R															C
Wake up signal				T		R															D
			T			R															
						R									T						
Brake fluid level switch signal			T										R								E
Distance to empty signal			T		R																F
Fuel level low warning signal			T		R																G
Fuel level sensor signal	R		T																		H
Manual mode shift down signal			T								R										I
Manual mode shift up signal			T								R										J
Manual mode signal			T								R										K
Non-manual mode signal			T								R										L
Odometer signal			T			R															
Paddle shifter shift down signal ^{*2}			T								R			R							
Paddle shifter shift up signal ^{*2}			T								R										
Parking brake switch signal			T			R						R	R							R	
Seat belt buckle switch signal (driver side)			T			R															
Vehicle speed signal	R		T		R	R		R			R			R	R				R		
			R			R			R			R	T			R	R	R	R		
Door lock/unlock request signal				T		R															LAN
A/C switch operation signal					T			R													N
Rear window defogger switch signal					T	R															
System selection signal					T															R	O
System setting signal					T	R															
					R	T															
Voice recognition signal					T			R													P
Buzzer request signal						R			T												
			R			T															
Low tire pressure warning lamp signal			R			T															
					R	R				T											

SYSTEM

< SYSTEM DESCRIPTION >

[CAN]

Signal name	ECM	A-BAG	M&A	TCU	AV	BCM	CGW	HVAC	TPMS	STRG	TCM	4WD	ABS	AFS	IPDM-E	AVM ^{*1}	SONAR ^{*1}	ADP	ICC	PSB
Blower fan motor switch signal	R					T														
Buzzer output signal			R			T														
Daytime running light request signal						T									R					
Dimmer signal			R			T													R	
Door switch signal			R			T									R	R		R		R
Door lock status signal				R		T														
Door unlock signal						T												R		
Front fog light request signal			R			T									R	R				
Front wiper request signal						T									R				R	
Handle position signal						T												R		
High beam request signal			R			T									R	R				
Horn reminder signal						T									R					
Ignition switch ON signal						T									R					R
						R									T					
Ignition switch signal						T												R		R
Intelligent Key system warning display signal			R			T														
Interlock/PNP switch signal						T									R					
						R									T					
Key ID signal						T		R										R		
Low beam request signal						T									R	R				
Meter display signal			R			T														
			R																T	
Meter ring illumination request signal			R			T														
Oil pressure switch signal			R	R		T														
						R									T					
Position light request signal			R			T									R	R				
Rear window defogger control signal						T									R					
	R				R										T					
Sleep wake up signal			R	R		T	R								R			R		R
Starter control relay signal						T									R					
Starter relay status signal			R			T									R					
						R									T					
Starting mode signal						T												R		
Theft warning horn request signal						T									R					
Trunk switch signal			R			T														
Turn indicator signal			R			T					R								R	
A/C display signal					R			T												

SYSTEM

< SYSTEM DESCRIPTION >

[CAN]

Signal name	ECM	A-BAG	M&A	TCU	AV	BCM	CGW	HVAC	TPMS	STRG	TCM	4WD	ABS	AFS	IPDM-E	AVM ^{*1}	SONAR ^{*1}	ADP	ICC	PSB		
A/C evaporator temperature signal	R							T														A
A/C ON signal	R							T														B
Ambient sensor signal			R					T														C
Blower fan ON signal	R							T														
ECO mode signal			R					T			R									R		D
	R										T											
SNOW mode signal			R					T			R									R		E
	R										T											
SPORT mode signal			R					T			R									R		F
	R										T											
STANDARD mode signal			R					T			R									R		F
	R										T											
Target A/C evaporator temperature signal	R							T														G
Tire pressure data signal					R				T													
Steering angle sensor malfunction signal										T				R						R	R	H
Steering angle sensor signal					R					T			R	R		R				R	R	I
Steering angle speed signal										T										R	R	J
Steering calibration signal										T				R							R	J
A/T CHECK indicator lamp signal			R								T			R								
A/T self-diagnosis signal	R										T											K
Current gear position signal	R										T									R		L
Drive mode select signal	R										T									R		L
Input speed signal											T									R		
Manual mode shift refusal signal			R								T											LAN
N range signal						R					T		R									
Next gear position signal	R										T											
Output shaft revolution signal	R										T									R		N
P range signal						R					T											
R range signal											T		R									O
Shift position signal			R								T		R	R		R		R	R	R	R	P
Shift schedule signal	R										T											
AWD signal												T	R									
AWD warning lamp signal			R									T										
A/T shift schedule change demand signal											R		T									
ABS malfunction signal													T							R		
ABS operation signal											R		T							R	R	

SYSTEM

< SYSTEM DESCRIPTION >

[CAN]

Signal name	ECM	A-BAG	M&A	TCU	AV	BCM	CGW	HVAC	TPMS	STRG	TCM	4WD	ABS	AFS	IPDM-E	AVM ^{*1}	SONAR ^{*1}	ADP	ICC	PSB	
ABS warning lamp signal			R	R									T						R		
Brake warning lamp signal			R										T								
			T	R																	
Decel G sensor signal											R		T								
Pressure sensor signal											R		T								
Rear LH wheel speed signal													T			R					
Rear RH wheel speed signal													T			R					
Side G sensor signal											R		T						R		
Target throttle position signal	R												T								
TCS gear keep request signal											R		T								
TCS malfunction signal													T						R		
TCS operation signal													T						R		
VDC malfunction signal											R		T						R		
VDC OFF indicator lamp signal			R										T								
VDC OFF switch signal													T						R		
VDC operation signal													T						R		
VDC warning lamp signal			R	R									T								
Yaw rate signal													T						R		
AFS OFF indicator lamp signal			R											T							
A/C compressor feedback signal	R							R							T						
Front wiper position signal						R									T						
High beam status signal	R														T						
Hood switch signal						R									T						
Low beam status signal	R													R	T						
Push-button ignition switch status signal						R									T						
Sonar setting change signal																T	R				
Sonar status signal																R	T				
Active Trace control signal													R							T	
Brake fluid pressure control signal													R							T	
BSI ON indicator signal			R																	T	
BSW/BSI warning lamp signal			R																	T	
FEB warning lamp signal			R																	T	
FEB operation signal																				T	R
ICC warning lamp signal			R																	T	

SYSTEM

< SYSTEM DESCRIPTION >

[CAN]

Signal name	ECM	A-BAG	M&A	TCU	AV	BCM	CGW	HVAC	TPMS	STRG	TCM	4WD	ABS	AFS	IPDM-E	AVM*1	SONAR*1	ADP	ICC	PSB
Lane departure warning lamp signal			R																T	
LDP ON indicator lamp signal			R																T	
Target yaw moment signal													R						T	

*1: Models without ICC system

*2: Models with paddle shifter

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CAN SYSTEM (WITH ICC)

[CAN]

< WIRING DIAGRAM >

WIRING DIAGRAM


CAN SYSTEM (WITH ICC)

Wiring Diagram

INFOID:000000012355316

CAN SYSTEM (WITH ICC)

- : VQ engine models
- : VK engine models
- : AWD models
- : With telematics

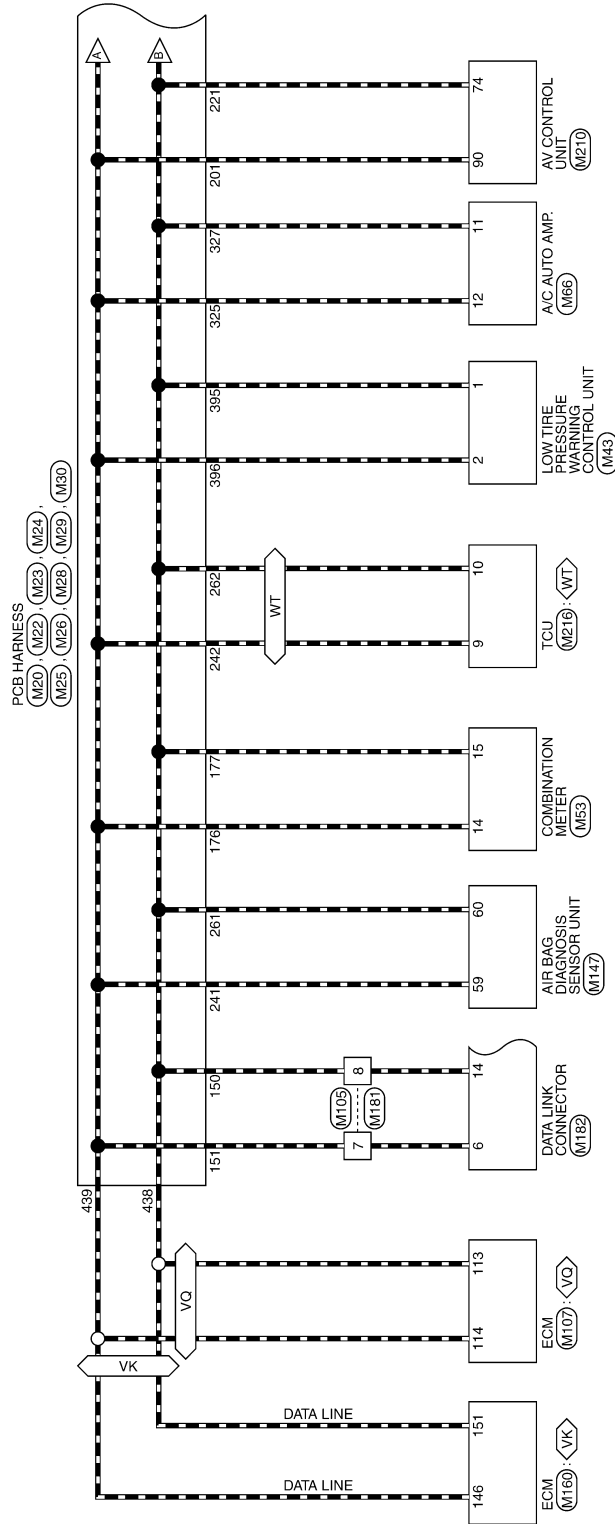

*: This connector is not shown in "Harness Layout".


2015/09/02

JRMW16258GB

CAN SYSTEM (WITH ICC)

< WIRING DIAGRAM >

[CAN]

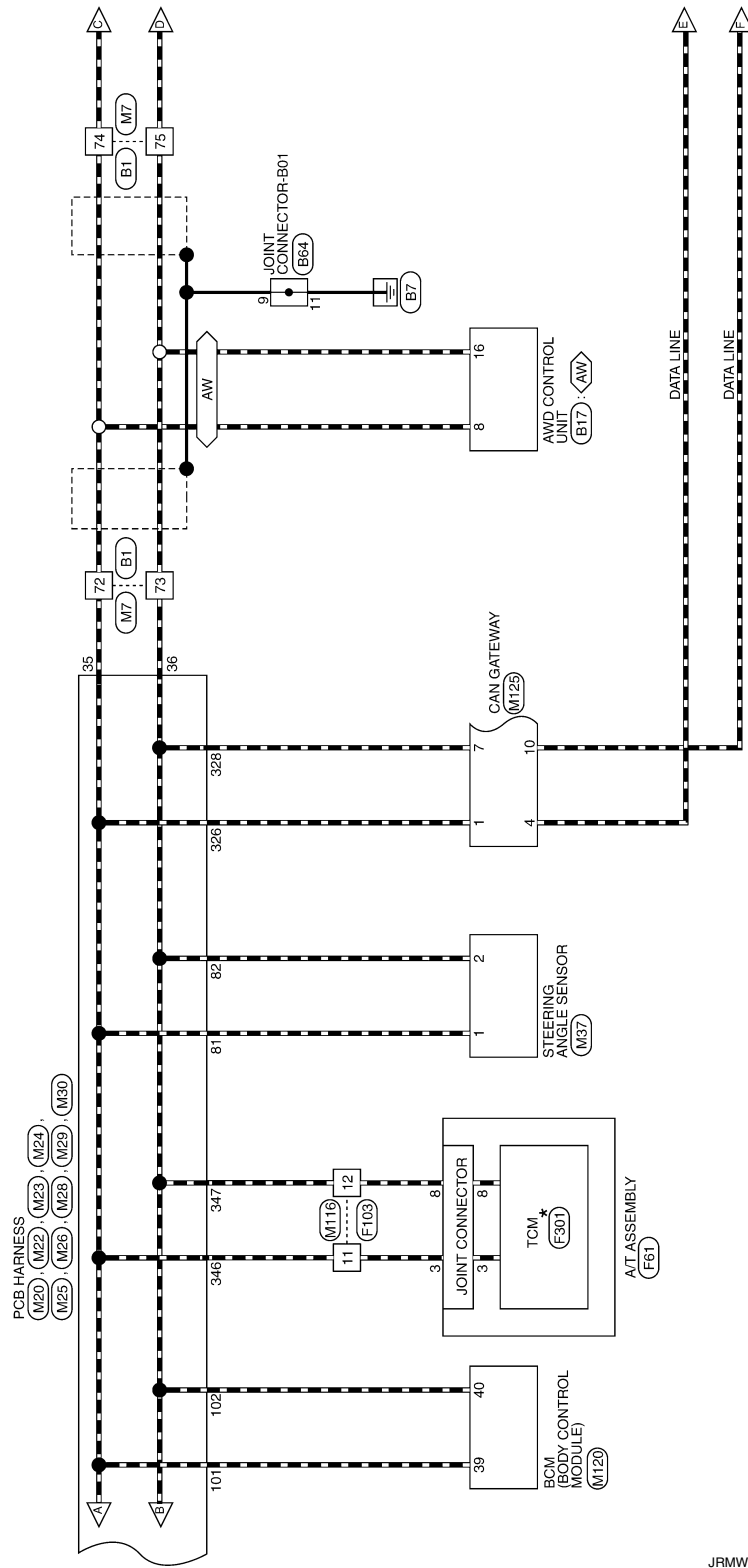


JRMW16259GB

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

CAN SYSTEM (WITH ICC)

< WIRING DIAGRAM >

[CAN]

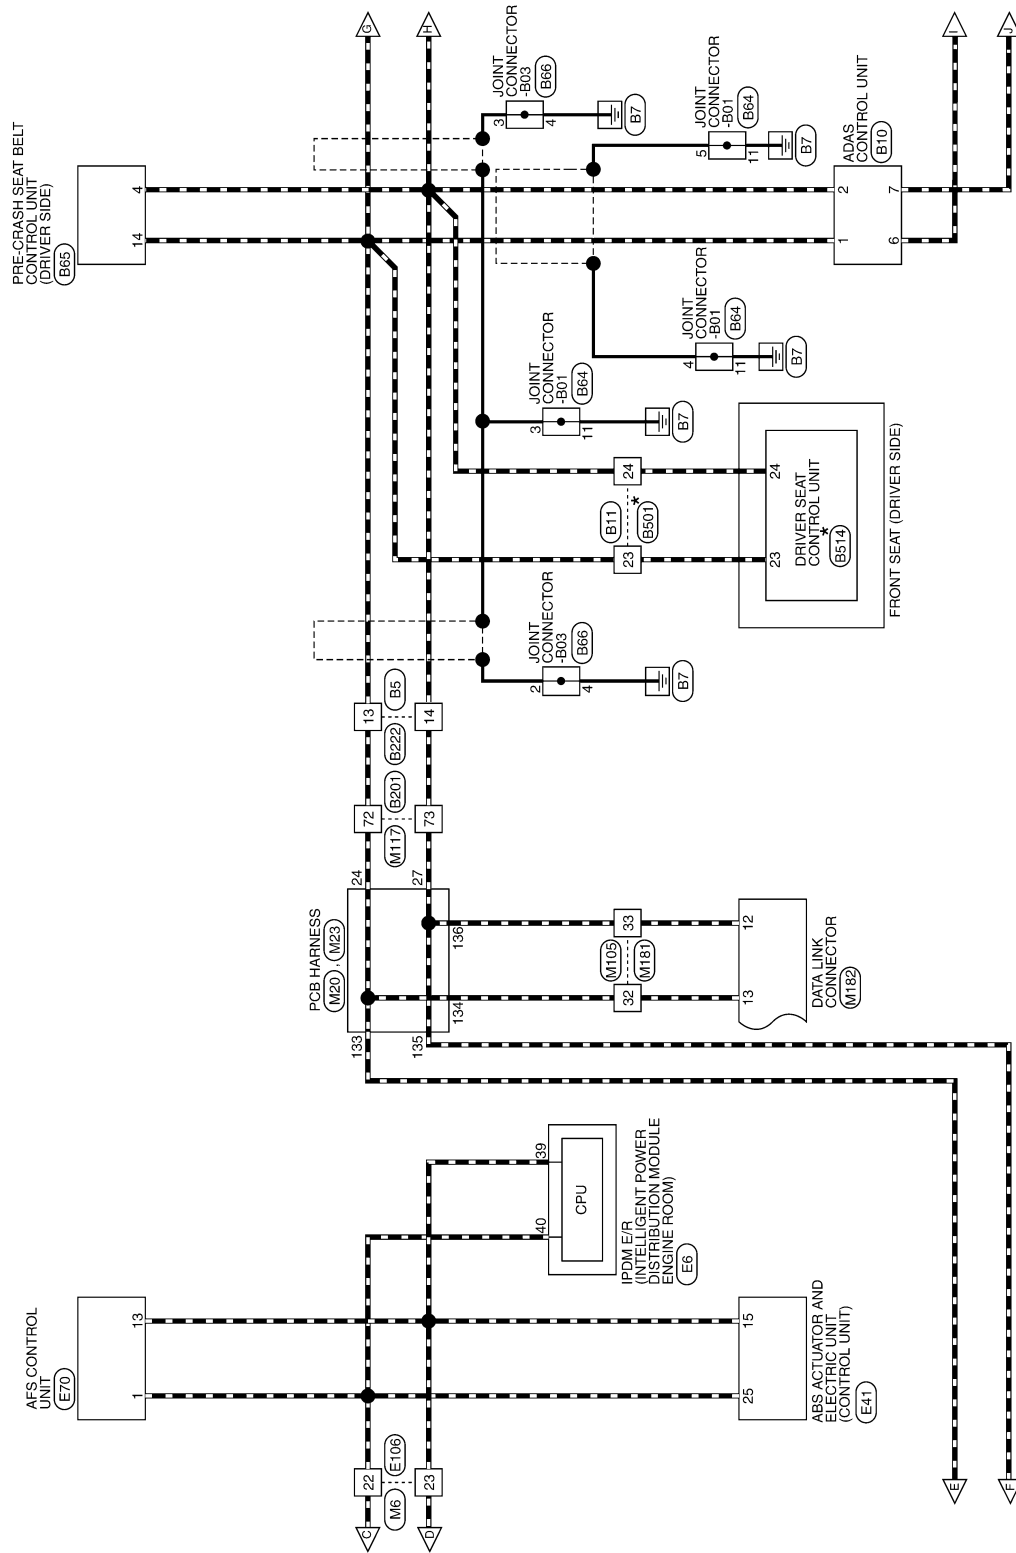


JRMW16260GB

CAN SYSTEM (WITH ICC)

< WIRING DIAGRAM >

[CAN]

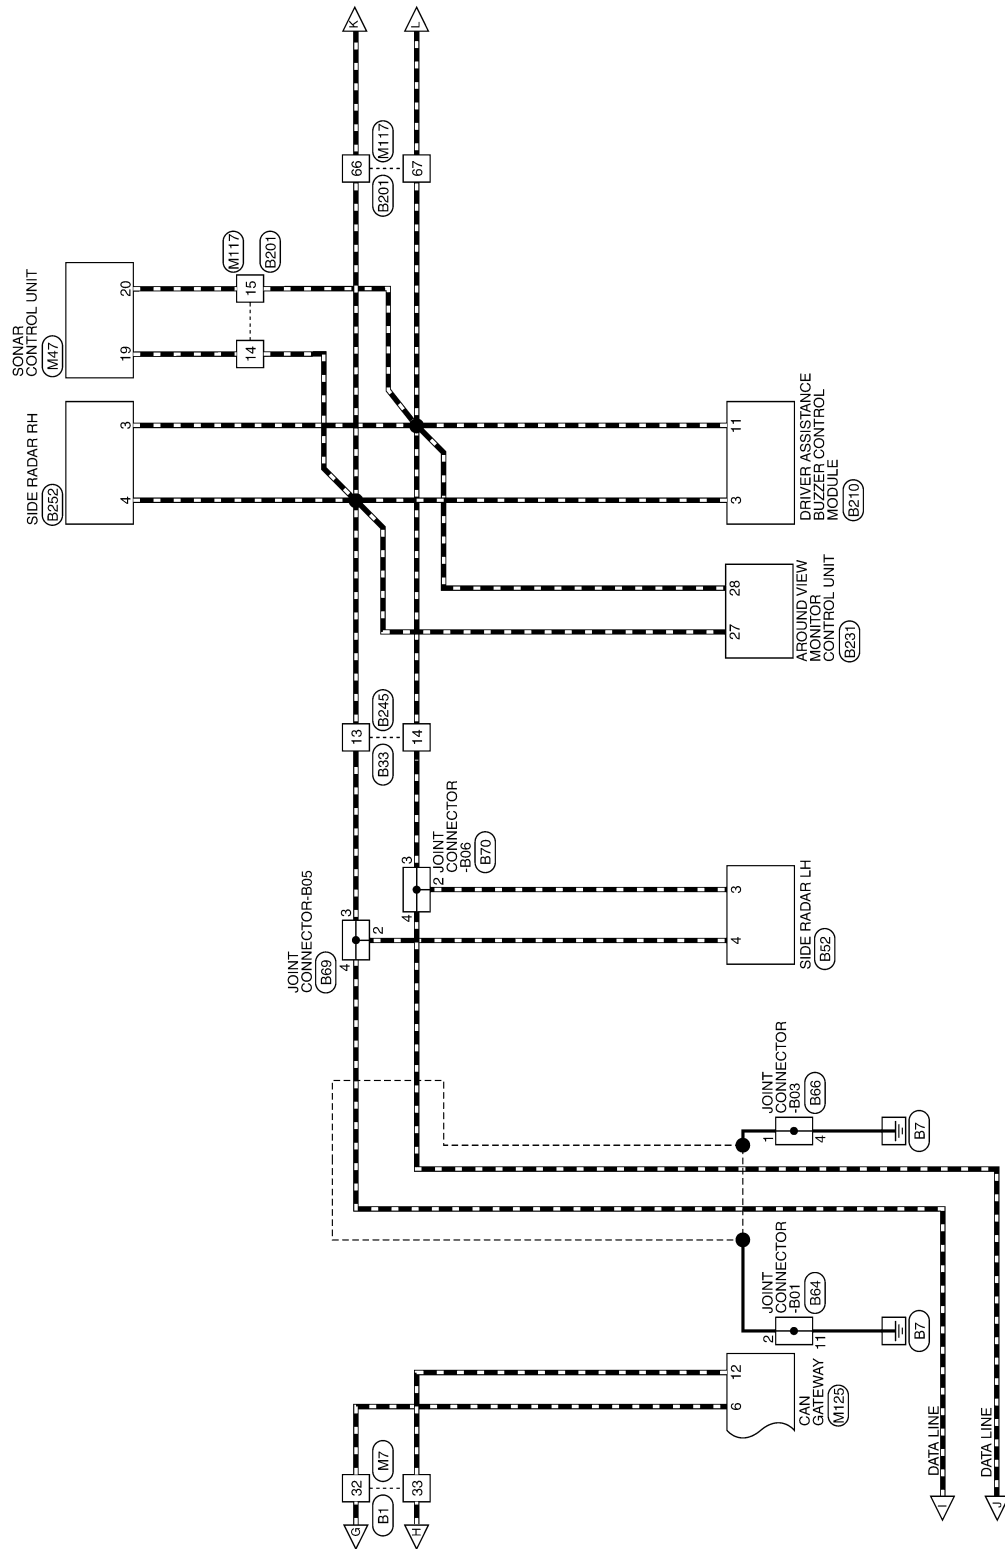


JRMW16261GB

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

CAN SYSTEM (WITH ICC)

< WIRING DIAGRAM >

[CAN]

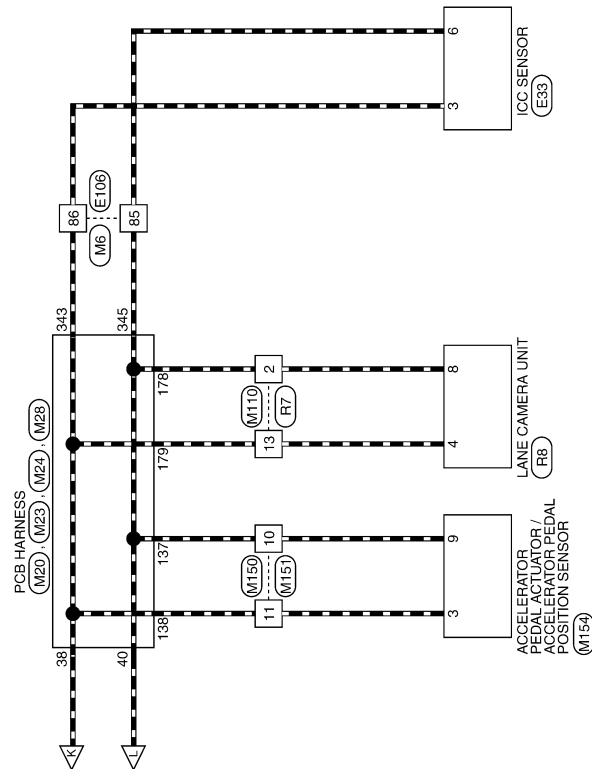

JRMW16262GB


CAN SYSTEM (WITH ICC)

< WIRING DIAGRAM >

[CAN]

CAN SYSTEM (WITH ICC)

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	TH88FW-CSI5-TM4

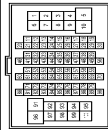

Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	W	-
4	LG	-
5	P	-
7	GR	-
8	Y	-
9	LG	-
10	V	-
11	GR	-
11	L	- [With climate controlled seat]
12	GR	- [With heated seat]
12	P	- [With climate controlled seat]
13	BR	-
14	R	-
14	R	-
15	O	-
16	B	-
16	B	-
18	W	-
19	W	-
20	L	-
21	B	-
22	LG	-
23	V	-
24	Y	-
25	G	-
26	GR	-
27	SB	-
28	L/O	-
29	W/L	-
30	SHIELD	-
32	L	-
33	R	-
36	G	-
37	SB	-
40	SHIELD	-

Terminal No.	Color Of Wire	Signal Name [Specification]
41	GR/V	-
42	W/L	-
43	L	-
44	B	-
47	O	-
48	V	-
49	BR	-
50	SB	-
51	V	-
52	LG	-
53	G	-
56	P	-
57	BR	-
58	LG	-
59	Y	-
60	W	-
61	B	-
62	LG	-
63	V	-
65	O	-
66	BR	-
67	V	-
68	LG	-
69	GR	-
70	R	-
72	L	-
73	P	-
74	L	-
75	P	-
76	Y	-
78	W	-
78	W	-
79	W	-
81	LG	-
82	BR	-
83	SB	-
84	Y	-
85	W	-
86	R	-
87	G	-
88	GR	-
91	SB	-
92	G	-
96	Y	-
97	O	-
98	SB	-
99	LG	-

Connector No.	B5
Connector Name	WIRE TO WIRE
Connector Type	TH24RW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	W	-
6	B	-
7	R	-
8	SHIELD	-
9	G	-
12	V	-
13	L	-
14	R	-
15	B	-
16	SHIELD	-
17	R	-
18	G	-
19	W	-
24	SB	-

Connector No.	B10
Connector Name	ADAS CONTROL UNIT
Connector Type	TH24RW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	CAN-H
2	R	CAN-L
5	B/R	GROUND
6	L	ITS COMM+H

7	P	ITS COMM-L
12	GR	IGNITION
16	GR	BRAKE LIGHT DRIVER SIGNAL
18	SB	WARRANTS STOP SIGNAL
18	O	WARNING SIGNAL ON IND
22	BR	ECU SW

Connector No.	B11
Connector Name	WIRE TO WIRE
Connector Type	NS16FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	SB	-
2	B	-
23	L	-
24	P	- [Without CAN gateway]
24	R	- [With CAN gateway]
25	BR	-
26	W	-
27	L	-
28	O	-
30	V	-
31	BR	-
32	LG	-
35	LG	-
40	O	-
41	B	-

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN


CAN SYSTEM (WITH ICC)

< WIRING DIAGRAM >

[CAN]


CAN SYSTEM (WITH ICC)

Connector No.	B17
Connector Name	AWD CONTROL UNIT
Connector Type	TH16FM-WH

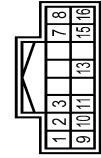

Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	AWD SOL (+)
2	R	AWD SOL (-)
3	W	FLUID TEMP (-)
4	Y	IGN
5	L	CAN-H
6	S	AWD SOL BAT
7	GN	GND
8	B/Y	FLUID TEMP (+)
9	B/Y	BATTERY POWER SUPPLY
10	LG	GND
11	G	CANL
12	P	
13		
14		
15		
16		


Connector No.	B33
Connector Name	WIRE TO WIRE
Connector Type	HS16FGVCS

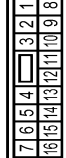

Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	
2	O	
3	O	
4	GR	
5	O	
6	O	
7	R/L	
8	P/L	
9	L	
10	L	
11	L	
12	L	
13	L	


14	Y	-
----	---	---

Connector No.	B52
Connector Name	SIDE RADAR LH
Connector Type	AAC06FB-WP-3P

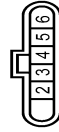

Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	GROUND
2	Y	ITS COMM-L
3	L	ITS COMM-H
4	GR	IGNITION
5	GR	BUMP STOP MANAGEMENT LINE SPDT INTERVENTION INDICATOR
6	BR	


Connector No.	B64
Connector Name	JOINT CONNECTOR-B01
Connector Type	B132PW

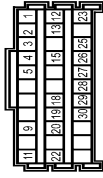

Terminal No.	Color Of Wire	Signal Name [Specification]
1	SHIELD	
2	SHIELD	
3	SHIELD	
4	SHIELD	
5	SHIELD	
6	SHIELD	
7	SHIELD	
8	SHIELD	
9	SHIELD	
10	SHIELD	
11	B	
12	SHIELD	
13	SHIELD	
14	SHIELD	
15	SHIELD	
16	SHIELD	
17	SHIELD	
18	SHIELD	
19	SHIELD	

20	B/R	-
21	B/R	-
22	P	-
23	P	-
24	P	-
25	P	-
26	P	-
27	P	-
28	P	-
29	L	-
30	L	-

Connector No.	B65
Connector Name	REAR CROSS-BEAM CONTROL UNIT (POWER SIDE)
Connector Type	NH18FW-CS2

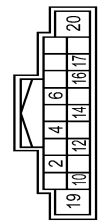

Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	OUT 1
2	R	CAN L/O
3	LG	BACKLESEN/LHMO
4	R	SENS POWER1
5	B	CAN-H
6	B	LOCAL COMM_1
7	Y	SENS GND1
8	W	MOTOR BAT
9	Y	
10	B	MOTOR GND
11	B	
12	B	
13	B	
14	B	
15	B	
16	B	
17	B	
18	B	
19	B	
20	B	

Connector No.	B66
Connector Name	JOINT CONNECTOR-B03
Connector Type	TR04FW-J



Terminal No.	Color Of Wire	Signal Name [Specification]
1	SHIELD	
2	SHIELD	
3	SHIELD	
4	B	

Connector No.	B69
Connector Name	JOINT CONNECTOR-B05
Connector Type	TR04FW-J



Terminal No.	Color Of Wire	Signal Name [Specification]
1	SHIELD	
2	L	
3	L	
4	L	

CAN SYSTEM (WITH ICC)

< WIRING DIAGRAM >

[CAN]

CAN SYSTEM (WITH ICC)

Connector No.	B210
Connector Name	JOINT CONNECTOR-BD6
Connector Type	TH04FW-J



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	Y	-
3	Y	-
4	P	-

Connector No.	B201
Connector Name	WIRE TO WIRE
Connector Type	TH80NW-CS16-TM4




Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	R	-
3	R	-
4	R	-
5	W	-
6	W	-
7	W	-
8	V	-
11	R	-
12	G	-
13	Y	-
14	L	-
15	R	- [Without ADAS]
15	Y	- [With ADAS]
17	GR	-
18	P	-
19	BR	-
20	GR	-
21	Y	-
22	GR	-

23	R	-
24	V	-
25	B	-
26	W	-
27	G	-
28	V	-
29	P	-
30	O	-
31	B/R	- [With heated seat]
32	Y	- [With climate controlled seat]
40	SHIELD	-
41	W/R	-
42	V	-
45	SB	-
46	R	- [With climate controlled seat]
46	Y	- [With heated seat]
47	G	- [With climate controlled seat]
47	GR	- [With heated seat]
48	V	-
49	O	-
50	R	-
51	GR	-
52	LG	-
53	P	-
56	P	-
57	W	-
58	O	-
59	Y	-
61	SB	-
62	L	-
63	W	-
65	SB	-
65	EO	-
66	Y	-
67	Y	-
68	SB	-
69	B	-
71	L	-
72	L	-
73	R	-
74	B	-
75	L	-
76	SHIELD	-
77	G	-
78	R	-
79	P	-
80	G	-
81	O	-
82	BR	-
83	GR	-

84	V	-
85	LG	-
86	W	-
87	Y	-
88	BR	-
89	L	-
90	L	-
91	BR	- [With heated seat]
93	O	- [With climate controlled seat]
93	Y	-
94	GR	-
96	W	-
97	P	-
98	LG	-
99	LG	-
100	Y	-

Connector No.	B210
Connector Name	DRIVER ASSISTANCE BUZZER CONTROL MODULE
Connector Type	TH16FW-NH

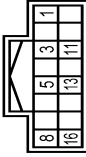

Terminal No.	Color Of Wire	Signal Name [Specification]
1	O	IGNITION
3	O	ITS COMRA4
5	B/R	GROUND
8	R	WARNING BUZZER SIGNAL
11	Y	ITS COMRA4
13	B/R	GROUND
16	G	WARNING BUZZER SIGNAL GROUND

Connector No.	B222
Connector Name	WIRE TO WIRE
Connector Type	TH24FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	B	-
6	R	-
7	G	-
8	SHIELD	-
9	W	-
12	P	-
13	L	-
14	R	-
15	B	-
16	SHIELD	-
17	R	-
18	G	-
19	W	-
24	SB	-

Connector No.	B231
Connector Name	AROUND VIEW MONITOR CONTROL UNIT
Connector Type	TH49FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B/R	GROUND
2	Y	BATTERY POWER SUPPLY
3	W	IGNITION SIGNAL
4	V	ACC POWER SUPPLY
19	SB	AV COMMUNICATION SIGNAL (H)

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CAN SYSTEM (WITH ICC)

CAN SYSTEM (WITH ICC)

Terminal No.	Color Of Wire	Signal Name [Specification]
20	LG	AV COMMUNICATION SIGNAL (L)
21	B	REVERSE SIGNAL
22	BR	CGR
28	R	CANL (MTR/ADAS)
29	Y	CANL (MTR/ADAS)
30	SR	RETRACT MOTOR OPERATION SIGNAL (OPEN)
32	P	RETRACT MOTOR OPERATION SIGNAL (CLOSE)

Connector No.	B245
Connector Name	WIRE TO WIRE
Connector Type	NS16MW-CS




Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	RIGHT/LEFT SWITCHING SIGNAL
2	BR	GROUND
3	Y	ITS COMM-L
4	L	ITS COMM-H
5	G	IGNITION
6	BR	HAND-SPOT WARNING/LAND-SPOT INTERVENTION INDICATOR

Connector No.	B501
Connector Name	WIRE TO WIRE
Connector Type	NS16MW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	O	-
3	Y	-
8	G	-
9	Y	-
10	BR	-
11	Y	-
12	YL	-
13	YL	-
14	Y	-

Connector No.	B252
Connector Name	SIDE RADAR RH
Connector Type	AA208FB-WP

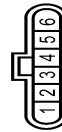

Connector No.	B514
Connector Name	DRIVER SEAT CONTROL UNIT
Connector Type	TH22FN-WH




Terminal No.	Color Of Wire	Signal Name [Specification]
11	G/B	SLIDE SW (BACKWARD)
12	G/W	SLIDE SW (FORWARD)
13	R/G	RECLINER SW (BACKWARD)
14	R/W	RECLINER SW (FORWARD)
15	V/B	REAR LIFTER SW (DOWNWARD)
16	Y/R	REAR LIFTER SW (UPWARD)
17	LG/B	FRONT LIFTER SW (DOWNWARD)
18	LG/R	FRONT LIFTER SW (UPWARD)
19	G/Y	PULSE (SLIDE)
20	R/Y	PULSE (RECLINER)
21	Y	PULSE (REAR LIFTER)
22	R	PULSE (FRONT LIFTER)
23	P	CAN-H
24	P/L	CAN-L
25	G/D	NO. 1
26	G	NO. 2
27	Y	ADDRESS 1
28	V/W	ADDRESS 2
29	L	SET SW
30	BR	PULSE(TILT)
31	BR/W	PULSE(TELESCOPIC)
32	W/L	UART TX/RX
33	W	POWERS SUPPLY (ENCODER)

Connector No.	I6
Connector Name	INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH08F14-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
39	P	CAN-L
40	L	CAN-H
41	B	S-GND
42	Y	MOTOR_FAN_RV_CONT [With V565 engine]
43	Y	MOTOR_FAN_RV_CONT [With V037 engine]
44	GR	DETENT_SW
44	LG	HRDRN_RV [With V565 engine]
45	G	HRDRN_RV [With V037 engine]
46	BR	START_CONT

Connector No.	I33
Connector Name	ICC SENSOR
Connector Type	AA208FB

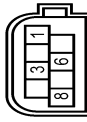

Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	IGNITION
3	L	ITS COMM-H
6	Y	ITS COMM-L
8	BY	GROUND


CAN SYSTEM (WITH ICC)

< WIRING DIAGRAM >

[CAN]


CAN SYSTEM (WITH ICC)

Connector No.	E41
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	14230P8-52Z4-U

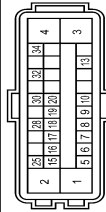


Terminal No.	Color Of Wire	Signal Name [Specification]
1	B/W	ECU(GND)
2	B	MOTOR(GND)
3	Y	SOLENOID(POWER)
4	G	MO TOR(POWER)
5	SB	STOP LAMP SW
6	Y	CANMZ(-)
7	W	R(-LH SENSIGNAL)
8	G	R(-LH SENSIGNAL)
9	BR	F(-RH SENSIGNAL)
10	B	F(-RH SENSIGNAL)
13	LG	VAC SENSIGNAL
15	P	CANL(+)
16	B	CANZ(-)
17	Y	R(-RH SENSIGNAL)
18	BR	R(-RH SENSIGNAL)
19	SB	F(-LH SENSIGNAL)
20	O	F(-LH SENSIGNAL)
21	L	VAC SENSIGNAL
22	B	VAC OFF SW
32	SHIELD	VAC SENSIGNAL
34	G	IGN(POWER)

Connector No.	E7D
Connector Name	AFS CONTROL UNIT
Connector Type	TH24P10-ANH

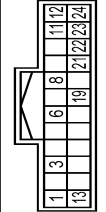

Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	CAN-H
3	GR	AFS SWITCH SIGNAL
6	Y	HEIGHT SENSOR SIGNAL
8	Y	SWIVEL ACTUATOR (IN SIGNAL GROUND)
11	B	IGNITION POWER SUPPLY
12	G	CAN-L
13	P	SWIVEL ACTUATOR GROUND
19	BR	HEIGHT SENSOR POWER SUPPLY
21	V	AIMING MOTOR DRIVE SIGNAL
22	SB	HEIGHT SENSOR GROUND
23	LG	AIMING MOTOR GROUND
24	B	AIMING MOTOR GROUND


Connector No.	EJ66
Connector Name	WIRE TO WIRE
Connector Type	TH89P14-C316-TM4

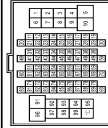

Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	
2	W	
3	SB	
4	LG	
5	O	
6	W	
7	GR	
8	G	

77	O	-
78	SB	-
80	SB	-
82	SB	-
84	GR	-
85	Y	-
86	L	-
87	V	-
88	BR	-
89	LG	-
90	W	-
91	W	-
92	P	-
93	LG	-
94	BR	-
95	W	-
97	R	-
98	Y	-
99	V	-
100	V	-

Connector No.	FE1
Connector Name	A7 ASSEMBLY
Connector Type	IK11P6-DBY

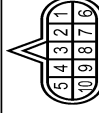

Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	POWER SUPPLY (BACK UP)
2	R	POWER SUPPLY (BACK UP)
3	L	CAN-H
4	V	K-LINE
5	B	GND
6	G	POWER SUPPLY (IGN)
7	SB	BACK-UP LAMP RELAY
8	P	CAN-L
9	BR	IPN SIGNAL
10	B	GROUND


9	Y	-
10	BR	-
11	SB	-
12	SB	-
13	GR	-
14	GR	-
15	V	-
16	V	-
17	GR	-
18	V	-
20	BR	-
21	P	-
22	L	-
23	P	-
27	SHIELD	-
28	L/O	-
29	W/L	-
31	BR	-
32	G	-
33	O	-
34	Y	-
36	G	-
37	V	-
41	BR	-
44	W	-
45	L	-
46	GR	-
47	V	-
48	G	-
49	O	-
50	LG	-
51	R	-
52	B	-
53	W	-
61	G	-
62	Y	-
63	BR	-
64	B	-
65	Y	-
66	R	-
67	SB	-
68	G	-
69	SHIELD	-
70	W	-
71	W	-
72	R	-
73	G	-
74	Y	-
75	B	-
76	SHIELD	-

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

CAN SYSTEM (WITH ICC)

CAN SYSTEM (WITH ICC)

Connector No.	F103
Connector Name	WIRE TO WIRE
Connector Type	TK265M-RS10

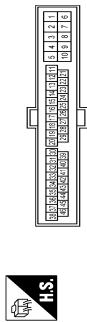

Terminal No.	Color Of Wire	Signal Name [Specification]
2	L	-
3	G	-
4	B	- [With VK55 engine]
4	R	- [With VK37 engine]
5	B	- [With VK55 engine]
5	GR	- [With VK37 engine]
7	LG	-
8	Y	-
9	SB	- [With VK37 engine]
9	W	- [With VK55 engine]
10	BR	- [With VK37 engine]
10	V	-
11	L	-
12	L	-
13	V	-
14	SB	-
15	R	-
16	W	-
17	GR	-
18	LG	-
21	LG	-
22	B	-
23	G	-
24	BR	-
25	O	-

Connector No.	F301
Connector Name	TCM
Connector Type	SPI0FG



Terminal No.	Color Of Wire	Signal Name [Specification]
1	-	VIGN
2	-	BATT
3	-	CAN-H
4	-	K LINE
5	-	GND
6	-	VIGN
7	-	REV LAMP RLY
8	-	CAN-L
9	-	START RLY
10	-	GND


Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH80M-C31E-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	W	-
3	SB	-
4	LG	-
5	W	-
6	W	-
7	BG	-
8	G	-
9	Y	-
10	W	-

97	B	-
98	V	-
99	G	-
100	B	-

Connector No.	M7
Connector Name	WIRE TO WIRE
Connector Type	TH80M-C31E-TM4

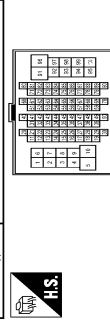

Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	Y	-
4	BR	-
5	P	-
7	G	-
8	Y	-
9	G	-
10	V	-
11	L	- [With heated seat]
11	V	- [With climate controlled seat]
12	GR	- [With heated seat]
12	P	- [With climate controlled seat]
13	BR	-

11	R	-
12	V	-
13	LG	-
14	L	-
15	V	-
16	R	-
17	GR	-
18	V	-
20	SB	-
21	BR	-
22	L	-
23	P	-
27	SHIELD	-
28	V	-
29	SB	-
31	BG	-
32	P	-
33	R	-
34	BG	-
36	V	-
37	G	-
41	BR	-
44	BR	-
45	Y	-
46	BG	-
47	V	-
48	G	-
49	BG	-
50	W	-
51	W	-
52	G	-
53	G	-
54	GR	-
60	R	-
62	LG	-
63	BR	-
64	L	- [With ICC]
64	SB	- [Without ICC]
65	R	- [With ICC]
65	Y	- [Without ICC]
66	P	-
67	L	-
68	R	-
69	SHIELD	-
70	B	-
71	W	-
72	R	-
73	G	-
74	Y	-
75	B	-
76	SHIELD	-

CAN SYSTEM (WITH ICC)

< WIRING DIAGRAM >

[CAN]

CAN SYSTEM (WITH ICC)

Terminal No.	Color Of Wire	Signal Name [Specification]
14	GR	-
15	BG	-
16	Y	-
17	SG	-
18	W	-
19	W	-
20	L	-
21	B	-
22	LG	-
23	W	-
24	V	-
25	G	-
26	BR	-
27	SR	-
28	P	-
29	L	-
30	SHIELD	-
32	L	-
33	P	-
36	BG	-
37	SR	-
41	SR	-
42	V	-
43	L	-
44	B	-
47	L	-
48	LG	-
49	BR	-
50	V	-
51	P	-
52	SG	-
56	SR	-
57	P	-
58	LG	-
59	Y	-
60	GR	-
61	B	-
62	LG	-
63	BR	-
65	W	-
66	R	-
67	V	-
68	LG	-
69	SR	-
70	V	-
72	L	-
73	P	-
74	L	-

Terminal No.	Color Of Wire	Signal Name [Specification]
75	P	-
76	G	-
77	V	-
78	SR	-
79	W	-
81	LG	-
82	BR	-
83	BG	-
84	B	-
85	W	-
86	G	-
87	R	-
88	G	-
91	W	-
92	G	-
96	W	-
97	BG	-
98	Y	-
99	LG	-

Terminal No.	Color Of Wire	Signal Name [Specification]
81	L	-
82	P	-
83	B	-
84	B	-
85	B	-
86	B	-
87	B	-
88	B	-
89	Y	-
91	V	-
92	V	-
93	L	-
94	B	-
95	LG	-
96	BR	-
97	G	-
98	G	-
99	G	-
100	G	-
101	L	-
102	P	-
103	B	-
104	BR	-

Terminal No.	Color Of Wire	Signal Name [Specification]
105	R	-
107	Y	-
108	Y	-
109	BR	-
110	BR	-
111	B	-
112	B	-
113	P	-
114	L	-
116	B	-
117	B	-
118	B	-
119	LG	-
120	V	-

Terminal No.	Color Of Wire	Signal Name [Specification]
131	Y	-
132	Y	-
133	Y	-
134	Y	-
135	Y	-
136	P	-
137	Y	-
138	L	-
141	W	-
142	W	-
144	P	-
145	B	-
146	LG	-
147	B	-
149	B	-

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

JRMW16269GB

CAN SYSTEM (WITH ICC)


< WIRING DIAGRAM >

[CAN]

CAN SYSTEM (WITH ICC)


140	P	-	-
141	B	-	-
142	B	-	-
143	B	-	-
144	LG	-	-
145	LG	-	-
146	W	-	-
147	W	-	-
148	W	-	-
149	W	-	-
150	W	-	-
151	W	-	-
152	W	-	-
153	W	-	-
154	W	-	-
155	W	-	-
156	W	-	-
157	W	-	-
158	R	-	-
159	R	-	-
160	SB	-	-

Connector No.	M24
Connector Name	PCB HARNESS
Connector Type	TH4DFW-NH

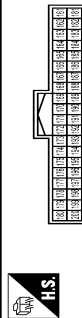

169	B	-	-
170	V	-	-
171	LG	-	-
172	LG	-	-
173	SB	-	-
174	SB	-	-
175	SB	-	-
176	SB	-	-
177	SB	-	-
178	SB	-	-
179	SB	-	-
180	SB	-	-
181	SB	-	-
182	SB	-	-
183	SB	-	-
184	BR	-	-
185	SB	-	-
186	SB	-	-
187	R	-	-
188	R	-	-
189	B	-	-
200	SB	-	-

Connector No.	M25
Connector Name	PCB HARNESS
Connector Type	TH4DFW-NH

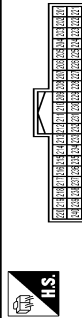


222	LG	-	-
223	SB	-	-
224	SB	-	-
225	SB	-	-
226	LG	-	-
227	R	-	-
228	SB	-	-
229	SB	-	-
230	BR	-	-
231	SB	-	-
232	V	-	-
233	L	-	-
234	P	-	-
235	B	-	-
239	V	-	-
240	W	-	-

Connector No.	M26
Connector Name	PCB HARNESS
Connector Type	TH4DFW-NH



262	P	-	-
263	P	-	-
264	Y	-	-
265	G	-	-
266	Y	-	-
267	Y	-	-
268	Y	-	-
269	Y	-	-
270	Y	-	-
271	BR	-	-
272	G	-	-
273	R	-	-
274	R	-	-
275	Y	-	-
276	B	-	-
277	G	-	-
278	R	-	-
279	R	-	-
280	Y	-	-

Connector No.	M28
Connector Name	PCB HARNESS
Connector Type	TH4DFW-NH

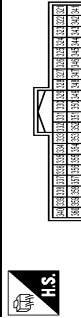

Terminal No.	Color Of Wire	Signal Name [Specification]
151	BG	-
152	BG	-
153	V	-
154	V	-
155	R	-
156	LG	-
157	LG	-
158	R	-
159	B	-
160	SB	-
172	B	-
174	W	-
176	L	-
177	P	-
178	Y	-
179	Y	-
180	LG	-
182	BR	-
182	R	-
183	G	-
184	V	-
185	P	-
186	R	-
187	L	-
187	Y	-
188	L	-

Terminal No.	Color Of Wire	Signal Name [Specification]
201	L	-
206	P	-
208	V	-
208	G	-
209	G	-
209	L	-
210	L	-
210	P	-
211	SHIELD	-
212	BR	-
212	G	-
213	R	-
214	SHIELD	-
215	GR	-
215	V	-
216	G	-
216	LG	-
217	SHIELD	-
218	BR	-
218	P	-
219	GR	-
219	V	-
220	SHIELD	-
221	P	-

Terminal No.	Color Of Wire	Signal Name [Specification]
241	L	-
242	L	-
243	R	-
243	Y	-
244	L	-
244	SB	-
245	B	-
246	B	-
247	B	-
248	SHIELD	-
251	V	-
252	B	-
253	B	-
254	B	-
254	W	-
255	B	-
258	R	-
259	L	-
260	BG	-
261	P	-

Terminal No.	Color Of Wire	Signal Name [Specification]
241	L	-
242	L	-
243	R	-
243	Y	-
244	L	-
244	SB	-
245	B	-
246	B	-
247	B	-
248	SHIELD	-
251	V	-
252	B	-
253	B	-
254	B	-
254	W	-
255	B	-
258	R	-
259	L	-
260	BG	-
261	P	-

Terminal No.	Color Of Wire	Signal Name [Specification]
321	V	-
322	V	-
324	B	-
325	L	-
326	L	-
327	P	-
328	P	-
330	B	-
331	V	-
332	V	-
335	B	-
337	W	-
338	W	-
343	L	-
344	B	-
345	Y	-
346	L	-
347	P	-
348	GR	-

JRMW16270GB

CAN SYSTEM (WITH ICC)


< WIRING DIAGRAM >

[CAN]

CAN SYSTEM (WITH ICC)

349	V	-
350	LG	-
351	P	-
352	P	-
353	W	-
354	W	-
360	G	-

Connector No.	IM29
Connector Name	FCB HARNESS
Connector Type	TH40FB-NH

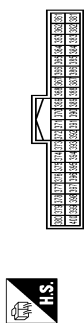


Terminal No.	Color Of Wire	Signal Name [Specification]
351	W	-
352	W	-
353	Y	-
354	B	-
357	B	-
360	G	-
372	V	-
373	V	-
374	V	-
375	V	-
376	B	-
380	R	-
381	G	-
382	V	-
384	GR	-
395	P	-
396	L	-
400	V	-

Connector No.	M30
Connector Name	FCB HARNESS
Connector Type	TH40P12-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
402	R	-
403	R	-
406	B	-
407	V	-
408	B	-
409	B	-
410	B	-
411	B	-
413	Y	-
414	BR	-
416	LG	-
417	B	-
419	SB	-
420	SHIELD	-
422	V	-
424	P	-
426	Y	-
428	Y	-
430	LG	-
431	SB	-
432	V	-
435	V	-
436	BIG	-
437	B	-
438	P	-
439	L	-
440	B	-

Connector No.	M37
Connector Name	STEERING ANGLE SENSOR
Connector Type	TH08FW-NH

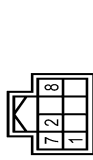

Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	CAN-H
2	P	CAN-L
7	B	GND
8	G	IGN


Connector No.	M33
Connector Name	LOW TIRE PRESSURE WARNING CONTROL UNIT
Connector Type	TH32FW-NH

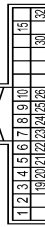

Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	CAN-L
2	L	CAN-H
3	B	RR TUNER (SIG)
4	B	RL TUNER (SIG)
5	B	FR TUNER (SIG)
6	G	FL TUNER (SIG)
7	R	RR TUNER (VCC)
8	W	RL TUNER (VCC)
9	W	FR TUNER (VCC)
10	W	FL TUNER (VCC)
15	Y	IGN
19	G	RR TUNER (RSS)
20	G	RL TUNER (RSS)
21	G	FR TUNER (RSS)
22	R	FL TUNER (RSS)
23	W	RR TUNER (GND)

24	R	RL TUNER (GND)
25	R	FR TUNER (GND)
26	B	FL TUNER (GND)
30	S	RR TUNER
32	S	GND

Connector No.	M47
Connector Name	SOMAR CONTROL UNIT
Connector Type	TH24FW-NH

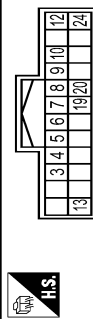

Terminal No.	Color Of Wire	Signal Name [Specification]
3	R	CORNER SENSOR SIGNAL FRONT LH
4	W	CORNER SENSOR SIGNAL FRONT RH
5	W	CORNER SENSOR SIGNAL REAR LH
6	B	CORNER SENSOR SIGNAL REAR RH
7	G	CENTER SENSOR SIGNAL REAR LH
8	R	CENTER SENSOR SIGNAL REAR RH
9	Y	CENTER SENSOR SIGNAL FRONT LH
10	G	CENTER SENSOR SIGNAL FRONT RH
12	B	GROUND
13	LG	IGNITION POWER SUPPLY
14	L	GROUND
20	Y	CAN-L (MTRW1CC)
20	Y	CAN-L (MTRW1CC)
24	B	GROUND

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

JRMW16271GB


CAN SYSTEM (WITH ICC)

< WIRING DIAGRAM >


[CAN]

CAN SYSTEM (WITH ICC)


Connector No.	M53
Connector Name	COMBINATION METER
Connector Type	TH40PM-NH

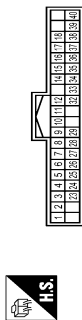

Connector No.	M66
Connector Name	A/C AUTO AMP.
Connector Type	TH20PM-TBS

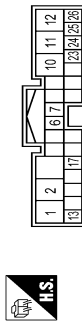

Terminal No.	10	11	12	13	14	15	16	18	22	23	25	30	31	32	33	34	35	36	37
Color Of Wire	W	W	SB	SB	BR	BR	V	G	BG	B	W	R	BR	L	P	LG	W	LG	L

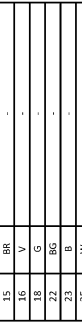

Terminal No.	113	114	115	117	121	122	123	124	125	126	127	128
Color Of Wire	P	V	V	V	G	P	B	B	SB	BR	B	B




Terminal No.	Color Of Wire	Signal Name (Specification)
1	W	BATTERY POWER SUPPLY
2	BG	IGNITION SIGNAL
3	GR	VEHICLE SPEED SIGNAL (2-PULSE)
4	R	VEHICLE SPEED SIGNAL (8-PULSE)
5	B	ILLUMINATION CONTROL SIGNAL
6	B	METER CONTROL SWITCH GROUND
7	SB	ENTER SWITCH SIGNAL
8	LG	SELECT SWITCH SIGNAL
9	G	ILLUMINATION CONTROL SWITCH SIGNAL (+)
10	GR	ILLUMINATION CONTROL SWITCH SIGNAL (-)
11	L	TRIP RESET SWITCH SIGNAL
12	B	GROUND
14	L	CAN-H
15	P	CAN-L
16	R	AIR BAG SIGNAL
17	R	LED HEADLAMP (LH) WARNING SIGNAL
18	V	LED HEADLAMP (RH) WARNING SIGNAL
23	B	GROUND
24	B	FUEL LEVEL SENSOR GROUND
25	W	ALTERNATOR SIGNAL
26	V	PARKING BRAKE SWITCH SIGNAL
27	V	BRAKE FLUID LEVEL SWITCH SIGNAL
28	G	SECURITY SIGNAL
29	L	WASHER LEVEL SWITCH SIGNAL
32	G	PADDLE SHIFTER SHIFT DOWN SIGNAL
33	BG	PADDLE SHIFTER SHIFT UP SIGNAL
34	G	FUEL LEVEL SENSOR SIGNAL
35	W	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
36	G	PASSENGER SEAT BELT WARNING SIGNAL
37	G	NON-MANUAL MODE SIGNAL
38	V	MANUAL MODE SHIFT DOWN SIGNAL
39	L	MANUAL MODE SHIFT UP SIGNAL
40	W	MANUAL MODE SIGNAL

Terminal No.	Color Of Wire	Signal Name (Specification)
1	L	BATTERY POWER SUPPLY
2	W	IGNITION POWER SUPPLY
6	R	BLOWER MOTOR FB SIGNAL
7	L	POWER TRANSDUCER CONTROL SIGNAL
10	B	GROUND
11	P	CAN-L
12	L	CAN-H
13	V	ACC POWER SUPPLY
17	BG	ECV CONTROL SIGNAL
23	W	DRIVE MODE SELECT SW (SNOW)
24	L	DRIVE MODE SELECT SW (ECO)
25	G	DRIVE MODE SELECT SW (STANDARD)
26	Y	DRIVE MODE SELECT SW (SPORT)

Terminal No.	Color Of Wire	Signal Name (Specification)
97	R	ACCELERATOR PEDAL POSITION SENSOR 1
98	Y	ACCELERATOR PEDAL POSITION SENSOR 2
99	G	SENSOR POWER SUPPLY (ACCELERATOR PEDAL POSITION SENSOR 1)
100	W	SENSOR GROUND (ACCELERATOR PEDAL POSITION SENSOR 1)
101	SB	ASCO STEERING SWITCH
102	P	FUEL TANK PRESSURE SENSOR
103	L	SENSOR POWER SUPPLY (ACCELERATOR PEDAL POSITION SENSOR 2)
104	B	SENSOR GROUND (WITHOUT LCC)
104	BR	SENSOR GROUND (WITH LCC)
105	LG	REFRIGERANT PRESSURE SENSOR
106	P	FUEL TANK TEMPERATURE SENSOR
107	BG	AVCC2 PDPRES/TPRES
108	Y	GND ASCD SW
109	BR	TRANSMISSION RANGE SWITCH
110	V	ENGINE SPEED SIGNAL OUTPUT
112	V	GND4 PDPRES/TPRES


Connector No.	M110
Connector Name	WIRE TO WIRE
Connector Type	TH2AMM-NH

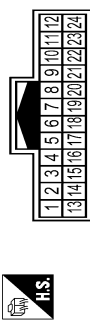

Terminal No.	Color Of Wire	Signal Name (Specification)
1	L	BATTERY POWER SUPPLY
2	W	IGNITION POWER SUPPLY
6	R	BLOWER MOTOR FB SIGNAL
7	L	POWER TRANSDUCER CONTROL SIGNAL
10	B	GROUND
11	P	CAN-L
12	L	CAN-H
13	V	ACC POWER SUPPLY
17	BG	ECV CONTROL SIGNAL
23	W	DRIVE MODE SELECT SW (SNOW)
24	L	DRIVE MODE SELECT SW (ECO)
25	G	DRIVE MODE SELECT SW (STANDARD)
26	Y	DRIVE MODE SELECT SW (SPORT)

Terminal No.	Color Of Wire	Signal Name (Specification)
97	R	ACCELERATOR PEDAL POSITION SENSOR 1
98	Y	ACCELERATOR PEDAL POSITION SENSOR 2
99	G	SENSOR POWER SUPPLY (ACCELERATOR PEDAL POSITION SENSOR 1)
100	W	SENSOR GROUND (ACCELERATOR PEDAL POSITION SENSOR 1)
101	SB	ASCO STEERING SWITCH
102	P	FUEL TANK PRESSURE SENSOR
103	L	SENSOR POWER SUPPLY (ACCELERATOR PEDAL POSITION SENSOR 2)
104	B	SENSOR GROUND (WITHOUT LCC)
104	BR	SENSOR GROUND (WITH LCC)
105	LG	REFRIGERANT PRESSURE SENSOR
106	P	FUEL TANK TEMPERATURE SENSOR
107	BG	AVCC2 PDPRES/TPRES
108	Y	GND ASCD SW
109	BR	TRANSMISSION RANGE SWITCH
110	V	ENGINE SPEED SIGNAL OUTPUT
112	V	GND4 PDPRES/TPRES

Connector No.	M107
Connector Name	ECM
Connector Type	RH24EG-R2E-R-RH-Z

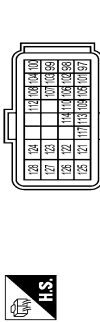

Terminal No.	Color Of Wire	Signal Name (Specification)
1	G	-
2	W	-
3	W	-
4	R	-
5	R	-
6	B	-
7	BR	-
8	R	-
9	B	-
10	V	-
11	BR	-
12	G	-
13	L	-
20	V	-
21	R	-
22	G	-
23	L	-
24	LG	-

JRMW16272GB


CAN SYSTEM (WITH ICC)

< WIRING DIAGRAM >

[CAN]


CAN SYSTEM (WITH ICC)

Connector No.	M115
Connector Name	WIRE TO WIRE
Connector Type	TC636W-NS10

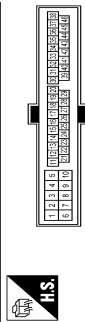


Terminal No.	Color Of Wire	Signal Name [Specification]
2	SB	-
3	Y	-
4	B	- [With V656 engine]
4	SB	- [With V637 engine]
5	B	-
7	W	-
8	Y	-
9	SB	- [With V637 engine]
9	W	- [With V656 engine]
10	SB	-
11	L	-
12	P	-
13	V	-
14	R	-
15	G	-
16	BR	-
17	GR	-
18	P	-
19	BR	-
20	GR	-
21	P	-
22	GR	-
23	LG	-
24	BG	-
25	B	-
26	W	-
27	R	-
28	V	-
29	P	-
30	B	-
31	G	-
40	SHIELD	-
41	R	-
42	V	-
45	SB	-
46	BG	- [With heated seat]
46	L	- [With climate controlled seat]
47	GR	- [With climate controlled seat]
48	V	- [With heated seat]

Connector No.	M117
Connector Name	WIRE TO WIRE
Connector Type	TH82PL-CS16-TM4

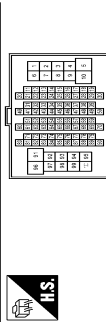

Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
3	Y	-
6	R	-
7	W	-
8	V	-
11	R	-
12	G	-
13	W	-
14	L	-
15	R	- [Without ADAS]
15	Y	- [With ADAS]
17	GR	-
18	P	-
19	BR	-
20	GR	-
21	P	-
22	LG	-
23	BR	-
24	BG	-
25	B	-
26	W	-
27	R	-
28	V	-
29	P	-
30	B	-
31	G	-
40	SHIELD	-
41	R	-
42	V	-
45	SB	-
46	BG	- [With heated seat]
46	L	- [With climate controlled seat]
47	GR	- [With climate controlled seat]
48	V	- [With heated seat]

Connector No.	M120
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH46P-B-NH

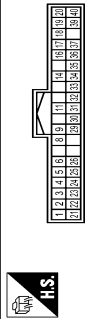

Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	RR WINDOW DEFEG RLY CONT
2	BG	COMBI SW INPUT 5
3	SB	COMBI SW INPUT 4
4	L	COMBI SW INPUT 3
5	G	COMBI SW INPUT 2
6	P	COMBI SW INPUT 1
8	V	POWER WINDOW SW COMM
9	P	STOP LAMP SW 1
11	R	RAIN SENSOR SERIAL LINK
14	W	OPTICAL SENSOR
16	SB	DIMMER SIGNAL
17	Y	SENSOR PWR SPV
18	B	REVERSE SENSOR GND
19	V	TURN SIG RH OUTPUT (FRONT)
20	G	TURN SIG LH OUTPUT (FRONT)
21	P	RETS AND APB
22	GR	KEY FINGER PRESS
23	G	RECALL
24	G	GOOGLE LINK
25	G	MOCS ANT ASP
26	G	KEY IDENTIFICATION
29	G	HAZARD SW
30	O	TRILLO OPEN SW
31	W	DR DOOR LINK SENSOR
32	BR	COMBI SW OUTPUT 5
33	R	COMBI SW OUTPUT 4
34	V	COMBI SW OUTPUT 3
35	Y	COMBI SW OUTPUT 2
36	LG	COMBI SW OUTPUT 1
37	R	P POSITION
39	L	CAN-H
40	P	CAN-L

49	BG	-
50	LG	-
51	SB	-
52	W	-
53	W	-
54	R	-
55	G	-
56	R	-
57	BR	-
58	R	-
59	W	-
60	W	-
61	LG	-
62	V	-
63	R	-
64	SB	-
65	LG	-
66	L	-
67	Y	-
68	SB	-
69	B	-
71	L	-
72	L	-
73	P	-
74	B	-
75	L	-
76	SHIELD	-
77	G	-
78	R	-
79	L	-
80	G	-
81	BG	-
82	BR	-
83	GR	-
84	GR	-
85	LG	-
86	W	-
87	R	-
88	Y	-
89	BR	-
90	L	-
91	Y	-
93	G	- [With heated seat]
93	W	- [With climate controlled seat]
94	V	-
96	W	-
97	Y	-
98	BR	-
99	G	-
100	Y	-


A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CAN SYSTEM (WITH ICC)


CAN SYSTEM (WITH ICC)

Connector No.	M125
Connector Name	CAN GATEWAY
Connector Type	TH12FM-4H

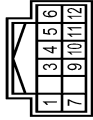

Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	CAN-H
2	GR	BATTERY
3	GR	CAN-H
4	L	CAN-H
5	B	GND
6	L	CAN-H
7	P	CAN-H
8	W	IGNITION
9	P	CAN-L
10	P	CAN-L
11	B	GND
12	P	CAN-L


Connector No.	M147
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT
Connector Type	HM382V-EX

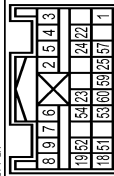

Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	IGN
2	B	GND
3	Y	DR1 (+)
4	Y	DR1 (-) DR2 (-)
5	Y	DR2 (+)
6	Y	AST (+)
7	Y	AST (-)
8	Y	AST (+)
9	Y	AST (-)
18	SB	EC25 (+)

19	V	EC25 (-)
20	SHIELD	
21	R	AIR BAG W/L
22	R	SEAT BELT
23	R	SEAT BELT
24	R	SEAT BELT
25	R	SEAT BELT
26	R	SEAT BELT
27	R	SEAT BELT
28	R	SEAT BELT
29	R	SEAT BELT
30	R	SEAT BELT
31	R	SEAT BELT
32	R	SEAT BELT
33	R	SEAT BELT
34	R	SEAT BELT
35	R	SEAT BELT
36	R	SEAT BELT
37	R	SEAT BELT
38	R	SEAT BELT
39	R	SEAT BELT
40	R	SEAT BELT
41	R	SEAT BELT
42	R	SEAT BELT
43	R	SEAT BELT
44	R	SEAT BELT
45	R	SEAT BELT
46	R	SEAT BELT
47	R	SEAT BELT
48	R	SEAT BELT
49	R	SEAT BELT
50	R	SEAT BELT
51	R	SEAT BELT
52	R	SEAT BELT
53	R	SEAT BELT
54	R	SEAT BELT
55	R	SEAT BELT
56	R	SEAT BELT
57	R	SEAT BELT
58	R	SEAT BELT
59	R	SEAT BELT
60	P	CAN-L

Connector No.	M150
Connector Name	WIRE TO WIRE
Connector Type	RH12FB

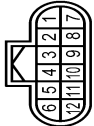


Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	
2	BR	
3	Y	
4	T	
5	W	
6	G	
7	LG	
8	LG	
9	G	
10	Y	
11	L	
12	SHIELD	

Connector No.	M151
Connector Name	WIRE TO WIRE
Connector Type	RH1248B



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	
2	B	
3	R	
4	L	
5	W	
6	G	
7	O	
8	B	
9	R	
10	Y	
11	L	
12	SHIELD	


Connector No.	M154
Connector Name	WIRE TO WIRE
Connector Type	RH12FB

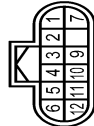

Terminal No.	Color Of Wire	Signal Name [Specification]
1	O	BATTERY
2	R	IGNITION
3	L	ITS COMM-H
4	G	SENSOR POWER SUPPLY
5	W	SENSOR GROUND
6	R	ACCELERATOR PEDAL POSITION SENSOR 1
7	B	GROUND
9	Y	ITS COMM-L

10	L	SENSOR POWER SUPPLY
11	B	ECM
12	Y	ACCELERATOR PEDAL POSITION SENSOR 2

Connector No.	M160
Connector Name	ECM
Connector Type	MA855FB-ME8ID-1H-Z

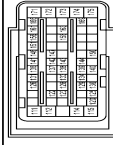

Terminal No.	Color Of Wire	Signal Name [Specification]
111	W	FUEL INJECTOR DRIVER POWER SUPPLY
112	W	FUEL INJECTOR DRIVER POWER SUPPLY
114	B	ECM GROUND
115	B	ECM GROUND
120	G	EVAP CANISTER VENT CONTROL VALVE
122	V	EVAP CANISTER VENT CONTROL VALVE
123	BG	THROTTLE CONTROL MOTOR RELAY
125	P	FUEL PUMP CONTROL MODULE (TPCM)
126	Y	ACCELERATOR PEDAL POSITION SENSOR 2
128	SB	SENSOR SW1 (G)
129	SB	SENSOR SW2 (G)
130	BR	SENSOR GROUND (M) (G)
131	Y	SENSOR GROUND (M) (G)
133	L	SENSOR POWER SUPPLY
134	P	SENSOR POWER SUPPLY
136	R	FUEL TANK TEMPERATURE SENSOR
137	G	ACCELERATOR PEDAL POSITION SENSOR 1
138	P	SENSOR POWER SUPPLY
139	BG	BATTERY CURRENT SENSOR
140	W	BATTERY TEMPERATURE SENSOR
141	G	SENSOR GROUND
142	GR	IGNITION SWITCH
143	P	FUEL PUMP CONTROL MODULE (PCM) CHECK
144	LG	FUEL TANK PRESSURE SENSOR
146	L	REFRIGERANT PRESSURE SENSOR
147	BR	CAN COMMUNICATION LINE
150	V	ASC/BRAKE SWITCH
151	P	SENSOR GROUND
156	W	CAN COMMUNICATION LINE
158	P	POWER SUPPLY FOR ECM (BACK-UP) STOP LAMP SWITCH

CAN SYSTEM (WITH ICC)

< WIRING DIAGRAM >


[CAN]

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

CAN SYSTEM (WITH ICC)


Terminal No.	Color Of Wire	Signal Name [Specification]
151	Y	ENG COMMUNICATION LINE
152	W	ECM RELAY (EEP-SHU) C/P/F
153	BL	ECM COMMUNICATION LINE
154	BL	ECM COMMUNICATION LINE
155	BR	ENGINE STOP SIGNAL
156	BR	ENGINE STOP SIGNAL
157	SB	POWER SUPPLY FOR ECM
158	SB	POWER SUPPLY FOR ECM
159	SB	POWER SUPPLY FOR ECM
172	R	THROTTLE CONTROL MOTOR POWER SUPPLY
173	R	THROTTLE CONTROL MOTOR POWER SUPPLY
174	B	ECM GROUND
175	B	ECM GROUND

Terminal No.	Color Of Wire	Signal Name [Specification]
M181	W	WIRE TO WIRE

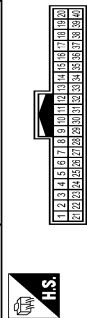


Terminal No.	Color Of Wire	Signal Name [Specification]
2	R	-
3	B	-
5	R	-
6	BR	-
7	L	-
8	B	-
10	W	-
11	LG	-
12	SB	-
14	SB	-
15	BR	-
16	V	-
18	G	-
22	BG	-
23	B	-
25	W	-
30	R	-
31	BR	-
32	L	-
33	P	-
34	LG	-
35	W	-
36	LG	-
37	L	-

Terminal No.	Color Of Wire	Signal Name [Specification]
M182	W	WIRE TO WIRE

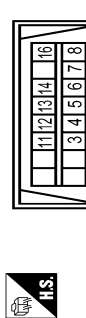

Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	M-CAN_L
4	B	EARTH
5	B	EARTH
6	L	CAN-H
7	V	KLING
8	LG	IGN_SW
11	SB	M-CAN_H
12	P	CAN-L
13	L	CAN-H
14	P	CAN-L
16	W	POWER

Terminal No.	Color Of Wire	Signal Name [Specification]
M210	W	WIRE TO WIRE

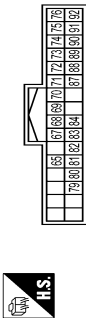


Terminal No.	Color Of Wire	Signal Name [Specification]
65	V	PARKING BRAKE SIGNAL
67	R	COMPOSITE IMAGE SIGNAL
68	W	COMPOSITE IMAGE SIGNAL
69	G	I-KEY IDENTIFICATION SIGNAL
70	P	-
71	SHIELD	MICROPHONE SHIELD
72	G	MICROPHONE VCC
73	BR	COMM (CONT->SDSP)
74	P	CAN-L

Terminal No.	Color Of Wire	Signal Name [Specification]
75	LG	AV COMM (L)
76	LG	AV COMM (L)
78	SB	ENGINE STOP SIGNAL
79	SB	ENGINE STOP SIGNAL
80	SB	ENGINE STOP SIGNAL
81	R	VEHICLE SPEED SIGNAL (8-PULSES)
82	R	SHIELD
83	R	SHIELD
84	B	COMPOSITE IMAGE SYNC SIGNAL
87	B	MICROPHONE SIGNAL
88	Y	SHIELD
90	L	COMM (DSP->CONT)
91	SB	AV COMM (H)
92	SB	AV COMM (H)



Terminal No.	Color Of Wire	Signal Name [Specification]
M216	W	WIRE TO WIRE

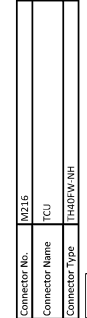


Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	BATTERY POWER SUPPLY
2	B	BATTERY POWER SUPPLY
3	SB	ACF POWER SUPPLY
4	W	IGNITION SIGNAL
5	V	ACC OUTPUT
6	P	GROUND
7	B	CAN-H
9	L	CAN-L
10	P	CAN-L
18	G	MICROPHONE VCC
19	R	MICROPHONE SHIELD
20	SHIELD	MICROPHONE SHIELD
21	G	MICROPHONE SIGNAL
22	R	MICROPHONE SIGNAL
23	SHIELD	MICROPHONE SHIELD
34	G	SOS CALL SWITCH SIGNAL
35	BR	SOS SWITCH LED SIGNAL

Terminal No.	Color Of Wire	Signal Name [Specification]
M17	W	WIRE TO WIRE



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	Y	-
3	W	-
4	R	-
5	L	-
6	B	-
7	R	-
8	P	-
9	B	-
10	V	-
11	BR	-
12	G	-
13	L	-
20	R	-
21	R	-
22	G	-
23	G	-
24	LG	-

Terminal No.	Color Of Wire	Signal Name [Specification]
M18	W	WIRE TO WIRE

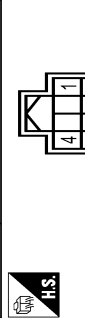

CAN SYSTEM (WITH ICC)

< WIRING DIAGRAM >

[CAN]

CAN SYSTEM (WITH ICC)

Terminal No.	Color/Code	Signal Name (Specification)
4	B	GROUND
5	B	15VCOMMON
7	G	IGNITION
8	Y	15VCOMMON

JRMW16276GB

CAN SYSTEM (WITHOUT ICC)

[CAN]


< WIRING DIAGRAM >

CAN SYSTEM (WITHOUT ICC)

Wiring Diagram

INFOID:000000012355317

CAN SYSTEM (WITHOUT ICC)

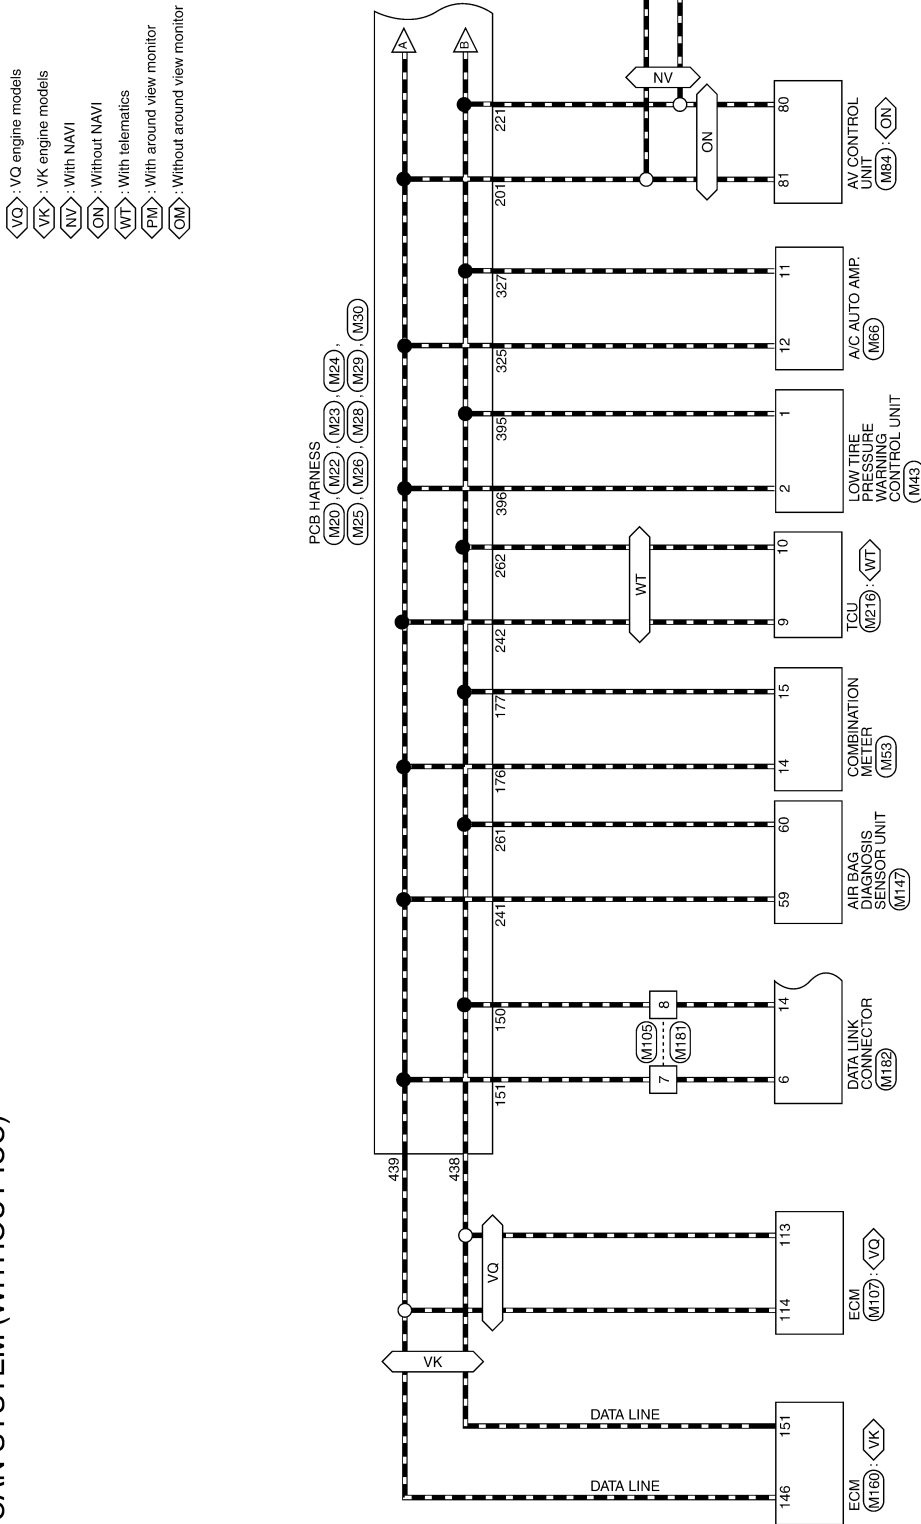

*: This connector is not shown in "Harness Layout".

2015/09/02


JRMW16277GB

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

CAN SYSTEM (WITHOUT ICC)

< WIRING DIAGRAM >

[CAN]

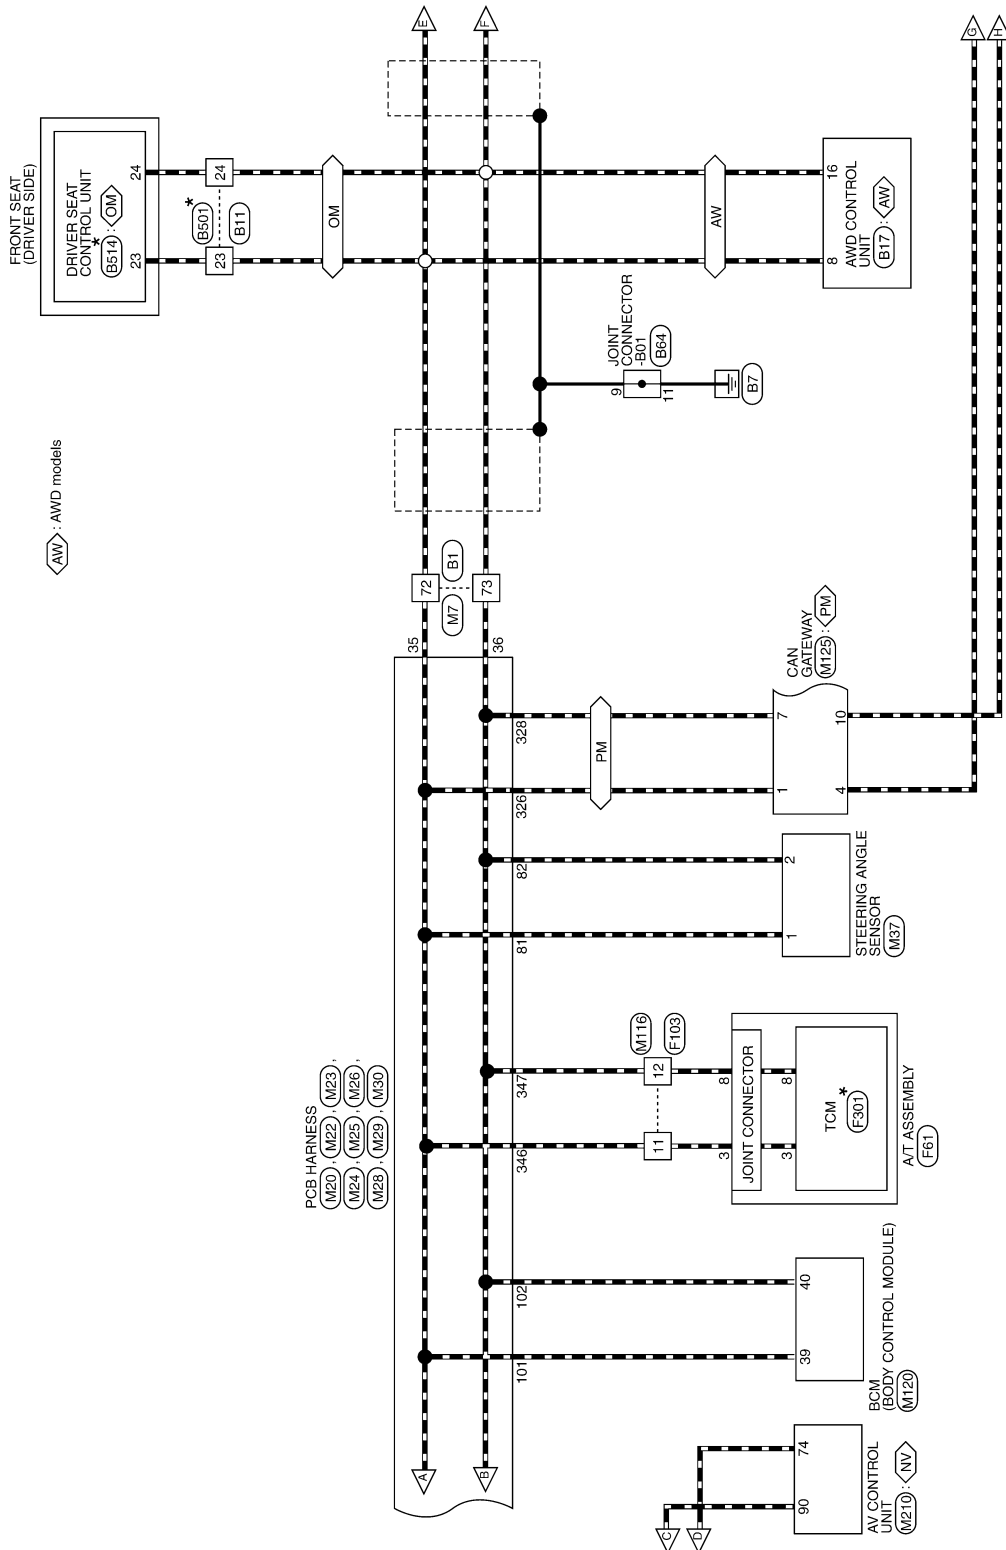


JRMW16278GB

CAN SYSTEM (WITHOUT ICC)

< WIRING DIAGRAM >

[CAN]

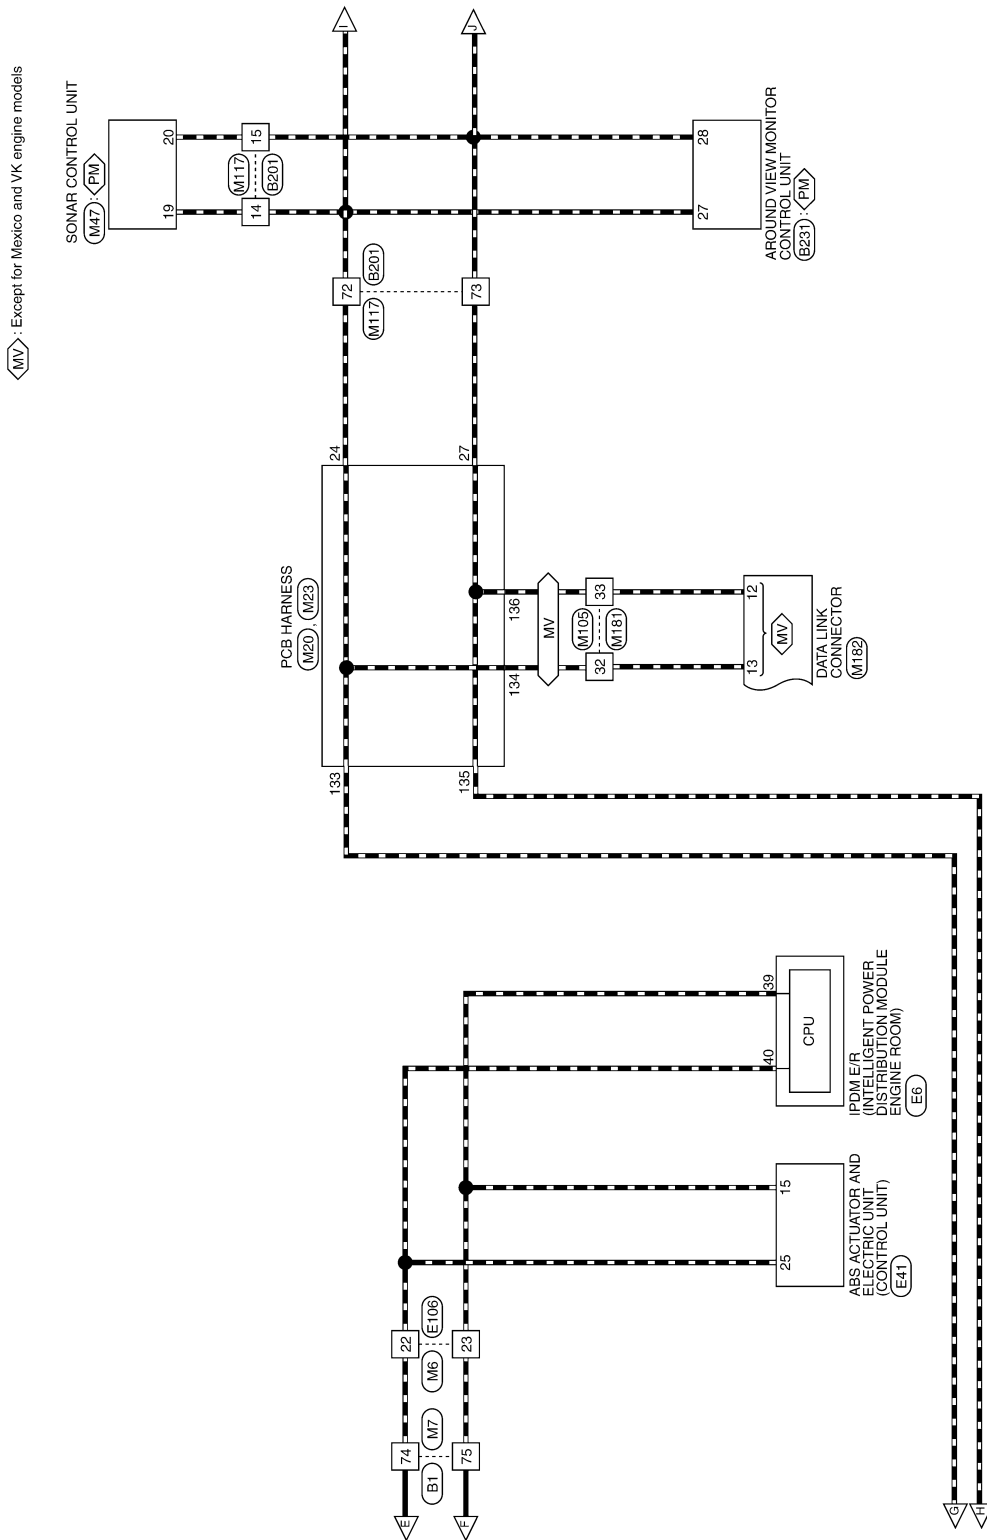


JRMW16279GB

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

CAN SYSTEM (WITHOUT ICC)

< WIRING DIAGRAM >

[CAN]

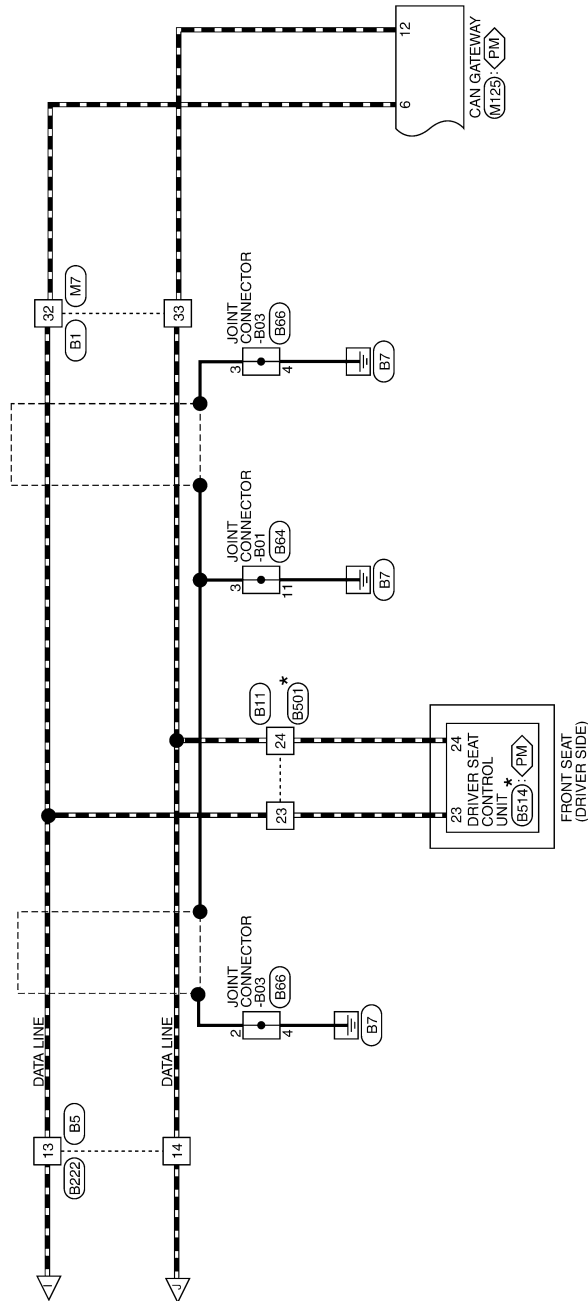

JRMW16280GB


CAN SYSTEM (WITHOUT ICC)

< WIRING DIAGRAM >

[CAN]

CAN SYSTEM (WITHOUT ICC)

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	T188FW-C31P-TM4

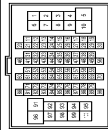

Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	W	-
4	LG	-
5	P	-
7	GR	-
8	Y	-
9	LG	-
10	V	-
11	GR	-
11	L	- [With climate controlled seat]
12	GR	- [With heated seat]
12	P	- [With climate controlled seat]
13	BR	-
14	R	-
15	O	-
16	B	-
18	R	-
19	W	-
20	L	-
21	B	-
22	LG	-
23	V	-
24	Y	-
25	G	-
26	GR	-
27	SB	-
28	L/O	-
29	W/L	-
30	SHIELD	-
32	L	-
33	R	-
36	G	-
37	SB	-
40	SHIELD	-

Connector No.	B5
Connector Name	WIRE TO WIRE
Connector Type	T124RW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	W	-
6	B	-
7	R	-
8	SHIELD	-
9	G	-
12	V	-
13	L	-
14	R	-
15	B	-
16	SHIELD	-
17	R	-
18	G	-
19	W	-
24	SB	-

Connector No.	B11
Connector Name	WIRE TO WIRE
Connector Type	NS16FW-C5



Terminal No.	Color Of Wire	Signal Name [Specification]
1	SB	-
2	B	-
24	P	- [Without CAN gateway]

24	R	- [With CAN gateway]
25	BR	-
26	W	-
28	P	-
29	O	-
30	V	-
31	BR	-
32	LG	-
35	LG	-
40	O	-
41	B	-

Connector No.	B17
Connector Name	AVD CONTROL UNIT
Connector Type	T116RW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	AVD_SCL (+)
2	R	AVD_SCL (-)
3	W	FLUID_TEMP (-)
4	L	AVD_SCL (+)
8	L	CAN_M
9	SB	AVD_SCL_BAT
10	B/V	GND
11	B/V	GND
13	LG	FLUID_TEMP (+)
15	G	BATTERY_POWER_SUPPLY
16	P	CAN-L

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN


CAN SYSTEM (WITHOUT ICC)

< WIRING DIAGRAM >

[CAN]

CAN SYSTEM (WITHOUT ICC)

Connector No.	B64
Connector Name	JOINT CONNECTOR-BD1
Connector Type	B32P5N

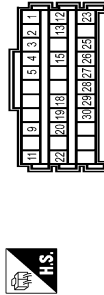

Terminal No.	Color Of Wire	Signal Name [Specification]
1	SHIELD	-
2	SHIELD	-
3	SHIELD	-
4	SHIELD	-
5	SHIELD	-
9	SHIELD	-
11	B	-
12	SHIELD	-
13	SHIELD	-
15	SHIELD	-
18	SHIELD	-
19	SHIELD	-
20	BR	-
22	GR	-
23	P	-
26	P	-
27	P	-
28	P	-
29	L	-
30	L	-

Connector No.	B65
Connector Name	JOINT CONNECTOR-B03
Connector Type	T100PWFJ



Terminal No.	Color Of Wire	Signal Name [Specification]
1	SHIELD	-
2	SHIELD	-
3	SHIELD	-
4	B	-

Connector No.	B201
Connector Name	WIRE TO WIRE
Connector Type	T180MW-C516TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
3	R	-
6	R	-
7	W	-
8	V	-
11	R	-
12	G	-
13	Y	-
14	L	-
15	R	- [Without ADAS]
17	GR	- [With ADAS]
18	P	-
19	BR	-
20	GR	-
21	Y	-

53	GR	-
54	GR	-
55	L	-
56	W	-
57	O	-
58	Y	-
89	BR	-
90	L	-
91	BR	-
93	O	- [With heated seat]
94	GR	- [With climate controlled seat]
96	W	-
97	P	-
98	L	-
99	L	-
100	Y	-

Connector No.	B222
Connector Name	WIRE TO WIRE
Connector Type	T124FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	B	-
6	R	-
7	G	-
8	SHIELD	-
9	W	-
12	P	-
13	L	-
14	R	-
15	B	-
16	SHIELD	-
17	R	-
18	G	-
19	W	-
24	SB	-

32	GR	-
33	V	-
34	V	-
35	B	-
36	W	-
37	O	-
38	V	-
39	P	-
40	O	-
41	BR	-
42	V	-
43	W/R	-
44	W	-
45	SB	-
46	R	- [With climate controlled seat]
47	Y	- [With heated seat]
48	G	- [With climate controlled seat]
49	V	- [With heated seat]
50	R	-
51	GR	-
52	LG	-
53	P	-
56	P	-
57	W	-
58	O	-
59	W	-
61	SB	-
62	SB	-
63	W	-
64	SB	-
65	LG	-
66	L	-
67	Y	-
68	SB	-
69	B	-
71	L	-
72	L	-
73	L	-
74	B	-
75	L	-
76	SHIELD	-
77	G	-
78	R	-
79	P	-
80	G	-
81	O	-
82	BR	-


CAN SYSTEM (WITHOUT ICC)

< WIRING DIAGRAM >

[CAN]


CAN SYSTEM (WITHOUT ICC)

Connector No.	B231
Connector Name	AROUND VIEW MONITOR CONTROL UNIT
Connector Type	TH46FW-NH

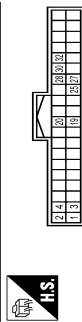

Terminal No.	Color Of Wire	Signal Name [Specification]
1	B/R	GROUND
2	Y	BATTERY POWER SUPPLY
3	W	IGNITION SIGNAL
4	V	ACC-POWER SUPPLY
19	SB	AV COMMUNICATION SIGNAL (H)
20	LG	AV COMMUNICATION SIGNAL (L)
25	B	REVERSE SIGNAL
27	L	CAN-H
28	R	CAN-L (WITHOUT ADAS)
28	Y	CAN-L (WITH ADAS)
30	SB	RETRACT MOTOR OPERATION SIGNAL (OPEN)
32	P	RETRACT MOTOR OPERATION SIGNAL (CLOSE)

Connector No.	B501
Connector Name	WIRE TO WIRE
Connector Type	HS16AW-CS

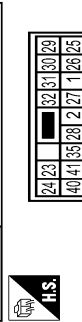

Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	B	-
23	P	-
24	P/L	-
25	G/O	-
26	L/O	-
27	V	-

29	L	-
30	BR	-
31	RY/Y	-
32	W/V	-
40	N/G	-
41	GR	-

Connector No.	B514
Connector Name	DRIVER SEAT CONTROL UNIT
Connector Type	TH32FW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
11	G/B	SLIDE SW (BACKWARD)
12	G/W	SLIDE SW (FORWARD)
13	R/G	RECLINER SW (BACKWARD)
14	R/W	RECLINER SW (FORWARD)
15	Y/B	REAR LIFTER SW (DOWNWARD)
16	Y/R	REAR LIFTER SW (UPWARD)
17	G/B	FRONT LIFTER SW (DOWNWARD)
18	G/R	FRONT LIFTER SW (UPWARD)
20	R/Y	PULSE (REAR LIFTER)
21	Y	PULSE (FRONT LIFTER)
22	R	PULSE (FRONT LIFTER)
23	P	CAN-L
24	P/L	CAN-H
25	G/O	IND 1
26	L/O	IND 2
27	V	ADDRESS 1
28	V/W	ADDRESS 2
29	L	SET SW
30	BR	PULSE(TLT)
31	BR/W	PULSE(TELESCOPIC)
32	W/L	UART (TX/RX)
33	W	POWER SUPPLY (ENCODER)

Connector No.	E6
Connector Name	ARMY INTELLIGENCE POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	TH08FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
39	P	CAN-L
40	L	CAN-H
41	B	S-GND
42	V	MOTOR_FAN_RLY_CONT (WITH M56 engine)
42	Y	MOTOR_FAN_RLY_CONT (WITH VQ37 engine)
43	SB	DETENT_SW
44	GR	HORN_RLY (WITH M56 engine)
44	LG	HORN_RLY (WITH VQ37 engine)
45	G	HORN_SW
46	BR	START_CONT


Connector No.	E41
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	S423DF-S24-U

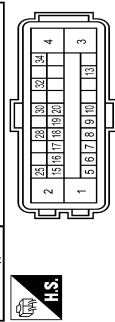

Terminal No.	Color Of Wire	Signal Name [Specification]
1	B/W	ECU(GND)
2	B	MOTOR(GND)
3	Y	SOLENOID(POWER)
4	G	MOTOR(POWER)
5	SB	STOP_LAMP_SW
6	Y	CANM2(-)
7	W	RH-LH-SEN(SIGNAL)
8	G	RH-LH-SEN(POWER)
9	BR	FR-RH-SEN(SIGNAL)
10	B	FR-RH-SEN(POWER)

13	LG	VAC-SEN(SIGNAL)
15	P	CAN-L
16	Y	CAN-H
18	BR	FR-LH-SEN(SIGNAL)
18	BR	FR-LH-SEN(POWER)
19	SB	FR-LH-SEN(SIGNAL)
20	Y	FR-LH-SEN(POWER)
25	L	CAN-H
28	V	VAC-SEN(POWER)
30	R	VAC-OFF SW
32	SHIELD	VAC-SEN(GND)
34	G	IGN(POWER)

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH80P-W-C516-TM4

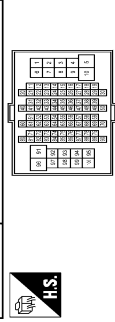

Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	W	-
3	SB	-
4	Y	-
5	G	-
6	W	-
7	GR	-
8	G	-
9	Y	-
10	BR	-
11	SB	-
12	L	-
13	GR	-
14	GR	-
15	V	-
16	Y	-
17	GR	-
18	V	-
20	BR	-
21	P	-
22	L	-
23	P	-

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

CAN SYSTEM (WITHOUT ICC)

< WIRING DIAGRAM >

[CAN]

CAN SYSTEM (WITHOUT ICC)

Terminal No.	Color Of Wire	Signal Name [Specification]
77	SHIELD	
78	W/O	
79	BR	
80	V	
81	BR	
82	GR	
83	GR	
84	Y	
85	Y	
86	L	
87	V	
88	BR	
89	LG	
90	W	
91	W	
92	P	


Terminal No.	Color Of Wire	Signal Name [Specification]
93	LG	
94	BR	
95	W	
96	G	
97	Y	
98	V	
99	V	
100	V	

Connector No. F61
 Connector Name A17 ASSEMBLY
 Connector Type RK10FG-DGY




Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	POWER SUPPLY (BACK-UP)
2	R	POWER SUPPLY (BACK-UP)
3	L	CAN-H
4	V	K-LINE
5	B	GND (IG)
6	G	POWER SUPPLY (IGN)
7	SP	BACK-UP-RELAY
8	SP	CAN
9	BR	24V SIGNAL
10	B	GROUND

Connector No. F103
 Connector Name WIRE TO WIRE
 Connector Type TK36FWANS10

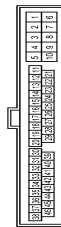

Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	
2	G	
3	G	
4	B	
5	R	
6	B	
7	GR	
8	Y	
9	SB	
10	BR	
11	L	
12	P	
13	V	
14	SB	
15	R	
16	W	
17	GR	
18	LG	
21	LG	
22	B	
23	G	
24	BR	
25	D	


Connector No. F303
 Connector Name TCM
 Connector Type SP10FEG

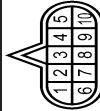

Terminal No.	Color Of Wire	Signal Name [Specification]
1	-	VIGN
2	-	BATT
3	-	CAN-H
4	-	K-LINE
5	-	GND
6	-	VIGN
7	-	REV LAMP RLY

Terminal No.	Color Of Wire	Signal Name [Specification]
8	-	CAN-L
9	-	STGRT RLY
10	-	GND

Connector No. M5
 Connector Name WIRE TO WIRE
 Connector Type TH80MMV-CSI6-TM4

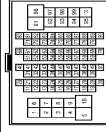

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	
2	W	
3	SB	
4	LG	
5	W	
6	W	
7	BG	
8	G	
9	Y	
10	W	
11	V	
12	V	
13	LG	
14	L	
15	V	
16	B	
17	GR	
18	V	
20	SB	
21	BR	
22	L	
23	P	
27	SHIELD	
28	V	
29	SB	
31	BG	
32	P	
33	R	
34	BG	
36	V	
37	G	

CAN SYSTEM (WITHOUT ICC)

< WIRING DIAGRAM >

[CAN]

CAN SYSTEM (WITHOUT ICC)

41	BR	-	-	-	-
44	BR	-	-	-	-
45	LG	-	-	-	-
46	LG	-	-	-	-
47	BR	-	-	-	-
48	G	-	-	-	-
49	RG	-	-	-	-
50	W	-	-	-	-
54	W	-	-	-	-
55	G	-	-	-	-
60	GR	-	-	-	-
61	B	-	-	-	-
62	LG	-	-	-	-
63	BR	-	-	-	-
64	L	-	-	-	-
64	SR	-	-	-	-
65	R	-	-	-	-
65	Y	-	-	-	-
66	P	-	-	-	-
67	L	-	-	-	-
68	R	-	-	-	-
69	SHIELD	-	-	-	-
70	B	-	-	-	-
71	W	-	-	-	-
72	R	-	-	-	-
73	G	-	-	-	-
74	Y	-	-	-	-
75	B	-	-	-	-
75	SHIELD	-	-	-	-
76	B	-	-	-	-
76	V	-	-	-	-
78	G	-	-	-	-
80	G	-	-	-	-
82	B	-	-	-	-
83	RG	-	-	-	-
84	SR	-	-	-	-
85	Y	-	-	-	-
86	L	-	-	-	-
87	V	-	-	-	-
88	V	-	-	-	-
89	LG	-	-	-	-
90	RG	-	-	-	-
91	W	-	-	-	-
92	RG	-	-	-	-
93	G	-	-	-	-
94	Y	-	-	-	-
95	W	-	-	-	-
97	SR	-	-	-	-
98	R	-	-	-	-
99	W	-	-	-	-
100	L	-	-	-	-


Connector No.	M7
Connector Name	WIRE TO WIRE
Connector Type	TH80MIV-C3.5E-TM4



Terminal No.	Color Of Wire	Signal Name (Specification)
1	G	-
2	Y	-
4	BR	-
5	P	-
7	G	-
8	Y	-
9	G	-
10	V	-
11	L	- [With heated seat]
11	V	- [With climate controlled seat]
12	GR	- [With heated seat]
12	P	- [With climate controlled seat]
13	BR	-
14	GR	-
15	RG	-
16	V	-
18	RG	-
19	Y	- [Without CAN gateway]
19	W	- [With CAN gateway]
20	L	-
21	B	-
22	LG	-
23	W	-
24	V	-
25	G	-
26	BR	-
27	SR	-
28	P	-
29	L	-
30	SHIELD	-
32	L	-
33	P	-
36	RG	-
37	SR	-
41	SR	-

42	V	-	-
43	L	-	-
44	P	-	-
45	LG	-	-
46	BR	-	-
49	V	-	-
50	V	-	-
51	H	-	-
52	P	-	-
53	RG	-	-
56	SR	-	-
57	P	-	-
58	LG	-	-
59	Y	-	-
60	GR	-	-
61	B	-	-
62	LG	-	-
63	BR	-	-
65	W	-	-
66	R	-	-
67	V	-	-
68	LG	-	-
69	SR	-	-
70	V	-	-
72	L	-	-
73	P	-	-
74	L	-	-
75	P	-	-
75	G	-	-
76	G	-	-
78	SR	-	-
79	SR	-	-
82	GR	-	-
83	RG	-	-
84	B	-	-
85	W	-	-
86	G	-	-
87	R	-	-
88	G	-	-
91	W	-	-
92	G	-	-
96	W	-	-
97	RG	-	-
98	Y	-	-
99	LG	-	-

Connector No.	M20
Connector Name	PCB HARNESS
Connector Type	TH40P8-AM

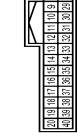

Terminal No.	Color Of Wire	Signal Name (Specification)
1	B	-
2	B	-
3	Y	-
4	G	-
5	R	-
6	W	-
11	BR	-
12	R	-
15	B	-
16	SHIELD	-
17	R	-
18	P	-
19	W	-
21	B	-
22	R	-
22	Y	- [Without ICC]
23	Y	- [Without ICC]
24	SR	- [Without ICC]
24	SR	- [Without ICC]
27	P	-
31	V	-
33	V	-
35	L	-
36	P	-
38	L	-
40	Y	-

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN


CAN SYSTEM (WITHOUT ICC)

< WIRING DIAGRAM >

[CAN]

CAN SYSTEM (WITHOUT ICC)

Connector No.	M22
Connector Name	PCB HARNESS
Connector Type	TH40FB-NH

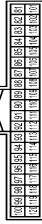

Terminal No.	Color Of Wire	Signal Name [Specification]
81	L	-
82	P	-
83	B	-
84	B	-
85	B	-
86	B	-
87	B	-
88	B	-
89	Y	-
91	V	-
92	V	-
93	B	-
94	B	-
95	B	-
96	LG	-
97	BR	-
98	G	-
99	G	-
100	LG	-
101	L	-
102	P	-
103	B	-
104	BR	-
105	R	-
107	Y	-
108	Y	-
109	BR	-
110	Y	-
112	B	-
113	P	-
114	L	-
116	B	-
117	B	-
118	B	-
119	LG	-

Connector No.	M23
Connector Name	PCB HARNESS
Connector Type	TH40FB-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
121	R	-
122	V	-
123	BG	-
124	BG	-
126	B	-
131	SB	-
132	LG	-
133	L	-
134	L	-
135	P	-
136	P	-
137	Y	-
138	Y	-
139	W	-
140	W	-
142	W	-
144	P	-
145	B	-
146	LG	-
147	B	-
149	B	-
150	P	-
151	L	-
152	B	-
153	W	-
154	W	-
155	W	-
157	W	-
158	R	-
159	R	-
160	SB	-

Connector No.	M24
Connector Name	PCB HARNESS
Connector Type	TH40FB-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
161	BG	-
162	BG	-
164	V	-
165	V	-
166	R	-
167	LG	-
169	R	-
171	BG	-
172	B	-
174	W	-
176	L	-
177	P	-
178	Y	-
179	L	-
180	LG	-
182	Y	-
183	R	-
184	G	-
184	V	-
185	P	-
186	R	-
187	L	-
187	Y	-
188	L	-
189	B	-
190	V	-
191	LG	-
192	B	-
193	SB	-
194	BR	-
195	SB	-
198	R	-
199	B	-
200	SB	-

Connector No.	M25
Connector Name	PCB HARNESS
Connector Type	TH40FB-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
201	L	-
206	P	-
207	Y	-
208	G	-
209	G	-
210	L	-
210	L	-
210	P	-
211	SHIELD	-
212	BR	-
212	G	-
213	R	-
214	SHIELD	-
215	GR	-
216	G	-
216	LG	-
217	LG	-
217	SHIELD	-
218	BR	-
218	P	-
219	GR	-
219	V	-
220	SHIELD	-
221	P	-
222	LG	-
223	SB	-
224	SB	-
225	LG	-
226	R	-
229	SB	-
230	BR	-
231	SB	-
232	V	-
233	L	-
234	P	-
235	B	-

CAN SYSTEM (WITHOUT ICC)


< WIRING DIAGRAM >

[CAN]

CAN SYSTEM (WITHOUT ICC)

239	V	-	-
240	W	-	-


Connector No.	M25
Connector Name	PCB HARNESS
Connector Type	TH40PW-NH

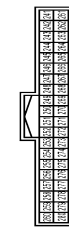

Terminal No.	Color Of Wire	Signal Name [Specification]
241	L	-
242	L	-
243	R	- [With ICC]
243	Y	- [Without ICC]
244	L	- [With ICC]
244	SB	- [Without ICC]
245	B	-
246	B	-
247	B	-
248	SHIELD	-
251	SHIELD	-
252	B	-
253	B	-
254	W	-
255	W	- [With CAN controller reset]
255	W	- [With CAN controller reset]
258	R	-
259	L	-
260	BG	-
261	P	-
262	P	-
267	P	-
268	Y	-
269	G	-
270	Y	-
271	BR	-
272	G	-
273	R	-
274	R	-
275	Y	-
276	B	-
277	G	-

278	R	-	-
279	R	-	-
280	Y	-	-

Connector No.	M28
Connector Name	PCB HARNESS
Connector Type	TH40PW-NH

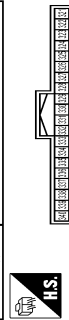


Terminal No.	Color Of Wire	Signal Name [Specification]
321	V	-
322	V	-
324	B	-
325	L	-
326	L	-
327	P	-
328	P	-
330	B	-
331	V	-
332	V	-
333	B	-
334	W	-
338	W	-
343	L	-
344	S	-
345	Y	-
346	L	-
347	P	-
348	GR	-
349	V	-
350	LG	-
351	P	-
352	R	-
353	P	-
358	W	-
359	W	-
360	G	-

Connector No.	M29
Connector Name	PCB HARNESS
Connector Type	TH40FB-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
361	W	-
363	Y	-
366	B	-
367	B	-
368	G	-
374	BG	-
375	BG	-
376	V	-
377	V	-
378	B	-
380	R	-
381	G	-
382	V	-
384	GR	-
385	P	-
386	P	-
400	V	-

Connector No.	M30
Connector Name	PCB HARNESS
Connector Type	TH40PW-NH

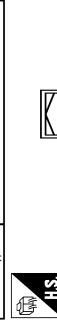

Connector No.	M37
Connector Name	STEERING ANGLE SENSOR
Connector Type	TH08FW-NH

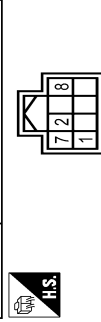

Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	CAN-H
2	P	CAN-L
7	B	GND
8	G	IGN

Terminal No.	Color Of Wire	Signal Name [Specification]
402	R	-
403	R	-
405	S	-
407	V	-
408	B	-
409	B	-
410	B	-
411	B	-
413	Y	-
414	BR	-
416	LG	-
417	B	-
419	SB	-
420	SHIELD	-
422	V	-
427	P	-
428	V	-
429	P	-
430	LG	-
431	B	-
432	Y	-
435	V	-
436	BG	-
437	B	-
438	P	-
439	L	-
440	B	-

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

JRMW16287GB


CAN SYSTEM (WITHOUT ICC)

< WIRING DIAGRAM >


[CAN]

CAN SYSTEM (WITHOUT ICC)

Connector No.	M63
Connector Name	LOW TIRE PRESSURE WARNING CONTROL UNIT
Connector Type	TH23FW-NH

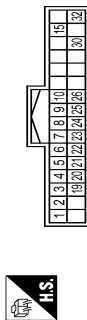


Connector No.	M47
Connector Name	SONAR CONTROL UNIT
Connector Type	TH23FW-NH

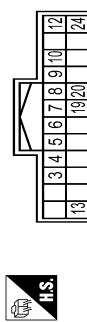

Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	CAN-L
2	L	CAN-H
3	W	RR TUNER (SIG)
4	B	FR TUNER (SIG)
5	B	FR TUNER (SIG)
6	G	RR TUNER (VCC)
7	R	FR TUNER (VCC)
8	W	RR TUNER (VCC)
9	W	FR TUNER (VCC)
10	W	FL TUNER (VCC)
15	Y	IGN
19	G	RR TUNER (RSS)
20	G	RL TUNER (RSS)
21	G	FR TUNER (RSS)
22	W	RR TUNER (RSS)
23	W	FR TUNER (RSS)
24	R	RR TUNER (GND)
26	B	FR TUNER (GND)
30	G	BCM FLASHER
32	B	GND

Terminal No.	Color Of Wire	Signal Name [Specification]
13	V	ACC POWER SUPPLY
14	B	IGN
15	B	IGN
16	W	DRIVE MODE SELECT SW (STANDARD)
17	W	DRIVE MODE SELECT SW (SPORT)
24	W	DRIVE MODE SELECT SW (ECO)
25	G	DRIVE MODE SELECT SW (STANDARD)
26	Y	DRIVE MODE SELECT SW (SPORT)


Connector No.	M84
Connector Name	AV CONTROL UNIT
Connector Type	TH32FW-NH

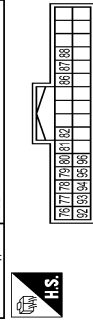

Terminal No.	Color Of Wire	Signal Name [Specification]
76	LG	AV COMM (L)
77	SB	AV COMM (H)
78	LG	AV COMM (L)
79	SB	AV COMM (H)
80	P	CAN-L
81	W	CAN-H
82	W	SP-GB
83	SH	SH-GB
84	L	TEL VOICE SIGNAL (L)
85	L	TEL VOICE SIGNAL (R)
86	R	VEHICLE SPEED SIGNAL (G-PULSE)
87	V	PARKING BRAKE SIGNAL
88	B	REVERSE SIGNAL
89	W	IGNITION SIGNAL
90	SB	DISK ELECT SIGNAL

Terminal No.	Color Of Wire	Signal Name [Specification]
7	SB	ENTER SWITCH SIGNAL
8	G	CRUISE CONTROL SWITCH SIGNAL (L)
9	G	ILLUMINATION CONTROL SWITCH SIGNAL (L)
10	GR	ILLUMINATION CONTROL SWITCH SIGNAL (L)
11	L	TRIP RESET SWITCH SIGNAL
12	B	GROUND
13	L	CAN-H
14	L	CAN-L
15	P	CAN-L
16	R	AIR BAG SIGNAL
17	G	LED HEADLAMP (RH) WARNING SIGNAL
18	V	LED HEADLAMP (LH) WARNING SIGNAL
23	B	GROUND
24	B	FUEL LEVEL SENSOR GROUND
25	W	ALTERNATOR SIGNAL
26	V	PARKING BRAKE SWITCH SIGNAL
27	V	BRAKE FLUID LEVEL SWITCH SIGNAL
28	G	SECURITY SIGNAL
29	L	WASHER LEVEL SWITCH SIGNAL
32	G	PADDLE SHIFTER DOWN SIGNAL
33	B	PADDLE SHIFTER UP SIGNAL
34	G	FUEL LEVEL SENSOR SIGNAL
35	W	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
36	G	PASSENGER SEAT BELT WARNING SIGNAL
37	G	NON-MANUAL MODE SIGNAL
38	V	MANUAL MODE SHIFT DOWN SIGNAL
39	L	MANUAL MODE SHIFT UP SIGNAL
40	W	MANUAL MODE SIGNAL


Connector No.	M86
Connector Name	A/C AUTO AMP
Connector Type	TH20FW-T86

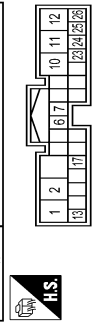

Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	BATTERY POWER SUPPLY
2	W	IGNITION POWER SUPPLY
6	R	BLOWER MOTOR F/B SIGNAL
7	L	POWER TRANSISTOR CONTROL SIGNAL
10	B	GROUND
11	P	CAN-L
12	L	CAN-H

Terminal No.	Color Of Wire	Signal Name [Specification]
3	R	CORNER SENSOR SIGNAL FRONT LH
4	W	CORNER SENSOR SIGNAL FRONT RH
5	W	CORNER SENSOR SIGNAL REAR LH
6	B	CORNER SENSOR SIGNAL REAR RH
7	G	CORNER SENSOR SIGNAL REAR LH
8	R	CORNER SENSOR SIGNAL REAR RH
9	Y	CORNER SENSOR SIGNAL FRONT LH
10	G	CORNER SENSOR SIGNAL FRONT RH
12	B	GROUND
13	LG	CAN-H
19	L	CAN-L (WITHOUT ICC)
20	R	CAN-L (WITH ICC)
24	B	GROUND

Connector No.	M82
Connector Name	COMBINATION METER
Connector Type	TH40FW-NH

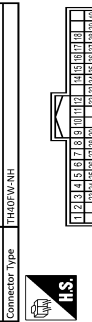

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	BATTERY POWER SUPPLY
2	B	IGNITION SIGNAL
3	GR	VEHICLE SPEED SIGNAL (Z-PULSE)
4	R	VEHICLE SPEED SIGNAL (R-PULSE)
5	B	ILLUMINATION CONTROL SIGNAL
6	B	METER CONTROL SWITCH GROUND

JRMW16288GB

CAN SYSTEM (WITHOUT ICC)

< WIRING DIAGRAM >

[CAN]


CAN SYSTEM (WITHOUT ICC)

Connector No.	M105
Connector Name	WIRE TO WIRE
Connector Type	TH80PW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
2	R	-
3	B	-
5	LG	-
6	P	-
7	L	-
8	P	-
9	B	-
10	W	-
11	W	-
12	SB	-
14	SB	-
15	BR	-
16	V	-
18	G	-
22	BG	-
23	B	-
26	R	-
31	BR	-
32	L	-
33	P	-
34	LG	-
35	W	-
36	LG	-
37	L	-

Connector No.	M107
Connector Name	ECM
Connector Type	RM24GF-RB-RH-Z

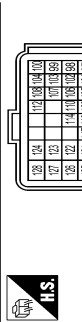

Terminal No.	Color Of Wire	Signal Name [Specification]
97	R	ACCELERATOR PEDAL POSITION SENSOR 1
98	Y	ACCELERATOR PEDAL POSITION SENSOR 2
99	G	SENSOR POWER SUPPLY (ACCELERATOR PEDAL POSITION SENSOR 1)
100	W	SENSOR GROUND (ACCELERATOR PEDAL POSITION SENSOR 1)
101	SB	ASCD STEERING SWITCH
102	P	FUEL TANK PRESSURE SENSOR
103	L	SENSOR POWER SUPPLY (ACCELERATOR PEDAL POSITION SENSOR 2)
104	B	SENSOR GROUND (Without ICC)
104	BR	SENSOR GROUND (With ICC)
105	LG	REFRIGERANT PRESSURE SENSOR
106	P	FUEL TANK TEMPERATURE SENSOR
107	BG	AVCC2 POPPET/PPHRES
108	Y	GND ASCD SW
109	BR	TRANSMISSION RANGE SWITCH
110	V	ENGINE SPEED SIGNAL OUTPUT
112	V	GND POPPET/PPHRES
113	P	GND POPPET/PPHRES
114	L	CAN COMMUNICATION LINE
117	V	DATA LINE CONNECTOR
121	G	EVAP CANISTER VENT CONTROL VALVE
122	P	STOP LAMP SWITCH
123	B	ECM GROUND
124	B	ECM GROUND
125	SB	POWER SUPPLY FOR ECM
126	BR	ASCD BRAKE SWITCH
127	B	ECM GROUND
128	B	ECM GROUND

Connector No.	M116
Connector Name	WIRE TO WIRE
Connector Type	TC36AW-NS10



Terminal No.	Color Of Wire	Signal Name [Specification]
2	SB	-
3	Y	-
4	B	- [With V656 engine]
4	SB	- [With V637 engine]
5	B	-
7	W	-
8	Y	-
9	SB	- [With V637 engine]
9	W	- [With V656 engine]
10	SB	-
11	L	-
12	P	-
13	V	-
14	R	-
15	B	-
16	SB	-
18	BR	-
21	V	-
22	LG	-
23	LG	-
25	BG	-
26	BG	-
27	R	-
28	V	-
29	P	-
30	B	-
31	G	-
32	Y	-
40	SHIELD	-
41	R	-
42	V	-
45	SB	-
46	BG	- [With heated seat]
46	G	- [With climate controlled seat]
47	G	- [With climate controlled seat]
47	GR	- [With heated seat]
48	V	-

Connector No.	M117
Connector Name	WIRE TO WIRE
Connector Type	TH80PW-C516-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
3	Y	-
6	R	-
7	W	-
8	V	-
11	R	-
12	G	-
13	W	-
14	L	-
15	R	- [Without ADAS]
15	Y	- [With ADAS]
17	GR	-
18	P	-
19	BR	-
20	GR	-
21	V	-
22	LG	-
23	LG	-
24	BG	-
25	BG	-
26	BG	-
27	R	-
28	V	-
29	P	-
30	B	-
31	G	-
32	Y	-
40	SHIELD	-
41	R	-
42	V	-
45	SB	-
46	BG	- [With heated seat]
46	G	- [With climate controlled seat]
47	G	- [With climate controlled seat]
47	GR	- [With heated seat]
48	V	-

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CAN SYSTEM (WITHOUT ICC)

CAN SYSTEM (WITHOUT ICC)

48	BG	-	-
49	BG	-	-
50	SB	-	-
51	W	-	-
52	W	-	-
53	W	-	-
54	B	-	-
55	B	-	-
56	B	-	-
57	G	-	-
58	R	-	-
59	W	-	-
60	LG	-	-
61	LG	-	-
62	V	-	-
63	R	-	-
64	SB	-	-
65	LG	-	-
66	L	-	-
67	Y	-	-
68	SB	-	-
69	B	-	-
70	L	-	-
71	L	-	-
72	L	-	-
73	P	-	-
74	B	-	-
75	L	-	-
76	SHIELD	-	-
77	G	-	-
78	R	-	-
79	L	-	-
80	G	-	-
81	BG	-	-
82	BG	-	-
83	BG	-	-
84	V	-	-
85	LG	-	-
86	V	-	-
87	R	-	-
88	Y	-	-
89	BR	-	-
90	L	-	-
91	Y	-	-
93	G	-	-
93	W	-	-
94	V	-	-
96	W	-	-
97	Y	-	-
98	BR	-	-
99	G	-	-
100	Y	-	-

Connector No.	M120
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH4P34-WH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	RR WINDOW DEF/RLY CONT
2	BG	COMBI SW INPUT 5
3	SB	COMBI SW INPUT 4
4	L	COMBI SW INPUT 3
5	G	COMBI SW INPUT 2
6	P	COMBI SW INPUT 1
8	V	POWER WINDOW SW COMM
9	P	STOP LAMP SW 1
11	R	RAIN SENSOR SERIAL LINK
14	W	OPTICAL SENSOR
16	SB	DIMMER SIGNAL
17	Y	SENSOR POWER SUPPLY
18	B	RECEIVER SENSOR GND
19	V	TURN SIGNAL OUTPUT (FRONT)
20	G	TURN SIGNAL OUTPUT (REAR)
21	B	W/S LOCK RECEIVER (BSI)
22	GR	W/S LOCK RECEIVER (BSI)
23	V	SECURITY INFO CONT
24	L	ENGINE LINK
25	G	MATS ANTAMP
26	G	IM KEY IDENTIFICATION
29	G	HAZARD SW
30	O	TRLD OPNR SW
31	W	DR DOOR UNLK SENSOR
32	BR	COMBI SW OUTPUT 5
33	R	COMBI SW OUTPUT 4
34	V	COMBI SW OUTPUT 3
35	Y	COMBI SW OUTPUT 2
36	LG	COMBI SW OUTPUT 1
37	R	P POSITION
39	L	CAN-H
40	P	CAN-L

Connector No.	M125
Connector Name	CAN GATEWAY
Connector Type	TH12P14-WH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	CAN-H
3	GR	BATTERY
4	L	CAN-H
5	B	GND
6	L	CAN-H
7	P	CAN-L
9	W	IGNITION
10	P	CAN-L
11	B	GND
12	P	CAN-L


Connector No.	M147
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT
Connector Type	HW28P4-EX



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	IGN
2	B	GND
3	Y	DRL (+)
4	Y	DRL (-) DRZ (-)
5	Y	DRZ (+)
6	Y	AS1 (+)
7	Y	AS2 (+)
8	Y	AS2 (+)
9	Y	AS2 (-)
18	SB	EC25 (+)

19	V	EC25 (-)
32	SHIELD	
33	W	R/R SW V/L
34	C	SEAT BELT
35	R	CUTOFF TELLTALE
51	G	SATELLITE RH2 (+)
52	R	SATELLITE RH2 (-)
53	P	SATELLITE RH2 (+)
54	L	SATELLITE RH2 (-)
57	L	UVCS
59	L	CAN-H
60	P	CAN-L

Connector No.	M160
Connector Name	ECM
Connector Type	MA85SF16-MERID-1H-Z

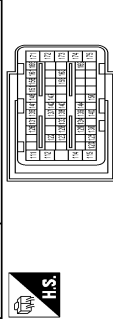

Terminal No.	Color Of Wire	Signal Name [Specification]
109	W	FUEL INJECTOR DRIVER POWER SUPPLY
111	W	FUEL INJECTOR DRIVER POWER SUPPLY
114	W	ECM GROUND
115	B	ECM GROUND
120	G	EVAP CANISTER VENT CONTROL VALVE
122	V	THROTTLE CONTROL MOTOR RELAY
123	BG	FUEL PUMP CONTROL MODULE (PCM)
125	P	THROTTLE CONTROL MOTOR RELAY
126	Y	ACCELERATOR PEDAL POSITION SENSOR 2
128	B	ASC-D STEERING SWITCH
129	B	SENSOR GROUND (Without ICC)
130	Y	SENSOR GROUND (With ICC)
131	L	SENSOR POWER SUPPLY
133	BG	SENSOR POWER SUPPLY
134	P	FUEL TANK TEMPERATURE SENSOR
136	R	ACCELERATOR PEDAL POSITION SENSOR 1
137	G	SENSOR POWER SUPPLY
138	P	BATTERY CURRENT SENSOR
139	BG	BATTERY TEMPERATURE SENSOR
140	W	SENSOR GROUND
141	G	IGNITION SWITCH

CAN SYSTEM (WITHOUT ICC)

< WIRING DIAGRAM >

[CAN]

CAN SYSTEM (WITHOUT ICC)

142	GR	FUEL PUMP CONTROL MODULE (FPM) CHECK
143	P	FUEL TANK PRESSURE SENSOR
144	LG	REFLECTOR MIRROR SENSOR
145	LG	CAN COMMUNICATION LINE
146	BR	ASD BRAKE SWITCH
147	W	SENSOR GROUND
150	V	CAN COMMUNICATION LINE
151	P	POWER SUPPLY FOR ECM (BACK-UP)
155	W	STOP LAMP SWITCH
158	P	ECM RELAY (SELF SHUT-OFF)
163	W	ENG COMMUNICATION LINE
166	BG	ENGINE SPEED SIGNAL OUTPUT
169	V	POWER SUPPLY FOR ECM
171	SB	POWER SUPPLY FOR ECM
172	SB	THROTTLE CONTROL MOTOR POWER SUPPLY
173	R	ECM GROUND
174	B	ECM GROUND
175	B	ECM GROUND

Connector No.	M181
Connector Name	WIRE TO WIRE
Connector Type	TH40NV-NH



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	R	-
3	B	-
4	BR	-
5	R	-
6	BR	-
7	L	-
8	P	-
9	B	-
10	W	-
11	LG	-
12	SB	-
14	SB	-
15	BR	-
16	V	-
18	G	-
22	BG	-
23	B	-

25	W	-
30	R	-
31	BR	-
32	P	-
34	LG	-
35	W	-
36	LG	-
37	L	-

Connector No.	M182
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----

Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	M/CAN_L
4	B	EARTH
5	B	EARTH
6	L	CAN-H
7	V	TUNE
8	LG	M/CAN_V
11	SB	M/CAN_V
12	SB	CAN-L
13	L	CAN-H
14	P	CAN-H
16	W	POWER

Connector No.	M210
Connector Name	AV CONTROL UNIT
Connector Type	TH32FW-NH



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color Of Wire	Signal Name [Specification]
65	V	PARKING BRAKE SIGNAL
67	R	COMPOSITE IMAGE SIGNAL GND
68	W	COMPOSITE IMAGE SIGNAL
69	G	I-KEY IDENTIFICATION SIGNAL
70	P	-
71	SHIELD	MICROPHONE SHIELD
72	G	MICROPHONE VCC
73	BR	COMM (CONT-SISP)
74	P	CAN-L
75	LG	AV COMM (L)
76	LG	DIMMER SIGNAL
79	SB	IGNITION SIGNAL
80	W	REVERSE SIGNAL
81	BG	VEHICLE SPEED SIGNAL (PULSE)
82	R	SHIELD
83	V	COMPOSITE IMAGE SYNC SIGNAL
84	R	MICROPHONE SIGNAL
88	SHIELD	SHIELD
89	Y	COMM (DISP-CONT)
90	L	CAN-H
91	L	AV COMM (H)
92	SB	AV COMM (H)

Connector No.	M216
Connector Name	TCU
Connector Type	TH40P1V-NH



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	BATTERY POWER SUPPLY
2	B	GROUND
3	SB	ACC POWER SUPPLY
4	W	IGNITION SIGNAL
5	V	ACC OUTPUT
6	P	GROUND
7	B	GROUND
9	L	CAN-H
10	P	CAN-L
18	G	MICROPHONE VCC
19	R	MICROPHONE SIGNAL
20	SHIELD	MICROPHONE SHIELD
21	G	MICROPHONE VCC
22	R	MICROPHONE SIGNAL
23	SHIELD	MICROPHONE SHIELD
34	G	50K CALL SWITCH SIGNAL
35	BR	50K SWITCH LED SIGNAL

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Interview Sheet

INFOID:0000000012355318

CAN Communication System Diagnosis Interview Sheet

Date received:

Type:

VIN No.:

Model:

First registration:

Mileage:

CAN system type:

Symptom (Results from interview with customer)

Condition at inspection

Error symptom : Present / Past

SKIB8898E

MALFUNCTION AREA CHART

< DTC/CIRCUIT DIAGNOSIS >

[CAN]


DTC/CIRCUIT DIAGNOSIS

MALFUNCTION AREA CHART

System Diagram

INFOID:0000000012355319

WITHOUT ICC SYSTEM

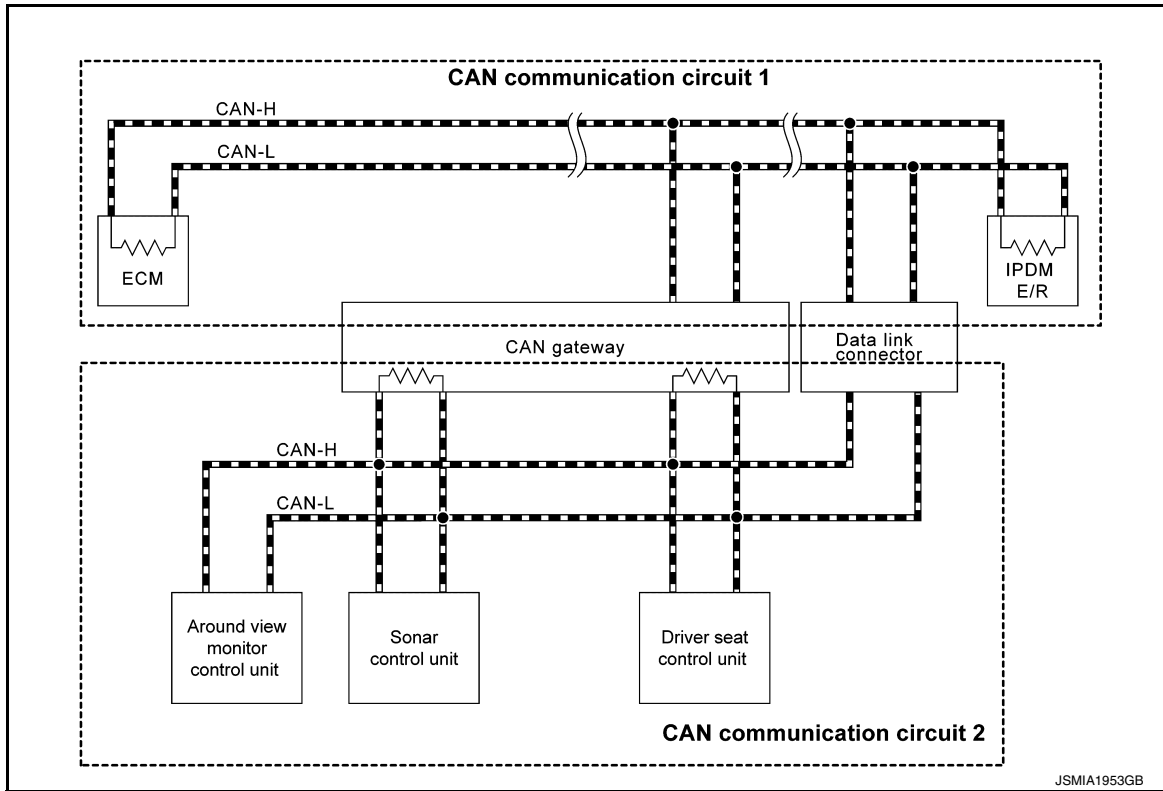

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P


LAN

MALFUNCTION AREA CHART

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

WITH ICC SYSTEM

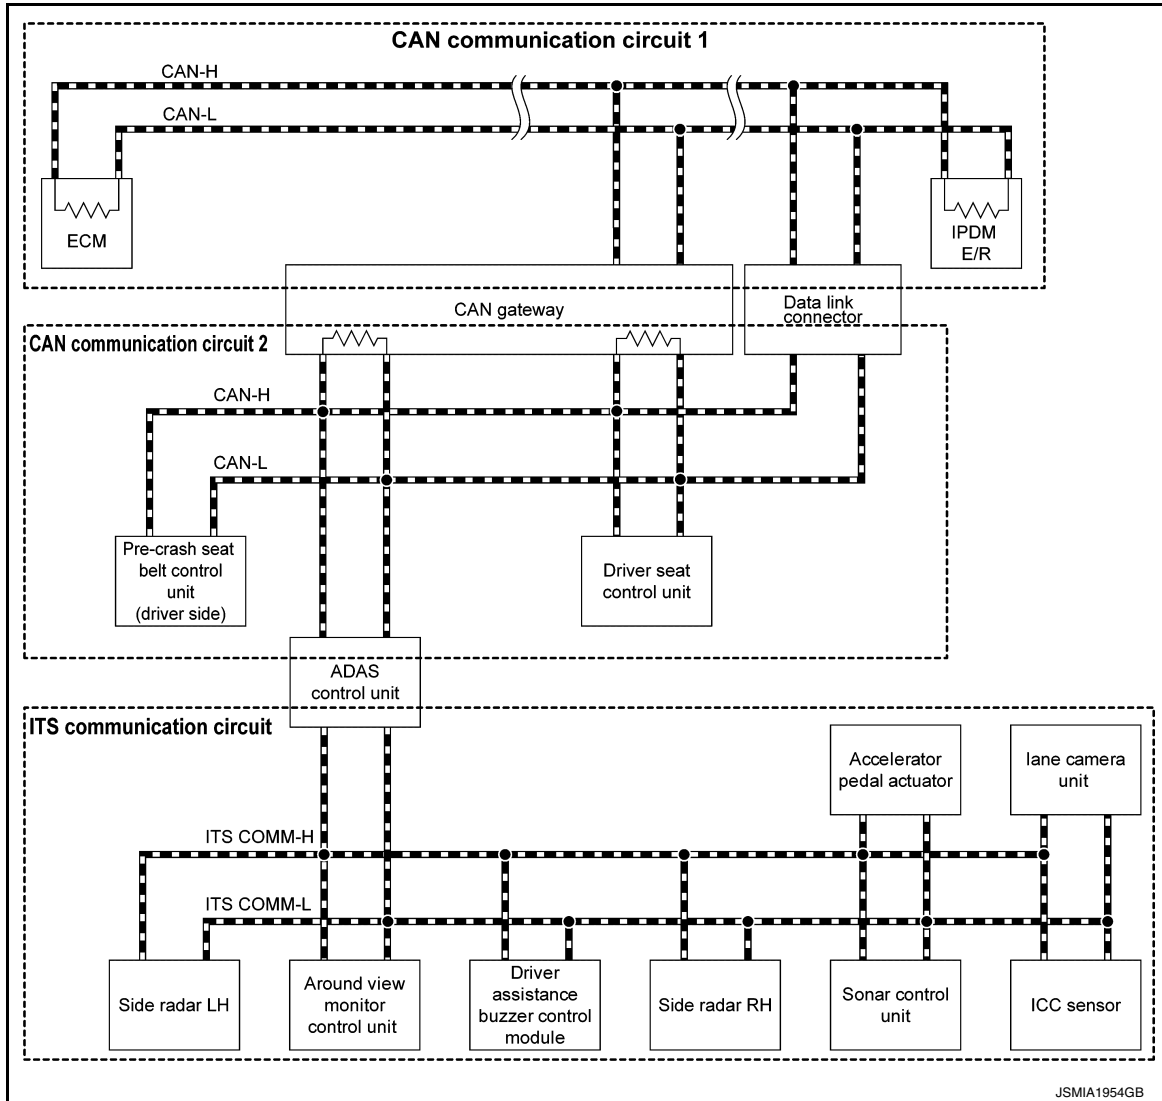

CAN Communication Circuit

INFOID:000000012355320

MAIN LINE

Malfunction area	Reference
Main line between data link connector and air bag diagnosis sensor unit	LAN-83. "Diagnosis Procedure"
Main line between air bag diagnosis sensor unit and combination meter	LAN-84. "Diagnosis Procedure"
Main line between combination meter and TCU	LAN-85. "Diagnosis Procedure"
Main line between combination meter and low tire pressure warning control unit	LAN-86. "Diagnosis Procedure"
Main line between TCU and low tire pressure warning control unit	LAN-87. "Diagnosis Procedure"
Main line between low tire pressure warning control unit and A/C auto amp.	LAN-88. "Diagnosis Procedure"
Main line between A/C auto amp. and AV control unit	LAN-89. "Diagnosis Procedure"
Main line between AV control unit and BCM	LAN-90. "Diagnosis Procedure"
Main line between BCM and TCM	LAN-91. "Diagnosis Procedure"
Main line between TCM and steering angle sensor	LAN-92. "Diagnosis Procedure"
Main line between steering angle sensor and driver seat control unit	LAN-93. "Diagnosis Procedure"
Main line between CAN gateway and AWD control unit	LAN-96. "Diagnosis Procedure"

MALFUNCTION AREA CHART

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

Malfunction area	Reference
Main line between CAN gateway and ABS actuator and electric unit (control unit)	LAN-98. "Diagnosis Procedure"
Main line between AWD control unit and ABS actuator and electric unit (control unit)	LAN-102. "Diagnosis Procedure"
Main line between driver seat control unit and ABS actuator and electric unit (control unit)	LAN-100. "Diagnosis Procedure"
Main line between data link connector and around view monitor control unit	LAN-104. "Diagnosis Procedure"
Main line between data link connector and ADAS control unit	LAN-106. "Diagnosis Procedure"
Main line between around view monitor control unit and driver seat control unit	LAN-105. "Diagnosis Procedure"

BRANCH LINE

Malfunction area	Reference
ECM branch line circuit	LAN-112. "Diagnosis Procedure"
Air bag diagnosis sensor unit branch line circuit	LAN-117. "Diagnosis Procedure"
Data link connector branch line circuit (CAN communication circuit 1)	LAN-115. "Diagnosis Procedure"
Data link connector branch line circuit (CAN communication circuit 2)	LAN-116. "Diagnosis Procedure"
Combination meter branch line circuit	LAN-118. "Diagnosis Procedure"
TCU branch line circuit	LAN-119. "Diagnosis Procedure"
AV control unit branch line circuit	LAN-122. "Diagnosis Procedure"
BCM branch line circuit	LAN-124. "Diagnosis Procedure"
CAN gateway branch line circuit (CAN communication circuit 2)	LAN-129. "Diagnosis Procedure"
A/C auto amp. branch line circuit	LAN-121. "Diagnosis Procedure"
Low tire pressure warning control unit branch line circuit	LAN-120. "Diagnosis Procedure"
CAN gateway branch line circuit (CAN communication circuit 1)	LAN-128. "Diagnosis Procedure"
Steering angle sensor branch line circuit	LAN-127. "Diagnosis Procedure"
TCM branch line circuit	LAN-125. "Diagnosis Procedure"
AWD control unit branch line circuit	LAN-130. "Diagnosis Procedure"
ABS actuator and electric unit (control unit) branch line circuit	LAN-131. "Diagnosis Procedure"
AFS control unit branch line circuit	LAN-132. "Diagnosis Procedure"
IPDM E/R branch line circuit	LAN-133. "Diagnosis Procedure"
Around view monitor control unit branch line circuit	LAN-134. "Diagnosis Procedure"
Sonar control unit branch line circuit	LAN-135. "Diagnosis Procedure"
Driver seat control unit branch line circuit	LAN-136. "Diagnosis Procedure"
ADAS control unit branch line circuit	LAN-137. "Diagnosis Procedure"
Pre-crash seat belt control unit (driver side) branch line circuit	LAN-138. "Diagnosis Procedure"

SHORT CIRCUIT

Malfunction area	Reference
CAN communication circuit (Without around view monitor system)	LAN-145. "Diagnosis Procedure"
CAN communication circuit 1 (With around view monitor system)	LAN-147. "Diagnosis Procedure"
CAN communication circuit 2 (With around view monitor system)	LAN-149. "Diagnosis Procedure"

ITS Communication Circuit

INFOID:000000012355321

MAIN LINE

MALFUNCTION AREA CHART

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

Malfunction area	Reference
Main line between side radar LH and side radar RH	LAN-108. "Diagnosis Procedure"
Main line between side radar RH and accelerator pedal actuator	LAN-109. "Diagnosis Procedure"
Main line between accelerator pedal actuator and lane camera unit	LAN-111. "Diagnosis Procedure"

BRANCH LINE

Malfunction area	Reference
Side radar LH branch line circuit	LAN-139. "Diagnosis Procedure"
Around view monitor control unit branch line circuit	LAN-134. "Diagnosis Procedure"
Driver assistance buzzer control module branch line circuit	LAN-140. "Diagnosis Procedure"
Side radar RH branch line circuit	LAN-141. "Diagnosis Procedure"
Sonar control unit branch line circuit	LAN-135. "Diagnosis Procedure"
Accelerator pedal actuator branch line circuit	LAN-142. "Diagnosis Procedure"
Lane camera unit branch line circuit	LAN-143. "Diagnosis Procedure"
ICC sensor branch line circuit	LAN-144. "Diagnosis Procedure"

SHORT CIRCUIT OR OPEN CIRCUIT

Malfunction area	Reference
ITS communication circuit	LAN-151. "Diagnosis Procedure"

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

Diagnosis Procedure

INFOID:000000012355322

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connectors M181 and M105
 - Combination meter
4. Check the continuity between the harness connector and the combination meter harness connector.

Harness connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M105	7	M53	14	Existed
	8		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the air bag diagnosis sensor unit.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT

Diagnosis Procedure

INFOID:000000012355323

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connectors M181 and M105
 - Combination meter
4. Check the continuity between the harness connector and the combination meter harness connector.

Harness connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M105	7	M53	14	Existed
	8		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the air bag diagnosis sensor unit and the combination meter.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN M&A AND TCU CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN M&A AND TCU CIRCUIT

Diagnosis Procedure

INFOID:000000012355324

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Combination meter
 - TCU
4. Check the continuity between the combination meter harness connector and the TCU harness connector.

Combination meter harness connector		TCU harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M53	14	M216	9	Existed
	15		10	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the combination meter and the TCU.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN M&A AND TPMS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN M&A AND TPMS CIRCUIT

Diagnosis Procedure

INFOID:000000012355325

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Combination meter
 - Low tire pressure warning control unit
4. Check the continuity between the combination meter harness connector and the low tire pressure warning control unit harness connector.

Combination meter harness connector		Low tire pressure warning control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M53	14	M43	2	Existed
	15		1	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the combination meter and the low tire pressure warning control unit.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN TCU AND TPMS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN TCU AND TPMS CIRCUIT

Diagnosis Procedure

INFOID:000000012355326

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - TCU
 - Low tire pressure warning control unit
4. Check the continuity between the low tire pressure warning control unit harness connector and the A/C auto amp. harness connector.

TCU harness connector		Low tire pressure warning control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M216	9	M43	2	Existed
	10		1	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the TCU and the low tire pressure warning control unit.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT

Diagnosis Procedure

INFOID:000000012355327

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Low tire pressure warning control unit
 - A/C auto amp.
4. Check the continuity between the low tire pressure warning control unit harness connector and the A/C auto amp. harness connector.

Low tire pressure warning control unit harness connector		A/C auto amp. harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M43	2	M66	12	Existed
	1		11	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the low tire pressure warning control unit and the A/C auto amp.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN HVAC AND AV CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN HVAC AND AV CIRCUIT

Diagnosis Procedure

INFOID:000000012355328

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - A/C auto amp.
 - AV control unit
4. Check the continuity between the A/C auto amp. harness connector and the AV control unit harness connector.
 - Models with navigation system

A/C auto amp. harness connector		AV control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M210	90	Existed
	11		74	Existed

- Models without navigation system

A/C auto amp. harness connector		AV control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M84	81	Existed
	11		80	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the A/C amp. and the AV control unit.

NO >> Replace the PCB harness.

LAN

MAIN LINE BETWEEN AV AND BCM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN AV AND BCM CIRCUIT

Diagnosis Procedure

INFOID:000000012355329

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - AV control unit
 - BCM
4. Check the continuity between the AV control unit harness connector and the BCM harness connector.
 - Models with navigation system

AV control unit harness connector		BCM harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M210	90	M120	39	Existed
	74		40	Existed

- Models without navigation system

AV control unit harness connector		BCM harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M84	81	M120	39	Existed
	80		40	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the AV control unit and the BCM.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN BCM AND TCM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN BCM AND TCM CIRCUIT

Diagnosis Procedure

INFOID:000000012355330

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - BCM
 - Harness connector F103 and M116
4. Check the continuity between the BCM harness connector and the A/T assembly harness connector.

BCM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M120	39	M116	11	Existed
	40		12	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the BCM and the A/T assembly.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN TCM AND STRG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN TCM AND STRG CIRCUIT

Diagnosis Procedure

INFOID:000000012355331

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connector F103 and M116
 - Steering angle sensor
4. Check the continuity between the harness connector and the steering angle sensor harness connector.

Harness connector		Steering angle sensor harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M116	11	M37	1	Existed
	12		2	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the A/T assembly and the steering angle sensor.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN STRG AND ADP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN STRG AND ADP CIRCUIT

Diagnosis Procedure

INFOID:000000012355332

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M22 and PCB harness side connector
 - Harness connector M20 and PCB harness side connector
 - Harness connector M7
 - Harness connector B1
 - Harness connector B11
 - Harness connector B501

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M22.
2. Check the continuity between the steering angle sensor and the PCB harness connector.

Steering angle sensor harness connector		PCB harness connector		Continuity
Connector No.	Terminal No.	Terminal No.		
M37	1	81		Existed
	2	82		Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the PCB harness.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M20.
2. Check the continuity between the PCB harness connectors.

PCB harness connector			Continuity
Terminal No.			
81	35		Existed
82	36		Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the PCB harness.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M7 and B1.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M20	35	M7	72	Existed
	36		73	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the main line between the harness connectors M20 and M7.

MAIN LINE BETWEEN STRG AND ADP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector terminals.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B1	72	B11	23	Existed
	73		24	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the steering angle sensor and the driver seat control unit.

NO >> Replace the body harness.

MAIN LINE BETWEEN STRG AND CGW CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN STRG AND CGW CIRCUIT

Diagnosis Procedure

INFOID:000000012355333

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Steering angle sensor
 - CAN gateway
4. Check the continuity between the steering angle sensor harness connector and the CAN gateway harness connector.

Steering angle sensor harness connector		CAN gateway harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M37	1	M125	1	Existed
	2		7	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the steering angle sensor and the CAN gateway.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN CGW AND 4WD CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN CGW AND 4WD CIRCUIT

Diagnosis Procedure

INFOID:000000012355334

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M28 and PCB harness side connector
 - Harness connector M20 and PCB harness side connector
 - Harness connector M7
 - Harness connector B1

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the steering angle sensor and the PCB harness connector.

CAN gateway harness connector		PCB harness connector		Continuity
Connector No.	Terminal No.	Terminal No.		
M125	1	326		Existed
	7	328		Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the PCB harness.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M20.
2. Check the continuity between the PCB harness connectors.

PCB harness connector			Continuity
Terminal No.			
326		35	Existed
328		36	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the PCB harness.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M7 and B1.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M20	35	M7	72	Existed
	36		73	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the main line between the harness connectors M20 and M7.

5.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

MAIN LINE BETWEEN CGW AND 4WD CIRCUIT

[CAN]

< DTC/CIRCUIT DIAGNOSIS >

1. Disconnect the harness connector of AWD control unit.
2. Check the continuity between the harness connector and the AWD control unit harness connector.

Harness connector		AWD control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B1	72	B17	8	Existed
	73		16	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the CAN gateway and the AWD control unit.

NO >> Replace the body harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN CGW AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN CGW AND ABS CIRCUIT

Diagnosis Procedure

INFOID:000000012355335

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M28 and PCB harness side connector
 - Harness connector M20 and PCB harness side connector
 - Harness connector M7
 - Harness connector B1
 - Harness connector M6
 - Harness connector E106

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the steering angle sensor and the PCB harness connector.

CAN gateway harness connector		PCB harness connector		Continuity
Connector No.	Terminal No.	Terminal No.		
M125	1	326		Existed
	7	328		Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the PCB harness.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M20.
2. Check the continuity between the PCB harness connectors.

PCB harness connector			Continuity
Terminal No.			
326	35		Existed
328	36		Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the PCB harness.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M7 and B1.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M20	35	M7	72	Existed
	36		73	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the main line between the harness connectors M20 and M7.

MAIN LINE BETWEEN CGW AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector terminals.

Connector No.	Terminal No.		Continuity
B1	72	74	Existed
	73	75	Existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace the body harness.

6. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M6 and E106.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M7	74	M6	22	Existed
	75		23	Existed

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace the body harness.

7. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector of ABS actuator and electric unit (control unit).
2. Check the continuity between the harness connector and the ABS actuator and electric unit (control unit) harness connector.

Harness connector		ABS actuator and electric unit (control unit) harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E106	22	E41	25	Existed
	23		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the CAN gateway and the ABS actuator and electric unit (control unit).

NO >> Repair the main line between the harness connector E106 and ABS actuator and electric unit (control unit).

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN ADP AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN ADP AND ABS CIRCUIT

Diagnosis Procedure

INFOID:000000012355336

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B1
 - Harness connector M7
 - Harness connector M6
 - Harness connector E106

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors B1 and M7.
2. Check the continuity between the harness connector terminals.

Connector No.	Terminal No.		Continuity
B1	72	74	Existed
	73	75	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the body harness.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M6 and E106.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M7	74	M6	22	Existed
	75		23	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M7 and M6.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the continuity between the harness connector and the ABS actuator and electric unit (control unit) harness connector.

Harness connector		ABS actuator and electric unit (control unit) harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E106	22	E41	25	Existed
	23		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the driver seat control unit and the ABS actuator and electric unit (control unit).

MAIN LINE BETWEEN ADP AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

NO >> Repair the main line between the harness connector E106 and the ABS actuator and electric unit (control unit).

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

MAIN LINE BETWEEN 4WD AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN 4WD AND ABS CIRCUIT

Diagnosis Procedure

INFOID:000000012355337

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B1
 - Harness connector M7
 - Harness connector M6
 - Harness connector E106

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors B1 and M7.
2. Check the continuity between the harness connector terminals.

Connector No.	Terminal No.		Continuity
B1	72	74	Existed
	73	75	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the body harness.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M6 and E106.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M7	74	M6	22	Existed
	75		23	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M7 and M6.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the continuity between the harness connector and the ABS actuator and electric unit (control unit) harness connector.

Harness connector		ABS actuator and electric unit (control unit) harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E106	22	E41	25	Existed
	23		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the AWD control unit and the ABS actuator and electric unit (control unit).

MAIN LINE BETWEEN 4WD AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

NO >> Repair the main line between the harness connector E106 and the ABS actuator and electric unit (control unit).

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

MAIN LINE BETWEEN DLC AND AVM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN DLC AND AVM CIRCUIT

Diagnosis Procedure

INFOID:000000012355338

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M20 and PCB harness side connector
 - Harness connector M117
 - Harness connector B201

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the data link connector and the PCB harness connector.

Data link connector		PCB harness connector		Continuity
Connector No.	Terminal No.	Terminal No.		
M182	13	24		Existed
	12	27		Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the PCB harness.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M117 and B201.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M20	24	M117	72	Existed
	27		73	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M20 and M117.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector of around view monitor control unit.
2. Check the continuity between the harness connector terminals.

Harness connector		Around view monitor control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B201	72	B231	27	Existed
	73		28	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the around view monitor control unit.

NO >> Repair the main line between the harness connector B201 and the around view monitor control unit.

MAIN LINE BETWEEN AVM AND ADP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN AVM AND ADP CIRCUIT

Diagnosis Procedure

INFOID:000000012355339

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - Around view monitor control unit
 - Harness connector B222
 - Harness connector B5
4. Check the continuity between the AV control unit harness connector and the combination meter harness connector.

Around view monitor control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B231	27	B222	13	Existed
	28		14	Existed

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the main line between the around view monitor control unit and the harness connector B222.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors B11 and B501.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B5	13	B11	23	Existed
	14		24	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the harness connectors B5 and B11.

NO >> Replace the body harness.

LAN

MAIN LINE BETWEEN DLC AND ICC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN DLC AND ICC CIRCUIT

Diagnosis Procedure

INFOID:000000012355340

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M20 and PCB harness side connector
 - Harness connector M117
 - Harness connector B201
 - Harness connector B222
 - Harness connector B5

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M20.
2. Check the continuity between the data link connector and the PCB harness connector.

Data link connector		PCB harness connector		Continuity
Connector No.	Terminal No.	Terminal No.		
M182	13	24		Existed
	12	27		Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the PCB harness.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M117 and B5.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M20	24	M117	72	Existed
	27		73	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M20 and M117.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors B222 and B5.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B201	72	B222	13	Existed
	73		14	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the main line between the harness connectors B201 and B222.

MAIN LINE BETWEEN DLC AND ICC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector of ADAS control unit.
2. Check the continuity between the harness connectors.

Harness connector		ADAS control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B5	13	B10	1	Existed
	14		2	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the ADAS control unit.

NO >> Replace the body harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN RDR-L AND RDR-R CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN RDR-L AND RDR-R CIRCUIT

Diagnosis Procedure

INFOID:000000012355341

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B33
 - Harness connector B245

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar LH
 - Harness connectors B33 and B245
2. Check the continuity between the side radar LH harness connector and the harness connector.

Side radar LH harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B52	4	B33	13	Existed
	3		14	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the side radar LH and the harness connector B33.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of side radar RH.
2. Check the continuity between the harness connector and the side radar RH harness connector.

Harness connector		Side radar RH harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B245	13	B252	4	Existed
	14		3	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the side radar LH and the side radar RH.

NO >> Repair the main line between the harness connector B245 and the side radar RH.

MAIN LINE BETWEEN RDR-R AND APA CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN RDR-R AND APA CIRCUIT

Diagnosis Procedure

INFOID:000000012355342

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B201
 - Harness connector M117
 - Harness connector M20 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar RH
 - Harness connectors B201 and M117
2. Check the continuity between the side radar RH harness connector and the harness connector.

Side radar RH harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B252	4	B201	66	Existed
	3		67	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the side radar RH and the harness connector B201.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M20.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M117	66	M20	38	Existed
	67		40	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M117 and M20.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M150 and M151.
2. Check the continuity between the PCB harness connector and the harness connector.

PCB harness connector		Harness connector		Continuity
Terminal No.	Terminal No.	Connector No.	Terminal No.	
38		M150	11	Existed
40			10	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the side radar RH and the accelerator pedal actuator.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN RDR-R AND APA CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

NO >> Replace the PCB harness.

MAIN LINE BETWEEN APA AND LANE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN APA AND LANE CIRCUIT

Diagnosis Procedure

INFOID:000000012355343

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ADAS control unit
 - Harness connectors M151 and M150
 - Harness connectors M110 and R7
4. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M150	11	M110	13	Existed
	10		2	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the accelerator pedal actuator and the lane camera unit.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

ECM BRANCH LINE CIRCUIT

[CAN]

< DTC/CIRCUIT DIAGNOSIS >

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012355344

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ECM
 - Harness connector M30 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.
 - VQ37VHR

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M107	114	113	Approx. 108 – 132

- VK56VD

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M160	146	151	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to the following.

- VQ37VHR FOR USA AND CANADA: [EC-202, "Diagnosis Procedure"](#)
- VQ37VHR FOR MEXICO: [EC-716, "Diagnosis Procedure"](#)
- VK56VD FOR USA AND CANADA: [EC-1171, "Diagnosis Procedure"](#)
- VK56VD FOR MEXICO: [EC-1746, "Diagnosis Procedure"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the ECM. Refer to the following.
- VQ37VHR FOR USA AND CANADA: [EC-559, "Removal and Installation"](#)
 - VQ37VHR FOR MEXICO: [EC-977, "Removal and Installation"](#)
 - VK56VD FOR USA AND CANADA: [EC-1568, "Removal and Installation"](#)
 - VK56VD FOR MEXICO: [EC-2028, "Removal and Installation"](#)

YES (Past error)>>Error was detected in the ECM branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M30.
2. Check the continuity between the ECM harness connector and the harness connector.
 - VQ37VHR

ECM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

M107	114	M30	439	Existed
	113		438	Existed

A

- VK56VD

B

ECM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M160	146	M30	439	Existed
	151		438	Existed

C

Is the inspection result normal?

D

YES >> Replace the PCB harness.

NO (VQ37VHR)>>Repair the harness between the ECM harness connector M107 and the harness connector M30.

NO (VK56VD)>>Repair the harness between the ECM harness connector M160 and the harness connector M30.

E

F

G

H

I

J

K

L

LAN

N

O

P

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012355345

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Data link connector
 - Harness connector M181
 - Harness connector M105
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M182	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit.

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M182	6	M23	151	Existed
	14		150	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the data link connector M182 and the harness connector M23.

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

Diagnosis Procedure

INFOID:000000012355346

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Data link connector
 - Harness connector M181
 - Harness connector M105
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M182	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit (CAN communication circuit 1 side). Refer to [LAN-79. "System Diagram"](#).

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M182	6	M23	151	Existed
	14		150	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the data link connector M182 and the harness connector M23.

LAN

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

Diagnosis Procedure

INFOID:000000012355347

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Data link connector
 - Harness connector M181
 - Harness connector M105
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M182	13	12	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M182	13	M23	134	Existed
	12		136	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the data link connector M182 and the harness connector M23.

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012355348

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Air bag diagnosis sensor unit
 - Harness connector M26 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
- NO >> Replace the main harness and/or the PCB harness.

2. CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-33. "Work Flow"](#).

Is the inspection result normal?

- YES >> Replace the main harness and/or the PCB harness.
- NO >> Replace parts whose air bag system has a malfunction.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012355349

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Combination meter
 - Harness connector M24 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M53	14	15	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter Refer to [MWI-75. "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the combination meter. Refer to [MWI-95. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the combination meter branch line.

NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M24.
2. Check the continuity between the combination meter harness connector and the harness connector.

Combination meter harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M53	14	M24	176	Existed
	15		177	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the combination meter harness connector M53 and the harness connector M24.

TCU BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

TCU BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012355350

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - TCU
 - Harness connector M26 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of TCU.
2. Check the resistance between the TCU harness connector terminals.

TCU harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M216	9	10	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCU. Refer to [AV-511, "TCU : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the TCU. Refer to [AV-520, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the TCU branch line.
NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M26.
2. Check the continuity between the TCU harness connector and the harness connector.

TCU harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M216	9	M26	242	Existed
	10		262	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the TCU harness connector M216 and the harness connector M26.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

TPMS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

TPMS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012355351

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Low tire pressure warning control unit
 - Harness connector M29 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of low tire pressure warning control unit.
2. Check the resistance between the low tire pressure warning control unit harness connector terminals.

Low tire pressure warning control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M43	2	1	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the low tire pressure warning control unit. Refer to [WT-52. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the low tire pressure warning control unit. Refer to [WT-66. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the low tire pressure warning control unit branch line.

NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M29.
2. Check the continuity between the low tire pressure warning control unit harness connector and the harness connector.

Low tire pressure warning control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M43	2	M29	396	Existed
	1		395	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the low tire pressure warning control unit harness connector M43 and the harness connector M29.

HVAC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012355352

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - A/C auto amp.
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/C auto amp.
2. Check the resistance between the A/C auto amp. harness connector terminals.

A/C auto amp. harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M66	12	11	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the A/C auto amp. Refer to [HAC-107. "A/C AUTO AMP. : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the A/C auto amp. Refer to [HAC-126. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the A/C auto amp. branch line.
NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the A/C auto amp. harness connector and the harness connector.

A/C auto amp. harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M28	325	Existed
	11		327	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the A/C auto amp. harness connector M66 and the harness connector M28.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012355353

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - AV control unit
 - Harness connector M25 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
2. Check the resistance between the AV control unit harness connector terminals.
 - Models with navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M210	90	74	Approx. 54 – 66

- Models without navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M84	81	80	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to the following.

- Base audio without navigation system: [AV-94. "AV CONTROL UNIT : Diagnosis Procedure"](#)
- BOSE audio with navigation system: [AV-373. "AV CONTROL UNIT : Diagnosis Procedure"](#)

Is the inspection result normal?

YES (Present error)>>Replace the AV control unit. Refer to the following.

- Base audio without navigation system: [AV-126. "Removal and Installation"](#)
- BOSE audio with navigation system: [AV-407. "Removal and Installation"](#)

YES (Past error)>>Error was detected in the AV control unit branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M25.
2. Check the continuity between the AV control unit harness connector and the harness connector.
 - Models with navigation system

AV control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M210	90	M25	201	Existed
	74		221	Existed

- Models without navigation system

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

AV control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M84	81	M25	201	Existed
	80		221	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO (With navigation system)>>Repair the harness between the AV control unit harness connector M210 and the harness connector M25.

NO (Without navigation system)>>Repair the harness between the AV control unit harness connector M84 and the harness connector M25.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012355354

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - BCM
 - Harness connector M22 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M120	39	40	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-88. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to [BCS-95. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the BCM branch line.
NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M22.
2. Check the continuity between the BCM harness connector and the harness connector.

BCM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M120	39	M22	101	Existed
	40		102	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the BCM harness connector M120 and the harness connector M22.

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012355355

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - A/T assembly
 - Harness connector F103
 - Harness connector M116
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/T assembly.
2. Check the resistance between the A/T assembly harness connector terminals.

A/T assembly harness connector		Resistance (Ω)
Connector No.	Terminal No.	
F61	3 8	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 5.

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Remove the joint connector. Refer to [TM-192, "Removal and Installation"](#).
2. Check the continuity between the A/T assembly harness connector side and the TCM harness connector side of the joint connector.

A/T assembly harness connector side	TCM harness connector side	Continuity
Terminal No.	Terminal No.	
3	3	Existed
8	8	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the joint connector.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-159, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the control valve & TCM. Refer to [TM-192, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the TCM branch line.

NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the A/T assembly harness connector and the harness connector.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

A/T assembly harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
F61	3	M28	346	Existed
	8		347	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the A/T assembly harness connector F61 and the harness connector M28.

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012355356

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Steering angle sensor
 - Harness connector M22 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M37	1	2	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to [BRC-52. "Wiring Diagram"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-168. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the steering angle sensor branch line.
NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M22.
2. Check the continuity between the steering angle sensor harness connector and the harness connector.

Steering angle sensor harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M37	1	M22	81	Existed
	2		82	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the steering angle sensor harness connector M37 and the harness connector M22.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

Diagnosis Procedure

INFOID:000000012355357

1. CHECK DTC

Check DTC of the CAN gateway with CONSULT.

Is U1010 or B2600 indicated?

- YES >> Perform a diagnosis of the indicated DTC.
- NO >> GO TO 2.

2. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - CAN gateway
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair the terminal and connector.

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of CAN gateway.
2. Check the resistance between the CAN gateway harness connector terminals.

CAN gateway harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M125	1	7	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 4.
- NO >> GO TO 5.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the CAN gateway. Refer to [LAN-167, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the CAN gateway. Refer to [LAN-168, "Removal and Installation"](#).
- YES (Past error)>>Error was detected in the CAN gateway branch line (CAN communication circuit 1 side). Refer to [LAN-79, "System Diagram"](#).
- NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the CAN gateway harness connector and the harness connector.

CAN gateway harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M125	1	M28	326	Existed
	7		328	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
- NO >> Repair the harness between the CAN gateway harness connector M125 and the harness connector M28.

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

Diagnosis Procedure

INFOID:000000012355358

1. CHECK DTC

Check DTC of the CAN gateway with CONSULT.

Is U1010 or B2600 indicated?

- YES >> Perform a diagnosis of the indicated DTC.
- NO >> GO TO 2.

2. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - CAN gateway
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair the terminal and connector.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> GO TO 5.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the CAN gateway. Refer to [LAN-167, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the CAN gateway. Refer to [LAN-168, "Removal and Installation"](#).
- YES (Past error)>>Error was detected in the CAN gateway branch line (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).
- NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the CAN gateway harness connector and the harness connector.

CAN gateway harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M125	4	M23	133	Existed
	10		135	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
- NO >> Repair the harness between the CAN gateway harness connector M125 and the harness connector M23.

4WD BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

4WD BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012355359

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the AWD control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AWD control unit.
2. Check the resistance between the AWD control unit harness connector terminals.

AWD control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B17	8	16	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the AWD control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AWD control unit. Refer to [DLN-49, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the AWD control unit. Refer to [DLN-61, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the AWD control unit branch line.
NO >> Repair the power supply and the ground circuit.

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012355360

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E41	25	15	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-143, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-165, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

AFS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

AFS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000012355361

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the AFS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AFS control unit.
2. Check the resistance between the AFS control unit harness connector terminals.

AFS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E70	1	13	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the AFS control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AFS control unit. Refer to [EXL-95, "AFS CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the AFS control unit. Refer to [EXL-148, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the AFS control unit branch line.
NO >> Repair the power supply and the ground circuit.

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012355362

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E6	40	39	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the IPDM E/R branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-33, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the IPDM E/R branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

AVM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

AVM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012355363

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of around view monitor control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of around view monitor control unit.
2. Check the resistance between the around view monitor control unit harness connector terminals.

Around view monitor control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M231	27	28	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the around view monitor control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the around view monitor control unit. Refer to [AV-375, "AROUND VIEW MONITOR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the around view monitor control unit. Refer to [AV-429, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the around view monitor control unit branch line.
NO >> Repair the power supply and the ground circuit.

SONAR BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

SONAR BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012355364

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Sonar control unit
 - Harness connector M117 and B201

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of sonar control unit.
2. Check the resistance between the sonar control unit harness connector terminals.

Sonar control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M47	19	20	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the power supply and the ground circuit.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the sonar control unit. Refer to [AV-376. "SONAR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the sonar control unit. Refer to the [AV-433. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the sonar control unit branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

ADP BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

ADP BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012355365

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Driver seat control unit
 - Harness connector B501
 - Harness connector B11
 - CAN gateway (With ICC system)

Is the inspection result normal?

YES (With ICC system)>>GO TO 2.

YES (Without ICC system)>>GO TO 3.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line is open) the root cause (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway. (With ICC system)
2. Disconnect the connector of driver seat control unit.
3. Check the resistance between the driver seat control unit harness connector terminals.

Driver seat control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B514	23	24	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the driver seat control unit branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the driver seat control unit. Refer to [ADP-74, "DRIVER SEAT CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the driver seat control unit. Refer to [ADP-147, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the driver seat control unit branch line.

NO >> Repair the power supply and the ground circuit.

ICC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

ICC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012355366

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ADAS control unit
 - CAN gateway

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector		Continuity	
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line is open) the root cause (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway.
2. Disconnect the connector of ADAS control unit.
3. Check the resistance between the ADAS control unit harness connector terminals.

ADAS control unit harness connector		Resistance (Ω)	
Connector No.	Terminal No.		
B10	1	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Replace the body harness.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ADAS control unit. Refer to [DAS-162, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the ADAS control unit. Refer to [DAS-163, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the ADAS control unit branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

PSB BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

PSB BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012355367

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Pre-crash seat belt control unit (driver side)
 - CAN gateway

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector		Continuity	
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line is open) the root cause (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway.
2. Disconnect the connector of pre-crash seat belt control unit (driver side).
3. Check the resistance between the pre-crash seat belt control unit (driver side) harness connector terminals.

Pre-crash seat belt control unit (driver side) harness connector		Resistance (Ω)	
Connector No.	Terminal No.		
B65	14	4	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the pre-crash seat belt control unit (driver side) branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the pre-crash seat belt control unit (driver side). Refer to [SBC-53, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the seat belt pre-tensioner retractor (driver side). Refer to [SB-8, "SEAT BELT RETRACTOR : Removal and Installation"](#).

YES (Past error)>>Error was detected in the pre-crash seat belt control unit (driver side) branch line.

NO >> Repair the power supply and the ground circuit.

RDR-L BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

RDR-L BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012355368

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the side radar LH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of side radar LH.
2. Check the resistance between the side radar LH harness connector terminals.

Side radar LH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B52	4	3	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the side radar LH branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar LH. Refer to [DAS-346, "SIDE RADAR LH : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the side radar LH. Refer to [DAS-393, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the side radar LH branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

BSW/BUZZER BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

BSW/BUZZER BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012355369

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the driver assistance buzzer control module for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of driver assistance buzzer control module.
2. Check the resistance between the driver assistance buzzer control module harness connector terminals.

Driver assistance buzzer control module harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B210	3	11	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the driver assistance buzzer control module branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the driver assistance buzzer control module. Refer to [DAS-347, "DRIVER ASSISTANCE BUZZER CONTROL MODULE : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the driver assistance buzzer control module. Refer to [DAS-396, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the driver assistance buzzer control module branch line.
NO >> Repair the power supply and the ground circuit.

RDR-R BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

RDR-R BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012355370

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the side radar RH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK RIGHT/LEFT SWITCHING SIGNAL CIRCUIT

Check the right/left switching signal circuit of the side radar RH. Refer to [DAS-349, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair the root cause.

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of side radar RH.
2. Check the resistance between the side radar RH harness connector terminals.

Side radar RH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B252	4	3	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 4.
NO >> Repair the side radar RH branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar RH. Refer to [DAS-347, "SIDE RADAR RH: Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the side radar RH. Refer to [DAS-393, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the side radar RH branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

APA BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

APA BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012355371

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Accelerator pedal position sensor
 - Harness connector M151
 - Harness connector M150
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of accelerator pedal position sensor.
2. Check the resistance between the accelerator pedal position sensor harness connector terminals.

Accelerator pedal position sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M154	3	9	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the accelerator pedal position sensor. Refer to [DAS-345, "ACCELERATOR PEDAL ACTUATOR : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the accelerator pedal assembly. Refer to [ACC-6, "MODELS WITH DISTANCE CONTROL ASSIST SYSTEM : Removal and Installation"](#).

YES (Past error)>>Error was detected in the accelerator pedal position sensor branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the accelerator pedal position sensor harness connector and the harness connector.

Accelerator pedal position sensor harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M154	3	M23	138	Existed
	9		137	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the accelerator pedal position sensor harness connector M152 and the harness connector M23.

LANE BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

LANE BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012355372

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Lane camera unit
 - Harness connector R7
 - Harness connector M110
 - Harness connector M24 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of lane camera unit.
2. Check the resistance between the lane camera unit harness connector terminals.

Lane camera unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
R8	4	8	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the lane camera unit. Refer to [DAS-345, "LANE CAMERA UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the lane camera unit. Refer to [DAS-392, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the lane camera unit branch line.
NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M24.
2. Check the continuity between the lane camera unit harness connector and the harness connector.

Lane camera unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
R8	4	M24	179	Existed
	8		178	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the lane camera unit harness connector R8 and the harness connector M24.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

LASER BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

LASER BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012355373

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ICC sensor
 - Harness connector E106
 - Harness connector M6
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ICC sensor.
2. Check the resistance between the ICC sensor harness connector terminals.

ICC sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E33	3	6	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ICC sensor. Refer to [CCS-116, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ICC sensor. Refer to [CCS-133, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ICC sensor branch line.
NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the ICC sensor harness connector and the harness connector.

ICC sensor harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E33	3	M28	343	Existed
	6		345	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the ICC sensor harness connector E67 and the harness connector M28.

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000012355374

1. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication system.
4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M182	6 14	Not existed

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

3. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M182	6		Not existed
	14		Not existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

4. CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.
 - VQ37VHR

ECM		Resistance (Ω)
Terminal No.		
114	113	Approx. 108 – 132

- VK56VD

ECM		Resistance (Ω)
Terminal No.		
146	151	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

IPDM E/R		Resistance (Ω)
Terminal No.		
40	39	Approx. 108 – 132

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

CAN COMMUNICATION CIRCUIT

[CAN]

< DTC/CIRCUIT DIAGNOSIS >

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication system.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

CAN COMMUNICATION CIRCUIT 1

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

CAN COMMUNICATION CIRCUIT 1

Diagnosis Procedure

INFOID:000000012355375

1. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit 1.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-79. "System Diagram"](#).

4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M182	6 14	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

3. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M182	6		Not existed
	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

4. CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.
 - VQ37VHR

ECM		Resistance (Ω)
Terminal No.		
114	113	Approx. 108 – 132

- VK56VD

ECM		Resistance (Ω)
Terminal No.		
146	151	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

CAN COMMUNICATION CIRCUIT 1

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

IPDM E/R		Resistance (Ω)
Terminal No.		
40	39	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit 1.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

CAN COMMUNICATION CIRCUIT 2

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

CAN COMMUNICATION CIRCUIT 2

Diagnosis Procedure

INFOID:000000012355376

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit 2.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-79. "System Diagram"](#).

4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M182	13	Not existed
	12	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M182	13		Not existed
	12		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

4.CHECK CAN GATEWAY TERMINATION CIRCUIT

1. Remove the CAN gateway.
2. Check the resistance between the CAN gateway terminals.

CAN gateway		Resistance (Ω)
Terminal No.		
4	10	Approx. 108 – 132
6	12	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the CAN gateway.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

Inspection result

Reproduced>>GO TO 6.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

CAN COMMUNICATION CIRCUIT 2

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit 2.

NOTE:

CAN gateway has two termination circuits. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

ITS COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

ITS COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000012355377

1.CHECK CAN DIAGNOSIS

Check the CAN diagnosis results from CONSULT to see that the CAN communication circuit 1 and CAN communication circuit 2 have no malfunction.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-79. "System Diagram"](#).

Are the CAN communication 1 and CAN communication 2 circuits normal?

YES >> GO TO 2.

NO >> Check and repair CAN communication circuit 1 and/or CAN communication circuit 2.

2.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ADAS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the terminal and connector.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - ADAS control unit
 - ICC sensor
2. Check the continuity between the ADAS control unit harness connector and the ICC sensor harness connector.

ADAS control unit harness connector		ICC sensor harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B10	6	E33	3	Existed
	7		6	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the body harness.

4.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar LH
 - Side radar RH
 - Accelerator pedal actuator
 - Lane camera unit
2. Check the continuity between the ADAS control unit harness connector terminals.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
B10	6	7	Not existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

5.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the ADAS control unit harness connector and the ground.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

ITS COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

ADAS control unit harness connector		Ground	Continuity
Connector No.	Terminal No.		
B10	6		
	7		Not existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

6.CHECK TERMINATION CIRCUIT

1. Remove the ADAS control unit and the ICC sensor.
2. Check the resistance between the ADAS control unit terminals.

ADAS control unit		Resistance (Ω)
Terminal No.		
6	7	Approx. 108 – 132

3. Check the resistance between the ICC sensor terminals.

ICC sensor		Resistance (Ω)
Terminal No.		
3	6	Approx. 108 – 132

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace the ADAS control unit and/or the ICC sensor.

7.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

Inspection result

Reproduced>>GO TO 8.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

8.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of ITS communication system.

NOTE:

ADAS control unit and ICC sensor have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000012355378

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.


Precautions for Removing Battery Terminal

INFOID:000000013052572

When disconnecting the battery terminal, pay attention to the following.

- Always use a 12V battery as power source.
- Never disconnect battery terminal while engine is running.
- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.
- For vehicles with the engine listed below, remove the battery terminal after a lapse of the specified time:

D4D engine	: 20 minutes	YS23DDT	: 4 minutes
HRA2DDT	: 12 minutes	YS23DDTT	: 4 minutes
K9K engine	: 4 minutes	ZD30DDTi	: 60 seconds
M9R engine	: 4 minutes	ZD30DDTT	: 60 seconds
R9M engine	: 4 minutes		
V9X engine	: 4 minutes		
YD25DDTi	: 2 minutes		

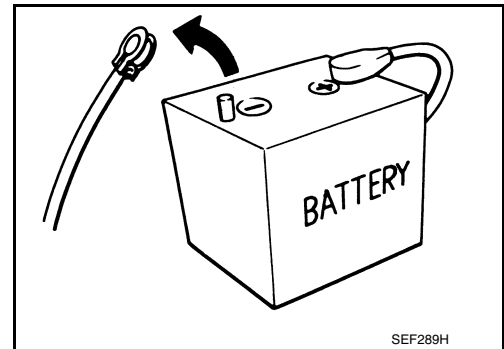

LAN

N
O
P

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- After high-load driving, if the vehicle is equipped with the V9X engine, turn the ignition switch OFF and wait for at least 15 minutes to remove the battery terminal.

NOTE:

PRECAUTIONS

[CAN GATEWAY]

< PRECAUTION >

- Turbocharger cooling pump may operate in a few minutes after the ignition switch is turned OFF.
- Example of high-load driving
 - Driving for 30 minutes or more at 140 km/h (86 MPH) or more.
 - Driving for 30 minutes or more on a steep slope.
- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.

NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:


The removal of 12V battery may cause a DTC detection error.

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:000000012355380

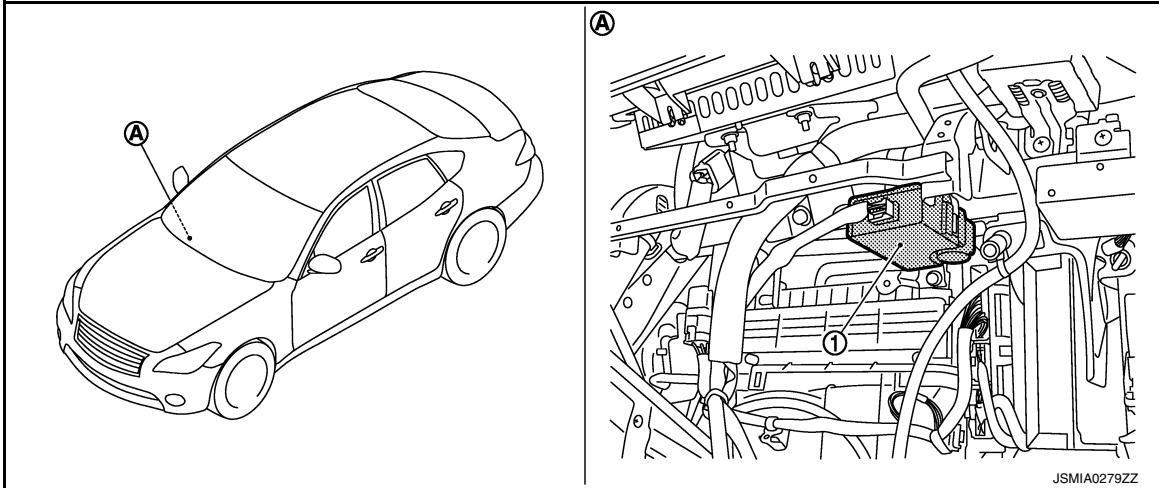

- 1. CAN gateway
- A. Over the glove box

A
B
C
D
E
F
G
H
I
J
K
L


LAN

N
O
P

SYSTEM

System Description

INFOID:000000012355381

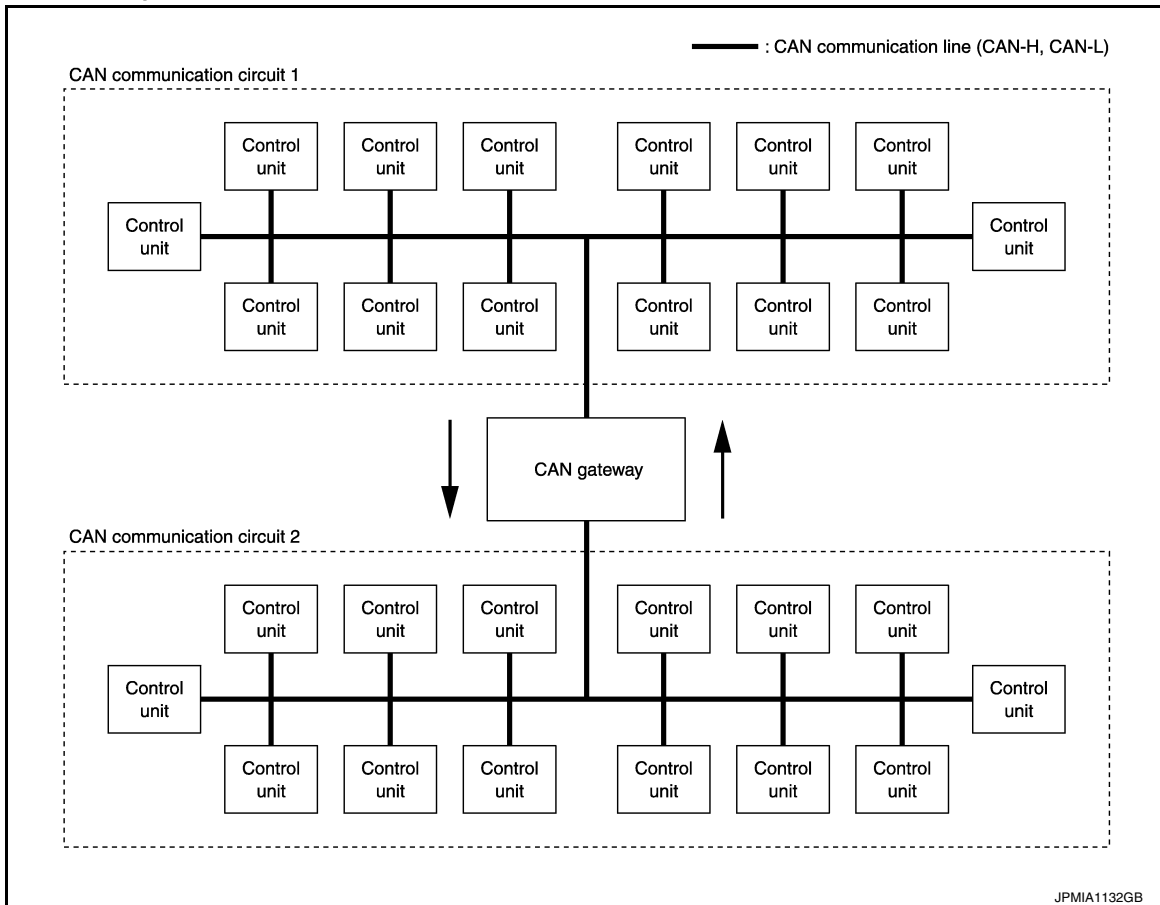

- The CAN gateway system communicates between two CAN communication circuits.
- This system selects and transmits only necessary information.

DIAGNOSIS SYSTEM (CAN GATEWAY)

< SYSTEM DESCRIPTION >

[CAN GATEWAY]

DIAGNOSIS SYSTEM (CAN GATEWAY)

CONSULT Function

INFOID:000000012355382

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with CAN gateway.

Diagnosis mode	Function Description
Ecu Identification	The CAN gateway part number is displayed.
Self Diagnostic Result	Displays the diagnosis results judged by CAN gateway.
CAN Diag Support Monitor	The results of transmit/receive diagnosis of CAN communication can be read.
Configuration	<ul style="list-style-type: none">• Read and save the vehicle specification.• Write the vehicle specification when replacing CAN gateway.

SELF DIAGNOSTIC RESULT

Refer to [LAN-158, "DTC Index"](#).

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P


ECU DIAGNOSIS INFORMATION

CAN GATEWAY

Reference Value

INFOID:0000000012355383

TERMINAL LAYOUT

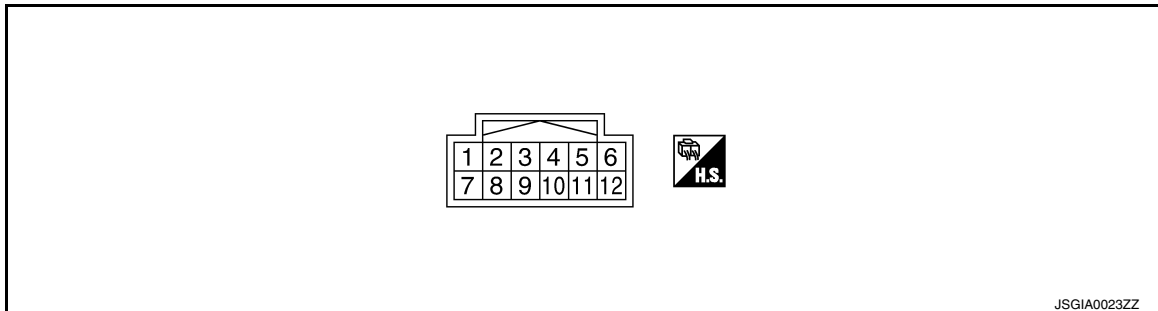

PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
1 (L)	—	CAN-H (CAN communication circuit 1)	Input/ Output	—	—
3 (GR)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage
4 (L)	—	CAN-H (CAN communication circuit 2)	Input/ Output	—	—
5 (B)	Ground	Ground	—	Ignition switch ON	0 V
6 (L)	—	CAN-H (CAN communication circuit 2)	Input/ Output	—	—
7 (P)	—	CAN-L (CAN communication circuit 1)	Input/ Output	—	—
9 (W)	Ground	Ignition power supply	Input	Ignition switch ON	Battery voltage
10 (P)	—	CAN-L (CAN communication circuit 2)	Input/ Output	—	—
11 (B)	Ground	Ground	—	Ignition switch ON	0 V
12 (P)	—	CAN-L (CAN communication circuit 2)	Input/ Output	—	—

DTC Inspection Priority Chart

INFOID:0000000012355384

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	<ul style="list-style-type: none"> • B2600: CONFIG ERROR • U1010: CONTROL UNIT(CAN)
2	U1000: CAN COMM CIRCUIT

DTC Index

INFOID:0000000012355385

NOTE:

CAN GATEWAY

< ECU DIAGNOSIS INFORMATION >

[CAN GATEWAY]

- The details of time display are as follows.
- CRNT: A malfunction is detected now
- PAST: A malfunction was detected in the past.
- IGN counter is displayed on FFD (Freeze Frame Data).
- The number is 0 when is detected now
- The number increases like 1 → 2 ... 38 → 39 after returning to the normal condition whenever IGN OFF → ON.
- The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

DTC		Reference
No DTC is detected. Further testing may be required.		—
U1000: CAN COMM CIRCUIT		LAN-164
U1010: CONTROL UNIT(CAN)		LAN-165
B2600: CONFIG ERROR	WRONG DATA	LAN-166
	NOT CONFIGURED	

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P


LAN

WIRING DIAGRAM

CAN GATEWAY SYSTEM

Wiring Diagram

INFOID:000000012355386

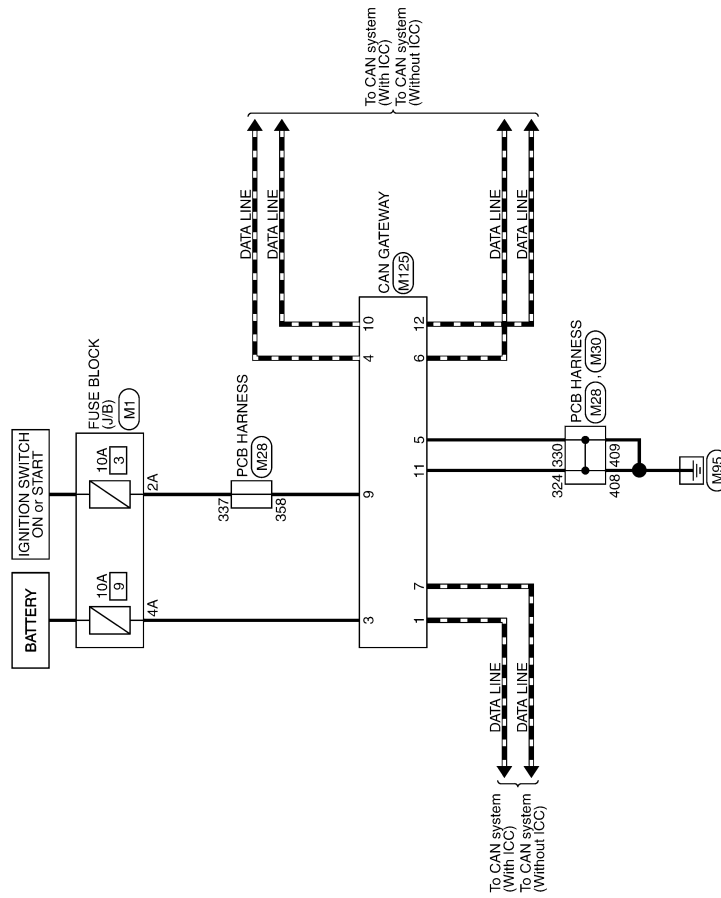

CAN GATEWAY SYSTEM

2014/07/11

JRMWG1239GB

CAN GATEWAY SYSTEM


< WIRING DIAGRAM >

[CAN GATEWAY]

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

CAN GATEWAY SYSTEM

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS06FW-M2

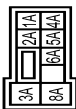

Terminal No.	Color	Wire	Signal Name [Specification]
1A	R	-	-
2A	W	-	-
3A	Y	-	-
4A	W	-	-
5A	Y	-	-
6A	Y	-	-

Connector No.	M28
Connector Name	PCB HARNESS
Connector Type	TH40PW-NH



Terminal No.	Color	Wire	Signal Name [Specification]
321	V	-	-
322	V	-	-
324	B	-	-
325	L	-	-
326	L	-	-
327	P	-	-
328	P	-	-
330	B	-	-
331	V	-	-
332	V	-	-
335	B	-	-
337	W	-	-

338	W	-	-
343	L	-	-
344	B	-	-
345	Y	-	-
346	Y	-	-
347	P	-	-
348	GR	-	-
349	V	-	-
350	LG	-	-
351	P	-	-
352	R	-	-
353	P	-	-
358	W	-	-
359	W	-	-
360	G	-	-


Connector No.	M30
Connector Name	PCB HARNESS
Connector Type	TH40PW-NH



Terminal No.	Color	Wire	Signal Name [Specification]
402	R	-	-
403	B	-	-
406	B	-	-
407	V	-	-
408	B	-	-
409	B	-	-
410	B	-	-
411	B	-	-
413	Y	-	-
414	BR	-	-
416	LG	-	-
417	B	-	-
419	SB	-	-
420	SHIELD	-	-
422	V	-	-
427	P	-	-
428	V	-	-
429	P	-	-

430	LG	-	-
431	B	-	-
432	V	-	-
433	SG	-	-
437	B	-	-
438	P	-	-
439	L	-	-
440	B	-	-

Connector No.	M125
Connector Name	CAN GATEWAY
Connector Type	TH12FW-NH

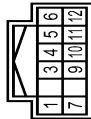

Terminal No.	Color	Wire	Signal Name [Specification]
1	L	-	CAN-H
3	GR	-	BATTERY
4	L	-	CAN-H
5	B	-	IGND
6	c	-	CAN-H
9	W	-	IGNITION
10	P	-	CAN-L
11	B	-	IGND
12	P	-	CAN-L

BASIC INSPECTION

ADDITIONAL SERVICE WHEN REPLACING CAN GATEWAY

Description

INFOID:0000000012355387

For work procedure, refer to [LAN-162, "Work Procedure"](#).

BEFORE REPLACEMENT

When replacing CAN gateway, save or print current vehicle specification with CONSULT configuration before replacement.

NOTE:

If "Before Replace ECU" of "Read / Write Configuration" can not be used, use the "Manual Configuration" after replacing CAN gateway.

AFTER REPLACEMENT

CAUTION:

Follow the instructions listed below. Failure to do this may cause malfunctions to the CAN gateway.:

- When replacing CAN gateway, you must perform "Read / Write Configuration" or "Manual Configuration" with CONSULT.
- Complete the procedure of "Read / Write Configuration" or "Manual Configuration" in order.
- If you set incorrect "Read / Write Configuration" or "Manual Configuration", incidents might occur.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.
- Never perform "Read / Write Configuration" or "Manual Configuration" except for new CAN gateway.

Work Procedure

INFOID:0000000012355388

1. SAVING VEHICLE SPECIFICATION

 CONSULT Configuration

Perform "Before Replace ECU" of "Read / Write Configuration" to save or print current vehicle specification. Refer to [LAN-163, "Description"](#).

NOTE:

If "Before Replace ECU" of "Read / Write Configuration" can not be used, use the "Manual Configuration" after replacing CAN gateway.

>> GO TO 2.

2. REPLACE CAN GATEWAY

Replace CAN gateway. Refer to [LAN-168, "Removal and Installation"](#).

>> GO TO 3.

3. WRITING VEHICLE SPECIFICATION

 CONSULT Configuration

Perform "After Replace ECU" of "Read / Write Configuration" or "Manual Configuration" to write vehicle specification. Refer to [LAN-163, "Work Procedure"](#).

>> WORK END

CONFIGURATION (CAN GATEWAY)

Description

INFOID:000000012355389

Vehicle specification needs to be written with CONSULT because it is not written after replacing CAN gateway. Refer to [LAN-163, "Work Procedure"](#). Configuration has three functions as follows

Function		Description
Read / Write Configuration	Before Replace ECU	<ul style="list-style-type: none"> • Reads the vehicle configuration of current CAN gateway. • Saves the read vehicle configuration.
	After Replace ECU	Writes the vehicle configuration with saved data.
Manual Configuration		Writes the vehicle configuration with manual selection.

CAUTION:

- Follow the instructions listed below. Failure to do this may cause malfunctions to the CAN gateway.:**
- When replacing CAN gateway, you must perform “Read / Write Configuration” or “Manual Configuration” with CONSULT.
 - Complete the procedure of “Read / Write Configuration” or “Manual Configuration” in order.
 - If you set incorrect “Read / Write Configuration” or “Manual Configuration”, incidents might occur.
 - Configuration is different for each vehicle model. Confirm configuration of each vehicle model.
 - Never perform “Read / Write Configuration” or “Manual Configuration” except for new CAN gateway.

Work Procedure

INFOID:000000012355390

1. WRITING MODE SELECTION

ⓂCONSULT Configuration

Select “Re/programming, Configuration” of CAN gateway.

When writing saved data>>GO TO 2.

When writing manually>>GO TO 3.

2. PERFORM “AFTER REPLACE ECU” OF “READ / WRITE CONFIGURATION”

ⓂCONSULT Configuration

Perform “After Replace ECU” of “Read / Write Configuration”.

>> GO TO 4.

3. PERFORM “MANUAL CONFIGURATION”

ⓂCONSULT Configuration

1. Select “Manual Configuration”.
2. Touch “Next”.
3. Touch “OK”.
4. Check that the configuration has been successfully written and touch “End”.

>> GO TO 4.

4. CHECK ALL ECU SELF-DIAGNOSIS RESULTS

1. Erase all ECU self-diagnosis results using CONSULT.
2. Turn the ignition switch OFF.
3. Turn the ignition switch ON and wait for 2 seconds or more.
4. Check that all ECU self-diagnosis results have no DTC (e.g. U1000 and U1001) of CAN communication.

>> WORK END

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

DTC/CIRCUIT DIAGNOSIS

U1000 CAN COMM CIRCUIT

Description

INFOID:0000000012355391

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with two communication lines (CAN-H and CAN-L) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Signal Chart. Refer to [LAN-37, "CAN COMMUNICATION SYSTEM : CAN Communication Signal Chart"](#).

DTC Logic

INFOID:0000000012355392

DTC DETECTION LOGIC

DTC	CONSULT display description	DTC Detection Condition	Possible cause
U1000	CAN COMM CIRCUIT	When CAN gateway cannot communicate CAN communication signal continuously for 2 seconds or more.	CAN communication system

Diagnosis Procedure

INFOID:0000000012355393

1. PERFORM SELF DIAGNOSTIC

1. Turn the ignition switch ON and wait for 2 seconds or more.
2. Check "Self Diagnostic Result".

Is "U1000: CAN COMM CIRCUIT" displayed?

- YES >> Refer to [LAN-27, "Trouble Diagnosis Flow Chart"](#).
 NO >> Refer to [GI-45, "Intermittent Incident"](#).

U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

[CAN GATEWAY]

U1010 CONTROL UNIT (CAN)

Description

INFOID:0000000012355394

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with two communication lines (CAN-H and CAN-L) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Signal Chart. Refer to [LAN-37. "CAN COMMUNICATION SYSTEM : CAN Communication Signal Chart"](#).

DTC Logic

INFOID:0000000012355395

DTC DETECTION LOGIC

DTC	CONSULT display description	DTC Detection Condition	Possible cause
U1010	CONTROL UNIT(CAN)	When an error is detected during the initial diagnosis for CAN controller of CAN gateway.	CAN gateway

Diagnosis Procedure

INFOID:0000000012355396

1.REPLACE CAN GATEWAY

When DTC "U1010: CONTROL UNIT(CAN)" is detected, replace CAN gateway.

>> Replace CAN gateway. Refer to [LAN-168. "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
K
L

LAN

B2600 CONFIG ERROR

< DTC/CIRCUIT DIAGNOSIS >

[CAN GATEWAY]

B2600 CONFIG ERROR

Description

INFOID:000000012355397

The CAN gateway requires initial settings to judge necessary information, according to a vehicle specification.

DTC Logic

INFOID:000000012355398

DTC DETECTION LOGIC

DTC	CONSULT display description	DTC Detection Condition	Probable cause
B2600	CONFIG ERROR WRONG DATA	When errors are detected in the configuration data stored in the CAN gateway.	CAN gateway
	CONFIG ERROR NOT CONFIGURED	When no data are stored in the CAN gateway.	

Diagnosis Procedure

INFOID:000000012355399

1. REPLACE CAN GATEWAY

When DTC "B2600: CONFIG ERROR" is detected, replace CAN gateway.

>> Replace CAN gateway. Refer to [LAN-168, "Removal and Installation"](#).

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN GATEWAY]

POWER SUPPLY AND GROUND CIRCUIT

Diagnosis Procedure

INFOID:000000012355400

1.CHECK FUSE

Check that the following fuse are not blown.

Signal name	Fuse No.
Battery power supply	9
Ignition power supply	3

Is the fuse fusing?

YES >> Replace the blown fuse after repairing the affected circuit if a fuse is blown.

NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect the connector of CAN gateway.
3. Check voltage between CAN gateway harness connector and ground.

Terminals		Condition	Voltage (Approx.)
(+)	(-)		
CAN gateway		Ignition switch	Battery voltage
Connector	Terminal		
M125	3	OFF	
	9	ON	

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3.CHECK GROUND CIRCUIT

Check continuity between CAN gateway harness connector and ground.

CAN gateway		Ground	Continuity
Connector	Terminal		
M125	5		Existed
	11		

Does continuity exist?

YES >> INSPECTION END

NO >> Repair harness or connector.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

REMOVAL AND INSTALLATION

CAN GATEWAY

Removal and Installation

INFOID:000000012355401

CAUTION:

Before replacing CAN gateway, perform “Before Replace ECU” of “Read / Write Configuration” to save or print current vehicle specification. Refer to [LAN-162, "Description"](#).

REMOVAL

1. Remove instrument lower panel RH. Refer to [IP-13, "Removal and Installation"](#).
2. Disconnect CAN gateway connector.
3. Remove mounting screw to remove CAN gateway.

INSTALLATION

Install in the reverse order of removal.

CAUTION:

To prevent malfunction, be sure to perform “After Replace ECU” of “Read / Write Configuration” or “Manual Configuration” when replacing CAN gateway. Refer to [LAN-162, "Description"](#).

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

Diagnosis Procedure

INFOID:0000000013043789

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connectors M181 and M105
 - Combination meter
4. Check the continuity between the harness connector and the combination meter harness connector.

Harness connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M105	7	M53	14	Existed
	8		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the air bag diagnosis sensor unit.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT

Diagnosis Procedure

INFOID:000000013043790

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connectors M181 and M105
 - Combination meter
4. Check the continuity between the harness connector and the combination meter harness connector.

Harness connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M105	7	M53	14	Existed
	8		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the air bag diagnosis sensor unit and the combination meter.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN M&A AND TPMS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

MAIN LINE BETWEEN M&A AND TPMS CIRCUIT

Diagnosis Procedure

INFOID:000000013043792

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Combination meter
 - Low tire pressure warning control unit
4. Check the continuity between the combination meter harness connector and the low tire pressure warning control unit harness connector.

Combination meter harness connector		Low tire pressure warning control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M53	14	M43	2	Existed
	15		1	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the combination meter and the low tire pressure warning control unit.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT

Diagnosis Procedure

INFOID:000000013043794

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Low tire pressure warning control unit
 - A/C auto amp.
4. Check the continuity between the low tire pressure warning control unit harness connector and the A/C auto amp. harness connector.

Low tire pressure warning control unit harness connector		A/C auto amp. harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M43	2	M66	12	Existed
	1		11	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the low tire pressure warning control unit and the A/C auto amp.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN HVAC AND AV CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

MAIN LINE BETWEEN HVAC AND AV CIRCUIT

Diagnosis Procedure

INFOID:000000013043795

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - A/C auto amp.
 - AV control unit
4. Check the continuity between the A/C auto amp. harness connector and the AV control unit harness connector.
 - Models with navigation system

A/C auto amp. harness connector		AV control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M210	90	Existed
	11		74	Existed

- Models without navigation system

A/C auto amp. harness connector		AV control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M84	81	Existed
	11		80	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the A/C amp. and the AV control unit.

NO >> Replace the PCB harness.

LAN

MAIN LINE BETWEEN AV AND BCM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

MAIN LINE BETWEEN AV AND BCM CIRCUIT

Diagnosis Procedure

INFOID:000000013043796

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - AV control unit
 - BCM
4. Check the continuity between the AV control unit harness connector and the BCM harness connector.
 - Models with navigation system

AV control unit harness connector		BCM harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M210	90	M120	39	Existed
	74		40	Existed

- Models without navigation system

AV control unit harness connector		BCM harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M84	81	M120	39	Existed
	80		40	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the AV control unit and the BCM.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN BCM AND TCM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

MAIN LINE BETWEEN BCM AND TCM CIRCUIT

Diagnosis Procedure

INFOID:000000013043797

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - BCM
 - Harness connector F103 and M116
4. Check the continuity between the BCM harness connector and the A/T assembly harness connector.

BCM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M120	39	M116	11	Existed
	40		12	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the BCM and the A/T assembly.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN TCM AND STRG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

MAIN LINE BETWEEN TCM AND STRG CIRCUIT

Diagnosis Procedure

INFOID:000000013043798

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connector F103 and M116
 - Steering angle sensor
4. Check the continuity between the harness connector and the steering angle sensor harness connector.

Harness connector		Steering angle sensor harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M116	11	M37	1	Existed
	12		2	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the A/T assembly and the steering angle sensor.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN STRG AND ADP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

MAIN LINE BETWEEN STRG AND ADP CIRCUIT

Diagnosis Procedure

INFOID:000000013043799

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M22 and PCB harness side connector
 - Harness connector M20 and PCB harness side connector
 - Harness connector M7
 - Harness connector B1
 - Harness connector B11
 - Harness connector B501

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M22.
2. Check the continuity between the steering angle sensor and the PCB harness connector.

Steering angle sensor harness connector		PCB harness connector		Continuity
Connector No.	Terminal No.	Terminal No.		
M37	1	81		Existed
	2	82		Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the PCB harness.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M20.
2. Check the continuity between the PCB harness connectors.

PCB harness connector			Continuity
Terminal No.			
81	35		Existed
82	36		Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the PCB harness.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M7 and B1.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M20	35	M7	72	Existed
	36		73	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the main line between the harness connectors M20 and M7.

MAIN LINE BETWEEN STRG AND ADP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector terminals.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B1	72	B11	23	Existed
	73		24	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the steering angle sensor and the driver seat control unit.

NO >> Replace the body harness.

MAIN LINE BETWEEN ADP AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

MAIN LINE BETWEEN ADP AND ABS CIRCUIT

Diagnosis Procedure

INFOID:000000013043803

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B1
 - Harness connector M7
 - Harness connector M6
 - Harness connector E106

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors B1 and M7.
2. Check the continuity between the harness connector terminals.

Connector No.	Terminal No.		Continuity
B1	72	74	Existed
	73	75	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the body harness.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M6 and E106.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M7	74	M6	22	Existed
	75		23	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M7 and M6.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the continuity between the harness connector and the ABS actuator and electric unit (control unit) harness connector.

Harness connector		ABS actuator and electric unit (control unit) harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E106	22	E41	25	Existed
	23		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the driver seat control unit and the ABS actuator and electric unit (control unit).

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN ADP AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

NO >> Repair the main line between the harness connector E106 and the ABS actuator and electric unit (control unit).

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000013043811

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ECM
 - Harness connector M30 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.
 - VQ37VHR

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M107	114	113	Approx. 108 – 132

- VK56VD

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M160	146	151	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to the following.

- VQ37VHR FOR USA AND CANADA: [EC-202. "Diagnosis Procedure"](#)
- VQ37VHR FOR MEXICO: [EC-716. "Diagnosis Procedure"](#)
- VK56VD FOR USA AND CANADA: [EC-1171. "Diagnosis Procedure"](#)
- VK56VD FOR MEXICO: [EC-1746. "Diagnosis Procedure"](#)

Is the inspection result normal?

YES (Present error)>>Replace the ECM. Refer to the following.

- VQ37VHR FOR USA AND CANADA: [EC-559. "Removal and Installation"](#)
- VQ37VHR FOR MEXICO: [EC-977. "Removal and Installation"](#)
- VK56VD FOR USA AND CANADA: [EC-1568. "Removal and Installation"](#)
- VK56VD FOR MEXICO: [EC-2028. "Removal and Installation"](#)

YES (Past error)>>Error was detected in the ECM branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M30.
2. Check the continuity between the ECM harness connector and the harness connector.
 - VQ37VHR

ECM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

M107	114	M30	439	Existed
	113		438	Existed

- VK56VD

ECM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M160	146	M30	439	Existed
	151		438	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO (VQ37VHR)>>Repair the harness between the ECM harness connector M107 and the harness connector M30.

NO (VK56VD)>>Repair the harness between the ECM harness connector M160 and the harness connector M30.

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043812

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Data link connector
 - Harness connector M181
 - Harness connector M105
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M182	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit.

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M182	6	M23	151	Existed
	14		150	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the data link connector M182 and the harness connector M23.

LAN

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043815

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Air bag diagnosis sensor unit
 - Harness connector M26 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace the main harness and/or the PCB harness.

2. CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-33. "Work Flow"](#).

Is the inspection result normal?

- YES >> Replace the main harness and/or the PCB harness.
NO >> Replace parts whose air bag system has a malfunction.

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043816

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Combination meter
 - Harness connector M24 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M53	14	15	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter Refer to [MWI-75. "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the combination meter. Refer to [MWI-95. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the combination meter branch line.
NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M24.
2. Check the continuity between the combination meter harness connector and the harness connector.

Combination meter harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M53	14	M24	176	Existed
	15		177	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the combination meter harness connector M53 and the harness connector M24.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

TPMS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

TPMS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043818

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Low tire pressure warning control unit
 - Harness connector M29 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of low tire pressure warning control unit.
2. Check the resistance between the low tire pressure warning control unit harness connector terminals.

Low tire pressure warning control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M43	2	1	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the low tire pressure warning control unit. Refer to [WT-52. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the low tire pressure warning control unit. Refer to [WT-66. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the low tire pressure warning control unit branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M29.
2. Check the continuity between the low tire pressure warning control unit harness connector and the harness connector.

Low tire pressure warning control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M43	2	M29	396	Existed
	1		395	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the low tire pressure warning control unit harness connector M43 and the harness connector M29.

HVAC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043819

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - A/C auto amp.
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/C auto amp.
2. Check the resistance between the A/C auto amp. harness connector terminals.

A/C auto amp. harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M66	12	11	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the A/C auto amp. Refer to [HAC-107. "A/C AUTO AMP. : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the A/C auto amp. Refer to [HAC-126. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the A/C auto amp. branch line.

NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the A/C auto amp. harness connector and the harness connector.

A/C auto amp. harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M28	325	Existed
	11		327	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the A/C auto amp. harness connector M66 and the harness connector M28.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043820

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - AV control unit
 - Harness connector M25 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
2. Check the resistance between the AV control unit harness connector terminals.
 - Models with navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M210	90	74	Approx. 54 – 66

- Models without navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M84	81	80	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to the following.

- Base audio without navigation system: [AV-94. "AV CONTROL UNIT : Diagnosis Procedure"](#)
- BOSE audio with navigation system: [AV-373. "AV CONTROL UNIT : Diagnosis Procedure"](#)

Is the inspection result normal?

YES (Present error)>>Replace the AV control unit. Refer to the following.

- Base audio without navigation system: [AV-126. "Removal and Installation"](#)
- BOSE audio with navigation system: [AV-407. "Removal and Installation"](#)

YES (Past error)>>Error was detected in the AV control unit branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M25.
2. Check the continuity between the AV control unit harness connector and the harness connector.
 - Models with navigation system

AV control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M210	90	M25	201	Existed
	74		221	Existed

- Models without navigation system

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

AV control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M84	81	M25	201	Existed
	80		221	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO (With navigation system)>>Repair the harness between the AV control unit harness connector M210 and the harness connector M25.

NO (Without navigation system)>>Repair the harness between the AV control unit harness connector M84 and the harness connector M25.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043821

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - BCM
 - Harness connector M22 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M120	39	40	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-88. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to [BCS-95. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the BCM branch line.
NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M22.
2. Check the continuity between the BCM harness connector and the harness connector.

BCM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M120	39	M22	101	Existed
	40		102	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the BCM harness connector M120 and the harness connector M22.

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043822

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - A/T assembly
 - Harness connector F103
 - Harness connector M116
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/T assembly.
2. Check the resistance between the A/T assembly harness connector terminals.

A/T assembly harness connector		Resistance (Ω)
Connector No.	Terminal No.	
F61	3 8	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 5.

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Remove the joint connector. Refer to [TM-192, "Removal and Installation"](#).
2. Check the continuity between the A/T assembly harness connector side and the TCM harness connector side of the joint connector.

A/T assembly harness connector side	TCM harness connector side	Continuity
Terminal No.	Terminal No.	
3	3	Existed
8	8	Existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Replace the joint connector.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-159, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the control valve & TCM. Refer to [TM-192, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the TCM branch line.
NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the A/T assembly harness connector and the harness connector.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

A/T assembly harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
F61	3	M28	346	Existed
	8		347	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the A/T assembly harness connector F61 and the harness connector M28.

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043823

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Steering angle sensor
 - Harness connector M22 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M37	1	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to [BRC-52. "Wiring Diagram"](#).

Is the inspection result normal?

YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-168. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the steering angle sensor branch line.

NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M22.
2. Check the continuity between the steering angle sensor harness connector and the harness connector.

Steering angle sensor harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M37	1	M22	81	Existed
	2		82	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the steering angle sensor harness connector M37 and the harness connector M22.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043827

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E41	25	15	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-143. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-165. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.
NO >> Repair the power supply and the ground circuit.

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043829

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E6	40	39	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the IPDM E/R branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-33, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the IPDM E/R branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

ADP BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

ADP BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043832

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Driver seat control unit
 - Harness connector B501
 - Harness connector B11
 - CAN gateway (With ICC system)

Is the inspection result normal?

YES (With ICC system)>>GO TO 2.

YES (Without ICC system)>>GO TO 3.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line is open) the root cause (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway. (With ICC system)
2. Disconnect the connector of driver seat control unit.
3. Check the resistance between the driver seat control unit harness connector terminals.

Driver seat control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B514	23	24	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the driver seat control unit branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the driver seat control unit. Refer to [ADP-74, "DRIVER SEAT CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the driver seat control unit. Refer to [ADP-147, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the driver seat control unit branch line.

NO >> Repair the power supply and the ground circuit.

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000013043841

1. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication system.
4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M182	6 14	Not existed

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

3. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M182	6		Not existed
	14		Not existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

4. CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.
 - VQ37VHR

ECM		Resistance (Ω)
Terminal No.		
114	113	Approx. 108 – 132

- VK56VD

ECM		Resistance (Ω)
Terminal No.		
146	151	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

IPDM E/R		Resistance (Ω)
Terminal No.		
40	39	Approx. 108 – 132

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication system.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

Diagnosis Procedure

INFOID:0000000013043968

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connectors M181 and M105
 - Combination meter
4. Check the continuity between the harness connector and the combination meter harness connector.

Harness connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M105	7	M53	14	Existed
	8		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the air bag diagnosis sensor unit.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT

Diagnosis Procedure

INFOID:000000013043969

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connectors M181 and M105
 - Combination meter
4. Check the continuity between the harness connector and the combination meter harness connector.

Harness connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M105	7	M53	14	Existed
	8		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the air bag diagnosis sensor unit and the combination meter.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN M&A AND TPMS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

MAIN LINE BETWEEN M&A AND TPMS CIRCUIT

Diagnosis Procedure

INFOID:000000013043971

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Combination meter
 - Low tire pressure warning control unit
4. Check the continuity between the combination meter harness connector and the low tire pressure warning control unit harness connector.

Combination meter harness connector		Low tire pressure warning control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M53	14	M43	2	Existed
	15		1	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the combination meter and the low tire pressure warning control unit.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT

Diagnosis Procedure

INFOID:000000013043973

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Low tire pressure warning control unit
 - A/C auto amp.
4. Check the continuity between the low tire pressure warning control unit harness connector and the A/C auto amp. harness connector.

Low tire pressure warning control unit harness connector		A/C auto amp. harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M43	2	M66	12	Existed
	1		11	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the low tire pressure warning control unit and the A/C auto amp.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN HVAC AND AV CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

MAIN LINE BETWEEN HVAC AND AV CIRCUIT

Diagnosis Procedure

INFOID:000000013043974

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - A/C auto amp.
 - AV control unit
4. Check the continuity between the A/C auto amp. harness connector and the AV control unit harness connector.
 - Models with navigation system

A/C auto amp. harness connector		AV control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M210	90	Existed
	11		74	Existed

- Models without navigation system

A/C auto amp. harness connector		AV control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M84	81	Existed
	11		80	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the A/C amp. and the AV control unit.

NO >> Replace the PCB harness.

LAN

MAIN LINE BETWEEN AV AND BCM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

MAIN LINE BETWEEN AV AND BCM CIRCUIT

Diagnosis Procedure

INFOID:000000013043975

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - AV control unit
 - BCM
4. Check the continuity between the AV control unit harness connector and the BCM harness connector.
 - Models with navigation system

AV control unit harness connector		BCM harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M210	90	M120	39	Existed
	74		40	Existed

- Models without navigation system

AV control unit harness connector		BCM harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M84	81	M120	39	Existed
	80		40	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the AV control unit and the BCM.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN BCM AND TCM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

MAIN LINE BETWEEN BCM AND TCM CIRCUIT

Diagnosis Procedure

INFOID:000000013043976

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - BCM
 - Harness connector F103 and M116
4. Check the continuity between the BCM harness connector and the A/T assembly harness connector.

BCM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M120	39	M116	11	Existed
	40		12	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the BCM and the A/T assembly.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN TCM AND STRG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

MAIN LINE BETWEEN TCM AND STRG CIRCUIT

Diagnosis Procedure

INFOID:000000013043977

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connector F103 and M116
 - Steering angle sensor
4. Check the continuity between the harness connector and the steering angle sensor harness connector.

Harness connector		Steering angle sensor harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M116	11	M37	1	Existed
	12		2	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the A/T assembly and the steering angle sensor.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN STRG AND CGW CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

MAIN LINE BETWEEN STRG AND CGW CIRCUIT

Diagnosis Procedure

INFOID:000000013043979

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Steering angle sensor
 - CAN gateway
4. Check the continuity between the steering angle sensor harness connector and the CAN gateway harness connector.

Steering angle sensor harness connector		CAN gateway harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M37	1	M125	1	Existed
	2		7	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the steering angle sensor and the CAN gateway.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN CGW AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

MAIN LINE BETWEEN CGW AND ABS CIRCUIT

Diagnosis Procedure

INFOID:000000013043981

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M28 and PCB harness side connector
 - Harness connector M20 and PCB harness side connector
 - Harness connector M7
 - Harness connector B1
 - Harness connector M6
 - Harness connector E106

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the steering angle sensor and the PCB harness connector.

CAN gateway harness connector		PCB harness connector		Continuity
Connector No.	Terminal No.	Terminal No.		
M125	1	326		Existed
	7	328		Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the PCB harness.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M20.
2. Check the continuity between the PCB harness connectors.

PCB harness connector			Continuity
Terminal No.			
326	35		Existed
328	36		Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the PCB harness.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M7 and B1.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M20	35	M7	72	Existed
	36		73	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the main line between the harness connectors M20 and M7.

MAIN LINE BETWEEN CGW AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector terminals.

Connector No.	Terminal No.		Continuity
B1	72	74	Existed
	73	75	Existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace the body harness.

6. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M6 and E106.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M7	74	M6	22	Existed
	75		23	Existed

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace the body harness.

7. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector of ABS actuator and electric unit (control unit).
2. Check the continuity between the harness connector and the ABS actuator and electric unit (control unit) harness connector.

Harness connector		ABS actuator and electric unit (control unit) harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E106	22	E41	25	Existed
	23		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the CAN gateway and the ABS actuator and electric unit (control unit).

NO >> Repair the main line between the harness connector E106 and ABS actuator and electric unit (control unit).

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN DLC AND AVM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

MAIN LINE BETWEEN DLC AND AVM CIRCUIT

Diagnosis Procedure

INFOID:000000013043984

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M20 and PCB harness side connector
 - Harness connector M117
 - Harness connector B201

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the data link connector and the PCB harness connector.

Data link connector		PCB harness connector		Continuity
Connector No.	Terminal No.	Terminal No.		
M182	13	24		Existed
	12	27		Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the PCB harness.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M117 and B201.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M20	24	M117	72	Existed
	27		73	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M20 and M117.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector of around view monitor control unit.
2. Check the continuity between the harness connector terminals.

Harness connector		Around view monitor control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B201	72	B231	27	Existed
	73		28	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the around view monitor control unit.

NO >> Repair the main line between the harness connector B201 and the around view monitor control unit.

MAIN LINE BETWEEN AVM AND ADP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

MAIN LINE BETWEEN AVM AND ADP CIRCUIT

Diagnosis Procedure

INFOID:000000013043985

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - Around view monitor control unit
 - Harness connector B222
 - Harness connector B5
4. Check the continuity between the AV control unit harness connector and the combination meter harness connector.

Around view monitor control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B231	27	B222	13	Existed
	28		14	Existed

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the main line between the around view monitor control unit and the harness connector B222.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors B11 and B501.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B5	13	B11	23	Existed
	14		24	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the harness connectors B5 and B11.

NO >> Replace the body harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043990

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ECM
 - Harness connector M30 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.
 - VQ37VHR

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M107	114	113	Approx. 108 – 132

- VK56VD

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M160	146	151	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to the following.

- VQ37VHR FOR USA AND CANADA: [EC-202, "Diagnosis Procedure"](#)
- VQ37VHR FOR MEXICO: [EC-716, "Diagnosis Procedure"](#)
- VK56VD FOR USA AND CANADA: [EC-1171, "Diagnosis Procedure"](#)
- VK56VD FOR MEXICO: [EC-1746, "Diagnosis Procedure"](#)

Is the inspection result normal?

YES (Present error)>>Replace the ECM. Refer to the following.

- VQ37VHR FOR USA AND CANADA: [EC-559, "Removal and Installation"](#)
- VQ37VHR FOR MEXICO: [EC-977, "Removal and Installation"](#)
- VK56VD FOR USA AND CANADA: [EC-1568, "Removal and Installation"](#)
- VK56VD FOR MEXICO: [EC-2028, "Removal and Installation"](#)

YES (Past error)>>Error was detected in the ECM branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M30.
2. Check the continuity between the ECM harness connector and the harness connector.
 - VQ37VHR

ECM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

M107	114	M30	439	Existed
	113		438	Existed

A

- VK56VD

B

ECM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M160	146	M30	439	Existed
	151		438	Existed

C

Is the inspection result normal?

D

YES >> Replace the PCB harness.

NO (VQ37VHR)>>Repair the harness between the ECM harness connector M107 and the harness connector M30.

NO (VK56VD)>>Repair the harness between the ECM harness connector M160 and the harness connector M30.

E

F

G

H

I

J

K

L

LAN

N

O

P

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

Diagnosis Procedure

INFOID:000000013043992

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Data link connector
 - Harness connector M181
 - Harness connector M105
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M182	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit (CAN communication circuit 1 side). Refer to [LAN-79, "System Diagram"](#).

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M182	6	M23	151	Existed
	14		150	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the data link connector M182 and the harness connector M23.

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

Diagnosis Procedure

INFOID:000000013043993

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Data link connector
 - Harness connector M181
 - Harness connector M105
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector		Resistance (Ω)
Connector No.	Terminal No.	
M182	13	Approx. 54 – 66
	12	

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit (CAN communication circuit 2 side). Refer to [LAN-79. "System Diagram"](#).

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M182	13	M23	134	Existed
	12		136	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the data link connector M182 and the harness connector M23.

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043994

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Air bag diagnosis sensor unit
 - Harness connector M26 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace the main harness and/or the PCB harness.

2.CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-33. "Work Flow"](#).

Is the inspection result normal?

- YES >> Replace the main harness and/or the PCB harness.
NO >> Replace parts whose air bag system has a malfunction.

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043995

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Combination meter
 - Harness connector M24 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M53	14	15	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter Refer to [MWI-75. "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the combination meter. Refer to [MWI-95. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the combination meter branch line.

NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M24.
2. Check the continuity between the combination meter harness connector and the harness connector.

Combination meter harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M53	14	M24	176	Existed
	15		177	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the combination meter harness connector M53 and the harness connector M24.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

TPMS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

TPMS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043997

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Low tire pressure warning control unit
 - Harness connector M29 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of low tire pressure warning control unit.
2. Check the resistance between the low tire pressure warning control unit harness connector terminals.

Low tire pressure warning control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M43	2	1	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the low tire pressure warning control unit. Refer to [WT-52. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the low tire pressure warning control unit. Refer to [WT-66. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the low tire pressure warning control unit branch line.
NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M29.
2. Check the continuity between the low tire pressure warning control unit harness connector and the harness connector.

Low tire pressure warning control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M43	2	M29	396	Existed
	1		395	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the low tire pressure warning control unit harness connector M43 and the harness connector M29.

HVAC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043998

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - A/C auto amp.
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/C auto amp.
2. Check the resistance between the A/C auto amp. harness connector terminals.

A/C auto amp. harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M66	12	11	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the A/C auto amp. Refer to [HAC-107. "A/C AUTO AMP. : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the A/C auto amp. Refer to [HAC-126. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the A/C auto amp. branch line.
NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the A/C auto amp. harness connector and the harness connector.

A/C auto amp. harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M28	325	Existed
	11		327	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the A/C auto amp. harness connector M66 and the harness connector M28.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043999

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - AV control unit
 - Harness connector M25 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
2. Check the resistance between the AV control unit harness connector terminals.
 - Models with navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M210	90	74	Approx. 54 – 66

- Models without navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M84	81	80	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to the following.

- Base audio without navigation system: [AV-94. "AV CONTROL UNIT : Diagnosis Procedure"](#)
- BOSE audio with navigation system: [AV-373. "AV CONTROL UNIT : Diagnosis Procedure"](#)

Is the inspection result normal?

YES (Present error)>>Replace the AV control unit. Refer to the following.

- Base audio without navigation system: [AV-126. "Removal and Installation"](#)
- BOSE audio with navigation system: [AV-407. "Removal and Installation"](#)

YES (Past error)>>Error was detected in the AV control unit branch line.

NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M25.
2. Check the continuity between the AV control unit harness connector and the harness connector.
 - Models with navigation system

AV control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M210	90	M25	201	Existed
	74		221	Existed

- Models without navigation system

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

AV control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M84	81	M25	201	Existed
	80		221	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO (With navigation system)>>Repair the harness between the AV control unit harness connector M210 and the harness connector M25.

NO (Without navigation system)>>Repair the harness between the AV control unit harness connector M84 and the harness connector M25.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044000

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - BCM
 - Harness connector M22 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M120	39	40	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-88. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to [BCS-95. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the BCM branch line.
NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M22.
2. Check the continuity between the BCM harness connector and the harness connector.

BCM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M120	39	M22	101	Existed
	40		102	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the BCM harness connector M120 and the harness connector M22.

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044001

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - A/T assembly
 - Harness connector F103
 - Harness connector M116
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/T assembly.
2. Check the resistance between the A/T assembly harness connector terminals.

A/T assembly harness connector		Resistance (Ω)
Connector No.	Terminal No.	
F61	3 8	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 5.

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Remove the joint connector. Refer to [TM-192, "Removal and Installation"](#).
2. Check the continuity between the A/T assembly harness connector side and the TCM harness connector side of the joint connector.

A/T assembly harness connector side	TCM harness connector side	Continuity
Terminal No.	Terminal No.	
3	3	Existed
8	8	Existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Replace the joint connector.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-159, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the control valve & TCM. Refer to [TM-192, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the TCM branch line.
NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the A/T assembly harness connector and the harness connector.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

A/T assembly harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
F61	3	M28	346	Existed
	8		347	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the A/T assembly harness connector F61 and the harness connector M28.

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044002

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Steering angle sensor
 - Harness connector M22 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M37	1	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to [BRC-52. "Wiring Diagram"](#).

Is the inspection result normal?

YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-168. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the steering angle sensor branch line.

NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M22.
2. Check the continuity between the steering angle sensor harness connector and the harness connector.

Steering angle sensor harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M37	1	M22	81	Existed
	2		82	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the steering angle sensor harness connector M37 and the harness connector M22.

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

Diagnosis Procedure

INFOID:000000013044003

1. CHECK DTC

Check DTC of the CAN gateway with CONSULT.

Is U1010 or B2600 indicated?

- YES >> Perform a diagnosis of the indicated DTC.
- NO >> GO TO 2.

2. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - CAN gateway
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair the terminal and connector.

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of CAN gateway.
2. Check the resistance between the CAN gateway harness connector terminals.

CAN gateway harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M125	1	7	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 4.
- NO >> GO TO 5.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the CAN gateway. Refer to [LAN-167, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the CAN gateway. Refer to [LAN-168, "Removal and Installation"](#).
- YES (Past error)>>Error was detected in the CAN gateway branch line (CAN communication circuit 1 side). Refer to [LAN-79, "System Diagram"](#).
- NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the CAN gateway harness connector and the harness connector.

CAN gateway harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M125	1	M28	326	Existed
	7		328	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
- NO >> Repair the harness between the CAN gateway harness connector M125 and the harness connector M28.

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

Diagnosis Procedure

INFOID:000000013044004

1. CHECK DTC

Check DTC of the CAN gateway with CONSULT.

Is U1010 or B2600 indicated?

- YES >> Perform a diagnosis of the indicated DTC.
- NO >> GO TO 2.

2. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - CAN gateway
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair the terminal and connector.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> GO TO 5.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the CAN gateway. Refer to [LAN-167, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the CAN gateway. Refer to [LAN-168, "Removal and Installation"](#).
- YES (Past error)>>Error was detected in the CAN gateway branch line (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).
- NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the CAN gateway harness connector and the harness connector.

CAN gateway harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M125	4	M23	133	Existed
	10		135	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
- NO >> Repair the harness between the CAN gateway harness connector M125 and the harness connector M23.

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044006

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E41	25	15	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-143. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-165. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.
NO >> Repair the power supply and the ground circuit.

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044008

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E6	40	39	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the IPDM E/R branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-33, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the IPDM E/R branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

AVM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

AVM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044009

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of around view monitor control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of around view monitor control unit.
2. Check the resistance between the around view monitor control unit harness connector terminals.

Around view monitor control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M231	27	28	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the around view monitor control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the around view monitor control unit. Refer to [AV-375, "AROUND VIEW MONITOR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the around view monitor control unit. Refer to [AV-429, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the around view monitor control unit branch line.
NO >> Repair the power supply and the ground circuit.

SONAR BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

SONAR BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044010

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Sonar control unit
 - Harness connector M117 and B201

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of sonar control unit.
2. Check the resistance between the sonar control unit harness connector terminals.

Sonar control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M47	19	20	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the power supply and the ground circuit.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the sonar control unit. Refer to [AV-376. "SONAR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the sonar control unit. Refer to the [AV-433. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the sonar control unit branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

ADP BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

ADP BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044011

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Driver seat control unit
 - Harness connector B501
 - Harness connector B11
 - CAN gateway (With ICC system)

Is the inspection result normal?

YES (With ICC system)>>GO TO 2.

YES (Without ICC system)>>GO TO 3.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line is open) the root cause (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway. (With ICC system)
2. Disconnect the connector of driver seat control unit.
3. Check the resistance between the driver seat control unit harness connector terminals.

Driver seat control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B514	23	24	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the driver seat control unit branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the driver seat control unit. Refer to [ADP-74, "DRIVER SEAT CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the driver seat control unit. Refer to [ADP-147, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the driver seat control unit branch line.

NO >> Repair the power supply and the ground circuit.

CAN COMMUNICATION CIRCUIT 1

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

CAN COMMUNICATION CIRCUIT 1

Diagnosis Procedure

INFOID:000000013044021

1. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit 1.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-79. "System Diagram"](#).

4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M182	6 14	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

3. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M182	6		Not existed
	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

4. CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.
 - VQ37VHR

ECM		Resistance (Ω)
Terminal No.		
114	113	Approx. 108 – 132

- VK56VD

ECM		Resistance (Ω)
Terminal No.		
146	151	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CAN COMMUNICATION CIRCUIT 1

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

IPDM E/R		Resistance (Ω)
Terminal No.		
40	39	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit 1.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

CAN COMMUNICATION CIRCUIT 2

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

CAN COMMUNICATION CIRCUIT 2

Diagnosis Procedure

INFOID:000000013044022

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit 2.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-79. "System Diagram"](#).

4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M182	13	Not existed
	12	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M182	13		Not existed
	12		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

4.CHECK CAN GATEWAY TERMINATION CIRCUIT

1. Remove the CAN gateway.
2. Check the resistance between the CAN gateway terminals.

CAN gateway		Resistance (Ω)
Terminal No.		
4	10	Approx. 108 – 132
6	12	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the CAN gateway.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

Inspection result

Reproduced>>GO TO 6.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

CAN COMMUNICATION CIRCUIT 2

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit 2.

NOTE:

CAN gateway has two termination circuits. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

Diagnosis Procedure

INFOID:0000000013044027

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connectors M181 and M105
 - Combination meter
4. Check the continuity between the harness connector and the combination meter harness connector.

Harness connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M105	7	M53	14	Existed
	8		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the air bag diagnosis sensor unit.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT

Diagnosis Procedure

INFOID:000000013044028

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connectors M181 and M105
 - Combination meter
4. Check the continuity between the harness connector and the combination meter harness connector.

Harness connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M105	7	M53	14	Existed
	8		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the air bag diagnosis sensor unit and the combination meter.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN M&A AND TCU CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

MAIN LINE BETWEEN M&A AND TCU CIRCUIT

Diagnosis Procedure

INFOID:000000013044029

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Combination meter
 - TCU
4. Check the continuity between the combination meter harness connector and the TCU harness connector.

Combination meter harness connector		TCU harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M53	14	M216	9	Existed
	15		10	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the combination meter and the TCU.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN TCU AND TPMS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

MAIN LINE BETWEEN TCU AND TPMS CIRCUIT

Diagnosis Procedure

INFOID:000000013044031

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - TCU
 - Low tire pressure warning control unit
4. Check the continuity between the low tire pressure warning control unit harness connector and the A/C auto amp. harness connector.

TCU harness connector		Low tire pressure warning control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M216	9	M43	2	Existed
	10		1	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the TCU and the low tire pressure warning control unit.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT

Diagnosis Procedure

INFOID:000000013044032

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Low tire pressure warning control unit
 - A/C auto amp.
4. Check the continuity between the low tire pressure warning control unit harness connector and the A/C auto amp. harness connector.

Low tire pressure warning control unit harness connector		A/C auto amp. harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M43	2	M66	12	Existed
	1		11	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the low tire pressure warning control unit and the A/C auto amp.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN HVAC AND AV CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

MAIN LINE BETWEEN HVAC AND AV CIRCUIT

Diagnosis Procedure

INFOID:000000013044033

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - A/C auto amp.
 - AV control unit
4. Check the continuity between the A/C auto amp. harness connector and the AV control unit harness connector.
 - Models with navigation system

A/C auto amp. harness connector		AV control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M210	90	Existed
	11		74	Existed

- Models without navigation system

A/C auto amp. harness connector		AV control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M84	81	Existed
	11		80	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the A/C amp. and the AV control unit.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN AV AND BCM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

MAIN LINE BETWEEN AV AND BCM CIRCUIT

Diagnosis Procedure

INFOID:000000013044034

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - AV control unit
 - BCM
4. Check the continuity between the AV control unit harness connector and the BCM harness connector.
 - Models with navigation system

AV control unit harness connector		BCM harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M210	90	M120	39	Existed
	74		40	Existed

- Models without navigation system

AV control unit harness connector		BCM harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M84	81	M120	39	Existed
	80		40	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the AV control unit and the BCM.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN BCM AND TCM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

MAIN LINE BETWEEN BCM AND TCM CIRCUIT

Diagnosis Procedure

INFOID:000000013044035

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - BCM
 - Harness connector F103 and M116
4. Check the continuity between the BCM harness connector and the A/T assembly harness connector.

BCM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M120	39	M116	11	Existed
	40		12	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the BCM and the A/T assembly.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN TCM AND STRG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

MAIN LINE BETWEEN TCM AND STRG CIRCUIT

Diagnosis Procedure

INFOID:000000013044036

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connector F103 and M116
 - Steering angle sensor
4. Check the continuity between the harness connector and the steering angle sensor harness connector.

Harness connector		Steering angle sensor harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M116	11	M37	1	Existed
	12		2	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the A/T assembly and the steering angle sensor.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN STRG AND CGW CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

MAIN LINE BETWEEN STRG AND CGW CIRCUIT

Diagnosis Procedure

INFOID:000000013044038

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Steering angle sensor
 - CAN gateway
4. Check the continuity between the steering angle sensor harness connector and the CAN gateway harness connector.

Steering angle sensor harness connector		CAN gateway harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M37	1	M125	1	Existed
	2		7	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the steering angle sensor and the CAN gateway.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN CGW AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

MAIN LINE BETWEEN CGW AND ABS CIRCUIT

Diagnosis Procedure

INFOID:000000013044040

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M28 and PCB harness side connector
 - Harness connector M20 and PCB harness side connector
 - Harness connector M7
 - Harness connector B1
 - Harness connector M6
 - Harness connector E106

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the steering angle sensor and the PCB harness connector.

CAN gateway harness connector		PCB harness connector		Continuity
Connector No.	Terminal No.	Terminal No.		
M125	1	326		Existed
	7	328		Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the PCB harness.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M20.
2. Check the continuity between the PCB harness connectors.

PCB harness connector			Continuity
Terminal No.			
326	35		Existed
328	36		Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the PCB harness.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M7 and B1.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M20	35	M7	72	Existed
	36		73	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the main line between the harness connectors M20 and M7.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN CGW AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector terminals.

Connector No.	Terminal No.		Continuity
B1	72	74	Existed
	73	75	Existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace the body harness.

6. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M6 and E106.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M7	74	M6	22	Existed
	75		23	Existed

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace the body harness.

7. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector of ABS actuator and electric unit (control unit).
2. Check the continuity between the harness connector and the ABS actuator and electric unit (control unit) harness connector.

Harness connector		ABS actuator and electric unit (control unit) harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E106	22	E41	25	Existed
	23		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the CAN gateway and the ABS actuator and electric unit (control unit).

NO >> Repair the main line between the harness connector E106 and ABS actuator and electric unit (control unit).

MAIN LINE BETWEEN DLC AND AVM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

MAIN LINE BETWEEN DLC AND AVM CIRCUIT

Diagnosis Procedure

INFOID:000000013044043

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M20 and PCB harness side connector
 - Harness connector M117
 - Harness connector B201

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the data link connector and the PCB harness connector.

Data link connector		PCB harness connector		Continuity
Connector No.	Terminal No.	Terminal No.		
M182	13	24		Existed
	12	27		Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the PCB harness.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M117 and B201.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M20	24	M117	72	Existed
	27		73	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M20 and M117.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector of around view monitor control unit.
2. Check the continuity between the harness connector terminals.

Harness connector		Around view monitor control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B201	72	B231	27	Existed
	73		28	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the around view monitor control unit.

NO >> Repair the main line between the harness connector B201 and the around view monitor control unit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN AVM AND ADP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

MAIN LINE BETWEEN AVM AND ADP CIRCUIT

Diagnosis Procedure

INFOID:000000013044044

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - Around view monitor control unit
 - Harness connector B222
 - Harness connector B5
4. Check the continuity between the AV control unit harness connector and the combination meter harness connector.

Around view monitor control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B231	27	B222	13	Existed
	28		14	Existed

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the main line between the around view monitor control unit and the harness connector B222.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors B11 and B501.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B5	13	B11	23	Existed
	14		24	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the harness connectors B5 and B11.

NO >> Replace the body harness.

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044049

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ECM
 - Harness connector M30 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.
 - VQ37VHR

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M107	114	113	Approx. 108 – 132

- VK56VD

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M160	146	151	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to the following.

- VQ37VHR FOR USA AND CANADA: [EC-202. "Diagnosis Procedure"](#)
- VQ37VHR FOR MEXICO: [EC-716. "Diagnosis Procedure"](#)
- VK56VD FOR USA AND CANADA: [EC-1171. "Diagnosis Procedure"](#)
- VK56VD FOR MEXICO: [EC-1746. "Diagnosis Procedure"](#)

Is the inspection result normal?

YES (Present error)>>Replace the ECM. Refer to the following.

- VQ37VHR FOR USA AND CANADA: [EC-559. "Removal and Installation"](#)
- VQ37VHR FOR MEXICO: [EC-977. "Removal and Installation"](#)
- VK56VD FOR USA AND CANADA: [EC-1568. "Removal and Installation"](#)
- VK56VD FOR MEXICO: [EC-2028. "Removal and Installation"](#)

YES (Past error)>>Error was detected in the ECM branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M30.
2. Check the continuity between the ECM harness connector and the harness connector.
 - VQ37VHR

ECM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

M107	114	M30	439	Existed
	113		438	Existed

- VK56VD

ECM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M160	146	M30	439	Existed
	151		438	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO (VQ37VHR)>>Repair the harness between the ECM harness connector M107 and the harness connector M30.

NO (VK56VD)>>Repair the harness between the ECM harness connector M160 and the harness connector M30.

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

Diagnosis Procedure

INFOID:000000013044051

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Data link connector
 - Harness connector M181
 - Harness connector M105
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M182	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit (CAN communication circuit 1 side). Refer to [LAN-79. "System Diagram"](#).

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M182	6	M23	151	Existed
	14		150	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the data link connector M182 and the harness connector M23.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

Diagnosis Procedure

INFOID:000000013044052

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Data link connector
 - Harness connector M181
 - Harness connector M105
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M182	13	12	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M182	13	M23	134	Existed
	12		136	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the data link connector M182 and the harness connector M23.

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044053

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Air bag diagnosis sensor unit
 - Harness connector M26 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace the main harness and/or the PCB harness.

2. CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-33. "Work Flow"](#).

Is the inspection result normal?

- YES >> Replace the main harness and/or the PCB harness.
NO >> Replace parts whose air bag system has a malfunction.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044054

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Combination meter
 - Harness connector M24 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M53	14	15	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter Refer to [MWI-75. "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the combination meter. Refer to [MWI-95. "Removal and Installation"](#).
 YES (Past error)>>Error was detected in the combination meter branch line.
 NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M24.
2. Check the continuity between the combination meter harness connector and the harness connector.

Combination meter harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M53	14	M24	176	Existed
	15		177	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
 NO >> Repair the harness between the combination meter harness connector M53 and the harness connector M24.

TCU BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

TCU BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044055

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - TCU
 - Harness connector M26 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of TCU.
2. Check the resistance between the TCU harness connector terminals.

TCU harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M216	9	10	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCU. Refer to [AV-511, "TCU : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the TCU. Refer to [AV-520, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the TCU branch line.

NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M26.
2. Check the continuity between the TCU harness connector and the harness connector.

TCU harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M216	9	M26	242	Existed
	10		262	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the TCU harness connector M216 and the harness connector M26.

TPMS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

TPMS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044056

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Low tire pressure warning control unit
 - Harness connector M29 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of low tire pressure warning control unit.
2. Check the resistance between the low tire pressure warning control unit harness connector terminals.

Low tire pressure warning control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M43	2	1	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the low tire pressure warning control unit. Refer to [WT-52. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the low tire pressure warning control unit. Refer to [WT-66. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the low tire pressure warning control unit branch line.
NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M29.
2. Check the continuity between the low tire pressure warning control unit harness connector and the harness connector.

Low tire pressure warning control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M43	2	M29	396	Existed
	1		395	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the low tire pressure warning control unit harness connector M43 and the harness connector M29.

HVAC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044057

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - A/C auto amp.
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/C auto amp.
2. Check the resistance between the A/C auto amp. harness connector terminals.

A/C auto amp. harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M66	12	11	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the A/C auto amp. Refer to [HAC-107. "A/C AUTO AMP. : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the A/C auto amp. Refer to [HAC-126. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the A/C auto amp. branch line.
NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the A/C auto amp. harness connector and the harness connector.

A/C auto amp. harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M28	325	Existed
	11		327	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the A/C auto amp. harness connector M66 and the harness connector M28.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044058

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - AV control unit
 - Harness connector M25 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
2. Check the resistance between the AV control unit harness connector terminals.
 - Models with navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M210	90	74	Approx. 54 – 66

- Models without navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M84	81	80	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to the following.

- Base audio without navigation system: [AV-94. "AV CONTROL UNIT : Diagnosis Procedure"](#)
- BOSE audio with navigation system: [AV-373. "AV CONTROL UNIT : Diagnosis Procedure"](#)

Is the inspection result normal?

YES (Present error)>>Replace the AV control unit. Refer to the following.

- Base audio without navigation system: [AV-126. "Removal and Installation"](#)
- BOSE audio with navigation system: [AV-407. "Removal and Installation"](#)

YES (Past error)>>Error was detected in the AV control unit branch line.

NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M25.
2. Check the continuity between the AV control unit harness connector and the harness connector.
 - Models with navigation system

AV control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M210	90	M25	201	Existed
	74		221	Existed

- Models without navigation system

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

AV control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M84	81	M25	201	Existed
	80		221	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO (With navigation system)>>Repair the harness between the AV control unit harness connector M210 and the harness connector M25.

NO (Without navigation system)>>Repair the harness between the AV control unit harness connector M84 and the harness connector M25.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044059

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - BCM
 - Harness connector M22 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M120	39	40	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-88. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to [BCS-95. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the BCM branch line.
NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M22.
2. Check the continuity between the BCM harness connector and the harness connector.

BCM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M120	39	M22	101	Existed
	40		102	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the BCM harness connector M120 and the harness connector M22.

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044060

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - A/T assembly
 - Harness connector F103
 - Harness connector M116
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/T assembly.
2. Check the resistance between the A/T assembly harness connector terminals.

A/T assembly harness connector		Resistance (Ω)
Connector No.	Terminal No.	
F61	3 8	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 5.

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Remove the joint connector. Refer to [TM-192, "Removal and Installation"](#).
2. Check the continuity between the A/T assembly harness connector side and the TCM harness connector side of the joint connector.

A/T assembly harness connector side	TCM harness connector side	Continuity
Terminal No.	Terminal No.	
3	3	Existed
8	8	Existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Replace the joint connector.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-159, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the control valve & TCM. Refer to [TM-192, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the TCM branch line.
NO >> Repair the power supply and the ground circuit.

5.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the A/T assembly harness connector and the harness connector.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

A/T assembly harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
F61	3	M28	346	Existed
	8		347	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the A/T assembly harness connector F61 and the harness connector M28.

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044061

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Steering angle sensor
 - Harness connector M22 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M37	1	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to [BRC-52. "Wiring Diagram"](#).

Is the inspection result normal?

YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-168. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the steering angle sensor branch line.

NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M22.
2. Check the continuity between the steering angle sensor harness connector and the harness connector.

Steering angle sensor harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M37	1	M22	81	Existed
	2		82	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the steering angle sensor harness connector M37 and the harness connector M22.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

Diagnosis Procedure

INFOID:000000013044062

1. CHECK DTC

Check DTC of the CAN gateway with CONSULT.

Is U1010 or B2600 indicated?

- YES >> Perform a diagnosis of the indicated DTC.
- NO >> GO TO 2.

2. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - CAN gateway
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair the terminal and connector.

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of CAN gateway.
2. Check the resistance between the CAN gateway harness connector terminals.

CAN gateway harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M125	1	7	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 4.
- NO >> GO TO 5.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the CAN gateway. Refer to [LAN-167, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the CAN gateway. Refer to [LAN-168, "Removal and Installation"](#).
- YES (Past error)>>Error was detected in the CAN gateway branch line (CAN communication circuit 1 side). Refer to [LAN-79, "System Diagram"](#).
- NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the CAN gateway harness connector and the harness connector.

CAN gateway harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M125	1	M28	326	Existed
	7		328	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
- NO >> Repair the harness between the CAN gateway harness connector M125 and the harness connector M28.

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

Diagnosis Procedure

INFOID:000000013044063

1. CHECK DTC

Check DTC of the CAN gateway with CONSULT.

Is U1010 or B2600 indicated?

- YES >> Perform a diagnosis of the indicated DTC.
- NO >> GO TO 2.

2. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - CAN gateway
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair the terminal and connector.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> GO TO 5.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the CAN gateway. Refer to [LAN-167, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the CAN gateway. Refer to [LAN-168, "Removal and Installation"](#).
- YES (Past error)>>Error was detected in the CAN gateway branch line (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).
- NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the CAN gateway harness connector and the harness connector.

CAN gateway harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M125	4	M23	133	Existed
	10		135	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
- NO >> Repair the harness between the CAN gateway harness connector M125 and the harness connector M23.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044065

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E41	25	15	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-143. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-165. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.
NO >> Repair the power supply and the ground circuit.

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044067

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E6	40	39	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the IPDM E/R branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-33, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the IPDM E/R branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

AVM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

AVM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044068

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of around view monitor control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of around view monitor control unit.
2. Check the resistance between the around view monitor control unit harness connector terminals.

Around view monitor control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M231	27	28	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the around view monitor control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the around view monitor control unit. Refer to [AV-375, "AROUND VIEW MONITOR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the around view monitor control unit. Refer to [AV-429, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the around view monitor control unit branch line.
NO >> Repair the power supply and the ground circuit.

ADP BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

ADP BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044070

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Driver seat control unit
 - Harness connector B501
 - Harness connector B11
 - CAN gateway (With ICC system)

Is the inspection result normal?

YES (With ICC system)>>GO TO 2.

YES (Without ICC system)>>GO TO 3.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line is open) the root cause (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway. (With ICC system)
2. Disconnect the connector of driver seat control unit.
3. Check the resistance between the driver seat control unit harness connector terminals.

Driver seat control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B514	23	24	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the driver seat control unit branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the driver seat control unit. Refer to [ADP-74, "DRIVER SEAT CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the driver seat control unit. Refer to [ADP-147, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the driver seat control unit branch line.

NO >> Repair the power supply and the ground circuit.

CAN COMMUNICATION CIRCUIT 1

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

CAN COMMUNICATION CIRCUIT 1

Diagnosis Procedure

INFOID:000000013044080

1. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit 1.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-79. "System Diagram"](#).

4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M182	6 14	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

3. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M182	6		Not existed
	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

4. CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.
 - VQ37VHR

ECM		Resistance (Ω)
Terminal No.		
114	113	Approx. 108 – 132

- VK56VD

ECM		Resistance (Ω)
Terminal No.		
146	151	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

CAN COMMUNICATION CIRCUIT 1

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

IPDM E/R		Resistance (Ω)
Terminal No.		
40	39	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit 1.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

CAN COMMUNICATION CIRCUIT 2

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

CAN COMMUNICATION CIRCUIT 2

Diagnosis Procedure

INFOID:000000013044081

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit 2.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-79. "System Diagram"](#).

4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M182	13	Not existed
	12	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M182	13		Not existed
	12		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

4.CHECK CAN GATEWAY TERMINATION CIRCUIT

1. Remove the CAN gateway.
2. Check the resistance between the CAN gateway terminals.

CAN gateway		Resistance (Ω)
Terminal No.		
4	10	Approx. 108 – 132
6	12	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the CAN gateway.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

Inspection result

Reproduced>>GO TO 6.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

CAN COMMUNICATION CIRCUIT 2

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit 2.

NOTE:

CAN gateway has two termination circuits. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

Diagnosis Procedure

INFOID:0000000013044086

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connectors M181 and M105
 - Combination meter
4. Check the continuity between the harness connector and the combination meter harness connector.

Harness connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M105	7	M53	14	Existed
	8		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the air bag diagnosis sensor unit.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT

Diagnosis Procedure

INFOID:000000013044087

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connectors M181 and M105
 - Combination meter
4. Check the continuity between the harness connector and the combination meter harness connector.

Harness connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M105	7	M53	14	Existed
	8		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the air bag diagnosis sensor unit and the combination meter.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN M&A AND TCU CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

MAIN LINE BETWEEN M&A AND TCU CIRCUIT

Diagnosis Procedure

INFOID:000000013044088

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Combination meter
 - TCU
4. Check the continuity between the combination meter harness connector and the TCU harness connector.

Combination meter harness connector		TCU harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M53	14	M216	9	Existed
	15		10	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the combination meter and the TCU.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN TCU AND TPMS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

MAIN LINE BETWEEN TCU AND TPMS CIRCUIT

Diagnosis Procedure

INFOID:000000013044090

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - TCU
 - Low tire pressure warning control unit
4. Check the continuity between the low tire pressure warning control unit harness connector and the A/C auto amp. harness connector.

TCU harness connector		Low tire pressure warning control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M216	9	M43	2	Existed
	10		1	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the TCU and the low tire pressure warning control unit.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT

Diagnosis Procedure

INFOID:000000013044091

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Low tire pressure warning control unit
 - A/C auto amp.
4. Check the continuity between the low tire pressure warning control unit harness connector and the A/C auto amp. harness connector.

Low tire pressure warning control unit harness connector		A/C auto amp. harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M43	2	M66	12	Existed
	1		11	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the low tire pressure warning control unit and the A/C auto amp.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN HVAC AND AV CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

MAIN LINE BETWEEN HVAC AND AV CIRCUIT

Diagnosis Procedure

INFOID:000000013044092

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - A/C auto amp.
 - AV control unit
4. Check the continuity between the A/C auto amp. harness connector and the AV control unit harness connector.
 - Models with navigation system

A/C auto amp. harness connector		AV control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M210	90	Existed
	11		74	Existed

- Models without navigation system

A/C auto amp. harness connector		AV control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M84	81	Existed
	11		80	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the A/C amp. and the AV control unit.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN AV AND BCM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

MAIN LINE BETWEEN AV AND BCM CIRCUIT

Diagnosis Procedure

INFOID:000000013044093

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - AV control unit
 - BCM
4. Check the continuity between the AV control unit harness connector and the BCM harness connector.
 - Models with navigation system

AV control unit harness connector		BCM harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M210	90	M120	39	Existed
	74		40	Existed

- Models without navigation system

AV control unit harness connector		BCM harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M84	81	M120	39	Existed
	80		40	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the AV control unit and the BCM.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN BCM AND TCM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

MAIN LINE BETWEEN BCM AND TCM CIRCUIT

Diagnosis Procedure

INFOID:000000013044094

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - BCM
 - Harness connector F103 and M116
4. Check the continuity between the BCM harness connector and the A/T assembly harness connector.

BCM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M120	39	M116	11	Existed
	40		12	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the BCM and the A/T assembly.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN TCM AND STRG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

MAIN LINE BETWEEN TCM AND STRG CIRCUIT

Diagnosis Procedure

INFOID:000000013044095

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connector F103 and M116
 - Steering angle sensor
4. Check the continuity between the harness connector and the steering angle sensor harness connector.

Harness connector		Steering angle sensor harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M116	11	M37	1	Existed
	12		2	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the A/T assembly and the steering angle sensor.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN STRG AND CGW CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

MAIN LINE BETWEEN STRG AND CGW CIRCUIT

Diagnosis Procedure

INFOID:000000013044097

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Steering angle sensor
 - CAN gateway
4. Check the continuity between the steering angle sensor harness connector and the CAN gateway harness connector.

Steering angle sensor harness connector		CAN gateway harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M37	1	M125	1	Existed
	2		7	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the steering angle sensor and the CAN gateway.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN CGW AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

MAIN LINE BETWEEN CGW AND ABS CIRCUIT

Diagnosis Procedure

INFOID:000000013044099

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M28 and PCB harness side connector
 - Harness connector M20 and PCB harness side connector
 - Harness connector M7
 - Harness connector B1
 - Harness connector M6
 - Harness connector E106

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the steering angle sensor and the PCB harness connector.

CAN gateway harness connector		PCB harness connector		Continuity
Connector No.	Terminal No.	Terminal No.		
M125	1	326		Existed
	7	328		Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the PCB harness.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M20.
2. Check the continuity between the PCB harness connectors.

PCB harness connector			Continuity
Terminal No.			
326	35		Existed
328	36		Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the PCB harness.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M7 and B1.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M20	35	M7	72	Existed
	36		73	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the main line between the harness connectors M20 and M7.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN CGW AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector terminals.

Connector No.	Terminal No.		Continuity
B1	72	74	Existed
	73	75	Existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace the body harness.

6. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M6 and E106.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M7	74	M6	22	Existed
	75		23	Existed

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace the body harness.

7. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector of ABS actuator and electric unit (control unit).
2. Check the continuity between the harness connector and the ABS actuator and electric unit (control unit) harness connector.

Harness connector		ABS actuator and electric unit (control unit) harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E106	22	E41	25	Existed
	23		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the CAN gateway and the ABS actuator and electric unit (control unit).

NO >> Repair the main line between the harness connector E106 and ABS actuator and electric unit (control unit).

MAIN LINE BETWEEN DLC AND ICC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

MAIN LINE BETWEEN DLC AND ICC CIRCUIT

Diagnosis Procedure

INFOID:000000013044104

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M20 and PCB harness side connector
 - Harness connector M117
 - Harness connector B201
 - Harness connector B222
 - Harness connector B5

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M20.
2. Check the continuity between the data link connector and the PCB harness connector.

Data link connector		PCB harness connector		Continuity
Connector No.	Terminal No.	Terminal No.		
M182	13	24		Existed
	12	27		Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the PCB harness.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M117 and B5.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M20	24	M117	72	Existed
	27		73	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M20 and M117.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors B222 and B5.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B201	72	B222	13	Existed
	73		14	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the main line between the harness connectors B201 and B222.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN DLC AND ICC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector of ADAS control unit.
2. Check the continuity between the harness connectors.

Harness connector		ADAS control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B5	13	B10	1	Existed
	14		2	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the ADAS control unit.

NO >> Replace the body harness.

MAIN LINE BETWEEN RDR-L AND RDR-R CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

MAIN LINE BETWEEN RDR-L AND RDR-R CIRCUIT

Diagnosis Procedure

INFOID:000000013044105

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B33
 - Harness connector B245

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar LH
 - Harness connectors B33 and B245
2. Check the continuity between the side radar LH harness connector and the harness connector.

Side radar LH harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B52	4	B33	13	Existed
	3		14	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the side radar LH and the harness connector B33.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of side radar RH.
2. Check the continuity between the harness connector and the side radar RH harness connector.

Harness connector		Side radar RH harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B245	13	B252	4	Existed
	14		3	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the side radar LH and the side radar RH.

NO >> Repair the main line between the harness connector B245 and the side radar RH.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN RDR-R AND APA CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

MAIN LINE BETWEEN RDR-R AND APA CIRCUIT

Diagnosis Procedure

INFOID:000000013044106

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B201
 - Harness connector M117
 - Harness connector M20 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar RH
 - Harness connectors B201 and M117
2. Check the continuity between the side radar RH harness connector and the harness connector.

Side radar RH harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B252	4	B201	66	Existed
	3		67	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the side radar RH and the harness connector B201.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M20.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M117	66	M20	38	Existed
	67		40	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M117 and M20.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M150 and M151.
2. Check the continuity between the PCB harness connector and the harness connector.

PCB harness connector		Harness connector		Continuity
Terminal No.	Terminal No.	Connector No.	Terminal No.	
38	40	M150	11	Existed
40			10	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the side radar RH and the accelerator pedal actuator.

MAIN LINE BETWEEN RDR-R AND APA CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

NO >> Replace the PCB harness.

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

MAIN LINE BETWEEN APA AND LANE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

MAIN LINE BETWEEN APA AND LANE CIRCUIT

Diagnosis Procedure

INFOID:000000013044107

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ADAS control unit
 - Harness connectors M151 and M150
 - Harness connectors M110 and R7
4. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M150	11	M110	13	Existed
	10		2	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the accelerator pedal actuator and the lane camera unit.

NO >> Replace the PCB harness.

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044108

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ECM
 - Harness connector M30 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.
 - VQ37VHR

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M107	114	113	Approx. 108 – 132

- VK56VD

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M160	146	151	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to the following.

- VQ37VHR FOR USA AND CANADA: [EC-202. "Diagnosis Procedure"](#)
- VQ37VHR FOR MEXICO: [EC-716. "Diagnosis Procedure"](#)
- VK56VD FOR USA AND CANADA: [EC-1171. "Diagnosis Procedure"](#)
- VK56VD FOR MEXICO: [EC-1746. "Diagnosis Procedure"](#)

Is the inspection result normal?

YES (Present error)>>Replace the ECM. Refer to the following.

- VQ37VHR FOR USA AND CANADA: [EC-559. "Removal and Installation"](#)
- VQ37VHR FOR MEXICO: [EC-977. "Removal and Installation"](#)
- VK56VD FOR USA AND CANADA: [EC-1568. "Removal and Installation"](#)
- VK56VD FOR MEXICO: [EC-2028. "Removal and Installation"](#)

YES (Past error)>>Error was detected in the ECM branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M30.
2. Check the continuity between the ECM harness connector and the harness connector.
 - VQ37VHR

ECM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

M107	114	M30	439	Existed
	113		438	Existed

- VK56VD

ECM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M160	146	M30	439	Existed
	151		438	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO (VQ37VHR)>>Repair the harness between the ECM harness connector M107 and the harness connector M30.

NO (VK56VD)>>Repair the harness between the ECM harness connector M160 and the harness connector M30.

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

Diagnosis Procedure

INFOID:0000000013044110

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Data link connector
 - Harness connector M181
 - Harness connector M105
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M182	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit (CAN communication circuit 1 side). Refer to [LAN-79. "System Diagram"](#).

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M182	6	M23	151	Existed
	14		150	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the data link connector M182 and the harness connector M23.

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

Diagnosis Procedure

INFOID:0000000013044111

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Data link connector
 - Harness connector M181
 - Harness connector M105
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M182	13	12	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M182	13	M23	134	Existed
	12		136	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the data link connector M182 and the harness connector M23.

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044112

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Air bag diagnosis sensor unit
 - Harness connector M26 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace the main harness and/or the PCB harness.

2. CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-33. "Work Flow"](#).

Is the inspection result normal?

- YES >> Replace the main harness and/or the PCB harness.
NO >> Replace parts whose air bag system has a malfunction.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044113

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Combination meter
 - Harness connector M24 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M53	14	15	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter Refer to [MWI-75. "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the combination meter. Refer to [MWI-95. "Removal and Installation"](#).
 YES (Past error)>>Error was detected in the combination meter branch line.
 NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M24.
2. Check the continuity between the combination meter harness connector and the harness connector.

Combination meter harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M53	14	M24	176	Existed
	15		177	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
 NO >> Repair the harness between the combination meter harness connector M53 and the harness connector M24.

TCU BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

TCU BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000013044114

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - TCU
 - Harness connector M26 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of TCU.
2. Check the resistance between the TCU harness connector terminals.

TCU harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M216	9	10	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCU. Refer to [AV-511, "TCU : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the TCU. Refer to [AV-520, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the TCU branch line.
NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M26.
2. Check the continuity between the TCU harness connector and the harness connector.

TCU harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M216	9	M26	242	Existed
	10		262	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the TCU harness connector M216 and the harness connector M26.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

TPMS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

TPMS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044115

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Low tire pressure warning control unit
 - Harness connector M29 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of low tire pressure warning control unit.
2. Check the resistance between the low tire pressure warning control unit harness connector terminals.

Low tire pressure warning control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M43	2	1	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the low tire pressure warning control unit. Refer to [WT-52. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the low tire pressure warning control unit. Refer to [WT-66. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the low tire pressure warning control unit branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M29.
2. Check the continuity between the low tire pressure warning control unit harness connector and the harness connector.

Low tire pressure warning control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M43	2	M29	396	Existed
	1		395	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the low tire pressure warning control unit harness connector M43 and the harness connector M29.

HVAC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000013044116

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - A/C auto amp.
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/C auto amp.
2. Check the resistance between the A/C auto amp. harness connector terminals.

A/C auto amp. harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M66	12	11	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the A/C auto amp. Refer to [HAC-107. "A/C AUTO AMP. : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the A/C auto amp. Refer to [HAC-126. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the A/C auto amp. branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the A/C auto amp. harness connector and the harness connector.

A/C auto amp. harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M28	325	Existed
	11		327	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the A/C auto amp. harness connector M66 and the harness connector M28.

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044117

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - AV control unit
 - Harness connector M25 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
2. Check the resistance between the AV control unit harness connector terminals.
 - Models with navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M210	90	74	Approx. 54 – 66

- Models without navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M84	81	80	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to the following.

- Base audio without navigation system: [AV-94. "AV CONTROL UNIT : Diagnosis Procedure"](#)
- BOSE audio with navigation system: [AV-373. "AV CONTROL UNIT : Diagnosis Procedure"](#)

Is the inspection result normal?

YES (Present error)>>Replace the AV control unit. Refer to the following.

- Base audio without navigation system: [AV-126. "Removal and Installation"](#)
- BOSE audio with navigation system: [AV-407. "Removal and Installation"](#)

YES (Past error)>>Error was detected in the AV control unit branch line.

NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M25.
2. Check the continuity between the AV control unit harness connector and the harness connector.
 - Models with navigation system

AV control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M210	90	M25	201	Existed
	74		221	Existed

- Models without navigation system

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

AV control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M84	81	M25	201	Existed
	80		221	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO (With navigation system)>>Repair the harness between the AV control unit harness connector M210 and the harness connector M25.

NO (Without navigation system)>>Repair the harness between the AV control unit harness connector M84 and the harness connector M25.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044118

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - BCM
 - Harness connector M22 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M120	39	40	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-88. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the BCM. Refer to [BCS-95. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the BCM branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M22.
2. Check the continuity between the BCM harness connector and the harness connector.

BCM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M120	39	M22	101	Existed
	40		102	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the BCM harness connector M120 and the harness connector M22.

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000013044119

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - A/T assembly
 - Harness connector F103
 - Harness connector M116
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/T assembly.
2. Check the resistance between the A/T assembly harness connector terminals.

A/T assembly harness connector		Resistance (Ω)
Connector No.	Terminal No.	
F61	3 8	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 5.

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Remove the joint connector. Refer to [TM-192, "Removal and Installation"](#).
2. Check the continuity between the A/T assembly harness connector side and the TCM harness connector side of the joint connector.

A/T assembly harness connector side	TCM harness connector side	Continuity
Terminal No.	Terminal No.	
3	3	Existed
8	8	Existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Replace the joint connector.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-159, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the control valve & TCM. Refer to [TM-192, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the TCM branch line.
NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the A/T assembly harness connector and the harness connector.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

A/T assembly harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
F61	3	M28	346	Existed
	8		347	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the A/T assembly harness connector F61 and the harness connector M28.

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044120

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Steering angle sensor
 - Harness connector M22 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M37	1	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to [BRC-52. "Wiring Diagram"](#).

Is the inspection result normal?

YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-168. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the steering angle sensor branch line.

NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M22.
2. Check the continuity between the steering angle sensor harness connector and the harness connector.

Steering angle sensor harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M37	1	M22	81	Existed
	2		82	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the steering angle sensor harness connector M37 and the harness connector M22.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

Diagnosis Procedure

INFOID:000000013044121

1. CHECK DTC

Check DTC of the CAN gateway with CONSULT.

Is U1010 or B2600 indicated?

- YES >> Perform a diagnosis of the indicated DTC.
- NO >> GO TO 2.

2. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - CAN gateway
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair the terminal and connector.

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of CAN gateway.
2. Check the resistance between the CAN gateway harness connector terminals.

CAN gateway harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M125	1	7	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 4.
- NO >> GO TO 5.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the CAN gateway. Refer to [LAN-167, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the CAN gateway. Refer to [LAN-168, "Removal and Installation"](#).
- YES (Past error)>>Error was detected in the CAN gateway branch line (CAN communication circuit 1 side). Refer to [LAN-79, "System Diagram"](#).
- NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the CAN gateway harness connector and the harness connector.

CAN gateway harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M125	1	M28	326	Existed
	7		328	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
- NO >> Repair the harness between the CAN gateway harness connector M125 and the harness connector M28.

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

Diagnosis Procedure

INFOID:000000013044122

1. CHECK DTC

Check DTC of the CAN gateway with CONSULT.

Is U1010 or B2600 indicated?

- YES >> Perform a diagnosis of the indicated DTC.
- NO >> GO TO 2.

2. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - CAN gateway
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair the terminal and connector.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> GO TO 5.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the CAN gateway. Refer to [LAN-167, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the CAN gateway. Refer to [LAN-168, "Removal and Installation"](#).
- YES (Past error)>>Error was detected in the CAN gateway branch line (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).
- NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the CAN gateway harness connector and the harness connector.

CAN gateway harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M125	4	M23	133	Existed
	10		135	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
- NO >> Repair the harness between the CAN gateway harness connector M125 and the harness connector M23.

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044124

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E41	25	15	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-143. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-165. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.
NO >> Repair the power supply and the ground circuit.

AFS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

AFS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044125

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the AFS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AFS control unit.
2. Check the resistance between the AFS control unit harness connector terminals.

AFS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E70	1	13	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the AFS control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AFS control unit. Refer to [EXL-95, "AFS CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the AFS control unit. Refer to [EXL-148, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the AFS control unit branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044126

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E6	40	39	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the IPDM E/R branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-33, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the IPDM E/R branch line.
NO >> Repair the power supply and the ground circuit.

AVM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

AVM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044127

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of around view monitor control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of around view monitor control unit.
2. Check the resistance between the around view monitor control unit harness connector terminals.

Around view monitor control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M231	27	28	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the around view monitor control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the around view monitor control unit. Refer to [AV-375, "AROUND VIEW MONITOR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the around view monitor control unit. Refer to [AV-429, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the around view monitor control unit branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

SONAR BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

SONAR BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044128

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Sonar control unit
 - Harness connector M117 and B201

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of sonar control unit.
2. Check the resistance between the sonar control unit harness connector terminals.

Sonar control unit harness connector		Resistance (Ω)
Connector No.	Terminal No.	
M47	19 20	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the power supply and the ground circuit.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the sonar control unit. Refer to [AV-376, "SONAR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the sonar control unit. Refer to the [AV-433, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the sonar control unit branch line.

NO >> Repair the power supply and the ground circuit.

ADP BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

ADP BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044129

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Driver seat control unit
 - Harness connector B501
 - Harness connector B11
 - CAN gateway (With ICC system)

Is the inspection result normal?

YES (With ICC system)>>GO TO 2.

YES (Without ICC system)>>GO TO 3.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line is open) the root cause (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway. (With ICC system)
2. Disconnect the connector of driver seat control unit.
3. Check the resistance between the driver seat control unit harness connector terminals.

Driver seat control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B514	23	24	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the driver seat control unit branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the driver seat control unit. Refer to [ADP-74, "DRIVER SEAT CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the driver seat control unit. Refer to [ADP-147, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the driver seat control unit branch line.

NO >> Repair the power supply and the ground circuit.

ICC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044130

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ADAS control unit
 - CAN gateway

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> Check the harness and repair or replace (if shield line is open) the root cause (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway.
2. Disconnect the connector of ADAS control unit.
3. Check the resistance between the ADAS control unit harness connector terminals.

ADAS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B10	1	2	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 4.
 NO >> Replace the body harness.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ADAS control unit. Refer to [DAS-162, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ADAS control unit. Refer to [DAS-163, "Removal and Installation"](#).
 YES (Past error)>>Error was detected in the ADAS control unit branch line.
 NO >> Repair the power supply and the ground circuit.

PSB BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044131

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Pre-crash seat belt control unit (driver side)
 - CAN gateway

Is the inspection result normal?

- YES >> GO TO 2.
- NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector		Continuity	
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Check the harness and repair or replace (if shield line is open) the root cause (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway.
2. Disconnect the connector of pre-crash seat belt control unit (driver side).
3. Check the resistance between the pre-crash seat belt control unit (driver side) harness connector terminals.

Pre-crash seat belt control unit (driver side) harness connector		Resistance (Ω)	
Connector No.	Terminal No.		
B65	14	4	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 4.
- NO >> Repair the pre-crash seat belt control unit (driver side) branch line.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the pre-crash seat belt control unit (driver side). Refer to [SBC-53, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the seat belt pre-tensioner retractor (driver side). Refer to [SB-8, "SEAT BELT RETRACTOR : Removal and Installation"](#).
- YES (Past error)>>Error was detected in the pre-crash seat belt control unit (driver side) branch line.
- NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

RDR-L BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

RDR-L BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044132

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the side radar LH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of side radar LH.
2. Check the resistance between the side radar LH harness connector terminals.

Side radar LH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B52	4	3	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the side radar LH branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar LH. Refer to [DAS-346, "SIDE RADAR LH : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the side radar LH. Refer to [DAS-393, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the side radar LH branch line.
NO >> Repair the power supply and the ground circuit.

BSW/BUZZER BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

BSW/BUZZER BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044133

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the driver assistance buzzer control module for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of driver assistance buzzer control module.
2. Check the resistance between the driver assistance buzzer control module harness connector terminals.

Driver assistance buzzer control module harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B210	3	11	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the driver assistance buzzer control module branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the driver assistance buzzer control module. Refer to [DAS-347, "DRIVER ASSISTANCE BUZZER CONTROL MODULE : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the driver assistance buzzer control module. Refer to [DAS-396, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the driver assistance buzzer control module branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

RDR-R BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

RDR-R BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044134

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the side radar RH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK RIGHT/LEFT SWITCHING SIGNAL CIRCUIT

Check the right/left switching signal circuit of the side radar RH. Refer to [DAS-349. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair the root cause.

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of side radar RH.
2. Check the resistance between the side radar RH harness connector terminals.

Side radar RH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B252	4	3	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 4.
NO >> Repair the side radar RH branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar RH. Refer to [DAS-347. "SIDE RADAR RH : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the side radar RH. Refer to [DAS-393. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the side radar RH branch line.
NO >> Repair the power supply and the ground circuit.

APA BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

APA BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044135

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Accelerator pedal position sensor
 - Harness connector M151
 - Harness connector M150
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of accelerator pedal position sensor.
2. Check the resistance between the accelerator pedal position sensor harness connector terminals.

Accelerator pedal position sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M154	3	9	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the accelerator pedal position sensor. Refer to [DAS-345, "ACCELERATOR PEDAL ACTUATOR : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the accelerator pedal assembly. Refer to [ACC-6, "MODELS WITH DISTANCE CONTROL ASSIST SYSTEM : Removal and Installation"](#).

YES (Past error)>>Error was detected in the accelerator pedal position sensor branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the accelerator pedal position sensor harness connector and the harness connector.

Accelerator pedal position sensor harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M154	3	M23	138	Existed
	9		137	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the accelerator pedal position sensor harness connector M152 and the harness connector M23.

LANE BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

LANE BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044136

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Lane camera unit
 - Harness connector R7
 - Harness connector M110
 - Harness connector M24 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of lane camera unit.
2. Check the resistance between the lane camera unit harness connector terminals.

Lane camera unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
R8	4	8	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the lane camera unit. Refer to [DAS-345, "LANE CAMERA UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the lane camera unit. Refer to [DAS-392, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the lane camera unit branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M24.
2. Check the continuity between the lane camera unit harness connector and the harness connector.

Lane camera unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
R8	4	M24	179	Existed
	8		178	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the lane camera unit harness connector R8 and the harness connector M24.

LASER BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

LASER BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044137

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ICC sensor
 - Harness connector E106
 - Harness connector M6
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ICC sensor.
2. Check the resistance between the ICC sensor harness connector terminals.

ICC sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E33	3	6	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ICC sensor. Refer to [CCS-116, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ICC sensor. Refer to [CCS-133, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ICC sensor branch line.
NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the ICC sensor harness connector and the harness connector.

ICC sensor harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E33	3	M28	343	Existed
	6		345	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the ICC sensor harness connector E67 and the harness connector M28.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CAN COMMUNICATION CIRCUIT 1

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

CAN COMMUNICATION CIRCUIT 1

Diagnosis Procedure

INFOID:000000013044139

1. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit 1.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-79. "System Diagram"](#).

4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M182	6 14	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

3. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M182	6		Not existed
	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

4. CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.
 - VQ37VHR

ECM		Resistance (Ω)
Terminal No.		
114	113	Approx. 108 – 132

- VK56VD

ECM		Resistance (Ω)
Terminal No.		
146	151	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

CAN COMMUNICATION CIRCUIT 1

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

IPDM E/R		Resistance (Ω)
Terminal No.		
40	39	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit 1.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

CAN COMMUNICATION CIRCUIT 2

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

CAN COMMUNICATION CIRCUIT 2

Diagnosis Procedure

INFOID:000000013044140

1. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit 2.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-79. "System Diagram"](#).

4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M182	13	Not existed
	12	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

3. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M182	13		Not existed
	12		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

4. CHECK CAN GATEWAY TERMINATION CIRCUIT

1. Remove the CAN gateway.
2. Check the resistance between the CAN gateway terminals.

CAN gateway		Resistance (Ω)
Terminal No.		
4	10	Approx. 108 – 132
6	12	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the CAN gateway.

5. CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

Inspection result

Reproduced>>GO TO 6.

CAN COMMUNICATION CIRCUIT 2

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit 2.

NOTE:

CAN gateway has two termination circuits. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

ITS COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

ITS COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000013044141

1. CHECK CAN DIAGNOSIS

Check the CAN diagnosis results from CONSULT to see that the CAN communication circuit 1 and CAN communication circuit 2 have no malfunction.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-79. "System Diagram"](#).

Are the CAN communication 1 and CAN communication 2 circuits normal?

YES >> GO TO 2.

NO >> Check and repair CAN communication circuit 1 and/or CAN communication circuit 2.

2. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ADAS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the terminal and connector.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - ADAS control unit
 - ICC sensor
2. Check the continuity between the ADAS control unit harness connector and the ICC sensor harness connector.

ADAS control unit harness connector		ICC sensor harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B10	6	E33	3	Existed
	7		6	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the body harness.

4. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar LH
 - Side radar RH
 - Accelerator pedal actuator
 - Lane camera unit
2. Check the continuity between the ADAS control unit harness connector terminals.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
B10	6	7	Not existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

5. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the ADAS control unit harness connector and the ground.

ITS COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

ADAS control unit harness connector		Ground	Continuity
Connector No.	Terminal No.		
B10	6		
	7		Not existed

A
B

Is the inspection result normal?

YES >> GO TO 6.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

C

6.CHECK TERMINATION CIRCUIT

1. Remove the ADAS control unit and the ICC sensor.
2. Check the resistance between the ADAS control unit terminals.

D

ADAS control unit		Resistance (Ω)
Terminal No.		
6	7	Approx. 108 – 132

E
F

3. Check the resistance between the ICC sensor terminals.

ICC sensor		Resistance (Ω)
Terminal No.		
3	6	Approx. 108 – 132

G
H

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace the ADAS control unit and/or the ICC sensor.

I

7.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

J

Inspection result

Reproduced>>GO TO 8.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

K

8.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

L

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of ITS communication system.

NOTE:

ADAS control unit and ICC sensor have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

N

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

O

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

P

LAN

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

Diagnosis Procedure

INFOID:000000013044145

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connectors M181 and M105
 - Combination meter
4. Check the continuity between the harness connector and the combination meter harness connector.

Harness connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M105	7	M53	14	Existed
	8		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the air bag diagnosis sensor unit.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT

Diagnosis Procedure

INFOID:000000013044146

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connectors M181 and M105
 - Combination meter
4. Check the continuity between the harness connector and the combination meter harness connector.

Harness connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M105	7	M53	14	Existed
	8		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the air bag diagnosis sensor unit and the combination meter.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN M&A AND TCU CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

MAIN LINE BETWEEN M&A AND TCU CIRCUIT

Diagnosis Procedure

INFOID:000000013044147

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Combination meter
 - TCU
4. Check the continuity between the combination meter harness connector and the TCU harness connector.

Combination meter harness connector		TCU harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M53	14	M216	9	Existed
	15		10	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the combination meter and the TCU.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN TCU AND TPMS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

MAIN LINE BETWEEN TCU AND TPMS CIRCUIT

Diagnosis Procedure

INFOID:000000013044149

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - TCU
 - Low tire pressure warning control unit
4. Check the continuity between the low tire pressure warning control unit harness connector and the A/C auto amp. harness connector.

TCU harness connector		Low tire pressure warning control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M216	9	M43	2	Existed
	10		1	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the TCU and the low tire pressure warning control unit.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT

Diagnosis Procedure

INFOID:000000013044150

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Low tire pressure warning control unit
 - A/C auto amp.
4. Check the continuity between the low tire pressure warning control unit harness connector and the A/C auto amp. harness connector.

Low tire pressure warning control unit harness connector		A/C auto amp. harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M43	2	M66	12	Existed
	1		11	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the low tire pressure warning control unit and the A/C auto amp.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN HVAC AND AV CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

MAIN LINE BETWEEN HVAC AND AV CIRCUIT

Diagnosis Procedure

INFOID:000000013044151

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - A/C auto amp.
 - AV control unit
4. Check the continuity between the A/C auto amp. harness connector and the AV control unit harness connector.
 - Models with navigation system

A/C auto amp. harness connector		AV control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M210	90	Existed
	11		74	Existed

- Models without navigation system

A/C auto amp. harness connector		AV control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M84	81	Existed
	11		80	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the A/C amp. and the AV control unit.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN AV AND BCM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

MAIN LINE BETWEEN AV AND BCM CIRCUIT

Diagnosis Procedure

INFOID:000000013044152

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - AV control unit
 - BCM
4. Check the continuity between the AV control unit harness connector and the BCM harness connector.
 - Models with navigation system

AV control unit harness connector		BCM harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M210	90	M120	39	Existed
	74		40	Existed

- Models without navigation system

AV control unit harness connector		BCM harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M84	81	M120	39	Existed
	80		40	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the AV control unit and the BCM.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN BCM AND TCM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

MAIN LINE BETWEEN BCM AND TCM CIRCUIT

Diagnosis Procedure

INFOID:000000013044153

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - BCM
 - Harness connector F103 and M116
4. Check the continuity between the BCM harness connector and the A/T assembly harness connector.

BCM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M120	39	M116	11	Existed
	40		12	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the BCM and the A/T assembly.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN TCM AND STRG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

MAIN LINE BETWEEN TCM AND STRG CIRCUIT

Diagnosis Procedure

INFOID:000000013044154

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connector F103 and M116
 - Steering angle sensor
4. Check the continuity between the harness connector and the steering angle sensor harness connector.

Harness connector		Steering angle sensor harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M116	11	M37	1	Existed
	12		2	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the A/T assembly and the steering angle sensor.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN STRG AND CGW CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

MAIN LINE BETWEEN STRG AND CGW CIRCUIT

Diagnosis Procedure

INFOID:000000013044156

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Steering angle sensor
 - CAN gateway
4. Check the continuity between the steering angle sensor harness connector and the CAN gateway harness connector.

Steering angle sensor harness connector		CAN gateway harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M37	1	M125	1	Existed
	2		7	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the steering angle sensor and the CAN gateway.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN CGW AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

MAIN LINE BETWEEN CGW AND ABS CIRCUIT

Diagnosis Procedure

INFOID:000000013044158

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M28 and PCB harness side connector
 - Harness connector M20 and PCB harness side connector
 - Harness connector M7
 - Harness connector B1
 - Harness connector M6
 - Harness connector E106

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the steering angle sensor and the PCB harness connector.

CAN gateway harness connector		PCB harness connector		Continuity
Connector No.	Terminal No.	Terminal No.		
M125	1	326		Existed
	7	328		Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the PCB harness.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M20.
2. Check the continuity between the PCB harness connectors.

PCB harness connector			Continuity
Terminal No.			
326	35		Existed
328	36		Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the PCB harness.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M7 and B1.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M20	35	M7	72	Existed
	36		73	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the main line between the harness connectors M20 and M7.

MAIN LINE BETWEEN CGW AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector terminals.

Connector No.	Terminal No.		Continuity
B1	72	74	Existed
	73	75	Existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace the body harness.

6. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M6 and E106.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M7	74	M6	22	Existed
	75		23	Existed

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace the body harness.

7. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector of ABS actuator and electric unit (control unit).
2. Check the continuity between the harness connector and the ABS actuator and electric unit (control unit) harness connector.

Harness connector		ABS actuator and electric unit (control unit) harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E106	22	E41	25	Existed
	23		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the CAN gateway and the ABS actuator and electric unit (control unit).

NO >> Repair the main line between the harness connector E106 and ABS actuator and electric unit (control unit).

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN DLC AND AVM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

MAIN LINE BETWEEN DLC AND AVM CIRCUIT

Diagnosis Procedure

INFOID:000000013044161

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M20 and PCB harness side connector
 - Harness connector M117
 - Harness connector B201

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the data link connector and the PCB harness connector.

Data link connector		PCB harness connector		Continuity
Connector No.	Terminal No.	Terminal No.		
M182	13	24		Existed
	12	27		Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the PCB harness.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M117 and B201.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M20	24	M117	72	Existed
	27		73	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M20 and M117.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector of around view monitor control unit.
2. Check the continuity between the harness connector terminals.

Harness connector		Around view monitor control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B201	72	B231	27	Existed
	73		28	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the around view monitor control unit.

NO >> Repair the main line between the harness connector B201 and the around view monitor control unit.

MAIN LINE BETWEEN AVM AND ADP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

MAIN LINE BETWEEN AVM AND ADP CIRCUIT

Diagnosis Procedure

INFOID:000000013044162

1.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - Around view monitor control unit
 - Harness connector B222
 - Harness connector B5
4. Check the continuity between the AV control unit harness connector and the combination meter harness connector.

Around view monitor control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B231	27	B222	13	Existed
	28		14	Existed

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the main line between the around view monitor control unit and the harness connector B222.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors B11 and B501.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B5	13	B11	23	Existed
	14		24	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the harness connectors B5 and B11.

NO >> Replace the body harness.

LAN

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044167

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ECM
 - Harness connector M30 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.
 - VQ37VHR

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M107	114	113	Approx. 108 – 132

- VK56VD

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M160	146	151	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to the following.

- VQ37VHR FOR USA AND CANADA: [EC-202, "Diagnosis Procedure"](#)
- VQ37VHR FOR MEXICO: [EC-716, "Diagnosis Procedure"](#)
- VK56VD FOR USA AND CANADA: [EC-1171, "Diagnosis Procedure"](#)
- VK56VD FOR MEXICO: [EC-1746, "Diagnosis Procedure"](#)

Is the inspection result normal?

YES (Present error)>>Replace the ECM. Refer to the following.

- VQ37VHR FOR USA AND CANADA: [EC-559, "Removal and Installation"](#)
- VQ37VHR FOR MEXICO: [EC-977, "Removal and Installation"](#)
- VK56VD FOR USA AND CANADA: [EC-1568, "Removal and Installation"](#)
- VK56VD FOR MEXICO: [EC-2028, "Removal and Installation"](#)

YES (Past error)>>Error was detected in the ECM branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M30.
2. Check the continuity between the ECM harness connector and the harness connector.
 - VQ37VHR

ECM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

M107	114	M30	439	Existed
	113		438	Existed

A

- VK56VD

B

ECM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M160	146	M30	439	Existed
	151		438	Existed

C

Is the inspection result normal?

D

YES >> Replace the PCB harness.

NO (VQ37VHR)>>Repair the harness between the ECM harness connector M107 and the harness connector M30.

NO (VK56VD)>>Repair the harness between the ECM harness connector M160 and the harness connector M30.

E

F

G

H

I

J

K

L

LAN

N

O

P

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

Diagnosis Procedure

INFOID:000000013044169

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Data link connector
 - Harness connector M181
 - Harness connector M105
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector		Resistance (Ω)
Connector No.	Terminal No.	
M182	6 14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit (CAN communication circuit 1 side). Refer to [LAN-79, "System Diagram"](#).

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M182	6	M23	151	Existed
	14		150	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the data link connector M182 and the harness connector M23.

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

Diagnosis Procedure

INFOID:000000013044170

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Data link connector
 - Harness connector M181
 - Harness connector M105
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M182	13	12	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit (CAN communication circuit 2 side). Refer to [LAN-79. "System Diagram"](#).

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M182	13	M23	134	Existed
	12		136	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the data link connector M182 and the harness connector M23.

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044171

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Air bag diagnosis sensor unit
 - Harness connector M26 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace the main harness and/or the PCB harness.

2. CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-33. "Work Flow"](#).

Is the inspection result normal?

- YES >> Replace the main harness and/or the PCB harness.
NO >> Replace parts whose air bag system has a malfunction.

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044172

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Combination meter
 - Harness connector M24 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M53	14	15	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter Refer to [MWI-75. "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the combination meter. Refer to [MWI-95. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the combination meter branch line.
NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M24.
2. Check the continuity between the combination meter harness connector and the harness connector.

Combination meter harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M53	14	M24	176	Existed
	15		177	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the combination meter harness connector M53 and the harness connector M24.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

TCU BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

TCU BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044173

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - TCU
 - Harness connector M26 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of TCU.
2. Check the resistance between the TCU harness connector terminals.

TCU harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M216	9	10	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCU. Refer to [AV-511. "TCU : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the TCU. Refer to [AV-520. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the TCU branch line.
NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M26.
2. Check the continuity between the TCU harness connector and the harness connector.

TCU harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M216	9	M26	242	Existed
	10		262	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the TCU harness connector M216 and the harness connector M26.

TPMS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

TPMS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044174

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Low tire pressure warning control unit
 - Harness connector M29 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of low tire pressure warning control unit.
2. Check the resistance between the low tire pressure warning control unit harness connector terminals.

Low tire pressure warning control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M43	2	1	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the low tire pressure warning control unit. Refer to [WT-52. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the low tire pressure warning control unit. Refer to [WT-66. "Removal and Installation"](#).
 YES (Past error)>>Error was detected in the low tire pressure warning control unit branch line.
 NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M29.
2. Check the continuity between the low tire pressure warning control unit harness connector and the harness connector.

Low tire pressure warning control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M43	2	M29	396	Existed
	1		395	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
 NO >> Repair the harness between the low tire pressure warning control unit harness connector M43 and the harness connector M29.

HVAC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044175

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - A/C auto amp.
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/C auto amp.
2. Check the resistance between the A/C auto amp. harness connector terminals.

A/C auto amp. harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M66	12	11	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the A/C auto amp. Refer to [HAC-107, "A/C AUTO AMP. : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the A/C auto amp. Refer to [HAC-126, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the A/C auto amp. branch line.
NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the A/C auto amp. harness connector and the harness connector.

A/C auto amp. harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M28	325	Existed
	11		327	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the A/C auto amp. harness connector M66 and the harness connector M28.

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044176

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - AV control unit
 - Harness connector M25 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
2. Check the resistance between the AV control unit harness connector terminals.
 - Models with navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M210	90	74	Approx. 54 – 66

- Models without navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M84	81	80	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to the following.

- Base audio without navigation system: [AV-94. "AV CONTROL UNIT : Diagnosis Procedure"](#)
- BOSE audio with navigation system: [AV-373. "AV CONTROL UNIT : Diagnosis Procedure"](#)

Is the inspection result normal?

YES (Present error)>>Replace the AV control unit. Refer to the following.

- Base audio without navigation system: [AV-126. "Removal and Installation"](#)
- BOSE audio with navigation system: [AV-407. "Removal and Installation"](#)

YES (Past error)>>Error was detected in the AV control unit branch line.

NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M25.
2. Check the continuity between the AV control unit harness connector and the harness connector.
 - Models with navigation system

AV control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M210	90	M25	201	Existed
	74		221	Existed

- Models without navigation system

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

AV control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M84	81	M25	201	Existed
	80		221	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO (With navigation system)>>Repair the harness between the AV control unit harness connector M210 and the harness connector M25.

NO (Without navigation system)>>Repair the harness between the AV control unit harness connector M84 and the harness connector M25.

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044177

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - BCM
 - Harness connector M22 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M120	39	40	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-88. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to [BCS-95. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the BCM branch line.
NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M22.
2. Check the continuity between the BCM harness connector and the harness connector.

BCM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M120	39	M22	101	Existed
	40		102	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the BCM harness connector M120 and the harness connector M22.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044178

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - A/T assembly
 - Harness connector F103
 - Harness connector M116
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/T assembly.
2. Check the resistance between the A/T assembly harness connector terminals.

A/T assembly harness connector		Resistance (Ω)
Connector No.	Terminal No.	
F61	3 8	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 5.

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Remove the joint connector. Refer to [TM-192, "Removal and Installation"](#).
2. Check the continuity between the A/T assembly harness connector side and the TCM harness connector side of the joint connector.

A/T assembly harness connector side	TCM harness connector side	Continuity
Terminal No.	Terminal No.	
3	3	Existed
8	8	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the joint connector.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-159, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the control valve & TCM. Refer to [TM-192, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the TCM branch line.

NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the A/T assembly harness connector and the harness connector.

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

A/T assembly harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
F61	3	M28	346	Existed
	8		347	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the A/T assembly harness connector F61 and the harness connector M28.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044179

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Steering angle sensor
 - Harness connector M22 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M37	1	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to [BRC-52. "Wiring Diagram"](#).

Is the inspection result normal?

YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-168. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the steering angle sensor branch line.

NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M22.
2. Check the continuity between the steering angle sensor harness connector and the harness connector.

Steering angle sensor harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M37	1	M22	81	Existed
	2		82	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the steering angle sensor harness connector M37 and the harness connector M22.

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

Diagnosis Procedure

INFOID:000000013044180

1. CHECK DTC

Check DTC of the CAN gateway with CONSULT.

Is U1010 or B2600 indicated?

- YES >> Perform a diagnosis of the indicated DTC.
- NO >> GO TO 2.

2. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - CAN gateway
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair the terminal and connector.

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of CAN gateway.
2. Check the resistance between the CAN gateway harness connector terminals.

CAN gateway harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M125	1	7	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 4.
- NO >> GO TO 5.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the CAN gateway. Refer to [LAN-167, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the CAN gateway. Refer to [LAN-168, "Removal and Installation"](#).
- YES (Past error)>>Error was detected in the CAN gateway branch line (CAN communication circuit 1 side). Refer to [LAN-79, "System Diagram"](#).
- NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the CAN gateway harness connector and the harness connector.

CAN gateway harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M125	1	M28	326	Existed
	7		328	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
- NO >> Repair the harness between the CAN gateway harness connector M125 and the harness connector M28.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

Diagnosis Procedure

INFOID:000000013044181

1. CHECK DTC

Check DTC of the CAN gateway with CONSULT.

Is U1010 or B2600 indicated?

- YES >> Perform a diagnosis of the indicated DTC.
- NO >> GO TO 2.

2. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - CAN gateway
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair the terminal and connector.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> GO TO 5.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the CAN gateway. Refer to [LAN-167. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the CAN gateway. Refer to [LAN-168. "Removal and Installation"](#).
- YES (Past error)>>Error was detected in the CAN gateway branch line (CAN communication circuit 2 side). Refer to [LAN-79. "System Diagram"](#).
- NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the CAN gateway harness connector and the harness connector.

CAN gateway harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M125	4	M23	133	Existed
	10		135	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
- NO >> Repair the harness between the CAN gateway harness connector M125 and the harness connector M23.

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044183

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E41	25	15	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-143, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-165, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044185

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E6	40	39	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the IPDM E/R branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-33, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the IPDM E/R branch line.
NO >> Repair the power supply and the ground circuit.

AVM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

AVM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044186

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of around view monitor control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of around view monitor control unit.
2. Check the resistance between the around view monitor control unit harness connector terminals.

Around view monitor control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M231	27	28	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the around view monitor control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the around view monitor control unit. Refer to [AV-375, "AROUND VIEW MONITOR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the around view monitor control unit. Refer to [AV-429, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the around view monitor control unit branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

SONAR BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

SONAR BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044187

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Sonar control unit
 - Harness connector M117 and B201

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of sonar control unit.
2. Check the resistance between the sonar control unit harness connector terminals.

Sonar control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M47	19	20	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the power supply and the ground circuit.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the sonar control unit. Refer to [AV-376, "SONAR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the sonar control unit. Refer to the [AV-433, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the sonar control unit branch line.

NO >> Repair the power supply and the ground circuit.

ADP BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

ADP BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044188

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Driver seat control unit
 - Harness connector B501
 - Harness connector B11
 - CAN gateway (With ICC system)

Is the inspection result normal?

YES (With ICC system)>>GO TO 2.

YES (Without ICC system)>>GO TO 3.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line is open) the root cause (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway. (With ICC system)
2. Disconnect the connector of driver seat control unit.
3. Check the resistance between the driver seat control unit harness connector terminals.

Driver seat control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B514	23	24	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the driver seat control unit branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the driver seat control unit. Refer to [ADP-74, "DRIVER SEAT CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the driver seat control unit. Refer to [ADP-147, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the driver seat control unit branch line.

NO >> Repair the power supply and the ground circuit.

CAN COMMUNICATION CIRCUIT 1

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

CAN COMMUNICATION CIRCUIT 1

Diagnosis Procedure

INFOID:000000013044198

1. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit 1.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-79. "System Diagram"](#).

4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M182	6 14	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

3. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M182	6		Not existed
	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

4. CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.
 - VQ37VHR

ECM		Resistance (Ω)
Terminal No.		
114	113	Approx. 108 – 132

- VK56VD

ECM		Resistance (Ω)
Terminal No.		
146	151	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

CAN COMMUNICATION CIRCUIT 1

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

IPDM E/R		Resistance (Ω)
Terminal No.		
40	39	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

5. CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6. CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit 1.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

CAN COMMUNICATION CIRCUIT 2

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

CAN COMMUNICATION CIRCUIT 2

Diagnosis Procedure

INFOID:000000013044199

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit 2.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-79. "System Diagram"](#).

4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M182	13	Not existed
	12	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M182	13		Not existed
	12		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

4.CHECK CAN GATEWAY TERMINATION CIRCUIT

1. Remove the CAN gateway.
2. Check the resistance between the CAN gateway terminals.

CAN gateway		Resistance (Ω)
Terminal No.		
4	10	Approx. 108 – 132
6	12	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the CAN gateway.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

Inspection result

Reproduced>>GO TO 6.

CAN COMMUNICATION CIRCUIT 2

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit 2.

NOTE:

CAN gateway has two termination circuits. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

Diagnosis Procedure

INFOID:000000013044204

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connectors M181 and M105
 - Combination meter
4. Check the continuity between the harness connector and the combination meter harness connector.

Harness connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M105	7	M53	14	Existed
	8		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the air bag diagnosis sensor unit.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT

Diagnosis Procedure

INFOID:000000013044205

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connectors M181 and M105
 - Combination meter
4. Check the continuity between the harness connector and the combination meter harness connector.

Harness connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M105	7	M53	14	Existed
	8		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the air bag diagnosis sensor unit and the combination meter.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN M&A AND TPMS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

MAIN LINE BETWEEN M&A AND TPMS CIRCUIT

Diagnosis Procedure

INFOID:000000013044207

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Combination meter
 - Low tire pressure warning control unit
4. Check the continuity between the combination meter harness connector and the low tire pressure warning control unit harness connector.

Combination meter harness connector		Low tire pressure warning control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M53	14	M43	2	Existed
	15		1	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the combination meter and the low tire pressure warning control unit.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT

Diagnosis Procedure

INFOID:000000013044209

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Low tire pressure warning control unit
 - A/C auto amp.
4. Check the continuity between the low tire pressure warning control unit harness connector and the A/C auto amp. harness connector.

Low tire pressure warning control unit harness connector		A/C auto amp. harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M43	2	M66	12	Existed
	1		11	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the low tire pressure warning control unit and the A/C auto amp.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN HVAC AND AV CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

MAIN LINE BETWEEN HVAC AND AV CIRCUIT

Diagnosis Procedure

INFOID:000000013044210

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - A/C auto amp.
 - AV control unit
4. Check the continuity between the A/C auto amp. harness connector and the AV control unit harness connector.
 - Models with navigation system

A/C auto amp. harness connector		AV control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M210	90	Existed
	11		74	Existed

- Models without navigation system

A/C auto amp. harness connector		AV control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M84	81	Existed
	11		80	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the A/C amp. and the AV control unit.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN AV AND BCM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

MAIN LINE BETWEEN AV AND BCM CIRCUIT

Diagnosis Procedure

INFOID:0000000013044211

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - AV control unit
 - BCM
4. Check the continuity between the AV control unit harness connector and the BCM harness connector.
 - Models with navigation system

AV control unit harness connector		BCM harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M210	90	M120	39	Existed
	74		40	Existed

- Models without navigation system

AV control unit harness connector		BCM harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M84	81	M120	39	Existed
	80		40	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the AV control unit and the BCM.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN BCM AND TCM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

MAIN LINE BETWEEN BCM AND TCM CIRCUIT

Diagnosis Procedure

INFOID:000000013044212

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - BCM
 - Harness connector F103 and M116
4. Check the continuity between the BCM harness connector and the A/T assembly harness connector.

BCM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M120	39	M116	11	Existed
	40		12	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the BCM and the A/T assembly.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN TCM AND STRG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

MAIN LINE BETWEEN TCM AND STRG CIRCUIT

Diagnosis Procedure

INFOID:000000013044213

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connector F103 and M116
 - Steering angle sensor
4. Check the continuity between the harness connector and the steering angle sensor harness connector.

Harness connector		Steering angle sensor harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M116	11	M37	1	Existed
	12		2	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the A/T assembly and the steering angle sensor.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN STRG AND CGW CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

MAIN LINE BETWEEN STRG AND CGW CIRCUIT

Diagnosis Procedure

INFOID:000000013044215

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Steering angle sensor
 - CAN gateway
4. Check the continuity between the steering angle sensor harness connector and the CAN gateway harness connector.

Steering angle sensor harness connector		CAN gateway harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M37	1	M125	1	Existed
	2		7	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the steering angle sensor and the CAN gateway.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN CGW AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

MAIN LINE BETWEEN CGW AND ABS CIRCUIT

Diagnosis Procedure

INFOID:000000013044217

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M28 and PCB harness side connector
 - Harness connector M20 and PCB harness side connector
 - Harness connector M7
 - Harness connector B1
 - Harness connector M6
 - Harness connector E106

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the steering angle sensor and the PCB harness connector.

CAN gateway harness connector		PCB harness connector		Continuity
Connector No.	Terminal No.	Terminal No.		
M125	1	326		Existed
	7	328		Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the PCB harness.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M20.
2. Check the continuity between the PCB harness connectors.

PCB harness connector			Continuity
Terminal No.			
326	35		Existed
328	36		Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the PCB harness.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M7 and B1.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M20	35	M7	72	Existed
	36		73	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the main line between the harness connectors M20 and M7.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN CGW AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector terminals.

Connector No.	Terminal No.		Continuity
B1	72	74	Existed
	73	75	Existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace the body harness.

6. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M6 and E106.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M7	74	M6	22	Existed
	75		23	Existed

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace the body harness.

7. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector of ABS actuator and electric unit (control unit).
2. Check the continuity between the harness connector and the ABS actuator and electric unit (control unit) harness connector.

Harness connector		ABS actuator and electric unit (control unit) harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E106	22	E41	25	Existed
	23		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the CAN gateway and the ABS actuator and electric unit (control unit).

NO >> Repair the main line between the harness connector E106 and ABS actuator and electric unit (control unit).

MAIN LINE BETWEEN DLC AND ICC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

MAIN LINE BETWEEN DLC AND ICC CIRCUIT

Diagnosis Procedure

INFOID:000000013044222

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M20 and PCB harness side connector
 - Harness connector M117
 - Harness connector B201
 - Harness connector B222
 - Harness connector B5

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M20.
2. Check the continuity between the data link connector and the PCB harness connector.

Data link connector		PCB harness connector		Continuity
Connector No.	Terminal No.	Terminal No.		
M182	13	24		Existed
	12	27		Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the PCB harness.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M117 and B5.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M20	24	M117	72	Existed
	27		73	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M20 and M117.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors B222 and B5.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B201	72	B222	13	Existed
	73		14	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the main line between the harness connectors B201 and B222.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN DLC AND ICC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector of ADAS control unit.
2. Check the continuity between the harness connectors.

Harness connector		ADAS control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B5	13	B10	1	Existed
	14		2	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the ADAS control unit.

NO >> Replace the body harness.

MAIN LINE BETWEEN RDR-L AND RDR-R CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

MAIN LINE BETWEEN RDR-L AND RDR-R CIRCUIT

Diagnosis Procedure

INFOID:000000013044223

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B33
 - Harness connector B245

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar LH
 - Harness connectors B33 and B245
2. Check the continuity between the side radar LH harness connector and the harness connector.

Side radar LH harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B52	4	B33	13	Existed
	3		14	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the side radar LH and the harness connector B33.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of side radar RH.
2. Check the continuity between the harness connector and the side radar RH harness connector.

Harness connector		Side radar RH harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B245	13	B252	4	Existed
	14		3	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the side radar LH and the side radar RH.

NO >> Repair the main line between the harness connector B245 and the side radar RH.

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

MAIN LINE BETWEEN RDR-R AND APA CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

MAIN LINE BETWEEN RDR-R AND APA CIRCUIT

Diagnosis Procedure

INFOID:000000013044224

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B201
 - Harness connector M117
 - Harness connector M20 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar RH
 - Harness connectors B201 and M117
2. Check the continuity between the side radar RH harness connector and the harness connector.

Side radar RH harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B252	4	B201	66	Existed
	3		67	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the side radar RH and the harness connector B201.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M20.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M117	66	M20	38	Existed
	67		40	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M117 and M20.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M150 and M151.
2. Check the continuity between the PCB harness connector and the harness connector.

PCB harness connector		Harness connector		Continuity
Terminal No.	Terminal No.	Connector No.	Terminal No.	
38		M150	11	Existed
40			10	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the side radar RH and the accelerator pedal actuator.

MAIN LINE BETWEEN RDR-R AND APA CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

NO >> Replace the PCB harness.

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

MAIN LINE BETWEEN APA AND LANE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

MAIN LINE BETWEEN APA AND LANE CIRCUIT

Diagnosis Procedure

INFOID:000000013044225

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ADAS control unit
 - Harness connectors M151 and M150
 - Harness connectors M110 and R7
4. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M150	11	M110	13	Existed
	10		2	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the accelerator pedal actuator and the lane camera unit.

NO >> Replace the PCB harness.

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044226

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ECM
 - Harness connector M30 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.
 - VQ37VHR

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M107	114	113	Approx. 108 – 132

- VK56VD

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M160	146	151	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to the following.

- VQ37VHR FOR USA AND CANADA: [EC-202. "Diagnosis Procedure"](#)
- VQ37VHR FOR MEXICO: [EC-716. "Diagnosis Procedure"](#)
- VK56VD FOR USA AND CANADA: [EC-1171. "Diagnosis Procedure"](#)
- VK56VD FOR MEXICO: [EC-1746. "Diagnosis Procedure"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the ECM. Refer to the following.
- VQ37VHR FOR USA AND CANADA: [EC-559. "Removal and Installation"](#)
 - VQ37VHR FOR MEXICO: [EC-977. "Removal and Installation"](#)
 - VK56VD FOR USA AND CANADA: [EC-1568. "Removal and Installation"](#)
 - VK56VD FOR MEXICO: [EC-2028. "Removal and Installation"](#)

YES (Past error)>>Error was detected in the ECM branch line.

- NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M30.
2. Check the continuity between the ECM harness connector and the harness connector.
 - VQ37VHR

ECM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

M107	114	M30	439	Existed
	113		438	Existed

- VK56VD

ECM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M160	146	M30	439	Existed
	151		438	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO (VQ37VHR)>>Repair the harness between the ECM harness connector M107 and the harness connector M30.

NO (VK56VD)>>Repair the harness between the ECM harness connector M160 and the harness connector M30.

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

Diagnosis Procedure

INFOID:000000013044228

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Data link connector
 - Harness connector M181
 - Harness connector M105
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M182	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit (CAN communication circuit 1 side). Refer to [LAN-79. "System Diagram"](#).

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M182	6	M23	151	Existed
	14		150	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the data link connector M182 and the harness connector M23.

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

Diagnosis Procedure

INFOID:000000013044229

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Data link connector
 - Harness connector M181
 - Harness connector M105
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M182	13	12	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M182	13	M23	134	Existed
	12		136	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the data link connector M182 and the harness connector M23.

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044230

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Air bag diagnosis sensor unit
 - Harness connector M26 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace the main harness and/or the PCB harness.

2. CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-33. "Work Flow"](#).

Is the inspection result normal?

- YES >> Replace the main harness and/or the PCB harness.
NO >> Replace parts whose air bag system has a malfunction.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044231

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Combination meter
 - Harness connector M24 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M53	14	15	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter Refer to [MWI-75. "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the combination meter. Refer to [MWI-95. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the combination meter branch line.

NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M24.
2. Check the continuity between the combination meter harness connector and the harness connector.

Combination meter harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M53	14	M24	176	Existed
	15		177	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the combination meter harness connector M53 and the harness connector M24.

TPMS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

TPMS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044233

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Low tire pressure warning control unit
 - Harness connector M29 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of low tire pressure warning control unit.
2. Check the resistance between the low tire pressure warning control unit harness connector terminals.

Low tire pressure warning control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M43	2	1	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the low tire pressure warning control unit. Refer to [WT-52. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the low tire pressure warning control unit. Refer to [WT-66. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the low tire pressure warning control unit branch line.
NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M29.
2. Check the continuity between the low tire pressure warning control unit harness connector and the harness connector.

Low tire pressure warning control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M43	2	M29	396	Existed
	1		395	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the low tire pressure warning control unit harness connector M43 and the harness connector M29.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

HVAC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044234

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - A/C auto amp.
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/C auto amp.
2. Check the resistance between the A/C auto amp. harness connector terminals.

A/C auto amp. harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M66	12	11	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the A/C auto amp. Refer to [HAC-107, "A/C AUTO AMP. : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the A/C auto amp. Refer to [HAC-126, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the A/C auto amp. branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the A/C auto amp. harness connector and the harness connector.

A/C auto amp. harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M28	325	Existed
	11		327	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the A/C auto amp. harness connector M66 and the harness connector M28.

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044235

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - AV control unit
 - Harness connector M25 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
2. Check the resistance between the AV control unit harness connector terminals.
 - Models with navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M210	90	74	Approx. 54 – 66

- Models without navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M84	81	80	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to the following.

- Base audio without navigation system: [AV-94. "AV CONTROL UNIT : Diagnosis Procedure"](#)
- BOSE audio with navigation system: [AV-373. "AV CONTROL UNIT : Diagnosis Procedure"](#)

Is the inspection result normal?

YES (Present error)>>Replace the AV control unit. Refer to the following.

- Base audio without navigation system: [AV-126. "Removal and Installation"](#)
- BOSE audio with navigation system: [AV-407. "Removal and Installation"](#)

YES (Past error)>>Error was detected in the AV control unit branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M25.
2. Check the continuity between the AV control unit harness connector and the harness connector.
 - Models with navigation system

AV control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M210	90	M25	201	Existed
	74		221	Existed

- Models without navigation system

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

AV control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M84	81	M25	201	Existed
	80		221	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO (With navigation system)>>Repair the harness between the AV control unit harness connector M210 and the harness connector M25.

NO (Without navigation system)>>Repair the harness between the AV control unit harness connector M84 and the harness connector M25.

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044236

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - BCM
 - Harness connector M22 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M120	39	40	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-88. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to [BCS-95. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the BCM branch line.
NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M22.
2. Check the continuity between the BCM harness connector and the harness connector.

BCM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M120	39	M22	101	Existed
	40		102	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the BCM harness connector M120 and the harness connector M22.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044237

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - A/T assembly
 - Harness connector F103
 - Harness connector M116
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/T assembly.
2. Check the resistance between the A/T assembly harness connector terminals.

A/T assembly harness connector		Resistance (Ω)
Connector No.	Terminal No.	
F61	3 8	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 5.

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Remove the joint connector. Refer to [TM-192, "Removal and Installation"](#).
2. Check the continuity between the A/T assembly harness connector side and the TCM harness connector side of the joint connector.

A/T assembly harness connector side	TCM harness connector side	Continuity
Terminal No.	Terminal No.	
3	3	Existed
8	8	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the joint connector.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-159, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the control valve & TCM. Refer to [TM-192, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the TCM branch line.

NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the A/T assembly harness connector and the harness connector.

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

A/T assembly harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
F61	3	M28	346	Existed
	8		347	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the A/T assembly harness connector F61 and the harness connector M28.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044238

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Steering angle sensor
 - Harness connector M22 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M37	1	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to [BRC-52. "Wiring Diagram"](#).

Is the inspection result normal?

YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-168. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the steering angle sensor branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M22.
2. Check the continuity between the steering angle sensor harness connector and the harness connector.

Steering angle sensor harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M37	1	M22	81	Existed
	2		82	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the steering angle sensor harness connector M37 and the harness connector M22.

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

Diagnosis Procedure

INFOID:000000013044239

1. CHECK DTC

Check DTC of the CAN gateway with CONSULT.

Is U1010 or B2600 indicated?

- YES >> Perform a diagnosis of the indicated DTC.
- NO >> GO TO 2.

2. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - CAN gateway
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair the terminal and connector.

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of CAN gateway.
2. Check the resistance between the CAN gateway harness connector terminals.

CAN gateway harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M125	1	7	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 4.
- NO >> GO TO 5.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the CAN gateway. Refer to [LAN-167, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the CAN gateway. Refer to [LAN-168, "Removal and Installation"](#).
- YES (Past error)>>Error was detected in the CAN gateway branch line (CAN communication circuit 1 side). Refer to [LAN-79, "System Diagram"](#).
- NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the CAN gateway harness connector and the harness connector.

CAN gateway harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M125	1	M28	326	Existed
	7		328	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
- NO >> Repair the harness between the CAN gateway harness connector M125 and the harness connector M28.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

Diagnosis Procedure

INFOID:000000013044240

1. CHECK DTC

Check DTC of the CAN gateway with CONSULT.

Is U1010 or B2600 indicated?

- YES >> Perform a diagnosis of the indicated DTC.
- NO >> GO TO 2.

2. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - CAN gateway
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair the terminal and connector.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> GO TO 5.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the CAN gateway. Refer to [LAN-167, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the CAN gateway. Refer to [LAN-168, "Removal and Installation"](#).
- YES (Past error)>>Error was detected in the CAN gateway branch line (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).
- NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the CAN gateway harness connector and the harness connector.

CAN gateway harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M125	4	M23	133	Existed
	10		135	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
- NO >> Repair the harness between the CAN gateway harness connector M125 and the harness connector M23.

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044242

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E41	25	15	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-143, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-165, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

AFS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

AFS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044243

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the AFS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AFS control unit.
2. Check the resistance between the AFS control unit harness connector terminals.

AFS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E70	1	13	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the AFS control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AFS control unit. Refer to [EXL-95, "AFS CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the AFS control unit. Refer to [EXL-148, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the AFS control unit branch line.
NO >> Repair the power supply and the ground circuit.

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044244

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E6	40	39	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the IPDM E/R branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-33, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the IPDM E/R branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

AVM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

AVM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044245

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of around view monitor control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of around view monitor control unit.
2. Check the resistance between the around view monitor control unit harness connector terminals.

Around view monitor control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M231	27	28	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the around view monitor control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the around view monitor control unit. Refer to [AV-375, "AROUND VIEW MONITOR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the around view monitor control unit. Refer to [AV-429, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the around view monitor control unit branch line.
NO >> Repair the power supply and the ground circuit.

SONAR BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

SONAR BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044246

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Sonar control unit
 - Harness connector M117 and B201

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of sonar control unit.
2. Check the resistance between the sonar control unit harness connector terminals.

Sonar control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M47	19	20	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the power supply and the ground circuit.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the sonar control unit. Refer to [AV-376. "SONAR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the sonar control unit. Refer to the [AV-433. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the sonar control unit branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

ADP BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

ADP BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044247

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Driver seat control unit
 - Harness connector B501
 - Harness connector B11
 - CAN gateway (With ICC system)

Is the inspection result normal?

YES (With ICC system)>>GO TO 2.

YES (Without ICC system)>>GO TO 3.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line is open) the root cause (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway. (With ICC system)
2. Disconnect the connector of driver seat control unit.
3. Check the resistance between the driver seat control unit harness connector terminals.

Driver seat control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B514	23	24	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the driver seat control unit branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the driver seat control unit. Refer to [ADP-74, "DRIVER SEAT CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the driver seat control unit. Refer to [ADP-147, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the driver seat control unit branch line.

NO >> Repair the power supply and the ground circuit.

ICC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

ICC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044248

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ADAS control unit
 - CAN gateway

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector		Continuity	
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line is open) the root cause (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway.
2. Disconnect the connector of ADAS control unit.
3. Check the resistance between the ADAS control unit harness connector terminals.

ADAS control unit harness connector		Resistance (Ω)	
Connector No.	Terminal No.		
B10	1	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Replace the body harness.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ADAS control unit. Refer to [DAS-162, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the ADAS control unit. Refer to [DAS-163, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the ADAS control unit branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

PSB BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044249

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Pre-crash seat belt control unit (driver side)
 - CAN gateway

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector		Continuity	
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> Check the harness and repair or replace (if shield line is open) the root cause (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway.
2. Disconnect the connector of pre-crash seat belt control unit (driver side).
3. Check the resistance between the pre-crash seat belt control unit (driver side) harness connector terminals.

Pre-crash seat belt control unit (driver side) harness connector		Resistance (Ω)	
Connector No.	Terminal No.		
B65	14	4	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 4.
 NO >> Repair the pre-crash seat belt control unit (driver side) branch line.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the pre-crash seat belt control unit (driver side). Refer to [SBC-53, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the seat belt pre-tensioner retractor (driver side). Refer to [SB-8, "SEAT BELT RETRACTOR : Removal and Installation"](#).
 YES (Past error)>>Error was detected in the pre-crash seat belt control unit (driver side) branch line.
 NO >> Repair the power supply and the ground circuit.

RDR-L BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

RDR-L BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044250

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the side radar LH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of side radar LH.
2. Check the resistance between the side radar LH harness connector terminals.

Side radar LH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B52	4	3	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the side radar LH branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar LH. Refer to [DAS-346, "SIDE RADAR LH: Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the side radar LH. Refer to [DAS-393, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the side radar LH branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

BSW/BUZZER BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

BSW/BUZZER BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044251

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the driver assistance buzzer control module for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of driver assistance buzzer control module.
2. Check the resistance between the driver assistance buzzer control module harness connector terminals.

Driver assistance buzzer control module harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B210	3	11	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the driver assistance buzzer control module branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the driver assistance buzzer control module. Refer to [DAS-347, "DRIVER ASSISTANCE BUZZER CONTROL MODULE : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the driver assistance buzzer control module. Refer to [DAS-396, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the driver assistance buzzer control module branch line.
NO >> Repair the power supply and the ground circuit.

RDR-R BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

RDR-R BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044252

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the side radar RH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK RIGHT/LEFT SWITCHING SIGNAL CIRCUIT

Check the right/left switching signal circuit of the side radar RH. Refer to [DAS-349, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair the root cause.

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of side radar RH.
2. Check the resistance between the side radar RH harness connector terminals.

Side radar RH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B252	4	3	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 4.
NO >> Repair the side radar RH branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar RH. Refer to [DAS-347, "SIDE RADAR RH: Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the side radar RH. Refer to [DAS-393, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the side radar RH branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

APA BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044253

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Accelerator pedal position sensor
 - Harness connector M151
 - Harness connector M150
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of accelerator pedal position sensor.
2. Check the resistance between the accelerator pedal position sensor harness connector terminals.

Accelerator pedal position sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M154	3	9	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the accelerator pedal position sensor. Refer to [DAS-345, "ACCELERATOR PEDAL ACTUATOR : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the accelerator pedal assembly. Refer to [ACC-6, "MODELS WITH DISTANCE CONTROL ASSIST SYSTEM : Removal and Installation"](#).
 YES (Past error)>>Error was detected in the accelerator pedal position sensor branch line.
 NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the accelerator pedal position sensor harness connector and the harness connector.

Accelerator pedal position sensor harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M154	3	M23	138	Existed
	9		137	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
 NO >> Repair the harness between the accelerator pedal position sensor harness connector M152 and the harness connector M23.

LANE BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

LANE BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044254

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Lane camera unit
 - Harness connector R7
 - Harness connector M110
 - Harness connector M24 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of lane camera unit.
2. Check the resistance between the lane camera unit harness connector terminals.

Lane camera unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
R8	4	8	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the lane camera unit. Refer to [DAS-345, "LANE CAMERA UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the lane camera unit. Refer to [DAS-392, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the lane camera unit branch line.
NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M24.
2. Check the continuity between the lane camera unit harness connector and the harness connector.

Lane camera unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
R8	4	M24	179	Existed
	8		178	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the lane camera unit harness connector R8 and the harness connector M24.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

LASER BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

LASER BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044255

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ICC sensor
 - Harness connector E106
 - Harness connector M6
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ICC sensor.
2. Check the resistance between the ICC sensor harness connector terminals.

ICC sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E33	3	6	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ICC sensor. Refer to [CCS-116, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the ICC sensor. Refer to [CCS-133, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the ICC sensor branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the ICC sensor harness connector and the harness connector.

ICC sensor harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E33	3	M28	343	Existed
	6		345	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the ICC sensor harness connector E67 and the harness connector M28.

CAN COMMUNICATION CIRCUIT 1

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

CAN COMMUNICATION CIRCUIT 1

Diagnosis Procedure

INFOID:000000013044257

1. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit 1.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-79. "System Diagram"](#).

4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M182	6 14	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

3. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M182	6		Not existed
	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

4. CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.
 - VQ37VHR

ECM		Resistance (Ω)
Terminal No.		
114	113	Approx. 108 – 132

- VK56VD

ECM		Resistance (Ω)
Terminal No.		
146	151	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

CAN COMMUNICATION CIRCUIT 1

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

IPDM E/R		Resistance (Ω)
Terminal No.		
40	39	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit 1.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

CAN COMMUNICATION CIRCUIT 2

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

CAN COMMUNICATION CIRCUIT 2

Diagnosis Procedure

INFOID:000000013044258

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit 2.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-79. "System Diagram"](#).

4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M182	13	Not existed
	12	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M182	13		Not existed
	12		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

4.CHECK CAN GATEWAY TERMINATION CIRCUIT

1. Remove the CAN gateway.
2. Check the resistance between the CAN gateway terminals.

CAN gateway		Resistance (Ω)
Terminal No.		
4	10	Approx. 108 – 132
6	12	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the CAN gateway.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

Inspection result

Reproduced>>GO TO 6.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

CAN COMMUNICATION CIRCUIT 2

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit 2.

NOTE:

CAN gateway has two termination circuits. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

ITS COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000013044259

1.CHECK CAN DIAGNOSIS

Check the CAN diagnosis results from CONSULT to see that the CAN communication circuit 1 and CAN communication circuit 2 have no malfunction.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-79. "System Diagram"](#).

Are the CAN communication 1 and CAN communication 2 circuits normal?

YES >> GO TO 2.

NO >> Check and repair CAN communication circuit 1 and/or CAN communication circuit 2.

2.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ADAS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the terminal and connector.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - ADAS control unit
 - ICC sensor
2. Check the continuity between the ADAS control unit harness connector and the ICC sensor harness connector.

ADAS control unit harness connector		ICC sensor harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B10	6	E33	3	Existed
	7		6	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the body harness.

4.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar LH
 - Side radar RH
 - Accelerator pedal actuator
 - Lane camera unit
2. Check the continuity between the ADAS control unit harness connector terminals.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
B10	6	7	Not existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

5.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the ADAS control unit harness connector and the ground.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

ITS COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

ADAS control unit harness connector		Ground	Continuity
Connector No.	Terminal No.		
B10	6		
	7		Not existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

6. CHECK TERMINATION CIRCUIT

1. Remove the ADAS control unit and the ICC sensor.
2. Check the resistance between the ADAS control unit terminals.

ADAS control unit		Resistance (Ω)
Terminal No.		
6	7	Approx. 108 – 132

3. Check the resistance between the ICC sensor terminals.

ICC sensor		Resistance (Ω)
Terminal No.		
3	6	Approx. 108 – 132

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace the ADAS control unit and/or the ICC sensor.

7. CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

Inspection result

Reproduced>>GO TO 8.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

8. CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of ITS communication system.

NOTE:

ADAS control unit and ICC sensor have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

Diagnosis Procedure

INFOID:0000000013044308

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connectors M181 and M105
 - Combination meter
4. Check the continuity between the harness connector and the combination meter harness connector.

Harness connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M105	7	M53	14	Existed
	8		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the air bag diagnosis sensor unit.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT

Diagnosis Procedure

INFOID:000000013044309

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connectors M181 and M105
 - Combination meter
4. Check the continuity between the harness connector and the combination meter harness connector.

Harness connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M105	7	M53	14	Existed
	8		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the air bag diagnosis sensor unit and the combination meter.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN M&A AND TCU CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

MAIN LINE BETWEEN M&A AND TCU CIRCUIT

Diagnosis Procedure

INFOID:000000013044310

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Combination meter
 - TCU
4. Check the continuity between the combination meter harness connector and the TCU harness connector.

Combination meter harness connector		TCU harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M53	14	M216	9	Existed
	15		10	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the combination meter and the TCU.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

MAIN LINE BETWEEN TCU AND TPMS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

MAIN LINE BETWEEN TCU AND TPMS CIRCUIT

Diagnosis Procedure

INFOID:000000013044312

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - TCU
 - Low tire pressure warning control unit
4. Check the continuity between the low tire pressure warning control unit harness connector and the A/C auto amp. harness connector.

TCU harness connector		Low tire pressure warning control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M216	9	M43	2	Existed
	10		1	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the TCU and the low tire pressure warning control unit.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT

Diagnosis Procedure

INFOID:000000013044313

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Low tire pressure warning control unit
 - A/C auto amp.
4. Check the continuity between the low tire pressure warning control unit harness connector and the A/C auto amp. harness connector.

Low tire pressure warning control unit harness connector		A/C auto amp. harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M43	2	M66	12	Existed
	1		11	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the low tire pressure warning control unit and the A/C auto amp.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN HVAC AND AV CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

MAIN LINE BETWEEN HVAC AND AV CIRCUIT

Diagnosis Procedure

INFOID:000000013044314

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - A/C auto amp.
 - AV control unit
4. Check the continuity between the A/C auto amp. harness connector and the AV control unit harness connector.
 - Models with navigation system

A/C auto amp. harness connector		AV control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M210	90	Existed
	11		74	Existed

- Models without navigation system

A/C auto amp. harness connector		AV control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M84	81	Existed
	11		80	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the A/C amp. and the AV control unit.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN AV AND BCM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

MAIN LINE BETWEEN AV AND BCM CIRCUIT

Diagnosis Procedure

INFOID:000000013044315

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - AV control unit
 - BCM
4. Check the continuity between the AV control unit harness connector and the BCM harness connector.
 - Models with navigation system

AV control unit harness connector		BCM harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M210	90	M120	39	Existed
	74		40	Existed

- Models without navigation system

AV control unit harness connector		BCM harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M84	81	M120	39	Existed
	80		40	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the AV control unit and the BCM.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN BCM AND TCM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

MAIN LINE BETWEEN BCM AND TCM CIRCUIT

Diagnosis Procedure

INFOID:000000013044316

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - BCM
 - Harness connector F103 and M116
4. Check the continuity between the BCM harness connector and the A/T assembly harness connector.

BCM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M120	39	M116	11	Existed
	40		12	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the BCM and the A/T assembly.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN TCM AND STRG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

MAIN LINE BETWEEN TCM AND STRG CIRCUIT

Diagnosis Procedure

INFOID:000000013044317

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connector F103 and M116
 - Steering angle sensor
4. Check the continuity between the harness connector and the steering angle sensor harness connector.

Harness connector		Steering angle sensor harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M116	11	M37	1	Existed
	12		2	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the A/T assembly and the steering angle sensor.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN STRG AND CGW CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

MAIN LINE BETWEEN STRG AND CGW CIRCUIT

Diagnosis Procedure

INFOID:000000013044319

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Steering angle sensor
 - CAN gateway
4. Check the continuity between the steering angle sensor harness connector and the CAN gateway harness connector.

Steering angle sensor harness connector		CAN gateway harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M37	1	M125	1	Existed
	2		7	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the steering angle sensor and the CAN gateway.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN CGW AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

MAIN LINE BETWEEN CGW AND ABS CIRCUIT

Diagnosis Procedure

INFOID:000000013083929

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M28 and PCB harness side connector
 - Harness connector M20 and PCB harness side connector
 - Harness connector M7
 - Harness connector B1
 - Harness connector M6
 - Harness connector E106

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the steering angle sensor and the PCB harness connector.

CAN gateway harness connector		PCB harness connector		Continuity
Connector No.	Terminal No.	Terminal No.		
M125	1	326		Existed
	7	328		Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the PCB harness.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M20.
2. Check the continuity between the PCB harness connectors.

PCB harness connector			Continuity
Terminal No.			
326	35		Existed
328	36		Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the PCB harness.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M7 and B1.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M20	35	M7	72	Existed
	36		73	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the main line between the harness connectors M20 and M7.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN CGW AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector terminals.

Connector No.	Terminal No.		Continuity
B1	72	74	Existed
	73	75	Existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace the body harness.

6. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M6 and E106.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M7	74	M6	22	Existed
	75		23	Existed

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace the body harness.

7. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector of ABS actuator and electric unit (control unit).
2. Check the continuity between the harness connector and the ABS actuator and electric unit (control unit) harness connector.

Harness connector		ABS actuator and electric unit (control unit) harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E106	22	E41	25	Existed
	23		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the CAN gateway and the ABS actuator and electric unit (control unit).

NO >> Repair the main line between the harness connector E106 and ABS actuator and electric unit (control unit).

MAIN LINE BETWEEN DLC AND ICC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

MAIN LINE BETWEEN DLC AND ICC CIRCUIT

Diagnosis Procedure

INFOID:000000013044326

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M20 and PCB harness side connector
 - Harness connector M117
 - Harness connector B201
 - Harness connector B222
 - Harness connector B5

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M20.
2. Check the continuity between the data link connector and the PCB harness connector.

Data link connector		PCB harness connector		Continuity
Connector No.	Terminal No.	Terminal No.		
M182	13	24		Existed
	12	27		Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the PCB harness.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M117 and B5.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M20	24	M117	72	Existed
	27		73	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M20 and M117.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors B222 and B5.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B201	72	B222	13	Existed
	73		14	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the main line between the harness connectors B201 and B222.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN DLC AND ICC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector of ADAS control unit.
2. Check the continuity between the harness connectors.

Harness connector		ADAS control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B5	13	B10	1	Existed
	14		2	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the ADAS control unit.

NO >> Replace the body harness.

MAIN LINE BETWEEN RDR-L AND RDR-R CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

MAIN LINE BETWEEN RDR-L AND RDR-R CIRCUIT

Diagnosis Procedure

INFOID:000000013044327

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B33
 - Harness connector B245

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar LH
 - Harness connectors B33 and B245
2. Check the continuity between the side radar LH harness connector and the harness connector.

Side radar LH harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B52	4	B33	13	Existed
	3		14	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the side radar LH and the harness connector B33.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of side radar RH.
2. Check the continuity between the harness connector and the side radar RH harness connector.

Harness connector		Side radar RH harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B245	13	B252	4	Existed
	14		3	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the side radar LH and the side radar RH.

NO >> Repair the main line between the harness connector B245 and the side radar RH.

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

MAIN LINE BETWEEN RDR-R AND APA CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

MAIN LINE BETWEEN RDR-R AND APA CIRCUIT

Diagnosis Procedure

INFOID:000000013044328

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B201
 - Harness connector M117
 - Harness connector M20 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar RH
 - Harness connectors B201 and M117
2. Check the continuity between the side radar RH harness connector and the harness connector.

Side radar RH harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B252	4	B201	66	Existed
	3		67	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the side radar RH and the harness connector B201.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M20.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M117	66	M20	38	Existed
	67		40	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M117 and M20.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M150 and M151.
2. Check the continuity between the PCB harness connector and the harness connector.

PCB harness connector		Harness connector		Continuity
Terminal No.	Terminal No.	Connector No.	Terminal No.	
38		M150	11	Existed
40			10	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the side radar RH and the accelerator pedal actuator.

MAIN LINE BETWEEN RDR-R AND APA CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

NO >> Replace the PCB harness.

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

MAIN LINE BETWEEN APA AND LANE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

MAIN LINE BETWEEN APA AND LANE CIRCUIT

Diagnosis Procedure

INFOID:000000013044329

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ADAS control unit
 - Harness connectors M151 and M150
 - Harness connectors M110 and R7
4. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M150	11	M110	13	Existed
	10		2	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the accelerator pedal actuator and the lane camera unit.

NO >> Replace the PCB harness.

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044330

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ECM
 - Harness connector M30 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.
 - VQ37VHR

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M107	114	113	Approx. 108 – 132

- VK56VD

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M160	146	151	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to the following.

- VQ37VHR FOR USA AND CANADA: [EC-202. "Diagnosis Procedure"](#)
- VQ37VHR FOR MEXICO: [EC-716. "Diagnosis Procedure"](#)
- VK56VD FOR USA AND CANADA: [EC-1171. "Diagnosis Procedure"](#)
- VK56VD FOR MEXICO: [EC-1746. "Diagnosis Procedure"](#)

Is the inspection result normal?

YES (Present error)>>Replace the ECM. Refer to the following.

- VQ37VHR FOR USA AND CANADA: [EC-559. "Removal and Installation"](#)
- VQ37VHR FOR MEXICO: [EC-977. "Removal and Installation"](#)
- VK56VD FOR USA AND CANADA: [EC-1568. "Removal and Installation"](#)
- VK56VD FOR MEXICO: [EC-2028. "Removal and Installation"](#)

YES (Past error)>>Error was detected in the ECM branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M30.
2. Check the continuity between the ECM harness connector and the harness connector.
 - VQ37VHR

ECM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

M107	114	M30	439	Existed
	113		438	Existed

- VK56VD

ECM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M160	146	M30	439	Existed
	151		438	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO (VQ37VHR)>>Repair the harness between the ECM harness connector M107 and the harness connector M30.

NO (VK56VD)>>Repair the harness between the ECM harness connector M160 and the harness connector M30.

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

Diagnosis Procedure

INFOID:000000013044332

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Data link connector
 - Harness connector M181
 - Harness connector M105
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M182	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit (CAN communication circuit 1 side). Refer to [LAN-79. "System Diagram"](#).

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M182	6	M23	151	Existed
	14		150	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the data link connector M182 and the harness connector M23.

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

Diagnosis Procedure

INFOID:000000013044333

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Data link connector
 - Harness connector M181
 - Harness connector M105
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M182	13	12	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M182	13	M23	134	Existed
	12		136	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the data link connector M182 and the harness connector M23.

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044334

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Air bag diagnosis sensor unit
 - Harness connector M26 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace the main harness and/or the PCB harness.

2. CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-33. "Work Flow"](#).

Is the inspection result normal?

- YES >> Replace the main harness and/or the PCB harness.
NO >> Replace parts whose air bag system has a malfunction.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044335

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Combination meter
 - Harness connector M24 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M53	14	15	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter Refer to [MWI-75. "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the combination meter. Refer to [MWI-95. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the combination meter branch line.

NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M24.
2. Check the continuity between the combination meter harness connector and the harness connector.

Combination meter harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M53	14	M24	176	Existed
	15		177	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the combination meter harness connector M53 and the harness connector M24.

TCU BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

TCU BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044336

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - TCU
 - Harness connector M26 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of TCU.
2. Check the resistance between the TCU harness connector terminals.

TCU harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M216	9	10	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCU. Refer to [AV-511, "TCU : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the TCU. Refer to [AV-520, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the TCU branch line.
NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M26.
2. Check the continuity between the TCU harness connector and the harness connector.

TCU harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M216	9	M26	242	Existed
	10		262	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the TCU harness connector M216 and the harness connector M26.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

TPMS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

TPMS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044337

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Low tire pressure warning control unit
 - Harness connector M29 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of low tire pressure warning control unit.
2. Check the resistance between the low tire pressure warning control unit harness connector terminals.

Low tire pressure warning control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M43	2	1	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the low tire pressure warning control unit. Refer to [WT-52. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the low tire pressure warning control unit. Refer to [WT-66. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the low tire pressure warning control unit branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M29.
2. Check the continuity between the low tire pressure warning control unit harness connector and the harness connector.

Low tire pressure warning control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M43	2	M29	396	Existed
	1		395	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the low tire pressure warning control unit harness connector M43 and the harness connector M29.

HVAC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044338

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - A/C auto amp.
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/C auto amp.
2. Check the resistance between the A/C auto amp. harness connector terminals.

A/C auto amp. harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M66	12	11	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the A/C auto amp. Refer to [HAC-107. "A/C AUTO AMP. : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the A/C auto amp. Refer to [HAC-126. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the A/C auto amp. branch line.
NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the A/C auto amp. harness connector and the harness connector.

A/C auto amp. harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M28	325	Existed
	11		327	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the A/C auto amp. harness connector M66 and the harness connector M28.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044339

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - AV control unit
 - Harness connector M25 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
2. Check the resistance between the AV control unit harness connector terminals.
 - Models with navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M210	90	74	Approx. 54 – 66

- Models without navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M84	81	80	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to the following.

- Base audio without navigation system: [AV-94. "AV CONTROL UNIT : Diagnosis Procedure"](#)
- BOSE audio with navigation system: [AV-373. "AV CONTROL UNIT : Diagnosis Procedure"](#)

Is the inspection result normal?

YES (Present error)>>Replace the AV control unit. Refer to the following.

- Base audio without navigation system: [AV-126. "Removal and Installation"](#)
- BOSE audio with navigation system: [AV-407. "Removal and Installation"](#)

YES (Past error)>>Error was detected in the AV control unit branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M25.
2. Check the continuity between the AV control unit harness connector and the harness connector.
 - Models with navigation system

AV control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M210	90	M25	201	Existed
	74		221	Existed

- Models without navigation system

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

AV control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M84	81	M25	201	Existed
	80		221	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO (With navigation system)>>Repair the harness between the AV control unit harness connector M210 and the harness connector M25.

NO (Without navigation system)>>Repair the harness between the AV control unit harness connector M84 and the harness connector M25.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044340

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - BCM
 - Harness connector M22 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M120	39	40	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-88. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to [BCS-95. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the BCM branch line.
NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M22.
2. Check the continuity between the BCM harness connector and the harness connector.

BCM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M120	39	M22	101	Existed
	40		102	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the BCM harness connector M120 and the harness connector M22.

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044341

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - A/T assembly
 - Harness connector F103
 - Harness connector M116
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/T assembly.
2. Check the resistance between the A/T assembly harness connector terminals.

A/T assembly harness connector		Resistance (Ω)
Connector No.	Terminal No.	
F61	3 8	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 5.

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Remove the joint connector. Refer to [TM-192, "Removal and Installation"](#).
2. Check the continuity between the A/T assembly harness connector side and the TCM harness connector side of the joint connector.

A/T assembly harness connector side	TCM harness connector side	Continuity
Terminal No.	Terminal No.	
3	3	Existed
8	8	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the joint connector.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-159, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the control valve & TCM. Refer to [TM-192, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the TCM branch line.

NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the A/T assembly harness connector and the harness connector.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

A/T assembly harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
F61	3	M28	346	Existed
	8		347	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the A/T assembly harness connector F61 and the harness connector M28.

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044342

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Steering angle sensor
 - Harness connector M22 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M37	1	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to [BRC-52. "Wiring Diagram"](#).

Is the inspection result normal?

YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-168. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the steering angle sensor branch line.

NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M22.
2. Check the continuity between the steering angle sensor harness connector and the harness connector.

Steering angle sensor harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M37	1	M22	81	Existed
	2		82	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the steering angle sensor harness connector M37 and the harness connector M22.

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

Diagnosis Procedure

INFOID:000000013044343

1. CHECK DTC

Check DTC of the CAN gateway with CONSULT.

Is U1010 or B2600 indicated?

- YES >> Perform a diagnosis of the indicated DTC.
- NO >> GO TO 2.

2. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - CAN gateway
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair the terminal and connector.

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of CAN gateway.
2. Check the resistance between the CAN gateway harness connector terminals.

CAN gateway harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M125	1	7	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 4.
- NO >> GO TO 5.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the CAN gateway. Refer to [LAN-167, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the CAN gateway. Refer to [LAN-168, "Removal and Installation"](#).
- YES (Past error)>>Error was detected in the CAN gateway branch line (CAN communication circuit 1 side). Refer to [LAN-79, "System Diagram"](#).
- NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the CAN gateway harness connector and the harness connector.

CAN gateway harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M125	1	M28	326	Existed
	7		328	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
- NO >> Repair the harness between the CAN gateway harness connector M125 and the harness connector M28.

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

Diagnosis Procedure

INFOID:000000013044344

1. CHECK DTC

Check DTC of the CAN gateway with CONSULT.

Is U1010 or B2600 indicated?

- YES >> Perform a diagnosis of the indicated DTC.
- NO >> GO TO 2.

2. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - CAN gateway
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair the terminal and connector.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> GO TO 5.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the CAN gateway. Refer to [LAN-167, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the CAN gateway. Refer to [LAN-168, "Removal and Installation"](#).
- YES (Past error)>>Error was detected in the CAN gateway branch line (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).
- NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the CAN gateway harness connector and the harness connector.

CAN gateway harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M125	4	M23	133	Existed
	10		135	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
- NO >> Repair the harness between the CAN gateway harness connector M125 and the harness connector M23.

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044346

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E41	25	15	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-143. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-165. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.
NO >> Repair the power supply and the ground circuit.

AFS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

AFS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044347

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the AFS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AFS control unit.
2. Check the resistance between the AFS control unit harness connector terminals.

AFS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E70	1	13	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the AFS control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AFS control unit. Refer to [EXL-95, "AFS CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the AFS control unit. Refer to [EXL-148, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the AFS control unit branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044348

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E6	40	39	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the IPDM E/R branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-33, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the IPDM E/R branch line.
NO >> Repair the power supply and the ground circuit.

AVM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

AVM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044349

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of around view monitor control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of around view monitor control unit.
2. Check the resistance between the around view monitor control unit harness connector terminals.

Around view monitor control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M231	27	28	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the around view monitor control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the around view monitor control unit. Refer to [AV-375, "AROUND VIEW MONITOR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the around view monitor control unit. Refer to [AV-429, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the around view monitor control unit branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

SONAR BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

SONAR BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044350

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Sonar control unit
 - Harness connector M117 and B201

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of sonar control unit.
2. Check the resistance between the sonar control unit harness connector terminals.

Sonar control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M47	19	20	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the power supply and the ground circuit.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the sonar control unit. Refer to [AV-376, "SONAR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the sonar control unit. Refer to the [AV-433, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the sonar control unit branch line.

NO >> Repair the power supply and the ground circuit.

ADP BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

ADP BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044351

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Driver seat control unit
 - Harness connector B501
 - Harness connector B11
 - CAN gateway (With ICC system)

Is the inspection result normal?

YES (With ICC system)>>GO TO 2.

YES (Without ICC system)>>GO TO 3.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line is open) the root cause (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway. (With ICC system)
2. Disconnect the connector of driver seat control unit.
3. Check the resistance between the driver seat control unit harness connector terminals.

Driver seat control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B514	23	24	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the driver seat control unit branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the driver seat control unit. Refer to [ADP-74, "DRIVER SEAT CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the driver seat control unit. Refer to [ADP-147, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the driver seat control unit branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

ICC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044352

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ADAS control unit
 - CAN gateway

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> Check the harness and repair or replace (if shield line is open) the root cause (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway.
2. Disconnect the connector of ADAS control unit.
3. Check the resistance between the ADAS control unit harness connector terminals.

ADAS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B10	1	2	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 4.
 NO >> Replace the body harness.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ADAS control unit. Refer to [DAS-162, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ADAS control unit. Refer to [DAS-163, "Removal and Installation"](#).
 YES (Past error)>>Error was detected in the ADAS control unit branch line.
 NO >> Repair the power supply and the ground circuit.

PSB BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044353

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Pre-crash seat belt control unit (driver side)
 - CAN gateway

Is the inspection result normal?

- YES >> GO TO 2.
- NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector		Continuity	
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Check the harness and repair or replace (if shield line is open) the root cause (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway.
2. Disconnect the connector of pre-crash seat belt control unit (driver side).
3. Check the resistance between the pre-crash seat belt control unit (driver side) harness connector terminals.

Pre-crash seat belt control unit (driver side) harness connector		Resistance (Ω)	
Connector No.	Terminal No.		
B65	14	4	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 4.
- NO >> Repair the pre-crash seat belt control unit (driver side) branch line.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the pre-crash seat belt control unit (driver side). Refer to [SBC-53, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the seat belt pre-tensioner retractor (driver side). Refer to [SB-8, "SEAT BELT RETRACTOR : Removal and Installation"](#).
- YES (Past error)>>Error was detected in the pre-crash seat belt control unit (driver side) branch line.
- NO >> Repair the power supply and the ground circuit.

RDR-L BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

RDR-L BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044354

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the side radar LH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of side radar LH.
2. Check the resistance between the side radar LH harness connector terminals.

Side radar LH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B52	4	3	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the side radar LH branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar LH. Refer to [DAS-346, "SIDE RADAR LH : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the side radar LH. Refer to [DAS-393, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the side radar LH branch line.
NO >> Repair the power supply and the ground circuit.

BSW/BUZZER BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

BSW/BUZZER BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044355

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the driver assistance buzzer control module for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of driver assistance buzzer control module.
2. Check the resistance between the driver assistance buzzer control module harness connector terminals.

Driver assistance buzzer control module harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B210	3	11	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the driver assistance buzzer control module branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the driver assistance buzzer control module. Refer to [DAS-347, "DRIVER ASSISTANCE BUZZER CONTROL MODULE : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the driver assistance buzzer control module. Refer to [DAS-396, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the driver assistance buzzer control module branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

RDR-R BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

RDR-R BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044356

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the side radar RH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK RIGHT/LEFT SWITCHING SIGNAL CIRCUIT

Check the right/left switching signal circuit of the side radar RH. Refer to [DAS-349. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair the root cause.

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of side radar RH.
2. Check the resistance between the side radar RH harness connector terminals.

Side radar RH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B252	4	3	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 4.
NO >> Repair the side radar RH branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar RH. Refer to [DAS-347. "SIDE RADAR RH : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the side radar RH. Refer to [DAS-393. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the side radar RH branch line.
NO >> Repair the power supply and the ground circuit.

APA BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

APA BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044357

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Accelerator pedal position sensor
 - Harness connector M151
 - Harness connector M150
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of accelerator pedal position sensor.
2. Check the resistance between the accelerator pedal position sensor harness connector terminals.

Accelerator pedal position sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M154	3	9	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the accelerator pedal position sensor. Refer to [DAS-345, "ACCELERATOR PEDAL ACTUATOR : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the accelerator pedal assembly. Refer to [ACC-6, "MODELS WITH DISTANCE CONTROL ASSIST SYSTEM : Removal and Installation"](#).
 YES (Past error)>>Error was detected in the accelerator pedal position sensor branch line.
 NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the accelerator pedal position sensor harness connector and the harness connector.

Accelerator pedal position sensor harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M154	3	M23	138	Existed
	9		137	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
 NO >> Repair the harness between the accelerator pedal position sensor harness connector M152 and the harness connector M23.

LANE BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

LANE BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044358

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Lane camera unit
 - Harness connector R7
 - Harness connector M110
 - Harness connector M24 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of lane camera unit.
2. Check the resistance between the lane camera unit harness connector terminals.

Lane camera unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
R8	4	8	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the lane camera unit. Refer to [DAS-345, "LANE CAMERA UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the lane camera unit. Refer to [DAS-392, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the lane camera unit branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M24.
2. Check the continuity between the lane camera unit harness connector and the harness connector.

Lane camera unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
R8	4	M24	179	Existed
	8		178	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the lane camera unit harness connector R8 and the harness connector M24.

LASER BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

LASER BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044359

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ICC sensor
 - Harness connector E106
 - Harness connector M6
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ICC sensor.
2. Check the resistance between the ICC sensor harness connector terminals.

ICC sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E33	3	6	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ICC sensor. Refer to [CCS-116, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ICC sensor. Refer to [CCS-133, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ICC sensor branch line.
NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the ICC sensor harness connector and the harness connector.

ICC sensor harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E33	3	M28	343	Existed
	6		345	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the ICC sensor harness connector E67 and the harness connector M28.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CAN COMMUNICATION CIRCUIT 1

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

CAN COMMUNICATION CIRCUIT 1

Diagnosis Procedure

INFOID:000000013044361

1. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit 1.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-79. "System Diagram"](#).

4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M182	6 14	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

3. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M182	6		Not existed
	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

4. CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.
 - VQ37VHR

ECM		Resistance (Ω)
Terminal No.		
114	113	Approx. 108 – 132

- VK56VD

ECM		Resistance (Ω)
Terminal No.		
146	151	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

CAN COMMUNICATION CIRCUIT 1

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

IPDM E/R		Resistance (Ω)
Terminal No.		
40	39	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit 1.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

CAN COMMUNICATION CIRCUIT 2

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

CAN COMMUNICATION CIRCUIT 2

Diagnosis Procedure

INFOID:000000013044362

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit 2.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-79. "System Diagram"](#).

4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M182	13	Not existed
	12	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M182	13		Not existed
	12		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

4.CHECK CAN GATEWAY TERMINATION CIRCUIT

1. Remove the CAN gateway.
2. Check the resistance between the CAN gateway terminals.

CAN gateway		Resistance (Ω)
Terminal No.		
4	10	Approx. 108 – 132
6	12	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the CAN gateway.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

Inspection result

Reproduced>>GO TO 6.

CAN COMMUNICATION CIRCUIT 2

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit 2.

NOTE:

CAN gateway has two termination circuits. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

ITS COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

ITS COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000013044363

1. CHECK CAN DIAGNOSIS

Check the CAN diagnosis results from CONSULT to see that the CAN communication circuit 1 and CAN communication circuit 2 have no malfunction.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-79. "System Diagram"](#).

Are the CAN communication 1 and CAN communication 2 circuits normal?

YES >> GO TO 2.

NO >> Check and repair CAN communication circuit 1 and/or CAN communication circuit 2.

2. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ADAS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the terminal and connector.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - ADAS control unit
 - ICC sensor
2. Check the continuity between the ADAS control unit harness connector and the ICC sensor harness connector.

ADAS control unit harness connector		ICC sensor harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B10	6	E33	3	Existed
	7		6	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the body harness.

4. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar LH
 - Side radar RH
 - Accelerator pedal actuator
 - Lane camera unit
2. Check the continuity between the ADAS control unit harness connector terminals.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
B10	6	7	Not existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

5. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the ADAS control unit harness connector and the ground.

ITS COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

ADAS control unit harness connector		Ground	Continuity
Connector No.	Terminal No.		
B10	6		Not existed
	7		Not existed

A
B

Is the inspection result normal?

YES >> GO TO 6.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

C

6.CHECK TERMINATION CIRCUIT

1. Remove the ADAS control unit and the ICC sensor.
2. Check the resistance between the ADAS control unit terminals.

D

ADAS control unit		Resistance (Ω)
Terminal No.		
6	7	Approx. 108 – 132

E
F

3. Check the resistance between the ICC sensor terminals.

ICC sensor		Resistance (Ω)
Terminal No.		
3	6	Approx. 108 – 132

G
H

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace the ADAS control unit and/or the ICC sensor.

I

7.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

J

Inspection result

Reproduced>>GO TO 8.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

K

8.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

L

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of ITS communication system.

NOTE:

ADAS control unit and ICC sensor have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

N

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

O

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

P

LAN

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 8)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

Diagnosis Procedure

INFOID:000000013044367

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connectors M181 and M105
 - Combination meter
4. Check the continuity between the harness connector and the combination meter harness connector.

Harness connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M105	7	M53	14	Existed
	8		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the air bag diagnosis sensor unit.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 8)]

MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT

Diagnosis Procedure

INFOID:000000013044368

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connectors M181 and M105
 - Combination meter
4. Check the continuity between the harness connector and the combination meter harness connector.

Harness connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M105	7	M53	14	Existed
	8		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the air bag diagnosis sensor unit and the combination meter.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN M&A AND TPMS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 8)]

MAIN LINE BETWEEN M&A AND TPMS CIRCUIT

Diagnosis Procedure

INFOID:000000013044370

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Combination meter
 - Low tire pressure warning control unit
4. Check the continuity between the combination meter harness connector and the low tire pressure warning control unit harness connector.

Combination meter harness connector		Low tire pressure warning control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M53	14	M43	2	Existed
	15		1	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the combination meter and the low tire pressure warning control unit.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 8)]

MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT

Diagnosis Procedure

INFOID:000000013044372

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Low tire pressure warning control unit
 - A/C auto amp.
4. Check the continuity between the low tire pressure warning control unit harness connector and the A/C auto amp. harness connector.

Low tire pressure warning control unit harness connector		A/C auto amp. harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M43	2	M66	12	Existed
	1		11	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the low tire pressure warning control unit and the A/C auto amp.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN HVAC AND AV CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 8)]

MAIN LINE BETWEEN HVAC AND AV CIRCUIT

Diagnosis Procedure

INFOID:000000013044373

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - A/C auto amp.
 - AV control unit
4. Check the continuity between the A/C auto amp. harness connector and the AV control unit harness connector.
 - Models with navigation system

A/C auto amp. harness connector		AV control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M210	90	Existed
	11		74	Existed

- Models without navigation system

A/C auto amp. harness connector		AV control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M84	81	Existed
	11		80	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the A/C amp. and the AV control unit.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN AV AND BCM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 8)]

MAIN LINE BETWEEN AV AND BCM CIRCUIT

Diagnosis Procedure

INFOID:000000013044374

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - AV control unit
 - BCM
4. Check the continuity between the AV control unit harness connector and the BCM harness connector.
 - Models with navigation system

AV control unit harness connector		BCM harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M210	90	M120	39	Existed
	74		40	Existed

- Models without navigation system

AV control unit harness connector		BCM harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M84	81	M120	39	Existed
	80		40	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the AV control unit and the BCM.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN BCM AND TCM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 8)]

MAIN LINE BETWEEN BCM AND TCM CIRCUIT

Diagnosis Procedure

INFOID:000000013044375

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - BCM
 - Harness connector F103 and M116
4. Check the continuity between the BCM harness connector and the A/T assembly harness connector.

BCM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M120	39	M116	11	Existed
	40		12	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the BCM and the A/T assembly.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN TCM AND STRG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 8)]

MAIN LINE BETWEEN TCM AND STRG CIRCUIT

Diagnosis Procedure

INFOID:000000013044376

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connector F103 and M116
 - Steering angle sensor
4. Check the continuity between the harness connector and the steering angle sensor harness connector.

Harness connector		Steering angle sensor harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M116	11	M37	1	Existed
	12		2	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the A/T assembly and the steering angle sensor.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN STRG AND ADP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 8)]

MAIN LINE BETWEEN STRG AND ADP CIRCUIT

Diagnosis Procedure

INFOID:000000013044377

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M22 and PCB harness side connector
 - Harness connector M20 and PCB harness side connector
 - Harness connector M7
 - Harness connector B1
 - Harness connector B11
 - Harness connector B501

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M22.
2. Check the continuity between the steering angle sensor and the PCB harness connector.

Steering angle sensor harness connector		PCB harness connector		Continuity
Connector No.	Terminal No.	Terminal No.		
M37	1	81		Existed
	2	82		Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the PCB harness.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M20.
2. Check the continuity between the PCB harness connectors.

PCB harness connector			Continuity
Terminal No.			
81	35		Existed
82	36		Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the PCB harness.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M7 and B1.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M20	35	M7	72	Existed
	36		73	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the main line between the harness connectors M20 and M7.

MAIN LINE BETWEEN STRG AND ADP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 8)]

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector terminals.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B1	72	B11	23	Existed
	73		24	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the steering angle sensor and the driver seat control unit.

NO >> Replace the body harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN ADP AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 8)]

MAIN LINE BETWEEN ADP AND ABS CIRCUIT

Diagnosis Procedure

INFOID:000000013044381

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B1
 - Harness connector M7
 - Harness connector M6
 - Harness connector E106

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors B1 and M7.
2. Check the continuity between the harness connector terminals.

Connector No.	Terminal No.		Continuity
B1	72	74	Existed
	73	75	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the body harness.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M6 and E106.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M7	74	M6	22	Existed
	75		23	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M7 and M6.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the continuity between the harness connector and the ABS actuator and electric unit (control unit) harness connector.

Harness connector		ABS actuator and electric unit (control unit) harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E106	22	E41	25	Existed
	23		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the driver seat control unit and the ABS actuator and electric unit (control unit).

MAIN LINE BETWEEN ADP AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 8)]

NO >> Repair the main line between the harness connector E106 and the ABS actuator and electric unit (control unit).

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 8)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044389

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ECM
 - Harness connector M30 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.
 - VQ37VHR

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M107	114	113	Approx. 108 – 132

- VK56VD

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M160	146	151	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to the following.

- VQ37VHR FOR USA AND CANADA: [EC-202, "Diagnosis Procedure"](#)
- VQ37VHR FOR MEXICO: [EC-716, "Diagnosis Procedure"](#)
- VK56VD FOR USA AND CANADA: [EC-1171, "Diagnosis Procedure"](#)
- VK56VD FOR MEXICO: [EC-1746, "Diagnosis Procedure"](#)

Is the inspection result normal?

YES (Present error)>>Replace the ECM. Refer to the following.

- VQ37VHR FOR USA AND CANADA: [EC-559, "Removal and Installation"](#)
- VQ37VHR FOR MEXICO: [EC-977, "Removal and Installation"](#)
- VK56VD FOR USA AND CANADA: [EC-1568, "Removal and Installation"](#)
- VK56VD FOR MEXICO: [EC-2028, "Removal and Installation"](#)

YES (Past error)>>Error was detected in the ECM branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M30.
2. Check the continuity between the ECM harness connector and the harness connector.
 - VQ37VHR

ECM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 8)]

M107	114	M30	439	Existed
	113		438	Existed

A

- VK56VD

B

ECM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M160	146	M30	439	Existed
	151		438	Existed

C

Is the inspection result normal?

D

YES >> Replace the PCB harness.

NO (VQ37VHR)>>Repair the harness between the ECM harness connector M107 and the harness connector M30.

NO (VK56VD)>>Repair the harness between the ECM harness connector M160 and the harness connector M30.

E

F

G

H

I

J

K

L

LAN

N

O

P

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 8)]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044390

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Data link connector
 - Harness connector M181
 - Harness connector M105
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M182	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit.

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M182	6	M23	151	Existed
	14		150	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the data link connector M182 and the harness connector M23.

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 8)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044393

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Air bag diagnosis sensor unit
 - Harness connector M26 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace the main harness and/or the PCB harness.

2.CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-33. "Work Flow"](#).

Is the inspection result normal?

- YES >> Replace the main harness and/or the PCB harness.
NO >> Replace parts whose air bag system has a malfunction.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 8)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044394

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Combination meter
 - Harness connector M24 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M53	14	15	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter Refer to [MWI-75. "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the combination meter. Refer to [MWI-95. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the combination meter branch line.

NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M24.
2. Check the continuity between the combination meter harness connector and the harness connector.

Combination meter harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M53	14	M24	176	Existed
	15		177	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the combination meter harness connector M53 and the harness connector M24.

TPMS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 8)]

TPMS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044396

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Low tire pressure warning control unit
 - Harness connector M29 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of low tire pressure warning control unit.
2. Check the resistance between the low tire pressure warning control unit harness connector terminals.

Low tire pressure warning control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M43	2	1	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the low tire pressure warning control unit. Refer to [WT-52. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the low tire pressure warning control unit. Refer to [WT-66. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the low tire pressure warning control unit branch line.
NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M29.
2. Check the continuity between the low tire pressure warning control unit harness connector and the harness connector.

Low tire pressure warning control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M43	2	M29	396	Existed
	1		395	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the low tire pressure warning control unit harness connector M43 and the harness connector M29.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

HVAC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 8)]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044397

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - A/C auto amp.
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/C auto amp.
2. Check the resistance between the A/C auto amp. harness connector terminals.

A/C auto amp. harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M66	12	11	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the A/C auto amp. Refer to [HAC-107, "A/C AUTO AMP. : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the A/C auto amp. Refer to [HAC-126, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the A/C auto amp. branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the A/C auto amp. harness connector and the harness connector.

A/C auto amp. harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M28	325	Existed
	11		327	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the A/C auto amp. harness connector M66 and the harness connector M28.

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 8)]

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044398

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - AV control unit
 - Harness connector M25 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
2. Check the resistance between the AV control unit harness connector terminals.
 - Models with navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M210	90	74	Approx. 54 – 66

- Models without navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M84	81	80	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to the following.

- Base audio without navigation system: [AV-94. "AV CONTROL UNIT : Diagnosis Procedure"](#)
- BOSE audio with navigation system: [AV-373. "AV CONTROL UNIT : Diagnosis Procedure"](#)

Is the inspection result normal?

YES (Present error)>>Replace the AV control unit. Refer to the following.

- Base audio without navigation system: [AV-126. "Removal and Installation"](#)
- BOSE audio with navigation system: [AV-407. "Removal and Installation"](#)

YES (Past error)>>Error was detected in the AV control unit branch line.

NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M25.
2. Check the continuity between the AV control unit harness connector and the harness connector.
 - Models with navigation system

AV control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M210	90	M25	201	Existed
	74		221	Existed

- Models without navigation system

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 8)]

AV control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M84	81	M25	201	Existed
	80		221	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO (With navigation system)>>Repair the harness between the AV control unit harness connector M210 and the harness connector M25.

NO (Without navigation system)>>Repair the harness between the AV control unit harness connector M84 and the harness connector M25.

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 8)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044399

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - BCM
 - Harness connector M22 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M120	39	40	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-88. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to [BCS-95. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the BCM branch line.
NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M22.
2. Check the continuity between the BCM harness connector and the harness connector.

BCM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M120	39	M22	101	Existed
	40		102	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the BCM harness connector M120 and the harness connector M22.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 8)]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044400

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - A/T assembly
 - Harness connector F103
 - Harness connector M116
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/T assembly.
2. Check the resistance between the A/T assembly harness connector terminals.

A/T assembly harness connector		Resistance (Ω)
Connector No.	Terminal No.	
F61	3 8	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 5.

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Remove the joint connector. Refer to [TM-192, "Removal and Installation"](#).
2. Check the continuity between the A/T assembly harness connector side and the TCM harness connector side of the joint connector.

A/T assembly harness connector side	TCM harness connector side	Continuity
Terminal No.	Terminal No.	
3	3	Existed
8	8	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the joint connector.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-159, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the control valve & TCM. Refer to [TM-192, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the TCM branch line.

NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the A/T assembly harness connector and the harness connector.

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 8)]

A/T assembly harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
F61	3	M28	346	Existed
	8		347	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the A/T assembly harness connector F61 and the harness connector M28.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 8)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044401

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Steering angle sensor
 - Harness connector M22 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M37	1	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to [BRC-52. "Wiring Diagram"](#).

Is the inspection result normal?

YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-168. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the steering angle sensor branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M22.
2. Check the continuity between the steering angle sensor harness connector and the harness connector.

Steering angle sensor harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M37	1	M22	81	Existed
	2		82	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the steering angle sensor harness connector M37 and the harness connector M22.

4WD BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 8)]

4WD BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044404

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the AWD control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AWD control unit.
2. Check the resistance between the AWD control unit harness connector terminals.

AWD control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B17	8	16	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the AWD control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AWD control unit. Refer to [DLN-49, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the AWD control unit. Refer to [DLN-61, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the AWD control unit branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 8)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044405

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E41	25	15	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-143. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-165. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.
NO >> Repair the power supply and the ground circuit.

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 8)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044407

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E6	40	39	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the IPDM E/R branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-33, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the IPDM E/R branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

ADP BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 8)]

ADP BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044410

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Driver seat control unit
 - Harness connector B501
 - Harness connector B11
 - CAN gateway (With ICC system)

Is the inspection result normal?

YES (With ICC system)>>GO TO 2.

YES (Without ICC system)>>GO TO 3.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line is open) the root cause (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway. (With ICC system)
2. Disconnect the connector of driver seat control unit.
3. Check the resistance between the driver seat control unit harness connector terminals.

Driver seat control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B514	23	24	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the driver seat control unit branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the driver seat control unit. Refer to [ADP-74, "DRIVER SEAT CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the driver seat control unit. Refer to [ADP-147, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the driver seat control unit branch line.

NO >> Repair the power supply and the ground circuit.

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 8)]

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000013044419

1. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication system.
4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M182	6 14	Not existed

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

3. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M182	6		Not existed
	14		Not existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

4. CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.
 - VQ37VHR

ECM		Resistance (Ω)
Terminal No.		
114	113	Approx. 108 – 132

- VK56VD

ECM		Resistance (Ω)
Terminal No.		
146	151	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

IPDM E/R		Resistance (Ω)
Terminal No.		
40	39	Approx. 108 – 132

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 8)]

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication system.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

Diagnosis Procedure

INFOID:0000000013043909

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connectors M181 and M105
 - Combination meter
4. Check the continuity between the harness connector and the combination meter harness connector.

Harness connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M105	7	M53	14	Existed
	8		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the air bag diagnosis sensor unit.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT

Diagnosis Procedure

INFOID:000000013043910

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connectors M181 and M105
 - Combination meter
4. Check the continuity between the harness connector and the combination meter harness connector.

Harness connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M105	7	M53	14	Existed
	8		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the air bag diagnosis sensor unit and the combination meter.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN M&A AND TCU CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

MAIN LINE BETWEEN M&A AND TCU CIRCUIT

Diagnosis Procedure

INFOID:0000000013043911

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Combination meter
 - TCU
4. Check the continuity between the combination meter harness connector and the TCU harness connector.

Combination meter harness connector		TCU harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M53	14	M216	9	Existed
	15		10	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the combination meter and the TCU.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN TCU AND TPMS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

MAIN LINE BETWEEN TCU AND TPMS CIRCUIT

Diagnosis Procedure

INFOID:000000013043913

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - TCU
 - Low tire pressure warning control unit
4. Check the continuity between the low tire pressure warning control unit harness connector and the A/C auto amp. harness connector.

TCU harness connector		Low tire pressure warning control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M216	9	M43	2	Existed
	10		1	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the TCU and the low tire pressure warning control unit.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT

Diagnosis Procedure

INFOID:000000013043914

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Low tire pressure warning control unit
 - A/C auto amp.
4. Check the continuity between the low tire pressure warning control unit harness connector and the A/C auto amp. harness connector.

Low tire pressure warning control unit harness connector		A/C auto amp. harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M43	2	M66	12	Existed
	1		11	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the low tire pressure warning control unit and the A/C auto amp.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN HVAC AND AV CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

MAIN LINE BETWEEN HVAC AND AV CIRCUIT

Diagnosis Procedure

INFOID:000000013043915

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - A/C auto amp.
 - AV control unit
4. Check the continuity between the A/C auto amp. harness connector and the AV control unit harness connector.
 - Models with navigation system

A/C auto amp. harness connector		AV control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M210	90	Existed
	11		74	Existed

- Models without navigation system

A/C auto amp. harness connector		AV control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M84	81	Existed
	11		80	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the A/C amp. and the AV control unit.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN AV AND BCM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

MAIN LINE BETWEEN AV AND BCM CIRCUIT

Diagnosis Procedure

INFOID:000000013043916

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - AV control unit
 - BCM
4. Check the continuity between the AV control unit harness connector and the BCM harness connector.
 - Models with navigation system

AV control unit harness connector		BCM harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M210	90	M120	39	Existed
	74		40	Existed

- Models without navigation system

AV control unit harness connector		BCM harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M84	81	M120	39	Existed
	80		40	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the AV control unit and the BCM.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN BCM AND TCM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

MAIN LINE BETWEEN BCM AND TCM CIRCUIT

Diagnosis Procedure

INFOID:000000013043917

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - BCM
 - Harness connector F103 and M116
4. Check the continuity between the BCM harness connector and the A/T assembly harness connector.

BCM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M120	39	M116	11	Existed
	40		12	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the BCM and the A/T assembly.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN TCM AND STRG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

MAIN LINE BETWEEN TCM AND STRG CIRCUIT

Diagnosis Procedure

INFOID:000000013043918

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connector F103 and M116
 - Steering angle sensor
4. Check the continuity between the harness connector and the steering angle sensor harness connector.

Harness connector		Steering angle sensor harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M116	11	M37	1	Existed
	12		2	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the A/T assembly and the steering angle sensor.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN STRG AND CGW CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

MAIN LINE BETWEEN STRG AND CGW CIRCUIT

Diagnosis Procedure

INFOID:000000013043920

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Steering angle sensor
 - CAN gateway
4. Check the continuity between the steering angle sensor harness connector and the CAN gateway harness connector.

Steering angle sensor harness connector		CAN gateway harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M37	1	M125	1	Existed
	2		7	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the steering angle sensor and the CAN gateway.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN CGW AND 4WD CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

MAIN LINE BETWEEN CGW AND 4WD CIRCUIT

Diagnosis Procedure

INFOID:000000013043921

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M28 and PCB harness side connector
 - Harness connector M20 and PCB harness side connector
 - Harness connector M7
 - Harness connector B1

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the steering angle sensor and the PCB harness connector.

CAN gateway harness connector		PCB harness connector		Continuity
Connector No.	Terminal No.	Terminal No.		
M125	1	326		Existed
	7	328		Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the PCB harness.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M20.
2. Check the continuity between the PCB harness connectors.

PCB harness connector			Continuity
Terminal No.			
326	35		Existed
328	36		Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the PCB harness.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M7 and B1.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M20	35	M7	72	Existed
	36		73	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the main line between the harness connectors M20 and M7.

5.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN CGW AND 4WD CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

1. Disconnect the harness connector of AWD control unit.
2. Check the continuity between the harness connector and the AWD control unit harness connector.

Harness connector		AWD control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B1	72	B17	8	Existed
	73		16	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the CAN gateway and the AWD control unit.

NO >> Replace the body harness.

MAIN LINE BETWEEN 4WD AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

MAIN LINE BETWEEN 4WD AND ABS CIRCUIT

Diagnosis Procedure

INFOID:000000013043924

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B1
 - Harness connector M7
 - Harness connector M6
 - Harness connector E106

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors B1 and M7.
2. Check the continuity between the harness connector terminals.

Connector No.	Terminal No.		Continuity
B1	72	74	Existed
	73	75	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the body harness.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M6 and E106.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M7	74	M6	22	Existed
	75		23	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M7 and M6.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the continuity between the harness connector and the ABS actuator and electric unit (control unit) harness connector.

Harness connector		ABS actuator and electric unit (control unit) harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E106	22	E41	25	Existed
	23		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the AWD control unit and the ABS actuator and electric unit (control unit).

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN 4WD AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

NO >> Repair the main line between the harness connector E106 and the ABS actuator and electric unit (control unit).

MAIN LINE BETWEEN DLC AND AVM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

MAIN LINE BETWEEN DLC AND AVM CIRCUIT

Diagnosis Procedure

INFOID:000000013043925

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M20 and PCB harness side connector
 - Harness connector M117
 - Harness connector B201

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the data link connector and the PCB harness connector.

Data link connector		PCB harness connector		Continuity
Connector No.	Terminal No.	Terminal No.		
M182	13	24		Existed
	12	27		Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the PCB harness.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M117 and B201.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M20	24	M117	72	Existed
	27		73	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M20 and M117.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector of around view monitor control unit.
2. Check the continuity between the harness connector terminals.

Harness connector		Around view monitor control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B201	72	B231	27	Existed
	73		28	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the around view monitor control unit.

NO >> Repair the main line between the harness connector B201 and the around view monitor control unit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN AVM AND ADP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

MAIN LINE BETWEEN AVM AND ADP CIRCUIT

Diagnosis Procedure

INFOID:000000013043926

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - Around view monitor control unit
 - Harness connector B222
 - Harness connector B5
4. Check the continuity between the AV control unit harness connector and the combination meter harness connector.

Around view monitor control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B231	27	B222	13	Existed
	28		14	Existed

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the main line between the around view monitor control unit and the harness connector B222.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors B11 and B501.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B5	13	B11	23	Existed
	14		24	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the harness connectors B5 and B11.

NO >> Replace the body harness.

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043931

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ECM
 - Harness connector M30 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.
 - VQ37VHR

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M107	114	113	Approx. 108 – 132

- VK56VD

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M160	146	151	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to the following.

- VQ37VHR FOR USA AND CANADA: [EC-202. "Diagnosis Procedure"](#)
- VQ37VHR FOR MEXICO: [EC-716. "Diagnosis Procedure"](#)
- VK56VD FOR USA AND CANADA: [EC-1171. "Diagnosis Procedure"](#)
- VK56VD FOR MEXICO: [EC-1746. "Diagnosis Procedure"](#)

Is the inspection result normal?

YES (Present error)>>Replace the ECM. Refer to the following.

- VQ37VHR FOR USA AND CANADA: [EC-559. "Removal and Installation"](#)
- VQ37VHR FOR MEXICO: [EC-977. "Removal and Installation"](#)
- VK56VD FOR USA AND CANADA: [EC-1568. "Removal and Installation"](#)
- VK56VD FOR MEXICO: [EC-2028. "Removal and Installation"](#)

YES (Past error)>>Error was detected in the ECM branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M30.
2. Check the continuity between the ECM harness connector and the harness connector.
 - VQ37VHR

ECM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

M107	114	M30	439	Existed
	113		438	Existed

- VK56VD

ECM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M160	146	M30	439	Existed
	151		438	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO (VQ37VHR)>>Repair the harness between the ECM harness connector M107 and the harness connector M30.

NO (VK56VD)>>Repair the harness between the ECM harness connector M160 and the harness connector M30.

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

Diagnosis Procedure

INFOID:000000013043933

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Data link connector
 - Harness connector M181
 - Harness connector M105
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M182	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit (CAN communication circuit 1 side). Refer to [LAN-79. "System Diagram"](#).

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M182	6	M23	151	Existed
	14		150	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the data link connector M182 and the harness connector M23.

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

Diagnosis Procedure

INFOID:000000013043934

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Data link connector
 - Harness connector M181
 - Harness connector M105
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M182	13	12	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M182	13	M23	134	Existed
	12		136	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the data link connector M182 and the harness connector M23.

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043935

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Air bag diagnosis sensor unit
 - Harness connector M26 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace the main harness and/or the PCB harness.

2. CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-33. "Work Flow"](#).

Is the inspection result normal?

- YES >> Replace the main harness and/or the PCB harness.
NO >> Replace parts whose air bag system has a malfunction.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043936

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Combination meter
 - Harness connector M24 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M53	14	15	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter Refer to [MWI-75. "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the combination meter. Refer to [MWI-95. "Removal and Installation"](#).
 YES (Past error)>>Error was detected in the combination meter branch line.
 NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M24.
2. Check the continuity between the combination meter harness connector and the harness connector.

Combination meter harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M53	14	M24	176	Existed
	15		177	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
 NO >> Repair the harness between the combination meter harness connector M53 and the harness connector M24.

TCU BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

TCU BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043937

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - TCU
 - Harness connector M26 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of TCU.
2. Check the resistance between the TCU harness connector terminals.

TCU harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M216	9	10	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCU. Refer to [AV-511, "TCU : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the TCU. Refer to [AV-520, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the TCU branch line.
NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M26.
2. Check the continuity between the TCU harness connector and the harness connector.

TCU harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M216	9	M26	242	Existed
	10		262	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the TCU harness connector M216 and the harness connector M26.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

TPMS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

TPMS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043938

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Low tire pressure warning control unit
 - Harness connector M29 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of low tire pressure warning control unit.
2. Check the resistance between the low tire pressure warning control unit harness connector terminals.

Low tire pressure warning control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M43	2	1	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the low tire pressure warning control unit. Refer to [WT-52. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the low tire pressure warning control unit. Refer to [WT-66. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the low tire pressure warning control unit branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M29.
2. Check the continuity between the low tire pressure warning control unit harness connector and the harness connector.

Low tire pressure warning control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M43	2	M29	396	Existed
	1		395	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the low tire pressure warning control unit harness connector M43 and the harness connector M29.

HVAC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043939

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - A/C auto amp.
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/C auto amp.
2. Check the resistance between the A/C auto amp. harness connector terminals.

A/C auto amp. harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M66	12	11	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the A/C auto amp. Refer to [HAC-107. "A/C AUTO AMP. : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the A/C auto amp. Refer to [HAC-126. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the A/C auto amp. branch line.
NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the A/C auto amp. harness connector and the harness connector.

A/C auto amp. harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M28	325	Existed
	11		327	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the A/C auto amp. harness connector M66 and the harness connector M28.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043940

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - AV control unit
 - Harness connector M25 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
2. Check the resistance between the AV control unit harness connector terminals.
 - Models with navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M210	90	74	Approx. 54 – 66

- Models without navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M84	81	80	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to the following.

- Base audio without navigation system: [AV-94. "AV CONTROL UNIT : Diagnosis Procedure"](#)
- BOSE audio with navigation system: [AV-373. "AV CONTROL UNIT : Diagnosis Procedure"](#)

Is the inspection result normal?

YES (Present error)>>Replace the AV control unit. Refer to the following.

- Base audio without navigation system: [AV-126. "Removal and Installation"](#)
- BOSE audio with navigation system: [AV-407. "Removal and Installation"](#)

YES (Past error)>>Error was detected in the AV control unit branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M25.
2. Check the continuity between the AV control unit harness connector and the harness connector.
 - Models with navigation system

AV control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M210	90	M25	201	Existed
	74		221	Existed

- Models without navigation system

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

AV control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M84	81	M25	201	Existed
	80		221	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO (With navigation system)>>Repair the harness between the AV control unit harness connector M210 and the harness connector M25.

NO (Without navigation system)>>Repair the harness between the AV control unit harness connector M84 and the harness connector M25.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043941

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - BCM
 - Harness connector M22 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M120	39	40	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-88. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to [BCS-95. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the BCM branch line.
NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M22.
2. Check the continuity between the BCM harness connector and the harness connector.

BCM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M120	39	M22	101	Existed
	40		102	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the BCM harness connector M120 and the harness connector M22.

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043942

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - A/T assembly
 - Harness connector F103
 - Harness connector M116
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/T assembly.
2. Check the resistance between the A/T assembly harness connector terminals.

A/T assembly harness connector		Resistance (Ω)
Connector No.	Terminal No.	
F61	3 8	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 5.

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Remove the joint connector. Refer to [TM-192, "Removal and Installation"](#).
2. Check the continuity between the A/T assembly harness connector side and the TCM harness connector side of the joint connector.

A/T assembly harness connector side	TCM harness connector side	Continuity
Terminal No.	Terminal No.	
3	3	Existed
8	8	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the joint connector.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-159, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the control valve & TCM. Refer to [TM-192, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the TCM branch line.

NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the A/T assembly harness connector and the harness connector.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

A/T assembly harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
F61	3	M28	346	Existed
	8		347	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the A/T assembly harness connector F61 and the harness connector M28.

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043943

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Steering angle sensor
 - Harness connector M22 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M37	1	2	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to [BRC-52. "Wiring Diagram"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-168. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the steering angle sensor branch line.
NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M22.
2. Check the continuity between the steering angle sensor harness connector and the harness connector.

Steering angle sensor harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M37	1	M22	81	Existed
	2		82	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the steering angle sensor harness connector M37 and the harness connector M22.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

Diagnosis Procedure

INFOID:000000013043944

1. CHECK DTC

Check DTC of the CAN gateway with CONSULT.

Is U1010 or B2600 indicated?

- YES >> Perform a diagnosis of the indicated DTC.
- NO >> GO TO 2.

2. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - CAN gateway
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair the terminal and connector.

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of CAN gateway.
2. Check the resistance between the CAN gateway harness connector terminals.

CAN gateway harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M125	1	7	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 4.
- NO >> GO TO 5.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the CAN gateway. Refer to [LAN-167, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the CAN gateway. Refer to [LAN-168, "Removal and Installation"](#).
- YES (Past error)>>Error was detected in the CAN gateway branch line (CAN communication circuit 1 side). Refer to [LAN-79, "System Diagram"](#).
- NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the CAN gateway harness connector and the harness connector.

CAN gateway harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M125	1	M28	326	Existed
	7		328	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
- NO >> Repair the harness between the CAN gateway harness connector M125 and the harness connector M28.

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

Diagnosis Procedure

INFOID:000000013043945

1. CHECK DTC

Check DTC of the CAN gateway with CONSULT.

Is U1010 or B2600 indicated?

- YES >> Perform a diagnosis of the indicated DTC.
- NO >> GO TO 2.

2. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - CAN gateway
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair the terminal and connector.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> GO TO 5.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the CAN gateway. Refer to [LAN-167, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the CAN gateway. Refer to [LAN-168, "Removal and Installation"](#).
- YES (Past error)>>Error was detected in the CAN gateway branch line (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).
- NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the CAN gateway harness connector and the harness connector.

CAN gateway harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M125	4	M23	133	Existed
	10		135	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
- NO >> Repair the harness between the CAN gateway harness connector M125 and the harness connector M23.

4WD BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

4WD BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043946

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the AWD control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AWD control unit.
2. Check the resistance between the AWD control unit harness connector terminals.

AWD control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B17	8	16	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the AWD control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AWD control unit. Refer to [DLN-49, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the AWD control unit. Refer to [DLN-61, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the AWD control unit branch line.
NO >> Repair the power supply and the ground circuit.

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043947

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E41	25	15	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-143, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-165, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043949

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E6	40	39	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the IPDM E/R branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-33, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the IPDM E/R branch line.
NO >> Repair the power supply and the ground circuit.

AVM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

AVM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043950

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of around view monitor control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of around view monitor control unit.
2. Check the resistance between the around view monitor control unit harness connector terminals.

Around view monitor control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M231	27	28	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the around view monitor control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the around view monitor control unit. Refer to [AV-375, "AROUND VIEW MONITOR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the around view monitor control unit. Refer to [AV-429, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the around view monitor control unit branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

SONAR BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

SONAR BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043951

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Sonar control unit
 - Harness connector M117 and B201

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of sonar control unit.
2. Check the resistance between the sonar control unit harness connector terminals.

Sonar control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M47	19	20	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the power supply and the ground circuit.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the sonar control unit. Refer to [AV-376, "SONAR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the sonar control unit. Refer to the [AV-433, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the sonar control unit branch line.

NO >> Repair the power supply and the ground circuit.

ADP BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

ADP BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013043952

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Driver seat control unit
 - Harness connector B501
 - Harness connector B11
 - CAN gateway (With ICC system)

Is the inspection result normal?

YES (With ICC system)>>GO TO 2.

YES (Without ICC system)>>GO TO 3.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line is open) the root cause (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway. (With ICC system)
2. Disconnect the connector of driver seat control unit.
3. Check the resistance between the driver seat control unit harness connector terminals.

Driver seat control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B514	23	24	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the driver seat control unit branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the driver seat control unit. Refer to [ADP-74, "DRIVER SEAT CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the driver seat control unit. Refer to [ADP-147, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the driver seat control unit branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CAN COMMUNICATION CIRCUIT 1

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

CAN COMMUNICATION CIRCUIT 1

Diagnosis Procedure

INFOID:000000013043962

1. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit 1.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-79. "System Diagram"](#).

4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M182	6 14	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

3. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M182	6		Not existed
	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

4. CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.
 - VQ37VHR

ECM		Resistance (Ω)
Terminal No.		
114	113	Approx. 108 – 132

- VK56VD

ECM		Resistance (Ω)
Terminal No.		
146	151	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

CAN COMMUNICATION CIRCUIT 1

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

IPDM E/R		Resistance (Ω)
Terminal No.		
40	39	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit 1.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

CAN COMMUNICATION CIRCUIT 2

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

CAN COMMUNICATION CIRCUIT 2

Diagnosis Procedure

INFOID:000000013043963

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit 2.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-79. "System Diagram"](#).

4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M182	13	Not existed
	12	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M182	13		Not existed
	12		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

4.CHECK CAN GATEWAY TERMINATION CIRCUIT

1. Remove the CAN gateway.
2. Check the resistance between the CAN gateway terminals.

CAN gateway		Resistance (Ω)
Terminal No.		
4	10	Approx. 108 – 132
6	12	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the CAN gateway.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

Inspection result

Reproduced>>GO TO 6.

CAN COMMUNICATION CIRCUIT 2

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 9)]

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit 2.

NOTE:

CAN gateway has two termination circuits. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

Diagnosis Procedure

INFOID:000000013044426

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connectors M181 and M105
 - Combination meter
4. Check the continuity between the harness connector and the combination meter harness connector.

Harness connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M105	7	M53	14	Existed
	8		15	Existed

Is the inspection result normal?

- YES (Present error)>>Check CAN system type decision again.
YES (Past error)>>Error was detected in the main line between the data link connector and the air bag diagnosis sensor unit.
NO >> Replace the PCB harness.

MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT

Diagnosis Procedure

INFOID:000000013044427

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connectors M181 and M105
 - Combination meter
4. Check the continuity between the harness connector and the combination meter harness connector.

Harness connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M105	7	M53	14	Existed
	8		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the air bag diagnosis sensor unit and the combination meter.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN M&A AND TCU CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

MAIN LINE BETWEEN M&A AND TCU CIRCUIT

Diagnosis Procedure

INFOID:000000013044428

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Combination meter
 - TCU
4. Check the continuity between the combination meter harness connector and the TCU harness connector.

Combination meter harness connector		TCU harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M53	14	M216	9	Existed
	15		10	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the combination meter and the TCU.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN TCU AND TPMS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

MAIN LINE BETWEEN TCU AND TPMS CIRCUIT

Diagnosis Procedure

INFOID:000000013044430

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - TCU
 - Low tire pressure warning control unit
4. Check the continuity between the low tire pressure warning control unit harness connector and the A/C auto amp. harness connector.

TCU harness connector		Low tire pressure warning control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M216	9	M43	2	Existed
	10		1	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the TCU and the low tire pressure warning control unit.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT

Diagnosis Procedure

INFOID:000000013044431

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Low tire pressure warning control unit
 - A/C auto amp.
4. Check the continuity between the low tire pressure warning control unit harness connector and the A/C auto amp. harness connector.

Low tire pressure warning control unit harness connector		A/C auto amp. harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M43	2	M66	12	Existed
	1		11	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the low tire pressure warning control unit and the A/C auto amp.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN HVAC AND AV CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

MAIN LINE BETWEEN HVAC AND AV CIRCUIT

Diagnosis Procedure

INFOID:000000013044432

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - A/C auto amp.
 - AV control unit
4. Check the continuity between the A/C auto amp. harness connector and the AV control unit harness connector.
 - Models with navigation system

A/C auto amp. harness connector		AV control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M210	90	Existed
	11		74	Existed

- Models without navigation system

A/C auto amp. harness connector		AV control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M84	81	Existed
	11		80	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the A/C amp. and the AV control unit.

NO >> Replace the PCB harness.

LAN

MAIN LINE BETWEEN AV AND BCM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

MAIN LINE BETWEEN AV AND BCM CIRCUIT

Diagnosis Procedure

INFOID:000000013044433

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - AV control unit
 - BCM
4. Check the continuity between the AV control unit harness connector and the BCM harness connector.
 - Models with navigation system

AV control unit harness connector		BCM harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M210	90	M120	39	Existed
	74		40	Existed

- Models without navigation system

AV control unit harness connector		BCM harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M84	81	M120	39	Existed
	80		40	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the AV control unit and the BCM.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN BCM AND TCM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

MAIN LINE BETWEEN BCM AND TCM CIRCUIT

Diagnosis Procedure

INFOID:000000013044434

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - BCM
 - Harness connector F103 and M116
4. Check the continuity between the BCM harness connector and the A/T assembly harness connector.

BCM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M120	39	M116	11	Existed
	40		12	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the BCM and the A/T assembly.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN TCM AND STRG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

MAIN LINE BETWEEN TCM AND STRG CIRCUIT

Diagnosis Procedure

INFOID:000000013044435

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connector F103 and M116
 - Steering angle sensor
4. Check the continuity between the harness connector and the steering angle sensor harness connector.

Harness connector		Steering angle sensor harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M116	11	M37	1	Existed
	12		2	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the A/T assembly and the steering angle sensor.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN STRG AND CGW CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

MAIN LINE BETWEEN STRG AND CGW CIRCUIT

Diagnosis Procedure

INFOID:000000013044437

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Steering angle sensor
 - CAN gateway
4. Check the continuity between the steering angle sensor harness connector and the CAN gateway harness connector.

Steering angle sensor harness connector		CAN gateway harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M37	1	M125	1	Existed
	2		7	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the steering angle sensor and the CAN gateway.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN CGW AND 4WD CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

MAIN LINE BETWEEN CGW AND 4WD CIRCUIT

Diagnosis Procedure

INFOID:000000013044438

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M28 and PCB harness side connector
 - Harness connector M20 and PCB harness side connector
 - Harness connector M7
 - Harness connector B1

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the steering angle sensor and the PCB harness connector.

CAN gateway harness connector		PCB harness connector		Continuity
Connector No.	Terminal No.	Terminal No.		
M125	1	326		Existed
	7	328		Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the PCB harness.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M20.
2. Check the continuity between the PCB harness connectors.

PCB harness connector			Continuity
Terminal No.			
326		35	Existed
328		36	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the PCB harness.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M7 and B1.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M20	35	M7	72	Existed
	36		73	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the main line between the harness connectors M20 and M7.

5.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

MAIN LINE BETWEEN CGW AND 4WD CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

1. Disconnect the harness connector of AWD control unit.
2. Check the continuity between the harness connector and the AWD control unit harness connector.

Harness connector		AWD control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B1	72	B17	8	Existed
	73		16	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the CAN gateway and the AWD control unit.

NO >> Replace the body harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN 4WD AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

MAIN LINE BETWEEN 4WD AND ABS CIRCUIT

Diagnosis Procedure

INFOID:000000013044441

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B1
 - Harness connector M7
 - Harness connector M6
 - Harness connector E106

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors B1 and M7.
2. Check the continuity between the harness connector terminals.

Connector No.	Terminal No.		Continuity
B1	72	74	Existed
	73	75	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the body harness.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M6 and E106.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M7	74	M6	22	Existed
	75		23	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M7 and M6.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the continuity between the harness connector and the ABS actuator and electric unit (control unit) harness connector.

Harness connector		ABS actuator and electric unit (control unit) harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E106	22	E41	25	Existed
	23		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the AWD control unit and the ABS actuator and electric unit (control unit).

MAIN LINE BETWEEN 4WD AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

NO >> Repair the main line between the harness connector E106 and the ABS actuator and electric unit (control unit).

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

MAIN LINE BETWEEN DLC AND ICC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

MAIN LINE BETWEEN DLC AND ICC CIRCUIT

Diagnosis Procedure

INFOID:000000013044444

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M20 and PCB harness side connector
 - Harness connector M117
 - Harness connector B201
 - Harness connector B222
 - Harness connector B5

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M20.
2. Check the continuity between the data link connector and the PCB harness connector.

Data link connector		PCB harness connector		Continuity
Connector No.	Terminal No.	Terminal No.		
M182	13	24		Existed
	12	27		Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the PCB harness.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M117 and B5.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M20	24	M117	72	Existed
	27		73	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M20 and M117.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors B222 and B5.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B201	72	B222	13	Existed
	73		14	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the main line between the harness connectors B201 and B222.

MAIN LINE BETWEEN DLC AND ICC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector of ADAS control unit.
2. Check the continuity between the harness connectors.

Harness connector		ADAS control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B5	13	B10	1	Existed
	14		2	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the ADAS control unit.

NO >> Replace the body harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN RDR-L AND RDR-R CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

MAIN LINE BETWEEN RDR-L AND RDR-R CIRCUIT

Diagnosis Procedure

INFOID:000000013044445

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B33
 - Harness connector B245

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar LH
 - Harness connectors B33 and B245
2. Check the continuity between the side radar LH harness connector and the harness connector.

Side radar LH harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B52	4	B33	13	Existed
	3		14	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the side radar LH and the harness connector B33.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of side radar RH.
2. Check the continuity between the harness connector and the side radar RH harness connector.

Harness connector		Side radar RH harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B245	13	B252	4	Existed
	14		3	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the side radar LH and the side radar RH.

NO >> Repair the main line between the harness connector B245 and the side radar RH.

MAIN LINE BETWEEN RDR-R AND APA CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

MAIN LINE BETWEEN RDR-R AND APA CIRCUIT

Diagnosis Procedure

INFOID:000000013044446

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B201
 - Harness connector M117
 - Harness connector M20 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar RH
 - Harness connectors B201 and M117
2. Check the continuity between the side radar RH harness connector and the harness connector.

Side radar RH harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B252	4	B201	66	Existed
	3		67	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the side radar RH and the harness connector B201.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M20.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M117	66	M20	38	Existed
	67		40	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M117 and M20.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M150 and M151.
2. Check the continuity between the PCB harness connector and the harness connector.

PCB harness connector		Harness connector		Continuity
Terminal No.	Connector No.	Terminal No.	Terminal No.	
38	M150	11	Existed	
40		10	Existed	

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the side radar RH and the accelerator pedal actuator.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN RDR-R AND APA CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

NO >> Replace the PCB harness.

MAIN LINE BETWEEN APA AND LANE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

MAIN LINE BETWEEN APA AND LANE CIRCUIT

Diagnosis Procedure

INFOID:000000013044447

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ADAS control unit
 - Harness connectors M151 and M150
 - Harness connectors M110 and R7
4. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M150	11	M110	13	Existed
	10		2	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the accelerator pedal actuator and the lane camera unit.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044448

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ECM
 - Harness connector M30 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.
 - VQ37VHR

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M107	114	113	Approx. 108 – 132

- VK56VD

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M160	146	151	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to the following.

- VQ37VHR FOR USA AND CANADA: [EC-202, "Diagnosis Procedure"](#)
- VQ37VHR FOR MEXICO: [EC-716, "Diagnosis Procedure"](#)
- VK56VD FOR USA AND CANADA: [EC-1171, "Diagnosis Procedure"](#)
- VK56VD FOR MEXICO: [EC-1746, "Diagnosis Procedure"](#)

Is the inspection result normal?

YES (Present error)>>Replace the ECM. Refer to the following.

- VQ37VHR FOR USA AND CANADA: [EC-559, "Removal and Installation"](#)
- VQ37VHR FOR MEXICO: [EC-977, "Removal and Installation"](#)
- VK56VD FOR USA AND CANADA: [EC-1568, "Removal and Installation"](#)
- VK56VD FOR MEXICO: [EC-2028, "Removal and Installation"](#)

YES (Past error)>>Error was detected in the ECM branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M30.
2. Check the continuity between the ECM harness connector and the harness connector.
 - VQ37VHR

ECM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

M107	114	M30	439	Existed
	113		438	Existed

A

- VK56VD

B

ECM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M160	146	M30	439	Existed
	151		438	Existed

C

Is the inspection result normal?

D

YES >> Replace the PCB harness.

NO (VQ37VHR)>>Repair the harness between the ECM harness connector M107 and the harness connector M30.

NO (VK56VD)>>Repair the harness between the ECM harness connector M160 and the harness connector M30.

E

F

G

H

I

J

K

L

LAN

N

O

P

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

Diagnosis Procedure

INFOID:000000013044450

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Data link connector
 - Harness connector M181
 - Harness connector M105
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M182	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit (CAN communication circuit 1 side). Refer to [LAN-79, "System Diagram"](#).

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M182	6	M23	151	Existed
	14		150	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the data link connector M182 and the harness connector M23.

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

Diagnosis Procedure

INFOID:000000013044451

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Data link connector
 - Harness connector M181
 - Harness connector M105
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector		Resistance (Ω)
Connector No.	Terminal No.	
M182	13	Approx. 54 – 66
	12	

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit (CAN communication circuit 2 side). Refer to [LAN-79. "System Diagram"](#).

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M182	13	M23	134	Existed
	12		136	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the data link connector M182 and the harness connector M23.

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044452

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Air bag diagnosis sensor unit
 - Harness connector M26 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace the main harness and/or the PCB harness.

2. CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-33. "Work Flow"](#).

Is the inspection result normal?

- YES >> Replace the main harness and/or the PCB harness.
NO >> Replace parts whose air bag system has a malfunction.

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044453

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Combination meter
 - Harness connector M24 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M53	14	15	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter Refer to [MWI-75. "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the combination meter. Refer to [MWI-95. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the combination meter branch line.

NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M24.
2. Check the continuity between the combination meter harness connector and the harness connector.

Combination meter harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M53	14	M24	176	Existed
	15		177	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the combination meter harness connector M53 and the harness connector M24.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

TCU BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

TCU BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044454

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - TCU
 - Harness connector M26 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of TCU.
2. Check the resistance between the TCU harness connector terminals.

TCU harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M216	9	10	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCU. Refer to [AV-511, "TCU : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the TCU. Refer to [AV-520, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the TCU branch line.
NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M26.
2. Check the continuity between the TCU harness connector and the harness connector.

TCU harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M216	9	M26	242	Existed
	10		262	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the TCU harness connector M216 and the harness connector M26.

TPMS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

TPMS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044455

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Low tire pressure warning control unit
 - Harness connector M29 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of low tire pressure warning control unit.
2. Check the resistance between the low tire pressure warning control unit harness connector terminals.

Low tire pressure warning control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M43	2	1	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the low tire pressure warning control unit. Refer to [WT-52. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the low tire pressure warning control unit. Refer to [WT-66. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the low tire pressure warning control unit branch line.
NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M29.
2. Check the continuity between the low tire pressure warning control unit harness connector and the harness connector.

Low tire pressure warning control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M43	2	M29	396	Existed
	1		395	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the low tire pressure warning control unit harness connector M43 and the harness connector M29.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

HVAC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044456

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - A/C auto amp.
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/C auto amp.
2. Check the resistance between the A/C auto amp. harness connector terminals.

A/C auto amp. harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M66	12	11	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the A/C auto amp. Refer to [HAC-107, "A/C AUTO AMP. : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the A/C auto amp. Refer to [HAC-126, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the A/C auto amp. branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the A/C auto amp. harness connector and the harness connector.

A/C auto amp. harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M28	325	Existed
	11		327	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the A/C auto amp. harness connector M66 and the harness connector M28.

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044457

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - AV control unit
 - Harness connector M25 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
2. Check the resistance between the AV control unit harness connector terminals.
 - Models with navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M210	90	74	Approx. 54 – 66

- Models without navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M84	81	80	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to the following.

- Base audio without navigation system: [AV-94. "AV CONTROL UNIT : Diagnosis Procedure"](#)
- BOSE audio with navigation system: [AV-373. "AV CONTROL UNIT : Diagnosis Procedure"](#)

Is the inspection result normal?

YES (Present error)>>Replace the AV control unit. Refer to the following.

- Base audio without navigation system: [AV-126. "Removal and Installation"](#)
- BOSE audio with navigation system: [AV-407. "Removal and Installation"](#)

YES (Past error)>>Error was detected in the AV control unit branch line.

NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M25.
2. Check the continuity between the AV control unit harness connector and the harness connector.
 - Models with navigation system

AV control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M210	90	M25	201	Existed
	74		221	Existed

- Models without navigation system

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

AV control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M84	81	M25	201	Existed
	80		221	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO (With navigation system)>>Repair the harness between the AV control unit harness connector M210 and the harness connector M25.

NO (Without navigation system)>>Repair the harness between the AV control unit harness connector M84 and the harness connector M25.

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044458

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - BCM
 - Harness connector M22 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M120	39	40	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-88. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to [BCS-95. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the BCM branch line.
NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M22.
2. Check the continuity between the BCM harness connector and the harness connector.

BCM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M120	39	M22	101	Existed
	40		102	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the BCM harness connector M120 and the harness connector M22.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044459

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - A/T assembly
 - Harness connector F103
 - Harness connector M116
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/T assembly.
2. Check the resistance between the A/T assembly harness connector terminals.

A/T assembly harness connector		Resistance (Ω)
Connector No.	Terminal No.	
F61	3 8	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 5.

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Remove the joint connector. Refer to [TM-192, "Removal and Installation"](#).
2. Check the continuity between the A/T assembly harness connector side and the TCM harness connector side of the joint connector.

A/T assembly harness connector side	TCM harness connector side	Continuity
Terminal No.	Terminal No.	
3	3	Existed
8	8	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the joint connector.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-159, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the control valve & TCM. Refer to [TM-192, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the TCM branch line.

NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the A/T assembly harness connector and the harness connector.

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

A/T assembly harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
F61	3	M28	346	Existed
	8		347	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the A/T assembly harness connector F61 and the harness connector M28.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044460

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Steering angle sensor
 - Harness connector M22 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M37	1	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to [BRC-52. "Wiring Diagram"](#).

Is the inspection result normal?

YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-168. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the steering angle sensor branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M22.
2. Check the continuity between the steering angle sensor harness connector and the harness connector.

Steering angle sensor harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M37	1	M22	81	Existed
	2		82	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the steering angle sensor harness connector M37 and the harness connector M22.

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

Diagnosis Procedure

INFOID:000000013044461

1. CHECK DTC

Check DTC of the CAN gateway with CONSULT.

Is U1010 or B2600 indicated?

- YES >> Perform a diagnosis of the indicated DTC.
- NO >> GO TO 2.

2. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - CAN gateway
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair the terminal and connector.

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of CAN gateway.
2. Check the resistance between the CAN gateway harness connector terminals.

CAN gateway harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M125	1	7	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 4.
- NO >> GO TO 5.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the CAN gateway. Refer to [LAN-167, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the CAN gateway. Refer to [LAN-168, "Removal and Installation"](#).
- YES (Past error)>>Error was detected in the CAN gateway branch line (CAN communication circuit 1 side). Refer to [LAN-79, "System Diagram"](#).
- NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the CAN gateway harness connector and the harness connector.

CAN gateway harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M125	1	M28	326	Existed
	7		328	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
- NO >> Repair the harness between the CAN gateway harness connector M125 and the harness connector M28.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

Diagnosis Procedure

INFOID:000000013044462

1. CHECK DTC

Check DTC of the CAN gateway with CONSULT.

Is U1010 or B2600 indicated?

- YES >> Perform a diagnosis of the indicated DTC.
- NO >> GO TO 2.

2. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - CAN gateway
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair the terminal and connector.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> GO TO 5.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the CAN gateway. Refer to [LAN-167, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the CAN gateway. Refer to [LAN-168, "Removal and Installation"](#).
- YES (Past error)>>Error was detected in the CAN gateway branch line (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).
- NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the CAN gateway harness connector and the harness connector.

CAN gateway harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M125	4	M23	133	Existed
	10		135	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
- NO >> Repair the harness between the CAN gateway harness connector M125 and the harness connector M23.

4WD BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

4WD BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044463

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the AWD control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AWD control unit.
2. Check the resistance between the AWD control unit harness connector terminals.

AWD control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B17	8	16	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the AWD control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AWD control unit. Refer to [DLN-49, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the AWD control unit. Refer to [DLN-61, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the AWD control unit branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044464

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E41	25	15	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-143. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-165. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.
NO >> Repair the power supply and the ground circuit.

AFS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

AFS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044465

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the AFS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AFS control unit.
2. Check the resistance between the AFS control unit harness connector terminals.

AFS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E70	1	13	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the AFS control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AFS control unit. Refer to [EXL-95, "AFS CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the AFS control unit. Refer to [EXL-148, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the AFS control unit branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044466

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E6	40	39	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the IPDM E/R branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-33, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the IPDM E/R branch line.
NO >> Repair the power supply and the ground circuit.

AVM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

AVM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044467

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of around view monitor control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of around view monitor control unit.
2. Check the resistance between the around view monitor control unit harness connector terminals.

Around view monitor control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M231	27	28	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the around view monitor control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the around view monitor control unit. Refer to [AV-375, "AROUND VIEW MONITOR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the around view monitor control unit. Refer to [AV-429, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the around view monitor control unit branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

SONAR BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

SONAR BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044468

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Sonar control unit
 - Harness connector M117 and B201

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of sonar control unit.
2. Check the resistance between the sonar control unit harness connector terminals.

Sonar control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M47	19	20	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the power supply and the ground circuit.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the sonar control unit. Refer to [AV-376, "SONAR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the sonar control unit. Refer to the [AV-433, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the sonar control unit branch line.

NO >> Repair the power supply and the ground circuit.

ADP BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

ADP BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044469

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Driver seat control unit
 - Harness connector B501
 - Harness connector B11
 - CAN gateway (With ICC system)

Is the inspection result normal?

YES (With ICC system)>>GO TO 2.

YES (Without ICC system)>>GO TO 3.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line is open) the root cause (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway. (With ICC system)
2. Disconnect the connector of driver seat control unit.
3. Check the resistance between the driver seat control unit harness connector terminals.

Driver seat control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B514	23	24	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the driver seat control unit branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the driver seat control unit. Refer to [ADP-74, "DRIVER SEAT CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the driver seat control unit. Refer to [ADP-147, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the driver seat control unit branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

ICC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044470

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ADAS control unit
 - CAN gateway

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> Check the harness and repair or replace (if shield line is open) the root cause (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway.
2. Disconnect the connector of ADAS control unit.
3. Check the resistance between the ADAS control unit harness connector terminals.

ADAS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B10	1	2	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 4.
 NO >> Replace the body harness.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ADAS control unit. Refer to [DAS-162, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ADAS control unit. Refer to [DAS-163, "Removal and Installation"](#).
 YES (Past error)>>Error was detected in the ADAS control unit branch line.
 NO >> Repair the power supply and the ground circuit.

PSB BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044471

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Pre-crash seat belt control unit (driver side)
 - CAN gateway

Is the inspection result normal?

- YES >> GO TO 2.
- NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector		Continuity	
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Check the harness and repair or replace (if shield line is open) the root cause (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway.
2. Disconnect the connector of pre-crash seat belt control unit (driver side).
3. Check the resistance between the pre-crash seat belt control unit (driver side) harness connector terminals.

Pre-crash seat belt control unit (driver side) harness connector		Resistance (Ω)	
Connector No.	Terminal No.		
B65	14	4	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 4.
- NO >> Repair the pre-crash seat belt control unit (driver side) branch line.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the pre-crash seat belt control unit (driver side). Refer to [SBC-53, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the seat belt pre-tensioner retractor (driver side). Refer to [SB-8, "SEAT BELT RETRACTOR : Removal and Installation"](#).
- YES (Past error)>>Error was detected in the pre-crash seat belt control unit (driver side) branch line.
- NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

RDR-L BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

RDR-L BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044472

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the side radar LH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of side radar LH.
2. Check the resistance between the side radar LH harness connector terminals.

Side radar LH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B52	4	3	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the side radar LH branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar LH. Refer to [DAS-346, "SIDE RADAR LH : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the side radar LH. Refer to [DAS-393, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the side radar LH branch line.
NO >> Repair the power supply and the ground circuit.

BSW/BUZZER BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

BSW/BUZZER BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044473

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the driver assistance buzzer control module for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of driver assistance buzzer control module.
2. Check the resistance between the driver assistance buzzer control module harness connector terminals.

Driver assistance buzzer control module harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B210	3	11	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the driver assistance buzzer control module branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the driver assistance buzzer control module. Refer to [DAS-347, "DRIVER ASSISTANCE BUZZER CONTROL MODULE : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the driver assistance buzzer control module. Refer to [DAS-396, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the driver assistance buzzer control module branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

RDR-R BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

RDR-R BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044474

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the side radar RH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK RIGHT/LEFT SWITCHING SIGNAL CIRCUIT

Check the right/left switching signal circuit of the side radar RH. Refer to [DAS-349. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair the root cause.

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of side radar RH.
2. Check the resistance between the side radar RH harness connector terminals.

Side radar RH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B252	4	3	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 4.
NO >> Repair the side radar RH branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar RH. Refer to [DAS-347. "SIDE RADAR RH : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the side radar RH. Refer to [DAS-393. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the side radar RH branch line.
NO >> Repair the power supply and the ground circuit.

APA BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

APA BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044475

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Accelerator pedal position sensor
 - Harness connector M151
 - Harness connector M150
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of accelerator pedal position sensor.
2. Check the resistance between the accelerator pedal position sensor harness connector terminals.

Accelerator pedal position sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M154	3	9	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the accelerator pedal position sensor. Refer to [DAS-345, "ACCELERATOR PEDAL ACTUATOR : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the accelerator pedal assembly. Refer to [ACC-6, "MODELS WITH DISTANCE CONTROL ASSIST SYSTEM : Removal and Installation"](#).

YES (Past error)>>Error was detected in the accelerator pedal position sensor branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the accelerator pedal position sensor harness connector and the harness connector.

Accelerator pedal position sensor harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M154	3	M23	138	Existed
	9		137	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the accelerator pedal position sensor harness connector M152 and the harness connector M23.

LANE BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

LANE BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044476

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Lane camera unit
 - Harness connector R7
 - Harness connector M110
 - Harness connector M24 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of lane camera unit.
2. Check the resistance between the lane camera unit harness connector terminals.

Lane camera unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
R8	4	8	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the lane camera unit. Refer to [DAS-345, "LANE CAMERA UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the lane camera unit. Refer to [DAS-392, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the lane camera unit branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M24.
2. Check the continuity between the lane camera unit harness connector and the harness connector.

Lane camera unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
R8	4	M24	179	Existed
	8		178	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the lane camera unit harness connector R8 and the harness connector M24.

LASER BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

LASER BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044477

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ICC sensor
 - Harness connector E106
 - Harness connector M6
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ICC sensor.
2. Check the resistance between the ICC sensor harness connector terminals.

ICC sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E33	3	6	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ICC sensor. Refer to [CCS-116, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the ICC sensor. Refer to [CCS-133, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the ICC sensor branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the ICC sensor harness connector and the harness connector.

ICC sensor harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E33	3	M28	343	Existed
	6		345	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the ICC sensor harness connector E67 and the harness connector M28.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CAN COMMUNICATION CIRCUIT 1

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

CAN COMMUNICATION CIRCUIT 1

Diagnosis Procedure

INFOID:000000013044479

1. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit 1.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-79. "System Diagram"](#).

4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M182	6 14	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

3. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M182	6		Not existed
	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

4. CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.
 - VQ37VHR

ECM		Resistance (Ω)
Terminal No.		
114	113	Approx. 108 – 132

- VK56VD

ECM		Resistance (Ω)
Terminal No.		
146	151	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

CAN COMMUNICATION CIRCUIT 1

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

IPDM E/R		Resistance (Ω)
Terminal No.		
40	39	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit 1.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

CAN COMMUNICATION CIRCUIT 2

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

CAN COMMUNICATION CIRCUIT 2

Diagnosis Procedure

INFOID:000000013044480

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit 2.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-79. "System Diagram"](#).

4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M182	13	Not existed
	12	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M182	13		Not existed
	12		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

4.CHECK CAN GATEWAY TERMINATION CIRCUIT

1. Remove the CAN gateway.
2. Check the resistance between the CAN gateway terminals.

CAN gateway		Resistance (Ω)
Terminal No.		
4	10	Approx. 108 – 132
6	12	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the CAN gateway.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

Inspection result

Reproduced>>GO TO 6.

CAN COMMUNICATION CIRCUIT 2

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit 2.

NOTE:

CAN gateway has two termination circuits. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

ITS COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

ITS COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000013044481

1. CHECK CAN DIAGNOSIS

Check the CAN diagnosis results from CONSULT to see that the CAN communication circuit 1 and CAN communication circuit 2 have no malfunction.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-79. "System Diagram"](#).

Are the CAN communication 1 and CAN communication 2 circuits normal?

YES >> GO TO 2.

NO >> Check and repair CAN communication circuit 1 and/or CAN communication circuit 2.

2. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ADAS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the terminal and connector.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - ADAS control unit
 - ICC sensor
2. Check the continuity between the ADAS control unit harness connector and the ICC sensor harness connector.

ADAS control unit harness connector		ICC sensor harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B10	6	E33	3	Existed
	7		6	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the body harness.

4. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar LH
 - Side radar RH
 - Accelerator pedal actuator
 - Lane camera unit
2. Check the continuity between the ADAS control unit harness connector terminals.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
B10	6	7	Not existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

5. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the ADAS control unit harness connector and the ground.

ITS COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 10)]

ADAS control unit harness connector		Ground	Continuity
Connector No.	Terminal No.		
B10	6		
	7		Not existed

A
B

Is the inspection result normal?

YES >> GO TO 6.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

C

6.CHECK TERMINATION CIRCUIT

1. Remove the ADAS control unit and the ICC sensor.
2. Check the resistance between the ADAS control unit terminals.

D

ADAS control unit		Resistance (Ω)
Terminal No.		
6	7	Approx. 108 – 132

E
F

3. Check the resistance between the ICC sensor terminals.

ICC sensor		Resistance (Ω)
Terminal No.		
3	6	Approx. 108 – 132

G
H

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace the ADAS control unit and/or the ICC sensor.

I

7.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

J

Inspection result

Reproduced>>GO TO 8.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

K

8.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

L

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of ITS communication system.

NOTE:

ADAS control unit and ICC sensor have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

N

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

O

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

P

LAN

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

Diagnosis Procedure

INFOID:000000013044485

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connectors M181 and M105
 - Combination meter
4. Check the continuity between the harness connector and the combination meter harness connector.

Harness connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M105	7	M53	14	Existed
	8		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the air bag diagnosis sensor unit.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT

Diagnosis Procedure

INFOID:000000013044486

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connectors M181 and M105
 - Combination meter
4. Check the continuity between the harness connector and the combination meter harness connector.

Harness connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M105	7	M53	14	Existed
	8		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the air bag diagnosis sensor unit and the combination meter.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN M&A AND TCU CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

MAIN LINE BETWEEN M&A AND TCU CIRCUIT

Diagnosis Procedure

INFOID:000000013044487

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Combination meter
 - TCU
4. Check the continuity between the combination meter harness connector and the TCU harness connector.

Combination meter harness connector		TCU harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M53	14	M216	9	Existed
	15		10	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the combination meter and the TCU.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN TCU AND TPMS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

MAIN LINE BETWEEN TCU AND TPMS CIRCUIT

Diagnosis Procedure

INFOID:000000013044489

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - TCU
 - Low tire pressure warning control unit
4. Check the continuity between the low tire pressure warning control unit harness connector and the A/C auto amp. harness connector.

TCU harness connector		Low tire pressure warning control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M216	9	M43	2	Existed
	10		1	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the TCU and the low tire pressure warning control unit.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT

Diagnosis Procedure

INFOID:000000013044490

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Low tire pressure warning control unit
 - A/C auto amp.
4. Check the continuity between the low tire pressure warning control unit harness connector and the A/C auto amp. harness connector.

Low tire pressure warning control unit harness connector		A/C auto amp. harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M43	2	M66	12	Existed
	1		11	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the low tire pressure warning control unit and the A/C auto amp.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN HVAC AND AV CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

MAIN LINE BETWEEN HVAC AND AV CIRCUIT

Diagnosis Procedure

INFOID:000000013044491

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - A/C auto amp.
 - AV control unit
4. Check the continuity between the A/C auto amp. harness connector and the AV control unit harness connector.
 - Models with navigation system

A/C auto amp. harness connector		AV control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M210	90	Existed
	11		74	Existed

- Models without navigation system

A/C auto amp. harness connector		AV control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M84	81	Existed
	11		80	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the A/C amp. and the AV control unit.

NO >> Replace the PCB harness.

LAN

MAIN LINE BETWEEN AV AND BCM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

MAIN LINE BETWEEN AV AND BCM CIRCUIT

Diagnosis Procedure

INFOID:000000013044492

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - AV control unit
 - BCM
4. Check the continuity between the AV control unit harness connector and the BCM harness connector.
 - Models with navigation system

AV control unit harness connector		BCM harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M210	90	M120	39	Existed
	74		40	Existed

- Models without navigation system

AV control unit harness connector		BCM harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M84	81	M120	39	Existed
	80		40	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the AV control unit and the BCM.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN BCM AND TCM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

MAIN LINE BETWEEN BCM AND TCM CIRCUIT

Diagnosis Procedure

INFOID:000000013044493

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - BCM
 - Harness connector F103 and M116
4. Check the continuity between the BCM harness connector and the A/T assembly harness connector.

BCM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M120	39	M116	11	Existed
	40		12	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the BCM and the A/T assembly.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN TCM AND STRG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

MAIN LINE BETWEEN TCM AND STRG CIRCUIT

Diagnosis Procedure

INFOID:000000013044494

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connector F103 and M116
 - Steering angle sensor
4. Check the continuity between the harness connector and the steering angle sensor harness connector.

Harness connector		Steering angle sensor harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M116	11	M37	1	Existed
	12		2	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the A/T assembly and the steering angle sensor.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN STRG AND CGW CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

MAIN LINE BETWEEN STRG AND CGW CIRCUIT

Diagnosis Procedure

INFOID:000000013044496

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Steering angle sensor
 - CAN gateway
4. Check the continuity between the steering angle sensor harness connector and the CAN gateway harness connector.

Steering angle sensor harness connector		CAN gateway harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M37	1	M125	1	Existed
	2		7	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the steering angle sensor and the CAN gateway.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN CGW AND 4WD CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

MAIN LINE BETWEEN CGW AND 4WD CIRCUIT

Diagnosis Procedure

INFOID:000000013044497

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M28 and PCB harness side connector
 - Harness connector M20 and PCB harness side connector
 - Harness connector M7
 - Harness connector B1

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the steering angle sensor and the PCB harness connector.

CAN gateway harness connector		PCB harness connector		Continuity
Connector No.	Terminal No.	Terminal No.		
M125	1	326		Existed
	7	328		Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the PCB harness.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M20.
2. Check the continuity between the PCB harness connectors.

PCB harness connector			Continuity
Terminal No.			
326	35	Existed	
328	36	Existed	

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the PCB harness.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M7 and B1.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M20	35	M7	72	Existed
	36		73	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the main line between the harness connectors M20 and M7.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

MAIN LINE BETWEEN CGW AND 4WD CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

1. Disconnect the harness connector of AWD control unit.
2. Check the continuity between the harness connector and the AWD control unit harness connector.

Harness connector		AWD control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B1	72	B17	8	Existed
	73		16	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the CAN gateway and the AWD control unit.

NO >> Replace the body harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN 4WD AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

MAIN LINE BETWEEN 4WD AND ABS CIRCUIT

Diagnosis Procedure

INFOID:000000013044500

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B1
 - Harness connector M7
 - Harness connector M6
 - Harness connector E106

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors B1 and M7.
2. Check the continuity between the harness connector terminals.

Connector No.	Terminal No.		Continuity
B1	72	74	Existed
	73	75	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the body harness.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M6 and E106.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M7	74	M6	22	Existed
	75		23	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M7 and M6.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the continuity between the harness connector and the ABS actuator and electric unit (control unit) harness connector.

Harness connector		ABS actuator and electric unit (control unit) harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E106	22	E41	25	Existed
	23		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the AWD control unit and the ABS actuator and electric unit (control unit).

MAIN LINE BETWEEN 4WD AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

NO >> Repair the main line between the harness connector E106 and the ABS actuator and electric unit (control unit).

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

MAIN LINE BETWEEN DLC AND AVM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

MAIN LINE BETWEEN DLC AND AVM CIRCUIT

Diagnosis Procedure

INFOID:000000013044501

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M20 and PCB harness side connector
 - Harness connector M117
 - Harness connector B201

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the data link connector and the PCB harness connector.

Data link connector		PCB harness connector		Continuity
Connector No.	Terminal No.	Terminal No.		
M182	13	24		Existed
	12	27		Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the PCB harness.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M117 and B201.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M20	24	M117	72	Existed
	27		73	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M20 and M117.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector of around view monitor control unit.
2. Check the continuity between the harness connector terminals.

Harness connector		Around view monitor control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B201	72	B231	27	Existed
	73		28	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the around view monitor control unit.

NO >> Repair the main line between the harness connector B201 and the around view monitor control unit.

MAIN LINE BETWEEN AVM AND ADP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

MAIN LINE BETWEEN AVM AND ADP CIRCUIT

Diagnosis Procedure

INFOID:000000013044502

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - Around view monitor control unit
 - Harness connector B222
 - Harness connector B5
4. Check the continuity between the AV control unit harness connector and the combination meter harness connector.

Around view monitor control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B231	27	B222	13	Existed
	28		14	Existed

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the main line between the around view monitor control unit and the harness connector B222.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors B11 and B501.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B5	13	B11	23	Existed
	14		24	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the harness connectors B5 and B11.

NO >> Replace the body harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044507

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ECM
 - Harness connector M30 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.
 - VQ37VHR

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M107	114	113	Approx. 108 – 132

- VK56VD

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M160	146	151	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to the following.

- VQ37VHR FOR USA AND CANADA: [EC-202, "Diagnosis Procedure"](#)
- VQ37VHR FOR MEXICO: [EC-716, "Diagnosis Procedure"](#)
- VK56VD FOR USA AND CANADA: [EC-1171, "Diagnosis Procedure"](#)
- VK56VD FOR MEXICO: [EC-1746, "Diagnosis Procedure"](#)

Is the inspection result normal?

YES (Present error)>>Replace the ECM. Refer to the following.

- VQ37VHR FOR USA AND CANADA: [EC-559, "Removal and Installation"](#)
- VQ37VHR FOR MEXICO: [EC-977, "Removal and Installation"](#)
- VK56VD FOR USA AND CANADA: [EC-1568, "Removal and Installation"](#)
- VK56VD FOR MEXICO: [EC-2028, "Removal and Installation"](#)

YES (Past error)>>Error was detected in the ECM branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M30.
2. Check the continuity between the ECM harness connector and the harness connector.
 - VQ37VHR

ECM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

M107	114	M30	439	Existed
	113		438	Existed

A

- VK56VD

B

ECM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M160	146	M30	439	Existed
	151		438	Existed

C

Is the inspection result normal?

D

YES >> Replace the PCB harness.

NO (VQ37VHR)>>Repair the harness between the ECM harness connector M107 and the harness connector M30.

NO (VK56VD)>>Repair the harness between the ECM harness connector M160 and the harness connector M30.

E

F

G

H

I

J

K

L

LAN

N

O

P

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

Diagnosis Procedure

INFOID:000000013044509

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Data link connector
 - Harness connector M181
 - Harness connector M105
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M182	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit (CAN communication circuit 1 side). Refer to [LAN-79, "System Diagram"](#).

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M182	6	M23	151	Existed
	14		150	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the data link connector M182 and the harness connector M23.

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

Diagnosis Procedure

INFOID:000000013044510

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Data link connector
 - Harness connector M181
 - Harness connector M105
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector		Resistance (Ω)
Connector No.	Terminal No.	
M182	13	Approx. 54 – 66
	12	

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M182	13	M23	134	Existed
	12		136	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the data link connector M182 and the harness connector M23.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044511

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Air bag diagnosis sensor unit
 - Harness connector M26 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace the main harness and/or the PCB harness.

2. CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-33. "Work Flow"](#).

Is the inspection result normal?

- YES >> Replace the main harness and/or the PCB harness.
NO >> Replace parts whose air bag system has a malfunction.

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044512

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Combination meter
 - Harness connector M24 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M53	14	15	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter Refer to [MWI-75. "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the combination meter. Refer to [MWI-95. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the combination meter branch line.
NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M24.
2. Check the continuity between the combination meter harness connector and the harness connector.

Combination meter harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M53	14	M24	176	Existed
	15		177	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the combination meter harness connector M53 and the harness connector M24.

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

TCU BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

TCU BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044513

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - TCU
 - Harness connector M26 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of TCU.
2. Check the resistance between the TCU harness connector terminals.

TCU harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M216	9	10	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCU. Refer to [AV-511, "TCU : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the TCU. Refer to [AV-520, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the TCU branch line.
NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M26.
2. Check the continuity between the TCU harness connector and the harness connector.

TCU harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M216	9	M26	242	Existed
	10		262	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the TCU harness connector M216 and the harness connector M26.

TPMS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

TPMS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044514

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Low tire pressure warning control unit
 - Harness connector M29 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of low tire pressure warning control unit.
2. Check the resistance between the low tire pressure warning control unit harness connector terminals.

Low tire pressure warning control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M43	2	1	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the low tire pressure warning control unit. Refer to [WT-52. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the low tire pressure warning control unit. Refer to [WT-66. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the low tire pressure warning control unit branch line.
NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M29.
2. Check the continuity between the low tire pressure warning control unit harness connector and the harness connector.

Low tire pressure warning control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M43	2	M29	396	Existed
	1		395	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the low tire pressure warning control unit harness connector M43 and the harness connector M29.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

HVAC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044515

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - A/C auto amp.
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/C auto amp.
2. Check the resistance between the A/C auto amp. harness connector terminals.

A/C auto amp. harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M66	12	11	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the A/C auto amp. Refer to [HAC-107, "A/C AUTO AMP. : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the A/C auto amp. Refer to [HAC-126, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the A/C auto amp. branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the A/C auto amp. harness connector and the harness connector.

A/C auto amp. harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M28	325	Existed
	11		327	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the A/C auto amp. harness connector M66 and the harness connector M28.

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044516

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - AV control unit
 - Harness connector M25 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
2. Check the resistance between the AV control unit harness connector terminals.
 - Models with navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M210	90	74	Approx. 54 – 66

- Models without navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M84	81	80	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to the following.

- Base audio without navigation system: [AV-94. "AV CONTROL UNIT : Diagnosis Procedure"](#)
- BOSE audio with navigation system: [AV-373. "AV CONTROL UNIT : Diagnosis Procedure"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the AV control unit. Refer to the following.
- Base audio without navigation system: [AV-126. "Removal and Installation"](#)
 - BOSE audio with navigation system: [AV-407. "Removal and Installation"](#)

YES (Past error)>>Error was detected in the AV control unit branch line.

- NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M25.
2. Check the continuity between the AV control unit harness connector and the harness connector.
 - Models with navigation system

AV control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M210	90	M25	201	Existed
	74		221	Existed

- Models without navigation system

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

AV control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M84	81	M25	201	Existed
	80		221	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO (With navigation system)>>Repair the harness between the AV control unit harness connector M210 and the harness connector M25.

NO (Without navigation system)>>Repair the harness between the AV control unit harness connector M84 and the harness connector M25.

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044517

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - BCM
 - Harness connector M22 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M120	39	40	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-88. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to [BCS-95. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the BCM branch line.
NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M22.
2. Check the continuity between the BCM harness connector and the harness connector.

BCM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M120	39	M22	101	Existed
	40		102	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the BCM harness connector M120 and the harness connector M22.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044518

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - A/T assembly
 - Harness connector F103
 - Harness connector M116
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/T assembly.
2. Check the resistance between the A/T assembly harness connector terminals.

A/T assembly harness connector		Resistance (Ω)
Connector No.	Terminal No.	
F61	3 8	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 5.

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Remove the joint connector. Refer to [TM-192, "Removal and Installation"](#).
2. Check the continuity between the A/T assembly harness connector side and the TCM harness connector side of the joint connector.

A/T assembly harness connector side	TCM harness connector side	Continuity
Terminal No.	Terminal No.	
3	3	Existed
8	8	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the joint connector.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-159, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the control valve & TCM. Refer to [TM-192, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the TCM branch line.

NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the A/T assembly harness connector and the harness connector.

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

A/T assembly harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
F61	3	M28	346	Existed
	8		347	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the A/T assembly harness connector F61 and the harness connector M28.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044519

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Steering angle sensor
 - Harness connector M22 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M37	1	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to [BRC-52. "Wiring Diagram"](#).

Is the inspection result normal?

YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-168. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the steering angle sensor branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M22.
2. Check the continuity between the steering angle sensor harness connector and the harness connector.

Steering angle sensor harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M37	1	M22	81	Existed
	2		82	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the steering angle sensor harness connector M37 and the harness connector M22.

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

Diagnosis Procedure

INFOID:000000013044520

1. CHECK DTC

Check DTC of the CAN gateway with CONSULT.

Is U1010 or B2600 indicated?

- YES >> Perform a diagnosis of the indicated DTC.
- NO >> GO TO 2.

2. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - CAN gateway
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair the terminal and connector.

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of CAN gateway.
2. Check the resistance between the CAN gateway harness connector terminals.

CAN gateway harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M125	1	7	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 4.
- NO >> GO TO 5.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the CAN gateway. Refer to [LAN-167, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the CAN gateway. Refer to [LAN-168, "Removal and Installation"](#).
- YES (Past error)>>Error was detected in the CAN gateway branch line (CAN communication circuit 1 side). Refer to [LAN-79, "System Diagram"](#).
- NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the CAN gateway harness connector and the harness connector.

CAN gateway harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M125	1	M28	326	Existed
	7		328	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
- NO >> Repair the harness between the CAN gateway harness connector M125 and the harness connector M28.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

Diagnosis Procedure

INFOID:000000013044521

1. CHECK DTC

Check DTC of the CAN gateway with CONSULT.

Is U1010 or B2600 indicated?

- YES >> Perform a diagnosis of the indicated DTC.
- NO >> GO TO 2.

2. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - CAN gateway
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair the terminal and connector.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> GO TO 5.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the CAN gateway. Refer to [LAN-167, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the CAN gateway. Refer to [LAN-168, "Removal and Installation"](#).
- YES (Past error)>>Error was detected in the CAN gateway branch line (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).
- NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the CAN gateway harness connector and the harness connector.

CAN gateway harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M125	4	M23	133	Existed
	10		135	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
- NO >> Repair the harness between the CAN gateway harness connector M125 and the harness connector M23.

4WD BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

4WD BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044522

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the AWD control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AWD control unit.
2. Check the resistance between the AWD control unit harness connector terminals.

AWD control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B17	8	16	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the AWD control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AWD control unit. Refer to [DLN-49, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the AWD control unit. Refer to [DLN-61, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the AWD control unit branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044523

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E41	25	15	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-143. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-165. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.
NO >> Repair the power supply and the ground circuit.

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044525

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E6	40	39	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the IPDM E/R branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-33, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the IPDM E/R branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

AVM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044526

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of around view monitor control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of around view monitor control unit.
2. Check the resistance between the around view monitor control unit harness connector terminals.

Around view monitor control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M231	27	28	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> Repair the around view monitor control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the around view monitor control unit. Refer to [AV-375, "AROUND VIEW MONITOR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the around view monitor control unit. Refer to [AV-429, "Removal and Installation"](#).
 YES (Past error)>>Error was detected in the around view monitor control unit branch line.
 NO >> Repair the power supply and the ground circuit.

SONAR BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

SONAR BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044527

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Sonar control unit
 - Harness connector M117 and B201

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of sonar control unit.
2. Check the resistance between the sonar control unit harness connector terminals.

Sonar control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M47	19	20	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the power supply and the ground circuit.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the sonar control unit. Refer to [AV-376. "SONAR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the sonar control unit. Refer to the [AV-433. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the sonar control unit branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

ADP BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

ADP BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044528

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Driver seat control unit
 - Harness connector B501
 - Harness connector B11
 - CAN gateway (With ICC system)

Is the inspection result normal?

YES (With ICC system)>>GO TO 2.

YES (Without ICC system)>>GO TO 3.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line is open) the root cause (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway. (With ICC system)
2. Disconnect the connector of driver seat control unit.
3. Check the resistance between the driver seat control unit harness connector terminals.

Driver seat control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B514	23	24	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the driver seat control unit branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the driver seat control unit. Refer to [ADP-74, "DRIVER SEAT CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the driver seat control unit. Refer to [ADP-147, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the driver seat control unit branch line.

NO >> Repair the power supply and the ground circuit.

CAN COMMUNICATION CIRCUIT 1

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

CAN COMMUNICATION CIRCUIT 1

Diagnosis Procedure

INFOID:000000013044538

1. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit 1.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-79. "System Diagram"](#).

4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M182	6 14	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

3. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M182	6		Not existed
	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

4. CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.
 - VQ37VHR

ECM		Resistance (Ω)
Terminal No.		
114	113	Approx. 108 – 132

- VK56VD

ECM		Resistance (Ω)
Terminal No.		
146	151	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

CAN COMMUNICATION CIRCUIT 1

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

IPDM E/R		Resistance (Ω)
Terminal No.		
40	39	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit 1.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

CAN COMMUNICATION CIRCUIT 2

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

CAN COMMUNICATION CIRCUIT 2

Diagnosis Procedure

INFOID:000000013044539

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit 2.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-79. "System Diagram"](#).

4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M182	13 12	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M182	13		Not existed
	12		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

4.CHECK CAN GATEWAY TERMINATION CIRCUIT

1. Remove the CAN gateway.
2. Check the resistance between the CAN gateway terminals.

CAN gateway		Resistance (Ω)
Terminal No.		
4	10	Approx. 108 – 132
6	12	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the CAN gateway.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

Inspection result

Reproduced>>GO TO 6.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

CAN COMMUNICATION CIRCUIT 2

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 11)]

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit 2.

NOTE:

CAN gateway has two termination circuits. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

Diagnosis Procedure

INFOID:0000000013044544

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connectors M181 and M105
 - Combination meter
4. Check the continuity between the harness connector and the combination meter harness connector.

Harness connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M105	7	M53	14	Existed
	8		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the air bag diagnosis sensor unit.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

MAIN LINE BETWEEN A-BAG AND M&A CIRCUIT

Diagnosis Procedure

INFOID:000000013044545

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connectors M181 and M105
 - Combination meter
4. Check the continuity between the harness connector and the combination meter harness connector.

Harness connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M105	7	M53	14	Existed
	8		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the air bag diagnosis sensor unit and the combination meter.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN M&A AND TCU CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

MAIN LINE BETWEEN M&A AND TCU CIRCUIT

Diagnosis Procedure

INFOID:000000013044546

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Combination meter
 - TCU
4. Check the continuity between the combination meter harness connector and the TCU harness connector.

Combination meter harness connector		TCU harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M53	14	M216	9	Existed
	15		10	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the combination meter and the TCU.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

MAIN LINE BETWEEN TCU AND TPMS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

MAIN LINE BETWEEN TCU AND TPMS CIRCUIT

Diagnosis Procedure

INFOID:000000013044548

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - TCU
 - Low tire pressure warning control unit
4. Check the continuity between the low tire pressure warning control unit harness connector and the A/C auto amp. harness connector.

TCU harness connector		Low tire pressure warning control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M216	9	M43	2	Existed
	10		1	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the TCU and the low tire pressure warning control unit.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

MAIN LINE BETWEEN TPMS AND HVAC CIRCUIT

Diagnosis Procedure

INFOID:000000013044549

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Low tire pressure warning control unit
 - A/C auto amp.
4. Check the continuity between the low tire pressure warning control unit harness connector and the A/C auto amp. harness connector.

Low tire pressure warning control unit harness connector		A/C auto amp. harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M43	2	M66	12	Existed
	1		11	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the low tire pressure warning control unit and the A/C auto amp.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN HVAC AND AV CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

MAIN LINE BETWEEN HVAC AND AV CIRCUIT

Diagnosis Procedure

INFOID:000000013044550

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - A/C auto amp.
 - AV control unit
4. Check the continuity between the A/C auto amp. harness connector and the AV control unit harness connector.
 - Models with navigation system

A/C auto amp. harness connector		AV control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M210	90	Existed
	11		74	Existed

- Models without navigation system

A/C auto amp. harness connector		AV control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M84	81	Existed
	11		80	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the A/C amp. and the AV control unit.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN AV AND BCM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

MAIN LINE BETWEEN AV AND BCM CIRCUIT

Diagnosis Procedure

INFOID:000000013044551

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - AV control unit
 - BCM
4. Check the continuity between the AV control unit harness connector and the BCM harness connector.
 - Models with navigation system

AV control unit harness connector		BCM harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M210	90	M120	39	Existed
	74		40	Existed

- Models without navigation system

AV control unit harness connector		BCM harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M84	81	M120	39	Existed
	80		40	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the AV control unit and the BCM.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN BCM AND TCM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

MAIN LINE BETWEEN BCM AND TCM CIRCUIT

Diagnosis Procedure

INFOID:000000013044552

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - BCM
 - Harness connector F103 and M116
4. Check the continuity between the BCM harness connector and the A/T assembly harness connector.

BCM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M120	39	M116	11	Existed
	40		12	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the BCM and the A/T assembly.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN TCM AND STRG CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

MAIN LINE BETWEEN TCM AND STRG CIRCUIT

Diagnosis Procedure

INFOID:000000013044553

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Harness connector F103 and M116
 - Steering angle sensor
4. Check the continuity between the harness connector and the steering angle sensor harness connector.

Harness connector		Steering angle sensor harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M116	11	M37	1	Existed
	12		2	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the A/T assembly and the steering angle sensor.

NO >> Replace the PCB harness.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN STRG AND CGW CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

MAIN LINE BETWEEN STRG AND CGW CIRCUIT

Diagnosis Procedure

INFOID:000000013044555

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Steering angle sensor
 - CAN gateway
4. Check the continuity between the steering angle sensor harness connector and the CAN gateway harness connector.

Steering angle sensor harness connector		CAN gateway harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M37	1	M125	1	Existed
	2		7	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the steering angle sensor and the CAN gateway.

NO >> Replace the PCB harness.

MAIN LINE BETWEEN CGW AND 4WD CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

MAIN LINE BETWEEN CGW AND 4WD CIRCUIT

Diagnosis Procedure

INFOID:000000013044556

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M28 and PCB harness side connector
 - Harness connector M20 and PCB harness side connector
 - Harness connector M7
 - Harness connector B1

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the steering angle sensor and the PCB harness connector.

CAN gateway harness connector		PCB harness connector		Continuity
Connector No.	Terminal No.	Terminal No.		
M125	1	326		Existed
	7	328		Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the PCB harness.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M20.
2. Check the continuity between the PCB harness connectors.

PCB harness connector			Continuity
Terminal No.			
326	35		Existed
328	36		Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the PCB harness.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M7 and B1.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M20	35	M7	72	Existed
	36		73	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the main line between the harness connectors M20 and M7.

5.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN CGW AND 4WD CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

1. Disconnect the harness connector of AWD control unit.
2. Check the continuity between the harness connector and the AWD control unit harness connector.

Harness connector		AWD control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B1	72	B17	8	Existed
	73		16	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the CAN gateway and the AWD control unit.

NO >> Replace the body harness.

MAIN LINE BETWEEN 4WD AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

MAIN LINE BETWEEN 4WD AND ABS CIRCUIT

Diagnosis Procedure

INFOID:000000013044559

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B1
 - Harness connector M7
 - Harness connector M6
 - Harness connector E106

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors B1 and M7.
2. Check the continuity between the harness connector terminals.

Connector No.	Terminal No.		Continuity
B1	72	74	Existed
	73	75	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the body harness.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M6 and E106.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M7	74	M6	22	Existed
	75		23	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M7 and M6.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the continuity between the harness connector and the ABS actuator and electric unit (control unit) harness connector.

Harness connector		ABS actuator and electric unit (control unit) harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E106	22	E41	25	Existed
	23		15	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the AWD control unit and the ABS actuator and electric unit (control unit).

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN 4WD AND ABS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

NO >> Repair the main line between the harness connector E106 and the ABS actuator and electric unit (control unit).

MAIN LINE BETWEEN DLC AND ICC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

MAIN LINE BETWEEN DLC AND ICC CIRCUIT

Diagnosis Procedure

INFOID:000000013044562

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M20 and PCB harness side connector
 - Harness connector M117
 - Harness connector B201
 - Harness connector B222
 - Harness connector B5

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M20.
2. Check the continuity between the data link connector and the PCB harness connector.

Data link connector		PCB harness connector		Continuity
Connector No.	Terminal No.	Terminal No.		
M182	13	24		Existed
	12	27		Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the PCB harness.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M117 and B5.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M20	24	M117	72	Existed
	27		73	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M20 and M117.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors B222 and B5.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B201	72	B222	13	Existed
	73		14	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the main line between the harness connectors B201 and B222.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN DLC AND ICC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector of ADAS control unit.
2. Check the continuity between the harness connectors.

Harness connector		ADAS control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B5	13	B10	1	Existed
	14		2	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the ADAS control unit.

NO >> Replace the body harness.

MAIN LINE BETWEEN RDR-L AND RDR-R CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

MAIN LINE BETWEEN RDR-L AND RDR-R CIRCUIT

Diagnosis Procedure

INFOID:000000013044563

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B33
 - Harness connector B245

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar LH
 - Harness connectors B33 and B245
2. Check the continuity between the side radar LH harness connector and the harness connector.

Side radar LH harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B52	4	B33	13	Existed
	3		14	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the side radar LH and the harness connector B33.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of side radar RH.
2. Check the continuity between the harness connector and the side radar RH harness connector.

Harness connector		Side radar RH harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B245	13	B252	4	Existed
	14		3	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the side radar LH and the side radar RH.

NO >> Repair the main line between the harness connector B245 and the side radar RH.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN RDR-R AND APA CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

MAIN LINE BETWEEN RDR-R AND APA CIRCUIT

Diagnosis Procedure

INFOID:000000013044564

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B201
 - Harness connector M117
 - Harness connector M20 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar RH
 - Harness connectors B201 and M117
2. Check the continuity between the side radar RH harness connector and the harness connector.

Side radar RH harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B252	4	B201	66	Existed
	3		67	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the side radar RH and the harness connector B201.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M20.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M117	66	M20	38	Existed
	67		40	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M117 and M20.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M150 and M151.
2. Check the continuity between the PCB harness connector and the harness connector.

PCB harness connector		Harness connector		Continuity
Terminal No.	Terminal No.	Connector No.	Terminal No.	
38	40	M150	11	Existed
40			10	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the side radar RH and the accelerator pedal actuator.

MAIN LINE BETWEEN RDR-R AND APA CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

NO >> Replace the PCB harness.

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

MAIN LINE BETWEEN APA AND LANE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

MAIN LINE BETWEEN APA AND LANE CIRCUIT

Diagnosis Procedure

INFOID:000000013044565

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ADAS control unit
 - Harness connectors M151 and M150
 - Harness connectors M110 and R7
4. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M150	11	M110	13	Existed
	10		2	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the accelerator pedal actuator and the lane camera unit.

NO >> Replace the PCB harness.

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044566

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ECM
 - Harness connector M30 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.
 - VQ37VHR

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M107	114	113	Approx. 108 – 132

- VK56VD

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M160	146	151	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to the following.

- VQ37VHR FOR USA AND CANADA: [EC-202. "Diagnosis Procedure"](#)
- VQ37VHR FOR MEXICO: [EC-716. "Diagnosis Procedure"](#)
- VK56VD FOR USA AND CANADA: [EC-1171. "Diagnosis Procedure"](#)
- VK56VD FOR MEXICO: [EC-1746. "Diagnosis Procedure"](#)

Is the inspection result normal?

YES (Present error)>>Replace the ECM. Refer to the following.

- VQ37VHR FOR USA AND CANADA: [EC-559. "Removal and Installation"](#)
- VQ37VHR FOR MEXICO: [EC-977. "Removal and Installation"](#)
- VK56VD FOR USA AND CANADA: [EC-1568. "Removal and Installation"](#)
- VK56VD FOR MEXICO: [EC-2028. "Removal and Installation"](#)

YES (Past error)>>Error was detected in the ECM branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M30.
2. Check the continuity between the ECM harness connector and the harness connector.
 - VQ37VHR

ECM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

M107	114	M30	439	Existed
	113		438	Existed

- VK56VD

ECM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M160	146	M30	439	Existed
	151		438	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO (VQ37VHR)>>Repair the harness between the ECM harness connector M107 and the harness connector M30.

NO (VK56VD)>>Repair the harness between the ECM harness connector M160 and the harness connector M30.

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

Diagnosis Procedure

INFOID:000000013044568

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Data link connector
 - Harness connector M181
 - Harness connector M105
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M182	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit (CAN communication circuit 1 side). Refer to [LAN-79. "System Diagram"](#).

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M182	6	M23	151	Existed
	14		150	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the data link connector M182 and the harness connector M23.

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

Diagnosis Procedure

INFOID:000000013044569

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Data link connector
 - Harness connector M181
 - Harness connector M105
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector		Resistance (Ω)
Connector No.	Terminal No.	
M182	13	Approx. 54 – 66
	12	

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M182	13	M23	134	Existed
	12		136	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the data link connector M182 and the harness connector M23.

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044570

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Air bag diagnosis sensor unit
 - Harness connector M26 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace the main harness and/or the PCB harness.

2. CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-33. "Work Flow"](#).

Is the inspection result normal?

- YES >> Replace the main harness and/or the PCB harness.
NO >> Replace parts whose air bag system has a malfunction.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044571

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Combination meter
 - Harness connector M24 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M53	14	15	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter Refer to [MWI-75. "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the combination meter. Refer to [MWI-95. "Removal and Installation"](#).
 YES (Past error)>>Error was detected in the combination meter branch line.
 NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M24.
2. Check the continuity between the combination meter harness connector and the harness connector.

Combination meter harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M53	14	M24	176	Existed
	15		177	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
 NO >> Repair the harness between the combination meter harness connector M53 and the harness connector M24.

TCU BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

TCU BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044572

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - TCU
 - Harness connector M26 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of TCU.
2. Check the resistance between the TCU harness connector terminals.

TCU harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M216	9	10	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCU. Refer to [AV-511, "TCU : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the TCU. Refer to [AV-520, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the TCU branch line.

NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M26.
2. Check the continuity between the TCU harness connector and the harness connector.

TCU harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M216	9	M26	242	Existed
	10		262	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the TCU harness connector M216 and the harness connector M26.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

TPMS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

TPMS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044573

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Low tire pressure warning control unit
 - Harness connector M29 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of low tire pressure warning control unit.
2. Check the resistance between the low tire pressure warning control unit harness connector terminals.

Low tire pressure warning control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M43	2	1	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the low tire pressure warning control unit. Refer to [WT-52. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the low tire pressure warning control unit. Refer to [WT-66. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the low tire pressure warning control unit branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M29.
2. Check the continuity between the low tire pressure warning control unit harness connector and the harness connector.

Low tire pressure warning control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M43	2	M29	396	Existed
	1		395	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the low tire pressure warning control unit harness connector M43 and the harness connector M29.

HVAC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044574

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - A/C auto amp.
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/C auto amp.
2. Check the resistance between the A/C auto amp. harness connector terminals.

A/C auto amp. harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M66	12	11	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the A/C auto amp. Refer to [HAC-107. "A/C AUTO AMP. : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the A/C auto amp. Refer to [HAC-126. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the A/C auto amp. branch line.
NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the A/C auto amp. harness connector and the harness connector.

A/C auto amp. harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M66	12	M28	325	Existed
	11		327	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
NO >> Repair the harness between the A/C auto amp. harness connector M66 and the harness connector M28.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044575

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - AV control unit
 - Harness connector M25 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
2. Check the resistance between the AV control unit harness connector terminals.
 - Models with navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M210	90	74	Approx. 54 – 66

- Models without navigation system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M84	81	80	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to the following.

- Base audio without navigation system: [AV-94. "AV CONTROL UNIT : Diagnosis Procedure"](#)
- BOSE audio with navigation system: [AV-373. "AV CONTROL UNIT : Diagnosis Procedure"](#)

Is the inspection result normal?

YES (Present error)>>Replace the AV control unit. Refer to the following.

- Base audio without navigation system: [AV-126. "Removal and Installation"](#)
- BOSE audio with navigation system: [AV-407. "Removal and Installation"](#)

YES (Past error)>>Error was detected in the AV control unit branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M25.
2. Check the continuity between the AV control unit harness connector and the harness connector.
 - Models with navigation system

AV control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M210	90	M25	201	Existed
	74		221	Existed

- Models without navigation system

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

AV control unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M84	81	M25	201	Existed
	80		221	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO (With navigation system)>>Repair the harness between the AV control unit harness connector M210 and the harness connector M25.

NO (Without navigation system)>>Repair the harness between the AV control unit harness connector M84 and the harness connector M25.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044576

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - BCM
 - Harness connector M22 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M120	39	40	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-88. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the BCM. Refer to [BCS-95. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the BCM branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M22.
2. Check the continuity between the BCM harness connector and the harness connector.

BCM harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M120	39	M22	101	Existed
	40		102	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the BCM harness connector M120 and the harness connector M22.

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044577

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - A/T assembly
 - Harness connector F103
 - Harness connector M116
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/T assembly.
2. Check the resistance between the A/T assembly harness connector terminals.

A/T assembly harness connector		Resistance (Ω)
Connector No.	Terminal No.	
F61	3 8	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 5.

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Remove the joint connector. Refer to [TM-192, "Removal and Installation"](#).
2. Check the continuity between the A/T assembly harness connector side and the TCM harness connector side of the joint connector.

A/T assembly harness connector side	TCM harness connector side	Continuity
Terminal No.	Terminal No.	
3	3	Existed
8	8	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the joint connector.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-159, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the control valve & TCM. Refer to [TM-192, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the TCM branch line.

NO >> Repair the power supply and the ground circuit.

5.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the A/T assembly harness connector and the harness connector.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

A/T assembly harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
F61	3	M28	346	Existed
	8		347	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the A/T assembly harness connector F61 and the harness connector M28.

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044578

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Steering angle sensor
 - Harness connector M22 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M37	1	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to [BRC-52. "Wiring Diagram"](#).

Is the inspection result normal?

YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-168. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the steering angle sensor branch line.

NO >> Repair the power supply and the ground circuit.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M22.
2. Check the continuity between the steering angle sensor harness connector and the harness connector.

Steering angle sensor harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M37	1	M22	81	Existed
	2		82	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the steering angle sensor harness connector M37 and the harness connector M22.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

Diagnosis Procedure

INFOID:000000013044579

1. CHECK DTC

Check DTC of the CAN gateway with CONSULT.

Is U1010 or B2600 indicated?

- YES >> Perform a diagnosis of the indicated DTC.
- NO >> GO TO 2.

2. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - CAN gateway
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair the terminal and connector.

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of CAN gateway.
2. Check the resistance between the CAN gateway harness connector terminals.

CAN gateway harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M125	1	7	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 4.
- NO >> GO TO 5.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the CAN gateway. Refer to [LAN-167, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the CAN gateway. Refer to [LAN-168, "Removal and Installation"](#).
- YES (Past error)>>Error was detected in the CAN gateway branch line (CAN communication circuit 1 side). Refer to [LAN-79, "System Diagram"](#).
- NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the CAN gateway harness connector and the harness connector.

CAN gateway harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M125	1	M28	326	Existed
	7		328	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
- NO >> Repair the harness between the CAN gateway harness connector M125 and the harness connector M28.

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

Diagnosis Procedure

INFOID:000000013044580

1. CHECK DTC

Check DTC of the CAN gateway with CONSULT.

Is U1010 or B2600 indicated?

- YES >> Perform a diagnosis of the indicated DTC.
- NO >> GO TO 2.

2. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - CAN gateway
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair the terminal and connector.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> GO TO 5.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the CAN gateway. Refer to [LAN-167, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the CAN gateway. Refer to [LAN-168, "Removal and Installation"](#).
- YES (Past error)>>Error was detected in the CAN gateway branch line (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).
- NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the CAN gateway harness connector and the harness connector.

CAN gateway harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M125	4	M23	133	Existed
	10		135	Existed

Is the inspection result normal?

- YES >> Replace the PCB harness.
- NO >> Repair the harness between the CAN gateway harness connector M125 and the harness connector M23.

4WD BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

4WD BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044581

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the AWD control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AWD control unit.
2. Check the resistance between the AWD control unit harness connector terminals.

AWD control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B17	8	16	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the AWD control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AWD control unit. Refer to [DLN-49, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the AWD control unit. Refer to [DLN-61, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the AWD control unit branch line.
NO >> Repair the power supply and the ground circuit.

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044582

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E41	25	15	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-143, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-165, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

AFS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044583

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the AFS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AFS control unit.
2. Check the resistance between the AFS control unit harness connector terminals.

AFS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E70	1	13	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> Repair the AFS control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AFS control unit. Refer to [EXL-95, "AFS CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the AFS control unit. Refer to [EXL-148, "Removal and Installation"](#).
 YES (Past error)>>Error was detected in the AFS control unit branch line.
 NO >> Repair the power supply and the ground circuit.

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044584

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E6	40	39	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the IPDM E/R branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-33, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the IPDM E/R branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

AVM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

AVM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044585

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of around view monitor control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of around view monitor control unit.
2. Check the resistance between the around view monitor control unit harness connector terminals.

Around view monitor control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M231	27	28	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the around view monitor control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the around view monitor control unit. Refer to [AV-375, "AROUND VIEW MONITOR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the around view monitor control unit. Refer to [AV-429, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the around view monitor control unit branch line.
NO >> Repair the power supply and the ground circuit.

ADP BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

ADP BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044587

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Driver seat control unit
 - Harness connector B501
 - Harness connector B11
 - CAN gateway (With ICC system)

Is the inspection result normal?

YES (With ICC system)>>GO TO 2.

YES (Without ICC system)>>GO TO 3.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line is open) the root cause (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway. (With ICC system)
2. Disconnect the connector of driver seat control unit.
3. Check the resistance between the driver seat control unit harness connector terminals.

Driver seat control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B514	23	24	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the driver seat control unit branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the driver seat control unit. Refer to [ADP-74, "DRIVER SEAT CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the driver seat control unit. Refer to [ADP-147, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the driver seat control unit branch line.

NO >> Repair the power supply and the ground circuit.

ICC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044588

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ADAS control unit
 - CAN gateway

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector		Continuity	
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> Check the harness and repair or replace (if shield line is open) the root cause (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway.
2. Disconnect the connector of ADAS control unit.
3. Check the resistance between the ADAS control unit harness connector terminals.

ADAS control unit harness connector		Resistance (Ω)	
Connector No.	Terminal No.		
B10	1	2	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 4.
 NO >> Replace the body harness.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ADAS control unit. Refer to [DAS-162, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ADAS control unit. Refer to [DAS-163, "Removal and Installation"](#).
 YES (Past error)>>Error was detected in the ADAS control unit branch line.
 NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

PSB BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044589

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Pre-crash seat belt control unit (driver side)
 - CAN gateway

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector		Continuity	
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> Check the harness and repair or replace (if shield line is open) the root cause (CAN communication circuit 2 side). Refer to [LAN-79, "System Diagram"](#).

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway.
2. Disconnect the connector of pre-crash seat belt control unit (driver side).
3. Check the resistance between the pre-crash seat belt control unit (driver side) harness connector terminals.

Pre-crash seat belt control unit (driver side) harness connector		Resistance (Ω)	
Connector No.	Terminal No.		
B65	14	4	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 4.
 NO >> Repair the pre-crash seat belt control unit (driver side) branch line.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the pre-crash seat belt control unit (driver side). Refer to [SBC-53, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the seat belt pre-tensioner retractor (driver side). Refer to [SB-8, "SEAT BELT RETRACTOR : Removal and Installation"](#).
 YES (Past error)>>Error was detected in the pre-crash seat belt control unit (driver side) branch line.
 NO >> Repair the power supply and the ground circuit.

RDR-L BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

RDR-L BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044590

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the side radar LH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of side radar LH.
2. Check the resistance between the side radar LH harness connector terminals.

Side radar LH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B52	4	3	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the side radar LH branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar LH. Refer to [DAS-346, "SIDE RADAR LH : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the side radar LH. Refer to [DAS-393, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the side radar LH branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

BSW/BUZZER BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

BSW/BUZZER BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044591

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the driver assistance buzzer control module for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of driver assistance buzzer control module.
2. Check the resistance between the driver assistance buzzer control module harness connector terminals.

Driver assistance buzzer control module harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B210	3	11	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the driver assistance buzzer control module branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the driver assistance buzzer control module. Refer to [DAS-347, "DRIVER ASSISTANCE BUZZER CONTROL MODULE : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the driver assistance buzzer control module. Refer to [DAS-396, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the driver assistance buzzer control module branch line.
NO >> Repair the power supply and the ground circuit.

RDR-R BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

RDR-R BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044592

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the side radar RH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK RIGHT/LEFT SWITCHING SIGNAL CIRCUIT

Check the right/left switching signal circuit of the side radar RH. Refer to [DAS-349, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair the root cause.

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of side radar RH.
2. Check the resistance between the side radar RH harness connector terminals.

Side radar RH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B252	4	3	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 4.
NO >> Repair the side radar RH branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar RH. Refer to [DAS-347, "SIDE RADAR RH: Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the side radar RH. Refer to [DAS-393, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the side radar RH branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

APA BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

APA BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044593

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Accelerator pedal position sensor
 - Harness connector M151
 - Harness connector M150
 - Harness connector M23 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of accelerator pedal position sensor.
2. Check the resistance between the accelerator pedal position sensor harness connector terminals.

Accelerator pedal position sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M154	3	9	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the accelerator pedal position sensor. Refer to [DAS-345, "ACCELERATOR PEDAL ACTUATOR : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the accelerator pedal assembly. Refer to [ACC-6, "MODELS WITH DISTANCE CONTROL ASSIST SYSTEM : Removal and Installation"](#).

YES (Past error)>>Error was detected in the accelerator pedal position sensor branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M23.
2. Check the continuity between the accelerator pedal position sensor harness connector and the harness connector.

Accelerator pedal position sensor harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M154	3	M23	138	Existed
	9		137	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the accelerator pedal position sensor harness connector M152 and the harness connector M23.

LANE BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

LANE BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044594

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Lane camera unit
 - Harness connector R7
 - Harness connector M110
 - Harness connector M24 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of lane camera unit.
2. Check the resistance between the lane camera unit harness connector terminals.

Lane camera unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
R8	4	8	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the lane camera unit. Refer to [DAS-345, "LANE CAMERA UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the lane camera unit. Refer to [DAS-392, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the lane camera unit branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M24.
2. Check the continuity between the lane camera unit harness connector and the harness connector.

Lane camera unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
R8	4	M24	179	Existed
	8		178	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the lane camera unit harness connector R8 and the harness connector M24.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

LASER BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

LASER BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013044595

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ICC sensor
 - Harness connector E106
 - Harness connector M6
 - Harness connector M28 and PCB harness side connector

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ICC sensor.
2. Check the resistance between the ICC sensor harness connector terminals.

ICC sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E33	3	6	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ICC sensor. Refer to [CCS-116, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the ICC sensor. Refer to [CCS-133, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the ICC sensor branch line.

NO >> Repair the power supply and the ground circuit.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M28.
2. Check the continuity between the ICC sensor harness connector and the harness connector.

ICC sensor harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E33	3	M28	343	Existed
	6		345	Existed

Is the inspection result normal?

YES >> Replace the PCB harness.

NO >> Repair the harness between the ICC sensor harness connector E67 and the harness connector M28.

CAN COMMUNICATION CIRCUIT 1

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

CAN COMMUNICATION CIRCUIT 1

Diagnosis Procedure

INFOID:000000013044597

1. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit 1.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-79. "System Diagram"](#).

4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M182	6 14	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

3. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M182	6		Not existed
	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

4. CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.
 - VQ37VHR

ECM		Resistance (Ω)
Terminal No.		
114	113	Approx. 108 – 132

- VK56VD

ECM		Resistance (Ω)
Terminal No.		
146	151	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CAN COMMUNICATION CIRCUIT 1

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

IPDM E/R		Resistance (Ω)
Terminal No.		
40	39	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

5. CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6. CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit 1.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

CAN COMMUNICATION CIRCUIT 2

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

CAN COMMUNICATION CIRCUIT 2

Diagnosis Procedure

INFOID:000000013044598

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit 2.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-79. "System Diagram"](#).

4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M182	13	Not existed
	12	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M182	13		Not existed
	12		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

4.CHECK CAN GATEWAY TERMINATION CIRCUIT

1. Remove the CAN gateway.
2. Check the resistance between the CAN gateway terminals.

CAN gateway		Resistance (Ω)
Terminal No.		
4	10	Approx. 108 – 132
6	12	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the CAN gateway.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

Inspection result

Reproduced>>GO TO 6.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

CAN COMMUNICATION CIRCUIT 2

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit 2.

NOTE:

CAN gateway has two termination circuits. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

ITS COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000013044599

1.CHECK CAN DIAGNOSIS

Check the CAN diagnosis results from CONSULT to see that the CAN communication circuit 1 and CAN communication circuit 2 have no malfunction.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-79. "System Diagram"](#).

Are the CAN communication 1 and CAN communication 2 circuits normal?

YES >> GO TO 2.

NO >> Check and repair CAN communication circuit 1 and/or CAN communication circuit 2.

2.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ADAS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the terminal and connector.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - ADAS control unit
 - ICC sensor
2. Check the continuity between the ADAS control unit harness connector and the ICC sensor harness connector.

ADAS control unit harness connector		ICC sensor harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B10	6	E33	3	Existed
	7		6	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the body harness.

4.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar LH
 - Side radar RH
 - Accelerator pedal actuator
 - Lane camera unit
2. Check the continuity between the ADAS control unit harness connector terminals.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
B10	6	7	Not existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

5.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the ADAS control unit harness connector and the ground.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

ITS COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 12)]

ADAS control unit harness connector		Ground	Continuity
Connector No.	Terminal No.		
B10	6		
	7		Not existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Check the harness and repair or replace (if shield line or PCB harness is short) the root cause.

6.CHECK TERMINATION CIRCUIT

1. Remove the ADAS control unit and the ICC sensor.
2. Check the resistance between the ADAS control unit terminals.

ADAS control unit		Resistance (Ω)
Terminal No.		
6	7	Approx. 108 – 132

3. Check the resistance between the ICC sensor terminals.

ICC sensor		Resistance (Ω)
Terminal No.		
3	6	Approx. 108 – 132

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace the ADAS control unit and/or the ICC sensor.

7.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

Inspection result

Reproduced>>GO TO 8.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

8.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of ITS communication system.

NOTE:

ADAS control unit and ICC sensor have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.