

SECTION **HAC**

HEATER & AIR CONDITIONING CONTROL SYSTEM

CONTENTS

AUTOMATIC AIR CONDITIONING	
PRECAUTION	5
PRECAUTIONS	5
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	5
Precautions for Removing of Battery Terminal	5
SYSTEM DESCRIPTION	6
COMPONENT PARTS	6
AUTOMATIC AIR CONDITIONING SYSTEM	6
AUTOMATIC AIR CONDITIONING SYSTEM : Component Parts Location	6
AUTOMATIC AIR CONDITIONING SYSTEM : Component Description	7
FOREST AIR SYSTEM	8
FOREST AIR SYSTEM : Component Parts Location	9
FOREST AIR SYSTEM : Component Description... ..	10
BLOWER UNIT	11
BLOWER UNIT : Aroma Motor	11
BLOWER UNIT : Blower Motor	11
BLOWER UNIT : Intake Door Motor	11
BLOWER UNIT : Power Transistor	11
HEATER & COOLING UNIT ASSEMBLY	11
HEATER & COOLING UNIT ASSEMBLY : Air Mix Door Motor (Driver Side)	12
HEATER & COOLING UNIT ASSEMBLY : Air Mix Door Motor (Passenger Side)	12
HEATER & COOLING UNIT ASSEMBLY : Aspirator	12
HEATER & COOLING UNIT ASSEMBLY : Mode Door Motor (Driver Side)	12
HEATER & COOLING UNIT ASSEMBLY : Mode Door Motor (Passenger side)	12
HEATER & COOLING UNIT ASSEMBLY : Rear Mode Door Motor	12
HEATER & COOLING UNIT ASSEMBLY : Upper Ventilator Door Motor	13
Refrigerant Pressure Sensor	13
SYSTEM	14
AUTOMATIC AIR CONDITIONING SYSTEM	14
AUTOMATIC AIR CONDITIONING SYSTEM : System Diagram	14
AUTOMATIC AIR CONDITIONING SYSTEM : System Description	15
AUTOMATIC AIR CONDITIONING SYSTEM : Air Flow Control	15
AUTOMATIC AIR CONDITIONING SYSTEM : Air Inlet Control	16
AUTOMATIC AIR CONDITIONING SYSTEM : Air Outlet Control	17
AUTOMATIC AIR CONDITIONING SYSTEM : Compressor Control	17
AUTOMATIC AIR CONDITIONING SYSTEM : Door Control	17
AUTOMATIC AIR CONDITIONING SYSTEM : Temperature Control	21
AUTOMATIC AIR CONDITIONING SYSTEM : Intelligent Key Interlock Function	21
AUTOMATIC AIR CONDITIONING SYSTEM : Fail-safe	22
FOREST AIR SYSTEM	22
FOREST AIR SYSTEM : System Diagram	23
FOREST AIR SYSTEM : System Description	23
FOREST AIR SYSTEM : Air Flow Control (Inside Odor Detecting Mechanism)	24
FOREST AIR SYSTEM : Aroma Diffuser Control... ..	24
FOREST AIR SYSTEM : Automatic Defogging Control	25
FOREST AIR SYSTEM : Automatic Intake Control (Exhaust Gas/Outside Odor Detecting Mechanism)	25

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

FOREST AIR SYSTEM : Breezy Air Control	25	CONFIGURATION (HVAC)	77
FOREST AIR SYSTEM : Plasmacluster Control ...	26	Description	77
FOREST AIR SYSTEM : Intelligent Key Interlock Function	26	Work Procedure	77
OPERATION	27	SYSTEM SETTING	78
AUTOMATIC AIR CONDITIONING SYSTEM	27	AUTOMATIC AIR CONDITIONING SYSTEM	78
AUTOMATIC AIR CONDITIONING SYSTEM :		AUTOMATIC AIR CONDITIONING SYSTEM :	
Switch Name and Function	27	Temperature Setting Trimmer	78
AUTOMATIC AIR CONDITIONING SYSTEM :		AUTOMATIC AIR CONDITIONING SYSTEM : In-	
Menu Displayed by Pressing Each Switch	31	let Port Memory Function (REC)	78
FOREST AIR SYSTEM	32	AUTOMATIC AIR CONDITIONING SYSTEM : In-	
FOREST AIR SYSTEM : Switch Name and Func-		let Port Memory Function (FRE)	79
tion	32	AUTOMATIC AIR CONDITIONING SYSTEM :	
FOREST AIR SYSTEM : Menu Displayed by		Foot Position Setting Trimmer	79
Pressing Each Switch	35	FOREST AIR SYSTEM	79
DIAGNOSIS SYSTEM (A/C AUTO AMP.)	37	FOREST AIR SYSTEM : Aroma Fragrance Inten-	
Description	37	sity Setting	79
CONSULT Function	37	FOREST AIR SYSTEM : Aroma Fragrance Type	
ECU DIAGNOSIS INFORMATION	41	Setting	79
A/C AUTO AMP.	41	FOREST AIR SYSTEM : Air Flow Control (Inside	
Reference Value	41	Odor Detecting Mechanism) Setting	80
Fail-safe	48	FOREST AIR SYSTEM : Aroma Diffuser Pres-	
DTC Index	48	ence Setting	80
ECM, IPDM E/R	50	DTC/CIRCUIT DIAGNOSIS	81
List of ECU Reference	50	U1000 CAN COMM CIRCUIT	81
WIRING DIAGRAM	51	Description	81
AUTOMATIC AIR CONDITIONING SYSTEM ...	51	DTC Logic	81
Wiring Diagram	51	Diagnosis Procedure	81
BASIC INSPECTION	66	U1010 CONTROL UNIT (CAN)	82
DIAGNOSIS AND REPAIR WORK FLOW	66	Description	82
Work Flow	66	DTC Logic	82
OPERATION INSPECTION	69	Diagnosis Procedure	82
AUTOMATIC AIR CONDITIONING SYSTEM		B2578, B2579 IN-VEHICLE SENSOR	83
(WITH FOREST AIR)	69	DTC Logic	83
AUTOMATIC AIR CONDITIONING SYSTEM		Diagnosis Procedure	83
(WITH FOREST AIR) : Work Procedure	69	Component Inspection	84
AUTOMATIC AIR CONDITIONING SYSTEM		B257B, B257C AMBIENT SENSOR	86
(WITHOUT FOREST AIR)	71	DTC Logic	86
AUTOMATIC AIR CONDITIONING SYSTEM		Diagnosis Procedure	86
(WITHOUT FOREST AIR) : Work Procedure	71	Component Inspection	87
FOREST AIR SYSTEM	73	B2581, B2582 INTAKE SENSOR	89
FOREST AIR SYSTEM : Work Procedure	73	DTC Logic	89
ADDITIONAL SERVICE WHEN REPLACING		Diagnosis Procedure	89
CONTROL UNIT (A/C AUTO AMP.)	76	Component Inspection	90
Description	76	B262A, B262B, B2657, B2658 EXHAUST	
Work Procedure	76	GAS/OUTSIDE ODOR DETECTING SENSOR	
		...	92
		DTC Logic	92
		Diagnosis Procedure	92
		B2630, B2631 SUNLOAD SENSOR	96
		DTC Logic	96

Diagnosis Procedure	96	Diagnosis Procedure	140	
Component Inspection	98	Component Inspection	143	A
B2750, B2751, B2752 AIR MIX DOOR MOTOR (DRIVER SIDE)	99	POWER SUPPLY AND GROUND CIRCUIT ..	145	
DTC Logic	99	A/C AUTO AMP.	145	B
Diagnosis Procedure	99	A/C AUTO AMP. : Diagnosis Procedure	145	
Component Inspection (Motor)	102	DOOR MOTOR PBR (WITH FOREST AIR)	145	C
Component Inspection (PBR)	103	DOOR MOTOR PBR (WITH FOREST AIR) : Diagnosis Procedure	145	
B2753, B2754, B2755 AIR MIX DOOR MOTOR (PASSENGER SIDE)	104	DOOR MOTOR PBR (WITHOUT FOREST AIR)	147	D
DTC Logic	104	DOOR MOTOR PBR (WITHOUT FOREST AIR) : Diagnosis Procedure	147	
Diagnosis Procedure	104	BLOWER MOTOR	150	E
Component Inspection (Motor)	107	Diagnosis Procedure	150	
Component Inspection (PBR)	108	Component Inspection (Blower Motor)	154	
B2756, B2757, B2758 MODE DOOR MOTOR (DRIVER SIDE)	109	Component Inspection (Blower Relay)	154	F
DTC Logic	109	ECV (ELECTRICAL CONTROL VALVE)	155	
Diagnosis Procedure	109	Diagnosis Procedure	155	G
Component Inspection (Motor)	112	Component Inspection	156	
Component Inspection (PBR)	113	INSIDE ODOR DETECTING SENSOR	157	H
B2759, B275A, B275B MODE DOOR MOTOR (PASSENGER SIDE)	114	Component Function Check	157	
DTC Logic	114	Diagnosis Procedure	157	
Diagnosis Procedure	114	Component Inspection	159	
Component Inspection (Motor)	118	IONIZER	161	HAC
Component Inspection (PBR)	118	Component Function Check	161	
B275C, B275D, B275E INTAKE DOOR MOTOR	119	Diagnosis Procedure	161	J
DTC Logic	119	MAGNET CLUTCH	164	
Diagnosis Procedure	119	Component Function Check	164	
Component Inspection (Motor)	123	Diagnosis Procedure	164	K
Component Inspection (PBR)	123	SYMPTOM DIAGNOSIS	165	
B275F, B2760, B2761 UPPER VENTILATOR DOOR MOTOR	124	AUTOMATIC AIR CONDITIONING SYSTEM .	165	L
DTC Logic	124	Symptom Table	165	
Diagnosis Procedure	124	FOREST AIR SYSTEM	167	
Component Inspection (Motor)	128	Symptom Table	167	M
Component Inspection (PBR)	129	COMPRESSOR DOES NOT OPERATE	168	
B2762, B2763, B2764 REAR MODE DOOR MOTOR	130	Description	168	N
DTC Logic	130	Diagnosis Procedure	168	
Diagnosis Procedure	130	INSUFFICIENT COOLING	170	
Component Inspection (Motor)	133	Description	170	O
Component Inspection (PBR)	134	Diagnosis Procedure	170	
B2768, B2769, B276A AROMA MOTOR	135	INSUFFICIENT HEATING	171	P
DTC Logic	135	Description	171	
Diagnosis Procedure	135	Diagnosis Procedure	171	
Component Inspection (Motor)	138	INTELLIGENT KEY INTERLOCK FUNCTION DOES NOT OPERATE	172	
Component Inspection (PBR)	139	Description	172	
B276B, B276C, B276D HUMIDITY SENSOR..	140	Diagnosis Procedure	172	
DTC Logic	140			

NORMAL OPERATING CONDITION	173	Exploded View	183
Description	173	MODE DOOR MOTOR	183
REMOVAL AND INSTALLATION	174	MODE DOOR MOTOR : Removal and Installation.	183
MULTIFUNCTION SWITCH	174	AIR MIX DOOR MOTOR	184
Removal and Installation	174	AIR MIX DOOR MOTOR : Removal and Installation	184
A/C AUTO AMP.	175	INTAKE DOOR MOTOR	184
Exploded View	175	INTAKE DOOR MOTOR : Removal and Installation	184
Removal and Installation	175	UPPER VENTILATOR DOOR MOTOR	184
AMBIENT SENSOR	176	UPPER VENTILATOR DOOR MOTOR : Removal and Installation	184
Removal and Installation	176	REAR MODE DOOR MOTOR	184
IN-VEHICLE SENSOR	177	REAR MODE DOOR MOTOR : Removal and Installation	185
Removal and Installation	177	POWER TRANSISTOR	186
SUNLOAD SENSOR	178	Exploded View	186
Removal and Installation	178	Removal and Installation	186
HUMIDITY SENSOR	179	IONIZER	187
Exploded View	179	Exploded View	187
Removal and Installation	179	Removal and Installation	187
INTAKE SENSOR	180	AROMA UNIT ASSY	188
Exploded View	180	Exploded View	188
Removal and Installation	180	AROMA UNIT	188
INSIDE ODOR DETECTING SENSOR	181	AROMA UNIT : Removal and Installation	188
Exploded View	181	AROMA CARTRIDGE	188
Removal and Installation	181	AROMA CARTRIDGE : Removal and Installation.	188
EXHAUST GAS/OUTSIDE ODOR SENSOR .	182		
Removal and Installation	182		
DOOR MOTOR	183		

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000010099377

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precautions for Removing of Battery Terminal

INFOID:000000010223840

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

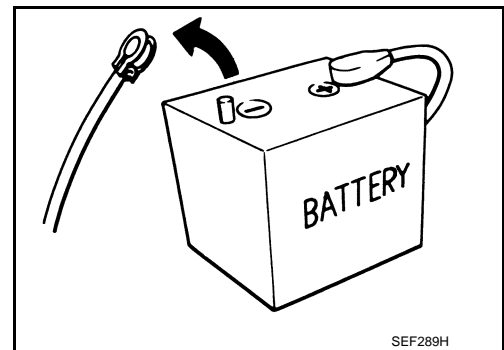

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

COMPONENT PARTS

< SYSTEM DESCRIPTION >


[AUTOMATIC AIR CONDITIONING]

SYSTEM DESCRIPTION

COMPONENT PARTS

AUTOMATIC AIR CONDITIONING SYSTEM

AUTOMATIC AIR CONDITIONING SYSTEM : Component Parts Location INFOID:000000010099378

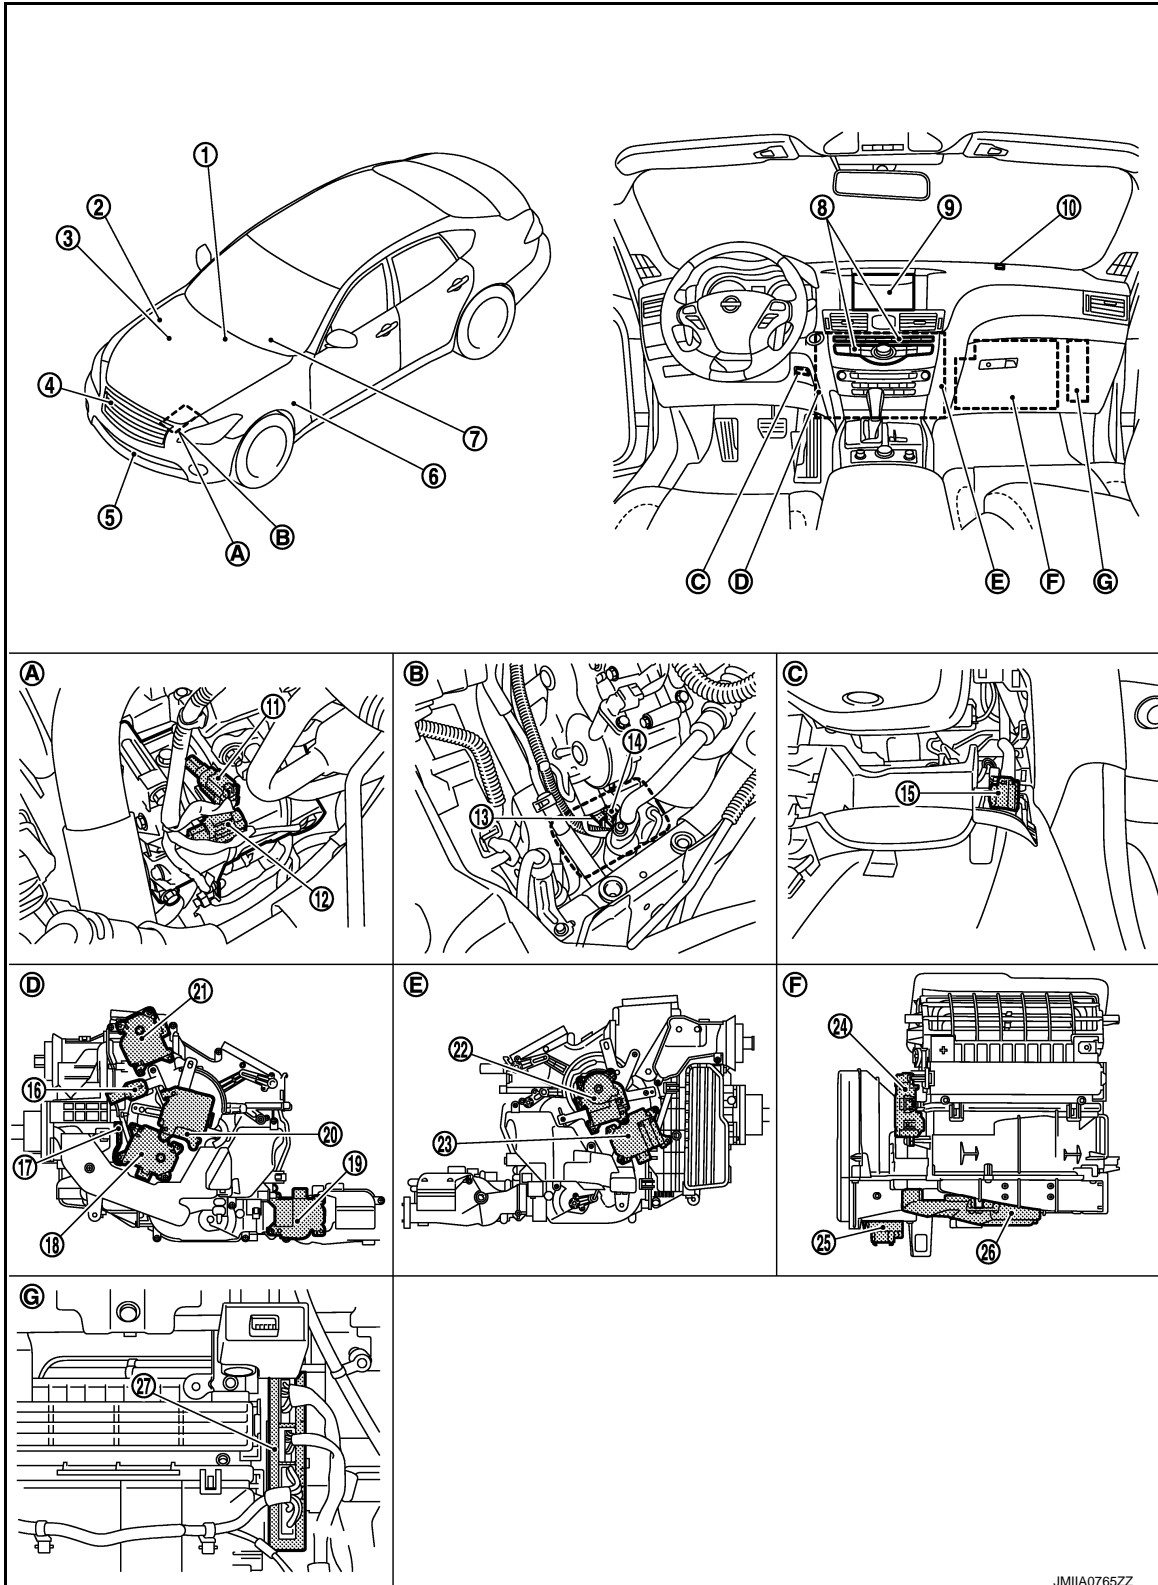

JM1IA0765ZZ

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[AUTOMATIC AIR CONDITIONING]

- | | | | |
|--|--|--|---|
| 1. AV control unit
Refer to AV-11, "Component Parts Location" (base audio without navigation) or AV-148, "Component Parts Location" (BOSE audio with navigation). | 2. IPDM E/R
Refer to PCS-5, "IPDM E/R : Component Parts Location" . | 3. ECM
VQ37VHR: Refer to EC-37, "ENGINE CONTROL SYSTEM : Component Parts Location" .
VK56VD: Refer to EC-984, "ENGINE CONTROL SYSTEM : Component Parts Location" . | A |
| 4. Refrigerant pressure sensor | 5. Ambient sensor | 6. BCM
BCS-4, "BODY CONTROL SYSTEM : Component Parts Location" . | B |
| 7. Combination meter
Refer to MWI-6, "METER SYSTEM : Component Parts Location" . | 8. Multifunction switch | 9. Display | C |
| 10. Sunload sensor | 11. ECV (Electrical Control Valve) | 12. Magnet clutch | D |
| 13. Magnet clutch | 14. ECV (Electrical Control Valve) | 15. In-vehicle sensor | E |
| 16. Aspirator | 17. Intake sensor | 18. Air mix door motor (Driver side) | F |
| 19. Rear mode door motor | 20. Mode door motor (Driver side) | 21. Upper ventilator door motor | G |
| 22. Mode door motor (Passenger side) | 23. Air mix door motor (Passenger side) | 24. Intake door motor | H |
| 25. Power transistor | 26. Blower motor | 27. A/C auto amp. | I |
| A. Compressor (VQ37VHR) | B. Compressor (VK56VD) | C. Lower instrument panel LH is removed | J |
| D. Left side of heater & cooling unit assembly | E. Right side of heater & cooling unit assembly | F. Rear side of blower unit | K |
| G. Instrument lower panel RH is removed | | | L |

AUTOMATIC AIR CONDITIONING SYSTEM : Component Description

INFOID:000000010099379

HAC

Component parts	Description
Blower unit	Blower motor Refer to HAC-11 .
	Intake door motor Refer to HAC-11 .
	Power transistor Refer to HAC-11 .
Compressor	ECV (Electrical Control Valve) ECV (electrical control valve) is installed on the compressor and controls it for emitting appropriate amount of refrigerant when necessary.
	Magnet clutch <ul style="list-style-type: none"> Magnet clutch is the device that drives the compressor with the signal from IPDM E/R. Compressor is driven by the magnet clutch which is magnetized by electric power supply.
Heater & cooling unit assembly	Air mix door motor (Driver side) Refer to HAC-12 .
	Air mix door motor (Passenger side) Refer to HAC-12 .
	Aspirator Refer to HAC-12 .
	Intake sensor Intake sensor measures evaporator fin temperature. This sensor uses thermistor that decreases electrical resistance as temperature increases.
	Mode door motor (Driver side) Refer to HAC-12 .
	Mode door motor (Passenger side) Refer to HAC-12 .
	Rear mode door motor Refer to HAC-12 .
Upper ventilator door motor Refer to HAC-13 .	
Ambient sensor	Ambient sensor measures ambient air temperature. This sensor uses thermistor that decreases electrical resistance as temperature increases.
AV control unit	AV control unit transmits A/C switch operation signal to A/C auto amp. via CAN communication line.

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[AUTOMATIC AIR CONDITIONING]

Component parts	Description
A/C auto amp.	A/C auto amp. controls air conditioning system by inputting and calculating signals from each sensor and each switch. A/C auto amp. has self-diagnosis function. Diagnosis of air conditioning system can be performed quickly.
BCM	BCM transmits key ID signal to A/C auto amp. via CAN communication line.
Display	Display indicates operation status of air conditioning system. Display has touch panel function that can be used to control air conditioning system.
ECM	ECM controls compressor according to status of engine and refrigerant.
Engine coolant temperature sensor	Engine coolant temperature sensor measures engine coolant temperature. This sensor uses thermistor that decreases electrical resistance as temperature increases.
In-vehicle sensor	In-vehicle sensor measures temperature of intake air through aspirator to passenger room. This sensor uses thermistor that decreases electrical resistance as temperature increases.
IPDM E/R	A/C relay is integrated in IPDM E/R. IPDM E/R operates A/C relay when A/C compressor request signal is received from ECM via CAN communication line.
Multifunction switch	Multifunction switch integrates A/C controller and AV operation switch. A/C switch operation signal is transmitted from multifunction switch to AV control unit via communication line.
Refrigerant pressure sensor	Refer to HAC-13 .
Sunload sensor	Sunload sensor measures sunload amount. This sensor is a dual system so that sunload for driver side and passenger side are measured separately. This sensor converts sunload amount to voltage signal by photodiode and transmits to A/C auto amp.

FOREST AIR SYSTEM


COMPONENT PARTS

< SYSTEM DESCRIPTION >

[AUTOMATIC AIR CONDITIONING]

FOREST AIR SYSTEM : Component Parts Location

INFOID:0000000110099380

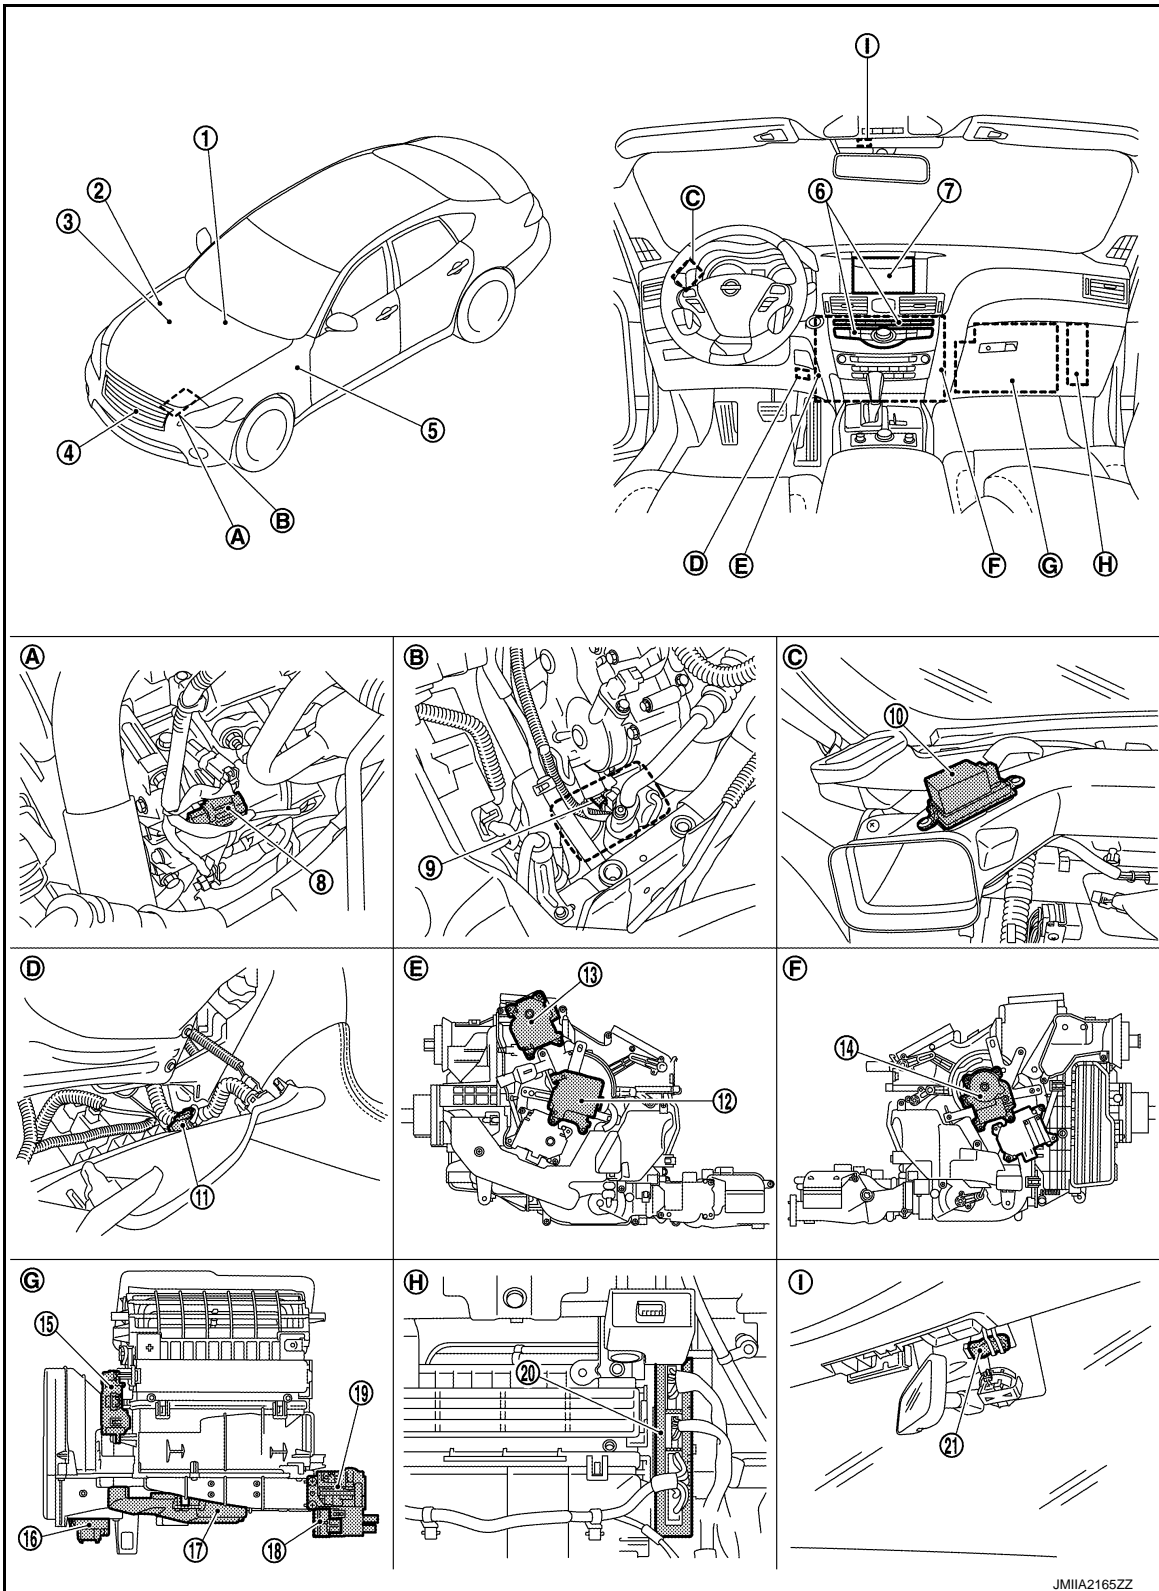

JMIAA2165ZZ

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[AUTOMATIC AIR CONDITIONING]

- | | | |
|---|--|--|
| 1. AV control unit
Refer to AV-148, "Component Parts Location" . | 2. IPDM E/R
Refer to PCS-5, "IPDM E/R : Component Parts Location" . | 3. ECM
VQ37VHR: Refer to EC-37, "ENGINE CONTROL SYSTEM : Component Parts Location" .
VK56VD: Refer to EC-984, "ENGINE CONTROL SYSTEM : Component Parts Location" . |
| 4. Exhaust gas/outside odor detecting sensor | 5. BCM
BCS-4, "BODY CONTROL SYSTEM : Component Parts Location" . | 6. Multifunction switch |
| 7. Display | 8. Magnet clutch | 9. Magnet clutch |
| 10. Ionizer | 11. Inside odor detecting sensor | 12. Mode door motor (Driver side) |
| 13. Upper ventilator door motor | 14. Mode door motor (Passenger side) | 15. Intake door motor |
| 16. Power transistor | 17. Blower motor | 18. Aroma cartridge |
| 19. Aroma motor | 20. A/C auto amp. | 21. Humidity sensor |
| A. Compressor (VQ37VHR) | B. Compressor (VK56VD) | C. Instrument panel assembly is removed |
| D. Instrument lower panel LH is removed | E. Left side of heater & cooling unit assembly | F. Right side of heater & cooling unit assembly |
| G. Rear side of blower unit | H. Instrument lower panel RH is removed | I. Front camera finisher is removed |

FOREST AIR SYSTEM : Component Description

INFOID:000000010099381

Component parts		Description
Blower unit	Aroma cartridge	Aroma cartridge generates 2 kinds of aromas, leaf scent and fragrant wood, which have proven relaxing effects.
	Aroma motor	Refer to HAC-11 .
	Blower motor	Refer to HAC-11 .
	Intake door motor	Refer to HAC-11 .
	Power transistor	Refer to HAC-11 .
Compressor	Magnet clutch	<ul style="list-style-type: none"> Magnet clutch is the device that drives the compressor with the signal from IPDM E/R. Compressor is driven by the magnet clutch which is magnetized by electric power supply.
Heater & cooling unit assembly	Mode door motor (Driver side)	Refer to HAC-12 .
	Mode door motor (Passenger side)	Refer to HAC-12 .
	Upper ventilator door motor	Refer to HAC-13 .
AV control unit		AV control unit transmits A/C switch operation signal to A/C auto amp. via CAN communication line.
A/C auto amp.		A/C auto amp. controls Forest Air system by inputting and calculating signals from each sensor and each switch. A/C auto amp. has self-diagnosis function. Diagnosis of Forest Air system can be performed quickly.
BCM		BCM transmits key ID signal to A/C auto amp. via CAN communication line.
Display		Display indicates operation status of Forest Air system. Display has touch panel function that can be used to control Forest Air system.
ECM		ECM controls compressor according to status of engine and refrigerant.
Exhaust gas/outside odor detecting sensor		Exhaust gas/outside odor detecting sensor measures unpleasant odor outside of passenger room. In addition to previous exhaust gas detection function, unpleasant odor in ambient atmosphere is measured.

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[AUTOMATIC AIR CONDITIONING]

Component parts	Description
Humidity sensor	Humidity sensor measures windshield temperature and passenger room humidity so that fogging on windshield is judged.
Inside odor detecting sensor	Inside odor detecting sensor measures odor of cigarettes, foods, and other objects in passenger room.
Ionizer	Ionizer generates an approximately equal proportional amount of positive and negative ions in the air.
IPDM E/R	A/C relay is integrated in IPDM E/R. IPDM E/R operates A/C relay when A/C compressor request signal is received from ECM via CAN communication line.
Multifunction switch (FOREST switch)	FOREST switch is located in multifunction switch. Forest Air system can be operated when FOREST switch is pressed.

BLOWER UNIT

BLOWER UNIT : Aroma Motor


INFOID:000000010099382

- Aroma motor consists of motor that drives door and PBR (Potentio Balance Register) that detects door position.
- Motor operates aroma door according to control signal from A/C auto amp.
- PBR (Potentio Balance Register) transmits PBR feedback signal to A/C auto amp. according to motor position.
- According to PBR feedback signal, A/C auto amp. monitors that motor is in an appropriate door position.

BLOWER UNIT : Blower Motor

INFOID:000000010099383

Brush motor, that rotates coil while brush functions as contact points, is adopted for blower motor. Rotation speed changes according to voltage from power transistor.

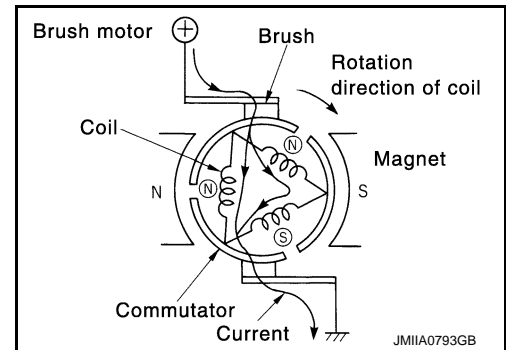

BLOWER UNIT : Intake Door Motor

INFOID:000000010099384

- Intake door motor consists of motor that drives door and PBR (Potentio Balance Register) that detects door position.
- Motor operates intake door according to control signal from A/C auto amp.
- PBR (Potentio Balance Register) transmits PBR feedback signal to A/C auto amp. according to motor position.
- According to PBR feedback signal, A/C auto amp. monitors that motor is in an appropriate door position.

BLOWER UNIT : Power Transistor

INFOID:000000010099385

- Power transistor, that uses MOS field effect transistor, is adopted for blower motor speed control.
- NOTE:**
MOS field effect transistor is a transistor for which the gate portion is composed of a metal electrode on an oxide layer of semiconductor. Field effect transistor is controlled by voltage, while ordinary transistor is controlled by current. Electrode of field effect transistor is called source, drain, or gate, while electrode of ordinary transistor is called emitter, collector, or base.
- Power transistor continuously controls voltage to blower motor (approximately 0 to 16 V), according to gate voltage from A/C auto amp.
 - This power transistor does not require a HI relay even when the maximum voltage is applied to blower motor at HI status, because voltage drop is nominal.

HEATER & COOLING UNIT ASSEMBLY

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[AUTOMATIC AIR CONDITIONING]

HEATER & COOLING UNIT ASSEMBLY : Air Mix Door Motor (Driver Side)

INFOID:0000000010099386

- Air mix door motor (driver side) consists of motor that drives door and PBR (Potentio Balance Register) that detects door position.
- Motor operates air mix door (driver side) according to control signal from A/C auto amp.
- PBR (Potentio Balance Register) transmits PBR feedback signal to A/C auto amp. according to motor position.
- According to PBR feedback signal, A/C auto amp. monitors that motor is in an appropriate door position.

HEATER & COOLING UNIT ASSEMBLY : Air Mix Door Motor (Passenger Side)


INFOID:0000000010099387

- Air mix door motor (passenger side) consists of motor that drives door and PBR (Potentio Balance Register) that detects door position.
- Motor operates air mix door (passenger side) and rear air mix door according to control signal from A/C auto amp.
- PBR (Potentio Balance Register) transmits PBR feedback signal to A/C auto amp. according to motor position.
- According to PBR feedback signal, A/C auto amp. monitors that motor is in an appropriate door position.

HEATER & COOLING UNIT ASSEMBLY : Aspirator

INFOID:0000000010099388

The aspirator generates the vacuum by the air blown from the heater & cooling unit and draws the air of the passenger room to the in-vehicle sensor area via the aspirator duct.

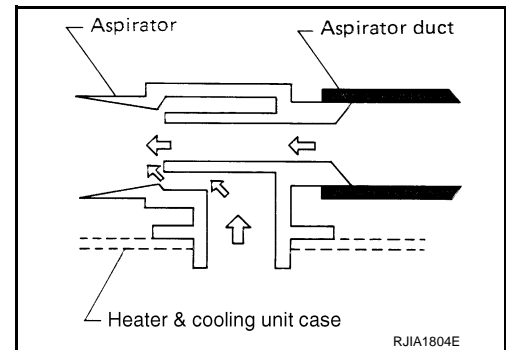

HEATER & COOLING UNIT ASSEMBLY : Mode Door Motor (Driver Side)

INFOID:0000000010099389

- Mode door motor (driver side) consists of motor that drives door and PBR (Potentio Balance Register) that detects door position.
- Motor operates ventilator door (driver side), foot door (driver side) and defroster door according to control signal from A/C auto amp.
- PBR (Potentio Balance Register) transmits PBR feedback signal to A/C auto amp. according to motor position.
- According to PBR feedback signal, A/C auto amp. monitors that motor is in an appropriate door position.

HEATER & COOLING UNIT ASSEMBLY : Mode Door Motor (Passenger side)

INFOID:0000000010099390

- Mode door motor (passenger side) consists of motor that drives door and PBR (Potentio Balance Register) that detects door position.
- Motor operates ventilator door (passenger side) and foot door (passenger side) according to control signal from A/C auto amp.
- PBR (Potentio Balance Register) transmits PBR feedback signal to A/C auto amp. according to motor position.
- According to PBR feedback signal, A/C auto amp. monitors that motor is in an appropriate door position.

HEATER & COOLING UNIT ASSEMBLY : Rear Mode Door Motor

INFOID:0000000010099391

- Rear mode door motor consists of motor that drives door and PBR (Potentio Balance Register) that detects door position.
- Motor operates rear mode door according to control signal from A/C auto amp.
- PBR (Potentio Balance Register) transmits PBR feedback signal to A/C auto amp. according to motor position.

COMPONENT PARTS

[AUTOMATIC AIR CONDITIONING]

< SYSTEM DESCRIPTION >

- According to PBR feedback signal, A/C auto amp. monitors that motor is in an appropriate door position.

HEATER & COOLING UNIT ASSEMBLY : Upper Ventilator Door Motor

INFOID:000000010099392


- Upper ventilator door motor consists of motor that drives door and PBR (Potentio Balance Register) that detects door position.
- Motor operates upper ventilator door according to control signal from A/C auto amp.
- PBR (Potentio Balance Register) transmits PBR feedback signal to A/C auto amp. according to motor position.
- According to PBR feedback signal, A/C auto amp. monitors that motor is in an appropriate door position.

Refrigerant Pressure Sensor

INFOID:000000010099393

Description

Refrigerant pressure sensor is installed to upper portion of liquid tank. The refrigerant pressure sensor converts high-pressure side refrigerant pressure into voltage and outputs it to ECM. ECM operates cooling system protection and idle speed control according to voltage value that is input.

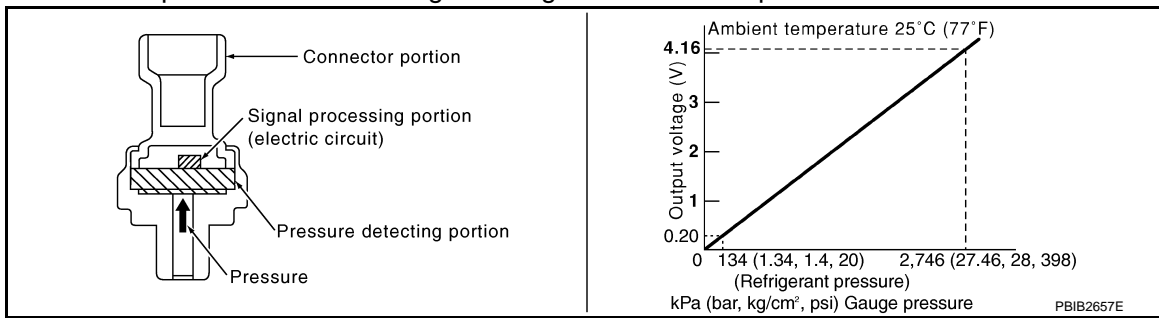

Structure and operation

The refrigerant pressure sensor is a capacitance type sensor. It consists of a pressure detection area and a signal processing area. The pressure detection area, which is a variable capacity condenser, changes internal static capacitance according to pressure force. The signal processing area detects the static capacitance of the pressure detection area, converts the static capacitance into a voltage value, and transmits the voltage value to ECM.


A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

SYSTEM

AUTOMATIC AIR CONDITIONING SYSTEM

AUTOMATIC AIR CONDITIONING SYSTEM : System Diagram

INFOID:00000001009394

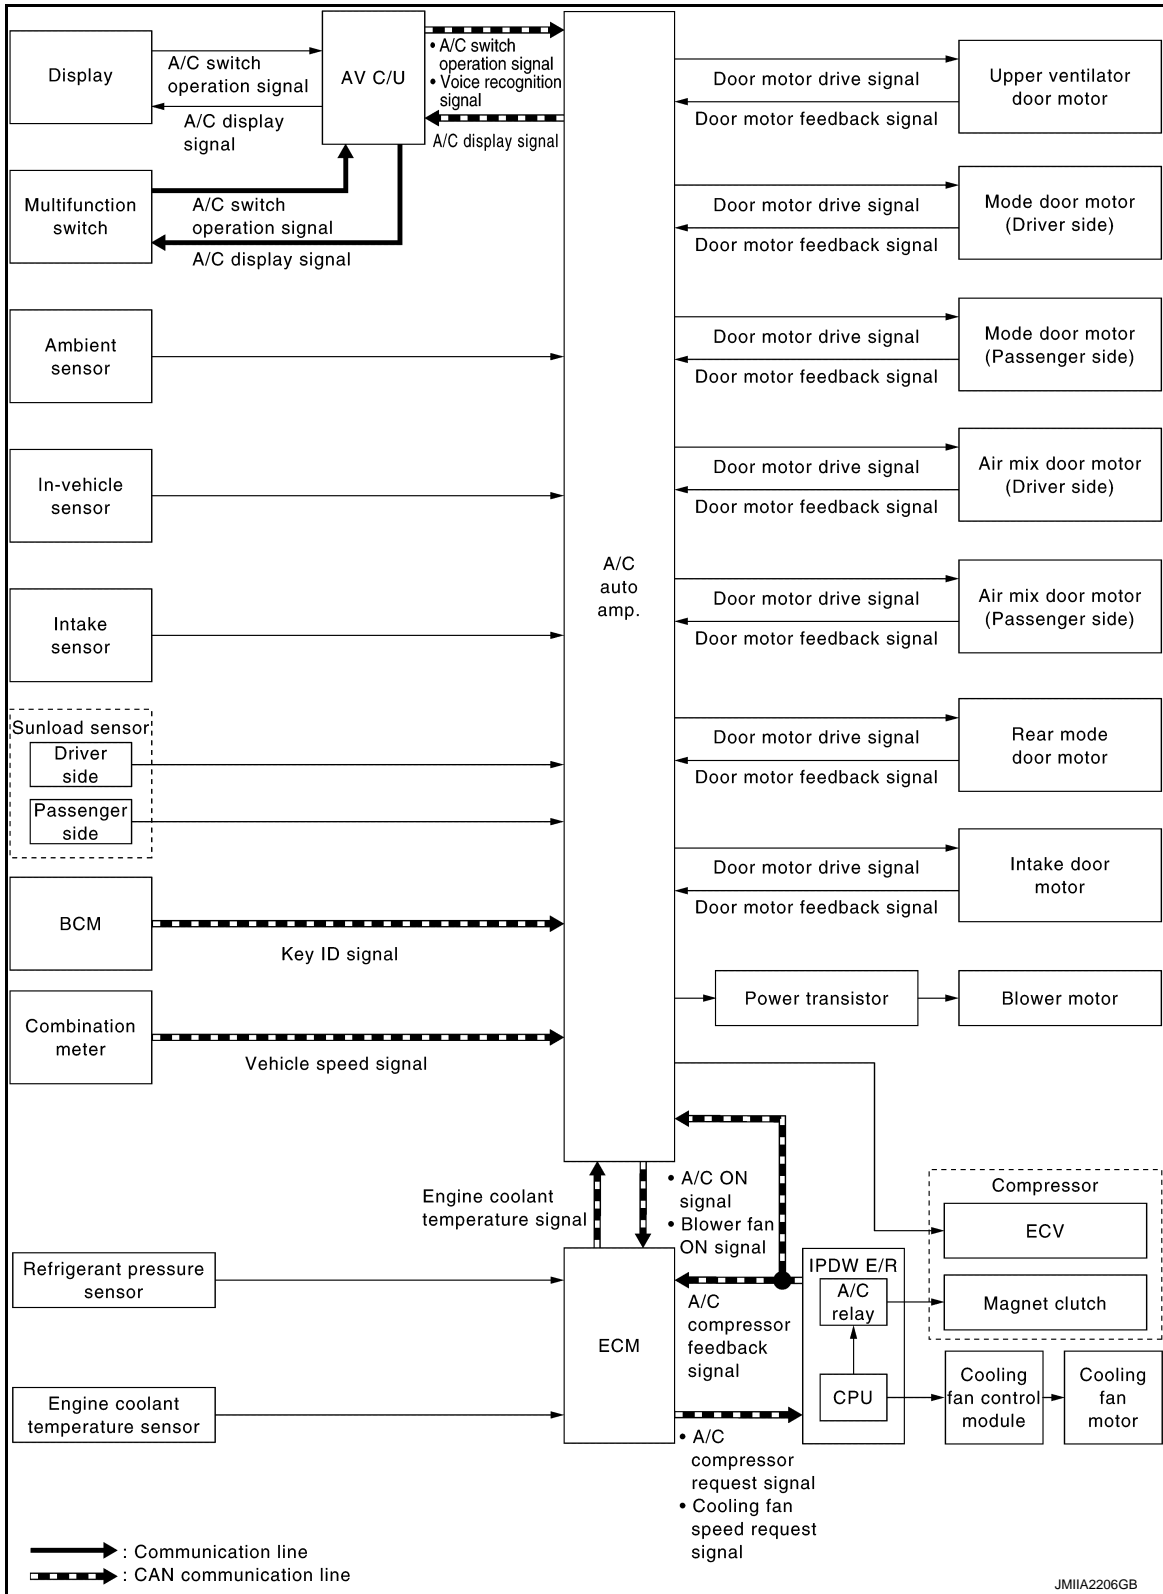

SYSTEM

< SYSTEM DESCRIPTION >

[AUTOMATIC AIR CONDITIONING]

AUTOMATIC AIR CONDITIONING SYSTEM : System Description

INFOID:0000000110099395

- Automatic air conditioning system is controlled by each function of A/C auto amp., ECM, IPDM E/R and BCM.

Control by A/C auto amp.

- [HAC-15, "AUTOMATIC AIR CONDITIONING SYSTEM : Air Flow Control"](#)
- [HAC-16, "AUTOMATIC AIR CONDITIONING SYSTEM : Air Inlet Control"](#)
- [HAC-16, "AUTOMATIC AIR CONDITIONING SYSTEM : Air Inlet Control"](#)
- [HAC-17, "AUTOMATIC AIR CONDITIONING SYSTEM : Air Outlet Control"](#)
- [HAC-17, "AUTOMATIC AIR CONDITIONING SYSTEM : Compressor Control"](#)
- [HAC-17, "AUTOMATIC AIR CONDITIONING SYSTEM : Door Control"](#)
- [HAC-21, "AUTOMATIC AIR CONDITIONING SYSTEM : Temperature Control"](#)
- [HAC-21, "AUTOMATIC AIR CONDITIONING SYSTEM : Intelligent Key Interlock Function"](#)
- Correction for input value of each sensor

Ambient sensor (setting temperature correction)

- A/C auto amp. controls passenger room temperature so that the optimum level always matches the temperature level that passenger may feel. Correction is applied to the target temperature that is set using temperature control dial, according to ambient temperature detected by ambient sensor.

In-vehicle sensor (setting temperature correction)

- Passenger room temperature from in-vehicle sensor is corrected for each air conditioning control (driver side and passenger side)

Intake sensor (intake temperature correction)

- A/C auto amp. performs correction to change recognition intake temperature of A/C auto amp. more quickly when difference is larger between recognition intake temperature and intake temperature from intake temperature sensor. The correction is performed to change recognition intake temperature more slowly when difference is smaller.

Sunload sensor (sunload amount correction)

- Sunload amount from sunload sensor is corrected for each air conditioning control (driver side and passenger side).
- A/C auto amp. performs correction to change recognition sunload amount of A/C auto amp. slowly when sunload amount changes excessively, for example when entering or exiting a tunnel.

Control by ECM

- Cooling fan control
Refer to [EC-63, "COOLING FAN CONTROL : System Description"](#) (VQ37VHR) or [EC-1011, "COOLING FAN CONTROL : System Description"](#) (VK56VD).
- Air conditioning cut control
Refer to [EC-61, "AIR CONDITIONING CUT CONTROL : System Description"](#) (VQ37VHR) or [EC-1017, "AIR CONDITIONING CUT CONTROL : System Description"](#) (VK56VD).

Control by IPDM E/R

- Relay control
Refer to [PCS-6, "RELAY CONTROL SYSTEM : System Description"](#).
- Cooling fan control
Refer to [PCS-9, "POWER CONTROL SYSTEM : System Description"](#).

Control by BCM

- Intelligent key interlock function.
Refer to [DLK-14, "INTELLIGENT KEY SYSTEM : System Description"](#).
- Various operations of air conditioning system are transmitted from multifunction switch and display to AV control unit via communication line (except display) and from AV control unit to A/C auto amp. via CAN communication. A/C auto amp. sends each indication information to AV control unit via CAN communication. AV control unit displays each type of indication information that is received.

AUTOMATIC AIR CONDITIONING SYSTEM : Air Flow Control

INFOID:0000000110099395

DESCRIPTION

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

SYSTEM


< SYSTEM DESCRIPTION >

[AUTOMATIC AIR CONDITIONING]

- A/C auto amp. changes gate voltage to power transistor and controls air flow in 31 stages based on target air flow. When air flow is to be increased, gate voltage to power transistor increases gradually for preventing excessive large amount of air flow.
- In addition to manual control and automatic control, air flow control is consist of low coolant temperature starting control, fan speed control at door motor operation and fan speed control at voice recognition.

AUTOMATIC AIR FLOW CONTROL

- A/C auto amp. decides target air flow depending on target air mix door opening angle.
- A/C auto amp. changes voltage to power transistor gate and controls air flow in 31 stages, so that target air flow is achieved.
- When air outlet is VENT or B/L, the minimum air flow is changed depending on sunload.

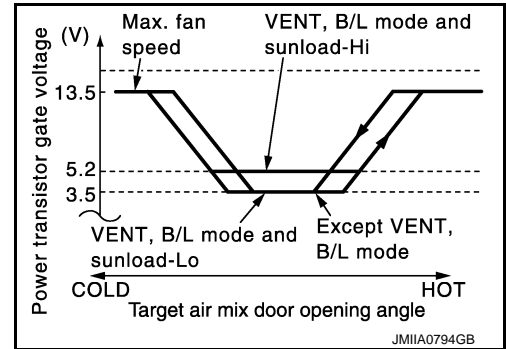

LOW COOLANT TEMPERATURE STARTING CONTROL

A/C auto amp. does not operate blower motor when engine coolant temperature is approximately 37°C (99°F) or less, for preventing a cold discharged air flow. After this, gate voltage applied to power transistor gradually, and blower motor operates.

FAN SPEED CONTROL AT DOOR MOTOR OPERATION

When mode door motor is activated while air flow is more than the specified value, A/C auto amp. reduces temporarily fan speed so that mode door moves smoothly.


FAN SPEED CONTROL AT VOICE RECOGNITION

When the voice control (voice command) switch is operated during air flow automatic control, A/C auto amp. decreases the air flow of the blower motor once and controls the air flow so as not to disturb the voice recognition function. This control continues while voice recognition function is operating.

AUTOMATIC AIR CONDITIONING SYSTEM : Air Inlet Control

INFOID:000000010099397

Intake door automatic control selects FRE, 20 – 80% FRE, or REC depending on a target air mix door opening angle.

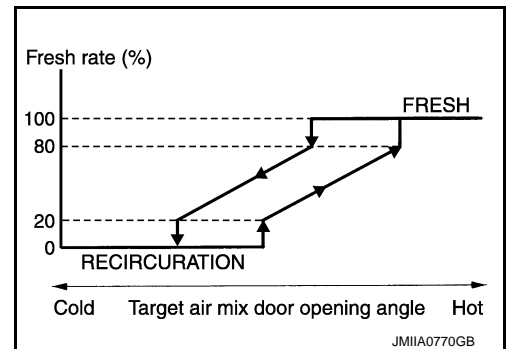

SYSTEM


< SYSTEM DESCRIPTION >

[AUTOMATIC AIR CONDITIONING]

AUTOMATIC AIR CONDITIONING SYSTEM : Air Outlet Control

INFOID:0000000110099398

While air outlet is in automatic control, A/C auto amp. selects the mode door position depending on a target air mix door angle.

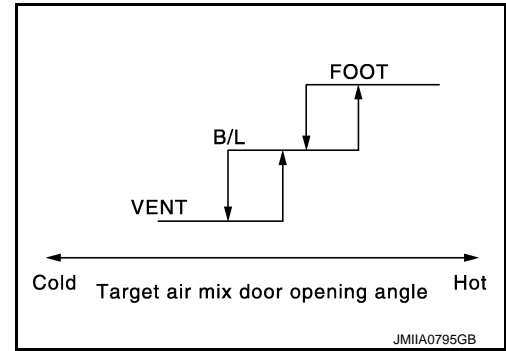

AUTOMATIC AIR CONDITIONING SYSTEM : Compressor Control

INFOID:0000000110099399

DESCRIPTION

- When the compressor activation condition is satisfied while blower motor is activated, A/C auto amp. transmits A/C ON signal and blower fan ON signal to ECM via CAN communication.
- ECM judges that the compressor can be activated depending on each sensors state (refrigerant pressure sensor signal, throttle position sensor signal, and others). And transmits air conditioner relay control signal to IPDM E/R via CAN communication.
- IPDM E/R turns air conditioner relay ON and activates the compressor depending on request from ECM.


COMPRESSOR PROTECTION CONTROL AT PRESSURE MALFUNCTION

When high-pressure side value that is detected by refrigerant pressure sensor is as per the following state, ECM requests IPDM E/R to turn air conditioner relay OFF and stops the compressor.

- 3.12 MPa (31.20 bar, 31.8 kg/cm², 452 psi) or more (When the engine speed is less than 1,500 rpm)
- 2.74 MPa (27.40 bar, 27.9 kg/cm², 397 psi) or more (When the engine speed is 1,500 rpm or more)
- 0.12 MPa (1.20 bar, 1.2 kg/cm², 17 psi) or less

LOW TEMPERATURE PROTECTION CONTROL

- When intake sensor detects that evaporator fin temperature is – 5°C (23°F) or less, A/C auto amp. requests ECM to turn compressor OFF, and stops the compressor.
- When the evaporator fin temperature returns to 1°C (34°F) or more, the compressor is activated.

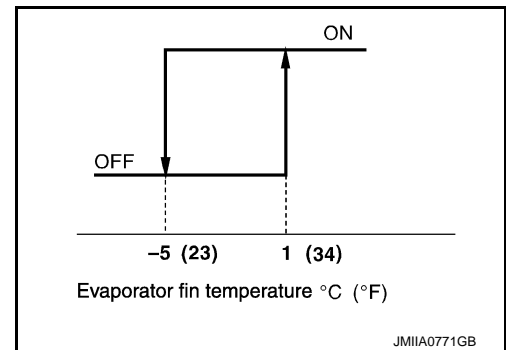

OPERATING RATE CONTROL

When set temperature is other than fully cold or air outlet is “VENT”, “B/L” or “FOOT” A/C auto amp. controls the compressor activation depending on ambient temperature.

AIR CONDITIONING CUT CONTROL

When the engine is running in excessively high load condition, ECM requests IPDM E/R to turn air conditioner relay OFF, and stops the compressor. Refer to [EC-61, "AIR CONDITIONING CUT CONTROL : System Description"](#) (VQ37VHR) or [EC-1017, "AIR CONDITIONING CUT CONTROL : System Description"](#) (VK56VD) for details.

AUTOMATIC AIR CONDITIONING SYSTEM : Door Control

INFOID:0000000110099400

DOOR MOTOR CONTROL

- The A/C auto amp. receives data from each sensor.
- When control signal from A/C auto amp. is received, each door motor of intake, air mix (driver side and passenger side), mode (driver side and passenger side), upper ventilator (driver side and passenger side) and

SYSTEM

< SYSTEM DESCRIPTION >


[AUTOMATIC AIR CONDITIONING]

rear mode operates door to the optimum position based on PBR (Potentio Balance Resistor) door position detection signal.

SWITCHES AND THEIR CONTROL FUNCTIONS

NOTE:

For LH/RH independent temperature and air outlet adjustment function, construction indicated by broken line as shown in the figure is divided to driver side and passenger side by divider plate.

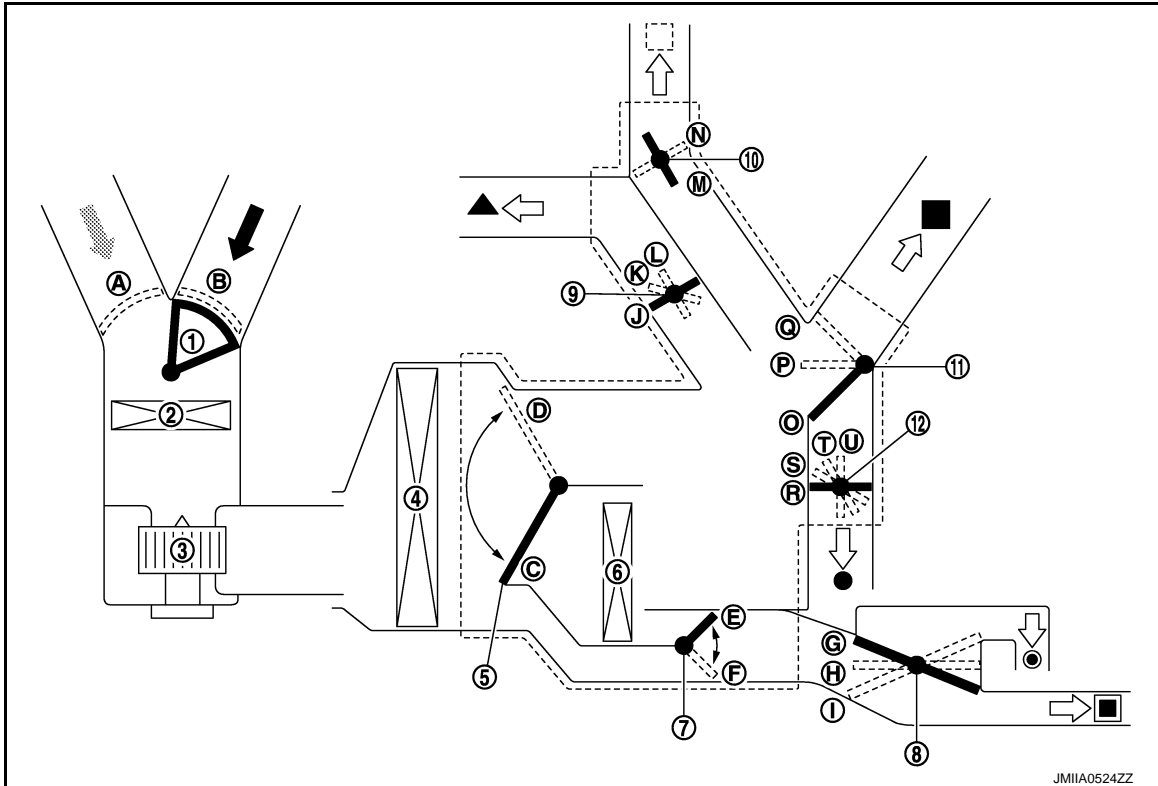

JM1IA0524ZZ

- | | | |
|---------------------------|--|--|
| 1. Intake door | 2. In-cabin microfilter | 3. Blower motor |
| 4. Evaporator | 5. Air mix door (driver side / passenger side) | 6. Heater core |
| 7. Rear air mix door | 8. Rear mode door | 9. Defroster door |
| 10. Upper ventilator door | 11. Ventilator door (driver side / passenger side) | 12. Foot door (driver side / passenger side) |
| Fresh air | Recirculation air | Defroster |
| Upper ventilator | Ventilator | Foot |
| Rear foot | Rear ventilator | |

SYSTEM

< SYSTEM DESCRIPTION >

[AUTOMATIC AIR CONDITIONING]

With Forest Air

Switch position				Door position										
				Ventilator door		Foot door		Defroster door	Rear mode door	Upper ventilator door	Intake door	Air mix door		Rear air mix door
				Driver side	Passenger side	Driver side	Passenger side					Driver side	Passenger side	
AUTO switch	ON			AUTO				—	AUTO					
MODE switch (Driver side)	DUAL: OFF	VENT		O	R	J	G	—						
		B/L		P	T	J	H	—						
		FOOT		Q	U	K	I	—						
		D/F		Q	T	L	I	—						
MODE switch (Driver side)	DUAL: ON	VENT		O	—	R	—	J	—					
		B/L		P	—	T	—	J	—					
		FOOT		Q	—	U	—	K	—					
		D/F		Q	—	T	—	L	—					
MODE switch (Passenger side)	DUAL: ON	VENT		—	O	—	R	—	G	—				
		B/L		—	P	—	T	—	H	—				
		FOOT		—	Q	—	U	—	I	—				
DEF switch	ON			Q	R	L	I	—						
	OFF			—										
Upper Vent	ON			—				M	—					
	OFF			—				N	—					
Intake switch*	FRE			—				B	—					
	REC			—				A	—					
Temperature control switch (Driver side)	DUAL: OFF	18°C (60°F)		—	S	—			C	E				
		18.5°C – 31.5°C (61°F – 89°F)	—							AUTO				
		32°C (90°F)	—							D	F			
Temperature control switch (Driver side)	DUAL: ON	18°C (60°F)		—	S	—			C	—				
		18.5°C – 31.5°C (61°F – 89°F)	—							AUTO	—			
		32°C (90°F)	—							D	—			
Temperature control switch (Passenger side)	DUAL: ON	18°C (60°F)		—	S	—			C	E				
		18.5°C – 31.5°C (61°F – 89°F)	—							AUTO				
		32°C (90°F)	—							D	F			
OFF switch	OFF			Q	U	K	I	—						

*: Inlet status is displayed by indicator when activating automatic control.

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

SYSTEM

< SYSTEM DESCRIPTION >

[AUTOMATIC AIR CONDITIONING]

Without Forest Air

Switch position				Door position										
				Ventilator door		Foot door		Defroster door	Rear mode door	Upper ventilator door	Intake door	Air mix door		Rear air mix door
				Driver side	Passenger side	Driver side	Passenger side					Driver side	Passenger side	
AUTO switch	ON			AUTO						—	AUTO			
MODE switch (Driver side)	DUAL: OFF	VENT		O		R		J	G		—			
		B/L		P		T		J	H		—			
		FOOT		Q		U		K	I		—			
		D/F		Q		T		L	I		—			
MODE switch (Driver side)	DUAL: ON	VENT		O	—	R	—	J			—			
		B/L		P	—	T	—	J			—			
		FOOT		Q	—	U	—	K			—			
		D/F		Q		T		L			—			
MODE switch (Passenger side)	DUAL: ON	VENT		—	O	—	R	—	G		—			
		B/L		—	P	—	T	—	H		—			
		FOOT		—	Q	—	U	—	I		—			
DEF switch	ON			Q		R		L	I		—			
	OFF			—										
Upper Vent	ON			—						M	—			
	OFF			—						N	—			
FRE switch*	ON			—						B	—			
REC switch*	ON			—						A	—			
Temperature control switch (Driver side)	DUAL: OFF	18°C (60°F)		—		S		—			C	E		
		18.5°C – 31.5°C (61°F – 89°F)		—								AUTO		
		32°C (90°F)		—								D	F	
Temperature control switch (Driver side)	DUAL: ON	18°C (60°F)		—		S		—			C	—		
		18.5°C – 31.5°C (61°F – 89°F)		—								AUTO	—	
		32°C (90°F)		—								D	—	
Temperature control switch (Passenger side)	DUAL: ON	18°C (60°F)		—		S		—			C	E		
		18.5°C – 31.5°C (61°F – 89°F)		—								AUTO		
		32°C (90°F)		—								D	F	
OFF switch	OFF			Q		U		K	I	—	—			

*: Inlet status is displayed by indicator when activating automatic control.

AIR DISTRIBUTION

SYSTEM

< SYSTEM DESCRIPTION >

[AUTOMATIC AIR CONDITIONING]


Discharge air flow											
Mode position	Condition				Air outlet / distribution						
					VENT				FOOT		DEF
					Front		Upper	Rear	Front	Rear	
					Center	Side					
	<ul style="list-style-type: none"> DUAL: OFF Rear ventilator: Close 	Upper Vent: ON	Temperature control switch (driver side)	18°C (60°F)	34.5%	34.5%	10.0%	13.0%	8.0%	—	—
				Other than 18°C (60°F)*1	38.0%	38.0%	11.0%	13.0%	—	—	—
			—	—	24.0%	24.0%	10.0%	12.0%	19.0%	11.0%	—
			—	—	—	14.0%	14.0%	7.0%	24.0%	22.0%	19.0%
			—	—	—	11.0%	12.0%	5.0%	20.0%	22.0%	30.0%
			—	—	—	11.0%	—	—	—	—	89.0%
		—	—	—	9.0%	—	7.0%	—	20.0%	64.0%	

- *1: Air blow is also supplied to front foot until passenger room temperature stabilizes when temperature setting is other than 18°C (60°F). At that time, air blowing is the same as 18°C (60°F) setting.
- *2: During automatic defogging control (with Forest Air). Refer to [HAC-25. "FOREST AIR SYSTEM : Automatic Defogging Control"](#).

AUTOMATIC AIR CONDITIONING SYSTEM : Temperature Control

INFOID:000000010099401

- When ignition switch is in the ON position, A/C auto amp. always automatically controls temperature regardless of air conditioning operational state.
- A/C auto amp. calculates the target air mix door opening angle depending on set temperature, in-vehicle temperature, ambient temperature and sunload.
- Air mix door is controlled depending on the comparison of current air mix door opening angle and target air mix door opening angle.
- Regardless of in-vehicle temperature, ambient temperature and sunload, air mix door is fixed at the fully cold position when set temperature is 18.0°C (60°F), and at the fully hot position when set temperature is 32.0°C (90°F).

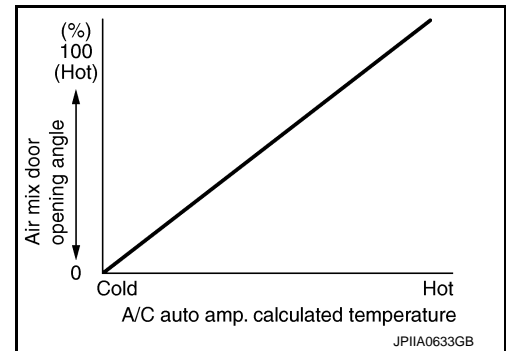

AUTOMATIC AIR CONDITIONING SYSTEM : Intelligent Key Interlock Function

INFOID:000000010099402

DESCRIPTION

- Setting value of air conditioning system when ignition switch is previously OFF can be memorized for each Intelligent Key. Air conditioning system is automatically operated by the setting value.

NOTE:

- Setting value can be memorized for up to 3 Intelligent Keys.
- Interlock items are as per the following table.

Operation	Conditions
Multifunction switch	AUTO switch (ON / OFF)
	Setting temperature (Setting value)
	Air flow (Setting value)
	Air inlet (FRE / REC)
	Air outlet (VENT / B/L / FOOT / D/F / DEF)

SYSTEM

< SYSTEM DESCRIPTION >

[AUTOMATIC AIR CONDITIONING]

Operation	Conditions
"Climate" menu screen	"A/C" (ON / OFF)
	"DUAL" (ON / OFF)
	"Upper Vent" (ON / OFF)

Operation Description

Memory

1. Unlock door using Intelligent Key or driver door request switch.
2. BCM transmits Key ID signal to A/C auto amp. via CAN communication line.
3. When ignition switch turns OFF, A/C auto amp. memorizes setting information (setting temperature, air inlet status, and others) of air conditioning system to memory for each Key ID.

Readout

1. Unlock door using Intelligent Key or driver door request switch.
2. BCM transmits Key ID signal to A/C auto amp. via CAN communication line.
3. When ignition switch turns ON, A/C auto amp. operates automatically air conditioning system according to setting information of Key ID that is received.

NOTE:

When Intelligent Key interlock function operates, "Connection with the key has been done." is displayed.

AUTOMATIC AIR CONDITIONING SYSTEM : Fail-safe

INFOID:0000000010223843

FAIL-SAFE FUNCTION

When a communication malfunction between A/C auto amp. and AV control unit and multifunction switch continued for approximately 30 seconds or more, control the air conditioning under the following conditions.

Compressor	: ON
Air outlet	: AUTO
Air inlet	: FRE (Fresh air intake)
Fan speed	: AUTO
Set temperature	: Setting before communication malfunction

FOREST AIR SYSTEM


SYSTEM

< SYSTEM DESCRIPTION >

[AUTOMATIC AIR CONDITIONING]

FOREST AIR SYSTEM : System Diagram

INFOID:0000000110099404

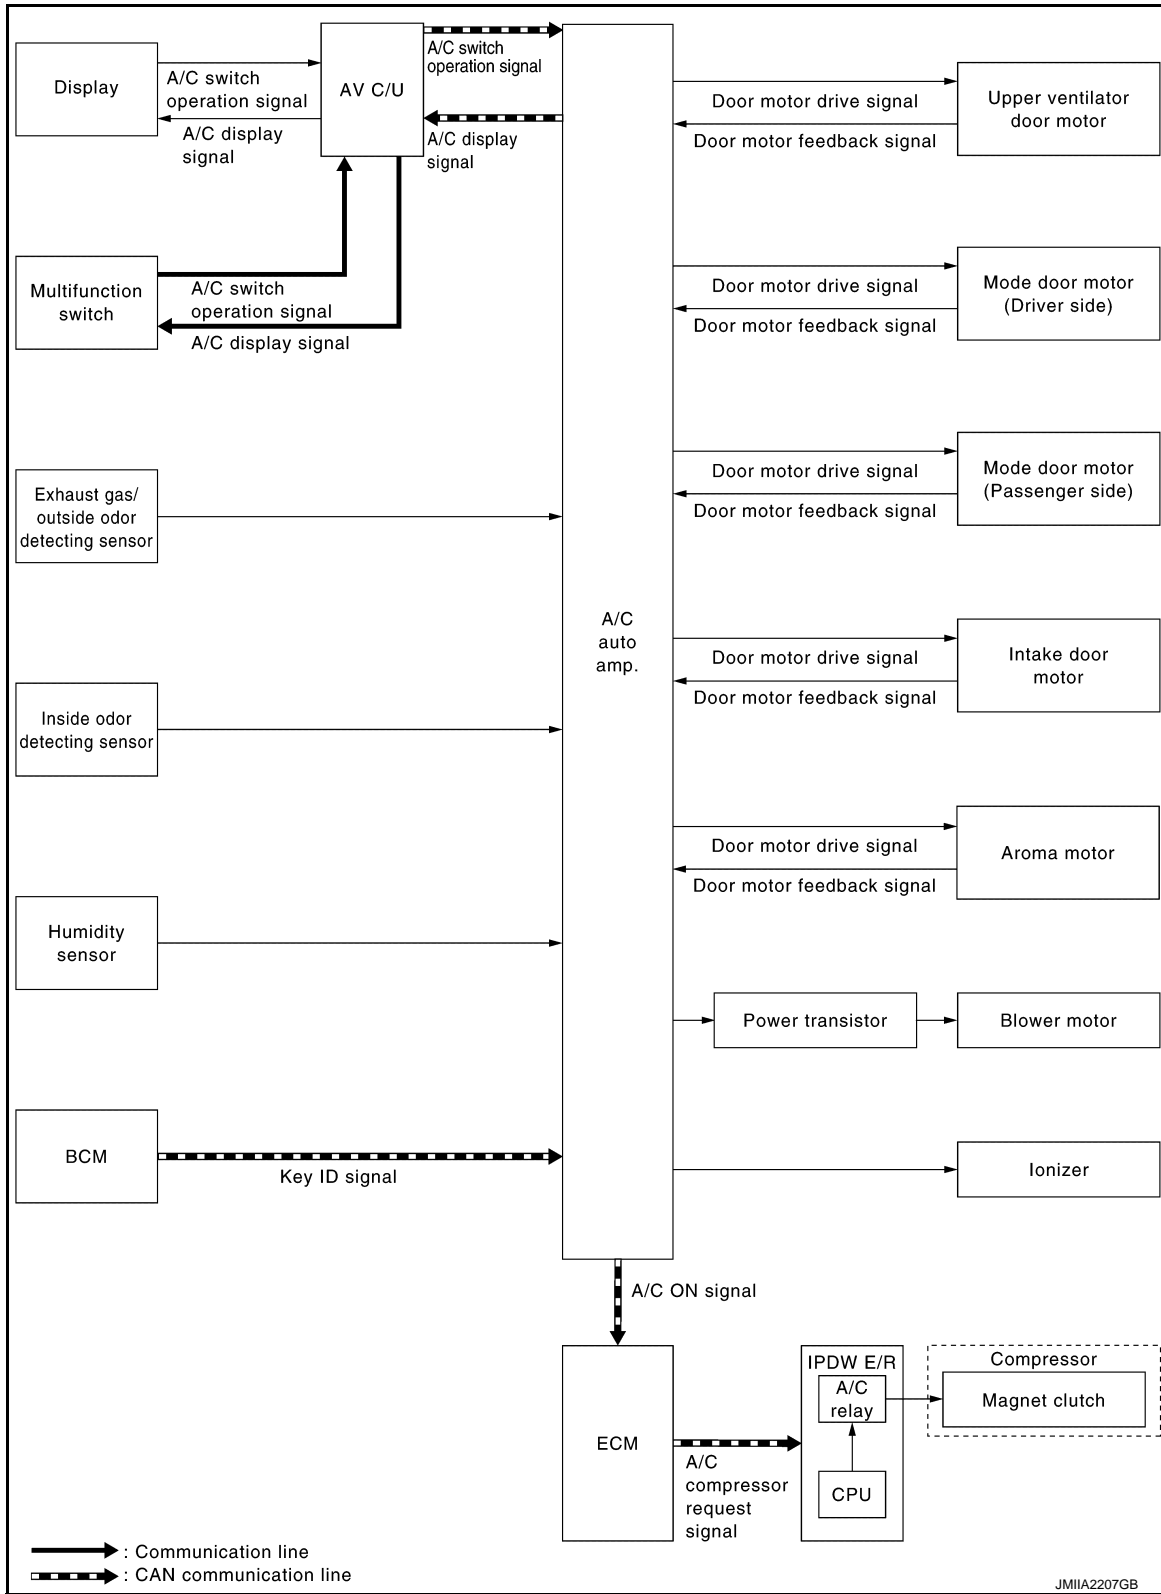

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

FOREST AIR SYSTEM : System Description

INFOID:0000000110099405

- Forest Air system controls passenger room air. It maintains the cleanliness of the passenger room air using a in-cabin microfilter and a combination of each of the following functions. Passenger room air is also controlled for dehumidification, air flow, fragrance, and others, for providing comfortable space in the passenger room.

NOTE:

SYSTEM

< SYSTEM DESCRIPTION >

[AUTOMATIC AIR CONDITIONING]

- Plasmacluster™ ion technology developed by Sharp Corporation is installed in this item.
- Plasmacluster™ is a trademark of Sharp Corporation.
- [HAC-24, "FOREST AIR SYSTEM : Air Flow Control \(Inside Odor Detecting Mechanism\)"](#)
- [HAC-24, "FOREST AIR SYSTEM : Aroma Diffuser Control"](#)
- [HAC-25, "FOREST AIR SYSTEM : Automatic Defogging Control"](#)
- [HAC-25, "FOREST AIR SYSTEM : Automatic Intake Control \(Exhaust Gas/Outside Odor Detecting Mechanism\)"](#)
- [HAC-25, "FOREST AIR SYSTEM : Breezy Air Control"](#)
- [HAC-26, "FOREST AIR SYSTEM : Plasmacluster Control"](#)
- Setting of Forest Air system can be memorized for each Intelligent Key. Refer to [HAC-26, "FOREST AIR SYSTEM : Intelligent Key Interlock Function"](#).
- "Forest Air setting" menu is displayed on screen that can operate and adjust Forest Air system [aroma diffuser control, automatic defogging control, automatic intake control (exhaust gas/outside odor detecting mechanism) and breezy air].
- "Forest Air Info" menu is displayed on screen that can be used to check operation status of Forest Air system visually.
- Various operations of Forest Air system are transmitted from multifunction switch and display to AV control unit via communication line (except display) and from AV control unit to A/C auto amp. via CAN communication. A/C auto amp. sends each indication information to AV control unit via CAN communication. AV control unit displays each indication information that is received.

FOREST AIR SYSTEM : Air Flow Control (Inside Odor Detecting Mechanism)

INFOID:0000000110099406

DESCRIPTION

Inside odor detecting sensor detects passenger room odor (odor of cigarettes, foods, and other objects) in air flow through aspirator. Odor, when it is detected, is removed quickly by slightly increasing air flow and by facilitating supply amount of Plasmacluster™ ions to passenger room and collection effect of in-cabin microfilter.

OPERATION DESCRIPTION

- Air flow control (inside odor detecting mechanism) operates when odor in passenger room is detected while FOREST switch is ON.
- Control status is displayed on "Forest Air Info" screen. Refer to [HAC-32, "FOREST AIR SYSTEM : Switch Name and Function"](#).

NOTE:

- ON/OFF of air flow control (inside odor detecting mechanism) can be changed using "BLOWER MOTOR SETTING" in "WORK SUPPORT" mode of CONSULT. Refer to [HAC-80, "FOREST AIR SYSTEM : Air Flow Control \(Inside Odor Detecting Mechanism\) Setting"](#).
- Air flow control (inside odor detecting mechanism) does not operate when ambient temperature is -2°C (28°F) or less.

FOREST AIR SYSTEM : Aroma Diffuser Control

INFOID:0000000110099407

DESCRIPTION

2 kinds of aromas, leaf scent and fragrant wood, which have proven relaxing effects, are supplied alternately and intermittently to passenger room by outlet air flow of air conditioning system.

OPERATION DESCRIPTION

- Aroma diffuser control operates automatically when FOREST switch is ON and passenger room temperature is in stable status.
- For initial 15 minutes of operation, intermittent operation operates for aroma diffusing. For next 45 minutes, operation stops, preventing effect reduction caused by habituation of sense of smell. The 2 aromas switch alternately every 1 hour.
- Control status is displayed on "Forest Air Info" screen. Refer to [HAC-32, "FOREST AIR SYSTEM : Switch Name and Function"](#).

NOTE:

- ON/OFF of aroma diffuser control can be changed by "Aroma" in "Forest Air Setting" menu. Refer to [HAC-35, "FOREST AIR SYSTEM : Menu Displayed by Pressing Each Switch"](#).
- Details of aroma diffuser control can be changed using "AROMA SETTING" and "AROMA DIFFUSER SETTING" in "WORK SUPPORT" mode of CONSULT. Refer to [HAC-79, "FOREST AIR SYSTEM : Aroma Fragrance Intensity Setting"](#) and [HAC-79, "FOREST AIR SYSTEM : Aroma Fragrance Type Setting"](#).

FOREST AIR SYSTEM : Automatic Defogging Control

INFOID:000000010099408

DESCRIPTION

- A/C auto amp. detects fogging on windshield and front side window by calculating dew point temperature from glass temperature, passenger room temperature, and passenger room humidity that are detected by humidity sensor located on upper windshield.
- Fogging prevention mode (fresh air intake, compressor ON, and mode position DEF) automatically operates when fogging is detected.
- Previously, dehumidification control continuously operates for preventing fogging. Now, dehumidification control operates only when it is necessary. Excessive dehumidification in passenger room is prevented.

OPERATION DESCRIPTION

- This control operates when fogging is detected while AUTO switch is ON.
- Control status is displayed on "Forest Air Info" screen. Refer to [HAC-32. "FOREST AIR SYSTEM : Switch Name and Function"](#).
- While automatic defogging function is activated, indicator lamp of DEF switch turns ON.
- When A/C auto amp. receives A/C operation signal (DEF switch ON) while automatic defogging function is activated, automatic defogging function stops, and does not activate for a specified period of time.

NOTE:

- ON/OFF and ON/OFF timing of automatic defogging control can be changed by "Auto Defogging Sensitivity" in "Forest Air Setting" menu. Refer to [HAC-35. "FOREST AIR SYSTEM : Menu Displayed by Pressing Each Switch"](#).
- Automatic defogging control does not operate when ambient temperature is -2°C (28°F) or less.

FOREST AIR SYSTEM : Automatic Intake Control (Exhaust Gas/Outside Odor Detecting Mechanism)

INFOID:000000010099409

DESCRIPTION

In addition to air inlet automatic control of automatic air conditioning system, A/C auto amp. controls automatically air inlet according to signal from exhaust gas/outside odor detecting sensor, so that unpleasant outside odor does not enter in passenger room.

OPERATION DESCRIPTION

- Air inlet switches to recirculation when exhaust gas or outside odor is detected while FOREST switch is ON. After that, air inlet switches to fresh air intake when exhaust gas or outside odor becomes not detectable.
- Control status is displayed on "Forest Air Info" screen. Refer to [HAC-32. "FOREST AIR SYSTEM : Switch Name and Function"](#).

NOTE:

- Sensitivity of exhaust gas/outside odor detecting sensor can be changed by "Outside/Inside Air Mix" in "Forest Air Setting" menu. Refer to [HAC-35. "FOREST AIR SYSTEM : Menu Displayed by Pressing Each Switch"](#).
- Automatic intake control (exhaust gas/outside odor detecting mechanism) does not operate when ambient temperature is -2°C (28°F) or less. In this case, control is only for control of automatic air inlet of automatic air conditioning system.

FOREST AIR SYSTEM : Breezy Air Control

INFOID:000000010099410

DESCRIPTION

Air conditioning air flow similar to the air flow of a natural breeze is achieved through the random control of air flow switching timing from the upper ventilator and center ventilator.

OPERATION DESCRIPTION

- This control automatically operates when FOREST switch is ON, air outlet mode is VENT or FOOT, and passenger room temperature is in stable status.
- Control status is displayed on "Forest Air Info" screen. Refer to [HAC-32. "FOREST AIR SYSTEM : Switch Name and Function"](#).

NOTE:

- ON/OFF of breezy air control can be changed by "Breeze Mode" in "Forest Air Setting" menu. Level of breezy air can be selected by "Fan Speed Variance" in "Forest Air Setting" menu. Refer to [HAC-35. "FOREST AIR SYSTEM : Menu Displayed by Pressing Each Switch"](#).
- Breezy air control does not operate when air outlet is B/L, D/F, or DEF mode.

FOREST AIR SYSTEM : Plasmacluster Control

INFOID:000000010099411

DESCRIPTION

Plasmacluster™ control eliminates microbes and reduces odor on interior surface by including high density Plasmacluster™ ion in air conditioning outlet air flow.

OPERATION DESCRIPTION

- Plasmacluster™ control operates by interlocking to blower motor. Plasmacluster™ control operates when blower motor operates.
- Control status is displayed on air conditioning system display screen and “Forest Air Info” screen. Refer to [HAC-32. "FOREST AIR SYSTEM : Switch Name and Function"](#).

NOTE:

- Plasmacluster™ ion technology developed by Sharp Corporation is installed in this item.
- Plasmacluster™ is a trademark of Sharp Corporation.

FOREST AIR SYSTEM : Intelligent Key Interlock Function

INFOID:000000010099412

DESCRIPTION

- Setting value of Forest Air system when ignition switch is previously OFF can be memorized for each Intelligent Key. Forest Air system is automatically operated by the setting value.

NOTE:

- Setting value can be memorized for up to 3 Intelligent Keys.
- Interlock items are as per the following table.

Operation	Conditions
Multifunction switch	FOREST switch (ON / OFF)
“Forest Air Setting” menu screen	“Breeze Mode” (ON / OFF)
	“Fan Speed Variance” (Low / High)
	“Outside/Inside Air Mix” (Setting value)
	“Auto Defogging Sensitivity” (Setting value)
	“Aroma” (ON / OFF)

Operation Description

Memory

1. Unlock door using Intelligent Key or driver door request switch.
2. BCM transmits Key ID signal to A/C auto amp. via CAN communication line.
3. When ignition switch turns OFF, A/C auto amp. memorizes setting information (“Breeze Mode” status, “Aroma” status, and others) of Forest Air system to memory for each Key ID.

Readout

1. Unlock door using Intelligent Key or driver door request switch.
2. BCM transmits Key ID signal to A/C auto amp. via CAN communication line.
3. When ignition switch turns ON, A/C auto amp. operates automatically Forest Air system according to setting information of Key ID that is received.

NOTE:

When Intelligent Key interlock function operates, “Connection with the key has been done.” is displayed.


OPERATION

AUTOMATIC AIR CONDITIONING SYSTEM

AUTOMATIC AIR CONDITIONING SYSTEM : Switch Name and Function INFOID:0000000010099413


OPERATION AND DISPLAY (WITH FOREST AIR)

A/C Display

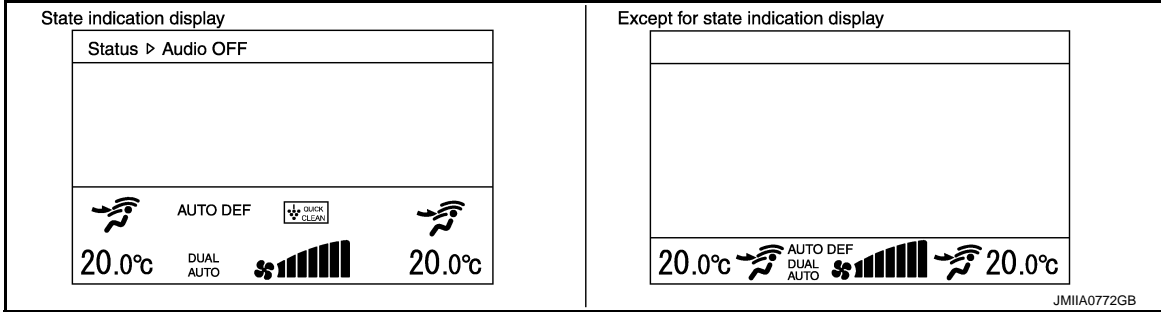

- Air conditioning system state is indicated on the display.
- When “Status” on multifunction switch is pressed while air conditioning system is in the ON position, the display changes to state indication display of air conditioning system. When air conditioning system is operated while navigation system or audio system is displayed, air conditioning system state is indicated in the lower portion of display for several seconds.
- When MODE switch is pressed while air conditioning system is in the OFF position, state indication display is indicated for several seconds.

A/C Controller (Multifunction switch)

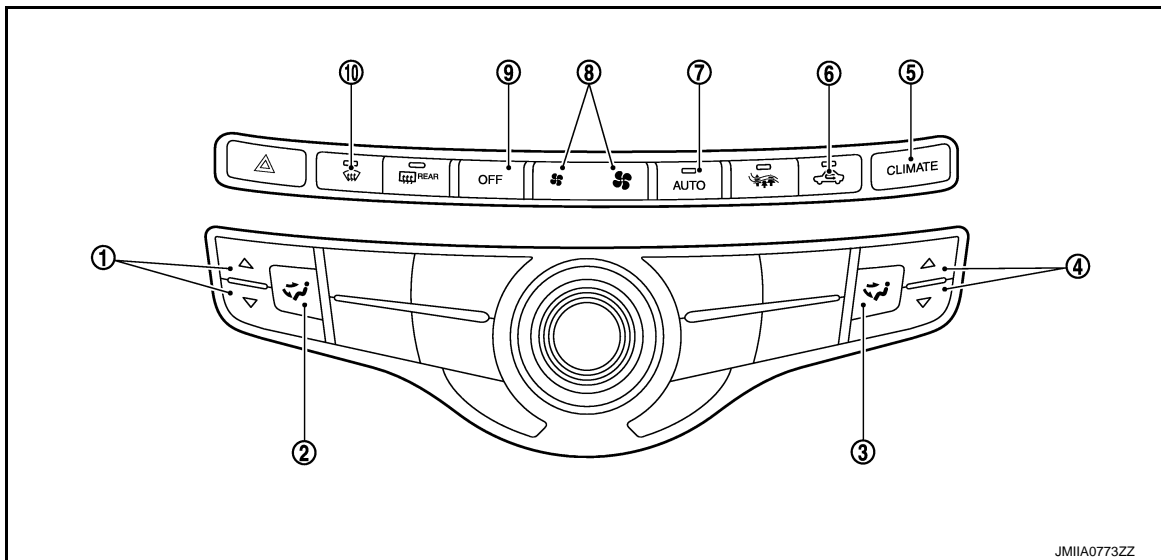

- | | | |
|--|------------------------------|---------------------------------|
| 1. Temperature control switch (Driver side) | 2. MODE switch (Driver side) | 3. MODE switch (Passenger side) |
| 4. Temperature control switch (Passenger side) | 5. CLIMATE switch | 6. Intake switch |
| 7. AUTO switch | 8. Fan switch | 9. OFF switch |
| 10. DEF switch | | |

Switch Operation

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

OPERATION

< SYSTEM DESCRIPTION >

[AUTOMATIC AIR CONDITIONING]

Switch name	Function
AUTO switch	<p>When this switch is pressed, switch indicator lamp and “AUTO” indicator on display“, and then air conditioning system starts automatic control.</p> <p>NOTE: When air inlet is not selected manually, air inlet changes to automatic control.</p>
CLIMATE switch	<p>“Climate” menu is indicated on display when this switch is pressed.</p>
DEF switch	<p>DEF mode (switch indicator lamp) changes between ON ⇔ OFF each time this switch is pressed.</p> <p>When DEF switch is pressed while air conditioning system is in the ON position</p> <ul style="list-style-type: none"> • When DEF mode turns ON, air conditioning system becomes the following status. <ul style="list-style-type: none"> - Air flow: Automatic control (If fan speed other than “AUTO” is selected before pressing DEF switch, fan speed is manual control) - Air inlet: Fresh air intake - Air outlet: DEF - Compressor: ON • When DEF mode turns OFF, air conditioning system status returns to the previous status before DEF mode is selected. <p>When DEF switch is pressed while air conditioning system is in the OFF position</p> <ul style="list-style-type: none"> • Air conditioning system turns ON and becomes the following status. <ul style="list-style-type: none"> - Air flow: Automatic control - Air inlet: Fresh air intake - Air outlet: DEF - Compressor: ON • When DEF mode turns OFF, entire air conditioning system is set to auto mode. <p>NOTE: Automatic control is released (“AUTO” is not displayed) when this switch is pressed while air conditioning system is in automatic control (“AUTO” is displayed).</p>
Fan switch	<p>Fan speed is selected within a range of 1st – 7th speed using this switch.</p> <p>NOTE:</p> <ul style="list-style-type: none"> • Air conditioning system turns ON when this switch is operated while air conditioning system is in OFF status. • Automatic air flow control is released (“AUTO” is not displayed) when this switch is pressed while air conditioning system is in automatic control (“AUTO” is displayed).
Intake switch	<ul style="list-style-type: none"> • Air inlet changes between recirculation (REC) ⇔ fresh air intake (FRE) each time this switch is pressed. <ul style="list-style-type: none"> - Intake switch indicator ON: Recirculation - Intake switch indicator OFF: Fresh air intake • Press and held for 2 seconds or more, intake switch indicator blinks 2 times and air inlet is set to automatic control. (Intake switch indicator indicates air inlet state during automatic control.) <p>NOTE: Air inlet can be changed when air conditioning system is in the OFF position.</p>
MODE switch (Driver side)	<p>Air outlet can be changes from VENT ⇒ B/L ⇒ FOOT ⇒ D/F ⇒ VENT each time this switch is pressed.</p> <p>NOTE:</p> <ul style="list-style-type: none"> • Air outlet can be changed when air conditioning system is in the OFF position. • Automatic air outlet control is released (“AUTO” is not displayed) when this switch is pressed while air conditioning system is in automatic control (“AUTO” is displayed).
MODE switch (Passenger side)	<ul style="list-style-type: none"> • The system is set to LH/RH independent status (“DUAL” displays) by operating this switch. Air outlet of passenger side can be changed without changing air outlet of driver side. • Air outlet can be changes from VENT ⇒ B/L ⇒ FOOT ⇒ VENT each time this switch is pressed. <p>NOTE:</p> <ul style="list-style-type: none"> • Air outlet can be changed when air conditioning system is in the OFF position. • Automatic air outlet control is released (“AUTO” is not displayed) when this switch is pressed while air conditioning system is in automatic control (“AUTO” is displayed). • When DEF mode is ON, MODE switch (passenger side) is inoperative.
OFF switch	<ul style="list-style-type: none"> • When this switch is pressed, air conditioning system turns OFF. • When air conditioning system turns OFF, air inlet and air outlet become the following status. <ul style="list-style-type: none"> - Air inlet: Automatic control - Air outlet: FOOT

OPERATION

< SYSTEM DESCRIPTION >


[AUTOMATIC AIR CONDITIONING]

Switch name	Function
Temperature control switch (Driver side)	<p>Setting temperature is selected using this switch within a range between 18°C (60°F) and 32°C (90°F) at a rate of 0.5°C (1.0°F) per adjustment.</p> <ul style="list-style-type: none"> ▲ Press: Setting temperature increases ▼ Press: Setting temperature decreases <p>NOTE: When air conditioning system is OFF, setting temperature can be selected only while air conditioning system status screen [only when MODE switch (driver side) is pressed] is indicated on display.</p>
Temperature control switch (Passenger side)	<ul style="list-style-type: none"> The system is set to LH/RH independent status ("DUAL" displays) by operating this switch. Outlet air flow temperature of passenger side can be changed without changing outlet air flow temperature of driver side. Setting temperature is selected using this switch within a range between 18°C (60°F) and 32°C (90°F) at a rate of 0.5°C (1.0°F) per adjustment. ▲ Press: Setting temperature increases ▼ Press: Setting temperature decreases <p>NOTE:</p> <ul style="list-style-type: none"> When air conditioning system is OFF, setting temperature can be selected only while air conditioning system status screen [only when MODE switch (passenger side) is pressed] is indicated on display. When DEF mode is ON, temperature control switch (passenger side) is inoperative.


OPERATION AND DISPLAY (WITHOUT FOREST AIR)

A/C Display

- With navigation

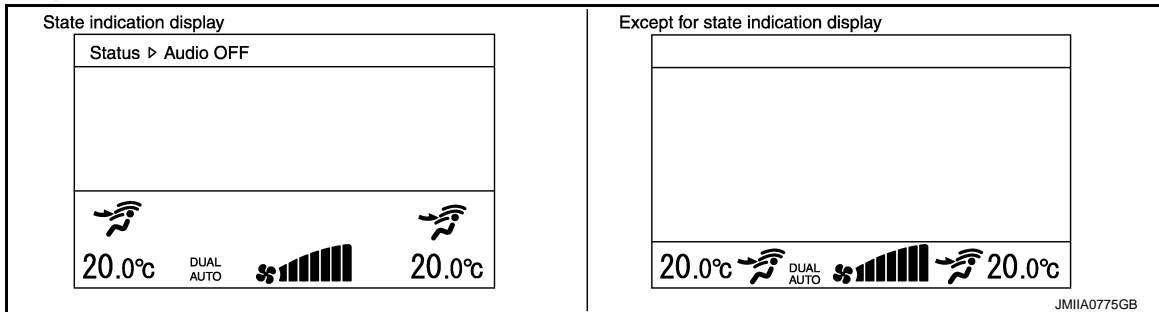

- Without navigation

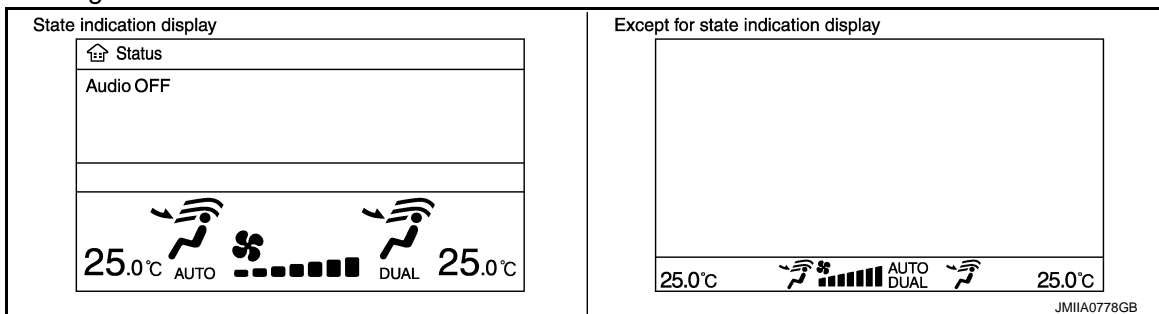


- Air conditioning system state is indicated on the display.
- When "Status" on multifunction switch is pressed while air conditioning system is in the ON position, the display changes to state indication display of air conditioning system. When air conditioning system is operated while navigation system (with navigation) or audio system is displayed, air conditioning system state is indicated in the lower portion of display for several seconds.
- When MODE switch is pressed while air conditioning system is in the OFF position, state indication display is indicated for several seconds.

A/C Controller (Multifunction switch)

OPERATION

< SYSTEM DESCRIPTION >

[AUTOMATIC AIR CONDITIONING]

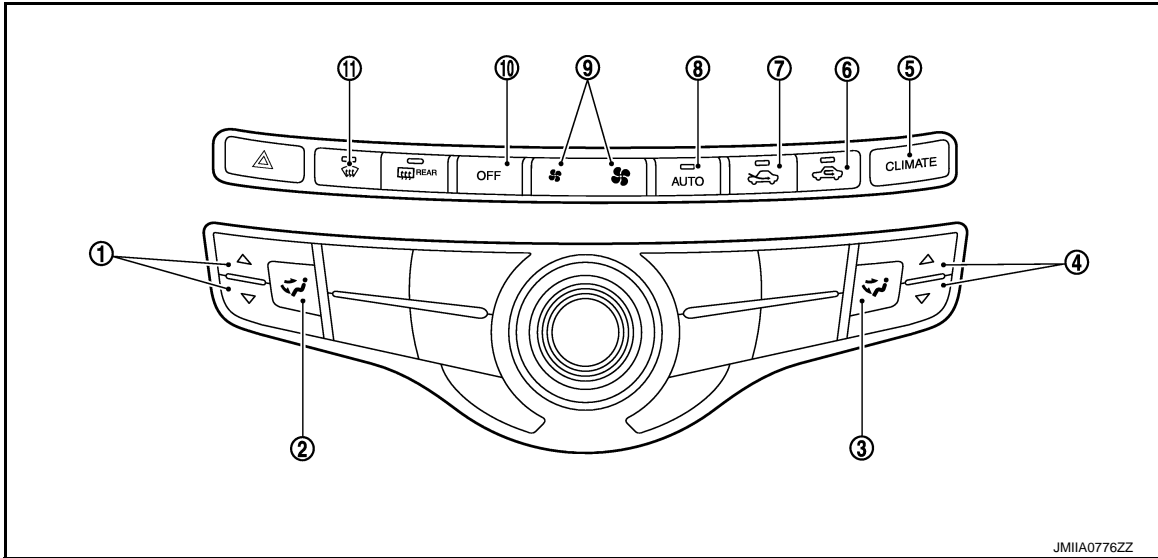

JMIA0776ZZ

- | | | |
|--|------------------------------|---------------------------------|
| 1. Temperature control switch (Driver side) | 2. MODE switch (Driver side) | 3. MODE switch (Passenger side) |
| 4. Temperature control switch (Passenger side) | 5. CLIMATE switch | 6. REC switch |
| 7. FRE switch | 8. AUTO switch | 9. Fan switch |
| 10. OFF switch | 11. DEF switch | |

Switch Operation

Switch name	Function
AUTO switch	When this switch is pressed, switch indicator lamp and "AUTO" indicator on display, and then air conditioning system starts automatic control. NOTE: When air inlet is not selected manually, air inlet changes to automatic control.
CLIMATE switch	"Climate" menu is indicated on display when this switch is pressed.
DEF switch	DEF mode (switch indicator lamp) changes between ON ↔ OFF each time this switch is pressed. When DEF switch is pressed while air conditioning system is in the ON position <ul style="list-style-type: none"> • When DEF mode turns ON, air conditioning system becomes the following status. <ul style="list-style-type: none"> - Air flow: Automatic control (If fan speed other than "AUTO" is selected before pressing DEF switch, fan speed is manual control) - Air inlet: Fresh air intake - Air outlet: DEF - Compressor: ON • When DEF mode turns OFF, air conditioning system status returns to the previous status before DEF mode is selected. When DEF switch is pressed while air conditioning system is in the OFF position <ul style="list-style-type: none"> • Air conditioning system turns ON and becomes the following status. <ul style="list-style-type: none"> - Air flow: Automatic control - Air inlet: Fresh air intake - Air outlet: DEF - Compressor: ON • When DEF mode turns OFF, entire air conditioning system is set to auto mode. NOTE: Automatic control is released ("AUTO" is not displayed) when this switch is pressed while air conditioning system is in automatic control ("AUTO" is displayed).
Fan switch	Fan speed is selected within a range of 1st – 7th speed using this switch. NOTE: <ul style="list-style-type: none"> • Air conditioning system turns ON when this switch is operated while air conditioning system is in OFF position. • Automatic air flow control is released ("AUTO" is not displayed) when this switch is pressed while air conditioning system is in automatic control ("AUTO" is displayed).

OPERATION

< SYSTEM DESCRIPTION >

[AUTOMATIC AIR CONDITIONING]

Switch name	Function	
FRE switch	<ul style="list-style-type: none"> Switch indicator lamp turns ON and air inlet is set to fresh air intake (FRE) when this switch is pressed. Press and held for 2 seconds or more, intake switch indicator blinks 2 times and air inlet is set to automatic control. (Intake switch indicator indicates air inlet state during automatic control.) <p>NOTE: Air inlet can be changed when air conditioning system is in the OFF position.</p>	A B
MODE switch (Driver side)	<p>Air outlet can be changes from VENT ⇒ B/L ⇒ FOOT ⇒ D/F ⇒ VENT each time this switch is pressed.</p> <p>NOTE:</p> <ul style="list-style-type: none"> Air outlet can be changed when air conditioning system is in the OFF position. Automatic air outlet control is released ("AUTO" is not displayed) when this switch is pressed while air conditioning system is in automatic control ("AUTO" is displayed). 	C D
MODE switch (Passenger side)	<ul style="list-style-type: none"> The system is set to LH/RH independent status ("DUAL" displays) by operating this switch. Air outlet of passenger side can be changed without changing air outlet of driver side. Air outlet can be changes from VENT ⇒ B/L ⇒ FOOT ⇒ VENT each time this switch is pressed. <p>NOTE:</p> <ul style="list-style-type: none"> Air outlet can be changed when air conditioning system is in the OFF position. Automatic air outlet control is released ("AUTO" is not displayed) when this switch is pressed while air conditioning system is in automatic control ("AUTO" is displayed). When DEF mode is ON, MODE switch (passenger side) is inoperative. 	E F
OFF switch	<ul style="list-style-type: none"> When this switch is pressed, air conditioning system turns OFF. When air conditioning system turns OFF, air inlet and air outlet become the following status. <ul style="list-style-type: none"> - Air inlet: Automatic control - Air outlet: FOOT 	G
REC switch	<ul style="list-style-type: none"> Switch indicator lamp turns ON and air inlet is set to recirculation (REC) when this switch is pressed. Press and held for 2 seconds or more, intake switch indicator blinks 2 times and air inlet is set to automatic control. (Intake switch indicator indicates air inlet state during automatic control.) <p>NOTE: Air inlet can be changed when air conditioning system is in the OFF position.</p>	H HAC
Temperature control switch (Driver side)	<p>Setting temperature is selected using this switch within a range between 18°C (60°F) and 32°C (90°F) at a rate of 0.5°C (1.0°F) per adjustment.</p> <ul style="list-style-type: none"> ▲ Press: Setting temperature increases ▼ Press: Setting temperature decreases <p>NOTE: When air conditioning system is OFF, setting temperature can be selected only while air conditioning system status screen [only when MODE switch (driver side) is pressed] is indicated on display.</p>	J K
Temperature control switch (Passenger side)	<ul style="list-style-type: none"> The system is set to LH/RH independent status ("DUAL" displays) by operating this switch. Outlet air flow temperature of passenger side can be changed without changing outlet air flow temperature of driver side. Setting temperature is selected using this switch within a range between 18°C (60°F) and 32°C (90°F) at a rate of 0.5°C (1.0°F) per adjustment. <ul style="list-style-type: none"> - ▲ Press: Setting temperature increases - ▼ Press: Setting temperature decreases <p>NOTE:</p> <ul style="list-style-type: none"> When air conditioning system is OFF, setting temperature can be selected only while air conditioning system status screen [only when MODE switch (passenger side) is pressed] is indicated on display. When DEF mode is ON, temperature control switch (passenger side) is inoperative. 	L M N O

AUTOMATIC AIR CONDITIONING SYSTEM : Menu Displayed by Pressing Each Switch

INFOID:000000010099414

"CLIMATE" MENU


"Climate" menu screen is displayed when CLIMATE switch of multifunction switch is pressed.

OPERATION


< SYSTEM DESCRIPTION >

- With Forest Air


[AUTOMATIC AIR CONDITIONING]

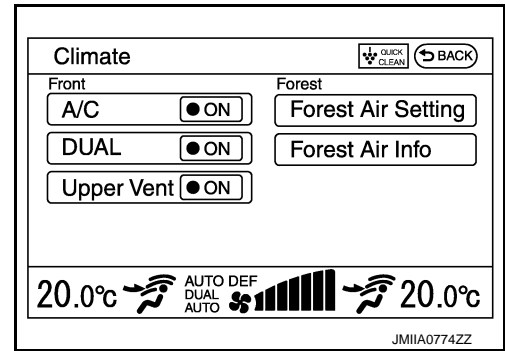

- Without Forest Air and with navigation

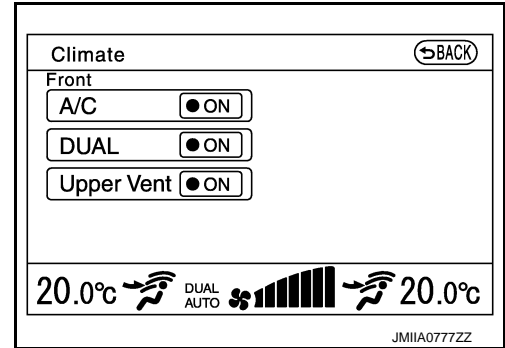

- Without Forest Air and navigation

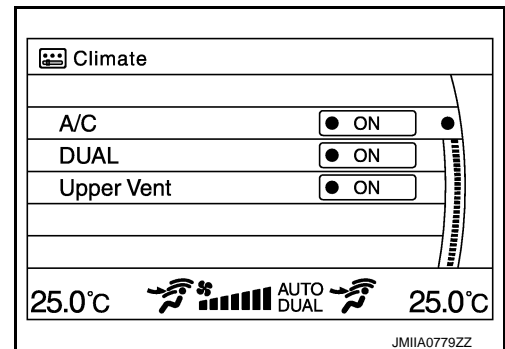

Menu	Function
A/C	ON ⇔ OFF of compressor is selected. NOTE: Selection does not operate when blower motor is OFF.
DUAL	ON ⇔ OFF of LH/RH independent function (temperature and air outlet) is selected. NOTE: <ul style="list-style-type: none"> • Setting temperature and outlet for passenger seat is the same as that for driver seat when LH/RH independent function is OFF. • Selection does not operate when blower motor is OFF.
Upper Vent	ON ⇔ OFF of air blowing from upper ventilator is selected. NOTE: Selection does not operate when blower motor is OFF and air outlet is DEF.

FOREST AIR SYSTEM

FOREST AIR SYSTEM : Switch Name and Function

INFOID:0000000010099415


OPERATION AND DISPLAY

OPERATION

< SYSTEM DESCRIPTION >

[AUTOMATIC AIR CONDITIONING]

Forest Air Display

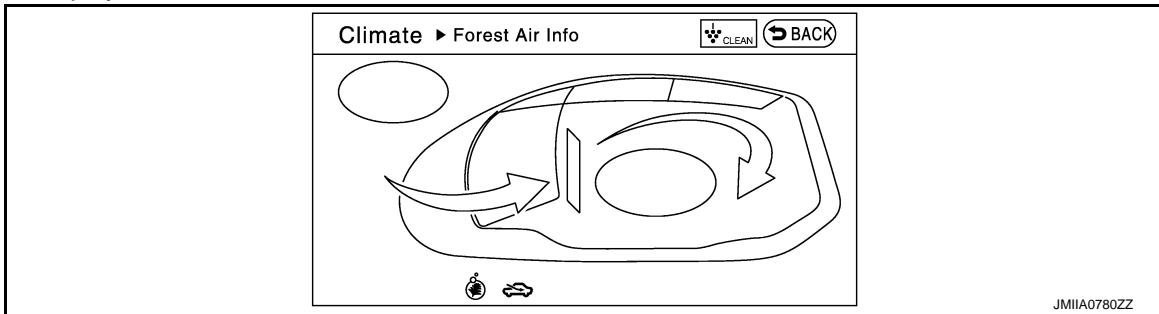

- Forest Air system state is indicated on the display.
- “Climate” menu is indicated on display when CLIMATE switch of multifunction switch is pressed while FOREST switch is ON. Operation status of Forest Air system is displayed when “Forest Air Info” is touched.


Air flow control (inside odor detecting mechanism)

- Display is switched as per the following description depending on interior air status

- Interior air status display (1) is blue, while interior air is in clean status.
- Interior air status display (1) is orange, while interior air is in dirty status.

NOTE:


Interior air status display is not indicated, while air inlet is in manual control status.

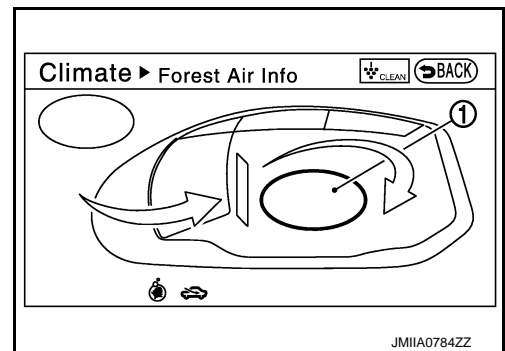


Aroma diffuser control

- Display is switched as shown in the figure, depending on type of aroma, while aroma diffuser operates.

- Leaf scent

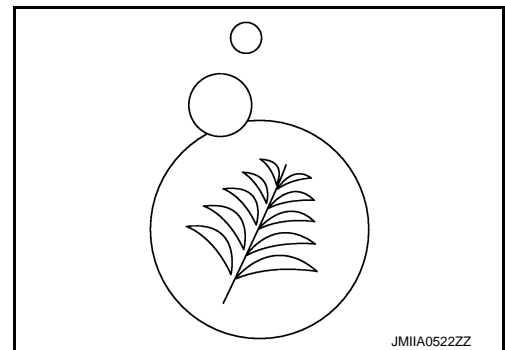

- Fragrant wood

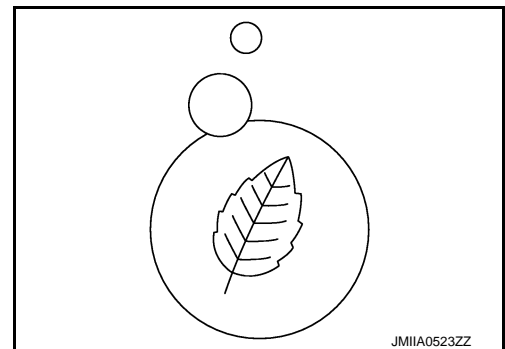

Automatic defogging control


A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

OPERATION

< SYSTEM DESCRIPTION >

[AUTOMATIC AIR CONDITIONING]

- Window portion (1) changes to white and automatic defogging operates, when windshield fogging is detected.

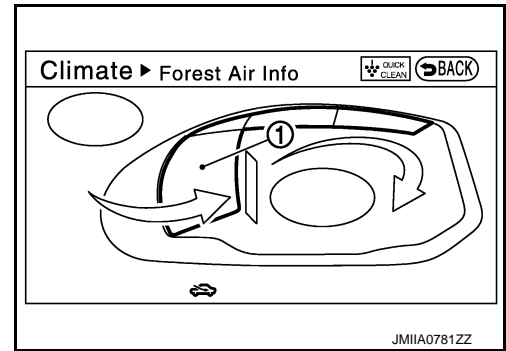


Automatic intake control (exhaust gas/outside odor detecting mechanism)

- Display is switched as per the following description depending on ambient air status, air inlet status, and switching status of recirculation and fresh air intake.
- Ambient air status display (1) is blue, while ambient air is in clean status.
- Ambient air status display (1) is orange, while ambient air is in dirty status.


NOTE:

Ambient air status display is not indicated, while air inlet is in manual control status.

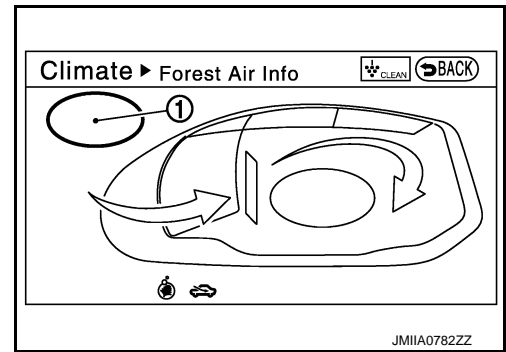


- Air inlet status is indicated by an arrow (1). Lower display (2) indicates air inlet status and control status (automatic control / manual control)

Air inlet status	Control status	Display
Recirculation	Automatic control	
	Manual operation	Manual Mode
Fresh air intake	Automatic control	
	Manual operation	Manual Mode

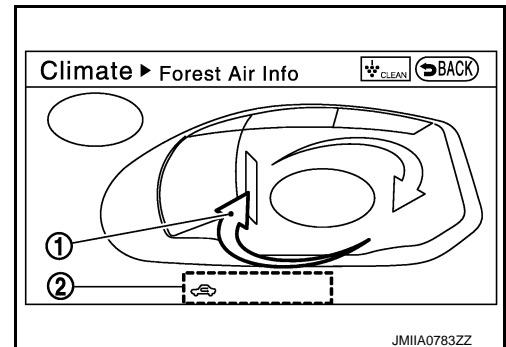

Breezy air control

- Animation that is imaged from breezy air (1) is displayed, while breezy air control is operated.

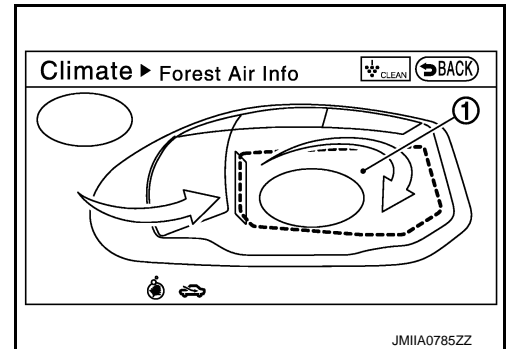

Plasmacluster™ control

- Plasmacluster™ ion display is switched as shown in the figure depending on air flow.

NOTE:


- Plasmacluster™ ion technology developed by Sharp Corporation is installed in this item.
- Plasmacluster™ is a trademark of Sharp Corporation.

OPERATION


< SYSTEM DESCRIPTION >

[AUTOMATIC AIR CONDITIONING]


- When air flow is small

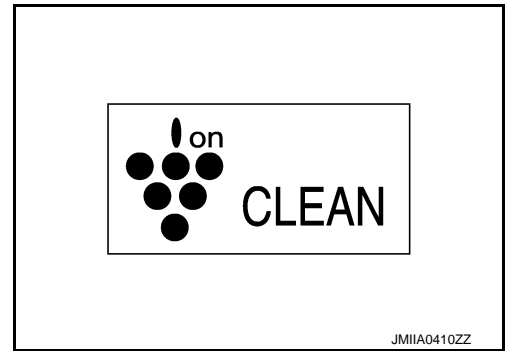

- When air flow is large

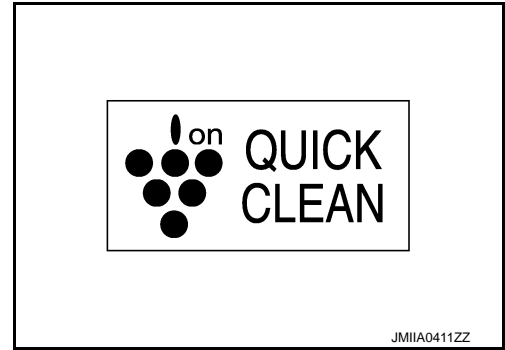

Forest Air Controller (Multifunction switch)

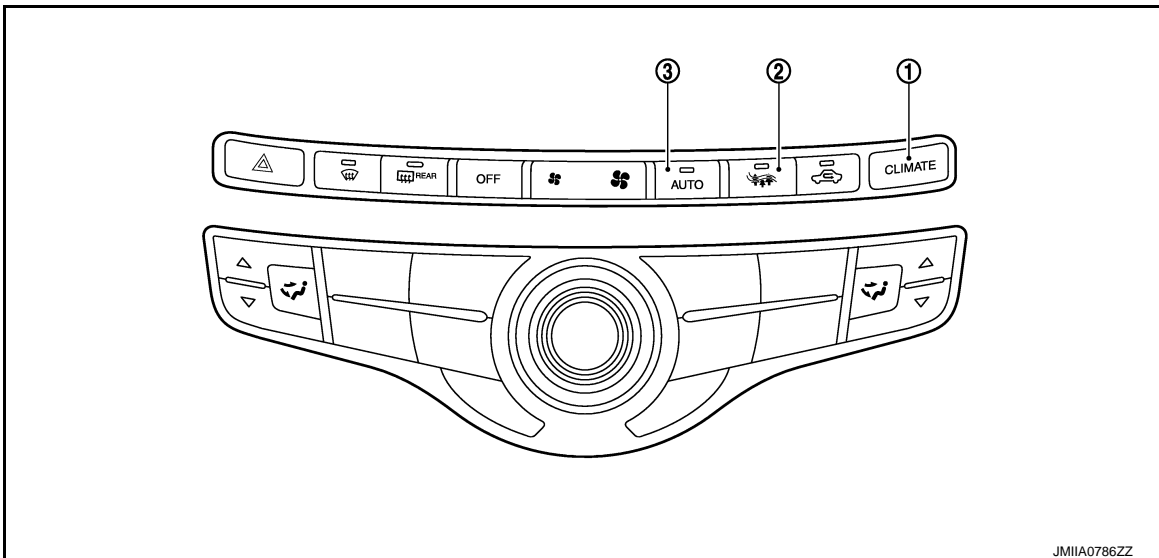

1. CLIMATE switch

2. FOREST switch

3. AUTO switch

Switch name	Function
AUTO switch	When this switch is pressed, AUTO switch indicator lamp, "AUTO", and "AUTO DEF" on display turn ON, and then automatic defogging control starts.
CLIMATE switch	"Climate" menu is indicated on display when this switch is pressed.
FOREST switch	When this switch is pressed, AUTO switch indicator lamp, FOREST switch indicator lamp, "AUTO", and "AUTO DEF" on display turn ON, and then Forest Air system starts automatic control.

FOREST AIR SYSTEM : Menu Displayed by Pressing Each Switch

INFOID:000000010099416


"CLIMATE" MENU

OPERATION

< SYSTEM DESCRIPTION >

[AUTOMATIC AIR CONDITIONING]

“Climate” menu screen is displayed when CLIMATE switch of multi-function switch is pressed.

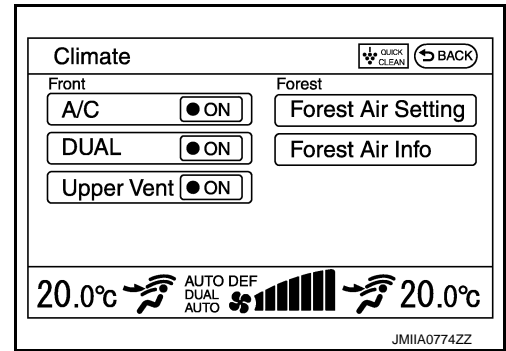

Menu		Function
Forest Air Setting	Breeze Mode	ON ⇔ OFF of breezy air is selected. NOTE: Selection does not operate when FOREST switch is OFF.
	Fan Speed Variance	Intensity of breezy air is selected. NOTE: Selection does not operate when FOREST switch is OFF or breezy air control is OFF.
	Outside/Inside Air Mix	Balance of automatic intake control (exhaust gas/outside odor detecting mechanism) (priority of fresh air intake or recirculation) is selected. NOTE: Selection does not operate when FOREST switch is OFF.
	Auto Defogging Sensitivity	Operation timing of automatic defogging control is adjusted or turned OFF. NOTE: Selection does not operate when AUTO switch is OFF.
	Aroma	ON ⇔ OFF of aroma diffuser is selected. NOTE: Selection does not operate when FOREST switch is OFF.
Forest Air Info		Operation status of Forest Air system is indicated. NOTE: Selection does not operate when FOREST switch is OFF.

DIAGNOSIS SYSTEM (A/C AUTO AMP.)

< SYSTEM DESCRIPTION >

[AUTOMATIC AIR CONDITIONING]

DIAGNOSIS SYSTEM (A/C AUTO AMP.)

Description

INFOID:0000000010099417

Air conditioning system performs self-diagnosis, operation check, function diagnosis, and various settings using diagnosis function of each control unit.

ECU	Diagnostic item (CONSULT)	
A/C auto amp.	HVAC	Self Diagnostic Result
		Data Monitor
		Active Test
		Work support
AV control unit	MULTI AV	Self Diagnostic Result
	Multi AV system on board diagnosis function	
ECM	ENGINE	Self Diagnostic Result
		Data Monitor
IPDM E/R	IPDM E/R	Self Diagnostic Result
		Data Monitor
	Auto active test	

CONSULT Function

INFOID:0000000010099418

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with A/C auto amp.

Diagnostic mode	Description
Ecu Identification	Displays the part number of A/C auto amp.
Self Diagnostic Result	Displays the diagnosis results judged by A/C auto amp.
Data Monitor	Displays the input/output signal of A/C auto amp.
Active Test	The signals used to activate each device are forcibly supplied from A/C auto amp.
Work support	Changes the setting for each setting function.
Configuration	<ul style="list-style-type: none"> The vehicle specification that is written in A/C auto amp. can be displayed or stored. The vehicle specification can be written when A/C auto amp. is replaced.

NOTE:

Diagnosis should be performed with engine running. Door motor operation speeds become slower and NO results may be returned even for normal operation if battery voltage drops below 12 V during self-diagnosis.

ECU IDENTIFICATION

Part number of A/C auto amp. can be checked.

NOTE:

When the vehicle specification is written to A/C auto amp. using control unit setting, part number of A/C auto amp. is updated to match the vehicle specification.

SELF DIAGNOSTIC RESULT

Diagnosis result that is judged by A/C auto amp. can be checked. Refer to [HAC-48, "DTC Index"](#).

DATA MONITOR

Input/output signal of A/C auto amp. can be checked.

Display item list

Monitor item [Unit]	Description
COMP REQ SIG [On/Off]	Displays A/C switch ON/OFF status transmitted to other units via CAN communication.
FAN REQ SIG [On/Off]	Displays fan switch ON/OFF status transmitted to other units via CAN communication.

DIAGNOSIS SYSTEM (A/C AUTO AMP.)

< SYSTEM DESCRIPTION >

[AUTOMATIC AIR CONDITIONING]

Monitor item [Unit]	Description
DR TARGET A/TEMP [°C]	Target discharge air temperature (driver side) judged by A/C auto amp. depending on the temperature setting and the value from each sensor.
PA TARGET A/TEMP [°C]	Target discharge air temperature (passenger side) judged by A/C auto amp. depending on the temperature setting and the value from each sensor.
AMB TEMP SEN [°C]	Ambient temperature value converted from ambient sensor signal received from ambient sensor.
IN-VEH TEMP [°C]	In-vehicle temperature value converted from in-vehicle sensor signal received from in-vehicle sensor.
INT TEMP SEN [°C]	Evaporator fin temperature value converted from intake sensor signal received from intake sensor.
AMB SEN CAL [°C]	Ambient temperature value calculated by A/C auto amp.
IN-VEH CAL [°C]	In-vehicle temperature value calculated by A/C auto amp.
INT TEMP CAL [°C]	Evaporator fin temperature value calculated by A/C auto amp.
ENG COOL TEMP [°C]	Engine coolant temperature signal value received from ECM via CAN communication.
DR SUNLOAD SEN [w/m ²]	Sunload value (driver side) converted from sunload sensor signal (driver side) received from sunload sensor.
PASS SUNLOAD SEN [w/m ²]	Sunload value (passenger side) converted from sunload sensor signal (passenger side) received from sunload sensor.
DR SUNL SEN CAL [w/m ²]	Sunload value (driver side) calculated by A/C auto amp.
PASS SUNL SEN CAL [w/m ²]	Sunload value (passenger side) calculated by A/C auto amp.
COMP ECV DUTY [%]	Duty ratio of ECV (electrical control valve) judged by A/C auto amp.
BLOWER MOT VOLT [V]	Gate voltage to power transistor that is judged by A/C auto amp.
VEHICLE SPEED [Mph (km/h)]	Vehicle speed signal value received from combination meter via CAN communication.
RELATIVE HUMIDITY* [%]	Relative humidity that is judged by A/C auto amp. according to value from humidity sensor.
AIR TEMP* [°C]	Air temperature around humidity sensor that is judged by A/C auto amp. according to value from humidity sensor.
DEW POINT TEMP* [°C]	Dew point temperature that is judged by A/C auto amp. according to value from humidity sensor.
GLASS TEMP* [°C]	Glass temperature value that is converted from glass temperature sensor signal received from glass temperature sensor of humidity sensor portion.
GAS SEN LEVEL*	Contamination level of ambient air that is judged by A/C auto amp. according to value from exhaust gas/outside odor detecting sensor.

*: With Forest Air

ACTIVE TEST

The signals used to activate each device forcibly supplied from A/C auto amp. operation check of air conditioning system can be performed.

Test item	Description
HVAC TEST	The operation check of air conditioner system can be performed by selecting the mode. Refer to the following table for the conditions of each mode.

Check each output device

With Forest Air

	Test item						
	MODE 1	MODE 2	MODE 3	MODE 4	MODE 5	MODE 6	MODE 7
Mode door motor (driver side) position	VENT 1	VENT 2	B/L	B/L	FOOT	D/F	DEF
Mode door motor (passenger side) position	VENT 1	VENT 2	B/L	B/L	FOOT	D/F	DEF
Rear mode door motor position	VENT	VENT	B/L	B/L	FOOT	FOOT	DEF

DIAGNOSIS SYSTEM (A/C AUTO AMP.)

< SYSTEM DESCRIPTION >

[AUTOMATIC AIR CONDITIONING]

	Test item						
	MODE 1	MODE 2	MODE 3	MODE 4	MODE 5	MODE 6	MODE 7
Intake door motor position	REC	REC	20% FRE	20% FRE	FRE	FRE	FRE
Air mix door motor (driver side) position	FULL COLD	FULL COLD	FULL COLD	FULL HOT	FULL HOT	FULL HOT	FULL HOT
Air mix door motor (passenger side) position	FULL COLD	FULL COLD	FULL COLD	FULL HOT	FULL HOT	FULL HOT	FULL HOT
Power transistor gate voltage	4 V	4 V	7 V	7 V	11.5 V	11.5 V	4 V
Magnet clutch	ON	ON	ON	ON	OFF	OFF	ON
ECV control signal (duty ratio)	60%	60%	30%	30%	0%	0%	70%
Upper ventilator door motor position	OPEN	CLOSE	CLOSE	OPEN	CLOSE	CLOSE	CLOSE
Aroma motor position	Fragrant wood	Leaf scent	OFF	Fragrant wood	Leaf scent	OFF	OFF

Without Forest Air

	Test item						
	MODE 1	MODE 2	MODE 3	MODE 4	MODE 5	MODE 6	MODE 7
Mode door motor (driver side) position	VENT 1	VENT 2	B/L	B/L	FOOT	D/F	DEF
Mode door motor (passenger side) position	VENT 1	VENT 2	B/L	B/L	FOOT	D/F	DEF
Rear mode door motor position	VENT	VENT	B/L	B/L	FOOT	FOOT	DEF
Intake door motor position	REC	REC	20% FRE	20% FRE	FRE	FRE	FRE
Air mix door motor (driver side) position	FULL COLD	FULL COLD	FULL COLD	FULL HOT	FULL HOT	FULL HOT	FULL HOT
Air mix door motor (passenger side) position	FULL COLD	FULL COLD	FULL COLD	FULL HOT	FULL HOT	FULL HOT	FULL HOT
Power transistor gate voltage	4 V	4 V	7 V	7 V	11.5 V	11.5 V	4 V
Magnet clutch	ON	ON	ON	ON	OFF	OFF	ON
ECV control signal (duty ratio)	60%	60%	30%	30%	0%	0%	70%
Upper ventilator door motor position	OPEN	CLOSE	CLOSE	OPEN	CLOSE	CLOSE	CLOSE

NOTE:

Perform the inspection of each output device after start in the engine because the compressor is operated.

WORK SUPPORT

Setting change of each setting functions can be performed.

Work item	Description	Reference
TEMP SET CORRECT	If the temperature felt by the customer is different from the air flow temperature controlled by the temperature setting, the A/C auto amp. control temperature can be adjusted to compensate for the temperature setting.	HAC-78. "AUTOMATIC AIR CONDITIONING SYSTEM : Temperature Setting Trimmer"
REC MEMORY SET	Setting change of inlet port memory function (REC) can be performed.	HAC-78. "AUTOMATIC AIR CONDITIONING SYSTEM : Inlet Port Memory Function (REC)"
FRE MEMORY SET	Setting change of inlet port memory function (FRE) can be performed.	HAC-79. "AUTOMATIC AIR CONDITIONING SYSTEM : Inlet Port Memory Function (FRE)"
BLOW SET	Setting change of foot position setting trimmer can be performed.	HAC-79. "AUTOMATIC AIR CONDITIONING SYSTEM : Foot Position Setting Trimmer"

DIAGNOSIS SYSTEM (A/C AUTO AMP.)

< SYSTEM DESCRIPTION >

[AUTOMATIC AIR CONDITIONING]

Work item	Description	Reference
AROMA SETTING*	Setting change of aroma fragrance intensity setting can be performed.	HAC-79, "FOREST AIR SYSTEM : Aroma Fragrance Intensity Setting"
FRAGRANCE SETTING*	Setting change of aroma fragrance type setting can be performed.	HAC-79, "FOREST AIR SYSTEM : Aroma Fragrance Type Setting"
BLOWER MOTOR SETTING*	Setting change of air flow control (inside odor detecting mechanism) setting can be performed.	HAC-80, "FOREST AIR SYSTEM : Air Flow Control (Inside Odor Detecting Mechanism) Setting"
AROMA DIFFUSER SETTING*	Setting change of aroma diffuser presence setting can be performed.	HAC-80, "FOREST AIR SYSTEM : Aroma Diffuser Presence Setting"

*: With Forest Air

CONFIGURATION

The vehicle specification that is written in A/C auto amp. can be displayed or stored.

The vehicle specification can be written when A/C auto amp. is replaced.

Refer to [HAC-77, "Description"](#).

A/C AUTO AMP.

< ECU DIAGNOSIS INFORMATION >

[AUTOMATIC AIR CONDITIONING]

ECU DIAGNOSIS INFORMATION

A/C AUTO AMP.

Reference Value(AUTOMATIC AIR CONDITIONING)

INFOID:0000000010099419

CONSULT DATA MONITOR REFERENCE VALUES

Monitor item	Condition		Value/Status
COMP REQ SIG	Engine: Run at idle after warming up	"A/C": ON (Compressor operation status)	On
		"A/C": OFF	Off
FAN REQ SIG	Engine: Run at idle after warming up	Blower motor: ON	On
		Blower motor: OFF	Off
DR TARGET A/TEMP	Ignition switch ON		Values depending on target air flow temperature (driver side)
PA TARGET A/TEMP	Ignition switch ON		Values depending on target air flow temperature (passenger side)
AMB TEMP SEN	Ignition switch ON		Equivalent to ambient temperature
IN-VEH TEMP	Ignition switch ON		Equivalent to in-vehicle temperature
INT TEMP SEN	Ignition switch ON		Values depending on evaporator fin temperature
AMB SEN CAL	Ignition switch ON		Equivalent to ambient temperature
IN-VEH CAL	Ignition switch ON		Equivalent to in-vehicle temperature
INT TEMP CAL	Ignition switch ON		Values depending on evaporator fin temperature
ENG COOL TEMP	Ignition switch ON		Values depending on engine coolant temperature
DR SUNLOAD SEN	Ignition switch ON		Values depending on sunload (driver side)
PASS SUNLOAD SEN	Ignition switch ON		Values depending on sunload (passenger side)
DR SUNL SEN CAL	Ignition switch ON		Values depending on sunload (driver side)
PASS SUNL SEN CAL	Ignition switch ON		Values depending on sunload (passenger side)
COMP ECV DUTY	Engine: Run at idle after warming up	Active test (HVAC test): MODE 1	60%
		Active test (HVAC test): MODE 2	60%
		Active test (HVAC test): MODE 3	30%
		Active test (HVAC test): MODE 4	30%
		Active test (HVAC test): MODE 5	0%
		Active test (HVAC test): MODE 6	0%
		Active test (HVAC test): MODE 7	70%

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

A/C AUTO AMP.


< ECU DIAGNOSIS INFORMATION >

[AUTOMATIC AIR CONDITIONING]

Monitor item	Condition		Value/Status
BLOWER MOT VOLT	Engine: Run at idle after warming up	Active test (HVAC test): MODE 1	4 V
		Active test (HVAC test): MODE 2	4 V
		Active test (HVAC test): MODE 3	7 V
		Active test (HVAC test): MODE 4	7 V
		Active test (HVAC test): MODE 5	11.5 V
		Active test (HVAC test): MODE 6	11.5 V
		Active test (HVAC test): MODE 7	4 V
VEHICLE SPEED	Turn drive wheels and compare CONSULT value with the speedometer indication.		Equivalent to speedometer reading
RELATIVE HUMIDITY*	Ignition switch ON		Values depending on relative humidity
AIR TEMP*	Ignition switch ON		Equivalent to air temperature around humidity sensor
DEW POINT TEMP*	Ignition switch ON		Values depending on dew point temperature
GLASS TEMP*	Ignition switch ON		Equivalent to windshield glass temperature
GAS SEN LEVEL*	Ignition switch ON		Values depending on contamination of ambient air

*: With Forest Air

TERMINAL LAYOUT

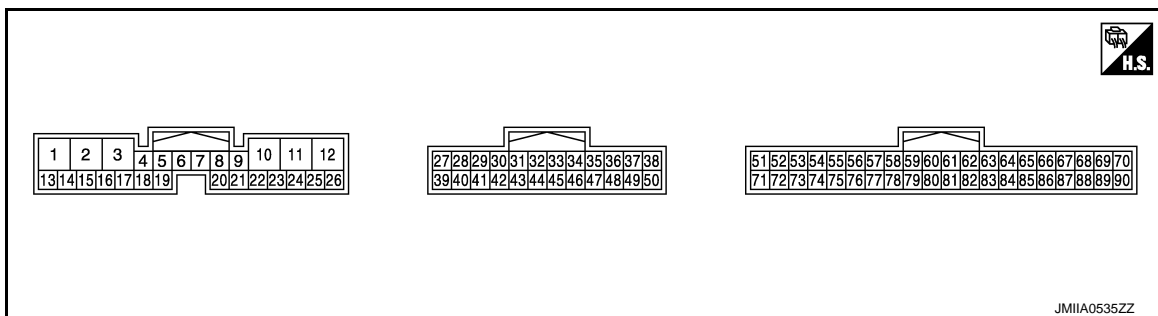


PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition	Reference value (Approx.)
+	-	Signal name	Input/ Output		
1 (L)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage
2 (W)	Ground	Ignition power supply	Input	Ignition switch ON	Battery voltage

A/C AUTO AMP.

< ECU DIAGNOSIS INFORMATION >

[AUTOMATIC AIR CONDITIONING]



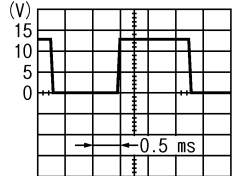
Terminal No. (Wire color)		Description		Condition	Reference value (Approx.)	
+	-	Signal name	Input/ Output			
6 (R)	Ground	Blower motor feedback signal	Input	<ul style="list-style-type: none"> Ignition switch ON Air inlet: VENT 	Fan speed: OFF	Battery voltage
					Fan speed: 1st (manual)	10.0 V
					Fan speed: 2nd (manual)	8.3 V
					Fan speed: 3rd (manual)	7.0 V
					Fan speed: 4th (manual)	5.7V
					Fan speed: 5th (manual)	4.3 V
					Fan speed: 6th (manual)	3.0 V
					Fan speed: 7th (manual)	1.0 V
7 (L)	Ground	Power transistor control signal	Output	<ul style="list-style-type: none"> Ignition switch ON Air inlet: VENT 	Fan speed: OFF	0 V
					Fan speed: 1st (manual)	3.5 V
					Fan speed: 2nd (manual)	5.2 V
					Fan speed: 3rd (manual)	6.5 V
					Fan speed: 4th (manual)	7.8 V
					Fan speed: 5th (manual)	9.2 V
					Fan speed: 6th (manual)	10.5 V
					Fan speed: 7th (manual)	12.5 V
10 (B)	—	Ground	—	—	—	
11 (P)	—	CAN-L	Input/ Output	—	—	
12 (L)	—	CAN-H	Input/ Output	—	—	
13 (V)	Ground	ACC power supply	Input	Ignition switch ACC	Battery voltage	
17 (BG)	Ground	ECV (electrical control valve) control signal	Output	<ul style="list-style-type: none"> Ignition switch ON Active test (HVAC test): MODE 1 	 <p style="text-align: right; font-size: small;">SJIA1607E</p>	

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

A/C AUTO AMP.

< ECU DIAGNOSIS INFORMATION >

[AUTOMATIC AIR CONDITIONING]

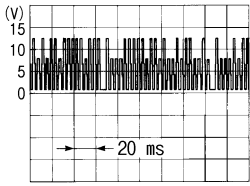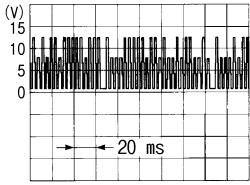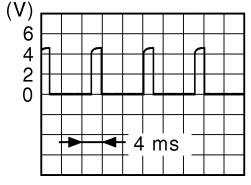Terminal No. (Wire color)		Description		Condition	Reference value (Approx.)
+	-	Signal name	Input/ Output		
20*1 (R)	Ground	Humidity sensor (SCK) signal	Input/ Output	Ignition switch ON	 <p style="text-align: right; font-size: small;">SJIA1453J</p>
21*1 (Y)	Ground	Humidity sensor (DATA) signal	Input/ Output	Ignition switch ON	 <p style="text-align: right; font-size: small;">SJIA1453J</p>
22*1 (B)	—	Humidity sensor ground	—	—	—
23 (W)	Ground	Drive mode select switch (SNOW) signal	Input	<ul style="list-style-type: none"> Ignition switch ON Drive mode select switch position: SNOW 	0 V
				Other than the above	12 V
24 (L)	Ground	Drive mode select switch (ECO) signal	Input	<ul style="list-style-type: none"> Ignition switch ON Drive mode select switch position: ECO 	0 V
				Other than the above	12 V
25 (G)	Ground	Drive mode select switch (STANDARD) signal	Input	<ul style="list-style-type: none"> Ignition switch ON Drive mode select switch position: STANDARD 	0 V
				Other than the above	12 V
26 (Y)	Ground	Drive mode select switch (SPORT) signal	Input	<ul style="list-style-type: none"> Ignition switch ON Drive mode select switch position: SPORT 	0 V
				Other than the above	12 V
30*1 (L)	Ground	Exhaust gas/outside odor detecting sensor signal	Input	Ignition switch ON NOTE: The signal is depending on measurement environment of the vehicle	 <p style="text-align: right; font-size: small;">ZJIA1163J</p>
31 (BG)	Ground	Ambient sensor signal	Input	Ignition switch ON	0 – 4.8 V Output voltage varies with ambient temperature
32 (LG)	Ground	In-vehicle sensor signal	Input	Ignition switch ON	0 – 4.8 V Output voltage varies with in-vehicle temperature
33*1 (LG)	Ground	Humidity sensor (windshield glass temperature) signal	Input	Ignition switch ON	0 – 4.8 V Output voltage varies with windshield glass temperature

A/C AUTO AMP.

< ECU DIAGNOSIS INFORMATION >

[AUTOMATIC AIR CONDITIONING]

Terminal No. (Wire color)		Description		Condition	Reference value (Approx.)
+	-	Signal name	Input/ Output		
35 (L)	Ground	Sunload sensor (driver side) signal	Input	Ignition switch ON	0 – 4.8 V Output voltage varies with amount of sunload (driver side)
36*1 (V)	Ground	Inside odor detecting sensor signal	Input	Ignition switch ON	0 – 4.8 V Output voltage varies with amount of passenger room odor level
39 (W)	Ground	Sensor power supply	Output	Ignition switch ON	5 V
41*2 (L)	Ground	Heated steering wheel relay control signal	Output	Ignition switch ON	0 V
				Other than the above	12 V
42*1 (W)	Ground	Ionizer (ON/OFF) control signal	Output	<ul style="list-style-type: none"> Ignition switch ON Blower motor: ON 	0 V
				<ul style="list-style-type: none"> Ignition switch ON Blower motor: OFF 	12 V
44 (B)	—	Ground	—	—	—
45*2 (G)	Ground	Heated steering wheel switch signal	Input	Ignition switch ON	0 V
				Other than the above	12 V
47 (P)	Ground	Sunload sensor (passenger side) signal	Input	Ignition switch ON	0 – 4.8 V Output voltage varies with amount of sunload (passenger side)
51 (B)	Ground	Intake sensor signal	Input	Ignition switch ON	0 – 4.8 V Output voltage varies with amount of evaporator fin temperature
52*1 (W/R)	Ground	Aroma motor PBR feedback signal	Input	<ul style="list-style-type: none"> Ignition switch ON Aroma diffuser control: Leaf scent 	1.0 V
				<ul style="list-style-type: none"> Ignition switch ON Aroma diffuser control: Fragrant wood 	4.0 V
53 (G)	Ground	Air mix door motor (driver side) PBR feedback signal	Input	<ul style="list-style-type: none"> Ignition switch ON Set temperature: 18°C (60°F) “DUAL”: OFF 	4.0 V
				<ul style="list-style-type: none"> Ignition switch ON Set temperature: 32°C (90°F) “DUAL”: OFF 	1.0 V
54 (P)	Ground	Mode door motor (driver side) PBR feedback signal	Input	<ul style="list-style-type: none"> Ignition switch ON Air outlet: VENT “DUAL”: OFF 	4.0 V
				<ul style="list-style-type: none"> Ignition switch ON Air outlet: DEF “DUAL”: OFF 	1.0 V

A

B

C

D

E

F

G

H

HAC

J

K

L

M

N

O

P

A/C AUTO AMP.

< ECU DIAGNOSIS INFORMATION >

[AUTOMATIC AIR CONDITIONING]

Terminal No. (Wire color)		Description		Condition	Reference value (Approx.)
+	-	Signal name	Input/ Output		
55 (L/B)	Ground	Intake door motor PBR feedback signal	Input	<ul style="list-style-type: none"> Ignition switch ON Air inlet: REC 	4.0 V
				<ul style="list-style-type: none"> Ignition switch ON Air inlet: FRE 	1.0 V
58 (P/B)	Ground	Rear mode door motor PBR feedback signal	Input	<ul style="list-style-type: none"> Ignition switch ON Air outlet: VENT "DUAL": OFF 	4.0 V
				<ul style="list-style-type: none"> Ignition switch ON Air outlet: DEF "DUAL": OFF 	1.0 V
61 (BR)	Ground	Air mix door motor (driver side) COOL drive signal	Output	<ul style="list-style-type: none"> Ignition switch ON Set temperature: 32°C (90°F)→18°C (60°F) "DUAL": OFF 	12 V
				<ul style="list-style-type: none"> Ignition switch ON Set temperature: 18°C (60°F)→32°C (90°F) "DUAL": OFF 	0 V
62*1 (G/R)	Ground	Aroma motor (Fragrant wood) drive signal	Output	<ul style="list-style-type: none"> Ignition switch ON Aroma diffuser control: Leaf scent→Fragrant wood 	12 V
				<ul style="list-style-type: none"> Ignition switch ON Aroma diffuser control: Fragrant wood→Leaf scent 	0 V
63 (V)	Ground	Mode door motor (driver side) VENT drive signal	Output	<ul style="list-style-type: none"> Ignition switch ON Air outlet: DEF→VENT "DUAL": OFF 	12 V
				<ul style="list-style-type: none"> Ignition switch ON Air outlet: VENT→DEF "DUAL": OFF 	0 V
64 (R/B)	Ground	Mode door motor (passenger side) VENT drive signal	Output	<ul style="list-style-type: none"> Ignition switch ON Air outlet: DEF→VENT "DUAL": OFF 	12 V
				<ul style="list-style-type: none"> Ignition switch ON Air outlet: VENT→DEF "DUAL": OFF 	0 V
65 (L/R)	Ground	Intake door motor REC drive signal	Output	<ul style="list-style-type: none"> Ignition switch ON Air inlet: FRE→REC 	12 V
				<ul style="list-style-type: none"> Ignition switch ON Air inlet: REC→FRE 	0 V
66 (BR/B)	Ground	Upper ventilator door motor CLOSE drive signal	Output	<ul style="list-style-type: none"> Ignition switch ON "Upper Vent": ON→OFF 	12 V
				<ul style="list-style-type: none"> Ignition switch ON "Upper Vent": OFF→ON 	0 V
67 (LG)	Ground	Air mix door motor (passenger side) HOT drive signal	Output	<ul style="list-style-type: none"> Ignition switch ON Set temperature: 18°C (60°F)→32°C (90°F) "DUAL": OFF 	12 V
				<ul style="list-style-type: none"> Ignition switch ON Set temperature: 32°C (90°F)→18°C (60°F) "DUAL": OFF 	0 V

A/C AUTO AMP.

< ECU DIAGNOSIS INFORMATION >

[AUTOMATIC AIR CONDITIONING]

Terminal No. (Wire color)		Description		Condition	Reference value (Approx.)	
+	-	Signal name	Input/ Output			
68 (R/W)	Ground	Rear mode door motor VENT drive signal	Output	<ul style="list-style-type: none"> Ignition switch ON Air outlet: DEF→VENT "DUAL": OFF 	12 V	A
				<ul style="list-style-type: none"> Ignition switch ON Air outlet: VENT→DEF "DUAL": OFF 	0 V	B
71 (R)	Ground	Each door motor PBR power supply	Output	Ignition switch ON	5 V	C
73 (SB)	Ground	Mode door motor (passenger side) PBR feedback signal	Input	<ul style="list-style-type: none"> Ignition switch ON Air outlet: VENT "DUAL": OFF 	4.0 V	D
				<ul style="list-style-type: none"> Ignition switch ON Air outlet: DEF "DUAL": OFF 	1.0 V	E
74 (L)	Ground	Air mix door motor (driver side) PBR feedback signal	Input	<ul style="list-style-type: none"> Ignition switch ON Set temperature: 18°C (60°F) "DUAL": OFF 	4.0 V	F
				<ul style="list-style-type: none"> Ignition switch ON Set temperature: 32°C (90°F) "DUAL": OFF 	1.0 V	G
75 (G/B)	Ground	Upper ventilator door motor PBR feedback signal	Input	<ul style="list-style-type: none"> Ignition switch ON "Upper Vent": ON 	3.0 V	H
				<ul style="list-style-type: none"> Ignition switch ON "Upper Vent": OFF 	1.0 V	HAC
79 (W)	—	Intake sensor ground / Each door motor PBR ground	—	—	—	J
81 (Y)	Ground	Air mix door motor (driver side) HOT drive signal	Output	<ul style="list-style-type: none"> Ignition switch ON Set temperature: 18°C (60°F)→32°C (90°F) "DUAL": OFF 	12 V	K
				<ul style="list-style-type: none"> Ignition switch ON Set temperature: 32°C (90°F)→18°C (60°F) "DUAL": OFF 	0 V	L
82 (LG/R)	Ground	Aroma motor (Leaf scent) drive signal	Output	<ul style="list-style-type: none"> Ignition switch ON Aroma diffuser control: Fragrant wood→Leaf scent 	12 V	M
				<ul style="list-style-type: none"> Ignition switch ON Aroma diffuser control: Leaf scent→Fragrant wood 	0 V	N
83 (B)	Ground	Mode door motor (driver side) DEF drive signal	Output	<ul style="list-style-type: none"> Ignition switch ON Air outlet: VENT→DEF "DUAL": OFF 	12 V	O
				<ul style="list-style-type: none"> Ignition switch ON Air outlet: DEF→VENT "DUAL": OFF 	0 V	P
84 (W/B)	Ground	Mode door motor (passenger side) DEF drive signal	Output	<ul style="list-style-type: none"> Ignition switch ON Air outlet: VENT→DEF "DUAL": OFF 	12 V	
				<ul style="list-style-type: none"> Ignition switch ON Air outlet: DEF→VENT "DUAL": OFF 	0 V	

A/C AUTO AMP.

< ECU DIAGNOSIS INFORMATION >

[AUTOMATIC AIR CONDITIONING]

Terminal No. (Wire color)		Description		Condition	Reference value (Approx.)
+	-	Signal name	Input/ Output		
85 (LG/B)	Ground	Intake door motor FRE drive signal	Output	<ul style="list-style-type: none"> • Ignition switch ON • Air inlet: REC→FRE 	12 V
				<ul style="list-style-type: none"> • Ignition switch ON • Air inlet: FRE→REC 	0 V
86 (Y/B)	Ground	Upper ventilator door motor OPEN drive signal	Output	<ul style="list-style-type: none"> • Ignition switch ON • "Upper Vent": OFF→ON 	12 V
				<ul style="list-style-type: none"> • Ignition switch ON • "Upper Vent": ON→OFF 	0 V
87 (GR)	Ground	Air mix door motor (passenger side) COOL drive signal	Output	<ul style="list-style-type: none"> • Ignition switch ON • Set temperature: 32°C (90°F)→18°C (60°F) • "DUAL": OFF 	12 V
				<ul style="list-style-type: none"> • Ignition switch ON • Set temperature: 18°C (60°F)→32°C (90°F) • "DUAL": OFF 	0 V
88 (B/W)	Ground	Rear mode door motor FOOT drive signal	Output	<ul style="list-style-type: none"> • Ignition switch ON • Air outlet: VENT→DEF • "DUAL": OFF 	12 V
				<ul style="list-style-type: none"> • Ignition switch ON • Air outlet: DEF→VENT • "DUAL": OFF 	0 V

*1: With Forest Air

*2: With heated steering wheel

Fail-safe

INFOID:000000010099420

FAIL-SAFE FUNCTION

When a communication malfunction between A/C auto amp. and AV control unit and multifunction switch continued for approximately 30 seconds or more, control the air conditioning under the following conditions.

- Compressor** : ON
- Air outlet** : AUTO
- Air inlet** : FRE (Fresh air intake)
- Fan speed** : AUTO
- Set temperature** : Setting before communication malfunction

DTC Index

INFOID:000000010099421

DTC	Items (CONSULT screen terms)	Reference
U1000	CAN COMM CIRCUIT	HAC-81, "DTC Logic"
U1010	CONTROL UNIT(CAN)	HAC-82, "DTC Logic"
B2578	IN-VEHICLE SENSOR	HAC-83, "DTC Logic"
B2579	IN-VEHICLE SENSOR	HAC-83, "DTC Logic"
B257B	AMBIENT SENSOR	HAC-86, "DTC Logic"
B257C	AMBIENT SENSOR	HAC-86, "DTC Logic"
B2581	INTAKE SENSOR	HAC-89, "DTC Logic"
B2582	INTAKE SENSOR	HAC-89, "DTC Logic"

A/C AUTO AMP.

< ECU DIAGNOSIS INFORMATION >

[AUTOMATIC AIR CONDITIONING]

DTC	Items (CONSULT screen terms)	Reference
B262A* ¹	GAS SENSOR* ²	HAC-92, "DTC Logic"
B262B* ¹	GAS SENSOR* ²	HAC-92, "DTC Logic"
B2630* ³	SUNLOAD SENSOR	HAC-96, "DTC Logic"
B2631* ³	SUNLOAD SENSOR	HAC-96, "DTC Logic"
B2657* ¹	GAS SENSOR CIRCUIT* ²	HAC-92, "DTC Logic"
B2658* ¹	GAS SENSOR CIRCUIT* ²	HAC-92, "DTC Logic"
B2750	DR AIR MIX DOOR MOT	HAC-99, "DTC Logic"
B2751	DR AIR MIX DOOR MOT	HAC-99, "DTC Logic"
B2752	DR AIR MIX DOOR MOT	HAC-99, "DTC Logic"
B2753	PASS AIR MIX DOOR MOT	HAC-104, "DTC Logic"
B2754	PASS AIR MIX DOOR MOT	HAC-104, "DTC Logic"
B2755	PASS AIR MIX DOOR MOT	HAC-104, "DTC Logic"
B2756	DR MODE DOOR MOTOR	HAC-109, "DTC Logic"
B2757	DR MODE DOOR MOTOR	HAC-109, "DTC Logic"
B2758	DR MODE DOOR MOTOR	HAC-109, "DTC Logic"
B2759	PASS MODE DOOR MOT	HAC-114, "DTC Logic"
B275A	PASS MODE DOOR MOT	HAC-114, "DTC Logic"
B275B	PASS MODE DOOR MOT	HAC-114, "DTC Logic"
B275C	INTAKE DOOR MOTOR	HAC-119, "DTC Logic"
B275D	INTAKE DOOR MOTOR	HAC-119, "DTC Logic"
B275E	INTAKE DOOR MOTOR	HAC-119, "DTC Logic"
B275F	DR UP VENT DOOR MOT	HAC-124, "DTC Logic"
B2760	DR UP VENT DOOR MOT	HAC-124, "DTC Logic"
B2761	DR UP VENT DOOR MOT	HAC-124, "DTC Logic"
B2762	REAR MODE DOOR MOT	HAC-130, "DTC Logic"
B2763	REAR MODE DOOR MOT	HAC-130, "DTC Logic"
B2764	REAR MODE DOOR MOT	HAC-130, "DTC Logic"
B2768* ¹	AROMA MOTOR	HAC-135, "DTC Logic"
B2769* ¹	AROMA MOTOR	HAC-135, "DTC Logic"
B276A* ¹	AROMA MOTOR	HAC-135, "DTC Logic"
B276B* ¹	HUMIDITY SENSOR	HAC-140, "DTC Logic"
B276C* ¹	HUMIDITY SENSOR	HAC-140, "DTC Logic"
B276D* ¹	HUMIDITY SENSOR	HAC-140, "DTC Logic"

*1: With Forest Air

*2: This item indicates the exhaust gas/outside odor detecting sensor.

*3: Perform self-diagnosis under sunshine. When performing indoors, aim a light (more than 60 W) at sunload sensor, otherwise self-diagnosis indicates even though the sunload sensor is functioning normally.

NOTE:

- If all of door motors DTC (B2750 – B276A) are detected, check door motor PBR circuit (With Forest Air). Refer to [HAC-145, "DOOR MOTOR PBR \(WITH FOREST AIR\) : Diagnosis Procedure"](#).
- If all of door motors DTC (B2750 – B2764) are detected, check door motor PBR circuit (Without Forest Air). Refer to [HAC-145, "DOOR MOTOR PBR \(WITH FOREST AIR\) : Diagnosis Procedure"](#).

ECM, IPDM E/R

< ECU DIAGNOSIS INFORMATION >

[AUTOMATIC AIR CONDITIONING]

ECM, IPDM E/R

List of ECU Reference

INFOID:000000010099422

ECU		Reference
ECM	VQ37VHR	EC-96. "Reference Value"
		EC-113. "Fail safe"
		EC-115. "DTC Inspection Priority Chart"
		EC-116. "DTC Index"
	VK56VD	EC-1049. "Reference Value"
		EC-1073. "Fail-safe"
		EC-1075. "DTC Inspection Priority Chart"
		EC-1077. "DTC Index"
IPDM E/R	PCS-16. "Reference Value"	
	PCS-23. "Fail-safe"	
	PCS-24. "DTC Index"	

AUTOMATIC AIR CONDITIONING SYSTEM

< WIRING DIAGRAM >


[AUTOMATIC AIR CONDITIONING]

WIRING DIAGRAM

AUTOMATIC AIR CONDITIONING SYSTEM

Wiring Diagram

INFOID:000000010099423

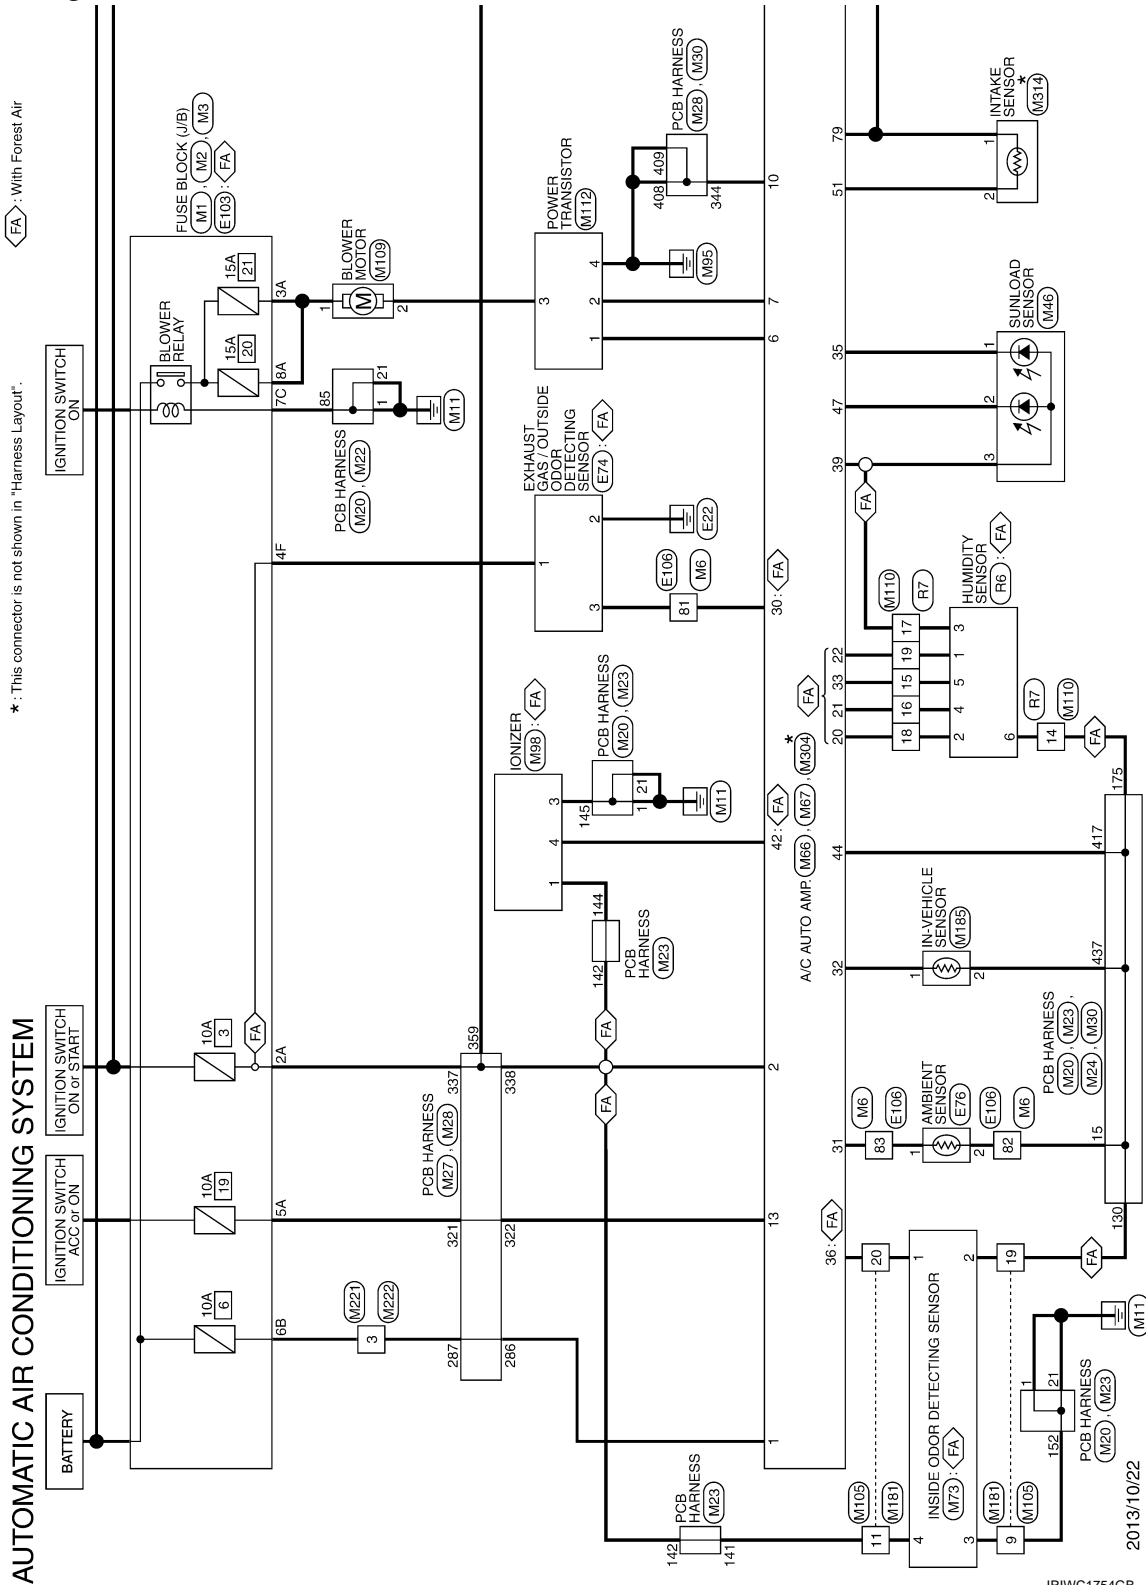

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

HAC


AUTOMATIC AIR CONDITIONING SYSTEM

[AUTOMATIC AIR CONDITIONING]

< WIRING DIAGRAM >

*: This connector is not shown in "Harness Layout".

- <NV> : With NAVI
- <ON> : Without NAVI
- <FA> : With Forest Air
- <OF> : Without Forest Air
- *1 4 : <FA> *3 4 : <FA>
- 5 : <OF> 5 : <OF>
- *2 5 : <FA> *4 5 : <FA>
- 7 : <OF> 7 : <OF>

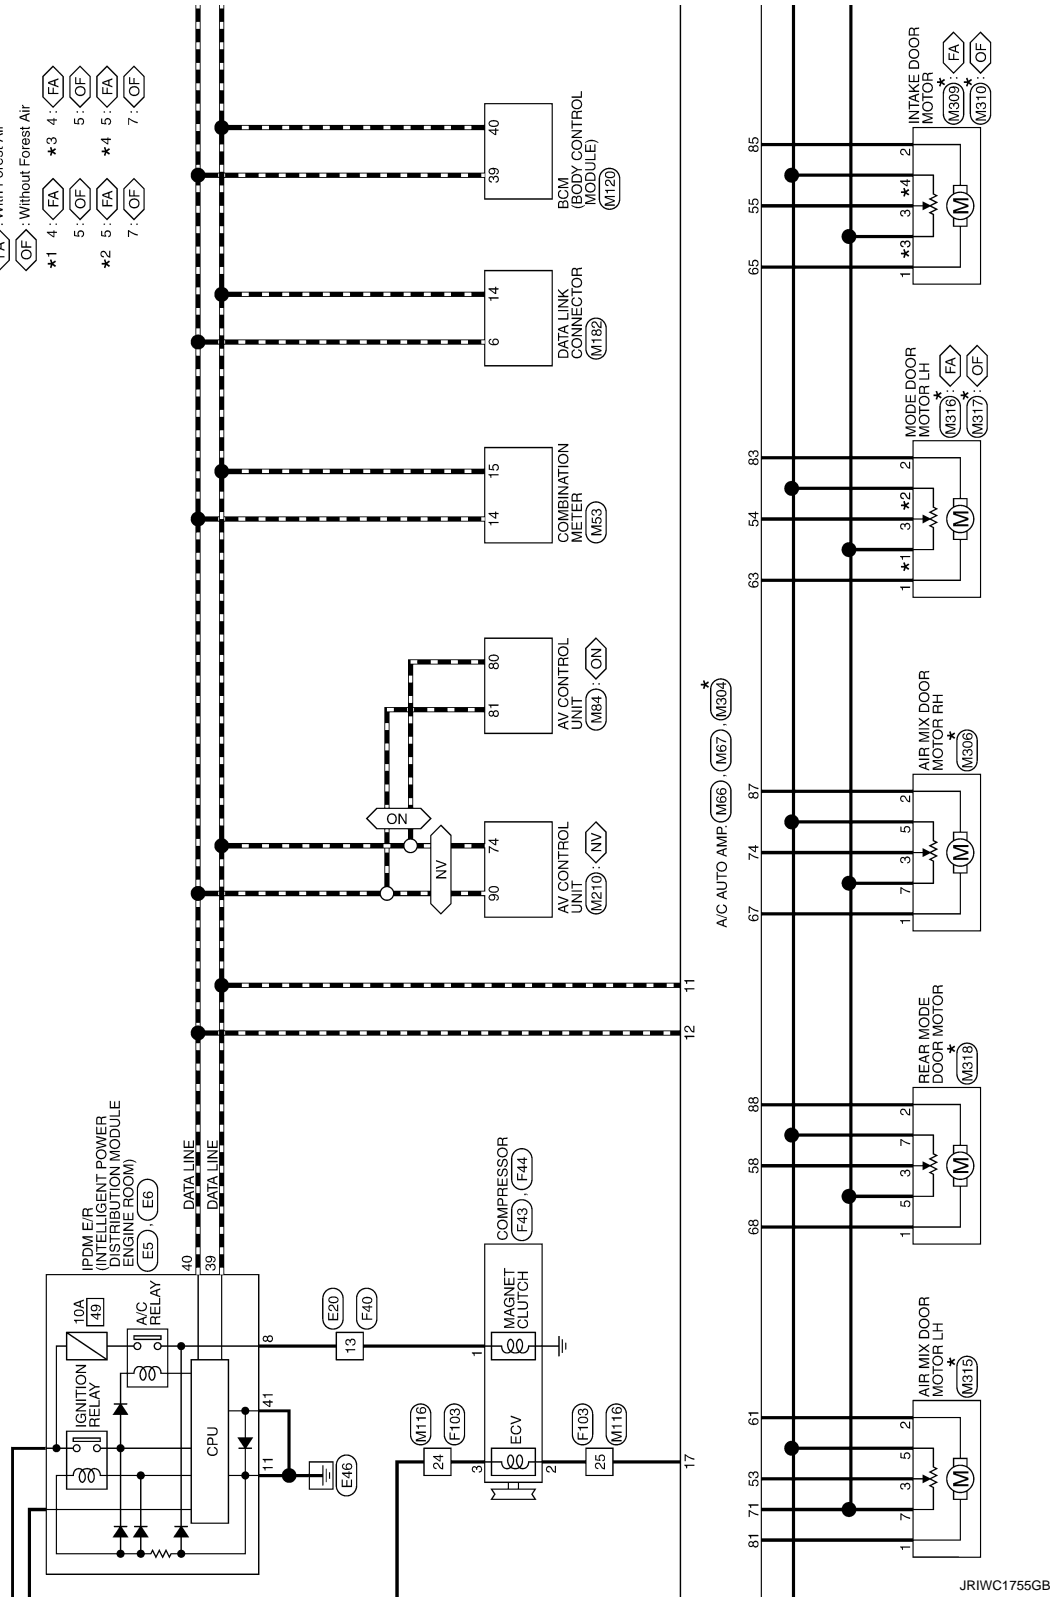

JRIWC1755GB


AUTOMATIC AIR CONDITIONING SYSTEM

[AUTOMATIC AIR CONDITIONING]

< WIRING DIAGRAM >

- $\langle \text{VQ} \rangle$: With VQ engine
- $\langle \text{VK} \rangle$: With VK engine
- $\langle \text{FA} \rangle$: With Forest Air
- $\langle \text{OF} \rangle$: Without Forest Air
- *5 4: $\langle \text{FA} \rangle$ *7 5: $\langle \text{FA} \rangle$
- 5: $\langle \text{OF} \rangle$ 7: $\langle \text{OF} \rangle$
- *6 5: $\langle \text{FA} \rangle$ *8 4: $\langle \text{FA} \rangle$
- 7: $\langle \text{OF} \rangle$ 5: $\langle \text{OF} \rangle$

*: This connector is not shown in "Harness Layout".

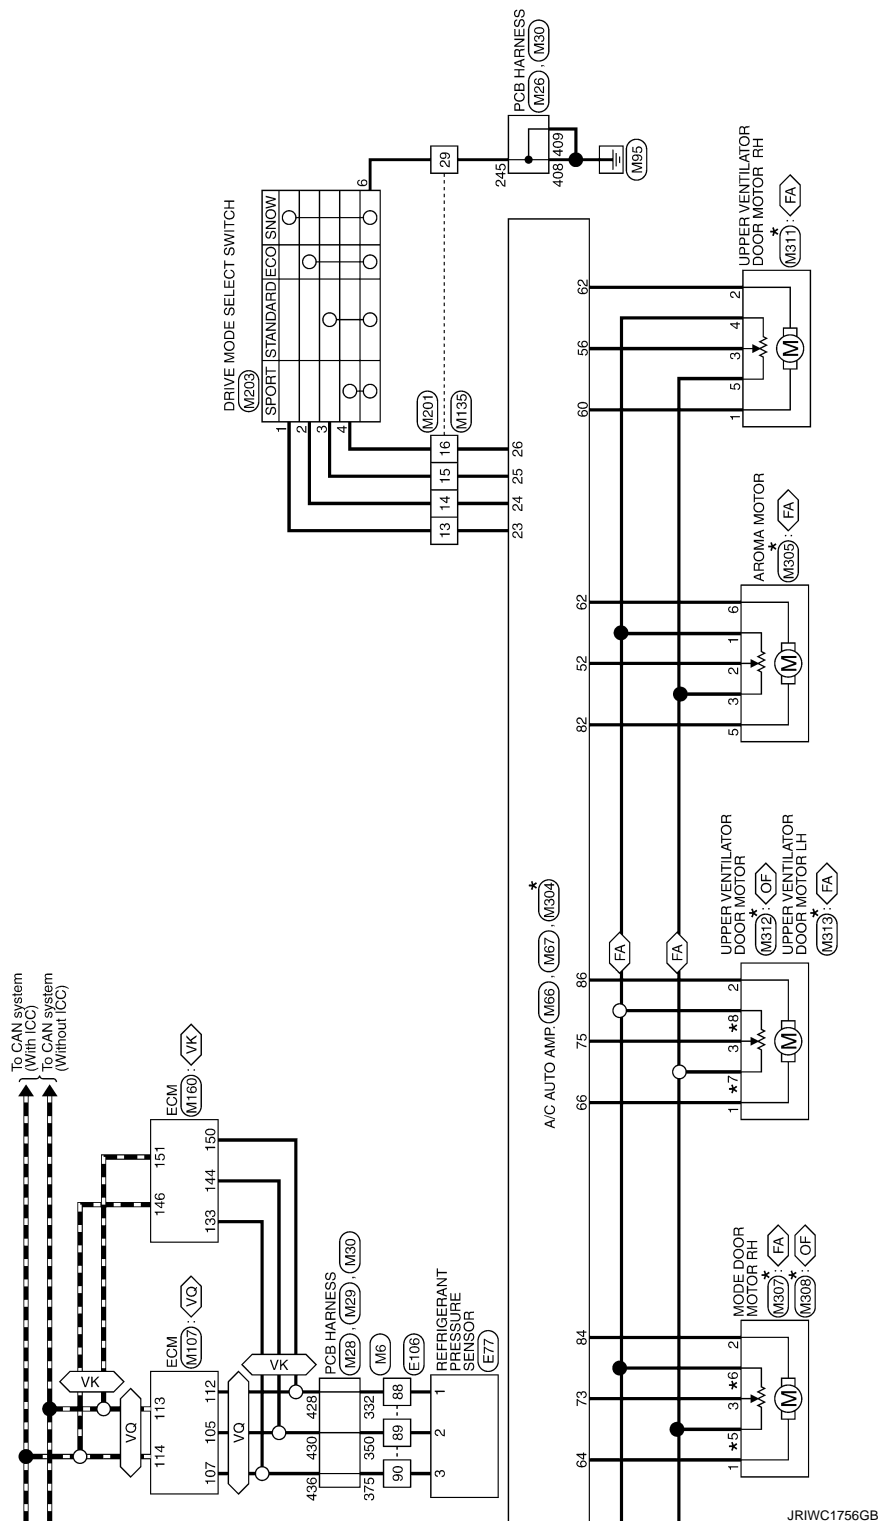

JRIWC1756GB

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

AUTOMATIC AIR CONDITIONING SYSTEM

< WIRING DIAGRAM >

[AUTOMATIC AIR CONDITIONING]

AUTOMATIC AIR CONDITIONING SYSTEM

Connector No.	E3
Connector Name	INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	TH02FW-MS1Z-M4-1V



Terminal No.	Color Of Wire	Signal Name [Specification]
4	W	ENG SOL
5	R	ECM SOL
6	R	ECM VBI [With VQ engine]
7	R	ECM VBI [With VK engine]
8	L/Y	ETC [With VQ engine]
9	L/Y	ETC [With VK engine]
10	V	A/C COMP [With VK engine]
11	V	A/C COMP [With VQ engine]
12	B	ECM BAT
13	G	P-GND
14	G	ABS ECU
15	GR	FUEL PUMP [With VQ engine]
16	W	FUEL PUMP [With VK engine]
17	V	WIPER-AUTO STOP
18	V	IGN SW
19	V	IGN SW
20	BR	DTRL RLY [With VQ engine]
21	P	DTRL RLY [With VK engine]
22	G	HOOD SW
23	SB	SUB ECU
24	O	HOOD SW
25	LG	SUB ECU
26	BR	PUSH START SW
27	BR	PUSH START SW
28	BR	MP SW [With VK engine]
29	W	MP SW [With VQ engine]
30	GR	F LIGN SW

Connector No.	E6
Connector Name	INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	TH02FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
42	L	IGN-L
43	L	IGN-H
44	L	S-GND
45	B	MOTOR FAN RLY CONT [With VQ engine]
46	Y	MOTOR FAN RLY CONT [With VK engine]
47	Y	DETENT SW
48	SB	DETENT SW
49	GR	HORN RLY [With VK engine]
50	GR	HORN RLY [With VQ engine]
51	LG	HORN SW
52	G	HORN SW
53	BR	START CONT

Connector No.	E20
Connector Name	WIRE TO WIRE
Connector Type	SAAS38MP-R5S-SH2Z



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L/W	-
2	SHIELD	-
3	SHIELD	-
4	SHIELD	-
5	L/W	-
6	W	-
7	L/B	-
8	P	-
9	P	-
10	G	-

Connector No.	E74
Connector Name	EXHAUST GAS / OFFENSE DOOR DETECTING SENSOR
Connector Type	RH02FB



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	AGS POWER
2	BY	AGS GMR
3	R	AGS S OUTPUT

Connector No.	E76
Connector Name	AMBIENT SENSOR
Connector Type	RS02FB



Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	-
2	SB	-

Terminal No.	Color Of Wire	Signal Name [Specification]
11	W	- [With VK engine]
12	Y	- [With VQ engine]
13	L	-
14	LG	- [With VK engine]
15	V	- [With VQ engine]
16	GR	-
17	W	-
18	BR	-
19	W	-
20	BR	-
21	G	-
22	O	-
23	L	-
24	GR	-
25	Y	-
26	Y	-
27	Y	-
28	Y	-
29	Y	-
30	B	-
31	LG	-
32	W	-
33	BR	-
34	O	-
35	SHIELD	-
36	G	-
37	G	-
38	Y	-
39	Y	-
40	R	-
41	W	-
42	L	-
43	L	-
44	SHIELD	-
45	R	-
46	L	-
47	L	-
48	GR	-
49	G	-
50	B	-
51	Y	-
52	W	-

AUTOMATIC AIR CONDITIONING SYSTEM

< WIRING DIAGRAM >

[AUTOMATIC AIR CONDITIONING]

AUTOMATIC AIR CONDITIONING SYSTEM

Connector No.	E77
Connector Name	REFRIGERANT PRESSURE SENSOR
Connector Type	FRK02FB



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	LG	-
3	W	-

Connector No.	E103
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS1BFW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
12F	Y	-
1F	SB	-
2F	LG	-
4F	G	-
8F	BR	-
9F	R	-

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	SB	-
3	LG	-
4	LG	-
5	O	-
6	GR	-
7	GR	-
8	G	-
9	Y	-
10	BR	-
11	SB	-
12	V	-
13	GR	-
14	GR	-
15	V	-
16	V	-
17	CR	-
18	V	-
19	CR	-
20	BR	-
21	P	-
22	L	-
23	P	-
27	SHIELD	-
28	L/O	-
29	W/L	-
31	BR	-
32	G	-
33	O	-
34	Y	-
41	BR	-
43	L	-
45	L	-
46	GR	-
47	V	-
48	G	-
49	O	-
50	LG	-

60	W	-
62	Y	-
63	BR	-
64	BR	-
65	Y	-
66	R	-
67	SB	-
71	O	-
78	SB	-
80	G	-
81	R	-
82	SB	-
83	GR	-
84	Y	-
85	L	-
86	L	-
87	V	-
88	BR	-
89	LG	-
90	W	-
91	W	-
92	P	-
93	LG	-
94	BR	-
95	W	-
97	R	-
98	Y	-
99	Y	-
100	V	-

Connector No.	F4B
Connector Name	WIRE TO WIRE
Connector Type	SAA38FB-RSB-SHZ8



Terminal No.	Color Of Wire	Signal Name [Specification]
1	SHIELD	-
2	L/W	-
3	L/B	-
4	SHIELD	-

5	L/W	-
6	W	- [With VK engine]
7	W	- [With VG engine]
7	L/B	-
8	W	-
10	G	-
11	G	- [With VK engine]
11	R	- [With VG engine]
12	W	-
13	P	-
14	V	-
15	R	-
16	O	- [With VK engine]
16	O	- [With VG engine]
19	Y	-
20	GR	-
21	GR	-
22	W	-
23	Y	-
24	Y	-
25	LG	-
28	R	-
29	W	-
30	B	-
31	V	-
32	BR	- [With VG engine]
32	LG	- [With VK engine]
33	P	- [With VG engine]
33	P	- [With VK engine]
34	Y	- [With VK engine]
34	SHIELD	-
36	L/G	- [With VK engine]
38	O/L	- [With VG engine]
39	L/Y	- [With VK engine]
39	P	- [With VG engine]
40	W/L	-
41	O/L	- [With VK engine]
41	W	- [With VG engine]
42	LG	- [With VG engine]
42	O	- [With VK engine]
43	O	- [With VG engine]
43	O	- [With VK engine]
46	SHIELD	- [With VK engine]
47	W	- [With VG engine]
47	W	- [With VK engine]
48	BR	- [With VG engine]
48	BR	- [With VK engine]
49	O/L	- [With VK engine]
49	W/L	- [With VG engine]
50	O/L	- [With VK engine]

JRIWC1758GB

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

AUTOMATIC AIR CONDITIONING SYSTEM

< WIRING DIAGRAM >

[AUTOMATIC AIR CONDITIONING]

AUTOMATIC AIR CONDITIONING SYSTEM

50	W/L	[With VQ engine]
51	SB	[With VK engine]
52	O	[With VQ engine]
52	W	[With VK engine]

Connector No.	F43
Connector Name	COMPRESSOR
Connector Type	R00FGY



Terminal No.	Color Of Wire	Signal Name [Specification]
2	O	-
3	BR	-

Connector No.	F44
Connector Name	COMPRESSOR
Connector Type	R50FEB




Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-

Connector No.	F109
Connector Name	WIRE TO WIRE
Connector Type	TK3BEW-NS10




Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	G	-
3	W	-
4	B	- [With VK engine]
4	B	- [With VQ engine]
5	B	- [With VQ engine]
5	GR	- [With VK engine]
7	LG	-
8	Y	-
9	SB	- [With VQ engine]
9	W	- [With VK engine]
10	BR	- [With VK engine]
10	V	- [With VQ engine]
11	L	-
12	Y	-
14	G	-
14	SB	-
15	R	-
16	W	-
17	GR	-
18	LG	-
21	LG	-
22	B	-
23	G	-
24	BR	-
25	O	-

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NSRBEW-M2

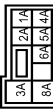


Terminal No.	Color Of Wire	Signal Name [Specification]
3A	W	-
3A	Y	-
4A	W	-
4A	Y	-
5A	V	-
5A	Y	-
8A	Y	-

Connector No.	M2
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS10FW-CS

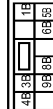

Terminal No.	Color Of Wire	Signal Name [Specification]
1B	R	-
3B	P	-
4B	G	-
5B	SB	-
6B	W	- [With VQ engine]
6B	Y	- [With VK engine]
8B	R	-
8B	R	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12EM-CS

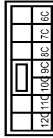

Terminal No.	Color Of Wire	Signal Name [Specification]
11C	LG	-
11C	LG	-
12C	O	-
8C	R	-
7C	B	-
8C	B	-
9C	L	-

Connector No.	M8
Connector Name	WIRE TO WIRE
Connector Type	TH82MP-CS1E-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	W	-
3	SB	-
4	LG	-
5	W	-
6	EG	-
8	Y	-
10	W	-
11	R	-
12	V	-
13	LG	-
14	L	-

AUTOMATIC AIR CONDITIONING SYSTEM

< WIRING DIAGRAM >

[AUTOMATIC AIR CONDITIONING]

AUTOMATIC AIR CONDITIONING SYSTEM

15	V	-	-	-	-
16	CG	-	-	-	-
17	B	-	-	-	-
18	V	-	-	-	-
20	SB	-	-	-	-
21	BR	-	-	-	-
22	L	-	-	-	-
23	P	-	-	-	-
27	SHIELD	-	-	-	-
28	V	-	-	-	-
29	SB	-	-	-	-
31	BG	-	-	-	-
32	P	-	-	-	-
33	R	-	-	-	-
34	BG	-	-	-	-
41	BR	-	-	-	-
44	V	-	-	-	-
45	Y	-	-	-	-
46	BG	-	-	-	-
47	V	-	-	-	-
48	G	-	-	-	-
49	BG	-	-	-	-
50	W	-	-	-	-
60	GR	-	-	-	-
61	B	-	-	-	-
62	LG	-	-	-	-
63	BR	-	-	-	-
64	L	-	-	-	-
65	R	-	-	-	-
69	P	-	-	-	-
71	L	-	-	-	-
77	B	-	-	-	-
78	V	-	-	-	-
80	G	-	-	-	-
81	L	-	-	-	-
82	B	-	-	-	-
83	BG	-	-	-	-
84	SB	-	-	-	-
85	Y	-	-	-	-
86	L	-	-	-	-
87	V	-	-	-	-
88	V	-	-	-	-
89	LG	-	-	-	-
90	BG	-	-	-	-
91	W	-	-	-	-
92	BG	-	-	-	-
93	G	-	-	-	-
94	Y	-	-	-	-
95	W	-	-	-	-
97	SB	-	-	-	-

38	R	-	-
39	V	-	-
40	L	-	-

Connector No.	M20
Connector Name	PCB HARNESS
Connector Type	TH40FB-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
11	BR	-
12	R	-
14	L	-
15	B	-
17	R	-
19	W	-
20	R	-
21	B	-
22	R	-
23	G	-
24	L	-
27	P	-
31	V	-
33	V	-
35	L	-
36	P	-
38	L	-
40	Y	-

Connector No.	M22
Connector Name	PCB HARNESS
Connector Type	TH40FB-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
81	L	-
82	V	-
84	B	-
85	B	-
86	B	-
87	B	-
88	B	-
89	Y	-
91	V	-
92	V	-
93	B	-
94	B	-
95	LG	-
96	BR	-
97	G	-
98	G	-
100	G	-
101	L	-
102	P	-
103	B	-
104	BR	-
105	R	-
107	Y	-
108	Y	-
109	BR	-
110	Y	-
112	B	-
113	P	-
114	P	-
116	B	-
117	B	-
118	B	-
119	G	-
120	V	-

Connector No.	M23
Connector Name	PCB HARNESS
Connector Type	TH40FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
121	R	-
122	V	-
123	BG	-
124	BG	-
128	BR	-
130	B	-
131	SB	-
132	LG	-
133	L	-
135	P	-
137	Y	-
138	L	-
139	P	-
140	L	-
141	W	-
142	W	-
144	W	-
145	B	-
146	B	-
147	B	-
148	L	-
149	B	-
150	P	-
151	L	-
152	B	-
153	W	-
154	W	-
155	W	-
157	W	-
158	R	-
159	R	-

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

AUTOMATIC AIR CONDITIONING SYSTEM

< WIRING DIAGRAM >

[AUTOMATIC AIR CONDITIONING]

AUTOMATIC AIR CONDITIONING SYSTEM

Connector No.	M24
Connector Name	PCB HARNESS
Connector Type	TH40FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
162	BG	-
163	BG	-
164	G	-
165	V	-
166	R	-
167	LG	-
168	R	-
169	R	-
170	B	-
172	B	-
174	W	-
175	B	-
176	L	-
177	P	-
178	Y	-
179	L	-
180	LG	-
182	BR	- [With VG engine or with VK engine without ICC]
183	G	- [With VK engine with ICC]
184	V	-
185	P	- [With BOSE system]
186	R	- [Without BOSE system]
187	L	-
188	Y	-
189	B	-
190	V	-
191	G	-
192	B	-
194	BR	-
195	SB	-
198	R	-
199	B	-

Connector No.	M25
Connector Name	PCB HARNESS
Connector Type	TH40FW-NH

Connector No.	M26
Connector Name	PCB HARNESS
Connector Type	TH40FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
241	L	-
242	L	-
243	R	-
244	L	-
245	B	-
246	B	-
247	B	-
252	B	-
253	B	-
254	B	-
255	W	-
256	R	-
258	L	-
259	L	-
260	BG	-
261	P	-
262	P	-
268	Y	-
269	GR	-
270	Y	-
271	BR	-
272	G	-
273	R	-
274	R	-
275	B	-
276	G	-
277	G	-
278	R	-
279	R	-
280	Y	-

Connector No.	M27
Connector Name	PCB HARNESS
Connector Type	TH40FB-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
282	BG	-
283	BG	-
284	BG	-
286	W	-
287	Y	-
288	W	-
289	SHIELD	-
290	B	-
291	SHIELD	-
292	B	-
293	B	-
294	B	-
295	B	-
296	B	-
298	L	-
300	W	-
301	R	-
302	R	-
303	R	-
306	Y	-
307	LG	-
308	SB	-
309	G	-
310	R	-
311	W	-
312	B	-
313	Y	-
314	Y	-
320	W	-

Connector No.	M28
Connector Name	PCB HARNESS
Connector Type	TH40FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
321	Y	-
322	Y	-
324	B	-
325	B	-
326	L	-
327	P	-
328	P	-
330	B	-
331	V	-
332	V	-
337	W	-
338	W	-
343	L	-
344	B	-
345	Y	-
346	Y	-
347	P	-
348	GR	-
349	V	-
350	LG	-
351	P	-
352	R	-
353	P	-
358	W	-
359	W	-
360	G	-


AUTOMATIC AIR CONDITIONING SYSTEM

[AUTOMATIC AIR CONDITIONING]

< WIRING DIAGRAM >

AUTOMATIC AIR CONDITIONING SYSTEM

Connector No.	M29
Connector Name	PCB HARNESS
Connector Type	TH40PW-NH

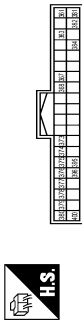


Terminal No.	Color Of Wire	Signal Name [Specification]
381	W	-
382	B	-
383	G	-
384	G	-
385	R	-
386	R	-
387	G	-
388	G	-
389	R	-
390	R	-
391	G	-
392	V	-
393	GR	-
394	P	-
395	L	-
396	L	-
397	V	-
398	V	-
399	V	-
400	V	-

Connector No.	M30
Connector Name	PCB HARNESS
Connector Type	TH40PW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
402	R	-
403	R	-
404	V	-
405	B	-
406	B	-
407	B	-
408	B	-
409	B	-
410	B	-
411	B	-
412	Y	-
413	Y	-
414	BR	-
415	LG	-
416	LG	-
417	B	-
418	SB	-
419	SB	-
420	SHIELD	-
421	V	-
422	V	-
423	V	-
424	V	-
425	V	-
426	P	-
427	P	-
428	P	-
429	P	-
430	LG	-
431	B	-
432	Y	-
433	V	-
434	BG	-
435	BG	-
436	BG	-
437	B	-
438	P	-
439	P	-
440	L	-

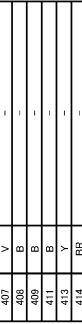


Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	BATTERY POWER SUPPLY
2	W	BATTERY POWER SUPPLY
3	W	BATTERY POWER SUPPLY
4	R	VEHICLE SPEED SIGNAL (2-PULSE)
5	R	VEHICLE SPEED SIGNAL (8-PULSE)
6	B	ILLUMINATION CONTROL SIGNAL
7	B	METER CONTROL SWITCH SIGNAL
8	B	ENTER SWITCH SIGNAL
9	G	SELECT SWITCH SIGNAL
10	GR	ILLUMINATION CONTROL SWITCH SIGNAL (+)
11	L	ILLUMINATION CONTROL SWITCH SIGNAL (-)
12	B	TRIP RESET SWITCH SIGNAL
13	L	GROUND
14	L	CAN-H
15	P	CAN-L
16	R	AIR BAG SIGNAL
17	B	FUEL LEVEL SENSOR GROUND
18	B	FUEL LEVEL SENSOR SIGNAL
19	W	ALTERNATOR SIGNAL
20	V	PARKING BRAKE SWITCH SIGNAL
21	V	BRAKE FLUID LEVEL SWITCH SIGNAL
22	G	SECURITY SIGNAL
23	L	WASHER LEVEL SWITCH SIGNAL
24	G	PADDLE SHIFTER SHIF DOWN SIGNAL
25	BG	PADDLE SHIFTER SHIF UP SIGNAL
26	G	FUEL LEVEL SENSOR SIGNAL
27	W	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
28	G	PASSENGER SEAT BELT WARNING SIGNAL
29	G	NON-MANUAL MODE SIGNAL
30	G	MANUAL MODE SHIF DOWN SIGNAL
31	V	MANUAL MODE SHIF UP SIGNAL
32	W	MANUAL MODE SIGNAL
33	W	MANUAL MODE SIGNAL

Connector No.	M53
Connector Name	COMBINATION METER
Connector Type	TH40PW-NH

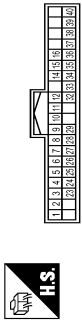

Connector No.	M65
Connector Name	A/C AUTO AMP.
Connector Type	TH20FW-T66

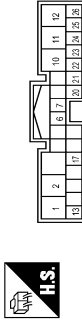

Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	BATTERY POWER SUPPLY
2	W	BATTERY POWER SUPPLY
3	W	BATTERY POWER SUPPLY
4	R	BLOWER MOTOR CONTROL SIGNAL
5	R	POWER TRANSDUCER CONTROL SIGNAL
6	B	GROUND
7	B	GROUND
8	P	CAN-L
9	L	CAN-H
10	L	AGC POWER SUPPLY
11	V	ECO CONTROL SIGNAL
12	V	ECO CONTROL SIGNAL
13	BG	HUMIDITY SENSOR (SOCA) SIGNAL
14	R	HUMIDITY SENSOR (DATA) SIGNAL
15	Y	HUMIDITY SENSOR GROUND
16	B	HUMIDITY SENSOR GROUND
17	W	DRIVE MODE SELECT SW (SNOW)
18	G	DRIVE MODE SELECT SW (ECON)
19	L	DRIVE MODE SELECT SW (SPORT)
20	Y	DRIVE MODE SELECT SW (SPORT)

Connector No.	M67
Connector Name	A/C AUTO AMP.
Connector Type	TH24FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
30	L	EXHAUST / OUTSIDE OZONE REFLECTING SENSOR SIGNAL
31	BG	AMBIENT SENSOR SIGNAL
32	LG	IN-VEHICLE SENSOR SIGNAL
33	LG	HUMIDITY SENSOR WINDOW TEMPERATURE SIGNAL

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

HAC

AUTOMATIC AIR CONDITIONING SYSTEM

< WIRING DIAGRAM >

[AUTOMATIC AIR CONDITIONING]

AUTOMATIC AIR CONDITIONING SYSTEM

35	V	SUNLOAD SENSOR (PASS) SIGNAL
36	W	SUNLOAD SENSOR (DR) SIGNAL
37	W	INSIDE ODOOR DETECTING SENSOR SIGNAL
39	W	SENSOR POWER SUPPLY
41	L	HEATED STEERING WHEEL RELAY CONTROL SIGNAL
42	W	IONIZER CONTROL SIGNAL
44	B	GROUND
45	G	HEATED STEERING WHEEL SWITCH SIGNAL
47	P	SUNLOAD SENSOR (PASS) SIGNAL

Connector No. M73
 Connector Name INSIDE ODOOR DETECTING SENSOR
 Connector Type TH32PW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	SENS SIG
2	B	SENS GRD
3	B	IGN
4	LG	IGN

Connector No. M64
 Connector Name AV CONTROL UNIT
 Connector Type TH32PW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
76	LG	AV COMM (L)
77	SB	AV COMM (H)
78	SB	AV COMM (H)
79	LG	AV COMM (L)
80	P	CAN-L
81	L	CAN-H

82	BR	SW GND
87	SHIELD	SHIELD
87	P	TEL VOICE SIGNAL (+)
88	L	TEL VOICE SIGNAL (-)
92	R	VEHICLE SPEED (8-PULSE)
93	V	PARKING BRAKE
94	BG	REVERSE
95	W	IGNITION
96	SB	DISK EJECT SIGNAL

Connector No. M88
 Connector Name IONIZER
 Connector Type TH40PW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	IGN
3	R	IGN
4	W	IDT ON / OFF


Connector No. M105
 Connector Name WIRE TO WIRE
 Connector Type TH40PW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
2	R	WIRE TO WIRE
3	B	WIRE TO WIRE
5	LG	WIRE TO WIRE
6	P	WIRE TO WIRE
7	L	WIRE TO WIRE
8	P	WIRE TO WIRE

9	B	-
10	W	-
11	W	-
12	SB	-
14	SB	-
15	BR	-
16	V	-
18	G	-
19	B	-
20	V	-
22	BG	-
23	B	-
25	W	-
27	SB	-
28	B	-
30	B	-
31	BR	-
32	L	-
33	P	-
34	LG	-
35	W	-
36	LG	-
37	L	-
38	R	-


Connector No. M107
 Connector Name ECM
 Connector Type RN24EGY-R2B-F-RH-Z

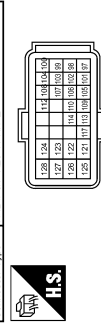

Terminal No.	Color Of Wire	Signal Name [Specification]
97	R	ACCELERATOR PEDAL POSITION SENSOR 1
98	Y	ACCELERATOR PEDAL POSITION SENSOR 2
100	W	SENSOR COMMON (ACCELERATOR PEDAL POSITION SENSOR 1)
100	W	SENSOR COMMON (ACCELERATOR PEDAL POSITION SENSOR 2)
101	SB	ASCOD STEERING SWITCH
102	P	FUEL TANK PRESSURE SENSOR
103	L	SENSOR POWER SUPPLY (FUEL TANK PRESSURE SENSOR)
104	B	SENSOR GROUND (Without ICC)
104	BR	SENSOR GROUND (With ICC)
105	LG	REFRIGERANT PRESSURE SENSOR

108	P	FUEL TANK TEMPERATURE SENSOR
109	BG	AVCC2 EXPRES/ETPRES
108	V	GND ASGD SW
109	BR	TRANSMISSION RANGE SWITCH
110	V	ENGINE SPEED SIGNAL OUTPUT
112	V	GND4 PDPPRES/FTPPRES
113	P	CAN COMMUNICATION LINE
114	L	CAN COMMUNICATION LINE
117	V	DATA LINK CONNECTOR
121	G	EVAP CANISTER VENT CONTROL VALVE
122	P	STOP LAMP SWITCH
123	B	ECM GROUND
124	B	ECM GROUND
125	SB	POWER SUPPLY FOR ECM
126	BR	ASCOD SW GND CH
127	B	ECM GND CH
128	B	ECM GROUND

Connector No. M109
 Connector Name BLOWER MOTOR
 Connector Type SNA02FW

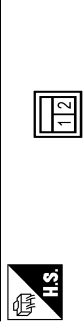

Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	BLOWER MOTOR
2	R	BLOWER MOTOR


AUTOMATIC AIR CONDITIONING SYSTEM

< WIRING DIAGRAM >

[AUTOMATIC AIR CONDITIONING]

AUTOMATIC AIR CONDITIONING SYSTEM

Connector No.	M110
Connector Name	WIRE TO WIRE
Connector Type	TH24MW-NH

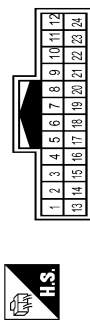


Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	R	FAN F/B
3	B	FACOT
4	R	SGC
5	L	-
6	B	-
7	BR	-
8	R	-
9	B	-
10	V	-
11	BR	-
12	G	-
13	L	-
14	B	-
15	LG	-
16	V	-
17	W	-
18	R	-
19	B	-
20	V	-
21	R	-
22	G	-
23	L	-
24	LG	-

Connector No.	M112
Connector Name	POWER TRANSMISOR
Connector Type	SLEB05FW-SMA2



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	FAN F/B
2	B	FACOT
3	B	SGC
4	B	GND

Connector No.	M116
Connector Name	WIRE TO WIRE
Connector Type	TK38MW-NS10

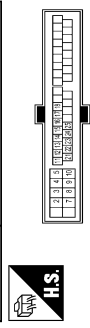

Terminal No.	Color Of Wire	Signal Name [Specification]
2	SB	-
3	Y	-
4	B	- [With VK engine]
5	SB	- [With VQ engine]
7	W	-
8	Y	-
9	SB	- [With VQ engine]
10	SB	- [With VK engine]
11	L	-
12	P	-
13	V	-
14	R	-
15	Y	-
16	SB	-

17	BR	-
18	LG	-
19	B	-
20	W	-
21	EG	-

Connector No.	M120
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	RR WINDOW DEF G RLY CONT
2	EG	COMBI SW INPUT 5
3	SB	COMBI SW INPUT 4
4	L	COMBI SW INPUT 3
5	G	COMBI SW INPUT 2
6	V	COMBI SW INPUT 1
7	Y	POWER WINDOW SW COMM
8	P	START LAMP SW
9	R	RAIN SENSOR SERIAL LINK
10	R	OPTICAL SENSOR
11	W	DIMMER SIGNAL
12	SB	SENSOR PWR SPLY
13	Y	RECEIVER / SENSOR GND
14	B	RECEIVER PWR SPLY
15	R	KYLS ENT RECEIVER COMM
16	BR	NATS ANT AMP
17	P	KYLS ENT RECEIVER RSSI
18	GR	SECURITY IND CONT
19	G	DUNGLE LINK
20	G	KYLS ANT AMP
21	G	KYLS ANT AMP
22	G	FACE DETECTION
23	G	HAZARD SW
24	O	TR LID OPEN SW
25	W	DR DOOR LINK SENSOR
26	BR	COMBI SW OUTPUT 5
27	R	COMBI SW OUTPUT 4
28	R	COMBI SW OUTPUT 3

35	Y	COMBI SW OUTPUT 2
36	LG	COMBI SW OUTPUT 1
37	R	PASSION
38	L	CAN-H
39	P	CAN-L

Connector No.	M135
Connector Name	WIRE TO WIRE
Connector Type	TH35FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	EG	-
3	L	- [With heated seat]
4	V	- [With climate controlled seat]
5	Y	- [With heated seat]
6	GR	- [With heated seat]
7	P	- [With climate controlled seat]
8	SB	-
9	G	- [With climate controlled seat]
10	LG	- [With heated seat]
11	GR	- [With heated seat]
12	EG	- [With climate controlled seat]
13	W	-
14	L	-
15	G	-
16	Y	- [With heated seat]
17	P	- [With climate controlled seat]
18	BR	-
19	GR	-
20	B	-
21	R	- [With heated seat]
22	W	- [With climate controlled seat]
23	EG	-
24	V	-
25	B	- [With heated seat]
26	LG	- [With climate controlled seat]
27	R	- [With heated seat]

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

HAC

JRIWC1764GB

AUTOMATIC AIR CONDITIONING SYSTEM


[AUTOMATIC AIR CONDITIONING]

< WIRING DIAGRAM >

AUTOMATIC AIR CONDITIONING SYSTEM

26	GB	-	[With climate control seat]
27	B	-	[With heated seat]
27	B	-	[With electric seatback heat]
28	B	-	-
29	B	-	-
30	V	-	-
32	L	-	-

Connector No.	M160
Connector Name	ECM
Connector Type	IMAB55FB-MEED1-D-LH

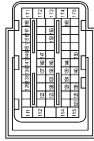

Terminal No.	Color Of Wire	Signal Name [Specification]
111	W	FUEL INJECTOR DRIVER POWER SUPPLY
112	W	FUEL INJECTOR DRIVER POWER SUPPLY
114	B	ECM GROUND
115	B	ECM GROUND
120	G	EVAP CANISTER VENT CONTROL VALVE
122	V	FUEL PUMP CONTROL MODULE (FCM)
123	BG	THROTTLE CONTROL MOTOR RELAY
125	P	FUEL PUMP CONTROL MODULE (FCM)
126	Y	ACCELERATOR PEDAL POSITION SENSOR 2
128	SB	ASC&D STEERING SWITCH
129	B	SENSOR GROUND [With ICC]
129	BR	SENSOR GROUND [With ICC]
130	Y	SENSOR GROUND
131	L	SENSOR POWER SUPPLY
133	BG	SENSOR POWER SUPPLY
134	P	FUEL TANK TEMPERATURE SENSOR
136	R	ACCELERATOR PEDAL POSITION SENSOR 1
137	G	SENSOR POWER SUPPLY
138	P	BATTERY CURRENT SENSOR
139	BG	REFRIGERANT PRESSURE SENSOR
140	G	SENSOR GROUND
141	G	IGNITION SWITCH
142	GR	FUEL PUMP CONTROL MODULE (FCM) CHECK
143	P	FUEL TANK PRESSURE SENSOR
144	LG	REFRIGERANT PRESSURE SENSOR
146	L	CAN COMMUNICATION LINE
147	BR	ASC&D BRAKE SWITCH

150	V	-	SENSOR GROUND
151	P	-	CAN COMMUNICATION LINE
156	W	-	POWER SUPPLY FOR ECM (BACK-UP)
158	P	-	STOP LAMP SWITCH
161	Y	-	ENG COMMUNICATION LINE
163	W	-	ECM RELAY (SELF SHUT-OFF)
166	BG	-	ENG COMMUNICATION LINE
169	V	-	ENGINE SPEED SIGNAL OUTPUT
171	SB	-	POWER SUPPLY FOR ECM
172	SB	-	POWER SUPPLY FOR ECM
174	B	-	ECM GROUND
175	B	-	ECM GROUND


Connector No.	M181
Connector Name	WIRE TO WIRE
Connector Type	TH40MW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
2	R	-
3	B	-
5	R	-
6	BR	-
7	L	-
8	P	-
9	B	-
10	W	-
11	LG	-
12	SB	-
14	SB	-
15	BR	-
16	V	-
18	B	-
20	V	-
22	BG	-
23	B	-
25	W	-
27	SB	-
29	B	-

30	B	-	-
31	BR	-	-
32	L	-	-
33	P	-	-
34	LG	-	-
35	W	-	-
36	LG	-	-
37	L	-	-
38	R	-	-

Connector No.	M182
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW

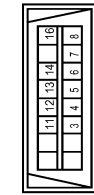

Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	-
4	B	M-CAN-L
5	B	EARTH
7	V	IGN SW
8	LG	IGN SW
11	SB	M-CAN-H
12	P	CAN-L
13	L	CAN-H
14	P	CAN-H
16	W	POWER

Connector No.	M185
Connector Name	IN-VEHICLE SENSOR
Connector Type	TH32FW-2V



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	B	-

Connector No.	M201
Connector Name	WIRE TO WIRE
Connector Type	TH32MW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	BG	-
5	V	-
6	P	-
7	SB	-
10	G	-
11	L	-
12	R	-
13	W	-
14	L	-
16	Q	-
17	W	-
18	BR	-
19	GR	-
20	B	-
21	R	-
22	B	-

JRIWC1765GB

AUTOMATIC AIR CONDITIONING SYSTEM


[AUTOMATIC AIR CONDITIONING]

< WIRING DIAGRAM >

AUTOMATIC AIR CONDITIONING SYSTEM

Terminal No.	Color Of Wire	Signal Name [Specification]
23	B/G	-
24	Y	-
25	B	PARKING BRAKE SIGNAL
26	B	COMPOSITE IMAGE SIGNAL
27	B	COMPOSITE IMAGE SIGNAL GND
27	R	- [With climate controlled seat]
27	R	- [With heated seat]
28	B	-
29	B	-
30	B	MICROPHONE YCC
32	R	-

Connector No.	M203
Connector Name	DRIVE MODE SELECT SWITCH
Connector Type	TH10P2-NH

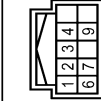

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	L	-
3	G	-
4	Y	-
5	B	-
7	B	-
9	R	-

Connector No.	M210
Connector Name	AV CONTROL UNIT
Connector Type	TH35PW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
65	V	PARKING BRAKE SIGNAL
67	R	COMPOSITE IMAGE SIGNAL GND
68	W	COMPOSITE IMAGE SIGNAL
69	G	I-KEY IDENTIFICATION SIGNAL
70	P	-
71	SHIELD	MICROPHONE SHIELD
72	G	MICROPHONE YCC
73	BR	COMM (CONT->DISP)
74	P	CAN-L
75	LG	AV COMM (L)
76	LG	AV COMM (L)
79	SB	DIMMER SIGNAL
80	W	REMOTON SIGNAL
82	G	REVERSE SIGNAL
83	SHIELD	VEHICLE SPEED SIGNAL (B-PULSE) SHIELD
84	B	COMPOSITE IMAGE SYNC SIGNAL
87	R	MICROPHONE SIGNAL
88	SHIELD	SHIELD
89	Y	COMM (DISP->CONT)
90	L	CAN-H
91	SB	AV COMM (H)
92	SB	AV COMM (H)

Connector No.	M221
Connector Name	WIRE TO WIRE
Connector Type	M03PW-LC




Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	R	-
3	Y	-

Connector No.	M222
Connector Name	WIRE TO WIRE
Connector Type	M03PW-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	Y	-
3	Y	-


Connector No.	M204
Connector Name	A/C AUTO AMP
Connector Type	TH40PW-NH

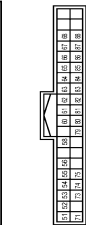

Terminal No.	Color Of Wire	Signal Name [Specification]
51	B	INTAKE SENSOR SIGNAL
52	W/R	AROMA MOTOR PBR F/B SIGNAL
53	G	AIR MIX DOOR MOTOR (DR) PBR F/B SIGNAL
54	P	MODE DOOR MOTOR (DR) PBR F/B SIGNAL
55	L/B	INTAKE DOOR MOTOR PBR F/B SIGNAL
56	Y/W	UP VENT DOOR MOTOR (PASS) PBR F/B SIGNAL
58	P/B	RR MODE DOOR MOTOR PBR F/B SIGNAL
59	B/R	UP VENT DOOR MOTOR (PASS) CLOSE DRIVE SIGNAL
61	BR	AIR MIX DOOR MOTOR (DR) COOL DRIVE SIGNAL
62	G/R	MODE DOOR MOTOR (PASS) COOL DRIVE SIGNAL
63	Y/B	MODE DOOR MOTOR (PASS) HEAT DRIVE SIGNAL
64	B/B	MODE DOOR MOTOR (PASS) VENT DRIVE SIGNAL
65	L/R	INTAKE DOOR MOTOR REC DRIVE SIGNAL
66	BR/B	UP VENT DOOR MOTOR CLOSE DRIVE SIGNAL
67	LG	AIR MIX DOOR MOTOR (PASS) HOT DRIVE SIGNAL
68	R/W	RR MODE DOOR MOTOR VENT DRIVE SIGNAL
71	R	EACH DOOR MOTOR PBR POWER SUPPLY

Terminal No.	Color Of Wire	Signal Name [Specification]
73	SB	MODE DOOR MOTOR (PASS) PBR F/B SIGNAL
74	SB	MODE DOOR MOTOR (PASS) PBR F/B SIGNAL
75	G/B	UP VENT DOOR MOTOR PBR F/B SIGNAL
79	W	intake sensor sensor / each door motor sensor
80	BR/W	UP VENT DOOR MOTOR (PASS) OPEN DRIVE SIGNAL
81	Y	AIR MIX DOOR MOTOR (DR) HOT DRIVE SIGNAL
82	LG/R	AROMA MOTOR LEAF SCENT DRIVE SIGNAL
83	B	MODE DOOR MOTOR (DR) DEF DRIVE SIGNAL
84	W/B	MODE DOOR MOTOR (PASS) DEF DRIVE SIGNAL
85	LG/B	INTAKE DOOR MOTOR FIE DRIVE SIGNAL
86	Y/B	UP VENT DOOR MOTOR OPEN DRIVE SIGNAL
87	GR	AIR MIX DOOR MOTOR (PASS) COOL DRIVE SIGNAL
88	B/W	RR MODE DOOR MOTOR FOOT DRIVE SIGNAL

Connector No.	M205
Connector Name	AROMA MOTOR
Connector Type	TRW-8612100-F

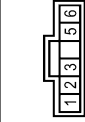

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	W/R	-
3	R	-
5	LG/R	-
6	GR	-

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

AUTOMATIC AIR CONDITIONING SYSTEM

< WIRING DIAGRAM >

[AUTOMATIC AIR CONDITIONING]

AUTOMATIC AIR CONDITIONING SYSTEM

Connector No.	M312
Connector Name	UPPER VENTILATOR DOOR MOTOR
Connector Type	JA407FH

Connector No.	M310
Connector Name	INTAKE DOOR MOTOR
Connector Type	JA407FH

Connector No.	M308
Connector Name	MODE DOOR MOTOR RH
Connector Type	JA407FH

Connector No.	M306
Connector Name	AIR MIX DOOR MOTOR RH
Connector Type	JA407FH

Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR/B	-
2	Y/B	-
3	G/B	-
5	W	-
7	R	-

Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR/B	-
2	LG/B	-
3	LG/B	-
5	R	-
7	W	-

Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR/B	-
2	W	-
3	SB	-
5	R	-
7	W	-

Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	GR	-
3	W	-
5	W	-
7	R	-

Connector No.	M313
Connector Name	UPPER VENTILATOR DOOR MOTOR LH
Connector Type	7283 5830

Connector No.	M311
Connector Name	UPPER VENTILATOR DOOR MOTOR RH
Connector Type	7283 5830

Connector No.	M309
Connector Name	INTAKE DOOR MOTOR
Connector Type	7283 5830

Connector No.	M307
Connector Name	MIDDLE DOOR MOTOR RH
Connector Type	7283 5830

Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR/B	-
2	Y/B	-
3	G/B	-
4	W	-
5	R	-

Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR/B	-
2	BR/W	-
3	Y/W	-
4	W	-
5	R	-

Terminal No.	Color Of Wire	Signal Name [Specification]
1	L/R	-
2	LG/B	-
3	L/B	-
4	R	-
5	W	-

Terminal No.	Color Of Wire	Signal Name [Specification]
1	R/B	-
2	W/B	-
3	SB	-
4	R	-
5	W	-

JRIWC1767GB

AUTOMATIC AIR CONDITIONING SYSTEM

< WIRING DIAGRAM >

[AUTOMATIC AIR CONDITIONING]


AUTOMATIC AIR CONDITIONING SYSTEM

Connector No.	M314
Connector Name	INTAKE SENSOR
Connector Type	TK02FW-2V




Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	B	-

Connector No.	M315
Connector Name	AIR MIX DOOR MOTOR LH
Connector Type	JAA07FH

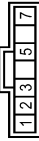

Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	BR	-
3	G	-
5	W	-
7	R	-

Connector No.	M316
Connector Name	MODE DOOR MOTOR LH
Connector Type	Z383-8830

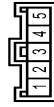

Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	W	-
3	B	-
4	R	-
5	W	-

Connector No.	M317
Connector Name	MODE DOOR MOTOR LH
Connector Type	JAA07FH




Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	B	-
3	P	-
5	R	-
7	W	-

Connector No.	M318
Connector Name	REAR MODE DOOR MOTOR
Connector Type	JAA07FH




Terminal No.	Color Of Wire	Signal Name [Specification]
1	RY	-
2	RY	-
3	RY	-
5	R	-
7	W	-

Connector No.	RB
Connector Name	HUMIDITY SENSOR
Connector Type	AURFW

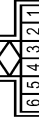

Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	R	-
3	W	-
4	Y	-
5	LG	-
6	L	-

Connector No.	R7
Connector Name	WIRE TO WIRE
Connector Type	1124FW-NH

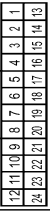

Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	W	-
3	W	-
4	R	-
5	L	-
6	B	-
7	R	-
8	P	-
9	B	-
10	V	-
11	BR	-
12	G	-
13	L	-
14	L	-
15	LG	-
16	W	-
17	W	-
18	R	-
19	B	-
20	R	-
21	R	-
22	G	-
23	L	-
24	LG	-

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[AUTOMATIC AIR CONDITIONING]


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:000000010099424

OVERALL SEQUENCE

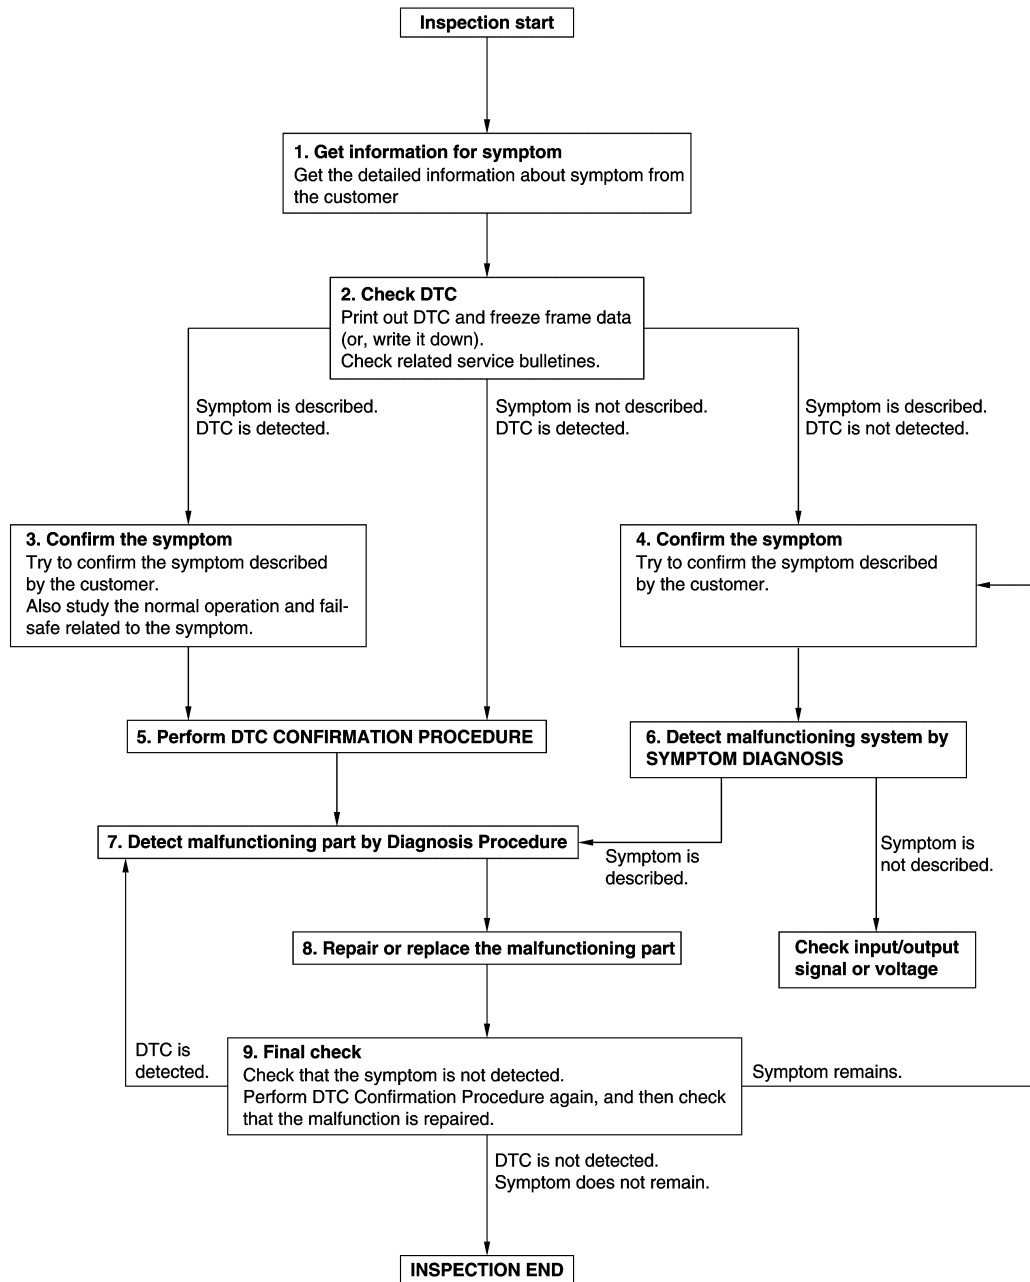

JMKIA8652GB

DETAILED FLOW

Revision: 2013 November

HAC-66

2014 Q70

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[AUTOMATIC AIR CONDITIONING]

1.GET INFORMATION FOR SYMPTOM

1. Get detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurs).
2. Check operation condition of the function that is malfunctioning.

>> GO TO 2.

2.CHECK DTC

1. Check DTC.
2. Perform the following procedure if DTC is detected.
 - Record DTC and freeze frame data (Print them out using CONSULT.)
 - Erase DTC.
 - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

Are any symptoms described and any DTC detected?

Symptom is described, DTC is detected>>GO TO 3.

Symptom is described, DTC is not detected>>GO TO 4.

Symptom is not described, DTC is detected>>GO TO 5.

3.CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Also study the normal operation and fail-safe related to the symptom.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5.

4.CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6.

5.PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC CONFIRMATION PROCEDURE for the detected DTC, and then check that DTC is detected again. At this time, always connect CONSULT to the vehicle, and check self diagnostic results in real time. If two or more DTCs are detected, refer to DTC INSPECTION PRIORITY CHART, and determine trouble diagnosis order.

NOTE:

- Freeze frame data is useful if the DTC is not detected.
- Perform Component Function Check if DTC CONFIRMATION PROCEDURE is not included on Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check.

If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC CONFIRMATION PROCEDURE.

Is DTC detected?

YES >> GO TO 7.

NO >> Check according to [GI-47. "Intermittent Incident"](#).

6.DETECT MALFUNCTIONING SYSTEM BY SYMPTOM DIAGNOSIS

Detect malfunctioning system according to SYMPTOM DIAGNOSIS based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

Is the symptom described?

YES >> GO TO 7.

NO >> Monitor input data from related sensors or check voltage of related module terminals using CONSULT.

7.DETECT MALFUNCTIONING PART BY DIAGNOSIS PROCEDURE

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

DIAGNOSIS AND REPAIR WORK FLOW

[AUTOMATIC AIR CONDITIONING]

< BASIC INSPECTION >

Inspect according to Diagnosis Procedure of the system.

Is malfunctioning part detected?

YES >> GO TO 8.

NO >> Check according to [GI-47. "Intermittent Incident"](#).

8. REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnosis Procedure again after repair and replacement.
3. Check DTC. If DTC is detected, erase it.

>> GO TO 9.

9. FINAL CHECK

When DTC is detected in step 2, perform DTC CONFIRMATION PROCEDURE again, and then check that the malfunction is repaired securely.

When symptom is described by the customer, refer to confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Is DTC detected and does symptom remain?

YES-1 >> DTC is detected: GO TO 7.

YES-2 >> Symptom remains: GO TO 4.

NO >> Before returning the vehicle to the customer, always erase DTC.

OPERATION INSPECTION

< BASIC INSPECTION >

[AUTOMATIC AIR CONDITIONING]

OPERATION INSPECTION

AUTOMATIC AIR CONDITIONING SYSTEM (WITH FOREST AIR)

AUTOMATIC AIR CONDITIONING SYSTEM (WITH FOREST AIR) : Work Procedure

INFOID:000000010099425

DESCRIPTION

The purpose of the operational check is to check that the individual system operates normally.

Check condition : Engine running at normal operating temperature.

OPERATION INSPECTION

1. CHECK BLOWER MOTOR

Operate the fan switch. Check that the fan speed changes. Check the operation for all fan speeds.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Blower motor system malfunction. Refer to [HAC-150, "Diagnosis Procedure"](#).

2. CHECK LH/RH INDEPENDENT AIR OUTLET ADJUSTMENT FUNCTION

1. Operate MODE switch (driver side) and the DEF switch. Check that the air outlets change according to each indicated air outlet by placing a hand in front of the outlets (driver side). Refer to [VTL-6, "System Description"](#).

2. Operate MODE switch (passenger side) and the DEF switch. Check that the air outlets change according to each indicated air outlet by placing a hand in front of the outlets (passenger side). Refer to [VTL-6, "System Description"](#).

3. Press CLIMATE switch. The "Climate" menu screen is indicated on display.

4. Touch "DUAL". Check that the air outlet setting (LH/RH) is unified to the driver side air outlet setting.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Refer to [HAC-165, "Symptom Table"](#) and perform the appropriate diagnosis.

3. CHECK DISCHARGE AIR ("UPPER VENT")

1. Press MODE switch to set the air outlet to other than D/F or DEF.

2. Touch "Upper Vent". Check that air flow blows from upper ventilator.

3. Touch "Upper Vent" again. Check that air flow from upper ventilator stops.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Refer to [HAC-165, "Symptom Table"](#) and perform the appropriate diagnosis.

4. CHECK INTAKE AIR

1. Press intake switch to set the air inlet to recirculation. The intake switch indicator turns ON.

2. Listen to intake sound and confirm air inlets change.

3. Press intake switch again to set the air inlet to fresh air intake. The intake switch indicator turns OFF.

4. Listen to intake sound and confirm air inlets change.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Intake door system malfunction. Refer to [HAC-119, "Diagnosis Procedure"](#).

5. CHECK COMPRESSOR

1. Touch "A/C". Check visually and by sound that the compressor operates.

2. Touch "A/C" again. Check that the compressor stops.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Compressor does not operate. Refer to [HAC-168, "Diagnosis Procedure"](#).

6. CHECK LH/RH INDEPENDENT TEMPERATURE ADJUSTMENT FUNCTION

OPERATION INSPECTION

< BASIC INSPECTION >

[AUTOMATIC AIR CONDITIONING]

1. Operate the temperature control switch (driver side). Check that the discharge air temperature (driver side) changes.
2. Operate the temperature control switch (passenger side). Check that the discharge air temperature (passenger side) changes.
3. Touch "DUAL". Check that the air temperature setting (LH/RH) is unified to the driver side temperature setting.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Refer to [HAC-165. "Symptom Table"](#) and perform the appropriate diagnosis.

7. CHECK WITH TEMPERATURE SETTING LOWERED

1. Operate the compressor.
2. Operate the temperature control switch and lower the set temperature to 18°C (60°F).
3. Check that the cool air blows from the outlets.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Insufficient cooling. Refer to [HAC-170. "Diagnosis Procedure"](#).

8. CHECK TEMPERATURE INCREASE

1. Turn temperature control switch to raise temperature setting at 32°C (90°F).
2. Check that warm air blows from outlets.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Insufficient heating. Refer to [HAC-171. "Diagnosis Procedure"](#).

9. CHECK AUTO MODE

1. Press AUTO switch to confirm that "AUTO" is indicated on the display.
2. Operate the temperature control switch to check that the fan speed or air outlet changes (the air flow temperature or fan speed varies depending on the ambient temperature, in-vehicle temperature, and set temperature).

Is the inspection result normal?

YES >> GO TO 10.

NO >> Refer to [HAC-165. "Symptom Table"](#) and perform the appropriate diagnosis.

10. CHECK MEMORY FUNCTION

1. Set temperature control switch to 32.0°C (90°F).
2. Press the OFF switch.
3. Turn ignition switch OFF.
4. Turn ignition switch ON.
5. Press AUTO switch.
6. Check that the set temperature is maintained.

Is the inspection result normal?

YES >> GO TO 11.

NO >> Replace A/C auto amp. Refer to [HAC-175. "Removal and Installation"](#).

11. CHECK INTELLIGENT KEY INTERLOCK FUNCTION

1. Operate fan switch. Set fan speed to 1st speed.
2. Turn ignition switch OFF.
3. Lock door using Intelligent Key or driver door request switch.
4. Switch to another Intelligent Key and unlock door using Intelligent Key or driver door request switch.
5. Turn ignition switch ON.
6. Operate fan switch. Set fan speed to 7th speed.
7. Operate temperature control switch (driver side). Decrease setting temperature to 18.0°C (60°F).
8. Turn ignition switch OFF.
9. Lock door using Intelligent Key or driver door request switch.
10. Switch to another Intelligent Key and unlock door using Intelligent Key or driver door request switch.
11. Turn ignition switch ON.
12. Check that "Connection with the key has been done." is indicated on display and that air conditioning system starts to operate automatically by setting temperature to 32.0°C (90°F) and fan speed to 1st.

OPERATION INSPECTION

[AUTOMATIC AIR CONDITIONING]

< BASIC INSPECTION >

Is the inspection result normal?

YES >> INSPECTION END

NO >> Intelligent Key interlock function malfunctioning. Refer to [HAC-172. "Diagnosis Procedure"](#).

AUTOMATIC AIR CONDITIONING SYSTEM (WITHOUT FOREST AIR)

AUTOMATIC AIR CONDITIONING SYSTEM (WITHOUT FOREST AIR) : Work Procedure

INFOID:000000010099426

DESCRIPTION

The purpose of the operational check is to check that the individual system operates normally.

Check condition : Engine running at normal operating temperature.

OPERATION INSPECTION

1. CHECK BLOWER MOTOR

Operate the fan switch. Check that the fan speed changes. Check the operation for all fan speeds.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Blower motor system malfunction. Refer to [HAC-150. "Diagnosis Procedure"](#).

2. CHECK LH/RH INDEPENDENT AIR OUTLET ADJUSTMENT FUNCTION

1. Operate MODE switch (driver side) and the DEF switch. Check that the air outlets change according to each indicated air outlet by placing a hand in front of the outlets (driver side). Refer to [VTL-6. "System Description"](#).

2. Operate MODE switch (passenger side) and the DEF switch. Check that the air outlets change according to each indicated air outlet by placing a hand in front of the outlets (passenger side). Refer to [VTL-6. "System Description"](#).

3. Press CLIMATE switch. The "Climate" menu screen is indicated on display.

4. Touch "DUAL". Check that the air outlet setting (LH/RH) is unified to the driver side air outlet setting.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Refer to [HAC-165. "Symptom Table"](#) and perform the appropriate diagnosis.

3. CHECK DISCHARGE AIR ("UPPER VENT")

1. Press MODE switch to set the air outlet to other than D/F or DEF.

2. Touch "Upper Vent". Check that air flow blows from upper ventilator.

3. Touch "Upper Vent" again. Check that air flow from upper ventilator stops.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Upper ventilator system malfunction. Refer to [HAC-124. "Diagnosis Procedure"](#).

4. CHECK INTAKE AIR

1. Press REC switch to set the air inlet to recirculation. The REC switch indicator turns ON.

2. Listen to intake sound and confirm air inlets change.

3. Press FRE switch again to set the air inlet to fresh air intake. The FRE switch indicator turns ON.

4. Listen to intake sound and confirm air inlets change.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Intake door system malfunction. Refer to [HAC-119. "Diagnosis Procedure"](#).

5. CHECK COMPRESSOR

1. Touch "A/C". Check visually and by sound that the compressor operates.

2. Touch "A/C" again. Check that the compressor stops.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Compressor does not operate. Refer to [HAC-168. "Diagnosis Procedure"](#).

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

OPERATION INSPECTION

< BASIC INSPECTION >

[AUTOMATIC AIR CONDITIONING]

6. CHECK LH/RH INDEPENDENT TEMPERATURE ADJUSTMENT FUNCTION

1. Operate the temperature control switch (driver side). Check that the discharge air temperature (driver side) changes.
2. Operate the temperature control switch (passenger side). Check that the discharge air temperature (passenger side) changes.
3. Touch "DUAL". Check that the air temperature setting (LH/RH) is unified to the driver side temperature setting.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Refer to [HAC-165, "Symptom Table"](#) and perform the appropriate diagnosis.

7. CHECK WITH TEMPERATURE SETTING LOWERED

1. Operate the compressor.
2. Operate the temperature control switch and lower the set temperature to 18°C (60°F).
3. Check that the cool air blows from the outlets.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Insufficient cooling. Refer to [HAC-170, "Diagnosis Procedure"](#).

8. CHECK TEMPERATURE INCREASE

1. Turn temperature control switch to raise temperature setting at 32°C (90°F).
2. Check that warm air blows from outlets.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Insufficient heating. Refer to [HAC-171, "Diagnosis Procedure"](#).

9. CHECK AUTO MODE

1. Press AUTO switch to confirm that "AUTO" is indicated on the display.
2. Operate the temperature control switch to check that the fan speed or air outlet changes (the air flow temperature or fan speed varies depending on the ambient temperature, in-vehicle temperature, and set temperature).

Is the inspection result normal?

YES >> GO TO 10.

NO >> Refer to [HAC-165, "Symptom Table"](#) and perform the appropriate diagnosis.

10. CHECK MEMORY FUNCTION

1. Set temperature control switch to 32.0°C (90°F).
2. Press the OFF switch.
3. Turn ignition switch OFF.
4. Turn ignition switch ON.
5. Press AUTO switch.
6. Check that the set temperature is maintained.

Is the inspection result normal?

YES >> GO TO 11.

NO >> Replace A/C auto amp. Refer to [HAC-175, "Removal and Installation"](#).

11. CHECK INTELLIGENT KEY INTERLOCK FUNCTION

1. Operate fan switch. Set fan speed to 1st speed.
2. Turn ignition switch OFF.
3. Lock door using Intelligent Key or driver door request switch.
4. Switch to another Intelligent Key and unlock door using Intelligent Key or driver door request switch.
5. Turn ignition switch ON.
6. Operate fan switch. Set fan speed to 7th speed.
7. Operate temperature control switch (driver side). Decrease setting temperature to 18.0°C (60°F).
8. Turn ignition switch OFF.
9. Lock door using Intelligent Key or driver door request switch.
10. Switch to another Intelligent Key and unlock door using Intelligent Key or driver door request switch.
11. Turn ignition switch ON.

OPERATION INSPECTION

[AUTOMATIC AIR CONDITIONING]

< BASIC INSPECTION >

12. Check that "Connection with the key has been done." is indicated on display and that air conditioning system starts to operate automatically by setting temperature to 32.0°C (90°F) and fan speed to 1st.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Intelligent Key interlock function malfunctioning. Refer to [HAC-172. "Diagnosis Procedure"](#).

FOREST AIR SYSTEM

FOREST AIR SYSTEM : Work Procedure

INFOID:000000010099427

DESCRIPTION

The purpose of the operational check is to check that the individual system operates normally.

NOTE:

Check that automatic air conditioning system operates normally. Refer to [HAC-69. "AUTOMATIC AIR CONDITIONING SYSTEM \(WITH FOREST AIR\) : Work Procedure"](#).

Check condition : Engine running at normal operating temperature
: Turn FOREST switch ON and turn it OFF once. Turn FOREST switch ON again and wait for 5 minutes or more.

OPERATION INSPECTION

1. CHECK PLASMACLUSTER™ CONTROL

Check the ionizer operation sound (whirring sound) in the duct by putting an ear to the side ventilator grille (driver side) outlet while pressing fan switch and OFF switch alternately.

NOTE:

- Plasmacluster™ ion technology developed by Sharp Corporation is installed in this item.
- Plasmacluster™ is a trademark of Sharp Corporation.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Ionizer system malfunction. Refer to [HAC-161. "Diagnosis Procedure"](#).

2. CHECK PLASMACLUSTER™ CONTROL OPERATION STATUS

Operate fan switch. Visually check that status indicator in display changes in accordance with the following table.

Fan speed	Display (ion indicator)
2nd	CLEAN
5th	QUICK CLEAN

NOTE:

- Plasmacluster™ ion technology developed by Sharp Corporation is installed in this item.
- Plasmacluster™ is a trademark of Sharp Corporation.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace A/C auto amp. Refer to [HAC-175. "Removal and Installation"](#).

3. CHECK BREEZY AIR CONTROL

Place a hand to air outlet. Check that breezy air control operates when air outlet is VENT or FOOT mode and temperature in passenger room is stable (in the status that fan speed lowers to 3rd speed)

NOTE:

Breezy air control does not operate when air outlet is B/L.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace A/C auto amp. Refer to [HAC-175. "Removal and Installation"](#).

4. CHECK BREEZY AIR CONTROL OPERATION STATUS

1. Press CLIMATE switch. The "Climate" menu screen is indicated on display.

OPERATION INSPECTION

< BASIC INSPECTION >

[AUTOMATIC AIR CONDITIONING]

2. Touch "Forest Air Info". The "Forest Air Info" screen is indicated on display.
3. Check that breezy air animation that is imaged from breezy air is indicated on display while breezy air control is operated.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace A/C auto amp. Refer to [HAC-175, "Removal and Installation"](#).

5. CHECK AUTOMATIC INTAKE CONTROL (EXHAUST GAS/OUTSIDE ODOR DETECTING MECHANISM)

1. Check that the operation is in fresh air intake mode.
2. Apply cigarette smoke or similar substance to exhaust gas/outside odor detecting sensor portion.
3. Listen to intake sound and confirm air inlets change.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Exhaust gas/outside odor detecting sensor system malfunction. Refer to [HAC-92, "Diagnosis Procedure"](#).

6. CHECK AMBIENT AIR JUDGEMENT STATUS

1. Apply cigarette smoke or similar substance to exhaust gas/outside odor detecting sensor portion.
2. Visually check that indicator of ambient air status in display changes to orange.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace A/C auto amp. Refer to [HAC-175, "Removal and Installation"](#).

7. AIR FLOW CONTROL (INSIDE ODOR DETECTING MECHANISM)

1. Operate temperature control switch (driver side). Set temperature to 20°C (68°F).
2. Apply cigarette smoke or similar substance to air inlet while fan speed is in 5th or 6th speed status.
3. Place a hand to air outlet. Check that air flow increases.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Inside odor detecting sensor system malfunction. Refer to [HAC-157, "Diagnosis Procedure"](#).

8. CHECK INTERIOR AIR JUDGEMENT STATUS

1. Apply cigarette smoke or similar substance to air inlet.
2. Visually check that indicator of interior air status in display changes to orange.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Replace A/C auto amp. Refer to [HAC-175, "Removal and Installation"](#).

9. CHECK AUTOMATIC DEFOGGING CONTROL

1. Apply vapor to humidity sensor portion.
2. Check that the operation is in accordance with the following status.
 - Air outlet: DEF
 - Air inlet: Fresh air intake
 - Compressor: ON

Is the inspection result normal?

YES >> GO TO 10.

NO >> Humidity sensor system malfunction. Refer to [HAC-140, "Diagnosis Procedure"](#).

10. CHECK AUTOMATIC DEFOGGING CONTROL OPERATION STATUS

1. Apply vapor to humidity sensor portion.
2. Visually check that indicator of windshield in display is indicated in white.

Is the inspection result normal?

YES >> GO TO 11.

NO >> Replace A/C auto amp. Refer to [HAC-175, "Removal and Installation"](#).

11. CHECK AROMA DIFFUSER CONTROL (AROMA MOTOR OPERATION)

1. Operate FOREST switch and OFF switch alternately so that aroma diffuser control switches between ON and OFF.

OPERATION INSPECTION

< BASIC INSPECTION >

[AUTOMATIC AIR CONDITIONING]

2. Perform this operation for 2 sets. Check by operation sound that aroma motor operates.

NOTE:

Operation of aroma diffuser control can be checked immediately after FOREST switch is turned OFF once, and then is turned ON again. Operation direction of motor is switched by turning it ON again after turning it OFF. (Leaf scent ⇔ Fragrant wood)

Is the inspection result normal?

YES >> GO TO 12.

NO >> Aroma motor system malfunction. Refer to [HAC-135. "Diagnosis Procedure"](#).

12. CHECK AROMA DIFFUSER CONTROL (FRAGRANCE)

1. Operate FOREST switch and OFF switch alternately so that aroma diffuser control switches between ON and OFF.

2. Perform this operation for 2 sets. Check by fragrance that 2 kinds of aroma are diffused alternately.

NOTE:

Operation of aroma diffuser control can be checked immediately after FOREST switch is turned OFF once, and then is turned ON again. Operation direction of motor is switched by turning it ON again after turning it OFF. (Leaf scent ⇔ Fragrant wood)

Is the inspection result normal?

YES >> GO TO 13.

NO >> Replace aroma cartridge. Refer to [HAC-188. "AROMA CARTRIDGE : Removal and Installation"](#).

13. CHECK AROMA DIFFUSER CONTROL OPERATION STATUS

1. Operate FOREST switch and OFF switch alternately so that aroma diffuser control switches between ON and OFF.

2. Perform this operation for 2 sets. Visually check that indication of fragrance (Leaf scent ⇔ Fragrant wood) in display switches alternately.

NOTE:

Operation of aroma diffuser control can be checked immediately after FOREST switch is turned OFF once, and then is turned ON again. Operation direction of motor is switched by turning it ON again after turning it OFF. (Leaf scent ⇔ Fragrant wood)

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace A/C auto amp. Refer to [HAC-175. "Removal and Installation"](#).

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (A/C AUTO AMP.)

Description

INFOID:000000010099428

When replacing A/C auto amp., save or print current vehicle specification with CONSULT "Configuration" before replacement.

BEFORE REPLACEMENT

NOTE:

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual setting" after replacing A/C auto amp.

AFTER REPLACEMENT

CAUTION:

- When replacing A/C auto amp., you must perform "WRITE CONFIGURATION" with CONSULT.
- Never perform "WRITE CONFIGURATION" except for new A/C auto amp.

Work Procedure

INFOID:000000010099429

1. SAVING VEHICLE SPECIFICATION

ⓅCONSULT Configuration

Perform "READ CONFIGURATION" to save or print current vehicle specification. Refer to [HAC-77. "Description"](#).

NOTE:

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual setting" after replacing A/C auto amp.

>> GO TO 2.

2. REPLACE A/C AUTO AMP.

Replace A/C auto amp. Refer to [HAC-175. "Removal and Installation"](#).

>> GO TO 3.

3. WRITING VEHICLE SPECIFICATION

ⓅCONSULT Configuration

Perform "WRITE CONFIGURATION - Config file" or "WRITE CONFIGURATION - Manual setting" to write vehicle specification. Refer to [HAC-77. "Work Procedure"](#).

>> WORK END

CONFIGURATION (HVAC)

Description

INFOID:000000010099430

Vehicle specification needs to be written with CONSULT because it is not written after replacing A/C auto amp. Configuration has three functions as follows

Function	Description
READ CONFIGURATION	<ul style="list-style-type: none"> • Reads the vehicle configuration of current A/C auto amp. • Saves the read vehicle configuration.
WRITE CONFIGURATION - Manual setting	Writes the vehicle configuration with manual setting.
WRITE CONFIGURATION - Config file	Writes the vehicle configuration with saved data.

CAUTION:

- When replacing A/C auto amp., you must perform “WRITE CONFIGURATION” with CONSULT.
- Never perform “WRITE CONFIGURATION” except for new A/C auto amp.

Work Procedure


INFOID:000000010099431

1. WRITING MODE SELECTION

 CONSULT Configuration
Select “CONFIGURATION” of A/C auto amp.


When writing saved data>>GO TO 2.
When writing manually>>GO TO 3.

2. PERFORM “WRITE CONFIGURATION - CONFIG FILE”

 CONSULT Configuration
Perform “WRITE CONFIGURATION - Config file”.

>> WORK END

3. PERFORM “WRITE CONFIGURATION - MANUAL SETTING”

-  CONSULT Configuration
1. Select "WRITE CONFIGURATION - Manual setting".
 2. Select "SETTING".
 3. Select "OK".
 4. When "COMMAND FINISHED", select "END".

>> GO TO 4.

4. OPERATION CHECK

Confirm that each function controlled by A/C auto amp. operates normally.

>> WORK END

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

SYSTEM SETTING

< BASIC INSPECTION >

[AUTOMATIC AIR CONDITIONING]

SYSTEM SETTING

AUTOMATIC AIR CONDITIONING SYSTEM

AUTOMATIC AIR CONDITIONING SYSTEM : Temperature Setting Trimmer

INFOID:000000010099432

DESCRIPTION

If the temperature felt by the customer is different from the air flow temperature controlled by the temperature setting, the A/C auto amp. control temperature can be adjusted to compensate for the temperature setting.

HOW TO SET

Ⓟ With CONSULT

Perform "TEMP SET CORRECT" of HVAC work support item.

Work support items	Display (°F)	Display (°C)
TEMP SET CORRECT	6	3.0
	5	2.5
	4	2.0
	3	1.5
	2	1.0
	1	0.5
	0 (initial status)	0 (initial status)
	-1	-0.5
	-2	-1.0
	-3	-1.5
	-4	-2.0
	-5	-2.5
	-6	-3.0

NOTE:

When -3.0°C (-6°F) is corrected on the temperature setting set as 25.0°C (77°F), the temperature controlled by A/C auto amp. is 25.0°C (77°F) $- 3.0^{\circ}\text{C}$ (-6°F) = 22.0°C (72°F) and the temperature becomes lower than the temperature setting.

AUTOMATIC AIR CONDITIONING SYSTEM : Inlet Port Memory Function (REC)

INFOID:000000010099433

DESCRIPTION

- If the ignition switch is turned to the OFF position while the REC indicator is set to ON (recirculation), "Perform the memory" or "Do not perform the memory" of REC indicator ON (recirculation) condition can be selected.
- If "Perform the memory" was set, the REC indicator will be ON (recirculation) when turning the ignition switch to the ON position again.
- If "Do not perform the memory" was set, the air inlets will be controlled automatically when turning the ignition switch to the ON position again.

HOW TO SET

Ⓟ With CONSULT

Perform the "REC MEMORY SET" of HVAC work support item.

Work support items	Display	Setting
REC MEMORY SET	WITHOUT (initial status)	Perform the memory of manual REC
	WITH	Do not perform the memory of manual REC (auto control)

SYSTEM SETTING

< BASIC INSPECTION >

[AUTOMATIC AIR CONDITIONING]

AUTOMATIC AIR CONDITIONING SYSTEM : Inlet Port Memory Function (FRE)

INFOID:000000010099434

DESCRIPTION

- If the ignition switch is turned to the OFF position while the FRE indicator is set to ON (fresh air intake), “Perform the memory” or “Do not perform the memory” of FRE indicator ON (fresh air intake) condition can be selected.
- If “Perform the memory” was set, the FRE indicator will be ON (fresh air intake) when turning the ignition switch to the ON position again.
- If “Do not perform the memory” was set, the air inlets will be controlled automatically when turning the ignition switch to the ON position again.

HOW TO SET

④ With CONSULT

Perform the “FRE MEMORY SET” of HVAC work support item.

Work support items	Display	Setting
FRE MEMORY SET	WITHOUT	Perform the memory of manual FRE
	WITH (initial status)	Do not perform the memory of manual FRE (auto control)

AUTOMATIC AIR CONDITIONING SYSTEM : Foot Position Setting Trimmer

INFOID:000000010099435

DESCRIPTION

In FOOT mode, the air blowing to DEF can change ON/OFF.

HOW TO SET

④ With CONSULT

Perform the “BLOW SET” of HVAC work support item.

HAC

Work support items	Display	Defroster door position	
		Auto control	Manual control
BLOW SET	Mode 1 (initial status)	OPEN	CLOSE
	Mode 2	OPEN	OPEN
	Mode 3	CLOSE	OPEN
	Mode 4	CLOSE	CLOSE

FOREST AIR SYSTEM

FOREST AIR SYSTEM : Aroma Fragrance Intensity Setting

INFOID:000000010099436

DESCRIPTION

Amount of fragrance that is supplied to passenger room can be adjusted by aroma diffuser control.

HOW TO SET

④ With CONSULT

Perform “AROMA SETTING” or HVAC work support item.

Work support items	Display	Setting
AROMA SETTING	WEAK	Fragrance is decreased from the standard status.
	STRONG	Fragrance is increased from the standard status.
	NORMAL (initial status)	Standard status.

FOREST AIR SYSTEM : Aroma Fragrance Type Setting

INFOID:000000010099437

DESCRIPTION

SYSTEM SETTING

< BASIC INSPECTION >

[AUTOMATIC AIR CONDITIONING]

Type of fragrance that is supplied to passenger room can be selected using aroma diffuser control.

HOW TO SET

Ⓟ With CONSULT

Perform "FRAGRANCE SETTING" or HVAC work support item.

Work support items	Display	Setting
FRAGRANCE SETTING	A + B (initial status)	2 kinds of fragrance, fragrant wood and leaf scent, are used.
	A	Only fragrant wood is used.
	B	Only leaf scent is used.

FOREST AIR SYSTEM : Air Flow Control (Inside Odor Detecting Mechanism) Setting

INFOID:000000010099438

DESCRIPTION

Setting change of air flow control can be changed by inside odor detecting mechanism.

HOW TO SET

Ⓟ With CONSULT

Perform "BLOWER MOTOR SETTING" or HVAC work support item.

Work support items	Display	Setting
BLOWER MOTOR SETTING	NORMAL	Air flow is not slightly increased when odor in passenger room is detected.
	INCREASE (initial status)	Air flow is slightly increased when odor in passenger room is detected.

FOREST AIR SYSTEM : Aroma Diffuser Presence Setting

INFOID:000000010099439

DESCRIPTION

Setting change of aroma diffuser presence setting can be performed.

HOW TO SET

Ⓟ With CONSULT

Perform "AROMA DIFFUSER SETTING" or HVAC work support item.

Work support items	Display	Setting
AROMA DIFFUSER SETTING	WITHOUT	Without aroma diffuser.
	WITH	With aroma diffuser.

U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

DTC/CIRCUIT DIAGNOSIS

U1000 CAN COMM CIRCUIT

Description

INFOID:0000000010099440

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-board multiplex communication line with high data communication speed and excellent error detection ability. A modern vehicle is equipped with many ECMs, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, 2 control units are connected with 2 communication lines (CAN-L line and CAN-H line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

Refer to [LAN-34, "CAN COMMUNICATION SYSTEM : CAN Communication Signal Chart"](#) for details of the communication signal.

DTC Logic


INFOID:0000000010099441

DTC DETECTION LOGIC

DTC	Items (CONSULT screen terms)	DTC detection condition	Possible cause
U1000	CAN COMM CIRCUIT	When A/C auto amp. is not transmitting or receiving CAN communication signal for 2 or more seconds.	CAN communication system

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

 With CONSULT

1. Turn ignition switch ON and wait at least 2 seconds or more.
2. Select "Self Diagnostic Result" mode of "HVAC" using CONSULT.
3. Check DTC.

Is DTC detected?

- YES >> Refer to [HAC-81, "Diagnosis Procedure"](#).
NO >> Refer to [GI-47, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000010099442

1.CHECK CAN COMMUNICATION SYSTEM

Check CAN communication system. Refer to [LAN-24, "Trouble Diagnosis Flow Chart"](#).

>> INSPECTION END

U1010 CONTROL UNIT (CAN)

[AUTOMATIC AIR CONDITIONING]

< DTC/CIRCUIT DIAGNOSIS >

U1010 CONTROL UNIT (CAN)

Description

INFOID:000000010099443

Initial diagnosis of A/C auto amp.

DTC Logic

INFOID:000000010099444

DTC DETECTION LOGIC

DTC	Items (CONSULT screen terms)	DTC detection condition	Possible cause
U1010	CONTROL UNIT(CAN)	When detecting error during the initial diagnosis of CAN controller of A/C auto amp.	A/C auto amp.

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

With CONSULT

1. Turn ignition switch ON.
2. Select "Self Diagnostic Result" mode of "HVAC" using CONSULT.
3. Check DTC.

Is DTC detected?

- YES >> Refer to [HAC-82, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000010099445

1.REPLACE A/C AUTO AMP.

Replace A/C auto amp. Refer to [HAC-175, "Removal and Installation"](#).

>> INSPECTION END

B2578, B2579 IN-VEHICLE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

B2578, B2579 IN-VEHICLE SENSOR

DTC Logic

INFOID:000000010099446

DTC DETECTION LOGIC

NOTE:

- If DTC is displayed along with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [HAC-81, "DTC Logic"](#).
- If DTC is displayed along with DTC U1010, first perform the trouble diagnosis for DTC U1010. [HAC-82, "DTC Logic"](#).

DTC	Items (CONSULT screen terms)	DTC detection condition	Possible cause
B2578	IN-VEHICLE SENSOR	The in-vehicle sensor recognition temperature is too high.	<ul style="list-style-type: none"> • In-vehicle sensor • A/C auto amp. • Harness or connectors (The sensor circuit is open or shorted.)
B2579		The in-vehicle sensor recognition temperature is too low.	

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

Ⓜ With CONSULT

1. Turn ignition switch ON.
2. Select "Self Diagnostic Result" mode of "HVAC" using CONSULT.
3. Check DTC.

Is DTC detected?

- YES >> Refer to [HAC-83, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000010099447

1. CHECK IN-VEHICLE SENSOR POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect in-vehicle sensor connector.
3. Turn ignition switch ON.
4. Check voltage between in-vehicle sensor harness connector and ground.

+		-	Voltage (Approx.)
Connector	Terminal		
M185	1	Ground	5 V

Is the inspection result normal?

- YES >> GO TO 5.
 NO >> GO TO 2.

2. CHECK IN-VEHICLE SENSOR POWER SUPPLY CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.
3. Check continuity between in-vehicle sensor harness connector and A/C auto amp. harness connector.

In-vehicle sensor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M185	1	M67	32	Existed

Is the inspection result normal?

B2578, B2579 IN-VEHICLE SENSOR

[AUTOMATIC AIR CONDITIONING]

< DTC/CIRCUIT DIAGNOSIS >

- YES >> GO TO 3.
NO >> Repair harness or connector.

3.CHECK IN-VEHICLE SENSOR POWER SUPPLY CIRCUIT FOR GROUND SHORT

Check continuity between in-vehicle sensor harness connector and ground.

In-vehicle sensor		—	Continuity
Connector	Terminal		
M185	1	Ground	Not existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair harness or connector.

4.CHECK IN-VEHICLE SENSOR POWER SUPPLY CIRCUIT FOR BATTERY SHORT

1. Turn ignition switch ON.
2. Check voltage between in-vehicle sensor harness connector and ground.

+		-	Voltage (Approx.)
In-vehicle sensor			
Connector	Terminal		
M185	1	Ground	0 V

Is the inspection result normal?

- YES >> GO TO 7.
NO >> Repair harness or connector.

5.CHECK IN-VEHICLE SENSOR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.
3. Check continuity between in-vehicle sensor harness connector and A/C auto amp. harness connector.

In-vehicle sensor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M185	2	M67	44	Existed

Is the inspection result normal?

- YES >> GO TO 6.
NO >> Repair harness or connector.

6.CHECK IN-VEHICLE SENSOR

Check in-vehicle sensor. Refer to [HAC-84. "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 7.
NO >> Replace in-vehicle sensor. Refer to [HAC-177. "Removal and Installation"](#).

7.CHECK INTERMITTENT INCIDENT

Refer to [GI-47. "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace A/C auto amp. Refer to [HAC-175. "Removal and Installation"](#).
NO >> Repair or replace malfunctioning parts.

Component Inspection

INFOID:000000010099448

1.CHECK IN-VEHICLE SENSOR

1. Turn ignition switch OFF.
2. Disconnect in-vehicle sensor connector.

B2578, B2579 IN-VEHICLE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

3. Check resistance between in-vehicle sensor terminals.

Terminal		Condition	Resistance: kΩ
		Temperature: °C (°F)	
1	2	-15 (5)	12.90
		-10 (14)	9.68
		-5 (23)	7.35
		0 (32)	5.63
		5 (41)	4.35
		10 (50)	3.40
		15 (59)	2.68
		20 (68)	2.12
		25 (77)	1.70
		30 (86)	1.37
		35 (95)	1.11
		40 (104)	0.91
		45 (113)	0.75

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace in-vehicle sensor. Refer to [HAC-177, "Removal and Installation"](#).

A

B

C

D

E

F

G

H

HAC

J

K

L

M

N

O

P

B257B, B257C AMBIENT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

B257B, B257C AMBIENT SENSOR

DTC Logic

INFOID:000000010099449

DTC DETECTION LOGIC

NOTE:

- If DTC is displayed along with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [HAC-81, "DTC Logic"](#).
- If DTC is displayed along with DTC U1010, first perform the trouble diagnosis for DTC U1010. [HAC-82, "DTC Logic"](#).

DTC	Items (CONSULT screen terms)	DTC detection condition	Possible cause
B257B	AMBIENT SENSOR	The ambient sensor recognition temperature is too high.	<ul style="list-style-type: none">• Ambient sensor• A/C auto amp.• Harness or connectors (The sensor circuit is open or shorted.)
B257C		The ambient sensor recognition temperature is too low.	

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

Ⓟ With CONSULT

1. Turn ignition switch ON.
2. Select "Self Diagnostic Result" mode of "HVAC" using CONSULT.
3. Check DTC.

Is DTC detected?

- YES >> Refer to [HAC-86, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000010099450

1. CHECK AMBIENT SENSOR POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect ambient sensor connector.
3. Turn ignition switch ON.
4. Check voltage between ambient sensor harness connector and ground.

+		-	Voltage (Approx.)
Ambient sensor			
Connector	Terminal		
E76	1	Ground	5 V

Is the inspection result normal?

- YES >> GO TO 5.
NO >> GO TO 2.

2. CHECK AMBIENT SENSOR POWER SUPPLY CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.
3. Check continuity between ambient sensor harness connector and A/C auto amp. harness connector.

Ambient sensor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
E76	1	M67	31	Existed

Is the inspection result normal?

B257B, B257C AMBIENT SENSOR

[AUTOMATIC AIR CONDITIONING]

< DTC/CIRCUIT DIAGNOSIS >

- YES >> GO TO 3.
NO >> Repair harness or connector.

3.CHECK AMBIENT SENSOR POWER SUPPLY CIRCUIT FOR GROUND SHORT

Check continuity between ambient sensor harness connector and ground.

Ambient sensor		—	Continuity
Connector	Terminal		
E76	1	Ground	Not existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair harness or connector.

4.CHECK AMBIENT SENSOR POWER SUPPLY CIRCUIT FOR BATTERY SHORT

1. Turn ignition switch ON.
2. Check voltage between ambient sensor harness connector and ground.

+		-	Voltage (Approx.)
Ambient sensor			
Connector	Terminal		
E76	1	Ground	0 V

Is the inspection result normal?

- YES >> GO TO 7.
NO >> Repair harness or connector.

5.CHECK AMBIENT SENSOR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp.connector.
3. Check continuity between ambient sensor harness connector and A/C auto amp. harness connector.

Ambient sensor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
E76	2	M67	44	Existed

Is the inspection result normal?

- YES >> GO TO 6.
NO >> Repair harness or connector.

6.CHECK AMBIENT SENSOR

Check ambient sensor. Refer to [HAC-87. "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 7.
NO >> Replace ambient sensor. Refer to [HAC-176. "Removal and Installation"](#).

7.CHECK INTERMITTENT INCIDENT

Refer to [GI-47. "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace A/C auto amp. Refer to [HAC-175. "Removal and Installation"](#).
NO >> Repair or replace malfunctioning parts.

Component Inspection

INFOID:000000010099451

1.CHECK AMBIENT SENSOR

1. Turn ignition switch OFF.
2. Disconnect ambient sensor connector.

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

B257B, B257C AMBIENT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

3. Check resistance between the ambient sensor terminals.

Terminal		Condition	Resistance: kΩ
		Temperature: °C (°F)	
1	2	-15 (5)	12.73
		-10 (14)	9.92
		-5 (23)	7.80
		0 (32)	6.19
		5 (41)	4.95
		10 (50)	3.99
		15 (59)	3.24
		20 (68)	2.65
		25 (77)	2.19
		30 (86)	1.81
		35 (95)	1.51
		40 (104)	1.27
		45 (113)	1.07

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace ambient sensor. Refer to [HAC-176. "Removal and Installation"](#).

B2581, B2582 INTAKE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

B2581, B2582 INTAKE SENSOR

DTC Logic

INFOID:0000000110099452

DTC DETECTION LOGIC

NOTE:

- If DTC is displayed along with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [HAC-81, "DTC Logic"](#).
- If DTC is displayed along with DTC U1010, first perform the trouble diagnosis for DTC U1010. [HAC-82, "DTC Logic"](#).

DTC	Items (CONSULT screen terms)	DTC detection condition	Possible cause
B2581	INTAKE SENSOR	The intake sensor recognition temperature is too high.	<ul style="list-style-type: none">• Intake sensor• A/C auto amp.• Harness or connectors (The sensor circuit is open or shorted.)
B2582		The intake sensor recognition temperature is too low.	

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

Ⓜ With CONSULT

1. Turn ignition switch ON.
2. Select "Self Diagnostic Result" mode of "HVAC" using CONSULT.
3. Check DTC.

Is DTC detected?

- YES >> Refer to [HAC-89, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000110099453

1. CHECK INTAKE SENSOR POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect intake sensor connector.
3. Turn ignition switch ON.
4. Check voltage between intake sensor harness connector and ground.

+		-	Voltage (Approx.)
Intake sensor			
Connector	Terminal	Ground	5 V
M314	2		

Is the inspection result normal?

- YES >> GO TO 5.
NO >> GO TO 2.

2. CHECK INTAKE SENSOR POWER SUPPLY CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.
3. Check continuity between intake sensor harness connector and A/C auto amp. harness connector.

Intake sensor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M314	2	M304	51	Existed

Is the inspection result normal?

B2581, B2582 INTAKE SENSOR

[AUTOMATIC AIR CONDITIONING]

< DTC/CIRCUIT DIAGNOSIS >

- YES >> GO TO 3.
NO >> Repair harness or connector.

3.CHECK INTAKE SENSOR POWER SUPPLY CIRCUIT FOR GROUND SHORT

Check continuity between intake sensor harness connector and ground.

Intake sensor		—	Continuity
Connector	Terminal		
M314	2	Ground	Not existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair harness or connector.

4.CHECK INTAKE SENSOR POWER SUPPLY CIRCUIT FOR BATTERY SHORT

1. Turn ignition switch ON.
2. Check voltage between intake sensor harness connector and ground.

+		-	Voltage (Approx.)
Intake sensor			
Connector	Terminal		
M314	2	Ground	0 V

Is the inspection result normal?

- YES >> GO TO 7.
NO >> Repair harness or connector.

5.CHECK INTAKE SENSOR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.
3. Check continuity between intake sensor harness connector and A/C auto amp. harness connector.

Intake sensor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M314	1	M304	79	Existed

Is the inspection result normal?

- YES >> GO TO 6.
NO >> Repair harness or connector.

6.CHECK INTAKE SENSOR

Check intake sensor. Refer to [HAC-90, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 7.
NO >> Replace intake sensor. Refer to [HAC-180, "Removal and Installation"](#).

7.CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace A/C auto amp. Refer to [HAC-175, "Removal and Installation"](#).
NO >> Repair or replace malfunctioning parts.

Component Inspection

INFOID:000000010099454

1.CHECK INTAKE SENSOR

1. Turn ignition switch OFF.
2. Disconnect intake sensor connector.

B2581, B2582 INTAKE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

3. Check resistance between intake sensor terminals.

Terminal		Condition	Resistance: kΩ
		Temperature: °C (°F)	
1	2	-15 (5)	10.92
		-10 (14)	8.24
		-5 (23)	6.29
		0 (32)	4.85
		5 (41)	3.77
		10 (50)	2.96
		15 (59)	2.34
		20 (68)	1.87
		25 (77)	1.50
		30 (86)	1.21
		35 (95)	0.99
		40 (104)	0.81
		45 (113)	0.67

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace intake sensor. Refer to [HAC-180. "Removal and Installation"](#).

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

B262A, B262B, B2657, B2658 EXHAUST GAS/OUTSIDE ODOR DETECTING SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

B262A, B262B, B2657, B2658 EXHAUST GAS/OUTSIDE ODOR DETECTING SENSOR

DTC Logic

INFOID:000000010099455

DTC DETECTION LOGIC

NOTE:

- If DTC is displayed along with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [HAC-81, "DTC Logic"](#).
- If DTC is displayed along with DTC U1010, first perform the trouble diagnosis for DTC U1010. [HAC-82, "DTC Logic"](#).

DTC	Items (CONSULT screen terms)	DTC detection condition	Possible cause
B262A	GAS SENSOR	Exhaust gas/outside odor detecting sensor duty ratio 15% or less.	<ul style="list-style-type: none"> • Exhaust gas/outside odor detecting sensor • A/C auto amp. • Harness or connectors (The sensor circuit is open or shorted.)
B262B		Exhaust gas/outside odor detecting sensor duty ratio 85% or more.	
B2657	GAS SENSOR CIRCUIT	Exhaust gas/outside odor detecting sensor duty ratio 0%.	
B2658		Exhaust gas/outside odor detecting sensor duty ratio 100%.	

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

Ⓟ With CONSULT

1. Turn ignition switch ON.
2. Select "Self Diagnostic Result" mode of "HVAC" using CONSULT.
3. Check DTC.

Is DTC detected?

- YES >> Refer to [HAC-92, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000010099456

1. CHECK EXHAUST GAS/OUTSIDE ODOR DETECTING SENSOR POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect exhaust gas/outside odor detecting sensor connector.
3. Turn ignition switch ON.
4. Check voltage between exhaust gas/outside odor detecting sensor harness and ground.

+		-	Voltage (Approx.)
Connector	Terminal		
Exhaust gas/outside odor detecting sensor			
E74	1	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 5.
 NO >> GO TO 2.

2. CHECK FUSE

1. Turn ignition switch OFF.
2. Check 10A fuse [No. 3, located in fuse block (J/B)]

NOTE:

Refer to [PG-101, "Fuse and Fusible Link Arrangement"](#).

B262A, B262B, B2657, B2658 EXHAUST GAS/OUTSIDE ODOR DETECTING SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace blown fuse after repairing the affected circuit if a fuse is blown.

3. CHECK EXHAUST GAS/OUTSIDE ODOR DETECTING SENSOR POWER SUPPLY CIRCUIT FOR OPEN

1. Disconnect fuse block (J/B) connector.
2. Check continuity between exhaust gas/outside odor detecting sensor harness connector and fuse block (J/B) connector.

Exhaust gas/outside odor detecting sensor		Fuse block (J/B)		Continuity
Connector	Terminal	Connector	Terminal	
E74	1	E103	4F	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair harness or connector.

4. CHECK EXHAUST GAS/OUTSIDE ODOR DETECTING SENSOR POWER SUPPLY CIRCUIT FOR GROUND SHORT

1. Disconnect exhaust gas/outside odor detecting sensor connector, ionizer connector, ECV connector and A/C auto amp. connector.
2. Check continuity between exhaust gas/outside odor detecting sensor harness connector and ground.

Exhaust gas/outside odor detecting sensor		—	Continuity
Connector	Terminal		
E74	1	Ground	Not existed

Is the inspection result normal?

YES >> Check ignition power supply circuit. Refer to [PG-57. "Wiring Diagram - IGNITION POWER SUPPLY -"](#).

NO >> Repair harness or connector.

5. CHECK EXHAUST GAS/OUTSIDE ODOR DETECTING SENSOR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between exhaust gas/outside odor detecting sensor harness connector and ground.

Exhaust gas/outside odor detecting sensor		—	Continuity
Connector	Terminal		
E74	2	Ground	Existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair harness or connector.


6. CHECK EXHAUST GAS/OUTSIDE ODOR DETECTING SENSOR INPUT SIGNAL

1. Connect exhaust gas/outside odor detecting sensor connector.
2. Turn ignition switch ON.
3. Check signal between exhaust gas/outside odor detecting sensor harness connector and ground with oscilloscope.

B262A, B262B, B2657, B2658 EXHAUST GAS/OUTSIDE ODOR DETECTING SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

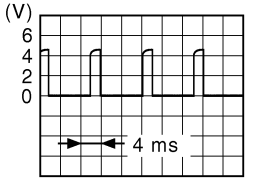+		-	Signal (Reference value)
Exhaust gas/outside odor detecting sensor			
Connector	Terminal		
E74	3	Ground	

NOTE:

Signal differs depending on measurement environment of the vehicle.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace exhaust gas/outside odor detecting sensor. Refer to [HAC-182, "Removal and Installation"](#).

7. CHECK EXHAUST GAS/OUTSIDE ODOR DETECTING SENSOR INPUT SIGNAL CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect exhaust gas/outside odor detecting sensor connector and A/C auto amp. connector.
3. Check continuity between exhaust gas/outside odor detecting sensor harness connector and A/C auto amp. connector.

Exhaust gas/outside odor detecting sensor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
E74	3	M67	30	Existed

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair harness or connector.

8. CHECK EXHAUST GAS/OUTSIDE ODOR DETECTING SENSOR INPUT SIGNAL CIRCUIT FOR GROUND SHORT

Check continuity between exhaust gas/outside odor detecting sensor harness connector and ground.

Exhaust gas/outside odor detecting sensor		—	Continuity
Connector	Terminal		
E74	3	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair harness or connector.

9. CHECK EXHAUST GAS/OUTSIDE ODOR DETECTING SENSOR INPUT SIGNAL CIRCUIT FOR BATTERY SHORT

Check voltage between exhaust gas/outside odor detecting sensor harness and ground.

B262A, B262B, B2657, B2658 EXHAUST GAS/OUTSIDE ODOR DETECTING SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

+		-	Voltage (Approx.)
Exhaust gas/outside odor detecting sensor			
Connector	Terminal		
E74	3	Ground	0 V

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

Is the inspection result normal?

- YES >> GO TO 10.
- NO >> Repair harness or connector.

10.CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace A/C auto amp. Refer to [HAC-175, "Removal and Installation"](#).
- NO >> Repair or replace malfunctioning parts.

HAC

B2630, B2631 SUNLOAD SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

B2630, B2631 SUNLOAD SENSOR

DTC Logic

INFOID:000000010099457

DTC DETECTION LOGIC

NOTE:

- If DTC is displayed along with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [HAC-81, "DTC Logic"](#).
- If DTC is displayed along with DTC U1010, first perform the trouble diagnosis for DTC U1010. [HAC-82, "DTC Logic"](#).
- Sunload sensor may register a malfunction when indoors, at dusk, or at other times when light is insufficient. When performing the diagnosis indoors, use a lamp (60 W or more) that is pointed at the sunload sensor.

DTC	Items (CONSULT screen terms)	DTC detection condition	Possible cause
B2630	SUNLOAD SENSOR	Detected calorie at sunload sensor 4793 W/m ² (4121 kcal/m ² ·h) or more.	<ul style="list-style-type: none"> • Sunload sensor • A/C auto amp. • Harness or connectors (The sensor circuit is open or shorted.)
B2631		Detected calorie at sunload sensor 75.6 W/m ² (64.97 kcal/m ² ·h) or less.	

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

Ⓜ With CONSULT

1. Turn ignition switch ON.
2. Select "Self Diagnostic Result" mode of "HVAC" using CONSULT.
3. Check DTC.

Is DTC detected?

- YES >> Refer to [HAC-96, "Diagnosis Procedure"](#).
- NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000010099458

1. CHECK SUNLOAD SENSOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect sunload sensor connector.
3. Turn ignition switch ON.
4. Check voltage between sunload sensor harness connector and ground.

+		-	Voltage (Approx.)
Sunload sensor			
Connector	Terminal		
M46	3	Ground	5 V

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> GO TO 2.

2. CHECK SUNLOAD SENSOR POWER SUPPLY CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.
3. Check continuity between sunload sensor harness connector and A/C auto amp. harness connector.

Sunload sensor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M46	3	M67	39	Existed

B2630, B2631 SUNLOAD SENSOR

[AUTOMATIC AIR CONDITIONING]

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3.CHECK SUNLOAD SENSOR POWER SUPPLY CIRCUIT FOR GROUND SHORT

Check continuity between sunload sensor harness connector and ground.

Sunload sensor		—	Continuity
Connector	Terminal		
M46	3	Ground	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair harness or connector.

4.CHECK SUNLOAD SENSOR POWER SUPPLY CIRCUIT FOR BATTERY SHORT

1. Turn ignition switch ON.
2. Check voltage between sunload sensor harness connector and ground.

Sunload sensor		-	Voltage (Approx.)
Connector	Terminal		
M46	3	Ground	0 V

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair harness or connector.

5.CHECK SUNLOAD SENSOR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.
3. Check continuity between sunload sensor harness connector and A/C auto amp. harness connector.

Sunload sensor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M46	1	M67	47	Existed
	2		35	

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair harness or connector.

6.CHECK SUNLOAD SENSOR

Check sunload sensor. Refer to [HAC-98. "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace sunload sensor. Refer to [HAC-178. "Removal and Installation"](#).

7.CHECK INTERMITTENT INCIDENT

Refer to [GI-47. "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Replace A/C auto amp. Refer to [HAC-175. "Removal and Installation"](#).

NO >> Repair or replace malfunctioning parts.

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

B2630, B2631 SUNLOAD SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

Component Inspection

INFOID:000000010099459

1. CHECK SUNLOAD SENSOR

1. Turn ignition switch OFF.
2. Disconnect sunload sensor connector.
3. Check resistance between the sunload sensor terminals.

Terminal		Condition	Resistance: kΩ
		Sunload amount: kW/m ² kcal/m ² ·h)	
1 (Passenger side) 2 (Driver side)	3	0	More than 17000
		0.233 (200)	59.9
		0.465 (400)	49.9
		0.698 (600)	39.9
		0.770 (662)	36.8
		0.930 (800)	29.9
		1.163 (1,000)	19.9
		1.396 (1,200)	9.8

NOTE:

- When checking indoors, use a lamp of approximately 60 W. Move the lamp towards and away from the sensor to check.
- The sunload amount produced by direct sunshine fair weather is equivalent to approximately 0.77 kW/m² (662 kcal/m²·h).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace sunload sensor. Refer to [HAC-178, "Removal and Installation"](#).

B2750, B2751, B2752 AIR MIX DOOR MOTOR (DRIVER SIDE)

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

B2750, B2751, B2752 AIR MIX DOOR MOTOR (DRIVER SIDE)

DTC Logic

INFOID:0000000110099460

DTC DETECTION LOGIC

NOTE:

- If DTC is displayed along with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [HAC-81, "DTC Logic"](#).
- If DTC is displayed along with DTC U1010, first perform the trouble diagnosis for DTC U1010. [HAC-82, "DTC Logic"](#).
- If all of door motors DTC (B2750 – B276A) are detected, check door motor PBR power supply and ground circuit. Refer to [HAC-145, "DOOR MOTOR PBR \(WITH FOREST AIR\) : Diagnosis Procedure"](#) (With Forest Air).
- If all of door motors DTC (B2750 – B2764) are detected, check door motor PBR power supply and ground circuit. Refer to [HAC-147, "DOOR MOTOR PBR \(WITHOUT FOREST AIR\) : Diagnosis Procedure"](#) (Without Forest Air).

DTC	Items (CONSULT screen terms)	DTC detection condition	Possible cause
B2750	DR AIR MIX DOOR MOT	Air mix door motor (driver side) PBR feedback signal voltage is too low.	<ul style="list-style-type: none"> • Air mix door motor (driver side) • Air mix door motor (driver side) control linkage installation condition • A/C auto amp. • Harness or connectors (The motor circuit is open or shorted.)
B2751		Air mix door motor (driver side) PBR feedback signal voltage is too high.	
B2752		Stop position of air mix door motor (driver side) is malfunctioning.	

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

Ⓜ With CONSULT

1. Turn ignition switch ON.
2. Select "Self Diagnostic Result" mode of "HVAC" using CONSULT.
3. Check DTC.

Is DTC detected?

- YES >> Refer to [HAC-99, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000110099461

1. CHECK AIR MIX DOOR MOTOR (DRIVER SIDE) OPERATION

1. Turn ignition switch ON.
2. Operate temperature control switch (driver side) and check by operation sound that air mix door motor (driver side) operates.

Is the inspection result normal?

- YES >> GO TO 8.
 NO >> GO TO 2.

2. CHECK AIR MIX DOOR MOTOR (DRIVER SIDE) DRIVE SIGNAL

Check voltage between air mix door motor (LH) harness connector and ground.

+		-	Condition	Voltage (Approx.)
Air mix door motor (LH) Connector	Terminal			
M315	1	Ground	Set temperature (driver side)	12 V
	2		18°C (60°F) → 32°C (90°F) 32°C (90°F) → 18°C (60°F)	

Is the inspection result normal?

B2750, B2751, B2752 AIR MIX DOOR MOTOR (DRIVER SIDE)

[AUTOMATIC AIR CONDITIONING]

< DTC/CIRCUIT DIAGNOSIS >

YES >> GO TO 6.

NO >> GO TO 3.

3. CHECK AIR MIX DOOR MOTOR (DRIVER SIDE) DRIVE SIGNAL CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect air mix door motor LH harness connector and A/C auto amp. harness connector.
3. Check continuity between air mix door motor LH harness connector and A/C auto amp. harness connector.

Air mix door motor LH		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M315	1	M304	81	Existed
	2		61	

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair harness or connector.

4. CHECK AIR MIX DOOR MOTOR (DRIVER SIDE) DRIVE SIGNAL CIRCUIT FOR GROUND SHORT

Check continuity between air mix door motor LH harness connector and ground.

Air mix door motor LH		—	Continuity
Connector	Terminal		
M315	1	Ground	Not existed
	2		

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair harness or connector.

5. CHECK AIR MIX DOOR MOTOR (DRIVER SIDE) DRIVE SIGNAL CIRCUIT FOR BATTERY SHORT

1. Turn ignition switch ON.
2. Check voltage between air mix door motor LH harness connector and ground.

+		-	Voltage (Approx.)
Air mix door motor LH			
Connector	Terminal	Ground	0 V
M315	1		
	2		

Is the inspection result normal?

YES >> GO TO 15.

NO >> Repair harness or connector.

6. CHECK AIR MIX DOOR MOTOR (DRIVER SIDE)

Check air mix door motor (driver side). Refer to [HAC-102, "Component Inspection \(Motor\)"](#).

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace air mix door motor (driver side). Refer to [HAC-184, "AIR MIX DOOR MOTOR : Removal and Installation"](#).

7. CHECK INSTALLATION OF AIR MIX DOOR MOTOR (DRIVER SIDE) CONTROL LINKAGE

Check air mix door motor (driver side) control linkage is properly installed. Refer to [HAC-183, "Exploded View"](#).

Is the inspection result normal?

YES >> GO TO 15.

B2750, B2751, B2752 AIR MIX DOOR MOTOR (DRIVER SIDE)

[AUTOMATIC AIR CONDITIONING]

< DTC/CIRCUIT DIAGNOSIS >

NO >> Repair or replace malfunctioning parts.

8. CHECK AIR MIX DOOR MOTOR (DRIVER SIDE) PBR FEEDBACK SIGNAL

Operate temperature control switch (driver side) and check by voltage between A/C auto amp. harness connector and ground.

+		-	Condition	Voltage (Approx.)	
A/C auto amp.					
Connector	Terminal				
M304	53	Ground	Set temperature (driver side)	18°C (60°F)	4 V
				32°C (90°F)	1 V

Is the inspection result normal?

YES >> GO TO 15.

NO >> GO TO 9.

9. CHECK AIR MIX DOOR MOTOR (DRIVER SIDE) PBR FEEDBACK SIGNAL CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect air mix door motor LH harness connector and A/C auto amp. harness connector.
3. Check continuity between air mix door motor LH harness connector and A/C auto amp. harness connector.

Air mix door motor LH		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M315	3	M304	53	Existed

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair harness or connector.

10. CHECK AIR MIX DOOR MOTOR (DRIVER SIDE) PBR FEEDBACK SIGNAL CIRCUIT FOR SHORT

Check continuity between air mix door motor LH harness connector and ground.

Air mix door motor LH		—	Continuity
Connector	Terminal		
M315	3	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 11.

NO >> Repair harness or connector.

11. CHECK AIR MIX DOOR MOTOR (DRIVER SIDE) PBR POWER SUPPLY

1. Reconnect A/C auto amp. harness connector.
2. Turn ignition switch ON.
3. Check voltage between air mix door motor LH harness connector and ground.

+		-	Voltage (Approx.)
Air mix door motor LH			
Connector	Terminal		
M315	7	Ground	5 V

Is the inspection result normal?

YES >> GO TO 13.

NO >> GO TO 12.

12. CHECK AIR MIX DOOR MOTOR (DRIVER SIDE) PBR POWER SUPPLY CIRCUIT FOR OPEN

1. Turn ignition switch OFF.

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

B2750, B2751, B2752 AIR MIX DOOR MOTOR (DRIVER SIDE)

[AUTOMATIC AIR CONDITIONING]

< DTC/CIRCUIT DIAGNOSIS >

2. Disconnect A/C auto amp. harness connector.
3. Check continuity between air mix door motor LH harness connector and A/C auto amp. harness connector.

Air mix door motor LH		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M315	7	M304	71	Existed

Is the inspection result normal?

YES >> GO TO 15.

NO >> Repair harness or connector.

13.CHECK AIR MIX DOOR MOTOR (DRIVER SIDE) PBR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. harness connector.
3. Check continuity between air mix door motor LH harness connector and A/C auto amp. harness connector.

Air mix door motor LH		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M315	5	M304	79	Existed

Is the inspection result normal?

YES >> GO TO 14.

NO >> Repair harness or connector.

14.CHECK AIR MIX DOOR MOTOR (DRIVER SIDE) PBR

Check air mix door motor (driver side) PBR. Refer to [HAC-103. "Component Inspection \(PBR\)".](#)

Is the inspection result normal?

YES >> GO TO 15.

NO >> Replace air mix door motor (driver side). Refer to [HAC-184. "AIR MIX DOOR MOTOR : Removal and Installation".](#)

15.CHECK INTERMITTENT INCIDENT

Refer to [GI-47. "Intermittent Incident".](#)

Is the inspection result normal?

YES >> Replace A/C auto amp. Refer to [HAC-175. "Removal and Installation".](#)

NO >> Repair or replace malfunctioning parts.

Component Inspection (Motor)

INFOID:000000010099462

1.CHECK AIR MIX DOOR MOTOR (DRIVER SIDE)

1. Turn ignition switch OFF.
2. Disconnect the air mix door motor LH harness connector.
3. Supply air mix door motor (driver side) terminals with battery voltage and check by visually and operation sound that air mix door motor (driver side) operates.

Terminal		Operation direction
+	-	
1	2	Full hot
2	1	Full cold

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace air mix door motor (driver side). Refer to [HAC-184. "AIR MIX DOOR MOTOR : Removal and Installation".](#)

B2750, B2751, B2752 AIR MIX DOOR MOTOR (DRIVER SIDE)

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

Component Inspection (PBR)

INFOID:0000000110099463

1. CHECK AIR MIX DOOR MOTOR (DRIVER SIDE) PBR

Check resistance between air mix door motor (driver side) PBR terminals.

Terminal		Resistance (Ω)
5	3	Except 0 or ∞
	7	

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace air mix door motor (driver side). Refer to [HAC-184, "AIR MIX DOOR MOTOR : Removal and Installation"](#).

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

B2753, B2754, B2755 AIR MIX DOOR MOTOR (PASSENGER SIDE)

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

B2753, B2754, B2755 AIR MIX DOOR MOTOR (PASSENGER SIDE)

DTC Logic

INFOID:0000000110099464

DTC DETECTION LOGIC

NOTE:

- If DTC is displayed along with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [HAC-81, "DTC Logic"](#).
- If DTC is displayed along with DTC U1010, first perform the trouble diagnosis for DTC U1010. [HAC-82, "DTC Logic"](#).
- If all of door motors DTC (B2750 – B276A) are detected, check door motor PBR power supply and ground circuit. Refer to [HAC-145, "DOOR MOTOR PBR \(WITH FOREST AIR\) : Diagnosis Procedure"](#) (With Forest Air).
- If all of door motors DTC (B2750 – B2764) are detected, check door motor PBR power supply and ground circuit. Refer to [HAC-147, "DOOR MOTOR PBR \(WITHOUT FOREST AIR\) : Diagnosis Procedure"](#) (Without Forest Air).

DTC	Items (CONSULT screen terms)	DTC detection condition	Possible cause
B2753	PASS AIR MIX DOOR MOT	Air mix door motor (passenger side) PBR feed-back signal voltage is too low.	<ul style="list-style-type: none">• Air mix door motor (passenger side)• Air mix door motor (passenger side) control linkage installation condition• A/C auto amp.• Harness or connectors (The motor circuit is open or shorted.)
B2754		Air mix door motor (passenger side) PBR feed-back signal voltage is too high.	
B2755		Stop position of air mix door motor (passenger side) is malfunctioning.	

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

④ With CONSULT

1. Turn ignition switch ON.
2. Select "Self Diagnostic Result" mode of "HVAC" using CONSULT.
3. Check DTC.

Is DTC detected?

YES >> Refer to [HAC-104, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000110099465

1. CHECK AIR MIX DOOR MOTOR (PASSENGER SIDE) OPERATION

1. Turn ignition switch ON.
2. Operate temperature control switch (passenger side) and check by operation sound that air mix door motor (passenger side) operates.

Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 2.

2. CHECK AIR MIX DOOR MOTOR (PASSENGER SIDE) DRIVE SIGNAL

Check voltage between air mix door motor RH harness connector and ground.

+		-	Condition	Voltage (Approx.)
Air mix door motor RH Connector	Terminal			
M306	1	Ground	Set temperature (passenger side)	18°C (60°F) → 32°C (90°F)
	2		32°C (90°F) → 18°C (60°F)	

Is the inspection result normal?

B2753, B2754, B2755 AIR MIX DOOR MOTOR (PASSENGER SIDE)

[AUTOMATIC AIR CONDITIONING]

< DTC/CIRCUIT DIAGNOSIS >

- YES >> GO TO 6.
- NO >> GO TO 3.

3. CHECK AIR MIX DOOR MOTOR (PASSENGER SIDE) DRIVE SIGNAL CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect air mix door motor RH harness connector and A/C auto amp. harness connector.
3. Check continuity between air mix door motor RH harness connector and A/C auto amp. harness connector.

Air mix door motor RH		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M306	1	M304	67	Existed
	2		87	

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Repair harness or connector.

4. CHECK AIR MIX DOOR MOTOR (PASSENGER SIDE) DRIVE SIGNAL CIRCUIT FOR GROUND SHORT

Check continuity between air mix door motor RH harness connector and ground.

Air mix door motor RH		—	Continuity
Connector	Terminal		
M306	1	Ground	Not existed
	2		

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Repair harness or connector.

5. CHECK AIR MIX DOOR MOTOR (PASSENGER SIDE) DRIVE SIGNAL CIRCUIT FOR BATTERY SHORT

1. Turn ignition switch ON.
2. Check voltage between air mix door motor RH harness connector and ground.

+		-	Voltage (Approx.)
Air mix door motor RH			
Connector	Terminal	Ground	0 V
M315	1		
	2		

Is the inspection result normal?

- YES >> GO TO 15.
- NO >> Repair harness or connector.

6. CHECK AIR MIX DOOR MOTOR (PASSENGER SIDE)

Check air mix door motor (passenger side). Refer to [HAC-107, "Component Inspection \(Motor\)"](#).

Is the inspection result normal?

- YES >> GO TO 7.
- NO >> Replace air mix door motor (passenger side). Refer to [HAC-184, "AIR MIX DOOR MOTOR : Removal and Installation"](#).

7. CHECK INSTALLATION OF AIR MIX DOOR MOTOR (PASSENGER SIDE) CONTROL LINKAGE

Check air mix door motor (passenger side) control linkage is properly installed. Refer to [HAC-183, "Exploded View"](#).

Is the inspection result normal?

- YES >> GO TO 15.

B2753, B2754, B2755 AIR MIX DOOR MOTOR (PASSENGER SIDE)

[AUTOMATIC AIR CONDITIONING]

< DTC/CIRCUIT DIAGNOSIS >

NO >> Repair or replace malfunctioning parts.

8. CHECK AIR MIX DOOR MOTOR (PASSENGER SIDE) PBR FEEDBACK SIGNAL

Operate temperature control switch (passenger side) and check by voltage between A/C auto amp. harness connector and ground.

+		-	Condition	Voltage (Approx.)	
A/C auto amp.					
Connector	Terminal				
M304	74	Ground	Set temperature (passenger side)	18°C (60°F)	4 V
				32°C (90°F)	1 V

Is the inspection result normal?

YES >> GO TO 15.

NO >> GO TO 9.

9. CHECK AIR MIX DOOR MOTOR (PASSENGER SIDE) PBR FEEDBACK SIGNAL CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect air mix door motor RH harness connector and A/C auto amp. harness connector.
3. Check continuity between air mix door motor RH harness connector and A/C auto amp. harness connector.

Air mix door motor RH		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M306	3	M304	74	Existed

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair harness or connector.

10. CHECK AIR MIX DOOR MOTOR (PASSENGER SIDE) PBR FEEDBACK SIGNAL CIRCUIT FOR SHORT

Check continuity between air mix door motor RH harness connector and ground.

Air mix door motor RH		—	Continuity
Connector	Terminal		
M306	3	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 11.

NO >> Repair harness or connector.

11. CHECK AIR MIX DOOR MOTOR (PASSENGER SIDE) PBR POWER SUPPLY

1. Reconnect A/C auto amp. harness connector.
2. Turn ignition switch ON.
3. Check voltage between air mix door motor RH harness connector and ground.

+		-	Voltage (Approx.)
Air mix door motor RH			
Connector	Terminal		
M306	7	Ground	5 V

Is the inspection result normal?

YES >> GO TO 13.

NO >> GO TO 12.

12. CHECK AIR MIX DOOR MOTOR (PASSENGER SIDE) PBR POWER SUPPLY CIRCUIT FOR OPEN

1. Turn ignition switch OFF.

B2753, B2754, B2755 AIR MIX DOOR MOTOR (PASSENGER SIDE)

[AUTOMATIC AIR CONDITIONING]

< DTC/CIRCUIT DIAGNOSIS >

2. Disconnect A/C auto amp. harness connector.
3. Check continuity between air mix door motor RH harness connector and A/C auto amp. harness connector.

Air mix door motor RH		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M306	7	M304	71	Existed

Is the inspection result normal?

YES >> GO TO 15.

NO >> Repair harness or connector.

13.CHECK AIR MIX DOOR MOTOR (PASSENGER SIDE) PBR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. harness connector.
3. Check continuity between air mix door motor RH harness connector and A/C auto amp. harness connector.

Air mix door motor RH		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M306	5	M304	79	Existed

Is the inspection result normal?

YES >> GO TO 14.

NO >> Repair harness or connector.

14.CHECK AIR MIX DOOR MOTOR (PASSENGER SIDE) PBR

Check air mix door motor (passenger side) PBR. Refer to [HAC-108, "Component Inspection \(PBR\)".](#)

Is the inspection result normal?

YES >> GO TO 15.

NO >> Replace air mix door motor (passenger side). Refer to [HAC-184, "AIR MIX DOOR MOTOR : Removal and Installation".](#)

15.CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident".](#)

Is the inspection result normal?

YES >> Replace A/C auto amp. Refer to [HAC-175, "Removal and Installation".](#)

NO >> Repair or replace malfunctioning parts.

Component Inspection (Motor)

INFOID:000000010099466

1.CHECK AIR MIX DOOR MOTOR (PASSENGER SIDE)

1. Turn ignition switch OFF.
2. Disconnect air mix door motor RH harness connector.
3. Supply air mix door motor (passenger side) terminals with battery voltage and check by visually and operation sound that air mix door motor (passenger side) operates.

Terminal		Operation direction
+	-	
1	2	Full hot
2	1	Full cold

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace air mix door motor (passenger side). Refer to [HAC-184, "AIR MIX DOOR MOTOR : Removal and Installation".](#)

B2753, B2754, B2755 AIR MIX DOOR MOTOR (PASSENGER SIDE)

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

Component Inspection (PBR)

INFOID:0000000110099467

1. CHECK AIR MIX DOOR MOTOR (PASSENGER SIDE) PBR

Check resistance between air mix door motor (passenger side) PBR terminals.

Terminal		Resistance (Ω)
5	3	Except 0 or ∞
	7	

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace air mix door motor (passenger side). Refer to [HAC-184, "AIR MIX DOOR MOTOR : Removal and Installation"](#).

B2756, B2757, B2758 MODE DOOR MOTOR (DRIVER SIDE)

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

B2756, B2757, B2758 MODE DOOR MOTOR (DRIVER SIDE)

DTC Logic

INFOID:000000010099468

DTC DETECTION LOGIC

NOTE:

- If DTC is displayed along with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [HAC-81, "DTC Logic"](#).
- If DTC is displayed along with DTC U1010, first perform the trouble diagnosis for DTC U1010. [HAC-82, "DTC Logic"](#).
- If all of door motors DTC (B2750 – B276A) are detected, check door motor PBR power supply and ground circuit. Refer to [HAC-145, "DOOR MOTOR PBR \(WITH FOREST AIR\) : Diagnosis Procedure"](#) (With Forest Air).
- If all of door motors DTC (B2750 – B2764) are detected, check door motor PBR power supply and ground circuit. Refer to [HAC-147, "DOOR MOTOR PBR \(WITHOUT FOREST AIR\) : Diagnosis Procedure"](#) (Without Forest Air).

DTC	Items (CONSULT screen terms)	DTC detection condition	Possible cause
B2756	DR MODE DOOR MOTOR	Mode door motor (driver side) PBR feedback signal voltage is too low.	<ul style="list-style-type: none">• Mode door motor (driver side)• Mode door motor (driver side) control linkage installation condition• A/C auto amp.• Harness or connectors (The motor circuit is open or shorted.)
B2757		Mode door motor (driver side) PBR feedback signal voltage is too high.	
B2758		Stop position of mode door motor (driver side) is malfunctioning.	

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

Ⓜ With CONSULT

1. Turn ignition switch ON.
2. Select "Self Diagnostic Result" mode of "HVAC" using CONSULT.
3. Check DTC.

Is DTC detected?

- YES >> Refer to [HAC-109, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000010099469

1. CHECK MODE DOOR MOTOR (DRIVER SIDE) OPERATION

1. Turn ignition switch ON.
2. Operate MODE switch (driver side) and check by operation sound that mode door motor (driver side) operates.

Is the inspection result normal?

- YES >> GO TO 8.
NO >> GO TO 2.

2. CHECK MODE DOOR MOTOR (DRIVER SIDE) DRIVE SIGNAL

1. Press MODE switch (driver side) and DEF switch.
2. Check voltage between mode door motor LH harness connector and ground.

+		-	Condition		Voltage (Approx.)
Mode door motor LH					
Connector	Terminal	Ground	Air outlet	DEF → VENT	12 V
M316 (with Forest Air) M317 (without Forest Air)	1 2				

B2756, B2757, B2758 MODE DOOR MOTOR (DRIVER SIDE)

[AUTOMATIC AIR CONDITIONING]

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

- YES >> GO TO 6.
- NO >> GO TO 3.

3. CHECK MODE DOOR MOTOR (DRIVER SIDE) DRIVE SIGNAL CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect mode door motor LH harness connector and A/C auto amp. harness connector.
3. Check continuity between mode door motor LH harness connector and A/C auto amp. harness connector.

Mode door motor LH		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M316 (with Forest Air)	1	M304	63	Existed
M317 (without Forest Air)	2		83	

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Repair harness or connector.

4. CHECK MODE DOOR MOTOR (DRIVER SIDE) DRIVE SIGNAL CIRCUIT FOR GROUND SHORT

Check continuity between mode door motor LH harness connector and ground.

Mode door motor LH		—	Continuity
Connector	Terminal		
M316 (with Forest Air)	1	Ground	Not existed
M317 (without Forest Air)	2		

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Repair harness or connector.

5. CHECK MODE DOOR MOTOR (DRIVER SIDE) DRIVE SIGNAL CIRCUIT FOR BATTERY SHORT

1. Turn ignition switch ON.
2. Check voltage between mode door motor LH harness connector and ground.

+		-	Voltage (Approx.)
Mode door motor LH			
Connector	Terminal	Ground	0 V
M316 (with Forest Air)	1		
M317 (without Forest Air)	2		

Is the inspection result normal?

- YES >> GO TO 15.
- NO >> Repair harness or connector.

6. CHECK MODE DOOR MOTOR (DRIVER SIDE)

Check mode door motor (driver side). Refer to [HAC-112. "Component Inspection \(Motor\)".](#)

Is the inspection result normal?

- YES >> GO TO 7.
- NO >> Replace mode door motor (driver side). Refer to [HAC-183. "MODE DOOR MOTOR : Removal and Installation".](#)

7. CHECK INSTALLATION OF MODE DOOR MOTOR (DRIVER SIDE) CONTROL LINKAGE

Check mode door motor (driver side) control linkage is properly installed. Refer to [HAC-183. "Exploded View".](#)

Is the inspection result normal?

- YES >> GO TO 15.
- NO >> Repair or replace malfunctioning parts.

B2756, B2757, B2758 MODE DOOR MOTOR (DRIVER SIDE)

[AUTOMATIC AIR CONDITIONING]

< DTC/CIRCUIT DIAGNOSIS >

8. CHECK MODE DOOR MOTOR (DRIVER SIDE) PBR FEEDBACK SIGNAL

1. Operate MODE switch (driver side) and DEF switch.
2. Check voltage between A/C auto amp. harness connector and ground.

+		-	Condition	Voltage (Approx.)	
A/C auto amp.					
Connector	Terminal				
M304	54	Ground	Air outlet	VENT	4 V
				DEF	1 V

Is the inspection result normal?

- YES >> GO TO 15.
NO >> GO TO 9.

9. CHECK MODE DOOR MOTOR (DRIVER SIDE) PBR FEEDBACK SIGNAL CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect mode door motor LH harness connector and A/C auto amp. harness connector.
3. Check continuity between mode door motor LH harness connector and A/C auto amp. harness connector.

Mode door motor LH		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M316 (with Forest Air) M317 (without Forest Air)	3	M304	54	Existed

Is the inspection result normal?

- YES >> GO TO 10.
NO >> Repair harness or connector.

10. CHECK MODE DOOR MOTOR (DRIVER SIDE) PBR FEEDBACK SIGNAL CIRCUIT FOR SHORT

Check continuity between mode door motor LH harness connector and ground.

Mode door motor LH		—	Continuity
Connector	Terminal		
M316 (with Forest Air) M317 (without Forest Air)	3	Ground	Not existed

Is the inspection result normal?

- YES >> GO TO 11.
NO >> Repair harness or connector.

11. CHECK MODE DOOR MOTOR (DRIVER SIDE) PBR POWER SUPPLY

1. Reconnect A/C auto amp. harness connector.
2. Turn ignition switch ON.
3. Check voltage between mode door motor LH harness connector and ground.

+		-	Voltage (Approx.)
Mode door motor LH			
Connector	Terminal		
M316 (with Forest Air)	4	Ground	5 V
M317 (without Forest Air)	5		

Is the inspection result normal?

- YES >> GO TO 13.
NO >> GO TO 12.

12. CHECK MODE DOOR MOTOR (DRIVER SIDE) PBR POWER SUPPLY CIRCUIT FOR OPEN

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

B2756, B2757, B2758 MODE DOOR MOTOR (DRIVER SIDE)

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. harness connector.
3. Check continuity between mode door motor LH harness connector and A/C auto amp. harness connector.

Mode door motor LH		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M316 (with Forest Air)	4	M304	71	Existed
M317 (without Forest Air)	5			

Is the inspection result normal?

YES >> GO TO 15.

NO >> Repair harness or connector.

13.CHECK MODE DOOR MOTOR (DRIVER SIDE) PBR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. harness connector.
3. Check continuity between mode door motor LH harness connector and A/C auto amp. harness connector.

Mode door motor LH		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M316 (with Forest Air)	5	M304	79	Existed
M317 (without Forest Air)	7			

Is the inspection result normal?

YES >> GO TO 14.

NO >> Repair harness or connector.

14.CHECK MODE DOOR MOTOR (DRIVER SIDE) PBR

Check mode door motor (driver side) PBR. Refer to [HAC-113. "Component Inspection \(PBR\)".](#)

Is the inspection result normal?

YES >> GO TO 15.

NO >> Replace mode door motor (driver side). Refer to [HAC-183. "MODE DOOR MOTOR : Removal and Installation".](#)

15.CHECK INTERMITTENT INCIDENT

Refer to [GI-47. "Intermittent Incident".](#)

Is the inspection result normal?

YES >> Replace A/C auto amp. Refer to [HAC-175. "Removal and Installation".](#)

NO >> Repair or replace malfunctioning parts.

Component Inspection (Motor)

INFOID:000000010099470

1.CHECK MODE DOOR MOTOR (DRIVER SIDE)

1. Turn ignition switch OFF.
2. Disconnect the mode door motor LH harness connector.
3. Supply mode door motor (driver side) terminals with battery voltage and check by visually and operation sound that mode door motor (driver side) operates.

Terminal		Operation direction
+	-	
1	2	VENT
2	1	DEF

Is the inspection result normal?

B2756, B2757, B2758 MODE DOOR MOTOR (DRIVER SIDE)

[AUTOMATIC AIR CONDITIONING]

< DTC/CIRCUIT DIAGNOSIS >

YES >> INSPECTION END

NO >> Replace mode door motor (driver side). Refer to [HAC-183, "MODE DOOR MOTOR : Removal and Installation"](#).

Component Inspection (PBR)

INFOID:0000000010099471

1. CHECK MODE DOOR MOTOR (DRIVER SIDE) PBR

Check resistance between mode door motor (driver side) PBR terminals.

Terminal	Resistance (Ω)
5 (with Forest Air)	3
	4
7 (without Forest Air)	3
	5

Except 0 or ∞

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace mode door motor (driver side). Refer to [HAC-184, "AIR MIX DOOR MOTOR : Removal and Installation"](#).

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

B2759, B275A, B275B MODE DOOR MOTOR (PASSENGER SIDE)

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

B2759, B275A, B275B MODE DOOR MOTOR (PASSENGER SIDE)

DTC Logic

INFOID:000000010099472

DTC DETECTION LOGIC

NOTE:

- If DTC is displayed along with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [HAC-81, "DTC Logic"](#).
- If DTC is displayed along with DTC U1010, first perform the trouble diagnosis for DTC U1010. [HAC-82, "DTC Logic"](#).
- If all of door motors DTC (B2750 – B276A) are detected, check door motor PBR power supply and ground circuit. Refer to [HAC-145, "DOOR MOTOR PBR \(WITH FOREST AIR\) : Diagnosis Procedure"](#) (With Forest Air).
- If all of door motors DTC (B2750 – B2764) are detected, check door motor PBR power supply and ground circuit. Refer to [HAC-147, "DOOR MOTOR PBR \(WITHOUT FOREST AIR\) : Diagnosis Procedure"](#) (Without Forest Air).

DTC	Items (CONSULT screen terms)	DTC detection condition	Possible cause
B2759	PASS MODE DOOR MOT	Mode door motor (passenger side) PBR feedback signal voltage is too low.	<ul style="list-style-type: none">• Mode door motor (passenger side)• Mode door motor (passenger side) control linkage installation condition• A/C auto amp.• Harness or connectors (The motor circuit is open or shorted.)
B275A		Mode door motor (passenger side) PBR feedback signal voltage is too high.	
B275B		Stop position of mode door motor (passenger side) is malfunctioning.	

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

④ With CONSULT

1. Turn ignition switch ON.
2. Select "Self Diagnostic Result" mode of "HVAC" using CONSULT.
3. Check DTC.

Is DTC detected?

YES >> Refer to [HAC-114, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000010099473

1. CHECK MODE DOOR MOTOR (PASSENGER SIDE) OPERATION

1. Turn ignition switch ON.
2. Operate MODE switch (driver side) and DEF switch.
NOTE:
"DUAL": OFF
3. Check operation sound that mode door motor (passenger side) operates.

Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 2.

2. CHECK MODE DOOR MOTOR (PASSENGER SIDE) DRIVE SIGNAL

1. Press MODE switch (driver side) and DEF switch.
NOTE:
"DUAL": OFF
2. Check voltage between mode door motor RH harness connector and ground.

B2759, B275A, B275B MODE DOOR MOTOR (PASSENGER SIDE)

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

+		-	Condition		Voltage (Approx.)
Mode door motor RH					
Connector	Terminal				
M307 (with Forest Air)	1	Ground	Air outlet	DEF → VENT	12 V
M308 (without Forest Air)	2			VENT → DEF	

Is the inspection result normal?

- YES >> GO TO 6.
- NO >> GO TO 3.

3.CHECK MODE DOOR MOTOR (PASSENGER SIDE) DRIVE SIGNAL CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect mode door motor RH harness connector and A/C auto amp. harness connector.
3. Check continuity between mode door motor RH harness connector and A/C auto amp. harness connector.

Mode door motor RH		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M307 (with Forest Air)	1	M304	64	Existed
M308 (without Forest Air)	2		84	

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Repair harness or connector.

4.CHECK MODE DOOR MOTOR (PASSENGER SIDE) DRIVE SIGNAL CIRCUIT FOR GROUND SHORT

Check continuity between mode door motor RH harness connector and ground.

Mode door motor RH		—	Continuity
Connector	Terminal		
M307 (with Forest Air)	1	Ground	Not existed
M308 (without Forest Air)	2		

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Repair harness or connector.

5.CHECK MODE DOOR MOTOR (PASSENGER SIDE) DRIVE SIGNAL CIRCUIT FOR BATTERY SHORT

1. Turn ignition switch ON.
2. Check voltage between mode door motor RH harness connector and ground.

+		-	Voltage (Approx.)
Mode door motor RH			
Connector	Terminal		
M307 (with Forest Air)	1	Ground	0 V
M308 (without Forest Air)	2		

Is the inspection result normal?

- YES >> GO TO 15.
- NO >> Repair harness or connector.

6.CHECK MODE DOOR MOTOR (PASSENGER SIDE)

Check mode door motor (passenger side). Refer to [HAC-118. "Component Inspection \(Motor\)"](#).

Is the inspection result normal?

- YES >> GO TO 7.

B2759, B275A, B275B MODE DOOR MOTOR (PASSENGER SIDE)

[AUTOMATIC AIR CONDITIONING]

< DTC/CIRCUIT DIAGNOSIS >

NO >> Replace mode door motor (passenger side). Refer to [HAC-183, "MODE DOOR MOTOR : Removal and Installation"](#).

7. CHECK INSTALLATION OF MODE DOOR MOTOR (PASSENGER SIDE) CONTROL LINKAGE

Check mode door motor (passenger side) control linkage is properly installed. Refer to [HAC-183, "Exploded View"](#).

Is the inspection result normal?

YES >> GO TO 15.

NO >> Repair or replace malfunctioning parts.

8. CHECK MODE DOOR MOTOR (PASSENGER SIDE) PBR FEEDBACK SIGNAL

1. Operate MODE switch (driver side) and DEF switch.

NOTE:

"DUAL": OFF

2. Check voltage between A/C auto amp. harness connector and ground.

+		-	Condition	Voltage (Approx.)	
A/C auto amp.					
Connector	Terminal				
M304	73	Ground	Air outlet	VENT	4 V
				DEF	1 V

Is the inspection result normal?

YES >> GO TO 15.

NO >> GO TO 9.

9. CHECK MODE DOOR MOTOR (PASSENGER SIDE) PBR FEEDBACK SIGNAL CIRCUIT FOR OPEN

1. Turn ignition switch OFF.

2. Disconnect mode door motor RH harness connector and A/C auto amp. harness connector.

3. Check continuity between mode door motor RH harness connector and A/C auto amp. harness connector.

Mode door motor RH		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M307 (with Forest Air) M308 (without Forest Air)	3	M304	73	Existed

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair harness or connector.

10. CHECK MODE DOOR MOTOR (PASSENGER SIDE) PBR FEEDBACK SIGNAL CIRCUIT FOR SHORT

Check continuity between mode door motor RH harness connector and ground.

Mode door motor RH		—	Continuity
Connector	Terminal		
M307 (with Forest Air) M308 (without Forest Air)	3	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 11.

NO >> Repair harness or connector.

11. CHECK MODE DOOR MOTOR (PASSENGER SIDE) PBR POWER SUPPLY

1. Reconnect A/C auto amp. harness connector.

2. Turn ignition switch ON.

3. Check voltage between mode door motor RH harness connector and ground.

B2759, B275A, B275B MODE DOOR MOTOR (PASSENGER SIDE)

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

+		-	Voltage (Approx.)
Mode door motor RH			
Connector	Terminal	Ground	5 V
M307 (with Forest Air)	4		
M308 (without Forest Air)	5		

Is the inspection result normal?

- YES >> GO TO 13.
NO >> GO TO 12.

12. CHECK MODE DOOR MOTOR (PASSENGER SIDE) PBR POWER SUPPLY CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. harness connector.
3. Check continuity between mode door motor RH harness connector and A/C auto amp. harness connector.

Mode door motor RH		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M307 (with Forest Air)	4	M304	71	Existed
M308 (without Forest Air)	5			

Is the inspection result normal?

- YES >> GO TO 15.
NO >> Repair harness or connector.

13. CHECK MODE DOOR MOTOR (PASSENGER SIDE) PBR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. harness connector.
3. Check continuity between mode door motor RH harness connector and A/C auto amp. harness connector.

Mode door motor RH		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M307 (with Forest Air)	5	M304	79	Existed
M308 (without Forest Air)	7			

Is the inspection result normal?

- YES >> GO TO 14.
NO >> Repair harness or connector.

14. CHECK MODE DOOR MOTOR (PASSENGER SIDE) PBR

Check mode door motor (passenger side) PBR. Refer to [HAC-118, "Component Inspection \(PBR\)"](#).

Is the inspection result normal?

- YES >> GO TO 15.
NO >> Replace mode door motor (passenger side). Refer to [HAC-183, "MODE DOOR MOTOR : Removal and Installation"](#).

15. CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace A/C auto amp. Refer to [HAC-175, "Removal and Installation"](#).
NO >> Repair or replace malfunctioning parts.

B2759, B275A, B275B MODE DOOR MOTOR (PASSENGER SIDE)

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

Component Inspection (Motor)

INFOID:000000010099474

1. CHECK MODE DOOR MOTOR (PASSENGER SIDE)

1. Turn ignition switch OFF.
2. Disconnect mode door motor RH harness connector.
3. Supply mode door motor (passenger side) terminals with battery voltage and check by visually and operation sound that mode door motor (passenger side) operates.

Terminal		Operation direction
+	-	
1	2	VENT
2	1	DEF

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace mode door motor (passenger side). Refer to [HAC-183. "MODE DOOR MOTOR : Removal and Installation"](#).

Component Inspection (PBR)

INFOID:000000010099475

1. CHECK MODE DOOR MOTOR (PASSENGER SIDE) PBR

Check resistance between mode door motor (passenger side) PBR terminals.

Terminal		Resistance (Ω)
5 (with Forest Air)	3	Except 0 or ∞
	4	
7 (without Forest Air)	3	
	5	

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace mode door motor (passenger side). Refer to [HAC-184. "AIR MIX DOOR MOTOR : Removal and Installation"](#).

B275C, B275D, B275E INTAKE DOOR MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

B275C, B275D, B275E INTAKE DOOR MOTOR

DTC Logic

INFOID:000000010099476

DTC DETECTION LOGIC

NOTE:

- If DTC is displayed along with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [HAC-81, "DTC Logic"](#).
- If DTC is displayed along with DTC U1010, first perform the trouble diagnosis for DTC U1010. [HAC-82, "DTC Logic"](#).
- If all of door motors DTC (B2750 – B276A) are detected, check door motor PBR power supply and ground circuit. Refer to [HAC-145, "DOOR MOTOR PBR \(WITH FOREST AIR\) : Diagnosis Procedure"](#) (With Forest Air).
- If all of door motors DTC (B2750 – B2764) are detected, check door motor PBR power supply and ground circuit. Refer to [HAC-147, "DOOR MOTOR PBR \(WITHOUT FOREST AIR\) : Diagnosis Procedure"](#) (Without Forest Air).

DTC	Items (CONSULT screen terms)	DTC detection condition	Possible cause
B275C	INTAKE DOOR MOTOR	Intake door motor PBR feedback signal voltage is too low.	<ul style="list-style-type: none">• Intake door motor• Intake door motor control linkage installation condition• A/C auto amp.• Harness or connectors (The motor circuit is open or shorted.)
B275D		Intake door motor PBR feedback signal voltage is too high.	
B275E		Stop position of intake door motor is malfunctioning.	

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

 With CONSULT

1. Turn ignition switch ON.
2. Select "Self Diagnostic Result" mode of "HVAC" using CONSULT.
3. Check DTC.

Is DTC detected?

- YES >> Refer to [HAC-119, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000010099477

1. CHECK INTAKE DOOR MOTOR OPERATION

1. Turn ignition switch ON.
2. Operate FRE switch and REC switch (with Forest Air) or intake switch (without Forest Air).
3. Listen to intake sound and confirm air inlets change.

Does it operate normally?

- YES >> GO TO 8.
NO >> GO TO 2.

2. CHECK INTAKE DOOR MOTOR DRIVE SIGNAL

1. Operate FRE switch and REC switch (with Forest Air) or intake switch (without Forest Air).
2. Check voltage between intake door motor harness connector and ground.

B275C, B275D, B275E INTAKE DOOR MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

+		-	Condition	Voltage (Approx.)		
Intake door motor						
Connector	Terminal	Ground	Inlet duct	12 V		
M310 (without Forest Air)	1					REC → FRE
	2					FRE → REC
M309 (with Forest Air)	1					REC → FRE
	2		FRE → REC			

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 3.

3. CHECK INTAKE DOOR MOTOR DRIVE SIGNAL CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.
3. Disconnect intake door motor connector.
4. Check continuity between intake door motor harness connector and A/C auto amp. harness connector.

Intake door motor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M310 (without Forest Air)	1	M304	85	Existed
	2		65	
M309 (with Forest Air)	1		85	
	2		65	

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair harness or connector.

4. CHECK INTAKE DOOR MOTOR DRIVE SIGNAL CIRCUIT FOR GROUND SHORT

Check continuity between intake door motor harness connector and ground.

Intake door motor		-	Continuity
Connector	Terminal		
M310 (without Forest Air)	1	Ground	Not existed
	2		
M309 (with Forest Air)	1		
	2		

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair harness or connector.

5. CHECK INTAKE DOOR MOTOR DRIVE SIGNAL CIRCUIT FOR BATTERY SHORT

1. Turn ignition switch ON.
2. Check voltage between intake door motor harness connector and ground.

B275C, B275D, B275E INTAKE DOOR MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

+		-	Voltage (Approx.)
Intake door motor			
Connector	Terminal	Ground	0 V
M310 (without Forest Air)	1		
	2		
M309 (with Forest Air)	1		
	2		

Is the inspection result normal?

YES >> GO TO 15.

NO >> Repair harness or connector.

6. CHECK INTAKE DOOR MOTOR

Check intake door motor. Refer to [HAC-123, "Component Inspection \(Motor\)"](#).

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace intake door motor. Refer to [HAC-184, "INTAKE DOOR MOTOR : Removal and Installation"](#).

7. CHECK INSTALLATION OF INTAKE DOOR MOTOR CONTROL LINKAGE

Check intake door motor control linkage is properly installed. Refer to [HAC-183, "Exploded View"](#).

Is the inspection result normal?

YES >> GO TO 15.

NO >> Repair or replace malfunctioning parts.

8. CHECK INTAKE DOOR MOTOR PBR FEEDBACK SIGNAL

1. Operate FRE switch and REC switch (with Forest Air) or intake switch (without Forest Air).
2. Check voltage between A/C auto amp. harness connector and ground.

+		-	Condition		Voltage (Approx.)		
A/C auto amp.							
Connector	Terminal	Ground	Inlet duct	REC	4 V		
M304	55			Ground	Inlet duct	FRE	1 V

Is the inspection result normal?

YES >> GO TO 15.

NO >> GO TO 9.

9. CHECK INTAKE DOOR MOTOR PBR FEEDBACK SIGNAL CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.
3. Disconnect intake door motor connector.
4. Check continuity between intake door motor harness connector and A/C auto amp. harness connector.

Intake door motor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M310 (without Forest Air)	3	M304	55	Existed
M309 (with Forest Air)				

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair harness or connector.

B275C, B275D, B275E INTAKE DOOR MOTOR

[AUTOMATIC AIR CONDITIONING]

< DTC/CIRCUIT DIAGNOSIS >

10. CHECK INTAKE DOOR MOTOR PBR FEEDBACK SIGNAL CIRCUIT FOR SHORT

Check continuity between intake door motor harness connector and ground.

Intake door motor		—	Continuity
Connector	Terminal		
M310 (without Forest Air)	3	Ground	Not existed
M309 (with Forest Air)			

Is the inspection result normal?

YES >> GO TO 11.

NO >> Repair harness or connector.

11. CHECK INTAKE DOOR MOTOR PBR POWER SUPPLY

1. Connect A/C auto amp. connector.
2. Turn ignition switch ON.
3. Check voltage between intake door motor harness connector and ground.

+		-	Voltage (Approx.)
Intake door motor			
Connector	Terminal	Ground	5 V
M310 (without Forest Air)	5		
M309 (with Forest Air)	4		

Is the inspection result normal?

YES >> GO TO 13.

NO >> GO TO 12.

12. CHECK INTAKE DOOR MOTOR PBR FEEDBACK PBR POWER SUPPLY CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.
3. Check continuity between intake door motor harness connector and A/C auto amp. harness connector.

Intake door motor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M310 (without Forest Air)	5	M304	71	Existed
M309 (with Forest Air)	4			

Is the inspection result normal?

YES >> GO TO 15.

NO >> Repair harness or connector.

13. CHECK INTAKE DOOR MOTOR PBR FEEDBACK PBR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.
3. Check continuity between intake door motor harness connector and A/C auto amp. harness connector.

Intake door motor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M310 (without Forest Air)	7	M304	79	Existed
M309 (with Forest Air)	5			

Is the inspection result normal?

YES >> GO TO 14.

NO >> Repair harness or connector.

B275C, B275D, B275E INTAKE DOOR MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

14.CHECK INTAKE DOOR MOTOR PBR

Check intake door motor PBR. Refer to [HAC-123. "Component Inspection \(PBR\)".](#)

Is the inspection result normal?

YES >> GO TO 15.

NO >> Replace intake door motor. Refer to [HAC-184. "INTAKE DOOR MOTOR : Removal and Installation".](#)

15.CHECK INTERMITTENT INCIDENT

Refer to [GI-47. "Intermittent Incident".](#)

Is the inspection result normal?

YES >> Replace A/C auto amp. Refer to [HAC-175. "Removal and Installation".](#)

NO >> Repair or replace malfunctioning parts.

Component Inspection (Motor)

INFOID:0000000010099478

1.CHECK INTAKE DOOR MOTOR

1. Turn ignition switch OFF.
2. Disconnect intake door motor connector.
3. Supply intake door motor terminals with battery voltage and check by visually and operation sound that intake door motor operates.

Terminal		Operation direction
+	-	
1	2	FRE
2	1	REC

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace intake door motor. Refer to [HAC-184. "INTAKE DOOR MOTOR : Removal and Installation".](#)

Component Inspection (PBR)

INFOID:0000000010099479

1.CHECK INTAKE DOOR MOTOR PBR

Check resistance between intake door motor terminals.

Terminal		Resistance (Approx.)
7 (without forest A/C)	3	Except 0 or ∞
	5	
5 (with forest A/C)	3	
	4	

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace intake door motor. Refer to [HAC-184. "INTAKE DOOR MOTOR : Removal and Installation".](#)

B275F, B2760, B2761 UPPER VENTILATOR DOOR MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

B275F, B2760, B2761 UPPER VENTILATOR DOOR MOTOR

DTC Logic

INFOID:000000010099480

DTC DETECTION LOGIC

NOTE:

- If DTC is displayed along with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [HAC-81, "DTC Logic"](#).
- If DTC is displayed along with DTC U1010, first perform the trouble diagnosis for DTC U1010. [HAC-82, "DTC Logic"](#).
- If all of door motors DTC (B2750 – B276A) are detected, check door motor PBR power supply and ground circuit. Refer to [HAC-145, "DOOR MOTOR PBR \(WITH FOREST AIR\) : Diagnosis Procedure"](#) (With Forest Air).
- If all of door motors DTC (B2750 – B2764) are detected, check door motor PBR power supply and ground circuit. Refer to [HAC-147, "DOOR MOTOR PBR \(WITHOUT FOREST AIR\) : Diagnosis Procedure"](#) (Without Forest Air).

DTC	Items (CONSULT screen terms)	DTC detection condition	Possible cause
B275F	DR UP VENT DOOR MOT	Upper ventilator door motor PBR feedback signal voltage is too low.	<ul style="list-style-type: none">• Upper ventilator door motor• Upper ventilator door motor installation condition• A/C auto amp.• Harness or connectors (The motor circuit is open or shorted.)
B2760		Upper ventilator door motor PBR feedback signal voltage is too high.	
B2761		Stop position of upper ventilator door motor is malfunctioning.	

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

With CONSULT

1. Turn ignition switch ON.
2. Select "Self Diagnostic Result" mode of "HVAC" using CONSULT.
3. Check DTC.

Is DTC detected?

- YES >> Refer to [HAC-124, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000010099481

1. CHECK UPPER VENTILATOR DOOR MOTOR OPERATION

1. Turn ignition switch ON.
2. Touch "Upper Vent" in "Climate" screen and check by operation sound that upper ventilator door motor operates.

Does upper ventilator door motor operate?

- YES >> GO TO 8.
NO >> GO TO 2.

2. CHECK UPPER VENTILATOR DOOR MOTOR DRIVE SIGNAL

Check voltage between upper ventilator door motor harness connector and ground when "Upper Vent" in "Climate" screen is touched.

With Forest Air

+		-	Condition		Voltage (Approx.)
Upper ventilator door motor Connector	Terminal		Upper Vent		
M313	1	Ground		Upper Vent	ON → OFF
	2		OFF → ON		

B275F, B2760, B2761 UPPER VENTILATOR DOOR MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

Without Forest Air

+		-	Condition		Voltage (Approx.)
Upper ventilator door motor	Connector				
	Terminal	Ground	Upper Vent	ON → OFF	12 V
M312	1			OFF → ON	
	2				

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 3.

3. CHECK UPPER VENTILATOR DOOR MOTOR DRIVE SIGNAL CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.
3. Disconnect upper ventilator door motor connector.
4. Check continuity between upper ventilator door motor harness connector and A/C auto amp. harness connector.

With Forest Air

Upper ventilator door motor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M313	1	M304	66	Existed
	2		86	

Without Forest Air

Upper ventilator door motor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M312	1	M304	66	Existed
	2		86	

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair harness or connector.

4. CHECK UPPER VENTILATOR DOOR MOTOR DRIVE SIGNAL CIRCUIT FOR GROUND SHORT

Check continuity between upper ventilator door motor harness connector and ground.

With Forest Air

Upper ventilator door motor		—	Continuity
Connector	Terminal		
M313	1	Ground	Not existed
	2		

Without Forest Air

Upper ventilator door motor		—	Continuity
Connector	Terminal		
M312	1	Ground	Not existed
	2		

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair harness or connector.

5. CHECK UPPER VENTILATOR DOOR MOTOR DRIVE SIGNAL CIRCUIT FOR BATTERY SHORT

1. Turn ignition switch ON.
2. Check voltage between upper ventilator door motor harness connector and ground.

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

B275F, B2760, B2761 UPPER VENTILATOR DOOR MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

With Forest Air

+		-	Voltage (Approx.)
Upper ventilator door motor	Connector		
	Terminal	Ground	0 V
M313	1		
	2		

Without Forest Air

+		-	Voltage (Approx.)
Upper ventilator door motor	Connector		
	Terminal	Ground	0 V
M312	1		
	2		

Is the inspection result normal?

YES >> GO TO 15.

NO >> Repair harness or connector.

6. CHECK UPPER VENTILATOR DOOR MOTOR

Check upper ventilator door motor. Refer to [HAC-128, "Component Inspection \(Motor\)"](#).

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace upper ventilator door motor. Refer to [HAC-184, "UPPER VENTILATOR DOOR MOTOR : Removal and Installation"](#).

7. CHECK INSTALLATION OF UPPER VENTILATOR DOOR MOTOR

Check upper ventilator door motor is properly installed. Refer to [HAC-183, "Exploded View"](#).

Is the inspection result normal?

YES >> GO TO 15.

NO >> Repair or replace malfunctioning parts.

8. CHECK UPPER VENTILATOR DOOR MOTOR PBR FEEDBACK SIGNAL

Check voltage between A/C auto amp. harness connector and ground when "Upper Vent" in "Climate" screen is touched.

+		-	Condition	Voltage (Approx.)	
A/C auto amp.	Connector				
	Terminal	Ground	Upper Vent	ON	4 V
M304	75			OFF	1 V

Is the inspection result normal?

YES >> GO TO 15.

NO >> GO TO 9.

9. CHECK UPPER VENTILATOR DOOR MOTOR PBR FEEDBACK SIGNAL CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.
3. Disconnect upper ventilator door motor connector.
4. Check continuity between upper ventilator door motor harness connector and A/C auto amp. harness connector.

B275F, B2760, B2761 UPPER VENTILATOR DOOR MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

With Forest Air

Upper ventilator door motor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M313	3	M304	75	Existed

Without Forest Air

Upper ventilator door motor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M312	3	M304	75	Existed

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair harness or connector.

10. CHECK UPPER VENTILATOR DOOR MOTOR PBR FEEDBACK SIGNAL CIRCUIT FOR SHORT

Check continuity between upper ventilator door motor harness connector and ground.

With Forest Air

Upper ventilator door motor		—	Continuity
Connector	Terminal		
M313	3	Ground	Not existed

Without Forest Air

Upper ventilator door motor		—	Continuity
Connector	Terminal		
M312	3	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 11.

NO >> Repair harness or connector.

11. CHECK UPPER VENTILATOR DOOR MOTOR PBR POWER SUPPLY

1. Connect A/C auto amp. connector.
2. Turn ignition switch ON.
3. Check voltage between upper ventilator door motor harness connector and ground.

With Forest Air

+		-	Voltage (Approx.)
Upper ventilator door motor			
Connector	Terminal		
M313	5	Ground	5 V

Without Forest Air

+		-	Voltage (Approx.)
Upper ventilator door motor			
Connector	Terminal		
M312	7	Ground	5 V

Is the inspection result normal?

YES >> GO TO 13.

NO >> GO TO 12.

12. CHECK UPPER VENTILATOR DOOR MOTOR PBR POWER SUPPLY CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.
3. Check continuity between upper ventilator door motor harness connector and A/C auto amp. harness connector.

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

B275F, B2760, B2761 UPPER VENTILATOR DOOR MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

With Forest Air

Upper ventilator door motor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M313	5	M304	71	Existed

Without Forest Air

Upper ventilator door motor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M312	7	M304	71	Existed

Is the inspection result normal?

YES >> GO TO 15.

NO >> Repair harness or connector.

13.CHECK UPPER VENTILATOR DOOR MOTOR PBR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.
3. Check continuity between upper ventilator door motor harness connector and A/C auto amp. harness connector.

With Forest Air

Upper ventilator door motor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M313	4	M304	79	Existed

Without Forest Air

Upper ventilator door motor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M312	5	M304	79	Existed

Is the inspection result normal?

YES >> GO TO 14.

NO >> Repair harness or connector.

14.CHECK UPPER VENTILATOR DOOR MOTOR PBR

Check upper ventilator door motor PBR. Refer to [HAC-129, "Component Inspection \(PBR\)"](#).

Is the inspection result normal?

YES >> GO TO 15.

NO >> Replace upper ventilator door motor. Refer to [HAC-184, "UPPER VENTILATOR DOOR MOTOR : Removal and Installation"](#).

15.CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Replace A/C auto amp. Refer to [HAC-175, "Removal and Installation"](#).

NO >> Repair or replace malfunction parts.

Component Inspection (Motor)

INFOID:000000010099482

1.CHECK UPPER VENTILATOR DOOR MOTOR

1. Turn ignition switch OFF.
2. Disconnect upper ventilator door motor connector.
3. Supply upper ventilator door motor terminals with battery voltage and check by visually and operation sound that upper ventilator door motor operates.

B275F, B2760, B2761 UPPER VENTILATOR DOOR MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

Terminal		Operation direction
+	-	
1	2	Close
2	1	Open

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace upper ventilator door motor. Refer to [HAC-184, "UPPER VENTILATOR DOOR MOTOR : Removal and Installation"](#).

Component Inspection (PBR)

INFOID:0000000010099483

1. CHECK UPPER VENTILATOR DOOR MOTOR PBR

Check resistance between upper ventilator door motor terminals.

With Forest Air

Terminal	Resistance (Ω)
4	3
	5
Other than 0 or ∞	

Without Forest Air

Terminal	Resistance (Ω)
5	3
	7
Other than 0 or ∞	

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace upper ventilator door motor. Refer to [HAC-184, "UPPER VENTILATOR DOOR MOTOR : Removal and Installation"](#).

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

B2762, B2763, B2764 REAR MODE DOOR MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

B2762, B2763, B2764 REAR MODE DOOR MOTOR

DTC Logic

INFOID:000000010099484

DTC DETECTION LOGIC

NOTE:

- If DTC is displayed along with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [HAC-81, "DTC Logic"](#).
- If DTC is displayed along with DTC U1010, first perform the trouble diagnosis for DTC U1010. [HAC-82, "DTC Logic"](#).
- If all of door motors DTC (B2750 – B276A) are detected, check door motor PBR power supply and ground circuit. Refer to [HAC-145, "DOOR MOTOR PBR \(WITH FOREST AIR\) : Diagnosis Procedure"](#) (With Forest Air).
- If all of door motors DTC (B2750 – B2764) are detected, check door motor PBR power supply and ground circuit. Refer to [HAC-147, "DOOR MOTOR PBR \(WITHOUT FOREST AIR\) : Diagnosis Procedure"](#) (Without Forest Air).

DTC	Items (CONSULT screen terms)	DTC detection condition	Possible cause
B2762	REAR MODE DOOR MOT	Rear mode door motor PBR feedback signal voltage is too low.	<ul style="list-style-type: none">• Rear mode door motor• Rear mode door motor installation condition• A/C auto amp.• Harness or connectors (The motor circuit is open or shorted.)
B2763		Rear mode door motor PBR feedback signal voltage is too high.	
B2764		Stop position of rear mode door motor is malfunctioning.	

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

④ With CONSULT

1. Turn ignition switch ON.
2. Select "Self Diagnostic Result" mode of "HVAC" using CONSULT.
3. Check DTC.

Is DTC detected?

- YES >> Refer to [HAC-130, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000010099485

1. CHECK REAR MODE DOOR MOTOR OPERATION

1. Turn ignition switch ON.
2. Operate MODE switch (driver side) and DEF switch and check by operation sound that rear mode door motor.

NOTE:

"DUAL": OFF

Does rear mode door motor operate?

- YES >> GO TO 8.
NO >> GO TO 2.

2. CHECK REAR MODE DOOR MOTOR DRIVE SIGNAL

Check voltage between rear mode door motor harness connector and ground, when MODE switch (driver side) and DEF switch are operated.

NOTE:

"DUAL": OFF

B2762, B2763, B2764 REAR MODE DOOR MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

+		-	Condition	Voltage (Approx.)	
Rear mode door motor					
Connector	Terminal				
M318	1	Ground	Air outlet	DEF → VENT	12 V
	2			VENT → DEF	

Is the inspection result normal?

- YES >> GO TO 6.
- NO >> GO TO 3.

3. CHECK REAR MODE DOOR MOTOR DRIVE SIGNAL CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.
3. Disconnect rear mode door motor connector.
4. Check continuity between rear mode door motor harness connector and A/C auto amp. harness connector.

Rear mode door motor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M318	1	M304	68	Existed
	2		88	

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Repair harness or connector.

4. CHECK REAR MODE DOOR MOTOR DRIVE SIGNAL CIRCUIT FOR GROUND SHORT

Check continuity between rear mode door motor harness connector and ground.

Rear mode door motor		—	Continuity
Connector	Terminal		
M318	1	Ground	Not existed
	2		

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Repair harness or connector.

5. CHECK REAR MODE DOOR MOTOR DRIVE SIGNAL CIRCUIT FOR BATTERY SHORT

1. Turn ignition switch ON.
2. rear mode door motor harness connector and ground.

+		-	Voltage (Approx.)
Rear mode door motor			
Connector	Terminal		
M318	1	Ground	0 V
	2		

Is the inspection result normal?

- YES >> GO TO 15.
- NO >> Repair harness or connector.

6. CHECK REAR MODE DOOR MOTOR

Check rear mode door motor. Refer to [HAC-133, "Component Inspection \(Motor\)"](#).

Is the inspection result normal?

B2762, B2763, B2764 REAR MODE DOOR MOTOR

[AUTOMATIC AIR CONDITIONING]

< DTC/CIRCUIT DIAGNOSIS >

YES >> GO TO 7.

NO >> Replace rear mode door motor. Refer to [HAC-185, "REAR MODE DOOR MOTOR : Removal and Installation"](#).

7. CHECK INSTALLATION OF REAR MODE DOOR MOTOR

Check rear mode door motor is properly installed. Refer to [HAC-183, "Exploded View"](#).

Is the inspection result normal?

YES >> GO TO 15.

NO >> Repair or replace malfunctioning parts.

8. CHECK REAR MODE DOOR MOTOR PBR FEEDBACK SIGNAL

Check voltage between A/C auto amp. harness connector and ground when operate MODE switch (driver side) and DEF switch.

NOTE:

"DUAL": OFF

+		-	Condition	Voltage (Approx.)	
A/C auto amp.					
Connector	Terminal				
M304	58	Ground	Air outlet	VENT	4 V
				DEF	1 V

Is the inspection result normal?

YES >> GO TO 15.

NO >> GO TO 9.

9. CHECK REAR MODE DOOR MOTOR PBR FEEDBACK SIGNAL CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.
3. Disconnect rear mode door motor connector.
4. Check continuity between rear mode door motor harness connector and A/C auto amp. harness connector.

Rear mode door motor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M318	3	M304	58	Existed

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair harness or connector.

10. CHECK REAR MODE DOOR MOTOR PBR FEEDBACK SIGNAL CIRCUIT FOR SHORT

Check continuity between rear mode door motor harness connector and ground.

Rear mode door motor		—	Continuity
Connector	Terminal		
M318	3	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 11.

NO >> Repair harness or connector.

11. CHECK REAR MODE DOOR MOTOR PBR POWER SUPPLY

1. Connect A/C auto amp. connector.
2. Turn ignition switch ON.
3. Check voltage between rear mode door motor harness connector and ground.

B2762, B2763, B2764 REAR MODE DOOR MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

+		-	Voltage (Approx.)
Rear mode door motor			
Connector	Terminal		
M318	5	Ground	5 V

Is the inspection result normal?

- YES >> GO TO 13.
NO >> GO TO 12.

12. CHECK REAR MODE DOOR MOTOR PBR POWER SUPPLY CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.
3. Check continuity between rear mode door motor harness connector and A/C auto amp. harness connector.

Rear mode door motor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M318	5	M304	71	Existed

Is the inspection result normal?

- YES >> GO TO 15.
NO >> Repair harness or connector.

13. CHECK REAR MODE DOOR MOTOR PBR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.
3. Check continuity between rear mode door motor harness connector and A/C auto amp. harness connector.

Rear mode door motor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M318	7	M304	79	Existed

Is the inspection result normal?

- YES >> GO TO 14.
NO >> Repair harness or connector.

14. CHECK REAR MODE DOOR MOTOR PBR

Check rear mode door motor PBR. Refer to [HAC-134, "Component Inspection \(PBR\)"](#).

Is the inspection result normal?

- YES >> GO TO 15.
NO >> Replace rear mode door motor. Refer to [HAC-185, "REAR MODE DOOR MOTOR : Removal and Installation"](#).

15. CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace A/C auto amp. Refer to [HAC-175, "Removal and Installation"](#).
NO >> Repair or replace malfunction parts.

Component Inspection (Motor)

INFOID:000000010099486

1. CHECK REAR MODE DOOR MOTOR

1. Turn ignition switch OFF.
2. Disconnect rear mode door motor connector.

B2762, B2763, B2764 REAR MODE DOOR MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

3. Supply rear mode door motor terminals with battery voltage and check by visually and operation sound that rear mode door motor operates.

Terminal		Operation direction
+	-	
1	2	VENT
2	1	FOOT

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace rear mode door motor. Refer to [HAC-184, "UPPER VENTILATOR DOOR MOTOR : Removal and Installation"](#).

Component Inspection (PBR)

INFOID:000000010099487

1. CHECK REAR MODE DOOR MOTOR PBR

Check resistance between rear mode door motor terminals.

Terminal		Resistance (Ω)
7	3	Other than 0 or ∞
	5	

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace rear mode door motor. Refer to [HAC-184, "UPPER VENTILATOR DOOR MOTOR : Removal and Installation"](#).

B2768, B2769, B276A AROMA MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

B2768, B2769, B276A AROMA MOTOR

DTC Logic

INFOID:0000000110099488

DTC DETECTION LOGIC

NOTE:

- If DTC is displayed along with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [HAC-81, "DTC Logic"](#).
- If DTC is displayed along with DTC U1010, first perform the trouble diagnosis for DTC U1010. [HAC-82, "DTC Logic"](#).
- If all of door motors DTC (B2750 – B276A) are detected, check door motor PBR power supply and ground circuit. Refer to [HAC-145, "DOOR MOTOR PBR \(WITH FOREST AIR\) : Diagnosis Procedure"](#).

DTC	Items (CONSULT screen terms)	DTC detection condition	Possible cause
B2768	AROMA MOTOR	Aroma motor PBR feedback signal voltage is too low.	<ul style="list-style-type: none">• Aroma motor• A/C auto amp.• Harness or connectors (The motor circuit is open or shorted.)
B2769		Aroma motor PBR feedback signal voltage is too high.	
B276A		Stop position of aroma motor is malfunctioning.	

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

Ⓜ With CONSULT

1. Turn ignition switch ON.
2. Select "Self Diagnostic Result" mode of "HVAC" using CONSULT.
3. Check DTC.

Is DTC detected?

- YES >> Refer to [HAC-135, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000110099489

1. CHECK AROMA MOTOR OPERATION

1. Turn ignition switch ON.
2. Operate temperature control switch and set the temperature setting to the same level as ambient temperature.
3. Operate FOREST switch and OFF switch alternately so that aroma diffuser control switches between ON ⇔ OFF.
4. Perform this operation for 2 sets. Check by operation sound that aroma motor operates.

NOTE:

Operation of aroma diffuser control can be checked immediately after FOREST switch is turned OFF once, and then is turned ON again. Operation direction of motor is switched by turning in ON again after turning it off. (Leaf scent ⇔ Fragrant wood)

Is the inspection result normal?

- YES >> GO TO 7.
NO >> GO TO 2.

2. CHECK AROMA MOTOR DRIVE SIGNAL

1. Operate FOREST switch and OFF switch alternately so that aroma diffuser control switches between ON ⇔ OFF.
2. Check voltage between aroma motor harness connector and ground, when this operation is performed for 2 sets.

NOTE:

Operation of aroma diffuser control can be checked immediately after FOREST switch is turned off once, and then is turned ON again. Operation direction of motor is switched by turning in ON again after turning it off. (Leaf scent ⇔ Fragrant wood)

B2768, B2769, B276A AROMA MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

+		-	Condition	Voltage (Approx.)	
Aroma motor					
Connector	Terminal				
M305	5	Ground	Aroma diffuser control	Fragrant wood	12 V
	6			Leaf scent	

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 3.

3. CHECK AROMA MOTOR DRIVE SIGNAL CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.
3. Disconnect aroma motor connector.
4. Check continuity between aroma motor harness connector and A/C auto amp. harness connector.

Aroma motor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M305	5	M304	82	Existed
	6		62	

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair harness or connector.

4. CHECK AROMA MOTOR DRIVE SIGNAL CIRCUIT FOR GROUND SHORT

Check continuity between aroma motor harness connector and ground.

Aroma motor		—	Continuity
Connector	Terminal		
M305	5	Ground	Not existed
	6		

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair harness or connector.

5. CHECK AROMA MOTOR DRIVE SIGNAL CIRCUIT FOR BATTERY SHORT

1. Turn ignition switch ON.
2. Check voltage between aroma motor harness connector and ground.

+		-	Voltage (Approx.)
Aroma motor			
Connector	Terminal		
M305	5	Ground	0 V
	6		

Is the inspection result normal?

YES >> GO TO 14.

NO >> Repair harness or connector.

6. CHECK AROMA MOTOR

Check aroma motor. Refer to [HAC-138, "Component Inspection \(Motor\)"](#).

Is the inspection result normal?

B2768, B2769, B276A AROMA MOTOR

[AUTOMATIC AIR CONDITIONING]

< DTC/CIRCUIT DIAGNOSIS >

YES >> GO TO 14.

NO >> Replace aroma motor. Refer to [HAC-188, "AROMA UNIT : Removal and Installation"](#).

7. CHECK AROMA MOTOR PBR FEEDBACK SIGNAL

1. Operate FOREST switch and OFF switch alternately so that aroma diffuser control switches between ON ⇔ OFF.

2. Check voltage between A/C auto amp. connector and ground, when this operation is performed for 2 sets.

NOTE:

Operation of aroma diffuser control can be checked immediately after FOREST switch is turned off once, and then is turned ON again. Operation direction of motor is switched by turning in ON again after turning it off. (Leaf scent ⇔ Fragrant wood)

+		-	Condition	Voltage (Approx.)
A/C auto amp.				
Connector	Terminal			
M304	52	Ground	Aroma diffuser control	Fragrant wood 4 V
				Leaf scent 1 V

Is the inspection result normal?

YES >> GO TO 14.

NO >> GO TO 8.

8. CHECK AROMA MOTOR PBR FEEDBACK SIGNAL CIRCUIT FOR OPEN

1. Turn ignition switch OFF.

2. Disconnect A/C auto amp. connector.

3. Disconnect aroma motor connector.

4. Check continuity between aroma motor harness connector and A/C auto amp. harness connector.

Aroma motor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M305	2	M304	52	Existed

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair harness or connector.

9. CHECK AROMA MOTOR PBR FEEDBACK SIGNAL CIRCUIT FOR SHORT

Check continuity between aroma motor harness connector and ground.

Aroma motor		—	Continuity
Connector	Terminal		
M305	2	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair harness or connector.

10. CHECK AROMA MOTOR PBR POWER SUPPLY

1. Connect A/C auto amp. connector.

2. Turn ignition switch ON.

3. Check voltage between aroma motor harness connector and ground.

+		-	Voltage (Approx.)
Aroma motor			
Connector	Terminal		
M305	3	Ground	5 V

B2768, B2769, B276A AROMA MOTOR

[AUTOMATIC AIR CONDITIONING]

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

- YES >> GO TO 12.
- NO >> GO TO 11.

11. CHECK AROMA MOTOR PBR POWER SUPPLY CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.
3. Check continuity between aroma motor harness connector and A/C auto amp. harness connector.

Aroma motor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M305	3	M304	71	Existed

Is the inspection result normal?

- YES >> GO TO 14.
- NO >> Repair harness or connector.

12. CHECK AROMA MOTOR PBR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.
3. Check continuity between aroma motor harness connector and A/C auto amp. harness connector.

Aroma motor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M305	1	M304	79	Existed

Is the inspection result normal?

- YES >> GO TO 13.
- NO >> Repair harness or connector.

13. CHECK AROMA MOTOR PBR

Check aroma motor PBR. Refer to [HAC-139, "Component Inspection \(PBR\)"](#).

Is the inspection result normal?

- YES >> GO TO 14.
- NO >> Replace aroma motor. Refer to [HAC-188, "AROMA UNIT : Removal and Installation"](#).

14. CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace A/C auto amp. Refer to [HAC-175, "Removal and Installation"](#).
- NO >> Repair or replace malfunction parts.

Component Inspection (Motor)

INFOID:000000010099490

1. CHECK AROMA MOTOR

1. Turn ignition switch OFF.
2. Disconnect aroma motor connector.
3. Supply aroma motor terminals with battery voltage and check by visually and operation sound that aroma motor operates.

Terminals		Operation direction
+	-	
5	6	Fragrant wood
6	5	Leaf scent

Is the inspection result normal?

- YES >> INSPECTION END

B2768, B2769, B276A AROMA MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

NO >> Replace aroma motor. Refer to [HAC-188. "AROMA UNIT : Removal and Installation"](#).

Component Inspection (PBR)

INFOID:000000010099491

1. CHECK AROMA MOTOR PBR

Check resistance between aroma motor terminals.

Terminals		Resistance (Ω)
1	2	Other than 0 or ∞
	3	

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace aroma motor. Refer to [HAC-188. "AROMA UNIT : Removal and Installation"](#).

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

B276B, B276C, B276D HUMIDITY SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

B276B, B276C, B276D HUMIDITY SENSOR

DTC Logic

INFOID:000000010099492

DTC DETECTION LOGIC

NOTE:

- If DTC is displayed along with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [HAC-81, "DTC Logic"](#).
- If DTC is displayed along with DTC U1010, first perform the trouble diagnosis for DTC U1010. [HAC-82, "DTC Logic"](#).

DTC	Items (CONSULT screen terms)	DTC detection condition		Possible cause
B276B	HUMIDITY SENSOR	(A)	The humidity sensor (glass temperature sensor) recognition temperature is too high.	<ul style="list-style-type: none"> • Humidity sensor • A/C auto amp. • Harness or connectors (The sensor circuit is open or shorted.)
B276C			The humidity sensor (glass temperature sensor) recognition temperature is too low.	
B276D		(B)	Communication malfunction of humidity sensor	

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

Ⓜ With CONSULT

1. Turn ignition switch ON.
2. Select "Self Diagnostic Result" mode of "HVAC" using CONSULT.
3. Check DTC.

Is DTC detected?

- YES >> Refer to [HAC-140, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000010099493

1. INSPECTION START

Confirm detected malfunction (A or B). Refer to [HAC-140, "DTC Logic"](#).

Which malfunction is detected?

- A >> GO TO 2.
 B >> GO TO 8.

2. CHECK HUMIDITY SENSOR (GLASS TEMPERATURE SENSOR) POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect humidity sensor connector.
3. Turn ignition switch ON.
4. Check voltage between humidity sensor harness connector and ground.

+		-	Voltage (Approx.)
Humidity sensor			
Connector	Terminal		
R6	5	Ground	5 V

Is the inspection result normal?

- YES >> GO TO 6.
 NO >> GO TO 3.

3. CHECK HUMIDITY SENSOR (GLASS TEMPERATURE SENSOR) POWER SUPPLY CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.
3. Check continuity between humidity sensor harness connector and A/C auto amp. harness connector.

B276B, B276C, B276D HUMIDITY SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

Humidity sensor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
R6	5	M67	33	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair harness or connector.

4.CHECK HUMIDITY SENSOR (GLASS TEMPERATURE SENSOR) POWER SUPPLY CIRCUIT FOR GROUND SHORT

Check continuity between humidity sensor harness connector and ground.

Humidity sensor		—	Continuity
Connector	Terminal		
R6	5	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair harness or connector.

5.CHECK HUMIDITY SENSOR (GLASS TEMPERATURE SENSOR) POWER SUPPLY CIRCUIT FOR BATTERY SHORT

1. Turn ignition switch ON.
2. Check voltage between humidity sensor harness connector and ground.

+		-	Voltage (Approx.)
Humidity sensor			
Connector	Terminal		
R6	5	Ground	0 V

Is the inspection result normal?

YES >> GO TO 15.

NO >> Repair harness or connector.

6.CHECK HUMIDITY SENSOR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.
3. Check continuity between humidity sensor harness connector and A/C auto amp. harness connector.

Humidity sensor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
R6	6	M67	44	Existed

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair harness or connector.

7.CHECK HUMIDITY SENSOR (GLASS TEMPERATURE SENSOR)

Check humidity sensor. Refer to [HAC-143, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 15.

NO >> Replace humidity sensor. Refer to [HAC-179, "Removal and Installation"](#).

8.CHECK HUMIDITY SENSOR POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect humidity sensor connector.

B276B, B276C, B276D HUMIDITY SENSOR

[AUTOMATIC AIR CONDITIONING]

< DTC/CIRCUIT DIAGNOSIS >

3. Turn ignition switch ON.
4. Check voltage between humidity sensor harness connector and ground.

+		-	Voltage (Approx.)
Humidity sensor			
Connector	Terminal		
R6	3	Ground	5 V

Is the inspection result normal?

- YES >> GO TO 12.
NO >> GO TO 9.

9. CHECK HUMIDITY SENSOR POWER SUPPLY CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.
3. Check continuity between humidity sensor harness connector and A/C auto amp. harness connector.

Humidity sensor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
R6	3	M67	39	Existed

Is the inspection result normal?

- YES >> GO TO 10.
NO >> Repair harness or connector.

10. CHECK HUMIDITY SENSOR POWER SUPPLY CIRCUIT FOR GROUND SHORT

Check continuity between humidity sensor harness connector and ground.

Humidity sensor		—	Continuity
Connector	Terminal		
R6	3	Ground	Not existed

Is the inspection result normal?

- YES >> GO TO 11.
NO >> Repair harness or connector.

11. CHECK HUMIDITY SENSOR POWER SUPPLY CIRCUIT FOR BATTERY SHORT

1. Turn ignition switch ON.
2. Check voltage between humidity sensor harness connector and ground.

+		-	Voltage (Approx.)
Humidity sensor			
Connector	Terminal		
R6	3	Ground	0 V

Is the inspection result normal?

- YES >> GO TO 15.
NO >> Repair harness or connector.

12. CHECK HUMIDITY SENSOR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.
3. Check continuity between humidity sensor harness connector and A/C auto amp. harness connector.

B276B, B276C, B276D HUMIDITY SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

Humidity sensor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
R6	1	M66	22	Existed

Is the inspection result normal?

YES >> GO TO 13.

NO >> Repair harness or connector.

13.CHECK HUMIDITY SENSOR COMMUNICATION SIGNAL CIRCUIT FOR OPEN

Check continuity between humidity sensor harness connector and A/C auto amp. harness connector.

Humidity sensor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
R6	2	M66	20	Existed
	4		21	

Is the inspection result normal?

YES >> GO TO 14.

NO >> Repair harness or connector.

14.REPLACE HUMIDITY SENSOR

Replace humidity sensor. Refer to [HAC-179, "Removal and Installation"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 15.

15.CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Replace A/C auto amp. Refer to [HAC-175, "Removal and Installation"](#).

NO >> Repair or replace malfunctioning parts.

Component Inspection

INFOID:0000000010099494

1.CHECK HUMIDITY SENSOR (GLASS TEMPERATURE SENSOR)

1. Turn ignition switch OFF.
2. Disconnect humidity sensor connector.
3. Check resistance between humidity sensor terminals. Refer to applicable table for normal value.

B276B, B276C, B276D HUMIDITY SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

Terminal		Condition	Resistance: kΩ
		Temperature: °C (°F)	
5	6	-15	59.61
		-10	46.29
		-5	36.29
		0	28.70
		5	22.20
		10	18.41
		15	14.92
		20	12.17
		25	10.00
		30	8.27
		35	6.88
		40	5.76
		45	4.85

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace humidity sensor. Refer to [HAC-179. "Removal and Installation"](#).

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

POWER SUPPLY AND GROUND CIRCUIT

A/C AUTO AMP.

A/C AUTO AMP. : Diagnosis Procedure

INFOID:000000010099495

1. CHECK FUSE

Check 10 A fuses [Nos. 3, 6 and 19, located in the fuse block (J/B)]

NOTE:

Refer to [PG-100. "Fuse, Connector and Terminal Arrangement"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the blown fuse after replacing the applicable circuit.

2. CHECK A/C AUTO AMP. POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect the A/C auto amp. connector.
3. Check voltage between A/C auto amp. harness connector and ground.

+		-	Voltage		
A/C auto amp.			Ignition switch position		
Connector	Terminal		OFF	ACC	ON
M66	1	Ground	Battery voltage	Battery voltage	Battery voltage
	2		Approx. 0 V	Approx. 0 V	Battery voltage
	13		Approx. 0 V	Battery voltage	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3. CHECK A/C AUTO AMP. GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between A/C auto amp. harness connector and ground.

A/C auto amp.		-	Continuity
Connector	Terminal		
M66	10	Ground	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair harness or connector.

DOOR MOTOR PBR (WITH FOREST AIR)

DOOR MOTOR PBR (WITH FOREST AIR) : Diagnosis Procedure

INFOID:000000010099496

NOTE:

Check this circuit when all DTCs of motor system (B2750 – B276A) are detected.

1. CHECK EACH DOOR MOTOR PBR POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect mode door motor LH connector.
3. Turn ignition switch ON.
4. Check voltage between mode door motor LH harness connector and ground.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

+		-	Voltage (Approx.)
Mode door motor LH			
Connector	Terminal		
M316	4	Ground	5 V

Is the inspection result normal?

- YES >> GO TO 5.
NO >> GO TO 2.

2. CHECK EACH DOOR MOTOR PBR POWER SUPPLY CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.
3. Check continuity between mode door motor LH harness connector and A/C auto amp. harness connector.

Mode door motor LH		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M316	4	M304	71	Existed

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair harness or connector.

3. CHECK EACH DOOR MOTOR PBR POWER SUPPLY CIRCUIT FOR GROUND SHORT

1. Disconnect following connectors:
 - Air mix door motor LH
 - Air mix door motor RH
 - Aroma motor
 - Intake door motor
 - Mode door motor RH
 - Rear mode door motor
 - Upper ventilator door motor
2. Check mode door motor LH harness connector and ground.

Mode door motor LH		—	Continuity
Connector	Terminal		
M316	4	Ground	Not existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair harness or connector.

4. CHECK EACH DOOR MOTOR PBR POWER SUPPLY CIRCUIT FOR BATTERY SHORT

1. Turn ignition switch ON.
2. Check voltage between mode door motor LH harness connector and ground.

+		-	Voltage (Approx.)
Mode door motor LH			
Connector	Terminal		
M316	4	Ground	0 V

Is the inspection result normal?

- YES >> GO TO 7.
NO >> Repair harness or connector.

5. CHECK MODE DOOR MOTOR (DRIVER SIDE) PBR GROUND CIRCUIT

1. Turn ignition switch OFF.

POWER SUPPLY AND GROUND CIRCUIT

[AUTOMATIC AIR CONDITIONING]

< DTC/CIRCUIT DIAGNOSIS >

2. Disconnect A/C auto amp. connector.
3. Check continuity between mode door motor LH harness connector and A/C auto amp. harness connector.

Mode door motor LH		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M316	5	M304	79	Existed

Is the inspection result normal?

- YES >> GO TO 6.
NO >> Repair harness or connector.

6. CHECK COMPONENT PARTS

Check following parts:

- Air mix door motor (driver side): Refer to [HAC-103, "Component Inspection \(PBR\)"](#).
- Air mix door motor (passenger side): Refer to [HAC-108, "Component Inspection \(PBR\)"](#).
- Aroma motor: Refer to [HAC-139, "Component Inspection \(PBR\)"](#).
- Intake door motor: Refer to [HAC-123, "Component Inspection \(PBR\)"](#).
- Mode door motor (driver side): Refer to [HAC-113, "Component Inspection \(PBR\)"](#).
- Mode door motor (passenger side): Refer to [HAC-118, "Component Inspection \(PBR\)"](#).
- Rear mode door motor: Refer to [HAC-134, "Component Inspection \(PBR\)"](#).
- Upper ventilator door motor: Refer to [HAC-129, "Component Inspection \(PBR\)"](#).

Is the inspection result normal?

- YES >> GO TO 7.
NO >> Replace malfunctioning parts.

7. CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace A/C auto amp. Refer to [HAC-175, "Removal and Installation"](#).
NO >> Repair or replace malfunctioning parts.

DOOR MOTOR PBR (WITHOUT FOREST AIR)

DOOR MOTOR PBR (WITHOUT FOREST AIR) : Diagnosis Procedure

INFOID:000000010099497

NOTE:

Check this circuit when all DTCs of motor system (B2750 – B2764) are detected.

1. CHECK EACH DOOR MOTOR PBR POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect mode door motor LH connector.
3. Turn ignition switch ON.
4. Check voltage between mode door motor LH harness connector and ground.

+		-	Voltage (Approx.)
Mode door motor LH			
Connector	Terminal		
M317	5	Ground	5 V

Is the inspection result normal?

- YES >> GO TO 5.
NO >> GO TO 2.

2. CHECK EACH DOOR MOTOR PBR POWER SUPPLY CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.
3. Check continuity between mode door motor LH harness connector and A/C auto amp. harness connector.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

Mode door motor LH		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M317	5	M304	71	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3.CHECK EACH DOOR MOTOR PBR POWER SUPPLY CIRCUIT FOR GROUND SHORT

1. Disconnect following connectors:
 - Air mix door motor LH
 - Air mix door motor RH
 - Intake door motor
 - Mode door motor RH
 - Rear mode door motor
 - Upper ventilator door motor
2. Check mode door motor LH harness connector and ground.

Mode door motor LH		—	Continuity
Connector	Terminal		
M317	5	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair harness or connector.

4.CHECK EACH DOOR MOTOR PBR POWER SUPPLY CIRCUIT FOR BATTERY SHORT

1. Turn ignition switch ON.
2. Check voltage between mode door motor LH harness connector and ground.

+		-	Voltage (Approx.)
Mode door motor LH			
Connector	Terminal		
M317	5	Ground	0 V

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair harness or connector.

5.CHECK MODE DOOR MOTOR (DRIVER SIDE) PBR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.
3. Check continuity between mode door motor LH harness connector and A/C auto amp. harness connector.

Mode door motor LH		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M317	7	M304	79	Existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair harness or connector.

6.CHECK COMPONENT PARTS

Check following parts:

- Air mix door motor (driver side): Refer to [HAC-103, "Component Inspection \(PBR\)"](#).
- Air mix door motor (passenger side): Refer to [HAC-108, "Component Inspection \(PBR\)"](#).
- Intake door motor: Refer to [HAC-123, "Component Inspection \(PBR\)"](#).

POWER SUPPLY AND GROUND CIRCUIT

[AUTOMATIC AIR CONDITIONING]

< DTC/CIRCUIT DIAGNOSIS >

- Mode door motor (driver side): Refer to [HAC-113. "Component Inspection \(PBR\)".](#)
- Mode door motor (passenger side): Refer to [HAC-118. "Component Inspection \(PBR\)".](#)
- Rear mode door motor: Refer to [HAC-134. "Component Inspection \(PBR\)".](#)
- Upper ventilator door motor: Refer to [HAC-129. "Component Inspection \(PBR\)".](#)

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace malfunctioning parts.

7. CHECK INTERMITTENT INCIDENT

Refer to [GI-47. "Intermittent Incident".](#)

Is the inspection result normal?

YES >> Replace A/C auto amp. Refer to [HAC-175. "Removal and Installation".](#)

NO >> Repair or replace malfunctioning parts.

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

BLOWER MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

BLOWER MOTOR

Diagnosis Procedure

INFOID:000000010099498

1. CHECK BLOWER MOTOR POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect blower motor connector.
3. Turn ignition switch ON.
4. Check voltage between blower motor harness connector and ground.

+		-	Voltage
Blower motor			
Connector	Terminal		
M109	1	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 7.
NO >> GO TO 2.

2. CHECK FUSE

1. Turn ignition switch OFF.
2. Check 15 A fuses [Nos. 20 and 21, located in fuse block (J/B)].
NOTE:
Refer to [PG-100, "Fuse, Connector and Terminal Arrangement"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NG >> Replace the fuse after repairing the applicable circuit.

3. CHECK BLOWER MOTOR POWER SUPPLY CIRCUIT FOR OPEN

1. Disconnect fuse block (J/B) connector.
2. Check continuity between blower motor harness connector and fuse block (J/B) harness connector.

Blower motor		Fuse block (J/B)		Continuity
Connector	Terminal	Connector	Terminal	
M109	1	M1	3A	Existed
			8A	

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair harness or connector.

4. CHECK BLOWER MOTOR POWER SUPPLY CIRCUIT FOR SHORT

Check continuity between blower motor harness connector and ground.

Blower motor		—	Continuity
Connector	Terminal		
M109	1	Ground	Not existed

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Repair harness or connector.

5. CHECK BLOWER RELAY GROUND CIRCUIT

1. Disconnect fuse block (J/B) connector.
2. Check continuity between fuse block (J/B) harness connector and ground.

BLOWER MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

Fuse block (J/B)		—	Continuity
Connector	Terminal		
M3	7C	Ground	Existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair harness or connector.

6.CHECK BLOWER RELAY

Check blower relay. Refer to [HAC-154, "Component Inspection \(Blower Relay\)"](#).

Is the inspection result normal?

YES >> Check ignition power supply circuit. Refer to [PG-57, "Wiring Diagram - IGNITION POWER SUPPLY -"](#).

NO >> Replace blower relay.

7.CHECK POWER TRANSISTOR POWER SUPPLY

1. Turn ignition switch OFF.
2. Connect blower motor connector.
3. Disconnect power transistor connector.
4. Turn ignition switch ON.
5. Check voltage between power transistor harness connector and ground.

+		-	Voltage
Power transistor			
Connector	Terminal		
M112	3	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 11.

NO >> GO TO 8.

8.CHECK POWER TRANSISTOR POWER SUPPLY CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect blower motor connector.
3. Check continuity between power transistor harness connector and blower motor harness connector.

Power transistor		Blower motor		Continuity
Connector	Terminal	Connector	Terminal	
M112	3	M109	2	Existed

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair harness or connector.

9.CHECK POWER TRANSISTOR POWER SUPPLY CIRCUIT FOR SHORT

Check continuity between power transistor harness connector and ground.

Power transistor		—	Continuity
Connector	Terminal		
M112	3	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair harness or connector.

10.REPLACE BLOWER MOTOR

BLOWER MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

Replace blower motor. Refer to [VTL-18. "BLOWER MOTOR : Removal and Installation"](#).

Is the inspection result normal?

- YES >> INSPECTION END
- NO >> GO TO 19.

11. CHECK POWER TRANSISTOR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between power transistor harness connector and ground.

Power transistor		—	Continuity
Connector	Terminal		
M112	4	Ground	Existed

Is the inspection result normal?

- YES >> GO TO 12.
- NO >> Repair harness or connector.

12. CHECK POWER TRANSISTOR CONTROL SIGNAL

1. Connect power transistor connector.
2. Turn ignition switch ON.
3. Operate mode switch to set VENT position.
4. Change fan speed from 1 to 7, and check voltage between power transistor harness connector and ground.

+		—	Condition	Voltage (Approx.)
Power transistor			Fan speed (manual) VENT mode	
Connector	Terminal			
M112	2	Ground	OFF	0 V
			1st	3.5 V
			2nd	5.2 V
			3rd	6.5 V
			4th	7.8 V
			5th	9.2 V
			6th	10.5 V
			7th	12.5 V

Is the inspection result normal?

- YES >> GO TO 15.
- NO >> GO TO 13.

13. CHECK POWER TRANSISTOR CONTROL SIGNAL CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect power transistor connector.
3. Connect A/C auto amp. connector.
4. Check continuity between power transistor harness connector and A/C auto amp. harness connector.

Power transistor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
M112	2	M66	7	Existed

Is the inspection result normal?

- YES >> GO TO 14.
- NO >> Repair harness or connector.

14. CHECK POWER TRANSISTOR CONTROL SIGNAL CIRCUIT FOR SHORT

BLOWER MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

Check continuity between power transistor harness connector and ground.

Power transistor		—	Continuity
Connector	Terminal		
M112	2	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 18.

NO >> Repair harness or connector.

15.CHECK BLOWER MOTOR FEEDBACK SIGNAL

Change fan speed from 1 to 7, and check voltage between power transistor harness connector and ground.

+		-	Condition	Voltage (Approx.)
A/C auto amp.			Fan speed (manual) VENT mode	
Connector	Terminal	Ground	OFF	Battery voltage
M66	6		1st	10.0 V
			2nd	8.3 V
			3rd	7.0 V
			4th	5.7 V
			5th	4.3 V
			6th	3.0 V
			7th	1.0 V

Is the inspection result normal?

YES >> GO TO 18.

NO >> GO TO 16.

16.CHECK BLOWER MOTOR FEEDBACK SIGNAL CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect power transistor connector.
3. Disconnect A/C auto amp. connector.
4. Check continuity between A/C auto amp. harness connector and power transistor harness connector.

A/C auto amp.		Power transistor		Continuity
Connector	Terminal	Connector	Terminal	
M66	6	M112	1	Existed

Is the inspection result normal?

YES >> GO TO 17.

NO >> Repair harness or connector.

17.CHECK BLOWER MOTOR FEEDBACK SIGNAL CIRCUIT FOR SHORT

Check continuity between A/C auto amp. harness connector and ground.

A/C auto amp.		—	Continuity
Connector	Terminal		
M66	6	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 18.

NO >> Repair harness or connector.

18.REPLACE POWER TRANSISTOR

A

B

C

D

E

F

G

H

HAC

J

K

L

M

N

O

P

BLOWER MOTOR

[AUTOMATIC AIR CONDITIONING]

< DTC/CIRCUIT DIAGNOSIS >

Replace power transistor. Refer to [HAC-186. "Removal and Installation"](#).

Is the inspection result normal?

- YES >> INSPECTION END
- NO >> GO TO 19.

19.CHECK INTERMITTENT INCIDENT

Refer to [GI-47. "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace A/C auto amp. Refer to [HAC-175. "Removal and Installation"](#).
- NO >> Repair or replace malfunctioning parts.

Component Inspection (Blower Motor)

INFOID:000000010099499

1.CHECK BLOWER MOTOR-I

1. Remove blower motor. Refer to [VTL-18. "BLOWER MOTOR : Removal and Installation"](#).
2. Check that there is not any mixing foreign materials in blower motor.

Is the inspection result normal?

- YES >> GO TO 2.
- NO >> Remove foreign materials.

2.CHECK BLOWER MOTOR-II

Check that there is not breakage or damage in blower motor.

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Replace blower motor. Refer to [VTL-18. "BLOWER MOTOR : Removal and Installation"](#).

3.CHECK BLOWER MOTOR-III

Check that blower motor turns smoothly.

Is the inspection result normal?

- YES >> INSPECTION END
- NO >> Replace blower motor. Refer to [VTL-18. "BLOWER MOTOR : Removal and Installation"](#).

Component Inspection (Blower Relay)

INFOID:000000010099500


1.CHECK BLOWER RELAY

1. Remove blower relay.
2. Check continuity between blower relay terminals 3 and 5 when the voltage is supplied between terminals 1 and 2.

Terminals		Voltage	Continuity
3	5	ON	Existed
		OFF	Not existed

Is the inspection result normal?

- YES >> INSPECTION END
- NO >> Replace blower relay.

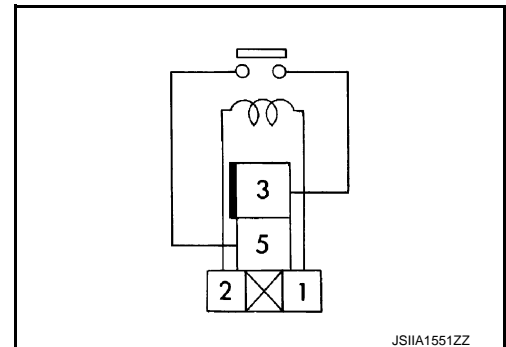

ECV (ELECTRICAL CONTROL VALVE)

[AUTOMATIC AIR CONDITIONING]

< DTC/CIRCUIT DIAGNOSIS >

ECV (ELECTRICAL CONTROL VALVE)

Diagnosis Procedure

INFOID:000000010099501

1. CHECK ECV (ELECTRICAL CONTROL VALVE) POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect compressor connector.
3. Turn ignition switch ON.
4. Check voltage between compressor harness connector and ground.

+		-	Voltage
Compressor			
Connector	Terminal		
F43	3	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 5.
NO >> GO TO 2.

2. CHECK FUSE

1. Turn ignition switch OFF.
2. Check 10 A fuse [No. 3, located in fuse block (J/B)].

NOTE:

Refer to [PG-100, "Fuse, Connector and Terminal Arrangement"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Replace the fuse after repairing the applicable circuit.

3. CHECK ECV POWER SUPPLY CIRCUIT FOR OPEN

1. Disconnect fuse block (J/B) connector.
2. Check continuity between compressor harness connector and fuse block (J/B) harness connector.

Compressor		Fuse block (J/B)		Continuity
Connector	Terminal	Connector	Terminal	
F43	3	M1	2A	Existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair harness or connector.

4. CHECK ECV POWER SUPPLY CIRCUIT FOR SHORT

1. Disconnect A/C auto amp. connector, ionizer connector (with Forest Air) and inside odor detecting sensor connector (with Forest Air).
2. Check continuity between compressor harness connector and ground.

Compressor		—	Continuity
Connector	Terminal		
F43	3	Ground	Not existed

Is the inspection result normal?

- YES >> Check ignition power supply circuit. Refer to [PG-57, "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
- NO >> Repair harness or connector.

5. CHECK ECV CONTROL SIGNAL CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

ECV (ELECTRICAL CONTROL VALVE)

[AUTOMATIC AIR CONDITIONING]

< DTC/CIRCUIT DIAGNOSIS >

3. Check continuity between compressor harness connector and A/C auto amp. harness connector.

Compressor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
F43	2	M66	17	Existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair harness or connector.

6. CHECK ECV CONTROL SIGNAL CIRCUIT FOR SHORT

Check continuity between compressor harness connector and ground.

Compressor		—	Continuity
Connector	Terminal		
F43	2	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair harness or connector.

7. CHECK ECV

Check ECV. Refer to [HAC-156, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace compressor. Refer to [HA-32, "COMPRESSOR : Removal and Installation"](#).

8. CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Replace A/C auto amp. Refer to [HAC-175, "Removal and Installation"](#).

NO >> Repair or replace malfunctioning parts.

Component Inspection

INFOID:0000000010099502

1. CHECK ECV (ELECTRICAL CONTROL VALVE)

1. Turn ignition switch OFF.
2. Disconnect compressor connector.
3. Check continuity between compressor connector terminals.

Terminals		Condition	Resistance (kΩ)
		Temperature: °C (°F)	
2	3	20 (68)	10.1 – 11.1

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace compressor. Refer to [HA-32, "COMPRESSOR : Removal and Installation"](#).

INSIDE ODOR DETECTING SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

INSIDE ODOR DETECTING SENSOR

Component Function Check

INFOID:0000000010099503

1. CHECK INSIDE ODOR DETECTING SENSOR FUNCTION

1. Operate fan switch. Set fan speed to 7th speed.
2. Check that voltage between A/C auto amp. vehicle side harness connector and body ground changes when cigarette smoke or similar substance is applied to air inlet.

+		-	Voltage (Approx.)
A/C auto amp.			
Connector	Terminal		
M67	36	Ground	0 – 4.8 V Output voltage differs depending on measurement environment of the vehicle.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Refer to [HAC-157. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000010099504

1. CHECK INSIDE ODOR DETECTING SENSOR IGNITION POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect inside odor detecting sensor connector.
3. Turn ignition switch ON.
4. Check voltage between inside odor detecting sensor harness connector and ground.

+		-	Voltage
Inside odor detecting sensor			
Connector	Terminal		
M73	4	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 2.

2. CHECK FUSE

1. Turn ignition switch OFF.
2. 10 A fuse [No. 3, located in fuse block (J/B)].

NOTE:

Refer to [PG-100. "Fuse, Connector and Terminal Arrangement"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the fuse after replacing the applicable circuit.

3. CHECK INSIDE ODOR DETECTING SENSOR IGNITION POWER SUPPLY CIRCUIT FOR OPEN

1. Disconnect fuse block (J/B) connector.
2. Check continuity between inside odor detecting sensor harness connector and fuse block (J/B) harness connector.

Inside odor detecting sensor		Fuse block (J/B)		Continuity
Connector	Terminal	Connector	Terminal	
M73	4	M1	2A	Existed

Is the inspection result normal?

INSIDE ODOR DETECTING SENSOR

[AUTOMATIC AIR CONDITIONING]

< DTC/CIRCUIT DIAGNOSIS >

- YES >> GO TO 4.
NO >> Repair harness or connector.

4. CHECK INSIDE ODOR DETECTING SENSOR IGNITION POWER SUPPLY CIRCUIT FOR SHORT

1. Disconnect compressor connector, A/C auto amp. connector and ionizer connector.
2. Check continuity between inside odor detecting sensor harness connector and ground.

Inside odor detecting sensor		—	Continuity
Connector	Terminal		
M73	4	Ground	Not existed

Is the inspection result normal?

YES >> Check ignition power supply circuit. Refer to [PG-57, "Wiring Diagram - IGNITION POWER SUPPLY -"](#).

NO >> Repair harness or connector.

5. CHECK INSIDE ODOR DETECTING SENSOR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between inside odor detecting sensor harness connector and ground.

Inside odor detecting sensor		—	Continuity
Connector	Terminal		
M73	3	Ground	Existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair harness or connector.

6. CHECK INSIDE ODOR DETECTING SENSOR POWER SUPPLY

1. Turn ignition switch ON.
2. Check voltage between inside odor detecting sensor harness connector and ground.

+		-	Voltage (Approx.)
Inside odor detecting sensor			
Connector	Terminal		
E73	1	Ground	5 V

Is the inspection result normal?

YES >> GO TO 10.

NO >> GO TO 7.

7. CHECK INSIDE ODOR DETECTING SENSOR POWER SUPPLY CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.
3. Check continuity between inside odor detecting sensor harness connector and A/C auto amp. harness connector.

Inside odor detecting sensor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
E73	1	M67	36	Existed

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair harness or connector.

8. CHECK INSIDE ODOR DETECTING SENSOR POWER SUPPLY CIRCUIT FOR GROUND SHORT

Check continuity between inside odor detecting sensor harness connector and ground.

INSIDE ODOR DETECTING SENSOR

[AUTOMATIC AIR CONDITIONING]

< DTC/CIRCUIT DIAGNOSIS >

Inside odor detecting sensor		—	Continuity
Connector	Terminal		
E73	1	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair harness or connector.

9. CHECK INSIDE ODOR DETECTING SENSOR POWER SUPPLY CIRCUIT FOR BATTERY SHORT

1. Turn ignition switch ON.
2. Check voltage between inside odor detecting sensor harness connector and ground.

+		-	Voltage (Approx.)
Connector	Terminal		
E73	1	Ground	0 V

Is the inspection result normal?

YES >> GO TO 12.

NO >> Repair harness or connector.

10. CHECK INSIDE ODOR DETECTING SENSOR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect A/C auto amp. connector.
3. Check continuity between inside odor detecting sensor harness connector and A/C auto amp. harness connector.

Inside odor detecting sensor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	
E73	2	M67	44	Existed

Is the inspection result normal?

YES >> GO TO 11.

NO >> Repair harness or connector.

11. CHECK INSIDE ODOR DETECTING SENSOR

Check inside odor detecting sensor. Refer to [HAC-159. "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 12.

NO >> Replace inside odor detecting sensor. Refer to [HAC-181. "Removal and Installation"](#).

12. CHECK INTERMITTENT INCIDENT

Refer to [GI-47. "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Replace A/C auto amp. Refer to [HAC-175. "Removal and Installation"](#).

NO >> Repair or replace malfunctioning parts.

Component Inspection

INFOID:0000000010099505

1. CHECK INSIDE ODOR DETECTING SENSOR-I

1. Turn ignition switch OFF.
2. Disconnect inside odor detecting sensor connector.
3. Apply voltage between inside odor detecting sensor terminals 4 and 3, and wait for 3 minutes.
4. Check resistance between inside odor detecting sensor terminals while applying voltage.

INSIDE ODOR DETECTING SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

Terminal		Condition	Resistance (kΩ)
1	2	Air is clean	2 – 670

NOTE:

Resistance value differs depending on measurement environment of the vehicle.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the inside odor detecting sensor. Refer to [HAC-181, "Removal and Installation"](#).

2.CHECK INSIDE ODOR DETECTING SENSOR-II

Blow sensor portion of inside odor detecting sensor. Check that resistance value between inside odor detecting sensor terminals decreases.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace the inside odor detecting sensor. Refer to [HAC-181, "Removal and Installation"](#).

IONIZER

Component Function Check

INFOID:0000000110099506

1.CHECK IONIZER OPERATION SOUND

1. Turn ignition switch ON.
2. Check ionizer operation sound (whirring sound) in duct by putting an ear to the side ventilator grille (driver side) outlet while pressing fan switch and OFF switch alternately.

Is the inspection result normal?

- YES >> INSPECTION END
 NO >> Refer to [HAC-161, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000110099507

1.CHECK IONIZER POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect ionizer connector.
3. Turn ignition switch ON.
4. Check voltage between ionizer harness connector and ground.

+		-	Voltage
Ionizer			
Connector	Terminal		
M98	1	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 5.
 NO >> GO TO 2.

2.CHECK FUSE

1. Turn ignition switch OFF.
2. Check 10 A fuse [No. 3, located in fuse block (J/B)].
NOTE:
 Refer to [PG-100, "Fuse, Connector and Terminal Arrangement"](#).

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> Replace the fuse after repairing the applicable circuit.

3.CHECK IONIZER POWER SUPPLY CIRCUIT FOR OPEN

1. Disconnect fuse block (J/B) connector.
2. Check continuity between ionizer harness connector and fuse block (J/B) harness connector.

Ionizer		Fuse block (J/B)		Continuity
Connector	Terminal	Connector	Terminal	
M98	1	M1	2A	Existed

Is the inspection result normal?

- YES >> GO TO 4.
 NO >> Repair harness or connector.

4.CHECK IONIZER POWER SUPPLY CIRCUIT FOR SHORT

1. Disconnect A/C auto amp. connector, compressor connector and inside odor detecting sensor connector.
2. Check continuity between ionizer harness connector and ground.

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

IONIZER

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

Ionizer		—	Continuity
Connector	Terminal		
M98	1	Ground	Not existed

Is the inspection result normal?

YES >> Check ignition power supply circuit. Refer to [PG-57. "Wiring Diagram - IGNITION POWER SUPPLY -"](#).

NO >> Repair harness or connector.

5.CHECK IONIZER GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between ionizer harness connector and ground.

Ionizer		—	Continuity
Connector	Terminal		
M98	3	Ground	Existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair harness or connector.

6.CHECK IONIZER (ON/OFF) CONTROL SIGNAL

1. Connect ionizer connector.
2. Disconnect A/C auto amp. connector.
3. Turn ignition switch ON.
4. Check voltage between A/C auto amp. harness connector and ground.

+		-	Voltage
A/C auto amp.			
Connector	Terminal	Ground	Battery voltage
M67	42		

Is the inspection result normal?

YES >> GO TO 10.

NO >> GO TO 7.

7.CHECK IONIZER (ON/OFF) CONTROL SIGNAL CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect ionizer connector.
3. Check continuity between A/C auto amp. harness connector and ionizer harness connector.

A/C auto amp.		Ionizer		Continuity
Connector	Terminal	Connector	Terminal	
M67	42	M98	4	Existed

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair harness or connector.

8.CHECK IONIZER (ON/OFF) CONTROL SIGNAL CIRCUIT FOR SHORT

Check continuity between A/C auto amp. harness connector and ground.

A/C auto amp.		—	Continuity
Connector	Terminal		
M67	42	Ground	Not existed

IONIZER

[AUTOMATIC AIR CONDITIONING]

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair harness or connector.

9.REPLACE IONIZER

Replace ionizer. Refer to [HAC-187. "Removal and Installation"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 10.

10.CHECK INTERMITTENT INCIDENT

Refer to [GI-47. "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Replace A/C auto amp. Refer to [HAC-175. "Removal and Installation"](#).

NO >> Repair or replace malfunctioning parts.

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

MAGNET CLUTCH

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

MAGNET CLUTCH

Component Function Check

INFOID:000000010099508

1.CHECK MAGNET CLUTCH OPERATION

Perform auto active test of IPDM E/R. Refer to [PCS-11, "Diagnosis Description"](#).

Does it operate normally?

YES >> INSPECTION END

NO >> Refer to [HAC-164, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000010099509

1.CHECK MAGNET CLUTCH

1. Turn ignition switch OFF.
2. Disconnect compressor connector.
3. Directly apply the battery voltage to the magnet clutch. Check for operation visually and by sound.

Does it operate normally?

YES >> GO TO 2.

NO >> Replace magnet clutch. Refer to [HA-33, "MAGNET CLUTCH : Removal and Installation of Compressor Clutch"](#).

2.CHECK MAGNET CLUTCH POWER SUPPLY CIRCUIT FOR OPEN

1. Disconnect IPDM E/R connector.
2. Check continuity between compressor harness connector and IPDM E/R harness connector.

Compressor		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
F44	1	E5	8	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness and connector.

3.CHECK MAGNET CLUTCH POWER SUPPLY CIRCUIT FOR SHORT

Check continuity between compressor harness connector and ground

Compressor		Ground	Continuity
Connector	Terminal		
F44	1		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair harness and connector.

4.CHECK FUSE

Check 10 A fuse (No. 49, located in IPDM E/R).

NOTE:

Refer to [PG-102, "Fuse, Connector and Terminal Arrangement"](#).

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-35, "Removal and Installation"](#).

NO >> Replace the fuse after repairing the applicable circuit.

AUTOMATIC AIR CONDITIONING SYSTEM

< SYMPTOM DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

SYMPTOM DIAGNOSIS

AUTOMATIC AIR CONDITIONING SYSTEM

Symptom Table

INFOID:0000000010099510

NOTE:

Perform the self-diagnoses with CONSULT before performing the symptom diagnosis. If DTC is detected, perform the corresponding diagnosis.

Symptom		Corresponding malfunction part	Reference
<ul style="list-style-type: none"> • Air conditioning system does not activate. • Air conditioning system cannot be controlled (Multifunction switch). • Operation status of air conditioning system is not indicated on display. 	Fail-safe activates	Multi AV system	<ul style="list-style-type: none"> • AV-117, "Symptom Table" (Base audio without navigation) • AV-294, "Symptom Table" (BOSE audio with navigation)
	Fail-safe does not activate	<ul style="list-style-type: none"> • Ignition power supply and ground circuit of A/C auto amp. • A/C auto amp. 	HAC-145, "A/C AUTO AMP. : Diagnosis Procedure"
Discharge air temperature of driver side does not change.		Air mix door motor (driver side) system installation condition	Check air mix door motor (driver side) system is properly installed. Refer to HAC-183, "Exploded View" .
Discharge air temperature of passenger side does not change.		Air mix door motor (passenger side) system installation condition	Check air mix door motor (passenger side) system is properly installed. Refer to HAC-183, "Exploded View" .
Air outlet of driver side does not change (Except upper ventilation).		Mode door motor (driver side) system installation condition	Check mode door motor (driver side) system is properly installed. Refer to HAC-183, "Exploded View" .
Air outlet of passenger side does not change (Except upper ventilation).		Mode door motor (passenger side) system installation condition	Check mode door motor (passenger side) system is properly installed. Refer to HAC-183, "Exploded View" .
Air outlet of rear side does not change.		Rear mode door motor system installation condition	Check rear mode door motor system is properly installed. Refer to HAC-183, "Exploded View" .
Air outlet of upper ventilator does not change.		Upper ventilator door motor system installation condition	Check upper ventilator door motor system is properly installed. Refer to HAC-183, "Exploded View" .
Air inlet does not change.		Intake door motor system installation condition	Check intake door motor system is properly installed. Refer to HAC-183, "Exploded View" .
Blower motor operation is malfunctioning.		<ul style="list-style-type: none"> • Power supply system of blower motor • The circuit between blower motor and power transistor. • The circuit between power transistor and blower motor • Blower motor • Power transistor • A/C auto amp. 	HAC-150, "Diagnosis Procedure"
Compressor does not operate.		<ul style="list-style-type: none"> • The circuit between magnet clutch and IPDM E/R • Magnet clutch • IPDM E/R (A/C relay) • The circuit between ECM and refrigerant pressure sensor • Refrigerant pressure sensor • CAN communication circuit • A/C auto amp. 	HAC-168, "Diagnosis Procedure"

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

AUTOMATIC AIR CONDITIONING SYSTEM

< SYMPTOM DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

Symptom		Corresponding malfunction part	Reference
<ul style="list-style-type: none"> • Insufficient cooling. • No cool air comes out. (Air flow volume is normal.) 		<ul style="list-style-type: none"> • Magnet clutch control system • Drive belt slipping • Cooler cycle • ECV (electrical control valve) • Air leakage from each duct • Temperature setting trimmer 	HAC-170, "Diagnosis Procedure"
<ul style="list-style-type: none"> • Insufficient heating. • No warm air comes out. (Air flow volume is normal.) 		<ul style="list-style-type: none"> • Engine cooling system • Heater hose • Heater core • Air leakage from each duct • Temperature setting trimmer 	HAC-171, "Diagnosis Procedure"
Noise is heard when the A/C system operates.	During compressor operation	Cooler cycle	HA-28, "Symptom Table"
	During blower motor operation	<ul style="list-style-type: none"> • Mixing any foreign object in blower motor • Blower motor fan breakage • Blower motor rotation inferiority 	HAC-154, "Component Inspection (Blower Motor)"
<ul style="list-style-type: none"> • Memory function does not operate normally. • The setting is not maintained. (It returns to the initial condition) 		<ul style="list-style-type: none"> • Battery power supply and ground circuit of A/C auto amp. • A/C auto amp. 	HAC-145, "A/C AUTO AMP. : Diagnosis Procedure"
Intelligent Key interlock function does not operate.		<ul style="list-style-type: none"> • Door lock system • CAN communication circuit • A/C auto amp. 	HAC-172, "Diagnosis Procedure"

FOREST AIR SYSTEM

< SYMPTOM DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

FOREST AIR SYSTEM

Symptom Table

INFOID:000000010099511

NOTE:

- Perform the self-diagnoses with CONSULT before performing the symptom diagnosis. If DTC is detected, perform the corresponding diagnosis.
- The following table is based on the condition that automatic air conditioning system operates normally.

Symptom	Corresponding malfunction part	Reference
Forest Air system cannot be controlled.	Multi AV system	AV-294, "Symptom Table"
Plasmacluster™ control does not operate.	<ul style="list-style-type: none"> • Power supply system of ionizer • The circuit between ionizer and A/C auto amp. • Ionizer • A/C auto amp. 	HAC-187, "Removal and Installation"
Operation status of Plasmacluster™ control does not switch according to air flow.	A/C auto amp.	Replace A/C auto amp. Refer to HAC-175, "Removal and Installation" .
Breezy air control does not operate normally.	A/C auto amp.	Replace A/C auto amp. Refer to HAC-175, "Removal and Installation" .
Operation status of breezy air control is not indicated on display. (Breezy air control is normal)		
Automatic intake control (exhaust gas/outside odor detecting mechanism) does not operate normally.	<ul style="list-style-type: none"> • Power supply system of exhaust gas/outside odor detecting sensor • The circuit between exhaust gas/outside odor detecting sensor and A/C auto amp. • Exhaust gas/outside odor detecting sensor • A/C auto amp. 	HAC-92, "Diagnosis Procedure"
Ambient air status indicator in display does not change from clean status or dirty status. (Exhaust gas/outside odor detecting sensor system is normal)	A/C auto amp.	Replace A/C auto amp. Refer to HAC-175, "Removal and Installation" .
Air flow control (inside odor detecting mechanism) does not operate normally.	<ul style="list-style-type: none"> • Power supply system of inside odor detecting sensor • The circuit between inside odor detecting sensor and A/C auto amp. • Inside odor detecting sensor • A/C auto amp. 	HAC-157, "Diagnosis Procedure"
Interior air status indicator in display does not change from clean status or dirty status. (Inside odor detecting sensor system is normal)	A/C auto amp.	Replace A/C auto amp. Refer to HAC-175, "Removal and Installation" .
Automatic defogging control does not operate normally.	<ul style="list-style-type: none"> • The circuit between humidity sensor and A/C auto amp. • Humidity sensor • A/C auto amp. 	HAC-140, "Diagnosis Procedure"
Operation status of automatic defogging control is not indicated on display. (Humidity sensor system is normal)	A/C auto amp.	Replace A/C auto amp. Refer to HAC-175, "Removal and Installation" .
Aroma diffuser control does not operate normally. (Aroma motor does not operate normally)	<ul style="list-style-type: none"> • The circuit between aroma motor and A/C auto amp. • Aroma motor • A/C auto amp. 	HAC-135, "Diagnosis Procedure"
Aroma diffuser control does not operate normally. (Aroma motor is normal, but fragrance is not diffused.)	Aroma cartridge	Replace aroma cartridge. Refer to HAC-188, "AROMA CARTRIDGE : Removal and Installation" .
Operation status of aroma diffuser control is not indicated on display.	A/C auto amp.	Replace A/C auto amp. Refer to HAC-175, "Removal and Installation" .

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

COMPRESSOR DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

COMPRESSOR DOES NOT OPERATE

Description

INFOID:000000010099512

Symptom: Compressor does not operate.

Diagnosis Procedure

INFOID:000000010099513

NOTE:

- Perform self-diagnoses with CONSULT before performing symptom diagnosis. If DTC is detected, perform the corresponding diagnosis.
- Check that refrigerant is enclosed in cooler cycle normally. If refrigerant amount is shortage from proper amount, perform inspection of refrigerant leakage.

1. CHECK MAGNET CLUTCH OPERATION

Check magnet clutch. Refer to [HAC-164, "Component Function Check"](#).

Does it operate normally?

YES >> GO TO 2.

NO >> Repair or replace malfunctioning parts.

2. CHECK REFRIGERANT PRESSURE SENSOR

Check refrigerant pressure sensor. Refer to [EC-544, "Component Function Check"](#) (VQ37VHR) or [EC-1552, "Component Function Check"](#) (VK56VD).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace malfunctioning parts.

3. CHECK A/C AUTO AMP. OUTPUT SIGNAL

Ⓟ With CONSULT

Check "COMP REQ SIG" and "FAN REQ SIG" in "DATA MONITOR" mode of "HVAC" using CONSULT.

Monitor item	Condition	Status	
COMP REQ SIG	"Climate" menu	ON	On
		OFF	Off
FAN REQ SIG	Blower motor	ON	On
		OFF	Off

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace A/C auto amp. Refer to [HAC-175, "Removal and Installation"](#).

4. CHECK ECM INPUT SIGNAL

Ⓟ With CONSULT

Check "AIR COND SIG" and "HEATER FAN SW" in "DATA MONITOR" mode of "ECM" using CONSULT.

Monitor item	Condition	Status	
COMP REQ SIG	"Climate" menu	ON	On
		OFF	Off
HEATER FAN SW	Blower motor	ON	On
		OFF	Off

Is the inspection result normal?

YES >> GO TO 5.

NO >> Check CAN communication system. Refer to [LAN-24, "Trouble Diagnosis Flow Chart"](#).

5. CHECK IPDM E/R INPUT SIGNAL

Ⓟ With CONSULT

COMPRESSOR DOES NOT OPERATE

[AUTOMATIC AIR CONDITIONING]

< SYMPTOM DIAGNOSIS >

1. Start engine.
2. Check "AC COMP REQ" in "DATA MONITOR" mode of "IPDM E/R" using CONSULT.

Monitor item	Condition		Status
AC COMP REQ	"Climate" menu	ON	On
		OFF	Off

Is the inspection result normal?

YES >> INSPECTION END

NO >> Check CAN communication system. Refer to [LAN-24, "Trouble Diagnosis Flow Chart"](#).

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

INSUFFICIENT COOLING

Description

INFOID:000000010099514

Symptom

- Insufficient cooling
- No cool air comes out. (Air flow volume is normal.)

Diagnosis Procedure

INFOID:000000010099515

NOTE:

Perform self-diagnoses with CONSULT before performing symptom diagnosis. If any DTC is detected, perform the corresponding diagnosis.

1.CHECK MAGNET CLUTCH OPERATION

1. Turn ignition switch ON.
2. Operate fan switch.
3. Touch "A/C".
4. Check that "A/C" indicator turns ON. Check visually and by sound that compressor operates.
5. Touch "A/C" again.
6. Check that "A/C" indicator turns OFF. Check that compressor stops.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Perform diagnosis of "COMPRESSOR DOES NOT OPERATE" in "SYMPTOM DIAGNOSIS".
Refer to [HAC-168. "Diagnosis Procedure"](#).

2.CHECK DRIVE BELT

Check tension of drive belt. Refer to [EM-22. "Checking"](#) (VQ37VHR) or [EM-182. "Checking"](#) (VK56VD).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Adjust or replace drive belt depending on the inspection results.

3.CHECK REFRIGERANT CYCLE PRESSURE

Connect recovery/recycling recharging equipment to the vehicle and perform pressure inspection with gauge. Refer to [HA-28. "Trouble Diagnosis For Unusual Pressure"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace parts depending on the inspection results.

4.CHECK AIR LEAKAGE FROM EACH DUCT

Check duct and nozzle, etc. of the air conditioning system for leakage.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace parts depending on the inspection results.

5.CHECK SETTING OF TEMPERATURE SETTING TRIMMER

1. Check setting value of temperature setting trimmer. Refer to [HAC-78. "AUTOMATIC AIR CONDITIONING SYSTEM : Temperature Setting Trimmer"](#).
2. Check that temperature setting trimmer is set to "+ direction".

NOTE:

The control temperature can be set with the setting of the temperature setting trimmer.

3. Set difference between set temperature and control temperature to "0".

Is inspection result normal?

YES >> INSPECTION END

NO >> Replace A/C auto amp. Refer to [HAC-175. "Removal and Installation"](#).

INSUFFICIENT HEATING

Description

INFOID:0000000110099516

Symptom

- Insufficient heating
- No warm air comes out. (Air flow volume is normal.)

Diagnosis Procedure

INFOID:0000000110099517

NOTE:

Perform self-diagnoses with CONSULT before performing symptom diagnosis. If any DTC is detected, perform the corresponding diagnosis.

1.CHECK COOLING SYSTEM

1. Check engine coolant level and check for leakage. Refer to [CO-9, "Inspection"](#) (VQ37VHR) or [CO-37, "Inspection"](#) (VK56VD).
2. Check reservoir tank cap. Refer to [CO-9, "Inspection"](#) (VQ37VHR) or [CO-37, "Inspection"](#) (VK56VD).
3. Check water flow sounds of the engine coolant. Refer to [CO-10, "Refilling"](#) (VQ37VHR) or [CO-38, "Refilling"](#) (VK56VD).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Refill engine coolant and repair or replace parts depending on the inspection results.

2.CHECK HEATER HOSE

Check installation of heater hose by visually or touching.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace parts depending on the inspection results.

3.CHECK HEATER CORE

1. Check temperature of inlet hose and outlet hose of heater core.
2. Check that inlet side of heater core is hot and the outlet side is slightly lower than/almost equal to the inlet side.

CAUTION:

Always perform the temperature inspection in a short period of time because the engine coolant temperature is very hot.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace heater core. Refer to [HA-46, "HEATER CORE : Removal and Installation"](#).**4.CHECK AIR LEAKAGE FROM EACH DUCT**

Check duct and nozzle, etc. of air conditioning system for air leakage.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace parts depending on the inspection results.

5.CHECK SETTING OF TEMPERATURE SETTING TRIMMER

1. Check setting value of temperature setting trimmer. Refer to [HAC-78, "AUTOMATIC AIR CONDITIONING SYSTEM : Temperature Setting Trimmer"](#).
2. Check that temperature setting trimmer is set to "– direction".

NOTE:

The control temperature can be set by the temperature setting trimmer.

3. Set difference between the set temperature and control temperature to "0".

Are the symptoms solved?

YES >> INSPECTION END

NO >> Replace A/C auto amp. Refer to [HAC-175, "Removal and Installation"](#).

INTELLIGENT KEY INTERLOCK FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

INTELLIGENT KEY INTERLOCK FUNCTION DOES NOT OPERATE

Description

INFOID:000000010099518

Symptom: Intelligent Key interlock function does not operate.

Diagnosis Procedure

INFOID:000000010099519

1. CHECK DOOR LOCK SYSTEM

Check door lock system Refer to [DLK-60, "Work Flow"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace malfunctioning parts.

2. CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Replace A/C auto amp. Refer to [HAC-175, "Removal and Installation"](#).

NO >> Repair or replace malfunctioning parts.

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[AUTOMATIC AIR CONDITIONING]

NORMAL OPERATING CONDITION

Description

INFOID:0000000110099520

FOREST AIR SYSTEM

Each control of Forest Air system turns OFF automatically, when A/C auto amp. recognizes that ambient temperature is -2°C (28°F) or less.

Control	Symptom
Automatic intake control (exhaust gas/outside odor detecting mechanism)	When Forest Air system is ON • FOREST switch indicator lamp turns OFF and control turns OFF. When Forest Air system is OFF • Control does not turn ON when FOREST switch is pressed.
Air flow control (inside odor detecting mechanism)	When Forest Air system is ON • FOREST switch indicator lamp and "AUTO DEF" on display turn OFF and control turns OFF. NOTE: AUTO switch indicator lamp and "AUTO" on display do not turn OFF. When Forest Air system is OFF • Control does not turn ON when FOREST switch or AUTO switch is pressed. NOTE: AUTO indicator lamp and "AUTO" on display turn ON.

Each control of Forest Air system reactivates according to the following procedures, when A/C auto amp. recognizes that ambient temperature is 0°C (32°F) or more.

Control that reactivates automatically

Control	Reactivation procedure
Automatic defogging control	When ambient temperature is 0°C (32°F) or more, FOREST switch indicator lamp does not turn ON again, but AUTO DEF on display turns ON again automatically and control reactivates automatically.

Control that does not reactivate automatically

Control	Reactivation procedure
Automatic intake control (exhaust gas/outside odor detecting mechanism)	When ambient temperature is 0°C (32°F) or more, FOREST switch indicator lamp does not turn ON again and control does not reactivate. It is necessary to turn FOREST switch ON again for reactivating control.
Air flow control (inside odor detecting mechanism)	

NOTE:

Automatic control of conventional automatic air conditioning system has priority for preventing fogging of window, when ambient temperature is low.

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

REMOVAL AND INSTALLATION

MULTIFUNCTION SWITCH

Removal and Installation

INFOID:0000000010099521

REMOVAL

Remove multifunction switch. Refer to the following.

- Refer to [AV-135, "Removal and Installation"](#). (BASE AUDIO WITHOUT NAVIGATION)
- Refer to [AV-320, "Removal and Installation"](#). (BOSE AUDIO WITH NAVIGATION)

INSTALLATION

Install in the reverse order of removal.

A/C AUTO AMP.

< REMOVAL AND INSTALLATION >

[AUTOMATIC AIR CONDITIONING]

A/C AUTO AMP.

Exploded View

INFOID:0000000110099522

Refer to [VTL-16, "Exploded View"](#).

Removal and Installation

INFOID:0000000110099523

REMOVAL

CAUTION:

Before replacing A/C auto amp., perform "READ CONFIGURATION" to save or print current vehicle specification. Refer to [HAC-76, "Description"](#).

1. Remove glove box. Refer to [IP-13, "Removal and Installation"](#).
2. Remove fixing screws, and then remove A/C auto amp..

INSTALLATION

Note the following item, and then install in the reverse order of removal.

CAUTION:

Be sure to perform "WRITE CONFIGURATION" when replacing A/C auto amp.. Refer to [HAC-76, "Work Procedure"](#).

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

AMBIENT SENSOR

Removal and Installation

INFOID:000000010099524

REMOVAL

1. Remove air duct. Refer to the following.
 - Refer to [EM-29, "Removal and Installation"](#). (VQ37VHR engine models)
 - Refer to [EM-191, "Removal and Installation"](#). (VK50VD engine models)
2. Disconnect harness connector, and then remove ambient sensor.

INSTALLATION

Install in the reverse order of removal.

IN-VEHICLE SENSOR

< REMOVAL AND INSTALLATION >

[AUTOMATIC AIR CONDITIONING]

IN-VEHICLE SENSOR

Removal and Installation

INFOID:000000010099525

REMOVAL

1. Remove instrument lower panel LH. Refer to [IP-13, "Removal and Installation"](#).
2. Remove fixing screws, and then remove in-vehicle sensor.

INSTALLATION

Install in the reverse order of removal.

A

B

C

D

E

F

G

H

HAC

J

K

L

M

N

O

P

SUNLOAD SENSOR

< REMOVAL AND INSTALLATION >

[AUTOMATIC AIR CONDITIONING]

SUNLOAD SENSOR

Removal and Installation

INFOID:000000010099526

REMOVAL

1. Remove front defroster grille. Refer to [VTL-10, "FRONT DEFROSTER GRILLE : Removal and Installation"](#). (Passenger side)
2. Disconnect harness connector, and then remove sunload sensor.

INSTALLATION

Install in the reverse order of removal.

HUMIDITY SENSOR


< REMOVAL AND INSTALLATION >

[AUTOMATIC AIR CONDITIONING]

HUMIDITY SENSOR

Exploded View


INFOID:0000000110099527

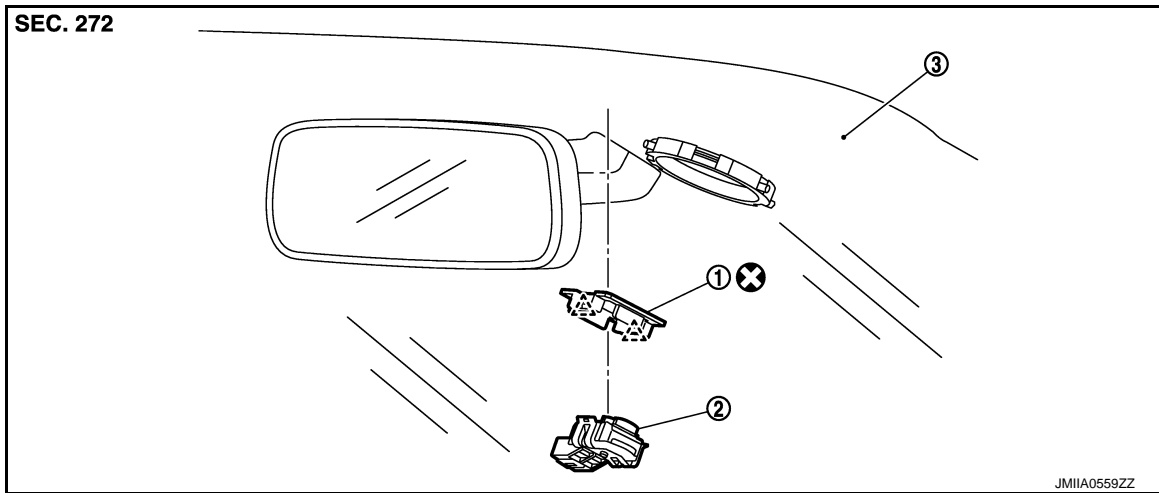

1. Bracket

2. Humidity sensor

3. Windshield glass

 : Pawl

Refer to [GI-4. "Components"](#) for symbols in the figure.

Removal and Installation

INFOID:0000000110099528

REMOVAL

1. Remove front camera finisher. Refer to [INT-52. "Removal and Installation"](#).
2. Disconnect harness connector from humidity sensor.
3. Disengage fixing pawls, and then remove humidity sensor.

INSTALLATION

Install in the reverse order of removal.

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

INTAKE SENSOR

Exploded View

INFOID:000000010099529

Refer to [HA-43. "Exploded View"](#).

Removal and Installation

INFOID:000000010099530

REMOVAL

1. Remove evaporator assembly. Refer to [HA-45. "HEATER & COOLING UNIT ASSEMBLY : Removal and Installation"](#).
2. Remove intake sensor from evaporator assembly.

INSTALLATION

Note the following items, and then install in the reverse order of removal.

CAUTION:

- Replace O-ring with new ones. Then apply compressor oil to them when installing.
- Mark the mounting position of intake sensor bracket prior to removal so that the reinstalled sensor can be located in the same position.
- Female-side piping connection is thin and easy to deform. Slowly insert the male-side piping straight in axial direction.
- Insert piping securely until a clicks is heard.
- After piping connection is completed, pull male-side piping by hand to make sure that connection does not come loose.
- Check for leakages when recharging refrigerant. Refer to [HA-19. "Leak Test"](#).

INSIDE ODOR DETECTING SENSOR

< REMOVAL AND INSTALLATION >

[AUTOMATIC AIR CONDITIONING]

INSIDE ODOR DETECTING SENSOR

Exploded View

INFOID:000000010099531

Refer to [HA-43, "Exploded View"](#).

Removal and Installation

INFOID:000000010099532

REMOVAL

1. Remove instrument lower panel LH. Refer to [IP-13, "Removal and Installation"](#).
2. Remove aspirator duct, and then disconnect harness connector from inside odor detecting sensor.
3. Remove fixing clip, and then remove inside odor detecting sensor.

INSTALLATION

Install in the reverse order of removal.

A

B

C

D

E

F

G

H

HAC

J

K

L

M

N

O

P

EXHAUST GAS/OUTSIDE ODOR SENSOR

< REMOVAL AND INSTALLATION >

[AUTOMATIC AIR CONDITIONING]

EXHAUST GAS/OUTSIDE ODOR SENSOR

Removal and Installation

INFOID:000000010099533

REMOVAL

1. Remove air duct. Refer to the following.
 - Refer to [EM-29, "Removal and Installation"](#). (VQ37VHR engine models)
 - Refer to [EM-191, "Removal and Installation"](#). (VK56VD engine models)
2. Remove mounting nuts, and then remove exhaust gas/outside odor sensor.

INSTALLATION

Install in the reverse order of removal.

DOOR MOTOR


< REMOVAL AND INSTALLATION >

[AUTOMATIC AIR CONDITIONING]

DOOR MOTOR

Exploded View

INFOID:0000000110099534

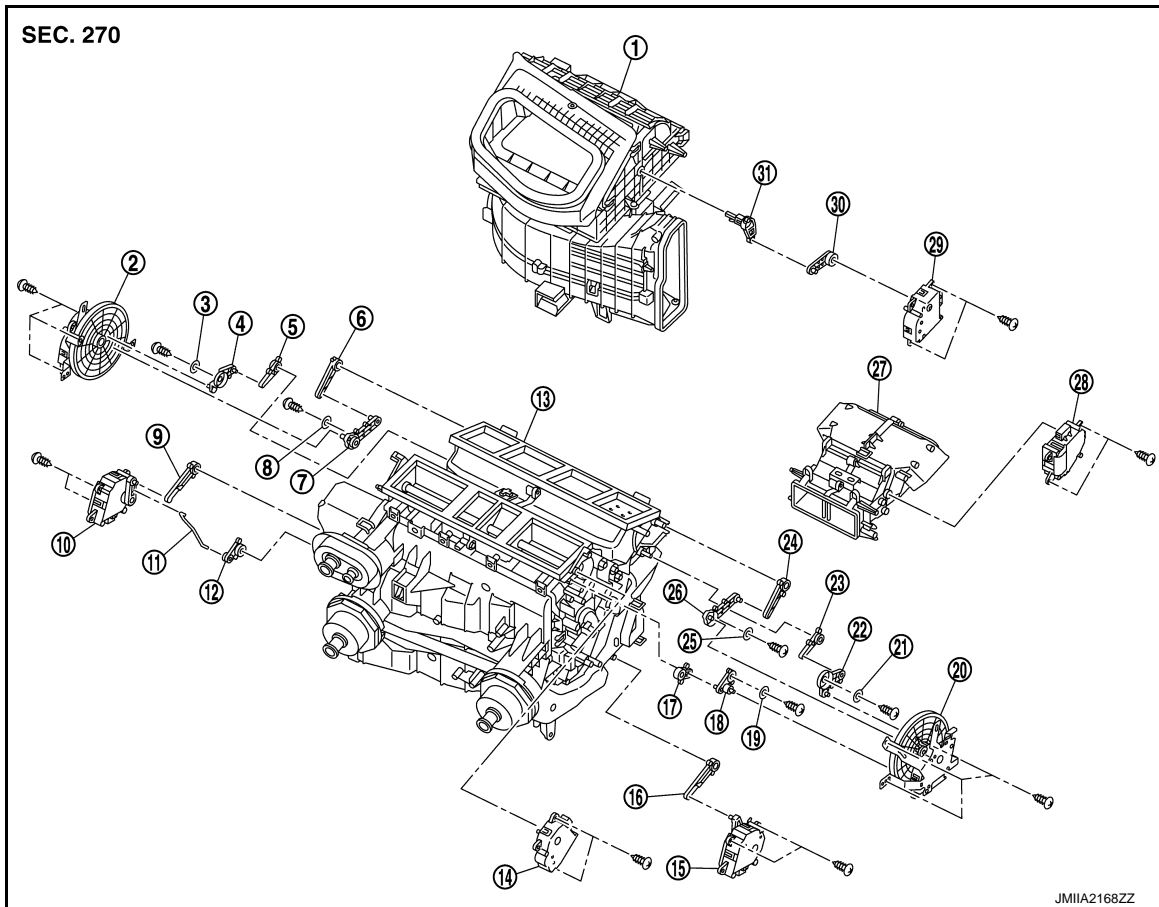

- | | | |
|------------------------------------|---------------------------------|----------------------------------|
| 1. Blower unit | 2. Mode door motor RH | 3. Plate |
| 4. Mode door link RH | 5. Foot door lever RH | 6. Ventilator door lever RH |
| 7. Ventilator door link | 8. Plate | 9. Heater door lever |
| 10. Air mix door motor | 11. Rod | 12. Air mix door lever |
| 13. Heater & cooling unit assembly | 14. Upper ventilator door motor | 15. Air mix door motor LH |
| 16. Heater door lever LH | 17. Defroster door lever | 18. Defroster door link |
| 19. Plate | 20. Mode door motor LH | 21. Plate |
| 22. Mode door link LH | 23. Foot door lever LH | 24. Ventilator door lever LH |
| 25. Plate | 26. Ventilator door link LH | 27. Rear mode door case assembly |
| 28. Rear mode door motor | 29. Intake door motor | 30. Intake door lever |
| 31. Intake door link | | |

MODE DOOR MOTOR

MODE DOOR MOTOR : Removal and Installation

INFOID:0000000110099535

REMOVAL

Driver Side

1. Remove A/C unit assembly. Refer to [HA-45. "HEATER & COOLING UNIT ASSEMBLY : Removal and Installation"](#).
2. Disconnect mode door motor connector.
3. Remove fixing screws, and then remove mode door motor LH.

DOOR MOTOR

< REMOVAL AND INSTALLATION >

[AUTOMATIC AIR CONDITIONING]

Passenger Side

1. Remove A/C unit assembly. Refer to [HA-45. "HEATER & COOLING UNIT ASSEMBLY : Removal and Installation"](#).
2. Separate blower unit assembly and heater & cooling unit assembly.
3. Disconnect mode door motor connector.
4. Remove fixing screws, and then remove mode door motor RH.

INSTALLATION

Install in the reverse order of removal.

AIR MIX DOOR MOTOR

AIR MIX DOOR MOTOR : Removal and Installation

INFOID:000000010099536

REMOVAL

Driver Side

1. Remove A/C unit assembly. Refer to [HA-45. "HEATER & COOLING UNIT ASSEMBLY : Removal and Installation"](#).
2. Disconnect air mix door motor connector.
3. Remove fixing screws, and then remove air mix door motor LH.

Passenger Side

1. Remove A/C unit assembly. Refer to [HA-45. "HEATER & COOLING UNIT ASSEMBLY : Removal and Installation"](#).
2. Separate blower unit assembly and heater & cooling unit assembly.
3. Disconnect air mix door motor connector.
4. Remove fixing screws, and then remove air mix door motor RH.

INSTALLATION

Install in the reverse order of removal.

INTAKE DOOR MOTOR

INTAKE DOOR MOTOR : Removal and Installation

INFOID:000000010099537

REMOVAL

1. Remove A/C unit assembly. Refer to [HA-45. "HEATER & COOLING UNIT ASSEMBLY : Removal and Installation"](#).
2. Disconnect intake door motor connector.
3. Remove fixing screws, and then remove intake door motor.

INSTALLATION

Install in the reverse order of removal.

UPPER VENTILATOR DOOR MOTOR

UPPER VENTILATOR DOOR MOTOR : Removal and Installation

INFOID:000000010099538

REMOVAL

1. Remove A/C unit assembly. Refer to [HA-45. "HEATER & COOLING UNIT ASSEMBLY : Removal and Installation"](#).
2. Disconnect upper ventilator door motor connector.
3. Remove fixing screws, and then remove upper ventilator door motor.

INSTALLATION

Install in the reverse order of removal.

REAR MODE DOOR MOTOR

DOOR MOTOR

< REMOVAL AND INSTALLATION >

[AUTOMATIC AIR CONDITIONING]

REAR MODE DOOR MOTOR : Removal and Installation

INFOID:000000010099539

REMOVAL

1. Remove instrument panel assembly. Refer to [IP-13. "Removal and Installation"](#).
2. Disconnect rear mode door motor connector.
3. Remove fixing screws, and then remove rear mode door motor.

INSTALLATION

Install in the reverse order of removal.

A

B

C

D

E

F

G

H

HAC

J

K

L

M

N

O

P

POWER TRANSISTOR

< REMOVAL AND INSTALLATION >

[AUTOMATIC AIR CONDITIONING]

POWER TRANSISTOR

Exploded View

INFOID:000000010099540

Refer to [VTL-16, "Exploded View"](#).

Removal and Installation

INFOID:000000010099541

REMOVAL

1. Remove instrument lower cover. Refer to [IP-13, "Removal and Installation"](#).
2. Remove fixing screws, and then remove power transistor.

INSTALLATION

Install in the reverse order of removal.

IONIZER

Exploded View

INFOID:000000010099542

Refer to [VTL-8. "Exploded View"](#).

Removal and Installation

INFOID:000000010099543

Removal

- 1. Remove instrument panel assembly. Refer to [IP-13. "Removal and Installation"](#).
- 2. Disconnect ionizer harness connector.
- 3. Remove fixing screws, and then remove ionizer from ventilator duct LH.

CAUTION:

Never touch the surface (ceramic part) of the ionizer. It is the discharge electrode.

INSTALLATION

Note the following item, and then install in the reverse order of removal.

CAUTION:

If there is dirt, use a clean cloth and clean the discharge electrode (ceramic part) of the ionizer.

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

AROMA UNIT ASSY

Exploded View

INFOID:000000010099544

Refer to [VTL-16. "Exploded View"](#).

AROMA UNIT

AROMA UNIT : Removal and Installation

INFOID:000000010099545

REMOVAL

1. Remove instrument lower panel RH. Refer to [IP-13. "Removal and Installation"](#).
2. Disconnect aroma tube and harness connector.
3. Remove fixing screws, and then remove aroma unit.

INSTALLATION

Note the following items, and then install in the reverse order of removal.

CAUTION:

- Install aroma tube so that it is free of kinks.
- Operate aroma unit after installation. Check that aroma is supplied from air outlet or passenger side ventilator.

AROMA CARTRIDGE

AROMA CARTRIDGE : Removal and Installation

INFOID:000000010099546

REMOVAL

1. Remove instrument lower panel RH. Refer to [IP-13. "Removal and Installation"](#).
2. Remove fixing screw, and then remove aroma cartridge.

INSTALLATION

Note the following item, install in the reverse order of removal.

CAUTION:

Peel off the tape from cartridge.