

MWI

SECTION METER, WARNING LAMP & INDICATOR

CONTENTS

PRECAUTION	4	FUEL GAUGE	15
PRECAUTIONS	4	FUEL GAUGE : System Diagram	15
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER"	4	FUEL GAUGE : System Description	15
Precautions for Removing Battery Terminal	4		
PREPARATION	5	OIL PRESSURE WARNING LAMP	15
PREPARATION	5	OIL PRESSURE WARNING LAMP : System Dia- gram	15
Commercial Service Tools	5	OIL PRESSURE WARNING LAMP : System De- scription	15
SYSTEM DESCRIPTION	6		
COMPONENT PARTS	6	MASTER WARNING LAMP	16
METER SYSTEM	6	MASTER WARNING LAMP : System Diagram	16
METER SYSTEM : Component Parts Location	6	MASTER WARNING LAMP : System Description	16
METER SYSTEM : Component Description	7		
CLOCK	8	METER ILLUMINATION CONTROL	16
CLOCK : Component Parts Location	8	METER ILLUMINATION CONTROL : System Di- agram	16
SYSTEM	9	METER ILLUMINATION CONTROL : System De- scription	16
METER SYSTEM	9		
METER SYSTEM : System Diagram	9	METER EFFECT FUNCTION	17
METER SYSTEM : System Description	9	METER EFFECT FUNCTION : System Diagram	17
METER SYSTEM : Fail-Safe	12	METER EFFECT FUNCTION : System Descrip- tion	17
SPEEDOMETER	13		
SPEEDOMETER : System Diagram	14	INFORMATION DISPLAY	19
SPEEDOMETER : System Description	14	INFORMATION DISPLAY : System Diagram	19
TACHOMETER	14	INFORMATION DISPLAY : System Description	19
TACHOMETER : System Diagram	14		
TACHOMETER : System Description	14	OPERATION	29
ENGINE COOLANT TEMPERATURE GAUGE	14	Switch Name and Function	29
ENGINE COOLANT TEMPERATURE GAUGE : System Diagram	14		
ENGINE COOLANT TEMPERATURE GAUGE : System Description	14	DIAGNOSIS SYSTEM (COMBINATION METER)	30
		On Board Diagnosis Function	30
		CONSULT Function	31
		ECU DIAGNOSIS INFORMATION	36
		COMBINATION METER	36
		Reference Value	36
		Fail-Safe	44
		DTC Index	45

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

IPDM E/R	46	Diagnosis Procedure	80
List of ECU Reference	46	Component Inspection	80
WIRING DIAGRAM	47	WASHER LEVEL SWITCH SIGNAL CIRCUIT..	82
METER SYSTEM	47	Diagnosis Procedure	82
Wiring Diagram	47	Component Inspection	82
CLOCK	64	SYMPTOM DIAGNOSIS	83
Wiring Diagram	64	THE FUEL GAUGE INDICATOR DOES NOT OPERATE	83
BASIC INSPECTION	66	Description	83
DIAGNOSIS AND REPAIR WORKFLOW (METER SYSTEM)	66	Diagnosis Procedure	83
Work flow	66	THE METER CONTROL SWITCH IS INOPERATIVE	84
DTC/CIRCUIT DIAGNOSIS	69	Description	84
U1000 CAN COMM CIRCUIT	69	Diagnosis Procedure	84
Description	69	THE OIL PRESSURE WARNING LAMP DOES NOT TURN ON	85
DTC Logic	69	VQ37VHR	85
Diagnosis Procedure	69	VQ37VHR : Description	85
U1010 CONTROL UNIT (CAN)	70	VQ37VHR : Diagnosis Procedure	85
Description	70	VK56VD	85
DTC Logic	70	VK56VD : Description	85
Diagnosis Procedure	70	VK56VD : Diagnosis Procedure	85
B2205 VEHICLE SPEED	71	THE OIL PRESSURE WARNING LAMP DOES NOT TURN OFF	86
Description	71	VQ37VHR	86
DTC Logic	71	VQ37VHR : Description	86
Diagnosis Procedure	71	VQ37VHR : Diagnosis Procedure	86
B2267 ENGINE SPEED	72	VK56VD	86
Description	72	VK56VD : Description	86
DTC Logic	72	VK56VD : Diagnosis Procedure	87
Diagnosis Procedure	72	THE PARKING BRAKE RELEASE WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY	88
B2268 WATER TEMP	73	Description	88
Description	73	Diagnosis Procedure	88
DTC Logic	73	THE LOW WASHER FLUID WARNING CONTINUES DISPLAYING, or DOES NOT DISPLAY	89
Diagnosis Procedure	73	Description	89
POWER SUPPLY AND GROUND CIRCUIT	74	Diagnosis Procedure	89
COMBINATION METER	74	THE DOOR OPEN WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY	90
COMBINATION METER : Diagnosis Procedure	74	Description	90
METER CONTROL SWITCH SIGNAL CIRCUIT	75	Diagnosis Procedure	90
Diagnosis Procedure	75	THE TRUNK OPEN WARNING CONTINUES DISPLAYING, or DOES NOT DISPLAY	91
Component Inspection	76	Description	91
FUEL LEVEL SENSOR SIGNAL CIRCUIT	77	Diagnosis Procedure	91
Component Function Check	77		
Diagnosis Procedure	77		
Component Inspection	78		
OIL PRESSURE SWITCH SIGNAL CIRCUIT (VQ37VHR ENGINE MODELS)	80		
Component Function Check	80		

THE AMBIENT TEMPERATURE DISPLAY IS INCORRECT	92	COMBINATION METER	94
Description	92	Exploded View	94
Diagnosis Procedure	92	Removal and Installation	94
Disassembly and Assembly	94		94
NORMAL OPERATING CONDITION	93	METER CONTROL SWITCH	95
INFORMATION DISPLAY	93	Exploded View	95
INFORMATION DISPLAY : Description	93	Removal and Installation	95
REMOVAL AND INSTALLATION	94	CLOCK	96
		Exploded View	96
		Removal and Installation	96

A
B
C
D
E
F
G
H
I
J
K
L
M

MWI

O
P

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000011257141

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precautions for Removing Battery Terminal

INFOID:0000000011257142

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

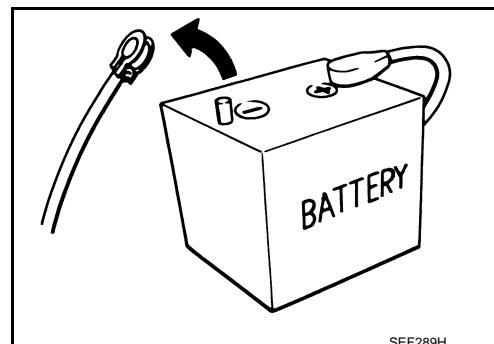

SEF289H

PREPARATION

< PREPARATION >

PREPARATION

PREPARATION

Commercial Service Tools

INFOID:0000000011257143

A

B

C

D

E

F

G

H

I

J

K


L

M

MWI

O

P

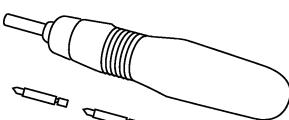Tool name	Description
Power tool	 Loosening screws PBIC0191E

COMPONENT PARTS

< SYSTEM DESCRIPTION >


SYSTEM DESCRIPTION

COMPONENT PARTS

METER SYSTEM

METER SYSTEM : Component Parts Location

INFOID:0000000011257144

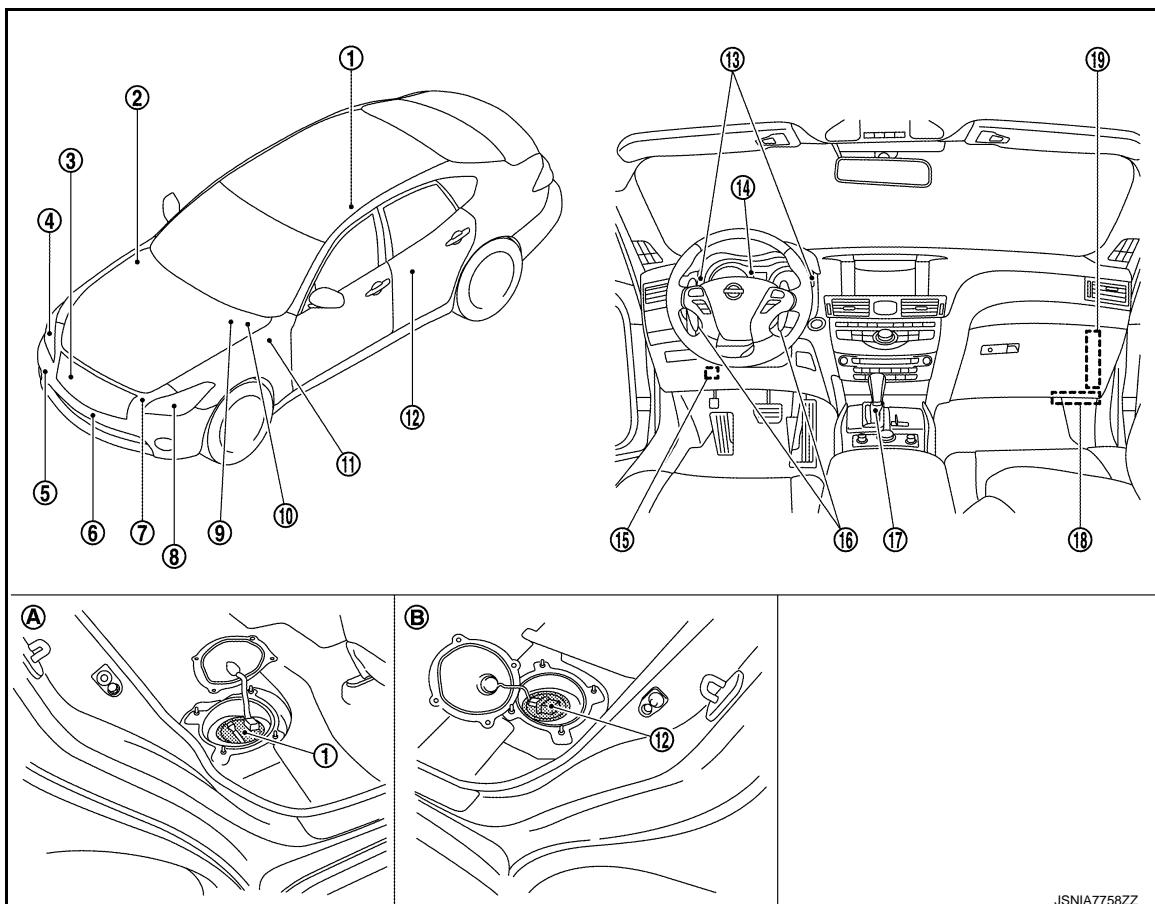

1. Fuel level sensor unit (main)
Refer to [EXL-7, "Component Parts Location"](#)
2. IPDM E/R
Refer to [PCS-5, "IPDM E/R : Component Parts Location"](#)
3. Oil pressure switch (VQ37VHR)
Refer to [EM-48, "Exploded View" \(2WD\)](#)
Refer to [LU-15, "Exploded View" \(AWD\)](#)
4. Front combination lamp RH
Refer to [EXL-7, "Component Parts Location"](#)
5. Washer level switch
6. Ambient sensor
7. Engine oil pressure sensor (VK56VD)
Refer to [EM-233, "Exploded View"](#)
8. Front combination lamp LH
Refer to [EXL-7, "Component Parts Location"](#)
9. TCM
Refer to [TM-11, "A/T CONTROL SYSTEM : Component Parts Location"](#)
10. ABS actuator and electric unit (control unit)
Refer to [BCR-10, "Component Parts Location"](#)
11. BCM
Refer to [BCS-4, "BODY CONTROL SYSTEM : Component Parts Location"](#)
12. Fuel level sensor unit (sub)
13. Meter control switch
14. Combination meter
15. Parking brake switch

COMPONENT PARTS

< SYSTEM DESCRIPTION >

- | | | |
|---|----------------------------|---|
| 16. Paddle shifter | 17. A/T shift selector | 18. ECM
Refer to EC-24, "ENGINE CONTROL SYSTEM : Component Parts Location" (VQ37VHR)
Refer to EC-553, "ENGINE CONTROL SYSTEM : Component Parts Location" (VK56VD) |
| 19. A/C auto amp.
Refer to HAC-5, "AUTOMATIC AIR CONDITIONING SYSTEM : Component Parts Location" . | | |
| A. Rear seat (bottom right) | B. Rear seat (bottom left) | |

METER SYSTEM : Component Description

INFOID:000000011257145

Unit	Description
Combination meter	<p>Controls the following with the signals received from each unit via CAN communication and the signals from switches and sensors.</p> <ul style="list-style-type: none"> • Speedometer • Tachometer • Engine coolant temperature gauge • Fuel gauge • Warning lamps • Indicator lamps • Meter illumination control • Meter effect function • Information display
Meter control switch	<p>Transmits the following signals to the combination meter.</p> <ul style="list-style-type: none"> • Enter switch signal • Select switch signal • Trip reset switch signal • Illumination control switch signal (+) • Illumination control switch signal (-)
ECM	<p>Transmits the following signals to the combination meter via CAN communication.</p> <ul style="list-style-type: none"> • Engine speed signal • Engine coolant temperature signal • Engine status signal • Fuel consumption monitor signal • Fuel filler cap warning display signal • Oil pressure warning lamp signal (VK56VD engine models)
ABS actuator and electric unit (control unit)	Transmits the vehicle speed signal to the combination meter via CAN communication.
IPDM E/R	Transmits the oil pressure switch signal to the BCM via CAN communication.
BCM	<p>Transmits the following signals to the combination meter via CAN communication.</p> <ul style="list-style-type: none"> • Oil pressure switch signal (VQ37VHR engine models) • Dimmer signal • Door switch signal • Trunk switch signal • Meter ring illumination request signal • Starter relay status signal • Low tire pressure warning lamp signal
TCM	<p>Transmits the following signals to the combination meter.</p> <ul style="list-style-type: none"> • Shift position signal • Manual mode shift refusal signal
A/T shift selector	<p>Transmits the following signals to the combination meter.</p> <ul style="list-style-type: none"> • Manual mode signal • Non-manual mode signal • Manual mode shift up signal • Manual mode shift down signal

COMPONENT PARTS

< SYSTEM DESCRIPTION >


Unit	Description
Paddle shifter	Transmits the following signals to the combination meter. <ul style="list-style-type: none">• Paddle shifter shift up signal• Paddle shifter shift down signal
Fuel level sensor unit	Transmits the fuel level sensor signal to the combination meter.
Oil pressure switch (VQ37VHR engine models)	Transmits the oil pressure switch signal to the IPDM E/R.
Engine oil pressure sensor (VK56VD engine models)	Transmits the Engine oil pressure sensor signal to the ECM.
Ambient sensor	Transmits the ambient sensor signal to the A/C auto amp.
A/C auto amp.	Transmits the ambient sensor signal to the combination meter via CAN communication.
Parking brake switch	Transmits the parking brake switch signal to the combination meter.
Washer level switch	Transmits the washer level switch signal to the combination meter.
Front combination lamp	Transmits the LED headlamp warning signal to the combination meter.

CLOCK

CLOCK : Component Parts Location

INFOID:0000000011257146

1 : Clock

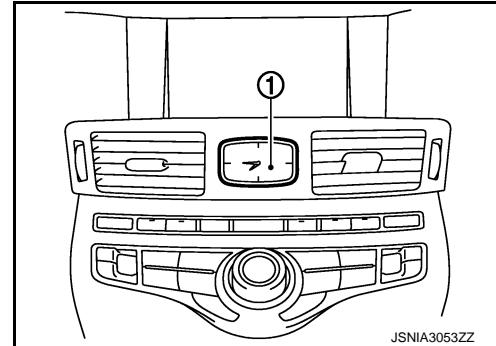

JSNIA3053ZZ

SYSTEM


< SYSTEM DESCRIPTION >

SYSTEM

METER SYSTEM

METER SYSTEM : System Diagram

INFOID:0000000011257147

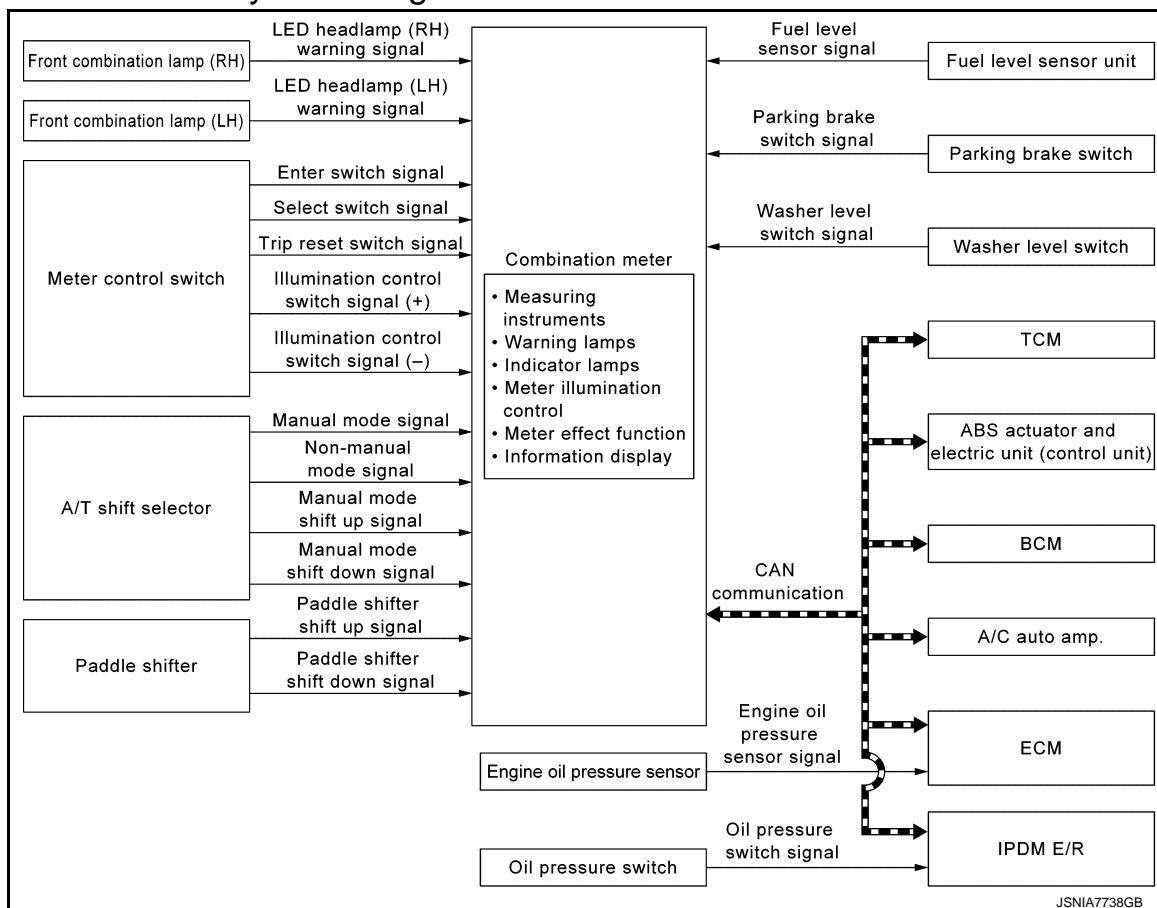

JSNIA7738GB

METER SYSTEM : System Description

INFOID:0000000011257148

COMBINATION METER

- The combination meter receives necessary signals from each unit, switch, and sensor to control the following functions.
 - Measuring instruments
 - Warning lamps
 - Indicator lamps
 - Meter illumination control
 - Meter effect function
 - Information display
- The combination meter incorporates a buzzer function that sounds an audible alarm with the integrated buzzer device. Refer to [WCS-5, "Combination Meter"](#) for further details.
- The combination meter includes an on board diagnosis function.
- The combination meter can be diagnosed with CONSULT.

METER CONTROL FUNCTION LIST

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

SYSTEM

< SYSTEM DESCRIPTION >

	System	Description	Reference
Measuring instruments	Speedometer	Indicates vehicle speed.	MWI-14, "SPEEDOMETER : System Description"
	Tachometer	Indicates engine speed.	MWI-14, "TACHOMETER : System Description"
	Engine coolant temperature gauge	Indicates engine coolant temperature.	MWI-14, "ENGINE COOLANT TEMPERATURE GAUGE : System Description"
	Fuel gauge	Indicates fuel level.	MWI-15, "FUEL GAUGE : System Description"
Warning lamp/indicator lamp	Oil pressure warning lamp	The warning lamp turns ON or turns OFF, according to engine hydraulic pressure.	MWI-15, "OIL PRESSURE WARNING LAMP : System Description"
	Master warning lamp	Turns ON/OFF in synchronization with a warning indicated on the information display.	MWI-16, "MASTER WARNING LAMP : System Description"
Meter illumination control	Meter illumination control function	Switches back and forth between daytime mode and nighttime mode, according to a light switch position.	MWI-16, "METER ILLUMINATION CONTROL : System Description"
Meter effect function	Engine-start effect function	Controls pointers of combination meter and meter illumination at engine start to produce illumination effects.	MWI-17, "METER EFFECT FUNCTION : System Description"
	Driver welcome function	Controls meter illumination to produce illumination effects when getting in the vehicle.	

SYSTEM

< SYSTEM DESCRIPTION >

System		Description	Reference
Information display	Odo/trip meter	Displays mileage.	A
	Shift position indicator	Displays shift position.	B
	Current fuel consumption	Displays current fuel consumption.	C
	Average fuel consumption	Displays average fuel consumption.	D
	Distance to empty	Displays distance to empty.	E
	Average vehicle speed	Displays average vehicle speed.	F
	Travel time	Displays travel time.	G
	Travel distance	Displays mileage.	H
	Ambient temperature	Displays ambient temperature.	I
			J
Interrupt indication	Warning	Door open warning	Warns when a door is open.
		Trunk open warning	Warns when a trunk is open.
		Parking brake release warning	Warns if traveling when the parking brake is under operating condition.
		Low fuel warning	Warns when being low on fuel.
		Low washer fluid warning	Displayed/Hidden, depending on washer fluid level.
		Fuel filler cap warning	Warns, according to the tightening condition of fuel filler cap.
		Low tire pressure warning	Warns, according to tire inflation pressure.
		Headlamp warning	Warns, when headlamp system error.
	Alert	Travel time	Causes an interrupt when exceeding randomly set time.
		Low ambient temperature	Causes an interrupt when ambient temperature reaches below 3°C (37°F).
	Maintenance	Tire	Causes an interrupt when exceeding randomly set distance.
		Oil filter	Causes an interrupt when exceeding randomly set distance.
		Engine oil	Causes an interrupt when exceeding randomly set distance.
		Other	Causes an interrupt when exceeding randomly set distance.
	Meter illumination level	Indicates the brightness of the meter illumination in stages.	MWI

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O


P

SYSTEM

< SYSTEM DESCRIPTION >

System		Description	Reference
Information display	Setting	Alert	Allows the user to set a display time for "Travel time".
		ICY	
	Maintenance	Tire	Allows the ON/OFF setting of the low ambient temperature (alert) function.
		Filter	Alerts when reaching mileage set in "SETTING".
		Oil	Alerts when reaching mileage set in "SETTING".
	Options	Other	Alerts when reaching mileage set in "SETTING".
		Language	Allows the user to set language for information display.
		Unit	Allows unit settings.
		Effects	Allows the ON/OFF setting of the engine-start effect function.

ARRANGEMENT OF COMBINATION METER

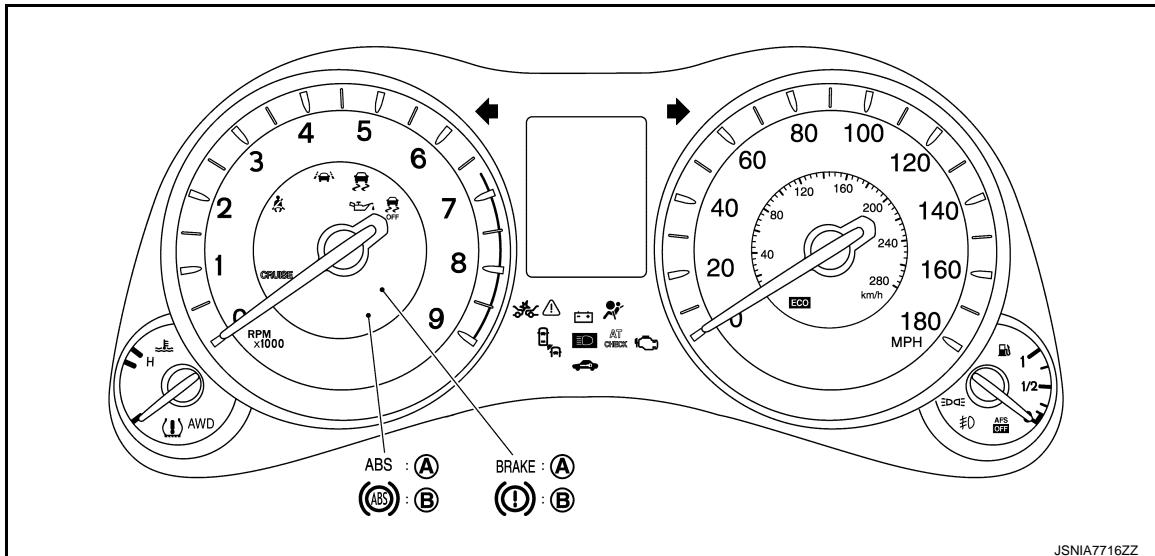

A. For U.S.A.

B. For Canada

METER SYSTEM : Fail-Safe

INFOID:0000000011497604

FAIL-SAFE

The combination meter activates the fail-safe control if CAN communication with each unit is malfunctioning.

Function	Specifications
Speedometer	
Tachometer	Reset to zero by suspending communication.
Engine coolant temperature gauge	
Illumination control	When suspending communication, changes to nighttime mode.

[MWI-19, "INFORMATION DISPLAY : System Description"](#)

SYSTEM

< SYSTEM DESCRIPTION >

	Function	Specifications	
Information display	Odo/trip meter	An indicated value is maintained at communications blackout.	A
	Shift position indicator		B
	Door open warning		C
	Trunk open warning		D
	Fuel filler cap warning		E
	Low tire pressure warning	The display turns OFF by suspending communication.	F
	Front radar warning		G
	BCI ON indicator		H
	BCI OFF indicator		I
	BCI malfunction indicator		J
	BCI not available indicator		K
	FEB warning		L
Buzzer		The buzzer turns OFF by suspending communication.	MWI
Warning lamp/indicator lamp	ABS warning lamp		O
	VDC warning lamp		P
	VDC OFF indicator lamp		
	Brake warning lamp	The lamp turns ON by suspending communication.	
	FEB indicator lamp		
	AWD warning lamp		
	Malfunction indicator lamp		
	CRUISE warning lamp		
	Low tire pressure warning lamp	The lamp blinking caused by suspending communication.	
	AFS OFF indicator lamp		
	High beam indicator lamp		
	Turn signal indicator lamp		
	Front fog lamp indicator lamp		
	Tail lamp indicator lamp		
	A/T CHECK indicator lamp		
	Lane departure warning lamp	The lamp turns OFF by suspending communication.	
	LDP ON indicator lamp		
	Oil pressure warning lamp		
	ECO drive indicator		
	Blind Spot Intervention ON indicator		
	BSW/Blind Spot Intervention warning lamp		


SPEEDOMETER

SYSTEM

< SYSTEM DESCRIPTION >

SPEEDOMETER : System Diagram

INFOID:0000000011257150

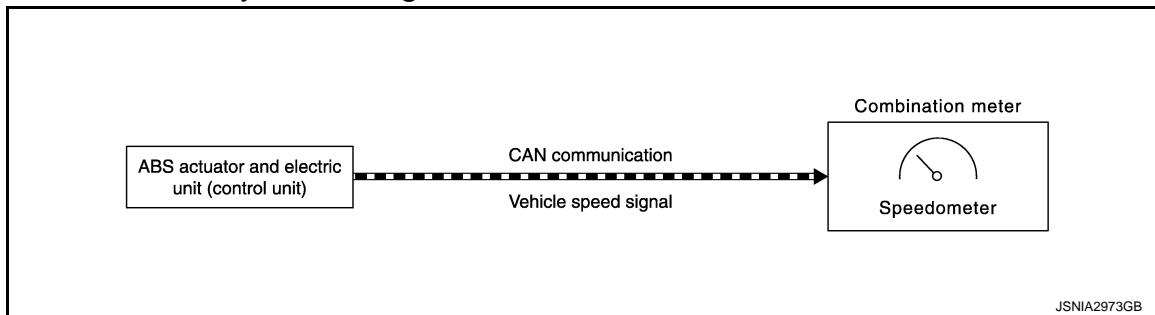

SPEEDOMETER : System Description


INFOID:0000000011257151

- The ABS actuator and electric unit (control unit) converts the rectangular wave signal provided by the wheel sensor to a vehicle speed signal and transmits it to the combination meter via CAN communication.
- The combination meter indicates the vehicle speed to the speedometer according to the vehicle speed signal received via CAN communication.

TACHOMETER

TACHOMETER : System Diagram

INFOID:0000000011257152

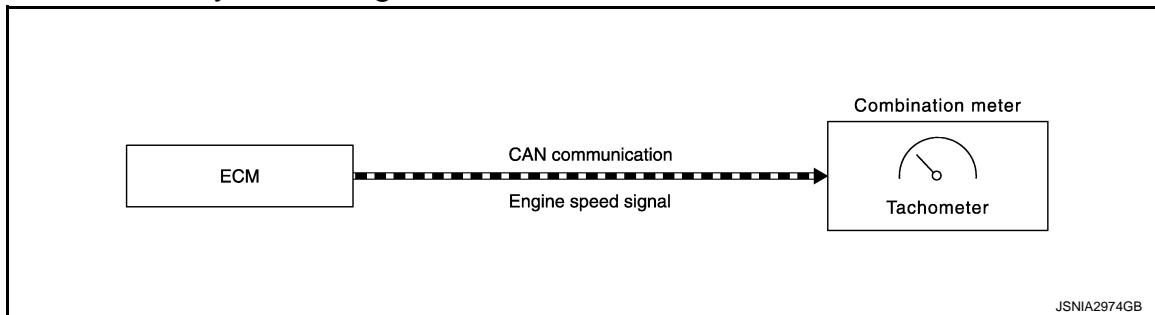

TACHOMETER : System Description


INFOID:0000000011257153

- ECM converts the pulse signal provided by the crankshaft position sensor to an engine speed signal and transmits it to the combination meter via CAN communication.
- The combination meter indicates the engine speed to the tachometer according to the engine speed signal received via CAN communication.

ENGINE COOLANT TEMPERATURE GAUGE

ENGINE COOLANT TEMPERATURE GAUGE : System Diagram

INFOID:0000000011257154

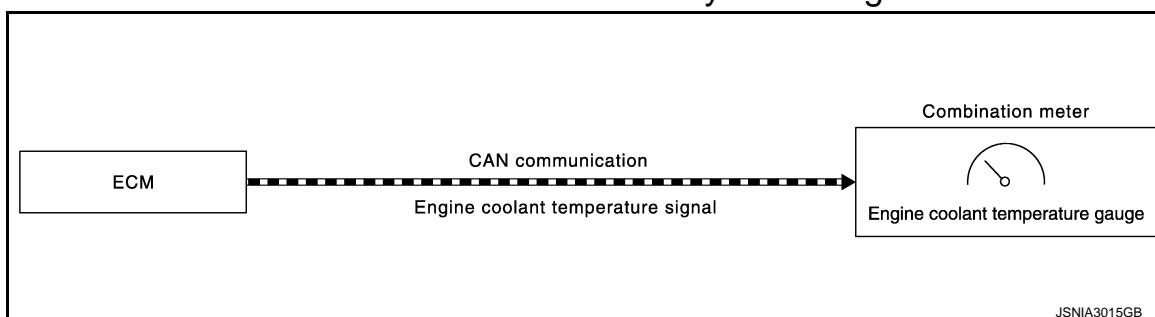

ENGINE COOLANT TEMPERATURE GAUGE : System Description

INFOID:0000000011257155

- ECM reads the engine coolant temperature signal from the engine coolant temperature sensor and transmits the signal to the combination meter via CAN communication.
- The combination meter indicates the engine coolant temperature to the engine coolant temperature gauge according to the engine coolant temperature signal received via CAN communication.


SYSTEM

< SYSTEM DESCRIPTION >

FUEL GAUGE

FUEL GAUGE : System Diagram

INFOID:0000000011257156

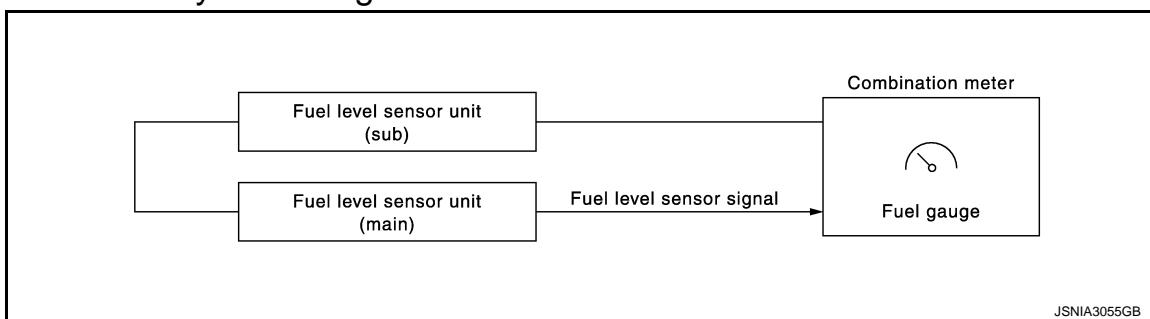

FUEL GAUGE : System Description

INFOID:0000000011257157

CONTROL OUTLINE

The combination meter reads the fuel level sensor signal from the fuel level sensor unit and indicates the fuel level to the fuel gauge.

REFUEL CONTROL

The combination meter accelerates the fuel gauge segment if the all conditions listed below are met, or the ignition switch is ON from OFF.


- Ignition switch is ON position.
- The vehicle is not moving.
- The fuel level change by 15 ℥ (4 US gal, 3-1/4 Imp gal) or more.

OIL PRESSURE WARNING LAMP


OIL PRESSURE WARNING LAMP : System Diagram

INFOID:0000000011257158

VQ37VHR ENGINE MODELS

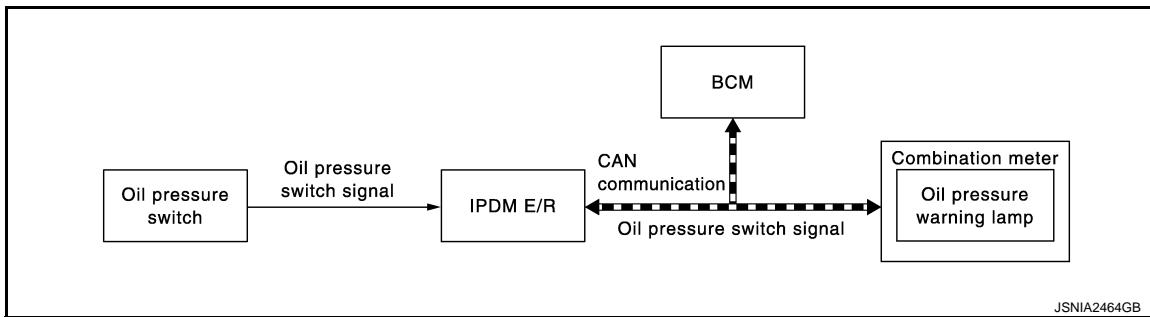

VK56VD ENGINE MODELS

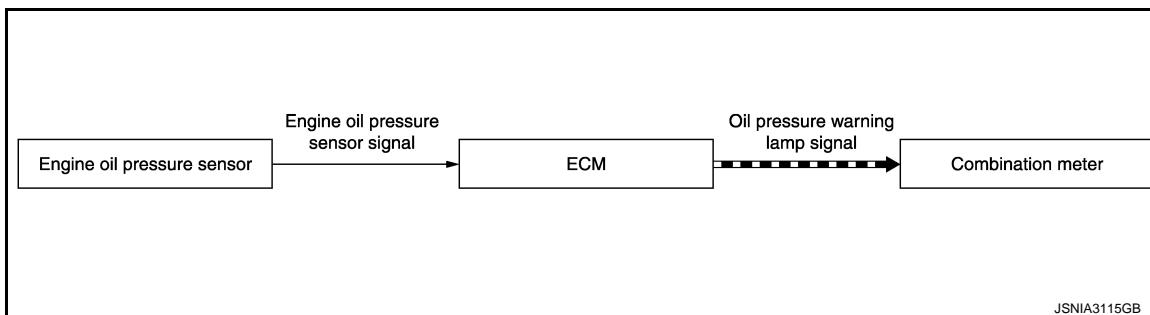

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

OIL PRESSURE WARNING LAMP : System Description

INFOID:0000000011257159

VQ37VHR ENGINE MODELS

- IPDM E/R receives an oil pressure switch signal from the oil pressure switch and transmits the signal to BCM via CAN communication.

SYSTEM

< SYSTEM DESCRIPTION >

- BCM transmits the oil pressure switch signal received from IPDM E/R to the combination meter via CAN communication.
- The combination meter turns ON/OFF the oil pressure warning lamp, according to an oil pressure switch signal received from BCM via CAN communication.


VK56VD ENGINE MODELS

- ECM receives an engine oil pressure sensor signal from the engine oil pressure sensor and transmits an oil pressure warning lamp signal to the combination switch via CAN communication.
- The combination meter turns ON/OFF the oil pressure warning lamp, according to an oil pressure warning lamp signal received from ECM via CAN communication.

MASTER WARNING LAMP

MASTER WARNING LAMP : System Diagram

INFOID:0000000011257160

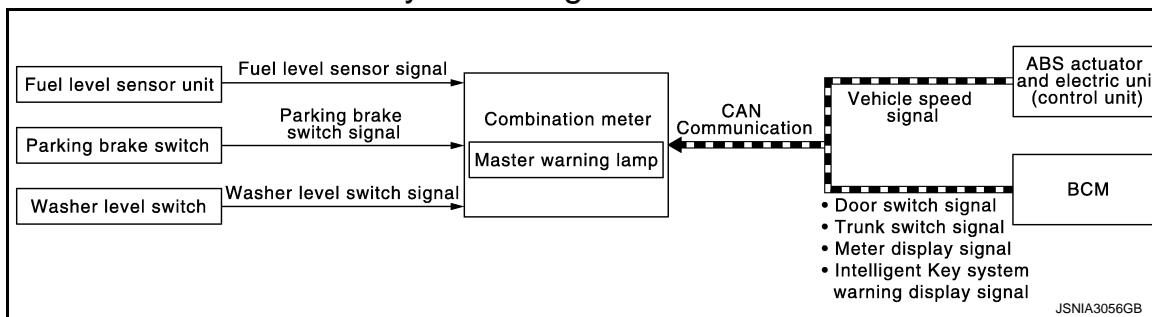

JSNIA3056GB

MASTER WARNING LAMP : System Description

INFOID:0000000011257161

When receiving a signal from each unit, switch, or sensor, the combination meter turns ON/OFF the master warning lamp in synchronization with the following warnings on the information display.

- Door open warning
- Trunk open warning
- Parking brake release warning
- Low fuel warning
- Low washer fluid warning
- Intelligent Key system malfunction
- NO KEY warning


NOTE:

For details on warnings displayed on the information display, refer to [MWI-19, "INFORMATION DISPLAY : System Description"](#).

METER ILLUMINATION CONTROL

METER ILLUMINATION CONTROL : System Diagram

INFOID:0000000011257162

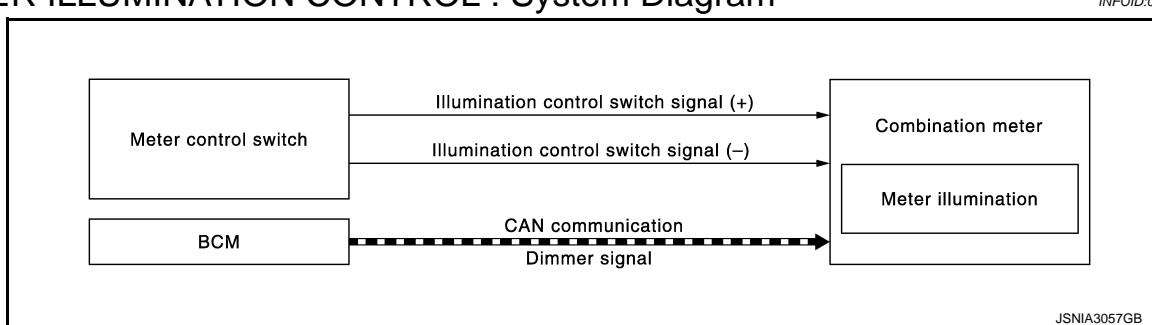

JSNIA3057GB

METER ILLUMINATION CONTROL : System Description

INFOID:0000000011257163

METER ILLUMINATION CONTROL FUNCTION

- Combination meter controls meter illumination, based on the following signal.
 - Dimmer signal
- The combination meter switches mode between Daytime mode and Nighttime mode, according to the following conditions.

SYSTEM

< SYSTEM DESCRIPTION >

Condition		Meter illumination
Combination switch (lighting switch)	1ST or 2ND position	Outdoor: Bright* Daytime mode
		Outdoor: Dark* Nighttime mode
	AUTO POSITION	Outdoor: Bright* Daytime mode
		Outdoor: Dark* Nighttime mode
Off		Daytime mode


- *: For further information, refer to [INL-12, "AUTO LIGHT ADJUSTMENT SYSTEM : System Description"](#).
 • The operation of the illumination control switch allows the brightness adjustment of meter illumination.

Meter illumination	The number of adjustable steps
Daytime	22 step
Nighttime	22 step

METER EFFECT FUNCTION

METER EFFECT FUNCTION : System Diagram

INFOID:0000000011257164

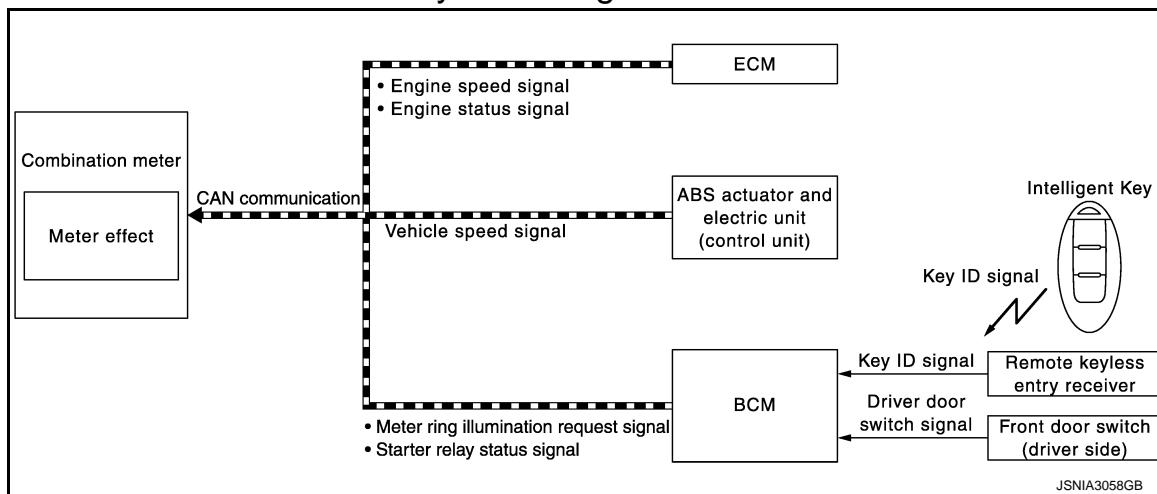

METER EFFECT FUNCTION : System Description

INFOID:0000000011257165

ENGINE-START EFFECT FUNCTION

When recognizing an engine start, the combination meter controls the following items for producing the effect.

- Speedometer
- Tachometer
- Engine coolant temperature gauge
- Fuel gauge
- Meter illumination

Meter and Illumination Operations During Engine-start Effect

The combination meter controls the following items during the engine-start effect.

Control item	Operation
Speedometer	Sweeps the pointer.
Tachometer	Sweeps the pointer.
Engine coolant temperature gauge	Stops the pointer.
Fuel gauge	Stops the pointer.

SYSTEM

< SYSTEM DESCRIPTION >

Control item		Operation
Meter illumination	Pointers	Turns on the illumination at the effect level.
	Information display	Turns on the illumination at the normal brightness level.
	Other than those above	Increases the brightness to the effect level in stages.

NOTE:

The pointers are stopped and illumination is turned off while cranking the engine.

Engine Start Judgment

The combination meter judges “engine-start” and activates the engine-start effect only once when the following operational conditions are all satisfied.

Operational condition	
Ignition switch	ON position
Vehicle speed	Less than 1 km/h (0.6 MPH)
Engine state	Other than the time of cranking the engine
	500 rpm or more
Information display (SETTING)	The setting of “EFFECT” is “ON”

NOTE:

ENGINE-START EFFECT exits when any of the above operational conditions is cancelled during the engine-start effect.

Signal Path

The combination meter judges “engine-start”, according to the following signals and activates the engine-start effect function.

Signal name	Signal source
Ignition signal	—
Starter relay status signal	BCM → CAN → Combination meter
Engine speed signal	ECM → CAN → Combination meter
Engine status signal	ECM → CAN → Combination meter
Vehicle speed signal	ABS actuator and electric unit (control unit) → CAN → Combination meter

NOTE:

The engine-start effect function ends if any one of the above conditions is lost during the activation of this function.

DRIVER WELCOME FUNCTION

BCM transmits a meter ring illumination request signal to the illumination meter when all the following operational conditions are satisfied. When receiving the meter ring illumination request signal from BCM via CAM communication, the combination meter increases illumination brightness of the combination meter to the set brightness level in stages. After a certain period of time, the meter illumination gradually dims to be turned OFF.


Operational condition	
Ignition switch	LOCK position
Driver side door	Open→Close *

*: Close the driver side door with the intelligent key left inside the vehicle.

SYSTEM

< SYSTEM DESCRIPTION >


Timing Chart

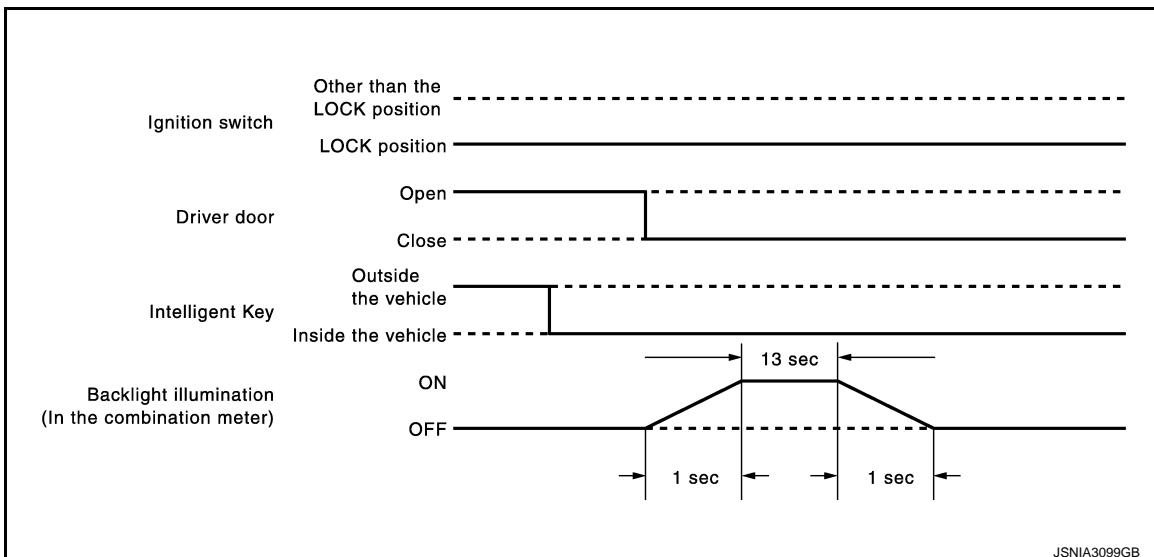

INFORMATION DISPLAY

INFORMATION DISPLAY : System Diagram

INFOID:0000000011257166

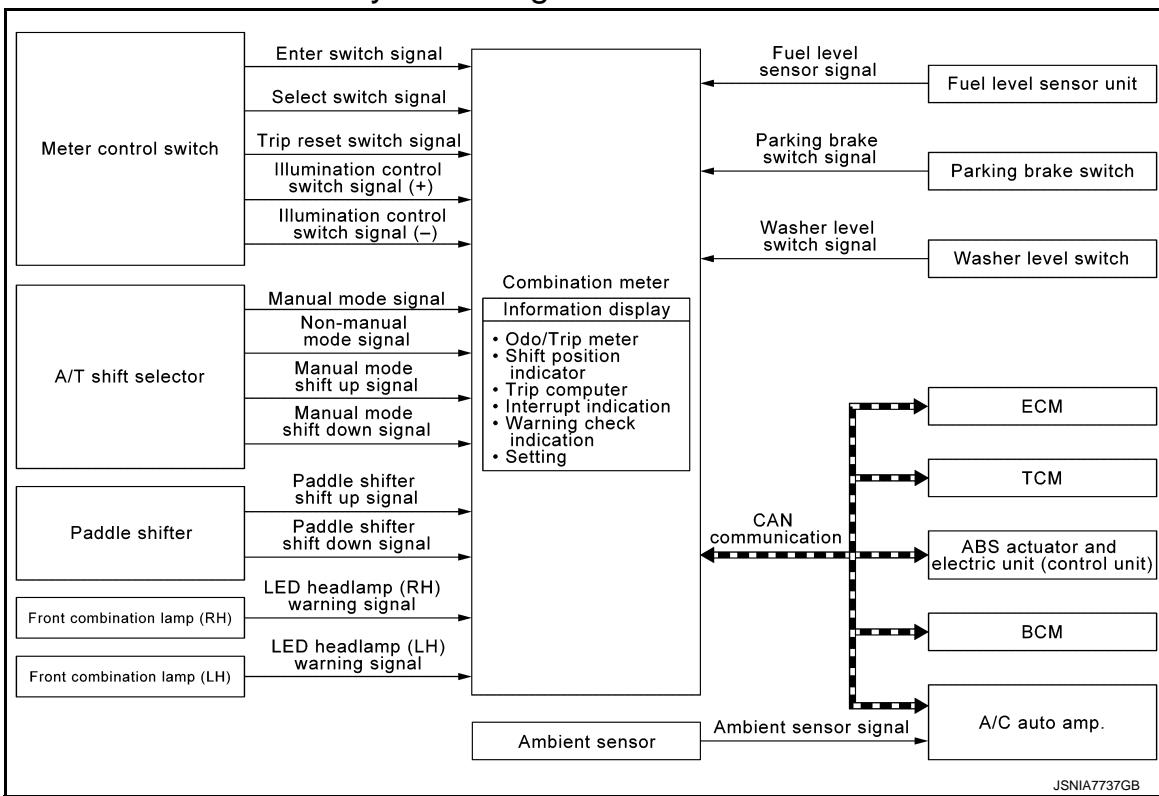

A
B
C
D
E
F
G
H
I
J
K
L
M
MWI

INFORMATION DISPLAY : System Description

INFOID:0000000011257167

DESCRIPTION

- The combination meter receives signals necessary for controlling the operation of the information display from each unit, sensor and switch.
- The combination meter incorporates a trip computer that displays the warning/information according to the information received from each unit, sensor and switch.
- The combination meter shows the following functions on the information display.
 - Odo/trip meter
 - Shift position indicator
 - Trip computer

O
P

SYSTEM

< SYSTEM DESCRIPTION >

- Interrupt indication
- Warning check indication
- Setting

ODO/TRIP METER

The combination meter calculates mileage, based on the following signals and displays the mileage on the information display.

Signal name	Signal path
Ignition signal	—
Vehicle speed signal	ABS actuator and electric unit (control unit)  Combination meter

SHIFT POSITION INDICATOR

Manual Mode

WHEN OPERATED WITH A/T SHIFT SELECTOR

1. The combination meter receives the following signal and transmits the signal to TCM via CAN communication.

Signal name	Signal path
Manual mode signal	A/T shift selector → Combination meter  TCM
Non-manual mode signal	
Manual mode shift up signal	
Manual mode shift down signal	

2. TCM judges a shift position and manual mode information, based on a signal received from the combination meter via CAN communication and transmits the following signals to the combination meter via CAN communication.

Signal name	Signal path
Shift position signal	TCM  Combination meter
Manual mode shift refusal signal	TCM  Combination meter

3. The combination meter activates the shift position indicator, and manual mode information, based on signals received from TCM via CAN communication.

NOTE:

When receiving a manual mode shift refusal signal from TCM via CAN communication, the combination meter blinks the shift position indicator lamp and allows the integrated buzzer to ring a beep tone. For further information, refer to [TM-54, "SHIFT PATTERN CONTROL : System Description"](#).

WHEN OPERATED WITH PADDLE SHIFTER

- The combination meter receives the following signal and transmits the signal to TCM via CAN communication.

Signal name	Signal path
Paddle shifter shift up signal	Paddle shifter → Combination meter  TCM
Paddle shifter shift down signal	

- TCM judges a shift position and manual mode information, based on a signal received from the combination meter via CAN communication and transmits the following signals to the combination meter via CAN communication.

Signal name	Signal path
Shift position signal	TCM  Combination meter
Manual mode shift refusal signal	TCM  Combination meter

SYSTEM

< SYSTEM DESCRIPTION >

- The combination meter activates the shift position indicator and manual mode information, based on signals received from TCM via CAN communication.

NOTE:

When receiving a manual mode shift refusal signal from TCM via CAN communication, the combination meter blinks the shift position indicator lamp and allows the integrated buzzer to ring a beep tone. For further information, refer to [TM-54. "SHIFT PATTERN CONTROL : System Description"](#).

Non-manual Mode

- Combination meter inputs non-manual mode signal from A/T shift selector (manual mode switch), and transmits the signals to TCM with CAN communication line.
- TCM transmits shift position signal to combination meter with CAN communication line.
- Combination meter indicates shift position when receiving shift position signal.

TRIP COMPUTER

Current Fuel Consumption

The combination meter calculates current fuel consumption based on the following signals, and the calculated value is displayed on the information display.

Signal name	Signal path
Ignition signal	—
Fuel consumption monitor signal	ECM  Combination meter
Vehicle speed signal	ABS actuator and electric unit (control unit)  Combination meter

NOTE:

- Current fuel consumption on the information display is updated approximately every 0.1 seconds.
- Current fuel consumption on the information display shows 0 l/100km (0 mpg) when vehicle speed is 0 km/h (0 MPH).

Average Fuel Consumption

The combination meter calculates average fuel consumption based on the following signals, and the calculated value is displayed on the information display.

Signal name	Signal path
Ignition signal	—
Fuel consumption monitor signal	ECM  Combination meter
Vehicle speed signal	ABS actuator and electric unit (control unit)  Combination meter

NOTE:

- Average fuel consumption on the information display is updated approximately every 30 seconds.
- Soon after a reset or when the ignition switch is turned ON right after battery removal and installation, “—” is displayed until after a travel of 30 seconds and approximately 500 m (0.31 mile).

Distance to Empty

The combination meter calculates distance to empty based on the following signals, and the calculated value is displayed on the information display.

Signal name	Signal path
Ignition signal	—
Fuel level sensor signal	Fuel level sensor unit  Combination meter
Fuel consumption monitor signal	ECM  Combination meter
Vehicle speed signal	ABS actuator and electric unit (control unit)  Combination meter

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

SYSTEM

< SYSTEM DESCRIPTION >

NOTE:

- Distance to empty on the information display is updated approximately every 30 seconds.
- When the ignition switch is turned from OFF to ON, “—” is displayed until after a travel of approximately 500 m (0.31 mile).
- The indicated values may not match each other when refueling with the ignition switch ON.

Average Vehicle Speed

The combination meter calculates average vehicle speed based on the following signals, and the calculated value is displayed on the information display.

Signal name	Signal path
Ignition signal	—
Vehicle speed signal	ABS actuator and electric unit (control unit)  Combination meter

NOTE:

- Average vehicle speed on the information display is updated approximately every 30 seconds.
- Soon after a reset or when the ignition switch is turned ON right after battery removal and installation, “—” is displayed until after a 30 seconds.

Travel Time

The combination meter measures and displays travel time (ignition switch ON time).

Travel Distance

The combination meter calculates mileage, based on the following signals and displays the mileage on the information display.

Signal name	Signal path
Ignition signal	—
Vehicle speed signal	ABS actuator and electric unit (control unit)  Combination meter

Ambient Temperature

The combination meter calculates ambient temperature based on the following signals, and the calculated value is displayed on the information display.

Signal name	Signal path
Ignition signal	—
Ambient sensor signal	Ambient sensor  A/C auto amp.  Combination meter
Vehicle speed signal	ABS actuator and electric unit (control unit)  Combination meter

NOTE:

- The indicated temperature is corrected based on an ignition signal, ambient temperature detected by the ambient sensor, and vehicle speed signal. The indicated temperature is not raised under vehicle speed less than 20 km/h (12 MPH).
- The ambient sensor input value that is displayed on “Data Monitor” of CONSULT is the value before the correction. It may not match the indicated temperature on the information display.
- Depending on engine heat or heat on the road surfaces, an ambient temperature may be indicated higher than actual one.

INTERRUPT INDICATION

- The combination meter displays an interrupt regarding a warning, alert, and maintenance on the information display, based on signals received from each unit and switch.
- When conditions are satisfied, the normal screen switches to a warning screen to display an interrupt.

Door Open Warning

- When all the following operating conditions are satisfied, the combination meter displays a door open warning on the information display by an interrupt.

SYSTEM

< SYSTEM DESCRIPTION >

Operating condition	
Ignition switch	ON
Door	Any door is open

- The combination meter judges showing/hiding of “door open warning”, according to the signals below:

Signal name	Signal path
Ignition signal	—
Door switch signal	Door switch → BCM → CAN → Combination meter

Trunk Open Warning

- When all the following operating conditions are satisfied, the combination meter displays a trunk open warning on the information display by an interrupt.

Operating condition	
Ignition switch	ON
Trunk	Open

- The combination meter judges showing/hiding of “trunk open warning”, according to the signals below:

Signal name	Signal path
Ignition signal	—
Trunk switch signal	Trunk room lamp switch → BCM → CAN → Combination meter

Parking Brake Release Warning

- When all the following operating conditions are satisfied, the combination meter displays a parking brake release warning on the information display by an interrupt.

Operating condition	
Ignition switch	ON
Parking brake	Applied
Vehicle speed	7 km/h (4.3 MPH) or more

- The combination meter judges showing/hiding of “parking brake release warning”, according to the signals below:

Signal name	Signal path
Ignition signal	—
Parking brake switch signal	Parking brake switch → Combination meter
Vehicle speed signal	ABS actuator and electric unit (control unit) → CAN → Combination meter

Low Fuel Warning

- When all the following operating conditions are satisfied, the combination meter displays a low fuel warning on the information display by an interrupt.

Operating condition	
Ignition switch	ON
Fuel remaining quantity*	Approximately 16 ℥ (4 - 1/4 US gal, 3 - 1/2 Imp gal) or less (including fuel remained)

*: With the vehicle in a horizontal position

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

SYSTEM

< SYSTEM DESCRIPTION >


- The combination meter judges showing/hiding of “low fuel warning”, according to the signals below:

Signal name	Signal path
Ignition signal	—
Fuel level sensor signal	Fuel level sensor → Combination meter

Low washer fluid warning

- When all the following operating conditions are satisfied, the combination meter displays a low washer fluid warning on the information display by an interrupt.

Operating condition	
Ignition switch	ON
Washer level switch	Decrease in fluid level (washer level switch ON for 180 seconds or more)

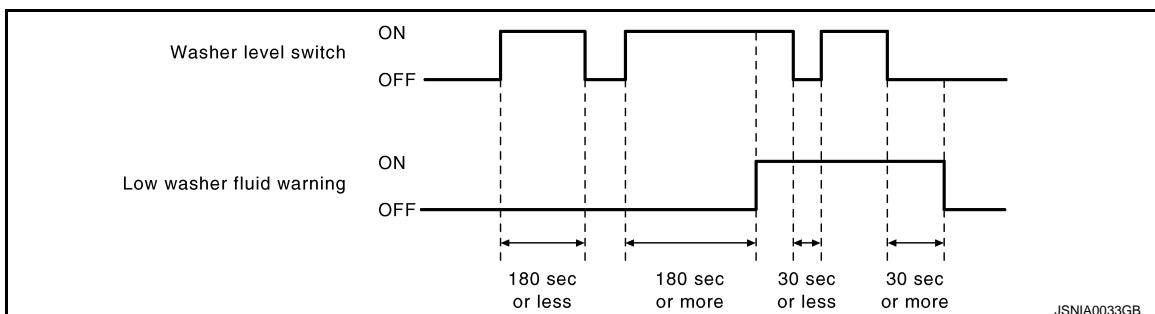

- The combination meter judges showing/hiding of “low washer fluid warning”, according to the signals below:

Signal name	Signal path
Ignition signal	—
Washer level switch signal	Washer level switch → Combination meter

Fuel Filler Cap Warning

- The combination meter judges showing/hiding of “fuel filler cap warning”, according to the signals below:

Signal name	Signal path
Ignition signal	—
Fuel filler cap warning display signal	ECM → CAN → Combination meter

- For further information, refer to [EC-53, "FUEL FILLER CAP WARNING SYSTEM : System Description"](#) (VQ37VHR) or [EC-588, "FUEL FILLER CAP WARNING SYSTEM : System Description"](#) (VK56VD).

Low Tire Pressure Warning

- The combination meter judges showing/hiding of “low tire pressure warning”, according to the signals below:

Signal name	Signal path
Ignition signal	—
Low tire pressure warning lamp signal	BCM → CAN → Combination meter

- For further information, refer to [WT-9, "System Description"](#).

Headlamp Warning

- The combination meter judges showing/hiding of “headlamp warning”, according to the signals below:

SYSTEM

< SYSTEM DESCRIPTION >

Signal name	Signal path	
Ignition signal	—	A
Low beam request signal	BCM → CAN → Combination meter	B
Headlamp warning signal	Front combination lamp → Combination meter	C

- For further information, refer to [EXL-14. "HEADLAMP SYSTEM : System Description".](#)

Travel Time (Alert)

- When all the following operating conditions are satisfied, the combination meter displays a travel time on the information display by an interrupt.

Operating condition		
Ignition switch	Switch-ON time	

- The combination meter judges showing/hiding of “travel time”, according to the signal below:

Signal name	Signal path	
Ignition signal	—	

Low Ambient Temperature (Alert)

- When all the following operating conditions are satisfied, the combination meter displays a low ambient temperature on the information display by an interrupt.

Operating condition		
Ignition switch	ON	
Ambient temperature	3 °C (37 °F) or less	
information display	“ON” is selected in “SETTING”	

- The combination meter judges showing/hiding of “low ambient temperature”, according to the signals below:

Signal name	Signal path	
Ignition signal	—	
Ambient sensor signal	Ambient sensor → A/C auto amp. → CAN → Combination meter	

Tire (Maintenance)

- When all the following operating conditions are satisfied, the combination meter displays a tire warning on the information display by an interrupt.

Operating condition		
Ignition switch	ON	
Mileage	More than value set in “SETTING”	

- The combination meter judges showing/hiding of “tire warning”, according to the signals below:

Signal name	Signal path	
Ignition signal	—	
Vehicle speed signal	ABS actuator and electric unit (control unit) → CAN → Combination meter	

Oil Filter (Maintenance)

- When all the following operating conditions are satisfied, the combination meter displays a oil filter warning on the information display by an interrupt.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

SYSTEM

< SYSTEM DESCRIPTION >

Operating condition	
Ignition switch	ON
Mileage	More than value set in "SETTING"

- The combination meter judges showing/hiding of "oil filter warning", according to the signals below:

Signal name	Signal path
Ignition signal	—
Vehicle speed signal	ABS actuator and electric unit (control unit)  Combination meter

Engine Oil (Maintenance)

- When all the following operating conditions are satisfied, the combination meter displays a engine oil warning on the information display by an interrupt.

Operating condition	
Ignition switch	ON
Mileage	More than value set in "SETTING"

- The combination meter judges showing/hiding of "engine oil warning", according to the signals below:

Signal name	Signal path
Ignition signal	—
Vehicle speed signal	ABS actuator and electric unit (control unit)  Combination meter

Other (Maintenance)

- When all the following operating conditions are satisfied, the combination meter displays a other warning on the information display by an interrupt.

Operating condition	
Ignition switch	ON
Mileage	More than value set in "SETTING"

- The combination meter judges showing/hiding of "other warning", according to the signals below:

Signal name	Signal path
Ignition signal	—
Vehicle speed signal	ABS actuator and electric unit (control unit)  Combination meter

Meter Illumination Level Indication

When receiving the following signals, the combination meter causes an interrupt on the information display to indicate an illumination level.

Signal name	Signal path
Ignition signal	—
Illumination control switch signal (+)	Meter control switch → Combination meter
Illumination control switch signal (-)	Meter control switch → Combination meter

WARNING CHECK INDICATION

- The combination meter can cause an interrupt on the information display to indicate a warning, based on signals received from each unit and switch.

SYSTEM

< SYSTEM DESCRIPTION >

- The indicated warning can be checked with “WARNING” during the satisfaction of an interrupt indication condition for each warning.

SETTING

Warning indication timing and time can be set.

Alert

Setting values for travel time, and low ambient temperature can be adjusted to meet the user's needs.

Setting item		Setting range	Setting unit
Alert	Timer	No setting, 0.5 h - 6 h	0.5 h
	ICY	ON/OFF	—

Maintenance

Setting values for engine oil, oil filter, tire, and other maintenance items can be adjusted to meet the user's needs.

Setting item		Setting range
Maintenance	Engine oil	No setting, 500 km - 30,000 km (No setting, 250 mile - 18,500 mile)
	Oil filter	No setting, 500 km - 30,000 km (No setting, 250 mile - 18,500 mile)
	Tire	No setting, 500 km - 30,000 km (No setting, 250 mile - 18,500 mile)
	Other	No setting, 500 km - 30,000 km (No setting, 250 mile - 18,500 mile)

Options

Setting values for language, unit, and effect items can be adjusted to meet the user's needs.

Setting item		
Options	Language	ENGLISH
		FRANCAISE
	Unit	miles, MPG, °F
		km, l/100 km, °C
	Effect	ON/OFF

Settings-reject Indication


- Regarding settings-reject indications, “SETTING CAN BE OPERATED WHEN STOPPED” is shown on the information display when indication conditions are satisfied.
- When reaching 5 km/h (3.1 MPH) after accelerating from a stopping condition, a settings-reject indication is displayed.
- When reaching less than 1 km/h (0.6 MPH) after decelerating from 5 km/h (3.1 MPH), a settings-reject indication is cancelled to allow settings.
- The combination meter judges a vehicle condition based on the following signals and displays a settings-reject indication on the information display.

Signal name	Signal path
Ignition signal	—
Vehicle speed signal	ABS actuator and electric unit (control unit)  Combination meter

SYSTEM

< SYSTEM DESCRIPTION >

TIMING CHART

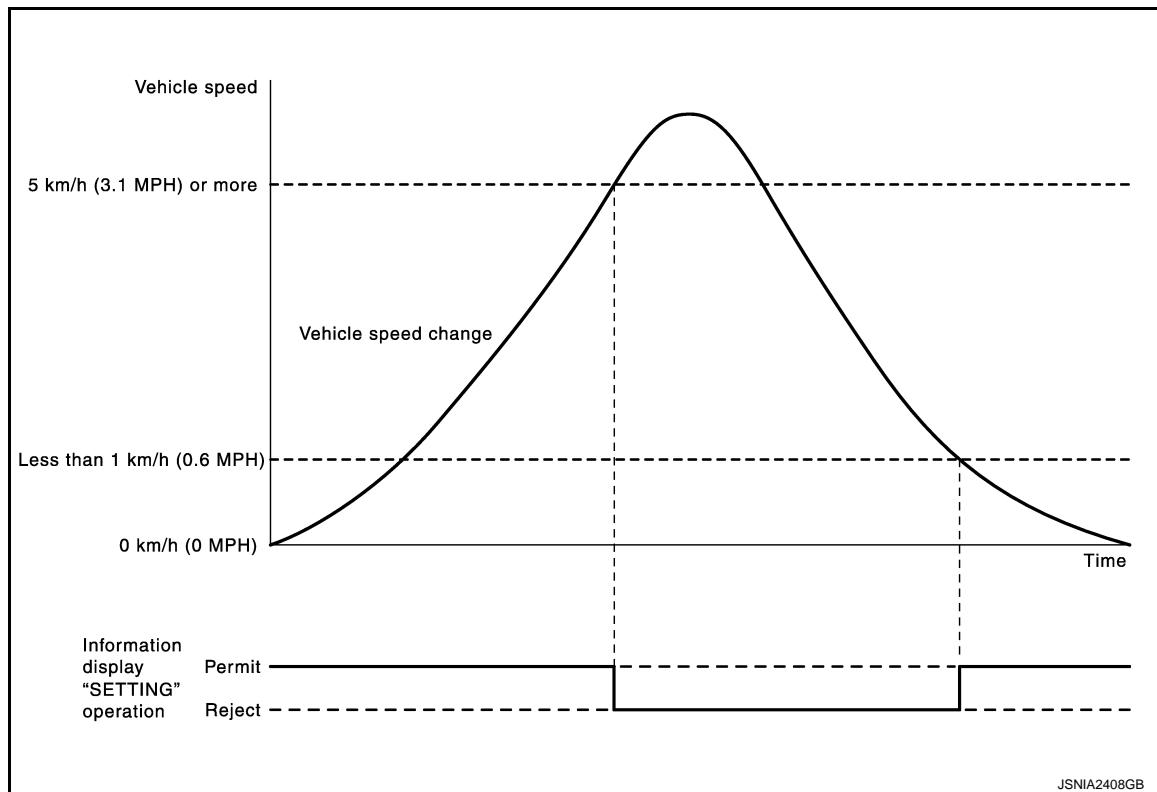


OPERATION

< SYSTEM DESCRIPTION >

OPERATION

Switch Name and Function

INFOID:0000000011257168

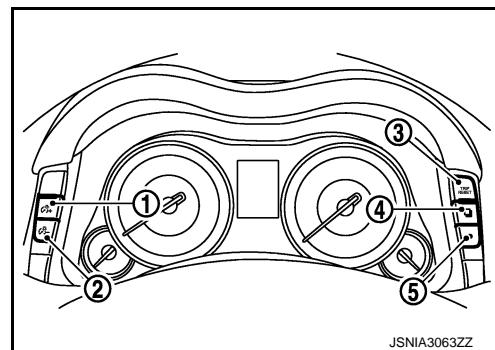

JSNIA3063ZZ

	Switch name	Operation	Description
Meter control switch	Illumination control switch (+) (1)	Press	An illuminance level of the back light of the combination meter can be adjusted.
	Illumination control switch (-) (2)		
	Trip reset switch (3)		<ul style="list-style-type: none">The trip meter can be switched between A and B.Trip meter A/B can be reset by pressing and holding the trip reset switch.
	Enter switch (4)		<ul style="list-style-type: none">The information display screen can be switched.The item indicated on the information display can be confirmed.
	Select switch (5)		When plural items are shown on the information display, a selected item can be changed to the other item.

A
B
C
D
E
F
G
H
I
J
K
L
M
MWI
O
P

DIAGNOSIS SYSTEM (COMBINATION METER)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (COMBINATION METER)

On Board Diagnosis Function

INFOID:0000000011257169


ON BOARD DIAGNOSIS ITEM

The combination meter allows the following diagnosis items with the on-board diagnosis function.

Diagnosis item	
Drive circuit check	<ul style="list-style-type: none">• Speedometer• Tachometer• Engine coolant temperature gauge• Fuel gauge
LCD (liquid crystal display) check	Information display


METHOD OF STARTING

1. Turn ignition switch OFF.
2. While pressing the trip reset switch (1), turn ignition switch ON.
3. If the diagnosis function is activated with "trip A" displayed, the mileage on "trip A" is reset to "0000.0". (The same way for "trip B".)

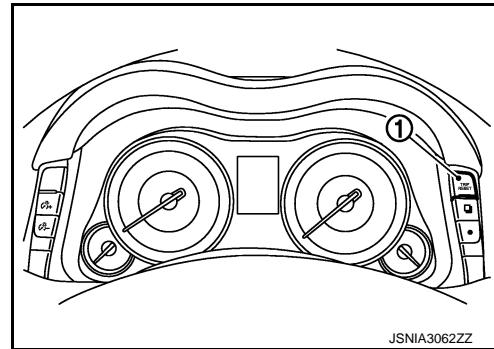

JSNIA3062ZZ

4. Make sure that the trip meter displays "0000.0".
5. Press the trip reset switch at least 3 times. (Within 7 seconds after the ignition switch is turned ON.)
6. The combination meter is turned to self-diagnosis mode.
 - Speedometer, tachometer, engine coolant temperature gauge, fuel gauge, and return to zero, simultaneously.
 - The dot matrix dots on the information display (1) blink alternately.

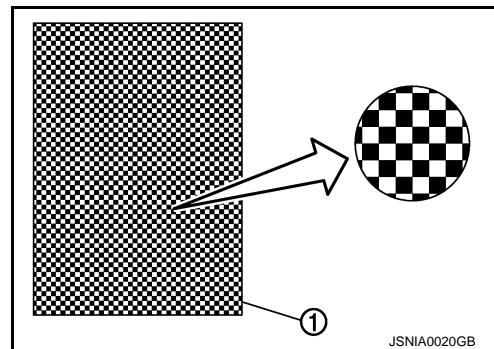

JSNIA0020GB


NOTE:

- Check the following items when the self-diagnosis mode of the combination meter does not start.
Replace combination meter if the following items are normal.
 - Combination meter power supply and ground circuit.
 - Meter control switch signal circuit (trip reset switch signal circuit) and meter control switch.
 - If any of the dots are not displayed, replace combination meter.

DIAGNOSIS SYSTEM (COMBINATION METER)

< SYSTEM DESCRIPTION >

7. Each meter activates by pressing the trip reset switch.

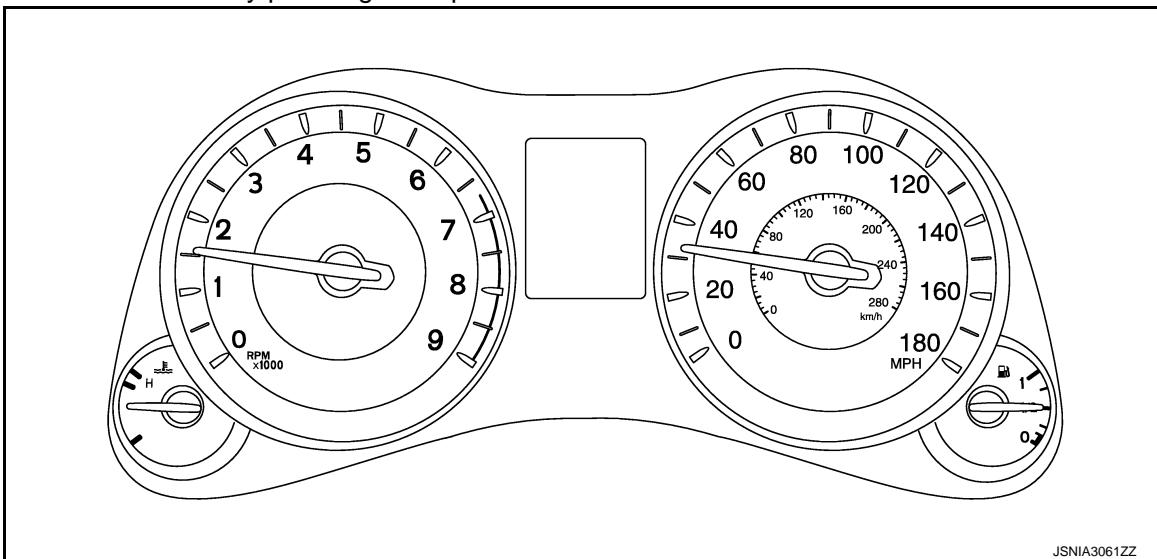

NOTE:

- If any of the meters or gauges is not activated, replace combination meter.
- The figure is reference.

CONSULT Function

INFOID:0000000011257170

CONSULT APPLICATION ITEMS

CONSULT can perform the following diagnosis modes via CAN communication and the combination meter.

System	Diagnosis mode	Description
METER/M&A	Self Diagnostic Result	The combination meter checks the conditions and displays memorized errors.
	Data Monitor	Displays the combination meter input/output data in real time.
	Warning History	Lighting history of the warning lamp and indicator lamp can be checked.

SELF DIAG RESULT

Refer to [MWI-45, "DTC Index"](#).

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Display Item List

X: Applicable

Display item [Unit]	MAIN SIGNALS	Description
SPEED METER [km/h]	X	Value of vehicle speed signal received from ABS actuator and electric unit (control unit) via CAN communication. NOTE: 655.35 is displayed when the malfunction signal is received.
SPEED OUTPUT [km/h]	X	Vehicle speed signal value transmitted to other units via CAN communication. NOTE: 655.35 is displayed when the malfunction signal is received.
ODO OUTPUT [km/h or mph]		Odometer signal value transmitted to other units via CAN communication.
TACHO METER [rpm]	X	Value of the engine speed signal received from ECM via CAN communication. NOTE: 8191.875 is displayed when the malfunction signal is received.
FUEL METER [L]	X	Fuel level indicated on combination meter.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

DIAGNOSIS SYSTEM (COMBINATION METER)

< SYSTEM DESCRIPTION >

Display item [Unit]	MAIN SIGNALS	Description
W TEMP METER [°C]	X	<p>Value of engine coolant temperature signal is received from ECM via CAN communication.</p> <p>NOTE: 215 is displayed when the malfunction signal is input.</p>
ABS W/L [On/Off]		Status of ABS warning lamp detected from ABS warning lamp signal is received from ABS actuator and electric unit (control unit) via CAN communication.
VDC/TCS IND [On/Off]		Status of VDC OFF indicator lamp detected from VDC OFF indicator lamp signal is received from ABS actuator and electric unit (control unit) via CAN communication.
SLIP IND [On/Off]		Status of VDC warning lamp detected from VDC warning lamp signal received from ABS actuator and electric unit (control unit) via CAN communication.
BRAKE W/L [On/Off]		<p>Status of brake warning lamp detected from brake warning lamp signal is received from ABS actuator and electric unit (control unit) via CAN communication.</p> <p>NOTE: Displays "Off" if the brake warning lamp is illuminated when the valve check starts, the parking brake switch is turned ON or the brake fluid level switch is turned ON.</p>
DOOR W/L [On/Off]		Status of door open warning detected from door switch signal received from BCM via CAN communication.
TRUNK/GLAS-H [On/Off]		Status of trunk open warning detected from trunk switch signal received from BCM via CAN communication.
HI-BEAM IND [On/Off]		Status of high beam indicator lamp detected from high beam request signal is received from BCM via CAN communication.
TURN IND [On/Off]		Status of turn indicator lamp detected from turn indicator signal is received from BCM via CAN communication.
FR FOG IND [On/Off]		Status of front fog light indicator lamp detected from front fog light request signal is received from BCM via CAN communication.
LIGHT IND [On/Off]		Status of light indicator lamp detected from position light request signal is received from BCM via CAN communication.
OIL W/L [On/Off]		<ul style="list-style-type: none"> • Status of oil pressure warning lamp detected from oil pressure switch signal is received from BCM via CAN communication. (VQ37VHR engine models) • Status of oil pressure warning lamp detected from oil pressure warning lamp signal is received from ECM via CAN communication. (VK56VD engine models)
MIL [On/Off]		Status of malfunction indicator lamp detected from malfunctioning indicator lamp signal is received from ECM via CAN communication.
GLOW IND [Off]		<p>NOTE:</p> <p>This item is displayed, but cannot be monitored.</p>
CRUISE IND [On/Off]		<ul style="list-style-type: none"> • Status of CRUISE indicator detected from ASCD status signal is received from ECM via CAN communication. (ASCD models) • Status of CRUISE indicator detected from meter display signal is received from ADAS control unit via CAN communication. (ICC models)
SET IND [On/Off]		<ul style="list-style-type: none"> • Status of SET indicator detected from ASCD status signal is received from ECM via CAN communication. (ASCD models) • Status of SET indicator detected from meter display signal is received from ADAS control unit via CAN communication. (ICC models)
CRUISE W/L [On/Off]		Status of ICC warning lamp detected from ICC warning lamp signal is received from ADAS control unit via CAN communication.
BA W/L [Off]		<p>NOTE:</p> <p>This item is displayed, but cannot be monitored.</p>
ATC/T-AMT W/L [On/Off]		Status of A/T CHECK warning lamp judged from A/T CHECK indicator lamp signal received from TCM with CAN communication line.
4WD W/L [On/Off]		Status of AWD warning lamp judged from AWD warning lamp signal received from AWD control unit with CAN communication line.
FUEL W/L [On/Off]		Low fuel warning status detected by the identified fuel level.

DIAGNOSIS SYSTEM (COMBINATION METER)

< SYSTEM DESCRIPTION >

Display item [Unit]	MAIN SIGNALS	Description
WASHER W/L [On/Off]		Status of low washer fluid warning judged from washer level switch input to combination meter.
AIR PRES W/L [On/Off]		Status of low tire pressure warning lamp judged from low tire pressure warning lamp signal received from BCM with CAN communication line.
KEY G/Y W/L [On/Off]		Status of Intelligent Key system malfunction detected from Intelligent Key warning display signal is received from BCM via CAN communication.
AFS OFF IND [On/Off]		Status of AFS OFF indicator lamp judged from AFS OFF indicator lamp signal received from AFS control unit with CAN communication line.
4WAS/RAS W/L [Off]		NOTE: This item is displayed, but cannot be monitored.
LANE W/L [On/Off]		Status of lane departure warning lamp judged from lane departure warning lamp signal received from ADAS control unit with CAN communication line.
LDP IND [On/Off]		Status of LDP ON indicator lamp judged from LDP ON indicator lamp signal received from ADAS control unit with CAN communication line.
LCD [B&P N, B&P I, ID NG, ROTAT, SFT P, INSRT, BATT, NO KY, OUTKY, LK WN]		Displays status of Intelligent Key system warning judged from meter display signal received from BCM with CAN communication line.
ACC TARGET [On/Off]		Status of vehicle ahead detection indicator judged from meter display signal received from ADAS control unit with CAN communication line.
ACC DISTANCE [Off, Short, Middle, Long]		Status of set distance indicator judged from meter display signal received from ADAS control unit with CAN communication line.
ACC OWN VHL [On/Off]		Status of own vehicle indicator judged from meter display signal received from ADAS control unit with CAN communication line.
ACC SET SPEED [On/Off]		Status of set vehicle speed indicator judged from meter display signal received from ADAS control unit with CAN communication line.
ACC UNIT [km/h/Off]		Status of display unit judged from meter display signal received from ADAS control unit with CAN communication line.
SHIFT IND [P, R, N, D, M1, M2, M3, M4, M5, M6, M7]		Status of shift position indicator judged from shift position signal received from TCM with CAN communication line.
ECO DRIVE IND G [On/Off]		Status of ECO drive indicator (green) judged from ECO drive indicator control signal received from ECM with CAN communication line.
ECO DRIVE IND O [On/Off]		Status of ECO drive indicator (orange) judged from ECO drive indicator control signal received from ECM with CAN communication line.
BSW IND [On/Off]		Status of Blind Spot Intervention ON indicator (green) judged from Blind Spot Intervention ON indicator signal received from ADAS control unit with CAN communication line.
BSW W/L [On/Off]		Status of BSW/Blind Spot Intervention warning lamp (yellow) judged from BSW/Blind Spot Intervention warning lamp signal received from ADAS control unit with CAN communication line.
FUEL CAP W/L [On/Off]		Status of fuel filler cap warning display detected from fuel filler cap warning display signal received from ECM via CAN communication.
DRIVE MODE STATS [SNOW, SN-EC, ECO, EC-ST, STD, ST-SP, SPORT, ERROR]		Status of drive mode select switch.
M RANGE SW [On/Off]		Status of manual mode switch.
NM RANGE SW [On/Off]		Status of non-manual mode switch.
AT SFT UP SW [On/Off]		Status of manual mode shift up switch.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

DIAGNOSIS SYSTEM (COMBINATION METER)

< SYSTEM DESCRIPTION >

Display item [Unit]	MAIN SIGNALS	Description
AT SFT DWN SW [On/Off]		Status of manual mode shift down switch.
ST SFT UP SW [On/Off]		Status of paddle shifter shift up switch.
ST SFT DWN SW [On/Off]		Status of paddle shifter shift down switch.
PKB SW [On/Off]		Status of parking brake switch.
BUCKLE SW [On/Off]		Status of seat belt buckle switch (driver side).
BRAKE OIL SW [On/Off]		Status of brake fluid level switch.
ENTER SW [On/Off]		Status of □ (ENTER) switch.
SELECT SW [On/Off]		Status of ● (SELECT) switch.
LED LMP R OPEN [On/Off]		Status of front combination lamp RH judged based on LED headlamp (RH) warning signal input from front combination lamp RH.
LED LMP L OPEN [On/Off]		Status of front combination lamp LH judged based on LED headlamp (LH) warning signal input from front combination lamp LH.
DISTANCE [km]		Value of distance to empty calculated by combination meter.
OUTSIDE TEMP [°C or °F]		Ambient temperature value converted from ambient sensor signal received from ambient sensor. NOTE: This may not match with the temperature value indicated on the information display. (Because the information display value is a corrected value from the ambient sensor input value.)
FUEL LOW SIG [On/Off]		Status of fuel level low warning signal to output to AV control unit via CAN communication.
BUZZER [On/Off]	X	Buzzer status (in the combination meter) is detected from the buzzer output signal received from each unit via CAN communication and the warning output condition of the combination meter.
FR RADAR WARN [On/Off]		Status of front radar warning judged from front radar warning signal received from ADAS control unit with CAN communication line.
BCI ON IND [On/Off]		Status of BCI ON indicator judged from meter display signal received from ADAS control unit with CAN communication line.
BCI OFF IND [On/Off]		Status of BCI OFF indicator judged from meter display signal received from ADAS control unit with CAN communication line.
BCI WARNING IND [On/Off]		Status of BCI malfunction indicator judged from meter display signal received from ADAS control unit with CAN communication line.
BCI HI TEMP WARN IND [On/Off]		Status of BCI not available indicator judged from meter display signal received from ADAS control unit with CAN communication line.
FEB W/L [On/Off]		Status of FEB indicator lamp judged from FEB warning lamp signal received from ADAS control unit with CAN communication line.
FEB WARN [On/Off]		Status of FEB warning judged from meter display signal received from ADAS control unit with CAN communication line.

NOTE:

Some items are not available according to vehicle specification.

Warning History

- Stores histories when warning/indicator lamp is turned on.
- "Warning History" indicates the "TIME" when the warning/ indicator lamp is turned on.
- The "TIME" above is:

DIAGNOSIS SYSTEM (COMBINATION METER)

< SYSTEM DESCRIPTION >

- 0: The condition that the warning/indicator lamp has been turned on 1 or more times after starting the engine and waiting for 30 seconds.
- 1 - 39: The number of times the engine was restarted after the 0 condition.
- NO Warning History: Stores NO (0) turning on history of warning/indicator lamp.

NOTE:

- Warning History is not stored for approximately 30 seconds after the engine starts.
- Brake warning lamp does not store any history when the parking brake is applied or the brake fluid level gets low.

Display Item

Display item	Description
ABS W/L	Lighting history of ABS warning lamp.
VDC/TCS IND	Lighting history of VDC OFF indicator lamp.
SLIP IND	Lighting history of VDC warning lamp.
BRAKE W/L	Lighting history of brake warning lamp.
DOOR W/L	Lighting history of door open warning.
TRUNK/GLAS-H	Lighting history of trunk open warning.
OIL W/L	Lighting history of oil pressure warning lamp.
C-ENG W/L	Lighting history of malfunction indicator lamp.
CRUISE IND	Lighting history of CRUISE indicator.
SET IND	Lighting history of SET indicator.
CRUISE W/L	Lighting history of ICC warning lamp.
ATC/T-AMT W/L	Lighting history of A/T CHECK warning lamp.
4WD W/L	Lighting history of AWD warning lamp.
FUEL W/L	Lighting history of low fuel level warning.
WASHER W/L	Lighting history of low washer fluid warning.
AIR PRES W/L	Lighting history of low tire pressure warning lamp.
KEY G/Y W/L	Lighting history of Intelligent Key system malfunction.
AFS OFF IND	Lighting history of AFS OFF indicator lamp.
4WAS/RAS W/L	Lighting history of 4WAS warning lamp.
LANE W/L	Lighting history of lane departure warning lamp.
BSW W/L	Lighting history of BSW/Blind Spot Intervention warning lamp (yellow).

NOTE:

In items displayed on the CONSULT screen, only those listed in the above table are used.

A

B

C

D

E

F

G

H

I

J

K

L

MWI

O

P

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

ECU DIAGNOSIS INFORMATION

COMBINATION METER

Reference Value

INFOID:0000000011257171

VALUES ON THE DIAGNOSIS TOOL

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item	Condition		Value/Status
SPEED METER [km/h]	Ignition switch ON	While driving	Input value of vehicle speed signal (CAN communication signal) NOTE: 655.35 is displayed when the malfunction signal is received
SPEED OUTPUT [km/h]	Ignition switch ON	While driving	Output value of vehicle speed signal (CAN communication signal) NOTE: 655.35 is displayed when the malfunction signal is received
ODO OUTPUT [km/h or mph]	Ignition switch ON	—	Output value of odometer signal (CAN communication signal)
TACHO METER [rpm]	Ignition switch ON	Engine running	Input value of engine speed signal (CAN communication signal) NOTE: 8191.875 is displayed when the malfunction signal is received
FUEL METER [L]	Ignition switch ON	—	Input value of fuel level sensor signal
W TEMP METER [°C]	Ignition switch ON	—	Input value of engine coolant temperature signal (CAN communication signal) NOTE: 215 is displayed when the malfunction signal is input
ABS W/L	Ignition switch ON	ABS warning lamp ON ABS warning lamp OFF	On Off
VDC/TCS IND	Ignition switch ON	VDC OFF indicator lamp ON VDC OFF indicator lamp OFF	On Off
SLIP IND	Ignition switch ON	VDC warning lamp ON VDC warning lamp OFF	On Off
BRAKE W/L	Ignition switch ON	Brake warning lamp ON Brake warning lamp OFF	On Off
DOOR W/L	Ignition switch ON	Door open warning ON Door open warning OFF	On Off
TRUNK/GLAS-H	Ignition switch ON	Trunk open warning ON Trunk open warning OFF	On Off
HI-BEAM IND	Ignition switch ON	High-beam indicator lamp ON High-beam indicator lamp OFF	On Off
TURN IND	Ignition switch ON	Turn signal indicator lamp ON Turn signal indicator lamp OFF	On Off

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition		Value/Status
FR FOG IND	Ignition switch ON	Front fog lamp indicator lamp ON	On
		Front fog lamp indicator lamp OFF	Off
LIGHT IND	Ignition switch ON	Light indicator lamp ON	On
		Tail lamp indicator lamp OFF	Off
OIL W/L	Ignition switch ON	Oil pressure warning lamp ON	On
		Oil pressure warning lamp OFF	Off
MIL	Ignition switch ON	Malfunction indicator lamp ON	On
		Malfunction indicator lamp OFF	Off
GLOW IND	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
CRUISE IND	Ignition switch ON	CRUISE indicator ON	On
		CRUISE indicator OFF	Off
SET IND	Ignition switch ON	SET indicator ON	On
		SET indicator OFF	Off
CRUISE W/L	Ignition switch ON	CRUISE warning lamp ON	On
		CRUISE warning lamp OFF	Off
BA W/L	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
ATC/T-AMT W/L	Ignition switch ON	A/T check warning lamp ON	On
		A/T check warning lamp OFF	Off
4WD W/L	Ignition switch ON	AWD warning lamp ON	On
		AWD warning lamp OFF	Off
FUEL W/L	Ignition switch ON	During low fuel warning indication	On
		Other than the above	Off
WASHER W/L	Ignition switch ON	During low washer fluid warning indication	On
		Other than the above	Off
AIR PRES W/L	Ignition switch ON	Low tire pressure warning lamp ON	On
		Low tire pressure warning lamp OFF	Off
KEY G/Y W/L	Ignition switch ON	During Intelligent Key system malfunction indication	On
		Other than the above	Off
AFS OFF IND	Ignition switch ON	AFS OFF indicator lamp ON	On
		AFS OFF indicator lamp OFF	Off
4WAS/RAS W/L	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
LANE W/L	Ignition switch ON	Lane departure warning lamp ON	On
		Lane departure warning lamp OFF	Off
LDP IND	Ignition switch ON	LDP ON indicator lamp ON	On
		LDP ON indicator lamp OFF	Off

A
 B
 C
 D
 E
 F
 G
 H
 I
 J
 K
 L
 M
 MWI
 O
 P

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition		Value/Status
LCD	Ignition switch ON	During engine start information indication	B&P I
	Ignition switch ACC	During engine start information indication	B&P N
	Ignition switch LOCK	During key ID warning indication	ID NG
	Ignition switch LOCK	During steering lock information indication	ROTAT
	Ignition switch LOCK	During P position warning indication	SFT P
	Ignition switch LOCK	During Intelligent Key insert information indication	INSRT
	Ignition switch LOCK	During Intelligent Key low battery warning indication	BATT
	Ignition switch ON	During take away warning indication	NO KY
	Ignition switch LOCK	During key warning indication	OUTKY
	Ignition switch ON	During ACC warning indication	LK WN
ACC TARGET	Ignition switch ON	During vehicle ahead detection indicator indication	On
		Other than the above	Off
ACC DISTANCE	Ignition switch ON	When following distance set to "LONG"	LONG
		When following distance set to "MIDDLE"	MID
		When following distance set to "SHORT"	SHORT
		Set distance indicator not displayed	Off
ACC OWN VHL	Ignition switch ON	During own vehicle indicator indication	On
		Other than the above	Off
ACC SET SPEED	Ignition switch ON	During set vehicle speed indicator not displayed	Off
		During set vehicle speed indicator displayed	Indicates the set vehicle speed
ACC UNIT	Ignition switch ON	Set vehicle speed indicator unit display ON	On
		Set vehicle speed indicator unit display OFF	Off

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status	
SHIFT IND	Ignition switch ON	During the indication of "P" by shift position indicator	P
		During the indication of "R" by shift position indicator	R
		During the indication of "N" by shift position indicator	N
		During the indication of "D" by shift position indicator	D
		During the indication of "M1" by shift position indicator	M1
		During the indication of "M2" by shift position indicator	M2
		During the indication of "M3" by shift position indicator	M3
		During the indication of "M4" by shift position indicator	M4
		During the indication of "M5" by shift position indicator	M5
		During the indication of "M6" by shift position indicator	M6
		During the indication of "M7" by shift position indicator	M7
ECO DRIVE IND G	Ignition switch ON	ECO drive indicator (green) ON	On
		ECO drive indicator (green) OFF	Off
ECO DRIVE IND O	Ignition switch ON	ECO drive indicator (orange) ON	On
		ECO drive indicator (orange) OFF	Off
BSW IND	Ignition switch ON	Blind Spot Intervention ON indicator (green) ON	On
		Blind Spot Intervention ON indicator (green) OFF	Off
BSW W/L	Ignition switch ON	BSW/Blind Spot Intervention warning lamp (yellow) ON	On
		BSW/Blind Spot Intervention warning lamp (yellow) OFF	Off
FUEL CAP W/L	Ignition switch ON	Fuel filler cap warning display ON	On
		Fuel filler cap warning display OFF	Off
DRIVE MODE STATS	Ignition switch ON	Drive mode select switch in SNOW position	SNOW
		Drive mode select switch in between SNOW and ECO position	SN-EC
		Drive mode select switch in ECO position	ECO
		Drive mode select switch in between ECO and ● (STANDARD mode)	EC-ST
		Drive mode select switch ● (STANDARD mode) position	STD
		Drive mode select switch in between ● (STANDARD mode) and SPORT	ST-SP
		Drive mode select switch in SPORT position	SPORT
		Reception of an abnormal signal other than those above	ERROR

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition		Value/Status
M RANGE SW	Ignition switch ON	Selector lever in manual mode position	On
		Other than the above	Off
NM RANGE SW	Ignition switch ON	Selector lever in manual mode position	Off
		Other than the above	On
AT SFT UP SW	Ignition switch ON	Selector lever in + position	On
		Other than the above	Off
AT SFT DWN SW	Ignition switch ON	Selector lever in – position	On
		Other than the above	Off
ST SFT UP SW	Ignition switch ON	Paddle shifter in + position	On
		Other than the above	Off
ST SFT DWN SW	Ignition switch ON	Paddle shifter in – position	On
		Other than the above	Off
PKB SW	Ignition switch ON	Parking brake switch ON	On
		Parking brake switch OFF	Off
BUCKLE SW	Ignition switch ON	Driver seat belt not fastened	On
		Driver seat belt fastened	Off
BRAKE OIL SW	Ignition switch ON	Brake fluid level switch ON	On
		Brake fluid level switch OFF	Off
ENTER SW	Ignition switch ON	When  switch (enter switch) is pressed	On
		Other than above	Off
SELECT SW	Ignition switch ON	When  switch (select switch) is pressed	On
		Other than above	Off
LED LMP R OPEN	Power switch ON	Front combination lamp RH malfunction	On
		Front combination lamp RH normal	Off
LED LMP L OPEN	Power switch ON	Front combination lamp LH malfunction	On
		Front combination lamp LH normal	Off
DISTANCE [km]	Ignition switch ON	—	Distance to empty calculated by combination meter
OUTSIDE TEMP [°C or °F]	Ignition switch ON	—	Input value of ambient sensor signal (CAN communication signal) NOTE: This may not match the indicated value on the information display.
FUEL LOW SIG	Ignition switch ON	During low fuel warning indication	On
		Other than above	Off
BUZZER	Ignition switch ON	Buzzer ON	On
		Buzzer OFF	Off
FR RADAR WARN	Ignition switch ON	During front radar warning indication	On
		Other than above	Off
BCI ON IND	Ignition switch ON	During BCI ON indicator indication	On
		Other than above	Off
BCI OFF IND	Ignition switch ON	During BCI OFF indicator indication	On
		Other than above	Off
BCI WARNING IND	Ignition switch ON	During BCI malfunction indicator indication	On
		Other than above	Off

COMBINATION METER


< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition		Value/Status
BCI HI TEMP WARN IND	Ignition switch ON	During BCI not available indicator indication	On
		Other than above	Off
FEB W/L	Ignition switch ON	FEB indicator lamp ON	On
		FEB indicator lamp OFF	Off
FEB WARN	Ignition switch ON	During FEB warning indication	On
		Other than above	Off

NOTE:

Some items are not available according to vehicle specification.


TERMINAL LAYOUT

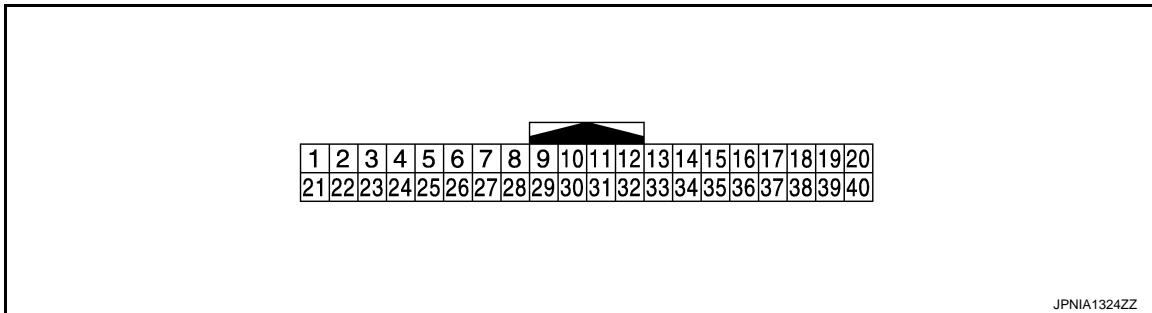

PHYSICAL VALUES


Terminal No. (Wire color)	Description			Condition	Value (Approx.)
	+	-	Signal name		
1 (W)	Ground	Battery power supply	Input	Ignition switch OFF	—
2 (BG)	Ground	Ignition signal	Input	Ignition switch ON	—
3 (GR)	Ground	Vehicle speed signal (2-pulse)	Output	Ignition switch ON	Speedometer operated [When vehicle speed is approx. 40 km/h (25 MPH)]
4 (R)	Ground	Vehicle speed signal (8-pulse)	Output	Ignition switch ON	Speedometer operated [When vehicle speed is approx. 40 km/h (25 MPH)]

NOTE:
The maximum voltage varies depending on the specification (destination unit).

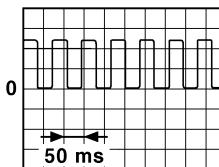

JSNIA0015GB



NOTE:
The maximum voltage varies depending on the specification (destination unit).

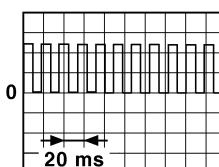

JSNIA0012GB


COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

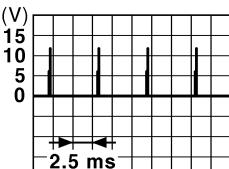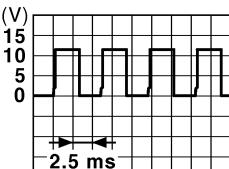Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
5 (B)	Ground	Illumination control signal	Output	Ignition switch ON	<ul style="list-style-type: none"> • Lighting switch 1ST position • When meter illumination is maximum  JPNIA1687GB
					<ul style="list-style-type: none"> • Lighting switch 1ST position • When meter illumination is step 11  JPNIA1686GB
					<ul style="list-style-type: none"> • Lighting switch 1ST position • When meter illumination is minimum 12 V
7 (SB)	6 (B)	Enter switch signal	Input	Ignition switch ON	When  switch (enter switch) is pressed
					5 V
8 (LG)	6 (B)	Select switch signal	Input	Ignition switch ON	When  switch (select switch) is pressed
					5 V
9 (G)	6 (B)	Illumination control switch signal (+)	Input	Ignition switch ON	When  switch [illumination control switch (+)] is pressed
					5 V
10 (GR)	6 (B)	Illumination control switch signal (-)	Input	Ignition switch ON	When  switch [illumination control switch (-)] is pressed
					5 V
11 (L)	6 (B)	Trip reset switch signal	Input	Ignition switch ON	When trip reset switch is pressed
					5 V
12 (B)	Ground	Ground	—	Ignition switch ON	—
14 (L)	—	CAN-H	—	—	—
15 (P)	—	CAN-L	—	—	—
16 (R)	Ground	Air bag signal	Input	Ignition switch ON	Air bag warning lamp ON
					3 V
17 (G)	Ground	LED headlamp (RH) warning signal	Input	Ignition switch ON	Air bag warning lamp OFF
					0 V
					Headlamp warning ON
					1.0 V
					Headlamp warning OFF
					12 V

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

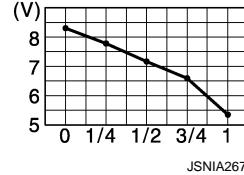Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
18 (V)	Ground	LED headlamp (LH) warning signal	Input	Ignition switch ON	Headlamp warning ON	1.0 V
					Headlamp warning OFF	12 V
23 (B)	Ground	Ground	—	Ignition switch ON	—	0 V
25 (W)	Ground	Alternator signal	Input	Ignition switch ON	Charge warning lamp ON	2 V
					Charge warning lamp OFF	Battery voltage
26 (V)	Ground	Parking brake switch signal	Input	Ignition switch ON	Parking brake applied	0 V
					Parking brake released	12 V
27 (V)	Ground	Brake fluid level switch signal	Input	Ignition switch ON	Brake fluid level is normal	12 V
					The brake fluid level is lower than the low level	0 V
28 (G)	Ground	Security signal	Input	Ignition switch ON	Security indicator lamp ON	0 V
					Security indicator lamp OFF	12 V
29 (L)	Ground	Washer level switch signal	Input	Ignition switch ON	Washer level switch ON	0 V
					Washer level switch OFF	5 V
32 (G)	Ground	Paddle shifter shift down signal	Input	Ignition switch ON	Paddle shifter shift down operation	0 V
					Other than the above	12 V
33 (BG)	Ground	Paddle shifter shift up signal	Input	Ignition switch ON	Paddle shifter shift up operation	0 V
					Other than the above	12 V
34 (G)	24 (B)	Fuel level sensor signal	Input	Ignition switch ON	—	 <p>JSNIA2672ZZ</p>
35 (W)	Ground	Seat belt buckle switch signal (driver side)	Input	Ignition switch ON	When driver seat belt is fastened	12 V
					When driver seat belt is unfastened	0 V
36 (G)	Ground	Passenger seat belt warning signal	Input	Ignition switch ON	<ul style="list-style-type: none"> When driver seat belt is fastened When getting in the passenger seat When passenger seat belt is fastened 	12 V
					<ul style="list-style-type: none"> When driver seat belt is fastened When getting in the passenger seat When passenger seat belt is unfastened 	0 V

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
37 (G)	Ground	Non-manual mode signal	Input	Ignition switch ON	Selector manual mode position	12 V
					Other than the above	0 V
38 (V)	Ground	Manual mode shift down signal	Input	Ignition switch ON	Selector lever shift down operation	0 V
					Other than the above	12 V
39 (L)	Ground	Manual mode shift up signal	Input	Ignition switch ON	Selector lever shift up operation	0 V
					Other than the above	12 V
40 (W)	Ground	Manual mode signal	Input	Ignition switch ON	Selector manual mode position	0 V
					Other than the above	12 V

Fail-Safe

INFOID:000000011433806

FAIL-SAFE

The combination meter activates the fail-safe control if CAN communication with each unit is malfunctioning.

Function		Specifications
Speedometer		
Tachometer		Reset to zero by suspending communication.
Engine coolant temperature gauge		
Illumination control		When suspending communication, changes to nighttime mode.
Information display	Odo/trip meter	An indicated value is maintained at communications blackout.
	Shift position indicator	
	Door open warning	
	Trunk open warning	
	Fuel filler cap warning	
	Low tire pressure warning	
	Front radar warning	The display turns OFF by suspending communication.
	BCI ON indicator	
	BCI OFF indicator	
	BCI malfunction indicator	
	BCI not available indicator	
	FEB warning	
Buzzer		The buzzer turns OFF by suspending communication.

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

	Function	Specifications
Warning lamp/indicator lamp	ABS warning lamp	The lamp turns ON by suspending communication. The lamp blinking caused by suspending communication.
	VDC warning lamp	
	VDC OFF indicator lamp	
	Brake warning lamp	
	FEB indicator lamp	
	AWD warning lamp	
	Malfunction indicator lamp	
	CRUISE warning lamp	
	Low tire pressure warning lamp	
	AFS OFF indicator lamp	
	High beam indicator lamp	
	Turn signal indicator lamp	
	Front fog lamp indicator lamp	
	Tail lamp indicator lamp	
	A/T CHECK indicator lamp	
	Lane departure warning lamp	
	LDP ON indicator lamp	
	Oil pressure warning lamp	
	ECO drive indicator	
	Blind Spot Intervention ON indicator	
	BSW/Blind Spot Intervention warning lamp	

DTC Index

INFOID:0000000011257173

Display contents of CONSULT	Diagnostic item is detected when...	Refer to
CAN COMM CIRCUIT [U1000]	When combination meter is not transmitting or receiving CAN communication signal for 2 seconds or more.	MWI-69. "Diagnosis Procedure"
CONTROL UNIT (CAN) [U1010]	When detecting error during the initial diagnosis of the CAN controller of combination meter.	MWI-70. "Diagnosis Procedure"
VEHICLE SPEED [B2205]	The abnormal vehicle speed signal is input from the ABS actuator and electric unit (control unit) for 2 seconds or more.	MWI-71. "Diagnosis Procedure"
ENGINE SPEED [B2267]	If ECM continuously transmits abnormal engine speed signals for 2 seconds or more.	MWI-72. "Diagnosis Procedure"
WATER TEMP [B2268]	If ECM continuously transmits abnormal engine coolant temperature signals for 60 seconds or more.	MWI-73. "Diagnosis Procedure"

IPDM E/R

< ECU DIAGNOSIS INFORMATION >

IPDM E/R

List of ECU Reference

INFOID:0000000011257174

ECU	Reference
IPDM E/R	PCS-16, "Reference Value"
	PCS-23, "Fail-safe"
	PCS-24, "DTC Index"

METER SYSTEM


< WIRING DIAGRAM >

WIRING DIAGRAM

METER SYSTEM

Wiring Diagram

INFOID:0000000011257175

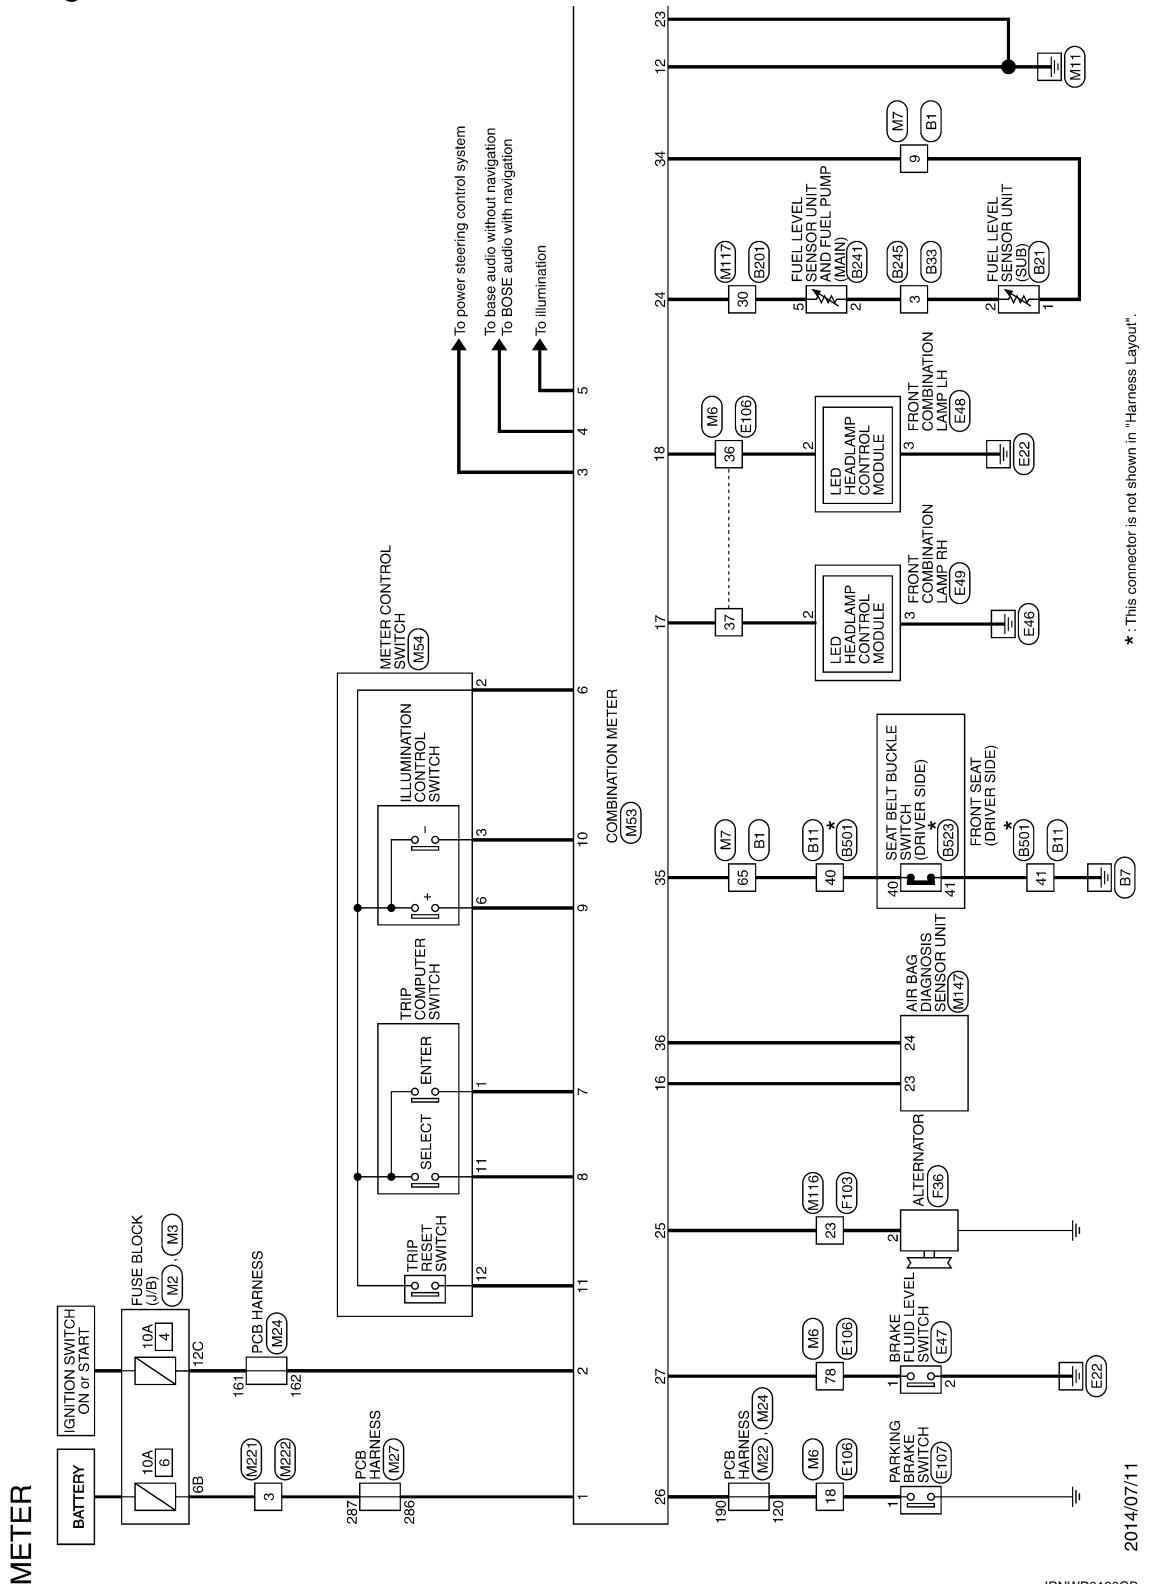


2014/07/11

JRNWD8130GB

METER SYSTEM


< WIRING DIAGRAM >

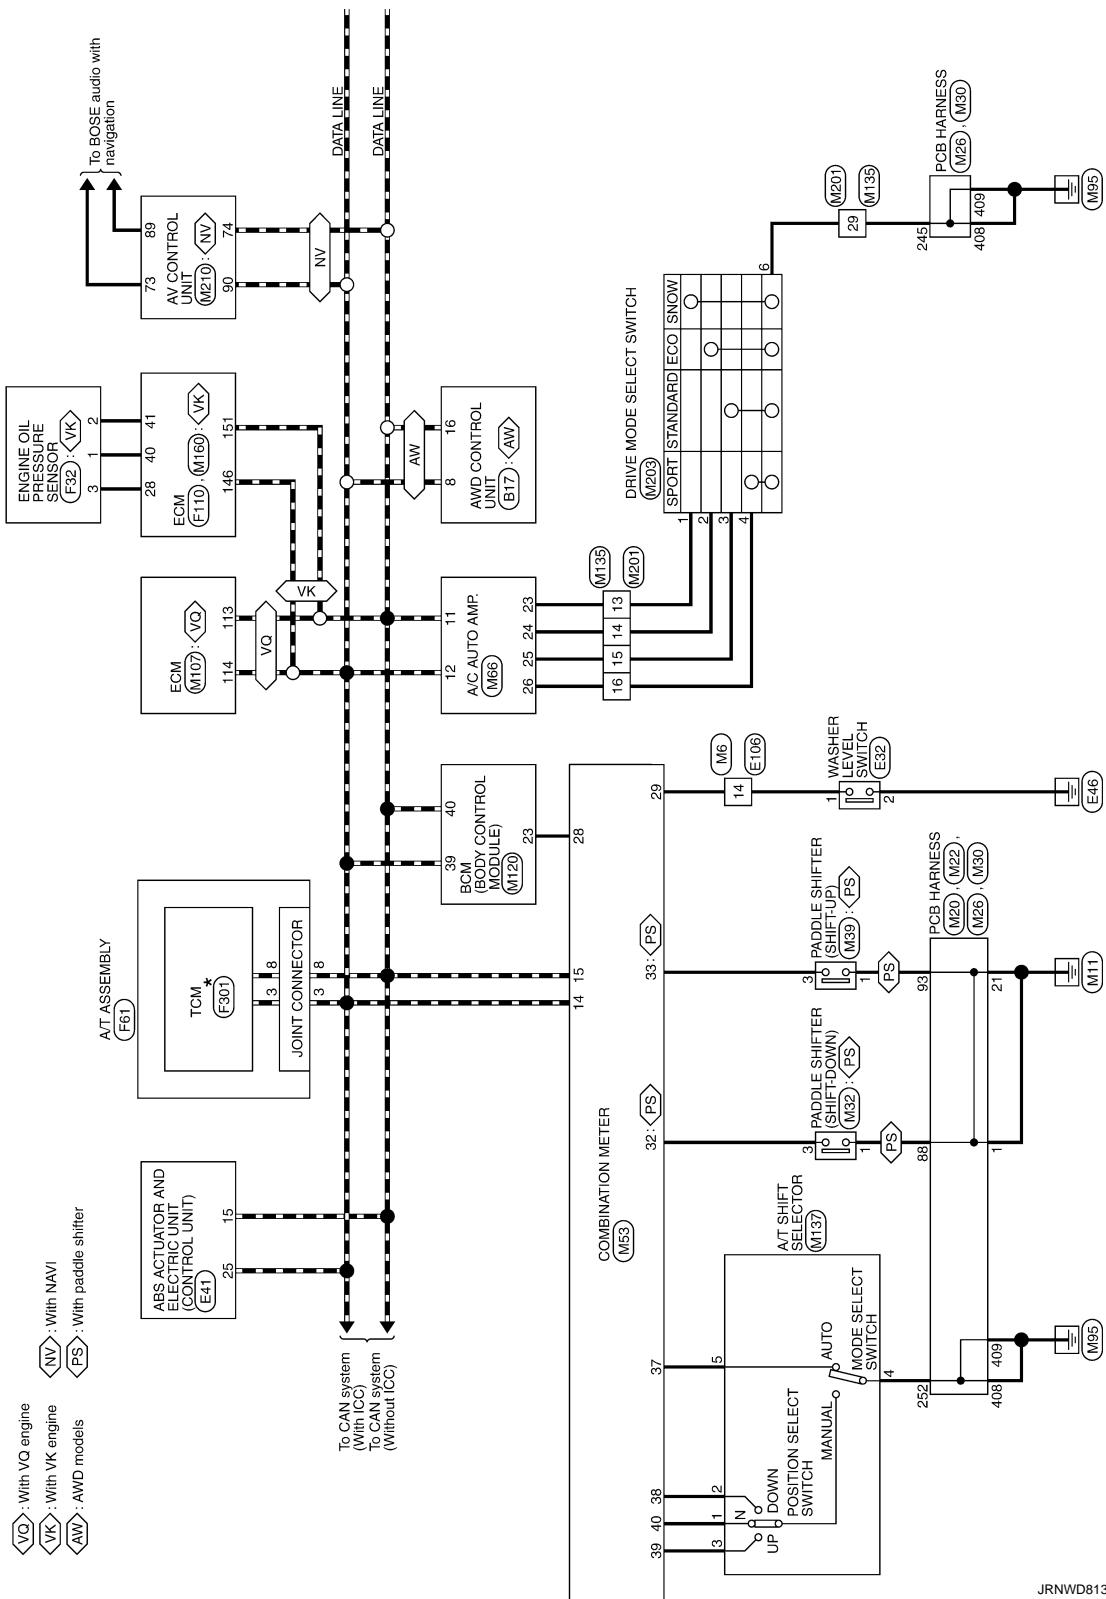

JRNWD8131GB

METER SYSTEM

< WIRING DIAGRAM >

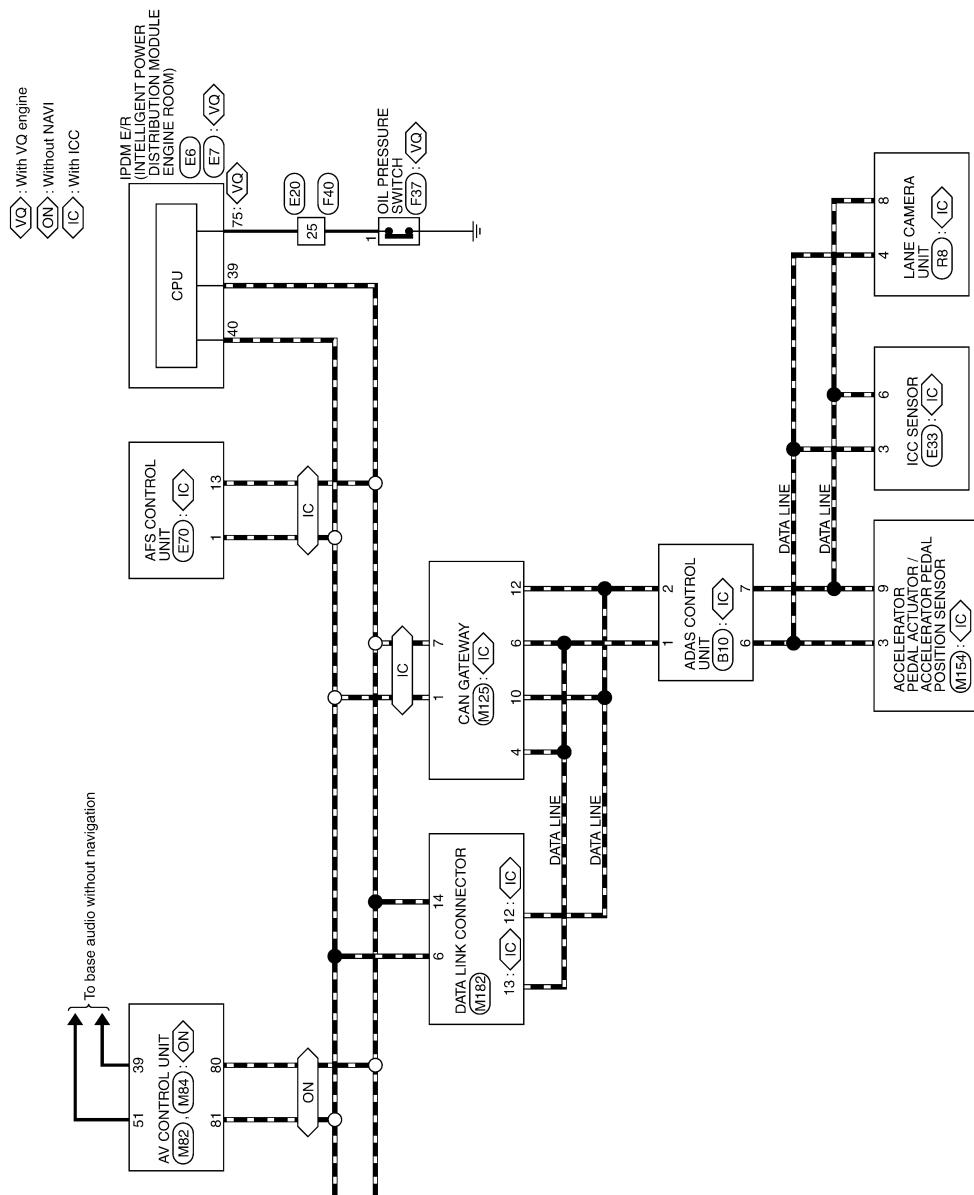


JRNWD8132GB

MWI

METER SYSTEM

< WIRING DIAGRAM >

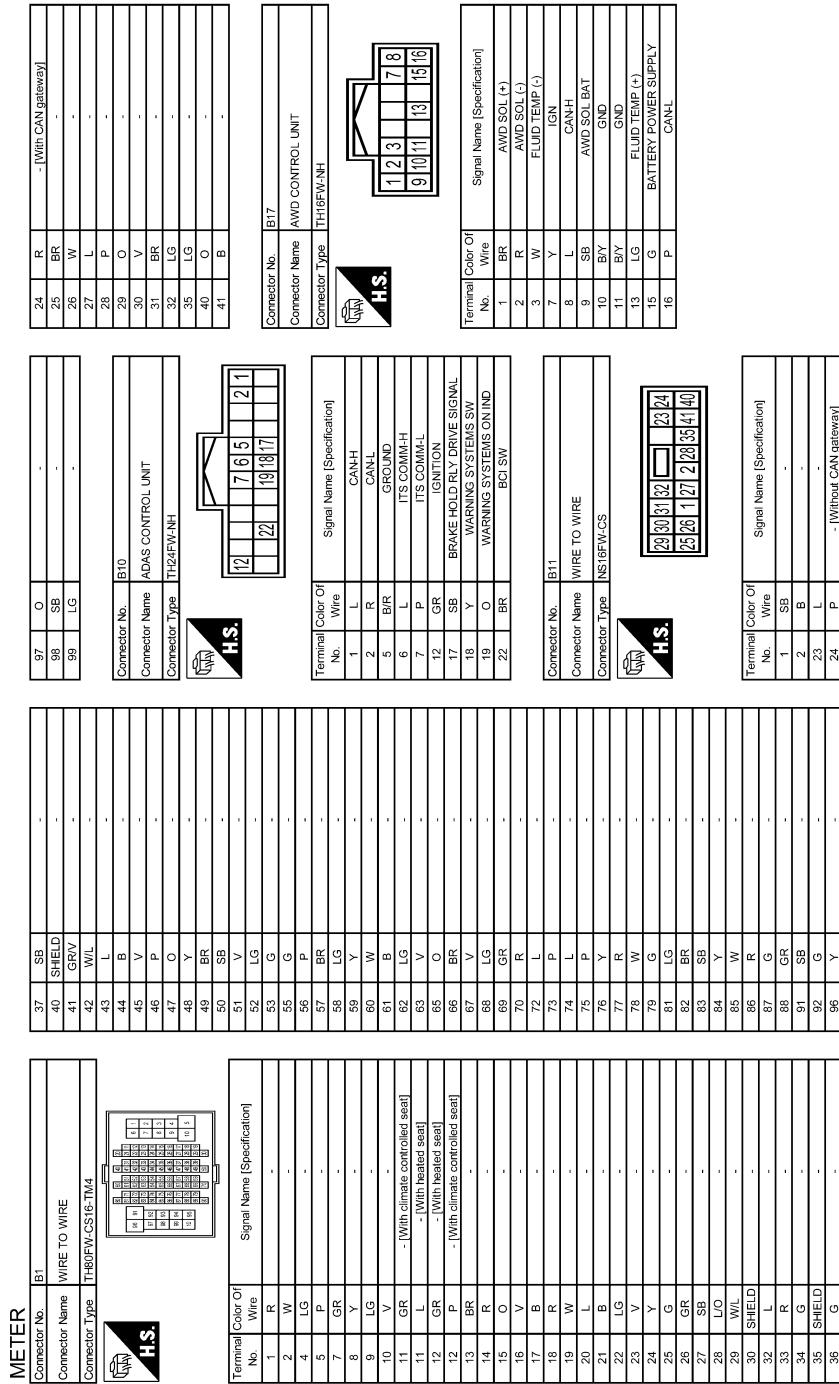

JRNWD8312GB

METER SYSTEM

< WIRING DIAGRAM >

METER		
Connector No.	B21	
Connector Name	FUEL LEVEL SENSOR UNIT (SUB)	
Connector Type	E02FGY-RS	
Terminal Color Of Wire		
1 LG	-	
2 O	-	
3 R	-	
6 R	-	
7 W	-	
8 V	-	
11 R	-	
12 G	-	
13 Y	-	
14 L	-	
15 R	- [Without ADAS] - [With ADAS]	
17 GR	-	
18 P	-	
19 BIR	-	
20 Y	-	
21 GR	-	
22 GR	-	
23 R	-	
24 V	-	
25 B	-	
26 W	-	
28 V	-	
29 P	-	
30 O	-	
31 BIR	-	
32 Y	-	
34 SHIELD	-	
35 PIL	-	
36 L	-	
37 Y	-	
38 SHIELD	-	
40 SHIELD	-	
41 WR	-	
42 V	-	
43 SB	-	
44 R	- [With climate controlled seat] - [Without heated seat]	
46 Y	- [With heated seat] - [Without climate controlled seat]	
47 GR	- [With heated seat] - [Without climate controlled seat]	
48 V	-	
49 O	-	

Connector No.	B201	
Connector Name	WIRE TO WIRE	
Connector Type	TH90MW-CS16-TM4	
Terminal Color Of Wire		
1 Y	-	
3 R	-	
6 R	-	
7 W	-	
8 V	-	
11 R	-	
12 G	-	
13 Y	-	
14 L	-	
15 R	- [Without ADAS] - [With ADAS]	
17 GR	-	
18 P	-	
19 BIR	-	
20 Y	-	
21 GR	-	
22 GR	-	
23 R	-	
24 V	-	
25 B	-	
26 W	-	
28 V	-	
29 P	-	
30 O	-	
31 BIR	-	
32 Y	-	
34 SHIELD	-	
35 PIL	-	
36 L	-	
37 Y	-	
38 SHIELD	-	
40 SHIELD	-	
41 WR	-	
42 V	-	
43 SB	-	
44 R	- [With climate controlled seat] - [Without heated seat]	
46 Y	- [With heated seat] - [Without climate controlled seat]	
47 GR	- [With heated seat] - [Without climate controlled seat]	
48 V	-	
49 O	-	

Connector No.	B241	
Connector Name	FUEL LEVEL SENSOR UNIT AND FUEL PUMP (MAIN)	
Connector Type	E02FGY-RS	
Terminal Color Of Wire		
50 R	-	
51 GR	-	
52 LG	-	
53 P	-	
56 P	-	
57 W	-	
58 O	-	
59 Y	-	
61 SB	-	
62 L	-	
63 W	-	
64 SB	-	
65 LG	-	
66 L	-	
67 Y	-	
68 SB	-	
69 B	-	
71 L	-	
72 L	-	
73 R	-	
74 B	-	
75 L	-	
76 SHIELD	-	
77 G	-	
78 R	-	
79 P	-	
80 G	-	
81 O	-	
82 BR	-	
83 GR	-	
84 V	-	
85 LG	-	
86 W	-	
87 O	-	
88 Y	-	
89 BR	-	
90 L	-	
91 BR	-	
93 O	- [With heated seat] - [Without climate controlled seat]	
94 GR	-	
96 W	-	
97 P	-	
98 LG	-	
99 LG	-	
100 Y	-	
101 Y	-	
102 SHIELD	-	
103 G	-	
104 Y	-	
105 SHIELD	-	

JRNWD8313GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z
MWI

METER SYSTEM


< WIRING DIAGRAM >

METER

Connector No.	EE Part No.	Connector Name	EE Description
Connector Type	EE Type		
BS01		WIRE TO WIRE	
		NS16MW-CS	
24/23	[REDACTED]	32/31	30/29
40/41	35/38	2/27	1/26




Terminal No.	Color Of Wire	Signal Name [Specification]
46	P	DTRL DISCER
51	O	WASH MTR
52	G	INJECTOR #1
53	L	FR WIPER HI
54	P	FR WIPER LO
55	R	TAIL LUMI
56	GR	O2 SENS #1
57	V	O2 SENS #2
58	BR	AT ECU
70	LG	SSOFF



Connector No.	HS	Terminal No.	Color Of Wire	Signal Name (Specification)
Connector Name FROM LR INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)		39	P	CANL
		40	L	CANH
		41	S	S-CONT
		42	V	MOTOR FAN RLY. CONT [With V8 engine]
		42	V	MOTOR FAN RLY. CONT [With VQ engine]
		43	SB	DETENT SW
		44	GR	HORN RLY [With V8 engine]
		44	LG	HORN RLY [With VQ engine]
		45	G	HORN SW
		46	BR	START CONT

Connector No.	HS	Terminal No.	Color Of Wire	Signal Name (Specification)
Connector Name FROM LR INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)		47	WHT	FR WIPER HI
		48	GR	FR WIPER LO
		48	LG	TAIL LIGH. L
		48	GR	O2 SENS #1
		51	O	WASH MTR
		52	G	INJECTOR #1
		53	L	FR WIPER HI
		54	P	FR WIPER LO
		55	R	TAIL LIGH. R
		56	GR	O2 SENS #2
		57	V	O2 SENS #2
		58	BR	AT ECU SS OFF
		70	LG	



METER SYSTEM

< WIRING DIAGRAM >

METER		Connector No.	E33	Signal Name [Specification]		Terminal Color Of Wire	Signal Name [Specification]	
Connector Name	ICC SENSOR	20	O	F-F-LH SEN(POWER)	CAN-H	1	P	-
Connector Type	AA205FB	25	L	VAC SEN(POWER)	-	2	W	-
		28	Y	1DC-OFF SW	-	3	SB	-
		30	R	VAC SEN(GND)	-	4	LG	-
		32	S	SHIELD	-	5	O	-
		34	G	IGN(POWER)	-	6	W	-

		Connector No.	E49	Signal Name [Specification]		Terminal Color Of Wire	Signal Name [Specification]	
Connector Name	FRONT COMBINATION LAMP RH	Connector No.	E49	FRONT COMBINATION LAMP RH	CAN-H	1	P	-
Connector Type	RS05FB-FR	Connector Name	FRONT COMBINATION LAMP RH	CAN-H	-	2	W	-
		Connector Type	RS05FB-FR	CAN-H	-	3	SB	-

H.S.		Connector No.	E47	Signal Name [Specification]		Terminal Color Of Wire	Signal Name [Specification]	
Connector Name	BRAKE FLUID LEVEL SWITCH	Connector No.	E47	IGNITION	GR	1	P	-
Connector Type	YV02FGY	Connector Name	IGNITION	-	-	2	V	-
		Connector Type	YV02FGY	-	-	3	B/W	-
				-	-	4	B/W	-
				-	-	5	R	-
				-	-	6	BR	-
				-	-	7	BR	-
				-	-	8	P	-

H.S.		Connector No.	E70	Signal Name [Specification]		Terminal Color Of Wire	Signal Name [Specification]	
Connector Name	AFS CONTROL UNIT	Connector No.	E70	IGNITION	GR	1	P	-
Connector Type	TR45WHNH	Connector Name	IGNITION	-	-	2	G	-
		Connector Type	TR45WHNH	-	-	3	Y	-
				-	-	4	BR	-
				-	-	5	BR	-
				-	-	6	SB	-
				-	-	7	SB	-
				-	-	8	GR	-
				-	-	9	GR	-
				-	-	10	GR	-
				-	-	11	GR	-
				-	-	12	GR	-
				-	-	13	GR	-
				-	-	14	GR	-
				-	-	15	V	-
				-	-	16	Y	-
				-	-	17	GR	-
				-	-	18	V	-
				-	-	19	GR	-
				-	-	20	BR	-
				-	-	21	P	-
				-	-	22	L	-
				-	-	23	P	-
				-	-	24	SHIELD	-
				-	-	25	LO	-
				-	-	26	WL	-
				-	-	27	BR	-
				-	-	28	BR	-

H.S.		Connector No.	E48	Signal Name [Specification]		Terminal Color Of Wire	Signal Name [Specification]	
Connector Name	FRONT COMBINATION LAMP LH	Connector No.	E48	IGNITION	GR	1	P	-
Connector Type	RS05FB-PRE	Connector Name	IGNITION	-	-	2	V	-
		Connector Type	RS05FB-PRE	-	-	3	B/W	-

H.S.		Connector No.	E51	Signal Name [Specification]		Terminal Color Of Wire	Signal Name [Specification]	
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT CONTROL UNIT	Connector No.	E51	IGNITION	GR	1	P	-
Connector Type	SAZ20UFB-SUZ4-U	Connector Name	IGNITION	-	-	2	V	-
		Connector Type	SAZ20UFB-SUZ4-U	-	-	3	B/W	-
				-	-	4	BR	-
				-	-	5	BR	-
				-	-	6	SB	-
				-	-	7	SB	-
				-	-	8	GR	-
				-	-	9	GR	-
				-	-	10	GR	-
				-	-	11	GR	-
				-	-	12	GR	-
				-	-	13	GR	-
				-	-	14	GR	-
				-	-	15	V	-
				-	-	16	Y	-
				-	-	17	GR	-
				-	-	18	V	-
				-	-	19	GR	-
				-	-	20	BR	-
				-	-	21	P	-
				-	-	22	L	-
				-	-	23	P	-
				-	-	24	SHIELD	-
				-	-	25	LO	-
				-	-	26	WL	-
				-	-	27	BR	-
				-	-	28	BR	-
				-	-	29	BR	-
				-	-	30	BR	-
				-	-	31	BR	-
				-	-	32	GR	-
				-	-	33	O	-
				-	-	34	Y	-
				-	-	35	Y	-
				-	-	36	GR	-
				-	-	37	V	-
				-	-	38	BR	-
				-	-	39	BR	-
				-	-	40	BR	-
				-	-	41	BR	-
				-	-	42	BR	-
				-	-	43	BR	-
				-	-	44	W	-
				-	-	45	L	-
				-	-	46	GR	-
				-	-	47	V	-

JRNWD8315GB

MWI

MWI

METER SYSTEM


< WIRING DIAGRAM >

METER			
48	G	-	
49	O	-	
50	LG	-	
54	R	-	
55	B	-	
60	W	-	
61	G	-	
62	Y	-	
63	BR	-	
64	B	-	
65	Y	-	
66	R	-	
67	SB	-	
68	G	-	
69	SHEILD	-	
70	W	-	
71	W	-	
72	R	-	
73	G	-	
74	Y	-	
75	B	-	
76	SHEILD	-	
77	O	-	
78	SB	-	
80	V	-	
82	SB	-	
83	GR	-	
84	Y	-	
85	Y	-	
86	L	-	
87	Y	-	
88	BR	-	
89	LG	-	
90	W	-	
91	W	-	
92	P	-	
93	LG	-	
94	BR	-	
95	W	-	
97	R	-	
98	Y	-	
99	V	-	
100	V	-	
Connector No. E107			
Connector Name PARKING BRAKE SWITCH			
Connector Type TBUFWL/C			
			
Connector No. F36			
Connector Name ALTERNATOR			
Connector Type HS03FB			
			
Terminal Color Of Wire No. Signal Name [Specification]			
1	V	-	
2	G	-	
3	L	-	
4	P	-	
Connector No. F32			
Connector Name ENGINE OIL PRESSURE SENSOR			
Connector Type RH03FB			
			
Terminal Color Of Wire No. Signal Name [Specification]			
1	GR	-	
2	Y	-	
3	W	-	
Connector No. F40			
Connector Name WIRE TO WIRE			
Connector Type SAA36FBR-SHZB			
			
Terminal Color Of Wire No. Signal Name [Specification]			
1	W	-	
2	LG	-	
3	Y	-	
4	P	-	
5	LG	-	
6	Y	-	
7	LG	-	
8	Y	-	
9	LG	-	
10	Y	-	
11	LG	-	
12	Y	-	
13	P	-	
14	V	-	
15	R	-	
16	O	-	[With VQ engine]
17	Y	-	[With VQ engine]
18	LG	-	[With VQ engine]
19	L	-	[With VQ engine]
20	GR	-	[With VQ engine]
21	G	-	[With VQ engine]
22	W	-	[With VQ engine]
23	L	-	[With VQ engine]
24	Y	-	[With VQ engine]
25	LG	-	[With VQ engine]
26	R	-	[With VQ engine]
27	LG	-	[With VQ engine]
28	Y	-	[With VQ engine]
29	W	-	[With VQ engine]
30	B	-	[With VQ engine]
31	V	-	[With VQ engine]
32	BR	-	[With VQ engine]
33	LG	-	[With VQ engine]
34	P	-	[With VQ engine]
35	Y	-	[With VQ engine]
36	LG	-	[With VQ engine]
37	O	-	[With VQ engine]
38	LG	-	[With VQ engine]

JRNWD8316GB

METER SYSTEM

< WIRING DIAGRAM >

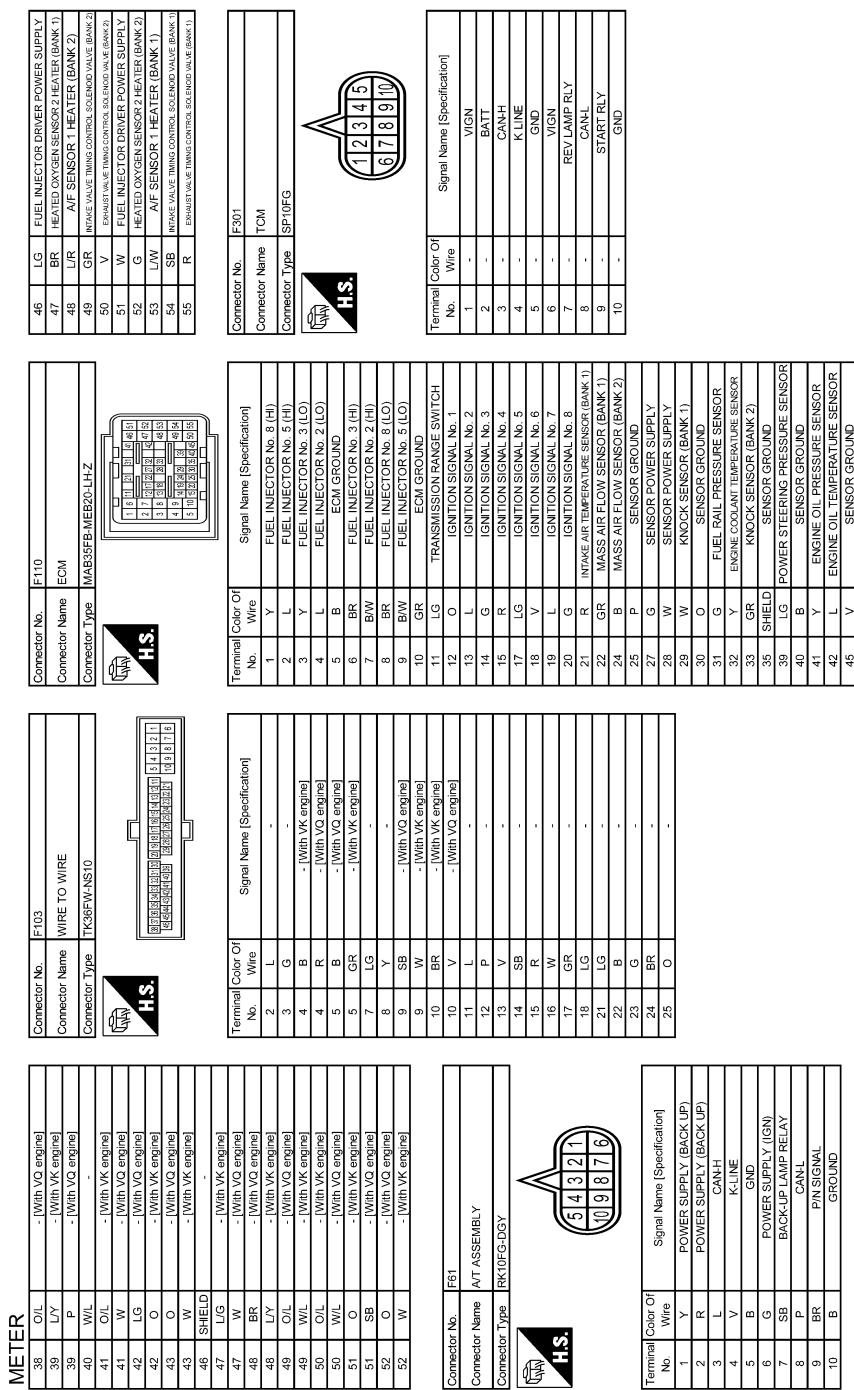

JRNWD8317GB

METER SYSTEM

< WIRING DIAGRAM >

METER

Connector No.	M7	Connector Name	WIRE TO WIRE
Connector Type	T-B01WW-CS16-TM4		
			
			
Connector No.	M6	Connector Name	WIRE TO WIRE
Connector Type	T-B01WW-CS16-TM4		
			
Connector No.	M2	Connector Name	FUSE BLOCK (J1B)
Connector Type	NS10FWLCS		
			

Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	Y	-
4	BR	-
5	P	-
7	G	-
8	B	-
9	G	-
10	V	-
11	L	- [With heated seat] - [With climate controlled seat]
11	V	- [With climate controlled seat] - [Without heated seat]
12	GR	- [With climate controlled seat]
12	P	- [Without heated seat]
13	BR	-
14	GR	-
15	BG	-
16	V	-
17	BG	-
18	L	- [Without CAN gateway] - [With CAN gateway]
18	Y	-
19	W	-
20	L	-
21	B	-
22	LG	-
23	W	-
24	V	-
25	G	-
26	BR	-
27	SE	-
28	P	-
29	L	-
30	SHIELD	-
32	L	-
33	P	-
34	W	-
35	SHIELD	-
36	BG	-

Connector No.	M6	Wire To Wire	
Connector Name	WIRE TO WIRE		
Connector Type	TB80MW-CS16-TM4		
			
			
Terminal No.	Color Of Wire	Signal Name [Specification]	
1	W		
2	W		
3	SB		
4	LG		
5	W		
6	W		
7	BG		
8	G		
9	Y		
10	W		
11	R		
12	V		
13	LG		
14	L		
15	V		
16	B		
17	GR		
18	V		
20	SB		
21	BR		
22	L		
23	P		
27	SHIELD		
28	V		
29	SB		
31	BG		
32	P		
33	R		
34	BG		
36	V		
37	G		
41	BR		
44	BR		
45	Y		
46	BG		
47	V		

Terminal No.	Color Of Wire	Signal Name [Specification]
1B	R	-
3B	P	-
4B	G	-
5B	SB	-
6B	W	- (With VQ Engine) - (With VK Engine)
6B	Y	-
7B	Y	-
8B	R	-
9B	R	-

Terminal No.	Color Of Wire	Signal Name [Specification]
1C	LG	-
11C	LG	-
12C	O	-
6C	R	-
7C	B	-
8C	B	-
9C	I	-

METER SYSTEM

< WIRING DIAGRAM >


METER		SB	LG	-		
37	SB					
41	SB					
42	V					
43	L					
44	B					
45	BG					
46	P					
47	L					
48	LG					
49	BR					
50	V					
51	V					
52	P					
53	BG					
55	G					
56	SB					
57	P					
58	LG					
59	Y					
60	GR					
61	B					
62	LG					
63	BR					
65	W					
66	R					
67	V					
68	LG					
69	SB					
70	V					
72	L					
73	P					
74	L					
75	P					
76	G					
77	Y					
78	SB					
79	W					
81	LG					
82	BR					
83	BG					
84	B					
85	W					
86	G					
87	R					
88	G					
91	W					
92	G					
96	W					
97	BG					
98	Y					
99	LG					
101	L					
102	P					
103	B					
104	BR					
105	R					
107	Y					
108	Y					
109	BR					
110	Y					
112	B					
113	P					
114	L					
116	B					
117	BG					
118	B					
119	LG					
120	V					

JRNWD8319GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z
MWI

METER SYSTEM


< WIRING DIAGRAM >

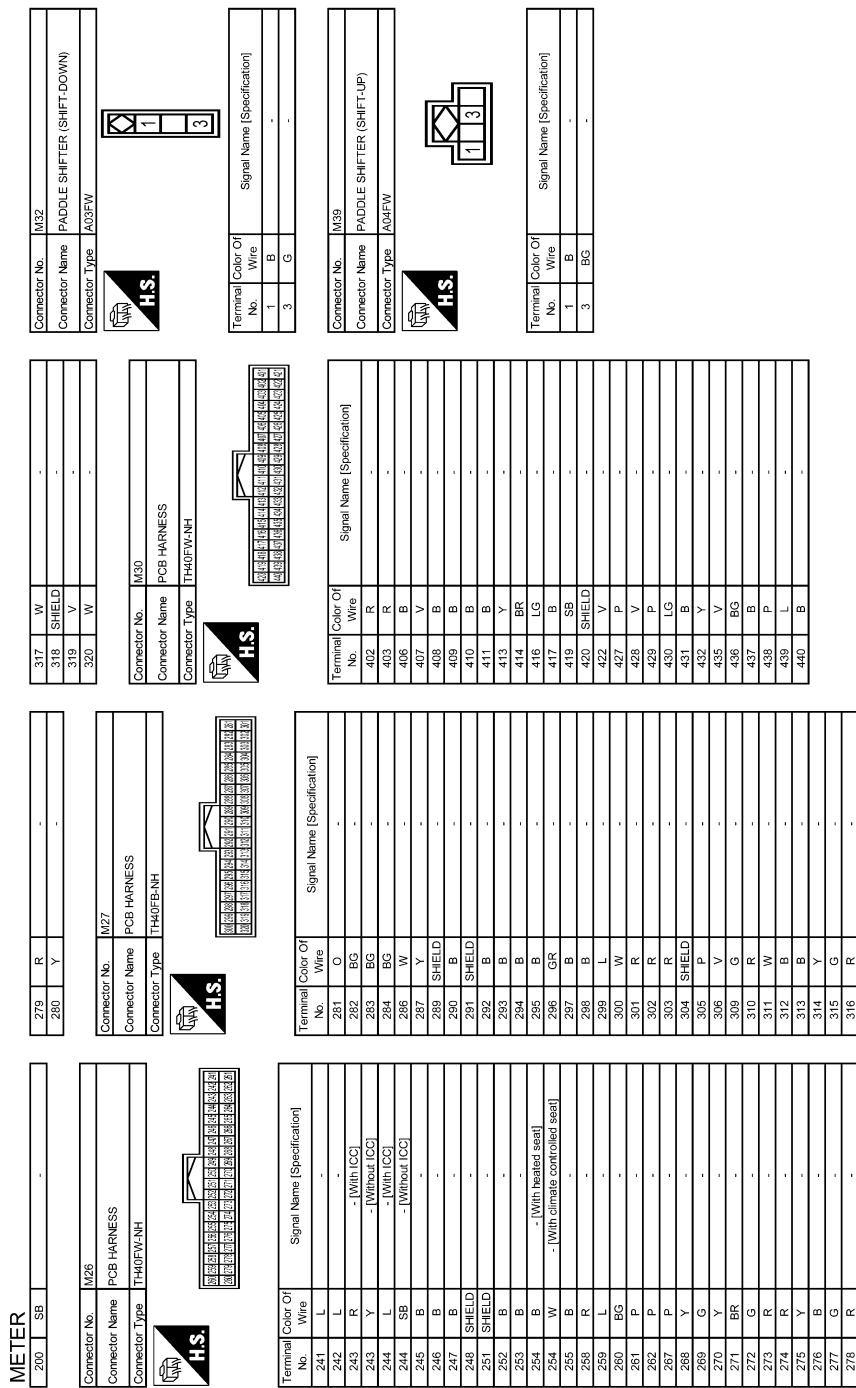

JRNWD8320GB

METER SYSTEM

< WIRING DIAGRAM >

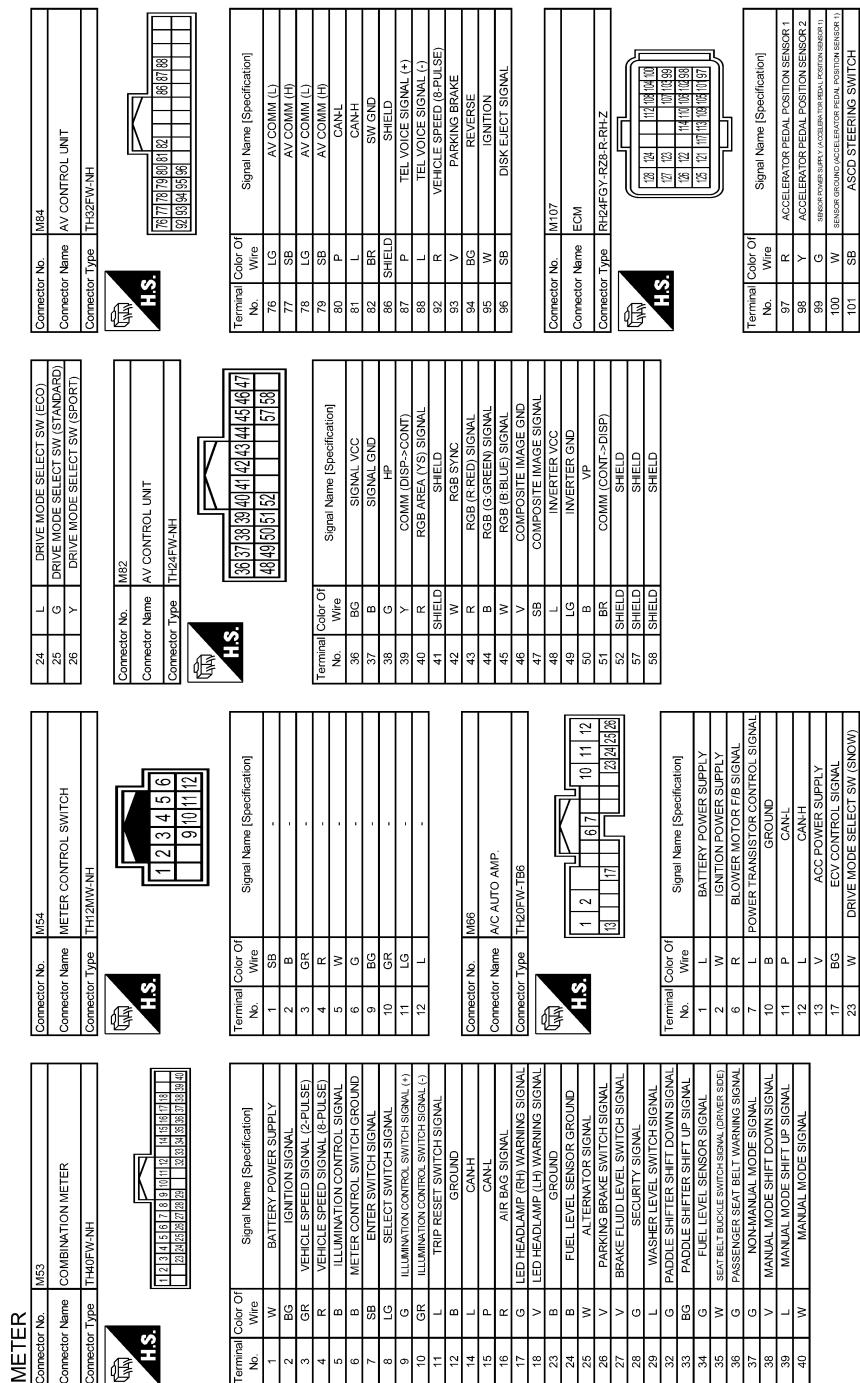

JRNWD8321GB

A

W

C

D

T

G

I

—

K

L

M

MWI

O

P


METER SYSTEM

< WIRING DIAGRAM >

METER			
102	P	FUEL TANK PRESSURE SENSOR [sensor mounted on a carbon fiber rear longitudinal beam]	13 V
103	L	SENSOR GROUND [Without IC2]	14 R
104	B	SENSOR GROUND [With IC2]	15 Y
104	BR	SENSOR GROUND [With IC2]	16 SB
104	LG	REFRIGERANT TEMPERATURE SENSOR	17 BR
105	P	FUEL TANK PRESSURE SENSOR	18 LG
106	BG	AVC22 DPRESS/FIPRES	21 LG
108	Y	GND/ASCD SW	22 B
109	BR	TRANSMISSION RANGE SWITCH	23 W
110	V	ENGINE SPEED SIGNAL OUTPUT	24 W
112	V	GND/DPRESS/FIPRES	25 BG
113	P	CAN COMMUNICATION LINE	-
114	L	CAN COMMUNICATION LINE	-
117	V	DATA LINK CONNECTOR	-
121	G	EVAP CANISTER SERV CONTROL VALVE	WIRE TO WIRE
122	P	STOP/LAMP SWITCH	Connector Type T-607WCSIE-TM4
123	B	ECM GROUND	HS
124	B	ECM GROUND	HS
125	SB	POWER SUPPLY FOR ECM	HS
126	BR	ASCD/BRAKE SWITCH	HS
127	B	ECM GROUND	HS
128	B	ECM GROUND	HS
Connector No. M116			
Connector Name	WIRE TO WIRE	Terminal Color Of Wire	Signal Name [Specification]
Connector Type	T-607WNS1-D	No.	
		1 Y	
		3 Y	
		6 R	
		7 W	
		9 V	
		11 R	
		12 G	
		13 W	
		14 L	
		15 R	- (Without ADAS)
		15 Y	- (With ADAS)
		17 GR	
		18 P	
		19 BR	
		20 GR	
		21 Y	
		22 LG	
		23 R	
		24 BG	
		25 BG	
		26 W	
		28 V	
		29 P	
		30 B	
		31 G	- (With heated seat)
		32 Y	- (With climate controlled seat)
		33 W	
		34 V	
		36 W	
		37 Y	
		38 BR	
		39 G	
		40 Y	- (With heated seat)
		41 L	- (With climate controlled seat)
		42 V	
		43 SB	
		44 BG	
		46 L	- (With heated seat)
		47 G	- (With climate controlled seat)
		48 V	- (With heated seat)
		49 BG	
		50 LG	
		51 SB	
		52 Y	
		53 W	
		56 B	
		57 G	
		58 R	
		59 W	
		61 LG	
		62 V	
		63 R	
		64 SB	
		65 LG	
		66 L	
		67 Y	
		68 SB	
		69 B	
		71 L	
		72 L	
		73 P	
		74 B	
		75 L	
		76 SHEILD	
		77 G	
		78 R	
		79 L	
		80 G	
		81 BG	
		82 BR	
		83 GR	
		84 V	
		85 LG	
		86 V	
		87 R	
		88 Y	
		89 BR	
		90 L	
		91 Y	
		93 G	- (With heated seat)
		94 V	- (With climate controlled seat)
		96 W	
		97 Y	
		98 BR	
		99 G	
		100 Y	
		101 P	
		102 P	
		103 P	
		104 P	
		105 P	
		106 P	
		107 P	
		108 P	
		109 P	
		110 P	
		111 P	
		112 P	
		113 P	
		114 P	
		115 P	
		116 P	
		117 P	
		118 P	
		119 P	
		120 P	
		121 P	
		122 P	
		123 P	
		124 P	
		125 P	
		126 P	
		127 P	
		128 P	
		129 P	
		130 P	
		131 P	
		132 P	
		133 P	
		134 P	
		135 P	
		136 P	
		137 P	
		138 P	
		139 P	
		140 P	
		141 P	
		142 P	
		143 P	
		144 P	
		145 P	
		146 P	
		147 P	
		148 P	
		149 P	
		150 P	
		151 P	
		152 P	
		153 P	
		154 P	
		155 P	
		156 P	
		157 P	
		158 P	
		159 P	
		160 P	
		161 P	
		162 P	
		163 P	
		164 P	
		165 P	
		166 P	
		167 P	
		168 P	
		169 P	
		170 P	
		171 P	
		172 P	
		173 P	
		174 P	
		175 P	
		176 P	
		177 P	
		178 P	
		179 P	
		180 P	
		181 P	
		182 P	
		183 P	
		184 P	
		185 P	
		186 P	
		187 P	
		188 P	
		189 P	
		190 P	
		191 P	
		192 P	
		193 P	
		194 P	
		195 P	
		196 P	
		197 P	
		198 P	
		199 P	
		200 P	
		201 P	
		202 P	
		203 P	
		204 P	
		205 P	
		206 P	
		207 P	
		208 P	
		209 P	
		210 P	
		211 P	
		212 P	
		213 P	
		214 P	
		215 P	
		216 P	
		217 P	
		218 P	
		219 P	
		220 P	
		221 P	
		222 P	
		223 P	
		224 P	
		225 P	
		226 P	
		227 P	
		228 P	
		229 P	
		230 P	
		231 P	
		232 P	
		233 P	
		234 P	
		235 P	
		236 P	
		237 P	
		238 P	
		239 P	
		240 P	
		241 P	
		242 P	
		243 P	
		244 P	
		245 P	
		246 P	
		247 P	
		248 P	
		249 P	
		250 P	
		251 P	
		252 P	
		253 P	
		254 P	
		255 P	
		256 P	
		257 P	
		258 P	
		259 P	
		260 P	
		261 P	
		262 P	
		263 P	
		264 P	
		265 P	
		266 P	
		267 P	
		268 P	
		269 P	
		270 P	
		271 P	
		272 P	
		273 P	
		274 P	
		275 P	
		276 P	
		277 P	
		278 P	
		279 P	
		280 P	
		281 P	
		282 P	
		283 P	
		284 P	
		285 P	
		286 P	
		287 P	
		288 P	
		289 P	
		290 P	
		291 P	
		292 P	
		293 P	
		294 P	
		295 P	
		296 P	
		297 P	
		298 P	
		299 P	
		300 P	
		301 P	
		302 P	
		303 P	
		304 P	
		305 P	
		306 P	
		307 P	
		308 P	
		309 P	
		310 P	
		311 P	
		312 P	
		313 P	
		314 P	
		315 P	
		316 P	
		317 P	
		318 P	
		319 P	
		320 P	
		321 P	
		322 P	
		323 P	
		324 P	
		325 P	
		326 P	
		327 P	
		328 P	
		329 P	
		330 P	
		331 P	
		332 P	
		333 P	
		334 P	
		335 P	
		336 P	
		337 P	
		338 P	
		339 P	
		340 P	
		341 P	
		342 P	
		343 P	
		344 P	
		345 P	
		346 P	
		347 P	
		348 P	
		349 P	
		350 P	
		351 P	
		352 P	
		353 P	
		354 P	
		355 P	
		356 P	
		357 P	
		358 P	
		359 P	
		360 P	
		361 P	
		362 P	
		363 P	
		364 P	
		365 P	
		366 P	
		367 P	
		368 P	
		369 P	
		370 P	
		371 P	
		372 P	
		373 P	
		374 P	
		375 P	
		376 P	
		377 P	
		378 P	
		379 P	
		380 P	
		381 P	
		382 P	
		383 P	
		384 P	
		385 P	
		386 P	
		387 P	
		388 P	
		389 P	
		390 P	
		391 P	
		392 P	
		393 P	
		394 P	
		395 P	
		396 P	
		397 P	
		398 P	
		399 P	
		400 P	
		401 P	
		402 P	
		403 P	
		404 P	
		405 P	
		406 P	
		407 P	
		408 P	
		409 P	
		410 P	
		411 P	
		412 P	
		413 P	
		414 P	
		415 P	
		416 P	
		417 P	
		418 P	
		419 P	
</td			

METER SYSTEM

< WIRING DIAGRAM >

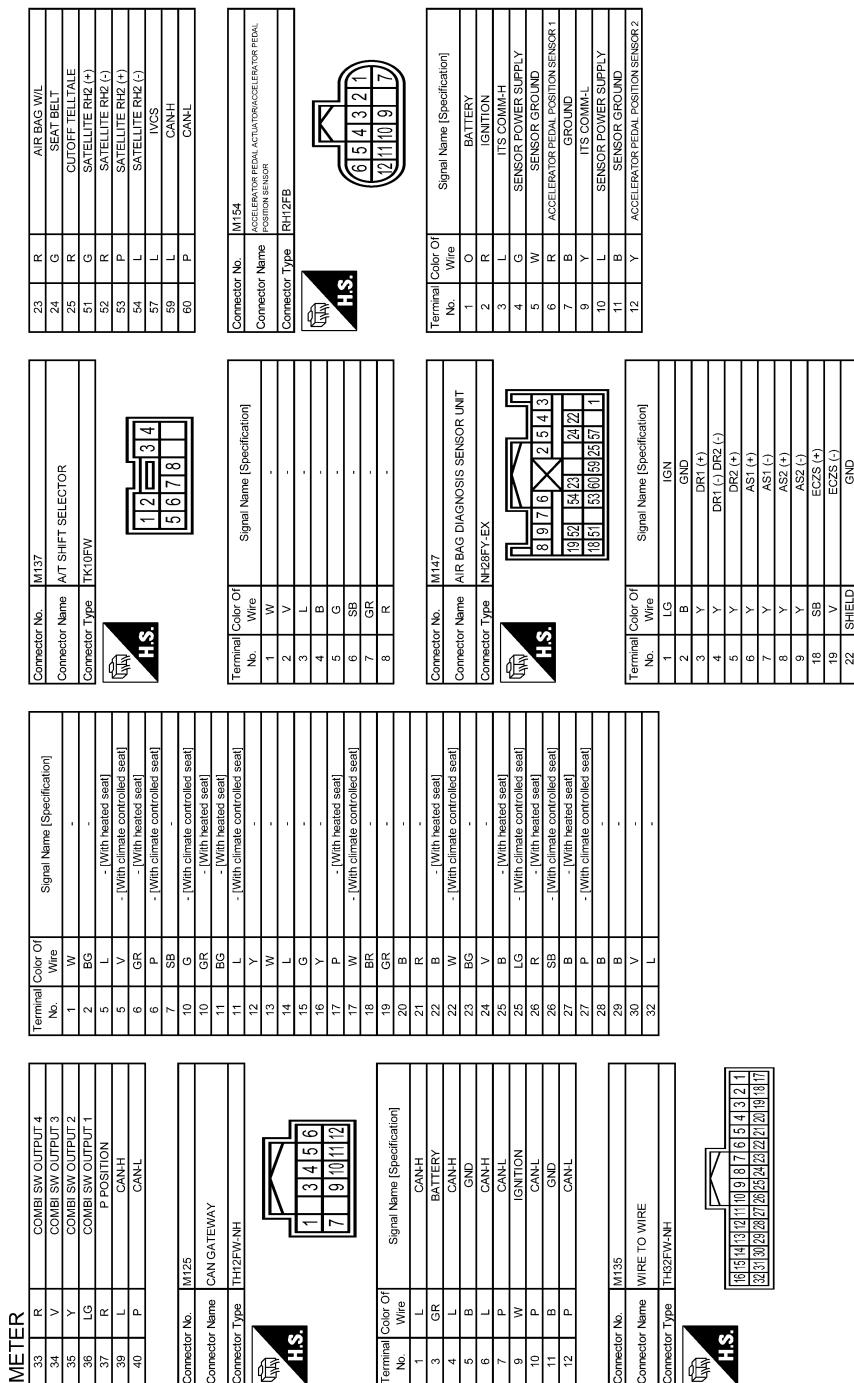

JRNWD8323GB

A B C D E F G H I J K L M N P Q R S T

M W I

METER SYSTEM

< WIRING DIAGRAM >

METER

			Connector No.	M210
			Connector Name	AV CONTROL UNIT
			Connector Type	TH22W-NH
				
172	SB	POWER SUPPLY FOR ECM	6	P
173	R	THROTTLE CONTROL MOTOR POWER SUPPLY	7	SB
174	B	ECM GROUND	10	G
175	B	ECM GROUND	11	L
			12	R
			13	W
			14	L
			15	G
			16	-
			17	W
			18	BR
			19	GR
Connector No.	M182	DATA LINK CONNECTOR		
Connector Name				
Connector Type	BD16FW			

Signal Name [Specification]		Terminal Color Of		Signal Name [Specification]	
No.	Wire	No.	Wire	No.	Wire
111	W	FUEL INJECTOR DRIVER POWER SUPPLY		20	B
112	W	FUEL INJECTOR DRIVER POWER SUPPLY		21	B
113	B	ECM GROUND		22	B
				23	BG
				24	V
				65	V
				67	W
				68	W

ECM GROUND		EVAP CANISTER VENT CONTROL VALVE		EVAP ACTUATOR		EVAP CANISTER VENT CONTROL VALVE		EVAP CANISTER VENT CONTROL VALVE		EVAP CANISTER VENT CONTROL VALVE		EVAP CANISTER VENT CONTROL VALVE	
		Terminal No.	Color Of Wire	Signal Name [Specification]		Terminal No.	Color Of Wire	Signal Name [Specification]		Terminal No.	Color Of Wire	Signal Name [Specification]	
115	B					25	B			69	G	I-KEY IDENTIFICATION SIGNAL	
120	G					26	R			70	-		
122	V					27	B	- [With climate controlled seat]		71	SHIELD	MICROPHONE SHIELD	
123	BG					27	R	- [With heated seat]		72	G	MICROPHONE VCC	
125	P					28	B			73	BR	COMM (CON-F-DISP)	
126	Y					29	B			74	P	CANL	
128	SB					30	B			75	LG	AV COMM (L)	
129	B					32	R			76	LG	AV COMM (L)	

129	BR	SENSOR GROUND (With CCG)	8	LG	IGN SW	IGN SW	80	W	DIMMER SIGNAL
130	Y	SENROR GROUND	11	SB	M-CAN H	M-CAN H	81	BG	IGNITION SIGNAL
131	L	SENROR POWER SUPPLY	12	P	CAN-L	CAN-L	82	R	REVERSE SIGNAL
132	BG	SENROR POWER SUPPLY	13	L	CAN-H	CAN-H	83	SHIELD	VEHICLE SPEED SIGNAL (8 PULSES)
133	PG	FUEL TANK TEMPERATURE SENSOR	14	P	CAN-L	CAN-L	84	B	SHIELD
134	PG	FUEL TANK TEMPERATURE SENSOR	15	PG	CAN-H	CAN-H	85	PG	COMPOSITE IMAGE SYNC SIGNAL
135	R	ACCELERATOR PEDAL POSITION SENSOR 1	16	W	POWER	POWER	87	R	MICROPHONE SIGNAL
136	G	SENROR PEDAL POSITION SUPPLY					88	SHIELD	SHIELD
137	PG	SENROR PEDAL POSITION SUPPLY					89	V	COMMUNICATE CONTROL
138	PG	BATTERY TEMPERATURE SENSOR					90	V	COMMUNICATE CONTROL
139	PG	BATTERY TEMPERATURE SENSOR					91	V	COMMUNICATE CONTROL

				Terminal No.	Color Of Wire	Signal Name [Specification]
				1	W	-
				2	L	-
				3	G	-
				4	Y	-
				6	B	-
				7	B	-

JRNWD8324GB

METER SYSTEM

< WIRING DIAGRAM >

A

B

C

D

E

F

G

H

I

J

K


L

M

O

P

METER	Connector No.	M221	Connector No.	R8
	Connector Name	WIRE TO WIRE	Connector Name	LANE CAMERA UNIT
	Connector Type	MOSFN-LC	Connector Type	TH05FWNH



Terminal Color Of No.	Signal Name [Specification]	Terminal Color Of No.	Signal Name [Specification]
1	W	1	B
2	R	4	L
3	W	5	GROUND

ITS COMM-H

GROUND

IGNITION


ITS COMM-L



Terminal Color Of No.	Signal Name [Specification]
1	-
2	-
3	-

WIRE TO WIRE

MWI	Connector No.	M222	Connector No.	M222
	Connector Name	WIRE TO WIRE	Connector Name	WIRE TO WIRE
	Connector Type	M03MW-LC	Connector Type	M03MW-LC



MWI

JRNWD8325GB

CLOCK


< WIRING DIAGRAM >

CLOCK

Wiring Diagram

INFOID:0000000011257176

CLOCK

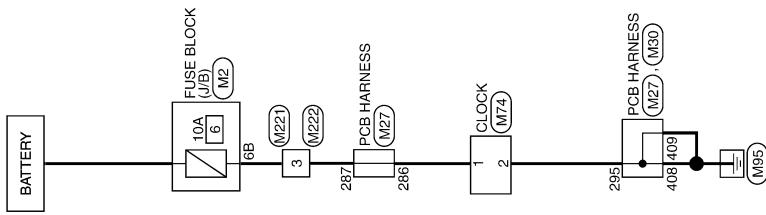


2013/10/22

JRNWD0913GB

CLOCK

< WIRING DIAGRAM >

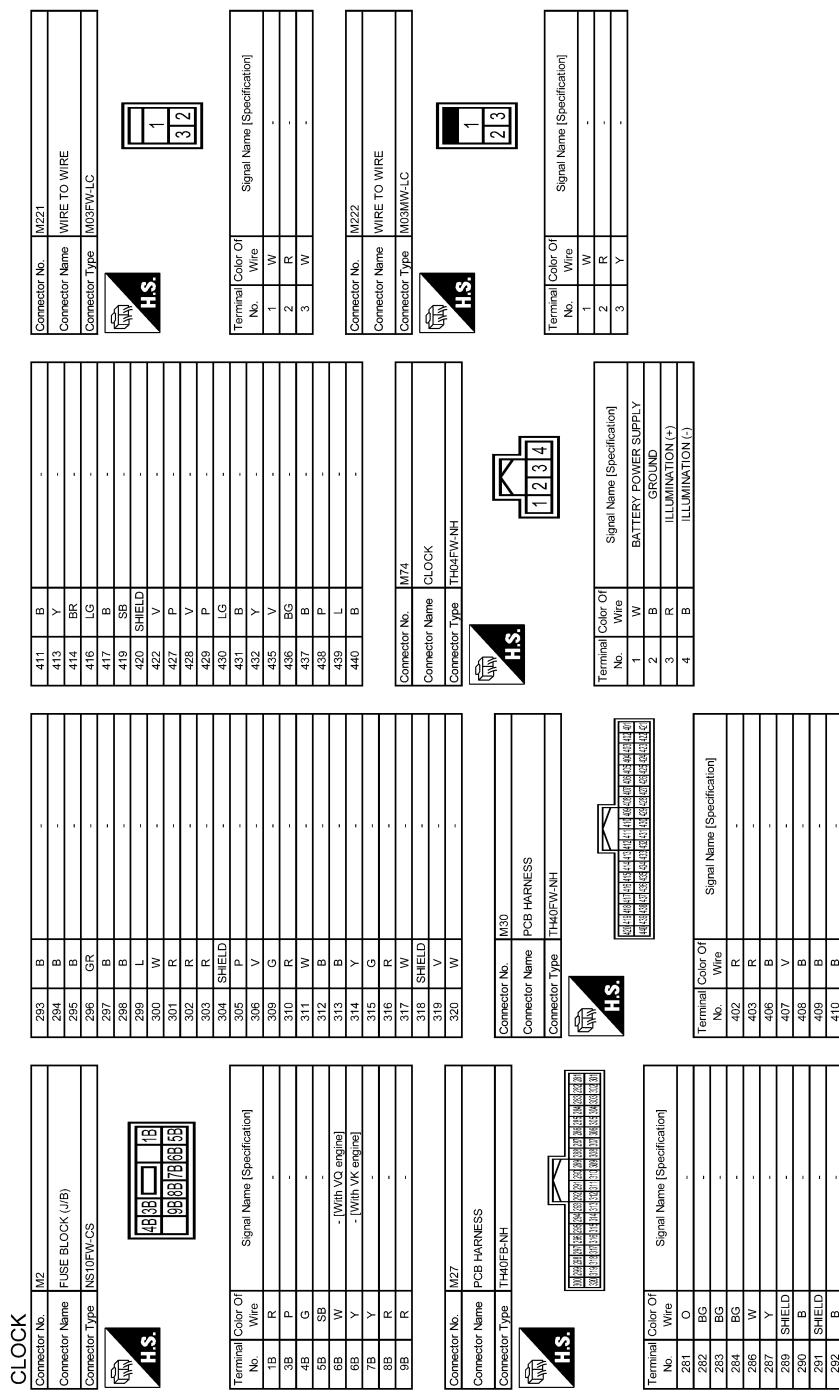

JRNWD8326GB

○

□

MWI

MI

MI

MI

K

L

I

H

G

F

E

D

C

B

A

DIAGNOSIS AND REPAIR WORKFLOW (METER SYSTEM)

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW (METER SYSTEM)

Work flow

INFOID:000000011257177

OVERALL SEQUENCE

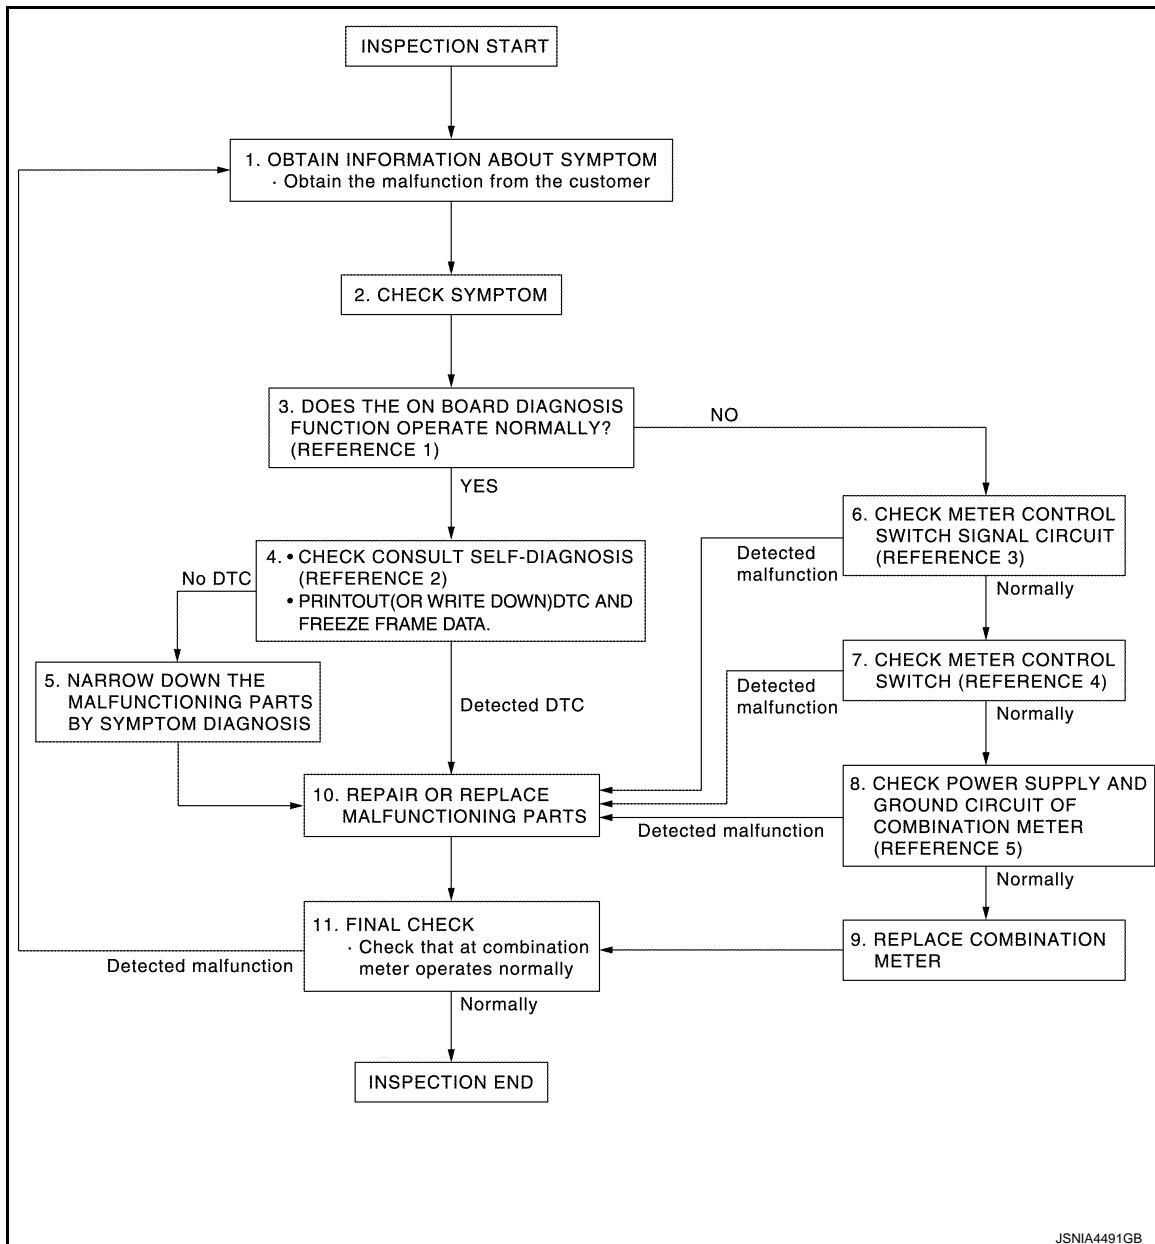

JSNIA4491GB

- Reference 1...MWI-30, "On Board Diagnosis Function".
- Reference 2...MWI-45, "DTC Index".
- Reference 3...MWI-75, "Diagnosis Procedure".
- Reference 4...MWI-76, "Component Inspection".
- Reference 5...MWI-74, "COMBINATION METER : Diagnosis Procedure".

DETAILED FLOW

1. OBTAIN INFORMATION ABOUT SYMPTOM

Interview the customer to obtain as much information as possible about the conditions and environment under which the malfunction occurred.

>> GO TO 2.

DIAGNOSIS AND REPAIR WORKFLOW (METER SYSTEM)

< BASIC INSPECTION >

2.CHECK SYMPTOM

- Check the symptom based on the information obtained from the customer.
- Check that any other malfunctions are present.

>> GO TO 3.

3.CHECK ON BOARD DIAGNOSIS OPERATION

Check that the on board diagnosis function operates. Refer to [MWI-30, "On Board Diagnosis Function"](#).

Does the on board diagnosis function operate normally?

- YES >> GO TO 4.
NO >> GO TO 6.

4.CHECK CONSULT SELF-DIAGNOSIS RESULTS

1. Connect CONSULT and perform self-diagnosis. Refer to [MWI-45, "DTC Index"](#).
2. When DTC is detected, follow the instructions below:
 - Record DTC and Freeze Frame Data.

Are self-diagnosis results normal?

- YES >> GO TO 5.
NO >> GO TO 10.

5.NARROW DOWN THE MALFUNCTIONING PARTS BY SYMPTOM DIAGNOSIS

Perform symptom diagnosis and narrow down the malfunctioning parts.

>> GO TO 10.

6.CHECK METER CONTROL SWITCH SIGNAL CIRCUIT

Check meter control switch signal circuit. Refer to [MWI-75, "Diagnosis Procedure"](#).

Is inspection result OK?

- YES >> GO TO 7.
NO >> GO TO 10.

7.CHECK METER CONTROL SWITCH

Check meter control switch. Refer to [MWI-76, "Component Inspection"](#).

Is inspection result OK?

- YES >> GO TO 8.
NO >> GO TO 10.

8.CHECK COMBINATION METER POWER SUPPLY AND GROUND CIRCUITS

Check combination meter power supply and ground circuits. Refer to [MWI-74, "COMBINATION METER : Diagnosis Procedure"](#).

Is inspection result OK?

- YES >> GO TO 9.
NO >> GO TO 10.

9.REPLACE COMBINATION METER

Replace combination meter.

>> GO TO 11.

10.REPAIR OR REPLACE MALFUNCTIONING PARTS

Repair or replace the malfunctioning parts.

NOTE:

If DTC is displayed, erase DTC after repair or replace malfunctioning parts.

>> GO TO 11.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

DIAGNOSIS AND REPAIR WORKFLOW (METER SYSTEM)

< BASIC INSPECTION >

11.FINAL CHECK

Check that the combination meter operates normally.

Do they operate normally?

YES >> INSPECTION END

NO >> GO TO 1.

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

U1000 CAN COMM CIRCUIT

Description

INFOID:0000000011257178

CAN (Controller Area Network) is a serial communication system for real time application. It is an on-vehicle multiplex communication system with high data communication speed and excellent error detectability. Many electronic control units are equipped onto vehicles, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with two communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Signal Chart. Refer to [LAN-35, "CAN COMMUNICATION SYSTEM : CAN Communication Signal Chart"](#).

DTC Logic

INFOID:0000000011257179

DTC DETECTION LOGIC

DTC	Display contents of CONSULT	Diagnostic item is detected when...	Probable malfunction location
U1000	CAN COMM CIRCUIT	When combination meter is not transmitting or receiving CAN communication signal for 2 seconds or more.	CAN communication system

Diagnosis Procedure

INFOID:0000000011257180

1 .PERFORM SELF DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Check "Self Diagnostic Result" of "METER/M&A".

Is "CAN COMM CIRCUIT" displayed?

- YES >> Refer to [LAN-25, "Trouble Diagnosis Flow Chart"](#).
NO >> Refer to [GI-44, "Intermittent Incident"](#).

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

U1010 CONTROL UNIT (CAN)

Description

INFOID:0000000011257181

Initial diagnosis of combination meter.

DTC Logic

INFOID:0000000011257182

DTC DETECTION LOGIC

DTC	Display contents of CONSULT	Diagnostic item is detected when...	Probable malfunction location
U1010	CONTROL UNIT (CAN)	When detecting error during the initial diagnosis of the CAN controller of combination meter.	Combination meter

Diagnosis Procedure

INFOID:0000000011257183

1.REPLACE COMBINATION METER

When DTC “U1010” is detected, replace combination meter.

>> INSPECTION END

B2205 VEHICLE SPEED

< DTC/CIRCUIT DIAGNOSIS >

B2205 VEHICLE SPEED

Description

INFOID:0000000011257184

Vehicle speed signal is transmitted from ABS actuator and electric unit (control unit) via CAN communication to combination meter.

DTC Logic

INFOID:0000000011257185

DTC DETECTION LOGIC

DTC	Display contents of CONSULT	Diagnostic item is detected when...	Probable malfunction location
B2205	VEHICLE SPEED	An abnormal vehicle speed signal is input from ABS actuator and electric unit (control unit) for 2 seconds or more	<ul style="list-style-type: none">• Wheel sensor• ABS actuator and electric unit (control unit)

Diagnosis Procedure

INFOID:0000000011257186

1. PERFORM SELF-DIAGNOSIS OF ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Perform "Self Diagnostic Result" of "ABS", and repair or replace malfunctioning parts.

>> Refer to [BRC-39, "CONSULT Function"](#).

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

B2267 ENGINE SPEED

< DTC/CIRCUIT DIAGNOSIS >

B2267 ENGINE SPEED

Description

INFOID:0000000011257187

The engine speed signal is transmitted from ECM to the combination meter via CAN communication.

DTC Logic

INFOID:0000000011257188

DTC DETECTION LOGIC

DTC	Display contents of CONSULT	Diagnostic item is detected when...	Probable malfunction location
B2267	ENGINE SPEED	ECM continuously transmits abnormal engine speed signals for 2 seconds or more	<ul style="list-style-type: none">• Crankshaft position sensor (POS)• ECM

Diagnosis Procedure

INFOID:0000000011257189

1. PERFORM SELF-DIAGNOSIS OF ECM

Perform "Self Diagnostic Result" of "ENGINE", and repair or replace malfunctioning parts.

>> Refer to [EC-103, "DTC Index"](#) (VQ37VHR), or [EC-645, "DTC Index"](#) (VK56VD).

B2268 WATER TEMP

< DTC/CIRCUIT DIAGNOSIS >

B2268 WATER TEMP

Description

INFOID:0000000011257190

The engine coolant temperature signal is transmitted from ECM to the combination meter via CAN communication.

DTC Logic

INFOID:0000000011257191

DTC DETECTION LOGIC

DTC	Display contents of CONSULT	Diagnostic item is detected when...	Probable malfunction location
B2268	WATER TEMP	ECM continuously transmits abnormal engine coolant temperature signals for 60 seconds or more	<ul style="list-style-type: none">• Engine coolant temperature sensor• ECM

Diagnosis Procedure

INFOID:0000000011257192

1. PERFORM SELF-DIAGNOSIS OF ECM

Perform "Self Diagnosis Result" of "ENGINE", and repair or replace malfunctioning parts.

>> Refer to [EC-103, "DTC Index"](#) (VQ37VHR), or [EC-645, "DTC Index"](#) (VK56VD).

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

POWER SUPPLY AND GROUND CIRCUIT COMBINATION METER

COMBINATION METER : Diagnosis Procedure

INFOID:0000000011257193

1.CHECK FUSE

Check for blown fuses.

Power source	Fuse No.
Battery	6
Ignition switch ON or START	4

Is the inspection result normal?

YES >> GO TO 2.

NO >> Be sure to eliminate cause of malfunction before installing new fuse.

2.CHECK POWER SUPPLY CIRCUIT

Check voltage between combination meter harness connector and ground.

Terminals		Ignition switch position	Voltage (Approx.)
(+)	(-)		
Combination meter			
Connector	Terminal	Ground	OFF
	1		ON
M53	2		Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check harness between combination meter and fuse.

3.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector.
3. Check continuity between combination meter harness connector and ground.

Combination meter		Continuity
Connector	Terminal	
M53	12	
	23	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair harness or connector.

METER CONTROL SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

METER CONTROL SWITCH SIGNAL CIRCUIT

Diagnosis Procedure

INFOID:0000000011257194

1.CHECK COMBINATION METER INPUT SIGNAL

1. Turn ignition switch ON.
2. Measure voltage between the following terminals of the combination meter.

Combination meter		Condition	Voltage (Approx.)
Connector	Terminals	(+)	(-)
M53	7	When enter switch is pressed	0 V
		Other than the above	5 V
	8	When select switch is pressed	0 V
		Other than the above	5 V
	9	When illumination control switch (+) is pressed	0 V
		Other than the above	5 V
	10	When illumination control switch (-) is pressed	0 V
		Other than the above	5 V
	11	When trip reset switch is pressed	0 V
		Other than the above	5 V

Is the inspection result normal?

YES >> INSPECTION END
NO >> GO TO 2.

2.CHECK METER CONTROL SWITCH SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector and meter control switch connector.
3. Check continuity between combination meter harness connector and meter control switch harness connector.

Terminals		Continuity		
Combination meter	Meter control switch			
Connector	Terminal	Connector	Terminal	
M53	6	M54	2	Existed
	7		1	
	8		11	
	9		6	
	10		3	
	11		12	

4. Check continuity between combination meter harness connector and ground.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

METER CONTROL SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Combination meter		Ground	Continuity
Connector	Terminal		
M53	6		
	7		
	8		Not existed
	9		
	10		
	11		

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair harness or connector.

Component Inspection

INFOID:0000000011257195

1. CHECK METER CONTROL SWITCH

1. Turn ignition switch OFF.
2. Disconnect meter control switch connector.
3. Check meter control switch.

Terminals		Condition	Continuity
Meter control switch			
1	2	When enter switch is pressed	Existed
		Other than the above	Not existed
11	2	When select switch is pressed	Existed
		Other than the above	Not existed
6	2	When illumination control switch (+) is pressed	Existed
		Other than the above	Not existed
3	2	When illumination control switch (-) is pressed	Existed
		Other than the above	Not existed
12	2	When trip reset switch is pressed	Existed
		Other than the above	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace meter control switch. Refer to [MWI-95, "Removal and Installation"](#).

FUEL LEVEL SENSOR SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

FUEL LEVEL SENSOR SIGNAL CIRCUIT

Component Function Check

INFOID:0000000011257196

1. PERFORM COMPONENT FUNCTION CHECK (1)

1. Turn ignition switch OFF.
2. Disconnect fuel level sensor unit and fuel pump (main) and fuel level sensor unit (sub) connector.
3. Connect variable resistor between harness connector terminals located on the vehicle side of the fuel level sensor unit and fuel pump (main) and the fuel level sensor unit (sub).

Fuel level sensor unit and fuel pump (main)		Fuel level sensor unit (sub)	
Connector	Terminal	Connector	Terminal
B241	5	B21	1

4. Set variable resistor according to the resistance value shown in the following table and turn ignition switch ON.

Resistance (Ω) [*] (Approx.)	Fuel gauge indication position (Approx.)
Less than 94	Full
140	3/4
186	2/4
232	1/4
More than 278	Empty

*: Reference resistance values used when the combination meter judges the indication position of the fuel gauge.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Refer to [MWI-77, "Diagnosis Procedure"](#).

2. PERFORM COMPONENT FUNCTION CHECK (2)

Check the fuel level sensor unit and fuel pump (main) and/or the fuel level sensor unit (sub). Refer to [MWI-78, "Component Inspection"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace fuel level sensor unit and fuel pump (main) or fuel level sensor unit (sub). Refer to [FL-6, "Removal and Installation"](#).

Diagnosis Procedure

INFOID:0000000011257197

1. CHECK FUEL LEVEL SENSOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector and fuel level sensor unit (sub) connector.
3. Check continuity between combination meter harness connector and fuel level sensor unit (sub) harness connector.

Combination meter		Fuel level sensor unit (sub)		Continuity
Connector	Terminal	Connector	Terminal	
M53	34	B21	1	Existed

4. Check continuity between combination meter harness connector and ground.

FUEL LEVEL SENSOR SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Combination meter		Ground	Continuity
Connector	Terminal		Not existed
M53	34		Not existed

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair harness or connector.

2.CHECK FUEL LEVEL SENSOR UNIT (MAIN-SUB) CIRCUIT

1. Disconnect fuel level sensor unit and fuel pump (main) connector.
2. Check for continuity between the fuel level sensor unit (sub) harness connector and the fuel level sensor unit and fuel pump (main) harness connector.

Fuel level sensor unit (sub)		Fuel level sensor unit and fuel pump (main)		Continuity
Connector	Terminal	Connector	Terminal	
B21	2	B241	2	Existed

3. Check for continuity between the fuel level sensor unit (sub) harness connector and the ground.

Fuel level sensor unit (sub)		Ground	Continuity
Connector	Terminal		Not existed
B21	2		Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3.CHECK FUEL LEVEL SENSOR GROUND CIRCUIT

1. Check continuity between fuel level sensor unit and fuel pump (main) harness connector and combination meter harness connector.

Fuel level sensor unit and fuel pump (main)		Combination meter		Continuity
Connector	Terminal	Connector	Terminal	
B241	5	M53	24	Existed

2. Check for continuity between the fuel level sensor unit and fuel pump (main) harness connector and the ground.

Fuel level sensor unit and fuel pump (main)		Ground	Continuity
Connector	Terminal		Not existed
B241	5		Not existed

Is the inspection result normal?

YES >> Replace combination meter. Refer to [MWI-94, "Removal and Installation"](#).

NO >> Repair harness or connector.

Component Inspection

INFOID:0000000011257198

1.REMOVE FUEL LEVEL SENSOR UNIT (MAIN)

Remove the fuel level sensor unit (main). Refer to [FL-6, "Removal and Installation"](#).

>> GO TO 2.

2.CHECK FUEL LEVEL SENSOR UNIT (MAIN)

FUEL LEVEL SENSOR SIGNAL CIRCUIT


< DTC/CIRCUIT DIAGNOSIS >

Check the resistance between fuel level sensor unit and fuel pump.

Terminals		Condition	Resistance (Ω) (Approx.)	Height [mm (in)]
Fuel level sensor unit (main)				
2	5	Full* (A)	44	202.3 (7.96)
		Empty* (B)	142	36.8 (1.449)

*: When float rod is contact with stopper.

Is inspection result OK?

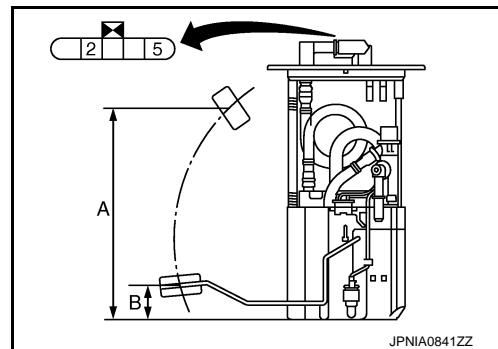

YES >> GO TO 3.

NO >> Replace fuel level sensor unit and fuel pump (main). Refer to [FL-6, "Removal and Installation"](#).

3. REMOVE FUEL LEVEL SENSOR UNIT (SUB)

Remove the fuel level sensor unit (sub). Refer to [FL-6, "Removal and Installation"](#).

>> GO TO 4.

4. CHECK FUEL LEVEL SENSOR UNIT (SUB)

Check the resistance between fuel level sensor unit (sub).


Terminals		Condition	Resistance (Ω) (Approx.)	Height [mm (in)]
Fuel level sensor unit (main)				
1	2	Full* (A)	7	3.9 (0.154)
		Empty* (B)	142	175.8 (6.92)

*: When float rod is contact with stopper.

Is inspection result OK?

YES >> INSPECTION END

NO >> Replace fuel level sensor unit (sub). Refer to [FL-6, "Removal and Installation"](#).

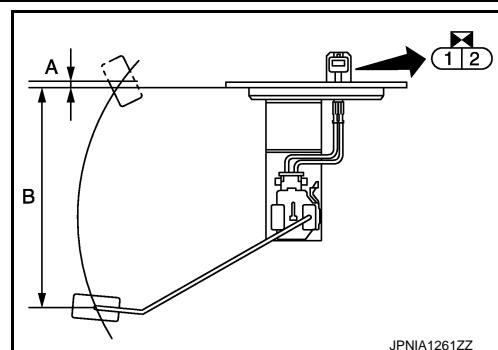

OIL PRESSURE SWITCH SIGNAL CIRCUIT (VQ37VHR ENGINE MODELS)

< DTC/CIRCUIT DIAGNOSIS >

OIL PRESSURE SWITCH SIGNAL CIRCUIT (VQ37VHR ENGINE MODELS)

Component Function Check

INFOID:0000000011257199

1. CHECK COMBINATION METER INPUT SIGNAL

Select the "Data Monitor" for the "METER/M&A" and check the "OIL W/L" monitor value.

"OIL W/L"

Ignition switch ON : On
Engine running : Off

>> INSPECTION END

Diagnosis Procedure

INFOID:0000000011257200

1. CHECK OIL PRESSURE SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector and oil pressure switch connector.
3. Check continuity between IPDM E/R harness connector and oil pressure switch harness connector.

Terminals				Continuity	
(+) (-)		IPDM E/R Oil pressure switch			
Connector	Terminal	Connector	Terminal		
E7	75	F37	1	Existed	

4. Check continuity between IPDM E/R harness connector and ground.

Terminals			Continuity
(+) (-)		IPDM E/R	
Connector	Terminal	Ground	
E7	75		Not existed

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Repair harness or connector.


Component Inspection

INFOID:0000000011257201

1. CHECK OIL PRESSURE SWITCH

Check continuity between oil pressure switch and ground.

Condition	Continuity
Engine stopped	Existed
Engine running	Not existed

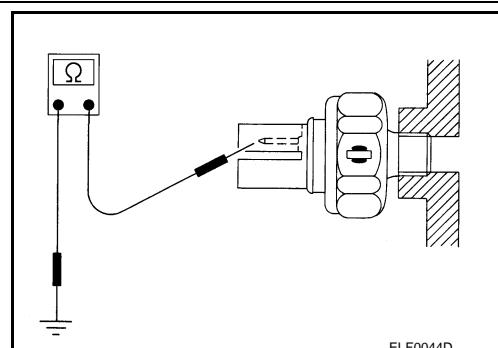

Is the inspection result normal?

- YES >> INSPECTION END

OIL PRESSURE SWITCH SIGNAL CIRCUIT (VQ37VHR ENGINE MODELS)

< DTC/CIRCUIT DIAGNOSIS >

NO >> Replace oil pressure switch. Refer to [EM-90, "2WD : Disassembly and Assembly"](#) (2WD models) or [LU-16, "Removal and Installation"](#) (AWD).

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

WASHER LEVEL SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

WASHER LEVEL SWITCH SIGNAL CIRCUIT

Diagnosis Procedure

INFOID:0000000011257202

1.CHECK WASHER LEVEL SWITCH SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector and washer level switch connector.
3. Check continuity between combination meter harness connector and washer level switch harness connector.

Terminals				Continuity
Combination meter		Washer level switch		
Connector	Terminal	Connector	Terminal	
M53	29	E32	1	Existed

4. Check continuity between combination meter harness connector and ground.

Terminals		Continuity
Combination meter		Ground
Connector	Terminal	
M53	29	Not existed

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair harness or connector.

2.CHECK WASHER LEVEL SWITCH GROUND CIRCUIT

Check continuity between washer level switch connector and ground.

Terminals		Continuity
Washer level switch		Ground
Connector	Terminal	
E32	2	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair harness or connector.

Component Inspection

INFOID:0000000011257203

1.CHECK WASHER LEVEL SWITCH

1. Turn ignition switch OFF.
2. Disconnect washer level switch connector.
3. Check washer level switch.

Terminals		Condition	Continuity
Washer level switch			
1	2	Washer level switch ON	Existed
		Washer level switch OFF	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace washer level switch. Refer to [WW-51, "Removal and Installation"](#).

THE FUEL GAUGE INDICATOR DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

THE FUEL GAUGE INDICATOR DOES NOT OPERATE

Description

INFOID:0000000011257204

Fuel gauge will not indicate from a certain position.

Diagnosis Procedure

INFOID:0000000011257205

1. CONDUCTING THE COMBINATION METER SELF-DIAGNOSIS MODE

Perform the self-diagnosis mode of combination meter, and then check that the fuel gauge operates normally.
Refer to [MWI-30, "On Board Diagnosis Function"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace combination meter. Refer to [MWI-94, "Removal and Installation"](#).

2. CHECK FLOAT INTERFERENCE

Check that the float arm interferes with or binds to other components in the fuel tank.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace malfunctioning part.

3. CHECK FUEL LEVEL SENSOR SIGNAL CIRCUIT

Check the fuel level sensor signal circuit. Refer to [MWI-77, "Component Function Check"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO >> Repair or replace malfunctioning parts.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

THE METER CONTROL SWITCH IS INOPERATIVE

< SYMPTOM DIAGNOSIS >

THE METER CONTROL SWITCH IS INOPERATIVE

Description

INFOID:0000000011257206

If any of the following malfunctions is found for the meter control switch operation.

- All switches are inoperative
- The specified switch cannot be operated

Diagnosis Procedure

INFOID:0000000011257207

1.CHECK METER CONTROL SWITCH SIGNAL CIRCUIT

Check the meter control switch signal circuit. Refer to [MWI-75, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair harness or connector.

2.CHECK METER CONTROL SWITCH

Perform a unit check for the meter control switch. Refer to [MWI-76, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-94, "Removal and Installation"](#).
NG >> Replace meter control switch. Refer to [MWI-95, "Removal and Installation"](#).

THE OIL PRESSURE WARNING LAMP DOES NOT TURN ON

< SYMPTOM DIAGNOSIS >

THE OIL PRESSURE WARNING LAMP DOES NOT TURN ON VQ37VHR

VQ37VHR : Description

INFOID:0000000011257208

The oil pressure warning lamp stays off when the ignition switch is turned ON.

VQ37VHR : Diagnosis Procedure

INFOID:0000000011257209

1. CHECK OIL PRESSURE WARNING LAMP

Perform auto active test. Refer to [PCS-11, "Diagnosis Description"](#).

Is oil pressure warning lamp blinking?

YES >> GO TO 2.

NO >> GO TO 4.

2. CHECK OIL PRESSURE SWITCH SIGNAL CIRCUIT

Check the oil pressure switch signal circuit. Refer to [MWI-80, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3. CHECK OIL PRESSURE SWITCH

Perform a unit check for the oil pressure switch. Refer to [MWI-80, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).

NO >> Replace oil pressure switch. Refer to [EM-90, "2WD : Disassembly and Assembly"](#) (2WD models) or [LU-16, "Removal and Installation"](#) (AWD).

4. CHECK COMBINATION METER INPUT SIGNAL

Connect CONSULT and perform an input signal check for the combination meter. Refer to [MWI-80, "Component Function Check"](#).

Is the inspection result normal?

YES >> Replace combination meter. Refer to [MWI-94, "Removal and Installation"](#).

NO >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).

VK56VD

VK56VD : Description

INFOID:0000000011257210

The oil pressure warning lamp stays off when the ignition switch is turned ON.

VK56VD : Diagnosis Procedure

INFOID:0000000011257211

1. CHECK COMBINATION METER INPUT SIGNAL

1. Start the engine.
2. Select "Data Monitor" in "METER/M&A" to check that the oil pressure warning lamp state is consistent with the "OIL W/L" monitor value.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace combination meter. Refer to [MWI-94, "Removal and Installation"](#).

A

B

C

D

E

F

G

H

I

J

K

L

M

N

O

P

MWI

THE OIL PRESSURE WARNING LAMP DOES NOT TURN OFF

< SYMPTOM DIAGNOSIS >

THE OIL PRESSURE WARNING LAMP DOES NOT TURN OFF

VQ37VHR

VQ37VHR : Description

INFOID:0000000011257212

The oil pressure warning lamp remains illuminated while the engine is running (normal oil pressure).

VQ37VHR : Diagnosis Procedure

INFOID:0000000011257213

1. CHECK OIL PRESSURE WARNING LAMP

Perform auto active test. Refer to [PCS-11, "Diagnosis Description"](#).

Is oil pressure warning lamp blinking?

YES >> GO TO 2.

NO >> GO TO 5.

2. CHECK IPDM E/R OUTPUT VOLTAGE

1. Turn ignition switch OFF.
2. Disconnect the oil pressure switch connector.
3. Turn ignition switch ON.
4. Check voltage between the oil pressure switch harness connector and ground.

Terminals		Voltage (Approx.)
(+)	(-)	
Oil pressure switch		Ground
Connector	Terminal	
F37	1	12 V

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK OIL PRESSURE SWITCH

Perform a unit check for the oil pressure switch. Refer to [MWI-80, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).

NO >> Replace oil pressure switch. Refer to [EM-90, "2WD : Disassembly and Assembly"](#) (2WD models) or [LU-16, "Removal and Installation"](#) (AWD).

4. CHECK OIL PRESSURE SWITCH SIGNAL CIRCUIT

Check the oil pressure switch signal circuit. Refer to [MWI-80, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair harness or connector.

5. CHECK COMBINATION METER INPUT SIGNAL

Connect CONSULT and perform an input signal check for the combination meter. Refer to [MWI-80, "Component Function Check"](#).

Is the inspection result normal?

YES >> Replace combination meter. Refer to [MWI-94, "Removal and Installation"](#).

NO >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).

VK56VD

VK56VD : Description

INFOID:0000000011257214

The oil pressure warning lamp remains illuminated while the engine is running (normal oil pressure).

THE OIL PRESSURE WARNING LAMP DOES NOT TURN OFF

< SYMPTOM DIAGNOSIS >

VK56VD : Diagnosis Procedure

INFOID:000000011257215

1. CHECK COMBINATION METER INPUT SIGNAL

1. Start the engine.
2. Select "Data Monitor" in "METER/M&A" to check that the oil pressure warning lamp state is consistent with the "OIL W/L" monitor value.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace combination meter. Refer to [MWI-94, "Removal and Installation"](#).

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

THE PARKING BRAKE RELEASE WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

< SYMPTOM DIAGNOSIS >

THE PARKING BRAKE RELEASE WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

Description

INFOID:000000011257216

- The parking brake warning is displayed during vehicle travel even though the parking brake is released.
- The parking brake warning is not displayed even though driving the vehicle with the parking brake applied.

Diagnosis Procedure

INFOID:000000011257217

1. CHECK PARKING BRAKE WARNING LAMP OPERATION

1. Start engine.
2. Check the operation of the brake warning lamp when operating the parking brake.

Condition	Warning lamp status
Parking brake applied	ON
Parking brake released	OFF

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-94, "Removal and Installation"](#).
NO >> GO TO 2.

2. CHECK PARKING BRAKE SWITCH SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Check the parking brake switch signal circuit. Refer to [WCS-46, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair harness or connector.

3. CHECK PARKING BRAKE SWITCH UNIT

Perform a unit check for the parking brake switch. Refer to [WCS-46, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-94, "Removal and Installation"](#).
NO >> Replace parking brake switch. Refer to [PB-7, "Exploded View"](#).

THE LOW WASHER FLUID WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

< SYMPTOM DIAGNOSIS >

THE LOW WASHER FLUID WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

Description

INFOID:000000011257218

- The warning is still displayed even after washer fluid is added.
- The warning is not displayed even though the washer tank is empty.

Diagnosis Procedure

INFOID:000000011257219

1.CHECK WASHER LEVEL SWITCH SIGNAL CIRCUIT

Check the washer level switch signal circuit. Refer to [MWI-82, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair harness or connector.

2.CHECK WASHER LEVEL SWITCH UNIT

Perform a unit check for the washer level switch. Refer to [MWI-82, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-94, "Removal and Installation"](#).
NO >> Replace washer level switch. Refer to [WW-51, "Removal and Installation"](#).

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

THE DOOR OPEN WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

< SYMPTOM DIAGNOSIS >

THE DOOR OPEN WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

Description

INFOID:000000011257220

- The door ajar warning is displayed even though all of the doors are closed.
- The door ajar warning is not displayed even though a door is ajar.

Diagnosis Procedure

INFOID:000000011257221

1. CHECK BCM INPUT/OUTPUT SIGNAL

Connect CONSULT and check the BCM input signals. Refer to [DLK-87, "Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> GO TO 3.

2. CHECK COMBINATION METER INPUT SIGNAL

Select the "Data Monitor" for the "METER/M&A" and check the "DOOR W/L" monitor value.

"DOOR W/L"	
Door open	: On
Door closed	: Off

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-94, "Removal and Installation"](#).
NO >> Replace BCM. Refer to [BCS-91, "Removal and Installation"](#).

3. CHECK DOOR SWITCH SIGNAL CIRCUIT

Check the door switch signal circuit. Refer to [DLK-87, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair harness or connector.

4. CHECK DOOR SWITCH

Perform a unit check for the door switch. Refer to [DLK-89, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-94, "Removal and Installation"](#).
NO >> Replace applicable door switch. Refer to [DLK-228, "Removal and Installation"](#).

THE AMBIENT TEMPERATURE DISPLAY IS INCORRECT

< SYMPTOM DIAGNOSIS >

THE AMBIENT TEMPERATURE DISPLAY IS INCORRECT

Description

INFOID:0000000011257224

- The displayed ambient air temperature is higher than the actual temperature.
- The displayed ambient air temperature is lower than the actual temperature.

Diagnosis Procedure

INFOID:0000000011257225

NOTE:

Check that the symptom is not applicable to the normal operating condition before starting diagnosis. Refer to [MWI-93, "INFORMATION DISPLAY : Description"](#).

1.CHECK AMBIENT SENSOR SIGNAL CIRCUIT

Check the ambient sensor signal circuit. Refer to [HAC-62, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair harness or connector.

2.CHECK AMBIENT SENSOR

Perform the part check for the ambient sensor. Refer to [HAC-63, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace combination meter. Refer to [MWI-94, "Removal and Installation"](#).

NO >> Replace ambient sensor. Refer to [HAC-126, "Removal and Installation"](#).

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

NORMAL OPERATING CONDITION INFORMATION DISPLAY

INFORMATION DISPLAY : Description

INFOID:0000000011257226

AMBIENT TEMPERATURE

The displayed ambient temperature on the information display may differ from the actual temperature because it is a corrected value calculated from the ambient sensor signal by the combination meter. Refer to [MWI-19, "INFORMATION DISPLAY : System Description"](#) for details on the correction process.

DISTANCE TO EMPTY

The calculated distance to empty may differ from the actual distance to empty if the refueling amount is approximately 15 l (4 US gal, 3-1/4 Imp gal) or less. This is because the refuel control (moves the fuel gauge needle quicker than normal judging that the driver is refueling the vehicle) is not performing.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

COMBINATION METER

< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION

COMBINATION METER


Exploded View

INFOID:0000000011257227

REMOVAL

Refer to [IP-12, "Exploded View"](#).

DISASSEMBLY

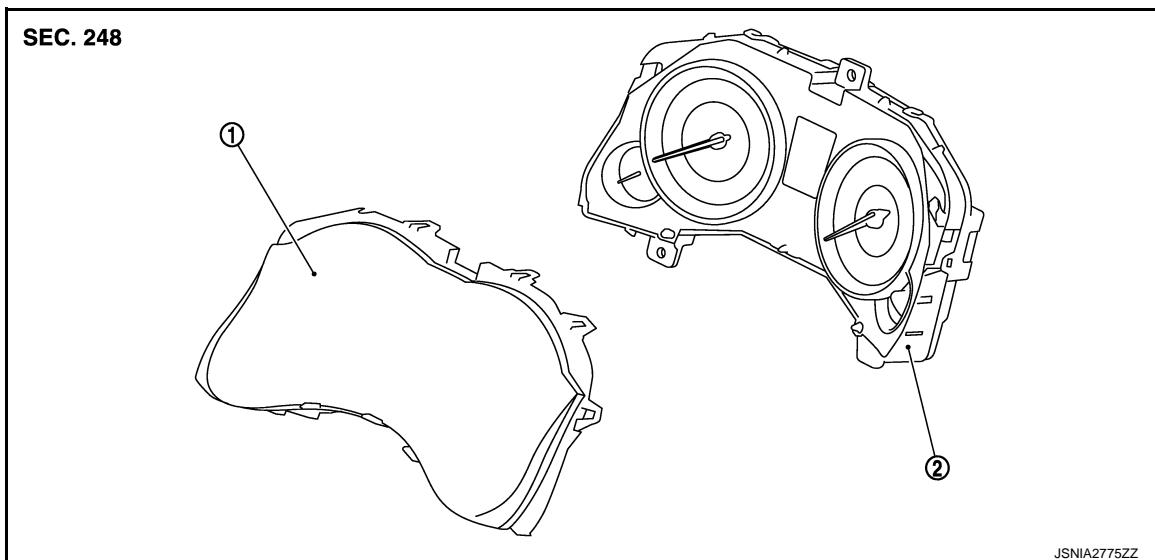

1. Front cover and meter housing assembly
2. Unified meter control unit

Removal and Installation

INFOID:0000000011257228

REMOVAL

1. Remove the cluster lid A. Refer to [IP-13, "Removal and Installation"](#).
2. Remove screws and connector, and then remove combination meter.

INSTALLATION

Install in the reverse order of removal.

Disassembly and Assembly

INFOID:0000000011257229

DISASSEMBLY

Disengage the tabs to separate front cover and meter housing assembly.

ASSEMBLY

Assemble in the reverse order of disassembly.

METER CONTROL SWITCH

< REMOVAL AND INSTALLATION >

METER CONTROL SWITCH


Exploded View

INFOID:0000000011257230

REMOVAL

Refer to [IP-12, "Exploded View"](#).

DISASSEMBLY

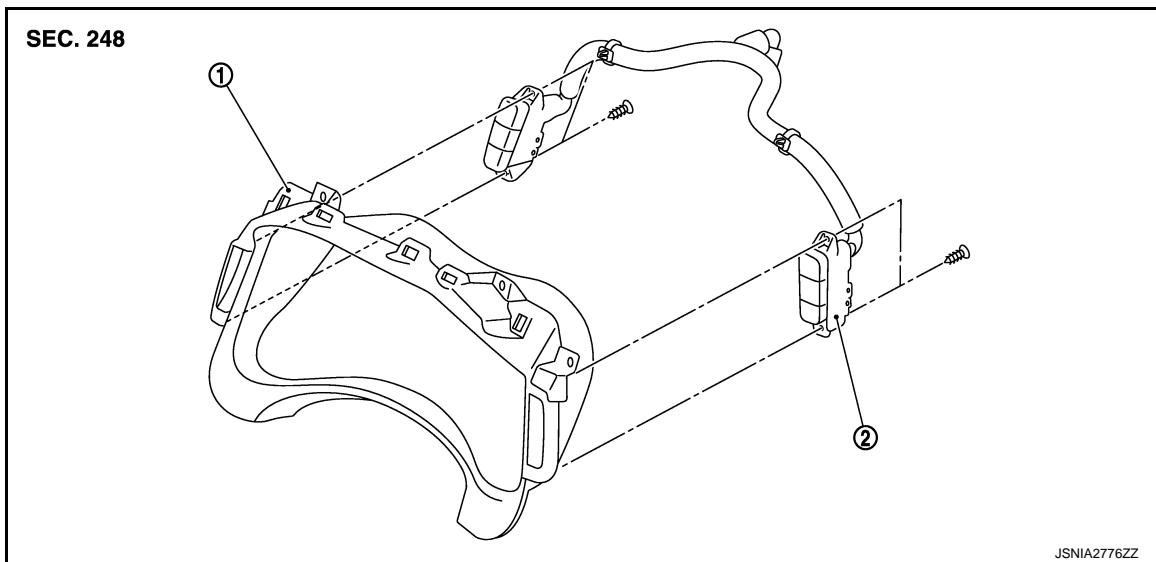

1. Cluster lid A
2. Meter control switch

Removal and Installation

INFOID:0000000011257231

REMOVAL

1. Remove cluster lid A. Refer to [IP-13, "Removal and Installation"](#).
2. Remove clip.
3. Remove screws and remove meter control switch.

INSTALLATION

Install in the reverse order of removal.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

CLOCK

< REMOVAL AND INSTALLATION >

CLOCK

Exploded View

INFOID:0000000011257232

REMOVAL

Refer to [IP-12, "Exploded View".](#)

Removal and Installation

INFOID:0000000011257233

REMOVAL

1. Remove center ventilator assembly. Refer to [IP-13, "Removal and Installation".](#)
2. Remove screws and remove clock.

INSTALLATION

Install in the reverse order of removal.