

WCS

SECTION
WARNING CHIME SYSTEM

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

CONTENTS

PRECAUTION	3	PARKING BRAKE RELEASE WARNING CHIME : System Diagram	13
PRECAUTIONS	3	PARKING BRAKE RELEASE WARNING CHIME : System Description	13
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER"	3	DIAGNOSIS SYSTEM (COMBINATION METER)	15
Precautions for Removing Battery Terminal	3	CONSULT Function	15
SYSTEM DESCRIPTION	5	DIAGNOSIS SYSTEM (BCM)	20
COMPONENT PARTS	5	COMMON ITEM	20
Component Parts Location	5	COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)	20
Component Description	5	BUZZER	21
Combination Meter	6	BUZZER : CONSULT Function (BCM - BUZZER)...	21
SYSTEM	7	ECU DIAGNOSIS INFORMATION	23
WARNING CHIME SYSTEM	7	COMBINATION METER	23
WARNING CHIME SYSTEM : System Diagram	7	Reference Value	23
WARNING CHIME SYSTEM : System Description	7	Fail-Safe	31
WARNING CHIME SYSTEM : Fail-Safe	8	DTC Index	32
LIGHT REMINDER WARNING CHIME	9	BCM	33
LIGHT REMINDER WARNING CHIME : System Diagram	9	List of ECU Reference	33
LIGHT REMINDER WARNING CHIME : System Description	9	WIRING DIAGRAM	34
FRONT FOG LIGHT REMINDER WARNING CHIME	10	WARNING CHIME SYSTEM	34
FRONT FOG LIGHT REMINDER WARNING CHIME : System Diagram	10	Wiring Diagram	34
FRONT FOG LIGHT REMINDER WARNING CHIME : System Description	11	BASIC INSPECTION	41
SEAT BELT WARNING CHIME	11	DIAGNOSIS AND REPAIR WORKFLOW	41
SEAT BELT WARNING CHIME : System Diagram	11	Work Flow	41
SEAT BELT WARNING CHIME : System Descrip- tion	12	DTC/CIRCUIT DIAGNOSIS	43
PARKING BRAKE RELEASE WARNING CHIME	13	POWER SUPPLY AND GROUND CIRCUIT	43
		COMBINATION METER	43
		COMBINATION METER : Diagnosis Procedure	43

WCS

METER BUZZER CIRCUIT	44	THE LIGHT REMINDER WARNING DOES NOT SOUND	48
Component Function Check	44	Description	48
Diagnosis Procedure	44	Diagnosis Procedure	48
SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT	45	THE PARKING BRAKE RELEASE WARNING CONTINUES SOUNDING, OR DOES NOT SOUND	49
Component Function Check	45	Description	49
Diagnosis Procedure	45	Diagnosis Procedure	49
Component Inspection	46	THE SEAT BELT WARNING CONTINUES SOUNDING, OR DOES NOT SOUND	50
PARKING BRAKE SWITCH SIGNAL CIRCUIT	47	Description	50
Diagnosis Procedure	47	Diagnosis Procedure	50
Component Inspection	47		
SYMPTOM DIAGNOSIS	48		

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000012351485

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.


Precautions for Removing Battery Terminal

INFOID:000000012961896

When disconnecting the battery terminal, pay attention to the following.

- Always use a 12V battery as power source.
- Never disconnect battery terminal while engine is running.
- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.
- For vehicles with the engine listed below, remove the battery terminal after a lapse of the specified time:

D4D engine	: 20 minutes	YS23DDT	: 4 minutes
HRA2DDT	: 12 minutes	YS23DDTT	: 4 minutes
K9K engine	: 4 minutes	ZD30DDTi	: 60 seconds
M9R engine	: 4 minutes	ZD30DDTT	: 60 seconds
R9M engine	: 4 minutes		
V9X engine	: 4 minutes		
YD25DDTi	: 2 minutes		

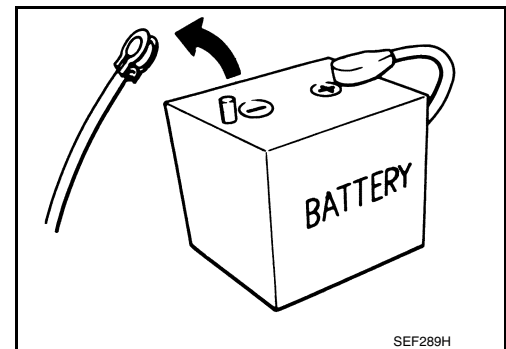

A
B
C
D
E
F
G
H
I
J
K
L
M
WCS
O
P

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- After high-load driving, if the vehicle is equipped with the V9X engine, turn the ignition switch OFF and wait for at least 15 minutes to remove the battery terminal.

NOTE:

PRECAUTIONS

< PRECAUTION >

- Turbocharger cooling pump may operate in a few minutes after the ignition switch is turned OFF.
- Example of high-load driving
 - Driving for 30 minutes or more at 140 km/h (86 MPH) or more.
 - Driving for 30 minutes or more on a steep slope.
- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.

NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

COMPONENT PARTS


< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:0000000012351487

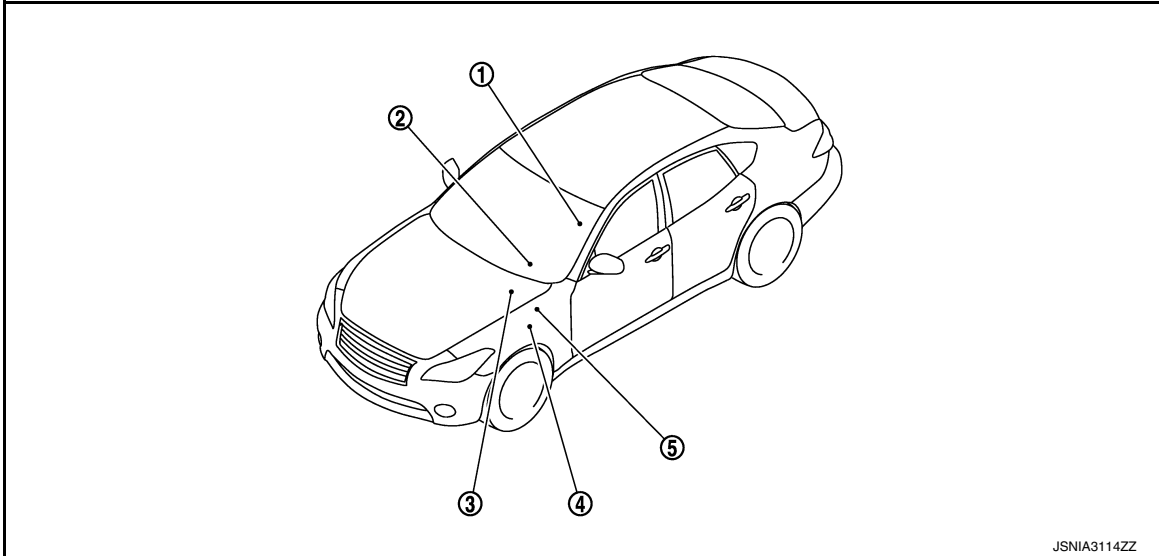

1. Seat belt buckle switch (driver side)
2. Combination meter
3. ABS actuator and electric unit (control unit)
Refer to [BRC-10. "Component Parts Location"](#).
4. Parking brake switch
5. BCM
Refer to [BCS-5. "BODY CONTROL SYSTEM : Component Parts Location"](#).

Component Description

INFOID:0000000012351488

Unit	Description
Combination meter	<ul style="list-style-type: none"> Receives a buzzer output signal from the BCM with CAN communication line and sounds the buzzer. Judges whether the parking brake is released from the vehicle speed signal received from the ABS actuator and electric unit (control unit) with CAN communication line and the parking brake switch signal from the parking brake switch, and sounds the buzzer if necessary.
BCM	Based on the signals received from various units and switches, transmits the buzzer output signal to the combination meter via CAN communication.
ABS actuator and electric unit (control unit)	Transmits the vehicle speed signal to the combination meter via CAN communication.
Parking brake switch	Transmits the parking brake switch signal to the combination meter.
Seat belt buckle switch (driver side)	Transmits the seat belt buckle switch signal (driver side) to the combination meter.

A
B
C
D
E
F
G
H
I
J
K
L
M
WCS
O
P


COMPONENT PARTS

< SYSTEM DESCRIPTION >

Combination Meter

INFOID:000000012351489

The buzzer (1) for the warning chime system is integrated in the combination meter.

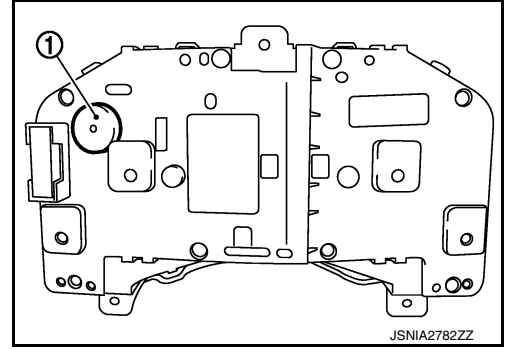

SYSTEM


< SYSTEM DESCRIPTION >

SYSTEM

WARNING CHIME SYSTEM

WARNING CHIME SYSTEM : System Diagram

INFOID:0000000012351490

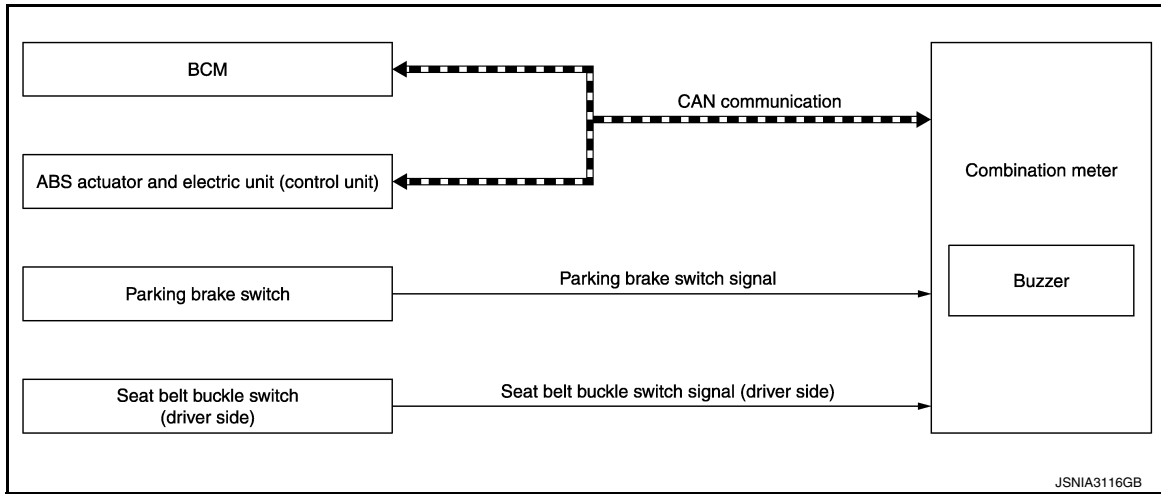

WARNING CHIME SYSTEM : System Description

INFOID:0000000012351491

COMBINATION METER

The combination meter sounds the alarm buzzer installed in the combination meter when receiving the buzzer output signal transmitted from each unit.

BCM

BCM receives signals from various units and transmits a buzzer output signal to the combination meter via CAN communication if it judges that the warning buzzer should be activated.

WARNING CHIME FUNCTION LIST

Warning functions	Out line	Warning judgment unit	Refer to
Light reminder warning chime	The warning chime sounds when the ignition switch is in OFF or ACC position with the combination switch (lighting switch) in the 1st or 2nd position and the driver side door open.	BCM	WCS-9. "LIGHT REMINDER WARNING CHIME : System Description"
Front fog light reminder warning chime	The warning chime sounds when the ignition switch is turned to LOCK, OFF or ACC position from ON position, with combination switch (lighting switch) is in AUTO position and the front fog lamp switch in ON position.	BCM	WCS-11. "FRONT FOG LIGHT REMINDER WARNING CHIME : System Description"

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

WCS

SYSTEM

< SYSTEM DESCRIPTION >

Warning functions	Out line	Warning judgment unit	Refer to
Seat belt warning chime	The warning chime sounds when the driver seat belt is unfastened with the ignition switch in ON position.	BCM	WCS-12. "SEAT BELT WARNING CHIME : System Description"
Parking brake release warning chime	The warning chime sounds when the ignition switch is in ON position with the parking brake in operation and the vehicle speed 7 km/h (4.3 MPH) or more.	Combination meter	WCS-13. "PARKING BRAKE RELEASE WARNING CHIME : System Description"

WARNING CHIME SYSTEM : Fail-Safe

INFOID:000000012351492

FAIL-SAFE

The combination meter activates the fail-safe control if CAN communication with each unit is malfunctioning.

Function		Specifications
Speedometer		Reset to zero by suspending communication.
Tachometer		
Engine coolant temperature gauge		
Illumination control		When suspending communication, changes to nighttime mode.
Information display	Odo/trip meter	The display turns OFF by suspending communication.
	Shift position indicator	
	Door open warning	
	Trunk open warning	
	Fuel filler cap warning	
	Low tire pressure warning	
	Front radar warning	
	BCI ON indicator	
	BCI OFF indicator	
	BCI malfunction indicator	
BCI not available indicator		
FEB warning		
Buzzer		The buzzer turns OFF by suspending communication.

SYSTEM


< SYSTEM DESCRIPTION >

	Function	Specifications	
Warning lamp/indicator lamp	ABS warning lamp	The lamp turns ON by suspending communication.	A
	VDC warning lamp		B
	VDC OFF indicator lamp		C
	Brake warning lamp		D
	FEB indicator lamp		E
	AWD warning lamp		F
	Malfunction indicator lamp		G
	CRUISE warning lamp		H
	Low tire pressure warning lamp	The lamp blinking caused by suspending communication.	I
	AFS OFF indicator lamp		J
	High beam indicator lamp	The lamp turns OFF by suspending communication.	K
	Turn signal indicator lamp		L
	Front fog lamp indicator lamp		M
	Tail lamp indicator lamp		N
	A/T CHECK indicator lamp		O
	Lane departure warning lamp		P
	LDP ON indicator lamp		Q
	Oil pressure warning lamp		R
ECO drive indicator	S		
Blind Spot Intervention ON indicator	T		
BSW/Blind Spot Intervention warning lamp	U		

LIGHT REMINDER WARNING CHIME

LIGHT REMINDER WARNING CHIME : System Diagram

INFOID:000000012351493

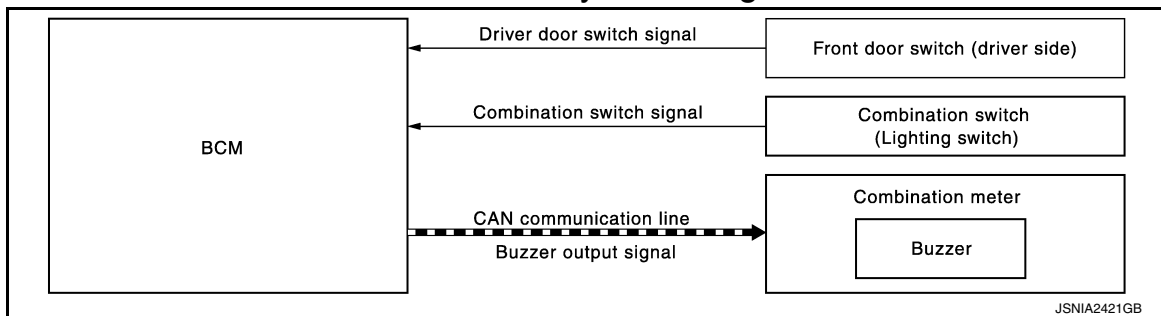

LIGHT REMINDER WARNING CHIME : System Description

INFOID:000000012351494

WCS

WARNING CHIME OPERATION CONDITIONS

If all of the following conditions are fulfilled.

Operation conditions	
Ignition switch	OFF or ACC position
Combination switch (Lighting switch)	1st or 2nd position
Driver side door	Open [front door switch (driver side) ON]

WARNING CHIME CANCEL CONDITIONS

Warning is canceled if any of the following conditions is fulfilled.

SYSTEM

< SYSTEM DESCRIPTION >

Operation conditions	
Ignition switch	ON
Combination switch (Lighting switch)	OFF or AUTO position
Driver side door	Close [front door switch (driver side) OFF]

SIGNAL PATH


1. BCM requires warning chime output to combination meter when it judges light reminder warning chime is necessary from signals below.

Signal name	Signal path
Ignition switch signal	—
Combination switch signal	Combination switch (Lighting switch) → BCM
Driver door switch signal	Front door switch (driver side) → BCM

2. Combination meter sounds integrated buzzer, following the warning chime output requirement (below signal) from BCM.

Signal name	Signal path
Buzzer output signal	BCM → Combination meter


TIMING CHART

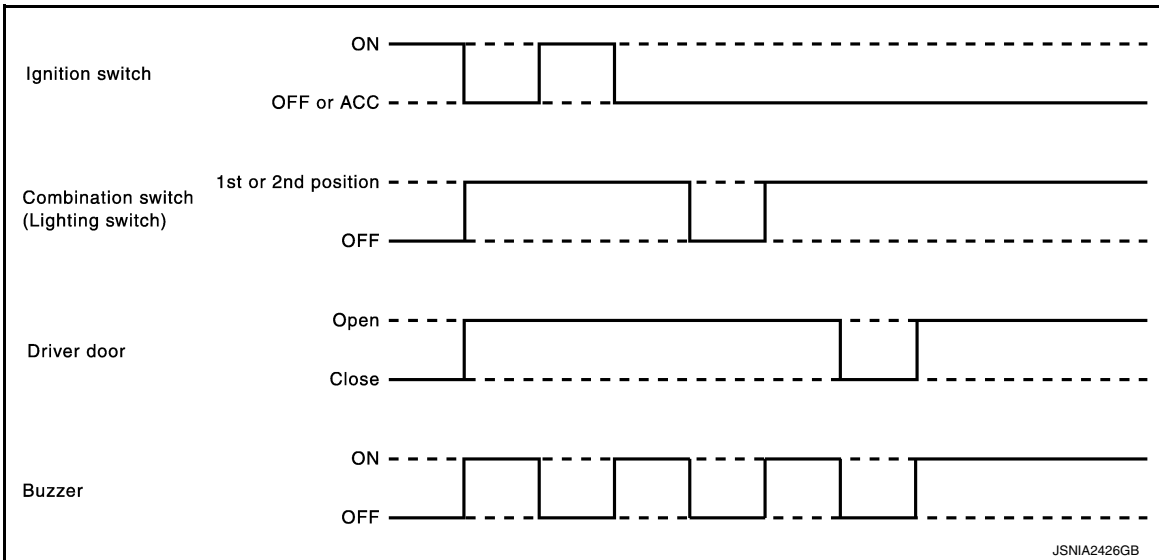

FRONT FOG LIGHT REMINDER WARNING CHIME

FRONT FOG LIGHT REMINDER WARNING CHIME : System Diagram

INFOID:000000012351495

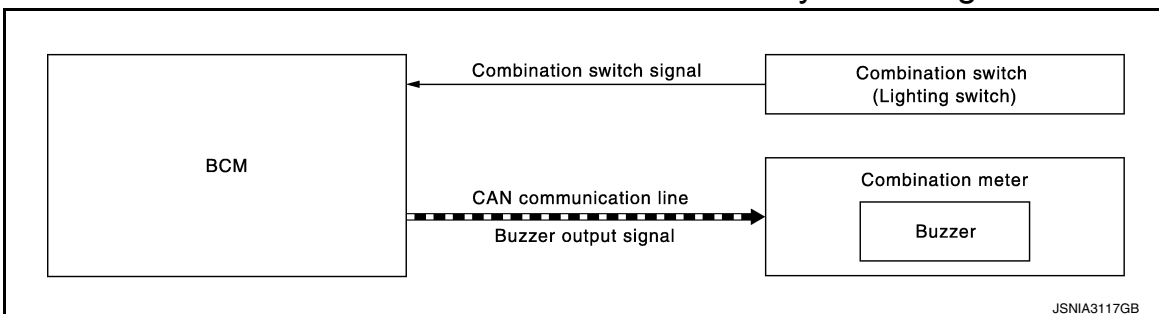

SYSTEM

< SYSTEM DESCRIPTION >

FRONT FOG LIGHT REMINDER WARNING CHIME : System Description INFOID:000000012351496

WARNING CHIME OPERATION CONDITIONS

Warning chime sounds during 2 seconds when the ignition switch is in LOCK, OFF or ACC position, if all of below operation conditions is met.


Operation conditions	
Ignition switch	ON position
Combination switch (Lighting switch)	AUTO position and front fog lamp switch ON position

SIGNAL PATH


1. BCM requires warning chime output to combination meter when it judges front fog light reminder warning chime is necessary from signals below.

Signal name	Signal path
Ignition switch signal	—
Combination switch signal	Combination switch (Lighting switch) → BCM

2. Combination meter sounds integrated buzzer, following the warning chime output requirement (below signal) from BCM.


Signal name	Signal path
Buzzer output signal	BCM  Combination meter

TIMING CHART

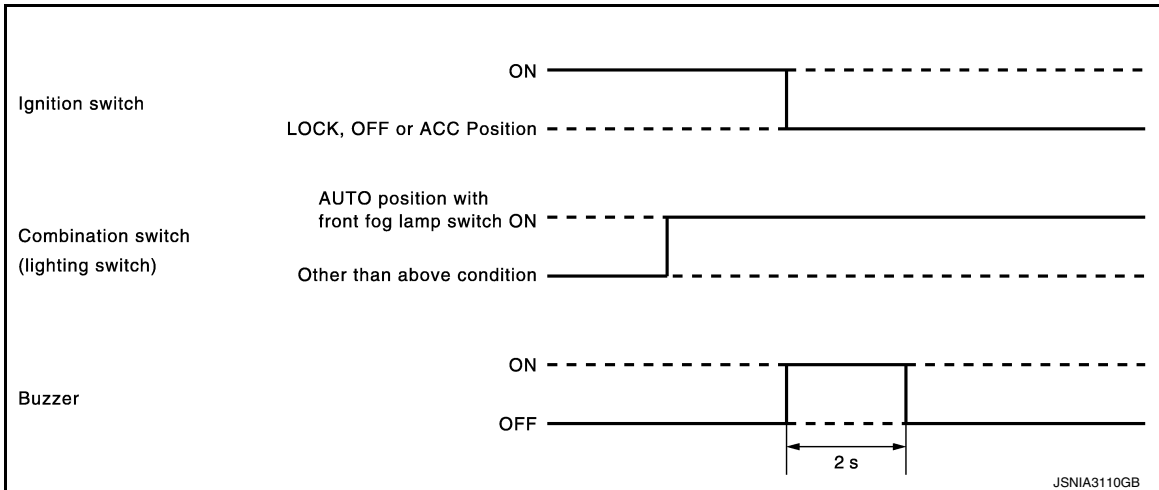

SEAT BELT WARNING CHIME

SEAT BELT WARNING CHIME : System Diagram

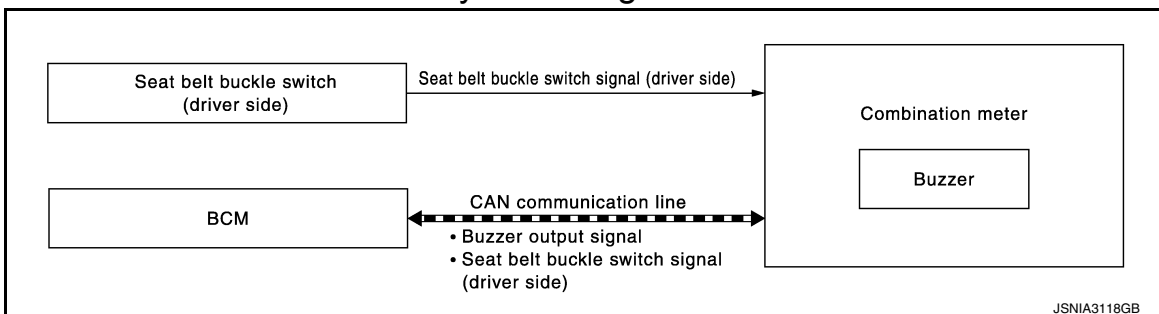

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WCS

SYSTEM

< SYSTEM DESCRIPTION >

SEAT BELT WARNING CHIME : System Description

INFOID:000000012351498

WARNING OPERATION CONDITIONS

If all of the following conditions are fulfilled.

Operation conditions	
Ignition switch	ON
Driver seat belt	Unfastened [seat belt buckle switch (driver side) ON]

WARNING CANCEL CONDITIONS

Warning is canceled if any of the following conditions is fulfilled.

Operation conditions	
Ignition switch	OFF
Seat belt (driver side)	Fastened (driver side seat belt buckle switch OFF)
6 seconds after the start of warning sound	

SIGNAL PATH


1. BCM requires warning chime output to combination meter when it judges seat belt warning chime is necessary from signals below.

Signal name	Signal path
Ignition switch signal	—
Seat belt buckle switch signal (driver side)	Seat belt buckle switch (driver side) → Combination meter CAN → BCM

2. Combination meter sounds integrated buzzer, following the warning chime output requirement (below signal) from BCM.

Signal name	Signal path
Buzzer output signal	BCM CAN → Combination meter


TIMING CHART

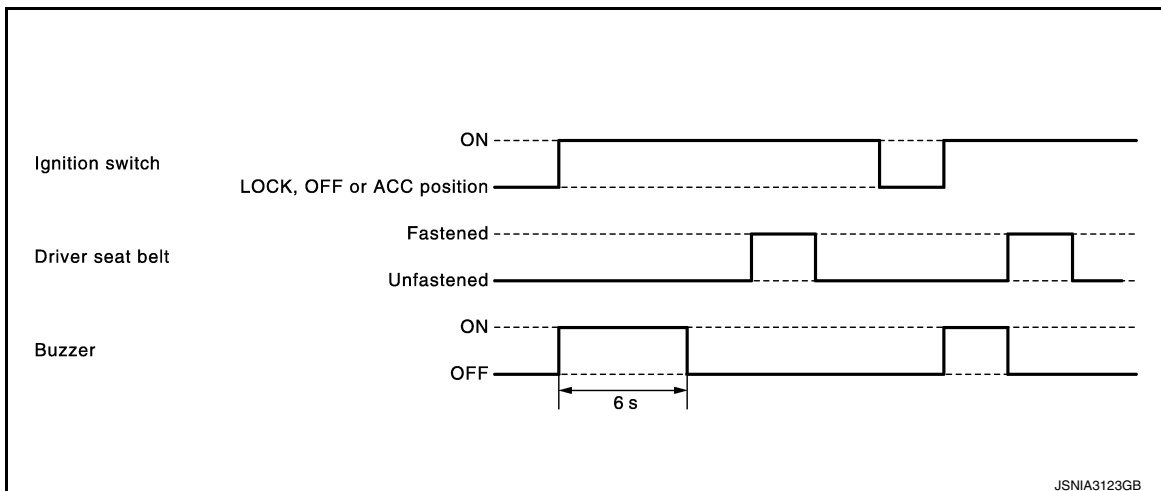

SYSTEM

< SYSTEM DESCRIPTION >


SOUND SPECIFICATION

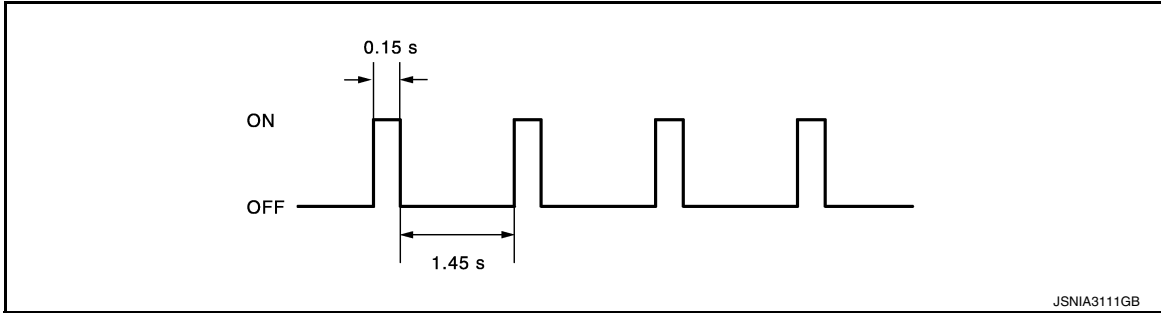

PARKING BRAKE RELEASE WARNING CHIME

PARKING BRAKE RELEASE WARNING CHIME : System Diagram

INFOID:0000000012351499

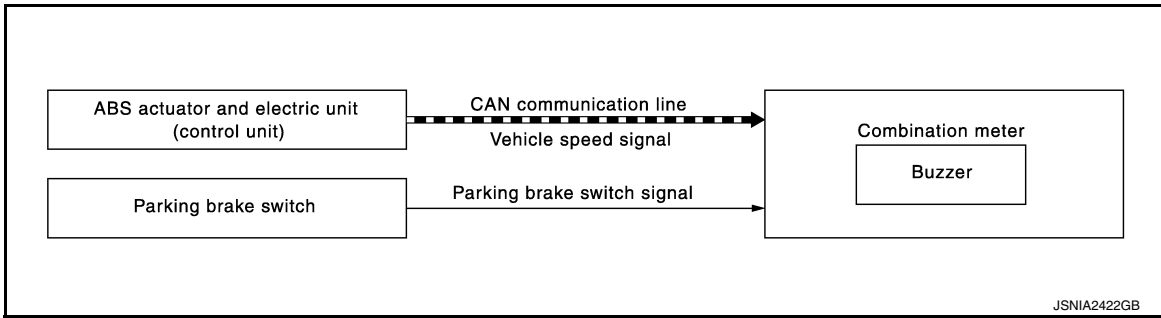

PARKING BRAKE RELEASE WARNING CHIME : System Description

INFOID:0000000012351500

WARNING OPERATION CONDITIONS

If all of the following conditions are fulfilled.

Operation conditions	
Ignition switch	ON
Parking brake	During the operation (parking brake switch ON)
Vehicle speed	Approximately 7 km/h (4.3 MPH) or more

WARNING CANCEL CONDITIONS

Warning is canceled if any of the following conditions are fulfilled.

Operation conditions	
Ignition switch	OFF
Parking brake	Release condition (parking brake switch OFF)
Vehicle speed	Approximately 3 km/h (1.9 MPH) or less

SIGNAL PATH

Combination meter sounds integrated buzzer when it judges that parking brake release warning chime is necessary from signals below.

Signal name	Signal path
Ignition switch signal	—
Parking brake switch signal	Parking brake switch → Combination meter
Vehicle speed signal	ABS actuator and electric unit (control unit) $\xrightarrow{\text{CAN}}$ Combination meter


A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

WCS


SYSTEM

< SYSTEM DESCRIPTION >

TIMING CHART

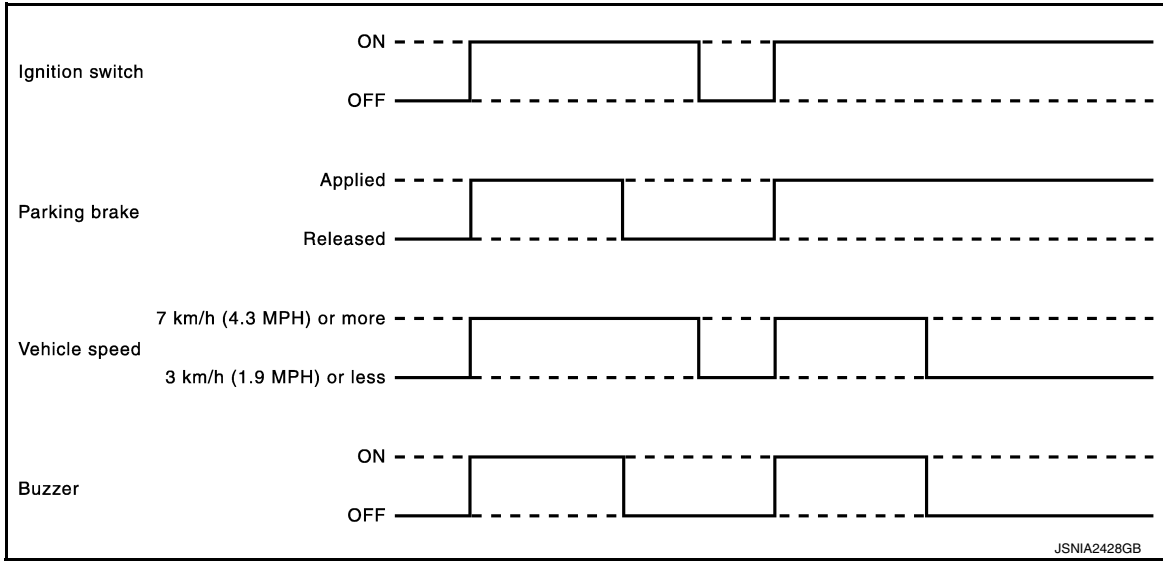

SOUND SPECIFICATION

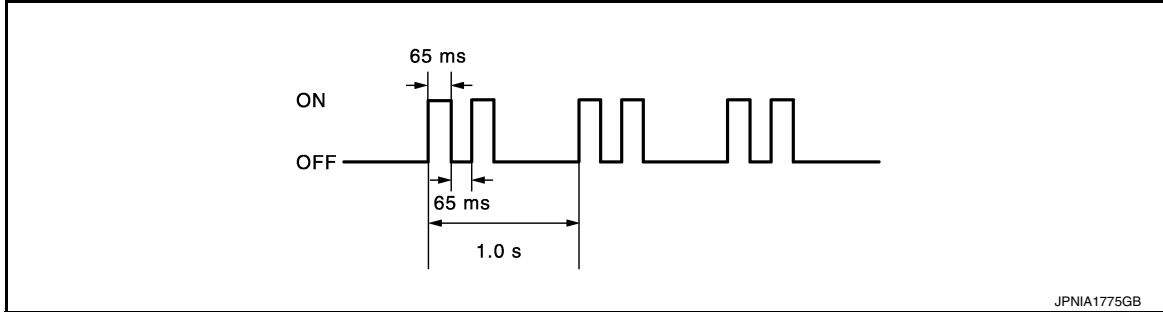

DIAGNOSIS SYSTEM (COMBINATION METER)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (COMBINATION METER)

CONSULT Function

INFOID:000000012961985

CONSULT APPLICATION ITEMS

CONSULT can perform the following diagnosis modes via CAN communication and the combination meter.

System	Diagnosis mode	Description
METER/M&A	Self Diagnostic Result	The combination meter checks the conditions and displays memorized errors.
	Data Monitor	Displays the combination meter input/output data in real time.
	Warning History	Lighting history of the warning lamp and indicator lamp can be checked.

SELF DIAG RESULT

Refer to [WCS-32. "DTC Index"](#).

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Display Item List

X: Applicable

Display item [Unit]	MAIN SIGNALS	Description
SPEED METER [km/h]	X	Value of vehicle speed signal received from ABS actuator and electric unit (control unit) via CAN communication. NOTE: 655.35 is displayed when the malfunction signal is received.
SPEED OUTPUT [km/h]	X	Vehicle speed signal value transmitted to other units via CAN communication. NOTE: 655.35 is displayed when the malfunction signal is received.
ODO OUTPUT [km/h or mph]		Odometer signal value transmitted to other units via CAN communication.
TACHO METER [rpm]	X	Value of the engine speed signal received from ECM via CAN communication. NOTE: 8191.875 is displayed when the malfunction signal is received.
FUEL METER [L]	X	Fuel level indicated on combination meter.
W TEMP METER [°C]	X	Value of engine coolant temperature signal is received from ECM via CAN communication. NOTE: 215 is displayed when the malfunction signal is input.
ABS W/L [On/Off]		Status of ABS warning lamp detected from ABS warning lamp signal is received from ABS actuator and electric unit (control unit) via CAN communication.
VDC/TCS IND [On/Off]		Status of VDC OFF indicator lamp detected from VDC OFF indicator lamp signal is received from ABS actuator and electric unit (control unit) via CAN communication.
SLIP IND [On/Off]		Status of VDC warning lamp detected from VDC warning lamp signal received from ABS actuator and electric unit (control unit) via CAN communication.
BRAKE W/L [On/Off]		Status of brake warning lamp detected from brake warning lamp signal is received from ABS actuator and electric unit (control unit) via CAN communication. NOTE: Displays "Off" if the brake warning lamp is illuminated when the valve check starts, the parking brake switch is turned ON or the brake fluid level switch is turned ON.
DOOR W/L [On/Off]		Status of door open warning detected from door switch signal received from BCM via CAN communication.
TRUNK/GLAS-H [On/Off]		Status of trunk open warning detected from trunk switch signal received from BCM via CAN communication.

A

B

C

D

E

F

G

H

I

J

K

L

M

WCS

O

P



DIAGNOSIS SYSTEM (COMBINATION METER)

< SYSTEM DESCRIPTION >

Display item [Unit]	MAIN SIGNALS	Description
HI-BEAM IND [On/Off]		Status of high beam indicator lamp detected from high beam request signal is received from BCM via CAN communication.
TURN IND [On/Off]		Status of turn indicator lamp detected from turn indicator signal is received from BCM via CAN communication.
FR FOG IND [On/Off]		Status of front fog light indicator lamp detected from front fog light request signal is received from BCM via CAN communication.
LIGHT IND [On/Off]		Status of light indicator lamp detected from position light request signal is received from BCM via CAN communication.
OIL W/L [On/Off]		<ul style="list-style-type: none"> • Status of oil pressure warning lamp detected from oil pressure switch signal is received from BCM via CAN communication. (VQ37VHR engine models) • Status of oil pressure warning lamp detected from oil pressure warning lamp signal is received from ECM via CAN communication. (VK56VD engine models)
MIL [On/Off]		Status of malfunction indicator lamp detected from malfunctioning indicator lamp signal is received from ECM via CAN communication.
GLOW IND [Off]		NOTE: This item is displayed, but cannot be monitored.
CRUISE IND [On/Off]		<ul style="list-style-type: none"> • Status of CRUISE indicator detected from ASCD status signal is received from ECM via CAN communication. (ASCD models) • Status of CRUISE indicator detected from meter display signal is received from ADAS control unit via CAN communication. (ICC models)
SET IND [On/Off]		<ul style="list-style-type: none"> • Status of SET indicator detected from ASCD status signal is received from ECM via CAN communication. (ASCD models) • Status of SET indicator detected from meter display signal is received from ADAS control unit via CAN communication. (ICC models)
CRUISE W/L [On/Off]		Status of ICC warning lamp detected from ICC warning lamp signal is received from ADAS control unit via CAN communication.
BA W/L [Off]		NOTE: This item is displayed, but cannot be monitored.
ATC/T-AMT W/L [On/Off]		Status of A/T CHECK warning lamp judged from A/T CHECK indicator lamp signal received from TCM with CAN communication line.
4WD W/L [On/Off]		Status of AWD warning lamp judged from AWD warning lamp signal received from AWD control unit with CAN communication line.
FUEL W/L [On/Off]		Low fuel warning status detected by the identified fuel level.
WASHER W/L [On/Off]		Status of low washer fluid warning judged from washer level switch input to combination meter.
AIR PRES W/L [On/Off]		Status of low tire pressure warning lamp judged from low tire pressure warning lamp signal received from BCM with CAN communication line.
KEY G/Y W/L [On/Off]		Status of Intelligent Key system malfunction detected from Intelligent Key warning display signal is received from BCM via CAN communication.
AFS OFF IND [On/Off]		Status of AFS OFF indicator lamp judged from AFS OFF indicator lamp signal received from AFS control unit with CAN communication line.
4WAS/RAS W/L [Off]		NOTE: This item is displayed, but cannot be monitored.
LANE W/L [On/Off]		Status of lane departure warning lamp judged from lane departure warning lamp signal received from ADAS control unit with CAN communication line.
LDP IND [On/Off]		Status of LDP ON indicator lamp judged from LDP ON indicator lamp signal received from ADAS control unit with CAN communication line.
LCD [B&P N, B&P I, ID NG, ROTAT, SFT P, INSRT, BATT, NO KY, OUTKY, LK WN]		Displays status of Intelligent Key system warning judged from meter display signal received from BCM with CAN communication line.
ACC TARGET [On/Off]		Status of vehicle ahead detection indicator judged from meter display signal received from ADAS control unit with CAN communication line.

DIAGNOSIS SYSTEM (COMBINATION METER)

< SYSTEM DESCRIPTION >

Display item [Unit]	MAIN SIGNALS	Description	A
ACC DISTANCE [Off, SHORT, MID, LONG]		Status of set distance indicator judged from meter display signal received from ADAS control unit with CAN communication line.	A
ACC OWN VHL [On/Off]		Status of own vehicle indicator judged from meter display signal received from ADAS control unit with CAN communication line.	B
ACC SET SPEED [km/h/Off]		Status of set vehicle speed indicator judged from meter display signal received from ADAS control unit with CAN communication line.	C
ACC UNIT [On/Off]		Status of display unit judged from meter display signal received from ADAS control unit with CAN communication line.	D
SHIFT IND [P, R, N, D, M1, M2, M3, M4, M5, M6, M7]		Status of shift position indicator judged from shift position signal received from TCM with CAN communication line.	D
ECO DRIVE IND G [On/Off]		Status of ECO drive indicator (green) judged from ECO drive indicator control signal received from ECM with CAN communication line.	E
ECO DRIVE IND O [On/Off]		Status of ECO drive indicator (orange) judged from ECO drive indicator control signal received from ECM with CAN communication line.	F
BSW IND [On/Off]		Status of Blind Spot Intervention ON indicator (green) judged from Blind Spot Intervention ON indicator signal received from ADAS control unit with CAN communication line.	F
BSW W/L [On/Off]		Status of BSW/Blind Spot Intervention warning lamp (yellow) judged from BSW/Blind Spot Intervention warning lamp signal received from ADAS control unit with CAN communication line.	G
FUEL CAP W/L [On/Off]		Status of fuel filler cap warning display detected from fuel filler cap warning display signal received from ECM via CAN communication.	H
DRIVE MODE STATS [SNOW, SN-EC, ECO, EC-ST, STD, ST-SP, SPORT, ERROR]		Status of drive mode select switch.	I
M RANGE SW [On/Off]		Status of manual mode switch.	J
NM RANGE SW [On/Off]		Status of non-manual mode switch.	J
AT SFT UP SW [On/Off]		Status of manual mode shift up switch.	K
AT SFT DWN SW [On/Off]		Status of manual mode shift down switch.	L
ST SFT UP SW [On/Off]		Status of paddle shifter shift up switch.	L
ST SFT DWN SW [On/Off]		Status of paddle shifter shift down switch.	M
PKB SW [On/Off]		Status of parking brake switch.	M
BUCKLE SW [On/Off]		Status of seat belt buckle switch (driver side).	WCS
BRAKE OIL SW [On/Off]		Status of brake fluid level switch.	O
ENTER SW [On/Off]		Status of  (ENTER) switch.	P
SELECT SW [On/Off]		Status of  (SELECT) switch.	P
LED LMP R OPEN [On/Off]		Status of front combination lamp RH judged based on LED headlamp (RH) warning signal input from front combination lamp RH.	
LED LMP L OPEN [On/Off]		Status of front combination lamp LH judged based on LED headlamp (LH) warning signal input from front combination lamp LH.	

DIAGNOSIS SYSTEM (COMBINATION METER)

< SYSTEM DESCRIPTION >

Display item [Unit]	MAIN SIGNALS	Description
DISTANCE [km]		Value of distance to empty calculated by combination meter.
OUTSIDE TEMP [°C or °F]		Ambient temperature value converted from ambient sensor signal received from ambient sensor. NOTE: This may not match with the temperature value indicated on the information display. (Because the information display value is a corrected value from the ambient sensor input value.)
FUEL LOW SIG [On/Off]		Status of fuel level low warning signal to output to AV control unit via CAN communication.
BUZZER [On/Off]	X	Buzzer status (in the combination meter) is detected from the buzzer output signal received from each unit via CAN communication and the warning output condition of the combination meter.
FR RADAR WARN [On/Off]		Status of front radar warning judged from front radar warning signal received from ADAS control unit with CAN communication line.
BCI ON IND [On/Off]		Status of BCI ON indicator judged from meter display signal received from ADAS control unit with CAN communication line.
BCI OFF IND [On/Off]		Status of BCI OFF indicator judged from meter display signal received from ADAS control unit with CAN communication line.
BCI WARNING IND [On/Off]		Status of BCI malfunction indicator judged from meter display signal received from ADAS control unit with CAN communication line.
BCI HI TEMP WARN IND [On/Off]		Status of BCI not available indicator judged from meter display signal received from ADAS control unit with CAN communication line.
FEB W/L [On/Off]		Status of FEB indicator lamp judged from FEB warning lamp signal received from ADAS control unit with CAN communication line.
FEB WARN [On/Off]		Status of FEB warning judged from meter display signal received from ADAS control unit with CAN communication line.

NOTE:

Some items are not available according to vehicle specification.

Warning History

- Stores histories when warning/indicator lamp is turned on.
- “Warning History” indicates the “TIME” when the warning/ indicator lamp is turned on.
- The “TIME” above is:
 - 0: The condition that the warning/indicator lamp has been turned on 1 or more times after starting the engine and waiting for 30 seconds.
 - 1 - 39: The number of times the engine was restarted after the 0 condition.
 - NO Warning History: Stores NO (0) turning on history of warning/indicator lamp.

NOTE:

- Warning History is not stored for approximately 30 seconds after the engine starts.
- Brake warning lamp does not store any history when the parking brake is applied or the brake fluid level gets low.

Display Item

Display item	Description
ABS W/L	Lighting history of ABS warning lamp.
VDC/TCS IND	Lighting history of VDC OFF indicator lamp.
SLIP IND	Lighting history of VDC warning lamp.
BRAKE W/L	Lighting history of brake warning lamp.
DOOR W/L	Lighting history of door open warning.
TRUNK/GLAS-H	Lighting history of trunk open warning.
OIL W/L	Lighting history of oil pressure warning lamp.
C-ENG W/L	Lighting history of malfunction indicator lamp.

DIAGNOSIS SYSTEM (COMBINATION METER)

< SYSTEM DESCRIPTION >

Display item	Description	
CRUISE IND	Lighting history of CRUISE indicator.	A
SET IND	Lighting history of SET indicator.	
CRUISE W/L	Lighting history of ICC warning lamp.	B
ATC/T-AMT W/L	Lighting history of A/T CHECK warning lamp.	
4WD W/L	Lighting history of AWD warning lamp.	C
FUEL W/L	Lighting history of low fuel level warning.	
WASHER W/L	Lighting history of low washer fluid warning.	D
AIR PRES W/L	Lighting history of low tire pressure warning lamp.	
KEY G/Y W/L	Lighting history of Intelligent Key system malfunction.	E
AFS OFF IND	Lighting history of AFS OFF indicator lamp.	
4WAS/RAS W/L	Lighting history of 4WAS warning lamp.	F
LANE W/L	Lighting history of lane departure warning lamp.	
BSW W/L	Lighting history of BSW/Blind Spot Intervention warning lamp (yellow).	

NOTE:

In items displayed on the CONSULT screen, only those listed in the above table are used.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

WCS

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000013001563

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	<ul style="list-style-type: none"> • Read and save the vehicle specification. • Write the vehicle specification when replacing BCM.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

×: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP	×	×	×
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER	×	×	×
—	AIR CONDITONER*		×	×
<ul style="list-style-type: none"> • Intelligent Key system • Engine start system 	INTELLIGENT KEY	×	×	×
Combination switch	COMB SW		×	
Body control system	BCM	×		
IVIS - NATS	IMMU	×	×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
Trunk lid open	TRUNK		×	
Vehicle security system	THEFT ALM	×	×	×
RAP system	RETAINED PWR		×	
Signal buffer system	SIGNAL BUFFER		×	×
—	AIR PRESSURE MONITOR*	×	×	×

*: This item is not used.

FREEZE FRAME DATA (FFD)

The BCM records the following vehicle condition at the time a particular DTC is detected, and displays on CONSULT.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

CONSULT screen item	Indication/Unit	Description		
Vehicle Speed	km/h	Vehicle speed of the moment a particular DTC is detected		A
Odo/Trip Meter	km	Total mileage (Odometer value) of the moment a particular DTC is detected		
Vehicle Condition	SLEEP>LOCK	Power position status of the moment a particular DTC is detected*	While turning BCM status from low power consumption mode to normal mode (Power supply position is "LOCK"*)	B
	SLEEP>OFF		While turning BCM status from low power consumption mode to normal mode (Power supply position is "OFF".)	C
	LOCK>ACC		While turning power supply position from "LOCK" *to "ACC"	
	ACC>ON		While turning power supply position from "ACC" to "IGN"	D
	RUN>ACC		While turning power supply position from "RUN" to "ACC" (Vehicle is stopping and selector lever is except P position.)	
	CRANK>RUN		While turning power supply position from "CRANKING" to "RUN" (From cranking up the engine to run it)	E
	RUN>URGENT		While turning power supply position from "RUN" to "ACC" (Emergency stop operation)	
	ACC>OFF		While turning power supply position from "ACC" to "OFF"	F
	OFF>LOCK		While turning power supply position from "OFF" to "LOCK"*	
	OFF>ACC		While turning power supply position from "OFF" to "ACC"	G
	ON>CRANK		While turning power supply position from "IGN" to "CRANKING"	
	OFF>SLEEP		While turning BCM status from normal mode (Power supply position is "OFF".) to low power consumption mode	H
	LOCK>SLEEP		While turning BCM status from normal mode (Power supply position is "LOCK"*.) to low power consumption mode	
	LOCK		Power supply position is "LOCK" (Ignition switch OFF with steering is locked.)*	I
	OFF		Power supply position is "OFF" (Ignition switch OFF with steering is unlocked.)	J
	ACC		Power supply position is "ACC" (Ignition switch ACC)	
	ON		Power supply position is "IGN" (Ignition switch ON with engine stopped)	K
ENGINE RUN	Power supply position is "RUN" (Ignition switch ON with engine running)			
CRANKING	Power supply position is "CRANKING" (At engine cranking)	L		
IGN Counter	0 - 39	The number of times that ignition switch is turned ON after DTC is detected <ul style="list-style-type: none"> • The number is 0 when a malfunction is detected now. • The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. • The number is fixed to 39 until the self-diagnosis results are erased if it is over 39. 		M

NOTE:

*: Power supply position shifts to "LOCK" from "OFF", when ignition switch is in the OFF position, selector lever is in the P position, and any of the following conditions are met.

- Closing door
- Opening door
- Door is locked using door request switch
- Door is locked using Intelligent Key

The power supply position shifts to "ACC" when the push-button ignition switch (push switch) is pushed at "LOCK".

BUZZER

BUZZER : CONSULT Function (BCM - BUZZER)

INFOID:0000000012351503

CONSULT APPLICATION ITEMS

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Test item	Diagnosis mode	Description
BUZZER	Data Monitor	Displays BCM input data in real time.
	Active Test	Operation of electrical loads can be checked by sending driving signal to them.

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Display item [Unit]	Description
PUSH SW [On/Off]	Status of push-button ignition switch judged by BCM.
UNLK SEN-DR [On/Off]	Status of unlock sensor judged by BCM.
VEH SPEED 1 [km/h]	Value of vehicle speed signal received from combination meter with CAN communication line.
TAIL LAMP SW [On/Off]	Status of lighting switch judged by BCM using the combination switch readout function.
FR FOG SW [On/Off]	Status of front fog lamp switch judged by BCM using the combination switch readout function.
DOOR SW-DR [On/Off]	Status of driver side door switch judged by BCM.
CDL LOCK SW [On/Off]	Status of door lock unlock switch judged by BCM.

ACTIVE TEST

Display item [Unit]	Description
SEAT BELT WARN TEST	The seat belt warning chime operation can be checked by operating the relevant function (On/Off).
LIGHT WARN ALM	The light warning chime operation can be checked by operating the relevant function (On/Off).

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

ECU DIAGNOSIS INFORMATION

COMBINATION METER

Reference Value

INFOID:0000000012961986

VALUES ON THE DIAGNOSIS TOOL

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item	Condition		Value/Status
SPEED METER [km/h]	Ignition switch ON	While driving	Input value of vehicle speed signal (CAN communication signal) NOTE: 655.35 is displayed when the malfunction signal is received
SPEED OUTPUT [km/h]	Ignition switch ON	While driving	Output value of vehicle speed signal (CAN communication signal) NOTE: 655.35 is displayed when the malfunction signal is received
ODO OUTPUT [km/h or mph]	Ignition switch ON	—	Output value of odometer signal (CAN communication signal)
TACHO METER [rpm]	Ignition switch ON	Engine running	Input value of engine speed signal (CAN communication signal) NOTE: 8191.875 is displayed when the malfunction signal is received
FUEL METER [L]	Ignition switch ON	—	Input value of fuel level sensor signal
W TEMP METER [°C]	Ignition switch ON	—	Input value of engine coolant temperature signal (CAN communication signal) NOTE: 215 is displayed when the malfunction signal is input
ABS W/L	Ignition switch ON	ABS warning lamp ON	On
		ABS warning lamp OFF	Off
VDC/TCS IND	Ignition switch ON	VDC OFF indicator lamp ON	On
		VDC OFF indicator lamp OFF	Off
SLIP IND	Ignition switch ON	VDC warning lamp ON	On
		VDC warning lamp OFF	Off
BRAKE W/L	Ignition switch ON	Brake warning lamp ON	On
		Brake warning lamp OFF	Off
DOOR W/L	Ignition switch ON	Door open warning ON	On
		Door open warning OFF	Off
TRUNK/GLAS-H	Ignition switch ON	Trunk open warning ON	On
		Trunk open warning OFF	Off
HI-BEAM IND	Ignition switch ON	High-beam indicator lamp ON	On
		High-beam indicator lamp OFF	Off
TURN IND	Ignition switch ON	Turn signal indicator lamp ON	On
		Turn signal indicator lamp OFF	Off

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

WCS

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition		Value/Status
FR FOG IND	Ignition switch ON	Front fog lamp indicator lamp ON	On
		Front fog lamp indicator lamp OFF	Off
LIGHT IND	Ignition switch ON	Light indicator lamp ON	On
		Tail lamp indicator lamp OFF	Off
OIL W/L	Ignition switch ON	Oil pressure warning lamp ON	On
		Oil pressure warning lamp OFF	Off
MIL	Ignition switch ON	Malfunction indicator lamp ON	On
		Malfunction indicator lamp OFF	Off
GLOW IND	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
CRUISE IND	Ignition switch ON	CRUISE indicator ON	On
		CRUISE indicator OFF	Off
SET IND	Ignition switch ON	SET indicator ON	On
		SET indicator OFF	Off
CRUISE W/L	Ignition switch ON	CRUISE warning lamp ON	On
		CRUISE warning lamp OFF	Off
BA W/L	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
ATC/T-AMT W/L	Ignition switch ON	A/T check warning lamp ON	On
		A/T check warning lamp OFF	Off
4WD W/L	Ignition switch ON	AWD warning lamp ON	On
		AWD warning lamp OFF	Off
FUEL W/L	Ignition switch ON	During low fuel warning indication	On
		Other than the above	Off
WASHER W/L	Ignition switch ON	During low washer fluid warning indication	On
		Other than the above	Off
AIR PRES W/L	Ignition switch ON	Low tire pressure warning lamp ON	On
		Low tire pressure warning lamp OFF	Off
KEY G/Y W/L	Ignition switch ON	During Intelligent Key system malfunction indication	On
		Other than the above	Off
AFS OFF IND	Ignition switch ON	AFS OFF indicator lamp ON	On
		AFS OFF indicator lamp OFF	Off
4WAS/RAS W/L	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
LANE W/L	Ignition switch ON	Lane departure warning lamp ON	On
		Lane departure warning lamp OFF	Off
LDP IND	Ignition switch ON	LDP ON indicator lamp ON	On
		LDP ON indicator lamp OFF	Off

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition		Value/Status	
LCD	Ignition switch ON	During engine start information indication	B&P I	A
	Ignition switch ACC	During engine start information indication	B&P N	B
	Ignition switch LOCK	During key ID warning indication	ID NG	
	Ignition switch LOCK	During steering lock information indication	ROTAT	C
	Ignition switch LOCK	During P position warning indication	SFT P	D
	Ignition switch LOCK	During Intelligent Key insert information indication	INSRT	
	Ignition switch LOCK	During Intelligent Key low battery warning indication	BATT	E
	Ignition switch ON	During take away warning indication	NO KY	F
	Ignition switch LOCK	During key warning indication	OUTKY	
	Ignition switch ON	During ACC warning indication	LK WN	G
ACC TARGET	Ignition switch ON	During vehicle ahead detection indicator indication	On	H
		Other than the above	Off	
ACC DISTANCE	Ignition switch ON	When following distance set to "LONG"	LONG	I
		When following distance set to "MIDDLE"	MID	
		When following distance set to "SHORT"	SHORT	J
		Set distance indicator not displayed	Off	
ACC OWN VHL	Ignition switch ON	During own vehicle indicator indication	On	
		Other than the above	Off	K
ACC SET SPEED	Ignition switch ON	During set vehicle speed indicator not displayed	Off	L
		During set vehicle speed indicator displayed	Indicates the set vehicle speed	
ACC UNIT	Ignition switch ON	Set vehicle speed indicator unit display ON	On	M
		Set vehicle speed indicator unit display OFF	Off	

WCS



COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition		Value/Status
SHIFT IND	Ignition switch ON	During the indication of "P" by shift position indicator	P
		During the indication of "R" by shift position indicator	R
		During the indication of "N" by shift position indicator	N
		During the indication of "D" by shift position indicator	D
		During the indication of "M1" by shift position indicator	M1
		During the indication of "M2" by shift position indicator	M2
		During the indication of "M3" by shift position indicator	M3
		During the indication of "M4" by shift position indicator	M4
		During the indication of "M5" by shift position indicator	M5
		During the indication of "M6" by shift position indicator	M6
		During the indication of "M7" by shift position indicator	M7
ECO DRIVE IND G	Ignition switch ON	ECO drive indicator (green) ON	On
		ECO drive indicator (green) OFF	Off
ECO DRIVE IND O	Ignition switch ON	ECO drive indicator (orange) ON	On
		ECO drive indicator (orange) OFF	Off
BSW IND	Ignition switch ON	Blind Spot Intervention ON indicator (green) ON	On
		Blind Spot Intervention ON indicator (green) OFF	Off
BSW W/L	Ignition switch ON	BSW/Blind Spot Intervention warning lamp (yellow) ON	On
		BSW/Blind Spot Intervention warning lamp (yellow) OFF	Off
FUEL CAP W/L	Ignition switch ON	Fuel filler cap warning display ON	On
		Fuel filler cap warning display OFF	Off
DRIVE MODE STATS	Ignition switch ON	Drive mode select switch in SNOW position	SNOW
		Drive mode select switch in between SNOW and ECO position	SN-EC
		Drive mode select switch in ECO position	ECO
		Drive mode select switch in between ECO and ● (STANDARD mode)	EC-ST
		Drive mode select switch ● (STANDARD mode) position	STD
		Drive mode select switch in between ● (STANDARD mode) and SPORT	ST-SP
		Drive mode select switch in SPORT position	SPORT
		Reception of an abnormal signal other than those above	ERROR

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition		Value/Status	
M RANGE SW	Ignition switch ON	Selector lever in manual mode position	On	A
		Other than the above	Off	
NM RANGE SW	Ignition switch ON	Selector lever in manual mode position	Off	B
		Other than the above	On	
AT SFT UP SW	Ignition switch ON	Selector lever in + position	On	C
		Other than the above	Off	
AT SFT DWN SW	Ignition switch ON	Selector lever in – position	On	D
		Other than the above	Off	
ST SFT UP SW	Ignition switch ON	Paddle shifter in + position	On	E
		Other than the above	Off	
ST SFT DWN SW	Ignition switch ON	Paddle shifter in – position	On	F
		Other than the above	Off	
PKB SW	Ignition switch ON	Parking brake switch ON	On	G
		Parking brake switch OFF	Off	
BUCKLE SW	Ignition switch ON	Driver seat belt not fastened	On	H
		Driver seat belt fastened	Off	
BRAKE OIL SW	Ignition switch ON	Brake fluid level switch ON	On	I
		Brake fluid level switch OFF	Off	
ENTER SW	Ignition switch ON	When  switch (enter switch) is pressed	On	J
		Other than above	Off	
SELECT SW	Ignition switch ON	When  switch (select switch) is pressed	On	K
		Other than above	Off	
LED LMP R OPEN	Power switch ON	Front combination lamp RH malfunction	On	L
		Front combination lamp RH normal	Off	
LED LMP L OPEN	Power switch ON	Front combination lamp LH malfunction	On	M
		Front combination lamp LH normal	Off	
DISTANCE [km]	Ignition switch ON	—	Distance to empty calculated by combination meter	
OUTSIDE TEMP [°C or °F]	Ignition switch ON	—	Input value of ambient sensor signal (CAN communication signal) NOTE: This may not match the indicated value on the information display.	
FUEL LOW SIG	Ignition switch ON	During low fuel warning indication	On	
		Other than above	Off	WCS
BUZZER	Ignition switch ON	Buzzer ON	On	
		Buzzer OFF	Off	
FR RADAR WARN	Ignition switch ON	During front radar warning indication	On	O
		Other than above	Off	
BCI ON IND	Ignition switch ON	During BCI ON indicator indication	On	P
		Other than above	Off	
BCI OFF IND	Ignition switch ON	During BCI OFF indicator indication	On	
		Other than above	Off	
BCI WARNING IND	Ignition switch ON	During BCI malfunction indicator indication	On	
		Other than above	Off	

COMBINATION METER


< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition		Value/Status
BCI HI TEMP WARN IND	Ignition switch ON	During BCI not available indicator indication	On
		Other than above	Off
FEB W/L	Ignition switch ON	FEB indicator lamp ON	On
		FEB indicator lamp OFF	Off
FEB WARN	Ignition switch ON	During FEB warning indication	On
		Other than above	Off

NOTE:

Some items are not available according to vehicle specification.

TERMINAL LAYOUT


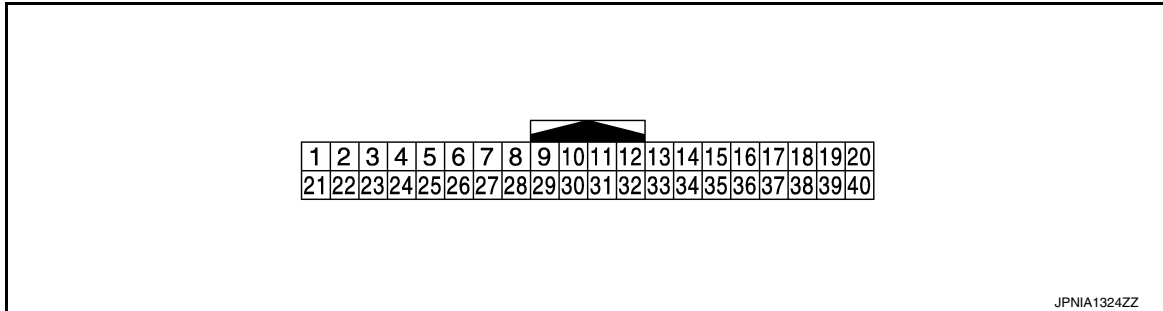






PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
1 (W)	Ground	Battery power supply	Input	Ignition switch OFF	—	Battery voltage
2 (BG)	Ground	Ignition signal	Input	Ignition switch ON	—	Battery voltage
3 (GR)	Ground	Vehicle speed signal (2-pulse)	Output	Ignition switch ON	Speedometer operated [When vehicle speed is approx. 40 km/h (25 MPH)]	<p>NOTE: The maximum voltage varies depending on the specification (destination unit).</p> <p style="text-align: right; font-size: small;">JSNIA0015GB</p>
4 (R)	Ground	Vehicle speed signal (8-pulse)	Output	Ignition switch ON	Speedometer operated [When vehicle speed is approx. 40 km/h (25 MPH)]	<p>NOTE: The maximum voltage varies depending on the specification (destination unit).</p> <p style="text-align: right; font-size: small;">JSNIA0012GB</p>

COMBINATION METER
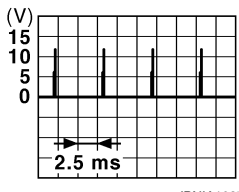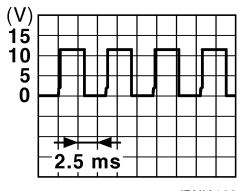
< ECU DIAGNOSIS INFORMATION >


Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
5 (B)	Ground	Illumination control signal	Output	Ignition switch ON	<ul style="list-style-type: none"> Lighting switch 1ST position When meter illumination is maximum 
				Ignition switch ON	<ul style="list-style-type: none"> Lighting switch 1ST position When meter illumination is step 11 
				Ignition switch ON	<ul style="list-style-type: none"> Lighting switch 1ST position When meter illumination is minimum <p style="text-align: center;">12 V</p>
7 (SB)	6 (B)	Enter switch signal	Input	Ignition switch ON	When  switch (enter switch) is pressed
				Other than the above	0 V
8 (LG)	6 (B)	Select switch signal	Input	Ignition switch ON	When  switch (select switch) is pressed
				Other than the above	5 V
9 (G)	6 (B)	Illumination control switch signal (+)	Input	Ignition switch ON	When  switch [illumination control switch (+)] is pressed
				Other than the above	0 V
10 (GR)	6 (B)	Illumination control switch signal (-)	Input	Ignition switch ON	When  switch [illumination control switch (-)] is pressed
				Other than the above	5 V
11 (L)	6 (B)	Trip reset switch signal	Input	Ignition switch ON	When trip reset switch is pressed
				Other than the above	0 V
12 (B)	Ground	Ground	—	Ignition switch ON	—
14 (L)	—	CAN-H	—	—	—
15 (P)	—	CAN-L	—	—	—
16 (R)	Ground	Air bag signal	Input	Ignition switch ON	Air bag warning lamp ON
				Air bag warning lamp OFF	3 V
17 (G)	Ground	LED headlamp (RH) warning signal	Input	Ignition switch ON	Headlamp warning ON
				Headlamp warning OFF	0 V
					1.0 V
					12 V

A
B
C
D
E
F
G
H
I
J
K
L
M
P

WCS

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
18 (V)	Ground	LED headlamp (LH) warning signal	Input	Ignition switch ON	Headlamp warning ON	1.0 V
					Headlamp warning OFF	12 V
23 (B)	Ground	Ground	—	Ignition switch ON	—	0 V
25 (W)	Ground	Alternator signal	Input	Ignition switch ON	Charge warning lamp ON	2 V
					Charge warning lamp OFF	Battery voltage
26 (V)	Ground	Parking brake switch signal	Input	Ignition switch ON	Parking brake applied	0 V
					Parking brake released	12 V
27 (V)	Ground	Brake fluid level switch signal	Input	Ignition switch ON	Brake fluid level is normal	12 V
					The brake fluid level is lower than the low level	0 V
28 (G)	Ground	Security signal	Input	Ignition switch ON	Security indicator lamp ON	0 V
					Security indicator lamp OFF	12 V
29 (L)	Ground	Washer level switch signal	Input	Ignition switch ON	Washer level switch ON	0 V
					Washer level switch OFF	5 V
32 (G)	Ground	Paddle shifter shift down signal	Input	Ignition switch ON	Paddle shifter shift down operation	0 V
					Other than the above	12 V
33 (BG)	Ground	Paddle shifter shift up signal	Input	Ignition switch ON	Paddle shifter shift up operation	0 V
					Other than the above	12 V
34 (G)	24 (B)	Fuel level sensor signal	Input	Ignition switch ON	—	 <p style="text-align: right; font-size: small;">JSNIA2672ZZ</p>
35 (W)	Ground	Seat belt buckle switch signal (driver side)	Input	Ignition switch ON	When driver seat belt is fastened	12 V
					When driver seat belt is unfastened	0 V
36 (G)	Ground	Passenger seat belt warning signal	Input	Ignition switch ON	<ul style="list-style-type: none"> • When driver seat belt is fastened • When getting in the passenger seat • When passenger seat belt is fastened 	12 V
					<ul style="list-style-type: none"> • When driver seat belt is fastened • When getting in the passenger seat • When passenger seat belt is unfastened 	0 V

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
37 (G)	Ground	Non-manual mode signal	Input	Ignition switch ON	Selector manual mode po- sition	12 V
					Other than the above	0 V
38 (V)	Ground	Manual mode shift down signal	Input	Ignition switch ON	Selector lever shift down operation	0 V
					Other than the above	12 V
39 (L)	Ground	Manual mode shift up sig- nal	Input	Ignition switch ON	Selector lever shift up oper- ation	0 V
					Other than the above	12 V
40 (W)	Ground	Manual mode signal	Input	Ignition switch ON	Selector manual mode po- sition	0 V
					Other than the above	12 V

Fail-Safe

INFOID:0000000012961987

FAIL-SAFE

The combination meter activates the fail-safe control if CAN communication with each unit is malfunctioning.

Function		Specifications
Speedometer		Reset to zero by suspending communication.
Tachometer		
Engine coolant temperature gauge		
Illumination control		When suspending communication, changes to nighttime mode.
Information display	Odo/trip meter	The display turns OFF by suspending communication.
	Shift position indicator	
	Door open warning	
	Trunk open warning	
	Fuel filler cap warning	
	Low tire pressure warning	
	Front radar warning	
	BCI ON indicator	
	BCI OFF indicator	
	BCI malfunction indicator	
BCI not available indicator		
FEB warning		
Buzzer		The buzzer turns OFF by suspending communication.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

WCS

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

	Function	Specifications
Warning lamp/indicator lamp	ABS warning lamp	The lamp turns ON by suspending communication.
	VDC warning lamp	
	VDC OFF indicator lamp	
	Brake warning lamp	
	FEB indicator lamp	
	AWD warning lamp	
	Malfunction indicator lamp	
	CRUISE warning lamp	
	Low tire pressure warning lamp	The lamp blinking caused by suspending communication.
	AFS OFF indicator lamp	
	High beam indicator lamp	The lamp turns OFF by suspending communication.
	Turn signal indicator lamp	
	Front fog lamp indicator lamp	
	Tail lamp indicator lamp	
	A/T CHECK indicator lamp	
	Lane departure warning lamp	
	LDP ON indicator lamp	
	Oil pressure warning lamp	
	ECO drive indicator	
	Blind Spot Intervention ON indicator	
BSW/Blind Spot Intervention warning lamp		

DTC Index

INFOID:000000012961988

Display contents of CONSULT	Diagnostic item is detected when...	Refer to
CAN COMM CIRCUIT [U1000]	When combination meter is not transmitting or receiving CAN communication signal for 2 seconds or more.	MWI-70. "Diagnosis Procedure"
CONTROL UNIT (CAN) [U1010]	When detecting error during the initial diagnosis of the CAN controller of combination meter.	MWI-71. "Diagnosis Procedure"
VEHICLE SPEED [B2205]	The abnormal vehicle speed signal is input from the ABS actuator and electric unit (control unit) for 2 seconds or more.	MWI-72. "Diagnosis Procedure"
ENGINE SPEED [B2267]	If ECM continuously transmits abnormal engine speed signals for 2 seconds or more.	MWI-73. "Diagnosis Procedure"
WATER TEMP [B2268]	If ECM continuously transmits abnormal engine coolant temperature signals for 60 seconds or more.	MWI-74. "Diagnosis Procedure"

BCM

< ECU DIAGNOSIS INFORMATION >

BCM

List of ECU Reference

INFOID:0000000012351507

ECU	Reference
BCM	BCS-37. "Reference Value"
	BCS-57. "Fail-safe"
	BCS-58. "DTC Inspection Priority Chart"
	BCS-59. "DTC Index"

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WCS

WARNING CHIME SYSTEM


< WIRING DIAGRAM >

WIRING DIAGRAM

WARNING CHIME SYSTEM

Wiring Diagram

INFOID:000000012351508

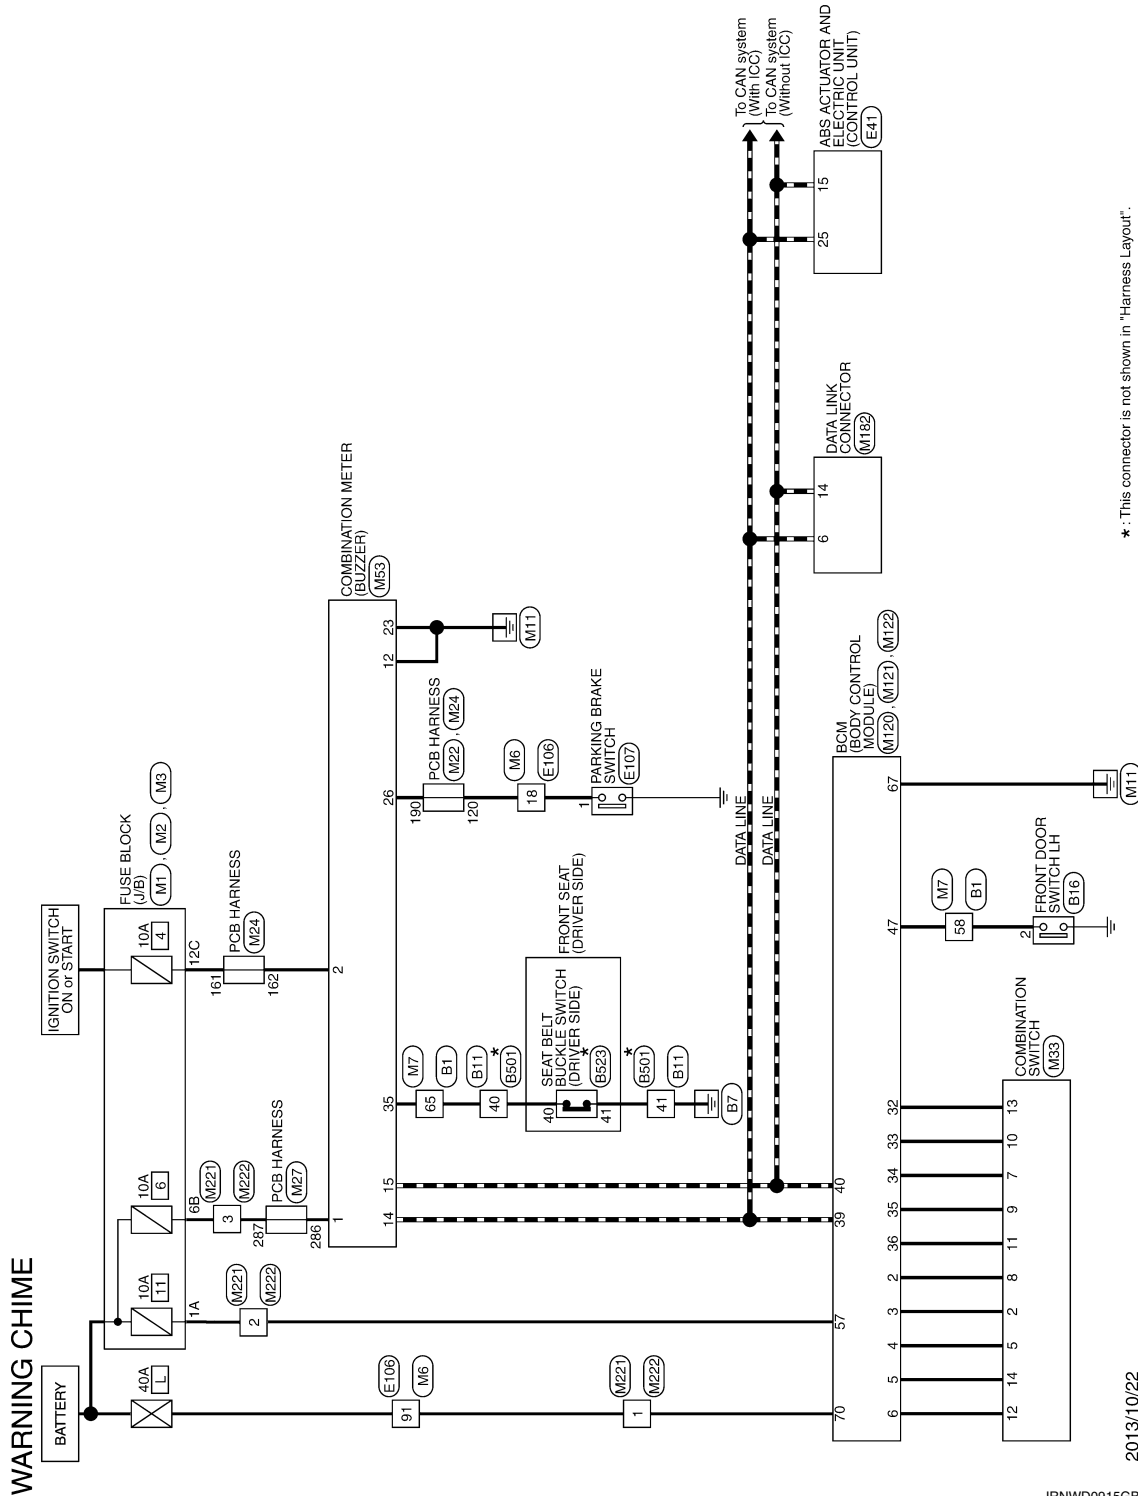


*: This connector is not shown in "Harness Layout".

2013/10/22

JRNWD0915GB

WARNING CHIME SYSTEM

< WIRING DIAGRAM >

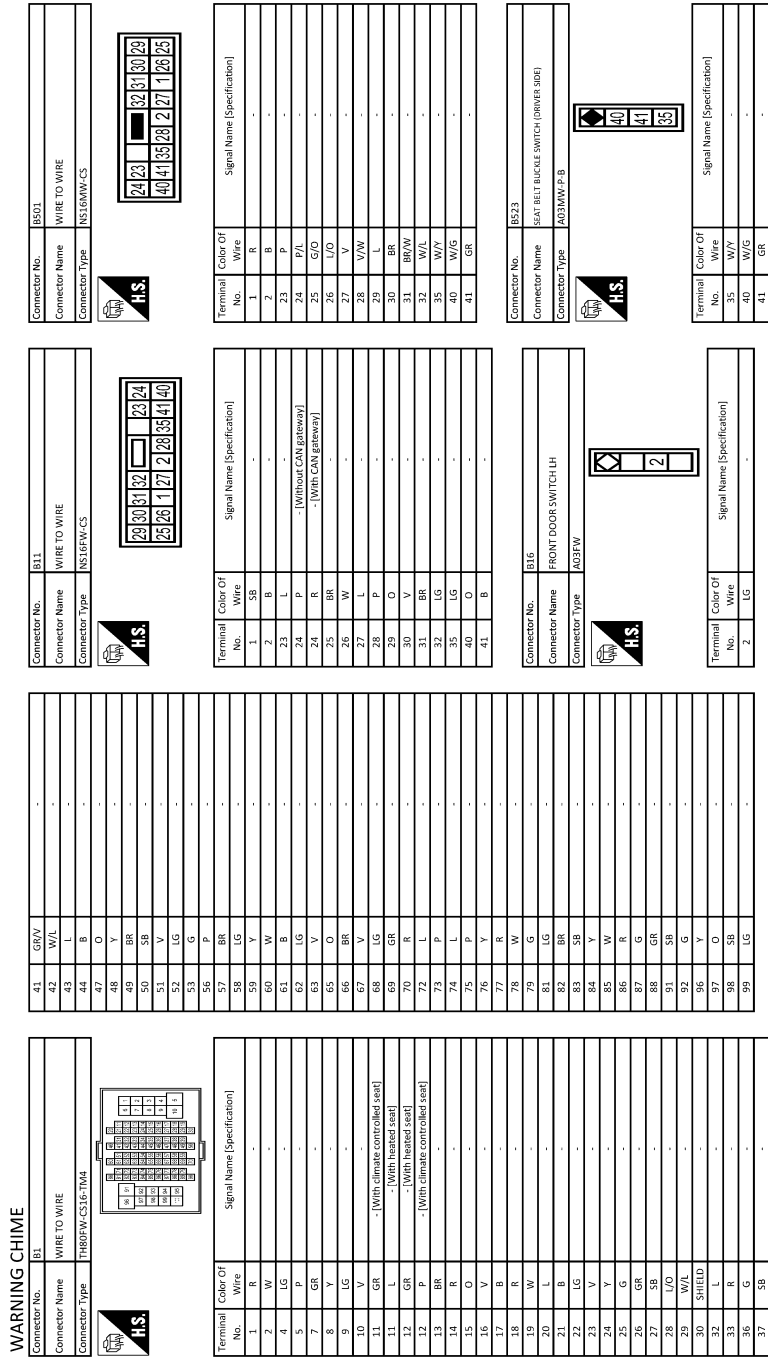

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WCS


JRNWF1481GB

WARNING CHIME SYSTEM

< WIRING DIAGRAM >


WARNING CHIME

Connector No.	E41
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	SAZ20P8-S2Z4-J



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B/W	ECU(GND)
2	B	MOTOR(GND)
3	Y	SOLENOID(POWER)
4	G	MOTOR(POWER)
5	SB	STOP LAMP SW
6	Y	CANM2(-)
7	W	RH-LH SENS(SIGNAL)
8	G	RH-LH SENS(POWER)
9	BR	FR-RH SENS(SIGNAL)
10	B	FR-RH SENS(POWER)
13	LG	VAC SENS(SIGNAL)
15	P	CANL(-)
16	B	CANM2(+)
17	BR	RH-RH SENS(SIGNAL)
18	Y	RH-RH SENS(POWER)
19	SB	FR-LH SENS(SIGNAL)
20	G	FR-LH SENS(POWER)
25	O	CAN-L
28	V	VAC SENS(POWER)
30	R	VAC OFF SW
32	SHIELD	VAC SENS(GND)
34	G	IGN(POWER)

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH8PFW-C316-TM4




Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	W	-
3	SB	-
4	LG	-
5	O	-
6	W	-
7	GR	-
8	G	-
9	Y	-
10	BR	-
11	SB	-
12	L	-
13	GR	-
14	GR	-
15	V	-
16	Y	-
17	GR	-
18	V	-
20	BR	-
21	P	-
22	L	-
23	P	-
27	SHIELD	-
28	L/O	-
29	W/L	-
31	BR	-
32	G	-
33	O	-
34	Y	-
36	G	-
37	V	-
41	BR	-
44	W	-
45	L	-
46	GR	-
47	V	-

Connector No.	E107
Connector Name	PARKING BRAKE SWITCH
Connector Type	TBD1FW-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	INSDFW-M2



Terminal No.	Color Of Wire	Signal Name [Specification]
3A	R	-
2A	W	-
1A	Y	-
4A	W	-
5A	V	-
6A	Y	-
8A	Y	-

48	G	-
49	G	-
50	LG	-
54	R	-
55	B	-
60	W	-
61	W	-
62	Y	-
63	BR	-
64	B	-
65	Y	-
66	R	-
67	SB	-
68	G	-
69	SHIELD	-
70	W	-
71	W	-
72	R	-
73	G	-
74	Y	-
75	B	-
76	SHIELD	-
77	O	-
78	SB	-
80	V	-
82	SB	-
83	GR	-
84	Y	-
85	L	-
86	Y	-
87	L	-
88	BR	-
89	LG	-
90	W	-
91	W	-
92	P	-
93	LG	-
94	BR	-
95	W	-
97	R	-
98	Y	-
99	V	-
100	V	-

WARNING CHIME SYSTEM

< WIRING DIAGRAM >


WARNING CHIME

Connector No.	M2
Connector Name	FUSE BLOCK (/B)
Connector Type	HSJ2PWCS



Terminal No.	Color Of Wire	Signal Name [Specification]
1B	R	-
3B	P	-
4B	G	-
5B	SR	-
6B	W	- [With VCB37 engine]
6B	Y	- [With VCS5 engine]
7B	Y	-
8B	R	-
9B	R	-

Connector No.	M3
Connector Name	FUSE BLOCK (/B)
Connector Type	HSJ2PWCS



Terminal No.	Color Of Wire	Signal Name [Specification]
10C	LG	-
11C	LG	-
12C	O	-
6C	R	-
7C	B	-
8C	B	-
9C	L	-


Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH80MM CS1E-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	W	-
3	SB	-
4	LG	-
5	W	-
6	W	-
7	BG	-
8	G	-
9	Y	-
10	W	-
11	R	-
12	V	-
13	LG	-
14	L	-
15	V	-
16	B	-
17	GR	-
18	SB	-
19	SB	-
21	BR	-
22	L	-
23	P	-
27	SHIELD	-
28	V	-
29	SB	-
31	BG	-
32	P	-
33	R	-
34	BG	-
36	V	-
37	G	-
41	BR	-
44	BR	-
45	Y	-
46	BG	-
47	V	-

Terminal No.	Color Of Wire	Signal Name [Specification]
48	G	-
49	BG	-
50	W	-
51	G	-
60	GR	-
61	B	-
62	LG	-
63	BR	-
64	L	- [With LCC]
64	SB	- [Without LCC]
65	R	- [With LCC]
65	Y	- [Without LCC]
66	P	-
67	L	-
68	R	-
69	SHIELD	-
70	B	-
71	W	-
72	R	-
73	G	-
74	Y	-
75	B	-
76	SHIELD	-
77	B	-
78	V	-
80	G	-
82	B	-
83	BG	-
84	SB	-
85	V	-
86	L	-
87	Y	-
88	V	-
88	LG	-
90	BG	-
91	W	-
92	BG	-
93	G	-
94	Y	-
95	W	-
97	SB	-
98	R	-
99	W	-
100	L	-

Connector No.	M7
Connector Name	WIRE TO WIRE
Connector Type	TH80MM CS1E-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	Y	-
4	BR	-
5	P	-
7	G	-
8	Y	-
9	G	-
10	V	-
11	L	- [With heated seat]
11	V	- [With climate controlled seat]
12	GR	- [With heated seat]
12	P	- [With climate controlled seat]
13	BR	-
14	GR	-
15	BG	-
16	V	-
17	BS	-
18	Y	- [Without CAN gateway]
18	Y	- [With CAN gateway]
19	W	-
20	L	-
21	B	-
22	LG	-
23	W	-
24	V	-
25	G	-
26	BR	-
27	SB	-
28	P	-
29	L	-
30	SHIELD	-
32	L	-
33	P	-
36	BG	-
37	SB	-
41	SB	-

A
B
C
D
E
F
G
H
I
J
K
L
M
WCS
O
P


WARNING CHIME SYSTEM

< WIRING DIAGRAM >

WARNING CHIME

42	V	-	-
43	B	-	-
44	L	-	-
47	L	-	-
48	LG	-	-
49	BR	-	-
50	V	-	-
51	V	-	-
52	P	-	-
53	BG	-	-
56	SB	-	-
57	P	-	-
58	LG	-	-
59	Y	-	-
60	GR	-	-
61	B	-	-
62	LG	-	-
63	BR	-	-
65	W	-	-
66	R	-	-
67	V	-	-
68	LG	-	-
69	SB	-	-
70	V	-	-
72	L	-	-
73	P	-	-
74	L	-	-
75	P	-	-
76	Y	-	-
77	Y	-	-
78	SB	-	-
79	W	-	-
81	LG	-	-
82	BR	-	-
83	BG	-	-
84	B	-	-
85	W	-	-
86	G	-	-
87	R	-	-
88	G	-	-
91	W	-	-
92	G	-	-
96	W	-	-
97	BG	-	-
98	Y	-	-
99	LG	-	-


Connector No.	M22
Connector Name	PCB HARNESS
Connector Type	TH40P3-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
81	L	-
82	P	-
83	B	-
84	B	-
85	B	-
86	B	-
87	B	-
88	B	-
89	Y	-
91	V	-
92	V	-
93	B	-
94	B	-
95	LG	-
96	BR	-
97	G	-
98	G	-
99	G	-
100	G	-
101	L	-
102	P	-
103	B	-
104	BR	-
105	R	-
107	Y	-
108	Y	-
109	BR	-
110	Y	-
112	B	-
113	P	-
114	L	-
116	B	-
117	B	- [With W56 engine]
117	BG	- [With VQ37 engine]
118	B	-
119	LG	-

120	V	-	-
-----	---	---	---


Connector No.	M24
Connector Name	PCB HARNESS
Connector Type	TH40PW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
161	BG	-
162	BG	-
164	V	-
165	V	-
166	R	-
167	LG	-
169	R	-
171	BG	-
172	B	-
174	W	-
176	L	-
177	L	-
178	Y	-
179	Y	-
180	LG	-
182	BR	- [With VQ37 engine or with W56 engine without LCC]
182	R	- [With W56 engine with LCC]
183	G	-
184	V	-
185	P	-
186	R	-
187	L	- [Without CAN gateway]
187	Y	- [With CAN gateway]
188	L	-
189	B	-
190	V	-
191	LG	-
192	B	-
193	SB	-
194	BR	-
195	SB	-
198	R	-
199	B	-

200	SB	-	-
-----	----	---	---

Connector No.	M27
Connector Name	PCB HARNESS
Connector Type	TH40P3-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
281	O	-
282	BG	-
283	BG	-
284	BG	-
286	W	-
287	Y	-
288	W	-
289	SHIELD	-
290	B	-
291	SHIELD	-
292	B	-
293	B	-
294	B	-
295	B	-
296	GR	-
297	B	-
298	B	-
299	L	-
300	W	-
301	R	-
302	R	-
303	R	-
304	SHIELD	-
305	P	-
306	V	-
309	G	-
310	R	-
311	W	-
312	B	-
313	B	-
314	Y	-
315	G	-
316	R	-


WARNING CHIME SYSTEM

< WIRING DIAGRAM >

WARNING CHIME

Terminal No.	Wire	Signal Name [Specification]
317	W	BATTERY POWER SUPPLY
318	SHIELD	IGNITION LOCK
319	W	VEHICLE SPEED SIGNAL (2-PULSE)
320	W	ILLUMINATION CONTROL SIGNAL

Terminal No.	Wire	Signal Name [Specification]
321	W	METER CONTROL SWITCH SIGNAL
322	W	ENTER SWITCH SIGNAL
323	W	SELECT SWITCH SIGNAL
324	W	ILLUMINATION CONTROL SWITCH SIGNAL (+)
325	W	TRIP RESET SWITCH SIGNAL
326	W	GROUND
327	W	CAN-H
328	W	CAN-L
329	W	AIR BAG SIGNAL
330	W	LED HEADLAMP (RH) WARNING SIGNAL
331	W	GROUND
332	W	FUEL LEVEL SENSOR GROUND
333	W	ALTERNATOR SIGNAL
334	W	PARKING BRAKE SWITCH SIGNAL
335	W	BRAKE FLUID LEVEL SWITCH SIGNAL
336	W	SECURITY SIGNAL
337	W	WASHER LEVEL SWITCH SIGNAL
338	W	PADDLE SHIFTER SHIFT DOWN SIGNAL
339	W	PADDLE SHIFTER SHIFT UP SIGNAL
340	W	FUEL LEVEL SENSOR SIGNAL
341	W	SET BEEL BELT LEVEL SWITCH SIGNAL (DRIVER SIDE)
342	W	REAR SEAT BELT LEVEL SWITCH SIGNAL
343	W	MANUAL MODES SHIFT DOWN SIGNAL
344	W	MANUAL MODES SHIFT UP SIGNAL
345	W	MANUAL MODES SIGNAL




Terminal No.	Wire	Signal Name [Specification]
1	W	FR WASHER (L)
2	SB	OUTPUT 4
5	L	OUTPUT 3
6	B	GND
7	V	INPUT 3
8	BE	OUTPUT 5
9	Y	INPUT 2
10	R	INPUT 4
11	LG	INPUT 1
12	R	OUTPUT 1
13	BR	INPUT 5
14	G	OUTPUT 2

Terminal No.	Wire	Signal Name [Specification]
346	W	COMBINATION METER
347	W	TH40FB-WH



Terminal No.	Wire	Signal Name [Specification]
1	W	BATTERY POWER SUPPLY
2	BR	IGNITION LOCK
3	GR	VEHICLE SPEED SIGNAL (2-PULSE)
4	SB	ILLUMINATION CONTROL SIGNAL
5	B	METER CONTROL SWITCH SIGNAL
6	B	METER CONTROL SWITCH GROUND
7	SB	ENTER SWITCH SIGNAL
8	LG	SELECT SWITCH SIGNAL
9	G	ILLUMINATION CONTROL SWITCH SIGNAL (+)
10	GR	TRIP RESET SWITCH SIGNAL
11	L	GROUND
12	B	CAN-H
14	L	CAN-L
15	P	AIR BAG SIGNAL
16	R	LED HEADLAMP (RH) WARNING SIGNAL
17	G	GROUND
18	V	FUEL LEVEL SENSOR GROUND
23	B	ALTERNATOR SIGNAL
24	B	PARKING BRAKE SWITCH SIGNAL
25	W	SECURITY SIGNAL
26	V	WASHER LEVEL SWITCH SIGNAL
27	V	PADDLE SHIFTER SHIFT DOWN SIGNAL
28	G	PADDLE SHIFTER SHIFT UP SIGNAL
29	L	FUEL LEVEL SENSOR SIGNAL
32	G	SET BEEL BELT LEVEL SWITCH SIGNAL (DRIVER SIDE)
33	BG	REAR SEAT BELT LEVEL SWITCH SIGNAL
34	G	MANUAL MODES SHIFT DOWN SIGNAL
35	W	MANUAL MODES SHIFT UP SIGNAL
36	W	MANUAL MODES SIGNAL
37	G	COMBINATION METER
38	L	TH40FB-WH
39	L	TH40FB-WH
40	W	TH40FB-WH

Terminal No.	Wire	Signal Name [Specification]
1	G	RR WINDOW DEFEG RLY CONT
2	BG	COMBI SW INPUT 5
3	SB	COMBI SW INPUT 4
4	L	COMBI SW INPUT 3
5	G	COMBI SW INPUT 2
6	P	COMBI SW INPUT 1
8	V	POWER WINDOW SW COMM
9	P	STOP LAMP SW 1
11	R	RAIN SENSOR SERIAL LINK
14	W	OPTICAL SENSOR
16	SB	DIMMER SIGNAL
17	Y	SENSOR PWRSPLY
18	B	RECEIVER / SENSOR GND
19	V	TURN SIG RH OUTPUT (FRONT)
20	G	TURN SIG LH OUTPUT (FRONT)
21	G	WAS ANT LAMP
22	GR	PACKET RECEIVER SSI
23	G	SECURITY SIGNAL
24	G	DONGLE LINK
25	G	MAX ANT AMP
26	G	KEY IDENTIFICATION
28	G	HAZARD SW
30	O	TR LID OPEN SW
31	W	DR DOOR UNLK SENSOR
32	BR	COMBI SW OUTPUT 5
33	R	COMBI SW OUTPUT 4
34	V	COMBI SW OUTPUT 3
35	Y	COMBI SW OUTPUT 2
36	LG	COMBI SW OUTPUT 1
37	R	P POSITION
39	L	CAN-H
40	P	CAN-L



Terminal No.	Wire	Signal Name [Specification]
41	W	TR KEY C/UNDER SW
42	R	TRUNK LID OPEN/CLOSE STATUS
44	V	TR LID OP CANCEL SW
45	GR	PASSENGER DOOR SW
46	BR	REAR RH DOOR SW
47	LG	DRIVER DOOR SW
48	P	REAR LH DOOR SW
49	SB	TR ROOM LAMP CONT
51	BG	TR LID OPEN REQ SW
53	LG	TRUNK LID OPEN REQUEST
55	BR	RR DOOR UNLK OUTPUT

Terminal No.	Wire	Signal Name [Specification]
56	R	INT ROOM LAMP PWRSPLY
57	R	BAT [FUSE]
58	L	AIR BAG SIGNAL
59	G	PASS DOOR UNLK OUTPUT
61	V	TURN SIG LH OUTPUT (SIDE, REAR)
62	V	STEP LAMP CONT
63	L	ROOM LAMP TIMER CONT
65	V	ALL DOOR FL LID LOCK OUTPUT

Terminal No.	Wire	Signal Name [Specification]
41	W	TR KEY C/UNDER SW
42	R	TRUNK LID OPEN/CLOSE STATUS
44	V	TR LID OP CANCEL SW
45	GR	PASSENGER DOOR SW
46	BR	REAR RH DOOR SW
47	LG	DRIVER DOOR SW
48	P	REAR LH DOOR SW
49	SB	TR ROOM LAMP CONT
51	BG	TR LID OPEN REQ SW
53	LG	TRUNK LID OPEN REQUEST
55	BR	RR DOOR UNLK OUTPUT



Terminal No.	Wire	Signal Name [Specification]
56	R	INT ROOM LAMP PWRSPLY
57	R	BAT [FUSE]
58	L	AIR BAG SIGNAL
59	G	PASS DOOR UNLK OUTPUT
61	V	TURN SIG LH OUTPUT (SIDE, REAR)
62	V	STEP LAMP CONT
63	L	ROOM LAMP TIMER CONT
65	V	ALL DOOR FL LID LOCK OUTPUT

Terminal No.	Wire	Signal Name [Specification]
56	R	INT ROOM LAMP PWRSPLY
57	R	BAT [FUSE]
58	L	AIR BAG SIGNAL
59	G	PASS DOOR UNLK OUTPUT
61	V	TURN SIG LH OUTPUT (SIDE, REAR)
62	V	STEP LAMP CONT
63	L	ROOM LAMP TIMER CONT
65	V	ALL DOOR FL LID LOCK OUTPUT

Terminal No.	Wire	Signal Name [Specification]
56	R	INT ROOM LAMP PWRSPLY
57	R	BAT [FUSE]
58	L	AIR BAG SIGNAL
59	G	PASS DOOR UNLK OUTPUT
61	V	TURN SIG LH OUTPUT (SIDE, REAR)
62	V	STEP LAMP CONT
63	L	ROOM LAMP TIMER CONT
65	V	ALL DOOR FL LID LOCK OUTPUT

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P




WARNING CHIME SYSTEM

< WIRING DIAGRAM >

WARNING CHIME

Terminal No.	Color Of Wire	Signal Name [Specification]
66	LG	DR DOOR FLG LINK OUTPUT
67	B	DR DOOR FLG LINK OUTPUT
68	Y	PW-PMR SWY (CAN)
69	W	PW-PMR SWY (BAT)
70	W	BAT (E)

Connector No.	M382
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW



Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	M-CAN-L
4	B	EARTH
5	B	EARTH
6	L	CAN-H
7	V	KLINE
8	LG	IGN-SWJ
11	SB	M-CAN-H
12	P	CAN-L
13	P	CAN-L
14	P	CAN-L
15	W	POWER

Connector No.	M221
Connector Name	WIRE TO WIRE
Connector Type	M03FW-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	R	-
3	Y	-

Connector No.	M222
Connector Name	WIRE TO WIRE
Connector Type	M03MMW-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	R	-
3	Y	-

JRNWF1486GB

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:0000000012351509

OVERALL SEQUENCE

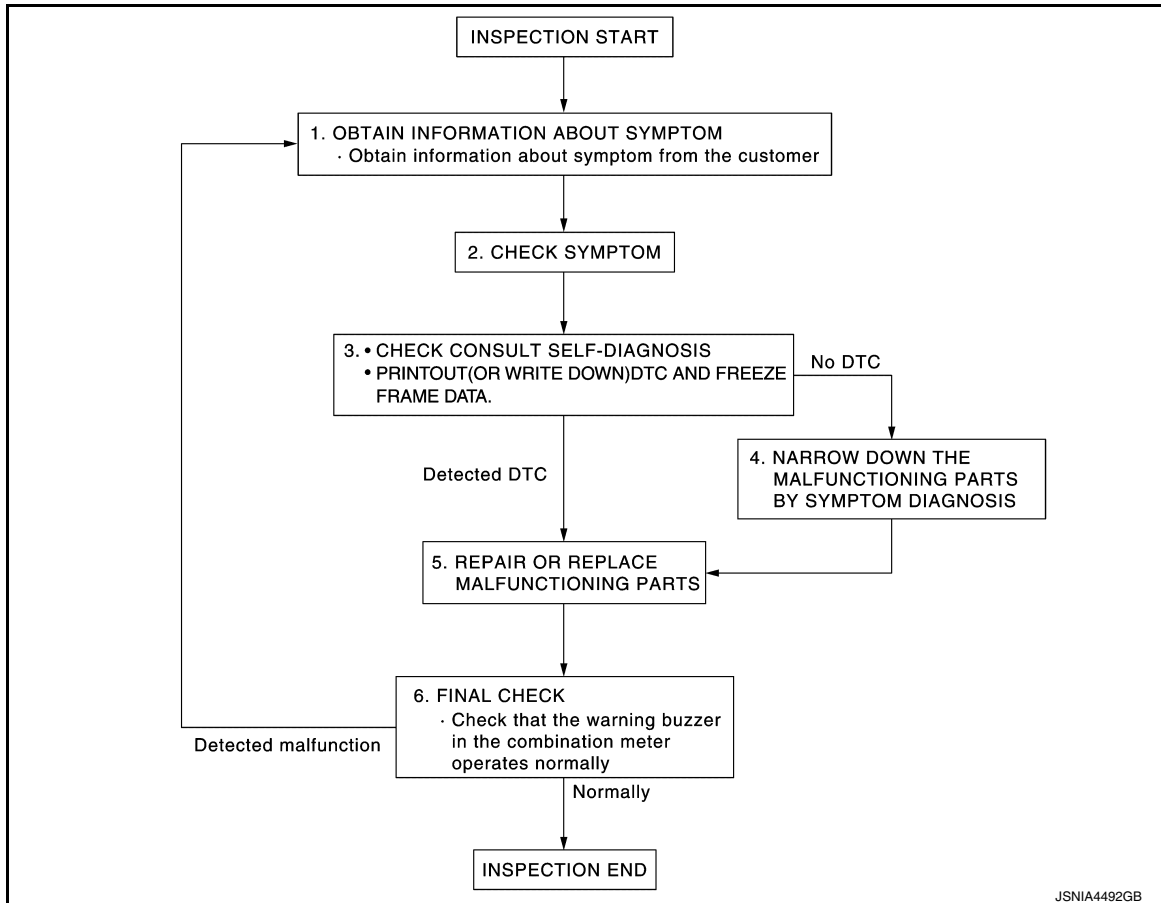

DETAILED FLOW

1.OBTAIN INFORMATION ABOUT SYMPTOM

Interview the customer to obtain as much information as possible about the conditions and environment under which the malfunction occurred.

>> GO TO 2.

2.CHECK SYMPTOM

- Check the symptom based on the information obtained from the customer.
- Check if any other malfunctions are present.

>> GO TO 3.

3.CHECK CONSULT SELF-DIAGNOSIS RESULTS

1. Connect CONSULT and perform self-diagnosis. Refer to [WCS-32. "DTC Index"](#).
2. When DTC is detected, follow the instructions below:
 - Record DTC and Freeze Frame Data.

Are self-diagnosis results normal?

- YES >> GO TO 4.
- NO >> GO TO 5.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

4. NARROW DOWN MALFUNCTIONING PARTS BY SYMPTOM DIAGNOSIS

Perform symptom diagnosis and narrow down the malfunctioning parts.

>> GO TO 5.

5. REPAIR OR REPLACE MALFUNCTIONING PARTS

Repair or replace malfunctioning parts.

NOTE:

If DTC is displayed, erase DTC after repairing or replacing malfunctioning parts.

>> GO TO 6.

6. FINAL CHECK

Check that the warning buzzer in the combination meter operates normally.

Does it operate normally?

YES >> INSPECTION END

NO >> GO TO 1.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

POWER SUPPLY AND GROUND CIRCUIT COMBINATION METER

COMBINATION METER : Diagnosis Procedure

INFOID:000000012965056

1. CHECK FUSE

Check for blown fuses.

Power source	Fuse No.	
Battery	Gasoline engine models	9
	2.2L diesel engine models	111
Ignition switch ON or START	Gasoline engine models	4
	2.2L diesel engine models	42
		105

Is the inspection result normal?

YES >> GO TO 2.

NO >> Be sure to eliminate cause of malfunction before installing new fuse.

2. CHECK POWER SUPPLY CIRCUIT

Check voltage between combination meter harness connector and ground.

Terminals		Ignition switch position	Voltage (Approx.)
(+)	(-)		
Combination meter		Ground	Battery voltage
Connector	Terminal		
M53	1		
	2		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check harness between combination meter and fuse.

3. CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector.
3. Check continuity between combination meter harness connector and ground.

Combination meter		Ground	Continuity
Connector	Terminal		
M53	12		Existed
	23		

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair harness or connector.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

WCS

METER BUZZER CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

METER BUZZER CIRCUIT

Component Function Check

INFOID:000000012351511

1. CHECK OPERATION OF METER BUZZER

1. Select "BUZZER" of "BCM" on CONSULT.
2. Perform "LIGHT WARN ALM" of "Active Test".

Does meter buzzer beep?

- YES >> INSPECTION END
NO >> GO TO 2.

2. CHECK COMBINATION METER INPUT SIGNAL

Select the "Data Monitor" for the "METER/M&A" and check the "BUZZER" monitor value.

BUZZER

Under the condition of buzzer input : On

Except above : Off

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-95. "Removal and Installation"](#).
NO >> Replace BCM. Refer to [BCS-95. "Removal and Installation"](#).

Diagnosis Procedure

INFOID:000000012351512

1. CHECK POWER SUPPLY OF COMBINATION METER

Check power supply of combination meter. Refer to [WCS-43. "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Repair power supply circuit of combination meter.

SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT

Component Function Check

INFOID:000000012351513

1.CHECK COMBINATION METER INPUT SIGNAL

Select the "Data Monitor" for the "METER/M&A" and check the "BUCKLE SW" monitor value.

BUCKLE SW
When seat belt is fastened : Off
When seat belt is unfastened : On

>> INSPECTION END

Diagnosis Procedure

INFOID:000000012351514

1.CHECK COMBINATION METER INPUT SIGNAL

1. Turn ignition switch ON.
2. Check voltage between combination meter harness connector and ground.

Terminals		Condition	Voltage (Approx.)
(+)	(-)		
Combination meter			
Connector	Terminal	When driver seat belt is fastened	12 V
M53	35		
		When driver seat belt is unfastened	0 V

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-95. "Removal and Installation"](#).
NO >> GO TO 2.

2.CHECK SEAT BELT BUCKLE SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector and seat belt buckle switch (driver side) connector.
3. Check continuity between combination meter harness connector and seat belt buckle switch (driver side) harness connector.

Combination meter		Seat belt buckle switch (driver side)		Continuity
Connector	Terminal	Connector	Terminal	
M53	35	B523	40	Existed

4. Check harness continuity between combination meter harness connector and ground.

Combination meter		Ground	Continuity
Connector	Terminal		
M53	35		Not existed

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair harness or connector.

3.CHECK SEAT BELT BUCKLE SWITCH GROUND CIRCUIT

Check harness continuity between seat belt buckle switch (driver side) harness connector and ground.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

WCS

SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Seat belt buckle switch (driver side)		Ground	Continuity
Connector	Terminal		
B523	41		Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair harness or connector.

Component Inspection

INFOID:0000000012351515

1. CHECK SEAT BELT BUCKLE SWITCH (DRIVER SIDE)

1. Turn ignition switch OFF.
2. Disconnect the seat belt buckle switch (driver side) connector.
3. Check continuity between terminals.

Terminal		Condition	Continuity
40	41	When seat belt is fastened	Not existed
		When seat belt is unfastened	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace seat belt buckle (driver side). Refer to [SB-12, "SEAT BELT BUCKLE : Removal and Installation"](#).

PARKING BRAKE SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

PARKING BRAKE SWITCH SIGNAL CIRCUIT

Diagnosis Procedure

INFOID:000000012351516

1. CHECK COMBINATION METER INPUT SIGNAL

1. Turn ignition switch ON.
2. Check the voltage between combination meter harness connector and ground.

(+)		(-)	Condition	Voltage (Approx.)
Combination meter		Ground		
Connector	Terminal			
M53	26		Ignition switch ON	When parking brake is applied 0 V
				When parking brake is released 12 V

Is the inspection result normal?

- YES >> INSPECTION END
NO >> GO TO 2.

2. CHECK PARKING BRAKE SWITCH SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector and parking brake switch connector.
3. Check continuity between combination meter harness connector and parking brake switch harness connector.

Terminals				Continuity
Combination meter		Parking brake switch		
Connector	Terminal	Connector	Terminal	
M53	26	E107	1	Existed

4. Check continuity between combination meter harness connector and ground.

Terminals			Continuity
Combination meter		Ground	
Connector	Terminal		
M53	26		Not existed

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Repair harness or connector.

Component Inspection

INFOID:000000012351517

1. CHECK PARKING BRAKE SWITCH

Check parking brake switch. Refer to [BRC-147, "Component Inspection"](#).

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Replace parking brake switch. Refer to [PB-7, "Exploded View"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

WCS

THE LIGHT REMINDER WARNING DOES NOT SOUND

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

THE LIGHT REMINDER WARNING DOES NOT SOUND

Description

INFOID:0000000012351518

Light reminder warning chime does not sound even though headlamp is illuminated.

Diagnosis Procedure

INFOID:0000000012351519

1. CHECK COMBINATION SWITCH (LIGHTING SWITCH) OPERATION

Check that the headlamps operate normally by operating the combination switch (lighting switch).

Do they operate normally?

YES >> GO TO 2.

NO >> Refer to [EXL-125. "Symptom Table"](#).

2. CHECK DRIVER SIDE DOOR SWITCH SIGNAL CIRCUIT

Perform the check for the driver side door switch signal circuit. Refer to [DLK-87. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3. CHECK DRIVER SIDE DOOR SWITCH

Perform a unit check for the driver side door switch. Refer to [DLK-89. "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-95. "Removal and Installation"](#).

NO >> Replace driver side door switch. Refer to [DLK-228. "Removal and Installation"](#).

THE PARKING BRAKE RELEASE WARNING CONTINUES SOUNDING, OR DOES NOT SOUND

< SYMPTOM DIAGNOSIS >

THE PARKING BRAKE RELEASE WARNING CONTINUES SOUNDING, OR DOES NOT SOUND

Description

INFOID:0000000012351520

- The parking brake warning buzzer sounds continuously during vehicle travel though the parking brake is released.
- The parking brake warning buzzer does not sound at all even though driving the vehicle with the parking brake applied.

Diagnosis Procedure

INFOID:0000000012351521

1. CHECK PARKING BRAKE WARNING LAMP

1. Start the engine.
2. Check the operation of the brake warning lamp by operating the parking brake.

When parking brake is applied : ON

When parking brake is released : OFF

Is the inspection result normal?

YES >> Replace combination meter. Refer to [MWI-95, "Removal and Installation"](#)

NO >> GO TO 2.

2. CHECK PARKING BRAKE SWITCH SIGNAL CIRCUIT

Perform check for the parking brake switch signal circuit. Refer to [WCS-47, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3. CHECK PARKING BRAKE SWITCH

Perform a unit check for the parking brake switch. Refer to [WCS-47, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace combination meter. Refer to [MWI-95, "Removal and Installation"](#)

NO >> Replace parking brake switch. Refer to [PB-7, "Exploded View"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

WCS

THE SEAT BELT WARNING CONTINUES SOUNDING, OR DOES NOT SOUND

< SYMPTOM DIAGNOSIS >

THE SEAT BELT WARNING CONTINUES SOUNDING, OR DOES NOT SOUND

Description

INFOID:000000012351522

- Seat belt warning chime does not sound.
- Seat belt warning chime sounds continuously.

Diagnosis Procedure

INFOID:000000012351523

1. CHECK SEAT BELT WARNING LAMP

1. Turn ignition switch ON.
2. Check the operation of the seat belt warning lamp in the combination meter.

Seat belt fastened : OFF
Seat belt not fastened : ON

Is the inspection result normal?

- YES >> GO TO 2.
NO >> GO TO 4.

2. CHECK BCM OUTPUT SIGNAL

Check if the seat belt warning chime is activated by performing BCM active test. Refer to [WCS-21, "BUZZER : CONSULT Function \(BCM - BUZZER\)"](#).

Is the inspection result normal?

- YES >> INSPECTION END
NO >> GO TO 3.

3. CHECK COMBINATION METER INPUT SIGNAL

Check if buzzer switches to proper condition (On/Off) on data monitor of combination meter. Refer to [WCS-15, "CONSULT Function"](#).

Buzzer active condition : On
Buzzer non-active condition : Off

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-95, "Removal and Installation"](#).
NO >> Replace BCM. Refer to [BCS-95, "Removal and Installation"](#).

4. CHECK SEAT BELT BUCKLE SWITCH (DRIVER SIDE) CIRCUIT

Perform the check for the seat belt buckle switch (driver side) circuit. Refer to [WCS-45, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Repair harness or connector.

5. CHECK SEAT BELT BUCKLE SWITCH (DRIVER SIDE)

Perform a unit check for the seat belt buckle switch (driver side). Refer to [WCS-46, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-95, "Removal and Installation"](#).
NO >> Replace seat belt buckle (driver side). Refer to [SB-12, "SEAT BELT BUCKLE : Removal and Installation"](#).