

SECTION EL

When you read wiring diagrams:

- Read GI section, "HOW TO READ WIRING DIAGRAMS".

When you perform trouble diagnoses, read GI section, "HOW TO FOLLOW FLOW CHART IN TROUBLE DIAGNOSES" and "HOW TO PERFORM EFFICIENT DIAGNOSIS FOR AN ELECTRICAL INCIDENT".

CONTENTS

PRECAUTIONS	2	Wiring Diagram (For USA) — H/LAMP —	39
Supplemental Restraint System (SRS) "AIR BAG"	2	Trouble Diagnoses (For USA)	40
HARNESS CONNECTOR	3	Daytime Light System/System Description (For Canada)	41
Description	3	Operation (Daytime light system for Canada)	42
STANDARDIZED RELAY	4	Schematic (For Canada)	43
Description	4	Wiring Diagram (For Canada) — DTRL —	44
POWER SUPPLY ROUTING	6	Trouble Diagnoses (For Canada)	47
Schematic	6	Bulb Replacement	48
Wiring Diagram — POWER —	7	Bulb Specifications	48
Fuse	18	Aiming Adjustment	48
Fusible Link	18	EXTERIOR LAMP	50
Circuit Breaker Inspection	18	Parking, License and Tail Lamps/Wiring Diagram — TAIL/L —	50
GROUND DISTRIBUTION	19	Stop Lamp/Wiring Diagram — STOP/L —	52
BATTERY	22	Back-up Lamp/Wiring Diagram — BACK/L —	54
How to Handle Battery	22	Front Fog Lamp/System Description	55
Service Data and Specifications (SDS)	25	Front Fog Lamp/Wiring Diagram — F/FOG —	56
STARTING SYSTEM	26	Front Fog Lamp Aiming Adjustment	57
System Description	26	Bulb Specifications	57
Wiring Diagram — START —	27	Turn Signal and Hazard Warning Lamps/System Description	58
Construction	28	Turn Signal and Hazard Warning Lamps/Schematic	60
Removal and Installation	28	Turn Signal and Hazard Warning Lamps/Wiring Diagram — TURN —	61
Pinion/Clutch Check	29	Turn Signal and Hazard Warning Lamps/Trouble Diagnoses	64
Service Data and Specifications (SDS)	29	Combination Flasher Unit Check	64
CHARGING SYSTEM	30	Bulb Specifications	65
System Description	30	INTERIOR LAMP	66
Wiring Diagram — CHARGE —	31	Illumination/System Description	66
Trouble Diagnoses	32	Illumination/Schematic	67
Construction	33	Illumination/Wiring Diagram — ILL —	68
Removal and Installation	33	Interior, Spot and Luggage Room Lamps/System Description	72
Service Data and Specifications (SDS)	34	Bulb Specifications	72
COMBINATION SWITCH	35		
Combination Switch/Check	35		
Replacement	36		
Steering Switch/Check	37		
HEADLAMP	38		
System Description (For USA)	38		

CONTENTS (Cont'd)

Interior, Spot and Luggage Room Lamps/ Schematic	73	AUDIO AND POWER ANTENNA	132
Interior, Spot and Luggage Room Lamps/ Wiring Diagram — INT/L —.....	74	Audio/System Description.....	132
METER AND GAUGES	77	Audio/Schematic	133
Component Parts and Harness Connector		Audio/Wiring Diagram — AUDIO —.....	134
Location	77	Power Antenna/System Description	138
System Description.....	77	Power Antenna/Wiring Diagram — P/ANT —	139
Combination Meter	79	Trouble Diagnoses.....	140
Combination Meter, Compass and		Location of Antenna.....	141
Thermometer/Schematic.....	80	Antenna Rod Replacement	142
Combination Meter, Compass and		POWER SUNROOF	143
Thermometer/Wiring Diagram — METER —.....	81	Wiring Diagram — SROOF —	143
Trouble Diagnoses.....	84	DOOR MIRROR	144
WARNING LAMPS	90	Wiring Diagram — MIRROR —.....	144
Warning Lamps/Schematic.....	90	GLASS HATCH OPENER	145
Warning Lamps/Wiring Diagram — WARN —	91	Wiring Diagram — TLID —	145
Electrical Components Inspection	97	POWER SEAT	146
WARNING BUZZER	98	Power Seat/Wiring Diagram — SEAT —	146
Component Parts and Harness Connector		HEATED SEAT	148
Location	98	Heated Seat/Wiring Diagram — HSEAT —	148
Warning Buzzer/System Description	98	AUTOMATIC SPEED CONTROL DEVICE (ASCD)	149
Warning Buzzer/Wiring Diagram — BUZZER —	100	Component Parts and Harness Connector	
Trouble Diagnoses.....	102	Location	149
WIPER AND WASHER	106	System Description.....	150
System Description.....	106	Schematic.....	152
Front Wiper and Washer/Wiring Diagram		Wiring Diagram — ASCD —	153
— WIPER —.....	108	Trouble Diagnoses.....	158
Trouble Diagnoses.....	110	ASCD Wire Adjustment	168
Wiper Installation and Adjustment.....	112	POWER WINDOW	169
Washer Nozzle Adjustment	112	System Description.....	169
Washer Tube Layout	113	Schematic	171
Wiper Linkage.....	113	Wiring Diagram — WINDOW —	172
Rear Wiper and Washer/System Description.....	114	Trouble Diagnoses.....	176
Rear Wiper and Washer/Schematic	116	POWER DOOR LOCK	177
Rear Wiper and Washer/Wiring Diagram		Component Parts and Harness Connector	
— WIP/R —	117	Location	177
Rear Wiper/Trouble Diagnoses	120	System Description.....	177
Rear Wiper Installation and Adjustment.....	120	Schematic	179
Rear Washer Nozzle Adjustment.....	121	Wiring Diagram — D/LOCK —.....	180
Washer Tube Layout	121	Trouble Diagnoses.....	183
Check Valve (for rear washer).....	121	MULTI-REMOTE CONTROL SYSTEM	186
HORN AND CIGARETTE LIGHTER	122	Component Parts and Harness Connector	
Wiring Diagram — HORN —.....	122	Location	186
REAR WINDOW DEFOGGER	124	System Description.....	186
Component Parts and Harness Connector		Schematic	188
Location	124	Wiring Diagram — MULTI —.....	189
System Description.....	124	Trouble Diagnoses.....	193
Wiring Diagram — DEF —.....	126	ID Code Entry Procedure	200
Trouble Diagnoses.....	128	Remote Controller Battery Replacement.....	201
Filament Check.....	129	THEFT WARNING SYSTEM	202
Filament Repair	130	Component Parts and Harness Connector	
		Location	202
		System Description.....	203

CONTENTS (Cont'd)

Schematic	206	Engine Control Harness	242	GI
Wiring Diagram — THEFT —	208	Body Harness LH	244	
Trouble Diagnoses	214	Body Harness RH	245	MA
SMART ENTRANCE CONTROL UNIT	227	Back Door Harness	246	
Description	227	Engine and Transmission Harness	247	EM
Schematic	228	Room Lamp	248	
Input/Output Operation Signal	230	Air Bag Harness	249	LC
INTEGRATED HOMELINK TRANSMITTER	231	Door Harness (LH side)	250	
Wiring Diagram — TRNSMT —	231	Door Harness (RH side)	251	LC
Trouble Diagnoses	232	SUPER MULTIPLE JUNCTION (SMJ)	Foldout	
LOCATION OF ELECTRICAL UNITS	233	Terminal Arrangement	Foldout	EC
Engine Compartment	233	FUSE BLOCK — Junction Box (J/B)	Foldout	
Passenger Compartment	234	Terminal Arrangement	Foldout	FE
HARNESS LAYOUT	236	FUSE AND FUSIBLE LINK BOX	Foldout	FE
Outline	236	Terminal Arrangement	Foldout	
How to Read Harness Layout	237	ELECTRICAL UNITS	Foldout	AT
Main Harness	238	Terminal Arrangement	Foldout	AT
Engine Room Harness	240			

WIRING DIAGRAM REFERENCE CHART

ECCS	EC SECTION	
A/T CONTROL, SHIFT LOCK CONTROL	AT SECTION	
A/T CONTROL	TF SECTION	TF
ANTI-LOCK BRAKE SYSTEM	BR SECTION	P'D
SRS "AIR BAG"	RS SECTION	
HEATER AND AIR CONDITIONER	HA SECTION	FA

RA

BR

ST

RS

BT

HA

EL

IDX

PRECAUTIONS

Supplemental Restraint System (SRS) “AIR BAG”

The Supplemental Restraint System “Air Bag”, used along with a seat belt, helps to reduce the risk or severity of injury to the driver and front passenger in a frontal collision. The Supplemental Restraint System consists of air bag modules (located in the center of the steering wheel and on the instrument panel on the passenger side), a diagnosis sensor unit, warning lamp, wiring harness and spiral cable. Information necessary to service the system safely is included in the **RS section** of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses are covered with yellow insulation either just before the harness connectors or for the complete harness, for easy identification.

HARNESS CONNECTOR

Description


HARNESS CONNECTOR

- All harness connectors have been modified to prevent accidental looseness or disconnection.
- The connector can be disconnected by pushing or lifting the locking section.

CAUTION:

Do not pull the harness when disconnecting the connector.

[Example]

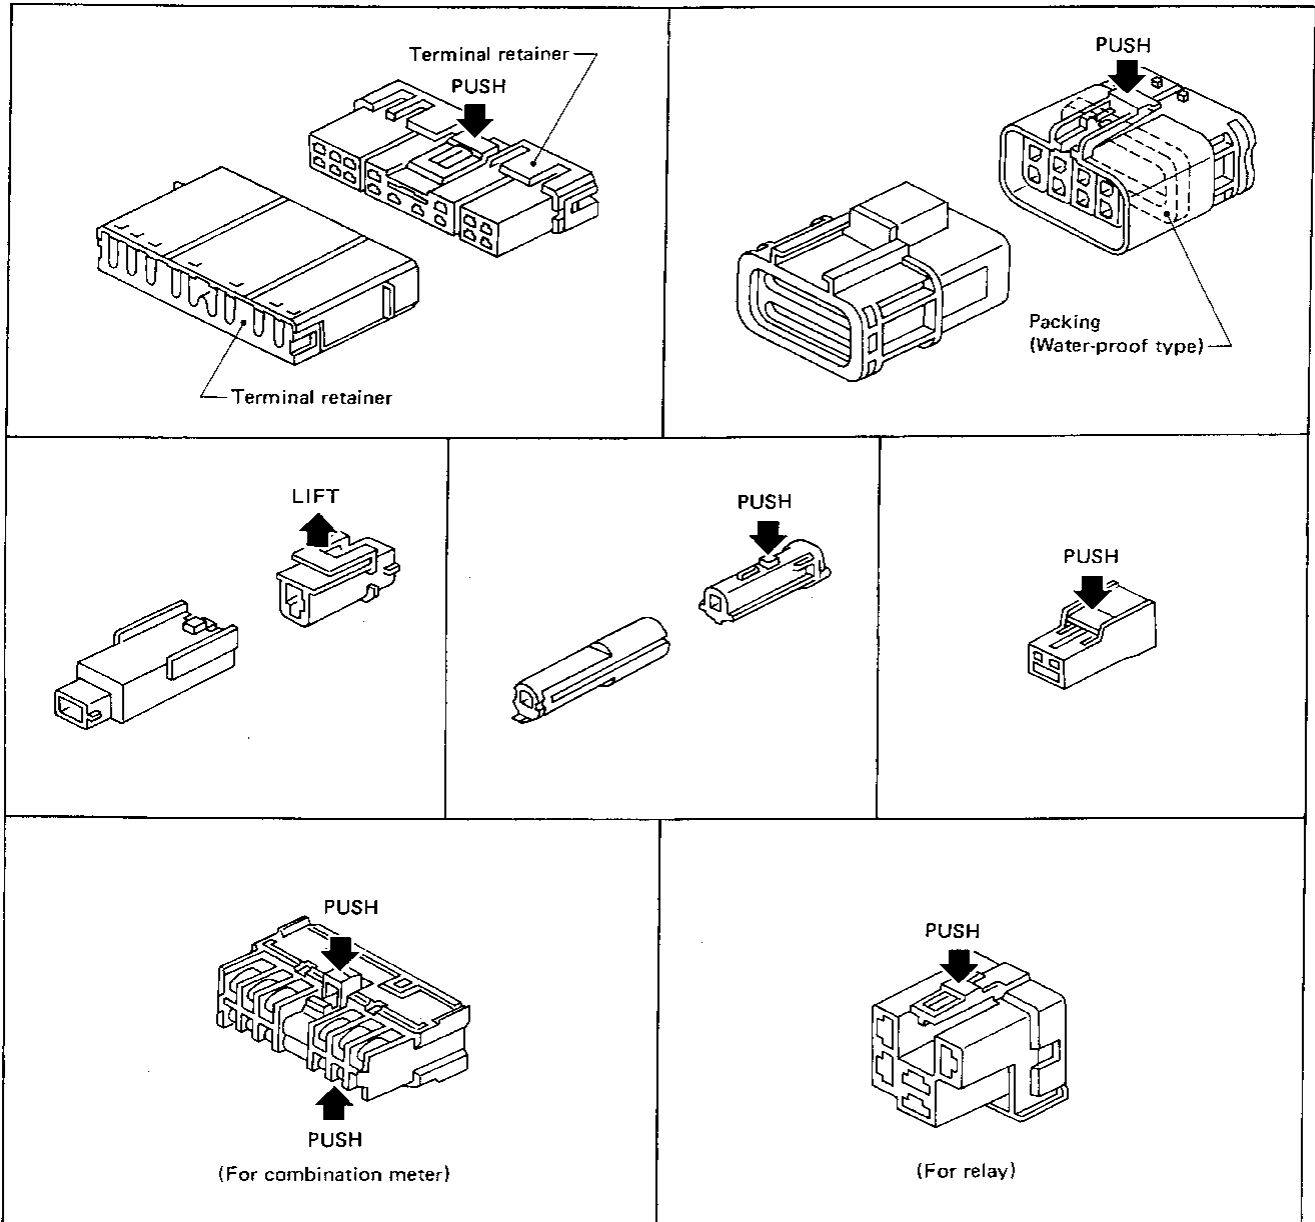

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX


SEL769D

STANDARDIZED RELAY

Description

NORMAL OPEN, NORMAL CLOSED AND MIXED TYPE RELAYS


Relays can mainly be divided into three types: normal open, normal closed and mixed type relays.

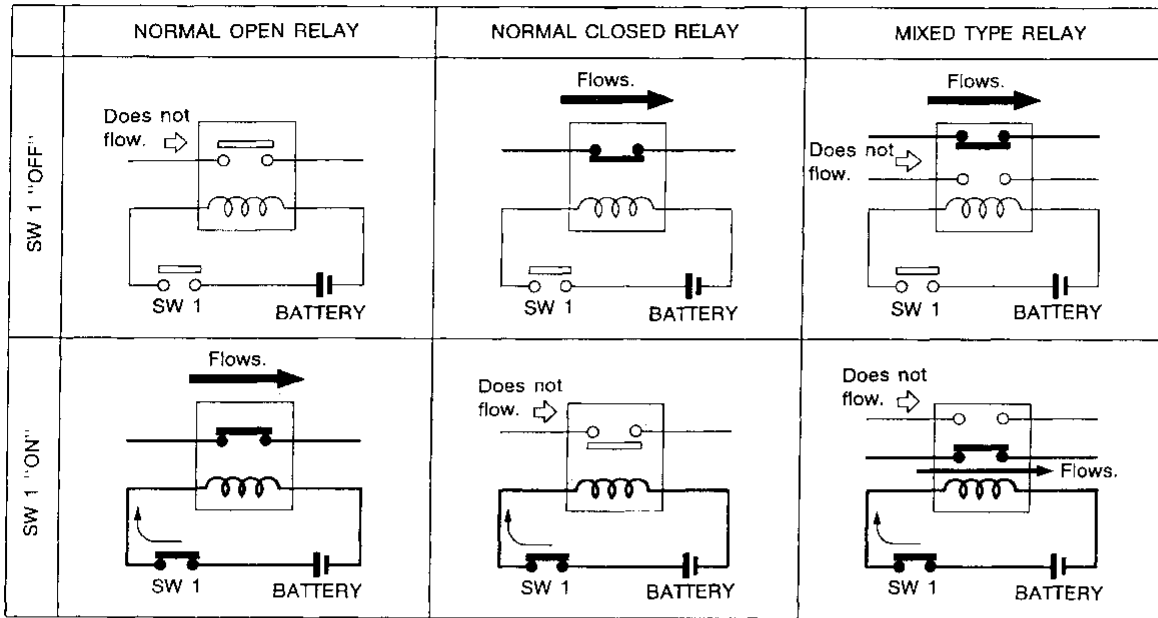

SEL881H

TYPE OF STANDARDIZED RELAYS

1M 1 Make 2M 2 Make
 1T 1 Transfer 1M-1B 1 Make 1 Break

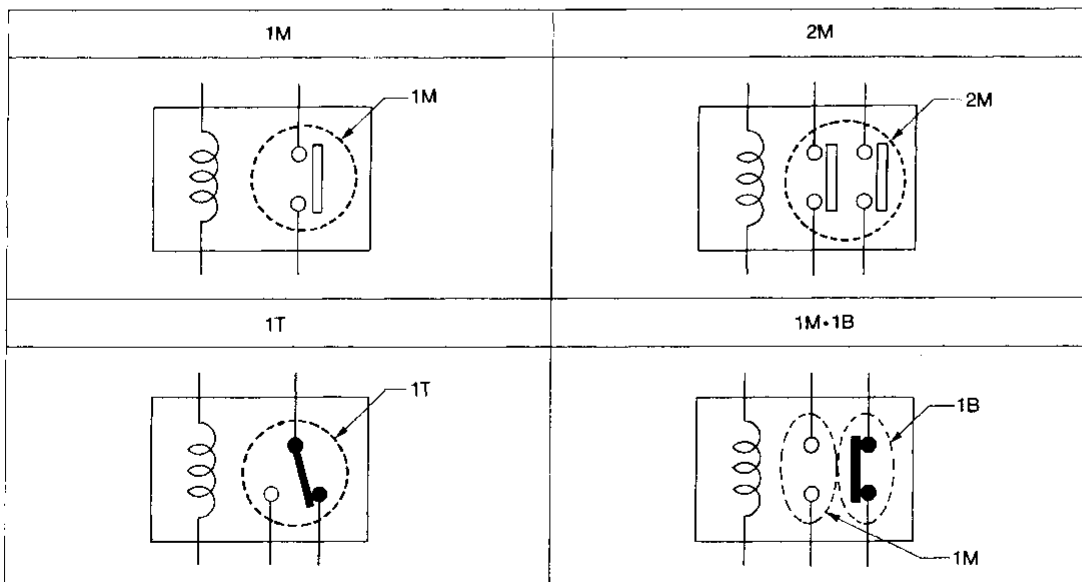

SEL882H

STANDARDIZED RELAY

Description (Cont'd)

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST













RS

BT

HA

EL

IDX

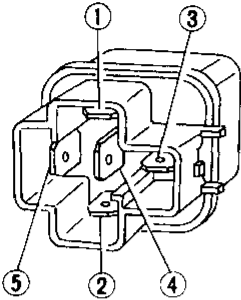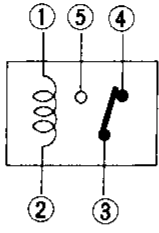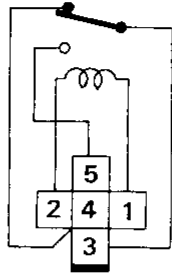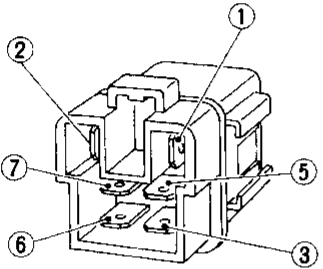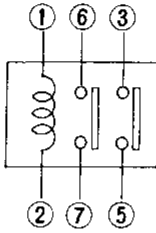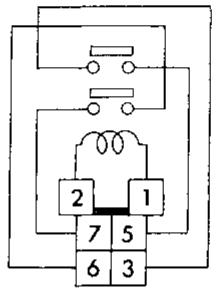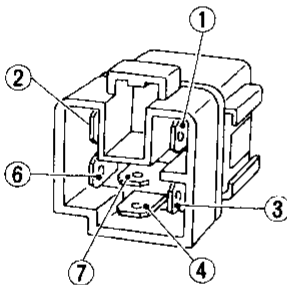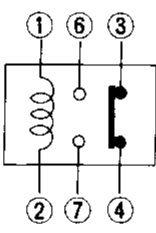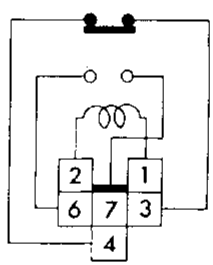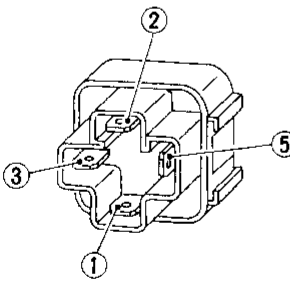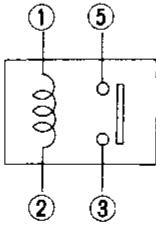
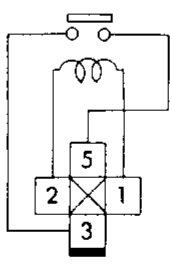
Type	Outer view	Circuit	Connector symbol and connection	Case color
1T				BLACK
2M				BROWN
1M-1B				GRAY
1M				BLUE

The arrangement of terminal numbers on the actual relays may differ from those shown above.

POWER SUPPLY ROUTING

Wiring Diagram — POWER —

EL-POWER-01

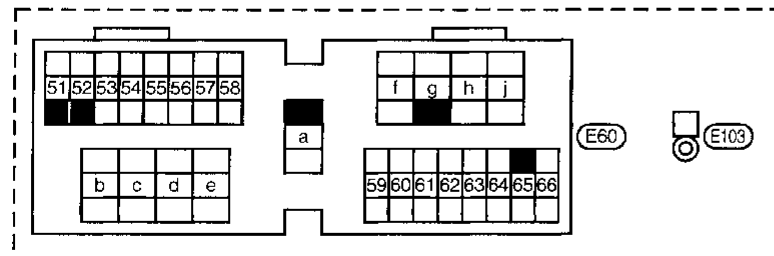
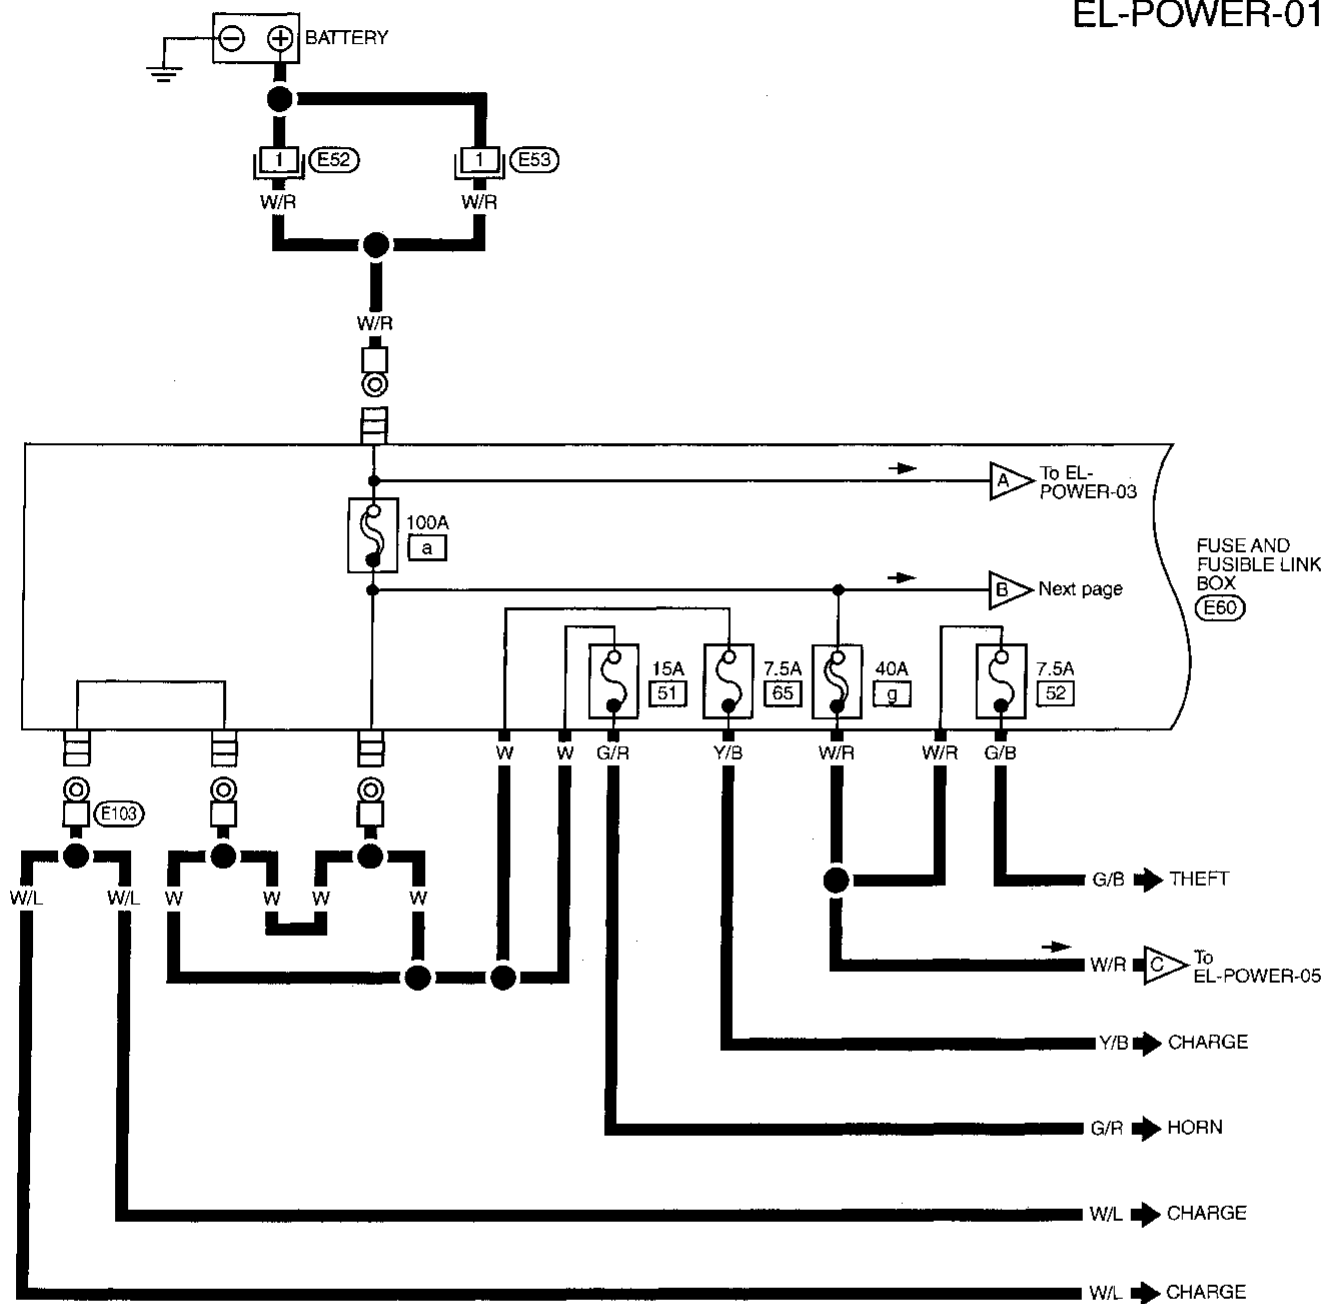


GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

POWER SUPPLY ROUTING

Wiring Diagram — POWER — (Cont'd)

EL-POWER-02

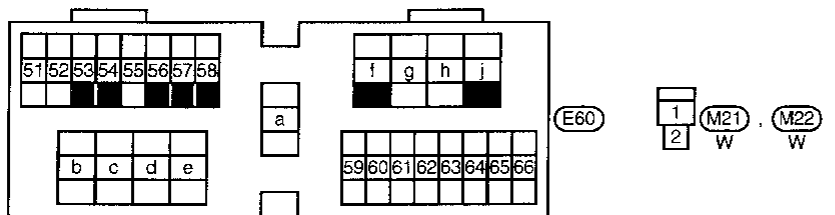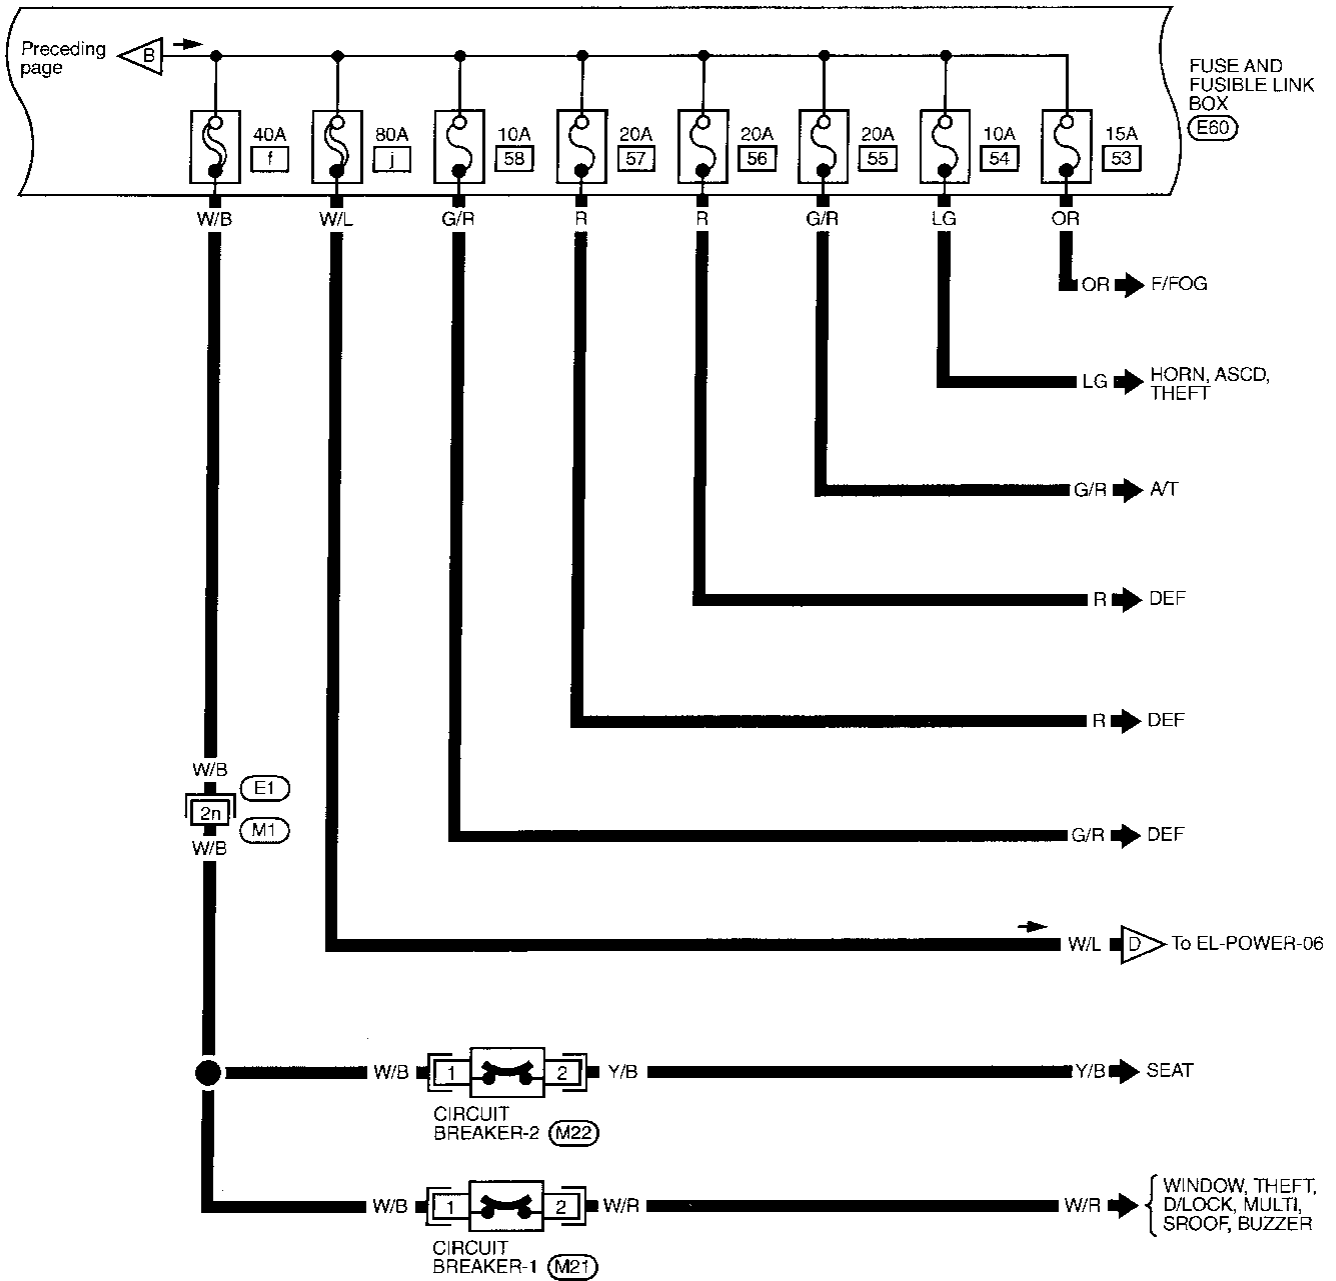

Refer to last page (Foldout page).

(E1) . (M1)

POWER SUPPLY ROUTING

Wiring Diagram — POWER — (Cont'd)

EL-POWER-03

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST



RS

BT

HA

EL



IDX

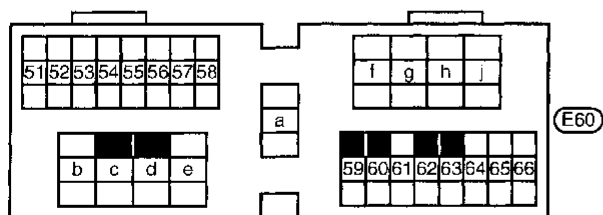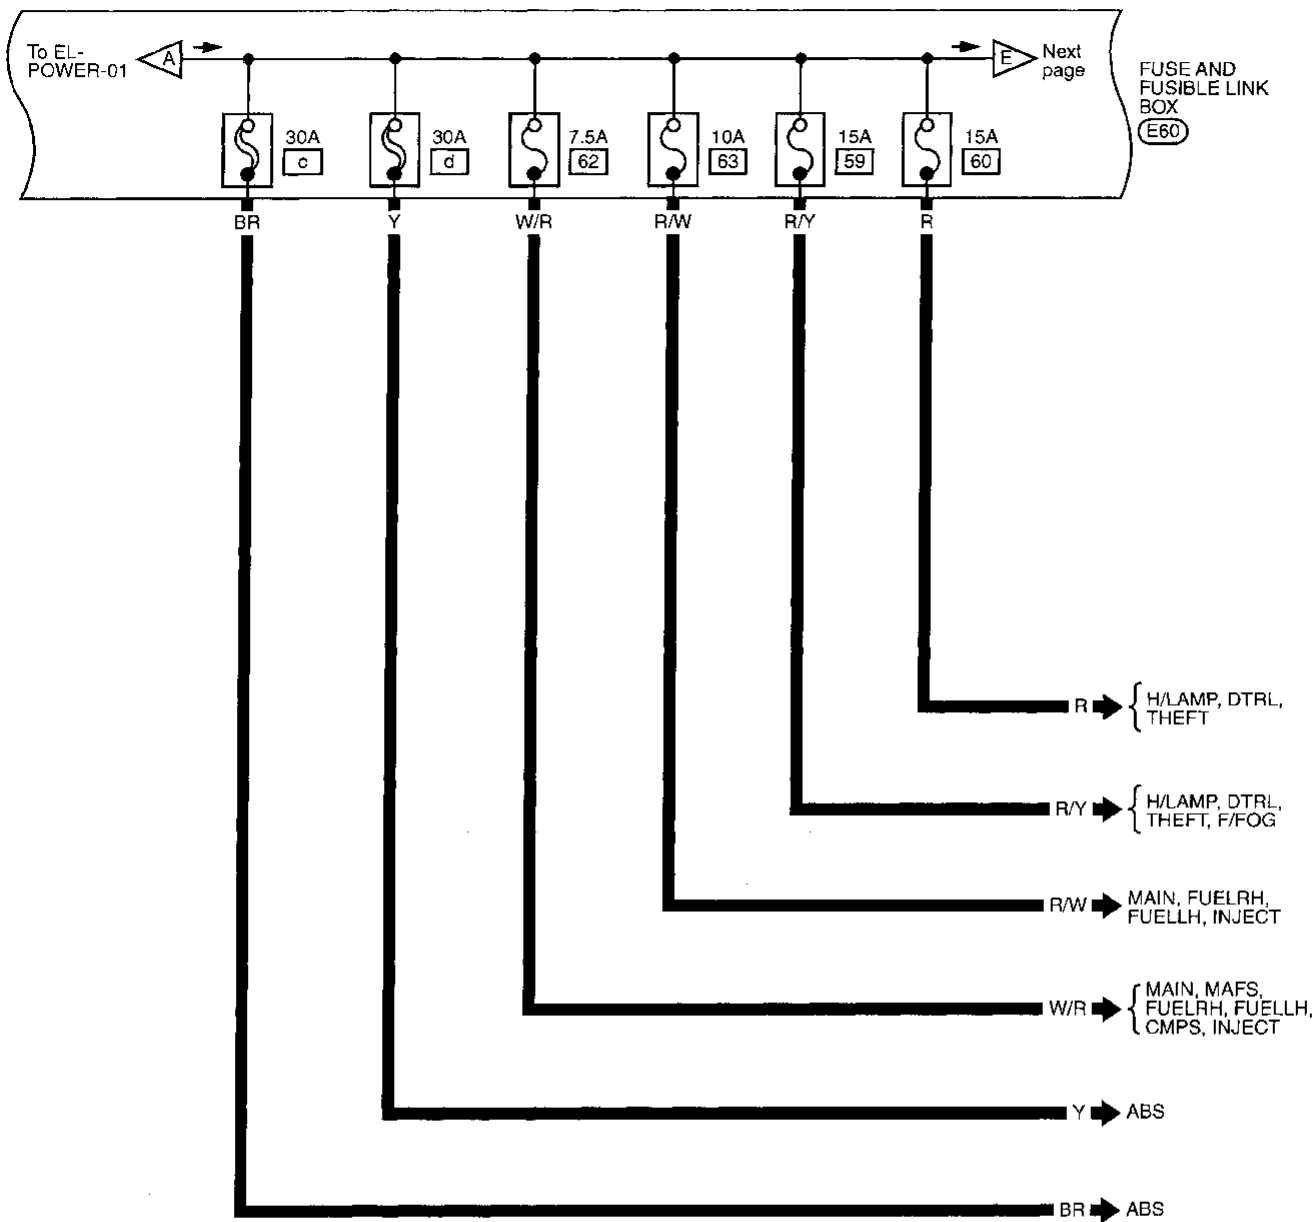

POWER SUPPLY ROUTING

Wiring Diagram — POWER — (Cont'd)


EL-POWER-04

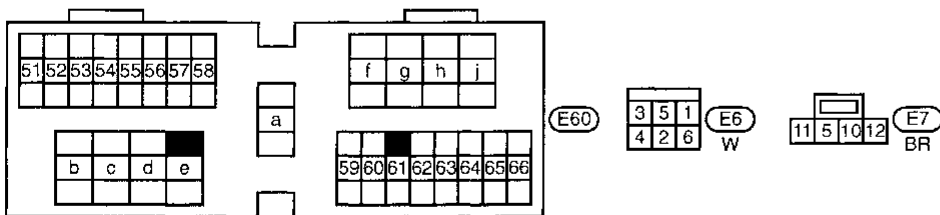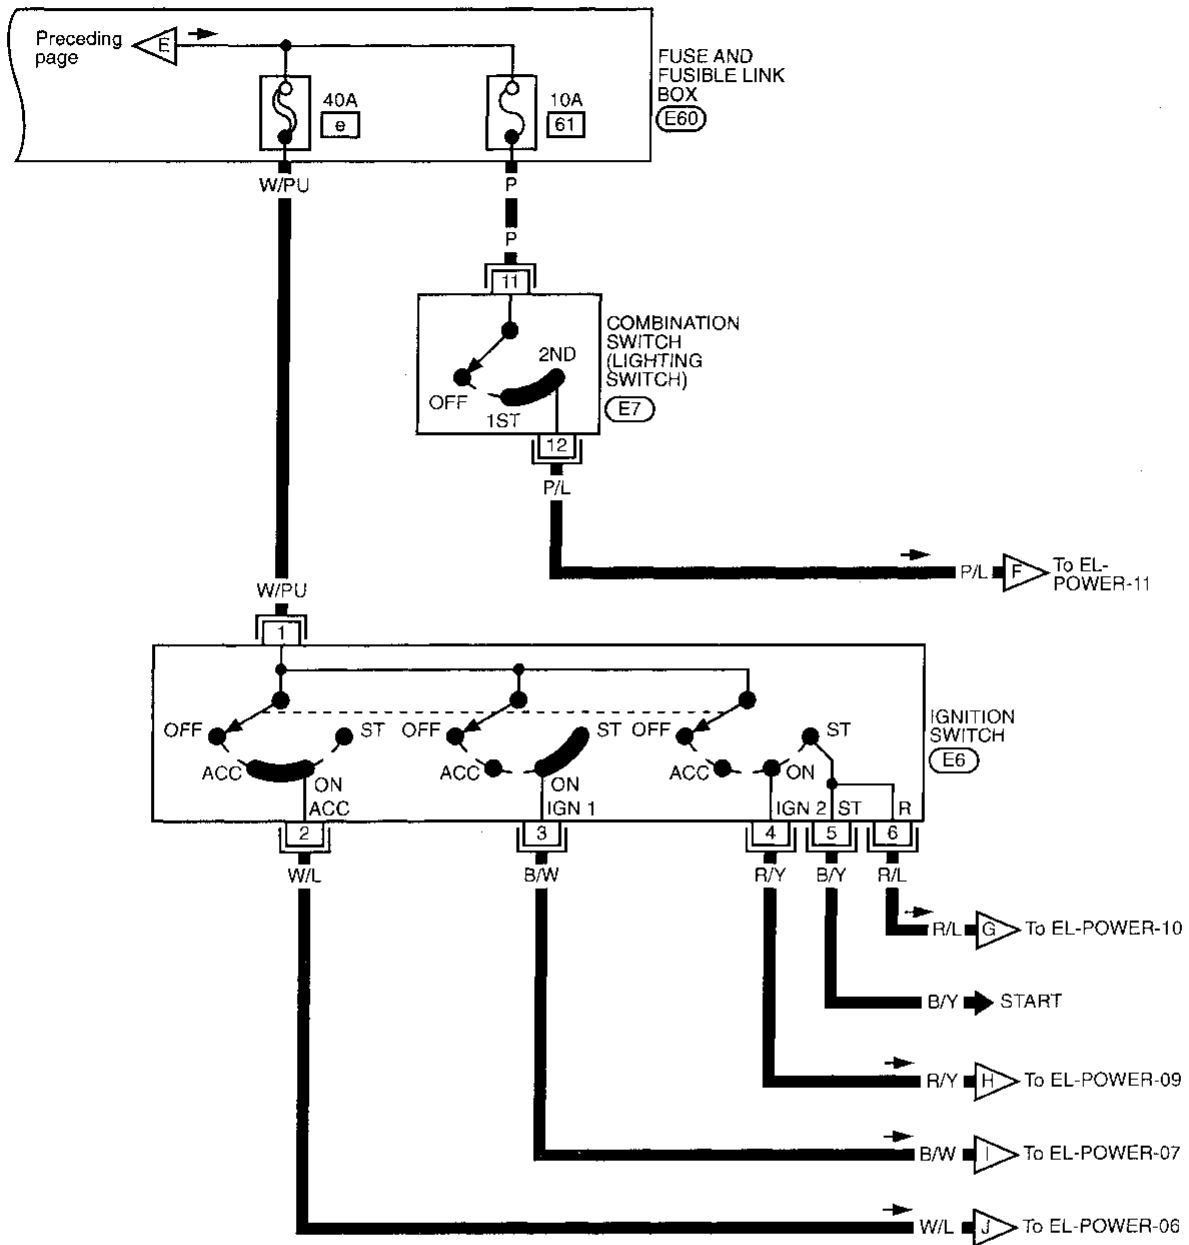

POWER SUPPLY ROUTING

Wiring Diagram — POWER — (Cont'd)

EL-POWER-05

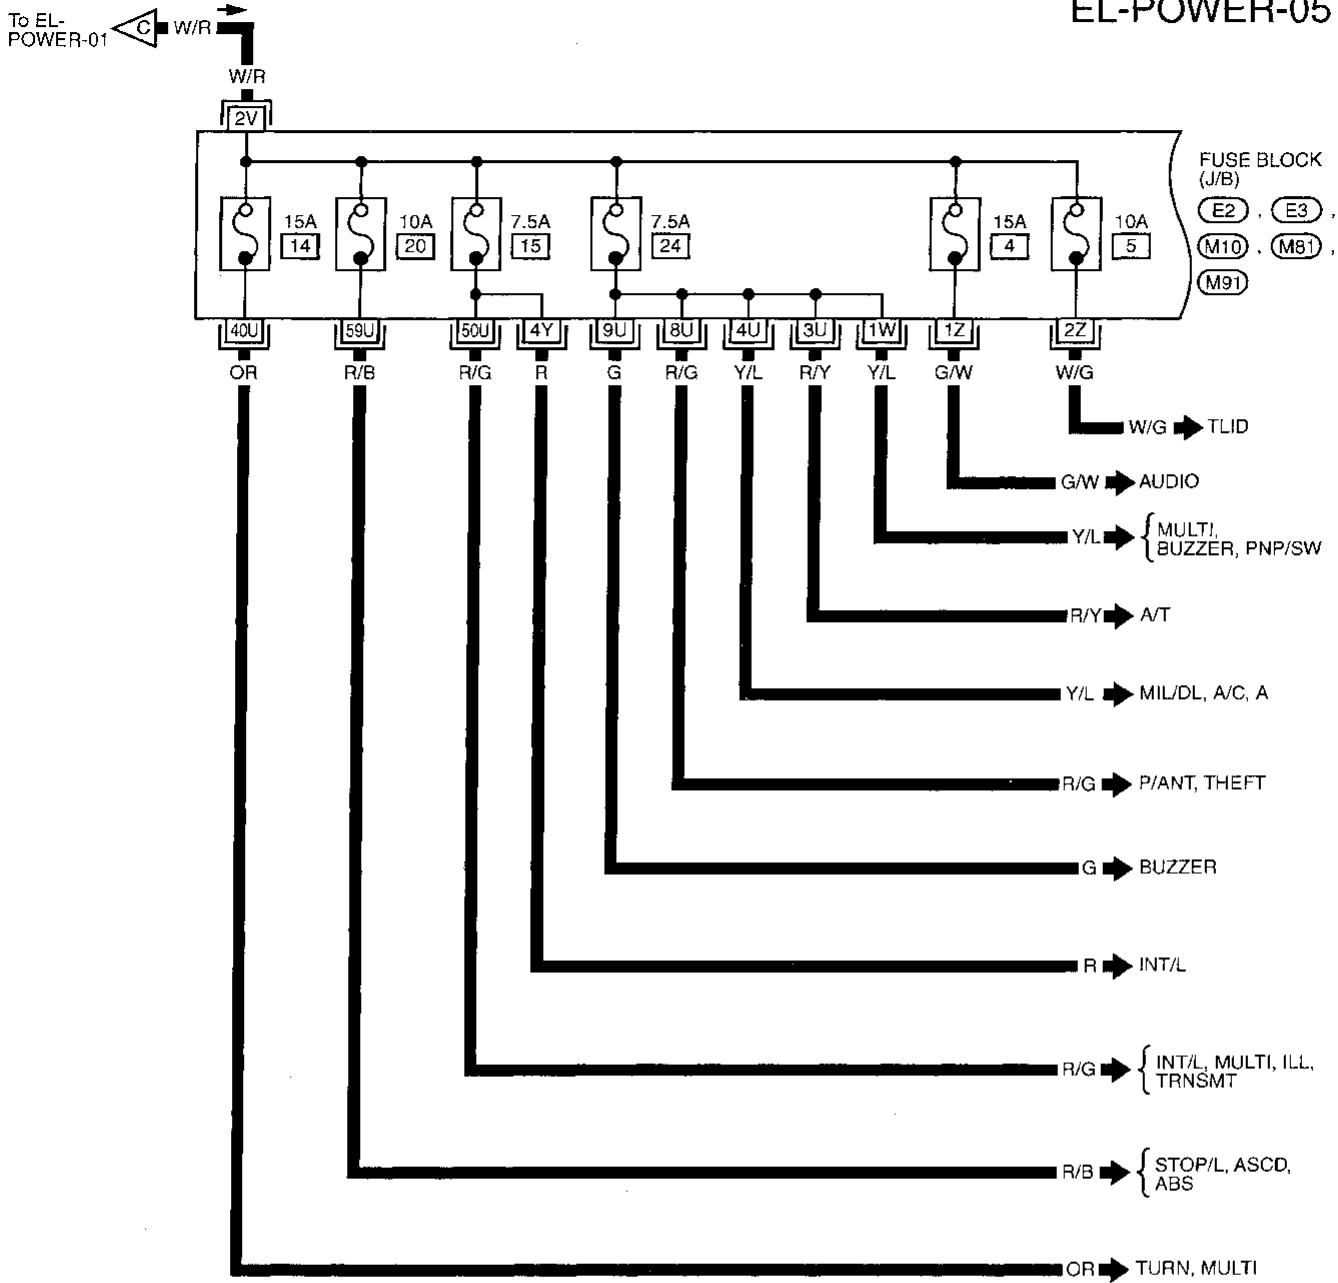

GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX


Refer to last page (Foldout page).

- (E2)
- (E3)
- (M10)
- (M81)
- (M91)

POWER SUPPLY ROUTING

Wiring Diagram — POWER — (Cont'd)

EL-POWER-06

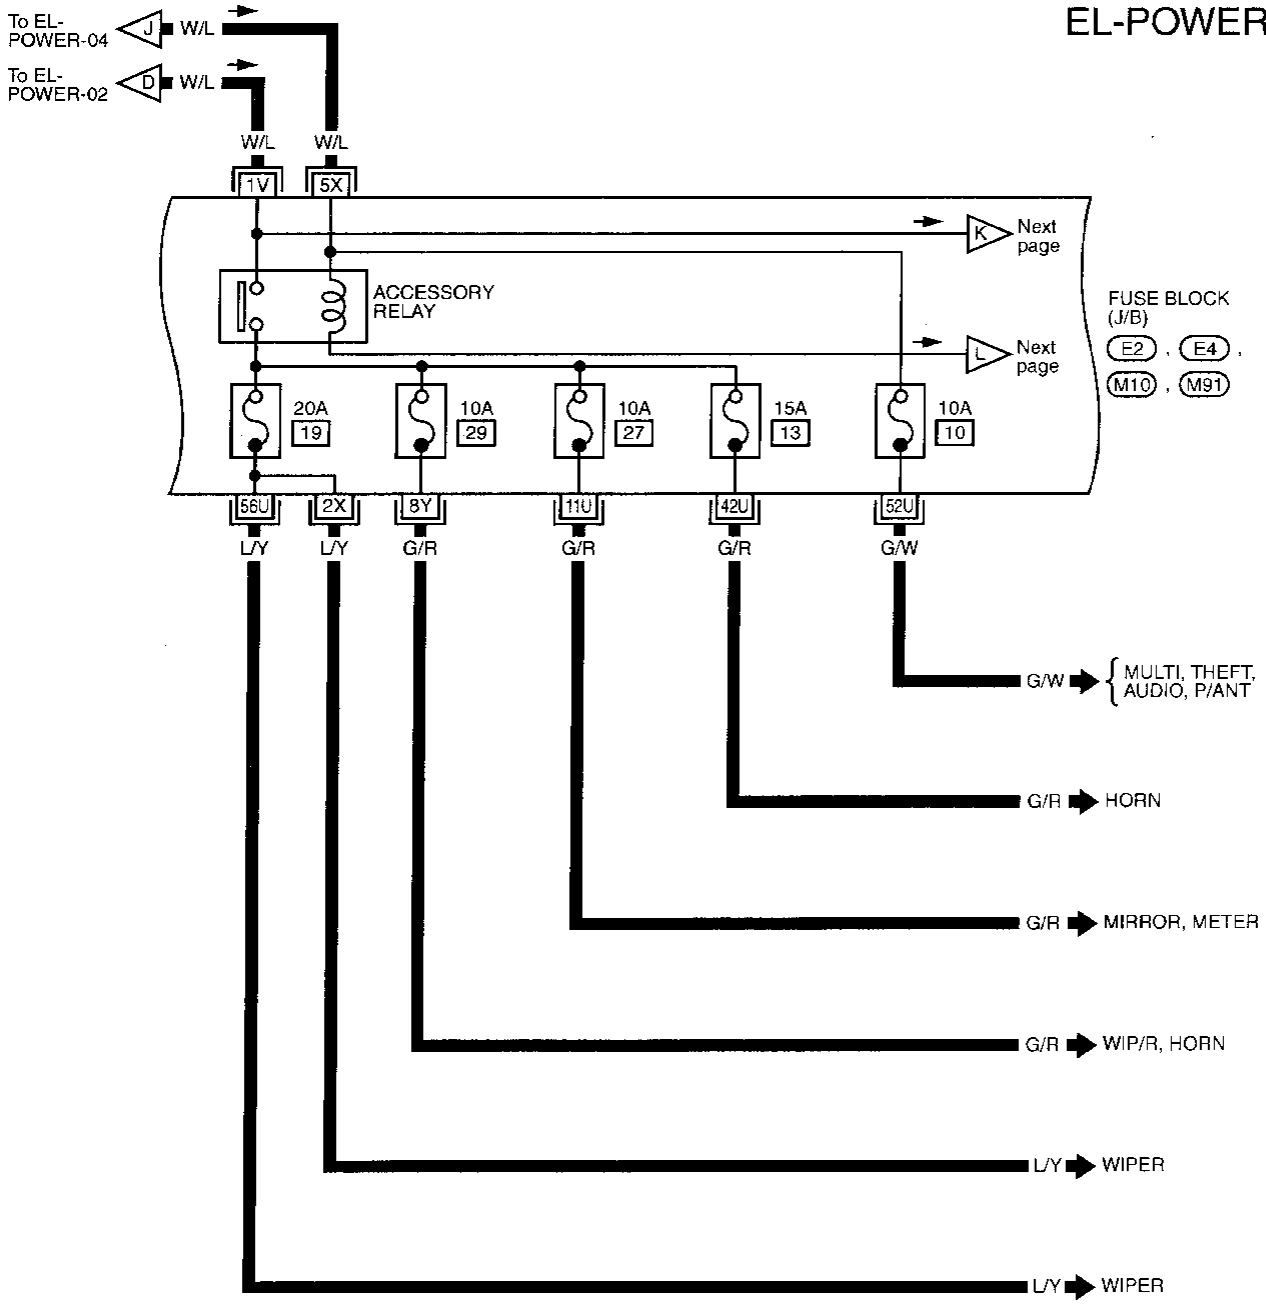


Refer to last page (Foldout page).

- (E2)
- (E4)
- (M10)
- (M91)

POWER SUPPLY ROUTING

Wiring Diagram — POWER — (Cont'd)

EL-POWER-07

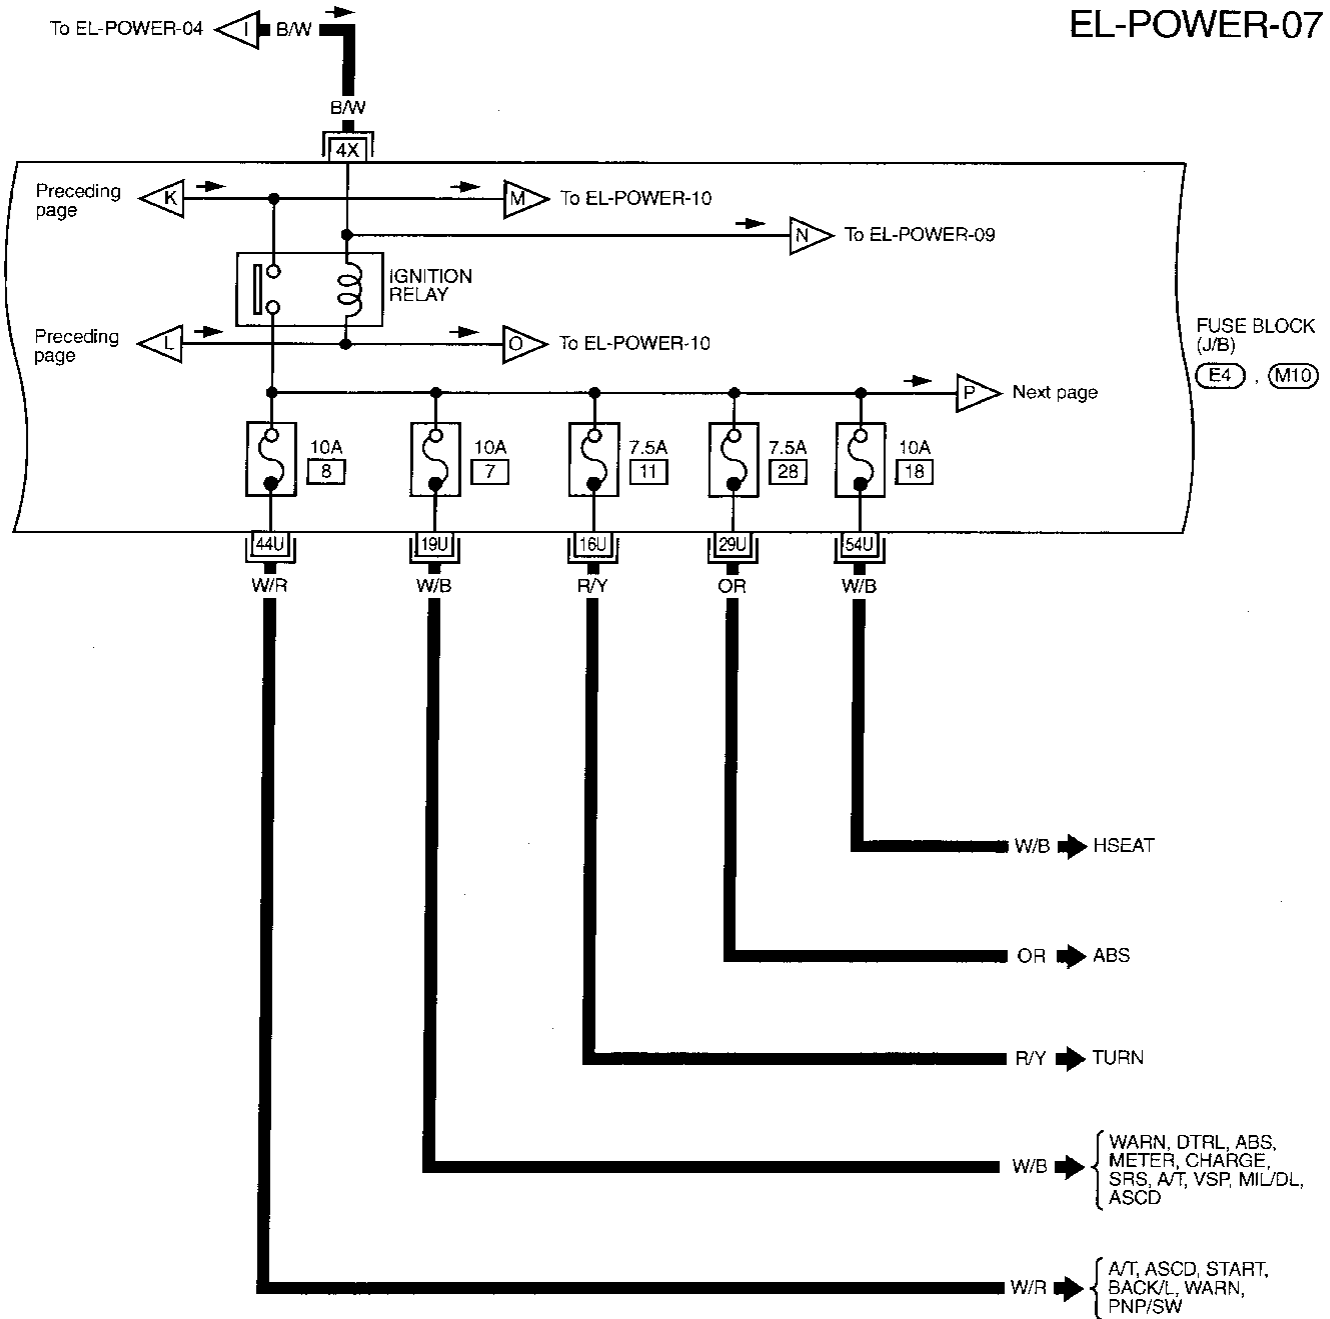

Refer to last page (Foldout page).

(E4)

(M10)

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA


EL

IDX

POWER SUPPLY ROUTING

Wiring Diagram — POWER — (Cont'd)

EL-POWER-08

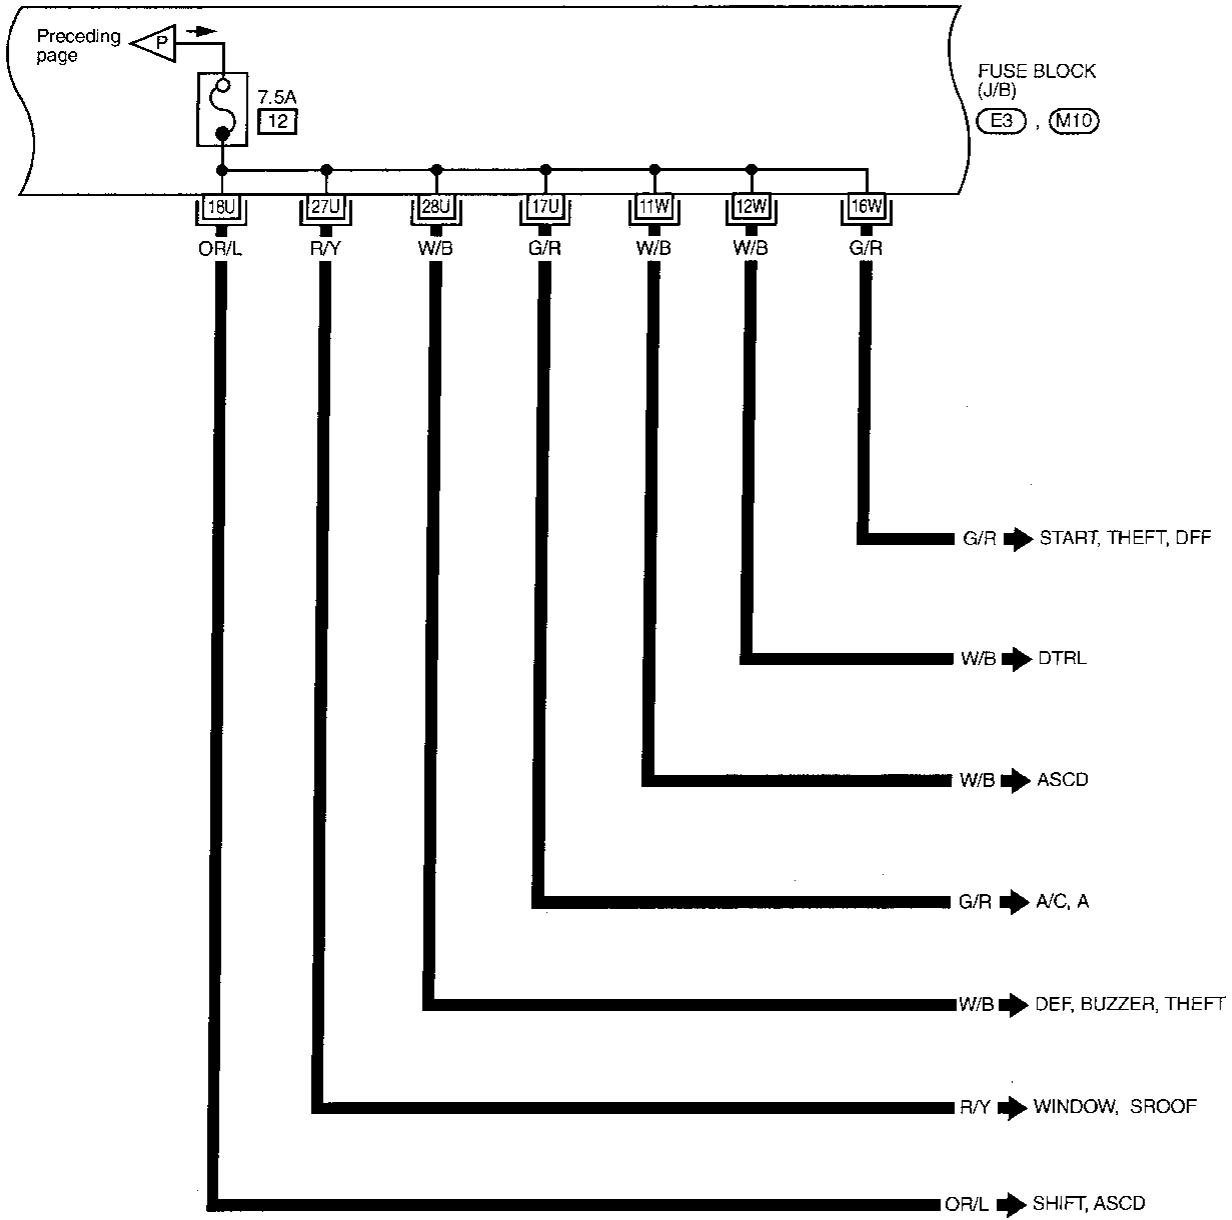

Refer to last page (Foldout page).


E3

M10

POWER SUPPLY ROUTING

Wiring Diagram — POWER — (Cont'd)

EL-POWER-09

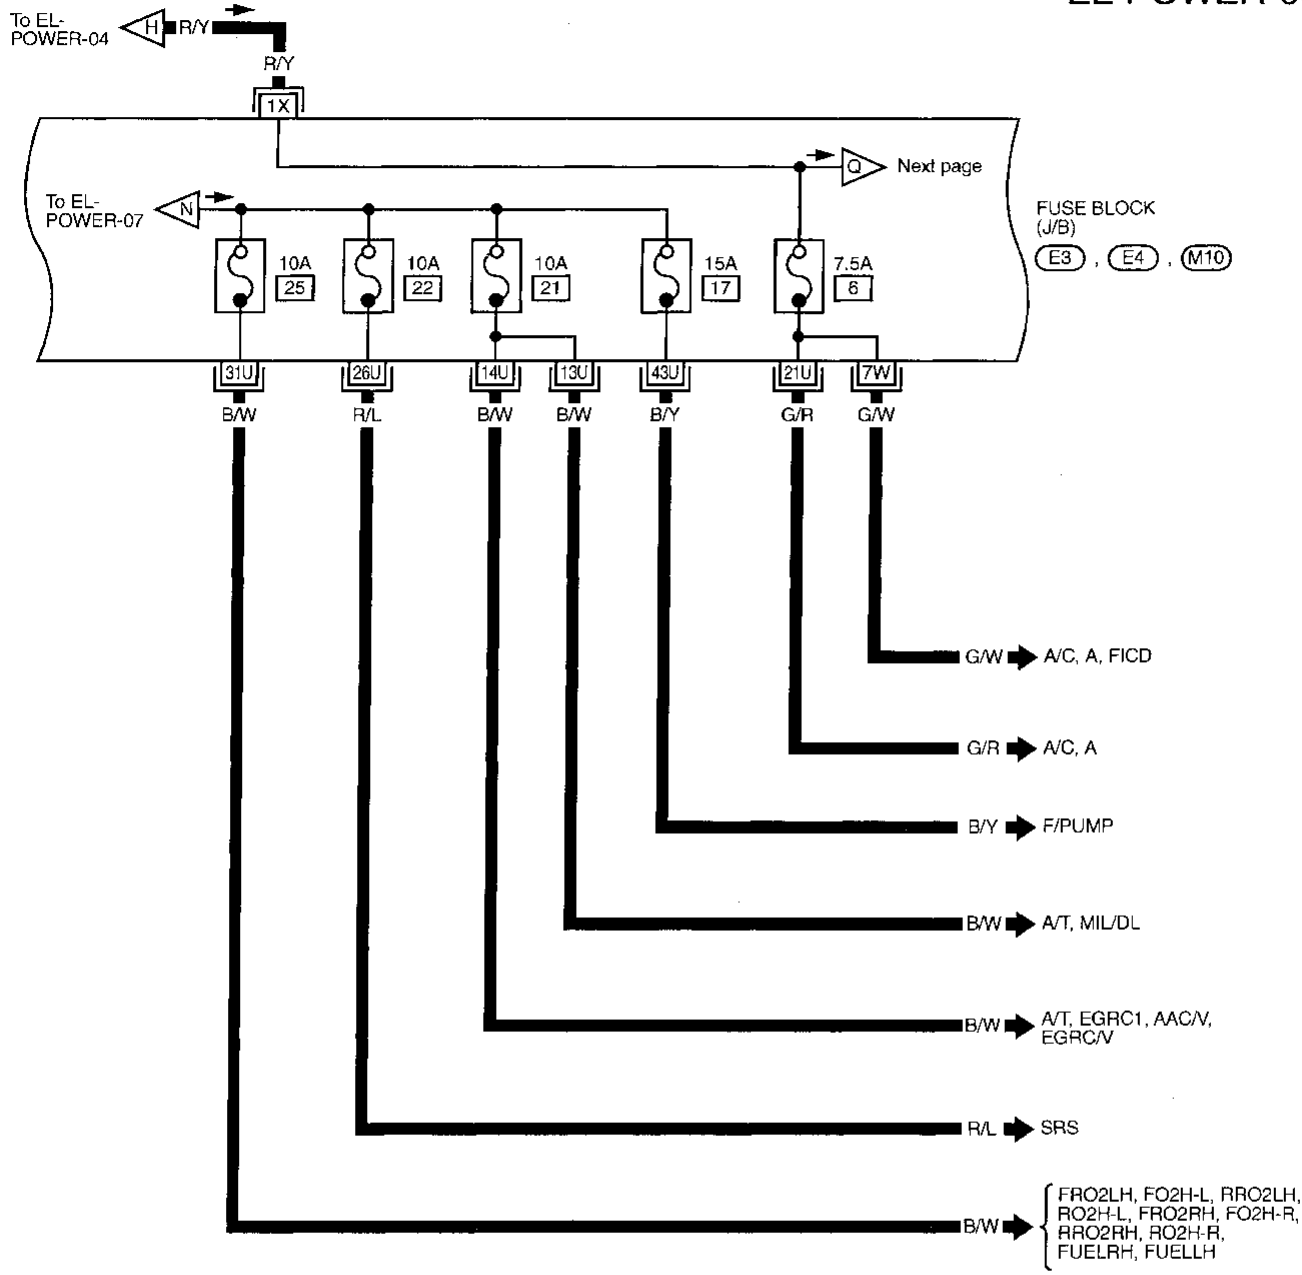

GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT


Refer to last page (Foldout page).

- (E3)
- (E4)
- (M10)

MA
EL
IDX

POWER SUPPLY ROUTING

Wiring Diagram — POWER — (Cont'd)

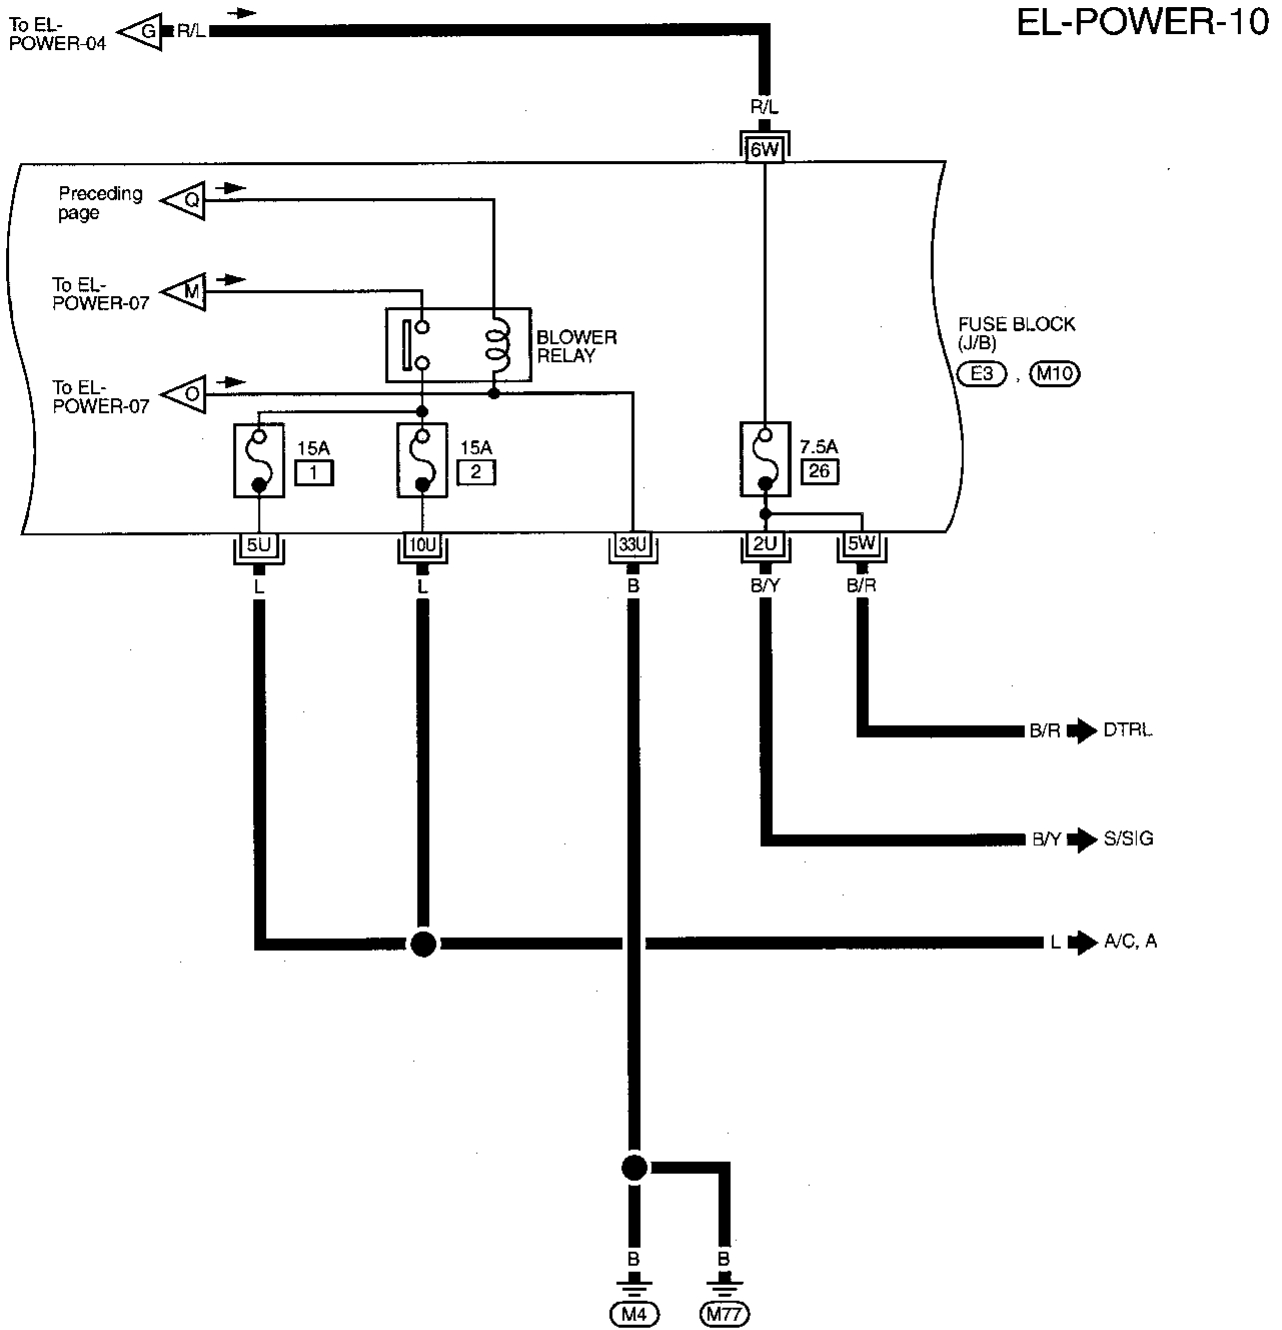


Refer to last page (Foldout page).

(E3)
(M10)

POWER SUPPLY ROUTING

Wiring Diagram — POWER — (Cont'd)

EL-POWER-11

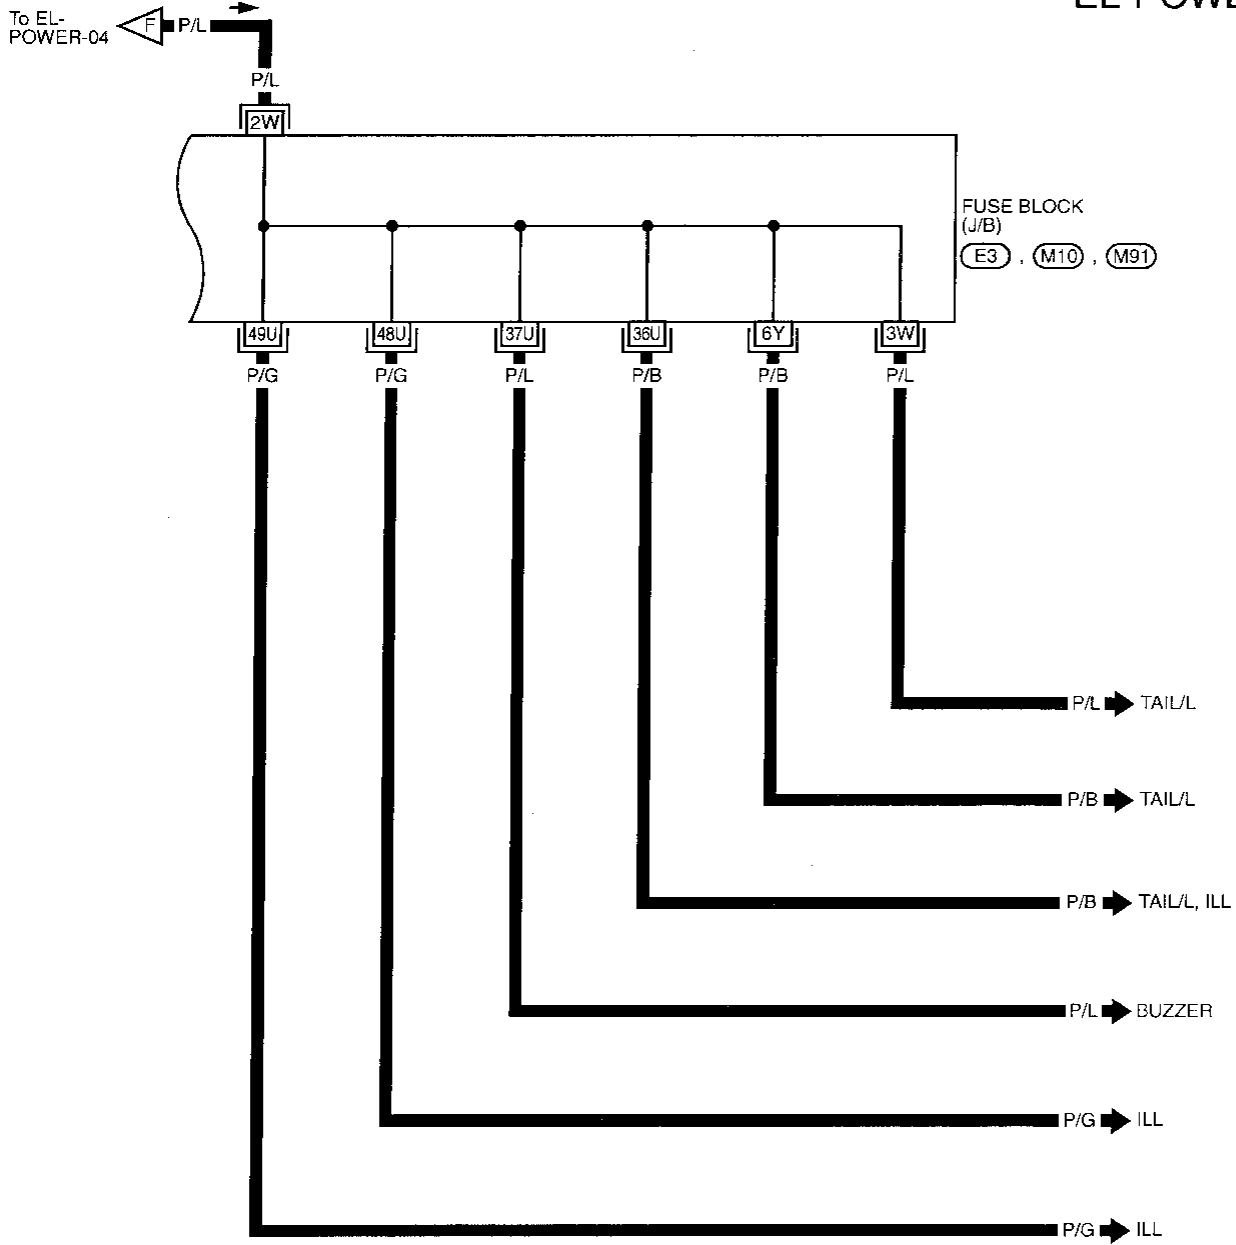

Refer to last page (Foldout page).

E3

M10

M91

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS


BT

HA

EL


IDX

POWER SUPPLY ROUTING

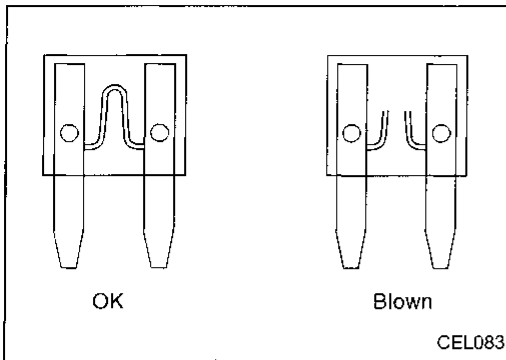

Fuse

- If fuse is blown, be sure to eliminate cause of problem before installing new fuse.
- Use fuse of specified rating. Never use fuse of more than specified rating.
- Do not partially install fuse; always insert it into fuse holder properly.
- Remove fuse for "ELECTRICAL PARTS (BAT)" if vehicle is not used for a long period of time.

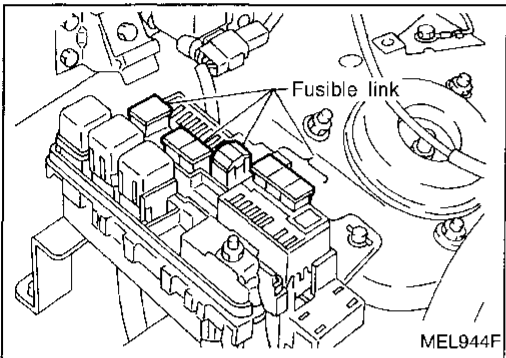


Fusible Link

A melted fusible link can be detected either by visual inspection or by feeling with finger tip. If its condition is questionable, use circuit tester or test lamp.

CAUTION:

- If fusible link should melt, it is possible that critical circuit (power supply or large current carrying circuit) is shorted. In such a case, carefully check and eliminate cause of problem.
- Never wrap outside of fusible link with vinyl tape. Important: Never let fusible link touch any other wiring harness, vinyl or rubber parts.

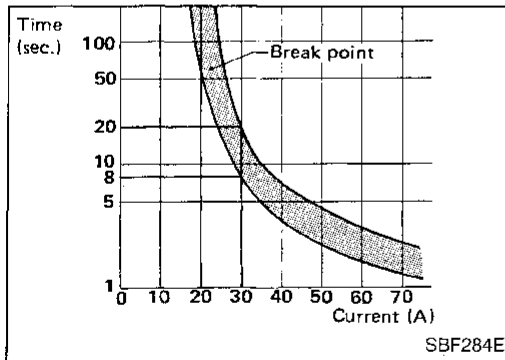

Circuit Breaker Inspection

For example, when current is 30A, the circuit is broken within 8 to 20 seconds.

Circuit breakers are used in the following systems.

- Warning buzzer
- Power window & power door lock
- Power sunroof
- Power seat
- Multi-remote control system
- Theft warning system

GROUND DISTRIBUTION

EARTH	CONNECT TO	CONN. NO.	CELL CODE		
M4/M66	A/C MODE SWITCH	M39	HA-A/C, A	GI	
	ASCD CONTROL UNIT	M3	EL-ASCD		
	ASCD MAIN SWITCH	M18	EL-ASCD	MA	
	CLUTCH INTERLOCK SWITCH	M28	EL-START		
	COMBINATION FLASHER UNIT	M15	EL-TURN	EM	
	DOOR MIRROR REMOTE CONTROL SWITCH	M17	EL-MIRROR		
	FAN SWITCH	M43	EC-AC/SIG		
	POWER ANTENNA	M69	EL-P/ANT	LC	
	POWER WINDOW RELAY	M23	EL-SROOF EL-WINDOW		
	REAR WIPER SWITCH	M50	EL-WIP/R		
	REAR WINDOW DEFOGGER SWITCH	M36	EL-DEF	EC	
	RECIRCULATION SWITCH	M42	HA-A/C, A		
	DOOR LOCK AND UNLOCK SWITCH RH	D38	EL-D/LOCK	FE	
	DOOR MIRROR DEFOGGER LH	D1	EL-DEF		
	DOOR MIRROR DEFOGGER RH	D31	EL-DEF		
	FRONT DOOR KEY CYLINDER SWITCH RH	D39	EL-THEFT	AT	
	AIR BAG DIAGNOSIS SENSOR UNIT	Z4	RS-SRS		
	M4/M77	ABS ACTUATOR	M74	BR-ABS	TF
		A/C AUTO AMP.	M40	HA-A/C, A	
COMBINATION METER (AIR BAG)		M26	RS-SRS EL-WARN		
COMBINATION METER (CRUISE INDICATOR)		M26	EL-WARN EL-ASCD	PD	
COMBINATION METER (FUEL GAUGE)		M25	EL-METER		
COMBINATION METER (4WD INDICATOR)		M26	EL-WARN	FA	
COMBINATION METER (HIGH BEAM INDICATOR)		M26	EL-H/LAMP EL-DTRL		
COMBINATION METER (SPEEDOMETER)		M25	EC-VSS AT-A/T EL-METER EL-ASCD	RA	
COMBINATION METER (TACHOMETER)		M26	AT-A/T EL-METER		
COMBINATION METER (TURN SIGNAL)		M26	EL-TURN	BR	
COMBINATION METER (WATER TEMPERATURE GAUGE)		M25	EL-METER	ST	
CIGARETTE LIGHTER SOCKET		M56	EL-HORN		
DATA LINK CONNECTOR FOR CONSULT		M11	EC-MIL/DL AT-A/T	RS	
DATA LINK CONNECTOR FOR GST		M9	EC-MIL/DL		
FAN CONTROL AMP.		M60	HA-A/C, A	BT	
FAN SWITCH		M43	HA-A/C, A		
FRONT WIPER AMP.		M79	EL-WIPER	HA	
FRONT WIPER MOTOR		M78	EL-WIPER		
FUSE BLOCK (BLOWER MOTOR RELAY)		M10	EL-POWER	EL	
HEATED SEAT SWITCH LH		M52	EL-HSEAT		
HEATED SEAT SWITCH RH		M53	EL-HSEAT	IDX	
ILLUMINATION CONTROL SWITCH		M19	EL-ILL		
SMART ENTRANCE CONTROL UNIT		M16	EL-BUZZER EL-D/LOCK EL-MULTI EL-THEFT		
COMPASS AND THERMOMETER		R4	EL-ILL EL-METER		
INTEGRATED HOMELINK™ TRANSMITTER		R5	EL-TRNSMT		
SPOT LAMP		R6	EL-INT/L		
VANITY MIRROR LH (ILLUMINATION)		R5	EL-ILL		
VANITY MIRROR RH (ILLUMINATION)		R3	EL-ILL		
DOOR MIRROR DEFOGGER LH		D1	EL-DEF		
FRONT DOOR KEY CYLINDER SWITCH LH		D9	EL-THEFT		
FRONT DOOR LOCK ACTUATOR LH		D7	EL-D/LOCK EL-MULTI EL-THEFT		

GROUND DISTRIBUTION

EARTH	CONNECT TO	CONN. NO.	CELL CODE
M4/M77	FRONT DOOR LOCK ACTUATOR RH	D37	EL-D/LOCK EL-MULTI EL-THEFT
	POWER WINDOW MAIN SWITCH	D6	EL-WINDOW EL-D/LOCK
	ABS CONTROL UNIT	M54 M95	BR-ABS
	SHIELD WIRE (FRONT WHEEL SENSOR LH)	E14	BR-ABS
	SHIELD WIRE (FRONT WHEEL SENSOR RH)	E51	BR-ABS
	SHIELD WIRE (REAR WHEEL SENSOR LH)	B69	BR-ABS
	SHIELD WIRE (REAR WHEEL SENSOR RH)	B8	BR-ABS
E13/E41	AMBIENT AIR TEMPERATURE SWITCH	E34	EC-FICD HA-A/C, A
	ASCD HOLD RELAY	E22	EL-ASCD
	ATP RELAY	E86	EL-WARN
	BRAKE FLUID LEVEL SWITCH	E28	EL-WARN
	DAYTIME LIGHT CONTROL UNIT	E45	EL-DTRL
	FRONT FOG LAMP LH	E61	EL-F/FOG
	FRONT FOG LAMP RH	E62	EL-F/FOG
	FRONT FOG LAMP SWITCH	E63	EL-F/FOG
	FRONT TURN SIGNAL LAMP LH	E30	EL-TURN
	FRONT TURN SIGNAL LAMP RH	E39	EL-TURN
	FRONT WASHER MOTOR	E44	EL-WIPER
	FRONT WIPER SWITCH	E9	EL-WIPER
	HEADLAMP LH	E29	EL-H/LAMP EL-THEFT
	HEADLAMP RH	E38	EL-H/LAMP EL-DTRL EL-THEFT
	HOOD SWITCH	E31	EL-THEFT
	INHIBITOR RELAY	E56	EL-PNP/SW EL-START
	PARKING LAMP LH	E12	EL-TAIL/L
	PARKING LAMP RH	E40	EL-TAIL/L
	PARK/NEUTRAL POSITION SWITCH	E24	EL-ASCD
	POWER SOCKET RELAY	E21	EL-HORN
THEFT WARNING HORN RELAY	E23	EL-THEFT	
WASHER LEVEL SWITCH	E24	EL-WARN	
E101	ALTERNATOR	E105 E106 E107	EL-CHARGE
	POWER STEERING OIL PRESSURE SWITCH	E110	EC-PST/SW
F20/F25	A/T CONTROL UNIT	M13	AT-A/T
	DATA LINK CONNECTOR FOR GST	M9	EC-MIL/DL
	CONDENSER	F19	EC-IGN/SG
	CRANKSHAFT POSITION SENSOR (OBD)	F110	EC-CKPS
	DISTRIBUTOR (CAMSHAFT POSITION SENSOR)	F7	EC-CMPS
	DISTRIBUTOR (IGNITION)	F7	EC-IGN/SG
	ECM (ECCS CONTROL MODULE)	F24	EC-MAIN
	EVAP CONTROL SYSTEM PRESSURE SENSOR	B102	EC-PRE/SE
	REAR HEATED OXYGEN SENSOR LH	F3	EC-RRO2LH EC-RO2H-L
	REAR HEATED OXYGEN SENSOR RH	F1	EC-RRO2RH EC-RO2H-R
	SHIELD WIRE (ABSOLUTE PRESSURE SENSOR)	E88	EC-AP/SEN
	SHIELD WIRE (CAMSHAFT POSITION SENSOR)	F7	EC-CMPS
	SHIELD WIRE [CRANKSHAFT POSITION SENSOR (OBD)]	F110	EC-CKPS
	SHIELD WIRE (EVAP CONTROL SYSTEM PRESSURE SENSOR)	B102	EC-PRE/SE
	SHIELD WIRE (FRONT HEATED OXYGEN SENSOR LH)	F4	EC-FRO2LH EC-FO2H-L EC-FUELLH
	SHIELD WIRE (FRONT HEATED OXYGEN SENSOR RH)	F2	EC-FRO2RH EC-FO2H-R EC-FUELRH
SHIELD WIRE (KNOCK SENSOR)	F102	EC-KS	




GROUND DISTRIBUTION

EARTH	CONNECT TO	CONN. NO.	CELL CODE	
F20/F25	SHIELD WIRE (MASS AIR FLOW SENSOR)	F10	EC-MAFS	GI
	SHIELD WIRE (REAR HEATED OXYGEN SENSOR LH)	F3	EC-RRO2LH EC-RO2H-L	MA
	SHIELD WIRE (REAR HEATED OXYGEN SENSOR RH)	F1	EC-RRO2RH EC-RO2H-R	EM
	SHIELD WIRE (THROTTLE POSITION SENSOR)	F8	EC-TPS AT-A/T	LC
B11/B22/D210	FUEL PUMP	B13	EC-F/PUMP	EC
	FUEL TANK GAUGE UNIT	B12	EC-TFTS EL-METER EL-WARN	FE
	FRONT DOOR SWITCH LH	B9	RS-SRS EL-BUZZER EL-THEFT	AT
	HEATED SEAT LH	B5	EL-HSEAT	TF
	POWER SEAT LH	B7	EL-SEAT	PD
	POWER SOCKET	B41	EL-HORN	FA
	REAR COMBINATION LAMP LH (BACK-UP LAMP LH)	B26	EL-BACK/L	RA
	REAR COMBINATION LAMP LH (REAR TURN SIGNAL LAMP LH)	B26	EL-TURN	BR
	REAR COMBINATION LAMP LH (STOP LAMP LH)	B26	EL-STOP/L	ST
	REAR COMBINATION LAMP LH (TAIL LAMP LH)	B26	EL-TAIL/L	RS
	REAR WIPER AMP.	B14	EL-WIP/R	BT
	SEAT BELT BUCKLE SWITCH	B6	EL-WARN EL-BUZZER	HA
	SPEAKER AMP.	B20	EL-AUDIO	EL
	BACK DOOR KEY CYLINDER SWITCH	D201	EL-THEFT	
	BACK DOOR SWITCH	D208	EL-INT/L EL-MULTI EL-THEFT	
	GLASS HATCH SWITCH	D209	EL-WIP/R	
	HIGH-MOUNTED STOP LAMP	D302	EL-STOP/L	
	LICENSE PLATE LAMP LH	D202	EL-TAIL/L	
	LICENSE PLATE LAMP RH	D211	EL-TAIL/L	
	LUGGAGE ROOM LAMP	D103	EL-INT/L	
REAR DOOR LOCK ACTUATOR LH	D54	EL-D/LOCK EL-MULTI EL-THEFT		
REAR WIPER MOTOR	D212	EL-WIP/R		
B55/B75	A/T DEVICE (PARK POSITION SWITCH and OVERDRIVE CONTROL SWITCH)	B59	AT-SHIFT AT-A/T	DOX
	ASHTRAY (ILLUMINATION)	B60 B76	EL-ILL	
	HEATED SEAT RH	B56	EL-HSEAT	
	NEUTRAL POSITION SWITCH	B203	EC-PNP/SW	
	REAR COMBINATION LAMP RH (BACK-UP LAMP RH)	B74	EL-BACK/L	
	REAR COMBINATION LAMP RH (REAR TURN SIGNAL LAMP RH)	B74	EL-TURN	
	REAR COMBINATION LAMP RH (STOP LAMP RH)	B74	EL-STOP/L	
	REAR COMBINATION LAMP RH (TAIL LAMP RH)	B74	EL-TAIL/L	
	POWER SEAT RH	B57	EL-SEAT	
	TIRE CARRIER SWITCH	B301	EL-WARN	
REAR DOOR LOCK ACTUATOR RH	D74	EL-D/LOCK EL-MULTI EL-THEFT		

BATTERY

CAUTION:

- If it becomes necessary to start the engine with a booster battery and jumper cables, use a 12-volt booster battery.
- After connecting battery cables, ensure that they are tightly clamped to battery terminals for good contact.
- Never add distilled water through the hole used to check specific gravity.

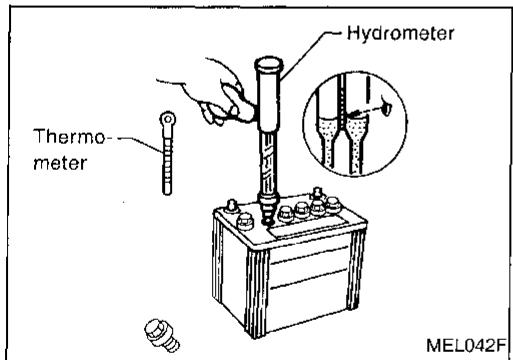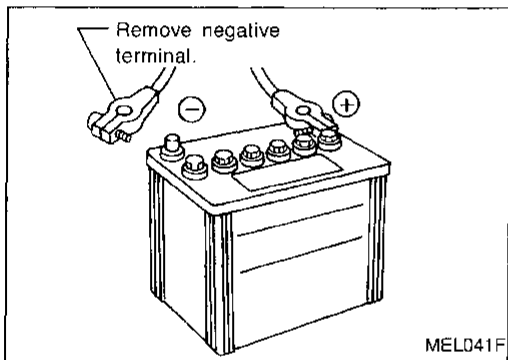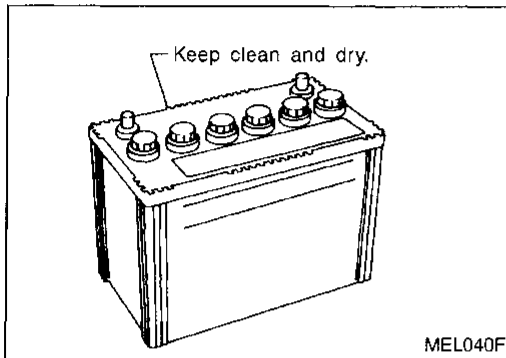

How to Handle Battery

METHODS OF PREVENTING OVER-DISCHARGE

The following precautions must be taken to prevent over-discharging a battery.

- The battery surface (particularly its top) should always be kept clean and dry.
- The terminal connections should be clean and tight.
- At every routine maintenance, check the electrolyte level. This also applies to batteries designated as "low maintenance" and "maintenance-free".
- When the vehicle is not going to be used over a long period of time, disconnect the negative battery terminal. (If the vehicle has an extended storage switch, turn it off.)

- Check the charge condition of the battery. Periodically check the specific gravity of the electrolyte. Keep a close check on charge condition to prevent over-discharge.

CHECKING ELECTROLYTE LEVEL



WARNING:

Do not allow battery fluid to come in contact with skin, eyes, fabrics, or painted surfaces. After touching a battery, do not touch or rub your eyes until you have thoroughly washed your hands. If acid contacts eyes, skin or clothing, immediately flush with water for 15 minutes and seek medical attention.

BATTERY

How to Handle Battery (Cont'd)

- Remove the cell plug using a suitable tool.
- Add distilled water up to the MAX level.

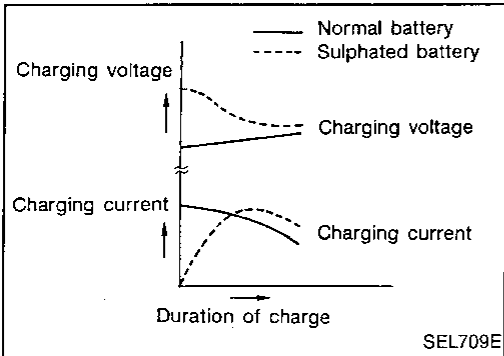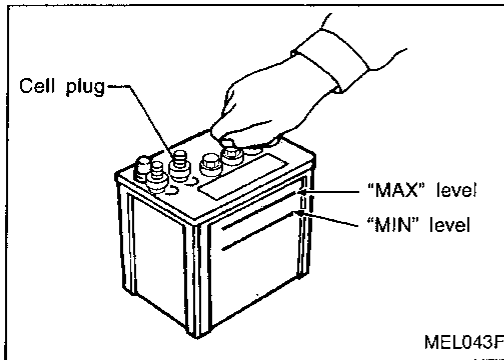


SULPHATION

A battery will be completely discharged if it is left unattended for a long time and the specific gravity will become less than 1.100. This may result in sulphation on the cell plates.

To determine if a battery has been "sulphated", note its voltage and current when charging it. As shown in the figure, less current and higher voltage are observed in the initial stage of charging sulphated batteries.

A sulphated battery may sometimes be brought back into service by means of a long, slow charge, 12 hours or more, followed by a battery capacity test.

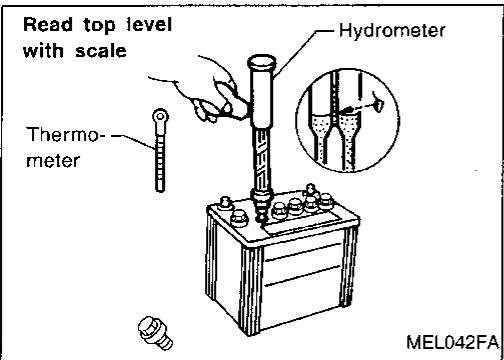

SPECIFIC GRAVITY CHECK

1. Read hydrometer and thermometer indications at eye level.

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

BATTERY

How to Handle Battery (Cont'd)

- Use the chart below to correct your hydrometer reading according to electrolyte temperature.

Hydrometer temperature correction

Battery electrolyte temperature °C (°F)	Add to specific gravity reading
71 (160)	0.032
66 (150)	0.028
60 (140)	0.024
54 (129)	0.020
49 (120)	0.016
43 (110)	0.012
38 (100)	0.008
32 (90)	0.004
27 (80)	0
21 (70)	-0.004
16 (60)	-0.008
10 (50)	-0.012
4 (39)	-0.016
-1 (30)	-0.020
-7 (20)	-0.024
-12 (10)	-0.028
-18 (0)	-0.032

Corrected specific gravity	Approximate charge condition
1.260 - 1.280	Fully charged
1.230 - 1.250	3/4 charged
1.200 - 1.220	1/2 charged
1.170 - 1.190	1/4 charged
1.140 - 1.160	Almost discharged
1.110 - 1.130	Completely discharged

CHARGING THE BATTERY

CAUTION:

- Do not "quick charge" a fully discharged battery.
- Keep the battery away from open flame while it is being charged.
- When connecting the charger, connect the leads first, then turn on the charger. Do not turn on the charger first, as this may cause a spark.
- If battery electrolyte temperature rises above 60°C (140°F), stop charging. Always charge battery at a temperature below 60°C (140°F).

Charging rates:

Amps	Time
50	1 hour
25	2 hours
10	5 hours
5	10 hours

BATTERY

How to Handle Battery (Cont'd)

Do not charge at more than 50 ampere rate.

Note: The ammeter reading on your battery charger will automatically decrease as the battery charges. This indicates that the voltage of the battery is increasing normally as the state of charge improves. The charging amps indicated above refer to initial charge rate.

- If, after charging, the specific gravity of any two cells varies more than .050, the battery should be replaced.

Service Data and Specifications (SDS)

Applied area	USA		Canada
	Standard	Option	Standard
Type	55D23R	75D31R	
Capacity	V-AH	12-60	12-70
Cold cranking current (For reference value)	A	356	447

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

STARTING SYSTEM

System Description

Power is supplied at all times

- to ignition switch terminal ①
- through 40A fusible link (letter ⑨, located in the fuse and fusible link box).

With the ignition switch in the ON or START position, power is supplied

- to inhibitor switch terminal ② .
- through 10A fuse [No. ⑧], located in the fuse block (J/B)].

With the ignition switch in the ON or START position, power is supplied

- through 7.5A fuse [No. ⑫], located in the fuse block (J/B)]
- to theft warning relay terminal ① .

If the theft warning system is triggered, terminal ② of the theft warning relay is grounded and power to the inhibitor relay terminal ① is interrupted.

When the theft warning system is not operating, power is supplied with ignition switch in the START position

- through inhibitor switch terminal ① ,
- to theft warning relay terminal ③ ,
- through theft warning relay terminal ④ ,
- to inhibitor relay terminal ① , with the selector lever in the P or N position.

Then inhibitor relay is energized and power is supplied


- through ignition switch terminal ⑤ ,
- to inhibitor relay terminal ③ ,
- through inhibitor relay terminal ⑤ ,
- to terminal ② of the starter motor windings.

The starter motor plunger closes and provides a closed circuit between the battery and starter motor. The starter motor is grounded to the engine block. With power and ground supplied, cranking occurs and the engine starts.

STARTING SYSTEM

Construction

SEC. 233
MOT60181

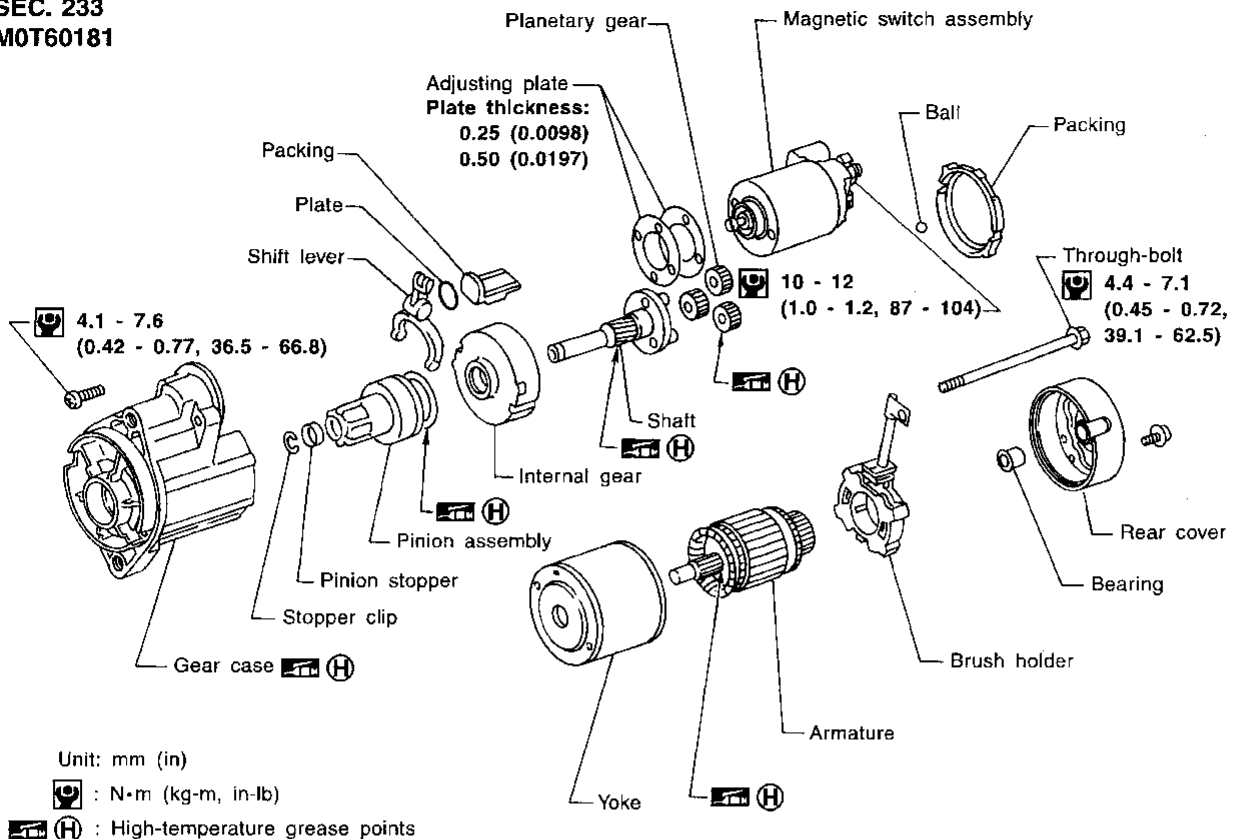


Unit: mm (in)

: N·m (kg-m, in-lb)

: High-temperature grease points

MEL901FA

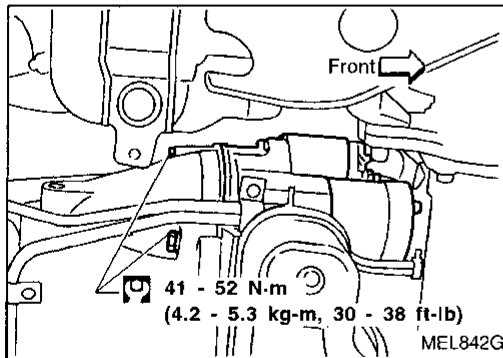

Removal and Installation

STARTING SYSTEM

Pinion/Clutch Check

1. Inspect pinion teeth.
 - Replace pinion if teeth are worn or damaged. (Also check condition of ring gear teeth.)
2. Inspect reduction gear teeth.
 - Replace reduction gear if teeth are worn or damaged. (Also check condition of armature shaft gear teeth.)
3. Check to see if pinion locks in one direction and rotates smoothly in the opposite direction.
 - If it locks or rotates in both directions, or unusual resistance is evident, replace.

GI
MA
EM
LC

Service Data and Specifications (SDS)

STARTER

Type	MOT60181	
	MITSUBISHI make	
	Reduction gear type	
System voltage	V	12
No-load		
Terminal voltage	V	11.0
Current	A	Less than 90
Revolution	rpm	More than 2,500
Minimum diameter of commutator	mm (in)	28.8 (1.134)
Minimum length of brush	mm (in)	7.0 (0.276)
Brush spring tension	N (kg, lb)	11.778 - 23.537 (1.201 - 2.400, 2.648 - 5.292)
Clearance between pinion front edge and pinion stopper	mm (in)	—

EC
FE
AT
TF
PD
FA
RA

BR
ST
RS
BT
HA

EL

DX

System Description

The alternator provides DC voltage to operate the vehicle's electrical system and to keep the battery charged. The voltage output is controlled by the IC regulator.

Power is supplied at all times to alternator terminal ⑤ through:

- 100A fusible link (letter **a**, located in the fuse and fusible link box), and
- 7.5A fuse (No. **65**, located in the fuse and fusible link box).

Terminal ⑥ supplies power to charge the battery and operate the vehicle's electrical system. Output voltage is controlled by the IC regulator at terminal ⑤ detecting the input voltage. The charging circuit is protected by the 100A fusible link.

Terminal ⑦ of the alternator supplies ground through body ground (E101).

With the ignition switch in the ON or START position, power is supplied


- through 10A fuse [No. **7**, located in the fuse block (J/B)]
- to combination meter terminal ⑬ for the charge warning lamp.

Ground is supplied to terminal ⑭ of the combination meter through terminal ① of the alternator. With power and ground supplied, the charge warning lamp will illuminate. When the alternator is providing sufficient voltage with the engine running, the ground is opened and the charge warning lamp will go off.

If the charge warning lamp illuminates with the engine running, a fault is indicated.

CHARGING SYSTEM


Wiring Diagram — CHARGE —

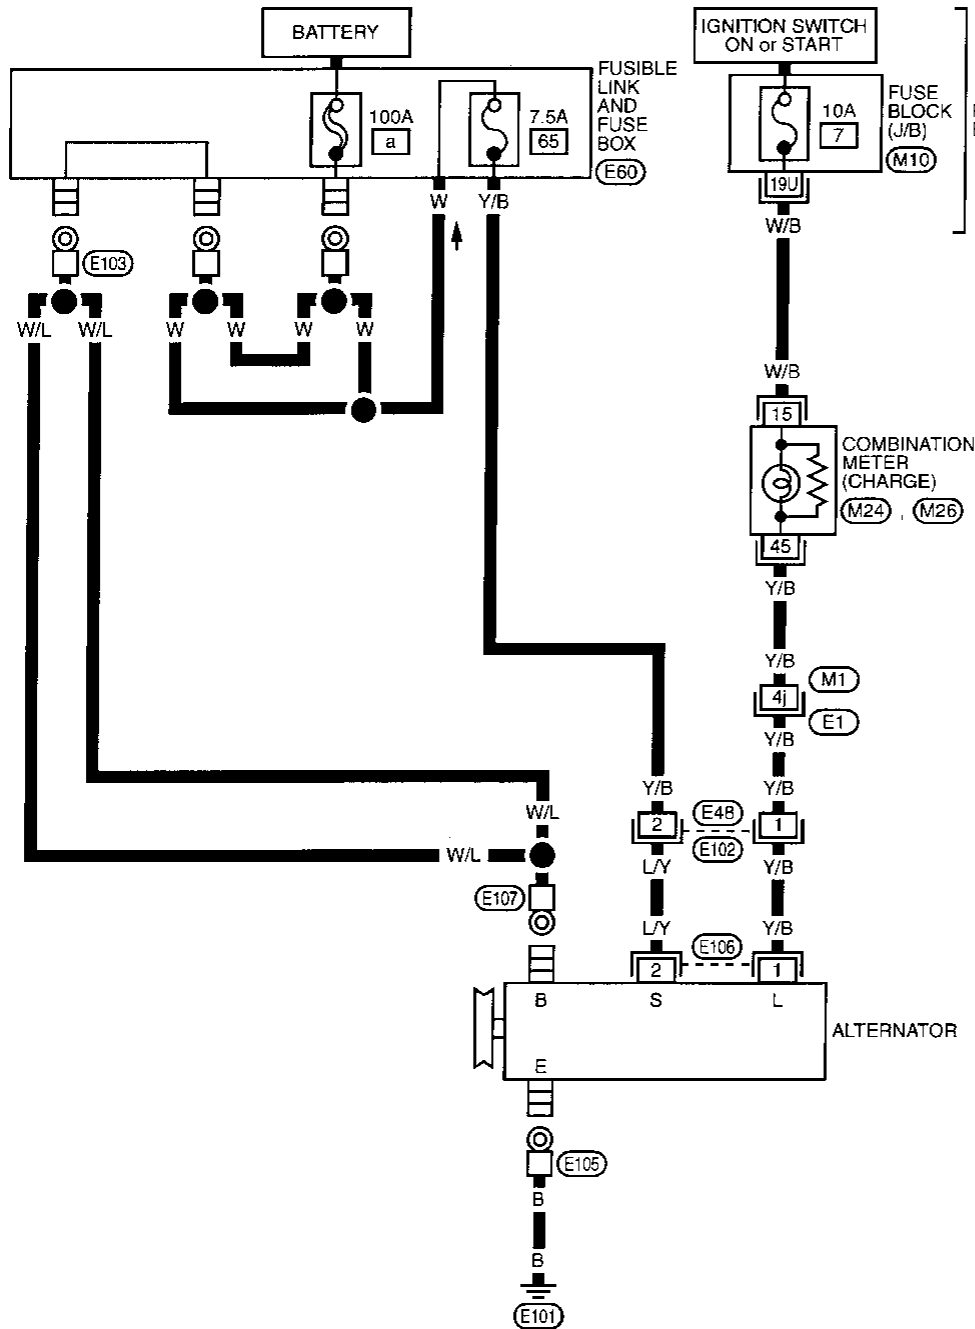

EL-CHARGE-01

Refer to EL-POWER.

- GI
- MA
- EM
- LC
- EC
- FE
- AT
- TF
- PD
- FA
- RA
- BR
- ST
- RS
- BT
- HA

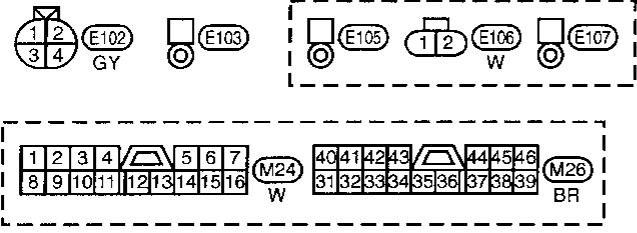

Refer to last page (Foldout page).

- (E1), (M1)
- (E60)
- (M10)

EL

IDX


CHARGING SYSTEM

Trouble Diagnoses

Before conducting an alternator test, make sure that the battery is fully charged. A 30-volt voltmeter and suitable test probes are necessary for the test. The alternator can be checked easily by referring to the Inspection Table.

- Before starting, inspect the fusible link.
- Use fully charged battery.

WITH IC REGULATOR

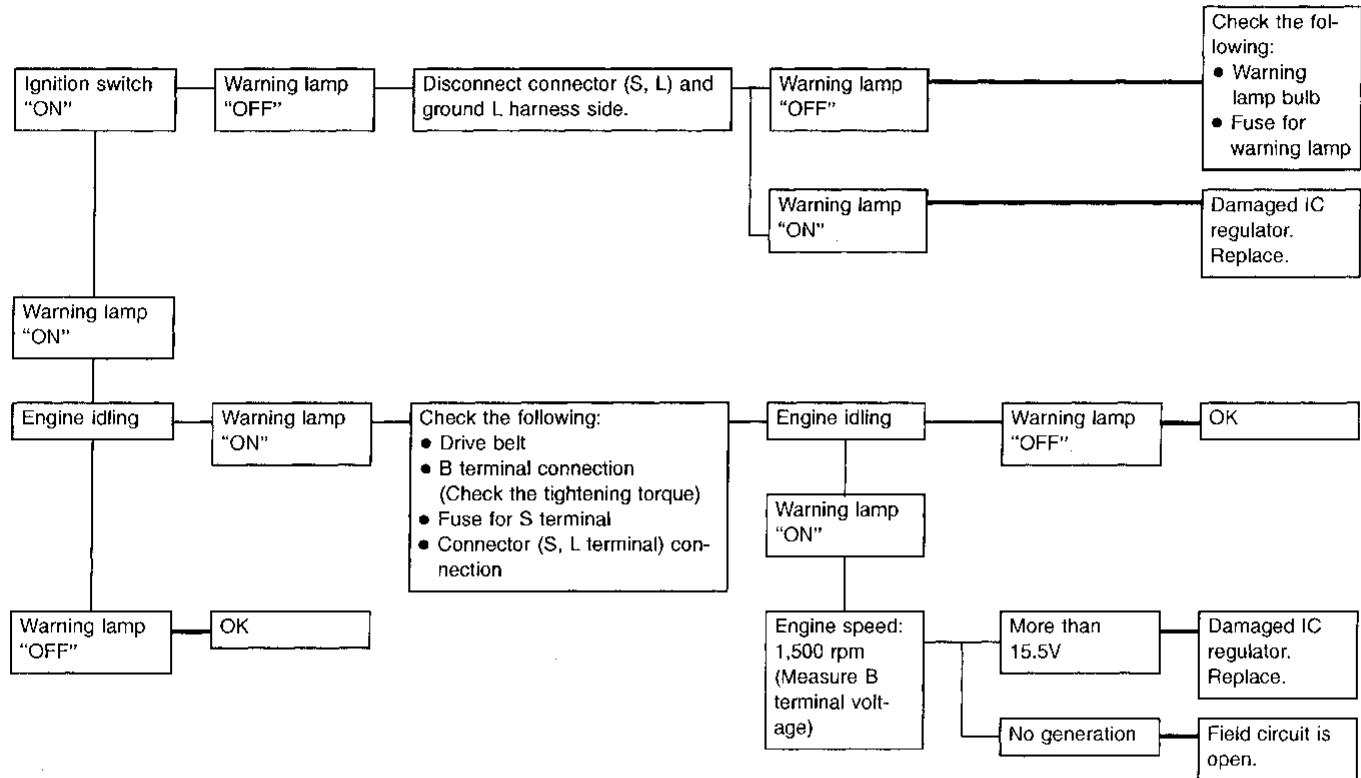

Warning lamp: "CHARGE" warning lamp in combination meter

★: When field circuit is open, check condition of rotor coil, rotor slip ring and brush. If necessary, replace faulty parts with new ones.



MALFUNCTION INDICATOR

The IC regulator warning function activates to illuminate "CHARGE" warning lamp, if any of the following symptoms occur while alternator is operating:

- B terminal is disconnected.
- S terminal is disconnected or related circuit is open.
- Field circuit is open.
- Excessive voltage is produced.

CHARGING SYSTEM

Construction

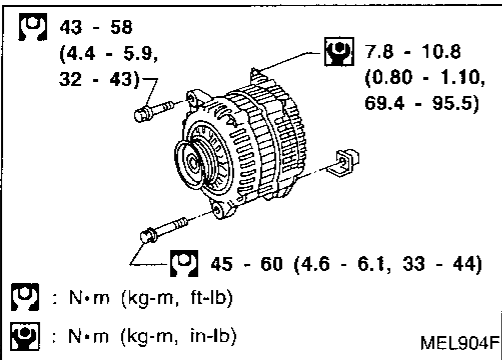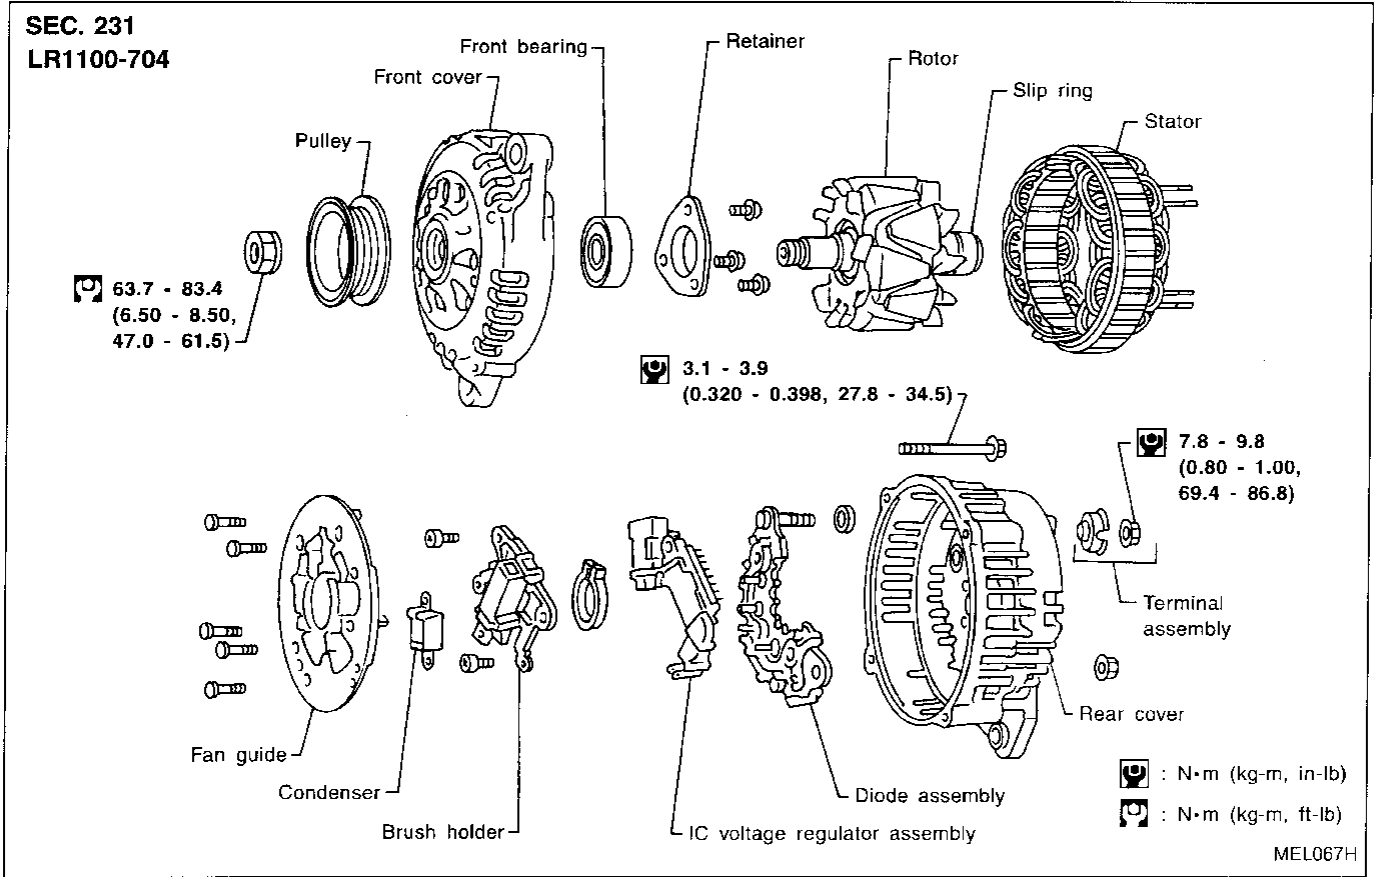

Removal and Installation

GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

CHARGING SYSTEM



Service Data and Specifications (SDS)

ALTERNATOR

Type		LR1100-704
		HITACHI make
Nominal rating	V-A	12-100
Ground polarity		Negative
Minimum revolution under no-load (When 13.5 volts is applied)	rpm	Less than 1,000
Hot output current (When 13.5 volts is applied)	A/rpm	More than 30/1,300 More than 78/2,500 More than 90/5,000
Regulated output voltage	V	14.1 - 14.7
Minimum length of brush	mm (in)	6.0 (0.236)
Brush spring pressure	N (g, oz)	1.000 - 3.432 (102 - 350, 3.60 - 12.34)
Slip ring minimum outer diameter	mm (in)	26.0 (1.024)

COMBINATION SWITCH

Combination Switch/Check

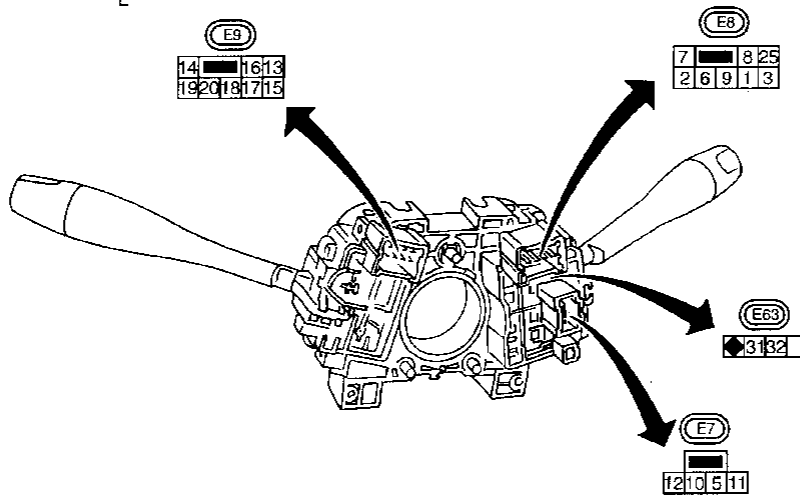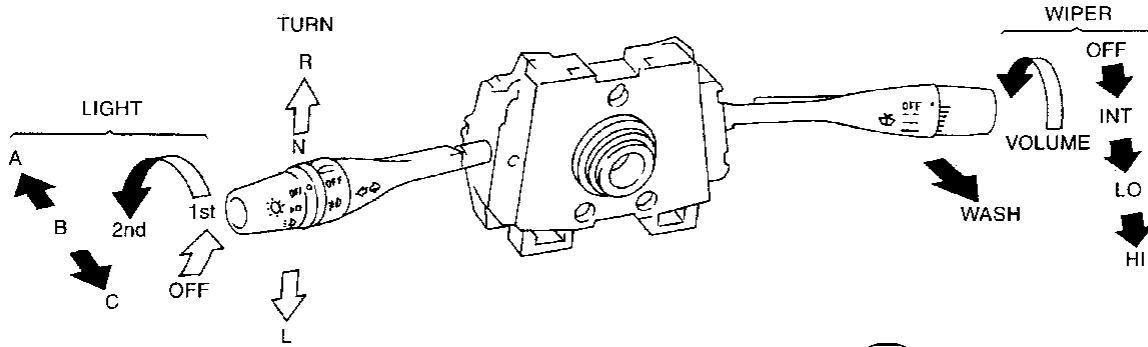


LIGHTING SWITCH

	OFF			1			2		
	A	B	C	A	B	C	A	B	C
5			○			○	○	○	○
6			○			○	○	○	○
7									
8			○			○	○	○	○
9									
10									
11									
12									

WIPER SWITCH

	OFF	INT	LO	HI	WASH
13	○	○			
14	○		○		
15		○			
16				○	
17		○	○	○	○
18					○

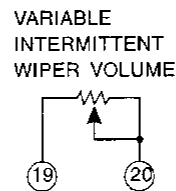

FOG LAMP SWITCH

	OFF	ON
31		○
32		○

TURN SIGNAL SWITCH

	L	N	R
1	○		○
2			○
3	○		

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS




BT

HA

EL

IDX

COMBINATION SWITCH

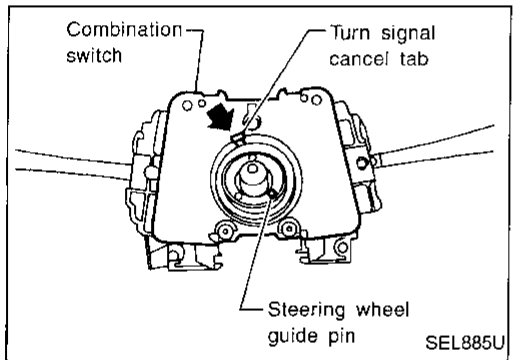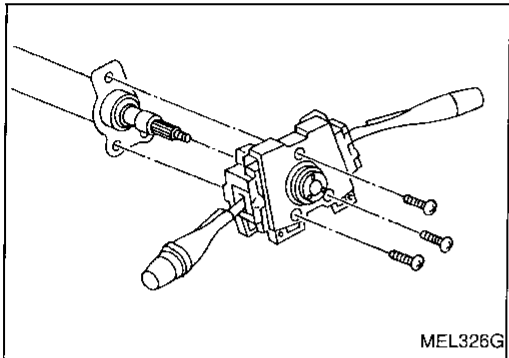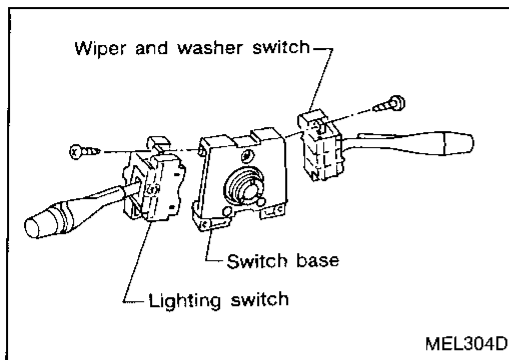



Replacement

For removal and installation of spiral cable, refer to RS section ["Installation — Air Bag Module and Spiral Cable", "SUPPLEMENTAL RESTRAINT SYSTEM (SRS)"].

- Each switch can be replaced without removing combination switch base.
- To remove combination switch base, remove base attaching screw.
- Before installing the steering wheel, align the turn signal cancel tab with the notch of combination switch.

COMBINATION SWITCH

Steering Switch/Check

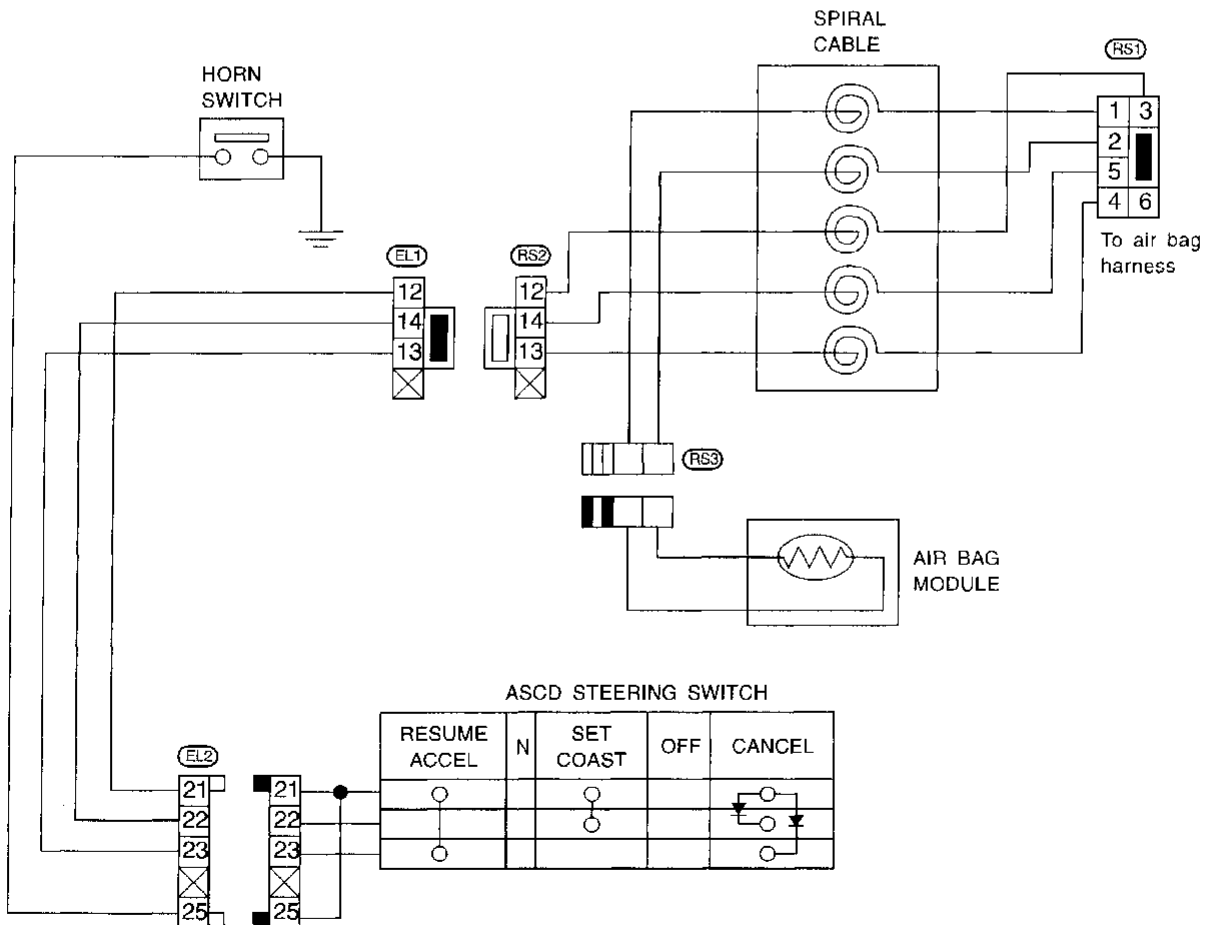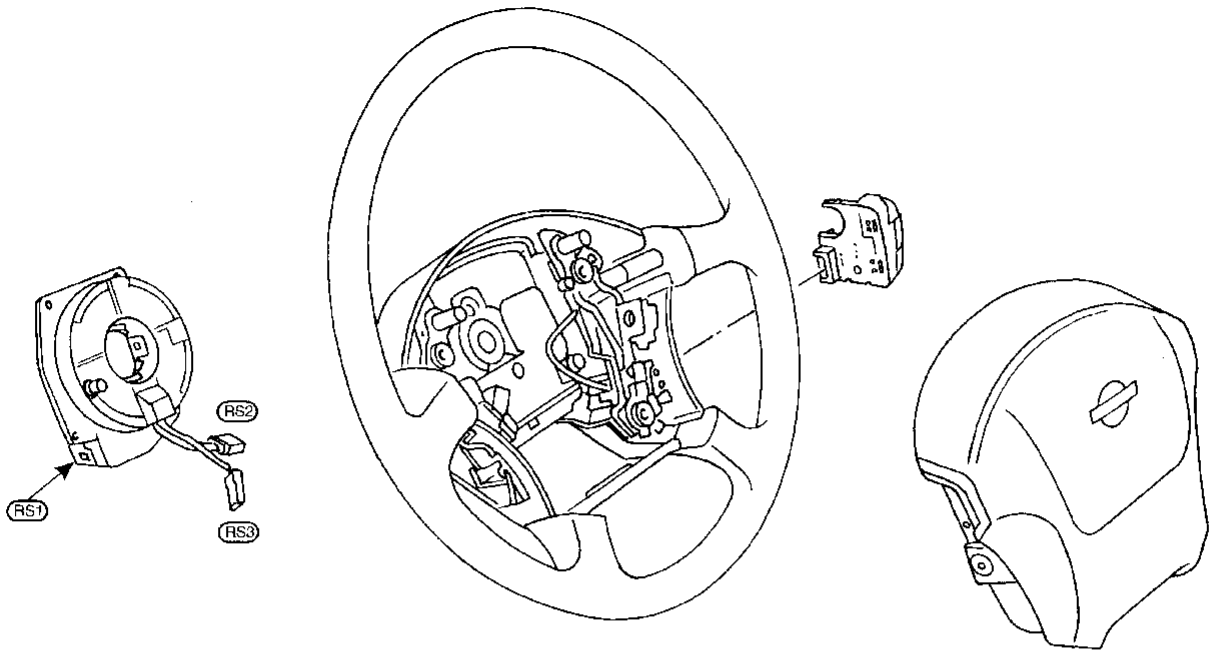

GI
MA
EM
LC
EC
FE
AT
TE
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

System Description (For USA)

The headlamps are controlled by the lighting switch which is built into the combination switch.

Power is supplied at all times

- to lighting switch terminal ⑤
- through 15A fuse (No. ⑤9 , located in the fuse and fusible link box), and
- to lighting switch terminal ⑧
- through 15A fuse (No. ⑥0 , located in the fuse and fusible link box).

Low beam operation

When the lighting switch is turned to the 2ND position and placed in LOW ("B") position, power is supplied

- from lighting switch terminal ⑩
- to terminal ② of the LH headlamp, and
- from lighting switch terminal ⑦
- to terminal ② of the RH headlamp.

Terminal ③ of each headlamp supplies ground through body grounds ①3 and ①4.

With power and ground supplied, the headlamp(s) will illuminate.

High beam operation/flash-to-pass operation

When the lighting switch is turned to the 2ND position and placed in HIGH ("A") position or PASS ("C") position, power is supplied

- from lighting switch terminal ⑥
- to terminal ① of each RH headlamp, and
- from lighting switch terminal ⑨
- to terminal ① of each LH headlamp, and
- to combination meter terminal ④3 for the high beam indicator.

Ground is supplied to terminal ③5 of the combination meter through body grounds ①4 and ①7.

Terminal ③ of each headlamp supplies ground through body grounds ①3 and ①4.

With power and ground supplied, the high beams and the high beam indicator illuminate.




Theft warning system

The theft warning system will flash the high beams if the system is triggered. Refer to "THEFT WARNING SYSTEM" (EL-203).

HEADLAMP

Wiring Diagram (For USA) — H/LAMP —

EL-H/LAMP-01

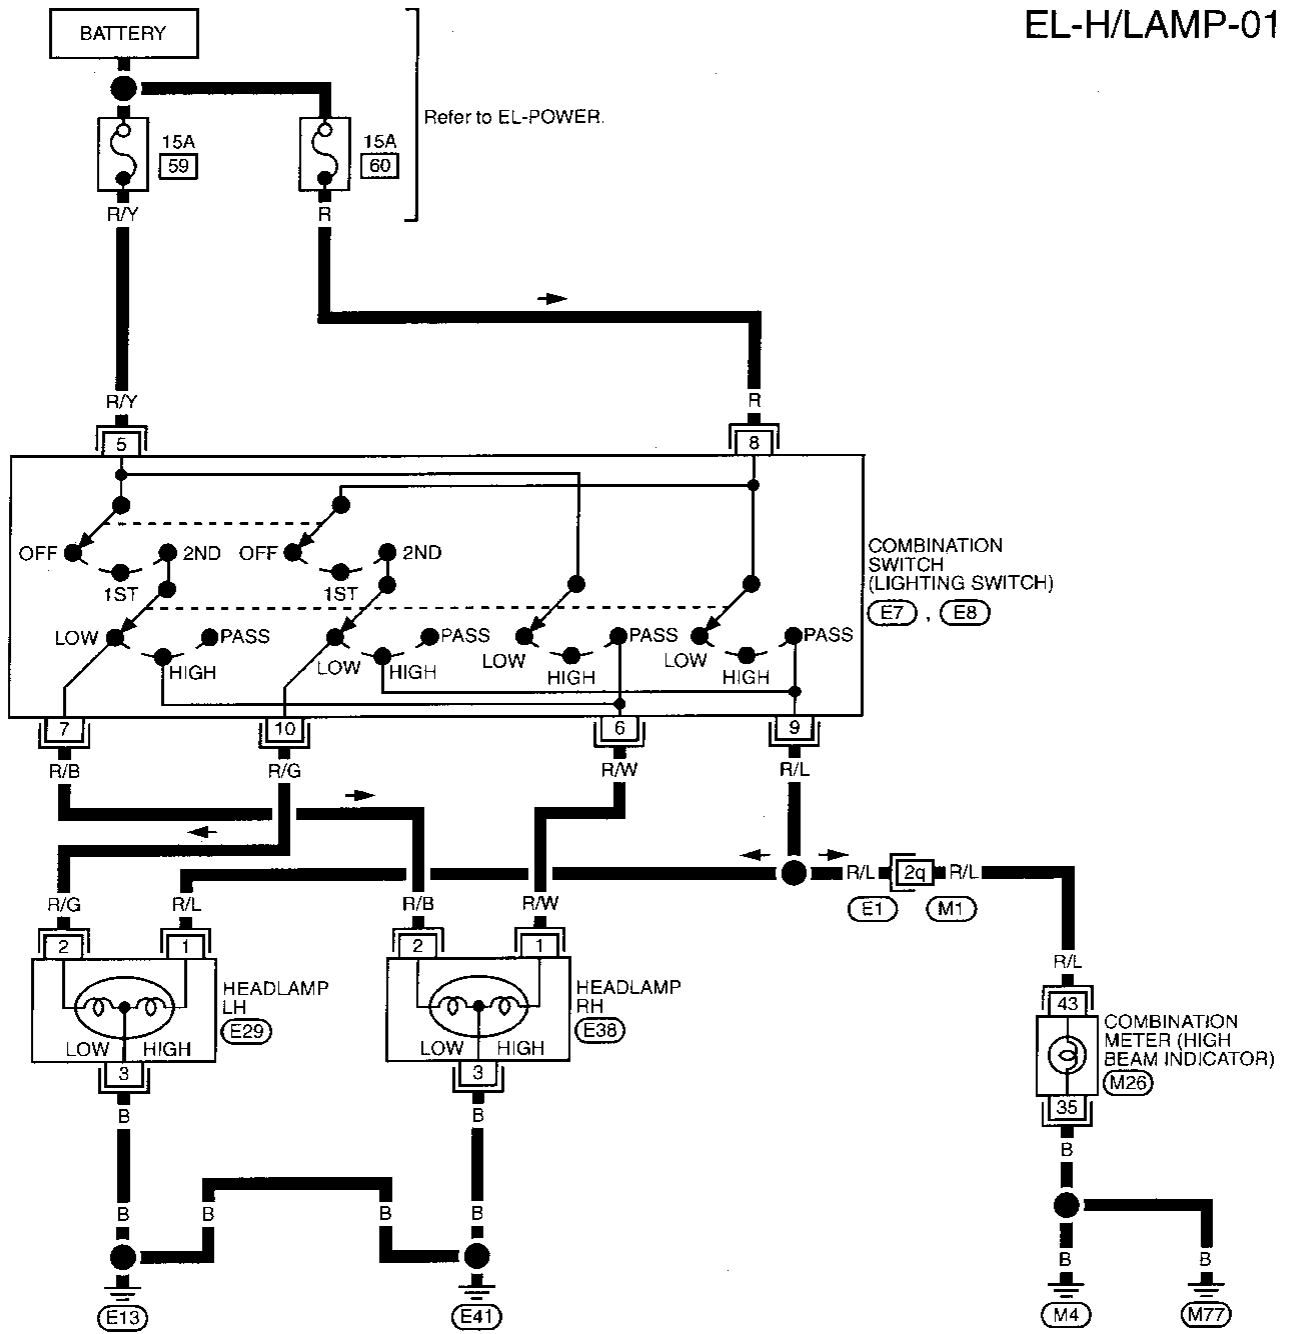

Refer to last page (Foldout page).
E1, M1

GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA

EL

IDX

HEADLAMP

Trouble Diagnoses (For USA)

Symptom	Possible cause	Repair order
LH headlamps do not operate.	<ol style="list-style-type: none"> 1. Bulb 2. Grounds (E13) and (E41) 3. 15A fuse 4. Lighting switch 	<ol style="list-style-type: none"> 1. Check bulb. 2. Check grounds (E13) and (E41). 3. Check 15A fuse (No. 60), located in fuse and fusible link box). Verify battery positive voltage is present at terminal ⑥ of lighting switch. 4. Check lighting switch.
RH headlamps do not operate.	<ol style="list-style-type: none"> 1. Bulb 2. Grounds (E13) and (E41) 3. 15A fuse 4. Lighting switch 	<ol style="list-style-type: none"> 1. Check bulb. 2. Check grounds (E13) and (E41). 3. Check 15A fuse (No. 59), located in fuse and fusible link box). Verify battery positive voltage is present at terminal ⑤ of lighting switch. 4. Check lighting switch.
LH high beams do not operate, but LH low beam operates.	<ol style="list-style-type: none"> 1. Bulbs 2. Open in LH high beams circuit 3. Lighting switch 	<ol style="list-style-type: none"> 1. Check bulbs. 2. Check R/L wire between lighting switch and LH headlamps for an open circuit. 3. Check lighting switch.
LH low beam does not operate, but LH high beam operates.	<ol style="list-style-type: none"> 1. Bulb 2. Open in LH low beam circuit 3. Lighting switch 	<ol style="list-style-type: none"> 1. Check bulb. 2. Check R/G wire between lighting switch and LH headlamp for an open circuit. 3. Check lighting switch.
RH high beams do not operate, but RH low beam operates.	<ol style="list-style-type: none"> 1. Bulbs 2. Open in RH high beams circuit 3. Lighting switch. 	<ol style="list-style-type: none"> 1. Check bulbs. 2. Check R/W wire between lighting switch and RH headlamps for an open circuit. 3. Check lighting switch.
RH low beam does not operate, but RH high beam operates.	<ol style="list-style-type: none"> 1. Bulb 2. Open in RH low beam circuit 3. Lighting switch 	<ol style="list-style-type: none"> 1. Check bulb. 2. Check R/B wire between lighting switch and RH headlamp for an open circuit. 3. Check lighting switch.
High beam indicator does not work.	<ol style="list-style-type: none"> 1. Bulb 2. Grounds (M4) and (M77) 3. Open in high beam circuit 	<ol style="list-style-type: none"> 1. Check bulb in combination meter. 2. Check grounds (M4) and (M77). 3. Check R/L wire between lighting switch and combination meter for an open circuit.

Daytime Light System/System Description (For Canada)

The headlamp system for Canada vehicles contains a daytime light control unit that activates the high beam headlamps at approximately half illumination whenever the engine is running. If the parking brake is applied before the engine is started the daytime lights will not be illuminated. The daytime lights will illuminate once the parking brake is released. Thereafter, the daytime lights will continue to operate when the parking brake is applied.

Power is supplied at all times

- through 15A fuse (No. 60 , located in the fuse and fusible link box)
- to daytime light control unit terminal ③ and
- to lighting switch terminal ⑧ .

Power is also supplied at all times

- through 15A fuse (No. 59 , located in the fuse and fusible link box)
- to daytime light control unit terminal ② and
- to lighting switch terminal ⑤ .

With the ignition switch in the ON or START position, power is supplied

- through 7.5A fuse [No. 12, located in the fuse block (J/B)]
- to daytime light control unit terminal ⑫ .

With the ignition switch in the START position, power is supplied

- through 7.5A fuse [No. 26 , located in the fuse block (J/B)]
- to daytime light control unit terminal ① .

Ground is supplied to daytime light control unit terminal ⑨ through body grounds (E13) and (E41) .

HEADLAMP OPERATION

Low beam operation

When the lighting switch is turned to the 2ND position and placed in LOW ("B") position, power is supplied

- from lighting switch terminal ⑦
- to RH headlamp terminal ②
- to daytime light control unit terminal ④ .

Ground is supplied to RH headlamp terminal ③ through body grounds (E13) and (E41) .

Also, when the lighting switch is turned to the 2ND position and placed in LOW ("B") position, power is supplied

- from lighting switch terminal ⑩
- to LH headlamp terminal ② .

Ground is supplied

- to LH headlamp terminal ③
- from daytime light control unit terminal ⑦
- through daytime light control unit terminal ⑨
- through body grounds (E13) and (E41) .

With power and ground supplied, the low beam headlamps illuminate.

High beam operation/flash-to-pass operation

When the lighting switch is turned to the 2ND position and placed in HIGH ("A") position, power is supplied

- from lighting switch terminal ⑥
- to terminal ① of RH headlamp.

When the lighting switch is turned to the 2ND position and placed in HIGH ("A") position, power is supplied

- from lighting switch terminal ⑨
- to daytime light control terminal ⑤
- to combination meter terminal ④③ for the high beam indicator
- through daytime light control terminal ⑥
- to terminal ① of LH headlamp.

Ground is supplied in the same manner as low beam operation.

Ground is supplied to terminal ③⑤ of the combination meter through body grounds (M4) and (M77) .

With power and ground supplied, the high beam headlamps and HI BEAM indicator illuminate.

GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

HEADLAMP

Daytime Light System/System Description (For Canada) (Cont'd)

DAYTIME LIGHT OPERATION

With the engine running, the lighting switch in the OFF or 1ST position and parking brake released, power is supplied

- to daytime light control unit terminal ③
- through daytime light control unit terminal ⑥
- to terminal ① of LH headlamp
- through terminal ③ of LH headlamp
- to daytime light control unit terminal ⑦
- through daytime light control unit terminal ⑧
- to terminal ① of RH headlamp.

Ground is supplied to terminal ③ of RH headlamp through body grounds (E13) and (E41).

Because the high beam headlamps are now wired in series, they operate at half illumination.

Operation (Daytime light system for Canada)

After starting the engine with the lighting switch in the "OFF" or "1ST" position, the headlamp high beam automatically turns on. Lighting switch operations other than the above are the same as conventional light systems.

Engine		With engine stopped									With engine running									
		OFF			1ST			2ND			OFF			1ST			2ND			
		A	B	C	A	B	C	A	B	C	A	B	C	A	B	C	A	B	C	
Lighting switch																				
Headlamp	High beam	X	X	○	X	X	○	○	X	○	△*	△*	○	△*	△*	○	○	○	X	○
	Low beam	X	X	X	X	X	X	X	○	X	X	X	X	X	X	X	X	X	○	X
Clearance and tail lamp		X	X	X	○	○	○	○	○	○	X	X	X	○	○	○	○	○	○	○
License and instrument illumination lamp		X	X	X	○	○	○	○	○	○	X	X	X	○	○	○	○	○	○	○

○ : Lamp "ON"

X : Lamp "OFF"

△ : Lamp dims.


□ : Added functions

*: When starting the engine with the parking brake released, the daytime light will come ON.

When starting the engine with the parking brake pulled, the daytime light won't come ON.

HEADLAMP

Schematic (For Canada)

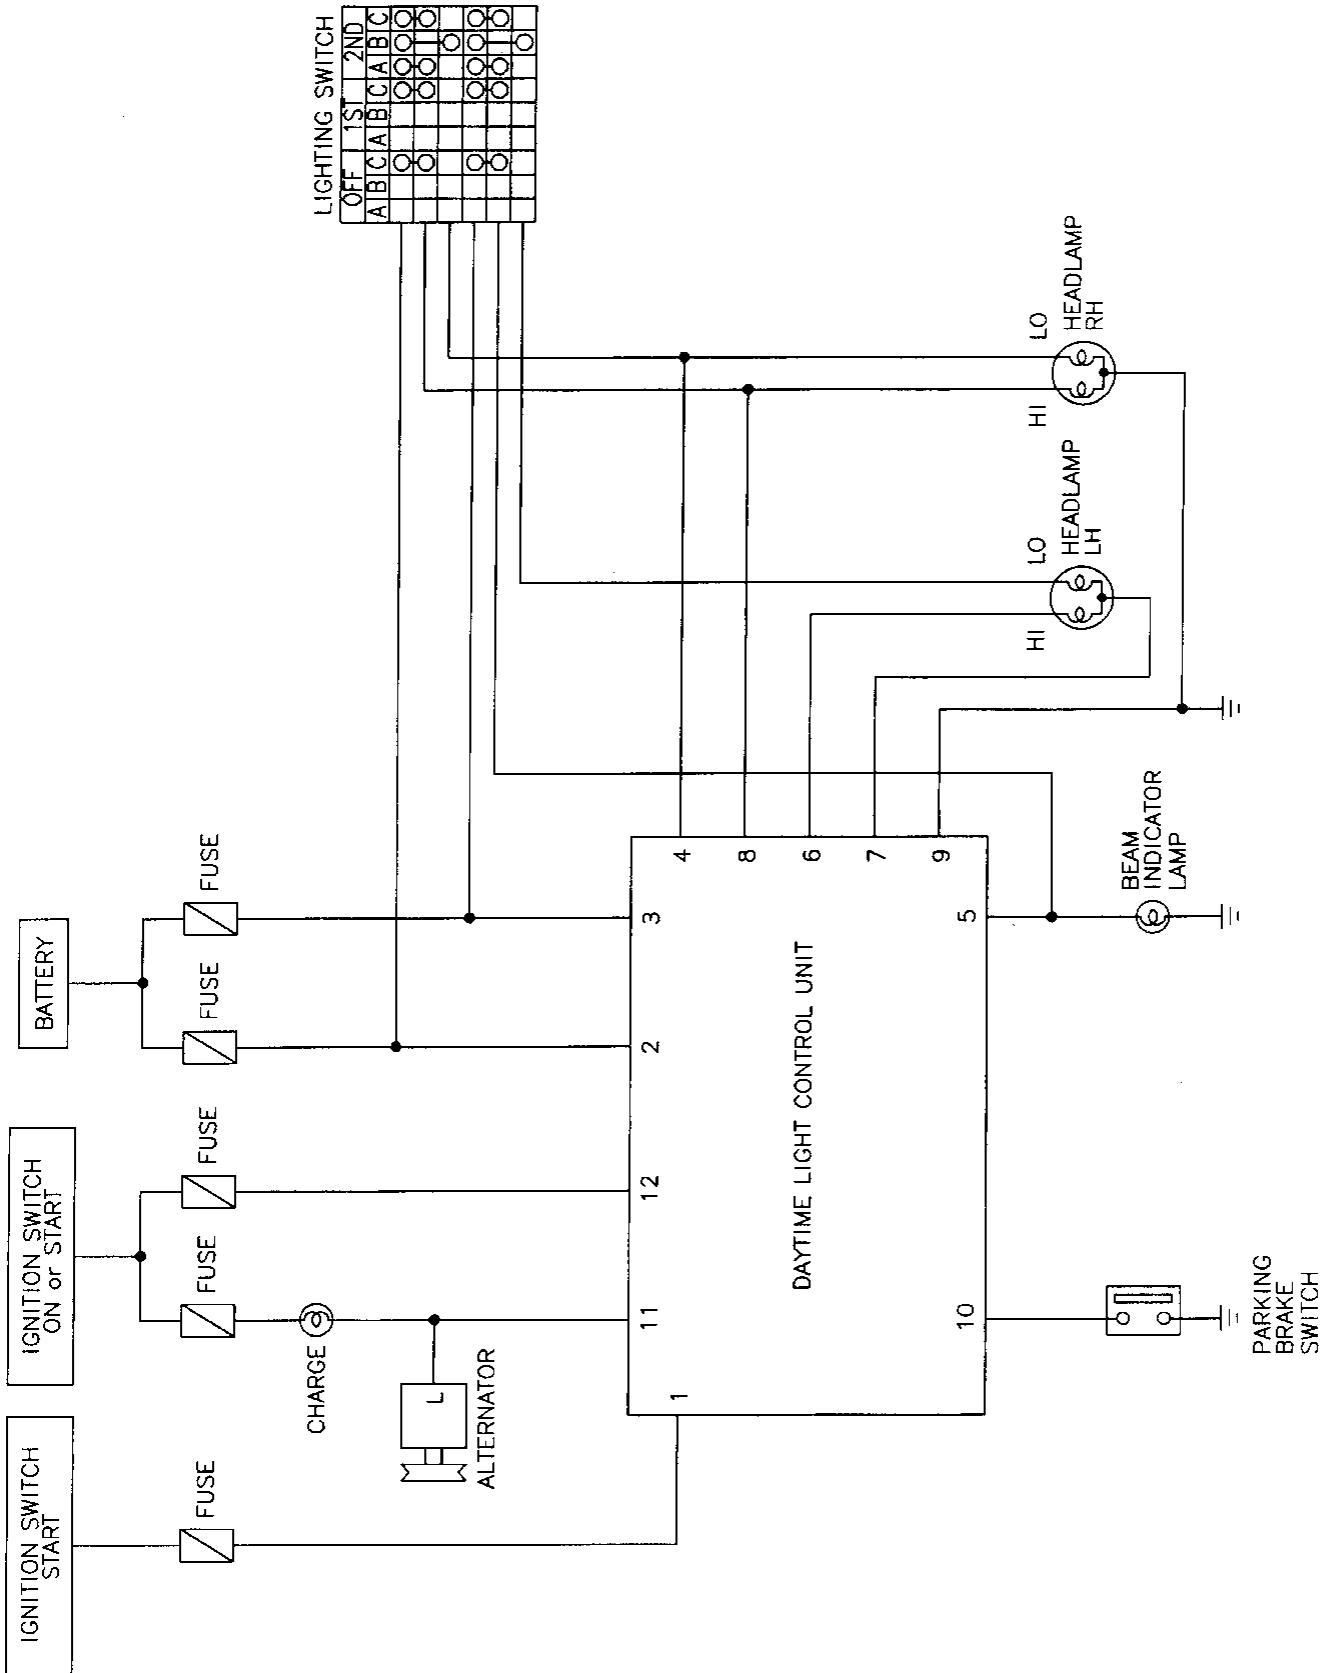

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA




EL

IDX

HEADLAMP

Wiring Diagram (For Canada) — DTRL —



EL-DTRL-01

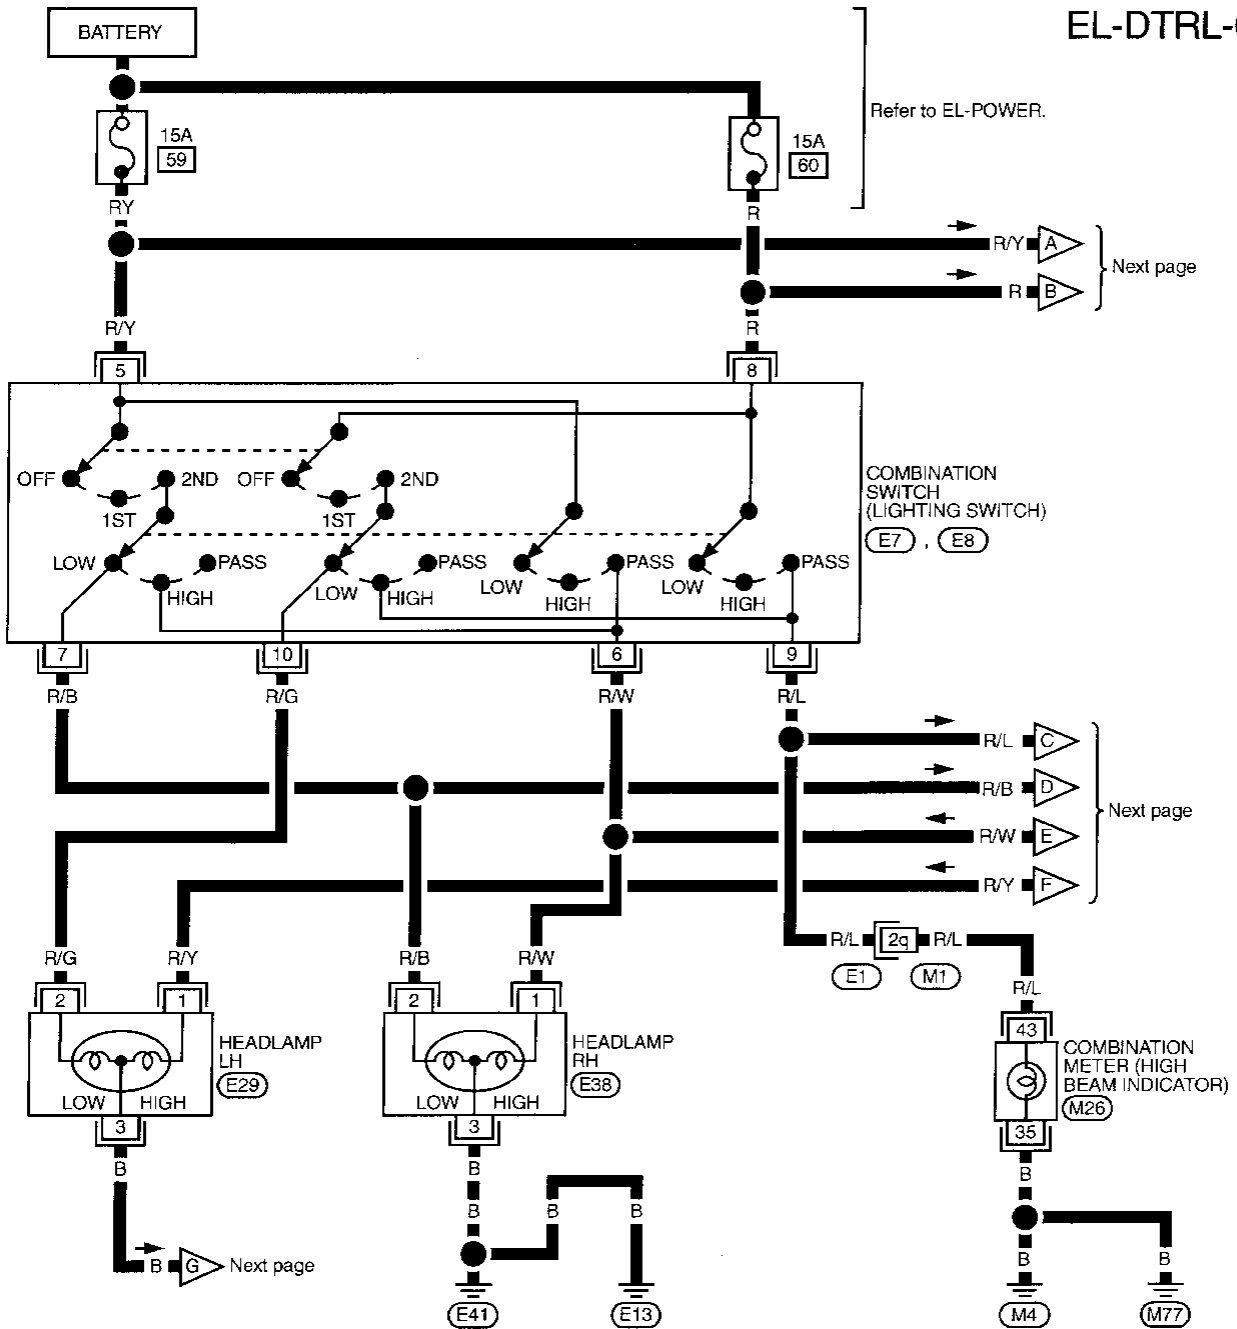

Refer to last page (Foldout page).
 (E1) . (M1)

HEADLAMP

Wiring Diagram (For Canada) — DTRL — (Cont'd)




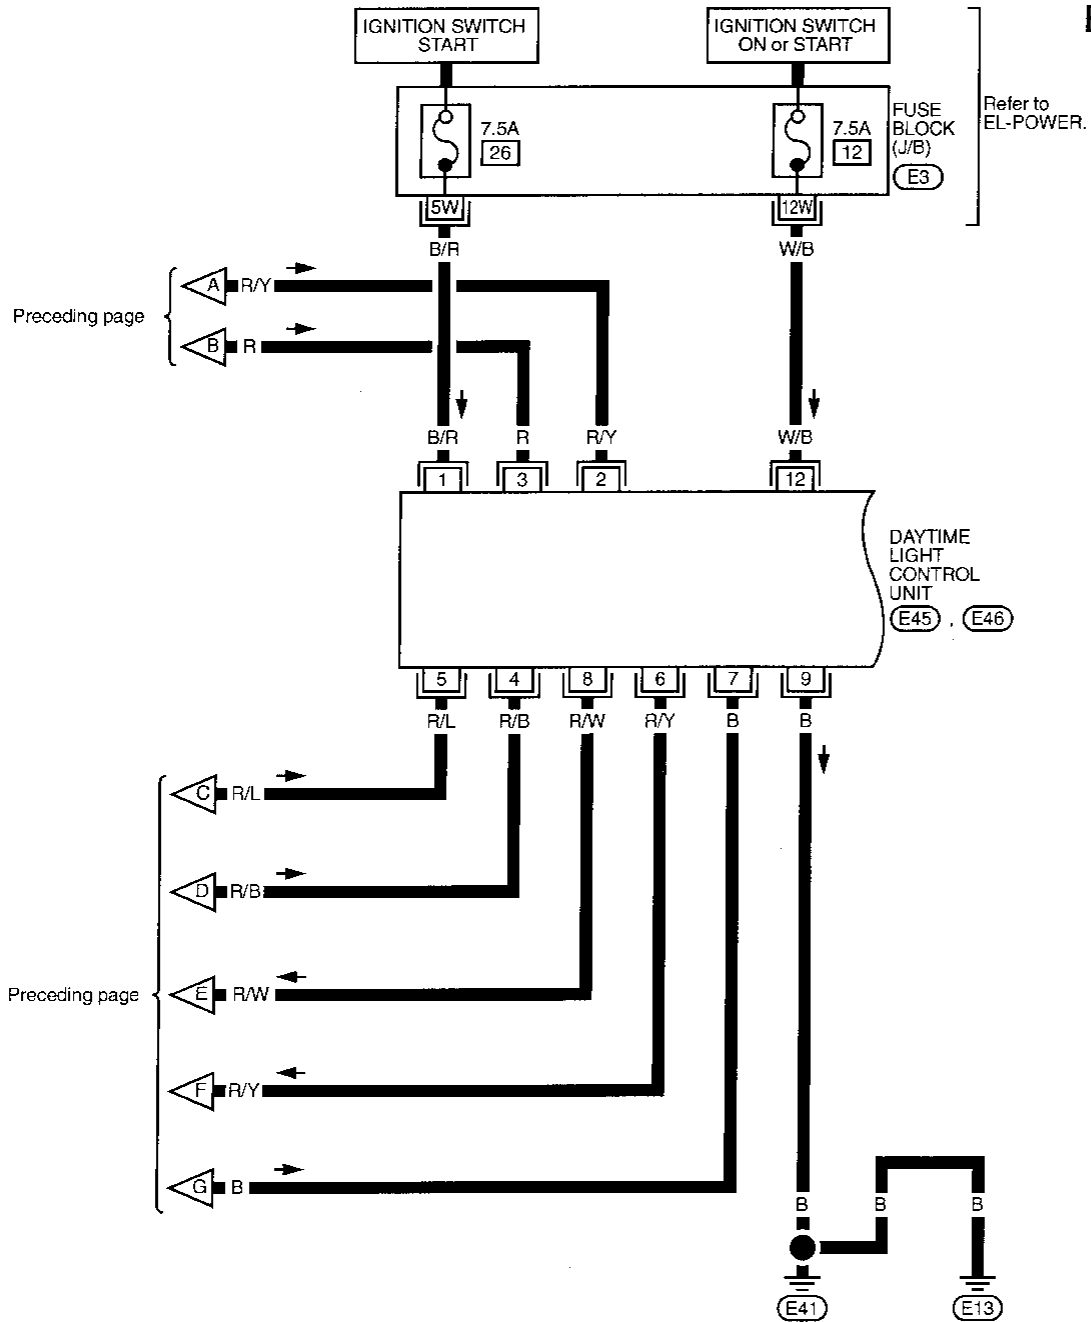


GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

HEADLAMP

Wiring Diagram (For Canada) — DTRL — (Cont'd)

EL-DTRL-03

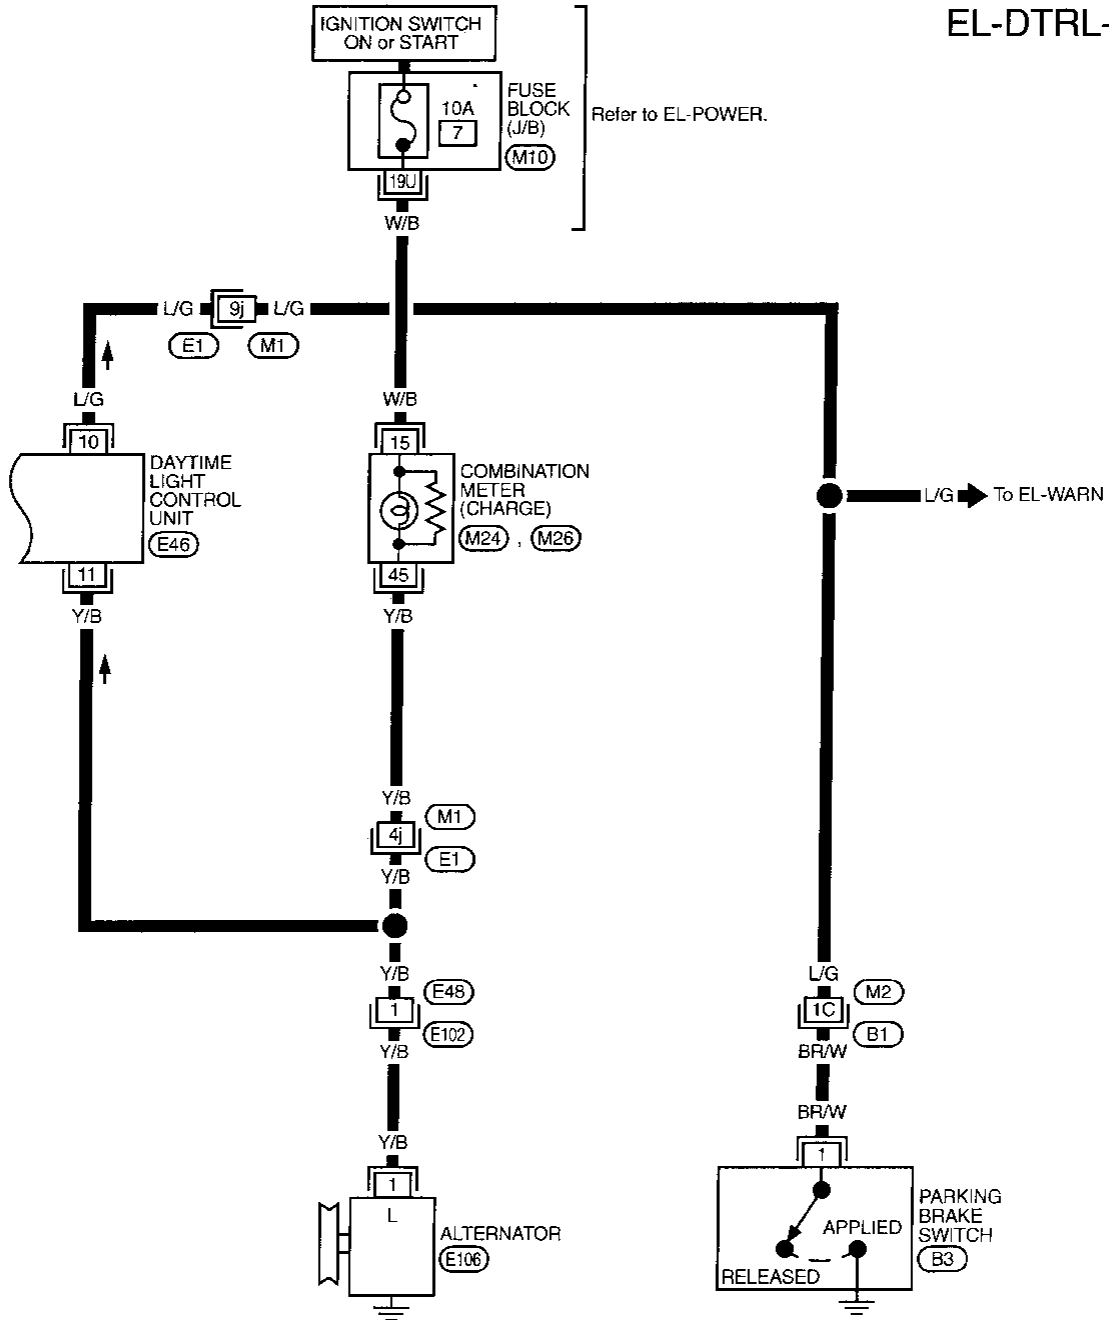

Refer to last page (Foldout page).

(E1), (M1)

(M2), (B1)









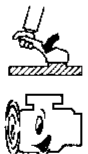
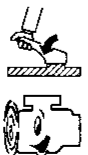
(M10)

HEADLAMP

Trouble Diagnoses (For Canada)

DAYTIME LIGHT CONTROL UNIT INSPECTION TABLE









(Data are reference values.)


Terminal No.	Item	Condition	Judgement standard
1	Start signal	 When turning ignition switch to "ST"	Battery positive voltage
		 When turning ignition switch to "ON" from "ST"	1V or less
		 When turning ignition switch to "OFF"	1V or less
2	Power source	 When turning ignition switch to "ON"	Battery positive voltage
		 When turning ignition switch to "OFF"	Battery positive voltage
3	Power source	 When turning ignition switch to "ON"	Battery positive voltage
		 When turning ignition switch to "OFF"	Battery positive voltage
4	Lighting switch (Lo beam)	When turning lighting switch to "HEAD" (2nd position)	Battery positive voltage
5	Lighting switch (Hi beam)	When turning lighting switch to "HI BEAM"	Battery positive voltage
		When turning lighting switch to "FLASH TO PASS"	Battery positive voltage
6	LH hi beam	When turning lighting switch to "HI BEAM"	Battery positive voltage
		 When releasing parking brake with engine running and turning lighting switch to "OFF" (daytime light operation) CAUTION: Block wheels and ensure selector lever is in N or P position.	Battery positive voltage
7	LH headlamp control (ground)	When lighting switch is turned to "HEAD"	1V or less
		 When releasing parking brake with engine running and turning lighting switch to "OFF" (daytime light operation) CAUTION: Block wheels and ensure selector lever is in N or P position.	Approx. half battery voltage
8	RH hi beam	When turning lighting switch to "HI BEAM"	Battery positive voltage
		 When releasing parking brake with engine running and turning lighting switch to "OFF" (daytime light operation) CAUTION: Block wheels and ensure selector lever is in N or P position.	Approx. half battery voltage

GI
 MA
 EM
 LC
 EC
 FE
 AT
 TF
 PD
 FA
 RA
 BR
 ST
 RS
 BT
 HA
 EL
 DX

HEADLAMP

Trouble Diagnoses (For Canada) (Cont'd)

Terminal No.	Item	Condition		Judgement standard
9	Ground	—		—
10	Parking brake switch		When parking brake is released	Battery positive voltage
			When parking brake is set	1.5V or less
11	Alternator		When turning ignition switch to "ON"	1V or less
			When engine is running	Battery positive voltage
			When turning ignition switch to "OFF"	1V or less
12	Power source		When turning ignition switch to "ON"	Battery positive voltage
			When turning ignition switch to "ST"	Battery positive voltage
			When turning ignition switch to "OFF"	1V or less

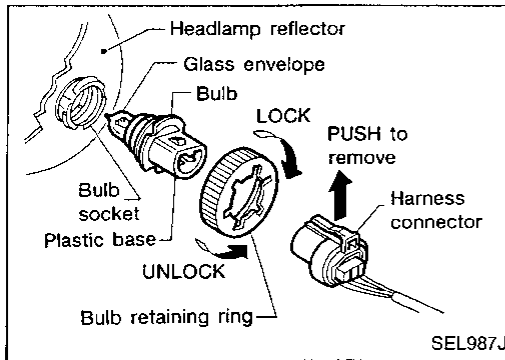

Bulb Replacement

The headlamp is a semi-sealed beam type which uses a replaceable halogen bulb. The bulb can be replaced from the engine compartment side without removing the headlamp body.

- **Grasp only the plastic base when handling the bulb. Never touch the glass envelope.**

1. Disconnect the battery cable.
2. Turn the bulb retaining ring counterclockwise until it is free from the headlamp reflector, and then remove it.
3. Disconnect the harness connector from the back side of the bulb.
4. Remove the headlamp bulb carefully. Do not shake or rotate the bulb when removing it.
5. Install in the reverse order of removal.

CAUTION:

- **Do not leave headlamp reflector without bulb for a long period of time. Dust, moisture, smoke, etc. entering headlamp body may affect the performance of the headlamp. Remove headlamp bulb from the headlamp reflector just before a replacement bulb is installed.**

Bulb Specifications

Item	Wattage (W)
Headlamp (Semi-sealed beam) High/Low	65/45 (HB1)

Aiming Adjustment

When performing headlamp aiming adjustment, use an aiming machine, aiming wall screen or headlamp tester. Aimers should be in good repair, calibrated and operated in accordance with respective operation manuals.

If any aimer is not available, aiming adjustment can be done as follows:


HEADLAMP

Aiming Adjustment (Cont'd)

For details, refer to the regulations in your own country.

- Keep all tires inflated to correct pressures.
- Place vehicle and tester on one and same flat surface.
- See that there is no-load in vehicle (coolant, engine oil filled up to correct level and full fuel tank) other than the driver (or equivalent weight placed in driver's position).

GI
MA
EM
LC

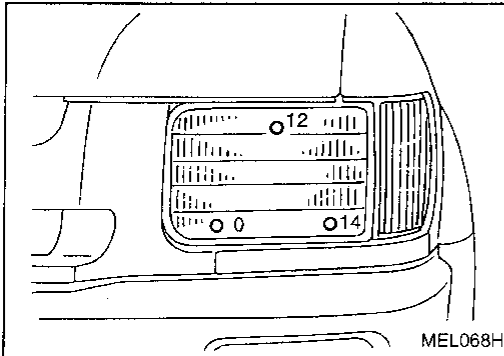


AIMER ADJUSTMENT MARK

When using a mechanical aimer, adjust adapter legs to the data marked on the headlamps.

Adjustment value for mechanical aimer

	Mechanical aimer level
Horizontal side	-4 to 4
Vertical side	-4 to 4


FE
AT
TF

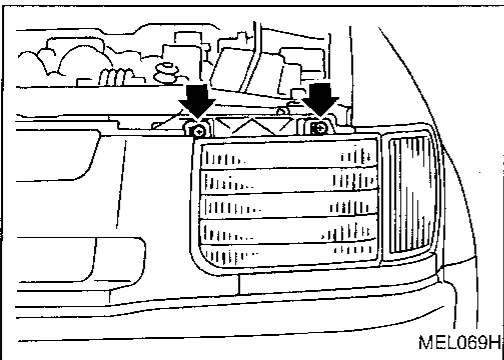

LOW BEAM

- Turn headlamp low beam on.
 - Use adjusting screws to perform aiming adjustment.
- First tighten the adjusting screw all the way and then make adjustment by loosening the screw.

PD
FA
RA
BR

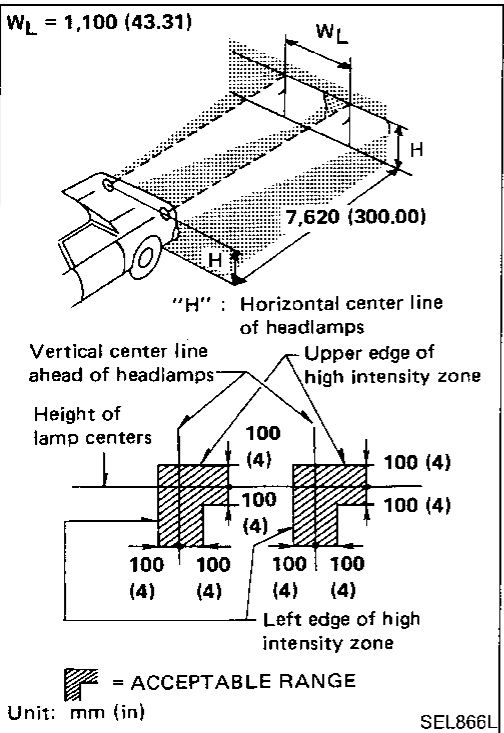

- Upper edge and left edge of high intensity zone should be within the range shown at left. Adjust headlamps accordingly.
 - Dotted lines in illustration show center of headlamp.
- "H": Horizontal center line of headlamps
 "W_L": Distance between each headlamp center

ST
RS
BT
HA


EL

DDX

EXTERIOR LAMP

Parking, License and Tail Lamps/Wiring Diagram — TAIL/L —

EL-TAIL/L-01

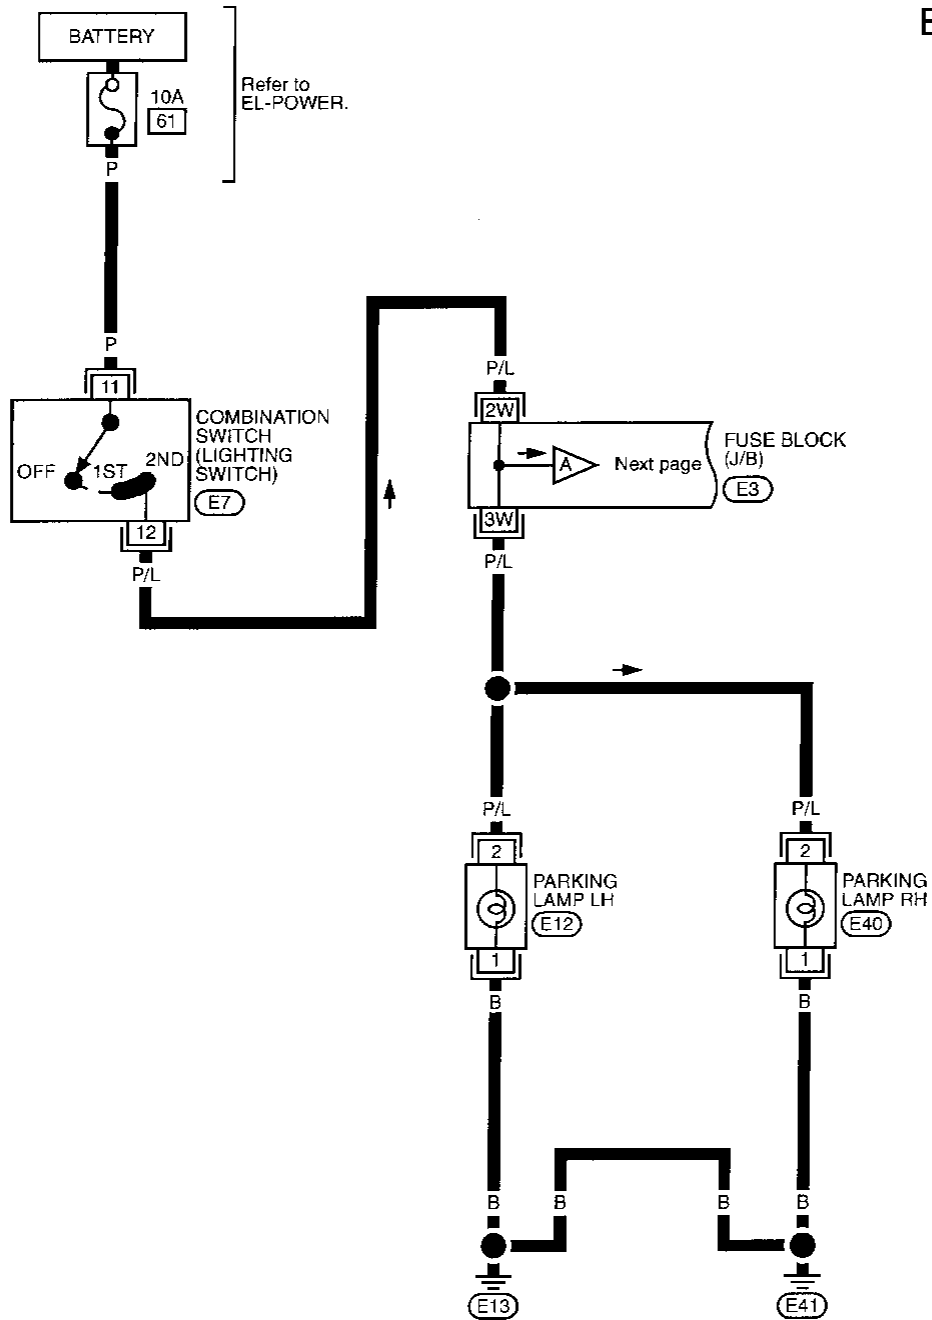

Refer to last page (Foldout page).








E3

EXTERIOR LAMP

Parking, License and Tail Lamps/Wiring Diagram — TAIL/L — (Cont'd)

EL-TAIL/L-02

GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

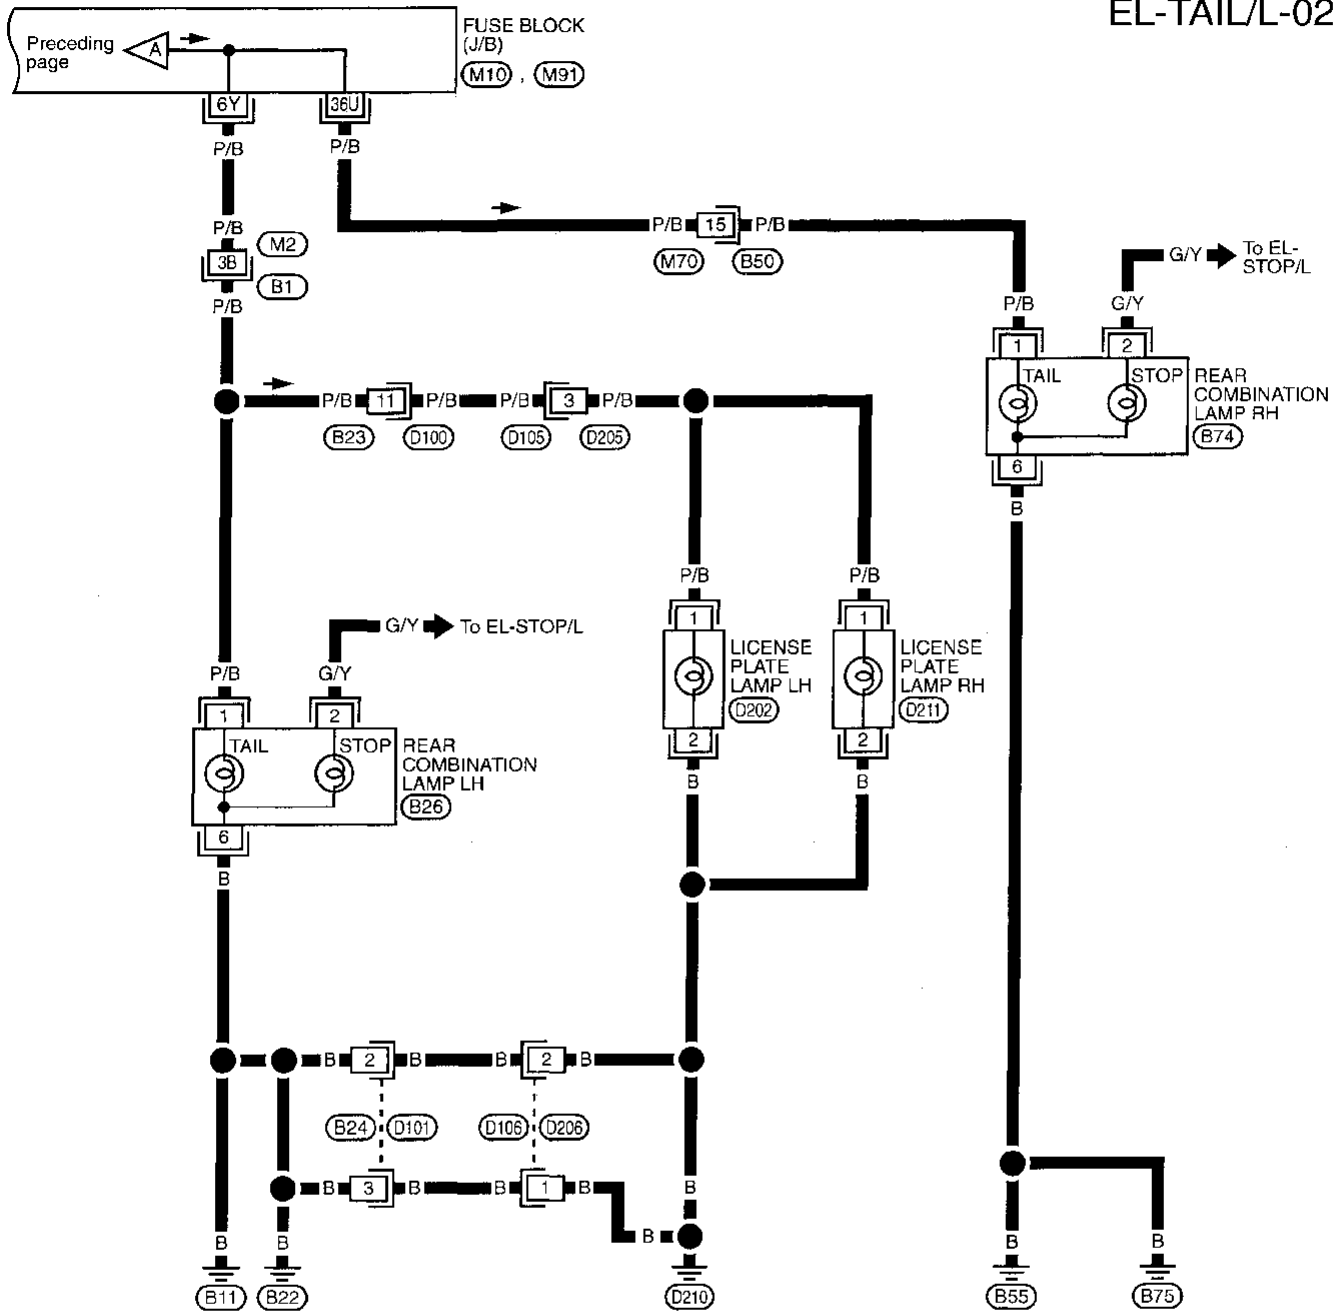



Refer to last page (Foldout page).

- (M10)
- (M91)
- (M2), (B1)

EXTERIOR LAMP

Stop Lamp/Wiring Diagram — STOP/L —

EL-STOP/L-01

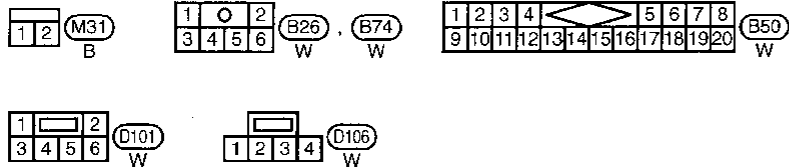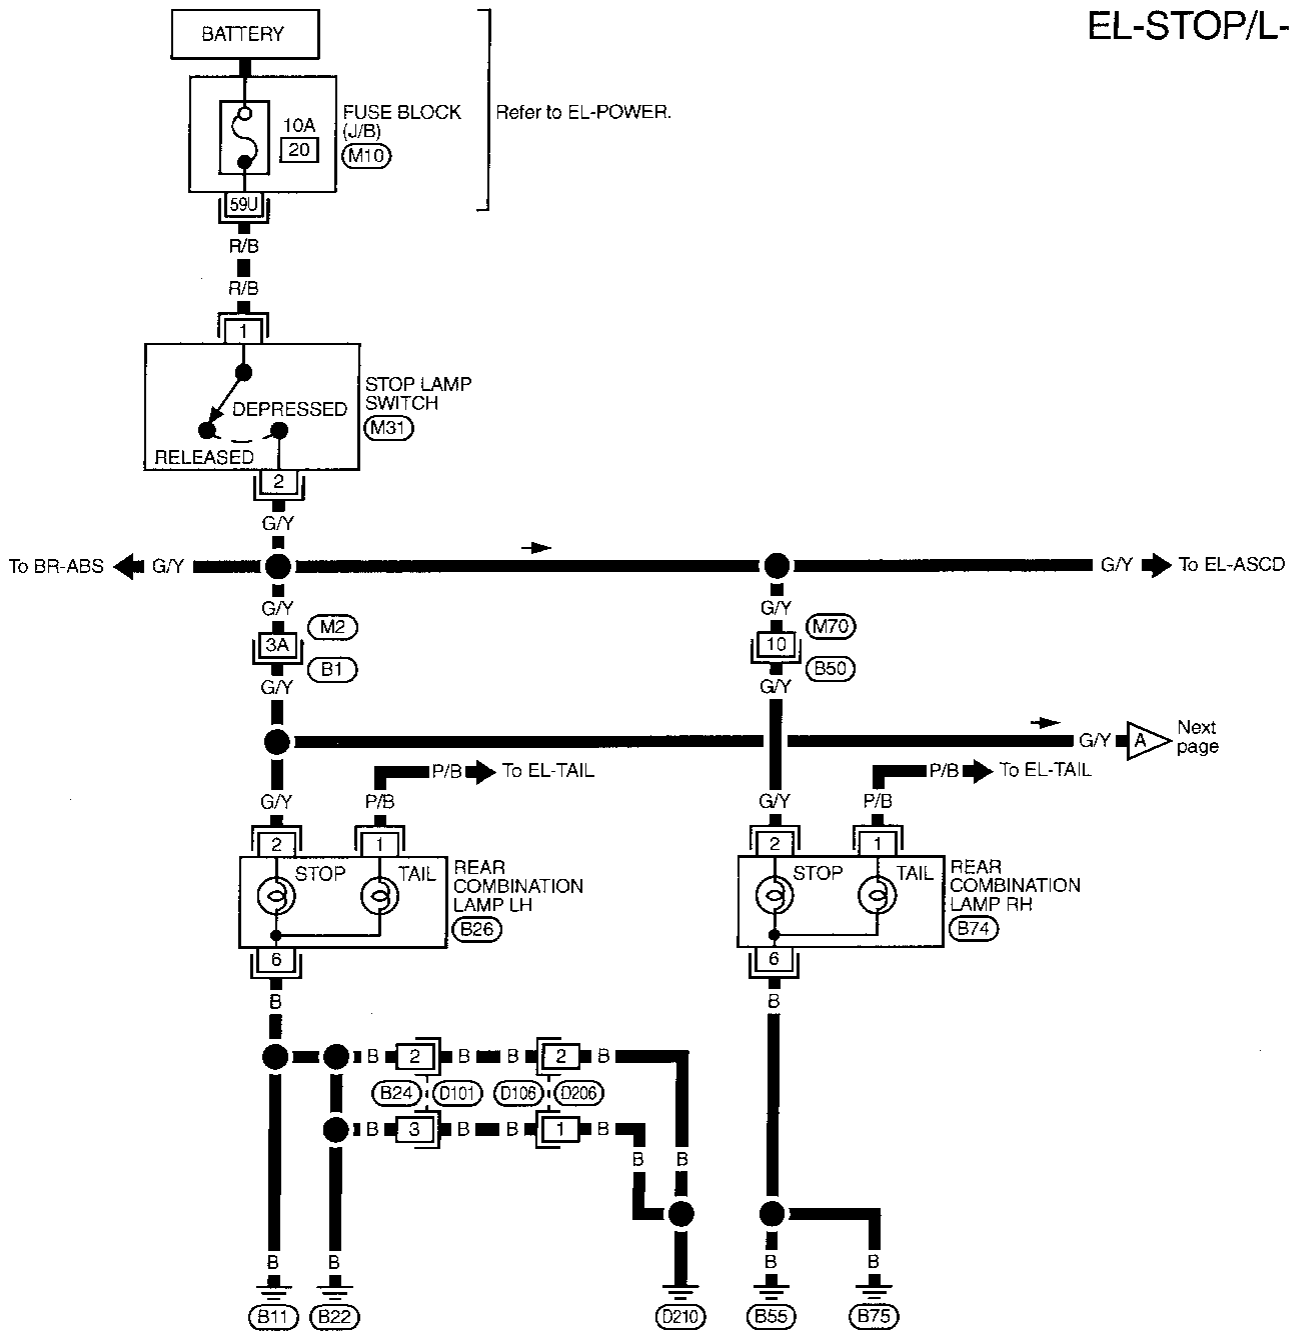







Refer to last page (Foldout page).

(M2), (B1)
(M10)

EXTERIOR LAMP

Stop Lamp/Wiring Diagram — STOP/L — (Cont'd)

EL-STOP/L-02

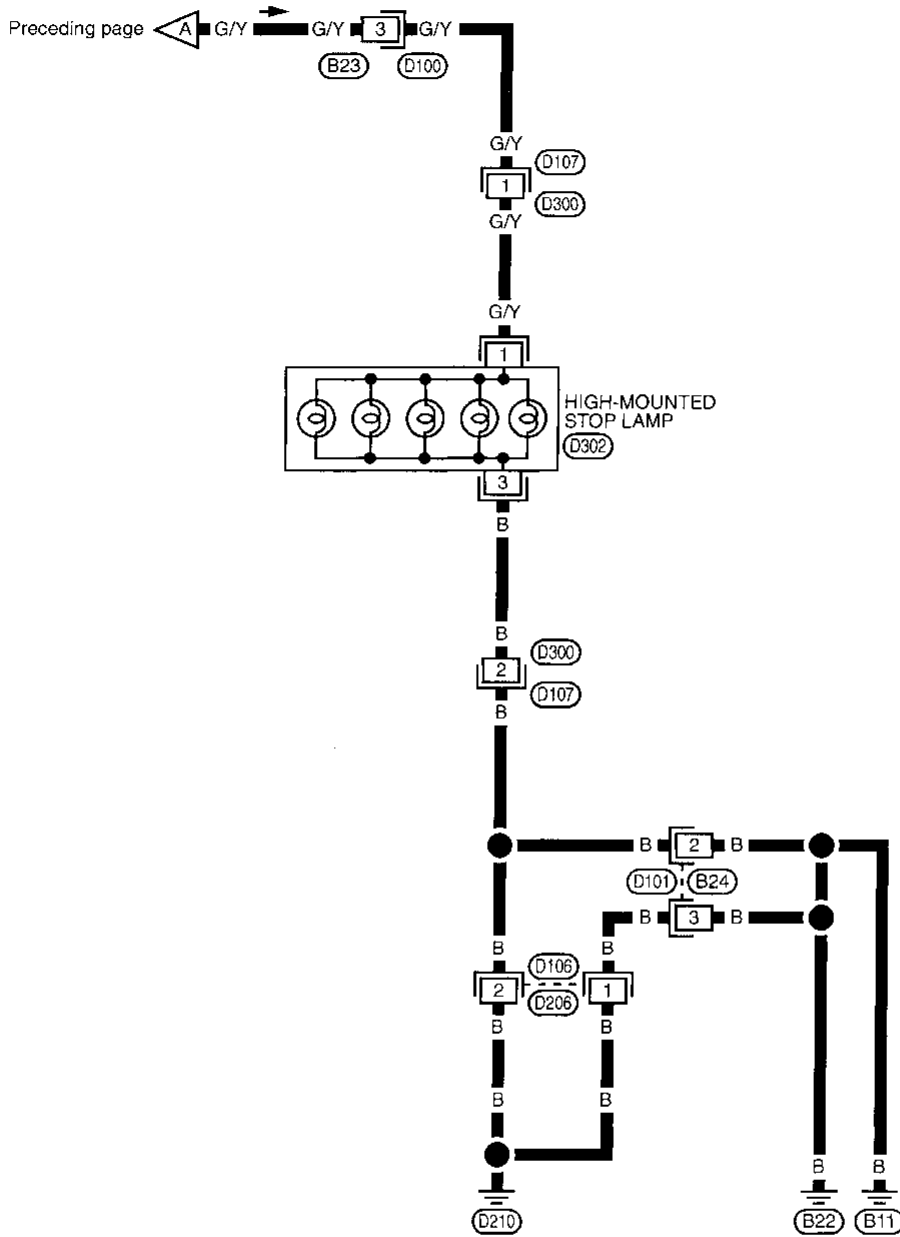

GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA


EL

IDX

EXTERIOR LAMP





Back-up Lamp/Wiring Diagram — BACK/L —

EL-BACK/L-01

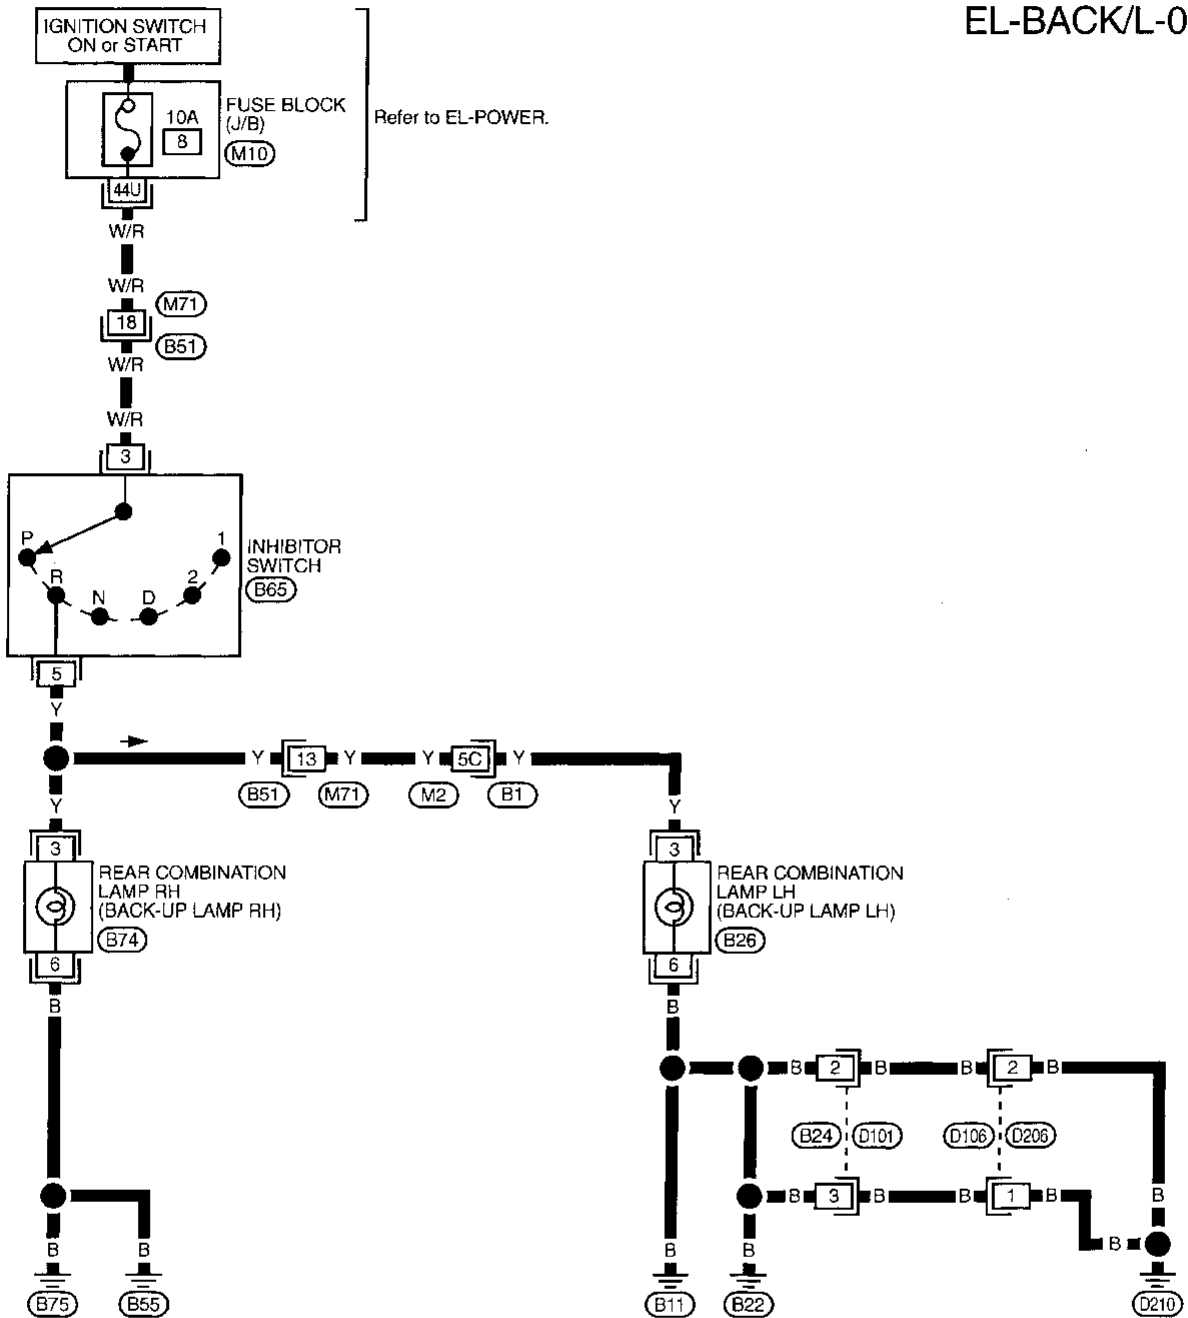

Refer to EL-POWER.

Refer to last page (Foldout page).



M2, B1
M10

EXTERIOR LAMP

Front Fog Lamp/System Description

Power is supplied at all times to fog lamp relay terminal ③ through:

- 15A fuse (No. 53), located in the fuse and fusible link box

With the lighting switch in the 2ND position and LOW ("B") position, power is supplied

- through 15A fuse (No. 59), located in the fuse and fusible link box
- to lighting switch terminal ⑤
- through terminal ⑦ of the lighting switch
- to fog lamp relay terminal ①.

Fog lamp operation

The fog lamp switch is built into the combination switch. The lighting switch must be in the 2ND position and LOW ("B") position for fog lamp operation.

With the fog lamp switch in the ON position:

- ground is supplied to fog lamp relay terminal ② through the fog lamp switch and body grounds E13 and E41.

The fog lamp relay is energized and power is supplied

- from fog lamp relay terminal ⑤
- to terminal ① of each fog lamp.

Ground is supplied to terminal ② of each fog lamp through body grounds E13 and E41.

With power and ground supplied, the fog lamps illuminate.

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA



EL

IDX


EXTERIOR LAMP

Front Fog Lamp/Wiring Diagram — F/FOG —

EL-F/FOG-01

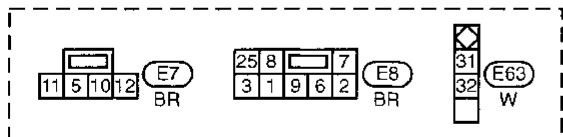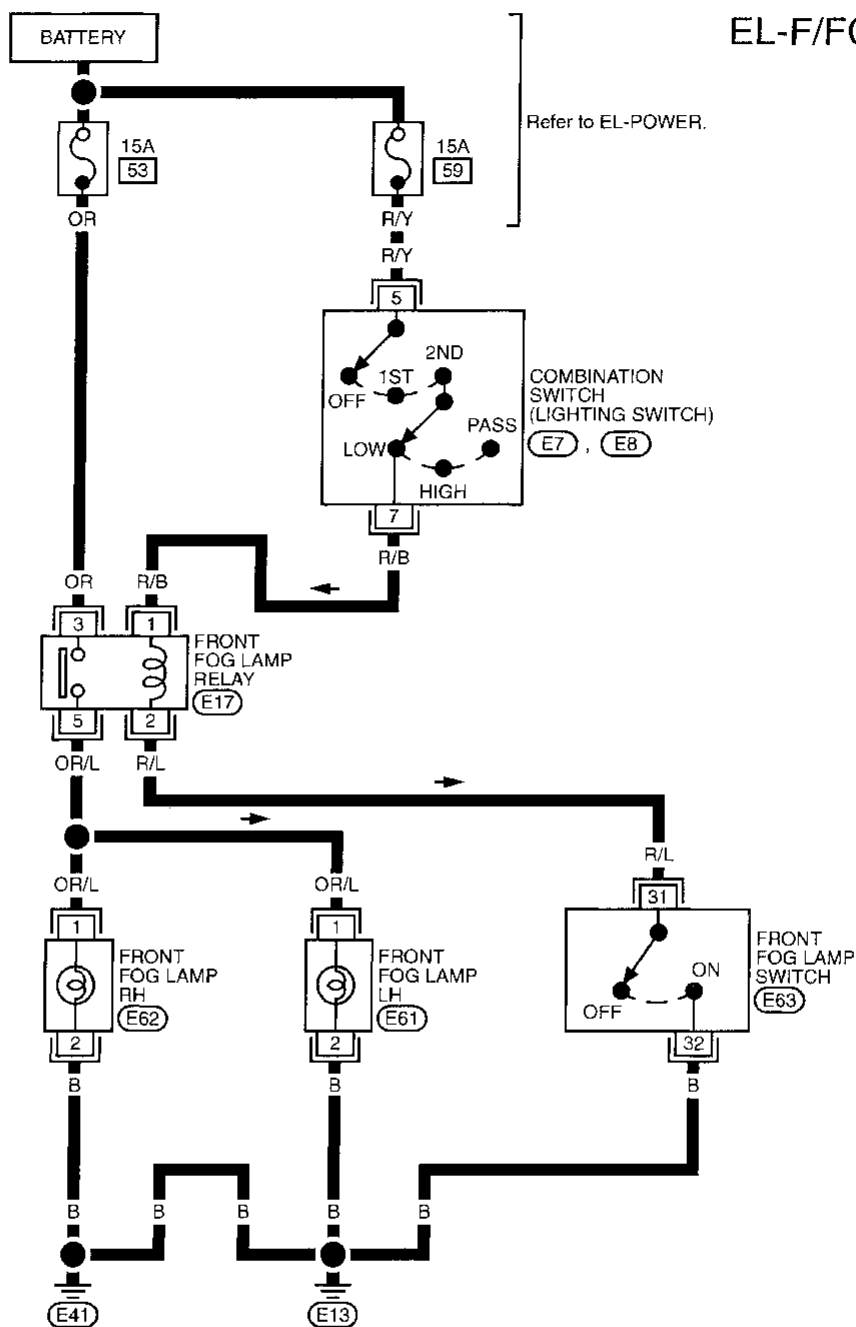

EXTERIOR LAMP

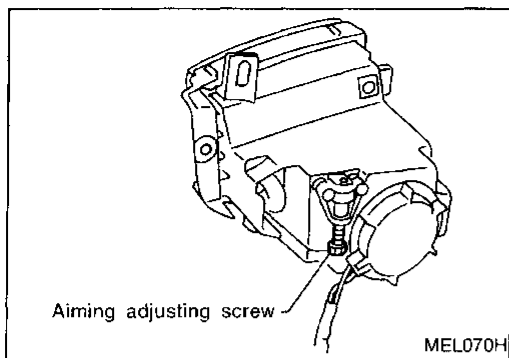


Front Fog Lamp Aiming Adjustment


Before performing aiming adjustment, make sure of the following.

- Keep all tires inflated to correct pressure.
- Place vehicle on level ground.
- See that vehicle is unloaded (except for full levels of coolant, engine oil and fuel, and spare tire, jack, and tools). Have the driver or equivalent weight placed in driver's seat.

Adjust aiming in the vertical direction by turning the adjusting screw.

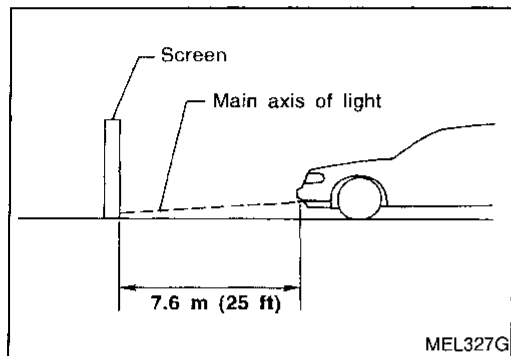

- Set the distance between the screen and the center of the fog lamp lens as shown at left.
- Turn front fog lamps ON.

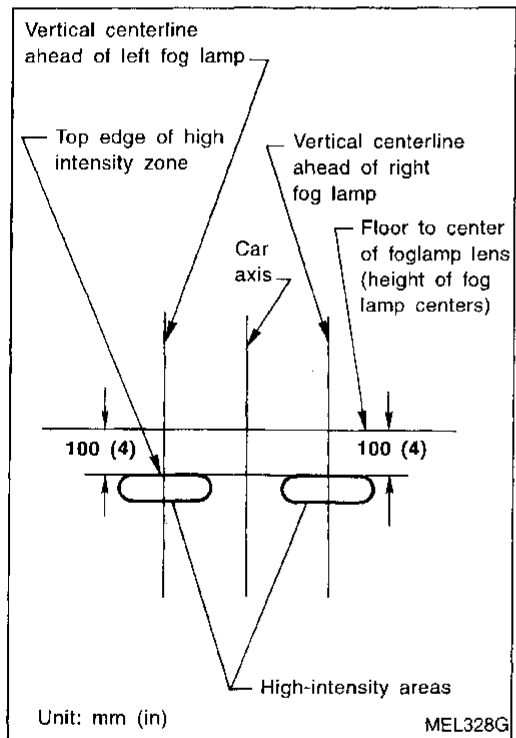

- Adjust front fog lamps so that the top edge of the high intensity zone is 100 mm (4 in) below the height of the fog lamp centers as shown at left.

- When performing adjustment, if necessary, cover the headlamps and opposite fog lamp.

Bulb Specifications

Item	Wattage (W)
Front fog lamp	55

EXTERIOR LAMP

Turn Signal and Hazard Warning Lamps/ System Description

TURN SIGNAL OPERATION

With the hazard switch in the OFF position and the ignition switch in the ON or START position, power is supplied

- through 7.5A fuse [No. 11], located in the fuse block (J/B)]
- to hazard switch terminal 2
- through terminal 1 of the hazard switch
- to combination flasher unit terminal 1
- through terminal 3 of the combination flasher unit
- to turn signal switch terminal 1.

Ground is supplied to combination flasher unit terminal 2 through body grounds M4 and M66.

LH turn

When the turn signal switch is moved to the LH position, power is supplied from turn signal switch terminal 3 to

- front turn signal lamp LH terminal 2
- combination meter terminal 13
- rear combination lamp LH terminal 5.

Ground is supplied to the front turn signal lamp LH terminal 1 through body grounds E13 and E41.

Ground is supplied to the rear combination lamp LH terminal 6 through body grounds B11, B22 and D210.

Ground is supplied to combination meter terminal 35 through body grounds M4 and M77.

With power and ground supplied, the combination flasher unit controls the flashing of the LH turn signal lamps.

RH turn

When the turn signal switch is moved to the RH position, power is supplied from turn signal switch terminal 2 to

- front turn signal lamp RH terminal 2
- combination meter terminal 41
- rear combination lamp RH terminal 5.

Ground is supplied to the front turn signal lamp RH terminal 1 through body grounds E13 and E41.

Ground is supplied to the rear combination lamp RH terminal 6 through body grounds B55 and B75.

Ground is supplied to combination meter terminal 35 through body grounds M4 and M77.

With power and ground supplied, the combination flasher unit controls the flashing of the RH turn signal lamps.

HAZARD LAMP OPERATION

Power is supplied at all times to hazard switch terminal 3 through:

- 15A fuse [No. 14], located in the fuse block (J/B)].

With the hazard switch in the ON position, power is supplied

- through terminal 1 of the hazard switch
- to combination flasher unit terminal 1
- through terminal 3 of the combination flasher unit
- to hazard switch terminal 4.

Ground is supplied to combination flasher unit terminal 2 through body grounds M4 and M66.

Power is supplied through terminal 5 of the hazard switch to

- front turn signal lamp LH terminal 2
- combination meter terminal 13
- rear combination lamp LH terminal 5.

Power is supplied through terminal 6 of the hazard switch to

- front turn signal lamp RH terminal 2
- combination meter terminal 41
- rear combination lamp RH terminal 5.

Ground is supplied to terminal 1 of each front turn signal lamp through body grounds E13 and E41.

Ground is supplied to terminal 6 of the rear combination lamp LH through body grounds B11, B22 and D210.

Ground is supplied to terminal 6 of the rear combination lamp RH through body grounds B55 and B75.

Ground is supplied to combination meter terminal 35 through body grounds M4 and M77.

With power and ground supplied, the combination flasher unit controls the flashing of the hazard warning lamps.

EXTERIOR LAMP

Turn Signal and Hazard Warning Lamps/ System Description (Cont'd)

MULTI-REMOTE CONTROL SYSTEM OPERATION

Power is supplied at all times

- through 15A fuse [No. 14], located in the fuse block (J/B)]
- to multi-remote control relay-1 terminals ①, ③ and ⑥.

Ground is supplied to multi-remote control relay-1 terminal ②, when the multi-remote control system is triggered through the smart entrance control unit.

Refer to "MULTI-REMOTE CONTROL SYSTEM", EL-186.

The multi-remote control relay-1 is energized.

Power is supplied through terminal ⑦ of the multi-remote control relay-1

- to front turn signal lamp LH terminal ②
- to combination meter terminal ⑬
- to rear combination lamp LH terminal ⑤.

Power is supplied through terminal ⑤ of the multi-remote control relay-1

- to front turn signal lamp RH terminal ②
- to combination meter terminal ④
- to rear combination lamp RH terminal ⑤.

Ground is supplied to terminal ① of each front turn signal lamp through body grounds (E13) and (E4).

Ground is supplied to terminal ⑥ of the rear combination lamp LH through body grounds (B11), (B22) and (D210).

Ground is supplied to terminal ⑥ of the rear combination lamp RH through body grounds (B55) and (B75).

Ground is supplied to combination meter terminal ⑳ through body grounds (M4) and (M77).

With power and ground supplied, the smart entrance control unit controls the flashing of the hazard warning lamps.

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT


HA

EL

IDX

EXTERIOR LAMP


Turn Signal and Hazard Warning Lamps/ Schematic

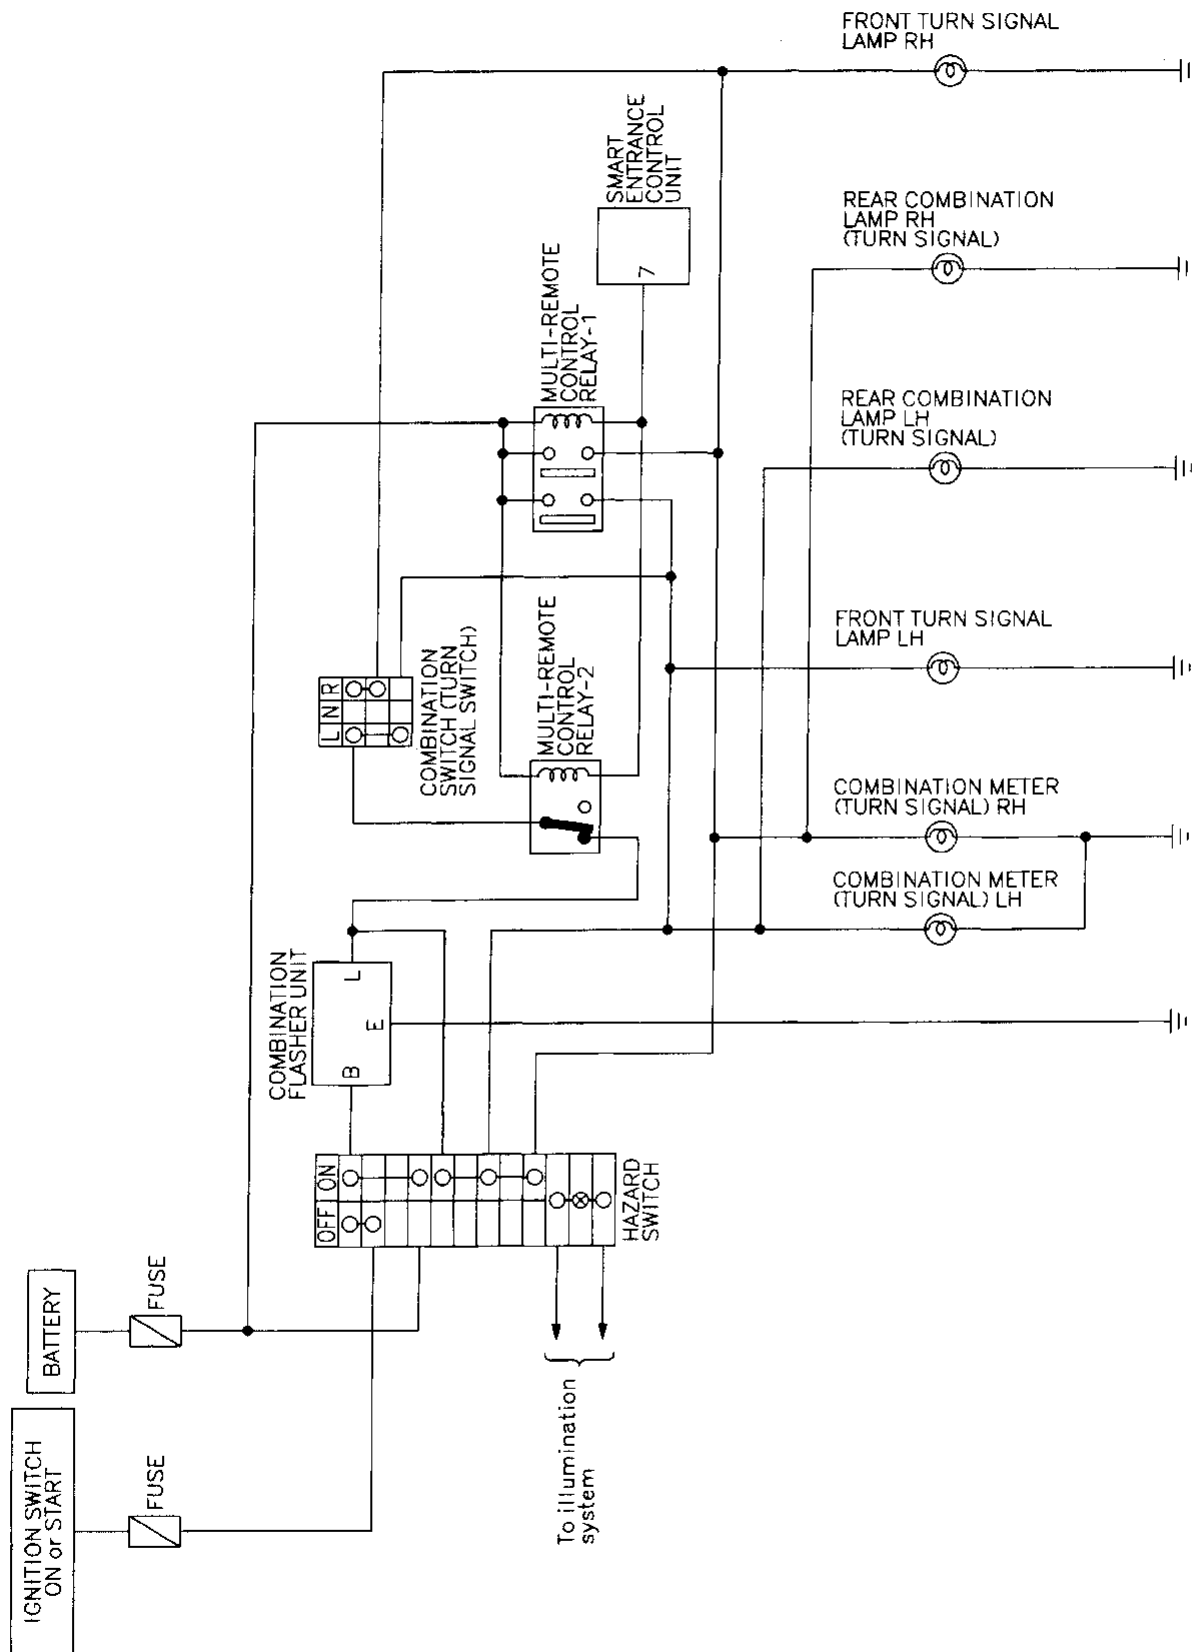




EXTERIOR LAMP

Turn Signal and Hazard Warning Lamps/Wiring Diagram — TURN —


EL-TURN-01

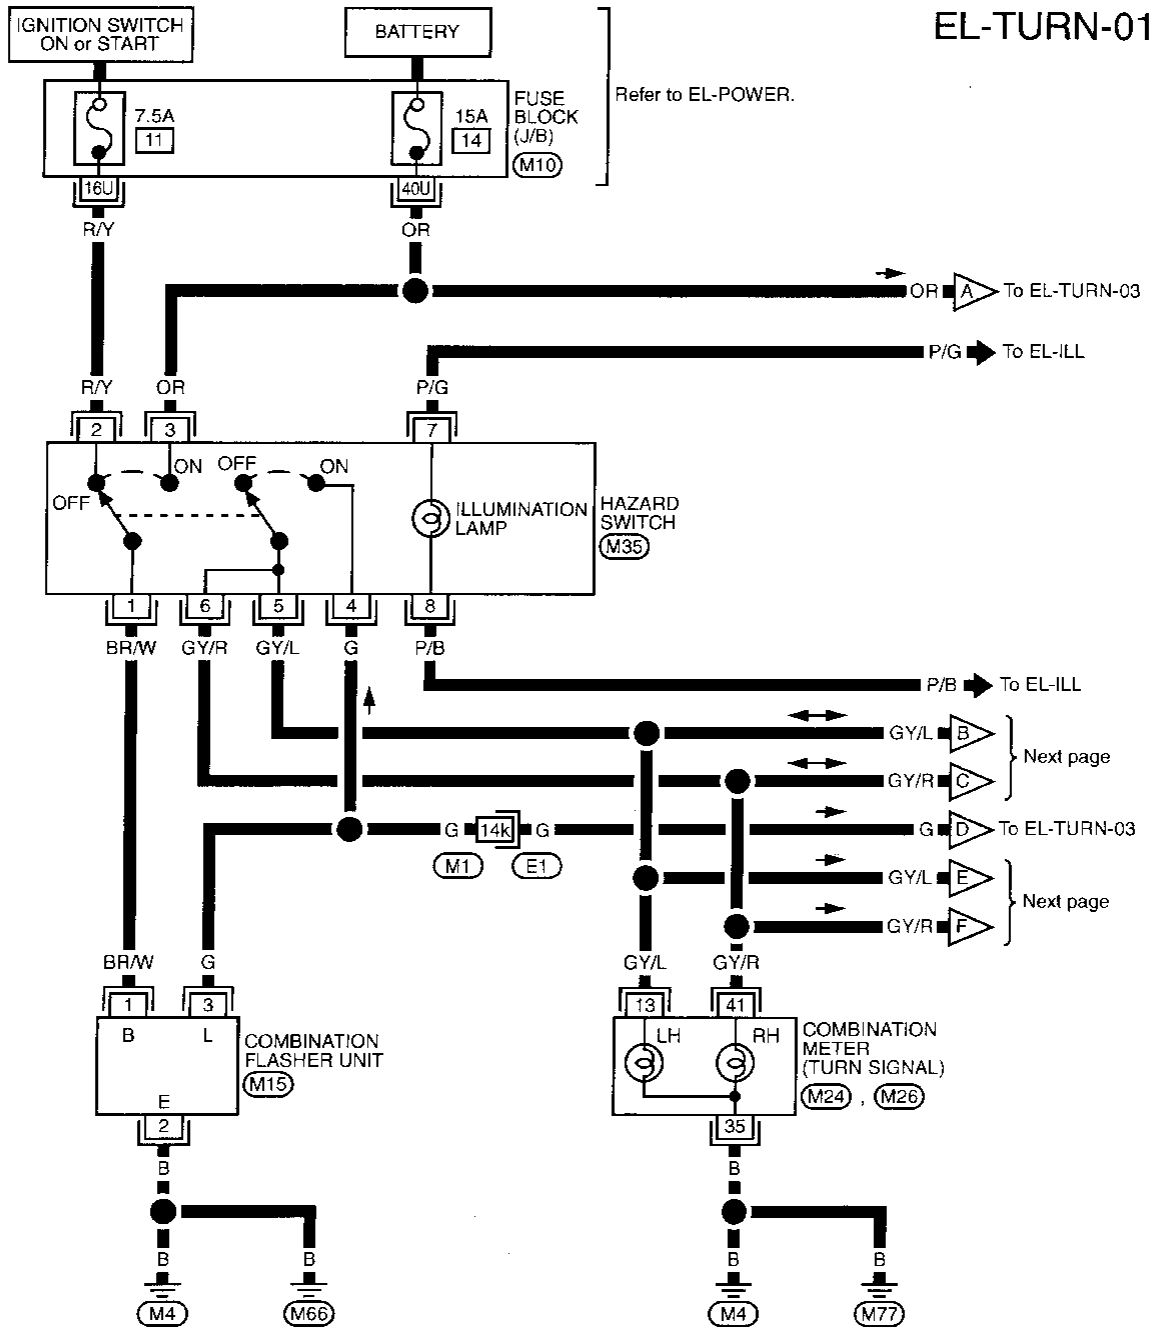

GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA



Refer to last page (Foldout page).







IDX

EXTERIOR LAMP

Turn Signal and Hazard Warning Lamps/Wiring Diagram — TURN — (Cont'd)

EL-TURN-02

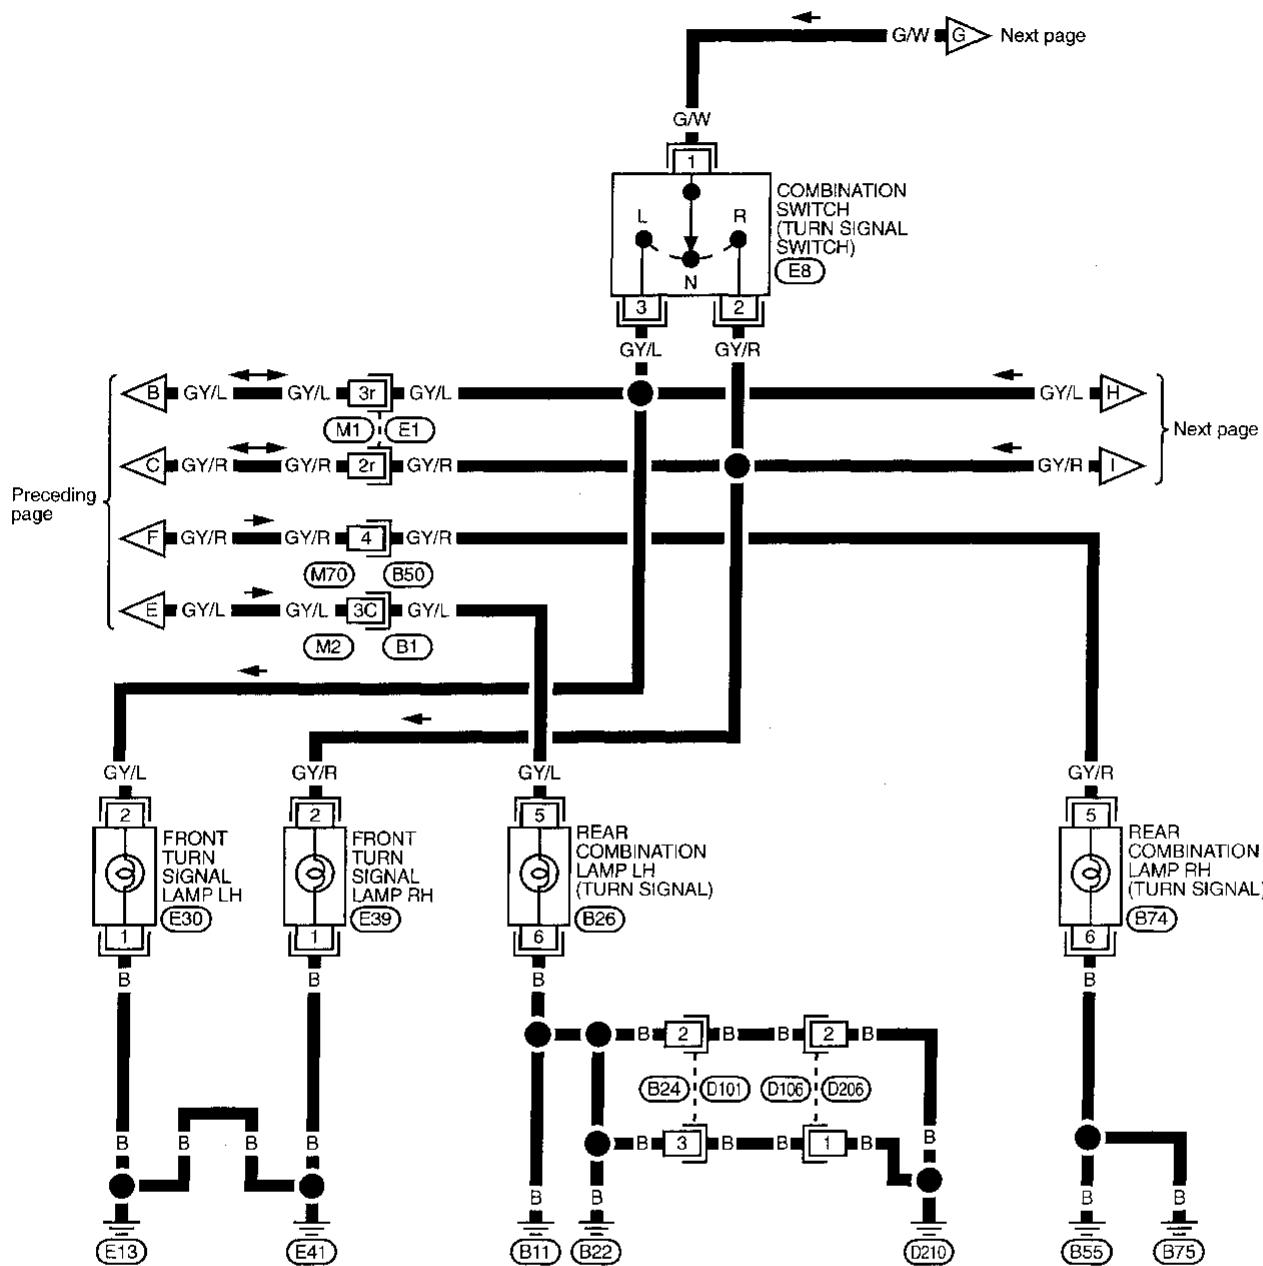

Refer to last page (Foldout page).

- (E1), (M1)
- (M2), (B1)

EXTERIOR LAMP

Turn Signal and Hazard Warning Lamps/Wiring Diagram — TURN — (Cont'd)

EL-TURN-03

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST




RS

BT

HA

EL

IDX

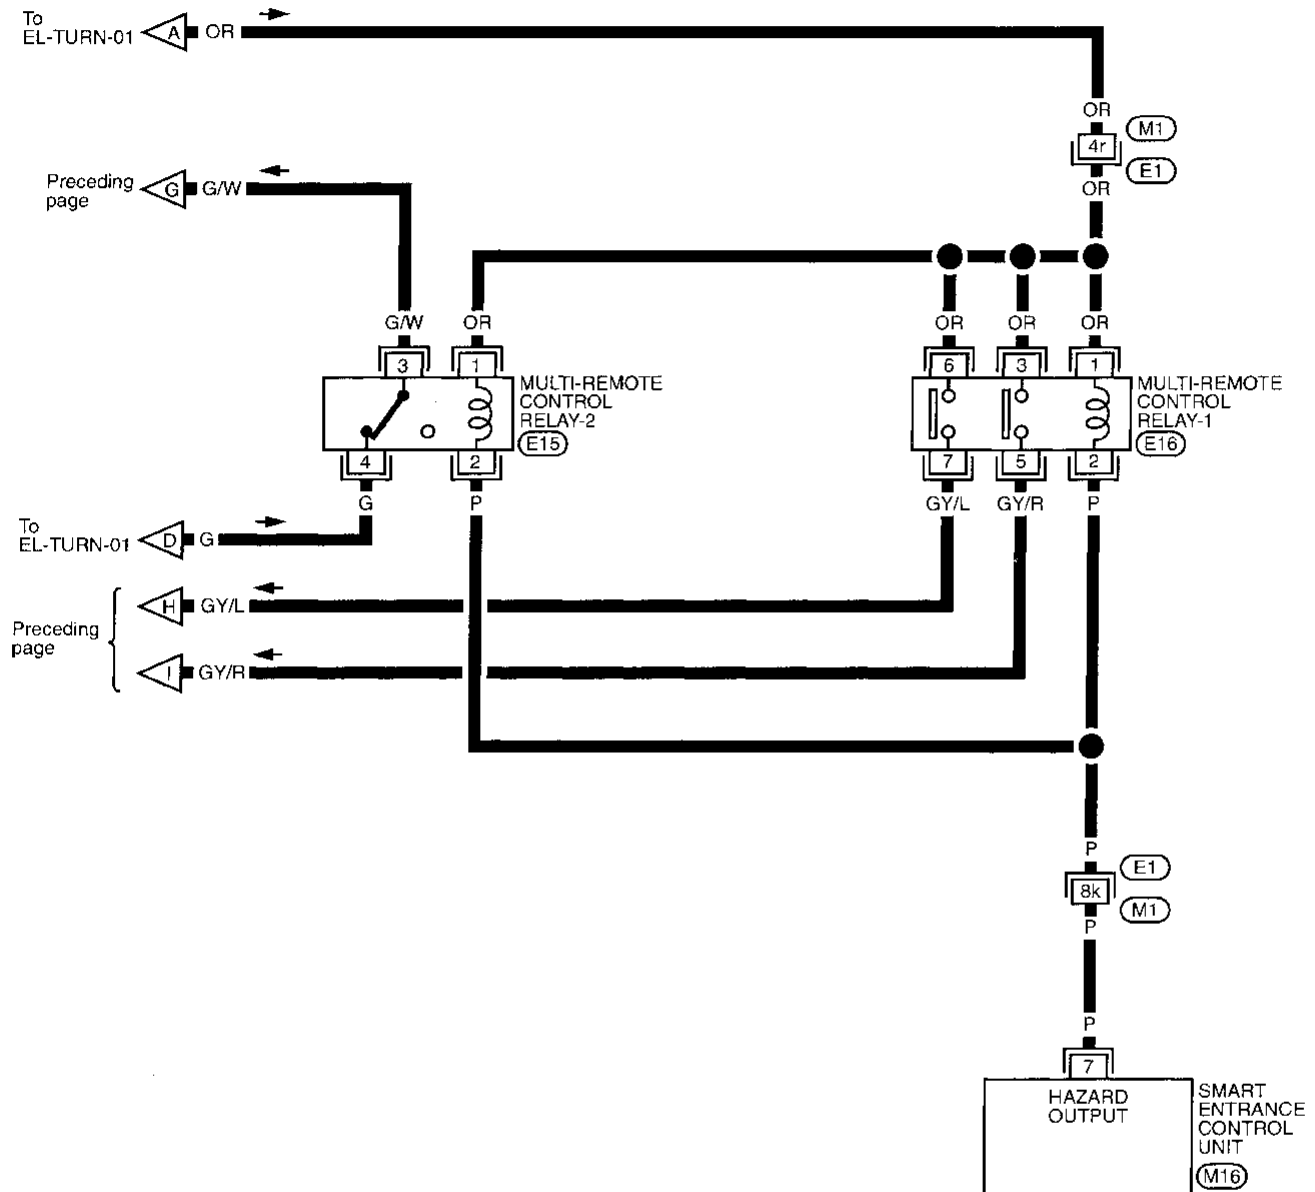


Refer to last page (Foldout page).

(E1), (M1)

EXTERIOR LAMP

Turn Signal and Hazard Warning Lamps/ Trouble Diagnoses

Symptom	Possible cause	Repair order
Turn signal and hazard warning lamps do not operate.	<ol style="list-style-type: none"> Hazard switch Combination flasher unit Open in combination flasher unit circuit 	<ol style="list-style-type: none"> Check hazard switch. Refer to combination flasher unit check. Check wiring to combination flasher unit for open circuit.
Turn signal lamps do not operate but hazard warning lamps operate.	<ol style="list-style-type: none"> 7.5A fuse Hazard switch Turn signal switch Open in turn signal switch circuit 	<ol style="list-style-type: none"> Check 7.5A fuse [No. 11], located in fuse block (J/B)]. Turn ignition switch ON and verify battery positive voltage is present at terminal ② of hazard switch. Check hazard switch. Check turn signal switch. Check G wire between combination flasher unit and turn signal switch for open circuit.
Hazard warning lamps do not operate but turn signal lamps operate.	<ol style="list-style-type: none"> 15A fuse Hazard switch Open in hazard switch circuit 	<ol style="list-style-type: none"> Check 15A fuse [No. 14], located in fuse block (J/B)]. Verify battery positive voltage is present at terminal ③ of hazard switch. Check hazard switch. Check G wire between combination flasher unit and hazard switch for open circuit.
Front turn signal lamp LH or RH does not operate.	<ol style="list-style-type: none"> Bulb Grounds (E13) and (E41) 	<ol style="list-style-type: none"> Check bulb. Check grounds (E13) and (E41).
Rear turn signal lamp LH does not operate.	<ol style="list-style-type: none"> Bulb Grounds (B11), (B22) and (D210) 	<ol style="list-style-type: none"> Check bulb. Check grounds (B11), (B22) and (D210).
Rear turn signal lamp RH does not operate.	<ol style="list-style-type: none"> Bulb Grounds (B55) and (B75) 	<ol style="list-style-type: none"> Check bulb. Check grounds (B55) and (B75).
LH and RH turn indicators do not operate.	<ol style="list-style-type: none"> Ground 	<ol style="list-style-type: none"> Check grounds (M4) and (M77).
LH or RH turn indicator does not operate.	<ol style="list-style-type: none"> Bulb 	<ol style="list-style-type: none"> Check bulb in combination meter.

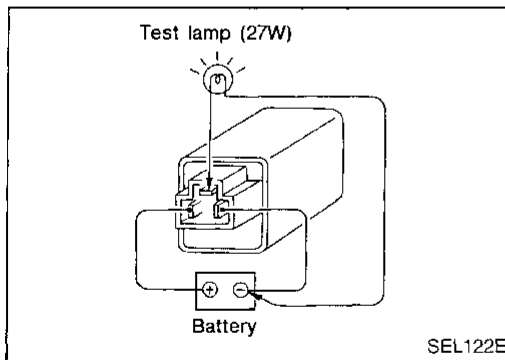

Combination Flasher Unit Check

- Before checking, ensure that bulbs meet specifications.
- Connect a battery and test lamp to the combination flasher unit, as shown. Combination flasher unit is properly functioning if it blinks when power is supplied to the circuit.

EXTERIOR LAMP

Bulb Specifications

Item	Wattage (W)	
Headlamp (Semi-sealed beam)		GI
High/Low	65/45 (HB1)	MA
Front fog lamp	55	
Front turn signal lamp	27	EM
Parking lamp	7	
Rear combination lamp		LC
Turn signal lamp	27	
Stop/Tail lamp	27/8	
Back-up lamp	27	EC
License plate lamp	10	
High-mounted stop lamp	5	FE

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

INTERIOR LAMP

Illumination/System Description

Power is supplied at all times

- through 10A fuse [No. 61], located in the fuse block (J/B)
- to lighting switch terminal ⑩.

The lighting switch must be in the 1ST or 2ND position for illumination.

The illumination control switch that controls the amount of current to the illumination system. As the amount of current increases, the illumination becomes brighter.


The following chart shows the power and ground connector terminals for the components included in the illumination system.

Component	Connector No.	Power terminal	Ground terminal
Illumination control switch	M19	①	③
Combination meter	M24, M25	⑪	⑫
Cigarette lighter	M57	③	④
Rear wiper switch	M50	⑩	⑪
Compass and thermometer	R4	⑤	②
ASCD main switch	M18	⑤	⑥
Rear window defogger switch	M36	⑤	⑥
Power window main switch	D6	④	⑬
Audio	M48	⑧	⑦
Hazard switch	M35	⑦	⑧
Glass hatch opener switch	M106	①	④
A/C auto amp.	M103	⑬	⑭
A/T indicator	B59	③	④
Ashtray	B76	①	②
Vanity mirror	R3, R5	①	②

The ground for all of the components except for ashtray and vanity mirror are controlled through terminals ② and ③ of the illumination control switch and body grounds ④ and ⑦.

INTERIOR LAMP

Illumination/Schematic


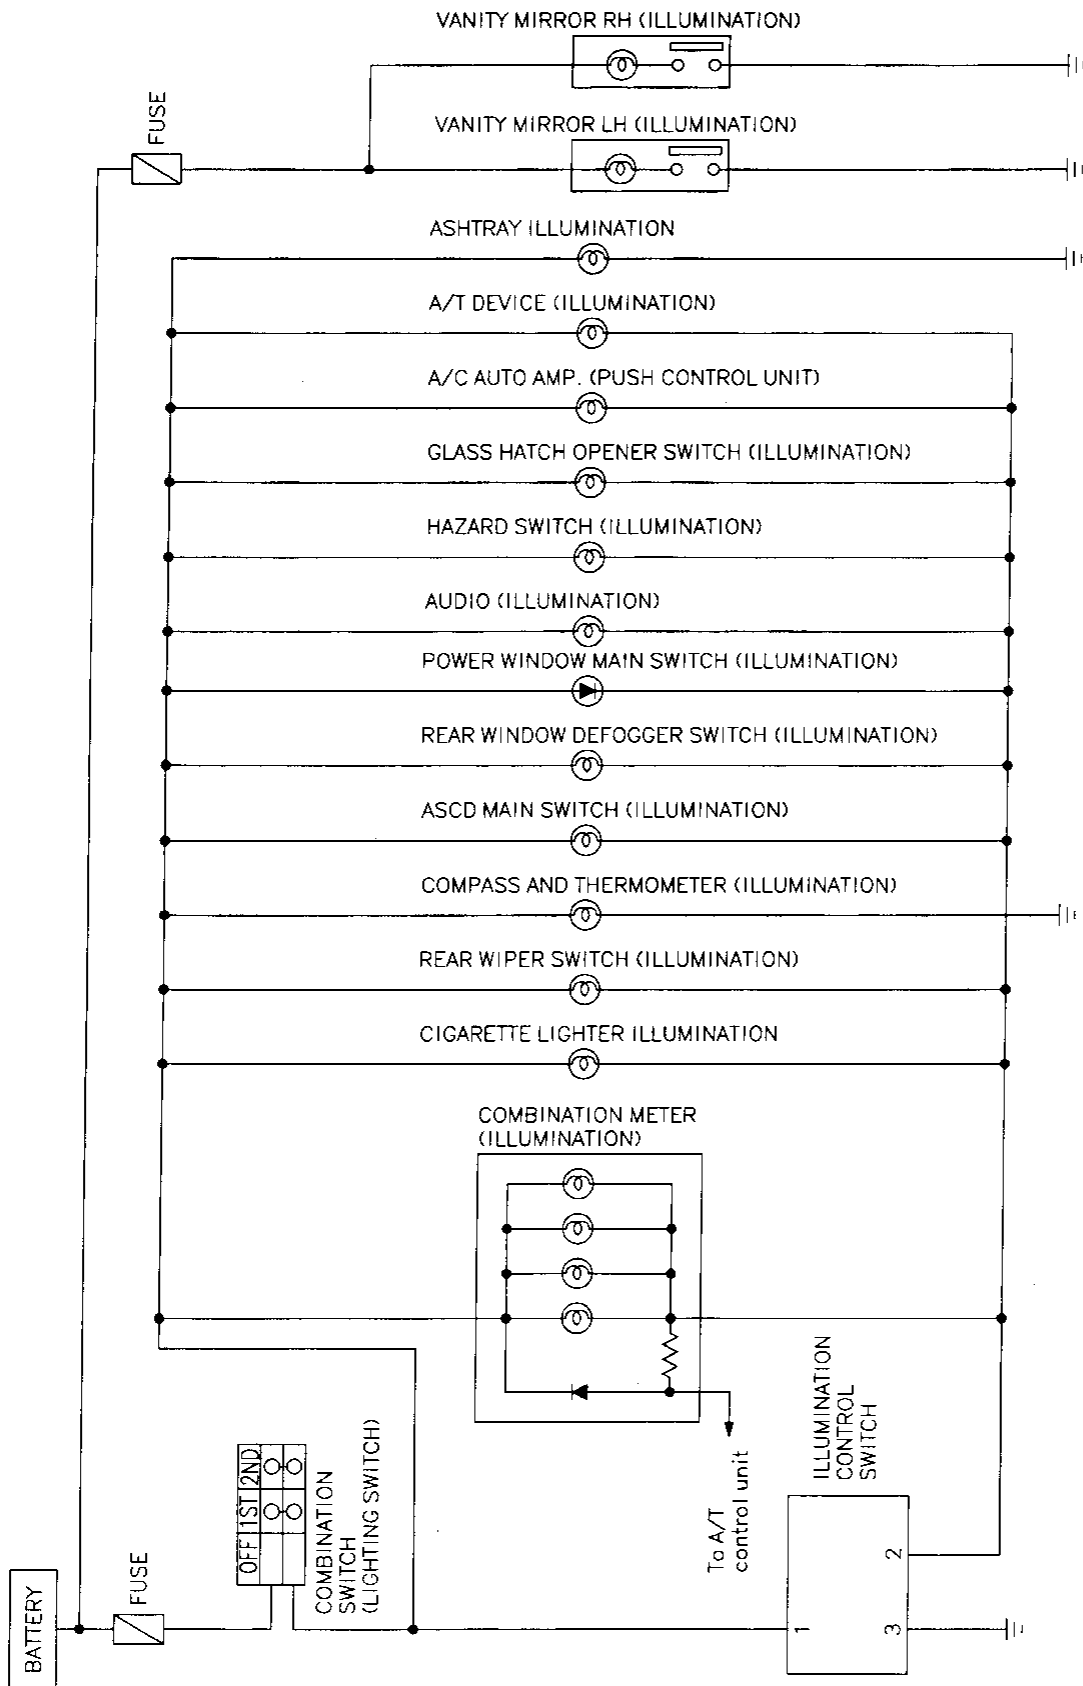


GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

INTERIOR LAMP

Illumination/Wiring Diagram — ILL —

EL-ILL-01

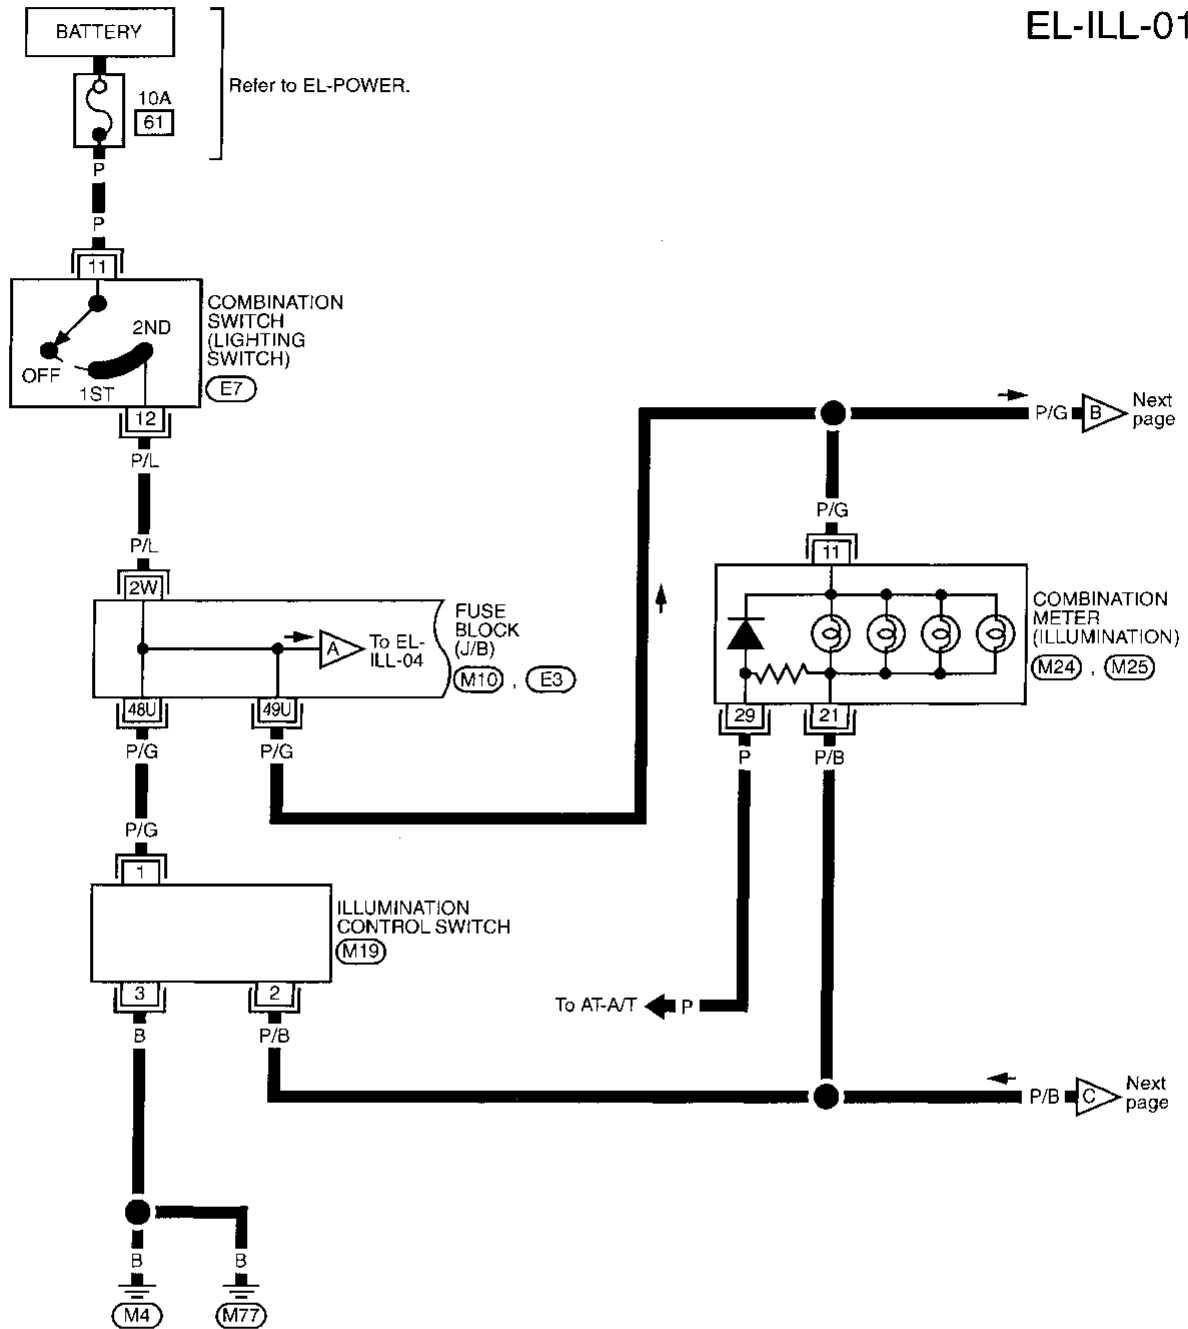

Refer to last page (Foldout page).



(M10)

(E3)

INTERIOR LAMP

Illumination/Wiring Diagram — ILL — (Cont'd)

EL-ILL-02

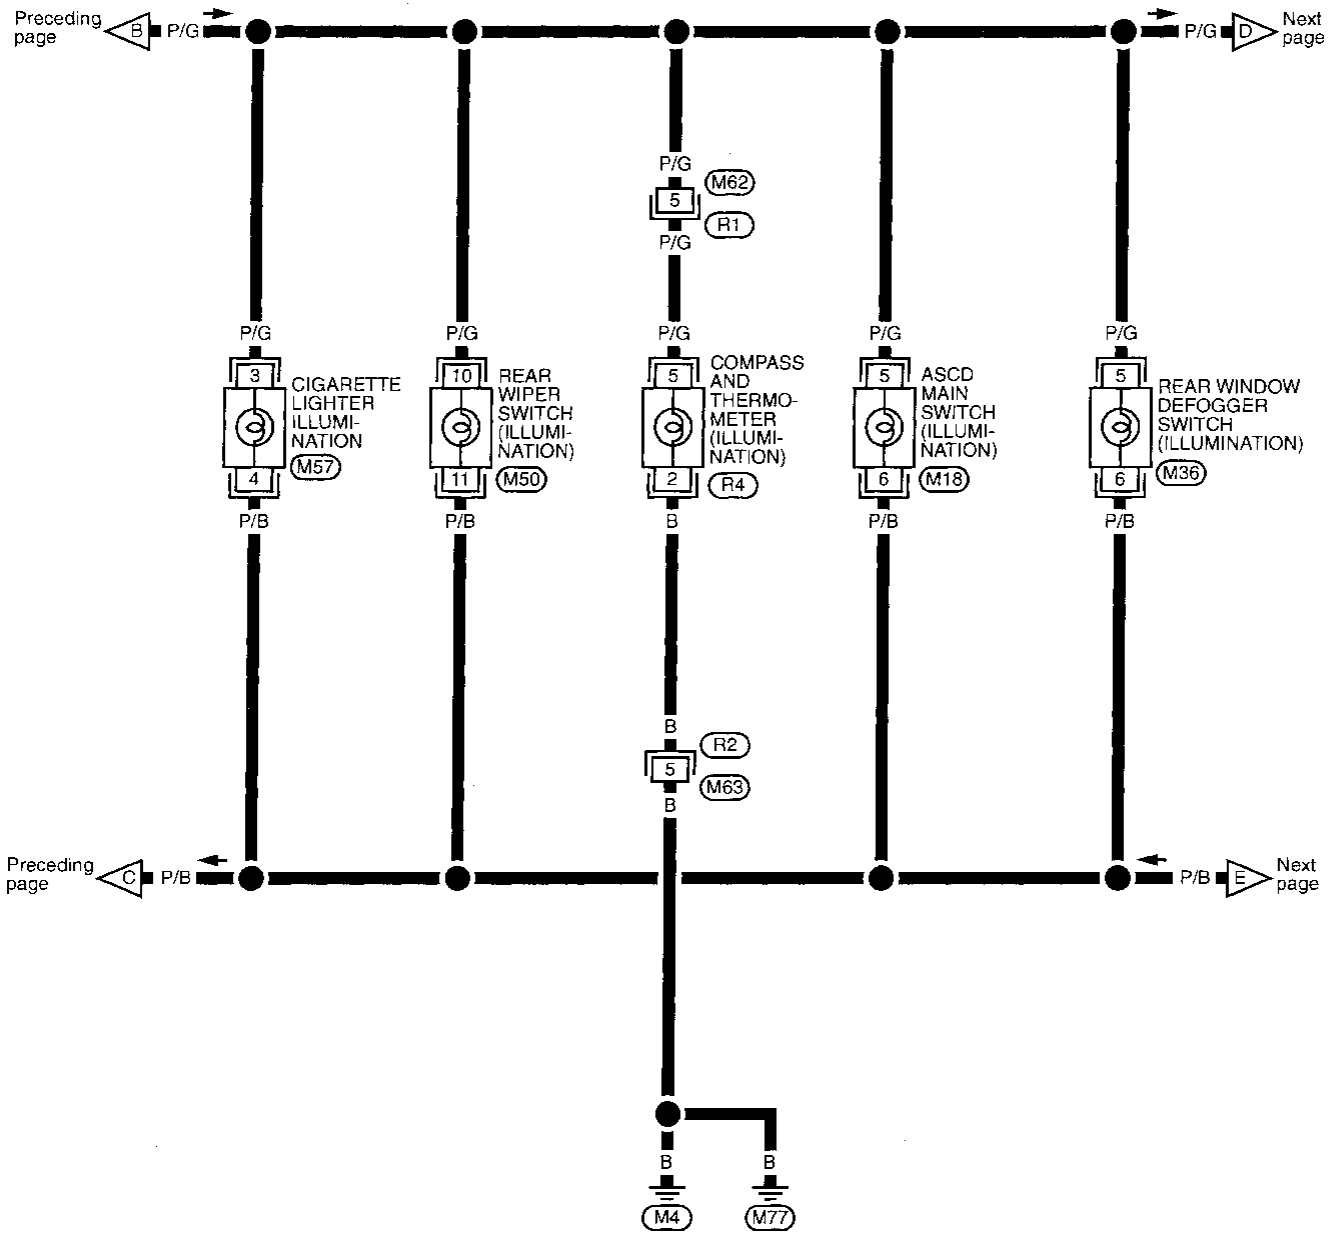

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA








EL

IDX

INTERIOR LAMP

Illumination/Wiring Diagram — ILL — (Cont'd)


EL-ILL-03

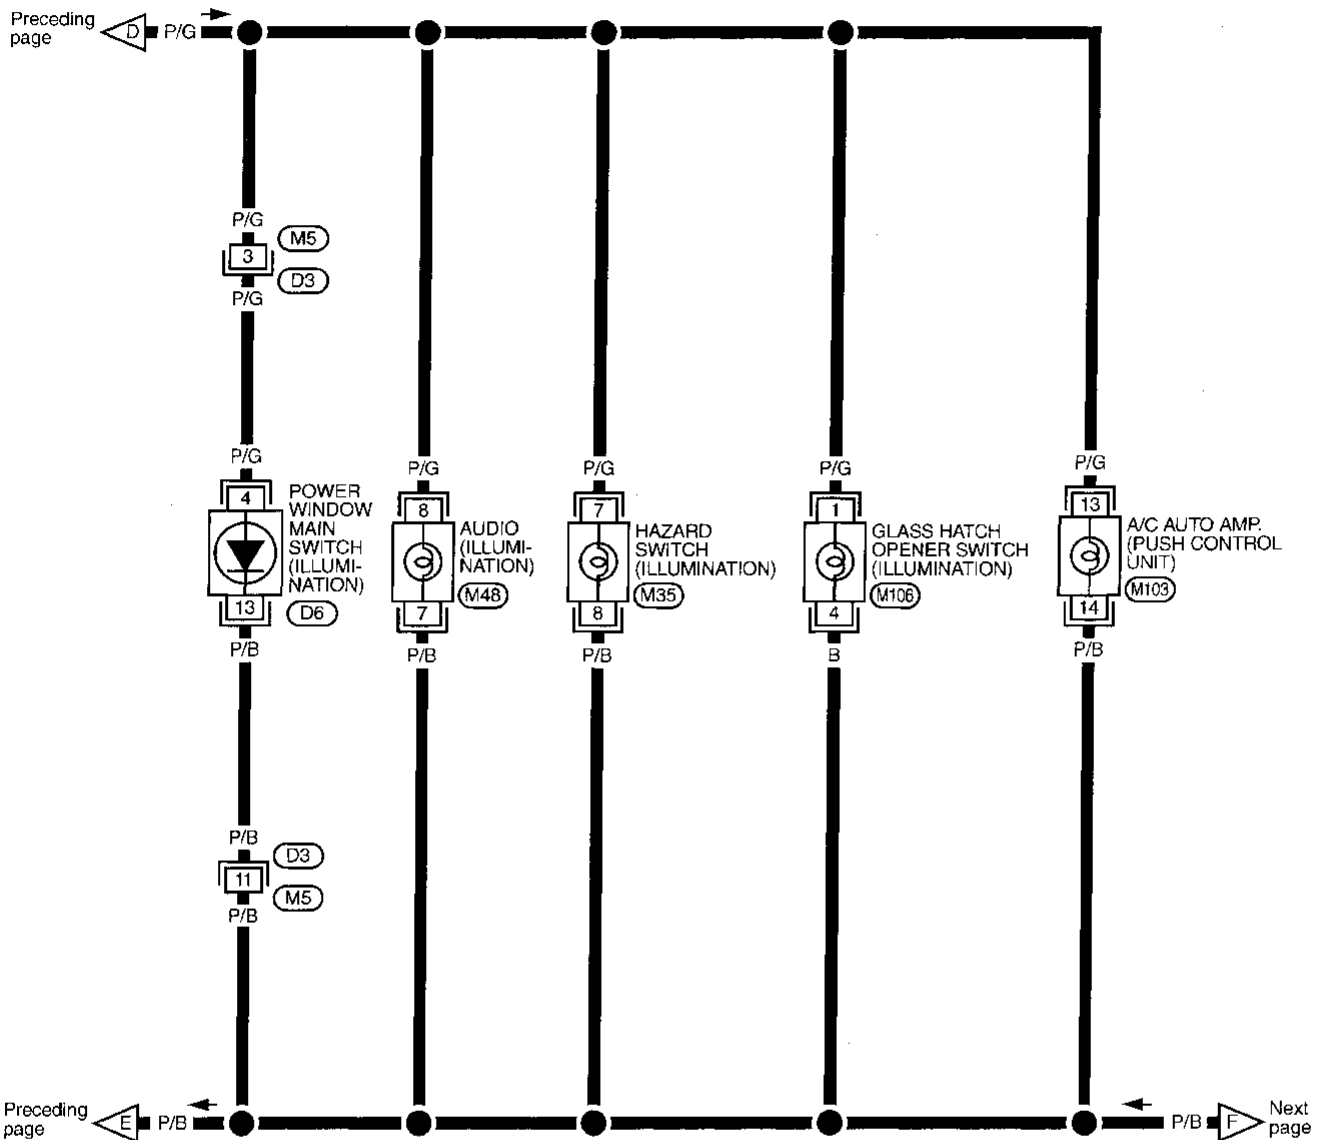

INTERIOR LAMP

Illumination/Wiring Diagram — ILL — (Cont'd)


EL-ILL-04

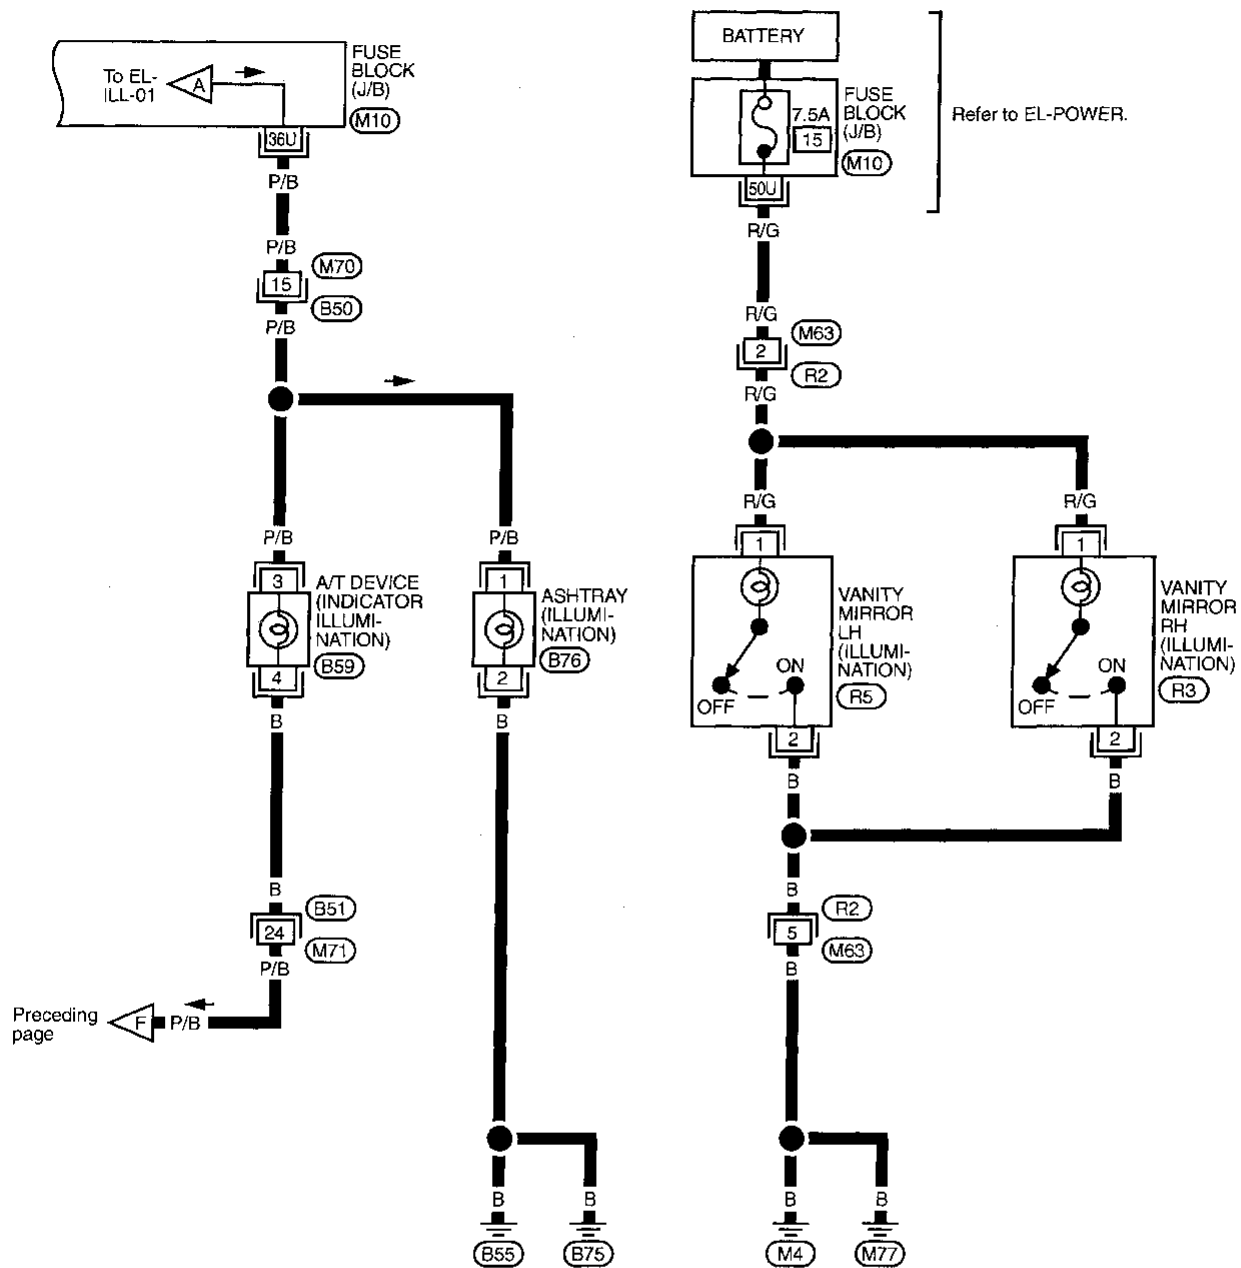

Preceding page

Refer to last page (Foldout page).

(M10)

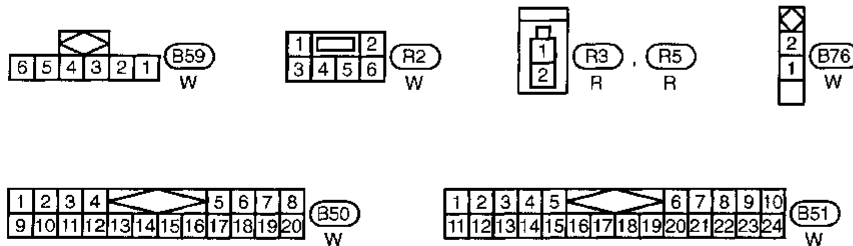

GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT

HA
EL
IDX

INTERIOR LAMP

Interior, Spot and Luggage Room Lamps/ System Description

Power is supplied at all times

- through 7.5A fuse [No. 15], located in the fuse block (J/B)]
- to interior lamp terminal ① ,
- to spot lamp terminal ① and
- to luggage room lamp terminal ① .

INTERIOR LAMP

With interior lamp switch ON, ground is supplied to turn interior lamp ON.

When a door switch is opened with interior lamp switch in DOOR, ground is supplied

- to interior lamp terminal ②
- through diode (M65) terminal ①
- to diode (M65) terminal ②
- through front door switch LH terminal ③ or
- through front door switch RH terminal ③ or
- through rear door switch LH terminal ① or
- through rear door switch RH terminal ① or
- through back door switch terminal ②
- through body ground.

LUGGAGE ROOM LAMP

The luggage room lamp will turn on in the same manner as interior lamp.

SPOT LAMP

With the spot lamp switch in the ON position, ground is supplied

- to spot lamp terminal ②
- through body grounds (M4) and (M7) .


With power and ground supplied, the spot lamp turns ON.

Bulb Specifications

Item	Wattage (W)
Interior lamp	10
Spot lamp	10
Luggage room lamp	10

INTERIOR LAMP

Interior, Spot and Luggage Room Lamps/ Schematic

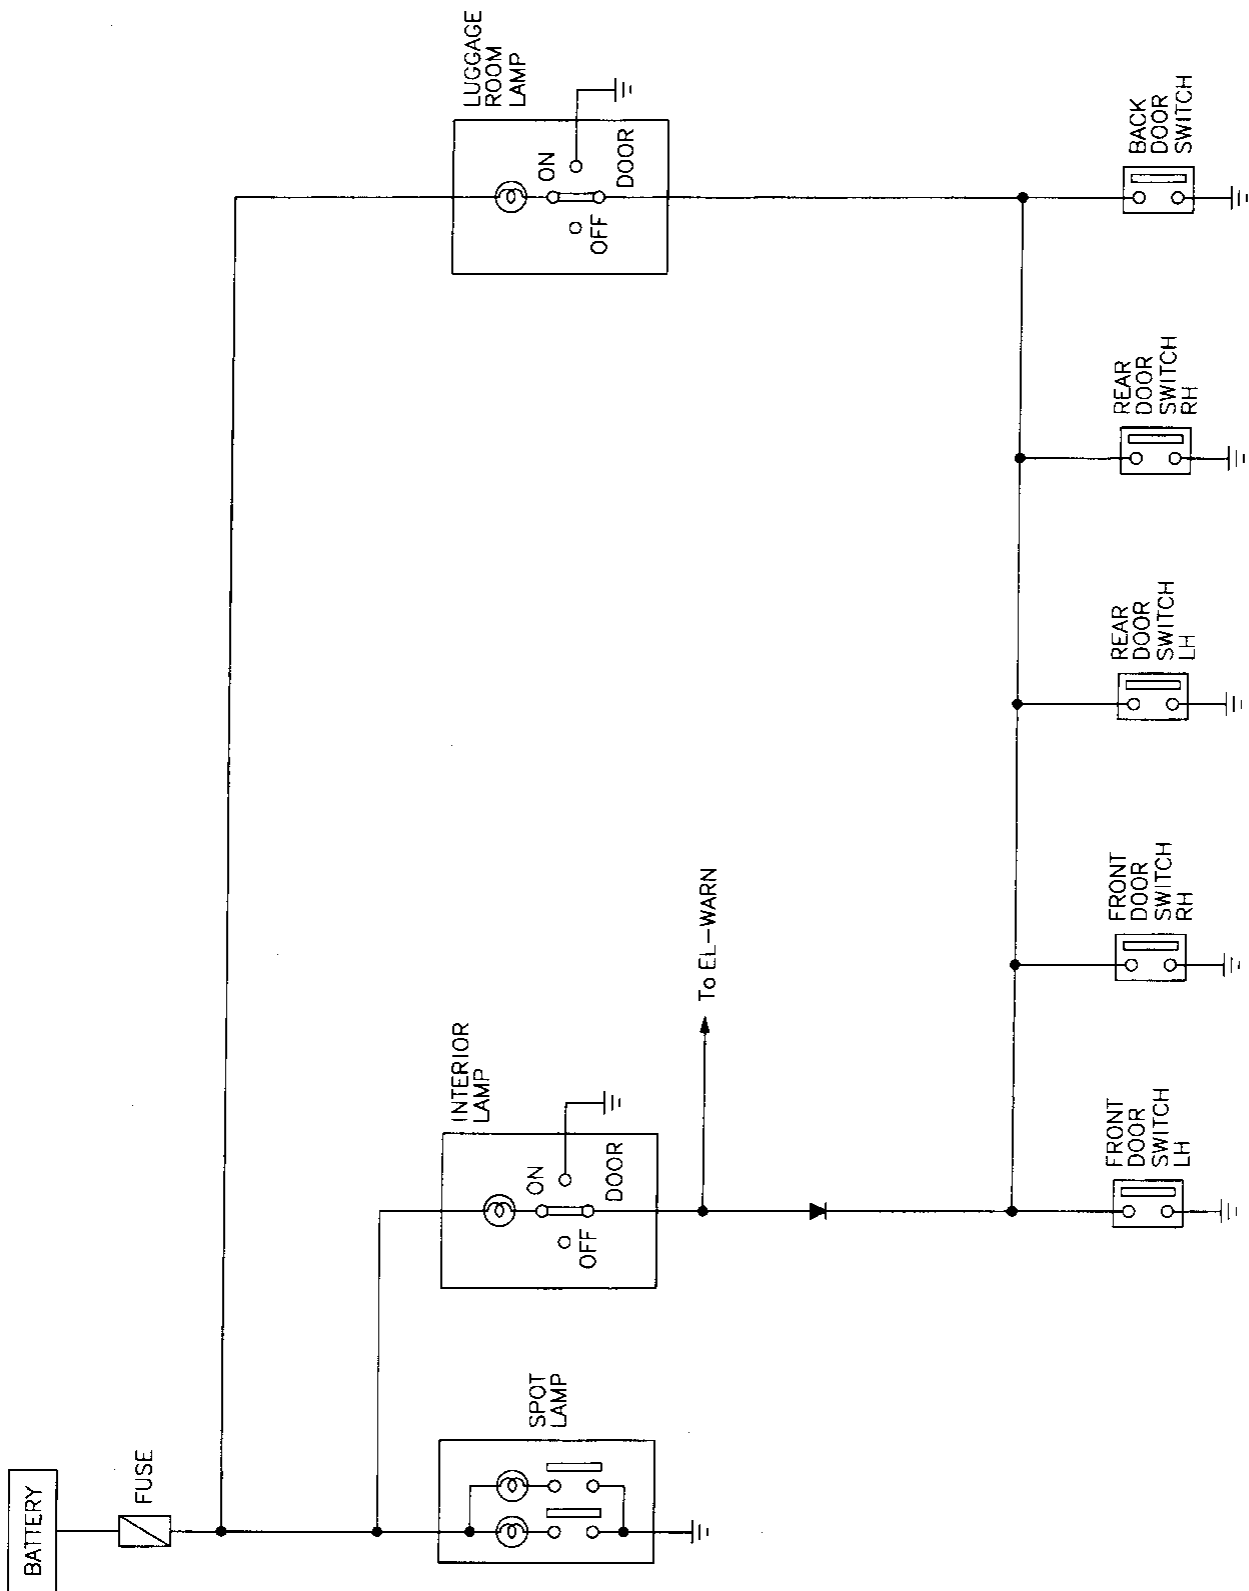

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA




EL

IDX

INTERIOR LAMP

Interior, Spot and Luggage Room Lamps/ Wiring Diagram — INT/L —

EL-INT/L-01


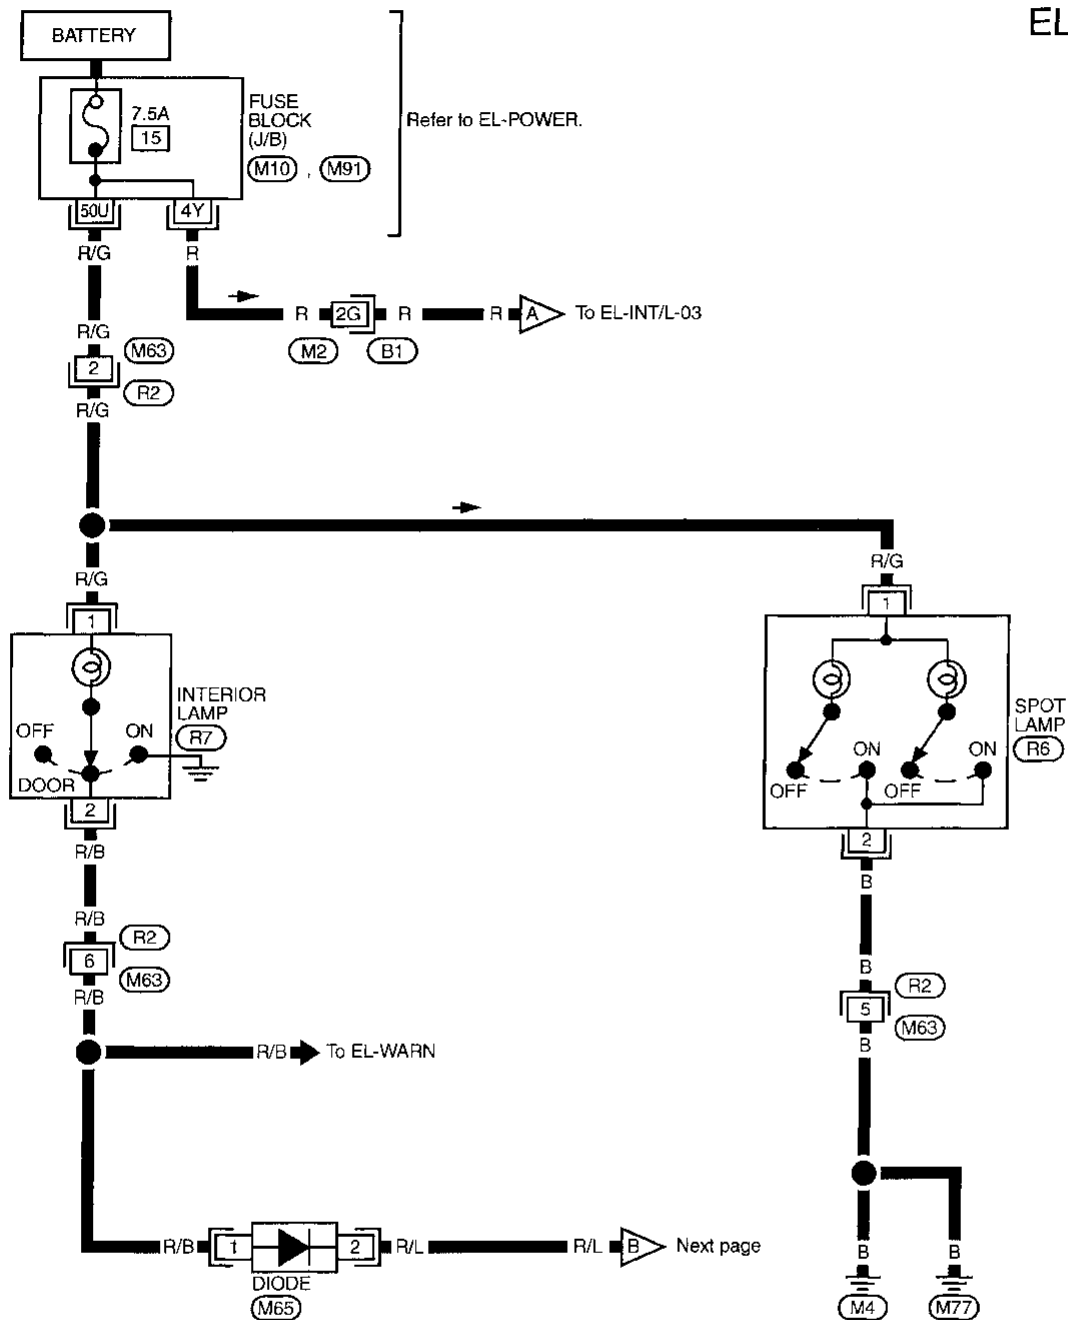


Refer to last page (Foldout page).
 M2 , B1
 M10
 M91

INTERIOR LAMP

Interior, Spot and Luggage Room Lamps/ Wiring Diagram — INT/L — (Cont'd)

EL-INT/L-02

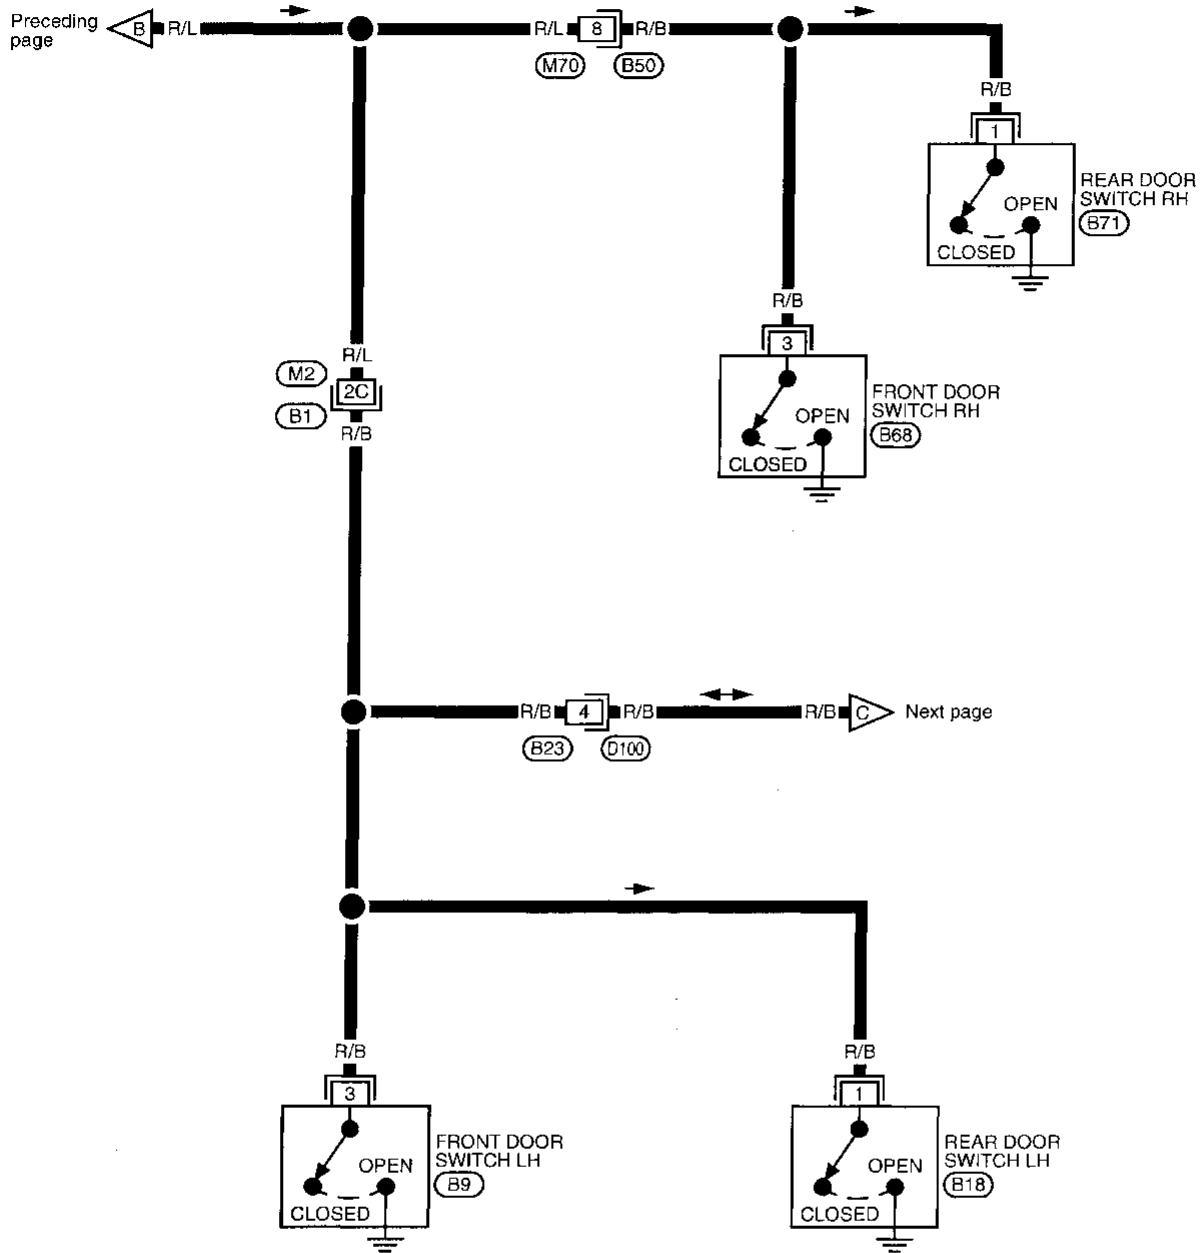

Refer to last page (Foldout page).

M2, B1

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA




EL

IDX


INTERIOR LAMP

Interior, Spot and Luggage Room Lamps/ Wiring Diagram — INT/L — (Cont'd)

EL-INT/L-03

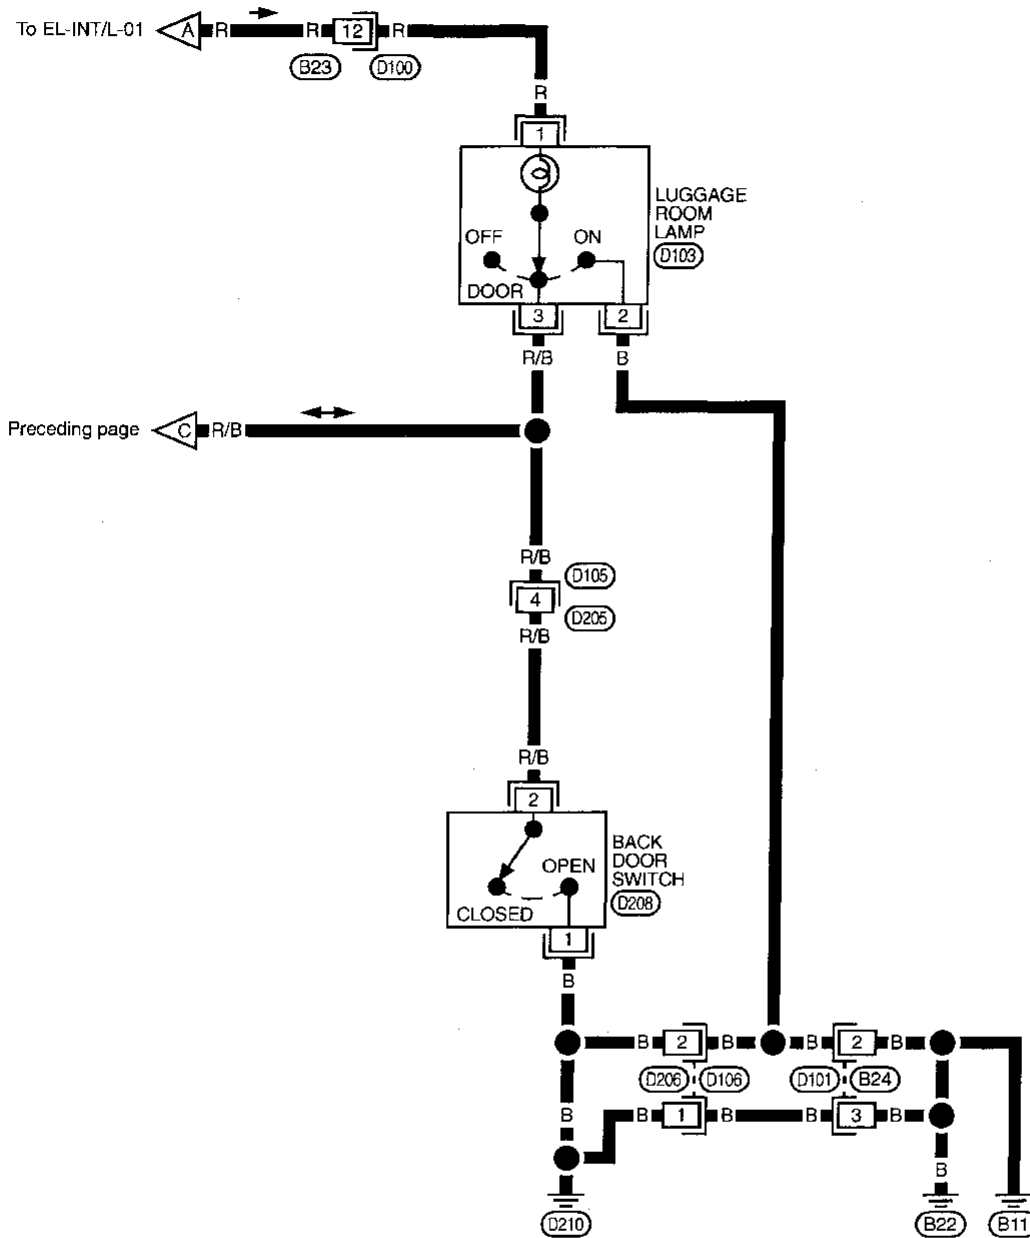

Component Parts and Harness Connector Location

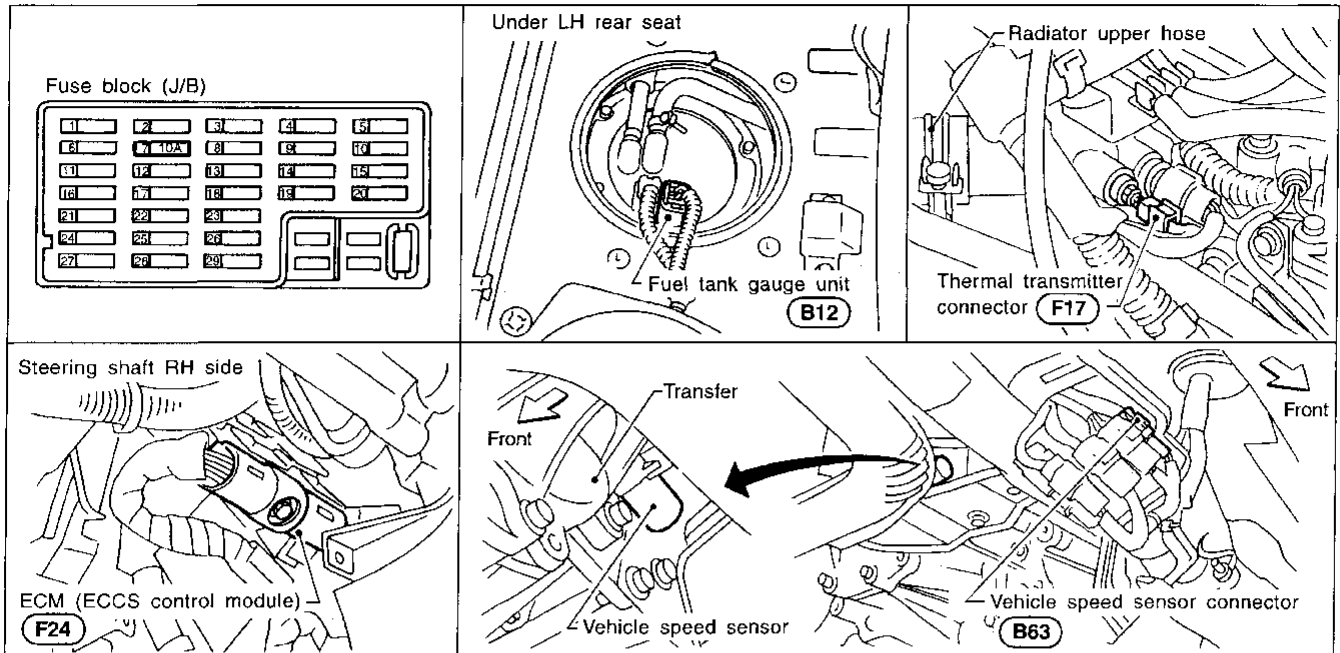

MEL071H

System Description

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse [No. 7], located in the fuse block (J/B)
- to combination meter terminal 15.

Ground is supplied

- to combination meter terminals 23 and 35
- through body grounds M4 and M77.

WATER TEMPERATURE GAUGE

The water temperature gauge indicates the engine coolant temperature. The reading on the gauge is based on the resistance of the thermal transmitter.

As the temperature of the coolant increases, the resistance of the thermal transmitter decreases. A variable ground is supplied to terminal 37 of the combination meter for the water temperature gauge. The needle on the gauge moves from "C" to "H".

TACHOMETER

The tachometer indicates engine speed in revolutions per minute (rpm).

The tachometer is regulated by a signal

- from terminal 3 of the ECM (ECCS control module)
- to combination meter terminal 32 for the tachometer.

FUEL GAUGE

The fuel gauge indicates the approximate fuel level in the fuel tank.

The fuel gauge is regulated by a variable ground signal supplied

- to combination meter terminal 6 for the fuel gauge
- from terminal 3 of the fuel tank gauge unit
- through terminal 2 of the fuel tank gauge unit and
- through body grounds B11, B22 and 0210.

METER AND GAUGES

System Description (Cont'd)


SPEEDOMETER

The vehicle speed sensor provides a voltage signal to the combination meter for the speedometer.

The voltage is supplied

- to combination meter terminals ⑧ and ⑫ for the speedometer
- from terminals ② and ① of the vehicle speed sensor.

The speedometer converts the voltage into the vehicle speed displayed.

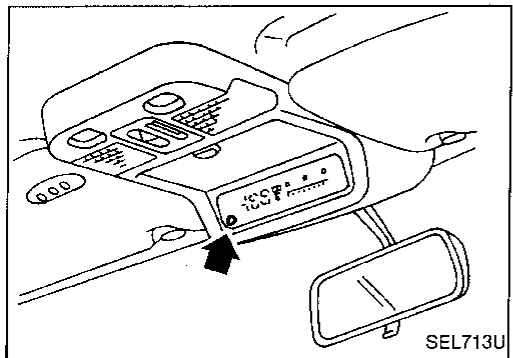

COMPASS AND THERMOMETER

This unit is a display unit which possesses the following functions:

- Function to measure earth magnetism and indicate heading direction of vehicle.
- Function to indicate outside air temperature.
- Function to indicate caution for frozen road surfaces.

Outside temperature display

Push the switch when the ignition key is in the "ACC" or "ON" position. The outside temperature will be displayed in "°F".



- Selecting the indication range
Push the switch to change from "°F" to "°C".
- When the outside temperature drops below freezing point, **ICE** is displayed on the unit.
- When the outside temperature is between 55°C (130°F) and 70°C (158°F), the display shows 55°C (130°F).
- When the outside temperature is lower than -30°C (-20°F) or higher than 70°C (158°F), the display shows only "---" though it is operating. This is not a problem.

Direction display

Push the switch when the ignition key is in the "ACC" or "ON" position. The direction will be displayed.


METER AND GAUGES

Combination Meter

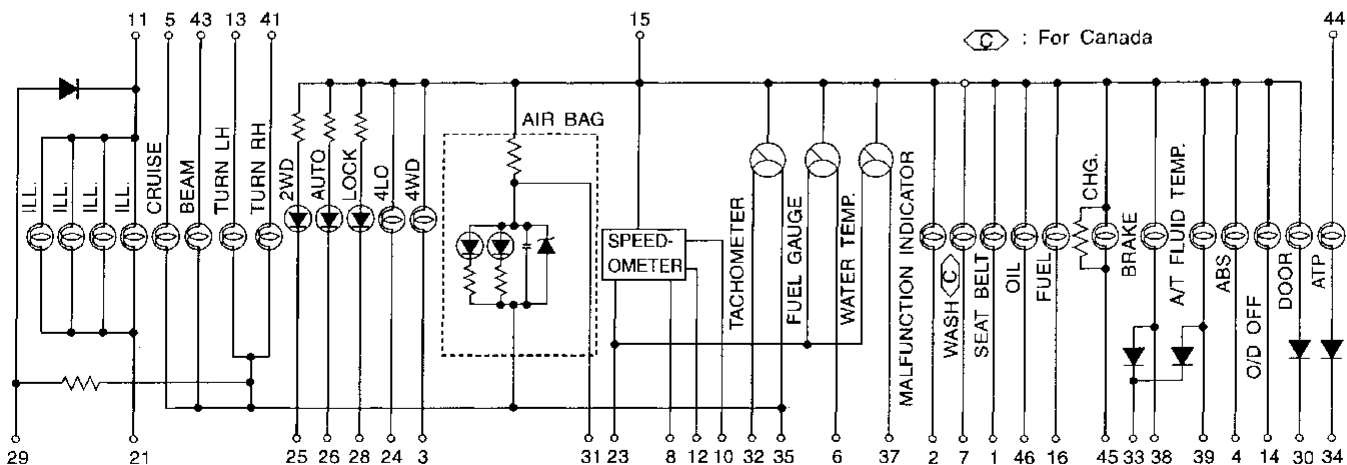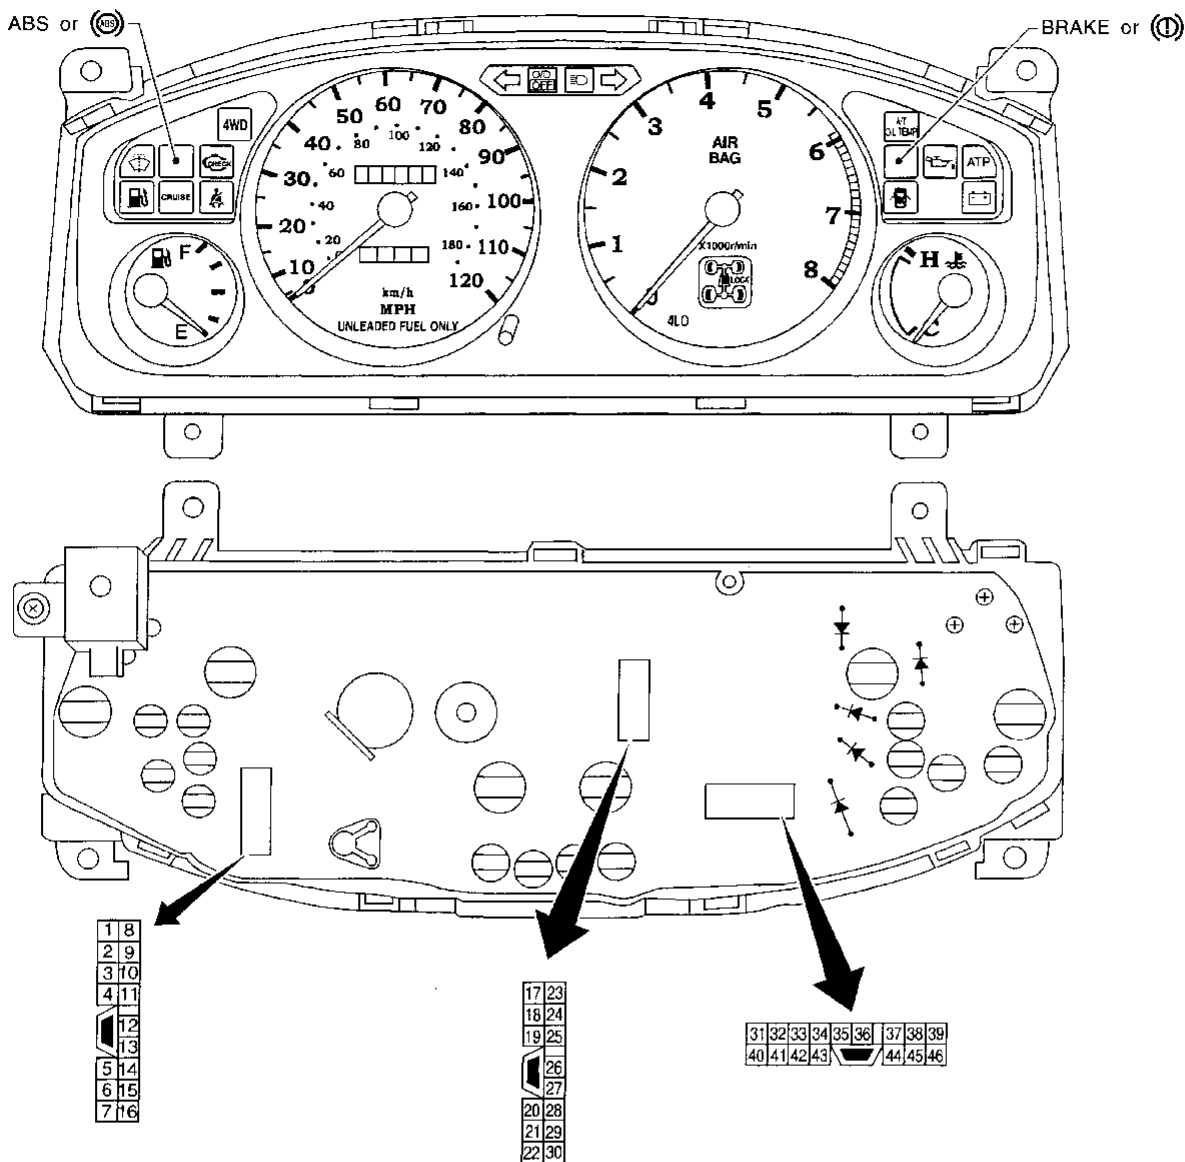





GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

Combination Meter, Compass and Thermometer/Schematic

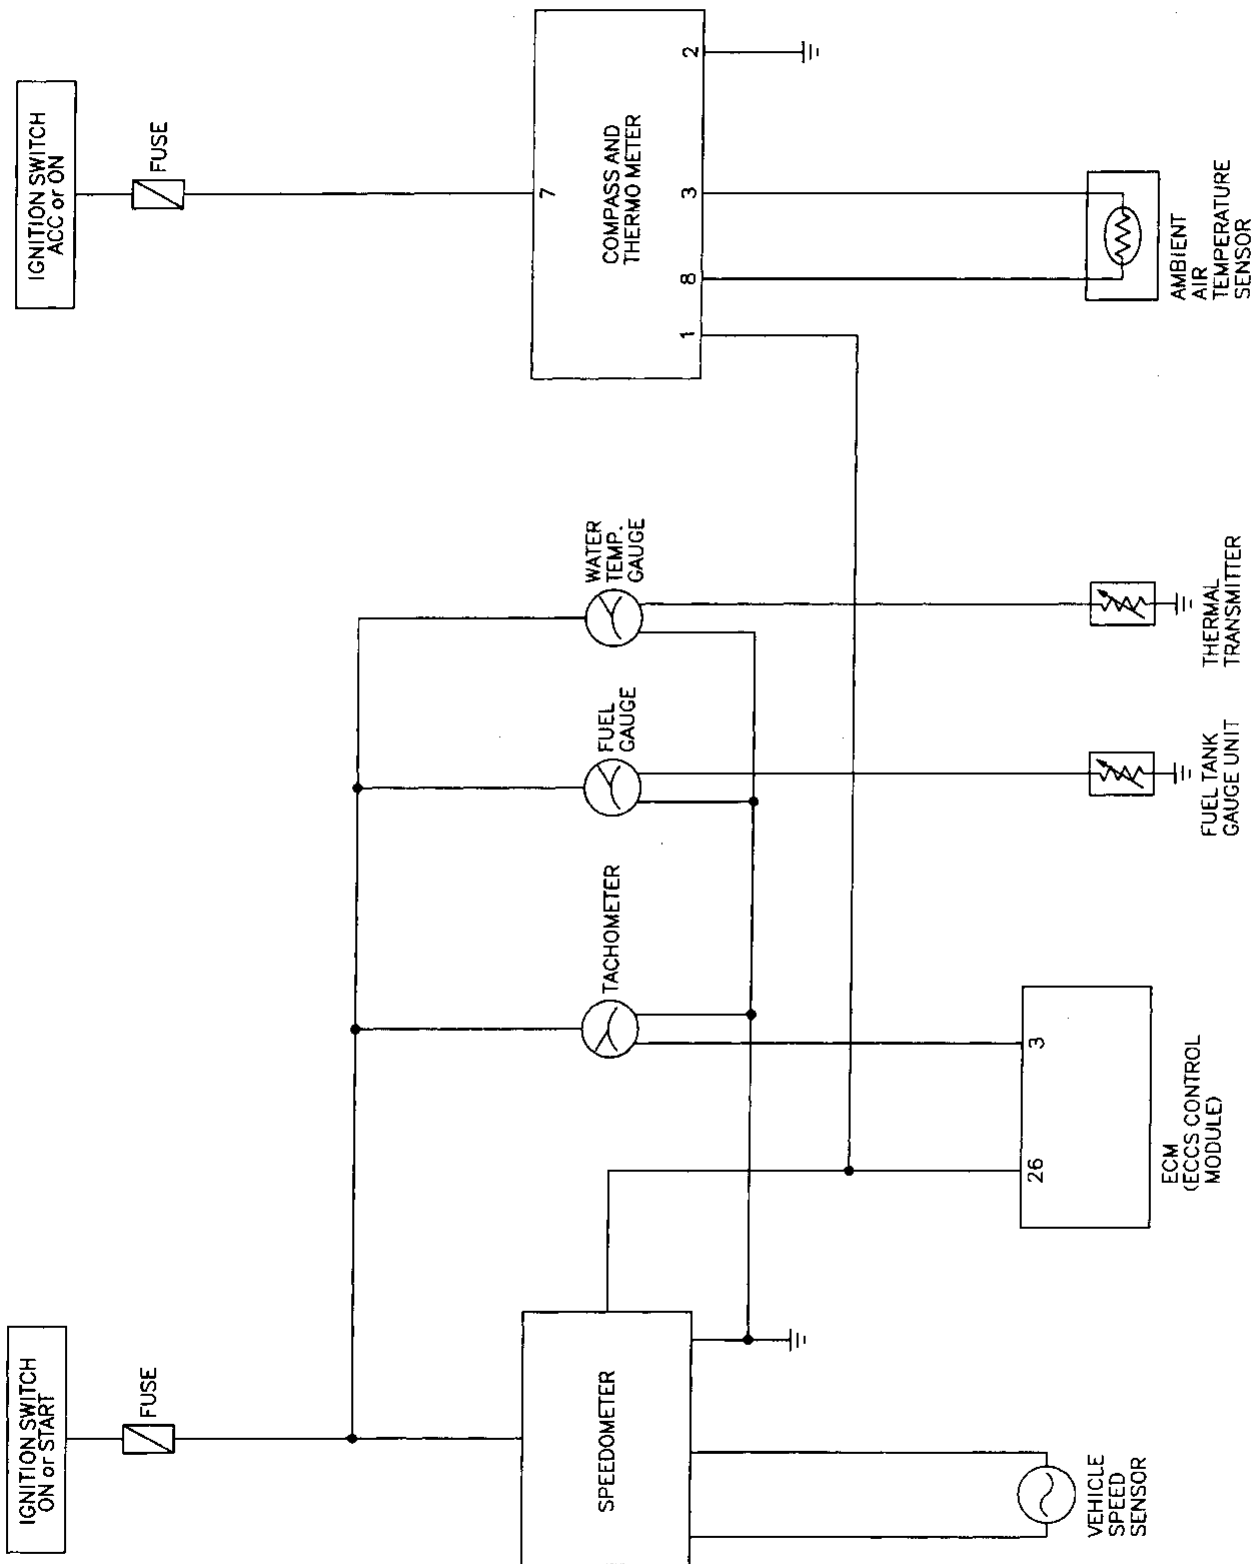

Combination Meter, Compass and Thermometer/Wiring Diagram — METER —

EL-METER-01

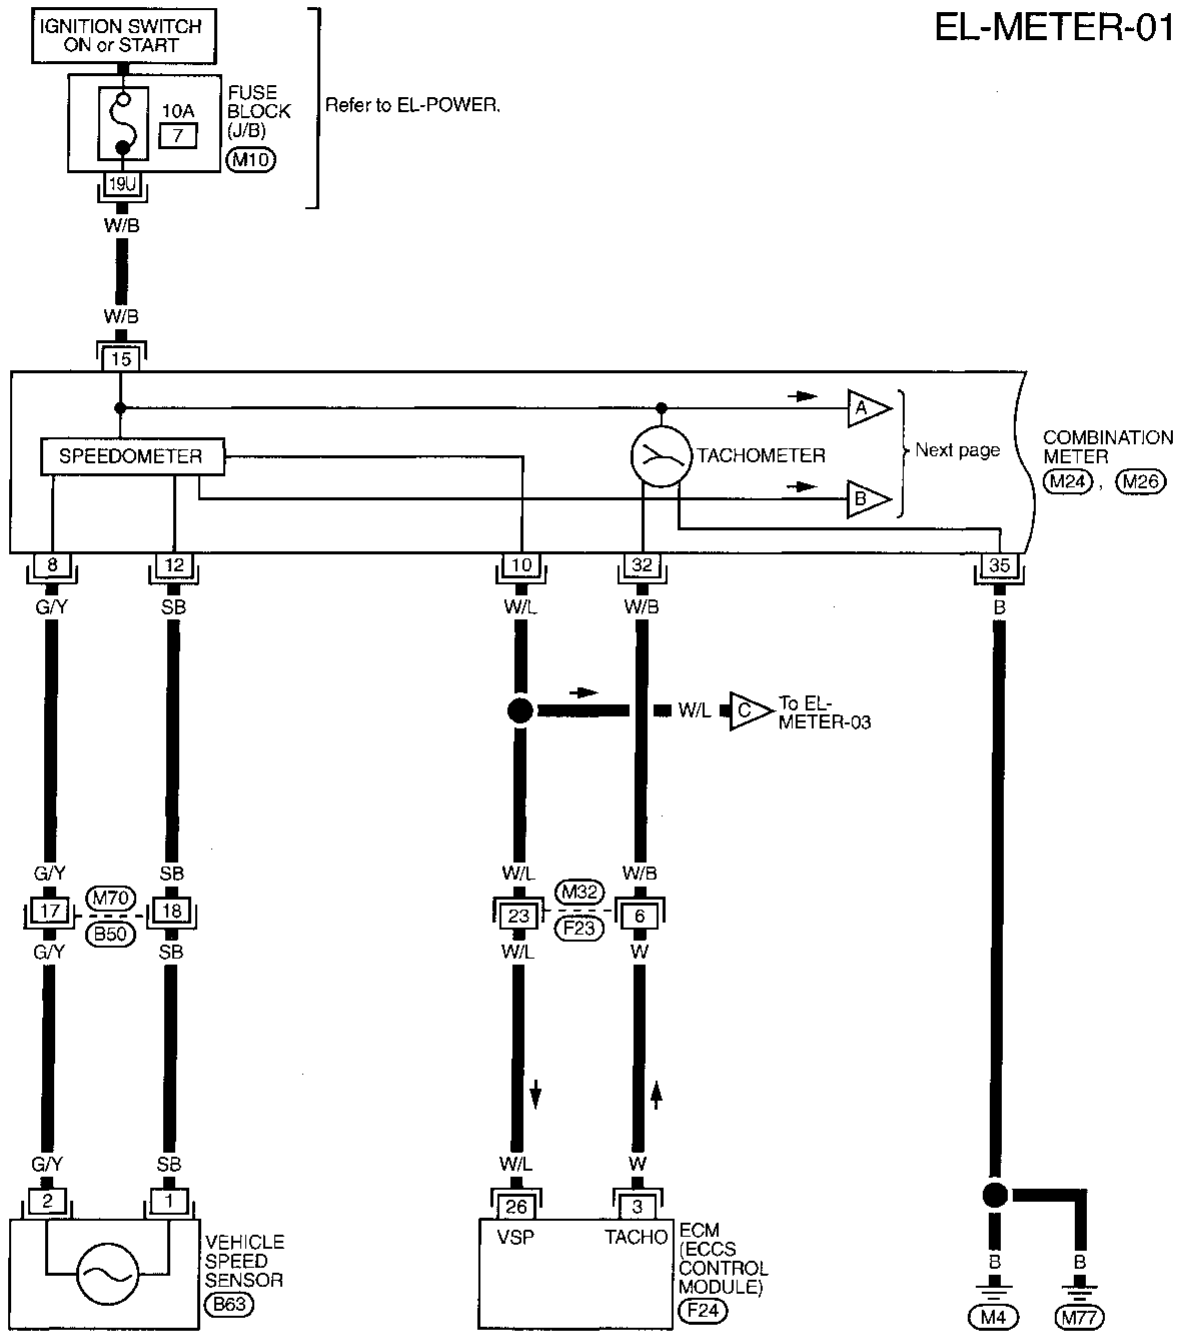

Refer to last page (Foldout page).

- M10
- F24

GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA





EL

IDX

METER AND GAUGES

Combination Meter, Compass and Thermometer/Wiring Diagram — METER — (Cont'd)

EL-METER-02

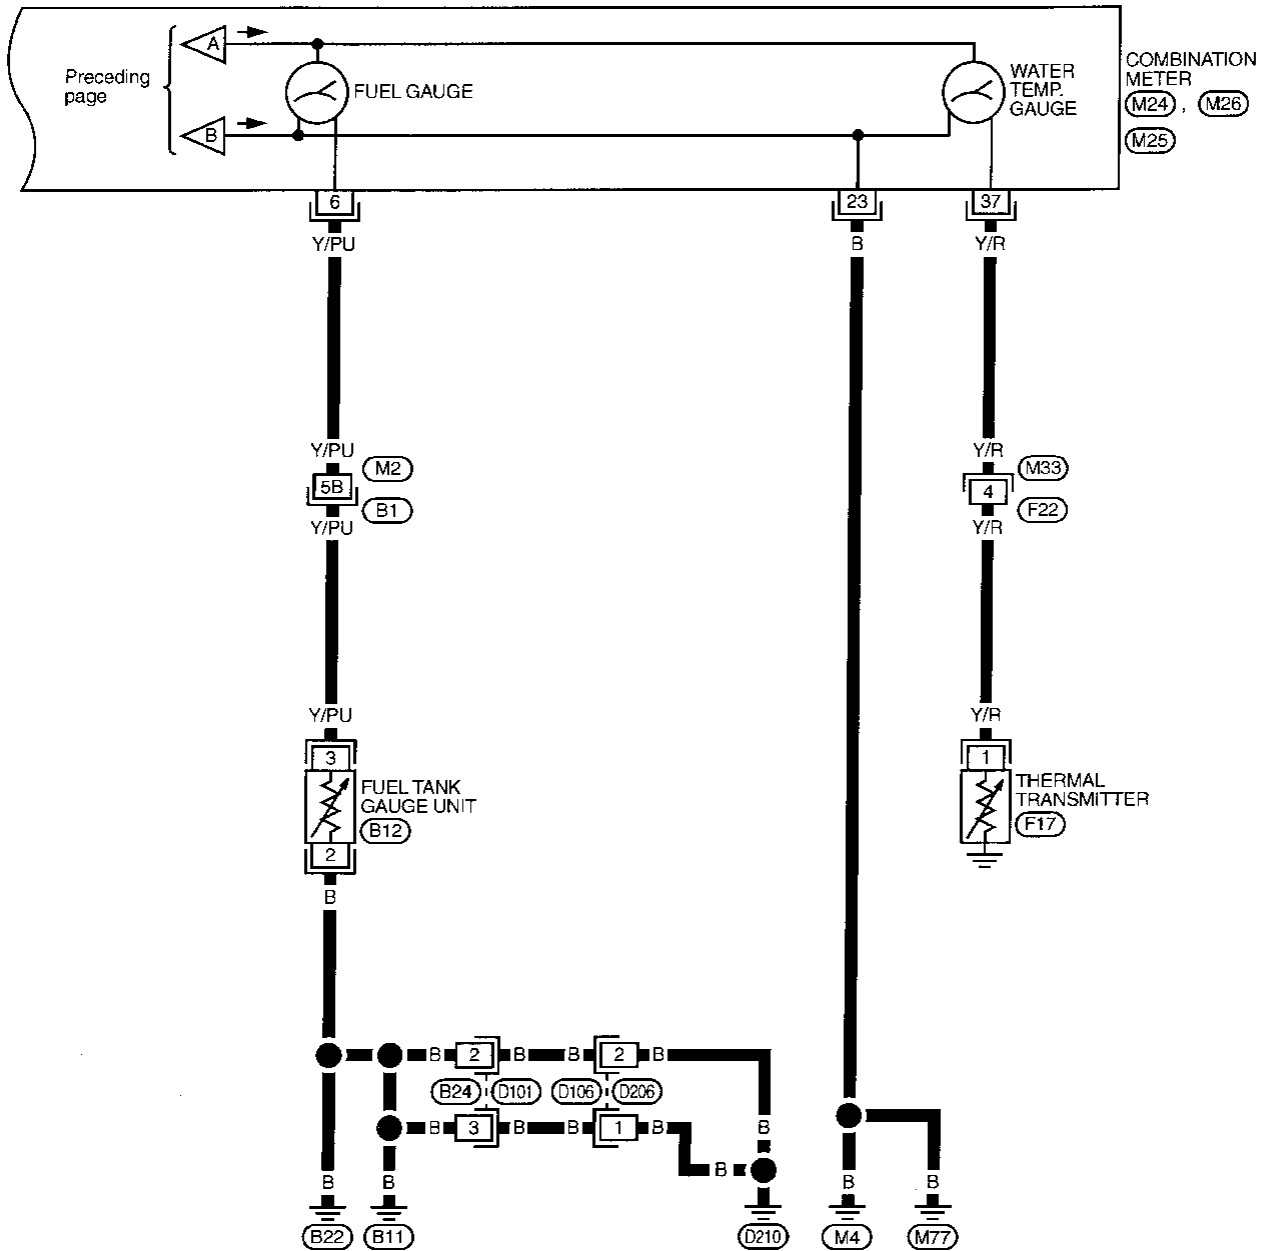






Refer to last page (Foldout page).

M2, B1

METER AND GAUGES

Combination Meter, Compass and Thermometer/Wiring Diagram — METER — (Cont'd)

EL-METER-03

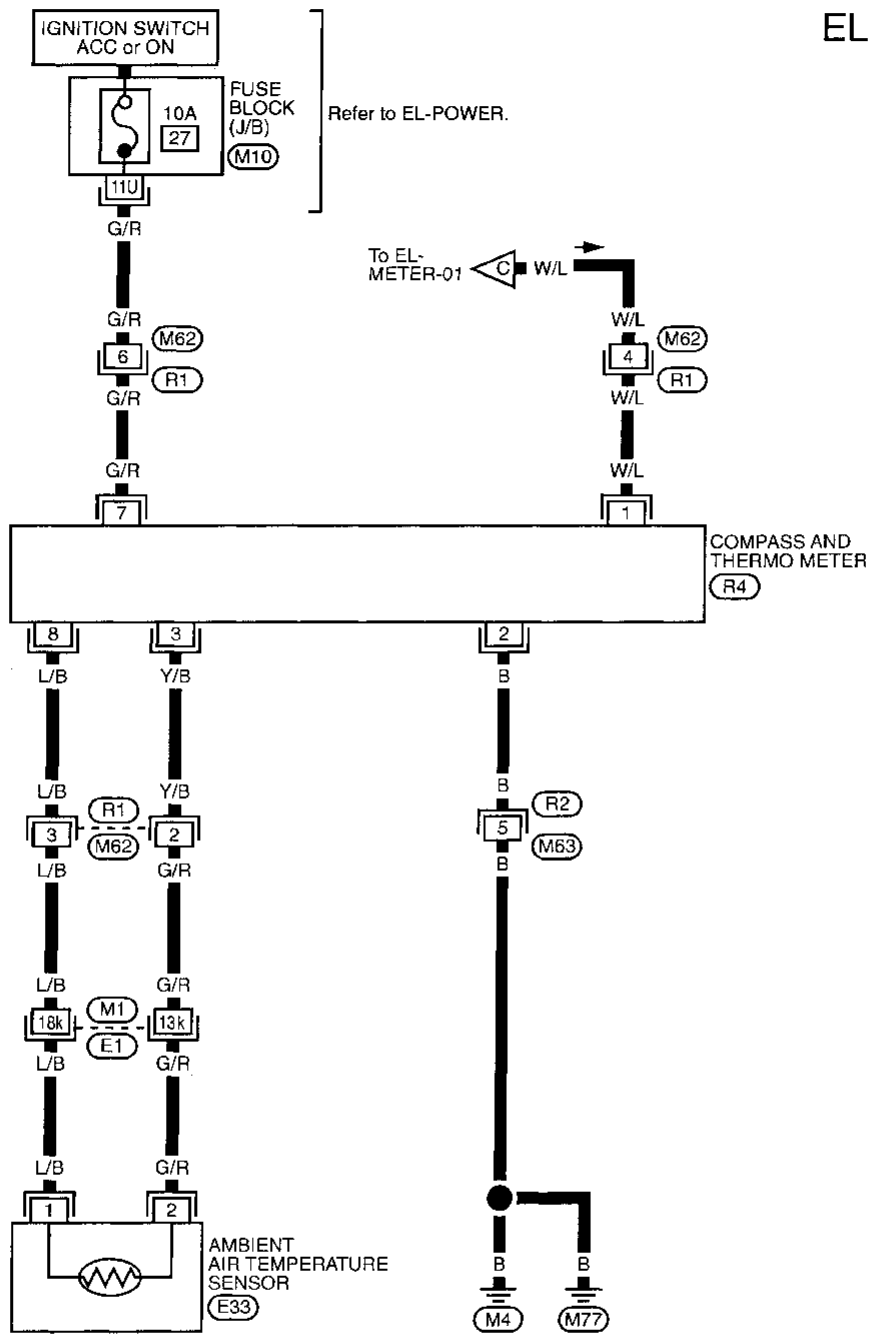

Refer to last page (Foldout page).

(E1) (M1)
(M10)

GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA





EL

IDX

METER AND GAUGES

Trouble Diagnoses

INSPECTION/FUEL GAUGE AND/OR WATER TEMPERATURE GAUGE

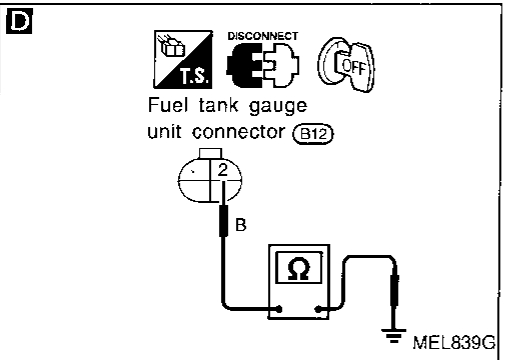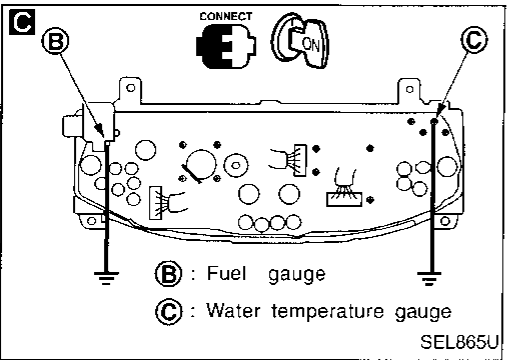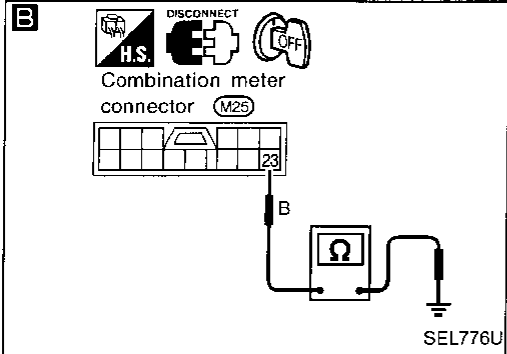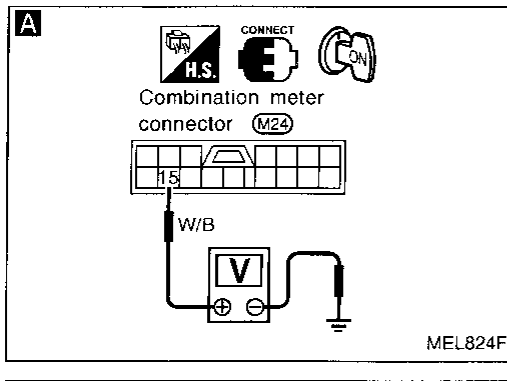

A

CHECK POWER SUPPLY CIRCUIT.

- 1) Turn ignition switch "ON".
- 2) Check voltage between combination meter terminal ⑮ and ground.

Battery voltage should exist.

NG → Check the following.

- 10A fuse [No. 7], located in the fuse block (J/B)
- Harness for open or short between fuse and combination meter

OK ↓

B

CHECK GROUND CIRCUIT FOR GAUGES.

Check continuity between combination meter terminal ⑳ and ground.

Continuity should exist.

NG → Repair harness or connector.

OK ↓

C

CHECK GAUGE OPERATION.

- 1) Turn ignition switch "ON".
- 2) Connect terminals ⑮ (Fuel), ⑯ (Temp.) and ground with wire for **less than 10 seconds.**
- 3) Check operation of gauge.

Gauge should move smoothly to full scale.

NG → Repair or replace gauge.

OK ↓

D

CHECK GROUND CIRCUIT FOR FUEL TANK GAUGE UNIT.

Check harness continuity between fuel tank gauge unit terminal ② and ground.

Continuity should exist.

NG → Repair harness or connector.

OK ↓

CHECK COMPONENT.

Check gauge units.

Refer to "Fuel Tank Gauge Unit Check" (EL-87) or "Thermal Transmitter Check" (EL-87).


NG → Repair or replace. Refer to FE section. (Fuel gauge)

OK ↓

(Go to ① on next page.)

METER AND GAUGES


Trouble Diagnoses (Cont'd)

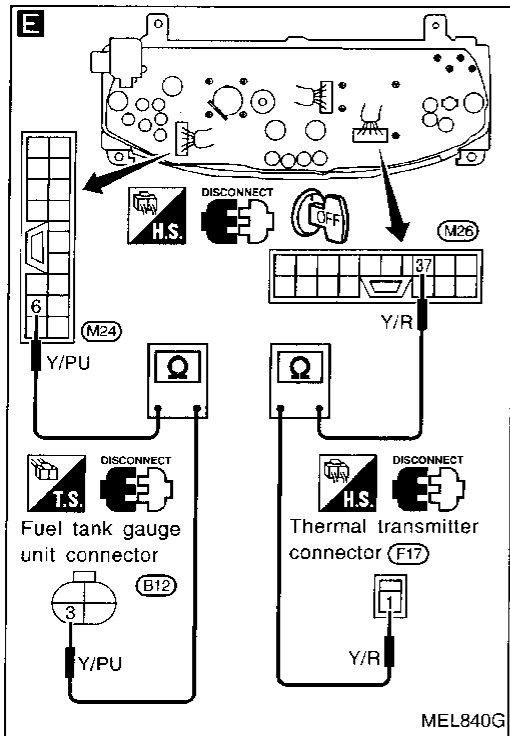

E

CHECK HARNESS.
Check harness for open or short between terminals.

Terminals	
Combination meter connector	Component
⑥	Fuel tank gauge unit connector ③
③⑦	Thermal transmitter connector ①

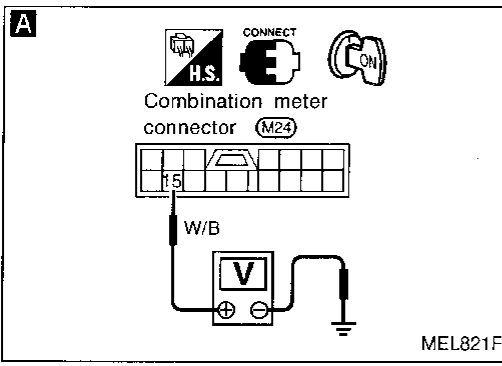

A


CHECK POWER SUPPLY CIRCUIT.

- 1) Turn ignition switch "ON".
- 2) Check voltage between combination meter terminal ⑮ and ground.
Battery voltage should exist.

NG → Check the following.

- 10A fuse [No. 7], located in the fuse block (J/B)]
- Harness for open or short between fuse and combination meter

OK →

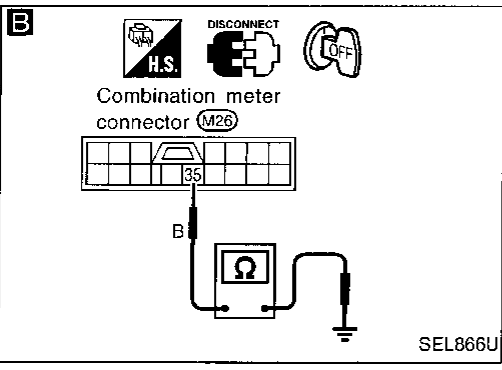


B

CHECK GROUND CIRCUIT FOR TACHOMETER.
Check continuity between combination meter terminal ⑳ and ground.
Continuity should exist.

NG → Repair harness or connector.

OK →

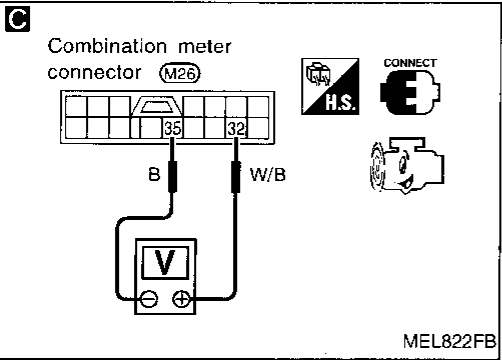

C

CHECK ECM OUTPUT.

- 1) Start engine.
- 2) Check voltage between combination meter terminals ⑳ and ㉑ at idle and 2,000 rpm.
Higher rpm = Higher voltage
Lower rpm = Lower voltage
Voltage should change with rpm.

NG → Check harness for open or short between ECM and combination meter.


OK → Replace tachometer.

GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

METER AND GAUGES

Trouble Diagnoses (Cont'd)

INSPECTION/SPEEDOMETER AND VEHICLE SPEED SENSOR

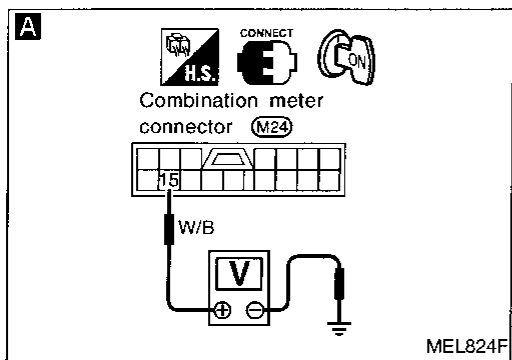

A

CHECK POWER SUPPLY CIRCUIT.


- 1) Turn ignition switch "ON".
- 2) Check voltage between combination meter terminal ⑮ and ground.

Battery voltage should exist.

NG

Check the following.

- 10A fuse [No. 7], located in the fuse block (J/B)]
- Harness for open or short between fuse and combination meter

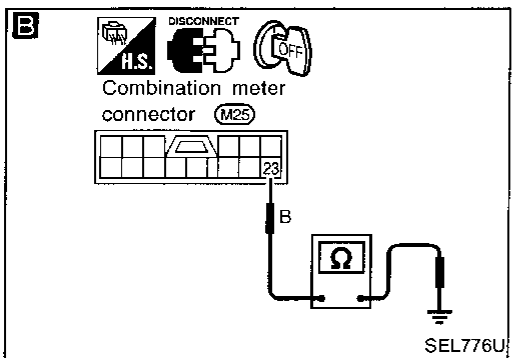

B


CHECK GROUND CIRCUIT FOR SPEEDOMETER.

Check continuity between combination meter terminal ⑳ and ground.

Continuity should exist.

NG

Repair harness or connector.

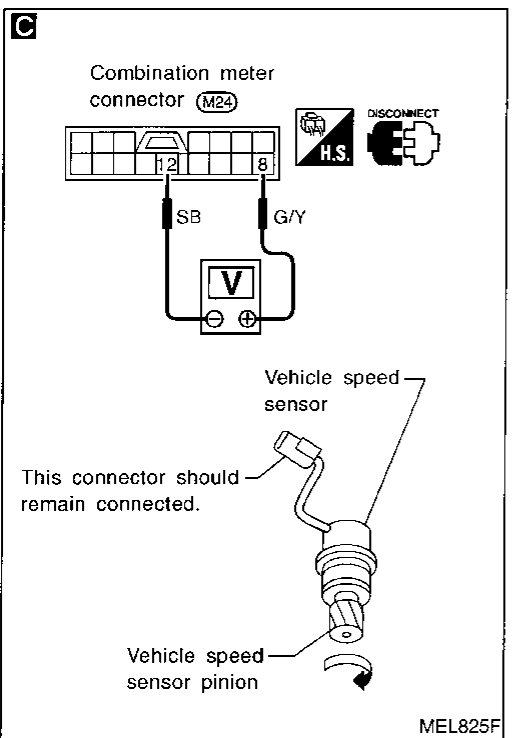

C

CHECK VEHICLE SPEED SENSOR OUTPUT.

- 1) Remove vehicle speed sensor from transaxle.
- 2) Check voltage between combination meter terminals ⑧ and ⑫ while quickly turning speed sensor pinion.

Voltage: Approx. 0.5V

OK

Replace speedometer.

D

CHECK VEHICLE SPEED SENSOR.

Check resistance between vehicle speed sensor terminals ① and ②.


Resistance: Approx. 250Ω

NG

Replace vehicle speed sensor.


OK

Check harness or connector between speedometer and vehicle speed sensor.

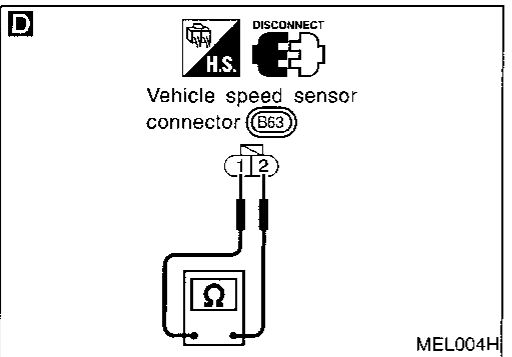

METER AND GAUGES

Trouble Diagnoses (Cont'd) ELECTRICAL COMPONENTS INSPECTION

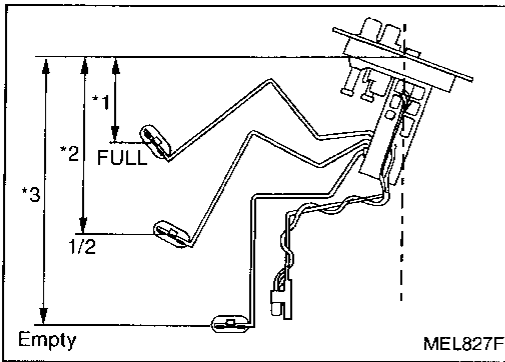

Fuel tank gauge unit check

- For removal, refer to FE section.
- Check the resistance between terminals ① and ③.

Ohmmeter		Float position		Resistance value (Ω)
(+)	(-)	mm	(in)	
①	③	*1	Full	96 (3.78)
		*2	1/2	188 (7.40)
		*3	Empty	257 (10.12)

*1 and *3: When float rod is in contact with stopper.

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST


RS

BT

HA

EL


IDX

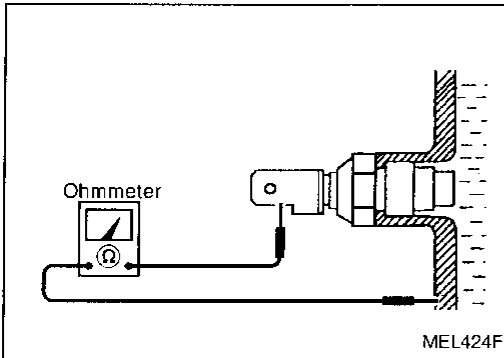

Thermal transmitter check

Check the resistance between the terminals of thermal transmitter and body ground.

Water temperature	Resistance
60°C (140°F)	Approx. 170 - 210Ω
100°C (212°F)	Approx. 47 - 53Ω

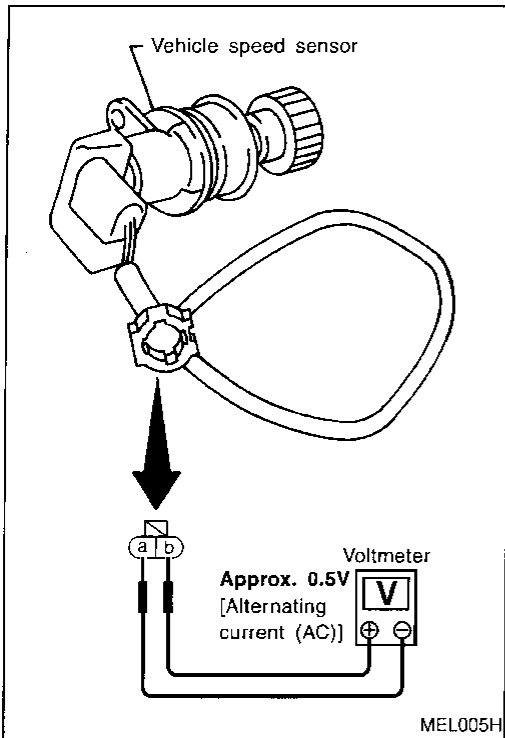

Vehicle speed sensor signal check

- Remove vehicle speed sensor from transmission.
- Turn vehicle speed sensor pinion quickly and measure voltage across (a) and (b).

METER AND GAUGES

Trouble Diagnoses (Cont'd)


INSPECTION/COMPASS AND THERMOMETER

Symptom	Possible causes	Repair order
No display at all	<ol style="list-style-type: none"> 10A fuse Ground circuit Compass and thermometer 	<ol style="list-style-type: none"> Check 10A fuse [No. 27], located in fuse block (J/B). Turn the ignition switch ON and verify that battery positive voltage is at terminal ⑦ of compass and thermometer. Check ground circuit for compass and thermometer. Replace compass and thermometer.
Forward direction indication slips off the mark or incorrect.	<ol style="list-style-type: none"> In manual correction mode (Bar and display vanish.) Zone variation change is not done. 	<ol style="list-style-type: none"> Drive the vehicle and turn at an angle of 90°. Perform the zone variation change.
Compass reading remains unchanged.	<ol style="list-style-type: none"> Vehicle speed sensor is not entered. Compass and thermometer 	<ol style="list-style-type: none"> Check harness for open or short between combination meter terminal ⑩ and compass and thermometer terminal ①. Replace compass and thermometer.
Displays wrong temperature when ambient temperature is between -30°C (-20°F) and 55°C (130°F). (See NOTE)	<ol style="list-style-type: none"> Check operation Ambient sensor circuit Vehicle speed sensor is not entered. Ambient sensor Compass and thermometer 	<ol style="list-style-type: none"> Perform preliminary check shown below. Check harness for open or short between ambient sensor and compass and thermometer. Check harness for open or short between combination meter terminal ⑩ and compass and thermometer terminal ①. Replace ambient sensor. Replace compass and thermometer.

NOTE:

- When the outside temperature is between 55°C (130°F) and 70°C (158°F), the display shows 55°C (130°F). When the outside temperature is lower than -30°C (-20°F) or higher than 70°C (158°F), the display shows only “---”.
- While the vehicle is being driven, the indicated temperature on the thermometer changes only when the following condition (a), (b) and/or (c) is met.
 - The temperature detected by the ambient sensor is lower than the indicated temperature on the thermometer.
 - The difference in temperature detected during a period of 40 seconds is less than 1°C (1.8°F) when vehicle speed has been greater than 24 km/h (15 MPH) for more than 100 seconds. In other words, when the temperature rise is too rapid, the indicated temperature will not change.
 - The ignition key has been turned to the “OFF” position for more than 4 hours.

PRELIMINARY CHECK FOR THERMOMETER

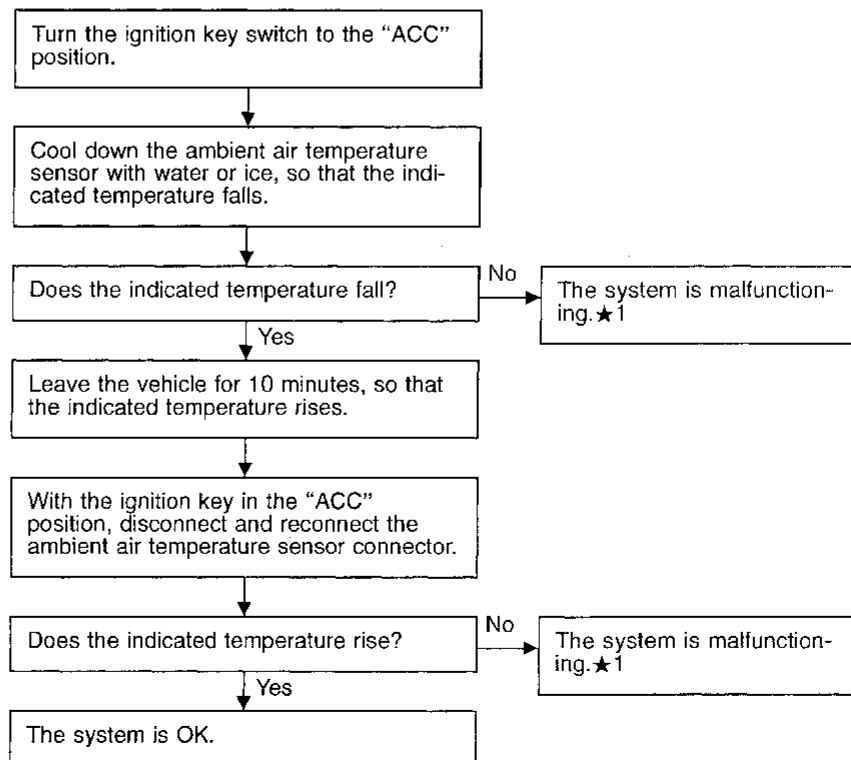

★1: Check the system following “INSPECTION/COMPASS AND THERMOMETER”.


METER AND GAUGES

Trouble Diagnoses (Cont'd)

CALIBRATION PROCEDURE FOR COMPASS

The difference between magnetic North and geographical North can sometimes be great enough to cause false compass readings. In order for the compass to operate accurately in a particular zone, it must be calibrated using the following procedure.

Zone Variation Chart

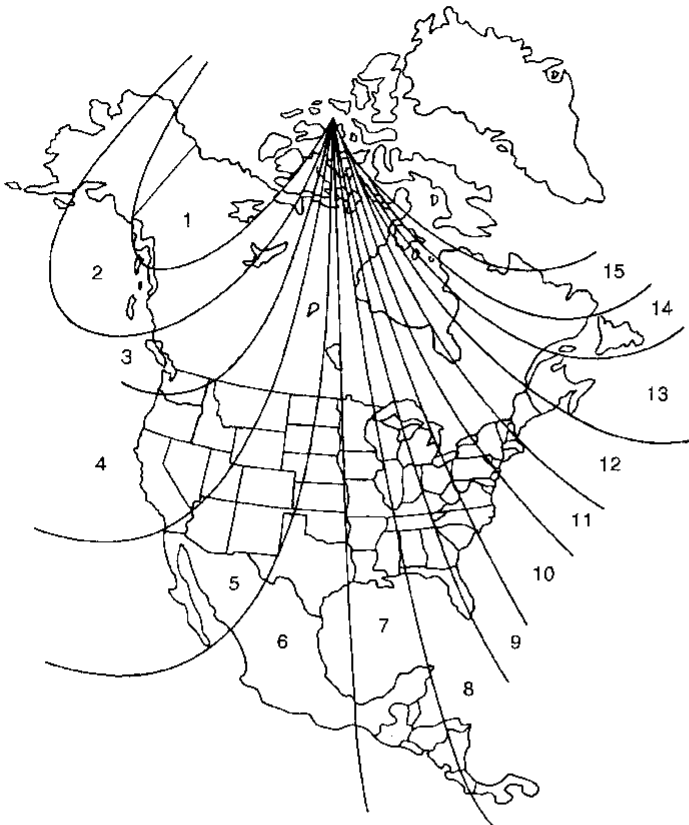

1. Determine your location on the zone map. Record your zone number.


2. Turn the ignition switch to ACC or ON position.

3. Push the "Mode" switch continuously for five seconds until the current zone entry number is displayed.

4. Press the "Mode" switch repeatedly until the desired zone number is displayed.

Once the desired zone number is displayed, stop pressing the "Mode" switch and the display will show compass direction after a few seconds.

SEL738UA

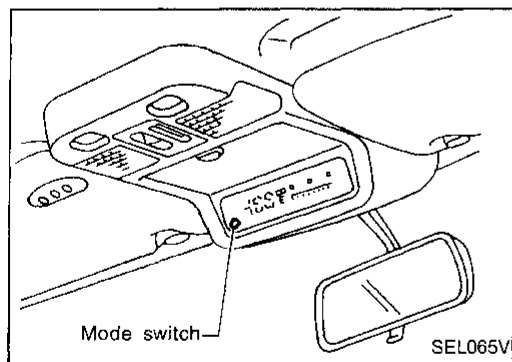

CORRECTION FUNCTIONS OF COMPASS

The direction display is equipped with automatic correction function. If the direction is not shown correctly, carry out initial correction.

INITIAL CORRECTION PROCEDURE FOR COMPASS


1. Pushing the "Mode" switch for about 10 seconds will enter the initial correction mode. The direction bar starts blinking.
2. Turn the vehicle slowly in an open, safe place. The initial correction is completed in one or two turns.

NOTE:

In places where the terrestrial magnetism is extremely disturbed, the initial correction may start automatically.

WARNING LAMPS





Warning Lamps/Schematic

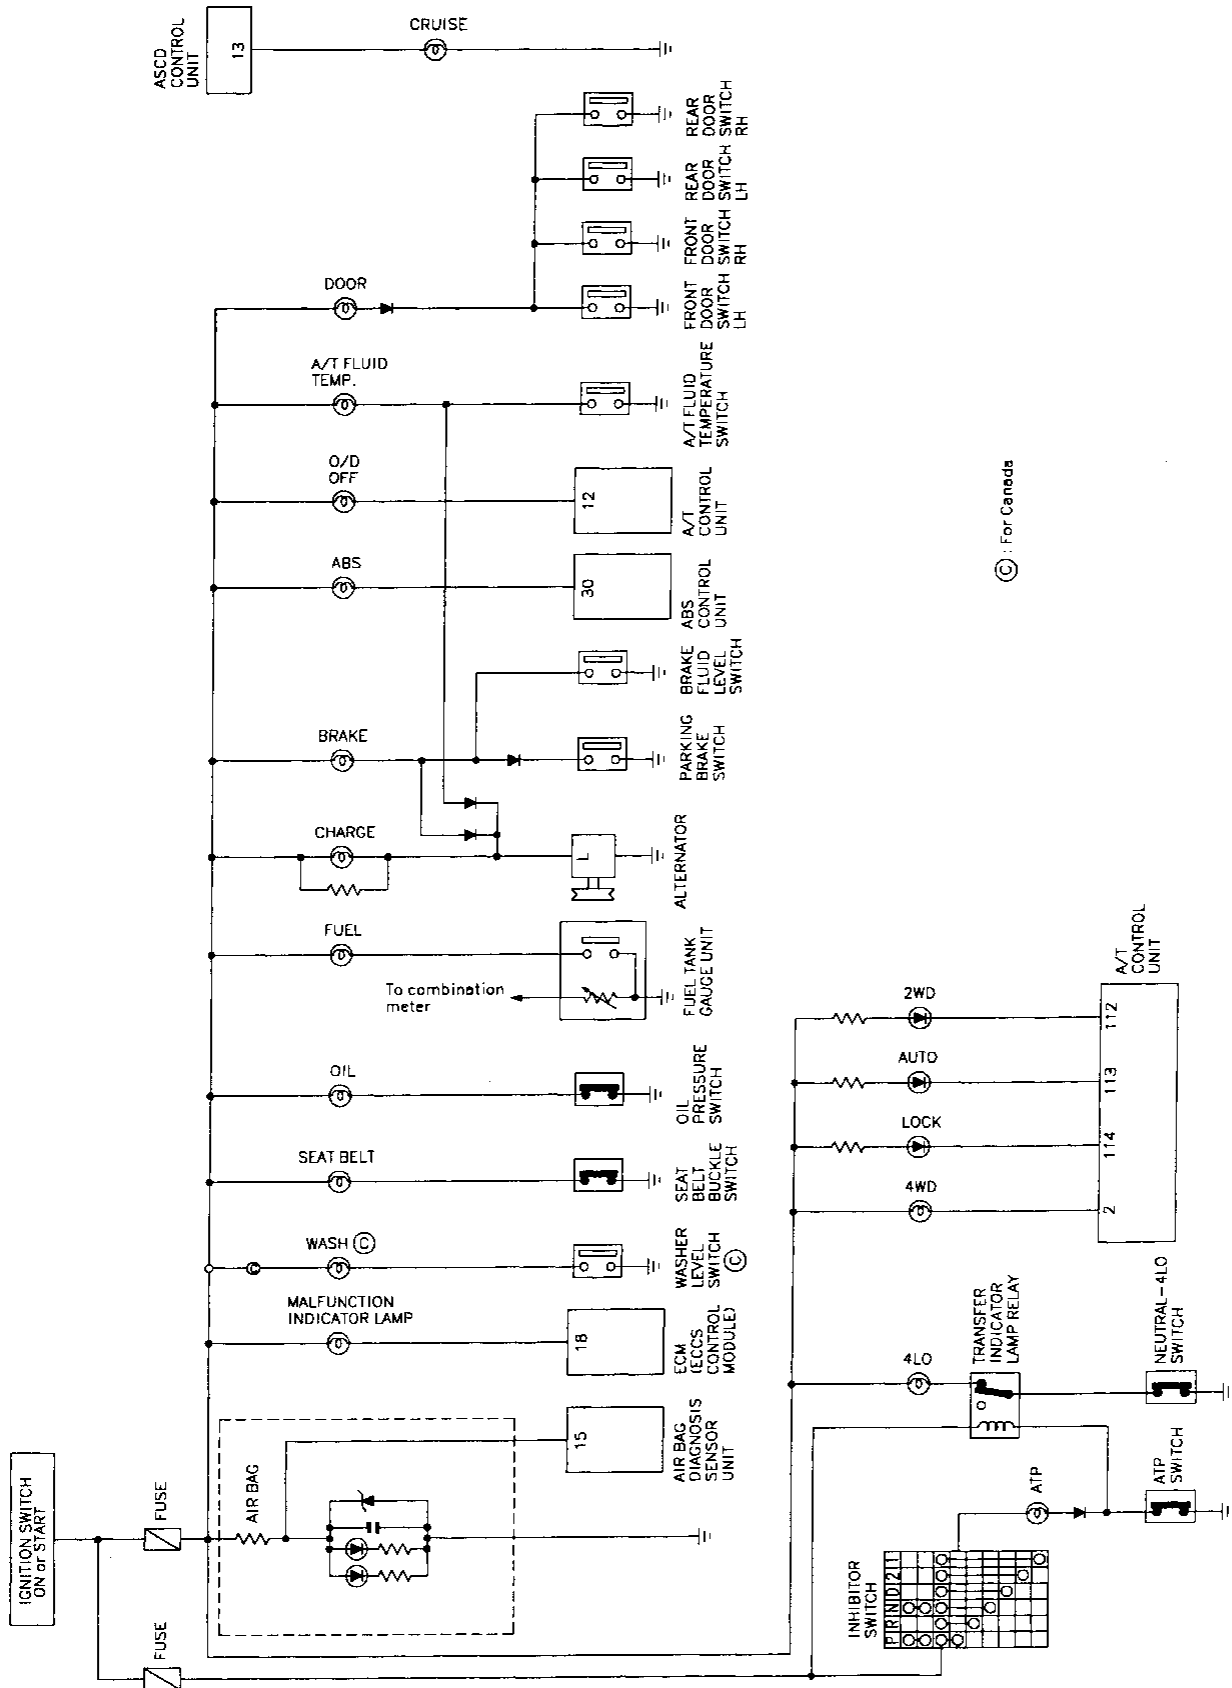


WARNING LAMPS

Warning Lamps/Wiring Diagram — WARN —

EL-WARN-01

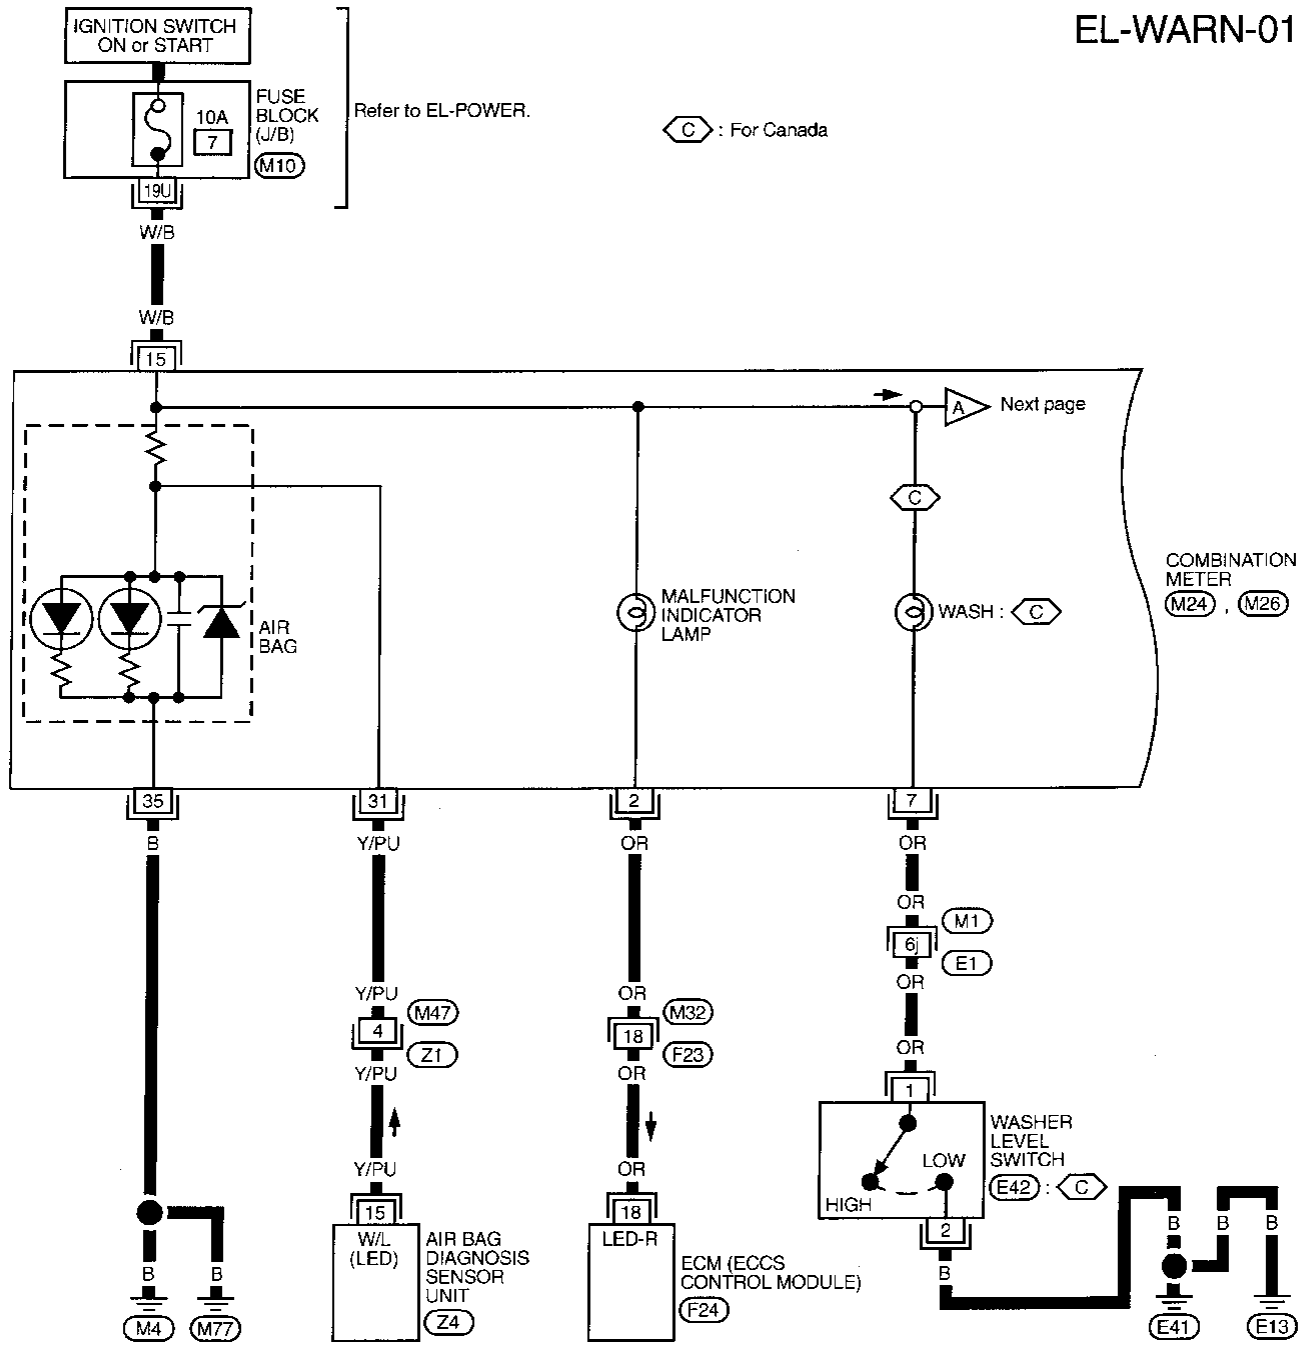

Refer to last page (Foldout page).



GI
MA
EM
LG
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA


EL

IDX

WARNING LAMPS



Warning Lamps/Wiring Diagram — WARN — (Cont'd)

EL-WARN-02

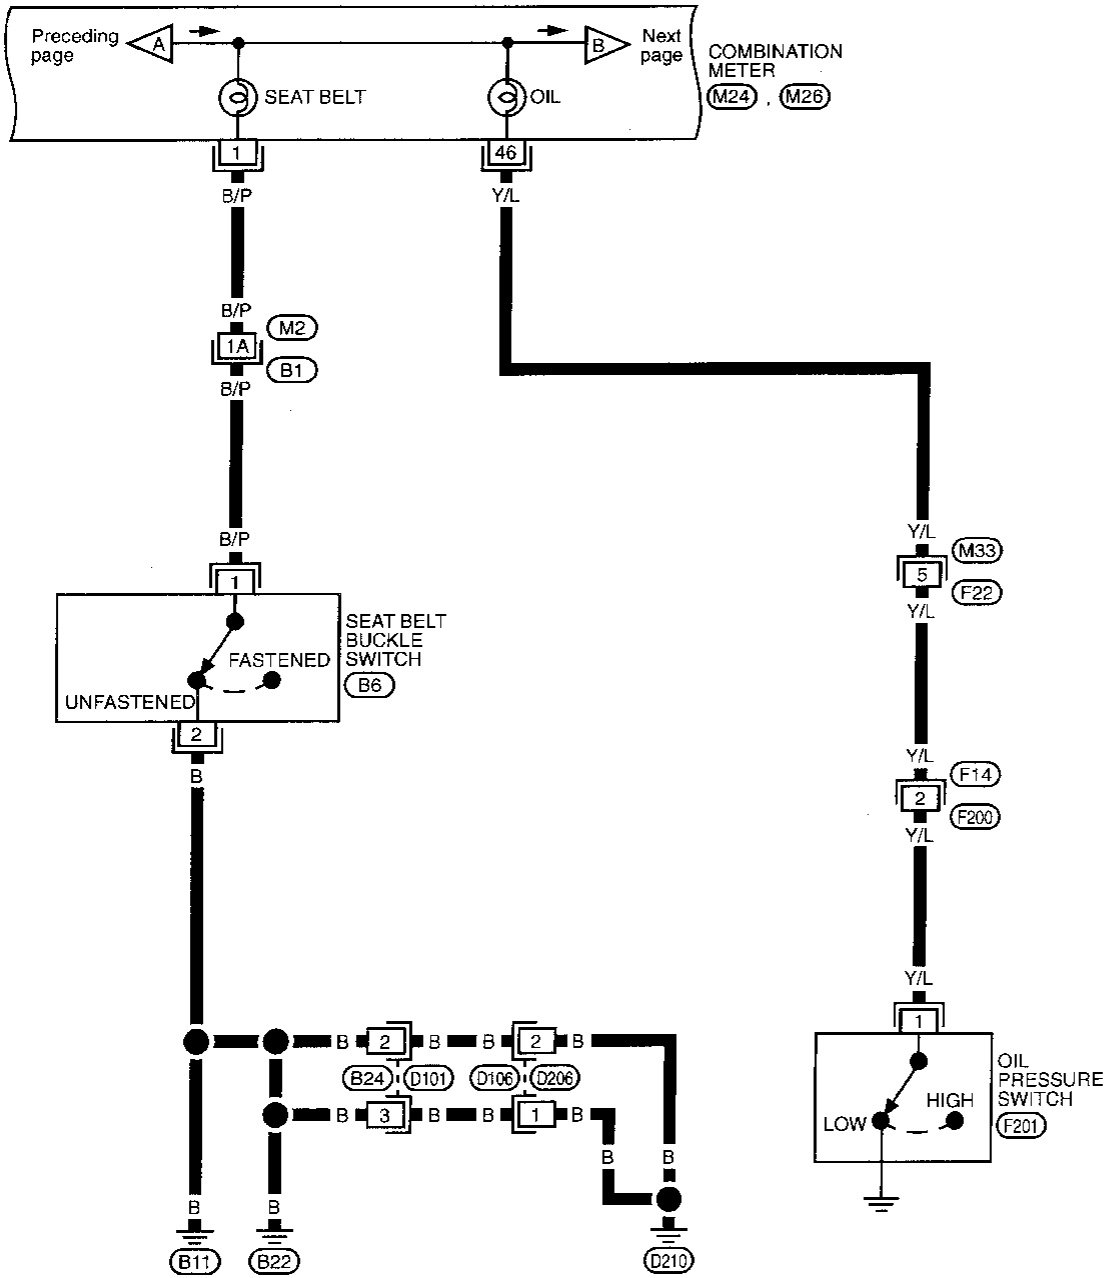


Refer to last page (Foldout page).

(M2), (B1)



WARNING LAMPS




Warning Lamps/Wiring Diagram — WARN — (Cont'd)

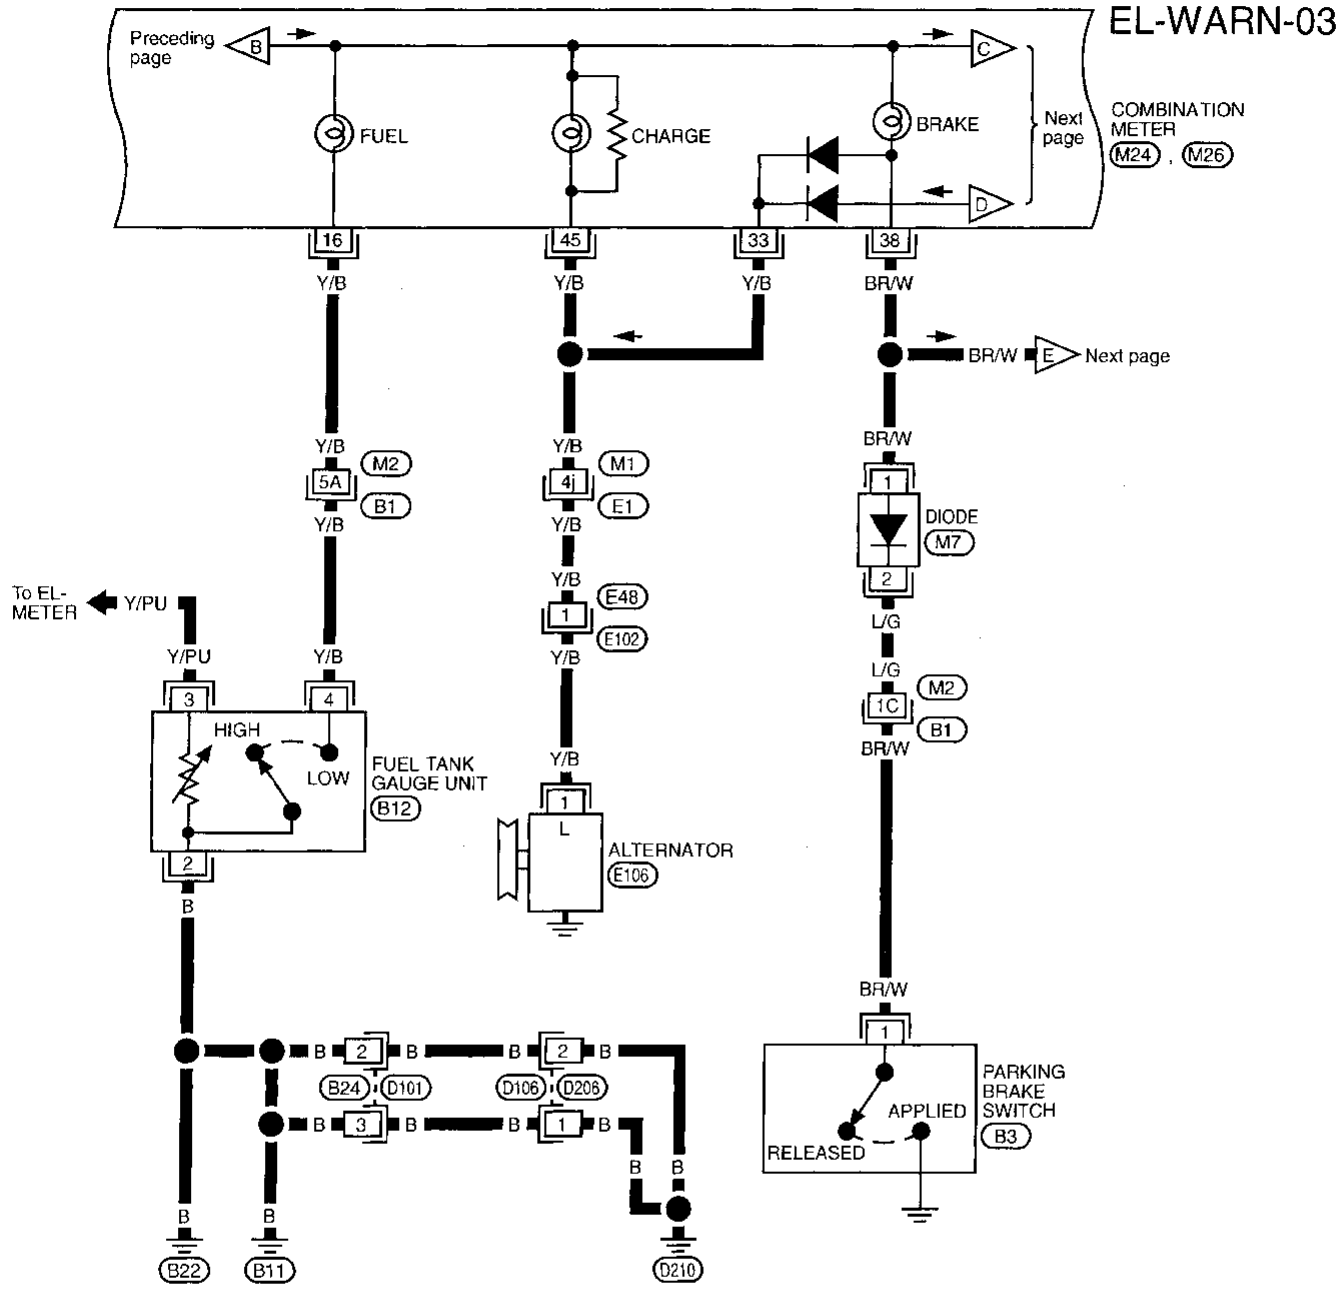


EL-WARN-03

COMBINATION METER (M24), (M26)

To EL-METER ← Y/PU



Refer to last page (Foldout page).






GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

WARNING LAMPS

Warning Lamps/Wiring Diagram — WARN — (Cont'd)

EL-WARN-04

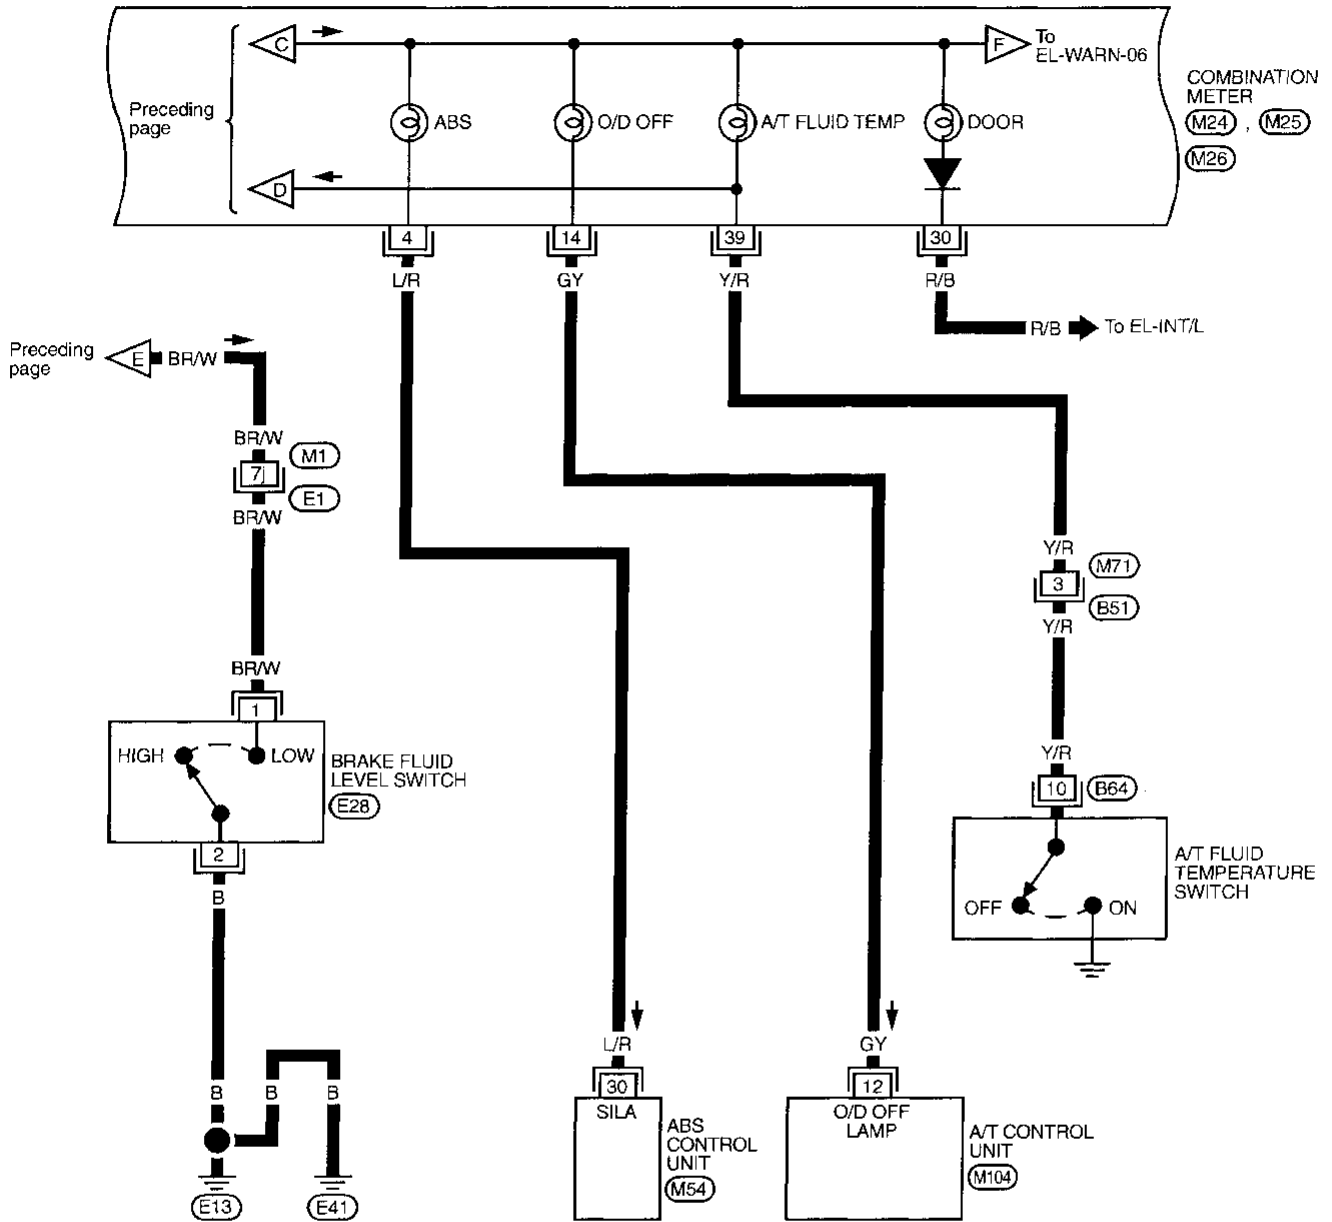

Refer to last page (Foldout page).

(E1), (M1)



(M54)

(M104)

WARNING LAMPS

Warning Lamps/Wiring Diagram — WARN — (Cont'd)

EL-WARN-05

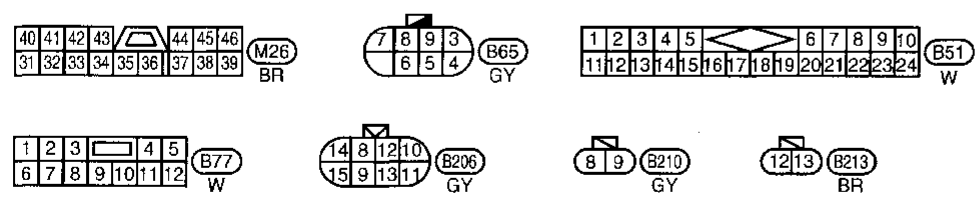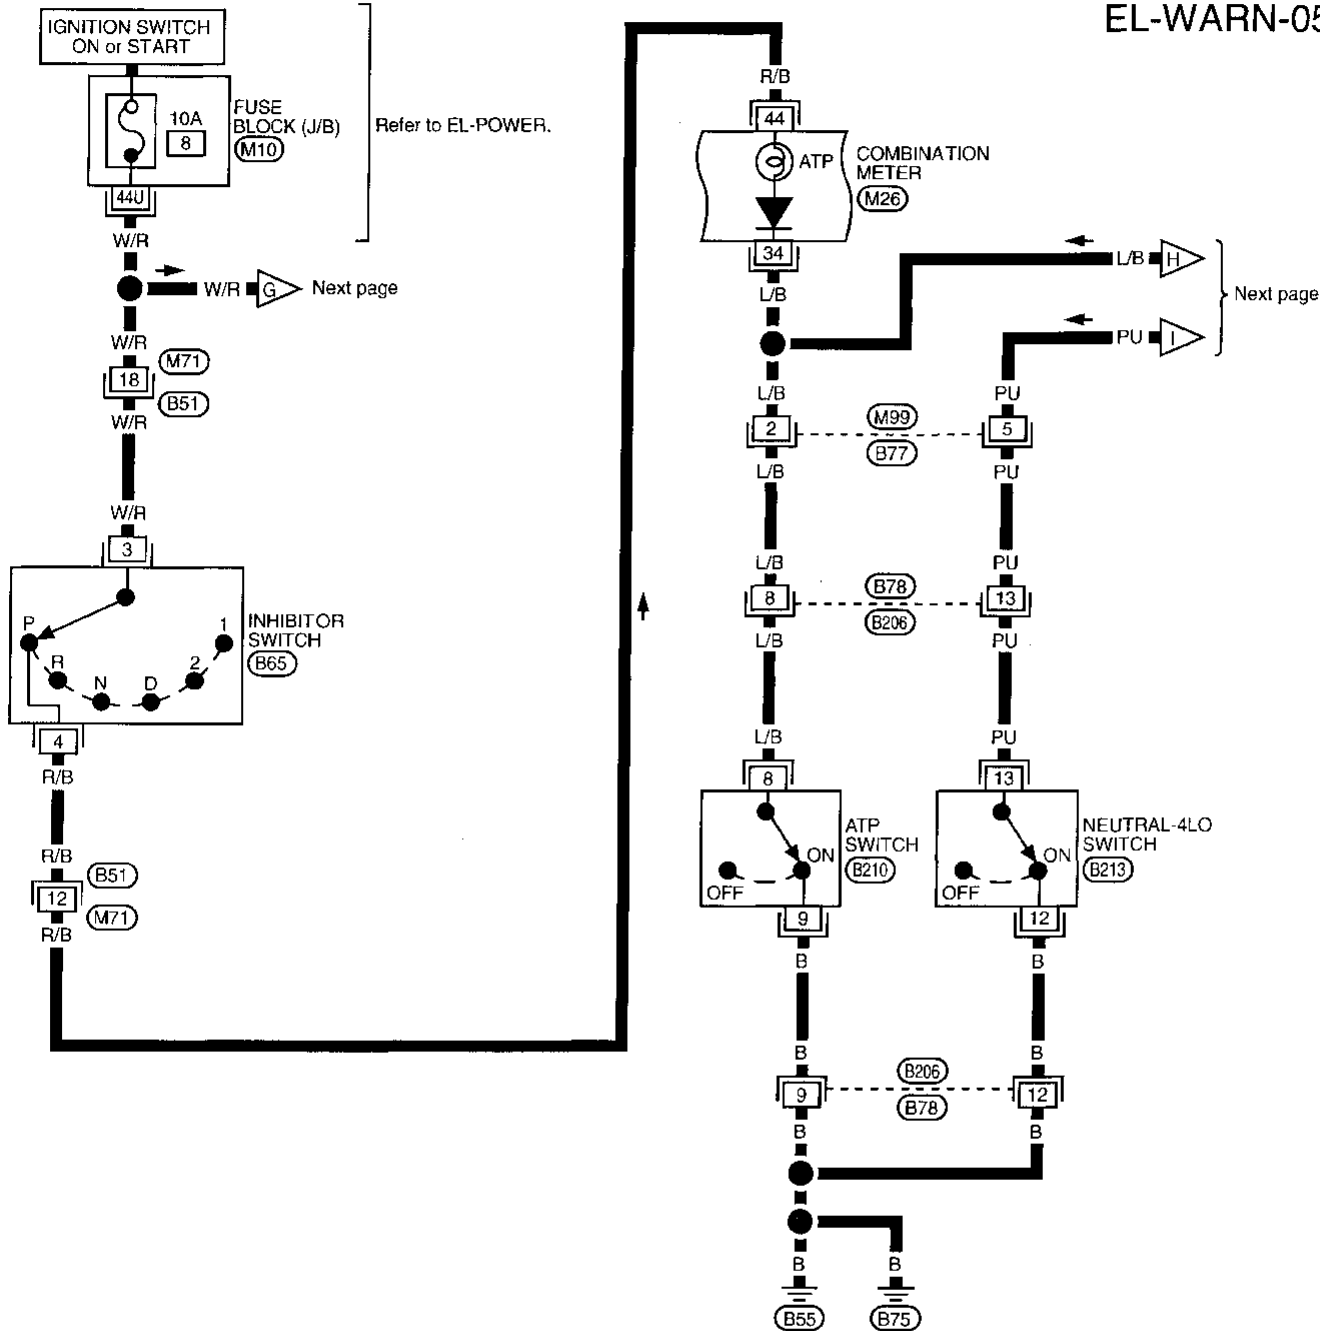







Refer to last page (Foldout page).
(M10)

GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX


WARNING LAMPS


Warning Lamps/Wiring Diagram — WARN — (Cont'd)

EL-WARN-06

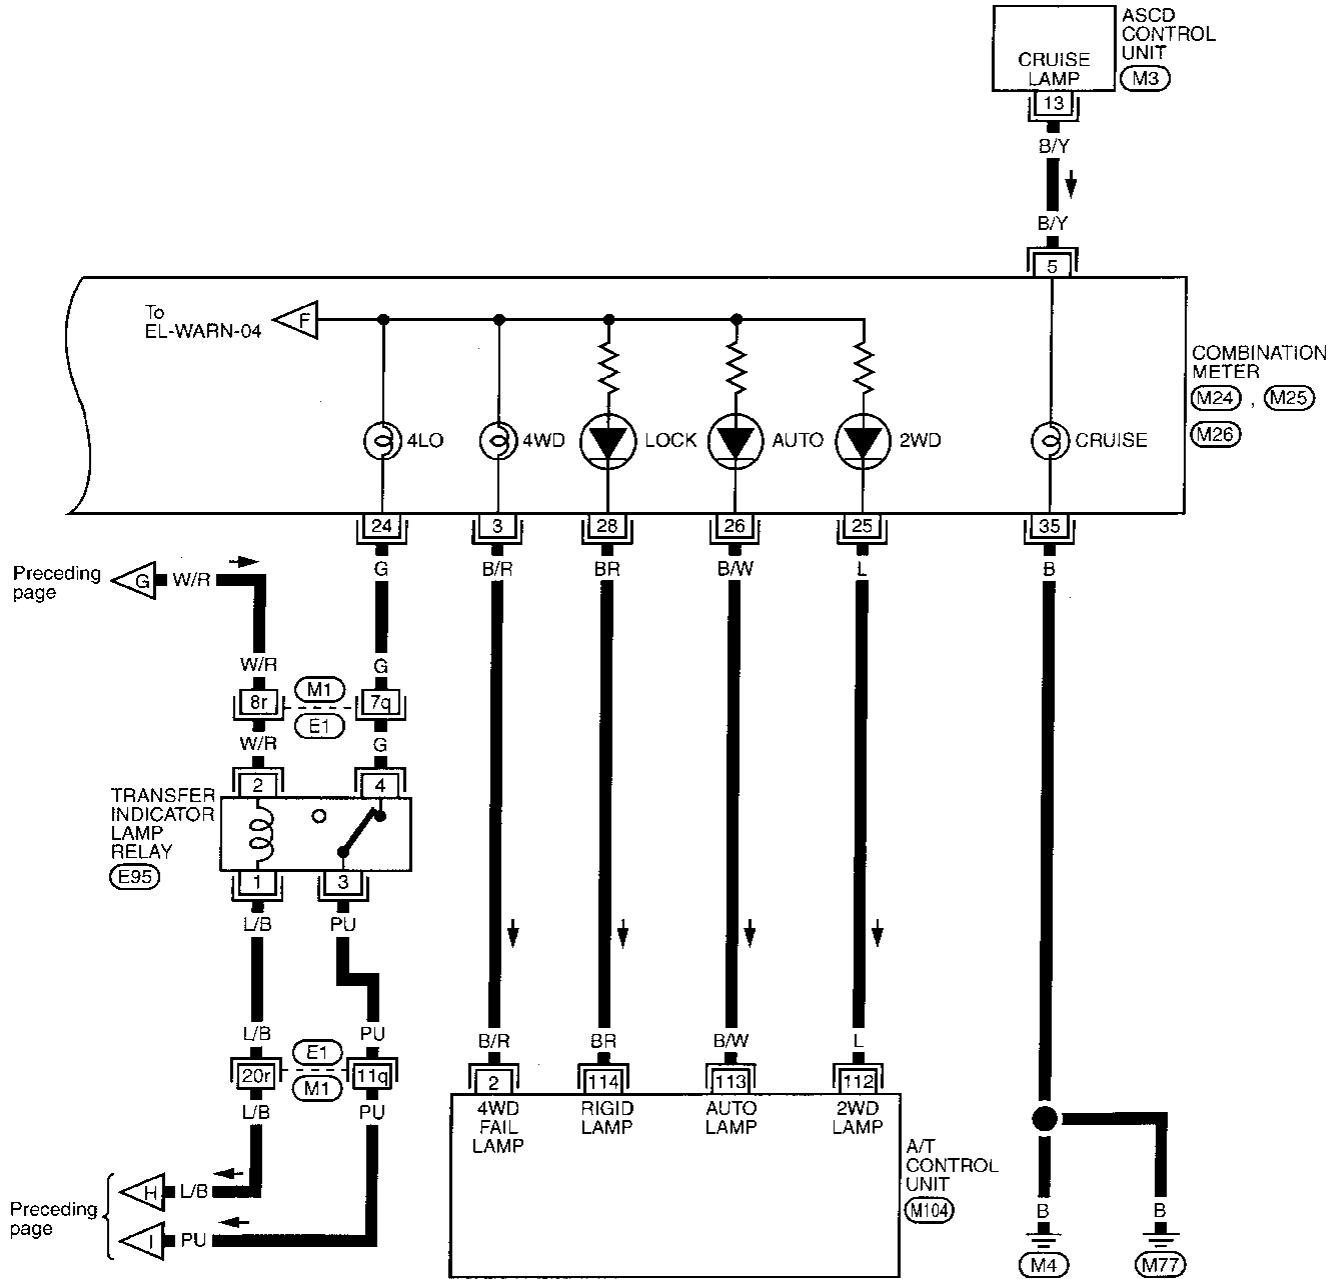

Refer to last page (Foldout page).



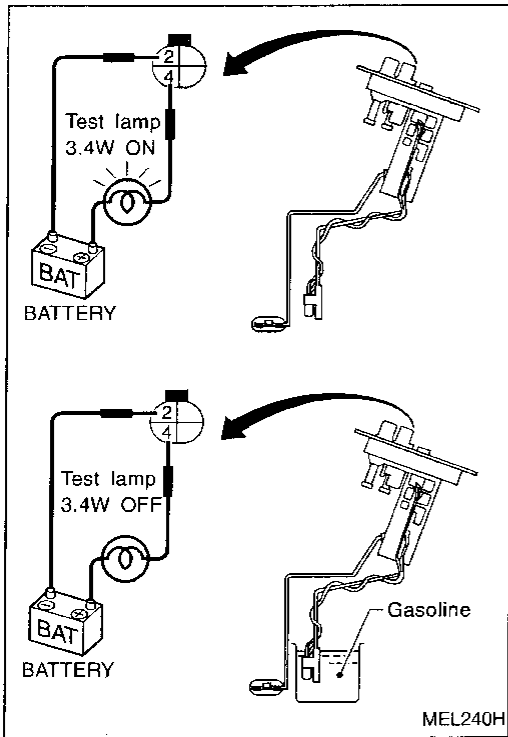

Electrical Components Inspection

FUEL WARNING LAMP SENSOR CHECK

- It will take a short time for the bulb to light.

GI

MA

EM


LC

EC

FE

AT

TF

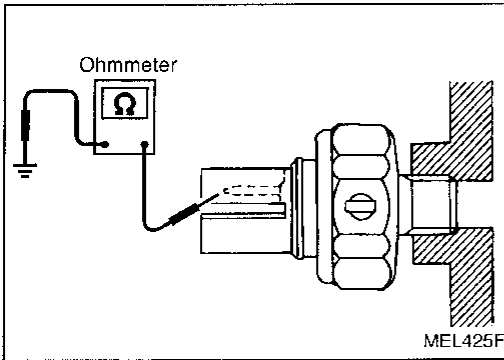

OIL PRESSURE SWITCH CHECK

	Oil pressure kPa (kg/cm ² , psi)	Continuity
Engine start	More than 10 - 20 (0.1 - 0.2, 1 - 3)	NO
Engine stop	Less than 10 - 20 (0.1 - 0.2, 1 - 3)	YES


Check the continuity between the terminals of oil pressure switch and body ground.

PD

FA

RA

BR

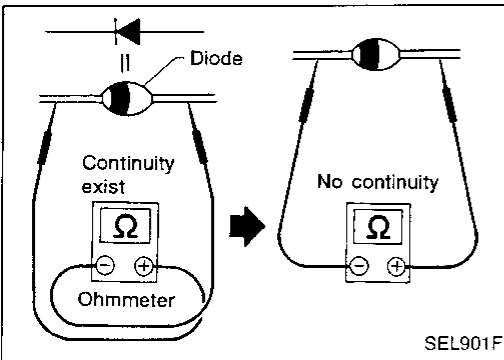

DIODE CHECK

- Check continuity using an ohmmeter.
- Diode is functioning properly if test results are as shown in the figure at left.


NOTE: Specification may vary depending on the type of tester. Before performing this inspection, be sure to refer to the instruction manual for the tester to be used.

ST

RS

BT

HA

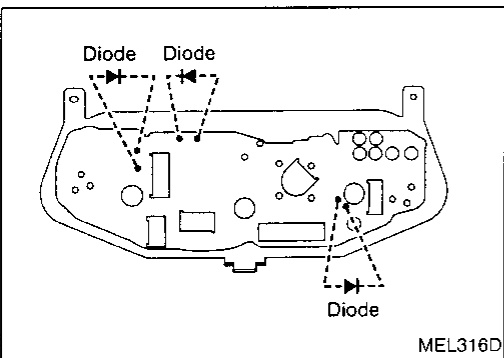


- Diodes for warning lamps are built into the combination meter printed circuit.

EL

IDX

WARNING BUZZER

Component Parts and Harness Connector Location

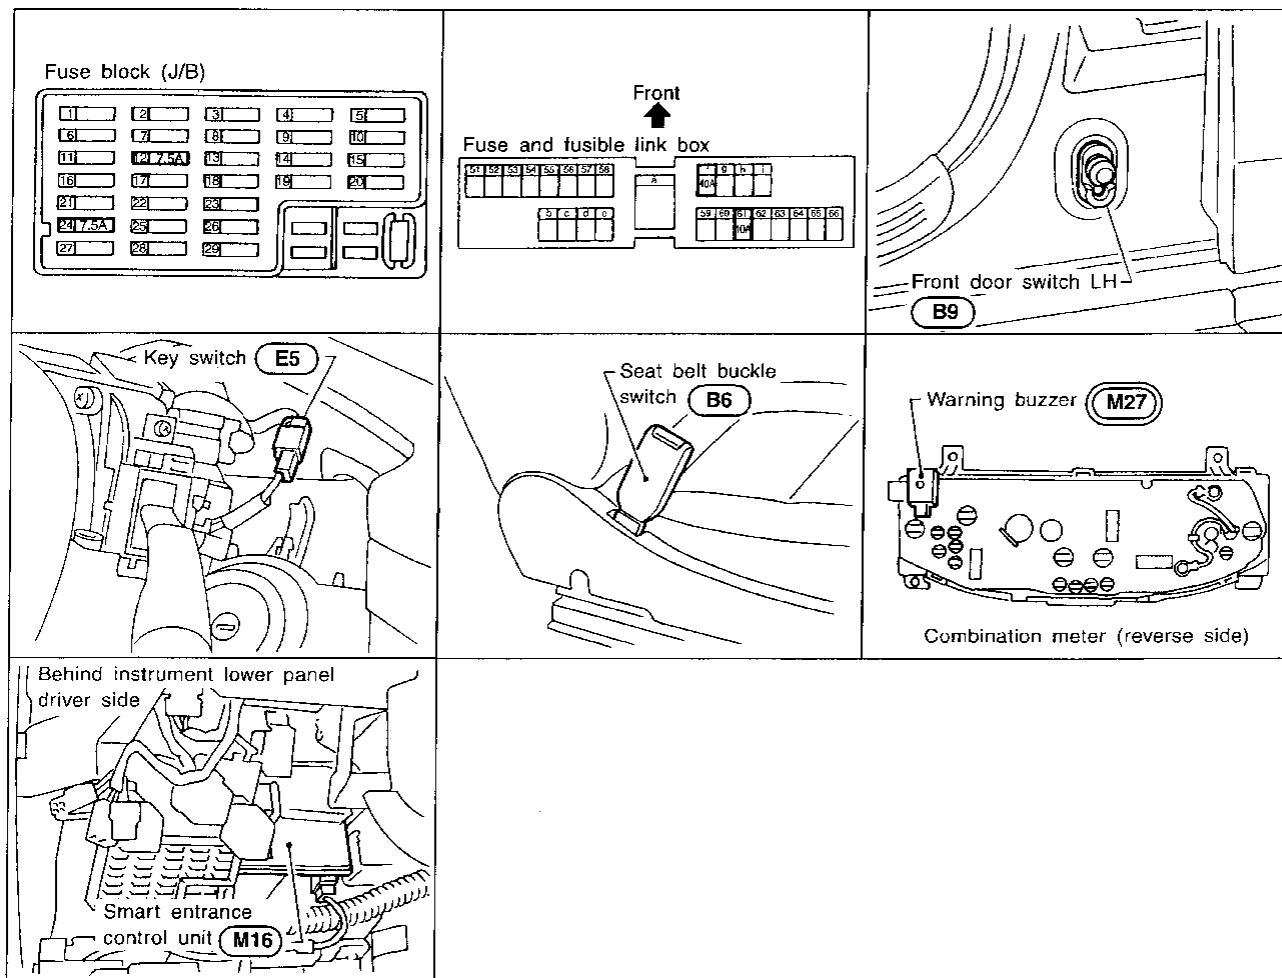

MEL073H

Warning Buzzer/System Description

The warning buzzer is controlled by the smart entrance control unit.

Power is supplied at all times

- through 7.5A fuse [No. 24], located in the fuse block (J/B)
- to warning buzzer terminal ①
- to key switch terminal ①.

Power is supplied at all times

- through 10A fuse [No. 6], located in the fuse block (J/B)
- to lighting switch terminal ⑪.

Power is supplied at all times

- through 40A fusible link (letter T, located in the fuse and fusible link box).
- to smart entrance control unit terminal ①.

With the ignition switch in the ON or START position, power is supplied

- through 7.5A fuse [No. 12], located in the fuse block (J/B)
- to smart entrance control unit terminal ⑪.

Ground is supplied to smart entrance control unit terminal ⑩ through body grounds (M4) and (M77).

When a signal, or combination of signals, is received by the smart entrance control unit, ground is supplied

- through smart entrance control unit terminal ⑫
- to warning buzzer terminal ③.

With power and ground supplied, the warning buzzer will sound.

WARNING BUZZER

Warning Buzzer/System Description (Cont'd)

Ignition key warning buzzer

With the key in the ignition switch in the OFF or ACC position, and the driver's door open, the warning buzzer will sound. A battery positive voltage is supplied

- from key switch terminal ②
- to smart entrance control unit terminal ⑳.

Ground is supplied

- from front door switch LH terminal ①
- to smart entrance control unit terminal ⑮.

Front door switch LH terminal ② is grounded through body grounds (B11), (B22) and (D210).

Light warning buzzer

With ignition switch OFF or ACC, driver's door open, and lighting switch in 1ST or 2ND position, warning buzzer will sound. A battery positive voltage is supplied.

- from lighting switch terminal ⑫
- to smart entrance control unit terminal ㉕

Ground is supplied

- from front door switch LH terminal ①
- to smart entrance control unit terminal ⑮.

Front door switch LH terminal ② is grounded through body grounds (B11), (B22) and (D210).

Seat belt warning buzzer

With ignition switch turned ON and seat belt unfastened (seat belt switch ON), warning buzzer will sound for approximately 6 seconds.

Ground is supplied

- from seat belt switch terminal ①
- to smart entrance control unit terminal ㉑.

Seat belt switch terminal ② is grounded through body grounds (B11), (B22) and (D210).

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT




HA

EL

IDX


WARNING BUZZER

Warning Buzzer/Wiring Diagram — BUZZER —

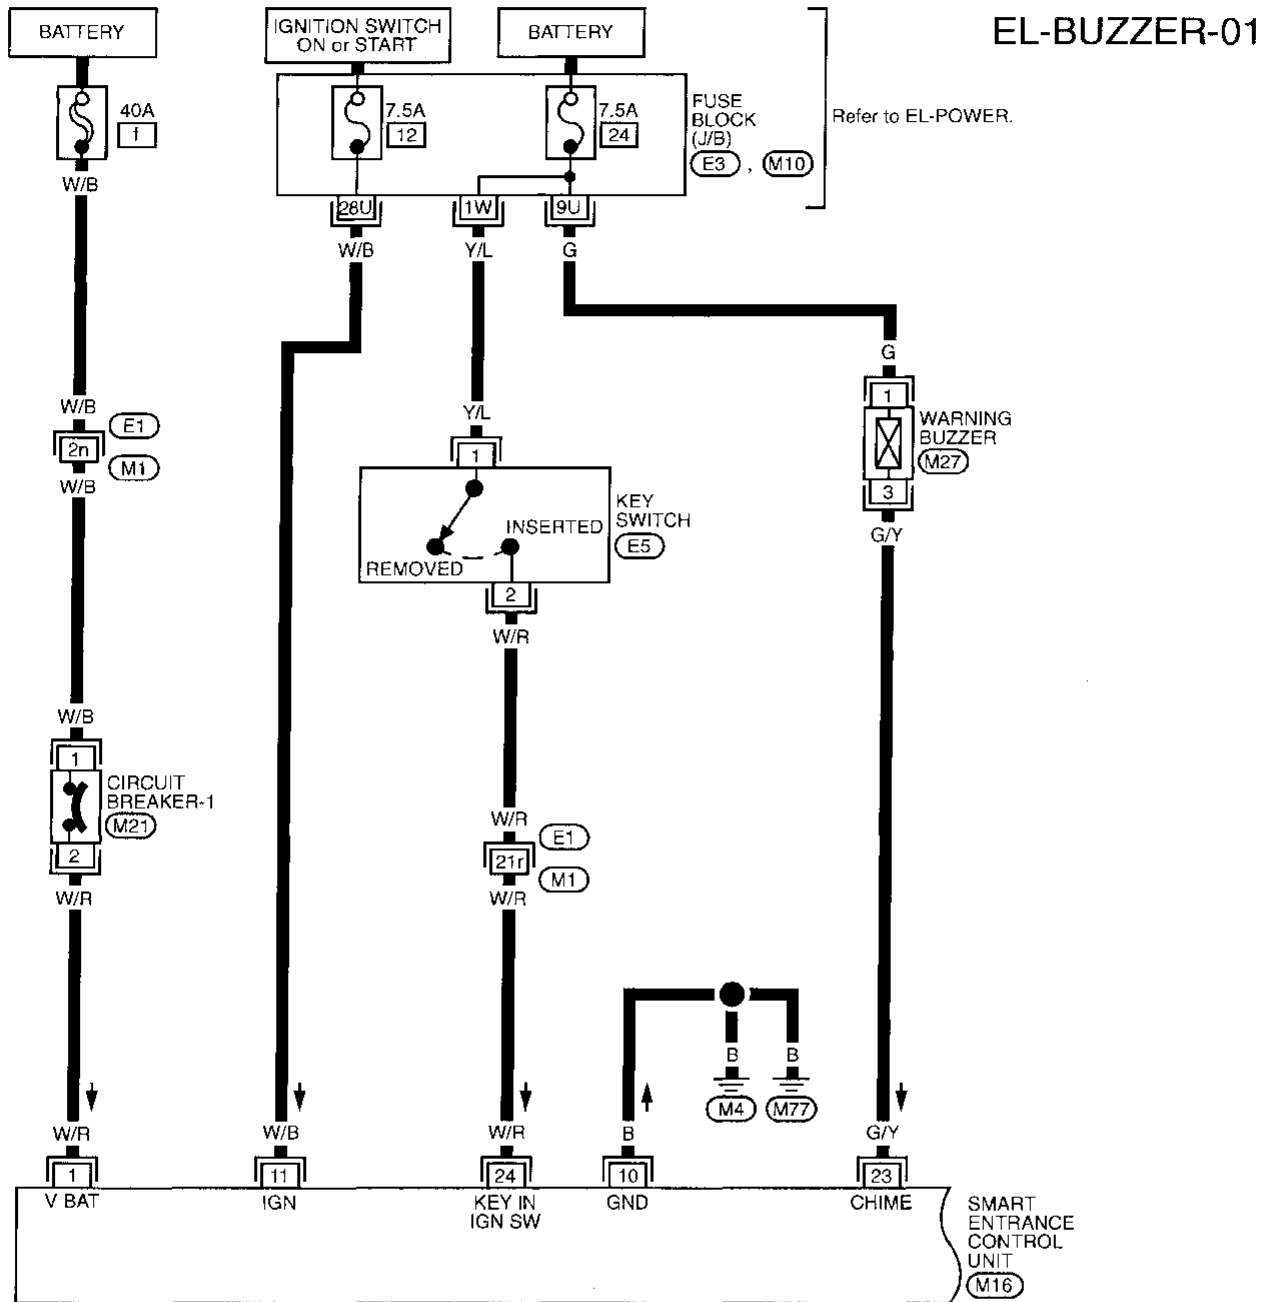

Refer to last page (Foldout page).

- (E1) (M1)
- (E3)
- (M10)




WARNING BUZZER

Warning Buzzer/Wiring Diagram — BUZZER — (Cont'd)






EL-BUZZER-02

GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT

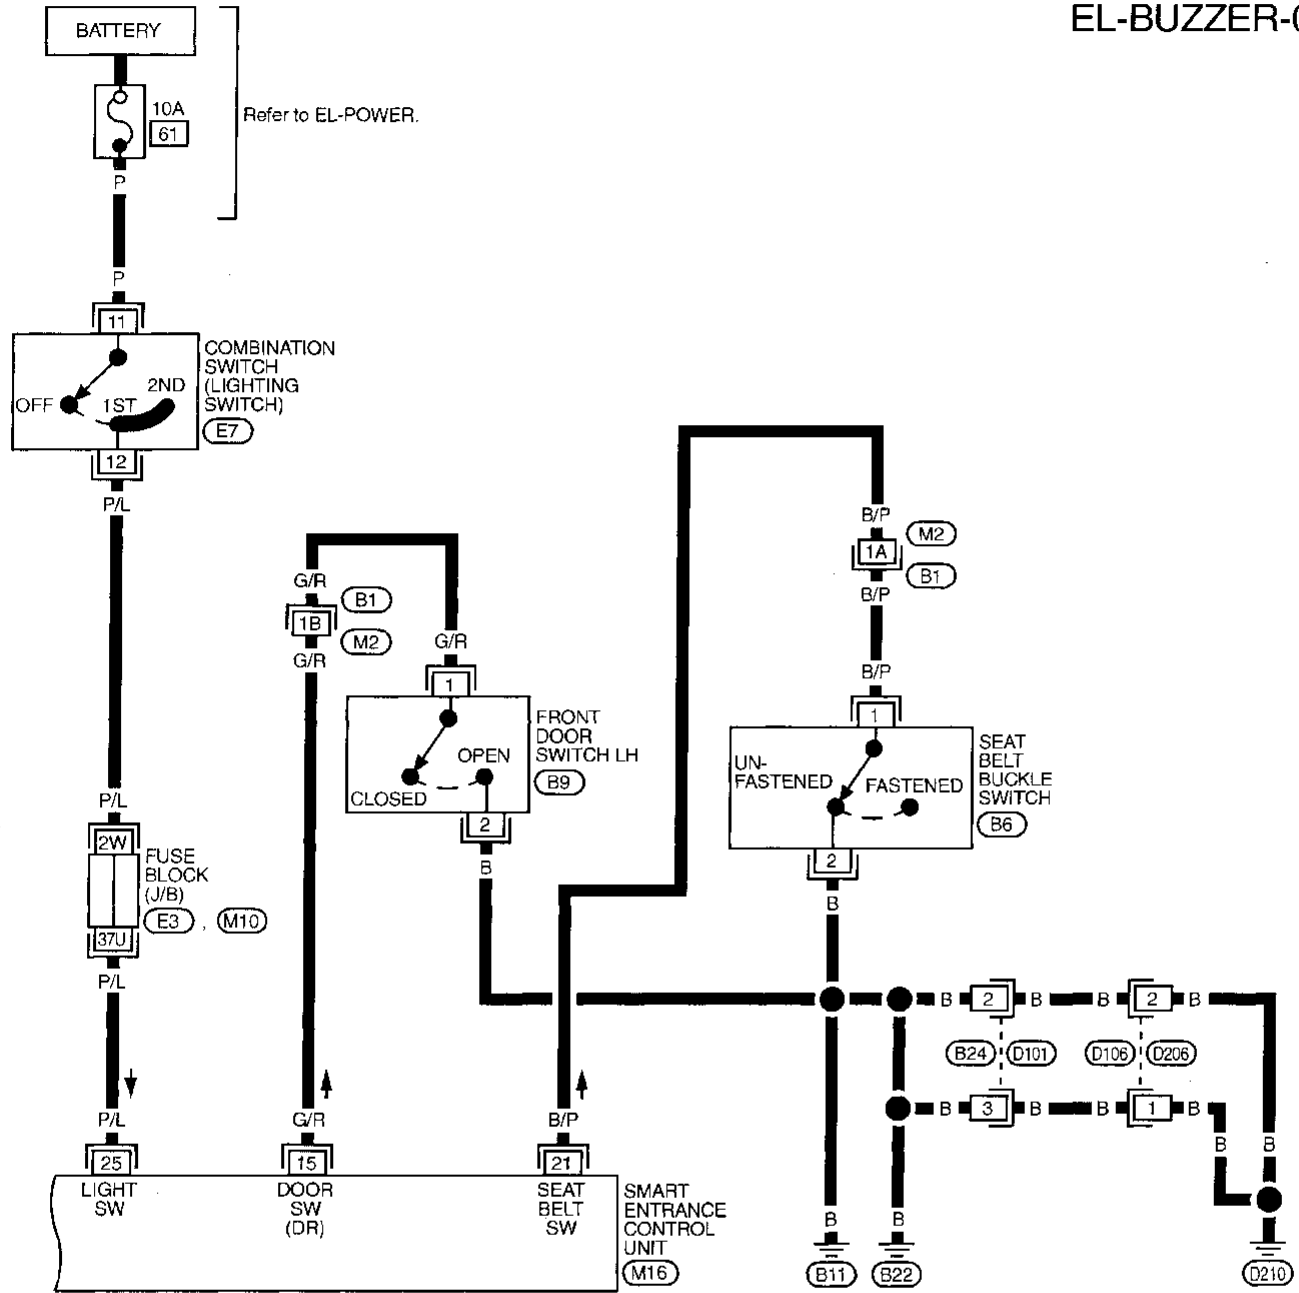

Refer to last page (Foldout page).

- (M2) (B1)
- (M10)
- (E3)




HA
EL
IDX

WARNING BUZZER

Trouble Diagnoses

SYMPTOM CHART


REFERENCE PAGE	EL-102	EL-103	EL-103	EL-104	EL-104
SYMPTOM	POWER SUPPLY AND GROUND CIRCUIT CHECK	DIAGNOSTIC PROCEDURE 1 (Lighting switch input signal check)	DIAGNOSTIC PROCEDURE 2 (Key switch input signal check)	DIAGNOSTIC PROCEDURE 3 (Seat belt buckle switch input signal check)	DIAGNOSTIC PROCEDURE 4
Light warning buzzer does not activate.	X	X			X
Ignition key warning buzzer does not activate.	X		X		X
Seat belt warning buzzer does not activate.	X			X	X
All warning buzzers do not activate.	X				X

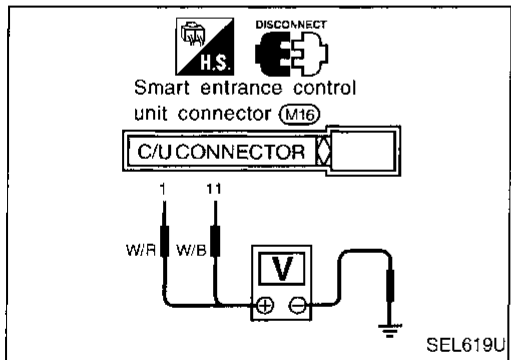

POWER SUPPLY AND GROUND CIRCUIT CHECK

Power supply for smart entrance control unit

Terminals		Ignition switch position		
⊕	⊖	OFF	ACC	ON
①	Ground	Battery voltage	Battery voltage	Battery voltage
⑪	Ground	0V	0V	Battery voltage

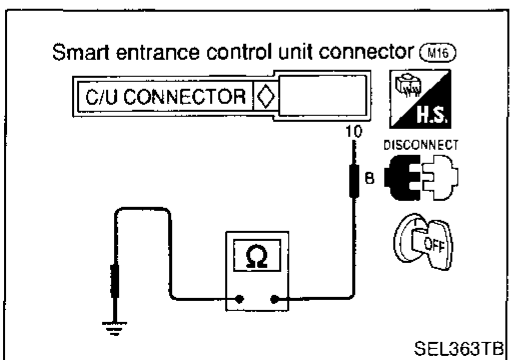

Ground circuit check


Terminals	Continuity
⑩ - Ground	Yes

WARNING BUZZER

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 1

(Lighting switch input signal check)

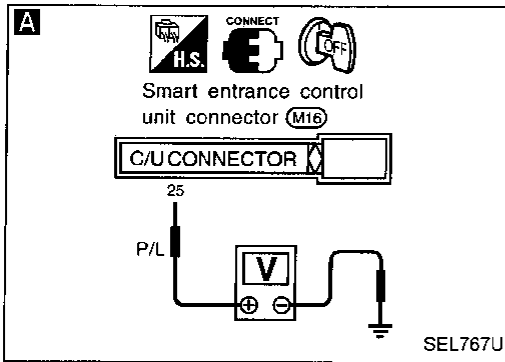

A

CHECK LIGHTING SWITCH INPUT SIGNAL.

Check voltage between control unit terminal ②⑤ and ground.

Condition of lighting switch	Voltage [V]
1ST or 2ND	Approx. 12
OFF	0

OK

Go to Procedure 4.

NG

Check the following.

- 10A fuse (No. 61, located in the fuse and fusible link box)
- Harness for open or short between control unit and lighting switch

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST


RS

BT

HA

EL

IDX

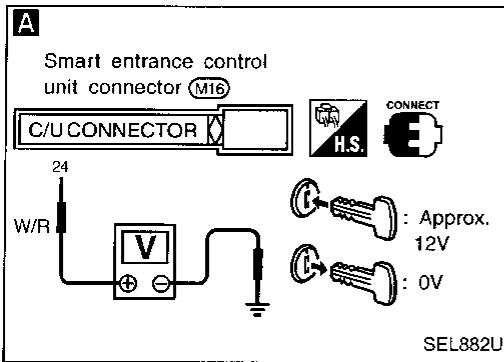

DIAGNOSTIC PROCEDURE 2

(Key switch input signal check)

A

CHECK KEY SWITCH INPUT SIGNAL.

Check voltage between control unit terminal ②④ and ground.

Condition of key switch	Voltage [V]
Key is inserted.	Approx. 12
Key is withdrawn.	0

OK

Go to Procedure 4.

NG

Check the following.

- Key switch
Refer to "ELECTRICAL COMPONENTS INSPECTION" (EL-105).
- 7.5A fuse [No. 24, located in fuse block (J/B)]
- Harness for open or short between key switch and fuse
- Harness for open or short between control unit and key switch

HA

EL






IDX

WARNING BUZZER










Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 3

(Seat belt buckle switch input signal check)

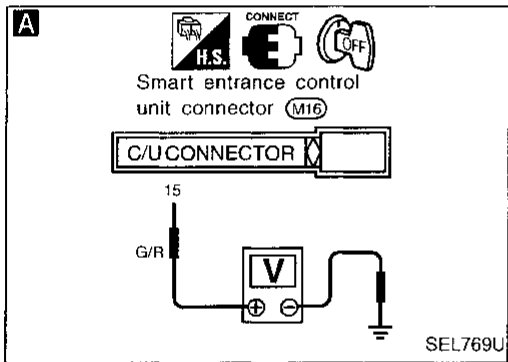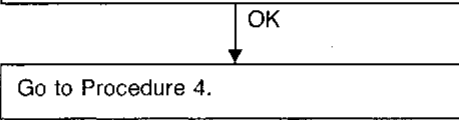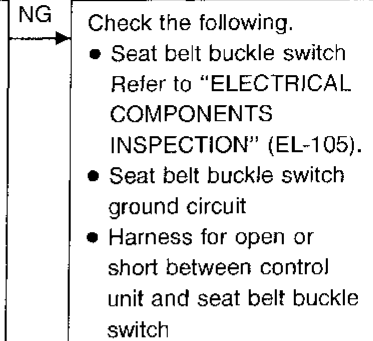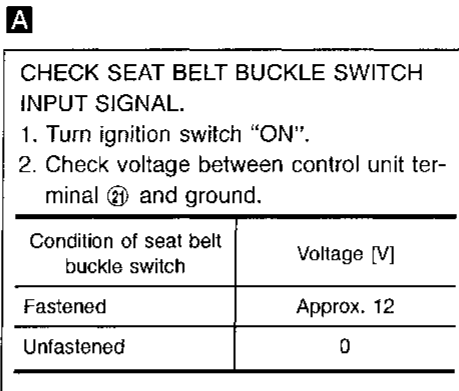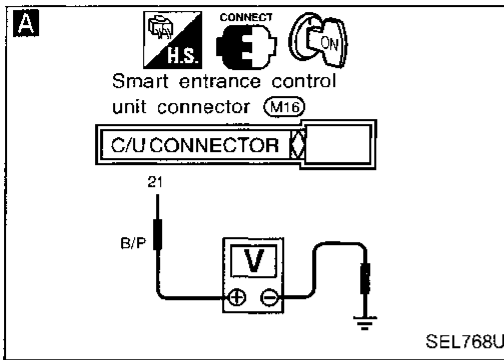

DIAGNOSTIC PROCEDURE 4

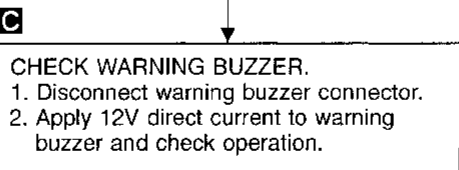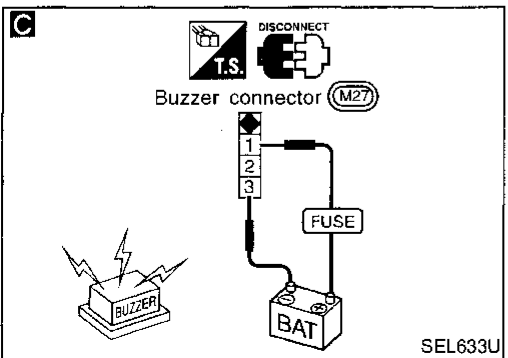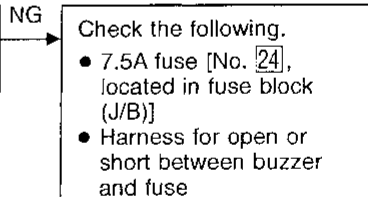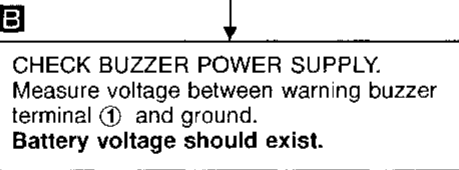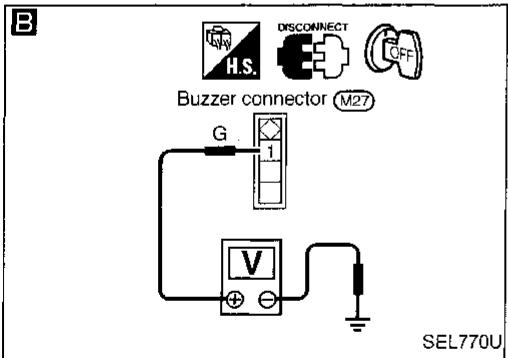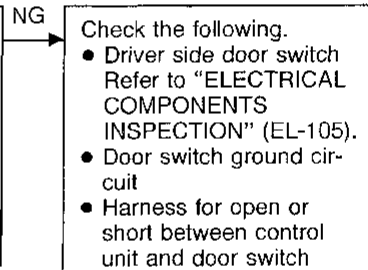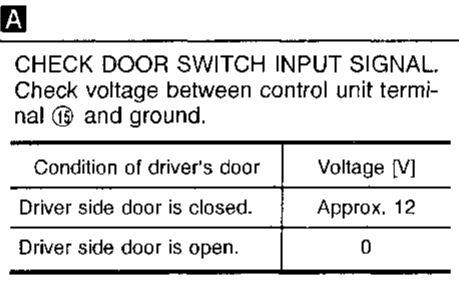


WARNING BUZZER

Trouble Diagnoses (Cont'd)


ELECTRICAL COMPONENTS INSPECTION

Key switch (insert)

Check continuity between terminals when key is inserted in ignition key cylinder and key is removed from ignition key cylinder.

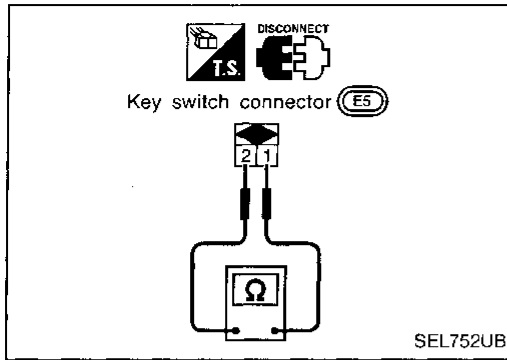


Terminal No.	Condition	Continuity
① - ②	Key is inserted	Yes
	Key is removed	No

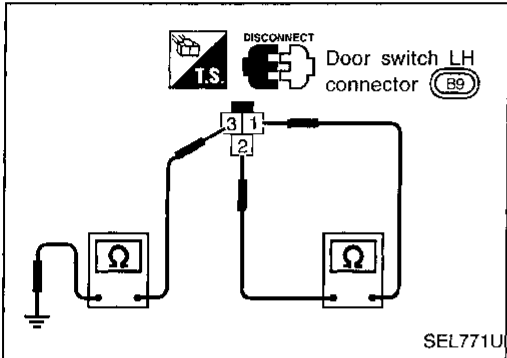

Driver side door switch

Check continuity between terminals when door switch is pushed and released.

Terminal No.	Condition	Continuity
① - ②, ③ - ground	Door switch is pushed.	No
	Door switch is released.	Yes

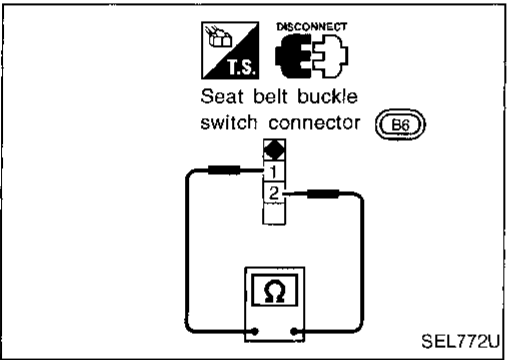

Seat belt buckle switch

Check continuity between terminals when seat belt is fastened and unfastened.

Terminal No.	Condition	Continuity
① - ②	Seat belt is fastened.	No
	Seat belt is unfastened.	Yes

GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

System Description

WIPER OPERATION

The wiper switch is controlled by a lever built into the combination switch.

There are three wiper switch positions:

- LO speed
- HI speed
- INT (Intermittent)

With the ignition switch in the ACC or ON position, power is supplied

- through 20A fuse [No. 19 , located in the fuse block (J/B)]
- to wiper motor terminal 6 .

Low and high speed wiper operation

Ground is supplied to wiper switch terminal 17 through body grounds E13 and E41 .

When the wiper switch is placed in the LO position, ground is supplied

- through terminal 14 of the wiper switch
- to wiper motor terminal 2 .

With power and ground supplied, the wiper motor operates at low speed.

When the wiper switch is placed in the HI position, ground is supplied

- through terminal 16 of the wiper switch
- to wiper motor terminal 1 .

With power and ground supplied, the wiper motor operates at high speed.

Auto stop operation

With wiper switch turned OFF, wiper motor will continue to operate until wiper arms reach windshield base.

When wiper arms are not located at base of windshield with wiper switch OFF, ground is provided

- from terminal 14 of the wiper switch
- to wiper motor terminal 2 , in order to continue wiper motor operation at low speed.

Ground is also supplied

- through terminal 13 of the wiper switch
- to wiper amplifier terminal 2
- through terminal 7 of the wiper amplifier
- to wiper motor terminal 5
- through terminal 4 of the wiper motor, and
- through body grounds M4 and M77 .

When wiper arms reach base of windshield, wiper motor terminals 5 and 6 are connected instead of terminals 4 and 5 . Wiper motor will then stop wiper arms at the PARK position.

Intermittent operation

The wiper motor operates the wiper arms one time at low speed at a set interval of approximately 3 to 13 seconds. This feature is controlled by the wiper amplifier.

When the wiper switch is placed in the INT position, ground is supplied

- to wiper amplifier terminal 1
- from wiper switch terminal 15
- through body grounds E13 and E41 .
- to wiper motor terminal 2
- through the wiper switch terminal 14
- to wiper switch terminal 13
- through wiper amplifier terminal 2
- to wiper amplifier terminal 3
- through body grounds M4 and M77 .

The desired interval time is input

- to wiper amplifier terminal 8
- from wiper switch terminal 19 .

The wiper motor operates at low speed at the desired time interval.

WIPER AND WASHER

System Description (Cont'd)

WASHER OPERATION

With the ignition switch in the ACC or ON position, power is supplied

- through 20A fuse [No. 19], located in the fuse block (J/B)
- to washer motor terminal 1.

When the lever is pulled to the WASH position, ground is supplied

- to washer motor terminal 2, and
- to wiper amplifier terminal 6
- from terminal 16 of the wiper switch
- through terminal 17 of the wiper switch, and
- through body grounds E13 and E41.

With power and ground supplied, the washer motor operates.

When the lever is pulled to the WASH position for one second or more, the wiper motor operates at low speed for approximately 3 seconds to clean windshield. This feature is controlled by the wiper amplifier in the same manner as the intermittent operation.

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA



EL

IDX

WIPER AND WASHER

Front Wiper and Washer/Wiring Diagram — WIPER —

EL-WIPER-01

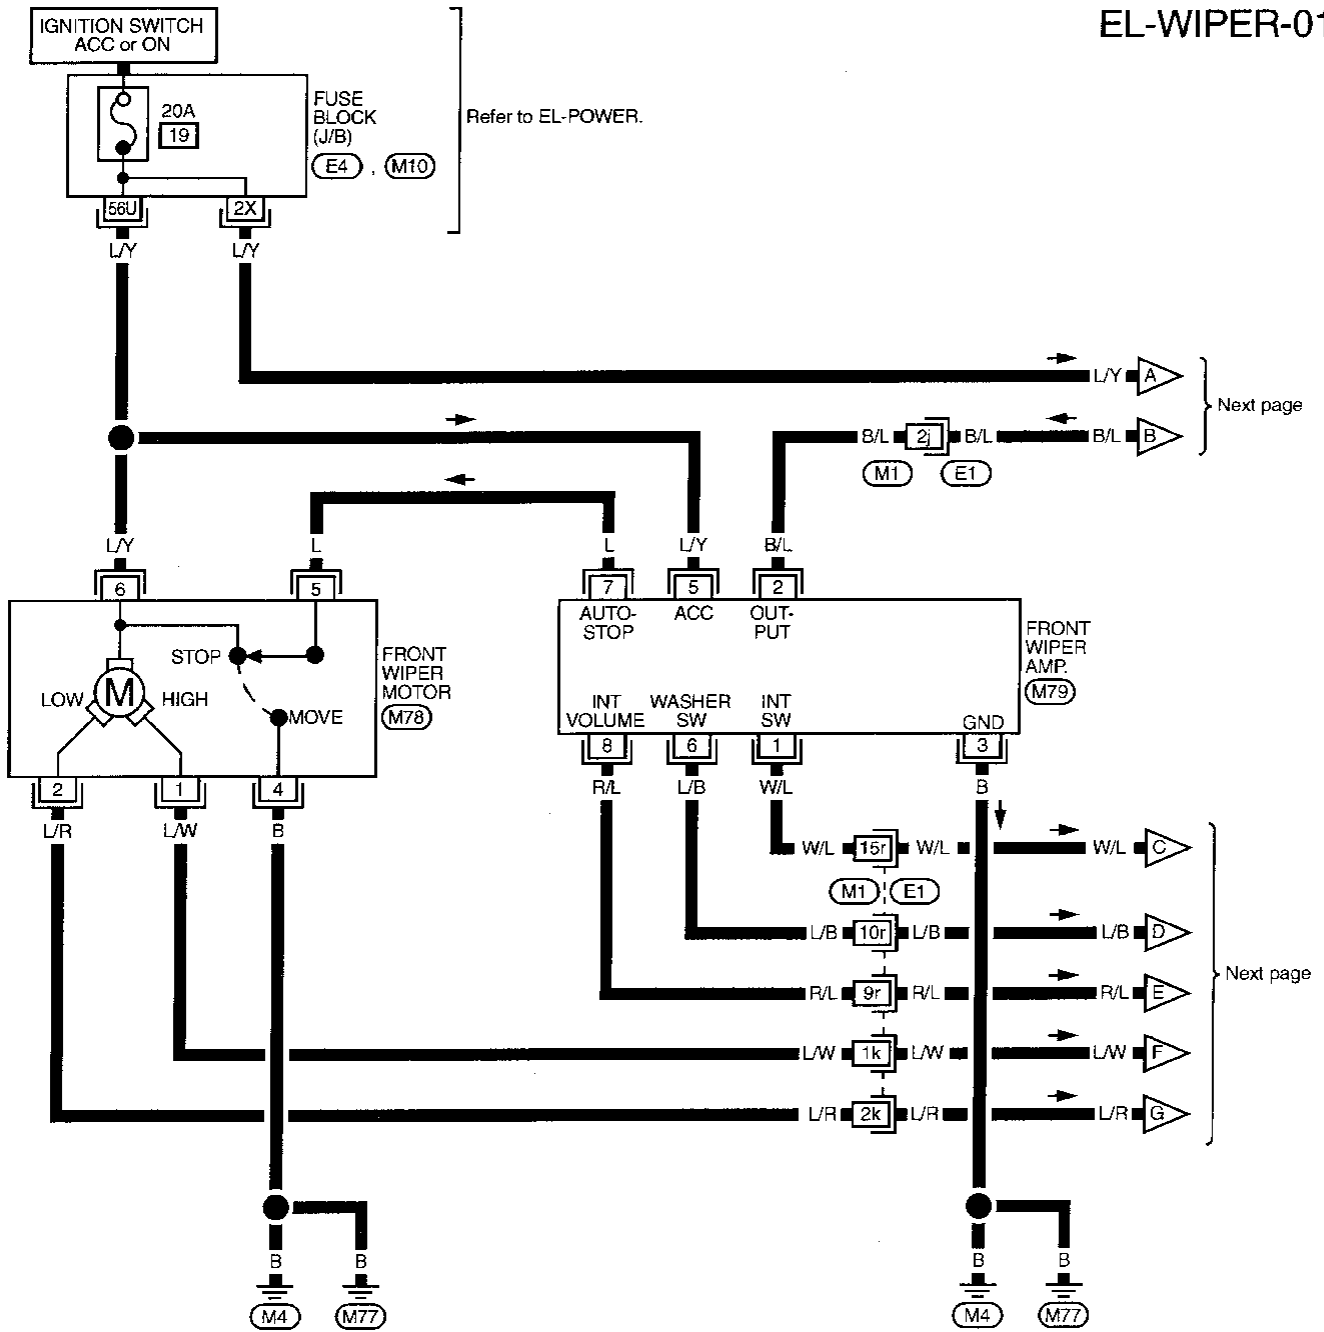

Refer to last page (Foldout page).

(E1), (M1)

(E4)



(M10)

WIPER AND WASHER

Front Wiper and Washer/Wiring Diagram — WIPER — (Cont'd)

EL-WIPER-02





GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA

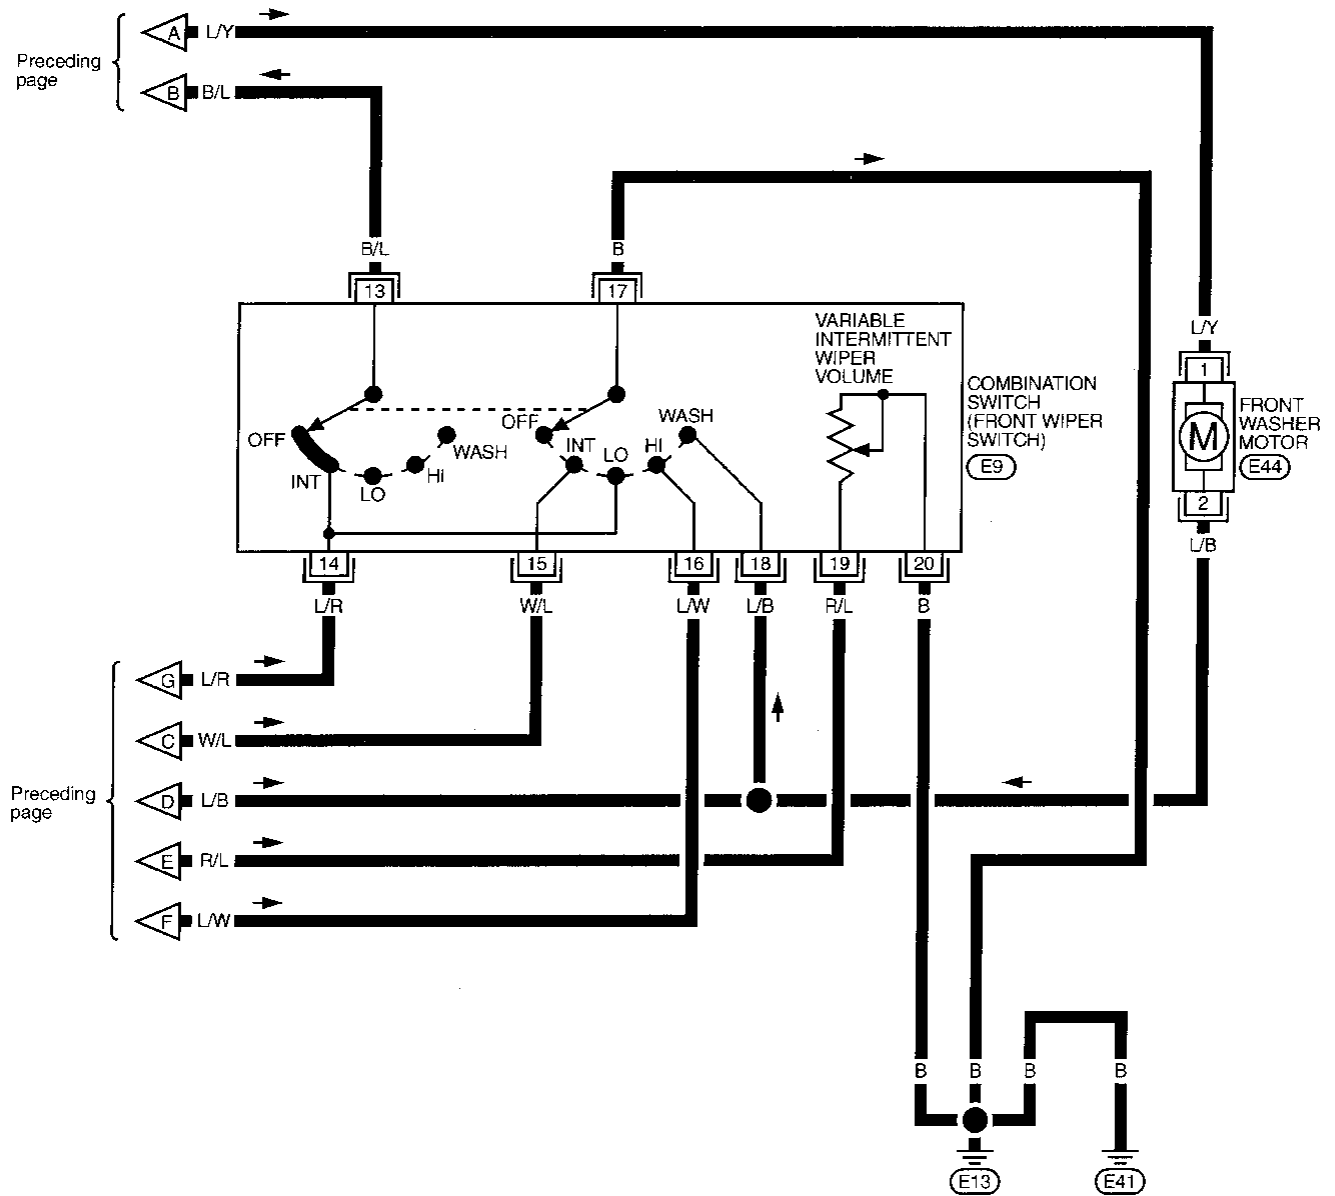

Trouble Diagnoses

DIAGNOSTIC PROCEDURE 1

SYMPTOM: Intermittent wiper does not operate.

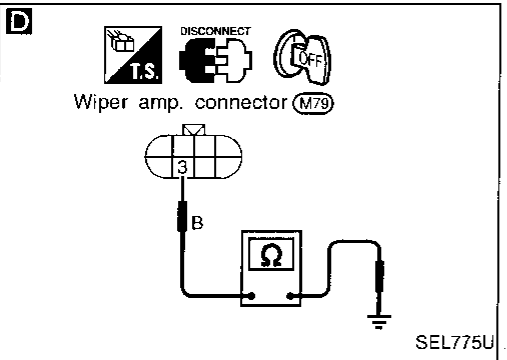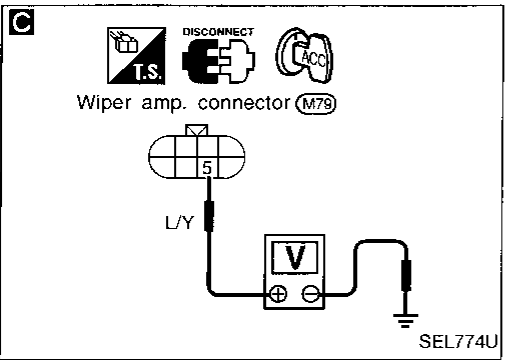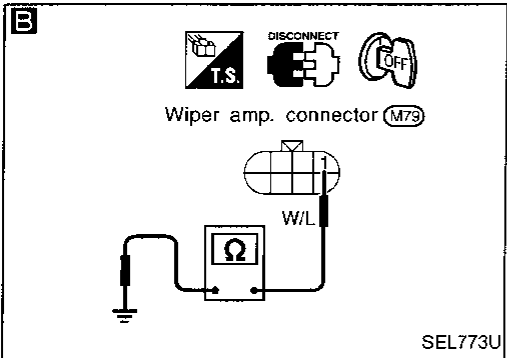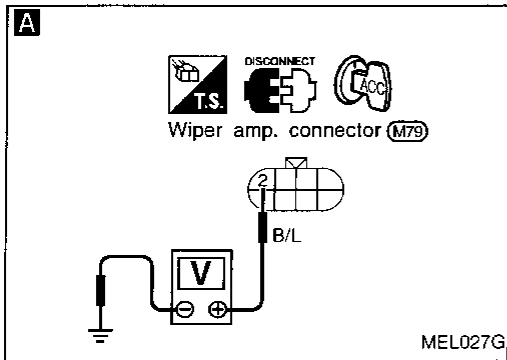

Check whether wiper operates with the wiper switch at Lo position.

NG → Check the following.

- 20A fuse [No. 19], located in fuse block (J/B)]
- Wiper motor
- Wiper switch
- Harness for open or short

OK →

A

1) Turn front wiper switch to OFF.
2) Disconnect wiper amp. connector.
3) Check voltage between wiper amp. terminal ② and ground.
Battery voltage should exist.

NG → Check the following.

- Wiper switch
- Harness for open or short between wiper amp. terminal ② and wiper switch terminal ⑬

OK →

B

CHECK INTERMITTENT SWITCH INPUT SIGNAL.
Check harness continuity between wiper amp. terminal ① and ground.

Condition of wiper switch	Continuity
OFF	No
INT	Yes

NG → Check the following.

- Wiper switch
- Harness for open or short between wiper amp. terminal ① and wiper switch terminal ⑭
- Ground circuit for front wiper switch terminal ⑰

OK →

C

CHECK WIPER AMP. POWER SUPPLY CIRCUIT.
Check voltage between wiper amp. terminal ⑤ and ground while ignition switch is "ACC".
Battery voltage should exist.

NG → Check the following.

- 20A fuse [No. 19], located in fuse block (J/B)]
- Harness for open or short between wiper amp. and fuse

OK →

D

CHECK WIPER AMP. GROUND CIRCUIT.
Check harness continuity between wiper amp. terminal ③ and body ground.
Continuity should exist.

NG → Repair harness or connector.

OK →

Replace wiper amp.


WIPER AND WASHER

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 2

SYMPTOM: Intermittent time of wiper cannot be adjusted.

GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

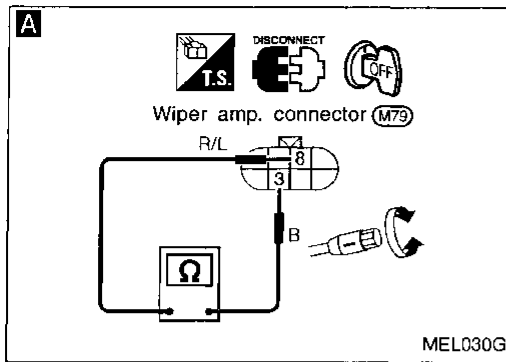

A

CHECK INTERMITTENT WIPER VOLUME INPUT SIGNAL.

- 1) Disconnect wiper amp. connector.
- 2) Measure resistance between wiper amp. terminals ⑧ and ③ while turning intermittent wiper volume.


Position of wiper knob	Resistance [Ω]
S	0
L	Approx. 1 k

OK → Replace wiper amp.

NG

Check the following.

- Intermittent wiper volume
- Harness for open or short between wiper amp. terminal ⑧ and wiper switch terminal ⑬
- Ground circuit for front wiper switch terminal ⑫

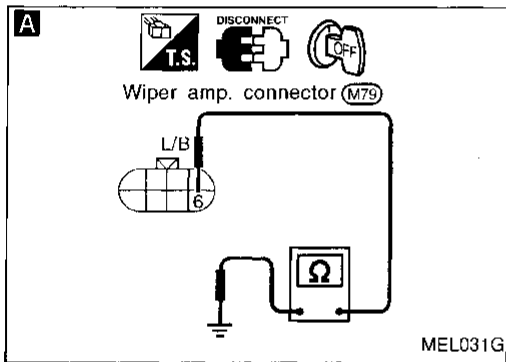

DIAGNOSTIC PROCEDURE 3

SYMPTOM: Wiper and washer activate individually but not in combination.

A

CHECK WASHER SWITCH INPUT SIGNAL.

- 1) Turn ignition switch to "OFF".
- 2) Disconnect wiper amp. connector.
- 3) Check harness continuity between wiper amp. terminal ⑥ and ground.


Condition of washer switch	Continuity
OFF	No
ON	Yes

NG → Check harness for open or short between wiper amp. terminal ⑥ and wiper switch terminal ⑬.

OK


Go to DIAGNOSTIC PROCEDURE 1. NG → Replace wiper amp.

WIPER AND WASHER

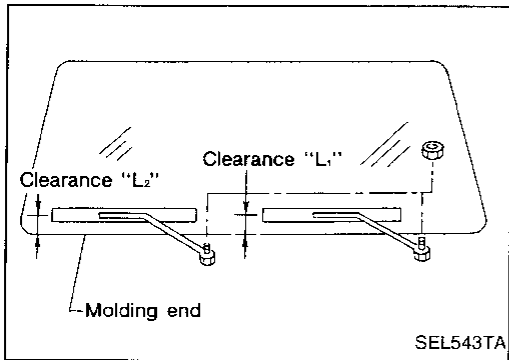


Wiper Installation and Adjustment

1. Prior to wiper arm installation, turn on wiper switch to operate wiper motor and then turn it "OFF" (Auto Stop).
2. Lift the blade up and then set it down onto glass surface to set the blade center to clearance "L₁" & "L₂" immediately before tightening nut.
3. Eject washer fluid. Turn on wiper switch to operate wiper motor and then turn it "OFF".
4. Ensure that wiper blades stop within clearance "L₁" & "L₂".
Clearance "L₁": 34 mm (1.34 in)
Clearance "L₂": 37 mm (1.46 in)
 - Tighten wiper arm nuts to specified torque.
Front wiper: 17 - 23 N·m (1.7 - 2.3 kg·m, 12 - 17 ft·lb)

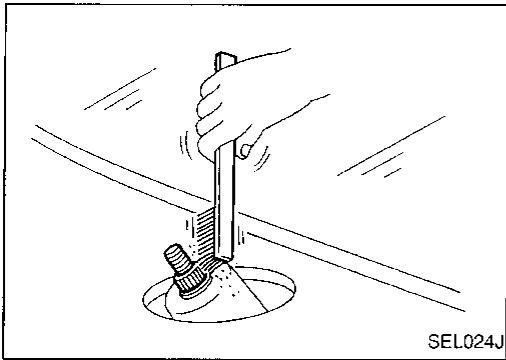


- Before reinstalling wiper arm, clean up the pivot area as illustrated. This will reduce possibility of wiper arm looseness.

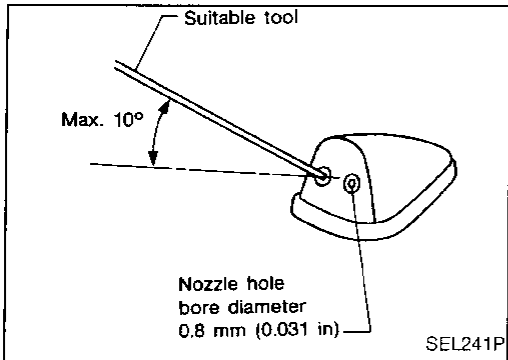

Washer Nozzle Adjustment

- Adjust washer nozzle with suitable tool as shown in the figure at left.
Adjustable range: ±10°

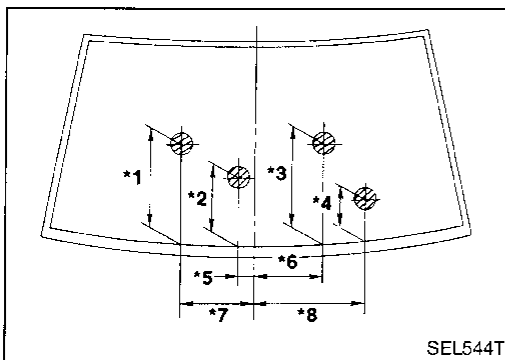


Unit: mm (in)

*1	390 (15.35)	*5	145 (5.71)
*2	160 (6.30)	*6	143 (5.63)
*3	379 (14.92)	*7	225 (8.86)
*4	140 (5.51)	*8	535 (21.06)


*: The diameters of these circles are less than 80 mm (3.15 in).

WIPER AND WASHER

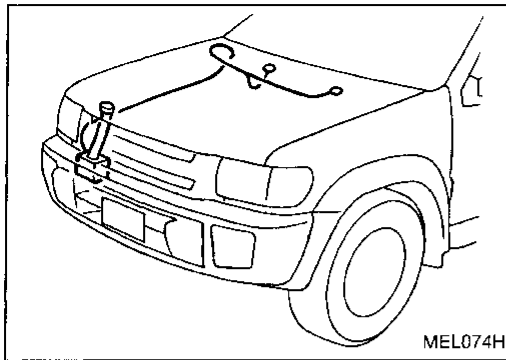

Washer Tube Layout

Wiper Linkage

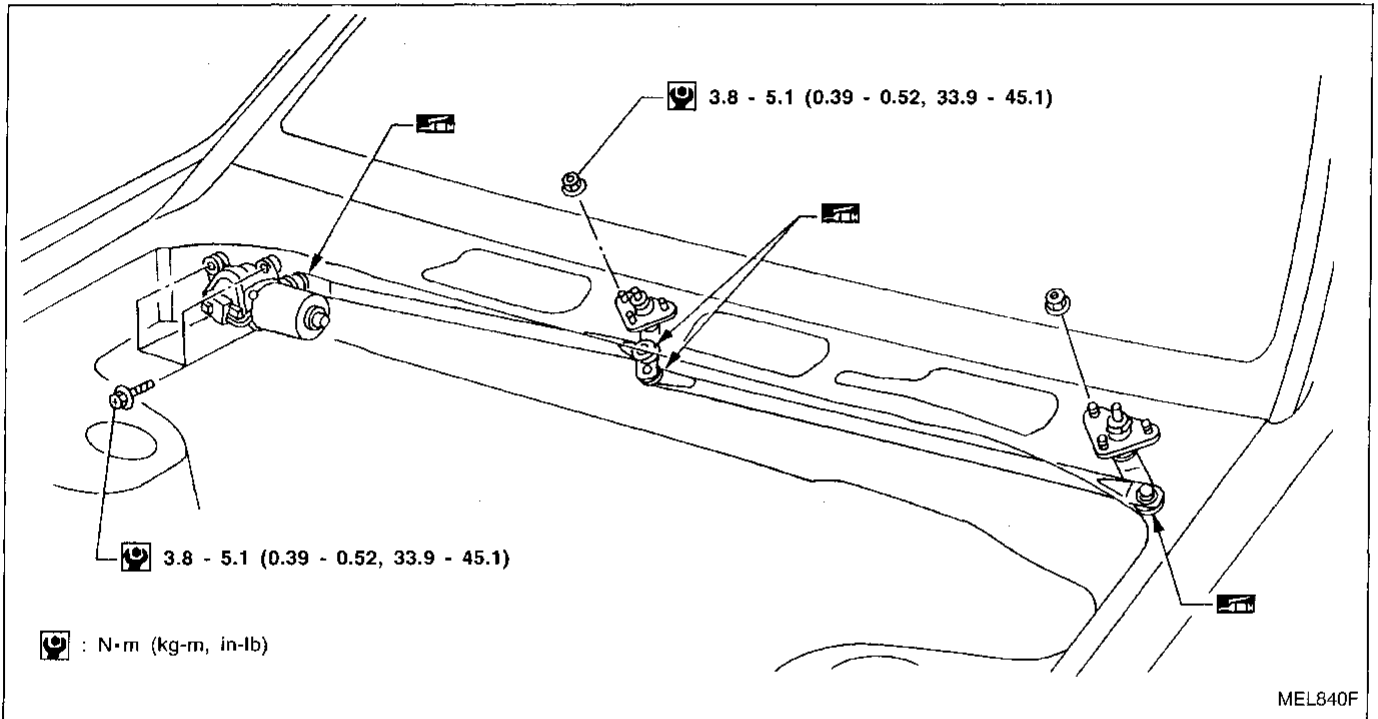

REMOVAL

1. Remove 4 bolts that secure wiper motor.
2. Detach wiper motor from wiper linkage at ball joint.
3. Remove wiper linkage.

Be careful not to break ball joint rubber boot.

INSTALLATION

- Grease ball joint portion before installation.
1. Installation is the reverse order of removal.

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

Rear Wiper and Washer/System Description

WIPER OPERATION

Power supply and ground

With ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 29], located in the fuse block (J/B)]
- to rear wiper relay terminals ④ and ①.

When the glass hatch switch is CLOSED, power is supplied

- from rear wiper relay terminal ③
- to rear wiper amp. terminal ⑤,
- to rear washer motor terminal ① and
- to rear wiper motor terminal ⑥.

If the glass hatch switch is OPEN, ground is supplied

- to rear wiper relay terminal ②
- from glass hatch switch terminal ①.

Then rear wiper relay is energized and power to the rear wiper amp., washer motor and wiper motor is interrupted.

(If the glass hatch is opened, no function of rear wiper motor will operate.)

If the rear wiper switch is turned to the INT or ON position, when glass hatch is opened, rear wiper relay terminal ② is also grounded

- through rear wiper relay terminals ⑥ and ⑦
- from rear wiper switch terminal ⑧.

(The purpose of this circuit is to prevent an abrupt operation of the rear wiper when the hatch is closed with the ignition switch turned to ON or ACC, and with the rear wiper switch set to INT or ON.)

Ground is supplied

- to rear wiper amplifier terminal ③
- through body grounds (B11), (B22) and (D210).
- to rear wiper switch terminal ③
- through body grounds (M4) and (M66).

Rising up operation

When the rear wiper switch is turned to the INT or ON position, ground is supplied

- through terminal ① of rear wiper switch
- to rear wiper amp. terminal ①.

Then wiper amp. is energized and power is supplied

- through rear wiper amp. terminal ④
- to rear wiper motor terminal ④.

Ground is supplied to rear wiper motor through rear wiper switch.

With power and ground supplied, rear wiper operates and rear wiper arm moves up.

Wiper does not return to resting position until wiper switch is turned to OFF position.

Low speed wiper operation

When the rear wiper switch is placed in the ON position, ground is supplied

- through terminal ⑤ of rear wiper switch
- to rear wiper motor terminal ③.

With power and ground supplied, the wiper motor operates at low speed.

WIPER AND WASHER

Rear Wiper and Washer/System Description (Cont'd)

Auto stop operation

With rear wiper switch turned OFF, rear wiper motor will continue to operate until wiper arms reach rear wiper stopper. GI

When wiper arm is not located at rear wiper stopper with wiper switch OFF, ground is provided MA

- from terminal ⑤ of the rear wiper switch
- to wiper motor terminal ③, in order to continue wiper motor operation at low speed.

Ground is also supplied EM

- through terminal ④ of the rear wiper switch
- to rear wiper amplifier terminal ②
- through terminal ⑦ of the rear wiper amplifier
- to rear wiper motor terminal ⑦
- through terminal ⑧ of the wiper motor, and
- through body grounds (B11), (B22) and (D210).

When wiper arms reach rear wiper stopper, rear wiper motor terminals ⑦ and ⑥ are connected instead of terminals ⑦ and ⑧. Rear wiper motor will then stop wiper arms at the PARK position. LC

Intermittent operation

The rear wiper motor operates the wiper arms at low speed approximately every 7 seconds. This feature is controlled by the wiper amplifier. EC

When the wiper switch is placed in the INT position, ground is supplied FE

- to wiper amplifier terminal ①
- from rear wiper switch terminal ①
- through body grounds (M4) and (M66).
- to wiper motor terminal ③
- through the rear wiper switch terminal ⑤
- to rear wiper switch terminal ④
- through wiper amplifier terminal ②
- to wiper amplifier terminal ③
- through body grounds (B11), (B22) and (D210).

The rear wiper motor operates at low speed intermittent. AT

WASHER OPERATION

With the ignition switch in the ACC or ON position, power is supplied TF

- through 10A fuse (No. 29), located in the fuse block
- to rear washer motor terminal ①.

When the rear wiper switch is turned to WASH position, ground is supplied PD

- to rear washer motor terminal ②, and
- to rear wiper amplifier terminal ⑥
- from terminal ② of rear wiper switch
- through terminal ③ of rear wiper switch, and
- through body grounds (B11), (B22) and (D210).

With power and ground supplied, the rear washer motor operates. FA

When the rear wiper switch is turned to WASH position for one second or more, the rear wiper motor operates at low speed for approximately 3 seconds after the rear wiper switch is released. This feature is controlled by the rear wiper amplifier in the same manner as the intermittent operation. RA

BR

ST

RS


BT

HA

EL








WIPER AND WASHER

Rear Wiper and Washer/Schematic

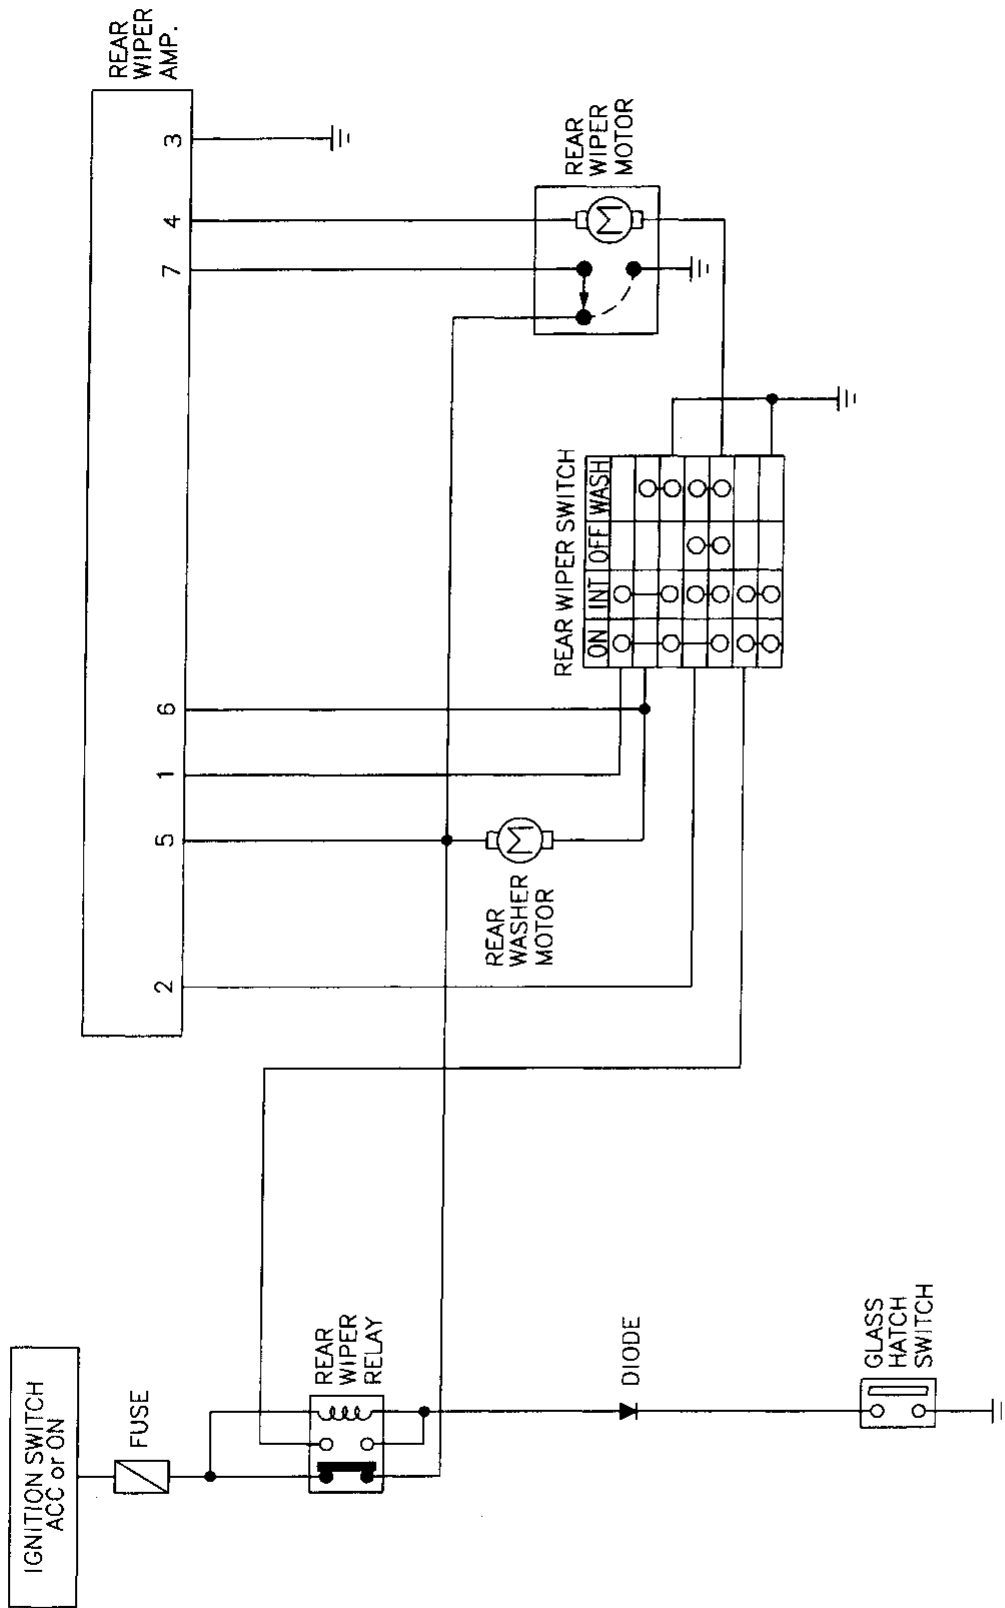

Rear Wiper and Washer/Wiring Diagram
— WIP/R —

EL-WIP/R-01

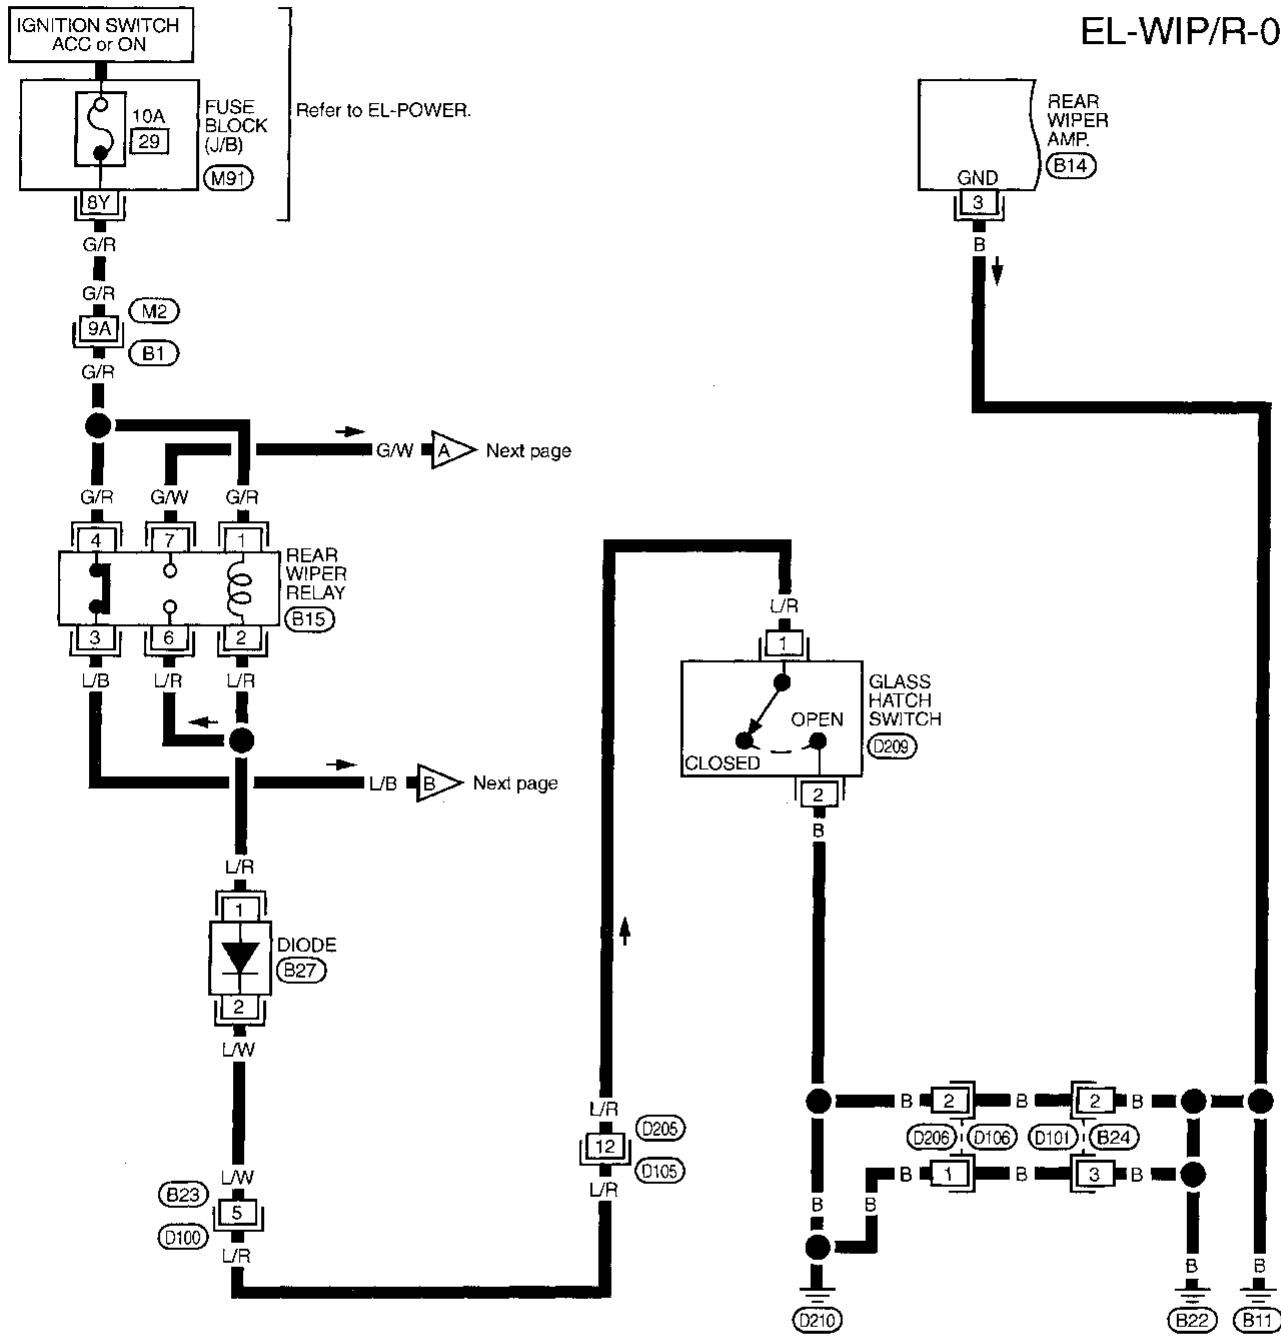

Refer to last page (Foldout page).

- (M9)
- (M2) (B1)

GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA




EL

IDX

WIPER AND WASHER

Rear Wiper and Washer/Wiring Diagram — WIP/R — (Cont'd)

EL-WIP/R-02

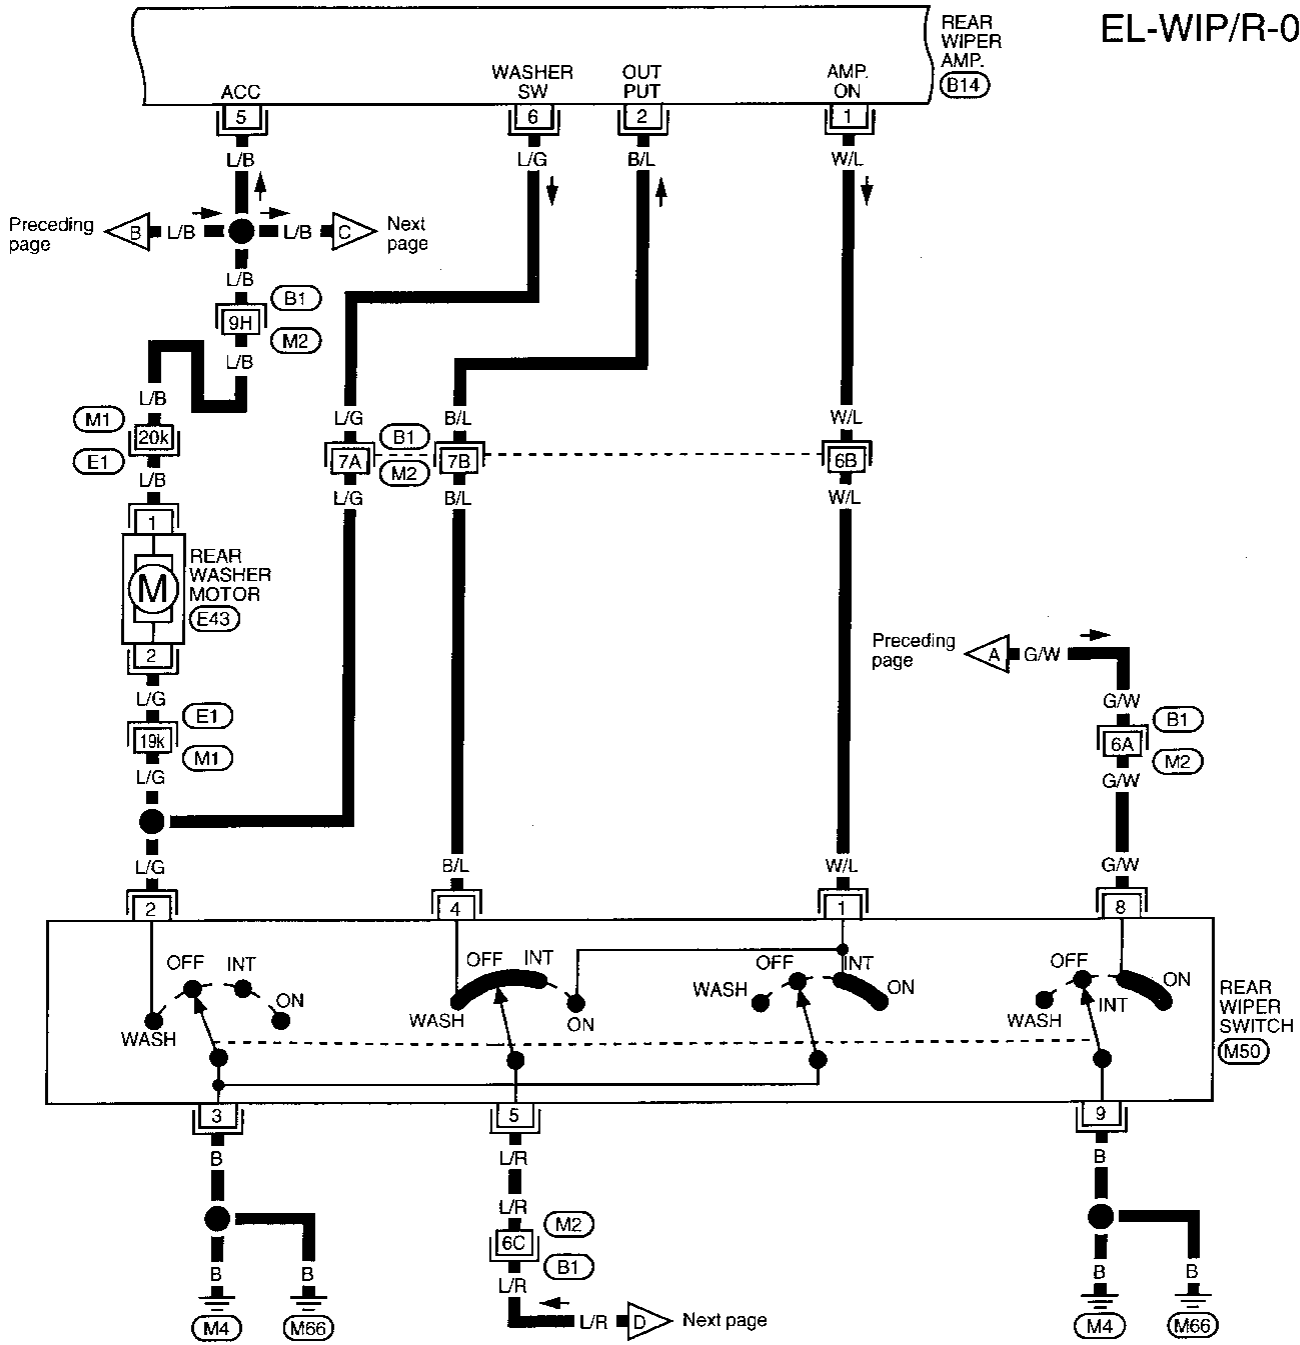



Refer to last page (Foldout page).

(E1), (M1)
(M2), (B1)

WIPER AND WASHER

Rear Wiper and Washer/Wiring Diagram — WIP/R — (Cont'd)

EL-WIP/R-03

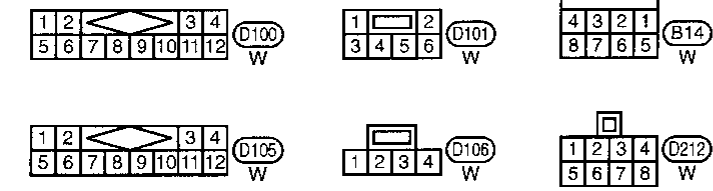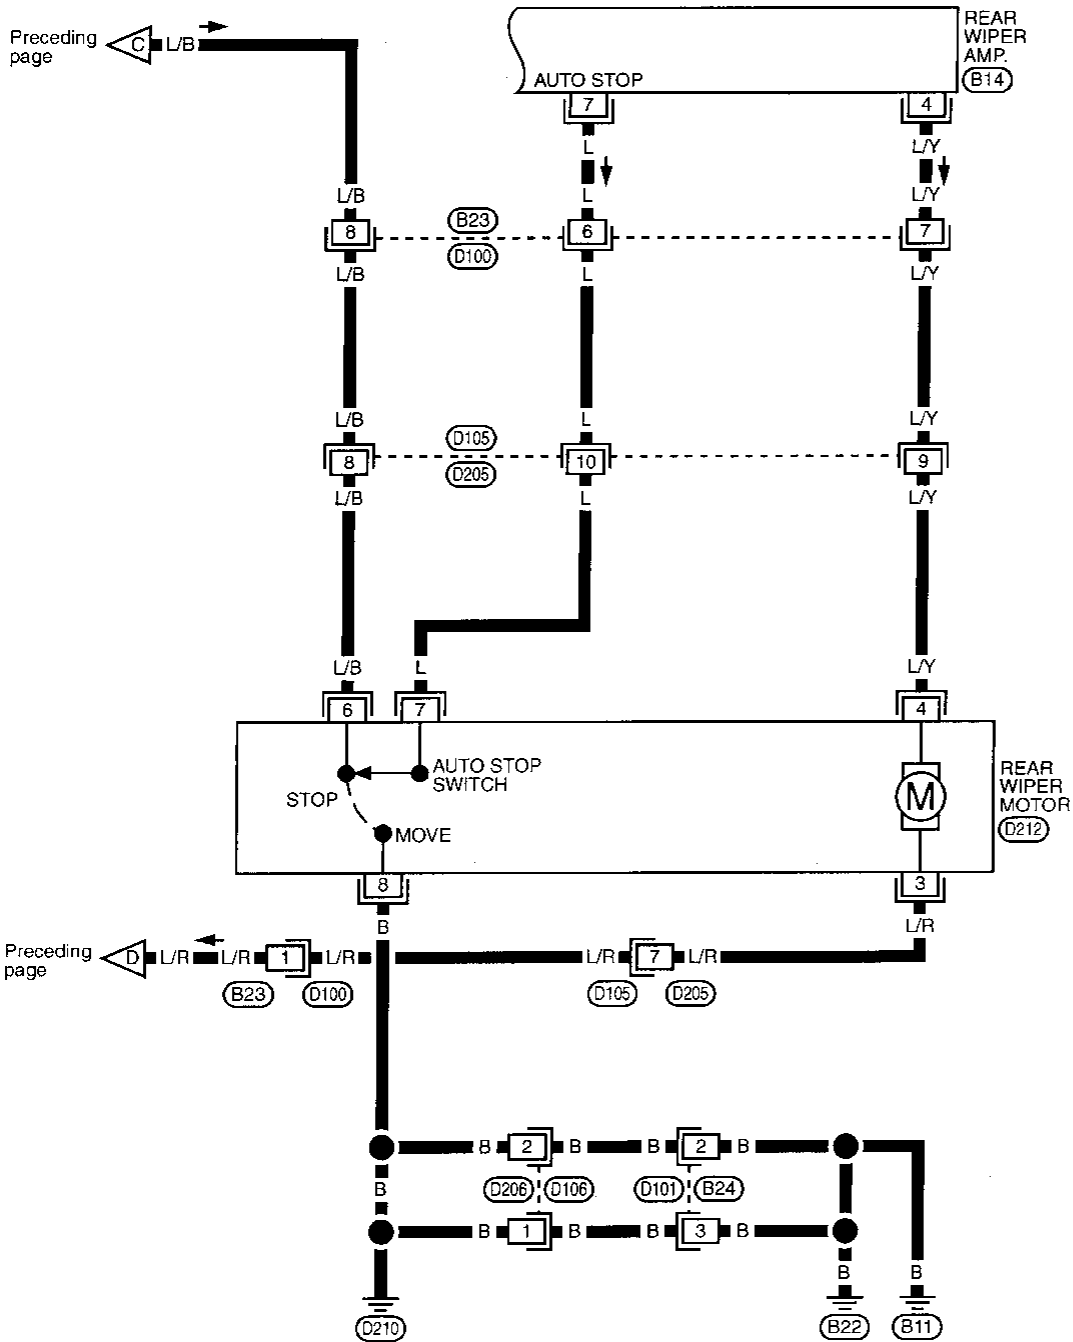

CI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA







EL

IDX


WIPER AND WASHER

Rear Wiper/Trouble Diagnoses

REAR WIPER AMP. INSPECTION TABLE (Data are reference values.)


Terminal No.	Item	Condition		Voltage (Approximate value)	
1	Amp. ON signal		Rear wiper switch	ON or INT	1V or less
				OFF	Approx. 12
2	Wiper amp. output		Rear wiper switch "INT"	Wiper is moving	1V or less
				Wiper stop	Approx. 12
3	Ground	---		---	
4	Rear wiper motor		Rear wiper switch	ON, INT or WASH	Approx. 12
				OFF	1V or less
5	Power supply (See NOTE)		Rear glass hatch	OPENED	0V
				CLOSED	Approx. 12
6	Washer switch		Rear wiper switch	WASH	1V or less
				OFF	Approx. 12
7	Auto stop		Rear wiper switch "ON" or "INT"	Wiper is moving	1V or less
				Wiper stop	Approx. 12


NOTE: Power to the rear wiper amp. will be interrupted when the rear glass hatch is opened. In that case, conduct the inspection of the rear wiper amp. with the rear glass hatch closed, unless otherwise indicated.

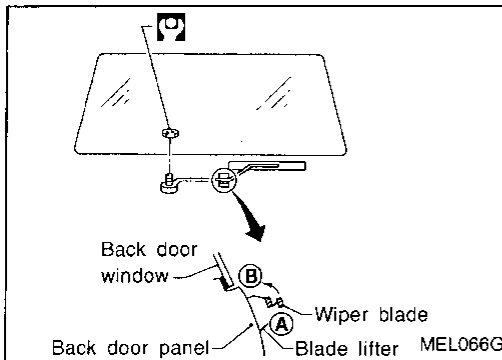


Rear Wiper Installation and Adjustment

1. Prior to wiper arm installation, turn on wiper switch to operate wiper motor and then turn it "OFF" (Auto Stop).
2. Install wiper arm to portion (A) as in figure below and tighten wiper arm nut to specification.
3. Then, set wiper arm to portion (B).

: 13 - 18 N·m (1.3 - 1.8 kg-m, 9 - 13 ft-lb)

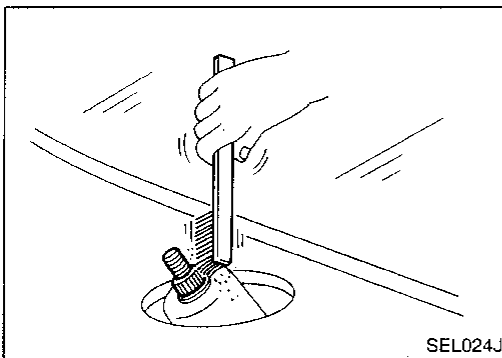

- Before reinstalling wiper arm, clean up the pivot area as illustrated. This will reduce possibility of wiper arm looseness.

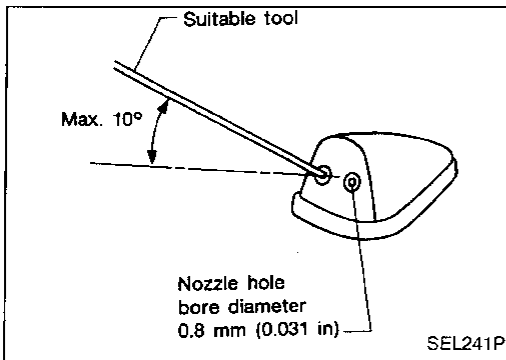

Rear Washer Nozzle Adjustment

- Adjust washer nozzle with suitable tool as shown in the figure at left.
Adjustable range: $\pm 10^\circ$ (In any direction)

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST


RS

BT


HA

EL

IDX

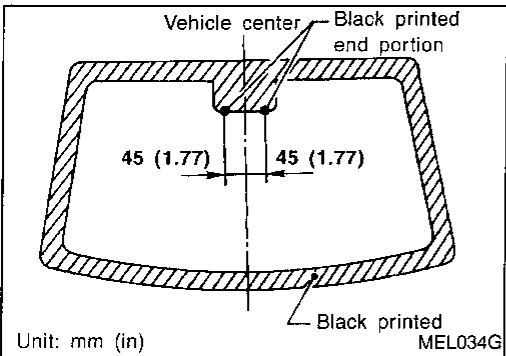

Washer Tube Layout

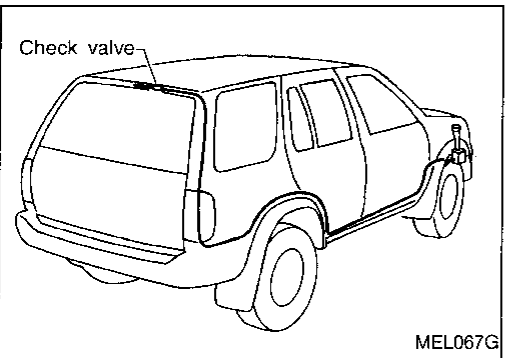

Check Valve (for rear washer)

- A check valve is provided in the washer fluid line. Be careful not to connect check valve to washer tube in the wrong direction.

ST


RS

BT

HA

EL


IDX

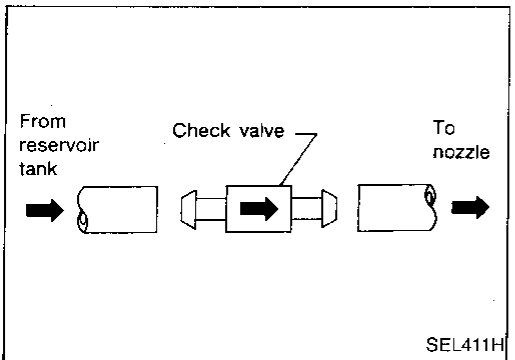

HORN AND CIGARETTE LIGHTER

Wiring Diagram — HORN —







EL-HORN-01

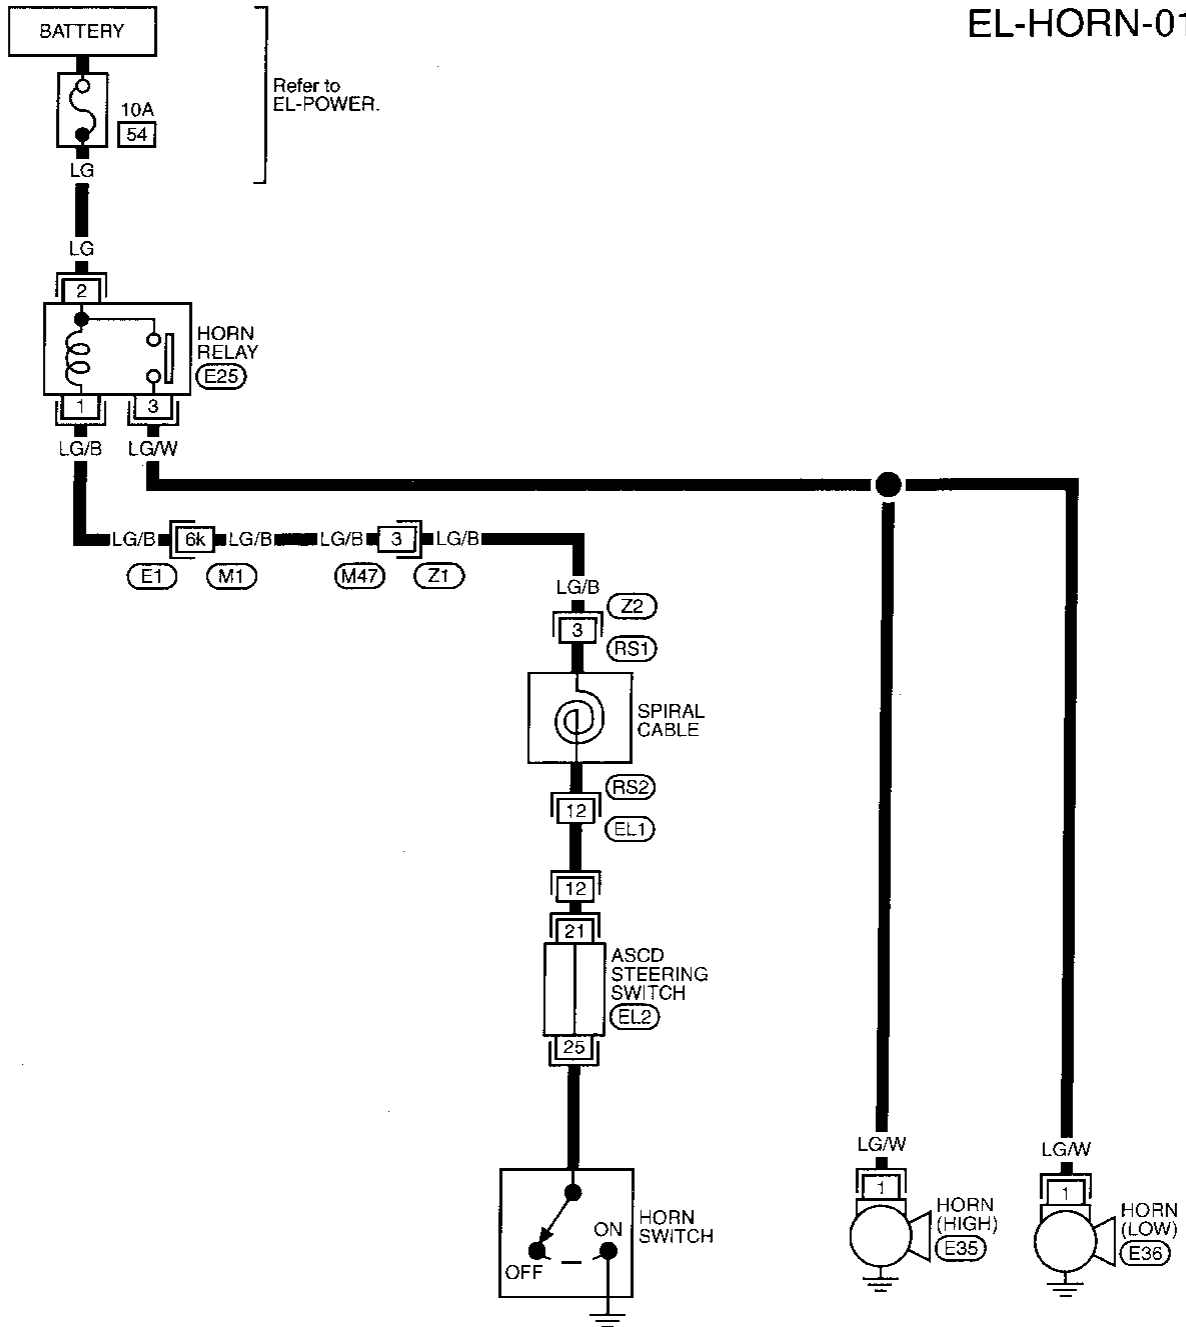

Refer to EL-POWER.

Refer to last page (Foldout page).


(E1) , (M1)



* : This connector is not shown in " HARNESS LAYOUT ", EL section.

HORN AND CIGARETTE LIGHTER


Wiring Diagram — HORN — (Cont'd)

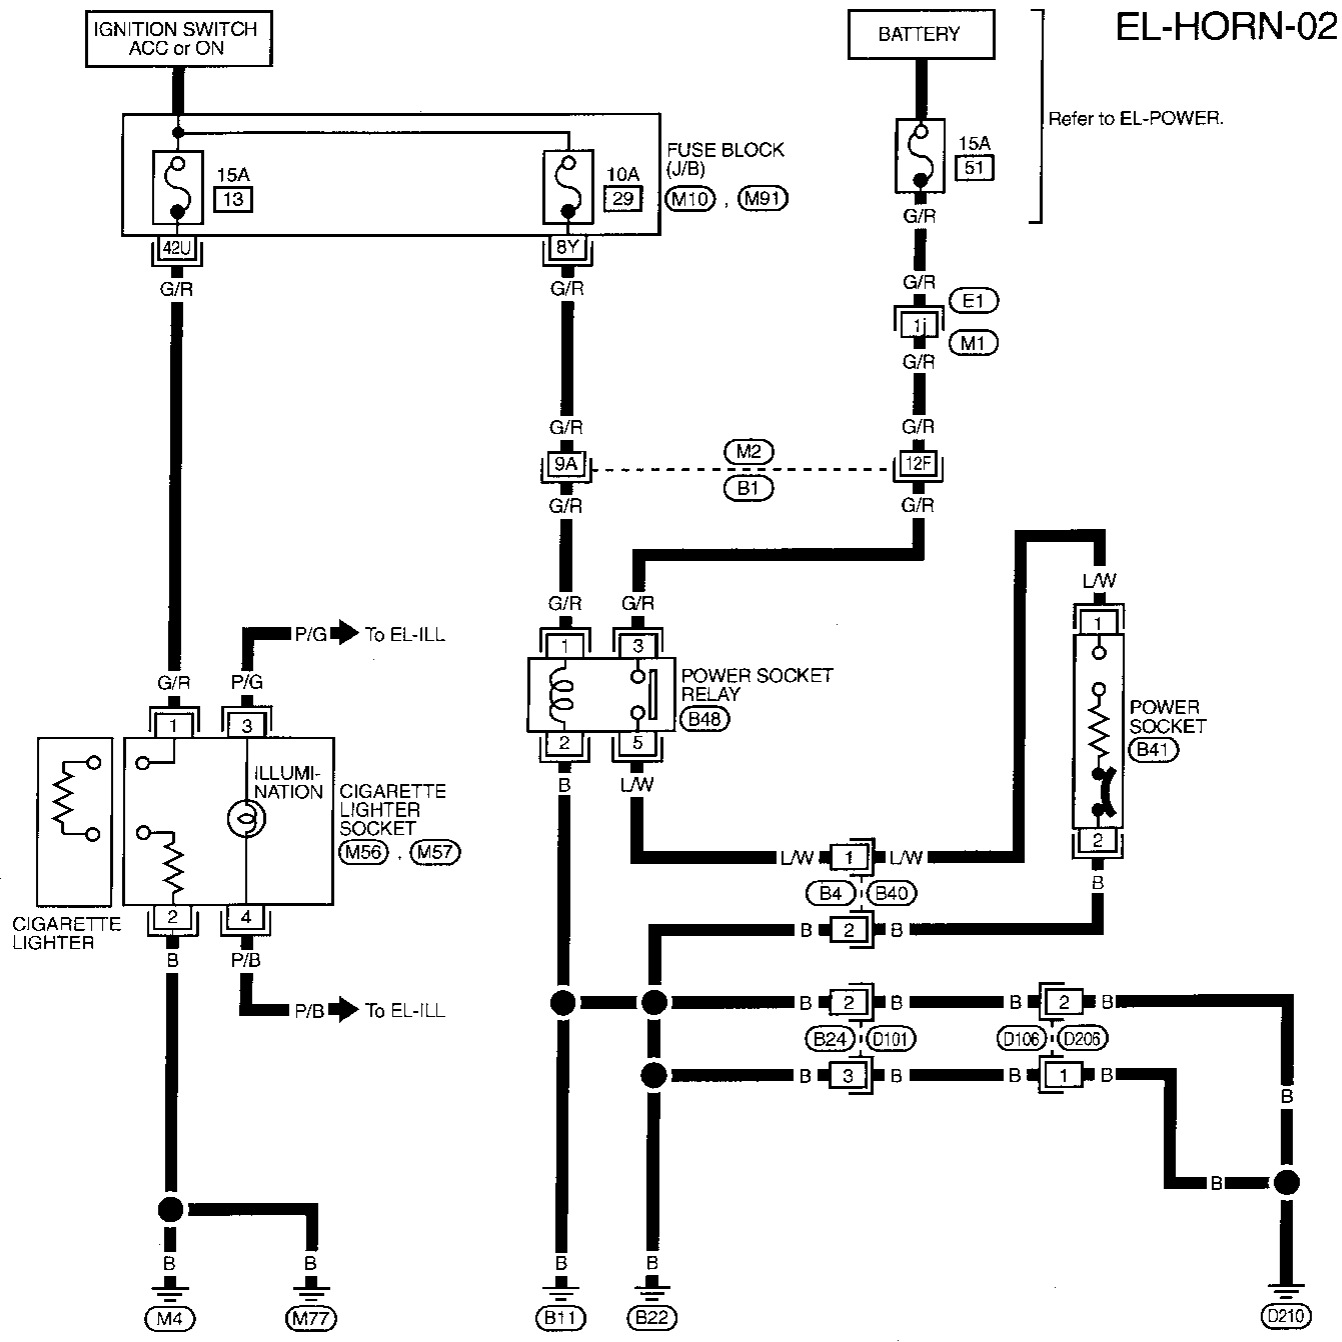

EL-HORN-02

Refer to EL-POWER.

GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT

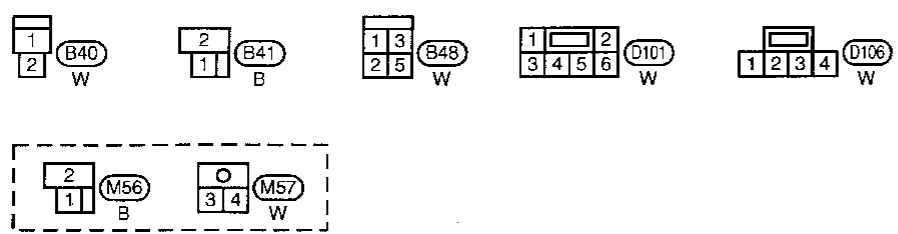


Refer to last page (Foldout page).

- (B1) (M2)
- (E1) (M1)
- (M10)
- (M91)

HA
EL
IDX

Component Parts and Harness Connector Location

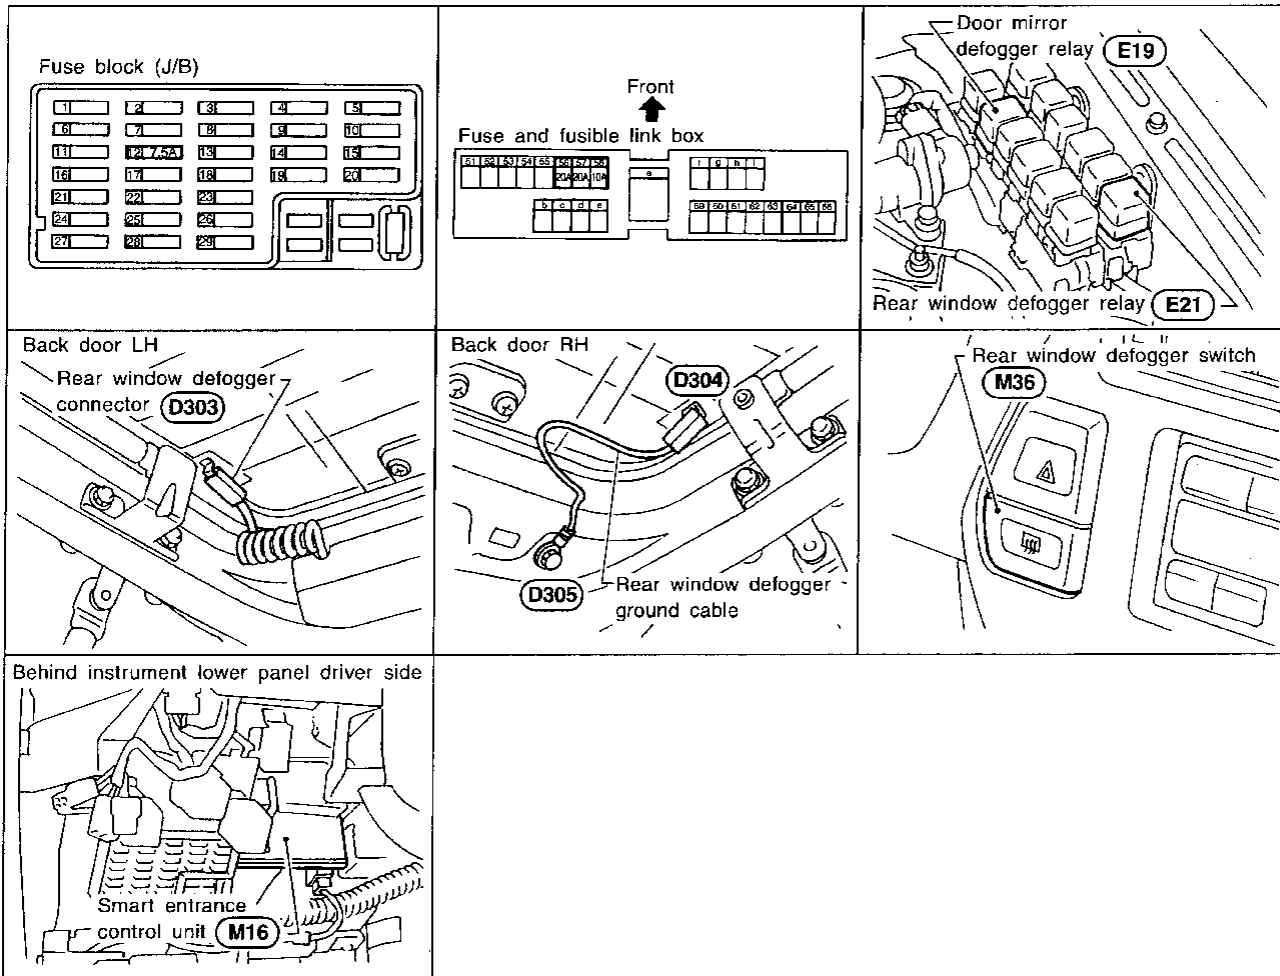

MEL075H

System Description

The rear window defogger system is controlled by the smart entrance control unit. The rear window defogger operates only for approximately 15 minutes.

Power is supplied at all times

- to rear window defogger relay terminal ③
- through 20A fuse (No. 56, located in the fuse and fusible link box) and
- to rear window defogger relay terminal ⑥
- through 20A fuse (No. 57, located in the fuse and fusible link box).

With the ignition switch in the ON or START position, power is supplied

- to the rear window defogger relay terminal ① and
- to smart entrance control unit terminal 11
- through 7.5A fuse [No. 12, located in the fuse block (J/B)].

Ground is supplied to terminal ① of the rear window defogger switch through body grounds M4 and M66.

When the rear window defogger switch is turned ON, ground is supplied

- through terminal ② of the rear window defogger switch
- to smart entrance control unit terminal 20.

Terminal 36 of the smart entrance control unit then supplies ground to the rear window defogger relay terminal ②.

With power and ground supplied, the rear window defogger relay is energized.

REAR WINDOW DEFOGGER

System Description (Cont'd)

Power is supplied

- through terminals ⑤ and ⑦ of the rear window defogger relay
- to the rear window defogger.

GI

The rear window defogger has an independent ground.

With power and ground supplied, the rear window defogger filaments heat and defog the rear window.

When the system is activated, the rear window defogger indicator illuminates in the rear window defogger switch.

MA

Power is supplied

- to terminal ③ of the rear window defogger switch
- from terminal ⑤ of the rear window defogger relay.

EM

Terminal ④ of the rear window defogger switch is grounded through body grounds M4 and M66.

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA



EL

IDX

REAR WINDOW DEFOGGER

Wiring Diagram — DEF —

EL-DEF-01

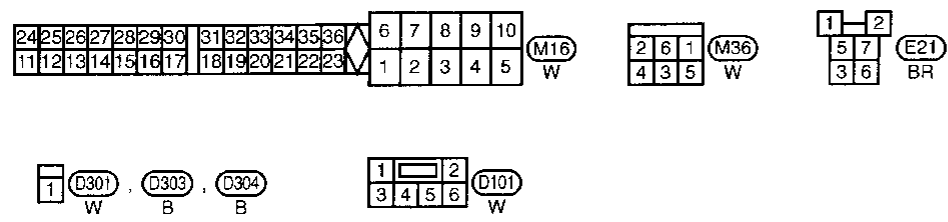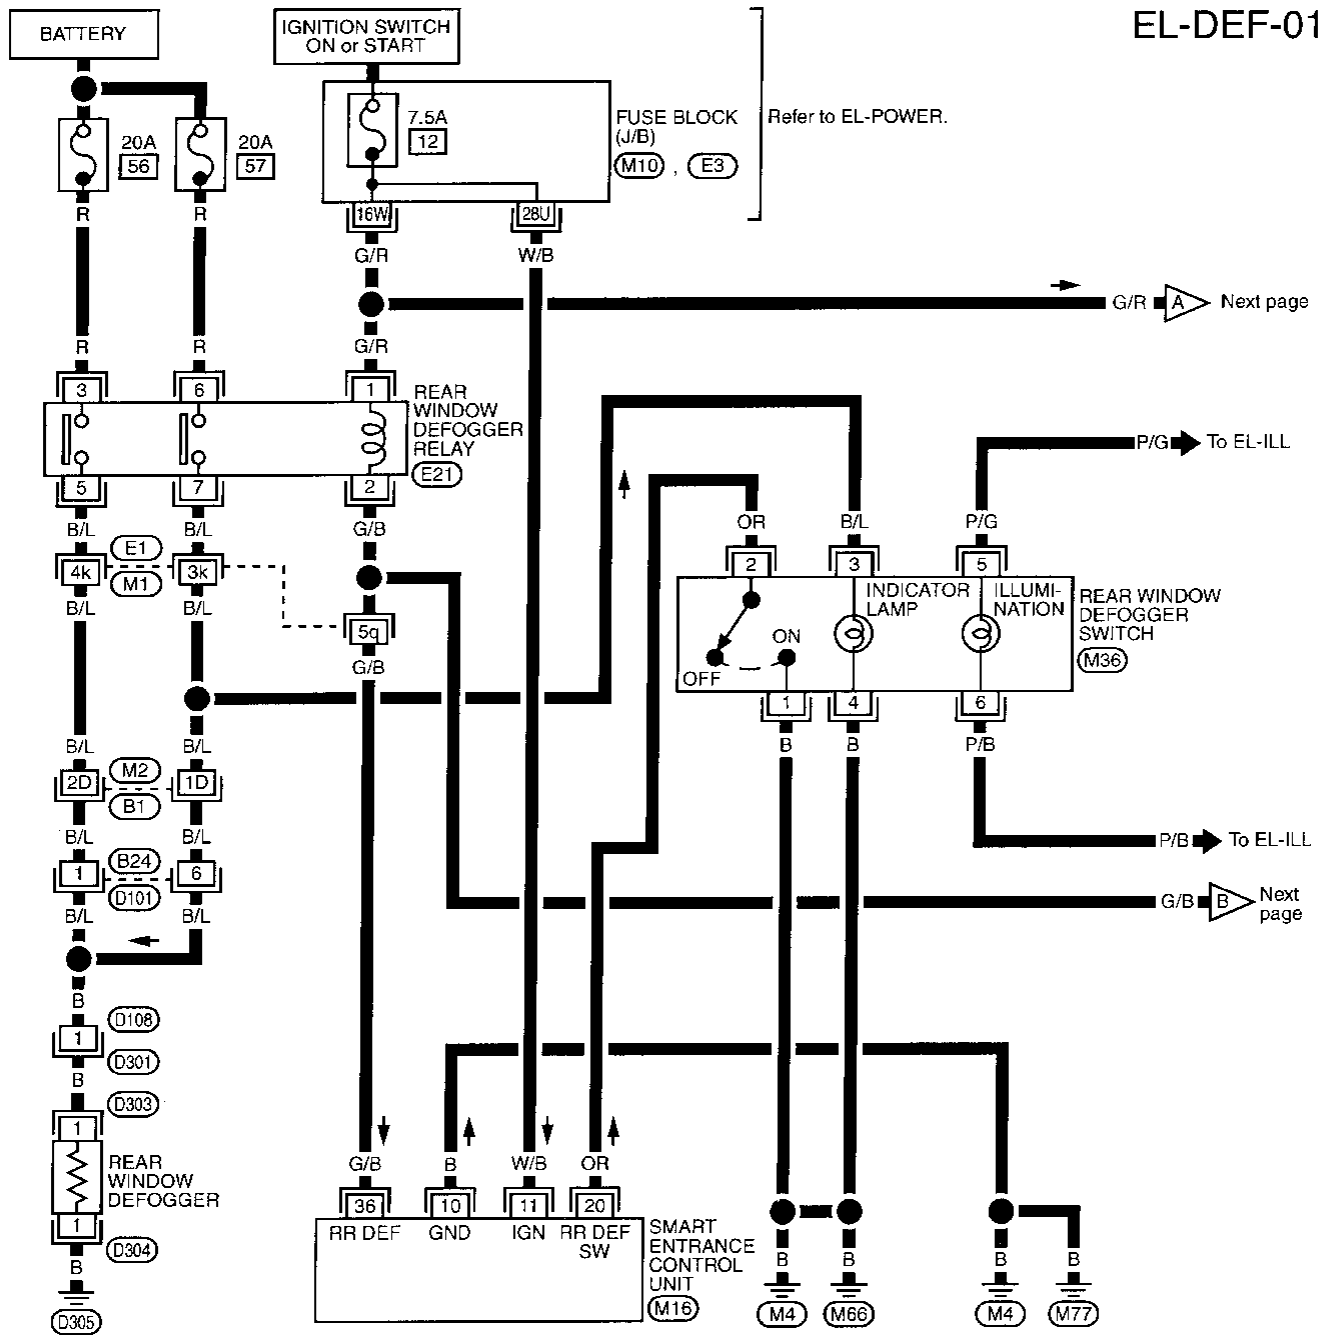


Refer to last page (Foldout page).
 (E1), (M1)
 (M2), (B1)
 (M10)
 (E3)

REAR WINDOW DEFOGGER

Wiring Diagram — DEF — (Cont'd)

EL-DEF-02

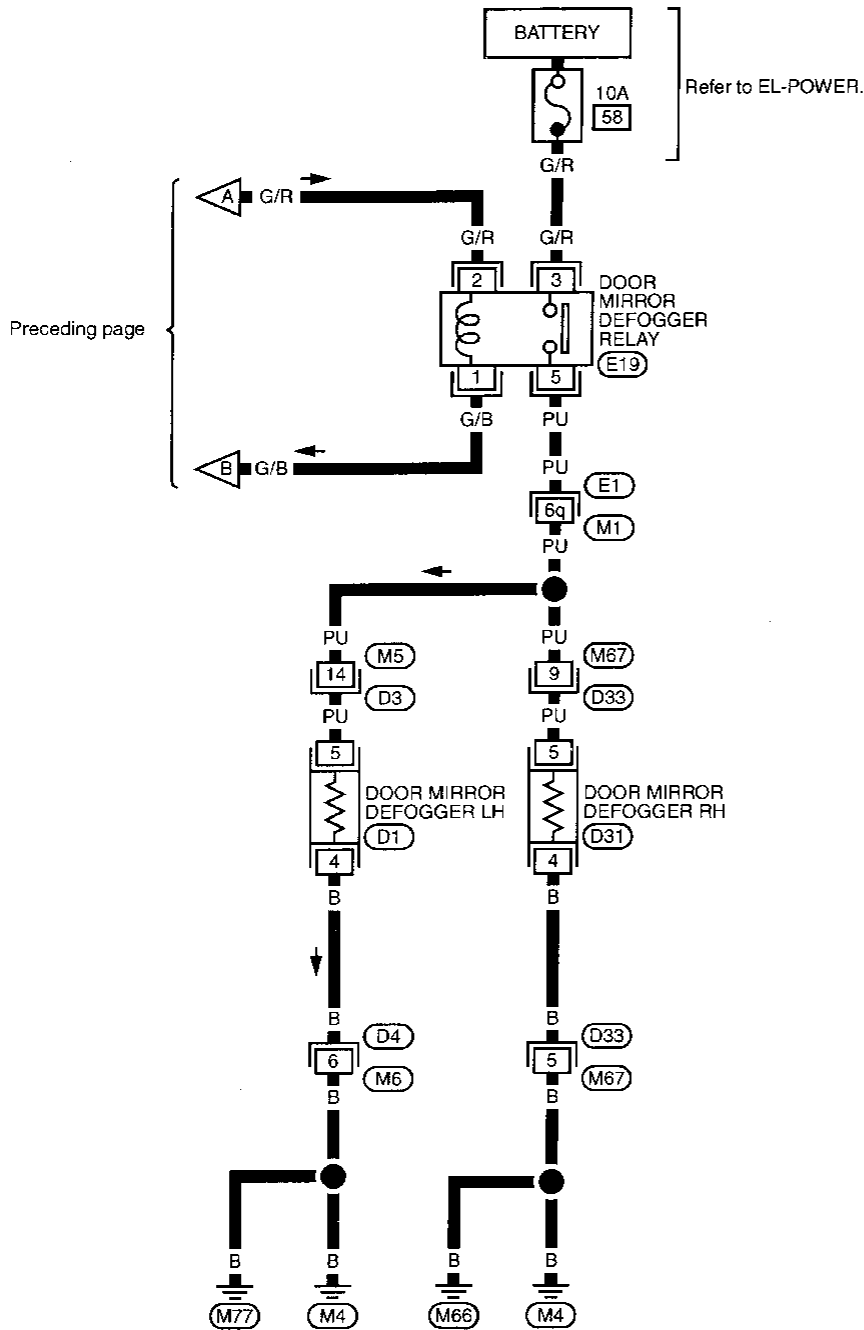





GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA

EL

IDX

Refer to last page (Foldout page).






(E1), (M1)



Trouble Diagnoses

DIAGNOSTIC PROCEDURE

SYMPTOM: Rear window defogger does not activate, or does not go off after activating.

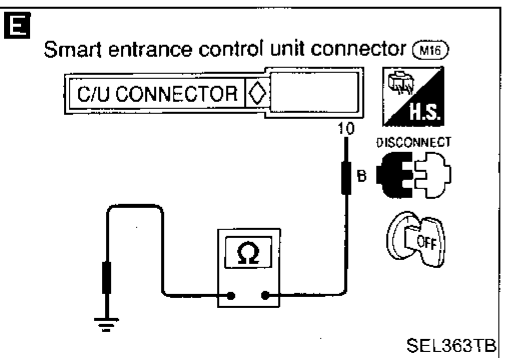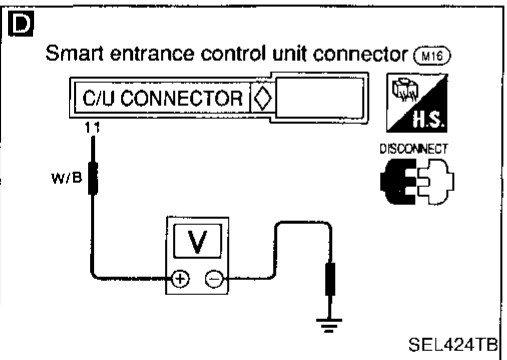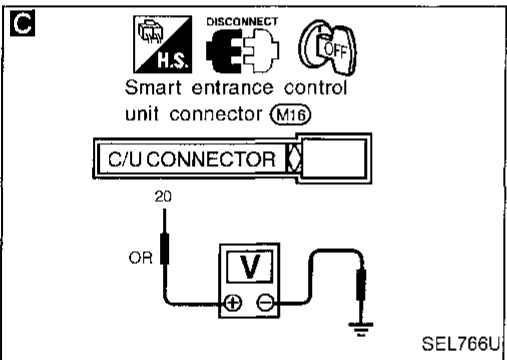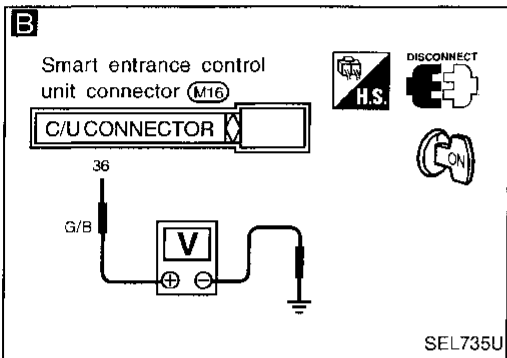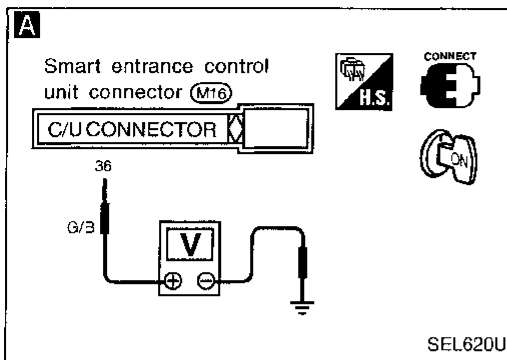

A

CHECK REAR WINDOW DEFOGGER OUTPUT SIGNAL.

1. Turn ignition switch to ON position.
2. Check voltage between control unit harness terminal ⑳ and ground.

Condition	Voltage [V]
Rear window defogger switch is "OFF".	Approx. 12
Rear window defogger switch is "ON".	0

OK → Check the following.

- Rear window defogger relay (Refer to EL-129.)
- Rear window defogger circuit
- Rear window defogger filament (Refer to EL-129.)

B

1. Disconnect control unit connector.

2. Turn ignition switch to ON position.

3. Check voltage between control unit terminal ⑳ and ground.

Battery voltage should exist.

NG → Check the following.

- 7.5A fuse [No. 12], located in the fuse block (J/B)]
- Rear window defogger relay
- Harness for open or short between rear window defogger relay and control unit

C

CHECK REAR WINDOW DEFOGGER SWITCH INPUT SIGNAL.

Check continuity between control unit terminal ㉑ and ground.

Condition of defogger switch	Continuity
Rear window defogger switch is pushed.	Yes
Rear window defogger switch is released.	No

NG → Check the following.

- Rear window defogger switch (Refer to EL-129.)
- Harness for open or short between control unit and rear window defogger switch
- Rear window defogger switch ground circuit

D

CHECK IGNITION INPUT SIGNAL.

Check voltage between control unit terminal ㉒ and ground.

Condition	Voltage [V]
Ignition switch is "ON".	Approx. 12
Ignition switch is "OFF".	0

NG → Check the following.

- 7.5A fuse [No. 12], located in the fuse block (J/B)]
- Harness for open or short between control unit and fuse

E

CHECK CONTROL UNIT GROUND CIRCUIT.

Check continuity between control unit terminal ㉓ and ground.

Continuity should exist.


NG → Repair harness or connectors.

OK → Replace control unit.

REAR WINDOW DEFOGGER

Trouble Diagnoses (Cont'd)

ELECTRICAL COMPONENTS INSPECTION

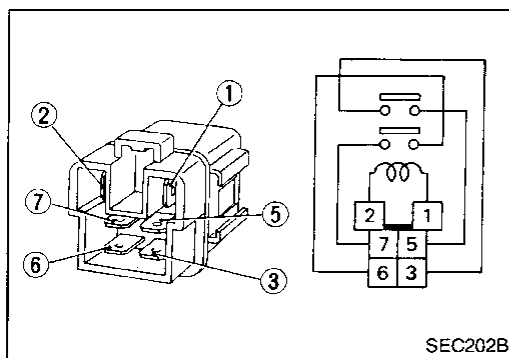

Rear window defogger relay

Check continuity between terminals ③ and ⑤, ⑥ and ⑦.

Condition	Continuity
12V direct current supply between terminals ① and ②	Yes
No current supply	No

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST


RS

BT

HA

EL


IDX

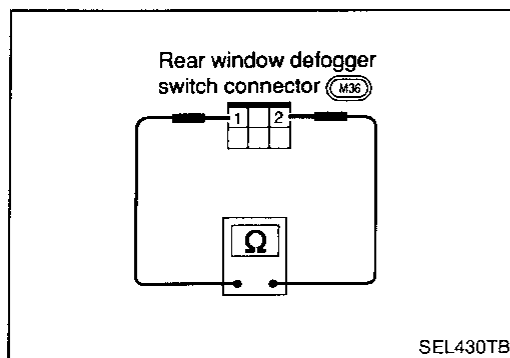

Rear window defogger switch


Check continuity between terminals when rear window defogger switch is pushed and released.

Terminals	Condition	Continuity
① - ②	Rear window defogger switch is pushed	Yes
	Rear window defogger switch is released	No

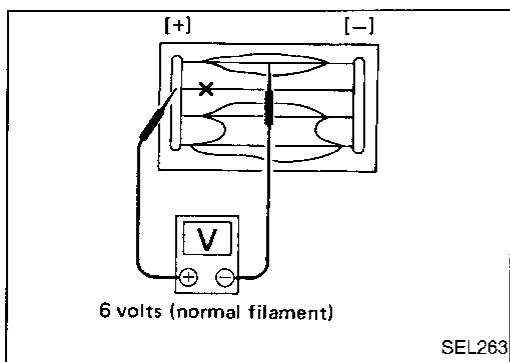

Filament Check


1. Attach probe circuit tester (in volt range) to middle portion of each filament.

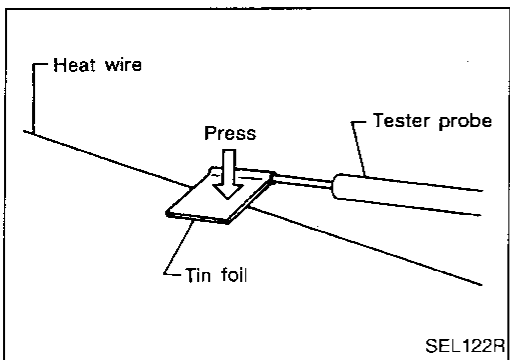


- When measuring voltage, wrap tin foil around the top of the negative probe. Then press the foil against the wire with your finger.

REAR WINDOW DEFOGGER

Filament Check (Cont'd)

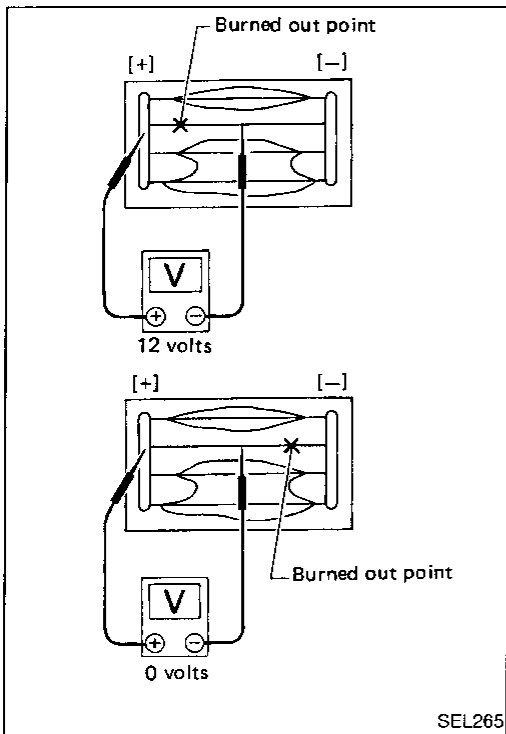

2. If a filament is burned out, circuit tester registers 0 or 12 volts.

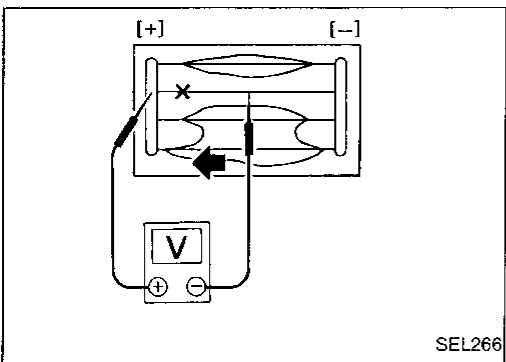

3. To locate burned out point, move probe to left and right along filament. Test needle will swing abruptly when probe passes the point.

Filament Repair

REPAIR EQUIPMENT


1. Conductive silver composition (Dupont No. 4817 or equivalent)
2. Ruler 30 cm (11.8 in) long
3. Drawing pen
4. Heat gun
5. Alcohol
6. Cloth

REPAIRING PROCEDURE

1. Wipe broken heat wire and its surrounding area clean with a cloth dampened in alcohol.
2. Apply a small amount of conductive silver composition to tip of drawing pen.


Shake silver composition container before use.

3. Place ruler on glass along broken line. Deposit conductive silver composition on break with drawing pen. Slightly overlap existing heat wire on both sides [preferably 5 mm (0.20 in)] of the break.

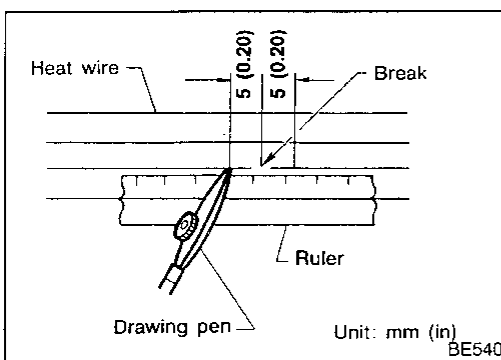


REAR WINDOW DEFOGGER

Filament Repair (Cont'd)

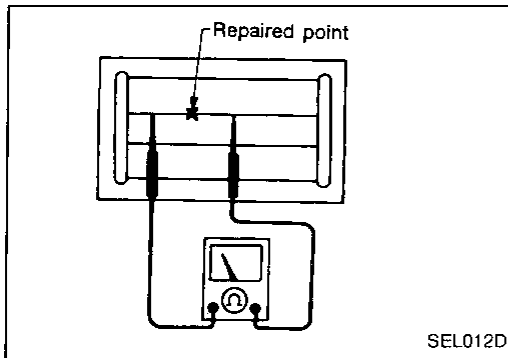

4. After repair has been completed, check repaired wire for continuity. This check should be conducted 10 minutes after silver composition is deposited.

Do not touch repaired area while test is being conducted.

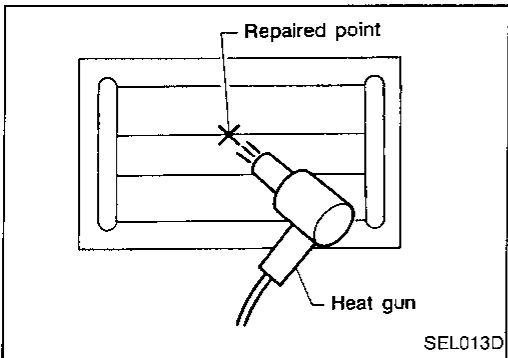

5. Apply a constant stream of hot air directly to the repaired area for approximately 20 minutes with a heat gun. A minimum distance of 3 cm (1.2 in) should be kept between repaired area and hot air outlet. If a heat gun is not available, let the repaired area dry for 24 hours.

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

Audio/System Description

Refer to Owner's Manual for audio system operating instructions.

Power is supplied at all times

- through 15A fuse [No. 4], located in the fuse block (J/B)]
- to audio terminal ⑥ ,
- to audio amp. relay terminal ③ and
- to rear speaker amp. terminal ⑩ .

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 10], located in the fuse block (J/B)]
- to audio terminal ⑩ .

Ground is supplied through the case of the audio.

Ground is supplied

- to audio amp. relay terminal ② ,
- to front door speaker LH terminal ⑤ and
- to front door speaker RH terminal ⑤
- through body grounds (M4) and (M66) or (M4) and (M77)
- to rear speaker amp. terminal ②④
- through body grounds (B11), (B22) and (Q210) .


When the radio POWER button is pressed, power is supplied to rear speaker amp. terminal ⑨ and audio amp. relay ① from audio terminal ⑩ . Then audio amp. relay is energized and power is supplied

- to front door speaker LH terminal ④ and
- to front door speaker RH terminal ④ .

Audio signals are supplied

- through audio terminals ① , ② , ③ , ④ , ⑬ , ⑭ , ⑮ and ⑯
- to terminals ② and ⑥ of the LH and RH front speakers and terminals ⑤ , ⑦ , ⑰ and ⑱ of the rear speaker amp.
- to LH and RH tweeters through terminals ① and ③ of the front speakers
- to rear LH and RH speakers through terminals ① , ② , ⑲ and ⑳ of the rear speaker amp.

Audio/Schematic

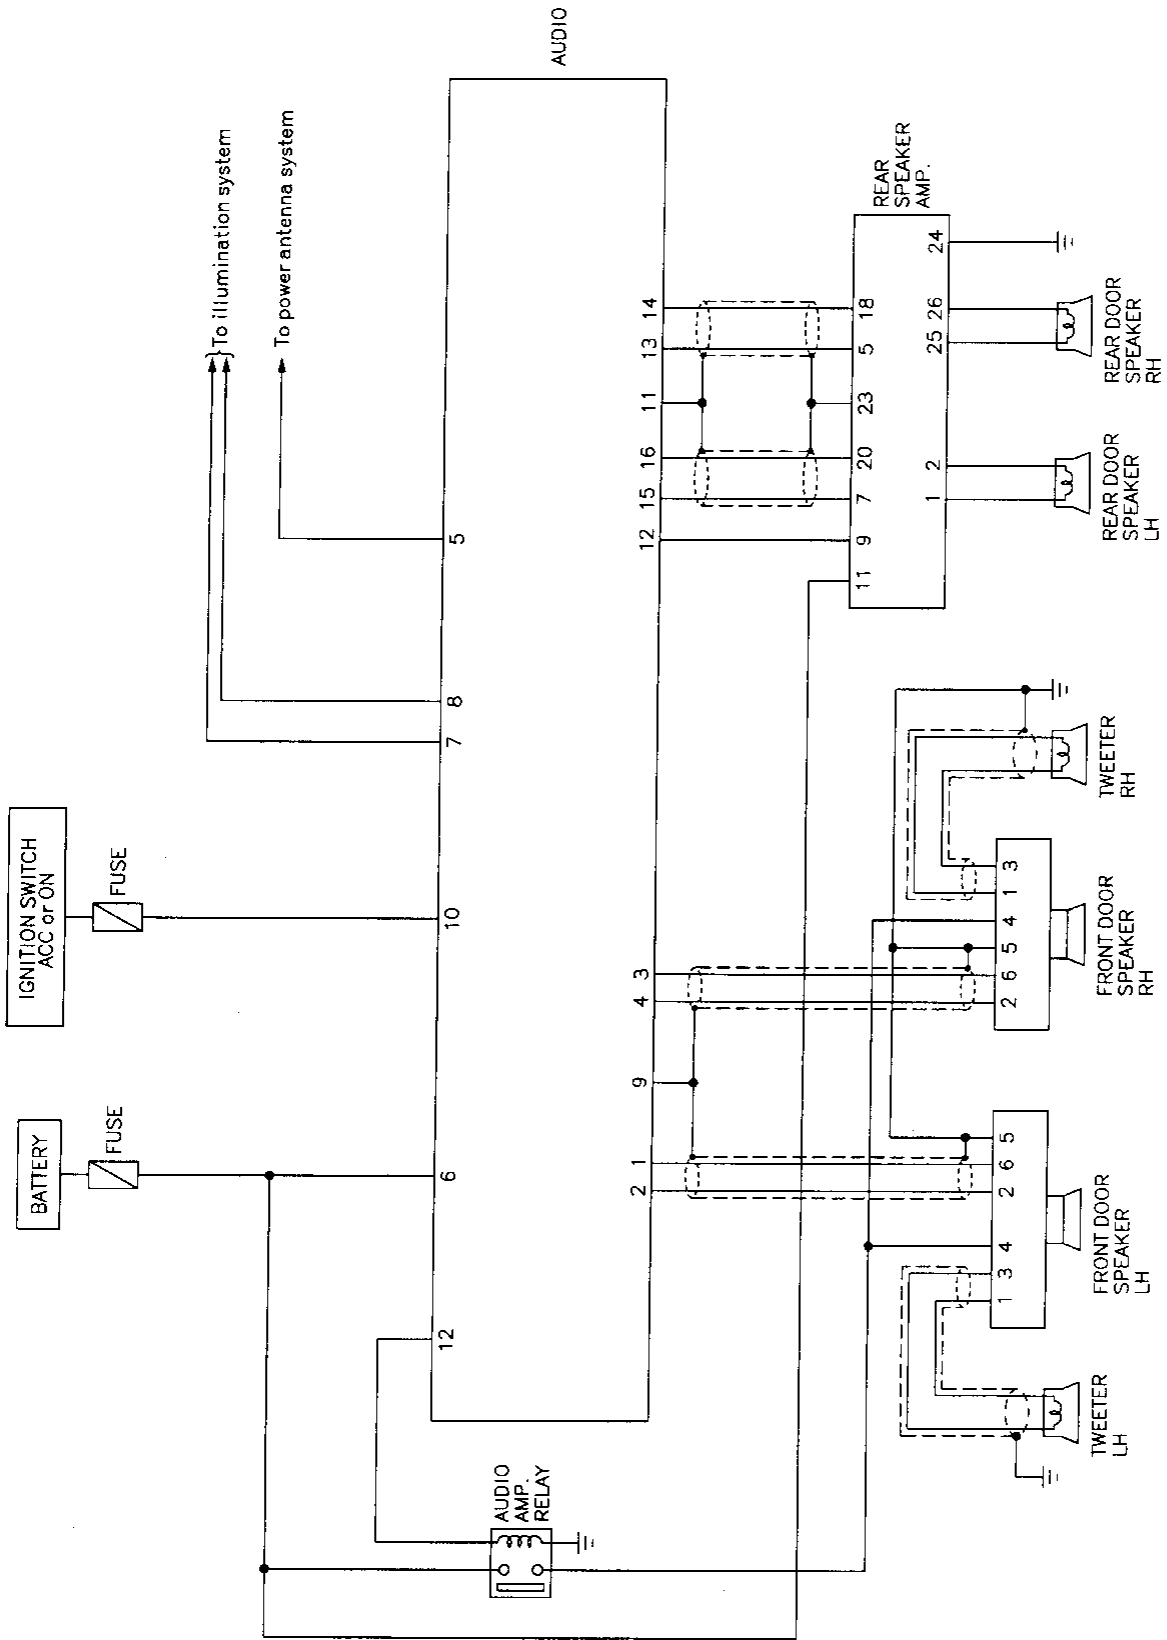

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT


HA

EL


IDX

Audio/Wiring Diagram — AUDIO —

EL-AUDIO-01

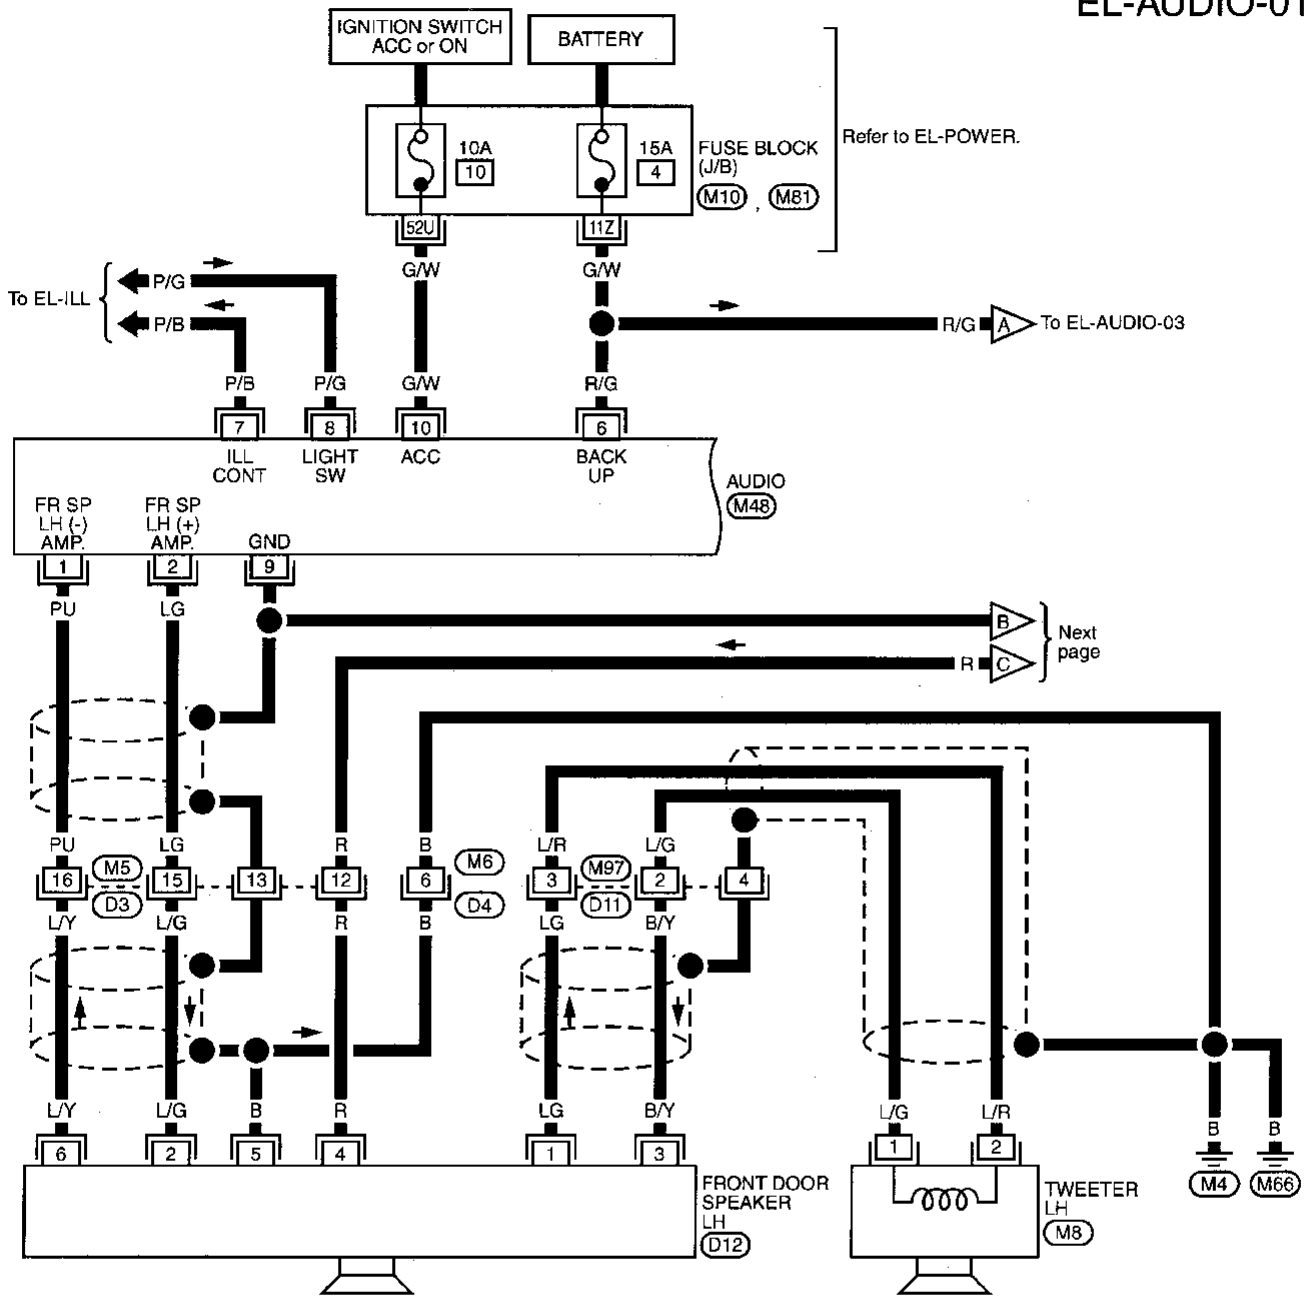



Refer to last page (Foldout page).



AUDIO AND POWER ANTENNA

Audio/Wiring Diagram — AUDIO — (Cont'd)

EL-AUDIO-02

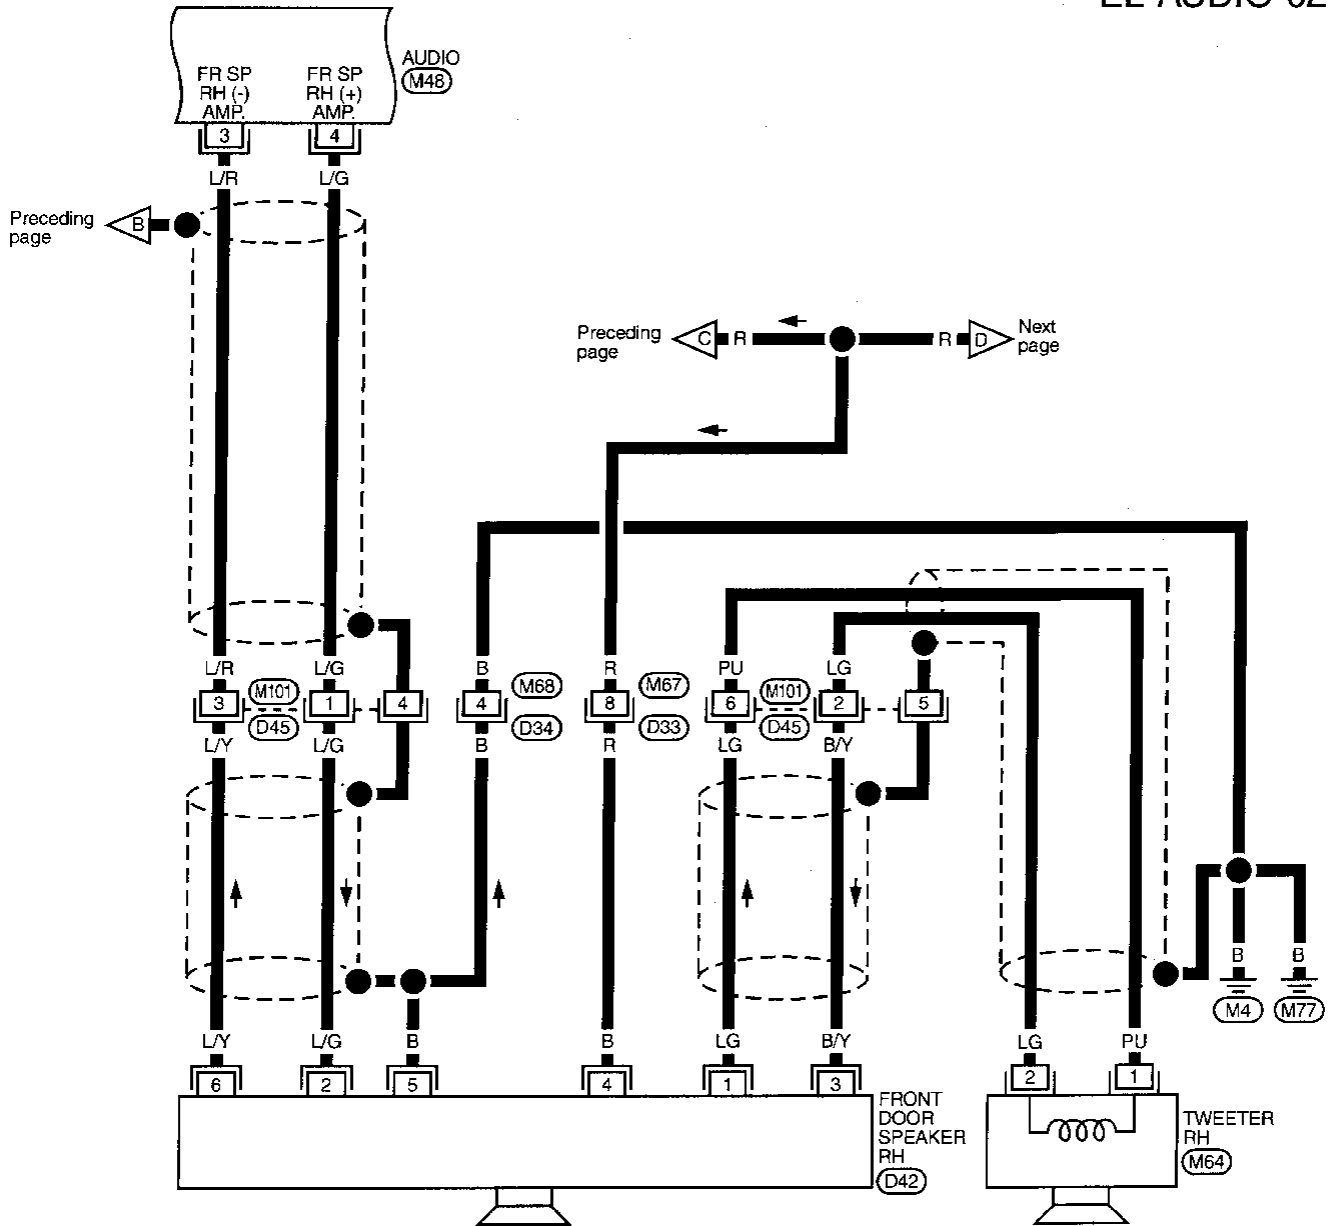


GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

AUDIO AND POWER ANTENNA



Audio/Wiring Diagram — AUDIO — (Cont'd)

EL-AUDIO-03

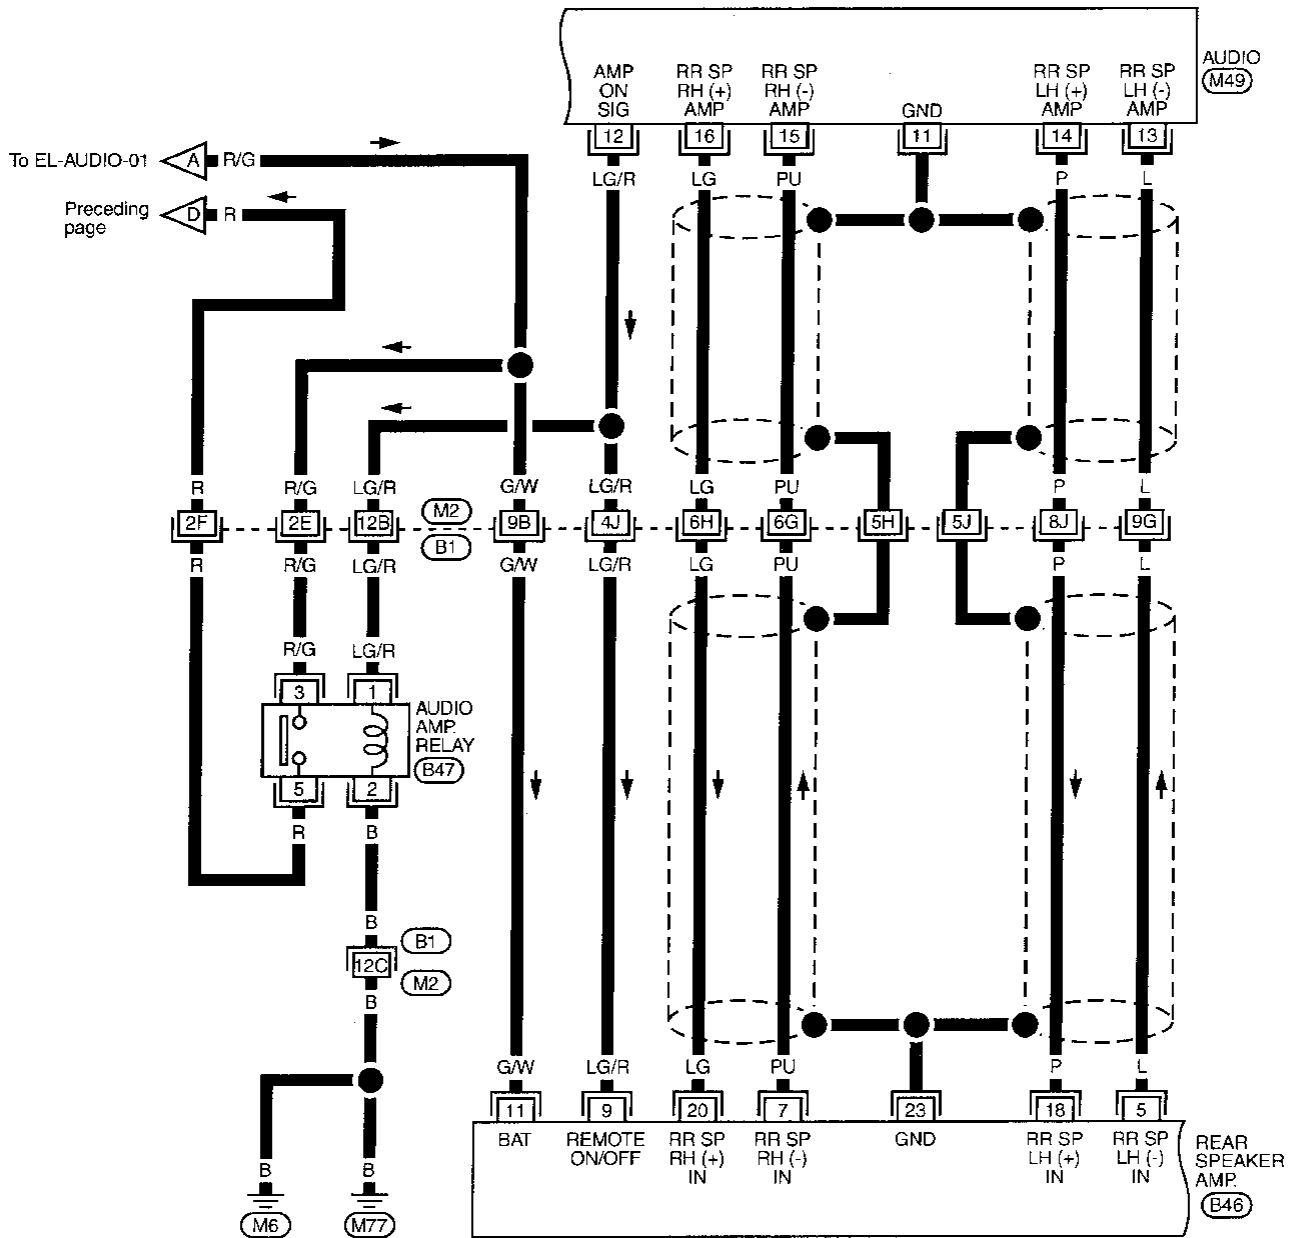

Refer to last page (Foldout page).








(M2) , (B1)



AUDIO AND POWER ANTENNA

Audio/Wiring Diagram — AUDIO — (Cont'd)

EL-AUDIO-04

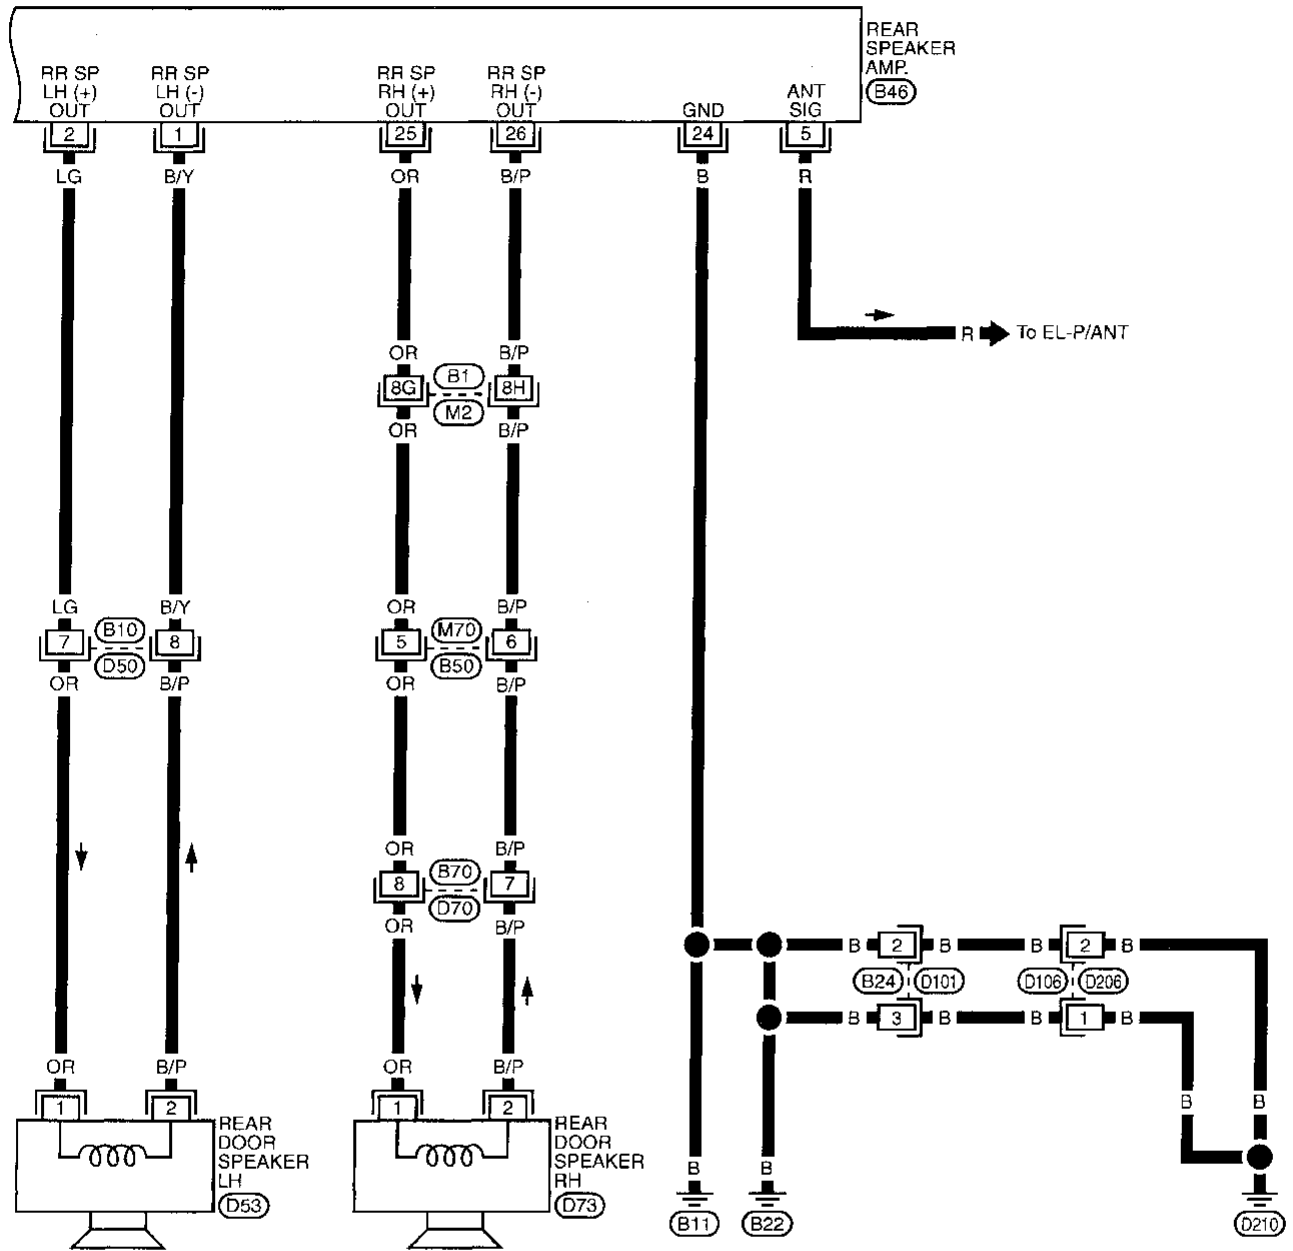

Refer to last page (Foldout page).

(M2), (B1)

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

Power Antenna/System Description

Power is supplied at all times

- through 7.5A fuse (No. 24), located in the fuse block
- to power antenna terminal ⑥.

Ground is supplied to the power antenna terminal ② through body grounds M4 and M66.

When the audio is turned to the ON position, battery positive voltage is supplied

- through audio terminal ⑤
- to power antenna terminal ④.

The antenna raises and is held in the extended position.


When the audio is turned to the OFF position, battery positive voltage is interrupted

- from audio terminal ⑤
- to power antenna terminal ④.

The antenna retracts.



Power Antenna/Wiring Diagram — P/ANT —

EL-P/ANT-01

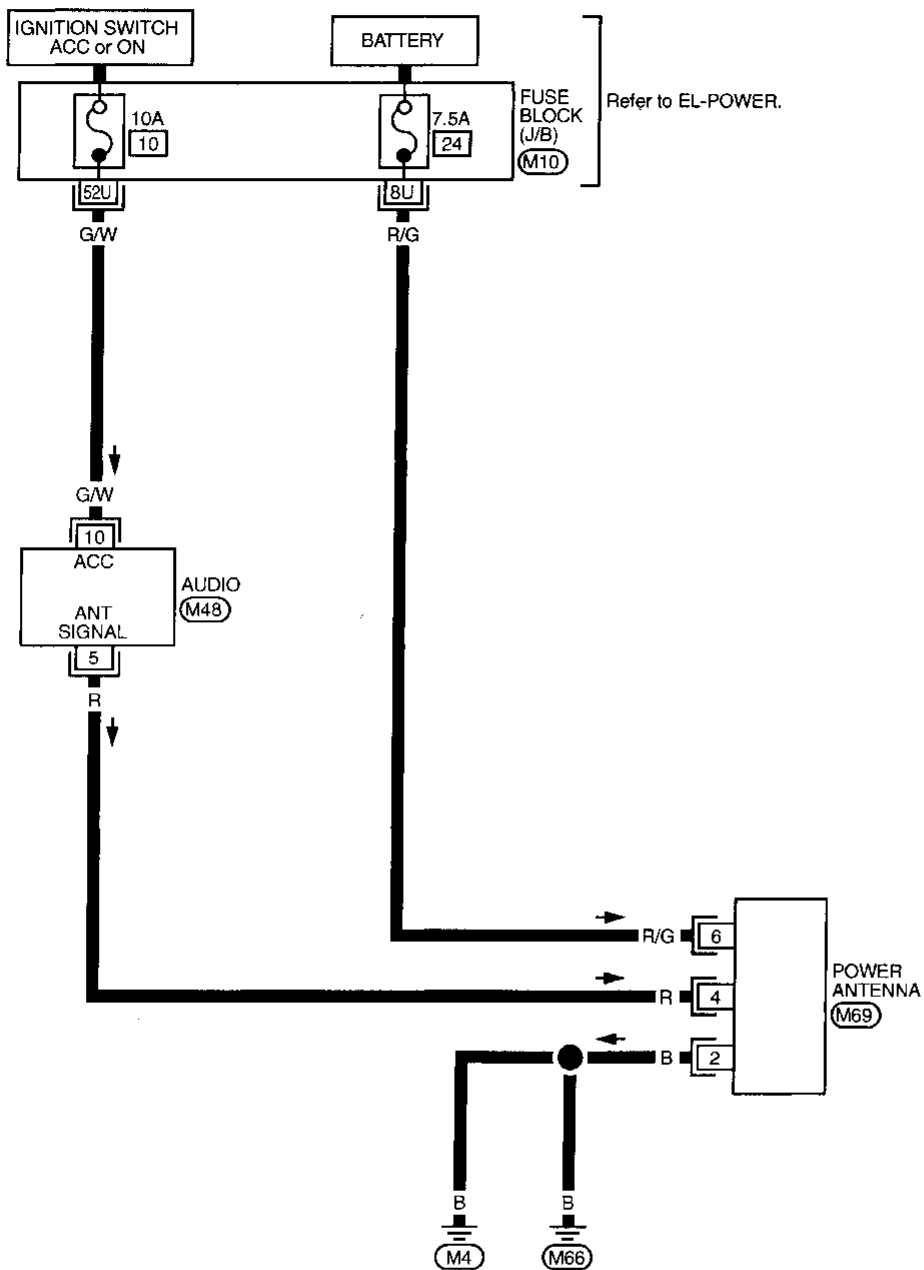

Refer to EL-POWER.

CI
MA
EM
LG
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA



Refer to last page (Foldout page).
M10

EL

IDX

AUDIO AND POWER ANTENNA

Trouble Diagnoses

RADIO

Symptom	Possible causes	Repair order
Radio inoperative (no digital display and no sound from speakers).	<ol style="list-style-type: none"> 10A fuse Poor radio case ground Radio 	<ol style="list-style-type: none"> Check 10A fuse [No. 10], located in fuse block (J/B). Turn ignition switch ON and verify that battery positive voltage is present at terminal ⑩ of radio. Check radio case ground. Remove radio for repair.
Radio presets are lost when ignition switch is turned OFF.	<ol style="list-style-type: none"> 15A fuse Radio 	<ol style="list-style-type: none"> Check 15A fuse [No. 4], located in fuse block (J/B) and verify that battery positive voltage is present at terminal ⑥ of radio. Remove radio for repair.
AM stations are weak or noisy (FM stations OK).	<ol style="list-style-type: none"> Antenna Poor radio ground Radio 	<ol style="list-style-type: none"> Check antenna. Check radio ground. Remove radio for repair.
FM stations are weak or noisy (AM stations OK).	<ol style="list-style-type: none"> Window antenna Radio 	<ol style="list-style-type: none"> Check window antenna. Remove radio for repair.
Radio generates noise in AM and FM modes with engine running.	<ol style="list-style-type: none"> Poor radio ground Loose or missing ground bonding straps Ignition condenser or rear window defogger noise suppressor condenser Alternator Ignition coil or secondary wiring Radio 	<ol style="list-style-type: none"> Check radio ground. Check ground bonding straps. Replace ignition condenser or rear window defogger noise suppressor condenser. Check alternator. Check ignition coil and secondary wiring. Remove radio for repair.
Radio generates noise in AM and FM modes with accessories on (switch pops and motor noise).	<ol style="list-style-type: none"> Poor radio ground Antenna Accessory ground Faulty accessory 	<ol style="list-style-type: none"> Check radio ground. Check antenna. Check accessory ground. Replace accessory.
Radio controls are operational, but no sound is heard from any speaker.	<ol style="list-style-type: none"> 15A fuse Audio amp. relay Audio amp. relay ground Amp. ON signal Radio output Radio 	<ol style="list-style-type: none"> Check 15A fuse [No. 4], located in fuse block (J/B)]. Verify battery positive voltage is present at terminal ② of audio amp. relay. Check audio amp. relay. Check audio amp. relay ground (Terminal ③). Turn ignition switch ACC and radio ON. Verify battery positive voltage is present at terminal ① of audio amp. relay. Check radio output voltage (Terminal ⑫). Remove radio for repair.
Individual front speaker is noisy or inoperative.	<ol style="list-style-type: none"> Speaker ground Power supply Radio output Speaker 	<ol style="list-style-type: none"> Check speaker ground (Terminal ⑤). Check power supply for speaker (Terminal ④). Check radio output voltage for speaker. Replace speaker.
Both rear speakers are inoperative.	<ol style="list-style-type: none"> Poor rear speaker amp. ground Power supply Amp. ON signal Rear speaker amp. 	<ol style="list-style-type: none"> Check rear speaker amp. ground circuit. Check power supply for rear speaker amp. (Terminal ⑩). Turn ignition switch ACC and radio ON. Verify battery positive voltage is present at terminal ⑨ of rear speaker amp. Remove rear speaker amp. for repair.
Individual rear speaker is noisy or inoperative.	<ol style="list-style-type: none"> Speaker Radio/amp. output Speaker circuit Radio 	<ol style="list-style-type: none"> Check speaker Check radio/amp. output Check wires for open or short between radio/amp. and speakers. Remove radio for repair.

POWER ANTENNA

Symptom	Possible causes	Repair order
Power antenna does not operate.	<ol style="list-style-type: none"> 7.5A fuse Radio signal Grounds M4 and M66 	<ol style="list-style-type: none"> Check 7.5A fuse [No. 24], located in fuse block (J/B)]. Verify that battery positive voltage is present at terminal ⑥ of power antenna. Turn ignition switch and radio ON. Verify that battery positive voltage is present at terminal ④ of power antenna. Check grounds M4 and M66.

AUDIO AND POWER ANTENNA

Trouble Diagnoses (Cont'd)

ANTENNA INSPECTION


1. Using a jumper wire, clip an auxiliary ground between antenna and body.
 - If reception improves, check antenna ground (at body surface).
 - If reception does not improve, check main feeder cable for short circuit or open circuit.

RADIO AND AMP INSPECTION

All voltage inspections are made with:

- Ignition switch ON or ACC
- Radio ON
- Radio and amps. connected (If radio or amp. is removed for inspection, supply a ground to the case using a jumper wire.)

Location of Antenna



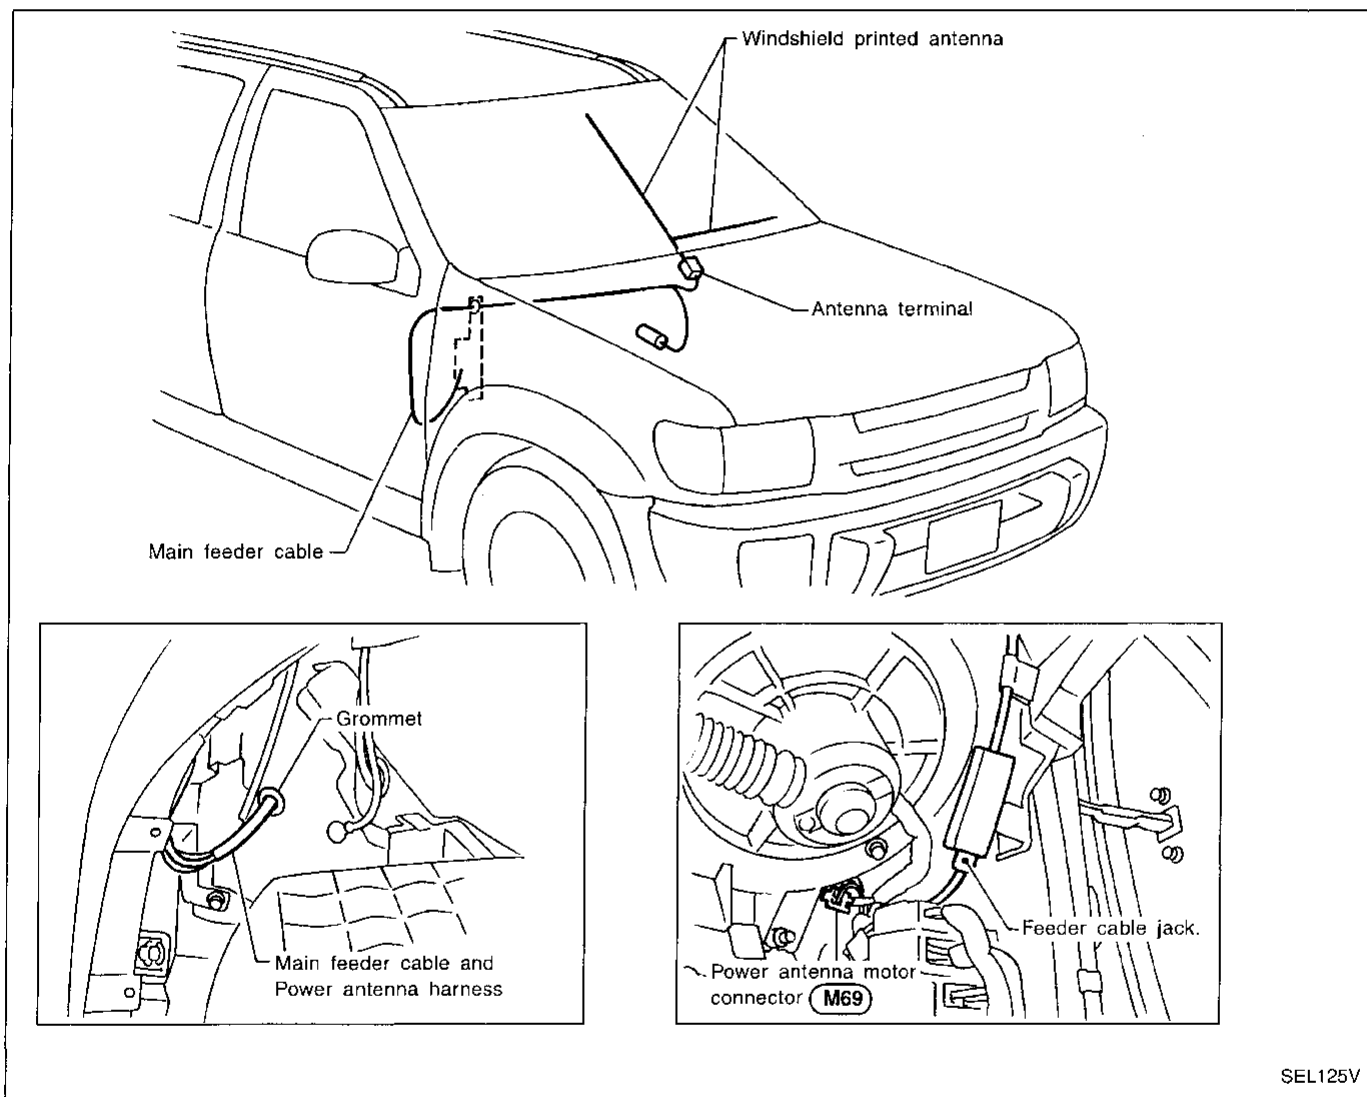


SEL125V

EL

IDX

AUDIO AND POWER ANTENNA

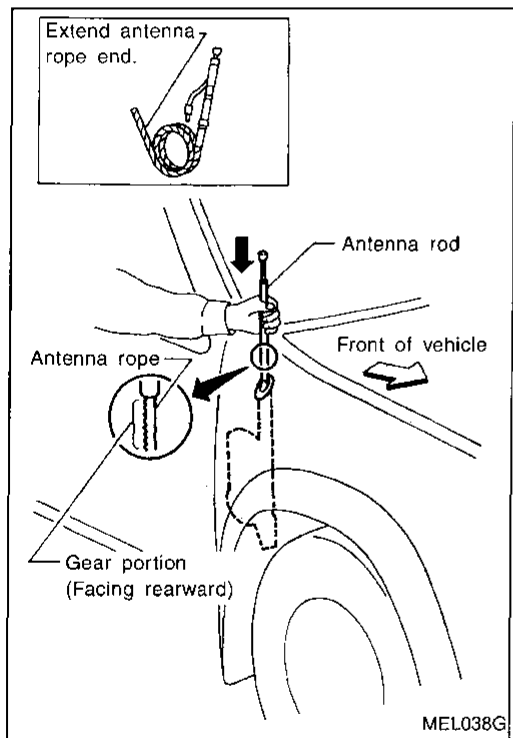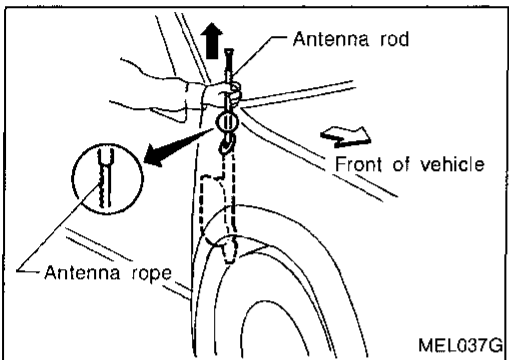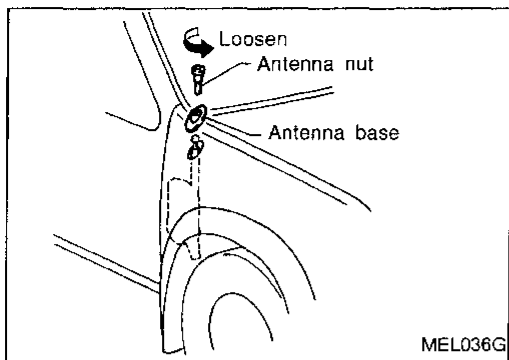

Antenna Rod Replacement

REMOVAL

1. Remove antenna nut and antenna base.
2. Withdraw antenna rod while raising it by operating antenna motor.

INSTALLATION


1. Lower antenna rod by operating antenna motor.
2. Insert gear section of antenna rope into place with it facing toward antenna motor.
3. As soon as antenna rope is wound on antenna motor, stop antenna motor. Insert antenna rod lower end into antenna motor pipe.
4. Retract antenna rod completely by operating antenna motor.
5. Install antenna nut and base.

POWER SUNROOF

Wiring Diagram — SROOF —



EL-SROOF-01

GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

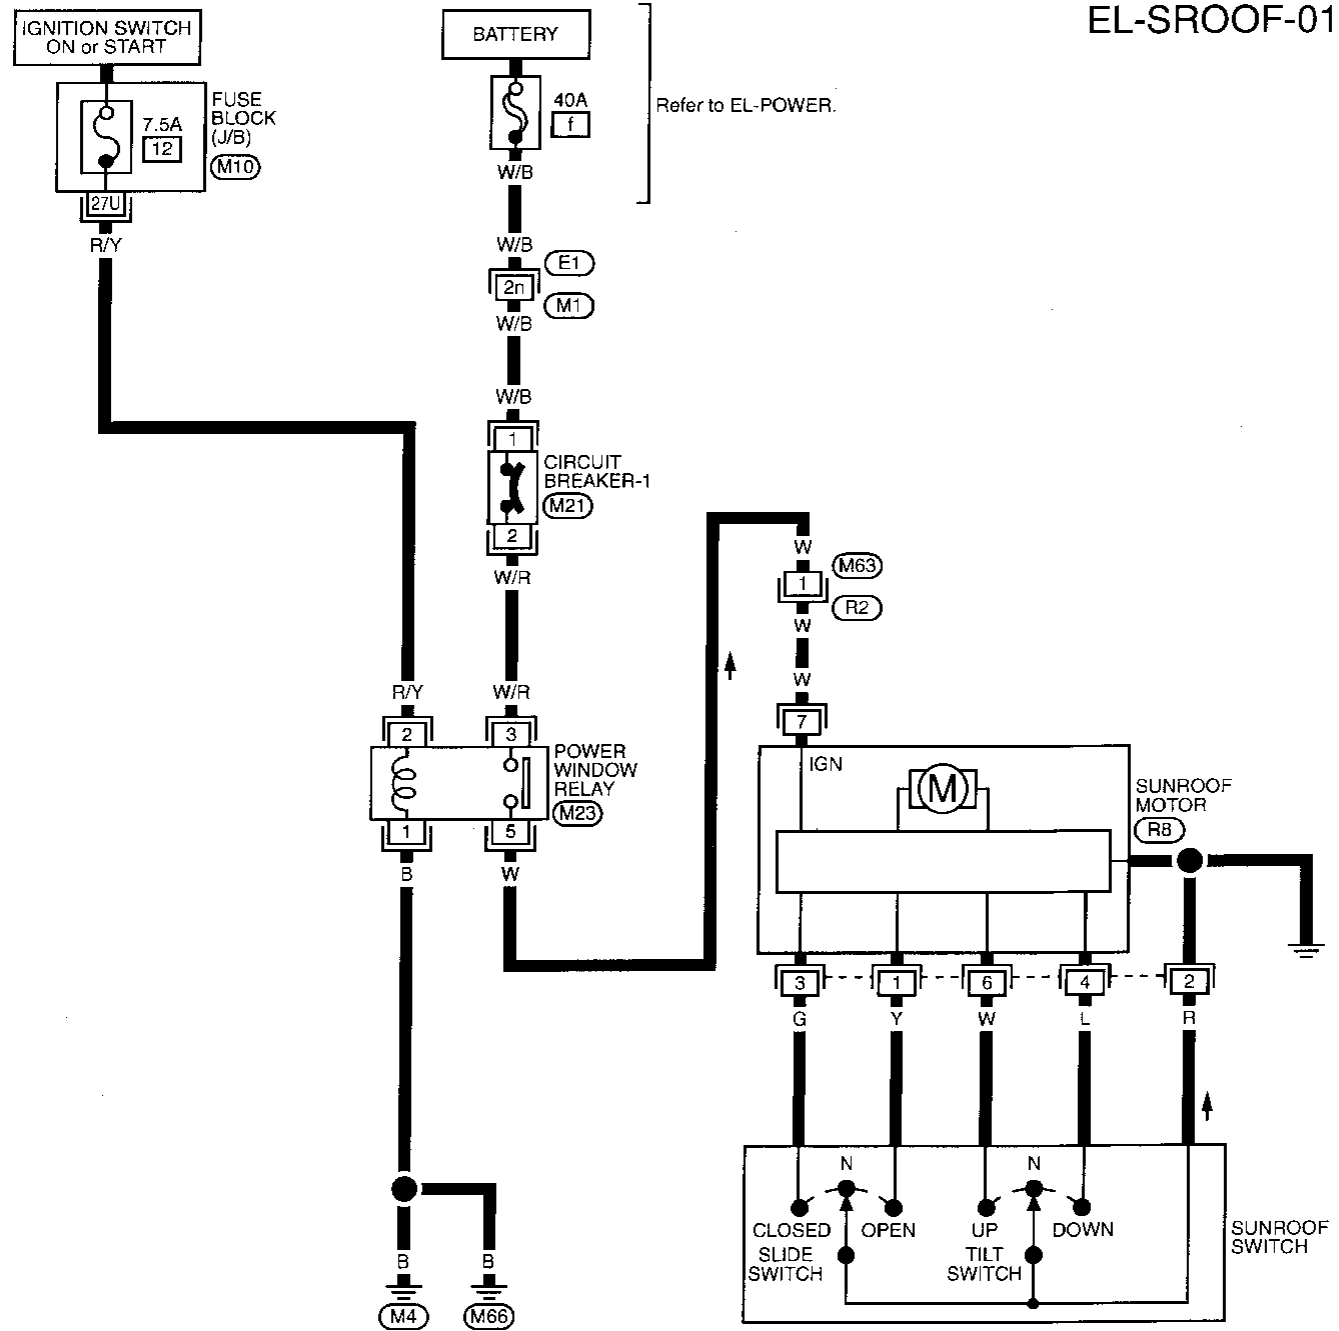

Refer to EL-POWER.

Refer to last page (Foldout page).




(E1), (M1)
(M10)

DOOR MIRROR





Wiring Diagram — MIRROR —

EL-MIRROR-01

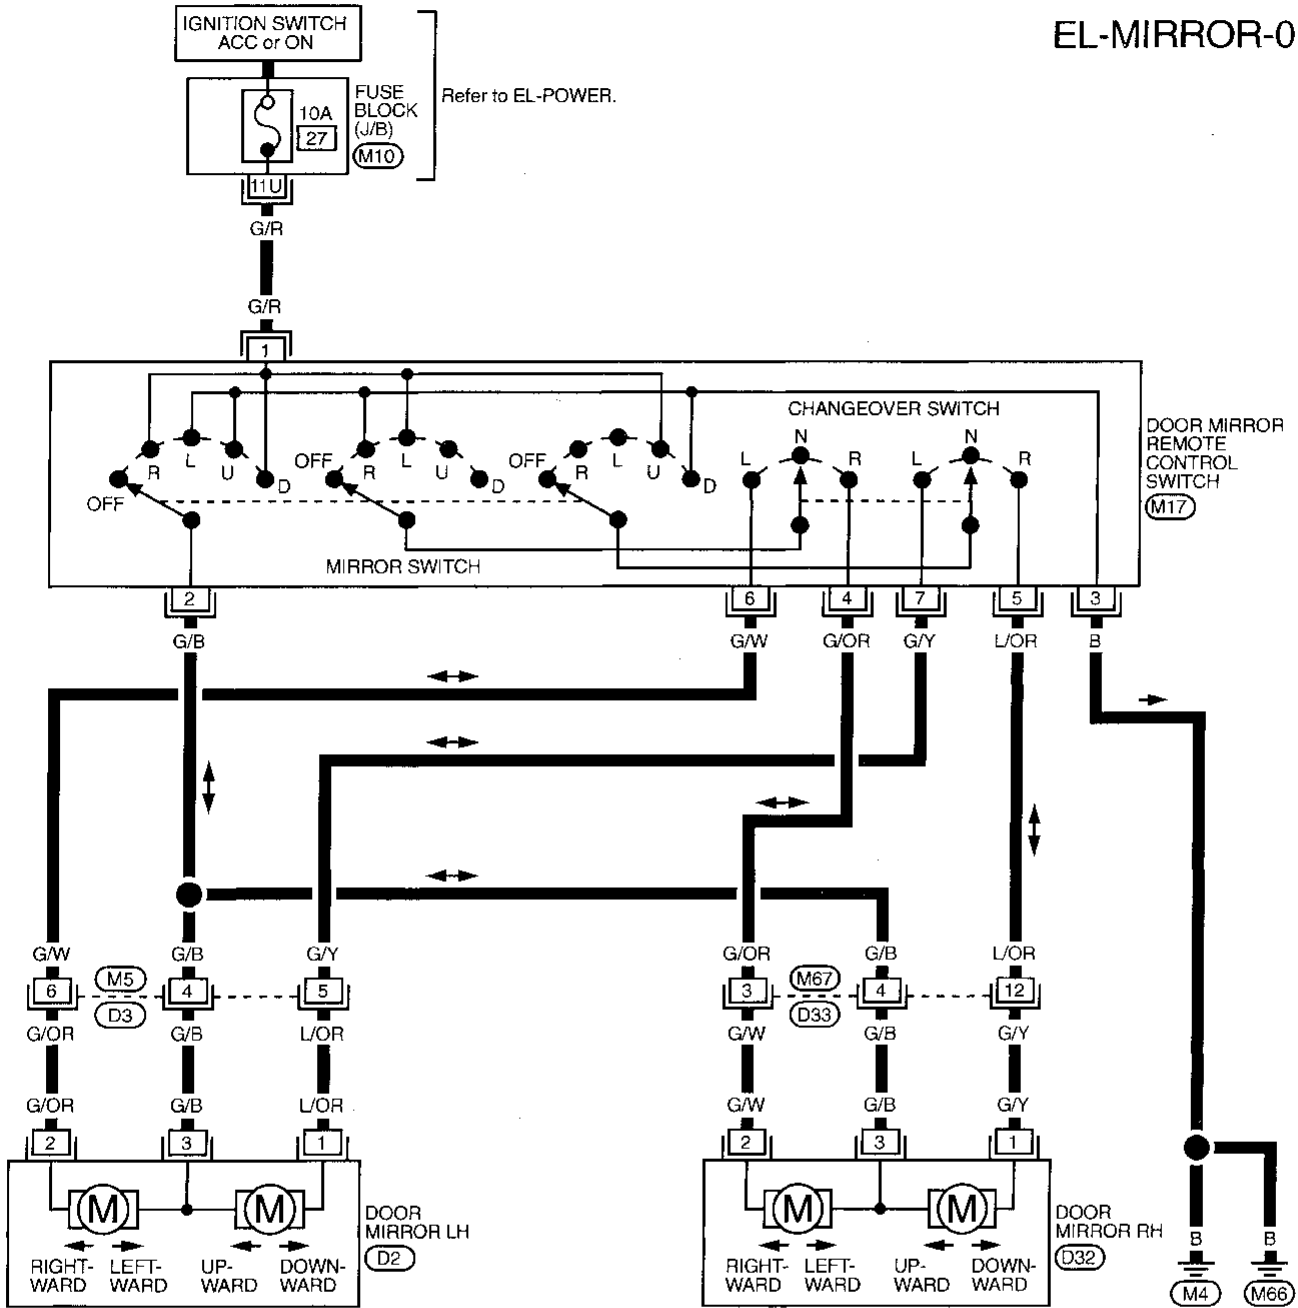

Refer to last page (Foldout page).


(M10)




GLASS HATCH OPENER

Wiring Diagram — TLID —

EL-TLID-01

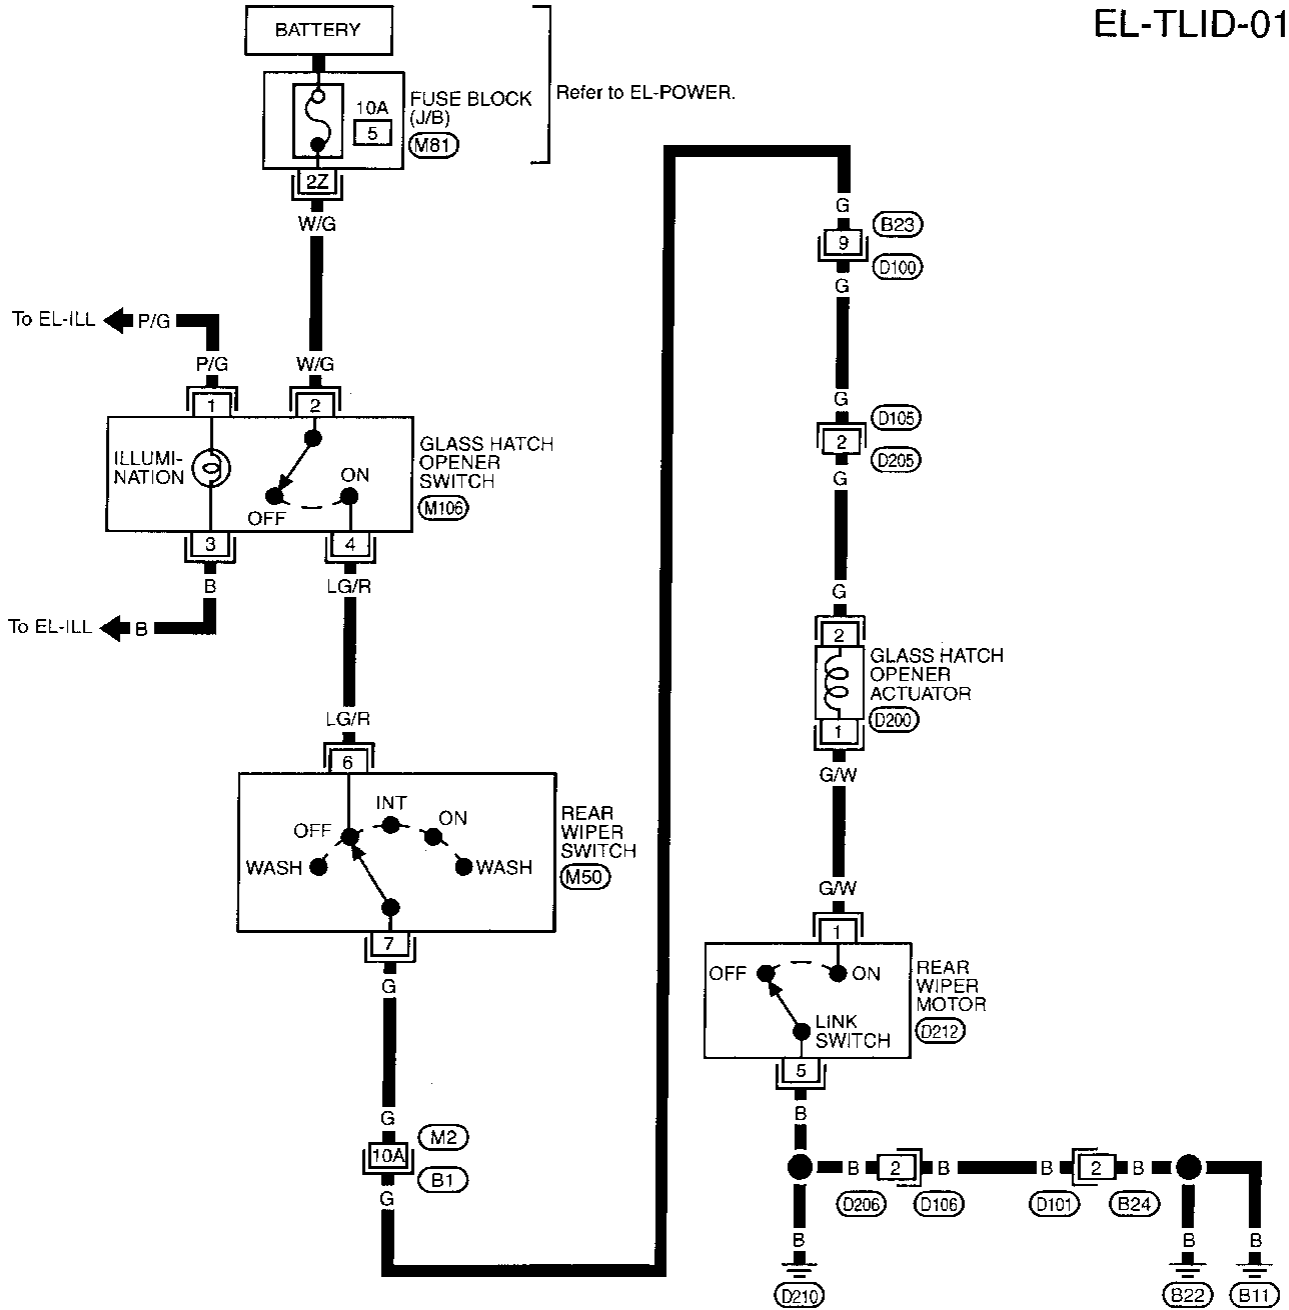

GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA

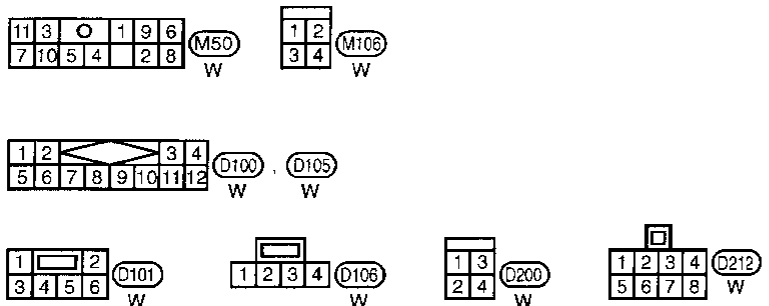


Refer to last page (Foldout page).
M2, B1
M81

EL
IDX

POWER SEAT



Power Seat/Wiring Diagram — SEAT —

EL-SEAT-01

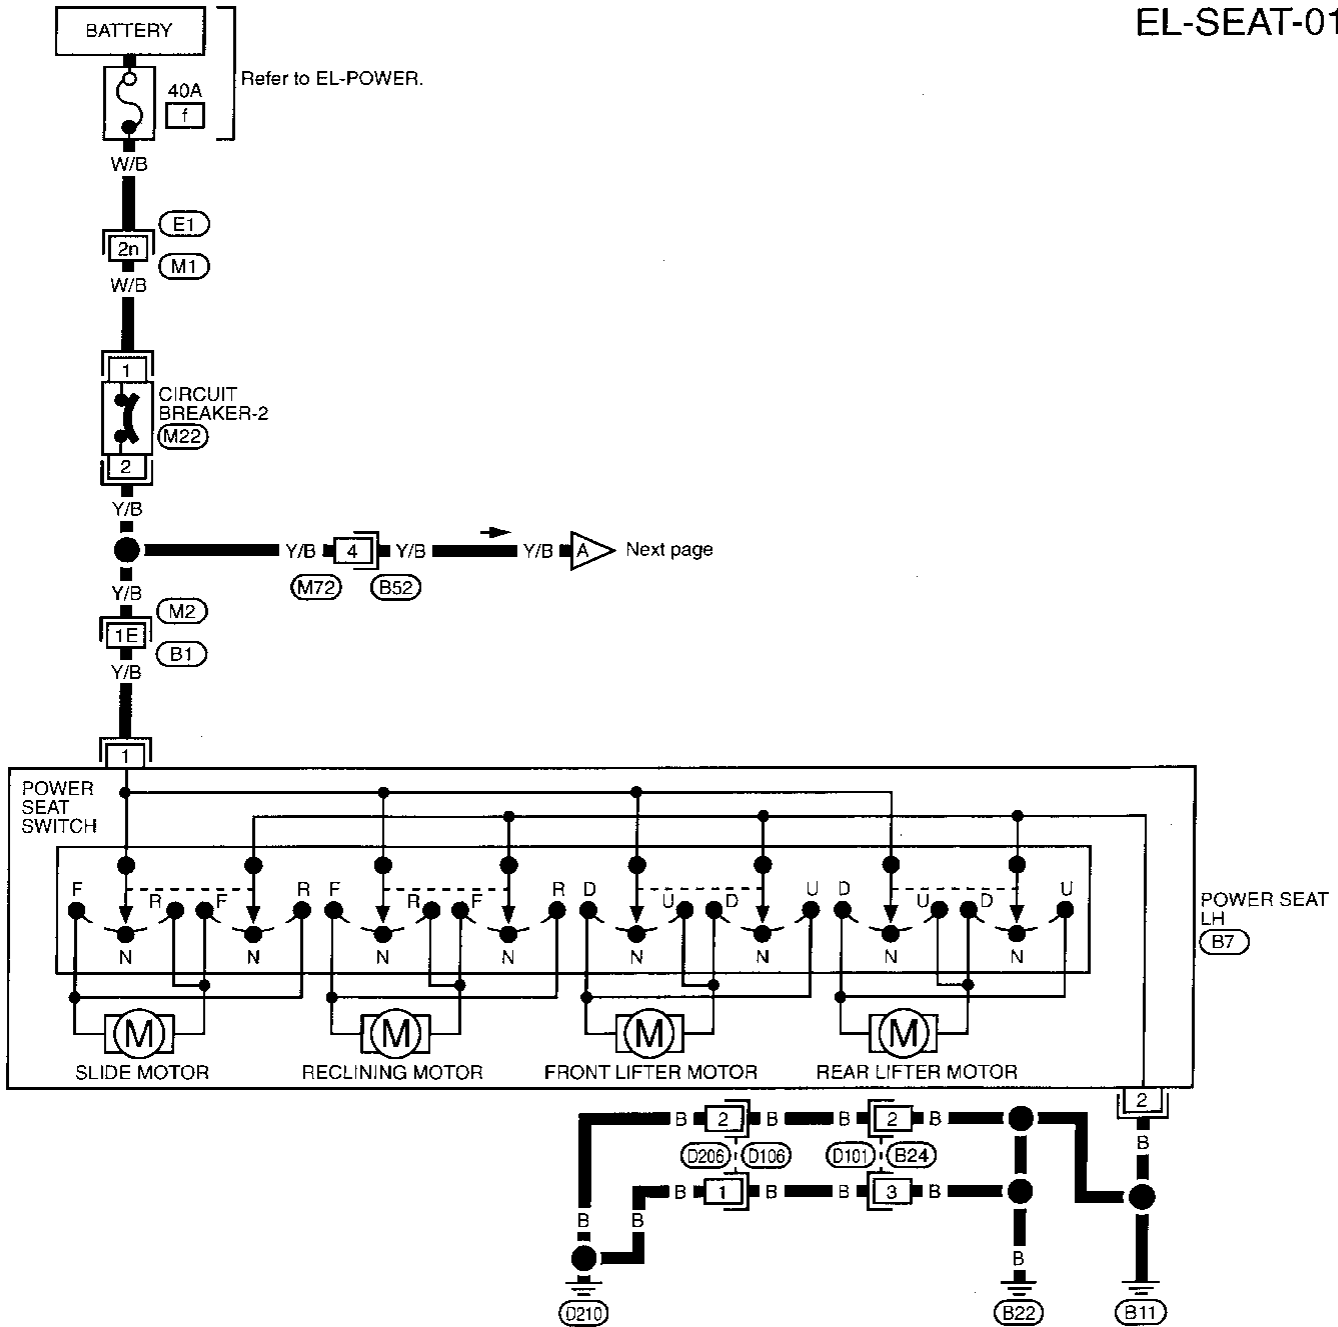

Refer to last page (Foldout page).



(E1), (M1)
(M2), (B1)



POWER SEAT

Power Seat/Wiring Diagram — SEAT — (Cont'd)

EL-SEAT-02

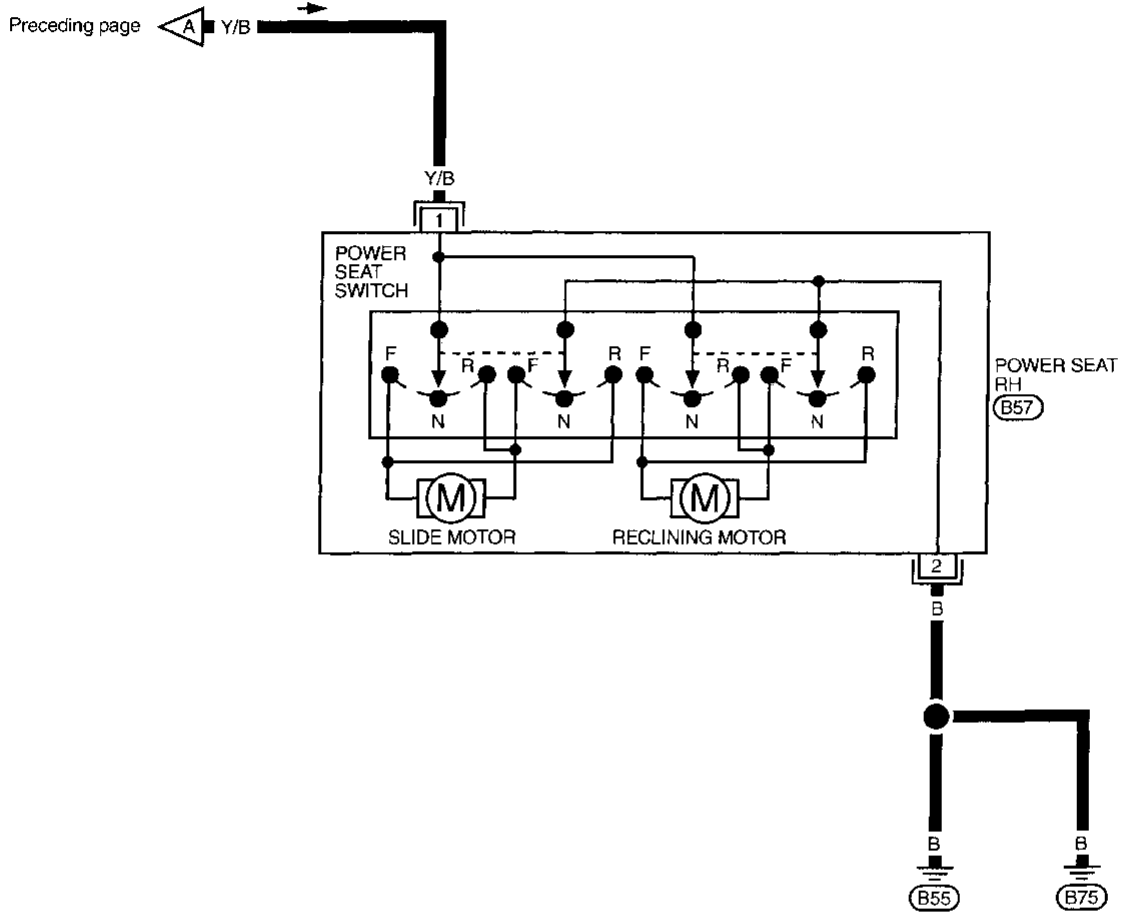


GI
 MA
 EM
 LC
 EC
 FE
 AT
 TF
 PD
 FA
 RA
 BR
 ST
 RS
 BT
 HA
EL
 DX

HEATED SEAT



Heated Seat/Wiring Diagram — HSEAT —

EL-HSEAT-01

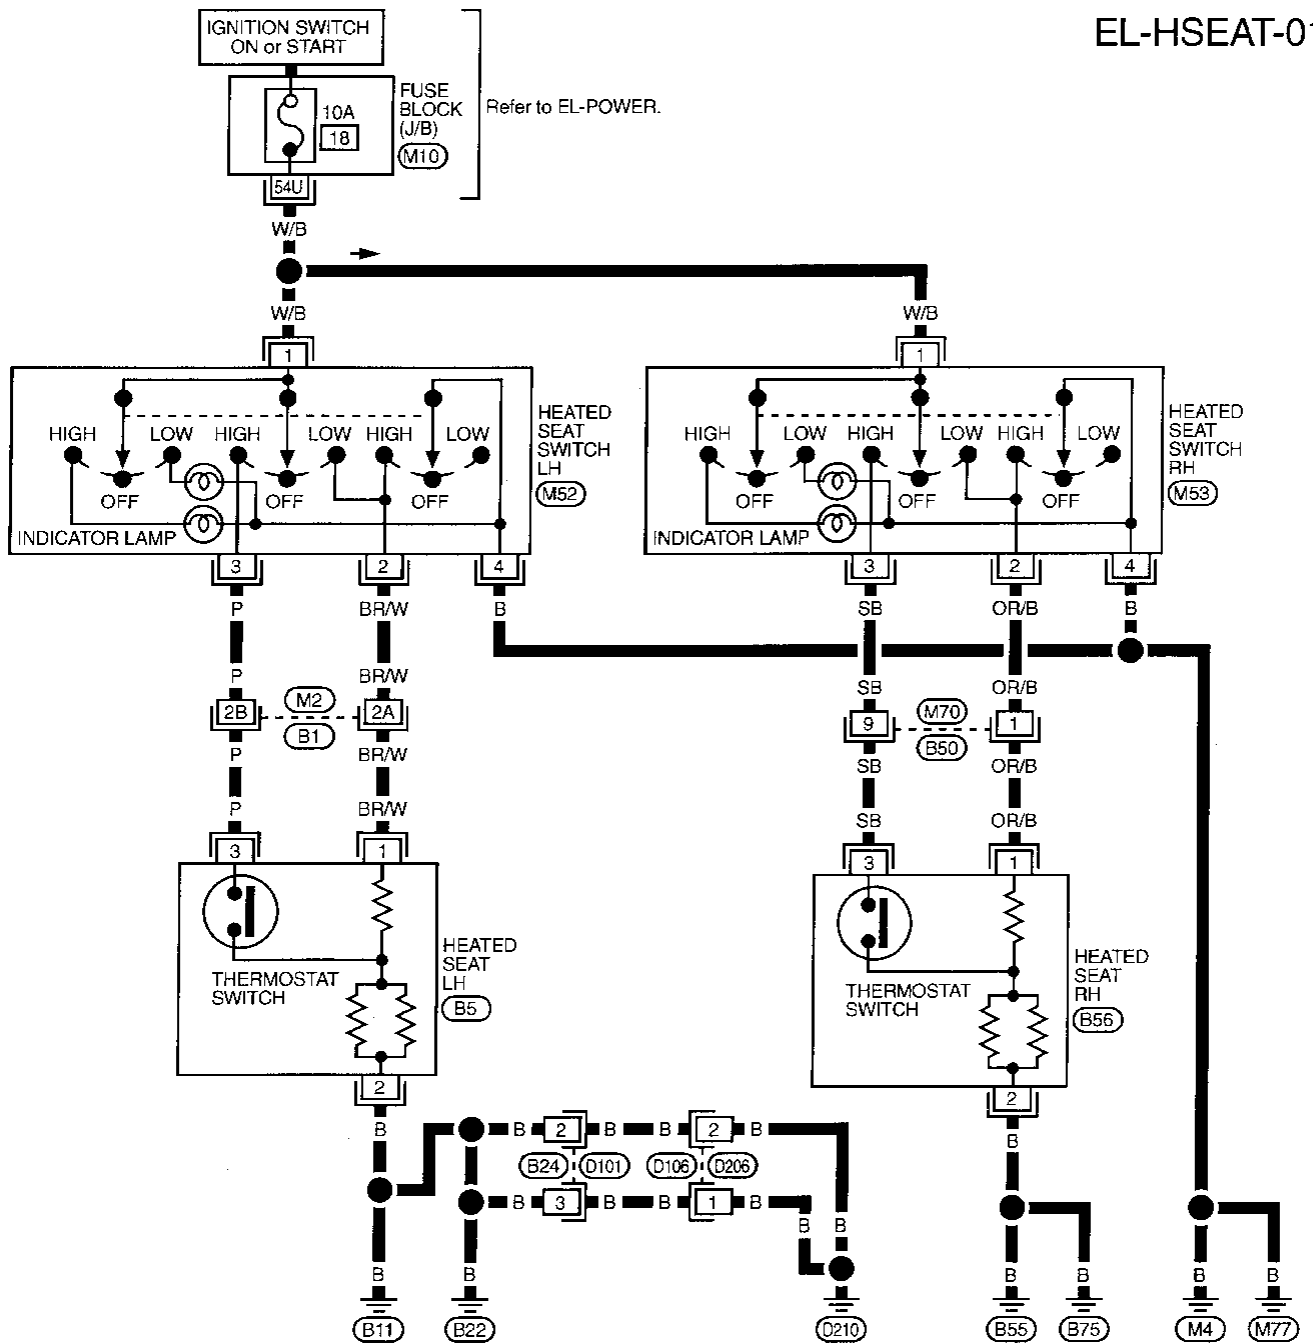

Refer to EL-POWER.









Refer to last page (Foldout page).



M2, B1
M10

AUTOMATIC SPEED CONTROL DEVICE (ASCD)

Component Parts and Harness Connector Location

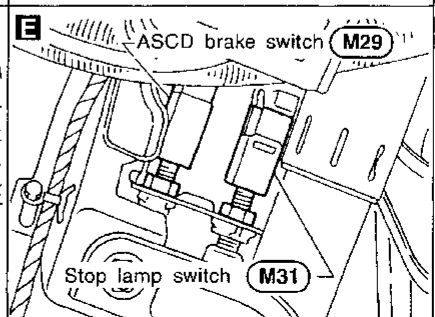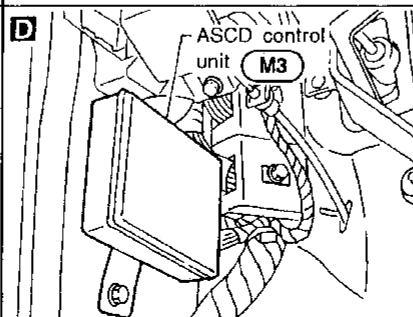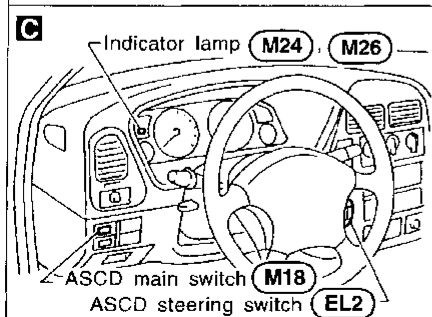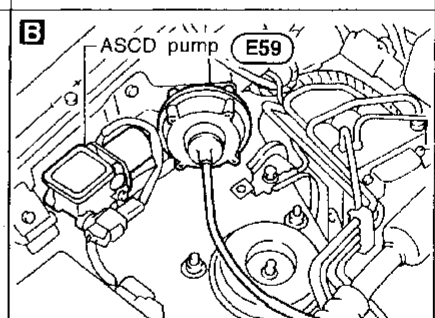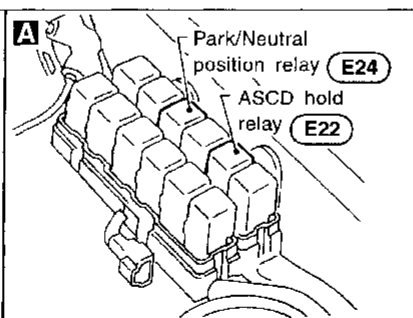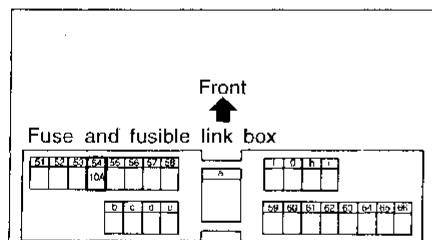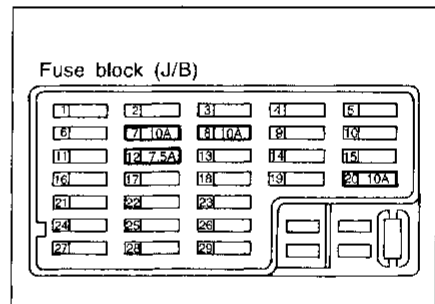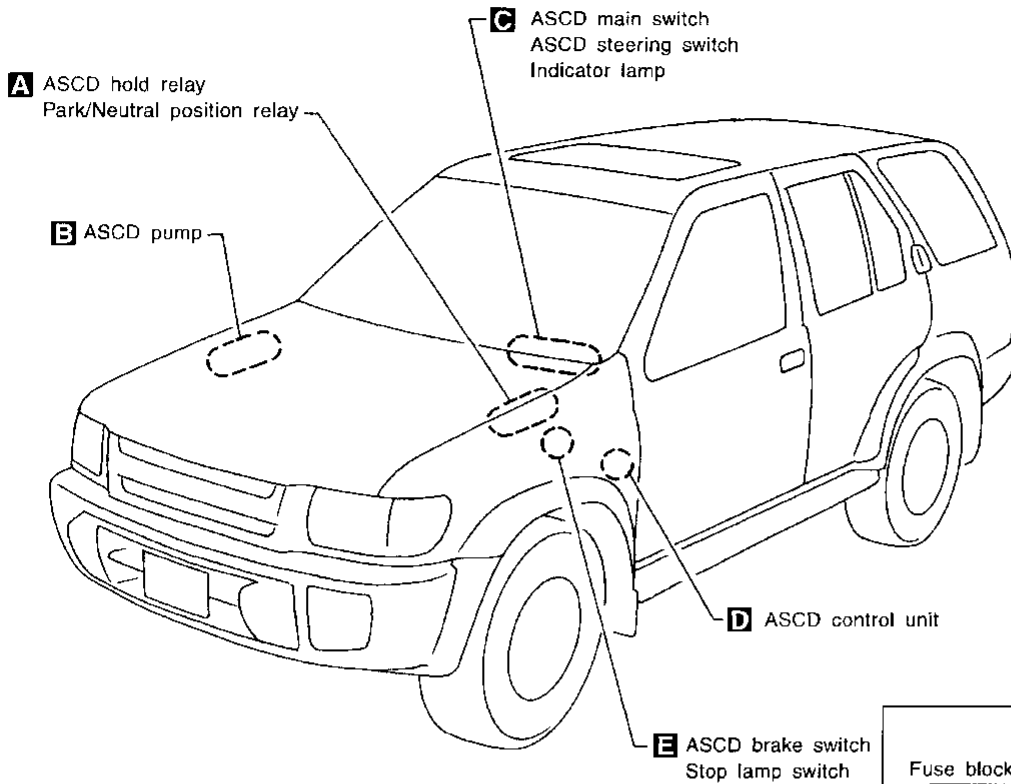

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

System Description

Refer to Owner's Manual for ASCD operating instructions.

When the ignition switch is in the ON or START position, power is supplied

- through 7.5A fuse [No. 12], located in the fuse block (J/B)]
- to ASCD main switch terminal ① and
- to ASCD hold relay terminal ⑦.

When ASCD main switch is in the ON position, power is supplied

- from terminal ② of the ASCD main switch
- to ASCD control unit terminal ④ and
- from terminal ③ of the ASCD main switch
- to ASCD hold relay terminal ①.

Ground is supplied

- to ASCD hold relay terminal ②
- through body grounds (E13) and (E41).

With power and ground supplied, the ASCD hold relay is activated, and power is supplied

- from terminal ⑥ of the ASCD hold relay
- through ASCD main switch terminals ② and ③
- to ASCD hold relay terminal ①.

Power remains supplied when the ASCD switch is released to the N (neutral) position

- from terminal ⑥ of ASCD hold relay
- to ASCD control unit terminal ④ and
- from terminal ③ of ASCD hold relay
- to park/neutral position relay terminal ③.

Ground is supplied

- to ASCD control unit terminal ③
- through body grounds (M4) and (M66).

Inputs

At this point, the system is ready to activate or deactivate, based on inputs from the following:

- speedometer in the combination meter
- stop lamp switch
- ASCD steering switch
- park/neutral position relay
- ASCD brake switch.

A vehicle speed input is supplied

- to ASCD control unit terminal ⑦
- from terminal ⑩ of the combination meter.

Power is supplied at all times

- to stop lamp switch terminal ①
- through 10A fuse [No. 20], located in the fuse block (J/B)].

When the brake pedal is depressed, power is supplied

- from terminal ② of the stop lamp switch
- to ASCD control unit terminal ⑪.

Power is supplied at all times

- through 10A fuse [No. 54], located in the fuse and fusible link box]
- to horn relay terminal ②
- through terminal ① of the horn relay
- to ASCD steering switch terminal ⑳.

When the SET/COAST switch is depressed, power is supplied

- from terminal ㉒ of the ASCD steering switch
- to ASCD control unit terminal ②.

When the RESUME/ACCEL switch is depressed, power is supplied

- from terminal ㉓ of the ASCD steering switch
- to ASCD control unit terminal ①.

When the system is activated, power is supplied

- to ASCD control unit terminal ⑤.

Power is interrupted when

- the selector lever is placed in P or N or
- the ASCD brake switch is depressed.

AUTOMATIC SPEED CONTROL DEVICE (ASCD)

System Description (Cont'd)

Outputs

The ASCD actuator controls the throttle drum via the ASCD wire based on inputs from the ASCD control unit. The ASCD pump consists of a vacuum motor, an air valve, and a release valve.

Power is supplied

- from terminal ⑧ of the ASCD control unit
- to ASCD pump terminal ①.

Ground is supplied to the vacuum motor

- from terminal ⑨ of the ASCD control unit
- to ASCD pump terminal ②.

Ground is supplied to the air valve

- from terminal ⑩ of the ASCD control unit
- to ASCD pump terminal ③.

Ground is supplied to the release valve

- from terminal ⑭ of the ASCD control unit
- to ASCD pump terminal ④.

When the system is activated, power is supplied

- from terminal ⑬ of the ASCD control unit
- to combination meter terminal ⑤ and
- to A/T control unit terminal ⑰.

Ground is supplied

- to combination meter terminal ⑳
- through body grounds (M4) and (M77).

With power and ground supplied, the CRUISE indicator illuminates.

When vehicle speed is approximately 8 km/h (5 MPH) below set speed, a signal is sent

- from terminal ⑫ of the ASCD control unit
- to A/T control unit terminal ⑱.

When this occurs, the A/T control unit cancels overdrive.

After vehicle speed is approximately 3 km/h (2 MPH) above set speed, overdrive is reactivated.

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT


HA

EL

IDX

AUTOMATIC SPEED CONTROL DEVICE (ASCD)






Schematic

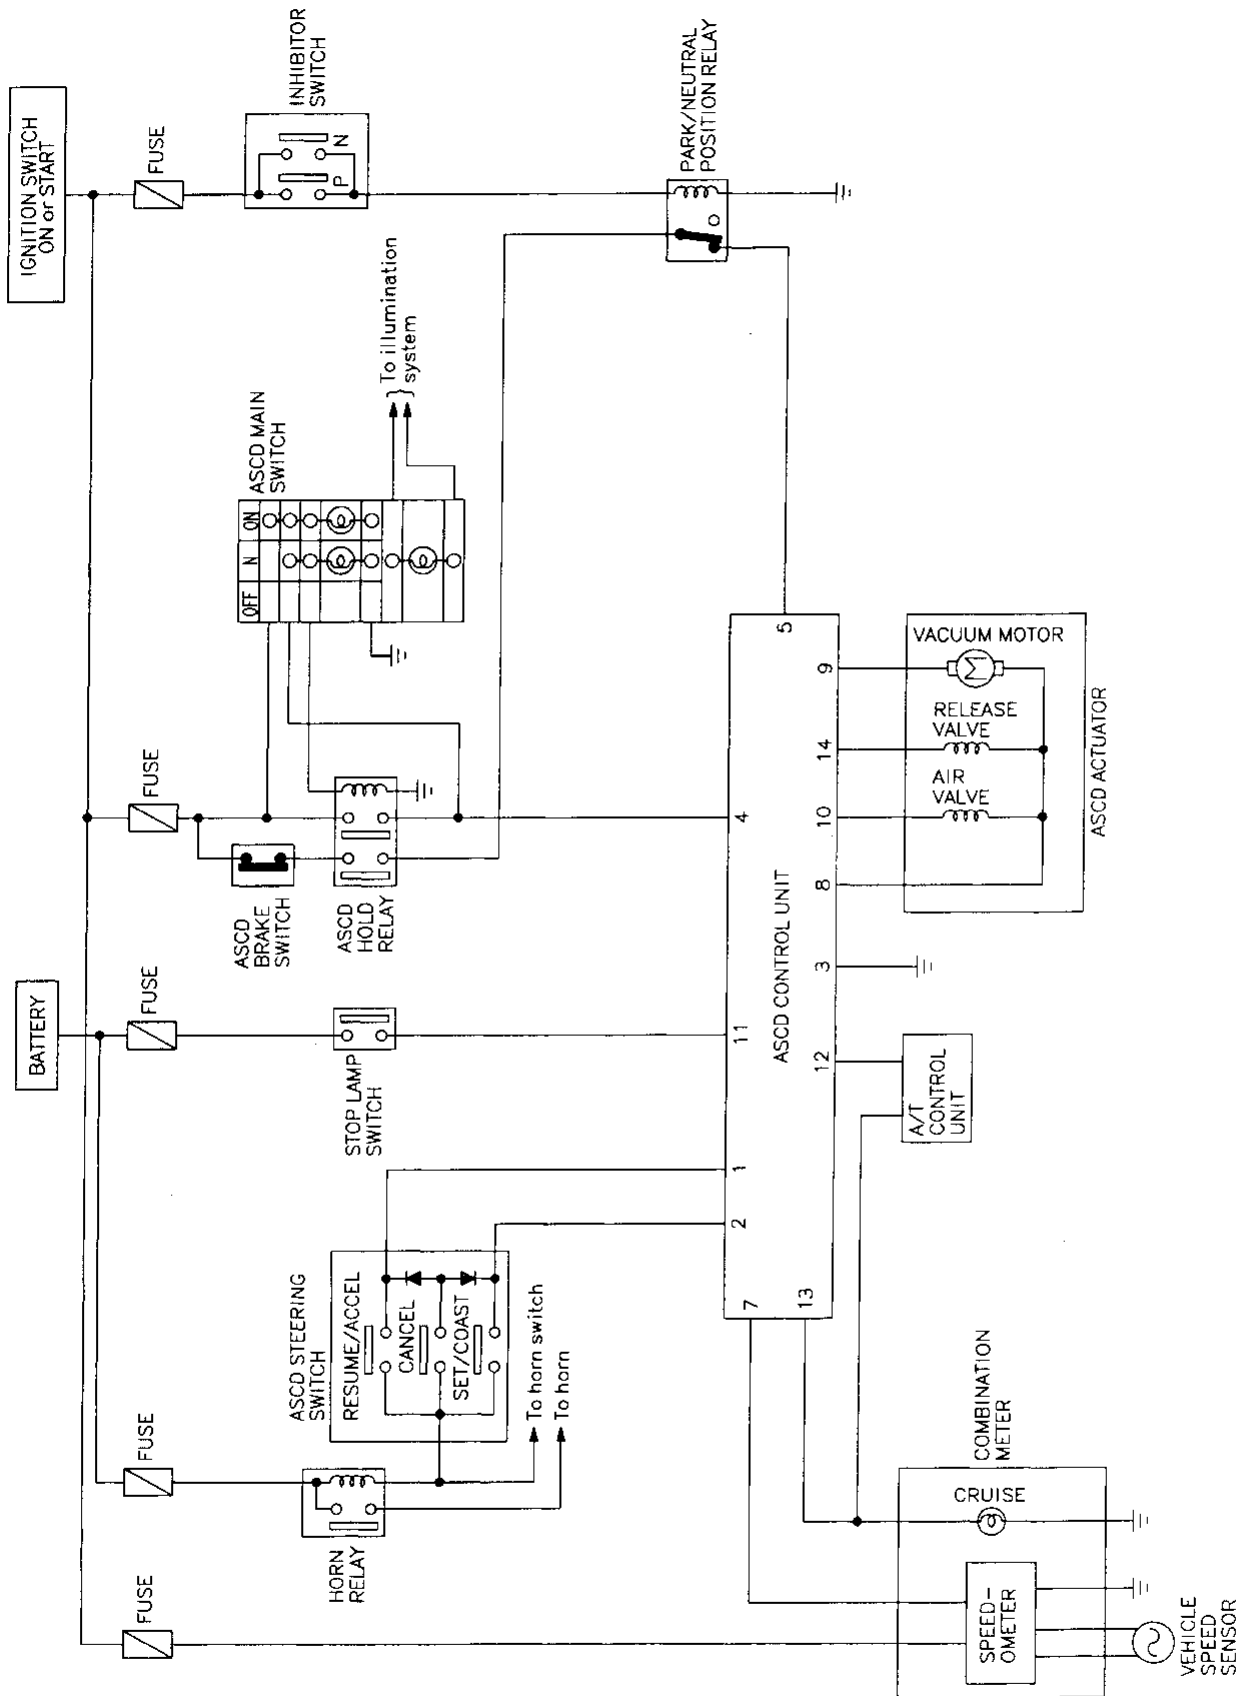

AUTOMATIC SPEED CONTROL DEVICE (ASCD)

Wiring Diagram — ASCD —

EL-ASCD-01

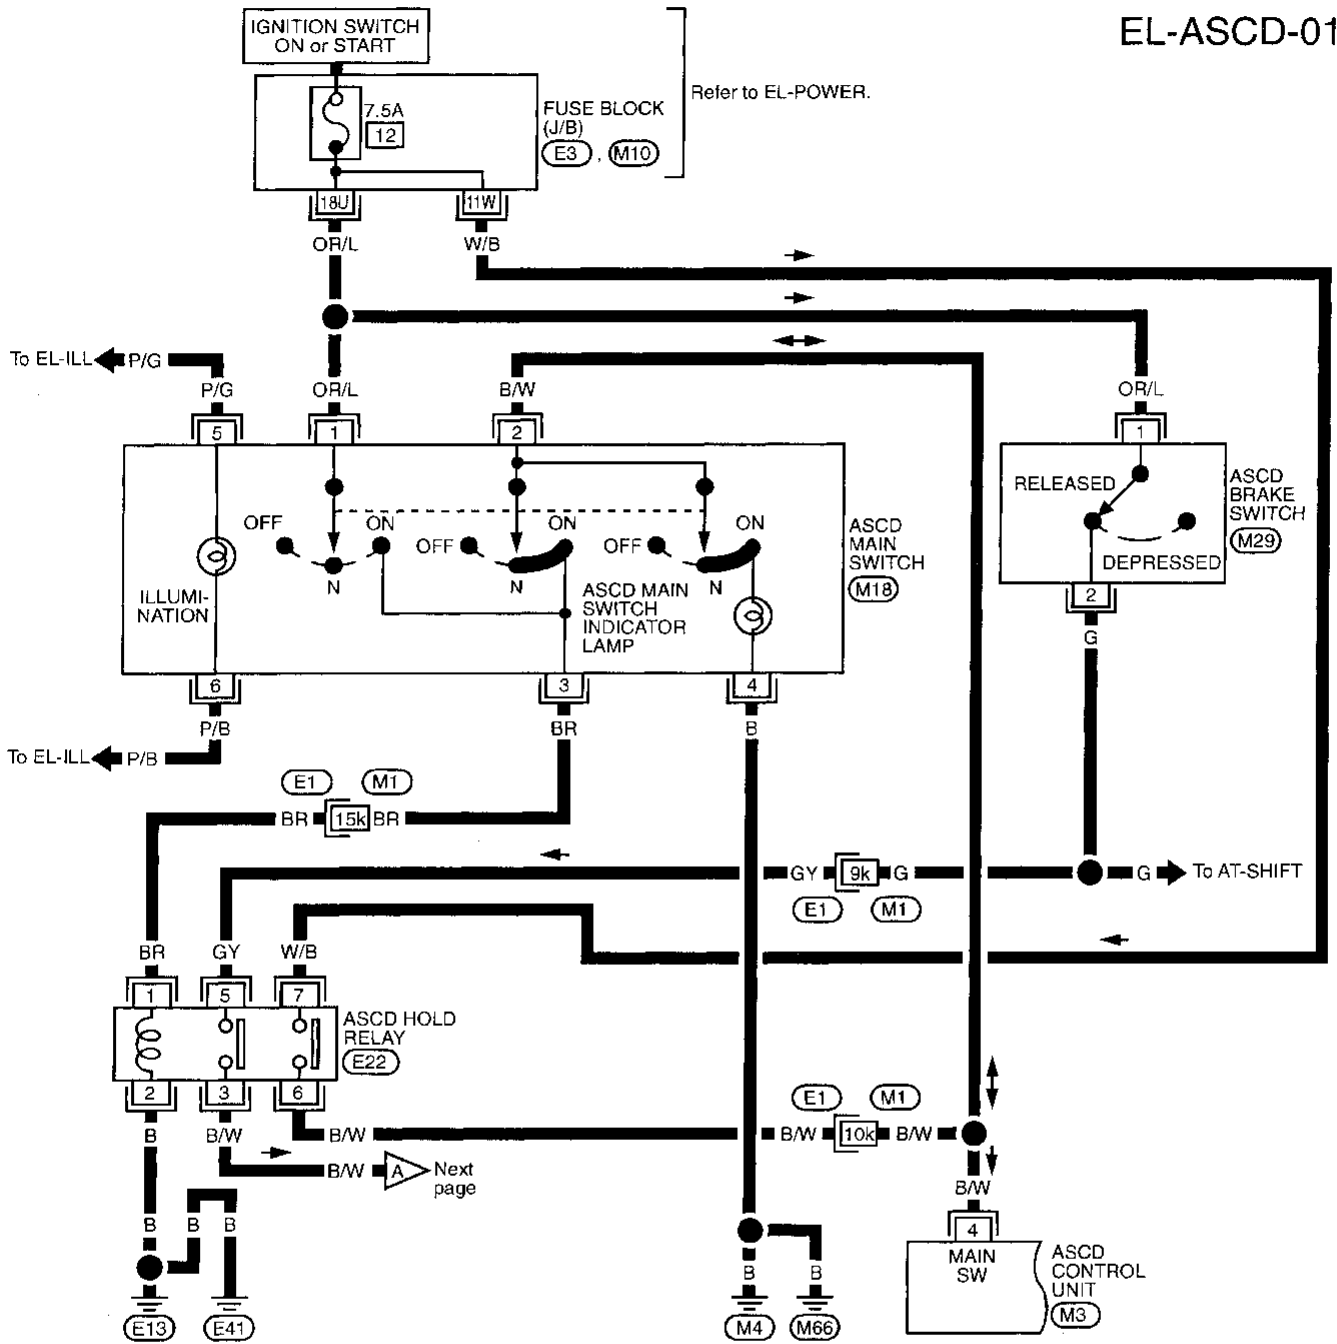

Refer to last page (Foldout page).


- (E1) (M1)
- (E3)
- (M10)

GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX


AUTOMATIC SPEED CONTROL DEVICE (ASCD)

Wiring Diagram — ASCD — (Cont'd)

EL-ASCD-02

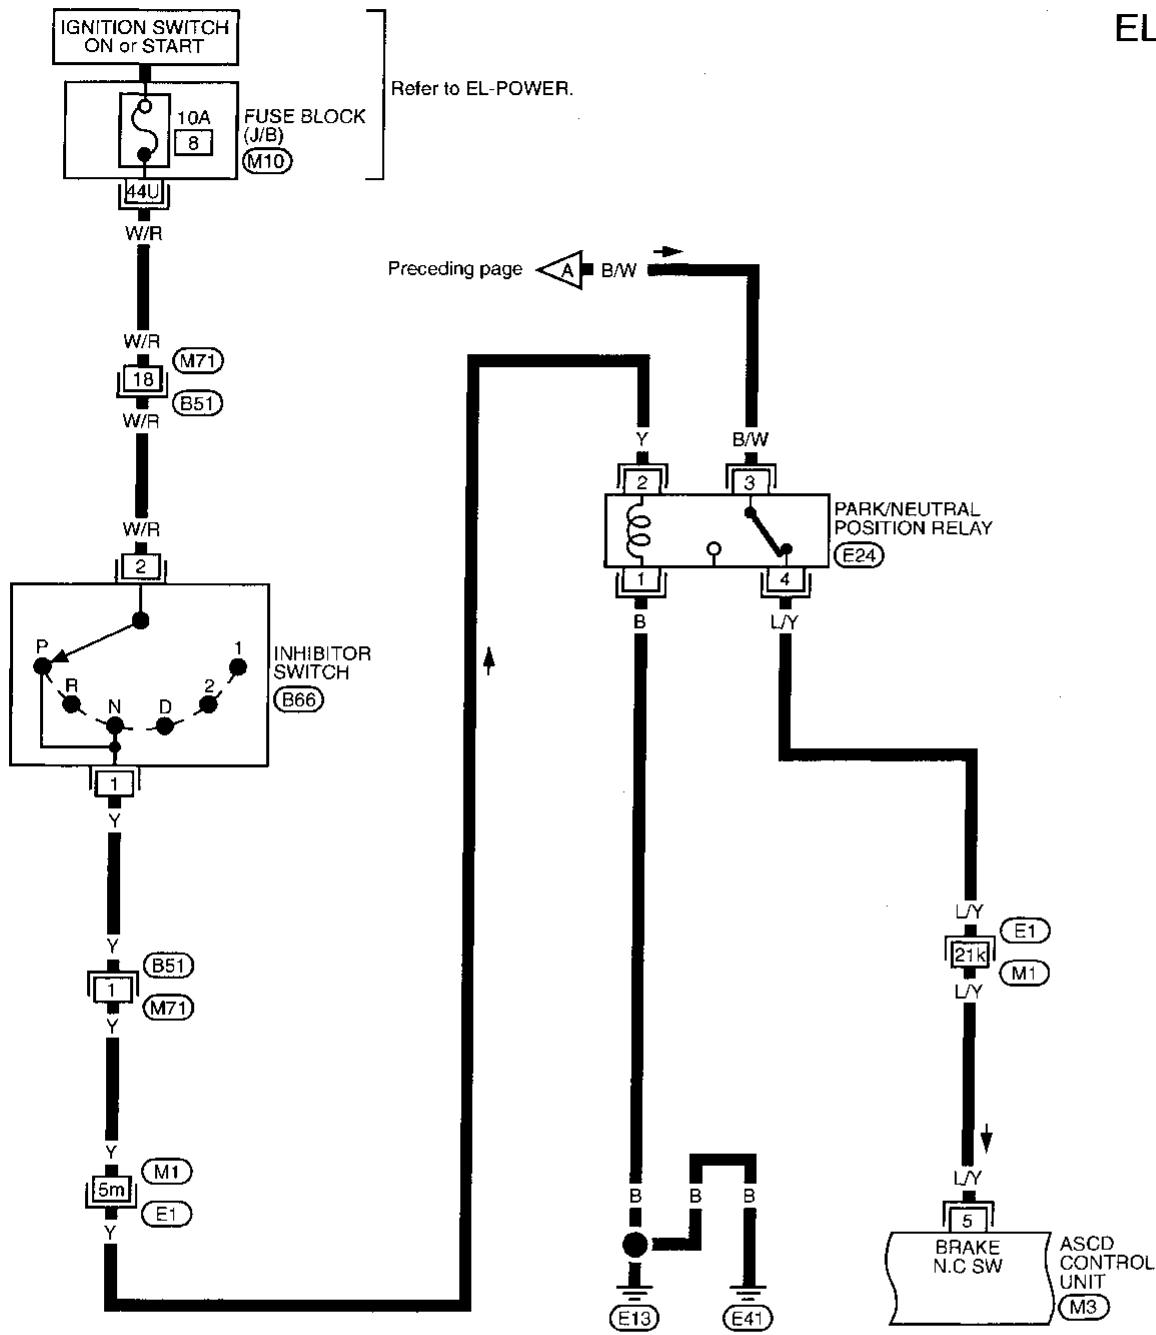





Refer to last page (Foldout page).

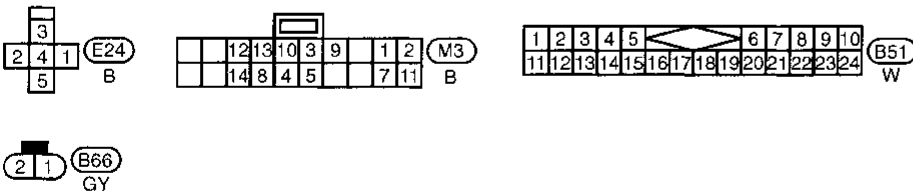

AUTOMATIC SPEED CONTROL DEVICE (ASCD)

Wiring Diagram — ASCD — (Cont'd)

EL-ASCD-03

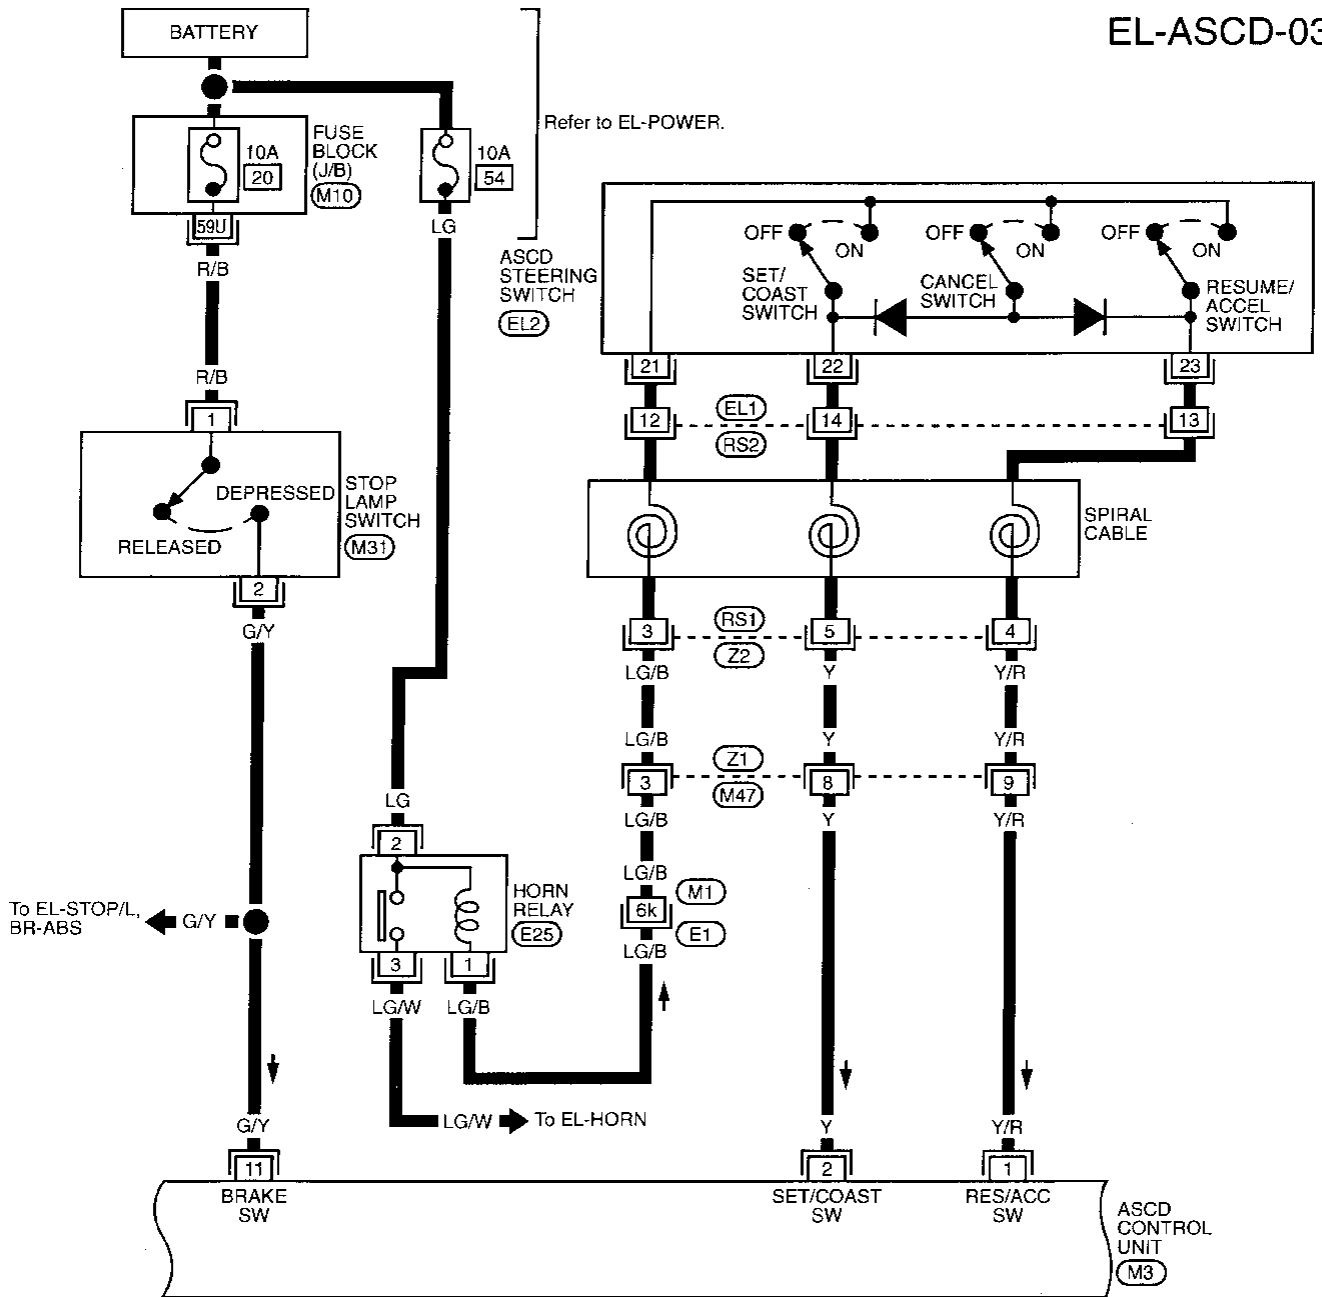

* : This connector is not shown in "HARNES LAYOUT".

Refer to last page (Foldout page).



(E1) (M1)
(M10)

GI
 MA
 EM
 LC
 EC
 FE
 AT
 TF
 PD
 FA
 RA
 BR
 ST
 RS
 BT
 HA
 EL
 IDX

AUTOMATIC SPEED CONTROL DEVICE (ASCD)

Wiring Diagram — ASCD — (Cont'd)

EL-ASCD-04

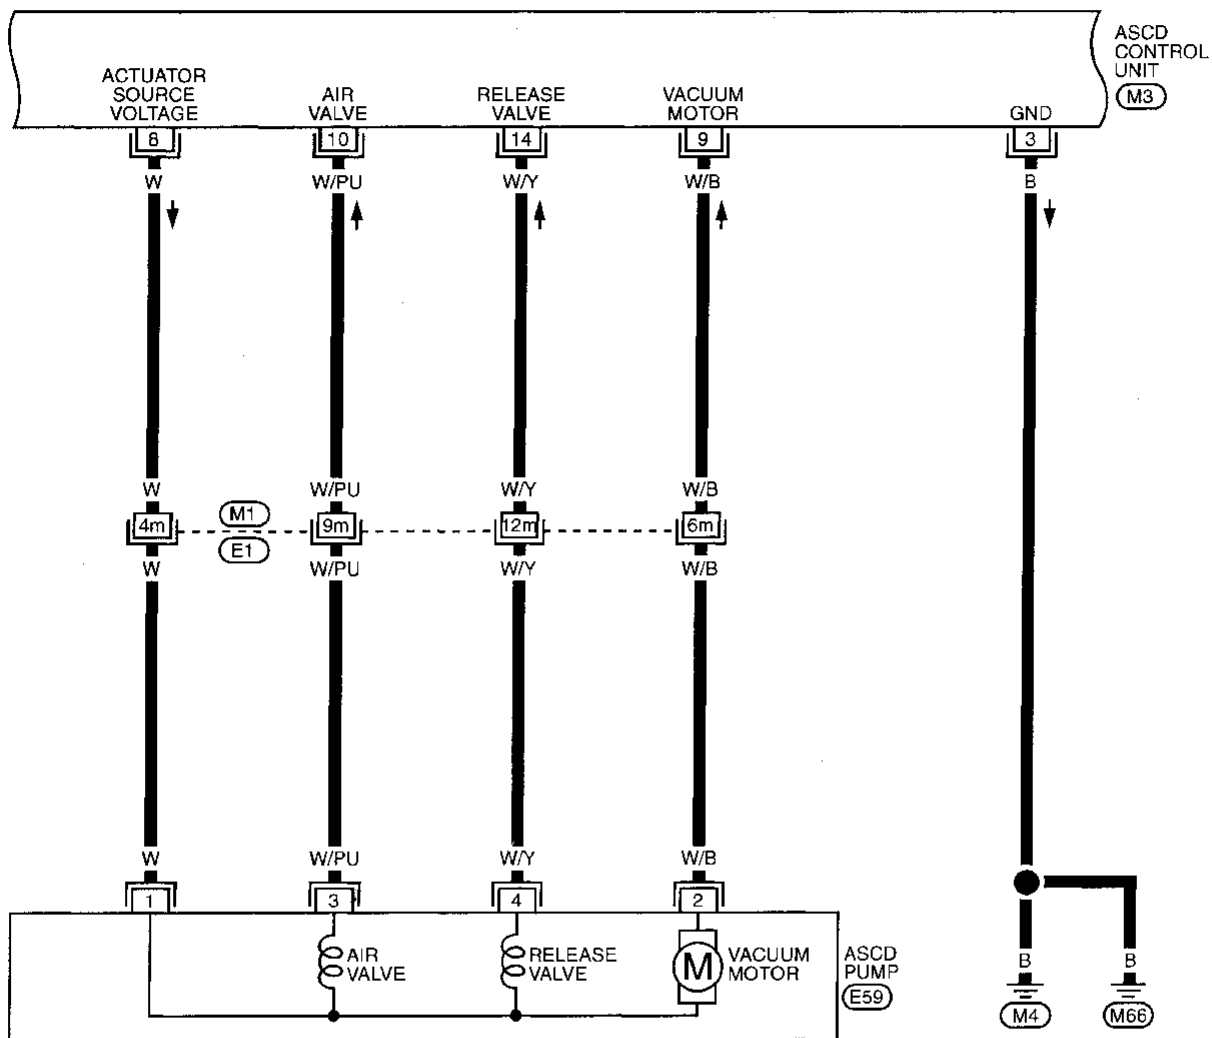


Refer to last page (Foldout page).

(E1) . (M1)




AUTOMATIC SPEED CONTROL DEVICE (ASCD)

Wiring Diagram — ASCD — (Cont'd)

EL-ASCD-05

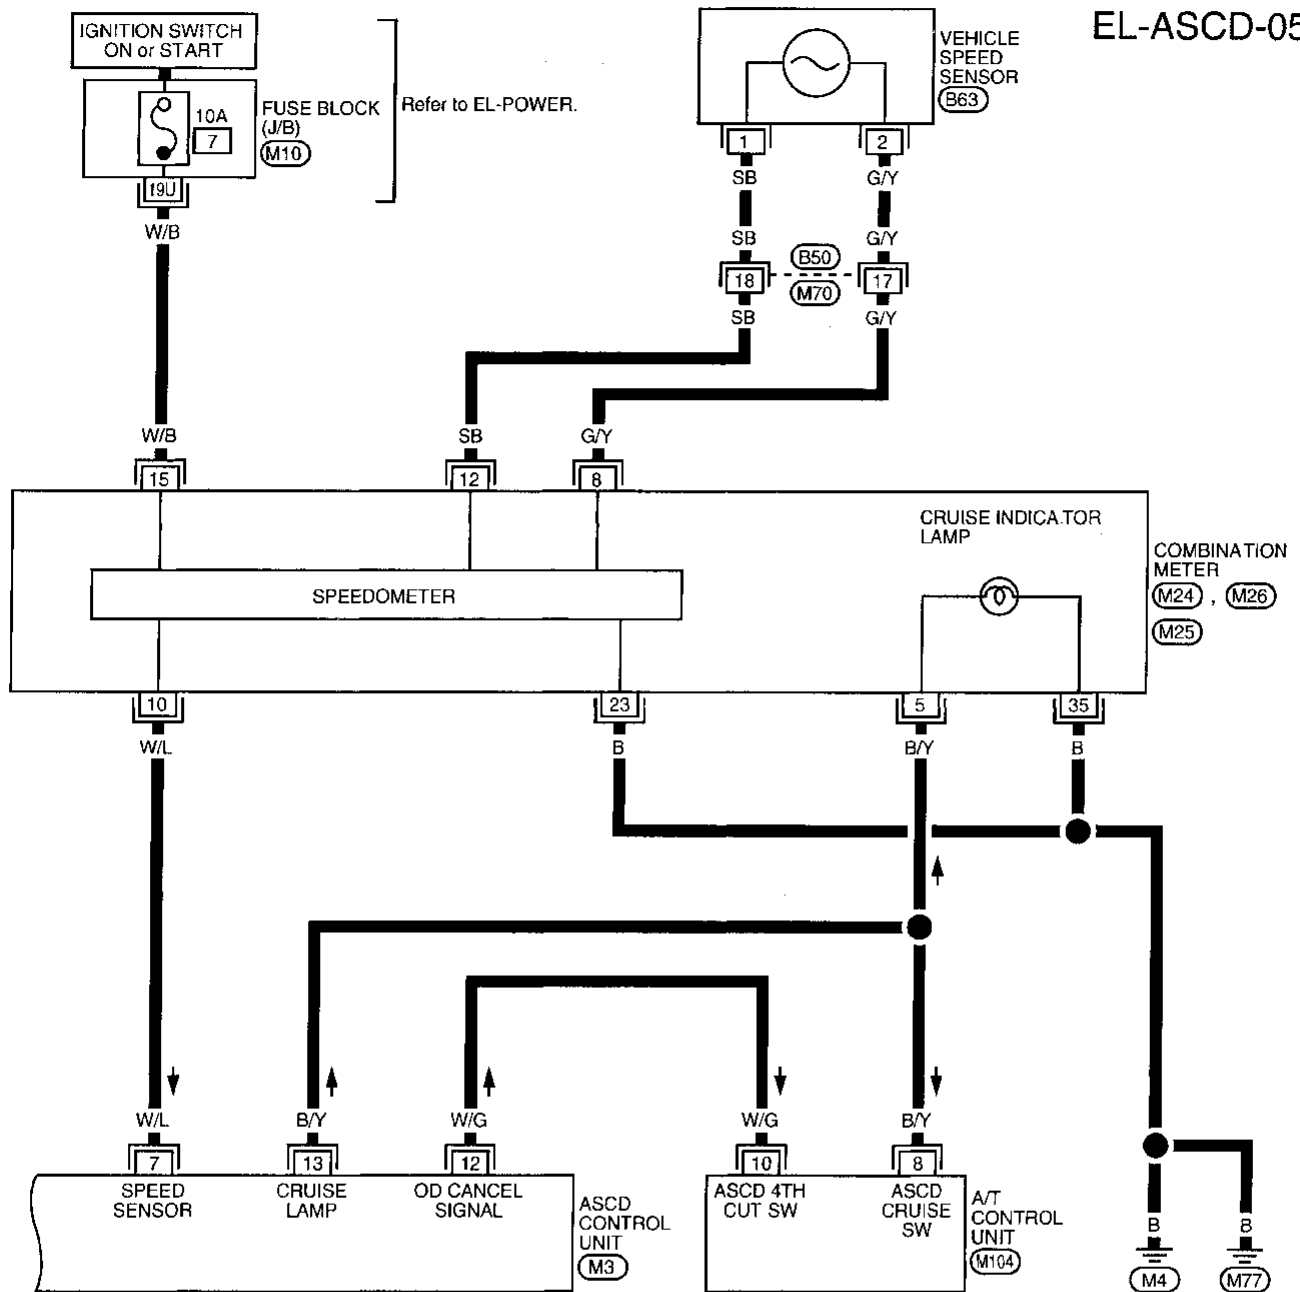

GI
 MA
 EM
 LC
 EC
 FE
 AT
 TF
 PD
 FA
 RA
 BR
 ST
 RS
 BT



Refer to last page (Foldout page).


(M10)
(M104)

HA

EL

IDX

AUTOMATIC SPEED CONTROL DEVICE (ASCD)

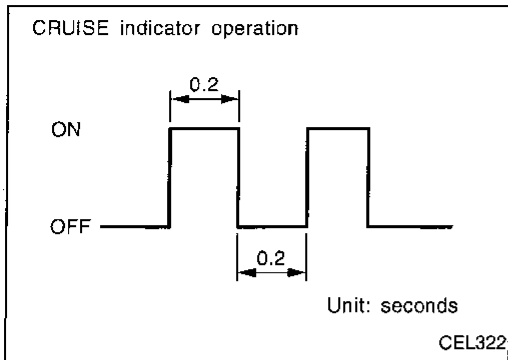

Trouble Diagnoses

FAIL-SAFE SYSTEM

When the fail-safe system senses a malfunction, it deactivates ASCD operation. The CRUISE indicator in the combination meter will then flash.


Malfunction detection conditions

Detection conditions	ASCD operation during malfunction detection
<ul style="list-style-type: none"> ● ASCD steering (RESUME/ACCEL, CANCEL, SET/COAST) switch is stuck. ● Vacuum motor ground circuit or power circuit is open or shorted. ● Air valve ground circuit or power circuit is open or shorted. ● Release valve ground circuit or power circuit is open or shorted. ● Vehicle speed sensor is faulty. ● ASCD control unit internal circuit is malfunctioning. 	<ul style="list-style-type: none"> ● ASCD is deactivated. ● Vehicle speed memory is canceled.
<ul style="list-style-type: none"> ● ASCD brake switch or stop lamp switch is faulty. 	<ul style="list-style-type: none"> ● ASCD is deactivated. ● Vehicle speed memory is not canceled.

AUTOMATIC SPEED CONTROL DEVICE (ASCD)

Trouble Diagnoses (Cont'd)

Fail-safe system check

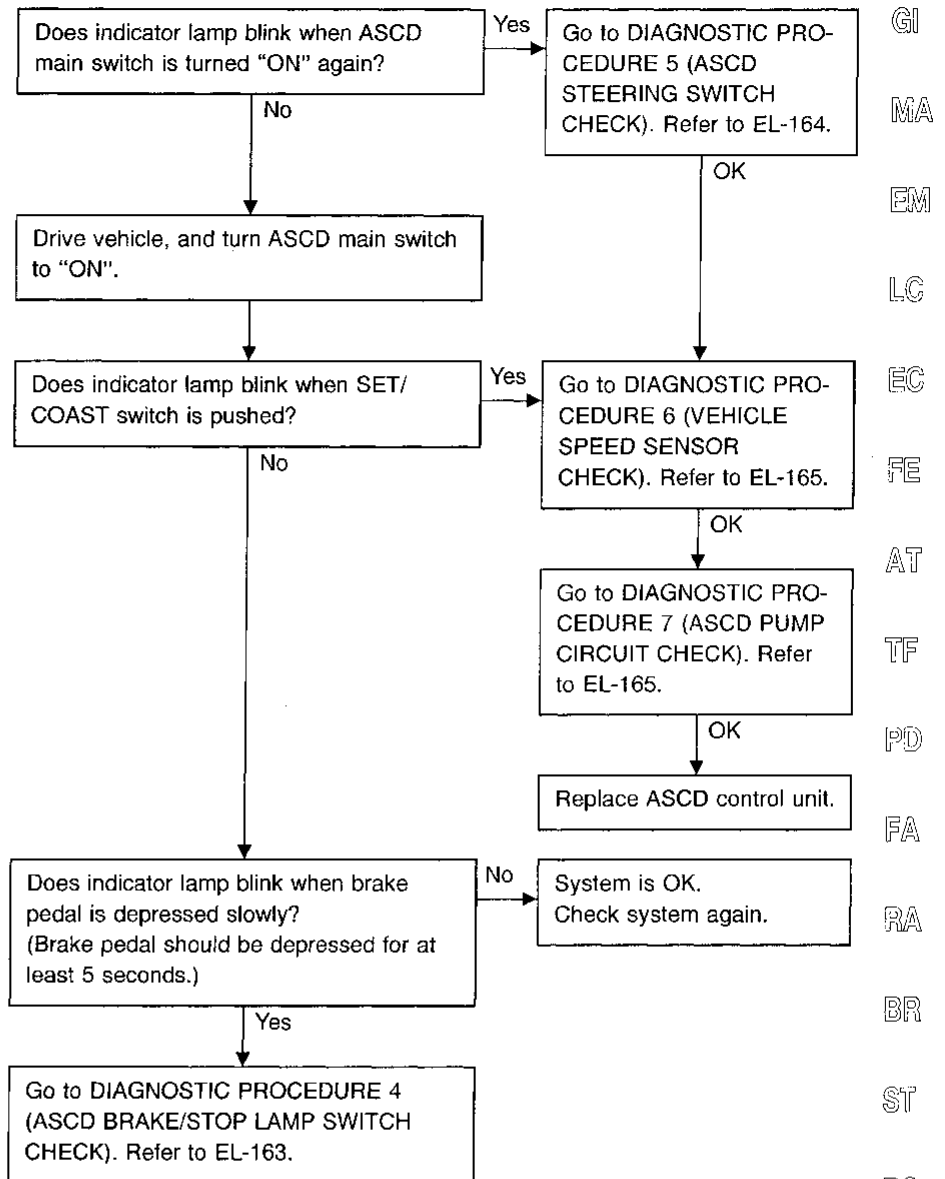

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

AUTOMATIC SPEED CONTROL DEVICE (ASCD)

Trouble Diagnoses (Cont'd)

SYMPTOM CHART

PROCEDURE	Diagnostic procedure								
REFERENCE PAGE	EL-159	EL-161	EL-161	EL-162	EL-163	EL-164	EL-165	EL-165	EL-166
SYMPTOM	Fail-safe system check	DIAGNOSTIC PROCEDURE 1 (POWER SUPPLY AND GROUND CIRCUIT CHECK)	DIAGNOSTIC PROCEDURE 2 (ASCD MAIN SWITCH CHECK)	DIAGNOSTIC PROCEDURE 3 (ASCD HOLD RELAY CHECK)	DIAGNOSTIC PROCEDURE 4 (ASCD BRAKE/STOP LAMP SWITCH CHECK)	DIAGNOSTIC PROCEDURE 5 (ASCD STEERING SWITCH CHECK)	DIAGNOSTIC PROCEDURE 6 (VEHICLE SPEED SENSOR CHECK)	DIAGNOSTIC PROCEDURE 7 (ASCD PUMP CIRCUIT CHECK)	DIAGNOSTIC PROCEDURE 8 (ASCD ACTUATOR/PUMP CHECK)
ASCD cannot be set. ("CRUISE" indicator lamp does not blink.)		X	X	X		X	X		
ASCD cannot be set. ("CRUISE" indicator lamp blinks.★1)	X				X	X	X	X	
Vehicle speed does not decrease after SET/COAST switch has been pressed.						X			X
Vehicle speed does not return to the set speed after RESUME/ACCEL switch has been pressed.★2						X			X
Vehicle speed does not increase after RESUME/ACCEL switch has been pressed.						X			X
System is not released after CANCEL switch (steering) has been pressed.						X			X
Large difference between set speed and actual vehicle speed.									X
Deceleration is greatest immediately after ASCD has been set.									X

★1: It indicates that system is in fail-safe.



★2: If vehicle speed is greater than 48 km/h (30 MPH) after system has been released, pressing RESUME/ACCEL switch returns vehicle speed to the set speed previously achieved. However, doing so when the ASCD main switch is turned to "OFF", vehicle speed will not return to the set speed since the memory is canceled.

AUTOMATIC SPEED CONTROL DEVICE (ASCD)

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 1

(POWER SUPPLY AND GROUND CIRCUIT CHECK)

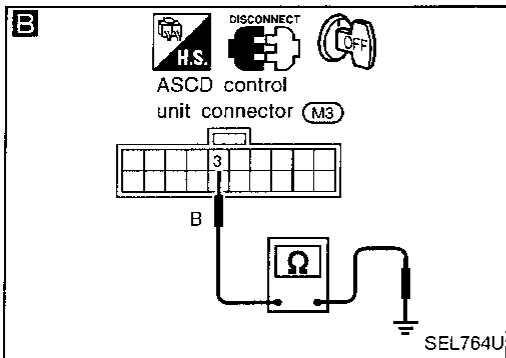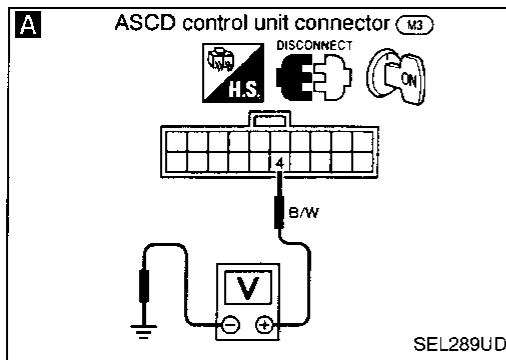

1. Turn ignition switch ON.
2. Turn ASCD main switch "ON" to make sure indicators illuminate.

NG → Go to DIAGNOSTIC PROCEDURE 2 (ASCD MAIN SWITCH CHECK).

OK ↓

A CHECK POWER SUPPLY CIRCUIT FOR ASCD CONTROL UNIT.

1. Disconnect ASCD control unit connector.
2. Turn ignition switch ON.
3. Turn ASCD main switch "ON".
4. Check voltage between control unit connector terminal ④ and ground. **Battery voltage should exist.**

Refer to wiring diagram in EL-153.

NG → Go to DIAGNOSTIC PROCEDURE 3 (ASCD HOLD RELAY CHECK). Refer to EL-162.

OK ↓

B CHECK GROUND CIRCUIT FOR ASCD CONTROL UNIT.


Check continuity between ASCD control unit harness terminal ③ and body ground.

Refer to wiring diagram in EL-156.

NG → Repair harness.

OK ↓

Go to next procedure.

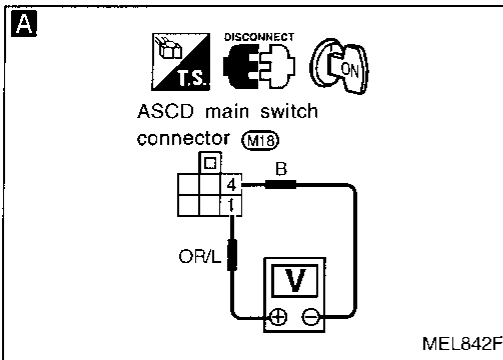

DIAGNOSTIC PROCEDURE 2 (ASCD MAIN SWITCH CHECK)

A CHECK POWER SUPPLY FOR ASCD MAIN SWITCH.

1. Disconnect main switch connector.
2. Measure voltage between main switch terminals ① and ④. **Battery voltage should exist.**

Refer to wiring diagram in EL-153.

NG → Check the following.

- 7.5A fuse (No. 12, located in the fuse block)
- Harness for open or short between fuse and ASCD main switch
- Ground circuit for ASCD main switch

OK ↓

CHECK ASCD MAIN SWITCH.

Refer to "ELECTRICAL COMPONENTS INSPECTION" (EL-167).

NG → Replace ASCD main switch.

OK ↓












Go to next procedure.

GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

AUTOMATIC SPEED CONTROL DEVICE (ASCD)

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 3 (ASCD HOLD RELAY CHECK)

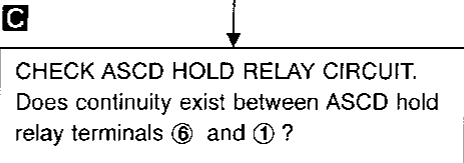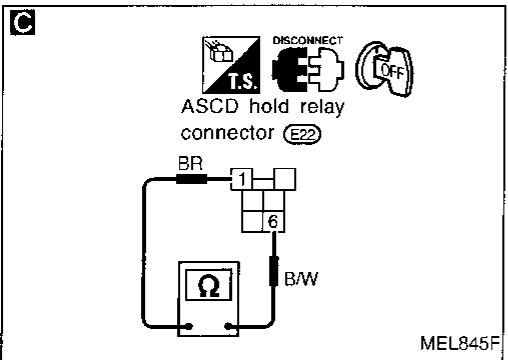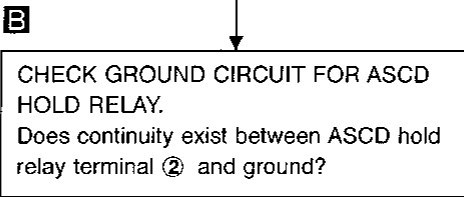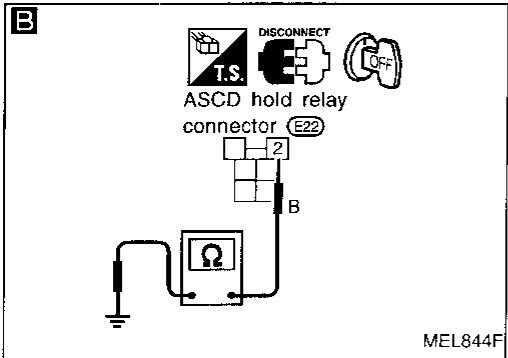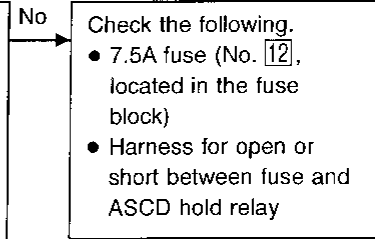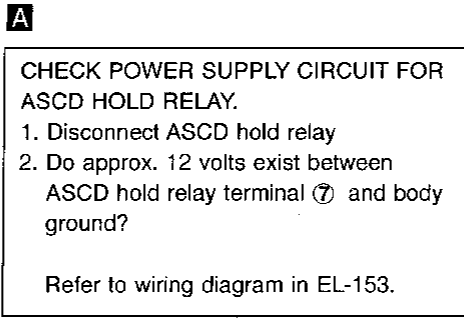
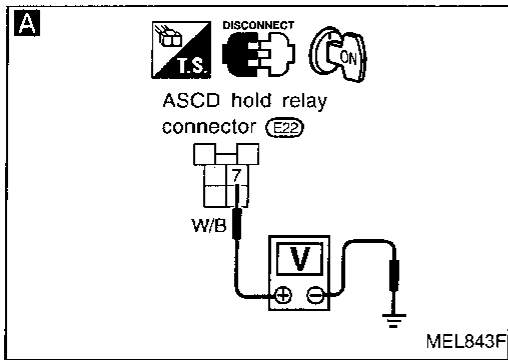


AUTOMATIC SPEED CONTROL DEVICE (ASCD)

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 4

(ASCD BRAKE/STOP LAMP SWITCH CHECK)

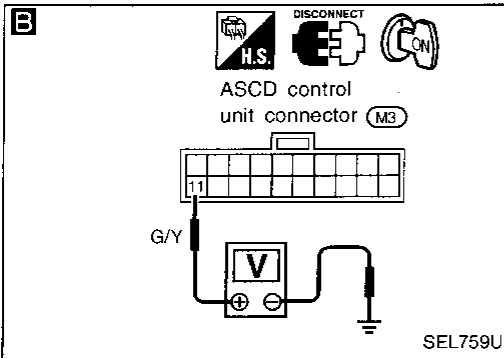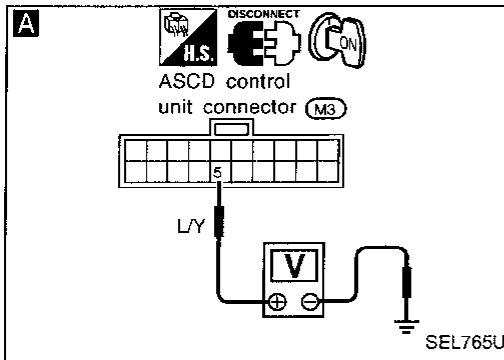

A

CHECK ASCD BRAKE SWITCH CIRCUIT.

1. Disconnect control unit connector.
2. Turn ignition switch ON.
3. Turn ASCD main switch "ON".
4. Check voltage between control unit connector terminal ⑤ and ground. When brake pedal is depressed or A/T selector lever is in "N" or "P" range:
Approx. 0V
When both brake pedal is released or A/T selector lever is not in "N" or "P" range:
Battery voltage should exist.

Refer to wiring diagram in EL-154.

- NG
- Check the following.
- ASCD brake switch
Refer to "ELECTRICAL COMPONENTS INSPECTION" (EL-167).
 - Inhibitor switch
Refer to "ELECTRICAL COMPONENTS INSPECTION" (EL-167).
 - ASCD hold relay
 - Harness for open or short

B

CHECK STOP LAMP SWITCH CIRCUIT.

1. Disconnect control unit connector.
2. Check voltage between control unit terminal ⑪ and ground.

Condition		Voltage [V]
Stop lamp switch	Depressed	Approx. 12
	Released	0

Refer to wiring diagram in EL-155.

- NG
- Check the following.
- 10A fuse [No. 20], located in the fuse block (J/B)]
 - Harness for open or short between ASCD control unit and stop lamp switch
 - Stop lamp switch
Refer to "ELECTRICAL COMPONENTS INSPECTION" (EL-167).

OK

ASCD brake/stop lamp switch is OK.



GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

AUTOMATIC SPEED CONTROL DEVICE (ASCD)

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 5

(ASCD STEERING SWITCH CHECK)

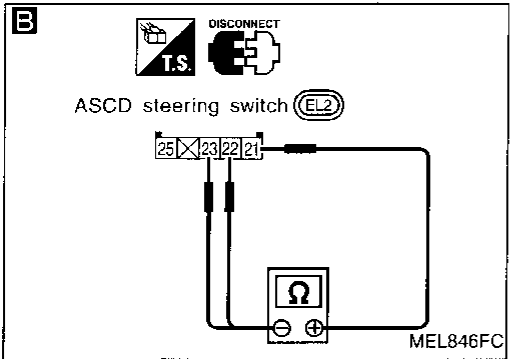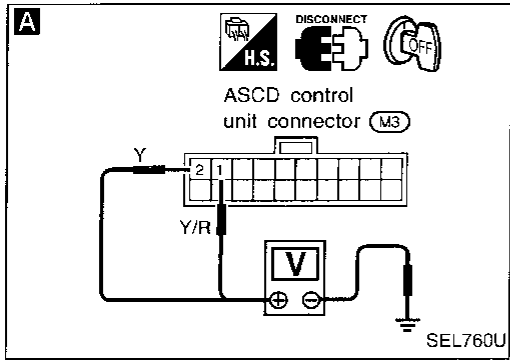

A

CHECK ASCD STEERING SWITCH CIRCUIT FOR ASCD CONTROL UNIT.

1. Disconnect control unit connector.
2. Check voltage between control unit harness terminals and ground.

OK → ASCD steering switch is OK.

	Terminal No.		Switch condition	
	⊕	⊖	Pressed	Released
SET/COAST SW	②	ground	12V	0V
RESUME/ACCEL SW	①	ground	12V	0V
CANCEL SW	②	ground	12V	0V
	①	ground	12V	0V

Refer to wiring diagram in EL-155.

NG

CHECK POWER SUPPLY FOR ASCD STEERING SWITCH.
Does horn work?

- NG → Check the following.
- 10A fuse (No. 54, located in the relay box)
 - Horn relay
 - Harness for open or short between horn and fuse

OK

B

CHECK ASCD STEERING SWITCH.

1. Disconnect ASCD steering switch.
2. Check continuity between terminals by pushing each switch.

NG → Replace ASCD steering switch.

Switch	Terminal		
	①	②	③
RESUME/ACCEL	○	○	○
SET/COAST	○	○	○
CANCEL	○	→	○
	○	→	○

OK


Check harness for open or short between ASCD steering switch and ASCD control unit.

AUTOMATIC SPEED CONTROL DEVICE (ASCD)

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 6

(VEHICLE SPEED SENSOR CHECK)

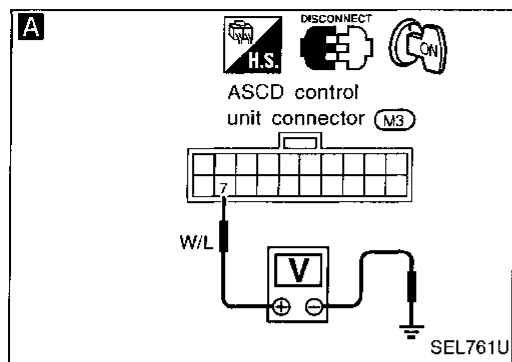

A

CHECK VEHICLE SPEED SENSOR CIRCUIT.

1. Apply wheel chocks and jack up drive wheel.
2. Disconnect control unit connector.
3. Connect voltmeter between control unit terminal ⑦ and ground.
4. Slowly turn drive wheel.
5. Check deflection of voltmeter pointer.

Refer to wiring diagram in EL-157.

OK → Vehicle speed sensor is OK.

NG


Does speedometer operate normally?

No → Check speedometer and vehicle speed sensor circuit. Refer to EL-87.

Yes

Check harness for open or short between ASCD control unit terminal ⑦ and combination meter terminal ⑩.

GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

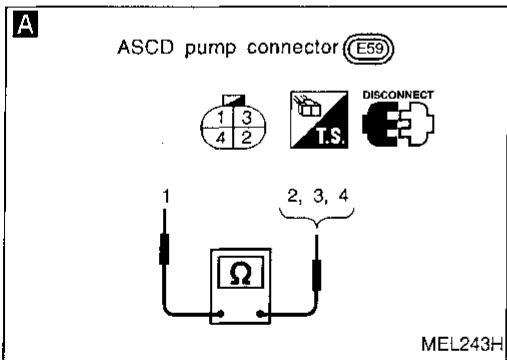

DIAGNOSTIC PROCEDURE 7

(ASCD PUMP CIRCUIT CHECK)

A

- #### CHECK ASCD PUMP.
1. Disconnect ASCD pump connector.
 2. Measure resistance between ASCD pump terminals ① and ②, ③, ④.

Terminals	Resistance [Ω]	
①	②	Approx. 3
	③	Approx. 65
	④	Approx. 65

Refer to wiring diagram in EL-156.

NG → Replace ASCD pump.

OK




Check harness for open or short between ASCD pump and ASCD control unit.

AUTOMATIC SPEED CONTROL DEVICE (ASCD)

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 8

(ASCD ACTUATOR/PUMP CHECK)

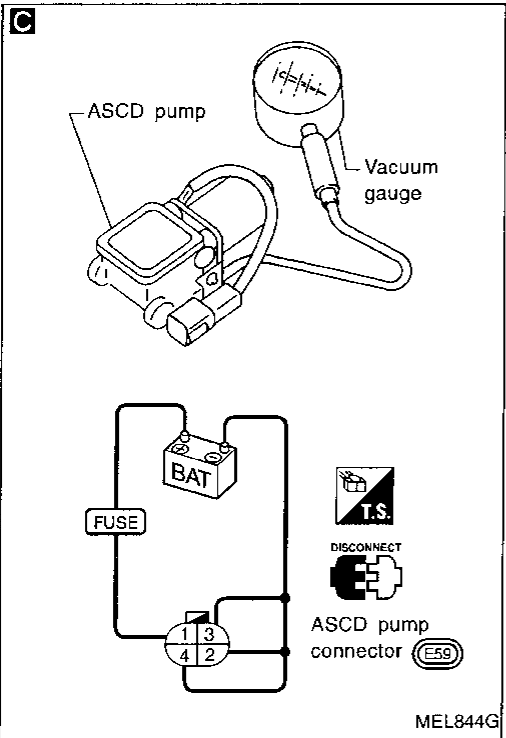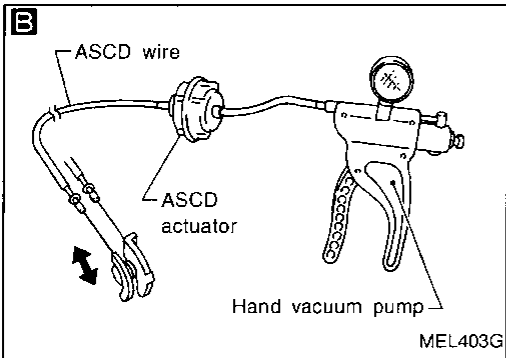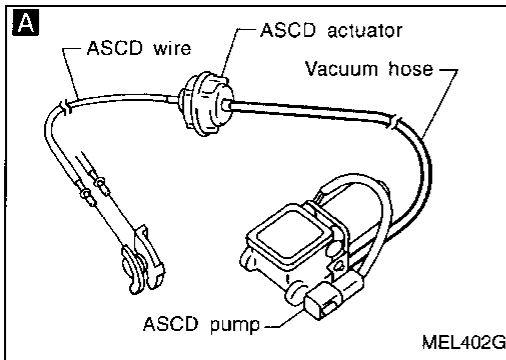

A
CHECK VACUUM HOSE.
 Check vacuum hose (between ASCD actuator and ASCD pump) for breakage, cracks or fracture.

NG → Repair or replace hose.

OK

CHECK ASCD WIRE.
 Check wire for improper installation, rust formation or breaks.

NG → Repair or replace wire. Refer to "ASCD WIRE ADJUSTMENT" (EL-168).

OK

B
CHECK ASCD ACTUATOR.
 1. Disconnect vacuum hose from ASCD actuator.
 2. Apply -40 kPa (-0.41 kg/cm², -5.8 psi) vacuum to ASCD actuator with hand vacuum pump.
ASCD wire should move to pull throttle drum.
 3. Wait 10 seconds and check for decrease in vacuum pressure.
Vacuum pressure decrease:
Less than 2.7 kPa (0.028 kg/cm², 0.39 psi)

NG → Replace ASCD actuator.

OK

C
CHECK ASCD PUMP.
 1. Disconnect vacuum hose from ASCD pump and ASCD pump connector.
 2. If necessary remove ASCD pump.
 3. Connect vacuum gauge to ASCD pump.
 4. Apply 12V direct current to ASCD pump and check operation.

NG → Replace ASCD pump.

	12V direct current supply terminals		Operation
	⊕	⊖	
Air valve	①	③	Close
Release valve		④	Close
Vacuum motor		②	Operate

A vacuum pressure of at least -40 kPa (-0.41 kg/cm², -5.8 psi) should be generated.

OK

INSPECTION END


AUTOMATIC SPEED CONTROL DEVICE (ASCD)

Trouble Diagnoses (Cont'd)

ELECTRICAL COMPONENT CHECK

ASCD main switch


Check continuity between terminals by pushing switch to each position.

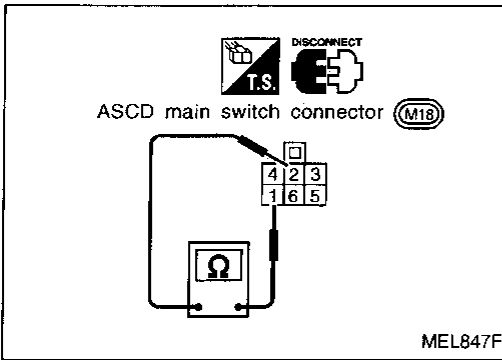

Switch position	Terminals					
	1	2	3	4	5	6
ON	○	○	○	○	ILL	
N		○	○	○	○—(m)—○	
OFF						

GI
MA
EM
LC

ASCD brake switch and stop lamp switch

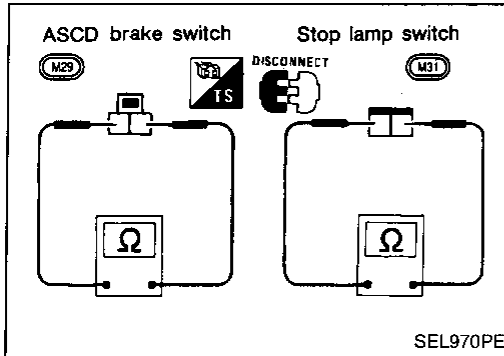


Condition	Continuity	
	ASCD brake switch	Stop lamp switch
When brake pedal is depressed	No	Yes
When brake pedal is released	Yes	No

EC
FE
AT

Check each switch after adjusting brake pedal — refer to BR section.

TF

Inhibitor switch

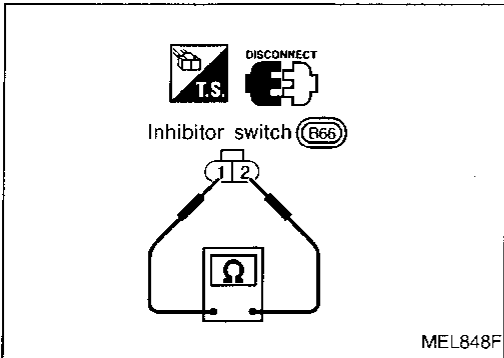

Selector lever position	Continuity
	Between terminals ① and ②
"P"	Yes
"N"	Yes
Except "P" and "N"	No

PD
FA
RA

BR

ST

RS


BT

HA

EL

IDX

ASCD Wire Adjustment

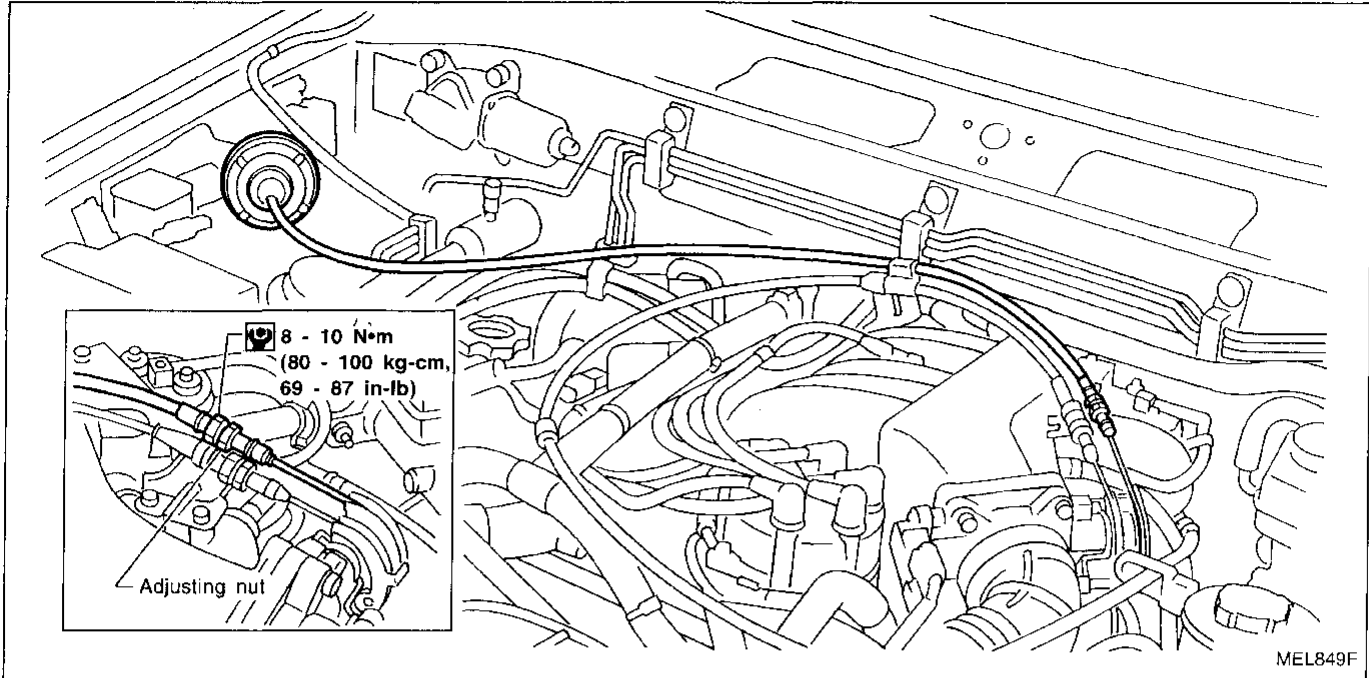

CAUTION:

- Be careful not to twist ASCD wire when removing it.
- Do not tense ASCD wire excessively during adjustment.

Adjust the tension of ASCD wire in the following manner.

- (1) Loosen lock nut and adjusting nut.
- (2) Make sure that accelerator wire is properly adjusted. Refer to FE section ("ACCELERATOR CONTROL SYSTEM").
- (3) Tighten adjusting nut just until throttle drum starts to move.
- (4) Loosen adjusting nut again 1/2 to 1 turn.
- (5) Tighten lock nut.

System Description

Power is supplied at all times

- from 40A fusible link (letter **F1**, located in the fuse and fusible link box)
- to circuit breaker terminal **(1)**
- through circuit breaker terminal **(2)**
- to power window relay terminal **(3)**.

With ignition switch in ON or START position, power is supplied

- through 7.5A fuse [No. **F12**, located in the fuse block (J/B)]
- to power window relay terminal **(2)**.

Ground is supplied to power window relay terminal **(1)**

- through body grounds **(M4)** and **(M56)**.

The power window relay is energized and power is supplied

- through power window relay terminal **(5)**
- to power window main switch terminal **(1)**,
- to power window sub switch terminal **(5)**.

MANUAL OPERATION

Front door LH

Ground is supplied

- to power window main switch terminal **(3)**
- through body grounds **(M4)** and **(M77)**.

WINDOW UP

When the front LH switch in the power window main switch is pressed in the up position, power is supplied

- to front power window regulator LH terminal **(2)**
- through power window main switch terminal **(9)**.

Ground is supplied

- to front power window regulator LH terminal **(1)**
- through power window main switch terminal **(8)**.

Then, the motor raises the window until the switch is released.

WINDOW DOWN

When the LH switch in the power window main switch is pressed in the down position, power is supplied

- to front power window regulator LH terminal **(1)**
- through power window main switch terminal **(8)**.

Ground is supplied

- to front power window regulator LH terminal **(2)**
- through power window main switch terminal **(9)**.

Then, the motor lowers the window until the switch is released.

Front door RH

Ground is supplied

- to power window main switch terminal **(3)**
- through body grounds **(M4)** and **(M77)**.

NOTE:

Numbers in parentheses are terminal numbers, when power window switch is pressed in the UP and DOWN positions respectively.

MAIN SWITCH OPERATION

Power is supplied

- through power window main switch **(6)**, **(5)**
- to front power window sub-switch **(3)**, **(4)**.

The subsequent operation is the same as the sub-switch operation.

SUB-SWITCH OPERATION

Power is supplied

- through front power window sub-switch **(2)**, **(1)**
- to front power window regulator RH **(2)**, **(1)**.

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

POWER WINDOW

System Description (Cont'd)

Ground is supplied

- to front power window regulator RH (①, ②)
- through front power window sub-switch (①, ②)
- to front power window sub-switch (③, ④)
- through power window main switch (⑥, ⑤).

Then, the motor raises or lowers the window until the switch is released.

Rear door

Rear door windows will raise and lower in the same manner as front door RH window.

AUTO OPERATION

The power window AUTO feature enables the driver to lower the driver's window without holding the window switch in the down position.

The AUTO feature only operates on the driver's window downward movement.


POWER WINDOW LOCK

The power window lock is designed to lock operation of all windows except for driver's door window.

When the lock switch is pressed to lock position, ground of the sub-switches in the power window main switch is disconnected. This prevents the power window motors from operating.

POWER WINDOW

Schematic

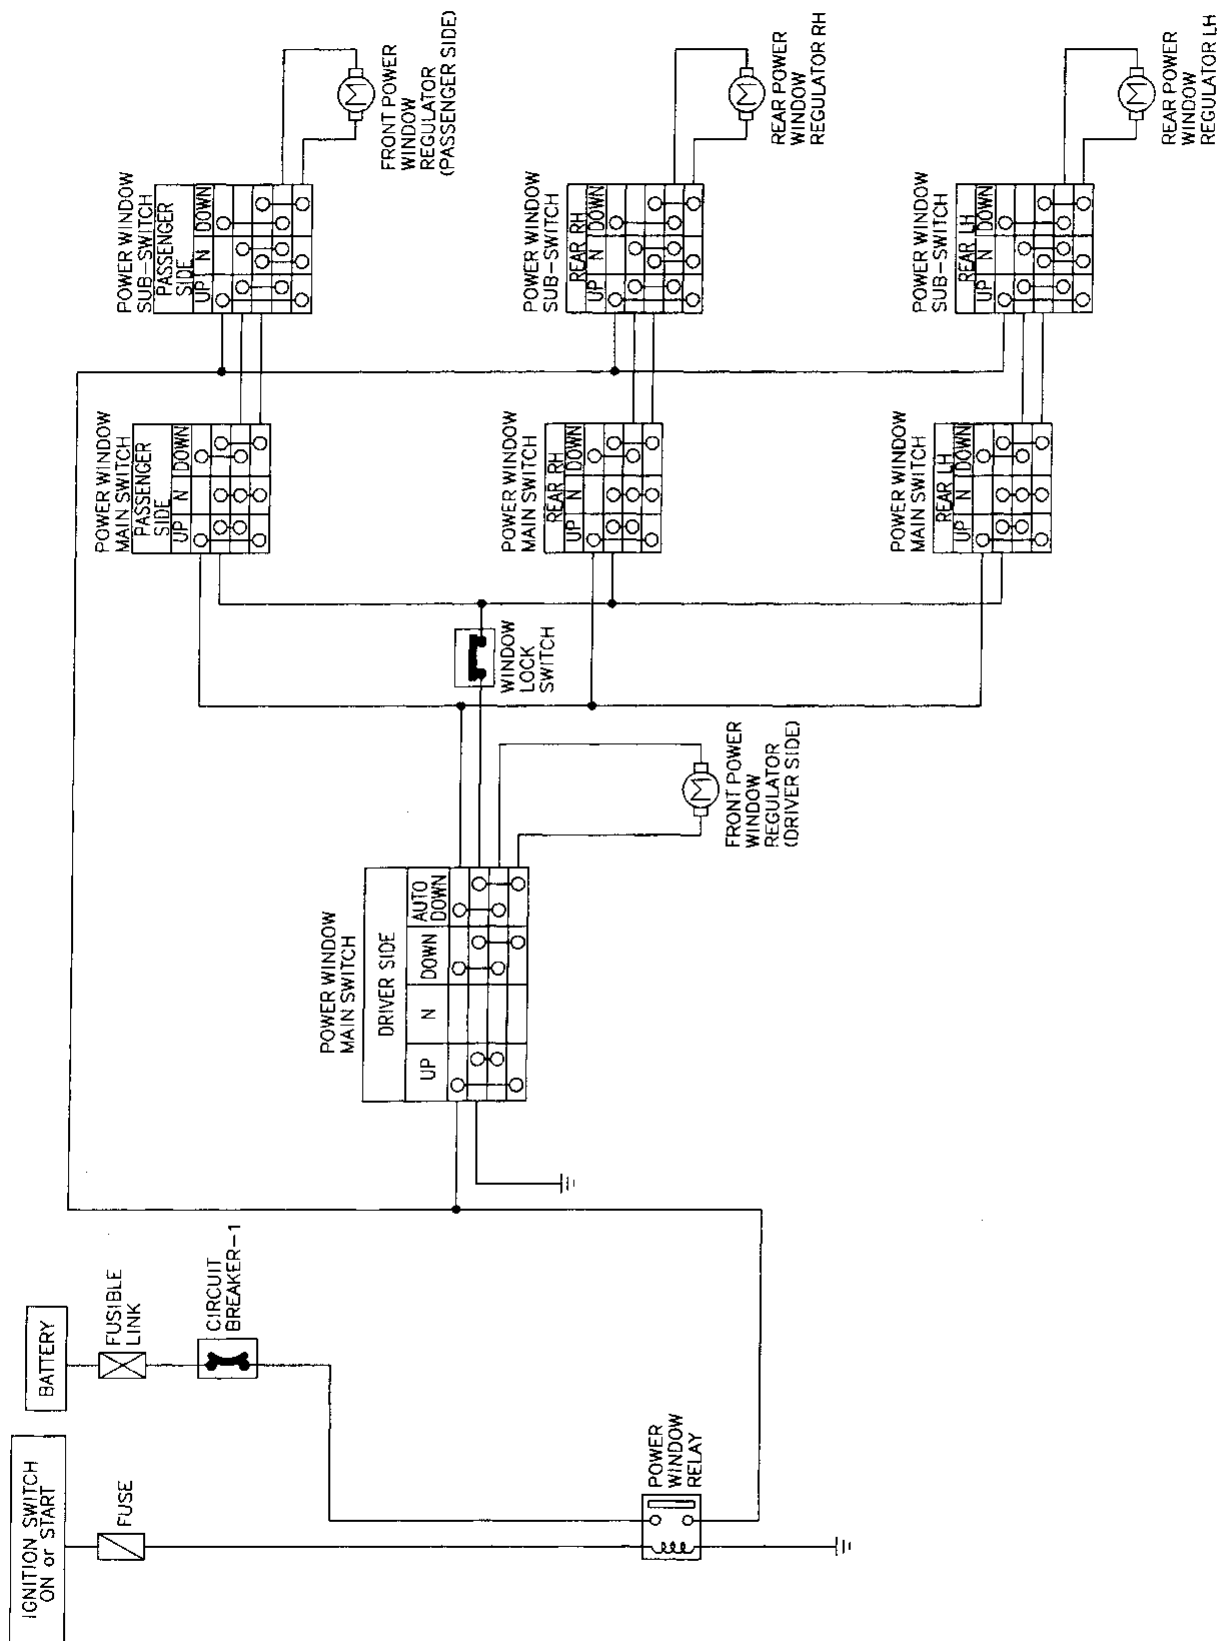

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA



EL

IDX

POWER WINDOW

Wiring Diagram — WINDOW —

EL-WINDOW-01

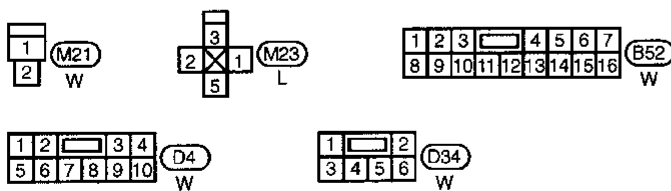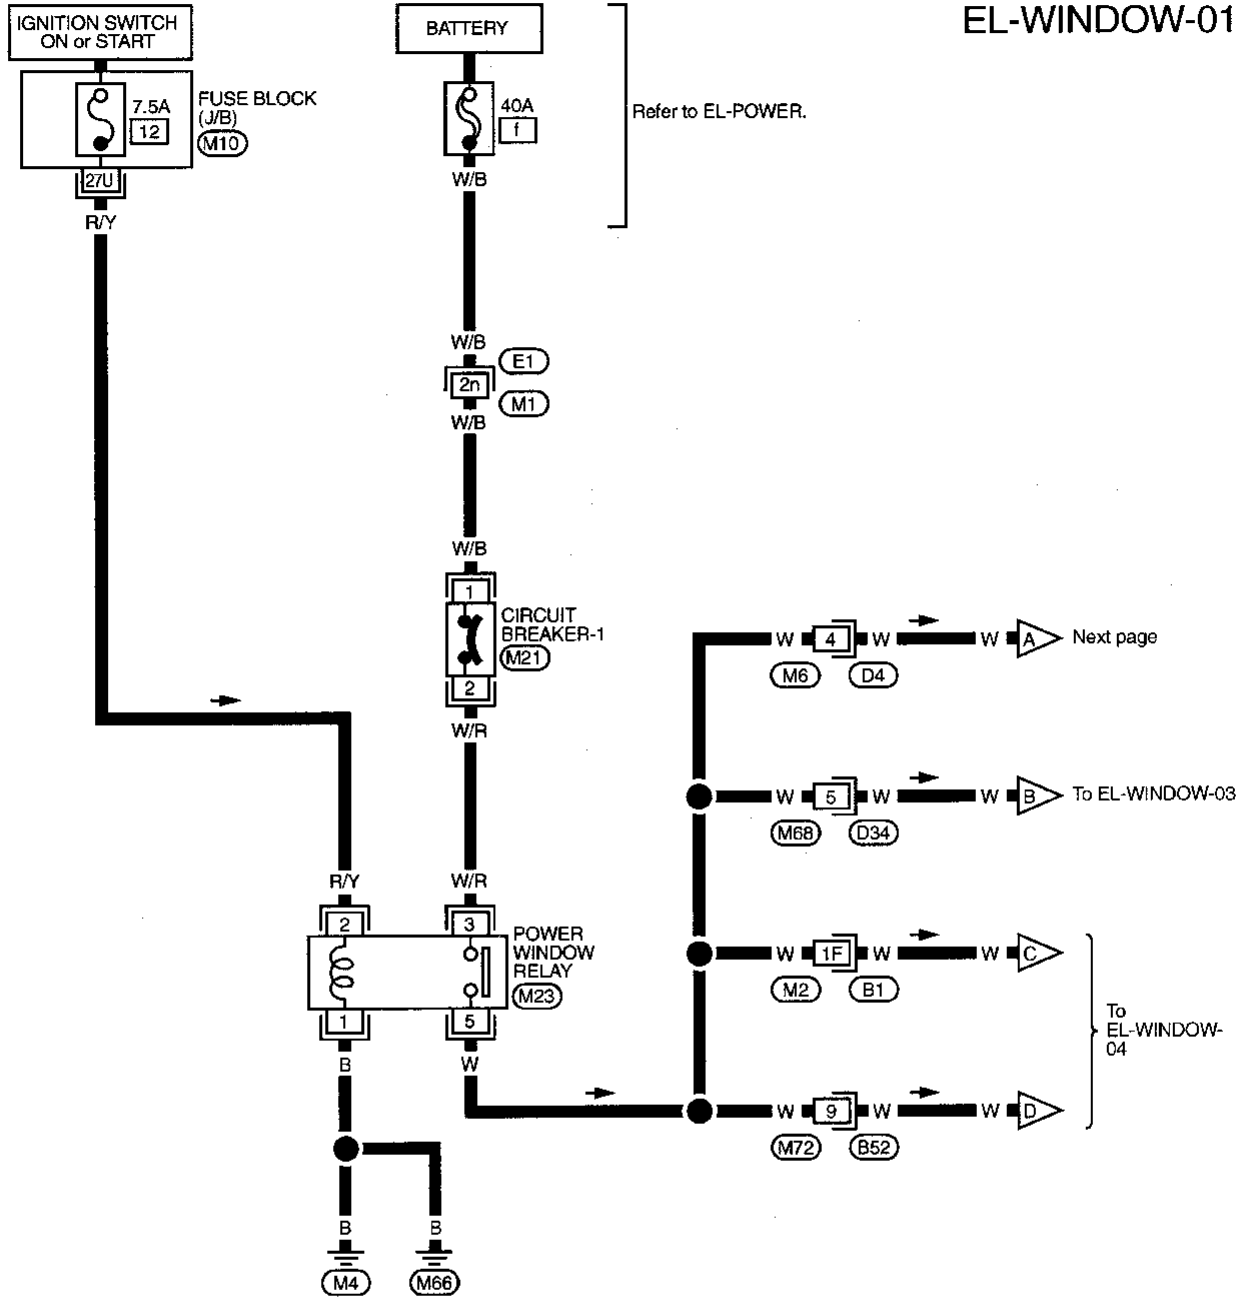

Refer to last page (Foldout page).





- (E1), (M1)
- (M2), (B1)
- (M10)

POWER WINDOW

Wiring Diagram — WINDOW — (Cont'd)

EL-WINDOW-02

Preceding page






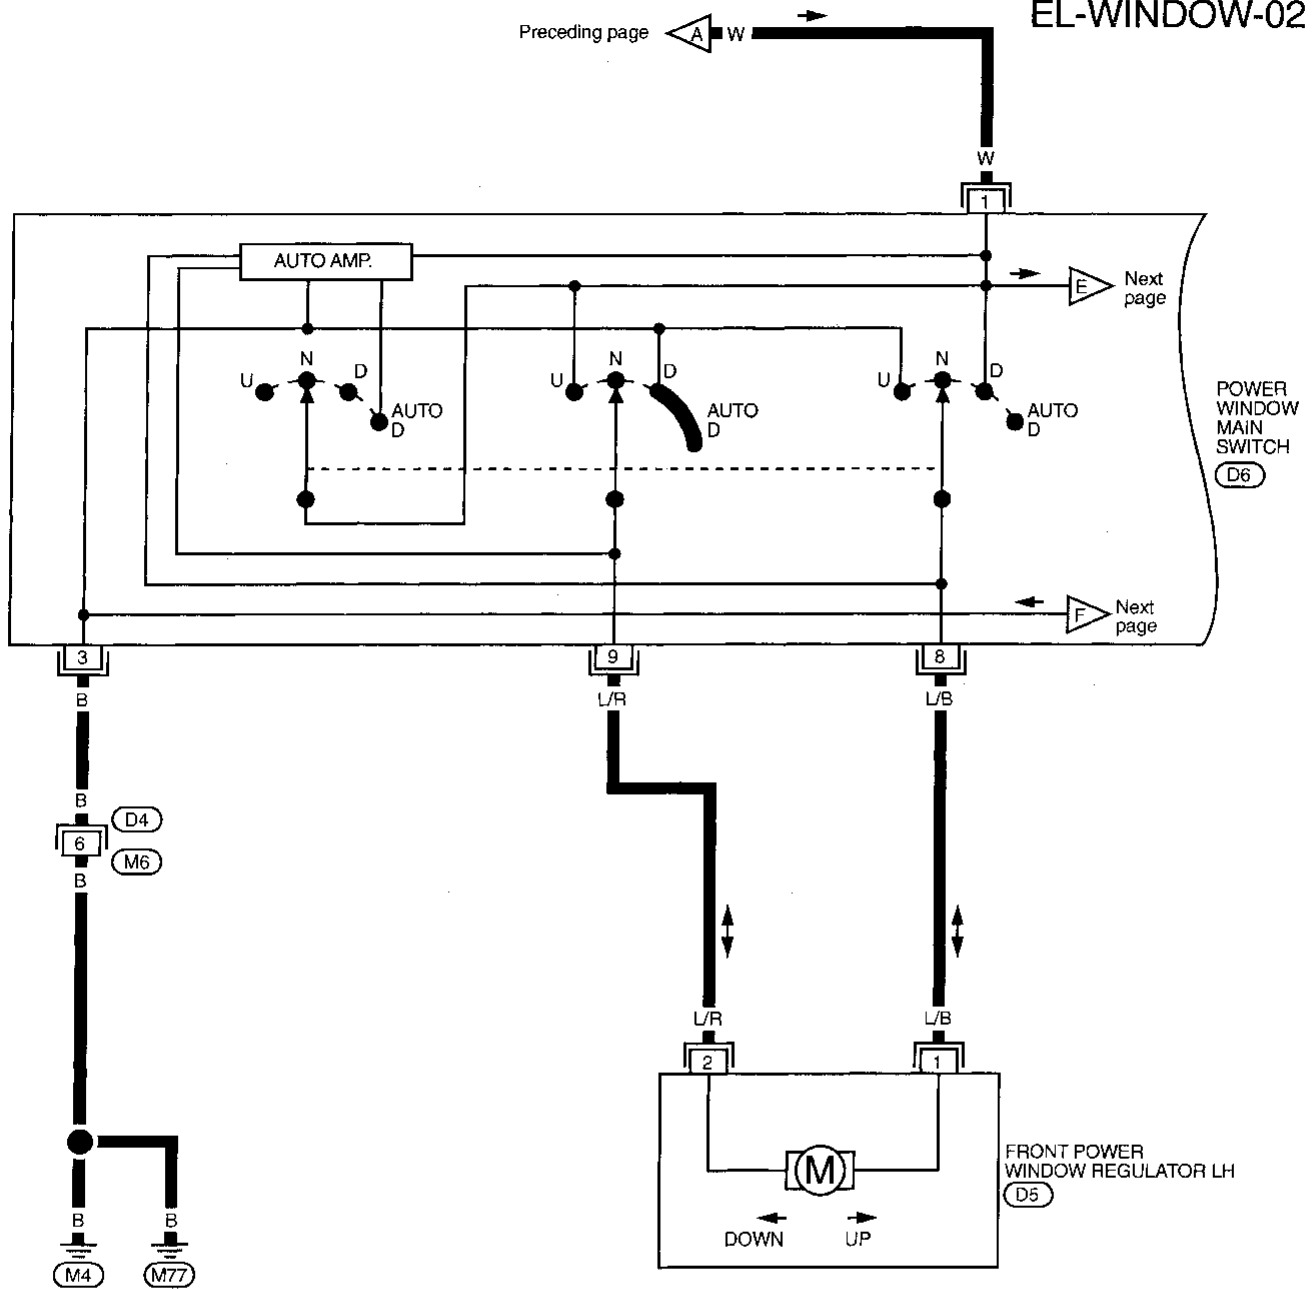


GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

POWER WINDOW

Wiring Diagram — WINDOW — (Cont'd)




EL-WINDOW-03

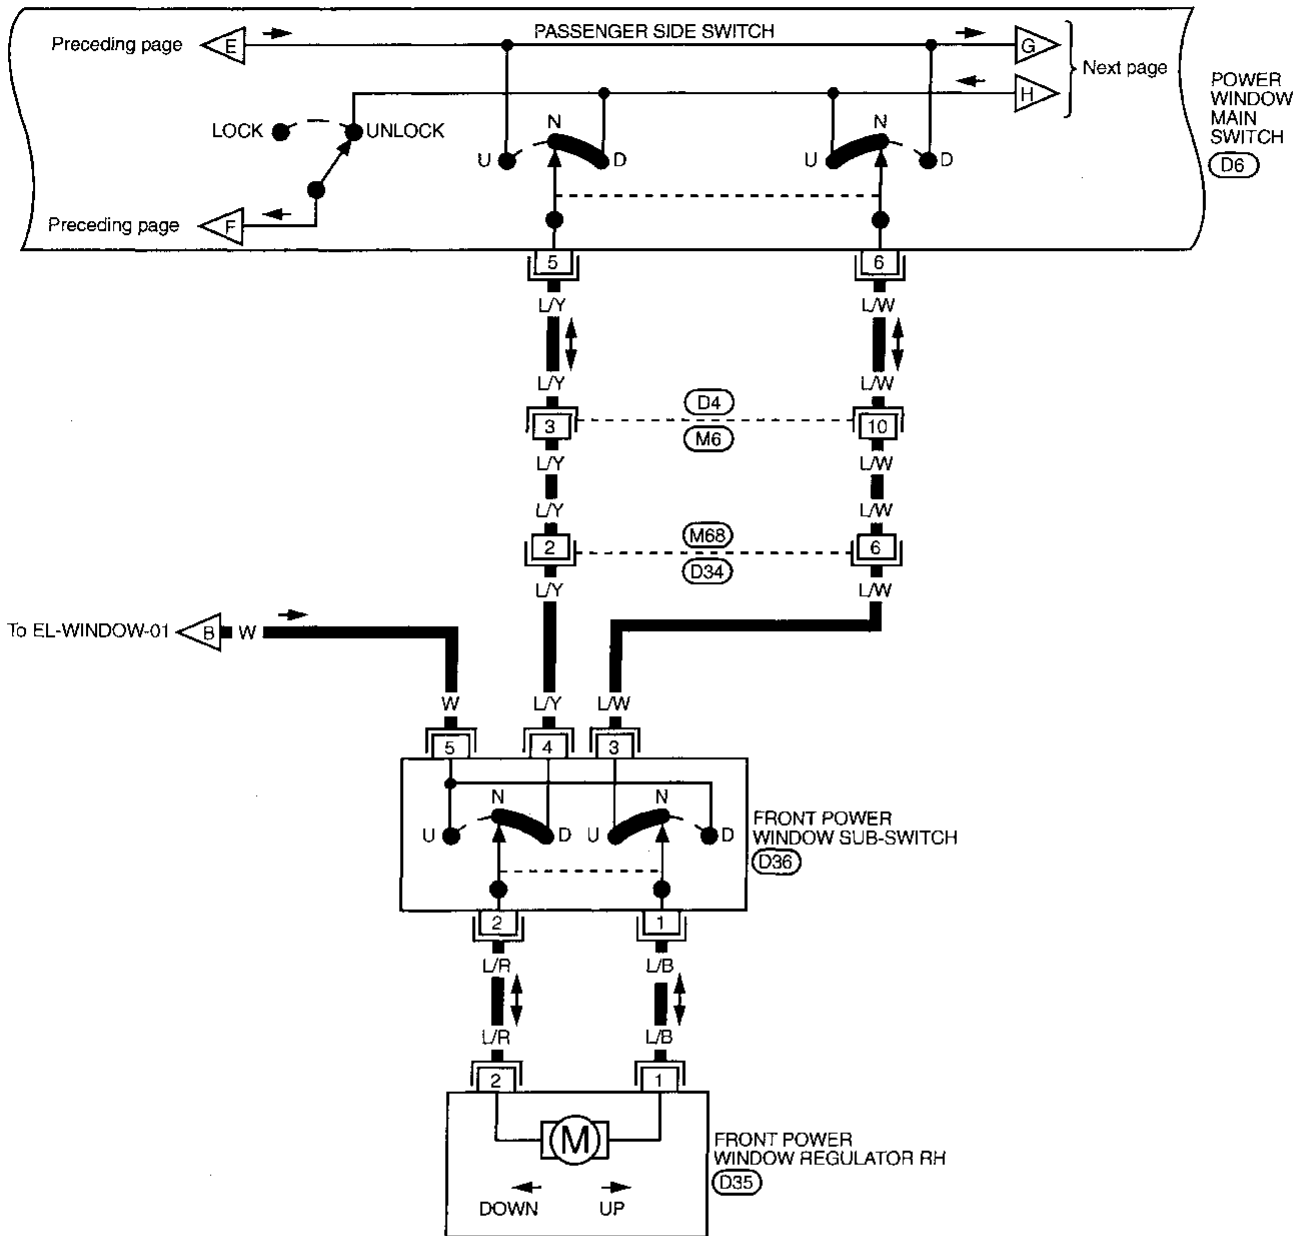




POWER WINDOW

Wiring Diagram — WINDOW — (Cont'd)

EL-WINDOW-04

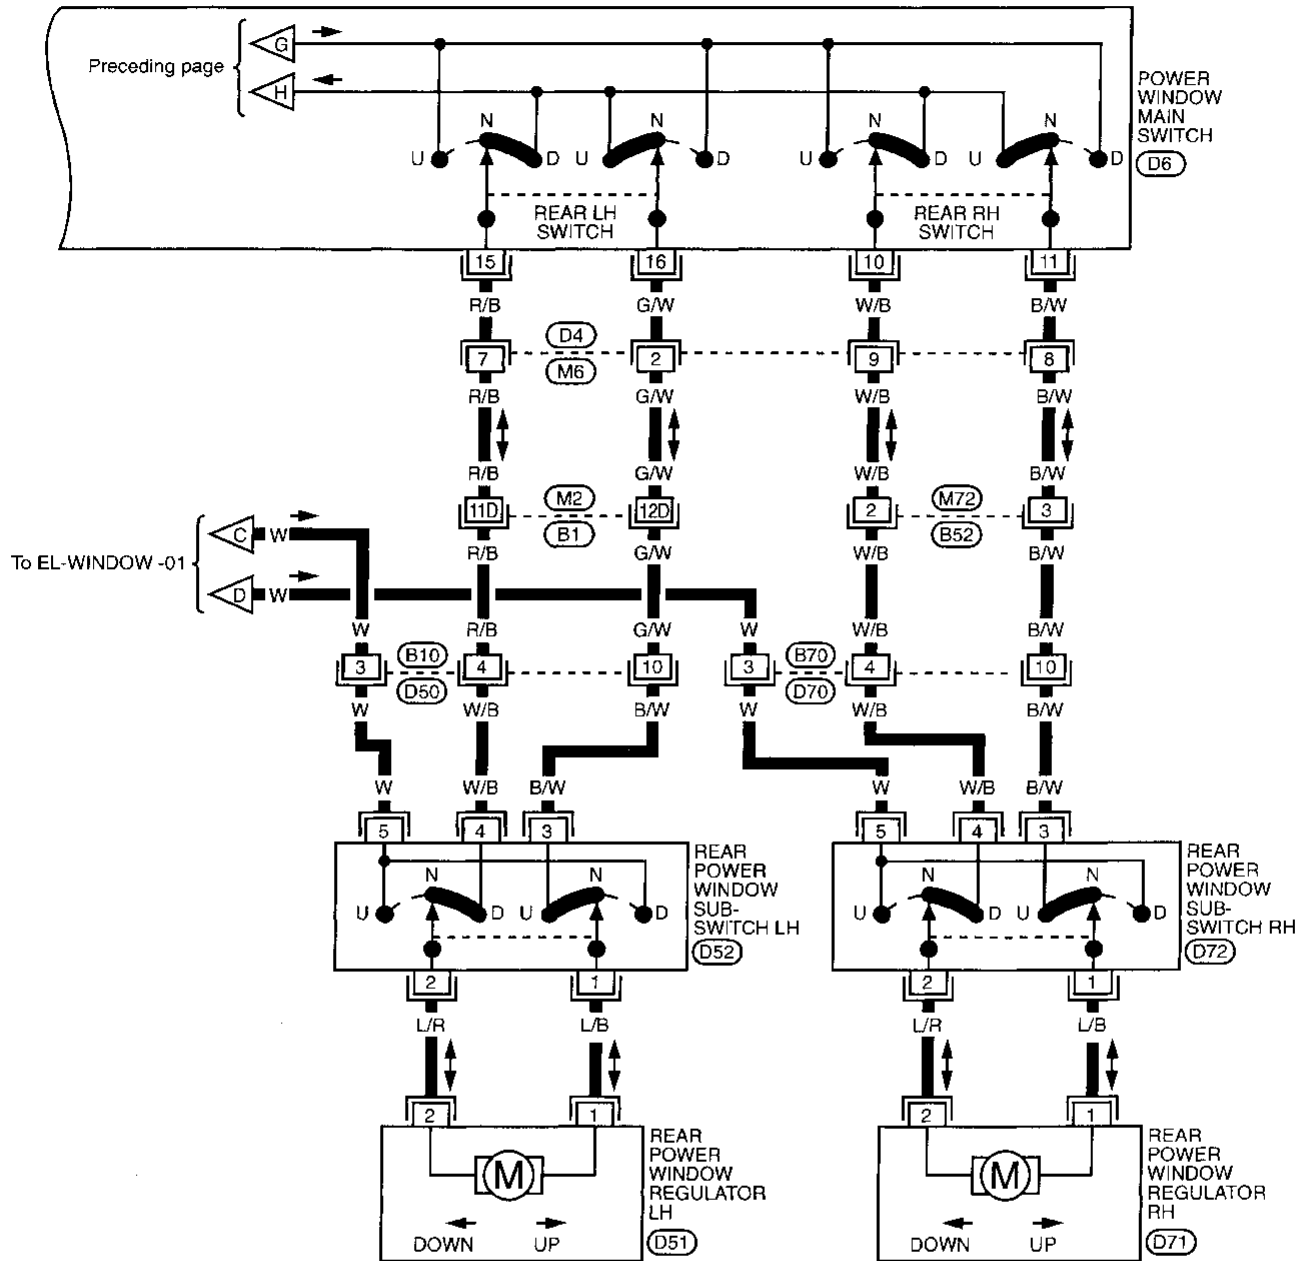

Refer to last page (Foldout page).
(M2), (B1)




GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

POWER WINDOW

Trouble Diagnoses

Symptom	Possible cause	Repair order
None of the power windows can be operated using any switch.	<ol style="list-style-type: none"> 1. 7.5A fuse, 40A fusible link and (M21) circuit breaker 2. Grounds (M4) and (M77) 3. Power window relay 4. Open/short in power window main switch circuit 	<ol style="list-style-type: none"> 1. Check 7.5A fuse (No. 12), located in fuse block [J/B]), 40A fusible link (letter f), located in fuse and fusible link box) and (M21) circuit breaker. Turn ignition switch "ON" and verify battery positive voltage is present at terminal ① of power window main switch and terminal ⑤ of sub-switch. 2. Check grounds (M4) and (M77). 3. Check power window relay. 4. Check W wire between power window relay and power window main switch for open/short circuit.
Driver side power window cannot be operated but other windows can be operated.	<ol style="list-style-type: none"> 1. Driver side power window regulator circuit 2. Driver side power window regulator 	<ol style="list-style-type: none"> 1. Check harness between power window main switch and power window regulator for open or short circuit. 2. Check driver side power window regulator.
Passenger power window cannot be operated.	<ol style="list-style-type: none"> 1. Power window sub-switches 2. Passenger side power window regulators 3. Power window main switch 4. Power window circuit 	<ol style="list-style-type: none"> 1. Check power window sub-switch. 2. Check passenger side power window regulator. 3. Check power window main switch. 4-1. Check harnesses between power window main switch and power window sub-switch for open/short circuit. 4-2. Check harnesses between power window sub-switch and power window regulator for open/short circuit.
Passenger power window cannot be operated using power window main switch but can be operated by power window sub-switch.	<ol style="list-style-type: none"> 1. Power window main switch 	<ol style="list-style-type: none"> 1. Check power window main switch.
Driver side power window auto function cannot be operated using power window main switch.	<ol style="list-style-type: none"> 1. Power window main switch 	<ol style="list-style-type: none"> 1. Check power window main switch.

Component Parts and Harness Connector Location

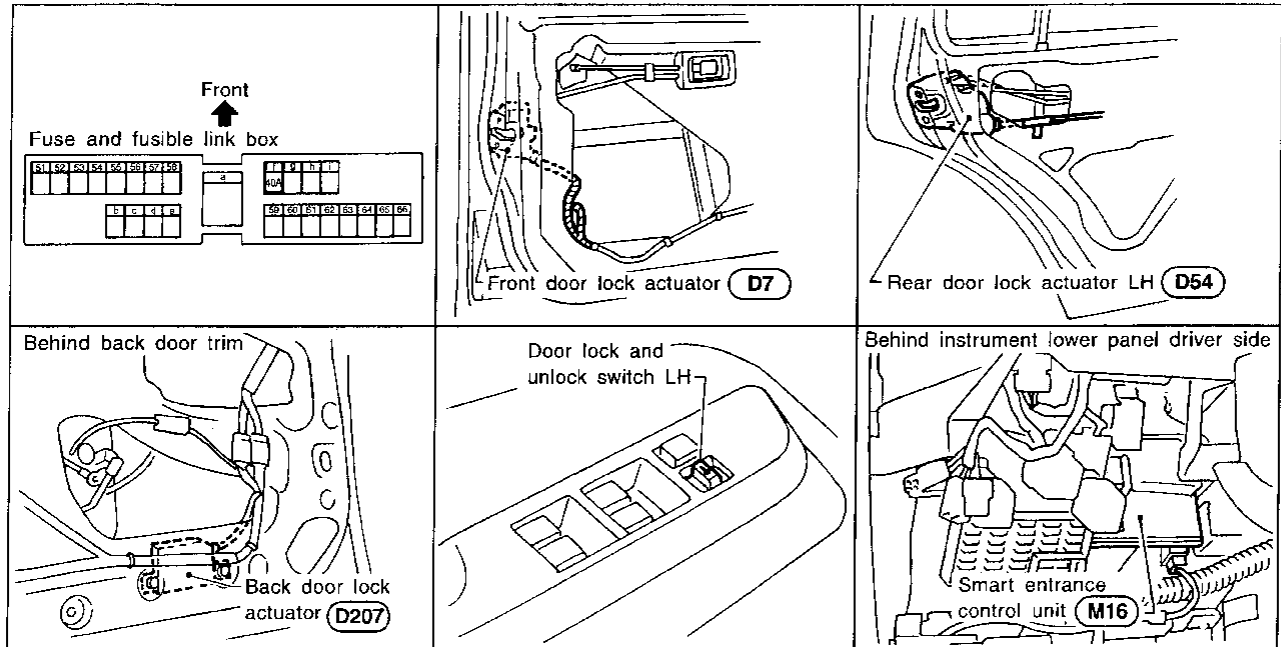

MEL078H PD

System Description

Power is supplied at all times

- through 40A fusible link (letter **1**, located in the fuse and fusible link box)
- to circuit breaker terminal **1**
- through circuit breaker terminal **2**
- to smart entrance control unit terminal **1**.

Ground is supplied to smart entrance control unit terminal **10** through body grounds **M4** and **M77**.

INPUT

When the door lock & unlock switch LH is in LOCKED position, ground signal is supplied

- to smart entrance control unit terminal **18**
- through door lock & unlock switch LH terminal **7**
- to door lock & unlock switch LH terminal **3**
- through body grounds **M4** and **M77**.

When the door lock & unlock switch RH is in LOCKED position, ground signal is supplied

- to smart entrance control unit terminal **18**
- through door lock & unlock switch RH terminal **3**
- to door lock & unlock switch RH terminal **2**
- through body grounds **M4** and **M66**.

When the door lock & unlock switch LH is in UNLOCKED position, ground signal is supplied

- to smart entrance control unit terminal **19**
- through door lock & unlock switch LH terminal **14**
- to door lock & unlock switch LH terminal **3**
- through body grounds **M4** and **M77**.

When the door lock & unlock switch RH is in UNLOCKED position, ground signal is supplied

- to smart entrance control unit terminal **19**
- through door lock & unlock switch RH terminal **1**
- to door lock & unlock switch RH terminal **2**
- through body grounds **M4** and **M66**.

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

POWER DOOR LOCK

System Description (Cont'd)

OUTPUT

Unlock

Ground is supplied

- to front door lock actuator LH terminal ③
- to front door lock actuator RH terminal ③
- to rear door lock actuator LH terminal ③
- to rear door lock actuator RH terminal ③
- to back door lock actuator terminal ②
- through smart entrance control unit terminal ④ .

FRONT DOOR LH

Power is supplied

- to front door lock actuator LH terminal ①
- through smart entrance control unit terminal ③ .

FRONT DOOR RH

Power is supplied

- to front door lock actuator RH terminal ① ,
- through smart entrance control unit terminal ② .

REAR DOOR LH

Power is supplied

- to rear door lock actuator LH terminal ①
- through smart entrance control unit terminal ② .

REAR DOOR RH

Power is supplied

- to rear door lock actuator RH terminal ①
- through smart entrance control unit terminal ② .

BACK DOOR

Power is supplied

- to back door lock actuator terminal ①
- through smart entrance control unit terminal ② .

Then, the doors are unlocked.

Lock

Ground is supplied

- to front door lock actuator LH terminal ①
- through smart entrance control unit terminal ③ , and
- to front door lock actuator RH terminal ①
- to rear door lock actuator LH terminal ①
- to rear door lock actuator RH terminal ①
- to back door lock actuator ①
- through smart entrance control unit terminal ② .


Power is supplied

- to front door lock actuator LH terminal ③ ,
- to front door lock actuator RH terminal ③ ,
- to rear door lock actuator LH terminal ③
- to rear door lock actuator RH terminal ③
- to back door lock terminal ②
- through smart entrance control unit terminal ④ .

Then, the doors are locked.

POWER DOOR LOCK

Schematic

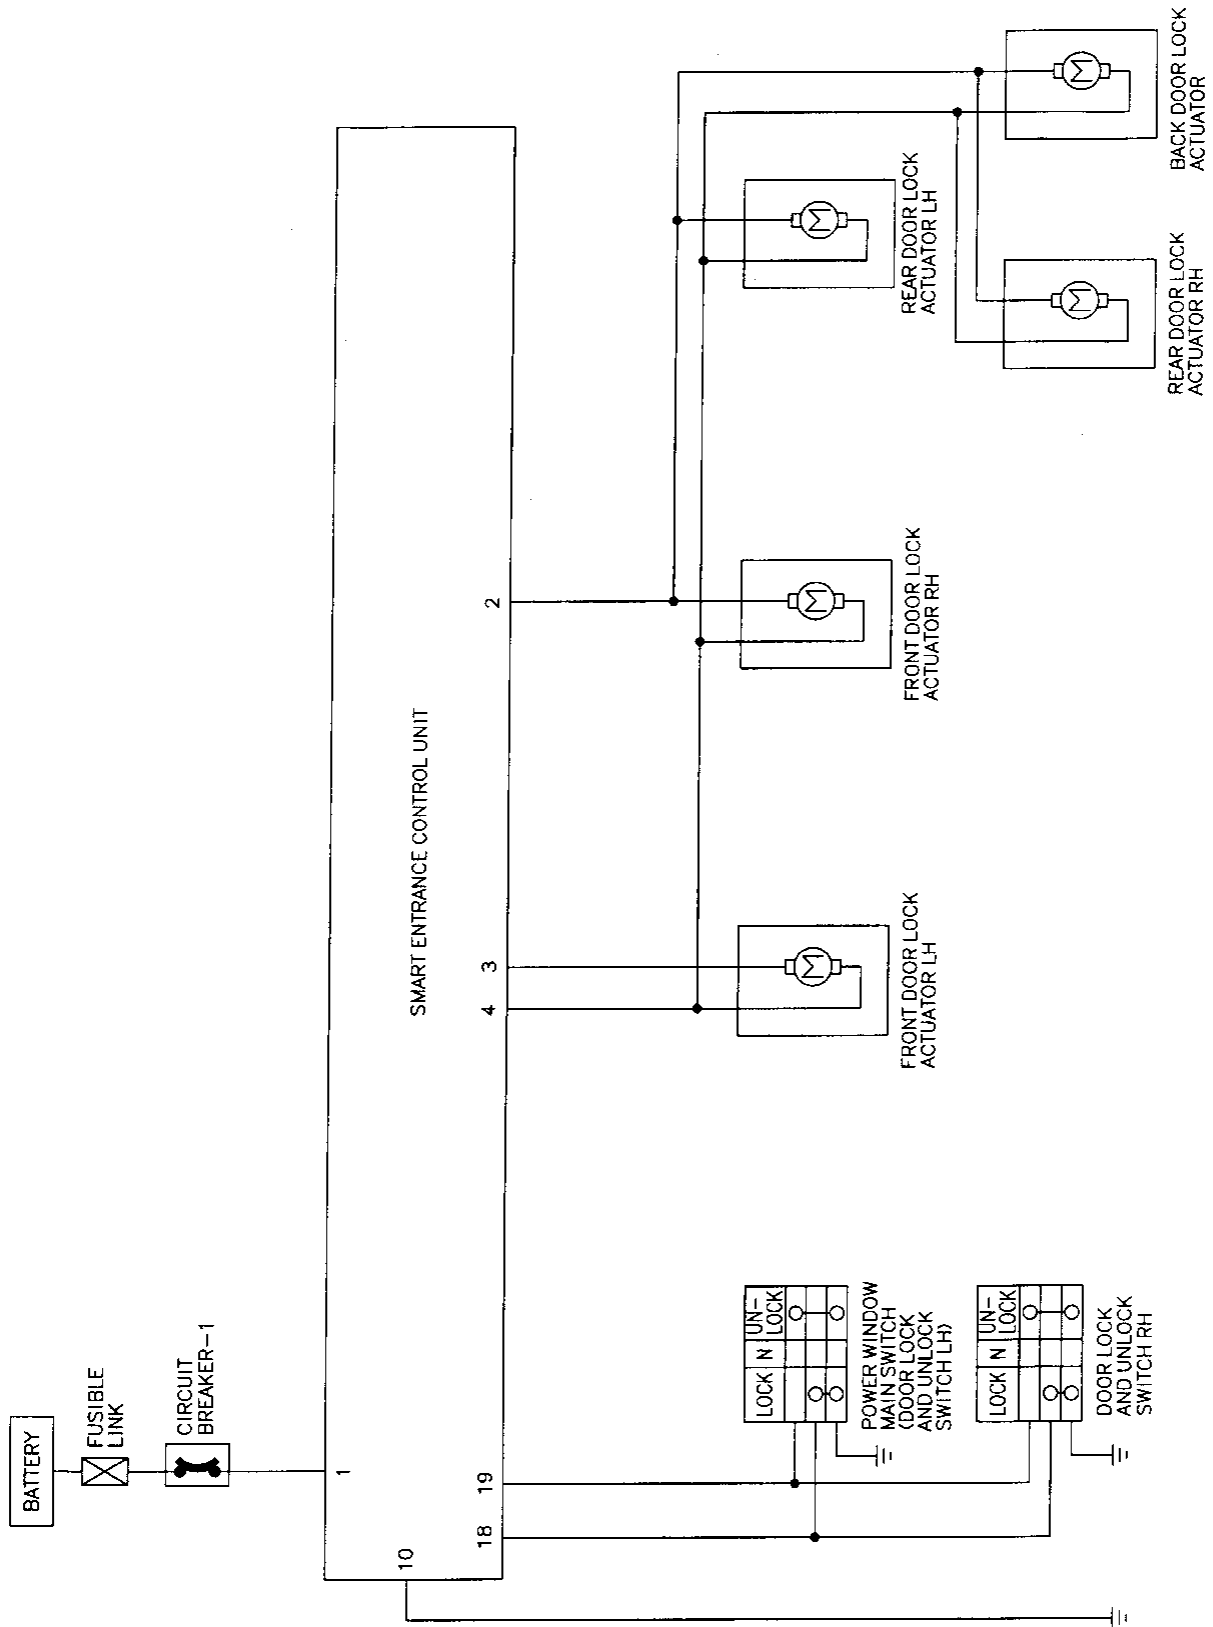

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA





EL

DX

POWER DOOR LOCK

Wiring Diagram — D/LOCK —

EL-D/LOCK-01

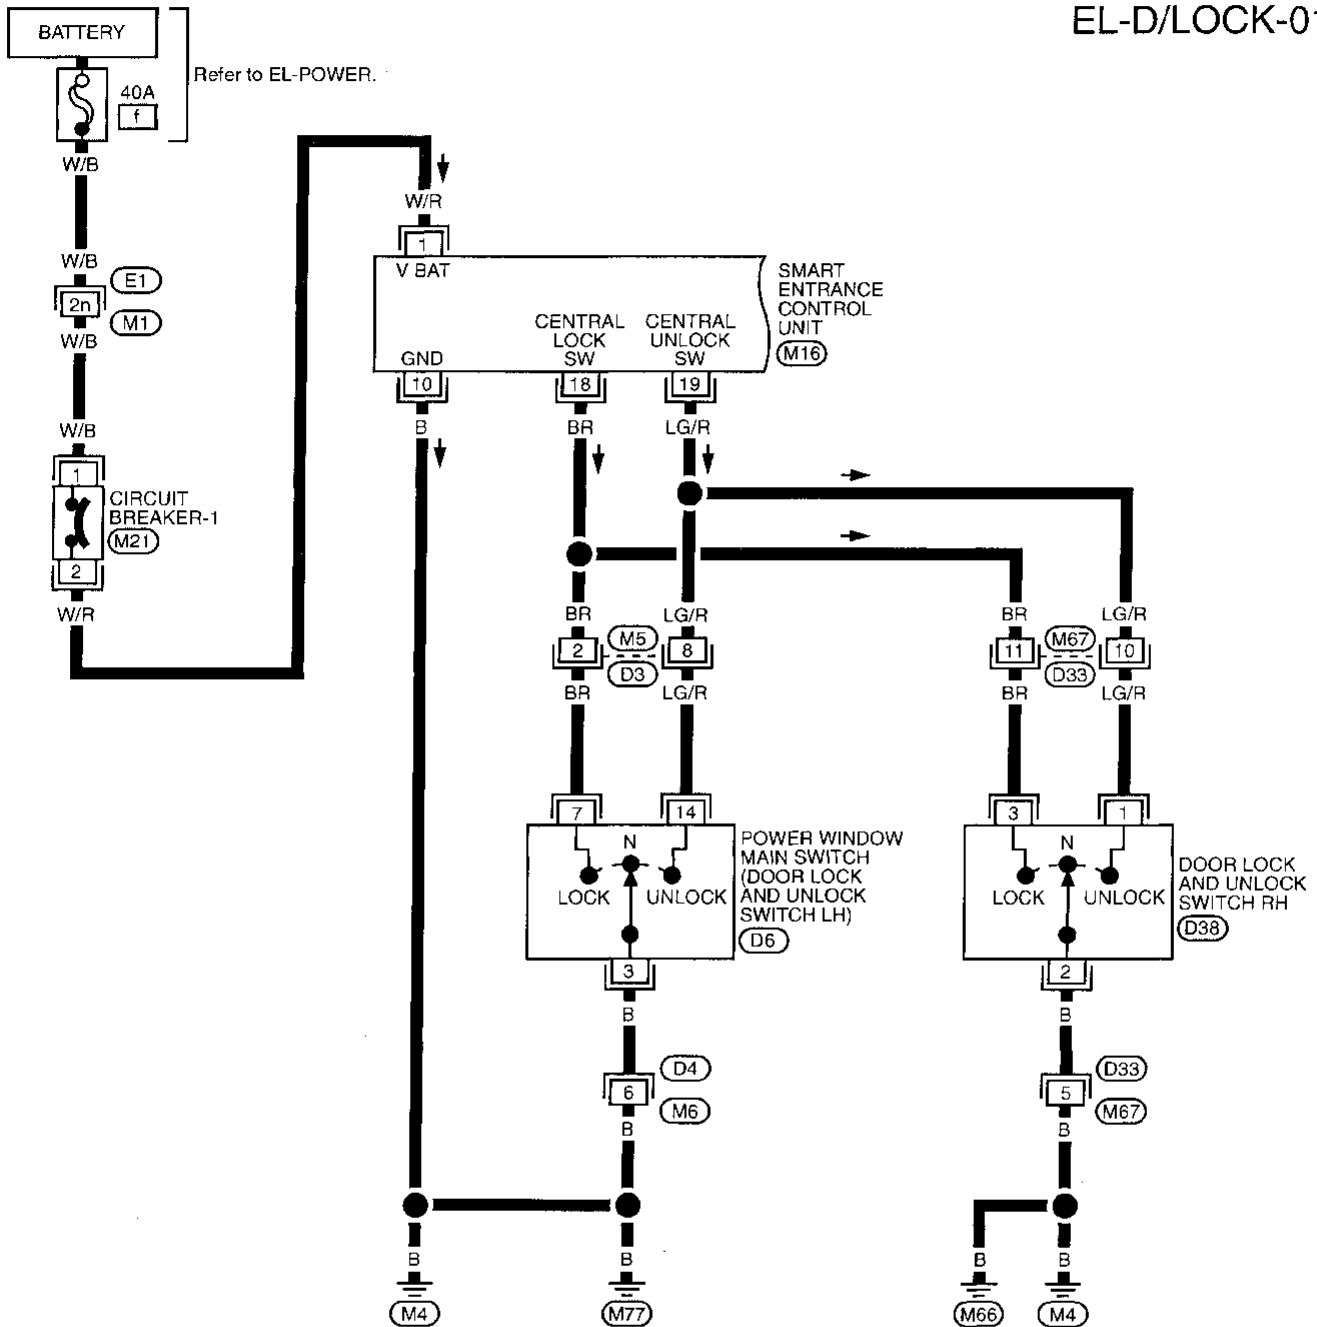


Refer to last page (Foldout page).

(E1), (M1)


POWER DOOR LOCK

Wiring Diagram — D/LOCK — (Cont'd)

EL-D/LOCK-02

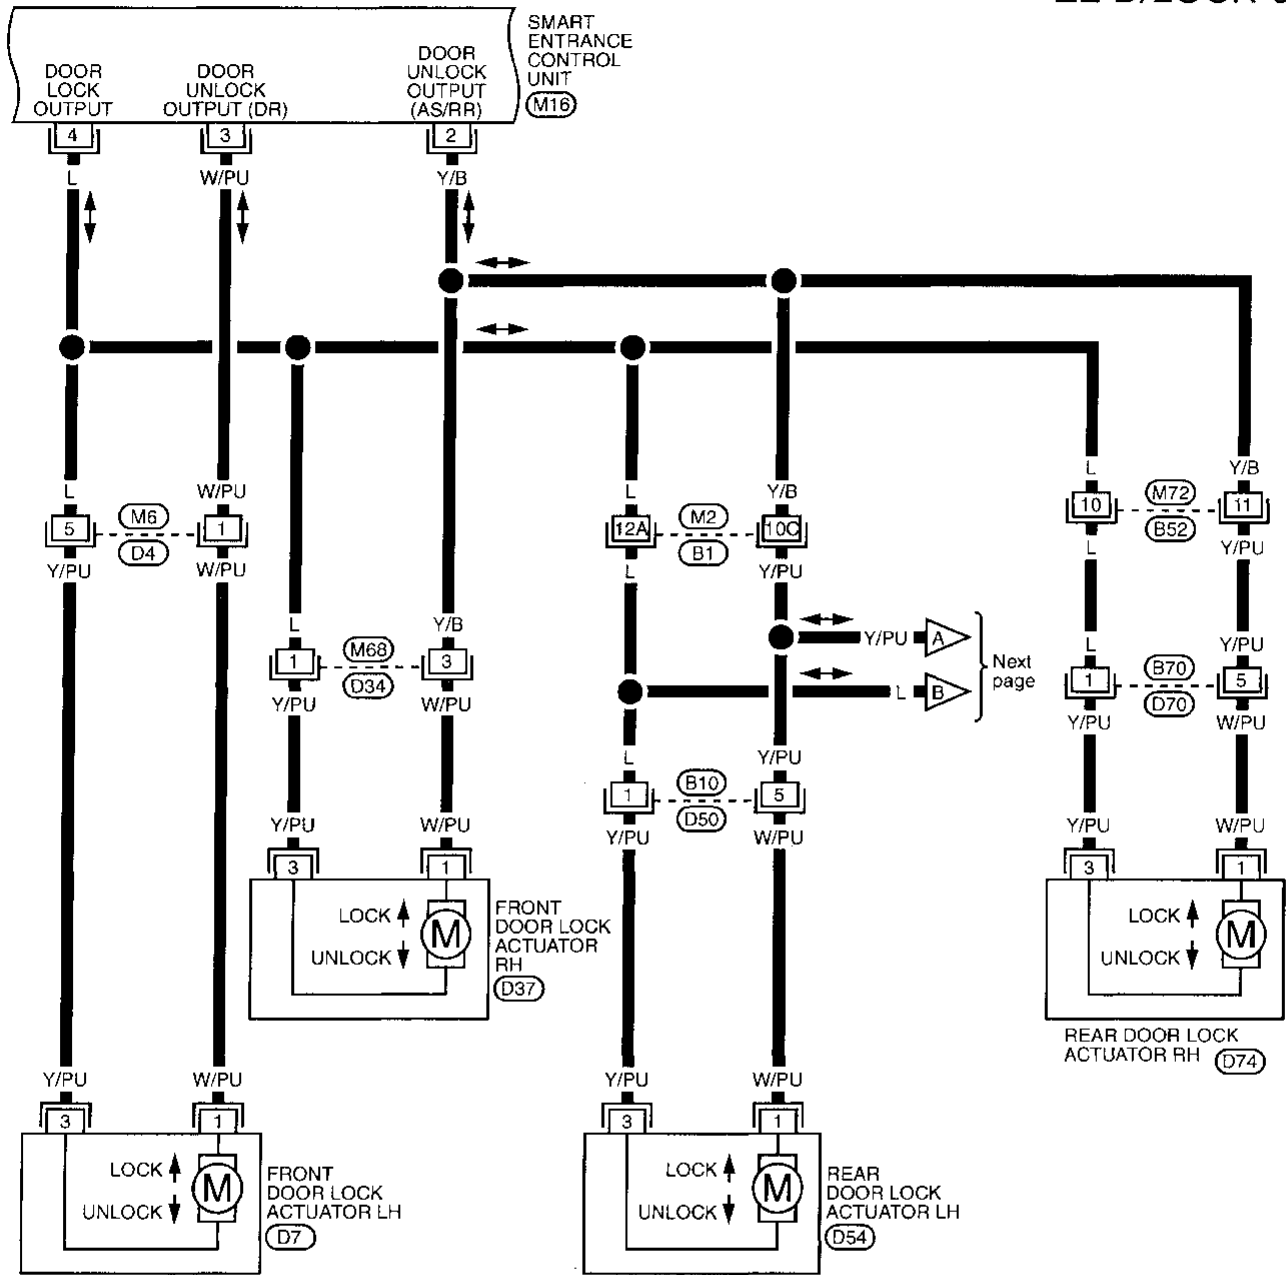

Refer to last page (Foldout page).
 (M2) , (B1)




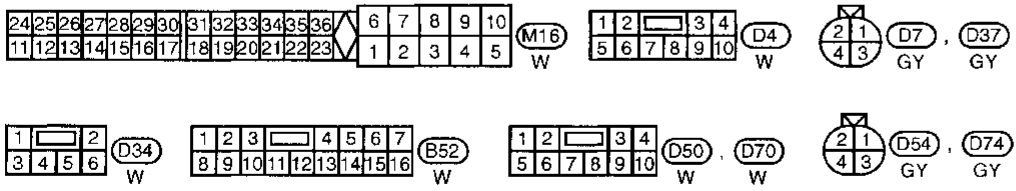


GI
 MA
 EM
 LC
 EC
 FE
 AT
 TF
 PD
 FA
 RA
 BR
 ST
 RS
 BT
 HA
EL
 IDX

POWER DOOR LOCK

Wiring Diagram — D/LOCK — (Cont'd)

EL-D/LOCK-03

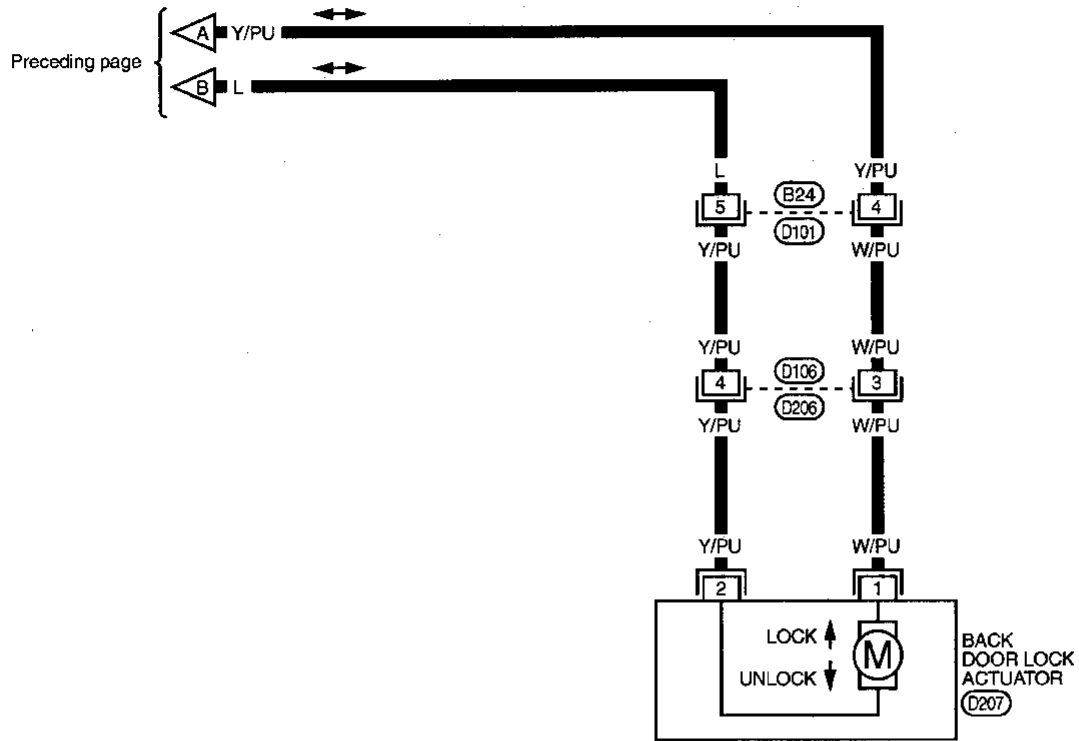


POWER DOOR LOCK

Trouble Diagnoses

SYMPTOM CHART


REFERENCE PAGE	EL-183	EL-184	EL-185
SYMPTOM	Main power supply and ground circuit check	Diagnostic procedure 1 (Door lock/unlock switch check)	Diagnostic procedure 2 (Door lock actuator check)
None of the doors lock/unlock when operating both door lock/unlock switch.	X		X
One or more doors are not locked and/or unlocked.			X
LH or RH lock/unlock switch does not operate.		X	

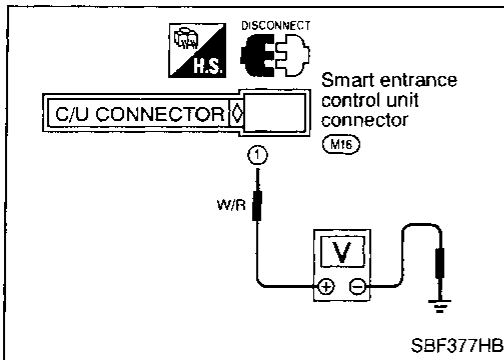

MAIN POWER SUPPLY AND GROUND CIRCUIT CHECK

Main power supply for smart entrance control unit (SECU)

Terminal		Ignition switch		
⊕	⊖	OFF	ACC	ON
①	Ground	Battery voltage	Battery voltage	Battery voltage

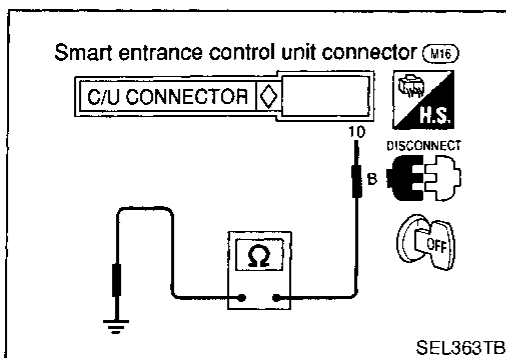

Ground circuit for smart entrance control unit




Terminals	Continuity
⑩ - Ground	Yes

POWER DOOR LOCK

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 1

(Door lock/unlock switch check)

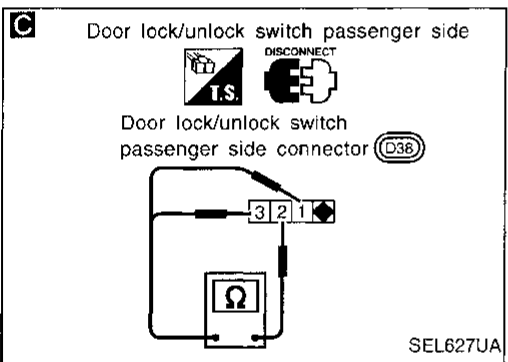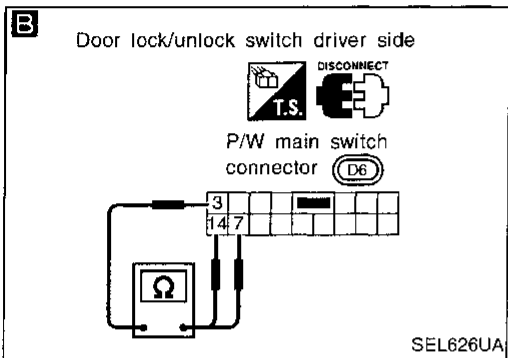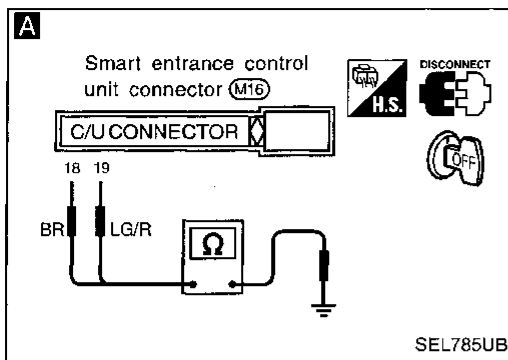

A

CHECK DOOR LOCK/UNLOCK SWITCH INPUT SIGNAL.

1. Disconnect control unit connector.
2. Check continuity between control unit terminal ⑱ or ⑲ and ground.

Terminals	Door lock/unlock switch (LH or RH) condition	Continuity
⑱ - ground	Lock	Yes
	N and Unlock	No
⑲ - ground	Unlock	Yes
	N and Lock	No

Refer to wiring diagram in EL-180.

OK → Door lock/unlock switch is OK.

NG

B C

CHECK DOOR LOCK/UNLOCK SWITCH.

1. Disconnect door lock/unlock switch connector.
2. Check continuity between each door lock/unlock switch terminals.

B Power window main switch (Door lock/unlock switch driver side)

Condition	Terminals		
	3	14	7
Lock	○	○	○
N	No continuity		
Unlock	○	○	○

NG → Replace door lock/unlock switch.

C Door lock/unlock switch passenger side

Condition	Terminals		
	1	2	3
Lock		○	○
N	No continuity		
Unlock	○	○	

OK

Check the following.





- Ground circuit for door lock/unlock switch
- Harness for open or short between door lock/unlock switch and control unit connector

POWER DOOR LOCK

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 2

(Door lock actuator check)

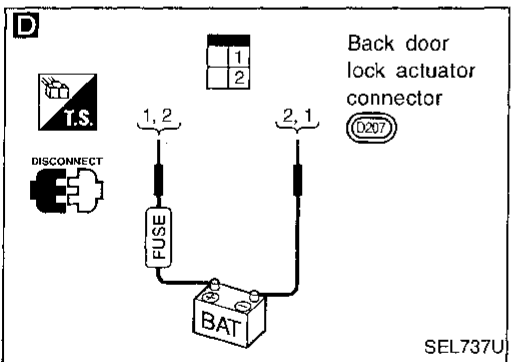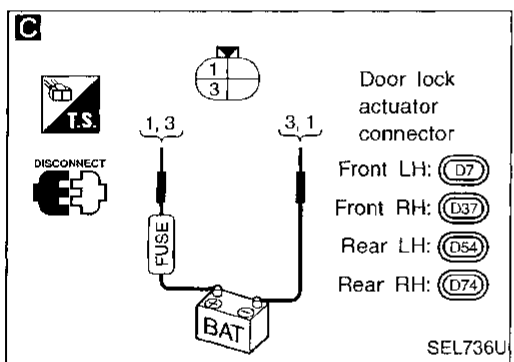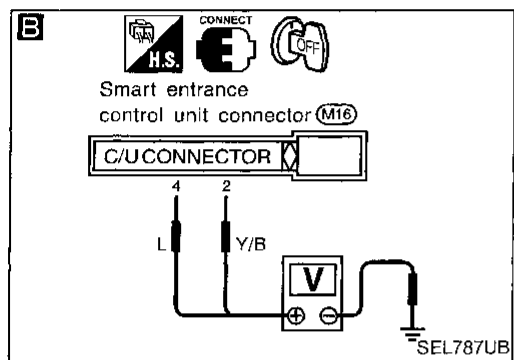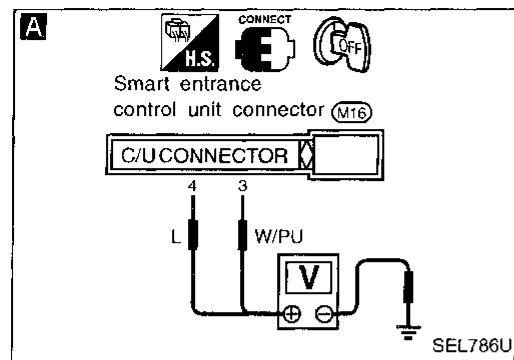

A B

CHECK DOOR LOCK ACTUATOR CIRCUIT.

Check voltage for door lock actuator.

A Door lock actuator front LH

Door lock/unlock switch condition	Terminals		Voltage (V)
	⊕	⊖	
Lock	④	ground	Approx. 12
Unlock	③	ground	

B Door lock actuator front RH, rear and back

Door lock/unlock switch condition	Terminals		Voltage (V)
	⊕	⊖	
Lock	④	ground	Approx. 12
Unlock	②	ground	

Refer to wiring diagram in EL-181.

NG → Replace smart entrance control unit. (Before replacing control unit, perform Diagnostic procedure 1.)

C D

CHECK DOOR LOCK ACTUATOR.

1. Disconnect door lock actuator connector.

2. Apply 12V direct current to door lock actuator and check operation.

C

Door lock actuator operation	Terminals	
	⊕	⊖
Unlocked → Locked	③	①
Locked → Unlocked	①	③

D

Back door lock actuator operation	Terminals	
	⊕	⊖
Unlocked → Locked	②	①
Locked → Unlocked	①	②


NG → Replace door lock actuator.

OK

Check harness for open or short between control unit connector and door lock actuator.

GI
MA
EM
LG
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
DX

Component Parts and Harness Connector Location

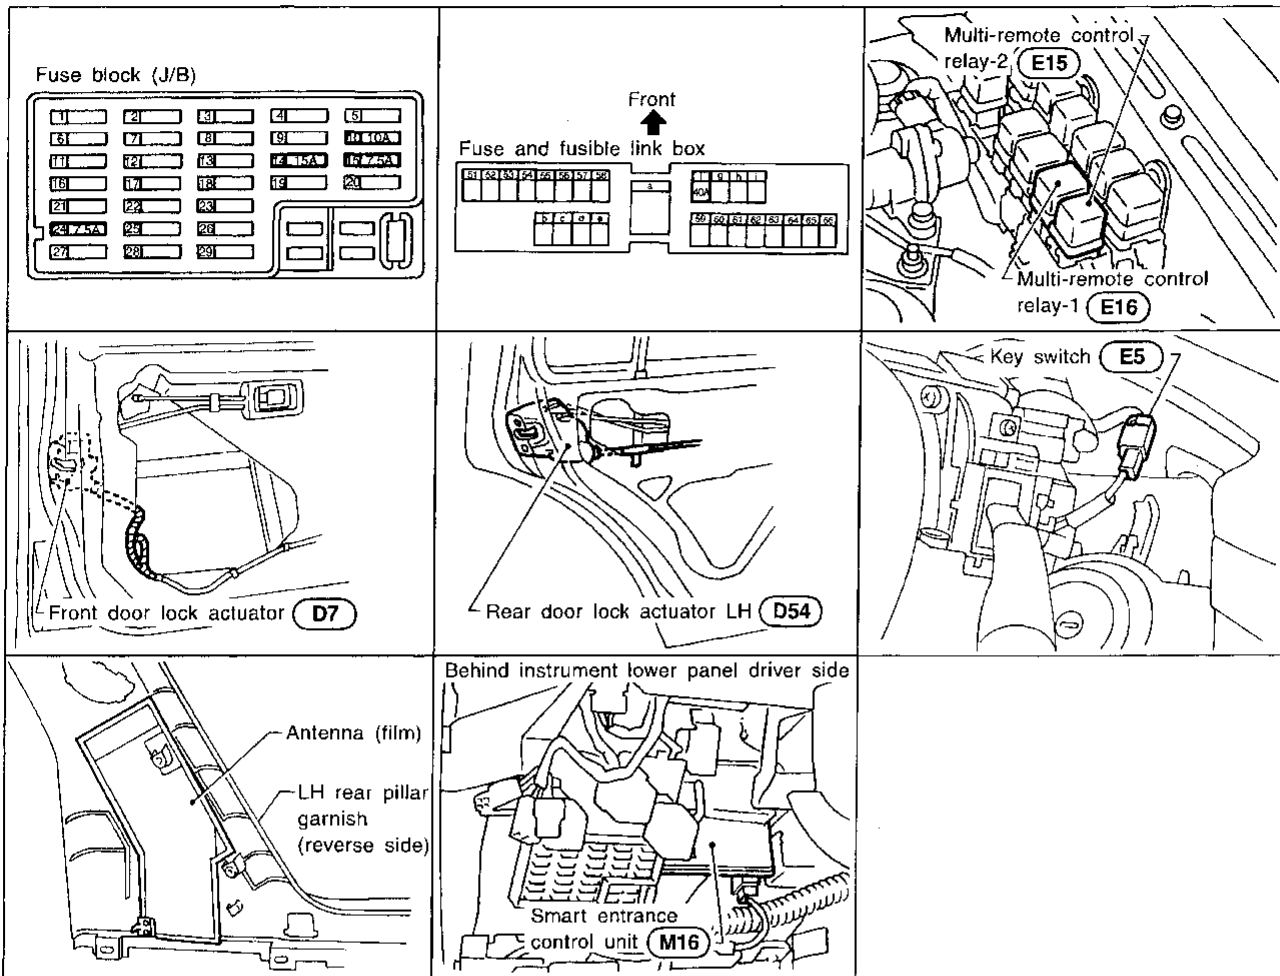

MEL079H

System Description

Power is supplied at all times

- to smart entrance control unit terminal ①
- through 40A fusible link (letter **F**, located in the fuse and fusible link box).

Power is supplied at all times

- to interior lamp terminal ①
- through 7.5A fuse [No. **15**], located in the fuse block (J/B)].

Power is supplied at all times

- to key switch terminal ①
- through 7.5A fuse [No. **24**], located in the fuse block (J/B)].

Power is supplied at all times

- to multi-remote control relays-1 and 2 terminal ①
- through 15A fuse [No. **14**], located in the fuse block (J/B)].

Terminal ⑩ of the smart entrance control unit is grounded through body grounds **M4** and **M77**.

INPUTS

When the key switch is ON (ignition key is inserted in key cylinder), power is supplied

- through key switch terminal ②
- to smart entrance control unit terminal ②4.

When the front door switch LH is OPEN, ground is supplied

- to smart entrance control unit terminal ①5
- through front door switch LH terminal ①

MULTI-REMOTE CONTROL SYSTEM

System Description (Cont'd)

- to front door switch LH terminal ②
- through body grounds (B11), (B22) and (D210).

When the front door switch RH is OPEN, ground is supplied

- to smart entrance control unit terminal ③⑤
- through front door switch RH terminal ①
- to front door switch RH terminal ②
- through body grounds (B55) and (B77).

When the each door switch is OPEN, ground is supplied

- to smart entrance control unit terminal ①⑥
- through each door switch body ground or (B11), (B22) and (D210).

When the front door lock actuator LH (door unlock sensor) is UNLOCKED, ground is supplied

- to smart entrance control unit terminal ⑫
- through door lock actuator LH (door unlock sensor) terminal ④
- to door lock actuator LH (door unlock sensor) terminal ②
- through body grounds (M4) and (M77).

When the front door lock actuator RH (door unlock sensor) is UNLOCKED, ground is supplied to smart entrance control unit terminal ⑬ in the same manner as front door lock actuator LH.

When the rear door lock actuator (door unlock sensor) is UNLOCKED, ground is supplied to smart entrance control unit terminal ⑭ in the same manner as other door lock actuator.

Remote controller signal input

- through antenna
- to smart entrance control unit terminal ⑳⑦.

The multi-remote control system controls operation of the

- power door lock
- interior lamp
- panic alarm
- hazard reminder

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

OPERATED PROCEDURE

Power door lock operation

When the following input signals are both supplied:

- key switch OFF (when ignition key is not inserted in key cylinder);
- door switch CLOSED (when all the doors are closed);

The two above signals are already input into smart entrance control unit. At this point, smart entrance control unit receives a LOCK signal from remote controller. Smart entrance control unit locks all doors with input of LOCK signal from remote controller.

And then ground is supplied

- to multi-remote control relays-1 and 2 terminals ②
- through smart entrance control unit terminal ⑦.

Multi-remote control relays are now energized, and hazard warning lamp flash twice as a reminder—**HAZARD REMINDER**. For detailed description, refer to "Turn Signal and Hazard Warning Lamps" (EL-58).

When an UNLOCK signal is sent from remote controller once, driver's door will be unlocked.

Then, if an UNLOCK signal is sent from remote controller again within 5 seconds, all other door will be unlocked.

Interior lamp operation

When the following input signals are both supplied:

- key switch OFF (when ignition key is not inserted in key cylinder);
- door switch CLOSED (when all the doors are closed);

multi-remote control system turns on interior lamp (for 30 seconds) with input of UNLOCK signal from remote controller.

For detailed description, refer to "Interior, Spot and Luggage Room Lamps" (EL-72).


Panic alarm operation

When key switch is OFF (when ignition key is not inserted in key cylinder), multi-remote control system turns on and off horn and headlamp intermittently with input of PANIC ALARM signal from remote controller.

For detailed description, refer to "THEFT WARNING SYSTEM" (EL-203).

MULTI-REMOTE CONTROL SYSTEM


Schematic

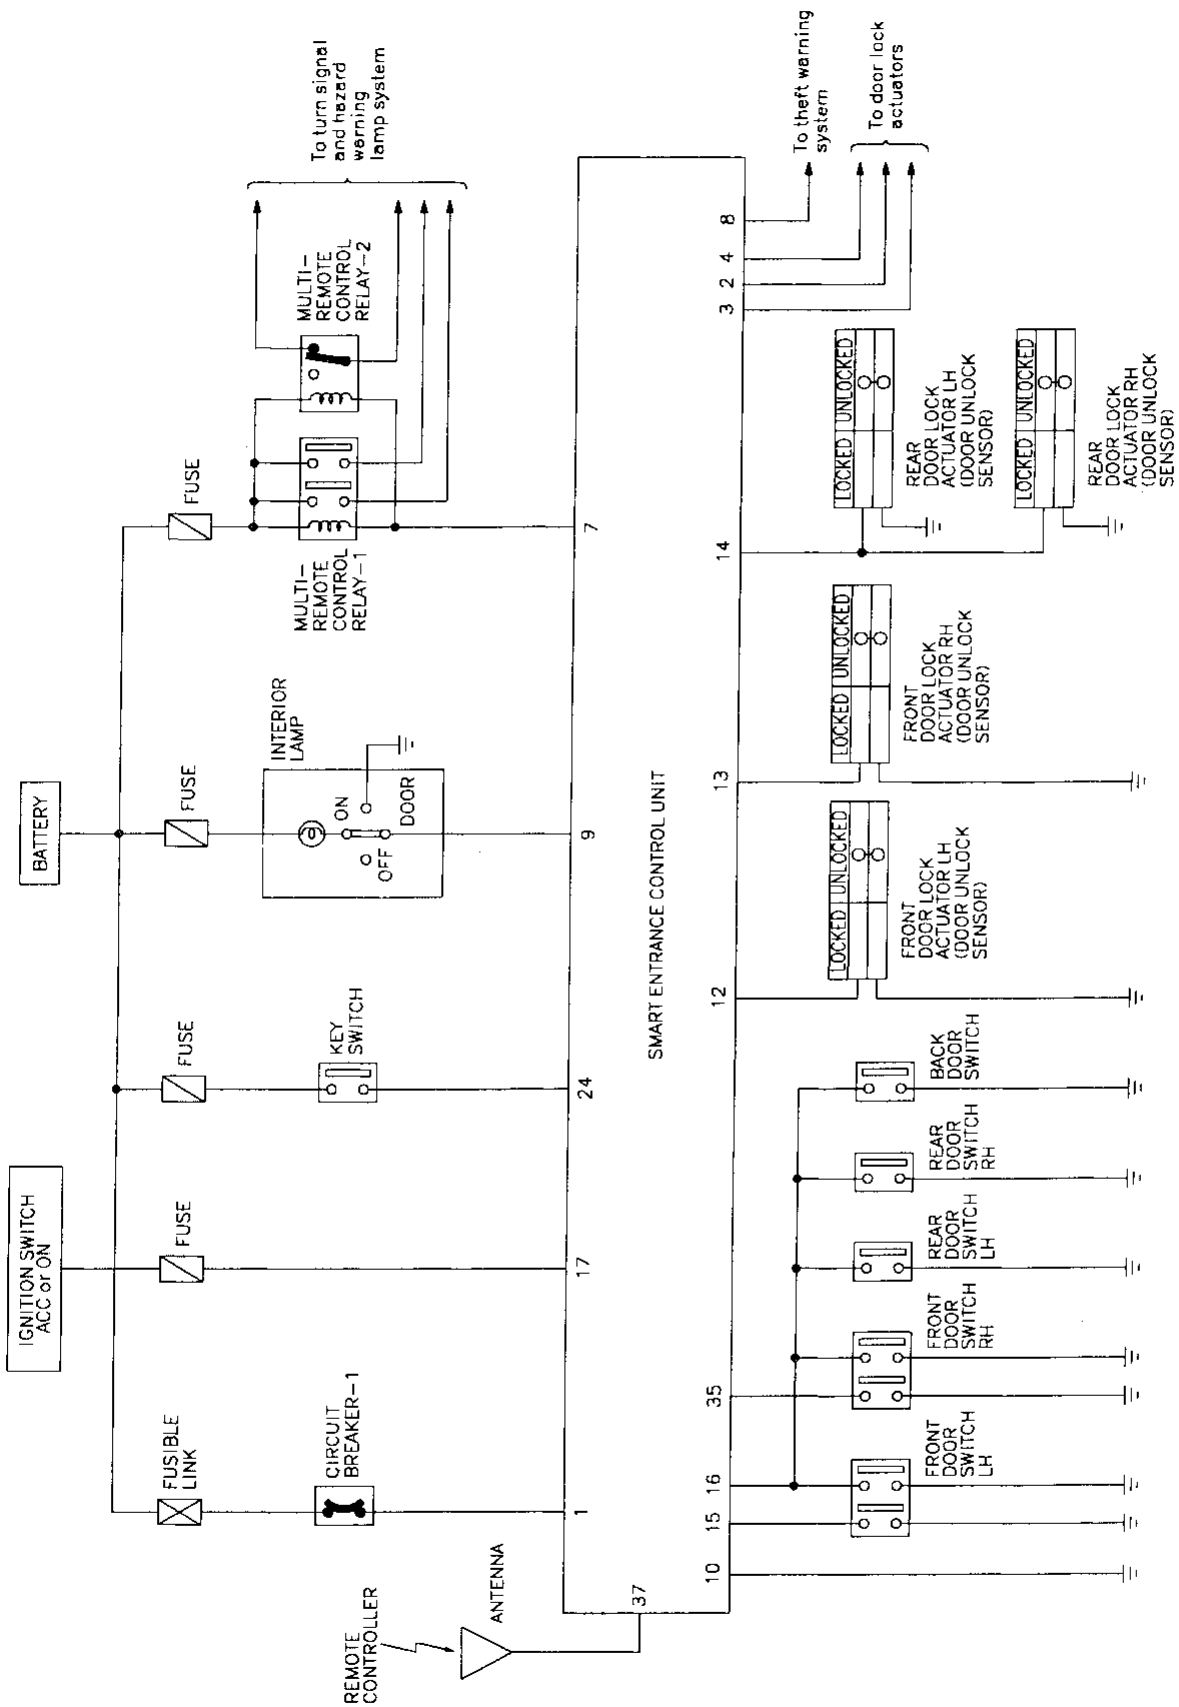

MULTI-REMOTE CONTROL SYSTEM




Wiring Diagram — MULTI —

EL-MULTI-01

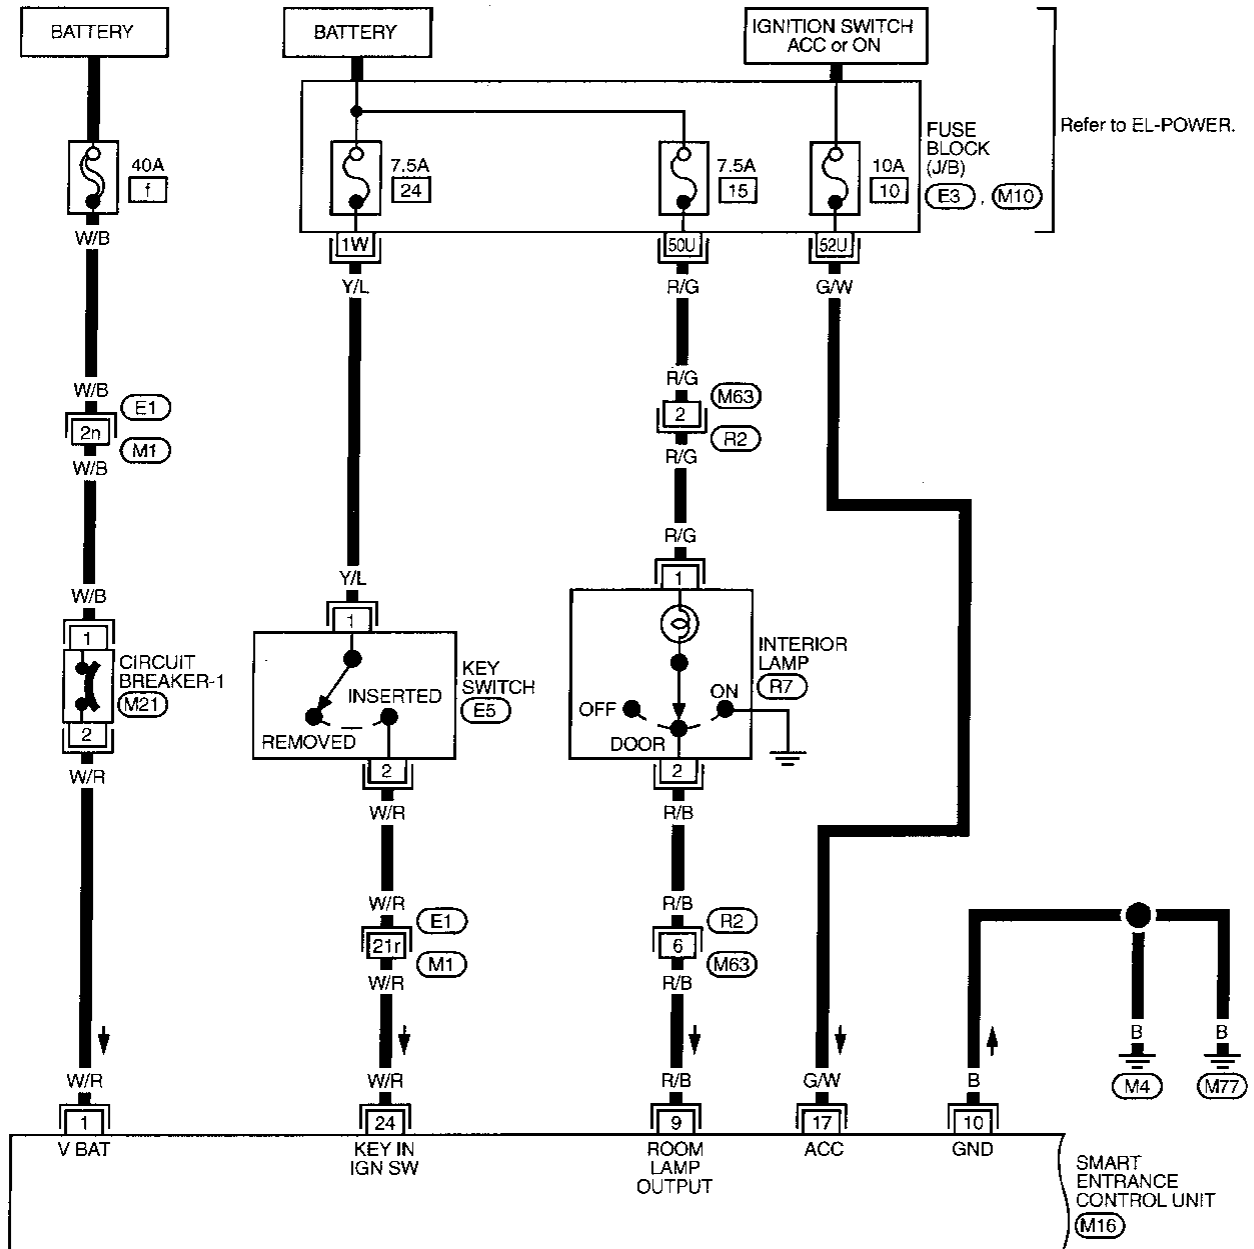

Refer to EL-POWER.

SMART ENTRANCE CONTROL UNIT (M16)



Refer to last page (Foldout page).

(E1) (M1)

(E3)

(M10)

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL


IDX

MULTI-REMOTE CONTROL SYSTEM

Wiring Diagram — MULTI — (Cont'd)



EL-MULTI-02

SMART
ENTRANCE
CONTROL UNIT
(M16)

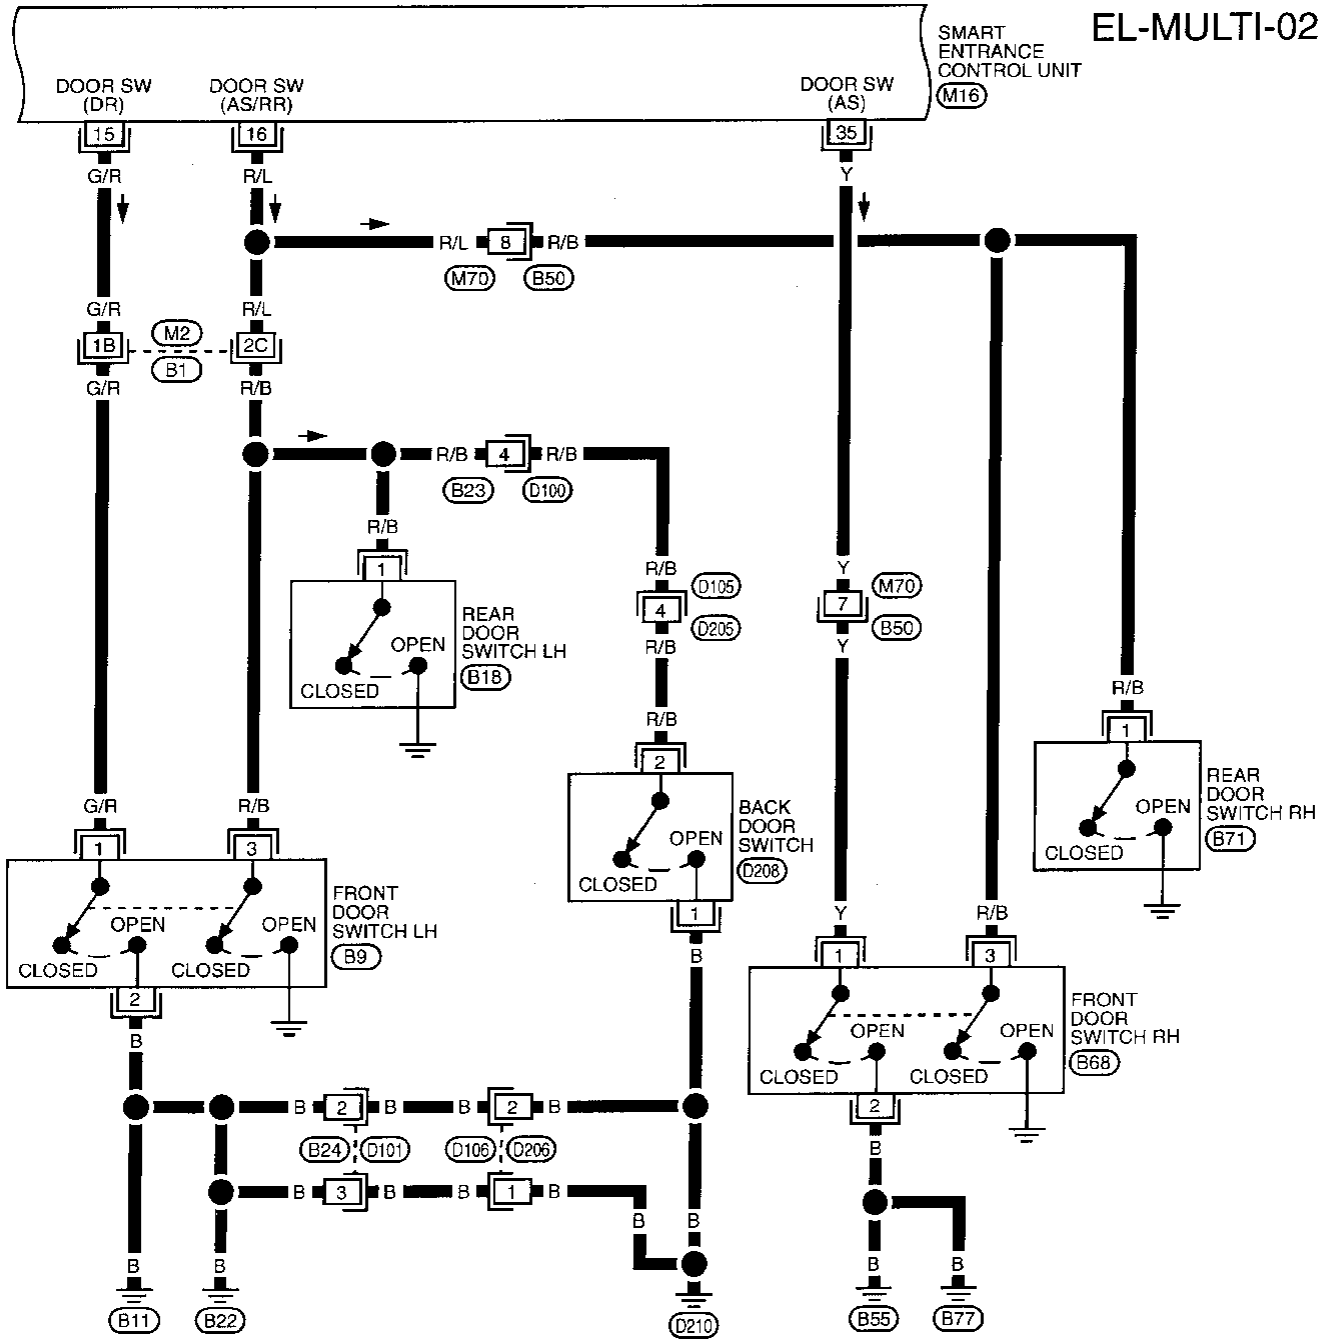

Refer to last page (Foldout page).




(M2), (B1)



MULTI-REMOTE CONTROL SYSTEM

Wiring Diagram — MULTI — (Cont'd)

EL-MULTI-04

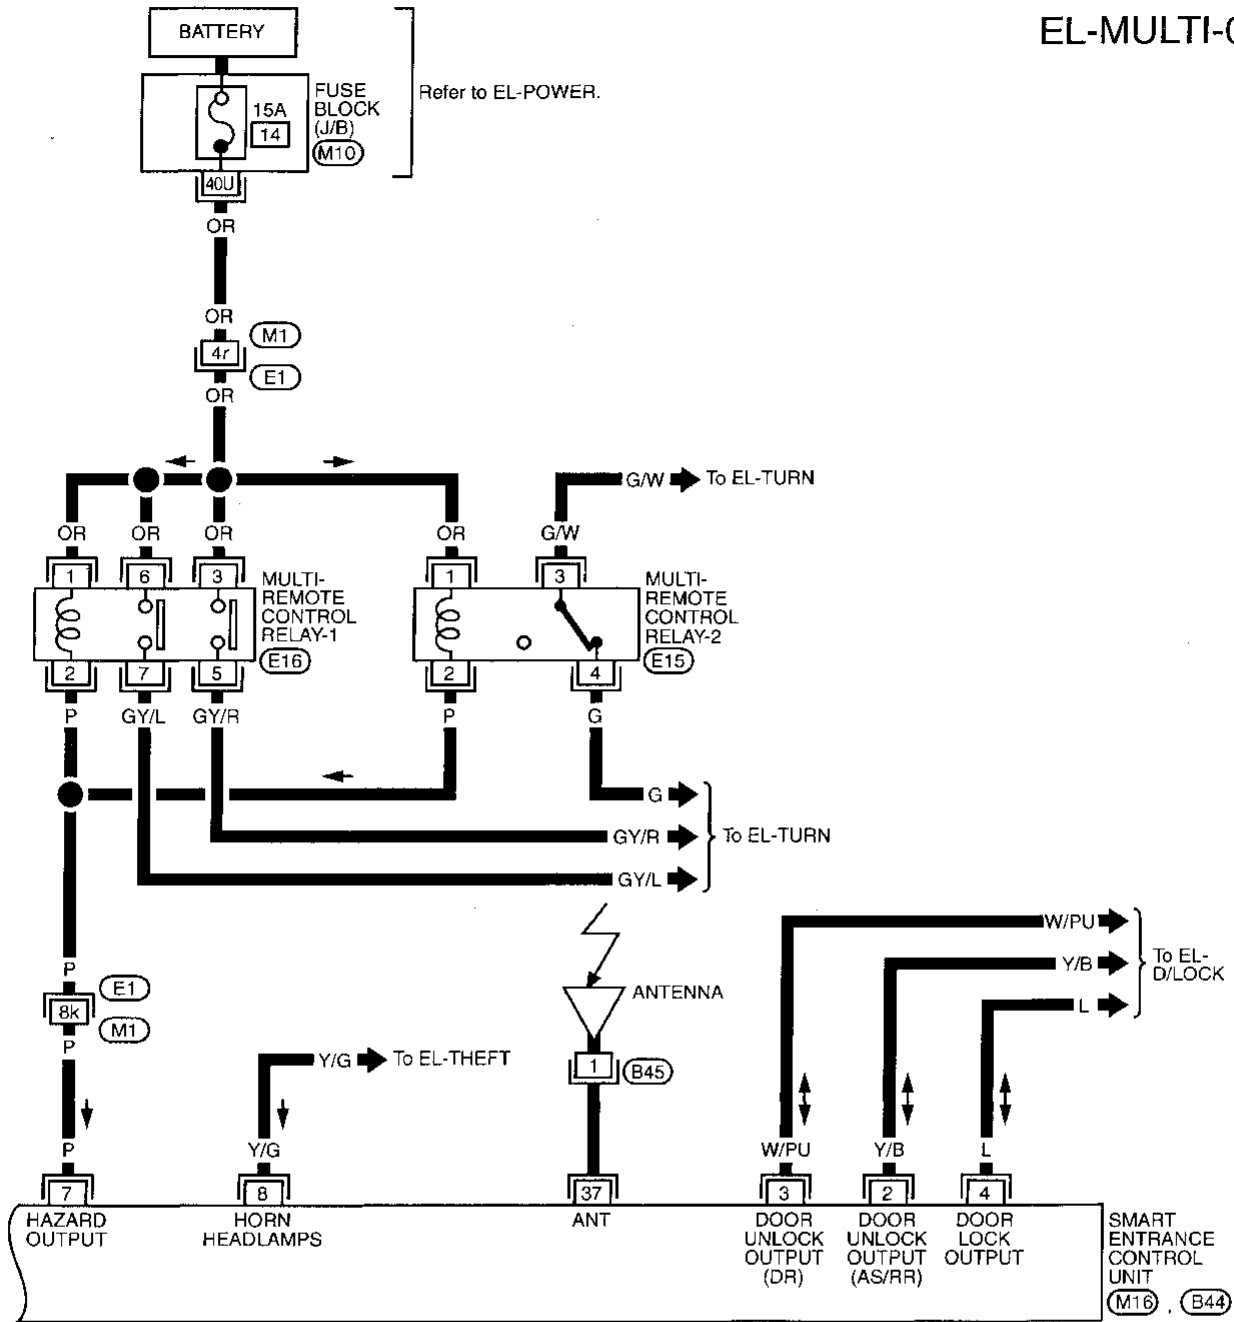


Refer to last page (Foldout page).


(E1), (M1)
(M10)

Trouble Diagnoses TROUBLE SYMPTOM

- All functions of remote control system do not operate.

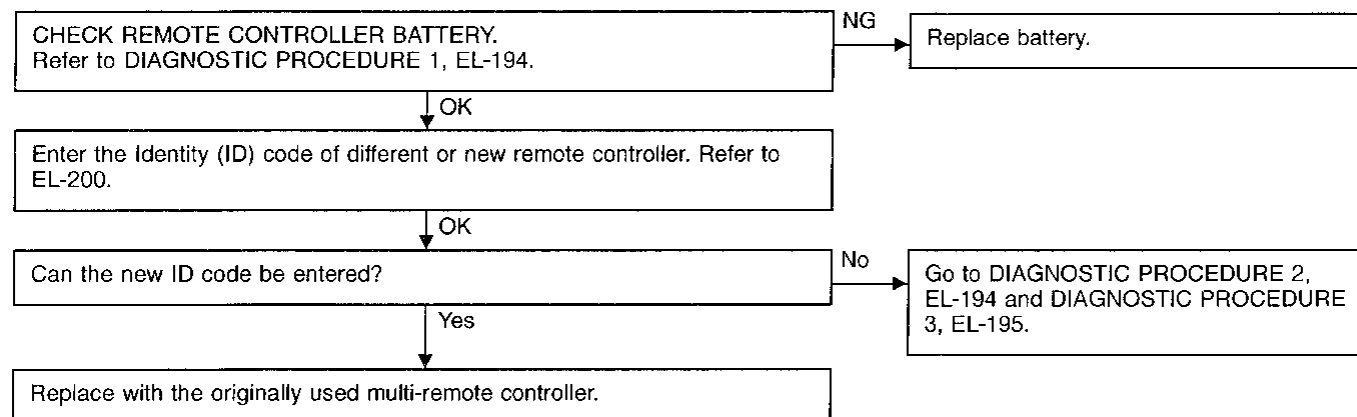

- Some functions of multi-remote controller do not operate.

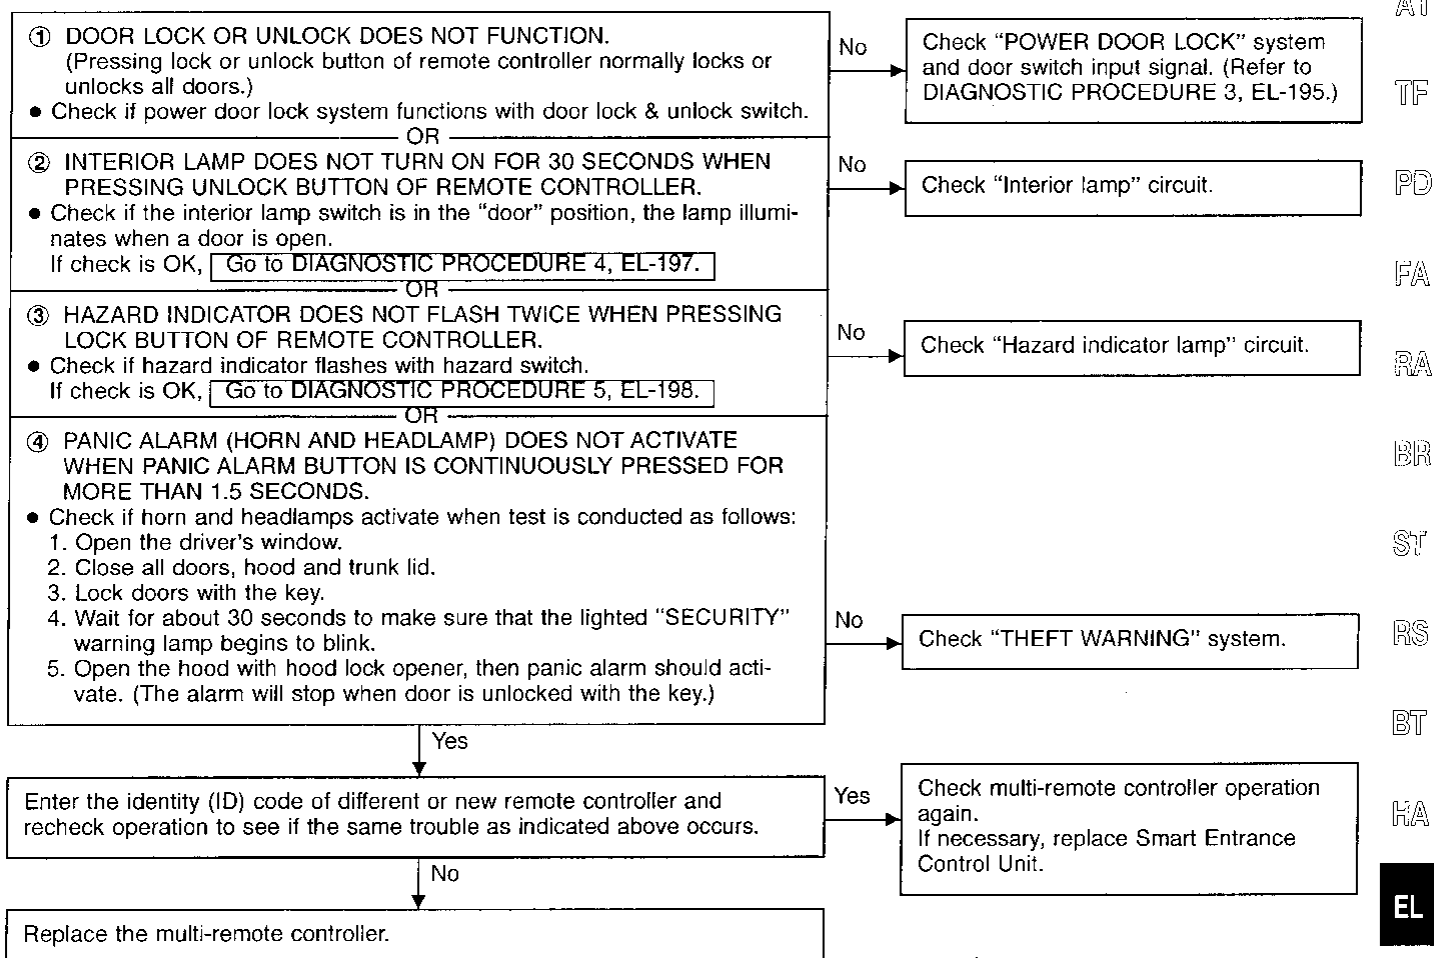


- Note:**
- The unlock and panic alarm operation of multi-remote control system does not activate with the ignition key inserted in the ignition key cylinder.
 - The lock operation of multi-remote control system does not activate with the key inserted in the ignition key cylinder or if one of the doors is opened.

MULTI-REMOTE CONTROL SYSTEM

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 1

Check remote controller battery.

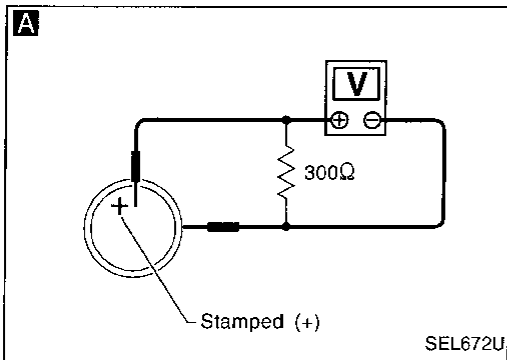

A

CHECK REMOTE CONTROLLER BATTERY.

Remove battery and measure voltage across battery positive and negative terminals, ⊕ and ⊖.

Measuring terminal		Standard value
⊕	⊖	
Battery positive terminal ⊕	Battery negative terminal ⊖	2.5 - 3.0V

If battery voltage is OK, check remote controller battery terminals for corrosion or damage.



Note:

For replacing remote controller battery, refer to "Remote Controller Battery Replacement" in EL-201.

- Remote controller does not function if battery is not set correctly.

DIAGNOSTIC PROCEDURE 2

Check antenna of multi remote control system.

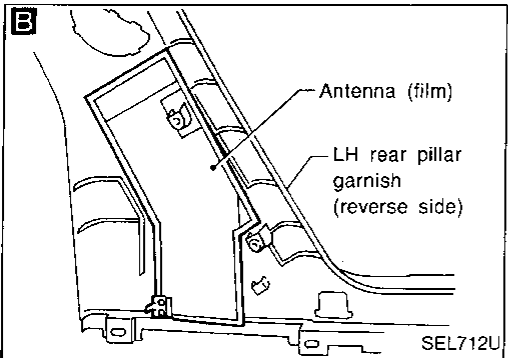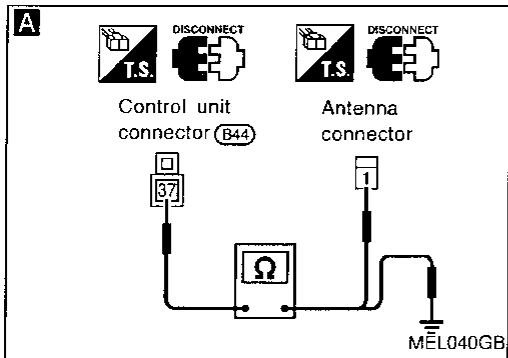

A

CHECK ANTENNA FEEDER CABLE.

- 1) Disconnect feeder cable connector from control unit.
- 2) Remove LH rear pillar garnish and disconnect feeder cable connector from antenna.
- 3) Check continuity between the feeder cable connectors.
Continuity should exist.
- 4) Check continuity between the feeder cable connector terminal and body ground.
Continuity should not exist.

Refer to wiring diagram in EL-192.

NG → Replace feeder cable.

OK ↓

B

CHECK ANTENNA.

- 1) Remove rear pillar garnish and disconnect feeder cable connector from antenna.
- 2) Visually check film antenna.

NG → Replace antenna.

OK ↓


Antenna of multi-remote control is OK.

MULTI-REMOTE CONTROL SYSTEM

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 3

All remote controls do not function even if remote controller is operated properly.

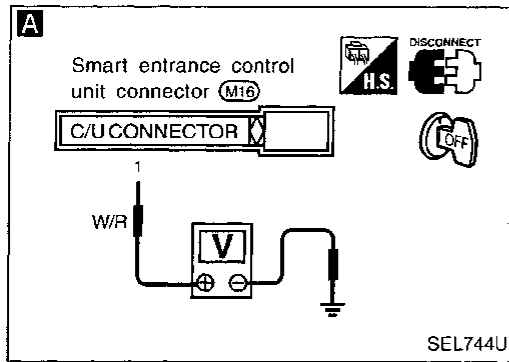

A

CHECK MAIN POWER SUPPLY CIRCUIT FOR CONTROL UNIT.

- 1) Disconnect connector from control unit.
- 2) Check voltage between control unit terminal ① and ground.


Battery voltage should exist.

Refer to wiring diagram in EL-189.

NG

Check the following.

- 40A fusible link (letter **f**, located in fuse and fusible link box)
- **(M21)** circuit breaker
- Harness for open or short between control unit and circuit breaker

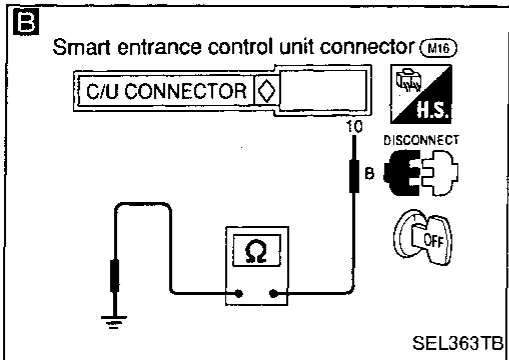

B

CHECK GROUND CIRCUIT FOR CONTROL UNIT.


Check continuity between terminal ⑩ and ground.

Continuity should exist.

Refer to wiring diagram in EL-189.

NG

Check ground harness.

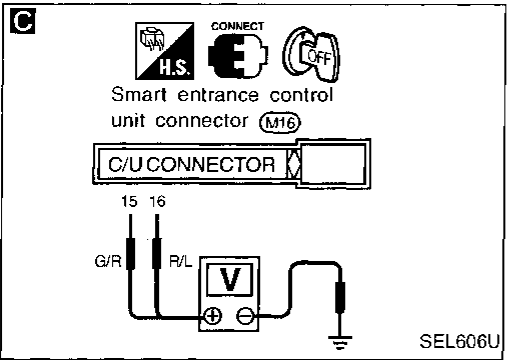

C

CHECK DOOR SWITCH CIRCUIT.

Check voltage between control unit terminal ⑮ and ground, ⑯ and ground.

	Terminals		Condition	Voltage [V]
	⊕	⊖		
Driver side door switch	⑮	ground	Open	0
			Close	Approx. 12
Other door switches	⑯	ground	Open	0
			Close	Approx. 12

Refer to wiring diagram in EL-190.

NG

Check the following.

- Door switch
Refer to "ELECTRICAL COMPONENTS INSPECTION" (EL-199).
- Door switch ground circuit (Driver side, back door) or door switch ground condition (Other doors)
- Harness for open or short between control unit and door switch

OK





Ⓐ

(Go to next page.)


GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

MULTI-REMOTE CONTROL SYSTEM


Trouble Diagnoses (Cont'd)

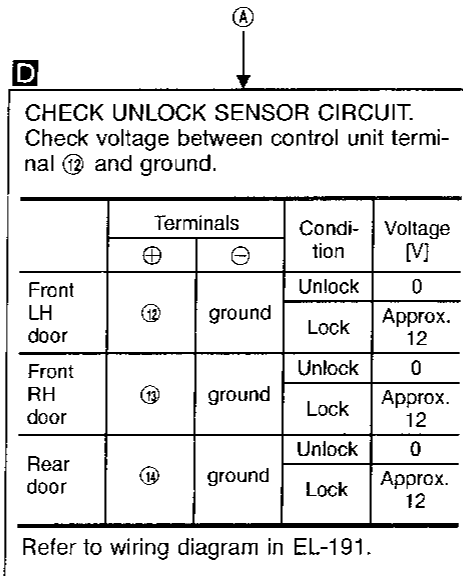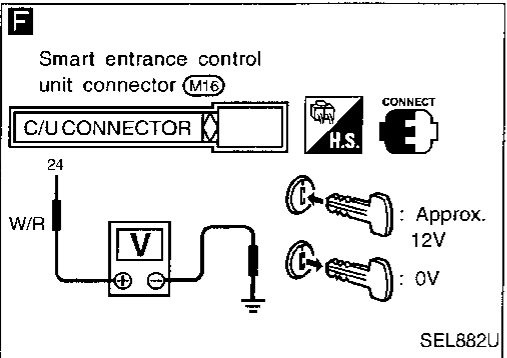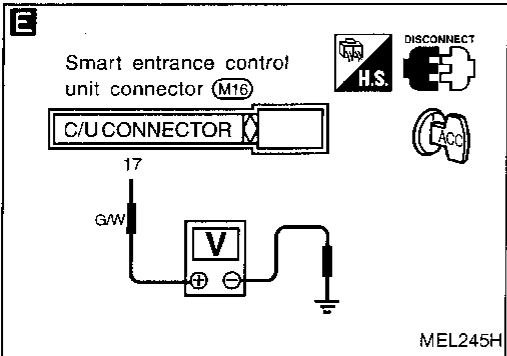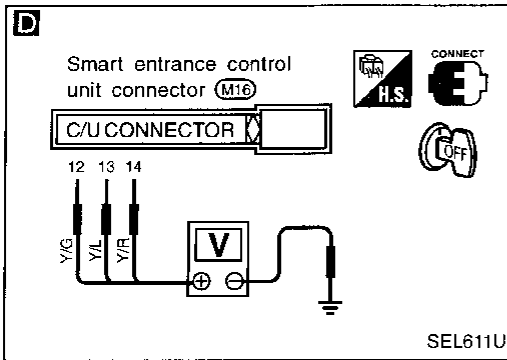

- NG
- Check the following.
- Door unlock sensor
Refer to "ELECTRICAL COMPONENTS INSPECTION" (EL-199).
 - Door unlock sensor ground circuit
 - Harness for open or short between control unit and unlock sensor

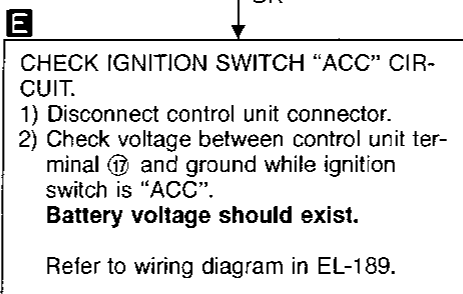

- NG
- Check the following.
- 10A fuse [No. ⑩], located in fuse block (J/B)]
 - Harness for open or short between control unit and fuse

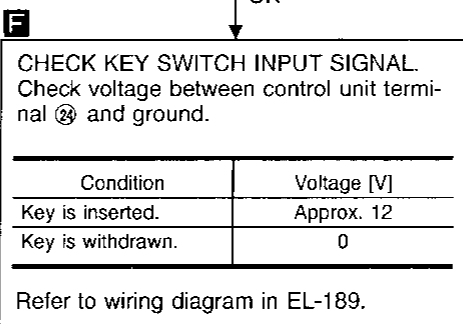

- NG
- Check the following.
- 7.5A fuse [No. ⑳], located in fuse block (J/B)]
 - Key switch
Refer to "ELECTRICAL COMPONENTS INSPECTION" (EL-199).
 - Harness for open or short between key switch and fuse
 - Harness for open or short between control unit and key switch

OK


Check operation parts in multi-remote control system for function.

MULTI-REMOTE CONTROL SYSTEM

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 4

Interior lamp does not turn on for 30 seconds when pressing unlock button of remote controller. Everything else functions.

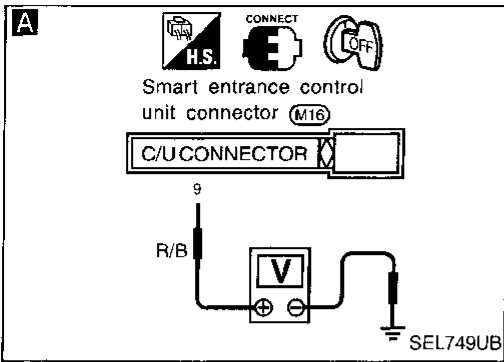

A

CHECK INTERIOR LAMP CIRCUIT. When interior lamp switch is "DOOR" position, check voltage across control unit terminal ⑨ and ground.
Does battery voltage exist?

Refer to wiring diagram in EL-189.

No

Repair harness between control unit and interior lamp.

Yes

A

Push unlock button of remote controller and check voltage across control unit terminal ⑨ and ground.

No

Replace smart entrance control unit.

Multi-remote controller button condition	Voltage (V)
Unlock button is pushed.	0 (For approx. 30 seconds.)
Unlock button is not pushed.	Battery voltage

Yes

Check system again.

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL





IDX

MULTI-REMOTE CONTROL SYSTEM

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 5

Hazard indicator does not flash twice when pressing lock button of remote controller. Everything else functions.

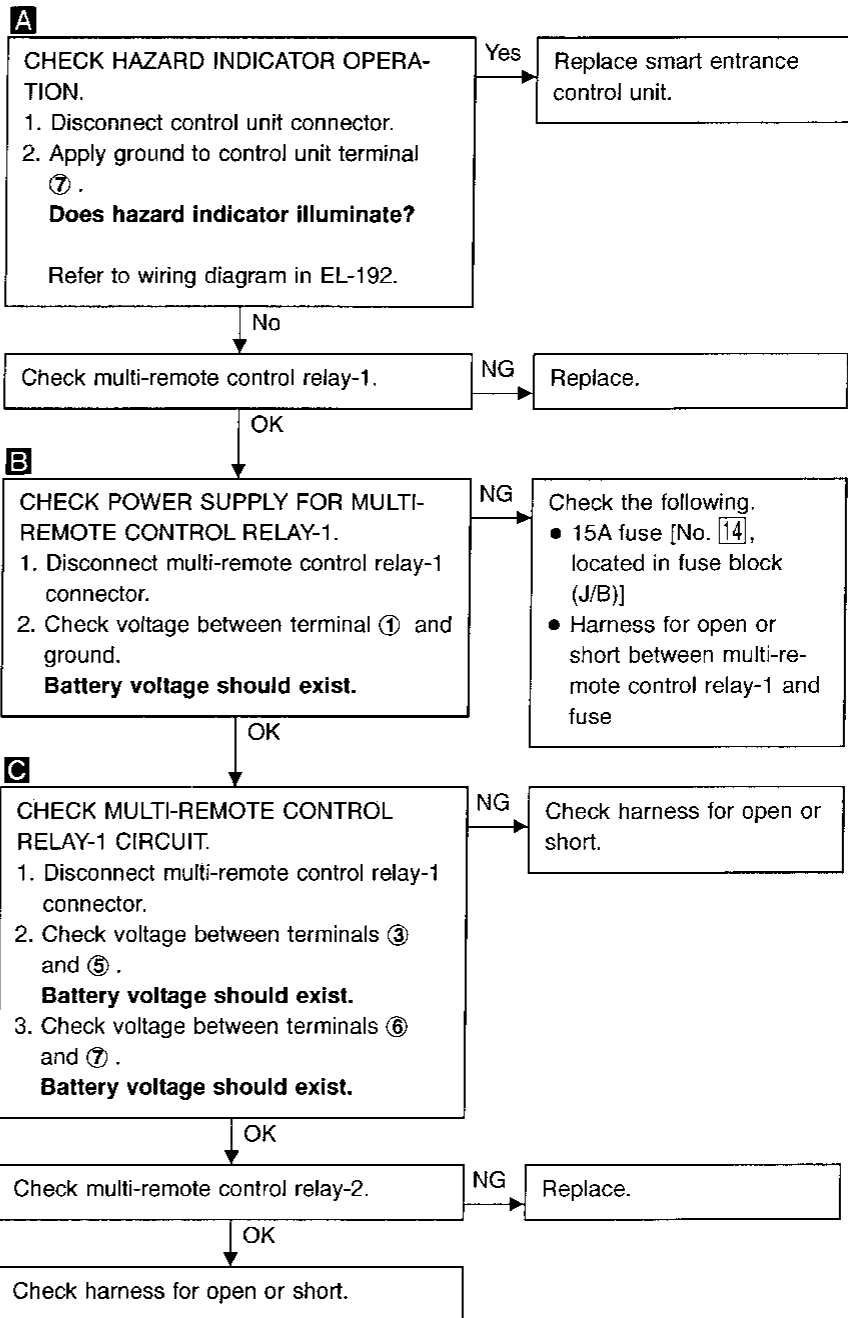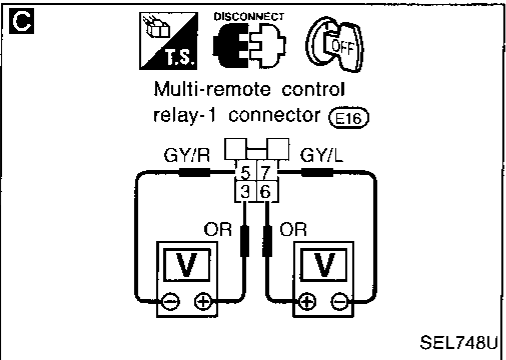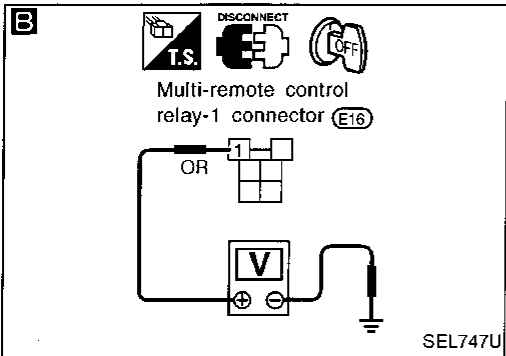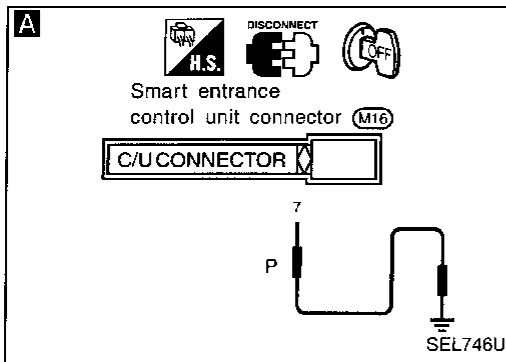

MULTI-REMOTE CONTROL SYSTEM



Trouble Diagnoses (Cont'd)

ELECTRICAL COMPONENTS INSPECTION

Door switches

Check continuity between terminals when door switch is pushed and released.


	Terminal No.	Condition	Continuity
Front door switch	① - ② , ③ - ground	Closed	No
		Open	Yes
Back door switch	② - ①	Closed	No
		Open	Yes
Rear door switch	① - ground	Closed	No
		Open	Yes

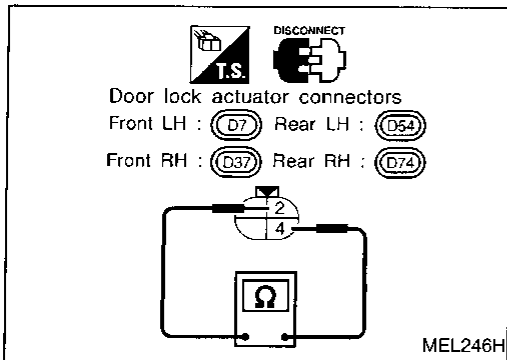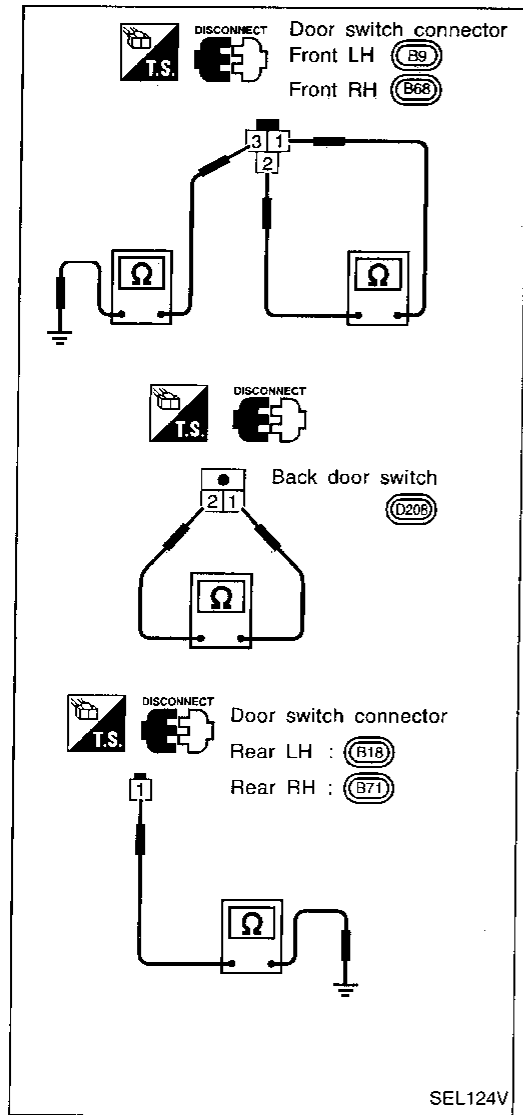

Door lock actuator (Door unlock sensor)

Check continuity between terminals when door is locked and unlocked.

Terminal No.	Condition	Continuity
④ - ②	Door is locked.	No
	Door is unlocked.	Yes

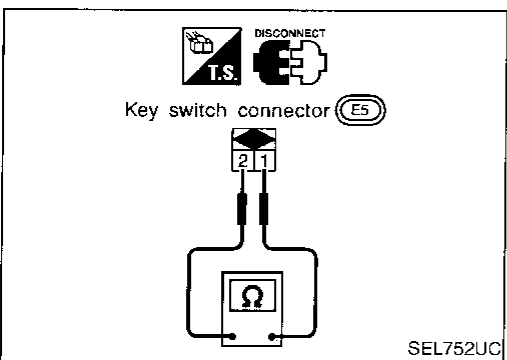

Key switch (insert)

Check continuity between terminals when key is inserted in ignition key cylinder and key is removed from ignition key cylinder.

Terminal No.	Condition	Continuity
① - ②	Key is inserted.	Yes
	Key is removed.	No

GI
MA
EM
LC
EC
FE
AT
TF
PD
F-A
RA
BR
ST
RS
BT
HA
EL
IDX


ID Code Entry Procedure

Enter the identity (ID) code manually when:

- remote controller or control unit is replaced.
- an additional remote controller is activated.

To enter the ID code, follow the procedures below.


PROCEDURE

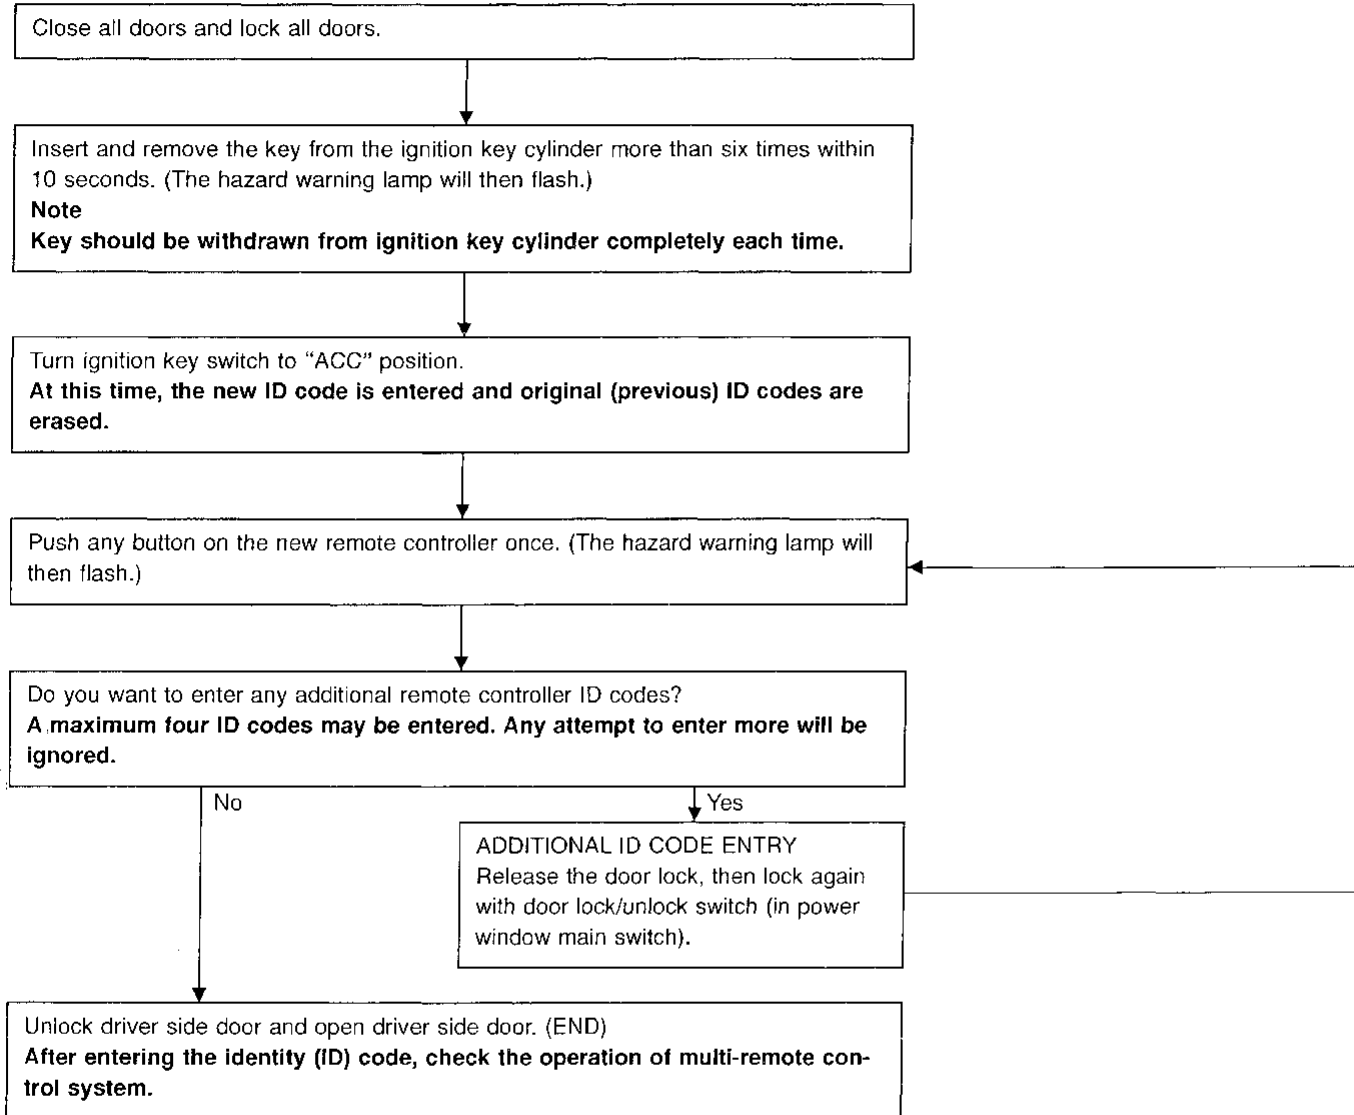

NOTE

- If you need to activate more than two additional new remote controllers, repeat the procedure "Additional ID code entry" for each new remote controller.
- If the same ID code that exists in the memory is input, the entry will be ignored.
- Entry of maximum four ID codes is allowed and any attempt to enter more will be ignored.

Remote Controller Battery Replacement

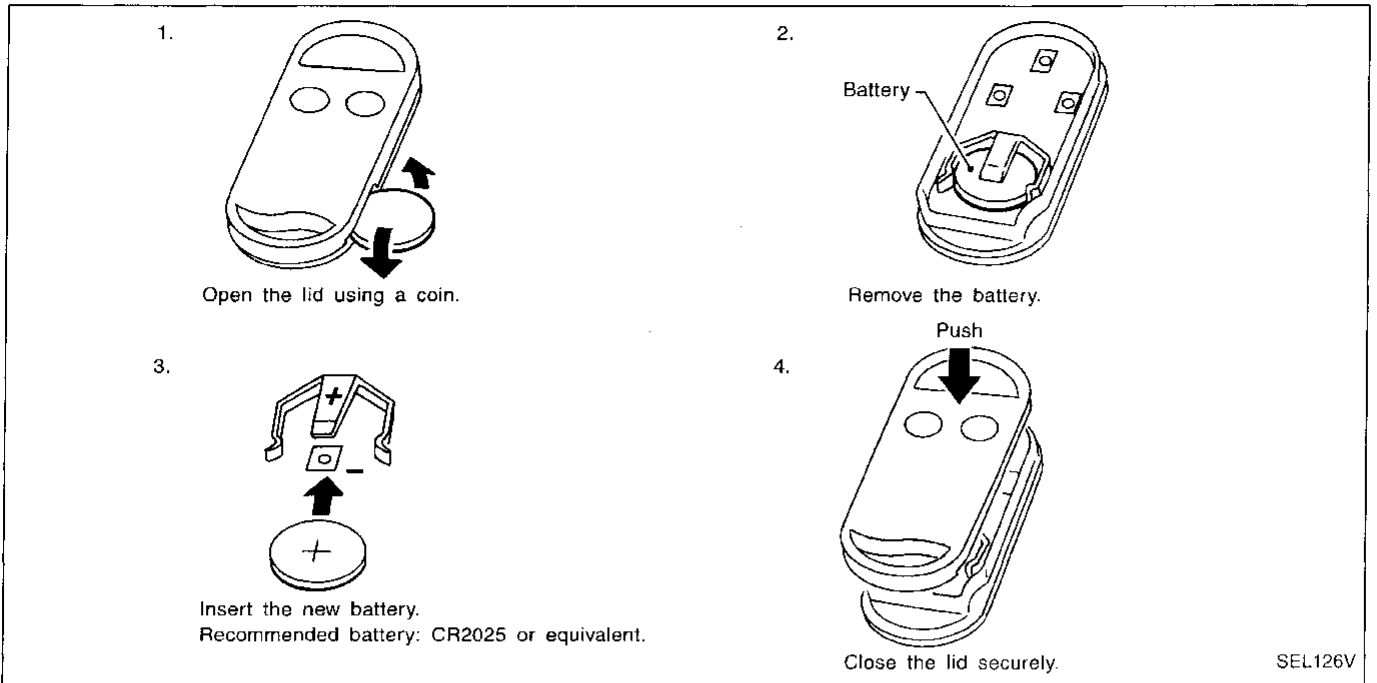

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT



HA

EL

IDX

THEFT WARNING SYSTEM

Component Parts and Harness Connector Location

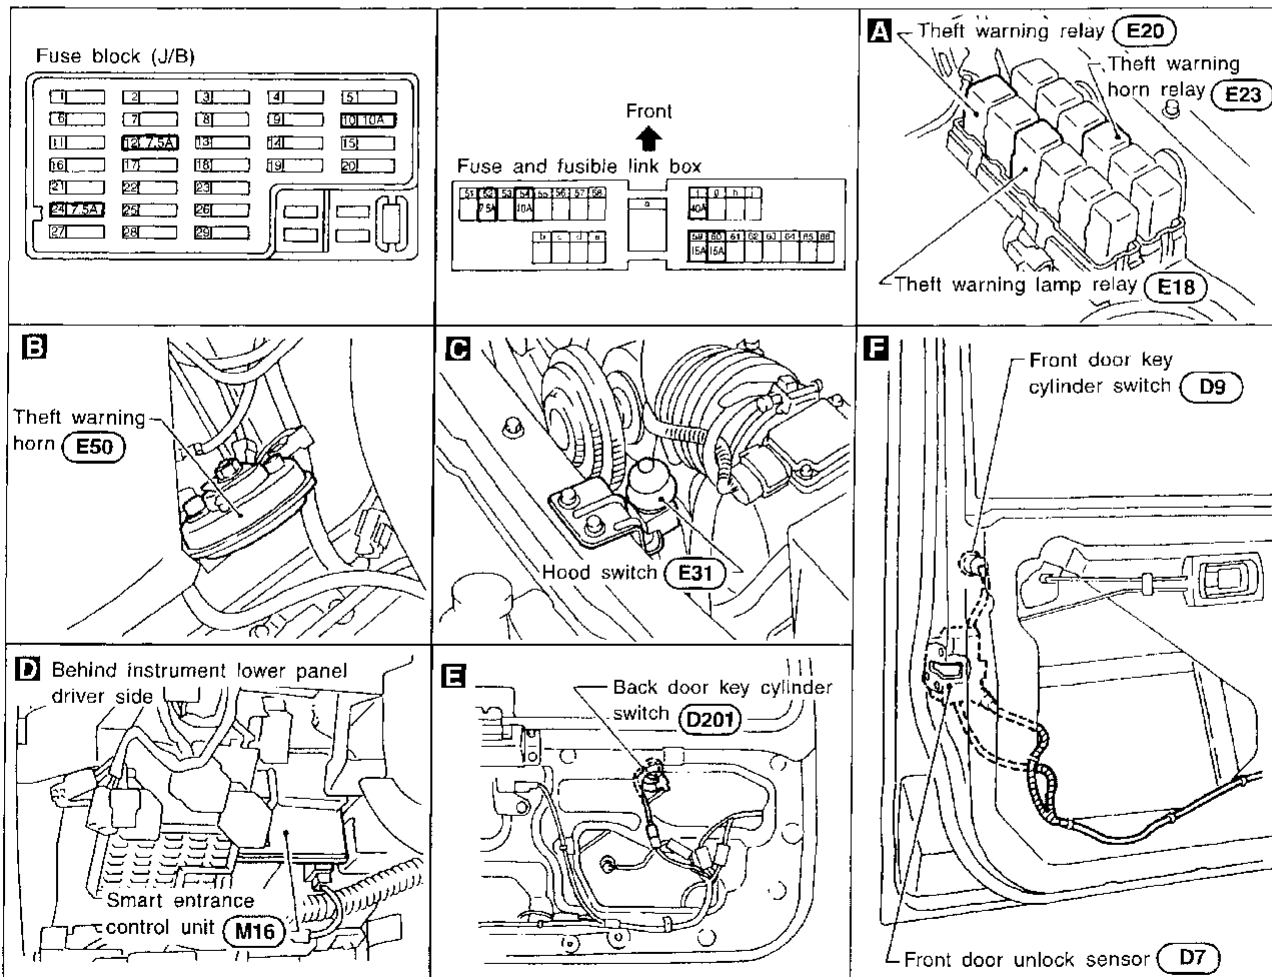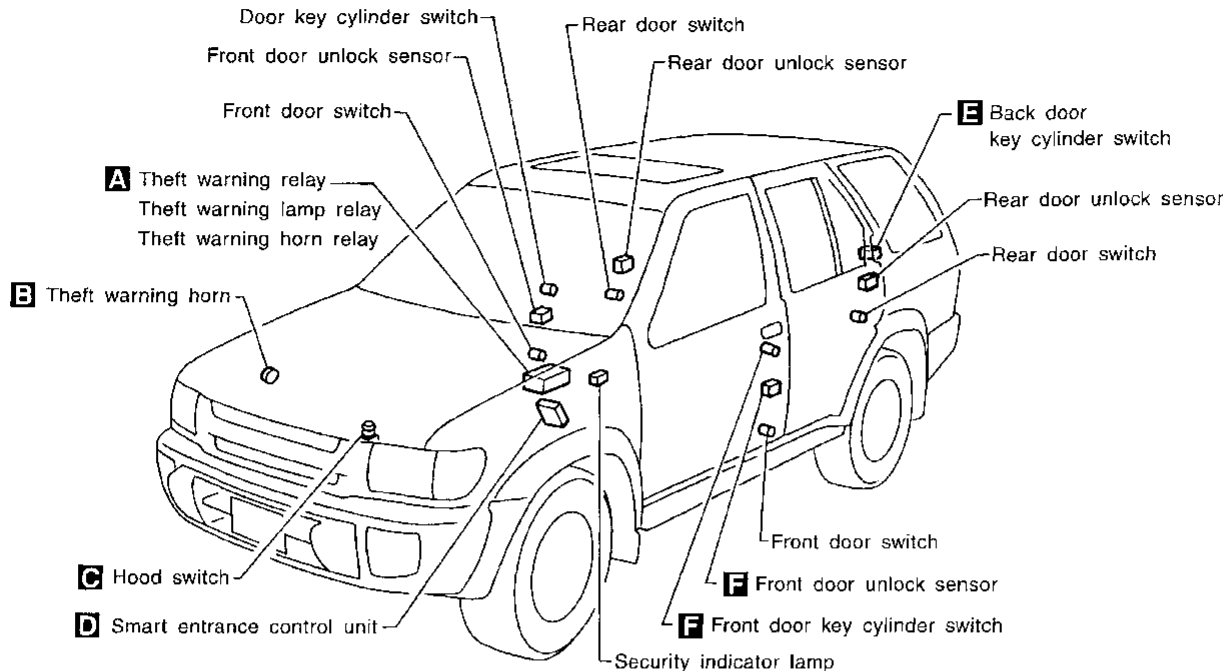

THEFT WARNING SYSTEM

System Description (Cont'd)

Refer to Owner's Manual for theft warning system operating instructions.

Power is supplied at all times

- through 7.5A fuse [No. 24], located in the fuse block (J/B)
- to security indicator lamp terminal ①.

Power is supplied at all times

- through 40A fusible link (letter f), located in the fuse and fusible link box)
- to smart entrance control unit terminal ①.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 10], located in the fuse block (J/B)
- to smart entrance control unit terminal ⑰.

Ground is supplied

- to smart entrance control unit terminal ⑩
- through body grounds M4 and M77.

THEFT WARNING SYSTEM ACTIVATION

The operation of the theft warning system is controlled by the doors, hood and glass hatch.

To activate the theft warning system, the smart entrance control unit must receive signals indicating the doors, hood and glass hatch are closed and the doors are locked.

When a door is open, smart entrance control unit terminal ⑮ or ⑯ receives a ground signal from each door switch.

When a door is unlocked, smart entrance control unit terminal ⑫, ⑬ or ⑭ receives a ground signal from terminal ④ of each door unlock sensor.

When the hood is open, smart entrance control unit terminal ⑳ receives a ground signal

- from terminal ① of the hood switch
- through body grounds E13 and E41.

When the glass hatch is open, smart entrance control unit terminal ㉑ receives a ground signal

- from terminal ① of the glass hatch switch
- through body grounds D210, B11 and B22.

When the doors are locked with key or multi-remote controller and none of the described conditions exist, the theft warning system will automatically shift to armed phase.

THEFT WARNING SYSTEM ACTIVATION (With key or remote controller used to lock doors)

If the key is used to lock doors, terminal ㉓ receives a ground signal

- from terminal ③ of the key cylinder switch LH
- from terminal ① of the door key cylinder switch RH
- through body grounds M4 and M77 or M4 and M66
- from terminal ① of the back door key cylinder switch
- through body grounds B11, B22 and D210.

If this signal or lock signal from remote controller is received by the smart entrance control unit, the theft warning system will activate automatically.

Once the theft warning system has been activated, smart entrance control unit terminal ㉔ supplies ground to terminal ② of the security indicator lamp.

The security lamp will illuminate for approximately 30 seconds and then blink.

Now the theft warning system is in armed phase.

THEFT WARNING SYSTEM

System Description (Cont'd)

THEFT WARNING SYSTEM ALARM OPERATION

The theft warning system is triggered by

- opening a door without using the key
- opening the hood or the glass hatch
- unlocking door.

Once the theft warning system is in armed phase, if the smart entrance control unit receives a ground signal at terminal ⑫, ⑬, ⑭ (door unlock sensor), ⑮, ⑯ (door switch), ⑰ (glass hatch switch) or ⑱ (hood switch), the theft warning system will be triggered. The headlamps flash and the horn sounds intermittently, and the starting system is interrupted.

Power is supplied at all times

- through 7.5A fuse [No. ⑫], located in the fuse block (J/B).
- to theft warning relay terminal ①.

If the theft warning system is triggered, ground is supplied

- from terminal ⑳ of the smart entrance control unit
- to theft warning relay terminal ②.

With power and ground supplied, power to inhibitor switch is interrupted. The starter motor will not crank and the engine will not start.

Power is supplied at all times

- through 7.5A fuse (No. ⑫), located in fuse and fusible link box
- to theft warning lamp relay terminal ① and
- to theft warning horn relay terminal ①.

When the theft warning system is triggered, ground is supplied intermittently

- from terminal ⑧ of the smart entrance control unit
- to theft warning lamp relay terminal ② and
- to theft warning horn relay terminal ②.

The headlamps flash and the horn sounds intermittently.

The alarm automatically turns off after 2 or 3 minutes but will reactivate if the vehicle is tampered with again.

THEFT WARNING SYSTEM DEACTIVATION

To deactivate the theft warning system, a door, the back door or the glass hatch must be unlocked with the key or remote controller.

When the key is used to unlock the door, smart entrance control unit terminal ⑳ receives a ground signal

- from terminal ① of the LH key cylinder switch
- from terminal ③ of the RH key cylinder switch
- from terminal ② of the back door key cylinder switch.

When the key is used to open the glass hatch, smart entrance control unit terminal ㉑ receives a ground signal from terminal ③ of the back door key cylinder switch.

When the smart entrance control unit receives either one of these signals or unlock signal from remote controller, the theft warning system is deactivated. (Disarmed phase)

PANIC ALARM OPERATION

Multi-remote control system may or may not operate theft warning system (horn and headlamps) as required.

When the multi-remote control system is triggered, ground is supplied intermittently.

- from smart entrance control unit terminal ⑧
- to theft warning lamp relay terminal ② and
- to theft warning horn relay terminal ②.

The headlamp flashes and the horn sounds intermittently.

The alarm automatically turns off after 30 seconds or when smart entrance control unit receives any signal from multi-remote controller.

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT


HA

EL

IDX


THEFT WARNING SYSTEM

Schematic

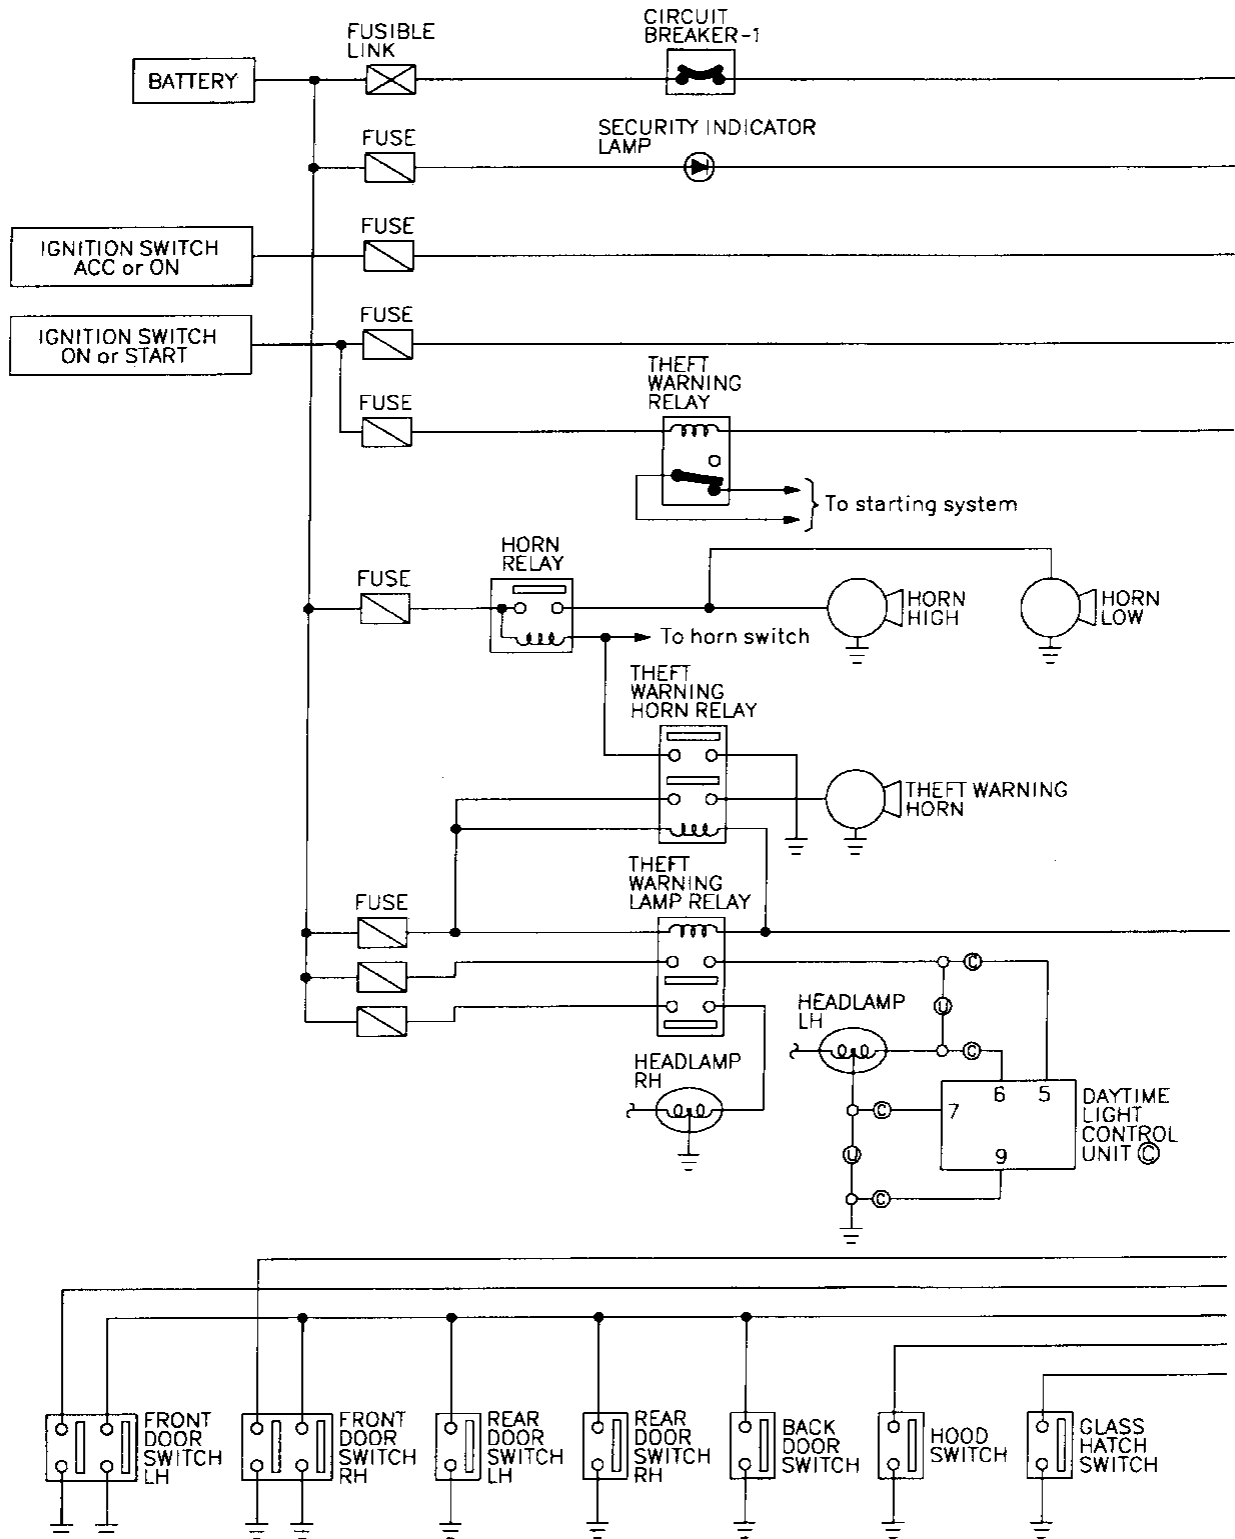

THEFT WARNING SYSTEM

Schematic (Cont'd)

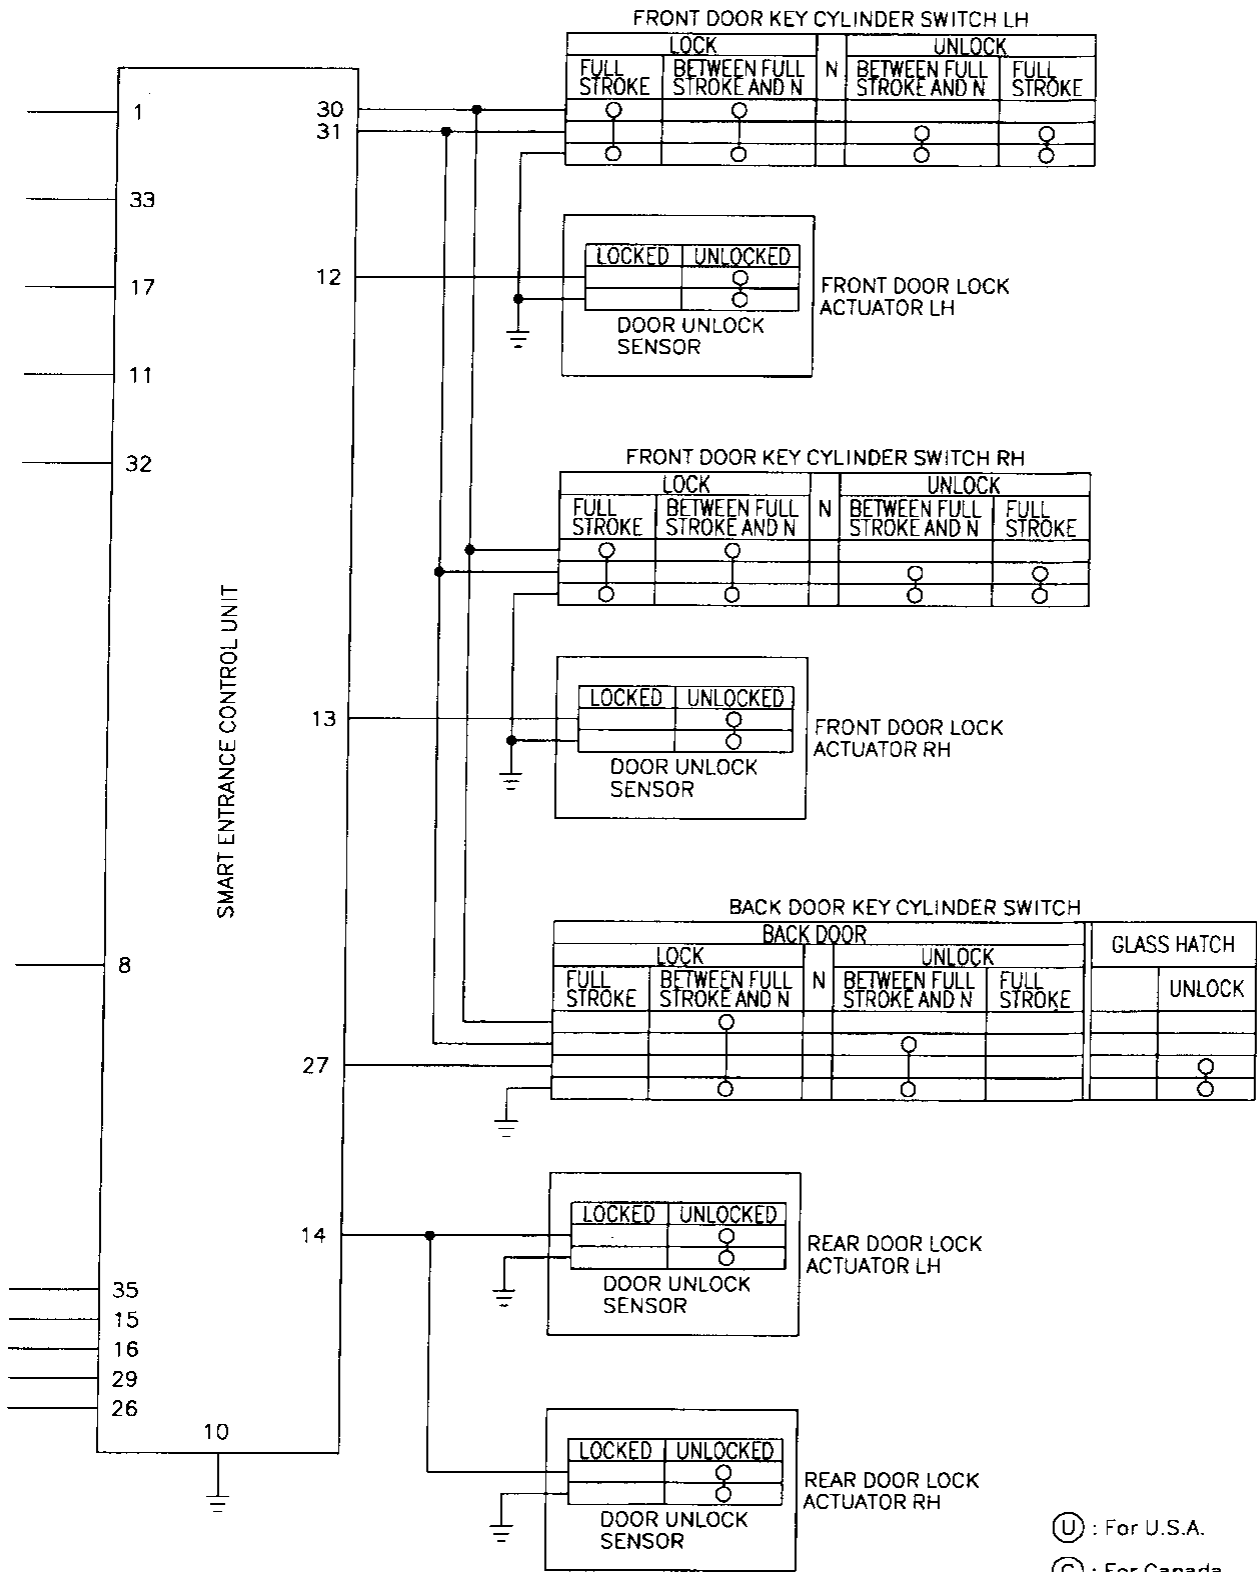


Ⓢ : For U.S.A.
 Ⓢ : For Canada

GI
 MA
 EM
 LC
 EC
 FE
 AT
 TF
 PD
 FA
 RA
 BR
 ST
 RS
 BT
 HA
EL
 IDX

THEFT WARNING SYSTEM

Wiring Diagram — THEFT —


EL-THEFT-01

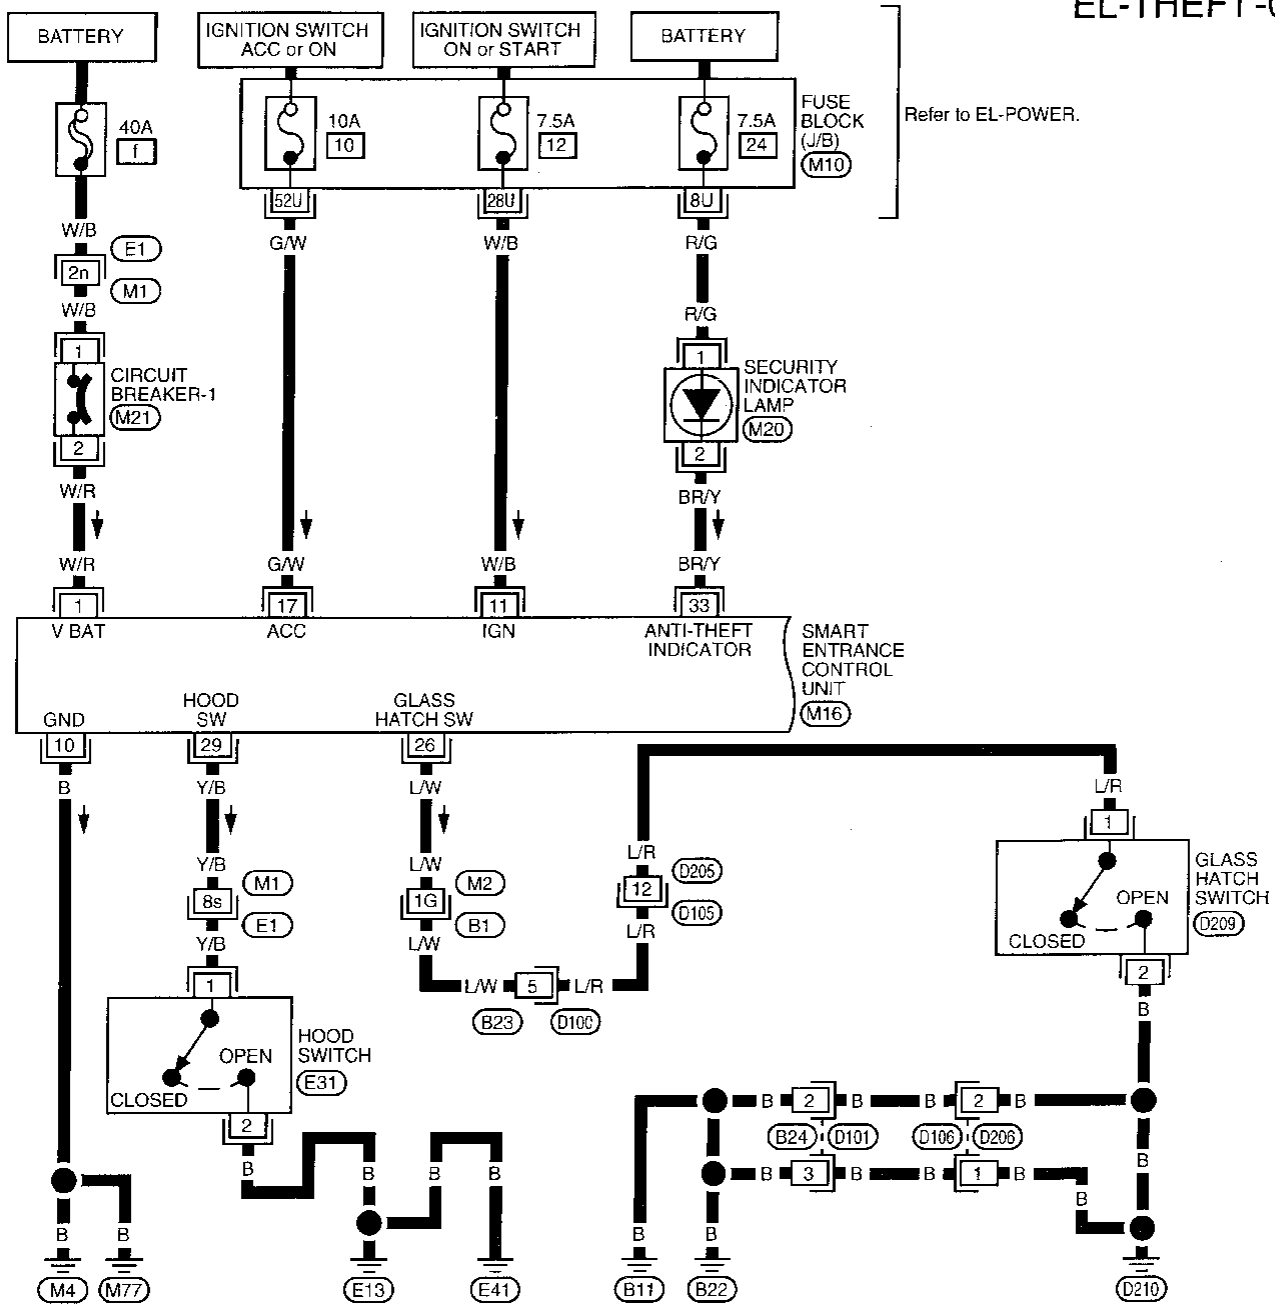

Refer to EL-POWER.

SMART ENTRANCE CONTROL UNIT (M16)


Refer to last page (Foldout page).

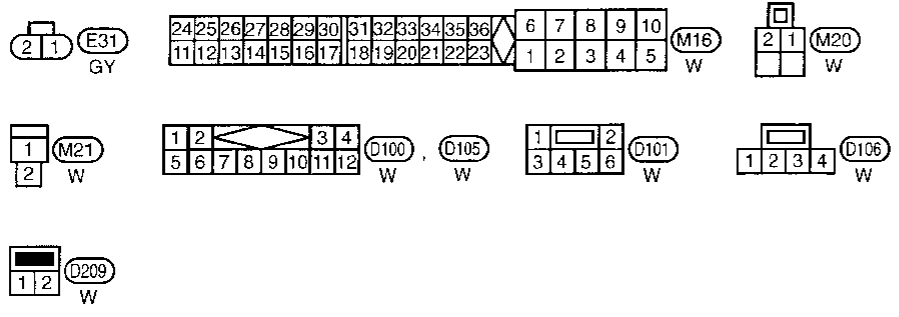

- E1 . M1
- M2 . B1
- M10





THEFT WARNING SYSTEM

Wiring Diagram — THEFT — (Cont'd)

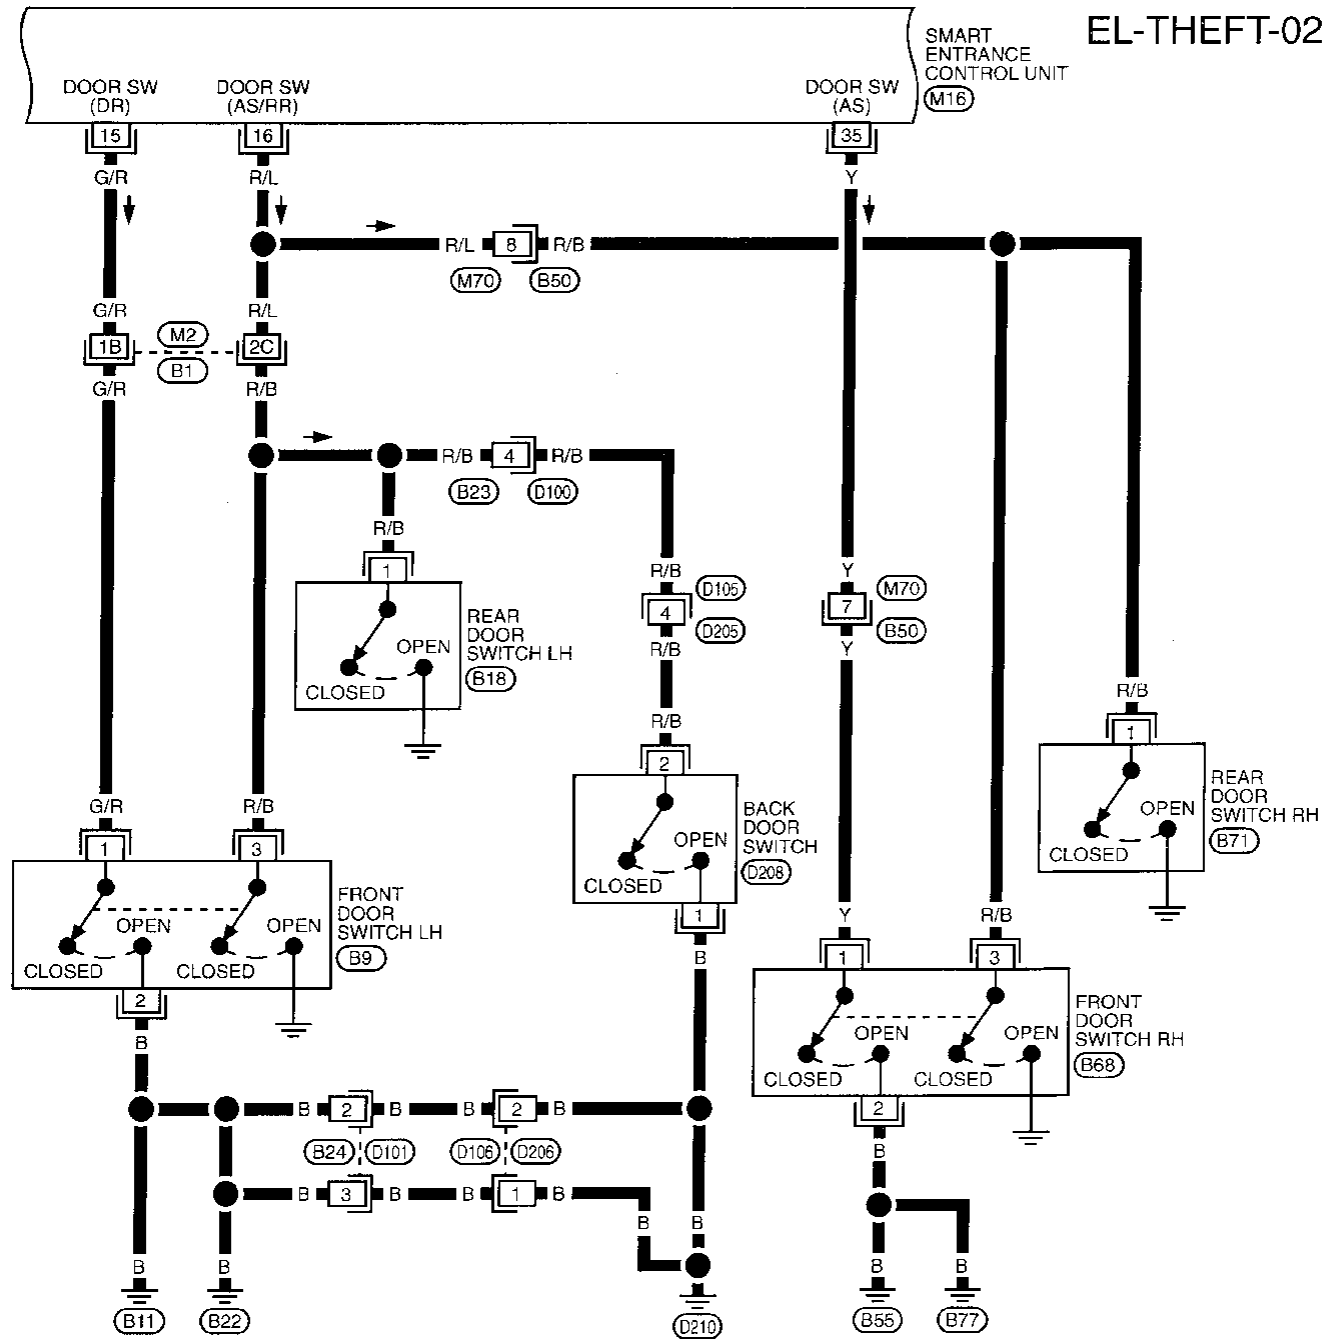

Refer to last page (Foldout page).







(M2), (B1)



THEFT WARNING SYSTEM

Wiring Diagram — THEFT — (Cont'd)

EL-THEFT-03





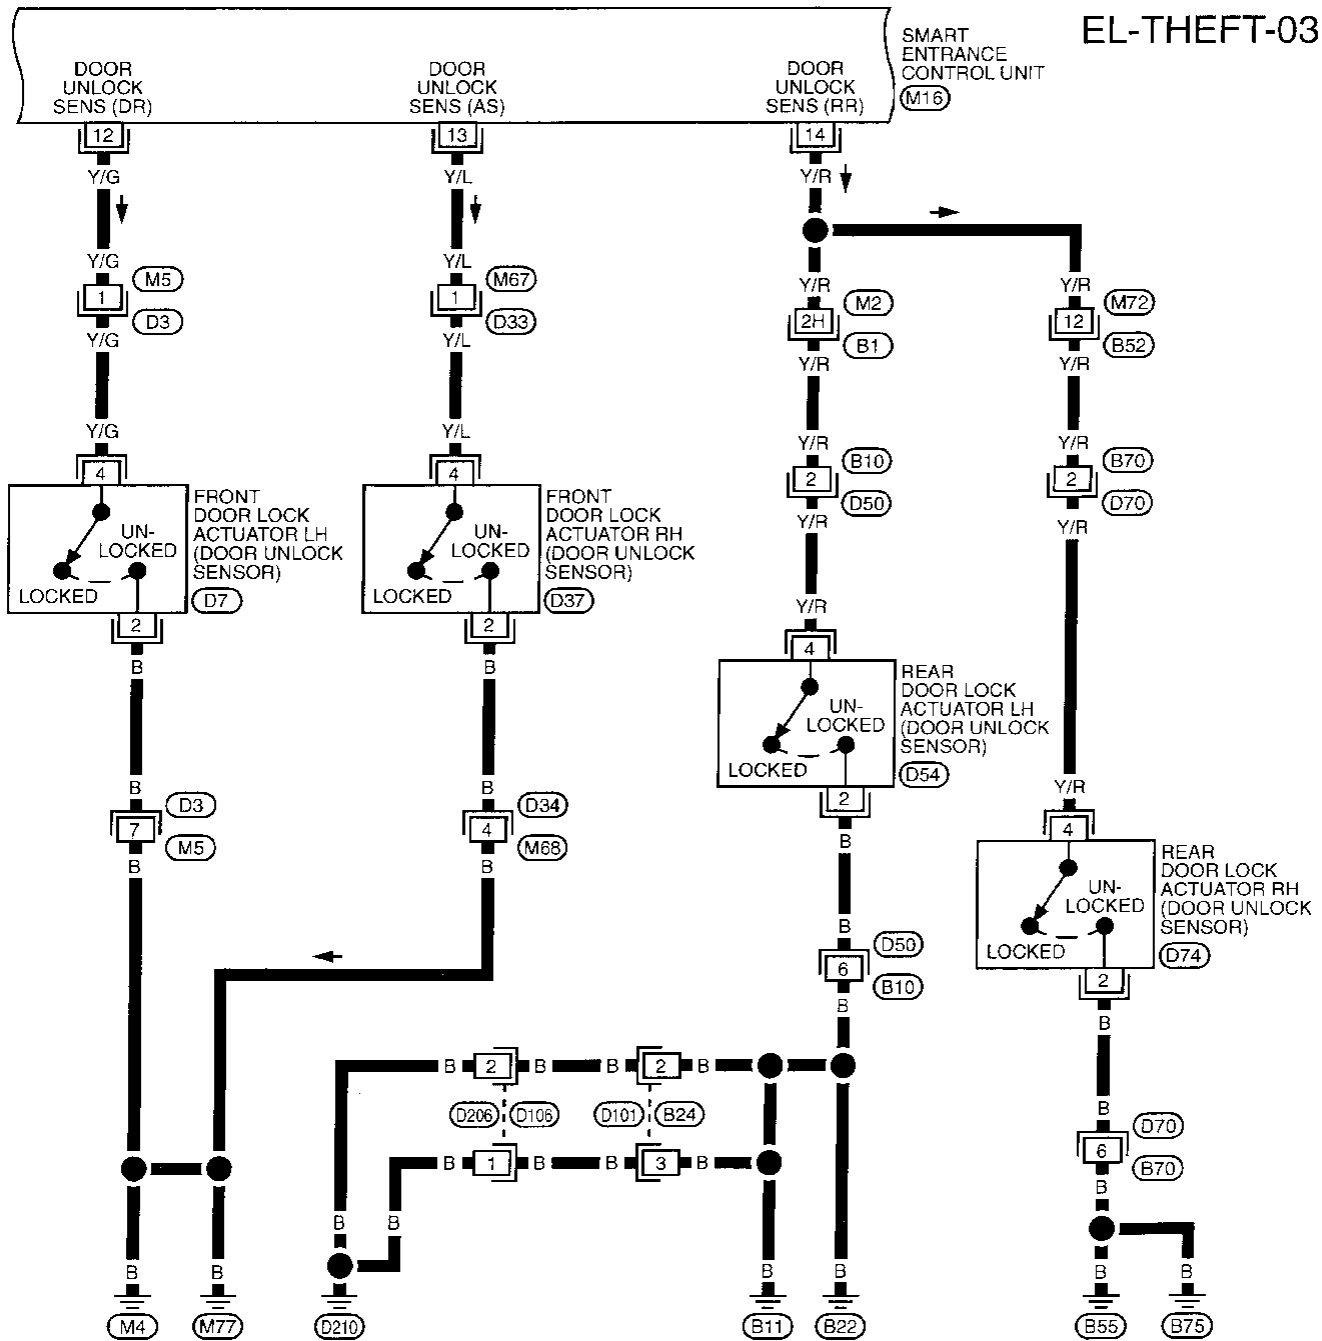


Refer to last page (Foldout page).
 (M2), (B1)

THEFT WARNING SYSTEM

Wiring Diagram — THEFT — (Cont'd)

EL-THEFT-04

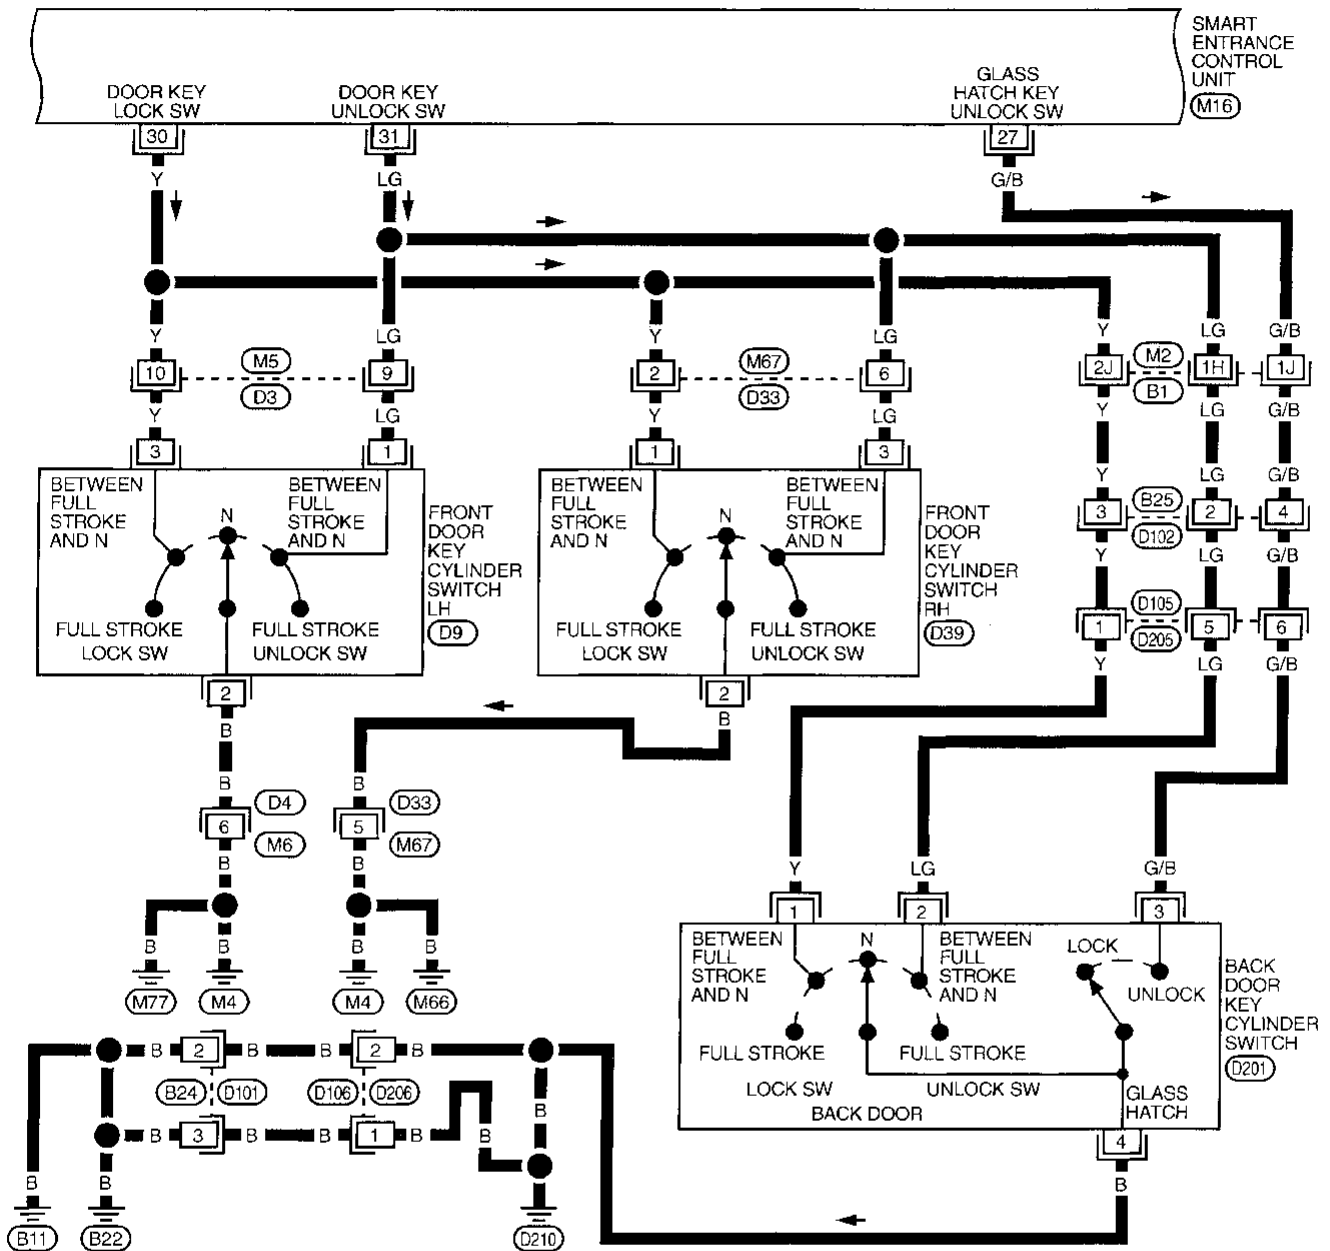

Refer to last page (Foldout page).

(M2), (B1)

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA


EL

IDX

THEFT WARNING SYSTEM



Wiring Diagram — THEFT — (Cont'd)

EL-THEFT-05

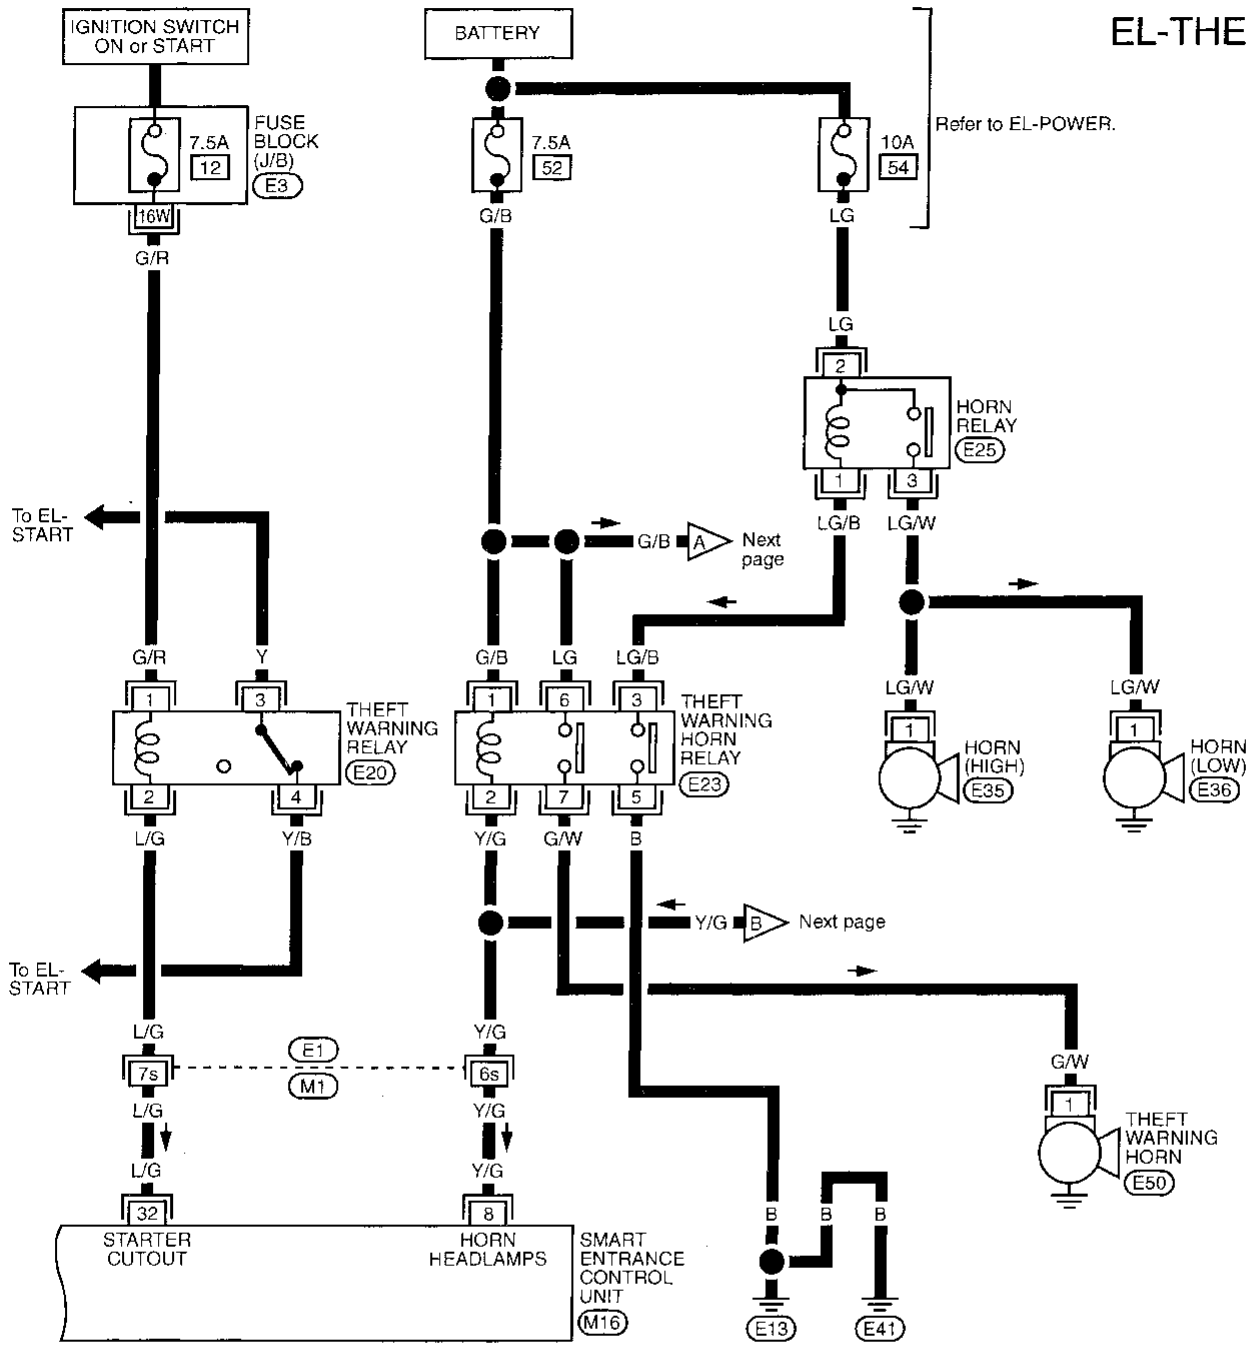

Refer to last page (Foldout page).





(E1), (M1)
(E3)



THEFT WARNING SYSTEM

Wiring Diagram — THEFT — (Cont'd)

EL-THEFT-06

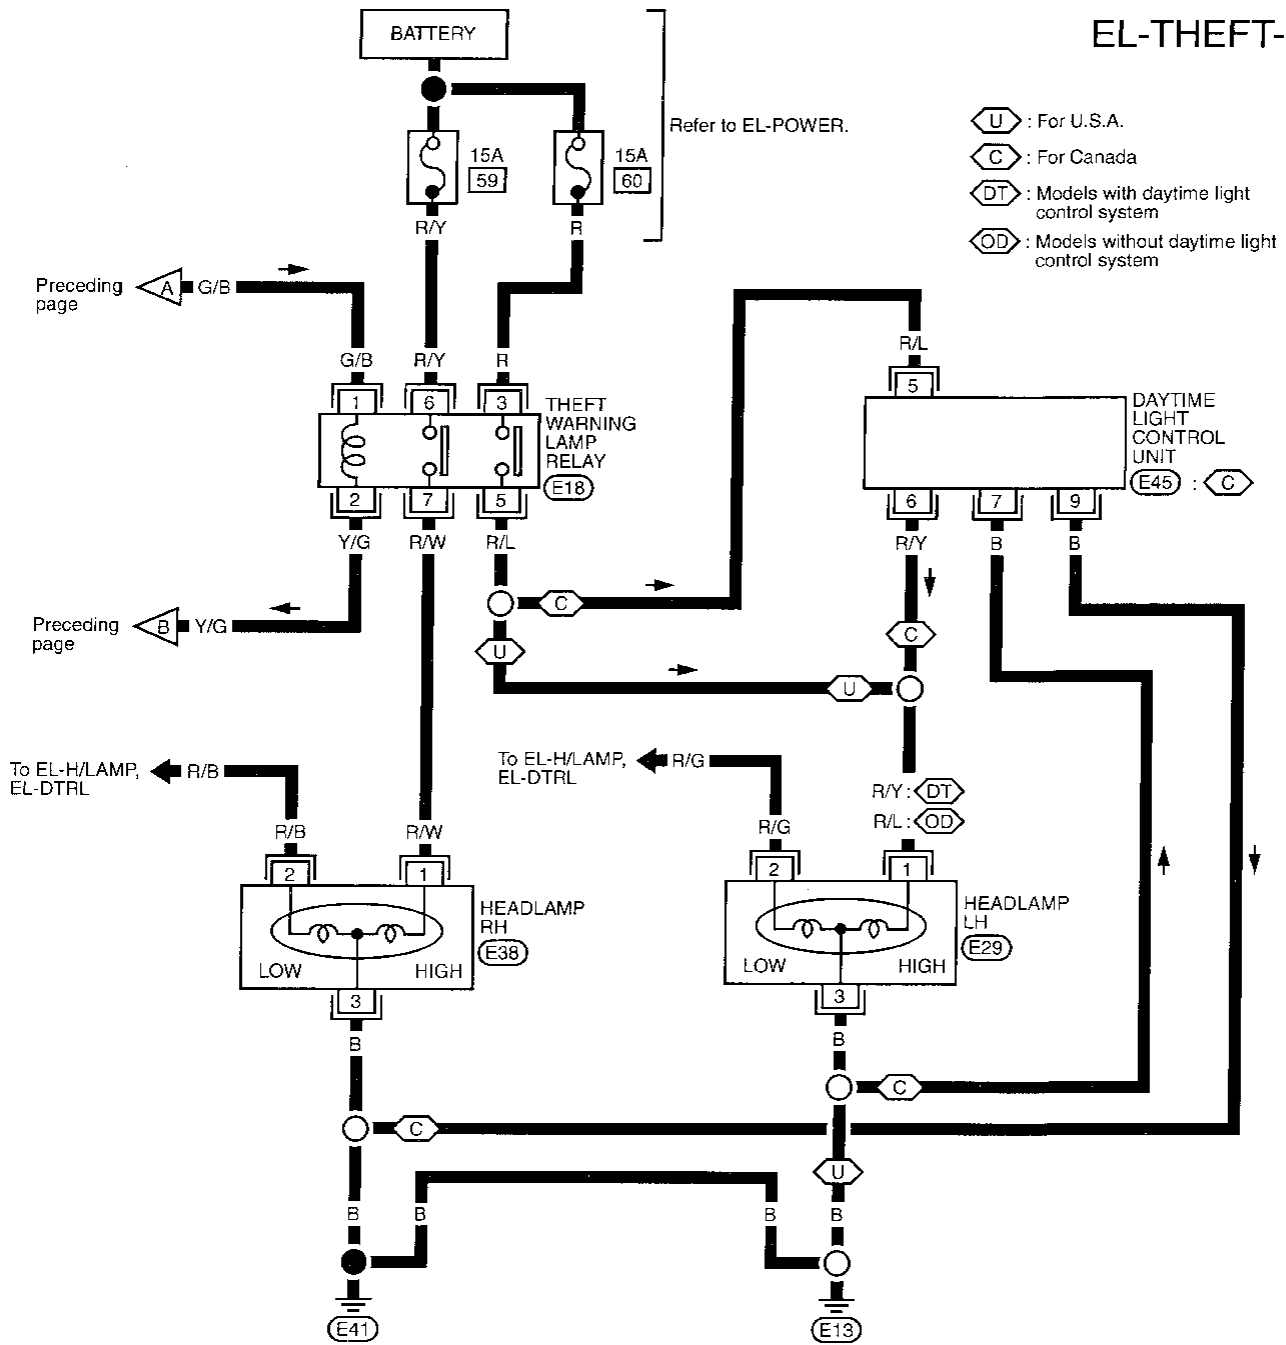


GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

THEFT WARNING SYSTEM

Trouble Diagnoses

PRELIMINARY CHECK

The system operation is canceled by turning ignition switch to "ACC" at any step between START and ARMED in the following flow chart.

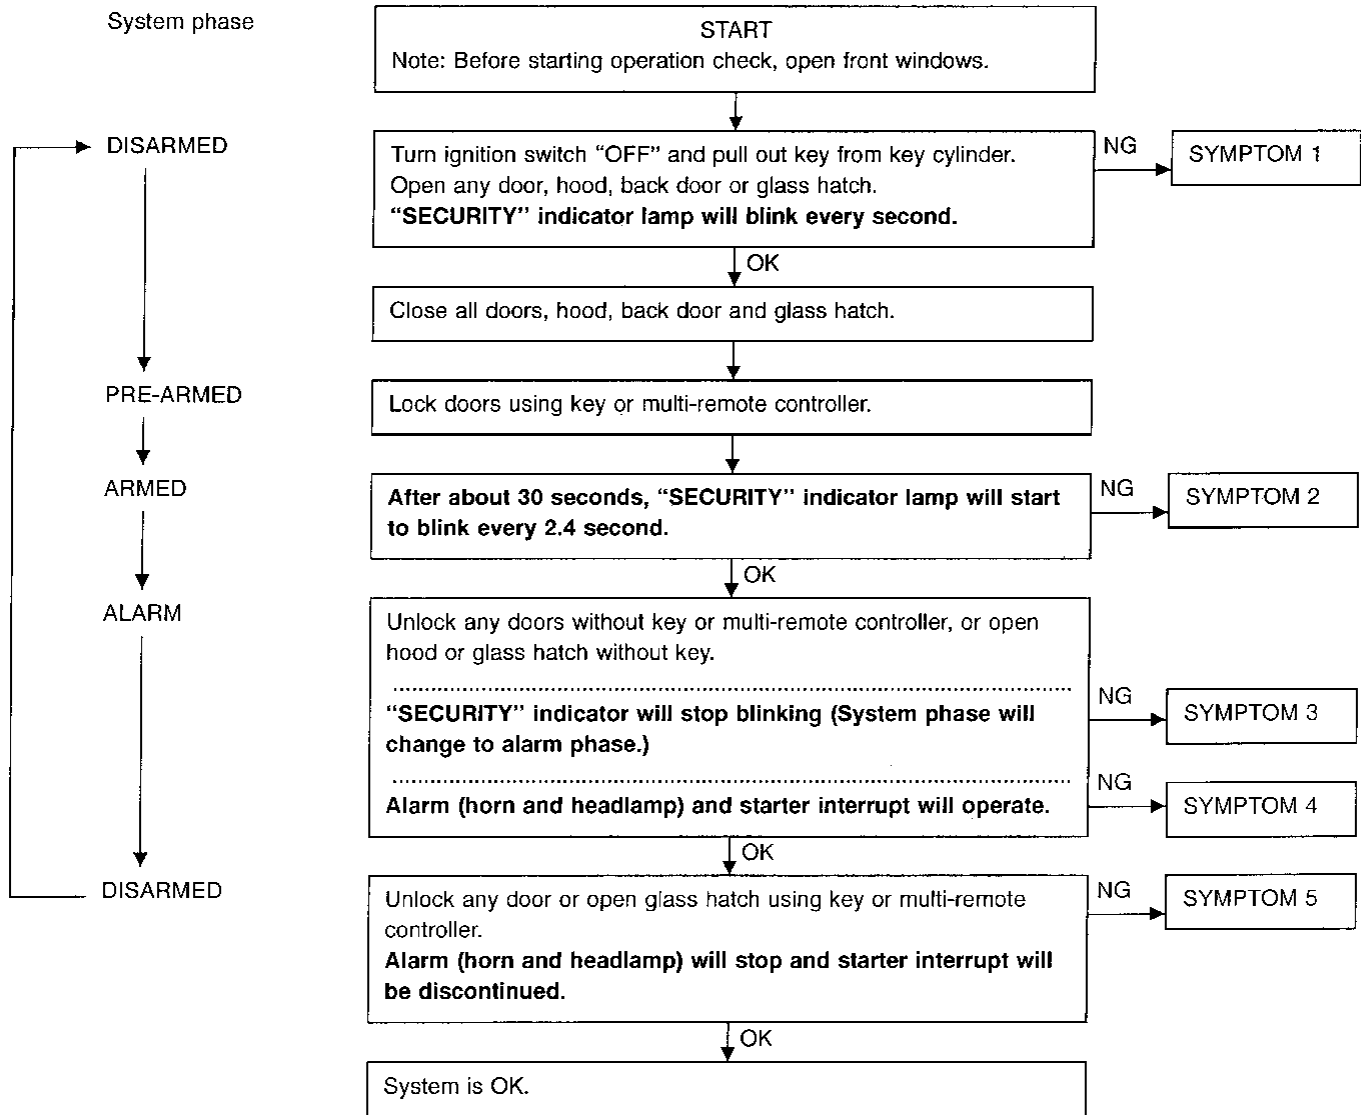

After performing preliminary check, go to symptom chart in next page.

THEFT WARNING SYSTEM

Trouble Diagnoses (Cont'd)

Before starting trouble diagnoses below, perform preliminary check, EL-214.

Symptom numbers in the symptom chart correspond with those of preliminary check.

SYMPTOM CHART

PROCEDURE		Power supply and ground circuit check			Diagnostic procedure								—
		—	—	—	—	—	—	—	—	—	—	—	
REFERENCE PAGE		EL-214	EL-216	EL-216	EL-217	EL-220	EL-221	EL-222	EL-223	EL-224	EL-225	EL-226	EL-193
SYMPTOM		Preliminary check	Power supply circuit check	Ground circuit check	Diagnostic Procedure 1 (Door, hood and glass hatch switch check)	Diagnostic Procedure 2 (Security indicator lamp check)	Diagnostic Procedure 3 (Door unlock sensor check)	Diagnostic Procedure 4 (Door key cylinder switch check)	Diagnostic Procedure 5 (Back door key cylinder switch check)	Diagnostic Procedure 6 (Theft warning horn alarm check)	Diagnostic Procedure 7 (Theft warning headlamp alarm check)	Diagnostic Procedure 8 (Starter interrupt system check)	Check "MULTI-REMOTE CONTROL" system.
1	Theft warning indicator does not turn "ON" or blinking.	X	X	X		X							
2	Theft warning system cannot be set by ...	All items	X	X	X	X		X					
		Door out side key	X	X	X				X				
		Back door key								X			
3	*1 Theft warning system does not alarm when ...	Any door is opened.	X	X	X	X							
		Any door is unlocked without using key or multi-remote controller	X	X	X			X					
4	Theft warning alarm does not activate.	All function	X	X	X	X		X					
		Horn alarm	X	X	X					X			
		Headlamp alarm	X	X	X						X		
		Starter interrupt	X	X	X							X	
5	Theft warning system cannot be canceled by ...	Door out side key	X	X	X			X					
		Back door key	X	X	X				X				
		Multi-remote control	X	X	X								X

X : Applicable


*1: Make sure the system is in the armed phase.

THEFT WARNING SYSTEM


Trouble Diagnoses (Cont'd)

POWER SUPPLY AND GROUND CIRCUIT CHECK

Power supply circuit check

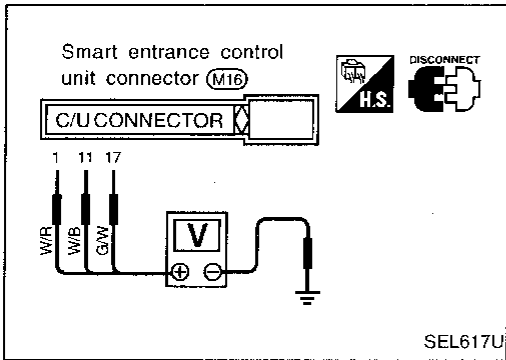

Terminals		Ignition switch position		
⊕	⊖	OFF	ACC	ON
①	Ground	Battery voltage	Battery voltage	Battery voltage
⑪	Ground	0V	0V	Battery voltage
⑰	Ground	0V	Battery voltage	Battery voltage

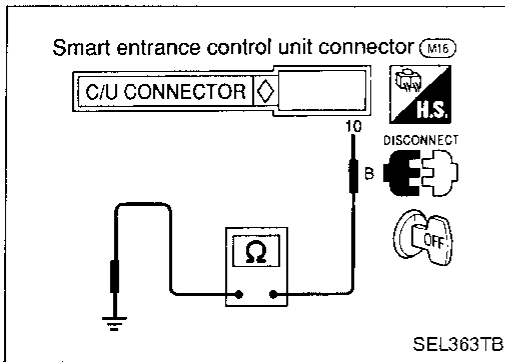


Ground circuit check

Terminals	Continuity
⑩ - Ground	Yes

THEFT WARNING SYSTEM


Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 1-(1) (Door switch check)

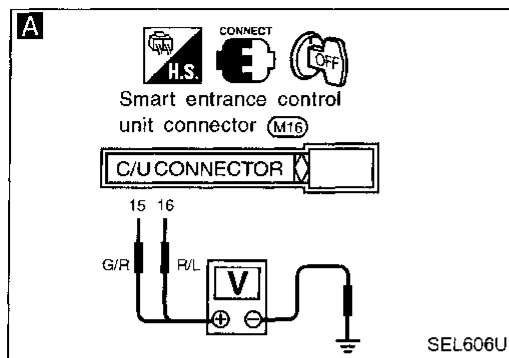

- 1) Turn ignition switch "OFF" and remove key from key cylinder.
- 2) Close all doors, hood and glass hatch. "SECURITY" Indicator lamp should turn off.
- 3) Open any passenger door or back door. "SECURITY" indicator lamp should blink every second.

OK → Door switch is OK.

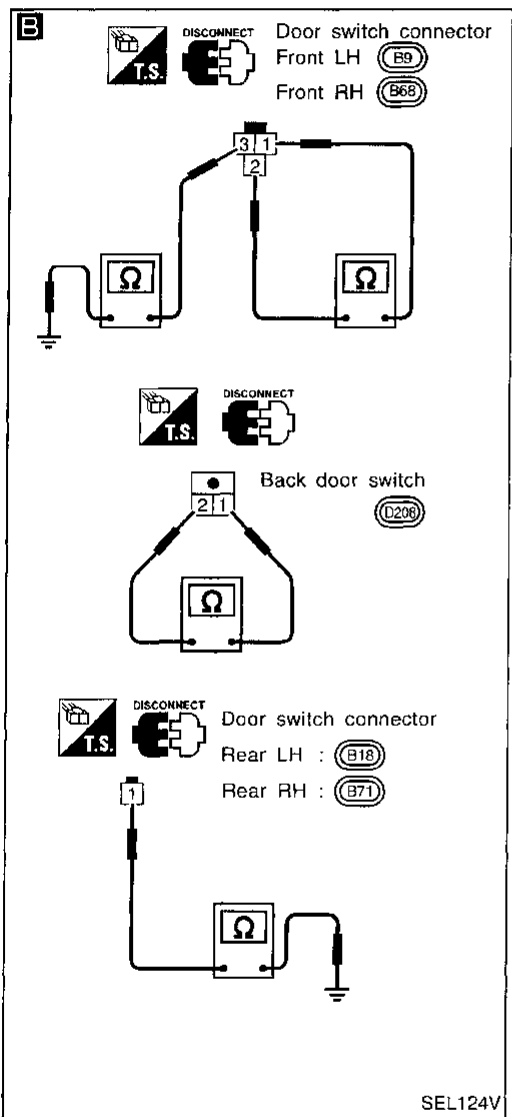

A

CHECK DOOR SWITCH INPUT SIGNAL.
Check voltage between control unit terminals ⑮ or ⑯ and ground.

	Terminals		Condi- tion	Voltage [V]
	⊕	⊖		
Front LH door switch	⑮	ground	Open	0
			Closed	Approx. 12
Other door switches	⑯	ground	Open	0
			Closed	Approx. 12

Refer to wiring diagram in EL-209.

OK → Door switch is OK.

B

CHECK DOOR SWITCH.

- 1) Disconnect door switch connector.
- 2) Check continuity between door switch terminals.

	Terminals	Condition	Continuity
Front door switch	① - ②, ③ - ground	Closed	No
		Open	Yes
Back door switch	② - ①	Closed	No
		Open	Yes
Rear door switch	① - ground	Closed	No
		Open	Yes

NG → Replace door switch.


- Check the following.
- Door switch ground circuit (Front, back door) or door switch ground condition
 - Harness for open or short between control unit and door switch

GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

THEFT WARNING SYSTEM


Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 1-(2) (Hood switch check)

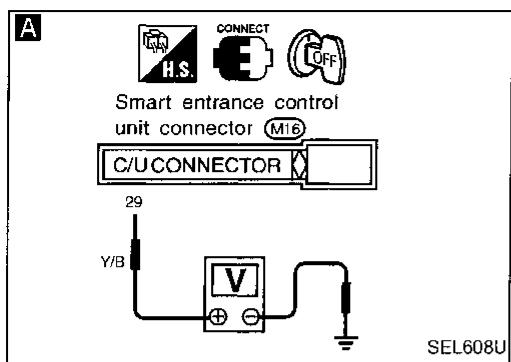

- 1) Turn ignition switch "OFF" and remove key from key cylinder.
- 2) Close all doors, hood and glass hatch. "SECURITY" indicator lamp should turn off.
- 3) Open hood. "SECURITY" indicator lamp should blink every second.

OK → Hood switch is OK.

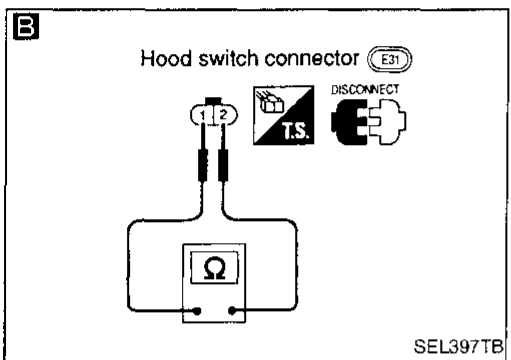

Check hood switch and hood fitting condition.

NG → Adjust installation of hood switch or hood.

A

CHECK HOOD SWITCH INPUT SIGNAL.
Check voltage between control unit terminal 29 and ground.

OK → Hood switch is OK.

Condition	Voltage [V]
Hood is open.	0
Hood is closed.	Approx. 12

Refer to wiring diagram in EL-208.

NG

B

CHECK HOOD SWITCH.

- 1) Disconnect hood switch connector.
- 2) Check continuity between hood switch terminals.

NG → Replace hood switch.

Terminals	Condition	Continuity
① - ②	Pushed	No
	Released	Yes

OK


Check the following.

- Hood switch ground circuit
- Harness for open or short between control unit and hood switch

THEFT WARNING SYSTEM


Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 1-(3) (Glass hatch switch check)

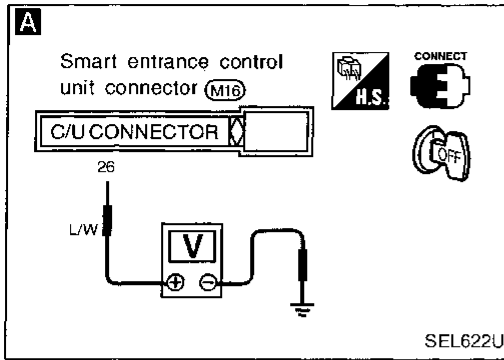

- 1) Turn ignition switch "OFF" and remove key from key cylinder.
- 2) Close all doors, hood and glass hatch. "SECURITY" indicator lamp should turn off.
- 3) Open glass hatch. "SECURITY" indicator lamp should blink every second.

OK → Glass hatch switch is OK.

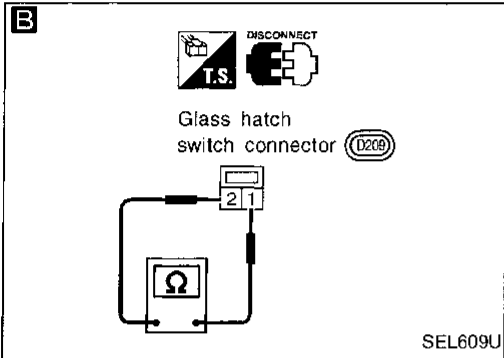

- A**
- CHECK GLASS HATCH SWITCH INPUT SIGNAL.
- Check voltage between control unit terminal ② and ground.

Condition	Voltage [V]
Glass hatch is open.	Approx. 0
Glass hatch is closed.	Approx. 12

Refer to wiring diagram in EL-208.

OK → Glass hatch switch is OK.

- B**
- CHECK GLASS HATCH SWITCH.
- 1) Disconnect glass hatch switch connector.
 - 2) Check continuity between glass hatch switch terminals.

Terminals	Condition	Continuity
① - ②	Closed	No
	Open	Yes

NG → Replace glass hatch switch.

- OK
- Check the following.
- Glass hatch switch ground circuit
 - Harness for open or short between control unit and glass hatch switch

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA




EL

IDX

THEFT WARNING SYSTEM

Trouble Diagnoses (Cont'd)



DIAGNOSTIC PROCEDURE 2 (Security indicator lamp check)

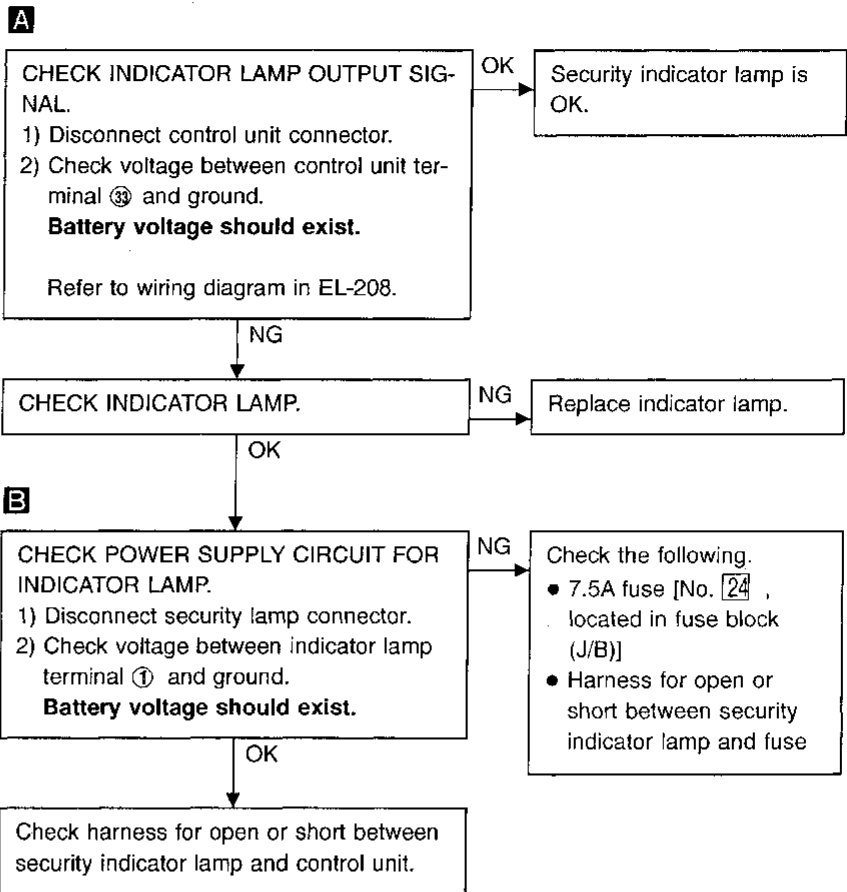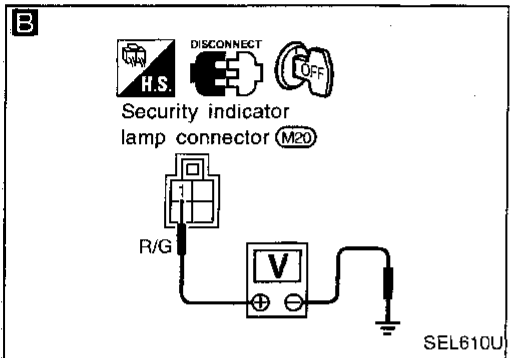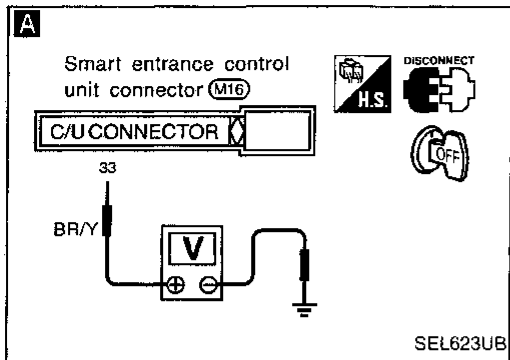

THEFT WARNING SYSTEM

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 3 (Door unlock sensor check)

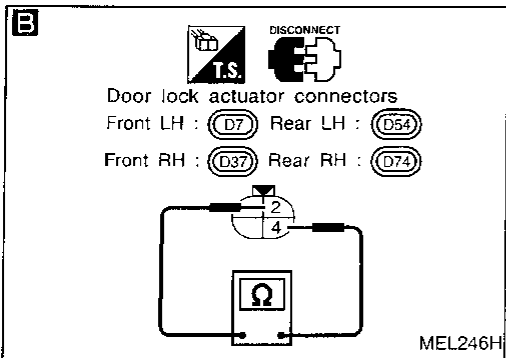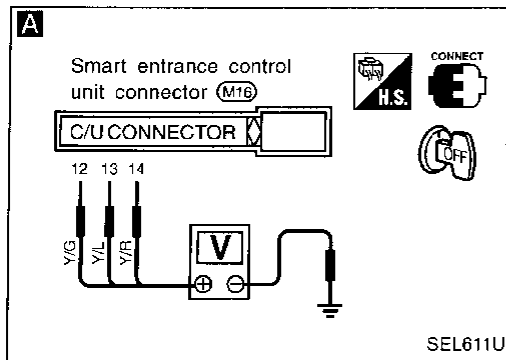

A

CHECK DOOR UNLOCK SENSOR INPUT SIGNAL.
Check voltage between control unit terminals ⑫, ⑬ or ⑭ and ground.

OK → Door unlock sensor is OK.

	Terminals		Condition	Voltage [V]
	⊕	⊖		
Front LH door	⑫	Ground	Locked	Approx. 12
			Unlocked	0
Front RH door	⑬	Ground	Locked	Approx. 12
			Unlocked	0
Rear door	⑭	Ground	Locked	Approx. 12
			Unlocked	0

Refer to wiring diagram in EL-210.

NG

B

CHECK DOOR UNLOCK SENSOR.
1) Disconnect door unlock sensor connector.
2) Check continuity between door unlock sensor terminals.

NG → Replace door unlock sensor.

Terminals	Condition	Continuity
④ - ②	Locked	No
	Unlocked	Yes

OK

Check the following.


- Door unlock sensor ground circuit
- Harness for open or short between control unit and door unlock sensor

CI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

THEFT WARNING SYSTEM

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 4 (Door key cylinder switch check)

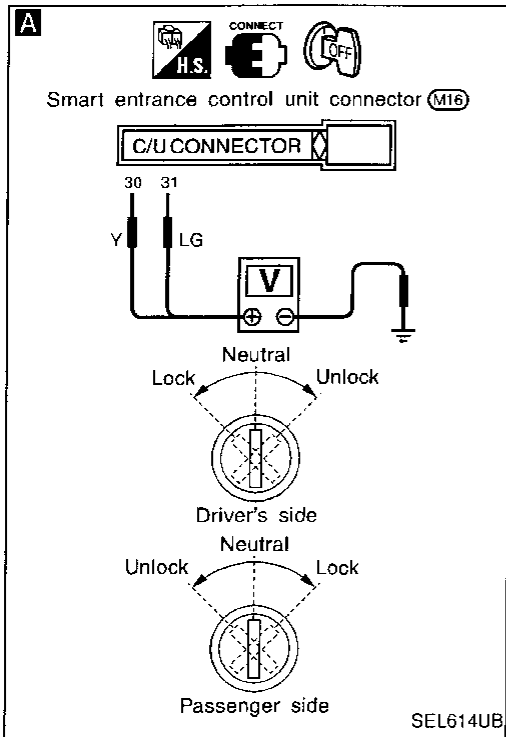

A

CHECK DOOR KEY CYLINDER SWITCH INPUT SIGNAL (LOCK/UNLOCK SIGNAL).

Check voltage between control unit terminals ③① or ③② and ground.

Terminals		Key position	Voltage [V]
⊕	⊖		
③①	Ground	Neutral	Approx. 12
		Lock	0
③②	Ground	Neutral	Approx. 12
		Unlock	0

Refer to wiring diagram in EL-211.

OK → Door key cylinder switch is OK.


B

CHECK DOOR KEY CYLINDER SWITCH.

- 1) Disconnect door key cylinder switch connector.
- 2) Check continuity between door key cylinder switch terminals.

Terminals	Key position	Continuity
LH: ③ - ②	Neutral	No
RH: ① - ②	Lock	Yes
LH: ① - ②	Neutral	No
RH: ③ - ②	Unlock	Yes

NG → Replace door key cylinder switch.

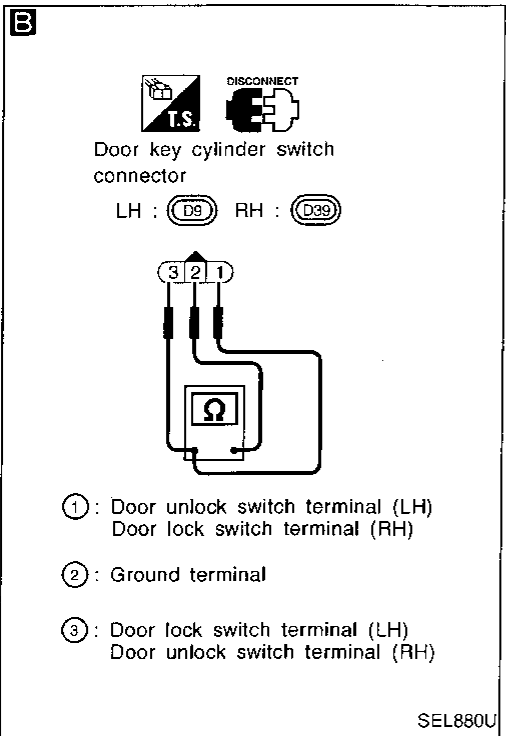

OK

Check the following.

- Door key cylinder switch ground circuit
- Harness for open or short between control unit and door key cylinder switch


THEFT WARNING SYSTEM

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 5

(Back door key cylinder switch check)

GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

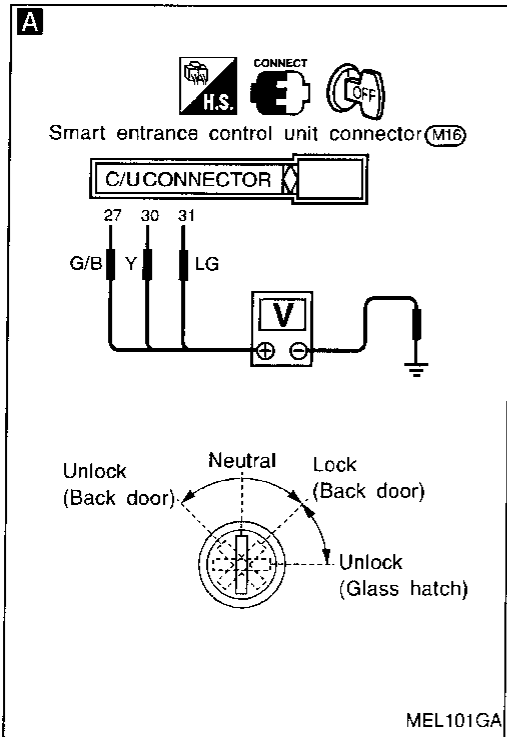

A


CHECK BACK DOOR KEY CYLINDER SWITCH INPUT SIGNAL (LOCK/UNLOCK SIGNAL).

Check voltage between control unit terminals ⑩, ⑪ or ⑫ and ground.

OK → Back door key cylinder switch is OK.

	Terminals		Key position	Voltage [V]
	⊕	⊖		
Back door	⑩	Ground	Neutral	Approx. 12
			Between neutral and lock	0
Back door	⑪	Ground	Neutral	Approx. 12
			Between neutral and unlock	0
Glass hatch	⑫	Ground	Neutral	Approx. 12
			Between lock and unlock	0

Refer to wiring diagram in EL-211.

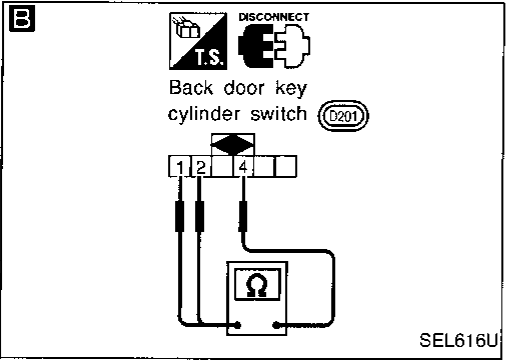

NG


B C

CHECK BACK DOOR KEY CYLINDER SWITCH.

- 1) Disconnect back door key cylinder switch connector.
- 2) Check continuity between back door key cylinder switch terminals.

NG → Replace back door key cylinder switch.

Key position	Terminals			
	①	②	③	④
Between neutral and lock (Back door)	○			○
Between neutral and unlock (Back door)		○	○	
Between lock (Back door) and unlock (glass hatch)			○	○

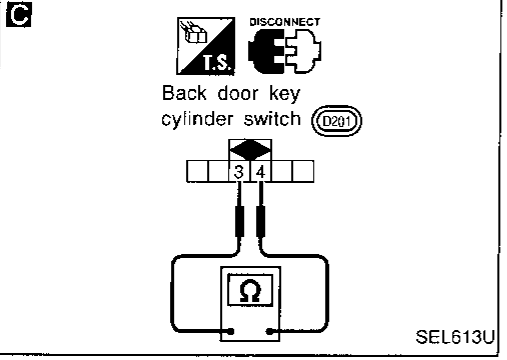

OK








Check the following.

- Back door key cylinder switch ground circuit
- Harness for open or short between control unit and back door key cylinder switch

THEFT WARNING SYSTEM

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 6 (Theft warning horn alarm check)



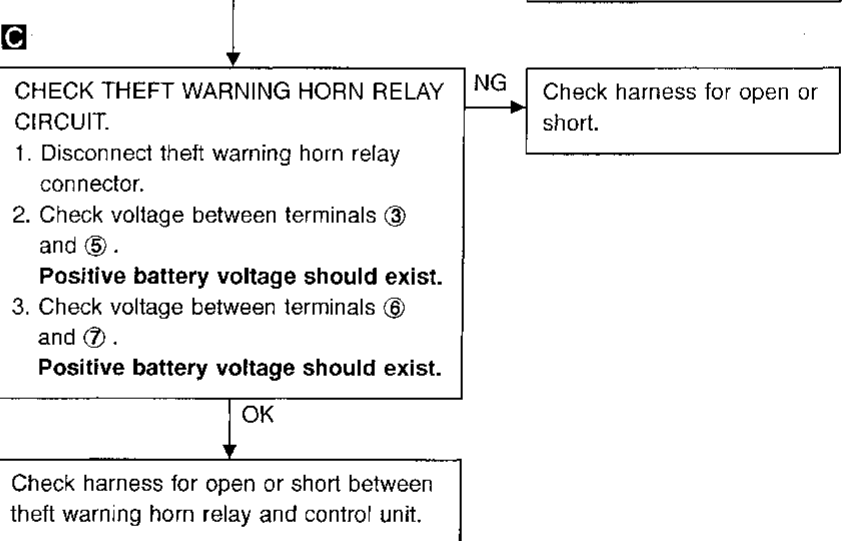
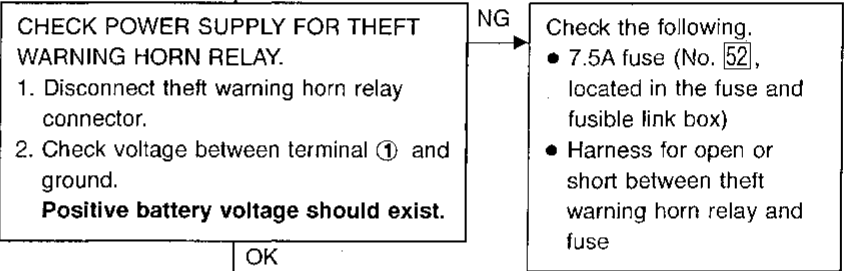
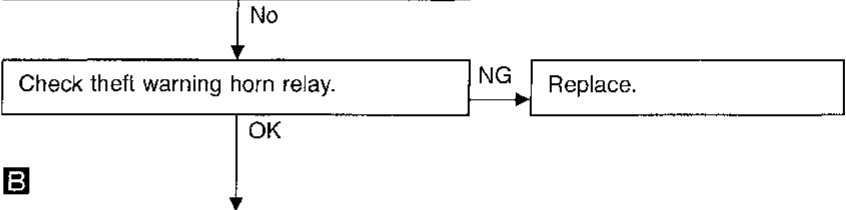
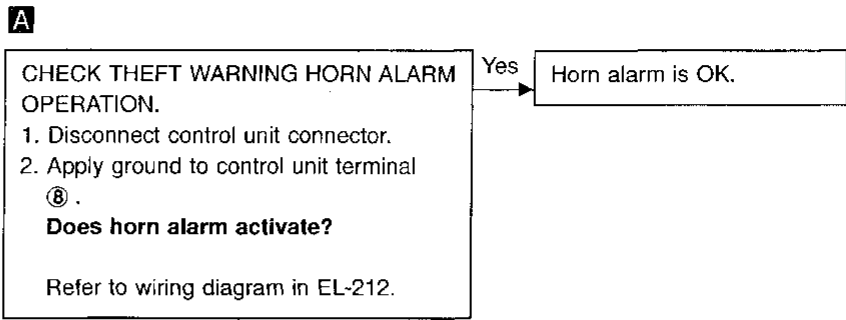
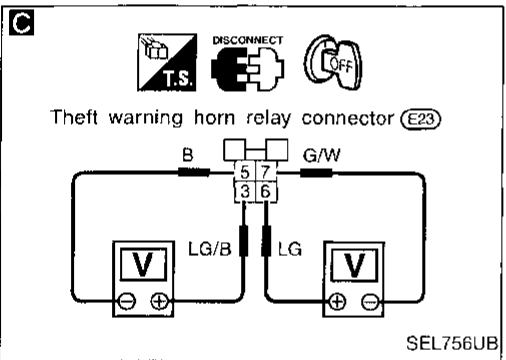
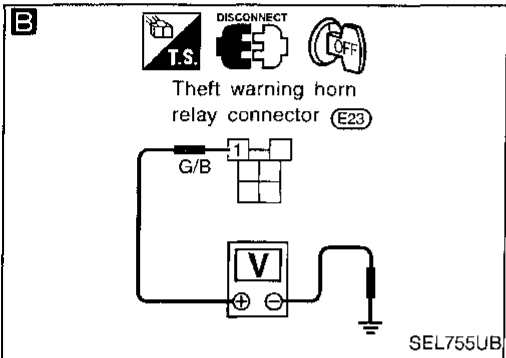
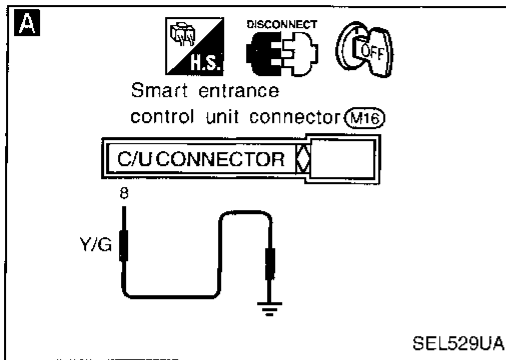


THEFT WARNING SYSTEM

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 7

(Theft warning headlamp alarm check)

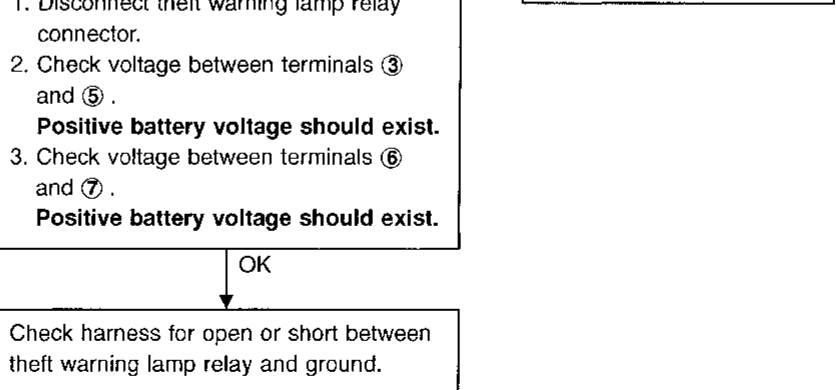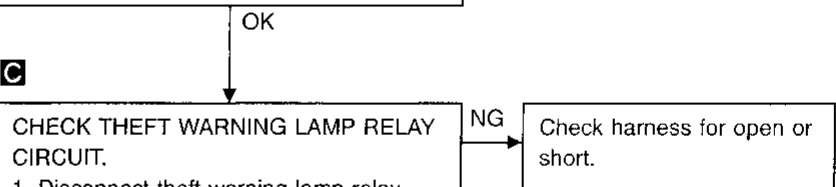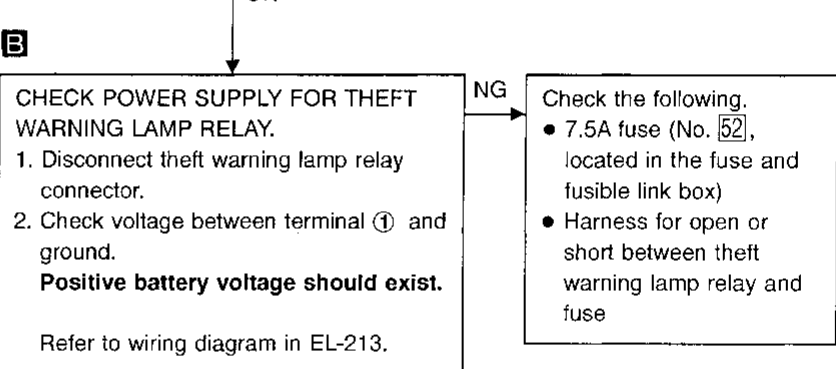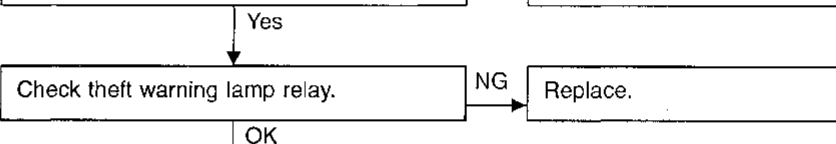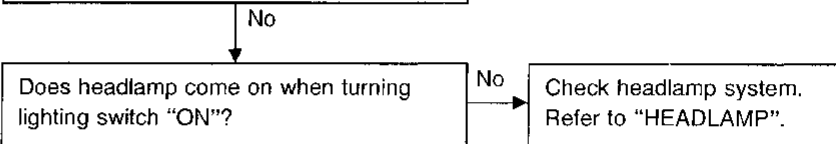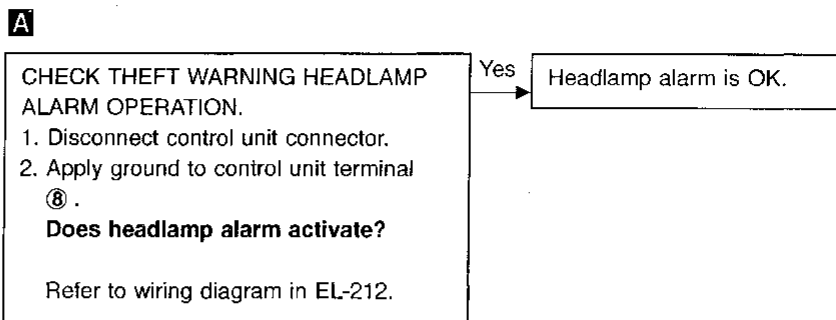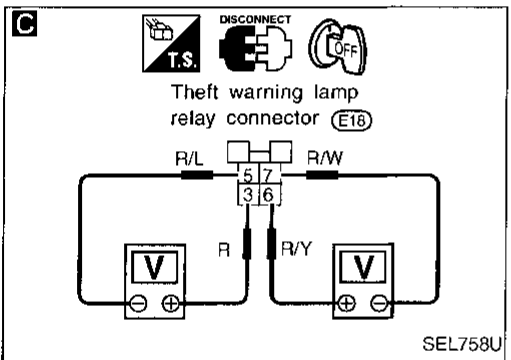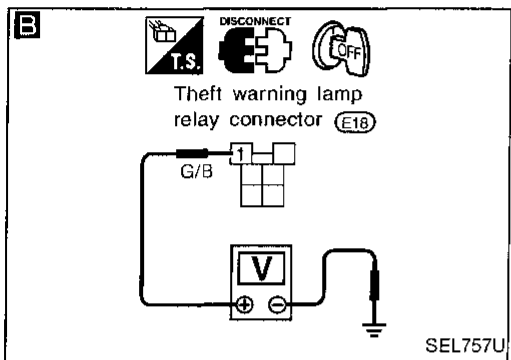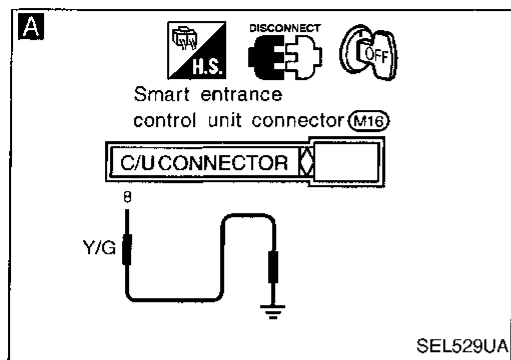


GI
MA
EM
LC
EC
PE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

THEFT WARNING SYSTEM

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 8 (Starter interrupt system check)

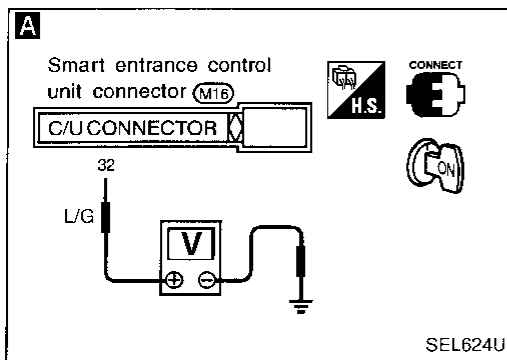

A


CHECK STARTER MOTOR CUT-OUT SIGNAL.

1. Turn ignition switch "ON".
2. Check voltage between control unit terminal ③② and ground.

Condition	Voltage [V]
Except starter killed phase	Approx. 12
Starter killed phase	0

Refer to wiring diagram in EL-212.

- NG
- Check the following.
- 7.5A fuse [No. 12], located in fuse block (J/B)
 - Harness for open or short between theft warning relay and fuse
 - Harness for open or short between control unit and theft warning relay

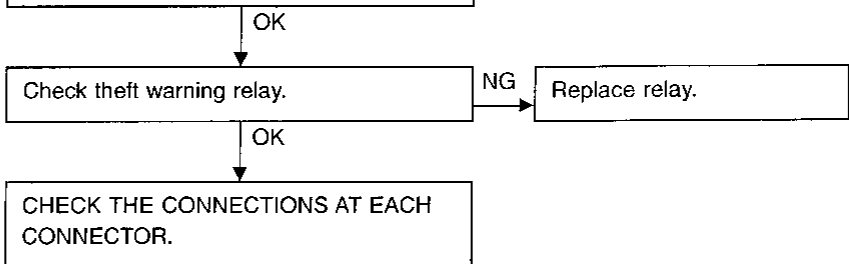

SMART ENTRANCE CONTROL UNIT

Description

The following systems are controlled by the smart entrance control unit.

- Warning buzzer
- Rear window defogger timer
- Power door lock
- Multi-remote control system
- Theft warning system

For detailed description and wiring diagrams, refer to the relevant pages for the each system.

The control unit receives data from the switches and sensors to control their corresponding system relays and actuators.

System	Input	Output
Power door lock	Door lock and unlock switch	Door lock actuator
Multi-remote control	Key switch (Insert) Ignition switch (ACC) Door switch Door unlock sensor Antenna (remote controller signal)	Theft warning horn relay Theft warning lamp relay Interior lamp Multi-remote control relay 1 and 2 Door lock actuator
Warning buzzer	Key switch (Insert) Ignition switch (ON) Lighting switch (1st) Seat belt switch Front door switch LH	Warning buzzer
Rear window defogger timer	Ignition switch (ON) Rear window defogger switch	Rear window defogger relay
Theft warning	Ignition switch (ACC, ON) Door switch Hood switch Glass hatch switch Door key cylinder switch (lock/unlock) Back door key cylinder switch (lock/unlock/ glass hatch unlock) Door unlock sensor	Theft warning horn relay Theft warning lamp relay Theft warning relay (Starter interrupt) Security indicator

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT


HA

EL

IDX


SMART ENTRANCE CONTROL UNIT

Schematic

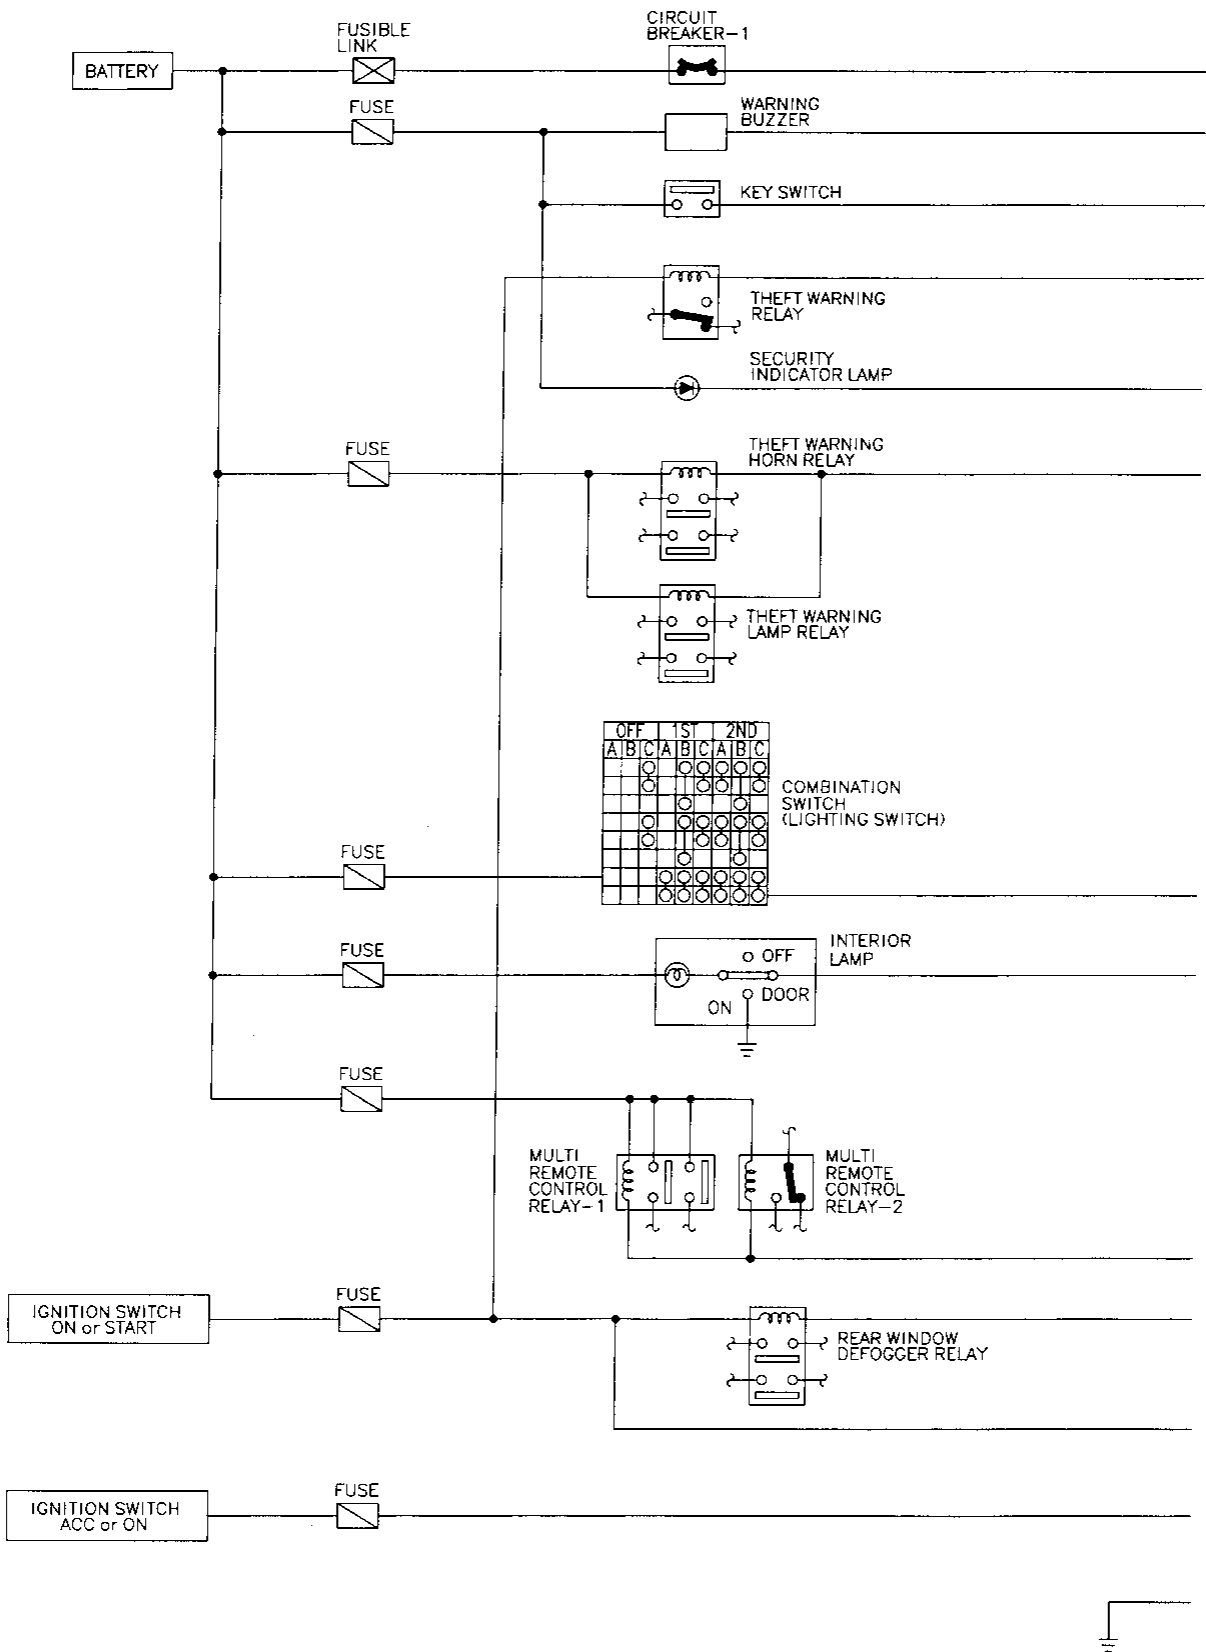

SMART ENTRANCE CONTROL UNIT

Schematic (Cont'd)

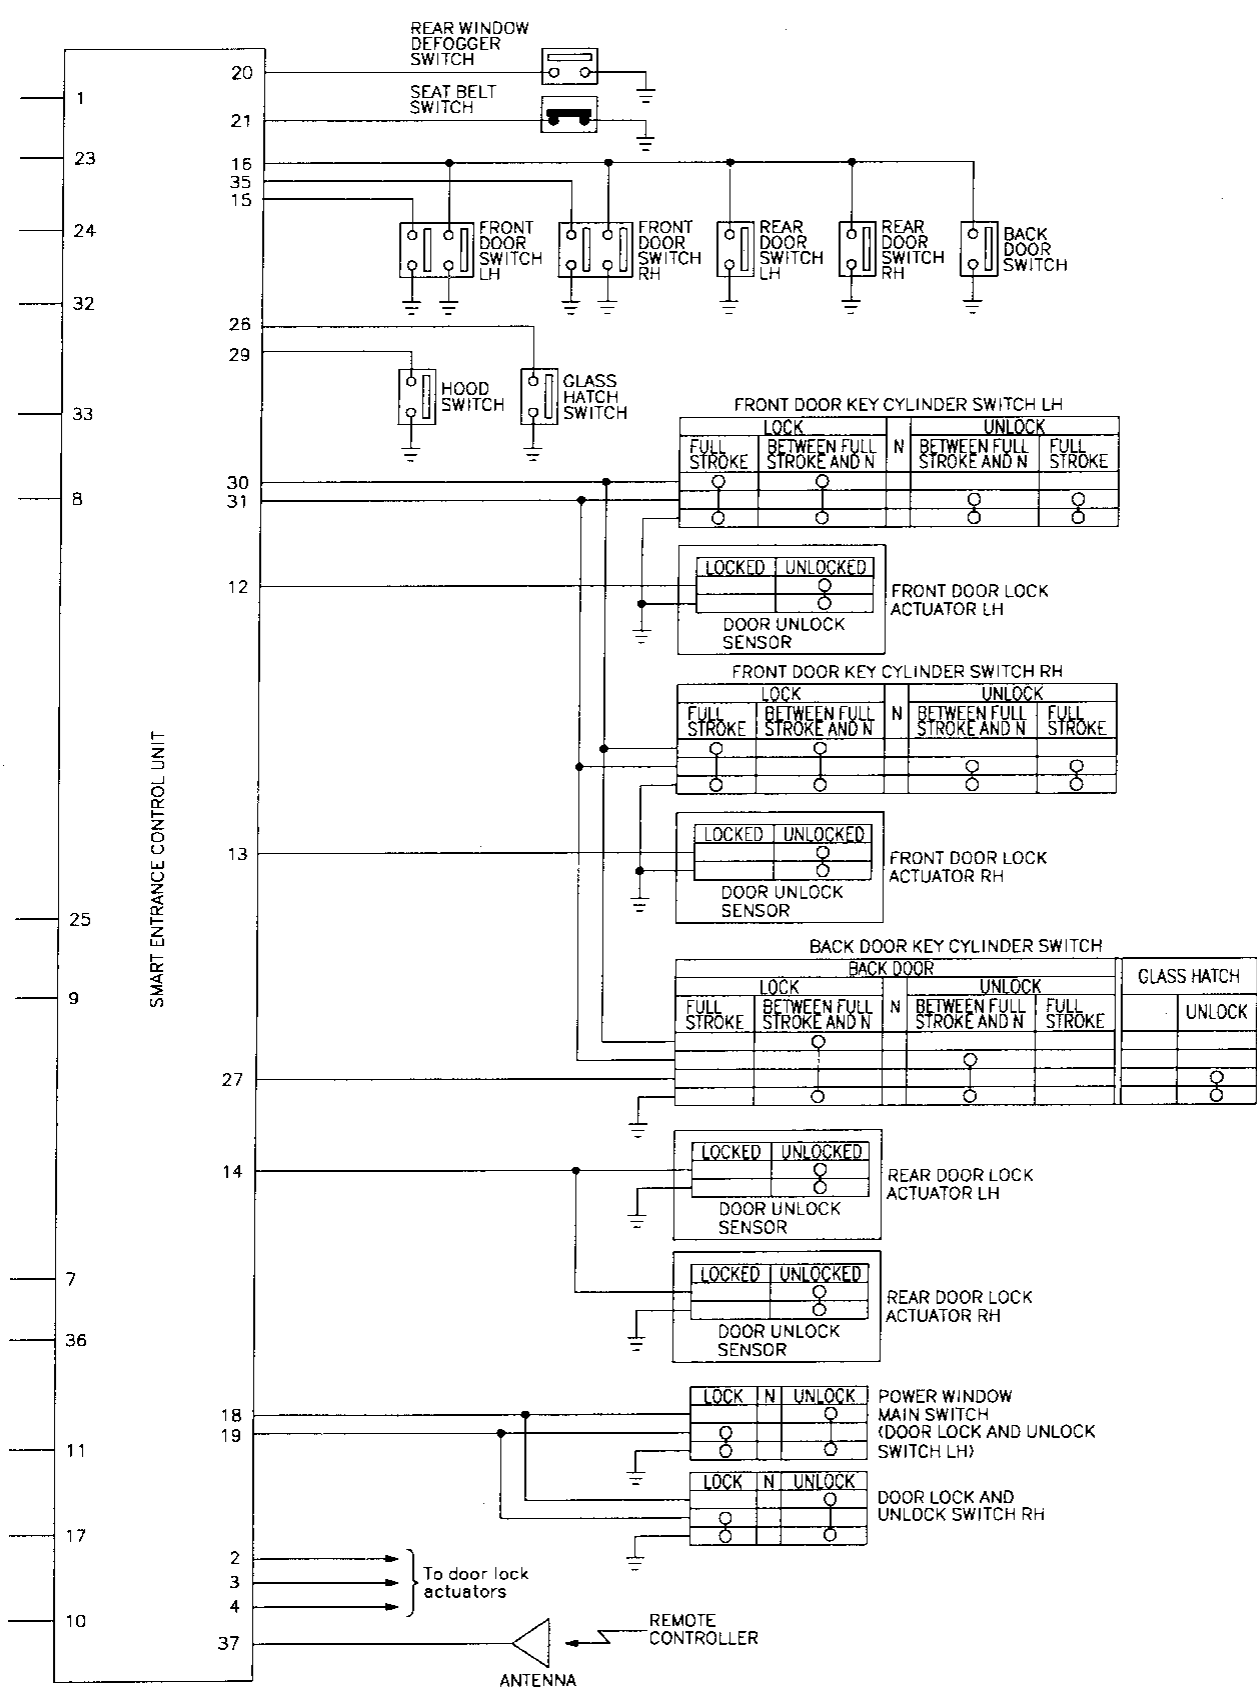

GI
 MA
 EM
 LC
 EC
 FE
 AT
 TF
 PD
 FA
 RA
 BR
 ST
 RS
 BT
 HA
EL
 IDX

SMART ENTRANCE CONTROL UNIT

Input/Output Operation Signal



SMART ENTRANCE CONTROL UNIT

Terminal No.	Connections	Operated condition	Voltage (V) (Approximate values)
1	Power source (C/B)	—	12V
2	Passenger door lock motor	Door lock & unlock switch	Unlocked
3	Driver door lock motor		Free
4	Driver and passenger door lock motors	Door lock & unlock switch	Locked
			Free
7	Multi-remote control relays -1 and 2	When doors are locked using remote controller	12V → 0V
8	Theft warning horn relay	When panic alarm is operated using remote controller	12V → 0V
9	Interior lamp	When interior lamp is operated using remote controller. (Lamp switch in "DOOR" position)	12V → 0V
10	Ground	—	—
11	Ignition switch (ON)	Ignition key is in "ON" position	12V
12	Driver door unlock sensor	Driver door: Locked → Unlocked	12V → 0V
13	Passenger door unlock sensor	Passenger door: Locked → Unlocked	12V → 0V
14	Rear door unlock sensor	Rear door LH & RH: Locked → Unlocked	12V → 0V
15	Driver door switch	OFF (Closed) → ON (Open)	12V → 0V
16	Passenger door switch	OFF (Closed) → ON (Open)	12V → 0V
17	Ignition switch (ACC)	"ACC" position	12V
18	Door lock & unlock switches	Neutral → Locks	12V → 0V
19	Door lock & unlock switches	Neutral → Unlocks	12V → 0V
20	Rear window defogger switch	OFF → ON	12V → 0V
21	Seat belt switch	Unfasten → Fasten (Ignition key is in "ON" position)	0V → 12V
23	Warning buzzer	OFF → ON	12V → 0V
24	Ignition key switch (Insert)	IGN key inserted → IGN key removed from IGN key cylinder	12V → 0V
25	Headlamp switch (1ST)	1ST, 2ND positions: ON → OFF	12V → 0V
26	Glass hatch switch	ON (Open) → OFF (Closed)	0V → 12V
27	Back door key unlock switch	OFF (Neutral) → ON (Unlock)	12V → 0V
29	Hood open signal	ON (Open) → OFF (Closed)	0V → 12V
30	Door key cylinder lock switch	OFF (Neutral) → ON (Locked)	12V → 0V
31	Door key cylinder lock switch	OFF (Neutral) → ON (Unlocked)	12V → 0V
32	Theft warning relay (Starter cut)	OFF → ON (Ignition key is in "ON" position)	12V → 0V
33	Theft warning indicator	Goes off → Illuminates	12V → 0V
35	Passenger door switch	OFF (Closed) → ON (Open)	12V → 0V
36	Rear defogger relay	OFF → ON (Ignition key is in "ON" position)	12V → 0V
37	Multi-remote antenna	—	—

INTEGRATED HOMELINK TRANSMITTER

Wiring Diagram — TRNSMT —

EL-TRNSMT-01

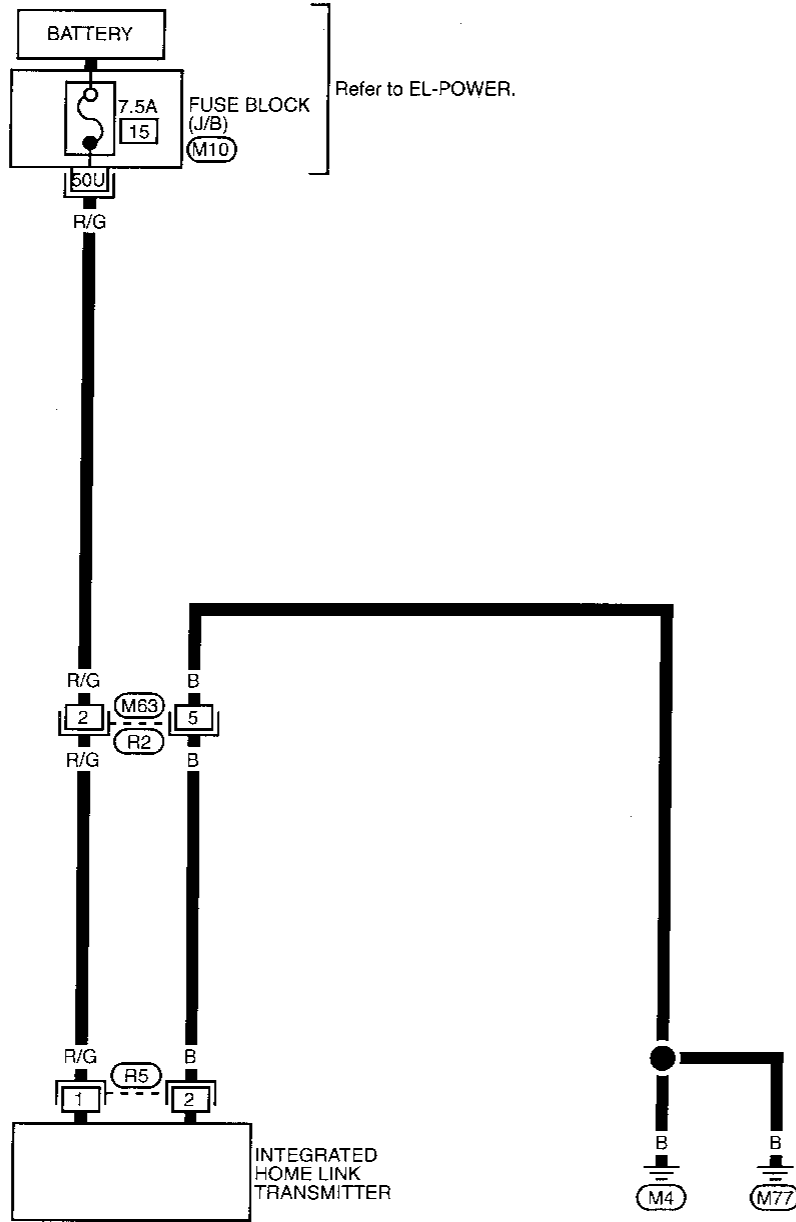

Refer to last page (Foldout page).

M10

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS


BT

HA

EL

IDX

INTEGRATED HOMELINK TRANSMITTER



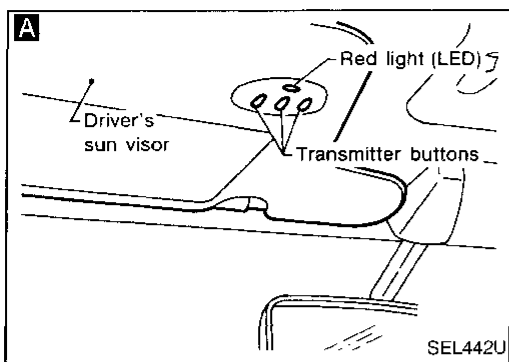


Trouble Diagnoses

DIAGNOSTIC PROCEDURE

SYMPTOM: Transmitter does not activate receiver.




Before conducting the procedure given below, make sure that system receiver (garage door opener, etc.) operates with original, hand-held transmitter. If NG, receiver or hand-held transmitter is at fault, not vehicle related.

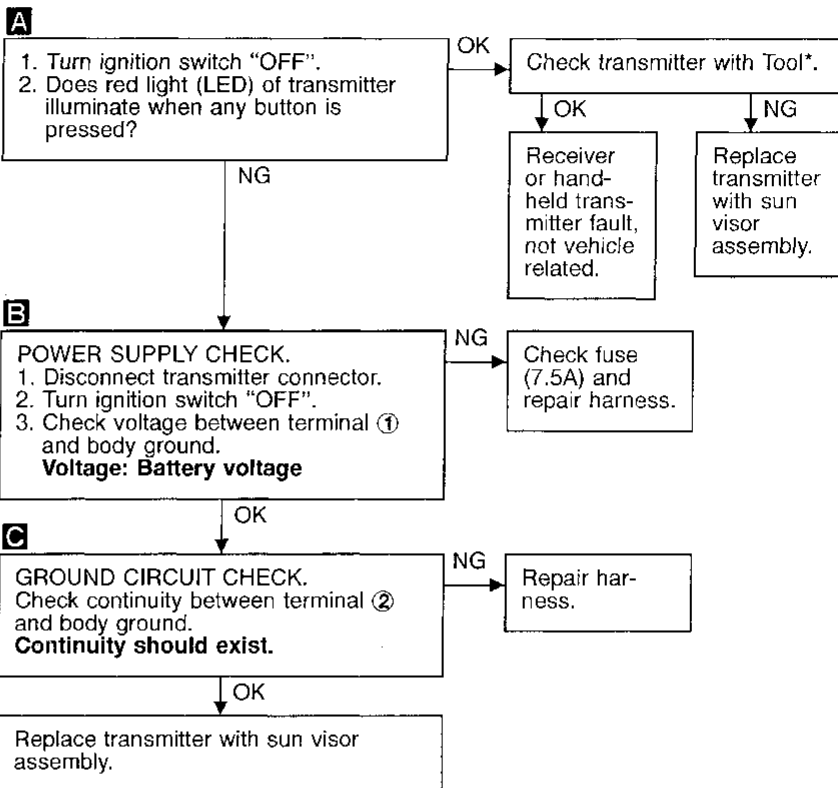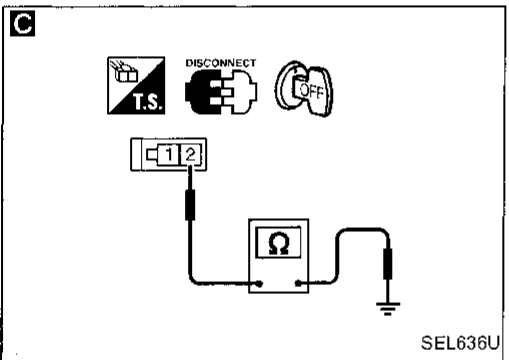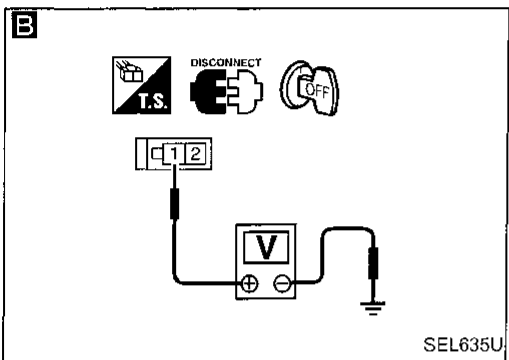

*For details, refer to Technical Service Bulletin.

LOCATION OF ELECTRICAL UNITS



Engine Compartment

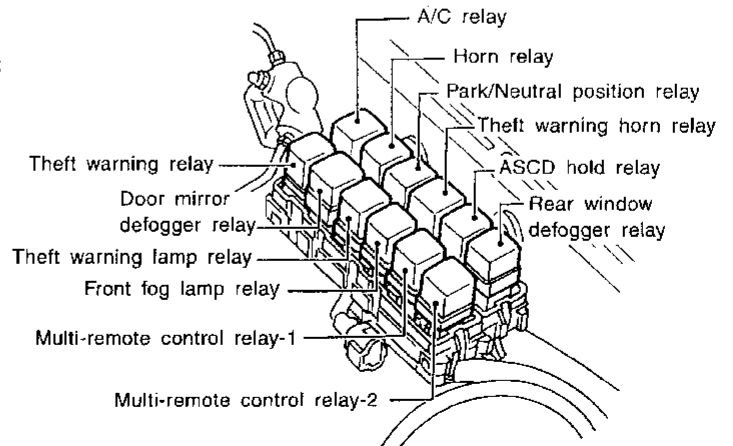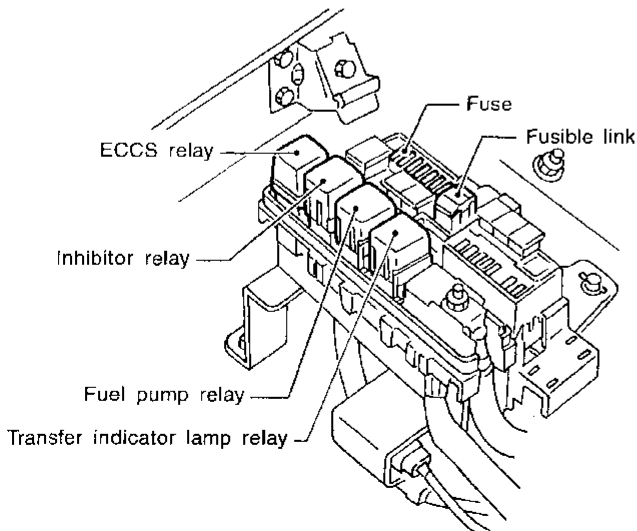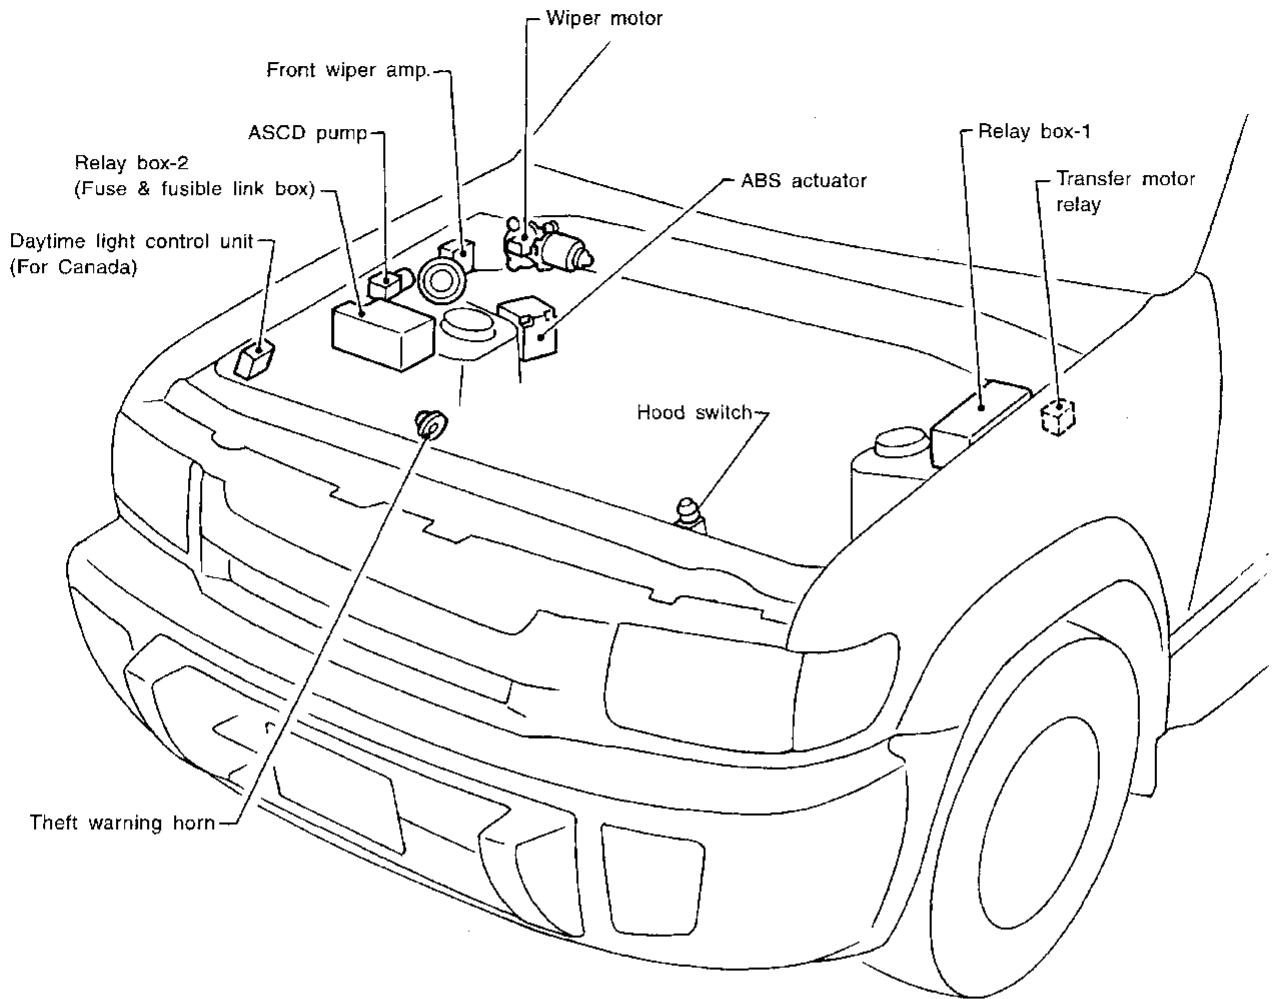

GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

LOCATION OF ELECTRICAL UNITS

Passenger Compartment

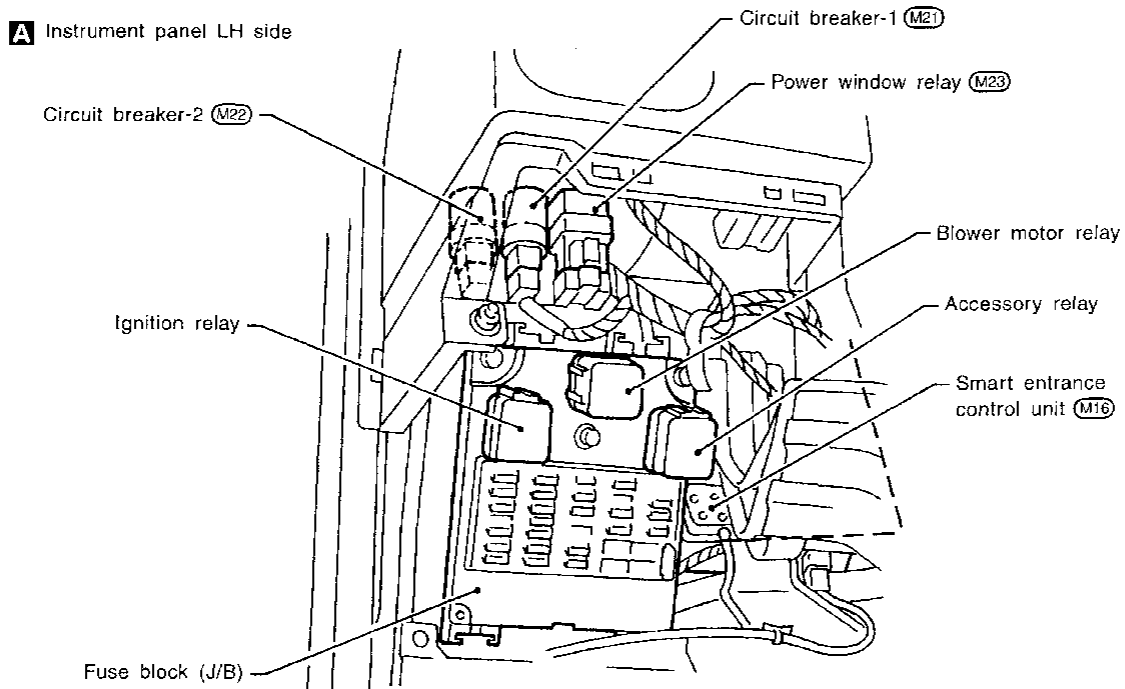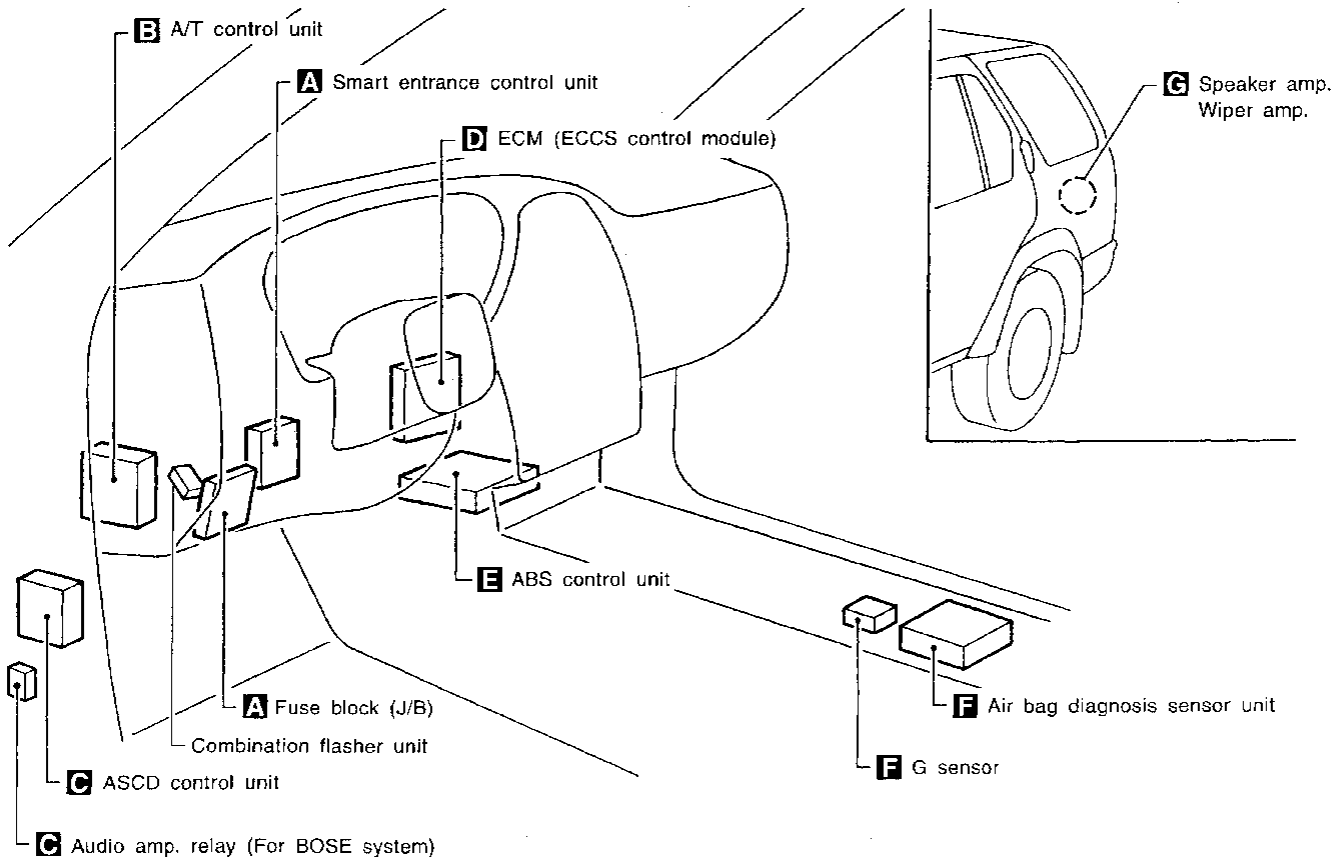

LOCATION OF ELECTRICAL UNITS

Passenger Compartment (Cont'd)

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST


RS

BT

HA


EL

IDX

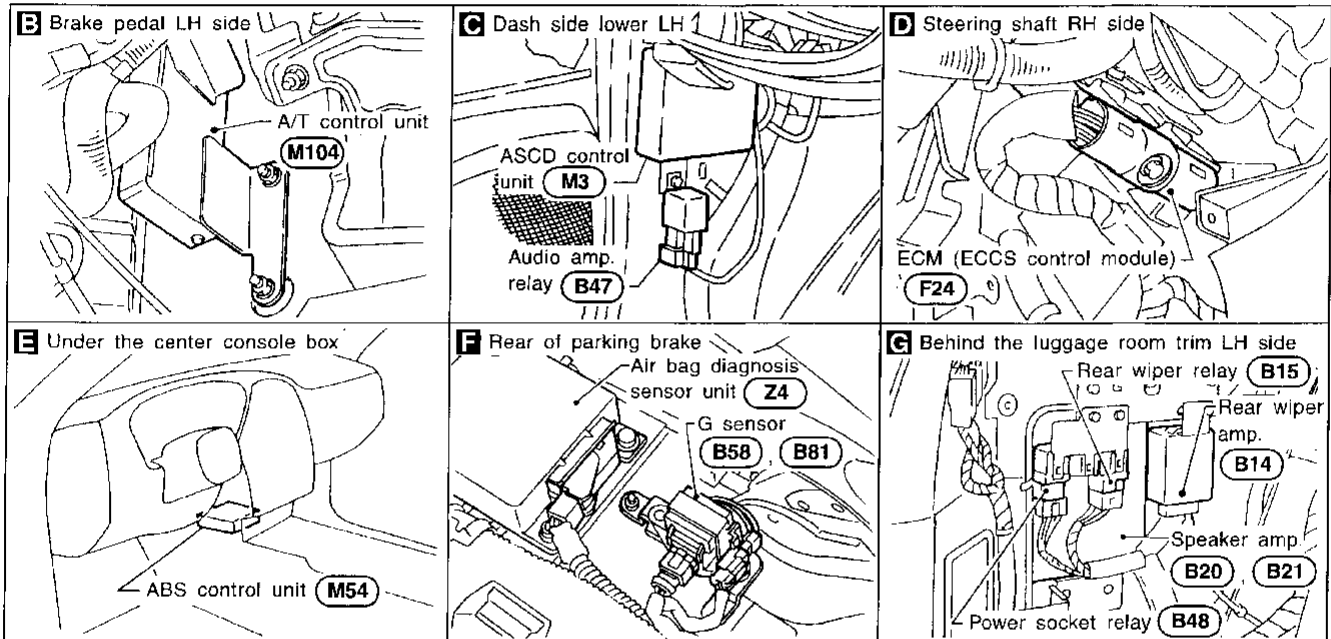

HARNESS LAYOUT


Outline

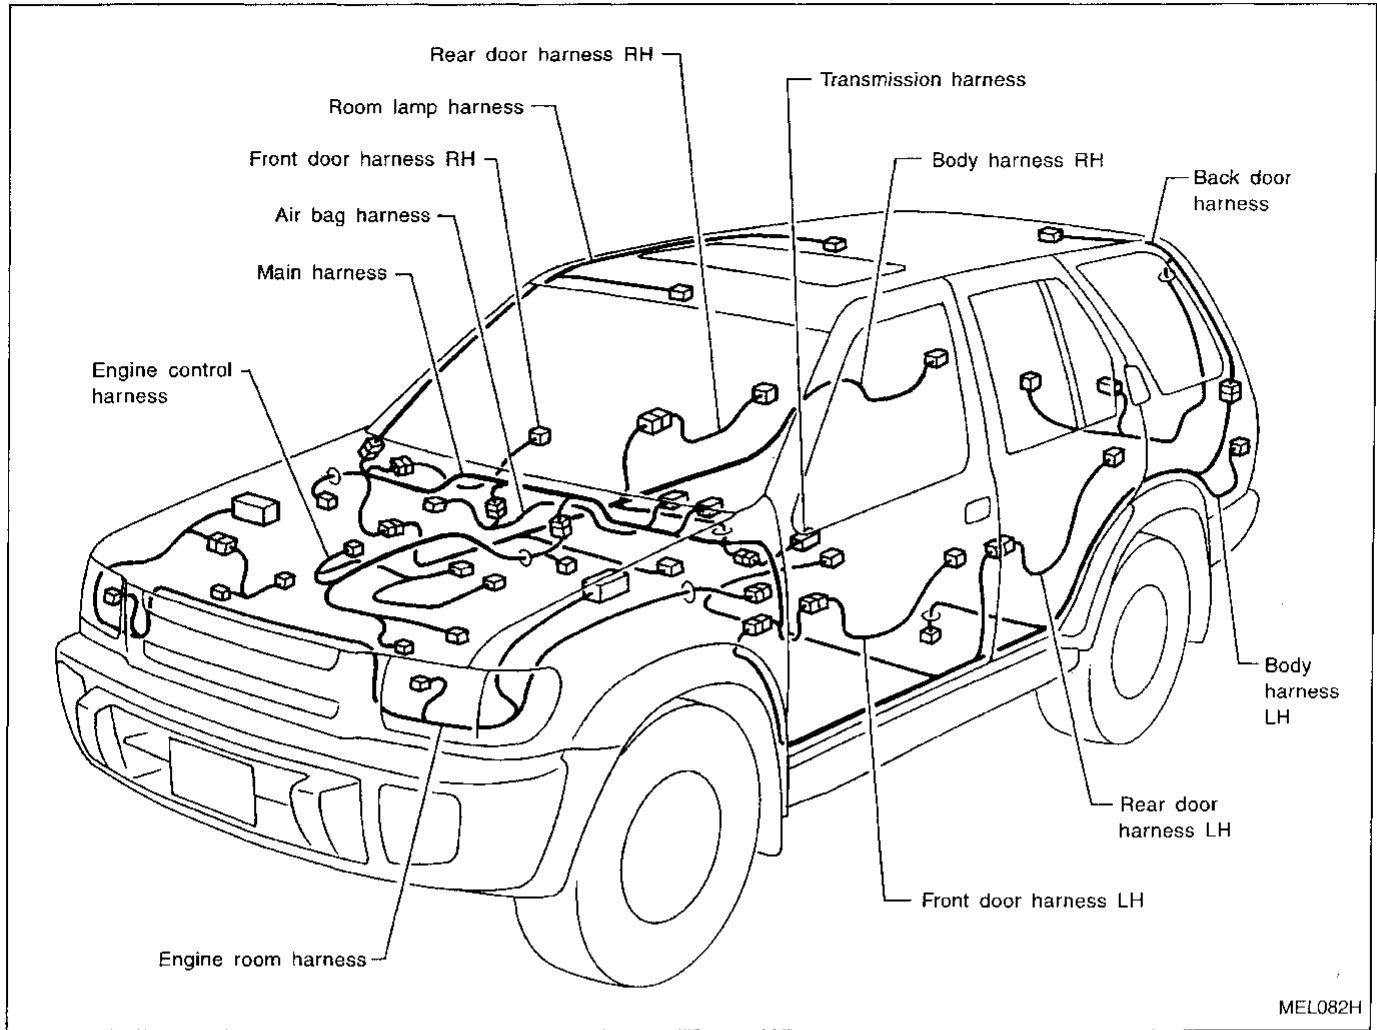

HARNESS LAYOUT

How to Read Harness Layout

Example:

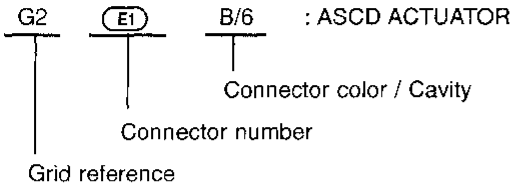

The following Harness Layouts use a map style grid to help locate connectors on the drawings:

- Main Harness
- Engine Room Harness (Engine Compartment)
- Engine Control Harness

To use the grid reference

- 1) Find the desired connector number on the connector list.
- 2) Find the grid reference.
- 3) On the drawing, find the crossing of the grid reference letter column and number row.
- 4) Find the connector number in the crossing zone.
- 5) Follow the line (if used) to the connector.

CONNECTOR SYMBOL

Main symbols of connector (in Harness Layout) are indicated in the below.

Connector type	Water proof type		Standard type	
	Male	Female	Male	Female
<ul style="list-style-type: none"> • Cavity: Less than 4 • Relay connector 				
<ul style="list-style-type: none"> • Cavity: From 5 to 8 				
<ul style="list-style-type: none"> • Cavity: More than 9 	—	—		
<ul style="list-style-type: none"> • Ground terminal etc. 	—			

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT


HA

EL

IDX

HARNESS LAYOUT

Main Harness

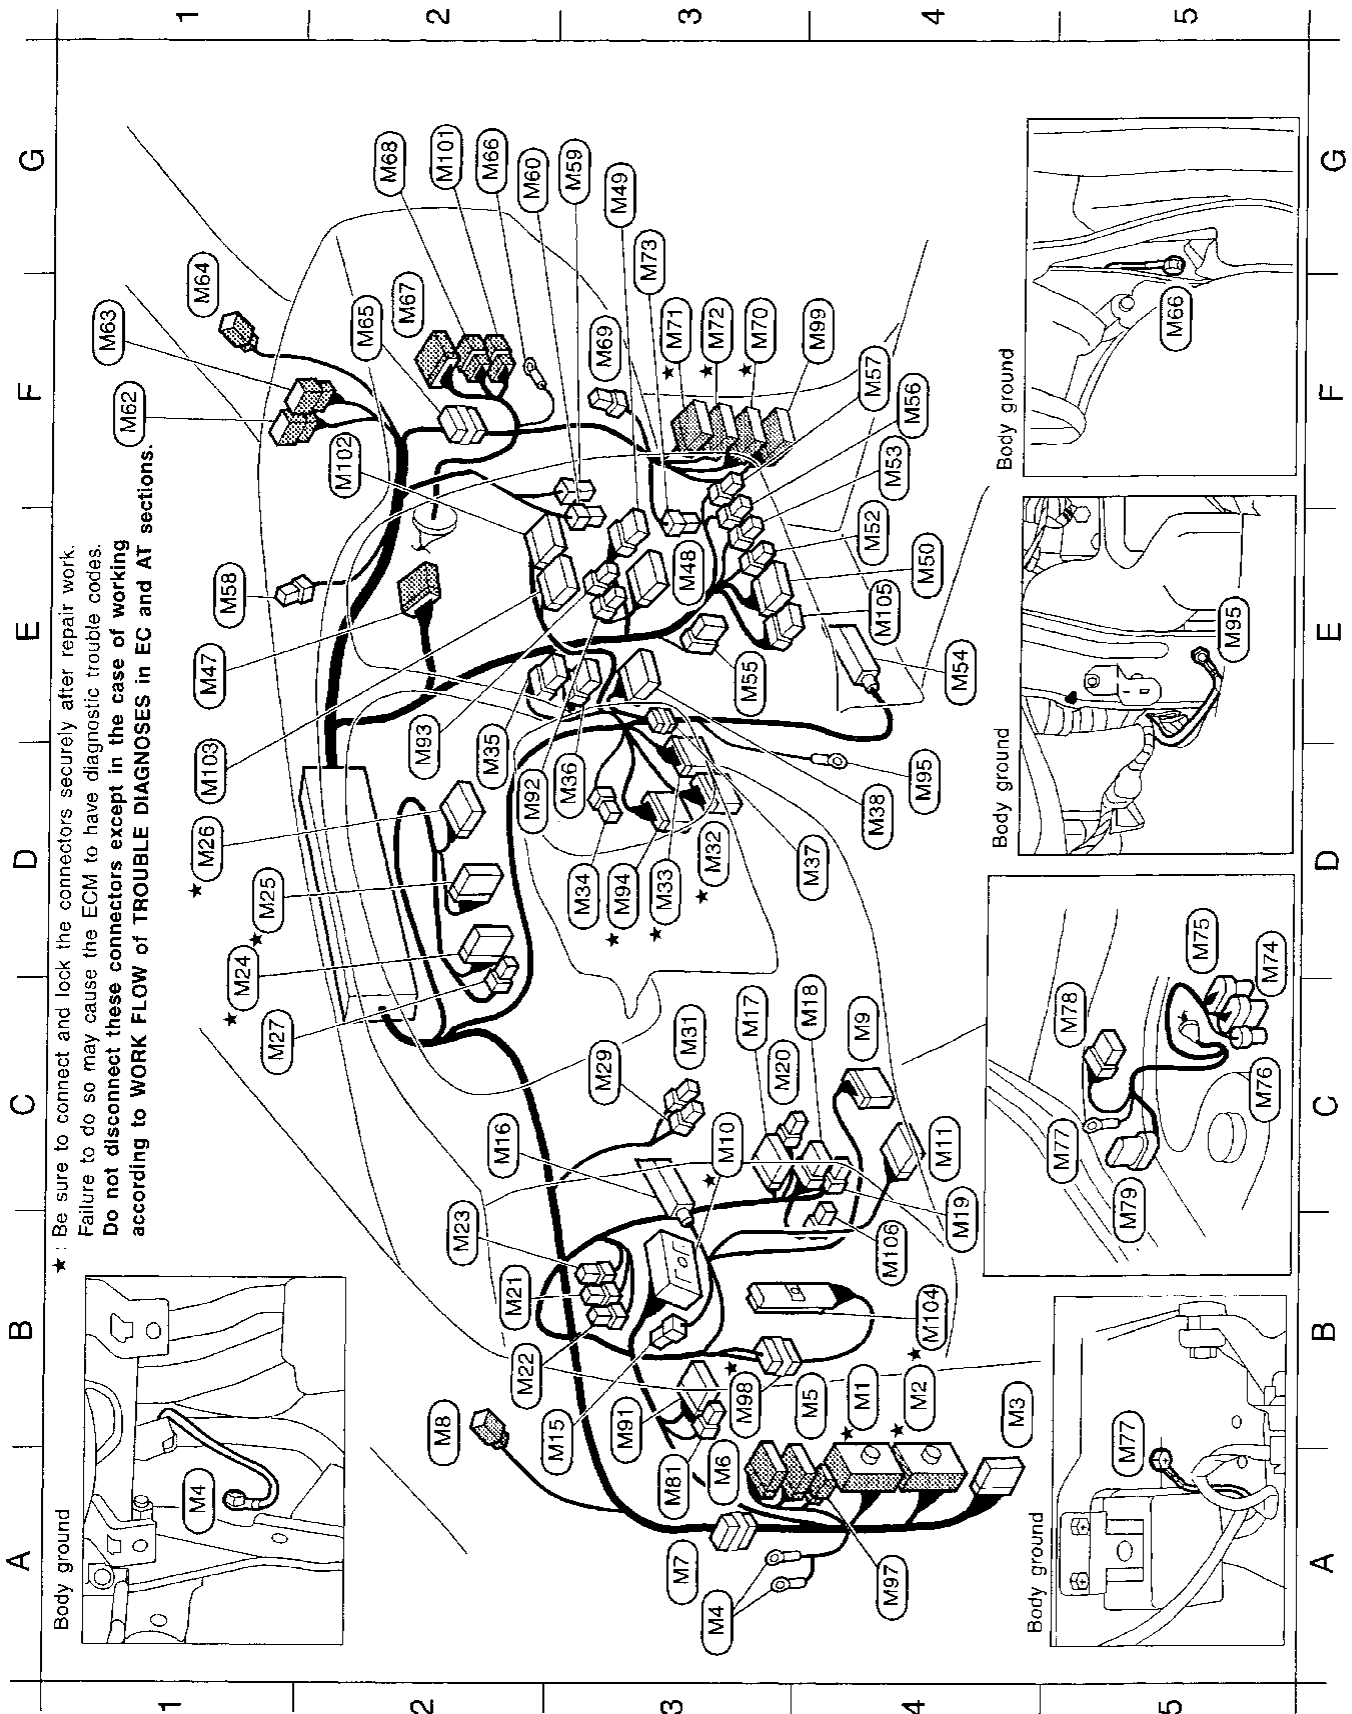

* : Be sure to connect and lock the connectors securely after repair work. Failure to do so may cause the ECM to have diagnostic trouble codes. Do not disconnect these connectors except in the case of working according to WORK FLOW of TROUBLE DIAGNOSES in EC and AT sections.



HARNES LAYOUT

Main Harness (Cont'd)

B4★ M1 B4★ M2 B4 M3 A3 M4 B4 M5 A3 M6 A3 M7 B2 M8 C4 M9 C3★ M10 C4 M11 B3 M15 C2 M16 C3 M17 C4 M18 C4 M19 C3 M20 B2 M21 B2 M22 B2 M23 D1★ M24 D1★ M25 D1★ M26 C1 M27 C3 M29 C3 M31 D3★ M32 D3★ M33 D3 M34 D2 M35 D3 M36 D4 M37 E3 M38 E1 M47 E3 M48 G3 M49 E4 M50	SMJ : To E1 SMJ : To B1 B/20 : ASCD control unit — : Body ground W/16 : To D3 W/10 : To D4 W/2 : Diode BR/2 : Tweeter LH W/16 : Data link connector for GST SMJ : Fuse block (J/B) GY/14 : Data link connector for CONSULT B/3 : Combination flasher unit W/36 : Smart entrance control unit GY/12 : Door mirror remote control switch W/6 : ASCD main switch W/3 : Illumination control switch W/4 : Security indicator lamp W/2 : Circuit breaker-1 W/2 : Circuit breaker-2 L/4 : Power window relay W/16 : Combination meter W/14 : Combination meter BR/16 : Combination meter W/3 : Warning buzzer L/2 : ASCD brake switch B/2 : Stop lamp switch W/24 : To F23 GY/16 : To F22 W/2 : In-vehicle sensor W/8 : Hazard switch W/6 : Rear window defogger switch GY/6 : Joint connector BR/10 : Mode door motor Y/12 : To Z1 W/10 : Audio W/6 : Audio W/12 : Rear wiper switch	L/4 : Heated seat switch LH W/4 : Heated seat switch RH B/88 : ABS control unit B/6 : Air mix door motor B/2 : Cigarette lighter socket W/2 : Cigarette lighter illumination B/2 : Sunload sensor W/4 : Intake door motor W/4 : Fan control amp. W/6 : To R1 W/6 : To R2 BR/2 : Tweeter RH W/2 : Diode — : Body ground W/12 : To D33 W/6 : To D34 W/3 : Power antenna motor W/20 : To B50 W/24 : To B51 W/16 : To B52 W/2 : Blower motor B/8 : ABS relay unit GY/8 : ABS actuator B/2 : ABS relay unit — : Body ground W/6 : Front wiper motor W/8 : Front wiper amp. B/2 : Fuse block (J/B) W/12 : Fuse block (J/B) B/2 : Audio option connector (Not used)	D2 M93 W/4 : Audio option connector (Not used) D3★ M94 W/18 : To F27 D4 M95 — : Body ground (For ABS) A4 M97 BR/4 : To D11 B3★ M98 GY/6 : Joint connector F3 M99 W/12 : To B77 F2 M101 BR/6 : To D41 F2 M102 B/16 : A/C auto amp. E3 M103 B/20 : A/C auto amp. B4★ M104 W/48 : A/T control unit E4 M105 BR/8 : 4WD shift switch B4 M106 W/4 : Glass hatch opener switch
--	--	---	--

★ : Be sure to connect and lock the connectors securely after repair work. Failure to do so may cause the ECM to have diagnostic trouble codes.


Do not disconnect these connectors except in the case of working according to **WORK FLOW of TROUBLE DIAGNOSES** in EC and AT sections.

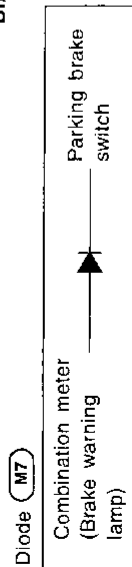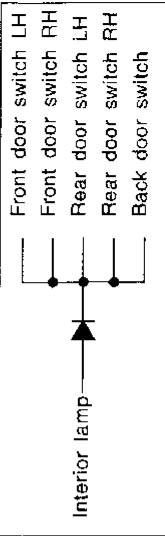

GI
 MA
 EM
 LC
 EC
 FE
 AT
 TF
 PD
 FA
 RA
 BR
 ST
 RS
 BT
 HA
EL
 IDX

HARNESS LAYOUT

Engine Room Harness

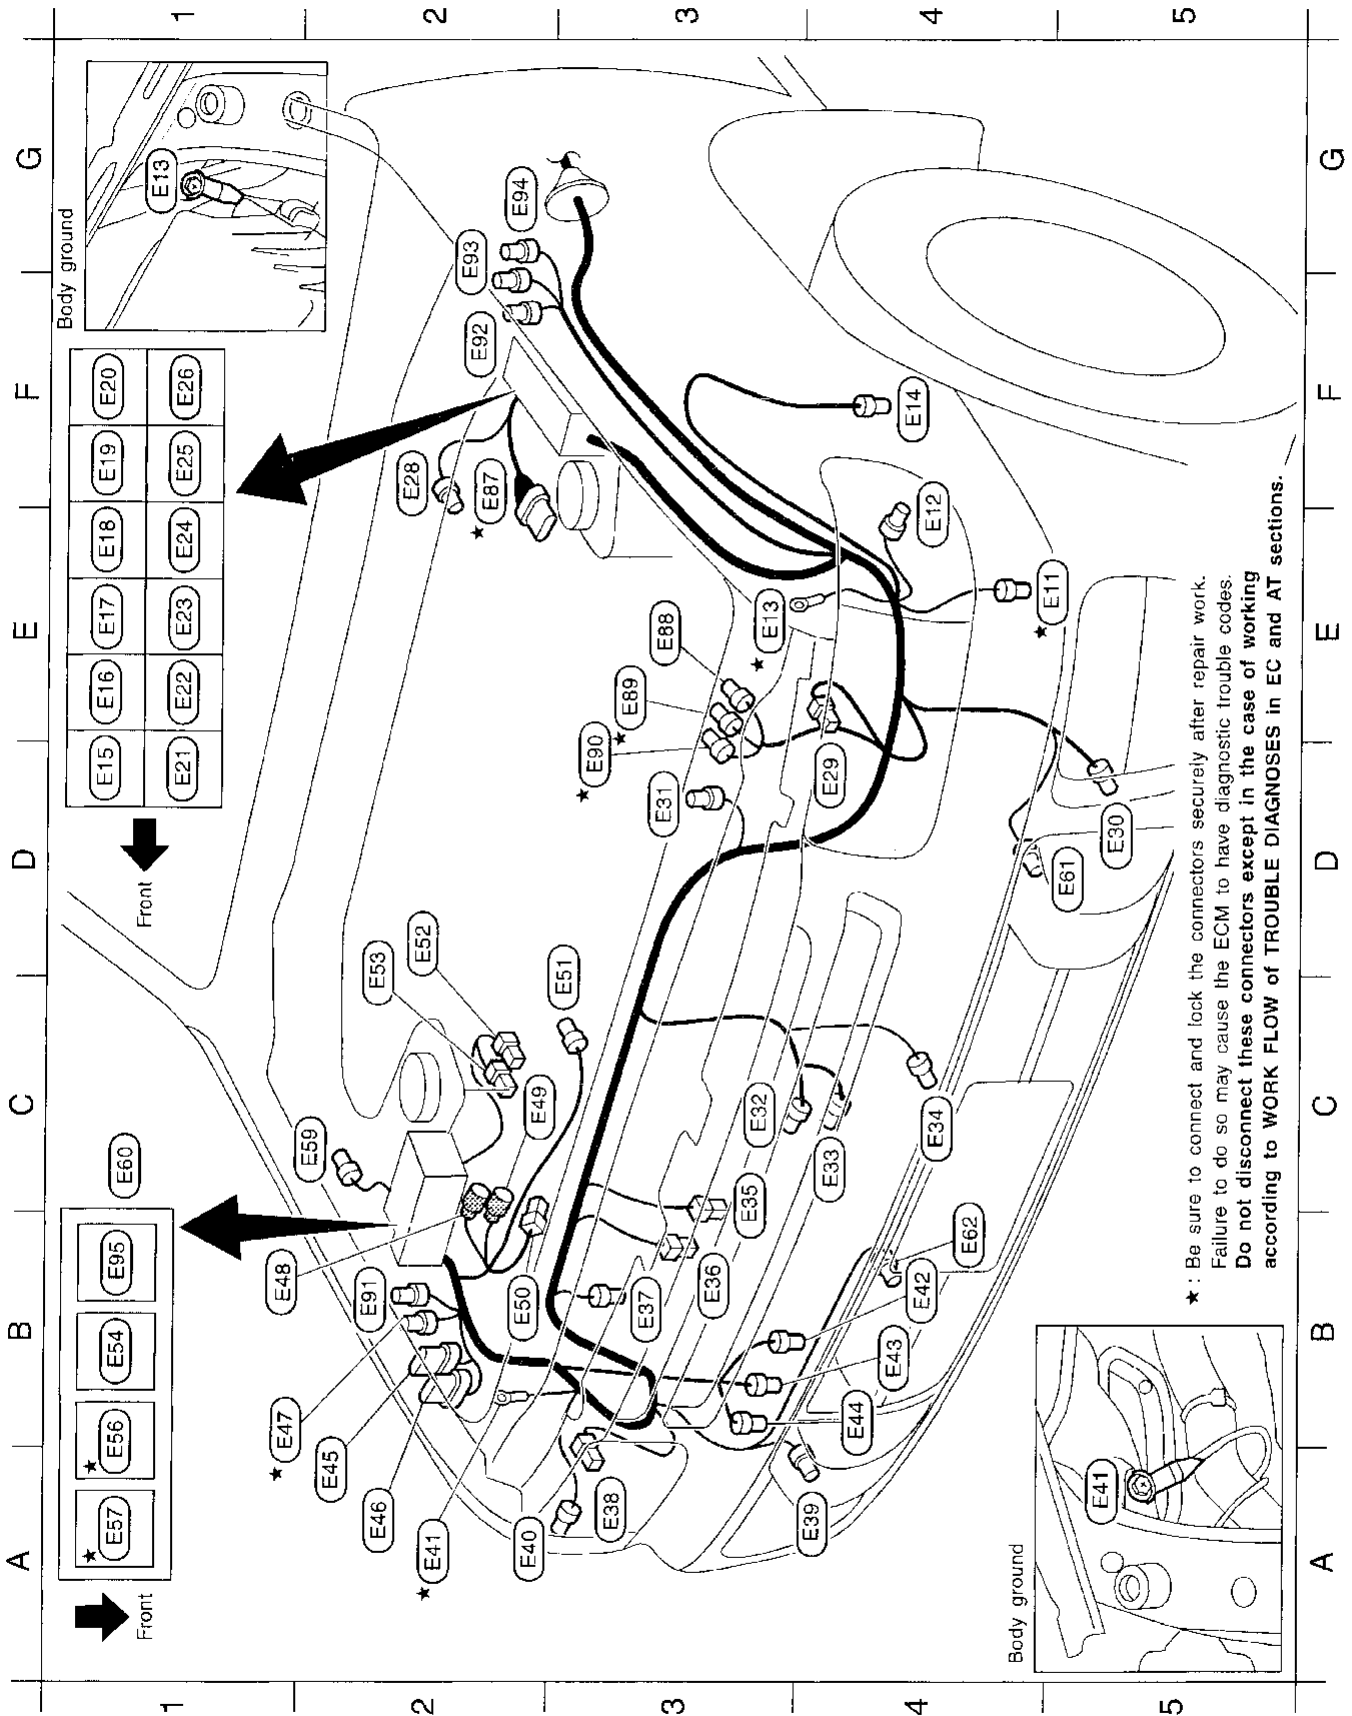


*: Be sure to connect and lock the connectors securely after repair work. Failure to do so may cause the ECM to have diagnostic trouble codes. Do not disconnect these connectors except in the case of working according to WORK FLOW of TROUBLE DIAGNOSES in EC and AT sections.

HARNESS LAYOUT

Engine Room Harness (Cont'd)

★ : Be sure to connect and lock the connectors securely after repair work.
 Failure to do so may cause the ECM to have diagnostic trouble codes.
 Do not disconnect these connectors except in the case of working according to WORK FLOW of TROUBLE DIAGNOSES in EC and AT sections.

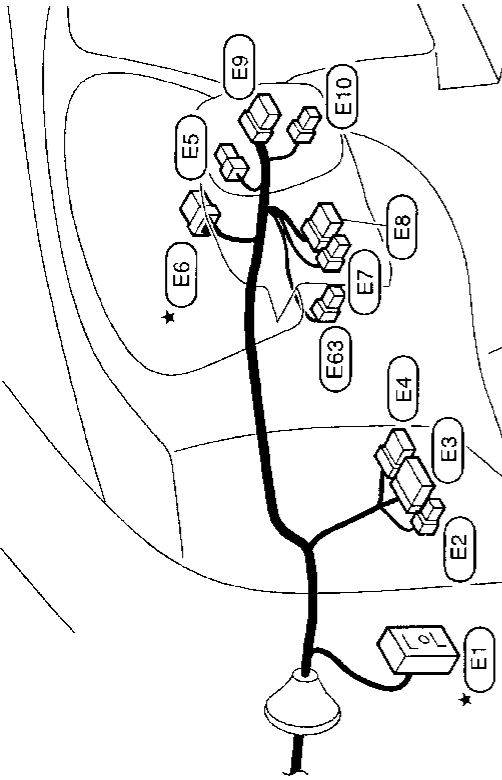


- D5 (E30) GY/2 : Front turn signal lamp LH
- D3 (E31) GY/2 : Hood switch
- C3 (E32) B/2 : Ambient air temperature sensor
- C4 (E33) B/2 : Ambient air temperature sensor (For thermometer)
- C4 (E34) GY/2 : Ambient air temperature switch
- C3 (E35) B/1 : Horn (High)
- B3 (E36) B/1 : Horn (Low)
- B3 (E37) B/2 : Dual-pressure switch
- A3 (E38) B/3 : Headlamp RH
- A4 (E39) GY/2 : Front turn signal lamp RH
- A2 (E40) GY/2 : Side marker lamp RH
- A2★ (E41) — : Body ground
- B4 (E42) BR/2 : Washer level switch
- B4 (E43) GY/2 : Rear washer motor
- B4 (E44) GY/2 : Front washer motor
- B2 (E45) GY/8 : Daytime light control unit
- A2 (E46) GY/6 : Daytime light control unit
- B1★ (E47) GY/2 : AVT dropping resistor
- B1 (E48) GY/4 : To (E102)
- C2 (E49) GY/1 : To (E104)
- B2 (E50) B/1 : Theft warning horn
- C3 (E51) GY/2 : Front wheel sensor RH
- D2 (E52) B/1 : Battery
- C2 (E53) B/1 : Battery
- B1 (E54) L/4 : Fuel pump relay
- B1★ (E56) BR/6 : Inhibitor relay
- A1★ (E57) BR/6 : ECCS relay
- C2 (E59) GY/4 : ASCD pump
- C1 (E60) — : Fuse and fusible link box
- D5 (E61) BR/2 : Front fog lamp LH
- B4 (E62) BR/2 : Front fog lamp RH
- (E63) W/3 : Front fog lamp switch
- F2★ (E67) GY/6 : EVAP canister purge volume control valve
- E3 (E68) GY/3 : Absolute pressure sensor
- E3★ (E69) G/2 : EVAP canister purge control solenoid valve
- D3★ (E90) B/2 : MAP/BARO switch solenoid valve
- B2 (E91) GY/2 : Transfer dropping resistor
- F2 (E92) W/1 : Transfer motor relay
- G2 (E93) W/1 : Transfer motor relay
- G2 (E94) G/2 : Transfer motor relay
- B1 (E95) B/5 : Transfer indicator lamp relay (Relay box-2)

- ★ (E1) SMJ : To M1
- (E2) B/2 : Fuse block (J/B)
- (E3) W/16 : Fuse block (J/B)
- (E4) W/6 : Fuse block (J/B)
- (E5) W/2 : Key switch
- ★ (E6) W/6 : Ignition switch
- (E7) BR/4 : Combination switch (Lighting switch)
- (E8) BR/8 : Combination switch (Lighting & turn signal switch)
- (E9) GY/8 : Combination switch (Front wiper switch)
- (E10) B/1 : Not used
- ★ (E11) GY/2 : Intake air temperature sensor
- E4 (E12) GY/2 : Side marker lamp LH
- E3★ (E13) — : Body ground
- F4 (E14) BR/2 : Front wheel sensor LH
- D1 (E15) B/5 : Multi remote control relay-2
- E1 (E16) BR/6 : Multi remote control relay-1
- E1 (E17) L/4 : Front fog lamp relay
- E1 (E18) BR/6 : Theft warning lamp relay
- F1 (E19) L/4 : Door mirror cefogger relay
- F1 (E20) B/5 : Theft warning relay
- D1 (E21) BR/6 : Rear window defogger relay
- E1 (E22) BR/6 : ASCD hold relay
- E1 (E23) BR/6 : Theft warning horn relay
- E1 (E24) B/5 : Park/Neutral position relay
- F1 (E25) W/3 : Horn relay
- F1 (E26) L/4 : A/C relay
- F2 (E28) GY/2 : Brake fluid level switch
- D4 (E29) B/3 : Headlamp LH

GI
 MA
 EM
 LC
 EC
 FT
 AT
 TF
 PD
 FA
 RA
 BR
 ST
 RS
 BT
 HA
 EL
 IDX

HARNESS LAYOUT

Engine Control Harness

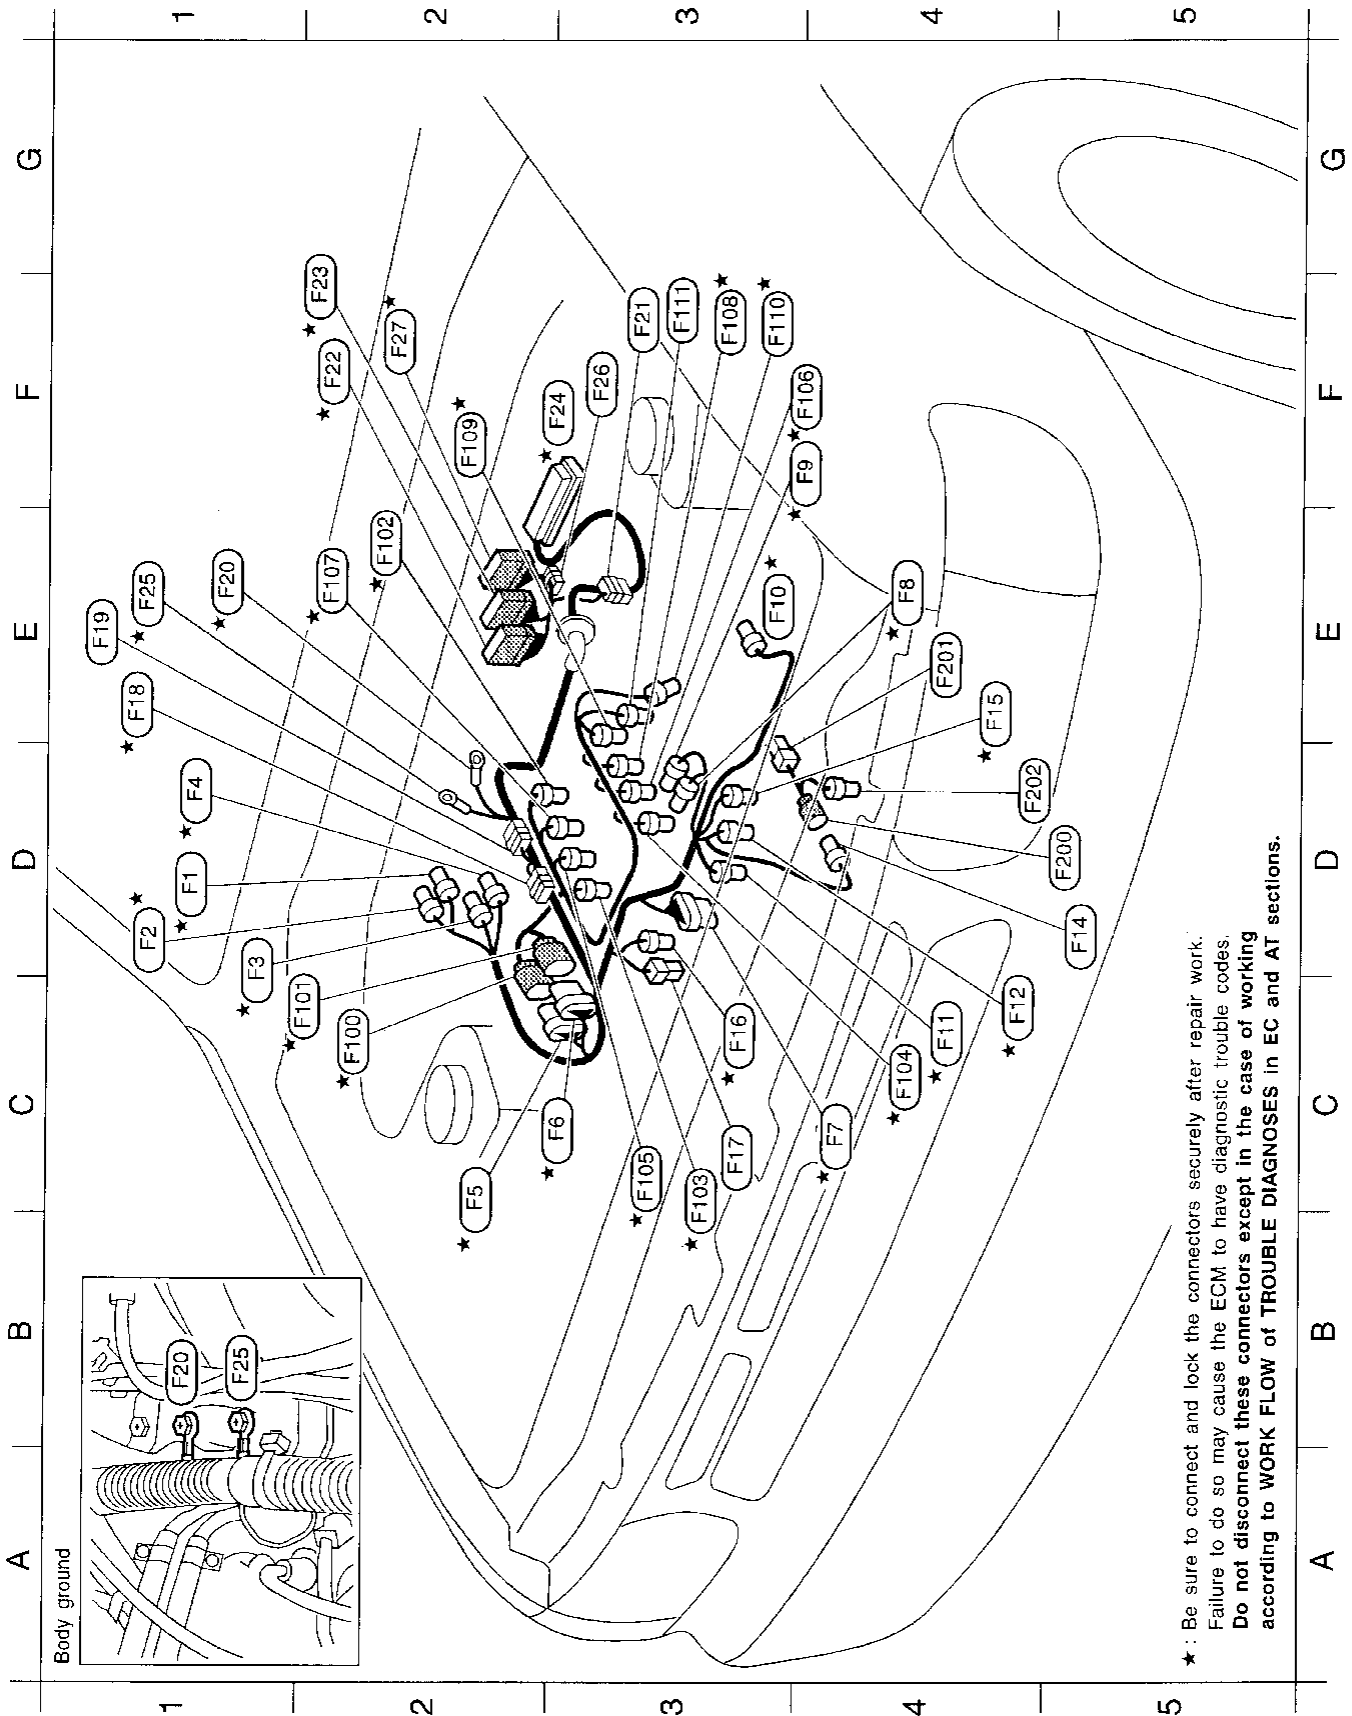


★ : Be sure to connect and lock the connectors securely after repair work.
 Failure to do so may cause the ECM to have diagnostic trouble codes.
Do not disconnect these connectors except in the case of working according to WORK FLOW of TROUBLE DIAGNOSES in EC and AT sections.

HARNES LAYOUT

Engine Control Harness (Cont'd)



D1★	(F1)	GY/4	: Rear heated oxygen sensor RH
D1★	(F2)	GY/3	: Front heated oxygen sensor RH
D1★	(F3)	GY/4	: Rear heated oxygen sensor LH
D1★	(F4)	GY/3	: Front heated oxygen sensor LH
C2★	(F5)	GY/8	: To (F100)
C3★	(F6)	B/8	: To (F101)
C4★	(F7)	GY/6	: Distributor
E4★	(F8)	BR/3	: Throttle position sensor
F4★	(F9)	GY/3	: Throttle position switch
E3★	(F10)	BR/4	: Mass air flow sensor
C4★	(F11)	GY/2	: Ignition coil
C4★	(F12)	GY/2	: EGR temperature sensor
D5	(F14)	GY/2	: To (F200)
E4★	(F15)	B/2	: EGRC-solenoid valve
C3★	(F16)	GY/2	: Engine coolant temperature sensor
C3	(F17)	B/1	: Thermal transmitter
E1★	(F18)	B/2	: Resistor
E1	(F19)	W/2	: Condenser
E1★	(F20)	—	: Engine ground
F3	(F21)	L/12	: Joint connector
F2★	(F22)	GY/16	: To (M33)
F2★	(F23)	W/24	: To (M32)
F2★	(F24)	W/88	: ECM (ECCS control module)
E1★	(F25)	—	: Engine ground
F3	(F26)	W/2	: Diode
F2★	(F27)	W/18	: To (M84)
C2★	(F100)	GY/8	: To (F5)
C2★	(F101)	B/8	: To (F6)
E2★	(F102)	B/2	: Knock sensor
C3★	(F103)	B/2	: Injector No. 1
C4★	(F104)	B/2	: Injector No. 2
C3★	(F105)	B/2	: Injector No. 3
F4★	(F106)	B/2	: Injector No. 4
E2★	(F107)	B/2	: Injector No. 5
F3★	(F108)	B/2	: Injector No. 6
F2★	(F109)	BR/2	: IACV-AAC valve
F3★	(F110)	GY/2	: Crankshaft position sensor (OBD)
F3	(F111)	GY/2	: IACV-FICD solenoid valve
D5	(F200)	GY/2	: To (F14)
E4	(F201)	B/1	: Oil pressure switch
D4	(F202)	B/1	: Compressor (Air conditioner)

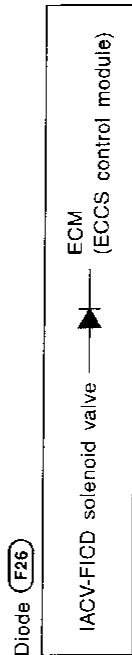


★ : Be sure to connect and lock the connectors securely after repair work. Failure to do so may cause the ECM to have diagnostic trouble codes. Do not disconnect these connectors except in the case of working according to WORK FLOW of TROUBLE DIAGNOSES in EC and AT sections.

GI
 MA
 EM
 LC
 EC
 FE
 AT
 TF
 PD
 FA
 RA
 BR
 ST
 BS
 BT
 HA
EL
 DX

Body Harness LH

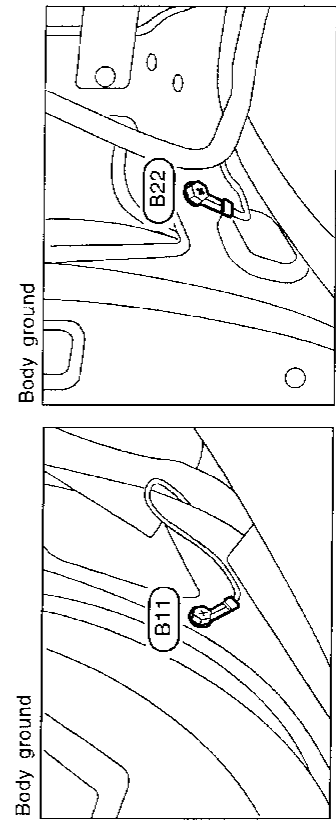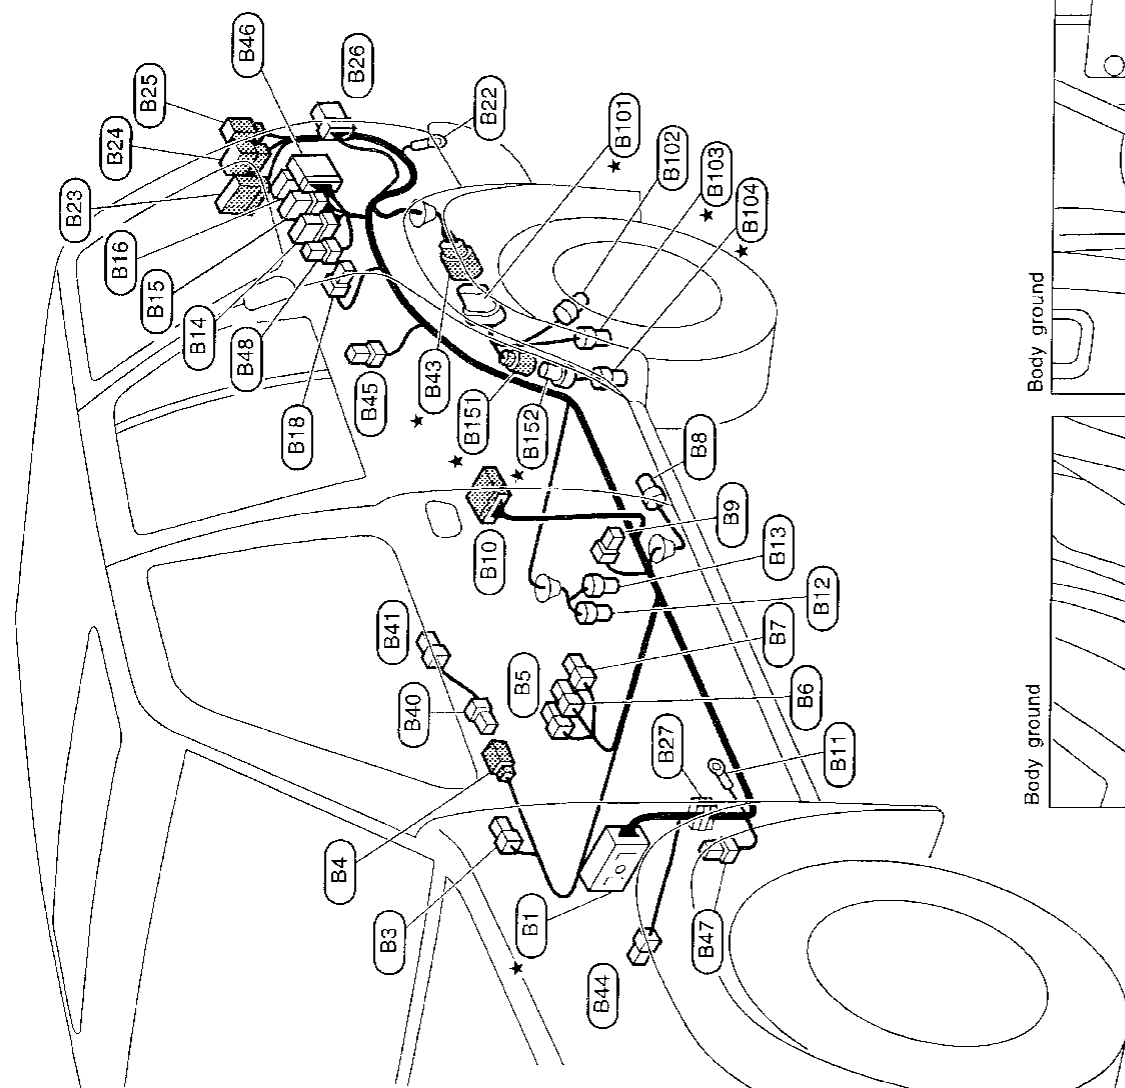


- ★ **B1** : To **M2**
- B3** : Parking brake switch
- B4** : To **B40**
- B5** : Heated seat LH
- B6** : Seat belt buckle switch
- B7** : Power seat harness
- B8** : Rear wheel sensor LH
- B9** : Front door switch LH
- B10** : To **D50**
- B11** : Body ground
- B12** : Fuel tank gauge unit
- B13** : Fuel pump
- B14** : Rear wiper amp.
- B15** : Rear wiper relay
- B16** : Rear window defogger relay
- B18** : Rear door switch LH
- B22** : Body ground
- B23** : To **D100**
- B24** : To **D101**
- B25** : To **D102**
- B26** : Rear combination lamp LH
- B27** : Diode
- B40** : To **B4**
- B41** : Power socket
- ★ **B43** : To **B101**
- B44** : Smart entrance control unit
- B45** : Antenna (For smart entrance control unit)
- B46** : Rear speaker amp.
- B47** : Audio amp. relay
- B48** : Power socket relay
- ★ **B101** : To **B43**
- ★ **B102** : EVAP control system pressure sensor
- ★ **B103** : EVAP canister vent control valve
- ★ **B104** : Vacuum cut valve bypass valve
- ★ **B151** : To **B152**
- ★ **B152** : To **B151**

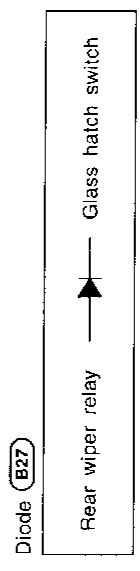

★ : Be sure to connect and lock the connectors securely after repair work.
 Failure to do so may cause the ECM to have diagnostic trouble codes.
Do not disconnect these connectors except in the case of working according to WORK FLOW of TROUBLE DIAGNOSES in EC and AT sections.

HARNESS LAYOUT

Body Harness RH

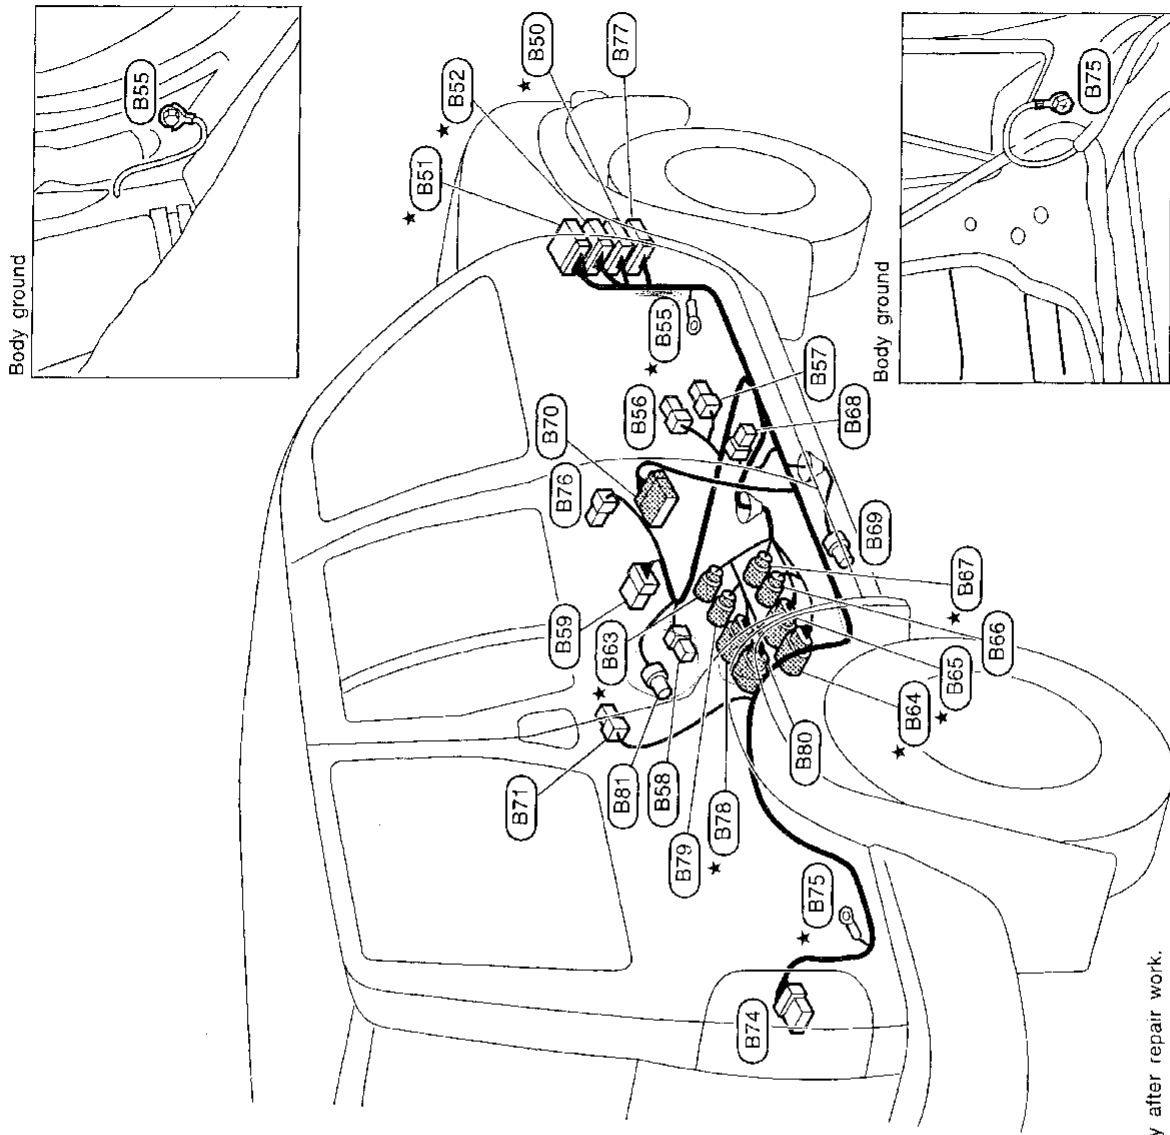


- ★ B50 : W/20 : To (M70)
- ★ B51 : W/24 : To (M71)
- ★ B52 : W/16 : To (M72)
- ★ B55 : — : Body ground
- B56 : GY/3 : Heated seat RH
- B57 : W/2 : To power seat harness RH
- B58 : GY/2 : G sensor
- B59 : W/6 : A/T device
- ★ B63 : GY/2 : Vehicle speed sensor
- ★ B64 : BR/8 : Terminal cord assembly
- ★ B65 : GY/8 : Inhibitor switch
- B66 : GY/2 : Inhibitor switch
- ★ B67 : GY/3 : Revolution sensor
- B68 : B/3 : Front door switch RH
- B69 : GY/2 : Rear wheel sensor RH
- B70 : W/10 : To (D70)
- B71 : BR/1 : Rear door switch RH
- B74 : W/6 : Rear combination lamp RH
- ★ B75 : — : Body ground
- B76 : W/3 : Ashtray
- B77 : W/12 : To (M99)
- B78 : GY/8 : To (B206)
- B79 : B/4 : To (B208)
- B80 : B/8 : To (B207)
- B81 : GY/2 : G sensor

★ : Be sure to connect and lock the connectors securely after repair work.
 Failure to do so may cause the ECM to have diagnostic trouble codes.
 Do not disconnect these connectors except in the case of working according to WORK FLOW of TROUBLE DIAGNOSES in EC and AT sections.

GI
 MA
 EM
 LC
 EC
 FE
 AT
 TF
 PD
 FA
 RA
 BR
 ST
 RS
 BT
 HA
 EL
 IDX

HARNESS LAYOUT

Back Door Harness

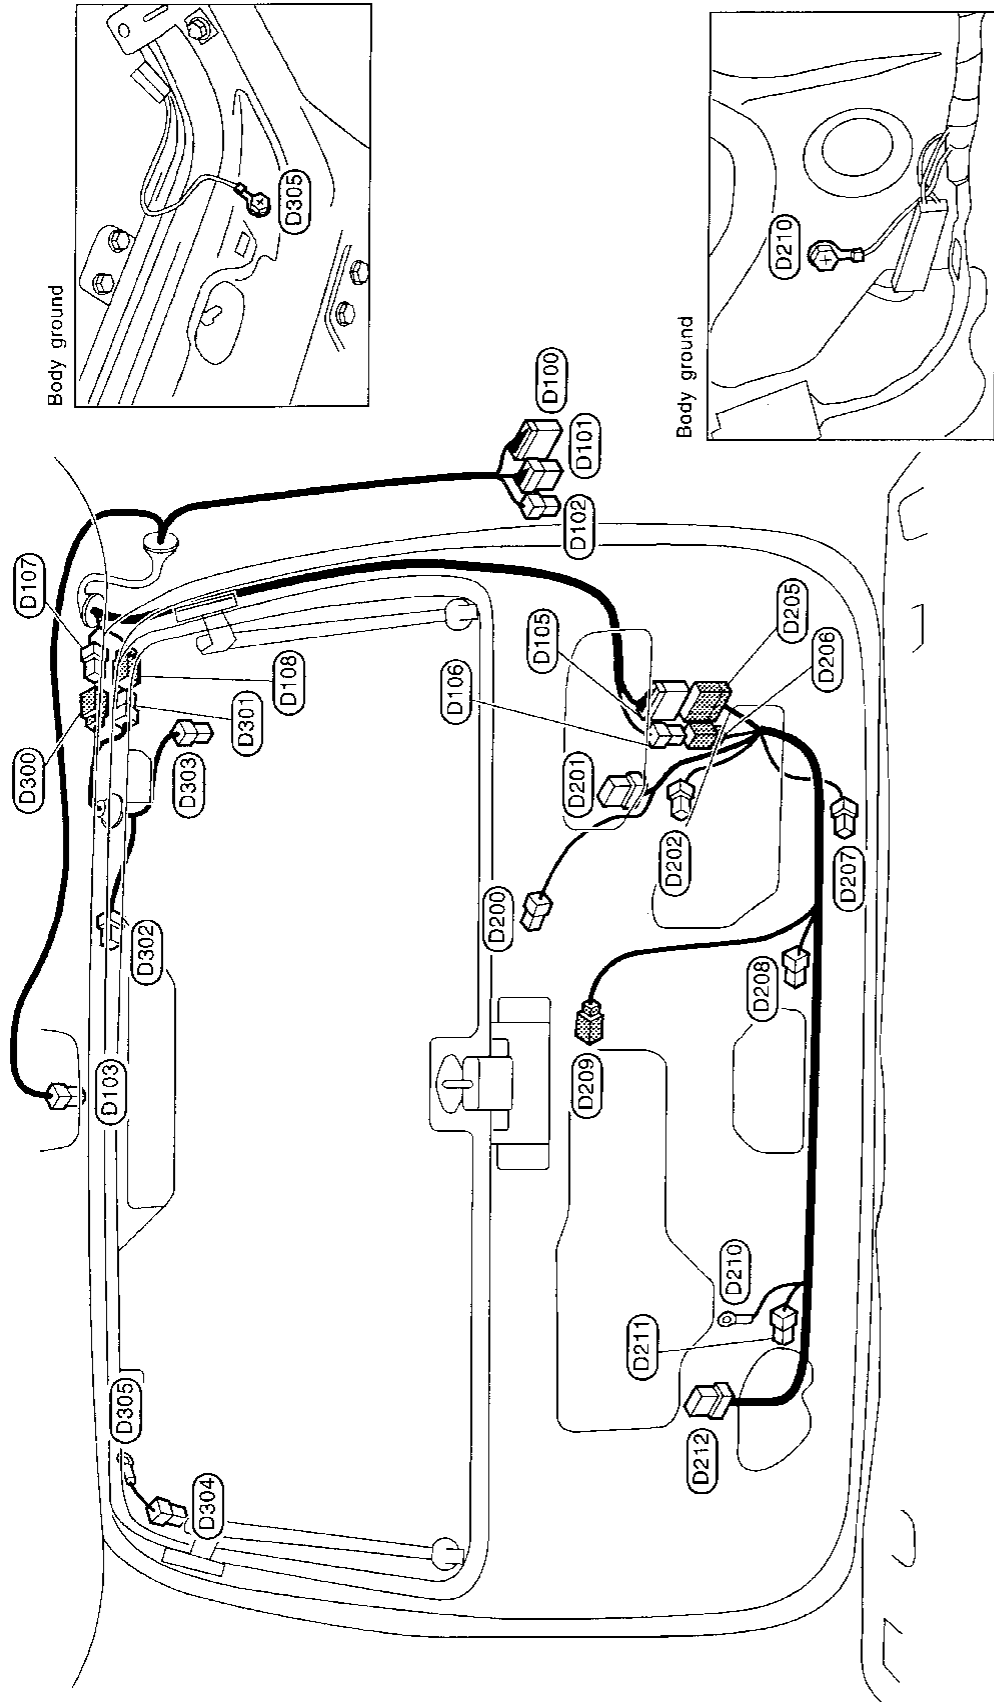


- | | | | | |
|------|------|---|-------------------------------|------|
| D100 | W/12 | : | To | B23 |
| D101 | W/6 | : | To | B24 |
| D102 | W/4 | : | To | B25 |
| D103 | W/3 | : | Luggage room lamp | |
| D105 | W/12 | : | To | D205 |
| D106 | W/4 | : | To | D206 |
| D107 | W/2 | : | To | D300 |
| D108 | W/1 | : | To | D301 |
| D200 | W/4 | : | Glass hatch opener actuator | |
| D201 | W/6 | : | Back door key cylinder switch | |
| D202 | B/2 | : | License plate lamp LH | |
| D205 | W/12 | : | To | D105 |
| D206 | W/4 | : | To | D106 |
| D207 | W/4 | : | Back door lock actuator | |
| D208 | W/2 | : | Back door switch | |
| D209 | W/2 | : | Glass hatch switch | |
| D210 | — | : | Body ground | |
| D211 | B/2 | : | License plate lamp RH | |
| D212 | W/8 | : | Rear wiper motor | |
| D300 | W/2 | : | To | D107 |
| D301 | W/1 | : | To | D108 |
| D302 | W/3 | : | High-mounted stop lamp | |
| D303 | B/1 | : | Rear window defogger | |
| D304 | B/1 | : | Rear window defogger | |
| D305 | — | : | Body ground | |


HARNESS LAYOUT

Engine and Transmission Harness

- B206** : GY/8 : To **B76**
- B207** : B/8 : To **B60**
- B208** : B/4 : To **B79**
- B209** : GY/8 : Terminal cord assembly
- B210** : GY/2 : ATP switch
- B211** : B/2 : Wait detection switch
- B212** : B/2 : Transfer motor
- B213** : BR/2 : Neutral-4LO switch
- B214** : GY/3 : Front revolution sensor

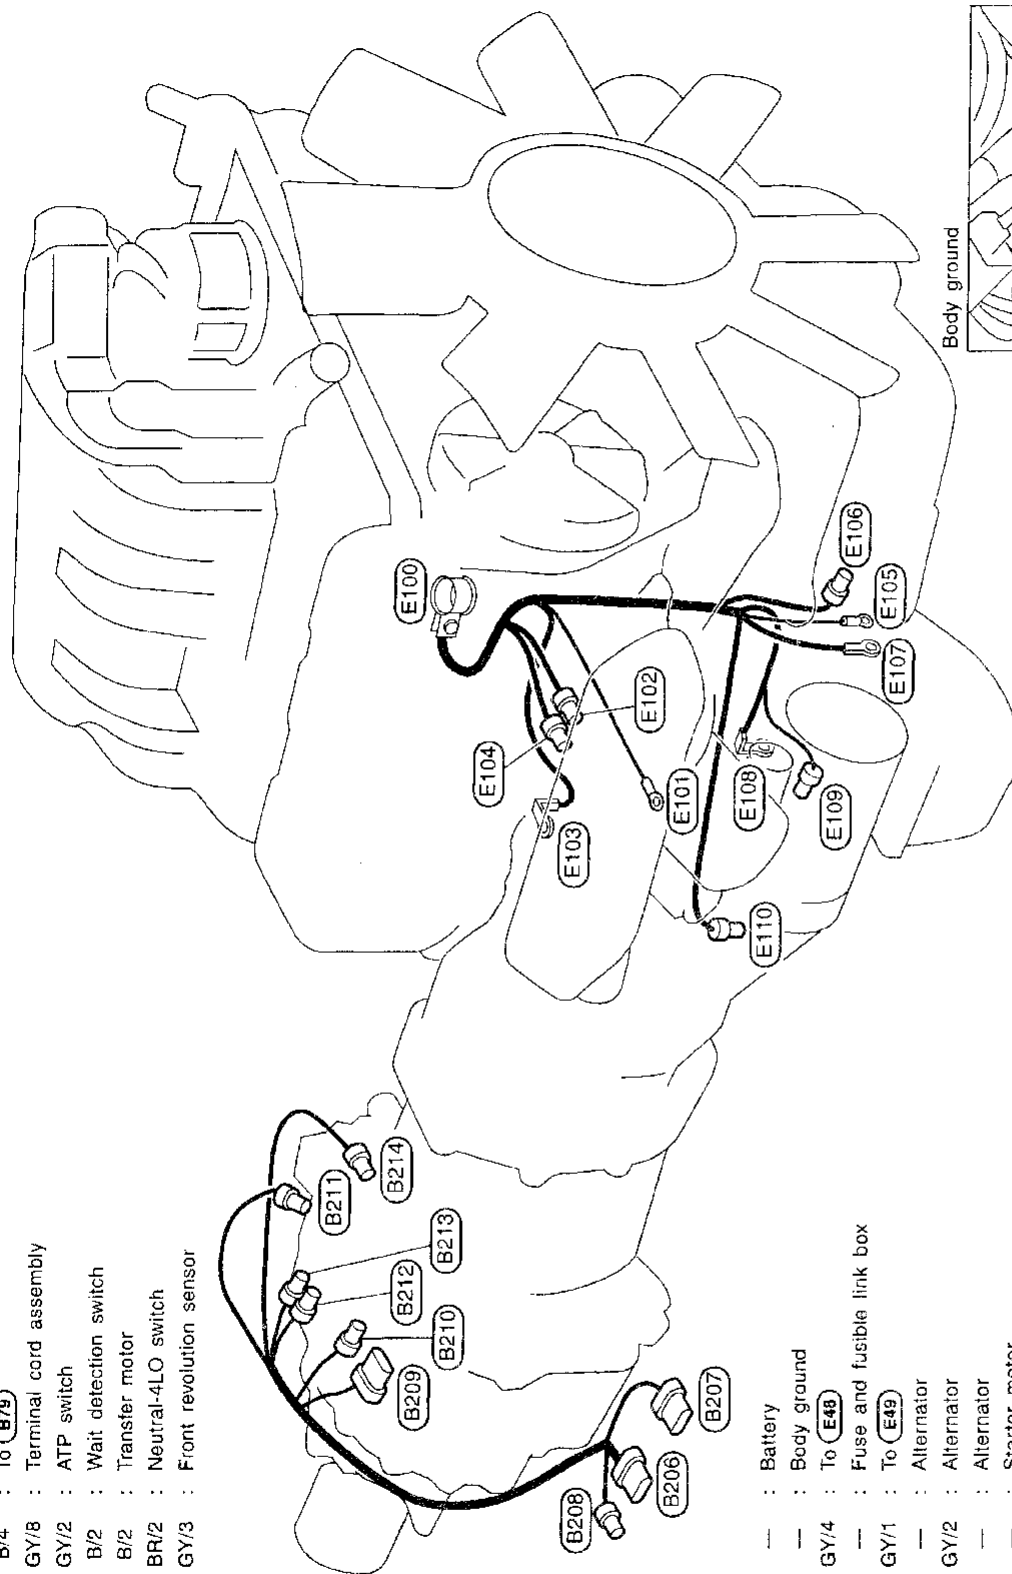


- E100** : Battery
- E101** : Body ground
- E102** : GY/4 : To **E48**
- E103** : Fuse and fusible link box
- E104** : GY/1 : To **E49**
- E105** : Alternator
- E106** : GY/2 : Alternator
- E107** : Alternator
- E108** : Starter motor
- E109** : Starter motor
- E110** : GY/2 : Power steering oil pressure switch

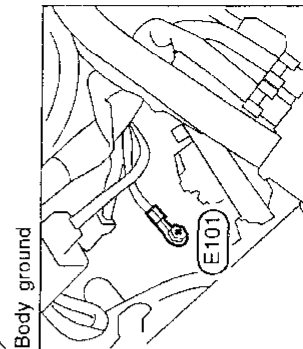

GI
MA
EM
LC
FC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IOX


HARNESS LAYOUT

Room Lamp

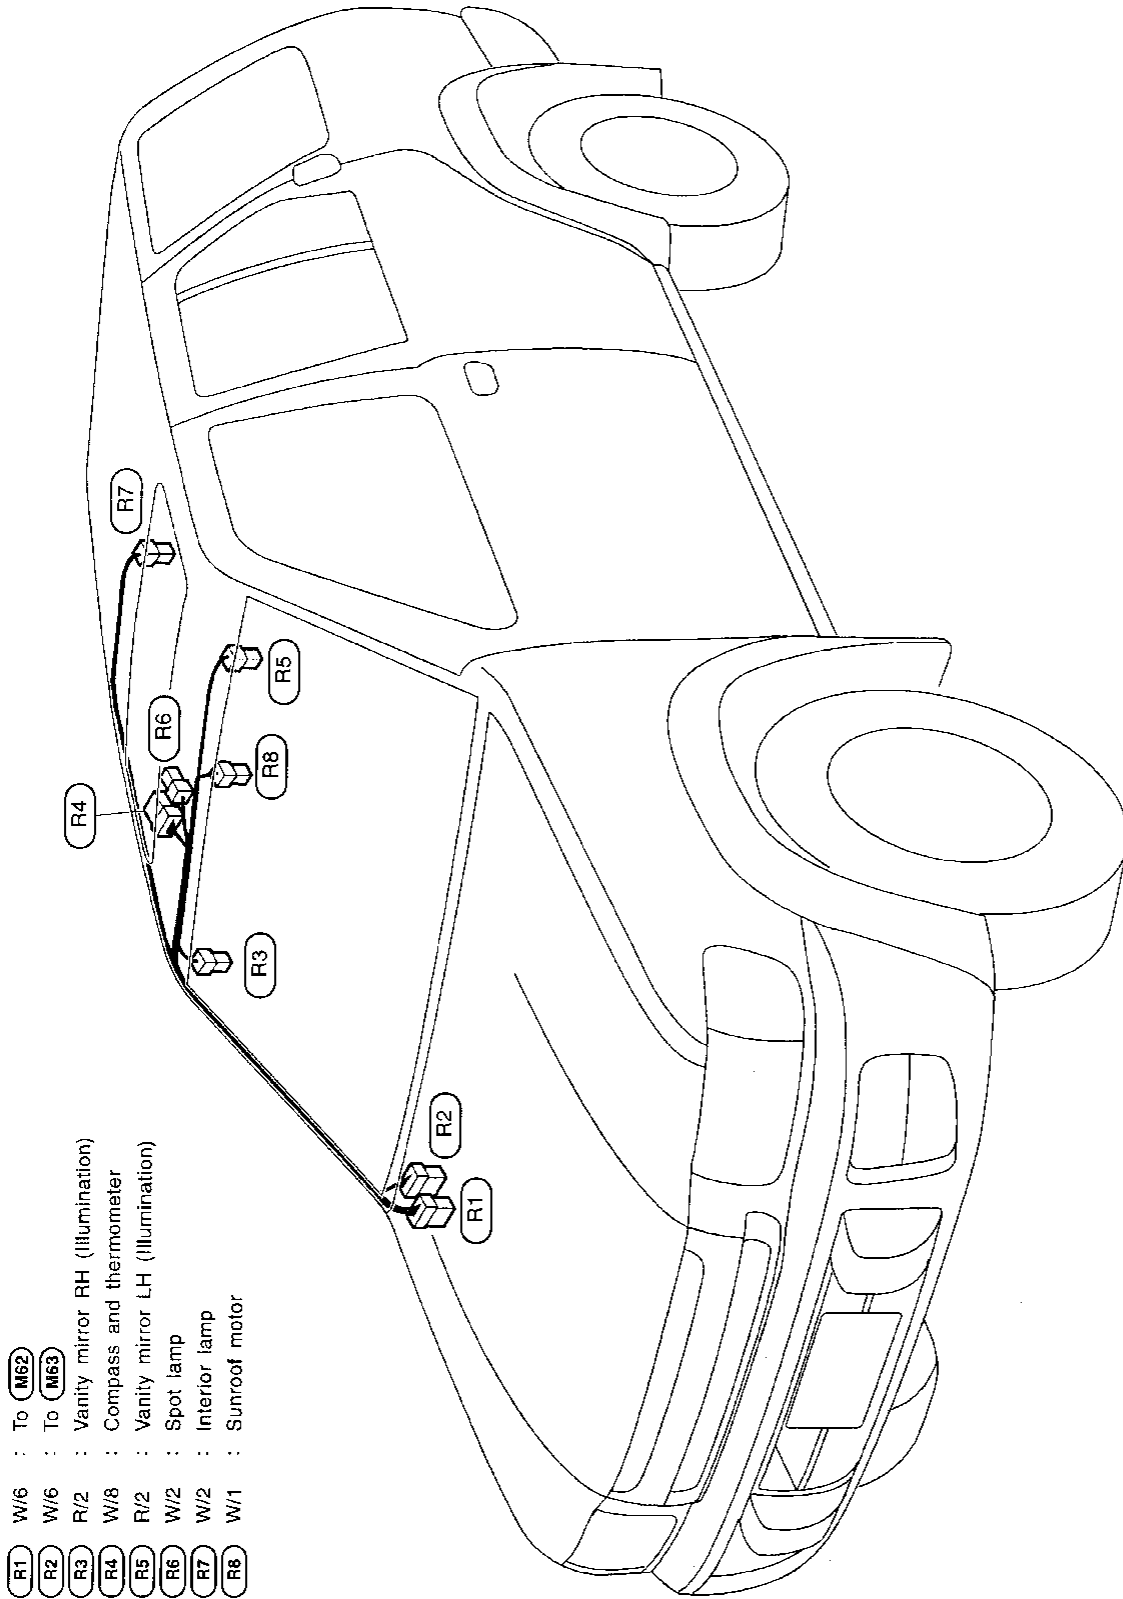

HARNES LAYOUT

Air Bag Harness

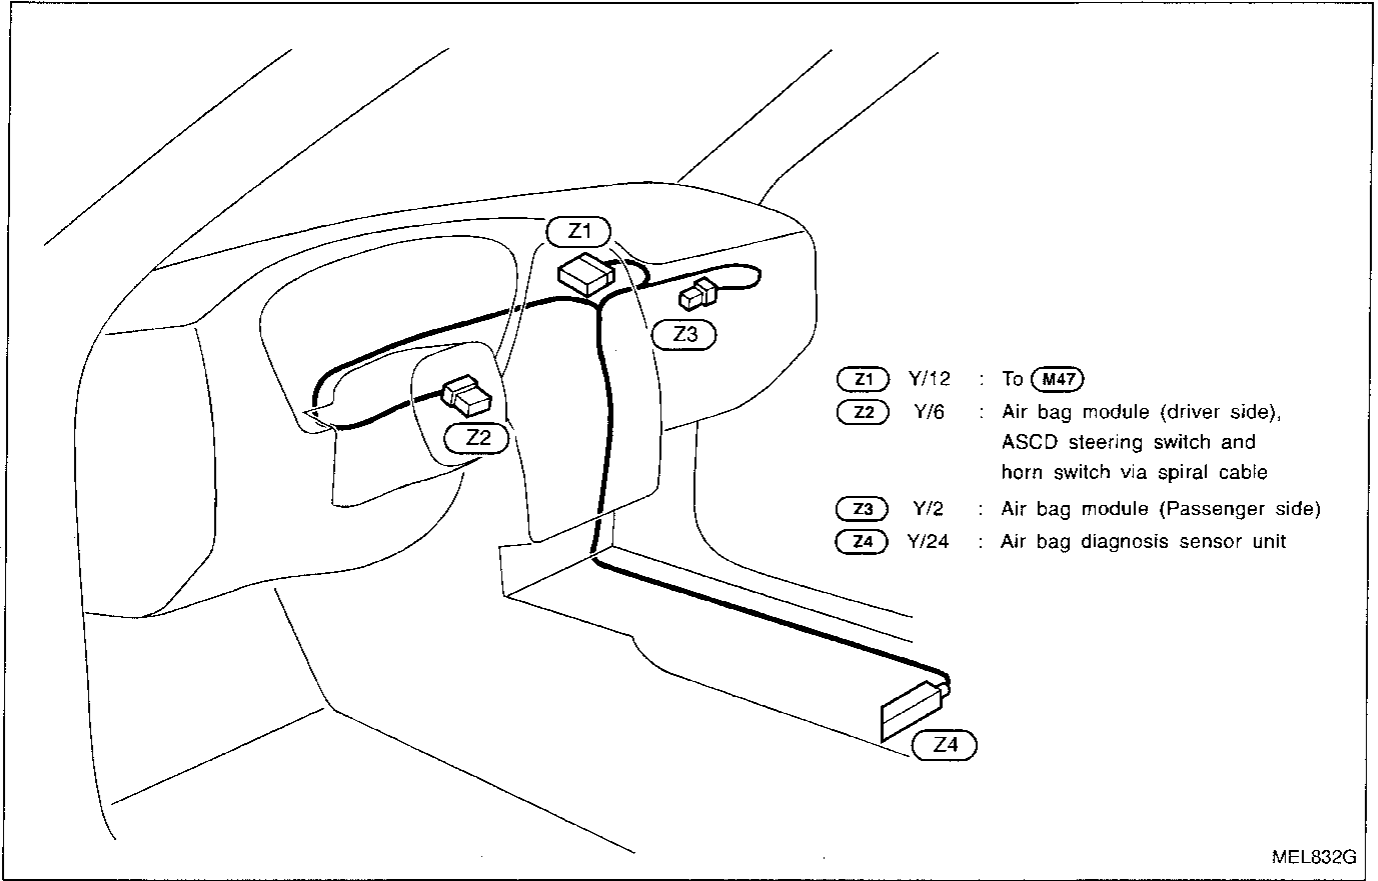


GI
MA
EM
LC
EC
FE
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

HARNESS LAYOUT

FRONT


Door Harness (LH side)

- D1** GY/5 : Door mirror defogger LH
- D2** BR/3 : Door mirror LH
- D3** W/16 : To **M5**
- D4** W/10 : To **M6**
- D5** B/2 : Front power window regulator LH
- D6** W/16 : Front power window switch LH
- D7** GY/4 : Front door lock actuator LH
- D9** BR/3 : Front door key cylinder switch LH
- D11** BR/4 : To **M97**
- D12** W/6 : Front door speaker LH

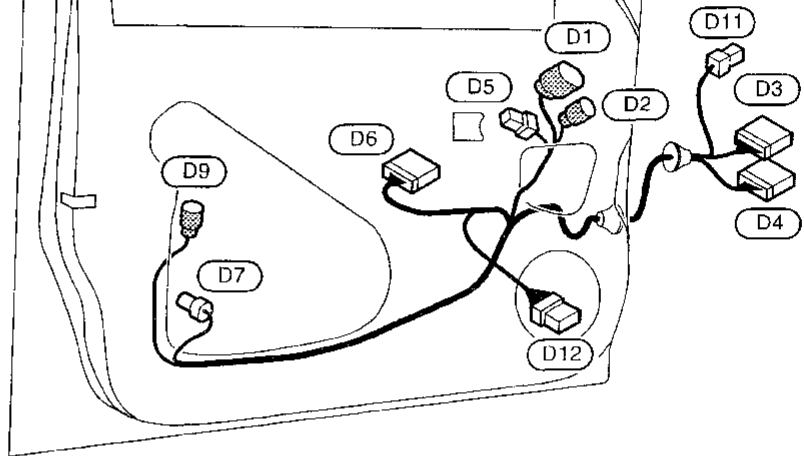

MEL094H

REAR

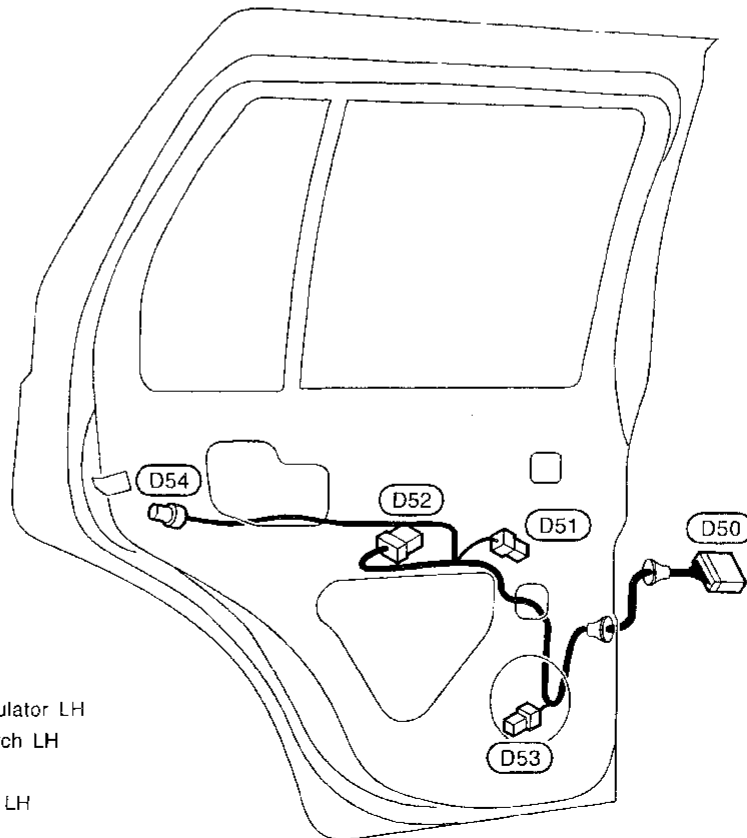


- D50** W/10 : To **B10**
- D51** B/2 : Rear power window regulator LH
- D52** W/8 : Rear power window switch LH
- D53** BR/2 : Rear door speaker LH
- D54** GY/4 : Rear door lock actuator LH

MEL870F

HARNESS LAYOUT

FRONT

Door Harness (RH side)

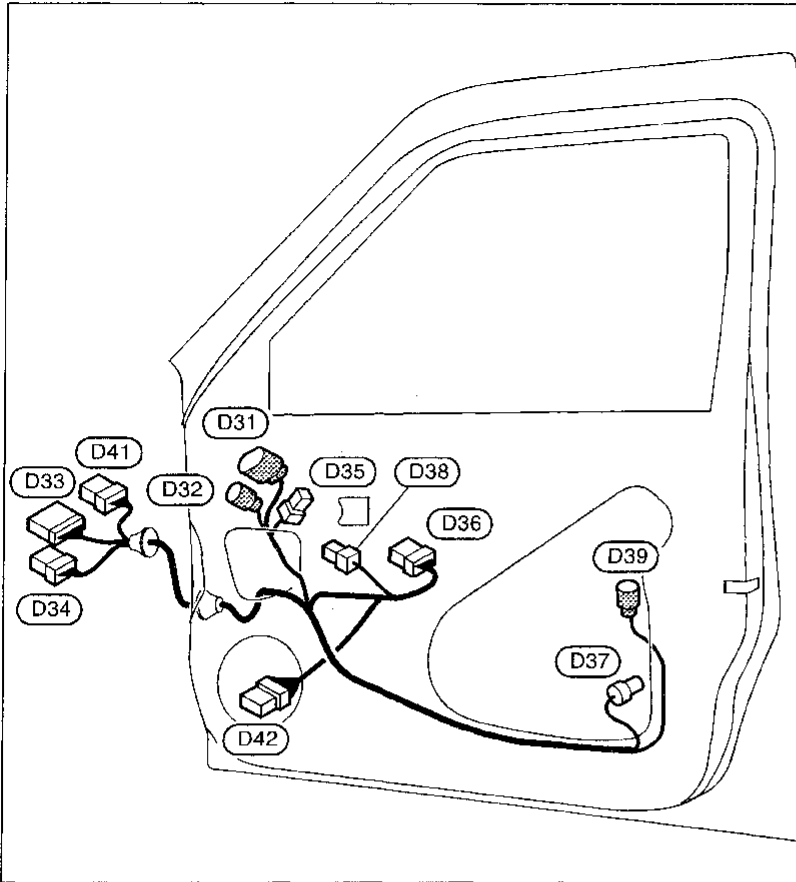


- (D31) GY/5 : Door mirror defogger RH
- (D32) BR/3 : Door mirror RH
- (D33) W/12 : To (M67)
- (D34) W/6 : To (M68)
- (D35) B/2 : Power window regulator RH
- (D36) W/8 : Front power window switch RH
- (D37) GY/4 : Front door lock actuator RH
- (D38) W/3 : Door lock switch RH
- (D39) BR/3 : Front door key cylinder switch RH
- (D41) BR/6 : To (M10)
- (D42) W/6 : Front door speaker RH

MEL095H

GI
MA
EM
LC
EC
FE
AT
TF
PD
FA

REAR

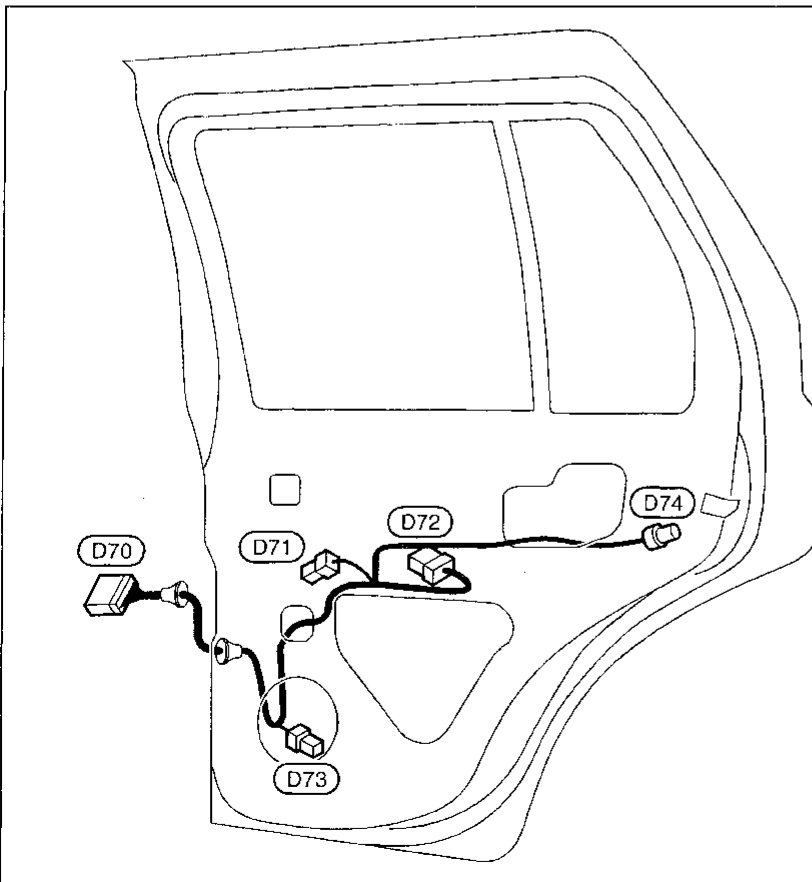

- (D70) W/10 : To (B70)
- (D71) B/2 : Rear power window regulator RH
- (D72) W/8 : Rear power window switch RH
- (D73) BR/2 : Rear door speaker RH
- (D74) GY/4 : Rear door lock actuator RH

MEL873F

RA
BR
ST
RS
BT
HA
EL
IDX