TRANSFER

SECTION

MA

EM

LC

EC

FE

GI

CONTENTS

PRECAUTIONS	3
Supplemental Restraint System (SRS) "AIR	
BAG" and "SEAT BELT PRE-TENSIONER"	3
Precautions	3
Service Notice	4
Wiring Diagrams and Trouble Diagnosis	
PREPARATION	
Special Service Tools	
Commercial Service Tools	
ALL-MODE 4WD SYSTEM	
Cross-sectional View	
Control System	
ALL-MODE 4WD TRANSFER BASIC CONTROL	
HYDRAULIC CONTROL CIRCUITS	
OUTLINE	
CONTROL SYSTEM DIAGRAM	
INDICATIONS OF 4WD WARNING LAMP	13
Location of Electrical Parts	14
Description of Electrical Parts	15
TRANSFER MOTOR	15
WAIT DETECTION SWITCH	
2-4WD SHIFT SOLENOID VALVE	
LINE PRESSURE SWITCH	
Circuit Diagram for Quick Pinpoint Check	17
Wiring Diagram - TF	18
ON BOARD DIAGNOSTIC SYSTEM	
DESCRIPTION	
Trouble Diagnosis without CONSULT-II	27
DESCRIPTION	
SELF-DIAGNOSTIC PROCEDURE	
INDICATIONS OF 4WD WARNING LAMP	
Trouble Diagnosis with CONSULT-II	
SELF-DIAGNOSIS	
SELF-DIAGNOSTIC ITEMS	
DATA MONITOR	
DATA MONITOR ITEMS	
REFERENCE VALUE IN DATA MONITOR MODE	
WORK SUPPORT	
CLUTCH FORCE RELEASE LIMIT ADJUSTMENT	
TROUBLE DIAGNOSIS - INTRODUCTION	41

Introduction41	AT
DESCRIPTION41	
DIAGNOSTIC WORKSHEET41	TF
Work Flow43	
HOW TO PERFORM TROUBLE DIAGNOSES FOR	
QUICK AND ACCURATE REPAIR43	PD
TROUBLE DIAGNOSIS - BASIC INSPECTION	
Listen to Customer Complaints44	
Transfer Fluid Check	AX
Road Test44	
PREPARATION FOR ROAD TEST44	
1. CHECK BEFORE ENGINE IS STARTED45	SU
2. CHECK AT IDLE	
3. CRUISE TEST51	66
TROUBLE DIAGNOSIS - GENERAL	BR
DESCRIPTION	
Transfer Control Unit Terminals and Reference	ST
Value54	01
REMOVAL AND INSTALLATION OF TRANSFER	
CONTROL UNIT54	RS
INSPECTION OF TRANSFER CONTROL UNIT54	000
TRANSFER CONTROL UNIT INSPECTION TABLE55	
VEHICLE SPEED SENSOR (FRONT	BT
REVOLUTION SENSOR)	
Diagnostic Procedure	
4WD SOLENOID VALVE	HA
Diagnostic Procedure64	
2-4WD SHIFT SOLENOID VALVE AND 4WD	@@
SHIFT SWITCH	SC
Diagnostic Procedure66	
TRANSFER MOTOR AND TRANSFER MOTOR	EL
RELAY	كاكا
Diagnostic Procedure70	
TRANSFER FLUID TEMPERATURE SENSOR	IDX
Diagnostic Procedure73	
ATP SWITCH, WAIT DETECTION SWITCH AND	
NEUTRAL-4LO SWITCH	
Diagnostic Procedure76	
CLUTCH PRESSURE SWITCH	
Diagnostic Procedure80	

CONTENTS (Cont'd)

ACTUATOR POSITION SWITCH115 Replacing Oil Seal 116 FRONT CASE OIL SEAL 116 Transfer Motor117 INSTALLATION......118 Removal......119 Installation......119 Transfer Gear Control.....120 Transfer Components121 DISASSEMBLY......123 Rear Case.....123 DISASSEMBLY.....123 Center Case......123 DISASSEMBLY.....123 DISASSEMBLY.....133 INSPECTION......137 Center Case......138 INSPECTION......138 ASSEMBLY......141 Front Case141 ASSEMBLY141 Center Case......145 ASSEMBLY145 Final Assembly......153 SERVICE DATA AND SPECIFICATIONS (SDS) 157 General Specifications......157 Inner Gear and Outer Gear157 MAIN OIL PUMP......157 Control Valve157 SPRING157 DRIVE PLATE158 DRIVEN PLATE158 RETURN SPRING......158 RETAINING PLATE......158 Seal Ring (Mainshaft side)159 Bearing Race (Thrust needle bearing side)159 Snap Ring (Sun gear side).....159


LINE PRESSURE SWITCH83	
Diagnostic Procedure83	
ABS OPERATION SIGNAL	
Diagnostic Procedure86	
DATA ERASE/DISPLAY	
Diagnostic Procedure88	
SHIFT ACTUATOR	
Diagnostic Procedure89	
SHIFT ACTUATOR POSITION SWITCH	
Diagnostic Procedure92	
SHIFT ACTUATOR CIRCUIT	
Diagnostic Procedure94	
TROUBLE DIAGNOSES FOR SYMPTOMS	
Symptom 1. 4WD Shift Indicator Lamp Does Not	
Turn ON	
Symptom 2. 4WD Warning Lamp Does Not Turn	
ON	
Symptom 3. 4WD Shift Indicator Lamp Does Not	
Turn OFF	
Symptom 4. ATP Warning Lamp Does Not Turn	
ON	
Symptom 5. 4LO Indicator Lamp Does Not Turn	
ON	
Symptom 6. 4WD Shift Indicator Lamp Does Not	
Indicate "4H"106	
Symptom 7. 4WD Shift Indicator Lamp Repeats	
Flickering107	
Symptom 8. Tight Corner Braking Symptom108	
Symptom 9. 4WD System Does Not Operate109	
COMPONENT INSPECTION 111	
4WD Shift Switch111	
2-4WD Shift Solenoid Valve and Transfer Fluid	
Temperature Sensor 111	
4WD Solenoid Valve, Clutch Pressure Switch	
and Line Pressure Switch 111	
Front Revolution Sensor112	
Transfer Dropping Resistor112	
ATP Switch, Neutral-4LO Switch and Wait	
Detection Switch	
Transfer Motor	
Transfer Motor Relay113	
Transfer Sub-harness113	
FRONT REVOLUTION SENSOR SUB-HARNESS	
CONNECTOR113	
TRANSFER SWITCH ASSEMBLY SUB-HARNESS	
CONNECTOR114	
TRANSFER TERMINAL CORD ASSEMBLY SUB-	
HARNESS CONNECTOR	
Transfer Shift Relay (High & low)114	
Actuator & Actuator Position Switch	
ACTUATOR115	

PRECAUTIONS

Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

Supplemental Restraint System (SRS) "AIR


BAG" and "SEAT BELT PRE-TENSIONER" GI The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER" used along with a seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. The SRS system composition which is available to INFINITI QX4 is as follows: MA For a frontal collision The Supplemental Restraint System consists of driver air bag module (located in the center of the steering wheel), front passenger air bag module (located on the instrument panel on passenger side), seat belt EM pre-tensioners, a diagnosis sensor unit, warning lamp, wiring harness and spiral cable. For a side collision LC The Supplemental Restraint System consists of side air bag module (located in the outer side of front seat), satellite sensor, diagnosis sensor unit (one of components of air bags for a frontal collision), wiring harness, warning lamp (one of components of air bags for a frontal collision). EC Information necessary to service the system safely is included in the **RS** section of this Service Manual. WARNING: To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death FE in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized INFINITI dealer. Improper maintenance, including incorrect removal and installation of the SRS, can lead to per-AT sonal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the RS section. TF Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. Spiral cable and wiring harnesses covered with vellow insulation tape either just before the harness connectors or for the complete harness are related to the SRS. PD AX SU

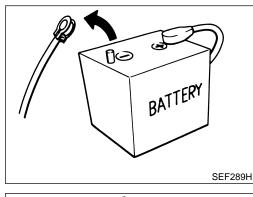

Precautions

- ST Before connecting or disconnecting the Transfer control • unit harness connector, turn ignition switch OFF and disconnect negative battery terminal. Failure to do so may damage the Transfer control unit. Because battery voltage is applied to Transfer control unit even if ignition switch is turned off. BT


 - HA

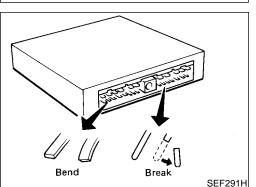

When connecting or disconnecting pin connectors into or SC from Transfer control unit, take care not to damage pin terminals (bend or break). Make sure that there are not any bends or breaks on EL Transfer control unit pin terminal, when connecting pin connectors.

PRECAUTIONS

Precautions (Cont'd)

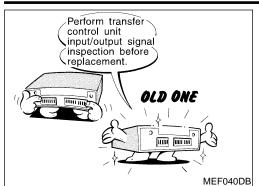

• Before replacing Transfer control unit, perform Transfer control unit input/output signal inspection and make sure whether Transfer control unit functions properly or not. (See page TF-55.)

Service Notice

- 1) Before proceeding with disassembly, thoroughly clean the outside of the all-mode 4WD transfer. It is important to prevent the internal parts from becoming contaminated by dirt or other foreign matter.
- 2) Disassembly should be done in a clean work area.
- 3) Use lint-free cloth or towels for wiping parts clean. Common shop rags can leave fibers that could interfere with the operation of the all-mode 4WD transfer.
- 4) Place disassembled parts in order for easier and proper assembly.
- 5) All parts should be carefully cleaned with a general purpose, non-flammable solvent before inspection or reassembly.
- 6) Gaskets, seals and O-rings should be replaced any time the all-mode 4WD transfer is disassembled.
- 7) It is very important to perform functional tests whenever they are indicated.
- 8) The valve body contains precision parts and requires extreme care when parts are removed and serviced. Place removed parts in a parts rack in order to replace them in correct positions and sequences. Care will also prevent springs and small parts from becoming scattered or lost.
- 9) Properly installed valves, sleeves, plugs, etc. will slide along bores in valve body under their own weight.
- 10) Before assembly, apply a coat of recommended ATF to all parts. Apply petroleum jelly to protect O-rings and seals, and to hold bearings and washers in place during assembly. Do not use grease.
- 11) Extreme care should be taken to avoid damage to O-rings, seals and gaskets when assembling.
- 12) After overhaul, refill the transfer with new ATF.
- 13) When the all-mode 4WD transfer drain plug is removed, only some of the fluid is drained. Old all-mode 4WD transfer fluid will remain in torque converter and ATF cooling system. Always follow the procedures, MA-22, "Changing All-mode 4WD Transfer Fluid".

Wiring Diagrams and Trouble Diagnosis

NBTF0003

When you read wiring diagrams, refer to the following:

- GI-11, "HOW TO READ WIRING DIAGRAMS"
- EL-9, "POWER SUPPLY ROUTING"

When you perform trouble diagnosis, refer to the following:

- GI-35, "HOW TO FOLLOW TEST GROUPS IN TROUBLE DIAGNOSIS"
- GI-24, "HOW TO PERFORM EFFICIENT DIAGNOSIS FOR AN ELECTRICAL INCIDENT"


Special Service Tools

Special Service Tools NBTF0004 The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here. GI Tool number (Kent-Moore No.) Description Tool name MA KV38108300 Removing companion flange nut (J44195) Installing companion flange nut EM Companion flange wrench LC NT771 EC KV40100621 Installing front drive shaft bearing (J26091) a: 76 mm (2.99 in) dia. Drift b: 69 mm (2.72 in) dia. FE AT NT086 ST30032000 Installing front drive shaft bearing) a: 38 mm (1.50 in) dia. TF b: 80 mm (3.15 in) dia. Base PD AX NT660 ST30021000 Removing front drive shaft bearing SU a: 110 mm (4.33 in) dia.) Puller b: 68 mm (2.68 in) dia. ST NT411 ST33052000 Removing front drive shaft bearing a: 28 mm (1.10 in) dia.) Adapter b: 22 mm (0.87 in) dia. BT NT431 ST35271000 Installing rear oil seal HA (J26091) Removing and installing press flange snap ring Drift a: 72 mm (2.83 in) dia. b: 63 mm (2.48 in) dia. SC NT115 EL

IDX

Special Service Tools (Cont'd)

Tool number (Kent-Moore No.) Tool name	Description	
ST27863000 (—) Support ring		Removing and installing press flange snap ring a: 74.5 mm (2.933 in) dia. b: 62.5 mm (2.461 in) dia.
KV40104710 (—) Support ring		Removing and installing press flange snap ring a: 76.3 mm (3.004 in) dia. b: 67.9 mm (2.673 in) dia.
ST35291000 (—) Remover		Removing mainshaft rear bearing a: 40 mm (1.57 in) dia. b: 29.5 mm (1.161 in) dia. c: 22.5 mm (0.886 in) dia.
ST30090010 (—) Remover	NT662	Removing mainshaft rear bearing a: 165 mm (6.50 in) b: 25 mm (0.98 in) dia. c: M16 x P2.0
KV38100500 (—) Drift	NT115	Installing front drive shaft oil seal a: 80 mm (3.15 in) dia. b: 60 mm (2.36 in) dia.
KV40100621 (J25273) Drift	NT104	Installing mainshaft rear bearing a: 76 mm (2.99 in) dia. b: 69 mm (2.72 in) dia.

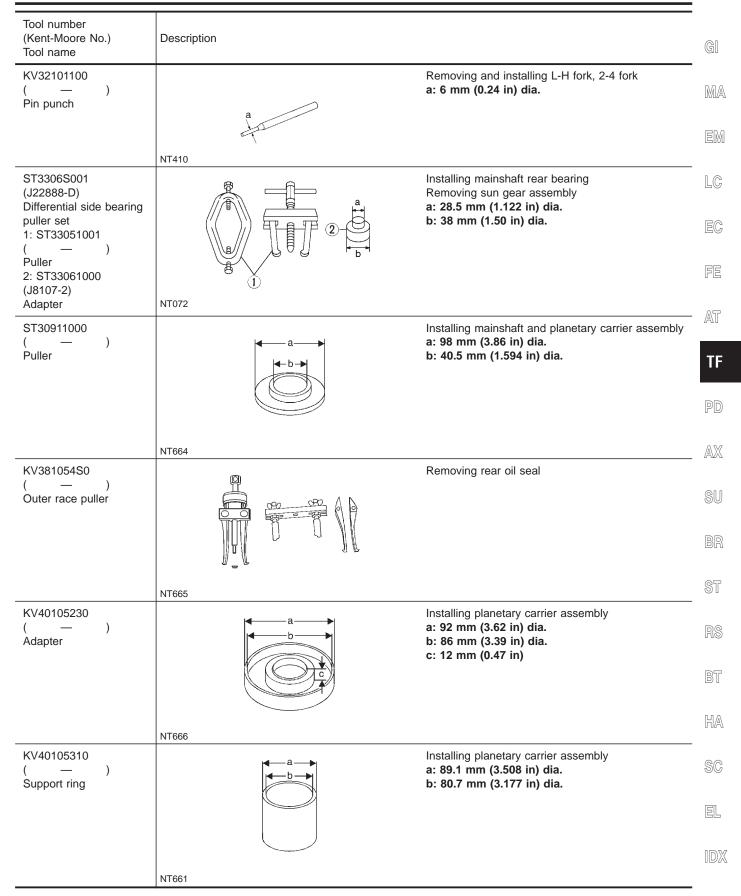


Special Service Tools (Cont'd)

Tool number (Kent-Moore No.) Tool name	Description	
KV40105500 (—) Support		Installing planetary carrier assembly a: 69 mm (2.72 in) dia. b: 52 mm (2.05 in) dia. c: 120 mm (4.72 in) dia.
KV38100200 (—) Drift	NT667	Installing transfer cover oil seal a: 65 mm (2.56 in) dia. b: 49 mm (1.93 in) dia.
KV31103300 (—) Drift	NT673	Removing and installing press flange snap ring a: 76.3 mm (3.004 in) dia. b: 130 mm (5.12 in)
	NT668	
KV31103400 (—) Clutch piston attachment 1 Shaft-drift 2 Guide-cylinder		Installing clutch piston a: 88.5 mm (3.484 in) dia. b: 158 mm (6.22 in) dia.
	NT669	
ST33290001 (J25810-A) Puller		Removing center case oil seal Removing rear oil seal a: 250 mm (9.84 in) b: 160 mm (6.30 in)
	NT414	
ST33051001 (J22888) Puller		Removing companion flange a: 135 mm (5.31 in) b: 100 mm (3.94 in) c: 170 mm (6.69 in)

Tool number (Kent-Moore No.) Tool name	Description	G]
(J35864) Drift	Installing oil seal	MA
		EM
		LC
	NT671	EC
		FE
		AT
		TF
Tool name	Commercial Service Tools	PD
Puller	Removing companion flange, clutch gear and mainshaft gear bearing	AX
		SU
	NT077	BR
		ST
		RS
		BT
		HA
		SC
		EL
		IDX

Cross-sectional View

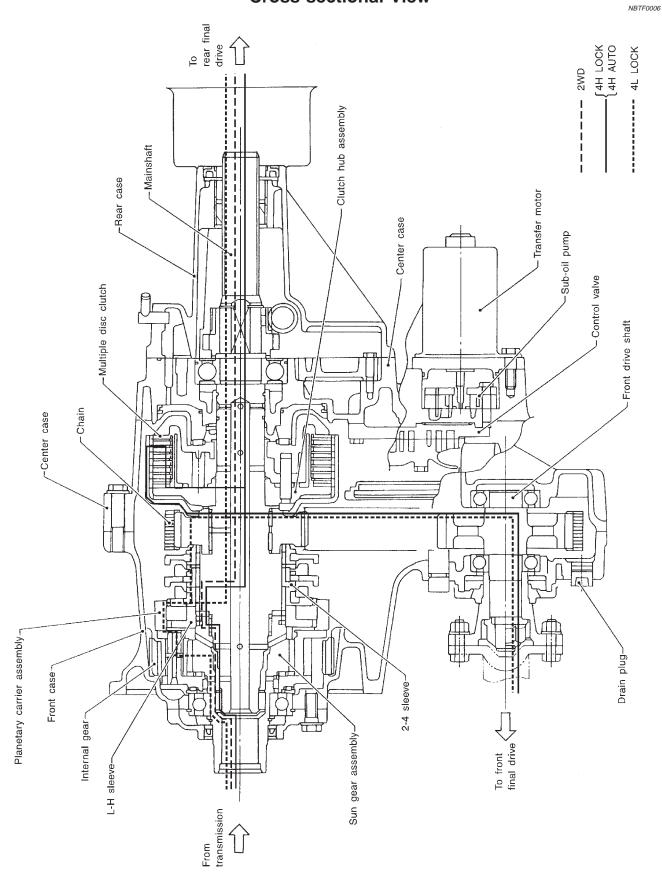


Control System

Control System




NBTF0007

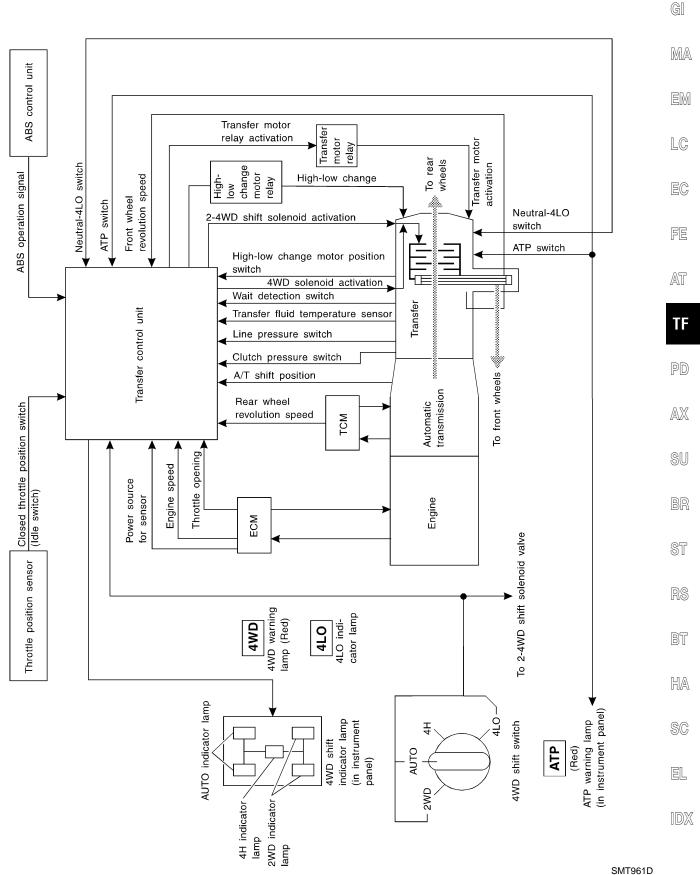


TF-11

ALL-MODE 4WD TRANSFER BASIC CONTROL

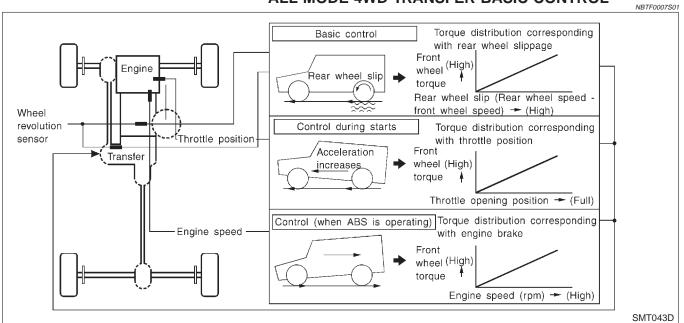

HYDRAULIC CONTROL CIRCUITS

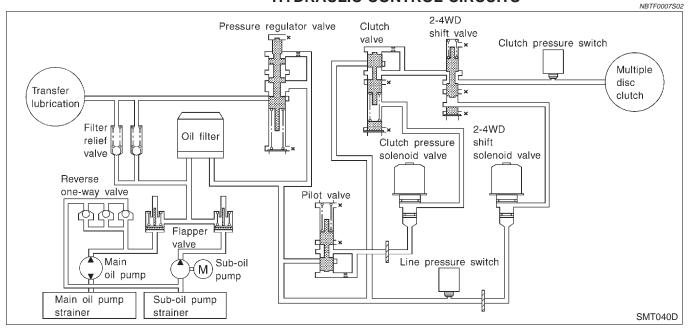

OUTLINE


All-mode 4WD transfer is controlled by the transfer control unit and sensors.

If a malfunction occurs in the all-mode 4WD system, the 4WD warning lamp lights up to indicate the system malfunction. There are two ways to identify the cause of the malfunction.

- 1) Performing the self-diagnosis. (The 4WD warning lamp will indicate what kind of malfunction has occurred by flickering.)
- 2) Performing diagnosis using CONSULT-II.

Control System (Cont'd)



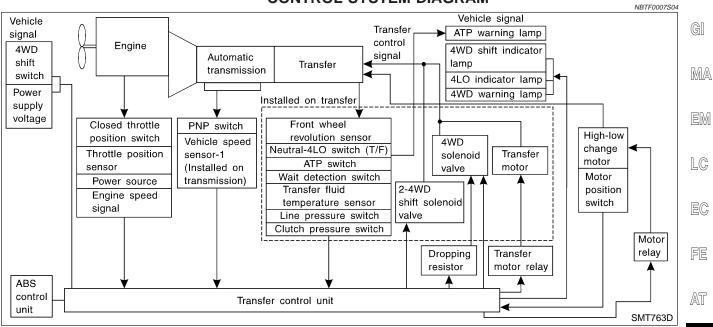

INDICATIONS OF 4WD WARNING LAMP

Content	4WD warning lamp	P
Indicates the malfunction position by number of flickers.	Flickers at malfunction mode.	P
Checks the lamp by turning ON during engine starting. After engine starts, it turns OFF if there are no malfunctions.	ON	A
Turns ON to indicate malfunction. When ignition switch is turned to "OFF" or the malfunction is corrected, it turns OFF.	ON	Ś
Flickers once every 2 seconds. Turns OFF when ignition switch is "OFF".	Flickers once every 2 sec- onds.	00
When fluid temperature is high or fluid temperature sensor circuit is shorted, it flickers twice every second. It turns OFF when fluid temperature becomes normal.	Flickers twice a second.	 (2)
Lamp is OFF.	OFF	
	Indicates the malfunction position by number of flickers. Checks the lamp by turning ON during engine starting. After engine starts, it turns OFF if there are no malfunctions. Turns ON to indicate malfunction. When ignition switch is turned to "OFF" or the malfunction is corrected, it turns OFF. Flickers once every 2 seconds. Turns OFF when ignition switch is "OFF". When fluid temperature is high or fluid temperature sensor circuit is shorted, it flickers twice every second. It turns OFF when fluid temperature becomes normal.	Indicates the malfunction position by number of flickers. Flickers at malfunction mode. Checks the lamp by turning ON during engine starting. After engine starts, it turns OFF if there are no malfunctions. ON Turns ON to indicate malfunction. When ignition switch is turned to "OFF" or the malfunction is corrected, it turns OFF. ON Flickers once every 2 seconds. Turns OFF when ignition switch is "OFF". ON When fluid temperature is high or fluid temperature sensor circuit is shorted, it flickers twice every second. It turns OFF when fluid temperature becomes normal. Flickers twice a second.

*: When 4WD warning lamp is ON, all the 4WD shift indicator lamps turn OFF.

BT

TF


NBTF0007S05

HA

SC

EL

IDX

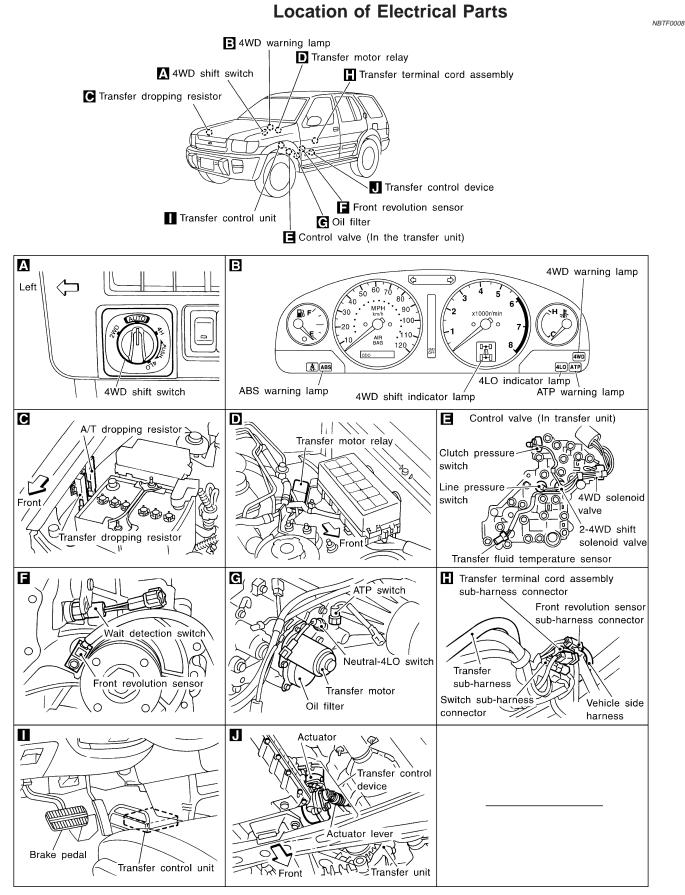

NBTF0067

LC

EC

AX

Description of Electrical Parts

TRANSFER MOTOR

- The transfer motor drives the sub-oil pump to provide proper lubrication and oil pressure control when the vehicle is at standstill, during low-speed operations or is being driven in reverse.
- 2. The main oil pump is operated by the driving force of the mainshaft. In other words, sufficient oil pressure buildup does not occur when the vehicle is at standstill or during low-speed operations. While the vehicle is being driven in reverse, the main oil pump rotates in the reverse direction. Therefore the main oil pump does not discharge oil pressure. During any of the above vehicle operations, the transfer motor drives the sub-oil pump to compensate for insufficient oil pressure.
- 3. The transfer motor operates as follows:
- 1) The motor relay turns OFF in the 2WD mode.
- 2) The motor relay operates as described in the table below in modes other than the 2WD mode.

Table 1

PNP switch "R" position	VFF (Vehicle speed)	A/T position	Motor relay drive command		
ON	_	R	ON	-	
	0 km/h	Positions other than the "P" or "N" positions	ON	-	
OFF		"P" or "N" position (See Table 2.)	_	-	
	$0 < VFF \leq 30 \text{ km/h}$	_	ON	- T	
	30 < VFF < 35 km/h	-	HOLD	P	
	35 km/h ≦ VFF	-	OFF	[

Table 2

A/T position	N-4L SW	4WD mode -	Throttle position		- SU	
A/T position			0 - 0.07/8	0.07/8 - 1/8	1/8 - MAX	_ 00
		LOCK (4H)	ON	ON	ON	BR
Ν	OFF	Positions other than the LOCK position (2WD or AUTO)	See NOTE.	HOLD	ON	ST
	ON	—	See NOTE.	HOLD	ON	_
Р	_	—	See NOTE.	HOLD	ON	RS

NOTE:

OFF (after 2.5 seconds have elapsed.)

4. 4WD shift switch, PNP switch, Neutral-4LO switch, vehicle speed sensor and throttle position sensor are used in conjunction with the transfer motor.

WAIT DETECTION SWITCH

- The wait detection switch releases the "booming" torque produced in the propeller shaft. After the release of the "booming" torque, the wait detection switch helps provide the 4WD lock gear (clutch drum) shifts. A difference may occur between the operation ("4LO" to "4H" shift only) of the 4WD shift switch and actual drive mode. At this point, the wait detection switch senses an actual drive mode.
- The wait detection switch operates as follows:
 4WD lock gear (clutch drum) locked: ON
 4WD lock gear (clutch drum) released: OFF
- 3. The wait detection switch senses an actual drive mode and the 4WD shift indicator lamp indicates the DX vehicle drive mode.

- HA
- 00
- EL

2-4WD SHIFT SOLENOID VALVE


The 2-4WD shift solenoid valve operates to apply oil pressure to the wet, multiplate clutch, depending on the drive mode. The driving force is transmitted to the front wheels through the clutch so the vehicle is set in the 4WD mode. Setting the vehicle in the 2WD mode requires no pressure buildup. In other words, pressure force applied to the wet, multiplate clutch becomes zero.

LINE PRESSURE SWITCH


- With the transfer system design, control of the oil pressure provides the transmission of drive torque to the front wheels. The main pressure to control the oil pressure is referred to as the line pressure. The line pressure switch determines whether or not adequate line pressure has built up under different operating conditions.
- 2. The line pressure switch turns ON when line pressure is produced.
- 3. The line pressure switch senses line pressure abnormalities and turns the 4WD warning lamp ON.


Circuit Diagram for Quick Pinpoint Check NBTF0009 GI DATA LINK CONNECTOR IGNITION SWITCH ON or START MA Ŧ FUSE BATTERY \leq 4WD SHIFT FUSE FUSIBLE LINK FUSE 22 16 48 36 EM 2WD \boxtimes $\overline{\mathbf{X}}$ $\overline{}$ $\overline{}$ 47 2 Lw FUSE FUSE AUTO 21 $\sim \sim$ $\overline{}$ L~~~ LC Ê TRANSFER MOTOR RELAY 4H ľ 11 TACHOMETER \sim 41.0 4WD WARNING LAMP 12 ூ 14 EC, 41 5 ୭ UNIFIED METER CONTROL UNIT TRANSFER MOTOR ſ (With odo/trip meter) 37 ī TRANSFER SHIFT HI RELAY FE ATP SWITCH m 40 Ē 4 ÷ ATP WARNING LAMP 0 33 AT NEUTRAL-4LO SWITCH 7 TRANSFER SHIFT LOW RELAY 25 TF 13 $\overline{\mathbf{m}}$ PARK/NEUTRAL POSITION SWITCH 42 2 PD To starting system -M 17 7 15 TRANSFER CONTROL DEVICE ____ AX 44 TRANSFER CONTROL UNIT 27 Ŧ CLOSED SU WIDE OPEN THROTTLE POSITION SWITCH ΠQ 43 0 LINE PRESSURE SWITCH ₽ □ BR 35 l 26 CLUTCH PRESSURE SWITCH 0 34 Ī 30 ST THROTTLE POSITION SENSOR 4WD SOLENOID VALVE \mathcal{M} 19 28 Ŧ 10 $+\infty$ TRANSFER DROPPING RESISTOR FRONT REVOLUTION SENSOR (TRANSFER) 38 2–4WD SHIFT SOLENOID VALVE -m 1 BT 16 TRANSFER FLUID TEMPERATURE SENSOR TCM (TRANSMISSION 17 CONTROL MODULE) 31 ∞ HA 4WD SHIFT SWITCH 46 29 9 24 SC Т 0 6 18 91 23 111 To illumination system EL ø ЕСМ 58 82 39 ABS ACTUATOR AND ELECTRIC UNIT 25 32 13 З 45 IDX Ŧ -

MTF060A

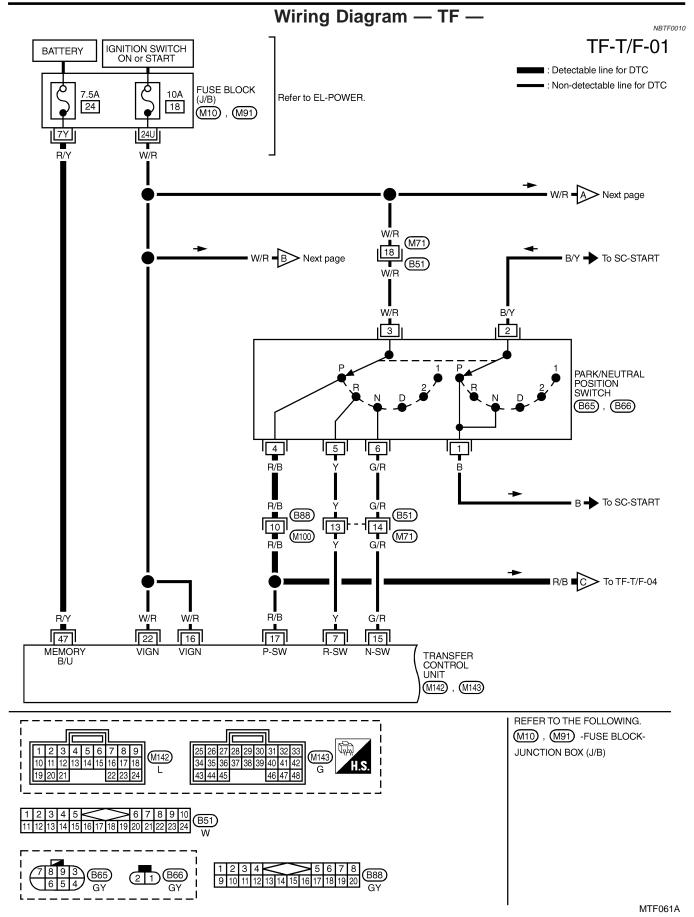



Wiring Diagram — TF — (Cont'd)

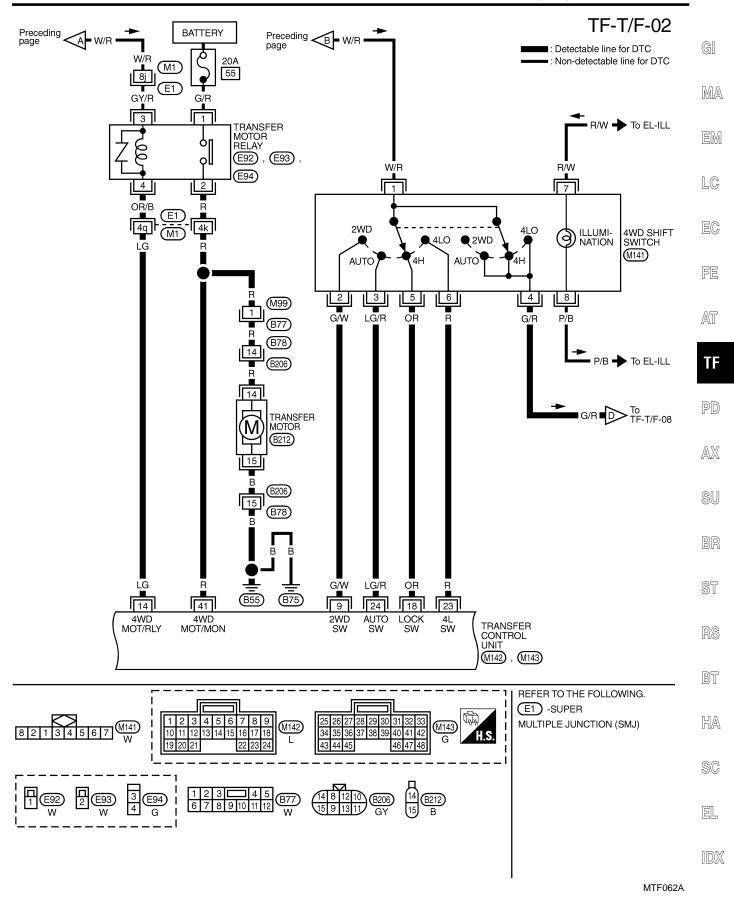


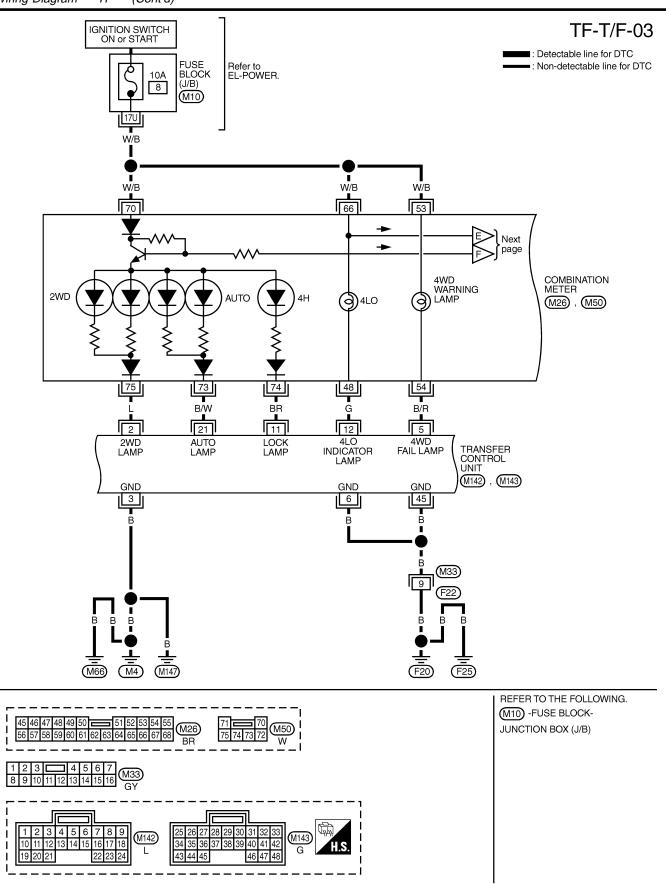

MTF063A

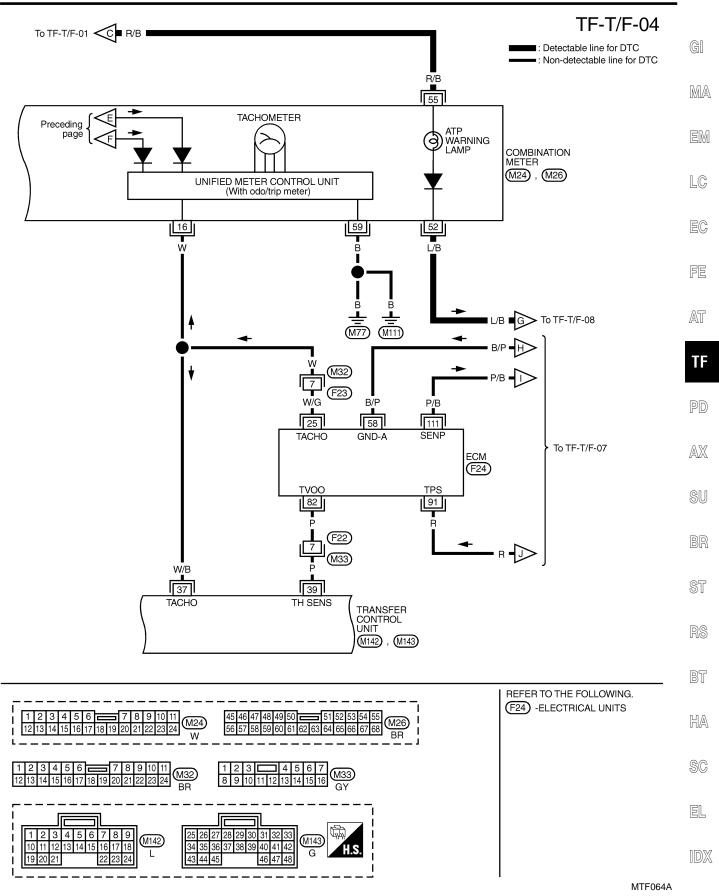


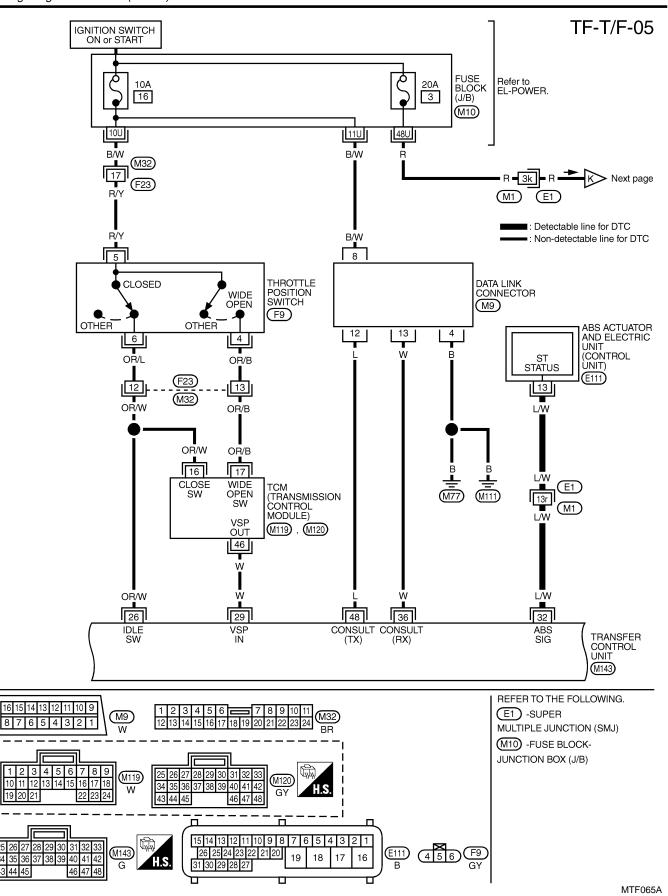

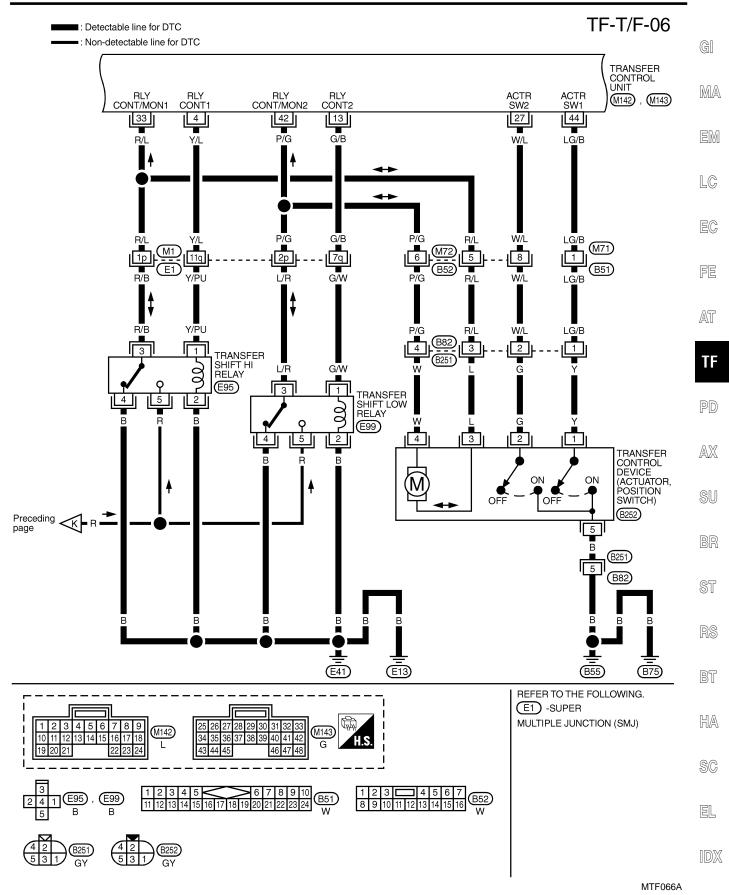





: Detectable line for DTC
 : Non-detectable line for DTC

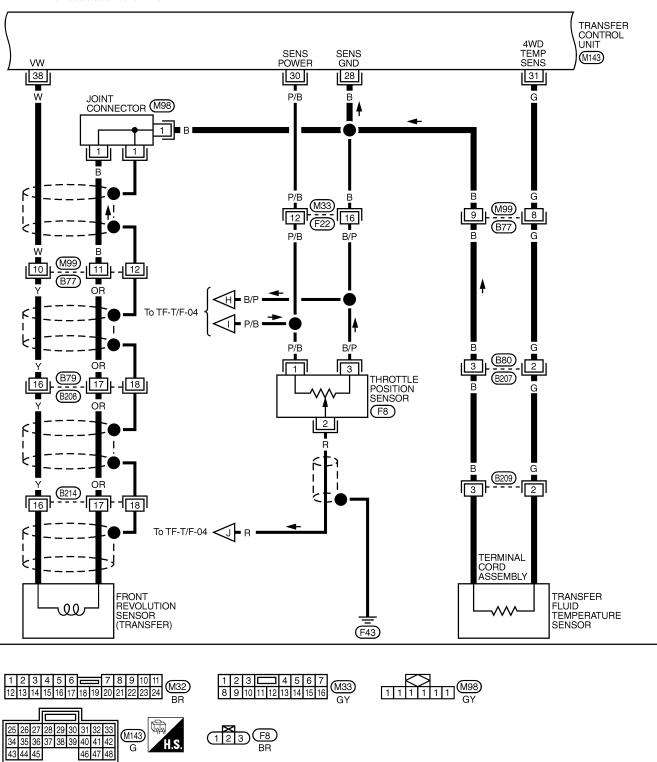



MTF067A

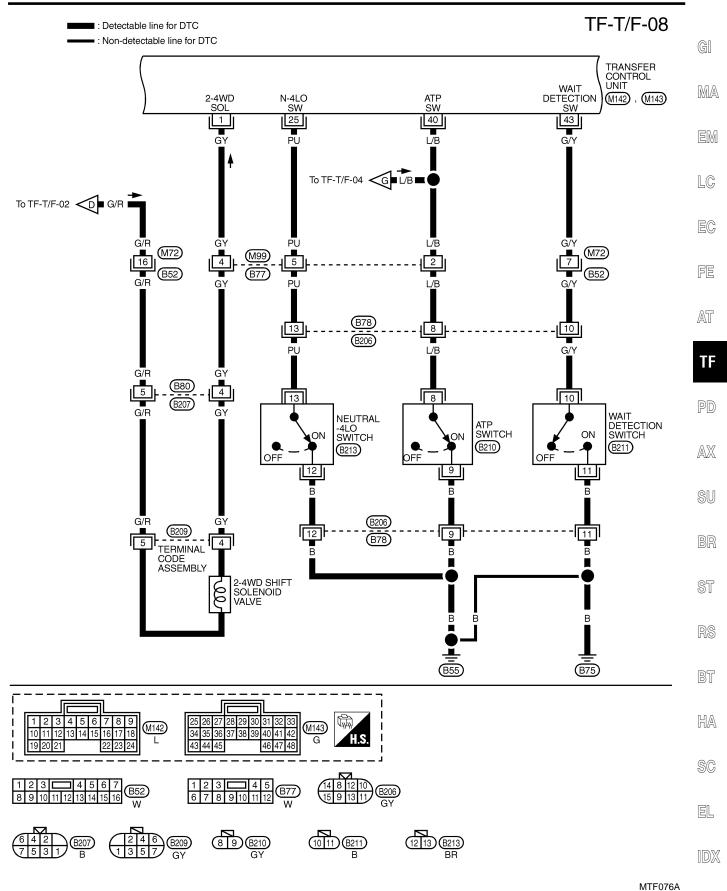

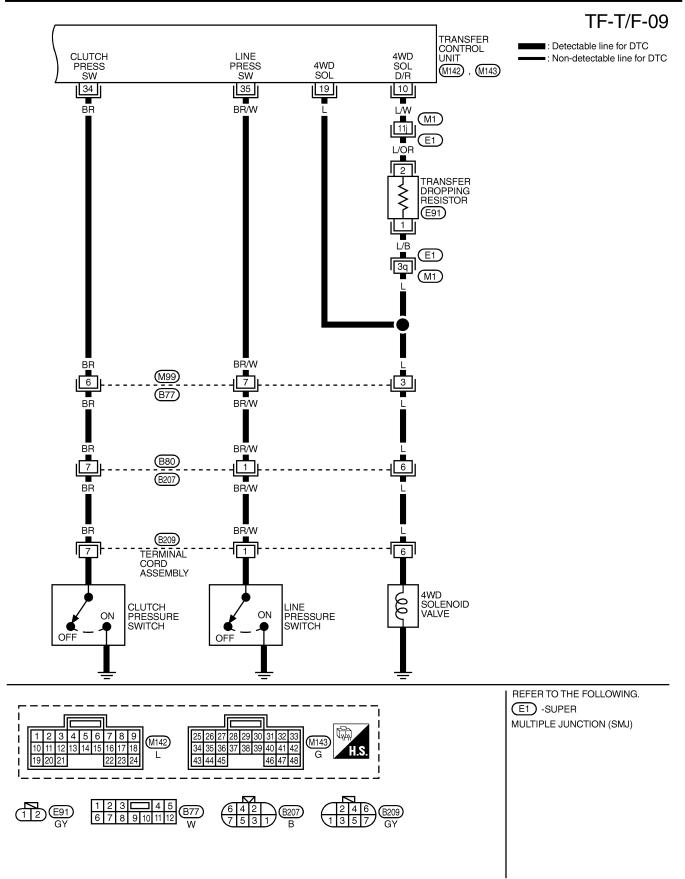

MTF068A

Trouble Diagnosis without CONSULT-II

Trouble Diagnosis without CONSULT-II

If the engine starts when there is something wrong with the allmode 4WD system, the 4WD warning lamp turns ON or flickers in the combination meter. When the system functions properly, the warning lamp turns ON when the ignition switch is turned to "ON", and it turns OFF after engine starts.

To locate the cause of a problem, start the self-diagnosis function. The 4WD warning lamp in the combination meter will indicate the problem area by flickering according to the self-diagnostic results. As for the details of the 4WD warning lamp flickering patterns, refer to TF-29.

EC

NBTF0011

FE

AT

TF

PD

AX

su

DĪĪ

ST

RS

BT

HA

SC


EL

IDX

Trouble Diagnosis without CONSULT-II (Cont'd)

SELF-DIAGNOSTIC PROCEDURE

NBTF0011S02

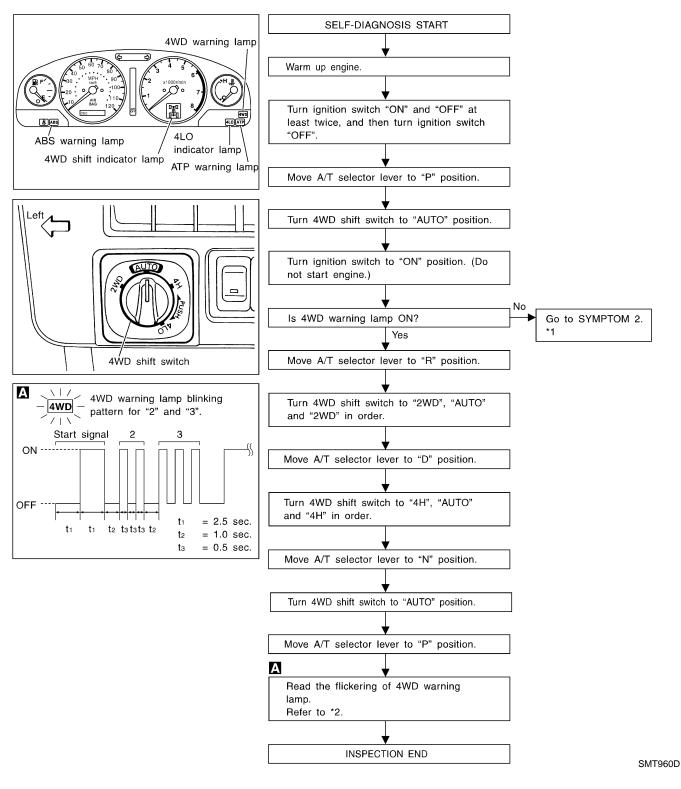

*1: TF-100

*2: TF-29

Trouble Diagnosis without CONSULT-II (Cont'd)


INDICATIONS OF 4WD WARNING LAMP

	INDICATIONS OF 4WD WARNING LAMP			
Flickering pattern or flick- ering condition	Malfunction	Check items		
1	Front revolution sensor circuit is shorted or open.	Revolution sensor (front) circuit, TF-61.		
2	Rear revolution sensor circuit is shorted or open.	Revolution sensor (rear) [Refer to AT-111, "DTC P0720 Vehicle Speed Sensor-A/T (Revolution sensor)".]		
3	4WD solenoid valve circuit is shorted or open.	4WD solenoid valve circuit, TF-64.		
4	2-4WD shift solenoid valve circuit is shorted or 2WD switch of 4WD shift switch is shorted.	2-4WD shift solenoid valve circuit or 4WD shift switch circuit, TF-66.		
5	Transfer motor relay circuit is shorted or open.	Transfer motor relay circuit, TF-70.		
8	Power supply voltage of throttle position sensor is improper. Or A/D converter of transfer control unit functions improperly.	Throttle position sensor (Refer to AT-176, "DTC P1705 Throttle Position Sensor".)		
9	Transfer fluid temperature sensor circuit is open.	Transfer fluid temperature sensor circuit, TF-73.		
10	Neutral-4LO switch circuit is shorted or open.	Neutral-4LO switch circuit, TF-76.		
11	2-4WD shift solenoid valve circuit, 2WD switch of 4WD shift switch circuit or clutch pressure switch circuit is shorted or open.	2-4WD shift solenoid valve circuit, 4WD shift switch circuit or clutch pressure switch circuit, TF-66, 80.		
12	Line pressure switch circuit is shorted or open.	Line pressure switch circuit, TF-83.		
13	Engine speed signal circuit is shorted or open.	Engine speed signal (Refer to AT-116, "DTC P0725 Engine Speed Signal".)		
14	Throttle position sensor circuit is shorted or open.	Throttle position sensor (Refer to AT-176, "DTC P1705 Throttle Position Sensor".)		
15	Failure in power supply circuit of transfer control unit.	Power supply of transfer control unit		
16	4WD shift switch circuit is shorted.	4WD shift switch circuit, TF-66.		
17	ABS operation signal circuit is shorted.	ABS operation signal circuit, TF-86.		
18	ATP switch, wait detection switch or neutral-4LO switch circuit is shorted or open.	ATP switch, wait detection switch or neutral-4LO switch circuit*, TF-76.		
19	Transfer control device actuator motor is faulty. (Abnormalities are detected when actuator motor fails to operate while shifting from "4H" to "4LO" or vice versa.)	Actuator motor and motor circuit, TF-115, 89.		
20	Transfer control device actuator motor arm position sensing switch is faulty.	Actuator motor arm position sensing switch and sensing switch circuit, TF-115, 92.		
21	Transfer control device actuator circuit is faulty (Abnormalities are detected when motor relay circuit is open/shorted or relay monitor circuit is open/shorted.)	Actuator motor, actuator motor arm position sensing switch and their associated circuits, TF-114, 115 and 94.		
Repeats flickering every 2 to 5 sec.	Circuits that the self-diagnosis covers have no malfunction.	_		
Repeats flickering every 0.25 sec.	 Power supply failure of memory back-up. Battery is disconnected for a long time. Battery performance is poor. 	Data erase/display circuit, TF-88.		

Trouble Diagnosis without CONSULT-II (Cont'd)

Flickering pattern or flick- ering condition	Malfunction	Check items
No flickering	PNP switch or 4WD shift switch circuit is shorted or open.	PNP switch (Refer to AT-99, "DTC P0705 Park/Neutral Position Switch".) or 4WD shift switch circuit, TF-66.

*: If revolution sensor malfunction is simultaneously detected, check revolution sensor first.

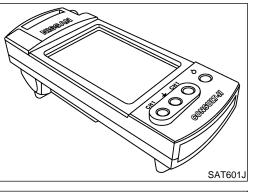

Data link connector

Trouble Diagnosis with CONSULT-II SELF-DIAGNOSIS CONSULT-II Setting Procedure


NBTF0012
NBTF0012S01
IBTF0012S0101

1. Turn ignition switch to "OFF" position.

2. Connect CONSULT-II to data link connector which is located in instrument lower panel on driver side.

- 3. Start engine.
- 4. On CONSULT-II screen, touch "START".

5. Touch "ALL MODE 4WD" on SELECT SYSTEM screen.

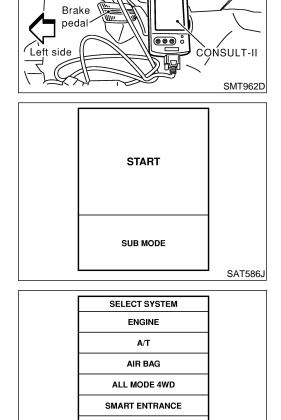

TF-30

SMT964D

Trouble Diagnosis with CONSULT-II (Cont'd)

			Houble D	agriosis with CONODER		
		6.	Touch "SELF-DIAG RESULTS	on SELECT DIAG	MODE	
SELECT DIAG MODE			screen.			
WORK SUPPORT						GI
SELF-DIAG RESULTS						
DATA MONITOR						MA
ECU PART NUMBER						0/00/-0
						ena
						EM
	SMT965D			_		LC
SELF-DIAG RESULTS		7.	Self-diagnostic results are displa	ayed.		
DTC RESULTS						EC
THROTTLE POSI SEN						FE
						٢G
						AT
	01/70000					TF
	SMT966D	05				
		SE	LF-DIAGNOSTIC ITEMS		NBTF0012S02	PD
Detected items						ru
(Sereen terms for CONSULT II		Mali	unation is datastad when	Chook itomo		

Detected items (Screen terms for CONSULT-II, "SELF-DIAG RESULT" mode)	Malfunction is detected when	Check items	
Revolution sensor (front) (Note 3) (VHCL SPEED SEN·FR)	 Front revolution sensor (installed on T/F) signal is not input due to open circuit. Improper signal is input while driving. 	Revolution sensor (front) circuit, TF-61.	
Revolution sensor (rear) (VHCL SPEED SEN·RR)	 Signal from vehicle speed sensor 1 (installed on A/T) is not input due to open circuit. Improper signal is input while driving. 	Revolution sensor (rear) [Refer to AT-111, "DTC P0720 Vehicle Speed Sensor·A/T (Revolution sensor)".]	
4WD solenoid valve (DUTY SOLENOID)	 Proper voltage is not applied to solenoid valve due to 	4WD solenoid valve, TF-64.	
2-4WD shift solenoid valve (2-4WD SOLENOID)	open or short circuit.	2-4WD shift solenoid valve or 4WD shift switch circuit, TF-66.	
Transfer motor relay (MOTOR RELAY)	• Motor does not operate properly due to open or short circuit in transfer motor or motor relay.	Transfer motor relay circuit, TF-70.	
Transfer fluid temperature sensor (FLUID TEMP SENSOR)	• Signal voltage from fluid temperature sensor is abnor- mally high (T/F fluid temperature is abnormally low) while driving.	Transfer fluid temperature sensor circuit, TF-73.	
Neutral-4LO switch (N POSI SW TF)	 Improper signal is input while driving. 	Neutral-4LO switch, TF-76.	
Clutch pressure (CLUTCH PRESSURE)	 Improper signal is input due to open or short circuit. Malfunction occurs in clutch pressure hydraulic circuit. 	Clutch pressure switch circuit (*1), TF-80.	
Line pressure (LINE PRESSURE)	 Improper signal is input due to open or short circuit. Malfunction occurs in line pressure hydraulic circuit. 	Line pressure switch circuit (*1), TF-83.	
Engine speed signal (Note 1) (ENGINE SPEED SIG)	 Engine speed is abnormally low while driving. 	Engine speed signal (Refer to AT-116, "DTC P0725 Engine Speed Signal".)	

Trouble Diagnosis with CONSULT-II (Cont'd)

Detected items (Screen terms for CONSULT-II, "SELF-DIAG RESULT" mode)	Malfunction is detected when	Check items
Throttle position sensor (THRTL POSI SEN)	 Signal voltage from throttle position sensor is abnormally high. Signal voltage from throttle position sensor is abnormally low when closed throttle position switch is OFF. 	Throttle position sensor (Refer to AT-176, "DTC P1705 Throttle Position Sensor".)
Transfer control unit (ADC) C/U (ADC)/THRTL SEN	 Power supply voltage for throttle position sensor is improper or A/D converter system of transfer control unit is faulty. 	Throttle position sensor (Refer to AT-176, "DTC P1705 Throttle Position Sensor".)
Battery voltage (Note 1) (BATTERY VOLTAGE)	 Power supply voltage for transfer control unit is abnor- mally low while driving. 	Power supply circuit (Refer to AT-96, "Wiring Diagram — AT — MAIN".)
4WD shift switch (4WD MODE SW)	 More than two switch inputs are simultaneously detected due to short circuit of 4WD shift switch. 	4WD shift switch circuit, TF-66.
ABS operation signal (Note 4) (ABS OPER SIGNAL)	 When a malfunction signal due to disconnection or shorting is detected. When a defect signal is entered from the ABS control unit. 	ABS operation signal circuit, TF-86.
Wait detection switch (Note 2) (WAIT DETECT SWITCH)	 Improper signal is input due to open or short circuit. 	ATP switch, wait detection switch and neutral-4LO switch circuits (*2), TF-76.
Shift actuator abnormal (SHIFT ACT)	Transfer control device actuator motor is faulty. (Abnor- malities are detected when actuator motor fails to oper- ate while shifting from "4H" to "4LO" or vice versa.)	Actuator motor and motor circuit, TF-115, 89.
Shift actuator position switch abnormal (SHIFT ACT P/S)	Transfer control device actuator motor arm position sens- ing switch is faulty.	Actuator motor arm position sensing switch and sensing switch circuit, TF-115, 92.
Shift actuator circuit abnormal (SHIFT ACT CIR)	Transfer control device actuator circuit is faulty (Abnor- malities are detected when motor relay circuit is open/ shorted or relay monitor circuit is open/shorted.)	Actuator motor, actuator motor arm position sensing switch and their associated circuits, TF-114, 115 and 94.
Memory power supply stop	• Due to removal of battery which cuts off power supply to transfer control unit, self-diagnosis memory function is suspended.	Data erase/display circuit, TF-88.
Transfer control unit (RAM) [CONTROL UNIT (RAM)]	• Failure is detected in the memory (RAM) system of transfer control unit.	
Transfer control unit (ROM) [CONTROL UNIT (ROM)]	• Failure is detected in the memory (ROM) system of transfer control unit.	
Transfer control unit (EEPROM) [CONTROL UNIT (EEPROM)]	• Failure is detected in the memory (EEPROM) system of transfer control unit.	

Note 1: When a malfunction occurs, it is only displayed and not stored in the memory.

Note 2: When the wait detection switch has been properly fixed, malfunction information is erased from the memory.

Note 3: If 4WD shift switch is left between 4H and 4LO for a while, this indication may be displayed.

(*1): If the malfunction is detected only while driving in reverse, check the continuity of "R" position on A/T PNP switch. When there is nothing wrong with the electrical system, check the hydraulic system.

(*2): If a revolution sensor malfunction is detected at the same time, check the revolution sensor circuit first.

Note 4: When this malfunction is detected with the ABS warning lamp off, first check for disconnection or shorting in the harness between the transfer control unit and the ABS control unit.

Trouble Diagnosis with CONSULT-II (Cont'd) **DATA MONITOR** Data link connector NBTF0012S03 **CONSULT-II Setting Procedure** NBTF0012S0301 GI Turn ignition switch to "OFF" position. 1. Connect CONSULT-II to data link connector, which is located 2. in instrument lower panel on driver side. MA Turn ignition switch to "ON" position. 3. Brake pedal² 4. Touch "START". EM 600 COŃSULT-II Left side LC SMT962D Touch "ALL MODE 4WD". 5. SELECT SYSTEM EC ENGINE A/T FE AIR BAG ALL MODE 4WD SMART ENTRANCE AT TF SMT964D Touch "DATA MONITOR". 6. SELECT DIAG MODE PD WORK SUPPORT SELF-DIAG RESULTS AX DATA MONITOR FCU PART NUMBER SU SMT965D 7. Touch "ECU INPUT SIGNALS" or "MAIN SIGNALS". ST DATA MONITOR Select "Numerical Display", "Bar Chart Display" or "Line Graph 8. SELECT MONITOR ITEM Display". ECU INPUT SIGNALS Touch "SETTING" to set record conditions. 9. MAIN SIGNAL SELECTION FROM MENU BT HA SAT972J 10. Touch "AUTO TRIG" or "MANU TRIG". SC SET RECORDING CONDITION 11. Return to "SELECT MONITOR ITEM" on "DATA MONITOR" AUTO TRIG screen and touch "START". MANU TRIG EL TRIGGER POINT IDX 20% 40% 60% 80% 100% 0% Recording Speed MIN ΜΔΧ /64 /32 /16 /8 /4 /2 FULI SAT973J

Trouble Diagnosis with CONSULT-II (Cont'd)

DATA MOI		
MONITOR	NO DTC	
4WD MODE	2WD	
COMP CL TORQ	0.0 kgm	
DUTY SOLENOID	4 %	
2-4WD SOL	OFF	
VHCL/S COMP	0 km/h	
THROTTLE POSI	0.0 /8	
MOTOR RELAY	OFF	
4WD FAIL LAMP	OFF	
SHIFT ACT 1	OFF	

12. Monitored data are displayed.

DATA MONITOR ITEMS

⊖: Standard ♥: Option

		Monitor item	I			
Item [Unit]	ECU input Main sig- signals nals		Item menu selection	Remarks		
Revolution sensor-front [km/h (MPH)]	0		•	Revolution sensor installed on T/F		
Revolution sensor-rear [km/h (MPH)]	0		•	Vehicle speed sensor-A/T		
Engine speed [rpm]	0		•			
Throttle position sensor [V]	0		•			
Transfer fluid temperature sensor [V]	0		•			
Battery voltage [V]	0		•			
2WD switch [ON-OFF]	0		•	2WD switch of 4WD shift switch		
AUTO switch [ON-OFF]	0		•	AUTO switch of 4WD shift switch		
Lock switch [ON-OFF]	0		•	4H switch of 4WD shift switch		
4L switch [ON-OFF]	0		•	4LO switch of 4WD shift switch		
N position switch TF [ON-OFF]	0		•	N position switch of transfer		
Line pressure switch [ON-OFF]	0		•	Line pressure switch		
Clutch pressure switch [ON-OFF]	0		•	Clutch pressure switch		
ATP switch [ON-OFF]	0		•			
N position switch [ON-OFF]	0		•	"N" position on A/T PNP switch		
R position switch [ON-OFF]	0		•	"R" position on A/T PNP switch		
P position switch [ON-OFF]	0		•	"P" position on A/T PNP switch		
Closed throttle position switch [ON/OFF]	0		•	Idle contact of throttle position switch		
ABS operation switch [ON-OFF]	0		•	ABS operation switch		
Wait detection switch [ON-OFF]	0		•			
Throttle opening		0	•	Throttle opening recognized by transfer control unit		
4WD-mode		0	•	4WD-mode recognized by transfer control unit (2W, AUTO, 4H & 4LO)		
Vehicle speed comp [km/h (MPH)]		0	▼	Vehicle speed recognized by transfer control unit		
*Control torque [N·m (kg-m, ft-lb)]		0	▼	Calculated torque recognized by transfer control unit		

Trouble Diagnosis with CONSULT-II (Cont'd)

IDX

		Monitor item				
Item [Unit]	ECU input signalsMain sig- nalsItem menu selection			Remarks		
Duty solenoid valve [%] (Transfer 4WD solenoid valve)		0	•			
2-4WD shift solenoid valve [ON-OFF]		0	•			
Transfer motor relay [ON-OFF]		0	•			
Shift activating 1 [ON-OFF]		0	•	Control signal outputs of transfer control unit		
Shift activating 2 [ON-OFF]		0	•			
2-4WD shift solenoid valve monitor [ON-OFF]			•	Check signal (re-input signal) of transfer control		
Transfer motor relay monitor [ON-OFF]			•	unit control signal output is displayed. If circuit		
Shift activating monitor 1 [ON-OFF]			•	is shorted or open, ON/OFF state does not change.		
Shift activating monitor 2 [ON-OFF]			•			
4WD fail lamp [ON-OFF]		0	•	Transfer control unit control signal output for 4WD warning lamp (left)		
Shift position switch 1 [ON-OFF]	0		•			
Shift position switch 2 [ON-OFF]	0		•			
2WD indicator lamp [ON-OFF]			•	Transfer control unit control signal output for 4WD shift indicator lamp (rear)		
AUTO indicator lamp [ON-OFF]			•	Transfer control unit control signal output for 4WD shift indicator lamp (front & rear)		
LOCK indicator lamp [ON-OFF]			•	Transfer control unit control signal output for 4WD shift indicator lamp (center)		
4LO indicator lamp [ON-OFF]			•	Transfer control unit control signal output for 4WD shift indicator lamp (right)		
Offset at starting			•	Appears on monitor but does not function.		
Clutch limit [N·m (kg-m, ft-lb)]			•	Clutch force release limit value set in WORK SUPPORT		
Voltage [V]			•	Value measured by voltage probe is displayed.		
Frequency [Hz]			•	Value measured by pulse probe is displayed. If measurement is impossible, "#" sign is dis- played. "#" sign is also displayed at the final data value until the measurement result is obtained.		
DUTY-HI			•	Duty cycle value for measurement probe is dis-		
DUTY-LOW			•	played.		
PLS WIDTH-HI			•	Measured pulse width of measurement probe is		
PLS WIDTH-LOW			•	displayed.		

Trouble Diagnosis with CONSULT-II (Cont'd)

REFERENCE VALUE IN DATA MONITOR MODE

NB	TF00	12S09

Indicated items (Screen terms for CONSULT, "DATA MONITOR" mode)	Display		Conditions			
Throttle position sensor (THRTL POS SEN)	Approx. 0.5 - 4	Throttle valve fully closed to fully open				
Transfer fluid temperature sensor (FLUID TEMP SE)	Approx. 1.5 - (Transfer fluid temperature approx. 20 - 80°C (68 - 176°F)				
Closed throttle position switch	ON	After engine w	varm-up, accel	erator pedal is	released.	
(CLOSED THL/SW)	OFF	After engine w	varm-up, accel	erator pedal is	depressed.	
ABS operation switch	OFF		ABS is not op	erating.		
(ABS OPER SW)	ON		ABS is operat	ing.		
	ON			W is "ON". Co	ntrol operation ABS.	is accom-
ABS control operation (ABS CONT OPER)	OFF		ABS is not operating. When a message such as "improper ABS operation signal" appears on the display and ABS OPER SW is "ON", control operation is not accomplished in combination with ABS.			
2WD position	ON		4WD shift switch is in "2WD".			
(2WD SW)	OFF	Except the above condition				
Lock position	ON	4WD shift switch is in "4H".				
(LOCK SWITCH)	OFF	Except the above condition				
	4WD shift switch posi	2WD, AUTO, 4H	O, (N) 4L		4LO	
Neutral-4LO switch	ATP switch	OFF	C	N OFF		
(N POSI SW TF) ATP switch	Neutral-4LO switch	OF	=F	ON		
(ATP SWITCH) Wait detection switch	Wait detection switch	OFF ON				
(WAIT DETCT SW)		See Note.				
	Note: When shifting from "4LO" to "2WD", "AUTO", "4H", it turns ON when "Wait" function is operating (and it turns OFF when "Wait" function is canceled).					ait" function
	Throttle valve	4WD shift switch	A/T selector lever	Motor relay	Rem	arks
		2WD		OFF		
Transfer motor relay		AUTO, 4LO	P, N	OFF	ON for approx. 2 sec. after shifting to "P" and "N" ON for approx. 2 sec. after	
(MOTOR RELAY)	Fully closed		Others	ON		
			Р	OFF		
		4H	Others	ON	shifting to "P"	
Line pressure switch	OFF	The vehicle has been left at room temperature for 5 min- utes and more with ignition switch in "OFF" position.				
(LINE PRES SW)	ON	Ignition switch in "ON", and 4WD shift switch in "AUTO" or "4H" and A/T selector lever in "D".				

Trouble Diagnosis with CONSULT-II (Cont'd)

Indicated items (Screen terms for CONSULT, "DATA MONITOR" mode)	Display	Conc	litions		
	OFF	Ignition switch in "ON", and ("Wait" function is not operat		_	
Clutch pressure switch (CL PRES SW)	ON	Ignition switch in "ON", and or "4H" and A/T selector leve not operating.)			
	0 kg-m		In "2WD" position	_	
Control torque (COMP CL TORQ)	39 - 1,079 N⋅m (4 - 110 kg-m, 29 - 796 ft-lb)		In "AUTO" position	- L	
()	1,079 N⋅m (110 kg-m, 796 ft-lb)	(wait function is not oper-	In "4H" or "4LO" position	_	
	4%		In "2WD" position	_ [
4WD solenoid (DUTY SOLENOID)	94 - 4%		In "AUTO" position	_ 1	
()	4%		In "4H" or "4LO" position	A	
	OFF		In "2WD" position	_	
	ON ("Wait" function is not oper- ating.)		In "AUTO" position		
2-4WD shift solenoid valve	OFF ("Wait" function is operat- ing.)	4WD shift switch			
(2-4WD SOL)	ON ("Wait" function is not oper- ating.)		In "4H" position	_	
	OFF ("Wait" function is operat- ing.)			_	
	ON		In "4LO" position	-	

Indicated items	Display	Conditions	BR
Battery voltage	Approx. 12V	Key switch "ON" and engine at rest	 @77
	Approx. 13 - 14V	During idling	ST
AUTO switch	OFF	4WD shift switch in other than "AUTO" position	RS
	ON	4WD shift switch in "AUTO" position	
4L switch	OFF	4WD shift switch in other than "4LO" position	BT
	ON	4WD shift switch in "4LO" position	
N position switch	OFF	A/T selector lever in other than "N" position	HA
	ON	A/T selector lever in "N" position	
R position swtich	OFF	A/T selector lever in other than "R" position	SC
	ON	A/T selector lever in "R" position	
P position switch	OFF	A/T selector lever in other than "P" position	EL
	ON	A/T selector lever in "P" position	
Throttle opening	0.0/8 - 8.0/8	Throttle fully closed (0.0/8) or throttle fully open (8.0/8)	IDX

Trouble Diagnosis with CONSULT-II (Cont'd)

Indicated items	Display	Cond	ditions
	2WD		In "2WD" position
4WD-mode	AUTO	- 4WD shift switch	In "AUTO" position
400-11000	LOCK		In "4H" position
	4L		In "4LO" position
Front wheel speed	0 - 255 km/h (0 - 158 MPH)	0 km/h (vehicle at standstill)	
Rear wheel speed	0 - 255 km/h (0 - 158 MPH)	0 km/h (vehicle at standstill)	
Shift ACTR operating 1,	OFF	During normal operation	
Shift activating monitor 1	ON	During shifts from "4H" to "4LO'	' position
Shift ACTR operating 2,	OFF	During normal operation	
Shift activating monitor 2	ON	During shifts from "4LO" to "4H'	' position
4WD fail lamp	OFF	During normal operation	
	ON	During 2-second period (after key switch turned to "ON") or when system is out of order	
Shift ACTR position sensing	OFF	4WD shift switch is in a position	other than "4LO".
switch 1	ON	4WD shift switch in "4LO" positi	on
Shift ACTR position sensing	OFF	4WD shift switch in "4LO" positi	on
switch 2	ON	4WD shift switch is in a position	other than "4LO".
2WD indicator lamp	OFF	Engine at rest or system out of order	
	ON	Except the above condition	
AUTO indicator lamp	OFF	Engine at rest during 2WD-mod order	e operation or system out of
	ON	4WD shift switch in "4LO" or "4 lever in "AUTO" position	H" position and A/T selector
LOCK indicator lamp	OFF	Engine at rest and A/T selector lever in "AUTO" position du 2WD-mode operation or system out of order	
	ON	4WD shift switch in "4H" or "4LO" position	
4L indicator lamp	OFF	Engine at rest and A/T selector 2WD-mode operation or system	
	ON	4WD shift switch in "4LO" positi	on

WORK SUPPORT

Purpose

NBTF0012S06

When there is no problem with transfer and 4WD system, following symptoms in "AUTO" mode may be claimed by a customer.

- Tight corner braking symptom after accelerator (throttle) opening (Note 1)
- Vibration when accelerating on a low µ road (snow-covered or icy road) (Note 2)

It is possible to deal with these symptoms by changing "CLUTCH FORCE RELEASE LIMIT VALUE". However, be careful when changing the values because it may adversely affect driving performance.

NOTE:

 When the accelerator is slightly open (approx. 1/8) or fully closed after being opened. The tight corner braking symptom during idle creep driving with accelerator fully closed cannot be

TF-38

Trouble Diagnosis with CONSULT-II (Cont'd)


solved by this method. Refer to SYMPTOM 8, TF-108.

2) A slight shock is felt at a few hertz as if it were being pushed GI lightly from behind.

	MA
	EM
CONSULT II Sotting Procedure	LC
Data link connector Data link	EC
in instrument lower panel on driver side. 3. Turn ignition switch to "ON" position. 4. Touch "START".	FE
Left side CONSULT-II 5. Touch "ALL MODE 4WD".	AT
SMT962D	TF
6. Touch "WORK SUPPORT".	PD
SELF-DIAG RESULTS DATA MONITOR	AX
ECU PART NUMBER	SU
SMT965D	BR
SELECT WORK ITEM 7. Select WORK ITEM by touching "CLUTCH/F RLS LIM ADJ". NOTE:	ST
"START TORQ OFFSET ADJ" is displayed, but the transfer does CLUTCH/F RLS LIM ADJ "START TORQ OFFSET ADJ" is displayed, but the transfer does not have this function.	RS
	BT
SMT967D	HA
CLUTCH FORCE RELEASE LIMIT ADJUSTMENT	SC
1.2 kg-m: Tight corner braking symptom is alleviated. However, vibration may occur when accelerating on a low μ road (icy road, etc.).	EL

0.3 kg-m: Initial set value 0.2 kg-m: Do not set to this value because the tight corner braking IDX symptom will get worse.

Trouble Diagnosis with CONSULT-II (Cont'd)

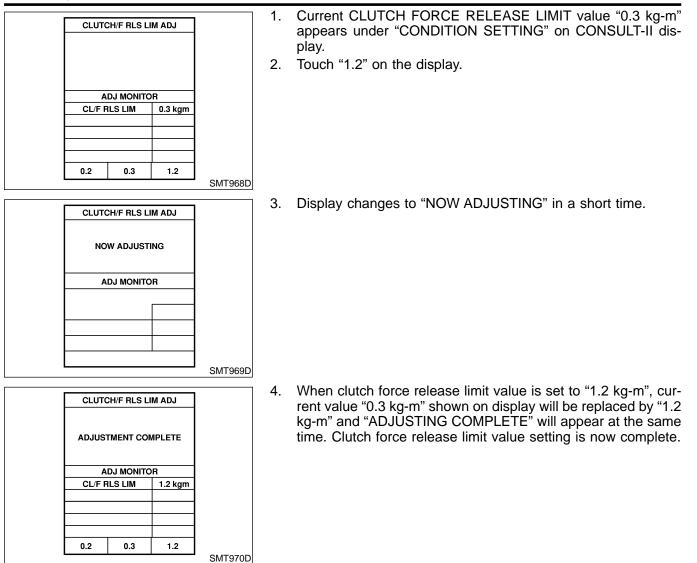

TROUBLE DIAGNOSIS — INTRODUCTION

Introduction

	Introduct		
DESCRIPTION		NBTF0013	
customer about how the mal	Ifunction occurs. Then, proc n, paying close attention to c	p illumination) occurs, collect information first from the eed with the diagnosis presuming it is the cause. Also other possibilities such as fluid level and leaks.	
If a malfunction occurs in the malfunction. There are two	e all-mode 4WD system, the ways to identify the cause o	e 4WD warning lamp lights up to inform of the system	EM
2) Performing diagnosis us	ing CONSULT-II.		LC
DIAGNOSTIC WORKSHI Information from Custor KEY POINTS		NBTF0013502 NBTF001350201	EC
WHAT Vehicle model WHEN Date, Frequencie WHERE Road conditions	3		FE AT
HOW Operating condition			
Information sheet from custom			TF
Customer name MR/MS	Model & Year	VIN	
Transfer model ATX14A	Engine	Mileage	PD
Incident Date	Manuf. Date	In Service Date	- 0.57
Frequency	□ Continuous □ Intermittent (t	imes a day)	_ AX
Symptoms	□ 4WD shift indicator lamp does	not turn on.	
	□ 4WD warning lamp does not to	urn on.	· su
	□ 4WD shift indicator lamp does	not turn off.	60
	□ ATP warning lamp does not tu	rn on.	- BR
	□ 4LO indicator lamp does not to	urn on.	05
	□ 4WD shift indicator lamp does	not indicate "4H".	- ST
	□ 4WD shift indicator lamp repea	ats flicking.	DQ
	□ Tight corner braking symptom	occurs.	- RS
	□ 4WD system does not operate		. BT
	□ Others.		. Ul
4WD warning lamp	Continuously lit	□ Not lit	HA

SC

EL

Introduction (Cont'd)

Diagnostic Worksheet

	NBTFI		
1.	□ Listen to customer complaints.	TF-44	
2.	Check transfer fluid.	TF-44	
	Leakage Fluid condition Fluid level		
3.	Road testing	TF-44	
	 1. Check before engine is started. 2. Check at idle. 3. Cruise test 		
4.	Perform self-diagnosis NG items (with CONSULT-II and without CONSULT-II).	TF-30, TF-27	
5.	Check component. Repair or replace the damaged parts.	TF-111	
6.	Perform final check. Perform road test (1 through 3).	TF-44	

TROUBLE DIAGNOSIS — INTRODUCTION

	Work Flow	
	Work Flow	
от wc	PERFORM TROUBLE DIAGNOSES FOR QUICK AND ACCURATE REPAIR	
	derstanding of the malfunction conditions can make troubleshooting faster and more accurate.	
	, each customer feels differently about a problem. It is important to fully understand the symptoms ons for a customer complaint.	
ke goo	d use of the two sheets provided, "Information from Customer" (Refer to TF-41.) and "Diagnostic	
rkshee	t" (Refer to TF-42.), to perform the best troubleshooting possible.	
	CHECK IN	
	LISTEN TO CUSTOMER COMPLAINTS *1	
	BASIC INSPECTION *2	
	CONFIRMATION OF MALFUNCTIONS *3 Verify the symptom by driving in the condition the customer described (road test).	
	Perform the road test in the following order:	
	1. Check before engine is started. 2. Check at idle.	
	3. Cruise test.	
	GET THE MALFUNCTION SYMPTOMS.	
	TROUBLE DIAGNOSES ON THE BASIS OF EACH SYMPTOM *4 • Repair the detected malfunction symptom according to the flow chart.	
_		
	TROUBLE DIAGNOSES OF THE BASIS OF SELF-DIAGNOSIS *5 • Perform trouble diagnosis for self-diagnostic items found in the road test or trouble diagnosis for symptoms.	
	CHECK COMPONENT PARTS.	
NG	PERFORM FINAL CHECK *6 • Perform road test 1 through 3 and confirm that all the malfunctions are eliminated.	
L	ОК	
	CHECK OUT	
	MTF013A	
TF-44	*3: TF-44 *5: TF-61 - TF-94	
	*4. TE-08 - TE-100 *6. TE-44	

*2: TF-44

*6: TF-44

*4: TF-98 - TF-109


Listen to Customer Complaints

Listen to Customer Complaints

- Each customer feels differently about a problem. It is important to fully understand the symptoms or conditions for a customer complaint.
- Listen to the customer about how and when the malfunction occurs, and make good use of it when performing the road test.

Transfer Fluid Check

 Check fluid for leaks and fluid level. Refer to MA-22, "Checking All-mode 4WD Transfer Fluid".

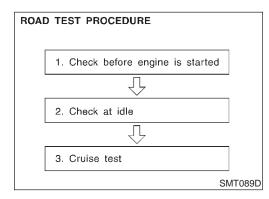

Road Test PREPARATION FOR ROAD TEST

NBTF0017

- The purpose of the test is to determine overall performance of transfer and analyze causes of problems.
- The road test consists of the following three parts:
- When a malfunction is found in any part of transfer, perform the road test to locate the malfunction area and repair the malfunction parts.
- 1. Check before engine is started
- 2. Check at idle
- 3. Cruise test
- Perform road test and place checks for NG items on the diagnostic worksheet. Refer to TF-42.

Road Test (Cont'd)

BT


HA

SC

EL

IDX

1. CHECK BEFORE ENGINE IS STARTED

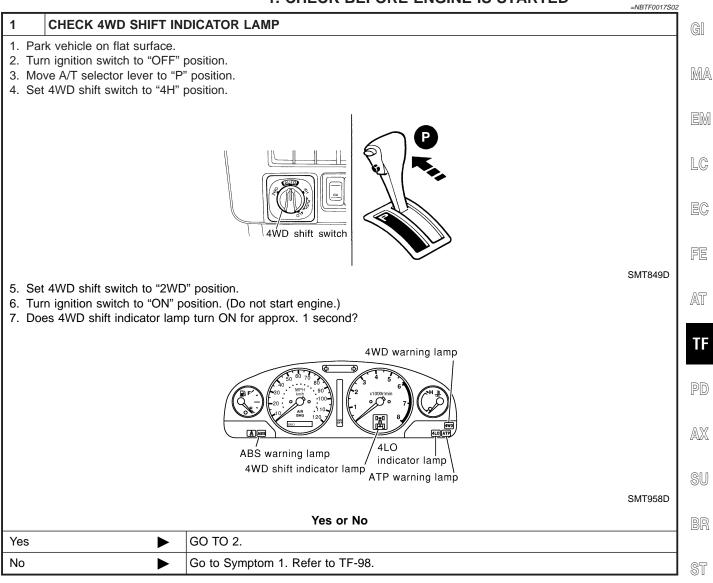

Road Test (Cont'd)

2	CHECK 4WD WARNING	G LAMP	
ls 4V	VD warning lamp turned ON	?	
		4WD warning lamp	
			SMT958D
		Yes or No	
Yes	►	 Turn ignition switch to "OFF" position. Perform self-diagnosis. Refer to "Trouble Diagnosis without CONSULT-II", TF-27. Go to "2. CHECK AT IDLE". Refer to TF-47. 	
No	►	Go to Symptom 2. Refer to TF-100.	

Road Test (Cont'd)

2. CHECK AT IDLE =NBTF0017S03 1 **CHECK 4WD SHIFT INDICATOR LAMP** GI 1. Park vehicle on flat surface. 2. Turn ignition switch to "OFF" position. 3. Move A/T selector lever to "P" or "N" position. MA 4. Set 4WD shift switch to "4H" position. 5. Set 4WD shift switch to "2WD" position. 6. Start engine. 7. Is 4WD shift indicator lamp turned OFF? LC 4WD warning lamp EC (Å) FE 4LO ABS warning lamp 4WD shift indicator lamp ATP warning lamp indicator lamp AT SMT958D Yes or No TF Yes Go to "ATP SWITCH, WAIT DETECTION SWITCH AND NEUTRAL-4LO SWITCH". Refer to TF-76. PD GO TO 2. No 2 **CHECK 4WD WARNING LAMP** AX Is 4WD warning lamp turned OFF? U

		Yes or No	SI
Yes	►	GO TO 3.	
No	►	Perform self-diagnosis. Refer to "Trouble Diagnosis without CONSULT-II", TF-27.	BF

BR

ST

BT

HA

SC


EL

Road Test (Cont'd)

3	CHECK 4WD SHIFT IND	ICATOR LAMP	
(Stay at each switch position fo	"AUTO", "4H", "4LO", "4H" and "2WD" in order. or at least 1 second.) change properly and does buzzer sound?	
		WD shift switch	SMT851D
		4WD shift4WD shift4WDswitchindicatorwarningoperationlamplamp	
		operation lamp lamp sound	
		2WD ■■□ OFF "Pip"	
		۲۰۰۰ "Pip"	
		4H ■T■ 4WD OFF	
		4LO	
		4H Image: Constraint of the second	
		۲۰۰۰ "Pip"	
		AUTO	
		۲۰۰۰ "Pip"	
		2WD □T□ 4WD ■ OFF OFF	
			SMT971D
		Yes or No	
Yes		GO TO 4.	
No		Go to "2-4WD SHIFT SOLENOID VALVE AND 4WD SHIFT SWITCH".	Refer to TF-66.

4	CHECK 4WD WARNING LAMP			
ls 4WI	Is 4WD warning lamp turned ON?			
	Yes or No			
Yes	►	Perform self-diagnosis. (Refer to "Trouble Diagnosis without CONSULT-II", TF-27.)		
No	►	GO TO 5.		

Road Test (Cont'd)

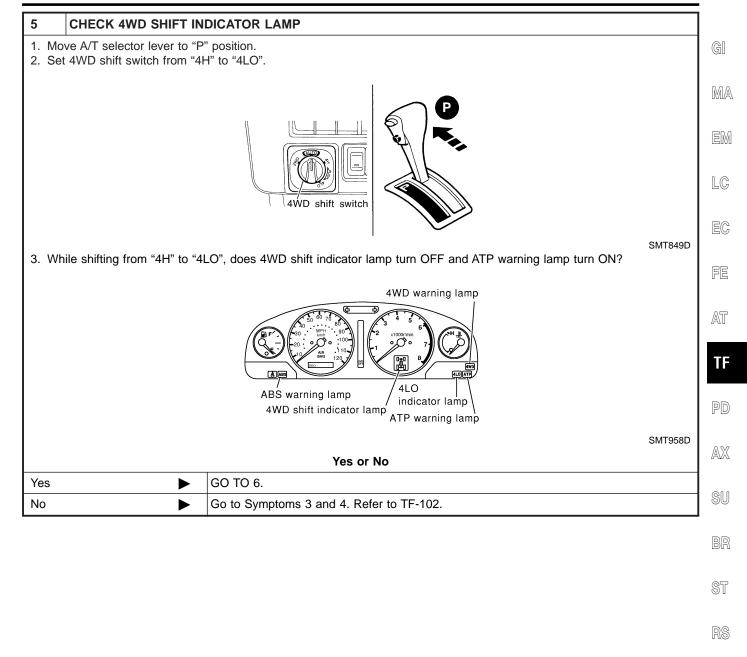


BT

HA

SC

EL

Road Test (Cont'd)

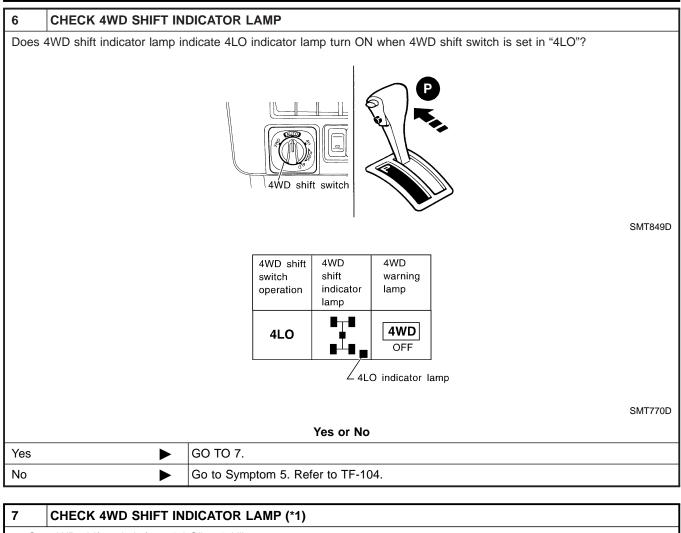

Set 4WD shift switch from "4LO" to "4H".
 Does 4LO indicator lamp flicker? (*1)

*1: While "Wait" function is operating, 4LO indicator lamp flashes.

Yes or No			
Yes 🕨	Yes So to Symptom 6 and 7. Refer to TF-106 and TF-107.		
No 🕨	Go to "3. CRUISE TEST". Refer to TF-51.		

Road Test (Cont'd)

	3. CRUISE TEST	=NBTF0017S04
1 INSPECTION ST	ART	
	4WD shift switch	
		SMT849D
	4WD warning lamp	
	ABS warning lamp 4UD shift indicator lamp ATP warning lamp	
		SMT958D
	N 00 TO 0	
WITH CONSULT-II	► GO TO 2.	

BR

ST

RS

BT

HA

SC

EL

Road Test (Cont'd)

2 **CHECK INPUT SIGNAL** () With CONSULT-II 1. Warm up engine to normal operating temperature. 2. Park vehicle on flat surface. 3. Move A/T selector lever to "P" position. 4. Set 4WD shift switch to "4H" position. 5. Set 4WD shift switch to "AUTO" position. 6. Start engine. 7. Drive for at least 30 seconds at a speed higher than 20 km/h (12 MPH). (Drive vehicle until "FLUID TEMP SE" exceeds 0.9V.) 8. Park vehicle on flat surface. 9. Move A/T selector lever to "P" position. 10. Set 4WD shift switch to "2WD" position. 11. Leave vehicle for at least 80 seconds with "FLUID TEMP SE" at 0.9V or less. DATA MONITOR MONITOR NO DTC VHCL/S SEN-FR 0 km/h VHCL/S SEN-RR 0 km/h ENGINE SPEED 775 rpm THRTL POS SEN 0.5 V FLUID TEMP SE 0.86 V BATTERY VOLT 14.1 V 2WD SWITCH ON AUTO SWITCH OFF LOCK SWITCH OFF SMT972D 12. Is 4WD warning lamp turned ON? Yes or No Yes Perform self-diagnosis. Refer to "Trouble Diagnosis with CONSULT-II", TF-30. GO TO 4. No

3	CHECK INPUT SIGNAL				
🕅 Wi	thout CONSULT-II				
1. Wa	arm up engine to normal op	erating temperature.			
2. Pa	rk vehicle on flat surface.				
3. Mo	ve A/T selector lever to "P"	position.			
4. Set	t 4WD shift switch to "4H" p	position.			
5. Set	t 4WD shift switch to "AUT	D" position.			
6. Sta	art engine.				
7. Dri	ve vehicle for at least 30 se	econds at a speed higher than 20 km/h (12 MPH).			
8. Pa	rk vehicle on flat surface.				
9. Mo	ove A/T selector lever to "P"	position.			
10. S	et 4WD shift switch to "2W	D" position.			
11. Is	11. Is 4WD warning lamp turned ON?				
	Yes or No				
Yes	►	Perform self-diagnosis. Refer to "Trouble Diagnosis without CONSULT-II", TF-27.			
No	►	GO TO 4.			

4	(1) CHECK TIGHT COR	NER BRAKING SYMPTOM					
2. Driv	 Set 4WD shift switch to "AUTO" position. Drive vehicle at speed lower than 20 km/h (12 MPH) with steering wheel fully turned. Does tight corner braking symptom occur? 						
	Yes or No						
Yes	►	GO TO 5.					
No	►	GO TO 6.					

Road Test (Cont'd)

5	CONFIRM SYMPTOM	AGAIN	
	irm symptom and self-diagn r to "Trouble Diagnosis with	osis again. out CONSULT-II", TF-27 and "Trouble Diagnosis with CONSULT-II", TF-30.	G
		OK or NG	— M.
OK		GO TO 6.	0.007
NG		Go to Symptoms 8 and 9. Refer to TF-108, 109.	P
			en en
6	(2) CHECK TIGHT COP	RNER BRAKING SYMPTOM	
2. D	et 4WD shift switch to "4H" rive vehicle at speed lower oes tight corner braking syn	than 20 km/h (12 MPH) with steering wheel fully turned.	L(
		Yes or No	E
Yes		INSPECTION END	
No		GO TO 7.	FE
7	CONFIRM SYMPTOM	AGAIN	AT
	irm symptom and self-diagn r to "Trouble Diagnosis with	osis again. out CONSULT-II", TF-27 and "Trouble Diagnosis with CONSULT-II", TF-30.	T
		OK or NG	
OK		INSPECTION END	P
NG		Go to Symptoms 8 and 9. Refer to TF-108, 109.	

AX

BR

ST

RS


BT

HA

SC

EL

Transfer Control Unit Terminals and Reference Value

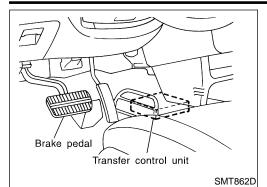

Transfer Control Unit Terminals and Reference Value

REMOVAL AND INSTALLATION OF TRANSFER CONTROL UNIT

Removal

NBTF0018S03

- Turn ignition switch OFF and disconnect negative battery terminal.
- 2. Remove console box.
- 3. Remove cluster lid C.
- 4. Remove audio assembly and A/C control unit.
- 5. Remove instrument lower panel on driver side.
- 6. Remove glove box.
- 7. Remove instrument lower panel on passenger side.

Installation is in the reverse order of removal.

- 8. Remove instrument lower center panel.
- 9. Remove transfer control unit.
- For steps 2 through 8 above, refer to BT-21, "Instrument Panel Assembly".


Installation

NBTF0018S0302

When installing transfer control unit, tighten transfer control unit lock nut.

Tightening torque:

(9 : 4.3 - 5.8 N⋅m (0.44 - 0.59 kg-m, 38 - 51 in-lb)

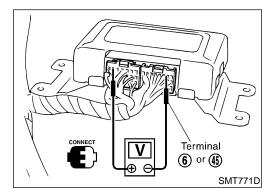


INSPECTION OF TRANSFER CONTROL UNIT

 Measure voltage between each terminal and terminal 6 or 45 by following "TRANSFER CONTROL UNIT INSPECTION TABLE", TF-55.

• Pin connector terminal layout

Transfer Control Unit Terminals and Reference Value (Cont'd)

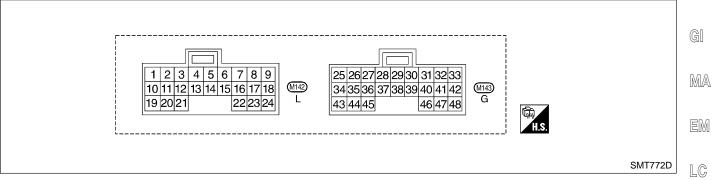

TRANSFER CONTROL UNIT INSPECTION TABLE (Data are reference values.)

EC

NBTF0018S02

Terminal No.	Item		Condition	Judgement standard
	2-4WD shift solenoid	Con	4WD shift switch is set to "2WD" position.	Less than 1V
1	valve		4WD shift switch is set to any posi- tion other than "2WD".	Battery voltage
2	4WD shift indicator lamp		Lamp lights while system is operating properly.	Less than 1V
	(2WD)		2WD indicator lamp does not come on.	Battery voltage
3	Ground		_	_
4	Transfer shift relay	() ()	While actuator is operating $(4H \rightarrow 4LO)$	Battery voltage
	(High)	(Con)	Actuator does not operate.	Less than 1V
5	4WD warning lamp		Lamp comes ON. (when engine is stopped.) (Fail-safe condition appears on display, engine is stopped, actuator position detection switch is inoperative, oil temperature is too high and/or tires of different size are installed.)	Less than 1V
			Except above	Battery voltage
6	Ground		_	_
7		Con	A/T selector lever is set to "reverse" position.	Battery voltage
7	PNP switch (R position)	× v	A/T selector lever is set to any posi- tion other than "reverse".	Less than 1V
8	_	—	_	_

Transfer Control Unit Terminals and Reference Value (Cont'd)

Terminal No.	ltem		Condition	Judgement standard
9	4WD shift switch (2WD)	0	4WD shift switch is set to "2WD" position.	Battery voltage
9		(Con)	4WD shift switch is set to any posi- tion other than "2WD".	Less than 1V
10	Transfer dropping resis-	x N	4WD shift switch is set to "AUTO" position.	Approx. 4 - 14V
10	tor		4WD shift switch is set to any posi- tion other than "2WD".	Less than 1V
	11/D obiff indiactor lamp		"4H" indicator lamp comes ON.	Less than 1V
11	4WD shift indicator lamp (4H)		4WD shift switch is set to any posi- tion other than "4H".	Battery voltage
		W.	"4LO" indicator lamp comes ON.	Approx. 0V
12	4WD shift indicator lamp (4LO)		4WD shift switch is set to any posi- tion other than "4LO".	Battery voltage
13	Transfer shift relay (Low)		While actuator is operating $(4LO \rightarrow 4H)$	Battery voltage
		00	Actuator does not operate.	Approx. 0V
14	Transfer motor relay	((Con))	Transfer motor relay is ON.	Battery voltage
14	Transier motor relay	&	Transfer motor relay is OFF.	Less than 1V
15	DND switch (N position)		A/T selector lever is set to "N" posi- tion.	Battery voltage
15	PNP switch (N position)		A/T selector lever is set to any position other than "N" position.	Less than 1V
40	Davida averalia		Ignition key is set to "ON" position.	Battery voltage
16	Power supply		Ignition key is set to "OFF" position.	Approx. 0V
47			A/T selector lever is set to "P" posi- tion.	Battery voltage
17	PNP switch (P position)	-	A/T selector lever is set to any posi- tion other than "P".	Less than 1V
40		Con	4WD shift switch is set to "4H" posi- tion.	Battery voltage
18	4WD shift switch (4H)	<u>م</u> ۲	4WD shift switch is set to any posi- tion other than "4H".	Less than 1V
		Ne	4WD shift switch is set to "AUTO" position.	Approx. 1.5 - 3V
19	4WD solenoid valve		4WD shift switch is set to any posi- tion other than "2WD".	Less than 1V
20	_	_	_	_
	(MD shift is director law)	a5.2	"AUTO" indicator lamp comes ON.	Approx. 0V
21	4WD shift indicator lamp (AUTO)		4WD shift switch is set to any posi- tion other than "AUTO".	Battery voltage
22	Power europhy		Ignition key is set to "ON" position.	Battery voltage
22	Power supply		Ignition key is set to "OFF" position.	Approx. 0V

Transfer Control Unit Terminals and Reference Value (Cont'd)

Ferminal No.	Item	Condition	Judgement standard
00		4WD shift switch is set to "4LO" position.	Battery voltage
23	4WD shift switch (4LO)	4WD shift switch is set to any posi- tion other than "4LO".	Less than 1V
0.4		4WD shift switch is set to "AUTO" position.	Battery voltage
24	4WD shift switch (AUTO)	4WD shift switch is set to any posi- tion other than "AUTO".	Less than 1V
		Transfer is set to "4LO" position.	Approx. 0V
25	Neutral-4LO switch	Transfer is set to any position other than "4LO".	Power supply
		Throttle valve is closed.	Power supply
26	Throttle position switch (closed)	Throttle valve is in any position other than "closed".	Approx. 0V
07	Transfer 4H actuator	4WD shift switch is set to "4H" posi- tion.	Less than 1V
27	switch	4WD shift switch is set to any posi- tion other than "4H".	Battery voltage
00	Throttle position sensor	Throttle valve is closed.	
28	(Ground)	Throttle valve is fully open.	Less than 1V
29	TCM signal (Vehicle speed signal)	When moving at 20 km/h (12 MPH), use the CONSULT-II pulse frequency measuring function.*1 CAUTION: Connect the diagnosis data link cable to the vehicle diagnosis con- nector. *1: A circuit tester cannot be used to test this item.	Approximately 225 Hz
20	Throttle position sensor	Ignition key is set to "ON" position.	Approx. 4.5 - 5.5V
30	(Power supply for throttle position sensor)	Ignition key is set to "OFF" position.	Approx. 0V

BT

HA

SC

EL

Transfer Control Unit Terminals and Reference Value (Cont'd)

Terminal No.	Item		Condition	Judgement standard
31	Transfer fluid tempera-		At 20°C (68°F)	Approx. 1.5V
31	ture sensor		At 80°C (176°F)	Approx. 0.5V
32	ABS signal		When moving, use the CONSULT-II pulse frequency measuirng func- tion.*2 CAUTION: Connect the diagnosis data link cable to the vehicle diagnosis con- nector. *2: A circuit tester cannot be used to test this item.	Refer to the illustration (SMT973D) at the end of this section.
33	Transfer shift relay (High)	Con	While actuator is operating from "4H" to "4LO"	Battery voltage
	(ingr)	&	Actuator does not operate.	Approx. 0V
04			4WD shift switch is set to "AUTO" or "4H", then A/T selector lever is set to "D" position. (wait detection system: OFF)	Battery voltage
34	Clutch pressure switch		4WD shift switch is set to "2WD", "AUTO" or "4H", then A/T selector lever is set to "D" position. (wait detection system: ON)	Approx. 0V
35	Line pressure switch		4WD shift switch is set to "2WD", "AUTO" or "4H", then A/T selector lever is set to "D" position.	Battery voltage
			_	Approx. 0V
36	CONSULT-II (RX)	_	_	_
37	Tachometer		_	Refer to EC-127, "ECM Inspection Table".
38	Front revolution sensor		4WD shift switch is set to "4H" posi- tion. A/T selector lever is set to "D" position.	Approx. 1V [30 km/h (19 MPH)] Voltage rises in response to vehicle speed.

Transfer Control Unit Terminals and Reference Value (Cont'd)

Terminal No.	Item		Condition	Judgement standard
20	ECM (Throttle position		Throttle valve is fully open.	Approx. 0.5V
39	sensor)		Throttle valve is closed.	Approx. 4.2V
40	ATP switch		A/T selector lever is set to "P" posi- tion.	Battery voltage
40	ATP Switch		A/T selector lever is set to any position other than "P".	Less than 1V
41	Transfer motor relay		Transfer motor relay is ON.	Battery voltage
41	monitor	A	Transfer motor relay is OFF.	Less than 1V
42	Transfer shift relay (LOW)	(Lov) &	While actuator is operating from "4LO" to "4H" position	Battery voltage
		8 3	Actuator does not operate.	Approx. 0V
40		Re	4WD shift switch is set to any posi- tion other than "4LO".	Battery voltage
43	Wait detection switch		4WD shift switch is set to "4LO" position.*3	Less than 1V
44	Transfer 4LO actuator switch		4WD shift switch is set to any posi- tion other than "4LO". (Actuator: High position)	Battery voltage
	Switch		4WD shift switch is set to "4LO" position. (Actuator: Low position)	Less than 1V
45	Ground		_	
46	_	_	_	
47	Power supply (memory	Con) &		Battery voltage
	back up)	, Î		
48	CONSULT-II (TX)	_	_	_

*3: While wait detection system is operating, terminal 43 exists battery voltage.

EL


RS

BT

HA

SC

Transfer Control Unit Terminals and Reference Value (Cont'd)

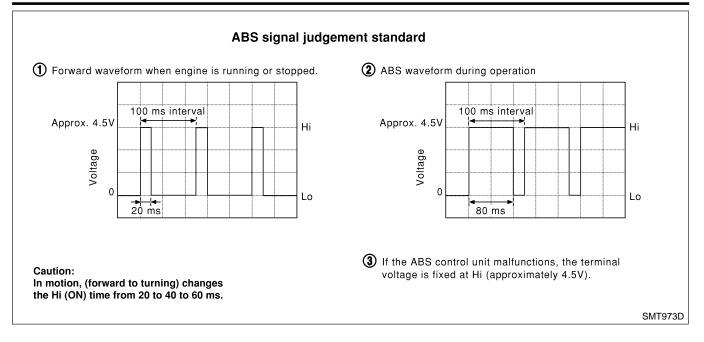

VEHICLE SPEED SENSOR (FRONT REVOLUTION SENSOR)

Diagnostic Procedure

Diagnostic Procedure NBTF0019 1 FRONT REVOLUTION SENSOR GI Refer to "Front Revolution Sensor", "COMPONENT INSPECTION", TF-112. OK or NG MA OK GO TO 3. NG GO TO 2. EM 2 CHECK CONTINUITY LC Check the following. • Continuity of transfer sub-harness Refer to "Transfer Sub-harness", "COMPONENT INSPECTION", TF-113. EC OK or NG OK Repair or replace front revolution sensor. FE NG Repair or replace front revolution sensor and transfer sub-harness. AT 3 CHECK INPUT SIGNAL

		1
		тс
WITH CONSULT-II	GO TO 4.	
WITHOUT CONSULT-II	GO TO 5.	
		PD

 $\wedge \nabla$

AX

SU

BR

ST

BT

HA

SC


EL

IDX

TF-61


VEHICLE SPEED SENSOR (FRONT REVOLUTION SENSOR)

Diagnostic Procedure (Cont'd)

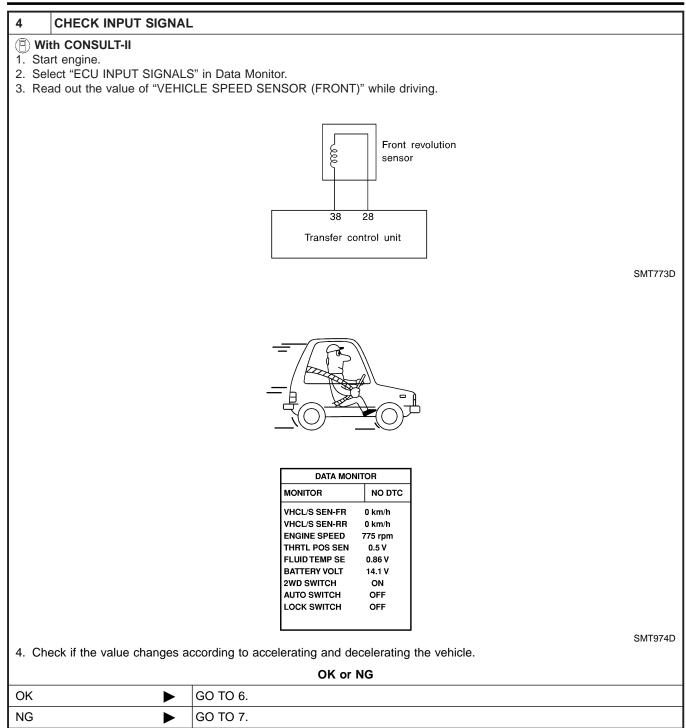

VEHICLE SPEED SENSOR (FRONT REVOLUTION SENSOR)

Diagnostic Procedure (Cont'd)

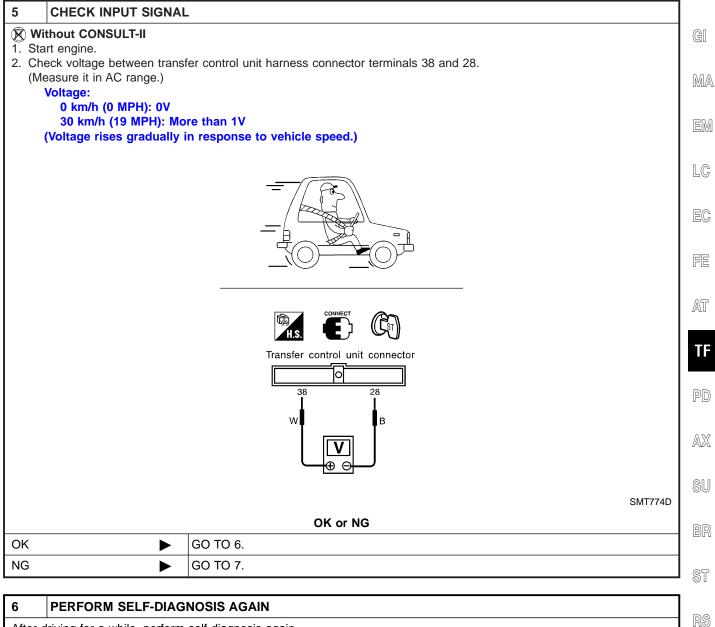


6	PERFORM SELF-DIAG	NOSIS AGAIN	
	driving for a while, perform to "Trouble Diagnosis withe		RS
		OK or NG	BT
ОК	►	INSPECTION END	
NG	►	 Perform transfer control unit input/output signal inspection. Refer to "TRANSFER CONTROL UNIT INSPECTION TABLE", "TROUBLE DIAGNOSIS — GENERAL DESCRIPTION", TF-55. 	HA
		 If NG, recheck transfer control unit pin terminals for damage or loose connection with harness connector. 	SC

7	7 CHECK HARNESS CONTINUITY BETWEEN TRANSFER CONTROL UNIT AND FRONT REVOLUTION SENSOR SUB-HARNESS CONNECTOR					
	OK or NG					
ОК	►	GO TO 6.				
NG	►	Repair or replace sub-harness connector between transfer control unit and front revolu- tion sensor.				

4WD SOLENOID VALVE


Diagnostic Procedure

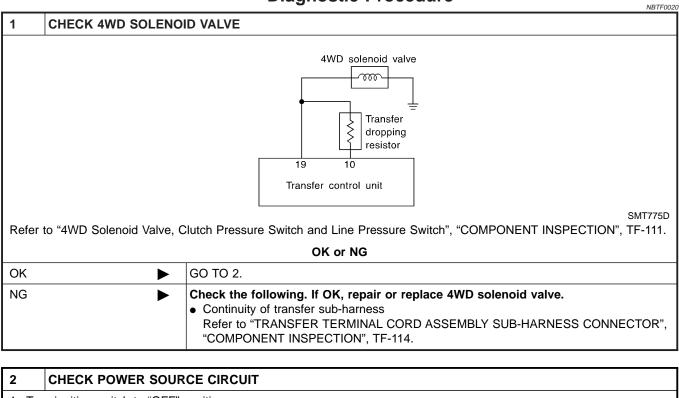


1. Turn ignition switch to "OFF" position.

2. Disconnect transfer control unit harness connector.

3. Check resistance between transfer terminal cord assembly sub-harness connector terminal 6 and transfer control unit harness connector terminal 10.

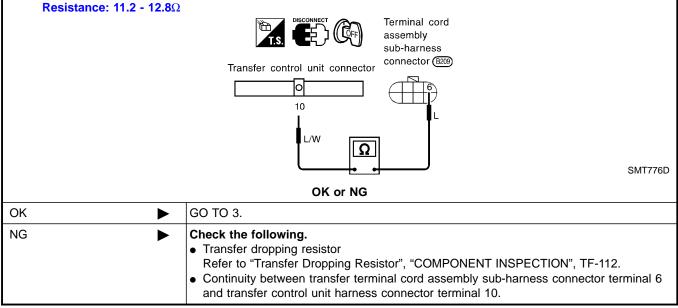

4WD SOLENOID VALVE

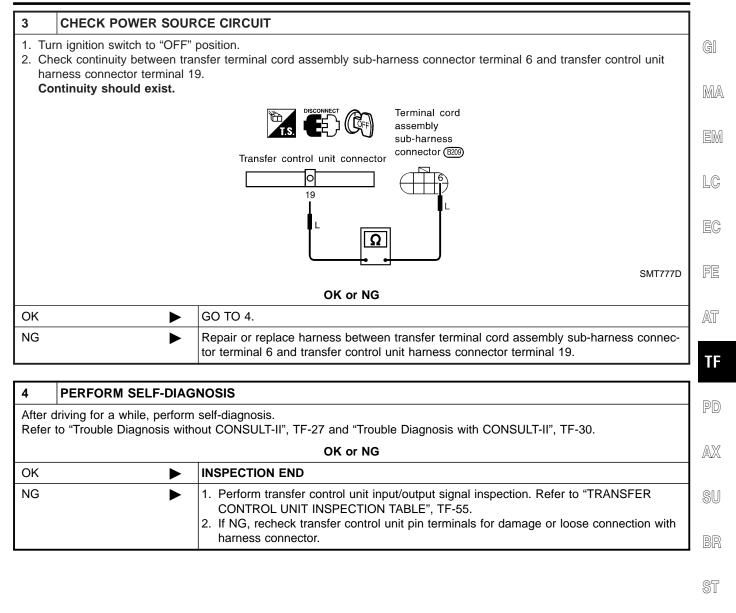

RS

BT


HA

SC


EL

Diagnostic Procedure

Diagnostic Procedure

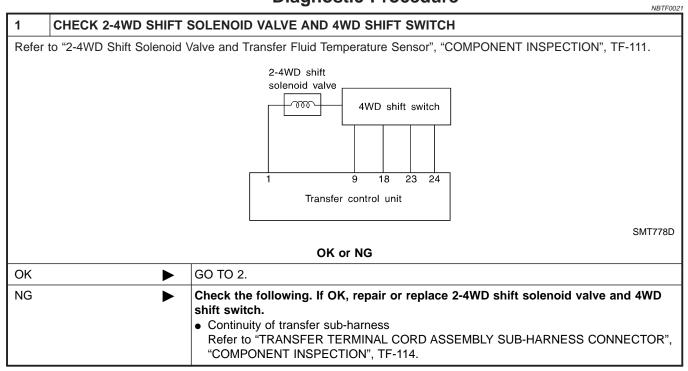

Diagnostic Procedure (Cont'd)

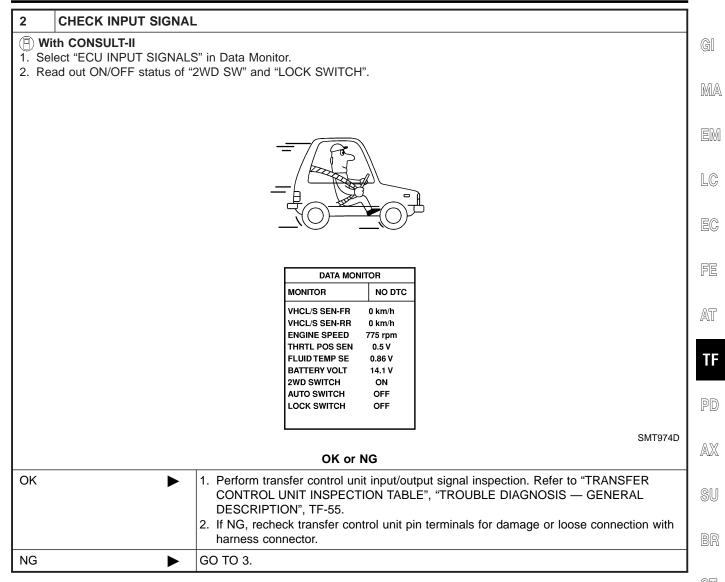

ST


HA

BT


SC

EL

Diagnostic Procedure (Cont'd)

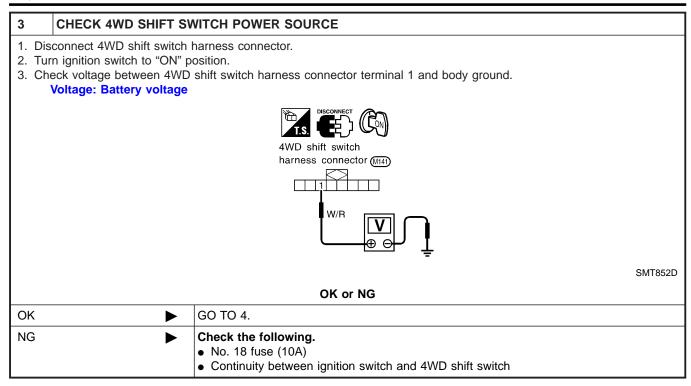

Diagnostic Procedure (Cont'd)

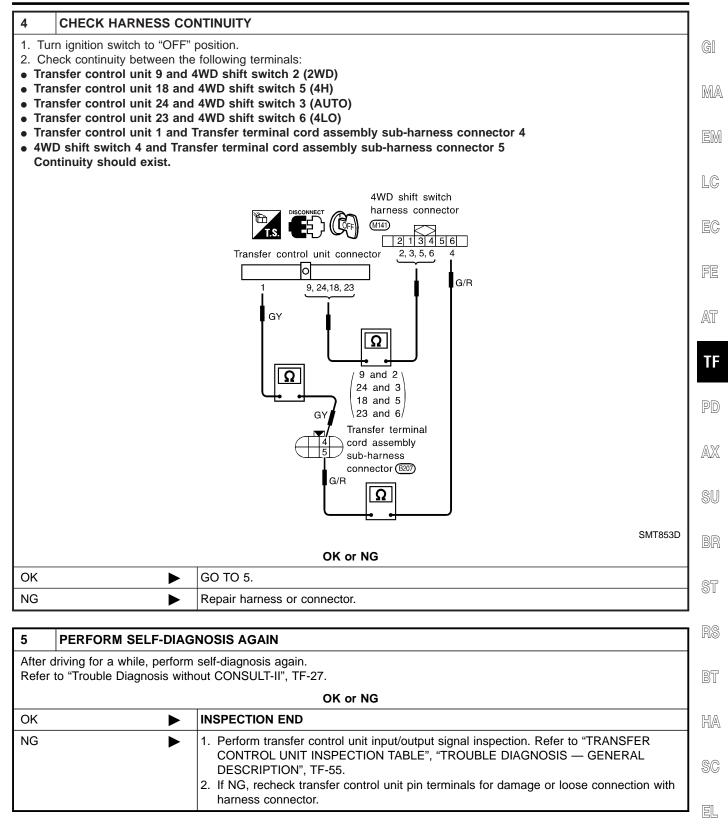


[D)%

TRANSFER MOTOR AND TRANSFER MOTOR RELAY

Diagnostic Procedure

Diagnostic Procedure

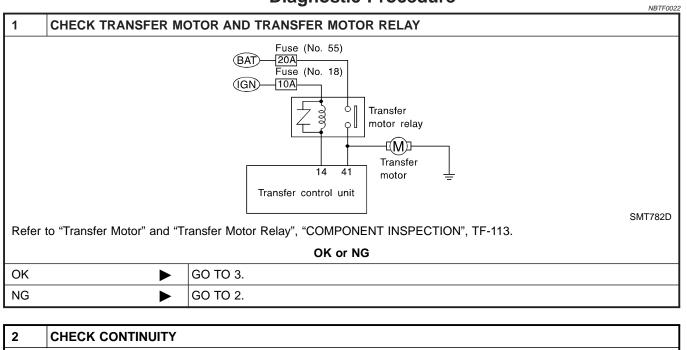

Check the following.

• Continuity of transfer sub-harness


Refer to "TRANSFER SWITCH ASSEMBLY SUB-HARNESS CONNECTOR", "COMPONENT INSPECTION", TF-114.

OK or NG				
ОК	►	Repair or replace transfer motor and transfer motor relay.		
NG		Repair or replace transfer sub-harness.		

3	CHECK INPUT SIGNAL				
 With CONSULT-II Select "MAIN SIGNALS" in Data Monitor. Read out ON/OFF status of "MOTOR RELAY". 					
		DATA MONITOR			
		MONITOR NO DTC			
		4WD MODE 2WD COMP CL TORQ 0.0 kgm DUTY SOLENOID 4 % 2-4WD SOL OFF VHCL/S COMP 0 km/h THROTTLE POSI 0.0 /8 MOTOR RELAY OFF 4WD FAIL LAMP OFF SHIFT ACT 1 OFF shift ACT 1 OFF wn standard value although ON/OFF switching occurs, check the following items. onsor and closed throttle position switch circuits			
Refer to AT-99, "DTC P0705 Park/Neutral Position Switch", AT-176, "DTC P1705 Throttle Position Sensor" and AT-184, "Closed Throttle Position Switch (idle position)".					
OK or NG					
OK	►	GO TO 4.			
NG	►	 Perform transfer control unit input/output signal inspection. Refer to "TRANSFER CONTROL UNIT INSPECTION TABLE", "TROUBLE DIAGNOSIS — GENERAL DESCRIPTION", TF-55. If NG, recheck transfer control unit pin terminals for damage or loose connection with harness connector. 			

TRANSFER MOTOR AND TRANSFER MOTOR RELAY

Diagnostic Procedure (Cont'd)

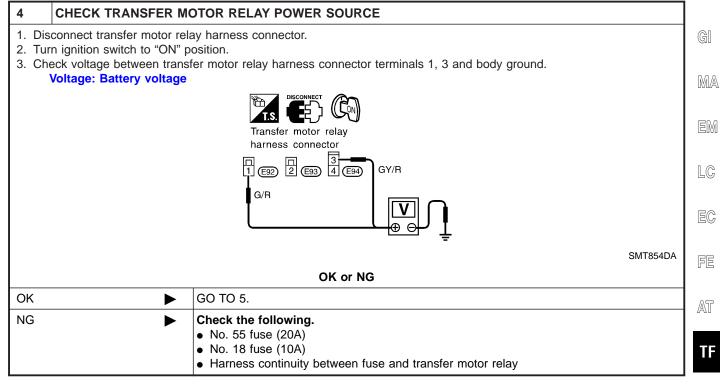

PD

AX

SU

BR

ST

RS

BT


HA

SC

EL

TRANSFER MOTOR AND TRANSFER MOTOR RELAY

Diagnostic Procedure (Cont'd)

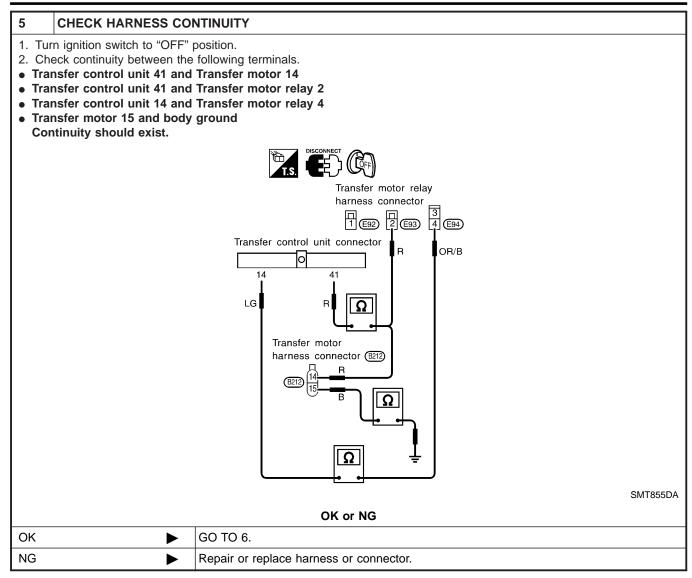

6	PERFORM SELF-DIAGNOSIS AGAIN		
After driving for a while, perform self-diagnosis again. Refer to "Trouble Diagnosis without CONSULT-II", TF-27 and "Trouble Diagnosis with CONSULT-II", TF-30.			
OK or NG			
OK	►	INSPECTION END	
NG	►	 Perform transfer control unit input/output signal inspection. Refer to "TRANSFER CONTROL UNIT INSPECTION TABLE", "TROUBLE DIAGNOSIS — GENERAL DESCRIPTION", TF-55. If NG, recheck transfer control unit pin terminals for damage or loose connection with harness connector. 	

TRANSFER FLUID TEMPERATURE SENSOR

Diagnostic Procedure

Diagnostic Procedure

		NB1F002	3
1	CHECK TRANSFER FLUID TEMPERATURE SENSOR		
Refer	to "2-4WD Shift Solenoid	Valve and Transfer Fluid Temperature Sensor", "COMPONENT INSPECTION", TF-111.	
		OK or NG	M
OK		GO TO 3.	
NG		GO TO 2.	I EN
2	CHECK CONTINUITY		LC
	k the following.		
Re	ntinuity of transfer sub-har fer to "TRANSFER TERMI -114.	ness NAL CORD ASSEMBLY SUB-HARNESS CONNECTOR", "COMPONENT INSPECTION",	EC

	OK or NG	69
ОК	Repair or replace fluid temperature sensor.	- Ce
NG	Repair or replace transfer sub-harness.	
		A

3	CHECK INPUT S	IGNAI		1
				TF
WITH	CONSULT-II		GO TO 4.	
WITH	OUT CONSULT-II		GO TO 5.	PD

AX

SU

ST

RS

BT

HA

SC


EL

IDX

BR


TRANSFER FLUID TEMPERATURE SENSOR

Diagnostic Procedure (Cont'd)

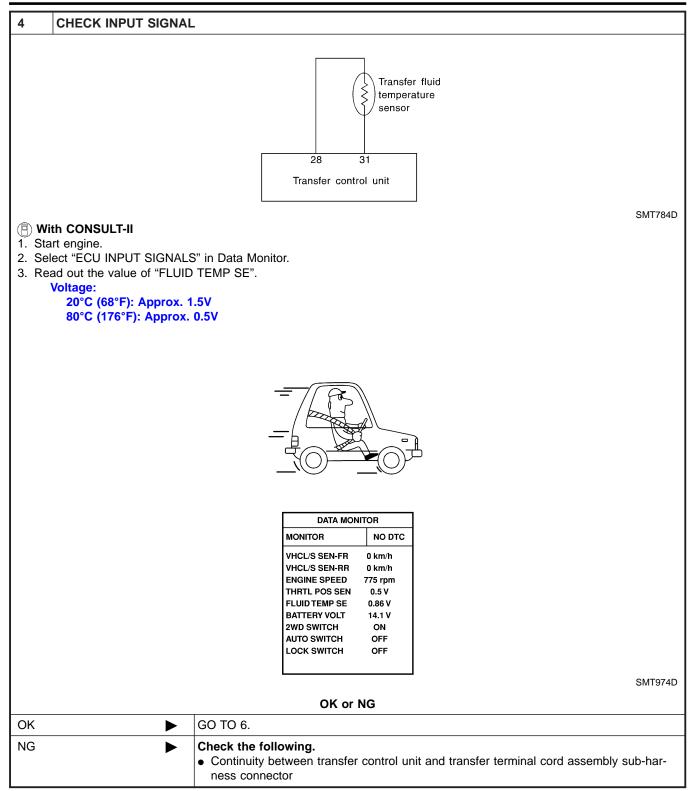

TRANSFER FLUID TEMPERATURE SENSOR

Diagnostic Procedure (Cont'd)

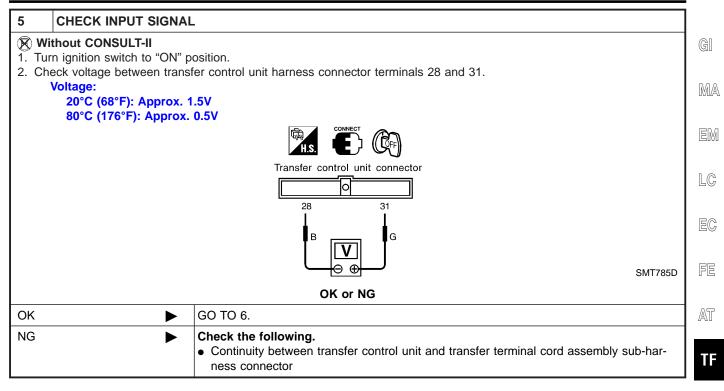

After driving for a while, perform self-diagnosis again. Refer to "Trouble Diagnosis without CONSULT-II", TF-27. OK or NG OK INSPECTION END NG I. Perform transfer control unit input/output signal inspection. Refer to "TRANSFER CONTROL UNIT INSPECTION TABLE", "TROUBLE DIAGNOSIS — GENERAL DESCRIPTION", TF-55. 2. If NG, recheck transfer control unit pin terminals for damage or loose connection with harness connector	6	PERFORM SELF-DIAG	NOSIS AGAIN	P
OK INSPECTION END NG 1. Perform transfer control unit input/output signal inspection. Refer to "TRANSFER CONTROL UNIT INSPECTION TABLE", "TROUBLE DIAGNOSIS — GENERAL DESCRIPTION", TF-55. 2. If NG, recheck transfer control unit pin terminals for damage or loose connection with				A
NG I. Perform transfer control unit input/output signal inspection. Refer to "TRANSFER CONTROL UNIT INSPECTION TABLE", "TROUBLE DIAGNOSIS — GENERAL DESCRIPTION", TF-55. If NG, recheck transfer control unit pin terminals for damage or loose connection with 			OK or NG	
CONTROL UNIT INSPECTION TABLE", "TROUBLE DIAGNOSIS — GENERAL DESCRIPTION", TF-55. 2. If NG, recheck transfer control unit pin terminals for damage or loose connection with	OK	•	INSPECTION END	S
namess connector.	NG	►	CONTROL UNIT INSPECTION TABLE", "TROUBLE DIAGNOSIS — GENERAL DESCRIPTION", TF-55.	

RS

BT


HA

SC

EL

Diagnostic Procedure

Diagnostic Procedure

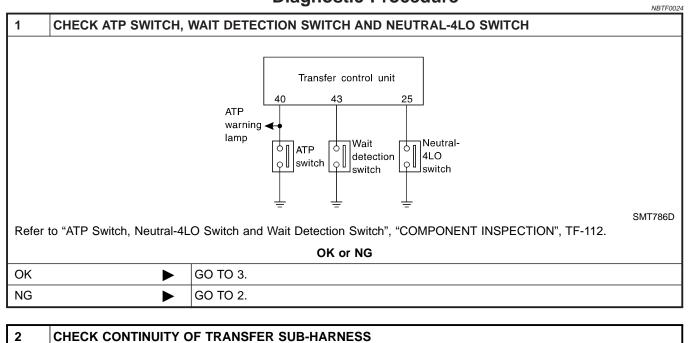

Check the following.

• Continuity of transfer sub-harness

Refer to "TRANSFER SWITCH ASSEMBLY SUB-HARNESS CONNECTOR", "COMPONENT INSPECTION", TF-114.

OK or NG		
ОК		Repair or replace ATP switch, wait detection switch or neutral-4LO switch.
NG		Repair or replace transfer sub-harness.

3	CHECK INPUT SIGNAL		
WITH	WITH CONSULT-II		GO TO 4.
WITH	OUT CONSULT-II		GO TO 5.

Diagnostic Procedure (Cont'd)

4	CHECK INPUT SIGNAL]
1. Se	th CONSULT-II lect "ECU INPUT SIGNALS	" in Data Monitor. of "ATP SW", "NEUTRAL SW" and "WAIT DETCT SW".	GI
2. Re			MA
		MONITOR NO DTC	
		ATP SWITCH OFF N POSI SW AT OFF R POSI SW AT OFF	EM
		P POSI SW AT ON CLOSED THL/SW ON ABS OPER SW OFF WAIT DETCT SW OFF	LC
		SHIFT POS SW1 OFF SHIFT POS SW2 ON	EC
		SMT976D	
		OK or NG	FE
OK	•	GO TO 6.]
NG	►	 Check the following. Harness continuity between transfer switch assembly sub-harness connector and transfer control unit 	AT
		 Continuity between transfer switch assembly sub-harness connector and body ground 	TF

PD

AX

SU

BR

ST

RS


BT

HA

SC

EL

Diagnostic Procedure (Cont'd)

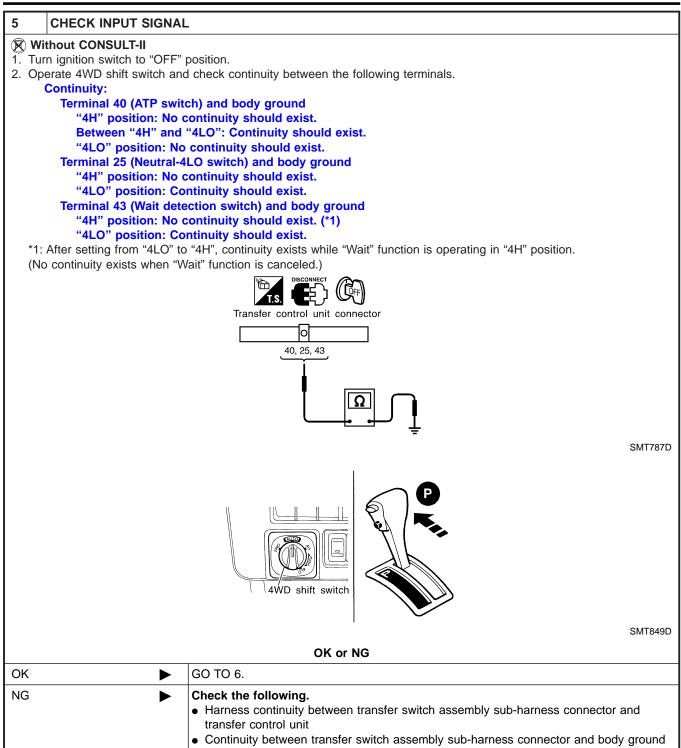

Diagnostic Procedure (Cont'd)

6	PERFORM SELF-DIAG	NOSIS AGAIN]
	After driving for a while, perform self-diagnosis again. Refer to "Trouble Diagnosis without CONSULT-II", TF-27.		
		OK or NG	MA
OK	•	INSPECTION END	UVUZA
NG	•	 Perform transfer control unit input/output signal inspection. Refer to "TRANSFER CONTROL UNIT INSPECTION TABLE", "TROUBLE DIAGNOSIS — GENERAL DESCRIPTION", TF-55. 	EM
		 If NG, recheck transfer control unit pin terminals for damage or loose connection with harness connector. 	LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

Diagnostic Procedure


	Diagnostic i roccadi c				
1	CHECK MALFUNCTION				
Is this	Is this malfunction detected only while driving in reverse?				
	Yes or No				
Yes		CHECK A/T PNP SWITCH "R" POSITION. Refer to AT-99, "DTC P0705 Park/Neutral Position Switch".			
No		GO TO 2.			

2	CHECK OTHER MALFU	JNCTION		
Are other malfunctions also detected by self-diagnosis and CONSULT-II? Refer to "Trouble Diagnosis without CONSULT-II", TF-27 and "Trouble Diagnosis with CONSULT-II", TF-30.				
	Yes or No			
Yes	►	CHECK FOR OTHER MALFUNCTIONS. (When other malfunctions are eliminated, clutch pressure switch malfunction display may disappear.)		
No		GO TO 3.		

3	CHECK 2-4WD SHIFT SOLENOID VALVE AND 4WD SHIFT SWITCH CIRCUITS			
Check 2-4WD shift solenoid valve and 4WD shift switch circuits.				
OK or NG				
OK		GO TO 4.		
NG Check, repair or replace faulty parts.				

4	CHECK INPUT SIGNAL			
WITH	WITH CONSULT-II		GO TO 5.	
WITHOUT CONSULT-II			GO TO 6.	

CLUTCH PRESSURE SWITCH

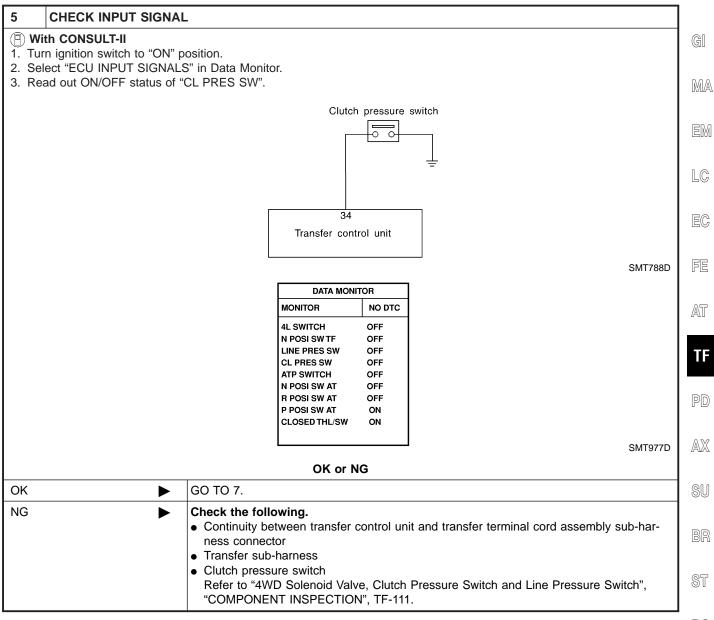

RS

BT


HA

SC

EL

TF-81

Diagnostic Procedure (Cont'd)

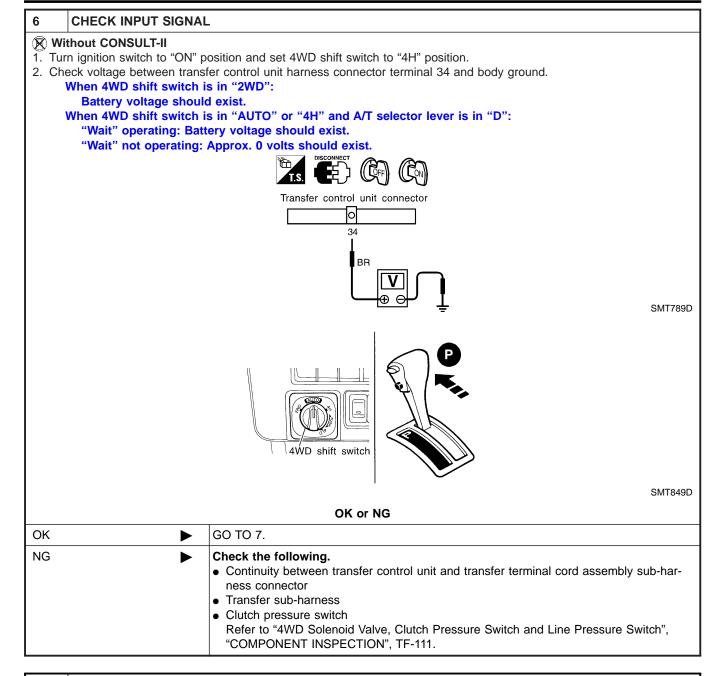

7	PERFORM SELF-DIAG	NOSIS AGAIN			
	 Check hydraulic parts. After driving for a while, perform self-diagnosis again. Refer to "Trouble Diagnosis without CONSULT-II", TF-27. 				
		OK or NG			
OK	►	INSPECTION END			
NG	►	 Perform transfer control unit input/output signal inspection. Refer to "TRANSFER CONTROL UNIT INSPECTION TABLE", TF-55. If NG, recheck transfer control unit pin terminals for damage or loose connection with harness connector. 			

LINE PRESSURE SWITCH

Diagnostic Procedure

Diagnostic Procedure

			?6
1	CHECK MALFUNCTION		
Is this	malfunction detected only	while driving in reverse?	1
		Yes or No	MA
Yes		CHECK A/T PNP SWITCH "R" POSITION. Refer to AT-99, "DTC P0705 Park/Neutral Position Switch".	
No	•	GO TO 2.	EM

2	2 CHECK OTHER MALFUNCTIONS			
		cted by self-diagnosis and CONSULT-II? out CONSULT-II", TF-27 and "Trouble Diagnosis with CONSULT-II", TF-30.	EC	
		Yes or No		
Yes	►	CHECK FOR OTHER MALFUNCTIONS. (When other malfunctions are eliminated, line pressure switch malfunction display may disappear.)	FE	
No		GO TO 3.	AT	

3	3 CHECK INPUT SIGNAL			TF
WITH	CONSULT-II		GO TO 4.	PD
WITH	OUT CONSULT-II		GO TO 5.	

AX

SU

BR

ST

RS


BT

HA


SC

EL

Diagnostic Procedure (Cont'd)

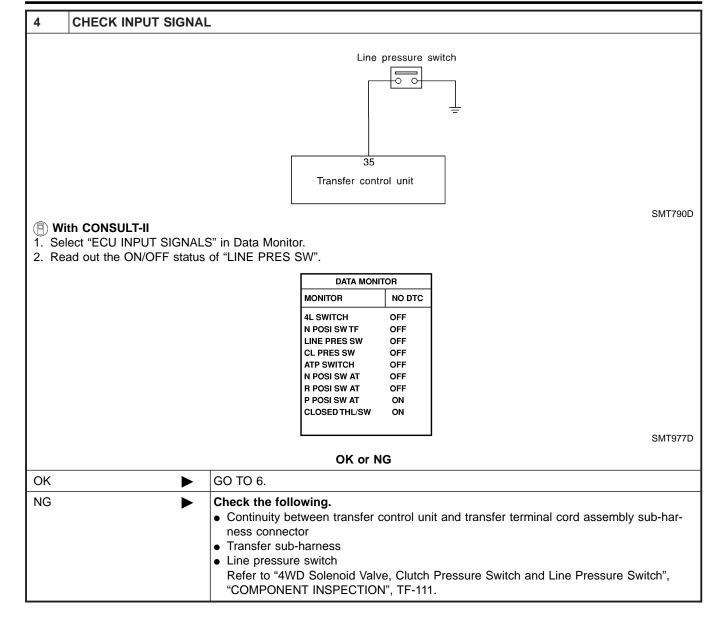

LINE PRESSURE SWITCH

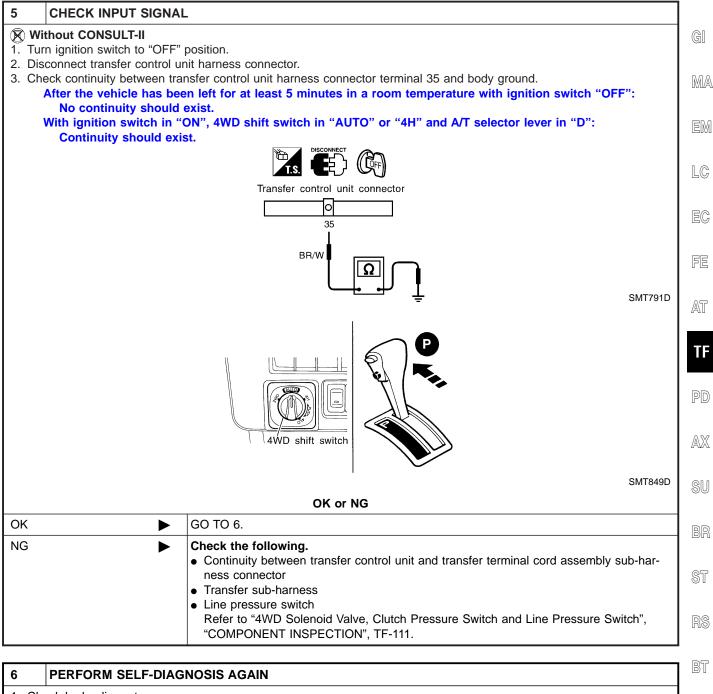

1. Check hydraulic parts.

OK or NG

ОК	INSPECTION END	SC
NG	 Perform transfer control unit input/output signal inspection. Refer to TF-55. If NG, recheck transfer control unit pin terminals for damage or loose connection with harness connector. 	EL

HA

Diagnostic Procedure

1

Diagnostic Procedure

NBTF0027

CHECK INPUT SIGNAL

WITHOUT CONSULT-II 🕨 GO TO 2.

2 CHECK INPUT SIGNAL


Without CONSULT-II

- 1. Turn ignition switch to "OFF" position.
- 2. Disconnect ABS control unit harness connector.
- 3. Disconnect ABS control unit and transfer control unit harness connectors.
- 4. Check continuity between transfer control unit harness connector terminal 32 and ABS control unit harness connector terminal 13.

Continuity should exist.

5. Check continuity between transfer control unit harness connector terminal 32, ABS control unit harness connector terminal 13 and body ground.

No continuity should exist.

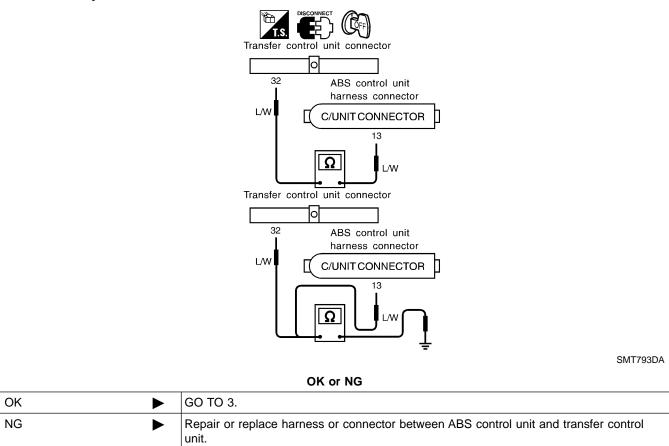

3	3 CHECK COMMUNICATION LINE					
	Check communication line between ABS control unit and transfer control unit. (Refer to BR-77, "8. Vehicle vibrates excessively when ABS is operating".)					
		OK or NG				
OK	ОК 🕨 GO TO 4.					
NG	NG Check, repair or replace faulty parts.					

ABS OPERATION SIGNAL

4	PERFORM SELF-DIAG	NOSIS AGAIN]
	driving for a while, perform to "Trouble Diagnosis withe		GI
		OK or NG	MA
OK		INSPECTION END	
NG	•	 Perform transfer control unit input/output signal inspection. Refer to "TRANSFER CONTROL UNIT INSPECTION TABLE", "TROUBLE DIAGNOSIS — GENERAL DESCRIPTION", TF-55. 	EM
		 If NG, recheck transfer control unit pin terminals for damage or loose connection with harness connector. 	LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS


BT

HA

SC

EL

Diagnostic Procedure

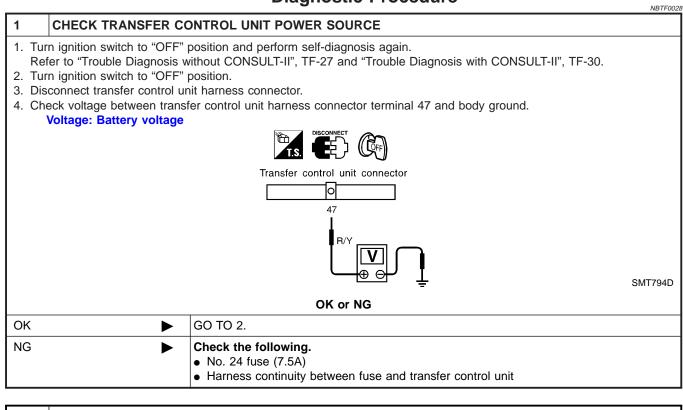


2	PERFORM SELF-DIAG	NOSIS AGAIN		
	After driving for a while, perform self-diagnosis again. Refer to "Trouble Diagnosis without CONSULT-II", TF-27 and "Trouble Diagnosis with CONSULT-II", TF-30.			
		OK or NG		
OK	►	INSPECTION END		
NG		 Perform transfer control unit input/output signal inspection. Refer to "TRANSFER CONTROL UNIT INSPECTION TABLE", "TROUBLE DIAGNOSIS — GENERAL DESCRIPTION", TF-55. If NG, recheck transfer control unit pin terminals for damage or loose connection with harness connector. 		

SHIFT ACTUATOR

Diagnostic Procedure

	Diagnostic i roccuarc	NBTF0064
T ACTUATOR		GI
uator & Actuator Pos	sition Switch", "COMPONENT INSPECTION", TF-115.	
	OK or NG	MA
•	GO TO 3.	
	GO TO 2.	EM
		T ACTUATOR tuator & Actuator Position Switch", "COMPONENT INSPECTION", TF-115. OK or NG GO TO 3.

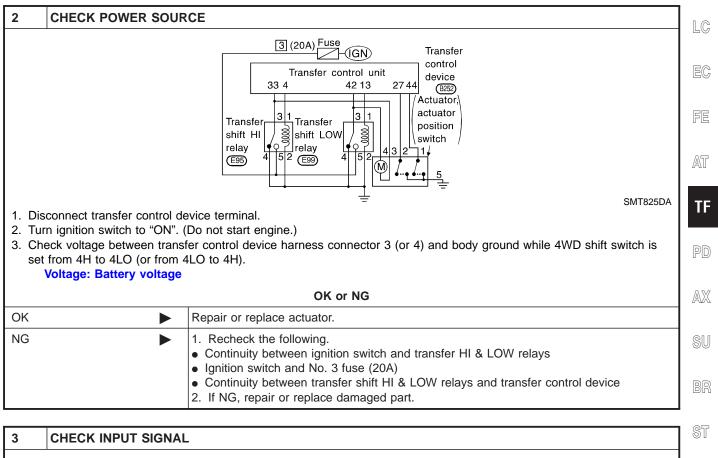

WITH CONSULT-II	GO TO 4.	RS
WITHOUT CONSULT-II	GO TO 5.	
		BT


HA

SC


EL

SHIFT ACTUATOR

Diagnostic Procedure (Cont'd)

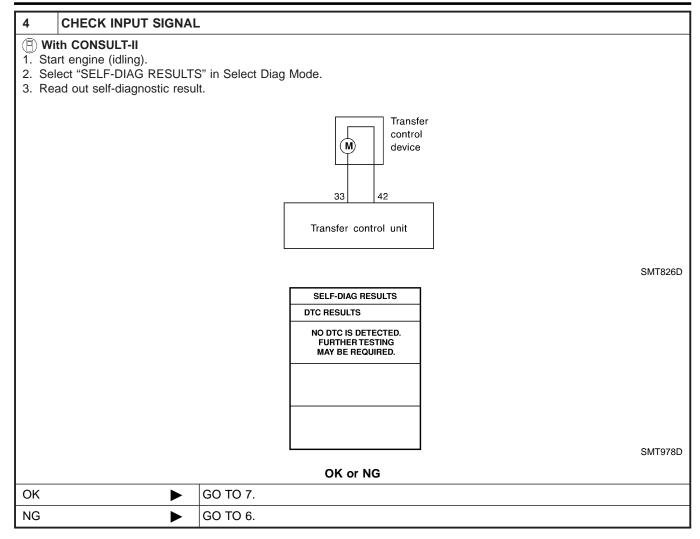

SHIFT ACTUATOR

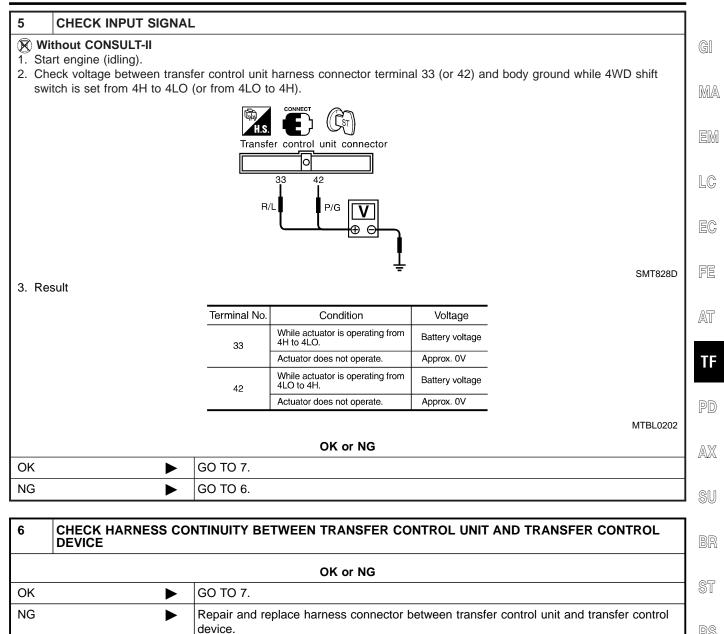

7	PERFORM SELF-DIAG	NOSIS AGAIN	B
	driving for a while, perform to "Trouble Diagnosis with		
	OK or NG		
OK	►	INSPECTION END]
NG	•	 Perform transfer control unit/output signal inspection. Refer to "TRANSFER CON- TROL UNIT INSPECTION TABLE", "TROUBLE DIAGNOSIS — GENERAL DESCRIPTION", TF-55. If NG, recheck transfer control unit pin terminals for damage or loose connection with 	S (
		harness connector.	

SHIFT ACTUATOR POSITION SWITCH

Diagnostic Procedure

		Diagnostic i loccuare	NBTF0065		
1	SHIFT ACTUATOR POS	ITION SWITCH			
Refer	Refer to "Actuator & Actuator Position Switch", "COMPONENT INSPECTION", TF-115.				
		OK or NG			
OK		GO TO 3.			
NG	•	GO TO 2.			


2	CHECK POSITION SWITCH			
Ref	 Recheck continuity of shift actuator position switch. Refer to "Actuator & Actuator Position Switch", "COMPONENT INSPECTION", TF-115. Continuity should exist. 			
	OK or NG			
ОК		GO TO 3.		
NG	•	Repair or replace position switch.		

3	CHECK INPUT SIGNAL		
WITH	CONSULT-II		GO TO 4.
WITH	DUT CONSULT-II		GO TO 5.

4	CHECK INPUT SIGNAL			
1. Sta 2. Se	th CONSULT-II Irt engine (idling). Iect "SELF-DIAG RESULTS" ad out self-diagnostic result.	in Select Dia	g Mode.	
			27 44 Transfer control unit	
		L		
				SM1829DA
			SELF-DIAG RESULTS	
			DTC RESULTS	
			NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.	
				0170707
			OK or NG	SMT978D
ок		GO TO 7.		
NG		GO TO 7.		

SHIFT ACTUATOR POSITION SWITCH


Diagnostic Procedure (Cont'd)

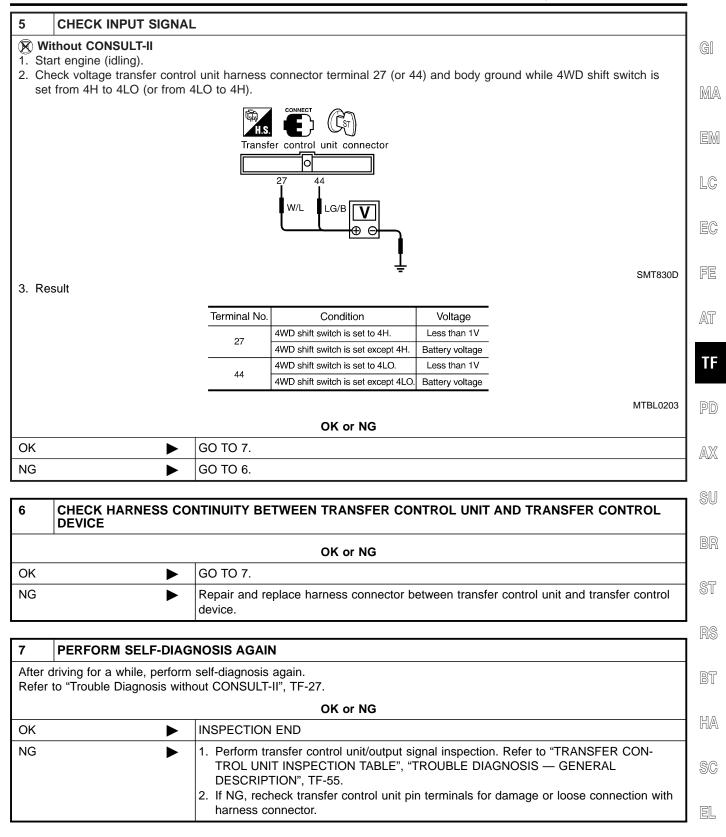


1DX

Diagnostic Procedure

			TF0066	
1	SHIFT ACTUATOR CIRCUIT			
	Refer to "Transfer Shift Relay (High & Low)", "COMPONENT INSPECTION" and "Actuator & Actuator Position Switch", "COMPONENT INSPECTION", TF-114, 115. OK or NG			
OK		GO TO 2.		
NG		Repair or replace transfer shift relay and actuator and actuator position switch.		

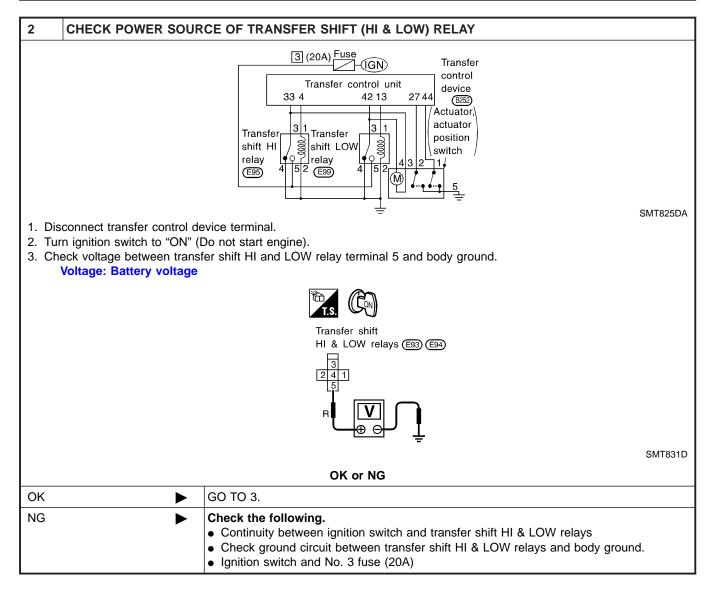

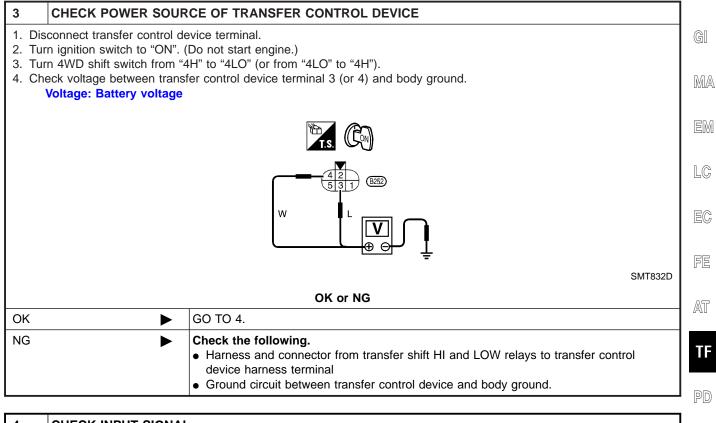

4	4 CHECK INPUT SIGNAL			
				AX
WITH C	CONSULT-II		GO TO 5.	
WITHO	UT CONSULT-II		GO TO 6.	SU

TF-95

BR

RS


BT


HA

SC

EL

Diagnostic Procedure (Cont'd)

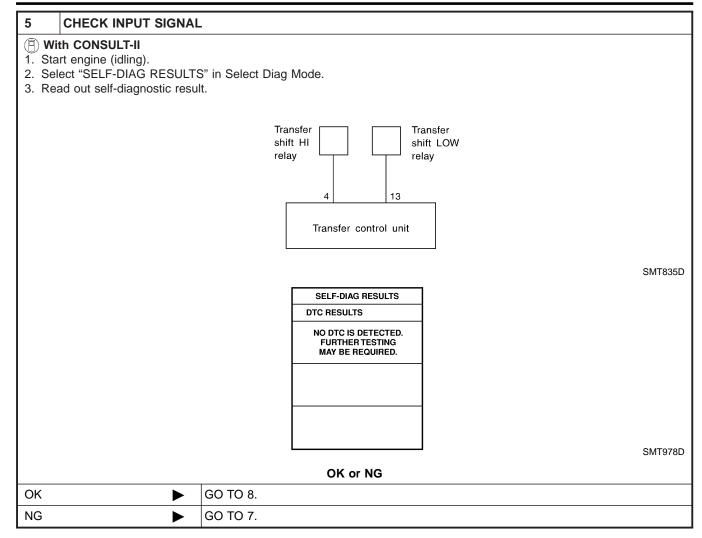

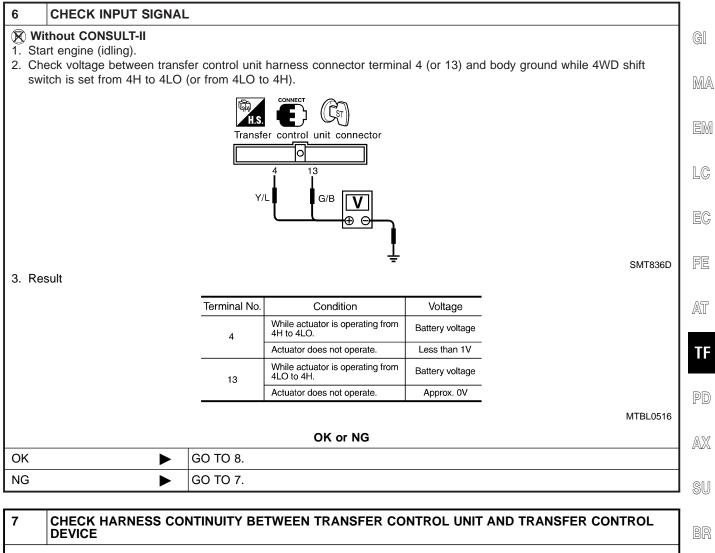


		OK or NG	0
ОК	►	GO TO 8.	ST
NG	-	Repair and replace harness connector between transfer control unit and transfer control device.	RS

8	PERFORM SELF-DIAG	NOSIS AGAIN	BT
	After driving for a while, perform self-diagnosis again. Refer to "Trouble Diagnosis without CONSULT-II", TF-27.		
		OK or NG	HA
OK	►	INSPECTION END	
NG	►	 Perform transfer control unit/output signal inspection. Refer to "TRANSFER CON- TROL UNIT INSPECTION TABLE", "TROUBLE DIAGNOSIS — GENERAL DESCRIPTION", TF-55. If NG, recheck transfer control unit pin terminals for damage or loose connection with harness connector. 	SC EL


Symptom 1. 4WD Shift Indicator Lamp Does Not Turn ON

Symptom 1. 4WD Shift Indicator Lamp Does Not Turn ON

SYMPTOM: Although ignition switch is turned "ON", all the 4WD shift indicator lamps do not turn ON for 1 second.

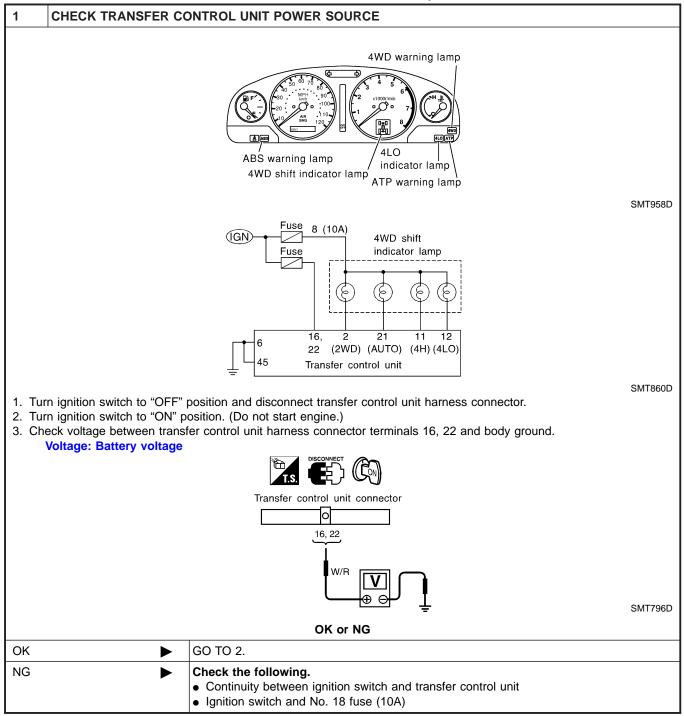

Symptom 1. 4WD Shift Indicator Lamp Does Not Turn ON (Cont'd)

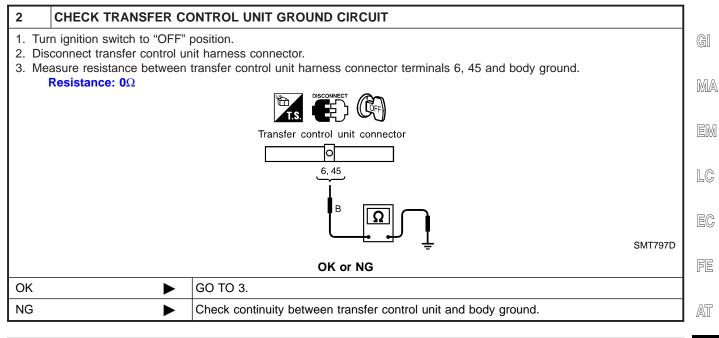

3	CHECK PROCEDURES FROM THE BEGINNING AGAIN		TF
Check	again.		
		OK or NG	PD
OK	►	INSPECTION END	
NG	►	1. Perform transfer control unit input/output signal inspection. Refer to "TRANSFER CONTROL UNIT INSPECTION TABLE", "TROUBLE DIAGNOSIS — GENERAL DESCRIPTION", TF-55.	AX
		2. If NG, recheck transfer control unit pin terminals for damage or loose connection with harness connector.	SU

BR

ST

RS

BT

HA


SC

EL


Symptom 2. 4WD Warning Lamp Does Not Turn ON

Symptom 2. 4WD Warning Lamp Does Not Turn ON

SYMPTOM: Although ignition switch is turned "ON", 4WD warning lamp does not turn ON.

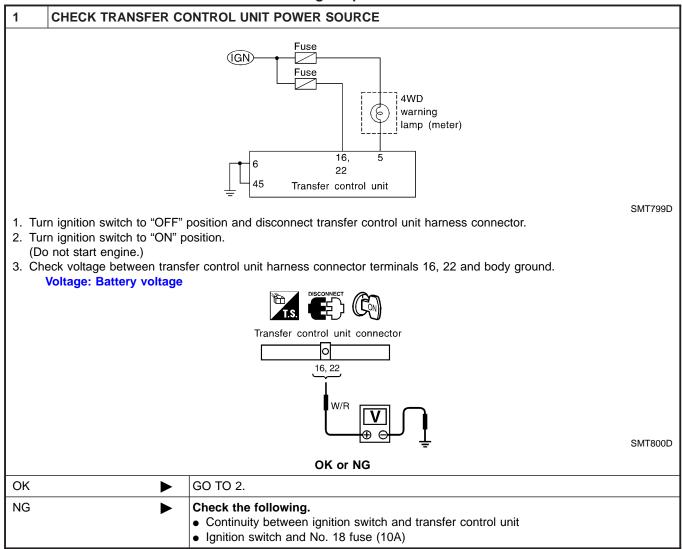

Symptom 2. 4WD Warning Lamp Does Not Turn ON (Cont'd)

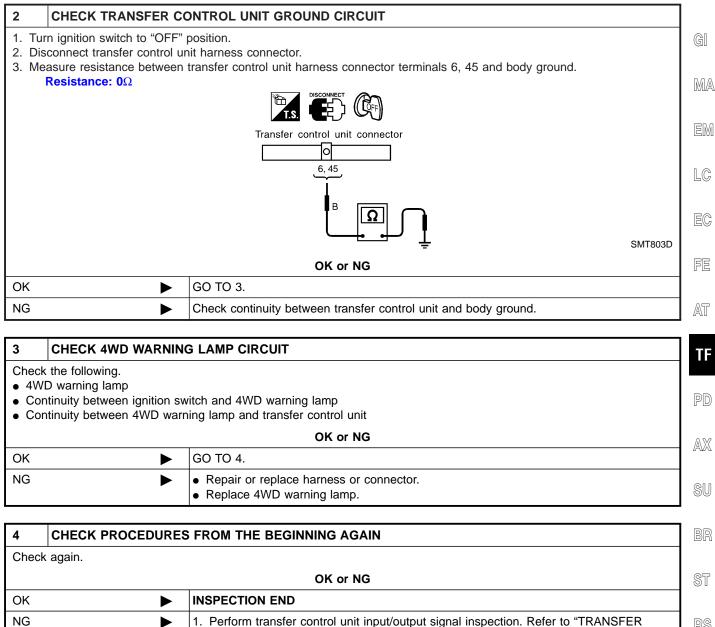

OK	INSPECTION END	
NG	1. Perform transfer control unit input/output signal inspection. Refer to "TRANSFER CONTROL UNIT INSPECTION TABLE", "TROUBLE DIAGNOSIS — GENERAL DESCRIPTION", TF-55.	RS
	2. If NG, recheck transfer control unit pin terminals for damage or loose connection with harness connector.	BT

HA


SC

EL


Symptom 3. 4WD Shift Indicator Lamp Does Not Turn OFF

Symptom 3. 4WD Shift Indicator Lamp Does Not Turn OFF

SYMPTOM: When 4WD shift switch is set from "4H" to "4LO", all the 4WD shift indicator lamps do not turn OFF.

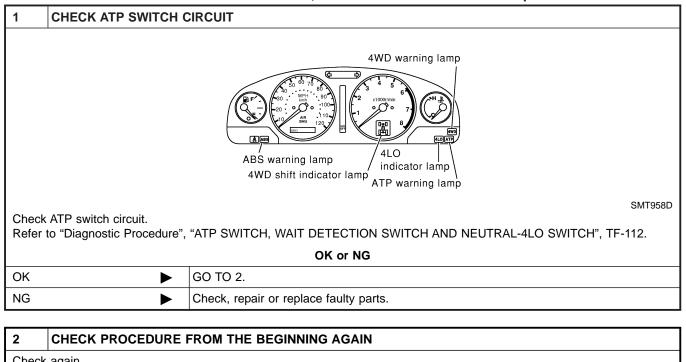

Check again.	
	OK or NG
ОК 🕨	INSPECTION END
NG	Recheck each connector's pin terminals for damage or loose connection.

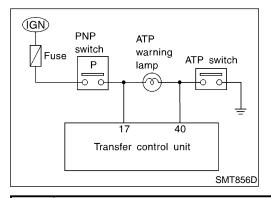

Symptom 4. ATP Warning Lamp Does Not Turn ON

SYMPTOM: When 4WD shift switch is set from "4H" to "4LO" with A/T selector lever in "P" position, ATP warning lamp does not turn ON.

1	CHECK ATP SWITCH CIRCUIT		
	Check ATP switch circuit. Refer to "Diagnostic Procedure", "ATP SWITCH, WAIT DETECTION SWITCH AND NEUTRAL-4LO SWITCH", TF-112.		
		OK or NG	
OK	►	GO TO 2.	
NG	•	Check, repair or replace faulty parts.	

Symptom 4. ATP Warning Lamp Does Not Turn ON (Cont'd)

SU

BR

ST

RS

BT

HA

SC

EL


K PNP SWITCH	" position) switch terminal 4 and ATP warning lamp ming lamp and ATP switch OK or NG GO TO 3. Repair or replace ATP warning lamp, harness or connector. I CIRCUIT ark/Neutral Position Switch". OK or NG GO TO 4.		
between PNP ("P" between ATP warr K PNP SWITCH witch circuit.	OK or NG OK or NG OGO TO 3. Repair or replace ATP warning lamp, harness or connector. I CIRCUIT ark/Neutral Position Switch". OK or NG		
witch circuit.	GO TO 3. Repair or replace ATP warning lamp, harness or connector. I CIRCUIT ark/Neutral Position Switch". OK or NG		
witch circuit.	Repair or replace ATP warning lamp, harness or connector.		
witch circuit.	I CIRCUIT ark/Neutral Position Switch". OK or NG		
witch circuit.	ark/Neutral Position Switch". OK or NG		
witch circuit.	ark/Neutral Position Switch". OK or NG		
	OK or NG		
•			
	GO TO 4.	Fe	
		ſ	
	Check, repair or replace faulty parts.		
		Į.	
CHECK PROCEDURES FROM THE BEGINNING AGAIN			
	OK or NG		
	INSPECTION END		
	Recheck each connector's pin terminals for damage or loose connection.		
		OK or NG INSPECTION END	

Symptom 5. 4LO Indicator Lamp Does Not Turn ON

Symptom 5. 4LO Indicator Lamp Does Not Turn ON

=NBTF0033

SYMPTOM: When 4WD shift switch is set from "4H" to "4LO" position, 4LO indicator lamp does not turn ON.

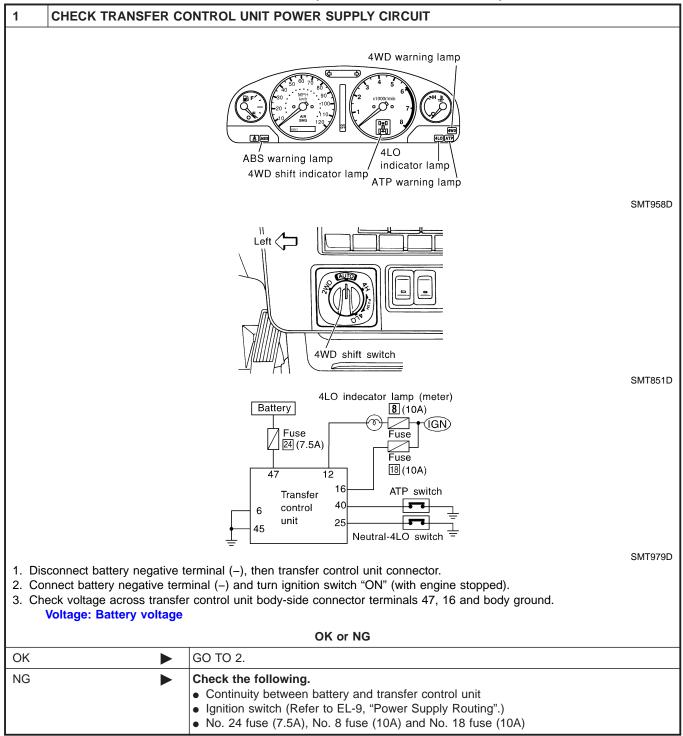

Symptom 5. 4LO Indicator Lamp Does Not Turn ON (Cont'd)


		1
	ONTROL UNIT GROUND CIRCUIT	4
	nd disconnect transfer control unit connector. transfer control unit body-side connector terminals 6, 45 and body ground.	G
	OK or NG	M
ОК	GO TO 3.	1
NG	Check the following.Continuity between transfer control unit and body ground	E
3 CHECK 4LO INDICATO	DR LAMP CIRCUIT	
Disconnect battery negative tern 1. Check condition of 4LO indic	ninal (-) and check the following items: ator lamp.	E
 Check continuity between bar Check continuity between 4L Check condition of ATP switc Check condition of neutral-4L 	ttery and 4LO indicator lamp. O indicator lamp and transfer control unit connector terminal 12. h.	F
	OK or NG	A
OK 🕨	GO TO 4.	
NG	Check the following. • 4LO indicator lamp	T
	Neutral-4LO switch Refer to "ATP Switch, Neutral-4LO Switch and Wait Detection Switch", "COMPONENT INSPECTION", TF-112.	P
	•	- . A
4 CHECK PROCEDURES	S FROM THE BEGINNING	
Check again.	OK or NG	S
ОК	INSPECTION END	1
NG	 Perform transfer control unit input/output signal inspection. Refer to "TRANSFER CONTROL UNIT INSPECTION TABLE", "TROUBLE DIAGNOSIS — GENERAL 	- B
	DESCRIPTION", TF-55.2. If NG, recheck transfer control unit pin terminals for damage or loose connection with harness connector.	S
		R
		B
		K
		S

EL

Symptom 6. 4WD Shift Indicator Lamp Does Not Indicate "4H"

Symptom 6. 4WD Shift Indicator Lamp Does Not Indicate "4H"

SYMPTOM: When 4WD shift switch is set to "4H", 4WD shift indicator lamp does not indicate "4H".

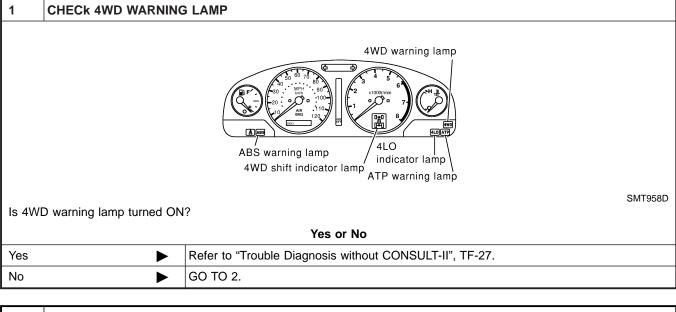

CHECK FOLLOWING ITEMS				
ne following. al-4LO switch circuit. Ref detection switch circuit. R witch circuit. Refer to TF	Refer to TF-76.			
OK or NG				
►	GO TO 3.			
•	Check, repair or replace faulty parts.			
E	al-4LO switch circuit. Ref letection switch circuit. R witch circuit. Refer to TF			

3	3 CHECK PROCEDURES FROM THE BEGINNING AGAIN				
Check again.					
OK or NG					
OK	OK INSPECTION END				
NG	Recheck each connector's pin terminals for damage or loose connection.				

Symptom 7. 4WD Shift Indicator Lamp Repeats Flickering

Symptom 7. 4WD Shift Indicator Lamp Repeats Flickering =NBTF0035 G

SVMPTOM: AWD chift indicator lamp keeps flickering

		STMPTOM: 4WD shift indicator lamp keeps flickering.
1	CHECK 4WD SHIFT IN	DICATOR LAMP
		4WD warning lamp
		SMT958D
2. Mo	at 4WD shift switch to "2WD ove vehicle forward and bac bes 4WD shift indicator lam	ckward. Or drive straight increasing or decreasing speed under 20 km/h (12 MPH).
		Yes or No
Yes	•	GO TO 2.
No	•	INSPECTION END
	1	
2	CHECK TIGHT CORNE	R BRAKING SYMPTOM
Drive occur	-	km/h (12 MPH), turning steering wheel to the limit. Does tight corner braking symptom
		Yes or No
Yes	•	GO TO 3.
No	•	GO TO 4.
3	CHECK 4WD SHIFT IN	
Does	the 4WD shift indicator lam	np keep flickering when the front wheels are jacked up?
	、	Yes or No
Yes	▶	Check transfer unit operating system.
No		Check tires.
4	CHECK 4WD WARNING	S LAMP
		2 (4WD shift indicator lamp is turned OFF.)
2003		Yes or No
Yes		Perform self-diagnoses. Refer to "Trouble Diagnosis without CONSULT-II", TF-27.
No		GO TO 5.
110		
5	CHECK 4WD SHIFT IN	DICATOR LAMP
	4WD shift indicator lamp k	
	- · · · · · · · · · · · · · · · · · · ·	Yes or No
Yes	•	Check again.
No		INSPECTION END

Symptom 8. Tight Corner Braking Symptom

Symptom 8. Tight Corner Braking Symptom SYMPTOM: Tight corner braking symptom occurs. (Hydraulic system failure)

			in failure	/	
1	CHECK INPUT SIGNA	L			
 With CONSULT-II Select "ECU INPUT SIGNALS" in Data Monitor. Read out the ON/OFF status of "CLUTCH PRES SW". 					
			DATA MONITO	DR	1
		MONIT		NO DTC	
		LINE F CL PR ATP S N POS R POS P POS	VITCH SI SW TF PRES SW RES SW SWITCH SI SW AT SI SW AT SI SW AT SI SW AT SED THL/SW	OFF OFF OFF OFF OFF OFF ON ON	SMT977D
Check Refer	Without CONSULT-II Check voltage between transfer control unit harness connector terminal 34 and body ground. Refer to "TRANSFER CONTROL UNIT INSPECTION TABLE", "TROUBLE DIAGNOSIS — GENERAL DESCRIPTION", TF-55.				
			OK or NO	3	
ОК	►	Disassemble transfe • Control valve asset • 4WD solenoid valv • 2-4WD shift soleno • Clutch piston • Clutch assembly	mbly e	check t	he following.
NG	►	GO TO 2.			
2	CHECK CLUTCH PRE	SSURE SWITCH CIR	CUIT		
	Check clutch pressure switch circuit. Refer to "Diagnostic Procedure", "CLUTCH PRESSURE SWITCH", TF-80.				
	č		OK or NO		
	_				

	60 10 3.
NG 🕨	Check, repair or replace faulty parts.

3 CHECK PROCEDURES FROM THE BEGINNING AGAIN					
Check again.					
OK or NG					
OK	OK INSPECTION END				
NG	NG Recheck each connector's pin terminals for damage or loose connection.				

TROUBLE DIAGNOSES FOR SYMPTOMS

Symptom 9. 4WD System Does Not Operate

Symptom 9. 4WD System Does Not Operate

SYMPTOM: The vehicle cannot be put into 4WD mode.

		SYMPTOM: T (Hydraulic sy		e cannot be put into 4WD mode. ure)	GI
1 CHECK	INPUT SIGNAL				1
	JLT-II INPUT SIGNALS" in Data ON/OFF status of "CLUT(
		DATA MONI	TOR		EN
		MONITOR	NO DTC		
		4L SWITCH N POSI SW TF LINE PRES SW CL PRES SW	OFF OFF OFF		E
		ATP SWITCH N POSI SW AT R POSI SW AT P POSI SW AT CLOSED THL/SW	OFF OFF OFF ON ON		F
				SMT977D	AT
TF-55.		OK or N		DIAGNOSIS — GENERAL DESCRIPTION",	P
OK		k transfer fluid level. semble transfer unit ar		e following.	
	 Main c Sub-oi Oil stra 	il pump assembly I pump assembly			S
	• 2-4WE) shift solenoid valve er element			B
	Straine	er O-ring bil pump drive gear			S
	D-ringClutchClutch	piston assembly			R
NG	► GO TO 2	<u>.</u>			B
					٦
	CLUTCH PRESSURE C	IRCUIT			- H
	essure switch circuit. estic Procedure", "CLUTCH	PRESSURF SWITCH	H". TF-80		
		OK or N			Ś
OK	► GO TO 3				1
					1

IDX

EL

Check, repair or replace faulty parts.

NG

TROUBLE DIAGNOSES FOR SYMPTOMS


Symptom 9. 4WD System Does Not Operate (Cont'd)

3	CHECK PROCEDURES FROM THE BEGINNING		
Check	Check again.		
OK or NG			
OK		INSPECTION END	
NG		Recheck each connector's pin terminals for damage or loose connection.	

NBTF0038

COMPONENT INSPECTION

4WD Shift Switch

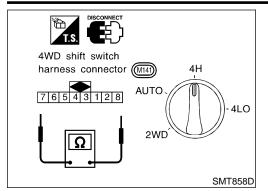

4WD Shift Switch

Check continuity between each terminal

NBTF0038S01


Check continuity between each terminal.			
Terminals	Switch position	Continuity	. GI
	2WD	Yes	. MA
1 - 2	Except 2WD	No	
	AUTO	Yes	EM
1 - 3, 1 - 4	Except AUTO	No	
1 - 4, 1 - 5	4H	Yes	LC
	Except 4H	No	
1 1 1 0	4LO	Yes	EC
1 - 4, 1 - 6	Except 4LO	No	

FE



TF

PD

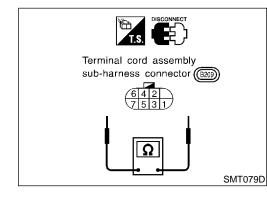

2-4WD Shift Solenoid Valve and Transfer Fluid Temperature Sensor

Measure resistance between terminals of transfer terminal cord assembly sub-harness connector located on rear-right of transfer unit.

Component parts	Terminals	Resistance	SII
2-4WD shift solenoid valve	4 - 5	Approx. 20°C (68°F): Approx. 22.8 - 25.2Ω	
Transfer fluid temperature sensor	2 - 3	Approx. 20°C (68°F): Approx. 2.5 kΩ Approx. 80°C (176°F): Approx. 0.3 kΩ	BR

- R
- LT1
- BT
- HA

4WD Solenoid Valve, Clutch Pressure Switch SG and Line Pressure Switch


Measure resistance between terminals of transfer terminal cord assembly sub-harness connector located on rear-right of transfer unit.


IDX

COMPONENT INSPECTION

4WD Solenoid Valve, Clutch Pressure Switch and Line Pressure Switch (Cont'd)

Component parts	Term	iinals	Remarks
4WD solenoid valve	6	Ground terminal	Approx. 20°C (68°F): Approx. 3.0 - 3.4Ω
Clutch pres- sure switch	7		 In room temperature 2-4WD shift solenoid valve "OFF": No continuity 2-4WD shift solenoid valve and transfer motor "ON": Continuity exists
Line pressure switch	1		 In room temperature Turn ignition switch to "OFF" position and leave vehicle for more than 5 min- utes. (OFF): No continuity Transfer motor "ON": Continuity exists

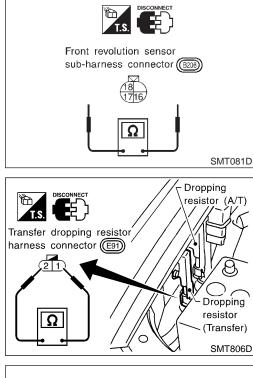

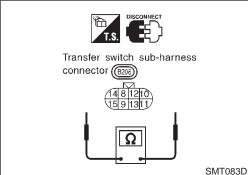

Front Revolution Sensor

Measure resistance between terminals of front revolution sensor sub-harness connector located on rear-right of transfer unit.

Terminals	Resistance
16 - 17	500 - 650Ω
18 - 17	No continuity
18 - 16	No continuity

NBTF0038S07

Transfer Dropping Resistor

Check resistance between terminals. **Resistance:** 11.2 - 12.8 Ω

ATP Switch, Neutral-4LO Switch and Wait Detection Switch

Measure resistance between terminals of transfer switch assembly sub-harness connector located on rear-right of transfer unit.

COMPONENT INSPECTION

ATP Switch, Neutral-4LO Switch and Wait Detection Switch (Cont'd)

Switch	Terminals	4WD shift switch position				
Switch	Terminais	4H (N)		۷)	4LO	GI
ATP switch	8 - 9	No conti- nuity	Cont	inuity	No conti- nuity	MA
Neutral-4LO switch	12 - 13	No continuity Cont		inuity		
Wait detection		I	No continuity	/	Continuity	EM
switch	10 - 11	(Note) ←				LC


NOTE:

When shifting from "4LO" to "4H", continuity exists while "Wait" function is operating. (No continuity exists when "Wait" function is canceled.)






AT

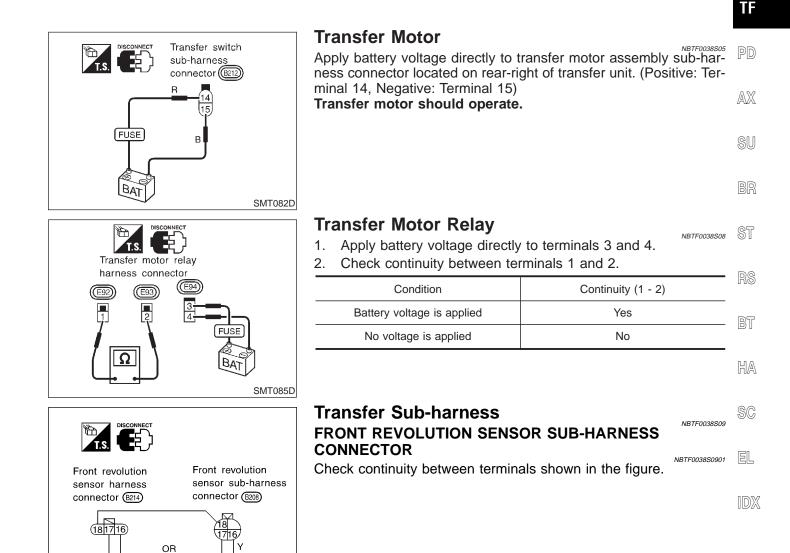

SMT086DB


Transfer Sub-harness (Cont'd)

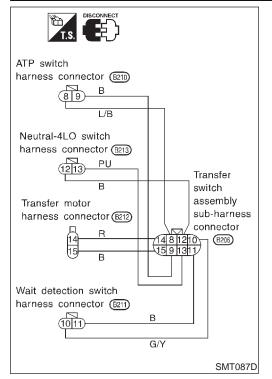

TRANSFER SWITCH ASSEMBLY SUB-HARNESS CONNECTOR

Check continuity between terminals shown in the figure.

NBTF0038S0902

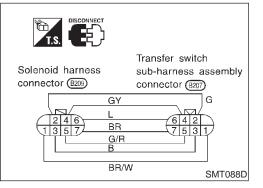


TRANSFER TERMINAL CORD ASSEMBLY SUB-HARNESS CONNECTOR

NBTF0038S0903

Check continuity between terminals shown in the figure. Terminals on solenoid valve

Terminals	Components
6	4WD solenoid valve
4, 5	2-4WD shift solenoid valve
2, 3	Transfer fluid temperature sensor
7	Clutch pressure switch
1	Line pressure switch

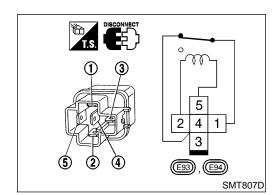

Transfer Shift Relay (High & low)


Check continuity between terminals 3 and 4.

NBTF0038S10

Condition	Continuity		
12V direct current supply between terminals 1 and 2	No		
No current supply	Yes		

COMPONENT INSPECTION

_

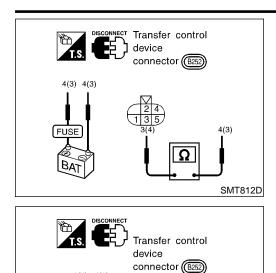

1 3 5

1(2)

Ω

5(5)

SMT838D

3(4) 4(3)

FUSE

Ć BAT

Actuator & Actuator Position Switch					
AC	TUATOR		NBTF0038S1 NBTF0038S110		
Ор	Operation & resistance check				
•	Apply battery voltage directly to actuator assembly.				
_	Operating check	Battery positive terminal	Battery negative terminal		

Operating check	Battery positive terminal	Battery negative terminal	IMIZA
1	4	3	ren a
2	3	4	EM
Check	Approx. 0.2Ω (When the motor is not operated.)		
			ЦU

ACTUATOR POSITION SWITCH Continuity check

Continuity check				
Continuity check	Battery positive terminal	Battery negative terminal	Continuity	FE
1	4	3	1 - 5	ГG
2	3	4	2 - 5	AT

TF

GI

MA

NBTF0038S1102

PD

AX

SU

BR

ST

RS

BT

HA

SC


EL

IDX

TF-115

Replacing Oil Seal

ON-VEHICLE SERVICE

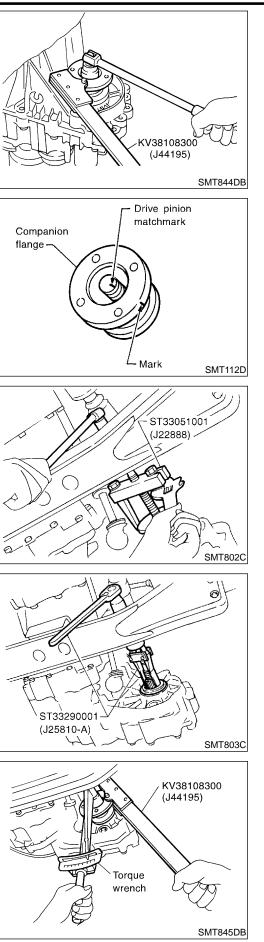

Replacing Oil Seal FRONT CASE OIL SEAL

NBTF0068 NBTF0068S01


- 1. Drain transfer fluid.
- 2. Remove exhaust front tube and heat insulator. Refer to "Removal", TF-119.
- 3. Remove front propeller shaft. Refer to PD-6, "Removal and Installation".
- 4. Remove companion flange lock nut.
- Do not reuse lock nut.
- 5. Put a matchmark on top of drive pinion thread. The mark should be in line with the mark on the companion flange.
- Always mark top of drive pinion screw using paint.

6. Remove companion flange.

- 7. Remove front case oil seal.
- 8. Install front case oil seal.
- Before installing, apply multi-purpose grease to seal lip.
- 9. Install companion flange.

- 10. Tighten nut to the specified torque. Refer to TF-121.
- 11. Install front propeller shaft.

ON-VEHICLE SERVICE

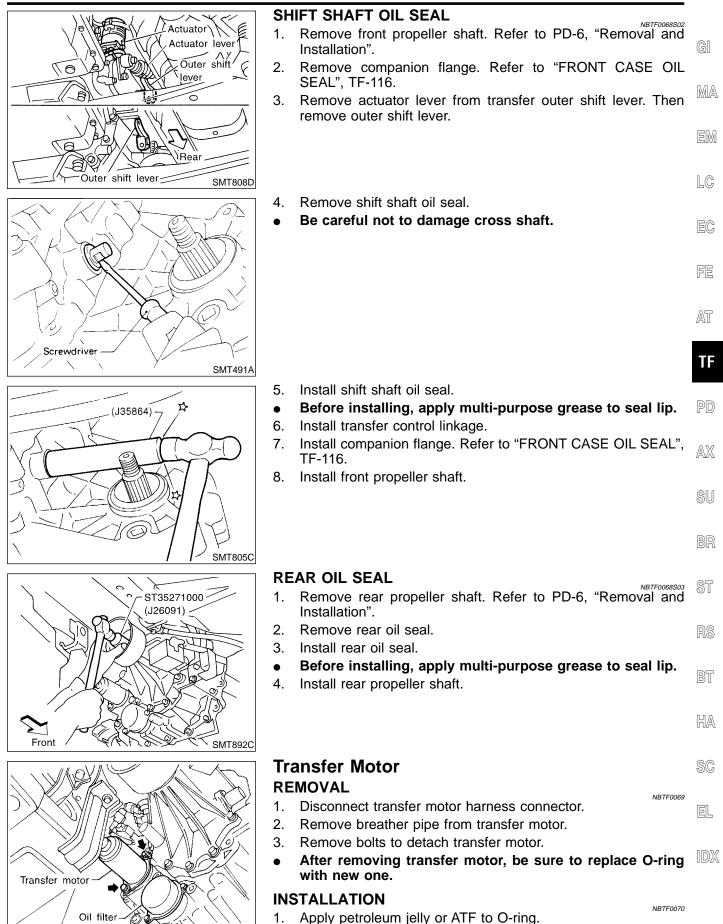


SMT874C

ON-VEHICLE SERVICE

- 2. Align width across flat-notch with oil pump groove, and install transfer motor.
- 3. Tighten bolts.

🖸 : 41 - 48 N·m (4.2 - 4.9 kg-m, 30 - 35 ft-lb)

- 4. Install breather pipe to transfer motor.
- 5. Connect transfer motor harness connector.

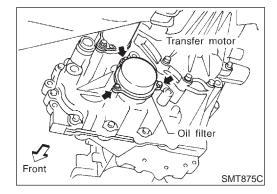

Transfer Oil Filter

REMOVAL

- Remove bolts to detach oil filter.
- When removing oil filter from transfer, avoid damaging it. Be sure to loosen bolts evenly.
- When removing oil filter, be sure to replace O-ring with new one.

INSTALLATION

2.

- 1. Apply petroleum jelly or ATF to O-ring.
 - Tighten bolts evenly to install oil filter.

() : 7 - 9 N·m (0.7 - 0.9 kg-m, 61 - 78 in-lb)

• Be sure not to damage oil filter.

NBTF0072

NBTF0071


REMOVAL AND INSTALLATION

	Removal	
0 0 1 Hel LAD He Exhaust bracket	Removal	
- Rear	1. Remove exhaust front and rear tubes. Refer to FE-8, "EXHAUST SYSTEM".	G]
	2. Remove front and rear propeller shaft. Refer to PD-6, "Removal and Installation".	MA
Exhaust rear tube to the tube	 Insert plug into rear oil seal after removing propeller shaft. Be careful not to damage spline, sleeve yoke and rear oil seal, when removing propeller shaft. 	EM
Front Exhaust front tube propeller shaft J SMT897C	 Disconnect neutral-4LO switch, front revolution sensor, ATP switch, transfer motor and 4WD shift switch harness connec- tors. 	LC
	 Remove center console and A/T control device. 	60
Actuator Actuator	 Remove center console and A/T control device. Remove floor panel for transfer. Remove upper side fixing bolt for A/T and TF. 	EC
Outer shift lever	 Remove actuator lever from transfer outer shift lever and remove sub-oil pump from transfer. 	FE
	9. Remove remaining fixing bolt for AT and TF.	
		AT
Outer shift leverSMT808D		TF
	10. Remove transfer from transmission. WARNING: Support transfer while removing it.	PD
		AX
		SU
Transmission jack		BR
Transfer assembly		ST
		RS
		BT
Automatic transmission assembly		HA
SMT871C	Installation	SC
	 Tighten bolts securing transfer. Bolt length: 45 mm (1.77 in) 	EL
	Tightening torque: ☑ : 31 - 42 N⋅m (3.2 - 4.3 kg-m, 23 - 31 ft-lb)	IDX
So o our		

● : Transfer → Automatic transmission
 ⊗ : Automatic transmission → Transfer SMT872C

OVERHAUL

Transfer Gear Control

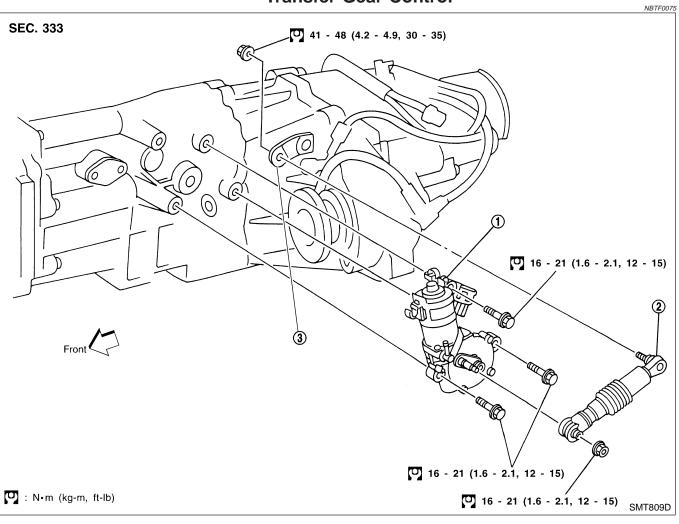


1. Actuator

2. Actuator lever

3. Outer shift lever

OVERHAUL

Transfer Components

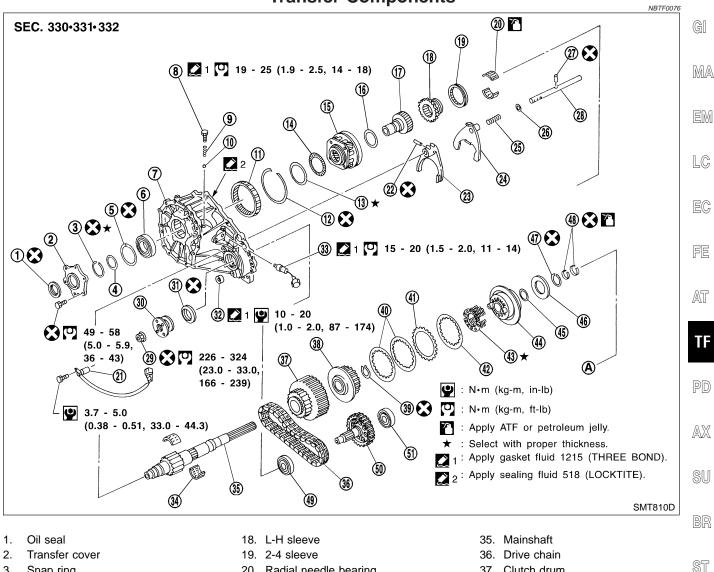

- 3. Snap ring
- Washer 4.
- 5. Snap ring
- 6. Main gear bearing
- 7. Front case
- Check plug 8. Check spring
- 9. 10. Check ball
- 11. Internal gear
- 12. Snap ring
- 13. Bearing race
- 14. Thrust needle bearing
- 15. Planetary carrier
- 16. Thrust needle bearing
- 17. Sun gear

- 20. Radial needle bearing
- 21. Front revolution sensor
- 22. Roll pin
- 23. L-H fork
- 24. 2-4 fork
- 25. Shift fork spring
- 26. Fork guide
- 27. Roll pin
- 28. Shift rod
- 29. Self-lock nut
- 30. Companion flange
- 31. Oil seal
- 32. Drain plug
- 33. Wait detection switch

34. Needle bearing

- 37. Clutch drum Clutch hub 38. Snap ring 39. 40. Driven plate 41. Drive plate 42. Retaining plate
- BT Return spring assembly 43. 44. Press flange
- 45. Washer HA 46. Thrust needle bearing
- 47. Snap ring
- 48. Seal ring 49. Front bearing
- 50. Front drive shaft
- 51. Rear bearing


SC

EL

TF-121

OVERHAUL


Transfer Components (Cont'd)

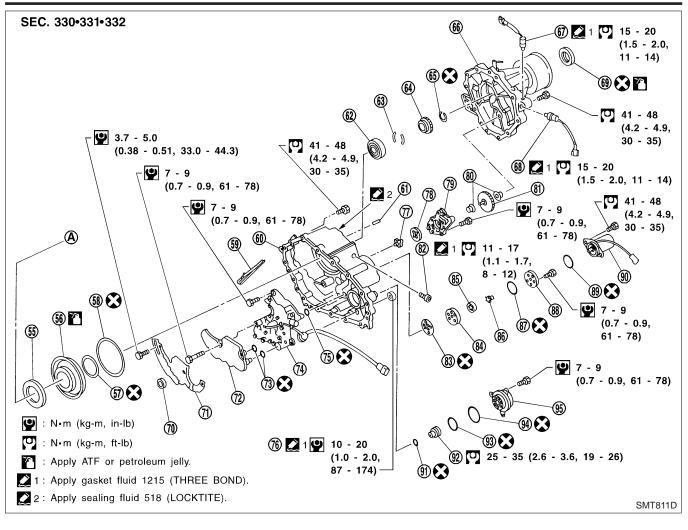

- 55. Thrust needle bearing race
- 56. Clutch piston
- 57. D-ring
- 58. Lip seal
- 59. Oil gutter
- 60. Center case
- 61. Stem bleeder
- 62. Mainshaft rear bearing
- 63. Thrust washer
- 64. Speedometer drive gear
- 65. Snap ring
- 66. Rear case
- 67. ATP switch
- 68. Neutral-4LO switch

- 69. Oil seal
- 70. Magnet
- 71. Baffle plate
- 72. Oil strainer
- 73. O-ring
- 74. Control valve assembly
- 75. Lip seal (7 pieces)
- 76. Filler plug
- 77. Inner gear
- 78. Outer gear
- 79. Oil pump housing
- 80. Bushing
- 81. Oil pump shaft
- 82. Oil pressure check plug

- 83. Oil pump gasket
- 84. Sub-oil pump housing
- 85. Outer gear
- 86. Inner gear
- 87. O-ring
- 88. Sub-oil pump cover
- 89. O-ring
- 90. Transfer motor
- 91. O-ring
- 92. Oil filter stud
- 93. O-ring
- 94. O-ring
- 95. Oil filter

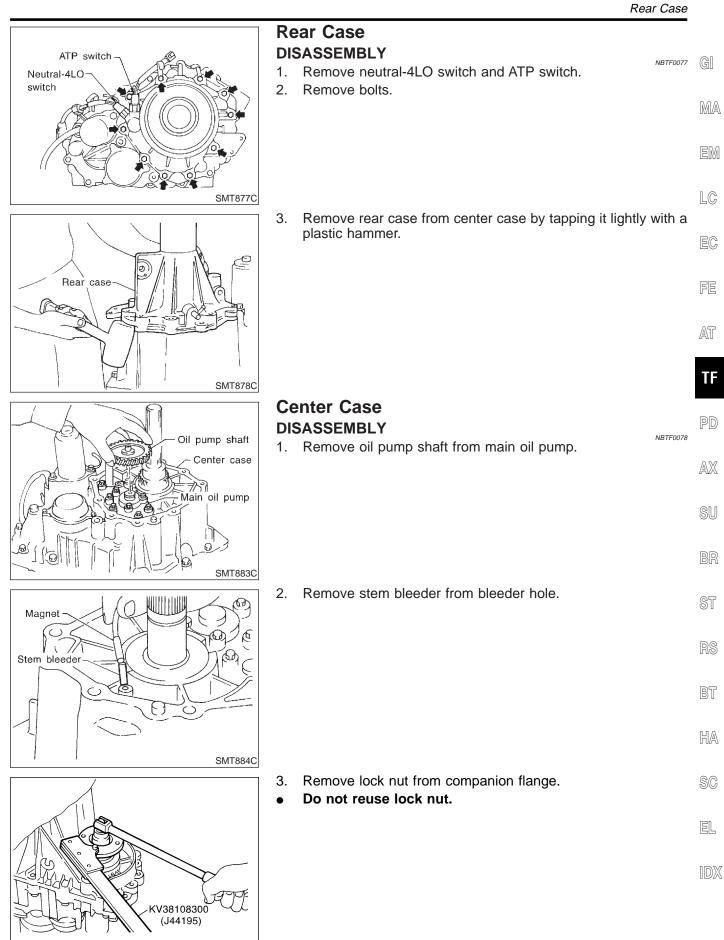


TF-123

SMT844DB

Center Case (Cont'd)

€

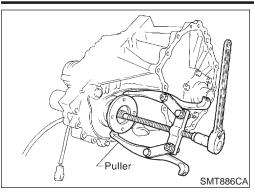

4. Remove companion flange.


5. Remove bolts.

- ляти выложности в литерии и отранование и отра И отранование и
- SMT888C Mainshaft Snap ring Speedometer drive gear SMT889C
- SMT890C


6. Insert screwdrivers as shown in the figure, and separate center case from front case. Then, remove center case by levering it up with a tire lever or the like.

- 7. Remove snap ring from mainshaft.
- Do not reuse snap ring.

8. Remove C-rings from mainshaft bearing.

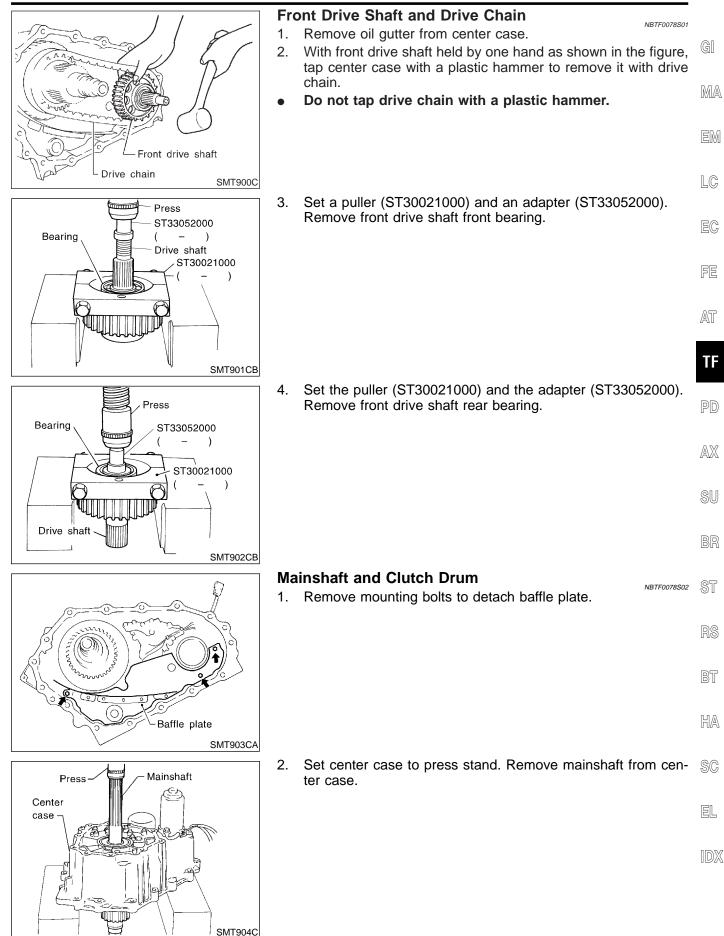

Center Case (Cont'd)

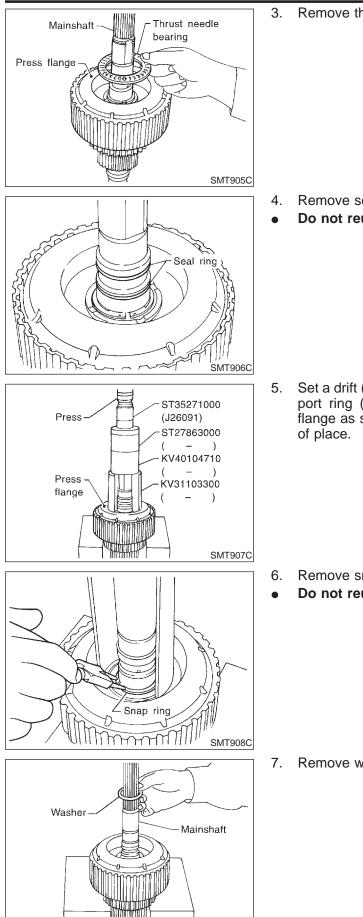

Remove thrust needle bearing from press flange.


- Remove seal ring from mainshaft.
- Do not reuse seal ring.

Set a drift (KV31103300), a support ring (KV40104710), a support ring (ST27863000) and a drift (ST35271000) to press flange as shown in the figure. Press drift until snap ring is out

- Remove snap ring from mainshaft.
- Do not reuse snap ring.

Remove washer.

SMT909C

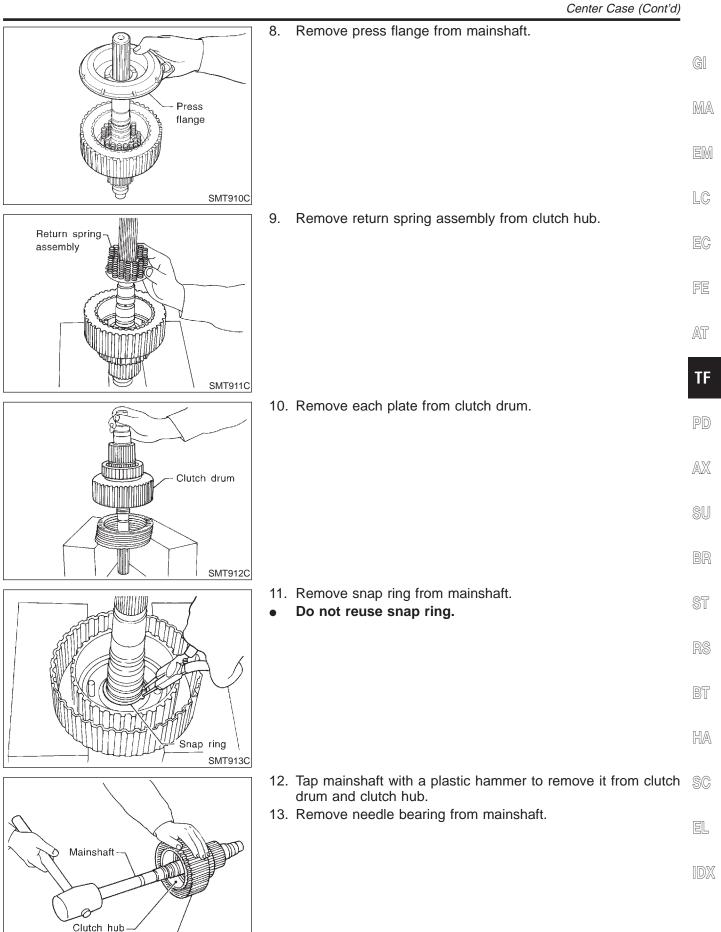


Clutch drum-

SMT914C

Center Case (Cont'd)



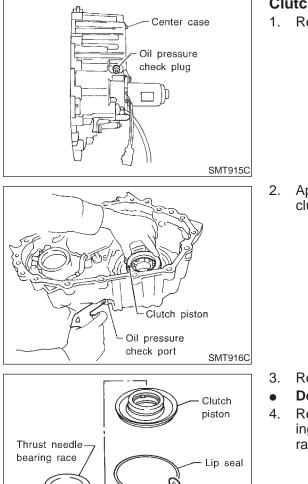

Clutch Piston

1. Remove oil pressure check plug from oil pressure check port.

2. Apply air gradually from oil pressure check port, and remove clutch piston from center case.

- 3. Remove lip seal and D-ring from clutch piston.
- Do not reuse lip seal and D-ring.
- 4. Remove thrust needle bearing race from clutch piston by hooking a screwdriver edge into 4 notches of thrust needle bearing race.

Control Valve CAUTION:

erro a

SMT917C

D-ring

NBTF0078S04

- Do not reuse any part that has been dropped or damaged.
- Make sure valve is assembled in the proper direction.
- Do not use a magnet because residual magnetism stays during disassembly.
- Oil strainer
- 1. Remove bolts, and detach oil strainer.


Center Case (Cont'd)


	2. •	Remove O-rings from oil strainer. Do not reuse O-rings.	
O-ring O-ring			GI
			MA
			EM
SMT919C	0		LC
	3.	Remove bolts for control valve.	EC
			FE
			AT
SMT920C			TF
	4.	Remove snap ring. Then push terminal assembly into center case to remove control valve assembly.	PD
			AX
Snap ring			SU
			BR
0 00	5. •	Remove lip seals from center case. Do not reuse lip seals.	ST
	•	There are two kinds of lip seals (lip seal of large inner diameter: 5 pieces, lip seal of small inner diameter: 2 pieces). Confirm the position before disassembly.	RS
Lip seal of small			BT
Lip seal of small inner diameter SMT922CA			HA
	6.	Remove all bolts except for two.	SC
			EL
			IDX
~018-0(-5)			

Ð

SMT923C

Center Case (Cont'd)

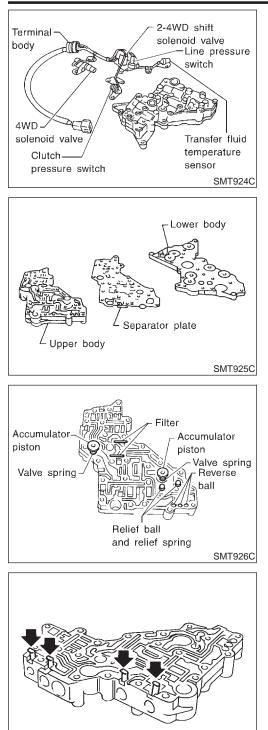

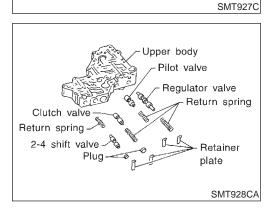

DISASSEMBLY


- 7. Remove 4WD solenoid valve, clutch pressure switch, 2-4WD shift solenoid valve, line pressure switch, and transfer fluid temperature sensor from control valve assembly.
- 8. Remove O-rings from each solenoid valve, switch and terminal body.
- Do not reuse O-rings.
- 9. Place control valve with lower body facing up, remove two mounting bolts, and then remove lower body and separator plate from upper body.

CAUTION:


- Be careful not to drop relief balls. Detach lower body carefully.
- Do not reuse separator plate.
- 10. Make sure reverse balls, relief balls and relief springs, accumulator pistons, valve springs, and filters are securely installed as shown in the figure, and remove them.

11. Remove retainer plates.

12. Remove each control valve, spring and plug.

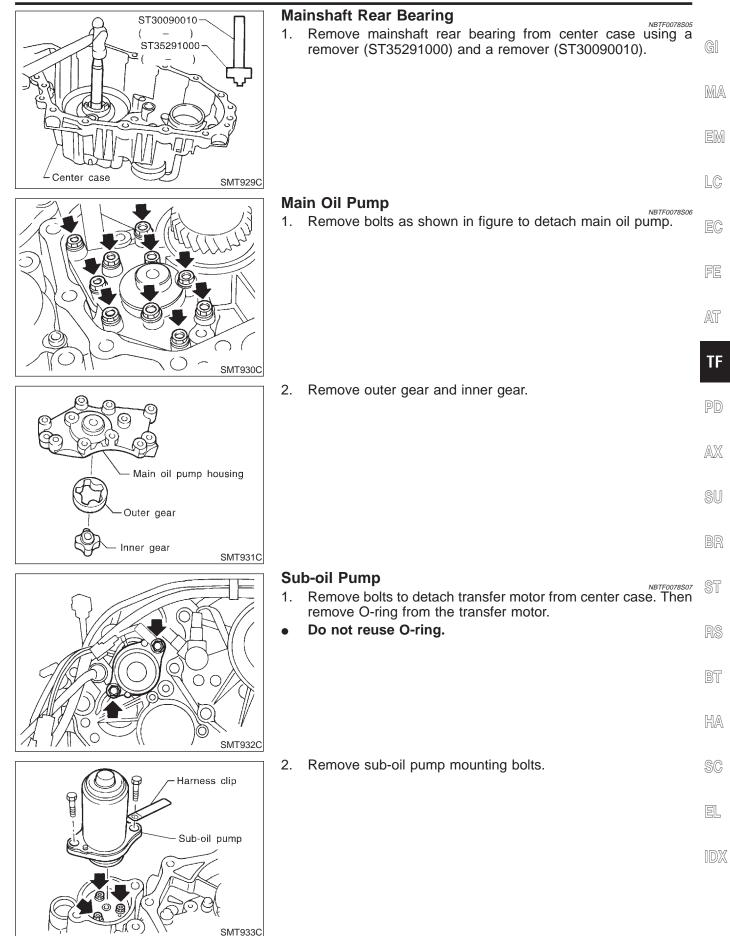

Center Case (Cont'd)

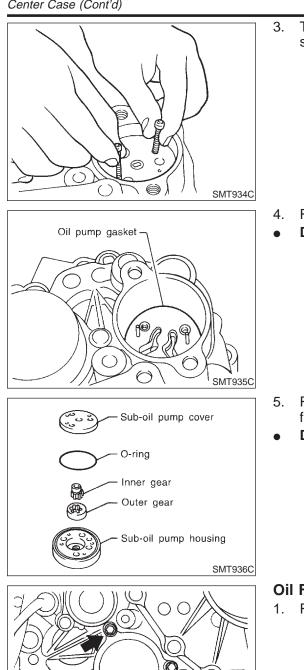


Thread two bolts (M4 x 0.8) into the holes of sub-oil pump as shown in the figure, and pull out to remove sub-oil pump.

- Remove oil pump gasket.
- Do not reuse gasket.

- Remove sub-oil pump cover, outer gear, inner gear and O-ring from sub-oil pump housing.
- Do not reuse O-ring.


^LOil filter SMT937C

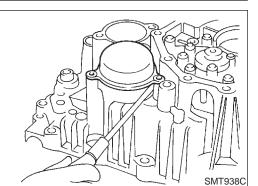


- **Oil Filter**
- Remove bolts for oil filter.


NBTF0078S08

2. Insert a screwdriver as shown in the figure to remove oil filter.



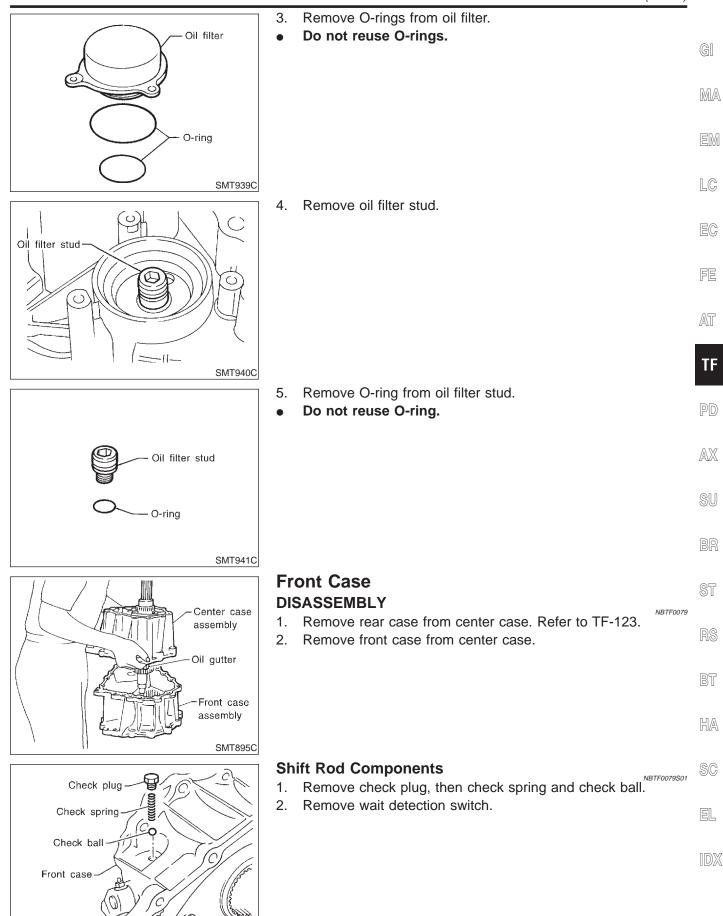

SMT990C

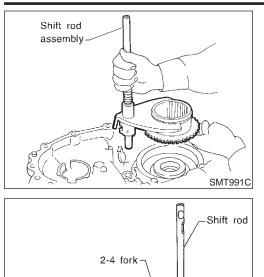

/ [] L-H fork

(–)

SMT992C

SMT993C

Shift rod

- Fork guide Shift fork spring

AND S

KV32101100

2-4 sleeve

L-H sleeve

Roll pin-

3. Remove shift rod components together with 2-4 sleeve and L-H sleeve.

4. Remove 2-4 sleeve and L-H sleeve from 2-4 fork and L-H fork respectively.


- 5. Drive out roll pin from shift rod.
- Do not reuse roll pin.


6. Remove L-H fork, 2-4 fork, shift fork spring and fork guide from shift rod.

NBTF0079S02

Planetary Carrier, Sun Gear and Internal Gear

1. Remove radial needle bearing from sun gear.

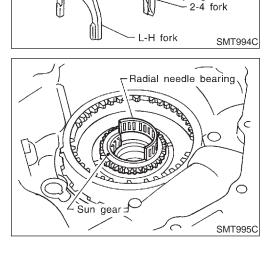

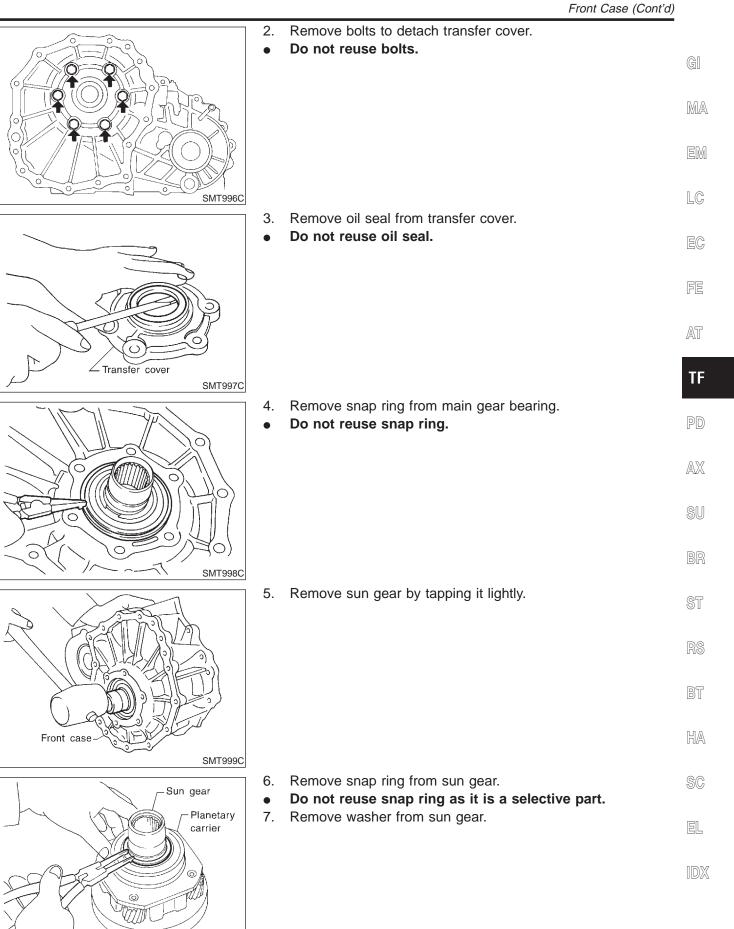

SMT001D


Front Case (Cont'd)


- Press ST33061000 (J8107-2) Sun gear Planetary carrier Main gear Thrust needle bearing bearing Bearing race Thrust needle bearing Planetary carrier ∠Sun gear SMT002DA
- Front case Plug bolt Resist spring Pin SMT003D

8. Set an adapter to sun gear as shown in the figure. Remove sun gear from planetary carrier. Remove main gear bearing, bearing race and thrust needle bearing (front and rear of planetary carrier) from sun gear.

9. Remove plug bolt, then remove resist spring and pin.

- 10. Remove snap ring, and remove internal gear.
- Do not reuse snap ring.

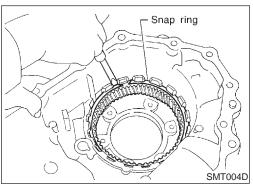

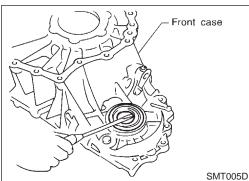


- 11. Remove front oil seal.
- Do not reuse oil seal.
- 12. Loosen nut of outer lever assembly to pull out cotter pin, and remove outer lever.
- 13. Remove inner lever assembly.

DEDAID FOR COMPONENT DADTS

KEFAIK	FOR COMPONENT PARTS	
Pinion gear Planetary carrier SMT006D	Front Case INSPECTION Planetary Carrier • Measure end play of each pinion gear, and make sure the measurement is within specification shown below. If out of specification, replace planetary carrier with new one. Pinion gear end play: 0.1 - 0.7 mm (0.004 - 0.028 in) • Check working face of each gear, bearing and others for damage, burrs, partial wear, dents and other abnormality. If any is found, replace planetary carrier with new one.	gi Ma Em Lc
		EC FE AT
Sun gear Pin Pin	 Sun Gear Check if oil passage of sun gear is clogged. For this, try to pass a 3.6 mm (0.142 in) dia. wire through oil passage as shown in the figure. Check sliding/contact surface of each gear, bearing and others for damage, burrs, partial wear, dents, and other abnormality. If any is found, replace sun gear with new one. 	TF PD AX SU
SMT007D	 Internal Gear Check internal gear teeth for damage, partial wear, dents and other abnormality. If any is found, replace internal gear with new one. 	BR ST RS
SMT008D	 Shift Rod Components Check working face of shift rod and fork for wear, partial wear, bending and other abnormality. If any is found, replace with new one. 	BT HA SC EL
2-4 fork		IDX

REPAIR FOR COMPONENT PARTS


Front Case (Cont'd)

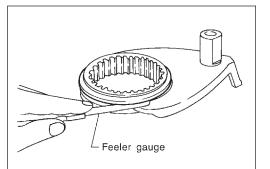

• Measure clearance between shift fork and sleeve. If it is out of specification, replace it with new one.

Standard value:

Less than 0.36 mm (0.0142 in)

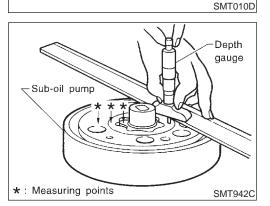

Center Case INSPECTION Sub-oil Pump


NBTF0081


- Check inner and outer circumference, tooth face, and sideface of inner and outer gears for damage or abnormal wear.
- 2. Measure side clearance between oil pump housing edge and inner gear/outer gear.
- 3. Make sure side clearance is within specification. If the measurement is out of specification, replace inner and outer gears together with new ones as a set.

Specification:

0.015 - 0.035 mm (0.0006 - 0.0014 in)

For inner gear and outer gear, refer to SDS, TF-157.

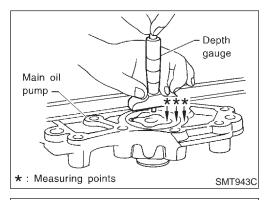

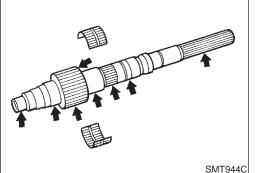

Main Oil Pump

- 1. Check inner and outer circumference, tooth face, and sideface of inner and outer gears for damage or abnormal wear.
- 2. Measure side clearance between oil pump housing edge and inner gear/outer gear.
- 3. Make sure side clearance is within specification. If the measurement is out of specification, replace inner and outer gears with new ones as a set.

Specification:

0.015 - 0.035 mm (0.0006 - 0.0014 in)

For inner gear and outer gear, refer to SDS, TF-157. Mainshaft

• Check surfaces which contact sun gear, clutch drum, clutch hub, press flange, clutch piston, each bearing, etc. for damage, peel, partial wear, dents, bending, or other abnormal damage. If any is found, replace with new one.


TF-138

REPAIR FOR COMPONENT PARTS

	Control Valve	
	 Check oil filter screen for damage. If any is found, replace with new one. 	GI MA
Oil filter		EM
SMT945C		LC
-2-4WD shift	• Check resistance between terminals of 4WD solenoid valve, 2-4WD shift solenoid valve and transfer fluid temperature sensor.	EC
4WD- solenoid	Resistance: Refer to "COMPONENT INSPECTION", TF-111.	FE
valve		AT
SMT946CA		TF
	• Check sliding faces of control valves and plugs for abnormal- ity. If any is found, replace the control valve assembly with new one.	PD
	CAUTION: Replace control valve body together with clutch return spring as a set.	AX
	Control valve:	SU
Overall length	Refer to SDS, TF-157.	BR
SMT947C		
Wire diameter	 Check each control valve spring for damage or distortion, and also check its free length, outer diameter and wire diameter. If any damage or fatigue is found, replace control valve body with new one. 	ST
Outer diameter	• Replace control valve body together with clutch return spring as a set.	RS
<u>g g g g g g g g g g g g g g g g g g g </u>	Inspection standard: Refer to SDS, TF-157.	BT
Free length		HA
SMT948C	Clutch	@@
	 Check drive plate and driven plate facings for damage, cracks or other abnormality. If any, replace with new one. 	SC
Facing	 Check the thickness of drive plate and driven plate facings. Inspection standard: 	EL
	Refer to SDS, TF-158.	IDX
	 CAUTION: Measure facing thickness at 3 points to take an average. 	
Core plate	Check all the drive and driven plates.	
SMT949C	Check return spring for damage or deformation.	

REPAIR FOR COMPONENT PARTS


Center Case (Cont'd)

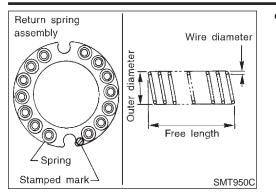

• Check stamped mark shown in the figure. Then, check that free length, outer diameter and wire diameter are within specifications. If any abnormality is found, replace with new return spring assembly of the same stamped number.

Inspection standard: Refer to SDS, TF-158.

ASSEMBLY

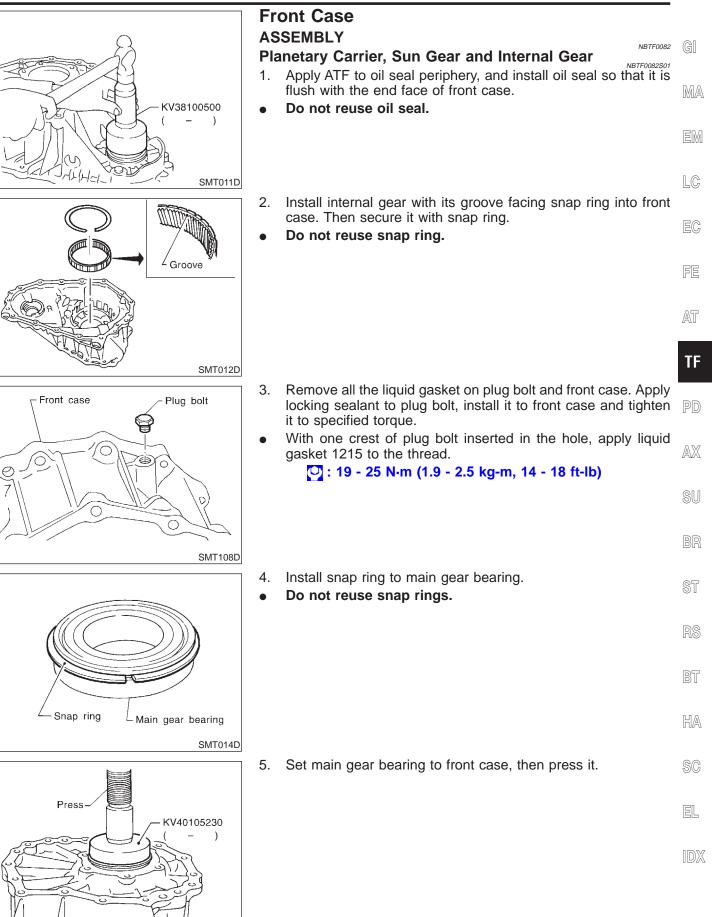

SMT015D

ASSEMBLY

Planetary carrier bearing Sun gear-SMT016D Thrust ST30911000 needle bearing \supset Planetary ∠_{KV40105500} carrier (_) SMT017D Thrust needle С D bearing *V//* Planetary_ carrier Sun gear-SMT018D

Thrust needle

- Bearing race
- КV40105230 (_ _) КV40105310 (_ _) КV40105310 (_ _) SMT020D

- 6. Install thrust needle bearing to sun gear.
- 7. Install sun gear to planetary carrier.


- 8. Set a support (KV40105500) to bushing replacer puller (ST30911000) as shown in the figure, and place planetary carrier on it.
- 9. Install thrust needle bearing to planetary carrier with its roller facing front case.
- 10. Measure "C" from the end of sun gear to the roller surface of thrust needle bearing.
- 11. Measure "D" from the end of sun gear to the main gear bearing contact surface.
- 12. Calculate end play "E" using "C" and "D" obtained in steps 10 and 11. Select bearing race so that the end play becomes the standard value.

Calculation formula: End play "E" = "C" - "D" Standard end play: 0.1 - 0.25 mm (0.0039 - 0.0098 in) Bearing race: Refer to SDS, TF-159.


13. Set planetary carrier to press in the status described in step 8. Then install the selected bearing race to planetary carrier.

14. Install front case to planetary carrier. Set a support ring (KV40105310) and an adapter B (KV40105230) to main gear bearing inner race, then press it.

ASSEMBLY

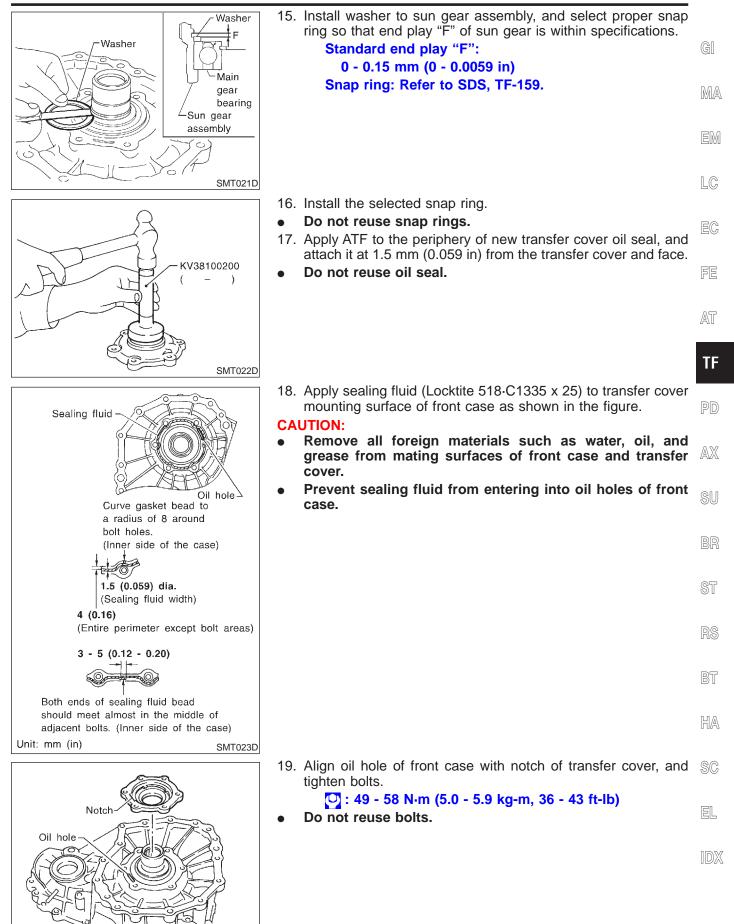

SMT024D

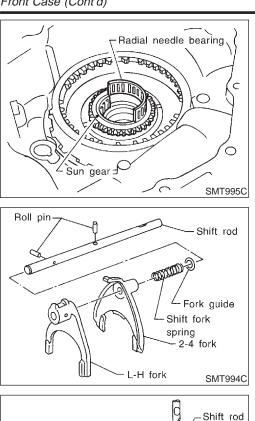



- 20. Apply petroleum jelly to radial needle bearing, and install it inside sun gear.
- 21. Install shift rod assembly to front case assembly. Refer to "Shift Rod Assembly", TF-144.
- 22. Install center case assembly to front case assembly. Refer to "Final Assembly", TF-153.
- 23. Install rear case assembly to center case. Refer to "Final Assembly", TF-153.


Shift Rod Assembly

- Install fork guide, shift fork spring, 2-4 fork, and L-H fork to shift 1. rod, and secure them with roll pins.
- Do not reuse roll pins.

Install 2-4 sleeve and L-H sleeve to each fork. 2.

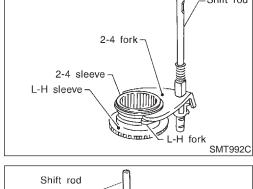

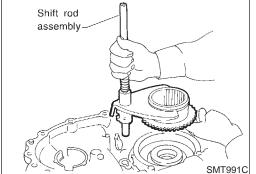

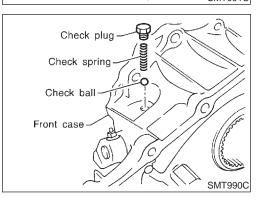

While aligning L-H sleeve with planetary carrier, install shift rod 3. assembly to front case.

- Remove all the liquid gasket on check plug and front case, and 4. install check ball and check spring to front case. Apply gasket fluid 1215 (Three Bond) to check plug, install it to front case, and tighten it to specified torque.
- With plug bolt threaded one pitch into the hole, apply gasket fluid 1215 (Three Bond) to the thread.

🖸 : 19 - 25 N·m (1.9 - 2.5 kg-m, 14 - 18 ft-lb)

5. Remove all the liquid gasket on the switch fitting and inner side of front case, and with wait detection switch threaded one pitch into the hole, apply gasket fluid 1215 (Three Bond) to the thread, install it, and tighten it to specified torque.

- 🖸 : 15 20 N·m (1.5 2.0 kg-m, 11 14 ft-lb)
- Wait detection switch harness connector is black.
- Install center case assembly to front case assembly. Refer to ^G
 "Final Assembly", TF-153.
- Install rear case assembly to center case. Refer to "Final Assembly", TF-153.


LC

Center Case ASSEMBLY EC Oil filter stud NBTF0083 **Oil Filter** O-ring NRTE0083SC Apply ATF or petroleum jelly to new O-ring, and install it to oil 1. filter stud. Do not reuse O-rings. • 2. Install oil filter stud to center case, and tighten it. AT [□]: 25 - 35 N·m (2.6 - 3.6 kg-m, 19 - 26 ft-lb) TF SMT951C Apply ATF or petroleum jelly to two new O-rings, and install 3. them to oil filter. Oil filter Do not reuse O-rings. • Install oil filter to center case and tighten bolts. 4. AX 🕑 : 7 - 9 N·m (0.7 - 0.9 kg-m, 61 - 78 in-lb) Do not knock oil filter with a tool such as a hammer. O-ring SMT939C Sub-oil Pump Oil pump gasket Install new oil pump gasket to center case by aligning it with 1. dowel pin inside the center case. Do not reuse gaskets. f® HA SMT935C 2. Install outer gear* and inner gear to sub-oil pump housing, and SC measure side clearance. Refer to "Sub-oil Pump", Sub-oil pump cover "INSPECTION", TF-138. 3. Set new O-ring to sub-oil pump housing, and install sub-oil EL O-ring pump cover. Inner dear Do not reuse O-rings. Identification mark "▼" is placed on the side of sub-oil pump Outer gear cover.

Sub-oil pump housing

SMT936C



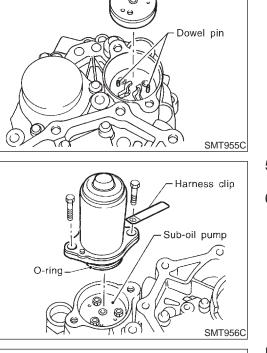


4. Align dowel pin hole and mounting bolt hole of sub-oil pump assembly with center case. Then tighten bolts.

- 5. Apply ATF or petroleum jelly to new O-ring and install it to transfer motor.
- 6. Fit double-flat end of transfer motor shaft into slot of sub-oil pump assembly. Then tighten bolts.

[◯] : 41 - 48 N·m (4.2 - 4.9 kg-m, 30 - 35 ft-lb)

Main Oil Pump

 Install inner gear and outer gear in the main oil pump housing with their identification marks facing toward center case mounting surface side. Then, measure the side clearance. Refer to "Main Oil Pump", "Center Case", TF-138.

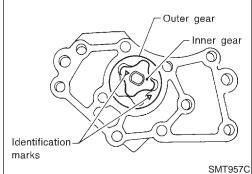


2. Install main oil pump assembly to center case assembly, and tighten bolts.

🔮 : 7 - 9 N·m (0.7 - 0.9 kg-m, 61 - 78 in-lb)

 Install oil pump shaft to main oil pump, then install rear case assembly to center case.
 Defer to "Final Assemble", TE 152

Refer to "Final Assembly", TF-153.

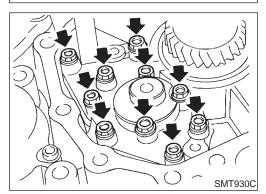

MA

LC

EC

AT

TF


AX

ST


HA

SC


EL

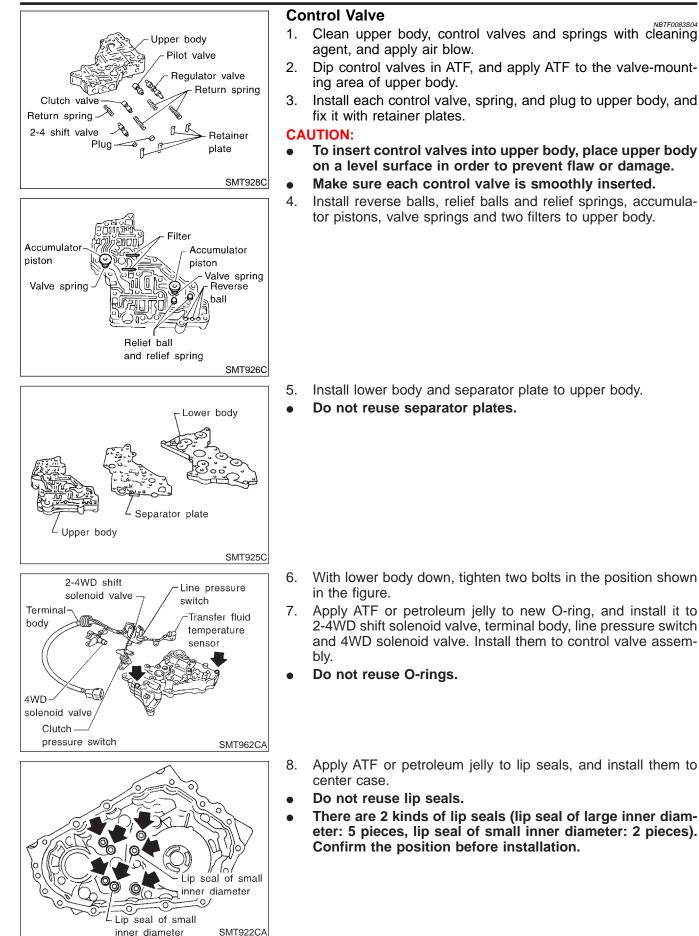



Center Case (Cont'd)

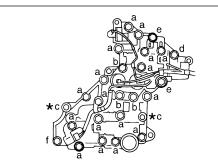


*: Oil strainer and through bolt SMT911D

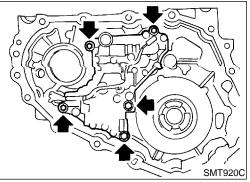

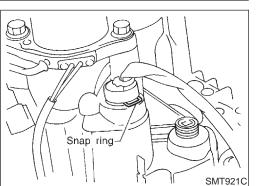

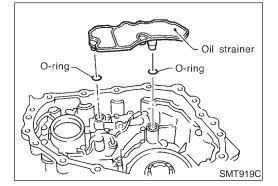

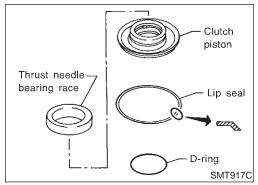

9. Install bolts as shown in the figure, and tighten them to specified torque.

Bolt symbol	а	b	*с	d	е	f
Length under head mm (in)	38 (1.50)	43.5 (1.713)	62 (2.44)	19 (0.75)	52 (2.05)	47 (1.85)
Q'ty	17	3	2	1	1	1
Tightening torque N·m (kg-m, in-lb)	6.9 - 8.8 (0.70 - 0.90, 61.1 - 77.9)					

*: Tighten with oil strainer.

10. Install control valve assembly to center case, and tighten bolts. : 6.9 - 8.8 N·m (0.70 - 0.90 kg-m, 61.1 - 77.9 in-lb)

11. Secure terminal body with snap ring.

12. Apply ATF or petroleum jelly to O-rings, and install them to oil strainer.


CAUTION:

Do not reuse snap ring.

- 13. Install oil strainer to control valve assembly.
- 14. Install mainshaft and clutch drum to center case. Refer to "Mainshaft and Clutch Drum", TF-149.
- 15. Install front case assembly and rear case assembly. Refer to "Final Assembly", TF-153.

Clutch Piston

 Apply ATF to D-ring and lip seal, and install them to clutch piston.

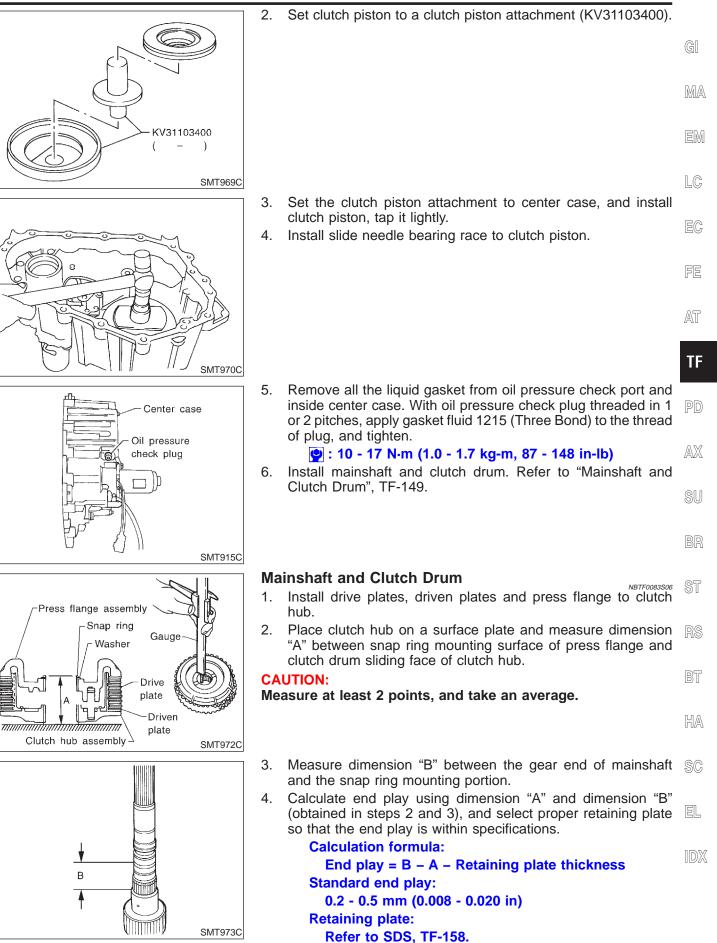

TF-149

Center Case (Cont'd)

i 3

Drive plate

Driven plate

Clutch drum

Return spring assembly

Mainshaft

Needle bearing

Clutch

hub

ASSEMBLY

- Snap ring

Clutch hub

Clutch

drum

SMT974C

Press flange

Retaining

SMT911C

SMT977C

SMT909C

Mainshaft

Press flange

IIII

Washer-

plate SMT975C

 \cap


- 5. Install clutch drum, needle bearing and clutch hub to mainshaft, and secure them with snap ring.
- Do not reuse snap ring.

6. Install each clutch to clutch drum.


7. Align the notch of return spring assembly with the pin of clutch hub, and install it.

8. Install press flange (with the holes indicated by arrows aligned with pins of clutch hub).

9. Install washer.

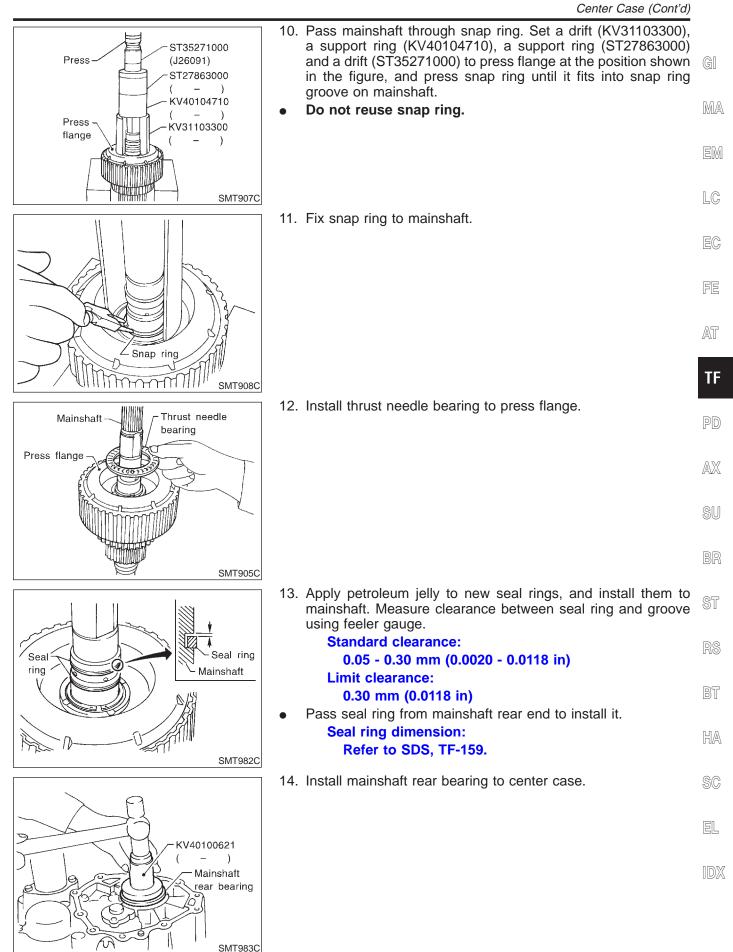

Center Case (Cont'd)

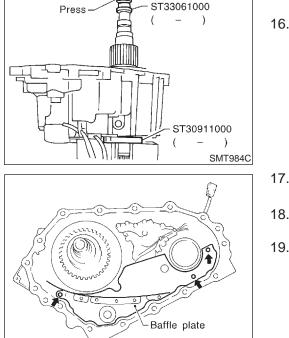

SMT903CA

KV40100621

(–) - ST30032000 (–)


- 15. Place puller (ST30911000) to mainshaft rear bearing inner race, and set it to press stand.
- 16. Place adapter (ST33061000) to the tip of mainshaft, and press mainshaft into center case.

- 18. Install front drive shaft and drive chain. Refer to "Front Drive Shaft and Drive Chain" below.
- 19. Install front case assembly and rear case assembly. Refer to "Final Assembly", TF-153.


Front Drive Shaft and Drive Chain

1. Place a base (ST30032000) to front drive shaft rear bearing inner race, and press it using a drift (KV40100621).


2. Place base (ST30032000) to front drive shaft front bearing inner race, and press it using the drift (KV40100621).

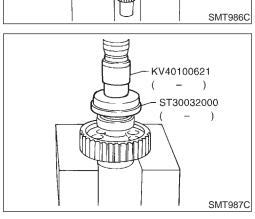

- 3. Install drive chain temporarily to front drive shaft and drive gear of clutch drum.
- 4. Tap front drive shaft with a plastic hammer while keeping it upright and press-fit front drive shaft rear bearing.
- Be careful not to tap drive chain with a hammer.

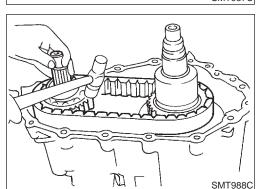

		Center Case (Cont'd)	
	5.	Align claw of oil gutter with center case, and install it.	
	5. 6.	Install front case assembly and rear case assembly. Refer to "Final Assembly", TF-153.	G]
Oil gutter			M/
Center case SMT989C			en LC
	Fin	nal Assembly	
Washer N 1 ()	1.	Install C-rings to mainshaft rear bearing.	EC FE
			AT
SMT891C			TF
Mainshaft	2.	speedometer drive gear properly on mainshaft, and secure it with snap ring.	PD
Snap ring Speedometer drive gear	•	Do not reuse snap ring.	AX
J C C C C C			SU BR
با را SMT889C			UN
Sealing fluid	3. CA	Apply sealing fluid 518 (Locktite) to the entire center case mounting surface of front case as shown in the figure.	ST
Front case		emove all foreign materials such as water, oil and grease om center case and front case mating surfaces.	RS
assembly - Curve gasket bead to			BT
a radius of 8 around bolt holes. (Inner side of the case)			HA
1.5 (0.059) dia. (Sealing fluid width)			SC
4 (0.16) (Entire perimeter except bolt areas)			EL
			ID)
Both ends of sealing fluid bead should meet almost in the middle of adjacent bolts. (Inner side of the case) Unit: mm (in) SMT893C			
Unit: mm (in) SMT893C			

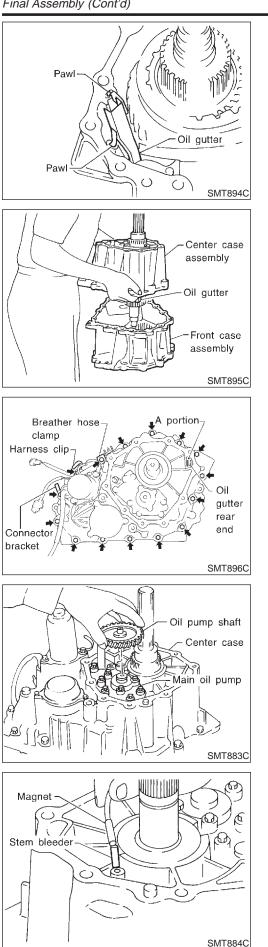

4. Make sure the two claws of oil gutter are securely attached to slots in center case.

5. With the claws of oil gutter held by a finger, install center case assembly to front case assembly.

CAUTION:


Pay careful attention so that mainshaft end does not damage radial needle bearing in sun gear assembly.

- Tap center case lightly with a rubber hammer or the like and 6. press-fit front drive shaft bearing into front case.
- Make sure oil gutter rear end protrudes from point "A" in the 7. figure.
- Tighten bolts to specified torque. 8.
 - [□]: 41 48 N⋅m (4.2 4.9 kg-m, 30 35 ft-lb)
- Be sure to install air breather hose clamp, connector bracket and harness clip.
- Fit double-flat end of oil pump shaft into slot of main oil pump 9. and install it.

NOTE:

When oil pump shaft is rotated slightly, it drops into position where both parts fit.

10. Install stem bleeder to center case.

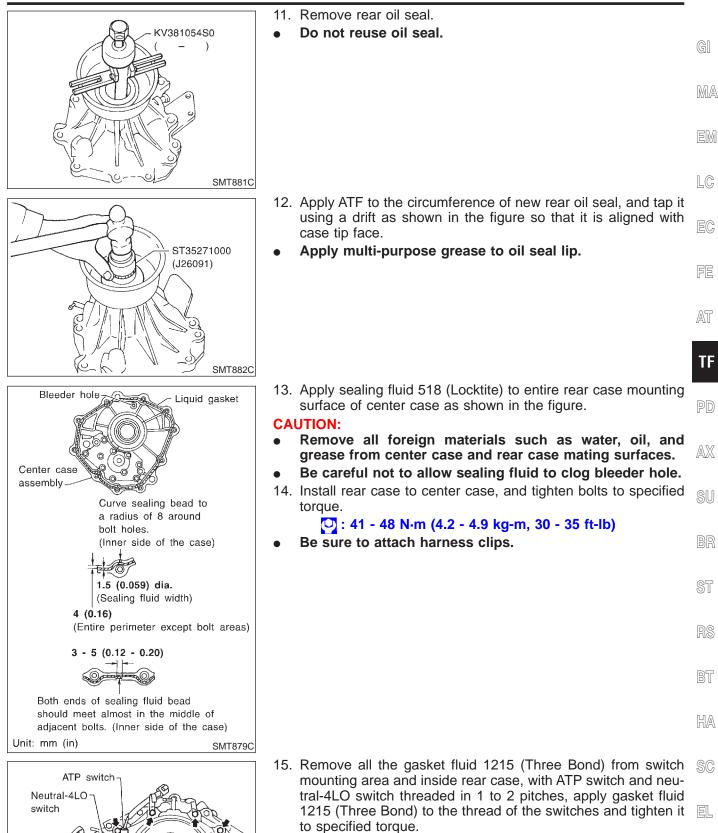


🖸 : 15 - 20 N·m (1.5 - 2.0 kg-m, 11 - 14 ft-lb)

16. Install rear case assembly to center case assembly.

SMT880C

Final Assembly (Cont'd)

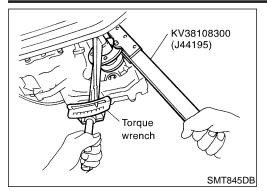

17. Install companion flange to front drive shaft, and tighten mounting nut.

🖸 🖸 : 226 - 324 N·m (23.0 - 33.0 kg-m, 166 - 239 ft-lb)

SERVICE DATA AND SPECIFICATIONS (SDS)

General Specifications

General Specifications

	U	eneral opecifica	10113	NBTF0085
Transfer model			ATX14A	GI
Gear ratio	High		1.000	
Gear Tallo	Low		2.596	MA
	Planetary gear	Sun gear	57	
		Internal gear	91	EM
Number of teeth	Front drive sprocket		35	
	Front drive shaft		35	LC
Fluid capacity ℓ (US qt, Imp qt)*		3.0 (3-1/8, 2-5/8)		

*: Refer to MA-11, "Fluids and Lubricants".

Inner Gear and Outer Gear

NBTF0086 NBTF0086501

EC

AX

NBTF0086S02

SUB-OIL PUMP

Allowable clearance	0.015 - 0.035 mm	(0.0006 - 0.0014 in)	
Coor this/mass mm (in)	Part	No.*	AT
Gear thickness mm (in)	Inner gear	Outer gear	
9.27 - 9.28 (0.3650 - 0.3654)	31346 0W462	31347 0W462	TF
9.28 - 9.29 (0.3654 - 0.3657)	31346 0W461	31347 0W461	
9.29 - 9.30 (0.3657 - 0.3661)	31346 0W460	31347 0W460	PD

*: Always check with the Parts Department for the latest parts information.

MAIN OIL PUMP

Allowable clearance	0.015 - 0.035 mm	(0.0006 - 0.0014 in)	SU
Coor thickness mm (in)	Part	No.*	00
Gear thickness mm (in)	Inner gear	Outer gear	BR
14.67 - 14.68 (0.5776 - 0.5780)	31346 0W412	31347 0W412	
14.68 - 14.69 (0.5780 - 0.5783)	31346 0W411	31347 0W411	ST
14.69 - 14.70 (0.5783 - 0.5787)	31346 0W410	31347 0W410	

*: Always check with the Parts Department for the latest parts information.

Control Valve

NBTF0087

HA

SC

EL

NBTF0087S02

VALVE NBTF0087S01 Mounting position Part name Part No.* Outer dia. mm (in) Overall length mm (in) L1 2-4 shift valve 31772 21X00 8.0 (0.315) 38.5 (1.516) L2 Clutch valve 31772 80X11 10.0 (0.394) 40.0 (1.575) L4 Pilot valve 31772 80X11 10.0 (0.394) 40.0 (1.575) L5 Regulator valve 31741 0W410 12.0 (0.472) 68.0 (2.677)

*: Always check with the Parts Department for the latest parts information.

SPRING

Mounting position	Part name	Part No.*	Free length mm (in)	Outer dia. mm (in)	Wire dia. mm (in)	Winding direction	
L1	2-4 shift valve spring	31742 0W400	31.85 (1.2539)	7.0 (0.276)	0.6 (0.024)	Clockwise	-

SERVICE DATA AND SPECIFICATIONS (SDS)

Control Valve (Cont'd)

Mounting position	Part name	Part No.*	Free length mm (in)	Outer dia. mm (in)	Wire dia. mm (in)	Winding direction
L2	Clutch valve spring	31742 0W405	40.6 (1.598)	9.0 (0.354)	0.8 (0.031)	Clockwise
L4	Pilot valve spring	31742 0W410	28.1 (1.106)	9.0 (0.354)	1.2 (0.047)	Clockwise
L5	Regulator valve spring	31742 0W415	39.7 (1.563)	11.0 (0.433)	1.3 (0.051)	Clockwise

*: Always check with the Parts Department for the latest parts information.

Clutch

DRIVE PLATE

Part No.*	Quantity	Initial thickness mm (in)	Limit value mm (in)		
31532 0W410	8	2.0 (0.079)	1.8 (0.071)		

*: Always check with the Parts Department for the latest parts information.

DRIVEN PLATE

			NB110000304
Part No.*	Quantity	Initial thickness mm (in)	Limit value mm (in)
31536 0W410	14	2.0 (0.079)	0 (0) (steel plate)

*: Always check with the Parts Department for the latest parts information.

RETURN SPRING

					NBTF0088S02
Stamped mark	Part No.*	Free length mm (in)	Outer dia. mm (in)	Wire dia. mm (in)	Winding direction
1	31521 0W401	37.3 (1.496)	_		
2	31521 0W402	37.8 (1.488)			
3	31521 0W403	38.4 (1.512)			
4	31521 0W404	38.9 (1.531)	12.0 (0.472)	1.8 (0.071)	Clashwing
5	31521 0W405	39.4 (1.551)	12.0 (0.472)		1.6 (0.071)
6	31521 0W406	40.0 (1.575)			
7	31521 0W407	36.8 (1.449)			
8	31521 0W408	40.5 (1.594)			

*: Always check with the Parts Department for the latest parts information.

RETAINING PLATE

		NBTF0088S03
Standard end play	0.2 - 0.5 mm (0	0.008 - 0.020 in)
Measured value mm (in)	Part No.*	Thickness mm (in)
2.30 - 2.50 (0.0906 - 0.0984)	31537 0W410	2.1 (0.083)
2.50 - 2.70 (0.0984 - 0.1063)	31537 0W411	2.3 (0.091)
2.70 - 2.90 (0.1063 - 0.1142)	31537 0W412	2.5 (0.098)
2.90 - 3.10 (0.1142 - 0.1220)	31537 0W413	2.7 (0.106)
3.10 - 3.30 (0.1220 - 0.1299)	31537 0W414	2.9 (0.114)
3.30 - 3.50 (0.1299 - 0.1378)	31537 0W415	3.1 (0.122)
3.50 - 3.70 (0.1378 - 0.1457)	31537 0W416	3.3 (0.130)
3.70 - 3.90 (0.1457 - 0.1535)	31537 0W417	3.5 (0.138)
3.90 - 4.10 (0.1535 - 0.1614)	31537 0W418	3.7 (0.146)
4.10 - 4.30 (0.1614 - 0.1693)	31537 0W419	3.9 (0.154)

NBTF0088

NBTF0088S02

NETENNOR

SERVICE DATA AND SPECIFICATIONS (SDS)

Clutch (Cont'd)

LC

AT

NBTF0089

NBTF0090

Standard end play	0.2 - 0.5 mm (0).008 - 0.020 in)	
Measured value mm (in)	Part No.*	Thickness mm (in)	GI
4.30 - 4.50 (0.1693 - 0.1772)	31537 0W420	4.1 (0.161)	
4.50 - 4.70 (0.1772 - 0.1850)	31537 0W421	4.3 (0.169)	MA
4.70 - 4.90 (0.1850 - 0.1929)	31537 0W422	4.5 (0.177)	
4.90 - 5.10 (0.1929 - 0.2008)	31537 0W423	4.7 (0.185)	EM

*: Always check with the Parts Department for the latest parts information.

Seal Ring (Mainshaft side)

Standard clearance Limit clearance	0.05 - 0.30 mm (0.0020 - 0.0118 in) 0.30 mm (0.0118 in)			
Part No.*	Outer dia. mm (in)	Inner dia. mm (in)	Thickness mm (in)	_
31525 0W410	40.8 (1.606)	36.9 (1.453)	1.97 (0.471)	FE

*: Always check with the Parts Department for the latest parts information.

Bearing Race (Thrust needle bearing side)

ndard end play	0.1 - 0.25 mm (0.1 - 0.25 mm (0.0039 - 0.0098 in)	
imension "E") mm (in)	Part No.*	Thickness mm (in)	
300 (0.0703 - 0.0709)	31439 0W410	1.6 (0.063)	
900 (0.0709 - 0.0748)	31439 0W411	1.7 (0.067)	- PD
000 (0.0748 - 0.0787)	31439 0W412	1.8 (0.071)	
100 (0.0787 - 0.0827)	31439 0W413	1.9 (0.075)	— AX
200 (0.0827 - 0.0866)	31439 0W414	2.0 (0.079)	
270 (0.0866 - 0.0894)	31439 0W415	2.1 (0.083)	– su

*: Always check with the Parts Department for the latest parts information.

Snap Ring (Sun gear side)

Standard end play	0 - 0.15 mm (0 - 0.0059 in)		ST
End play (Dimension "F") mm (in)	Part No.*	Thickness mm (in)	
2.40 - 2.50 (0.0945 - 0.0984)	33112 0W411	2.4 (0.094)	RS
2.50 - 2.60 (0.0984 - 0.1024)	33112 0W412	2.5 (0.098)	
2.60 - 2.70 (0.1024 - 0.1063)	33112 0W413	2.6 (0.102)	BT

*: Always check with the Parts Department for the latest parts information.

HA

BR

NBTF0091

SC

EL

IDX

NOTES