

ENGINE CONTROL SYSTEM

SECTION EC

GI
MA
EM
LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

CONTENTS

TROUBLE DIAGNOSIS - INDEX	8
Alphabetical & P No. Index for DTC	8
PRECAUTIONS	16
Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	16
Precautions for On Board Diagnostic (OBD) System of Engine and A/T	16
Engine Fuel & Emission Control System	17
Precautions	18
Wiring Diagrams and Trouble Diagnosis	19
PREPARATION	20
Special Service Tools	20
Commercial Service Tools	20
ENGINE AND EMISSION CONTROL OVERALL SYSTEM	22
Engine Control Component Parts Location	22
Circuit Diagram	26
System Diagram	27
Vacuum Hose Drawing	28
System Chart	29
ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION	30
Multiport Fuel Injection (MFI) System	30
Electronic Ignition (EI) System	32
Air Conditioning Cut Control	33
Fuel Cut Control (at no load & high engine speed)	34
Evaporative Emission System	34
On Board Refueling Vapor Recovery (ORVR)	40
Positive Crankcase Ventilation	49
BASIC SERVICE PROCEDURE	51
Fuel Pressure Release	51
Fuel Pressure Check	51
Fuel Pressure Regulator Check	52
Injector	53
How to Check Idle Speed and Ignition Timing	54
Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment	55
Idle Air Volume Learning	69
ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION	71
Introduction	71
Two Trip Detection Logic	71
Emission-related Diagnostic Information	72
Malfunction Indicator Lamp (MIL)	87
OBD System Operation Chart	91
CONSULT-II	96
Generic Scan Tool (GST)	110
TROUBLE DIAGNOSIS - INTRODUCTION	112
Introduction	112
Work Flow	114
TROUBLE DIAGNOSIS - BASIC INSPECTION	116
Basic Inspection	116
TROUBLE DIAGNOSIS - GENERAL DESCRIPTION	128
DTC Inspection Priority Chart	128
Fail-safe Chart	129
Symptom Matrix Chart	130
CONSULT-II Reference Value in Data Monitor Mode	134
Major Sensor Reference Graph in Data Monitor Mode	137
ECM Terminals and Reference Value	139
TROUBLE DIAGNOSIS - SPECIFICATION VALUE ..	148
Description	148
Testing Condition	148
Inspection Procedure	148
Diagnostic Procedure	149
TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT	152
Description	152
Diagnostic Procedure	152
TROUBLE DIAGNOSIS FOR POWER SUPPLY	153
ECM Terminals and Reference Value	153
Main Power Supply and Ground Circuit	154
DTC P0011, P0021 IVT CONTROL	162
Description	162

CONTENTS (Cont'd)

CONSULT-II Reference Value in Data Monitor Mode	162	On Board Diagnosis Logic.....	197
ECM Terminals and Reference Value	163	DTC Confirmation Procedure	197
On Board Diagnosis Logic.....	164	Wiring Diagram	198
DTC Confirmation Procedure	164	Diagnostic Procedure	199
DTC P0031, P0032, P0051, P0052 HO2S1 HEATER	166	DTC P0117, P0118 ECT SENSOR	201
Description	166	Component Description	201
CONSULT-II Reference Value in Data Monitor Mode	166	On Board Diagnosis Logic.....	201
ECM Terminals and Reference Value	166	DTC Confirmation Procedure	202
On Board Diagnosis Logic.....	167	Wiring Diagram	203
DTC Confirmation Procedure	167	Diagnostic Procedure	204
Wiring Diagram	169	DTC P0121 TP SENSOR	206
Diagnostic Procedure	171	Description	206
DTC P0037, P0038, P0057, P0058 HO2S2 HEATER	174	CONSULT-II Reference Value in Data Monitor Mode.....	206
Description	174	ECM Terminals and Reference Value	207
CONSULT-II Reference Value in Data Monitor Mode	174	On Board Diagnosis Logic.....	207
ECM Terminals and Reference Value	174	DTC Confirmation Procedure	207
On Board Diagnosis Logic.....	175	Wiring Diagram	211
DTC Confirmation Procedure	175	Diagnostic Procedure	212
Wiring Diagram	177	DTC P0122, P0123 TP SENSOR	217
Diagnostic Procedure	179	Description	217
DTC P0101 MAF SENSOR	182	CONSULT-II Reference Value in Data Monitor Mode	217
Component Description	182	ECM Terminals and Reference Value	218
CONSULT-II Reference Value in Data Monitor Mode	182	On Board Diagnosis Logic.....	218
ECM Terminals and Reference Value	182	DTC Confirmation Procedure	218
On Board Diagnosis Logic.....	183	Wiring Diagram	220
DTC Confirmation Procedure	183	Diagnostic Procedure	221
Overall Function Check	184	DTC P0125 ECT SENSOR	225
Wiring Diagram	185	Description	225
Diagnostic Procedure	186	On Board Diagnosis Logic.....	225
DTC P0102, P0103 MAF SENSOR	189	DTC Confirmation Procedure	226
Component Description	189	Diagnostic Procedure	226
CONSULT-II Reference Value in Data Monitor Mode	189	DTC P0127 IAT SENSOR	228
ECM Terminals and Reference Value	189	Component Description	228
On Board Diagnosis Logic.....	190	On Board Diagnosis Logic.....	228
DTC Confirmation Procedure	190	DTC Confirmation Procedure	228
Wiring Diagram	191	Diagnostic Procedure	229
Diagnostic Procedure	192	DTC P0132, P0152 HO2S1	230
DTC P0107, P0108 ABSOLUTE PRESSURE SENSOR	195	Component Description	230
Component Description	195	CONSULT-II Reference Value in Data Monitor Mode.....	230
On Board Diagnosis Logic.....	195	ECM Terminals and Reference Value	230
DTC Confirmation Procedure	195	On Board Diagnosis Logic.....	231
Diagnostic Procedure	196	DTC Confirmation Procedure	231
DTC P0112, P0113 IAT SENSOR	197	Wiring Diagram	233
Component Description	197	Diagnostic Procedure	235
		DTC P0133, P0153 HO2S1	239
		Component Description	239
		CONSULT-II Reference Value in Data Monitor Mode.....	239
		ECM Terminals and Reference Value	239

CONTENTS (Cont'd)

On Board Diagnosis Logic.....	240	Component Description	300	GI
DTC Confirmation Procedure	241	On Board Diagnosis Logic.....	300	
Overall Function Check	242	DTC Confirmation Procedure	300	MA
Wiring Diagram	243	Wiring Diagram	302	
Diagnostic Procedure	245	Diagnostic Procedure	303	
DTC P0134, P0154 HO2S1	252	DTC P0217 COOLANT OVERTEMPERATURE		EM
Component Description	252	ENRICHMENT PROTECTION	305	
CONSULT-II Reference Value in Data Monitor		On Board Diagnosis Logic.....	305	LC
Mode	252	Overall Function Check	305	
ECM Terminals and Reference Value	252	Diagnostic Procedure	307	
On Board Diagnosis Logic.....	253	Main 12 Causes of Overheating.....	310	
DTC Confirmation Procedure	254	DTC P0300 - P0306 MULTIPLE CYLINDER		EC
Overall Function Check	254	MISFIRE, NO. 1 - 6 CYLINDER MISFIRE	311	
Wiring Diagram	256	On Board Diagnosis Logic.....	311	FE
Diagnostic Procedure	258	DTC Confirmation Procedure	312	
DTC P0138, P0158 HO2S2	262	Diagnostic Procedure	313	AT
Component Description	262	DTC P0327, P0328 KS	320	
CONSULT-II Reference Value in Data Monitor		Component Description	320	TF
Mode	262	ECM Terminals and Reference Value	320	
ECM Terminals and Reference Value	262	On Board Diagnosis Logic.....	320	PD
On Board Diagnosis Logic.....	262	DTC Confirmation Procedure	320	
DTC Confirmation Procedure	263	Wiring Diagram	321	AX
Wiring Diagram	264	Diagnostic Procedure	322	
Diagnostic Procedure	266	DTC P0335 CKP SENSOR (POS)	325	
DTC P0139, P0159 HO2S2	271	Component Description	325	AX
Component Description	271	CONSULT-II Reference Value in Data Monitor		
CONSULT-II Reference Value in Data Monitor		Mode.....	325	SU
Mode	271	ECM Terminals and Reference Value	326	
ECM Terminals and Reference Value	271	On Board Diagnosis Logic.....	326	BR
On Board Diagnosis Logic.....	271	DTC Confirmation Procedure	327	
DTC Confirmation Procedure	272	Wiring Diagram	328	ST
Overall Function Check	272	Diagnostic Procedure	329	
Wiring Diagram	274	DTC P0340 CMP SENSOR	333	RS
Diagnostic Procedure	276	Component Description	333	
DTC P0171, P0174 FUEL INJECTION SYSTEM		ECM Terminals and Reference Value	333	BT
FUNCTION	282	On Board Diagnosis Logic.....	333	
On Board Diagnosis Logic.....	282	DTC Confirmation Procedure	334	HA
DTC Confirmation Procedure	282	Wiring Diagram	335	
Wiring Diagram	284	Diagnostic Procedure	336	SC
Diagnostic Procedure	286	DTC P0420, P0430 THREE WAY CATALYST		
DTC P0172, P0175 FUEL INJECTION SYSTEM		FUNCTION	338	
FUNCTION	290	On Board Diagnosis Logic.....	338	HA
On Board Diagnosis Logic.....	290	DTC Confirmation Procedure	338	
DTC Confirmation Procedure	290	Overall Function Check	339	SC
Wiring Diagram	292	Diagnostic Procedure	340	
Diagnostic Procedure	294	DTC P0441 EVAP CONTROL SYSTEM	343	
DTC P0181 FTT SENSOR	297	System Description.....	343	EL
Component Description	297	On Board Diagnosis Logic.....	343	
On Board Diagnosis Logic.....	297	DTC Confirmation Procedure	344	IDX
DTC Confirmation Procedure	297	Overall Function Check	344	
Diagnostic Procedure	298	Diagnostic Procedure	346	
DTC P0182, P0183 FTT SENSOR	300	DTC P0442 EVAP CONTROL SYSTEM	354	

CONTENTS (Cont'd)

On Board Diagnosis Logic.....	354	On Board Diagnostic Logic.....	428
DTC Confirmation Procedure	356	DTC Confirmation Procedure	428
Diagnostic Procedure	357	Wiring Diagram	429
DTC P0444, P0445 EVAP CANISTER PURGE		Diagnostic Procedure	430
VOLUME CONTROL SOLENOID VALVE	370	DTC P0461 FUEL LEVEL SENSOR	432
Description	370	Component Description	432
CONSULT-II Reference Value in Data Monitor		On Board Diagnostic Logic.....	432
Mode	370	Overall Function Check	432
ECM Terminals and Reference Value	371	DTC P0462, P0463 FUEL LEVEL SENSOR	434
On Board Diagnosis Logic.....	371	Component Description	434
DTC Confirmation Procedure	372	On Board Diagnostic Logic.....	434
Wiring Diagram	373	DTC Confirmation Procedure	434
Diagnostic Procedure	374	Wiring Diagram	435
DTC P0447 EVAP CANISTER VENT CONTROL		Diagnostic Procedure	436
VALVE	377	DTC P0500 VSS	438
Component Description	377	Component Description	438
CONSULT-II Reference Value in Data Monitor		ECM Terminals and Reference Value	438
Mode	377	On Board Diagnosis Logic.....	438
ECM Terminals and Reference Value	377	DTC Confirmation Procedure	439
On Board Diagnosis Logic.....	377	Overall Function Check	439
DTC Confirmation Procedure	378	Wiring Diagram	440
Wiring Diagram	379	Diagnostic Procedure	441
Diagnostic Procedure	380	DTC P0505 ISC SYSTEM	442
DTC P0452 EVAP SYSTEM PRESSURE SENSOR ..	384	Description	442
Component Description	384	CONSULT-II Reference Value in Data Monitor	
CONSULT-II Reference Value in Data Monitor		Mode	443
Mode	384	ECM Terminals and Reference Value	443
ECM Terminals and Reference Value	384	On Board Diagnosis Logic.....	443
On Board Diagnosis Logic.....	384	DTC Confirmation Procedure	443
DTC Confirmation Procedure	385	Wiring Diagram	445
Wiring Diagram	386	Diagnostic Procedure	446
Diagnostic Procedure	387	DTC P0506 ISC SYSTEM	449
DTC P0453 EVAP SYSTEM PRESSURE SENSOR ..	390	Description	449
Component Description	390	CONSULT-II Reference Value in Data Monitor	
CONSULT-II Reference Value in Data Monitor		Mode	450
Mode	390	ECM Terminals and Reference Value	450
ECM Terminals and Reference Value	390	On Board Diagnosis Logic.....	450
On Board Diagnosis Logic.....	391	DTC Confirmation Procedure	450
DTC Confirmation Procedure	391	Wiring Diagram	452
Wiring Diagram	392	Diagnostic Procedure	453
Diagnostic Procedure	393	DTC P0507 ISC SYSTEM	458
DTC P0455 EVAP CONTROL SYSTEM	399	Description	458
On Board Diagnosis Logic.....	399	CONSULT-II Reference Value in Data Monitor	
DTC Confirmation Procedure	400	Mode	459
Diagnostic Procedure	401	ECM Terminals and Reference Value	459
DTC P0456 EVAP CONTROL SYSTEM	412	On Board Diagnosis Logic.....	459
On Board Diagnosis Logic.....	412	DTC Confirmation Procedure	459
DTC Confirmation Procedure	414	Wiring Diagram	461
Overall Function Check	415	Diagnostic Procedure	462
Diagnostic Procedure	415	DTC P0510 CTP SENSOR	467
DTC P0460 FUEL LEVEL SENSOR	428	Component Description	467
Component Description	428		

CONTENTS (Cont'd)

CONSULT-II Reference Value in Data Monitor Mode.....	467	CONSULT-II Reference Value in Data Monitor Mode.....	515	GI
ECM Terminals and Reference Value	467	ECM Terminals and Reference Value	515	MA
On Board Diagnosis Logic.....	467	On Board Diagnosis Logic.....	515	EM
DTC Confirmation Procedure	468	DTC Confirmation Procedure	516	EM
Overall Function Check	468	Wiring Diagram.....	517	
Wiring Diagram	470	Diagnostic Procedure	518	
Diagnostic Procedure	471	DTC P1140, P1145 INTAKE VALVE TIMING CONTROL POSITION SENSOR	521	LC
DTC P0600 A/T CONTROL	475	Component Description	521	
System Description.....	475	CONSULT-II Reference Value in Data Monitor Mode.....	521	EC
ECM Terminals and Reference Value	475	ECM Terminals and Reference Value	522	
On Board Diagnosis Logic.....	475	On Board Diagnosis Logic.....	522	FE
DTC Confirmation Procedure	475	DTC Confirmation Procedure	523	
Wiring Diagram	476	Wiring Diagram	524	AT
Diagnostic Procedure	477	Diagnostic Procedure	526	
DTC P0605 ECM	478	DTC P1143, P1163 HO2S1	530	TF
Component Description	478	Component Description	530	
On Board Diagnosis Logic.....	478	CONSULT-II Reference Value in Data Monitor Mode.....	530	PD
DTC Confirmation Procedure	478	ECM Terminals and Reference Value	530	
Diagnostic Procedure	479	On Board Diagnosis Logic.....	531	AX
DTC P1102 MAF SENSOR	480	DTC Confirmation Procedure	531	
Component Description	480	Overall Function Check	532	AX
CONSULT-II Reference Value in Data Monitor Mode.....	480	Diagnostic Procedure	533	
ECM Terminals and Reference Value	480	DTC P1144, P1164 HO2S1	538	SU
On Board Diagnosis Logic.....	481	Component Description	538	BR
DTC Confirmation Procedure	481	CONSULT-II Reference Value in Data Monitor Mode.....	538	
Wiring Diagram	482	ECM Terminals and Reference Value	538	BR
Diagnostic Procedure	483	On Board Diagnosis Logic.....	539	
DTC P1111, P1136 IVT CONTROL SOLENOID VALVE	486	DTC Confirmation Procedure	539	ST
Component Description	486	Overall Function Check	540	
CONSULT-II Reference Value in Data Monitor Mode.....	486	Diagnostic Procedure	541	
ECM Terminals and Reference Value	486	DTC P1146, P1166 HO2S2	546	RS
On Board Diagnosis Logic.....	487	Component Description	546	
DTC Confirmation Procedure	487	CONSULT-II Reference Value in Data Monitor Mode.....	546	BT
Wiring Diagram	488	ECM Terminals and Reference Value	546	
Diagnostic Procedure	490	On Board Diagnosis Logic.....	546	HA
DTC P1130 SWIRL CONTROL VALVE CONTROL SOLENOID VALVE	492	DTC Confirmation Procedure	547	
Description	492	Overall Function Check	547	SC
CONSULT-II Reference Value in Data Monitor Mode.....	493	Wiring Diagram.....	549	
ECM Terminals and Reference Value	493	Diagnostic Procedure	551	
On Board Diagnosis Logic.....	494	DTC P1147, P1167 HO2S2	557	EL
DTC Confirmation Procedure	494	Component Description	557	
Wiring Diagram	496	CONSULT-II Reference Value in Data Monitor Mode.....	557	IDX
Diagnostic Procedure	497	ECM Terminals and Reference Value	557	
DTC P1131 SWIRL CONTROL VALVE CONTROL SOLENOID VALVE	515	On Board Diagnosis Logic.....	557	
Component Description	515	DTC Confirmation Procedure	558	

CONTENTS (Cont'd)

Overall Function Check	559	DTC P1446 EVAP CANISTER VENT CONTROL	
Wiring Diagram	560	VALVE	608
Diagnostic Procedure	562	Component Description	608
DTC P1148, P1168 CLOSED LOOP CONTROL	568	CONSULT-II Reference Value in Data Monitor	
On Board Diagnosis Logic.....	568	Mode	608
DTC Confirmation Procedure	568	ECM Terminals and Reference Value	608
Overall Function Check	569	On Board Diagnosis Logic.....	608
Diagnostic Procedure	569	DTC Confirmation Procedure	609
DTC P1165 SWIRL CONTROL VALVE CONTROL		Wiring Diagram	610
VACUUM CHECK SWITCH	570	Diagnostic Procedure	611
Component Description	570	DTC P1448 EVAP CANISTER VENT CONTROL	
CONSULT-II Reference Value in Data Monitor		VALVE	616
Mode	570	Component Description	616
ECM Terminals and Reference Value	570	CONSULT-II Reference Value in Data Monitor	
On Board Diagnosis Logic.....	571	Mode	616
DTC Confirmation Procedure	571	ECM Terminals and Reference Value	616
Wiring Diagram	572	On Board Diagnosis Logic.....	616
Diagnostic Procedure	573	DTC Confirmation Procedure	617
DTC P1217 ENGINE OVER TEMPERATURE	576	Overall Function Check	618
On Board Diagnosis Logic.....	576	Wiring Diagram	619
Overall Function Check	576	Diagnostic Procedure	620
Diagnostic Procedure	577	DTC P1456 EVAP CONTROL SYSTEM	625
Main 12 Causes of Overheating.....	580	On Board Diagnosis Logic.....	625
DTC P1335 CKP SENSOR	581	DTC Confirmation Procedure	627
Component Description	581	Overall Function Check	628
CONSULT-II Reference Value in Data Monitor		Diagnostic Procedure	628
Mode	581	DTC P1464 FUEL LEVEL SENSOR	641
ECM Terminals and Reference Value	581	Component Description	641
On Board Diagnosis Logic.....	582	On Board Diagnostic Logic.....	641
DTC Confirmation Procedure	582	DTC Confirmation Procedure	641
Wiring Diagram	583	Wiring Diagram	642
Diagnostic Procedure	584	Diagnostic Procedure	643
DTC P1336 CKP SENSOR (POS)	587	DTC P1490 VACUUM CUT VALVE BYPASS	
Component Description	587	VALVE	644
CONSULT-II Reference Value in Data Monitor		Description	644
Mode	587	CONSULT-II Reference Value in Data Monitor	
ECM Terminals and Reference Value	588	Mode	644
On Board Diagnosis Logic.....	588	ECM Terminals and Reference Value	644
DTC Confirmation Procedure	588	On Board Diagnosis Logic.....	645
Wiring Diagram	590	DTC Confirmation Procedure	645
Diagnostic Procedure	591	Wiring Diagram	646
DTC P1444 EVAP CANISTER PURGE VOLUME		Diagnostic Procedure	647
CONTROL SOLENOID VALVE	596	DTC P1491 VACUUM CUT VALVE BYPASS	
Description	596	VALVE	650
CONSULT-II Reference Value in Data Monitor		Description	650
Mode	596	CONSULT-II Reference Value in Data Monitor	
ECM Terminals and Reference Value	597	Mode	650
On Board Diagnosis Logic.....	597	ECM Terminals and Reference Value	650
DTC Confirmation Procedure	597	On Board Diagnosis Logic.....	651
Wiring Diagram	599	DTC Confirmation Procedure	651
Diagnostic Procedure	600	Overall Function Check	652
		Wiring Diagram	653

CONTENTS (Cont'd)

Diagnostic Procedure	654	
DTC P1605 A/T DIAGNOSIS COMMUNICATION		
LINE	662	
Component Description	662	
On Board Diagnosis Logic.....	662	
DTC Confirmation Procedure	662	
DTC P1706 PNP SWITCH	663	
Component Description	663	
CONSULT-II Reference Value in Data Monitor		
Mode	663	
ECM Terminals and Reference Value	663	
On Board Diagnosis Logic.....	663	
DTC Confirmation Procedure	664	
Overall Function Check	664	
Wiring Diagram	666	
Diagnostic Procedure	667	
VARIABLE INDUCTION AIR CONTROL SYSTEM		
(VIAS)	669	
Description	669	
ECM Terminals and Reference Value	670	
Wiring Diagram	671	
Diagnostic Procedure	672	
IGNITION SIGNAL	677	
Component Description	677	
ECM Terminals and Reference Value	677	
Wiring Diagram	678	
Diagnostic Procedure	681	
INJECTOR	687	
Component Description	687	
CONSULT-II Reference Value in Data Monitor		
Mode	687	
ECM Terminals and Reference Value	687	
Wiring Diagram	688	
Diagnostic Procedure	689	
START SIGNAL	692	
CONSULT-II Reference Value in Data Monitor		
Mode	692	
ECM Terminals and Reference Value	692	
Wiring Diagram	693	
Diagnostic Procedure	694	
FUEL PUMP	696	
System Description.....	696	GI
Component Description	696	
CONSULT-II Reference Value in Data Monitor		
Mode	696	MA
ECM Terminals and Reference Value	697	
Wiring Diagram	698	EM
Diagnostic Procedure	699	
POWER STEERING OIL PRESSURE SWITCH	705	
Component Description	705	LC
CONSULT-II Reference Value in Data Monitor		
Mode	705	
ECM Terminals and Reference Value	705	EC
Wiring Diagram	706	
Diagnostic Procedure	707	FE
REFRIGERANT PRESSURE SENSOR	710	
Description	710	
ECM Terminals and Reference Value	710	AT
Wiring Diagram	711	
Diagnostic Procedure	712	
ELECTRICAL LOAD SIGNAL	715	TF
ECM Terminals and Reference Value	715	
Wiring Diagram	716	PD
Diagnostic Procedure	717	
MIL & DATA LINK CONNECTORS	720	
Wiring Diagram	720	AX
SERVICE DATA AND SPECIFICATIONS (SDS)	721	
Fuel Pressure Regulator.....	721	
Idle Speed and Ignition Timing.....	721	SU
Mass Air Flow Sensor.....	721	
Engine Coolant Temperature Sensor	721	BR
Heated Oxygen Sensor 1 Heater	721	
Heated Oxygen Sensor 2 Heater	721	ST
Fuel Pump	721	
IACV-AAC Valve	721	
Injector	721	RS
Throttle Position Sensor	722	
Calculated Load Value.....	722	BT
Intake Air Temperature Sensor.....	722	
Crankshaft Position Sensor (REF)	722	HA
Fuel Tank Temperature Sensor	722	
Camshaft Position Sensor (PHASE)	722	SC
		EL
		IDX

TROUBLE DIAGNOSIS — INDEX

Alphabetical & P No. Index for DTC

Alphabetical & P No. Index for DTC

NBEC0001

NBEC0001S01

ALPHABETICAL INDEX FOR DTC

Items (CONSULT-II screen terms)	DTC*1		Reference page
	CONSULT-II GST*2	ECM*3	
Unable to access ECM	—	—	EC-129
A/T 1ST GR FNCTN	P0731	0731	AT-121
A/T 2ND GR FNCTN	P0732	0732	AT-127
A/T 3RD GR FNCTN	P0733	0733	AT-133
A/T 4TH GR FNCTN	P0734	0734	AT-139
A/T COMM LINE	P0600	0600	EC-475
A/T DIAG COMM LINE	P1605	1605	EC-662
A/T TCC S/V FNCTN	P0744	0744	AT-154
ABSL PRES SEN/CIRC	P0107	0107	EC-195
ABSL PRES SEN/CIRC	P0108	0108	EC-195
THRTL POS SEN/CIRC*5	P0121	0121	EC-206
ATF TEMP SEN/CIRC	P0710	0710	AT-106
CKP SEN (REF)/CIRC	P1335	1335	EC-581
CKP SENSOR (COG)	P1336	1336	EC-587
CKP SEN/CIRCUIT	P0335	0335	EC-325
CLOSED LOOP-B1	P1148	1148	EC-568
CLOSED LOOP-B2	P1168	1168	EC-568
CLOSED TP SW/CIRC	P0510	0510	EC-467
CMP SEN/CIRCUIT	P0340	0340	EC-333
CYL 1 MISFIRE	P0301	0301	EC-311
CYL 2 MISFIRE	P0302	0302	EC-311
CYL 3 MISFIRE	P0303	0303	EC-311
CYL 4 MISFIRE	P0304	0304	EC-311
CYL 5 MISFIRE	P0305	0305	EC-311
CYL 6 MISFIRE	P0306	0306	EC-311
ECM	P0605	0605	EC-478
ECT SEN/CIRC*5	P0117	0117	EC-201
ECT SEN/CIRC*5	P0118	0118	EC-201
ECT SENSOR*5	P0125	0125	EC-225
ENG OVER TEMP	P0217	0217	EC-305
ENG OVER TEMP	P1217	1217	EC-576
ENGINE SPEED SIG	P0725	0725	AT-117
EVAP VERY SML LEAK	P0456	0456	EC-412
EVAP VERY SML LEAK	P1456	1456	EC-625

TROUBLE DIAGNOSIS — INDEX

Alphabetical & P No. Index for DTC (Cont'd)

Items (CONSULT-II screen terms)	DTC*1		Reference page	
	CONSULT-II GST*2	ECM*3		
EVAP GROSS LEAK	P0455	0455	EC-399	GI
EVAP PURG FLOW/MON	P0441	0441	EC-343	MA
EVAP SMALL LEAK	P0442	0442	EC-354	EM
EVAP SYS PRES SEN	P0452	0452	EC-384	
EVAP SYS PRES SEN	P0453	0453	EC-390	LC
FTT SEN/CIRCUIT	P0182	0182	EC-300	
FTT SEN/CIRCUIT	P0183	0183	EC-300	EC
FTT SENSOR	P0181	0181	EC-297	
FUEL LEV SEN SLOSH	P0460	0460	EC-428	FE
FUEL LEVEL SENSOR	P0461	0461	EC-432	
FUEL LEVL SEN/CIRC	P0462	0462	EC-434	AT
FUEL LEVL SEN/CIRC	P0463	0463	EC-434	
FUEL LEVL SEN/CIRC	P1464	1464	EC-641	TF
FUEL SYS-LEAN-B1	P0171	0171	EC-282	
FUEL SYS-LEAN-B2	P0174	0174	EC-282	PD
FUEL SYS-RICH-B1	P0172	0172	EC-290	
FUEL SYS-RICH-B2	P0175	0175	EC-290	AX
HO2S1 (B1)	P0132	0132	EC-230	
HO2S1 (B1)	P0133	0133	EC-239	SU
HO2S1 (B1)	P0134	0134	EC-252	
HO2S1 (B1)	P1143	1143	EC-530	BR
HO2S1 (B1)	P1144	1144	EC-538	ST
HO2S1 (B2)	P0152	0152	EC-230	
HO2S1 (B2)	P0153	0153	EC-239	RS
HO2S1 (B2)	P0154	0154	EC-252	
HO2S1 (B2)	P1163	1163	EC-530	BT
HO2S1 (B2)	P1164	1164	EC-538	
HO2S1 HTR (B1)	P0031	0031	EC-166	HA
HO2S1 HTR (B1)	P0032	0032	EC-166	
HO2S1 HTR (B2)	P0051	0051	EC-166	SC
HO2S1 HTR (B2)	P0052	0052	EC-166	
HO2S2 (B1)	P0138	0138	EC-262	EL
HO2S2 (B1)	P0139	0139	EC-271	
HO2S2 (B1)	P1146	1146	EC-546	IDX
HO2S2 (B1)	P1147	1147	EC-557	
HO2S2 (B2)	P0158	0158	EC-262	

TROUBLE DIAGNOSIS — INDEX

Alphabetical & P No. Index for DTC (Cont'd)

Items (CONSULT-II screen terms)	DTC*1		Reference page
	CONSULT-II GST*2	ECM*3	
HO2S2 (B2)	P0159	0159	EC-271
HO2S2 (B2)	P1166	1166	EC-546
HO2S2 (B2)	P1167	1167	EC-557
HO2S2 HTR (B1)	P0037	0037	EC-174
HO2S2 HTR (B1)	P0038	0038	EC-174
HO2S2 HTR (B2)	P0057	0057	EC-174
HO2S2 HTR (B2)	P0058	0058	EC-174
IAT SEN/CIRCUIT*6	P0112	0112	EC-197
IAT SEN/CIRCUIT*6	P0113	0113	EC-197
IAT SENSOR	P0127	0127	EC-228
INT/V TIM CONT-B1	P0011	0011	EC-162
INT/V TIM CONT-B2	P0021	0021	EC-162
INT/V TIM V/CIR-B1	P1111	1111	EC-486
INT/V TIM V/CIR-B2	P1136	1136	EC-486
INTK TIM S/CIRC-B1	P1140	1140	EC-521
INTK TIM S/CIRC-B2	P1145	1145	EC-521
ISC SYSTEM	P0506	0506	EC-449
ISC SYSTEM	P0507	0507	EC-458
ISC SYSTEM/CIRC	P0505	0505	EC-442
KNOCK SEN/CIRC-B1	P0328*2	0328	EC-320
KNOCK SEN/CIRC-B1	P0327*2	0327	EC-320
L/PRESS SOL/CIRC	P0745	0745	AT-162
MAF SEN/CIRCUIT*5	P0101	0101	EC-182
MAF SEN/CIRCUIT*5	P0102	0102	EC-189
MAF SEN/CIRCUIT*5	P0103	0103	EC-189
MAF SENSOR*5	P1102	1102	EC-480
MULTI CYL MISFIRE	P0300	0300	EC-311
NATS MALFUNCTION	P1610-P1615	1610-1615	EL-499
NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.	No DTC	Flashing*4	EC-88
NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.	P0000	0000	—
O/R CLTCH SOL/CIRC	P1760	1760	AT-185
P-N POS SW/CIRCUIT	P1706	1706	EC-663
PNP SW/CIRC	P0705	0705	AT-100
PURG VOLUME CONT/V	P0444	0444	EC-370

TROUBLE DIAGNOSIS — INDEX

Alphabetical & P No. Index for DTC (Cont'd)

Items (CONSULT-II screen terms)	DTC*1		Reference page	
	CONSULT-II GST*2	ECM*3		
PURG VOLUME CONT/V	P0445	0445	EC-370	GI
PURG VOLUME CONT/V	P1444	1444	EC-596	MA
SFT SOL A/CIRC*5	P0750	0750	AT-168	EM
SFT SOL B/CIRC*5	P0755	0755	AT-172	
SWIRL CONT SOL/V	P1130	1130	EC-492	LC
SWIRL CONT SOL/V	P1131	1131	EC-515	
SWL CON VC SW/CIRC	P1165	1165	EC-570	EC
TCC SOLENOID/CIRC	P0740	0740	AT-149	
TP SEN/CIRC A/T*5	P1705	1705	AT-176	FE
TP SEN/CIRCUIT*5	P0122	0122	EC-217	
TP SEN/CIRCUIT*5	P0123	0123	EC-217	AT
TW CATALYST SYS-B1	P0420	0420	EC-338	
TW CATALYST SYS-B2	P0430	0430	EC-338	TF
VC/V BYPASS/V	P1490	1490	EC-644	
VC CUT/V BYPASS/V	P1491	1491	EC-650	PD
VEH SPD SEN/CIR AT*6	P0720	0720	AT-112	
VEH SPEED SEN/CIRC*6	P0500	0500	EC-438	AX
VENT CONTROL VALVE	P0447	0447	EC-377	
VENT CONTROL VALVE	P1446	1446	EC-608	SU
VENT CONTROL VALVE	P1448	1448	EC-616	BR

*1: 1st trip DTC No. is the same as DTC No.

*2: These numbers are prescribed by SAE J2012.

*3: In Diagnostic Test Mode II (Self-diagnostic results), these numbers are controlled by NISSAN.

*4: When engine is running.

*5: When the fail-safe operation occurs, the MIL illuminates.

*6: When fail-safe operations for both self-diagnoses occur at the same time, the MIL illuminates.

NOTE:

- Regarding R50 models, “-B1” indicates bank 1 and “-B2” indicates bank 2.
- Bank 1 (-B1) includes No. 1 cylinder.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

TROUBLE DIAGNOSIS — INDEX

Alphabetical & P No. Index for DTC (Cont'd)

P NO. INDEX FOR DTC

=NBEC0001S02

DTC*1		Items (CONSULT-II screen terms)	Reference page
CONSULT-II GST*2	ECM*3		
—	—	Unable to access ECM	EC-129
No DTC	Flashing*4	NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.	EC-88
P0000	0000	NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.	—
P0011	0011	INT/V TIM CONT-B1	EC-162
P0021	0021	INT/V TIM CONT-B2	EC-162
P0031	0031	HO2S1 HTR (B1)	EC-166
P0032	0032	HO2S1 HTR (B1)	EC-166
P0037	0037	HO2S2 HTR (B1)	EC-174
P0038	0038	HO2S2 HTR (B1)	EC-174
P0051	0051	HO2S1 HTR (B2)	EC-166
P0052	0052	HO2S1 HTR (B2)	EC-166
P0057	0057	HO2S2 HTR (B2)	EC-174
P0058	0058	HO2S2 HTR (B2)	EC-174
P0101	0101	MAF SEN/CIRCUIT*5	EC-182
P0102	0102	MAF SEN/CIRCUIT*5	EC-189
P0103	0103	MAF SEN/CIRCUIT*5	EC-189
P0107	0107	ABSL PRES SEN/CIRC	EC-195
P0108	0108	ABSL PRES SEN/CIRC	EC-195
P0112	0112	IAT SEN/CIRCUIT*6	EC-197
P0113	0113	IAT SEN/CIRCUIT*6	EC-197
P0117	0117	ECT SEN/CIRC*5	EC-201
P0118	0118	ECT SEN/CIRC*5	EC-201
P0121	0121	THRTL POS SEN/CIRC*5	EC-206
P0122	0122	TP SEN/CIRCUIT*5	EC-217
P0123	0123	TP SEN/CIRCUIT*5	EC-217
P0125	0125	ECT SENSOR*5	EC-225
P0127	0127	IAT SENSOR	EC-228
P0132	0132	HO2S1 (B1)	EC-230
P0133	0133	HO2S1 (B1)	EC-239
P0134	0134	HO2S1 (B1)	EC-252
P0138	0138	HO2S2 (B1)	EC-262
P0139	0139	HO2S2 (B1)	EC-271
P0152	0152	HO2S1 (B2)	EC-230

TROUBLE DIAGNOSIS — INDEX

Alphabetical & P No. Index for DTC (Cont'd)

DTC*1		Items (CONSULT-II screen terms)	Reference page	
CONSULT-II GST*2	ECM*3			
P0153	0153	HO2S1 (B2)	EC-239	GI
P0154	0154	HO2S1 (B2)	EC-252	MA
P0158	0158	HO2S2 (B2)	EC-262	EM
P0159	0159	HO2S2 (B2)	EC-271	
P0171	0171	FUEL SYS-LEAN-B1	EC-282	LC
P0172	0172	FUEL SYS-RICH-B1	EC-290	
P0174	0174	FUEL SYS-LEAN-B2	EC-282	EC
P0175	0175	FUEL SYS-RICH-B2	EC-290	
P0181	0181	FTT SENSOR	EC-297	FE
P0182	0182	FTT SEN/CIRCUIT	EC-300	
P0183	0183	FTT SEN/CIRCUIT	EC-300	AT
P0217	0217	ENG OVER TEMP	EC-305	
P0300	0300	MULTI CYL MISFIRE	EC-311	TF
P0301	0301	CYL 1 MISFIRE	EC-311	
P0302	0302	CYL 2 MISFIRE	EC-311	PD
P0303	0303	CYL 3 MISFIRE	EC-311	
P0304	0304	CYL 4 MISFIRE	EC-311	AX
P0305	0305	CYL 5 MISFIRE	EC-311	
P0306	0306	CYL 6 MISFIRE	EC-311	SU
P0327	0327	KNOCK SEN/CIRC-B1	EC-320	BR
P0328	0328	KNOCK SEN/CIRC-B1	EC-320	
P0335	0335	CKP SEN/CIRCUIT	EC-325	ST
P0340	0340	CMP SEN/CIRCUIT	EC-333	
P0420	0420	TW CATALYST SYS-B1	EC-338	RS
P0430	0430	TW CATALYST SYS-B2	EC-338	
P0441	0441	EVAP PURG FLOW/MON	EC-343	BT
P0442	0442	EVAP SMALL LEAK	EC-354	
P0444	0444	PURG VOLUME CONT/V	EC-370	HA
P0445	0445	PURG VOLUME CONT/V	EC-370	
P0447	0447	VENT CONTROL VALVE	EC-377	SC
P0452	0452	EVAP SYS PRES SEN	EC-384	
P0453	0453	EVAP SYS PRES SEN	EC-390	EL
P0455	0455	EVAP GROSS LEAK	EC-399	
P0456	0456	EVAP VERY SML LEAK	EC-412	IDX
P0460	0460	FUEL LEV SEN SLOSH	EC-428	
P0461	0461	FUEL LEVEL SENSOR	EC-432	

TROUBLE DIAGNOSIS — INDEX

Alphabetical & P No. Index for DTC (Cont'd)

DTC*1		Items (CONSULT-II screen terms)	Reference page
CONSULT-II GST*2	ECM*3		
P0462	0462	FUEL LEVL SEN/CIRC	EC-434
P0463	0463	FUEL LEVL SEN/CIRC	EC-434
P0500	0500	VEH SPEED SEN/CIRC*6	EC-438
P0505	0505	ISC SYSTEM/CIRC	EC-442
P0506	0506	ISC SYSTEM	EC-449
P0507	0507	ISC SYSTEM	EC-458
P0510	0510	CLOSED TP SW/CIRC	EC-467
P0600*2	0600	A/T COMM LINE	EC-475
P0605	0605	ECM	EC-478
P0705	0705	PNP SW/CIRC	AT-100
P0710	0710	ATF TEMP SEN/CIRC	AT-106
P0720	0720	VEH SPD SEN/CIR AT*4	AT-112
P0725	0725	ENGINE SPEED SIG	AT-117
P0731	0731	A/T 1ST GR FNCTN	AT-121
P0732	0732	A/T 2ND GR FNCTN	AT-127
P0733	0733	A/T 3RD GR FNCTN	AT-133
P0734	0734	A/T 4TH GR FNCTN	AT-139
P0740	0740	TCC SOLENOID/CIRC	AT-149
P0744	0744	A/T TCC S/V FNCTN	AT-154
P0745	0745	L/PRESS SOL/CIRC	AT-162
P0750	0750	SFT SOL A/CIRC*3	AT-168
P0755	0755	SFT SOL B/CIRC*3	AT-172
P1102	1102	MAF SENSOR*3	EC-480
P1111	1111	INT/V TIM V/CIR-B1	EC-486
P1130	1130	SWIRL CONT SOL/V	EC-492
P1131	1131	SWIRL CONT SOL/V	EC-515
P1136	1136	INT/V TIM V/CIR-B2	EC-486
P1140	1140	INTK TIM S/CIRC-B1	EC-521
P1143	1143	HO2S1 (B1)	EC-530
P1144	1144	HO2S1 (B1)	EC-538
P1145	1145	INTK TIM S/CIRC-B2	EC-521
P1146	1146	HO2S2 (B1)	EC-546
P1147	1147	HO2S2 (B1)	EC-557
P1148	1148	CLOSED LOOP-B1	EC-568
P1163	1163	HO2S1 (B2)	EC-530
P1164	1164	HO2S1 (B2)	EC-538

TROUBLE DIAGNOSIS — INDEX

Alphabetical & P No. Index for DTC (Cont'd)

DTC*1		Items (CONSULT-II screen terms)	Reference page	
CONSULT-II GST*2	ECM*3			
P1165	1165	SWL CON VC SW/CIRC	EC-570	GI
P1166	1166	HO2S2 (B2)	EC-546	MA
P1167	1167	HO2S2 (B2)	EC-557	EM
P1168	1168	CLOSED LOOP-B2	EC-568	
P1217	1217	ENG OVER TEMP	EC-576	LC
P1335	1335	CKP SEN (REF)/CIRC	EC-581	
P1336	1336	CKP SENSOR (COG)	EC-587	EC
P1444	1444	PURG VOLUME CONT/V	EC-596	
P1446	1446	VENT CONTROL VALVE	EC-608	FE
P1448	1448	VENT CONTROL VALVE	EC-616	
P1456	1456	EVAP VERY SML LEAK	EC-625	AT
P1464	1464	FUEL LEVL SEN/CIRC	EC-641	
P1490	1490	VC/V BYPASS/V	EC-644	TF
P1491	1491	VC CUT/V BYPASS/V	EC-650	
P1605	1605	A/T DIAG COMM LINE	EC-662	PD
P1610-P1615	1610-1615	NATS MALFUNCTION	EL-499	AX
P1705	1705	TP SEN/CIRC A/T*3	AT-176	
P1706	1706	P-N POS SW/CIRCUIT	EC-663	SU
P1760	1760	O/R CLTCH SOL/CIRC	AT-185	

*1: 1st trip DTC No. is the same as DTC No.

*2: These numbers are prescribed by SAE J2012.

*3: In Diagnostic Test Mode II (Self-diagnostic results), these numbers are controlled by NISSAN.

*4: When engine is running.

*5: When the fail-safe operation occurs, the MIL illuminates.

*6: When fail-safe operations for both self-diagnoses occur at the same time, the MIL illuminates.

NOTE:

- Regarding R50 models, “-B1” indicates bank 1 and “-B2” indicates bank 2.
- Bank 1 (-B1) includes No. 1 cylinder.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

PRECAUTIONS

Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

NBEC0002

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER" used along with a seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. The SRS system composition which is available to INFINITI QX4 is as follows:

- For a frontal collision
The Supplemental Restraint System consists of driver air bag module (located in the center of the steering wheel), front passenger air bag module (located on the instrument panel on passenger side), seat belt pre-tensioners, a diagnosis sensor unit, warning lamp, wiring harness and spiral cable.
- For a side collision
The Supplemental Restraint System consists of side air bag module (located in the outer side of front seat), satellite sensor, diagnosis sensor unit (one of components of air bags for a frontal collision), wiring harness, warning lamp (one of components of air bags for a frontal collision).

Information necessary to service the system safely is included in the **RS section** of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, refer to RS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow harness connector (and by yellow harness protector or yellow insulation tape before the harness connectors).

Precautions for On Board Diagnostic (OBD) System of Engine and A/T

NBEC0003

The ECM has an on board diagnostic system. It will light up the malfunction indicator lamp (MIL) to warn the driver of a malfunction causing emission deterioration.

CAUTION:

- Be sure to turn the ignition switch OFF and disconnect the negative battery terminal before any repair or inspection work. The open/short circuit of related switches, sensors, solenoid valves, etc. will cause the MIL to light up.
- Be sure to connect and lock the connectors securely after work. A loose (unlocked) connector will cause the MIL to light up due to the open circuit. (Be sure the connector is free from water, grease, dirt, bent terminals, etc.)
- Certain systems and components, especially those related to OBD, may use a new style slide-locking type harness connector. For description and how to disconnect, refer to EL-7, "HARNESS CONNECTOR (SLIDE-LOCKING TYPE)".
- Be sure to route and secure the harnesses properly after work. The interference of the harness with a bracket, etc. may cause the MIL to light up due to the short circuit.
- Be sure to connect rubber tubes properly after work. A misconnected or disconnected rubber tube may cause the MIL to light up due to the malfunction of the fuel injection system, etc.
- Be sure to erase the unnecessary malfunction information (repairs completed) from the ECM and TCM (Transmission control module) before returning the vehicle to the customer.

PRECAUTIONS

Engine Fuel & Emission Control System

Engine Fuel & Emission Control System


NBEC0004

ECM

- Do not disassemble ECM.
- If a battery terminal is disconnected, the memory will return to the ECM value.
The ECM will not start to self-control at its initial value. Engine operation can vary slightly when the terminal is disconnected. However, this is not an indication of a malfunction. Do not replace parts because of a slight variation.

WIRELESS EQUIPMENT

- When installing CB ham radio or a mobile phone, be sure to observe the following as it may adversely affect electronic control systems depending on its installation location.
 - 1) Keep the antenna as far away as possible from the electronic control units.
 - 2) Keep the antenna feeder line more than 20 cm (7.9 in) away from the harness of electronic controls.
Do not let them run parallel for a long distance.
 - 3) Adjust the antenna and feeder line so that the standing-wave ratio can be kept smaller.
 - 4) Be sure to ground the radio to vehicle body.

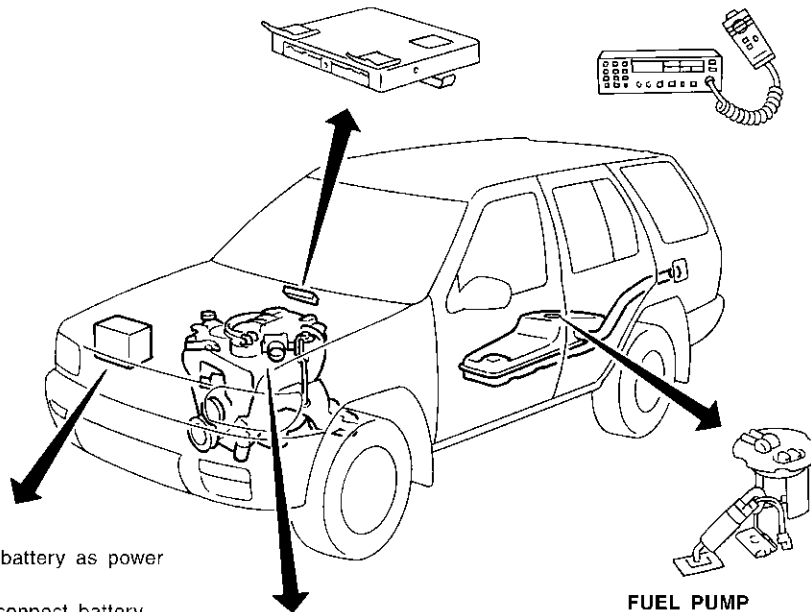

BATTERY

- Always use a 12 volt battery as power source.
- Do not attempt to disconnect battery cables while engine is running.

WHEN STARTING

- Do not depress accelerator pedal when starting.
- Immediately after starting, do not rev up engine unnecessarily.
- Do not rev up engine just prior to shutdown.

ENGINE CONTROL SYSTEM PARTS HANDLING

- Handle mass air flow sensor carefully to avoid damage.
- Do not disassemble mass air flow sensor.
- Do not clean mass air flow sensor with any type of detergent.
- Do not disassemble IACV-AAC valve.
- Even a slight leak in the air intake system can cause serious incidents.
- Do not shock or jar the camshaft position sensor (PHASE) or crankshaft position sensor (POS).



FUEL PUMP

- Do not operate fuel pump when there is no fuel in lines.
- Tighten fuel hose clamps to the specified torque. (Refer to MA section.)

ENGINE CONTROL SYSTEM HARNESS HANDLING

- Securely connect ECM harness connectors.
A poor connection can cause an extremely high (surge) voltage to develop in coil and condenser, thus resulting in damage to ICs.
- Keep engine control system harness at least 10 cm (3.9 in.) away from adjacent harnesses to prevent an engine control system malfunction due to receiving external noise, degraded operation of ICs, etc.
- Keep engine control system parts and harnesses dry.
- Before removing parts, turn off ignition switch and then disconnect battery ground cable.

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC






EL

IDX

SEF952RJ

PRECAUTIONS

Precautions

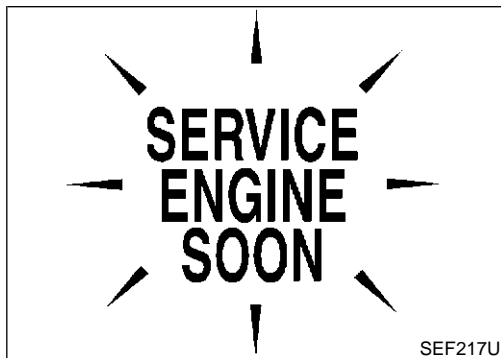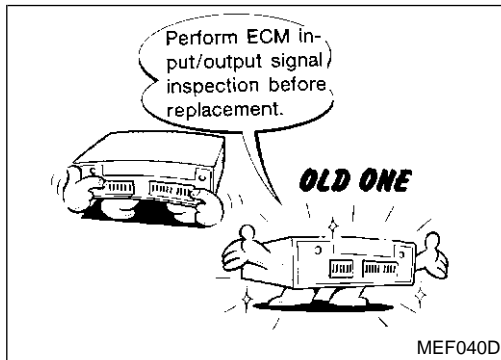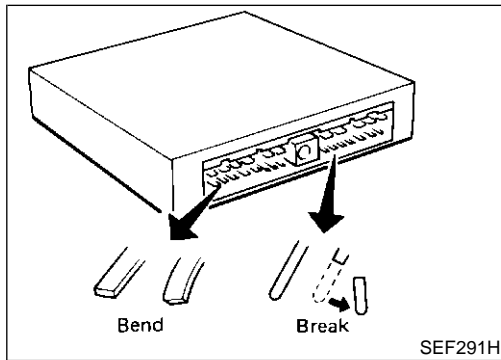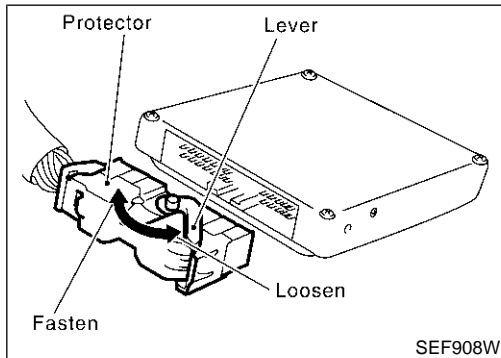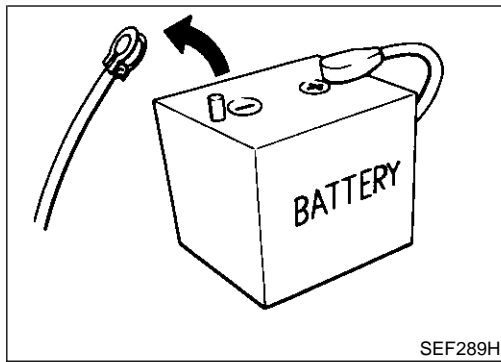



Precautions

NBEC0005

- Before connecting or disconnecting the ECM harness connector, turn ignition switch OFF and disconnect negative battery terminal. Failure to do so may damage the ECM because battery voltage is applied to ECM even if ignition switch is turned off.
- When connecting ECM harness connector, fasten it securely with a lever as far as it will go as shown at left.
- When connecting or disconnecting pin connectors into or from ECM, take care not to damage pin terminals (bend or break). Make sure that there are not any bends or breaks on ECM pin terminal, when connecting pin connectors.
- Before replacing ECM, perform “ECM Terminals and Reference Value” inspection and make sure ECM functions properly. Refer to EC-139.
- After performing each TROUBLE DIAGNOSIS, perform “DTC Confirmation Procedure” or “Overall Function Check”. The DTC should not be displayed in the “DTC Confirmation Procedure” if the repair is completed. The “Overall Function Check” should be a good result if the repair is completed.

PRECAUTIONS

Precautions (Cont'd)

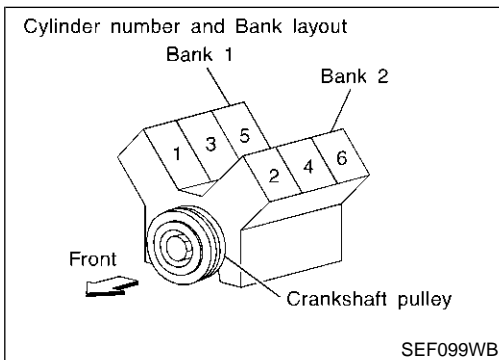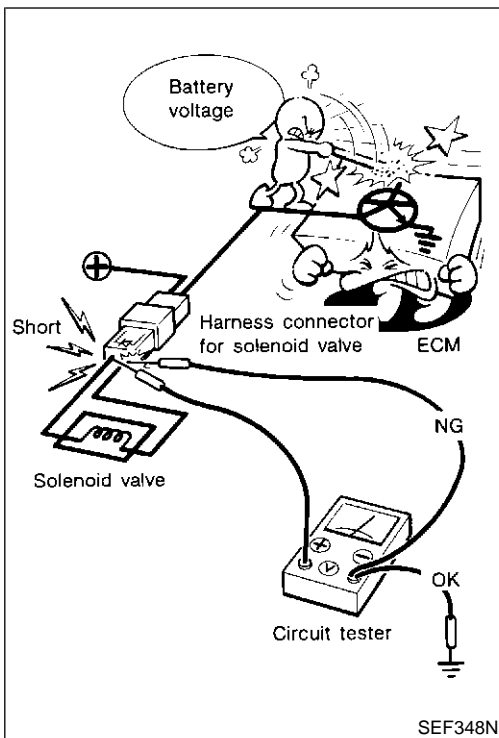

- When measuring ECM signals with a circuit tester, never allow the two tester probes to contact. Accidental contact of probes will cause a short circuit and damage the ECM power transistor.
- Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than the ECM terminals, such as the ground.

GI

MA

EM

LC

EC

FE

AT

TF

- Regarding model R50, “-B1” indicates the bank 1 and “-B2” indicates the bank 2 as shown in the figure.
- Bank 1 includes No. 1 cylinder.

PD

AX

SU

BR

Wiring Diagrams and Trouble Diagnosis

NBEC0006

ST

When you read Wiring diagrams, refer to the following:

- GI-12, “HOW TO READ WIRING DIAGRAMS”
- EL-10, “POWER SUPPLY ROUTING” for power distribution circuit

RS

When you perform trouble diagnosis, refer to the following:

- GI-36, “HOW TO FOLLOW TEST GROUPS IN TROUBLE DIAGNOSES”
- GI-25, “HOW TO PERFORM EFFICIENT DIAGNOSIS FOR AN ELECTRICAL INCIDENT”

BT

HA

SC

EL

IDX




PREPARATION

Special Service Tools

Special Service Tools



NBEC0007

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

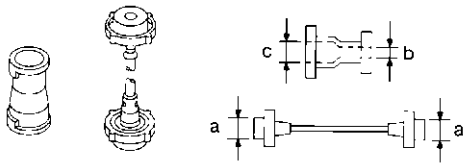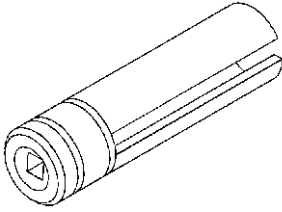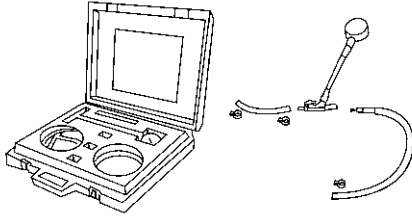Tool number (Kent-Moore No.) Tool name	Description
EG17650301 (J33984-A) Radiator cap tester adapter	 <p>Adapting radiator cap tester to radiator filler neck a: 28 (1.10) dia. b: 31.4 (1.236) dia. c: 41.3 (1.626) dia. Unit: mm (in)</p> <p>NT564</p>
KV10117100 (J36471-A) Heated oxygen sensor wrench	 <p>Loosening or tightening heated oxygen sensor with 22 mm (0.87 in) hexagon nut (bank 1)/(bank 2)</p> <p>NT379</p>
(J44321) Fuel pressure gauge kit	 <p>Checking fuel pressure with pressure gauge</p> <p>LEC642</p>





Commercial Service Tools

NBEC0008

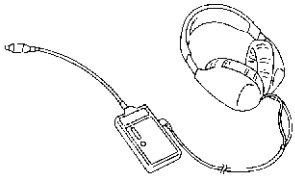Tool name (Kent-Moore No.)	Description
Fuel filler cap adapter i.e.: (MLR-8382)	 <p>Checking fuel tank vacuum relief valve opening pressure</p> <p>NT815</p>
Leak detector i.e.: (J41416)	 <p>Locating the EVAP leak</p> <p>NT703</p>

PREPARATION

Commercial Service Tools (Cont'd)

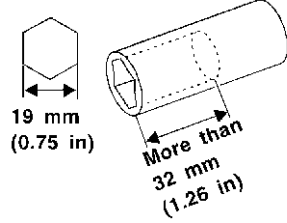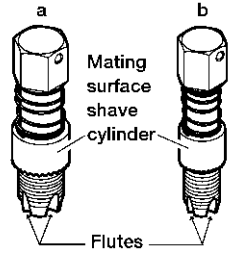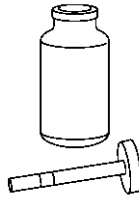
Tool name (Kent-Moore No.)	Description	
EVAP service port adapter i.e.: (J41413-OBD)	Applying positive pressure through EVAP service port 	GI MA EM LC
Socket wrench	Removing and installing engine coolant temperature sensor 	EC FE AT
Oxygen sensor thread cleaner i.e.: (J-43897-18) (J-43897-12)	Reconditioning the exhaust system threads before installing a new oxygen sensor. Use with anti-seize lubricant shown below. a: J-43897-18 18 mm diameter with pitch 1.5 mm, for Zirconia Oxygen Sensor b: J-43897-12 12 mm diameter with pitch 1.25 mm, for Titania Oxygen Sensor 	TF PD AX
Anti-seize lubricant i.e.: (Permatex™ 133AR or equivalent meeting MIL specification MIL-A-907)	Lubricating oxygen sensor thread cleaning tool when reconditioning exhaust system threads. 	SU BR ST RS

ENGINE AND EMISSION CONTROL OVERALL SYSTEM

Engine Control Component Parts Location

Engine Control Component Parts Location

NBEC0009







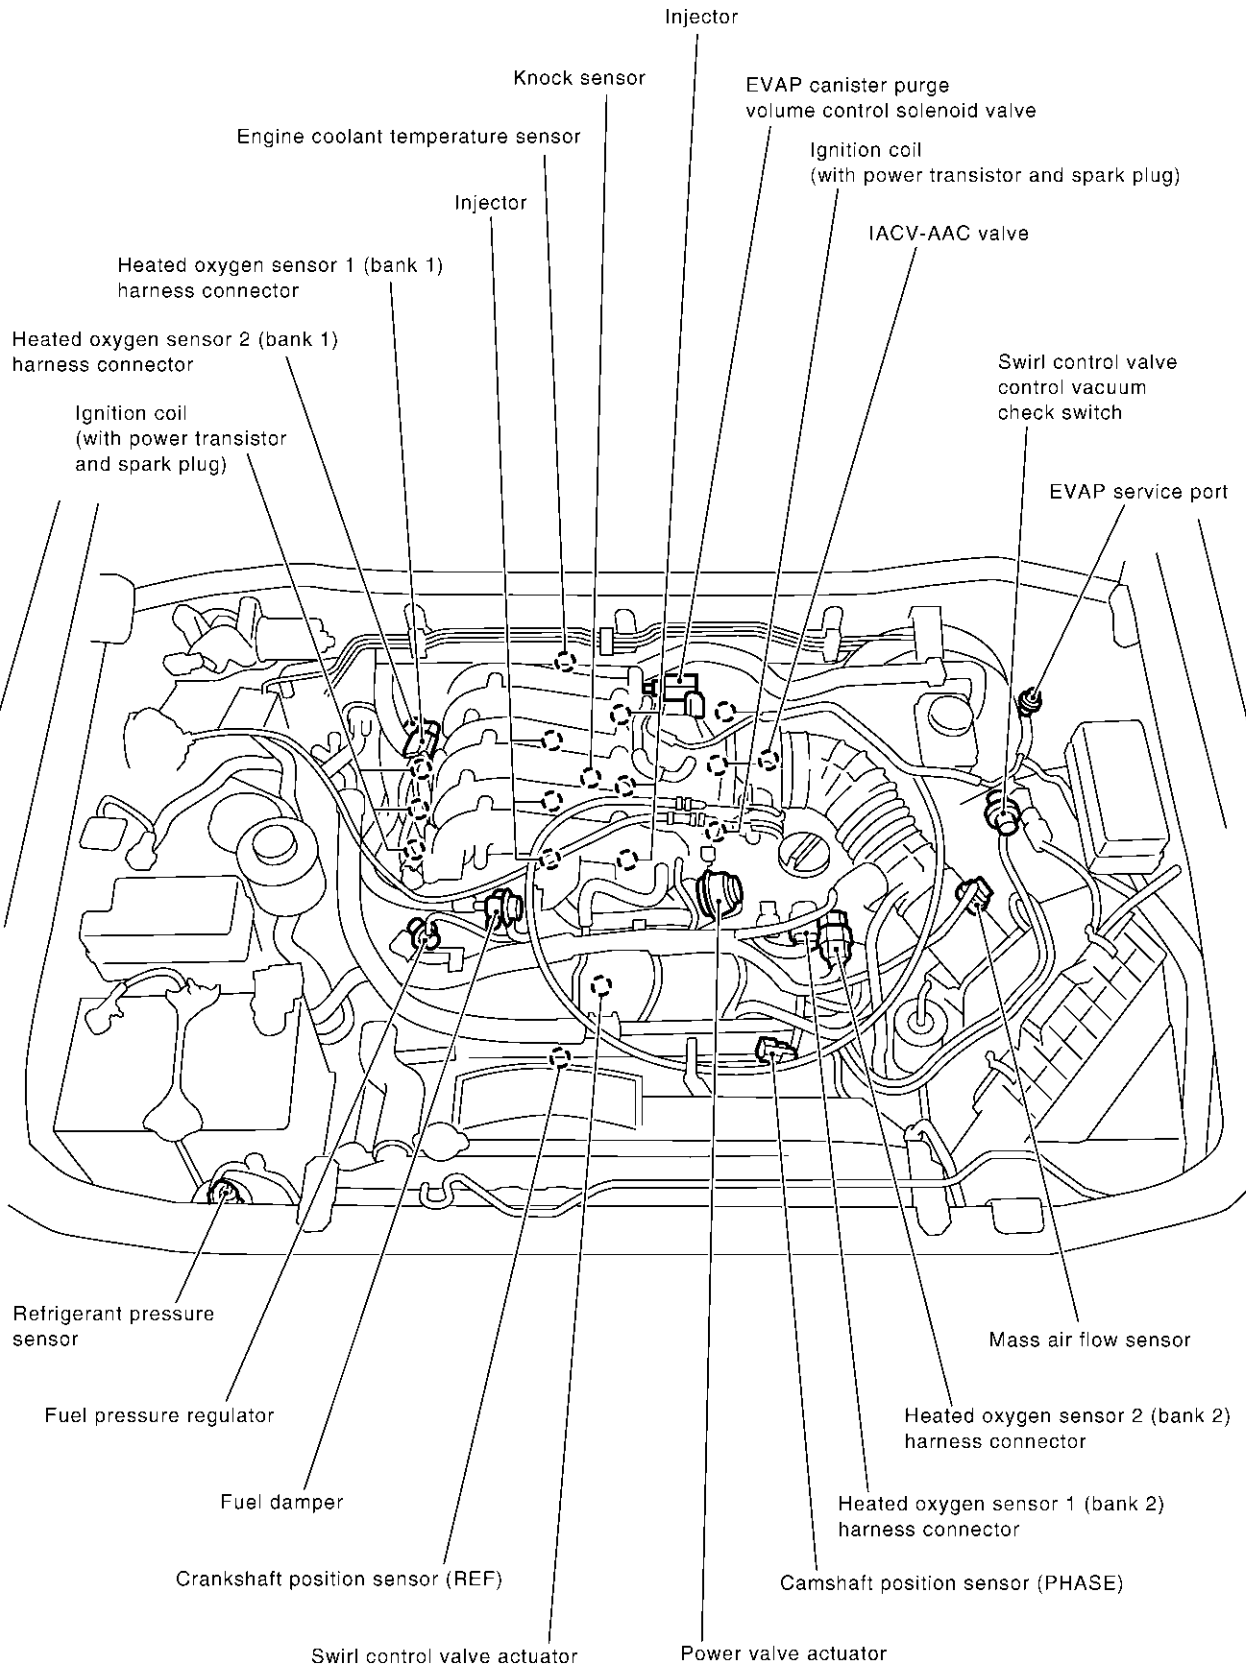


SEF952ZB

ENGINE AND EMISSION CONTROL OVERALL SYSTEM

Engine Control Component Parts Location (Cont'd)









GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

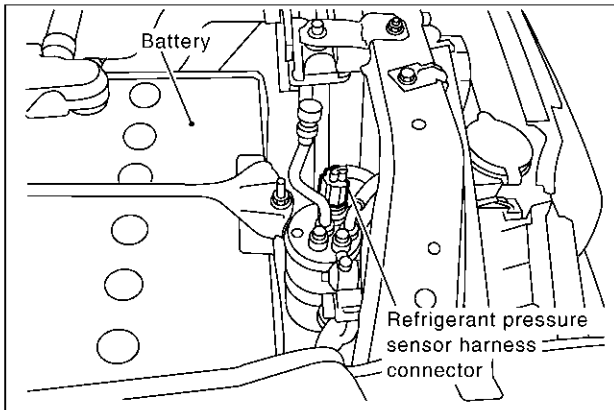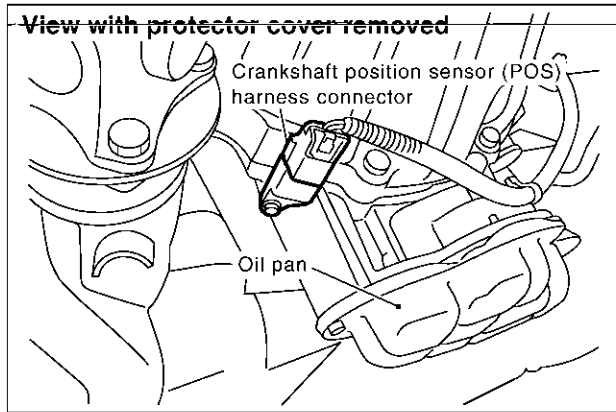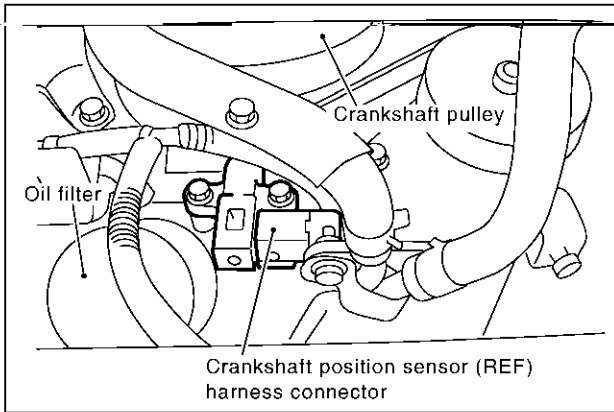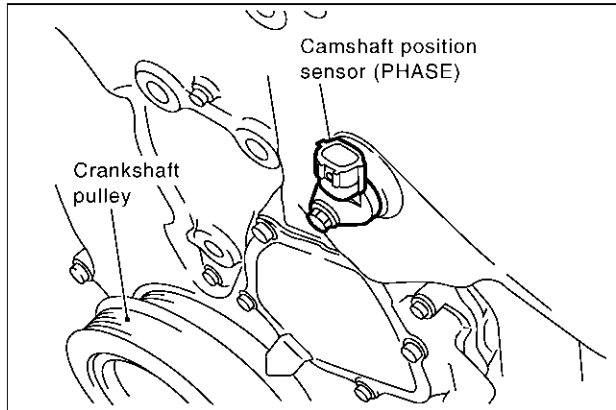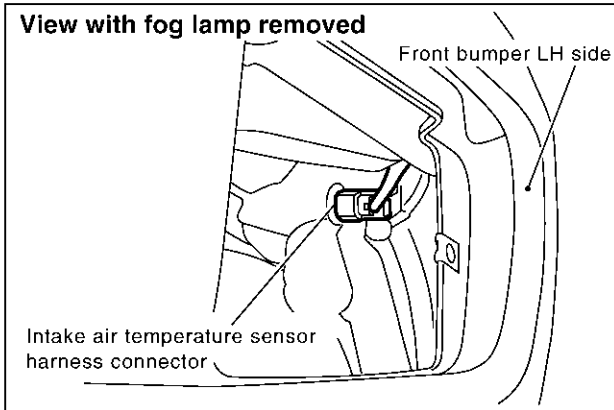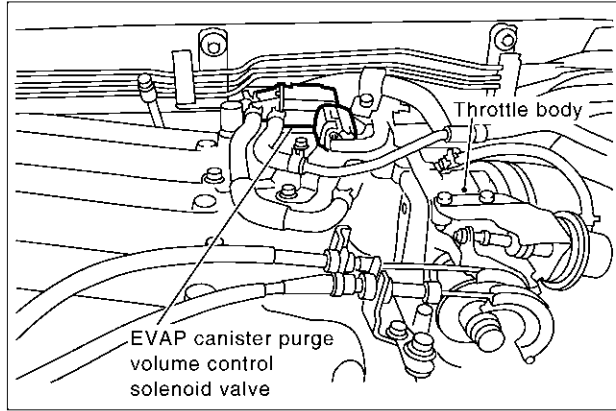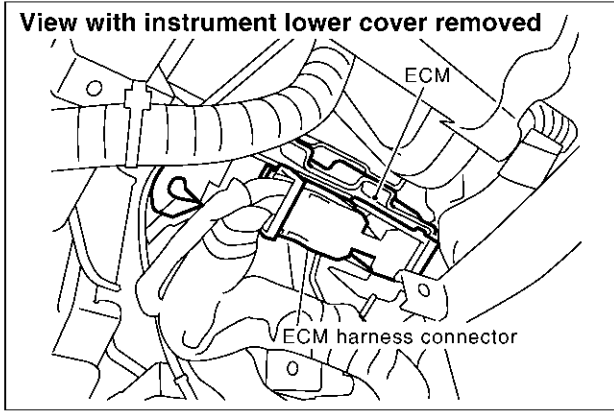

SEC591DB

ENGINE AND EMISSION CONTROL OVERALL SYSTEM


Engine Control Component Parts Location (Cont'd)

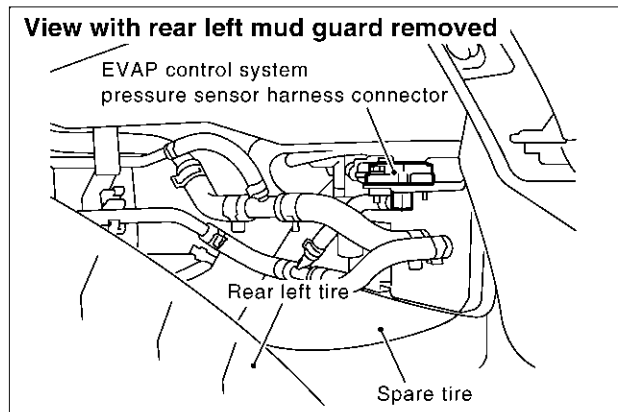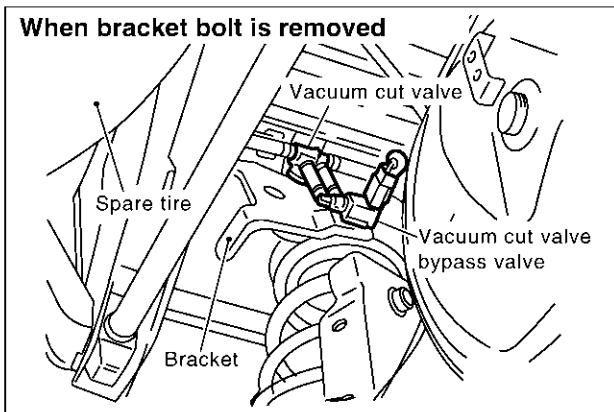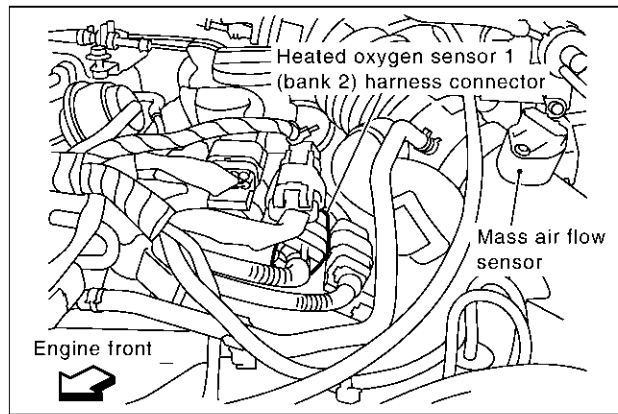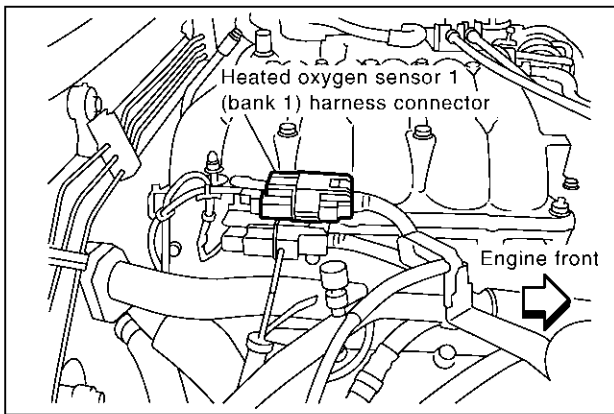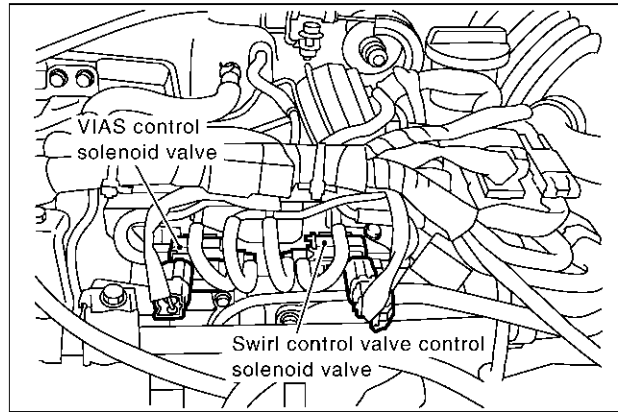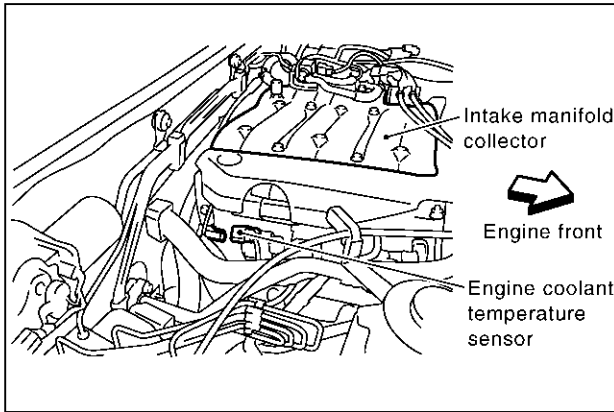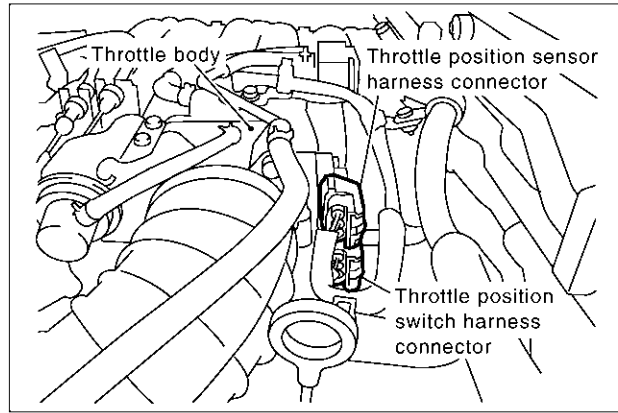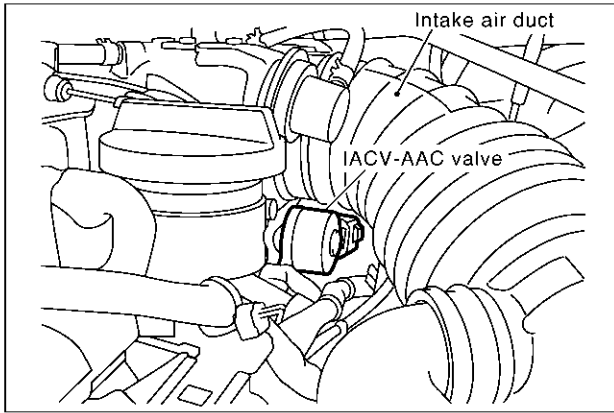

SEC592DA

ENGINE AND EMISSION CONTROL OVERALL SYSTEM

Engine Control Component Parts Location (Cont'd)

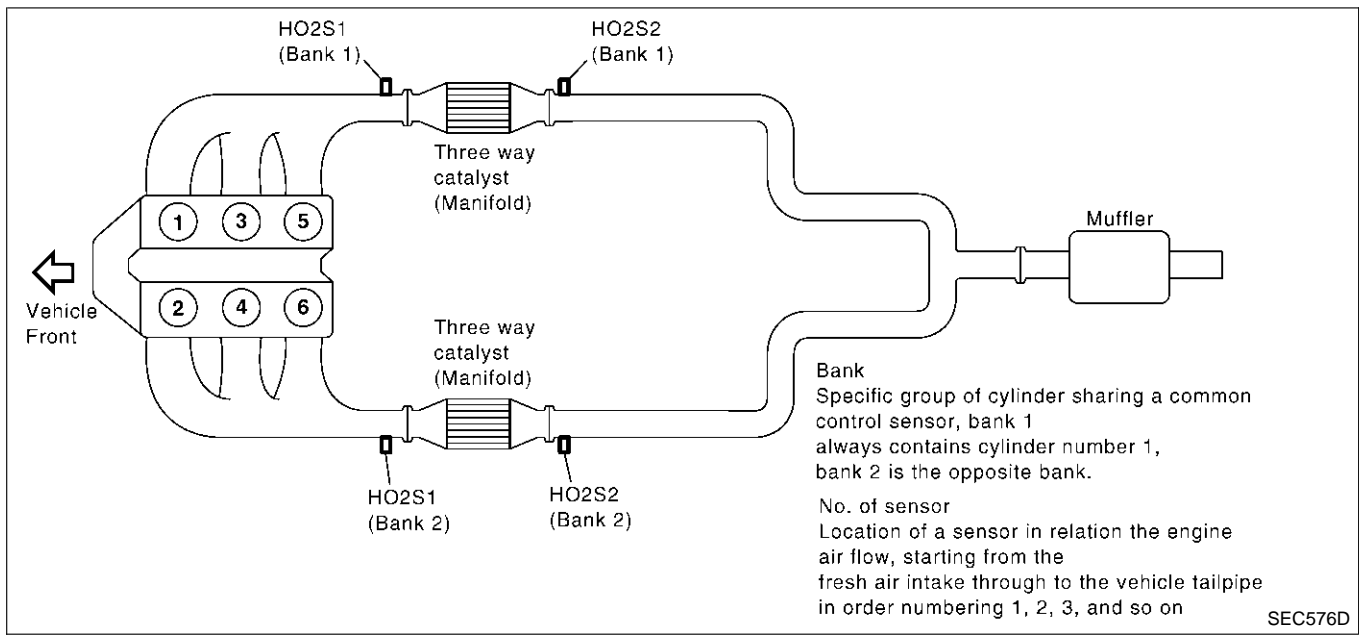

GI

MA



EM

LC

EC

FE

AT

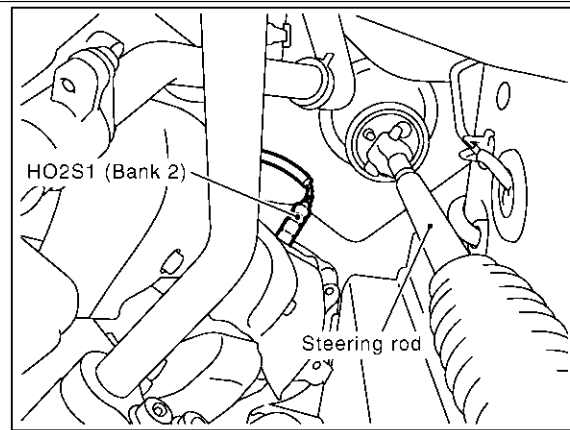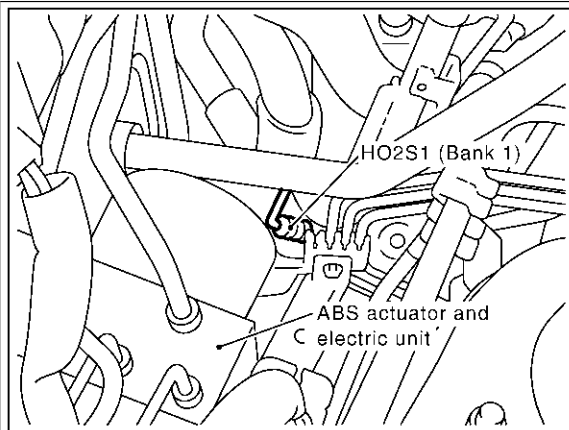


TF

PD

AX

SU

BR

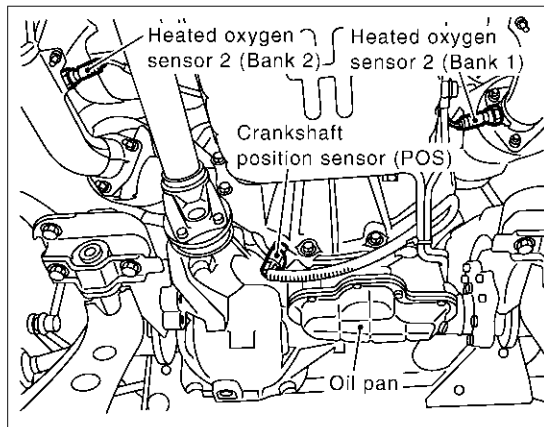

ST

RS

BT

HA

SC

SEC974D

EL


IDX

ENGINE AND EMISSION CONTROL OVERALL SYSTEM

Circuit Diagram

Circuit Diagram


NBEC0010

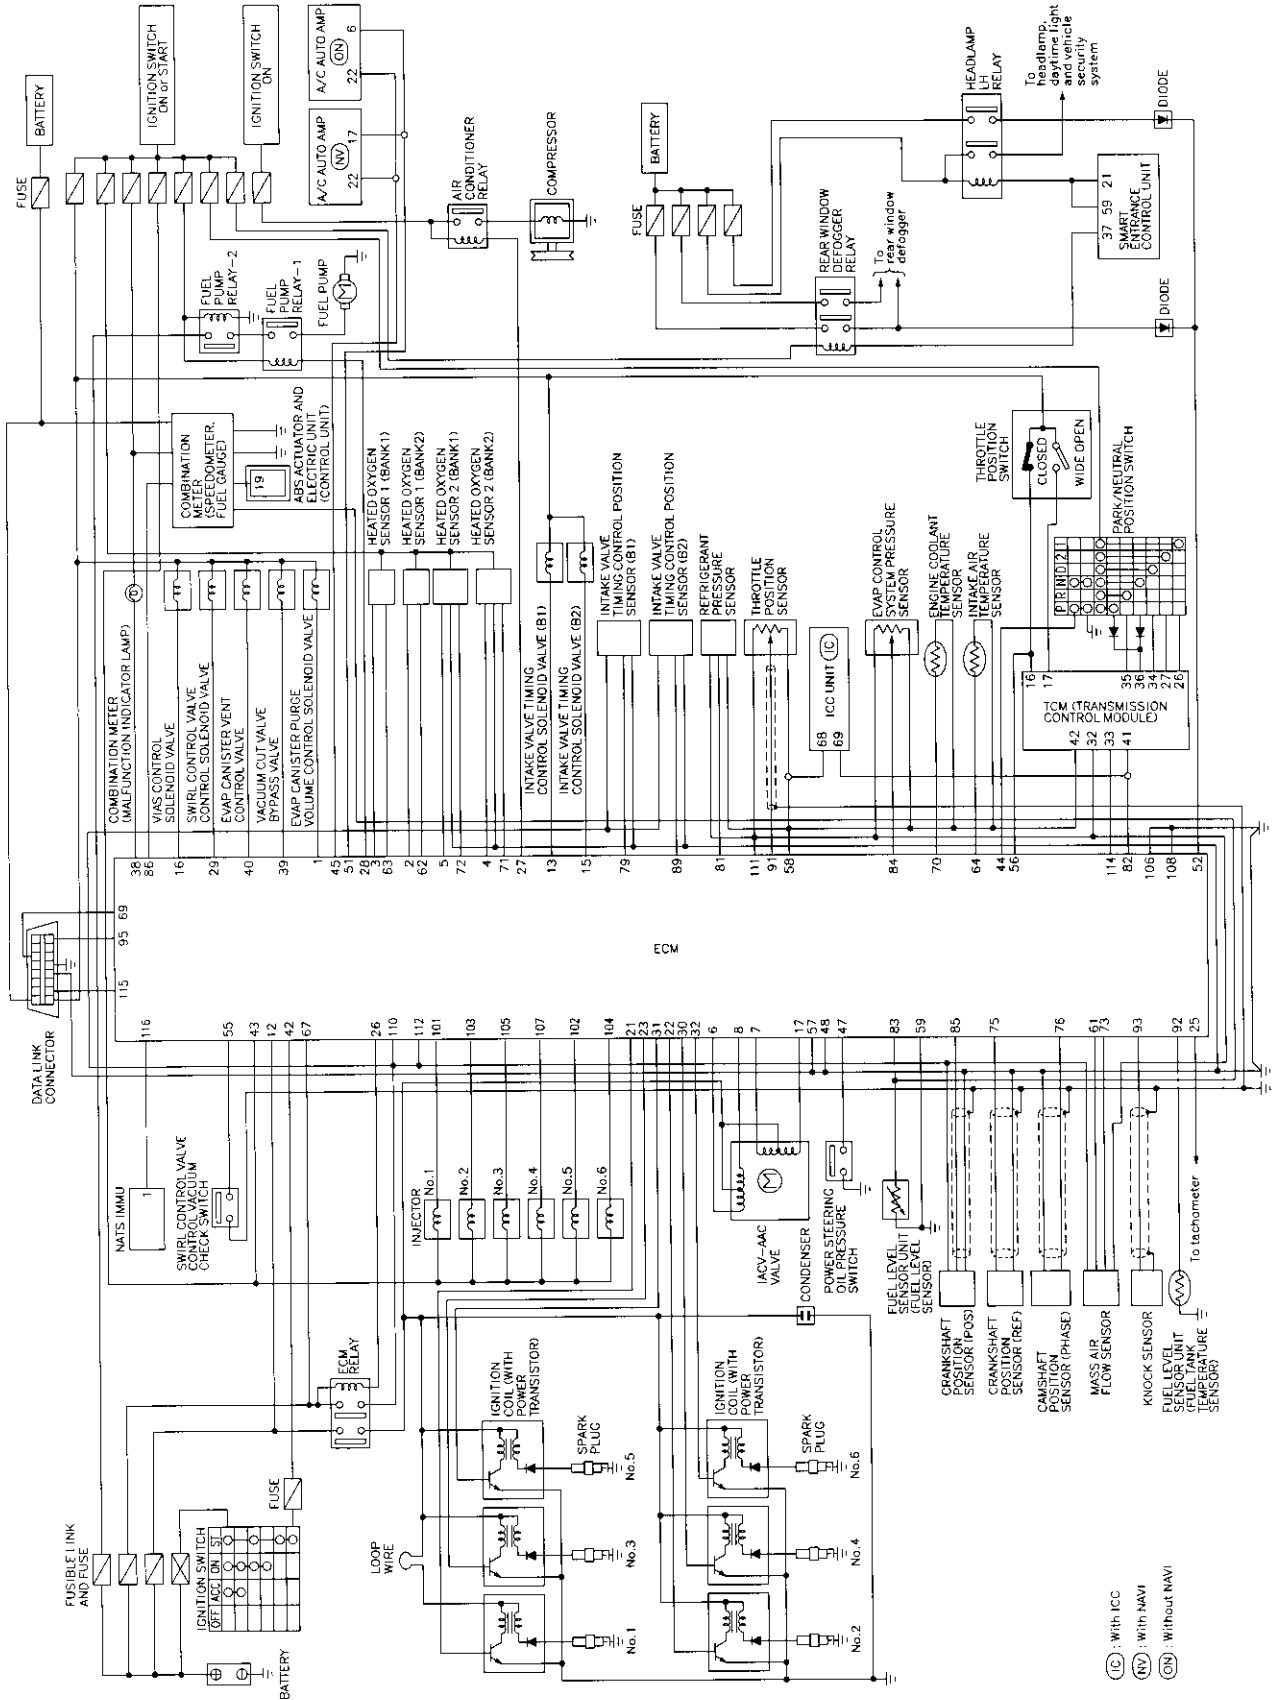

MEC230E

System Diagram

NBEC0011

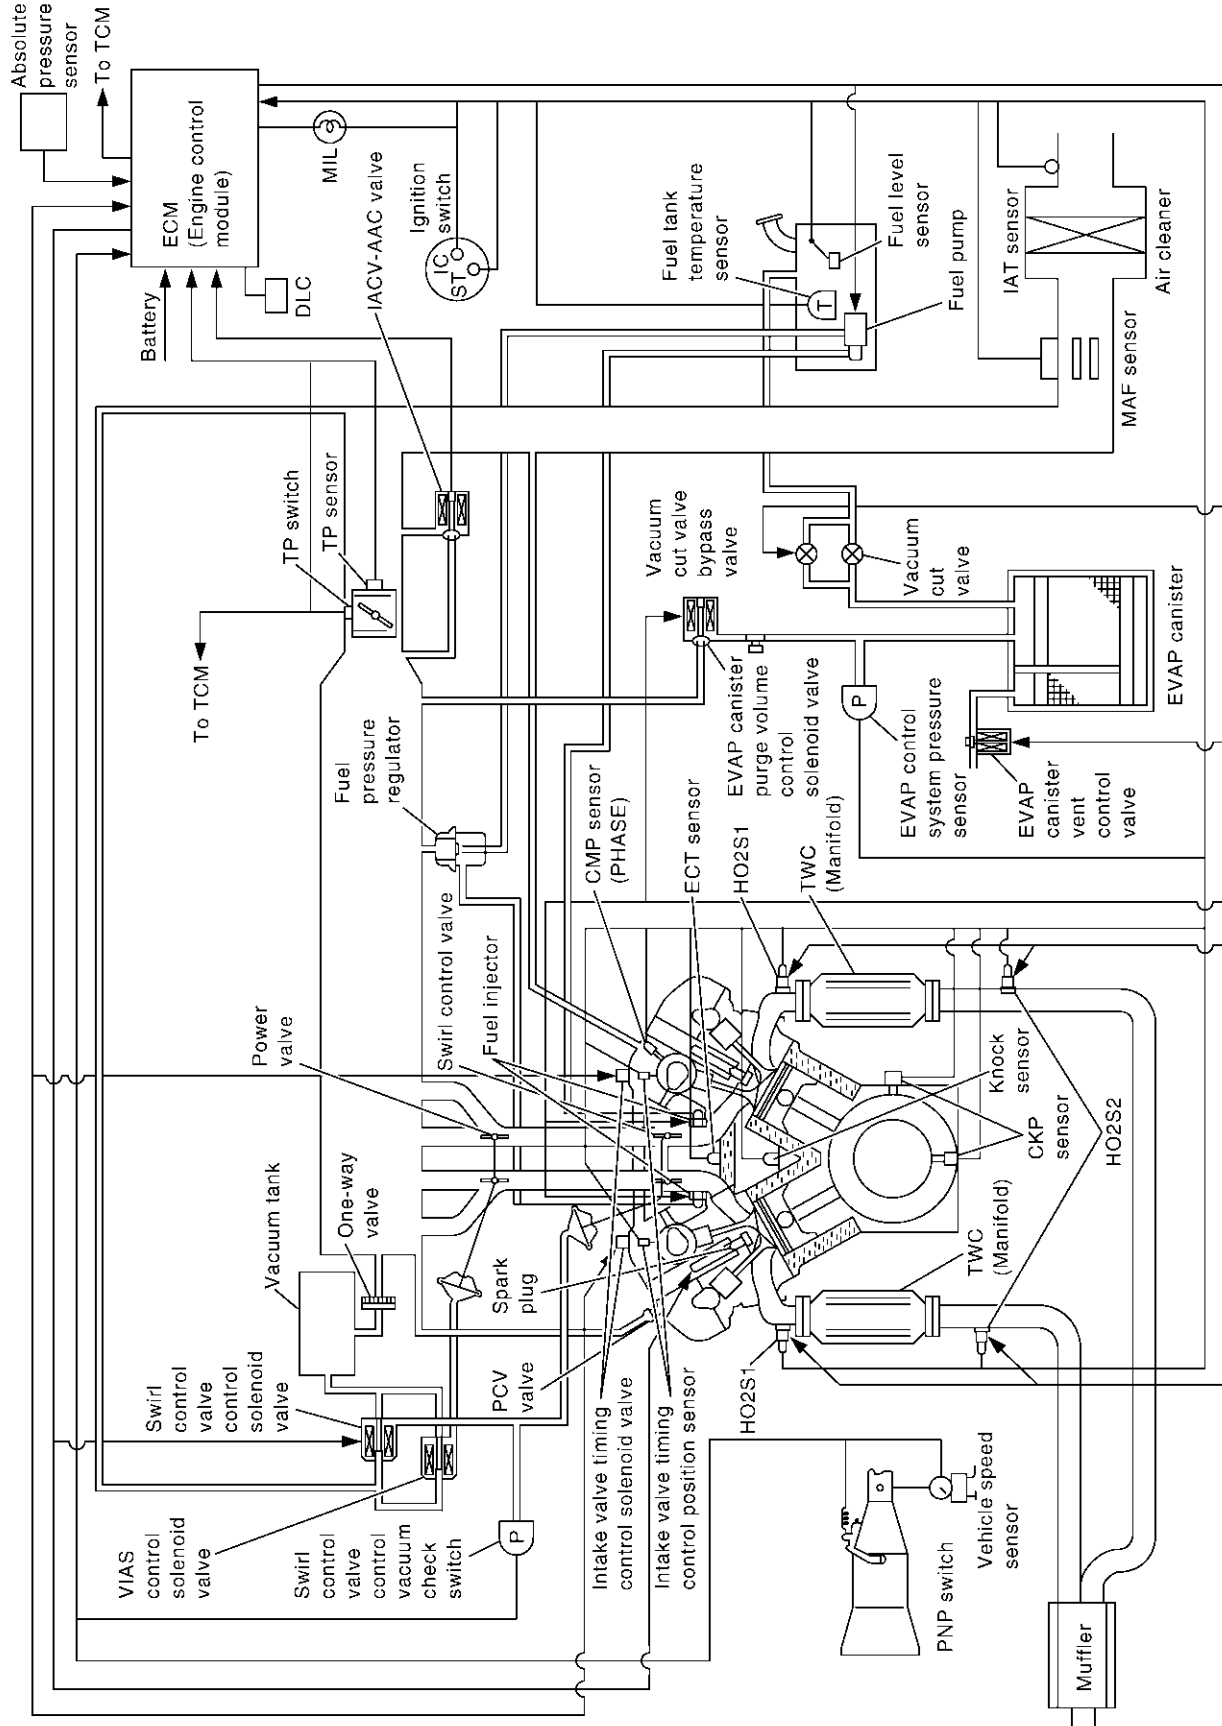

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


ENGINE AND EMISSION CONTROL OVERALL SYSTEM

Vacuum Hose Drawing

Vacuum Hose Drawing

NBEC0012

Refer to "System Diagram", EC-27 for Vacuum Control System.

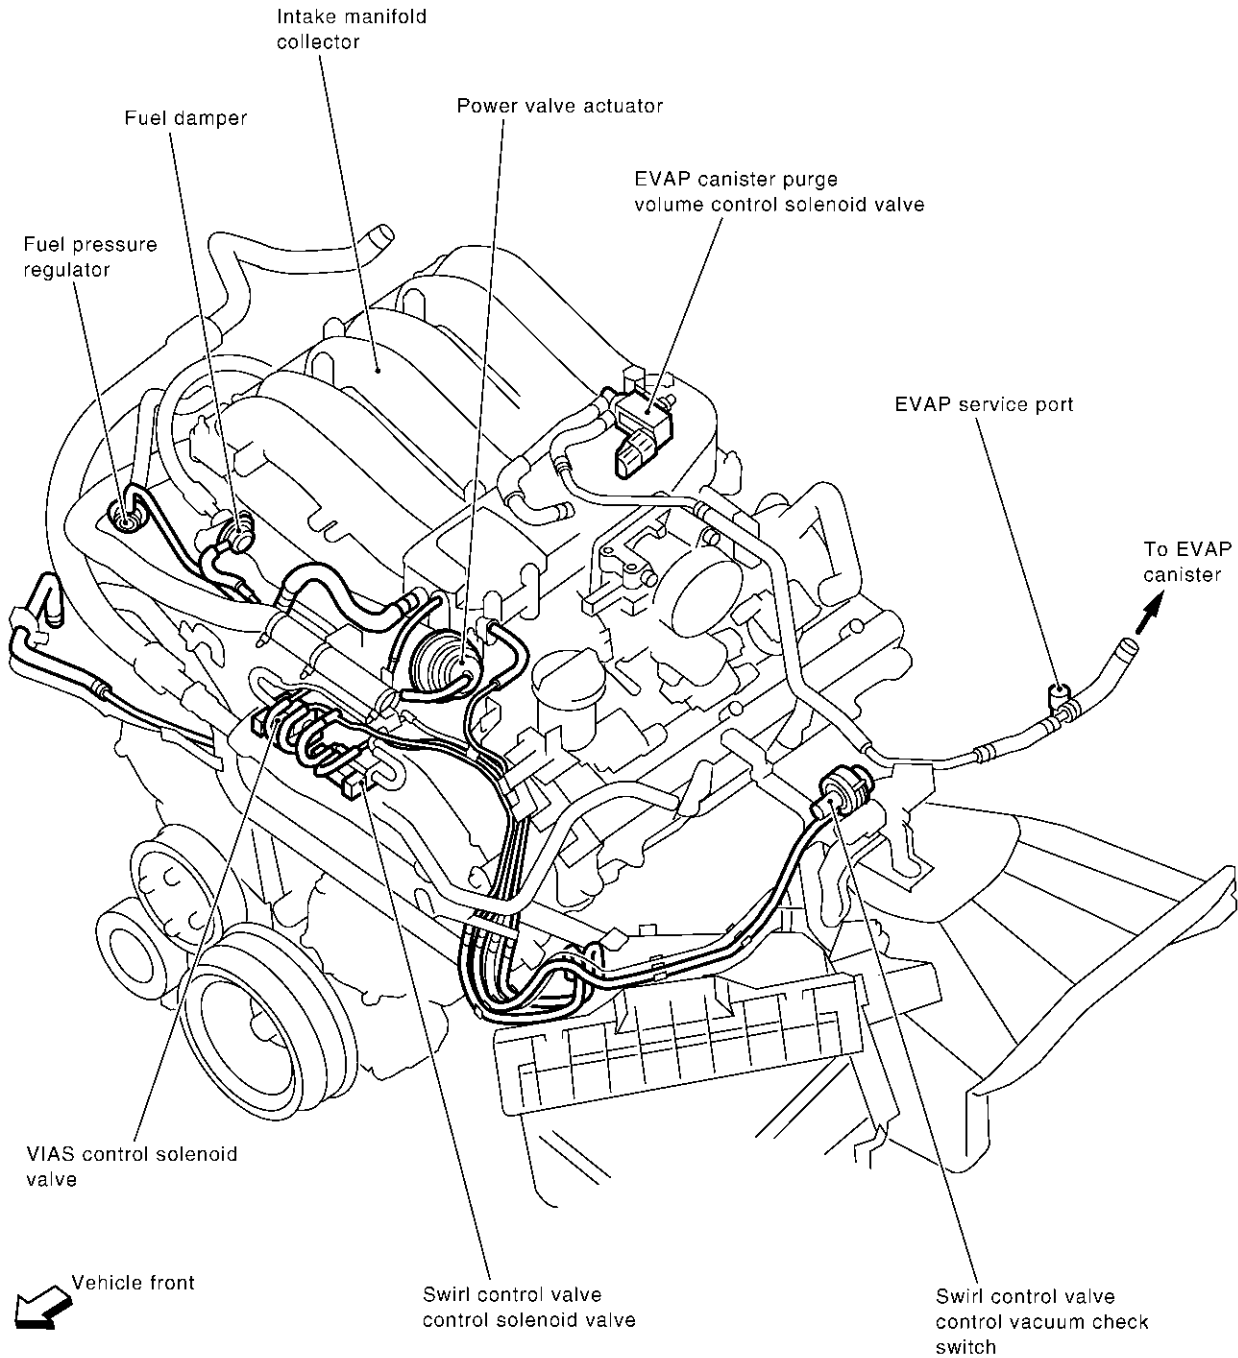

NOTE:

Do not use soapy water or any type of solvent while installing vacuum hose or purge hoses.

SEC975D

ENGINE AND EMISSION CONTROL OVERALL SYSTEM

System Chart

System Chart

NBEC0013

Input (Sensor)	ECM Function	Output (Actuator)	
<ul style="list-style-type: none"> ● Camshaft position sensor (PHASE) ● Crankshaft position sensor (REF) ● Mass air flow sensor ● Engine coolant temperature sensor ● Heated oxygen sensor 1 ● Ignition switch ● Throttle position sensor ● Closed throttle position switch *3 ● Park/neutral position (PNP) switch ● Air conditioner switch ● Knock sensor ● Intake air temperature sensor ● Absolute pressure sensor ● EVAP control system pressure sensor *1 ● Battery voltage ● Power steering oil pressure switch ● Vehicle speed sensor ● Fuel tank temperature sensor *1 ● Crankshaft position sensor (POS) ● Heated oxygen sensor 2*2 ● TCM (Transmission control module) ● Refrigerant pressure sensor ● Electrical load ● Fuel level sensor*1 	Fuel injection & mixture ratio control	Injectors	GI
	Electronic ignition system	Power transistor	MA
	Idle air control system	IACV-AAC valve	EM
	Fuel pump control	Fuel pump relay	EM
	On board diagnostic system	MIL (On the instrument panel)	LC
	Swirl control valve control	Swirl control valve control solenoid valve	EC
	Power valve control	VIAS control solenoid valve	EC
	Heated oxygen sensor 1 heater control	Heated oxygen sensor 1 heater	FE
	Heated oxygen sensor 2 heater control	Heated oxygen sensor 2 heater	FE
	EVAP canister purge flow control	EVAP canister purge volume control solenoid valve	AT
	Air conditioning cut control	Air conditioner relay	TF
	ON BOARD DIAGNOSIS for EVAP system	<ul style="list-style-type: none"> ● EVAP canister vent control valve ● Vacuum cut valve bypass valve 	PD

*1: These sensors are not used to control the engine system. They are used only for the on board diagnosis.

*2: This sensor is not used to control the engine system under normal conditions.

*3: This switch will operate in place of the throttle position sensor to control EVAP parts if the sensor malfunctions.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION

Multiport Fuel Injection (MFI) System

Multiport Fuel Injection (MFI) System

DESCRIPTION

Input/Output Signal Chart

NBEC0014

NBEC0014S01

Sensor	Input Signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS)	Engine speed (POS signal)	Fuel injection & mixture ratio control	Injectors
Crankshaft position sensor (REF)	Engine speed (REF signal)		
Camshaft position sensor (PHASE)	Piston position		
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Heated oxygen sensor 1	Density of oxygen in exhaust gas		
Throttle position sensor	Throttle position Throttle valve idle position		
Park/neutral position (PNP) switch	Gear position		
Vehicle speed sensor	Vehicle speed		
Ignition switch	Start signal		
Air conditioner switch	Air conditioner operation		
Knock sensor	Engine knocking condition		
Battery	Battery voltage		
Absolute pressure sensor	Ambient air barometric pressure		
Power steering oil pressure switch	Power steering operation		
Heated oxygen sensor 2*	Density of oxygen in exhaust gas		

*: Under normal conditions, this sensor is not for engine control operation.

Basic Multiport Fuel Injection System

NBEC0014S02

The amount of fuel injected from the fuel injector is determined by the ECM. The ECM controls the length of time the valve remains open (injection pulse duration). The amount of fuel injected is a program value in the ECM memory. The program value is preset by engine operating conditions. These conditions are determined by input signals (for engine speed and intake air) from both the crankshaft position sensor and the mass air flow sensor.

Various Fuel Injection Increase/Decrease Compensation

NBEC0014S03

In addition, the amount of fuel injected is compensated to improve engine performance under various operating conditions as listed below.

<Fuel increase>


- During warm-up
- When starting the engine
- During acceleration
- Hot-engine operation
- When selector lever is changed from "N" to "D"
- High-load, high-speed operation

<Fuel decrease>

- During deceleration
- During high engine speed operation

Mixture Ratio Feedback Control (Closed loop control)

NBEC0014S04

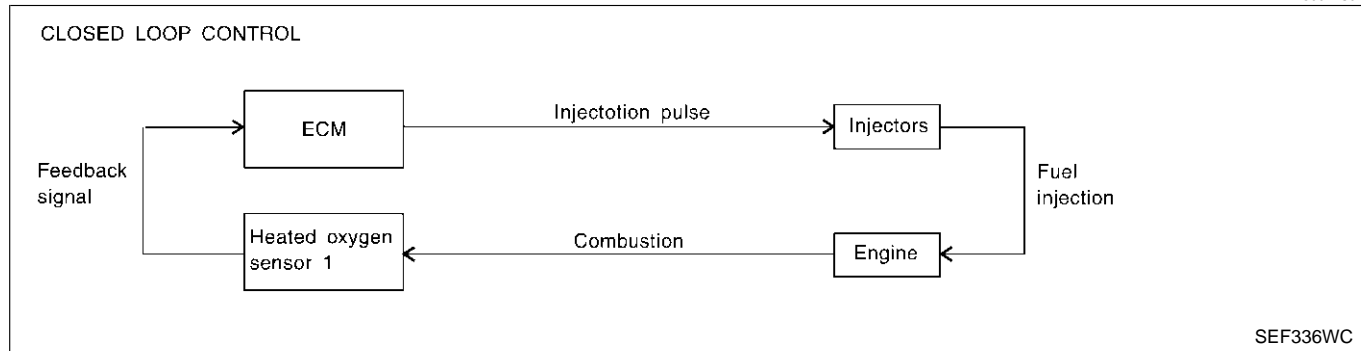

The mixture ratio feedback system provides the best air-fuel mixture ratio for driveability and emission control. The three way catalyst (manifold) can then better reduce CO, HC and NOx emissions. This system uses a heated oxygen sensor 1 in the exhaust manifold to monitor if the engine operation is rich or lean. The ECM adjusts the injection pulse width according to the sensor voltage signal. For more information about the heated oxygen sensor 1, refer to EC-252. This maintains the mixture ratio within the range of stoichiometric (ideal air-fuel mixture).

This stage is referred to as the closed loop control condition.

Heated oxygen sensor 2 is located downstream of the three way catalyst (manifold). Even if the switching characteristics of the heated oxygen sensor 1 shift, the air-fuel ratio is controlled to stoichiometric by the signal from the heated oxygen sensor 2.

Open Loop Control

NBEC0014S05

The open loop system condition refers to when the ECM detects any of the following conditions. Feedback control stops in order to maintain stabilized fuel combustion.

- Deceleration and acceleration
- High-load, high-speed operation
- Malfunction of heated oxygen sensor 1 or its circuit
- Insufficient activation of heated oxygen sensor 1 at low engine coolant temperature
- High engine coolant temperature
- During warm-up
- After shifting from "N" to "D"
- When starting the engine

Mixture Ratio Self-learning Control

NBEC0014S06

The mixture ratio feedback control system monitors the mixture ratio signal transmitted from the heated oxygen sensor 1. This feedback signal is then sent to the ECM. The ECM controls the basic mixture ratio as close to the theoretical mixture ratio as possible. However, the basic mixture ratio is not necessarily controlled as originally designed. Both manufacturing differences (i.e., mass air flow sensor hot wire) and characteristic changes during operation (i.e., injector clogging) directly affect mixture ratio.

Accordingly, the difference between the basic and theoretical mixture ratios is monitored in this system. This is then computed in terms of "injection pulse duration" to automatically compensate for the difference between the two ratios.

"Fuel trim" refers to the feedback compensation value compared against the basic injection duration. Fuel trim includes short term fuel trim and long term fuel trim.

"Short term fuel trim" is the short-term fuel compensation used to maintain the mixture ratio at its theoretical value. The signal from the heated oxygen sensor 1 indicates whether the mixture ratio is RICH or LEAN compared to the theoretical value. The signal then triggers a reduction in fuel volume if the mixture ratio is rich, and an increase in fuel volume if it is lean.


"Long term fuel trim" is overall fuel compensation carried out long-term to compensate for continual deviation of the short term fuel trim from the central value. Such deviation will occur due to individual engine differences, wear over time and changes in the usage environment.

ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION

Multiport Fuel Injection (MFI) System (Cont'd)

Fuel Injection Timing

NBEC0014S07

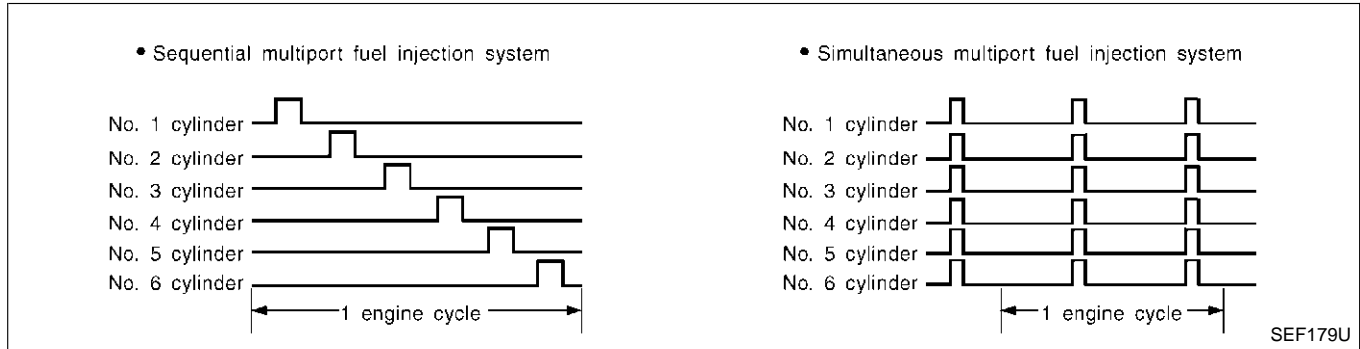

Two types of systems are used.

Sequential Multipoint Fuel Injection System

NBEC0014S0701

Fuel is injected into each cylinder during each engine cycle according to the firing order. This system is used when the engine is running.

Simultaneous Multipoint Fuel Injection System

NBEC0014S0702

Fuel is injected simultaneously into all six cylinders twice each engine cycle. In other words, pulse signals of the same width are simultaneously transmitted from the ECM.

The six injectors will then receive the signals two times for each engine cycle.

This system is used when the engine is being started and/or if the fail-safe system (CPU) is operating.

Fuel Shut-off

NBEC0014S08

Fuel to each cylinder is cut off during deceleration or operation of the engine at excessively high speeds.

Electronic Ignition (EI) System

DESCRIPTION

Input/Output Signal Chart


NBEC0015

NBEC0015S01

Sensor	Input Signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS)	Engine speed (POS signal)	Ignition timing control	Power transistor
Crankshaft position sensor (REF)	Engine speed (REF signal)		
Camshaft position sensor (PHASE)	Piston position		
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Throttle position sensor	Throttle position Throttle valve idle position		
Vehicle speed sensor	Vehicle speed		
Ignition switch	Start signal		
Knock sensor	Engine knocking		
Park/neutral position (PNP) switch	Gear position		
Battery	Battery voltage		

System Description

NBEC0015S02

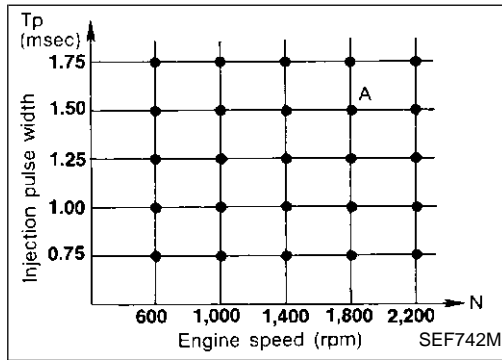

The ignition timing is controlled by the ECM to maintain the best air-fuel ratio for every running condition of the engine. The ignition timing data is stored in the ECM. This data forms the map shown.

The ECM receives information such as the injection pulse width and camshaft position sensor signal. Computing this information, ignition signals are transmitted to the power transistor.

e.g., N: 1,800 rpm, Tp: 1.50 msec
A °BTDC

During the following conditions, the ignition timing is revised by the ECM according to the other data stored in the ECM.

- At starting
- During warm-up
- At idle
- At low battery voltage
- During acceleration

The knock sensor retard system is designed only for emergencies. The basic ignition timing is programmed within the anti-knocking zone, if recommended fuel is used under dry conditions. The retard system does not operate under normal driving conditions. If engine knocking occurs, the knock sensor monitors the condition. The signal is transmitted to the ECM. The ECM retards the ignition timing to eliminate the knocking condition.

Air Conditioning Cut Control

DESCRIPTION

Input/Output Signal Chart

NBEC0016

NBEC0016S01

Sensor	Input Signal to ECM	ECM function	Actuator
Air conditioner switch	Air conditioner "ON" signal	Air conditioner cut control	Air conditioner relay
Throttle position sensor	Throttle valve opening angle		
Crankshaft position sensor (POS)	Engine speed (POS signal)		
Crankshaft position sensor (REF)	Engine speed (REF signal)		
Engine coolant temperature sensor	Engine coolant temperature		
Ignition switch	Start signal		
Vehicle speed sensor	Vehicle speed		
Refrigerant pressure sensor	Refrigerant pressure		
Power steering oil pressure switch	Power steering operation		

System Description

NBEC0016S02

This system improves engine operation when the air conditioner is used. Under the following conditions, the air conditioner is turned off.

- When the accelerator pedal is fully depressed.
- When cranking the engine.
- At high engine speeds.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION

Air Conditioning Cut Control (Cont'd)

- When the engine coolant temperature becomes excessively high.
- When operating power steering during low engine speed or low vehicle speed.
- When engine speed is excessively low.
- When refrigerant pressure is excessively low or high.

Fuel Cut Control (at no load & high engine speed)

DESCRIPTION

Input/Output Signal Chart

NBEC0017

NBEC0017S01

Sensor	Input Signal to ECM	ECM function	Actuator
Vehicle speed sensor	Vehicle speed	Fuel cut control	Injectors
Park/neutral position (PNP) switch	Neutral position		
Throttle position sensor	Throttle position		
Engine coolant temperature sensor	Engine coolant temperature		
Crankshaft position sensor (POS)	Engine speed (POS signal)		
Crankshaft position sensor (REF)	Engine speed (REF signal)		

If the engine speed is above 1,800 rpm with no load (for example, in neutral and engine speed over 1,800 rpm) fuel will be cut off after some time. The exact time when the fuel is cut off varies based on engine speed. Fuel cut will operate until the engine speed reaches 1,500 rpm, then fuel cut is cancelled.


NOTE:

This function is different from deceleration control listed under "Multiport Fuel Injection (MFI) System", EC-30.

Evaporative Emission System

DESCRIPTION

NBEC0018

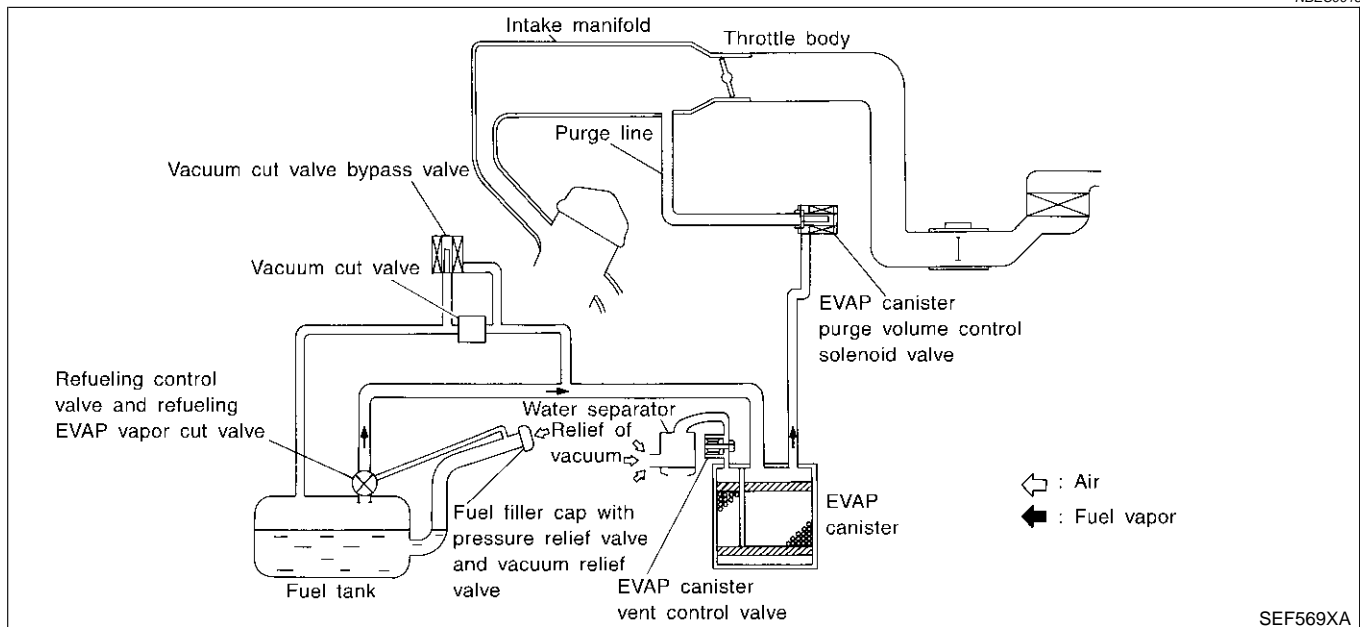

SEF569XA

The evaporative emission system is used to reduce hydrocarbons emitted into the atmosphere from the fuel system. This reduction of hydrocarbons is accomplished by activated charcoals in the EVAP canister. The fuel vapor in the sealed fuel tank is led into the EVAP canister which contains activated carbon and the vapor is stored there when the engine is not operating or when refueling to the fuel tank. The vapor in the EVAP canister is purged by the air through the purge line to the intake manifold when the engine is operating. EVAP canister purge volume control solenoid valve is controlled by ECM. When the engine

ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION

Evaporative Emission System (Cont'd)

operates, the flow rate of vapor controlled by EVAP canister purge volume control solenoid valve is proportionally regulated as the air flow increases.


EVAP canister purge volume control solenoid valve also shuts off the vapor purge line during decelerating and idling.

GI

MA

EM

LC

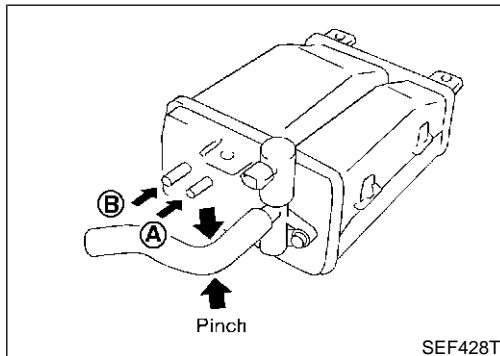

INSPECTION EVAP Canister

NBEC0019

NBEC0019S01

EC


Check EVAP canister as follows:

1. Pinch the fresh air hose.
2. Blow air into port A and check that it flows freely out of port B.

FE

AT

TF

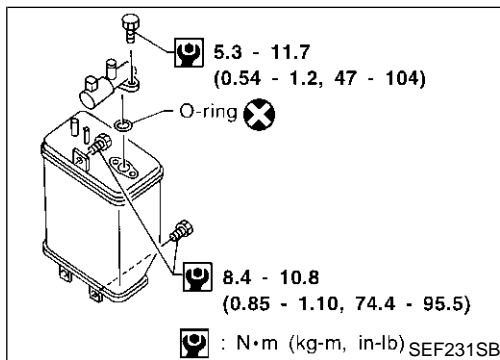

Tightening Torque

NBEC0019S02

Tighten EVAP canister as shown in the figure.


Make sure new O-ring is installed properly between EVAP canister and EVAP canister vent control valve.

PD

AX

SU

BR

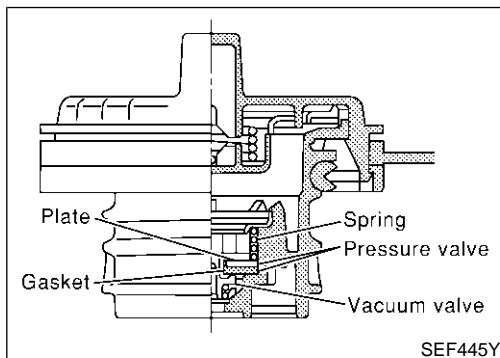

Fuel Tank Vacuum Relief Valve (Built into fuel filler cap)

NBEC0019S03

1. Wipe clean valve housing.
2. Check valve opening pressure and vacuum.

Pressure:

15.3 - 20.0 kPa (0.156 - 0.204 kg/cm², 2.22 - 2.90 psi)

Vacuum:

-6.0 to -3.3 kPa (-0.061 to -0.034 kg/cm², -0.87 to -0.48 psi)

3. If out of specification, replace fuel filler cap as an assembly.

CAUTION:

Use only a genuine fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may come on.


ST

RS

BT

HA

SC

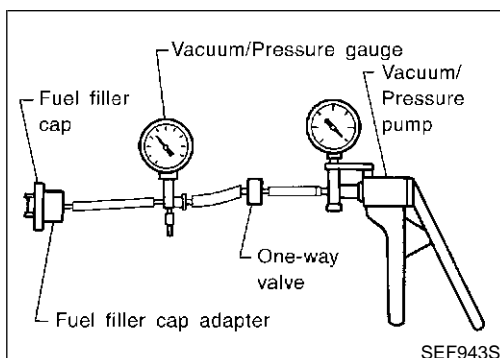

EL

IDX

ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION

Evaporative Emission System (Cont'd)

Vacuum Cut Valve and Vacuum Cut Valve Bypass Valve

NBEC0019S04

Refer to EC-650.

Evaporative Emission (EVAP) Canister Purge Volume Control Solenoid Valve


NBEC0019S05

Refer to EC-370.

Fuel Tank Temperature Sensor

NBEC0019S06


Refer to EC-297, 300.

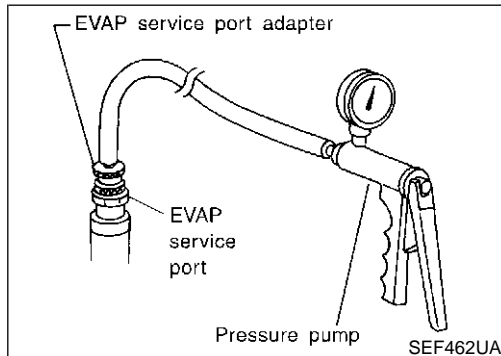

Evap Service Port

NBEC0019S07

Positive pressure is delivered to the EVAP system through the EVAP service port. If fuel vapor leakage in the EVAP system occurs, use a leak detector to locate the leak.

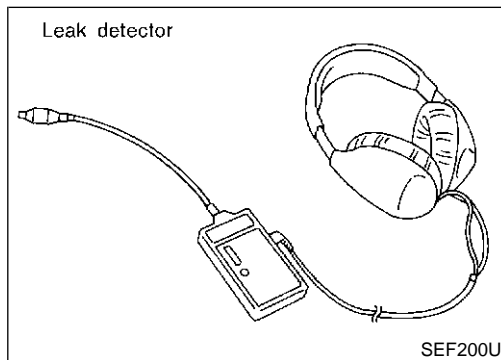

How to Detect Fuel Vapor Leakage

NBEC0019S08

CAUTION:

- Never use compressed air or a high pressure pump.
- Do not exceed 4.12 kPa (0.042 kg/cm², 0.6 psi) of pressure in EVAP system.



NOTE:

- Do not start engine.
- Improper installation of EVAP service port adapter to the EVAP service port may cause a leak.

ⓔ With CONSULT-II



NBEC0019S0801

- 1) Attach the EVAP service port adapter securely to the EVAP service port.
- 2) Also attach the pressure pump and hose to the EVAP service port adapter.
- 3) Turn ignition switch "ON".
- 4) Select the "EVAP SYSTEM CLOSE" of "WORK SUPPORT MODE" with CONSULT-II.
- 5) Touch "START". A bar graph (Pressure indicating display) will appear on the screen.
- 6) Apply positive pressure to the EVAP system until the pressure indicator reaches the middle of the bar graph.
- 7) Remove EVAP service port adapter and hose with pressure pump.
- 8) Locate the leak using a leak detector. Refer to "EVAPORATIVE EMISSION LINE DRAWING", EC-38.

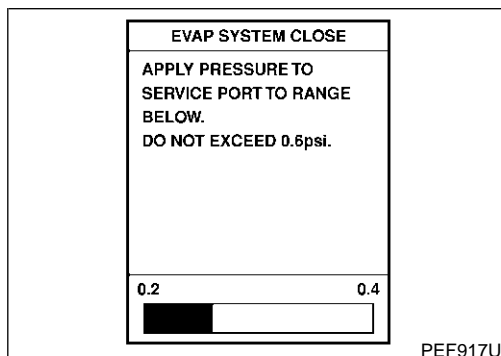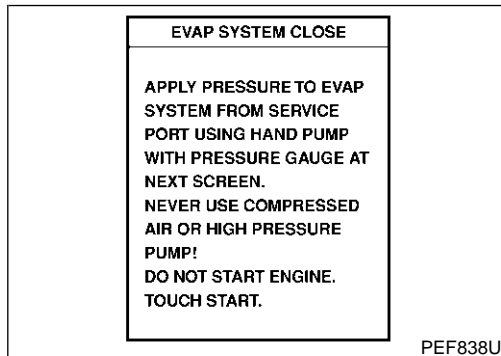

ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION

Evaporative Emission System (Cont'd)

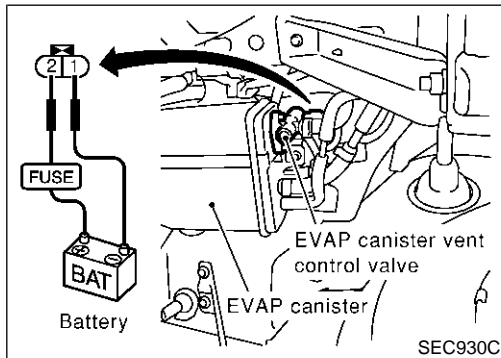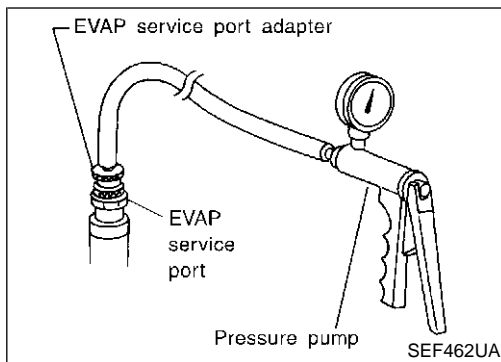

⊗ Without CONSULT-II

NBEC0019S0802

- 1) Attach the EVAP service port adapter securely to the EVAP service port.
- 2) Also attach the pressure pump with pressure gauge to the EVAP service port adapter.
- 3) Apply battery voltage to between the terminals of both EVAP canister vent control valve and vacuum cut valve bypass valve to make a closed EVAP system.
- 4) To locate the leak, deliver positive pressure to the EVAP system until pressure gauge points reach 1.38 to 2.76 kPa (0.014 to 0.028 kg/cm², 0.2 to 0.4 psi).
- 5) Remove EVAP service port adapter and hose with pressure pump.
- 6) Locate the leak using a leak detector. Refer to "EVAPORATIVE EMISSION LINE DRAWING", EC-38.

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL


IDX

ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION

Evaporative Emission System (Cont'd)

EVAPORATIVE EMISSION LINE DRAWING

NBEC0020

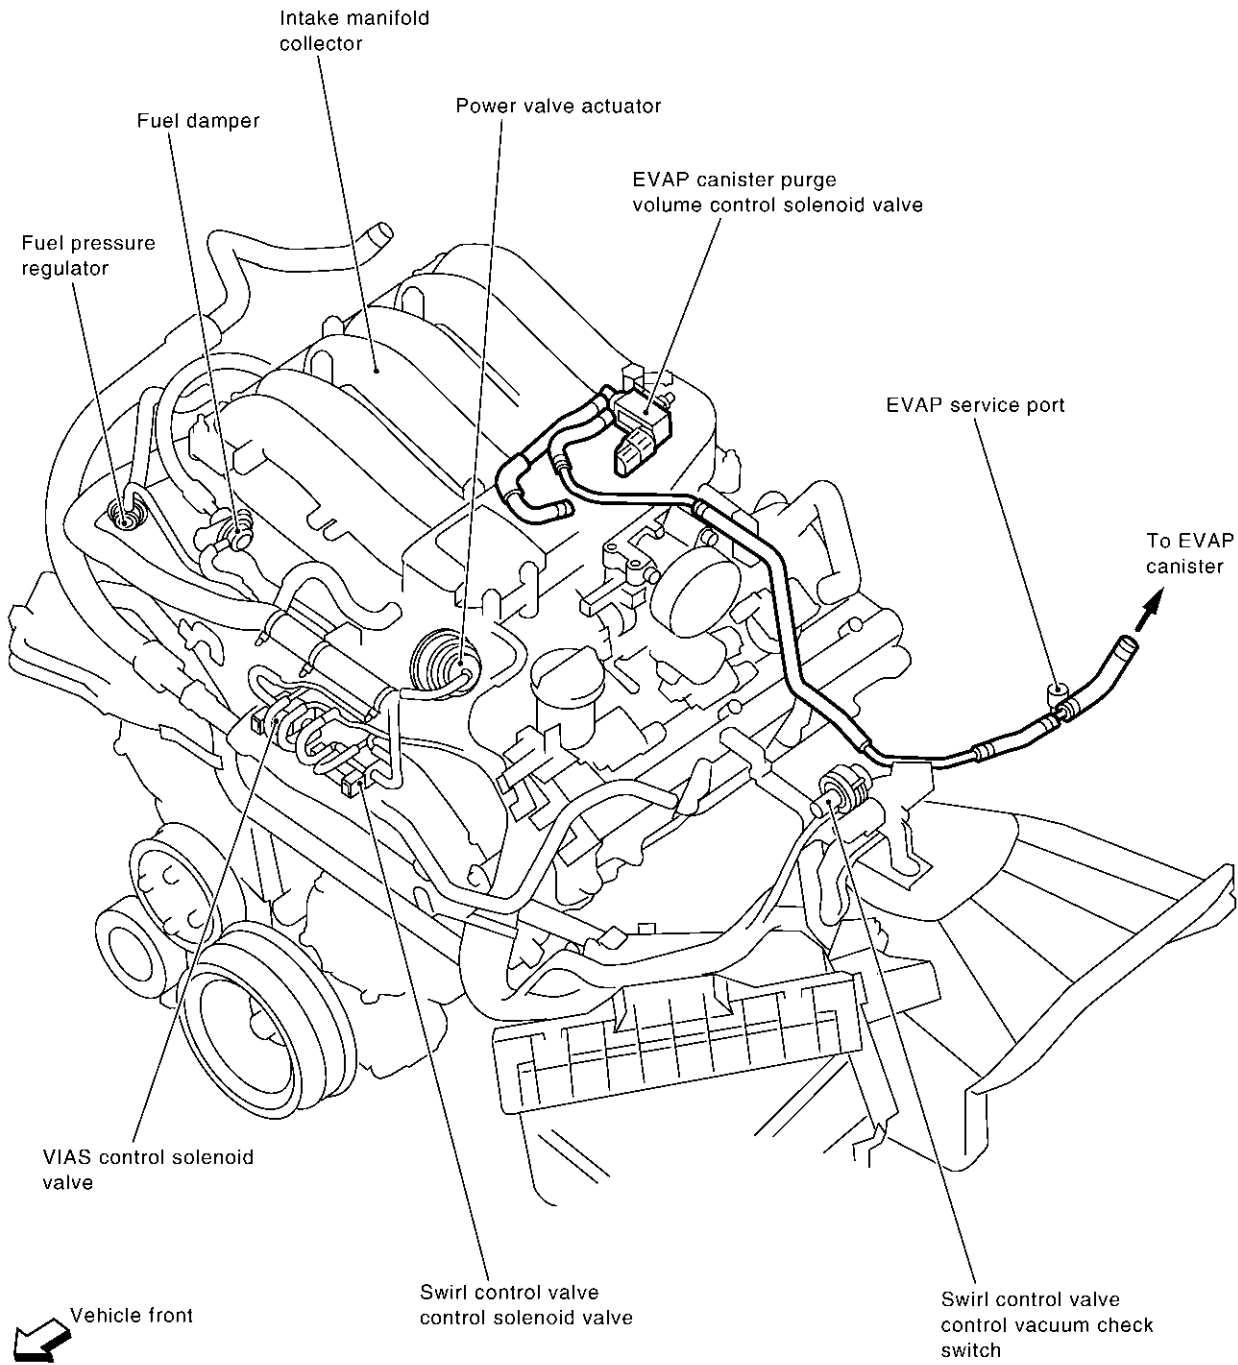

SEF954Z

ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION

Evaporative Emission System (Cont'd)

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS




BT

HA

SC

EL

IDX

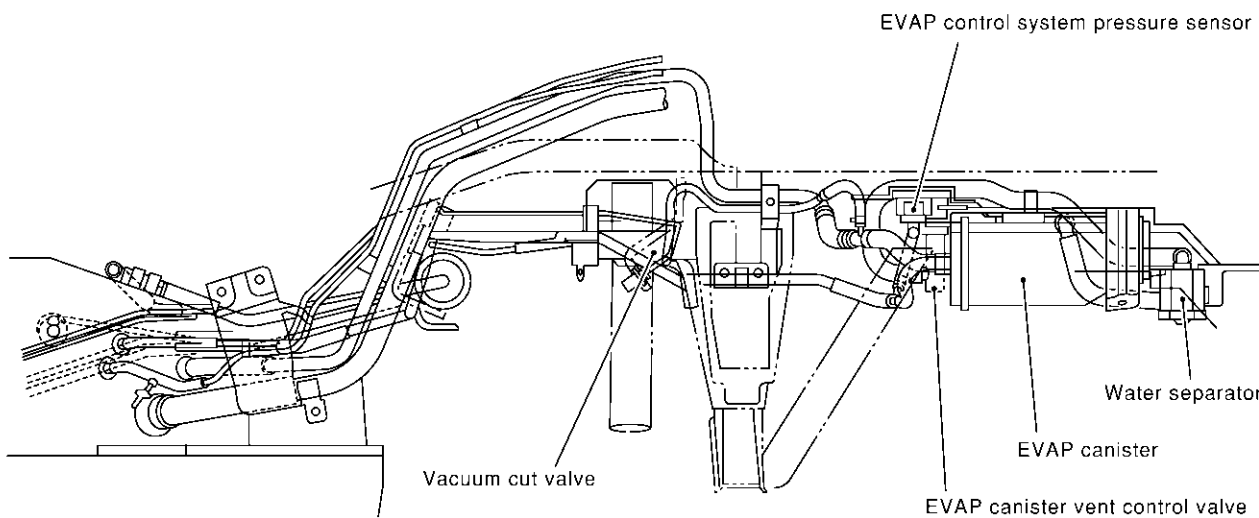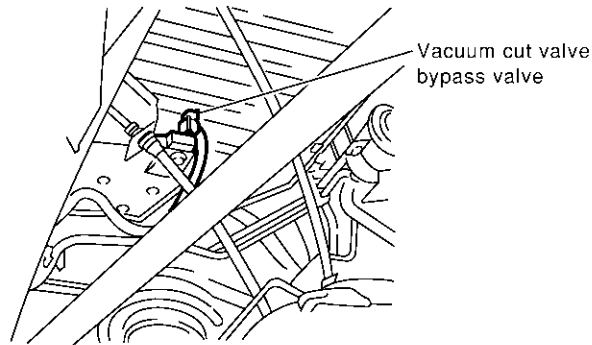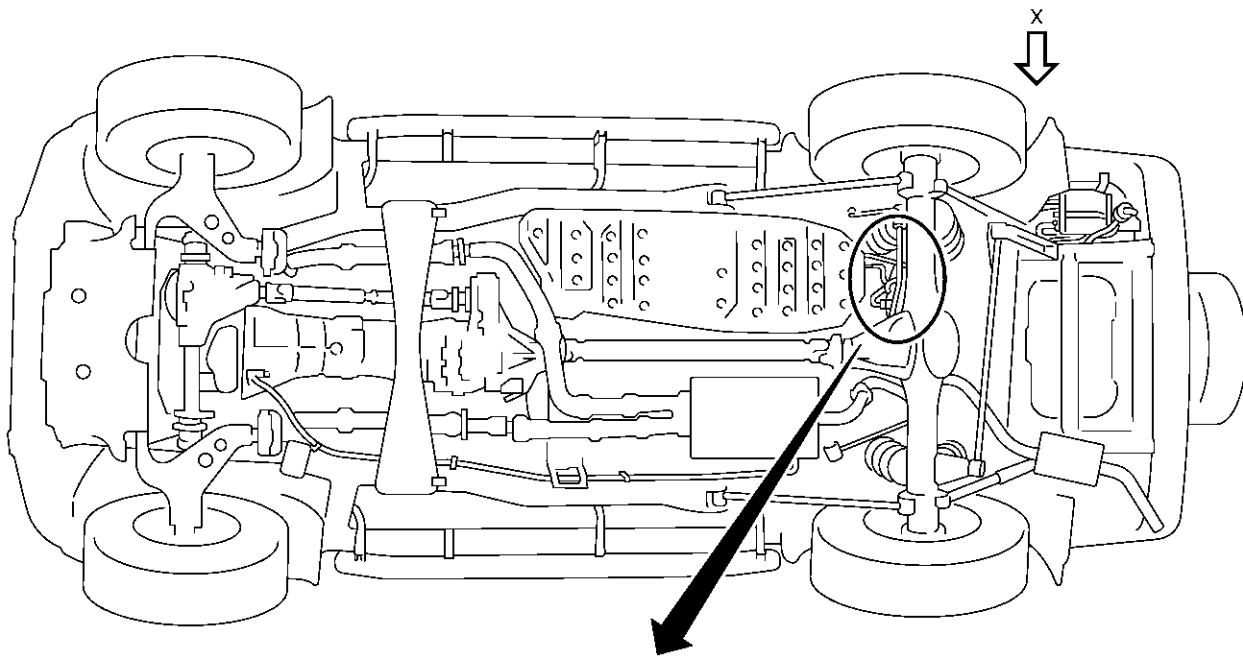

View X

SEC927C

ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION



On Board Refueling Vapor Recovery (ORVR)

On Board Refueling Vapor Recovery (ORVR)

NBEC0744

SYSTEM DESCRIPTION

NBEC0744S01

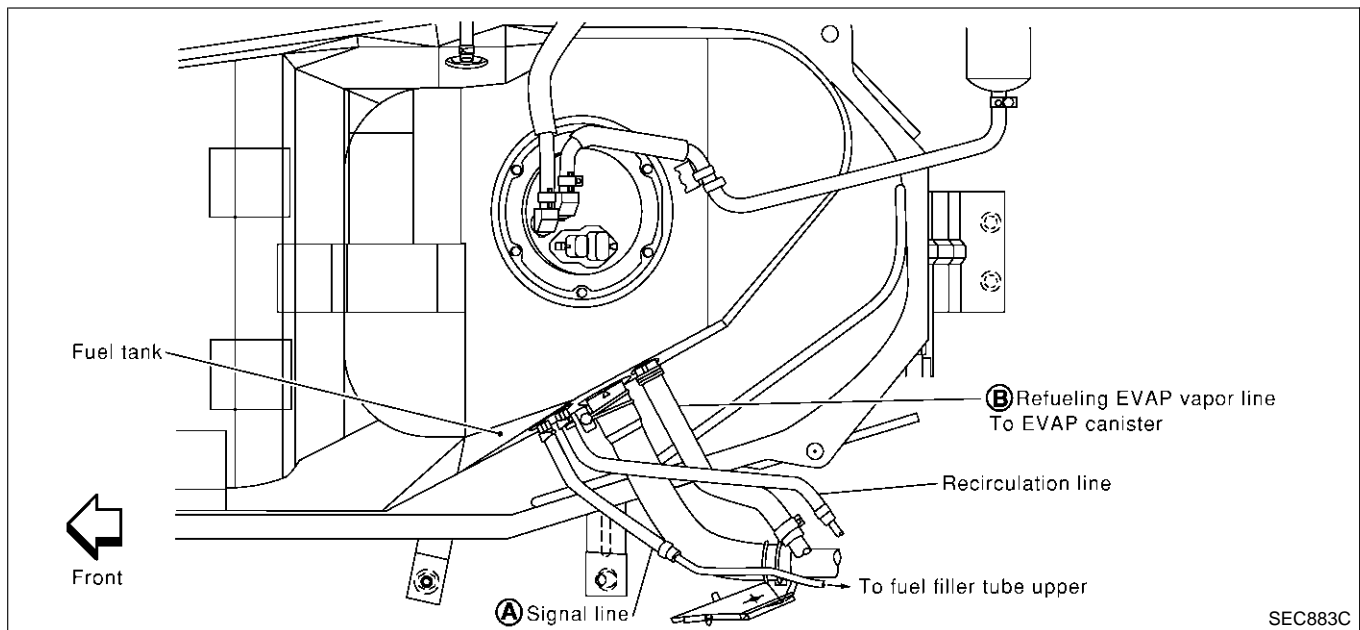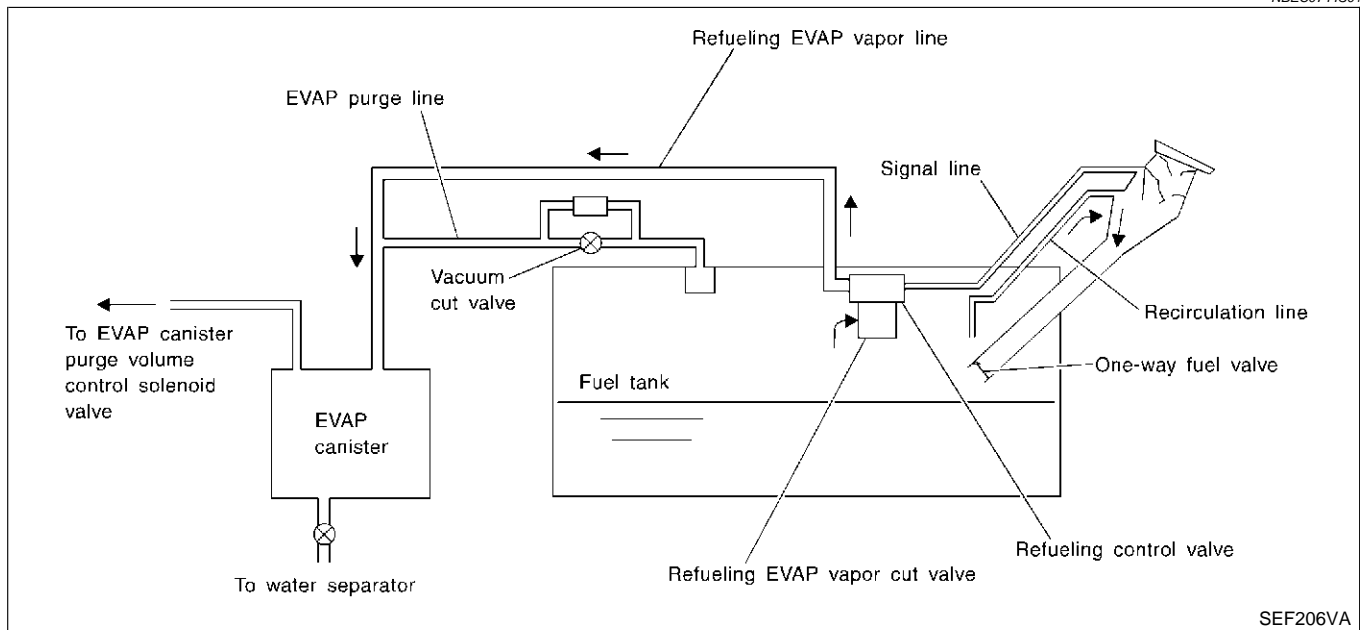

From the beginning of refueling, the fuel tank pressure goes up. When the pressure reaches the setting value of the refueling control valve (RCV) opening pressure, the RCV is opened. After RCV opens, the air and vapor inside the fuel tank go through refueling EVAP vapor cut valve, RCV and refueling vapor line to the EVAP canister. The vapor is absorbed by the EVAP canister and the air is released to the atmosphere.

When the refueling has reached the full level of the fuel tank, the refueling EVAP vapor cut valve is closed and refueling is stopped because of auto shut-off. The vapor which was absorbed by the EVAP canister is purged during driving.

The RCV is always closed during driving and the evaporative emission control system is operated the same as conventional system.

WARNING:

When conducting inspections below, be sure to observe the following:

- Put a "CAUTION: INFLAMMABLE" sign in workshop.
- Do not smoke while servicing fuel system. Keep open flames and sparks away from work area.
- Be sure to furnish the workshop with a CO₂ fire extinguisher.

ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION

On Board Refueling Vapor Recovery (ORVR) (Cont'd)

CAUTION:

- Before removing fuel line parts, carry out the following procedures:
 - a) Put drained fuel in an explosion-proof container and put lid on securely.
 - b) Release fuel pressure from fuel line. Refer to "Fuel Pressure Release", EC-51.
 - c) Disconnect battery ground cable.
- Always replace O-ring when the fuel gauge retainer is removed.
- Do not kink or twist hose and tube when they are installed.
- Do not tighten hose and clamps excessively to avoid damaging hoses.
- After installation, run engine and check for fuel leaks at connection.
- Do not attempt to top off the fuel tank after the fuel pump nozzle shuts off automatically. Continued refueling may cause fuel overflow, resulting in fuel spray and possibly a fire.


DIAGNOSTIC PROCEDURE

Symptom: Fuel Odor from EVAP Canister Is Strong.

NBEC0744S02

NBEC0744S0201

1	CHECK EVAP CANISTER	
	1. Remove EVAP canister with EVAP canister vent control valve attached. 2. Weigh the EVAP canister with EVAP canister vent control valve attached. The weight should be less than 1.8 kg (4.0 lb).	
	OK or NG	
OK	▶	GO TO 2.
NG	▶	GO TO 3.

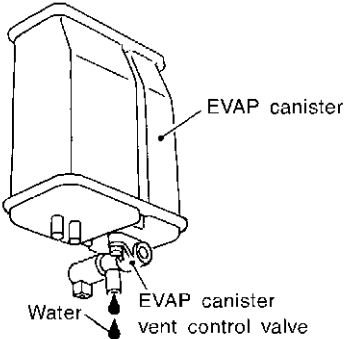2	CHECK IF EVAP CANISTER SATURATED WITH WATER	
	Does water drain from the EVAP canister?	
		
	Yes or No	
Yes	▶	GO TO 3.
No (With CONSULT-II)	▶	GO TO 6.
No (Without CONSULT-II)	▶	GO TO 7.

3	REPLACE EVAP CANISTER	
	Replace EVAP canister with a new one.	
	▶	GO TO 4.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION


On Board Refueling Vapor Recovery (ORVR) (Cont'd)

4	CHECK WATER SEPARATOR	
<p>1. Check visually for insect nests in the water separator air inlet. 2. Check visually for cracks or flaws in the appearance. 3. Check visually for cracks or flaws in the hose. 4. Check that A and C are not clogged by blowing air into B with A, and then C plugged.</p> <div style="text-align: center;"> <p>* (A) : Bottom hole (To atmosphere) (B) : Emergency tube (From EVAP canister) (C) : Inlet port (To member)</p> </div> <p style="text-align: right;">PBIB1032E</p> <p>5. In case of NG in items 2 - 4, replace the parts. NOTE: • Do not disassemble water separator.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 5.
NG	▶	Replace water separator.

5	DETECT MALFUNCTIONING PART	
Check the EVAP hose between EVAP canister and water separator for clogging or poor connection.		
	▶	Repair or replace EVAP hose.

ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION

On Board Refueling Vapor Recovery (ORVR) (Cont'd)

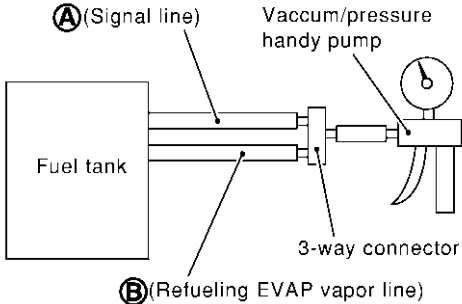6	CHECK REFUELING EVAP VAPOR CUT VALVE	
	<p>E With CONSULT-II</p> <ol style="list-style-type: none"> 1. Remove fuel tank. Refer to FE-4, "FUEL SYSTEM." 2. Drain fuel from the tank as follows: <ol style="list-style-type: none"> a. Remove fuel feed hose located on the fuel gauge retainer. b. Connect a spare fuel hose, one side to fuel gauge retainer where the hose was removed and the other side to a fuel container. c. Drain fuel using "FUEL PUMP RELAY" in "ACTIVE TEST" mode with CONSULT-II. 3. Check refueling EVAP vapor cut valve for being stuck to close as follows. Blow air into the refueling EVAP vapor cut valve (from hose end B), and check that the air flows freely into the tank. 4. Check EVAP vapor cut valve for being stuck to open as follows. <ol style="list-style-type: none"> a. Connect vacuum pump to hose ends A and B using a suitable 3-way connector. b. Remove fuel gauge retainer with fuel gauge unit. <p>Always replace O-ring with new one.</p> <ol style="list-style-type: none"> c. Put fuel tank upside down. d. Apply vacuum pressure to both hose ends A and B [-13.3 kPa (-100 mmHg, -3.94 inHg)] with fuel gauge retainer remaining open and check that the pressure is applicable. <div style="text-align: center;">  <p>The diagram illustrates the setup for testing the refueling EVAP vapor cut valve. A rectangular fuel tank is connected to a horizontal assembly. On the left, a line labeled 'A (Signal line)' enters the assembly. On the right, a 'Vacuum/pressure handy pump' is connected to the assembly. Below the pump, a '3-way connector' is shown. A line labeled 'B (Refueling EVAP vapor line)' exits the assembly from the bottom. The fuel tank is positioned upside down relative to the assembly.</p> </div> <p style="text-align: right;">SEF968X</p> <p style="text-align: center;">OK or NG</p>	
OK	▶	GO TO 8.
NG	▶	Replace refueling EVAP vapor cut valve with fuel tank.

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA


SC


EL

IDX

ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION

On Board Refueling Vapor Recovery (ORVR) (Cont'd)

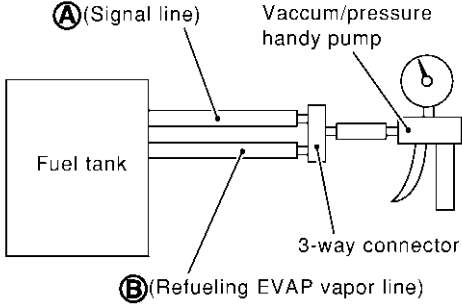7	CHECK REFUELING EVAP VAPOR CUT VALVE
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Remove fuel tank. Refer to FE-4, "FUEL SYSTEM". 2. Drain fuel from the tank as follows: <ol style="list-style-type: none"> a. Remove fuel gauge retainer. b. Drain fuel from the tank using a hand pump into a fuel container. 3. Check refueling EVAP vapor cut valve for being stuck to close as follows. Blow air into the refueling EVAP vapor cut valve (from hose end B), and check that the air flows freely into the tank. 4. Check EVAP vapor cut valve for being stuck to open as follows. <ol style="list-style-type: none"> a. Connect vacuum pump to hose ends A and B using a suitable 3-way connector. b. Remove fuel gauge retainer with fuel gauge unit. <p>Always replace O-ring with new one.</p> <ol style="list-style-type: none"> c. Put fuel tank upside down. d. Apply vacuum pressure to both hose ends A and B [-13.3 kPa (-100 mmHg, -3.94 inHg)] with fuel gauge retainer remaining open and check that the pressure is applicable. <div style="text-align: center;">  </div> <p style="text-align: right;">SEF968X</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 8.
NG	▶ Replace refueling EVAP vapor cut valve with fuel tank.

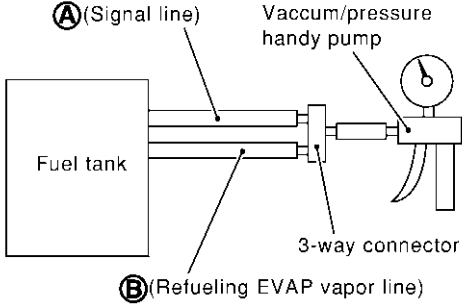8	CHECK REFUELING CONTROL VALVE
<ol style="list-style-type: none"> 1. Remove fuel filler cap. 2. Check air continuity between hose ends A and B. Blow air into the hose end B. Air should flow freely into the fuel tank. 3. Blow air into hose end A and check there is no leakage. 4. Apply pressure to both hose ends A and B [20 kPa (150 mmHg, 5.91 inHg)] using a pressure pump and a suitable 3-way connector. Check that there is no leakage. <div style="text-align: center;">  </div> <p style="text-align: right;">SEF968X</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ INSPECTION END
NG	▶ Replace refueling control valve with fuel tank.

ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION


On Board Refueling Vapor Recovery (ORVR) (Cont'd)

Symptom: Cannot Refuel/Fuel Odor From The Fuel Filler Opening Is Strong While Refueling.

NBEC0744S0202

1	CHECK EVAP CANISTER	
1. Remove EVAP canister with EVAP canister vent control valve attached. 2. Weigh the EVAP canister with EVAP canister vent control valve attached. The weight should be less than 1.8 kg (4.0 lb).		
OK or NG		
OK	▶	GO TO 2.
NG	▶	GO TO 3.

GI
MA
EM
LC

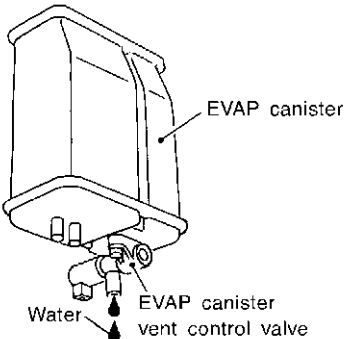2	CHECK IF EVAP CANISTER SATURATED WITH WATER	
Does water drain from the EVAP canister?		
		
Yes or No		
Yes	▶	GO TO 3.
No	▶	GO TO 6.

EC
FE
AT
TF
PD
AX

SEF596U

3	REPLACE EVAP CANISTER	
Replace EVAP canister with a new one.		
	▶	GO TO 4.

BR
ST
RS
BT
HA
SC
EL
IDX

ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION

On Board Refueling Vapor Recovery (ORVR) (Cont'd)

4	CHECK WATER SEPARATOR
<ol style="list-style-type: none"> 1. Check visually for insect nests in the water separator air inlet. 2. Check visually for cracks or flaws in the appearance. 3. Check visually for cracks or flaws in the hose. 4. Check that A and C are not clogged by blowing air into B with A, and then C plugged. 	
<p>* (A) : Bottom hole (To atmosphere) (B) : Emergency tube (From EVAP canister) (C) : Inlet port (To member)</p>	
PBIB1032E	
<ol style="list-style-type: none"> 5. In case of NG in items 2 - 4, replace the parts. 	
NOTE:	
<ul style="list-style-type: none"> ● Do not disassemble water separator. 	
OK or NG	
OK	▶ GO TO 5.
NG	▶ Replace water separator.


5	DETECT MALFUNCTIONING PART
Check the EVAP hose between EVAP canister and water separator for clogging or poor connection.	
▶	Repair or replace EVAP hose.

6	CHECK VENT HOSES AND VENT TUBES
Check hoses and tubes between EVAP canister and refueling control valve for clogging, kink, looseness and improper connection.	
OK or NG	
OK	▶ GO TO 7.
NG	▶ Repair or replace hoses and tubes.


7	CHECK FILLER NECK TUBE
Check signal line and recirculation line for clogging, dents and cracks.	
OK or NG	
OK	▶ GO TO 8.
NG	▶ Replace filler neck tube.

ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION

On Board Refueling Vapor Recovery (ORVR) (Cont'd)

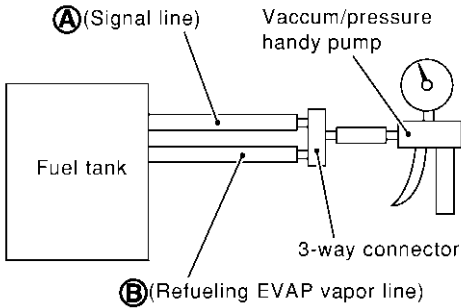8	CHECK REFUELING CONTROL VALVE	
<ol style="list-style-type: none"> 1. Remove fuel filler cap. 2. Check air continuity between hose ends A and B. Blow air into the hose end B. Air should flow freely into the fuel tank. 3. Blow air into hose end A and check there is no leakage. 4. Apply pressure to both hose ends A and B [20 kPa (150 mmHg, 5.91 inHg)] using a pressure pump and a suitable 3-way connector. Check that there is no leakage. 	 <p style="text-align: center;">OK or NG</p>	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p>EC</p> <p>FE</p> <p>AT</p>
OK (With CONSULT-II)	▶	GO TO 9.
OK (Without CONSULT-II)	▶	GO TO 10.
NG	▶	Replace refueling control valve with fuel tank.


SEF968X

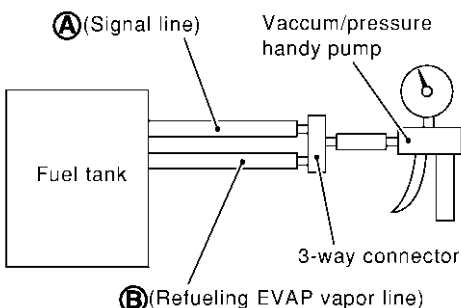9	CHECK REFUELING EVAP VAPOR CUT VALVE	
<p>(E) With CONSULT-II</p> <ol style="list-style-type: none"> 1. Remove fuel tank. Refer to FE-4, "FUEL SYSTEM". 2. Drain fuel from the tank as follows: <ol style="list-style-type: none"> a. Remove fuel feed hose located on the fuel gauge retainer. b. Connect a spare fuel hose, one side to fuel gauge retainer where the hose was removed and the other side to a fuel container. 3. Drain fuel using "FUEL PUMP RELAY" in "ACTIVE TEST" mode with CONSULT-II. 3. Check refueling EVAP vapor cut valve for being stuck to close as follows. Blow air into the refueling EVAP vapor cut valve (from hose end B), and check that the air flows freely into the tank. 4. Check EVAP vapor cut valve for being stuck to open as follows. <ol style="list-style-type: none"> a. Connect vacuum pump to hose ends A and B using a suitable 3-way connector. b. Remove fuel gauge retainer with fuel gauge unit. Always replace O-ring with new one. c. Put fuel tank upside down. d. Apply vacuum pressure to both hose ends A and B [-13.3 kPa (-100 mmHg, -3.94 inHg)] with fuel gauge retainer remaining open and check that the pressure is applicable. 	 <p style="text-align: center;">OK or NG</p>	<p>AX</p> <p>SU</p> <p>BR</p> <p>ST</p> <p>RS</p> <p>BT</p> <p>HA</p> <p>SC</p> <p>EL</p> <p>IDX</p>
OK	▶	GO TO 11.
NG	▶	Replace refueling EVAP vapor cut valve with fuel tank.

SEF968X

ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION

On Board Refueling Vapor Recovery (ORVR) (Cont'd)

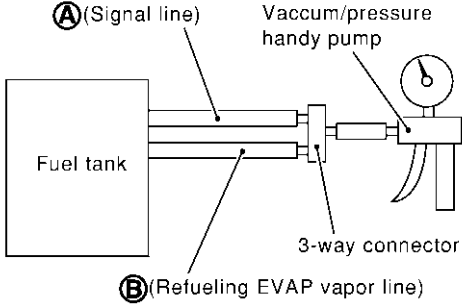
10	CHECK REFUELING EVAP VAPOR CUT VALVE
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Remove fuel tank. Refer to FE-4, "FUEL SYSTEM". 2. Drain fuel from the tank as follows: <ol style="list-style-type: none"> a. Remove fuel gauge retainer. b. Drain fuel from the tank using a hand pump into a fuel container. 3. Check refueling EVAP vapor cut valve for being stuck to close as follows. Blow air into the refueling EVAP vapor cut valve (from hose end B), and check that the air flows freely into the tank. 4. Check EVAP vapor cut valve for being stuck to open as follows. <ol style="list-style-type: none"> a. Connect vacuum pump to hose ends A and B using a suitable 3-way connector. b. Remove fuel gauge retainer with fuel gauge unit. <p>Always replace O-ring with new one.</p> <ol style="list-style-type: none"> c. Put fuel tank upside down. d. Apply vacuum pressure to both hose ends A and B [-13.3 kPa (-100 mmHg, -3.94 inHg)] with fuel gauge retainer remaining open and check that the pressure is applicable. <div style="text-align: center;">  </div> <p style="text-align: right;">SEF968X</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 11.
NG	▶ Replace refueling EVAP vapor cut valve with fuel tank.

11	CHECK FUEL FILLER TUBE
<p>Check filler neck tube and hose connected to the fuel tank for clogging, dents and cracks.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 12.
NG	▶ Replace fuel filler tube.


12	CHECK ONE-WAY FUEL VALVE-I
<p>Check one-way valve for clogging.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 13.
NG	▶ Repair or replace one-way fuel valve with fuel tank.

ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION

On Board Refueling Vapor Recovery (ORVR) (Cont'd)

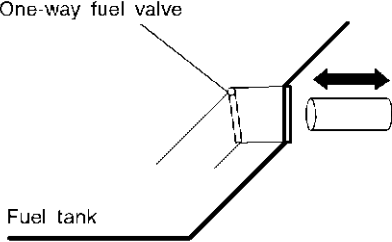13	CHECK ONE-WAY FUEL VALVE-II
<p>1. Make sure that fuel is drained from the tank. 2. Remove fuel filler tube and hose. 3. Check one-way fuel valve for operation as follows. When a stick is inserted, the valve should open, when removing stick it should close.</p> <p style="text-align: center;">After removing filler tube</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF665U</p>	
Do not drop any material into the tank.	
OK or NG	
OK	▶ INSPECTION END
NG	▶ Replace fuel filler tube or replace one-way fuel valve with fuel tank.



GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

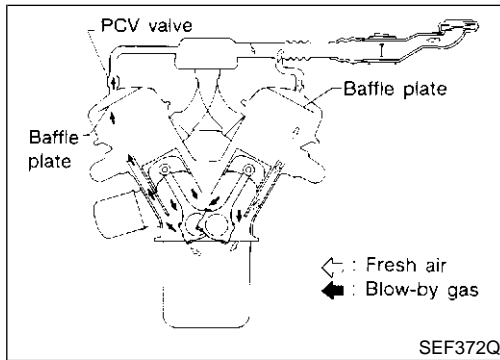

Positive Crankcase Ventilation DESCRIPTION

NBEC0021

This system returns blow-by gas to the intake manifold. The positive crankcase ventilation (PCV) valve is provided to conduct crankcase blow-by gas to the intake manifold. During partial throttle operation of the engine, the intake manifold sucks the blow-by gas through the PCV valve. Normally, the capacity of the valve is sufficient to handle any blow-by and a small amount of ventilating air. The ventilating air is then drawn from the air inlet tubes into the crankcase. In this process the air passes through the hose connecting air inlet tubes to rocker cover. Under full-throttle condition, the manifold vacuum is insufficient to draw the blow-by flow through the valve. The flow goes through the hose connection in the reverse direction. On vehicles with an excessively high blow-by, the valve does not meet the requirement. This is because some of the flow will go through the hose connection to the air inlet tubes under all conditions.

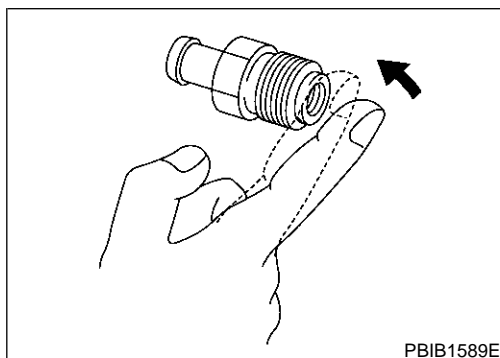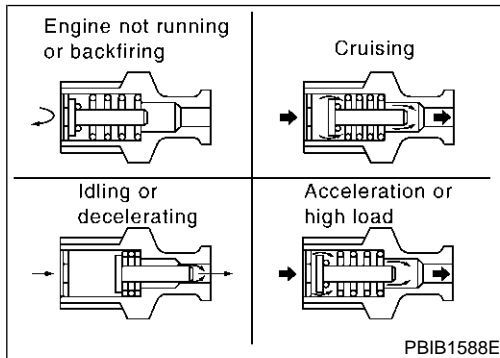

INSPECTION

NBEC0022


PCV (Positive Crankcase Ventilation) Valve

NBEC0022S01

With engine running at idle, remove PCV valve ventilation hose from PCV valve; if the valve is working properly, a hissing noise will be heard as air passes through it and a strong vacuum should be felt immediately when a finger is placed over valve inlet.

ENGINE AND EMISSION BASIC CONTROL SYSTEM DESCRIPTION





Positive Crankcase Ventilation (Cont'd)

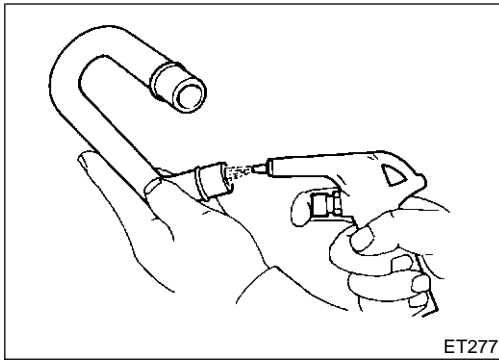

PCV Valve Ventilation Hose

NBEC0022S02

1. Check hoses and hose connections for leaks.
2. Disconnect all hoses and clean with compressed air. If any hose cannot be freed of obstructions, replace.

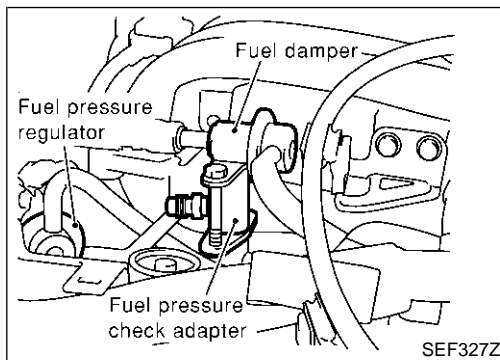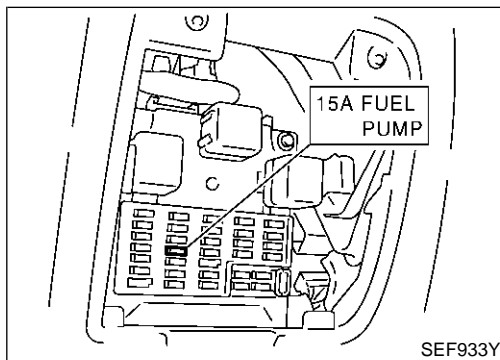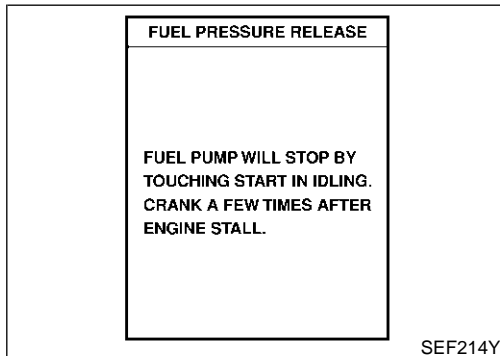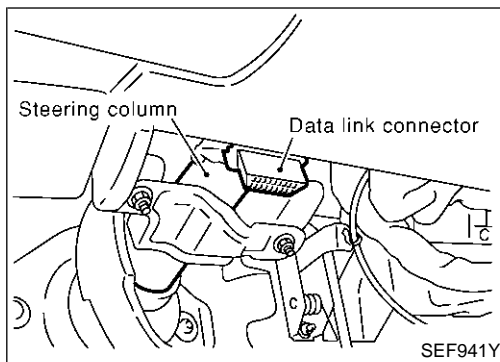

Fuel Pressure Release

NBEC0023

Ⓜ WITH CONSULT-II

NBEC0023S01

1. Turn ignition switch "ON".
2. Perform "FUEL PRESSURE RELEASE" in "WORK SUPPORT" mode with CONSULT-II.
3. Start engine.
4. After engine stalls, crank it two or three times to release all fuel pressure.
5. Turn ignition switch "OFF".

GI

MA

EM

LC

EC

FE

AT

TF

ⓧ WITHOUT CONSULT-II

NBEC0023S02

1. Remove fuel pump fuse located in fuse box.
2. Start engine.
3. After engine stalls, crank it two or three times to release all fuel pressure.
4. Turn ignition switch "OFF".
5. Reinstall fuel pump fuse after servicing fuel system.

PD

AX

SU

BR

Fuel Pressure Check

NBEC0024

Before disconnecting fuel line, release fuel pressure from fuel line to eliminate danger.

- When reconnecting fuel line, always use new clamps.
- Make sure that clamp screw does not contact adjacent parts.
- Use a torque driver to tighten clamps.
- Use Pressure Gauge to check fuel pressure.
- Do not perform fuel pressure check with electrical system operating (i.e. lights, rear window defogger, A/C, etc.). Fuel pressure gauge may indicate false readings due to varying engine loads and change in manifold vacuum.

ST

RS

BT

HA

SC


1. Release fuel pressure to zero.
2. Disconnect fuel tube joint between fuel damper and injector tube and set fuel pressure check adapter (J44321).

EL

IDX

BASIC SERVICE PROCEDURE

Fuel Pressure Check (Cont'd)

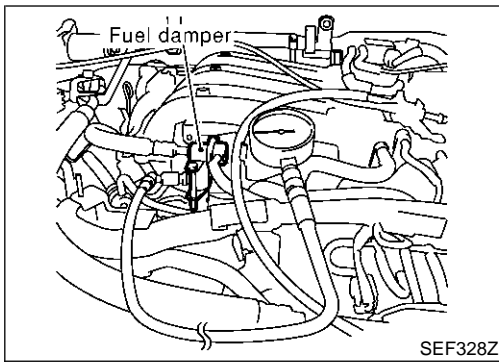

3. Install pressure gauge to the fuel pressure check adapter as shown in the figure.
4. Start engine and check for fuel leakage.
5. Read the indication of fuel pressure gauge.

At idling:


With vacuum hose connected

Approximately 235 kPa (2.4 kg/cm², 34 psi)

With vacuum hose disconnected

Approximately 294 kPa (3.0 kg/cm², 43 psi)


If results are unsatisfactory, perform Fuel Pressure Regulator Check.

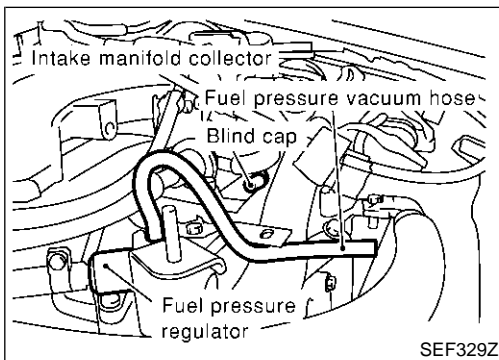

Fuel Pressure Regulator Check



NBEC0025

1. Stop engine and disconnect fuel pressure regulator vacuum hose from vacuum gallery.
2. Plug vacuum gallery with a blind cap.
3. Connect variable vacuum source to fuel pressure regulator.

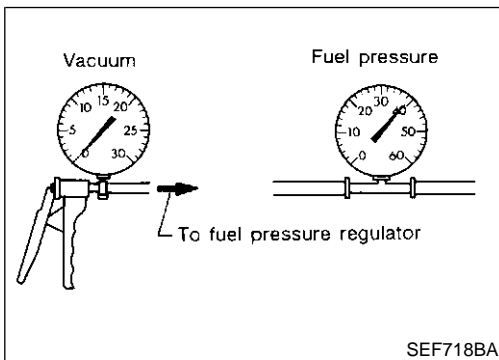

4. Start engine and read indication of fuel pressure gauge as vacuum is changed.


Fuel pressure should decrease as vacuum increases. If results are unsatisfactory, replace fuel pressure regulator.

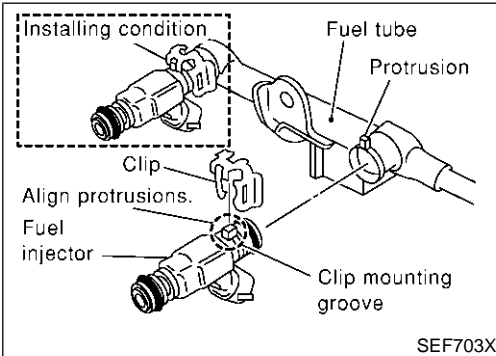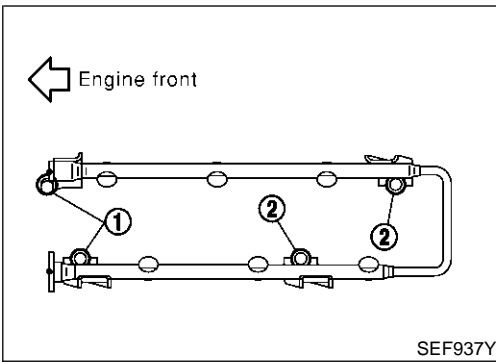

Injector REMOVAL AND INSTALLATION

NBEC0026

1. Release fuel pressure to zero.
2. Remove intake manifold collector. Refer to EM-21, "TIMING CHAIN".
3. Remove fuel tube assemblies in numerical sequence as shown in the figure at left.
4. Expand and remove clips securing fuel injectors.
5. Extract fuel injectors straight from fuel tubes.
 - **Be careful not to damage injector nozzles during removal.**
 - **Do not bump or drop fuel injectors.**
6. Carefully install O-rings, including the one used with the pressure regulator.
 - **Lubricate O-rings with a smear of engine oil.**
 - **Be careful not to damage O-rings with service tools, finger nails or clips. Do not expand or twist O-rings.**
 - **Discard old clips; replace with new ones.**
7. Position clips in grooves on fuel injectors.
 - **Make sure that protrusions of fuel injectors are aligned with cutouts of clips after installation.**

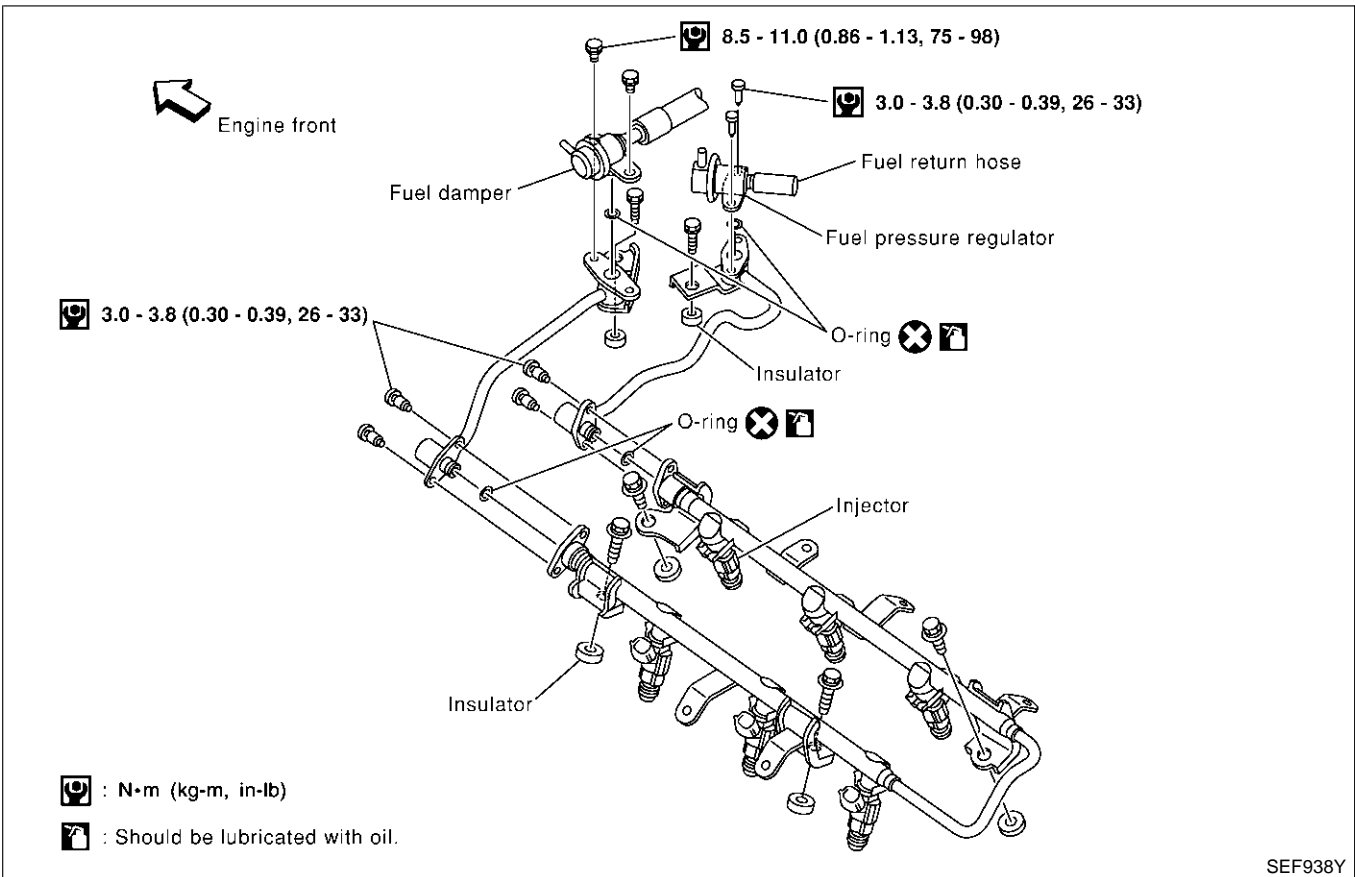


8. Align protrusions of fuel tubes with those of fuel injectors. Insert fuel injectors straight into fuel tubes.
9. After properly inserting fuel injectors, check to make sure that fuel tube protrusions are engaged with those of fuel injectors, and that flanges of fuel tubes are engaged with clips.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL

BASIC SERVICE PROCEDURE

Injector (Cont'd)

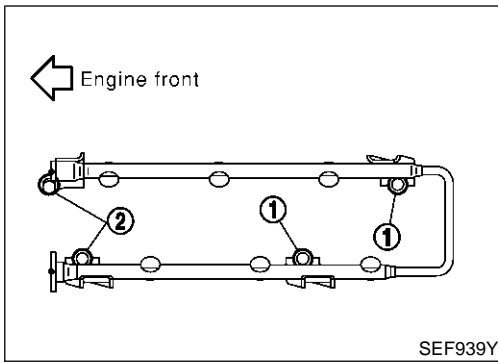

10. Tighten fuel tube assembly mounting nuts in numerical sequence (indicated in the figure at left) and in two stages.

: Tightening torque N-m (kg-m, ft-lb)

1st stage:

9.3 - 10.8 (1.0 - 1.1, 6.9 - 7.9)

2nd stage:

20.6 - 26.5 (2.1 - 2.7, 16 - 19)

11. Install all parts removed in reverse order of removal.

CAUTION:

After properly connecting fuel tube assembly to injector and fuel hose, check connection for fuel leakage.

How to Check Idle Speed and Ignition Timing

NBEC0607

NBEC0607S01



IDLE SPEED

With CONSULT-II

Check idle speed in "DATA MONITOR" mode with CONSULT-II.

With GST

Check idle speed with GST.

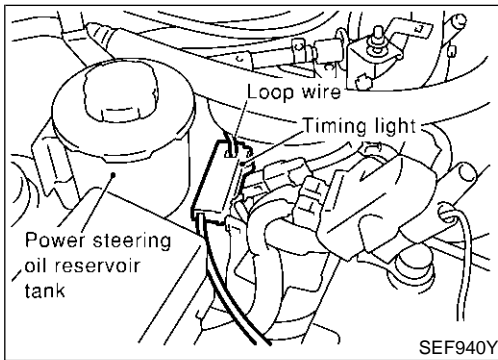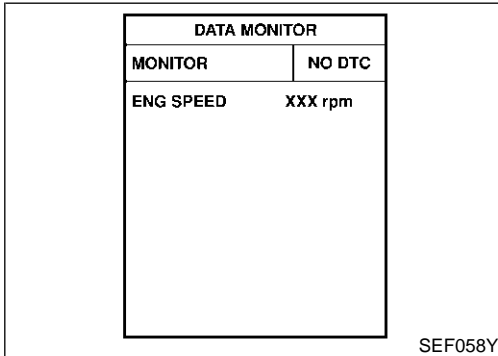

IGNITION TIMING

NBEC0607S02


Any of following two methods may be used.

- **Method A**

- Attach timing light to loop wire as shown.
- Check ignition timing.


- **Method B**

- Remove No. 1 ignition coil.


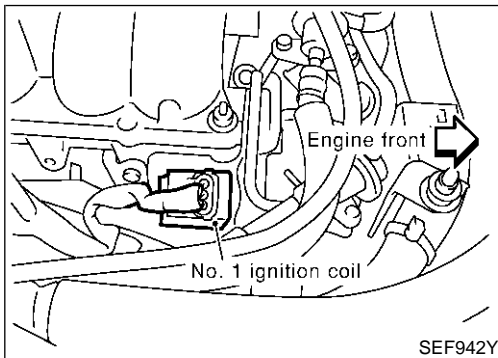


BASIC SERVICE PROCEDURE

How to Check Idle Speed and Ignition Timing (Cont'd)

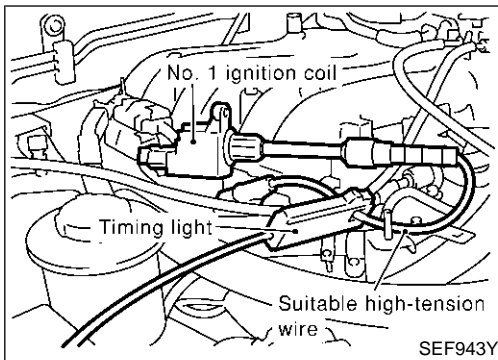

- b) Connect No. 1 ignition coil and No. 1 spark plug with suitable high-tension wire as shown, and attach timing light clamp to this wire.
- c) Check ignition timing.

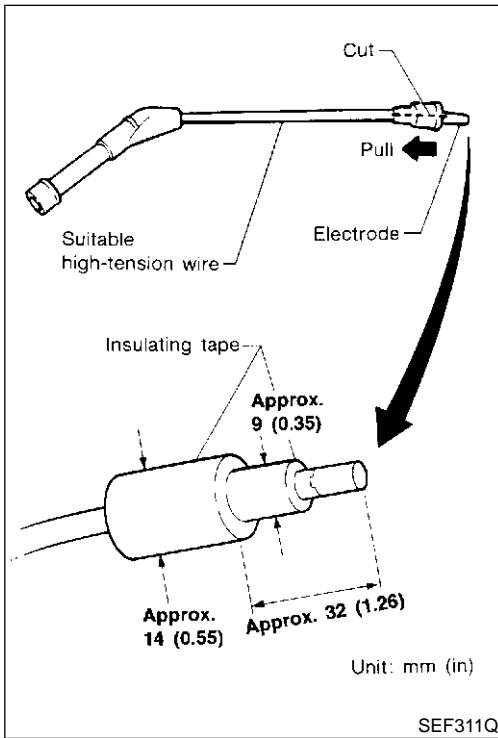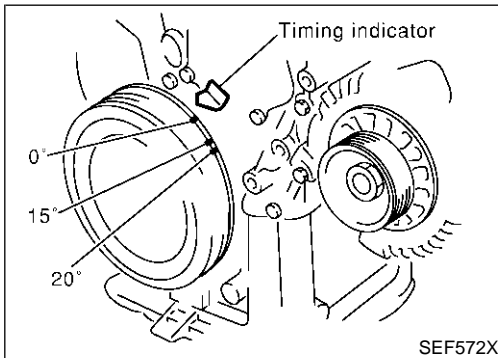

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment

PREPARATION

- 1) Make sure that the following parts are in good order.
 - Battery
 - Ignition system
 - Engine oil and coolant levels
 - Fuses
 - ECM harness connector
 - Vacuum hoses

NBEC0028

NBEC0028S01

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

BASIC SERVICE PROCEDURE

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)


- Air intake system
(Oil filler cap, oil level gauge, etc.)
 - Fuel pressure
 - Engine compression
 - Throttle valve
 - Evaporative emission system
- 2) On air conditioner equipped models, checks should be carried out while the air conditioner is "OFF".
 - 3) On automatic transmission equipped models, when checking idle rpm, ignition timing and mixture ratio, checks should be carried out while shift lever is in "N" position.
 - 4) When measuring "CO" percentage, insert probe more than 40 cm (15.7 in) into tail pipe.
 - 5) Turn off headlamps, heater blower, rear defogger.
 - 6) Keep front wheels pointed straight ahead.
 - 7) Make the check after the cooling fan has stopped.

BASIC SERVICE PROCEDURE

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

Overall Inspection Sequence

NBEC0028S0101

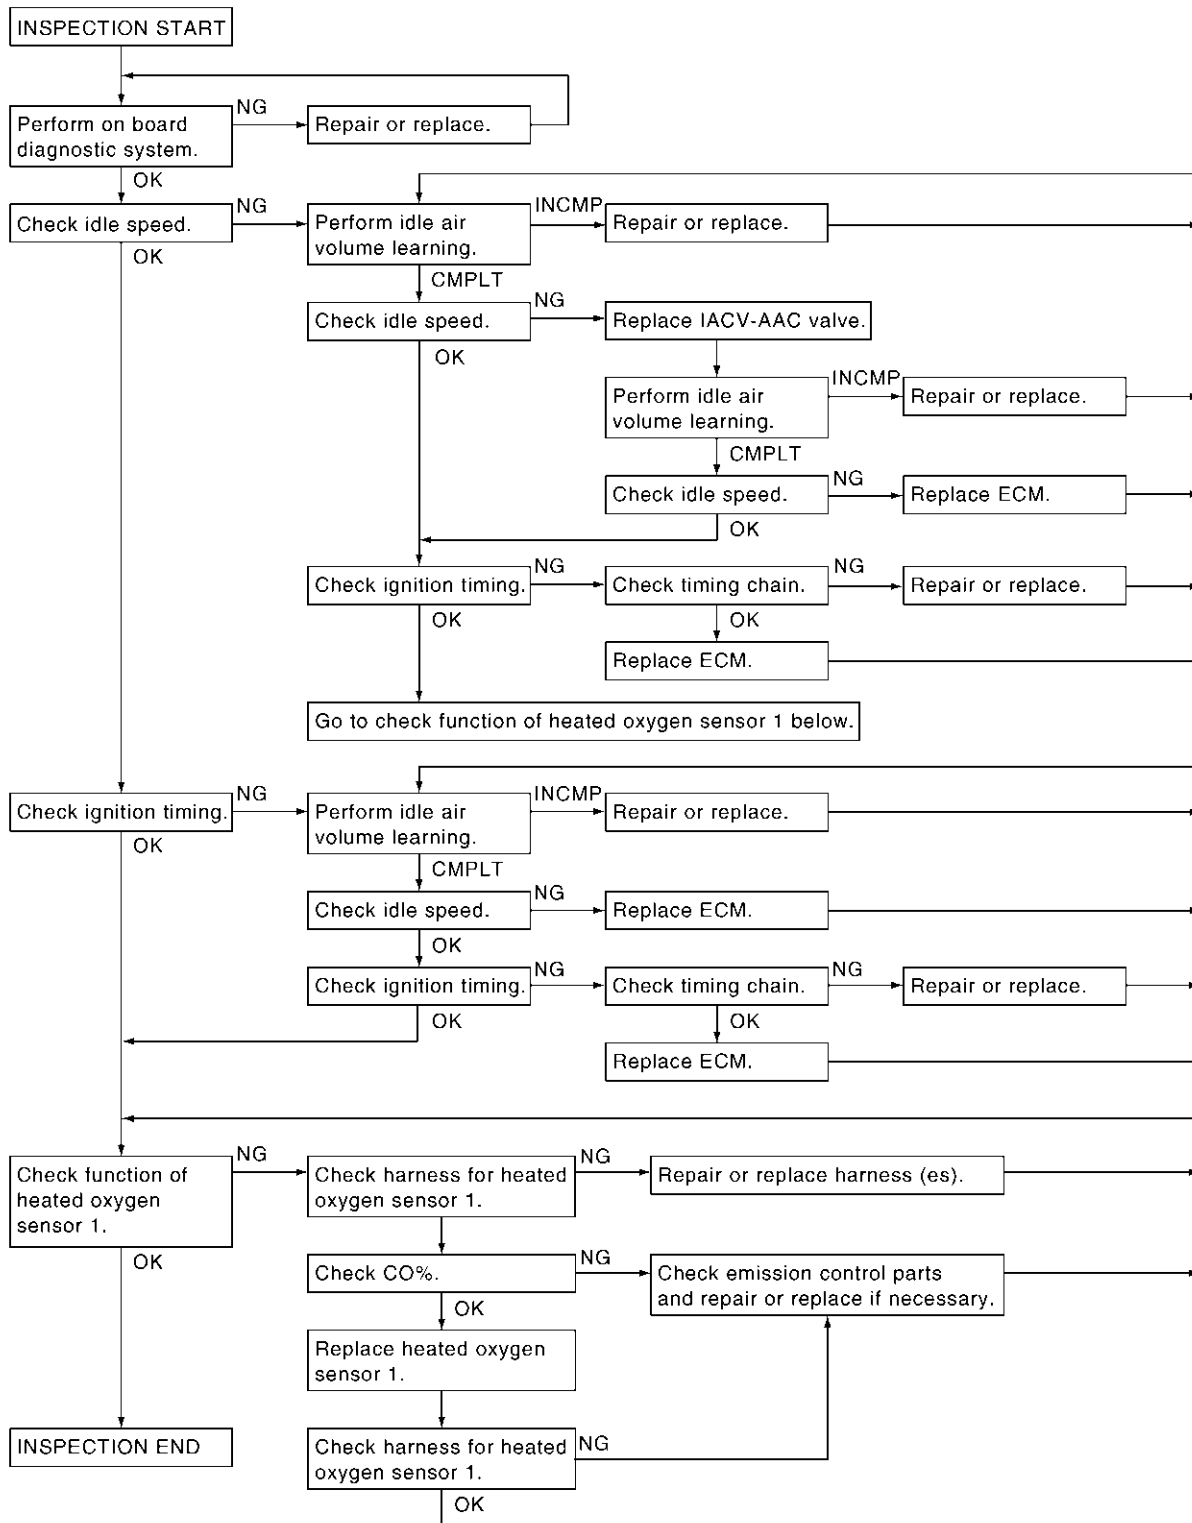

NOTE:

If a vehicle contains a part which is operating outside of design specifications with no MIL illumination, the part shall not be replaced prior to emission testing unless it is determined that the part has been tampered with or abused in such a way that the diagnostic system cannot reasonably be expected to detect the resulting malfunction.

SEC141CC



GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

BASIC SERVICE PROCEDURE

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

=NBEC0028S02

INSPECTION PROCEDURE

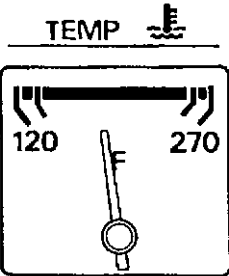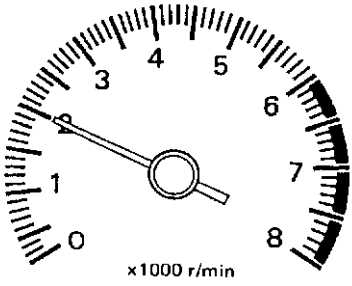1	INSPECTION START							
		<p>1. Visually check the following:</p> <ul style="list-style-type: none"> ● Air cleaner clogging ● Hoses and ducts for leaks ● Electrical connectors ● Gasket ● Throttle valve and throttle position sensor operation <p>2. Start engine and warm it up until engine coolant temperature indicator points to the middle of gauge. Ensure engine stays below 1,000 rpm.</p> <div style="text-align: center;">  <p style="margin: 0;">TEMP </p> </div> <p style="text-align: right;">SEF976U</p> <p>3. Open engine hood and run engine at about 2,000 rpm for about 2 minutes under no-load.</p> <div style="text-align: center;">  <p style="margin: 0;">x1000 r/min</p> </div> <p style="text-align: right;">SEF977U</p> <p>4. Make sure that no DTC is displayed with CONSULT-II or GST.</p> <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 10%; text-align: center;">▶</td> <td>GO TO 3.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 2.</td> </tr> </table>	OK	▶	GO TO 3.	NG	▶	GO TO 2.
OK	▶	GO TO 3.						
NG	▶	GO TO 2.						

2	REPAIR OR REPLACE	
		Repair or replace components as necessary according to corresponding "Diagnostic Procedure".
	▶	GO TO 3.

3	CHECK TARGET IDLE SPEED							
		<p> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Select "ENG SPEED" in "DATA MONITOR" mode with CONSULT-II. 3. Check idle speed. 750±50 rpm (in "P" or "N" position) 						
		<p> Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Check idle speed. 750±50 rpm (in "P" or "N" position) <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 10%; text-align: center;">▶</td> <td>GO TO 12.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 4.</td> </tr> </table>	OK	▶	GO TO 12.	NG	▶	GO TO 4.
OK	▶	GO TO 12.						
NG	▶	GO TO 4.						

BASIC SERVICE PROCEDURE

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

4	PERFORM IDLE AIR VOLUME LEARNING	
Refer to "Idle Air Volume Learning", EC-69. Is Idle Air Volume Learning carried out successfully?		
Yes or No		
Yes	▶	GO TO 5.
No	▶	1. Follow the instruction of "Idle Air Volume Learning". 2. GO TO 4.

GI
MA
EM

5	CHECK TARGET IDLE SPEED AGAIN	
<input type="radio"/> With CONSULT-II 1. Start engine and warm it up to normal operating temperature. 2. Select "ENG SPEED" in "DATA MONITOR" mode with CONSULT-II. 3. Check idle speed. 750±50 rpm (in "P" or "N" position)		
<input checked="" type="radio"/> Without CONSULT-II 1. Start engine and warm it up to normal operating temperature. 2. Check idle speed. 750±50 rpm (in "P" or "N" position)		
OK or NG		
OK	▶	GO TO 10.
NG	▶	GO TO 6.

LC
EC
FE
AT
TF
PD

6	REPLACE IACV-AAC VALVE	
Replace IACV-AAC valve.		
	▶	GO TO 7.

AX
SU

7	PERFORM IDLE AIR VOLUME LEARNING	
Refer to "Idle Air Volume Learning", EC-69. Is Idle Air Volume Learning carried out successfully?		
Yes or No		
Yes	▶	GO TO 8.
No	▶	1. Follow the instruction of "Idle Air Volume Learning". 2. GO TO 4.

BR
ST
RS


8	CHECK TARGET IDLE SPEED AGAIN	
<input type="radio"/> With CONSULT-II 1. Start engine and warm it up to normal operating temperature. 2. Select "ENG SPEED" in "DATA MONITOR" mode with CONSULT-II. 3. Check idle speed. 750±50 rpm (in "P" or "N" position)		
<input checked="" type="radio"/> Without CONSULT-II 1. Start engine and warm it up to normal operating temperature. 2. Check idle speed. 750±50 rpm (in "P" or "N" position)		
OK or NG		
OK	▶	GO TO 10.
NG	▶	GO TO 9.

BT
HA
SC
EL
IDX

BASIC SERVICE PROCEDURE

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)


9	CHECK ECM FUNCTION
<ol style="list-style-type: none"> 1. Substitute another known-good ECM to check ECM function. (ECM may be the cause of an incident, but this is rarely the case.) 2. Perform initialization of IVIS (NATS) system and registration of IVIS (NATS) ignition key IDs. Refer to "IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM — NATS)", EC-87. 	
▶	GO TO 4.

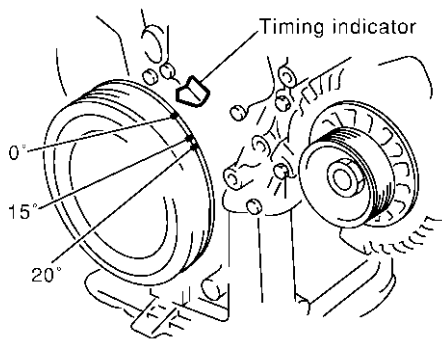10	CHECK IGNITION TIMING
<ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Check ignition timing at idle using a timing light. 	
	
SEF572X	
<p>Ignition timing: $15^{\circ} \pm 5^{\circ}$ BTDC (in "P" or "N" position)</p> <p>OK or NG</p>	
OK	▶ GO TO 18.
NG	▶ GO TO 11.

11	CHECK TIMING CHAIN INSTALLATION
Check timing chain installation. Refer to EM-31, "Installation".	
OK or NG	
OK	▶ GO TO 9.
NG	▶ <ol style="list-style-type: none"> 1. Repair the timing chain installation. 2. GO TO 4.

BASIC SERVICE PROCEDURE

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

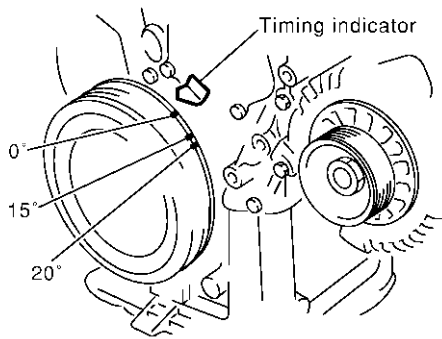12	CHECK IGNITION TIMING
<p>1. Start engine and let it idle. 2. Check ignition timing at idle using a timing light.</p>	
	
<p>Ignition timing: 15°±5° BTDC (in "P" or "N" position)</p>	
SEF572X	
OK or NG	
OK	▶ GO TO 18.
NG	▶ GO TO 13.

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

13	PERFORM IDLE AIR VOLUME LEARNING
<p>Refer to "Idle Air Volume Learning", EC-69. Is Idle Air Volume Learning carried out successfully?</p>	
Yes or No	
Yes	▶ GO TO 14.
No	▶ 1. Follow the instruction of "Idle Air volume Learning". 2. GO TO 13.

14	CHECK TARGET IDLE SPEED AGAIN
<p><input checked="" type="radio"/> With CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature. 2. Select "ENG SPEED" in "DATA MONITOR" mode with CONSULT-II. 3. Check idle speed. 750±50 rpm (in "P" or "N" position)</p>	
<p><input type="radio"/> Without CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature. 2. Check idle speed. 750±50 rpm (in "P" or "N" position)</p>	
OK or NG	
OK	▶ GO TO 16.
NG	▶ GO TO 15.

15	CHECK ECM FUNCTION
<p>1. Substitute another known-good ECM to check ECM function. (ECM may be the cause of an incident, but this is rarely the case.)</p> <p>2. Perform initialization of IVIS (NATS) system and registration of IVIS (NATS) ignition key IDs. Refer to "IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM — NATS)", EC-87.</p>	
▶ GO TO 13.	

BASIC SERVICE PROCEDURE

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

16	CHECK IGNITION TIMING AGAIN	
Check ignition timing again. Refer to Test No. 12.		
OK or NG		
OK	▶	GO TO 18.
NG	▶	GO TO 17.

17	CHECK TIMING CHAIN INSTALLATION	
Check timing chain installation. Refer to EM-31, "Installation".		
OK or NG		
OK	▶	GO TO 15.
NG	▶	1. Repair the timing chain installation. 2. GO TO 13.

18	ERASE UNNECESSARY DTC	
After this inspection, unnecessary DTC No. might be displayed. Erase the stored memory in ECM and TCM (Transmission control module). Refer to "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION", EC-85 and AT-35 , "HOW TO ERASE DTC".		
With CONSULT-II	▶	GO TO 19.
Without CONSULT-II	▶	GO TO 20.

19	CHECK HEATED OXYGEN SENSOR 1 (BANK 2) SIGNAL											
<p>Ⓔ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Run engine at about 2,000 rpm for about 2 minutes under no-load. 2. See "HO2S1 MNTR (B2)" in "DATA MONITOR" mode. 3. Running engine at 2,000 rpm under no-load (engine is warmed up to normal operating temperature.), check that the monitor fluctuates between "LEAN" and "RICH" more than 5 times during 10 seconds. 												
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2" style="text-align: center;">DATA MONITOR</th> </tr> <tr> <th style="text-align: left;">MONITOR</th> <th style="text-align: left;">NO DTC</th> </tr> </thead> <tbody> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>HO2S1 MNTR (B1)</td> <td>LEAN</td> </tr> <tr> <td>HO2S1 MNTR (B2)</td> <td>RICH</td> </tr> </tbody> </table>			DATA MONITOR		MONITOR	NO DTC	ENG SPEED	XXX rpm	HO2S1 MNTR (B1)	LEAN	HO2S1 MNTR (B2)	RICH
DATA MONITOR												
MONITOR	NO DTC											
ENG SPEED	XXX rpm											
HO2S1 MNTR (B1)	LEAN											
HO2S1 MNTR (B2)	RICH											
<p>1 time: RICH → LEAN → RICH 2 times: RICH → LEAN → RICH → LEAN → RICH</p>												
OK or NG												
OK	▶	GO TO 23.										
NG (Monitor does not fluctuate.)	▶	GO TO 28.										
NG (Monitor fluctuates less than 5 times.)	▶	GO TO 21.										

SEF945Y

BASIC SERVICE PROCEDURE

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

20	CHECK HEATED OXYGEN SENSOR 1 (BANK 2) SIGNAL	
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Run engine at about 2,000 rpm for about 2 minutes under no-load. 2. Set voltmeter probe between ECM terminal 62 and ground. 3. Make sure that the voltage fluctuates between 0 - 0.3V and 0.6 - 1.0V more than 5 times during 10 seconds at 2,000 rpm. 1 time: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V 2 times: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V <p style="text-align: center;">OK or NG</p>		
OK		▶ GO TO 23.
NG (Voltage does not fluctuate.)		▶ GO TO 28.
NG (Voltage fluctuates less than 5 times.)		▶ GO TO 21.

GI
MA
EM
LC
EC

21	CHECK HEATED OXYGEN SENSOR 1 (BANK 2) SIGNAL	
<p>ⓔ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Stop engine. 2. Replace heated oxygen sensor 1 (bank 2). 3. Start engine and warm it up to normal operating temperature. 4. Run engine at approx. 2,000 rpm for approx. 2 minutes under no-load. 5. See "HO2S1 MNTR (B2)" in "DATA MONITOR" mode. 6. Running engine at 2,000 rpm under no-load (engine is warmed up to normal operating temperature.), check that the monitor fluctuates between "LEAN" and "RICH" more than 5 times during 10 seconds. 1 time: RICH → LEAN → RICH 2 times: RICH → LEAN → RICH → LEAN → RICH 		
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Stop engine. 2. Replace heated oxygen sensor 1 (bank 2). 3. Start engine and warm it up to normal operating temperature. 4. Run engine at approx. 2,000 rpm for approx. 2 minutes under no-load. 5. Set voltmeter probe between ECM terminal 62 and ground. 6. Make sure that the voltage fluctuates between 0 - 0.3V and 0.6 - 1.0V more than 5 times during 10 seconds at 2,000 rpm. 1 time: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V 2 times: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V <p style="text-align: center;">OK or NG</p>		
OK (With CONSULT-II)		▶ GO TO 23.
OK (Without CONSULT-II)		▶ GO TO 24.
NG		▶ GO TO 22.

FE
AT
TF
PD
AX
SU
BR
ST
RS
BT

22	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ol style="list-style-type: none"> 1. Check fuel pressure regulator. Refer to EC-52. 2. Check mass air flow sensor and its circuit. Refer to EC-182, 189 and 480. 3. Check injector and its circuit. Refer to EC-687. Clean or replace if necessary. 4. Check engine coolant temperature sensor and its circuit. Refer to EC-201 and 225. 5. Check ECM function by substituting another known-good ECM. (ECM may be the cause of an incident, but this is rarely the case.) 		
		▶ GO TO 3.

HA
SC
EL
IDX

BASIC SERVICE PROCEDURE

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

23	CHECK HEATED OXYGEN SENSOR 1 (BANK 1) SIGNAL										
<p>Ⓔ With CONSULT-II</p> <p>1. See "HO2S1 MNTR (B1)" in "DATA MONITOR" mode.</p> <p>2. Maintaining engine at 2,000 rpm under no-load (engine is warmed up to normal operating temperature.), check that the monitor fluctuates between "LEAN" and "RICH" more than 5 times during 10 seconds.</p>											
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2">DATA MONITOR</th> </tr> <tr> <th>MONITOR</th> <th>NO DTC</th> </tr> </thead> <tbody> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>HO2S1 MNTR (B1)</td> <td>LEAN</td> </tr> <tr> <td>HO2S1 MNTR (B2)</td> <td>RICH</td> </tr> </tbody> </table>		DATA MONITOR		MONITOR	NO DTC	ENG SPEED	XXX rpm	HO2S1 MNTR (B1)	LEAN	HO2S1 MNTR (B2)	RICH
DATA MONITOR											
MONITOR	NO DTC										
ENG SPEED	XXX rpm										
HO2S1 MNTR (B1)	LEAN										
HO2S1 MNTR (B2)	RICH										
<p>1 time: RICH → LEAN → RICH 2 times: RICH → LEAN → RICH → LEAN → RICH</p>											
SEF945Y											
OK or NG											
OK	▶ INSPECTION END										
NG (Monitor does not fluctuate.)	▶ GO TO 27.										
NG (Monitor fluctuates less than 5 times.)	▶ GO TO 25.										

24	CHECK HEATED OXYGEN SENSOR 1 (BANK 1) SIGNAL
<p>ⓧ Without CONSULT-II</p> <p>1. Set voltmeter probe between ECM terminal 63 and ground.</p> <p>2. Make sure that the voltage fluctuates between 0 - 0.3V and 0.6 - 1.0V more than 5 times during 10 seconds at 2,000 rpm.</p> <p>1 time: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V 2 times: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V</p>	
OK or NG	
OK	▶ INSPECTION END
NG (Voltage does not fluctuate.)	▶ GO TO 27.
NG (Voltage fluctuates less than 5 times.)	▶ GO TO 25.

BASIC SERVICE PROCEDURE

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

25	CHECK HEATED OXYGEN SENSOR 1 (BANK 1) SIGNAL	
<p>Ⓔ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Stop engine. 2. Replace heated oxygen sensor 1 (bank 1). 3. Start engine and warm it up to normal operating temperature. 4. Run engine at approx. 2,000 rpm for approx. 2 minutes under no-load. 5. See "HO2S1 MNTR (B1)" in "DATA MONITOR" mode. 6. Maintaining engine at 2,000 rpm under no-load (engine is warmed up to normal operating temperature.), check that the monitor fluctuates between "LEAN" and "RICH" more than 5 times during 10 seconds. 1 time: RICH → LEAN → RICH 2 times: RICH → LEAN → RICH → LEAN → RICH 		
<p>ⓧ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Stop engine. 2. Replace heated oxygen sensor 1 (bank 1). 3. Start engine and warm it up to normal operating temperature. 4. Run engine at approx. 2,000 rpm for approx. 2 minutes under no-load. 5. Set voltmeter probe between ECM terminal 63 and ground. 6. Make sure that the voltage fluctuates between 0 - 0.3V and 0.6 - 1.0V more than 5 times during 10 seconds at 2,000 rpm. 1 time: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V 2 times: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V <p style="text-align: center;">OK or NG</p>		
OK		▶ INSPECTION END
NG		▶ GO TO 26.

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

26	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Check fuel pressure regulator. Refer to EC-52. ● Check mass air flow sensor and its circuit. Refer to EC-182, 189 and 480. ● Check injector and its circuit. Refer to EC-687. Clean or replace if necessary. ● Check engine coolant temperature sensor and its circuit. Refer to EC-201 and 225. ● Check ECM function by substituting another known-good ECM. (ECM may be the cause of an incident, but this is rarely the case.) 		
		▶ GO TO 3.

27	CHECK HEATED OXYGEN SENSOR 1 (BANK 1) HARNESS	
<ol style="list-style-type: none"> 1. Turn off engine and disconnect battery ground cable. 2. Disconnect ECM harness connector. 3. Disconnect heated oxygen sensor 1 (bank 1) harness connector. 4. Check harness continuity between ECM terminal 63 and heated oxygen sensor 1 (bank 1) harness connector terminal 2. Refer to Wiring Diagram, EC-256. Continuity should exist. <p style="text-align: center;">OK or NG</p>		
OK		▶ GO TO 30.
NG		▶ GO TO 29.

BASIC SERVICE PROCEDURE

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

28	CHECK HEATED OXYGEN SENSOR 1 (BANK 2) HARNESS	
<ol style="list-style-type: none"> 1. Turn off engine and disconnect battery ground cable. 2. Disconnect ECM harness connector. 3. Disconnect heated oxygen sensor 1 (bank 2) harness connector. 4. Check harness continuity between ECM terminal 62 and heated oxygen sensor 1 (bank 2) harness connector terminal 2. <p>Refer to Wiring Diagram, EC-257. Continuity should exist.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 30.
NG	▶	GO TO 29.

29	REPAIR OR REPLACE	
Repair or replace harness between ECM and heated oxygen sensor 1.		
	▶	GO TO 3.

30	PREPARATION FOR "CO" % CHECK																					
<p> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Reconnect ECM harness connector. 2. Turn ignition switch "ON". 3. Select "ENG COOLANT TEMP" in "ACTIVE TEST" mode. 4. Set "ENG COOLANT TEMP" to 5°C (41°F) by touching "DOWN" and "Qd". 																						
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> </thead> <tbody> <tr> <td>ENG COOLANT TEMP</td> <td>XXX °C</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>INJ PULSE-B1</td> <td>XXX msec</td> </tr> <tr> <td>IGN TIMING</td> <td>XXX BTDC</td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> </tbody> </table>			ACTIVE TEST		ENG COOLANT TEMP	XXX °C	MONITOR		ENG SPEED	XXX rpm	INJ PULSE-B1	XXX msec	IGN TIMING	XXX BTDC								
ACTIVE TEST																						
ENG COOLANT TEMP	XXX °C																					
MONITOR																						
ENG SPEED	XXX rpm																					
INJ PULSE-B1	XXX msec																					
IGN TIMING	XXX BTDC																					
SEF172Y																						

<p> Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Disconnect ECM harness connector. 2. Disconnect engine coolant temperature sensor harness connector. 3. Connect a resistor (4.4 kΩ) between terminals of engine coolant temperature sensor harness connector. 		
<p style="text-align: center;">Engine coolant temperature sensor harness connector</p> <p style="text-align: center;">4.4kΩ resistor</p>		
SEF982UA		
	▶	GO TO 31.

BASIC SERVICE PROCEDURE


Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

31 CHECK "CO" %


Ⓔ With CONSULT-II

1. Start engine and warm it up until engine coolant temperature indicator points to the middle of gauge.

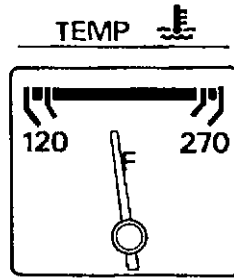

SEF976U

2. Rev engine (2,000 to 3,000 rpm) two or three times under no-load, then run engine at idle speed.

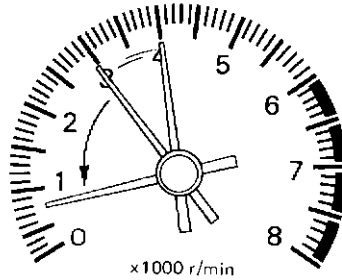


SEF978U

3. Check "CO" %.
Idle CO: 1.0 - 9.5%


ⓧ Without CONSULT-II

1. Start engine and warm it up until engine coolant temperature indicator points to the middle of gauge.

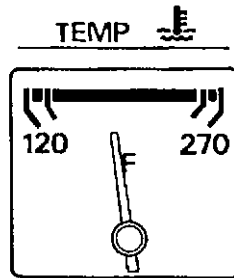

SEF976U

2. Rev engine (2,000 to 3,000 rpm) two or three times under no-load, then run engine at idle speed.

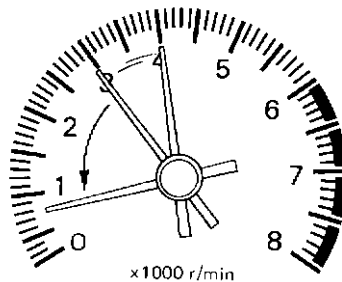

SEF978U

3. Check "CO" %.
4. After checking CO%,
 - a. Disconnect the resistor from terminals of engine coolant temperature sensor.
 - b. Connect engine coolant temperature sensor harness connector to engine coolant temperature sensor.

OK or NG

OK	▶	GO TO 32.
NG	▶	GO TO 33.

BASIC SERVICE PROCEDURE

Idle Speed/Ignition Timing/Idle Mixture Ratio Adjustment (Cont'd)

32	CHECK HEATED OXYGEN SENSOR 1 (BANK 1)/(BANK 2) SIGNAL	
<p>Ⓔ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Stop engine. 2. Replace heated oxygen sensor 1 (bank 1)/(bank 2). 3. Start engine and warm it up to normal operating temperature. 4. Run engine at approx. 2,000 rpm for approx. 2 minutes under no-load. 5. See "HO2S1 MNTR (B1)/(B2)" in "DATA MONITOR" mode. 6. Maintaining engine at 2,000 rpm under no-load (engine is warmed up to normal operating temperature.), check that the monitor fluctuates between "LEAN" and "RICH" more than 5 times during 10 seconds. 1 time: RICH → LEAN → RICH 2 times: RICH → LEAN → RICH → LEAN → RICH 		
<p>ⓧ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Stop engine. 2. Replace heated oxygen sensor 1 (bank 1)/(bank 2). 3. Start engine and warm it up to normal operating temperature. 4. Run engine at approx. 2,000 rpm for approx. 2 minutes under no-load. 5. Set voltmeter probe between ECM terminal 63/62 and ground. 6. Make sure that voltage fluctuates between 0 - 0.3V and 0.6 - 1.0V more than 5 times during 10 seconds at 2,000 rpm. 1 time: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V 2 times: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 3.
NG	▶	GO TO 33.

33	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Connect heated oxygen sensor 1 harness connectors to heated oxygen sensors 1. ● Check fuel pressure regulator. Refer to EC-52. ● Check mass air flow sensor and its circuit. Refer to EC-182, 189 and 480. ● Check injector and its circuit. Refer to EC-687. Clean or replace if necessary. ● Check engine coolant temperature sensor and its circuit. Refer to EC-201 and 225. ● Check ECM function by substituting another known-good ECM. (ECM may be the cause of an incident, but this is rarely the case.) 		
▶		GO TO 3.

NBEC0642

SELECT WORK ITEM
TP SW/TP SEN IDLE POSI ADJ
FUEL PRESSURE RELEASE
IDLE AIR VOL LEARN
SELF-LEARNING CONT
EVAP SYSTEM CLOSE
TARGET ING TIM ADJ

SEF452Y

Idle Air Volume Learning

DESCRIPTION

NBEC0642S01

“Idle Air Volume Learning” is an operation to learn the idle air volume that keeps each engine within the specific range. It must be performed under any of the following conditions:

- Each time IACV-AAC valve, throttle body or ECM is replaced.
- Idle speed or ignition timing is out of specification.

PRE-CONDITIONING

NBEC0642S02

Before performing “Idle Air Volume Learning”, make sure that all of the following conditions are satisfied.

Learning will be cancelled if any of the following conditions are missed for even a moment.

- Battery voltage: More than 12.9V (At idle)
- Engine coolant temperature: 70 - 99°C (158 - 210°F)
- PNP switch: ON
- Electric load switch: OFF
(Air conditioner, headlamp, rear window defogger)

On vehicles equipped with daytime light systems, if the parking brake is applied before the engine is started the headlamp will not illuminate.

- Cooling fan motor: Not operating
- Steering wheel: Neutral (Straight-ahead position)
- Vehicle speed: Stopped
- Transmission: Warmed-up
For models with CONSULT-II, drive vehicle until “FLUID TEMP SE” in “DATA MONITOR” mode of “A/T” system indicates less than 0.9V.
For models without CONSULT-II, drive vehicle for 10 minutes.

OPERATION PROCEDURE

NBEC0642S03

Ⓔ With CONSULT-II

NBEC0642S0301

1. Turn ignition switch “ON” and wait at least 1 second.
2. Turn ignition switch “OFF” and wait at least 10 seconds.
3. Start engine and warm it up to normal operating temperature.
4. Check that all items listed under the topic “PRE-CONDITIONING” (previously mentioned) are in good order.
5. Turn ignition switch “OFF” and wait at least 10 seconds.
6. Start the engine and let it idle for at least 30 seconds.
7. Select “IDLE AIR VOL LEARN” in “WORK SUPPORT” mode.
8. Touch “START” and wait 20 seconds.
9. Make sure that “CMPLT” is displayed on CONSULT-II screen. If “CMPLT” is not displayed, “Idle Air Volume Learning” will not be carried out successfully. In this case, find the cause of the incident by referring to the NOTE below.
10. Rev up the engine two or three times. Make sure that idle speed and ignition timing are within specifications.

WORK SUPPORT	
IDLE AIR VOL LEARN	
MONITOR	
ENG SPEED	XXX rpm
START	

SEF454Y

WORK SUPPORT	
IDLE AIR VOL LEARN	CMPLT
MONITOR	
ENG SPEED	XXX rpm
START	


MBIB0238E

ITEM	SPECIFICATION
Idle speed	750±50 rpm (in “P” or “N” position)
Ignition timing	15°±5° BTDC (in “P” or “N” position)

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

BASIC SERVICE PROCEDURE

Idle Air Volume Learning (Cont'd)

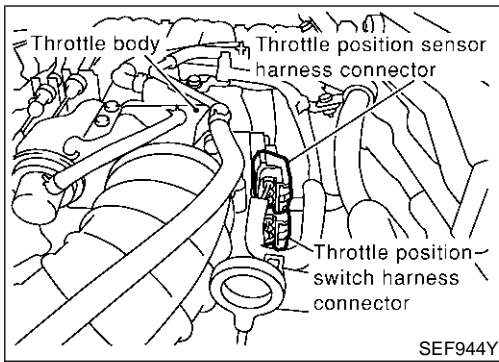

⊗ Without CONSULT-II

NBEC0642S0302

1. Turn ignition switch "ON" and wait at least 1 second.
2. Turn ignition switch "OFF" and wait at least 10 seconds.
3. Start engine and warm it up to normal operating temperature.
4. Check that all items listed under the topic "PRE-CONDITIONING" (previously mentioned) are in good order.
5. Turn ignition switch "OFF" and wait at least 10 seconds.
6. Start the engine and let it idle for at least 30 seconds.
7. Disconnect throttle position sensor harness connector (brown), then reconnect it within 5 seconds.
8. Wait 20 seconds.
9. Make sure that idle speed is within specifications. If not, the result will be incomplete. In this case, find the cause of the incident by referring to the NOTE below.
10. Rev up the engine two or three times. Make sure that idle speed and ignition timing are within specifications.

ITEM	SPECIFICATION
Idle speed	750±50 rpm (in "P" or "N" position)
Ignition timing	15°±5° BTDC (in "P" or "N" position)

NOTE:

If idle air volume learning cannot be performed successfully, proceed as follows:

- 1) Check that throttle valve is fully closed.
- 2) Check PCV valve operation.
- 3) Check that downstream of throttle valve is free from air leakage.
- 4) Adjust closed throttle position switch and reset memory. (Refer to Basic Inspection, EC-116.)
- 5) When the above four items check out OK, engine component parts and their installation condition are questionable. Check and eliminate the cause of the incident. It is useful to perform "TROUBLE DIAGNOSIS — SPECIFICATION VALUE", EC-148.
- 6) If any of the following conditions occur after the engine has started, eliminate the cause of the incident and perform "Idle air volume learning" all over again:
 - Engine stalls.
 - Erroneous idle.
 - Blown fuses related to the IACV-AAC valve system.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Introduction

Introduction

NBEC0029

The ECM has an on board diagnostic system, which detects malfunctions related to engine sensors or actuators. The ECM also records various emission-related diagnostic information including:

Emission-related diagnostic information	SAE Mode
Diagnostic Trouble Code (DTC)	Mode 3 of SAE J1979
Freeze Frame data	Mode 2 of SAE J1979
System Readiness Test (SRT) code	Mode 1 of SAE J1979
1st Trip Diagnostic Trouble Code (1st Trip DTC)	Mode 7 of SAE J1979
1st Trip Freeze Frame data	
Test values and Test limits	Mode 6 of SAE J1979
Calibration ID	Mode 9 of SAE 1979

The above information can be checked using procedures listed in the table below.

X: Applicable —: Not applicable

	DTC	1st trip DTC	Freeze Frame data	1st trip Freeze Frame data	SRT code	Test value
CONSULT-II	X	X	X	X	X	—
GST	X	X*1	X	—	X	X
ECM	X	X*2				

*1: 1st trip DTCs for self-diagnoses concerning SRT items cannot be shown on the GST display.

*2: When DTC and 1st trip DTC simultaneously appear on the display, they cannot be clearly distinguished from each other.

The malfunction indicator lamp (MIL) on the instrument panel lights up when the same malfunction is detected in two consecutive trips (Two trip detection logic), or when the ECM enters fail-safe mode. (Refer to EC-129.)

Two Trip Detection Logic

NBEC0030

When a malfunction is detected for the first time, 1st trip DTC and 1st trip Freeze Frame data are stored in the ECM memory. The MIL will not light up at this stage. <1st trip>

If the same malfunction is detected again during the next drive, the DTC and Freeze Frame data are stored in the ECM memory, and the MIL lights up. The MIL lights up at the same time when the DTC is stored. <2nd trip> The “trip” in the “Two Trip Detection Logic” means a driving mode in which self-diagnosis is performed during vehicle operation. Specific on board diagnostic items will cause the ECM to light up or blink the MIL, and store DTC and Freeze Frame data, even in the 1st trip, as shown below.

X: Applicable —: Not Exit

Items	MIL				DTC		1st trip DTC	
	1st trip		2nd trip		1st trip displaying	2nd trip displaying	1st trip displaying	2nd trip displaying
	Blinking	Lighting up	Blinking	Lighting up				
Misfire (Possible three way catalyst damage) — DTC: P0300 - P0306 is being detected	X	—	—	—	—	—	X	—
Misfire (Possible three way catalyst damage) — DTC: P0300 - P0306 is being detected	—	—	X	—	—	X	—	—
Closed loop control — DTC: P1148, P1168	—	X	—	—	X	—	X	—
Fail-safe items (Refer to EC-129.)	—	X	—	—	X*1	—	X*1	—
Except above	—	—	—	X	—	X	X	—

*1: Except “ECM”

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Emission-related Diagnostic Information

Emission-related Diagnostic Information

NBEC0031

DTC AND 1ST TRIP DTC

NBEC0031S01

The 1st trip DTC (whose number is the same as the DTC number) is displayed for the latest self-diagnostic result obtained. If the ECM memory was cleared previously, and the 1st trip DTC did not reoccur, the 1st trip DTC will not be displayed.

If a malfunction is detected during the 1st trip, the 1st trip DTC is stored in the ECM memory. The MIL will not light up (two trip detection logic). If the same malfunction is not detected in the 2nd trip (meeting the required driving pattern), the 1st trip DTC is cleared from the ECM memory. If the same malfunction is detected in the 2nd trip, both the 1st trip DTC and DTC are stored in the ECM memory and the MIL lights up. In other words, the DTC is stored in the ECM memory and the MIL lights up when the same malfunction occurs in two consecutive trips. If a 1st trip DTC is stored and a non-diagnostic operation is performed between the 1st and 2nd trips, only the 1st trip DTC will continue to be stored. For malfunctions that blink or light up the MIL during the 1st trip, the DTC and 1st trip DTC are stored in the ECM memory.

Procedures for clearing the DTC and the 1st trip DTC from the ECM memory are described in "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION", EC-85.

For malfunctions in which 1st trip DTCs are displayed, refer to EC-81. These items are required by legal regulations to continuously monitor the system/component. In addition, the items monitored non-continuously are also displayed on CONSULT-II.

1st trip DTC is specified in Mode 7 of SAE J1979. 1st trip DTC detection occurs without lighting up the MIL and therefore does not warn the driver of a malfunction. However, 1st trip DTC detection will not prevent the vehicle from being tested, for example during Inspection/Maintenance (I/M) tests.

When a 1st trip DTC is detected, check, print out or write down and erase (1st trip) DTC and Freeze Frame data as specified in "Work Flow" procedure Step II, refer to EC-114. Then perform "DTC Confirmation Procedure" or "Overall Function Check" to try to duplicate the malfunction. If the malfunction is duplicated, the item requires repair.

How to Read DTC and 1st Trip DTC

NBEC0031S0101

DTC and 1st trip DTC can be read by the following methods.

 **With CONSULT-II**

 **With GST**

CONSULT-II or GST (Generic Scan Tool) Examples: P0340, P0705, P0750, etc. These DTCs are prescribed by SAE J2012.

(CONSULT-II also displays the malfunctioning component or system.)

 **No TOOLS**

The number of times the MIL blinks in Diagnostic Test Mode II (Self-diagnostic Results) indicates the DTC (Example: 0340, 0705, 0750, etc.).

- **1st trip DTC No. is the same as DTC No.**
- **Output of a DTC indicates a malfunction. However, GST does not indicate whether the malfunction is still occurring or has occurred in the past and has returned to normal. CONSULT-II can identify malfunction status as shown below. Therefore, using CONSULT-II (if available) is recommended.**

A sample of CONSULT-II display for DTC and 1st trip DTC is shown below. DTC or 1st trip DTC of a malfunction is displayed in SELF-DIAGNOSTIC RESULTS mode of CONSULT-II. Time data indicates how many times the vehicle was driven after the last detection of a DTC.

If the DTC is being detected currently, the time data will be "0".

If a 1st trip DTC is stored in the ECM, the time data will be "[1t]".

DTC display	SELF DIAG RESULTS		1st trip DTC display	SELF DIAG RESULTS	
	DTC RESULTS	TIME		DTC RESULTS	TIME
	MAF SEN/CIRCUIT [P0101]	0		MAF SEN/CIRCUIT [P0101]	1t

SEC745C

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Emission-related Diagnostic Information (Cont'd)

FREEZE FRAME DATA AND 1ST TRIP FREEZE FRAME DATA

NBEC0031S02

The ECM records the driving conditions such as fuel system status, calculated load value, engine coolant temperature, short term fuel trim, long term fuel trim, engine speed, vehicle speed and absolute pressure at the moment a malfunction is detected.

Data which are stored in the ECM memory, along with the 1st trip DTC, are called 1st trip freeze frame data. The data, stored together with the DTC data, are called freeze frame data and displayed on CONSULT-II or GST. The 1st trip freeze frame data can only be displayed on the CONSULT-II screen, not on the GST. For details, see EC-100.

Only one set of freeze frame data (either 1st trip freeze frame data or freeze frame data) can be stored in the ECM. 1st trip freeze frame data is stored in the ECM memory along with the 1st trip DTC. There is no priority for 1st trip freeze frame data and it is updated each time a different 1st trip DTC is detected. However, once freeze frame data (2nd trip detection/MIL on) is stored in the ECM memory, 1st trip freeze frame data is no longer stored. Remember, only one set of freeze frame data can be stored in the ECM. The ECM has the following priorities to update the data.

Priority	Items	
1	Freeze frame data	Misfire — DTC: P0300 - P0306 Fuel Injection System Function — DTC: P0171, P0172, P0174, P0175
2		Except the above items (Includes A/T related items)
3	1st trip freeze frame data	

For example, the EGR malfunction (Priority: 2) was detected and the freeze frame data was stored in the 2nd trip. After that when the misfire (Priority: 1) is detected in another trip, the freeze frame data will be updated from the EGR malfunction to the misfire. The 1st trip freeze frame data is updated each time a different malfunction is detected. There is no priority for 1st trip freeze frame data. However, once freeze frame data is stored in the ECM memory, 1st trip freeze data is no longer stored (because only one freeze frame data or 1st trip freeze frame data can be stored in the ECM). If freeze frame data is stored in the ECM memory and freeze frame data with the same priority occurs later, the first (original) freeze frame data remains unchanged in the ECM memory.

Both 1st trip freeze frame data and freeze frame data (along with the DTCs) are cleared when the ECM memory is erased. Procedures for clearing the ECM memory are described in "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION", EC-85.

SYSTEM READINESS TEST (SRT) CODE

NBEC0031S03

System Readiness Test (SRT) code is specified in Mode 1 of SAE J1979.

As part of an enhanced emissions test for Inspection & Maintenance (I/M), certain states require the status of SRT be used to indicate whether the ECM has completed self-diagnosis of major emission systems and components. Completion must be verified in order for the emissions inspection to proceed.

If a vehicle is rejected for a State emissions inspection due to one or more SRT items indicating "INCMP", use the information in this Service Manual to set the SRT to "CMPLT".

In most cases the ECM will automatically complete its self-diagnosis cycle during normal usage, and the SRT status will indicate "CMPLT" for each application system. Once set as "CMPLT", the SRT status remains "CMPLT" until the self-diagnosis memory is erased.

Occasionally, certain portions of the self-diagnostic test may not be completed as a result of the customer's normal driving pattern; the SRT will indicate "INCMP" for these items.

NOTE:

The SRT will also indicate "INCMP" if the self-diagnosis memory is erased for any reason or if the ECM memory power supply is interrupted for several hours.

If, during the state emissions inspection, the SRT indicates "CMPLT" for all test items, the inspector will continue with the emissions test. However, if the SRT indicates "INCMP" for one or more of the SRT items the vehicle is returned to the customer untested.

NOTE:

If MIL is "ON" during the state emissions inspection, the vehicle is also returned to the customer untested even though the SRT indicates "CMPLT" for all test items. Therefore, it is important to check SRT ("CMPLT") and DTC (No DTCs) before the inspection.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Emission-related Diagnostic Information (Cont'd)

SRT Item

=NBEC0031S0310

The table below shows required self-diagnostic items to set the SRT to "CMPLT".

SRT item (CONSULT-II indication)	Performance Priority*	Required self-diagnostic items to set the SRT to "CMPLT"	Corresponding DTC No.
CATALYST	3	Three way catalyst function	P0420, P0430
EVAP SYSTEM	2	EVAP control system (small leak) (negative pressure)	P0442
	3	EVAP control system (very small leak) (negative pressure)/ (positive pressure)	P0456/P1456
	3	EVAP control system purge flow monitoring	P0441
O2 SENSOR	3	Heated oxygen sensor 1 (circuit)	P0134, P0154
		Heated oxygen sensor 1 (lean shift monitoring)	P1143, P1163
		Heated oxygen sensor 1 (rich shift monitoring)	P1144, P1164
		Heated oxygen sensor 1 (response monitoring)	P0133, P0153
		Heated oxygen sensor 1 (high voltage)	P0132, P0152
		Heated oxygen sensor 2 (min. voltage monitoring)	P1146, P1166
		Heated oxygen sensor 2 (max. voltage monitoring)	P1147, P1167
		Heated oxygen sensor 2 (response monitoring)	P0139, P0159
O2 SEN HEATER	3	Heated oxygen sensor 1 heater	P0031, P0032, P0051, P0052
		Heated oxygen sensor 2 heater	P0037, P0038, P0057, P0058

*: If completion of several SRTs is required, perform driving patterns (DTC confirmation procedure), one by one based on the priority for models with CONSULT-II.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Emission-related Diagnostic Information (Cont'd)

SRT Set Timing

SRT is set as "CMPLT" after self-diagnosis has been performed one or more times. Completion of SRT is done regardless of whether the result is OK or NG. The set timing is different between OK and NG results and is shown in the table below.

Self-diagnosis result		Example						
		Diagnosis	Ignition cycle					
	← ON →		OFF	← ON →	OFF	← ON →	OFF	← ON →
All OK	Case 1	P0400	OK (1)	— (1)	OK (2)	— (2)		
		P0402	OK (1)	— (1)	— (1)	OK (2)		
		P1402	OK (1)	OK (2)	— (2)	— (2)		
		SRT of EGR	"CMPLT"	"CMPLT"	"CMPLT"	"CMPLT"		
	Case 2	P0400	OK (1)	— (1)	— (1)	— (1)		
		P0402	— (0)	— (0)	OK (1)	— (1)		
		P1402	OK (1)	OK (2)	— (2)	— (2)		
		SRT of EGR	"INCMP"	"INCMP"	"CMPLT"	"CMPLT"		
NG exists	Case 3	P0400	OK	OK	—	—		
		P0402	—	—	—	—		
		P1402	NG	—	NG	NG (Consecutive NG)		
		(1st trip) DTC	1st trip DTC	—	1st trip DTC	DTC (= MIL "ON")		
		SRT of EGR	"INCMP"	"INCMP"	"INCMP"	"CMPLT"		

OK: Self-diagnosis is carried out and the result is OK.

NG: Self-diagnosis is carried out and the result is NG.

—: Self-diagnosis is not carried out.

When all SRT related self-diagnoses showed OK results in a single cycle (Ignition OFF-ON-OFF), the SRT will indicate "CMPLT". → Case 1 above

When all SRT related self-diagnoses showed OK results through several different cycles, the SRT will indicate "CMPLT" at the time the respective self-diagnoses have at least one OK result. → Case 2 above

If one or more SRT related self-diagnoses showed NG results in 2 consecutive cycles, the SRT will also indicate "CMPLT". → Case 3 above

The table above shows that the minimum number of cycles for setting SRT as "INCMP" is one (1) for each self-diagnosis (Case 1 & 2) or two (2) for one of self-diagnoses (Case 3). However, in preparation for the state emissions inspection, it is unnecessary of each self-diagnosis to be executed twice (Case 3) for the following reasons:

- The SRT will indicate "CMPLT" at the time the respective self-diagnoses have one (1) OK result.
- The emissions inspection requires "CMPLT" of the SRT only with OK self-diagnosis results.
- When, during SRT driving pattern, 1st trip DTC (NG) is detected prior to "CMPLT" of SRT, the self-diagnosis memory must be erased from ECM after repair.
- If the 1st trip DTC is erased, all the SRT will indicate "INCMP".

NOTE:


SRT can be set as "CMPLT" together with the DTC(s). Therefore, DTC check must always be carried out prior to the state emission inspection even though the SRT indicates "CMPLT".

SRT Service Procedure

If a vehicle has failed the state emissions inspection due to one or more SRT items indicating "INCMP", review the flowchart diagnostic sequence on the next page.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Emission-related Diagnostic Information (Cont'd)

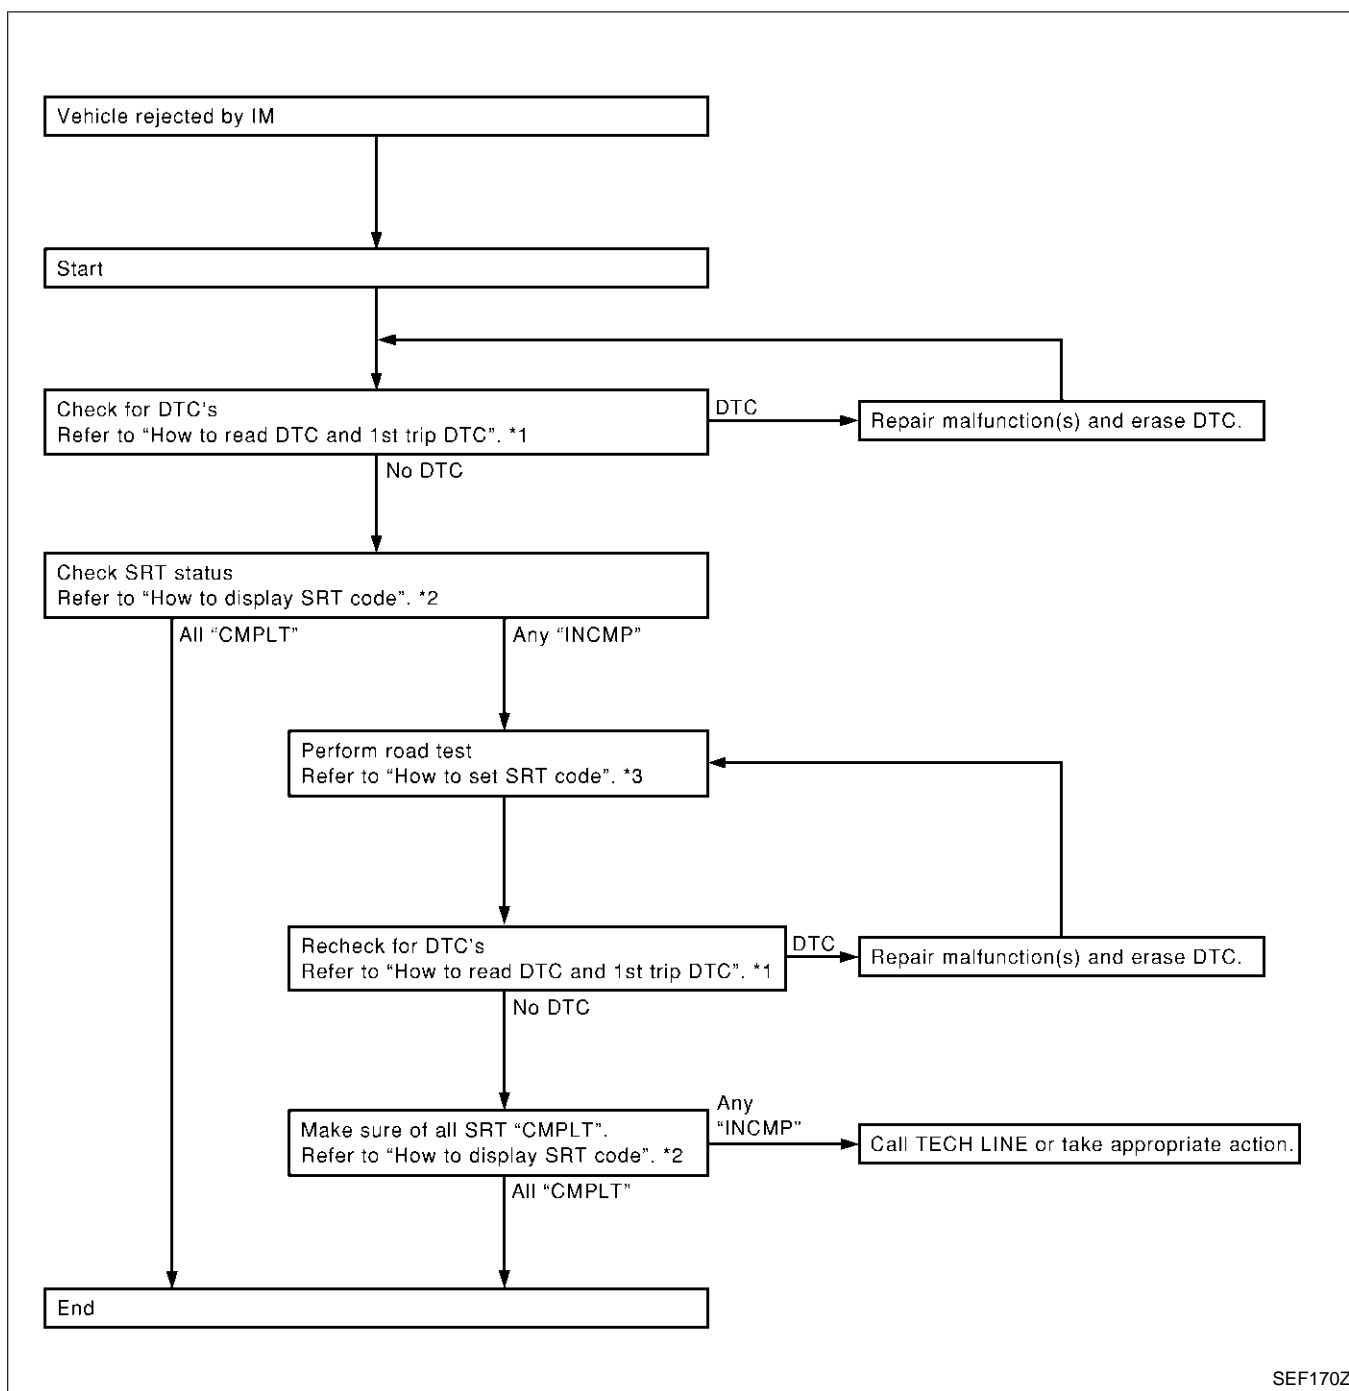

SEF170Z

*1 EC-72

*2 EC-76

*3 EC-77

How to Display SRT Code

With CONSULT-II

Selecting "SRT STATUS" in "DTC CONFIRMATION" mode with CONSULT-II.

For items whose SRT codes are set, a "CMPLT" is displayed on the CONSULT-II screen; for items whose SRT codes are not set, "INCMP" is displayed.

With GST

Selecting Mode 1 with GST (Generic Scan Tool)

A sample of CONSULT-II display for SRT code is shown below.

"INCMP" means the self-diagnosis is incomplete and SRT is not set. "CMPLT" means the self-diagnosis is complete and SRT is set.

NBEC0031S0301

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Emission-related Diagnostic Information (Cont'd)

SRT STATUS	
CATALYST	CMPLT
EVAP SYSTEM	INCMP
HO2S HTR	CMPLT
HO2S	CMPLT

SEF949Z

GI

MA

EM

LC

EC

How to Set SRT Code

To set all SRT codes, self-diagnosis for the items indicated above must be performed one or more times. Each diagnosis may require a long period of actual driving under various conditions. NBEC0031S0302

With CONSULT-II

Perform corresponding DTC Confirmation Procedure one by one based on "Performance Priority" in the table on EC-74.

Without CONSULT-II

The most efficient driving pattern in which SRT codes can be properly set is explained on the next page. The driving pattern should be performed one or more times to set all SRT codes.

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX


ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Emission-related Diagnostic Information (Cont'd)

Driving Pattern

NBEC0031S0303

Driving pattern Note: Always drive vehicle in safe manner according to traffic conditions and obey all traffic laws. Refer to next page for more information and explanation of chart.

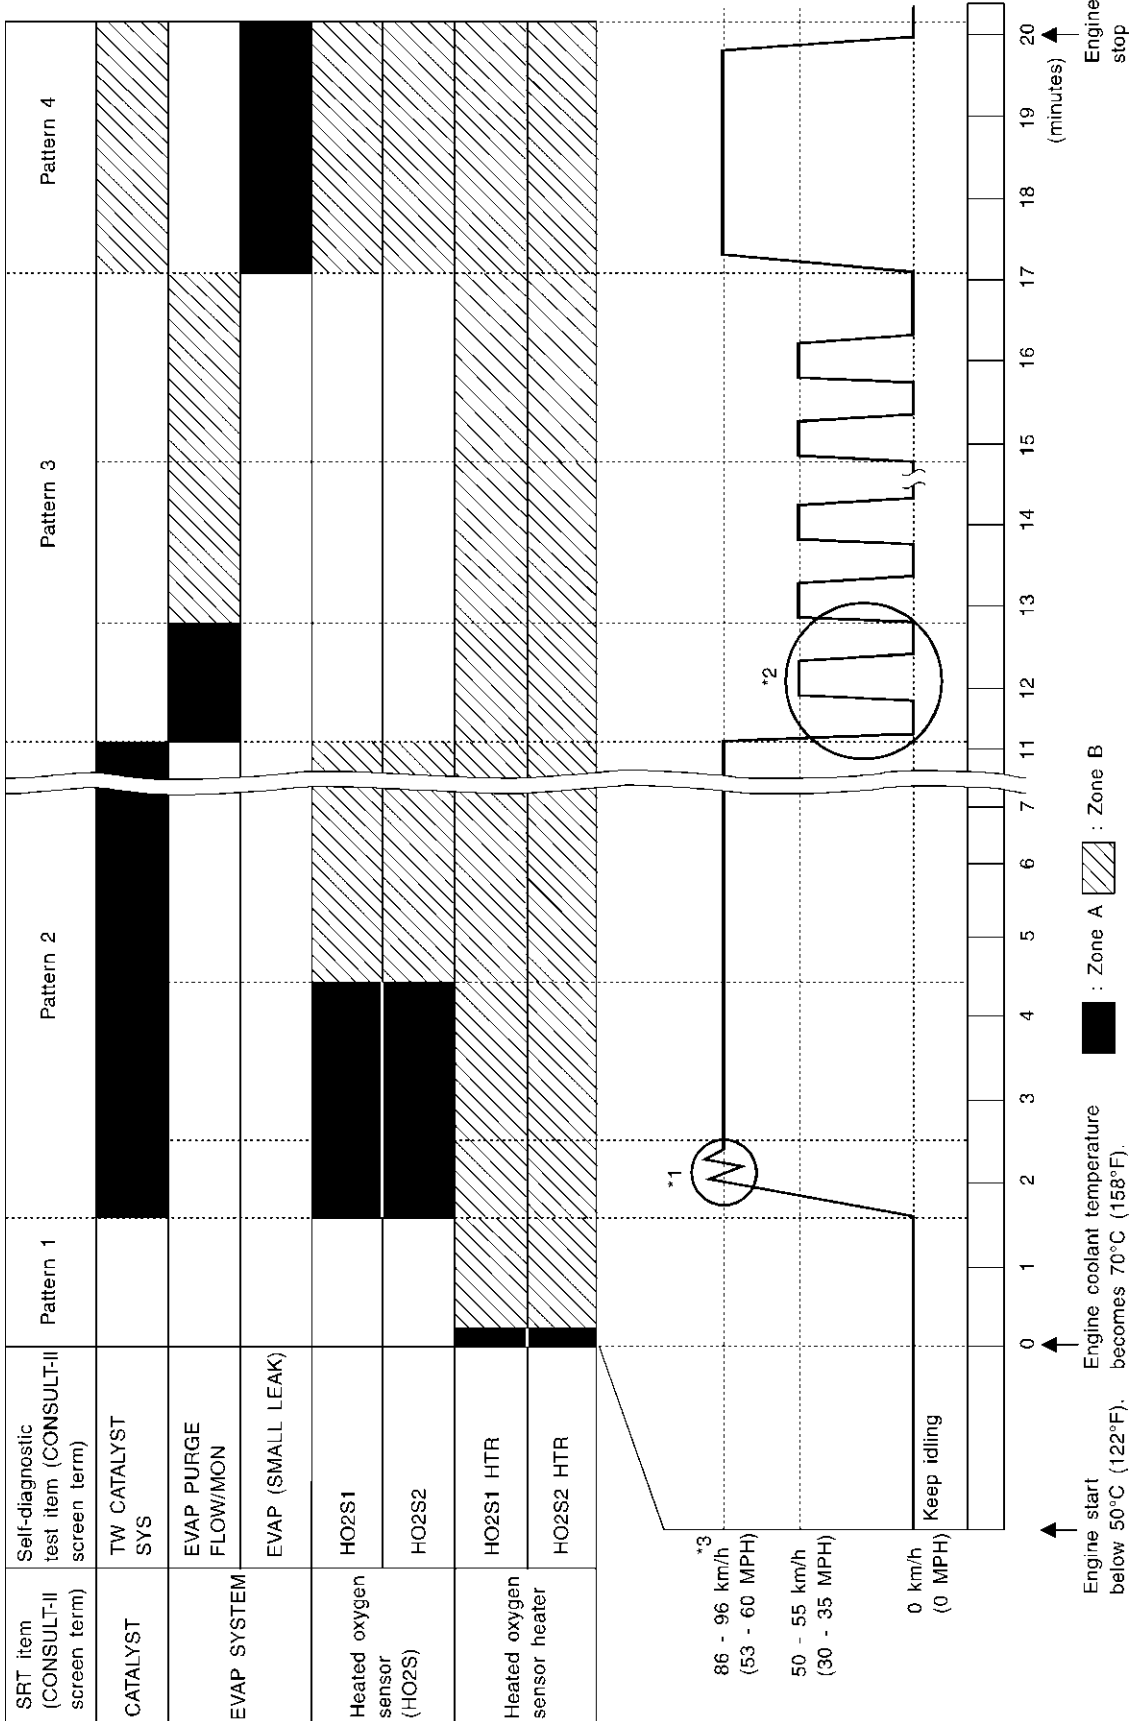

SEF947YB

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Emission-related Diagnostic Information (Cont'd)

- The time required for each diagnosis varies with road surface conditions, weather, altitude, individual driving habits, etc.
Zone A refers to the range where the time required, for the diagnosis under normal conditions*, is the shortest.
Zone B refers to the range where the diagnosis can still be performed if the diagnosis is not completed within zone A.

*: Normal conditions refer to the following:

- Sea level
- Flat road
- Ambient air temperature: 20 - 30°C (68 - 86°F)
- Diagnosis is performed as quickly as possible under normal conditions.
Under different conditions [For example: ambient air temperature other than 20 - 30°C (68 - 86°F)], diagnosis may also be performed.

Pattern 1:

- **The engine is started at the engine coolant temperature of -10 to 35°C (14 to 95°F) (where the voltage between the ECM terminal 70 and ground is 3.0 - 4.3V).**
- **The engine must be operated at idle speed until the engine coolant temperature is greater than 70°C (158°F) (where the voltage between the ECM terminal 70 and ground is lower than 1.4V).**
- **The engine is started at the fuel tank temperature of warmer than 0°C (32°F) (where the voltage between the ECM terminal 92 and ground is less than 4.1V).**

Pattern 2:

- When steady-state driving is performed again even after it is interrupted, each diagnosis can be conducted. In this case, the time required for diagnosis may be extended.

Pattern 3:

- The driving pattern outlined in *2 must be repeated at least 3 times.

Pattern 4:


- Tests are performed after the engine has been operated for at least 17 minutes.
- The accelerator pedal must be held very steady during steady-state driving.
- If the accelerator pedal is moved, the test must be conducted all over again.

*1: Depress the accelerator pedal until vehicle speed is 90 km/h (56 MPH), then release the accelerator pedal and keep it released for more than 10 seconds. Depress the accelerator pedal until vehicle speed is 90 km/h (56 MPH) again.

*2: Operate the vehicle in the following driving pattern.

- 1) Decelerate vehicle to 0 km/h (0 MPH) and let engine idle.
- 2) Repeat driving pattern shown below at least 10 times.

- **During acceleration, hold the accelerator pedal as steady as possible.**

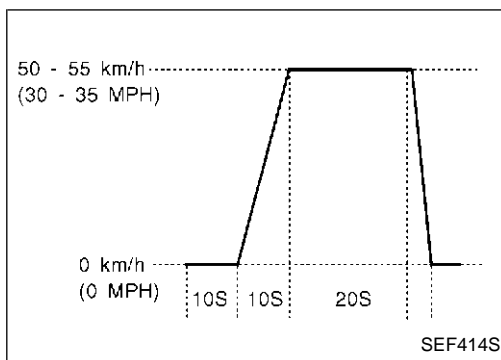

*3: Checking the vehicle speed with GST is advised.

Suggested Transmission Gear Position

Set the selector lever in the "D" position with the overdrive switch turned ON.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Emission-related Diagnostic Information (Cont'd)

	For normal acceleration in low altitude areas [less than 1,219 m (4,000 ft)]:		For quick acceleration in low altitude areas and high altitude areas [over 1,219 m (4,000 ft)]:
Gear change	ACCEL shift point km/h (MPH)	CRUISE shift point km/h (MPH)	km/h (MPH)
1st to 2nd	21 (13)	21 (13)	24 (15)
2nd to 3rd	37 (23)	26 (16)	40 (25)
3rd to 4th	53 (33)	44 (27)	64 (40)
4th to 5th	63 (39)	58 (36)	72 (45)

Suggested Maximum Speed in Each Gear

Downshift to a lower gear if the engine is not running smoothly, or if you need to accelerate. Do not exceed the maximum suggested speed (shown below) in any gear. For level road driving, use the highest gear suggested for that speed. Always observe posted speed limits and drive according to the road conditions to ensure safe operation. Do not over-rev the engine when shifting to a lower gear as it may cause engine damage or loss of vehicle control.

Gear	km/h (MPH)
1st	50 (30)
2nd	89 (55)
3rd	128 (80)
4th	—
5th	—

TEST VALUE AND TEST LIMIT (GST ONLY — NOT APPLICABLE TO CONSULT-II)

NBEC0031S04

The following is the information specified in Mode 6 of SAE J1979. The test value is a parameter used to determine whether a system/circuit diagnostic test is “OK” or “NG” while being monitored by the ECM during self-diagnosis. The test limit is a reference value which is specified as the maximum or minimum value and is compared with the test value being monitored.

Items for which these data (test value and test limit) are displayed are the same as SRT code items (30 test items).

These data (test value and test limit) are specified by Test ID (TID) and Component ID (CID) and can be displayed on the GST screen.

X: Applicable —: Not applicable

SRT item	Self-diagnostic test item	Test value (GST display)		Test limit	Application
		TID	CID		
CATALYST	Three way catalyst function (bank 1)	01H	01H	Max.	X
	Three way catalyst function (bank 2)	03H	02H	Max.	X
EVAP SYSTEM	EVAP control system (Small leak)	05H	03H	Max.	X
	EVAP control system purge flow monitoring	06H	83H	Min.	X

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Emission-related Diagnostic Information (Cont'd)

SRT item	Self-diagnostic test item	Test value (GST display)		Test limit	Application
		TID	CID		
HO2S	Heated oxygen sensor 1 (bank 1)	09H	04H	Max.	X
		0AH	84H	Min.	X
		0BH	04H	Max.	X
		0CH	04H	Max.	X
		0DH	04H	Max.	X
	Heated oxygen sensor 1 (bank 2)	11H	05H	Max.	X
		12H	85H	Min.	X
		13H	05H	Max.	X
		14H	05H	Max.	X
		15H	05H	Max.	X
	Heated oxygen sensor 2 (bank 1)	19H	86H	Min.	X
		1AH	86H	Min.	X
		1BH	06H	Max.	X
		1CH	06H	Max.	X
	Heated oxygen sensor 2 (bank 2)	21H	87H	Min.	X
		22H	87H	Min.	X
23H		07H	Max.	X	
24H		07H	Max.	X	
HO2S HTR	Heated oxygen sensor 1 heater (bank 1)	29H	08H	Max.	X
		2AH	88H	Min.	X
	Heated oxygen sensor 1 heater (bank 2)	2BH	09H	Max.	X
		2CH	89H	Min.	X
	Heated oxygen sensor 2 heater (bank 1)	2DH	0AH	Max.	X
		2EH	8AH	Min.	X
	Heated oxygen sensor 2 heater (bank 2)	2FH	0BH	Max.	X
		30H	8BH	Min.	X

EMISSION-RELATED DIAGNOSTIC INFORMATION ITEMS

X: Applicable —: Not applicable NBEC0031S05

Items (CONSULT-II screen terms)	DTC*1		SRT code	Test value/ Testlimit	1st trip DTC*1	Reference page
	CONSULT-II GST*2	ECM*3				
NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.	P0000	0000	—	—	—	—
INT/V TIM CONT-B1	P0011	0011	—	—	X	EC-162
INT/V TIM CONT-B2	P0021	0021	—	—	X	EC-162
HO2S1 HTR (B1)	P0031	0031	X	X	X*5	EC-166
HO2S1 HTR (B1)	P0032	0032	X	X	X*5	EC-166

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Emission-related Diagnostic Information (Cont'd)

Items (CONSULT-II screen terms)	DTC*1		SRT code	Test value/ Testlimit	1st trip DTC*1	Reference page
	CONSULT-II GST*2	ECM*3				
HO2S2 HTR (B1)	P0037	0037	X	X	X*5	EC-174
HO2S2 HTR (B1)	P0038	0038	X	X	X*5	EC-174
HO2S1 HTR (B2)	P0051	0051	X	X	X*5	EC-166
HO2S1 HTR (B2)	P0052	0052	X	X	X*5	EC-166
HO2S2 HTR (B2)	P0057	0057	X	X	X*5	EC-174
HO2S2 HTR (B2)	P0058	0058	X	X	X*5	EC-174
MAF SEN/CIRCUIT*7	P0101	0101	—	—	X	EC-182
MAF SEN/CIRCUIT*7	P0102	0102	—	—	X	EC-189
MAF SEN/CIRCUIT*7	P0103	0103	—	—	X	EC-189
ABSL PRES SEN/CIRC	P0107	0107	—	—	X	EC-195
ABSL PRES SEN/CIRC	P0108	0108	—	—	X	EC-195
IAT SEN/CIRCUIT	P0112	0112	—	—	X	EC-197
IAT SEN/CIRCUIT	P0113	0113	—	—	X	EC-197
ECT SEN/CIRC*3	P0117	0117	—	—	X	EC-201
ECT SEN/CIRC*3	P0118	0118	—	—	X	EC-201
APP SEN/CIRCUIT*7	P0121	0121	—	—	X	EC-206
TP SEN/CIRCUIT*7	P0122	0122	—	—	X	EC-217
TP SEN/CIRCUIT*7	P0123	0123	—	—	X	EC-217
ECT SENSOR*7	P0125	0125	—	—	X	EC-225
IAT SENSOR	P0127	0127	—	—	X	EC-228
HO2S1 (B1)	P0132	0132	X	X	X*5	EC-230
HO2S1 (B1)	P0133	0133	X	X	X*5	EC-239
HO2S1 (B1)	P0134	0134	X	X	X*5	EC-252
HO2S2 (B1)	P0138	0138	X	X	X*5	EC-262
HO2S2 (B1)	P0139	0139	X	X	X*5	EC-271
HO2S1 (B2)	P0152	0152	X	X	X*5	EC-230
HO2S1 (B2)	P0153	0153	X	X	X*5	EC-239
HO2S1 (B2)	P0154	0154	X	X	X*5	EC-252
HO2S2 (B2)	P0158	0158	X	X	X*5	EC-262
HO2S2 (B2)	P0159	0159	X	X	X*5	EC-271
FUEL SYS-LEAN-B1	P0171	0171	—	—	X	EC-282
FUEL SYS-RICH-B1	P0172	0172	—	—	X	EC-290
FUEL SYS-LEAN-B2	P0174	0174	—	—	X	EC-282
FUEL SYS-RICH-B2	P0175	0175	—	—	X	EC-290
FTT SENSOR	P0181	0181	—	—	X	EC-297
FTT SEN/CIRCUIT	P0182	0182	—	—	X	EC-300

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Emission-related Diagnostic Information (Cont'd)

Items (CONSULT-II screen terms)	DTC*1		SRT code	Test value/ Testlimit	1st trip DTC*1	Reference page	
	CONSULT-II GST*2	ECM*3					
FTT SEN/CIRCUIT	P0183	0183	—	—	X	EC-300	GI
ENG OVER TEMP	P0217	0217	—	—	X	EC-305	MA
MULTI CYL MISFIRE	P0300	0300	—	—	X	EC-311	EM
CYL 1 MISFIRE	P0301	0301	—	—	X	EC-311	
CYL 2 MISFIRE	P0302	0302	—	—	X	EC-311	LC
CYL 3 MISFIRE	P0303	0303	—	—	X	EC-311	
CYL 4 MISFIRE	P0304	0304	—	—	X	EC-311	EC
CYL 5 MISFIRE	P0305	0305	—	—	X	EC-311	
CYL 6 MISFIRE	P0306	0306	—	—	X	EC-311	FE
KNOCK SEN/CIRC-B1	P0327	0327	—	—	—	EC-320	
KNOCK SEN/CIRC-B1	P0328	0328	—	—	—	EC-320	AT
CKP SEN/CIRCUIT	P0335	0335	—	—	X	EC-325	
CMP SEN/CIRCUIT	P0340	0340	—	—	X	EC-333	TF
TW CATALYST SYS-B1	P0420	0420	X	X	X*5	EC-338	
TW CATALYST SYS-B2	P0430	0430	X	X	X*5	EC-338	PD
EVAP PURG FLOW/MON	P0441	0441	X	X	X*5	EC-343	
EVAP SMALL LEAK	P0442	0442	X	X	X*5	EC-354	AX
PURG VOLUME CONT/V	P0444	0444	—	—	X	EC-370	
PURG VOLUME CONT/V	P0445	0445	—	—	X	EC-370	SU
VENT CONTROL VALVE	P0447	0447	—	—	X	EC-377	BR
EVAP SYS PRES SEN	P0452	0452	—	—	X	EC-384	
EVAP SYS PRES SEN	P0453	0453	—	—	X	EC-390	ST
EVAP GROSS LEAK	P0455	0455	X	X	X*5	EC-399	
EVAP VERY SML LEAK	P0456	0456	X*4	X	X*5	EC-412	RS
FUEL LEV SEN SLOSH	P0460	0460	—	—	X	EC-428	
FUEL LEVEL SENSOR	P0461	0461	—	—	X	EC-432	BT
FUEL LEVL SEN/CIRC	P0462	0462	—	—	X	EC-434	
FUEL LEVL SEN/CIRC	P0463	0463	—	—	X	EC-434	HA
VEH SPEED SEN/CIRC*6	P0500	0500	—	—	X	EC-438	
ISC SYSTEM/CIRC	P0505	0505	—	—	X	EC-442	SC
ISC SYSTEM	P0506	0506	—	—	X	EC-449	
ISC SYSTEM	P0507	0507	—	—	X	EC-458	EL
CLOSED TP SW/CIRC	P0510	0510	—	—	X	EC-467	
A/T COMM LINE	P0600	0600	—	—	—	EC-475	IDX
ECM	P0605	0605	—	—	X	EC-478	
PNP SW/CIRC	P0705	0705	—	—	X	AT-100	

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Emission-related Diagnostic Information (Cont'd)

Items (CONSULT-II screen terms)	DTC*1		SRT code	Test value/ Testlimit	1st trip DTC*1	Reference page
	CONSULT-II GST*2	ECM*3				
ATF TEMP SEN/CIRC	P0710	0710	—	—	X	AT-106
VEH SPD SEN/CIR AT*6	P0720	0720	—	—	X	AT-112
ENGINE SPEED SIG	P0725	0725	—	—	X	AT-117
A/T 1ST GR FNCTN	P0731	0731	—	—	X	AT-121
A/T 2ND GR FNCTN	P0732	0732	—	—	X	AT-127
A/T 3RD GR FNCTN	P0733	0733	—	—	X	AT-133
A/T 4TH GR FNCTN	P0734	0734	—	—	X	AT-139
TCC SOLENOID/CIRC	P0740	0740	—	—	X	AT-149
A/T TCC S/V FNCTN	P0744	0744	—	—	X	AT-154
L/PRESS SOL/CIRC	P0745	0745	—	—	X	AT-162
SFT SOL A/CIRC*7	P0750	0750	—	—	X	AT-168
SFT SOL B/CIRC*7	P0755	0755	—	—	X	AT-172
MAF SENSOR*7	P1102	1102	—	—	X	EC-480
INT/V TIM V/CIR-B1	P1111	1111	—	—	X	EC-486
SWIRL CONT SOL/V	P1130	1130	—	—	X	EC-492
SWIRL CONT SOL/V	P1131	1131	—	—	X	EC-515
INT/V TIM V/CIR-B2	P1136	1136	—	—	X	EC-486
INTK TIM S/CIRC-B1	P1140	1140	—	—	X	EC-521
HO2S1 (B1)	P1143	1143	X	X	X*5	EC-530
HO2S1 (B1)	P1144	1144	X	X	X*5	EC-538
INTK TIM S/CIRC-B2	P1145	1145	—	—	X	EC-521
HO2S2 (B1)	P1146	1146	X	X	X*5	EC-546
HO2S2 (B1)	P1147	1147	X	X	X*5	EC-557
CLOSED LOOP-B1	P1148	1148	—	—	X	EC-568
HO2S1 (B2)	P1163	1163	X	X	X*5	EC-530
HO2S1 (B2)	P1164	1164	X	X	X*5	EC-538
SWL CON VC SW/CIRC	P1165	1165	—	—	X	EC-570
HO2S2 (B2)	P1166	1166	X	X	X*5	EC-546
HO2S2 (B2)	P1167	1167	X	X	X*5	EC-557
CLOSED LOOP-B2	P1168	1168	—	—	X	EC-568
ENG OVER TEMP	P1217	1217	—	—	X	EC-576
CKP SEN (REF)/CIRC	P1335	1335	—	—	X	EC-581
CKP SENSOR (COG)	P1336	1336	—	—	X	EC-587
PURG VOLUME CONT/V	P1444	1444	—	—	X	EC-596
VENT CONTROL VALVE	P1446	1446	—	—	X	EC-608
VENT CONTROL VALVE	P1448	1448	—	—	X	EC-616

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Emission-related Diagnostic Information (Cont'd)

Items (CONSULT-II screen terms)	DTC*1		SRT code	Test value/ Testlimit	1st trip DTC*1	Reference page
	CONSULT-II GST*2	ECM*3				
EVAP VERY SML LEAK	P1456	1456	X	X	X*5	EC-625
FUEL LEVL SEN/CIRC	P1464	1464	—	—	X	EC-641
VC/V BYPASS/V	P1490	1490	—	—	X	EC-644
VC CUT/V BYPASS/V	P1491	1491	—	—	X	EC-650
A/T DIAG COMM LINE	P1605	1605	—	—	X	EC-662
NATS MALFUNCTION	P1610-P1615	1610-1615	—	—	X	EL-499
TP SEN/CIRC A/T*3	P1705	1705	—	—	X	AT-176
P-N POS SW/CIRCUIT	P1706	1706	—	—	X	EC-663
O/R CLTCH SOL/CIRC	P1760	1760	—	—	X	AT-185

*1: 1st trip DTC No. is the same as DTC No.

*2: These numbers are prescribed by SAE J2012.

*3: In Diagnostic Test Mode II (Self-diagnostic results), these numbers are controlled by NISSAN.

*4: SRT code will not be set if the self-diagnostic result is NG.

*5: These are not displayed with GST.

*6: When the fail-safe operations for both self-diagnoses occur at the same time, the MIL illuminates.

*7: When the fail-safe operation occurs, the MIL illuminates.

NOTE:

Regarding R50 models, “-B1” indicates bank 1 and “-B2” indicates bank 2.

HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION

How to Erase DTC

Ⓔ With CONSULT-II

NOTE:

If the DTC is not for A/T related items (see EC-8), skip steps 2 through 4.

1. If the ignition switch stays “ON” after repair work, be sure to turn ignition switch “OFF” once. Wait at least 10 seconds and then turn it “ON” (engine stopped) again.
 2. Turn CONSULT-II “ON” and touch “A/T”.
 3. Touch “SELF-DIAG RESULTS”.
 4. Touch “ERASE”. [The DTC in the TCM (Transmission control module) will be erased.] Then touch “BACK” twice.
 5. Touch “ENGINE”.
 6. Touch “SELF-DIAG RESULTS”.
 7. Touch “ERASE”. (The DTC in the ECM will be erased.)
- If DTCs are displayed for both ECM and TCM (Transmission control module), they need to be erased individually from the ECM and TCM (Transmission control module).

NBEC0031S06

NBEC0031S0601

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Emission-related Diagnostic Information (Cont'd)

How to erase DTC (With CONSULT-II)

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 10 seconds and then turn it "ON" (engine stopped) again.

SELECT SYSTEM
ENGINE
A/T


2. Turn **CONSULT-II** "ON", and touch "A/T".

SELECT DIAG MODE
SELF-DIAG RESULTS
DATA MONITOR
DTC WORK SUPPORT
TCM PART NUMBER

3. Touch "SELF-DIAG RESULTS".

SELF-DIAG RESULTS	
DTC RESULTS	TIME
SHIFT SOLENOID/V A	

4. Touch "ERASE". (The DTC in the TCM will be erased.)



SELECT SYSTEM
ENGINE
A/T

5. Touch "ENGINE".

SELECT DIAG MODE
WORK SUPPORT
SELF-DIAG RESULTS
DATA MONITOR
DATA MONITOR (SPEC)
ACTIVE TEST
DTC & SRT CONFIRMATION
ECM PART NUMBER

6. Touch "SELF-DIAG RESULTS".

SELF DIAG RESULTS	
DTC RESULTS	TIME
SFT SOL A/CIRC [P0750]	0

7. Touch "ERASE". (The DTC in the ECM will be erased.)

SEF823YA

The emission related diagnostic information in the ECM can be erased by selecting "ERASE" in the "SELF-DIAG RESULTS" mode with CONSULT-II.

If DTCs are displayed for both ECM and TCM (Transmission control module), they need to be erased individually from the ECM and TCM (Transmission control module).

With GST

NOTE:

If the DTC is not for A/T related items (see EC-8), skip step 2.

8. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 10 seconds and then turn it "ON" (engine stopped) again.
9. Perform "SELF-DIAGNOSTIC PROCEDURE (Without CONSULT-II)" in AT section titled "TROUBLE DIAGNOSIS", "Self-diagnosis". (The engine warm-up step can be skipped when performing the diagnosis only to erase the DTC.)
10. Select Mode 4 with GST (Generic Scan Tool).

The emission related diagnostic information in the ECM can be erased by selecting Mode 4 with GST.

● **If the battery is disconnected, the emission-related diagnostic information will be lost within 24 hours.**

● **The following data are cleared when the ECM memory is erased.**

- 1) Diagnostic trouble codes
- 2) 1st trip diagnostic trouble codes
- 3) Freeze frame data
- 4) 1st trip freeze frame data
- 5) System readiness test (SRT) codes
- 6) Test values
- 7) Others

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Emission-related Diagnostic Information (Cont'd)

Actual work procedures are explained using a DTC as an example. Be careful so that not only the DTC, but all of the data listed above, are cleared from the ECM memory during work procedures.

IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM — NATS)

NBEC0031S08

SELF DIAG RESULTS	
DTC RESULTS	TIME
NATS MALFUNCTION [P1610]	0


SEF515Y

- If the security indicator lights up with the ignition switch in the “ON” position or “NATS MALFUNCTION” is displayed on “SELF-DIAG RESULTS” screen, perform self-diagnostic results mode with CONSULT-II using NATS program card. Refer to EL-499, “IVIS (INFINITI Vehicle Immobilizer System — NATS)”.
- Confirm no self-diagnostic results of IVIS (NATS) is displayed before touching “ERASE” in “SELF-DIAG RESULTS” mode with CONSULT-II.
- When replacing ECM, initialization of IVIS (NATS) system and registration of all IVIS (NATS) ignition key IDs must be carried out with CONSULT-II using NATS program card. Therefore, be sure to receive all keys from vehicle owner. Regarding the procedures of IVIS (NATS) initialization and IVIS (NATS) ignition key ID registration, refer to CONSULT-II operation manual, IVIS/NVIS.

Malfunction Indicator Lamp (MIL)

DESCRIPTION

NBEC0032

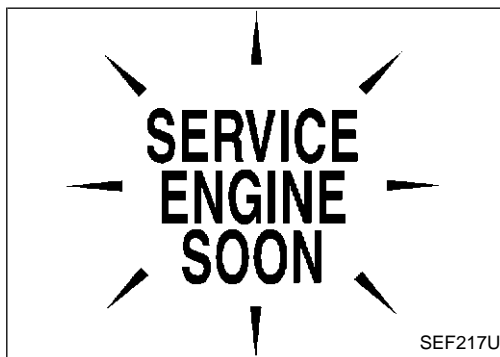

The MIL is located on the instrument panel.

1. The MIL will light up when the ignition switch is turned ON without the engine running. This is a bulb check.
 - If the MIL does not light up, refer to EL-148, “WARNING LAMPS” or see EC-720.
2. When the engine is started, the MIL should go off.
 - If the MIL remains on, the on board diagnostic system has detected an engine system malfunction.







On Board Diagnostic System Function

NBEC0032S01

The on board diagnostic system has the following four functions.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Malfunction Indicator Lamp (MIL) (Cont'd)

Diagnostic Test Mode	KEY and ENG. Status	Function	Explanation of Function
Mode I	Ignition switch in "ON" position  Engine stopped 	BULB CHECK	This function checks the MIL bulb for damage (blown, open circuit, etc.). If the MIL does not come on, check MIL circuit.
	Engine running 	MALFUNCTION WARNING	This is a usual driving condition. When a malfunction is detected twice in two consecutive driving cycles (two trip detection logic), the MIL will light up to inform the driver that a malfunction has been detected. The following malfunctions will light up or blink the MIL in the 1st trip. <ul style="list-style-type: none"> ● Coolant overtemperature enrichment protection ● "Misfire (Possible three way catalyst damage)" ● "Closed loop control" ● Fail-safe mode
Mode II	Ignition switch in "ON" position  Engine stopped 	SELF-DIAGNOSTIC RESULTS	This function allows DTCs and 1st trip DTCs to be read.
	Engine running 	HEATED OXYGEN SENSOR 1 MONITOR	This function allows the fuel mixture condition (lean or rich), monitored by heated oxygen sensor 1, to be read.

MIL Flashing without DTC

If the ECM is in Diagnostic Test Mode II, MIL may flash when engine is running. In this case, check ECM diagnostic test mode. How to Switch Diagnostic Test Mode.

How to switch the diagnostic test (function) modes, and details of the above functions are described later. How to Switch Diagnostic Test Mode.

The following emission-related diagnostic information is cleared when the ECM memory is erased.

1. Diagnostic trouble codes
2. 1st trip diagnostic trouble codes
3. Freeze frame data
4. 1st trip freeze frame data
5. System readiness test (SRT) codes
6. Test values
7. Others

HOW TO SWITCH DIAGNOSTIC TEST MODE

NOTE:

- It is better to count the time accurately with a clock.
- It is impossible to switch the diagnostic mode when an accelerator pedal position sensor circuit has a malfunction.
- Always ECM returns to Diagnostic Test Mode I after ignition switch is turned "OFF".


How to Set Diagnostic Test Mode II (Self-diagnostic Results)

1. Confirm that accelerator pedal is fully released, turn ignition switch "ON" and wait 3 seconds.
2. Repeat the following procedure quickly five times within 5 seconds.
 - 1) Fully depress the accelerator pedal.
 - 2) Fully release the accelerator pedal.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Malfunction Indicator Lamp (MIL) (Cont'd)

- Wait 7 seconds, fully depress the accelerator pedal and keep it for approx. 10 seconds until the MIL starts blinking.
- Fully release the accelerator pedal.
ECM has entered to Diagnostic Test Mode II (Self-diagnostic results).

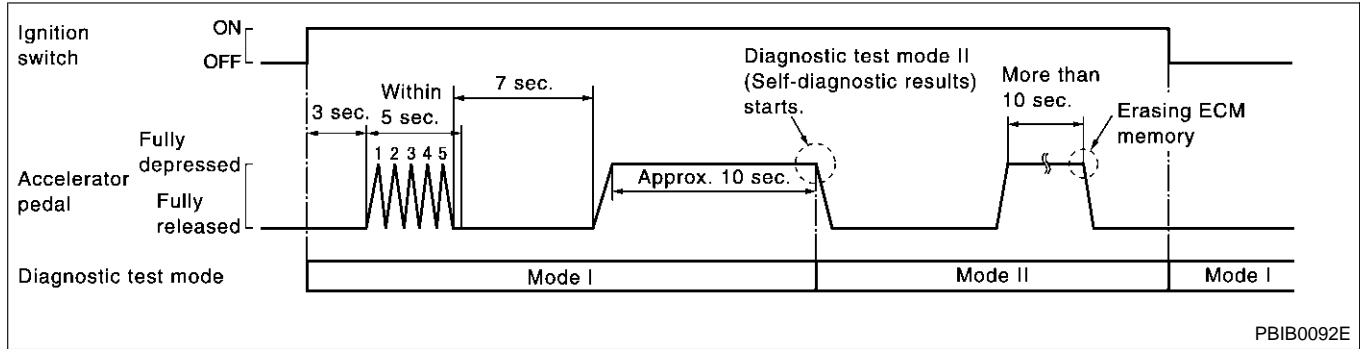


How to Set Diagnostic Test Mode II (Heated Oxygen Sensor 1 Monitor)

- Set the ECM in Diagnostic Test Mode II (Self-diagnostic results). Refer to How to Set Diagnostic Test Mode II (Self-diagnostic Results). NBEC0032S0702
- Start Engine.
ECM has entered to Diagnostic Test Mode II (Heated oxygen sensor 1 monitor).
ECM will start heated oxygen sensor 1 monitoring from the bank 1 sensor.

How to Set Diagnostic Switch Monitored Sensor from Bank 1 to Bank 2 or Vice versa

- Fully depress the accelerator pedal quickly and then release it immediately. NBEC0032S0703
- Make sure that monitoring sensor has changed by MIL blinking as follows.

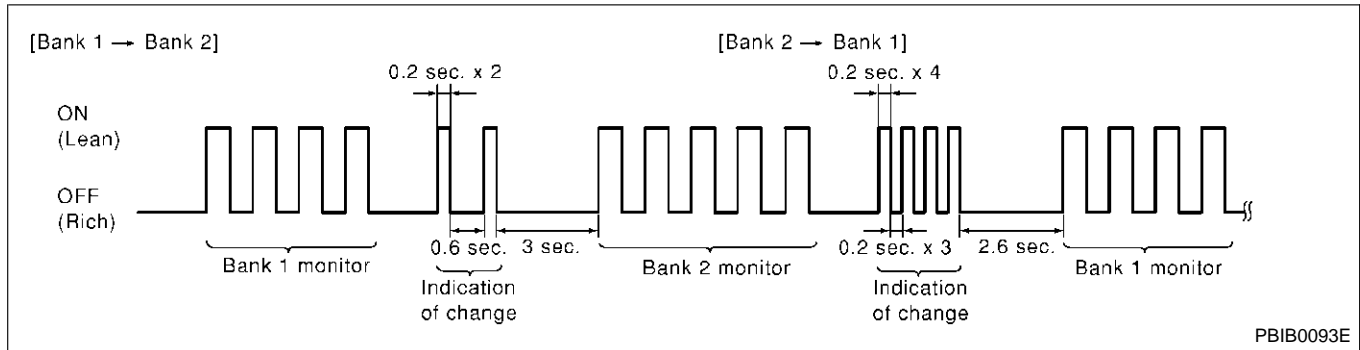

How to Erase Diagnostic Test Mode II (Self-diagnostic Results)

- Set ECM in Diagnostic Test Mode II (Self-diagnostic results). Refer to How to Set Diagnostic Test Mode II (Self-diagnostic Results). NBEC0032S0704
- Fully depress the accelerator pedal and keep it for more than 10 seconds. The emission-related diagnostic information has been erased from the backup memory in the ECM.
- Fully release the accelerator pedal, and confirm the DTC 0000 is displayed.

Diagnostic Test Mode I — Bulb Check

In this mode, the MIL on the instrument panel should stay ON. If it remains OFF, check the bulb. Refer to EL-148, "WARNING LAMPS" or see EC-720. NBEC0032S03

Diagnostic Test Mode I — Malfunction Warning

MIL	Condition
ON	When the malfunction is detected or the ECM's CPU is malfunctioning.
OFF	No malfunction.

- These DTC numbers are clarified in Diagnostic Test Mode II (SELF-DIAGNOSTIC RESULTS).


ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Malfunction Indicator Lamp (MIL) (Cont'd)

Diagnostic Test Mode II — Self-Diagnostic Results

NBEC0032S08

In this mode, the DTC and 1st trip DTC are indicated by the number of blinks of the MIL as shown below. The DTC and 1st trip DTC are displayed at the same time. If the MIL does not illuminate in diagnostic test mode I (Malfunction warning), all displayed items are 1st trip DTCs. If only one code is displayed when the MIL illuminates in diagnostic test mode II (SELF-DIAGNOSTIC RESULTS), it is a DTC; if two or more codes are displayed, they may be either DTCs or 1st trip DTCs. DTC No. is same as that of 1st trip DTC. These unidentified codes can be identified by using the CONSULT-II or GST. A DTC will be used as an example for how to read a code.

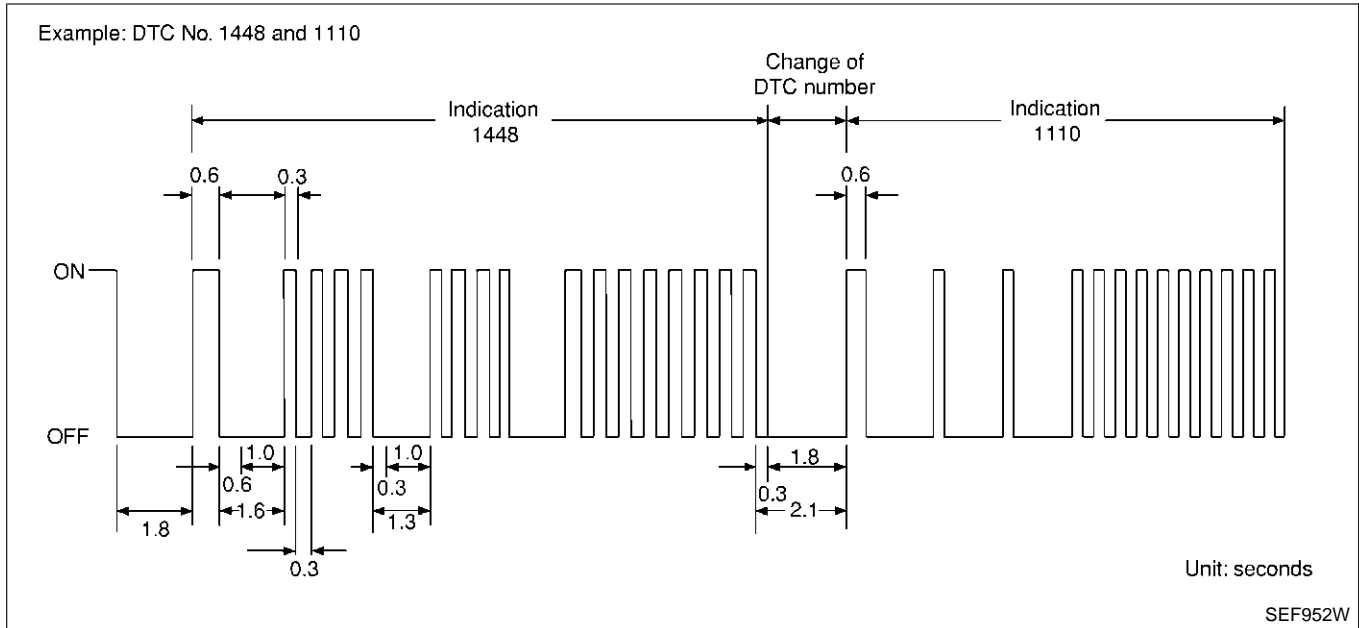

A particular trouble code can be identified by the number of four-digit numeral flashes. The “zero” is indicated by the number of ten flashes. The length of time the 1,000th-digit numeral flashes on and off is 1.2 seconds consisting of an ON (0.6-second) - OFF (0.6-second) cycle.

The 100th-digit numeral and lower digit numerals consist of a 0.3-second ON and 0.3-second OFF cycle.

A change from one digit numeral to another occurs at an interval of 1.0-second OFF. In other words, the later numeral appears on the display 1.3 seconds after the former numeral has disappeared.

A change from one trouble code to another occurs at an interval of 1.8-second OFF.

In this way, all the detected malfunctions are classified by their DTC numbers. The DTC “0000” refers to no malfunction. (See “TROUBLE DIAGNOSIS — INDEX”, EC-8.)

How to Erase Diagnostic Test Mode II (Self-diagnostic Results)

NBEC0032S0801

The DTC can be erased from the back up memory in the ECM by depressing accelerator pedal. Refer to How to Switch Diagnostic Test Mode.

- If the battery is disconnected, the DTC will be lost from the backup memory within 24 hours.
- Be careful not to erase the stored memory before starting trouble diagnoses.

Diagnostic Test Mode II — Heated Oxygen Sensor 1 Monitor

NBEC0032S09

In this mode, the MIL displays the condition of the fuel mixture (lean or rich) which is monitored by the heated oxygen sensor 1.

MIL	Fuel mixture condition in the exhaust gas	Air fuel ratio feedback control condition
ON	Lean	Closed loop system
OFF	Rich	
*Remains ON or OFF	Any condition	Open loop system

*: Maintains conditions just before switching to open loop.

To check the heated oxygen sensor 1 function, start engine in the Diagnostic Test Mode II and warm it up until engine coolant temperature indicator points to the middle of the gauge.

Next run engine at about 2,000 rpm for about 2 minutes under no-load conditions. Then make sure that the MIL comes ON more than 5 times within 10 seconds with engine running at 2,000 rpm under no-load.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

OBD System Operation Chart

OBD System Operation Chart

NBEC0033

RELATIONSHIP BETWEEN MIL, 1ST TRIP DTC, DTC, AND DETECTABLE ITEMS

NBEC0033S01

- When a malfunction is detected for the first time, the 1st trip DTC and the 1st trip freeze frame data are stored in the ECM memory. GI
- When the same malfunction is detected in two consecutive trips, the DTC and the freeze frame data are stored in the ECM memory, and the MIL will come on. For details, refer to “Two Trip Detection Logic” on EC-71. MA
- The MIL will go off after the vehicle is driven 3 times with no malfunction. The drive is counted only when the recorded driving pattern is met (as stored in the ECM). If another malfunction occurs while counting, the counter will reset. EM
- The DTC and the freeze frame data will be stored until the vehicle is driven 40 times (driving pattern A) without the same malfunction recurring (except for Misfire and Fuel Injection System). For Misfire and Fuel Injection System, the DTC and freeze frame data will be stored until the vehicle is driven 80 times (driving pattern C) without the same malfunction recurring. The “TIME” in “SELF-DIAGNOSTIC RESULTS” mode of CONSULT-II will count the number of times the vehicle is driven. LC
- The 1st trip DTC is not displayed when the self-diagnosis results in “OK” for the 2nd trip. EC

SUMMARY CHART

NBEC0033S02

Items	Fuel Injection System	Misfire	Other
MIL (goes off)	3 (pattern B)	3 (pattern B)	3 (pattern B)
DTC, Freeze Frame Data (no display)	80 (pattern C)	80 (pattern C)	40 (pattern A)
1st Trip DTC (clear)	1 (pattern C), *1	1 (pattern C), *1	1 (pattern B)
1st Trip Freeze Frame Data (clear)	*1, *2	*1, *2	1 (pattern B)

For details about patterns “B” and “C” under “Fuel Injection System” and “Misfire”, see EC-93.

For details about patterns “A” and “B” under “Other”, see EC-95.

*1: Clear timing is at the moment OK is detected.


*2: Clear timing is when the same malfunction is detected in the 2nd trip.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

OBD System Operation Chart (Cont'd)

RELATIONSHIP BETWEEN MIL, DTC, 1ST TRIP DTC AND DRIVING PATTERNS FOR "MISFIRE" <EXHAUST QUALITY DETERIORATION>, "FUEL INJECTION SYSTEM"

=NBEC0033S03

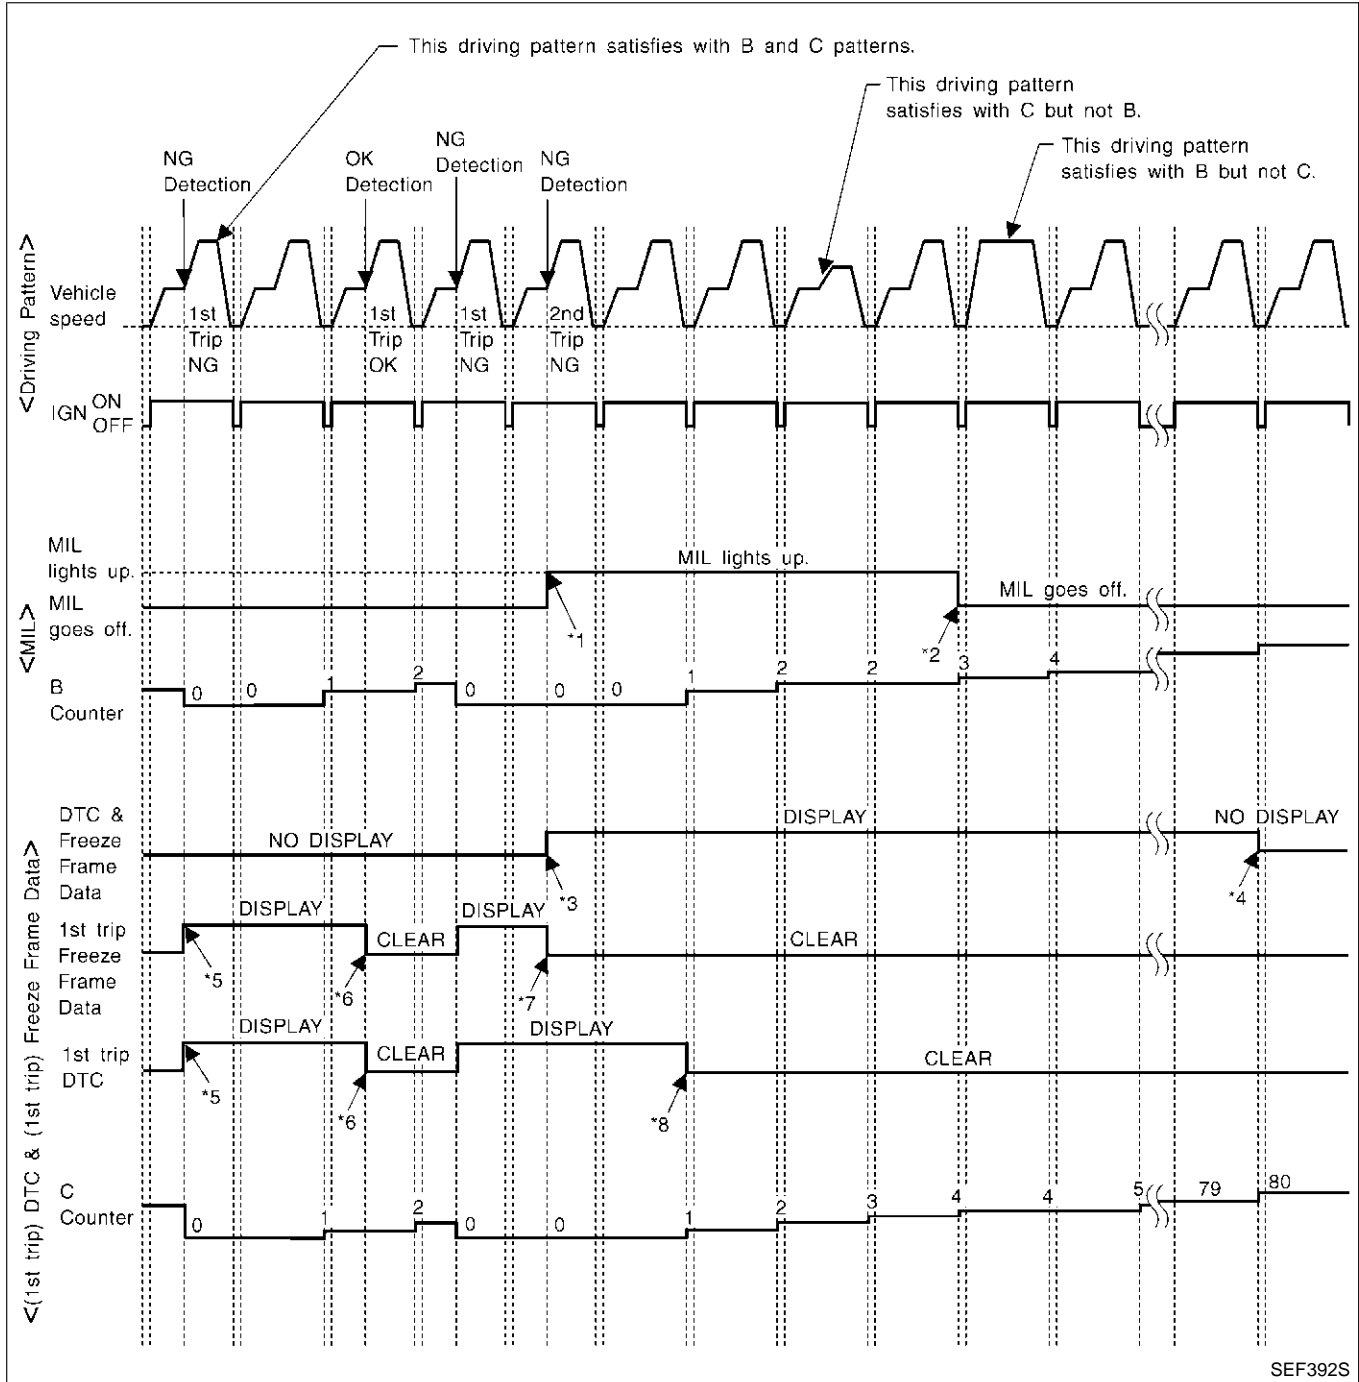

SEF392S

- *1: When the same malfunction is detected in two consecutive trips, MIL will light up.
- *2: MIL will go off after vehicle is driven 3 times (pattern B) without any malfunctions.
- *3: When the same malfunction is detected in two consecutive trips, the DTC and the freeze frame data will be stored in ECM.
- *4: The DTC and the freeze frame

- data will not be displayed any longer after vehicle is driven 80 times (pattern C) without the same malfunction. (The DTC and the freeze frame data still remain in ECM.)
- *5: When a malfunction is detected for the first time, the 1st trip DTC and the 1st trip freeze frame data will be stored in ECM.
- *6: The 1st trip DTC and the 1st trip

- freeze frame data will be cleared at the moment OK is detected.
- *7: When the same malfunction is detected in the 2nd trip, the 1st trip freeze frame data will be cleared.
- *8: 1st trip DTC will be cleared when vehicle is driven once (pattern C) without the same malfunction after DTC is stored in ECM.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

OBD System Operation Chart (Cont'd)

EXPLANATION FOR DRIVING PATTERNS FOR “MISFIRE <EXHAUST QUALITY DETERIORATION>”, “FUEL INJECTION SYSTEM”

NBEC0033S04

GI

NBEC0033S0401

<Driving Pattern B>

Driving pattern B means the vehicle operation as follows:

All components and systems should be monitored at least once by the OBD system.

- The B counter will be cleared when the malfunction is detected once regardless of the driving pattern.
- The B counter will be counted up when driving pattern B is satisfied without any malfunction.
- The MIL will go off when the B counter reaches 3. (*2 in “OBD SYSTEM OPERATION CHART”)

MA

EM

<Driving Pattern C>

NBEC0033S0402

LC

Driving pattern C means the vehicle operation as follows:

1) The following conditions should be satisfied at the same time:

Engine speed: (Engine speed in the freeze frame data) ± 375 rpm

Calculated load value: (Calculated load value in the freeze frame data) $\times (1 \pm 0.1)$ [%]

Engine coolant temperature (T) condition:

- When the freeze frame data shows lower than 70°C (158°F), “T” should be lower than 70°C (158°F).
- When the freeze frame data shows higher than or equal to 70°C (158°F), “T” should be higher than or equal to 70°C (158°F).

EC

FE

Example:

If the stored freeze frame data is as follows:

Engine speed: 850 rpm, Calculated load value: 30%, Engine coolant temperature: 80°C (176°F)

To be satisfied with driving pattern C, the vehicle should run under the following conditions:

Engine speed: 475 - 1,225 rpm, Calculated load value: 27 - 33%, Engine coolant temperature: more than 70°C (158°F)

AT

TF

- The C counter will be cleared when the malfunction is detected regardless of (1).

PD

- The C counter will be counted up when (1) is satisfied without the same malfunction.

- The DTC will not be displayed after C counter reaches 80.

AX

- The 1st trip DTC will be cleared when C counter is counted once without the same malfunction after DTC is stored in ECM.

SU

BR

ST

RS

BT

HA

SC

EL


IDX

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

OBD System Operation Chart (Cont'd)

RELATIONSHIP BETWEEN MIL, DTC, 1ST TRIP DTC AND DRIVING PATTERNS EXCEPT FOR "MISFIRE <EXHAUST QUALITY DETERIORATION>", "FUEL INJECTION SYSTEM"

NBEC0033S05

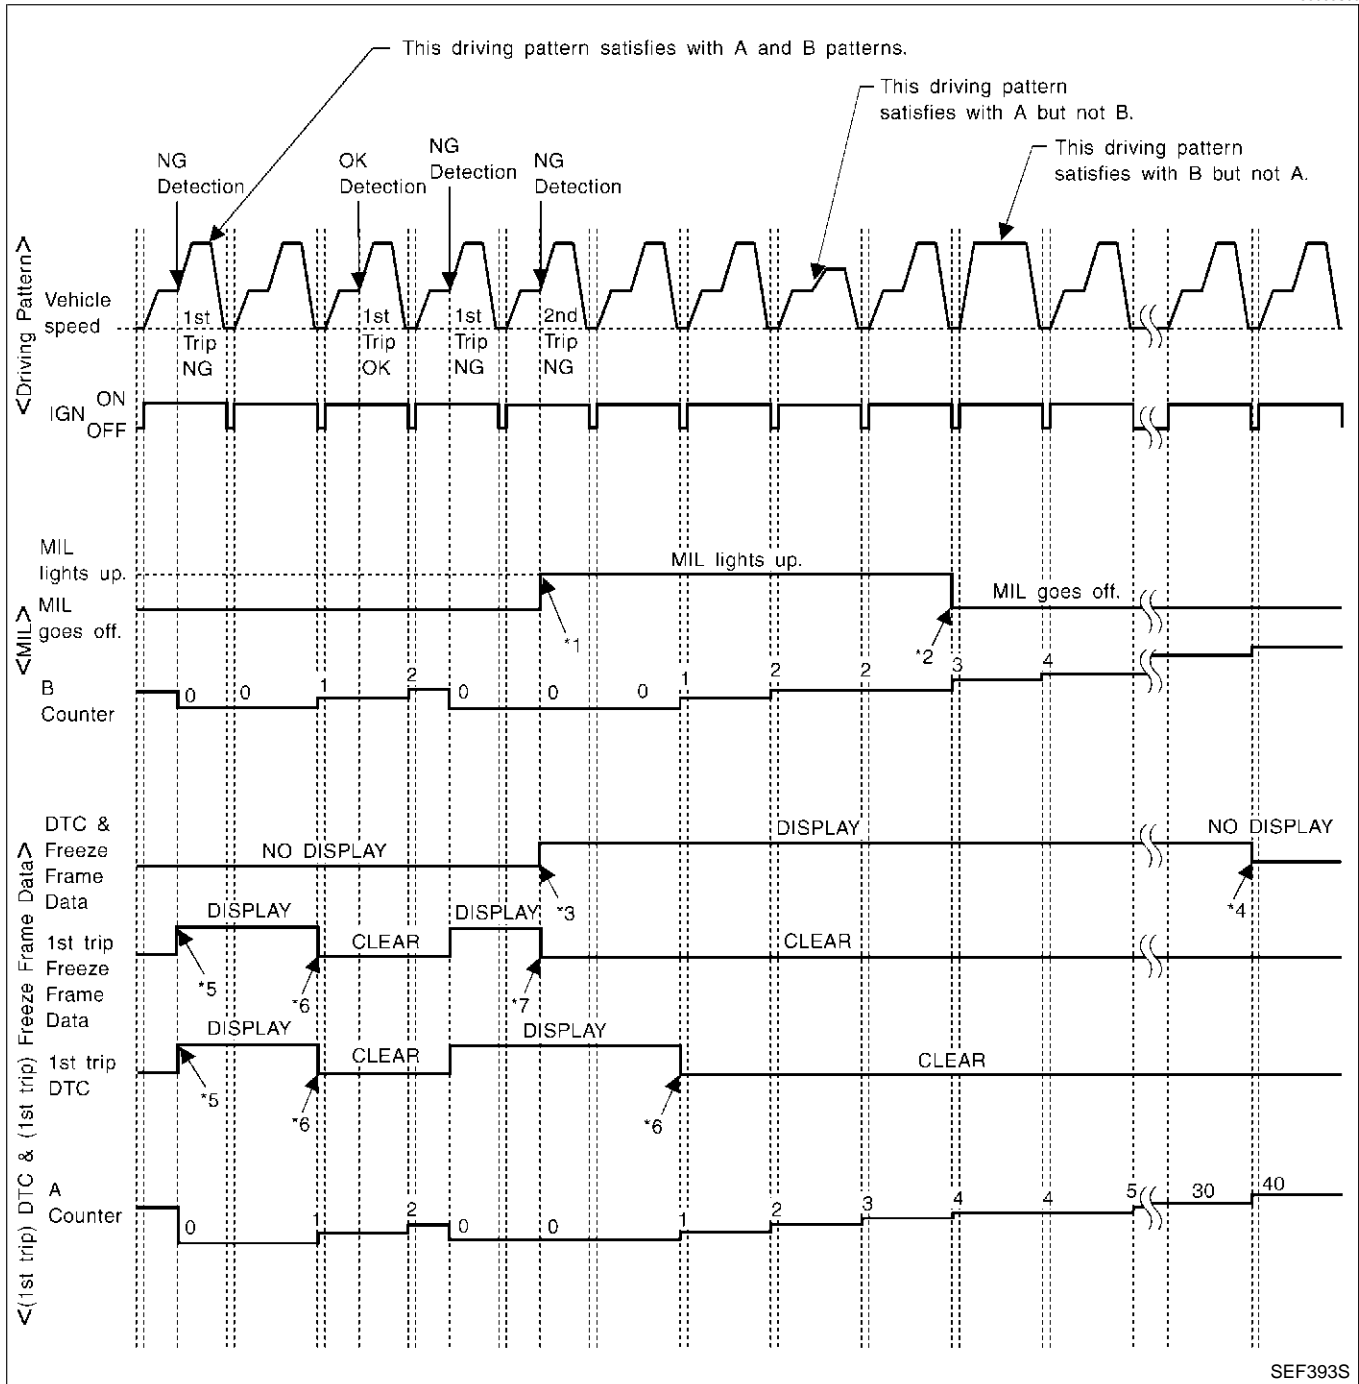

SEF393S

- *1: When the same malfunction is detected in two consecutive trips, MIL will light up.
- *2: MIL will go off after vehicle is driven 3 times (pattern B) without any malfunctions.
- *3: When the same malfunction is detected in two consecutive trips, the DTC and the freeze frame data will be stored in ECM.

- *4: The DTC and the freeze frame data will not be displayed any longer after vehicle is driven 40 times (pattern A) without the same malfunction. (The DTC and the freeze frame data still remain in ECM.)
- *5: When a malfunction is detected for the first time, the 1st trip DTC

- and the 1st trip freeze frame data will be stored in ECM.
- *6: 1st trip DTC will be cleared after vehicle is driven once (pattern B) without the same malfunction.
- *7: When the same malfunction is detected in the 2nd trip, the 1st trip freeze frame data will be cleared.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION


OBD System Operation Chart (Cont'd)

EXPLANATION FOR DRIVING PATTERNS EXCEPT FOR "MISFIRE <EXHAUST QUALITY DETERIORATION>", "FUEL INJECTION SYSTEM"

<Driving Pattern A>

NBEC0033S06

NBEC0033S0601

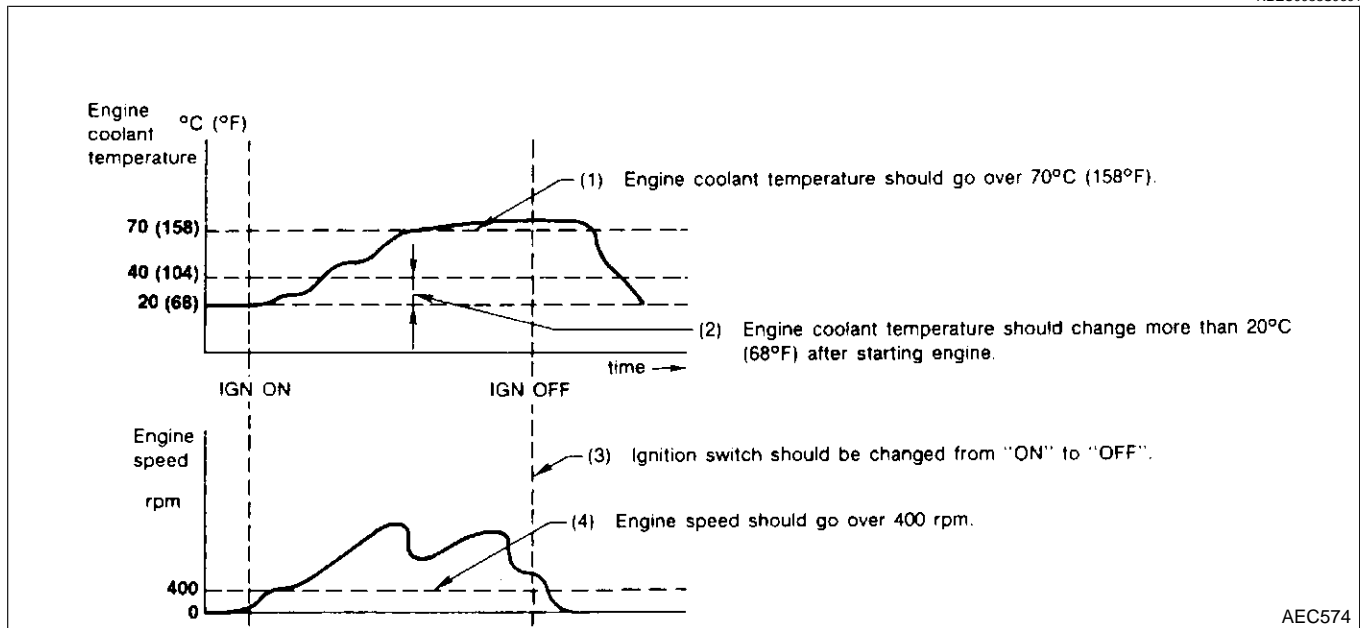

- The A counter will be cleared when the malfunction is detected regardless of (1) - (4).
- The A counter will be counted up when (1) - (4) are satisfied without the same malfunction.
- The DTC will not be displayed after the A counter reaches 40.

<Driving Pattern B>

NBEC0033S0602

Driving pattern B means the vehicle operation as follows:


All components and systems should be monitored at least once by the OBD system.

- The B counter will be cleared when the malfunction is detected once regardless of the driving pattern.
- The B counter will be counted up when driving pattern B is satisfied without any malfunctions.
- The MIL will go off when the B counter reaches 3 (*2 in "OBD System Operation Chart", EC-91).

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT-II

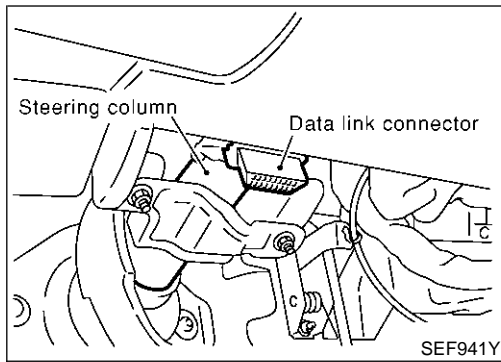


CONSULT-II INSPECTION PROCEDURE


=NBEC0034

NBEC0034S01


1. Turn ignition switch OFF.
2. Connect CONSULT-II and "CONSULT-II CONVERTER" to data link connector, which is located under LH dash panel near the fuse box cover.

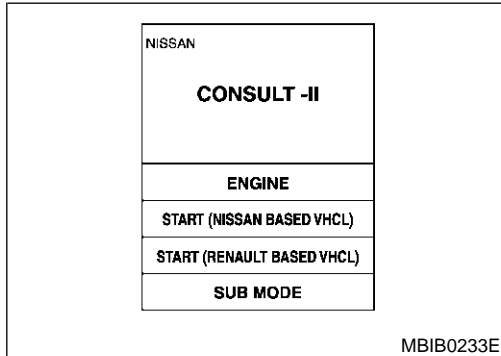

3. Turn ignition switch ON.
4. Touch "START (NISSAN BASED VHCL)".

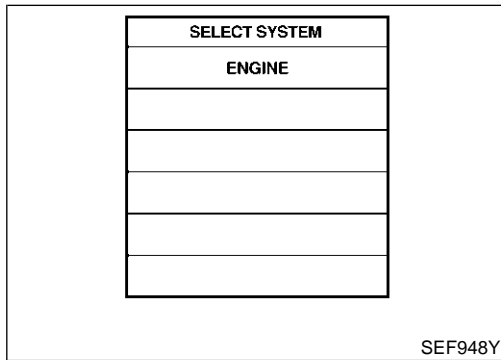

5. Touch "ENGINE".
If "ENGINE" is not indicated, go to GI-42, "CONSULT-II Data Link Connector (DLC) Circuit".

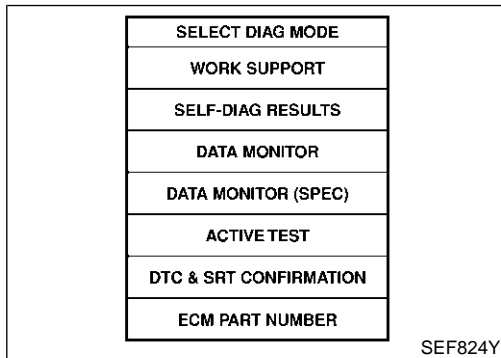

6. Perform each diagnostic test mode according to each service procedure.

For further information, see the CONSULT-II Operation Manual.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT-II (Cont'd)

ENGINE CONTROL COMPONENT PARTS/CONTROL SYSTEMS APPLICATION

NBEC0034S02

Item		DIAGNOSTIC TEST MODE							
		WORK SUP-PORT	SELF-DIAGNOSTIC RESULTS		DATA MONI-TOR	DATA MONI-TOR (SPEC)	ACTIVE TEST	DTC & SRT CONFIRMATION	
			DTC*1	FREEZE FRAME DATA*2				SRT STATUS	DTC WORK SUP-PORT
ENGINE CONTROL COMPONENT PARTS INPUT	Crankshaft position sensor (POS)		X	X	X	X			GI
	Crankshaft position sensor (REF)		X		X	X			MA
	Mass air flow sensor		X		X	X			EM
	Engine coolant temperature sensor		X	X	X	X	X		LC
	Heated oxygen sensor 1		X		X	X		X	X
	Heated oxygen sensor 2		X		X	X		X	X
	Vehicle speed sensor		X	X	X	X			FE
	Throttle position sensor		X		X	X			AT
	Fuel tank temperature sensor		X		X	X	X		TF
	EVAP control system pressure sensor		X		X	X			PD
	Absolute pressure sensor		X		X	X			AX
	Intake air temperature sensor		X		X	X			SU
	Knock sensor		X						BR
	Ignition switch (start signal)				X	X			ST
	Closed throttle position switch		X		X	X			RS
	Closed throttle position switch (throttle position sensor signal)				X	X			BT
	Air conditioner switch				X	X			HA
	Park/neutral position (PNP) switch		X		X	X			SC
	Power steering oil pressure switch				X	X			EL
	Battery voltage				X	X			IDX
Ambient air temperature switch				X	X				
Load signal				X	X				
Swirl control valve control vacuum check switch		X		X	X				
Fuel level sensor		X		X	X				
Intake valve timing control position sensor		X		X	X				

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT-II (Cont'd)

Item		DIAGNOSTIC TEST MODE							
		WORK SUP-PORT	SELF-DIAGNOSTIC RESULTS		DATA MONI-TOR	DATA MONI-TOR (SPEC)	ACTIVE TEST	DTC & SRT CONFIRMATION	
			DTC*1	FREEZE FRAME DATA*2				SRT STATUS	DTC WORK SUP-PORT
ENGINE CONTROL COMPONENT PARTS OUTPUT	Injectors				X	X	X		
	Power transistor (Ignition timing)		X (Ignition signal)		X	X	X		
	IACV-AAC valve		X		X	X	X		
	EVAP canister purge volume control solenoid valve		X		X	X	X		X
	Air conditioner relay				X	X			
	Fuel pump relay	X			X	X	X		
	Heated oxygen sensor 1 heater		X		X	X		X	
	Heated oxygen sensor 2 heater		X		X	X		X	
	EVAP canister vent control valve	X	X		X	X	X		
	Vacuum cut valve bypass valve	X	X		X	X	X		X
	Swirl control valve control solenoid valve		X		X	X	X		
	VIAS control solenoid valve				X	X	X		
	Intake valve timing control solenoid valve		X		X	X	X		
	Calculated load value			X	X	X			

X: Applicable

*1: This item includes 1st trip DTCs.

*2: This mode includes 1st trip freeze frame data or freeze frame data. The items appear on CONSULT-II screen in freeze frame data mode only if a 1st trip DTC or DTC is detected. For details, refer to EC-73.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT-II (Cont'd)

FUNCTION		
Diagnostic test mode	Function	
WORK SUPPORT	This mode enables a technician to adjust some devices faster and more accurately by following the indications on the CONSULT-II unit.	GI
SELF-DIAG RESULTS	Self-diagnostic results such as 1st trip DTC, DTCs and 1st trip freeze frame data or freeze frame data can be read and erased quickly.*1	MA
DATA MONITOR	Input/Output data in the ECM can be read.	EM
DATA MONITOR (SPEC)	Input/Output specification of the basic fuel schedule, AFM, A/F feedback control value and the other data monitor items can be read.	LC
ACTIVE TEST	Diagnostic Test Mode in which CONSULT-II drives some actuators apart from the ECMs and also shifts some parameters in a specified range.	EC
FUNCTION TEST	Conducted by CONSULT-II instead of a technician to determine whether each system is "OK" or "NG".	
DTC & SRT CONFIRMATION	The status of system monitoring tests and the self-diagnosis status/result can be confirmed.	FE
ECM PART NUMBER	ECM part number can be read.	AT

*1 The following emission-related diagnostic information is cleared when the ECM memory is erased.

- 1) Diagnostic trouble codes
- 2) 1st trip diagnostic trouble codes
- 3) Freeze frame data
- 4) 1st trip freeze frame data
- 5) System readiness test (SRT) codes
- 6) Test values
- 7) Others

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT-II (Cont'd)

WORK SUPPORT MODE

=NBEC0034S04

WORK ITEM	CONDITION	USAGE
TP SW/TP SEN IDLE POSI ADJ	<ul style="list-style-type: none"> FOLLOW THE BASIC INSPECTION INSTRUCTION IN THE SERVICE MANUAL. 	When adjusting the idle throttle position
FUEL PRESSURE RELEASE	<ul style="list-style-type: none"> FUEL PUMP WILL STOP BY TOUCHING "START" DURING IDLING. CRANK A FEW TIMES AFTER ENGINE STALLS. 	When releasing fuel pressure from fuel line
IDLE AIR VOL LEARN	<ul style="list-style-type: none"> THE IDLE AIR VOLUME THAT KEEPS THE ENGINE WITHIN THE SPECIFIED RANGE IS MEMORIZED IN ECM. 	When learning the idle air volume
SELF-LEARNING CONT	<ul style="list-style-type: none"> THE COEFFICIENT OF SELF-LEARNING CONTROL MIXTURE RATIO RETURNS TO THE ORIGINAL COEFFICIENT. 	When clearing the coefficient of self-learning control value
EVAP SYSTEM CLOSE	<p>OPEN THE VACUUM CUT VALVE BYPASS VALVE AND CLOSE THE EVAP CANISTER VENT CONTROL VALVE IN ORDER TO MAKE EVAP SYSTEM CLOSE UNDER THE FOLLOWING CONDITIONS.</p> <ul style="list-style-type: none"> IGN SW "ON" ENGINE NOT RUNNING AMBIENT TEMPERATURE IS ABOVE 0°C (32°F). NO VACUUM AND NO HIGH PRESSURE IN EVAP SYSTEM TANK FUEL TEMP. IS MORE THAN 0°C (32°F). WITHIN 10 MINUTES AFTER STARTING "EVAP SYSTEM CLOSE" WHEN TRYING TO EXECUTE "EVAP SYSTEM CLOSE" UNDER THE CONDITION EXCEPT ABOVE, CONSULT-II WILL DISCONTINUE IT AND DISPLAY APPROPRIATE INSTRUCTION. <p>NOTE: WHEN STARTING ENGINE, CONSULT-II MAY DISPLAY "BATTERY VOLTAGE IS LOW. CHARGE BATTERY", EVEN IN USING CHARGED BATTERY.</p>	When detecting EVAP vapor leak point of EVAP system
TARGET IGN TIM ADJ*	<ul style="list-style-type: none"> IDLE CONDITION 	<ul style="list-style-type: none"> When adjusting target ignition timing After adjustment, confirm target ignition timing with a timing light. If once the "TARGET IDLE RPM ADJ" has been done, the Idle Air Volume Learning procedure will not be completed.
TARGET IDLE RPM ADJ*	<ul style="list-style-type: none"> IDLE CONDITION 	When setting target idle speed

*: This function is not necessary in the usual service procedure.

SELF-DIAGNOSTIC MODE

NBEC0034S05

DTC and 1st Trip DTC

Regarding items of "DTC and 1st trip DTC", refer to "TROUBLE DIAGNOSIS — INDEX" (See EC-8.)

NBEC0034S0501

Freeze Frame Data and 1st Trip Freeze Frame Data

NBEC0034S0502

Freeze frame data item*1	Description
DIAG TROUBLE CODE [PXXXX]	<ul style="list-style-type: none"> The engine control component part/control system has a trouble code, it is displayed as "PXXXX". (Refer to "TROUBLE DIAGNOSIS — INDEX", EC-8.)

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT-II (Cont'd)

Freeze frame data item*1	Description	
FUEL SYS-B1*2	<ul style="list-style-type: none"> ● "Fuel injection system status" at the moment a malfunction is detected is displayed. ● One mode in the following is displayed. 	GI
FUEL SYS-B2*2	<ul style="list-style-type: none"> ● "MODE 2": Open loop due to detected system malfunction ● "MODE 3": Open loop due to driving conditions (power enrichment, deceleration enleanment) ● "MODE 4": Closed loop - using oxygen sensor(s) as feedback for fuel control ● "MODE 5": Open loop - has not yet satisfied condition to go to closed loop 	MA EM
CAL/LD VALUE [%]	<ul style="list-style-type: none"> ● The calculated load value at the moment a malfunction is detected is displayed. 	
COOLANT TEMP [°C] or [°F]	<ul style="list-style-type: none"> ● The engine coolant temperature at the moment a malfunction is detected is displayed. 	LC
S-FUEL TRM-B1 [%]	<ul style="list-style-type: none"> ● "Short-term fuel trim" at the moment a malfunction is detected is displayed. ● The short-term fuel trim indicates dynamic or instantaneous feedback compensation to the base fuel schedule. 	EC
S-FUEL TRM-B2 [%]		
L-FUEL TRM-B1 [%]	<ul style="list-style-type: none"> ● "Long-term fuel trim" at the moment a malfunction is detected is displayed. ● The long-term fuel trim indicates much more gradual feedback compensation to the base fuel schedule than short-term fuel trim. 	FE
L-FUEL TRM-B2 [%]		
ENGINE SPEED [rpm]	<ul style="list-style-type: none"> ● The engine speed at the moment a malfunction is detected is displayed. 	AT
VHCL SPEED [km/h] or [mph]	<ul style="list-style-type: none"> ● The vehicle speed at the moment a malfunction is detected is displayed. 	TF
ABSOL TH·P/S [% or degree]	<ul style="list-style-type: none"> ● The throttle valve opening angle at the moment a malfunction is detected is displayed. 	PD
B/FUEL SCHDL [msec]	<ul style="list-style-type: none"> ● The base fuel schedule at the moment a malfunction is detected is displayed. 	AX
INT/A TEMP SE [°C] or [°F]	<ul style="list-style-type: none"> ● The intake air temperature at the moment a malfunction is detected is displayed. 	SU

*1: The items are the same as those of 1st trip freeze frame data.

*2: Regarding R50 model, "-B1" indicates bank 1 and "-B2" indicates bank 2.

BR

ST

RS

BT

HA

SC

EL

IDX

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT-II (Cont'd)

DATA MONITOR MODE

=NBEC0034S06

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks
ENG SPEED [rpm]	○	○	<ul style="list-style-type: none"> Indicates the engine speed computed from the REF signal (120° signal) of the crankshaft position sensor (REF). 	
CKPS-RPM (POS) [rpm]	○		<ul style="list-style-type: none"> Indicates the engine speed computed from the POS signal (1° signal) of the crankshaft position sensor (POS). 	<ul style="list-style-type: none"> Accuracy becomes poor if engine speed drops below the idle rpm. If the signal is interrupted while the engine is running, an abnormal value may be indicated.
POS COUNT	○		<ul style="list-style-type: none"> Indicates the number of signal plate (Drive plate) cogs (tooth) during one revolution of the engine. 	
MAS A/F SE-B1 [V]	○	○	<ul style="list-style-type: none"> The signal voltage of the mass air flow sensor is displayed. 	<ul style="list-style-type: none"> When the engine is stopped, a certain value is indicated.
COOLAN TEMP/S [°C] or [°F]	○	○	<ul style="list-style-type: none"> The engine coolant temperature (determined by the signal voltage of the engine coolant temperature sensor) is displayed. 	<ul style="list-style-type: none"> When the engine coolant temperature sensor is open or short-circuited, ECM enters fail-safe mode. The engine coolant temperature determined by the ECM is displayed.
HO2S1 (B1) [V]	○	○	<ul style="list-style-type: none"> The signal voltage of the front heated oxygen sensor is displayed. 	
HO2S1 (B2) [V]	○			
HO2S2 (B1) [V]	○		<ul style="list-style-type: none"> The signal voltage of the rear heated oxygen sensor is displayed. 	
HO2S2 (B2) [V]	○			
HO2S1 MNTR (B1) [RICH/LEAN]	○	○	<ul style="list-style-type: none"> Display of heated oxygen sensor 1 signal during air-fuel ratio feedback control: RICH ... means the mixture became "rich", and control is being affected toward a leaner mixture. LEAN ... means the mixture became "lean", and control is being affected toward a rich mixture. 	<ul style="list-style-type: none"> After turning ON the ignition switch, "RICH" is displayed until air-fuel mixture ratio feedback control begins. When the air-fuel ratio feedback is clamped, the value just before the clamping is displayed continuously.
HO2S1 MNTR (B2) [RICH/LEAN]	○			
HO2S2 MNTR (B1) [RICH/LEAN]	○		<ul style="list-style-type: none"> Display of heated oxygen sensor 2 signal: RICH ... means the amount of oxygen after three way catalyst is relatively small. LEAN ... means the amount of oxygen after three way catalyst is relatively large. 	<ul style="list-style-type: none"> When the engine is stopped, a certain value is indicated.
HO2S2 MNTR (B2) [RICH/LEAN]	○			
VHCL SPEED SE [km/h] or [mph]	○	○	<ul style="list-style-type: none"> The vehicle speed computed from the vehicle speed sensor signal is displayed. 	
BATTERY VOLT [V]	○	○	<ul style="list-style-type: none"> The power supply voltage of ECM is displayed. 	
THRTL POS SEN [V]	○	○	<ul style="list-style-type: none"> The throttle position sensor signal voltage is displayed. 	
FUEL T/TMP SE [°C] or [°F]	○		<ul style="list-style-type: none"> The fuel temperature judged from the tank fuel temperature sensor signal voltage is displayed. 	

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT-II (Cont'd)

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks	
INT/A TEMP SE [°C] or [°F]	○	○	<ul style="list-style-type: none"> The intake air temperature determined by the signal voltage of the intake air temperature sensor is indicated. 		GI MA
EVAP SYS PRES [V]	○		<ul style="list-style-type: none"> The signal voltage of EVAP control system pressure sensor is displayed. 		EM
ABSOL PRES/SE [V]	○		<ul style="list-style-type: none"> The signal voltage of the absolute pressure sensor is displayed. 		LC
FUEL LEVEL SE [V]	○		<ul style="list-style-type: none"> The signal voltage of the fuel level sensor is displayed. 		EC
START SIGNAL [ON/OFF]	○	○	<ul style="list-style-type: none"> Indicates [ON/OFF] condition from the starter signal. 	<ul style="list-style-type: none"> After starting the engine, [OFF] is displayed regardless of the starter signal. 	FE
CLSD THL POS [ON/OFF]	○	○	<ul style="list-style-type: none"> Indicates idle position [ON/OFF] computed by ECM according to the throttle position sensor signal. 		AT
CLSD THL/P SW [ON/OFF]	○		<ul style="list-style-type: none"> Indicates mechanical contact [ON/OFF] condition of the closed throttle position switch. 		TF
AIR COND SIG [ON/OFF]	○	○	<ul style="list-style-type: none"> Indicates [ON/OFF] condition of the air conditioner switch as determined by the air conditioner signal. 		PD
P/N POSI SW [ON/OFF]	○	○	<ul style="list-style-type: none"> Indicates [ON/OFF] condition from the park/neutral position (PNP) switch signal. 		AX
PW/ST SIGNAL [ON/OFF]	○	○	<ul style="list-style-type: none"> [ON/OFF] condition of the power steering oil pressure switch determined by the power steering oil pressure signal is indicated. 		SU
LOAD SIGNAL [ON/OFF]	○	○	<ul style="list-style-type: none"> Indicates [ON/OFF] condition from the electrical load signal and/or lighting switch. ON ... rear defogger is operating and/or lighting switch is on. OFF ... rear defogger is not operating and lighting switch is not on. 		BR ST RS
IGNITION SW [ON/OFF]	○		<ul style="list-style-type: none"> Indicates [ON/OFF] condition from ignition switch. 		BT
SWRL CONT S/V [ON/OFF]			<ul style="list-style-type: none"> The control condition of the swirl control valve control solenoid valve (determined by ECM according to the input signals) is indicated. ON ... Swirl control valve is closed. OFF ... Swirl control valve is opened. 		HA SC
INJ PULSE-B1 [msec]		○	<ul style="list-style-type: none"> Indicates the actual fuel injection pulse width compensated by ECM according to the input signals. 	<ul style="list-style-type: none"> When the engine is stopped, a certain computed value is indicated. 	EL
INJ PULSE-B2 [msec]					
B/FUEL SCHDL [msec]		○	<ul style="list-style-type: none"> "Base fuel schedule" indicates the fuel injection pulse width programmed into ECM, prior to any learned on board correction. 		IDX
IGN TIMING [BTDC]		○	<ul style="list-style-type: none"> Indicates the ignition timing computed by ECM according to the input signals. 	<ul style="list-style-type: none"> When the engine is stopped, a certain value is indicated. 	

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT-II (Cont'd)

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks
IACV-AAC/V [step]		○	<ul style="list-style-type: none"> Indicates the IACV-AAC valve control value computed by ECM according to the input signals. 	
PURG VOL C/V [%]			<ul style="list-style-type: none"> Indicates the EVAP canister purge volume control solenoid valve control value computed by the ECM according to the input signals. The opening becomes larger as the value increases. 	
A/F ALPHA-B1 [%]		○	<ul style="list-style-type: none"> The mean value of the air-fuel ratio feedback correction factor per cycle is indicated. 	<ul style="list-style-type: none"> When the engine is stopped, a certain value is indicated. This data also includes the data for the air-fuel ratio learning control.
A/F ALPHA-B2 [%]		○		
AIR COND RLY [ON/OFF]		○	<ul style="list-style-type: none"> The air conditioner relay control condition (determined by ECM according to the input signal) is indicated. 	
FUEL PUMP RLY [ON/OFF]		○	<ul style="list-style-type: none"> Indicates the fuel pump relay control condition determined by ECM according to the input signals. 	
VENT CONT/V [ON/OFF]			<ul style="list-style-type: none"> The control condition of the EVAP canister vent control valve (determined by ECM according to the input signal) is indicated. ON ... Closed OFF ... Open 	
HO2S1 HTR (B1) [ON/OFF]			<ul style="list-style-type: none"> Indicates [ON/OFF] condition of front heated oxygen sensor heater determined by ECM according to the input signals. 	
HO2S1 HTR (B2) [ON/OFF]				
HO2S2 HTR (B1) [ON/OFF]			<ul style="list-style-type: none"> Indicates [ON/OFF] condition of rear heated oxygen sensor heater determined by ECM according to the input signals. 	
HO2S2 HTR (B2) [ON/OFF]				
VC/V BYPASS/V [ON/OFF]			<ul style="list-style-type: none"> The control condition of the vacuum cut valve bypass valve (determined by ECM according to the input signal) is indicated. ON ... Open OFF ... Closed 	
CAL/LD VALUE [%]			<ul style="list-style-type: none"> "Calculated load value" indicates the value of the current airflow divided by peak airflow. 	
ABSOL TH-P/S [% or degree]			<ul style="list-style-type: none"> "Absolute throttle position sensor" indicates the throttle opening computed by ECM according to the signal voltage of the throttle position sensor. 	
MASS AIRFLOW [g·m/s]			<ul style="list-style-type: none"> Indicates the mass airflow computed by ECM according to the signal voltage of the mass airflow sensor. 	
INT/V TIM (B1) [°CA]			<ul style="list-style-type: none"> Indicate [°CA] of intake camshaft advanced angle. 	
INT/V TIM (B2) [°CA]				

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT-II (Cont'd)

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks
INT/V SOL (B1) [%]			<ul style="list-style-type: none"> The control condition of the intake valve timing control solenoid valve is indicated. 	GI
INT/V SOL (B2) [%]				MA
TRVL AFTER MIL [km] or [Mile]			<ul style="list-style-type: none"> Distance traveled while MIL is activated 	EM
VIAS S/V [ON/OFF]			<ul style="list-style-type: none"> The control condition of the VIAS control solenoid valve (determined by ECM according to the input signal) is indicated. OFF ... VIAS control solenoid valve is not operating. ON ... VIAS control solenoid valve is operating. 	LC EC
SWL CON VC SW	○		<ul style="list-style-type: none"> Indicates [ON/OFF] condition from the swirl control valve control vacuum check switch. ON ... Swirl control valve is not operational. OFF ... Swirl control valve is operational. 	FE AT TF
IDL A/V LEARN			<ul style="list-style-type: none"> Display the condition of idle air volume learning YET ... Idle air volume learning has not been performed yet. CMPLT ... Idle air volume learning has already been performed successfully. 	PD AX
Voltage [V]			<ul style="list-style-type: none"> Voltage measured by the voltage probe. 	SU
Frequency [msec] or [Hz] or [%]			<ul style="list-style-type: none"> Pulse width, frequency or duty cycle measured by the pulse probe. 	BR ST

NOTE:

- Any monitored item that does not match the vehicle being diagnosed is deleted from the display automatically.
- Regarding R50 model, "-B1" indicates bank 1 and "-B2" indicates bank 2.
- Bank 1 (-B1) includes No. 1 cylinder.

DATA MONITOR (SPEC) MODE

NBEC0034S11

Monitored item [Unit]	ECM input signals	Main signals	Description	Remarks
MAS A/F SE-B1 [V]	○	○	<ul style="list-style-type: none"> The signal voltage of the mass air flow sensor specification is displayed. 	<ul style="list-style-type: none"> When the engine is running, specification range is indicated.
B/FUEL SCHDL [msec]			<ul style="list-style-type: none"> "Base fuel schedule" indicates the fuel injection pulse width programmed into ECM, prior to any learned on board correction. 	<ul style="list-style-type: none"> When the engine is running, specification range is indicated.
A/F ALPHA-B1 [%]		○	<ul style="list-style-type: none"> Indicates the mean value of the air-fuel ratio feedback correction factor per cycle. 	<ul style="list-style-type: none"> When the engine is running, specification range is indicated.
A/F ALPHA-B2 [%]		○		<ul style="list-style-type: none"> This data also includes the data for the air-fuel ratio learning control.

NOTE:

- Any monitored item that does not match the vehicle being diagnosed is deleted from the display automatically.

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT-II (Cont'd)

- Regarding R50 model, "B1" indicates bank 1 and "B2" indicates bank 2.

ACTIVE TEST MODE

NBEC0034S07

TEST ITEM	CONDITION	JUDGEMENT	CHECK ITEM (REMEDY)
FUEL INJECTION	<ul style="list-style-type: none"> ● Engine: Return to the original trouble condition ● Change the amount of fuel injection using CONSULT-II. 	If trouble symptom disappears, see CHECK ITEM.	<ul style="list-style-type: none"> ● Harness and connector ● Fuel injectors ● Heated oxygen sensor
IGNITION TIMING	<ul style="list-style-type: none"> ● Engine: Return to the original trouble condition ● Timing light: Set ● Retard the ignition timing using CONSULT-II. 	If trouble symptom disappears, see CHECK ITEM.	<ul style="list-style-type: none"> ● Adjust initial ignition timing
IACV-AAC/V OPENING	<ul style="list-style-type: none"> ● Engine: After warming up, idle the engine. ● Change the IACV-AAC valve opening percent using CONSULT-II. 	Engine speed changes according to the opening percent.	<ul style="list-style-type: none"> ● Harness and connector ● IACV-AAC valve
POWER BALANCE	<ul style="list-style-type: none"> ● Engine: After warming up, idle the engine. ● A/C switch "OFF" ● Shift lever "N" ● Cut off each injector signal one at a time using CONSULT-II. 	Engine runs rough or dies.	<ul style="list-style-type: none"> ● Harness and connector ● Compression ● Injectors ● Power transistor ● Spark plugs ● Ignition coils
ENG COOLANT TEMP	<ul style="list-style-type: none"> ● Engine: Return to the original trouble condition ● Change the engine coolant temperature using CONSULT-II. 	If trouble symptom disappears, see CHECK ITEM.	<ul style="list-style-type: none"> ● Harness and connector ● Engine coolant temperature sensor ● Fuel injectors
FUEL PUMP RELAY	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) ● Turn the fuel pump relay "ON" and "OFF" using CONSULT-II and listen to operating sound. 	Fuel pump relay makes the operating sound.	<ul style="list-style-type: none"> ● Harness and connector ● Fuel pump relay
VIAS SOL VALVE	<ul style="list-style-type: none"> ● Ignition switch: ON ● Turn solenoid valve "ON" and "OFF" with CONSULT-II and listen for operating sound. 	Solenoid valve makes an operating sound.	<ul style="list-style-type: none"> ● Harness and connector ● Solenoid valve
SWIRL CONT SOL VALVE	<ul style="list-style-type: none"> ● Ignition switch: ON ● Turn solenoid valve "ON" and "OFF" with CONSULT-II and listen for operating sound. 	Solenoid valve makes an operating sound.	<ul style="list-style-type: none"> ● Harness and connector ● Solenoid valve
PURG VOL CONT/V	<ul style="list-style-type: none"> ● Engine: After warming up, run engine at 1,500 rpm. ● Change the EVAP canister purge volume control solenoid valve opening percent using CONSULT-II. 	Engine speed changes according to the opening percent.	<ul style="list-style-type: none"> ● Harness and connector ● Solenoid valve
FUEL/T TEMP SEN	<ul style="list-style-type: none"> ● Change the fuel tank temperature using CONSULT-II. 		
VENT CONTROL/V	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) ● Turn solenoid valve "ON" and "OFF" with the CONSULT-II and listen to operating sound. 	Solenoid valve makes an operating sound.	<ul style="list-style-type: none"> ● Harness and connector ● Solenoid valve

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT-II (Cont'd)

TEST ITEM	CONDITION	JUDGEMENT	CHECK ITEM (REMEDY)
VC/V BYPASS/V	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) ● Turn solenoid valve "ON" and "OFF" with the CONSULT-II and listen to operating sound. 	Solenoid valve makes an operating sound.	<ul style="list-style-type: none"> ● Harness and connector ● Solenoid valve
V/T ASSIGN ANGLE	<ul style="list-style-type: none"> ● Engine: After warming up, hold engine speed at 2,500 rpm. ● Change the intake valve timing using CONSULT-II. 	If trouble symptom disappears, see CHECK ITEM.	<ul style="list-style-type: none"> ● Harness and connector ● Intake valve timing control solenoid valve

GI
MA
EM
LC

DTC & SRT CONFIRMATION MODE

SRT STATUS Mode

NBEC0034S08

For details, refer to "SYSTEM READINESS TEST (SRT) CODE", EC-73.

NBEC0034S0801

EC

SRT Work Support Mode

NBEC0034S0803

This mode enables a technician to drive a vehicle to set the SRT while monitoring the SRT status.

FE

DTC Work Support Mode

NBEC0034S0802

Test mode	Test item	Condition	Reference page
EVAPORATIVE SYSTEM	EVP SML LEAK P0442/P1442	Refer to corresponding trouble diagnosis for DTC.	EC-354
	EVP V/S LEAK P0456/P1456		EC-412/625
	PURG VOL CN/V P1444		EC-596
	PURGE FLOW P0441		EC-343
	VC CUT/V BP/V P1491		EC-650
HO2S1	HO2S1 (B1) P0134		EC-252
	HO2S1 (B1) P1143		EC-530
	HO2S1 (B1) P1144		EC-538
	HO2S1 (B1) P0133		EC-239
	HO2S1 (B2) P0154		EC-252
	HO2S1 (B2) P1163	EC-530	
	HO2S1 (B2) P1164	EC-538	
	HO2S1 (B2) P0153	EC-239	
HO2S2	HO2S2 (B1) P1146	EC-546	
	HO2S2 (B1) P1147	EC-557	
	HO2S2 (B1) P0139	EC-271	
	HO2S2 (B2) P1166	EC-546	
	HO2S2 (B2) P1167	EC-557	
	HO2S2 (B2) P0159	EC-271	

TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL

IDX

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT-II (Cont'd)

DATA MONITOR	
Recording Data...11%	NO DTC
ENG SPEED	XXX rpm
MAS A/F SE-B1	XXX V
COOLAN TEMP/S	XXX °C
HO2S1 (B1)	XXX V
VHCL SPEED SE	XXX km/h

SEF705Y

SET RECORDING CONDITION
AUTO TRIG
MANU TRIG
TRIGGER POINT
RECORDING SPEED
MIN MAX
/64 /32 /16 /8 /4 /2 FULL

SEF707X

REAL TIME DIAGNOSIS IN DATA MONITOR MODE (RECORDING VEHICLE DATA)

NBEC0034S10

CONSULT-II has two kinds of triggers and they can be selected by touching "SETTING" in "DATA MONITOR" mode.

1) "AUTO TRIG" (Automatic trigger):

- The malfunction will be identified on the CONSULT-II screen in real time.

In other words, DTC/1st trip DTC and malfunction item will be displayed if the malfunction is detected by ECM.

At the moment a malfunction is detected by ECM, "MONITOR" in "DATA MONITOR" screen is changed to "Recording Data ... xx%" as shown at left, and the data after the malfunction detection is recorded. Then when the percentage reached 100%, "REAL-TIME DIAG" screen is displayed. If "STOP" is touched on the screen during "Recording Data ... xx%", "REAL-TIME DIAG" screen is also displayed.

The recording time after the malfunction detection and the recording speed can be changed by "TRIGGER POINT" and "Recording Speed". Refer to CONSULT-II OPERATION MANUAL.

2) "MANU TRIG" (Manual trigger):

- DTC/1st trip DTC and malfunction item will not be displayed automatically on CONSULT-II screen even though a malfunction is detected by ECM.

DATA MONITOR can be performed continuously even though a malfunction is detected.

Use these triggers as follows:

1) "AUTO TRIG"

- While trying to detect the DTC/1st trip DTC by performing the "DTC Confirmation Procedure", be sure to select to "DATA MONITOR (AUTO TRIG)" mode. You can confirm the malfunction at the moment it is detected.

- While narrowing down the possible causes, CONSULT-II should be set in "DATA MONITOR (AUTO TRIG)" mode, especially in case the incident is intermittent.

When you are inspecting the circuit by gently shaking (or twisting) the suspicious connectors, components and harness in the "DTC Confirmation Procedure", the moment a malfunction is found the DTC/1st trip DTC will be displayed. (Refer to GI-26, "Incident Simulation Tests".)



2) "MANU TRIG"



- If the malfunction is displayed as soon as "DATA MONITOR" is selected, reset CONSULT-II to "MANU TRIG". By selecting "MANU TRIG" you can monitor and store the data. The data can be utilized for further diagnosis, such as a comparison with the value for the normal operating condition.


ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

CONSULT-II (Cont'd)

DATA MONITOR
SELECT MONITOR ITEM
ECM INPUT SIGNALS
MAIN SIGNALS
SELECTION FROM MENU

SET RECORDING CONDITION
AUTO TRIG
MANUTRIG
TRIGGER POINT
 >>
Recording speed
<<  >>
MODE BACK LIGHT COPY

SET RECORDING CONDITION
AUTO TRIG
MANUTRIG
TRIGGER POINT
 >>
Recording speed
<<  >>
MODE BACK LIGHT COPY

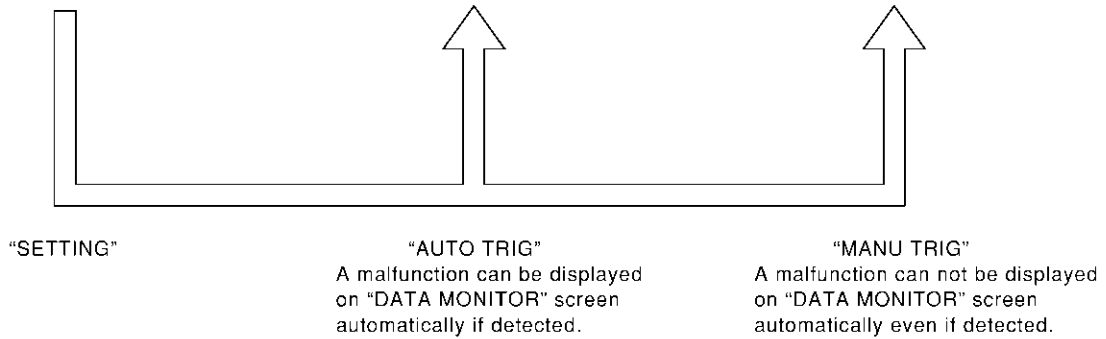


SEF714Y

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Generic Scan Tool (GST)

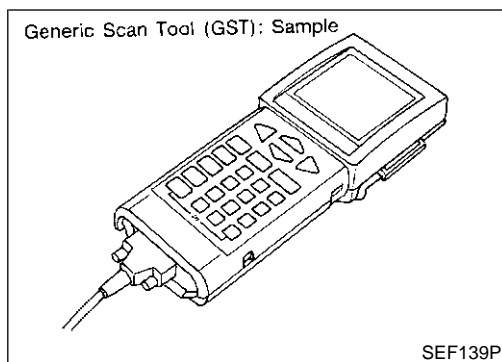

Generic Scan Tool (GST)

=NBEC0035


DESCRIPTION

NBEC0035S01

Generic Scan Tool (OBDII scan tool) complying with SAE J1978 has 8 different functions explained on the next page.

ISO9141 is used as the protocol.


The name "GST" or "Generic Scan Tool" is used in this service manual.

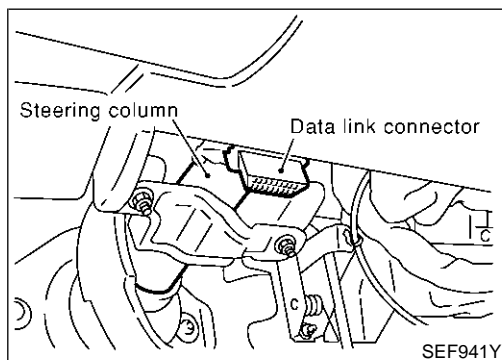

INSPECTION PROCEDURE


NBEC0035S02

1. Turn ignition switch OFF.
2. Connect GST to data link connector, which is located under LH dash panel near the fuse box cover.

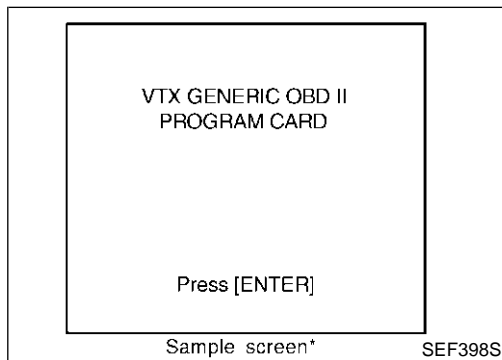

3. Turn ignition switch ON.
4. Enter the program according to instruction on the screen or in the operation manual.

(*: Regarding GST screens in this section, sample screens are shown.)

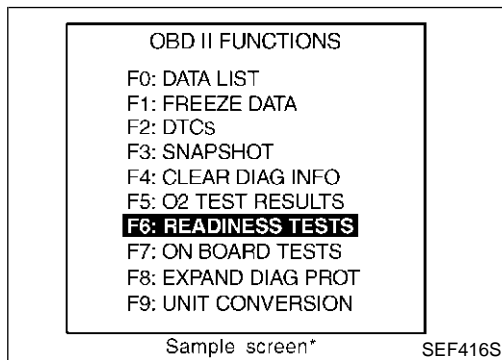

5. Perform each diagnostic mode according to each service procedure.

For further information, see the GST Operation Manual of the tool maker.




ON BOARD DIAGNOSTIC SYSTEM DESCRIPTION

Generic Scan Tool (GST) (Cont'd)

FUNCTION		
Diagnostic test mode		Function
MODE 1	READINESS TESTS	This mode gains access to current emission-related data values, including analog inputs and outputs, digital inputs and outputs, and system status information.
MODE 2	(FREEZE DATA)	This mode gains access to emission-related data value which were stored by ECM during the freeze frame. [For details, refer to "Freeze Frame Data" (EC-100).]
MODE 3	DTCs	This mode gains access to emission-related power train trouble codes which were stored by ECM.
MODE 4	CLEAR DIAG INFO	This mode can clear all emission-related diagnostic information. This includes: <ul style="list-style-type: none"> ● Clear number of diagnostic trouble codes (MODE 1) ● Clear diagnostic trouble codes (MODE 3) ● Clear trouble code for freeze frame data (MODE 1) ● Clear freeze frame data (MODE 2) ● Reset status of system monitoring test (MODE 1) ● Clear on board monitoring test results (MODE 6 and 7)
MODE 6	(ON BOARD TESTS)	This mode accesses the results of on board diagnostic monitoring tests of specific components/systems that are not continuously monitored.
MODE 7	(ON BOARD TESTS)	This mode enables the off board test drive to obtain test results for emission-related powertrain components/systems that are continuously monitored during normal driving conditions.
MODE 8	—	This mode can close EVAP system in ignition switch "ON" position (Engine stopped). When this mode is performed, the following parts can be opened or closed. <ul style="list-style-type: none"> ● EVAP canister vent control valve open ● Vacuum cut valve bypass valve closed In the following conditions, this mode cannot function. <ul style="list-style-type: none"> ● Low ambient temperature ● Low battery voltage ● Engine running ● Ignition switch "OFF" ● Low fuel temperature ● Too much pressure is applied to EVAP system
MODE 9	(CALIBRATION ID)	This mode enables the off-board test device to request specific vehicle information such as Vehicle Identification Number (VIN) and Calibration IDs.

TROUBLE DIAGNOSIS — INTRODUCTION

Introduction

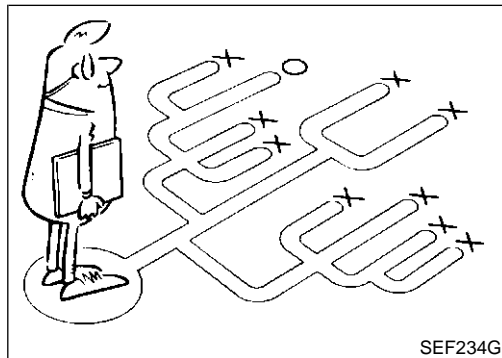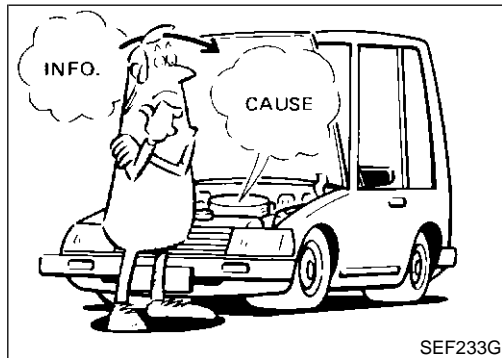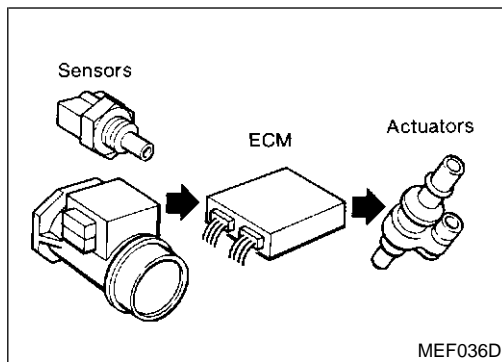

KEY POINTS	
WHAT	Vehicle & engine model
WHEN	Date, Frequencies
WHERE	Road conditions
HOW	Operating conditions, Weather conditions, Symptoms

The table is identified by the code SEF907L.

Introduction

NBEC0036

The engine has an ECM to control major systems such as fuel control, ignition control, idle air control system, etc. The ECM accepts input signals from sensors and instantly drives actuators. It is essential that both input and output signals are proper and stable. At the same time, it is important that there are no malfunctions such as vacuum leaks, fouled spark plugs, or other malfunctions with the engine.

It is much more difficult to diagnose an incident that occurs intermittently rather than continuously. Most intermittent incidents are caused by poor electric connections or improper wiring. In this case, careful checking of suspected circuits may help prevent the replacement of good parts.

A visual check only may not find the cause of the incidents. A road test with CONSULT-II (or GST) or a circuit tester connected should be performed. Follow the "Work Flow" on EC-114.

Before undertaking actual checks, take a few minutes to talk with a customer who approaches with a driveability complaint. The customer can supply good information about such incidents, especially intermittent ones. Find out what symptoms are present and under what conditions they occur. A "Diagnostic Worksheet" like the example on next page should be used.

Start your diagnosis by looking for "conventional" malfunctions first. This will help troubleshoot driveability malfunctions on an electronically controlled engine vehicle.

DIAGNOSTIC WORKSHEET

NBEC0036S01

There are many operating conditions that lead to the malfunction of engine components. A good grasp of such conditions can make trouble-shooting faster and more accurate.

In general, each customer feels differently about an incident. It is important to fully understand the symptoms or conditions for a customer complaint.

Utilize a diagnostic worksheet like the one on the next page in order to organize all the information for troubleshooting.

Some conditions may cause the MIL to come on steady or blink and DTC to be detected. Examples:


- Vehicle ran out of fuel, which caused the engine to misfire.
- Fuel filler cap was left off or incorrectly screwed on, allowing fuel to evaporate into the atmosphere.

TROUBLE DIAGNOSIS — INTRODUCTION

Work Flow

NBEC0037

Work Flow

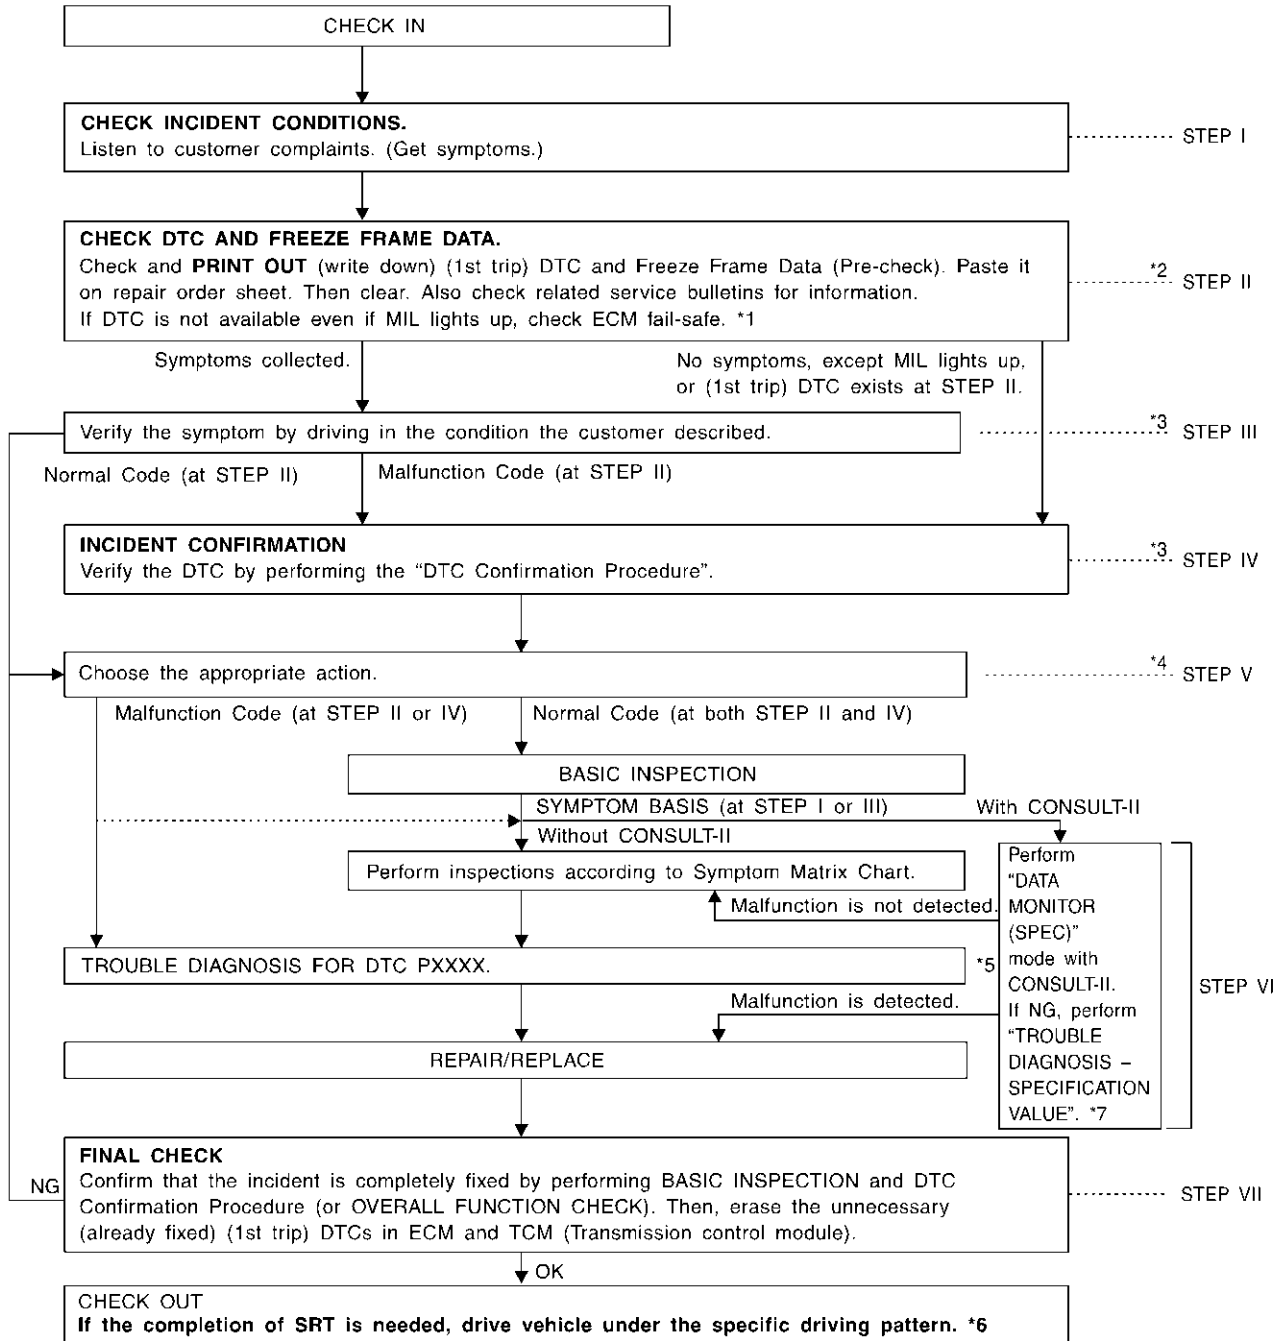

SEF510ZF

*1 EC-129

*2 If time data of "SELF-DIAG RESULTS" is other than "0" or "[1t]", perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.

*3 If the incident cannot be verified, perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.

*4 If the on board diagnostic system cannot be performed, check main power supply and ground circuit. Refer to "TROUBLE DIAGNOSIS FOR POWER SUPPLY", EC-154.

*5 If malfunctioning part cannot be

detected, perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.

*6 EC-78

*7 EC-148

TROUBLE DIAGNOSIS — INTRODUCTION

Work Flow (Cont'd)

DESCRIPTION FOR WORK FLOW

NBEC0037S01

STEP	DESCRIPTION	
STEP I	Get detailed information about the conditions and the environment when the incident/symptom occurred using the "DIAGNOSTIC WORK SHEET", EC-113.	GI
STEP II	Before confirming the concern, check and write down (print out using CONSULT-II or GST) the (1st trip) DTC and the (1st trip) freeze frame data, then erase the DTC and the data. (Refer to EC-85.) The (1st trip) DTC and the (1st trip) freeze frame data can be used when duplicating the incident at STEP III & IV. If the incident cannot be verified, perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152. Study the relationship between the cause, specified by (1st trip) DTC, and the symptom described by the customer. (The "Symptom Matrix Chart" will be useful. See EC-130.) Also check related service bulletins for information.	MA EM LC
STEP III	Try to confirm the symptom and under what conditions the incident occurs. The "DIAGNOSTIC WORK SHEET" and the freeze frame data are useful to verify the incident. Connect CONSULT-II to the vehicle in DATA MONITOR (AUTO TRIG) mode and check real time diagnosis results. If the incident cannot be verified, perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152. If the malfunction code is detected, skip STEP IV and perform STEP V.	EC FE
STEP IV	Try to detect the (1st trip) DTC by driving in (or performing) the "DTC Confirmation Procedure". Check and read the (1st trip) DTC and (1st trip) freeze frame data by using CONSULT-II or GST. During the (1st trip) DTC verification, be sure to connect CONSULT-II to the vehicle in DATA MONITOR (AUTO TRIG) mode and check real time diagnosis results. If the incident cannot be verified, perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152. In case the "DTC Confirmation Procedure" is not available, perform the "Overall Function Check" instead. The (1st trip) DTC cannot be displayed by this check, however, this simplified "check" is an effective alternative. The "NG" result of the "Overall Function Check" is the same as the (1st trip) DTC detection.	AT TF
STEP V	Take the appropriate action based on the results of STEP I through IV. If the malfunction code is indicated, proceed to TROUBLE DIAGNOSIS FOR DTC PXXXX. If the normal code is indicated, proceed to the BASIC INSPECTION. (Refer to EC-116.) If CONSULT-II is available, perform "DATA MONITOR (SPEC)" mode with CONSULT-II and proceed to the "TROUBLE DIAGNOSIS — SPECIFICATION VALUE", EC-148. (If malfunction is detected, proceed to "REPAIR REPLACE".) Then perform inspections according to the Symptom Matrix Chart. (Refer to EC-130.)	PD AX SU
STEP VI	Identify where to begin diagnosis based on the relationship study between symptom and possible causes. Inspect the system for mechanical binding, loose connectors or wiring damage using (tracing) "Harness Layouts". Gently shake the related connectors, components or wiring harness with CONSULT-II set in "DATA MONITOR (AUTO TRIG)" mode. Check the voltage of the related ECM terminals or monitor the output data from the related sensors with CONSULT-II. Refer to EC-134, 139. The "Diagnostic Procedure" in EC section contains a description based on open circuit inspection. A short circuit inspection is also required for the circuit check in the Diagnostic Procedure. For details, refer to GI-28, "Circuit Inspection". Repair or replace the malfunction parts. If malfunctioning part cannot be detected, perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	BR ST RS
STEP VII	Once you have repaired the circuit or replaced a component, you need to run the engine in the same conditions and circumstances which resulted in the customer's initial complaint. Perform the "DTC Confirmation Procedure" and confirm the normal code [DTC No. P0000] is detected. If the incident is still detected in the final check, perform STEP VI by using a different method from the previous one. Before returning the vehicle to the customer, be sure to erase the unnecessary (already fixed) (1st trip) DTC in ECM and TCM (Transmission control module). (Refer to EC-85.)	BT HA SC EL IDX

TROUBLE DIAGNOSIS — BASIC INSPECTION

Basic Inspection


Basic Inspection


NBEC0038

Precaution:

Perform Basic Inspection without electrical or mechanical loads applied;

- Headlamp switch is OFF,
- Air conditioner switch is OFF,
- Rear window defogger switch is OFF,
- Steering wheel is in the straight-ahead position, etc.

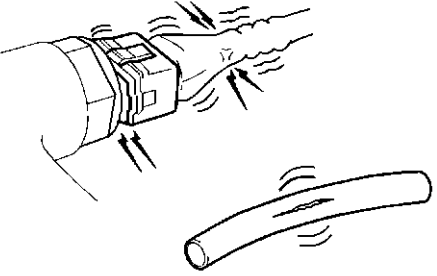1	INSPECTION START
<p>1. Check service records for any recent repairs that may indicate a related malfunction, or a current need for scheduled maintenance.</p> <p>2. Open engine hood and check the following:</p> <ul style="list-style-type: none"> ● Harness connectors for improper connections ● Vacuum hoses for splits, kinks and improper connections ● Wiring for improper connections, pinches and cuts ● Air cleaner clogging ● Hoses and ducts for leaks 	
	
SEF983U	
▶	GO TO 2.

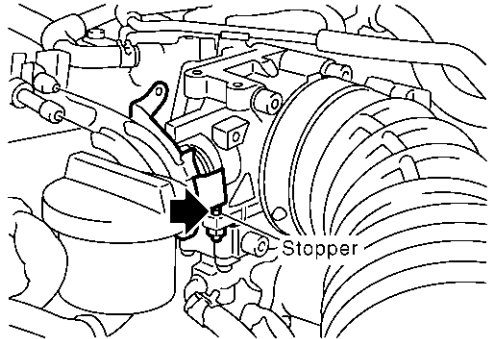2	CHECK THROTTLE DRUM OPERATION
<p>Confirm that throttle drum moves to contact the stopper.</p>	
	
OK or NG	
OK (With CONSULT-II) ▶	GO TO 5.
OK (Without CONSULT-II) ▶	GO TO 9.
NG ▶	GO TO 3.

SEF955Z

TROUBLE DIAGNOSIS — BASIC INSPECTION

Basic Inspection (Cont'd)

3	CHECK ACCELERATOR WIRE INSTALLATION	
Check accelerator wire for slack.		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Adjust accelerator wire. Refer to FE-3, "Adjusting Accelerator Wire".

GI

MA


EM

4	CHECK THROTTLE VALVE OPERATION	
1. Remove intake air ducts. 2. Check throttle valve operation when moving throttle drum by hand.		
OK or NG		
OK	▶	Retighten the throttle drum fixing nuts.
NG	▶	Clean the throttle body and throttle valve.

LC

EC

FE

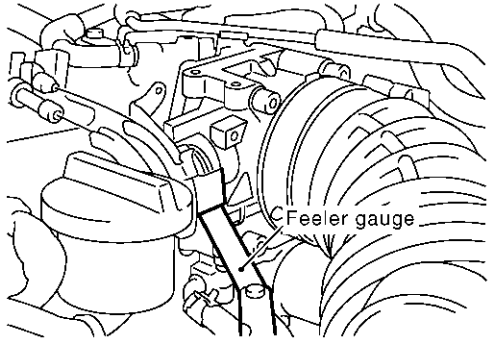5	CHECK THROTTLE POSITION SWITCH CLOSED POSITION-II							
<p>Ⓔ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch "ON". 2. Select "TP SW/TP SEN IDLE POSI ADJ" in "DATA MONITOR" mode with CONSULT-II. 3. Read "CLSD THL/P SW" signal under the following conditions. <ul style="list-style-type: none"> ● Insert a 0.05 mm (0.0020 in) and 0.15 mm (0.0059 in) feeler gauge alternately between stopper and throttle drum as shown in the figure and check the signal. 								
								
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2" style="text-align: center;">DATA MONITOR</th> </tr> <tr> <th style="text-align: center;">MONITOR</th> <th style="text-align: center;">NO DTC</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">CLSD THL/P SW</td> <td style="text-align: center;">ON</td> </tr> </tbody> </table>			DATA MONITOR		MONITOR	NO DTC	CLSD THL/P SW	ON
DATA MONITOR								
MONITOR	NO DTC							
CLSD THL/P SW	ON							
SEF956Z								
<p>"CLSD THL/P SW" signal should remain "ON" while inserting 0.05 mm (0.0020 in) feeler gauge. "CLSD THL/P SW" signal should remain "OFF" while inserting 0.15 mm (0.0059 in) feeler gauge.</p>								
OK or NG								
OK	▶	GO TO 8.						
NG	▶	GO TO 6.						

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SEF173Y

SC

EL

IDX


TROUBLE DIAGNOSIS — BASIC INSPECTION

Basic Inspection (Cont'd)

6 ADJUSTMENT THROTTLE POSITION SWITCH CLOSED POSITION-I


Ⓔ With CONSULT-II

1. Loosen throttle position sensor fixing bolts.
2. Insert 0.05 mm (0.0020 in) feeler gauge between stopper and throttle drum as shown in the figure.

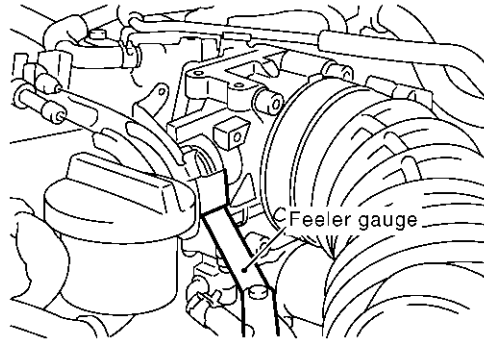

SEF956Z

3. Turn throttle position sensor body counterclockwise until "CLSD THL/P SW" signal switches to "OFF".

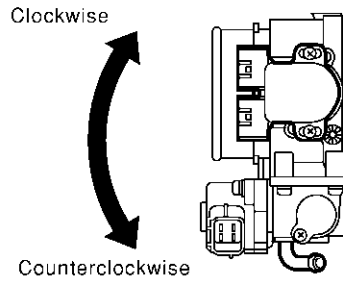


SEC307C

DATA MONITOR	
MONITOR	NO DTC
CLSD THL/P SW	OFF

SEF305Y



GO TO 7.

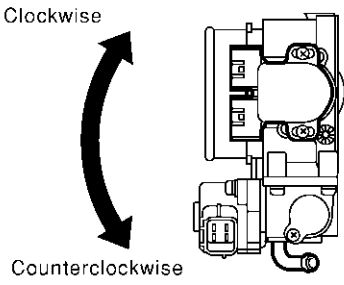7	ADJUSTMENT THROTTLE POSITION SWITCH CLOSED POSITION-II	
<p>Ⓔ With CONSULT-II</p> <p>1. Temporarily tighten sensor body fixing bolts as follows.</p> <ul style="list-style-type: none"> ● Gradually move the sensor body clockwise and stop it when "CLSD THL/P SW" signal switches from "OFF" to "ON", then temporarily tighten sensor body fixing bolts. <div style="text-align: center; margin: 10px 0;">  <p style="margin-left: 100px;">Clockwise</p> <p style="margin-left: 100px;">Counterclockwise</p> </div> <p style="text-align: right; margin-right: 50px;">SEC307C</p> <p>2. Make sure two or three times that the signal is "ON" when the throttle valve is closed and "OFF" when it is opened.</p> <p>3. Remove 0.05 mm (0.0020 in) feeler gauge then insert 0.15 mm (0.0059 in) feeler gauge.</p> <p>4. Make sure two or three times that the signal remains "OFF" when the throttle valve is closed.</p> <p>5. Tighten throttle position sensor.</p> <p>6. Check the "CLSD THL/P SW" signal again.</p> <p style="margin-left: 20px;">The signal remains "OFF" while closing throttle valve.</p> <p style="text-align: center; margin-top: 10px;">OK or NG</p>		
OK	▶	GO TO 8.
NG	▶	GO TO 6.

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

TROUBLE DIAGNOSIS — BASIC INSPECTION

Basic Inspection (Cont'd)


8 RESET THROTTLE POSITION SENSOR IDLE POSITION MEMORY

Ⓔ With CONSULT-II

NOTE:

Always warm up engine to normal operating temperature. If engine is cool, the throttle position sensor idle position memory will not be reset correctly.

1. Remove feeler gauge.
2. Start engine.
3. Warm up engine to normal operating temperature.
4. Select "TP SW/TP SEN IDLE POSI ADJ" in "DATA MONITOR" mode.
5. Stop engine. (Turn ignition switch "OFF".)
6. Turn ignition switch "ON" and wait at least 5 seconds.

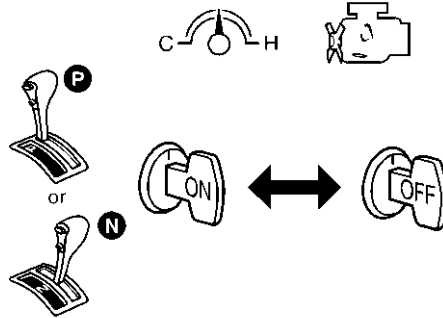

SEF864V

7. Turn ignition switch "OFF" and wait at least 10 seconds.
8. Repeat steps 6 and 7 until "CLSD THL POS" signal changes to "ON".

DATA MONITOR	
MONITOR	NO DTC
CLSD THL POS	ON

SEF061Y

▶ GO TO 13.



TROUBLE DIAGNOSIS — BASIC INSPECTION

Basic Inspection (Cont'd)

9 CHECK THROTTLE POSITION SWITCH CLOSED POSITION


⊗ Without CONSULT-II

1. Disconnect closed throttle position switch harness connector.
2. Check continuity between closed throttle position switch terminals 6 and 5 under the following conditions.

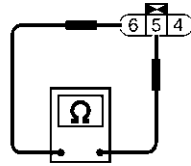

SEF330Z

- Insert the 0.05 mm (0.0020 in) and 0.15 mm (0.0059 in) feeler gauge alternately between the stopper and throttle drum as shown in the figure.

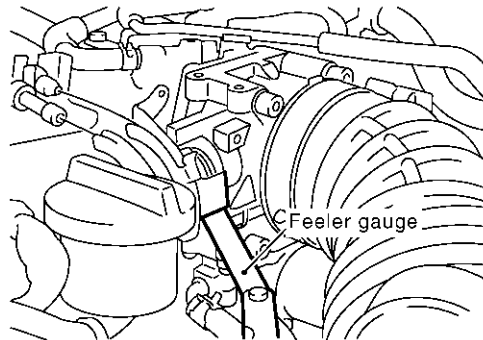

SEF956Z

- “Continuity should exist” while inserting 0.05 mm (0.0020 in) feeler gauge.
- “Continuity should not exist” while inserting 0.15 mm (0.0059 in) feeler gauge.

OK or NG

OK	▶	GO TO 12.
NG	▶	GO TO 10.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


TROUBLE DIAGNOSIS — BASIC INSPECTION

Basic Inspection (Cont'd)



10 ADJUSTMENT THROTTLE POSITION SWITCH CLOSED POSITION-I

⊗ Without CONSULT-II

1. Loosen throttle position sensor fixing bolts.
2. Insert 0.05 mm (0.0020 in) feeler gauge between stopper and throttle drum as shown in the figure.

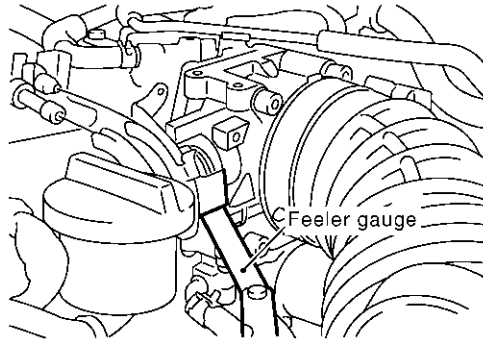


SEF956Z

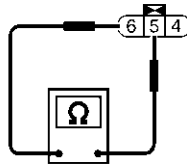

SEF330Z

3. Turn throttle position sensor body counterclockwise until continuity does not exist.

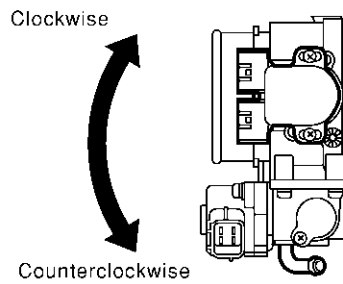



SEC307C

▶ GO TO 11.

TROUBLE DIAGNOSIS — BASIC INSPECTION

Basic Inspection (Cont'd)

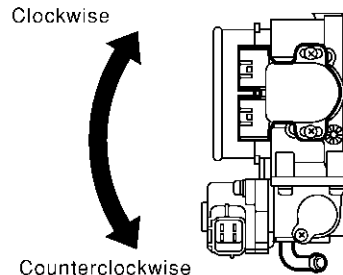11	ADJUSTMENT THROTTLE POSITION SWITCH CLOSED POSITION-II	<p>⊗ Without CONSULT-II</p> <p>1. Temporarily tighten sensor body fixing bolts as follows.</p> <ul style="list-style-type: none"> ● Gradually move the sensor body clockwise and stop it when the continuity comes to exist, then temporarily tighten sensor body fixing bolts. <div style="text-align: center; margin: 10px 0;">  </div> <p style="text-align: right; margin-right: 20px;">SEC307C</p> <p>2. Make sure two or three times that the continuity exists when the throttle valve is closed and continuity does not exist when it is opened.</p> <p>3. Remove 0.05 mm (0.0020 in) feeler gauge then insert 0.15 mm (0.0059 in) feeler gauge.</p> <p>4. Make sure two or three times that the continuity does not exist when the throttle valve is closed.</p> <p>5. Tighten throttle position sensor.</p> <p>6. Check the continuity again.</p> <p style="text-align: center; color: blue;">Continuity does not exist while closing the throttle valve.</p> <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 5px;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 10%; text-align: center;">▶</td> <td>GO TO 12.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 10.</td> </tr> </table>	OK	▶	GO TO 12.	NG	▶	GO TO 10.	GI MA EM LC EC FE AT TF PD AX
OK	▶	GO TO 12.							
NG	▶	GO TO 10.							

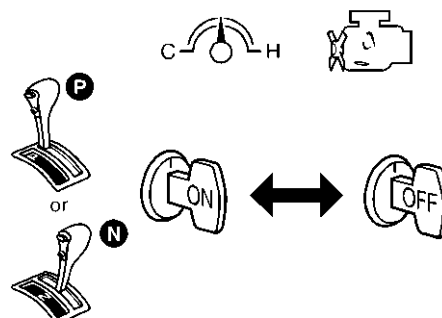12	RESET THROTTLE POSITION SENSOR IDLE POSITION MEMORY	<p>⊗ Without CONSULT-II</p> <p>NOTE: Always warm up engine to normal operating temperature. If engine is cool, the throttle position sensor idle position memory will not be reset correctly.</p> <ol style="list-style-type: none"> 1. Remove feeler gauge. 2. Reconnect throttle position switch harness connector. 3. Start engine. 4. Warm up engine to normal operating temperature. 5. Stop engine. (Turn ignition switch "OFF".) 6. Turn ignition switch "ON" and wait at least 5 seconds. <div style="text-align: center; margin: 10px 0;">  </div> <p style="text-align: right; margin-right: 20px;">SEF864V</p> <ol style="list-style-type: none"> 7. Turn ignition switch "OFF" and wait at least 10 seconds. 8. Repeat steps 6 and 7, 20 times. <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 5px;"> <tr> <td style="width: 20%;"></td> <td style="width: 10%; text-align: center;">▶</td> <td>GO TO 13.</td> </tr> </table>		▶	GO TO 13.	SU BR ST RS BT HA SC EL IDX
	▶	GO TO 13.				

TROUBLE DIAGNOSIS — BASIC INSPECTION

Basic Inspection (Cont'd)

13	CHECK (1ST TRIP) DTC	
1. Start engine and warm it up to normal operating temperature. 2. Rev (2,000 to 3,000 rpm) two or three times. 3. Make sure no (1st trip) DTC is displayed with CONSULT-II or GST.		
OK or NG		
OK	▶	GO TO 15.
NG	▶	GO TO 14.

14	REPAIR MALFUNCTION	
Repair or replace components as necessary according to corresponding "Diagnostic Procedure".		
		▶ GO TO 13.

15	CHECK TARGET IDLE SPEED	
Ⓔ With CONSULT-II 1. Start engine and warm it up to normal operating temperature. 2. Select "ENG SPEED" in "DATA MONITOR" mode with CONSULT-II. 3. Check idle speed. 750±50 rpm (in "P" or "N" position)		
ⓧ Without CONSULT-II 1. Start engine and warm it up to normal operating temperature. 2. Check idle speed. 750±50 rpm (in "P" or "N" position)		
OK or NG		
OK	▶	GO TO 24.
NG	▶	GO TO 16.

16	PERFORM IDLE AIR VOLUME LEARNING	
Refer to "Idle Air Volume Learning", EC-69.		
Is Idle Air Volume Learning carried out successfully?		
Yes or No		
Yes	▶	GO TO 17.
No	▶	1. Follow the instruction of "Idle Air Volume Learning". 2. GO TO 16.

17	CHECK TARGET IDLE SPEED AGAIN	
Ⓔ With CONSULT-II 1. Start engine and warm it up to normal operating temperature. 2. Select "ENG SPEED" in "DATA MONITOR" mode with CONSULT-II. 3. Check idle speed. 750±50 rpm (in "P" or "N" position)		
ⓧ Without CONSULT-II 1. Start engine and warm it up to normal operating temperature. 2. Check idle speed. 750±50 rpm (in "P" or "N" position)		
OK or NG		
OK	▶	GO TO 22.
NG	▶	GO TO 18.

TROUBLE DIAGNOSIS — BASIC INSPECTION

Basic Inspection (Cont'd)

18	REPLACE IACV-AAC VALVE	
	Replace IACV-AAC valve.	
	▶	GO TO 19.

GI

MA

19	PERFORM IDLE AIR VOLUME LEARNING	
	Refer to "Idle Air Volume Learning", EC-69.	
	Is Idle Air Volume Learning carried out successfully?	
	Yes or No	
	Yes ▶	GO TO 20.
	No ▶	1. Follow the construction of "Idle Air Volume Learning". 2. GO TO 16.

EM

LC

EC

20	CHECK TARGET IDLE SPEED AGAIN	
	<p>Ⓔ With CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature.</p> <p>2. Select "ENG SPEED" in "DATA MONITOR" mode with CONSULT-II.</p> <p>3. Check idle speed.</p> <p style="color: blue;">750±50 rpm (in "P" or "N" position)</p>	
	<p>ⓧ Without CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature.</p> <p>2. Check idle speed.</p> <p style="color: blue;">750±50 rpm (in "P" or "N" position)</p> <p style="text-align: center;">OK or NG</p>	
	OK ▶	GO TO 22.
	NG ▶	GO TO 21.

FE

AT

TF

PD

AX

SU

21	CHECK ECM FUNCTION	
	<p>1. Substitute another known-good ECM to check ECM function. (ECM may be the cause of an incident, but this is rarely the case.)</p> <p>2. Perform initialization of IVIS (NATS) system and registration of IVIS (NATS) ignition key IDs. Refer to "IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM — NATS)", EC-87.</p>	
	▶	GO TO 16.

BR

ST

RS

BT

HA


SC

EL

IDX


TROUBLE DIAGNOSIS — BASIC INSPECTION

Basic Inspection (Cont'd)

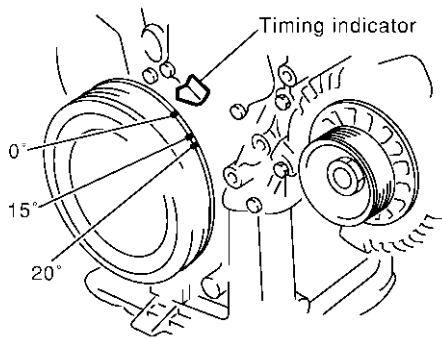22	CHECK IGNITION TIMING	
<p>1. Start engine and warm it up to normal operating temperature. 2. Check ignition timing at idle using a timing light.</p>		
		
<p>Ignition timing: $15^{\circ} \pm 5^{\circ}$ BTDC (in "P" or "N" position)</p>		
OK or NG		
OK	▶	GO TO 30.
NG	▶	GO TO 23.

SEF572X

23	CHECK TIMING CHAIN INSTALLATION	
<p>Check timing chain installation. Refer to EM-31, "Installation".</p>		
OK or NG		
OK	▶	GO TO 21.
NG	▶	1. Repair the timing chain installation. 2. GO TO 16.

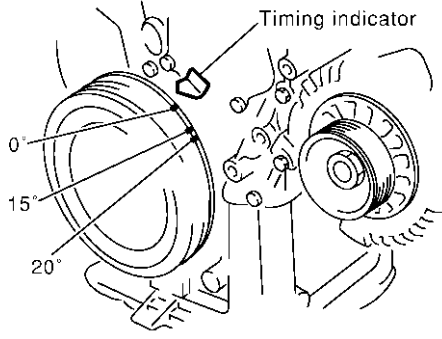24	CHECK IGNITION TIMING	
<p>1. Start engine and let it idle. 2. Check ignition timing at idle using a timing light.</p>		
		
<p>Ignition timing: $15^{\circ} \pm 5^{\circ}$ BTDC (in "P" or "N" position)</p>		
OK or NG		
OK	▶	GO TO 30.
NG	▶	GO TO 25.

SEF572X

TROUBLE DIAGNOSIS — BASIC INSPECTION

Basic Inspection (Cont'd)

25	PERFORM IDLE AIR VOLUME LEARNING	
Refer to "Idle Air Volume Learning", EC-69. Is Idle Air Volume Learning carried out successfully?		
Yes or No		
Yes	▶	GO TO 26.
No	▶	1. Follow the construction of "Idle Air volume Learning". 2. GO TO 25.

GI
MA
EM

26	CHECK TARGET IDLE SPEED AGAIN	
<input type="checkbox"/> With CONSULT-II 1. Start engine and warm it up to normal operating temperature. 2. Select "ENG SPEED" in "DATA MONITOR" mode with CONSULT-II. 3. Check idle speed. 750±50 rpm (in "P" or "N" position)		
<input checked="" type="checkbox"/> Without CONSULT-II 1. Start engine and warm it up to normal operating temperature. 2. Check idle speed. 750±50 rpm (in "P" or "N" position)		
OK or NG		
OK	▶	GO TO 28.
NG	▶	GO TO 27.

LC
EC
FE
AT
TF
PD

27	CHECK ECM FUNCTION	
1. Substitute another known-good ECM to check ECM function. (ECM may be the cause of an incident, but this is rarely the case.) 2. Perform initialization of IVIS (NATS) system and registration of IVIS (NATS) ignition key IDs. Refer to "IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM — NATS)", EC-87.		
		▶ GO TO 25.

AX
SU
BR

28	CHECK IGNITION TIMING AGAIN	
Check ignition timing again. Refer to Test No. 24.		
OK or NG		
OK	▶	GO TO 30.
NG	▶	GO TO 29.

ST
RS
BT

29	CHECK TIMING CHAIN INSTALLATION	
Check timing chain installation. Refer to EM-31, "Installation".		
OK or NG		
OK	▶	GO TO 27.
NG	▶	1. Repair the timing chain installation. 2. GO TO 25.

HA
SC
EL

30	ERASE UNNECESSARY DTC	
After this inspection, unnecessary DTC No. might be displayed. Erase the stored memory in ECM and TCM (Transmission control module). Refer to "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION", EC-85 and AT-35, "HOW TO ERASE DTC".		
		▶ INSPECTION END

IDX

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

DTC Inspection Priority Chart

DTC Inspection Priority Chart

NBEC0039

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	Detected items (DTC)
1	<ul style="list-style-type: none"> ● P0101, P0102, P0103, P1102 MAF sensor ● P0112, P0113, P0127 IAT sensor ● P0117, P0118, P0125 ECT sensor ● P0121, P0122, P0123 TP sensor ● P0181, P0182, P0183 FTT sensor ● P0327, P0328 KS ● P0335, P1336 CKP sensor (POS) ● P0340 CMP sensor ● P0460, P0461, P0462, P0463, P1464 Fuel level sensor ● P0500 VSS ● P0605 ECM ● P1335 CKP SENSOR (REF) ● P1605 A/T DIAGNOSIS COMMUNICATION LINE ● P1706 PNP switch
2	<ul style="list-style-type: none"> ● P0031, P0032, P0051, P0052 HO2S1 heater ● P0037, P0038, P0057, P0058 HO2S2 heater ● P0107, P0108 Absolute pressure sensor ● P0132-P0134, P1143, P1144 and P0152-P0154, P1163, P1164 HO2S1 ● P0138, P0139, P1146, P1147 and P0158, P0159, P1166, P1167 HO2S2 ● P0217 Engine coolant over temperature condition ● P0441 EVAP control system purge flow monitoring ● P0444, P0445, P1444 EVAP canister purge volume control solenoid valve ● P0447, P1446, P1448 EVAP canister vent control valve ● P0452, P0453 EVAP control system pressure sensor ● P0510 CTP switch ● P0705-P0755, P1705, P1760 A/T related sensors, solenoid valves and switches ● P1111, P1136 Intake valve timing control solenoid valve ● P1140, P1145 Intake valve timing control position sensor ● P1165 Swirl control valve control vacuum check switch ● P0456, P1456 EVAP control system (VERY SMALL LEAK) ● P1490, P1491 Vacuum cut valve bypass valve
3	<ul style="list-style-type: none"> ● P0171, P0172 and P0174, P0175 Fuel injection system function ● P0300-P0306 Misfire ● P0420, P0430 Three way catalyst function ● P0442, P0455, P0456, P1442, P1456 EVAP control system ● P0505, P0506, P0507 ISC system ● P0600 A/T communication line ● P0731-P0734, P0744 A/T function ● P0011, P0021 Intake valve timing control ● P1130, P1131 Swirl control valve control solenoid valve ● P1148, P1168 Closed loop control

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

Fail-safe Chart

Fail-safe Chart

=NBEC0040

The ECM enters fail-safe mode, if any of the following malfunctions is detected due to the open or short circuit. When the ECM enters the fail-safe mode, the MIL illuminates.

DTC No.	Detected items	Engine operating condition in fail-safe mode	
P0101, P0102, P0103, P1102	Mass air flow sensor circuit	Engine speed will not rise more than 2,400 rpm due to the fuel cut.	
P0117, P0118	Engine coolant temperature sensor circuit	Engine coolant temperature will be determined by ECM based on the time after turning ignition switch "ON" or "START". CONSULT-II displays the engine coolant temperature decided by ECM.	
		Condition	Engine coolant temperature decided (CONSULT-II display)
		Just as ignition switch is turned ON or Start	40°C (104°F)
		More than approx. 4 minutes after ignition ON or Start	80°C (176°F)
		Except as shown above	40 - 80°C (104 - 176°F) (Depends on the time)
P0121, P0122, P0123	Throttle position sensor circuit	Throttle position will be determined based on the injected fuel amount and the engine speed. Therefore, acceleration will be poor.	
		Condition	Driving condition
		When engine is idling	Normal
		When accelerating	Poor acceleration
P1335	Crankshaft position sensor (REF) circuit	Compression TDC signal (120° signal) is controlled by camshaft position sensor (PHASE) signal and crankshaft position sensor (POS) signal. Ignition timing will be delayed 0° to 2°.	
Unable to access ECM	ECM	ECM fail-safe activating condition The computing function of the ECM was judged to be malfunctioning. When the fail-safe system activates (i.e., if the ECM detects a malfunction condition in the CPU of ECM), the MIL on the instrument panel lights to warn the driver. However it is not possible to access ECM and DTC cannot be confirmed.	
		Engine control with fail-safe When ECM fail-safe is operating, fuel injection, ignition timing, fuel pump operation, IACV-AAC valve operation and cooling fan operation are controlled under certain limitations.	
		ECM fail-safe operation	
		Engine speed	Engine speed will not rise more than 3,000 rpm
		Fuel injection	Simultaneous multiport fuel injection system
		Ignition timing	Ignition timing is fixed at the preset value
		Fuel pump	Fuel pump relay is "ON" when engine is running and "OFF" when engine stalls
		IACV-AAC valve	Full open
		Replace ECM, if ECM fail-safe condition is confirmed.	

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

Symptom Matrix Chart

Symptom Matrix Chart SYSTEM — BASIC ENGINE CONTROL SYSTEM

NBEC0041

NBEC0041S01

		SYMPTOM												Reference page	
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION		BATTERY DEAD (UNDER CHARGE)
Warranty symptom code		AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA	
Fuel	Fuel pump circuit	1	1	2	3	2		2	2			3		2	EC-696
	Fuel pressure regulator system	3	3	4	4	4	4	4	4	4		4			EC-52
	Injector circuit	1	1	2	3	2		2	2			2			EC-687
	Evaporative emission system														EC-34
Air	Positive crankcase ventilation system	3	3	4	4	4	4	4	4	4		4	1		EC-49
	Incorrect idle speed adjustment						1	1	1	1		1			EC-116
	IACV-AAC valve circuit	1	1	2	3	3	2	2	2	2		2		2	EC-442, 449
Ignition	Incorrect ignition timing adjustment	3	3	1	1	1		1	1			1			EC-116
	Ignition circuit	1	1	2	2	2		2	2			2			EC-677
Main power supply and ground circuit											2				EC-154
Air conditioner circuit		2	2	3	3	3	3	3	3	3		3		2	HA section

1 - 6: The numbers refer to the order of inspection.
(continued on next page)

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

Symptom Matrix Chart (Cont'd)

		SYMPTOM												Reference page		
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION			BATTERY DEAD (UNDER CHARGE)
Warranty symptom code		AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA		
Engine control	Crankshaft position sensor (REF) circuit	2	2												EC-581	AT
	Crankshaft position sensor (POS) circuit														EC-325, 587	TF
	Camshaft position sensor (PHASE) circuit	3													EC-493	PD
	Mass air flow sensor circuit	1			2										EC-182, 189, 480	AX
	Heated oxygen sensor 1 circuit		1	2	3	2		2	2			2			EC-252	
	Engine coolant temperature sensor circuit	1					3				3				EC-201, 225	SU
	Throttle position sensor circuit						2				2				EC-206, 217	BR
	Incorrect throttle position sensor adjustment		3	1		1	1	1	1	1			1		EC-116	
	Vehicle speed sensor circuit		2	3		3									EC-438	ST
	Knock sensor circuit			2									3		EC-320	
	ECM	2	2	3	3	3	3	3	3	3	3	3			EC-478, 129	RS
	Start signal circuit	2													EC-692	
	Park/Neutral position switch circuit			3		3							3		EC-663	BT
	Power steering oil pressure switch circuit		2						3	3					EC-705	HA
Electrical load signal circuit														EC-716		

1 - 6: The numbers refer to the order of inspection.
(continued on next page)

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

Symptom Matrix Chart (Cont'd)

SYSTEM — ENGINE MECHANICAL & OTHER

NBEC0041S02

		SYMPTOM													Reference section										
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEAT/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)											
Warranty symptom code		AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA											
Fuel	Fuel tank	5													FE section										
	Fuel piping			5	5	5		5	5			5													
	Vapor lock	5																							
	Valve deposit																								
	Poor fuel (Heavy weight gasoline, Low octane)			5	5	5	5		5	5			5												
Air	Air duct																								
	Air cleaner																								
	Air leakage from air duct (Mass air flow sensor — throttle body)															5	5		5		5	5			5
	Throttle body, Throttle wire															5		5		5			5		
	Air leakage from intake manifold/Collector/Gasket																								
Cranking	Battery	1	1	1		1		1	1					1	1	EL section									
	Alternator circuit																								
	Starter circuit	3																							
	Drive plate	6															EM section								
	PNP switch	4															AT section								

1 - 6: The numbers refer to the order of inspection.
(continued on next page)

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

Symptom Matrix Chart (Cont'd)

		SYMPTOM													Reference section
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	
Warranty symptom code		AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA	
Engine	Cylinder head	5	5	5	5	5		5	5			5			EM section
	Cylinder head gasket										4	5	3		
	Cylinder block														
	Piston												4		
	Piston ring														
	Connecting rod	6	6	6	6	6		6	6			6			
	Bearing														
	Crankshaft														
Valve mechanism	Timing chain														EM section
	Camshaft	5	5	5	5	5		5	5			5			
	Intake valve												3		
	Exhaust valve														
Exhaust	Exhaust manifold/Tube/Muffler/Gasket	5	5	5	5	5	5	5		5				FE section	
	Three way catalyst														
Lubrication	Oil pan/Oil strainer/Oil pump/Oil filter/Oil gallery	5	5	5	5	5		5	5			5		MA, EM, LC section	
	Oil level (Low)/Filthy oil													LC section	
Cooling	Radiator/Hose/Radiator filler cap													HA section	
	Thermostat									5					
	Water pump	5	5	5	5	5		5	5		4	5		SC section	
	Water gallery														
	Coolant level (low)/Contaminated coolant													MA section	

1 - 6: The numbers refer to the order of inspection.

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

Symptom Matrix Chart (Cont'd)

	SYMPTOM													Reference section
	HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	
Warranty symptom code	AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA	
IVIS (INFINITI Vehicle Immobilizer System — NATS)	1	1												EC-87 or EL section

1 - 6: The numbers refer to the order of inspection.

CONSULT-II Reference Value in Data Monitor Mode

NBEC0042

Remarks:

- Specification data are reference values.
- Specification data are output/input values which are detected or supplied by the ECM at the connector.
 - * Specification data may not be directly related to their components signals/values/operations.
 - i.e. Adjust ignition timing with a timing light before monitoring IGN TIMING, because the monitor may show the specification data in spite of the ignition timing not being adjusted to the specification data. This IGN TIMING monitors the data calculated by the ECM according to the signals input from the camshaft position sensor and other ignition timing related sensors.
- If the real-time diagnosis results are NG and the on board diagnostic system results are OK when diagnosing the mass air flow sensor, first check to see if the fuel pump control circuit is normal.

MONITOR ITEM	CONDITION	SPECIFICATION
ENG SPEED CKPS-RPM (POS)	● Run engine and compare CONSULT-II value with the tachometer indication.	Almost the same speed as the tachometer indication.
POS COUNT	● Engine: Running	179 - 181
MAS A/F SE-B1	● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load	Idle 2,500 rpm
		1.2 - 1.8V 1.6 - 2.2V
COOLAN TEMP/S	● Engine: After warming up	More than 70°C (158°F)
HO2S1 (B1) HO2S1 (B2)	● Engine: After warming up	0 - 0.3V ↔ Approx. 0.6 - 1.0V
HO2S1 MNTR (B1) HO2S1 MNTR (B2)		LEAN ↔ RICH Changes more than 5 times during 10 seconds.
HO2S2 (B1) HO2S2 (B2)	● Engine: After warming up ● After keeping engine speed between 3,500 and 4,000 rpm for one minute and at idle for one minute under no load.	0 - 0.3V ↔ Approx. 0.6 - 1.0V
HO2S2 MNTR (B1) HO2S2 MNTR (B2)		LEAN ↔ RICH
VHCL SPEED SE	● Turn drive wheels and compare CONSULT-II value with the speedometer indication.	Almost the same speed as the speedometer indication

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

CONSULT-II Reference Value in Data Monitor Mode (Cont'd)

MONITOR ITEM	CONDITION	SPECIFICATION	
BATTERY VOLT	● Ignition switch: ON (Engine stopped)	11 - 14V	GI
THRTL POS SEN	● Engine: After warming up, idle the engine Throttle valve: fully closed	0.15 - 0.85V	MA
	● Engine: After warming up ● Ignition switch: ON (Engine stopped) Throttle valve: fully opened	3.5 - 4.7V	EM
START SIGNAL	● Ignition switch: ON → START → ON	OFF → ON → OFF	
CLSD THL POS CLSD THL/P SW	● Engine: After warming up, idle the engine	Throttle valve: Idle position	ON
		Throttle valve: Slightly open	OFF
AIR COND SIG	● Engine: After warming up, idle the engine	Air conditioner switch: "OFF"	OFF
		Air conditioner switch: "ON" (Compressor operates.)	ON
P/N POSI SW	● Ignition switch: ON	Shift lever: "P" or "N"	ON
		Except above	OFF
PW/ST SIGNAL	● Engine: After warming up, idle the engine	Steering wheel in neutral position (forward direction)	OFF
		The steering wheel is turned	ON
IGNITION SW	● Ignition switch: ON → OFF → ON	ON → OFF → ON	
INJ PULSE-B2 INJ PULSE-B1	● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load	Idle	2.4 - 3.2 msec
		2,000 rpm	1.9 - 2.8 msec
B/FUEL SCHDL	● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load	Idle	2.0 - 3.2 msec
		2,000 rpm	1.4 - 2.6 msec
IGN TIMING	● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load	Idle	15°±5° BTDC
		2,000 rpm	More than 25° BTDC
IACV-AAC/V	● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load	Idle	2 - 10 step
		2,000 rpm	—
PURG VOL C/V	● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load	Idle	0 %
		2,000 rpm	—
A/F ALPHA-B2 A/F ALPHA-B1	● Engine: After warming up	Maintaining engine speed at 2,000 rpm	54 - 155%
EVAP SYS PRES	● Ignition switch: ON	Approx. 3.4V	
AIR COND RLY	● Air conditioner switch: OFF → ON	OFF → ON	EL
FUEL PUMP RLY	● Ignition switch is turned to ON (Operates for 5 seconds) ● Engine running and cranking	ON	IDX
	● Except as shown above	OFF	
VENT CONT/V	● Ignition switch: ON	OFF	

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

CONSULT-II Reference Value in Data Monitor Mode (Cont'd)

MONITOR ITEM	CONDITION	SPECIFICATION	
HO2S1 HTR (B1) HO2S1 HTR (B2)	<ul style="list-style-type: none"> ● Engine: After warming up ● Engine speed: Below 3,600 rpm 	ON	
	<ul style="list-style-type: none"> ● Engine speed: Above 3,600 rpm 	OFF	
HO2S2 HTR (B1) HO2S2 HTR (B2)	<ul style="list-style-type: none"> ● Ignition switch: ON (Engine stopped) ● Engine speed: Above 3,200 rpm 	OFF	
	<ul style="list-style-type: none"> ● Engine speed is below 3,200 rpm after the following conditions are met. <ul style="list-style-type: none"> – Engine: After warming up – Keep engine speed between 3,500 and 4,000 rpm for one minute and at idle for one minute under no load. 	ON	
VC/V BYPASS/V	<ul style="list-style-type: none"> ● Ignition switch: ON 	OFF	
CAL/LD VALUE	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load 	Idle	14.0 - 33.0%
		2,500 rpm	12.0 - 25.0%
ABSOL TH:P/S	<ul style="list-style-type: none"> ● Engine: After warming up 	Throttle valve: fully closed	0.0%
	<ul style="list-style-type: none"> ● Engine: After warming up ● Ignition switch: ON (Engine stopped) 	Throttle valve: fully opened	Approx. 80%
MASS AIRFLOW	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load 	Idle	2.0 - 6.0 g·m/s
		2,500 rpm	7.0 - 20.0 g·m/s
ABSOL PRES/SE	<ul style="list-style-type: none"> ● Ignition switch: ON 		Approx. 4.4V
SWRL CONT S/V	<ul style="list-style-type: none"> ● Engine speed: Idle 	Engine coolant temperature is between 15°C (59°F) to 50°C (122°F).	ON
		Engine coolant temperature is above 55°C (131°F).	OFF
SWL CON VC SW	<ul style="list-style-type: none"> ● Engine speed: Idle ● Engine coolant temperature is between 15°C (59°F) to 50°C (122°F). 		OFF
	<ul style="list-style-type: none"> ● Engine speed: Idle ● Engine coolant temperature is above 55°C (131°F). 		ON
INT/V TIM (B1) INT/V TIM (B2)	<ul style="list-style-type: none"> ● Engine: After warming up ● Shift lever "N" ● Quickly depressed accelerator pedal ● No-load 	Idle	0° CA
		2,000 rpm	Approximately 12 - 18° CA
INT/V SOL (B1) INT/V SOL (B2)	<ul style="list-style-type: none"> ● Engine: After warming up ● Shift lever "N" ● Quickly depressed accelerator pedal ● No-load 	Idle	0%
		2,000 rpm	Approximately 40%

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

Major Sensor Reference Graph in Data Monitor Mode

Major Sensor Reference Graph in Data Monitor Mode

=NBEC0043


The following are the major sensor reference graphs in "DATA MONITOR" mode.

THRTL POS SEN, ABSOL TH·P/S, CLSD THL POS

NBEC0043S01

Below is the data for "THRTL POS SEN", "ABSOL TH·P/S" and "CLSD THL POS" when depressing the accelerator pedal with the ignition switch "ON".

The signal of "THRTL POS SEN" and "ABSOL TH·P/S" should rise gradually without any intermittent drop or rise after "CLSD THL POS" is changed from "ON" to "OFF".

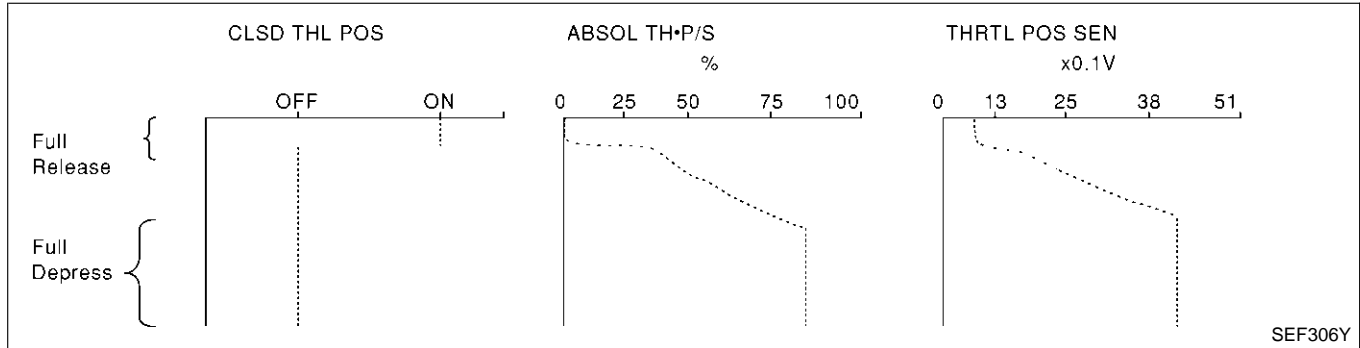


ENG SPEED, MAS A/F SE-B1, THRTL POS SEN, HO2S2 (B1), HO2S1 (B1), INJ PULSE-B1

NBEC0043S02


Below is the data for "ENG SPEED", "MAS A/F SE-B1", "THRTL POS SEN", "HO2S2 (B1)", "HO2S1 (B1)" and "INJ PULSE-B1" when revving engine quickly up to 4,800 rpm under no load after warming up engine sufficiently.

Each value is for reference, the exact value may vary.

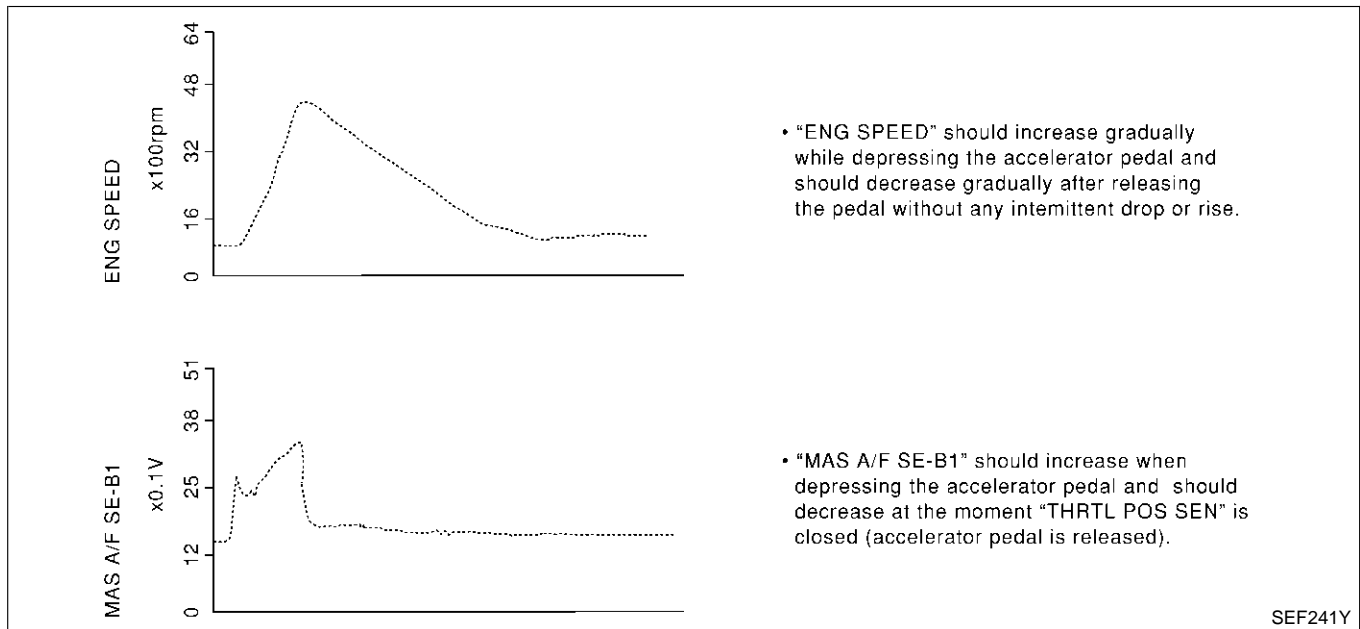

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION


Major Sensor Reference Graph in Data Monitor Mode (Cont'd)

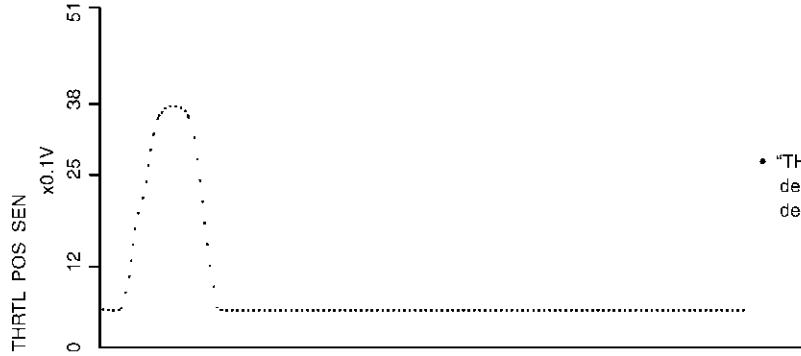


- "THRTL POS SEN" should increase while depressing the accelerator pedal and should decrease while releasing it.



- "HO2S2 (B1)" may increase immediately after depressing the accelerator pedal and may decrease after releasing the pedal.

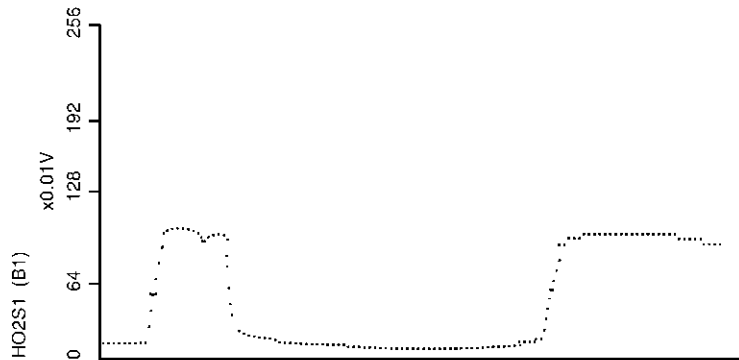

- "HO2S1 (B1)" may increase immediately after depressing the accelerator pedal and may decrease after releasing the pedal.

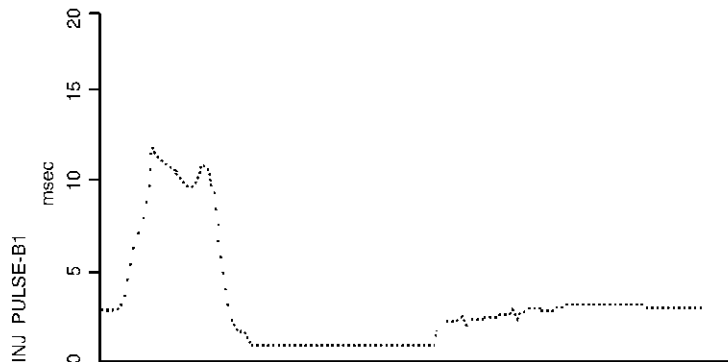


- "INJ PULSE-B1" should increase when depressing the accelerator pedal and should decrease when the pedal is released.

SEF242YA

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

ECM Terminals and Reference Value

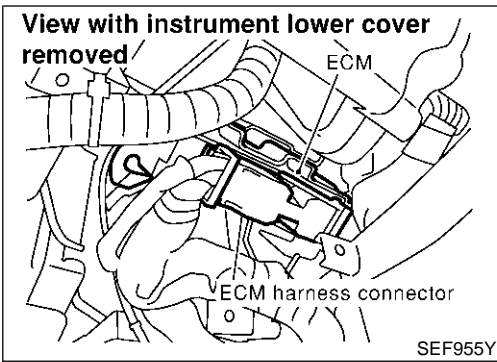

ECM Terminals and Reference Value


NBEC0044

PREPARATION

NBEC0044S01

1. ECM is located behind the instrument lower cover. For this inspection, remove instrument lower cover.

2. Remove ECM harness protector.

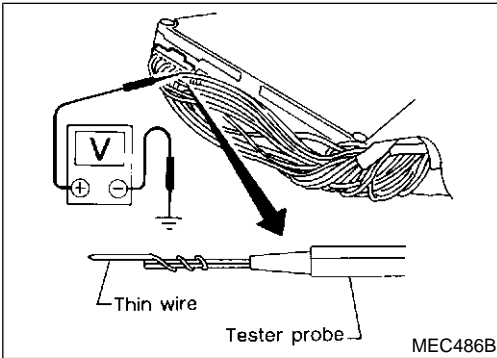

3. Perform all voltage measurements with the connector connected. Extend tester probe as shown to perform tests easily.

- Open harness securing clip to make testing easier.
- Use extreme care not to touch 2 pins at one time.
- Data is for comparison and may not be exact.

ECM HARNESS CONNECTOR TERMINAL LAYOUT

NBEC0044S02

101	102	1	2	3	4	5	6	7	8	9	10			58	59	60	61	62	63	64	65	66	67	109	110								
103	104	11	12	13	14	15	16	17	18	19		39	40	41	42	43	44	45	46	47	48	68	69	70	71	72	73	74	75	76	111	112	
105	106	20	21	22	23	24	25	26	27	28	29	49	50	51	52	53	54	55	56	57		77	78	79	80	81	82	83	84	85	86	113	114
107	108	30	31	32	33	34	35	36	37	38												87	88	89	90	91	92	93	94	95	115	116	

SEF970W

ECM INSPECTION TABLE

NBEC0044S03

Specification data are reference values and are measured between each terminal and ground.

Pulse signal is measured by CONSULT-II.





CAUTION:

Do not use ECM ground terminals when measuring the input/output voltage. Doing so may result in damage to the ECM's transistor. Use ground other than the ECM terminals, such as the ground.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX



TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

ECM Terminals and Reference Value (Cont'd)

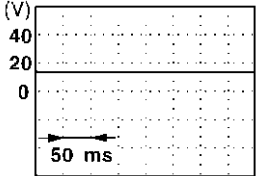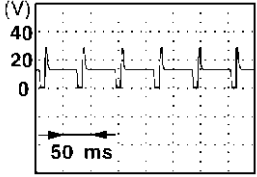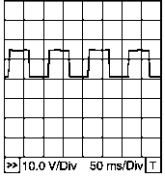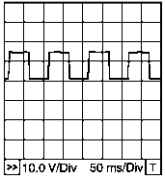TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
1	L/Y	EVAP canister purge volume control solenoid valve	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Idle speed 	<p>BATTERY VOLTAGE (11 - 14V)★</p>  <p style="text-align: right;">SEF994U</p>
			<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Engine speed is about 2,000 rpm (More than 100 seconds after starting engine). 	<p>BATTERY VOLTAGE (11 - 14V)★</p>  <p style="text-align: right;">SEF995U</p>
2	R/G	Heated oxygen sensor 1 (bank 2) heater	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is below 3,600 rpm. 	<p>Approximately 8V</p>  <p style="text-align: right;">PBIB0519E</p>
			<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Engine speed is above 3,600 rpm. 	<p>BATTERY VOLTAGE (11 - 14V)</p>
3	L/OR	Heated oxygen sensor 1 (bank 1) heater	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is below 3,600 rpm. 	<p>Approximately 8V</p>  <p style="text-align: right;">PBIB0519E</p>
			<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Engine speed is above 3,600 rpm. 	<p>BATTERY VOLTAGE (11 - 14V)</p>
4	R/W	Heated oxygen sensor 2 (bank 2) heater	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Engine speed is below 3,200 rpm after the following conditions are met. <ul style="list-style-type: none"> – Engine: after warming up – Keeping engine speed between 3,500 and 4,000 rpm for one minute and at idle for one minute under no load. 	<p>0 - 1.0V</p>
			<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Engine speed is above 3,200 rpm. 	<p>BATTERY VOLTAGE (11 - 14V)</p>





TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

ECM Terminals and Reference Value (Cont'd)

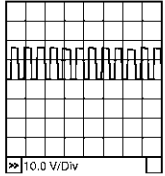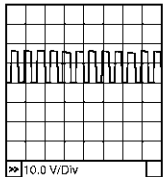TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)	
5	P/B	Heated oxygen sensor 2 (bank 1) heater	[Engine is running] <ul style="list-style-type: none"> ● Engine speed is below 3,200 rpm after the following conditions are met. <ul style="list-style-type: none"> – Engine: after warming up – Keeping engine speed between 3,500 and 4,000 rpm for one minute and at idle for one minute under no load. 	0 - 1.0V	GI MA EM
			[Engine is running] <ul style="list-style-type: none"> ● Engine speed is above 3,200 rpm. 	BATTERY VOLTAGE (11 - 14V)	LC
6 7 8 17	PU/R SB Y GY/L	IACV-AAC valve	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	0.1 - 14V	EC FE
13	OR/B	Intake valve timing control solenoid valve (Bank 1)	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	Battery voltage	AT
			[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 2,000 rpm 	7 - 8V★  PBIB1790E	TF PD AX
15	P/L	Intake valve timing control solenoid valve (Bank 2)	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	Battery voltage	SU
			[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 2,000 rpm 	7 - 8V★  PBIB1790E	BR ST RS
16	Y/G	VIAS control solenoid valve	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	BATTERY VOLTAGE (11 - 14V)	BT
			[Engine is running] <ul style="list-style-type: none"> ● Engine speed is above 5,000 rpm. 	0 - 1.0V	HA SC EL IDX

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

ECM Terminals and Reference Value (Cont'd)

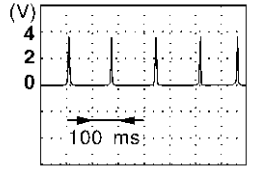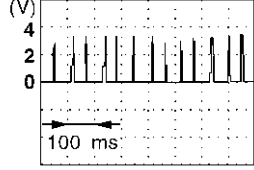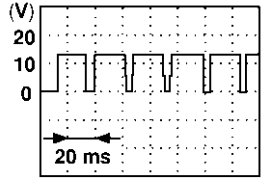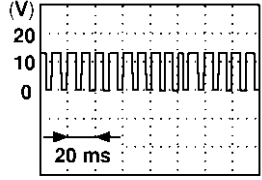TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
21 22 23 30 31 32	Y/R G/R L/R GY PU/W GY/R	Ignition signal No. 1 Ignition signal No. 2 Ignition signal No. 3 Ignition signal No. 4 Ignition signal No. 5 Ignition signal No. 6	<p>[Engine is running]</p> <ul style="list-style-type: none"> • Warm-up condition • Idle speed 	<p>0 - 0.2V★</p>  <p style="text-align: right;">SEF399T</p>
			<p>[Engine is running]</p> <ul style="list-style-type: none"> • Warm-up condition • Engine speed is 2,500 rpm. 	<p>0.1 - 0.3V★</p>  <p style="text-align: right;">SEF645T</p>
25	W/G	Tachometer	<p>[Engine is running]</p> <ul style="list-style-type: none"> • Warm-up condition • Idle speed 	<p>7 - 8V★</p>  <p style="text-align: right;">SEF579X</p>
			<p>[Engine is running]</p> <ul style="list-style-type: none"> • Warm-up condition • Engine speed is 2,500 rpm. 	<p>7 - 8V★</p>  <p style="text-align: right;">SEF580X</p>
26	L/B	ECM relay (Self shutt-off)	<p>[Engine is running] [Ignition switch "OFF"]</p> <ul style="list-style-type: none"> • For a few seconds after turning ignition switch "OFF" 	0 - 1.5V
			<p>[Ignition switch "OFF"]</p> <ul style="list-style-type: none"> • A few seconds passed after turning ignition switch "OFF" 	BATTERY VOLTAGE (11 - 14V)
27	L/G	Air conditioner relay	<p>[Engine is running]</p> <ul style="list-style-type: none"> • Both A/C switch and blower switch are "ON" (Compressor is operating). 	0 - 1.0V
			<p>[Engine is running]</p> <ul style="list-style-type: none"> • A/C switch is "OFF". 	BATTERY VOLTAGE (11 - 14V)
28	P/L	Fuel pump relay	<p>[Ignition switch "ON"]</p> <ul style="list-style-type: none"> • For 1 second after turning ignition switch "ON" <p>[Engine is running]</p>	0 - 1.5V
			<p>[Ignition switch "ON"]</p> <ul style="list-style-type: none"> • 1 second passed after turning ignition switch "ON". 	BATTERY VOLTAGE (11 - 14V)

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION



ECM Terminals and Reference Value (Cont'd)

TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)	
29	G	Swirl control valve control solenoid valve	[Engine is running] ● Idle speed ● Engine coolant temperature is between 15 - 50°C (59 - 122°F).	0 - 1.0V	GI MA
			[Engine is running] ● Idle speed ● Engine coolant temperature is above 55°C (131°F).	BATTERY VOLTAGE (11 - 14V)	EM LC
38	OR	MIL	[Ignition switch "ON"]	0 - 1.0V	EC
			[Engine is running] ● Idle speed	BATTERY VOLTAGE (11 - 14V)	
39	G/W	Vacuum cut valve bypass valve	[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)	FE
40	G/Y	EVAP canister vent control valve	[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)	AT
42	B/Y	Start signal	[Ignition switch "ON"]	Approximately 0V	TF
			[Ignition switch "START"]	9 - 12V	
43	R	Ignition switch	[Ignition switch "OFF"]	0V	PD
			[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)	
44	L	PNP switch	[Ignition switch "ON"] ● Gear position is "P" or "N".	Approximately 0V	AX
			[Ignition switch "ON"] ● Except the above gear position	BATTERY VOLTAGE (11 - 14V)	SU
45	B/R	Air conditioner switch signal	[Engine is running] ● Both A/C switch and blower switch are "ON".	Approximately 0V	BR
			[Engine is running] ● A/C switch is "OFF".	Approximately 5V	ST
47	R/B	Power steering oil pressure switch	[Engine is running] ● Steering wheel is being turned.	0 - 1.0V	RS
			[Engine is running] ● Steering wheel is not being turned.	Approximately 5V	
48	B	ECM ground	[Engine is running] ● Idle speed	Engine ground	BT
51	B/R	A/C cut signal	[Engine is running] ● Air conditioner is operating.	0 - 0.5V	HA
52	PU	Electrical load signal	[Engine is running] ● Rear window defogger: ON ● Hi-beam headlamp: ON	BATTERY VOLTAGE (11 - 14V)	SC
			[Engine is running] ● Electrical load: OFF	0V	EL

IDX





TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

ECM Terminals and Reference Value (Cont'd)

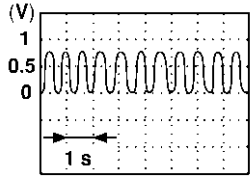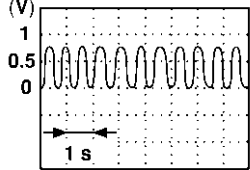TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
55	W/B	Swirl control valve control vacuum check switch	[Engine is running] <ul style="list-style-type: none"> ● Idle speed ● Engine coolant temperature is between 15 - 50°C (59 - 122°F). 	Approximately 5V
			[Engine is running] <ul style="list-style-type: none"> ● Idle speed ● Engine coolant temperature is above 55°C (131°F). 	0 - 1.0V
56	OR/W	Throttle position switch (Closed position)	[Engine is running] <ul style="list-style-type: none"> ● Accelerator pedal fully released 	BATTERY VOLTAGE (11 - 14V)
			[Engine is running] <ul style="list-style-type: none"> ● Accelerator pedal depressed 	Approximately 0V
57	B	ECM ground	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	Engine ground
58	B/P	Sensors' ground	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	Approximately 0V
59	B	Fuel level sensor ground	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	Approximately 0V
61	OR	Mass air flow sensor	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	1.2 - 1.8V
			[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 2,500 rpm. 	1.6 - 2.2V
62	G/B	Heated oxygen sensor 1 (bank 2)	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 2,000 rpm. 	0 - Approximately 1.0V (Periodically change)★  SEF059V
63	G	Heated oxygen sensor 1 (bank 1)	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 2,000 rpm. 	0 - Approximately 1.0V (Periodically change)★  SEF059V
64	Y/PU	Intake air temperature sensor	[Engine is running]	Approximately 0 - 4.8V Output voltage varies with intake air temperature.
12 67	W/R	Power supply for ECM (Back-up)	[Ignition switch "OFF"]	BATTERY VOLTAGE (11 - 14V)
70	LG/R	Engine coolant temperature sensor	[Engine is running]	Approximately 0 - 4.8V Output voltage varies with engine coolant temperature.





TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

ECM Terminals and Reference Value (Cont'd)

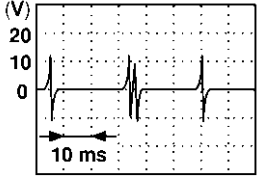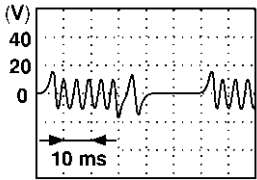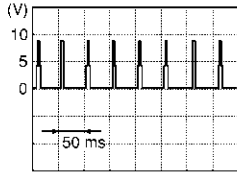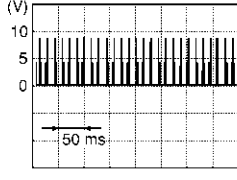TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)	
71	OR/L	Heated oxygen sensor 2 (bank 2)	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Revving engine from idle up to 3,00 rpm quickly after the following conditions are met. <ul style="list-style-type: none"> – After keeping engine speed between 3,500 and 4,000 rpm for one minute and at idle for one minute under no load. 	0 - Approximately 1.0V	GI MA EM
72	OR	Heated oxygen sensor 2 (bank 1)	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Revving engine from idle up to 3,000 rpm quickly after the following conditions are met. <ul style="list-style-type: none"> – After keeping engine speed between 3,500 and 4,000 rpm for one minute and at idle for one minute under no load. 	0 - Approximately 1.0V	LC EC FE
73	B/P	Mass air flow sensor ground	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	Approximately 0V	AT
75	LG	Crankshaft position sensor (REF)	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	Approximately 2.3V★ (AC voltage) <div style="text-align: center;">  <p style="text-align: right; margin-top: 5px;">SEF581X</p> </div>	TF PD AX
76	L	Camshaft position sensor (PHASE)	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	Approximately 4.2V★ (AC voltage) <div style="text-align: center;">  <p style="text-align: right; margin-top: 5px;">SEF582X</p> </div>	SU BR ST
79	Y/G	Intake valve timing control position sensor (Bank 1)	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	Approximately 0.5V★ <div style="text-align: center;">  <p style="text-align: right; margin-top: 5px;">SEF351Z</p> </div>	RS BT HA
			[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 2,000 rpm. 	Approximately 0.5V★ <div style="text-align: center;">  <p style="text-align: right; margin-top: 5px;">SEF352Z</p> </div>	SC EL IDX



TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

ECM Terminals and Reference Value (Cont'd)

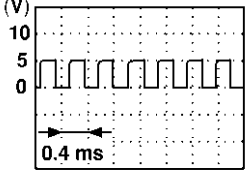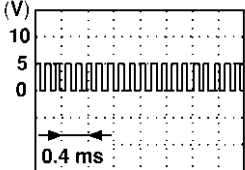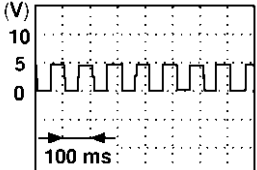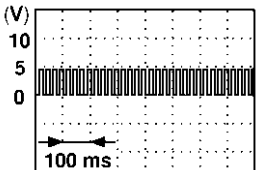TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
81	W/PU	Refrigerant pressure sensor	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Both A/C switch and blower switch are "ON". (Compressor operates.) 	0.36 - 3.88V
82	W	Throttle position sensor signal output	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Accelerator pedal fully released 	Approximately 0.4V
			[Ignition switch "ON"] <ul style="list-style-type: none"> ● Accelerator pedal fully depressed 	Approximately 4V
83	Y/PU	Fuel level sensor	[Ignition switch "ON"]	Approximately 0 - 4.8V Output voltage varies with fuel level.
84	L/G	EVAP control system pressure sensor	[Ignition switch "ON"]	Approximately 3.4V
85	Y	Crankshaft position sensor (POS)	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	Approximately 2.4V★  SEF057V
			[Engine is running] <ul style="list-style-type: none"> ● Engine speed is 2,000 rpm. 	Approximately 2.3V★  SEF058V
86	W/L	Vehicle speed sensor	[Engine is running] <ul style="list-style-type: none"> ● Lift up the vehicle. ● In 1st gear position ● 10 km/h (6 MPH) 	Approximately 2.5V★  SEF583X
			[Engine is running] <ul style="list-style-type: none"> ● Lift up the vehicle. ● In 2nd gear position ● 30 km/h (19 MPH) 	Approximately 2.0V★  SEF584X

TROUBLE DIAGNOSIS — GENERAL DESCRIPTION

ECM Terminals and Reference Value (Cont'd)

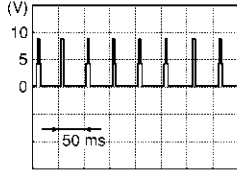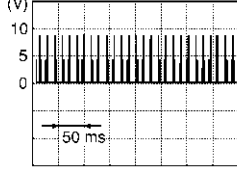TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
89	OR	Intake valve timing control position sensor (Bank 2)	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	Approximately 0.5V★  SEF351Z
			[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 2,000 rpm. 	Approximately 0.5V★  SEF352Z
91	R	Throttle position sensor	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Accelerator pedal fully released 	0.15 - 0.85V
			[Ignition switch "ON"] <ul style="list-style-type: none"> ● Accelerator pedal fully depressed 	3.5 - 4.7V
92	G/B	Fuel tank temperature sensor	[Engine is running]	Approximately 0 - 4.8V Output voltage varies with fuel tank temperature.
93	W	Knock sensor	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	Approximately 2.5V
101 102 103 104 105 107	R/B L/W R/W PU/R R/Y R/L	Injector No. 1 Injector No. 5 Injector No. 2 Injector No. 6 Injector No. 3 Injector No. 4	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	BATTERY VOLTAGE (11 - 14V)
106 108	B B	ECM ground	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	Engine ground
110 112	B/W B/W	Power supply for ECM	[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)
111	P/B	Sensors' power supply	[Ignition switch "ON"]	Approximately 5V
114	G/R	Communication line (LAN)	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	Approximately 2V
115	LG/R	Data link connector	[Ignition switch "ON"] <ul style="list-style-type: none"> ● CONSULT-II or GST is disconnected. 	Approximately 5V

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

TROUBLE DIAGNOSIS — SPECIFICATION VALUE

Description

Description

The specification (SP) value indicates the tolerance of the value that is displayed in “DATA MONITOR (SPEC)” mode of CONSULT-II during normal operation of the Engine Control System. When the value in “DATA MONITOR (SPEC)” mode is within the SP value, the Engine Control System is confirmed OK. When the value in “DATA MONITOR (SPEC)” mode is NOT within the SP value, the Engine Control System may have one or more malfunctions. NBEC0717

The SP value is used to detect malfunctions that may affect the Engine Control System, but will not light the MIL.

The SP value will be displayed for the following three items:

- B/FUEL SCHDL (The fuel injection pulse width programmed into ECM prior to any learned on board correction)
- A/F ALPHA-B1/B2 (The mean value of air-fuel ratio feedback correction factor per cycle)
- MAS A/F SE-B1 (The signal voltage of the mass air flow sensor)


Testing Condition

- Vehicle driven distance: More than 5,000 km (3,100 miles)
- Barometric pressure: 101.3 kPa (760.0 mmHg, 29.92 inHg)±3 kPa (22.5 mmHg, 0.89 inHg)
- Atmospheric temperature: 20 - 30°C (68 - 86°F)
- Engine coolant temperature: 75 - 95°C (167 - 203°F)
- Transmission: Warmed-up*1
- Electrical load: Not applied*2
- Engine speed: Idle

NBEC0718

*1: For A/T models, after the engine is warmed up to normal operating temperature, drive vehicle until “FLUID TEMP SE” (A/T fluid temperature sensor signal) indicates less than 0.9V.

*2: Rear window defogger switch, air conditioner switch, lighting switch are “OFF”. Cooling fans are not operating. Steering wheel is straight ahead.

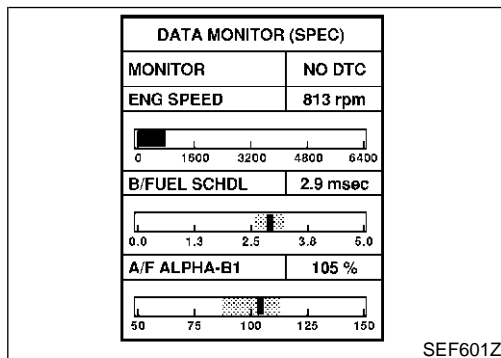

Inspection Procedure

NBEC0719


NOTE:

Perform “DATA MONITOR (SPEC)” mode in maximum scale display.

1. Perform “Basic Inspection”, EC-116.
2. Confirm that the testing conditions indicated above are met.
3. Select “B/FUEL SCHDL”, “A/F ALPHA-B1”, “A/F ALPHA-B2” and “MAS A/F SE-B1” in “DATA MONITOR (SPEC)” mode with CONSULT-II.
4. Make sure that monitor items are within the SP value.
5. If NG, go to “Diagnostic Procedure”, EC-149.

Diagnostic Procedure

NBEC0720

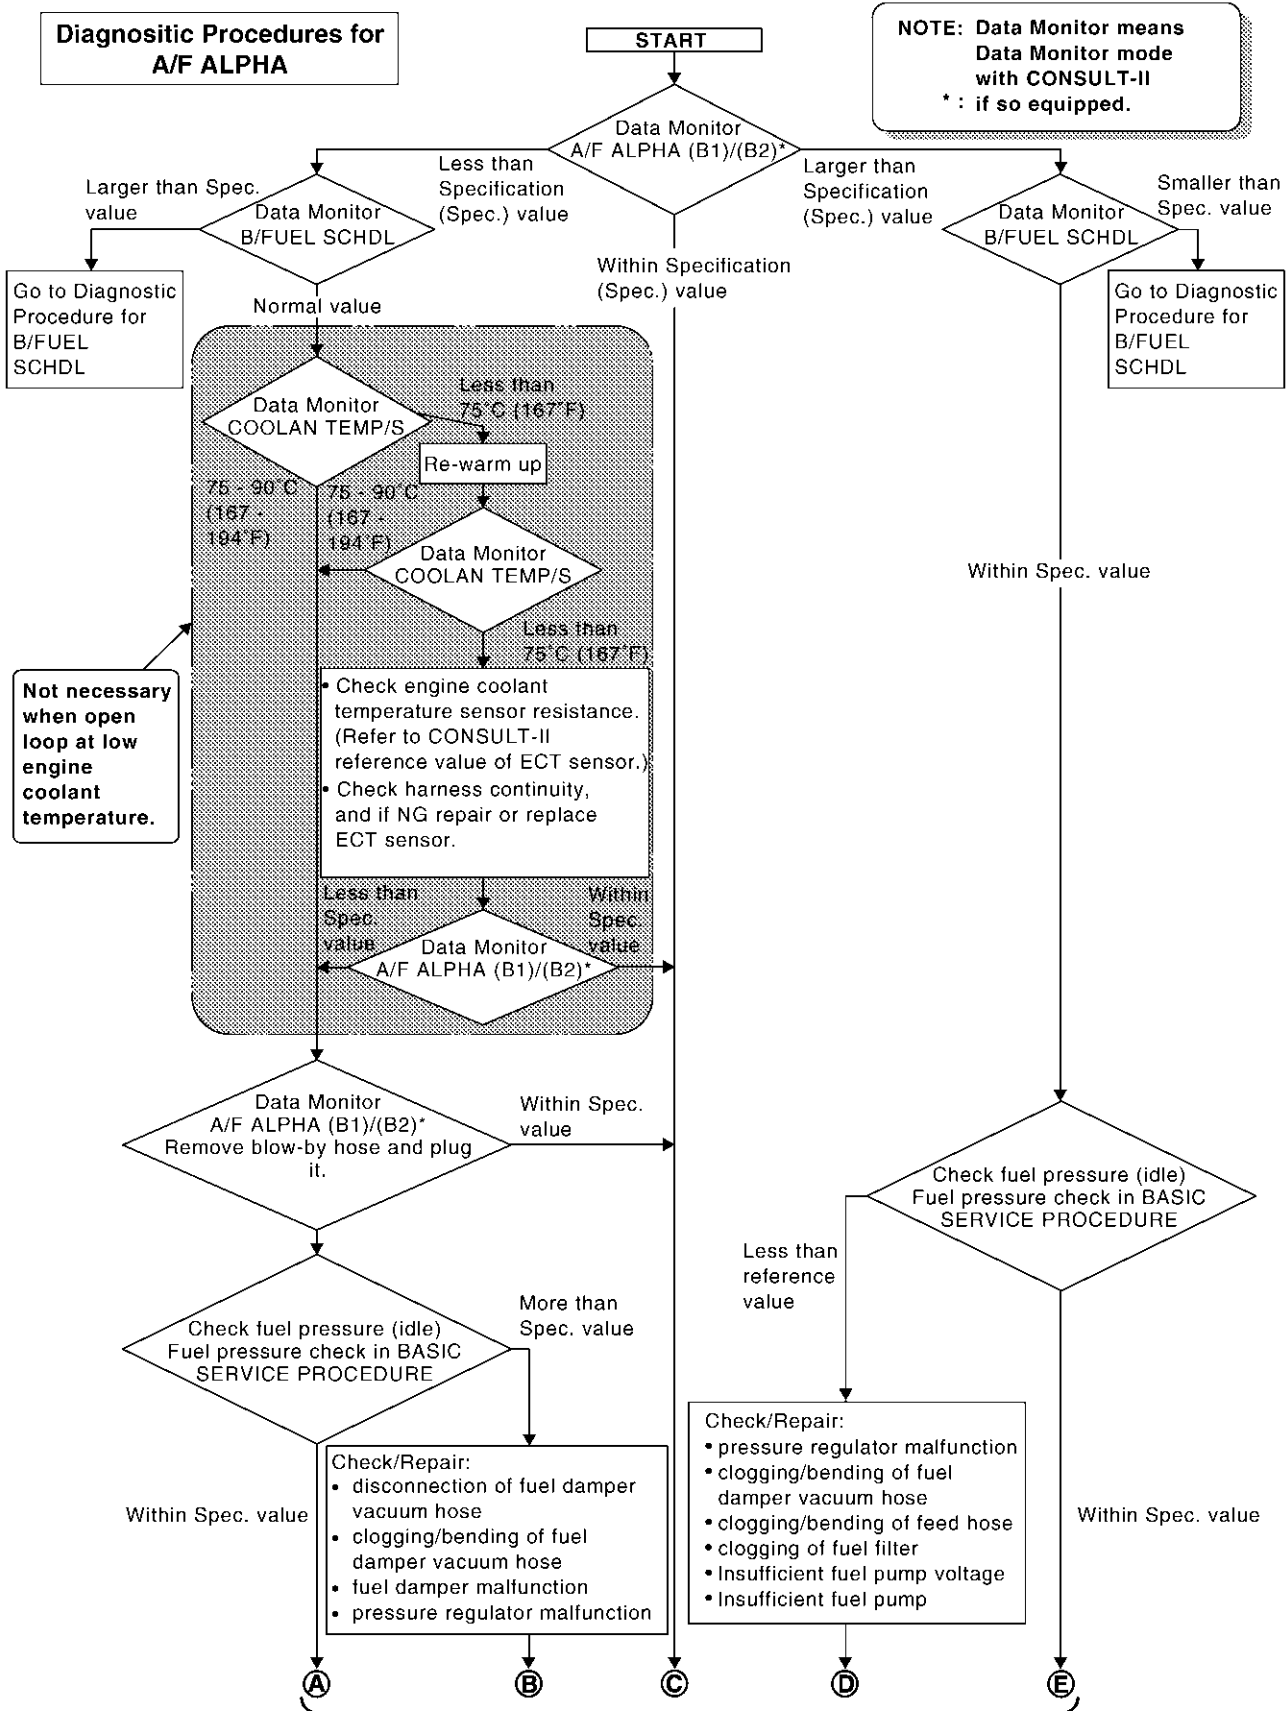


GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

(Go to next page.)

SEF613ZD

TROUBLE DIAGNOSIS — SPECIFICATION VALUE


Diagnostic Procedure (Cont'd)

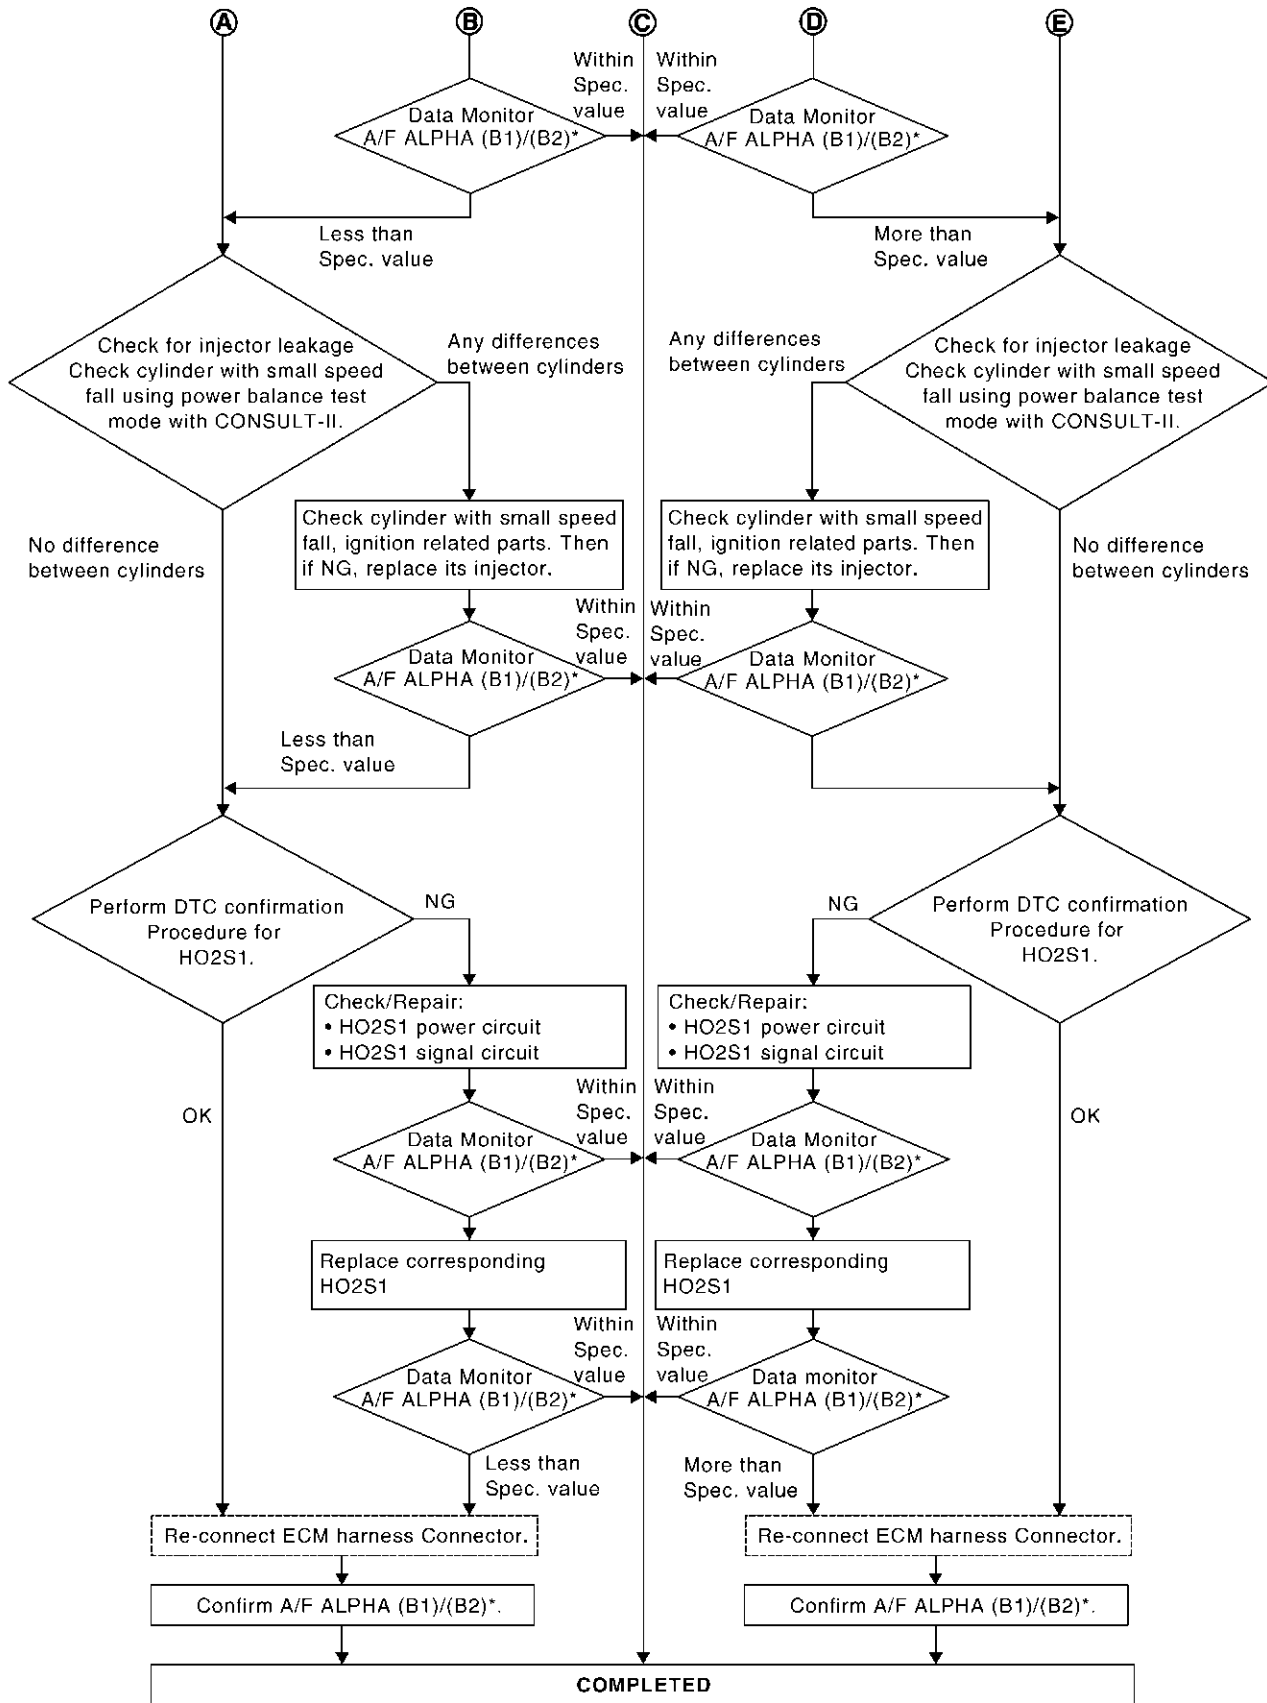

SEF768Z

TROUBLE DIAGNOSIS — SPECIFICATION VALUE

Diagnostic Procedure (Cont'd)

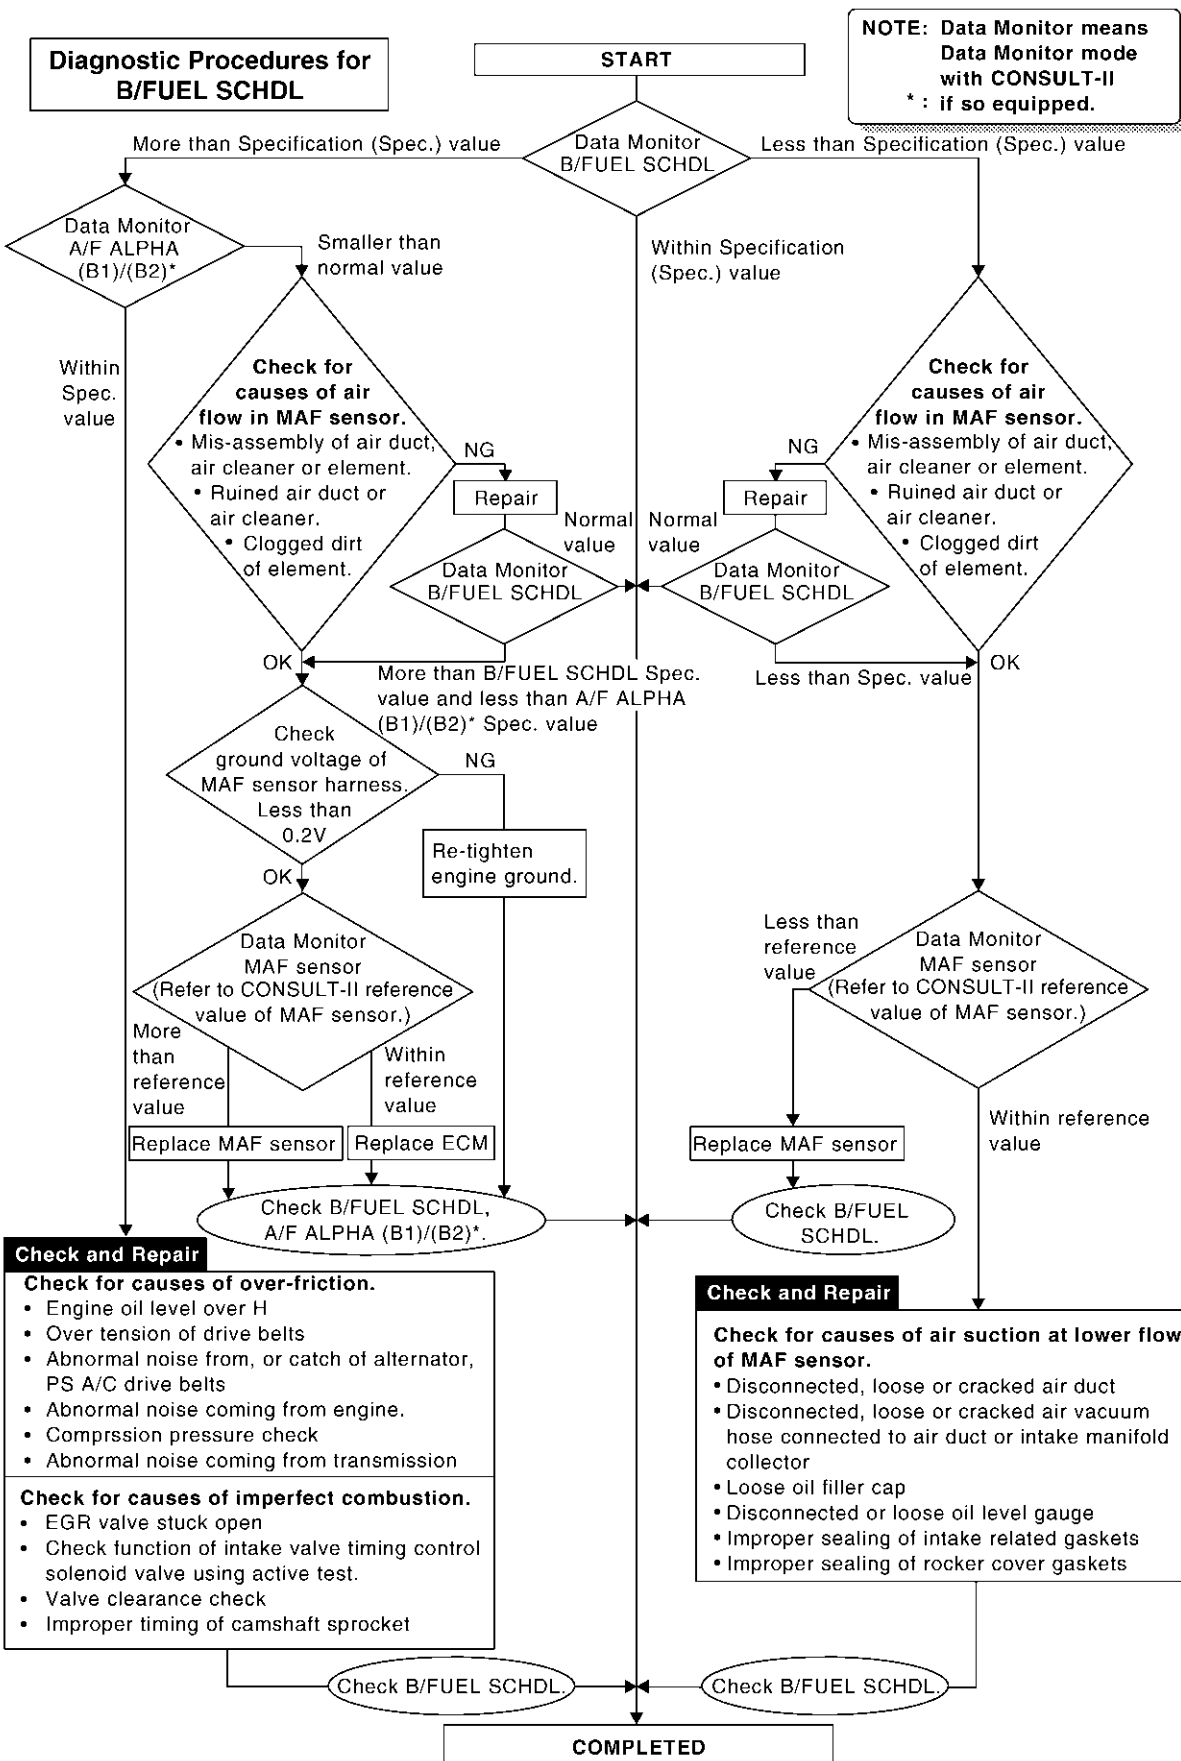

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

SEF615ZA

TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT

Description

Description

NBEC0045

Intermittent incidents (I/I) may occur. In many cases, the malfunction resolves itself (the part or circuit function returns to normal without intervention). It is important to realize that the symptoms described in the customer's complaint often do not recur on (1st trip) DTC visits. Realize also that the most frequent cause of I/I occurrences is poor electrical connections. Because of this, the conditions under which the incident occurred may not be clear. Therefore, circuit checks made as part of the standard diagnostic procedure may not indicate the specific malfunctioning area.


COMMON I/I REPORT SITUATIONS



NBEC0045S01



STEP in Work Flow	Situation
II	The CONSULT-II is used. The SELF-DIAG RESULTS screen shows time data other than "0" or "[1t]".
III	The symptom described by the customer does not recur.
IV	(1st trip) DTC does not appear during the DTC Confirmation Procedure.
VI	The Diagnostic Procedure for PXXXX does not indicate the malfunctioning area.



Diagnostic Procedure

NBEC0046

1	INSPECTION START
Erase (1st trip) DTCs. Refer to "HOW TO ERASE EMISSION — RELATED INFORMATION", EC-85.	
	GO TO 2.

2	CHECK GROUND TERMINALS
Check ground terminals for corroding or loose connection. Refer to GI-31, "GROUND INSPECTION".	
OK or NG	
OK	 GO TO 3.
NG	 Repair or replace.

3	SEARCH FOR ELECTRICAL INCIDENT
Perform GI-26, "Incident Simulation Tests".	
OK or NG	
OK	 GO TO 4.
NG	 Repair or replace.

4	CHECK CONNECTOR TERMINALS
Refer to GI-23, "How to Check Enlarged Contact Spring of Terminal".	
OK or NG	
OK	 INSPECTION END
NG	 Repair or replace connector.

TROUBLE DIAGNOSIS FOR POWER SUPPLY

ECM Terminals and Reference Value

ECM Terminals and Reference Value

NBEC0648

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
26	L/B	ECM relay (Self shutt-off)	[Engine is running] [Ignition switch "OFF"] ● For a few seconds after turning ignition switch "OFF"	0 - 1.5V
			[Ignition switch "OFF"] ● A few seconds passed after turning ignition switch "OFF"	BATTERY VOLTAGE (11 - 14V)
43	R	Ignition switch	[Ignition switch "OFF"]	0V
			[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)
48	B	ECM ground	[Engine is running] ● Idle speed	Engine ground
57	B	ECM ground	[Engine is running] ● Idle speed	Engine ground
12 67	W/R	Power supply for ECM (Buck-up)	[Ignition switch "OFF"]	BATTERY VOLTAGE (11 - 14V)
108	B	ECM ground	[Engine is running] ● Idle speed	Engine ground
110 112	B/W B/W	Power supply for ECM	[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC


EL

IDX

TROUBLE DIAGNOSIS FOR POWER SUPPLY

Main Power Supply and Ground Circuit (Cont'd)

EC-MAIN-02

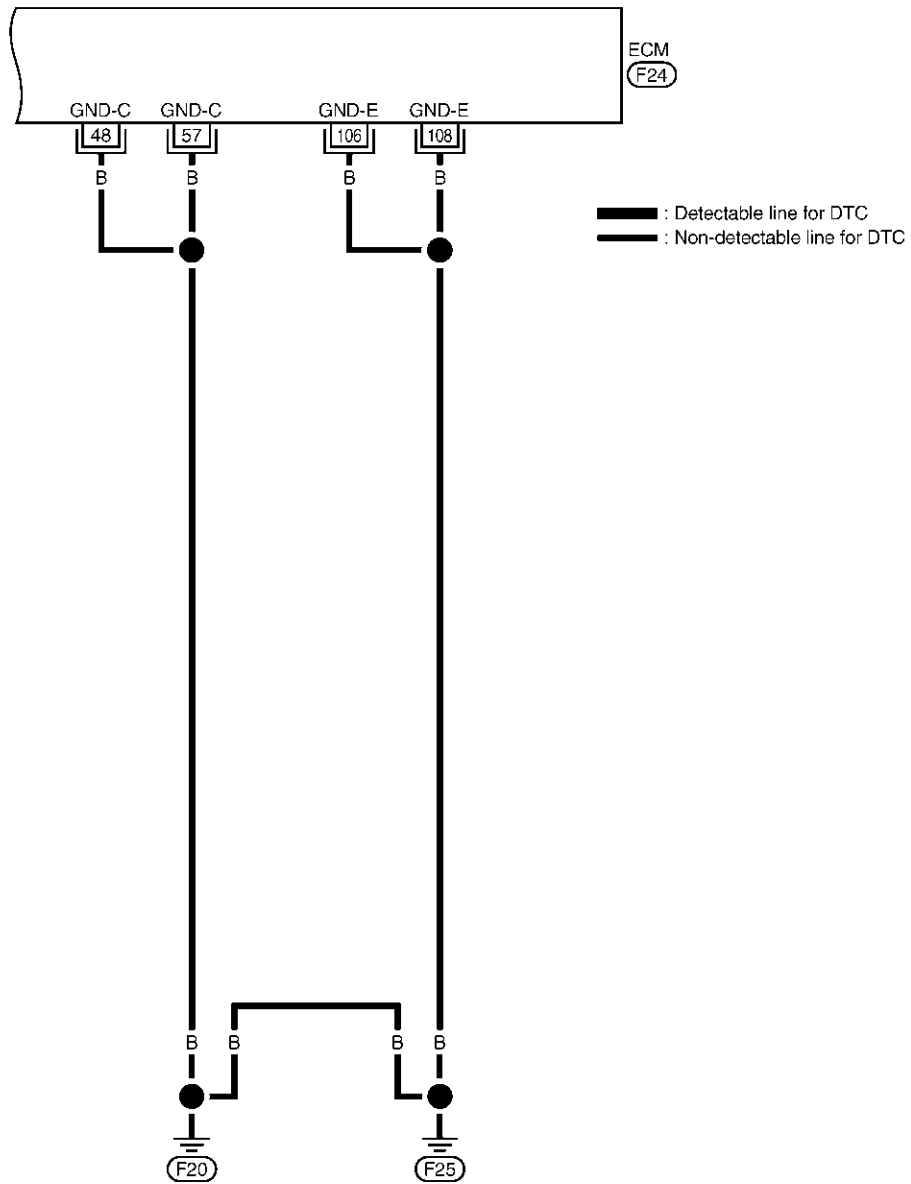

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

101	102	1	2	3	4	5	6	7	8	9	10			58	59	60	61	62	63	64	65	66	67	109	110							
103	104	11	12	13	14	15	16	17	18	19	39	40	41	42	43	44	45	46	47	48	68	69	70	71	72	73	74	75	76	111	112	
105	106	20	21	22	23	24	25	26	27	28	29	49	50	51	52	53	54	55	56	57	77	78	79	80	81	82	83	84	85	86	113	114
107	108	30	31	32	33	34	35	36	37	38											87	88	89	90	91	92	93	94	95	115	116	

F24
GY



MEC941C

TROUBLE DIAGNOSIS FOR POWER SUPPLY

Main Power Supply and Ground Circuit (Cont'd)

DIAGNOSTIC PROCEDURE

NBEC0049

1	INSPECTION START		
Start engine. Is engine running?			
Yes or No			
Yes	▶	GO TO 9.	
No	▶	GO TO 2.	



2	CHECK ECM POWER SUPPLY CIRCUIT-I		
1. Turn ignition switch "OFF" and then "ON". 2. Check voltage between ECM terminal 43 and ground with CONSULT-II or tester.			
SEF291X			
OK	▶	GO TO 4.	
NG	▶	GO TO 3.	

3	DETECT MALFUNCTIONING PART		
Check the following.			
<ul style="list-style-type: none"> ● 10A fuse ● Harness connectors M33, F22 ● Fuse block (J/B) connectors E4, M10 ● Harness for open or short between ECM and ignition switch 			
▶ Repair harness or connectors.			

4	CHECK ECM GROUND CIRCUIT FOR OPEN AND SHORT-I		
1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminals 48, 57, 106, 108 and engine ground. Refer to WIRING DIAGRAM. Continuity should exist. 4. Also check harness for short to power.			
OK or NG			
OK	▶	GO TO 5.	
NG	▶	Repair open circuit or short to power in harness or connectors.	

TROUBLE DIAGNOSIS FOR POWER SUPPLY

Main Power Supply and Ground Circuit (Cont'd)

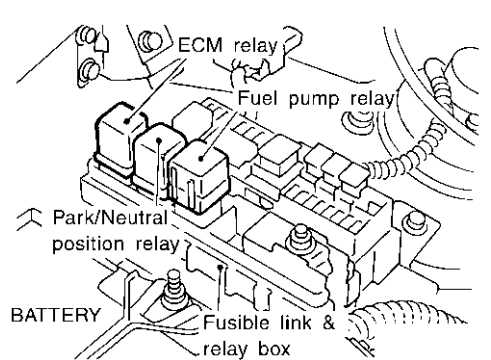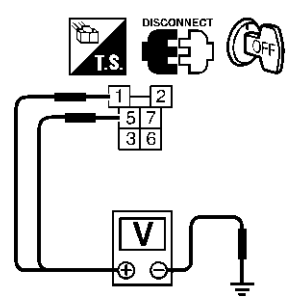5	CHECK POWER SUPPLY-II								
		<p>1. Disconnect ECM relay.</p> 	<p>GI MA EM LC EC FE AT TF PD</p>						
		<p>2. Check voltage between ECM relay terminals 1, 5 and ground with CONSULT-II or tester.</p>  <p style="text-align: center;">Voltage: Battery voltage</p> <p style="text-align: center;">OK or NG</p>	<p>SEF681UB</p> <p>SEF956Y</p>						
		<table border="0" style="width: 100%;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td style="width: 75%;">GO TO 7.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 6.</td> </tr> </table>	OK	▶	GO TO 7.	NG	▶	GO TO 6.	<p>AX SU BR ST</p>
OK	▶	GO TO 7.							
NG	▶	GO TO 6.							

6	DETECT MALFUNCTIONING PART	<p>Check the following.</p> <ul style="list-style-type: none"> ● 7.5A and 10A fuses ● Harness for open or short between ECM relay and battery 	
		▶	Repair open circuit or short to ground or short to power in harness or connectors.


7	CHECK OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	<p>1. Check harness continuity between ECM terminal 26 and ECM relay terminal 2. Continuity should exist.</p> <p>2. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>							
		<table border="0" style="width: 100%;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td style="width: 75%;">Go to "IGNITION SIGNAL", EC-677.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 8.</td> </tr> </table>	OK	▶	Go to "IGNITION SIGNAL", EC-677.	NG	▶	GO TO 8.	<p>RS BT HA SC</p>
OK	▶	Go to "IGNITION SIGNAL", EC-677.							
NG	▶	GO TO 8.							

8	DETECT MALFUNCTIONING PART	<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E1, M1 ● Harness connectors M32, F23 ● Harness for open or short between ECM relay and ECM 	
		▶	Repair open circuit or short to ground or short to power in harness or connectors.


GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

TROUBLE DIAGNOSIS FOR POWER SUPPLY

Main Power Supply and Ground Circuit (Cont'd)


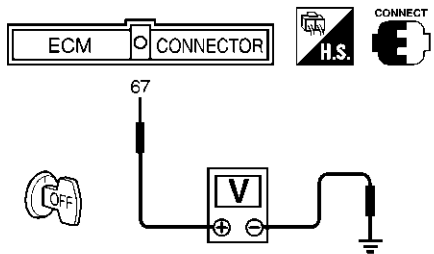
9	CHECK ECM POWER SUPPLY CIRCUIT-II	
<p>1. Stop engine. 2. Check voltage between ECM terminal 67 and ground with CONSULT-II or tester.</p>		
 <p style="text-align: right;">Voltage: Battery voltage</p>		
SEF293X		
OK or NG		
OK	▶	GO TO 11.
NG	▶	GO TO 10.

10	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E1, M1 ● Harness connectors M32, F23 ● Harness for open or short between ECM and fuse 		
▶ Repair harness or connectors.		

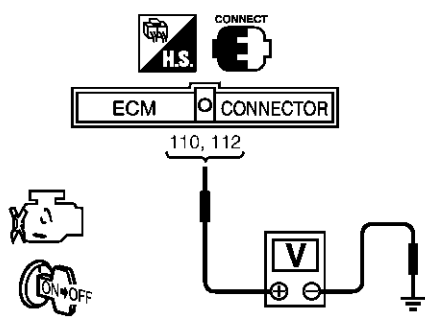11	CHECK ECM POWER SUPPLY CIRCUIT-III	
<p>1. Turn ignition switch "ON" and then "OFF". 2. Check voltage between ECM terminals 110, 112 and ground with CONSULT-II or tester.</p>		
 <p style="text-align: right;">Voltage: After turning ignition switch "OFF", battery voltage will exist for a few seconds, then drop approximately 0V.</p>		
SEC945D		
OK or NG		
OK	▶	GO TO 17.
NG (Battery voltage does not exist.)	▶	GO TO 12.
NG (Battery voltage exists for more than a few seconds.)	▶	GO TO 14.


TROUBLE DIAGNOSIS FOR POWER SUPPLY

Main Power Supply and Ground Circuit (Cont'd)

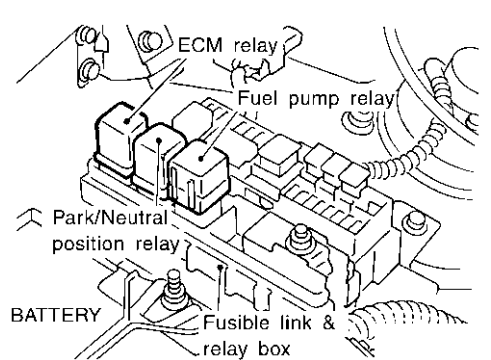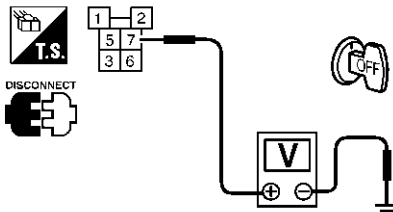12	CHECK ECM POWER SUPPLY CIRCUIT-IV
<p>1. Disconnect ECM relay.</p> <div style="text-align: center;">  </div>	
SEF681UB	
<p>2. Check voltage between ECM relay terminal 7 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p style="margin-left: 200px;">Voltage: Battery voltage</p> </div>	
SEF957Y	
OK or NG	
OK	▶ GO TO 14.
NG	▶ GO TO 13.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

13	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness for open or short between ECM relay and 7.5A fuse 	
▶ Repair open circuit or short to ground or short to power in harness or connectors.	

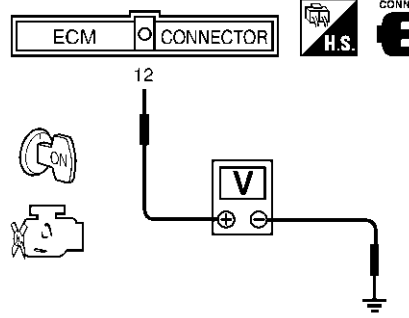14	CHECK ECM POWER SUPPLY-V
<p>Check voltage between ECM terminal 12 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p style="margin-left: 200px;">Voltage: Battery voltage</p> </div>	
SEF331Z	
OK or NG	
OK	▶ GO TO 16.
NG	▶ GO TO 15.


TROUBLE DIAGNOSIS FOR POWER SUPPLY

Main Power Supply and Ground Circuit (Cont'd)

15	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none"> ● Harness connectors E1, M1 ● Harness connectors M94, F27 ● Harness for open or short between ECM and fuse 	
▶	Repair harness or connectors.

16	CHECK HARNESS CONTINUITY BETWEEN ECM RELAY AND ECM FOR OPEN AND SHORT
1. Check harness continuity between ECM terminals 110, 112 and ECM relay terminal 6. Refer to WIRING DIAGRAM. Continuity should exist.	
2. Also check harness for short to ground and short to power.	
OK or NG	
OK	▶ GO TO 18.
NG	▶ GO TO 17.

17	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none"> ● Harness connectors E1, M1 ● Harness connectors M32, F23 ● Harness for open or short between ECM and ECM relay 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

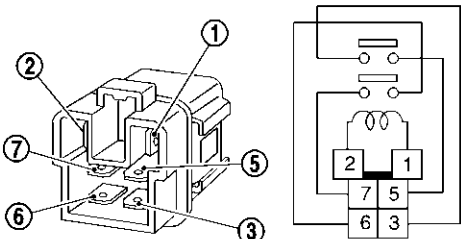18	CHECK ECM RELAY						
1. Apply 12V direct current between ECM relay terminals 1 and 2. 2. Check continuity between relay terminals 3 and 5, 6 and 7.							
							
<table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th style="width: 50%;">Condition</th> <th style="width: 50%;">Continuity</th> </tr> </thead> <tbody> <tr> <td>12V direct current supply between terminals 1 and 2</td> <td style="text-align: center;">Yes</td> </tr> <tr> <td>OFF</td> <td style="text-align: center;">No</td> </tr> </tbody> </table>		Condition	Continuity	12V direct current supply between terminals 1 and 2	Yes	OFF	No
Condition	Continuity						
12V direct current supply between terminals 1 and 2	Yes						
OFF	No						
SEF296X							
OK or NG							
OK	▶ GO TO 19.						
NG	▶ Replace ECM relay.						

19	CHECK ECM GROUND CIRCUIT FOR OPEN AND SHORT-II
1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminals 48, 57, 106, 108 and engine ground. Refer to WIRING DIAGRAM. Continuity should exist.	
4. Also check harness for short to power.	
OK or NG	
OK	▶ GO TO 20.
NG	▶ Repair open circuit or short to power in harness or connectors.

TROUBLE DIAGNOSIS FOR POWER SUPPLY

Main Power Supply and Ground Circuit (Cont'd)

20	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	
▶	INSPECTION END

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0011, P0021 IVT CONTROL

Description


Description

NBEC0821

NBEC0821S01

SYSTEM DESCRIPTION

Sensor	Input signal to ECM function	ECM	Actuator
Crankshaft position sensor (POS)	Engine speed (POS)	Intake valve timing control	Intake valve timing control solenoid valve
Crankshaft position sensor (REF)	Engine speed (REF)		
Camshaft position sensor	Engine speed		
Engine coolant temperature sensor	Engine coolant temperature		
Vehicle speed sensor	Vehicle speed		

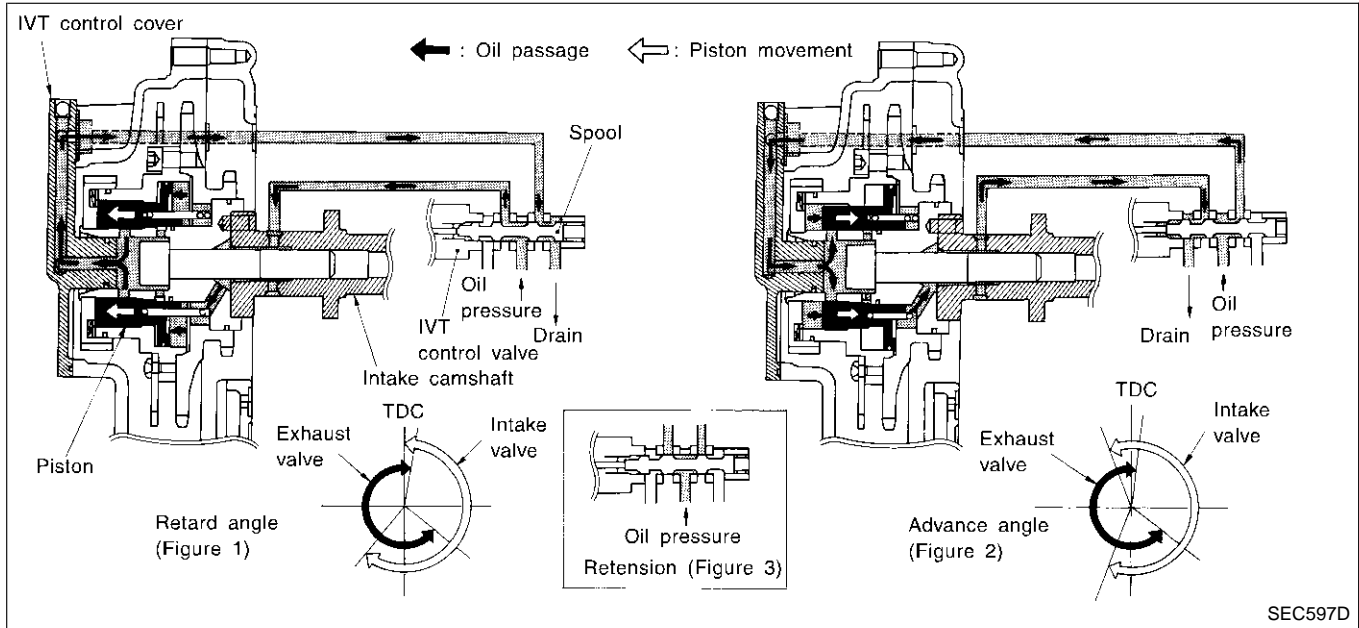

SEC597D

This mechanism hydraulically controls cam phases continuously with the fixed operating angle of the intake valve.

The ECM receives signals such as crankshaft position, camshaft position, engine speed, and engine coolant temperature. Then, the ECM sends ON/OFF pulse duty signals to the camshaft timing control valve depending on driving status. This makes it possible to control the shut/open timing of the intake valve to increase engine torque in low/mid speed range and output in high-speed range.

CONSULT-II Reference Value in Data Monitor Mode

NBEC0822

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
INT/V TIM (B1) INT/V TIM (B2)	<ul style="list-style-type: none"> Engine: After warming up Shift lever "N" Quickly depressed accelerator pedal No-load Idle	0° CA
	2,000 rpm	Approximately 12 - 18° CA
INT/V SOL (B1) INT/V SOL (B2)	<ul style="list-style-type: none"> Engine: After warming up Shift lever "N" Quickly depressed accelerator pedal No-load Idle	0%
	2,000 rpm	Approximately 40%

DTC P0011, P0021 IVT CONTROL

ECM Terminals and Reference Value





ECM Terminals and Reference Value

=NBEC0823

Specification data are reference values, and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.

CAUTION:



Do not use ECM ground terminals when measuring voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than the ECM terminals, such as the ground.

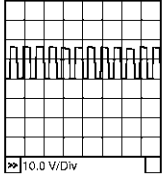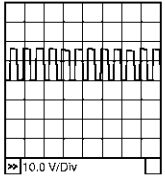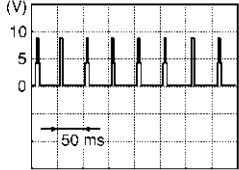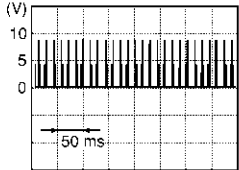TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
13	OR/B	Intake valve timing control solenoid valve (bank 1)	[Engine is running] ● Warm-up condition ● Idle speed	Battery voltage
			[Engine is running] ● Warm-up condition ● Engine speed is 2,000 rpm.	7 - 8V  PBIB1790E
15	P/L	Intake valve timing control solenoid valve (bank 2)	[Engine is running] ● Warm-up condition ● Idle speed	Battery voltage
			[Engine is running] ● Warm-up condition ● Engine speed is 2,000 rpm.	7 - 8V  PBIB1790E
79	Y/G	Intake valve timing control position sensor (bank 1)	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0.5V  SEF351Z
			[Engine is running] ● Warm-up condition ● Engine speed is 2,000 rpm.	Approximately 0.5V  SEF352Z

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0011, P0021 IVT CONTROL

ECM Terminals and Reference Value (Cont'd)

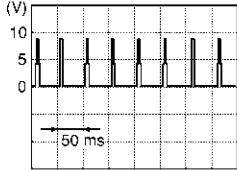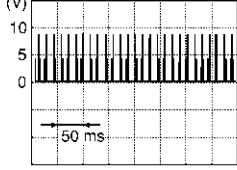TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
89	OR	Intake valve timing control position sensor (bank 2)	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	<p>Approximately 0.5V</p>  <p style="text-align: right;">SEF351Z</p>
			<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 2,000 rpm. 	<p>Approximately 0.5V</p>  <p style="text-align: right;">SEF352Z</p>

On Board Diagnosis Logic

NBEC0824

DTC No.	Trouble diagnosis name		DTC Detecting Condition	Possible Cause
P0011 0011 (Bank 1) P0021 0021 (Bank 2)	Intake valve timing control performance	A)	The alignment of the intake valve timing control has been mis-registered.	<ul style="list-style-type: none"> ● Harness or connectors (Intake valve timing control position sensor circuit is open or shorted.) Refer to EC-521. ● Crankshaft position sensor (REF) ● Crankshaft position sensor (POS) ● Camshaft position sensor (PHASE)
		B)	There is a gap between angle of target and phase-control angle degree.	

FAIL-SAFE MODE

NBEC0824S01

When malfunction A or B is detected, the ECM enters fail-safe mode and the MIL lights up.

Detected items	Engine operating condition in fail-safe mode
Intake valve timing control	The signal is not energized to the solenoid valve and the valve control does not function.

DTC Confirmation Procedure

NBEC0825

CAUTION:

Always drive at a safe speed.

NOTE:

- If both DTC P1111 (B1), P1136 (B2) or P1140 (B1), P1145 (B2) and P0011 (B1), P0021 (B2) are displayed, perform trouble diagnosis for “DTC P1111 (B1), P1136 (B2) or P1140 (B1), P1145 (B2)” first. (See EC-486, 521.)
- If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 10 seconds before conducting the next test.

DTC P0011, P0021 IVT CONTROL

DTC Confirmation Procedure (Cont'd)

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
B/FUEL SCHDL	XXX msec
COOLANTENP/S	XXX °C
VHCL SPEED SE	XXX km/h
INT/V TIM (B1)	XXX °CA
INT/V TIM (B2)	XXX °CA
INT/V SOL (B1)	XXX %
INT/V SOL (B2)	XXX %

SEF353Z

PROCEDURE FOR MALFUNCTION A

NBEC0825S01

With CONSULT-II

NBEC0825S0101

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Maintain the following conditions for at least 10 consecutive seconds.

ENG SPEED	More than 2,000 rpm
COOLANT TEMPS	More than 70°C (158°F)
Selector lever	1st position
Driving location	Driving vehicle uphill (Increased engine load will help maintain the driving conditions required for this test.)

- 4) Maintain the following conditions for at least 20 consecutive seconds.

ENG SPEED	Idle
COOLANT TEMPS	More than 70°C (158°F)
Selector lever	"P" or "N" position

- 5) If 1st trip DTC is detected, go to "P1140, P1145 INTAKE VALVE TIMING CONTROL POSITION SENSOR". Refer to EC-521.

With GST

NBEC0825S0102

Follow the procedure "With CONSULT-II" above.

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
B/FUEL SCHDL	XXX msec
COOLANTENP/S	XXX °C
VHCL SPEED SE	XXX km/h
INT/V TIM (B1)	XXX °CA
INT/V TIM (B2)	XXX °CA
INT/V SOL (B1)	XXX %
INT/V SOL (B2)	XXX %

SEF353Z

PROCEDURE FOR MALFUNCTION B

NBEC0825S02

With CONSULT-II

NBEC0825S0201

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Maintain the following conditions for at least 20 consecutive seconds.

ENG SPEED	2,000 - 3,000 rpm (A constant rotation is maintained.)
COOLANT TEMPS	70 - 90°C (158 - 194°F)
Selector lever	1st position
Driving location	Driving vehicle uphill (Increased engine load will help maintain the driving conditions required for this test.)

- 4) If 1st trip DTC is detected, go to "P1140, P1145 INTAKE VALVE TIMING CONTROL POSITION SENSOR". Refer to EC-521.

With GST

NBEC0825S0202

Follow the procedure "With CONSULT-II" above.

DTC P0031, P0032, P0051, P0052 HO2S1 HEATER

Description

Description

NBEC0826

SYSTEM DESCRIPTION

NBEC0826S01

Sensor	Input Signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS)	Engine speed	Heated oxygen sensor 1 heater control	Heated oxygen sensor 1 heaters
Crankshaft position sensor (REF)			
Engine coolant temperature sensor	Engine coolant temperature		

The ECM performs ON/OFF control of the heated oxygen sensor 1 heaters corresponding to the engine speed and engine coolant temperature. The duty percent varies with engine coolant temperature when engine is started.

OPERATION

NBEC0826S02

Engine speed rpm	Heated oxygen sensor 1 heaters
Above 3,600	OFF
Below 3,600 after warming up	ON

CONSULT-II Reference Value in Data Monitor Mode

NBEC0827

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
HO2S1 HTR (B1) HO2S1 HTR (B2)	Engine: After warming up ● Engine speed: Below 3,600 rpm	ON
	● Engine speed: Above 3,600 rpm	OFF


ECM Terminals and Reference Value

NBEC0828

Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.


CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

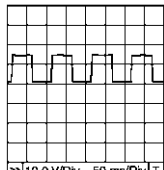TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
3	L/OR	Heated oxygen sensor 1 heater (bank 1)	[Engine is running] ● Warm-up condition ● Engine speed is below 3,600 rpm.	Approximately 8V★  PBIB0519E
			[Engine is running] ● Engine speed is above 3,600 rpm.	BATTERY VOLTAGE (11 - 14V)

DTC P0031, P0032, P0051, P0052 HO2S1 HEATER

ECM Terminals and Reference Value (Cont'd)

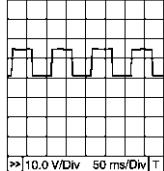TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
2	R/G	Heated oxygen sensor 1 heater (bank 2)	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is below 3,600 rpm. 	Approximately 8V★  PBIB0519E
			[Engine is running] <ul style="list-style-type: none"> ● Engine speed is above 3,600 rpm. 	BATTERY VOLTAGE (11 - 14V)

GI
MA
EM
LC
EC

On Board Diagnosis Logic

NBEC0829

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0031 0031 (Bank 1) P0051 0051 (Bank 2)	Heated oxygen sensor 1 heater control circuit low	The current amperage in the heated oxygen sensor 1 heater circuit is out of the normal range. (An excessively low voltage signal is sent to ECM through the heated oxygen sensor 1 heater.)	<ul style="list-style-type: none"> ● Harness or connectors (The heated oxygen sensor 1 heater circuit is open or shorted.) ● Heated oxygen sensor 1 heater
P0032 0032 (Bank 1) P0052 0052 (Bank 2)	Heated oxygen sensor 1 heater control circuit high	The current amperage in the heated oxygen sensor 1 heater circuit is out of the normal range. (An excessively high voltage signal is sent to ECM through the heated oxygen sensor 1 heater.)	<ul style="list-style-type: none"> ● Harness or connectors (The heated oxygen sensor 1 heater circuit is shorted.) ● Heated oxygen sensor 1 heater

PD
AX
SU
BR
ST
RS

2

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm

SEF058Y

DTC Confirmation Procedure

NBEC0830

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is between 10.5V and 16V at idle.

WITH CONSULT-II

NBEC0830S01

- 1) Start engine and warm it up to normal operating temperature.

BT
HA
SC
EL
IDX

DTC P0031, P0032, P0051, P0052 HO2S1 HEATER

DTC Confirmation Procedure (Cont'd)

- 2) Turn ignition switch "OFF" and wait at least 10 seconds.
- 3) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT-II.
- 4) Start engine and run it for at least 6 seconds at idle speed.
- 5) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-171.



WITH GST

NBEC0830S02

- 1) Start engine and warm it up to normal operating temperature.
 - 2) Turn ignition switch "OFF" and wait at least 10 seconds.
 - 3) Start engine and run it for at least 6 seconds at idle speed.
 - 4) Turn ignition switch "OFF" and wait at least 10 seconds.
 - 5) Start engine and run it for at least 6 seconds at idle speed.
 - 6) Select "MODE 3" with GST.
 - 7) If DTC is detected, go to "Diagnostic Procedure", EC-171.
- **When using GST, "DTC Confirmation Procedure" should be performed twice as much as when using CONSULT-II because GST cannot display MODE 7 (1st trip DTC) concerning this diagnosis. Therefore, using CONSULT-II is recommended.**

Wiring Diagram

NBEC0831


NBEC0831S01

BANK 1


EC-O2H1B1-01

— : Detectable line for DTC

— : Non-detectable line for DTC

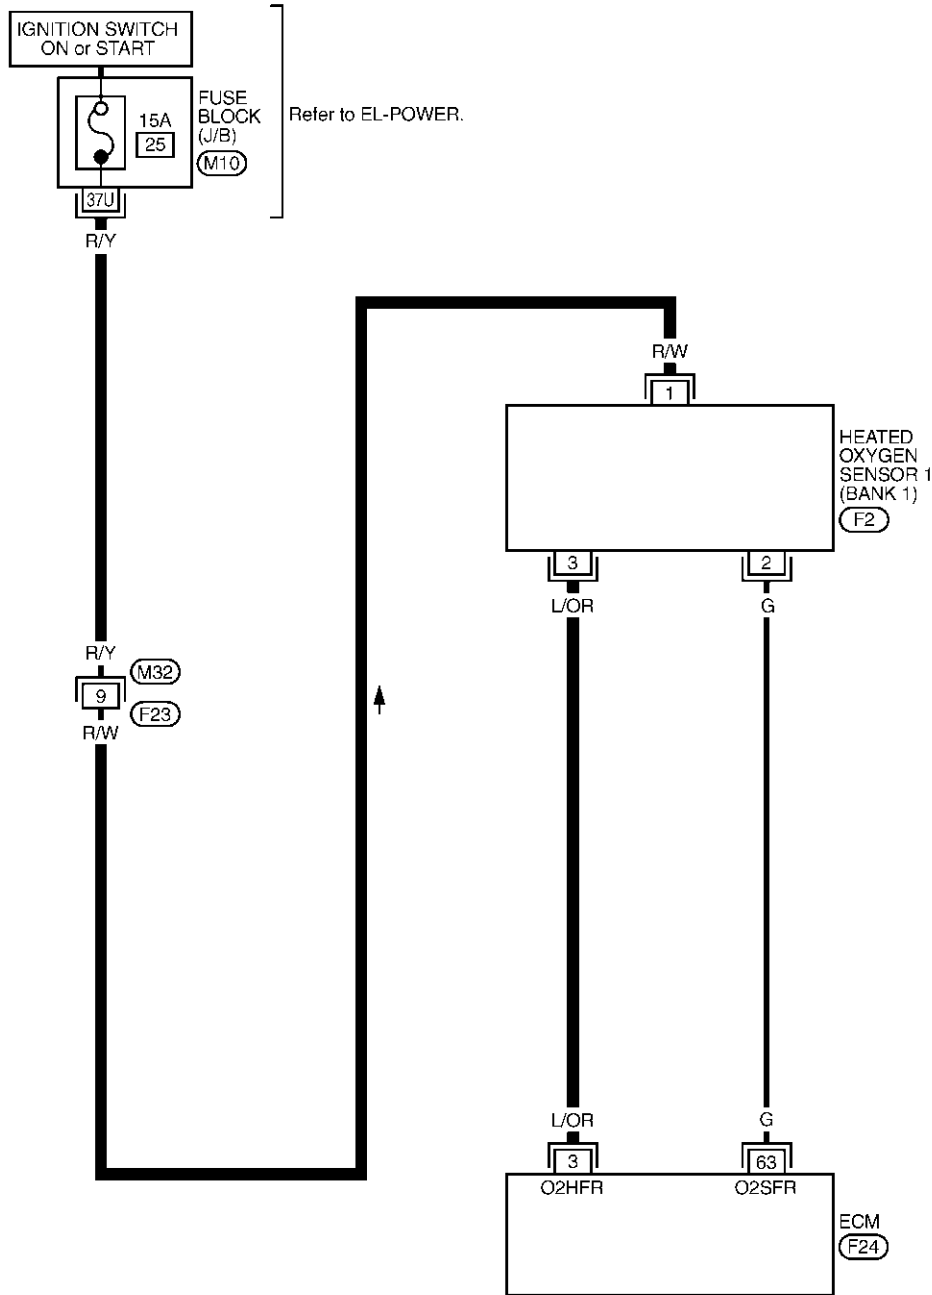


- GI
- MA
- EM
- LC
- EC**
- FE
- AT
- TF
- PD
- AX
- SU
- BR
- ST
- RS
- BT
- HA
- SC
- EL
- IDX



REFER TO THE FOLLOWING.

(M10) - FUSE BLOCK-
JUNCTION BOX (J/B)

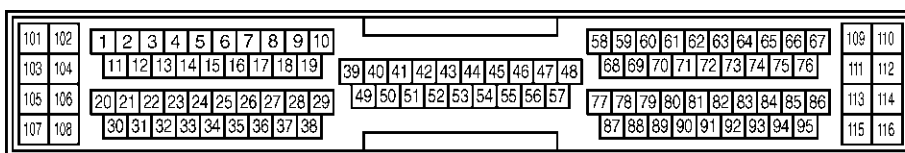

DTC P0031, P0032, P0051, P0052 HO2S1 HEATER

Wiring Diagram (Cont'd)


NBEC0831S02

BANK 2

EC-O2H1B2-01

— : Detectable line for DTC

— : Non-detectable line for DTC

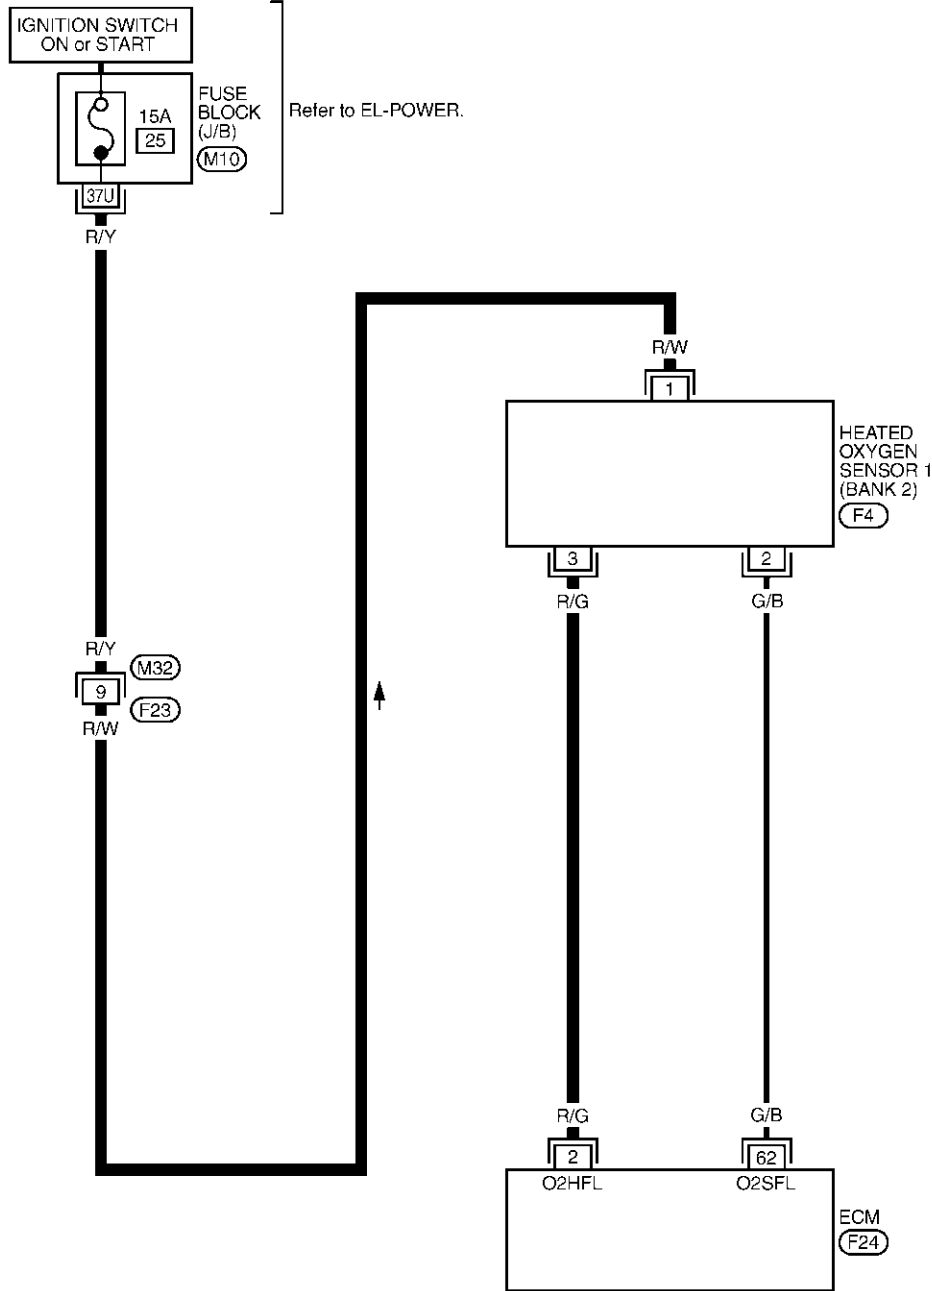

1	2	3	4	5	6	7	8	9	10	11		
12	13	14	15	16	17	18	19	20	21	22	23	24

(M32)
BR

3 2 1 (F4)
SB

REFER TO THE FOLLOWING.

(M10) - FUSE BLOCK-
JUNCTION BOX (J/B)

101	102	1	2	3	4	5	6	7	8	9	10	58	59	60	61	62	63	64	65	66	67	109	110									
103	104	11	12	13	14	15	16	17	18	19	39	40	41	42	43	44	45	46	47	48	68	69	70	71	72	73	74	75	76	111	112	
105	106	20	21	22	23	24	25	26	27	28	29	49	50	51	52	53	54	55	56	57	77	78	79	80	81	82	83	84	85	86	113	114
107	108	30	31	32	33	34	35	36	37	38																					115	116

(F24)
GY



MEC798D


Diagnostic Procedure

NBEC0832

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

1 CHECK HO2S1 POWER SUPPLY CIRCUIT


1. Turn ignition switch "OFF".
2. Check heated oxygen sensor 1 harness protector color.

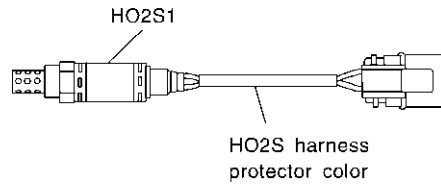


HO2S1 (bank 1): Black
HO2S1 (bank 2): Blue

SEF505YC

3. Disconnect corresponding heated oxygen sensor 1 harness connector.

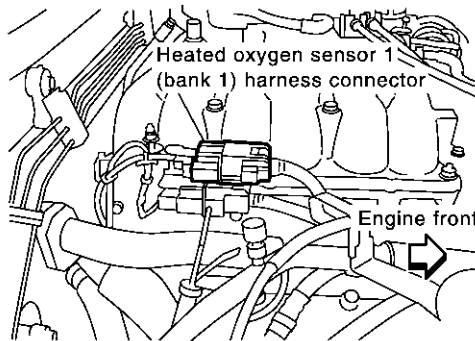


SEF965YA

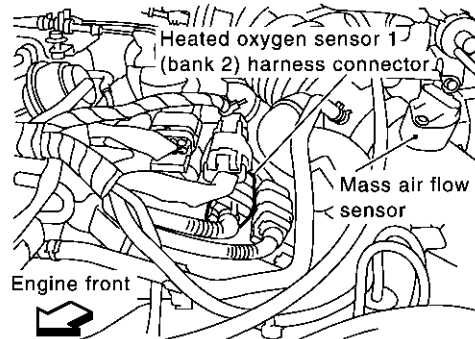

SEF966YA

4. Turn ignition switch "ON".
5. Check voltage between HO2S1 terminal 1 and ground with CONSULT-II or tester.

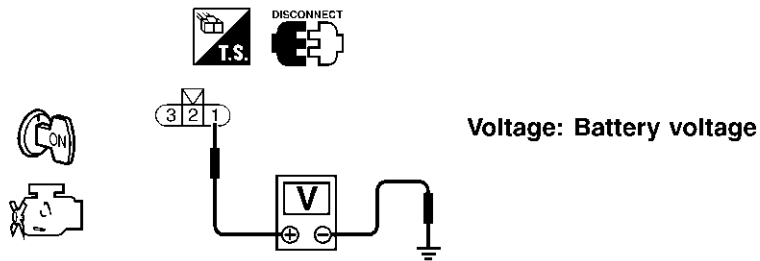

SEF970Y

OK or NG

OK	▶	GO TO 3.
NG	▶	GO TO 2.

DTC P0031, P0032, P0051, P0052 HO2S1 HEATER

Diagnostic Procedure (Cont'd)


2	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M32, F23 ● Fuse block (J/B) connector M10 ● 15A fuse ● Harness for open or short between heated oxygen sensor 1 and fuse 	
▶	Repair harness or connectors.

3	CHECK HO2S1 OUTPUT CIRCUIT FOR OPEN AND SHORT														
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal and HO2S1 terminal as follows. Refer to Wiring Diagram.</p>															
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM</th> <th>Sensor</th> </tr> </thead> <tbody> <tr> <td>P0031, P0032</td> <td style="text-align: center;">3</td> <td style="text-align: center;">3</td> <td style="text-align: center;">Bank 1</td> </tr> <tr> <td>P0051, P0052</td> <td style="text-align: center;">2</td> <td style="text-align: center;">3</td> <td style="text-align: center;">Bank 2</td> </tr> </tbody> </table>		DTC	Terminals		Bank	ECM	Sensor	P0031, P0032	3	3	Bank 1	P0051, P0052	2	3	Bank 2
DTC	Terminals		Bank												
	ECM	Sensor													
P0031, P0032	3	3	Bank 1												
P0051, P0052	2	3	Bank 2												
MTBL1195															
<p style="color: blue;">Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>															
OK	▶ GO TO 4.														
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.														

4	CHECK HEATED OXYGEN SENSOR 1 HEATER						
<p>Check resistance between HO2S1 terminals as follows.</p>							
SEF969YA							
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th>Terminals</th> <th>Resistance</th> </tr> </thead> <tbody> <tr> <td>1 and 3</td> <td>3.3 - 4.0 Ω at 25°C (77°F)</td> </tr> <tr> <td>1 and 2 2 and 3</td> <td>∞ Ω (Continuity should not exist.)</td> </tr> </tbody> </table>		Terminals	Resistance	1 and 3	3.3 - 4.0 Ω at 25°C (77°F)	1 and 2 2 and 3	∞ Ω (Continuity should not exist.)
Terminals	Resistance						
1 and 3	3.3 - 4.0 Ω at 25°C (77°F)						
1 and 2 2 and 3	∞ Ω (Continuity should not exist.)						
<p>CAUTION: Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.</p> <p style="text-align: center;">OK or NG</p>							
OK	▶ GO TO 6.						
NG	▶ GO TO 5.						

DTC P0031, P0032, P0051, P0052 HO2S1 HEATER

Diagnostic Procedure (Cont'd)

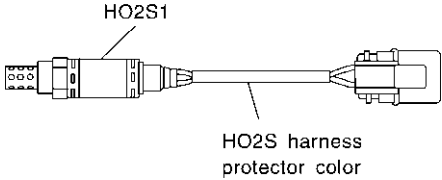5	REPLACE HEATED OXYGEN SENSOR 1	
<p>1. Turn ignition switch "OFF". 2. Check heated oxygen sensor 1 harness protector color.</p>		GI MA EM LC
		
<p>HO2S1 (bank 1): Black HO2S1 (bank 2): Blue</p>		
<p>CAUTION: Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.</p>		EC
		FE
<p>▶ Replace malfunctioning heated oxygen sensor 1.</p>		AT

6	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.		TF
<p>▶ INSPECTION END</p>		PD

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0037, P0038, P0057, P0058 HO2S2 HEATER

Description

Description

NBEC0833

SYSTEM DESCRIPTION

NBEC0833S01

Sensor	Input Signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS) Crankshaft position sensor (REF)	Engine speed	Heated oxygen sensor heater 2 control	Heated oxygen sensor 2 heaters
Engine coolant temperature sensor	Engine coolant temperature		
Mass air flow sensor	Amount of intake air		

The ECM performs ON/OFF control of the heated oxygen sensor 2 heaters corresponding to the engine speed, amount of intake air and engine coolant temperature.

OPERATION

NBEC0833S02

Engine speed rpm	Heated oxygen sensor 2 heaters
Above 3,200	OFF
Below 3,200 after the following conditions are met. <ul style="list-style-type: none"> ● Engine: After warming up ● Keep engine speed at between 3,500 to 4,000 rpm for one minute and at idle for one minute under no load 	ON

CONSULT-II Reference Value in Data Monitor Mode

NBEC0834

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
HO2S2 HTR (B1) HO2S2 HTR (B2)	<ul style="list-style-type: none"> ● Engine is running above 3,200 rpm. 	OFF
	<ul style="list-style-type: none"> ● Engine speed is below 3,200 rpm after the following conditions are met. <ul style="list-style-type: none"> – Engine: After warming up – Keep engine speed between 3,500 and 4,000 rpm for one minute and at idle for one minute under no load. 	ON

ECM Terminals and Reference Value

NBEC0835

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
5	P/B	Heated oxygen sensor 2 heater (bank 1)	[Engine is running] <ul style="list-style-type: none"> ● Engine speed is below 3,200 rpm after the following conditions are met. <ul style="list-style-type: none"> – Engine: After warming up – Keep engine speed between 3,500 and 4,000 rpm for one minute and at idle for one minute under no load. 	0 - 1.0V
			[Engine is running] <ul style="list-style-type: none"> ● Engine speed is above 3,200 rpm. 	BATTERY VOLTAGE (11 - 14V)

DTC P0037, P0038, P0057, P0058 HO2S2 HEATER

ECM Terminals and Reference Value (Cont'd)

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
4	R/W	Heated oxygen sensor 2 heater (bank 2)	[Engine is running] <ul style="list-style-type: none"> Engine speed is below 3,200 rpm after the following conditions are met. <ul style="list-style-type: none"> Engine: After warming up Keep engine speed between 3,500 and 4,000 rpm for one minute and at idle for one minute under no load. 	0 - 1.0V
			[Engine is running] <ul style="list-style-type: none"> Engine speed is above 3,200 rpm. 	BATTERY VOLTAGE (11 - 14V)

On Board Diagnosis Logic

NBEC0836

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0037 0037 (Bank 1) P0057 0057 (Bank 2)	Heated oxygen sensor 2 heater control circuit low	The current amperage in the heated oxygen sensor 2 heater circuit is out of the normal range. (An excessively low voltage signal is sent to ECM through the heated oxygen sensor 2 heater.)	<ul style="list-style-type: none"> Harness or connectors (The heated oxygen sensor 2 heater circuit is open or shorted.) Heated oxygen sensor 2 heater
P0038 0038 (Bank 1) P0058 0058 (Bank 2)	Heated oxygen sensor 2 heater control circuit high	The current amperage in the heated oxygen sensor 2 heater circuit is out of the normal range. (An excessively high voltage signal is sent to ECM through the heated oxygen sensor 2 heater.)	<ul style="list-style-type: none"> Harness or connectors (The heated oxygen sensor 2 heater circuit is shorted.) Heated oxygen sensor 2 heater

4	DATA MONITOR	
	MONITOR	NO DTC
	ENG SPEED	XXX rpm

SEF058Y

DTC Confirmation Procedure

NBEC0837

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is between 10.5V and 16V at idle.

Ⓔ WITH CONSULT-II

NBEC0837S01

- Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT-II.
- Start engine and warm it up to normal operating temperature.
- Turn ignition switch "OFF" and wait at least 10 seconds.
- Start engine and keep engine speed between 3,500 and 4,000 rpm for at least one minute under no load.
- Let engine idle for one minute.
- If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-179.

Ⓔ WITH GST

NBEC0837S02

- Start engine and warm it up to the normal operating temperature.

DTC P0037, P0038, P0057, P0058 HO2S2 HEATER

DTC Confirmation Procedure (Cont'd)

- 2) Turn ignition switch "OFF" and wait at least 10 seconds.
 - 3) Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least one minute under no load.
 - 4) Let engine idle for one minute.
 - 5) Turn ignition switch "OFF" and wait at least 10 seconds.
 - 6) Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least one minute under no load.
 - 7) Let engine idle for one minute.
 - 8) Select "MODE 3" with GST.
 - 9) If DTC is detected, go to "Diagnostic Procedure", EC-179.
- **When using GST, "DTC Confirmation Procedure" should be performed twice as much as when using CONSULT-II because GST cannot display MODE 7 (1st trip DTC) concerning this diagnosis. Therefore, using CONSULT-II is recommended.**

Wiring Diagram

NBEC0838


NBEC0838S01

BANK 1


EC-O2H2B1-01

— : Detectable line for DTC

— : Non-detectable line for DTC

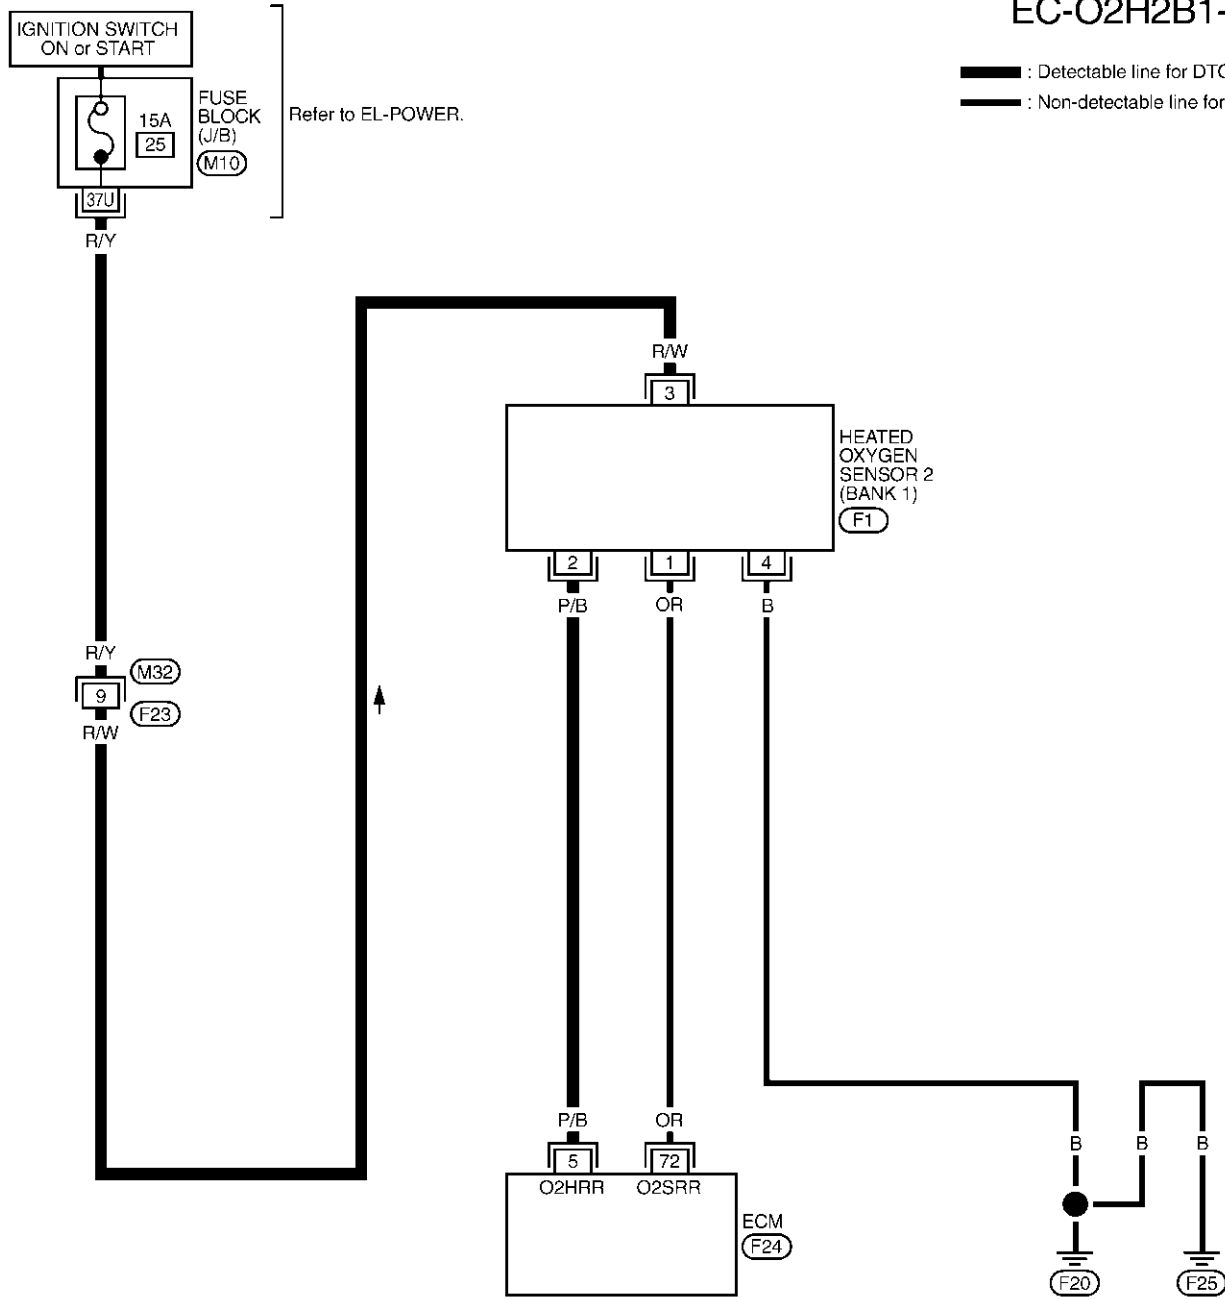


- GI
- MA
- EM
- LC
- EC**
- FE
- AT
- TF
- PD
- AX
- SU
- BR
- ST
- RS
- BT
- HA
- SC
- EL
- IDX



REFER TO THE FOLLOWING.

(M10) - FUSE BLOCK-JUNCTION BOX (J/B)

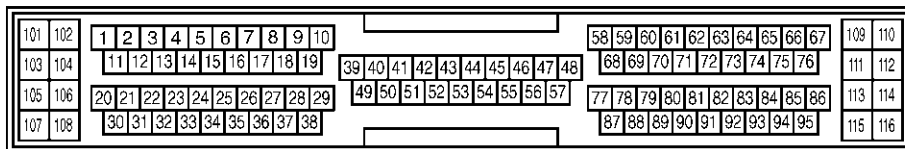


Diagnostic Procedure

NBEC0839

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

1 CHECK HO2S2 POWER SUPPLY CIRCUIT



1. Turn ignition switch "OFF".
2. Check heated oxygen sensor harness 2 protector color.

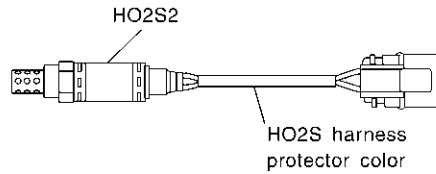

HO2S2 (bank 1): White or Gray
HO2S2 (bank 2): Red or Red/Brown


SEF372ZB

3. Disconnect corresponding heated oxygen sensor 2 harness connector.

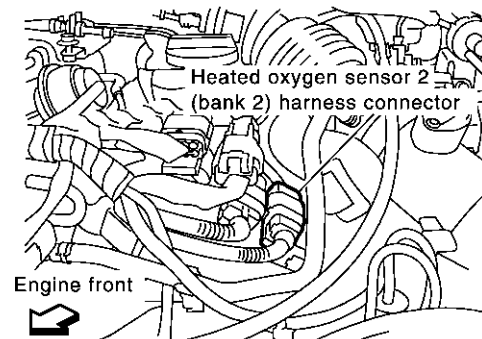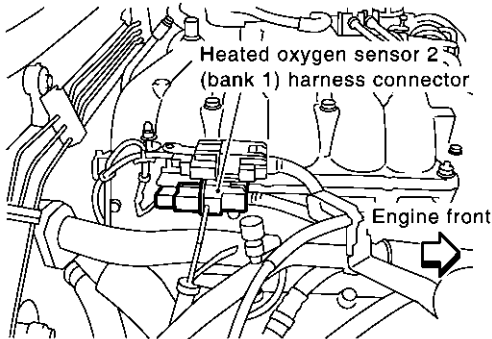

SEF971YA

4. Turn ignition switch "ON".
5. Check voltage between HO2S2 terminal 3 and ground.

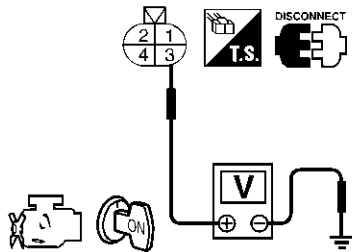

Voltage: Battery voltage

SEF314X

OK or NG

OK	▶	GO TO 3.
NG	▶	GO TO 2.

2 DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M32, F23
- Fuse block (J/B) connector M10
- 15A fuse
- Harness for open or short between heated oxygen sensor 2 and fuse

▶ Repair harness or connectors.

DTC P0037, P0038, P0057, P0058 HO2S2 HEATER

Diagnostic Procedure (Cont'd)

3	CHECK HO2S2 OUTPUT CIRCUIT FOR OPEN AND SHORT														
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal and HO2S2 terminal as follows. Refer to Wiring Diagram.</p>															
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM</th> <th>Sensor</th> </tr> </thead> <tbody> <tr> <td>P0037, P0038</td> <td style="text-align: center;">5</td> <td style="text-align: center;">2</td> <td style="text-align: center;">Bank 1</td> </tr> <tr> <td>P0057, P0058</td> <td style="text-align: center;">4</td> <td style="text-align: center;">2</td> <td style="text-align: center;">Bank 2</td> </tr> </tbody> </table>		DTC	Terminals		Bank	ECM	Sensor	P0037, P0038	5	2	Bank 1	P0057, P0058	4	2	Bank 2
DTC	Terminals		Bank												
	ECM	Sensor													
P0037, P0038	5	2	Bank 1												
P0057, P0058	4	2	Bank 2												
MTBL1196															
<p style="color: blue;">Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>															
OK	▶ GO TO 4.														
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.														

4	CHECK HEATED OXYGEN SENSOR 2 HEATER								
<p>Check the resistance between HO2S2 terminals as follows.</p>									
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th>Terminal No.</th> <th>Resistance</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">2 and 3</td> <td style="text-align: center;">3.3 - 4.0Ω at 25°C (77°F)</td> </tr> <tr> <td style="text-align: center;">1 and 2, 3, 4</td> <td style="text-align: center;">∞ Ω</td> </tr> <tr> <td style="text-align: center;">4 and 1, 2, 3</td> <td style="text-align: center;">(Continuity should not exist.)</td> </tr> </tbody> </table>		Terminal No.	Resistance	2 and 3	3.3 - 4.0Ω at 25°C (77°F)	1 and 2, 3, 4	∞ Ω	4 and 1, 2, 3	(Continuity should not exist.)
Terminal No.	Resistance								
2 and 3	3.3 - 4.0Ω at 25°C (77°F)								
1 and 2, 3, 4	∞ Ω								
4 and 1, 2, 3	(Continuity should not exist.)								
SEF315XD									
<p>CAUTION: Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.</p> <p style="text-align: center;">OK or NG</p>									
OK	▶ GO TO 6.								
NG	▶ GO TO 5.								

5	REPLACE HEATED OXYGEN SENSOR 2
<p>Check rear heated oxygen sensor harness protector color.</p>	
<p>HO2S2 (bank 1): White or Gray HO2S2 (bank 2): Red or Red/Brown</p>	
SEF372ZB	
<p>CAUTION: Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.</p>	
▶	Replace malfunctioning heated oxygen sensor 2.

DTC P0037, P0038, P0057, P0058 HO2S2 HEATER

Diagnostic Procedure (Cont'd)

6	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	
▶	INSPECTION END

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX

DTC P0101 MAF SENSOR

Component Description

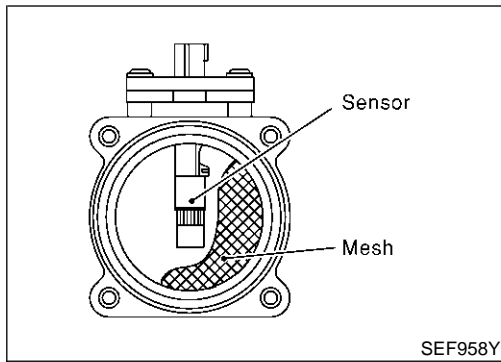

Component Description

NBEC0840

The mass air flow sensor is placed in the stream of intake air. It measures the intake flow rate by measuring a part of the entire intake flow. It consists of a hot film that is supplied with electric current from the ECM. The temperature of the hot film is controlled by the ECM a certain amount. The heat generated by the hot film is reduced as the intake air flows around it. The more air, the greater the heat loss.

Therefore, the ECM must supply more electric current to maintain the temperature of the hot film as air flow increases. The ECM detects the air flow by means of this current change.

CONSULT-II Reference Value in Data Monitor Mode

NBEC0841

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
MAS A/F SE-B1	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load 	Idle	1.2 - 1.8V
		2,500 rpm	1.6 - 2.2V
CAL/LD VALUE	ditto	Idle	14.0 - 33.0%
		2,500 rpm	12.0 - 25.0%
MASS AIRFLOW	ditto	Idle	2.0 - 6.0 g·m/s
		2,500 rpm	7.0 - 20.0 g·m/s

ECM Terminals and Reference Value

NBEC0842

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
61	OR	Mass air flow sensor	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	1.2 - 1.8V
			[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 2,500 rpm. 	1.6 - 2.2V
73	B/P	Mass air flow sensor ground	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	Approximately 0V
111	P/B	Sensors' power supply	[Ignition switch "ON"]	Approximately 5V

DTC P0101 MAF SENSOR

On Board Diagnosis Logic

On Board Diagnosis Logic

NBEC0843

DTC No.	Trouble diagnosis name	DTC Detecting Condition		Possible Cause
P0101 0101	Mass air flow sensor circuit range/performance problem	A)	A high voltage from the sensor is sent to ECM under light load driving condition.	<ul style="list-style-type: none"> • Harness or connectors (The sensor circuit is open or shorted.) • Mass air flow sensor
		B)	A low voltage from the sensor is sent to ECM under heavy load driving condition.	<ul style="list-style-type: none"> • Harness or connectors (The sensor circuit is open or shorted.) • Intake air leaks • Mass air flow sensor

FAIL-SAFE MODE

NBEC0843S01

When the malfunction B is detected, the ECM enters fail-safe mode and the MIL lights up.

Detected items	Engine operating condition in fail-safe mode
Mass air flow sensor circuit	Engine speed will not rise more than 2,400 rpm due to the fuel cut.

DTC Confirmation Procedure

NBEC0844

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

3

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
COOLAN TEMP/S	XXX °C

SEF174Y

PROCEDURE FOR MALFUNCTION A

NBEC0844S01

NOTE:

If engine will not start or stops soon, wait at least 10 seconds with engine stopped (Ignition switch "ON") instead of running engine at idle speed.

With CONSULT-II

NBEC0844S0101

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and warm it up to normal operating temperature.
- 4) Run engine for at least 10 seconds at idle speed.
- 5) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-186.


With GST

NBEC0844S0102

Follow the procedure "With CONSULT-II" above.

DTC P0101 MAF SENSOR

DTC Confirmation Procedure (Cont'd)

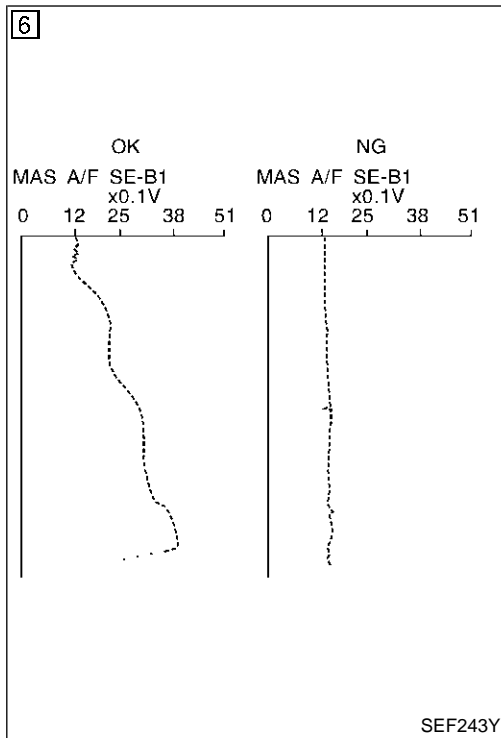

PROCEDURE FOR MALFUNCTION B

NBEC0844S02

CAUTION:

Always drive vehicle at a safe speed.

With CONSULT-II

NBEC0844S0201

- 1) Turn ignition switch "ON".
- 2) Start engine and warm it up to normal operating temperature. **If engine cannot be started, go to "Diagnostic Procedure", EC-186.**
- 3) Select "DATA MONITOR" mode with CONSULT-II.
- 4) Check the voltage of MAS AIR/FL SE with "DATA MONITOR".
- 5) Increases engine speed to about 4,000 rpm.
- 6) Monitor the linear voltage rise in response to engine speed increases.
If NG, go to "Diagnostic Procedure", EC-186.
If OK, go to following step.
- 7) Maintain the following conditions for at least 10 consecutive seconds.

ENG SPEED	More than 2,000 rpm
THRTL POS SEN	More than 3V
Selector lever	Suitable position
Driving location	Driving vehicle uphill (Increased engine load) will help maintain the driving conditions required for this test.

- 8) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-186.

7

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
VHCL SPEED SE	XXX km/h
THRTL POS SEN	XXX V

SEF175Y

CALC LOAD	20%
COOLANT TEMP	95°C
SHORT FT #1	2%
LONG FT #1	0%
SHORT FT #2	4%
LONG FT #2	0%
ENGINE SPD	2637RPM
VEHICLE SPD	0MPH
IGN ADVANCE	41.0°
INTAKE AIR	41°C
MAF	14.1gm/sec
THROTTLE POS	3%

SEF534P

Overall Function Check

NBEC0845

PROCEDURE FOR MALFUNCTION B

NBEC0845S01

Use this procedure to check the overall function of the mass air flow sensor circuit. During this check, a 1st trip DTC might not be confirmed.

With GST

NBEC0845S0101

- 1) Start engine and warm it up to normal operating temperature.
- 2) Select "MODE 1" with GST.
- 3) Check the mass air flow sensor signal with "MODE 1".
- 4) Check for linear mass air flow sensor signal value rise in response to increases to about 4,000 rpm in engine speed.
- 5) If NG, go to "Diagnostic Procedure", EC-186.

DTC P0101 MAF SENSOR


Wiring Diagram

Wiring Diagram


NBEC0846

EC-MAFS-01

— : Detectable line for DTC
— : Non-detectable line for DTC

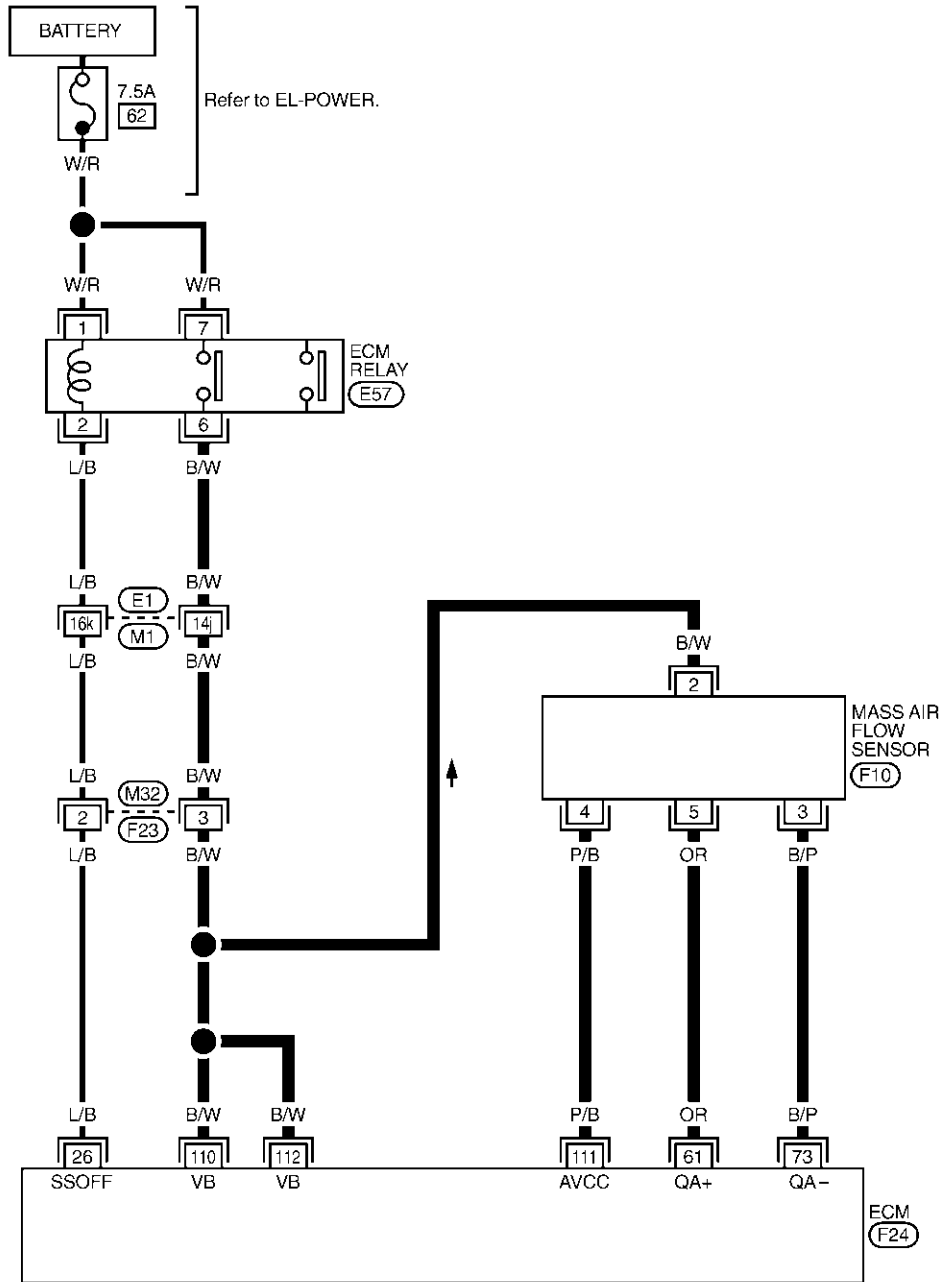

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

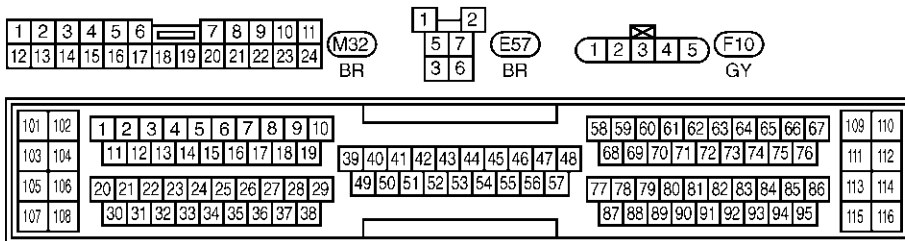

REFER TO THE FOLLOWING.
 (E1) -SUPER
 MULTIPLE JUNCTION (SMJ)



DTC P0101 MAF SENSOR


Diagnostic Procedure

Diagnostic Procedure

NBEC0847

1	INSPECTION START						
Which malfunction (A, B) is duplicated?							
<table border="1"><thead><tr><th>MALFUNCTION</th><th>Type</th></tr></thead><tbody><tr><td>A</td><td>I</td></tr><tr><td>B</td><td>II</td></tr></tbody></table>		MALFUNCTION	Type	A	I	B	II
MALFUNCTION	Type						
A	I						
B	II						
MTBL1197							
Type I or Type II							
Type I	▶ GO TO 3.						
Type II	▶ GO TO 2.						

2	CHECK INTAKE SYSTEM
Check the following for connection.	
<ul style="list-style-type: none">● Air duct● Vacuum hoses● Intake air passage between air duct and intake manifold collector	
OK or NG	
OK	▶ GO TO 3.
NG	▶ Reconnect the parts.

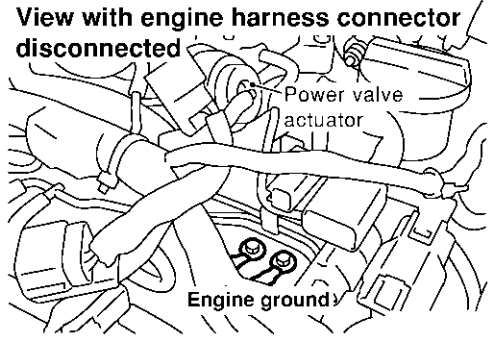
3	RETIGHTEN GROUND SCREWS
<ol style="list-style-type: none">1. Turn ignition switch "OFF".2. Loosen and retighten engine ground screws.	
<p>View with engine harness connector disconnected</p>  <p>The diagram shows a top-down view of the engine compartment. Two screws are labeled 'Engine ground' and are being tightened with a wrench. A component labeled 'Power valve actuator' is also visible. The engine harness connector is shown disconnected.</p>	
SEF959Y	
	▶ GO TO 4.

DTC P0101 MAF SENSOR

Diagnostic Procedure (Cont'd)

4 CHECK MAF SENSOR POWER SUPPLY CIRCUIT


1. Disconnect mass air flow (MAF) sensor harness connector.

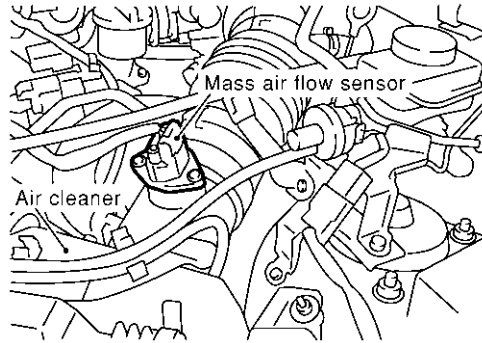

SEF960Y

2. Turn ignition switch "ON".

3. Check voltage between MAF sensor terminals 2, 4 and ground with CONSULT-II or tester.

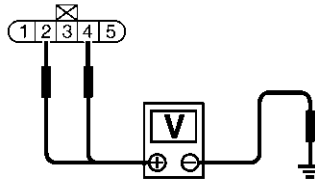

SEC428D

Terminal	Voltage
2	Battery voltage
4	Approximately 5

MTBL1401

OK or NG

OK ► GO TO 6.

NG ► GO TO 5.

5 DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E1, M1
- Harness connectors M32, F23
- Harness for open or short between ECM relay and mass air flow sensor
- Harness for open or short between mass air flow sensor and ECM

► Repair harness or connectors.

6 CHECK MAF SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch "OFF".

2. Disconnect ECM harness connector.

3. Check harness continuity between MAF sensor terminal 3 and ECM terminal 73.
Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to power.

OK or NG

OK ► GO TO 7.

NG ► Repair open circuit or short to ground or short to power in harness or connectors.

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0101 MAF SENSOR


Diagnostic Procedure (Cont'd)

7	CHECK MAF SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
1. Check harness continuity between MAF sensor terminal 5 and ECM terminal 61. Refer to Wiring Diagram. Continuity should exist.		
2. Also check harness for short to ground and short to power.		
OK or NG		
OK	▶	GO TO 8.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

8	CHECK MASS AIR FLOW SENSOR											
1. Reconnect harness connectors disconnected. 2. Start engine and warm it up to normal operating temperature. 3. Check voltage between ECM terminal 61 (Mass air flow sensor signal) and ground.												
		<table border="1"> <thead> <tr> <th>Condition</th> <th>Voltage V</th> </tr> </thead> <tbody> <tr> <td>Ignition switch "ON" (Engine stopped.)</td> <td>Approx. 1.0</td> </tr> <tr> <td>Idle (Engine is warmed-up to normal operating temperature.)</td> <td>1.2 - 1.8</td> </tr> <tr> <td>2,500 rpm (Engine is warmed-up to normal operating temperature.)</td> <td>1.6 - 2.2</td> </tr> <tr> <td>Idle to about 4,000 rpm*</td> <td>1.2 - 1.8 to Approx. 4.0</td> </tr> </tbody> </table> <p>*: Check for linear voltage rise in response to engine being increased to about 4,000 rpm.</p>	Condition	Voltage V	Ignition switch "ON" (Engine stopped.)	Approx. 1.0	Idle (Engine is warmed-up to normal operating temperature.)	1.2 - 1.8	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.6 - 2.2	Idle to about 4,000 rpm*	1.2 - 1.8 to Approx. 4.0
Condition	Voltage V											
Ignition switch "ON" (Engine stopped.)	Approx. 1.0											
Idle (Engine is warmed-up to normal operating temperature.)	1.2 - 1.8											
2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.6 - 2.2											
Idle to about 4,000 rpm*	1.2 - 1.8 to Approx. 4.0											
4. If the voltage is out of specification, disconnect MAF sensor harness connector and connect it again. Then repeat above check.												
OK or NG												
OK	▶	GO TO 9.										
NG	▶	Replace mass air flow sensor.										

SEF298X

9	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.		
▶		INSPECTION END

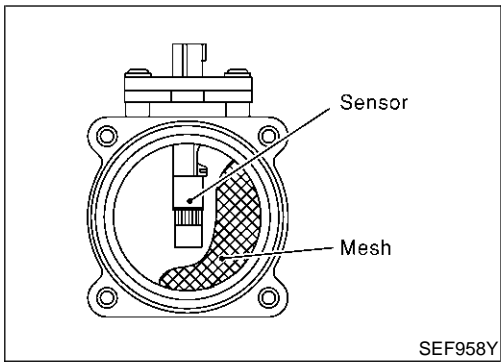

Component Description

NBEC0746

The mass air flow sensor is placed in the stream of intake air. It measures the intake flow rate by measuring a part of the entire intake flow. It consists of a hot film that is supplied with electric current from the ECM. The temperature of the hot film is controlled by the ECM a certain amount. The heat generated by the hot film is reduced as the intake air flows around it. The more air, the greater the heat loss.

Therefore, the ECM must supply more electric current to maintain the temperature of the hot film as air flow increases. The ECM detects the air flow by means of this current change.

CONSULT-II Reference Value in Data Monitor Mode

NBEC0747

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
MAS A/F SE-B1	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load 	Idle	1.2 - 1.8V
		2,500 rpm	1.6 - 2.2V
CAL/LD VALUE	ditto	Idle	14.0 - 33.0%
		2,500 rpm	12.0 - 25.0%
MASS AIRFLOW	ditto	Idle	2.0 - 6.0 g·m/s
		2,500 rpm	7.0 - 20.0 g·m/s

ECM Terminals and Reference Value

NBEC0748

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
61	OR	Mass air flow sensor	[Engine is running] ● Warm-up condition ● Idle speed	1.2 - 1.8V
			[Engine is running] ● Warm-up condition ● Engine speed is 2,500 rpm.	1.6 - 2.2V
73	B/P	Mass air flow sensor ground	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0V
111	P/B	Sensors' power supply	[Ignition switch "ON"]	Approximately 5V

DTC P0102, P0103 MAF SENSOR

On Board Diagnosis Logic

On Board Diagnosis Logic

NBEC0749

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0102 0102	Mass air flow sensor circuit low input	An excessively low voltage from the sensor is sent to ECM when engine is running.	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Intake air leaks ● Mass air flow sensor
P0103 0103	Mass air flow sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Mass air flow sensor

FAIL-SAFE MODE

When the malfunction B is detected, the ECM enters fail-safe mode and the MIL lights up.

NBEC0749S01


Detected items	Engine operating condition in fail-safe mode
Mass air flow sensor circuit	Engine speed will not rise more than 2,400 rpm due to the fuel cut.

DTC Confirmation Procedure

NBEC0751

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

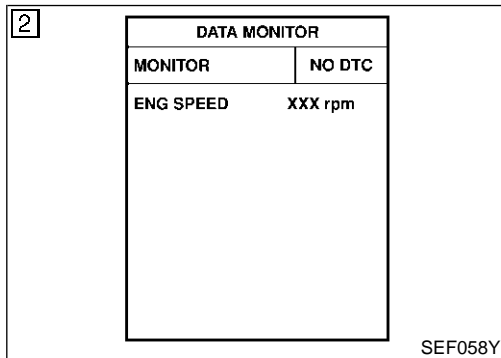

PROCEDURE FOR DTC P0103

NBEC0751S01

With CONSULT-II


NBEC0751S0101

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Wait at least 6 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-192.

With GST

NBEC0751S0102

Follow the procedure "With CONSULT-II" above.

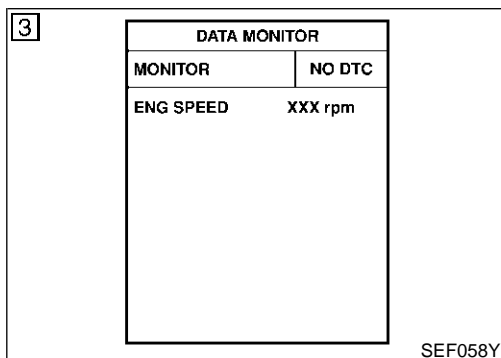

PROCEDURE FOR DTC P0102

NBEC0751S02

With CONSULT-II

NBEC0751S0201

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and wait at least 5 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-192.

With GST

NBEC0751S0202

Follow the procedure "With CONSULT-II" above.

DTC P0102, P0103 MAF SENSOR


Wiring Diagram

Wiring Diagram


NBEC0753

EC-MAFS-01

— : Detectable line for DTC
— : Non-detectable line for DTC

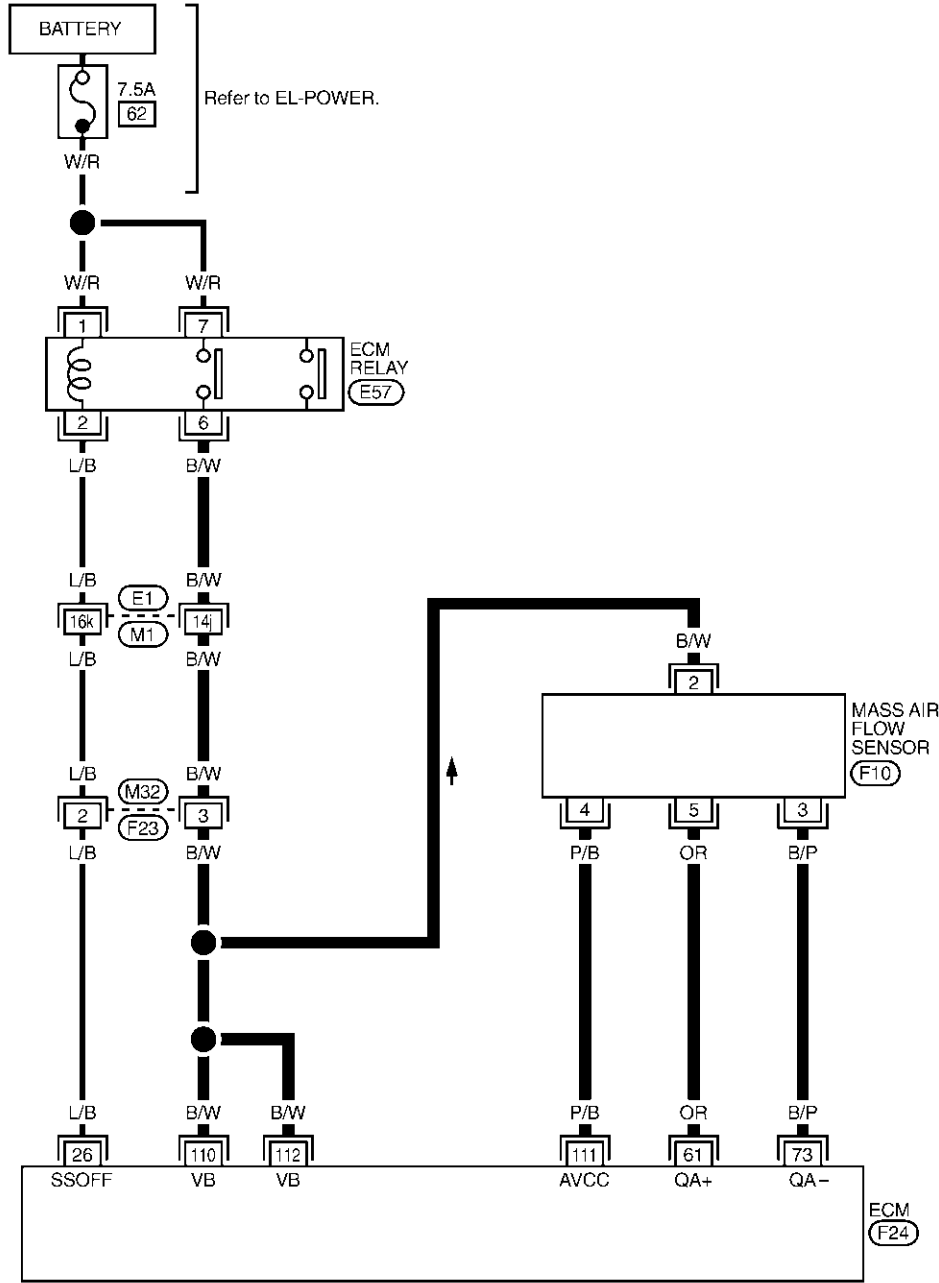

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

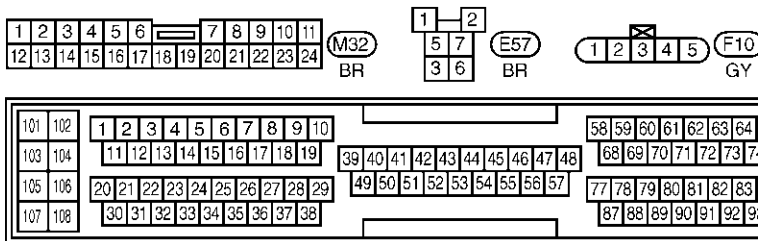

REFER TO THE FOLLOWING.
(E1) -SUPER
 MULTIPLE JUNCTION (SMJ)



DTC P0102, P0103 MAF SENSOR


Diagnostic Procedure

Diagnostic Procedure

NBEC0754

1	INSPECTION START
Which malfunction (P0102 or P0103) is duplicated?	
P0102 or P0103	
P0103	▶ GO TO 3.
P0102	▶ GO TO 2.

2	CHECK INTAKE SYSTEM
Check the following for connection.	
<ul style="list-style-type: none">● Air duct● Vacuum hoses● Intake air passage between air duct to intake manifold collector	
OK or NG	
OK	▶ GO TO 3.
NG	▶ Reconnect the parts.

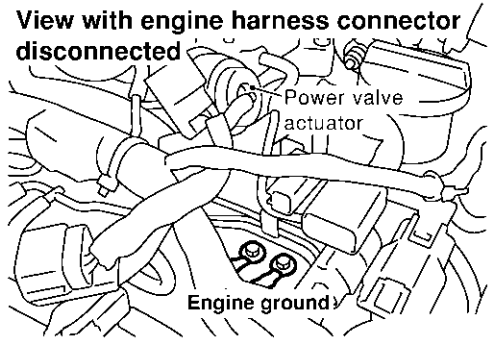
3	RETIGHTEN GROUND SCREWS
<ol style="list-style-type: none">1. Turn ignition switch "OFF".2. Loosen and retighten engine ground screws.	
<p>View with engine harness connector disconnected</p>  <p>The diagram shows a top-down view of the engine compartment. Two screws are labeled 'Engine ground' and are being tightened with a wrench. A component labeled 'Power valve actuator' is also visible. The engine harness connector is shown disconnected.</p>	
SEF959Y	
▶	GO TO 4.

DTC P0102, P0103 MAF SENSOR

Diagnostic Procedure (Cont'd)

4 CHECK MAF SENSOR POWER SUPPLY CIRCUIT


1. Disconnect mass air flow (MAF) sensor harness connector.

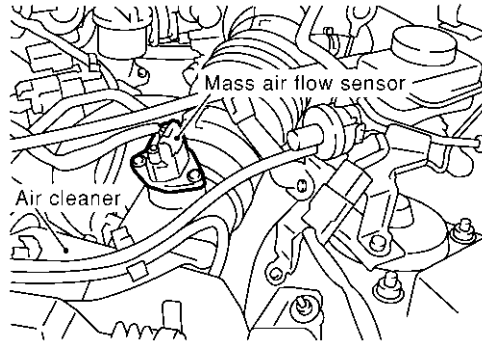

SEF960Y

2. Turn ignition switch "ON".

3. Check voltage between MAF sensor terminals 2, 4 and ground with CONSULT-II or tester.

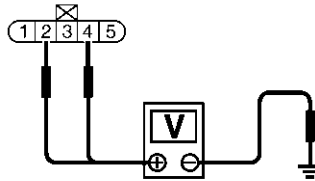

SEC428D

Terminal	Voltage
2	Battery voltage
4	Approximately 5

MTBL1401

OK or NG

OK ► GO TO 6.

NG ► GO TO 5.

5 DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E1, M1
- Harness connectors M32, F23
- Harness for open or short between ECM relay and mass air flow sensor
- Harness for open or short between mass air flow sensor and ECM

► Repair harness or connectors.

6 CHECK MAF SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch "OFF".
2. Disconnect ECM harness connector.
3. Check harness continuity between MAF sensor terminal 3 and ECM terminal 73.
Refer to Wiring Diagram.
Continuity should exist.
4. Also check harness for short to power.

OK or NG

OK ► GO TO 7.


NG ► Repair open circuit or short to ground or short to power in harness or connectors.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0102, P0103 MAF SENSOR

Diagnostic Procedure (Cont'd)

7	CHECK MAF SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
<p>1. Check harness continuity between MAF sensor terminal 5 and ECM terminal 61. Refer to Wiring Diagram. Continuity should exist.</p> <p>2. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 8.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

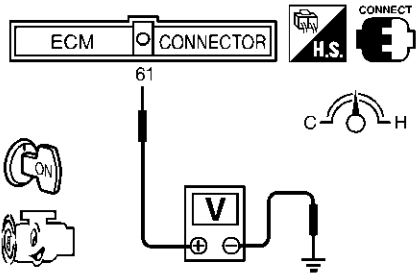8	CHECK MASS AIR FLOW SENSOR											
<p>1. Reconnect harness connectors disconnected.</p> <p>2. Start engine and warm it up to normal operating temperature.</p> <p>3. Check voltage between ECM terminal 61 (Mass air flow sensor signal) and ground.</p>												
		<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Condition</th> <th style="text-align: center;">Voltage V</th> </tr> </thead> <tbody> <tr> <td>Ignition switch "ON" (Engine stopped.)</td> <td style="text-align: center;">Approx. 1.0</td> </tr> <tr> <td>Idle (Engine is warmed-up to normal operating temperature.)</td> <td style="text-align: center;">1.2 - 1.8</td> </tr> <tr> <td>2,500 rpm (Engine is warmed-up to normal operating temperature.)</td> <td style="text-align: center;">1.6 - 2.2</td> </tr> <tr> <td>Idle to about 4,000 rpm*</td> <td style="text-align: center;">1.2 - 1.8 to Approx. 4.0</td> </tr> </tbody> </table> <p style="font-size: small;">*: Check for linear voltage rise in response to engine being increased to about 4,000 rpm.</p>	Condition	Voltage V	Ignition switch "ON" (Engine stopped.)	Approx. 1.0	Idle (Engine is warmed-up to normal operating temperature.)	1.2 - 1.8	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.6 - 2.2	Idle to about 4,000 rpm*	1.2 - 1.8 to Approx. 4.0
Condition	Voltage V											
Ignition switch "ON" (Engine stopped.)	Approx. 1.0											
Idle (Engine is warmed-up to normal operating temperature.)	1.2 - 1.8											
2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.6 - 2.2											
Idle to about 4,000 rpm*	1.2 - 1.8 to Approx. 4.0											
<p>4. If the voltage is out of specification, disconnect MAF sensor harness connector and connect it again. Then repeat above check.</p> <p style="text-align: center;">OK or NG</p>												
OK	▶	GO TO 9.										
NG	▶	Replace mass air flow sensor.										

SEF298X

9	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.		
▶		INSPECTION END

DTC P0107, P0108 ABSOLUTE PRESSURE SENSOR

Component Description

Component Description

The absolute pressure sensor is built into ECM. The sensor detects ambient barometric pressure and sends the voltage signal to the microcomputer.

NBEC0848

GI

MA

EM

LC

On Board Diagnosis Logic

NBEC0849

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0107 0107	Absolute pressure sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	<ul style="list-style-type: none"> • Harness or connectors (The sensor circuit is open or shorted.) • Absolute pressure sensor
P0108 0108	Absolute pressure sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	

EC

FE

AT

TF

DTC Confirmation Procedure

NBEC0850

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

PD

AX

SU

BR

ST

RS


BT

HA

SC

EL

IDX

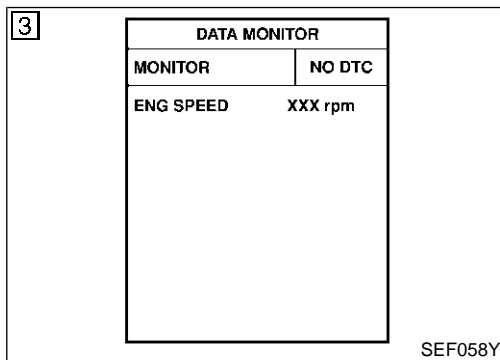

With CONSULT-II

- 1) Turn ignition switch ON.
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Wait at least 6 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-196.

With GST



Follow the procedure "With CONSULT-II".

DTC P0107, P0108 ABSOLUTE PRESSURE SENSOR



Diagnostic Procedure

Diagnostic Procedure

NBEC0851

1	INSPECTION START
 With CONSULT-II 1. Turn ignition switch ON. 2. Select "SELF DIAG RESULTS" mode with CONSULT-II. 3. Touch "ERASE". 4. Perform "DTC Confirmation Procedure" . See EC-195. 5. Is the 1st trip DTC P0107 or P0108 displayed again?	
 With GST 1. Turn ignition switch ON. 2. Select MODE 4 with GST. 3. Touch "ERASE". 4. Perform "DTC Confirmation Procedure" . See EC-195. 5. Is the 1st trip DTC P0107 or P0108 displayed again?	
Yes or No	
Yes	▶ GO TO 2.
No	▶ INSPECTION END

2	REPLACE ECM
1. Replace ECM. 2. Perform initialization of IVIS (NATS) system and registration of all IVIS (NATS) ignition key IDs. Refer to "IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM — NATS)", EC-87. 3. Perform "Idle Air Volume Learning", EC-69. Is "Idle Air Volume Learning" carried out successfully?	
Yes or No	
Yes	▶ INSPECTION END
No	▶ Follow the instruction of "Idle Air Volume Learning".

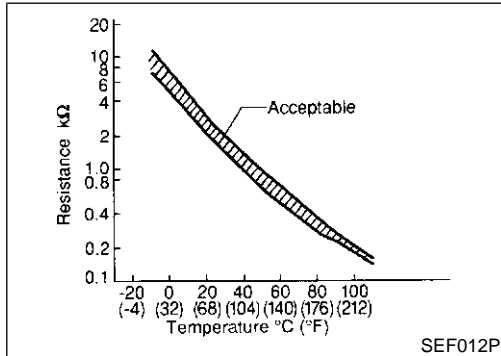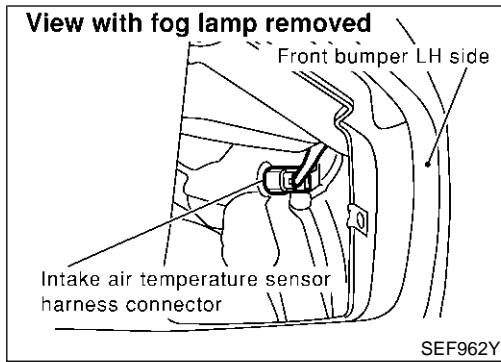

Component Description

NBEC0852

The intake air temperature sensor is mounted to the air duct housing. The sensor detects intake air temperature and transmits a signal to the ECM.

The temperature sensing unit uses a thermistor which is sensitive to the change in temperature. Electrical resistance of the thermistor decreases in response to the temperature rise.

<Reference data>

Intake air temperature °C (°F)	Voltage* V	Resistance kΩ
20 (68)	3.5	2.1 - 2.9
80 (176)	1.23	0.27 - 0.38

*: These data are reference values and are measured between ECM terminal 64 (Intake air temperature sensor) and body ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

On Board Diagnosis Logic

NBEC0853


DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0112 0112	Intake air temperature sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	<ul style="list-style-type: none"> • Harness or connectors (The sensor circuit is open or shorted.) • Intake air temperature sensor
P0113 0113	Intake air temperature sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	

DTC Confirmation Procedure

NBEC0854

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

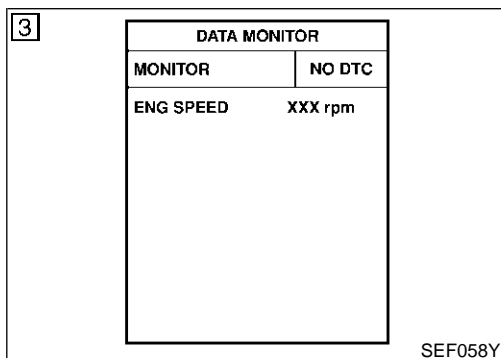

WITH CONSULT-II

NBEC0854S01

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Wait at least 5 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-199.

WITH GST

NBEC0854S02

Follow the procedure "With CONSULT-II" above.


DTC P0112, P0113 IAT SENSOR

Wiring Diagram

Wiring Diagram

NBEC0855


EC-IATS-01

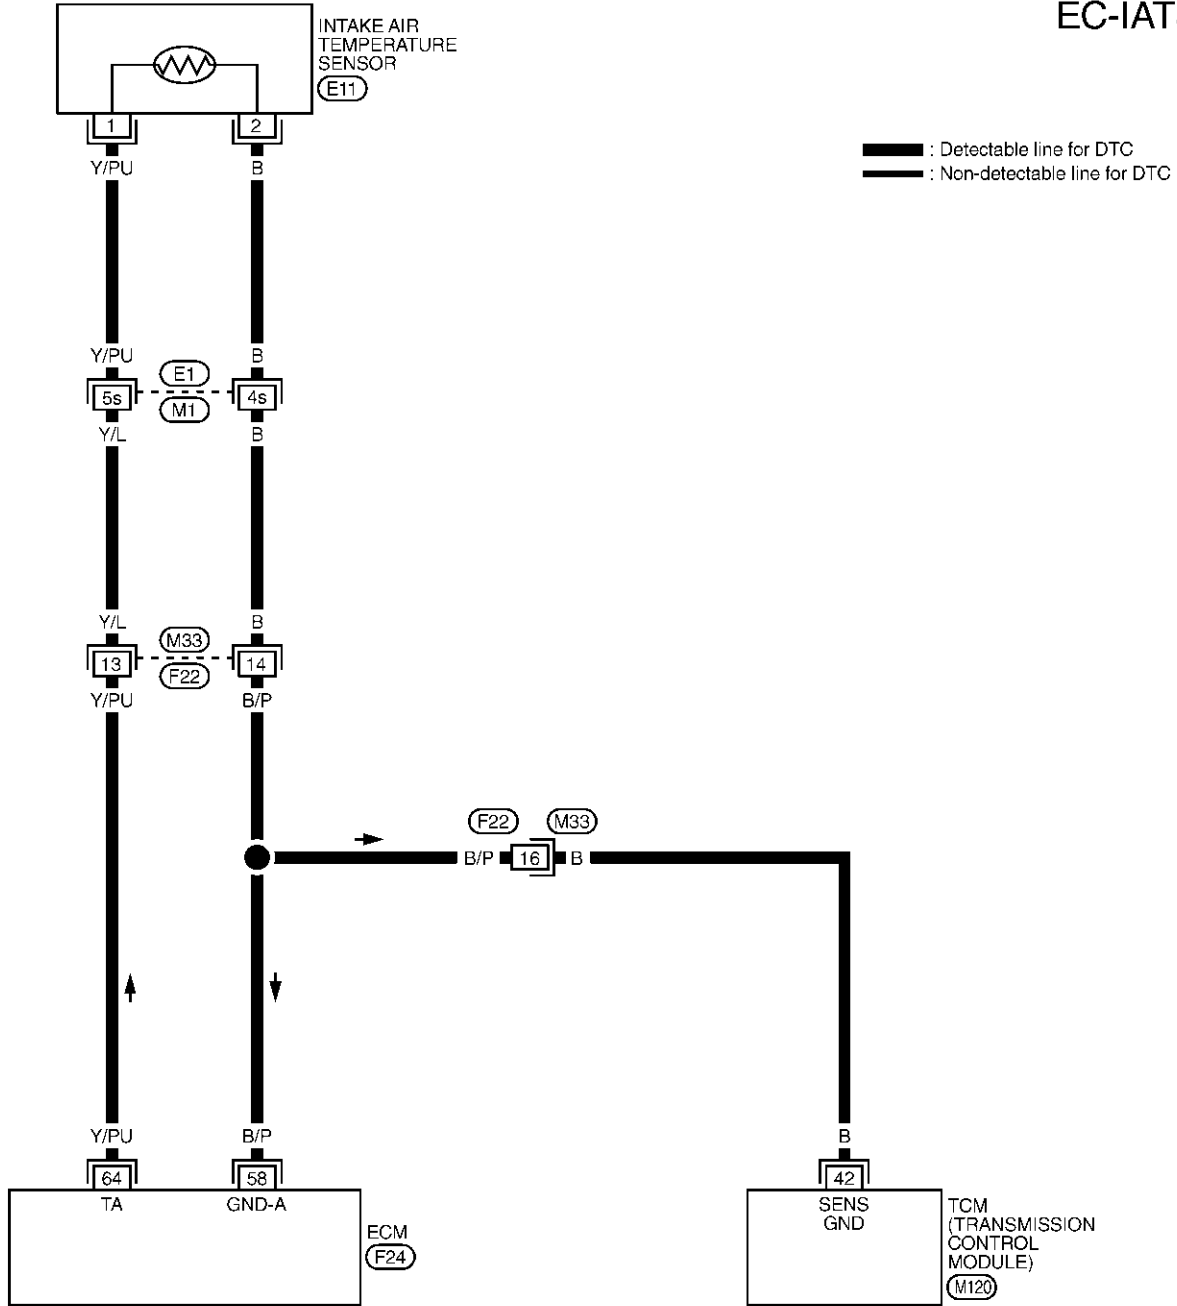

25	26	27	28	29	30	31	32	33
34	35	36	37	38	39	40	41	42
43	44	45	46	47	48			



1	2	3	4	5	6	7		
8	9	10	11	12	13	14	15	16



REFER TO THE FOLLOWING.
 (E1) -SUPER
 MULTIPLE JUNCTION (SMJ)



101	102	1	2	3	4	5	6	7	8	9	10				58	59	60	61	62	63	64	65	66	67	109	110										
103	104	11	12	13	14	15	16	17	18	19				39	40	41	42	43	44	45	46	47	48	68	69	70	71	72	73	74	75	76	111	112		
105	106	20	21	22	23	24	25	26	27	28	29			49	50	51	52	53	54	55	56	57	77	78	79	80	81	82	83	84	85	86	113	114		
107	108	30	31	32	33	34	35	36	37	38																									115	116



MEC658D

Diagnostic Procedure

NBEC0856

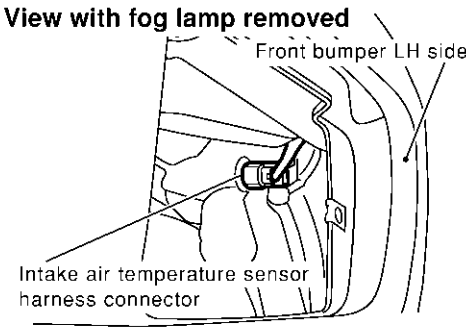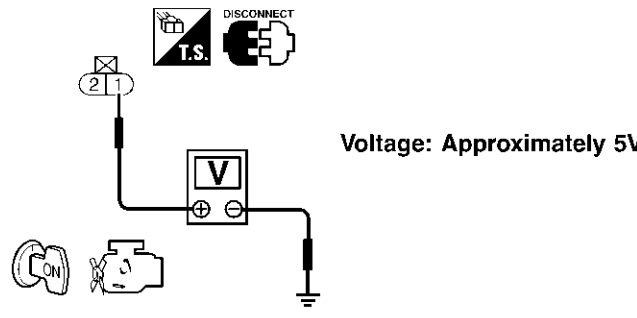1	CHECK INTAKE AIR TEMPERATURE SENSOR POWER SUPPLY CIRCUIT	<p>1. Turn ignition switch "OFF". 2. Disconnect intake air temperature sensor harness connector.</p> <div style="text-align: center;"> <p>View with fog lamp removed</p>  <p>Front bumper LH side</p> <p>Intake air temperature sensor harness connector</p> </div> <p>3. Turn ignition switch "ON". 4. Check voltage between terminal 1 and ground.</p> <div style="text-align: center;">  <p>Voltage: Approximately 5V</p> <p>OK or NG</p> </div>	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p>EC</p> <p>FE</p> <p>AT</p> <p>TF</p> <p>PD</p> <p>AX</p> <p>SU</p>						
<table border="1" style="width: 100%;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 3.</td> </tr> <tr> <td>NG</td> <td>▶</td> <td>GO TO 2.</td> </tr> </table>		OK	▶	GO TO 3.	NG	▶	GO TO 2.	<p>SEF962Y</p> <p>SEF301X</p>	<p>BR</p> <p>ST</p> <p>RS</p> <p>BT</p> <p>HA</p> <p>SC</p> <p>EL</p> <p>IDX</p>
OK	▶	GO TO 3.							
NG	▶	GO TO 2.							



2	DETECT MALFUNCTIONING PART	<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E1, M1 ● Harness connectors M33, F22 ● Harness for open or short between ECM and intake air temperature sensor <p style="text-align: right;">▶ Repair harness or connectors.</p>	
----------	-----------------------------------	---	--

3	CHECK INTAKE AIR TEMPERATURE SENSOR GROUND CIRCUIT FOR OPEN AND SHORT	<p>1. Turn ignition switch "OFF". 2. Check harness continuity between sensor terminal 2 and engine ground. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to power.</p> <p style="text-align: center;">OK or NG</p>							
<table border="1" style="width: 100%;"> <tr> <td style="width: 20%;">OK</td> <td style="width: 5%; text-align: center;">▶</td> <td>GO TO 5.</td> </tr> <tr> <td>NG</td> <td>▶</td> <td>GO TO 4.</td> </tr> </table>		OK	▶	GO TO 5.	NG	▶	GO TO 4.		
OK	▶	GO TO 5.							
NG	▶	GO TO 4.							

DTC P0112, P0113 IAT SENSOR

Diagnostic Procedure (Cont'd)



4	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E1, M1 ● Harness connectors M33, F22 ● Harness for open between ECM and intake air temperature sensor ● Harness for open between TCM (Transmission Control Module) and intake air temperature sensor 	
▶	Repair open circuit or short to power in harness or connectors.

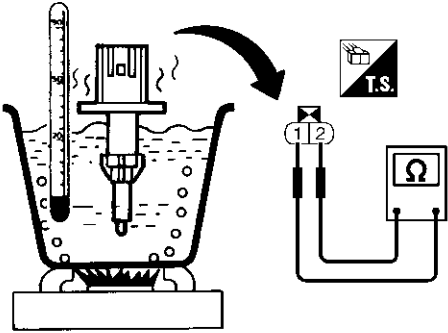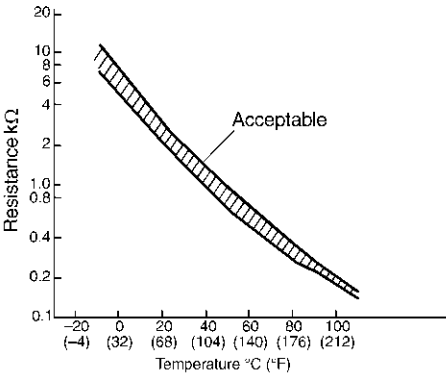5	CHECK INTAKE AIR TEMPERATURE SENSOR						
<p>Check resistance between intake air temperature sensor terminals 1 and 2 as shown in the figure.</p>							
<p><Reference data></p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th style="text-align: center;">Temperature °C (°F)</th> <th style="text-align: center;">Resistance kΩ</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">20 (68)</td> <td style="text-align: center;">2.1 - 2.9</td> </tr> <tr> <td style="text-align: center;">80 (176)</td> <td style="text-align: center;">0.27 - 0.38</td> </tr> </tbody> </table>		Temperature °C (°F)	Resistance kΩ	20 (68)	2.1 - 2.9	80 (176)	0.27 - 0.38
Temperature °C (°F)	Resistance kΩ						
20 (68)	2.1 - 2.9						
80 (176)	0.27 - 0.38						
							
							
SEF302X							
OK or NG							
OK	▶ GO TO 6.						
NG	▶ Replace intake air temperature sensor.						

6	CHECK INTERMITTENT INCIDENT
<p>Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.</p>	
▶	INSPECTION END

DTC P0117, P0118 ECT SENSOR

Component Description

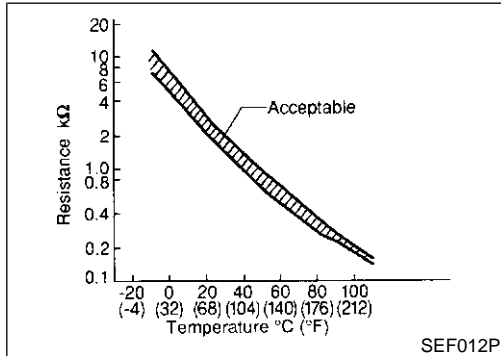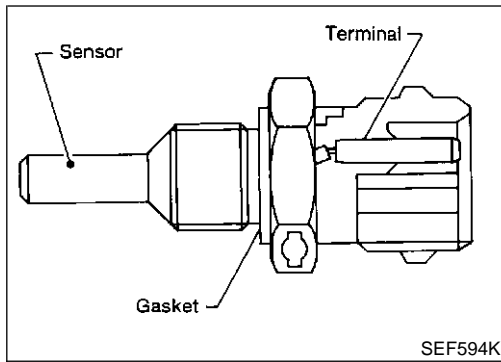

Component Description

NBEC0857

The engine coolant temperature sensor is used to detect the engine coolant temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the engine coolant temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

GI
MA
EM
LC

<Reference data>

Engine coolant temperature °C (°F)	Voltage* V	Resistance kΩ
-10 (14)	4.4	7.0 - 11.4
20 (68)	3.5	2.1 - 2.9
50 (122)	2.2	0.68 - 1.00
90 (194)	0.9	0.236 - 0.260

EC
FE
AT

*: These data are reference values and are measured between ECM terminal 70 (Engine coolant temperature sensor) and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TF
PD
AX

On Board Diagnosis Logic

NBEC0858

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0117 0117	Engine coolant temperature sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	<ul style="list-style-type: none"> • Harness or connectors (The sensor circuit is open or shorted.)
P0118 0118	Engine coolant temperature sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	<ul style="list-style-type: none"> • Engine coolant temperature sensor

ST
RS
BT
HA

FAIL-SAFE MODE

NBEC0858S01


When this malfunction is detected, the ECM enters fail-safe mode and the MIL lights up.

SC
EL
IDX

DTC P0117, P0118 ECT SENSOR

On Board Diagnosis Logic (Cont'd)

Detected items	Engine operating condition in fail-safe mode	
Engine coolant temperature sensor circuit	Engine coolant temperature will be determined by ECM based on the time after turning ignition switch "ON" or "START". CONSULT-II displays the engine coolant temperature decided by ECM.	
	Condition	Engine coolant temperature decided (CONSULT-II display)
	Just as ignition switch is turned ON or Start	40°C (104°F)
	More than approx. 4 minutes after ignition ON or Start	80°C (176°F)
Except as shown above	40 - 80°C (104 - 176°F) (Depends on the time)	

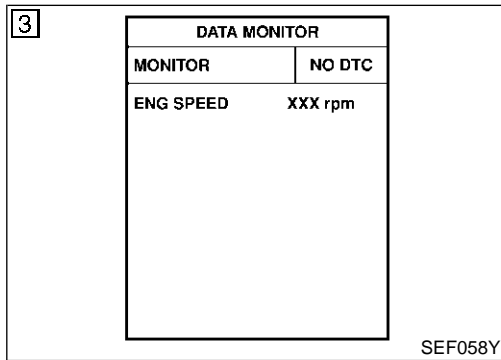

DTC Confirmation Procedure

NBEC0859

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

Ⓢ WITH CONSULT-II

NBEC0859S01

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Wait at least 5 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-204.

Ⓢ WITH GST

NBEC0859S02

Follow the procedure "WITH CONSULT-II" above.

DTC P0117, P0118 ECT SENSOR

Wiring Diagram

Wiring Diagram

NBEC0860

EC-ECTS-01

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS




BT

HA

SC

EL

IDX

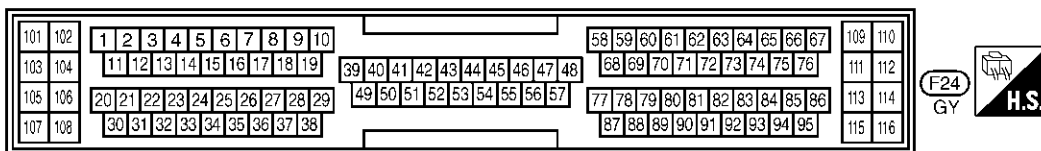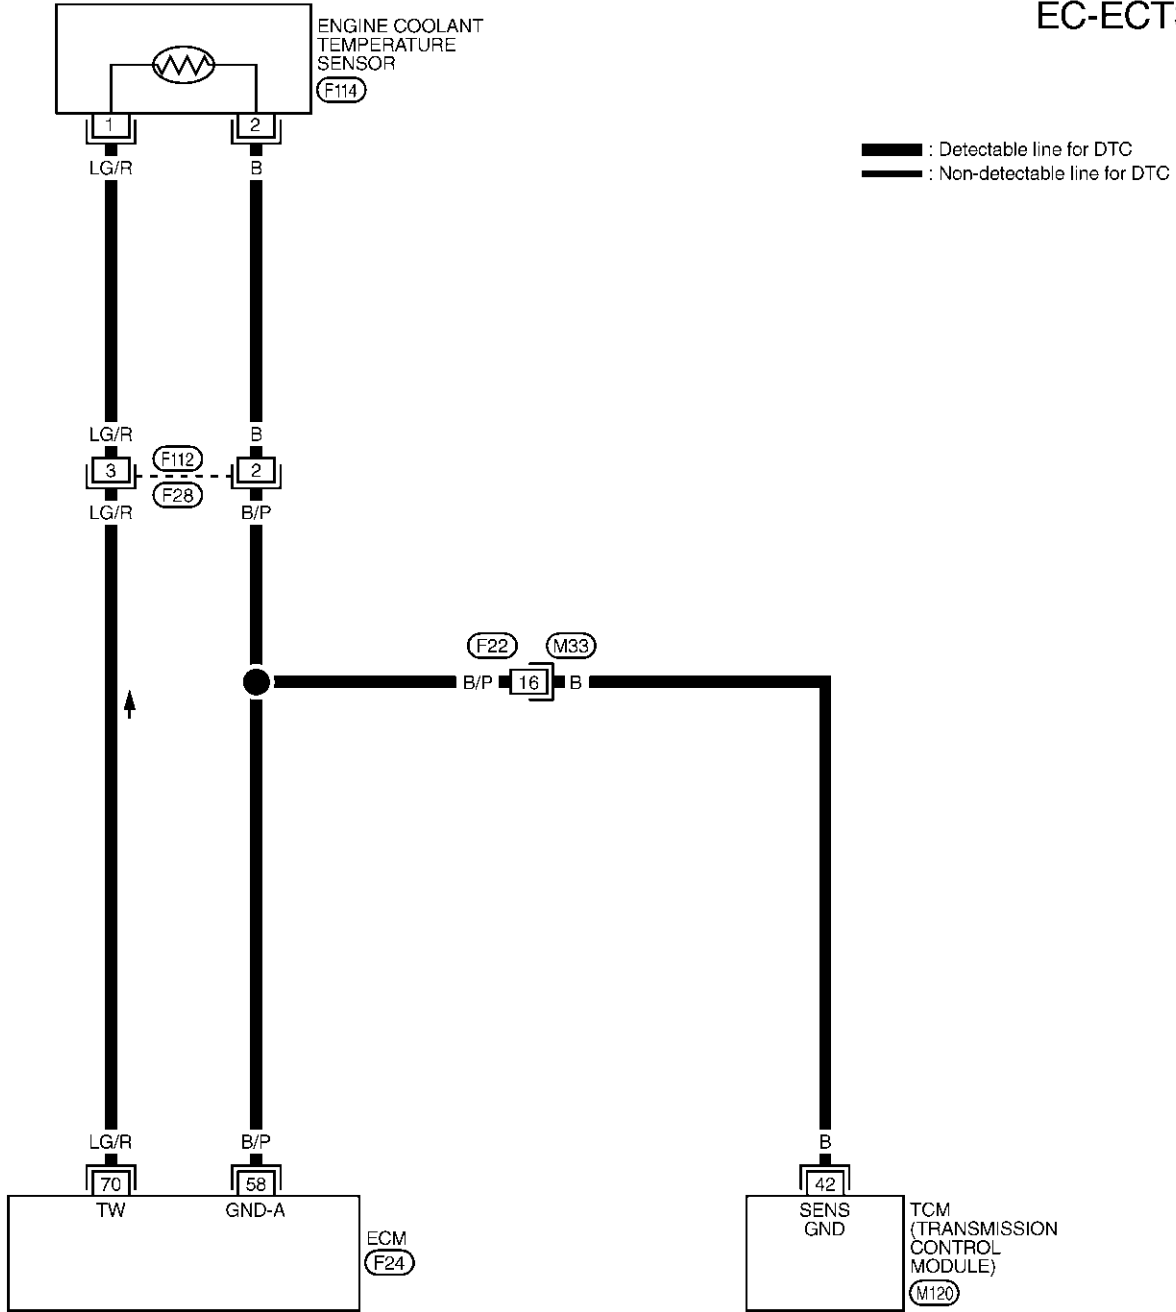



MEC945C

DTC P0117, P0118 ECT SENSOR

Diagnostic Procedure

Diagnostic Procedure

NBEC0861

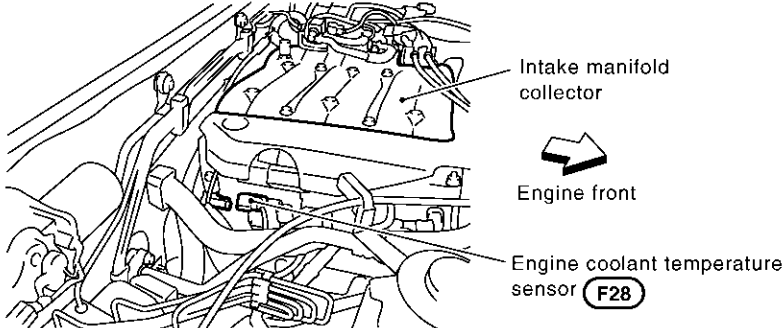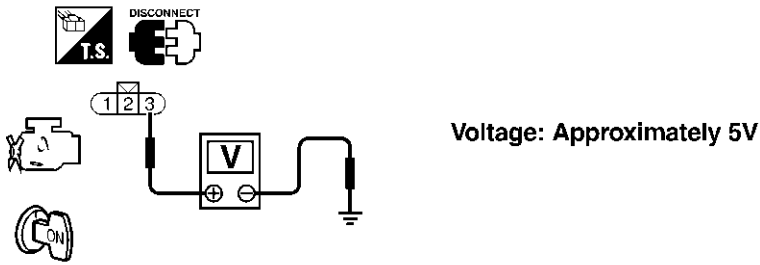1	CHECK ECT SENSOR POWER SUPPLY CIRCUIT	
<p>1. Turn ignition switch "OFF". 2. Disconnect engine coolant temperature (ECT) sensor sub-harness connectors F112, F28.</p>  <p style="text-align: right;">SEF370ZD</p> <p>3. Turn ignition switch "ON". 4. Check voltage between ECT sensor sub-harness connector F28 terminal 3 and ground with CONSULT-II or tester.</p>  <p style="text-align: right;">SEF371Z</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 3.
NG	▶	GO TO 2.



2	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors F112, F28 ● Harness for open or short between ECM and engine coolant temperature sensor sub-harness connector 		
▶		Repair harness or connectors.

3	CHECK ECTS GROUND CIRCUIT FOR OPEN AND CIRCUIT	
<p>1. Turn ignition switch "OFF". 2. Check harness continuity between ECT sensor sub-harness connector terminal 2 and engine ground. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 5.
NG	▶	GO TO 4.

DTC P0117, P0118 ECT SENSOR

Diagnostic Procedure (Cont'd)

4	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none"> ● Harness connectors F112, F28 ● Harness for open between ECM and engine coolant temperature sensor sub-harness connector ● Harness for open between TCM (Transmission Control Module) and engine coolant temperature sensor sub-harness connector 	
▶	Repair open circuit or short to power in harness or connectors.

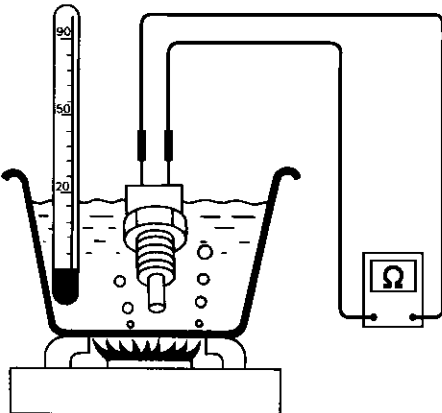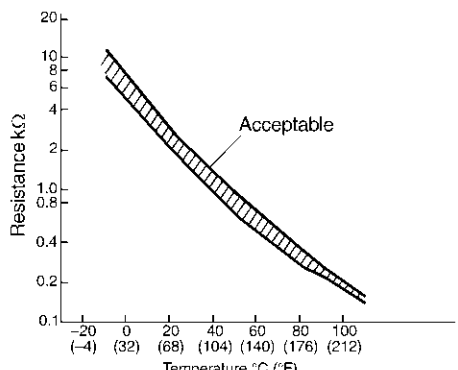5	CHECK ENGINE COOLANT TEMPERATURE SENSOR								
Check resistance between engine coolant temperature sensor sub-harness connector terminals 2 and 3 as shown in the figure.									
	<p><Reference data></p> <table border="1"> <thead> <tr> <th>Temperature °C (°F)</th> <th>Resistance kΩ</th> </tr> </thead> <tbody> <tr> <td>20 (68)</td> <td>2.1 - 2.9</td> </tr> <tr> <td>50 (122)</td> <td>0.68 - 1.00</td> </tr> <tr> <td>90 (194)</td> <td>0.236 - 0.260</td> </tr> </tbody> </table>	Temperature °C (°F)	Resistance kΩ	20 (68)	2.1 - 2.9	50 (122)	0.68 - 1.00	90 (194)	0.236 - 0.260
Temperature °C (°F)	Resistance kΩ								
20 (68)	2.1 - 2.9								
50 (122)	0.68 - 1.00								
90 (194)	0.236 - 0.260								
									
<p>OK or NG</p>									
OK	▶ GO TO 7.								
NG	▶ GO TO 6.								

6	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none"> ● Harness connectors F112, F114 ● Harness for open between ECT sensor and ECT sensor sub-harness connector 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

7	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	
▶	INSPECTION END

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P0121 TP SENSOR

Description

Description

NBEC0759

NOTE:


If DTC P0121, P0122 or P0123 is displayed with DTC P0510, first perform the trouble diagnosis for DTC P0510. Refer to EC-467.

COMPONENT DESCRIPTION

NBEC0759S01

The throttle position sensor responds to the accelerator pedal movement. This sensor is a kind of potentiometer which transforms the throttle position into output voltage, and emits the voltage signal to the ECM. In addition, the sensor detects the opening and closing speed of the throttle valve and feeds the voltage signal to the ECM.

Idle position of the throttle valve is determined by the ECM receiving the signal from the throttle position sensor. This sensor controls engine operation such as fuel cut. On the other hand, the "Wide open and closed throttle position switch", which is built into the throttle position sensor unit, is not used for engine control.

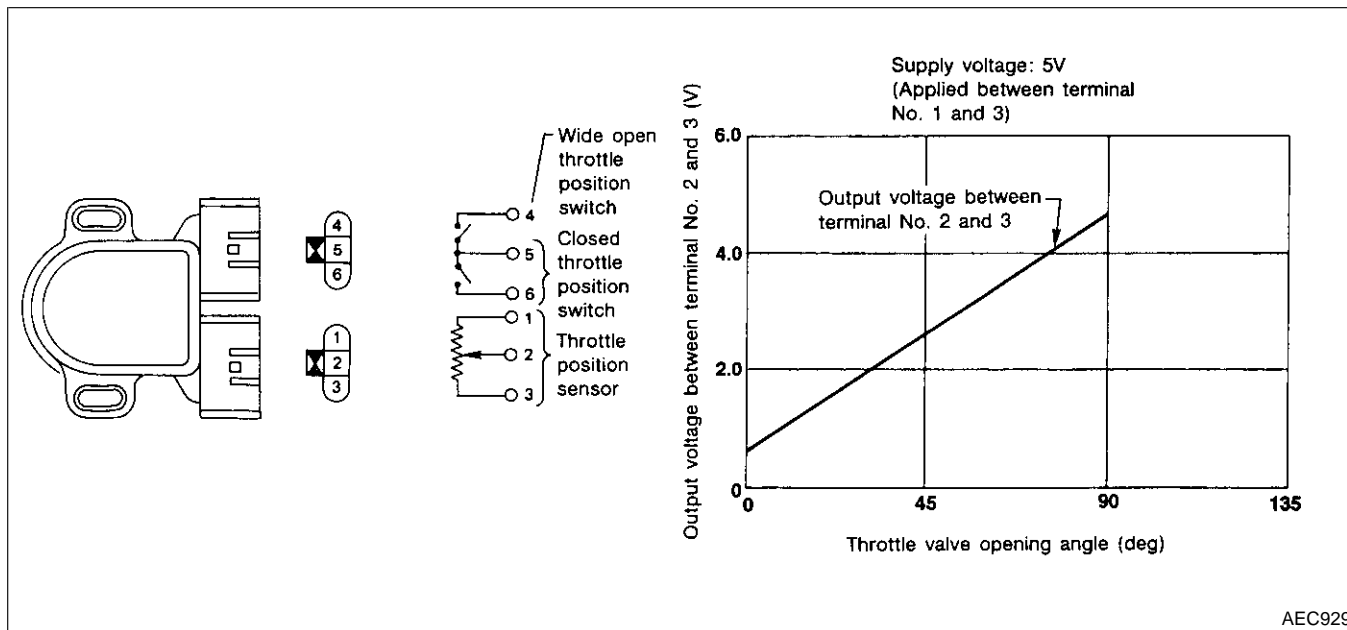

CONSULT-II Reference Value in Data Monitor Mode

NBEC0760

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
THRTL POS SEN	● Engine: After warming up, idle the engine	Throttle valve: fully closed	0.15 - 0.85V
	● Engine: After warming up ● Ignition switch: ON (Engine stopped)	Throttle valve: fully opened	3.5 - 4.7V
ABSOL TH-P/S	● Engine: After warming up, idle the engine	Throttle valve: fully closed	0.0%
	● Engine: After warming up ● Ignition switch: ON (Engine stopped)	Throttle valve: fully opened	Approx. 80%

DTC P0121 TP SENSOR

ECM Terminals and Reference Value

ECM Terminals and Reference Value

=NBEC0761

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
91	R	Throttle position sensor	[Engine is running] ● Warm-up condition ● Accelerator pedal fully released	0.15 - 0.85V
			[Ignition switch "ON"] ● Accelerator pedal fully depressed	3.5 - 4.7V
111	P/B	Sensors' power supply	[Ignition switch "ON"]	Approximately 5V
58	B/P	Sensors' ground	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0V

On Board Diagnosis Logic

NBEC0762

DTC No.	Trouble diagnosis name	DTC Detecting Condition		Possible Cause
P0121 0121	Throttle position sensor circuit range/performance problem	A)	A high voltage from the sensor is sent to ECM under light load driving conditions.	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Throttle position sensor ● Fuel injector ● Crankshaft position sensor (REF) ● Crankshaft position sensor (POS) ● Mass air flow sensor
		B)	A low voltage from the sensor is sent to ECM under heavy load driving conditions.	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Intake air leaks ● Throttle position sensor

DTC Confirmation Procedure

NBEC0764

NOTE:

- Perform "PROCEDURE FOR MALFUNCTION A" first. If there is no malfunction on "PROCEDURE FOR MALFUNCTION B", perform "PROCEDURE FOR MALFUNCTION C".
- If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

DTC P0121 TP SENSOR

DTC Confirmation Procedure (Cont'd)

3	DATA MONITOR	
	MONITOR	NO DTC
	ENG SPEED	XXX rpm

SEF058Y

PROCEDURE FOR MALFUNCTION A

NBEC0764S02

With CONSULT-II

NBEC0764S0201

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and let it idle for at least 10 seconds.
If idle speed is over 1,000 rpm, maintain the following conditions for at least 10 seconds to keep engine speed below 1,000 rpm.

Selector lever	Suitable position except "P" or "N"
Brake pedal	Depressed
Vehicle speed	0 km/h (0 MPH)

- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-212.

With GST

NBEC0764S0202

Follow the procedure "With CONSULT-II" above.

6	DATA MONITOR	
	MONITOR	NO DTC
	THRTL POS SEN	XXX V
	ABSOL TH-P/S	XXX %

SEF177Y

PROCEDURE FOR MALFUNCTION B

NBEC0764S03

CAUTION:

Always drive vehicle at a safe speed.


With CONSULT-II

NBEC0764S0301

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 10 seconds.
- 3) Turn ignition switch "ON".
- 4) Select "MANU TRIG" in "DATA MONITOR" mode with CONSULT-II.
- 5) Select "THRTL POS SEN" and "ABSOL TH-P/S" in "DATA MONITOR" mode with CONSULT-II.
- 6) Press RECORD on CONSULT-II SCREEN at the same time accelerator pedal is depressed.
- 7) Print out the recorded graph and check the following:
 - The voltage rise is linear in response to accelerator pedal depression.
 - The voltage when accelerator pedal is fully depressed is approximately 4V.
 If NG, go to "Diagnostic Procedure", EC-212.
 If OK, go to following step.

DTC P0121 TP SENSOR

DTC Confirmation Procedure (Cont'd)

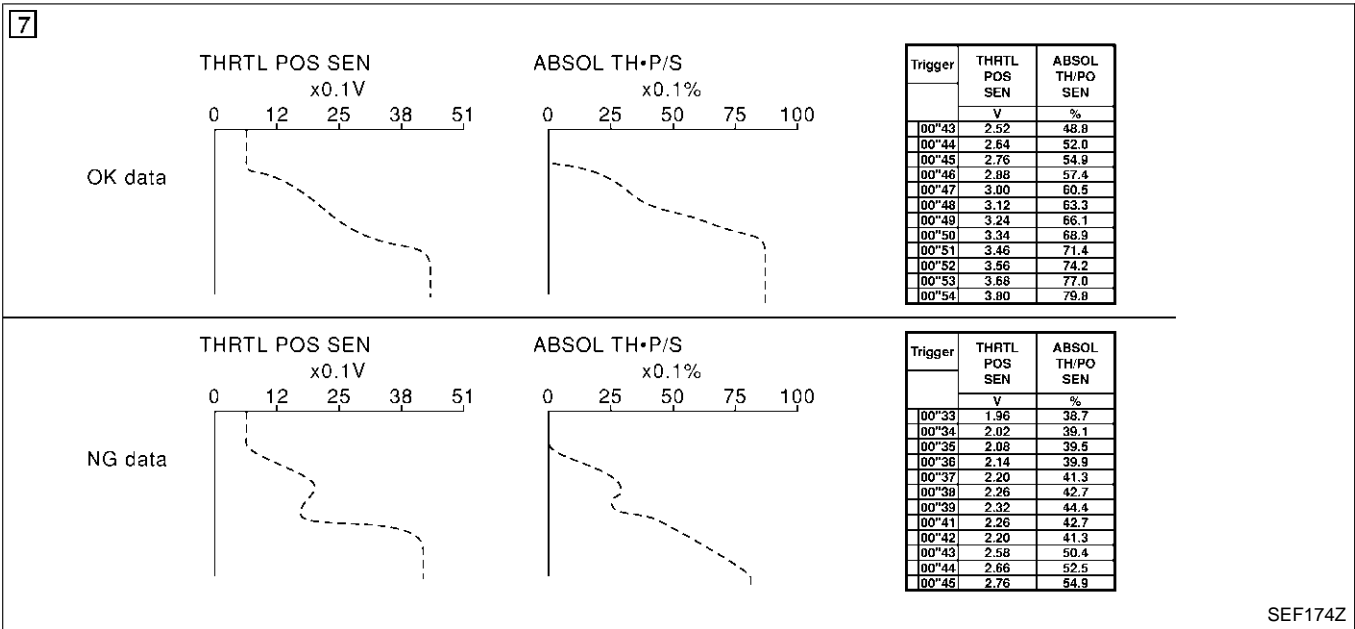

GI

MA

EM

LC

EC

FE

AT

8) Select "AUTO TRIG" in "DATA MONITOR" mode with CONSULT-II.

TF

9) Maintain the following conditions for at least 10 consecutive seconds.

PD

9

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
MAS A/F SE-B1	XXX V
COOLAN TEMP/S	XXX °C

SEF178Y

ENG SPEED	More than 2,000 rpm
MAS A/F SE-B1	More than 3.2V
COOLAN TEMP/S	More than 70°C (158°F)
Selector lever	Suitable position
Driving location	Driving vehicle uphill (Increased engine load) will help maintain the driving conditions required for this test.

AX

SU

BR

10) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-212.


ST

RS

BT

HA

SC

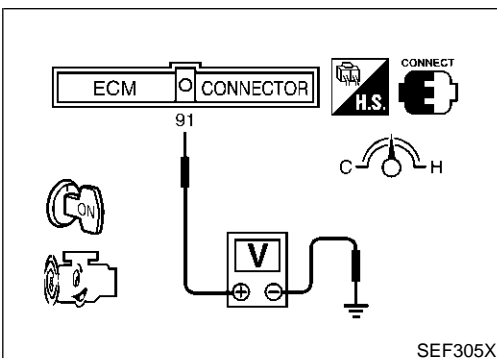

With GST

NBEC0764S0302

- 1) Start engine and warm it up to normal operating temperature.
- 2) Maintain the following conditions for at least 10 consecutive seconds.

Gear position	Suitable position
Engine speed	More than 2,000 rpm
Engine coolant temperature	More than 70°C (158°F)

IDX

DTC P0121 TP SENSOR

DTC Confirmation Procedure (Cont'd)

Voltage between ECM terminal 91 (Mass air flow sensor signal) and ground	More than 3.2V
--	----------------

- 3) Select "MODE 7" with GST.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-212.


DTC P0121 TP SENSOR

Wiring Diagram


Wiring Diagram

NBEC0765

EC-TPS-01

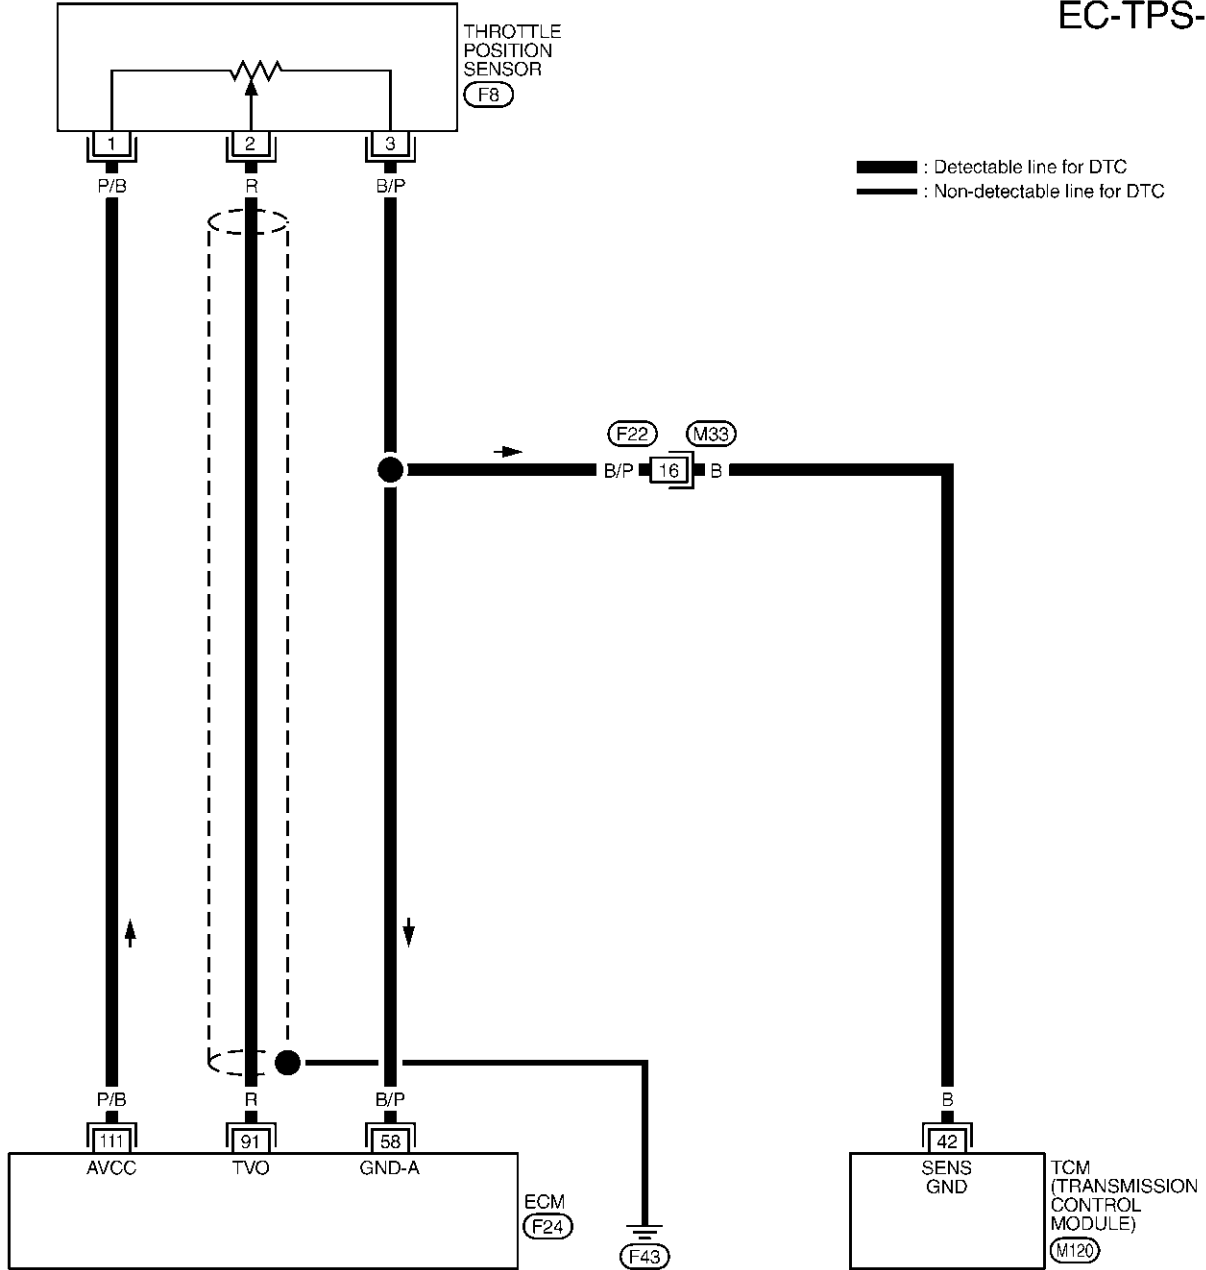

- GI
- MA
- EM
- LC
- EC**
- FE
- AT
- TF
- PD
- AX
- SU
- BR
- ST
- RS
- BT
- HA
- SC
- EL
- IDX

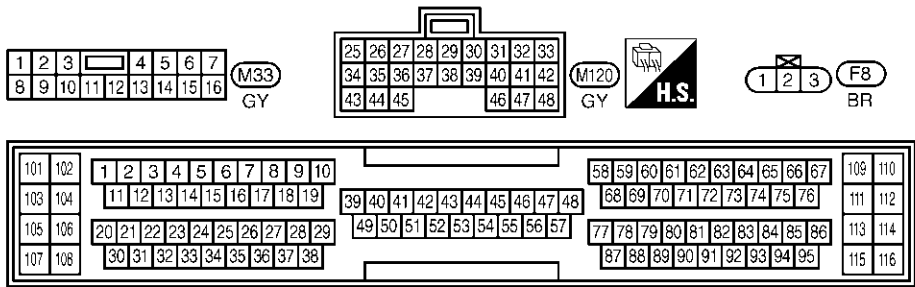

DTC P0121 TP SENSOR

Diagnostic Procedure


Diagnostic Procedure

NBEC0766

1	INSPECTION START							
Which malfunction A or B is duplicated?								
<table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th style="width: 50%;">MALFUNCTION</th> <th style="width: 50%;">Type</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">A</td> <td style="text-align: center;">A</td> </tr> <tr> <td style="text-align: center;">B</td> <td style="text-align: center;">B</td> </tr> </tbody> </table>			MALFUNCTION	Type	A	A	B	B
MALFUNCTION	Type							
A	A							
B	B							
MTBL1132								
Type A or B								
Type A	▶	GO TO 4.						
Type B	▶	GO TO 2.						



2	ADJUST THROTTLE POSITION SENSOR									
Check the following items. Refer to "Basic Inspection", EC-116.										
<table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th style="width: 40%;">Items</th> <th style="width: 60%;">Specifications</th> </tr> </thead> <tbody> <tr> <td>Ignition timing</td> <td>15° ± 5° BTDC</td> </tr> <tr> <td>Closed throttle position switch idle position adjustment</td> <td>Feeler gauge thickness and switch condition 0.05 mm (0.0020 in): ON 0.15 mm (0.0059 in): OFF</td> </tr> <tr> <td>Target idle speed</td> <td>750 ± 50 rpm (in "P" or "N" position)</td> </tr> </tbody> </table>			Items	Specifications	Ignition timing	15° ± 5° BTDC	Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.05 mm (0.0020 in): ON 0.15 mm (0.0059 in): OFF	Target idle speed	750 ± 50 rpm (in "P" or "N" position)
Items	Specifications									
Ignition timing	15° ± 5° BTDC									
Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.05 mm (0.0020 in): ON 0.15 mm (0.0059 in): OFF									
Target idle speed	750 ± 50 rpm (in "P" or "N" position)									
MTBL1810										
▶		GO TO 3.								

3	CHECK INTAKE SYSTEM.	
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Check the following for connection. <ul style="list-style-type: none"> ● Air duct ● Vacuum hoses ● Intake air passage between air duct to intake manifold collector 		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Reconnect the parts.

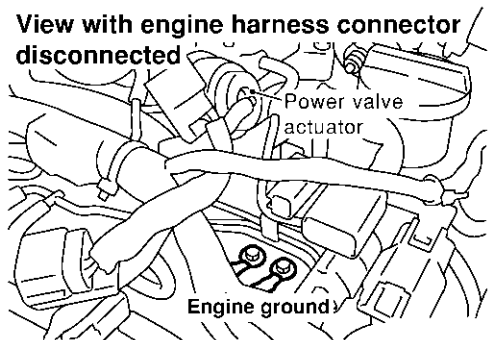4	RETIGHTEN GROUND SCREWS	
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Loosen and retighten engine ground screws. 		
<p>View with engine harness connector disconnected</p>  <p>The diagram shows a top-down view of the engine's ground area. Two screws are labeled 'Engine ground'. A component labeled 'Power valve actuator' is also shown. The engine harness connector is indicated as being disconnected.</p>		
SEF959Y		
▶		GO TO 5.

DTC P0121 TP SENSOR

Diagnostic Procedure (Cont'd)

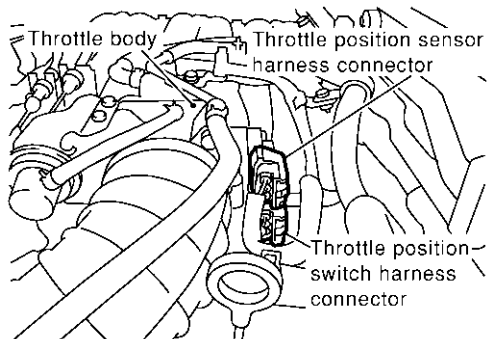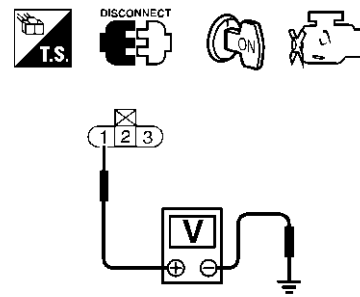5	CHECK THROTTLE POSITION SENSOR POWER SUPPLY CIRCUIT	
<p>1. Disconnect throttle position sensor harness connector.</p> <div style="text-align: center;">  </div>		
SEF944Y		
<p>2. Turn ignition switch "ON".</p> <p>3. Check voltage between throttle position sensor terminal 1 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  </div>		
<p>Voltage: Approximately 5V</p> <p>OK or NG</p>		
OK	▶	GO TO 6.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

GI
MA
EM
LC
EC

FE
AT
TF
PD
AX

6	CHECK THROTTLE POSITION SENSOR GROUND CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch "OFF".</p> <p>2. Check harness continuity between sensor terminal 3 and engine ground. Refer to Wiring Diagram. Continuity should exist.</p> <p>3. Also check harness for short to power.</p>		
<p>OK or NG</p>		
OK	▶	GO TO 8.
NG	▶	GO TO 7.

BR
ST
RS
BT

7	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors F22, M33 ● Harness for open or short between ECM and throttle position sensor ● Harness for open or short between TCM (Transmission Control Module) and throttle position sensor 		
<p>▶ Repair open circuit or short to power in harness or connectors.</p>		

HA
SC
EL
IDX

DTC P0121 TP SENSOR

Diagnostic Procedure (Cont'd)

8	CHECK THROTTLE POSITION SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
<p>1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 91 and throttle position sensor terminal 2. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK (With CONSULT-II)	▶	GO TO 9.
OK (Without CONSULT-II)	▶	GO TO 10.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

9	CHECK THROTTLE POSITION SENSOR											
<p>Ⓔ With CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature. 2. Stop engine (ignition switch OFF). 3. Turn ignition switch ON. 4. Select "DATA MONITOR" mode with CONSULT-II. 5. Check voltage of "THRTL POS SEN" under the following conditions. Voltage measurement must be made with throttle position sensor installed in vehicle.</p>												
<table border="1" style="margin: auto;"> <thead> <tr> <th colspan="2">DATA MONITOR</th> </tr> <tr> <th>MONITOR</th> <th>NO DTC</th> </tr> </thead> <tbody> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>COOLAN TEMP/S</td> <td>XXX °C</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXX V</td> </tr> </tbody> </table>			DATA MONITOR		MONITOR	NO DTC	ENG SPEED	XXX rpm	COOLAN TEMP/S	XXX °C	THRTL POS SEN	XXX V
DATA MONITOR												
MONITOR	NO DTC											
ENG SPEED	XXX rpm											
COOLAN TEMP/S	XXX °C											
THRTL POS SEN	XXX V											
<table border="1" style="margin: auto;"> <thead> <tr> <th>Throttle valve conditions</th> <th>THRTL POS SEN</th> </tr> </thead> <tbody> <tr> <td>Completely closed (a)</td> <td>0.15 - 0.85V</td> </tr> <tr> <td>Partially open</td> <td>Between (a) and (b)</td> </tr> <tr> <td>Completely open (b)</td> <td>3.5 - 4.7V</td> </tr> </tbody> </table>			Throttle valve conditions	THRTL POS SEN	Completely closed (a)	0.15 - 0.85V	Partially open	Between (a) and (b)	Completely open (b)	3.5 - 4.7V		
Throttle valve conditions	THRTL POS SEN											
Completely closed (a)	0.15 - 0.85V											
Partially open	Between (a) and (b)											
Completely open (b)	3.5 - 4.7V											
SEF062Y												
OK or NG												
OK	▶	GO TO 12.										
NG	▶	GO TO 11.										


10	CHECK THROTTLE POSITION SENSOR									
<p>ⓧ Without CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature. 2. Stop engine (ignition switch OFF). 3. Turn ignition switch ON. 4. Check voltage between ECM terminal 91 (Throttle position sensor signal) and ground. Voltage measurement must be made with throttle position sensor installed in vehicle.</p>										
<table border="1" style="margin: auto;"> <thead> <tr> <th>Throttle valve conditions</th> <th>Voltage</th> </tr> </thead> <tbody> <tr> <td>Completely closed (a)</td> <td>0.15 - 0.85V</td> </tr> <tr> <td>Partially open</td> <td>Between (a) and (b)</td> </tr> <tr> <td>Completely open (b)</td> <td>3.5 - 4.7V</td> </tr> </tbody> </table>			Throttle valve conditions	Voltage	Completely closed (a)	0.15 - 0.85V	Partially open	Between (a) and (b)	Completely open (b)	3.5 - 4.7V
Throttle valve conditions	Voltage									
Completely closed (a)	0.15 - 0.85V									
Partially open	Between (a) and (b)									
Completely open (b)	3.5 - 4.7V									
MTBL0231										
OK or NG										
OK	▶	GO TO 12.								
NG	▶	GO TO 11.								

DTC P0121 TP SENSOR

Diagnostic Procedure (Cont'd)

11	ADJUST CLOSED THROTTLE POSITION SWITCH									
Adjust closed throttle position switch. Refer to "Basic Inspection", EC-116.										
<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Items</th> <th style="width: 50%;">Specifications</th> </tr> </thead> <tbody> <tr> <td>Ignition timing</td> <td>15° ± 5° BTDC</td> </tr> <tr> <td>Closed throttle position switch idle position adjustment</td> <td>Feeler gauge thickness and switch condition 0.05 mm (0.0020 in): ON 0.15 mm (0.0059 in): OFF</td> </tr> <tr> <td>Target idle speed</td> <td>750 ± 50 rpm (in "P" or "N" position)</td> </tr> </tbody> </table>			Items	Specifications	Ignition timing	15° ± 5° BTDC	Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.05 mm (0.0020 in): ON 0.15 mm (0.0059 in): OFF	Target idle speed	750 ± 50 rpm (in "P" or "N" position)
Items	Specifications									
Ignition timing	15° ± 5° BTDC									
Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.05 mm (0.0020 in): ON 0.15 mm (0.0059 in): OFF									
Target idle speed	750 ± 50 rpm (in "P" or "N" position)									
MTBL1810										
OK or NG										
OK	▶	GO TO 12.								
NG	▶	Replace throttle position sensor. To adjust it, perform "Basic Inspection", EC-116.								

GI
MA
EM
LC
EC

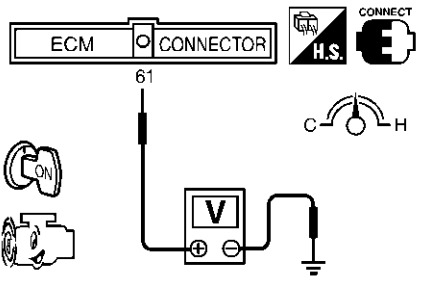12	CHECK MASS AIR FLOW SENSOR											
<ol style="list-style-type: none"> Reconnect harness connectors disconnected. Start engine and warm it up to normal operating temperature. Check voltage between ECM terminal 61 (Mass air flow sensor signal) and ground. 												
												
<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Condition</th> <th style="width: 50%;">Voltage V</th> </tr> </thead> <tbody> <tr> <td>Ignition switch "ON" (Engine stopped.)</td> <td>Approx. 1.0</td> </tr> <tr> <td>Idle (Engine is warmed-up to normal operating temperature.)</td> <td>1.2 - 1.8</td> </tr> <tr> <td>2,500 rpm (Engine is warmed-up to normal operating temperature.)</td> <td>1.6 - 2.2</td> </tr> <tr> <td>Idle to about 4,000 rpm*</td> <td>1.2 - 1.8 to Approx. 4.0</td> </tr> </tbody> </table>			Condition	Voltage V	Ignition switch "ON" (Engine stopped.)	Approx. 1.0	Idle (Engine is warmed-up to normal operating temperature.)	1.2 - 1.8	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.6 - 2.2	Idle to about 4,000 rpm*	1.2 - 1.8 to Approx. 4.0
Condition	Voltage V											
Ignition switch "ON" (Engine stopped.)	Approx. 1.0											
Idle (Engine is warmed-up to normal operating temperature.)	1.2 - 1.8											
2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.6 - 2.2											
Idle to about 4,000 rpm*	1.2 - 1.8 to Approx. 4.0											
* : Check for linear voltage rise in response to engine being increased to about 4,000 rpm.												
SEF298X												
<ol style="list-style-type: none"> If the voltage is out of specification, disconnect mass air flow sensor harness connector and connect it again. Then repeat above check. 												
OK or NG												
OK	▶	GO TO 13.										
NG	▶	Replace mass air flow sensor.										

FE
AT
TF
PD
AX
SU
BR
ST

13	CHECK CRANKSHAFT POSITION SENSOR (POS)	
<ol style="list-style-type: none"> Install all removed parts. Perform "DTC Confirmation Procedure" for DTC P0335 and P1336. Refer to EC-325, 587. 		
OK or NG		
OK	▶	GO TO 14.
NG	▶	Replace crankshaft position sensor (POS).


RS
BT
HA
SC

14	CHECK CRANKSHAFT POSITION SENSOR (REF)	
Perform "DTC Confirmation Procedure" for DTC P1335. Refer to EC-581.		
OK or NG		
OK	▶	GO TO 15.
NG	▶	Replace crankshaft position sensor (REF).

EL
IDX

DTC P0121 TP SENSOR

Diagnostic Procedure (Cont'd)

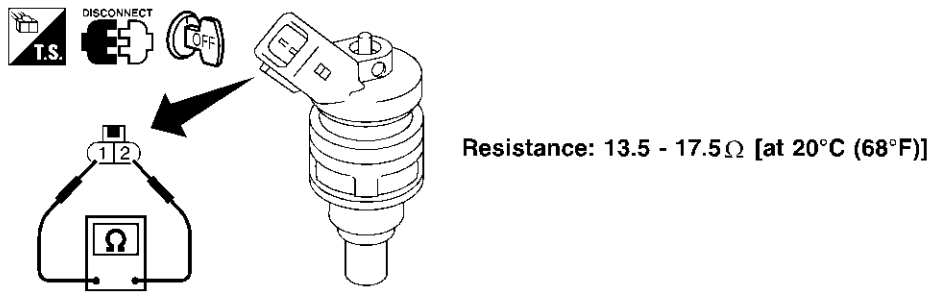15	CHECK FUEL INJECTOR
<p>1. Disconnect injector harness connector. 2. Check resistance between terminals as shown in the figure.</p>	
 <p>Resistance: 13.5 - 17.5 Ω [at 20°C (68°F)]</p> <p>OK or NG</p>	
OK	▶ GO TO 16.
NG	▶ Replace fuel injector.

SEF964XB

16	CHECK INTERMITTENT INCIDENT
<p>Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.</p>	
▶	INSPECTION END

Description

NBEC0862

NOTE:


If DTC P0121, P0122 or P0123 is displayed with DTC P0510, first perform the trouble diagnosis for DTC P0510. Refer to EC-467.

COMPONENT DESCRIPTION

NBEC0862S01

The throttle position sensor responds to the accelerator pedal movement. This sensor is a kind of potentiometer which transforms the throttle position into output voltage, and emits the voltage signal to the ECM. In addition, the sensor detects the opening and closing speed of the throttle valve and feeds the voltage signal to the ECM.

Idle position of the throttle valve is determined by the ECM receiving the signal from the throttle position sensor. This sensor controls engine operation such as fuel cut. On the other hand, the "Wide open and closed throttle position switch", which is built into the throttle position sensor unit, is not used for engine control.

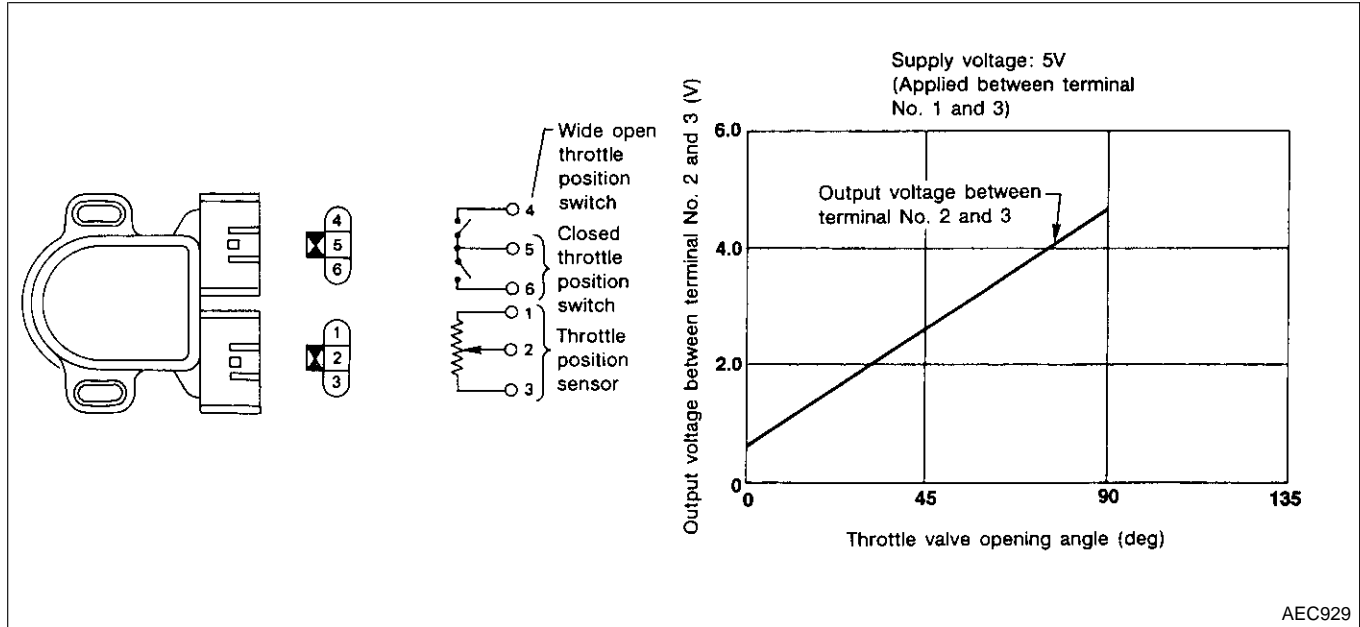

CONSULT-II Reference Value in Data Monitor Mode

NBEC0863

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
THRTL POS SEN	● Engine: After warming up, idle the engine	Throttle valve: fully closed	0.15 - 0.85V
	● Engine: After warming up ● Ignition switch: ON (Engine stopped)	Throttle valve: fully opened	3.5 - 4.7V
ABSOL TH-P/S	● Engine: After warming up, idle the engine	Throttle valve: fully closed	0.0%
	● Engine: After warming up ● Ignition switch: ON (Engine stopped)	Throttle valve: fully opened	Approx. 80%

DTC P0122, P0123 TP SENSOR

ECM Terminals and Reference Value

ECM Terminals and Reference Value

=NBEC0864

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
91	R	Throttle position sensor	[Engine is running] ● Warm-up condition ● Accelerator pedal fully released	0.15 - 0.85V
			[Ignition switch "ON"] ● Accelerator pedal fully depressed	3.5 - 4.7V
111	P/B	Sensors' power supply	[Ignition switch "ON"]	Approximately 5V
58	B/P	Sensors' ground	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0V

On Board Diagnosis Logic

NBEC0865

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0122 0122	Throttle position sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Throttle position sensor
P0123 0123	Throttle position sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	

FAIL-SAFE MODE

NBEC0865S01

When the malfunction A is detected, the ECM enters fail-safe mode and the MIL lights up.

Detected items	Engine operating condition in fail-safe mode	
Throttle position sensor circuit	Throttle position will be determined based on the injected fuel amount and the engine speed. Therefore, acceleration will be poor.	
	Condition	Driving condition
	When engine is idling	Normal
	When accelerating	Poor acceleration

DTC Confirmation Procedure

NBEC0866

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

CAUTION:

Always drive vehicle at a safe speed.

TESTING CONDITION:

- Before performing the following procedure, confirm that battery voltage is more than 10V at idle.
- This test may be conducted with the drive wheels lifted in

DTC P0122, P0123 TP SENSOR

DTC Confirmation Procedure (Cont'd)

the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

GI

MA

EM

LC

2	DATA MONITOR	
	MONITOR	NO DTC
	ENG SPEED	XXX rpm
	VHCL SPEED SE	XXX km/h
	P/N POSI SW	OFF

SEF065Y

WITH CONSULT-II

NBEC0866S01

- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT-II.
- 2) Start engine and maintain the following conditions for at least 5 consecutive seconds.

Vehicle speed	More than 5 km/h (3 MPH)
Selector lever	Suitable position except "P" or "N" position

- 3) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-221.

WITH GST

NBEC0866S02

Follow the procedure "With CONSULT-II" above.

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX



DTC P0122, P0123 TP SENSOR

Wiring Diagram

Wiring Diagram

NBEC0867


EC-TPS-01

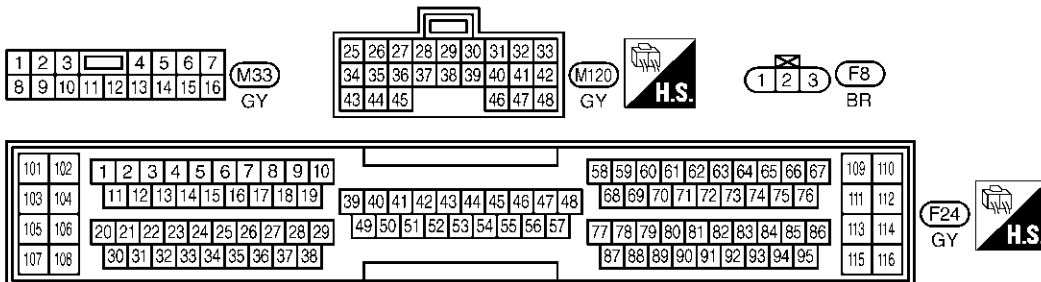
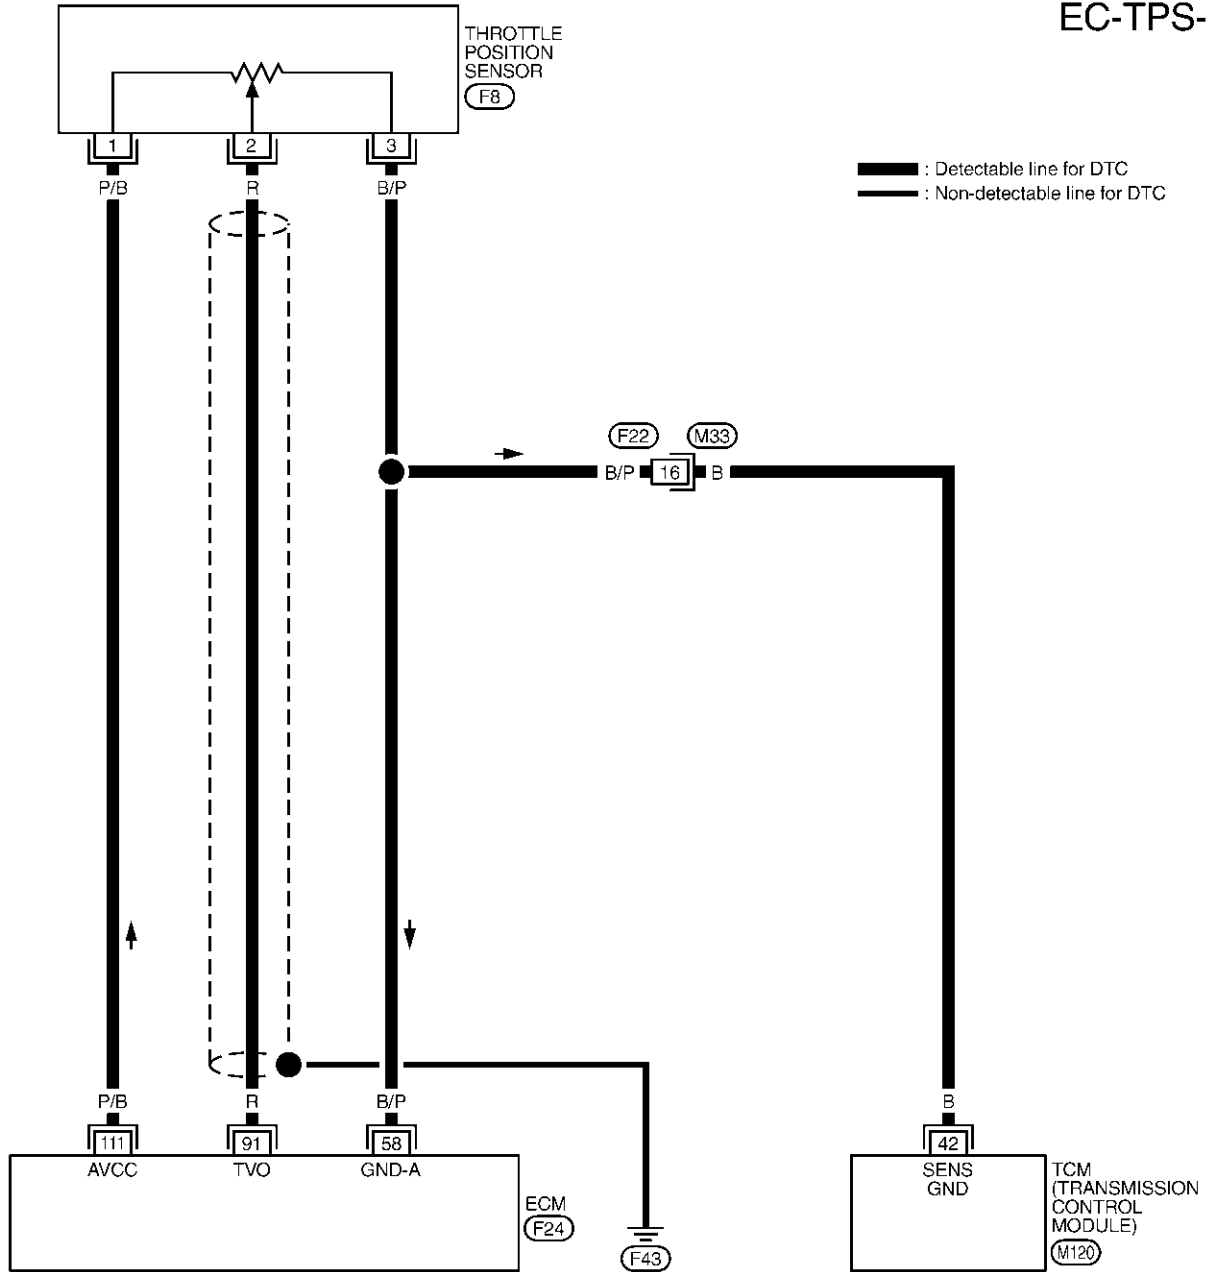


MEC946C

Diagnostic Procedure

NBEC0868

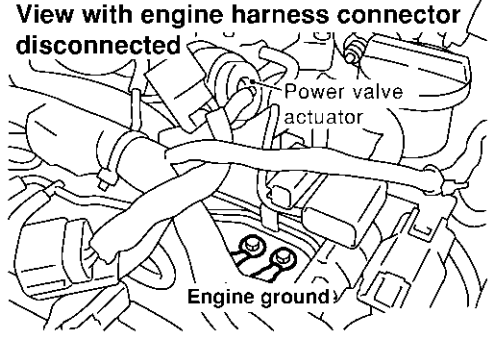1	RETIGHTEN GROUND SCREWS	<p>1. Turn ignition switch "OFF". 2. Loosen and retighten engine ground screws.</p> <div style="text-align: center;"> <p>View with engine harness connector disconnected</p>  <p>Power valve actuator</p> <p>Engine ground</p> </div> <p style="text-align: right;">SEF959Y</p>	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p>EC</p> <p>FE</p>
▶ GO TO 2.			

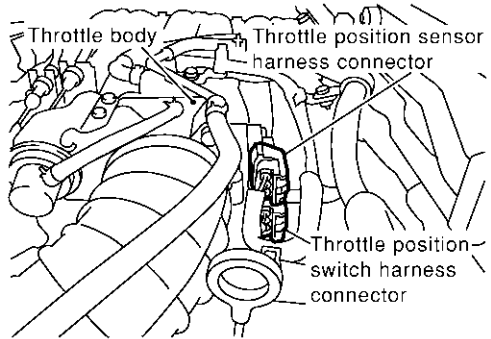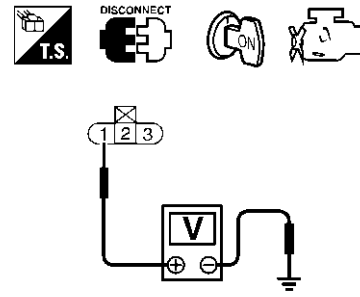2	CHECK THROTTLE POSITION SENSOR POWER SUPPLY CIRCUIT	<p>1. Disconnect throttle position sensor harness connector.</p> <div style="text-align: center;">  <p>Throttle body</p> <p>Throttle position sensor harness connector</p> <p>Throttle position switch harness connector</p> </div> <p style="text-align: right;">SEF944Y</p> <p>2. Turn ignition switch "ON". 3. Check voltage between throttle position sensor terminal 1 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p style="text-align: center;">Voltage: Approximately 5V</p> <p style="text-align: center;">OK or NG</p> </div> <p style="text-align: right;">SEC201D</p>	<p>TF</p> <p>PD</p> <p>AX</p> <p>SU</p> <p>BR</p> <p>ST</p> <p>RS</p> <p>BT</p> <p>HA</p> <p>SC</p>
▶ GO TO 3.			
▶ Repair open circuit or short to ground or short to power in harness or connectors.			

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0122, P0123 TP SENSOR

Diagnostic Procedure (Cont'd)

3	CHECK THROTTLE POSITION SENSOR GROUND CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch "OFF".</p> <p>2. Check harness continuity between sensor terminal 3 and engine ground. Refer to Wiring Diagram. Continuity should exist.</p> <p>3. Also check harness for short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 5.
NG	▶	GO TO 4.

4	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors F22, M33 ● Harness for open or short between ECM and throttle position sensor ● Harness for open or short between TCM (Transmission Control Module) and throttle position sensor 		
▶		Repair open circuit or short to power in harness or connectors.

5	CHECK THROTTLE POSITION SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
<p>1. Disconnect ECM harness connector.</p> <p>2. Check harness continuity between ECM terminal 91 and throttle position sensor terminal 2. Refer to Wiring Diagram. Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK (With CONSULT-II)	▶	GO TO 6.
OK (Without CONSULT-II)	▶	GO TO 7.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

6	CHECK THROTTLE POSITION SENSOR											
<p>E With CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature.</p> <p>2. Stop engine (ignition switch OFF).</p> <p>3. Turn ignition switch ON.</p> <p>4. Select "DATA MONITOR" mode with CONSULT-II.</p> <p>5. Check voltage of "THRTL POS SEN" under the following conditions. Voltage measurement must be made with throttle position sensor installed in vehicle.</p>												
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2" style="text-align: center;">DATA MONITOR</th> </tr> <tr> <th style="text-align: center;">MONITOR</th> <th style="text-align: center;">NO DTC</th> </tr> </thead> <tbody> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>COOLAN TEMP/S</td> <td>XXX °C</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXX V</td> </tr> </tbody> </table>			DATA MONITOR		MONITOR	NO DTC	ENG SPEED	XXX rpm	COOLAN TEMP/S	XXX °C	THRTL POS SEN	XXX V
DATA MONITOR												
MONITOR	NO DTC											
ENG SPEED	XXX rpm											
COOLAN TEMP/S	XXX °C											
THRTL POS SEN	XXX V											
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Throttle valve conditions</th> <th style="text-align: center;">THRTL POS SEN</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Completely closed (a)</td> <td style="text-align: center;">0.15 - 0.85V</td> </tr> <tr> <td style="text-align: center;">Partially open</td> <td style="text-align: center;">Between (a) and (b)</td> </tr> <tr> <td style="text-align: center;">Completely open (b)</td> <td style="text-align: center;">3.5 - 4.7V</td> </tr> </tbody> </table>			Throttle valve conditions	THRTL POS SEN	Completely closed (a)	0.15 - 0.85V	Partially open	Between (a) and (b)	Completely open (b)	3.5 - 4.7V		
Throttle valve conditions	THRTL POS SEN											
Completely closed (a)	0.15 - 0.85V											
Partially open	Between (a) and (b)											
Completely open (b)	3.5 - 4.7V											
SEF062Y												
OK or NG												
OK	▶	GO TO 9.										
NG	▶	GO TO 8.										

DTC P0122, P0123 TP SENSOR

Diagnostic Procedure (Cont'd)

7	CHECK THROTTLE POSITION SENSOR									
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Stop engine (ignition switch OFF). 3. Turn ignition switch ON. 4. Check voltage between ECM terminal 91 (Throttle position sensor signal) and ground. Voltage measurement must be made with throttle position sensor installed in vehicle. 										
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 60%;">Throttle valve conditions</th> <th style="width: 40%;">Voltage</th> </tr> </thead> <tbody> <tr> <td>Completely closed (a)</td> <td style="text-align: center;">0.15 - 0.85V</td> </tr> <tr> <td>Partially open</td> <td style="text-align: center;">Between (a) and (b)</td> </tr> <tr> <td>Completely open (b)</td> <td style="text-align: center;">3.5 - 4.7V</td> </tr> </tbody> </table>			Throttle valve conditions	Voltage	Completely closed (a)	0.15 - 0.85V	Partially open	Between (a) and (b)	Completely open (b)	3.5 - 4.7V
Throttle valve conditions	Voltage									
Completely closed (a)	0.15 - 0.85V									
Partially open	Between (a) and (b)									
Completely open (b)	3.5 - 4.7V									
MTBL0231										
OK or NG										
OK	▶	GO TO 9.								
NG	▶	GO TO 8.								

GI
MA
EM
LC
EC

8	ADJUST CLOSED THROTTLE POSITION SWITCH									
Adjust closed throttle position switch. Refer to "Basic Inspection", EC-116.										
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 40%;">Items</th> <th style="width: 60%;">Specifications</th> </tr> </thead> <tbody> <tr> <td>Ignition timing</td> <td>15° ± 5° BTDC</td> </tr> <tr> <td>Closed throttle position switch idle position adjustment</td> <td>Feeler gauge thickness and switch condition 0.05 mm (0.0020 in): ON 0.15 mm (0.0059 in): OFF</td> </tr> <tr> <td>Target idle speed</td> <td>750 ± 50 rpm (in "P" or "N" position)</td> </tr> </tbody> </table>			Items	Specifications	Ignition timing	15° ± 5° BTDC	Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.05 mm (0.0020 in): ON 0.15 mm (0.0059 in): OFF	Target idle speed	750 ± 50 rpm (in "P" or "N" position)
Items	Specifications									
Ignition timing	15° ± 5° BTDC									
Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.05 mm (0.0020 in): ON 0.15 mm (0.0059 in): OFF									
Target idle speed	750 ± 50 rpm (in "P" or "N" position)									
MTBL1810										
OK or NG										
OK	▶	GO TO 9.								
NG	▶	Replace throttle position sensor. To adjust it, perform "Basic Inspection", EC-116.								

AT
TF
PD
AX
SU
BR

9	CHECK MASS AIR FLOW SENSOR											
<ol style="list-style-type: none"> 1. Reconnect harness connectors disconnected. 2. Start engine and warm it up to normal operating temperature. 3. Check voltage between ECM terminal 61 (Mass air flow sensor signal) and ground. 												
<div style="display: flex; align-items: flex-start;"> <div style="flex: 1;"> </div> <div style="flex: 2;"> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 60%;">Condition</th> <th style="width: 40%;">Voltage V</th> </tr> </thead> <tbody> <tr> <td>Ignition switch "ON" (Engine stopped.)</td> <td style="text-align: center;">Approx. 1.0</td> </tr> <tr> <td>Idle (Engine is warmed-up to normal operating temperature.)</td> <td style="text-align: center;">1.2 - 1.8</td> </tr> <tr> <td>2,500 rpm (Engine is warmed-up to normal operating temperature.)</td> <td style="text-align: center;">1.6 - 2.2</td> </tr> <tr> <td>Idle to about 4,000 rpm*</td> <td style="text-align: center;">1.2 - 1.8 to Approx. 4.0</td> </tr> </tbody> </table> <p style="font-size: small; margin-top: 5px;">*: Check for linear voltage rise in response to engine being increased to about 4,000 rpm.</p> </div> </div>			Condition	Voltage V	Ignition switch "ON" (Engine stopped.)	Approx. 1.0	Idle (Engine is warmed-up to normal operating temperature.)	1.2 - 1.8	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.6 - 2.2	Idle to about 4,000 rpm*	1.2 - 1.8 to Approx. 4.0
Condition	Voltage V											
Ignition switch "ON" (Engine stopped.)	Approx. 1.0											
Idle (Engine is warmed-up to normal operating temperature.)	1.2 - 1.8											
2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.6 - 2.2											
Idle to about 4,000 rpm*	1.2 - 1.8 to Approx. 4.0											
SEF298X												
<ol style="list-style-type: none"> 4. If the voltage is out of specification, disconnect mass air flow sensor harness connector and connect it again. Then repeat above check. 												
OK or NG												
OK	▶	GO TO 10.										
NG	▶	Replace mass air flow sensor.										


ST
RS
BT
HA
SC
EL
IDX

DTC P0122, P0123 TP SENSOR

Diagnostic Procedure (Cont'd)

10	CHECK CRANKSHAFT POSITION SENSOR (POS)
1. Install all removed parts. 2. Perform "DTC Confirmation Procedure" for DTC P0335 and P1336. Refer to EC-325, 587.	
OK or NG	
OK	▶ GO TO 11.
NG	▶ Replace crankshaft position sensor (POS).

11	CHECK CRANKSHAFT POSITION SENSOR (REF)
Perform "DTC Confirmation Procedure" for DTC P1335. Refer to EC-581.	
OK or NG	
OK	▶ GO TO 12.
NG	▶ Replace crankshaft position sensor (REF).

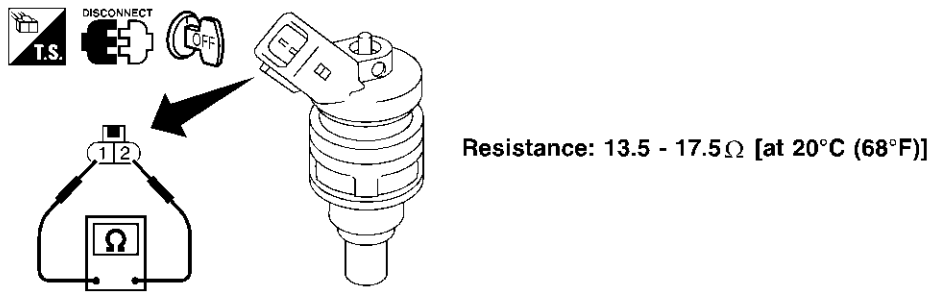12	CHECK FUEL INJECTOR
1. Disconnect injector harness connector. 2. Check resistance between terminals as shown in the figure.	
	
SEF964XB	
OK or NG	
OK	▶ GO TO 13.
NG	▶ Replace fuel injector.

13	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	
▶ INSPECTION END	

Description

NBEC0869

NOTE:

If DTC P0125 is displayed with P0117, P0118, first perform the trouble diagnosis for DTC P0117, P0118. Refer to EC-201.

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS


BT

HA

SC

EL


IDX

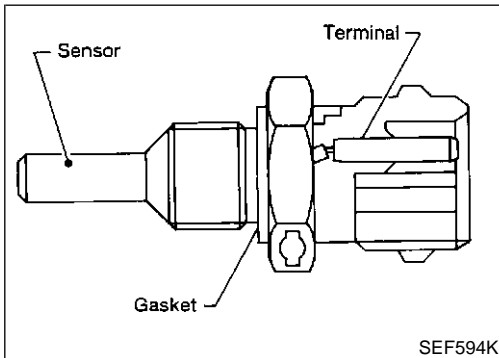

COMPONENT DESCRIPTION

NBEC0869S01

The engine coolant temperature sensor is used to detect the engine coolant temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the engine coolant temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

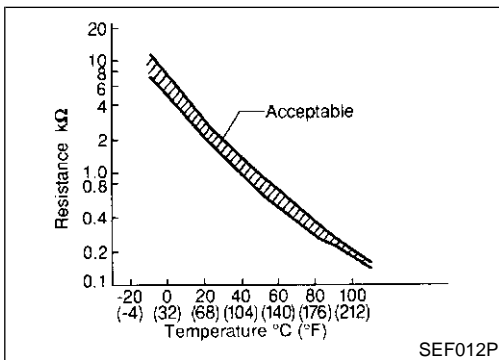

<Reference data>

Engine coolant temperature °C (°F)	Voltage* V	Resistance kΩ
-10 (14)	4.4	9.2
20 (68)	3.5	2.1 - 2.9
50 (122)	2.2	0.68 - 1.00
90 (194)	0.9	0.236 - 0.260

*: These data are reference values and are measured between ECM terminal 70 (Engine coolant temperature sensor) and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

On Board Diagnosis Logic

NBEC0870

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0125 0125	Insufficient engine coolant temperature for closed loop fuel control	<ul style="list-style-type: none"> • Voltage sent to ECM from the sensor is not practical, even when some time has passed after starting the engine. • Engine coolant temperature is insufficient for closed loop fuel control. 	<ul style="list-style-type: none"> • Harness or connectors (The sensor circuit is open or shorted.) • Engine coolant temperature sensor • Thermostat

DTC P0125 ECT SENSOR

DTC Confirmation Procedure

4

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
COOLAN TEMP/S	XXX °C

SEF174Y

DTC Confirmation Procedure

NBEC0871

CAUTION:

Be careful not to overheat engine.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

NBEC0871S01

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Check that "COOLAN TEMP/S" is above 10°C (50°F).
If it is above 10°C (50°F), the test result will be OK.
If it is below 10°C (50°F), go to following step.
- 4) Start engine and run it for 65 minutes at idle speed.
If "COOLAN TEMP/S" increases to more than 10°C (50°F) within 65 minutes, stop engine because the test result will be OK.
- 5) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-226.

WITH GST

NBEC0871S02

Follow the procedure "WITH CONSULT-II" above.


Diagnostic Procedure

NBEC0872

1


CHECK ENGINE COOLANT TEMPERATURE SENSOR

Check resistance between engine coolant temperature sensor sub-harness connector terminals 2 and 3 as shown in the figure.

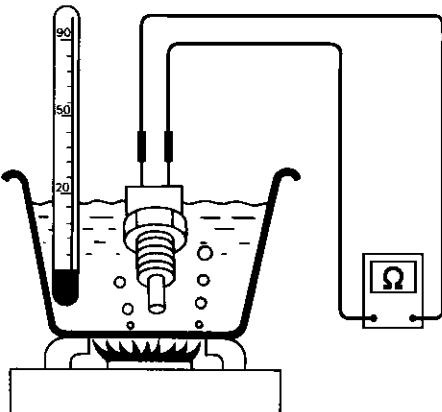

<Reference data>

Temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
50 (122)	0.68 - 1.00
90 (194)	0.236 - 0.260

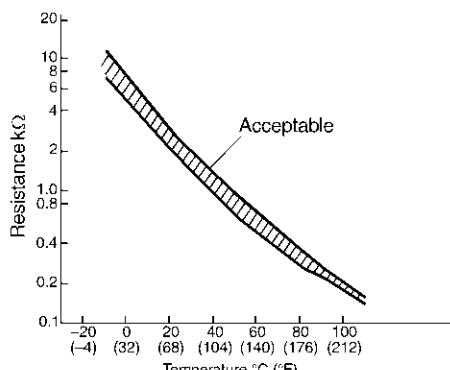

OK or NG

OK	▶	GO TO 3.
NG	▶	GO TO 2.

SEF304X

DTC P0125 ECT SENSOR

Diagnostic Procedure (Cont'd)

2	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none">● Harness connectors F112, F114● Harness for open between ECT sensor and ECT sensor sub-harness connector	
	▶ Repair open circuit or short to ground or short to power in harness or connectors.

GI

MA

3	CHECK THERMOSTAT OPERATION
When the engine is cold [lower than 70°C (158°F)] condition, grasp lower radiator hose and confirm the engine coolant does not flow.	
OK or NG	
OK	▶ GO TO 4.
NG	▶ Repair or replace thermostat. Refer to LC-18, "Thermostat".

EM

LC

EC

4	CHECK INTERMITTENT INCIDENT
<ul style="list-style-type: none">● Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.● Refer to wiring diagram, EC-203.	
	▶ INSPECTION END

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA



SC

EL

IDX

DTC P0127 IAT SENSOR

Component Description

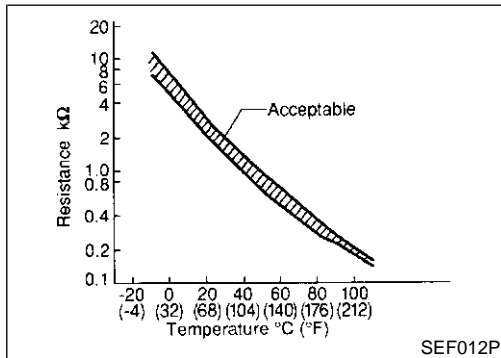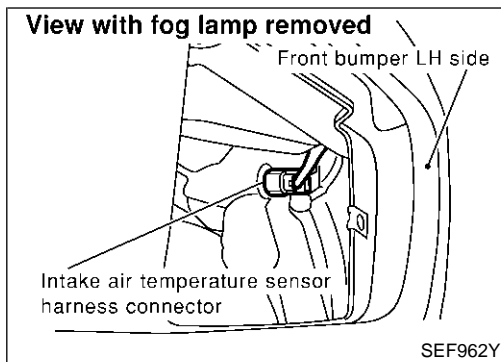

Component Description

NBEC0767

The intake air temperature sensor is mounted to the air duct housing. The sensor detects intake air temperature and transmits a signal to the ECM.

The temperature sensing unit uses a thermistor which is sensitive to the change in temperature. Electrical resistance of the thermistor decreases in response to the temperature rise.

<Reference data>

Intake air temperature °C (°F)	Voltage* V	Resistance kΩ
20 (68)	3.5	2.1 - 2.9
80 (176)	1.23	0.27 - 0.38

*: These data are reference values and are measured between ECM terminal 64 (Intake air temperature sensor) and body ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

On Board Diagnosis Logic

NBEC0768

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0127 0127	Intake air temperature too high	Rationally incorrect voltage from the sensor is sent to ECM, compared with the voltage signal from engine coolant temperature sensor.	<ul style="list-style-type: none"> • Harness or connectors (The sensor circuit is open or shorted.) • Intake air temperature sensor

DTC Confirmation Procedure

NBEC0770

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

CAUTION:

Always drive vehicle at a safe speed.


TESTING CONDITION:

This test may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

⑤ WITH CONSULT-II

NBEC0770S03

- 1) Wait until engine coolant temperature is less than 90°C (194°F).
 - a) Turn ignition switch "ON".
 - b) Select "DATA MONITOR" mode with CONSULT-II.
 - c) Check the engine coolant temperature.
 - d) If the engine coolant temperature is not less than 90°C (194°F), turn ignition switch "OFF" and cool down engine.
 - Perform the following steps before engine coolant temperature is above 90°C (194°F).
- 2) Turn ignition switch "ON".

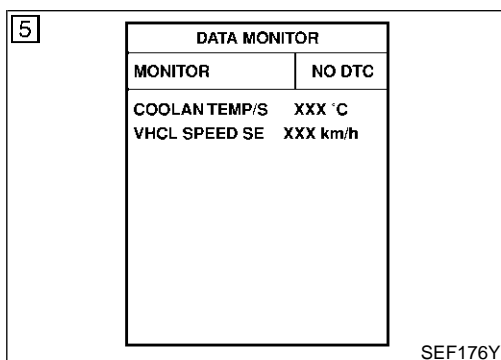

DTC P0127 IAT SENSOR

DTC Confirmation Procedure (Cont'd)

- 3) Select "DATA MONITOR" mode with CONSULT-II.
- 4) Start engine.
- 5) Hold vehicle speed at more than 70 km/h (43 MPH) for 100 consecutive seconds.
- 6) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-229.



 **WITH GST**

Follow the procedure "With CONSULT-II" above.

NBEC0770S04

Diagnostic Procedure

NBEC0772

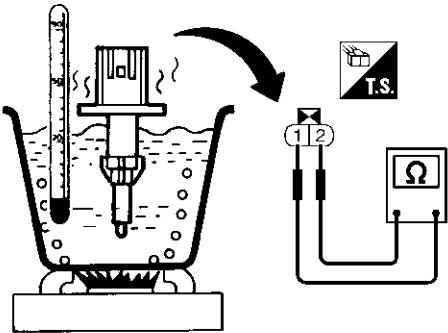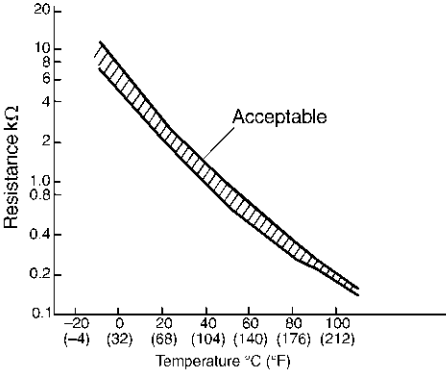
1	CHECK INTAKE AIR TEMPERATURE SENSOR						
<p>Check resistance between intake air temperature sensor terminals 1 and 2 as shown in the figure.</p> <div style="display: flex; justify-content: space-between; align-items: flex-start;"> <div style="width: 45%;">  </div> <div style="width: 45%;"> <p><Reference data></p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Temperature °C (°F)</th> <th>Resistance kΩ</th> </tr> </thead> <tbody> <tr> <td>20 (68)</td> <td>2.1 - 2.9</td> </tr> <tr> <td>80 (176)</td> <td>0.27 - 0.38</td> </tr> </tbody> </table>  </div> </div> <p style="text-align: right;">SEF302X</p>		Temperature °C (°F)	Resistance kΩ	20 (68)	2.1 - 2.9	80 (176)	0.27 - 0.38
Temperature °C (°F)	Resistance kΩ						
20 (68)	2.1 - 2.9						
80 (176)	0.27 - 0.38						
OK or NG							
OK	▶ GO TO 2.						
NG	▶ Replace intake air temperature sensor.						

2	CHECK INTERMITTENT INCIDENT
<ul style="list-style-type: none"> ● Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152. ● Refer to wiring diagram, EC-203. 	
▶	INSPECTION END

GI
 MA
 EM
 LC
 EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P0132, P0152 HO2S1


Component Description

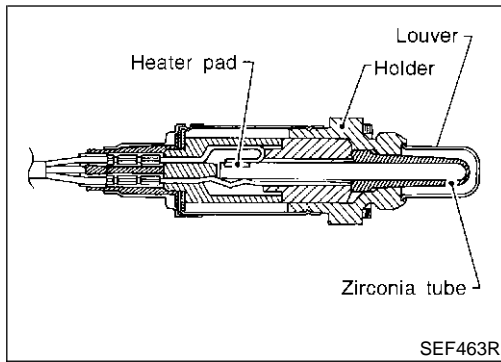

Component Description

NBEC0873

The heated oxygen sensor 1 is placed into the exhaust manifold. It detects the amount of oxygen in the exhaust gas compared to the outside air. The heated oxygen sensor 1 has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The heated oxygen sensor 1 signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

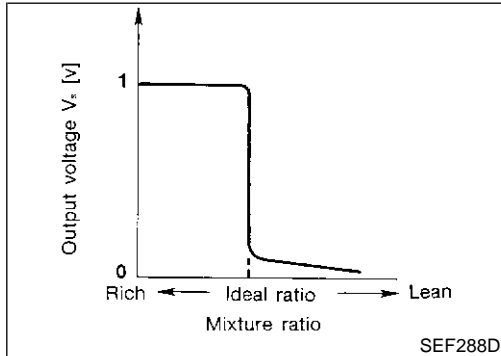

CONSULT-II Reference Value in Data Monitor Mode

NBEC0874

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
HO2S1 (B1) HO2S1 (B2)			0 - 0.3V ↔ Approx. 0.6 - 1.0V
HO2S1 MNTR (B1) HO2S1 MNTR (B2)	<ul style="list-style-type: none"> Engine: After warming up 	Maintaining engine speed at 2,000 rpm	LEAN ↔ RICH Changes more than 5 times during 10 seconds.

ECM Terminals and Reference Value

NBEC0875

Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.

CAUTION:


Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
63	G	Heated oxygen sensor 1 (bank 1)	<p>[Engine is running]</p> <ul style="list-style-type: none"> Warm-up condition Engine speed is 2,000 rpm. 	<p>0 - Approximately 1.0V (Periodically change)</p>

SEF059V


DTC P0132, P0152 HO2S1

ECM Terminals and Reference Value (Cont'd)

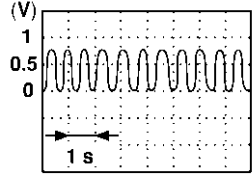TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
62	G/B	Heated oxygen sensor 1 (bank 2)	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 2,000 rpm. 	0 - Approximately 1.0V (Periodically change)  <small>SEF059V</small>

GI
MA
EM
LC
EC

FE
AT
TF

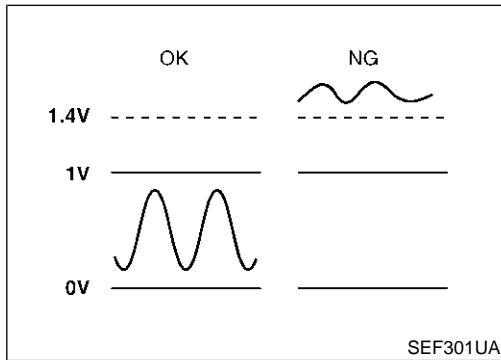

On Board Diagnosis Logic

To judge the malfunction, the diagnosis checks that the heated oxygen sensor 1 output is not inordinately high.

NBEC0876

PD
AX
SU
BR

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0132 0132 (Bank 1) P0152 0152 (Bank 2)	Heated oxygen sensor 1 circuit high voltage	An excessively high voltage from the sensor is sent to ECM.	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Heated oxygen sensor 1

ST
RS
BT
HA

5	DATA MONITOR	
	MONITOR	NO DTC
	ENG SPEED	XXX rpm
	COOLAN TEMP/S	XXX °C

SEF174Y

DTC Confirmation Procedure

NBEC0877

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

NBEC0877S01

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 10 seconds.
- 3) Turn ignition switch "ON".
- 4) Select "DATA MONITOR" mode with CONSULT-II.

IDX

DTC P0132, P0152 HO2S1

DTC Confirmation Procedure (Cont'd)

- 5) Restart engine and let it idle for 25 seconds.
- 6) If 1st trip DTC is detected, go to “Diagnostic Procedure”, EC-235.



WITH GST

NBEC0877S02

- 1) Start engine and warm it up to normal operating temperature.
 - 2) Turn ignition switch “OFF” and wait at least 10 seconds.
 - 3) Restart engine and let it idle for 25 seconds.
 - 4) Turn ignition switch “OFF” and wait at least 10 seconds.
 - 5) Restart engine and let it idle for 25 seconds.
 - 6) Select “MODE 3” with GST.
 - 7) If DTC is detected, go to “Diagnostic Procedure”, EC-235.
- **When using GST, “DTC Confirmation Procedure” should be performed twice as much as when using CONSULT-II because GST cannot display MODE 7 (1st trip DTC) concerning this diagnosis. Therefore, using CONSULT-II is recommended.**

Wiring Diagram

BANK 1


NBEC0878

NBEC0878S01


EC-O2S1B1-01

— : Detectable line for DTC

— : Non-detectable line for DTC

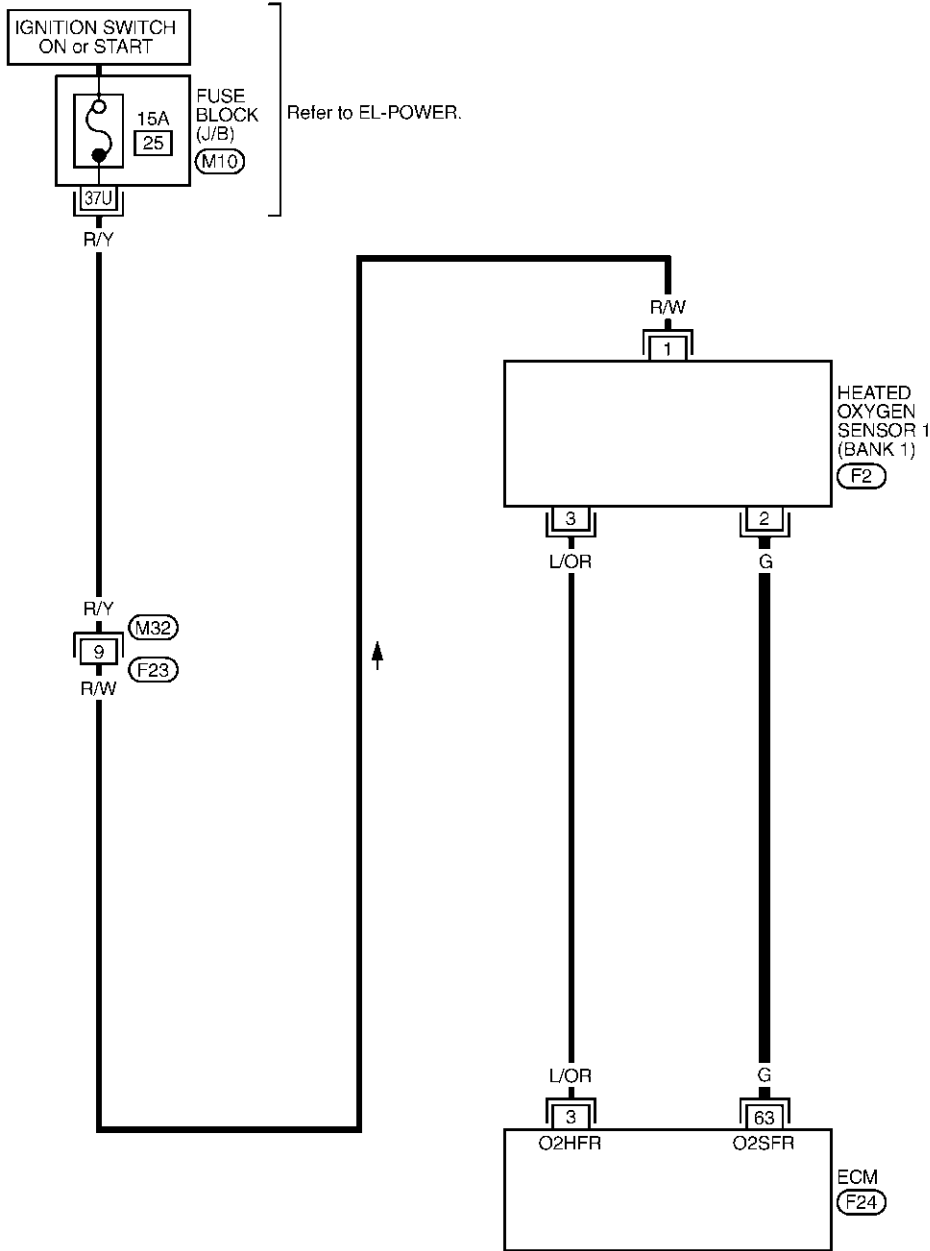


GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX



REFER TO THE FOLLOWING.

(M10) - FUSE BLOCK-
JUNCTION BOX (J/B)

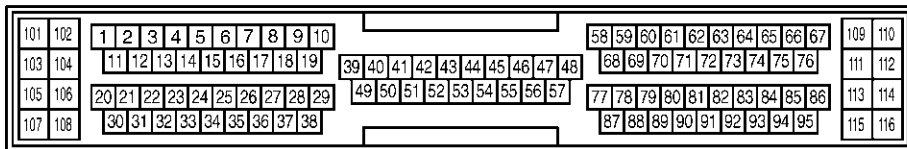

DTC P0132, P0152 HO2S1

Wiring Diagram (Cont'd)





BANK 2

NBEC0878S02

EC-O2S1B2-01

— : Detectable line for DTC

— : Non-detectable line for DTC

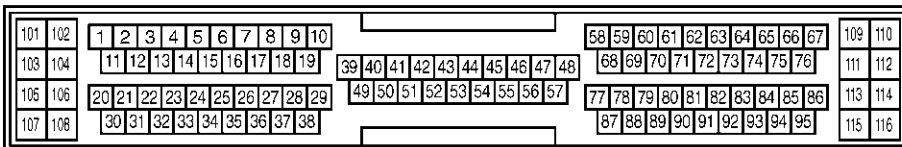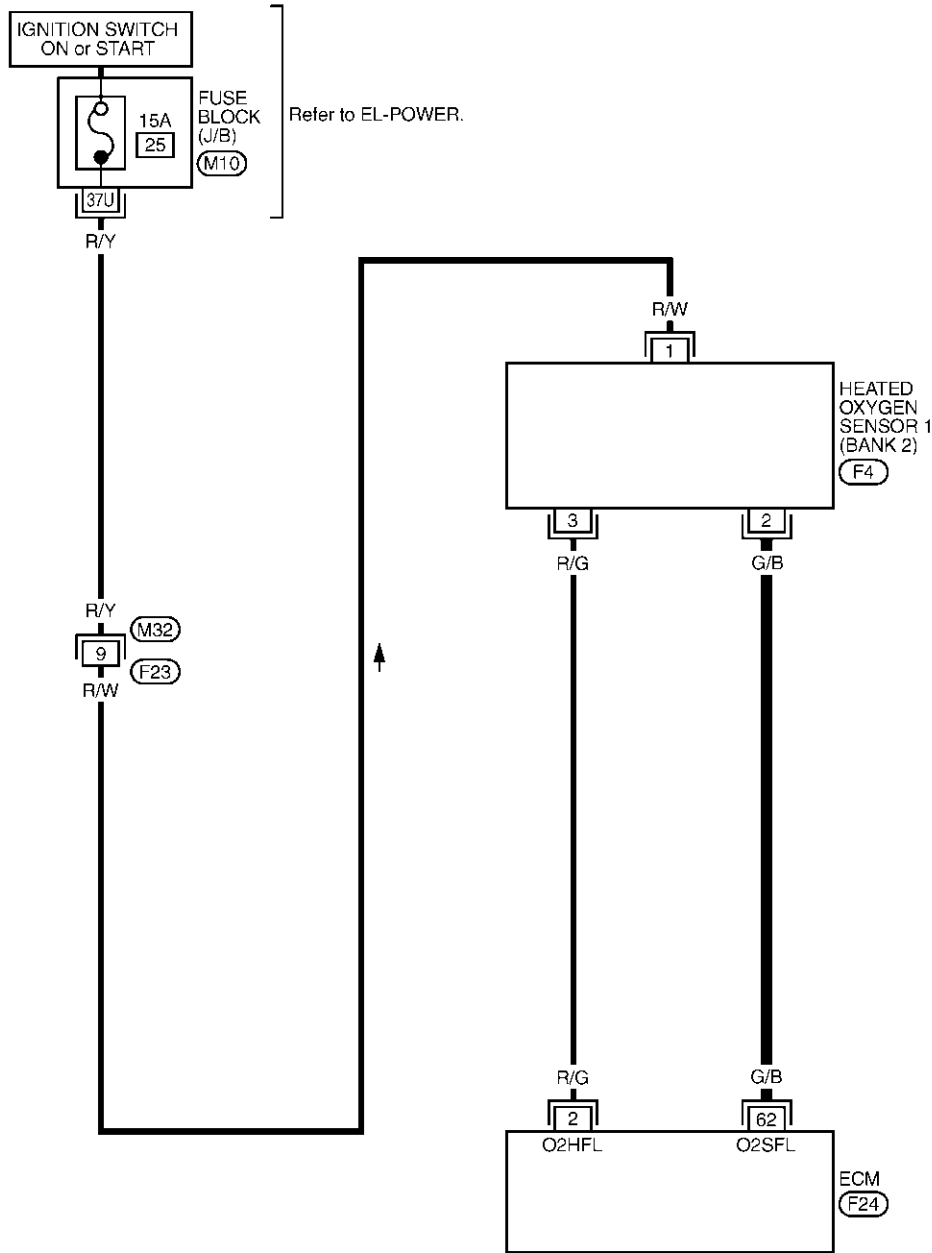




REFER TO THE FOLLOWING.

(M10) - FUSE BLOCK-JUNCTION BOX (J/B)

MEC797D

Diagnostic Procedure

NBEC0879

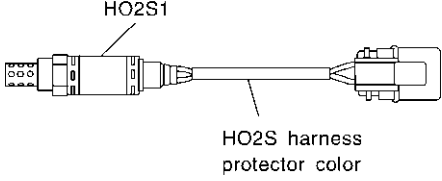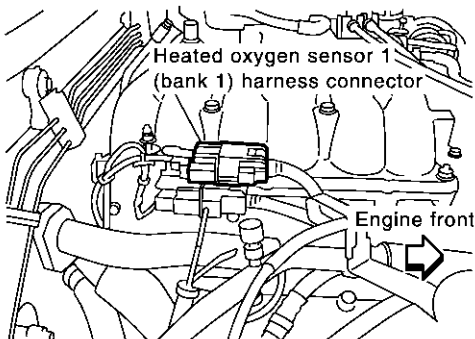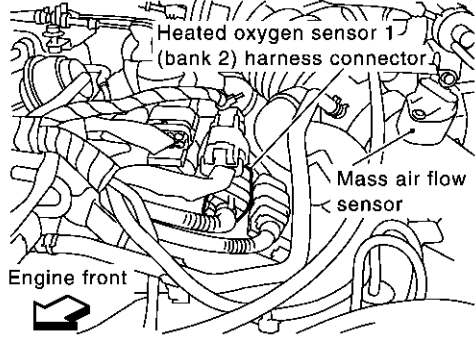1	INSPECTION START	<p>1. Turn ignition switch "OFF". 2. Check heated oxygen sensor 1 harness protector color.</p> <div style="text-align: center;">  <p>HO2S1 (bank 1): Black HO2S1 (bank 2): Blue</p> </div> <p>3. Disconnect corresponding heated oxygen sensor 1 harness connector.</p> <div style="text-align: center;">  <p>SEF505YC</p>  <p>SEF965YA</p> <p>SEF966YA</p> </div>	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p>EC</p> <p>FE</p> <p>AT</p> <p>TF</p> <p>PD</p> <p>AX</p> <p>SU</p> <p>BR</p> <p>ST</p> <p>RS</p> <p>BT</p>
▶ GO TO 2.			

2	RETIGHTEN HEATED OXYGEN SENSOR 1	<p>Loosen and retighten corresponding heated oxygen sensor 1.</p> <p>Tightening torque: 40 - 60 N-m (4.1 - 6.1 kg-m, 30 - 44 ft-lb)</p>	<p>HA</p> <p>SC</p> <p>EL</p> <p>IDX</p>
▶ GO TO 3.			

DTC P0132, P0152 HO2S1

Diagnostic Procedure (Cont'd)

3	CHECK HO2S1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT															
<p>1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal and HO2S1 terminal as follows. Refer to Wiring Diagram.</p>																
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM</th> <th>Sensor</th> </tr> </thead> <tbody> <tr> <td>P0132</td> <td style="text-align: center;">63</td> <td style="text-align: center;">2</td> <td style="text-align: center;">Bank 1</td> </tr> <tr> <td>P0152</td> <td style="text-align: center;">62</td> <td style="text-align: center;">2</td> <td style="text-align: center;">Bank 2</td> </tr> </tbody> </table>			DTC	Terminals		Bank	ECM	Sensor	P0132	63	2	Bank 1	P0152	62	2	Bank 2
DTC	Terminals			Bank												
	ECM	Sensor														
P0132	63	2	Bank 1													
P0152	62	2	Bank 2													
MTBL1198																
<p style="color: blue;">Continuity should exist.</p> <p>3. Check harness continuity between ECM terminal or HO2S1 terminal and ground as follows. Refer to Wiring Diagram.</p>																
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM or Sensor</th> <th>Ground</th> </tr> </thead> <tbody> <tr> <td>P0132</td> <td style="text-align: center;">63 or 2</td> <td style="text-align: center;">Ground</td> <td style="text-align: center;">Bank 1</td> </tr> <tr> <td>P0152</td> <td style="text-align: center;">62 or 2</td> <td style="text-align: center;">Ground</td> <td style="text-align: center;">Bank 2</td> </tr> </tbody> </table>			DTC	Terminals		Bank	ECM or Sensor	Ground	P0132	63 or 2	Ground	Bank 1	P0152	62 or 2	Ground	Bank 2
DTC	Terminals			Bank												
	ECM or Sensor	Ground														
P0132	63 or 2	Ground	Bank 1													
P0152	62 or 2	Ground	Bank 2													
MTBL1199																
<p style="color: blue;">Continuity should not exist.</p> <p>4. Also check harness for short to power.</p>																
OK or NG																
OK	▶	GO TO 4.														
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.														

4	CHECK HO2S1 CONNECTOR FOR WATER	
<p>1. Disconnect heated oxygen sensor 1 harness connector. 2. Check connectors for water. Water should not exist.</p>		
OK or NG		
OK (With CONSULT-II)	▶	GO TO 5.
OK (Without CONSULT-II)	▶	GO TO 6.
NG	▶	Repair or replace harness or connectors.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

5 CHECK HEATED OXYGEN SENSOR 1

Ⓔ With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select "MANU TRIG" and adjust "TRIGGER POINT" to 100% in "DATA MONITOR" mode with CONSULT-II.
3. Select "HO2S1 (B1)/(B2)" and "HO2S1 MNTR (B1)/(B2)".
4. Hold engine speed at 2,000 rpm under no load during the following steps.
5. Touch "RECORD" on CONSULT-II screen.

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
COOLAN TEMP/S	XXX °C
HO2S1 (B1)	XXX V
HO2S2 (B2)	XXX V

SEF967Y

6. Check the following.

- "HO2S1 MNTR (B1)/(B2)" in "DATA MONITOR" mode changes from "RICH" to "LEAN" to "RICH" more than 5 times in 10 seconds.

5 times (cycles) are counted as shown left:

Bank 1
 cycle | 1 | 2 | 3 | 4 | 5 |
 HO2S1 MNTR (B1) R-L-R-L-R-L-R-L-R-L-R


Bank 2
 cycle | 1 | 2 | 3 | 4 | 5 |
 HO2S1 MNTR (B2) R-L-R-L-R-L-R-L-R-L-R

R means HO2S1
 MNTR (B1)/(B2) indicates RICH
 L means HO2S1
 MNTR (B1)/(B2) indicates LEAN

SEF647Y

- "HO2S1 (B1)/(B2)" voltage goes above 0.6V at least once.
- "HO2S1 (B1)/(B2)" voltage goes below 0.3V at least once.
- "HO2S1 (B1)/(B2)" voltage never exceeds 1.0V.

Trigger	ENG SPEED	HO2S1 (B1)
	rpm	V
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX

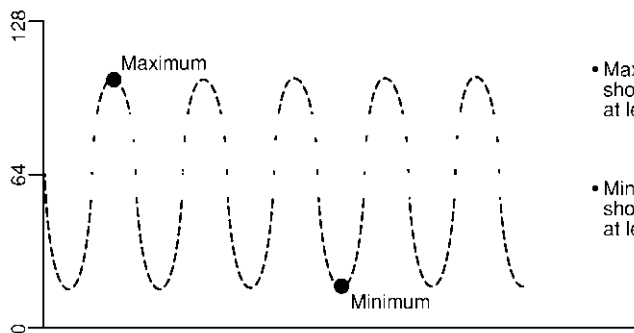

• Maximum voltage should be over 0.6V at least one time.

• Minimum voltage should be below 0.30V at least one time.

SEF648Y

CAUTION:


Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.


OK or NG

- | | | |
|----|---|----------|
| OK | ▶ | GO TO 8. |
| NG | ▶ | GO TO 7. |


DTC P0132, P0152 HO2S1

Diagnostic Procedure (Cont'd)

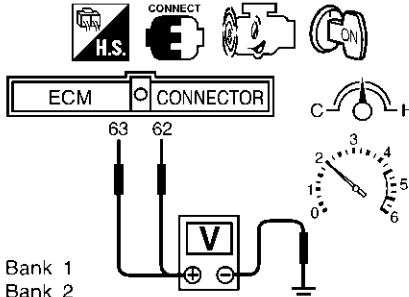6	CHECK HEATED OXYGEN SENSOR 1
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> Start engine and warm it up to normal operating temperature. Set voltmeter probes between ECM terminal 63 (HO2S1 bank 1 signal) or 62 (HO2S1 bank 2 signal) and engine ground. Check the following with engine speed held at 2,000 rpm constant under no load. 	
<div style="display: flex; justify-content: space-between; align-items: flex-start;"> <div style="text-align: center;">  </div> <div> <ul style="list-style-type: none"> • The voltage fluctuates between 0 to 0.3V and 0.6 to 1.0V more than 5 times within 10 seconds. • The maximum voltage is over 0.6V at least one time. • The minimum voltage is below 0.3V at least one time. • The voltage never exceeds 1.0V. <p>1 time: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V 2 times: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V</p> </div> </div>	
SEF967XA	
CAUTION:	
<p>Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.</p>	
OK or NG	
OK	▶ GO TO 8.
NG	▶ GO TO 7.

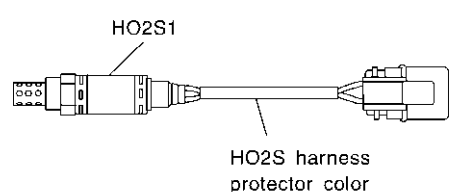7	REPLACE HEATED OXYGEN SENSOR 1
<ol style="list-style-type: none"> Turn ignition switch "OFF". Check heated oxygen sensor 1 harness protector color. 	
	
<p>HO2S1 (bank 1): Black HO2S1 (bank 2): Blue</p>	
SEF505YC	
CAUTION:	
<p>Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.</p>	
▶	Replace malfunctioning heated oxygen sensor 1.


8	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	
▶	INSPECTION END

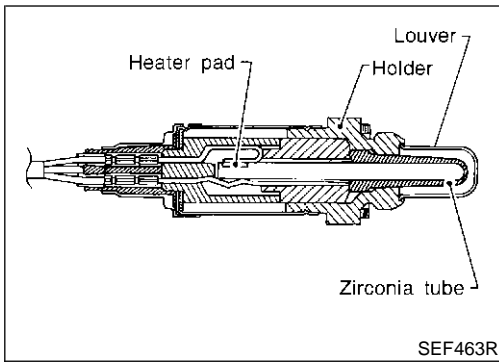

Component Description

NBEC0880

The heated oxygen sensor 1 is placed into the exhaust manifold. It detects the amount of oxygen in the exhaust gas compared to the outside air. The heated oxygen sensor 1 has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The heated oxygen sensor 1 signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

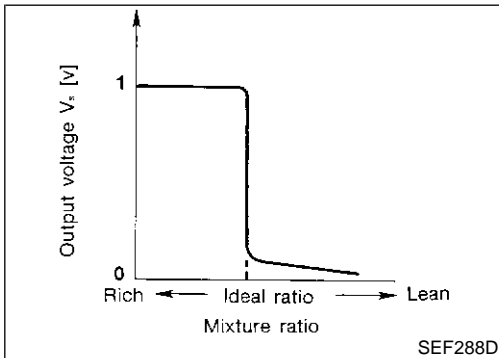

CONSULT-II Reference Value in Data Monitor Mode

NBEC0881

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
HO2S1 (B1) HO2S1 (B2)			0 - 0.3V ↔ Approx. 0.6 - 1.0V
HO2S1 MNTR (B1) HO2S1 MNTR (B2)	● Engine: After warming up	Maintaining engine speed at 2,000 rpm	LEAN ↔ RICH Changes more than 5 times during 10 seconds.

ECM Terminals and Reference Value

NBEC0882

Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.

CAUTION:


Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.


TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
63	G	Heated oxygen sensor 1 (bank 1)	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 2,000 rpm. 	<p>0 - Approximately 1.0V (Periodically change)</p>

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0133, P0153 HO2S1

ECM Terminals and Reference Value (Cont'd)

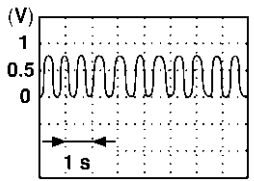TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
62	G/B	Heated oxygen sensor 1 (bank 2)	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 2,000 rpm. 	<p>0 - Approximately 1.0V (Periodically change)</p>  <p>SEF059V</p>

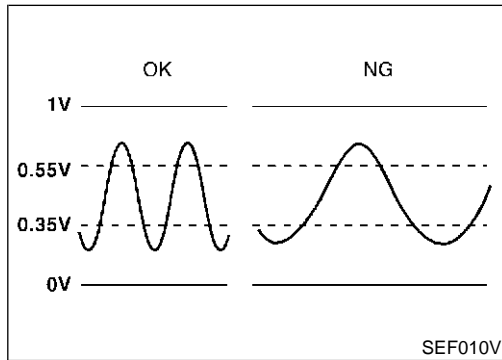

On Board Diagnosis Logic

To judge the malfunction of heated oxygen sensor 1, this diagnosis measures response time of heated oxygen sensor 1 signal. The time is compensated by engine operating (speed and load), fuel feedback control constant, and heated oxygen sensor 1 temperature index. Judgment is based on whether the compensated time [heated oxygen sensor 1 cycling time index] is inordinately long or not.

NBEC0883

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0133 0133 (Bank 1) P0153 0153 (Bank 2)	Heated oxygen sensor 1 circuit slow response	The response of the voltage signal from the sensor takes more than the specified time.	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Heated oxygen sensor 1 ● Fuel pressure ● Injectors ● Intake air leaks ● Exhaust gas leaks ● PCV valve ● Mass air flow sensor

DTC Confirmation Procedure

NBEC0884

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

- Always perform at a temperature above -10°C (14°F).
- Before performing the following procedure, confirm that battery voltage is more than 11V at idle.

GI

MA

EM

LC

EC

FE

AT

TF

6	HO2S1 (B1) P0133	
	OUT OF CONDITION	
	MONITOR	
	ENG SPEED	XXX rpm
	B/FUEL SCHDL	XXX msec
	COOLAN TEMP/S	XXX °C
	VHCL SPEED SEN	XXX km/h

SEF338Z

WITH CONSULT-II

NBEC0884S01

- 1) Start engine and warm it up to normal operating temperature.
- 2) Stop engine and wait at least 5 seconds.
- 3) Turn ignition switch "ON" and select "HO2S1 (B1)/(B2) P0133/P0153" of "HO2S1" in "DTC WORK SUPPORT" mode with CONSULT-II.
- 4) Touch "START".
- 5) Start engine and let it idle for at least 3 minutes.

NOTE:

Never raise engine speed above 3,600 rpm after this step. If the engine speed limit is exceeded, return to step 5.

- 6) When the following conditions are met, "TESTING" will be displayed on the CONSULT-II screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take approximately 40 to 50 seconds.)

ENG SPEED	1,600 - 3,100 rpm
Vehicle speed	More than 80 km/h (50 MPH)
B/FUEL SCHDL	5 - 12 msec
Selector lever	Suitable position

If "TESTING" is not displayed after 5 minutes, retry from step 2.

- 7) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "Diagnostic Procedure", EC-245.

6	HO2S1 (B1) P0133	
	TESTING	
	MONITOR	
	ENG SPEED	XXX rpm
	B/FUEL SCHDL	XXX msec
	COOLAN TEMP/S	XXX °C
	VHCL SPEED SEN	XXX km/h

SEF339Z

6	HO2S1 (B1) P0133	
	COMPLETED	

SEF658Y

PD

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX

DTC P0133, P0153 HO2S1

Overall Function Check

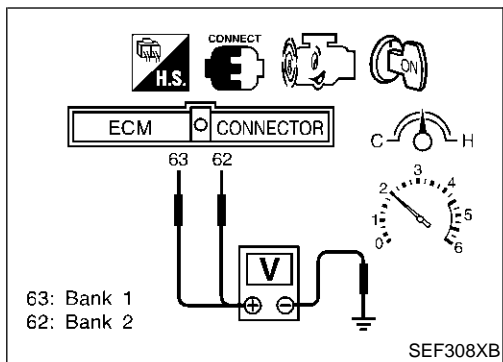

Overall Function Check

Use this procedure to check the overall function of the heated oxygen sensor 1 circuit. During this check, a DTC might not be confirmed. NBEC0885

WITH GST

- 1) Start engine and warm it up to normal operating temperature. NBEC0885S01
- 2) Set voltmeter probes between ECM terminal 63 (HO2S1 bank 1 signal) or 62 (HO2S1 bank 2 signal) and engine ground.
- 3) Check the following with engine speed held at 2,000 rpm constant under no load.
 - The voltage fluctuates between 0 to 0.3V and 0.6 to 1.0V more than 5 times within 10 seconds.
1 time: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V
2 times: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V
- 4) If NG, go to "Diagnostic Procedure", EC-245.

Wiring Diagram

BANK 1


NBEC0886

NBEC0886S01


EC-O2S1B1-01

— : Detectable line for DTC

— : Non-detectable line for DTC

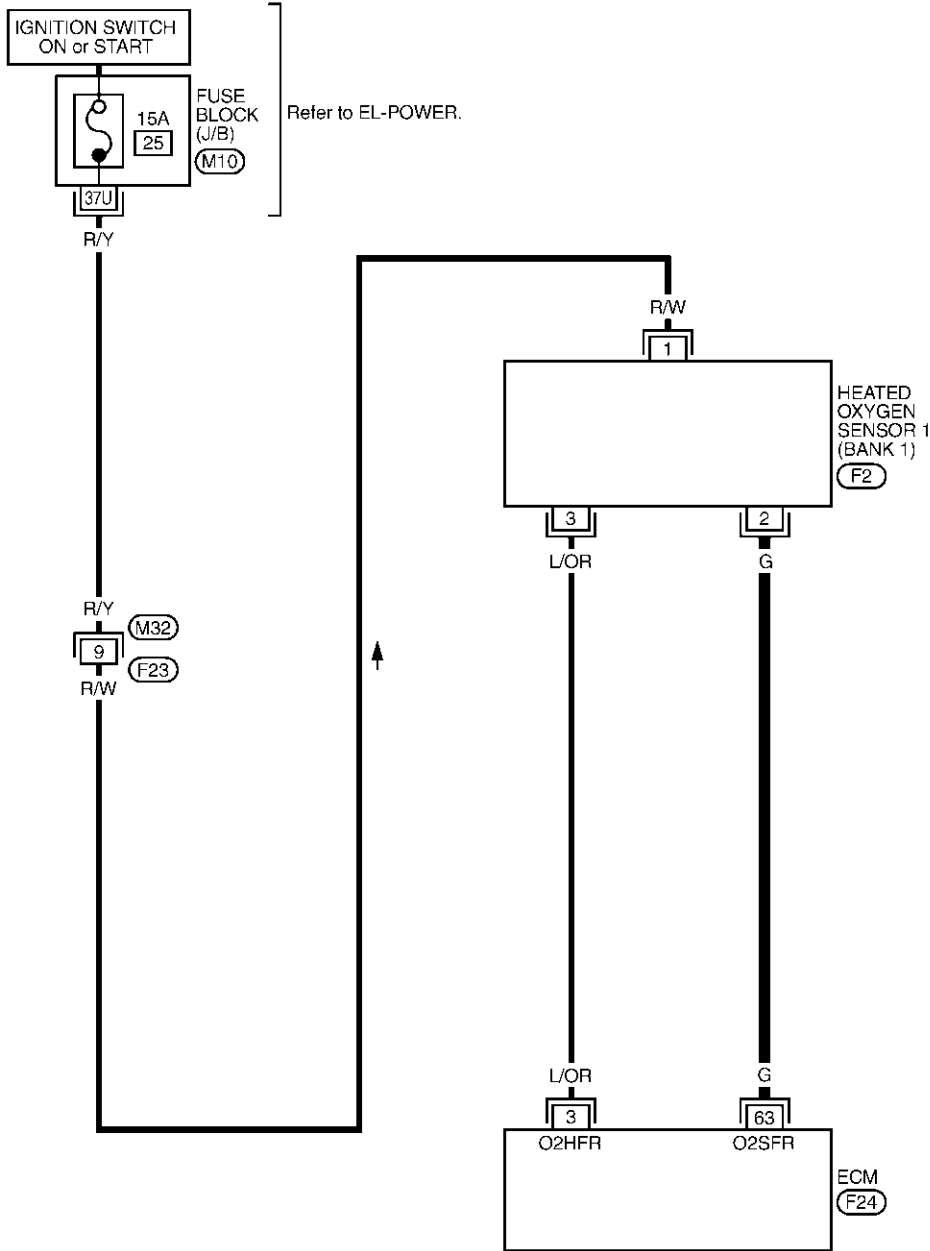


GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX



REFER TO THE FOLLOWING.

(M10) - FUSE BLOCK-JUNCTION BOX (J/B)

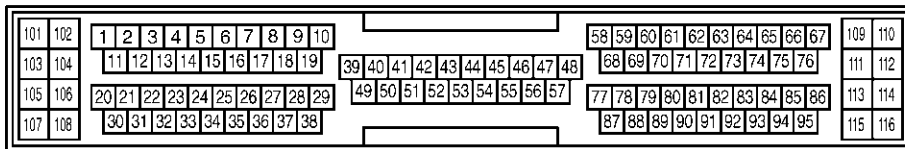

DTC P0133, P0153 HO2S1





Wiring Diagram (Cont'd)

NBEC0886S02

BANK 2

EC-O2S1B2-01

: Detectable line for DTC
 : Non-detectable line for DTC

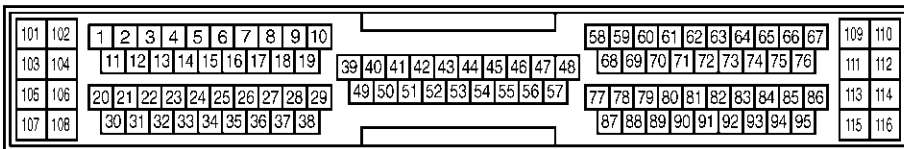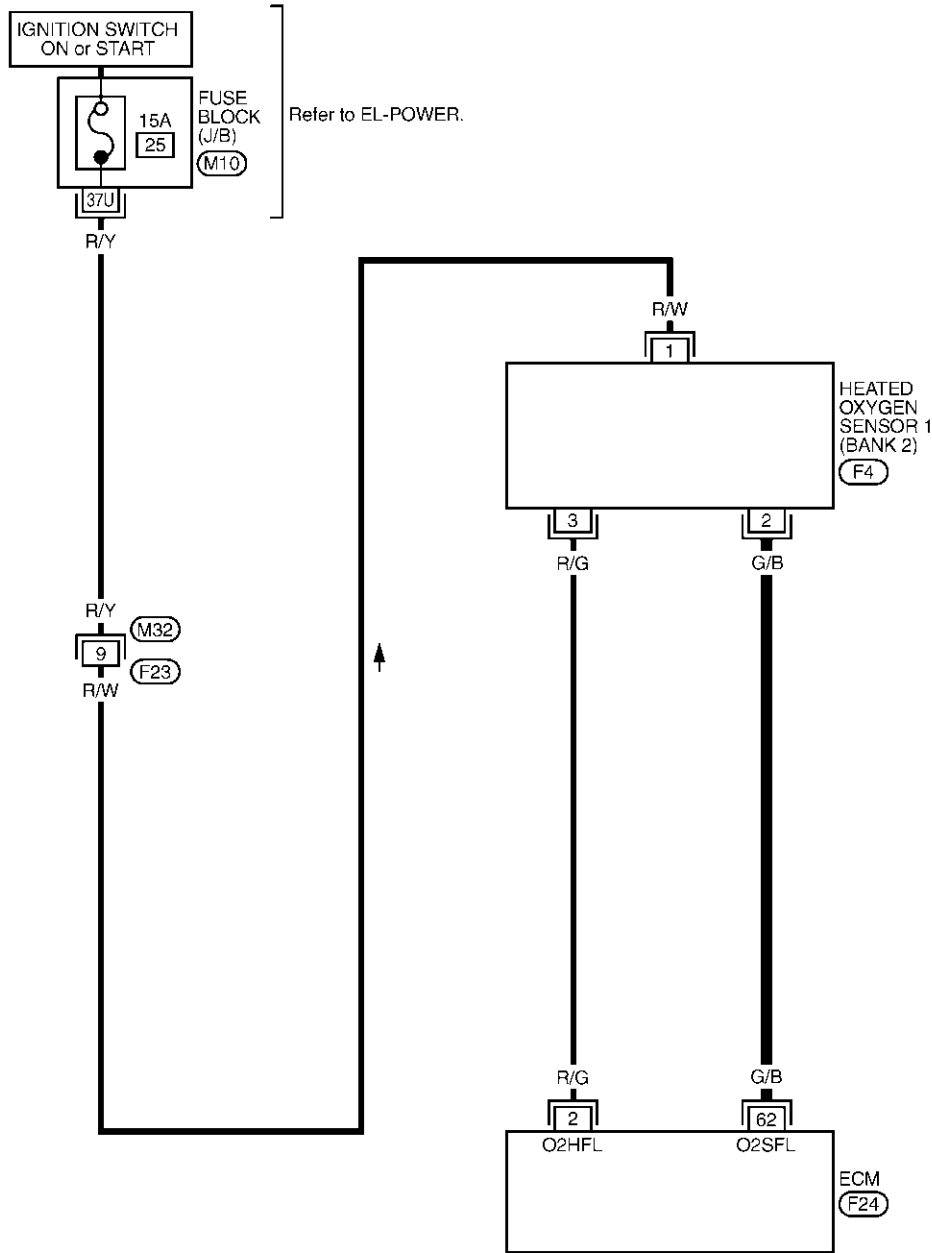

REFER TO THE FOLLOWING.


(M10) - FUSE BLOCK-JUNCTION BOX (J/B)



MEC797D

Diagnostic Procedure


NBEC0887

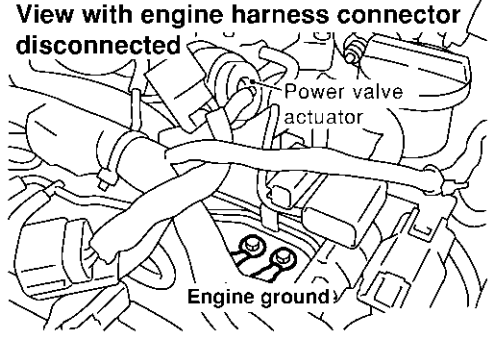1	RETIGHTEN GROUND SCREWS
<p>1. Turn ignition switch "OFF". 2. Loosen and retighten engine ground screws.</p> <div style="text-align: center;"> <p>View with engine harness connector disconnected</p>  <p>The diagram shows a top-down view of the engine compartment. Two ground screws are labeled 'Engine ground'. A 'Power valve actuator' is also shown. The engine harness connector is disconnected.</p> </div> <p style="text-align: right;">SEF959Y</p>	
▶ GO TO 2.	

GI
MA
EM
LC
EC

2	RETIGHTEN HEATED OXYGEN SENSOR 1
<p>Loosen and retighten corresponding heated oxygen sensor 1.</p> <p>Tightening torque: 40 - 60 N·m (4.1 - 6.1 kg-m, 30 - 44 ft-lb)</p>	
▶ GO TO 3.	

FE
AT
TF
PD

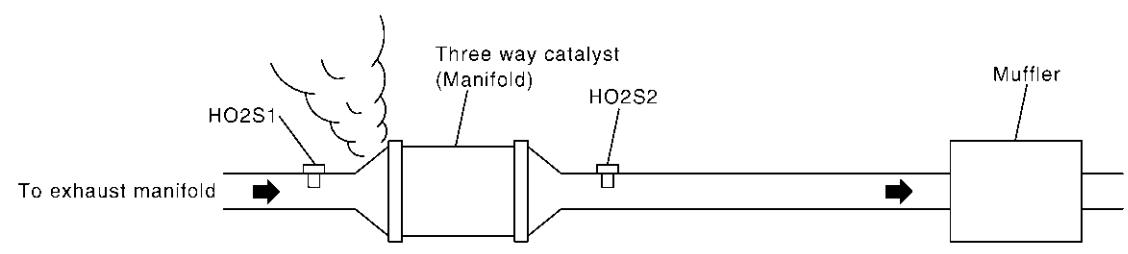3	CHECK FOR EXHAUST AIR LEAK
<p>1. Start engine and run it at idle. 2. Listen for an exhaust air leak before three way catalyst (manifold).</p> <div style="text-align: center;">  <p>The diagram shows the exhaust system layout. It starts with 'To exhaust manifold' leading to 'HO2S1'. The exhaust then passes through a 'Three way catalyst (Manifold)', followed by 'HO2S2', and finally a 'Muffler'. Arrows indicate the direction of exhaust gas flow.</p> </div> <p>▶ : Exhaust gas</p> <p style="text-align: right;">SEC635D</p>	
OK or NG	
OK	▶ GO TO 4.
NG	▶ Repair or replace.

AX
SU
BR
ST
RS
BT

4	CHECK FOR INTAKE AIR LEAK
<p>Listen for an intake air leak after the mass air flow sensor.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 5.
NG	▶ Repair or replace.

HA
SC
EL
IDX


DTC P0133, P0153 HO2S1

Diagnostic Procedure (Cont'd)

5	CLEAR THE SELF-LEARNING DATA										
<p>E With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Select "SELF-LEARNING CONT" in "WORK SUPPORT" mode with CONSULT-II. 3. Clear the self-learning control coefficient by touching "CLEAR". <div style="text-align: center; margin: 10px 0;"> <table border="1" style="border-collapse: collapse;"> <tr> <th colspan="3" style="padding: 2px;">WORK SUPPORT</th> </tr> <tr> <td style="padding: 2px;">SELF-LEARNING CONT</td> <td style="padding: 2px;">CLEAR</td> <td style="padding: 2px;">B1 100 %</td> </tr> <tr> <td colspan="2"></td> <td style="padding: 2px;">B2 100 %</td> </tr> </table> </div> <p style="text-align: right; margin-right: 20px;">SEF968Y</p> <ol style="list-style-type: none"> 4. Run engine for at least 10 minutes at idle speed. <p>Is the 1st trip DTC P0171, P0172, P0174 or P0175 detected? Is it difficult to start engine?</p>			WORK SUPPORT			SELF-LEARNING CONT	CLEAR	B1 100 %			B2 100 %
WORK SUPPORT											
SELF-LEARNING CONT	CLEAR	B1 100 %									
		B2 100 %									
<p>X Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Turn ignition switch "OFF". 3. Disconnect mass air flow sensor harness connector, and restart and run engine for at least 5 seconds at idle speed. 4. Stop engine and reconnect mass air flow sensor harness connector. 5. Make sure 1st trip DTC P0102 is displayed. 6. Erase the 1st trip DTC memory. Refer to "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION", EC-85. 7. Make sure DTC P0000 is displayed. 8. Run engine for at least 10 minutes at idle speed. <p>Is the 1st trip DTC P0171, P0172, P0174 or P0175 detected? Is it difficult to start engine?</p> <p style="text-align: center;">Yes or No</p>											
Yes	▶	Perform trouble diagnosis for DTC P0171, P0174 or P0172, P0175. Refer to EC-282, 290.									
No	▶	GO TO 6.									

6 CHECK HO2S1 HARNESS PROTECTOR COLOR


1. Turn ignition switch "OFF".
2. Check heated oxygen sensor 1 harness protector.

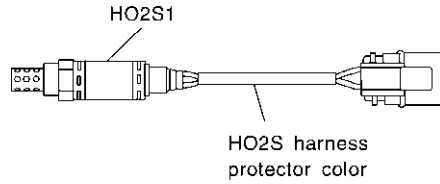


HO2S1 (bank 1): Black
HO2S1 (bank 2): Blue

SEF505YC

3. Disconnect corresponding heated oxygen sensor 1 harness connector.

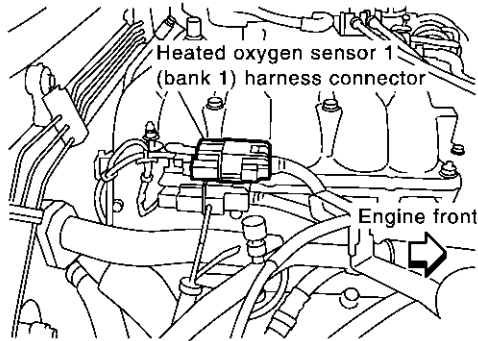

SEF965YA

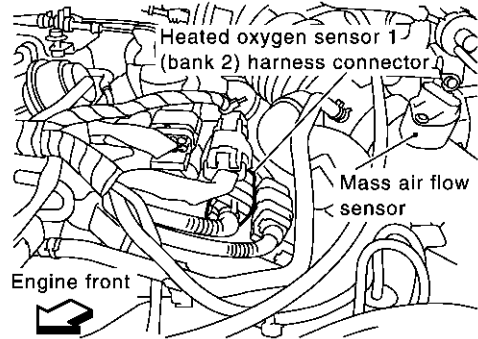

SEF966YA

▶ GO TO 7.

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL


IDX

DTC P0133, P0153 HO2S1


Diagnostic Procedure (Cont'd)

7	CHECK HO2S1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT														
<p>1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal and HO2S1 terminal as follows. Refer to Wiring Diagram.</p>															
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM</th> <th>Sensor</th> </tr> </thead> <tbody> <tr> <td>P0133</td> <td style="text-align: center;">63</td> <td style="text-align: center;">2</td> <td style="text-align: center;">Bank 1</td> </tr> <tr> <td>P0153</td> <td style="text-align: center;">62</td> <td style="text-align: center;">2</td> <td style="text-align: center;">Bank 2</td> </tr> </tbody> </table>		DTC	Terminals		Bank	ECM	Sensor	P0133	63	2	Bank 1	P0153	62	2	Bank 2
DTC	Terminals		Bank												
	ECM	Sensor													
P0133	63	2	Bank 1												
P0153	62	2	Bank 2												
MTBL1200															
<p style="color: blue;">Continuity should exist.</p> <p>3. Check harness continuity between ECM terminal or HO2S1 terminal and ground as follows. Refer to Wiring Diagram.</p>															
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM or Sensor</th> <th>Ground</th> </tr> </thead> <tbody> <tr> <td>P0133</td> <td style="text-align: center;">63 or 2</td> <td style="text-align: center;">Ground</td> <td style="text-align: center;">Bank 1</td> </tr> <tr> <td>P0153</td> <td style="text-align: center;">62 or 2</td> <td style="text-align: center;">Ground</td> <td style="text-align: center;">Bank 2</td> </tr> </tbody> </table>		DTC	Terminals		Bank	ECM or Sensor	Ground	P0133	63 or 2	Ground	Bank 1	P0153	62 or 2	Ground	Bank 2
DTC	Terminals		Bank												
	ECM or Sensor	Ground													
P0133	63 or 2	Ground	Bank 1												
P0153	62 or 2	Ground	Bank 2												
MTBL1201															
<p style="color: blue;">Continuity should not exist.</p> <p>4. Also check harness for short to power.</p>															
OK or NG															
OK	▶	GO TO 8.													
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.													

8	CHECK HEATED OXYGEN SENSOR 1 HEATER	
<p>Check resistance between HO2S1 terminals as follows.</p>		
SEF969YA		
<p style="color: red;">CAUTION: Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.</p>		
OK or NG		
OK	▶	GO TO 9.
NG	▶	GO TO 13.

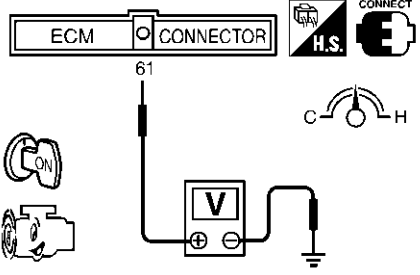9	CHECK MASS AIR FLOW SENSOR											
<ol style="list-style-type: none"> 1. Reconnect harness connectors disconnected. 2. Start engine and warm it up to normal operating temperature. 3. Check voltage between ECM terminal 61 (Mass air flow sensor signal) and ground. 												
		<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Condition</th> <th style="text-align: center;">Voltage V</th> </tr> </thead> <tbody> <tr> <td>Ignition switch "ON" (Engine stopped.)</td> <td style="text-align: center;">Approx. 1.0</td> </tr> <tr> <td>Idle (Engine is warmed-up to normal operating temperature.)</td> <td style="text-align: center;">1.2 - 1.8</td> </tr> <tr> <td>2,500 rpm (Engine is warmed-up to normal operating temperature.)</td> <td style="text-align: center;">1.6 - 2.2</td> </tr> <tr> <td>Idle to about 4,000 rpm*</td> <td style="text-align: center;">1.2 - 1.8 to Approx. 4.0</td> </tr> </tbody> </table> <p style="font-size: small;">*: Check for linear voltage rise in response to engine being increased to about 4,000 rpm.</p>	Condition	Voltage V	Ignition switch "ON" (Engine stopped.)	Approx. 1.0	Idle (Engine is warmed-up to normal operating temperature.)	1.2 - 1.8	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.6 - 2.2	Idle to about 4,000 rpm*	1.2 - 1.8 to Approx. 4.0
Condition	Voltage V											
Ignition switch "ON" (Engine stopped.)	Approx. 1.0											
Idle (Engine is warmed-up to normal operating temperature.)	1.2 - 1.8											
2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.6 - 2.2											
Idle to about 4,000 rpm*	1.2 - 1.8 to Approx. 4.0											
<p>4. If the voltage is out of specification, disconnect mass air flow sensor harness connector and connect it again. Then repeat above check.</p>												
OK or NG												
OK	▶	GO TO 10.										
NG	▶	Replace mass air flow sensor.										

SEF298X

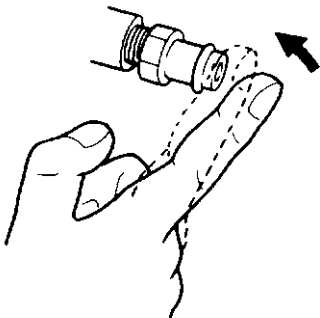10	CHECK PCV VALVE	
<ol style="list-style-type: none"> 1. Install all removed parts. 2. Start engine and let it idle. 3. Remove PCV valve ventilation hose from PCV valve. 4. Make sure that a hissing noise will be heard as air passes through it and a strong vacuum should be felt immediately when a finger is placed over valve inlet. 		
		
OK or NG		
OK (With CONSULT-II)	▶	GO TO 11.
OK (Without CONSULT-II)	▶	GO TO 12.
NG	▶	Replace PCV valve.

SEC137A

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P0133, P0153 HO2S1

Diagnostic Procedure (Cont'd)

11 CHECK HEATED OXYGEN SENSOR 1

Ⓔ With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select "MANU TRIG" and adjust "TRIGGER POINT" to 100% in "DATA MONITOR" mode with CONSULT-II.
3. Select "HO2S1 (B1)/(B2)" and "HO2S1 MNTR (B1)/(B2)".
4. Hold engine speed at 2,000 rpm under no load during the following steps.
5. Touch "RECORD" on CONSULT-II screen.

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
COOLAN TEMP/S	XXX °C
HO2S1 (B1)	XXX V
HO2S2 (B2)	XXX V

SEF967Y

6. Check the following.

- "HO2S1 MNTR (B1)/(B2)" in "DATA MONITOR" mode changes from "RICH" to "LEAN" to "RICH" 5 times in 10 seconds. 5 times (cycles) are counted as shown below.

Bank 1
 cycle | 1 | 2 | 3 | 4 | 5 |
 HO2S1 MNTR (B1) R-L-R-L-R-L-R-L-R-L-R


Bank 2
 cycle | 1 | 2 | 3 | 4 | 5 |
 HO2S1 MNTR (B2) R-L-R-L-R-L-R-L-R-L-R

R means HO2S1
 MNTR (B1)/(B2) indicates RICH
 L means HO2S1
 MNTR (B1)/(B2) indicates LEAN

SEF647Y

- "HO2S1 (B1)/(B2)" voltage goes above 0.6V at least once.
- "HO2S1 (B1)/(B2)" voltage goes below 0.3V at least once.
- "HO2S1 (B1)/(B2)" voltage never exceeds 1.0V.

Trigger	ENG SPEED	HO2S1 (B1)
	rpm	V
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX

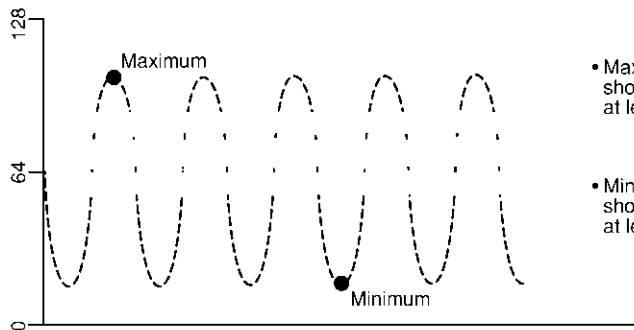

• Maximum voltage should be over 0.6V at least one time.

• Minimum voltage should be below 0.30V at least one time.


SEF648Y


CAUTION:

Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

OK or NG

OK	▶	GO TO 14.
NG	▶	GO TO 13.

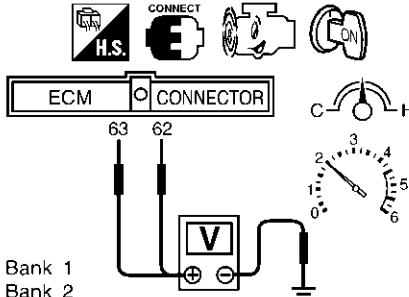12	CHECK HEATED OXYGEN SENSOR 1
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> Start engine and warm it up to normal operating temperature. Set voltmeter probes between ECM terminal 63 (HO2S1 bank 1 signal) or 62 (HO2S1 bank 2 signal) and engine ground. Check the following with engine speed held at 2,000 rpm constant under no load. 	
<div style="display: flex; justify-content: space-between; align-items: flex-start;"> <div style="width: 40%;">  <p>63: Bank 1 62: Bank 2</p> </div> <div style="width: 55%;"> <ul style="list-style-type: none"> • The voltage fluctuates between 0 to 0.3V and 0.6 to 1.0V more than 5 times within 10 seconds. • The maximum voltage is over 0.6V at least one time. • The minimum voltage is below 0.3V at least one time. • The voltage never exceeds 1.0V. <p>1 time: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V 2 times: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V</p> </div> </div>	
SEF967XA	
<p>CAUTION: Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.</p>	
OK or NG	
OK	▶ GO TO 14.
NG	▶ GO TO 13.

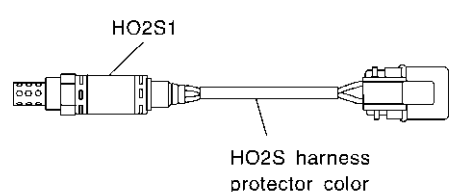
13	REPLACE HEATED OXYGEN SENSOR 1
<ol style="list-style-type: none"> Turn ignition switch "OFF". Check heated oxygen sensor 1 harness protector color. 	
	
<p>HO2S1 (bank 1): Black HO2S1 (bank 2): Blue</p>	
SEF505YC	
▶	Replace malfunctioning heated oxygen sensor 1.

14	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	
▶	INSPECTION END

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P0134, P0154 HO2S1


Component Description

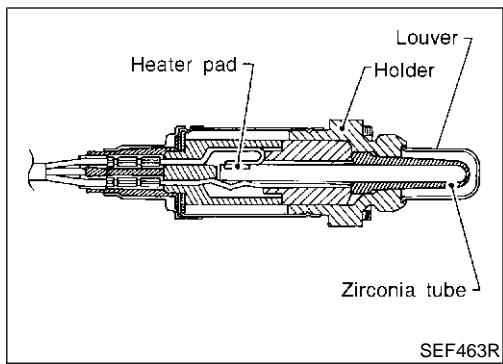

Component Description

NBEC0888

The heated oxygen sensor 1 is placed into the exhaust manifold. It detects the amount of oxygen in the exhaust gas compared to the outside air. The heated oxygen sensor 1 has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The heated oxygen sensor 1 signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

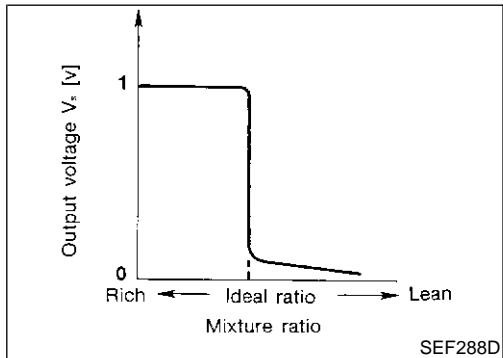

CONSULT-II Reference Value in Data Monitor Mode

NBEC0889

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
HO2S1 (B1) HO2S1 (B2)			0 - 0.3V ↔ Approx. 0.6 - 1.0V
HO2S1 MNTR (B1) HO2S1 MNTR (B2)	<ul style="list-style-type: none"> Engine: After warming up 	Maintaining engine speed at 2,000 rpm	LEAN ↔ RICH Changes more than 5 times during 10 seconds.

ECM Terminals and Reference Value

NBEC0890

Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.


CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
63	G	Heated oxygen sensor 1 (bank 1)	<p>[Engine is running]</p> <ul style="list-style-type: none"> Warm-up condition Engine speed is 2,000 rpm. 	<p>0 - Approximately 1.0V (Periodically change)</p> <p>SEF059V</p>

DTC P0134, P0154 HO2S1

ECM Terminals and Reference Value (Cont'd)

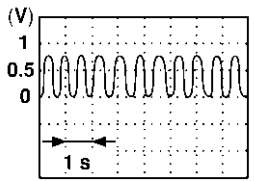TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
62	G/B	Heated oxygen sensor 1 (bank 2)	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 2,000 rpm. 	<p>0 - Approximately 1.0V (Periodically change)</p>  <p>SEF059V</p>

GI

MA

EM


LC

EC

FE

AT

TF

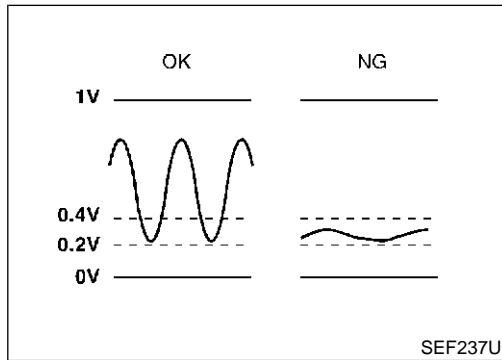

On Board Diagnosis Logic

Under the condition in which the heated oxygen sensor 1 signal is not input, the ECM circuits will read a continuous approximately 0.3V. Therefore, for this diagnosis, the time that output voltage is within 200 to 400 mV range is monitored, and the diagnosis checks that this time is not inordinately long.

NBEC0891

PD

AX

SU

BR

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0134 0134 (Bank 1) P0154 0154 (Bank 2)	Heated oxygen sensor 1 circuit no activity detected	The voltage from the sensor is constantly approx. 0.3V.	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Heated oxygen sensor 1

ST

RS

BT

HA




SC

EL

IDX

DTC P0134, P0154 HO2S1

DTC Confirmation Procedure

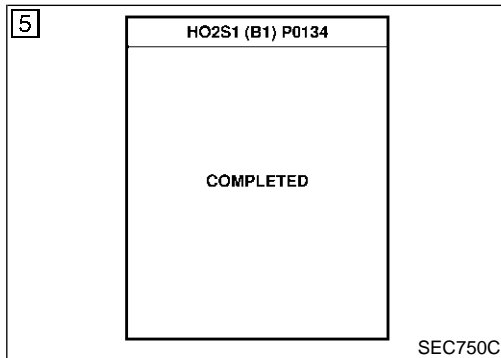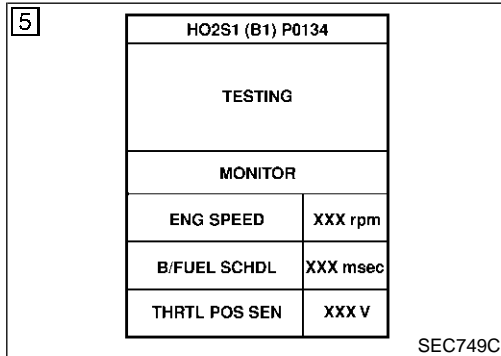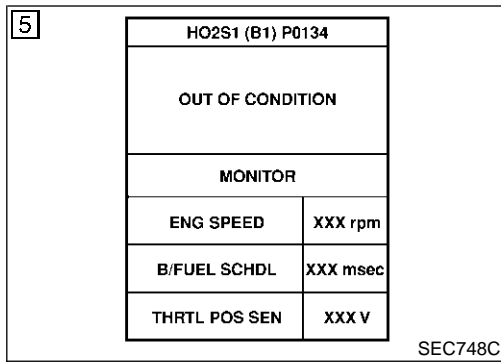

DTC Confirmation Procedure

NBEC0892

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11V at idle.

WITH CONSULT-II

NBEC0892S01

- 1) Start engine and warm it up to normal operating temperature.
- 2) Select "HO2S1 (B1)/(B2) P0134/P0154" of "HO2S1" in "DTC WORK SUPPORT" mode with CONSULT-II.
- 3) Touch "START".
- 4) Let it idle for at least 3 minutes.

NOTE:

Never raise engine speed above 3,600 rpm after this step. If the engine speed limit is exceeded, return to step 4.


- 5) When the following conditions are met, "TESTING" will be displayed on the CONSULT-II screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take approximately 10 to 60 seconds.)

ENG SPEED	1,500 - 2,800 rpm
Vehicle speed	More than 70 km/h (43 MPH)
B/FUEL SCHDL	3.0 - 10 msec
Selector lever	Suitable position

If "TESTING" is not displayed after 5 minutes, retry from step 2.

- 6) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "Diagnostic Procedure", EC-258.

During this test, P1148 and P1168 may be stored in ECM.

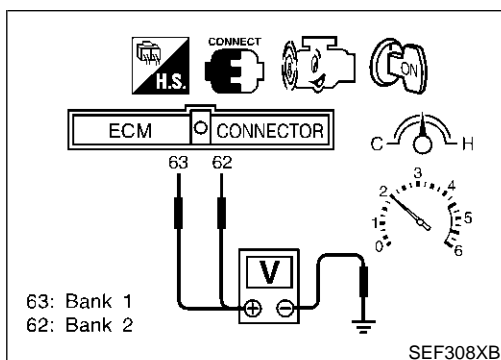

Overall Function Check

NBEC0893

Use this procedure to check the overall function of the heated oxygen sensor 1 circuit. During this check, a DTC might not be confirmed.

WITH GST

NBEC0893S01

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminal 63 (HO2S1 bank 1 signal) or 62 (HO2S1 bank 2 signal) and engine ground.
- 3) Check the following with engine speed held at 2,000 rpm constant under no load.

DTC P0134, P0154 HO2S1

Overall Function Check (Cont'd)

- The voltage does not remain in the range of 0.2 to 0.4V.
- 4) If NG, go to “Diagnostic Procedure”, EC-258.

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0134, P0154 HO2S1

Wiring Diagram

Wiring Diagram

=NBEC0894



NBEC0894S01

BANK 1

EC-O2S1B1-01



— : Detectable line for DTC

— : Non-detectable line for DTC

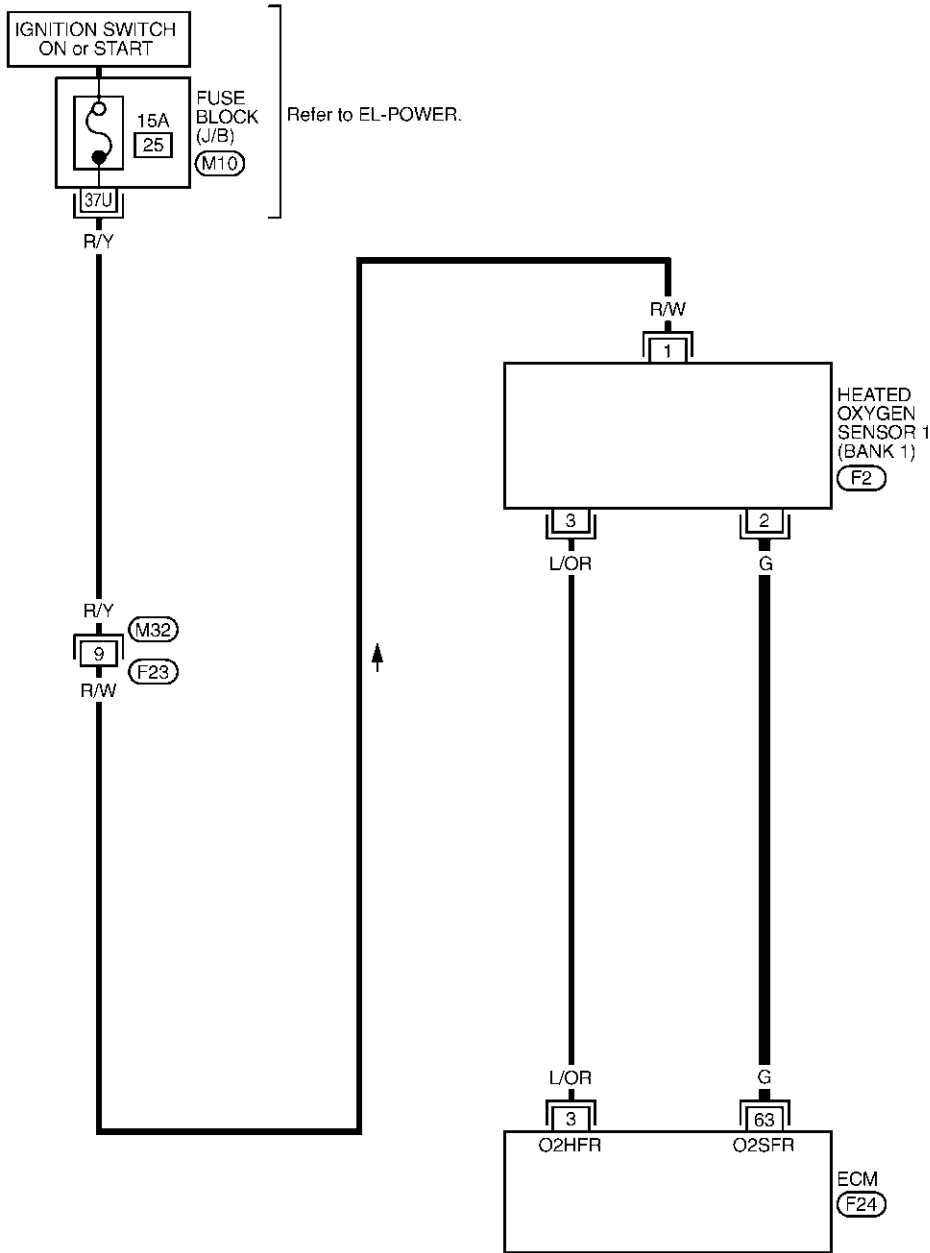

REFER TO THE FOLLOWING.

(M10) - FUSE BLOCK-JUNCTION BOX (J/B)

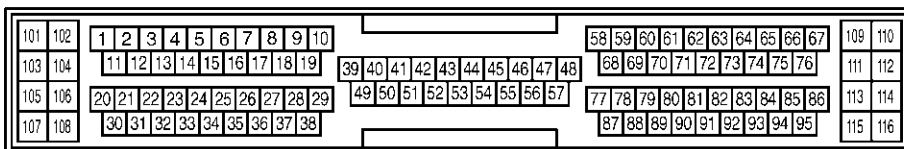


DTC P0134, P0154 HO2S1

Diagnostic Procedure

NBEC0895


1 INSPECTION START

1. Turn ignition switch "OFF".
2. Loosen and retighten engine ground screws.

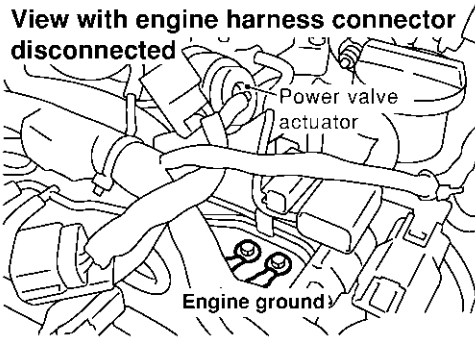


SEF959Y

3. Make sure HO2S1 harness protector color, and disconnect corresponding heated oxygen sensor 1 harness connector.

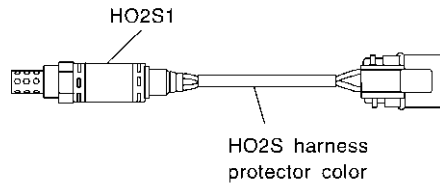


HO2S1 (bank 1): Black
HO2S1 (bank 2): Blue

SEF505YC

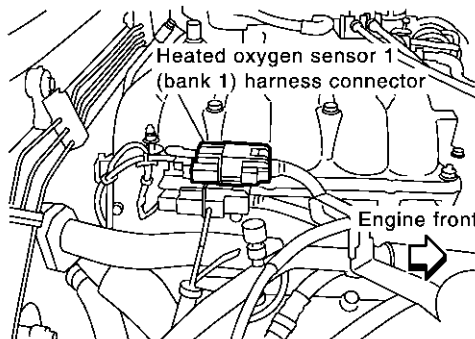

SEF965YA

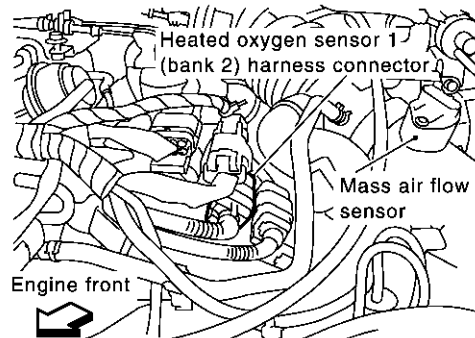

SEF966YA

▶ GO TO 2.

DTC P0134, P0154 HO2S1

Diagnostic Procedure (Cont'd)

2	CHECK HO2S1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT															
<p>1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal and HO2S1 terminal as follows. Refer to Wiring Diagram.</p>																
<table border="1"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM</th> <th>Sensor</th> </tr> </thead> <tbody> <tr> <td>P0134</td> <td>63</td> <td>2</td> <td>Bank 1</td> </tr> <tr> <td>P0154</td> <td>62</td> <td>2</td> <td>Bank 2</td> </tr> </tbody> </table>			DTC	Terminals		Bank	ECM	Sensor	P0134	63	2	Bank 1	P0154	62	2	Bank 2
DTC	Terminals			Bank												
	ECM	Sensor														
P0134	63	2	Bank 1													
P0154	62	2	Bank 2													
MTBL1202																
<p>Continuity should exist.</p> <p>3. Check harness continuity between ECM terminal or HO2S1 terminal and ground as follows. Refer to Wiring Diagram.</p>																
<table border="1"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM or Sensor</th> <th>Ground</th> </tr> </thead> <tbody> <tr> <td>P0134</td> <td>63 or 2</td> <td>Ground</td> <td>Bank 1</td> </tr> <tr> <td>P0154</td> <td>62 or 2</td> <td>Ground</td> <td>Bank 2</td> </tr> </tbody> </table>			DTC	Terminals		Bank	ECM or Sensor	Ground	P0134	63 or 2	Ground	Bank 1	P0154	62 or 2	Ground	Bank 2
DTC	Terminals			Bank												
	ECM or Sensor	Ground														
P0134	63 or 2	Ground	Bank 1													
P0154	62 or 2	Ground	Bank 2													
MTBL1203																
<p>Continuity should not exist.</p> <p>4. Also check harness for short to power.</p>																
OK or NG																
OK (With CONSULT-II) ▶	GO TO 3.															
OK (Without CONSULT-II) ▶	GO TO 4.															
NG ▶	Repair open circuit or short to ground or short to power in harness or connectors.															

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

4	CHECK HEATED OXYGEN SENSOR 1
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> Start engine and warm it up to normal operating temperature. Set voltmeter probes between ECM terminal 63 (HO2S1 bank 1 signal) or 62 (HO2S1 bank 2 signal) and engine ground. Check the following with engine speed held at 2,000 rpm constant under no load. 	
<div style="display: flex; align-items: flex-start;"> <div style="flex: 1;"> </div> <div style="flex: 2;"> <ul style="list-style-type: none"> • The voltage fluctuates between 0 to 0.3V and 0.6 to 1.0V more than 5 times within 10 seconds. • The maximum voltage is over 0.6V at least one time. • The minimum voltage is below 0.3V at least one time. • The voltage never exceeds 1.0V. <p>1 time: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V 2 times: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V</p> </div> </div>	
SEF967XA	
<p>CAUTION: Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.</p>	
OK or NG	
OK	▶ GO TO 6.
NG	▶ GO TO 5.


5	REPLACE HEATED OXYGEN SENSOR 1
<ol style="list-style-type: none"> Turn ignition switch "OFF". Check heated oxygen sensor 1 harness protector color. 	
<p>HO2S1 (bank 1): Black HO2S1 (bank 2): Blue</p>	
SEF505YC	
<p>CAUTION: Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.</p>	
▶	Replace malfunctioning heated oxygen sensor 1.

6	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	
▶	INSPECTION END

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P0138, P0158 HO2S2

Component Description

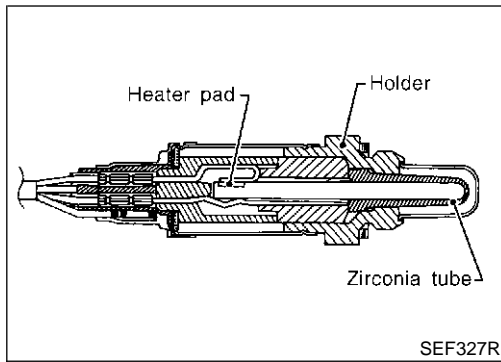

Component Description

NBEC0896

The heated oxygen sensor 2, after three way catalyst (manifold), monitors the oxygen level in the exhaust gas on each bank. Even if switching characteristics of the heated oxygen sensor 1 are shifted, the air-fuel ratio is controlled to stoichiometric, by the signal from the heated oxygen sensor 2.

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions.

Under normal conditions the heated oxygen sensor 2 is not used for engine control operation.

CONSULT-II Reference Value in Data Monitor Mode

NBEC0897

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
HO2S2 (B1) HO2S2 (B2)	<ul style="list-style-type: none"> Warm-up condition After keeping engine speed between 3,500 and 4,000 rpm for one minute and at idle for one minute under no load. 	Revsing engine from idle up to 3,000 rpm quickly	0 - 0.3V ↔ Approx. 0.6 - 1.0V
HO2S2 MNTR (B1) HO2S2 MNTR (B2)			LEAN ↔ RICH

ECM Terminals and Reference Value


NBEC0898

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
72	OR	Heated oxygen sensor 2 (bank 1)	[Engine is running] <ul style="list-style-type: none"> Warm-up condition Revsing engine from idle up to 3,000 rpm quickly after the following conditions are met. <ul style="list-style-type: none"> After keeping engine speed between 3,500 and 4,000 rpm for one minute and at idle for one minute under no load. 	0 - Approximately 1.0V
71	OR/L	Heated oxygen sensor 2 (bank 2)	[Engine is running] <ul style="list-style-type: none"> Warm-up condition Revsing engine from idle up to 3,000 rpm quickly after the following conditions are met. <ul style="list-style-type: none"> After keeping engine speed between 3,500 and 4,000 rpm for one minute and at idle for one minute under no load. 	0 - Approximately 1.0V

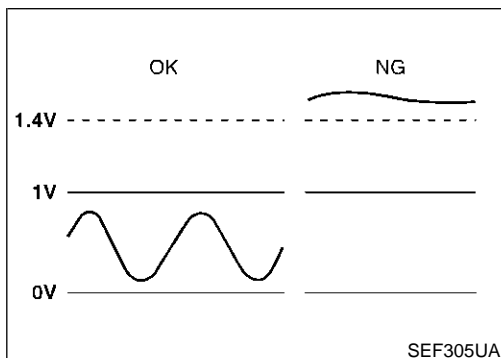

On Board Diagnosis Logic

NBEC0899

The heated oxygen sensor 2 has a much longer switching time between rich and lean than the heated oxygen sensor 1. The oxygen storage capacity before the three way catalyst (manifold) causes the longer switching time. To judge the malfunctions of heated oxygen sensor 2, ECM monitors whether the voltage is unusually high during the various driving condition such as fuel-cut.

DTC P0138, P0158 HO2S2

On Board Diagnosis Logic (Cont'd)

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0138 0138 (Bank 1) P0158 0158 (Bank 2)	Heated oxygen sensor 2 circuit high voltage	An excessively high voltage from the sensor is sent to ECM.	<ul style="list-style-type: none"> • Harness or connectors (The sensor circuit is open or shorted.) • Heated oxygen sensor 2

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

5	DATA MONITOR	
	MONITOR	NO DTC
	ENG SPEED	XXX rpm
	COOLAN TEMP/S	XXX °C
	VHCL SPEED SE	XXX km/h
B/FUEL SCHDL	XXX msec	

SEF189Y

DTC Confirmation Procedure

NBEC0900

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

Ⓔ WITH CONSULT-II

NBEC0900S01

- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT-II.
- 2) Start engine and warm it up to the normal operating temperature.
- 3) Turn ignition switch "OFF" and wait at least 10 seconds.
- 4) Start engine and keep engine speed between 3,500 and 4,000 rpm for at least one minute under no load.
- 5) Let engine idle for two minutes.
- 6) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-266.

Ⓔ WITH GST

NBEC0900S02

- 1) Start engine and warm it up to the normal operating temperature.
 - 2) Turn ignition switch "OFF" and wait at least 10 seconds.
 - 3) Start engine and keep engine speed between 3,500 and 4,000 rpm for at least one minute under no load.
 - 4) Let engine idle for two minutes.
 - 5) Turn ignition switch "OFF" and wait at least 10 seconds.
 - 6) Start engine and keep engine speed between 3,500 and 4,000 rpm for at least one minute under no load.
 - 7) Select "Mode 3" with GST.
 - 8) If DTC is detected, go to "Diagnostic Procedure", EC-266.
- **When using GST, "DTC Confirmation Procedure" should be performed twice as much as when using CONSULT-II because GST cannot display MODE 7 (1st trip DTC) concerning this diagnosis. Therefore, using CONSULT-II is recommended.**

DTC P0138, P0158 HO2S2

Wiring Diagram

Wiring Diagram

NBEC0902



NBEC0902S01

BANK 1

EC-O2S2B1-01


— : Detectable line for DTC

— : Non-detectable line for DTC

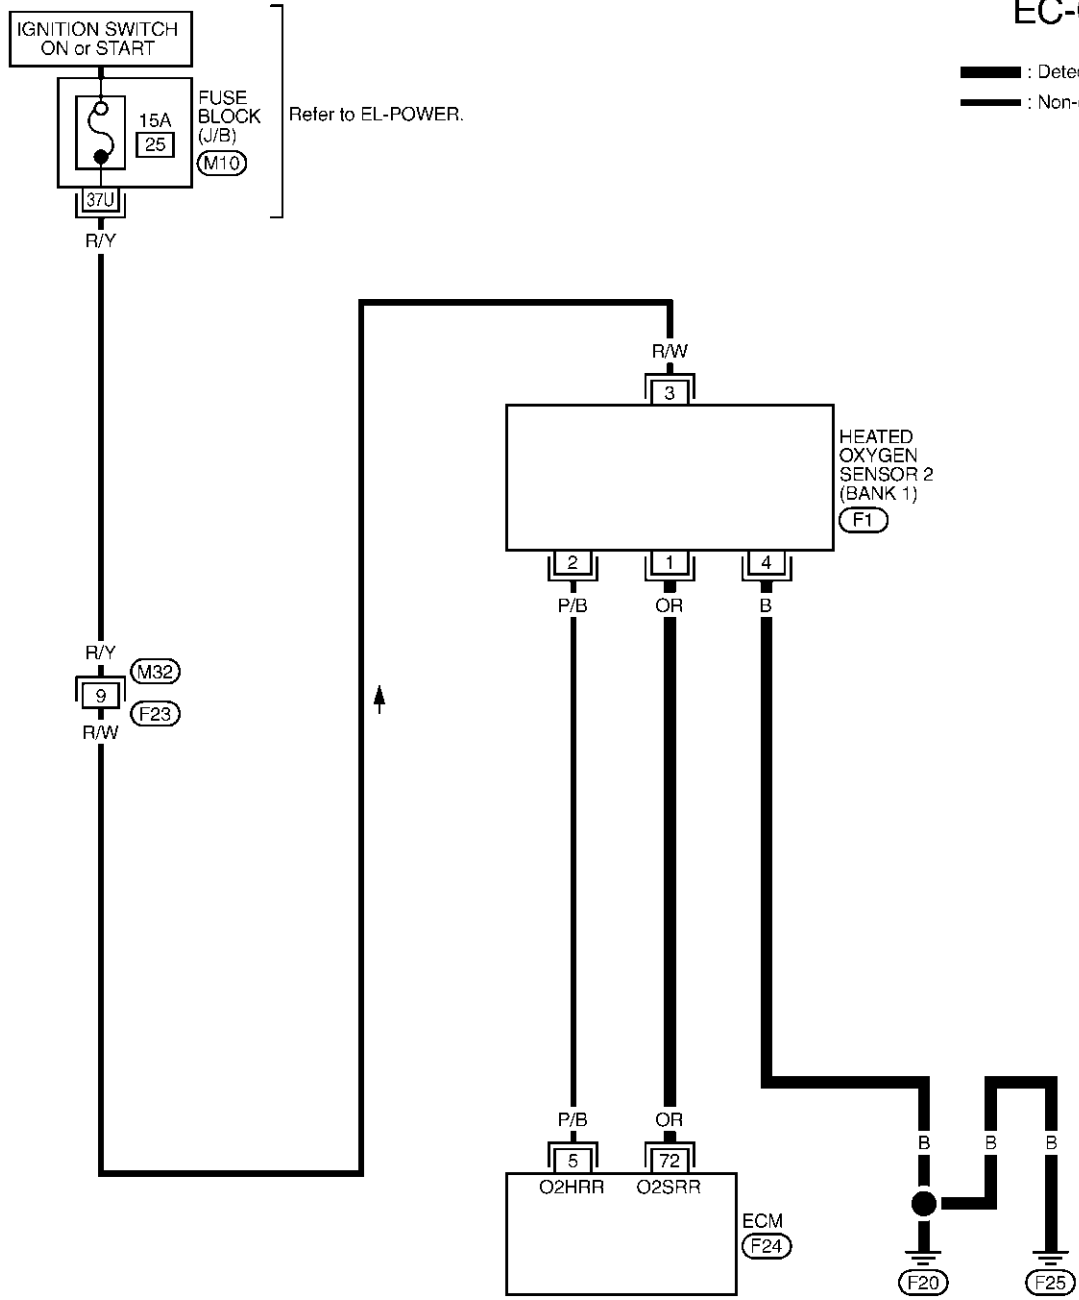

REFER TO THE FOLLOWING.

(M10) - FUSE BLOCK-JUNCTION BOX (J/B)

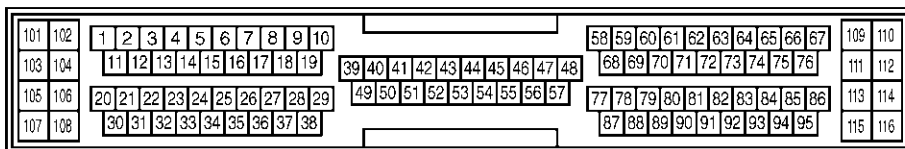

MEC799D

DTC P0138, P0158 HO2S2

Wiring Diagram (Cont'd)

BANK 2



NBEC0902S02

EC-O2S2B2-01

- GI
- MA
- EM
- LC
- EC**
- FE
- AT
- TF
- PD
- AX
- SU
- BR
- ST
- RS
- BT
- HA
- SC
- EL
- IDX


— : Detectable line for DTC

— : Non-detectable line for DTC

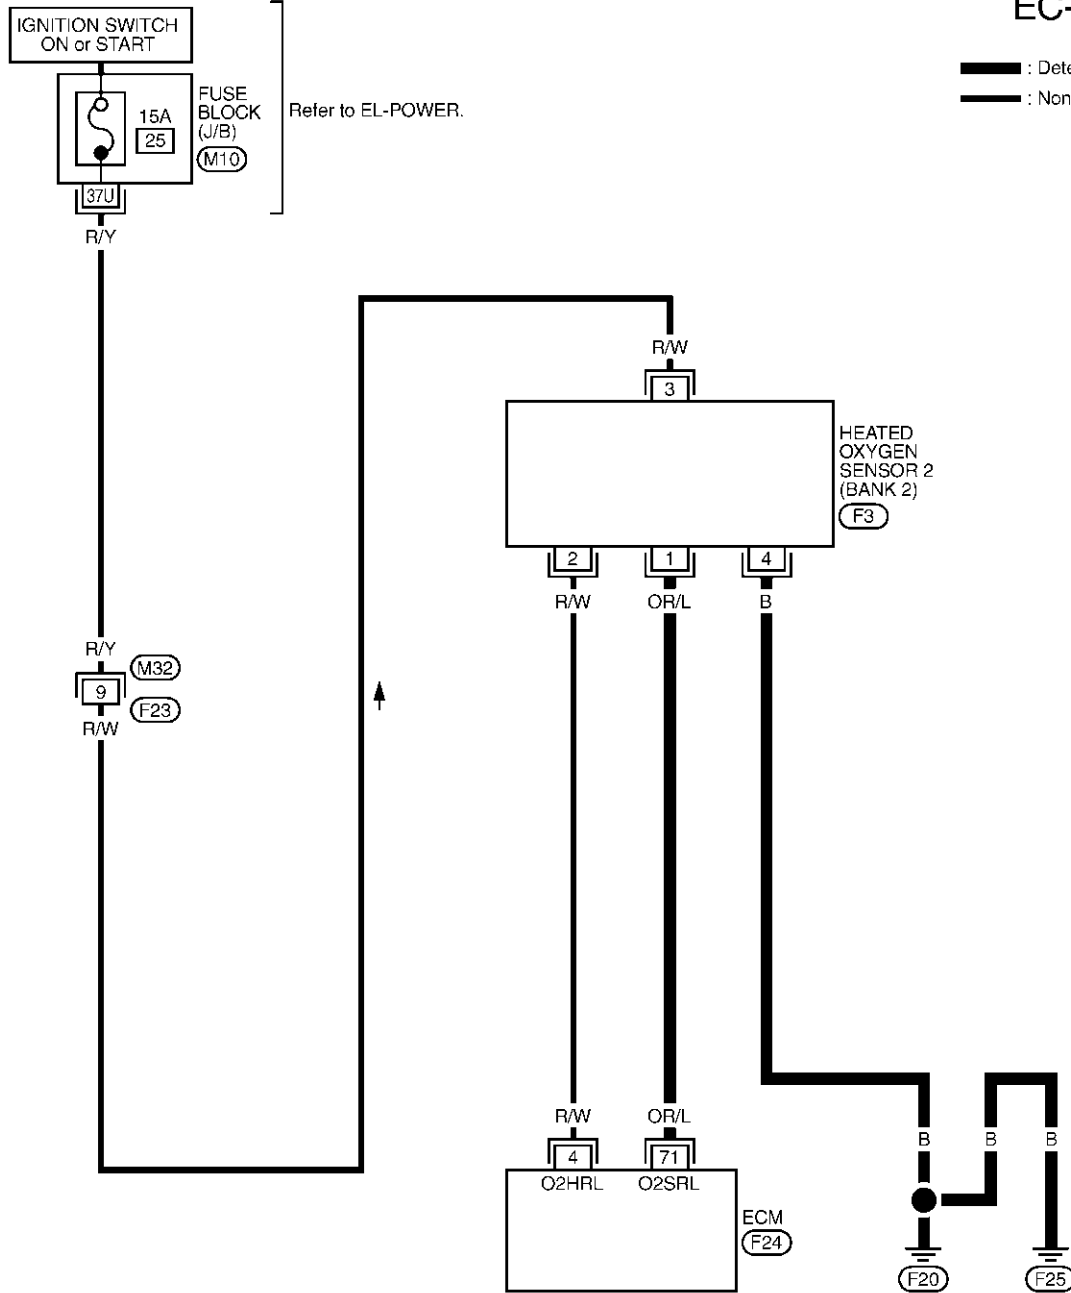

REFER TO THE FOLLOWING.

(M10) - FUSE BLOCK-JUNCTION BOX (J/B)

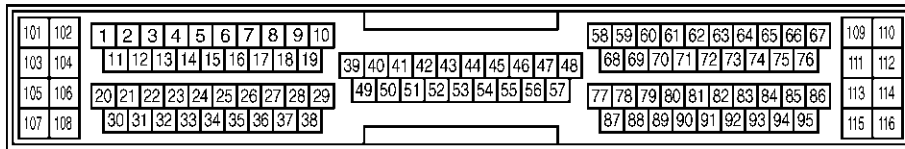

MEC800D

DTC P0138, P0158 HO2S2


Diagnostic Procedure

Diagnostic Procedure

NBEC0903


1 INSPECTION START

1. Turn ignition switch "OFF".
2. Loosen and retighten engine ground screws.

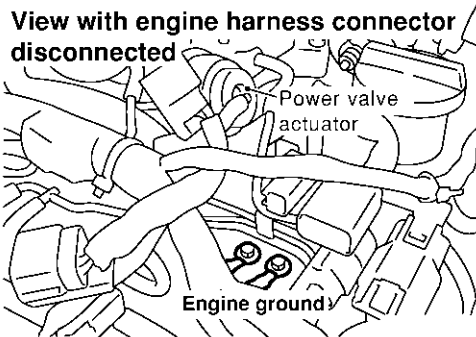

SEF959Y



3. Check heated oxygen sensor 2 harness protector color.

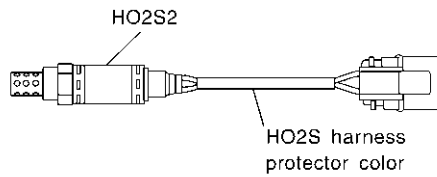

HO2S2 (bank 1): White or Gray
HO2S2 (bank 2): Red or Red/Brown

SEF372ZB

4. Disconnect corresponding heated oxygen sensor 2 harness connector.

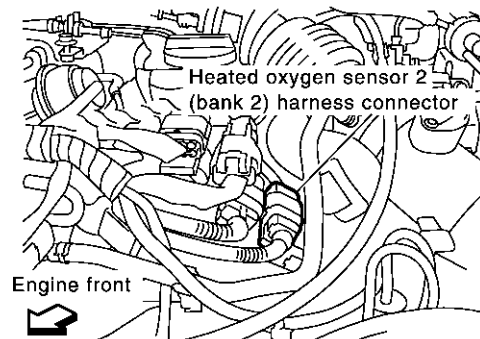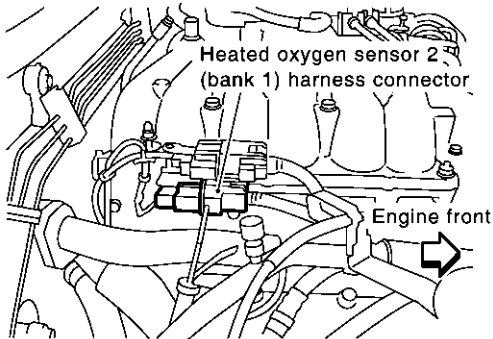

SEF971YA

5. Disconnect ECM harness connector.

▶ GO TO 2.

DTC P0138, P0158 HO2S2

Diagnostic Procedure (Cont'd)

2	CHECK HO2S2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT																													
<p>1. Check harness continuity between ECM terminal and HO2S2 terminal as follows. Refer to Wiring Diagram.</p> <table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse;"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM</th> <th>Sensor</th> </tr> </thead> <tbody> <tr> <td>P0138</td> <td style="text-align: center;">72</td> <td style="text-align: center;">1</td> <td>Bank 1</td> </tr> <tr> <td>P0158</td> <td style="text-align: center;">71</td> <td style="text-align: center;">1</td> <td>Bank 2</td> </tr> </tbody> </table> <p style="text-align: right; margin-right: 20px;">MTBL1204</p> <p>Continuity should exist.</p> <p>2. Check harness continuity between ECM terminal or HO2S2 terminal and ground as follows. Refer to Wiring Diagram.</p> <table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse;"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM or Sensor</th> <th>Ground</th> </tr> </thead> <tbody> <tr> <td>P0138</td> <td style="text-align: center;">72 or 1</td> <td style="text-align: center;">Ground</td> <td>Bank 1</td> </tr> <tr> <td>P0158</td> <td style="text-align: center;">71 or 1</td> <td style="text-align: center;">Ground</td> <td>Bank 2</td> </tr> </tbody> </table> <p style="text-align: right; margin-right: 20px;">MTBL1205</p> <p>Continuity should not exist.</p> <p>3. Also check harness for short to power.</p> <p style="text-align: center;">OK or NG</p>			DTC	Terminals		Bank	ECM	Sensor	P0138	72	1	Bank 1	P0158	71	1	Bank 2	DTC	Terminals		Bank	ECM or Sensor	Ground	P0138	72 or 1	Ground	Bank 1	P0158	71 or 1	Ground	Bank 2
DTC	Terminals			Bank																										
	ECM	Sensor																												
P0138	72	1	Bank 1																											
P0158	71	1	Bank 2																											
DTC	Terminals		Bank																											
	ECM or Sensor	Ground																												
P0138	72 or 1	Ground	Bank 1																											
P0158	71 or 1	Ground	Bank 2																											
OK	▶	GO TO 3.																												
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.																												

3	CHECK HO2S2 GROUND CIRCUIT FOR OPEN AND SHORT	
<p>1. Check harness continuity between HO2S2 terminal 4 and engine ground. Refer to Wiring Diagram.</p> <p>Continuity should exist.</p> <p>2. Also check harness for short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 4.
NG	▶	Repair open circuit or short to power in harness or connectors.

4	CHECK HO2S2 CONNECTORS FOR WATER	
<p>Check heated oxygen sensor connector 2 and harness connector for water.</p> <p>Water should not exist.</p> <p style="text-align: center;">OK or NG</p>		
OK (With CONSULT-II)	▶	GO TO 5.
OK (Without CONSULT-II)	▶	GO TO 6.
NG	▶	Repair or replace harness or connectors.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0138, P0158 HO2S2

Diagnostic Procedure (Cont'd)

5 CHECK HEATED OXYGEN SENSOR 2

E With CONSULT-II

1. Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT-II.

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
COOLAN TEMP/S	XXX °C

SEF174Y

2. Start engine and warm it up to the normal operating temperature.

3. Turn ignition switch "OFF" and wait at least 10 seconds.

4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least one minute under no load.

5. Let engine idle for one minute.


6. Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "HO2S2 (B1)/(B2)" as the monitor item with CONSULT-II.

ACTIVE TEST	
FUEL INJECTION	25 %
MONITOR	
ENG SPEED	XXX rpm
HO2S1 (B1)	XXX V
HO2S2 (B1)	XXX V
HO2S1 MNTR (B1)	RICH
HO2S2 MNTR (B1)	RICH

SEF662Y

7. Check "HO2S2 (B1)/(B2)" at idle speed when adjusting "FUEL INJECTION" to $\pm 25\%$.

(Reference data)

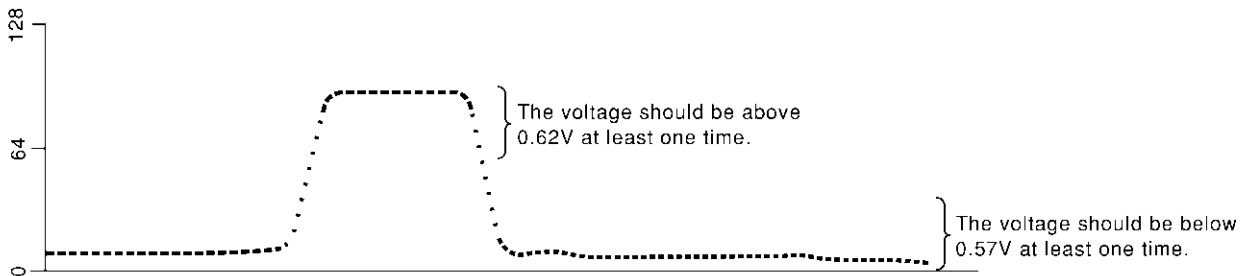

SEF972Y

"HO2S2 (B1)/(B2)" should be above 0.62V at least once when the "FUEL INJECTION" is +25%.

"HO2S2 (B1)/(B2)" should be below 0.57V at least once when the "FUEL INJECTION" is -25%.

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

OK or NG

OK ► GO TO 8.

NG ► GO TO 7.

6	CHECK HEATED OXYGEN SENSOR 2-I						
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to the normal operating temperature. 2. Turn ignition switch "OFF" and wait at least 10 seconds. 3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least one minute under no load. 4. Let engine idle for one minute. 5. Set voltmeter probes between ECM terminal 72 [HO2S2 (B1) signal] or 71 [HO2S2 (B2) signal] and engine ground. <div style="text-align: center; margin: 10px 0;"> </div> <p style="text-align: right; margin-right: 50px;">SEF312XB</p> <ol style="list-style-type: none"> 6. Check the voltage when revving up to 4,000 rpm under no load at least 10 times. (Depress and release accelerator pedal as soon as possible.) The voltage should be above 0.62V at least once during this procedure. If the voltage is above 0.62V at step 6, step 7 is not necessary. 7. Keep vehicle at idling for 10 minutes, then check voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in "D" position. The voltage should be below 0.57V at least once during this procedure. 8. If NG, replace heated oxygen sensor 2. CAUTION: <ul style="list-style-type: none"> ● Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. ● Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant. <p style="text-align: center; margin: 10px 0;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 5px;"> <tr> <td style="width: 20%; padding: 5px;">OK</td> <td style="width: 10%; text-align: center; padding: 5px;">▶</td> <td style="padding: 5px;">GO TO 8.</td> </tr> <tr> <td style="padding: 5px;">NG</td> <td style="text-align: center; padding: 5px;">▶</td> <td style="padding: 5px;">GO TO 7.</td> </tr> </table>		OK	▶	GO TO 8.	NG	▶	GO TO 7.
OK	▶	GO TO 8.					
NG	▶	GO TO 7.					


GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

7	REPLACE HEATED OXYGEN SENSOR 2			
<ol style="list-style-type: none"> 1. Stop vehicle and turn ignition switch "OFF". 2. Check heated oxygen sensor 2 harness protector color. <div style="text-align: center; margin: 10px 0;"> </div> <p style="text-align: center; margin: 10px 0;"> HO2S2 (bank 1): White or Gray HO2S2 (bank 2): Red or Red/Brown </p> <p style="text-align: right; margin-right: 50px;">SEF372ZB</p> <p>CAUTION: Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.</p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 5px;"> <tr> <td style="width: 20%;"></td> <td style="width: 10%; text-align: center;">▶</td> <td>Replace malfunctioning heated oxygen sensor 2.</td> </tr> </table>			▶	Replace malfunctioning heated oxygen sensor 2.
	▶	Replace malfunctioning heated oxygen sensor 2.		

DTC P0138, P0158 HO2S2

Diagnostic Procedure (Cont'd)

8	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	
▶	INSPECTION END

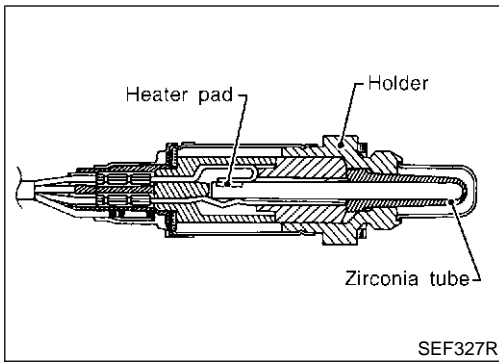

Component Description

NBEC0904

The heated oxygen sensor 2, after three way catalyst (manifold), monitors the oxygen level in the exhaust gas on each bank. Even if switching characteristics of the heated oxygen sensor 1 are shifted, the air fuel ratio is controlled to stoichiometric, by the signal from the heated oxygen sensor 2.

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions.

Under normal conditions the heated oxygen sensor 2 is not used for engine control operation.

CONSULT-II Reference Value in Data Monitor Mode

NBEC0905

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
HO2S2 (B1) HO2S2 (B2)	<ul style="list-style-type: none"> Warm-up condition After keeping engine speed between 3,500 and 4,000 rpm for one minute and at idle for one minute under no load. 	Revsing engine from idle up to 3,000 rpm quickly	0 - 0.3V ↔ Approx. 0.6 - 1.0V
HO2S2 MNTR (B1) HO2S2 MNTR (B2)			LEAN ↔ RICH

ECM Terminals and Reference Value


NBEC0906

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
72	OR	Heated oxygen sensor 2 (bank 1)	<p>[Engine is running]</p> <ul style="list-style-type: none"> Warm-up condition Revsing engine from idle up to 3,000 rpm quickly after the following conditions are met. <ul style="list-style-type: none"> After keeping engine speed between 3,500 and 4,000 rpm for one minute and at idle for one minute under no load. 	0 - Approximately 1.0V
71	OR/L	Heated oxygen sensor 2 (bank 2)	<p>[Engine is running]</p> <ul style="list-style-type: none"> Warm-up condition Revsing engine from idle up to 3,000 rpm quickly after the following conditions are met. <ul style="list-style-type: none"> After keeping engine speed between 3,500 and 4,000 rpm for one minute and at idle for one minute under no load. 	0 - Approximately 1.0V

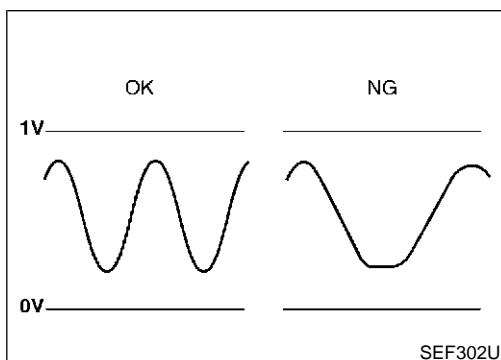

On Board Diagnosis Logic





NBEC0907

The heated oxygen sensor 2 has a much longer switching time between rich and lean than the heated oxygen sensor 1. The oxygen storage capacity before the three way catalyst (manifold) causes the longer switching time. To judge the malfunctions of heated oxygen sensor 2, ECM monitors whether the switching response of the sensor's voltage is faster than specified during the various driving condition such as fuel-cut.

DTC P0139, P0159 HO2S2

On Board Diagnosis Logic (Cont'd)

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0139 0139 (Bank 1) P0159 0159 (Bank 2)	Heated oxygen sensor 2 circuit slow response	It takes more time for the sensor to respond between rich and lean than the specified time.	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Heated oxygen sensor 2 ● Fuel pressure ● Injectors ● Intake air leaks

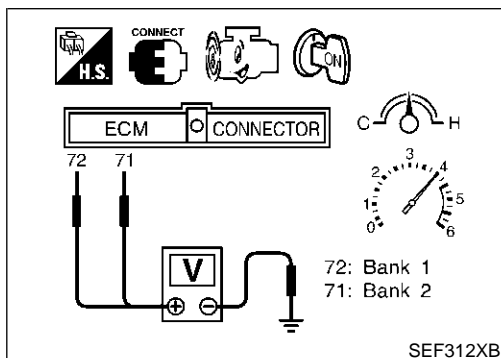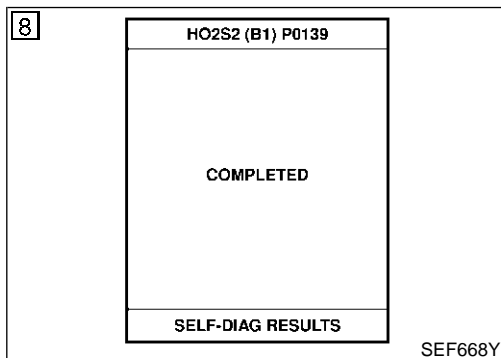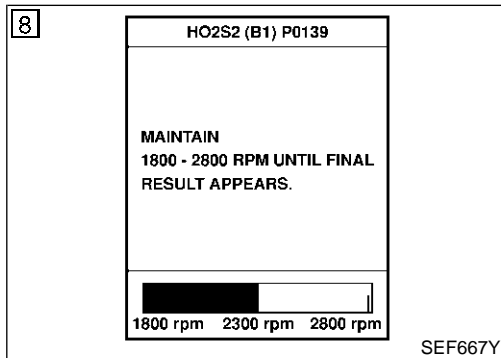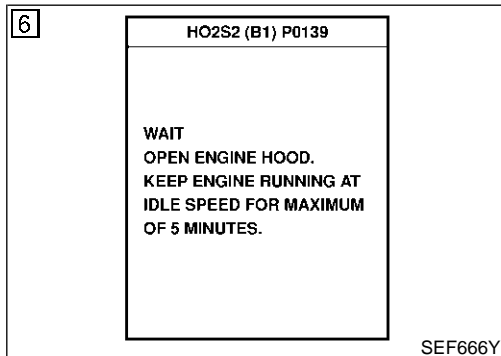

DTC Confirmation Procedure

NBEC0908

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

For the best results, perform "DTC WORK SUPPORT" at a temperature of 0 to 30°C (32 to 86°F).

WITH CONSULT-II

NBEC0908S01

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 10 seconds.
- 3) Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least one minute under no load.
- 4) Let engine idle for one minute.
- 5) Select "HO2S2 (B1) P0139" or "HO2S2 (B2) P0159" of "HO2S2" in "DTC WORK SUPPORT" mode with CONSULT-II and follow the instruction of CONSULT-II.
- 6) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS".
If "NG" is displayed, refer to EC-276, "Diagnostic Procedure".
If "CANNOT BE DIAGNOSED" is displayed, perform the following.
 - a) Turn ignition switch "OFF" and leave the vehicle in a cool place (soak the vehicle).
 - b) Turn ignition switch "ON" and select "COOLANTEMP/S" in "DATA MONITOR" mode with CONSULT-II.
 - c) Start engine and warm it up while monitoring "COOLANTEMP/S" indication on CONSULT-II.
 - d) When "COOLANTEMP/S" indication reaches to 70°C (158°F), go to step 3.

Overall Function Check

NBEC0909

Use this procedure to check the overall function of the rear heated oxygen sensor circuit. During this check, a DTC might not be confirmed.

WITH GST

NBEC0909S01

- 1) Start engine and warm it up to the normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 10 seconds.
- 3) Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least one minute under no load.

DTC P0139, P0159 HO2S2

Overall Function Check (Cont'd)

- 4) Let engine idle for one minute.
- 5) Set voltmeter probes between ECM terminal 72 [HO2S2 (B1) signal] or 71 [HO2S2 (B2) signal] and ground.
- 6) Check the voltage when revving up to 4,000 rpm under no load at least 10 times.
(Depress and release accelerator pedal as soon as possible.)
A change of voltage should be more than 0.06V for 1 second during this procedure.
If the voltage can be confirmed in step 6, step 7 is not necessary.
- 7) Keep vehicle at idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in "D" position with "OD" OFF.
The voltage should change at more than 0.06V for 1 second during this procedure.
- 8) If NG, go to EC-276, "Diagnostic Procedure".

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0139, P0159 HO2S2

Wiring Diagram

Wiring Diagram

=NBEC0910



NBEC0910S01

BANK 1

EC-O2S2B1-01


— : Detectable line for DTC

— : Non-detectable line for DTC

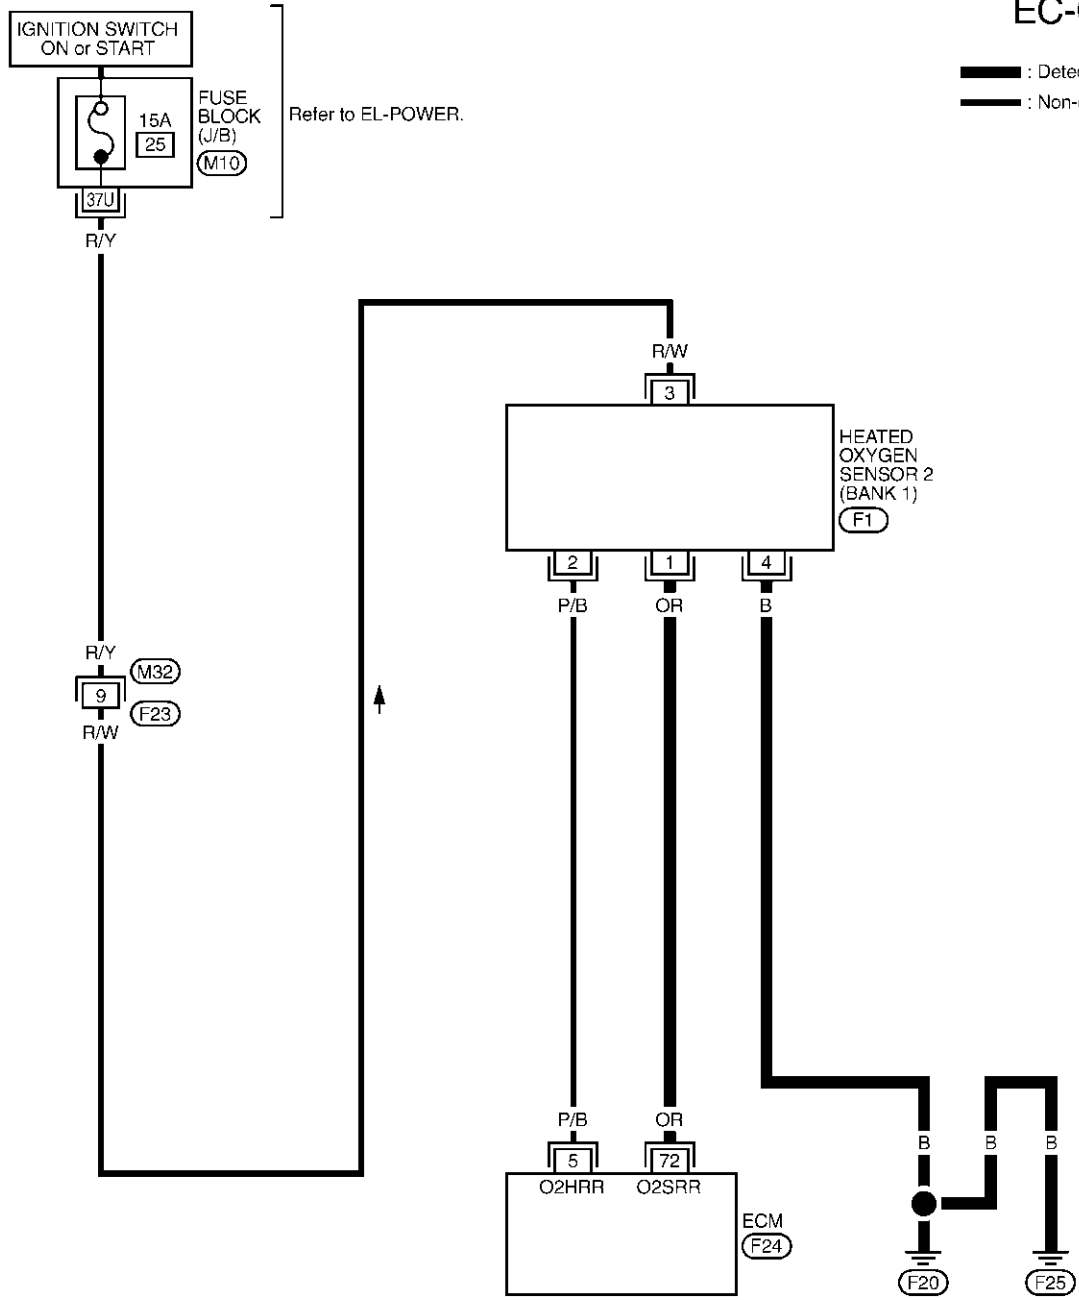

REFER TO THE FOLLOWING.

(M10) - FUSE BLOCK-JUNCTION BOX (J/B)

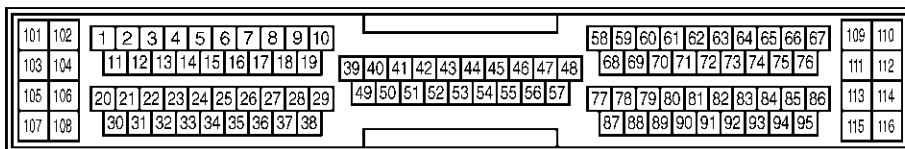

MEC799D

DTC P0139, P0159 HO2S2

Wiring Diagram (Cont'd)

BANK 2

NBEC0910S02

EC-O2S2B2-01

GI

— : Detectable line for DTC

MA

— : Non-detectable line for DTC

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS




BT

HA

SC


EL

IDX

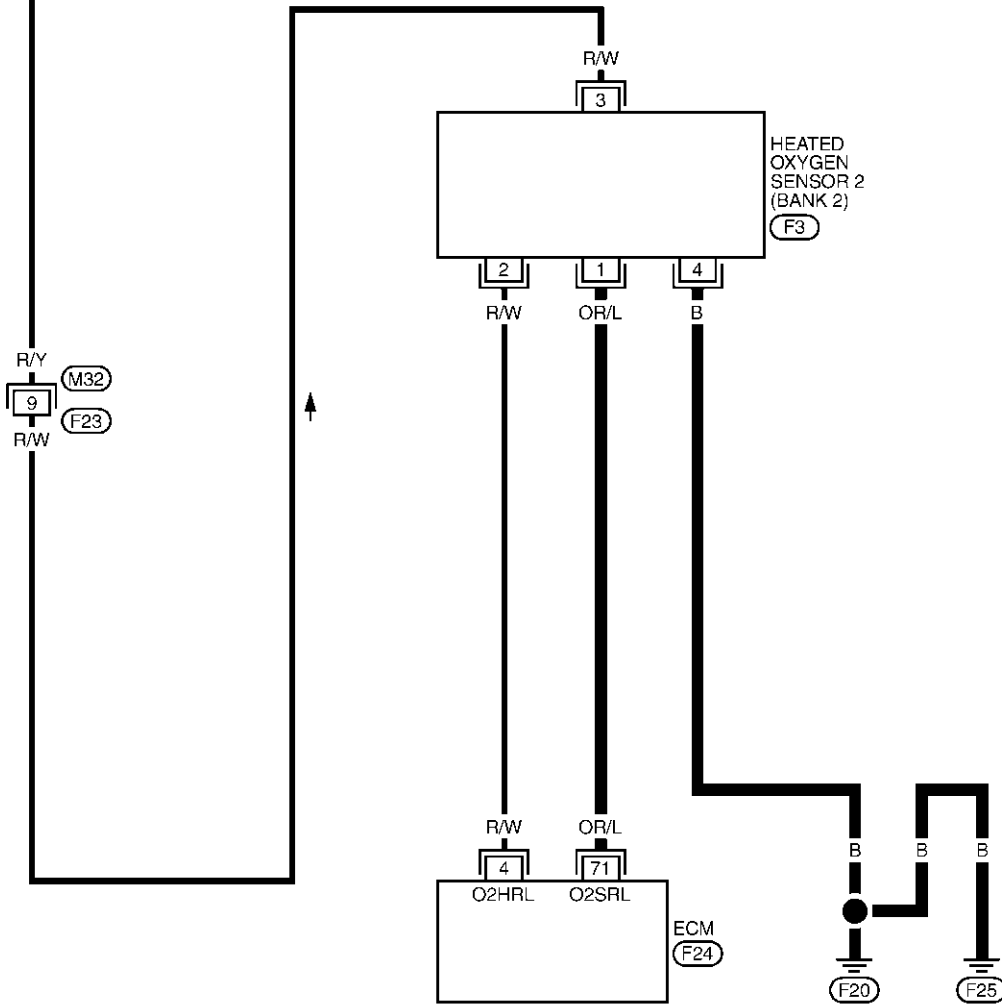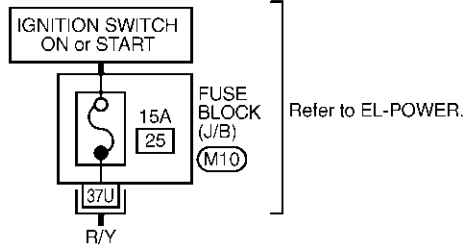

REFER TO THE FOLLOWING.

(M10) - FUSE BLOCK-
JUNCTION BOX (J/B)

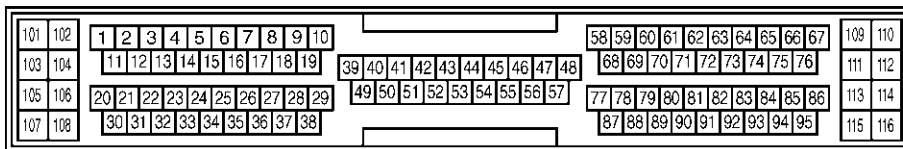


MEC800D

DTC P0139, P0159 HO2S2

Diagnostic Procedure

NBEC0911

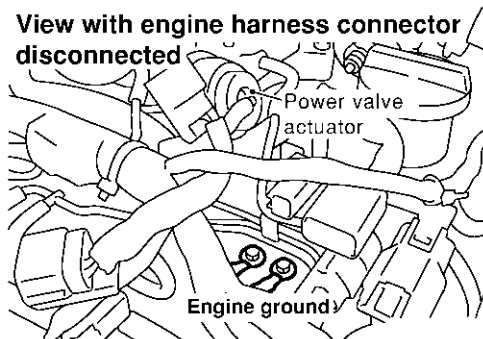
1	RETIGHTEN GROUND SCREWS
<p>1. Turn ignition switch "OFF". 2. Loosen and retighten engine ground screws.</p> <div style="text-align: center;"> <p>View with engine harness connector disconnected</p>  <p>The diagram shows a top-down view of the engine compartment. A power valve actuator is labeled at the top right. Below it, two ground screws are labeled "Engine ground".</p> </div> <p style="text-align: right;">SEF959Y</p>	
<p>▶ GO TO 2.</p>	

2	CLEAR THE SELF-LEARNING DATA									
<p>Ⓔ With CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature. 2. Select "SELF-LEARNING CONT" in "WORK SUPPORT" mode with CONSULT-II. 3. Clear the self-learning control coefficient by touching "CLEAR".</p> <div style="text-align: center;"> <table border="1" style="border-collapse: collapse;"> <tr> <th colspan="3">WORK SUPPORT</th> </tr> <tr> <td style="width: 40%;">SELF-LEARNING CONT</td> <td style="width: 10%;">CLEAR</td> <td style="width: 50%;">B1 100 %</td> </tr> <tr> <td></td> <td></td> <td>B2 100 %</td> </tr> </table> </div> <p style="text-align: right;">SEF968Y</p> <p>4. Run engine for at least 10 minutes at idle speed. Is the 1st trip DTC P0171, P0172, P0174 or P0175 detected? Is it difficult to start engine?</p>		WORK SUPPORT			SELF-LEARNING CONT	CLEAR	B1 100 %			B2 100 %
WORK SUPPORT										
SELF-LEARNING CONT	CLEAR	B1 100 %								
		B2 100 %								
<p>ⓧ Without CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature. 2. Turn ignition switch "OFF". 3. Disconnect mass air flow sensor harness connector, and restart and run engine for at least 5 seconds at idle speed. 4. Stop engine and reconnect mass air flow sensor harness connector. 5. Make sure 1st trip DTC No. P0102 is displayed. 6. Erase the 1st trip DTC memory. Refer to "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION", EC-85. 7. Make sure DTC No. P0000 is displayed. 8. Run engine for at least 10 minutes at idle speed. Is the 1st trip DTC P0171, P0172, P0174 or P0175 detected? Is it difficult to start engine?</p> <p style="text-align: center;">Yes or No</p>										
Yes	▶ Perform trouble diagnosis for DTC P0171, P0174 or P0172, P0175. Refer to EC-282, 290.									
No	▶ GO TO 3.									

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

3 CHECK HO2S2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT



1. Turn ignition switch "OFF".
2. Check heated oxygen sensor 2 harness protector color.

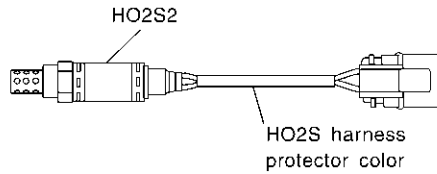

HO2S2 (bank 1): White or Gray
HO2S2 (bank 2): Red or Red/Brown

SEF372ZB

3. Disconnect corresponding heated oxygen sensor 2 harness connector.

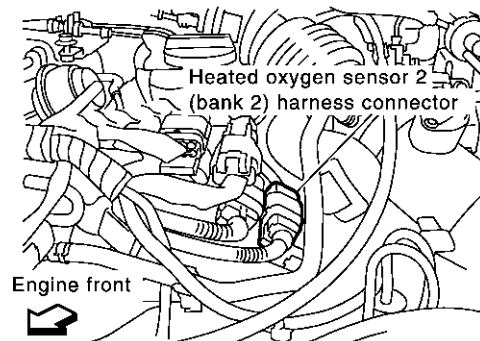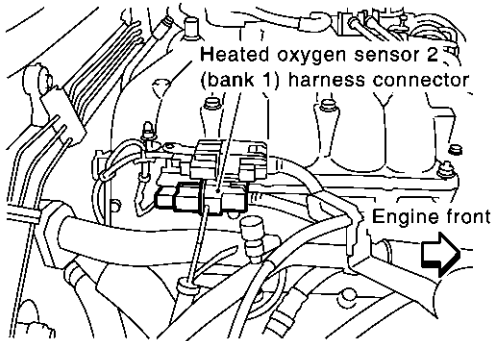

SEF971YA

4. Disconnect ECM harness connector.
5. Check harness continuity between ECM terminal and HO2S2 terminal as follows. Refer to Wiring Diagram.

DTC	Terminals		Bank
	ECM	Sensor	
P0139	72	1	Bank 1
P0159	71	1	Bank 2

MTBL1206

Continuity should exist.

6. Check harness continuity between ECM terminal or HO2S2 terminal and ground as follows. Refer to Wiring Diagram.

DTC	Terminals		Bank
	ECM or Sensor	Ground	
P0139	72 or 1	Ground	Bank 1
P0159	71 or 1	Ground	Bank 2

MTBL1207

Continuity should not exist.

7. Also check harness for short to power.

OK or NG

OK	▶	GO TO 4.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

DTC P0139, P0159 HO2S2

Diagnostic Procedure (Cont'd)

4	CHECK HO2S2 GROUND CIRCUIT FOR OPEN AND SHORT	
1. Check harness continuity between HO2S2 terminal 4 and engine ground. Refer to Wiring Diagram. Continuity should exist. 2. Also check harness for short to power. <p style="text-align: center;">OK or NG</p>		
OK (With CONSULT-II)	▶	GO TO 5.
OK (Without CONSULT-II)	▶	GO TO 6.
NG	▶	Repair open circuit or short to power in harness or connectors

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

5 CHECK HEATED OXYGEN SENSOR 2

E With CONSULT-II

1. Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT-II.

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
COOLAN TEMP/S	XXX °C

SEF174Y


2. Start engine and warm it up to the normal operating temperature.
3. Turn ignition switch "OFF" and wait at least 10 seconds.
4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least one minute under no load.
5. Let engine idle for one minute.
6. Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "HO2S2 (B1)/(B2)" as the monitor item with CONSULT-II.

ACTIVE TEST	
FUEL INJECTION	25 %
MONITOR	
ENG SPEED	XXX rpm
HO2S1 (B1)	XXX V
HO2S2 (B1)	XXX V
HO2S1 MNTR (B1)	RICH
HO2S2 MNTR (B1)	RICH

SEF662Y

7. Check "HO2S2 (B1)/(B2)" at idle speed when adjusting "FUEL INJECTION" to $\pm 25\%$.

(Reference data)

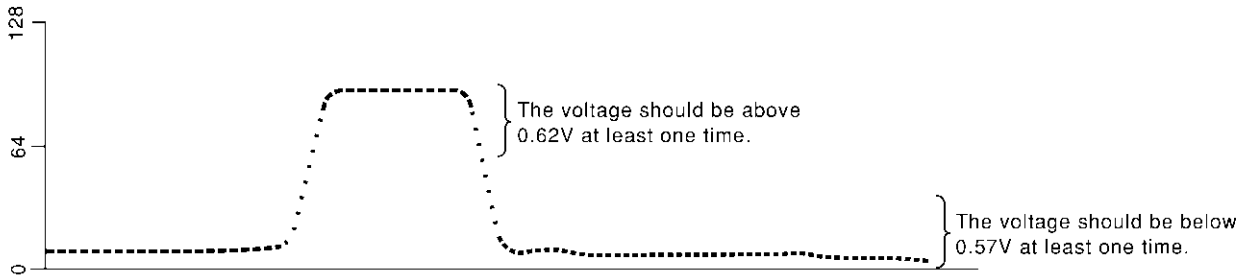

SEF972Y

"HO2S2 (B1)/(B2)" should be above 0.62V at least once when the "FUEL INJECTION" is +25%.

"HO2S2 (B1)/(B2)" should be below 0.57V at least once when the "FUEL INJECTION" is -25%.

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

OK or NG

OK	▶	GO TO 8.
NG	▶	GO TO 7.


DTC P0139, P0159 HO2S2

Diagnostic Procedure (Cont'd)

6 CHECK HEATED OXYGEN SENSOR 2-I

⊗ Without CONSULT-II

1. Start engine and warm it up to the normal operating temperature.
2. Turn ignition switch "OFF" and wait at least 10 seconds.
3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least one minute under no load.
4. Let engine idle for one minute.
5. Set voltmeter probes between ECM terminal 72 [HO2S2 (B1) signal] or 71 [HO2S2 (B2) signal] and engine ground.

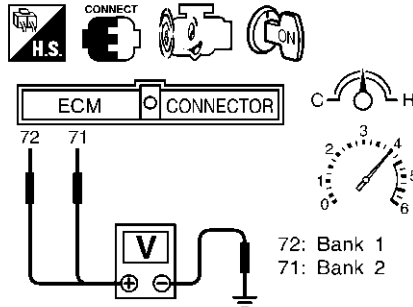

SEF312XB

6. Check the voltage when revving up to 4,000 rpm under no load at least 10 times. (Depress and release accelerator pedal as soon as possible.)
The voltage should be above 0.62V at least once during this procedure.
If the voltage is above 0.62V at step 6, step 7 is not necessary.
7. Keep vehicle at idling for 10 minutes, then check voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in "D" position.
The voltage should be below 0.57V at least once during this procedure.
8. If NG, replace heated oxygen sensor 2.

CAUTION:


- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

OK or NG

OK	▶	GO TO 8.
NG	▶	GO TO 7.

7 REPLACE HEATED OXYGEN SENSOR 2

1. Stop vehicle and turn ignition switch "OFF".
2. Check heated oxygen sensor 2 harness protector color.

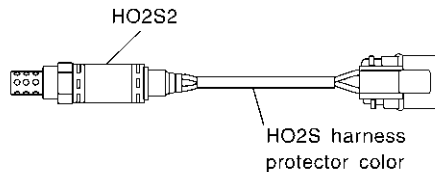

HO2S2 (bank 1): White or Gray
HO2S2 (bank 2): Red or Red/Brown

SEF372ZB

CAUTION:

Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

▶ Replace malfunctioning heated oxygen sensor 2.

DTC P0139, P0159 HO2S2

Diagnostic Procedure (Cont'd)

8	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	
▶	INSPECTION END

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0171, P0174 FUEL INJECTION SYSTEM FUNCTION

On Board Diagnosis Logic


On Board Diagnosis Logic

NBEC0912

With the Air/Fuel Mixture Ratio Self-Learning Control, the actual mixture ratio can be brought closely to the theoretical mixture ratio based on the mixture ratio feedback signal from the heated oxygen sensors 1. The ECM calculates the necessary compensation to correct the offset between the actual and the theoretical ratios. In case the amount of the compensation value is extremely large (The actual mixture ratio is too lean.), the ECM judges the condition as the fuel injection system malfunction and lights up the MIL (2 trip detection logic).

Sensor	Input Signal to ECM	ECM function	Actuator
Heated oxygen sensors 1	Density of oxygen in exhaust gas (Mixture ratio feedback signal)	Fuel injection control	Injectors

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0171 0171 (Bank 1) P0174 0174 (Bank 2)	Fuel injection system too lean	Fuel injection system does not operate Properly, the amount of mixture ratio compensation is too large. (The mixture ratio is too lean.)	<ul style="list-style-type: none"> ● Intake air leaks ● Heated oxygen sensor 1 ● Injectors ● Exhaust gas leaks ● Incorrect fuel pressure ● Lack of fuel ● Mass air flow sensor

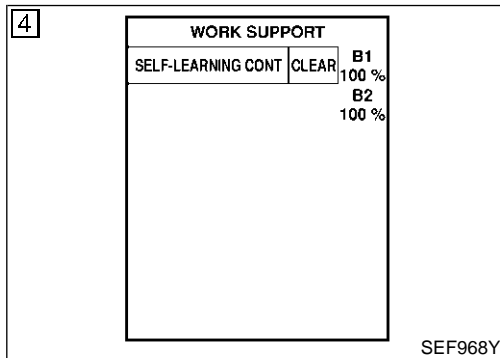

DTC Confirmation Procedure

NBEC0913

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.


Ⓔ WITH CONSULT-II

NBEC0913S01

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 10 seconds.
- 3) Turn ignition switch "ON" and select "SELF-LEARN CONTROL" in "WORK SUPPORT" mode with CONSULT-II.
- 4) Clear the self-learning control coefficient by touching "CLEAR".
- 5) Select "DATA MONITOR" mode with CONSULT-II.
- 6) Start engine again and let it idle for at least 10 minutes. The 1st trip DTC P0171 or P0174 should be detected at this stage, if a malfunction exists. If so, go to "Diagnostic Procedure", EC-286.
- 7) If it is difficult to start engine at step 6, the fuel injection system has a malfunction, too.
- 8) Crank engine while depressing accelerator pedal. If engine starts, go to "Diagnostic Procedure", EC-286. If engine does not start, check exhaust and intake air leak visually.

DTC P0171, P0174 FUEL INJECTION SYSTEM FUNCTION

DTC Confirmation Procedure (Cont'd)

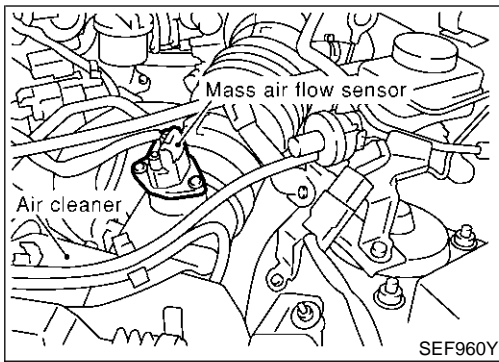

WITH GST

NBEC0913S02

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 10 seconds.
- 3) Disconnect mass air flow sensor harness connector. Then restart and run engine for at least 5 seconds at idle speed.
- 4) Stop engine and reconnect mass air flow sensor harness connector.
- 5) Select "MODE 7" with GST. Make sure 1st trip DTC P0102 is detected.
- 6) Select "MODE 4" with GST and erase the 1st trip DTC P0102.
- 7) Start engine again and let it idle for at least 10 minutes.
- 8) Select "MODE 7" with GST. The 1st trip DTC P0171 or P0174 should be detected at this stage, if a malfunction exists. If so, go to "Diagnostic Procedure", EC-286.
- 9) If it is difficult to start engine at step 7, the fuel injection system has a malfunction.
- 10) Crank engine while depressing accelerator pedal. If engine starts, go to "Diagnostic Procedure", EC-286. If engine does not start, check exhaust and intake air leak visually.

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0171, P0174 FUEL INJECTION SYSTEM FUNCTION

Wiring Diagram

Wiring Diagram



NBEC0914

NBEC0914S01

BANK 1


EC-FUELB1-01

— : Detectable line for DTC
— : Non-detectable line for DTC

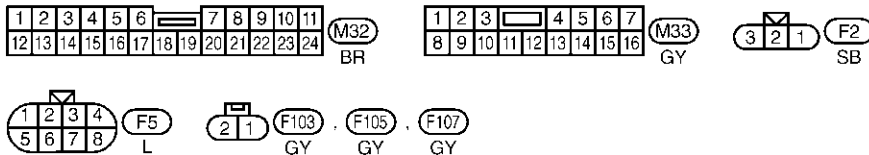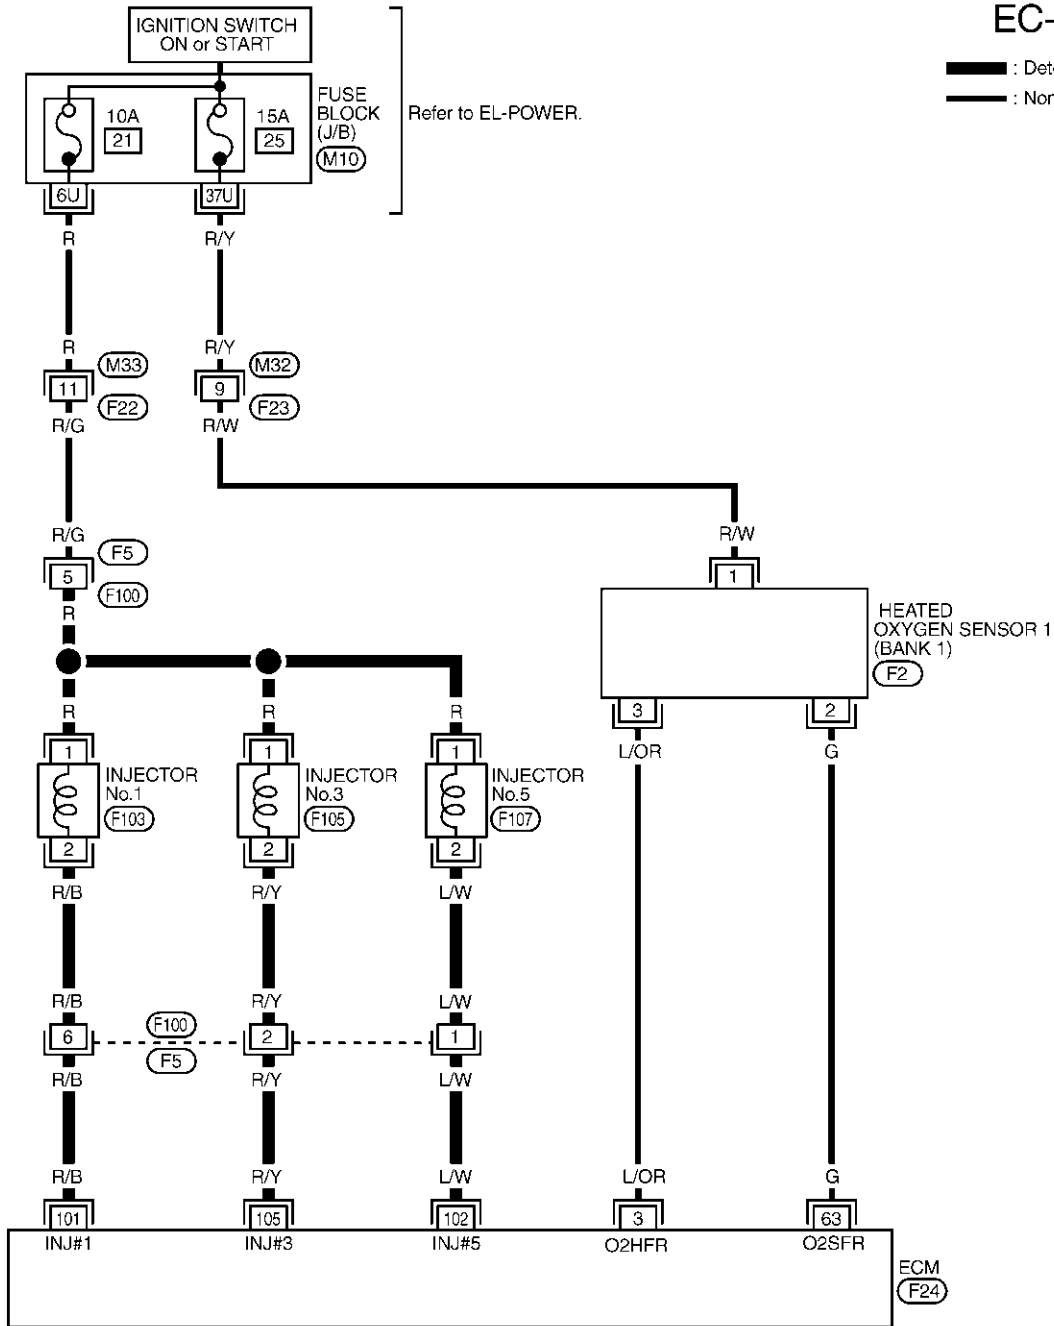

REFER TO THE FOLLOWING.

(M10) - FUSE BLOCK-
JUNCTION BOX (J/B)

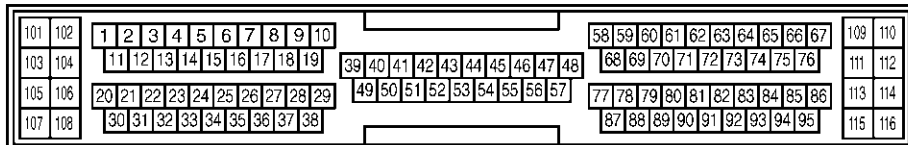

MEC803D

DTC P0171, P0174 FUEL INJECTION SYSTEM FUNCTION


Wiring Diagram (Cont'd)

BANK 2


NBEC0914S02

EC-FUELB2-01

: Detectable line for DTC
 : Non-detectable line for DTC

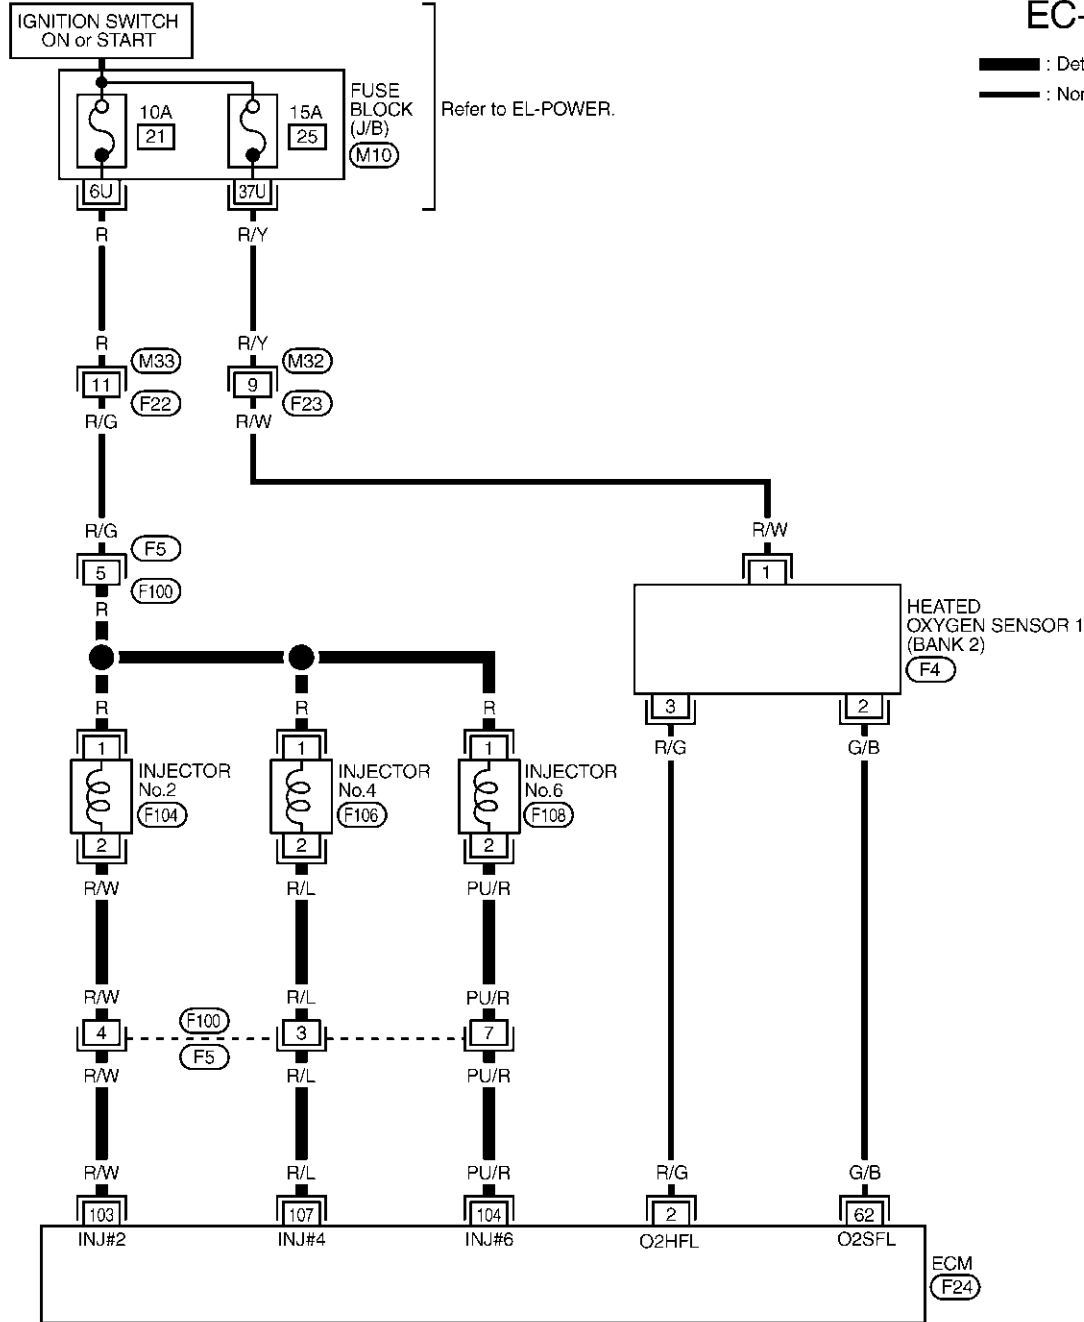

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

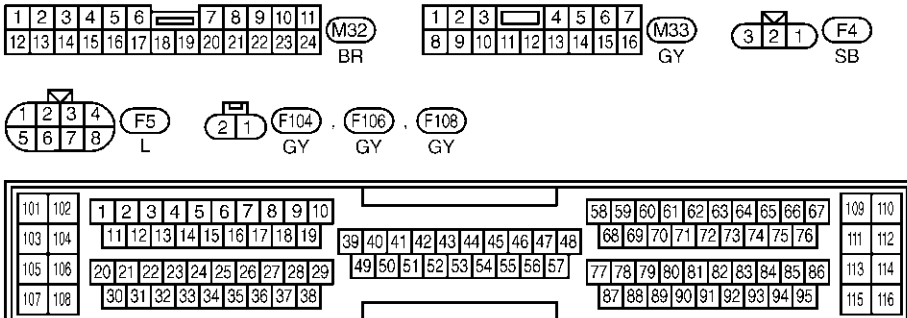

REFER TO THE FOLLOWING.
 (M10) - FUSE BLOCK-
 JUNCTION BOX (J/B)



DTC P0171, P0174 FUEL INJECTION SYSTEM FUNCTION

Diagnostic Procedure

Diagnostic Procedure

NBEC0915

1	CHECK EXHAUST AIR LEAK	
<p>1. Start engine and run it at idle. 2. Listen for an exhaust air leak before three way catalyst (manifold).</p>		
<p style="text-align: center;"> ➡ : Exhaust gas </p>		
SEC635D		
OK or NG		
OK	▶	GO TO 2.
NG	▶	Repair or replace.

2	CHECK FOR INTAKE AIR LEAK	
Listen for an intake air leak after the mass air flow sensor.		
OK or NG		
OK	▶	GO TO 3.
NG	▶	Repair or replace.

3	CHECK HEATED OXYGEN SENSOR 1 CIRCUIT FOR OPEN AND SHORT															
<p>1. Turn ignition switch "OFF". 2. Disconnect corresponding heated oxygen sensor 1 harness connector. 3. Disconnect ECM harness connector. 4. Check harness continuity between ECM terminal and HO2S1 terminal as follows. Refer to Wiring Diagram.</p>																
<table border="1"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM</th> <th>Sensor</th> </tr> </thead> <tbody> <tr> <td>P0171</td> <td>63</td> <td>2</td> <td>Bank 1</td> </tr> <tr> <td>P0174</td> <td>62</td> <td>2</td> <td>Bank 2</td> </tr> </tbody> </table>			DTC	Terminals		Bank	ECM	Sensor	P0171	63	2	Bank 1	P0174	62	2	Bank 2
DTC	Terminals			Bank												
	ECM	Sensor														
P0171	63	2	Bank 1													
P0174	62	2	Bank 2													
MTBL1208																
<p>Continuity should exist.</p> <p>5. Check harness continuity between ECM terminal or HO2S1 terminal and ground as follows. Refer to Wiring Diagram.</p>																
<table border="1"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM or Sensor</th> <th>Ground</th> </tr> </thead> <tbody> <tr> <td>P0171</td> <td>63 or 2</td> <td>Ground</td> <td>Bank 1</td> </tr> <tr> <td>P0174</td> <td>62 or 2</td> <td>Ground</td> <td>Bank 2</td> </tr> </tbody> </table>			DTC	Terminals		Bank	ECM or Sensor	Ground	P0171	63 or 2	Ground	Bank 1	P0174	62 or 2	Ground	Bank 2
DTC	Terminals			Bank												
	ECM or Sensor	Ground														
P0171	63 or 2	Ground	Bank 1													
P0174	62 or 2	Ground	Bank 2													
MTBL1209																
<p>Continuity should not exist.</p> <p>6. Also check harness for short to power.</p>																
OK or NG																
OK	▶	GO TO 4.														
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.														

DTC P0171, P0174 FUEL INJECTION SYSTEM FUNCTION



Diagnostic Procedure (Cont'd)

4	CHECK FUEL PRESSURE	
	<p>1. Release fuel pressure to zero. Refer to EC-51.</p> <p>2. Install fuel pressure gauge and check fuel pressure. Refer to EC-51.</p> <p>At idling:</p> <p style="padding-left: 20px;">When fuel pressure regulator valve vacuum hose is connected. 235 kPa (2.4 kg/cm², 34 psi)</p> <p style="padding-left: 20px;">When fuel pressure regulator valve vacuum hose is disconnected. 294 kPa (3.0 kg/cm², 43 psi)</p> <p style="text-align: center;">OK or NG</p>	
OK	▶	GO TO 6.
NG	▶	GO TO 5.

GI
MA
EM
LC

5	DETECT MALFUNCTIONING PART	
	<p>Check the following.</p> <ul style="list-style-type: none"> ● Fuel pump and circuit (Refer to EC-696.) ● Fuel pressure regulator (Refer to EC-52.) ● Fuel lines (Refer to MA-17, "Checking Fuel Lines".) ● Fuel filter for clogging 	
	▶	Repair or replace.

EC
FE
AT

6	CHECK MASS AIR FLOW SENSOR	
	<p> With CONSULT-II</p> <p>1. Install all removed parts.</p> <p>2. Check "MASS AIR FLOW" in "DATA MONITOR" mode with CONSULT-II.</p> <p style="padding-left: 20px;">2.0 - 6.0 g-m/sec: at idling</p> <p style="padding-left: 20px;">7.0 - 20.0 g-m/sec: at 2,500 rpm</p>	
	<p> With GST</p> <p>1. Install all removed parts.</p> <p>2. Check mass air flow sensor signal in MODE 1 with GST.</p> <p style="padding-left: 20px;">2.0 - 6.0 g-m/sec: at idling</p> <p style="padding-left: 20px;">7.0 - 20.0 g-m/sec: at 2,500 rpm</p> <p style="text-align: center;">OK or NG</p>	
OK	▶	GO TO 7.
NG	▶	Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or engine grounds. Refer to EC-189.

TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0171, P0174 FUEL INJECTION SYSTEM FUNCTION

Diagnostic Procedure (Cont'd)

7 CHECK FUNCTION OF INJECTORS

With CONSULT-II

1. Start engine.
2. Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT-II.


ACTIVE TEST	
POWER BALANCE	
MONITOR	
ENG SPEED	XXX rpm
MAS AIF SE-B1	XXX V
IACV-AAC/V	XXX step

SEF070Y

3. Make sure that each circuit produces a momentary engine speed drop.

Without CONSULT-II

1. Start engine.
2. Listen to each injector operating sound.

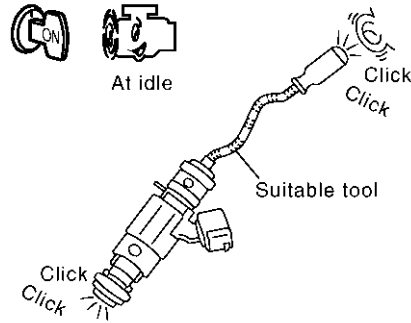

PBIB1725E

Clicking noise should be heard.

OK or NG

OK



GO TO 8.


NG



Perform trouble diagnosis for "INJECTORS", EC-687.

DTC P0171, P0174 FUEL INJECTION SYSTEM FUNCTION

Diagnostic Procedure (Cont'd)

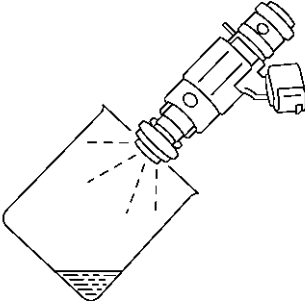8	CHECK INJECTOR	
<ol style="list-style-type: none"> 1. Confirm that the engine is cooled down and there are no fire hazards near the vehicle. 2. Turn ignition switch "OFF". 3. Disconnect injector harness connectors. 4. Remove injector gallery assembly. Refer to EC-53. Keep fuel hose and all injectors connected to injector gallery. 5. For DTC P0171, reconnect injector harness connectors on bank 1. For DTC P0174, reconnect injector harness connectors on bank 2. 6. Disconnect all ignition coil harness connectors. 7. Prepare pans or saucers under each injector. 8. Crank engine for about 3 seconds. For DTC P0171, make sure that fuel sprays out from injectors on bank 1. For DTC P0174, make sure that fuel sprays out from injectors on bank 2. 		
		
<p>Fuel should be sprayed evenly for each injector.</p> <p>OK or NG</p>		
OK	▶	GO TO 9.
NG	▶	Replace injectors from which fuel does not spray out. Always replace O-ring with new ones.

9	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.		
▶		INSPECTION END

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P0172, P0175 FUEL INJECTION SYSTEM FUNCTION

On Board Diagnosis Logic


On Board Diagnosis Logic

NBEC0916

With the Air/Fuel Mixture Ratio Self-Learning Control, the actual mixture ratio can be brought closely to the theoretical mixture ratio based on the mixture ratio feedback signal from the heated oxygen sensors 1. The ECM calculates the necessary compensation to correct the offset between the actual and the theoretical ratios. In case the amount of the compensation value is extremely large (The actual mixture ratio is too rich.), the ECM judges the condition as the fuel injection system malfunction and lights up the MIL (2 trip detection logic).

Sensor	Input Signal to ECM	ECM function	Actuator
Heated oxygen sensors 1	Density of oxygen in exhaust gas (Mixture ratio feedback signal)	Fuel injection control	Injectors

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0172 0172 (Bank 1) P0175 0175 (Bank 2)	Fuel injection system too rich	Fuel injection system does not operate properly, the amount of mixture ratio compensation is too large. (The mixture ratio is too rich.)	<ul style="list-style-type: none"> ● Heated oxygen sensor 1 ● Injectors ● Exhaust gas leaks ● Incorrect fuel pressure ● Mass air flow sensor

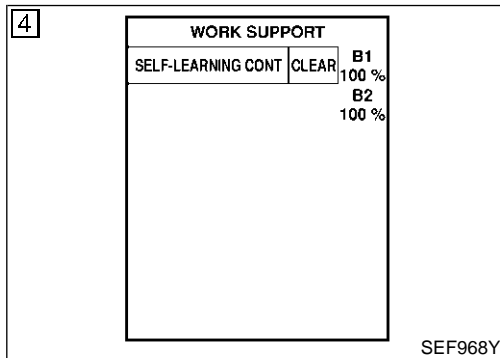

DTC Confirmation Procedure

NBEC0917

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II


NBEC0917S01

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 10 seconds.
- 3) Turn ignition switch "ON" and select "SELF-LEARN CONTROL" in "WORK SUPPORT" mode with CONSULT-II.
- 4) Clear the self-learning control coefficient by touching "CLEAR".
- 5) Select "DATA MONITOR" mode with CONSULT-II.
- 6) Start engine again and let it idle for at least 10 minutes. The 1st trip DTC P0172, P0175 should be detected at this stage, if a malfunction exists. If so, go to "Diagnostic Procedure", EC-294.
- 7) If it is difficult to start engine at step 6, the fuel injection system has a malfunction, too.
- 8) Crank engine while depressing accelerator pedal. If engine starts, go to "Diagnostic Procedure", EC-294. If engine does not start, remove ignition plugs and check for fouling, etc.

EC-290

DTC P0172, P0175 FUEL INJECTION SYSTEM FUNCTION

DTC Confirmation Procedure (Cont'd)

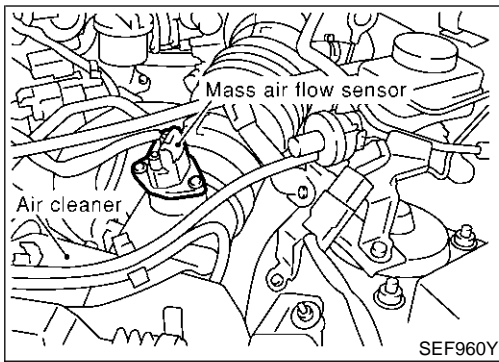

WITH GST

NBEC0917S02

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 10 seconds.
- 3) Disconnect mass air flow sensor harness connector. Then restart and run engine for at least 5 seconds at idle speed.
- 4) Stop engine and reconnect mass air flow sensor harness connector.
- 5) Select "MODE 7" with GST. Make sure 1st trip DTC P0102 is detected.
- 6) Select "MODE 4" with GST and erase the 1st trip DTC P0102.
- 7) Start engine again and let it idle for at least 10 minutes.
- 8) Select "MODE 7" with GST. The 1st trip DTC P0172 or P0175 should be detected at this stage, if a malfunction exists. If so, go to "Diagnostic Procedure", EC-294.
- 9) If it is difficult to start engine at step 7, the fuel injection system has a malfunction.
- 10) Crank engine while depressing accelerator pedal. If engine starts, go to "Diagnostic Procedure", EC-294. If engine does not start, remove ignition plugs and check for fouling, etc.

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0172, P0175 FUEL INJECTION SYSTEM FUNCTION

Wiring Diagram

Wiring Diagram



NBEC0918

NBEC0918S01

BANK 1


EC-FUELB1-01

— : Detectable line for DTC
 — : Non-detectable line for DTC

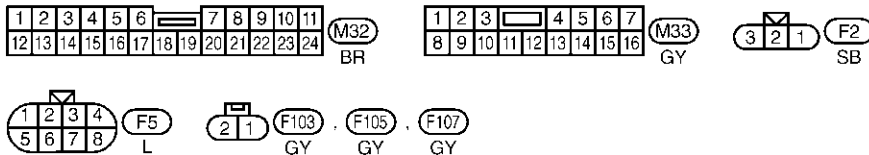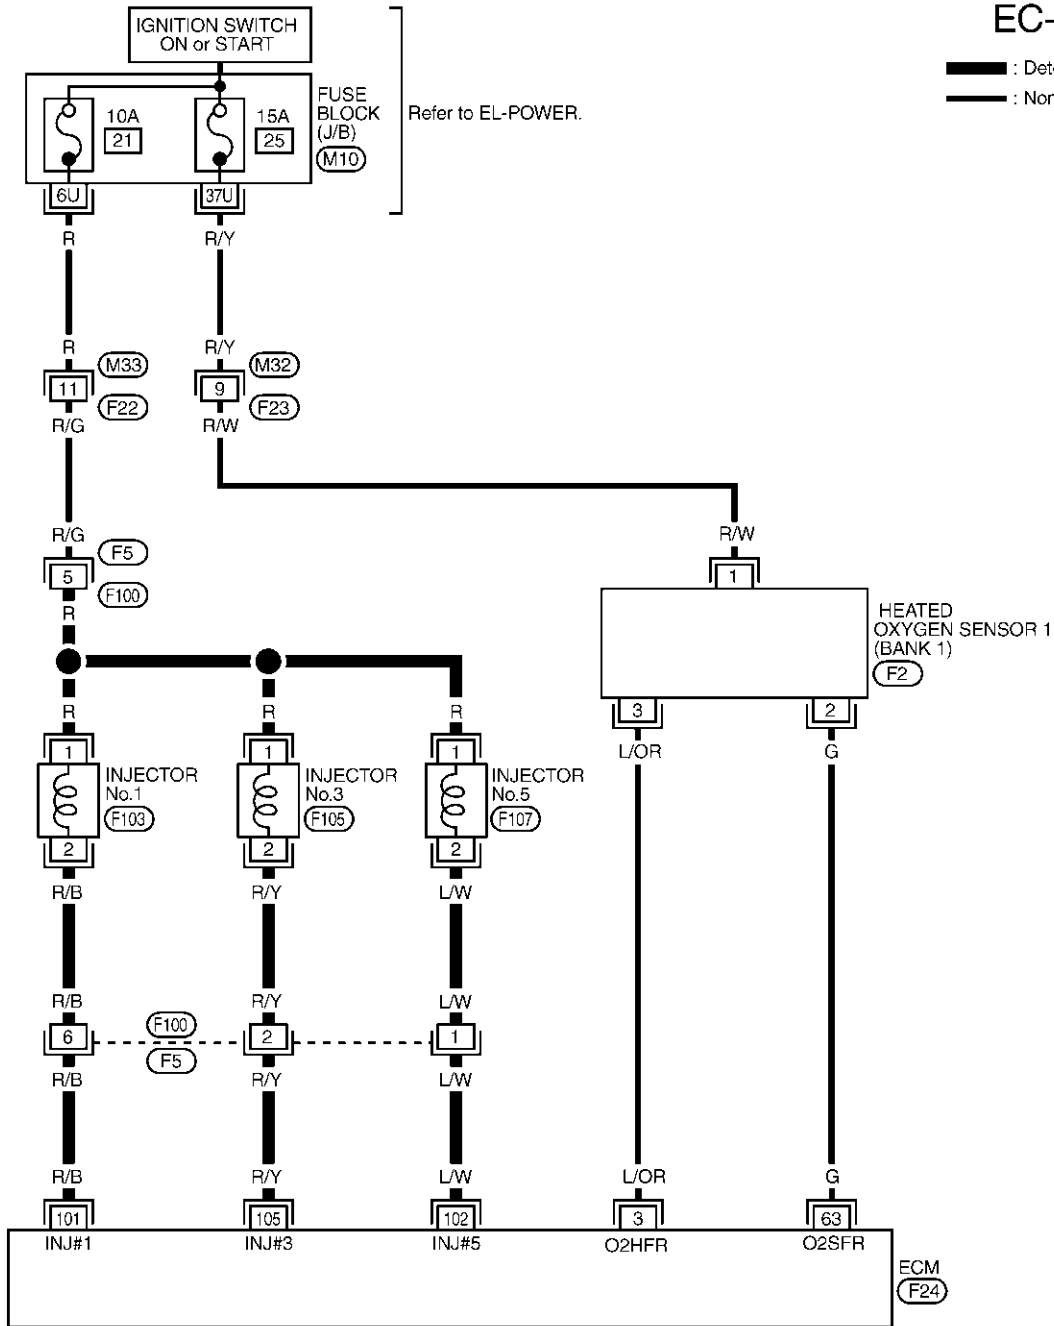

REFER TO THE FOLLOWING.

(M10) - FUSE BLOCK-
 JUNCTION BOX (J/B)

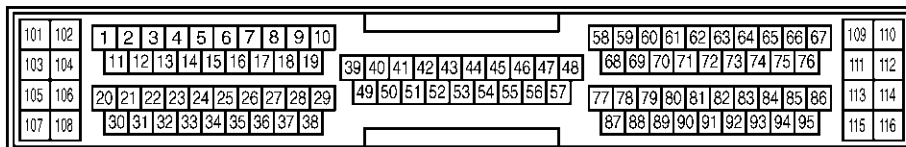

MEC803D

DTC P0172, P0175 FUEL INJECTION SYSTEM FUNCTION


Wiring Diagram (Cont'd)

BANK 2


NBEC0918S02

EC-FUELB2-01

: Detectable line for DTC
 : Non-detectable line for DTC

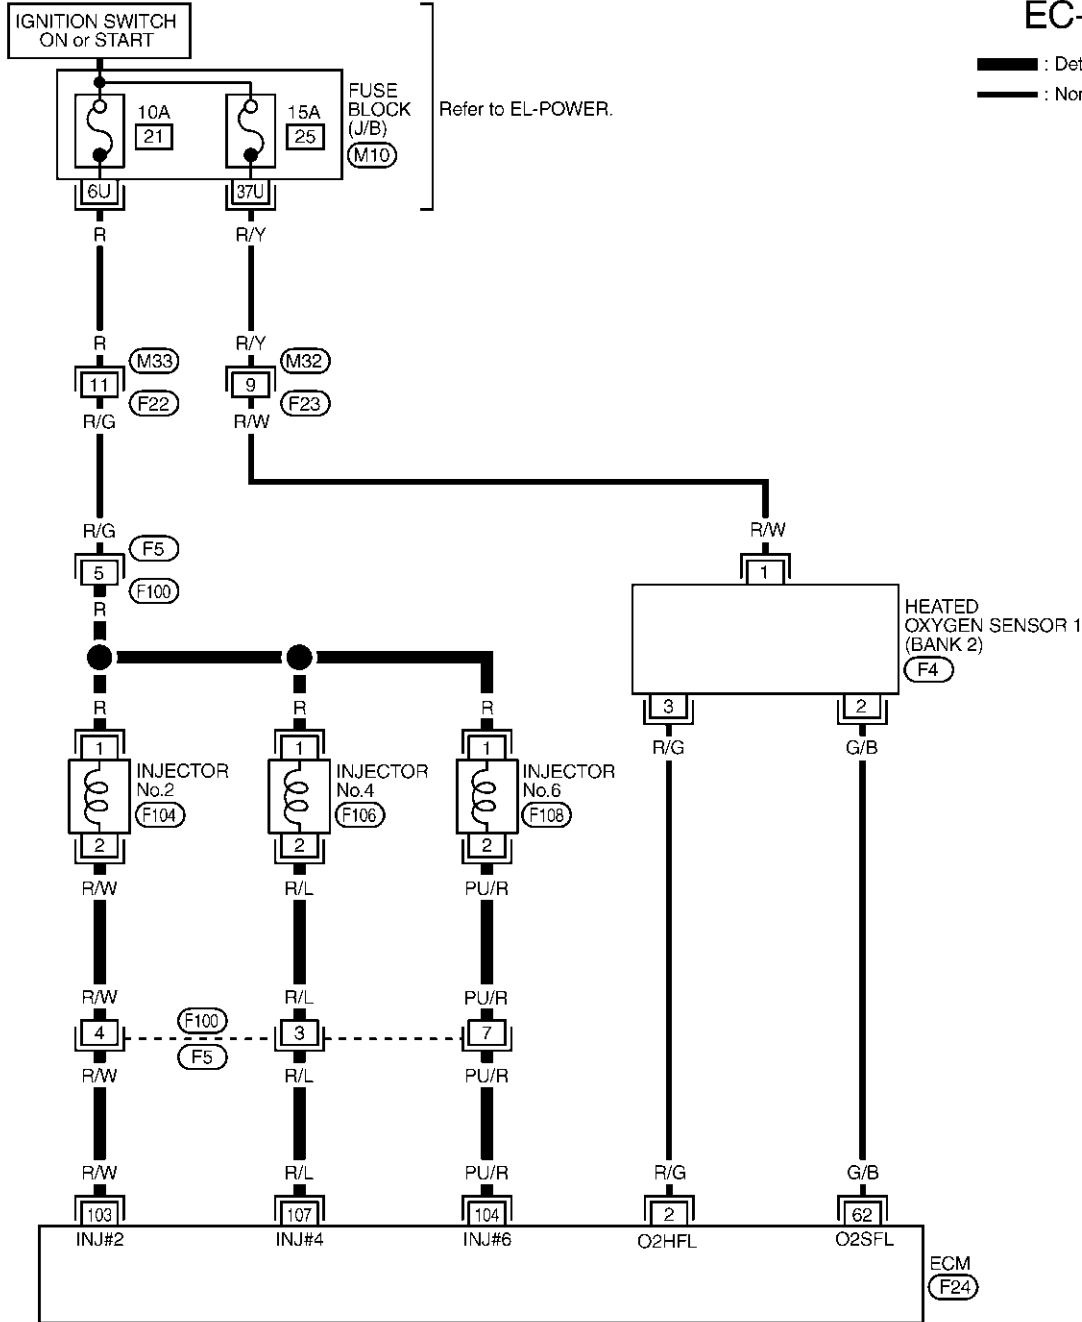

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

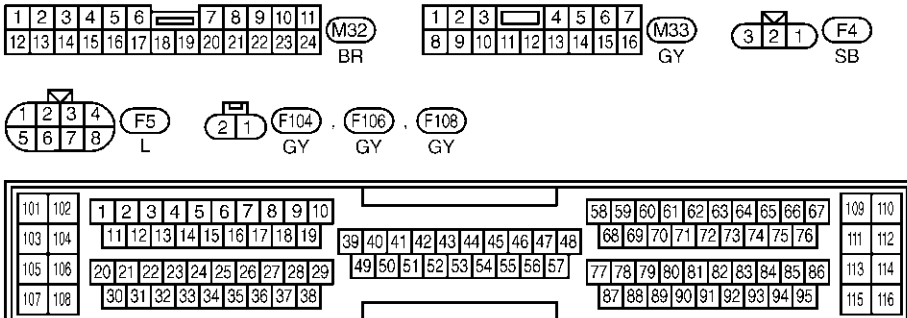

MEC804D

DTC P0172, P0175 FUEL INJECTION SYSTEM FUNCTION

Diagnostic Procedure

Diagnostic Procedure

NBEC0919

1	CHECK EXHAUST AIR LEAK	
<p>1. Start engine and run it at idle. 2. Listen for an exhaust air leak before three way catalyst (manifold).</p>		
<p style="text-align: center;"> ➡ : Exhaust gas </p>		
SEC635D		
OK or NG		
OK	▶	GO TO 2.
NG	▶	Repair or replace.

2	CHECK FOR INTAKE AIR LEAK	
Listen for an intake air leak after the mass air flow sensor.		
OK or NG		
OK	▶	GO TO 3.
NG	▶	Repair or replace.

3	CHECK HEATED OXYGEN SENSOR 1 CIRCUIT FOR OPEN AND SHORT															
<p>1. Turn ignition switch "OFF". 2. Disconnect corresponding heated oxygen sensor 1 harness connector. 3. Disconnect ECM harness connector. 4. Check harness continuity between ECM terminal and HO2S1 terminal as follows. Refer to Wiring Diagram.</p>																
<table border="1"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM</th> <th>Sensor</th> </tr> </thead> <tbody> <tr> <td>P0172</td> <td>63</td> <td>2</td> <td>Bank 1</td> </tr> <tr> <td>P0175</td> <td>62</td> <td>2</td> <td>Bank 2</td> </tr> </tbody> </table>			DTC	Terminals		Bank	ECM	Sensor	P0172	63	2	Bank 1	P0175	62	2	Bank 2
DTC	Terminals			Bank												
	ECM	Sensor														
P0172	63	2	Bank 1													
P0175	62	2	Bank 2													
MTBL1210																
<p>Continuity should exist.</p> <p>5. Check harness continuity between ECM terminal or HO2S1 terminal and ground as follows. Refer to Wiring Diagram.</p>																
<table border="1"> <thead> <tr> <th rowspan="2">DTC</th> <th colspan="2">Terminals</th> <th rowspan="2">Bank</th> </tr> <tr> <th>ECM or Sensor</th> <th>Ground</th> </tr> </thead> <tbody> <tr> <td>P0172</td> <td>63 or 2</td> <td>Ground</td> <td>Bank 1</td> </tr> <tr> <td>P0175</td> <td>62 or 2</td> <td>Ground</td> <td>Bank 2</td> </tr> </tbody> </table>			DTC	Terminals		Bank	ECM or Sensor	Ground	P0172	63 or 2	Ground	Bank 1	P0175	62 or 2	Ground	Bank 2
DTC	Terminals			Bank												
	ECM or Sensor	Ground														
P0172	63 or 2	Ground	Bank 1													
P0175	62 or 2	Ground	Bank 2													
MTBL1211																
<p>Continuity should not exist.</p> <p>6. Also check harness for short to power.</p>																
OK or NG																
OK	▶	GO TO 4.														
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.														

DTC P0172, P0175 FUEL INJECTION SYSTEM FUNCTION



Diagnostic Procedure (Cont'd)

4	CHECK FUEL PRESSURE	
	<p>1. Release fuel pressure to zero. Refer to EC-51.</p> <p>2. Install fuel pressure gauge and check fuel pressure. Refer to EC-51.</p> <p>At idling:</p> <p style="padding-left: 20px;">When fuel pressure regulator valve vacuum hose is connected. 235 kPa (2.4 kg/cm², 34 psi)</p> <p style="padding-left: 20px;">When fuel pressure regulator valve vacuum hose is disconnected. 294 kPa (3.0 kg/cm², 43 psi)</p> <p style="text-align: center;">OK or NG</p>	
OK	▶	GO TO 6.
NG	▶	GO TO 5.

GI
MA
EM
LC

5	DETECT MALFUNCTIONING PART	
	<p>Check the following.</p> <ul style="list-style-type: none"> ● Fuel pump and circuit (Refer to EC-696.) ● Fuel pressure regulator (Refer to EC-52.) 	
	▶	Repair or replace.

EC
FE
AT

6	CHECK MASS AIR FLOW SENSOR	
	<p> With CONSULT-II</p> <p>1. Install all removed parts.</p> <p>2. Check "MASS AIR FLOW" in "DATA MONITOR" mode with CONSULT-II.</p> <p style="padding-left: 20px;">2.0 - 6.0 g-m/sec: at idling</p> <p style="padding-left: 20px;">7.0 - 20.0 g-m/sec: at 2,500 rpm</p>	
	<p> With GST</p> <p>1. Install all removed parts.</p> <p>2. Check mass air flow sensor signal in MODE 1 with GST.</p> <p style="padding-left: 20px;">2.0 - 6.0 g-m/sec: at idling</p> <p style="padding-left: 20px;">7.0 - 20.0 g-m/sec: at 2,500 rpm</p> <p style="text-align: center;">OK or NG</p>	
OK	▶	GO TO 7.
NG	▶	Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or engine grounds. Refer to EC-189.

TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0172, P0175 FUEL INJECTION SYSTEM FUNCTION

Diagnostic Procedure (Cont'd)

7 CHECK FUNCTION OF INJECTORS

ⓔ With CONSULT-II

1. Start engine.
2. Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT-II.


ACTIVE TEST	
POWER BALANCE	
MONITOR	
ENG SPEED	XXX rpm
MAS AIF SE-B1	XXX V
IACV-AAC/V	XXX step

SEF070Y

3. Make sure that each circuit produces a momentary engine speed drop.

ⓧ Without CONSULT-II

1. Start engine.
2. Listen to each injector operating sound.

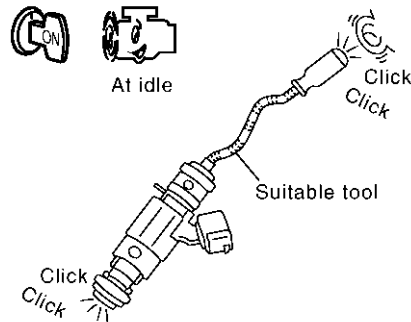

PBIB1725E

Clicking noise should be heard.

OK or NG

OK	▶	GO TO 8.
NG	▶	Perform trouble diagnosis for "INJECTORS", EC-688.

8 CHECK INJECTOR

1. Remove injector assembly. Refer to EC-53.
Keep fuel hose and all injectors connected to injector gallery.
2. Confirm that the engine is cooled down and there are no fire hazards near the vehicle.
3. Disconnect all injector harness connectors.
4. Disconnect all ignition coil harness connectors.
5. Prepare pans or saucers under each injectors.
6. Crank engine for about 3 seconds.
Make sure fuel does not drip from injector.

OK or NG

OK (Does not drip.)	▶	GO TO 9.
NG (Drips.)	▶	Replace the injectors from which fuel is dripping. Always replace O-ring with new one.



9 CHECK INTERMITTENT INCIDENT

Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.

▶ INSPECTION END

DTC P0181 FTT SENSOR

Component Description

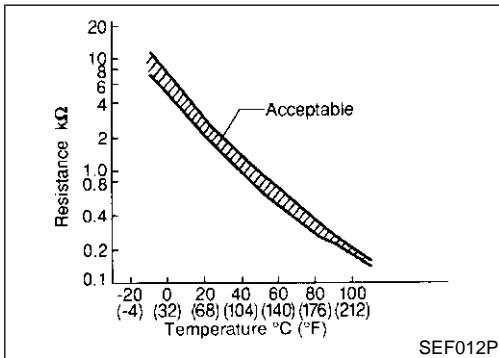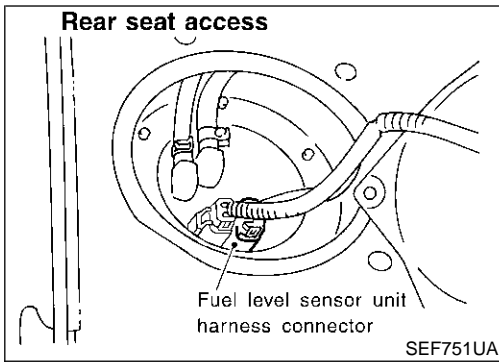

Component Description

NBEC0773

The fuel tank temperature sensor is used to detect the fuel temperature inside the fuel tank. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the fuel temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

<Reference data>

Fuel temperature °C (°F)	Voltage* V	Resistance kΩ
20 (68)	3.5	2.3 - 2.7
50 (122)	2.2	0.79 - 0.90

*: These data are reference values and are measured between ECM terminal 92 (Fuel tank temperature sensor) and body ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

On Board Diagnosis Logic

NBEC0774

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0181 0181	Fuel tank temperature sensor circuit range/performance	Rationally incorrect voltage from the sensor is sent to ECM, compared with the voltage signals from engine coolant temperature sensor and intake air temperature sensor.	<ul style="list-style-type: none"> • Harness or connectors (The sensor circuit is open or shorted.) • Fuel tank temperature sensor

DTC Confirmation Procedure


NBEC0776

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

DTC P0181 FTT SENSOR

DTC Confirmation Procedure (Cont'd)

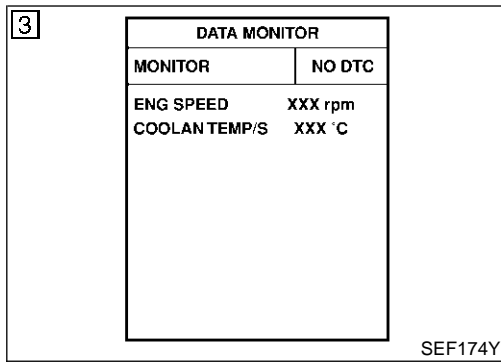

WITH CONSULT-II

NBEC0776S01

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Wait at least 10 seconds.
If the result is NG, go to "Diagnostic Procedure", EC-298.
If the result is OK, go to following step.
- 4) Check "COOLAN TEMP/S" value.
If "COOLAN TEMP/S" is less than 60°C (140°F), the result will be OK.
If "COOLAN TEMP/S" is above 60°C (140°F), go to the following step.
- 5) Cool engine down until "COOLAN TEMP/S" is less than 60°C (140°F).
- 6) Wait at least 10 seconds.
- 7) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-298.


WITH GST

NBEC0776S02

Follow the procedure "With CONSULT-II" above.

Diagnostic Procedure

NBEC0778

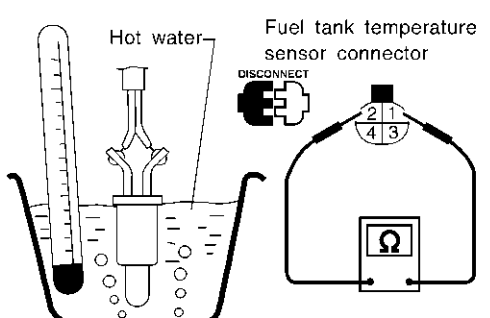1	CHECK FUEL TANK TEMPERATURE SENSOR						
<p>1. Remove fuel level sensor unit. 2. Check resistance between fuel level sensor unit and fuel pump terminals 1 and 2 by heating with hot water or heat gun as shown in the figure.</p>							
							
<table border="1"> <thead> <tr> <th>Temperature °C (°F)</th> <th>Resistance kΩ</th> </tr> </thead> <tbody> <tr> <td>20 (68)</td> <td>2.3 - 2.7</td> </tr> <tr> <td>50 (122)</td> <td>0.79 - 0.90</td> </tr> </tbody> </table>		Temperature °C (°F)	Resistance kΩ	20 (68)	2.3 - 2.7	50 (122)	0.79 - 0.90
Temperature °C (°F)	Resistance kΩ						
20 (68)	2.3 - 2.7						
50 (122)	0.79 - 0.90						
SEF974Y							
OK or NG							
OK	▶ GO TO 2.						
NG	▶ Replace fuel level sensor unit.						

DTC P0181 FTT SENSOR

Diagnostic Procedure (Cont'd)

2	CHECK INTERMITTENT INCIDENT
	<ul style="list-style-type: none">● Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.● Refer to wiring diagram, EC-302.
	▶ INSPECTION END

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA



SC

EL

IDX

DTC P0182, P0183 FTT SENSOR

Component Description

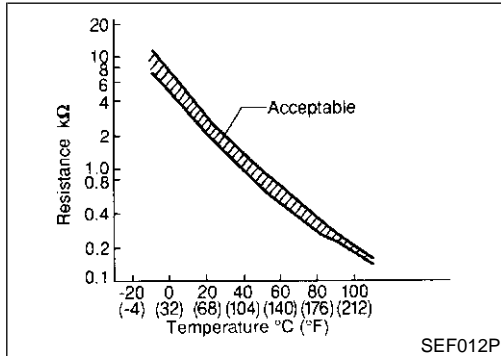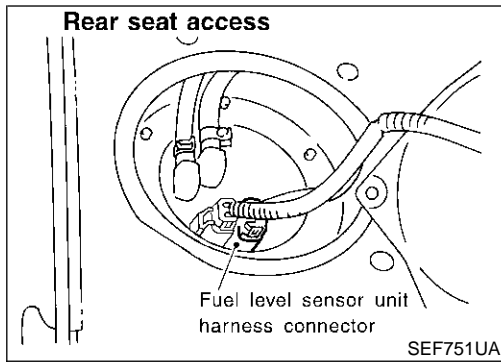

Component Description

NBEC0920

The fuel tank temperature sensor is used to detect the fuel temperature inside the fuel tank. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the fuel temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

<Reference data>

Fuel temperature °C (°F)	Voltage* V	Resistance kΩ
20 (68)	3.5	2.3 - 2.7
50 (122)	2.2	0.79 - 0.90

*: These data are reference values and are measured between ECM terminal 92 (Fuel tank temperature sensor) and body ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

On Board Diagnosis Logic

NBEC0921

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0182 0182	Fuel tank temperature sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	<ul style="list-style-type: none"> • Harness or connectors (The sensor circuit is open or shorted.)
P0183 0183	Fuel tank temperature sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	<ul style="list-style-type: none"> • Fuel tank temperature sensor

DTC Confirmation Procedure

NBEC0922

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

DTC P0182, P0183 FTT SENSOR

DTC Confirmation Procedure (Cont'd)

3	DATA MONITOR	
	MONITOR	NO DTC
	ENG SPEED	XXX rpm
	COOLAN TEMP/S	XXX °C

SEF174Y

WITH CONSULT-II

NBEC0922S01

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Wait at least 10 seconds.
If the result is NG, go to "Diagnostic Procedure", EC-303.
If the result is OK, go to following step.
- 4) Check "COOLAN TEMP/S" value.
If "COOLAN TEMP/S" is less than 60°C (140°F), the result will be OK.
If "COOLAN TEMP/S" is above 60°C (140°F), go to the following step.
- 5) Cool engine down until "COOLAN TEMP/S" is less than 60°C (140°F).
- 6) Wait at least 10 seconds.
- 7) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-303.

GI

MA

EM

LC

EC

FE

AT

TF

WITH GST

NBEC0922S02

Follow the procedure "With CONSULT-II" above.

PD

AX

SU

BR

ST

RS

BT

HA



SC

EL

IDX

Diagnostic Procedure

NBEC0924

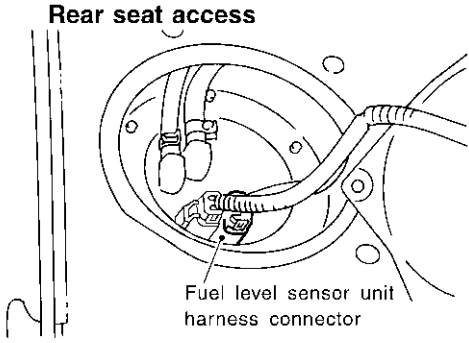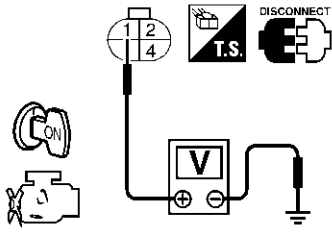1	CHECK FUEL TANK TEMPERATURE SENSOR POWER SUPPLY CIRCUIT	
<p>1. Turn ignition switch "OFF". 2. Disconnect fuel level sensor unit and fuel pump harness connector.</p> <div style="text-align: center;">  <p>Rear seat access</p> <p>Fuel level sensor unit harness connector</p> </div> <p>3. Turn ignition switch "ON". 4. Check voltage between fuel level sensor unit terminal 1 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p>Voltage: Approximately 5V</p> </div> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 3.
NG	▶	GO TO 2.

SEF751UA

SEF973Y

2	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors B1, M2 ● Harness connectors M92, F27 ● Harness for open or short between ECM and fuel level sensor unit 		
▶		Repair harness or connector.

3	CHECK FUEL TANK TEMPERATURE SENSOR GROUND CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch "OFF". 2. Check harness continuity between fuel level sensor unit terminal 2 and body ground. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 4.
NG	▶	Repair open circuit or short to power in harness or connectors.


GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0182, P0183 FTT SENSOR

Diagnostic Procedure (Cont'd)

4 CHECK FUEL TANK TEMPERATURE SENSOR

1. Remove fuel level sensor unit.
2. Check resistance between fuel level sensor unit terminals 1 and 2 by heating with hot water or heat gun as shown in the figure.

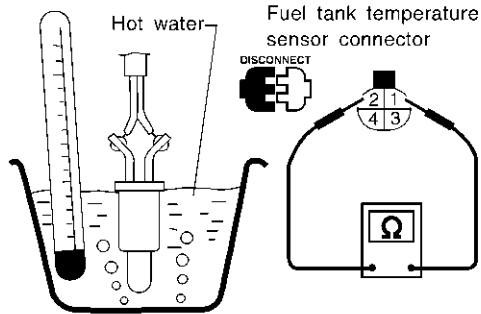

Temperature °C (°F)	Resistance kΩ
20 (68)	2.3 - 2.7
50 (122)	0.79 - 0.90

SEF974Y

OK or NG

OK ► GO TO 5.

NG ► Replace fuel level sensor unit.

5 CHECK INTERMITTENT INCIDENT

Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.

► INSPECTION END

DTC P0217 COOLANT OVERTEMPERATURE ENRICHMENT PROTECTION

On Board Diagnosis Logic

On Board Diagnosis Logic

NBEC0925

This diagnosis checks whether the engine coolant temperature is extraordinary high, even when the load is not heavy. When malfunction is detected, the malfunction indicator lamp (MIL) will light up even in the first trip.

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0217 0217	Engine coolant over temperature condition	Engine coolant temperature is excessively high under normal engine speed.	<ul style="list-style-type: none"> ● Cooling fan (Crankshaft driven) ● Thermostat ● Radiator hose ● Radiator ● Radiator cap ● Improper ignition timing ● Engine coolant temperature sensor ● Blocked radiator ● Blocked front end (Improper fitting of nose mask) ● Crushed vehicle frontal area (Vehicle frontal is collided but not repaired.) ● Blocked air passage by improper installation of front fog lamp or fog lamps. ● Improper mixture ratio of coolant ● Damaged bumper <p>For more information, refer to "MAIN 12 CAUSES OF OVERHEATING", EC-310.</p>

GI
MA
EM
LC
EC
FE
AT
TF
PD

AX
SU
BR

Overall Function Check

NBEC0926

Use this procedure to check the overall function of the coolant overtemperature enrichment protection check, a DTC might not be confirmed.

WARNING:

Never remove the radiator cap when the engine is hot. Serious burns could be caused by high-pressure fluid escaping from the radiator.

Wrap a thick cloth around the cap. Carefully remove the cap by turning it a quarter turn to allow built-up pressure to escape. Then turn the cap all the way off.

ST
RS
BT
HA

WITH CONSULT-II

NBEC0926S01


1) Check the coolant level and mixture ratio (using coolant tester) in the reservoir tank and radiator.

Allow engine to cool before checking coolant level and mixture ratio.

- If the coolant level in the reservoir and/or radiator is below the proper range, go to "Diagnostic Procedure", EC-307.
- If the coolant mixture ratio is out of the range of 45 to 55%, replace the coolant in the following procedure MA-15, "Changing Engine Coolant".

SC
EL
IDX

a) Fill radiator with coolant up to specified level with a filling speed

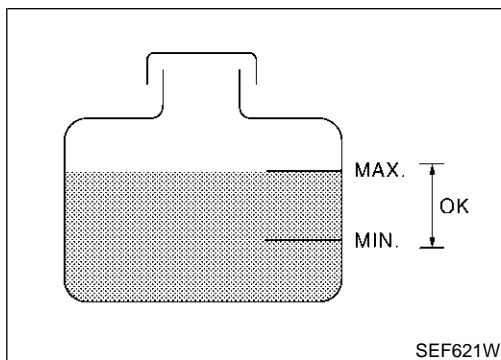

SEF621W

DTC P0217 COOLANT OVERTEMPERATURE ENRICHMENT PROTECTION

Overall Function Check (Cont'd)

of 2 liters per minute like pouring coolant from a kettle. Be sure to use coolant with the proper mixture ratio. Refer to MA-13, "Anti-freeze Coolant Mixture Ratio".

- b) After refilling coolant, run engine to ensure that no water-flow noise is emitted.
- c) After checking or replacing coolant, go to step 3 below.
- 2) Ask the customer if engine coolant has been added. If it has been added, go to "Diagnostic Procedure", EC-307. After repair, go to the next step.
- 3) Start engine and let it idle.
- 4) Make sure that cooling fan (crankshaft driven) operates. If NG, go to "Diagnostic Procedure", EC-307. After repair, go to the next step.
- 5) Make sure that A/C switch is "OFF" and air conditioner is not operating. If NG, check air conditioner circuit. Refer to HA-28, "TROUBLE DIAGNOSES". After repair, go to the next step.
- 6) Check for blocked coolant passage.
 - a) Warm up engine to normal operating temperature, then grasp radiator upper hose and lower hose and make sure that coolant flows.
If NG, go to "Diagnostic Procedure", EC-307. After repair, go to the next step.
Be extremely careful not to touch any moving or adjacent parts.
- 7) Check for blocked radiator air passage.
 - a) When market fog lamps have been installed, check for damaged fans and clogging in the condenser and radiator.
 - b) Check the front end for clogging caused by insects or debris.
 - c) Check for improper fitting of front-end cover, damaged radiator grille or bumper, damaged vehicle front.
If NG, take appropriate action and then go to the next step.
- 8) Check function of ECT sensor.
Refer to step 7 of "Diagnostic Procedure", EC-307.
If NG, replace ECT sensor and go to the next step.
- 9) Check ignition timing. Refer to basic inspection, EC-116.
Make sure that ignition timing is $15^{\circ}\pm 5^{\circ}$ at idle.
If NG, adjust ignition timing and then recheck.

WITH GST

NBEC0926S02

- 1) Check the coolant level and mixture ratio (using coolant tester) in the reservoir tank and radiator.
Allow engine to cool before checking coolant level and mixture ratio.
 - If the coolant level in the reservoir and/or radiator is below the proper range, and go to "Diagnostic Procedure", EC-307.
 - If the coolant mixture ratio is out of the range of 45 to 55%, replace the coolant in the following procedure MA-15, "Changing Engine Coolant".
- a) Fill radiator with coolant up to specified level with a filling speed of 2 liters per minute like pouring coolant from a kettle. Be sure to use coolant with the proper mixture ratio. Refer to MA-13, "Anti-freeze Coolant Mixture Ratio".
- b) After refilling coolant, run engine to ensure that no water-flow noise is emitted.
- c) After checking or replacing coolant, go to step 3 below.
- 2) Ask the customer if engine coolant has been added. If it has been added, go to "Diagnostic Procedure", EC-307. After repair, go to the next step.

EC-306

DTC P0217 COOLANT OVERTEMPERATURE ENRICHMENT PROTECTION

Overall Function Check (Cont'd)

- 3) Start engine and let it idle.
- 4) Make sure that cooling fan (crankshaft driven) operates. If NG, go to "Diagnostic Procedure", EC-307. After repair, go to the next step.
- 5) Make sure that A/C switch is "OFF" and air conditioner is not operating. If NG, check air conditioner circuit. Refer to HA-28, "TROUBLE DIAGNOSES". After repair, go to the next step.
- 6) Check for blocked coolant passage.
 - a) Warm up engine to normal operating temperature, then grasp radiator upper hose and lower hose and make sure that coolant flows.
If NG, go to "Diagnostic Procedure", EC-307. After repair, go to the next step.
Be extremely careful not to touch any moving or adjacent parts.
- 7) Check for blocked radiator air passage.
 - a) When market fog lamps have been installed, check for damaged fans and clogging in the condenser and radiator.
 - b) Check the front end for clogging caused by insects or debris.
 - c) Check for improper fitting of front-end cover, damaged radiator grille or bumper, damaged vehicle front.
If NG, take appropriate action and then go to the next step.
- 8) Check function of ECT sensor.
Refer to step 6 of "Diagnostic Procedure", EC-307.
If NG, replace ECT sensor and go to the next step.
- 9) Check ignition timing. Refer to basic inspection, EC-116.
Make sure that ignition timing is $15^{\circ} \pm 5^{\circ}$ at idle.
If NG, adjust ignition timing and then recheck.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


Diagnostic Procedure

NBEC0927


1	CHECK COOLING FAN (CRANKSHAFT DRIVEN) OPERATION	
Start engine and make sure that cooling fan (crankshaft driven) operates.		
OK or NG		
OK	▶	GO TO 2.
NG	▶	Check cooling fan (crankshaft driven). Refer to LC-22, "Cooling Fan".

DTC P0217 COOLANT OVERTEMPERATURE ENRICHMENT PROTECTION

Diagnostic Procedure (Cont'd)

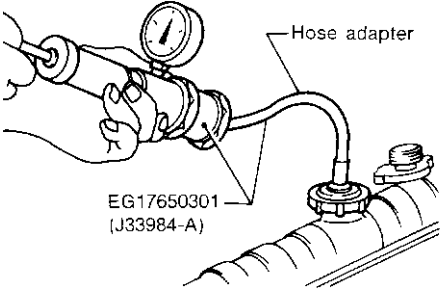2	CHECK COOLING SYSTEM FOR LEAK	
<p>Apply pressure to the cooling system with a tester, and check if the pressure drops. Testing pressure: 157 kPa (1.6 kg/cm², 23 psi) CAUTION: Higher than the specified pressure may cause radiator damage.</p>		
		
SLC754A		
<p>Pressure should not drop.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 4.
NG	▶	GO TO 3.

3	DETECT MALFUNCTIONING PART	
<p>Check the following for leak.</p> <ul style="list-style-type: none"> ● Hose ● Radiator ● Water pump (Refer to LC-13, "Water Pump".) 		
▶		Repair or replace.

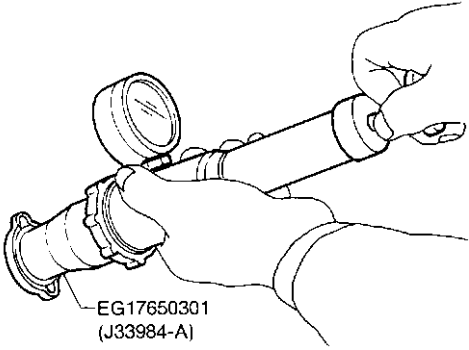4	CHECK RADIATOR CAP	
<p>Apply pressure to cap with a tester and check radiator cap relief pressure.</p>		
		
SLC755A		
<p>Radiator cap relief pressure: 59 - 98 kPa (0.6 - 1.0 kg/cm², 9 - 14 psi)</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 5.
NG	▶	Replace radiator cap.


DTC P0217 COOLANT OVERTEMPERATURE ENRICHMENT PROTECTION

Diagnostic Procedure (Cont'd)

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

5 CHECK THERMOSTAT

1. Remove thermostat.
2. Check valve seating condition at normal room temperatures.
It should seat tightly.
3. Check valve opening temperature and valve lift.

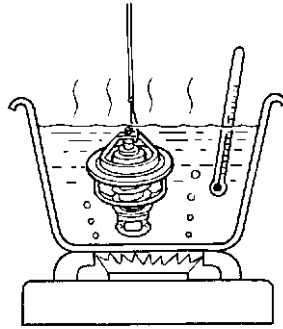

SLC343

Valve opening temperature:
76.5°C (170°F) [standard]

Valve lift:
More than 8.6 mm/90°C (0.339 in/194°F)

4. Check if valve is closed at 5°C (9°F) below valve opening temperature. For details, refer to LC-18, "Thermostat".


OK or NG

OK ► GO TO 6.

NG ► Replace thermostat


6 CHECK ENGINE COOLANT TEMPERATURE SENSOR

1. Remove engine coolant temperature sensor.
2. Check resistance between engine coolant temperature sensor terminals 1 and 2 as shown in the figure.

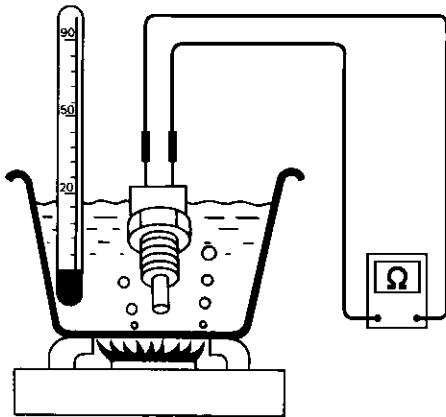

<Reference data>

Temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
50 (122)	0.68 - 1.00
90 (194)	0.236 - 0.260

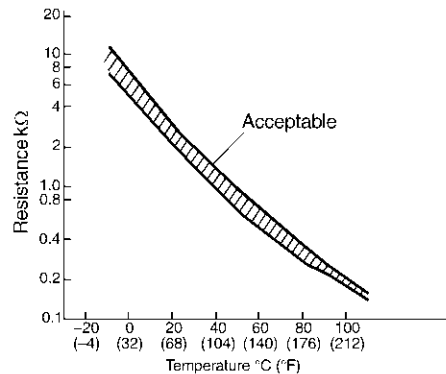

SEF304X


OK or NG

OK ► GO TO 7.

NG ► Replace engine coolant temperature sensor.

DTC P0217 COOLANT OVERTEMPERATURE ENRICHMENT PROTECTION

Diagnostic Procedure (Cont'd)

7	CHECK MAIN 12 CAUSES
If the cause cannot be isolated, go to "MAIN 12 CAUSES OF OVERHEATING", EC-310.	
	INSPECTION END

Main 12 Causes of Overheating

NBEC0928

Engine	Step	Inspection item	Equipment	Standard	Reference page
OFF	1	<ul style="list-style-type: none"> ● Blocked radiator ● Blocked condenser ● Blocked radiator grille ● Blocked bumper 	<ul style="list-style-type: none"> ● Visual 	No blocking	—
	2	<ul style="list-style-type: none"> ● Coolant mixture 	<ul style="list-style-type: none"> ● Coolant tester 	50 - 50% coolant mixture	See MA-12, "RECOMMENDED FLUIDS AND LUBRICANTS".
	3	<ul style="list-style-type: none"> ● Coolant level 	<ul style="list-style-type: none"> ● Visual 	Coolant up to MAX level in reservoir tank and radiator filler neck	See MA-15, "Changing Engine Coolant".
	4	<ul style="list-style-type: none"> ● Radiator cap 	<ul style="list-style-type: none"> ● Pressure tester 	59 - 98 kPa (0.6 - 1.0 kg/cm ² , 9 - 14 psi) (Limit)	See LC-12, "System Check".
ON*1	5	<ul style="list-style-type: none"> ● Coolant leaks 	<ul style="list-style-type: none"> ● Visual 	No leaks	See LC-12, "System Check".
ON*1	6	<ul style="list-style-type: none"> ● Thermostat 	<ul style="list-style-type: none"> ● Touch the upper and lower radiator hoses 	Both hoses should be hot	See LC-18, "Thermostat" and LC-21, "Radiator".
ON	7	<ul style="list-style-type: none"> ● Cooling fan (Crankshaft driven) 	<ul style="list-style-type: none"> ● Visual 	Operating	See LC-22, "Cooling Fan".
OFF	8	<ul style="list-style-type: none"> ● Combustion gas leak 	<ul style="list-style-type: none"> ● Color checker chemical tester 4 Gas analyzer 	Negative	—
ON*2	9	<ul style="list-style-type: none"> ● Coolant temperature gauge 	<ul style="list-style-type: none"> ● Visual 	Gauge less than 3/4 when driving	—
		<ul style="list-style-type: none"> ● Coolant overflow to reservoir tank 	<ul style="list-style-type: none"> ● Visual 	No overflow during driving and idling	See MA-15, "Changing Engine Coolant".
OFF*3	10	<ul style="list-style-type: none"> ● Coolant return from reservoir tank to radiator 	<ul style="list-style-type: none"> ● Visual 	Should be initial level in reservoir tank	See MA-14, "ENGINE MAINTENANCE".
OFF	11	<ul style="list-style-type: none"> ● Cylinder head 	<ul style="list-style-type: none"> ● Straight gauge feeler gauge 	0.1 mm (0.004 in) Maximum distortion (warping)	See EM-44, "Inspection".
	12	<ul style="list-style-type: none"> ● Cylinder block and pistons 	<ul style="list-style-type: none"> ● Visual 	No scuffing on cylinder walls or piston	See EM-65, "Inspection".

*1: Engine running at 3,000 rpm for 10 minutes.

*2: Drive at 90 km/h (55 MPH) for 30 minutes and then let idle for 10 minutes.

*3: After 60 minutes of cool down time.

For more information, refer to LC-26, "OVERHEATING CAUSE ANALYSIS".

DTC P0300 - P0306 MULTIPLE CYLINDER MISFIRE, NO. 1 - 6 CYLINDER MISFIRE

On Board Diagnosis Logic

On Board Diagnosis Logic

When a misfire occurs, engine speed will fluctuate. If the engine speed fluctuates enough to cause the CKP sensor signal to vary, ECM can determine that a misfire is occurring.

NBEC0929

Sensor	Input Signal to ECM	ECM function
Crankshaft position sensor (POS)	Engine speed	On board diagnosis of misfire

The misfire detection logic consists of the following two conditions.

- One Trip Detection Logic (Three Way Catalyst Damage)**
 On the first trip that a misfire condition occurs that can damage the three way catalyst (TWC) due to overheating, the MIL will blink.
 When a misfire condition occurs, the ECM monitors the CKP sensor signal every 200 engine revolutions for a change. When the misfire condition decreases to a level that will not damage the TWC, the MIL will turn off.
 If another misfire condition occurs that can damage the TWC on a second trip, the MIL will blink.
 When the misfire condition decreases to a level that will not damage the TWC, the MIL will remain on.
 If another misfire condition occurs that can damage the TWC, the MIL will begin to blink again.
- Two Trip Detection Logic (Exhaust quality deterioration)**
 For misfire conditions that will not damage the TWC (but will affect vehicle emissions), the MIL will only light when the misfire is detected on a second trip. During this condition, the ECM monitors the CKP sensor signal every 1,000 engine revolutions.
 A misfire malfunction can be detected on any one cylinder or on multiple cylinders.

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0300 0300	Multiple cylinder misfire detected	Multiple cylinders misfire, No. 1 cylinder misfires, No. 2 cylinder misfires, No. 3 cylinder misfires, No. 4 cylinder misfires, No. 5 cylinder misfires and No. 6 cylinder misfires.	<ul style="list-style-type: none"> ● Improper spark plug ● Insufficient compression ● Incorrect fuel pressure ● The injector circuit is open or shorted ● Injectors ● Intake air leak ● The ignition secondary circuit is open or shorted ● Lack of fuel ● Drive plate ● Heated oxygen sensor 1
P0301 0301	No. 1 cylinder misfire detected		
P0302 0302	No. 2 cylinder misfire detected		
P0303 0303	No. 3 cylinder misfire detected		
P0304 0304	No. 4 cylinder misfire detected		
P0305 0305	No. 5 cylinder misfire detected		
P0306 0306	No. 6 cylinder misfire detected		

DTC P0300 - P0306 MULTIPLE CYLINDER MISFIRE, NO. 1 - 6 CYLINDER MISFIRE

DTC Confirmation Procedure

4	DATA MONITOR	
	MONITOR	NO DTC
	ENG SPEED	XXX rpm
	COOLAN TEMP/S	XXX °C
	VHCL SPEED SE	XXX km/h
	P/N POSI SW	OFF
	B/FUEL SCHDL	XXX msec

SEF213Y

DTC Confirmation Procedure

NBEC0930

CAUTION:

Always drive vehicle in safe manner according to traffic conditions and obey all traffic laws when driving.

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

NBEC0930S01

- 1) Turn ignition switch ON, and select "DATA MONITOR" mode with CONSULT-II.
- 2) Start engine and warm it up to normal operating temperature.
- 3) Turn ignition switch OFF and wait at least 10 seconds.
- 4) Restart engine and let it idle for about 15 minutes.
- 5) If 1st trip DTC is detected, go to EC-313, "Diagnostic Procedure".

NOTE:

If 1st trip DTC is not detected during above procedure, performing the following procedure is advised.

- 1) Turn ignition switch OFF and wait at least 10 seconds.
- 2) Start engine and drive the vehicle under the similar conditions to (1st trip) Freeze Frame Data for a certain time. Refer to the table below.

Hold the accelerator pedal as steady as possible.

The similar conditions to (1st trip) Freeze Frame Data means the vehicle operation that the following conditions should be satisfied at the same time.

Engine speed	Engine speed in the freeze frame data \pm 400 rpm
Vehicle speed	Vehicle speed in the freeze frame data \pm 10 km/h (5 MPH)
Engine coolant temperature (T) condition	When the freeze frame data shows lower than 70°C (158°F), T should be lower than 70°C (158°F).
	When the freeze frame data shows higher than or equal to 70°C (158°F), T should be higher than or equal to 70°C (158°F).

The time to driving varies according to the engine speed in the freeze frame data.

Engine speed	Time
Around 1,000 rpm	Approximately 10 minutes
Around 2,000 rpm	Approximately 5 minutes
More than 3,000 rpm	Approximately 3.5 minutes

WITH GST

NBEC0930S02

Follow the procedure "With CONSULT-II" above.

DTC P0300 - P0306 MULTIPLE CYLINDER MISFIRE, NO. 1 - 6 CYLINDER MISFIRE

Diagnostic Procedure

Diagnostic Procedure



NBEC0931

1	CHECK FOR INTAKE AIR LEAK	
1. Start engine and run it at idle speed. 2. Listen for the sound of the intake air leak.		
OK or NG		
OK	▶	GO TO 2.
NG	▶	Discover air leak location and repair.

GI
MA
EM

2	CHECK FOR EXHAUST SYSTEM CLOGGING	
1. Stop engine and visually check exhaust tube, three way catalyst and muffler for dents.		
OK or NG		
OK	▶	GO TO 3.
NG	▶	Repair or replace it.

LC
EC
FE

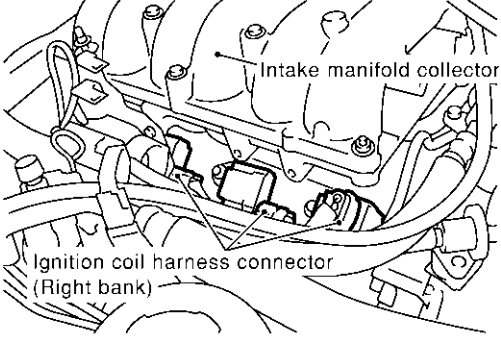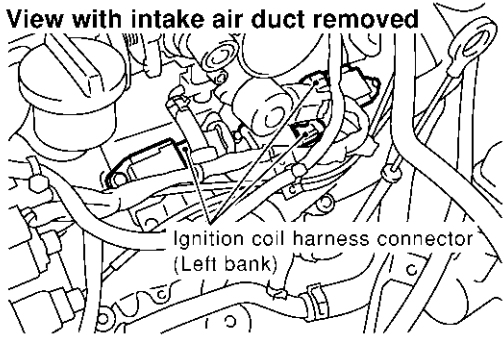3	PERFORM POWER BALANCE TEST																	
Ⓔ With CONSULT-II 1. Perform "POWER BALANCE" in "ACTIVE TEST" mode.																		
<table border="1" style="margin: auto;"> <tr><th colspan="2">ACTIVE TEST</th></tr> <tr><th>POWER BALANCE</th><td></td></tr> <tr><th colspan="2">MONITOR</th></tr> <tr><td>ENG SPEED</td><td>XXX rpm</td></tr> <tr><td>MAS A/F SE-B1</td><td>XXX V</td></tr> <tr><td>IACV-AAC/V</td><td>XXX step</td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>			ACTIVE TEST		POWER BALANCE		MONITOR		ENG SPEED	XXX rpm	MAS A/F SE-B1	XXX V	IACV-AAC/V	XXX step				
ACTIVE TEST																		
POWER BALANCE																		
MONITOR																		
ENG SPEED	XXX rpm																	
MAS A/F SE-B1	XXX V																	
IACV-AAC/V	XXX step																	
SEF190Y																		
2. Is there any cylinder which does not produce a momentary engine speed drop?																		
ⓧ Without CONSULT-II When disconnecting each ignition coil harness connector one at a time, is there any cylinder which does not produce a momentary engine speed drop?																		
<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  <p>Intake manifold collector</p> <p>Ignition coil harness connector (Right bank)</p> </div> <div style="text-align: center;"> <p>View with intake air duct removed</p>  <p>Ignition coil harness connector (Left bank)</p> </div> </div>																		
SEF975Y																		
Yes or No																		
Yes	▶	GO TO 5.																
No	▶	GO TO 4.																

AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0300 - P0306 MULTIPLE CYLINDER MISFIRE, NO. 1 - 6 CYLINDER MISFIRE


Diagnostic Procedure (Cont'd)

4	CHECK INJECTOR		
Does each injector make an operating sound at idle?			
PBIB1725E			
Yes or No			
Yes	▶	GO TO 5.	
No	▶	Check injector(s) and circuit(s). Refer to EC-687.	

5	CHECK IGNITION SPARK		
<ol style="list-style-type: none"> 1. Disconnect ignition wire from spark plug. 2. Connect a known good spark plug to the ignition wire. 3. Place end of spark plug against a suitable ground and crank engine. 4. Check for spark. 			
SEC152D			
OK or NG			
OK	▶	GO TO 6.	
NG	▶	Check ignition coil, power transistor and their circuits. Refer to "IGNITION SIGNAL", EC-677.	

DTC P0300 - P0306 MULTIPLE CYLINDER MISFIRE, NO. 1 - 6 CYLINDER MISFIRE

Diagnostic Procedure (Cont'd)

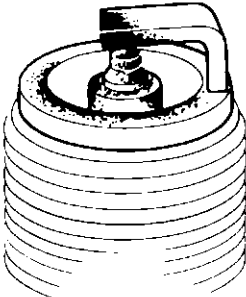6	CHECK SPARK PLUGS	
Remove the spark plugs and check for fouling, etc.		
		
SEF156I		
OK or NG		
OK	▶	GO TO 7.
NG	▶	Repair or replace spark plug(s) with standard type one(s). For spark plug type, refer to MA-14, "ENGINE MAINTENANCE".

GI
MA
EM
LC
EC

7	CHECK COMPRESSION PRESSURE	
Check compression pressure. Refer to EM-14, "Measurement of Compression Pressure".		
Standard: 1,275 kPa (13.0 kg/cm ² , 185 psi)/300 rpm Minimum: 981 kPa (10.0 kg/cm ² , 142 psi)/300 rpm Difference between each cylinder: 98 kPa (1.0 kg/cm ² , 14 psi)/300 rpm		
OK or NG		
OK	▶	GO TO 8.
NG	▶	Check pistons, piston rings, valves, valve seats and cylinder head gaskets.

TF
PD
AX
SU
BR

8	CHECK FUEL PRESSURE	
1. Install all removed parts. 2. Release fuel pressure to zero. Refer to EC-51. 3. Install fuel pressure gauge and check fuel pressure. Refer to EC-51. At idle: Approx. 235 kPa (2.4 kg/cm ² , 34 psi)		
OK or NG		
OK	▶	GO TO 10.
NG	▶	GO TO 9.

ST
RS
BT
HA

9	DETECT MALFUNCTIONING PART	
Check the following. <ul style="list-style-type: none"> ● Fuel pump and circuit (Refer to EC-696.) ● Fuel pressure regulator (Refer to EC-52.) ● Fuel lines (Refer to MA-17, "Checking Fuel Lines".) ● Fuel filter for clogging 		
OK or NG		
	▶	Repair or replace.

SC
EL
IDX


DTC P0300 - P0306 MULTIPLE CYLINDER MISFIRE, NO. 1 - 6 CYLINDER MISFIRE


Diagnostic Procedure (Cont'd)

10	CHECK IGNITION TIMING									
Check the following items. Refer to "Basic Inspection", EC-116.										
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%; text-align: center;">Items</th> <th style="width: 50%; text-align: center;">Specifications</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Ignition timing</td> <td style="text-align: center;">$15^{\circ} \pm 5^{\circ}$ BTDC</td> </tr> <tr> <td style="text-align: center;">Closed throttle position switch idle position adjustment</td> <td style="text-align: center;">Feeler gauge thickness and switch condition 0.05 mm (0.0020 in): ON 0.15 mm (0.0059 in): OFF</td> </tr> <tr> <td style="text-align: center;">Target idle speed</td> <td style="text-align: center;">750 ± 50 rpm (in "P" or "N" position)</td> </tr> </tbody> </table>			Items	Specifications	Ignition timing	$15^{\circ} \pm 5^{\circ}$ BTDC	Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.05 mm (0.0020 in): ON 0.15 mm (0.0059 in): OFF	Target idle speed	750 ± 50 rpm (in "P" or "N" position)
Items	Specifications									
Ignition timing	$15^{\circ} \pm 5^{\circ}$ BTDC									
Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.05 mm (0.0020 in): ON 0.15 mm (0.0059 in): OFF									
Target idle speed	750 ± 50 rpm (in "P" or "N" position)									
MTBL1810										
OK or NG										
OK (With CONSULT-II)	▶	GO TO 11.								
OK (Without CONSULT-II)	▶	GO TO 12.								
NG	▶	Follow the "Basic Inspection".								

DTC P0300 - P0306 MULTIPLE CYLINDER MISFIRE, NO. 1 - 6 CYLINDER MISFIRE

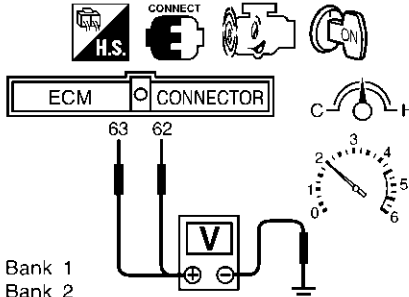

Diagnostic Procedure (Cont'd)

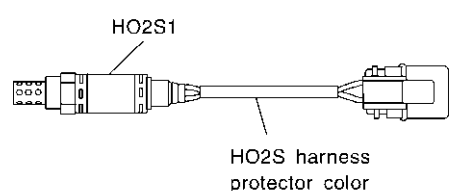12	CHECK HEATED OXYGEN SENSOR 1
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> Start engine and warm it up to normal operating temperature. Set voltmeter probes between ECM terminal 63 (HO2S1 bank 1 signal) or 62 (HO2S1 bank 2 signal) and engine ground. Check the following with engine speed held at 2,000 rpm constant under no load. 	
<div style="display: flex; justify-content: space-between; align-items: flex-start;"> <div style="width: 40%;">  <p>63: Bank 1 62: Bank 2</p> </div> <div style="width: 55%;"> <ul style="list-style-type: none"> • The voltage fluctuates between 0 to 0.3V and 0.6 to 1.0V more than 5 times within 10 seconds. • The maximum voltage is over 0.6V at least one time. • The minimum voltage is below 0.3V at least one time. • The voltage never exceeds 1.0V. <p>1 time: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V 2 times: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V</p> </div> </div>	
SEF967XA	
CAUTION:	
<p>Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.</p>	
OK or NG	
OK	▶ GO TO 14.
NG	▶ GO TO 13.

13	REPLACE HEATED OXYGEN SENSOR 1
<ol style="list-style-type: none"> Turn ignition switch "OFF". Check heated oxygen sensor 1 harness protector color. 	
	
<p>HO2S1 (bank 1): Black HO2S1 (bank 2): Blue</p>	
SEF505YC	
▶	Replace malfunctioning heated oxygen sensor 1.

DTC P0300 - P0306 MULTIPLE CYLINDER MISFIRE, NO. 1 - 6 CYLINDER MISFIRE

Diagnostic Procedure (Cont'd)

14	CHECK MASS AIR FLOW SENSOR	
<p> With CONSULT-II Check mass air flow sensor signal in "DATA MONITOR" mode with CONSULT-II. 2.0 - 6.0 g-m/sec: at idling 7.0 - 20.0 g-m/sec: at 2,500 rpm</p>		
<p> With GST Check mass air flow sensor signal in MODE 1 with GST. 2.0 - 6.0 g-m/sec: at idling 7.0 - 20.0 g-m/sec: at 2,500 rpm</p>		
OK or NG		
OK	▶	GO TO 15.
NG	▶	Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or engine grounds. Refer to EC-189.

GI

MA

EM

LC

EC

FE

15	CHECK SYMPTOM MATRIX CHART	
Check items on the rough idle symptom in "Symptom Matrix Chart", EC-130. <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 16.
NG	▶	Repair or replace.

AT

TF

16	ERASE THE 1ST TRIP DTC	
Erase the 1st trip DTC from the ECM memory after performing the tests. Refer to EC-85. Some tests may cause a 1st trip DTC to be set.		
	▶	GO TO 17.

PD

AX

SU

17	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.		
	▶	INSPECTION END

BR

ST

RS

BT

HA


SC

EL

IDX

DTC P0327, P0328 KS

Component Description

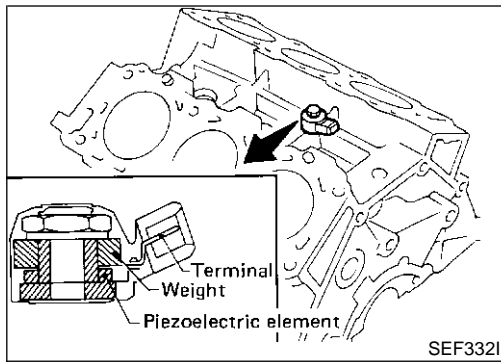

Component Description

NBEC0932

The knock sensor is attached to the cylinder block. It senses engine knocking using a piezoelectric element. A knocking vibration from the cylinder block is sensed as vibrational pressure. This pressure is converted into a voltage signal and sent to the ECM. **Freeze frame data will not be stored in the ECM for the knock sensor. The MIL will not light for knock sensor malfunction. The knock sensor has one trip detection logic.**

ECM Terminals and Reference Value

NBEC0933

Specification data are reference values and are measured between each terminal and ground.

CAUTION:


Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
93	W	Knock sensor	[Engine is running] ● Idle speed	Approximately 2.5V

On Board Diagnosis Logic

NBEC0934

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0327 0327	Knock sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Knock sensor
P0328 0328	Knock sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	

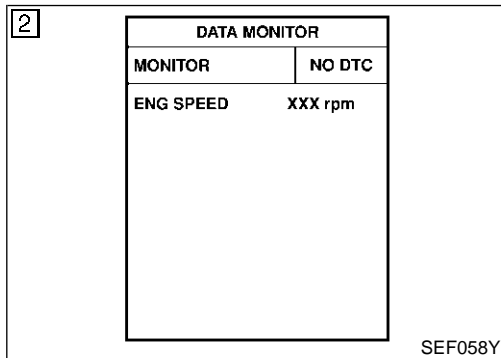

DTC Confirmation Procedure

NBEC0935

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

Ⓔ WITH CONSULT-II

NBEC0935S01

- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT-II
- 2) Start engine and run it for at least 5 seconds at idle speed.
- 3) If DTC is detected, go to "Diagnostic Procedure", EC-322.

Ⓔ WITH GST

NBEC0935S03

Follow the procedure "WITH CONSULT-II" above.

Wiring Diagram

NBEC0936

EC-KS-01

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS



BT

HA

SC

EL

IDX

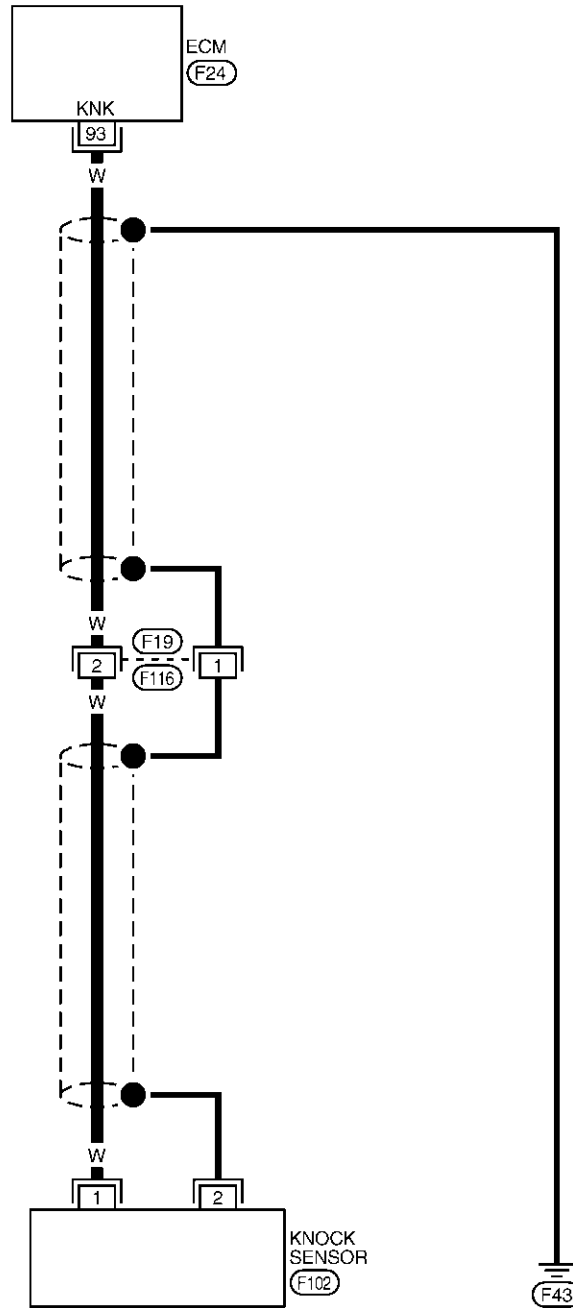

101	102	1	2	3	4	5	6	7	8	9	10					58	59	60	61	62	63	64	65	66	67	109	110					
103	104	11	12	13	14	15	16	17	18	19	39	40	41	42	43	44	45	46	47	48	68	69	70	71	72	73	74	75	76	111	112	
105	106	20	21	22	23	24	25	26	27	28	29	49	50	51	52	53	54	55	56	57	77	78	79	80	81	82	83	84	85	86	113	114
107	108	30	31	32	33	34	35	36	37	38											87	88	89	90	91	92	93	94	95	115	116	


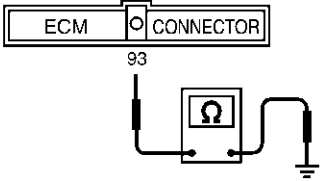


DTC P0327, P0328 KS

Diagnostic Procedure


Diagnostic Procedure


NBEC0937

1	CHECK KNOCK SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT-I	
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check resistance between ECM terminal 93 and engine ground.</p> <p>NOTE: It is necessary to use an ohmmeter which can measure more than 10 MΩ.</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  <p>H.S. DISCONNECT</p> </div> <div style="text-align: center;">  <p>ECM CONNECTOR 93</p> </div> <div style="text-align: center;"> <p>Resistance: Approximately 500 - 620 kΩ [at 25°C (77°F)]</p> </div> </div> <p style="text-align: right;">SEF321X</p>		
4. Also check harness for short to ground and short to power.		
OK or NG		
OK	▶	GO TO 5.
NG	▶	GO TO 2.

2	CHECK KNOCK SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT-II	
<p>1. Disconnect knock sensor harness connector. 2. Check harness continuity between ECM terminal 93 and knock sensor terminal 1. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 4.
NG	▶	GO TO 3.

3	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors F19, F116 ● Harness for open or short between ECM and knock sensor 		
▶		Repair open circuit or short to ground or short to power in harness or connectors.

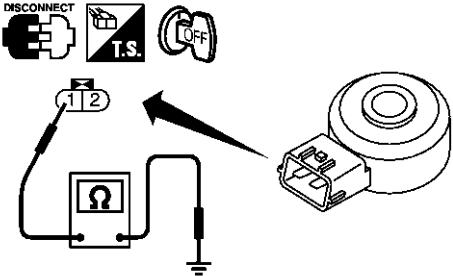4	CHECK KNOCK SENSOR	<p>Check resistance between knock sensor terminal 1 and ground.</p> <p>NOTE: It is necessary to use an ohmmeter which can measure more than 10 MΩ.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF478Y</p> <p style="color: blue;">Resistance: 500 - 620 kΩ [at 25°C (77°F)]</p> <p>CAUTION: Do not use any knock sensors that have been dropped or physically damaged. Use only new ones.</p> <p style="text-align: center;">OK or NG</p>	GI MA EM LC EC FE AT TF
OK	▶	GO TO 8.	
NG	▶	Replace knock sensor.	

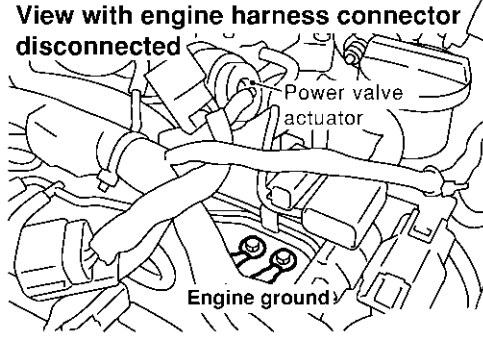5	RETIGHTEN GROUND SCREWS	<p>Loose and retighten engine ground screws.</p> <div style="text-align: center;"> <p>View with engine harness connector disconnected</p>  </div> <p style="text-align: right;">SEF959Y</p>	PD AX SU BR ST RS
	▶	GO TO 6.	

6	CHECK KNOCK SENSOR SHIELD CIRCUIT FOR OPEN AND SHORT	<ol style="list-style-type: none"> 1. Disconnect harness connectors F19, F116. 2. Check harness continuity between harness connector F19 terminal 1 and engine ground. Refer to Wiring Diagram. Continuity should exist. 3. Check harness continuity between harness connector F19 terminal 1 and ECM terminal 93. Refer to Wiring Diagram. Continuity should not exist. 4. Also check harness for short to power. <p style="text-align: center;">OK or NG</p>	BT HA SC EL IDX
OK	▶	GO TO 8.	
NG	▶	GO TO 7.	


DTC P0327, P0328 KS

Diagnostic Procedure (Cont'd)

7	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none">● Harness connectors F19, F116● Harness for open or short between harness connector F19 and engine ground	
▶	Repair open circuit or short to power in harness or connectors.
8	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	
▶	INSPECTION END

DTC P0335 CKP SENSOR (POS)

Component Description

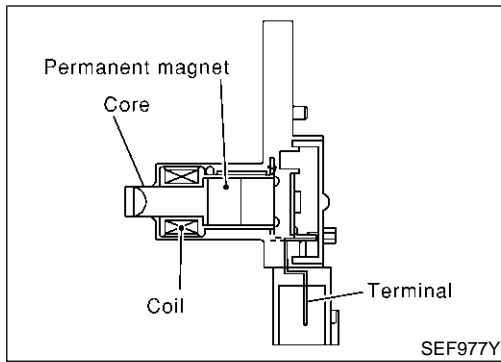

Component Description

NBEC0938

The crankshaft position sensor (POS) is located on the oil pan facing the gear teeth (cogs) of the signal plate. It detects the crankshaft position signal (1° signal).

The sensor consists of a permanent magnet, core and coil.

When engine is running, the gap between the sensor and the gear teeth (cogs) will periodically change. Permeability near the sensor also changes.

Due to the permeability change, the magnetic flux near the core is changed. Therefore, the voltage signal generated in the coil is changed.

The ECM receives the voltage signal and detects the crankshaft position signal (1° signal).

GI

MA

EM

LC

EC

FE

AT

TF

CONSULT-II Reference Value in Data Monitor Mode

NBEC0939

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
CKPS-RPM (POS)	<ul style="list-style-type: none"> Tachometer: Connect Run engine and compare tachometer indication with the CONSULT-II value. 	Almost the same speed as the CONSULT-II value.

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0335 CKP SENSOR (POS)

ECM Terminals and Reference Value



ECM Terminals and Reference Value

=NBEC0940

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

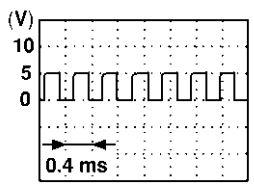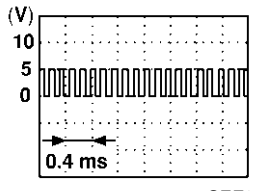TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
85	Y	Crankshaft position sensor (POS)	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Idle speed 	<p>Approximately 2.4V</p>  <p>SEF057V</p>
			<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Engine speed is 2,000 rpm. 	<p>Approximately 2.3V</p>  <p>SEF058V</p>

On Board Diagnosis Logic

NBEC0941

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0335 0335	Crankshaft position sensor (POS) circuit	1° signal is not entered to ECM for the first few seconds during engine cranking, or 1° signal is not entered to ECM during engine running.	<ul style="list-style-type: none"> ● Harness or connectors [The crankshaft position sensor (POS) circuit is open or shorted.] ● Crankshaft position sensor (POS) ● Starter motor (Refer to EL section.) ● Starting system circuit (Refer to EL section.) ● Dead (Weak) battery

DTC P0335 CKP SENSOR (POS)

DTC Confirmation Procedure

2

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm

SEF058Y

DTC Confirmation Procedure

=NBEC0942

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10.5V.

WITH CONSULT-II

NBEC0942S01

- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT-II.
- 2) Crank engine for at least two seconds.
- 3) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-329.

WITH GST

NBEC0942S02

Follow the procedure "With CONSULT-II" above.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX



DTC P0335 CKP SENSOR (POS)

Wiring Diagram

Wiring Diagram


NBEC0943

EC-POS-01

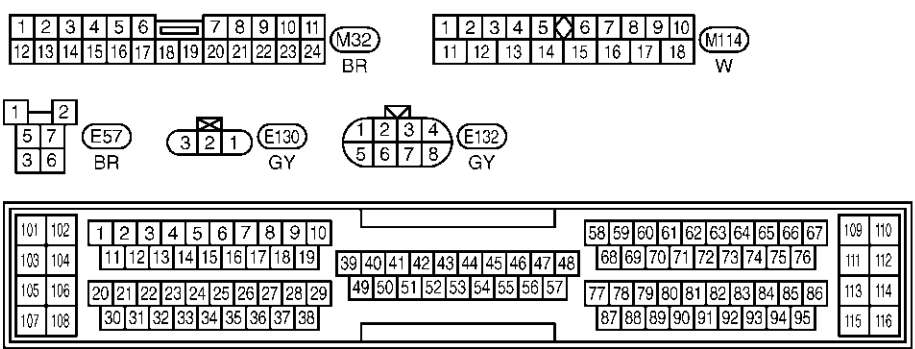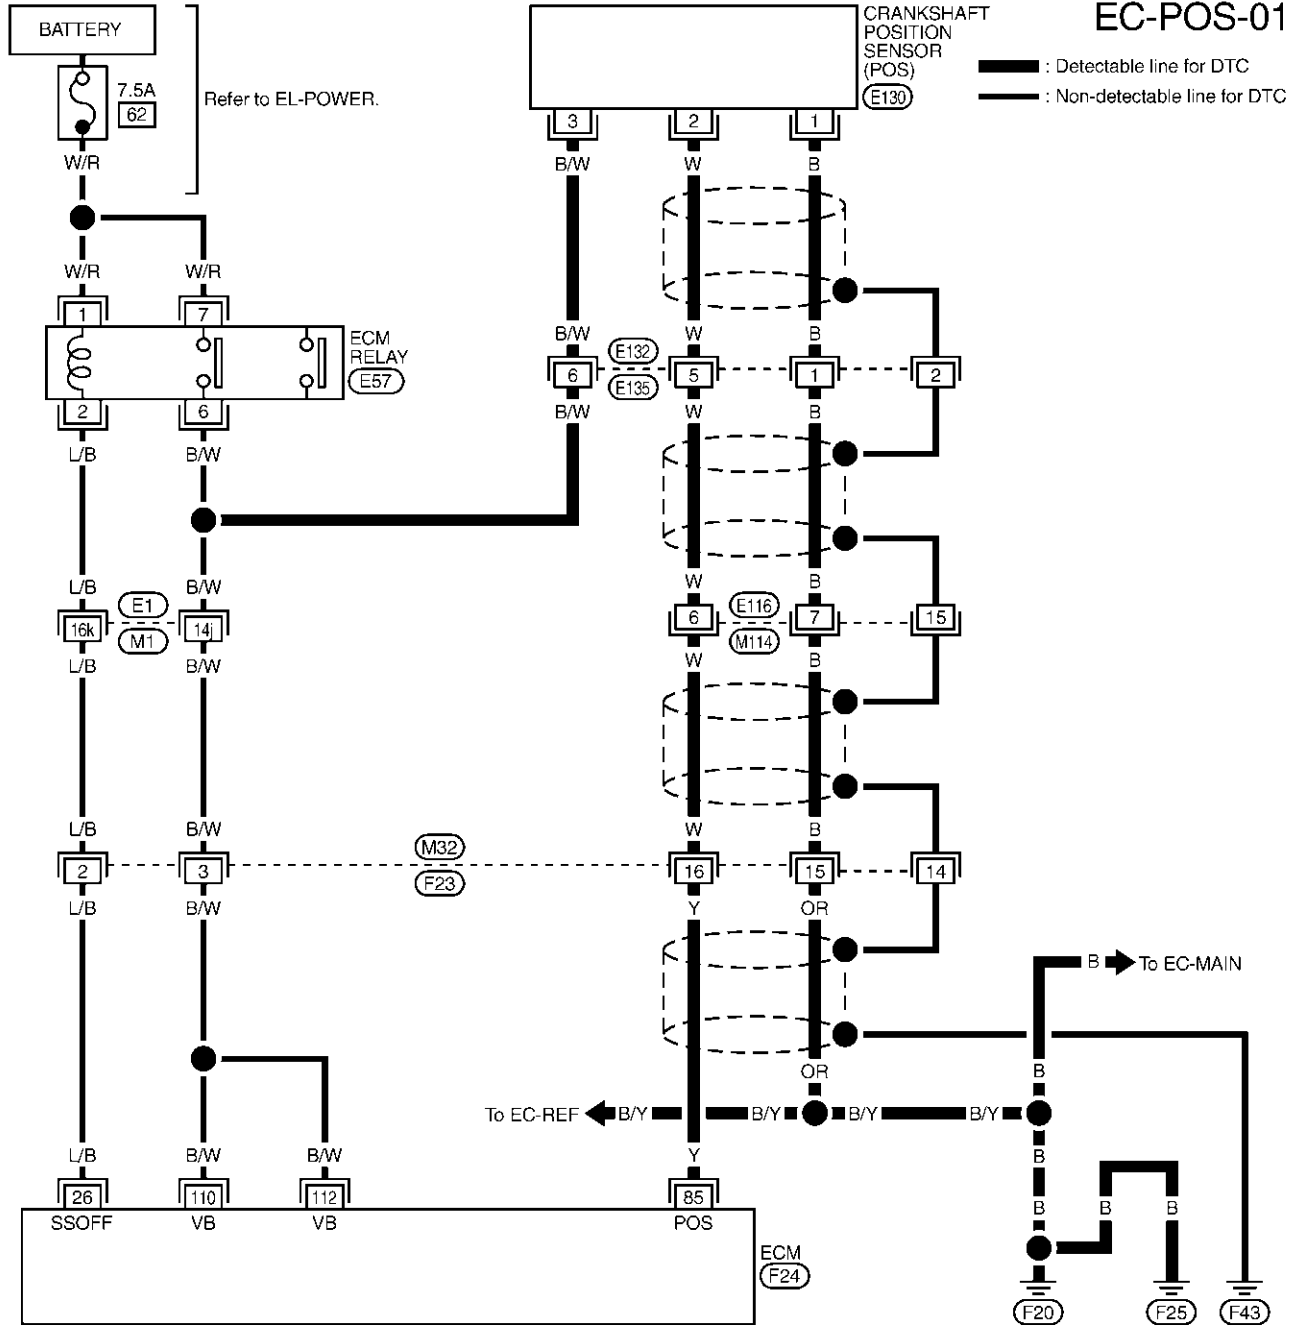

REFER TO THE FOLLOWING.


(E1) -SUPER
MULTIPLE JUNCTION (SMJ)





MEC234E

Diagnostic Procedure

NBEC0944

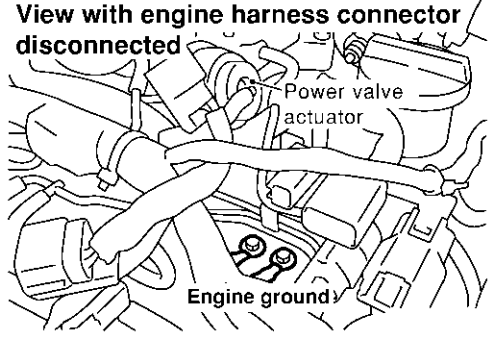1	RETIGHTEN GROUND SCREWS	<p>1. Turn ignition switch "OFF". 2. Loosen and retighten engine ground screws.</p> <div style="text-align: center;"> <p>View with engine harness connector disconnected</p>  <p>Power valve actuator Engine ground</p> </div> <p style="text-align: right;">SEF959Y</p>	<p>GI MA EM LC EC FE AT</p>
▶		GO TO 2.	

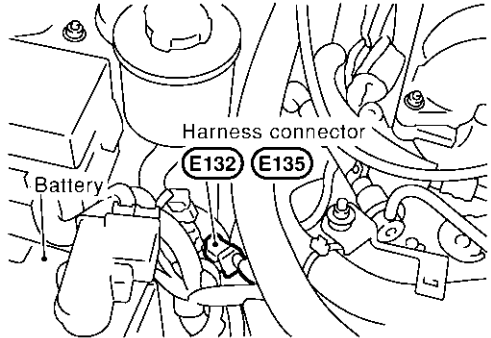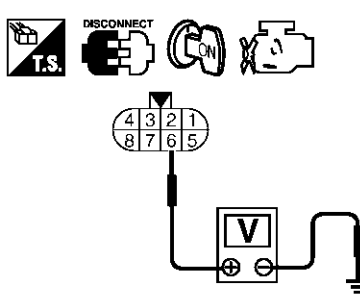2	CHECK CKP SENSOR (POS) POWER SUPPLY CIRCUIT	<p>1. Disconnect harness connectors E132, E135.</p> <div style="text-align: center;">  <p>Battery Harness connector E132 E135</p> </div> <p style="text-align: right;">SEF978Y</p> <p>2. Check voltage between harness connector E135 terminal 6 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p>DISCONNECT T.S. ON</p> <p>4 3 2 1 8 7 6 5</p> <p>V</p> </div> <p style="text-align: right;">SEC595D</p> <p>Voltage: Battery voltage</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	<p>TF PD AX SU BR ST RS BT HA SC EL IDX</p>
▶		GO TO 4.	
▶		GO TO 3.	


DTC P0335 CKP SENSOR (POS)

Diagnostic Procedure (Cont'd)


3	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none">● Harness connectors E132, E135● Harness connectors E1, M1● Harness connectors M32, F23● Harness for open or short between ECM and crankshaft position sensor (POS)● Harness for open or short between ECM relay and crankshaft position sensor (POS)	
▶ Repair open circuit or short to ground or short to power in harness or connectors.	
4	CHECK CKP SENSOR (POS) GROUND CIRCUIT FOR OPEN AND SHORT
1. Check harness continuity between harness connector E135 terminal 1 and engine ground. Refer to Wiring Diagram. Continuity should exist.	
2. Also check harness for short to power.	
OK or NG	
OK	▶ GO TO 6.
NG	▶ GO TO 5.
5	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none">● Harness connectors E132, E135● Harness connectors E116, M114● Harness connectors M32, F23● Harness for open between crankshaft position sensor (POS) and ground	
▶ Repair open circuit or short to ground or short to power in harness or connectors.	
6	CHECK CKP SENSOR (POS) INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT
1. Disconnect ECM harness connector.	
2. Check harness continuity between ECM terminal 85 and harness connector E135 terminal 5. Refer to Wiring Diagram. Continuity should exist.	
3. Also check harness for short to ground and short to power.	
OK or NG	
OK	▶ GO TO 8.
NG	▶ GO TO 7.
7	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none">● Harness connectors E132, E135● Harness connectors E116, M114● Harness connectors M32, F23● Harness for open or short between ECM and crankshaft position sensor (POS)	
▶ Repair open circuit or short to ground or short to power in harness or connectors.	

DTC P0335 CKP SENSOR (POS)

Diagnostic Procedure (Cont'd)

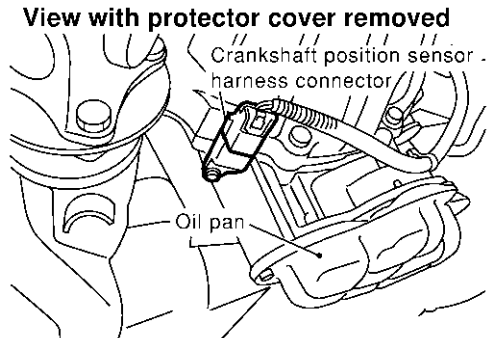
8	CHECK CKP SENSOR (POS) SUB-HARNESS CIRCUIT FOR OPEN AND SHORT								
<p>1. Disconnect CKP sensor (POS) harness connector.</p> <div style="text-align: center;"> <p>View with protector cover removed</p>  <p>Crankshaft position sensor harness connector</p> <p>Oil pan</p> </div> <p style="text-align: right;">SEF980Y</p>									
<p>2. Check harness continuity between CKP sensor (POS) terminals and harness connector E132 terminals as follows.</p> <table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse;"> <thead> <tr> <th style="padding: 5px;">CKP sensor (POS) terminal</th> <th style="padding: 5px;">Harness connector E132 terminal</th> </tr> </thead> <tbody> <tr> <td style="text-align: center; padding: 5px;">1</td> <td style="text-align: center; padding: 5px;">1</td> </tr> <tr> <td style="text-align: center; padding: 5px;">2</td> <td style="text-align: center; padding: 5px;">5</td> </tr> <tr> <td style="text-align: center; padding: 5px;">3</td> <td style="text-align: center; padding: 5px;">6</td> </tr> </tbody> </table> <p style="text-align: right;">MTBL1212</p> <p style="color: blue; text-align: center;">Continuity should exist.</p>		CKP sensor (POS) terminal	Harness connector E132 terminal	1	1	2	5	3	6
CKP sensor (POS) terminal	Harness connector E132 terminal								
1	1								
2	5								
3	6								
<p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>									
OK	▶ GO TO 9.								
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.								

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

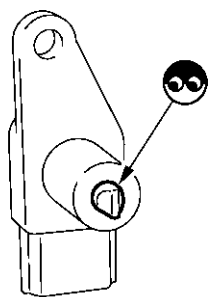9	CHECK CRANKSHAFT POSITION SENSOR (POS)-I
<p>1. Disconnect crankshaft position sensor (POS) harness connector.</p> <p>2. Loosen the fixing bolt of the sensor.</p> <p>3. Remove the sensor.</p> <p>4. Visually check the sensor for chipping.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF981Y</p>	
<p>OK or NG</p>	
OK	▶ GO TO 10.
NG	▶ Replace crankshaft position sensor (POS).

DTC P0335 CKP SENSOR (POS)


Diagnostic Procedure (Cont'd)

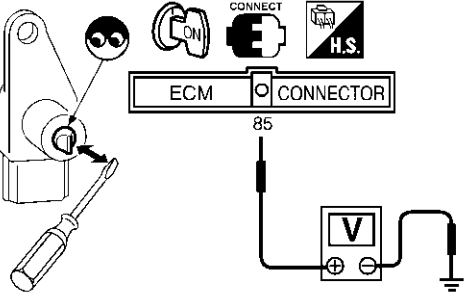10	CHECK CRANKSHAFT POSITION SENSOR (POS)-II									
<ol style="list-style-type: none"> 1. Reconnect disconnected harness connectors. 2. Turn ignition switch "ON". 3. Check voltage between ECM terminal 85 and ground by briefly touching the sensor core with a flat-bladed screwdriver. 										
<div style="display: flex; align-items: center;">  <table border="1" style="border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">ECM terminal</th> <th style="text-align: center;">Condition</th> <th style="text-align: center;">Voltage</th> </tr> </thead> <tbody> <tr> <td rowspan="2" style="text-align: center;">85</td> <td style="text-align: center;">Contacted</td> <td style="text-align: center;">Approximately 5V</td> </tr> <tr> <td style="text-align: center;">Pulled away</td> <td style="text-align: center;">Approximately 0V</td> </tr> </tbody> </table> </div> <p style="margin-top: 10px;">There should be a steady 5V as the flat-bladed screwdriver is drawn away slowly.</p>			ECM terminal	Condition	Voltage	85	Contacted	Approximately 5V	Pulled away	Approximately 0V
ECM terminal	Condition	Voltage								
85	Contacted	Approximately 5V								
	Pulled away	Approximately 0V								
SEF343Z										
OK or NG										
OK	▶	GO TO 11.								
NG	▶	Replace crankshaft position sensor (POS).								

11	CHECK CKP SENSOR (POS) SHIELD CIRCUIT FOR OPEN AND SHORT	
<ol style="list-style-type: none"> 1. Disconnect harness connectors E132, E135. 2. Check harness continuity between harness connector E135 terminal 2 and engine ground. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to power. 		
OK or NG		
OK	▶	GO TO 13.
NG	▶	GO TO 12.

12	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E132, E135 ● Harness connectors E116, M114 ● Harness connectors M32, F23 ● Harness for open between harness connector E135 and engine ground 		
▶ Repair open circuit or short to power in harness or connectors.		

13	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.		
▶ INSPECTION END		

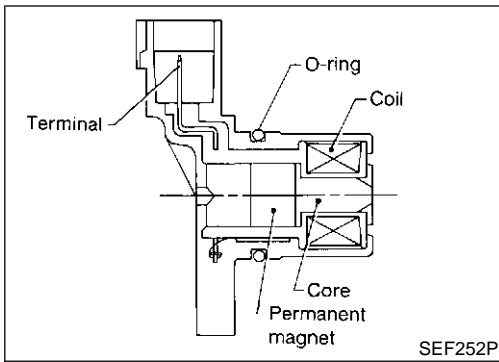

Component Description

NBEC0945

The camshaft position sensor (PHASE) is located on the engine front cover facing the camshaft sprocket. It detects the cylinder No. signal.

The sensor consists of a permanent magnet, core and coil.

When engine is running, the gap between the sensor and the camshaft sprocket will periodically change. Permeability near the sensor also changes.

Due to the permeability change, the magnetic flux near the core is changed. Therefore, the voltage signal generated in the coil is changed.

The ECM receives the voltage signal and detects the cylinder No. signal.

GI

MA

EM

LC

EC

FE

AT

TF

ECM Terminals and Reference Value

NBEC0946

Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

PD

AX

SU

BR

ST

RS

BT

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
76	L	Camshaft position sensor (PHASE)	<p>[Engine is running]</p> <ul style="list-style-type: none"> Warm-up condition Idle speed 	<p>Approximately 4.2V★ (AC voltage)</p> <p>SEF582X</p>

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

HA

On Board Diagnosis Logic

NBEC0947

DTC No.	Trouble diagnosis name	DTC Detecting Condition		Possible Cause
P0340 0340	Camshaft position sensor circuit	A)	The cylinder No. signal is not sent to ECM for the first few seconds during engine cranking.	<ul style="list-style-type: none"> Harness or connectors [The camshaft position sensor (PHASE) circuit is open or shorted.] Camshaft position sensor (PHASE) Starter motor (Refer to SC section.) Starting system circuit (Refer to SC section.) Dead (Weak) battery
		B)	The cylinder No. signal is not sent to ECM during engine running.	
		C)	The cylinder No. signal is not in the normal pattern during engine running.	

SC

EL

IDX

DTC P0340 CMP SENSOR

DTC Confirmation Procedure

NBEC0948

NOTE:

- Perform “PROCEDURE FOR MALFUNCTION A” first. If 1st trip DTC cannot be confirmed, perform “PROCEDURE FOR MALFUNCTION B AND C”.
- If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10.5V at idle.

PROCEDURE FOR MALFUNCTION A

NBEC0948S01

Ⓔ With CONSULT-II

NBEC0948S0101

- 1) Turn ignition switch “ON”.
- 2) Select “DATA MONITOR” mode with CONSULT-II.
- 3) Crank engine for at least 2 seconds.
- 4) If 1st trip DTC is detected, go to “Diagnostic Procedure”, EC-336.

Ⓔ With GST

NBEC0948S0102

Follow the procedure “With CONSULT-II” above.

2	DATA MONITOR	
	MONITOR	NO DTC
	COOLAN TEMP/S	XXX °C

SEF013Y

PROCEDURE FOR MALFUNCTION B AND C

NBEC0948S02

Ⓔ With CONSULT-II

NBEC0948S0201

- 1) Turn ignition switch “ON”.
- 2) Select “DATA MONITOR” mode with CONSULT-II.
- 3) Start engine and run it for at least 2 seconds at idle speed.
- 4) If 1st trip DTC is detected, go to “Diagnostic Procedure”, EC-336.

Ⓔ With GST

NBEC0948S0202

Follow the procedure “With CONSULT-II” above.

3	DATA MONITOR	
	MONITOR	NO DTC
	ENG SPEED	XXX rpm

SEF058Y


DTC P0340 CMP SENSOR


Diagnostic Procedure

Diagnostic Procedure

NBEC0950

1	CHECK STARTING SYSTEM	
Turn ignition switch to "START" position. Does the engine turn over? Does the starter motor operate?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	Check starting system. (Refer to SC-10, "STARTING SYSTEM".)

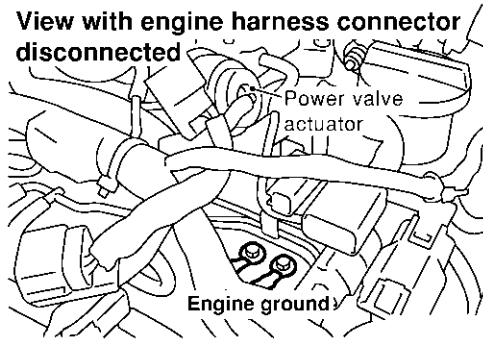2	RETIGHTEN GROUND SCREWS	
1. Turn ignition switch "OFF". 2. Loosen and retighten engine ground screws.		
View with engine harness connector disconnected		
 <p>The diagram shows a top-down view of the engine compartment. Two screws are labeled 'Engine ground'. A component labeled 'Power valve actuator' is also shown. The engine harness connector is indicated as being disconnected.</p>		
SEF959Y		
▶		GO TO 3.

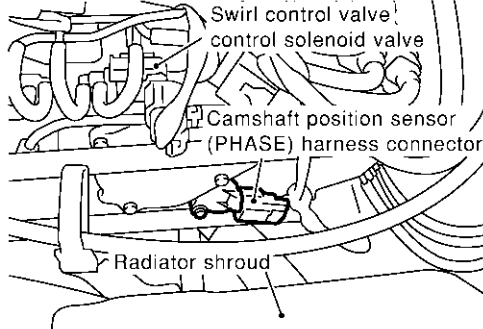
3	CHECK CMP SENSOR (PHASE) INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector and CMP sensor (PHASE) harness connector.		
 <p>The diagram shows the engine area with labels for 'Swirl control valve control solenoid valve', 'Camshaft position sensor (PHASE) harness connector', and 'Radiator shroud'. The CMP sensor harness connector is highlighted.</p>		
SEF982Y		
3. Check harness continuity between CMP sensor (PHASE) terminal 2 and ECM terminal 76. Refer to Wiring Diagram. Continuity should exist.		
4. Also check harness for short to ground and short to power.		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

DTC P0340 CMP SENSOR


Diagnostic Procedure (Cont'd)

4	CHECK CMP SENSOR (PHASE) GROUND CIRCUIT FOR OPEN AND SHORT
1. Check harness continuity between CMP sensor (PHASE) terminal 1 and engine ground. Continuity should exist. 2. Also check harness for short to power.	
OK or NG	
OK	▶ GO TO 5.
NG	▶ Repair open circuit or short to power in harness or connector.

GI
MA
EM

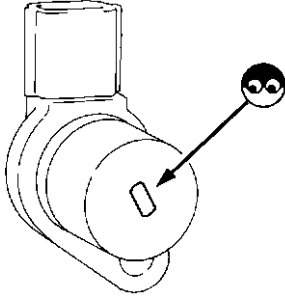5	CHECK CAMSHAFT POSITION SENSOR (PHASE)-I
1. Loosen the fixing bolt of the camshaft position sensor (PHASE). 2. Remove the CMP sensor (PHASE). 3. Visually check the CMP sensor (PHASE) for chipping.	
	
SEF583P	
OK or NG	
OK	▶ GO TO 6.
NG	▶ Replace camshaft position sensor (PHASE).

LC
EC
FE
AT
TF
PD
AX
SU

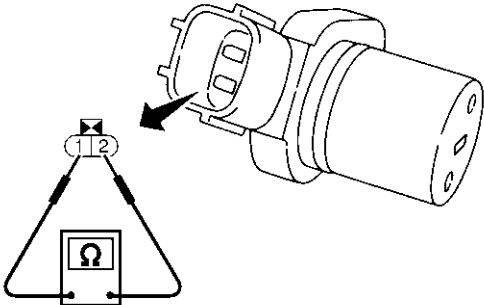6	CHECK CAMSHAFT POSITION SENSOR (PHASE)-II
Check resistance between CMP sensor (PHASE) terminals 1 and 2 as shown below.	
	
Resistance: Approximately 1,440 - 1,760 Ω at 20°C (68°F) (HITACHI make) Approximately 2,090 - 2,550 Ω at 20°C (68°F) (MITSUBISHI make)	
SEF325X	
OK or NG	
OK	▶ GO TO 7.
NG	▶ Replace camshaft position sensor (PHASE).


BR
ST
RS
BT
HA
SC

7	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	
	▶ INSPECTION END

EL
IDX

DTC P0420, P0430 THREE WAY CATALYST FUNCTION

On Board Diagnosis Logic

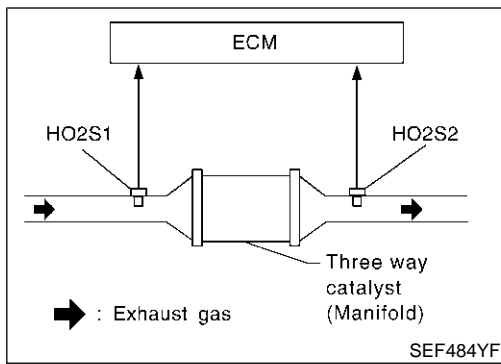

On Board Diagnosis Logic

NBEC0951

The ECM monitors the switching frequency ratio of heated oxygen sensors 1 and 2.

A three way catalyst (manifold) with high oxygen storage capacity will indicate a low switching frequency of heated oxygen sensor 2. As oxygen storage capacity decreases, the heated oxygen sensor 2 switching frequency will increase.

When the frequency ratio of heated oxygen sensors 1 and 2 approaches a specified limit value, the three way catalyst (manifold) malfunction is diagnosed.

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0420 0420 (Bank 1) P0430 0430 (Bank 2)	Catalyst system efficiency below threshold	Three way catalyst (manifold) does not operate properly, three way catalyst (manifold) does not have enough oxygen storage capacity.	<ul style="list-style-type: none"> • Three way catalyst (manifold) • Exhaust tube • Intake air leaks • Injectors • Injector leaks • Spark plug • Improper ignition timing

SRT WORK SUPPORT	
CATALYST	INCMP
EVAP SYSTEM	INCMP
HO2S HTR	CMPLT
HO2S	INCMP
MONITOR	
ENG SPEED	XXX rpm
B/FUEL SCHDL	XXX msec
THRTL POS SEN	XXX V

SEF344Z

DTC Confirmation Procedure

NBEC0952

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

NBEC0952S01

TESTING CONDITION:

Do not hold engine speed for more than the specified minutes below.

SRT WORK SUPPORT	
CATALYST	CMPLT
EVAP SYSTEM	INCMP
HO2S HTR	CMPLT
HO2S	INCMP
MONITOR	
ENG SPEED	XXX rpm
B/FUEL SCHDL	XXX msec
THRTL POS SEN	XXX V

SEF345Z

- 1) Start engine and warm it up to the normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 10 seconds.
- 3) Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least one minute under no load.
- 4) Let engine idle for one minute.
- 5) Open engine hood.
- 6) Select "DTC & SRT CONFIRMATION" then "SRT WORK SUPPORT" mode with CONSULT-II.
- 7) Rev engine up to 2,000 to 3,000 rpm and hold it for 3 consecutive minutes then release the accelerator pedal completely. If "INCMP" of "CATALYST" changed to "COMPLT", go to step 10.
- 8) Wait 5 seconds at idle.
- 9) Rev engine up to 2,000 to 3,000 rpm and maintain it until "INCMP" of "CATALYST" changes to "COMPLT" (It will take approximately 5 minutes). If not "COMPLT", perform the following.
 - a) Turn ignition switch "OFF" and leave the vehicle in a cool place (soak the vehicle).
 - b) Turn ignition switch "ON" and select "COOLANTEMP/S" in "DATA MONITOR" mode with CONSULT-II.
 - c) Start engine and warm it up while monitoring "COOLANTEMP/S" indication on CONSULT-II.

SELF DIAG RESULTS	
DTC RESULTS	TIME
NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.	

SEF560X

DTC P0420, P0430 THREE WAY CATALYST FUNCTION



DTC Confirmation Procedure (Cont'd)

- d) When "COOLANTTEMP/S" indication reaches to 70°C (158°F), go to step 6.
- 10) Select "SELF-DIAG RESULTS" mode with CONSULT-II.
- 11) Confirm that the 1st trip DTC is not detected.
If the 1st trip DTC is detected, go to "Diagnostic Procedure", EC-340.

GI
MA

EM

LC

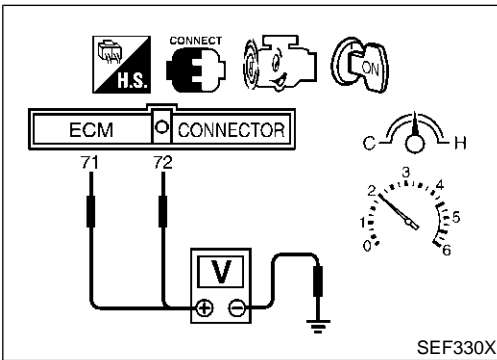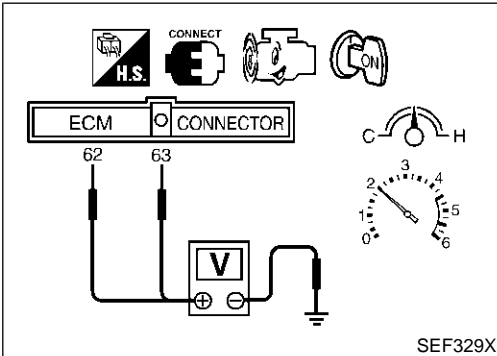

Overall Function Check

Use this procedure to check the overall function of the three way catalyst (manifold). During this check, a DTC might not be confirmed.

NBEC0953

EC

CAUTION:

Always drive vehicle at a safe speed.

FE

WITH GST

NBEC0953S01

AT

- 1) Start engine and warm it up to the normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 10 seconds.
- 3) Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least one minute under no load.
- 4) Let engine idle for one minute.
- 5) Set voltmeters probes between ECM terminals 63 [heated oxygen sensor 1 bank 1 signal], 62 [heated oxygen sensor 1 bank 2 signal] and engine ground, and ECM terminals 72 [heated oxygen sensor 2 bank 1 signal], 71 [heated oxygen sensor 2 bank 2 signal] and engine ground.
- 6) Keep engine speed at 2,000 rpm constant under no load.
- 7) Make sure that the voltage switching frequency (high & low) between ECM terminals 72 and engine ground, or 71 and engine ground is very less than that of ECM terminals 63 and engine ground, or 62 and engine ground.

TF

PD

AX

SU

BR

ST

Switching frequency ratio = A/B

A: Heated oxygen sensor 2 voltage switching frequency

B: Heated oxygen sensor 1 voltage switching frequency

This ratio should be less than 0.75.

RS

If the ratio is greater than above, it means three way catalyst (manifold) does not operate properly. Go to "Diagnostic Procedure", EC-340.

BT

NOTE:

If the voltage at terminal 62 or 63 does not switch periodically more than 5 times within 10 seconds at step 5, perform trouble diagnosis for "DTC P0133, P0153" first. (See EC-239.)

HA

SC

EL

IDX

DTC P0420, P0430 THREE WAY CATALYST FUNCTION

Diagnostic Procedure

Diagnostic Procedure

=NBEC0954

1	CHECK EXHAUST SYSTEM
Visually check exhaust tubes and muffler for dent.	
OK or NG	
OK	▶ GO TO 2.
NG	▶ Repair or replace.

2	CHECK EXHAUST AIR LEAK
<ol style="list-style-type: none"> 1. Start engine and run it at idle. 2. Listen for an exhaust air leak before the warm-up three way catalyst (manifold). 	
OK or NG	
OK	▶ GO TO 3.
NG	▶ Repair or replace.

SEC635D

3	CHECK INTAKE AIR LEAK
Listen for an intake air leak after the mass air flow sensor.	
OK or NG	
OK	▶ GO TO 4.
NG	▶ Repair or replace.

4	CHECK IGNITION TIMING								
Check the following items. Refer to "Basic Inspection", EC-116.									
<table border="1"> <thead> <tr> <th>Items</th> <th>Specifications</th> </tr> </thead> <tbody> <tr> <td>Ignition timing</td> <td>15° ± 5° BTDC</td> </tr> <tr> <td>Closed throttle position switch idle position adjustment</td> <td>Feeler gauge thickness and switch condition 0.05 mm (0.0020 in): ON 0.15 mm (0.0059 in): OFF</td> </tr> <tr> <td>Target idle speed</td> <td>750 ± 50 rpm (in "P" or "N" position)</td> </tr> </tbody> </table>		Items	Specifications	Ignition timing	15° ± 5° BTDC	Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.05 mm (0.0020 in): ON 0.15 mm (0.0059 in): OFF	Target idle speed	750 ± 50 rpm (in "P" or "N" position)
Items	Specifications								
Ignition timing	15° ± 5° BTDC								
Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.05 mm (0.0020 in): ON 0.15 mm (0.0059 in): OFF								
Target idle speed	750 ± 50 rpm (in "P" or "N" position)								
OK or NG									
OK	▶ GO TO 5.								
NG	▶ Follow the "Basic Inspection".								

MTBL1810

DTC P0420, P0430 THREE WAY CATALYST FUNCTION

Diagnostic Procedure (Cont'd)

5	CHECK INJECTORS	<ol style="list-style-type: none"> 1. Refer to WIRING DIAGRAM for Injectors, EC-688. 2. Stop engine and then turn ignition switch "ON". 3. Check voltage between ECM terminals 101, 102, 103, 104, 105, 107 and ground with CONSULT-II or tester. 	GI MA EM LC EC FE AT
		<p style="text-align: center;">Battery voltage should exist.</p>	
		OK or NG	SEF331X
OK	▶	GO TO 6.	
NG	▶	Perform "Diagnostic Procedure", "INJECTOR", EC-689.	

6	CHECK IGNITION SPARK	<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect ignition coil assembly from rocker cover. 3. Connect a known-good spark plug to the ignition coil assembly. 4. Place end of spark plug against a suitable ground and crank engine. 5. Check for spark. 	TF PD AX SU BR ST RS BT
		OK or NG	SEC152D
OK	▶	GO TO 7.	
NG	▶	Check ignition coil with power transistor and their circuit. Refer to EC-677.	

7	CHECK INJECTOR	<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Remove injector assembly. Refer to EC-53. Keep fuel hose and all injectors connected to injector gallery. 3. Disconnect all ignition coil harness connectors. 4. Turn ignition switch "ON". Make sure fuel does not drip from injector. 	HA SC EL IDX
		OK or NG	
OK (Does not drip.)	▶	GO TO 8.	
NG (Drips.)	▶	Replace the injector(s) from which fuel is dripping.	

DTC P0420, P0430 THREE WAY CATALYST FUNCTION

Diagnostic Procedure (Cont'd)


8	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	
Trouble is fixed. ▶	INSPECTION END
Trouble is not fixed. ▶	Replace warm-up three way catalyst.

System Description

NBEC0955

NOTE:

If DTC P0441 is displayed with P0510, perform trouble diagnosis for DTC P0510 first. (See EC-467.)

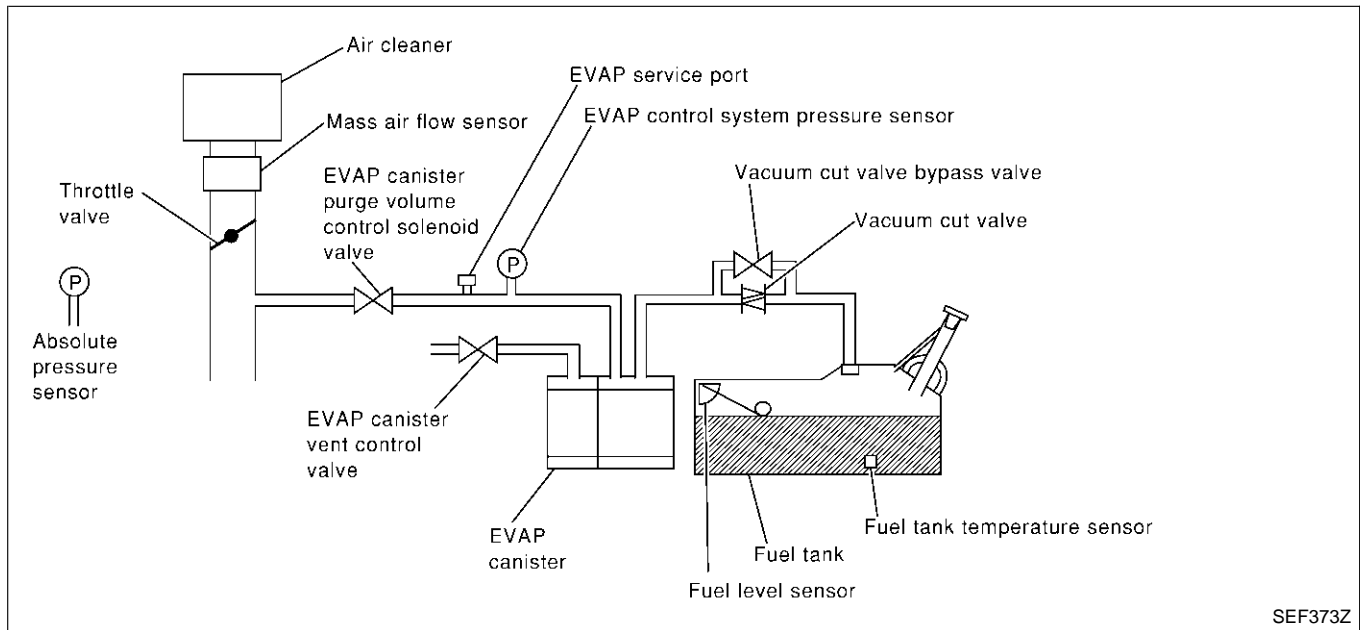

In this evaporative emission (EVAP) control system, purge flow occurs during non-closed throttle conditions. Purge volume is related to air intake volume. Under normal purge conditions (non-closed throttle), the EVAP canister purge volume control solenoid valve is open to admit purge flow. Purge flow exposes the EVAP control system pressure sensor to intake manifold vacuum.

On Board Diagnosis Logic




NBEC0956

Under normal conditions (non-closed throttle), sensor output voltage indicates if pressure drop and purge flow are adequate. If not, a fault is determined.

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0441 0441	EVAP control system incorrect purge flow	EVAP control system does not operate properly, EVAP control system has a leak between intake manifold and EVAP control system pressure sensor.	<ul style="list-style-type: none"> ● EVAP canister purge volume control solenoid valve stuck closed ● EVAP control system pressure sensor and the circuit ● Loose, disconnected or improper connection of rubber tube ● Blocked rubber tube ● Cracked EVAP canister ● EVAP canister purge volume control solenoid valve circuit ● Closed throttle position switch ● Blocked purge port ● EVAP canister vent control valve

DTC P0441 EVAP CONTROL SYSTEM

DTC Confirmation Procedure

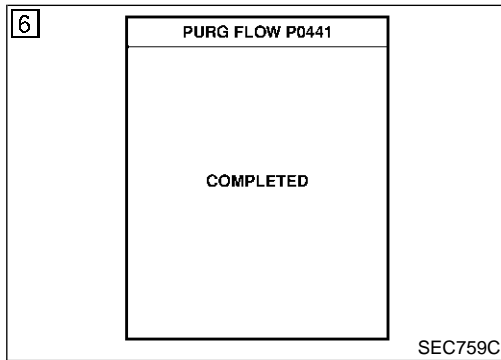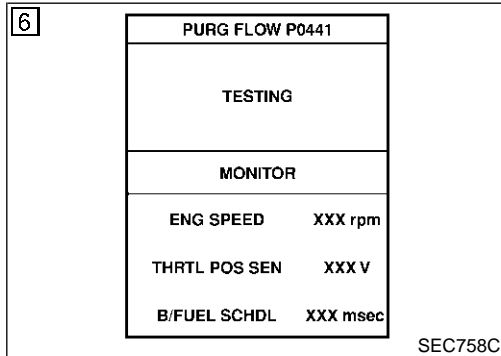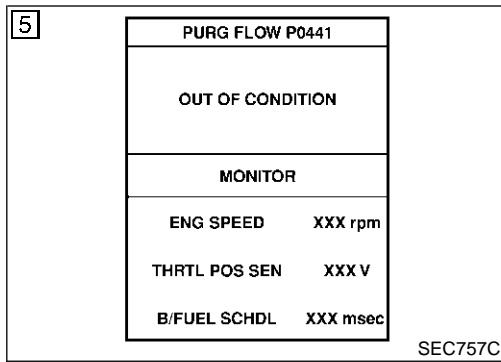

DTC Confirmation Procedure

NBEC0957

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Always perform test at a temperature of 5°C (41°F) or more.

WITH CONSULT-II


NBEC0957S01

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 10 seconds.
- 3) Start engine and let it idle for at least 70 seconds.
- 4) Select "PURG FLOW P0441" of "EVAPORATIVE SYSTEM" in "DTC CONFIRMATION" mode with CONSULT-II.
- 5) Touch "START".
If "COMPLETED" is displayed, go to step 7.
- 6) When the following conditions are met, "TESTING" will be displayed on the CONSULT-II screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take at least 35 seconds.)

Selector lever	Suitable position
Vehicle speed	32 - 120 km/h (20 - 75 MPH)
ENG SPEED	500 - 3,000 rpm
B/FUEL SCHDL	1.0 - 10 msec
Engine coolant temperature	More than 20°C (68°F)

If "TESTING" is not changed for a long time, retry from step 2.

- 7) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "Diagnostic Procedure", EC-346.

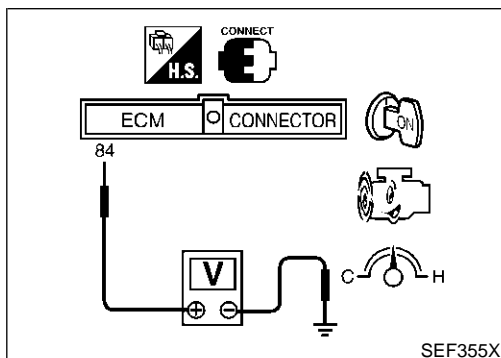

Overall Function Check

NBEC0958

Use this procedure to check the overall monitoring function of the EVAP control system purge flow monitoring. During this check, a DTC might not be confirmed.

WITH GST

NBEC0958S01

- 1) Lift up drive wheels.
- 2) Start engine (TCS switch "OFF") and warm it up to normal operating temperature.
- 3) Turn ignition switch "OFF", wait at least 10 seconds.
- 4) Start engine and wait at least 70 seconds.

DTC P0441 EVAP CONTROL SYSTEM

Overall Function Check (Cont'd)

- 5) Set voltmeter probes to ECM terminals 84 (EVAP control system pressure sensor signal) and ground.
- 6) Check EVAP control system pressure sensor value at idle speed and note it.
- 7) Establish and maintain the following conditions for at least 1 minute.

Air conditioner switch	ON
Headlamp switch	ON
Rear window defogger switch	ON
Engine speed	Approx. 3,000 rpm
Gear position	Any position other than "P", "N" or "R"

- 8) Verify that EVAP control system pressure sensor value stays 0.1V less than the value at idle speed (measured at step 6) for at least 1 second.
- 9) If NG, go to "Diagnostic Procedure", EC-346.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


DTC P0441 EVAP CONTROL SYSTEM

Diagnostic Procedure

Diagnostic Procedure


=NBEC0959

1	CHECK EVAP CANISTER	
1. Turn ignition switch "OFF". 2. Check EVAP canister for cracks.		
OK or NG		
OK (With CONSULT-II)	▶	GO TO 2.
OK (Without CONSULT-II)	▶	GO TO 3.
NG	▶	Replace EVAP canister.

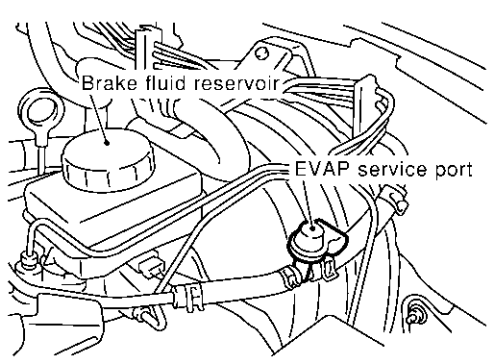2	CHECK PURGE FLOW																			
Ⓔ With CONSULT-II 1. Disconnect vacuum hose connected to EVAP canister purge volume control solenoid valve at EVAP service port and install vacuum gauge.																				
																				
SEF983Y																				
2. Start engine and let it idle. 3. Select "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. 4. Rev engine up to 2,000 rpm. 5. Touch "Qd" and "Qu" on CONSULT-II screen to adjust "PURG VOL CONT/V" opening and check vacuum existence.																				
<table border="1" style="margin: auto;"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> </thead> <tbody> <tr> <td>PURG VOL CONT/V</td> <td>XXX %</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>A/F ALPHA-B1</td> <td>XXX %</td> </tr> <tr> <td>A/F ALPHA-B2</td> <td>XXX %</td> </tr> <tr> <td>HO2S1 MNTR (B1)</td> <td>LEAN</td> </tr> <tr> <td>HO2S1 MNTR (B2)</td> <td>LEAN</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXX V</td> </tr> </tbody> </table>			ACTIVE TEST		PURG VOL CONT/V	XXX %	MONITOR		ENG SPEED	XXX rpm	A/F ALPHA-B1	XXX %	A/F ALPHA-B2	XXX %	HO2S1 MNTR (B1)	LEAN	HO2S1 MNTR (B2)	LEAN	THRTL POS SEN	XXX V
ACTIVE TEST																				
PURG VOL CONT/V	XXX %																			
MONITOR																				
ENG SPEED	XXX rpm																			
A/F ALPHA-B1	XXX %																			
A/F ALPHA-B2	XXX %																			
HO2S1 MNTR (B1)	LEAN																			
HO2S1 MNTR (B2)	LEAN																			
THRTL POS SEN	XXX V																			
<table border="1" style="margin: auto;"> <thead> <tr> <th>PURG VOL CONT/V</th> <th>VACUUM</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">100%</td> <td style="text-align: center;">Should exist</td> </tr> <tr> <td style="text-align: center;">0%</td> <td style="text-align: center;">Should not exist</td> </tr> </tbody> </table>			PURG VOL CONT/V	VACUUM	100%	Should exist	0%	Should not exist												
PURG VOL CONT/V	VACUUM																			
100%	Should exist																			
0%	Should not exist																			
SEF012ZA																				
OK or NG																				
OK	▶	GO TO 7.																		
NG	▶	GO TO 4.																		

DTC P0441 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)


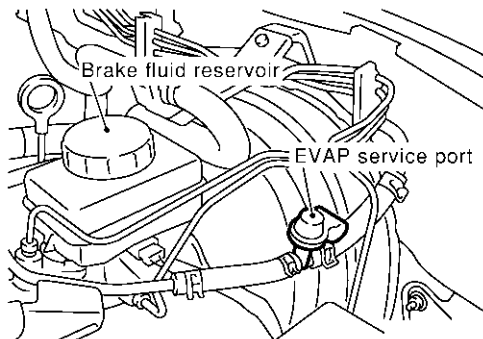
3	CHECK PURGE FLOW	<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Stop engine. 3. Disconnect vacuum hose connected to EVAP canister purge volume control solenoid valve at EVAP service port and install vacuum gauge. <div style="text-align: center;">  <p>Labels in diagram: Brake fluid reservoir, EVAP service port</p> </div> <ol style="list-style-type: none"> 4. Start engine and let it idle for at least 80 seconds. 5. Check vacuum gauge indication when revving engine up to 2,000 rpm. Vacuum should exist. 6. Release the accelerator pedal fully and let idle. Vacuum should not exist. <p style="text-align: center;">OK or NG</p>	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p>EC</p> <p>FE</p> <p>AT</p> <p>TF</p>	
	OK	▶	GO TO 7.	
	NG	▶	GO TO 4.	

SEF983Y

4	CHECK EVAP PURGE LINE	<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Check EVAP purge line for improper connection or disconnection. Refer to "EVAPORATIVE EMISSION LINE DRAWING", EC-38. <p style="text-align: center;">OK or NG</p>	<p>AX</p> <p>SU</p> <p>BR</p> <p>ST</p> <p>RS</p> <p>BT</p> <p>HA</p> <p>SC</p> <p>EL</p> <p>IDX</p>	
	OK (With CONSULT-II)	▶	GO TO 5.	
	OK (Without CONSULT-II)	▶	GO TO 6.	
	NG	▶	Repair it.	


DTC P0441 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

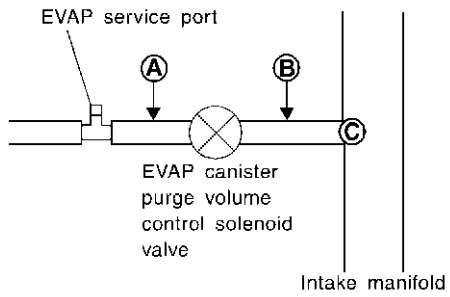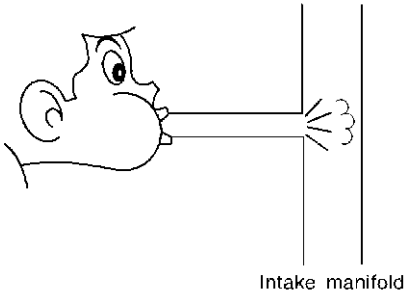5	CHECK EVAP PURGE HOSE AND PURGE PORT
<p>1. Disconnect purge hoses connected to EVAP service port A and EVAP canister purge volume control solenoid valve B.</p>	
	
<p>2. Blow air into each hose and EVAP purge port C.</p> <p>3. Check that air flows freely.</p>	
	
OK or NG	
OK	▶ GO TO 6.
NG	▶ Repair or clean hoses and/or purge port.

SEF367U



SEF368U

6	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE																				
<p> With CONSULT-II</p> <p>1. Start engine.</p> <p>2. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. Check that engine speed varies according to the valve opening.</p>																					
<table border="1" style="margin: auto;"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> </thead> <tbody> <tr> <td>PURG VOL CONT/V</td> <td>XXX %</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>A/F ALPHA-B1</td> <td>XX %</td> </tr> <tr> <td>A/F ALPHA-B2</td> <td>XX %</td> </tr> <tr> <td>HO2S1 MNTR (B1)</td> <td>LEAN</td> </tr> <tr> <td>HO2S1 MNTR (B2)</td> <td>LEAN</td> </tr> <tr> <td>THRTL POS SEN</td> <td>X. XX V</td> </tr> <tr> <td> </td> <td> </td> </tr> </tbody> </table>		ACTIVE TEST		PURG VOL CONT/V	XXX %	MONITOR		ENG SPEED	XXX rpm	A/F ALPHA-B1	XX %	A/F ALPHA-B2	XX %	HO2S1 MNTR (B1)	LEAN	HO2S1 MNTR (B2)	LEAN	THRTL POS SEN	X. XX V		
ACTIVE TEST																					
PURG VOL CONT/V	XXX %																				
MONITOR																					
ENG SPEED	XXX rpm																				
A/F ALPHA-B1	XX %																				
A/F ALPHA-B2	XX %																				
HO2S1 MNTR (B1)	LEAN																				
HO2S1 MNTR (B2)	LEAN																				
THRTL POS SEN	X. XX V																				
OK or NG																					
OK	▶ GO TO 8.																				
NG	▶ GO TO 7.																				

SEF677Y

DTC P0441 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

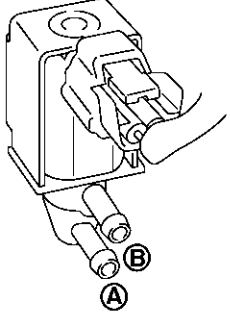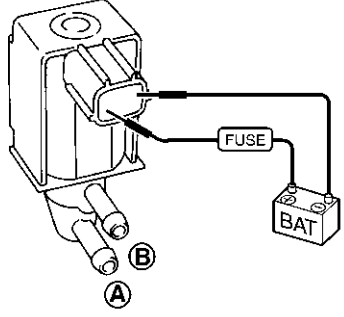
7	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE	
<p>E With CONSULT-II Check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.</p>		
		
SEF334XB		
<p>X Without CONSULT-II Check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.</p>		
		
SEF335X		
OK or NG		
OK	▶	GO TO 8.
NG	▶	Replace EVAP canister purge volume control solenoid valve.

8	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR HOSE	
<p>1. Turn ignition switch "OFF". 2. Check disconnection or improper connection of hose connected to EVAP control system pressure sensor.</p>		
OK or NG		
OK	▶	GO TO 9.
NG	▶	Repair it.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0441 EVAP CONTROL SYSTEM


Diagnostic Procedure (Cont'd)

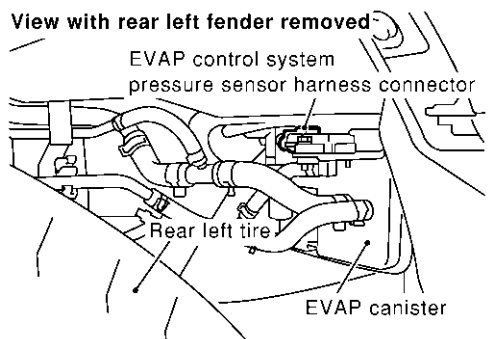9	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR CONNECTOR	
1. Disconnect EVAP control system pressure sensor harness connector.		
<p>View with rear left fender removed</p>  <p>EVAP control system pressure sensor harness connector</p> <p>Rear left tire</p> <p>EVAP canister</p>		
2. Check connectors for water. Water should not exist.		
OK or NG		
OK	▶	GO TO 10.
NG	▶	Replace EVAP control system pressure sensor.

SEC931C

10	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR FUNCTION	
Refer to "DTC Confirmation Procedure" for DTC P0452, EC-384 and P0453, EC-390.		
OK or NG		
OK	▶	GO TO 11.
NG	▶	Replace EVAP control system pressure sensor.

11	CHECK RUBBER TUBE FOR CLOGGING	
1. Disconnect rubber tube connected to EVAP canister vent control valve.		
2. Check the rubber tube for clogging.		
OK or NG		
OK	▶	GO TO 12.
NG	▶	Clean the rubber tube using an air blower.

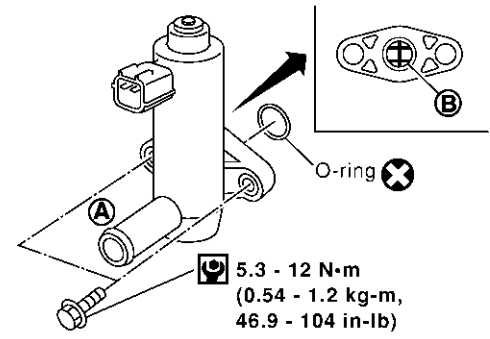12	CHECK EVAP CANISTER VENT CONTROL VALVE-I	
1. Remove EVAP canister vent control valve from EVAP canister.		
2. Check portion B of EVAP canister vent control valve for being rusted.		
 <p>O-ring</p> <p>A</p> <p>B</p> <p>5.3 - 12 N·m (0.54 - 1.2 kg-m, 46.9 - 104 in-lb)</p>		
OK or NG		
OK	▶	GO TO 13.
NG	▶	Replace EVAP canister vent control valve.

SEF376Z

DTC P0441 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

13	CHECK EVAP CANISTER VENT CONTROL VALVE-II																		
<p>E With CONSULT-II</p> <ol style="list-style-type: none"> 1. Reconnect harness connectors disconnected. 2. Turn ignition switch "ON". 3. Perform "VENT CONTROL/V" in "ACTIVE TEST" mode. 4. Check air passage continuity and operation delay time. 																			
<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th colspan="2" style="text-align: center;">ACTIVE TEST</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">VENT CONTROL/V</td> <td style="text-align: center;">OFF</td> </tr> <tr> <th colspan="2" style="text-align: center;">MONITOR</th> </tr> <tr> <td style="text-align: center;">ENG SPEED</td> <td style="text-align: center;">XXX rpm</td> </tr> <tr> <td style="text-align: center;">A/F ALPHA-B1</td> <td style="text-align: center;">XXX %</td> </tr> <tr> <td style="text-align: center;">A/F ALPHA-B2</td> <td style="text-align: center;">XXX %</td> </tr> <tr> <td style="text-align: center;">HO2S1 MNTR (B1)</td> <td style="text-align: center;">LEAN</td> </tr> <tr> <td style="text-align: center;">HO2S1 MNTR (B2)</td> <td style="text-align: center;">LEAN</td> </tr> <tr> <td style="text-align: center;">THRTL POS SEN</td> <td style="text-align: center;">XXX V</td> </tr> </tbody> </table>		ACTIVE TEST		VENT CONTROL/V	OFF	MONITOR		ENG SPEED	XXX rpm	A/F ALPHA-B1	XXX %	A/F ALPHA-B2	XXX %	HO2S1 MNTR (B1)	LEAN	HO2S1 MNTR (B2)	LEAN	THRTL POS SEN	XXX V
ACTIVE TEST																			
VENT CONTROL/V	OFF																		
MONITOR																			
ENG SPEED	XXX rpm																		
A/F ALPHA-B1	XXX %																		
A/F ALPHA-B2	XXX %																		
HO2S1 MNTR (B1)	LEAN																		
HO2S1 MNTR (B2)	LEAN																		
THRTL POS SEN	XXX V																		
<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Condition</th> <th style="width: 50%;">Air passage continuity between A and B</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">VENT CONTROL/V ON</td> <td style="text-align: center;">No</td> </tr> <tr> <td style="text-align: center;">VENT CONTROL/V OFF</td> <td style="text-align: center;">Yes</td> </tr> </tbody> </table> <p>Operation takes less than 1 second.</p>		Condition	Air passage continuity between A and B	VENT CONTROL/V ON	No	VENT CONTROL/V OFF	Yes												
Condition	Air passage continuity between A and B																		
VENT CONTROL/V ON	No																		
VENT CONTROL/V OFF	Yes																		
SEF377Z																			
<p>X Without CONSULT-II</p> <p>Check air passage continuity and operation delay time under the following conditions.</p>																			
<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Condition</th> <th style="width: 50%;">Air passage continuity between A and B</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">12V direct current supply between terminals 1 and 2</td> <td style="text-align: center;">No</td> </tr> <tr> <td style="text-align: center;">OFF</td> <td style="text-align: center;">Yes</td> </tr> </tbody> </table> <p>Operation takes less than 1 second.</p>		Condition	Air passage continuity between A and B	12V direct current supply between terminals 1 and 2	No	OFF	Yes												
Condition	Air passage continuity between A and B																		
12V direct current supply between terminals 1 and 2	No																		
OFF	Yes																		
SEF378Z																			
<p>Make sure new O-ring is installed properly.</p>																			
OK or NG																			
OK	▶	GO TO 15.																	
NG	▶	GO TO 14.																	



14	CHECK EVAP CANISTER VENT CONTROL VALVE-III	
<ol style="list-style-type: none"> 1. Clean the air passage (Portion A to B) of EVAP canister vent control valve using an air blower. 2. Perform Test No. 13 again. 		
OK or NG		
OK (With CONSULT-II)	▶	GO TO 16.
OK (Without CONSULT-II)	▶	GO TO 15.
NG	▶	Replace EVAP canister vent control valve.

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P0441 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

15	CHECK THROTTLE POSITION SWITCH							
<p>E With CONSULT-II</p> <ol style="list-style-type: none"> 1. Install all removed parts. 2. Start engine and warm it up to normal operating temperature. 3. Turn ignition switch "OFF". 4. Turn ignition switch "ON". 5. Select "DATA MONITOR" mode with CONSULT-II. 6. Check indication of "CLSD THL/P SW" under the following conditions. Measurement must be made with throttle position switch installed in vehicle. 								
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="padding: 2px;">Throttle valve conditions</th> <th style="padding: 2px;">CLSD THL/P SW</th> </tr> </thead> <tbody> <tr> <td style="padding: 2px;">Completely closed</td> <td style="padding: 2px;">ON</td> </tr> <tr> <td style="padding: 2px;">Partially open or completely open</td> <td style="padding: 2px;">OFF</td> </tr> </tbody> </table>			Throttle valve conditions	CLSD THL/P SW	Completely closed	ON	Partially open or completely open	OFF
Throttle valve conditions	CLSD THL/P SW							
Completely closed	ON							
Partially open or completely open	OFF							
MTBL0355								
OK or NG								
OK	▶	GO TO 18.						
NG	▶	GO TO 17.						

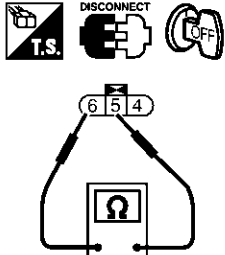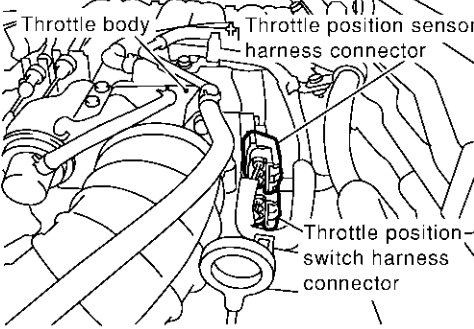16	CHECK THROTTLE POSITION SWITCH							
<ol style="list-style-type: none"> 1. Install all removed parts. 2. Start engine and warm it up to normal operating temperature. 3. Turn ignition switch "OFF". 4. Disconnect closed throttle position switch harness connector. 5. Check continuity between closed throttle position switch terminals 6 and 5 under the following conditions. Resistance measurement must be made with throttle position switch installed in vehicle. 								
<div style="display: flex; align-items: flex-start;"> <div style="flex: 1;">  </div> <div style="flex: 2;">  </div> <div style="flex: 1; margin-left: 20px;"> <table border="1" style="margin-top: 20px; border-collapse: collapse;"> <thead> <tr> <th style="padding: 2px;">Throttle valve conditions</th> <th style="padding: 2px;">Continuity</th> </tr> </thead> <tbody> <tr> <td style="padding: 2px;">Completely closed</td> <td style="padding: 2px;">Yes</td> </tr> <tr> <td style="padding: 2px;">Partially open or completely open</td> <td style="padding: 2px;">No</td> </tr> </tbody> </table> </div> </div>			Throttle valve conditions	Continuity	Completely closed	Yes	Partially open or completely open	No
Throttle valve conditions	Continuity							
Completely closed	Yes							
Partially open or completely open	No							
SEF998Y								
OK or NG								
OK	▶	GO TO 18.						
NG	▶	GO TO 17.						

DTC P0441 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

17	ADJUST THROTTLE POSITION SWITCH	
Check the following items. Refer to "Basic Inspection", EC-116.		
	Items	Specifications
	Ignition timing	15° ± 5° BTDC
	Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.05 mm (0.0020 in): ON 0.15 mm (0.0059 in): OFF
	Target idle speed	750 ± 50 rpm (in "P" or "N" position)
Is it possible to adjust closed throttle position switch?		MTBL1810
Yes or No		
Yes	▶	GO TO 18.
No	▶	Replace throttle position switch.

18	CHECK EVAP PURGE LINE	
Inspect EVAP purge line (pipe and rubber tube). Check for evidence of leaks. Refer to "EVAPORATIVE EMISSION LINE DRAWING", EC-38.		
OK or NG		
OK	▶	GO TO 19.
NG	▶	Replace it.

19	CLEAN EVAP PURGE LINE	
Clean EVAP purge line (pipe and rubber tube) using air blower.		
	▶	GO TO 20.

20	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.		
	▶	INSPECTION END

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0442 EVAP CONTROL SYSTEM

On Board Diagnosis Logic

NBEC0960


NOTE:

If DTC P0442 is displayed with P1448, first perform trouble diagnosis for DTC P1448. (See EC-616.)

This diagnosis detects leaks in the EVAP purge line using engine intake manifold vacuum.

If pressure does not increase, the ECM will check for leaks in the line between the fuel tank and EVAP canister purge volume control solenoid valve, under the following "Vacuum test" conditions.

The vacuum cut valve bypass valve is opened to clear the line between the fuel tank and the EVAP canister purge volume control solenoid valve. The EVAP canister vent control valve will then be closed to shut the EVAP purge line off. The EVAP canister purge volume control solenoid valve is opened to depressurize the EVAP purge line using intake manifold vacuum. After this occurs, the EVAP canister purge volume control solenoid valve will be closed.

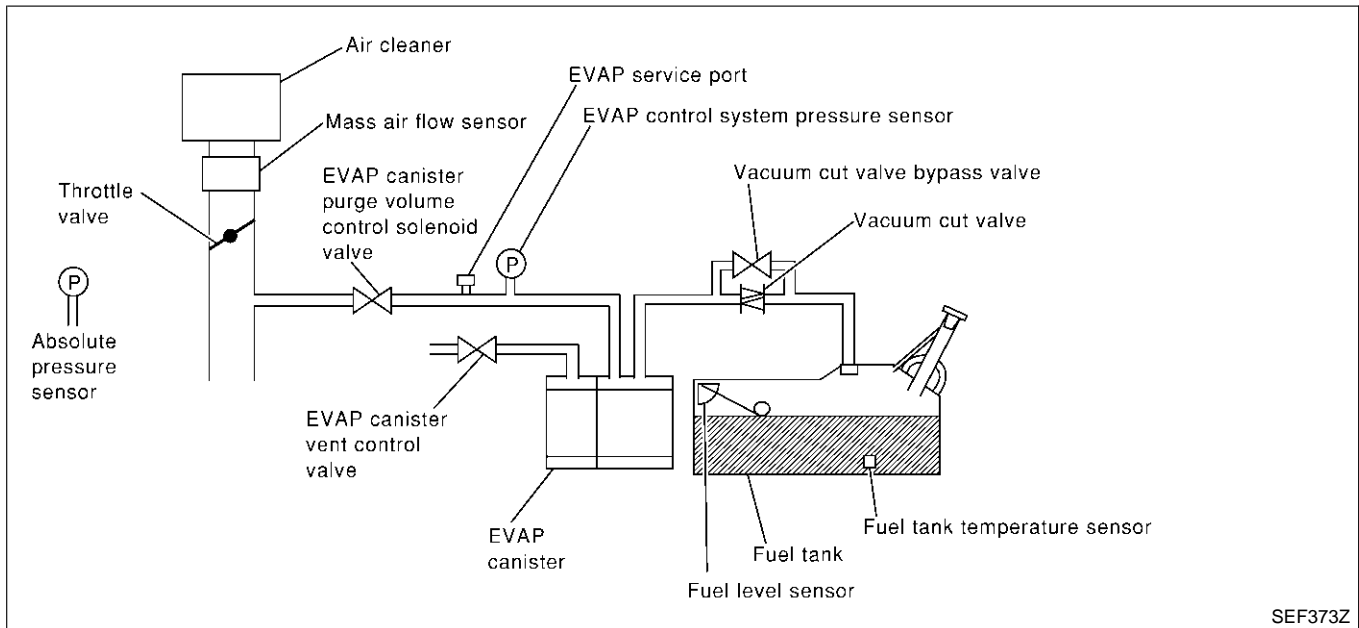

SEF373Z

DTC P0442 EVAP CONTROL SYSTEM

On Board Diagnosis Logic (Cont'd)

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0442 0442	EVAP control system small leak detected (negative pressure)	EVAP control system has a leak, EVAP control system does not operate properly.	<ul style="list-style-type: none"> ● Incorrect fuel tank vacuum relief valve ● Incorrect fuel filler cap used ● Fuel filler cap remains open or fails to close. ● Foreign matter caught in fuel filler cap ● Leak is in line between intake manifold and EVAP canister purge volume control solenoid valve. ● Foreign matter caught in EVAP canister vent control valve ● EVAP canister or fuel tank leaks ● EVAP purge line (pipe and rubber tube) leaks ● EVAP purge line rubber tube bent ● Blocked or bent rubber tube to EVAP control system pressure sensor ● Loose or disconnected rubber tube ● EVAP canister vent control valve and the circuit ● EVAP canister purge volume control solenoid valve and the circuit ● Absolute pressure sensor ● Fuel tank temperature sensor ● O-ring of EVAP canister vent control valve is missing or damaged. ● Water separator ● EVAP canister is saturated with water. ● EVAP control system pressure sensor ● Fuel level sensor and the circuit ● Refueling control valve ● ORVR system leaks

CAUTION:

- Use only a genuine NISSAN fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may come on.
- If the fuel filler cap is not tightened properly, the MIL may come on.
- Use only a genuine NISSAN rubber tube as a replacement.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0442 EVAP CONTROL SYSTEM

DTC Confirmation Procedure

5

EVAP SML LEAK P0442/P1442

1)FOR BEST RSLT,PERFORM AT FOLLOWING CONDITIONS.
 -FUEL LEVEL: 1/4-3/4
 -AMBIENT TEMP: 0-30 C(32-86F)
 -OPEN ENGINE HOOD.
 2)START ENG WITH VHCL STOPPED. IF ENG IS ON,STOP FOR 5 SEC. THEN RESTART.
 3)TOUCH START.

SEC760C

5

EVAP SML LEAK P0442/P1442


WAIT
2 TO 10 MINUTES.
KEEP ENGINE RUNNING AT IDLE SPEED.

SEC761C

5

EVAP SML LEAK P0442/P1442

MAINTAIN
1600 - 2100 RPM UNTIL FINAL RESULT APPEARS.
(APPROX. 3 MINUTES)



SEC762C

5

EVAP SML LEAK P0442/P1442

OK

SELF-DIAG RESULTS

NO DTC DETECTED.
FURTHER TESTING
MAY BE REQUIRED.

SEC763C

DTC Confirmation Procedure

NBEC0961

NOTE:

- If DTC P0442 is displayed with P0107, P0108 or P1448, perform trouble diagnosis for other DTCs.
- If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

- Perform “DTC WORK SUPPORT” when the fuel level is between 1/4 and 3/4 full, and vehicle is placed on flat level surface.
- Open engine hood before conducting the following procedure.

WITH CONSULT-II

NBEC0961S01

- 1) Turn ignition switch “ON”.
- 2) Turn ignition switch “OFF” and wait at least 10 seconds.
- 3) Turn ignition switch “ON” and select “DATA MONITOR” mode with CONSULT-II.
- 4) Make sure that the following conditions are met.
COOLAN TEMP/S: 0 - 70°C (32 - 158°F)
INT/A TEMP SE: 0 - 30°C (32 - 86°F)
- 5) Select “EVP SML LEAK P0442/P1442” of “EVAPORATIVE SYSTEM” in “DTC WORK SUPPORT” mode with CONSULT-II.
 Follow the instruction displayed.

NOTE:

If the engine speed cannot be maintained within the range displayed on the CONSULT-II screen, go to “Basic Inspection”, EC-116.

- 6) Make sure that “OK” is displayed.
 If “NG” is displayed, refer to “Diagnostic Procedure”, EC-357.

NOTE:

Make sure that EVAP hoses are connected to EVAP canister purge volume control solenoid valve properly.

WITH GST

NBEC0961S02

NOTE:

Be sure to read the explanation of “Driving Pattern” on EC-78 before driving vehicle.

- 1) Start engine.
- 2) Drive vehicle according to “Driving Pattern”, EC-78.
- 3) Stop vehicle.
- 4) Select “MODE 1” with GST.
 - If SRT of EVAP system is not set yet, go to the following step.
 - If SRT of EVAP system is set, the result will be OK.
- 5) Turn ignition switch “OFF” and wait at least 10 seconds.
- 6) Start engine.
It is not necessary to cool engine down before driving.
- 7) Drive vehicle again according to the “Driving Pattern”, EC-78.
- 8) Stop vehicle.
- 9) Select “MODE 3” with GST.
 - If P0442 is displayed on the screen, go to “Diagnostic Procedure”, EC-357.
 - If P0441 is displayed on the screen, go to “Diagnostic Procedure” for DTC P0441, EC-346.

DTC P0442 EVAP CONTROL SYSTEM

DTC Confirmation Procedure (Cont'd)

- If P0441 and P0442 are not displayed on the screen, go to the following step.
- 10) Select "MODE 1" with GST.
- If SRT of EVAP system is set, the result will be OK.
- If SRT of EVAP system is not set, go to step 6.

GI


MA

EM

LC

Diagnostic Procedure

NBEC0962

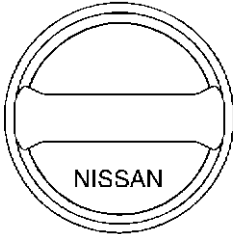1	CHECK FUEL FILLER CAP DESIGN	
<p>1. Turn ignition switch "OFF". 2. Check for genuine NISSAN fuel filler cap design.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF915U</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 2.
NG	▶	Replace with genuine NISSAN fuel filler cap.

EC

FE

AT

TF

PD

AX

2	CHECK FUEL FILLER CAP INSTALLATION	
<p>Check that the cap is tightened properly by rotating the cap clockwise.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 3.
NG	▶	<ul style="list-style-type: none"> ● Open fuel filler cap, then clean cap and fuel filler neck threads using air blower. ● Retighten until ratcheting sound is heard.

BR

ST

RS

3	CHECK FUEL FILLER CAP FUNCTION	
<p>Check for air releasing sound while opening the fuel filler cap.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 5.
NG	▶	GO TO 4.

BT

HA

SC

EL


IDX

DTC P0442 EVAP CONTROL SYSTEM


Diagnostic Procedure (Cont'd)

4 CHECK FUEL TANK VACUUM RELIEF VALVE

1. Wipe clean valve housing.
2. Check valve opening pressure and vacuum.

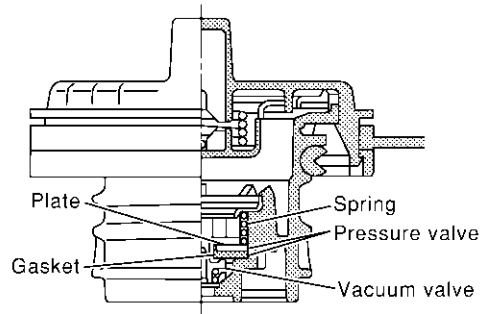

SEF445Y

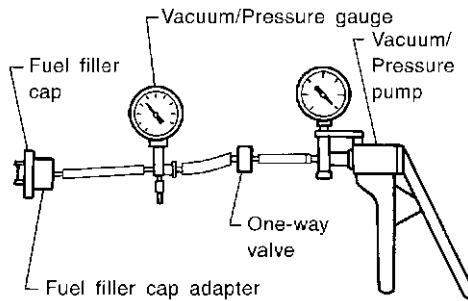

SEF943S

Pressure:

15.3 - 20.0 kPa (0.156 - 0.204 kg/cm², 2.22 - 2.90 psi)

Vacuum:

-6.0 to -3.3 kPa (-0.061 to -0.034 kg/cm², -0.87 to -0.48 psi)

CAUTION:

Use only a genuine fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may come on.

OK or NG

OK



GO TO 5.

NG




Replace fuel filler cap with a genuine one.

DTC P0442 EVAP CONTROL SYSTEM


Diagnostic Procedure (Cont'd)

5 INSTALL THE PRESSURE PUMP

To locate the EVAP leak, install EVAP service port adapter and pressure pump to EVAP service port securely.

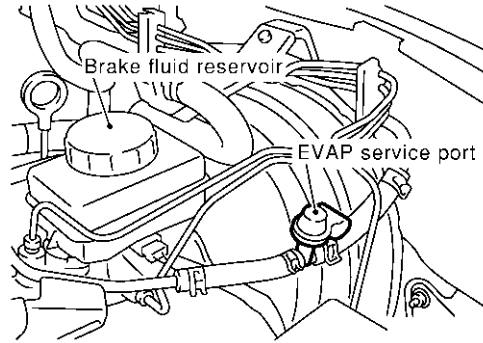

SEF983Y

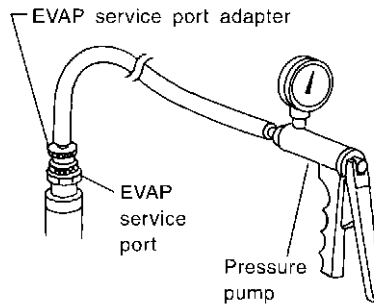

SEF916U

NOTE:

Improper installation of the EVAP service port adapter to the EVAP service port may cause leaking.

With CONSULT-II	▶	GO TO 6.
Without CONSULT-II	▶	GO TO 7.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0442 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)


6 CHECK FOR EVAP LEAK

With CONSULT-II

1. Turn ignition switch "ON".
2. Select "EVAP SYSTEM CLOSE" of "WORK SUPPORT" mode with CONSULT-II.
3. Touch "START" and apply pressure into the EVAP line until the pressure indicator reaches the middle of the bar graph.

NOTE:


- Never use compressed air or a high pressure pump.
- Do not exceed 4.12 kPa (0.042 kg/cm², 0.6 psi) of pressure in the system.

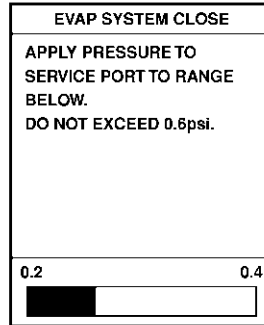

PEF917U

4. Using EVAP leak detector, locate the EVAP leak. For the leak detector, refer to the instruction manual for more details. Refer to "EVAPORATIVE EMISSION LINE DRAWING", EC-38.

Leak detector

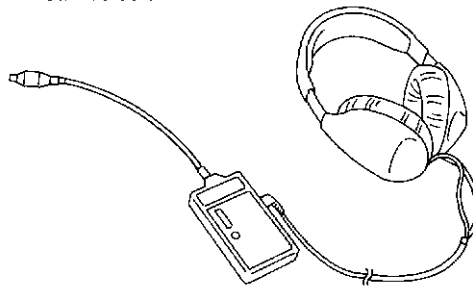

SEF200U

OK or NG

OK ► GO TO 8.

NG ► Repair or replace.

DTC P0442 EVAP CONTROL SYSTEM


Diagnostic Procedure (Cont'd)

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

7 CHECK FOR EVAP LEAK


⊗ Without CONSULT-II

1. Turn ignition switch "OFF".
2. Apply 12 volts DC to EVAP canister vent control valve. The valve will close. (Continue to apply 12 volts until the end of test.)

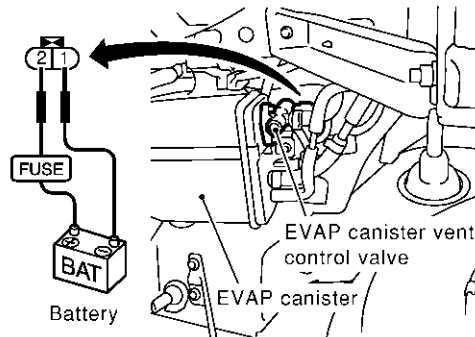

SEC930C

3. Apply 12 volts DC to vacuum cut valve bypass valve. The valve will open. (Continue to apply 12V until the end of test.)

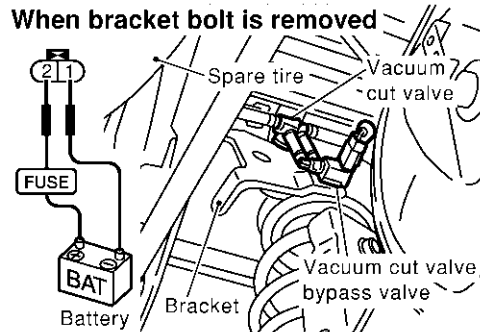

SEC932C


4. Pressurize the EVAP line using pressure pump with 1.3 to 2.7 kPa (10 to 20 mmHg, 0.39 to 0.79 inHg), then remove pump and EVAP service port adapter.

NOTE:

- Never use compressed air or a high pressure pump.
- Do not exceed 4.12 kPa (0.042 kg/cm², 0.6 psi) of pressure in the system.

5. Using EVAP leak detector, locate the EVAP leak. For the leak detector, refer to the instruction manual for more details. Refer to "EVAPORATIVE EMISSION LINE DRAWING", EC-38.

Leak detector

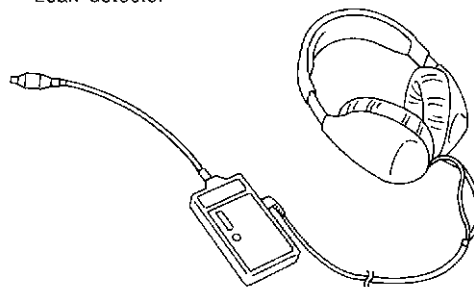

SEF200U

OK or NG

OK ► GO TO 8.

NG ► Repair or replace.

DTC P0442 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

8	CHECK WATER SEPARATOR	
<ol style="list-style-type: none"> 1. Check visually for insect nests in the water separator air inlet. 2. Check visually for cracks or flaws in the appearance. 3. Check visually for cracks or flaws in the hose. 4. Check that A and C are not clogged by blowing air into B with A, and then C plugged. 		
<p>* (A) : Bottom hole (To atmosphere) (B) : Emergency tube (From EVAP canister) (C) : Inlet port (To member)</p>		
PBIB1032E		
<ol style="list-style-type: none"> 5. In case of NG in items 2 - 4, replace the parts. <p>NOTE:</p> <ul style="list-style-type: none"> ● Do not disassemble water separator. 		
OK or NG		
OK	▶	GO TO 9.
NG	▶	Replace water separator.

9	CHECK EVAP CANISTER VENT CONTROL VALVE, O-RING AND CIRCUIT	
Refer to "DTC Confirmation Procedure", EC-378.		
OK or NG		
OK	▶	GO TO 10.
NG	▶	Repair or replace EVAP canister vent control valve and O-ring or harness/connector.

10	CHECK IF EVAP CANISTER SATURATED WITH WATER	
<ol style="list-style-type: none"> 1. Remove EVAP canister with EVAP canister vent control valve attached. 2. Does water drain from the EVAP canister? 		
Yes or No		
Yes	▶	GO TO 11.
No (With CONSULT-II)	▶	GO TO 13.
No (Without CONSULT-II)	▶	GO TO 14.

DTC P0442 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

11	CHECK EVAP CANISTER	
Weigh the EVAP canister with the EVAP canister vent control valve attached. The weight should be less than 1.8 kg (4.0 lb).		
OK or NG		
OK (With CONSULT-II)	▶	GO TO 13.
OK (Without CONSULT-II)	▶	GO TO 14.
NG	▶	GO TO 12.

GI
MA
EM
LC

12	DETECT MALFUNCTIONING PART	
Check the following.		
<ul style="list-style-type: none"> ● EVAP canister for damage ● EVAP hose between EVAP canister and water separator for clogging or poor connection 		
	▶	Repair hose or replace EVAP canister.

EC
FE

13	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION																					
<p>E With CONSULT-II</p> <ol style="list-style-type: none"> 1. Disconnect vacuum hose to EVAP canister purge volume control solenoid valve at EVAP service port. 2. Start engine. 3. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode. 4. Touch "Qu" on CONSULT-II screen to increase "PURG VOL CONT/V" opening to 100%. 5. Check vacuum hose for vacuum when revving engine up to 2,000 rpm. 																						
<table border="1" style="margin: auto;"> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <td>PURG VOL CONT/V</td> <td>XXX %</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>A/F ALPHA-B1</td> <td>XXX %</td> </tr> <tr> <td>A/F ALPHA-B2</td> <td>XXX %</td> </tr> <tr> <td>HO2S1 MNTR (B1)</td> <td>LEAN</td> </tr> <tr> <td>HO2S1 MNTR (B2)</td> <td>LEAN</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXX V</td> </tr> <tr> <td> </td> <td> </td> </tr> </table> <p style="text-align: center;">Vacuum should exist.</p>			ACTIVE TEST		PURG VOL CONT/V	XXX %	MONITOR		ENG SPEED	XXX rpm	A/F ALPHA-B1	XXX %	A/F ALPHA-B2	XXX %	HO2S1 MNTR (B1)	LEAN	HO2S1 MNTR (B2)	LEAN	THRTL POS SEN	XXX V		
ACTIVE TEST																						
PURG VOL CONT/V	XXX %																					
MONITOR																						
ENG SPEED	XXX rpm																					
A/F ALPHA-B1	XXX %																					
A/F ALPHA-B2	XXX %																					
HO2S1 MNTR (B1)	LEAN																					
HO2S1 MNTR (B2)	LEAN																					
THRTL POS SEN	XXX V																					
OK or NG																						
OK	▶	GO TO 16.																				
NG	▶	GO TO 15.																				

AT
TF
PD
AX
SU
BR
ST

SEF984Y

14	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION	
<p>X Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Stop engine. 3. Disconnect vacuum hose to EVAP canister purge volume control solenoid valve at EVAP service port. 4. Start engine and let it idle for at least 80 seconds. 5. Check vacuum hose for vacuum when revving engine up to 2,000 rpm. <p style="color: blue;">Vacuum should exist.</p>		
OK or NG		
OK	▶	GO TO 17.
NG	▶	GO TO 15.

RS
BT
HA
SC
EL
IDX

DTC P0442 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

15	CHECK VACUUM HOSE	
Check vacuum hoses for clogging or disconnection. Refer to "Vacuum Hose Drawing", EC-28.		
OK or NG		
OK (With CONSULT-II)	▶	GO TO 16.
OK (Without CONSULT-II)	▶	GO TO 17.
NG	▶	Repair or reconnect the hose.

16	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE																					
<p>Ⓔ With CONSULT-II</p> <p>1. Start engine.</p> <p>2. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. Check that engine speed varies according to the valve opening.</p>																						
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <td>PURG VOL CONT/V</td> <td>XXX %</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>A/F ALPHA-B1</td> <td>XX %</td> </tr> <tr> <td>A/F ALPHA-B2</td> <td>XX %</td> </tr> <tr> <td>HO2S1 MNTR (B1)</td> <td>LEAN</td> </tr> <tr> <td>HO2S1 MNTR (B2)</td> <td>LEAN</td> </tr> <tr> <td>THRTL POS SEN</td> <td>X. XX V</td> </tr> <tr> <td> </td> <td> </td> </tr> </table>			ACTIVE TEST		PURG VOL CONT/V	XXX %	MONITOR		ENG SPEED	XXX rpm	A/F ALPHA-B1	XX %	A/F ALPHA-B2	XX %	HO2S1 MNTR (B1)	LEAN	HO2S1 MNTR (B2)	LEAN	THRTL POS SEN	X. XX V		
ACTIVE TEST																						
PURG VOL CONT/V	XXX %																					
MONITOR																						
ENG SPEED	XXX rpm																					
A/F ALPHA-B1	XX %																					
A/F ALPHA-B2	XX %																					
HO2S1 MNTR (B1)	LEAN																					
HO2S1 MNTR (B2)	LEAN																					
THRTL POS SEN	X. XX V																					
OK or NG																						
OK	▶	GO TO 18.																				
NG	▶	GO TO 17.																				

SEF677Y

DTC P0442 EVAP CONTROL SYSTEM


Diagnostic Procedure (Cont'd)

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


17 CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

ⓔ With CONSULT-II

Check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.

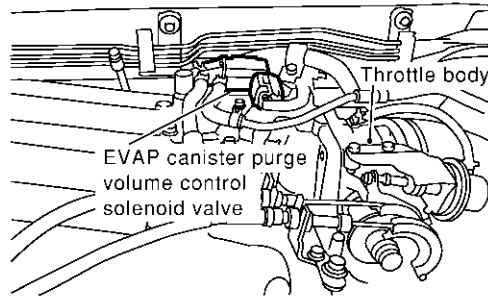

SEF986Y

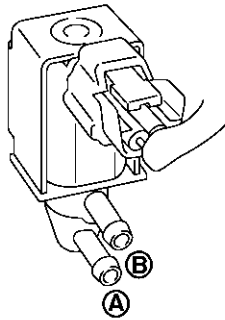


Condition PURG VOL CONT/V valve	Air passage continuity between A and B
100%	Yes
0%	No


SEF334XB

ⓧ Without CONSULT-II

Check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.

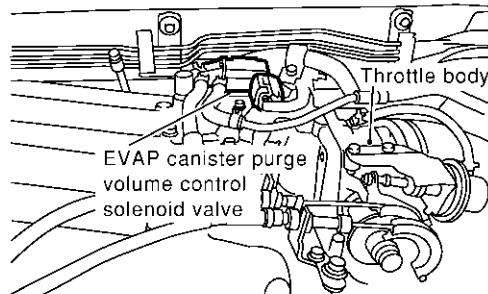

SEF986Y

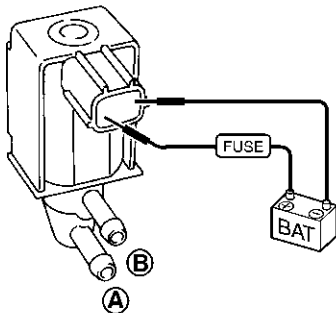

Condition	Air passage continuity between A and B
12V direct current supply between terminals 1 and 2	Yes
No supply	No

SEF335X

OK or NG


OK	▶	GO TO 18.
NG	▶	Replace EVAP canister purge volume control solenoid valve.

DTC P0442 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

18 CHECK FUEL TANK TEMPERATURE SENSOR

1. Remove fuel level sensor unit.
2. Check resistance between fuel level sensor unit and fuel pump terminals 1 and 2 by heating with hot water or heat gun as shown in the figure.

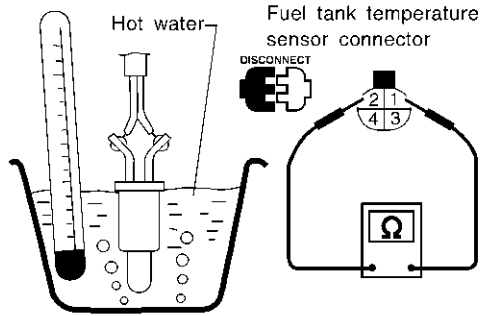

Temperature °C (°F)	Resistance kΩ
20 (68)	2.3 - 2.7
50 (122)	0.79 - 0.90

SEF974Y

OK or NG

OK	▶	GO TO 19.
NG	▶	Replace fuel level sensor unit.

DTC P0442 EVAP CONTROL SYSTEM


Diagnostic Procedure (Cont'd)

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

19 CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

1. Remove EVAP control system pressure sensor with its harness connector connected.

- CAUTION:**
- Never apply force to the air hole protector of the sensor if equipped.

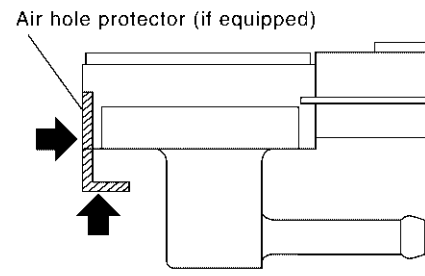


SEF799W

2. Remove hose from EVAP control system pressure sensor.
3. Turn ignition switch "ON".
4. Use pump to apply vacuum and pressure to EVAP control system pressure sensor as shown in figure.

- CAUTION:**
- Always calibrate the vacuum pump gauge when using it.
 - Do not apply below -20 kPa (-150 mmHg , -5.91 inHg) or over 20 kPa (150 mmHg , 5.91 inHg) of pressure.

5. Check input voltage between ECM terminal 84 and ground.

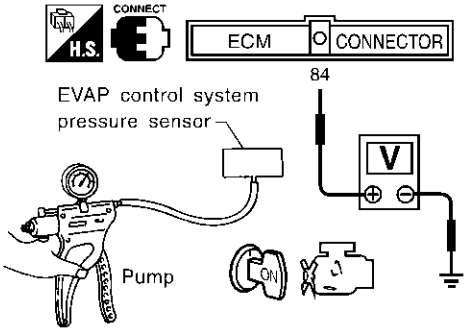

Pressure (Relative to atmospheric pressure)	Voltage V
0 kPa (0 mmHg, 0 inHg)	3.0 - 3.6
-9.3 kPa (-70 mmHg, -2.76 inHg)	0.4 - 0.6

SEF342X

- CAUTION:**
- Discard and EVAP control system pressure sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

OK or NG

OK	▶	GO TO 20.
NG	▶	Replace EVAP control system pressure sensor.

20 CHECK EVAP PURGE LINE

Check EVAP purge line (pipe, rubber tube, fuel tank and EVAP canister) for cracks or improper connection. Refer to "Evaporative Emission System", EC-34.

OK or NG

OK	▶	GO TO 21.
NG	▶	Repair or reconnect the hose.

21 CLEAN EVAP PURGE LINE

Clean EVAP purge line (pipe and rubber tube) using air blower.


	▶	GO TO 22.
--	---	-----------

DTC P0442 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

22	CHECK REFUELING EVAP VAPOR LINE	
<ul style="list-style-type: none"> Check refueling EVAP vapor line between EVAP canister and fuel tank for clogging, kink, looseness and improper connection. For location, refer to "EVAPORATIVE EMISSION LINE DRAWING", EC-38. 		
OK or NG		
OK	▶	GO TO 23.
NG	▶	Repair or replace hoses and tubes.

23	CHECK SIGNAL LINE AND RECIRCULATION LINE	
<ul style="list-style-type: none"> Check signal line and recirculation line between filler neck tube and fuel tank for clogging, kink, cracks, looseness and improper connection. 		
OK or NG		
OK	▶	GO TO 24.
NG	▶	Repair or replace hoses, tubes or filler neck tube.

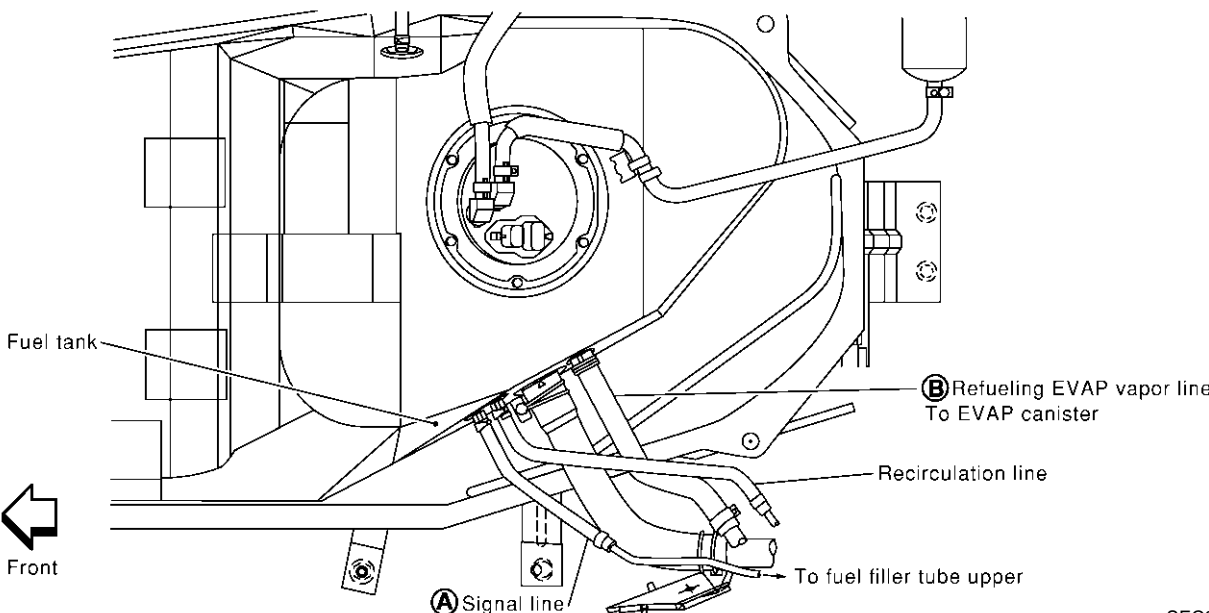24	CHECK REFUELING CONTROL VALVE	
<ol style="list-style-type: none"> Remove fuel filler cap. Check air continuity between hose ends A and B. Blow air into hose end B. Air should flow freely into the fuel tank. Blow air into hose end A and check that there is no leakage. Apply pressure to both hose ends A and B [20 kPa (150 mmHg, 5.91 inHg)] using a pressure pump and a suitable 3-way connector. Check that there is no leakage. 		
		
OK or NG		
OK	▶	GO TO 25.
NG	▶	Replace or refueling control valve with fuel tank.

25	CHECK FUEL LEVEL SENSOR	
Refer to EL-130, "Fuel Level Sensor Unit Check".		
OK or NG		
OK	▶	GO TO 26.
NG	▶	Replace fuel level sensor unit.

DTC P0442 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

26	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	
▶	INSPECTION END

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0444, P0445 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Description


Description SYSTEM DESCRIPTION

NBEC0963

NBEC0963S01

Sensor	Input Signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS)	Engine speed (POS signal)	EVAP canister purge flow control	EVAP canister purge volume control solenoid valve
Crankshaft position sensor (REF)	Engine speed (REF signal)		
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Ignition switch	Start signal		
Throttle position sensor	Throttle position		
Throttle position switch	Closed throttle position		
Heated oxygen sensor 1	Density of oxygen in exhaust gas (Mixture ratio feedback signal)		
Fuel tank temperature sensor	Fuel temperature in fuel tank		
Vehicle speed sensor	Vehicle speed		

This system controls flow rate of fuel vapor from the EVAP canister. The opening of the vapor by-pass passage in the EVAP canister purge volume control solenoid valve changes to control the flow rate. The EVAP canister purge volume control solenoid valve repeats ON/OFF operation according to the signal sent from the ECM. The opening of the valve varies for optimum engine control. The optimum value stored in the ECM is determined by considering various engine conditions. When the engine is operating, the flow rate of fuel vapor from the EVAP canister is regulated as the air flow changes.

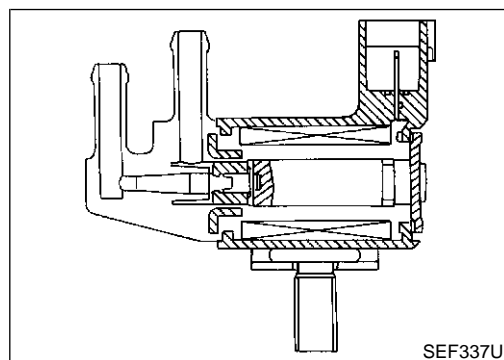

COMPONENT DESCRIPTION

NBEC0963S02

The EVAP canister purge volume control solenoid valve uses an ON/OFF duty to control the flow rate of fuel vapor from the EVAP canister. The EVAP canister purge volume control solenoid valve is moved by ON/OFF pulses from the ECM. The longer the ON pulse, the greater the amount of fuel vapor that will flow through the valve.

CONSULT-II Reference Value in Data Monitor Mode

NBEC0964

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION	
PURG VOL C/V	● Engine: After warming up ● Air conditioner switch "OFF" ● Shift lever: "N" ● No-load	Idle (Vehicle stopped)	0%
		2,000 rpm	—

DTC P0444, P0445 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

ECM Terminals and Reference Value

ECM Terminals and Reference Value

NBEC0965

Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
1	L/Y	EVAP canister purge volume control solenoid valve	<p>[Engine is running]</p> <ul style="list-style-type: none"> Idle speed 	<p>BATTERY VOLTAGE (11 - 14V)</p> <p>SEF994U</p>
			<p>[Engine is running]</p> <ul style="list-style-type: none"> Engine speed is about 2,000 rpm (More than 100 seconds after starting engine). 	<p>BATTERY VOLTAGE (11 - 14V)</p> <p>SEF995U</p>

On Board Diagnosis Logic

NBEC0966

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0444 0444	EVAP canister purge volume control solenoid valve circuit open	An excessively low voltage signal is sent to ECM through the valve.	<ul style="list-style-type: none"> Harness or connectors (The sensor circuit is open or shorted.) EVAP canister purge volume control solenoid valve
P0445 0445	EVAP canister purge volume control solenoid valve circuit shorted	An excessively high voltage signal is sent to ECM through the valve.	<ul style="list-style-type: none"> Harness or connectors (The sensor circuit is shorted.) EVAP canister purge volume control solenoid valve

DTC P0444, P0445 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

DTC Confirmation Procedure

3	DATA MONITOR	
	MONITOR	NO DTC
	ENG SPEED	XXX rpm

SEF058Y

DTC Confirmation Procedure

NBEC0967

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm battery voltage is more than 11V at idle.

WITH CONSULT-II

NBEC0967S01

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and let it idle for at least 13 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-374.

WITH GST

NBEC0967S02

Follow the procedure "WITH CONSULT-II" above.

DTC P0444, P0445 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Wiring Diagram

Wiring Diagram

NBEC0968

EC-PGC/V-01

GI

: Detectable line for DTC
 : Non-detectable line for DTC

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS



BT

HA

SC



EL

IDX

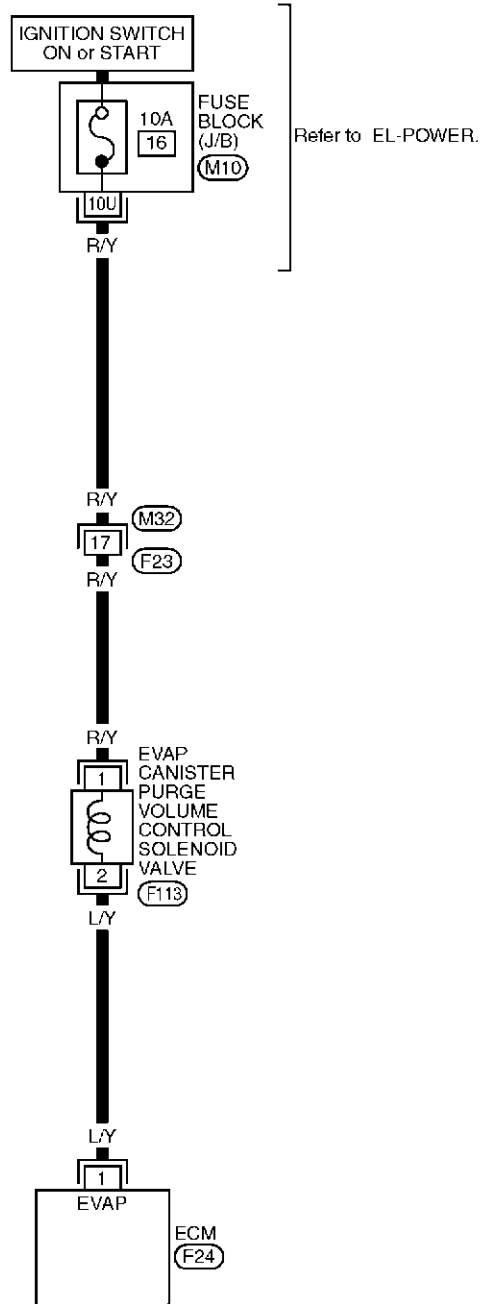

REFER TO THE FOLLOWING.

M10 - FUSE BLOCK-JUNCTION BOX (J/B)

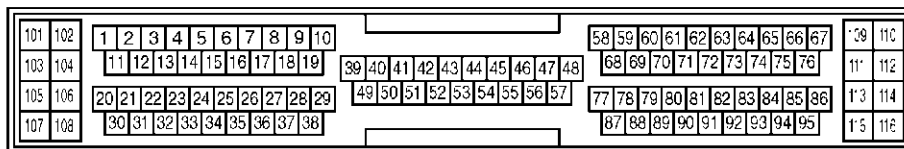



MEC962C

DTC P0444, P0445 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Diagnostic Procedure

Diagnostic Procedure

NBEC0969

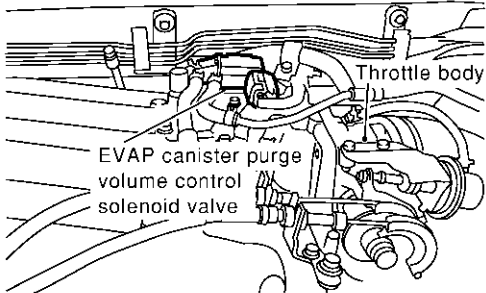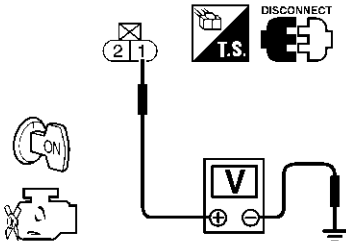1	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE POWER SUPPLY CIRCUIT	
<p>1. Turn ignition switch "OFF". 2. Disconnect EVAP canister purge volume control solenoid valve harness connector.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF986Y</p> <p>3. Turn ignition switch "ON". 4. Check voltage between EVAP canister purge volume control solenoid valve terminal 1 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p style="text-align: right;">Voltage: Battery voltage</p> </div> <p style="text-align: right;">SEF988Y</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 3.
NG	▶	GO TO 2.

2	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M32, F23 ● Fuse block (J/B) connector M10 ● 10A fuse ● Harness for open or short between EVAP canister purge volume control solenoid valve and fuse 		
	▶	Repair harness or connectors.

DTC P0444, P0445 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Diagnostic Procedure (Cont'd)

3	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect ECM harness connector.</p> <p>3. Check harness continuity between ECM terminal 1 and EVAP canister purge volume control solenoid valve terminal 2. Refer to Wiring Diagram. Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK (With CONSULT-II)	▶	GO TO 4.
OK (Without CONSULT-II)	▶	GO TO 5.
NG	▶	Repair open circuit or short to ground and short to power in harness or connectors.

GI

MA

EM

LC

EC

4	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION																					
<p>E With CONSULT-II</p> <p>1. Start engine.</p> <p>2. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. Check that engine speed varies according to the valve opening.</p>																						
<table border="1" style="margin: auto;"> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <td>PURG VOL CONT/V</td> <td>XXX %</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>A/F ALPHA-B1</td> <td>XX %</td> </tr> <tr> <td>A/F ALPHA-B2</td> <td>XX %</td> </tr> <tr> <td>HO2S1 MNTR (B1)</td> <td>LEAN</td> </tr> <tr> <td>HO2S1 MNTR (B2)</td> <td>LEAN</td> </tr> <tr> <td>THRTL POS SEN</td> <td>X. XX V</td> </tr> <tr> <td> </td> <td> </td> </tr> </table>			ACTIVE TEST		PURG VOL CONT/V	XXX %	MONITOR		ENG SPEED	XXX rpm	A/F ALPHA-B1	XX %	A/F ALPHA-B2	XX %	HO2S1 MNTR (B1)	LEAN	HO2S1 MNTR (B2)	LEAN	THRTL POS SEN	X. XX V		
ACTIVE TEST																						
PURG VOL CONT/V	XXX %																					
MONITOR																						
ENG SPEED	XXX rpm																					
A/F ALPHA-B1	XX %																					
A/F ALPHA-B2	XX %																					
HO2S1 MNTR (B1)	LEAN																					
HO2S1 MNTR (B2)	LEAN																					
THRTL POS SEN	X. XX V																					
SEF677Y																						
OK or NG																						
OK	▶	GO TO 6.																				
NG	▶	GO TO 5.																				

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA



SC

EL

IDX

DTC P0444, P0445 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE



Diagnostic Procedure (Cont'd)

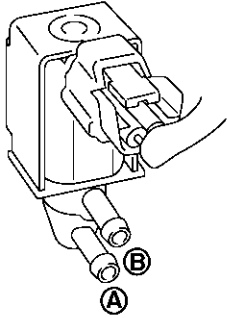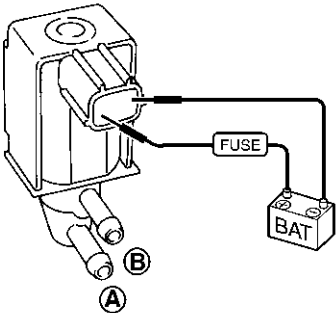5	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE							
<p>Ⓔ With CONSULT-II Check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.</p>								
		<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Condition PURG VOL CONT/V valve</th> <th style="text-align: center;">Air passage continuity between A and B</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">100%</td> <td style="text-align: center;">Yes</td> </tr> <tr> <td style="text-align: center;">0%</td> <td style="text-align: center;">No</td> </tr> </tbody> </table>	Condition PURG VOL CONT/V valve	Air passage continuity between A and B	100%	Yes	0%	No
Condition PURG VOL CONT/V valve	Air passage continuity between A and B							
100%	Yes							
0%	No							
SEF334XB								
<p>ⓧ Without CONSULT-II Check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.</p>								
		<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Condition</th> <th style="text-align: center;">Air passage continuity between A and B</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">12V direct current supply between terminals 1 and 2</td> <td style="text-align: center;">Yes</td> </tr> <tr> <td style="text-align: center;">No supply</td> <td style="text-align: center;">No</td> </tr> </tbody> </table>	Condition	Air passage continuity between A and B	12V direct current supply between terminals 1 and 2	Yes	No supply	No
Condition	Air passage continuity between A and B							
12V direct current supply between terminals 1 and 2	Yes							
No supply	No							
SEF335X								
OK or NG								
OK	▶	GO TO 6.						
NG	▶	Replace EVAP canister purge volume control solenoid valve.						

6	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.		
▶		INSPECTION END

DTC P0447 EVAP CANISTER VENT CONTROL VALVE

Component Description

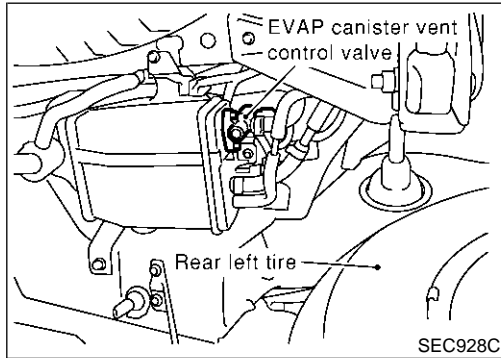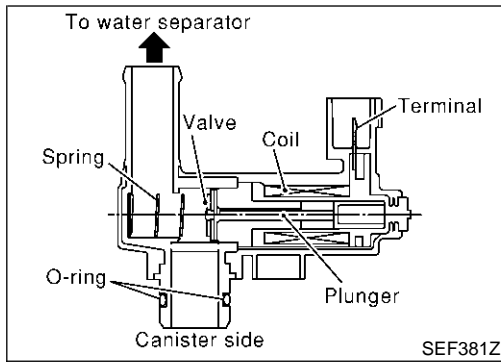

Component Description

NBEC0970

The EVAP canister vent control valve is located on the EVAP canister and is used to seal the canister vent.

This solenoid valve responds to signals from the ECM. When the ECM sends an ON signal, the coil in the solenoid valve is energized. A plunger will then move to seal the canister vent. The ability to seal the vent is necessary for the on board diagnosis of other evaporative emission control system components.

This solenoid valve is used only for diagnosis, and usually remains opened.

When the vent is closed, under normal purge conditions, the evaporative emission control system is depressurized and allows "EVAP Control System" diagnosis.

GI
MA
EM
LC

EC

FE
AT
TF

CONSULT-II Reference Value in Data Monitor Mode

NBEC0971

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
VENT CONT/V	● Ignition switch: ON	OFF

AX
SU

ECM Terminals and Reference Value

NBEC0972

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
40	G/Y	EVAP canister vent control valve	[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)

BR
ST
RS
BT

On Board Diagnosis Logic

NBEC0973

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0447 0447	EVAP canister vent control valve circuit open	An improper voltage signal is sent to ECM through EVAP canister vent control valve.	Harness or connectors (The valve circuit is open or shorted.) ● EVAP canister vent control valve

HA
SC
EL

IDX

DTC P0447 EVAP CANISTER VENT CONTROL VALVE

DTC Confirmation Procedure

DTC Confirmation Procedure

NBEC0974

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm battery voltage is more than 11V at idle.

3	DATA MONITOR	
	MONITOR	NO DTC
	ENG SPEED	XXX rpm

SEF058Y

WITH CONSULT-II

NBEC0974S01

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and wait at least 8 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-380.

WITH GST

NBEC0974S02

Follow the procedure "WITH CONSULT-II" above.

DTC P0447 EVAP CANISTER VENT CONTROL VALVE


Wiring Diagram

Wiring Diagram




NBEC0975

EC-VENT/V-01


— : Detectable line for DTC
 — : Non-detectable line for DTC

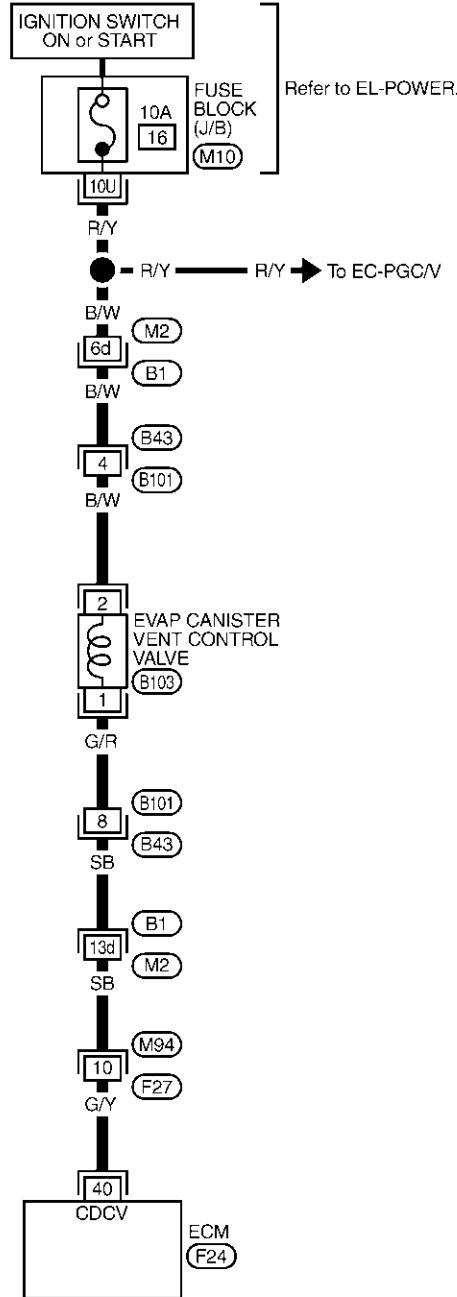

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX



REFER TO THE FOLLOWING.
 (B1) -SUPER
 MULTIPLE JUNCTION (SMJ)
 (M10) -FUSE BLOCK-
 JUNCTION BOX (J/B)

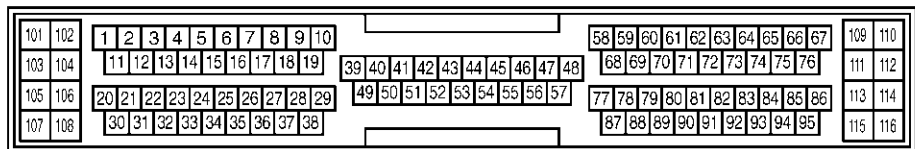

MEC236E

DTC P0447 EVAP CANISTER VENT CONTROL VALVE

Diagnostic Procedure

Diagnostic Procedure

NBEC0976



1	INSPECTION START	
1. Do you have CONSULT-II?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	GO TO 3.

2	CHECK EVAP CANISTER VENT CONTROL VALVE CIRCUIT																					
<p> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch "OFF" and then turn "ON". 2. Select "VENT CONTROL/V" in "ACTIVE TEST" mode with CONSULT-II. 3. Touch "ON/OFF" on CONSULT-II screen. 																						
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <td style="text-align: center;">VENT CONTROL/V</td> <td style="text-align: center;">OFF</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td style="text-align: center;">ENG SPEED</td> <td style="text-align: center;">XXX rpm</td> </tr> <tr> <td style="text-align: center;">A/F ALPHA-B1</td> <td style="text-align: center;">XXX %</td> </tr> <tr> <td style="text-align: center;">A/F ALPHA-B2</td> <td style="text-align: center;">XXX %</td> </tr> <tr> <td style="text-align: center;">HO2S1 (B1)</td> <td style="text-align: center;">XXX V</td> </tr> <tr> <td style="text-align: center;">HO2S1 (B2)</td> <td style="text-align: center;">XXX V</td> </tr> <tr> <td style="text-align: center;">THRTL POS SEN</td> <td style="text-align: center;">XXX V</td> </tr> <tr> <td> </td> <td> </td> </tr> </table>			ACTIVE TEST		VENT CONTROL/V	OFF	MONITOR		ENG SPEED	XXX rpm	A/F ALPHA-B1	XXX %	A/F ALPHA-B2	XXX %	HO2S1 (B1)	XXX V	HO2S1 (B2)	XXX V	THRTL POS SEN	XXX V		
ACTIVE TEST																						
VENT CONTROL/V	OFF																					
MONITOR																						
ENG SPEED	XXX rpm																					
A/F ALPHA-B1	XXX %																					
A/F ALPHA-B2	XXX %																					
HO2S1 (B1)	XXX V																					
HO2S1 (B2)	XXX V																					
THRTL POS SEN	XXX V																					
<p>4. Check for operating sound of the valve. Clicking noise should be heard.</p>																						
OK or NG																						
OK	▶	GO TO 7.																				
NG	▶	GO TO 3.																				

SEF989Y

DTC P0447 EVAP CANISTER VENT CONTROL VALVE

Diagnostic Procedure (Cont'd)

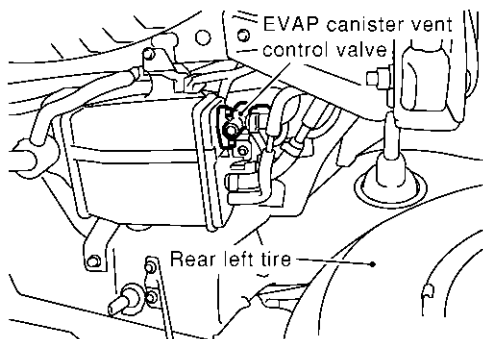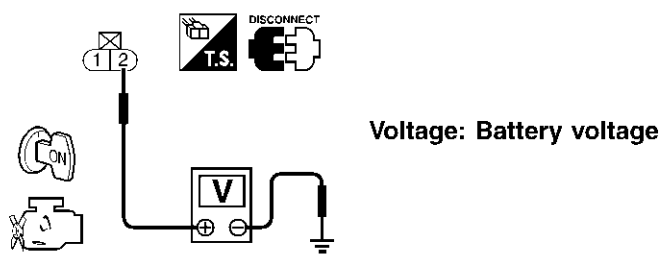3	CHECK EVAP CANISTER VENT CONTROL VALVE POWER SUPPLY CIRCUIT
<p>1. Turn ignition switch "OFF". 2. Disconnect EVAP canister vent control valve harness connector.</p> <div style="text-align: center;">  </div> <p>3. Turn ignition switch "ON". 4. Check voltage between EVAP canister vent control valve terminal 2 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p>Voltage: Battery voltage</p> </div> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 5.
NG	▶ GO TO 4.

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

4	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M2, B1 ● Harness connectors B43, M101 ● Fuse block (J/B) connector M10 ● 10A fuse ● Harness for open or short between EVAP canister vent control valve and fuse 	
▶	Repair harness or connectors.


5	CHECK EVAP CANISTER VENT CONTROL VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 40 and EVAP canister vent control valve terminal 1. Refer to Wiring Diagram. Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 7.
NG	▶ GO TO 6.

DTC P0447 EVAP CANISTER VENT CONTROL VALVE

Diagnostic Procedure (Cont'd)

6	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors B101, B43 ● Harness connectors B1, M2 ● Harness connectors M94, F27 ● Harness for open or short between EVAP canister vent control valve and ECM 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

7	CHECK RUBBER TUBE FOR CLOGGING
<p>1. Disconnect rubber tube connected to EVAP canister vent control valve. 2. Check the rubber tube for clogging.</p>	
OK or NG	
OK	▶ GO TO 8.
NG	▶ Clean the rubber tube using an air blower.

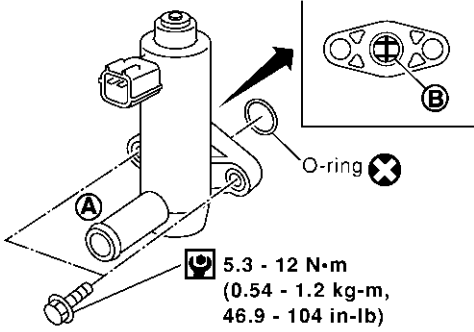8	CHECK EVAP CANISTER VENT CONTROL VALVE-I
<p>1. Remove EVAP canister vent control valve from EVAP canister. 2. Check portion B of EVAP canister vent control valve for being rusted.</p>	
	
OK or NG	
OK	▶ GO TO 9.
NG	▶ Replace EVAP canister vent control valve.

DTC P0447 EVAP CANISTER VENT CONTROL VALVE


Diagnostic Procedure (Cont'd)

9 CHECK EVAP CANISTER VENT CONTROL VALVE-II

Ⓔ With CONSULT-II

1. Reconnect harness connectors disconnected.
2. Turn ignition switch "ON".
3. Perform "VENT CONTROL/V" in "ACTIVE TEST" mode.
4. Check air passage continuity and operation delay time.

ACTIVE TEST	
VENT CONTROL/V	OFF
MONITOR	
ENG SPEED	XXX rpm
A/F ALPHA-B1	XXX %
A/F ALPHA-B2	XXX %
HO2S1 MNTR (B1)	LEAN
HO2S1 MNTR (B2)	LEAN
THRTL POS SEN	XXX V

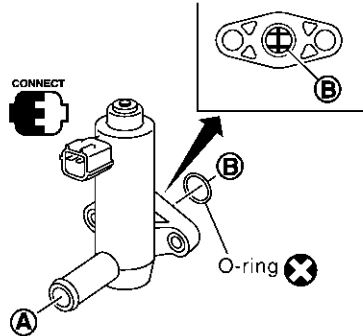


Condition	Air passage continuity between A and B
VENT CONTROL/V ON	No
VENT CONTROL/V OFF	Yes

Operation takes less than 1 second.

SEF377Z

ⓧ Without CONSULT-II

Check air passage continuity and operation delay time under the following conditions.

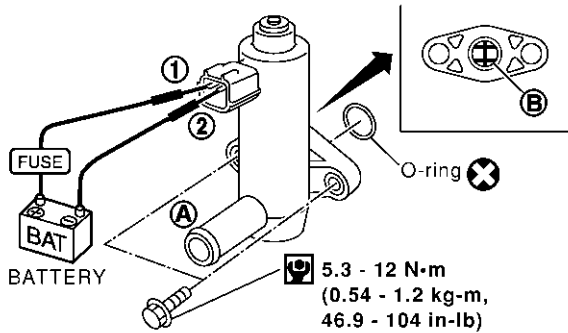

Condition	Air passage continuity between A and B
12V direct current supply between terminals 1 and 2	No
OFF	Yes

Operation takes less than 1 second.

SEF378Z

Make sure new O-ring is installed properly.

OK or NG

OK	▶	GO TO 11.
NG	▶	GO TO 10.

10 CHECK EVAP CANISTER VENT CONTROL VALVE-III

1. Clean the air passage (Portion A to B) of EVAP canister vent control valve using an air blower.
2. Perform Test No. 9 again.

OK or NG

OK	▶	GO TO 11.
NG	▶	Replace EVAP canister vent control valve.

11 CHECK INTERMITTENT INCIDENT


Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.

▶ INSPECTION END

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0452 EVAP SYSTEM PRESSURE SENSOR


Component Description

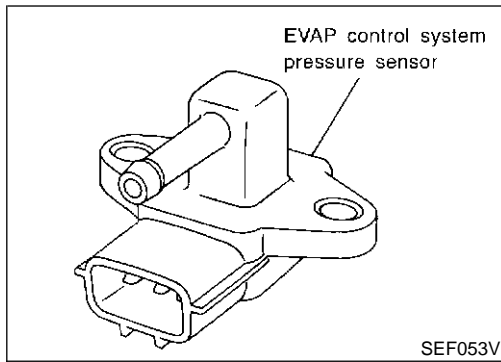

Component Description

NBEC0779

The EVAP control system pressure sensor detects pressure in the purge line. The sensor output voltage to the ECM increases as pressure increases. The EVAP control system pressure sensor is not used to control the engine system. It is used only for on board diagnosis.

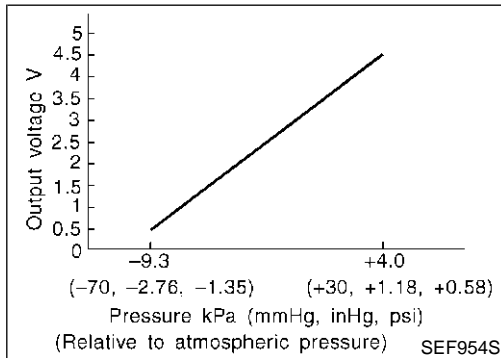

CONSULT-II Reference Value in Data Monitor Mode

NBEC0780

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
EVAP SYS PRES	● Ignition switch: ON	Approx. 3.4V

ECM Terminals and Reference Value

NBEC0781

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
58	B/P	Sensors' ground	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0V
84	L/G	EVAP control system pressure sensor	[Ignition switch "ON"]	Approximately 3.4V
111	P/B	Sensors' power supply	[Ignition switch "ON"]	Approximately 5V

On Board Diagnosis Logic

NBEC0782

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0452 0452	EVAP control system pressure sensor low input	An excessively low voltage from the sensor is sent to ECM.	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● EVAP control system pressure sensor

DTC Confirmation Procedure

NBEC0784

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.


TESTING CONDITION:

Always perform test at a temperature of 5°C (41°F) or more.

6

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
COOLAN TEMP/S	XXX °C
FUEL T/TMP SE	XXX °C

SEF194Y

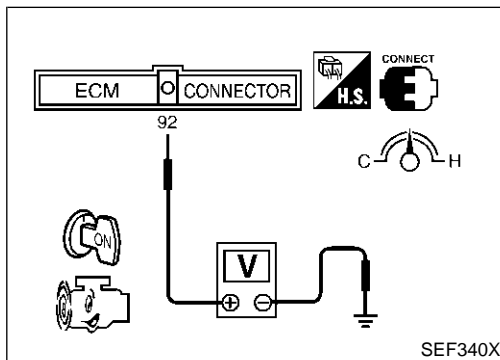

WITH CONSULT-II

NBEC0784S01

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 10 seconds.
- 3) Turn ignition switch "ON".
- 4) Select "DATA MONITOR" mode with CONSULT-II.
- 5) Make sure that "FUEL T/TEMP SE" is more than 0°C (32°F).
- 6) Start engine and wait at least 20 seconds.
- 7) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-387.
If 1st trip DTC is not detected, go to next step.
- 8) Stop engine and install EVAP service port adapter and pressure pump to EVAP service port securely.
- 9) Pressurize the EVAP line using pressure pump.
- 10) Confirm the pressure does not go up.
- 11) If pressure go up, go to "Diagnostic Procedure", EC-387.

WITH GST

NBEC0784S02

- 1) Start engine and warm it up to normal operating temperature.
- 2) Check that voltage between ECM terminal 92 (Fuel tank temperature sensor signal) and ground is less than 4.2V.
- 3) Turn ignition switch "OFF" and wait at least 10 seconds.
- 4) Start engine and wait at least 20 seconds.
- 5) Select "MODE 7" with GST.
- 6) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-387.


GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0452 EVAP SYSTEM PRESSURE SENSOR


Diagnostic Procedure

Diagnostic Procedure

NBEC0786

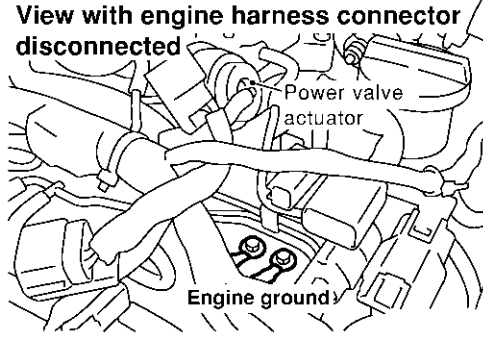1	RETIGHTEN GROUND SCREWS	<p>Loosen and retighten engine ground screws.</p> <p style="text-align: center;">View with engine harness connector disconnected</p>  <p style="text-align: right;">SEF959Y</p>	GI MA EM LC EC FE
		▶ GO TO 2.	

2	CHECK CONNECTOR	<p>1. Disconnect EVAP control system pressure sensor harness connector. 2. Check sensor harness connector for water. Water should not exist.</p> <p style="text-align: center;">OK or NG</p>	AT TF PD AX
OK ▶		GO TO 3.	
NG ▶		Repair or replace harness connector.	

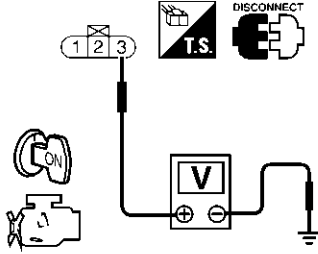3	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR POWER SUPPLY CIRCUIT	<p>1. Turn ignition switch "ON". 2. Check voltage between EVAP control system pressure sensor terminal 3 and ground with CONSULT-II or tester.</p>  <p style="text-align: center;">Voltage: Approximately 5V</p> <p style="text-align: right;">SEF992Y</p>	SU BR ST RS BT HA SC
		OK or NG	
OK ▶		GO TO 5.	
NG ▶		GO TO 4.	

4	DETECT MALFUNCTIONING PART	<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors B101, B43 ● Harness connectors B1, M2 ● Harness connectors M94, F27 ● Harness for open or short between EVAP control system pressure sensor and ECM 	EL IDX
		▶ Repair harness or connectors.	

DTC P0452 EVAP SYSTEM PRESSURE SENSOR

Diagnostic Procedure (Cont'd)

5 CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR GROUND CIRCUIT FOR OPEN AND SHORT		
1. Turn ignition switch "OFF". 2. Check harness continuity between EVAP control system pressure sensor terminal 1 and engine ground. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to power.		
OK or NG		
OK	▶	GO TO 7.
NG	▶	GO TO 6.

6 DETECT MALFUNCTIONING PART		
Check the following. <ul style="list-style-type: none">● Harness connectors B101, B43● Harness connectors B1, M2● Harness connectors M94, F27● Harness connectors F22, M33● Harness for open between EVAP control system pressure sensor and ECM● Harness for open between EVAP control system pressure sensor and TCM (Transmission Control Module)		
▶		Repair open circuit or short to power in harness or connectors.

7 CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT		
1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 84 and EVAP control system pressure sensor terminal 2. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to ground and short to power.		
OK or NG		
OK	▶	GO TO 9.
NG	▶	GO TO 8.

8 DETECT MALFUNCTIONING PART		
Check the following. <ul style="list-style-type: none">● Harness connectors B101, B43● Harness connectors B1, M2● Harness connectors M94, F27● Harness for open or short between ECM and EVAP control system pressure sensor		
▶		Repair open circuit or short to ground or short to power in harness or connectors.

DTC P0452 EVAP SYSTEM PRESSURE SENSOR

Diagnostic Procedure (Cont'd)


GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

9 CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

1. Remove EVAP control system pressure sensor with its harness connector connected.

CAUTION:

- Never apply force to the air hole protector of the sensor if equipped.

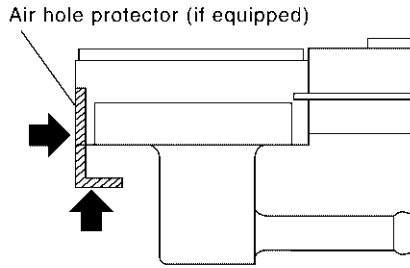

SEF799W

2. Remove hose from EVAP control system pressure sensor.


3. Turn ignition switch "ON".

4. Use pump to apply vacuum and pressure to EVAP control system pressure sensor as shown in figure.

CAUTION:

- Always calibrate the vacuum pump gauge when using it.
- Do not apply below -20 kPa (-150 mmHg, -5.91 inHg) or over 20 kPa (150 mmHg, 5.91 inHg) of pressure.

5. Check input voltage between ECM terminal 84 and ground.

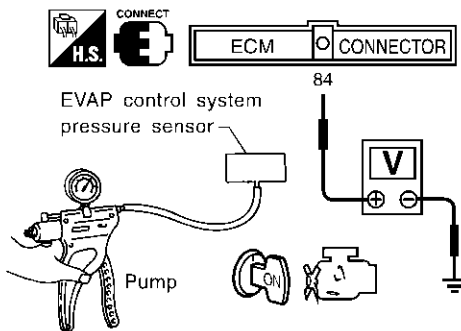

Pressure (Relative to atmospheric pressure)	Voltage V
0 kPa (0 mmHg, 0 inHg)	3.0 - 3.6
-9.3 kPa (-70 mmHg, -2.76 inHg)	0.4 - 0.6

SEF342X

CAUTION:

- Discard and EVAP control system pressure sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

OK or NG

OK ► GO TO 10.

NG ► Replace EVAP control system pressure sensor.


10 CHECK INTERMITTENT INCIDENT

Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.

► INSPECTION END

DTC P0453 EVAP SYSTEM PRESSURE SENSOR


Component Description

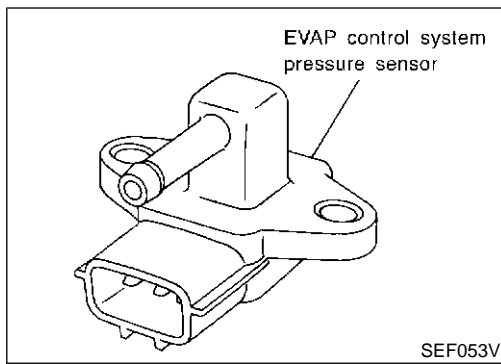

Component Description

NBEC0977

The EVAP control system pressure sensor detects pressure in the purge line. The sensor output voltage to the ECM increases as pressure increases. The EVAP control system pressure sensor is not used to control the engine system. It is used only for on board diagnosis.

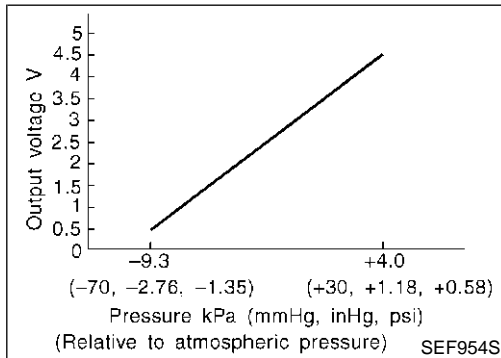

CONSULT-II Reference Value in Data Monitor Mode

NBEC0978

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
EVAP SYS PRES	● Ignition switch: ON	Approx. 3.4V

ECM Terminals and Reference Value

NBEC0979

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
58	B/P	Sensors' ground	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0V
84	L/G	EVAP control system pressure sensor	[Ignition switch "ON"]	Approximately 3.4V
111	P/B	Sensors' power supply	[Ignition switch "ON"]	Approximately 5V

DTC P0453 EVAP SYSTEM PRESSURE SENSOR

On Board Diagnosis Logic

On Board Diagnosis Logic

NBEC0980

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0453 0453	EVAP control system pressure sensor high input	An excessively high voltage from the sensor is sent to ECM.	<ul style="list-style-type: none"> • Harness or connectors (The sensor circuit is open or shorted.) • EVAP control system pressure sensor • EVAP canister vent control valve • EVAP canister • Water separator • Rubber hose from EVAP canister vent control valve to water separator

GI

MA

EM

LC

EC

FE

AT

TF

DTC Confirmation Procedure

NBEC0981

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:


Always perform test at a temperature of 5°C (41°F) or more.

PD

AX

SU

BR

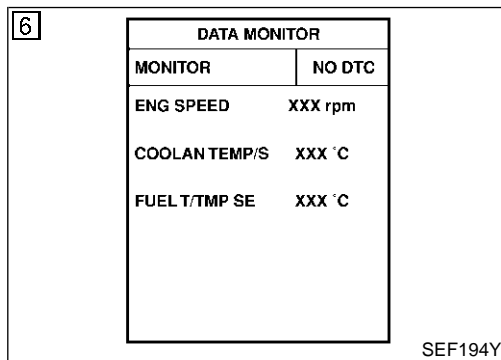

WITH CONSULT-II

NBEC0981S01


- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 10 seconds.
- 3) Turn ignition switch "ON".
- 4) Select "DATA MONITOR" mode with CONSULT-II.
- 5) Make sure that "FUEL T/TMP SE" is more than 0°C (32°F).
- 6) Start engine and wait at least 20 seconds.
- 7) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-393.

ST

RS

BT

HA

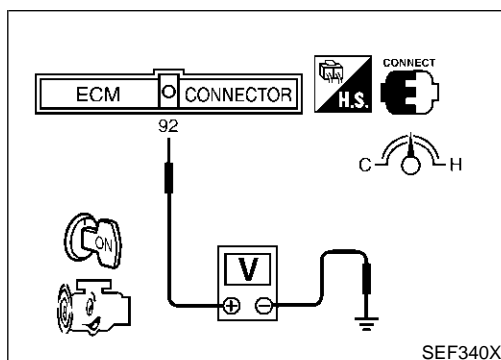

WITH GST

NBEC0981S02

- 1) Start engine and warm it up to normal operating temperature.
- 2) Check that voltage between ECM terminal 92 (Fuel tank temperature sensor signal) and ground is less than 4.2V.
- 3) Turn ignition switch "OFF" and wait at least 10 seconds.
- 4) Start engine and wait at least 20 seconds.
- 5) Select "MODE 7" with GST.
- 6) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-393.

SC

EL

IDX

DTC P0453 EVAP SYSTEM PRESSURE SENSOR







Wiring Diagram

Wiring Diagram

NBEC0982



EC-PRE/SE-01

: Detectable line for DTC
 : Non-detectable line for DTC

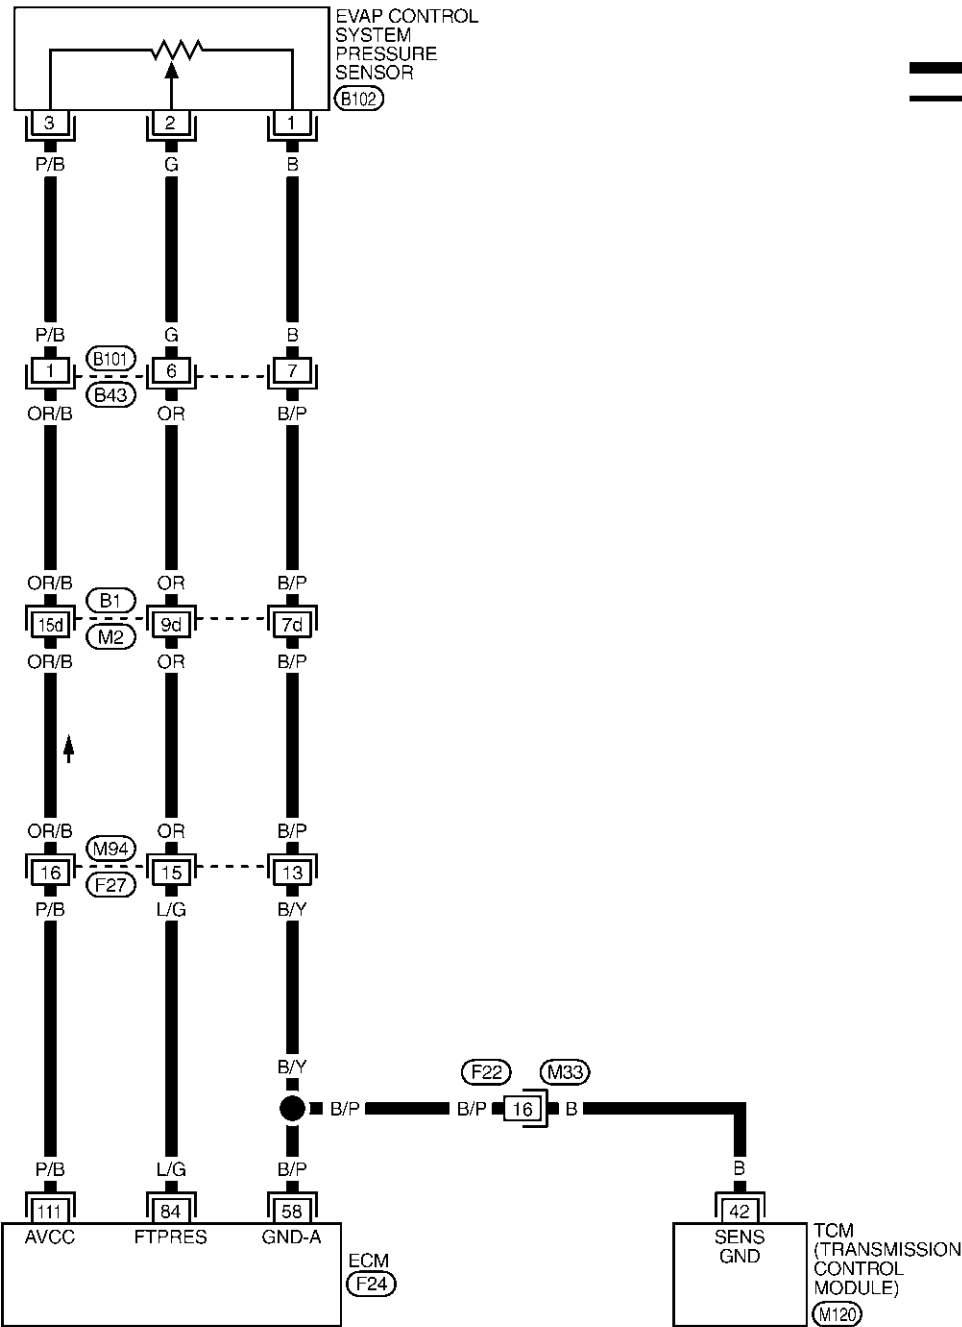

REFER TO THE FOLLOWING.


(B1) -SUPER
MULTIPLE JUNCTION (SMJ)

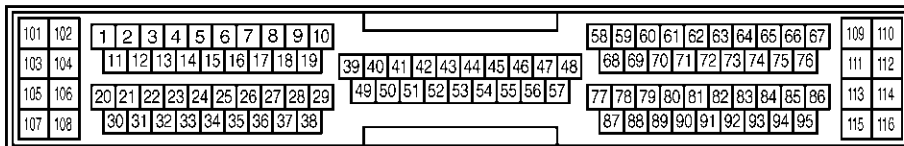


MEC904D

Diagnostic Procedure

NBEC0983

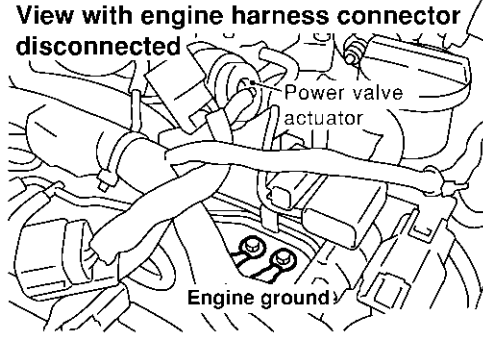1	RETIGHTEN GROUND SCREWS	<p>Loosen and retighten engine ground screws.</p> <div style="text-align: center;"> <p>View with engine harness connector disconnected</p>  <p>The diagram shows a top-down view of the engine compartment. A power valve actuator is labeled at the top right. Below it, two engine ground screws are labeled 'Engine ground'. A power valve actuator is also labeled.</p> </div> <p style="text-align: right;">SEF959Y</p>	GI MA EM LC EC FE
▶		GO TO 2.	

2	CHECK CONNECTOR	<p>1. Disconnect EVAP control system pressure sensor harness connector. 2. Check sensor harness connector for water. Water should not exist.</p> <p style="text-align: center;">OK or NG</p>	AT TF PD AX
OK ▶		GO TO 3.	
NG ▶		Repair or replace harness connector.	

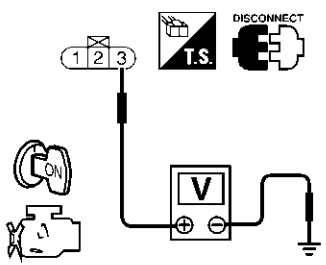3	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR POWER SUPPLY CIRCUIT	<p>1. Turn ignition switch "ON". 2. Check voltage between EVAP control system pressure sensor terminal 3 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p>The diagram shows a 3-pin connector with terminals 1, 2, and 3. Terminal 3 is connected to a voltmeter (V) which is grounded. A 'T.S.' (Tester) icon and a 'DISCONNECT' icon are shown. The ignition switch is shown in the 'ON' position.</p> <p style="text-align: right;">Voltage: Approximately 5V</p> </div> <p style="text-align: right;">SEF992Y</p> <p style="text-align: center;">OK or NG</p>	SU BR ST RS BT HA SC
OK ▶		GO TO 5.	
NG ▶		GO TO 4.	

4	DETECT MALFUNCTIONING PART	<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors B101, B43 ● Harness connectors B1, M2 ● Harness connectors M94, F27 ● Harness for open or short between EVAP control system pressure sensor and ECM <p style="text-align: center;">OK or NG</p>	EL IDX
▶		Repair harness or connectors.	

DTC P0453 EVAP SYSTEM PRESSURE SENSOR

Diagnostic Procedure (Cont'd)

5	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR GROUND CIRCUIT FOR OPEN AND SHORT
1. Turn ignition switch "OFF". 2. Check harness continuity between EVAP control system pressure sensor terminal 1 and engine ground. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to power.	
OK or NG	
OK	▶ GO TO 7.
NG	▶ GO TO 6.

6	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none">● Harness connectors B101, B43● Harness connectors B1, M2● Harness connectors M94, F27● Harness connectors F22, M33● Harness for open between EVAP control system pressure sensor and ECM● Harness for open between EVAP control system pressure sensor and TCM (Transmission Control Module)	
▶ Repair open circuit or short to power in harness or connectors.	


7	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT
1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 84 and EVAP control system pressure sensor terminal 2. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to ground and short to power.	
OK or NG	
OK	▶ GO TO 9.
NG	▶ GO TO 8.


8	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none">● Harness connectors B101, B43● Harness connectors B1, M2● Harness connectors M94, F27● Harness for open or short between ECM and EVAP control system pressure sensor	
▶ Repair open circuit or short to ground or short to power in harness or connectors.	


9	CHECK RUBBER TUBE FOR CLOGGING
1. Disconnect rubber tube connected to EVAP canister vent control valve. 2. Check the rubber tube for clogging.	
OK or NG	
OK	▶ GO TO 10.
NG	▶ Clean the rubber tube using an air blower.

DTC P0453 EVAP SYSTEM PRESSURE SENSOR

Diagnostic Procedure (Cont'd)

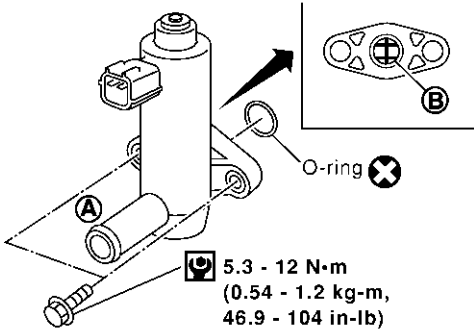10	CHECK EVAP CANISTER VENT CONTROL VALVE-I
<p>1. Remove EVAP canister vent control valve from EVAP canister. 2. Check portion B of EVAP canister vent control valve for being rusted.</p>	
 <p style="text-align: right;">5.3 - 12 N·m (0.54 - 1.2 kg-m, 46.9 - 104 in-lb)</p>	
SEF376Z	
OK or NG	
OK	▶ GO TO 11.
NG	▶ Replace EVAP canister vent control valve.

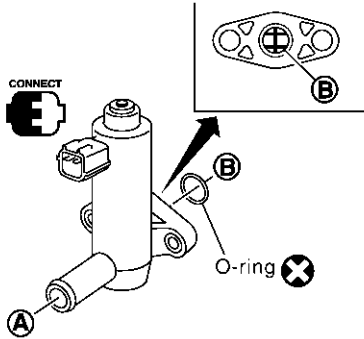11	CHECK EVAP CANISTER VENT CONTROL VALVE																									
<p>Ⓔ With CONSULT-II</p> <p>1. Perform "VENT CONTROL/V" in "ACTIVE TEST" mode. 2. Check air passage continuity and operation delay time under the following conditions.</p>																										
<table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <td>VENT CONTROL/V</td> <td>OFF</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>A/F ALPHA-B1</td> <td>XXX %</td> </tr> <tr> <td>A/F ALPHA-B2</td> <td>XXX %</td> </tr> <tr> <td>HO2S1 MNTR (B1)</td> <td>LEAN</td> </tr> <tr> <td>HO2S1 MNTR (B2)</td> <td>LEAN</td> </tr> <tr> <td>THR TL POS SEN</td> <td>XXX V</td> </tr> </table>	ACTIVE TEST		VENT CONTROL/V	OFF	MONITOR		ENG SPEED	XXX rpm	A/F ALPHA-B1	XXX %	A/F ALPHA-B2	XXX %	HO2S1 MNTR (B1)	LEAN	HO2S1 MNTR (B2)	LEAN	THR TL POS SEN	XXX V		<table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <tr> <th>Condition</th> <th>Air passage continuity between A and B</th> </tr> <tr> <td>VENT CONTROL/V ON</td> <td>No</td> </tr> <tr> <td>VENT CONTROL/V OFF</td> <td>Yes</td> </tr> </table> <p>Operation takes less than 1 second.</p>	Condition	Air passage continuity between A and B	VENT CONTROL/V ON	No	VENT CONTROL/V OFF	Yes
ACTIVE TEST																										
VENT CONTROL/V	OFF																									
MONITOR																										
ENG SPEED	XXX rpm																									
A/F ALPHA-B1	XXX %																									
A/F ALPHA-B2	XXX %																									
HO2S1 MNTR (B1)	LEAN																									
HO2S1 MNTR (B2)	LEAN																									
THR TL POS SEN	XXX V																									
Condition	Air passage continuity between A and B																									
VENT CONTROL/V ON	No																									
VENT CONTROL/V OFF	Yes																									
SEF377Z																										


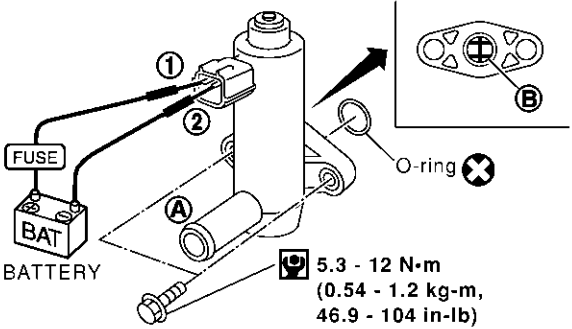
<p>ⓧ Without CONSULT-II</p> <p>Check air passage continuity and operation delay time under the following conditions.</p>							
	<table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <tr> <th>Condition</th> <th>Air passage continuity between A and B</th> </tr> <tr> <td>12V direct current supply between terminals 1 and 2</td> <td>No</td> </tr> <tr> <td>OFF</td> <td>Yes</td> </tr> </table> <p>Operation takes less than 1 second.</p>	Condition	Air passage continuity between A and B	12V direct current supply between terminals 1 and 2	No	OFF	Yes
Condition	Air passage continuity between A and B						
12V direct current supply between terminals 1 and 2	No						
OFF	Yes						
SEF378Z							
Make sure new O-ring is installed properly.							
OK or NG							
OK	▶ GO TO 13.						
NG	▶ GO TO 12.						

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0453 EVAP SYSTEM PRESSURE SENSOR

Diagnostic Procedure (Cont'd)


12	CHECK EVAP CANISTER VENT CONTROL VALVE-III	
<ol style="list-style-type: none"> 1. Clean the air passage (portion A to B) of EVAP canister vent control valve using an air blower. 2. Perform Test No. 14 again. 		
OK or NG		
OK	▶	GO TO 13.
NG	▶	Replace EVAP canister vent control valve.

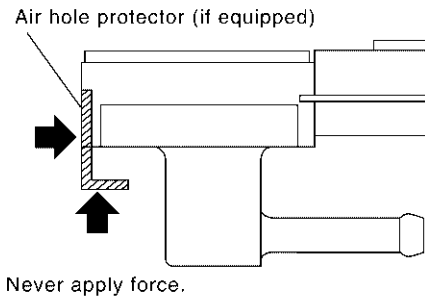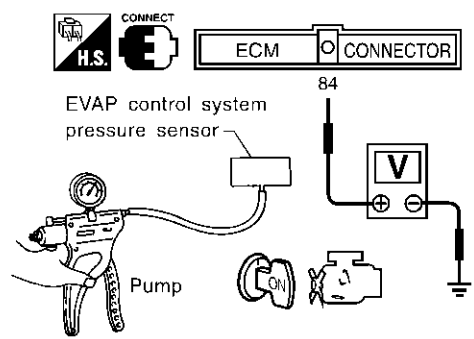13	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR							
<ol style="list-style-type: none"> 1. Remove EVAP control system pressure sensor with its harness connector connected. <ul style="list-style-type: none"> CAUTION: ● Never apply force to the air hole protector of the sensor if equipped. 								
								
SEF799W								
<ol style="list-style-type: none"> 2. Remove hose from EVAP control system pressure sensor. 3. Turn ignition switch "ON". 4. Use pump to apply vacuum and pressure to EVAP control system pressure sensor as shown in figure. <ul style="list-style-type: none"> CAUTION: ● Always calibrate the vacuum pump gauge when using it. ● Do not apply below -20 kPa (-150 mmHg, -5.91 inHg) or over 20 kPa (150 mmHg, 5.91 inHg) of pressure. 5. Check input voltage between ECM terminal 84 and ground. 								
<div style="display: flex; align-items: flex-start;"> <div style="flex: 1;">  </div> <div style="flex: 1; margin-left: 20px;"> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Pressure (Relative to atmospheric pressure)</th> <th style="text-align: center;">Voltage V</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">0 kPa (0 mmHg, 0 inHg)</td> <td style="text-align: center;">3.0 - 3.6</td> </tr> <tr> <td style="text-align: center;">-9.3 kPa (-70 mmHg, -2.76 inHg)</td> <td style="text-align: center;">0.4 - 0.6</td> </tr> </tbody> </table> </div> </div>			Pressure (Relative to atmospheric pressure)	Voltage V	0 kPa (0 mmHg, 0 inHg)	3.0 - 3.6	-9.3 kPa (-70 mmHg, -2.76 inHg)	0.4 - 0.6
Pressure (Relative to atmospheric pressure)	Voltage V							
0 kPa (0 mmHg, 0 inHg)	3.0 - 3.6							
-9.3 kPa (-70 mmHg, -2.76 inHg)	0.4 - 0.6							
SEF342X								
<ul style="list-style-type: none"> ● Discard and EVAP control system pressure sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. 								
OK or NG								
OK	▶	GO TO 14.						
NG	▶	Replace EVAP control system pressure sensor.						


14	CHECK RUBBER TUBE	
Check obstructed rubber tube connected to EVAP canister vent control valve.		
OK or NG		
OK	▶	GO TO 15.
NG	▶	Clean rubber tube using an air blower, repair or replace rubber tube.

DTC P0453 EVAP SYSTEM PRESSURE SENSOR

Diagnostic Procedure (Cont'd)

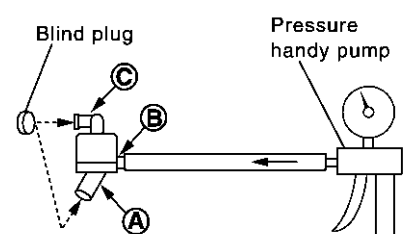15	CHECK WATER SEPARATOR
<ol style="list-style-type: none"> 1. Check visually for insect nests in the water separator air inlet. 2. Check visually for cracks or flaws in the appearance. 3. Check visually for cracks or flaws in the hose. 4. Check that A and C are not clogged by blowing air into B with A, and then C plugged. 	
	
<p>* (A) : Bottom hole (To atmosphere) (B) : Emergency tube (From EVAP canister) (C) : Inlet port (To member)</p>	
PBIB1032E	
<p>5. In case of NG in items 2 - 4, replace the parts.</p> <p>NOTE:</p> <ul style="list-style-type: none"> ● Do not disassemble water separator. 	
OK or NG	
OK	▶ GO TO 16.
NG	▶ Replace water separator.

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

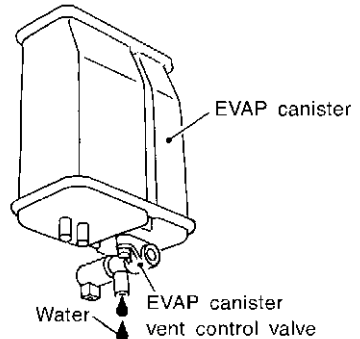16	CHECK IF EVAP CANISTER SATURATED WITH WATER
<ol style="list-style-type: none"> 1. Remove EVAP canister with EVAP canister vent control valve attached. 2. Check if water will drain from the EVAP canister. 	
	
Yes or No	
Yes	▶ GO TO 17.
No	▶ GO TO 19.

17	CHECK EVAP CANISTER
<p>Weigh the EVAP canister with the EVAP canister vent control valve attached.</p> <p>The weight should be less than 1.8 kg (4.0 lb).</p>	
OK or NG	
OK	▶ GO TO 19.
NG	▶ GO TO 18.

DTC P0453 EVAP SYSTEM PRESSURE SENSOR

Diagnostic Procedure (Cont'd)

18	DETECT MALFUNCTIONING PART
Check the following.	
<ul style="list-style-type: none">● EVAP canister for damage● EVAP hose between EVAP canister and water separator for clogging or poor connection	
▶	Repair hose or replace EVAP canister.
19	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	
▶	INSPECTION END

DTC P0455 EVAP CONTROL SYSTEM

On Board Diagnosis Logic


On Board Diagnosis Logic

NBEC0984

NOTE:

If DTC P0455 is displayed with P1448, first perform trouble diagnosis for DTC P1448. (See EC-616.)

This diagnosis detects a very large leak (fuel filler cap fell off etc.) in EVAP system between the fuel tank and EVAP canister purge volume control solenoid valve.

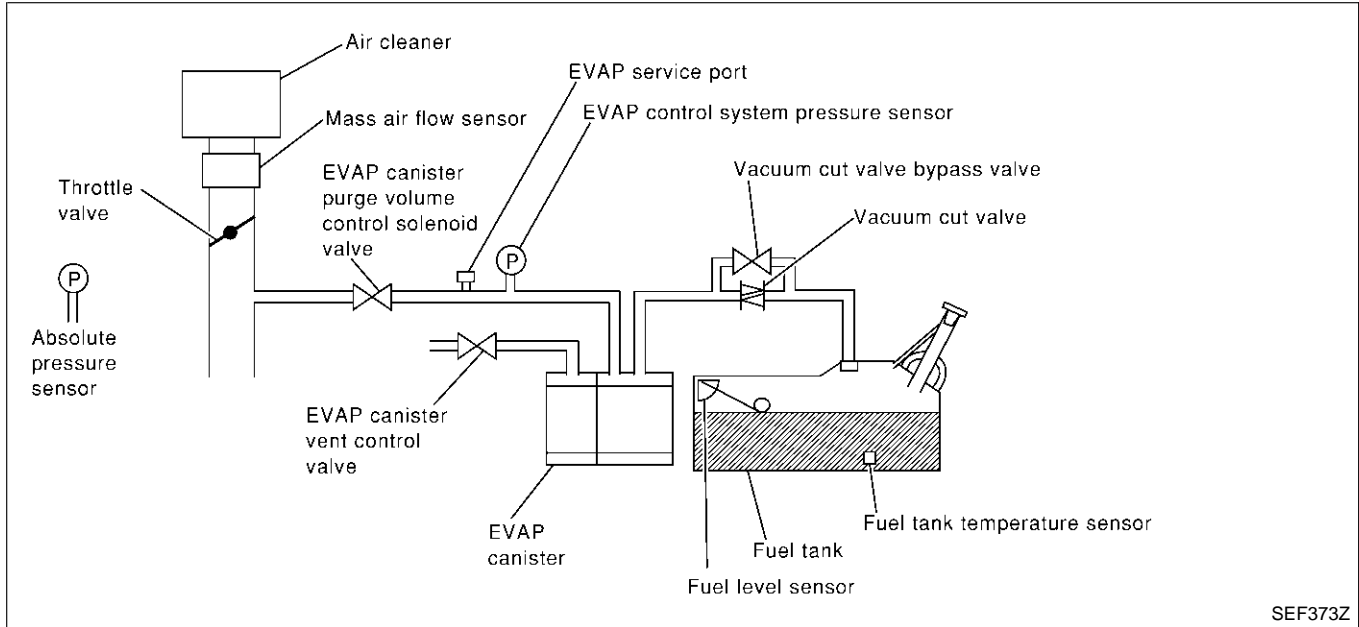

SEF373Z

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0455 0455	EVAP control system gross leak detected	EVAP control system has a very large leak such as fuel filler cap fell off, EVAP control system does not operate properly.	<ul style="list-style-type: none"> ● Fuel filler cap remains open or fails to close. ● Incorrect fuel tank vacuum relief valve ● Incorrect fuel filler cap used ● Foreign matter caught in fuel filler cap ● Leak is in line between intake manifold and EVAP canister purge volume control solenoid valve. ● Foreign matter caught in EVAP canister vent control valve ● EVAP canister or fuel tank leaks ● EVAP purge line (pipe and rubber tube) leaks ● EVAP purge line rubber tube bent ● Blocked or bent rubber tube to EVAP control system pressure sensor ● Loose or disconnected rubber tube ● EVAP canister vent control valve and the circuit ● EVAP canister purge volume control solenoid valve and the circuit ● Absolute pressure sensor ● Fuel tank temperature sensor ● O-ring of EVAP canister vent control valve is missing or damaged. ● EVAP control system pressure sensor ● Refueling control valve ● ORVR system leaks

DTC P0455 EVAP CONTROL SYSTEM


On Board Diagnosis Logic (Cont'd)

CAUTION:

- Use only a genuine NISSAN fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may come on.
- If the fuel filler cap is not tightened properly, the MIL may come on.
- Use only a genuine NISSAN rubber tube as a replacement.

6	EVAP SML LEAK P0442/P1442
1)FOR BEST RSLT,PERFORM AT FOLLOWING CONDITIONS. -FUEL LEVEL: 1/4-3/4 -AMBIENT TEMP: 0-30 C(32-86F) -OPEN ENGINE HOOD. 2)START ENG WITH VHCL STOPPED. IF ENG IS ON,STOP FOR 5 SEC. THEN RESTART. 3)TOUCH START.	
	SEC760C

6	EVAP SML LEAK P0442/P1442
WAIT 2 TO 10 MINUTES. KEEP ENGINE RUNNING AT IDLE SPEED.	
	SEC761C

6	EVAP SML LEAK P0442/P1442
MAINTAIN 1600 - 2100 RPM UNTIL FINAL RESULT APPEARS. (APPROX. 3 MINUTES)	
	
	SEC762C

6	EVAP SML LEAK P0442/P1442
OK	
SELF-DIAG RESULTS	
NO DTC DETECTED. FURTHER TESTING MAY BE REQUIRED.	
	SEC763C

DTC Confirmation Procedure

NBEC0985

CAUTION:

Never remove fuel filler cap during the DTC Confirmation Procedure.

NOTE:

- If DTC P0455 is displayed with P1448, first perform trouble diagnosis for DTC P1448. (See EC-616.)
- Make sure that EVAP hoses are connected to EVAP canister purge volume control solenoid valve properly.
- If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

- Perform "DTC WORK SUPPORT" when the fuel level is between 1/4 and 3/4 full, and vehicle is placed on flat level surface.
- Open engine hood before conducting the following procedures.

WITH CONSULT-II

NBEC0985S01

- 1) Tighten fuel filler cap securely until ratcheting sound is heard.
- 2) Turn ignition switch "ON".
- 3) Turn ignition switch "OFF" and wait at least 10 seconds.
- 4) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT-II.
- 5) Make sure that the following conditions are met.
COOLANT TEMP/S: 0 - 70°C (32 - 158°F)
INT/A TEMP SE: 0 - 60°C (32 - 140°F)
- 6) Select "EVP SML LEAK P0442/P1442" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT-II.
Follow the instruction displayed.

NOTE:

If the engine speed cannot be maintained within the range displayed on the CONSULT-II screen, go to "Basic Inspection", EC-116.

- 7) Make sure that "OK" is displayed.
If "NG" is displayed, select "SELF-DIAG RESULTS" mode and make sure that "EVAP GROSS LEAK [P0455]" is displayed. If it is displayed, refer to "Diagnostic Procedure", EC-401.
If P0442 is displayed, perform "Diagnostic Procedure" for DTC P0442.

DTC P0455 EVAP CONTROL SYSTEM

DTC Confirmation Procedure (Cont'd)

WITH GST

NBEC0985S02

NOTE:

Be sure to read the explanation of "Driving Pattern" on EC-78 before driving vehicle.


- 1) Start engine.
- 2) Drive vehicle according to "Driving Pattern", EC-78.
- 3) Stop vehicle.
- 4) Select "MODE 1" with GST.
 - If SRT of EVAP system is not set yet, go to the following step.
 - If SRT of EVAP system is set, the result will be OK.
- 5) Turn ignition switch "OFF" and wait at least 10 seconds.
- 6) Start engine.

It is not necessary to cool engine down before driving.
- 7) Drive vehicle again according to the "Driving Pattern", EC-78.
- 8) Stop vehicle.
- 9) Select "MODE 3" with GST.
 - If P0455 is displayed on the screen, go to "Diagnostic Procedure", EC-401.
 - If P0442 is displayed on the screen, go to "Diagnostic Procedure", for DTC P0442, EC-354.
 - If P0441 is displayed on the screen, go to "Diagnostic Procedure" for DTC P0441, EC-343.
 - If P0441, P0442 and P0455 are not displayed on the screen, go to the following step.
- 10) Select "MODE 1" with GST.
 - If SRT of EVAP system is set, the result will be OK.
 - If SRT of EVAP system is not set, go to step 6.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

Diagnostic Procedure

NBEC0986

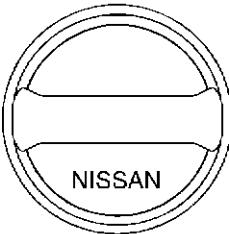1	CHECK FUEL FILLER CAP DESIGN	
1. Turn ignition switch "OFF". 2. Check for genuine NISSAN fuel filler cap design.		
		
OK or NG		
OK	▶	GO TO 2.
NG	▶	Replace with genuine NISSAN fuel filler cap.



SEF915U

DTC P0455 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

2	CHECK FUEL FILLER CAP INSTALLATION	
Check that the cap is tightened properly by rotating the cap clockwise.		
OK or NG		
OK	▶	GO TO 3.
NG	▶	<ul style="list-style-type: none"> • Open fuel filler cap, then clean cap and fuel filler neck threads using air blower. • Retighten until ratcheting sound is heard.

3	CHECK FUEL FILLER CAP FUNCTION	
Check for air releasing sound while opening the fuel filler cap.		
OK or NG		
OK	▶	GO TO 5.
NG	▶	GO TO 4.

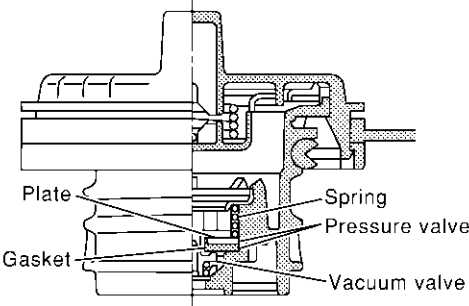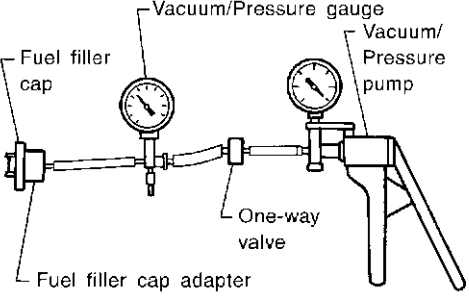4	CHECK FUEL TANK VACUUM RELIEF VALVE	
<ol style="list-style-type: none"> 1. Wipe clean valve housing. 2. Check valve opening pressure and vacuum. 		
		
SEF445Y		
		
SEF943S		
<p>Pressure: 15.3 - 20.0 kPa (0.156 - 0.204 kg/cm², 2.22 - 2.90 psi)</p> <p>Vacuum: -6.0 to -3.3 kPa (-0.061 to -0.034 kg/cm², -0.87 to -0.48 psi)</p> <p>CAUTION: Use only a genuine fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may come on.</p>		
OK or NG		
OK	▶	GO TO 5.
NG	▶	Replace fuel filler cap with a genuine one.


DTC P0455 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

5	CHECK EVAP PURGE LINE
Check EVAP purge line (pipe, rubber tube, fuel tank and EVAP canister) for cracks, improper connection or disconnection. Refer to "Evaporative Emission System", EC-34.	
OK or NG	
OK	▶ GO TO 6.
NG	▶ Repair or reconnect the hose.

6	CLEAN EVAP PURGE LINE
Clean EVAP purge line (pipe and rubber tube) using air blower.	
	▶ GO TO 7.

7	CHECK EVAP CANISTER VENT CONTROL VALVE, O-RING AND CIRCUIT
Refer to "DTC Confirmation Procedure", EC-378.	
OK or NG	
OK	▶ GO TO 8.
NG	▶ Repair or replace EVAP canister vent control valve and O-ring or harness/connector.

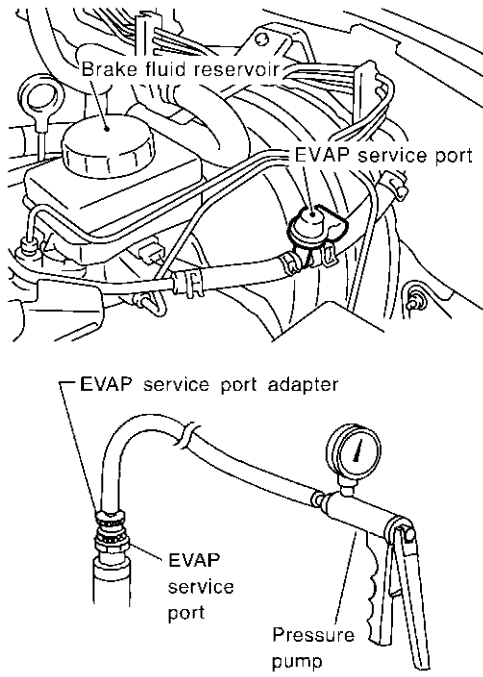8	INSTALL THE PRESSURE PUMP
To locate the EVAP leak, install EVAP service port adapter and pressure pump to EVAP service port securely.	
 <p>The diagram consists of two parts. The top part is a perspective view of the engine compartment showing the brake fluid reservoir and the EVAP service port. The bottom part is a detailed view of the EVAP service port adapter, which is a curved metal fitting with a hose attached to it. The hose is connected to a pressure pump, which has a gauge and a handle.</p>	
SEF983Y	
SEF916U	
NOTE: Improper installation of the EVAP service port adapter to the EVAP service port may cause leaking.	
Models with CONSULT-II	▶ GO TO 9.
Models without CON-SULT-II	▶ GO TO 10.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0455 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)


9 CHECK FOR EVAP LEAK

With CONSULT-II

1. Turn ignition switch "ON".
2. Select "EVAP SYSTEM CLOSE" of "WORK SUPPORT" mode with CONSULT-II.
3. Touch "START" and apply pressure into the EVAP line until the pressure indicator reaches the middle of the bar graph.

NOTE:


- Never use compressed air or a high pressure pump.
- Do not exceed 4.12 kPa (0.042 kg/cm², 0.6 psi) of pressure in the system.

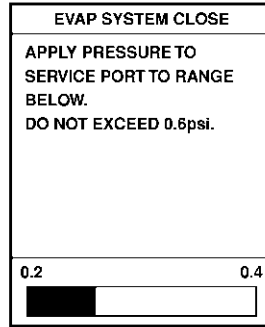

PEF917U

4. Using EVAP leak detector, locate the EVAP leak. For the leak detector, refer to the instruction manual for more details. Refer to "EVAPORATIVE EMISSION LINE DRAWING", EC-38.

Leak detector

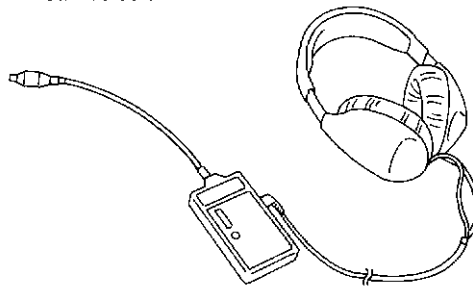

SEF200U

OK or NG

OK	▶	GO TO 11.
NG	▶	Repair or replace.

DTC P0455 EVAP CONTROL SYSTEM


Diagnostic Procedure (Cont'd)

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

10 CHECK FOR EVAP LEAK


⊗ Without CONSULT-II

1. Turn ignition switch "OFF".
2. Apply 12 volts DC to EVAP canister vent control valve. The valve will close. (Continue to apply 12 volts until the end of test.)

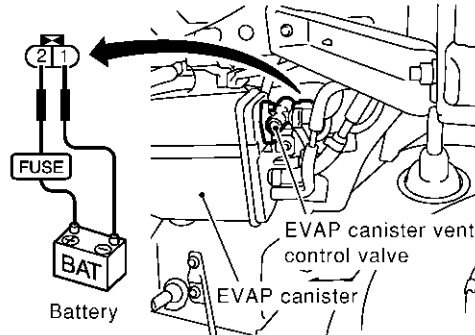

SEC930C

3. Apply 12 volts DC to vacuum cut valve bypass valve. The valve will open. (Continue to apply 12V until the end of test.)

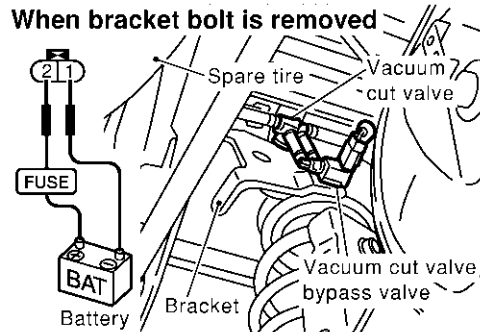


SEC932C

4. Pressurize the EVAP line using pressure pump with 1.3 to 2.7 kPa (10 to 20 mmHg, 0.39 to 0.79 inHg), then remove pump and EVAP service port adapter.

NOTE:

- Never use compressed air or a high pressure pump.
- Do not exceed 4.12 kPa (0.042 kg/cm², 0.6 psi) of pressure in the system.

5. Using EVAP leak detector, locate the EVAP leak. For the leak detector, refer to the instruction manual for more details. Refer to "EVAPORATIVE EMISSION LINE DRAWING", EC-38.

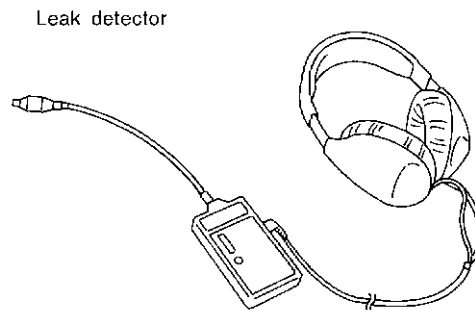

SEF200U

OK or NG

OK	▶	GO TO 12.
NG	▶	Repair or replace.

DTC P0455 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

11	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION																							
<p>E With CONSULT-II</p> <ol style="list-style-type: none"> 1. Disconnect vacuum hose to EVAP canister purge volume control solenoid valve at EVAP service port. 2. Start engine. 3. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode. 4. Touch "Qu" on CONSULT-II screen to increase "PURG VOL CONT/V" opening to 100%. 5. Check vacuum hose for vacuum when revving engine up to 2,000 rpm. 																								
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr><th colspan="2">ACTIVE TEST</th></tr> <tr><td>PURG VOL CONT/V</td><td>XXX %</td></tr> <tr><th colspan="2">MONITOR</th></tr> <tr><td>ENG SPEED</td><td>XXX rpm</td></tr> <tr><td>A/F ALPHA-B1</td><td>XXX %</td></tr> <tr><td>A/F ALPHA-B2</td><td>XXX %</td></tr> <tr><td>HO2S1 MNTR (B1)</td><td>LEAN</td></tr> <tr><td>HO2S1 MNTR (B2)</td><td>LEAN</td></tr> <tr><td>THRTL POS SEN</td><td>XXX V</td></tr> <tr><td> </td><td> </td></tr> <tr><td> </td><td> </td></tr> </table>			ACTIVE TEST		PURG VOL CONT/V	XXX %	MONITOR		ENG SPEED	XXX rpm	A/F ALPHA-B1	XXX %	A/F ALPHA-B2	XXX %	HO2S1 MNTR (B1)	LEAN	HO2S1 MNTR (B2)	LEAN	THRTL POS SEN	XXX V				
ACTIVE TEST																								
PURG VOL CONT/V	XXX %																							
MONITOR																								
ENG SPEED	XXX rpm																							
A/F ALPHA-B1	XXX %																							
A/F ALPHA-B2	XXX %																							
HO2S1 MNTR (B1)	LEAN																							
HO2S1 MNTR (B2)	LEAN																							
THRTL POS SEN	XXX V																							
Vacuum should exist.																								
SEF984Y																								
OK or NG																								
OK	▶	GO TO 14.																						
NG	▶	GO TO 13.																						

12	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION	
<p>X Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Stop engine. 3. Disconnect vacuum hose to EVAP canister purge volume control solenoid valve at EVAP service port. 4. Start engine and let it idle for at least 80 seconds. 5. Check vacuum hose for vacuum when revving engine up to 2,000 rpm. <p style="color: blue; text-align: center;">Vacuum should exist.</p>		
OK or NG		
OK	▶	GO TO 15.
NG	▶	GO TO 13.

13	CHECK VACUUM HOSE	
Check vacuum hoses for clogging or disconnection. Refer to "Vacuum Hose Drawing", EC-28.		
OK or NG		
OK (With CONSULT-II)	▶	GO TO 14.
OK (Without CONSULT-II)	▶	GO TO 15.
NG	▶	Repair or reconnect the hose.

DTC P0455 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

14	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE																					
<p>E With CONSULT-II</p> <p>1. Start engine.</p> <p>2. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. Check that engine speed varies according to the valve opening.</p>																						
<table border="1" style="margin: auto;"> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <td>PURG VOL CONT/V</td> <td>XXX %</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>A/F ALPHA-B1</td> <td>XX %</td> </tr> <tr> <td>A/F ALPHA-B2</td> <td>XX %</td> </tr> <tr> <td>HO2S1 MNTR (B1)</td> <td>LEAN</td> </tr> <tr> <td>HO2S1 MNTR (B2)</td> <td>LEAN</td> </tr> <tr> <td>THRTL POS SEN</td> <td>X. XX V</td> </tr> <tr> <td> </td> <td> </td> </tr> </table>			ACTIVE TEST		PURG VOL CONT/V	XXX %	MONITOR		ENG SPEED	XXX rpm	A/F ALPHA-B1	XX %	A/F ALPHA-B2	XX %	HO2S1 MNTR (B1)	LEAN	HO2S1 MNTR (B2)	LEAN	THRTL POS SEN	X. XX V		
ACTIVE TEST																						
PURG VOL CONT/V	XXX %																					
MONITOR																						
ENG SPEED	XXX rpm																					
A/F ALPHA-B1	XX %																					
A/F ALPHA-B2	XX %																					
HO2S1 MNTR (B1)	LEAN																					
HO2S1 MNTR (B2)	LEAN																					
THRTL POS SEN	X. XX V																					
SEF677Y																						
OK or NG																						
OK	▶	GO TO 16.																				
NG	▶	GO TO 15.																				

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


DTC P0455 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)


15 CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Ⓔ With CONSULT-II

Check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.

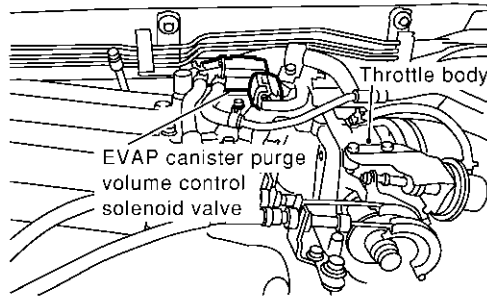

SEF986Y

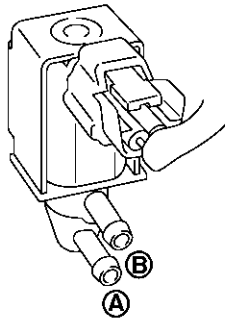


Condition PURG VOL CONT/V valve	Air passage continuity between A and B
100%	Yes
0%	No


SEF334XB

ⓧ Without CONSULT-II

Check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.

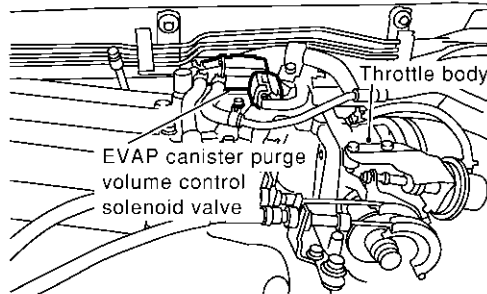

SEF986Y

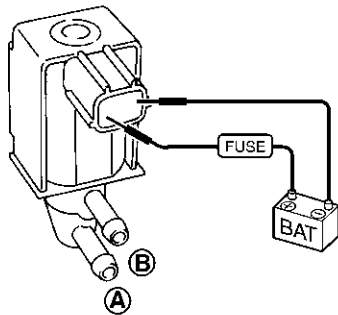

Condition	Air passage continuity between A and B
12V direct current supply between terminals 1 and 2	Yes
No supply	No


SEF335X

OK or NG

OK	▶	GO TO 16.
NG	▶	Replace EVAP canister purge volume control solenoid valve.

DTC P0455 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

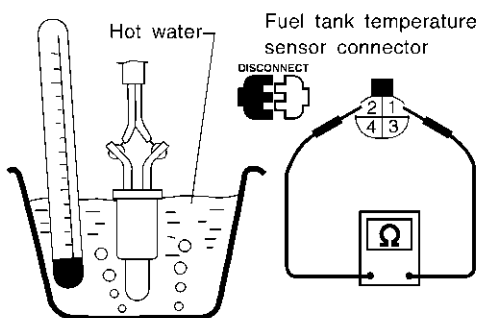16	CHECK FUEL TANK TEMPERATURE SENSOR							
<p>1. Remove fuel level sensor unit. 2. Check resistance between fuel level sensor unit and fuel pump terminals 4 and 5 by heating with hot water or heat gun as shown in the figure.</p>								
								
<table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th style="text-align: center;">Temperature °C (°F)</th> <th style="text-align: center;">Resistance kΩ</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">20 (68)</td> <td style="text-align: center;">2.3 - 2.7</td> </tr> <tr> <td style="text-align: center;">50 (122)</td> <td style="text-align: center;">0.79 - 0.90</td> </tr> </tbody> </table>			Temperature °C (°F)	Resistance kΩ	20 (68)	2.3 - 2.7	50 (122)	0.79 - 0.90
Temperature °C (°F)	Resistance kΩ							
20 (68)	2.3 - 2.7							
50 (122)	0.79 - 0.90							
SEF974Y								
OK or NG								
OK	▶	GO TO 17.						
NG	▶	Replace fuel level sensor unit.						

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P0455 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

17	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR						
<p>1. Remove EVAP control system pressure sensor with its harness connector connected.</p> <p>CAUTION:</p> <ul style="list-style-type: none"> ● Never apply force to the air hole protector of the sensor if equipped. 							
SEF799W							
<p>2. Remove hose from EVAP control system pressure sensor.</p> <p>3. Turn ignition switch "ON".</p> <p>4. Use pump to apply vacuum and pressure to EVAP control system pressure sensor as shown in figure.</p> <p>CAUTION:</p> <ul style="list-style-type: none"> ● Always calibrate the vacuum pump gauge when using it. ● Do not apply below -20 kPa (-150 mmHg, -5.91 inHg) or over 20 kPa (150 mmHg, 5.91 inHg) of pressure. <p>5. Check input voltage between ECM terminal 84 and ground.</p>							
<div style="display: flex; justify-content: space-between; align-items: flex-start;"> <div style="width: 45%;"> </div> <div style="width: 45%;"> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Pressure (Relative to atmospheric pressure)</th> <th style="text-align: center;">Voltage V</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">0 kPa (0 mmHg, 0 inHg)</td> <td style="text-align: center;">3.0 - 3.6</td> </tr> <tr> <td style="text-align: center;">-9.3 kPa (-70 mmHg, -2.76 inHg)</td> <td style="text-align: center;">0.4 - 0.6</td> </tr> </tbody> </table> </div> </div>		Pressure (Relative to atmospheric pressure)	Voltage V	0 kPa (0 mmHg, 0 inHg)	3.0 - 3.6	-9.3 kPa (-70 mmHg, -2.76 inHg)	0.4 - 0.6
Pressure (Relative to atmospheric pressure)	Voltage V						
0 kPa (0 mmHg, 0 inHg)	3.0 - 3.6						
-9.3 kPa (-70 mmHg, -2.76 inHg)	0.4 - 0.6						
SEF342X							
<p>CAUTION:</p> <ul style="list-style-type: none"> ● Discard and EVAP control system pressure sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. <p style="text-align: center;">OK or NG</p>							
OK	▶ GO TO 18.						
NG	▶ Replace EVAP control system pressure sensor.						

18	CHECK REFUELING EVAP VAPOR LINE
<p>Check refueling EVAP vapor line between EVAP canister and fuel tank for clogging, kink, looseness and improper connection. For location, refer to "EVAPORATIVE EMISSION LINE DRAWING", EC-38.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 19.
NG	▶ Repair or replace hoses and tubes.

19	CHECK SIGNAL LINE AND RECIRCULATION LINE
<p>Check signal line and recirculation line between filler neck tube and fuel tank for clogging, kink, cracks, looseness and improper connection.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 20.
NG	▶ Repair or replace hoses, tubes or filler neck tube.


DTC P0455 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

20 CHECK REFUELING CONTROL VALVE

1. Remove fuel filler cap.
2. Check air continuity between hose ends A and B.
Blow air into hose end B. Air should flow freely into the fuel tank.
3. Blow air into hose end A and check that there is no leakage.
4. Apply pressure to both hose ends A and B [20 kPa (150 mmHg, 5.91 inHg)] using a pressure pump and a suitable 3-way connector. Check that there is no leakage.

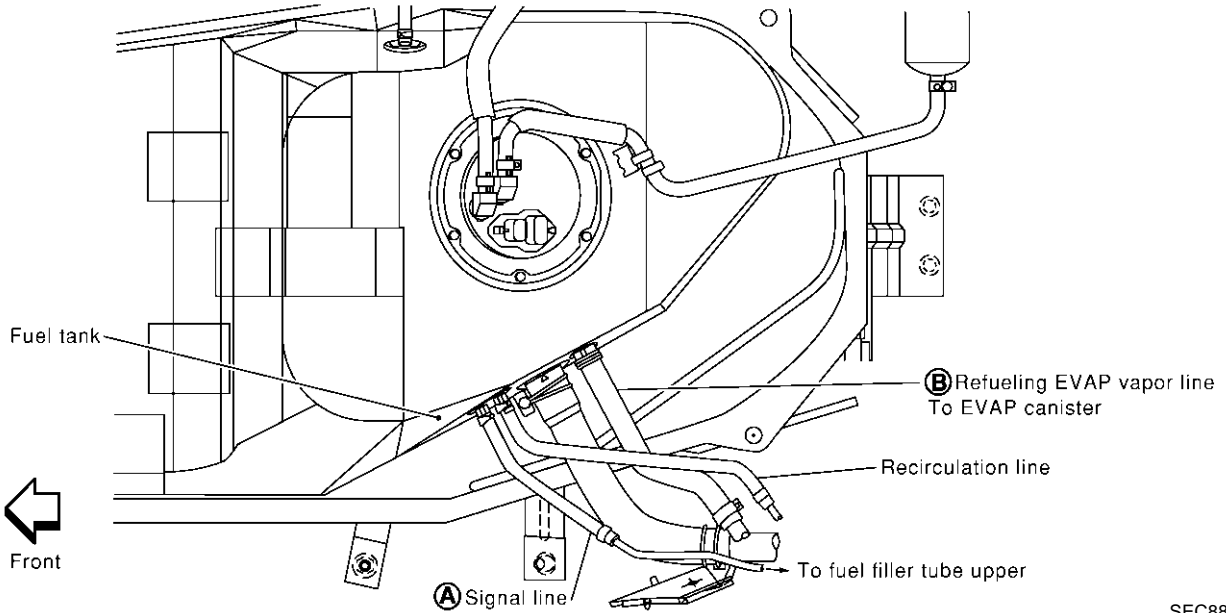

OK or NG

OK	▶	GO TO 21.
NG	▶	Replace or refueling control valve with fuel tank.

21 CHECK INTERMITTENT INCIDENT

Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.


▶ **INSPECTION END**

DTC P0456 EVAP CONTROL SYSTEM

On Board Diagnosis Logic

On Board Diagnosis Logic

NBEC0987

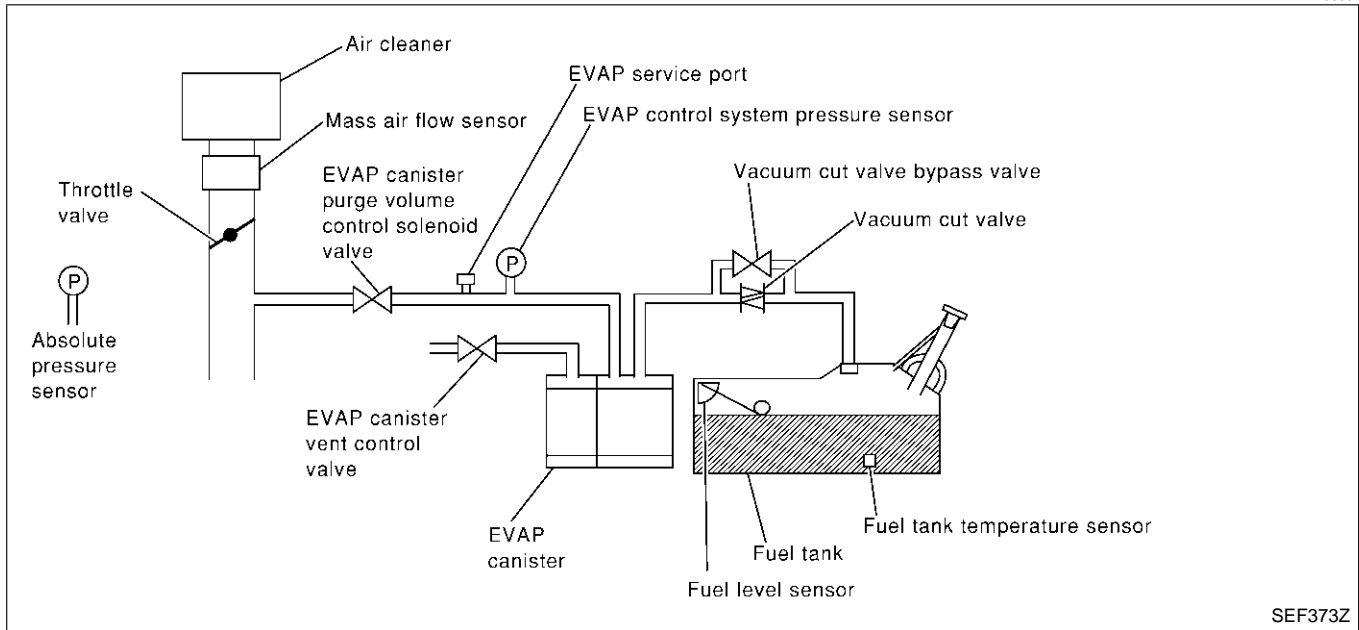

SEF373Z

This diagnosis detects very small leaks in the EVAP line between fuel tank and EVAP canister purge volume control solenoid valve, using the intake manifold same as a conventional EVAP small leak diagnosis. If ECM judges a leak which corresponds to a very small leak, the very small leak P0456 will be detected. If ECM judges a leak equivalent to a small leak, EVAP small leak P0442 will be detected. If ECM judges there are no leaks, the diagnosis will be OK.

DTC P0456 EVAP CONTROL SYSTEM

On Board Diagnosis Logic (Cont'd)

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause	
P0456 0456	Evaporative emission control system very small leak (negative pressure check)	<ul style="list-style-type: none"> ● EVAP system has a very small leak. ● EVAP system does not operate properly. 	<ul style="list-style-type: none"> ● Incorrect fuel tank vacuum relief valve ● Incorrect fuel filler cap used ● Fuel filler cap remains open or fails to close. ● Foreign matter caught in fuel filler cap ● Leak is in line between intake manifold and EVAP canister purge volume control solenoid valve. ● Foreign matter caught in EVAP canister vent control valve ● EVAP canister or fuel tank leaks ● EVAP purge line (Pipe and rubber tube) leaks ● EVAP purge line rubber tube bent ● Blocked or bent rubber tube to EVAP control system pressure sensor ● Loose or disconnected rubber tube ● EVAP canister vent control valve and the circuit ● EVAP canister purge volume control solenoid valve and the circuit ● Absolute pressure sensor ● Fuel tank temperature sensor ● O-ring of EVAP canister vent control valve is missing or damaged. ● Water separator ● EVAP canister saturated with water ● EVAP control system pressure sensor ● Refueling control valve ● ORVR system leaks ● Fuel level sensor and the circuit ● Foreign matter caught in EVAP canister purge volume control solenoid valve 	GI MA EM LC EC FE AT TF PD AX SU BR ST RS BT HA SC EL IDX

CAUTION:


- Use only a genuine NISSAN fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may come on.
- If the fuel filler cap is not tightened properly, the MIL may come on.
- Use only a genuine NISSAN rubber tube as a replacement.

DTC P0456 EVAP CONTROL SYSTEM

DTC Confirmation Procedure

EVAP V/S LEAK P0456/P1456	
CHECK FUEL LEVEL SENSOR(V). SEE SERVICE MANUAL FOR SPECIFICATION. IS THE VOLTAGE WITHIN THE SPECIFICATION?	
MONITOR	
FUEL LEVEL SE	XXX V

SEC764C

EVAP V/S LEAK P0456/P1456	
MAINTAIN 1800-2800 RPM UNTIL FINAL RESULT APPEARS.	
	
1800 rpm	2300 rpm 2800 rpm

SEC765C

EVAP V/S LEAK P0456/P1456	
OK	

SEC766C

DTC Confirmation Procedure

NBEC0988

CAUTION:

Never remove fuel filler cap during the DTC confirmation procedure.

NOTE:

- If DTC P0456 is displayed with P0442, first perform trouble diagnosis for DTC P0456.
- If "DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.
- After repair, make sure that the hoses and clips are installed properly.

TESTING CONDITION:

- Open engine hood before conducting following procedure.
- If any of following condition is met just before the DTC confirmation procedure, leave the vehicle for more than 1 hour.
 - a) Fuel filler cap is removed.
 - b) Refilled or drained the fuel.
 - c) EVAP component parts is/are removed.
- Before performing the following procedure, confirm that battery voltage is more than 11V at idle.

Ⓔ With CONSULT-II


- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT-II.
- 2) Make sure the following conditions are met.
FUEL LEVEL SE: 1.08 - 0.2V
COOLAN TEMP/S: 0 - 32°C (32 - 90°F)
FUEL T/TMP SE: 0 - 35°C (32 - 95°F)
INT A/TEMP SE: More than 0°C (32°F)
If NG, turn ignition switch "OFF" and leave the vehicle in a cool place (soak the vehicle) or refilling/draining fuel until the output voltage condition of the "FUEL LEVEL SE" meets within the range above and leave the vehicle for more than 1 hour. Then start from step 1).
- 3) Turn ignition switch "OFF" and wait at least 5 seconds.
- 4) Turn ignition switch "ON".
- 5) Select "EVP V/S LEAK P0456/P1456" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT-II.
Follow the instruction displayed.
- 6) Make sure that "OK" is displayed.
If "NG" is displayed, refer to "Diagnostic Procedure", EC-415.

NOTE:

- If the engine speed cannot be maintained within the range displayed on CONSULT-II screen, go to "Basic inspection", EC-116.
- Make sure that EVAP hoses are connected to EVAP canister purge volume control solenoid valve properly.

DTC P0456 EVAP CONTROL SYSTEM

Overall Function Check

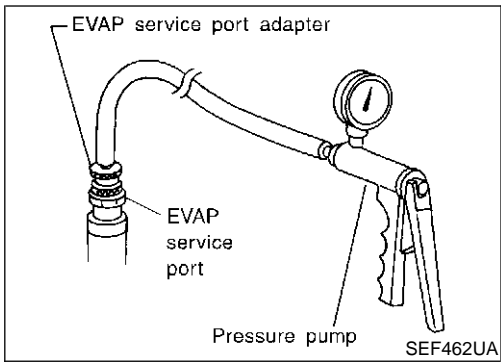

Overall Function Check

NBEC0989

WITH GST

NBEC0989S01

Use this procedure to check the overall function of the EVAP very small leak function. During this check, a DTC might not be confirmed.

CAUTION:

- Never use compressed air, doing so may damage the EVAP system.
- Do not start engine.
- Do not exceeded 4.12 kPa (0.042 kg/cm², 0.6 psi).

- 1) Attach the EVAP service port adapter securely to the EVAP service port.
- 2) Set the pressure pump and a hose.
- 3) Also set a vacuum gauge via 3-way connector and a hose.
- 4) Turn ignition switch "ON".
- 5) Connect GST and select mode 8.
- 6) Using mode 8 control the EVAP canister vent control valve (close) and vacuum cut valve bypass valve (open).
- 7) Apply pressure and make sure the following conditions are satisfied.

Pressure to be applied: 2.7 kPa (20 mmHg, 0.79 inHg)

Time to be waited after the pressure drawn in to the EVAP system and the pressure to be dropped: 60 seconds and the pressure should not be dropped more than 0.4 kPa (3 mmHg, 0.12 inHg)


If NG, go to diagnostic procedure, EC-415.

NOTE:

For more information, refer to GST instruction manual.

Diagnostic Procedure

NBEC0990


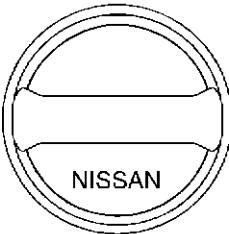
1	CHECK FUEL FILLER CAP DESIGN	
	<p>1. Turn ignition switch "OFF". 2. Check for genuine NISSAN fuel filler cap design.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF915U</p>	
	OK or NG	
OK	▶	GO TO 2.
NG	▶	Replace with genuine NISSAN fuel filler cap.

DTC P0456 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

2	CHECK FUEL FILLER CAP INSTALLATION	
Check that the cap is tightened properly by rotating the cap clockwise.		
OK or NG		
OK	▶	GO TO 3.
NG	▶	<ul style="list-style-type: none"> ● Open fuel filler cap, then clean cap and fuel filler neck threads using air blower. ● Retighten until ratcheting sound is heard.

3	CHECK FUEL FILLER CAP FUNCTION	
Check for air releasing sound while opening the fuel filler cap.		
OK or NG		
OK	▶	GO TO 5.
NG	▶	GO TO 4.

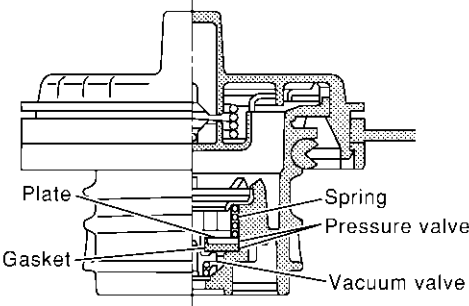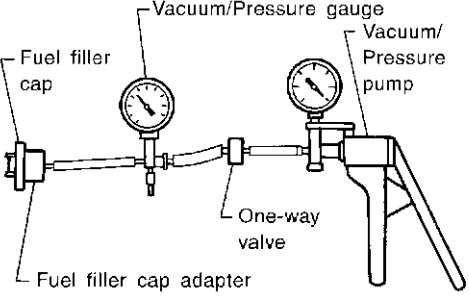
4	CHECK FUEL TANK VACUUM RELIEF VALVE	
<ol style="list-style-type: none"> 1. Wipe clean valve housing. 2. Check valve opening pressure and vacuum. 		
		
SEF445Y		
		
SEF943S		
<p>Pressure: 15.3 - 20.0 kPa (0.156 - 0.204 kg/cm², 2.22 - 2.90 psi)</p> <p>Vacuum: -6.0 to -3.3 kPa (-0.061 to -0.034 kg/cm², -0.87 to -0.48 psi)</p> <p>CAUTION: Use only a genuine fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may come on.</p>		
OK or NG		
OK	▶	GO TO 5.
NG	▶	Replace fuel filler cap with a genuine one.

DTC P0456 EVAP CONTROL SYSTEM


Diagnostic Procedure (Cont'd)

5 INSTALL THE PRESSURE PUMP

To locate the EVAP leak, install EVAP service port adapter and pressure pump to EVAP service port securely.

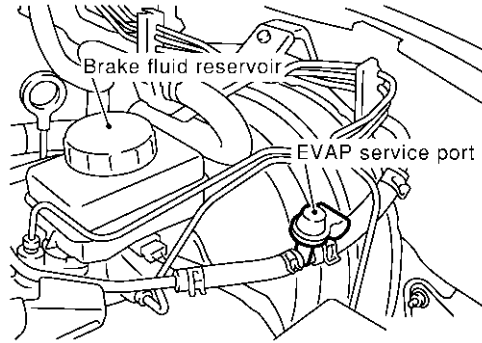

SEF983Y

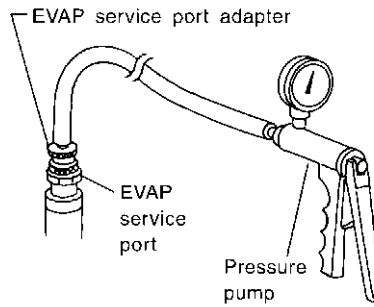

SEF916U

NOTE:

Improper installation of the EVAP service port adapter to the EVAP service port may cause leaking.

Models with CONSULT-II ►	GO TO 6.
Models without CON-SULT-II ►	GO TO 7.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0456 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)


6 CHECK FOR EVAP LEAK

With CONSULT-II

1. Turn ignition switch "ON".
2. Select "EVAP SYSTEM CLOSE" of "WORK SUPPORT" mode with CONSULT-II.
3. Touch "START" and apply pressure into the EVAP line until the pressure indicator reaches the middle of the bar graph.

NOTE:


- Never use compressed air or a high pressure pump.
- Do not exceed 4.12 kPa (0.042 kg/cm², 0.6 psi) of pressure in the system.

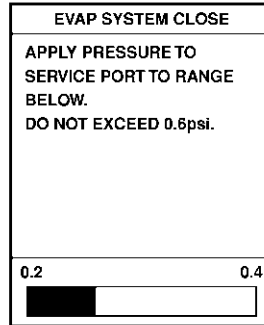

PEF917U

4. Using EVAP leak detector, locate the EVAP leak. For the leak detector, refer to the instruction manual for more details. Refer to "EVAPORATIVE EMISSION LINE DRAWING", EC-38.

Leak detector

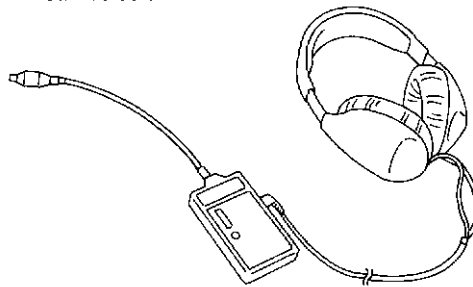

SEF200U

OK or NG

OK ► GO TO 8.

NG ► Repair or replace.

DTC P0456 EVAP CONTROL SYSTEM


Diagnostic Procedure (Cont'd)

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

7 CHECK FOR EVAP LEAK


⊗ Without CONSULT-II

1. Turn ignition switch "OFF".
2. Apply 12 volts DC to EVAP canister vent control valve. The valve will close. (Continue to apply 12 volts until the end of test.)

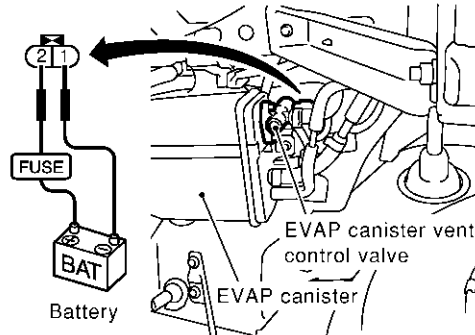

SEC930C

3. Apply 12 volts DC to vacuum cut valve bypass valve. The valve will open. (Continue to apply 12V until the end of test.)

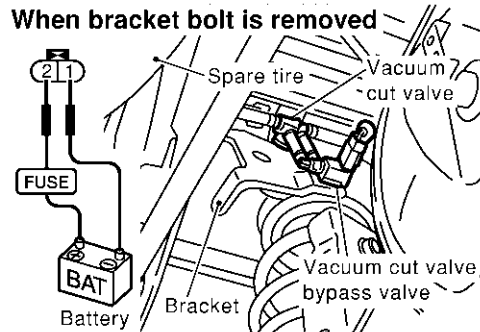


SEC932C

4. Pressurize the EVAP line using pressure pump with 1.3 to 2.7 kPa (10 to 20 mmHg, 0.39 to 0.79 inHg), then remove pump and EVAP service port adapter.

NOTE:

- Never use compressed air or a high pressure pump.
- Do not exceed 4.12 kPa (0.042 kg/cm², 0.6 psi) of pressure in the system.

5. Using EVAP leak detector, locate the EVAP leak. For the leak detector, refer to the instruction manual for more details. Refer to "EVAPORATIVE EMISSION LINE DRAWING", EC-38.

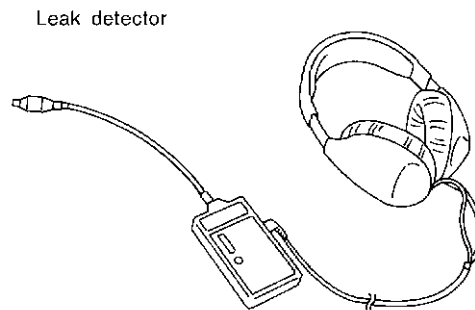

SEF200U

OK or NG

OK ► GO TO 8.

NG ► Repair or replace.

DTC P0456 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

8	CHECK WATER SEPARATOR	
<ol style="list-style-type: none"> 1. Check visually for insect nests in the water separator air inlet. 2. Check visually for cracks or flaws in the appearance. 3. Check visually for cracks or flaws in the hose. 4. Check that A and C are not clogged by blowing air into B with A, and then C plugged. 		
<p>* (A) : Bottom hole (To atmosphere) (B) : Emergency tube (From EVAP canister) (C) : Inlet port (To member)</p>		
PBIB1032E		
<ol style="list-style-type: none"> 5. In case of NG in items 2 - 4, replace the parts. <p>NOTE:</p> <ul style="list-style-type: none"> ● Do not disassemble water separator. <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 9.
NG	▶	Replace water separator.

9	CHECK EVAP CANISTER VENT CONTROL VALVE, O-RING AND CIRCUIT	
Refer to "DTC Confirmation Procedure", EC-378.		
OK or NG		
OK	▶	GO TO 10.
NG	▶	Repair or replace EVAP canister vent control valve and O-ring or harness/connector.

10	CHECK IF EVAP CANISTER SATURATED WITH WATER	
<ol style="list-style-type: none"> 1. Remove EVAP canister with EVAP canister vent control valve attached. 2. Does water drain from the EVAP canister? 		
Yes or No		
Yes	▶	GO TO 11.
No (With CONSULT-II)	▶	GO TO 13.
No (Without CONSULT-II)	▶	GO TO 14.

SEF596U

DTC P0456 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

11	CHECK EVAP CANISTER	
Weigh the EVAP canister with the EVAP canister vent control valve attached. The weight should be less than 1.8 kg (4.0 lb).		
OK or NG		
OK (With CONSULT-II)	▶	GO TO 13.
OK (Without CONSULT-II)	▶	GO TO 14.
NG	▶	GO TO 12.

GI
MA
EM
LC

12	DETECT MALFUNCTIONING PART	
Check the following.		
<ul style="list-style-type: none"> ● EVAP canister for damage ● EVAP hose between EVAP canister and water separator for clogging or poor connection 		
	▶	Repair hose or replace EVAP canister.

EC
FE

13	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION																					
<p>Ⓔ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Disconnect vacuum hose to EVAP canister purge volume control solenoid valve at EVAP service port. 2. Start engine. 3. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode. 4. Touch "Qu" on CONSULT-II screen to increase "PURG VOL CONT/V" opening to 100%. 5. Check vacuum hose for vacuum when revving engine up to 2,000 rpm. 																						
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <td>PURG VOL CONT/V</td> <td>XXX %</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>A/F ALPHA-B1</td> <td>XXX %</td> </tr> <tr> <td>A/F ALPHA-B2</td> <td>XXX %</td> </tr> <tr> <td>HO2S1 MNTR (B1)</td> <td>LEAN</td> </tr> <tr> <td>HO2S1 MNTR (B2)</td> <td>LEAN</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXX V</td> </tr> <tr> <td> </td> <td> </td> </tr> </table>			ACTIVE TEST		PURG VOL CONT/V	XXX %	MONITOR		ENG SPEED	XXX rpm	A/F ALPHA-B1	XXX %	A/F ALPHA-B2	XXX %	HO2S1 MNTR (B1)	LEAN	HO2S1 MNTR (B2)	LEAN	THRTL POS SEN	XXX V		
ACTIVE TEST																						
PURG VOL CONT/V	XXX %																					
MONITOR																						
ENG SPEED	XXX rpm																					
A/F ALPHA-B1	XXX %																					
A/F ALPHA-B2	XXX %																					
HO2S1 MNTR (B1)	LEAN																					
HO2S1 MNTR (B2)	LEAN																					
THRTL POS SEN	XXX V																					
Vacuum should exist.																						
SEF984Y																						
OK or NG																						
OK	▶	GO TO 16.																				
NG	▶	GO TO 15.																				

AT
TF
PD
AX
SU
BR
ST

14	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION	
<p>ⓧ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Stop engine. 3. Disconnect vacuum hose to EVAP canister purge volume control solenoid valve at EVAP service port. 4. Start engine and let it idle for at least 80 seconds. 5. Check vacuum hose for vacuum when revving engine up to 2,000 rpm. <p style="color: blue;">Vacuum should exist.</p>		
OK or NG		
OK	▶	GO TO 17.
NG	▶	GO TO 15.

HA
SC
EL
IDX

DTC P0456 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

15	CHECK VACUUM HOSE	
Check vacuum hoses for clogging or disconnection. Refer to "Vacuum Hose Drawing", EC-28.		
OK or NG		
OK (With CONSULT-II)	▶	GO TO 16.
OK (Without CONSULT-II)	▶	GO TO 17.
NG	▶	Repair or reconnect the hose.

16	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE																					
<p>Ⓔ With CONSULT-II</p> <p>1. Start engine.</p> <p>2. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. Check that engine speed varies according to the valve opening.</p>																						
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <td>PURG VOL CONT/V</td> <td>XXX %</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>A/F ALPHA-B1</td> <td>XX %</td> </tr> <tr> <td>A/F ALPHA-B2</td> <td>XX %</td> </tr> <tr> <td>HO2S1 MNTR (B1)</td> <td>LEAN</td> </tr> <tr> <td>HO2S1 MNTR (B2)</td> <td>LEAN</td> </tr> <tr> <td>THRTL POS SEN</td> <td>X. XX V</td> </tr> <tr> <td> </td> <td> </td> </tr> </table>			ACTIVE TEST		PURG VOL CONT/V	XXX %	MONITOR		ENG SPEED	XXX rpm	A/F ALPHA-B1	XX %	A/F ALPHA-B2	XX %	HO2S1 MNTR (B1)	LEAN	HO2S1 MNTR (B2)	LEAN	THRTL POS SEN	X. XX V		
ACTIVE TEST																						
PURG VOL CONT/V	XXX %																					
MONITOR																						
ENG SPEED	XXX rpm																					
A/F ALPHA-B1	XX %																					
A/F ALPHA-B2	XX %																					
HO2S1 MNTR (B1)	LEAN																					
HO2S1 MNTR (B2)	LEAN																					
THRTL POS SEN	X. XX V																					
OK or NG																						
OK	▶	GO TO 18.																				
NG	▶	GO TO 17.																				

SEF677Y

DTC P0456 EVAP CONTROL SYSTEM


Diagnostic Procedure (Cont'd)

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


17 CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Ⓔ With CONSULT-II

Check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.

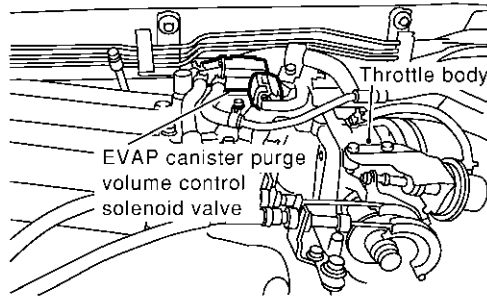

SEF986Y

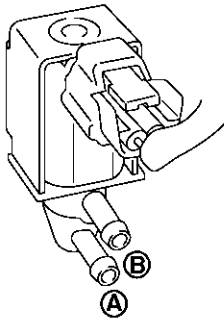


Condition PURG VOL CONT/V valve	Air passage continuity between A and B
100%	Yes
0%	No


SEF334XB

Ⓕ Without CONSULT-II

Check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.

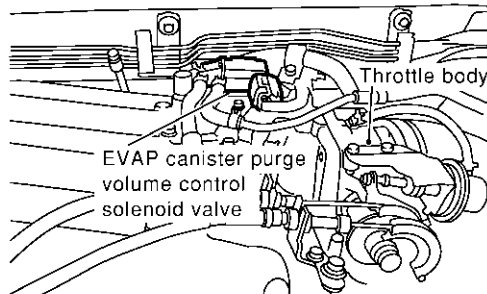

SEF986Y

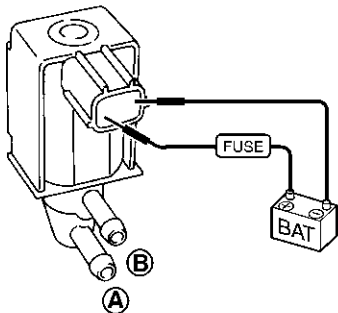

Condition	Air passage continuity between A and B
12V direct current supply between terminals 1 and 2	Yes
No supply	No

SEF335X

OK or NG


OK	▶	GO TO 18.
NG	▶	Replace EVAP canister purge volume control solenoid valve.

DTC P0456 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

18 CHECK FUEL TANK TEMPERATURE SENSOR

1. Remove fuel level sensor unit.
2. Check resistance between fuel level sensor unit and fuel pump terminals 1 and 2 by heating with hot water or heat gun as shown in the figure.

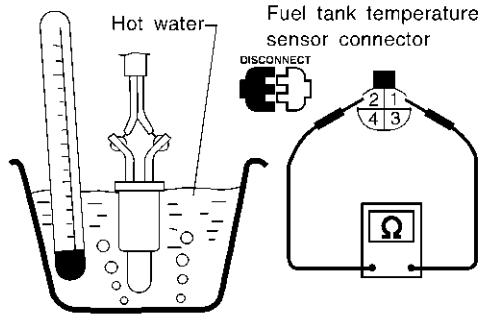

Temperature °C (°F)	Resistance kΩ
20 (68)	2.3 - 2.7
50 (122)	0.79 - 0.90

SEF974Y

OK or NG

OK ► GO TO 19.

NG ► Replace fuel level sensor unit.

DTC P0456 EVAP CONTROL SYSTEM


Diagnostic Procedure (Cont'd)

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

19 CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

1. Remove EVAP control system pressure sensor with its harness connector connected.

- CAUTION:**
- Never apply force to the air hole protector of the sensor if equipped.

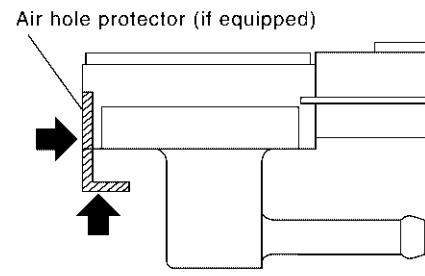


SEF799W

2. Remove hose from EVAP control system pressure sensor.
3. Turn ignition switch "ON".
4. Use pump to apply vacuum and pressure to EVAP control system pressure sensor as shown in figure.

- CAUTION:**
- Always calibrate the vacuum pump gauge when using it.
 - Do not apply below -20 kPa (-150 mmHg , -5.91 inHg) or over 20 kPa (150 mmHg , 5.91 inHg) of pressure.

5. Check input voltage between ECM terminal 84 and ground.

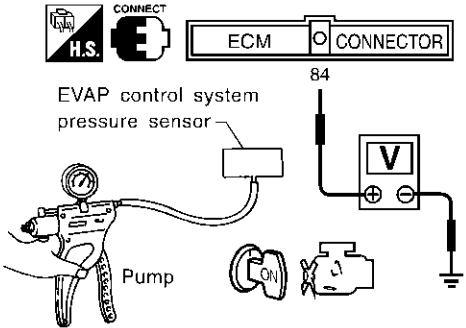

Pressure (Relative to atmospheric pressure)	Voltage V
0 kPa (0 mmHg, 0 inHg)	3.0 - 3.6
-9.3 kPa (-70 mmHg, -2.76 inHg)	0.4 - 0.6

SEF342X

- CAUTION:**
- Discard and EVAP control system pressure sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

OK or NG

OK	▶	GO TO 20.
NG	▶	Replace EVAP control system pressure sensor.

20 CHECK EVAP PURGE LINE

Check EVAP purge line (pipe, rubber tube, fuel tank and EVAP canister) for cracks or improper connection. Refer to "Evaporative Emission System", EC-34.

OK or NG

OK	▶	GO TO 21.
NG	▶	Repair or reconnect the hose.

21 CLEAN EVAP PURGE LINE

Clean EVAP purge line (pipe and rubber tube) using air blower.


	▶	GO TO 22.
--	---	-----------

DTC P0456 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

22	CHECK REFUELING EVAP VAPOR LINE
<ul style="list-style-type: none"> Check refueling EVAP vapor line between EVAP canister and fuel tank for clogging, kink, looseness and improper connection. For location, refer to "EVAPORATIVE EMISSION LINE DRAWING", EC-38. 	
OK or NG	
OK	▶ GO TO 23.
NG	▶ Repair or replace hoses and tubes.

23	CHECK SIGNAL LINE AND RECIRCULATION LINE
<ul style="list-style-type: none"> Check signal line and recirculation line between filler neck tube and fuel tank for clogging, kink, cracks, looseness and improper connection. 	
OK or NG	
OK	▶ GO TO 24.
NG	▶ Repair or replace hoses, tubes or filler neck tube.

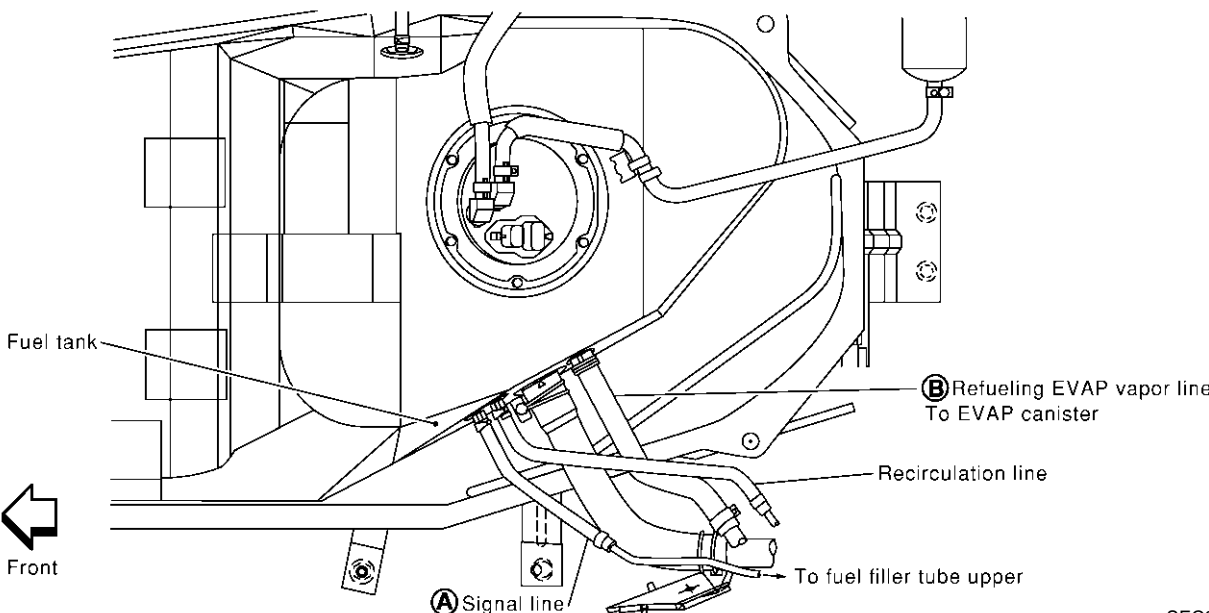24	CHECK REFUELING CONTROL VALVE
<ol style="list-style-type: none"> Remove fuel filler cap. Check air continuity between hose ends A and B. Blow air into hose end B. Air should flow freely into the fuel tank. Blow air into hose end A and check that there is no leakage. Apply pressure to both hose ends A and B [20 kPa (150 mmHg, 5.91 inHg)] using a pressure pump and a suitable 3-way connector. Check that there is no leakage. 	
	
OK or NG	
OK	▶ GO TO 25.
NG	▶ Replace or refueling control valve with fuel tank.

25	CHECK FUEL LEVEL SENSOR
Refer to EL-130, "Fuel Level Sensor Unit Check".	
OK or NG	
OK	▶ GO TO 26.
NG	▶ Replace fuel level sensor unit.

DTC P0456 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

26	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	
▶	INSPECTION END

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX

DTC P0460 FUEL LEVEL SENSOR

Component Description

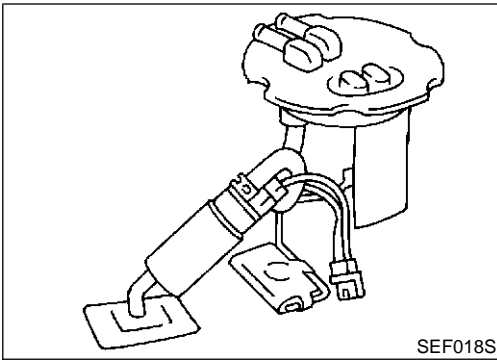

Component Description

The fuel level sensor is mounted in the fuel level sensor unit. The sensor detects a fuel level in the fuel tank and transmits a signal to the ECM. NBEC0991

It consists of two parts, one is mechanical float and the other is variable resistor. Fuel level sensor output voltage changes depending on the movement of the fuel mechanical float.

On Board Diagnostic Logic

When the vehicle is parked, naturally the fuel level in the fuel tank is stable. It means that output signal of the fuel level sensor does not change. If ECM senses sloshing signal from the sensor, fuel level sensor malfunction is detected. NBEC0992

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0460 0460	Fuel level sensor circuit noise	Even though the vehicle is parked, a signal being varied is sent from the fuel level sensor to ECM.	<ul style="list-style-type: none"> Fuel level sensor circuit (The fuel level sensor circuit is open or shorted.) Fuel level sensor

3

DATA MONITOR	
MONITOR	NO DTC
FUEL T/TMP SE	XXX °C
FUEL LEVEL SE	XXX V

SEF195Y

DTC Confirmation Procedure

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test. NBEC0993

WITH CONSULT-II

- 1) Turn ignition switch "ON". NBEC0993S01
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and wait maximum of 2 consecutive minutes.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-430.

WITH GST

Follow the procedure "WITH CONSULT-II" above. NBEC0993S02

DTC P0460 FUEL LEVEL SENSOR






Wiring Diagram

Wiring Diagram

NBEC0994

EC-FLS1-01

: Detectable line for DTC
 : Non-detectable line for DTC

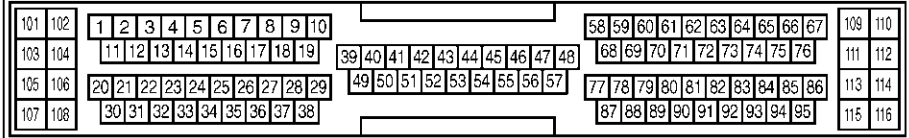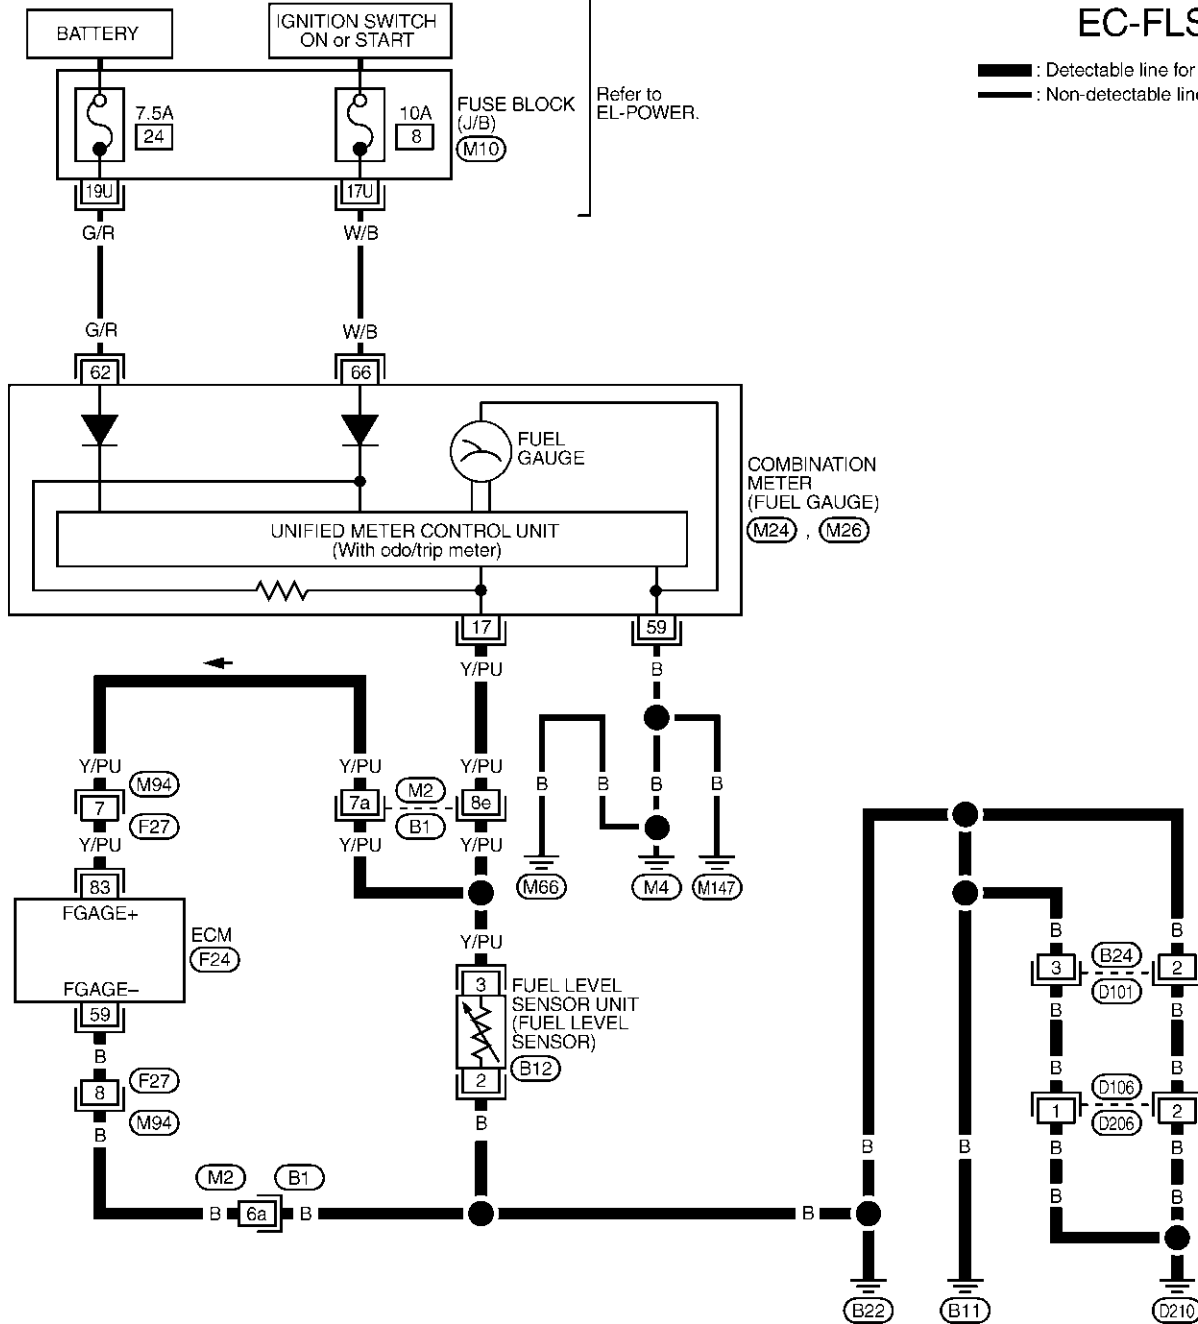

REFER TO THE FOLLOWING.

- (BT) -SUPER
- MULTIPLE JUNCTION (SMJ)
- (M10) -FUSE BLOCK-JUNCTION BOX (J/B)

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


MEC237E

DTC P0460 FUEL LEVEL SENSOR

Diagnostic Procedure

Diagnostic Procedure

=NBEC0995

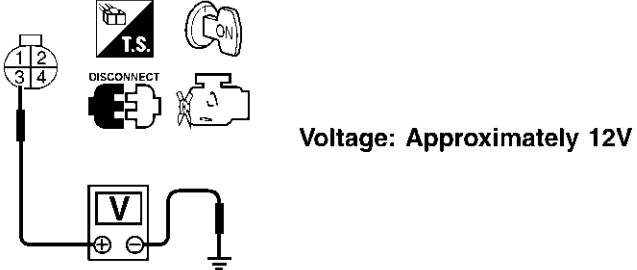1	CHECK FUEL LEVEL SENSOR POWER SUPPLY CIRCUIT	
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect fuel level sensor unit harness connector. 3. Turn ignition switch "ON". 4. Check voltage between fuel level sensor unit terminal 3 and ground with CONSULT-II or a tester. 		
 <p style="text-align: center;">Voltage: Approximately 12V</p>		
SEF993Y		
OK or NG		
OK	▶	GO TO 3.
NG	▶	GO TO 2.

2	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M2, B1 ● Harness for open or short between combination meter and fuel level sensor unit 		
		▶ Repair or replace harness or connectors.

3	CHECK FUEL LEVEL SENSOR GROUND CIRCUIT FOR OPEN AND SHORT	
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Check harness continuity between fuel level sensor unit terminal 2 and body ground. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to power. 		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Repair open circuit or short to power in harness or connectors.

4	CHECK FUEL LEVEL SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
<ol style="list-style-type: none"> 1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 83 and fuel level sensor terminal 3, ECM terminal 59 and fuel level sensor unit terminal 2. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to ground and short to power. 		
OK or NG		
OK	▶	GO TO 6.
NG	▶	GO TO 5.

DTC P0460 FUEL LEVEL SENSOR

Diagnostic Procedure (Cont'd)


5	DETECT MALFUNCTIONING PART		
		Check the following.	GI
		<ul style="list-style-type: none"> ● Harness connectors M2, B1 ● Harness connectors M94, F27 ● Harness for open or short between ECM and fuel level sensor 	MA
		▶	EM
		Repair open circuit or short to ground or short to power in harness or connectors.	LC

6	CHECK FUEL LEVEL SENSOR		
		Refer to EL-143, "Fuel Level Sensor Unit Check".	EC
		OK or NG	FE
		▶	AT
		GO TO 7.	TF
		▶	PD
		Replace fuel level sensor unit.	AX

7	CHECK INTERMITTENT INCIDENT		
		Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	SU
		▶	BR
		INSPECTION END	ST

DTC P0461 FUEL LEVEL SENSOR

Component Description

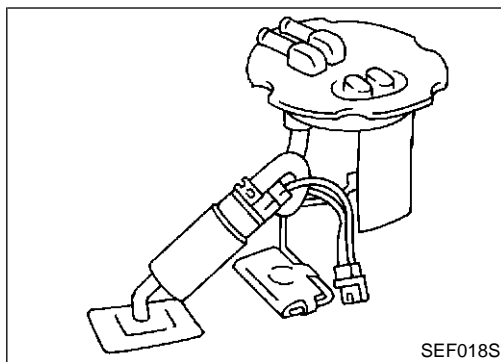

Component Description

=NBEC0996

The fuel level sensor is mounted in the fuel level sensor unit. The sensor detects a fuel level in the fuel tank and transmits a signal to the ECM.

It consists of two parts, one is mechanical float and the other is variable resistor. Fuel level sensor output voltage changes depending on the movement of the fuel mechanical float.

On Board Diagnostic Logic

NBEC0997

Driving long distances naturally affect fuel gauge level.

This diagnosis detects the fuel gauge malfunction of the gauge not moving even after a long distance has been driven.

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0461 0461	Fuel level sensor circuit range/performance	The output signal of the fuel level sensor does not change within the specified range even though the vehicle has been driven a long distance.	<ul style="list-style-type: none"> • Harness or connectors (The level sensor circuit is open or shorted.) • Fuel level sensor

Overall Function Check

NBEC0998

Use this procedure to check the overall function of the fuel level sensor function. During this check, a 1st trip DTC might not be confirmed.

WARNING:

When performing following procedure, be sure to observe the handling of the fuel. Refer to FE-5, "Fuel Tank".

TESTING CONDITION:

Before starting overall function check, preparation of draining fuel and refilling fuel is required.

DATA MONITOR	
MONITOR	NO DTC
FUEL T/TMP SE	XXX °C
FUEL LEVEL SE	XXX V

SEF195Y

WITH CONSULT-II

NBEC0998S01

NOTE:

Start from step 11, if it is possible to confirm that the fuel cannot be drained by 30ℓ (7-7/8 US gal, 6-5/8 Imp gal) in advance.

- 1) Prepare a fuel container and a spare hose.
- 2) Release fuel pressure from fuel line, refer to "Fuel Pressure Release", EC-51.
- 3) Remove the fuel feed hose on the fuel level sensor unit.
- 4) Connect a spare fuel hose where the fuel feed hose was removed.
- 5) Turn ignition switch "OFF" and wait at least 10 seconds then turn "ON".
- 6) Select "FUEL LEVEL SE" in "DATA MONITOR" mode with CONSULT-II.
- 7) Check "FUEL LEVEL SE" output voltage and note it.
- 8) Select "FUEL PUMP" in "ACTIVE TEST" mode with CONSULT-II.
- 9) Touch "ON" and drain fuel approximately 30ℓ (7-7/8 US gal, 6-5/8 Imp gal) and stop it.
- 10) Fill fuel into the fuel tank for 30ℓ (7-7/8 US gal, 6-5/8 Imp gal).
- 11) Check "FUEL LEVEL SE" output voltage and note it.

DTC P0461 FUEL LEVEL SENSOR

Overall Function Check (Cont'd)


- 12) Check "FUEL LEVEL SE" output voltage and confirm whether the voltage changes more than 0.03V during step 7 to 11. If NG, check the fuel level sensor, refer to EL-143, "FUEL LEVEL SENSOR UNIT CHECK".

GI

MA

EM

LC

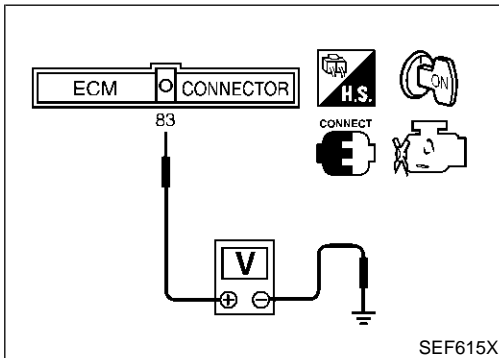

WITH GST

NBEC0998S02

NOTE:

Start from step 11, if it is possible to confirm that the fuel cannot be drained by 30ℓ (7-7/8 US gal, 6-5/8 Imp gal) in advance.

- 1) Prepare a fuel container and a spare hose.
- 2) Release fuel pressure from fuel line, refer to "Fuel Pressure Release", EC-51.
- 3) Remove the fuel feed hose on the fuel level sensor unit.
- 4) Connect a spare fuel hose where the fuel feed hose was removed.
- 5) Turn ignition switch "OFF".
- 6) Set voltmeters probe between ECM terminal 83 (fuel level sensor signal) and ground.
- 7) Turn ignition switch "ON".
- 8) Check voltage between ECM terminal 83 and ground and note it.
- 9) Drain fuel by 30ℓ (7-7/8 US gal, 6-5/8 Imp gal) from the fuel tank using proper equipment.
- 10) Fill fuel into the fuel tank for 30ℓ (7-7/8 US gal, 6-5/8 Imp gal).
- 11) Confirm that the voltage between ECM terminal 83 and ground changes more than 0.03V during step 8 - 10. If NG, check component of fuel level sensor, refer to EL-143, "FUEL LEVEL SENSOR UNIT CHECK".

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX

DTC P0462, P0463 FUEL LEVEL SENSOR

Component Description

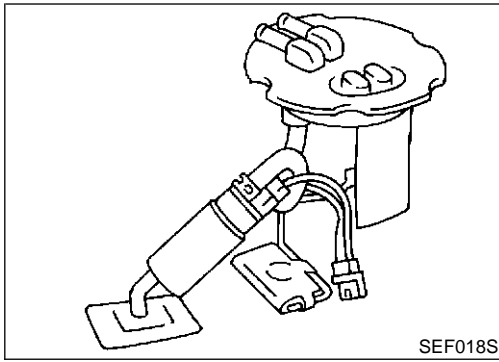

Component Description

The fuel level sensor is mounted in the fuel level sensor unit. The sensor detects a fuel level in the fuel tank and transmits a signal to the ECM. NBEC0999

It consists of two parts, one is mechanical float and the other is variable resistor. Fuel level sensor output voltage changes depending on the movement of the fuel mechanical float.

On Board Diagnostic Logic

ECM receives two signals from the fuel level sensor circuit. One is fuel level sensor power supply circuit, and the other is fuel level sensor ground circuit. NBEC1000

This diagnosis indicates the former, to detect open or short circuit malfunction.

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0462 0462	Fuel level sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Fuel level sensor
P0463 0463	Fuel level sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	


DTC Confirmation Procedure

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test. NBEC1001

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11V at ignition switch "ON".

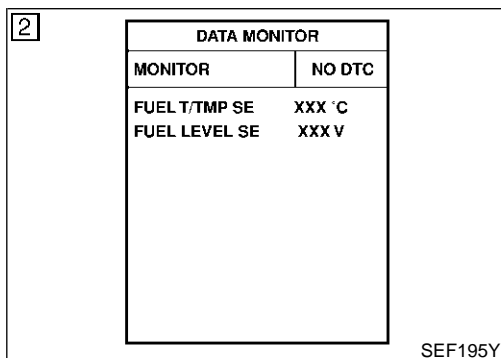

WITH CONSULT-II

- 1) Turn ignition switch "ON". NBEC1001S01
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Wait at least 5 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-436.

WITH GST

Follow the procedure "WITH CONSULT-II" above. NBEC1001S02

DTC P0462, P0463 FUEL LEVEL SENSOR



Wiring Diagram

Wiring Diagram

NBEC1002

EC-FLS2-01

: Detectable line for DTC
 : Non-detectable line for DTC

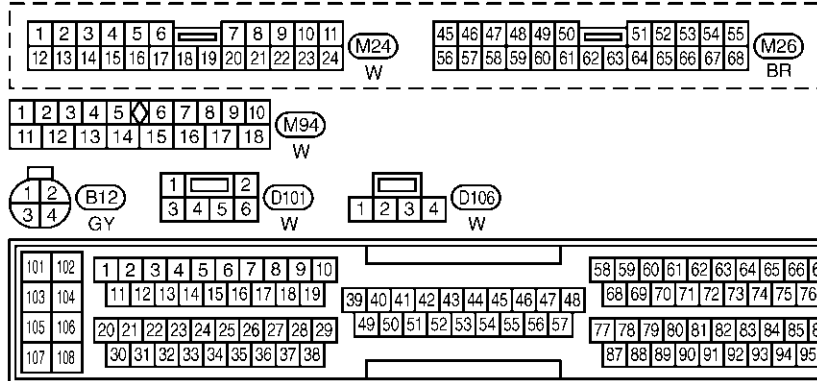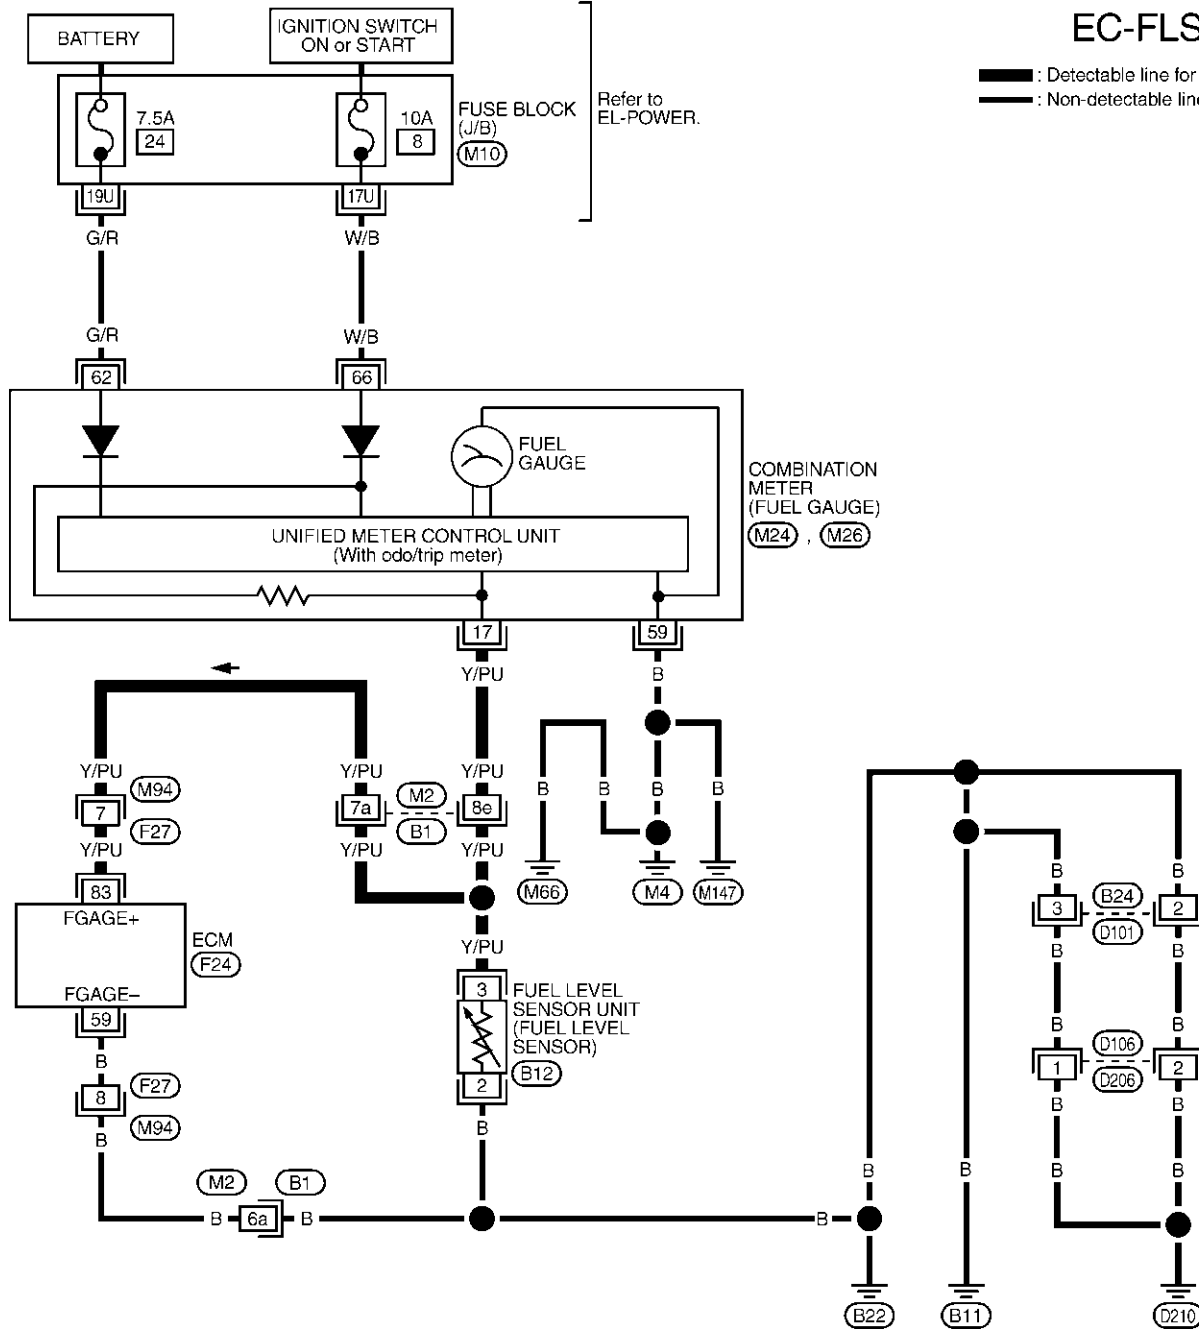

REFER TO THE FOLLOWING.

- (B1) -SUPER
- MULTIPLE JUNCTION (SMJ)
- (M10) -FUSE BLOCK- JUNCTION BOX (J/B)




MEC238E

DTC P0462, P0463 FUEL LEVEL SENSOR

Diagnostic Procedure

Diagnostic Procedure

=NBEC1003

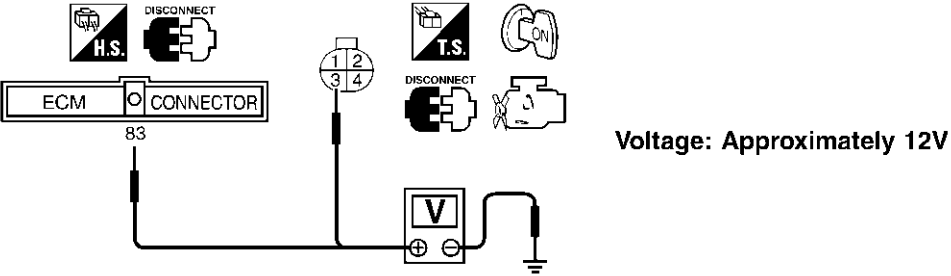1 CHECK FUEL LEVEL SENSOR POWER SUPPLY CIRCUIT	
<p>1. Turn ignition switch "OFF". 2. Disconnect fuel level sensor unit harness connector. 3. Turn ignition switch "ON". 4. Check voltage between fuel level sensor unit terminal 3 and ground, ECM terminal 83 and ground with CONSULT-II or tester.</p>	
 <p style="text-align: right;">Voltage: Approximately 12V</p>	
OK or NG	
OK	▶ GO TO 3.
NG	▶ GO TO 2.

SEF374Z

2 DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M2, B1 ● Harness connectors M94, F27 ● Harness for open or short between combination meter and fuel level sensor unit ● Harness for open or short between combination meter and ECM 	
▶	Repair or replace harness or connectors.

3 CHECK FUEL LEVEL SENSOR GROUND CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch "OFF". 2. Check harness continuity between fuel level sensor unit terminal 2 and body ground. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to power.</p>	
OK or NG	
OK	▶ GO TO 4.
NG	▶ Repair open circuit or short to power in harness or connectors.

4 CHECK FUEL LEVEL SENSOR GROUND CIRCUIT FOR OPEN AND SHORT	
<p>1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 59 and fuel level sensor terminal 2. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to power.</p>	
OK or NG	
OK	▶ GO TO 6.
NG	▶ GO TO 5.

DTC P0462, P0463 FUEL LEVEL SENSOR

Diagnostic Procedure (Cont'd)

5	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none">● Harness connectors M2, B1● Harness connectors M94, F27● Harness for open between ECM and fuel level sensor	
▶	Repair open circuit or short to power in harness on connectors.

GI

MA

EM

6	CHECK FUEL LEVEL SENSOR
Refer to EL-143, "Fuel Level Sensor Unit Check".	
OK or NG	
OK	▶ GO TO 7.
NG	▶ Replace fuel level sensor unit.

LC

EC

7	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	
▶	INSPECTION END

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0500 VSS

Component Description

Component Description

The vehicle speed sensor signal is sent from ABS actuator and electric unit (control unit) to combination meter. The combination meter then sends a signal to the ECM. =NBEC1004



ECM Terminals and Reference Value

NBEC1005

Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

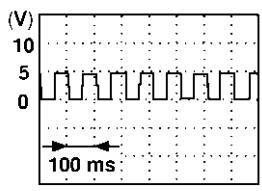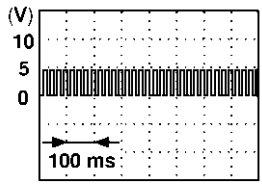TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
86	W/L	Vehicle speed sensor	[Engine is running] <ul style="list-style-type: none"> ● Lift up the vehicle. ● In 1st gear position ● 10 km/h (6 MPH) 	Approximately 2.5V  SEF583X
			[Engine is running] <ul style="list-style-type: none"> ● Lift up the vehicle. ● In 2nd gear position ● 30 km/h (19 MPH) 	Approximately 2.0V  SEF584X

On Board Diagnosis Logic

NBEC1006

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0500 0500	Vehicle speed sensor	The almost 0 km/h (0 MPH) signal from vehicle speed sensor signal is sent to ECM even when vehicle is being driven.	<ul style="list-style-type: none"> ● Harness or connector (The vehicle speed sensor signal circuit is open or shorted.) ● ABS actuator and electric unit (control unit) ● Combination meter

DTC Confirmation Procedure

NBEC1007

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Steps 1 and 2 may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

5	DATA MONITOR	
	MONITOR	NO DTC
	ENG SPEED	XXX rpm
	COOLAN TEMP/S	XXX °C
	B/FUEL SCHDL	XXX msec
	PW/ST SIGNAL	OFF
	VHCL SPEED SE	XXX km/h

SEF196Y

WITH CONSULT-II

NBEC1007S01

- 1) Start engine.
- 2) Read “VHCL SPEED SE” in “DATA MONITOR” mode with CONSULT-II. The vehicle speed on CONSULT-II should exceed 10 km/h (6 MPH) when rotating wheels with suitable gear position.
If NG, go to “Diagnostic Procedure”, EC-441.
If OK, go to following step.
- 3) Select “DATA MONITOR” mode with CONSULT-II.
- 4) Warm engine up to normal operating temperature.
- 5) Maintain the following conditions for at least 10 consecutive seconds.

ENG SPEED	More than 1,800 rpm
COOLAN TEMP/S	More than 70°C (158°F)
B/FUEL SCHDL	5.5 - 31.9 msec
Selector lever	Suitable position
PW/ST SIGNAL	OFF

- 6) If 1st trip DTC is detected, go to “Diagnostic Procedure”, EC-441.

Overall Function Check

NBEC1008

Use this procedure to check the overall function of the vehicle speed sensor signal circuit. During this check, a 1st trip DTC might not be confirmed.

WITH GST

NBEC1008S01

- 1) Lift up drive wheels.
- 2) Start engine.
- 3) Read vehicle speed sensor signal in “MODE 1” with GST.
The vehicle speed sensor signal on GST should be able to exceed 10 km/h (6 MPH) when rotating wheels with suitable gear position.
- 4) If NG, go to “Diagnostic Procedure”, EC-441.



DTC P0500 VSS

Wiring Diagram

Wiring Diagram

NBEC1009

EC-VSS-01

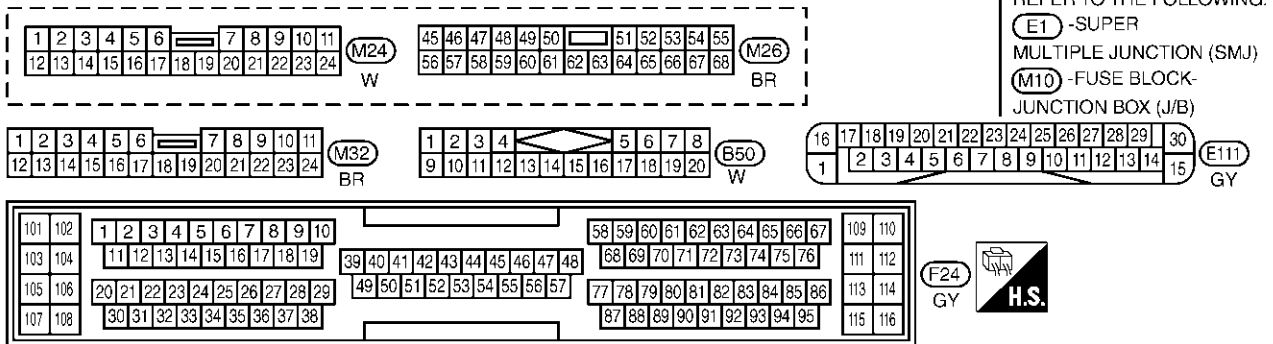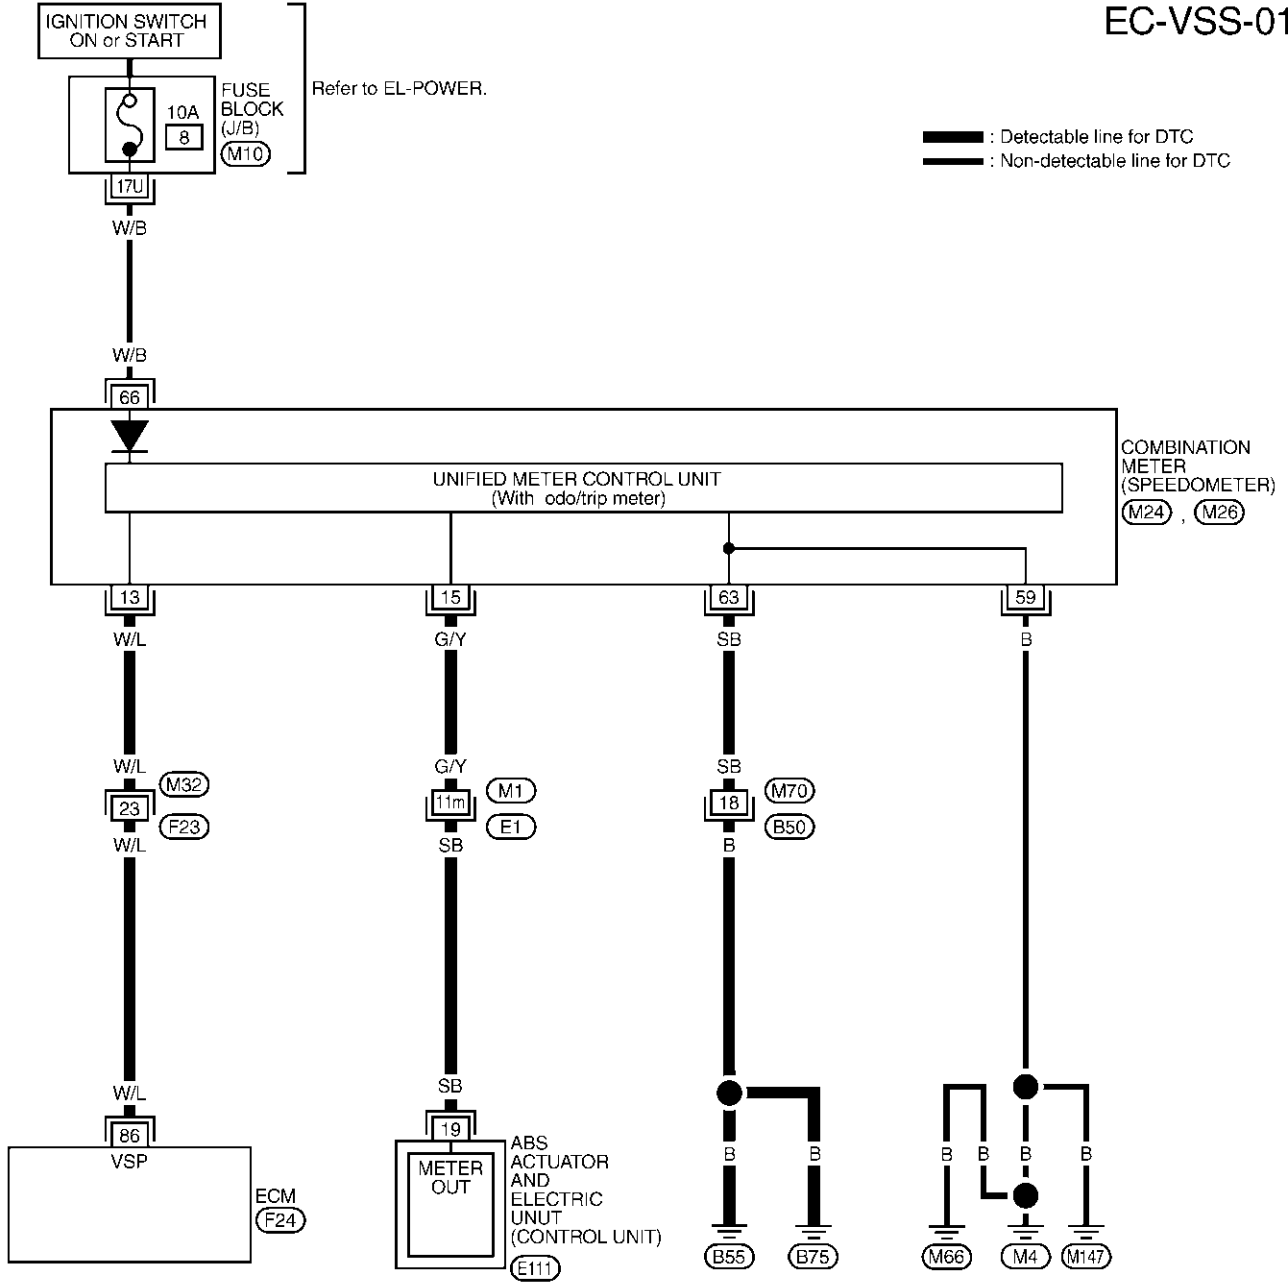

MEC239E

Diagnostic Procedure

NBEC1010

1	CHECK VEHICLE SPEED SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector and combination meter harness connector M24. 3. Check harness continuity between ECM terminal 86 and combination meter terminal 13. Refer to Wiring Diagram. Continuity should exist. 4. Also check harness for short to power. <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 3.
NG	▶	GO TO 2.

GI

MA

EM

LC

EC

2	DETECT MALFUNCTIONING PART	
Check the following. <ul style="list-style-type: none"> ● Harness connectors M32, F23 ● Harness for open or short between ECM and combination meter 		
▶		Repair open circuit or short to ground or short to power in harness or connectors.

FE

AT

3	CHECK COMBINATION METER FUNCTION	
Make sure that speedometer functions properly. <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 5.
NG	▶	GO TO 4.

TF

PD

AX

4	CHECK COMBINATION METER CIRCUIT FOR OPEN AND SHORT	
Check the following. <ul style="list-style-type: none"> ● Harness connectors M1, E1 ● Harness connectors M70, B50 ● Harness for open or short between combination meter and ABS actuator and electric unit (control unit) ● Harness for open between combination meter and ground <p style="text-align: center;">OK or NG</p>		
OK	▶	Check combination meter and ABS actuator and electric unit (control unit). Refer to EL section.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

SU

BR

ST

RS

5	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152. <p style="text-align: center;">▶ INSPECTION END</p>		

BT

HA

SC

EL

IDX

DTC P0505 ISC SYSTEM

Description


Description SYSTEM DESCRIPTION

NBEC1011

NBEC1011S01

Sensor	Input Signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS)	Engine speed (POS signal)	Idle air control	IACV-AAC valve
Crankshaft position sensor (REF)	Engine speed (REF signal)		
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Ignition switch	Start signal		
Throttle position sensor	Throttle position		
Park/neutral position (PNP) switch	Park/neutral position		
Air conditioner switch	Air conditioner operation		
Power steering oil pressure switch	Power steering load signal		
Battery	Battery voltage		
Vehicle speed sensor	Vehicle speed		
Ambient air temperature switch	Ambient air temperature		
Intake air temperature sensor	Intake air temperature		
Absolute pressure sensor	Ambient barometric pressure		

This system automatically controls engine idle speed to a specified level. Idle speed is controlled through fine adjustment of the amount of air which by-passes the throttle valve via IACV-AAC valve. The IACV-AAC valve changes the opening of the air by-pass passage to control the amount of auxiliary air. This valve is actuated by a step motor built into the valve, which moves the valve in the axial direction in steps corresponding to the ECM output signals. One step of IACV-AAC valve movement causes the respective opening of the air by-pass passage. (i.e. when the step advances, the opening is enlarged.) The opening of the valve is varied to allow for optimum control of the engine idling speed. The crankshaft position sensor (POS) detects the actual engine speed and sends a signal to the ECM. The ECM then controls the step position of the IACV-AAC valve so that engine speed coincides with the target value memorized in ECM. The target engine speed is the lowest speed at which the engine can operate steadily. The optimum value stored in the ECM is determined by taking into consideration various engine conditions, such as during warm up, deceleration, and engine load (air conditioner, power steering and cooling fan operation).

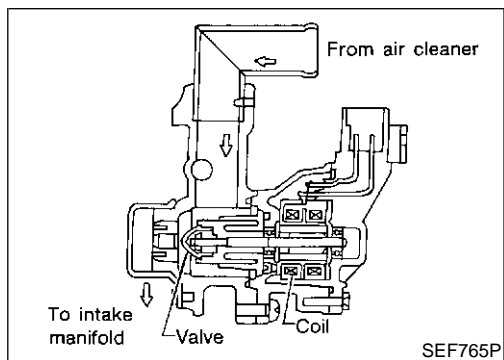

COMPONENT DESCRIPTION IACV-AAC Valve

NBEC1011S02

NBEC1011S0201

The IACV-AAC valve is operated by a step motor for centralized control of auxiliary air supply. This motor has four winding phases and is actuated by the output signals of ECM which turns ON and OFF two windings each in sequence. Each time the IACV-AAC valve opens or closes to change the auxiliary air quantity, the ECM sends a pulse signal to the step motor. When no change in the auxiliary air quantity is needed, the ECM does not issue the pulse signal. A certain voltage signal is issued so that the valve remains at that particular opening.

DTC P0505 ISC SYSTEM

CONSULT-II Reference Value in Data Monitor Mode

CONSULT-II Reference Value in Data Monitor Mode

NBEC1012

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
IACV-AAC/V	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load 	Idle	14 - 20 step
		2,000 rpm	—

ECM Terminals and Reference Value

NBEC1013

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
6 7 8 17	PU/R SB Y GY/L	IACV-AAC valve	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	0.1 - 14V

On Board Diagnosis Logic

NBEC1014

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0505 0505	Idle speed control system circuit	The IACV-AAC valve does not operate properly	<ul style="list-style-type: none"> ● Harness or connectors (The IACV-AAC valve circuit is open.) ● IACV-AAC valve

DTC Confirmation Procedure

NBEC1015

NOTE:

- If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.
- If the target idle speed is out of the specified value, perform "Idle Air Volume Learning", Idle Air Volume Learning, before conducting "DTC Confirmation Procedure". For the target idle speed, refer to the "Service Data and Specifications (SDS)", EC-721.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10.5V with ignition switch "ON".

DTC P0505 ISC SYSTEM

DTC Confirmation Procedure (Cont'd)

2	DATA MONITOR	
	MONITOR	NO DTC
	ENG SPEED	XXX rpm

SEF058Y

WITH CONSULT-II

NBEC1015S01

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 10 seconds.
- 3) Perform "Idle Air Volume Learning" (see EC-69).
- 4) Turn ignition switch "OFF" and wait at least 10 seconds.
- 5) Turn ignition switch "ON".
- 6) Select "DATA MONITOR" mode with CONSULT-II.
- 7) Start engine and let it idle.
- 8) Keep engine speed at 2,500 rpm for three seconds, then let it idle for three seconds.
Do not rev engine to more than 3,000 rpm.
- 9) Perform step 4 once more.
- 10) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-446.

WITH GST

NBEC1015S02

Follow the procedure "With CONSULT-II" above.

Wiring Diagram

NBEC1016

EC-AAC/V-01

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS




BT

HA

SC

EL

IDX

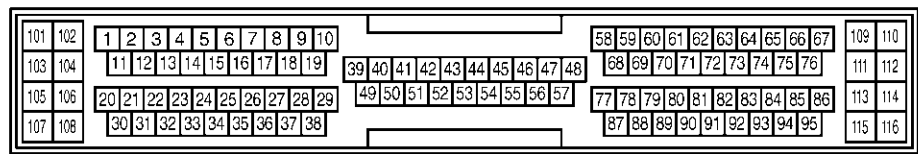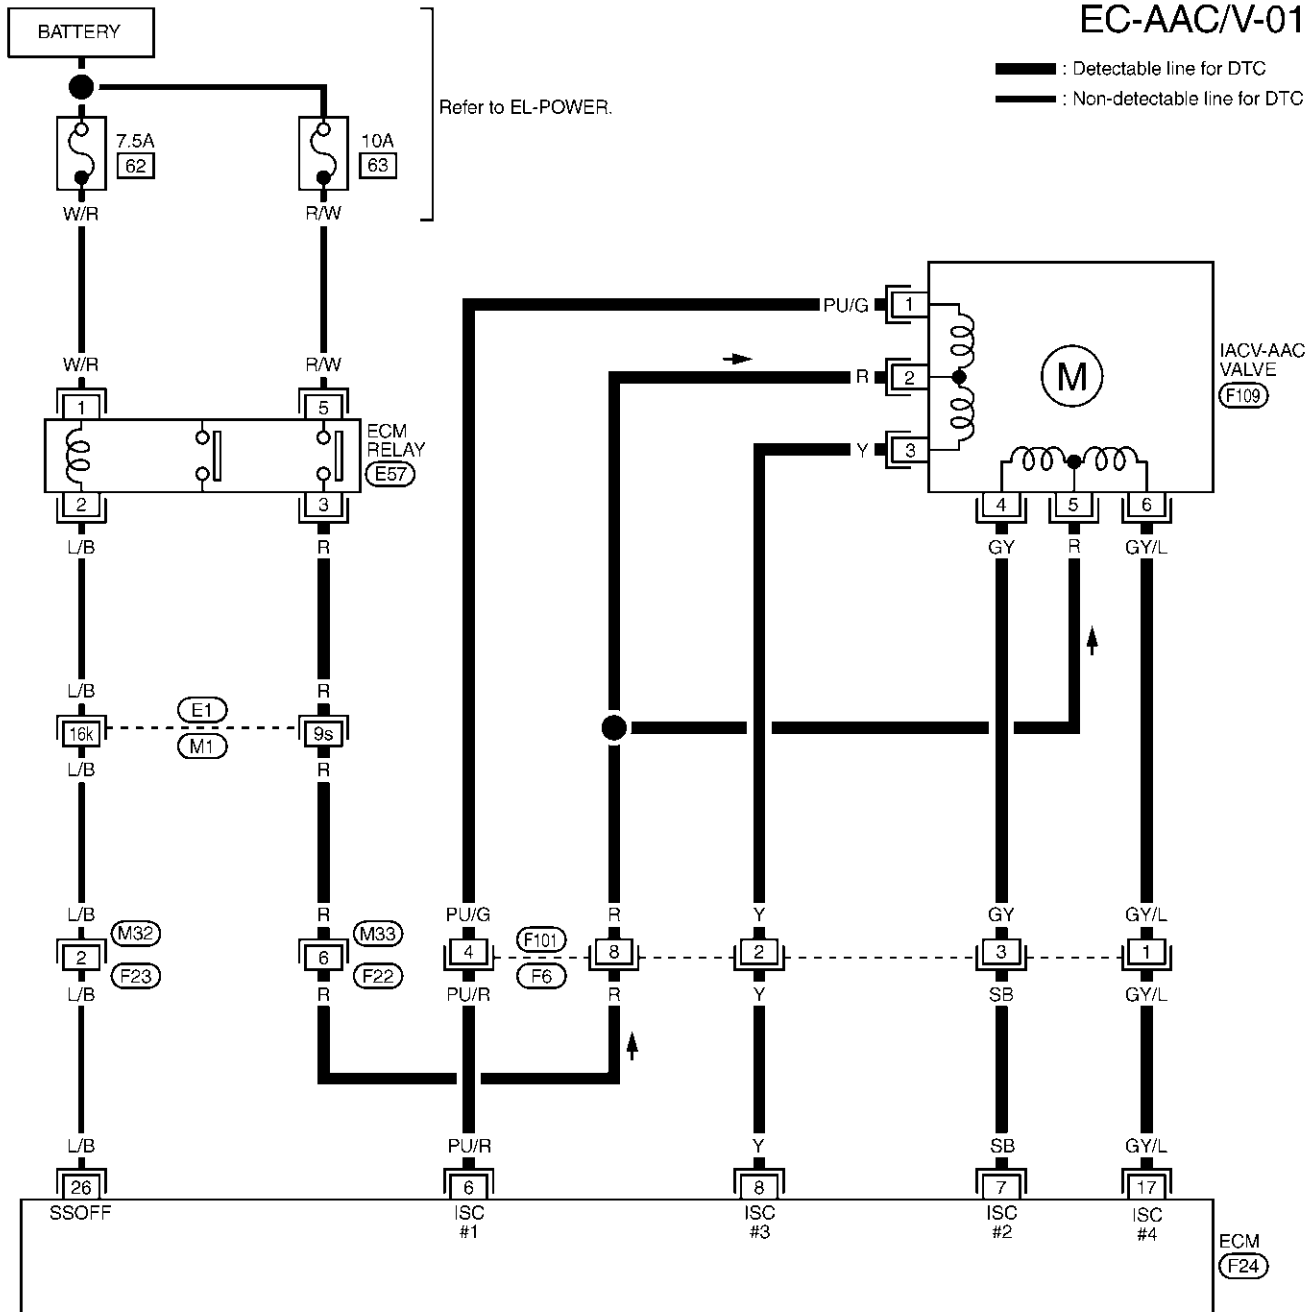

REFER TO THE FOLLOWING.
 (E1) -SUPER
 MULTIPLE JUNCTION (SMJ)





DTC P0505 ISC SYSTEM

Diagnostic Procedure

Diagnostic Procedure

NBEC1017

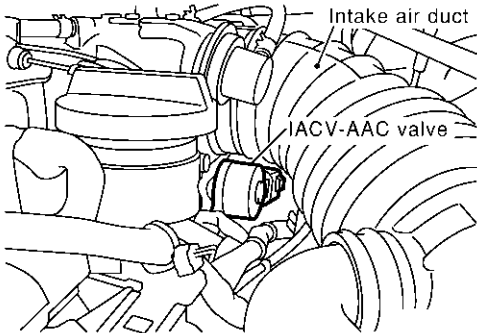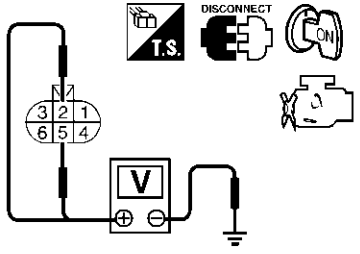1	CHECK IACV-AAC VALVE POWER SUPPLY CIRCUIT
<p>1. Stop engine. 2. Disconnect IACV-AAC valve harness connector.</p> <div style="text-align: center;">  <p>Intake air duct IACV-AAC valve</p> </div> <p style="text-align: right;">SEF994Y</p> <p>3. Turn ignition switch "ON". 4. Check voltage between IACV-AAC valve terminals 2, 5 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p>Voltage: Battery voltage</p> </div> <p style="text-align: right;">SEF343X</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 3.
NG	▶ GO TO 2.

2	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E1, M1 ● Harness connectors M33, F22 ● Harness connectors F6, F101 ● Harness for open or short between IACV-AAC valve and ECM relay 	
▶	Repair harness or connectors.

DTC P0505 ISC SYSTEM



Diagnostic Procedure (Cont'd)

3	CHECK IACV-AAC VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT											
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminals and IACV-AAC valve terminals as follows. Refer to Wiring Diagram.</p> <table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">ECM terminal</th> <th style="text-align: center;">IACV-AAC valve terminal</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">6</td> <td style="text-align: center;">1</td> </tr> <tr> <td style="text-align: center;">7</td> <td style="text-align: center;">4</td> </tr> <tr> <td style="text-align: center;">8</td> <td style="text-align: center;">3</td> </tr> <tr> <td style="text-align: center;">17</td> <td style="text-align: center;">6</td> </tr> </tbody> </table> <p style="text-align: right; margin-right: 20px;">MTBL0354</p> <p style="color: blue; margin-left: 20px;">Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>			ECM terminal	IACV-AAC valve terminal	6	1	7	4	8	3	17	6
ECM terminal	IACV-AAC valve terminal											
6	1											
7	4											
8	3											
17	6											
OK	▶	GO TO 5.										
NG	▶	GO TO 4.										

GI
MA
EM
LC
EC

4	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors F101, F6 ● Harness for open or short between IACV-AAC valve and ECM 		
▶		Repair harness connectors.

AT
TF
PD

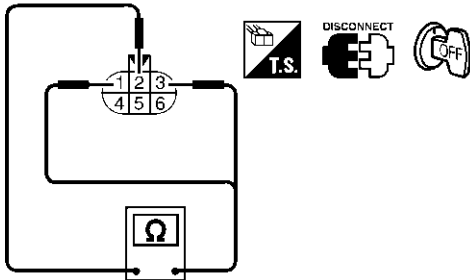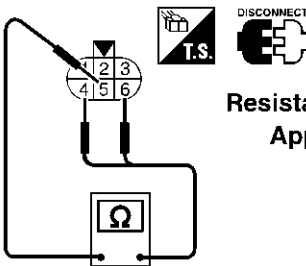
5	CHECK IACV-AAC VALVE-I	
<p>1. Disconnect IACV-AAC valve harness connector. 2. Check resistance between IACV-AAC valve terminal 2 and terminals 1, 3, terminal 5 and terminals 4, 6.</p> <div style="display: flex; align-items: center; justify-content: space-around;"> <div style="text-align: center;">  </div> <div style="text-align: center;">  </div> <div style="text-align: center;"> <p>Resistance: Approximately 20 - 24Ω [at 20°C (68°F)]</p> </div> </div> <p style="text-align: right; margin-right: 20px;">SEF344XA</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 6.
NG	▶	Replace IACV-AAC valve assembly.

AX
SU
BR
ST
RS
BT
HA

SC
EL
IDX

DTC P0505 ISC SYSTEM

Diagnostic Procedure (Cont'd)

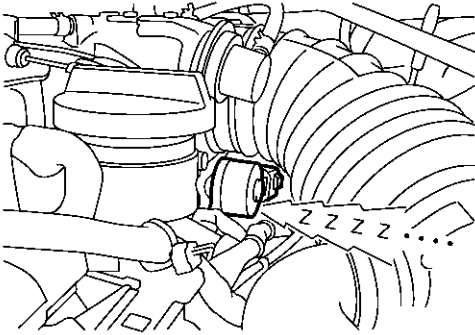6	CHECK IACV-AAC VALVE-II	
<ol style="list-style-type: none"> 1. Reconnect IACV-AAC valve harness connector and ECM harness connector. 2. Turn ignition switch "ON" and "OFF", and ensure the IACV-AAC valve makes operating sound according to the ignition switch position. 		
		
SEF997Y		
OK or NG		
OK	▶	GO TO 8.
NG	▶	GO TO 7.

7	REPLACE IACV-AAC VALVE	
<ol style="list-style-type: none"> 1. Replace IACV-AAC valve assembly. 2. Perform "Idle Air Volume Learning", EC-69. <p style="text-align: center; color: blue;">Is "Idle Air Volume Learning" carried out successfully?</p> <p style="text-align: center;">Yes or No</p>		
Yes	▶	INSPECTION END
No	▶	Follow the construction of "Idle Air Volume Learning".

8	CHECK TARGET IDLE SPEED	
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Reconnect all harness connectors and vacuum hoses. 3. Start engine and warm it up to normal operating temperature. 4. Also warm up transmission to normal operating temperature. <ul style="list-style-type: none"> ● For models with CONSULT-II, drive vehicle until "FLUID TEMP SE" in "DATA MONITOR" mode of "A/T" system indicates less than 0.9V. ● For models without CONSULT-II, drive vehicle for 10 minutes. 5. Stop vehicle with engine running. 6. Check target idle speed. <p style="text-align: center; color: blue;">750±50 rpm (in "P" or "N" position)</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 9.
NG	▶	Perform "Idle Air Volume Learning", EC-69.

9	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.		
		▶ INSPECTION END

Description SYSTEM DESCRIPTION

NBEC0787

NBEC0787S01

Sensor	Input Signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS)	Engine speed (POS signal)	Idle air control	IACV-AAC valve
Crankshaft position sensor (REF)	Engine speed (REF signal)		
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Ignition switch	Start signal		
Throttle position sensor	Throttle position		
Park/neutral position (PNP) switch	Park/neutral position		
Air conditioner switch	Air conditioner operation		
Power steering oil pressure switch	Power steering load signal		
Battery	Battery voltage		
Vehicle speed sensor	Vehicle speed		
Ambient air temperature switch	Ambient air temperature		
Intake air temperature sensor	Intake air temperature		
Absolute pressure sensor	Ambient barometric pressure		

GI

MA

EM

LC

EC

FE

AT

TF

PD

This system automatically controls engine idle speed to a specified level. Idle speed is controlled through fine adjustment of the amount of air which by-passes the throttle valve via IACV-AAC valve. The IACV-AAC valve changes the opening of the air by-pass passage to control the amount of auxiliary air. This valve is actuated by a step motor built into the valve, which moves the valve in the axial direction in steps corresponding to the ECM output signals. One step of IACV-AAC valve movement causes the respective opening of the air by-pass passage. (i.e. when the step advances, the opening is enlarged.) The opening of the valve is varied to allow for optimum control of the engine idling speed. The crankshaft position sensor (POS) detects the actual engine speed and sends a signal to the ECM. The ECM then controls the step position of the IACV-AAC valve so that engine speed coincides with the target value memorized in ECM. The target engine speed is the lowest speed at which the engine can operate steadily. The optimum value stored in the ECM is determined by taking into consideration various engine conditions, such as during warm up, deceleration, and engine load (air conditioner, power steering and cooling fan operation).

AX

SU

BR

ST

RS

BT

HA

COMPONENT DESCRIPTION IACV-AAC Valve

NBEC0787S02


NBEC0787S0201

The IACV-AAC valve is operated by a step motor for centralized control of auxiliary air supply. This motor has four winding phases and is actuated by the output signals of ECM which turns ON and OFF two windings each in sequence. Each time the IACV-AAC valve opens or closes to change the auxiliary air quantity, the ECM sends a pulse signal to the step motor. When no change in the auxiliary air quantity is needed, the ECM does not issue the pulse signal. A certain voltage signal is issued so that the valve remains at that particular opening.

SC

EL

IDX

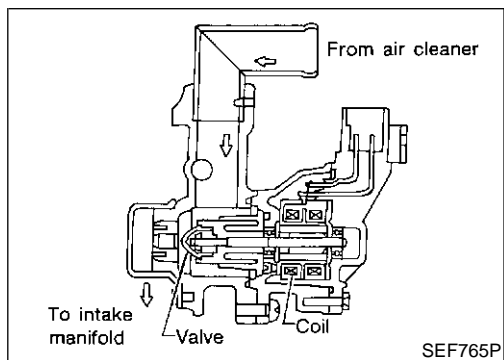

DTC P0506 ISC SYSTEM

CONSULT-II Reference Value in Data Monitor Mode

CONSULT-II Reference Value in Data Monitor Mode

NBEC0788

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
IACV-AAC/V	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load 	Idle	14 - 20 step
		2,000 rpm	—

ECM Terminals and Reference Value

NBEC0789

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
6 7 8 17	PU/R SB Y GY/L	IACV-AAC valve	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	0.1 - 14V

On Board Diagnosis Logic

NBEC0790

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0506 0506	Idle speed control system RPM lower than expected	The idle speed is less than the target idle speed by 100 rpm or more.	<ul style="list-style-type: none"> ● Harness or connectors (The IACV-AAC valve circuit is open or shorted.) ● IACV-AAC valve ● Air control valve (Power steering)

DTC Confirmation Procedure

NBEC0792

NOTE:

- If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.
- If the target idle speed is out of the specified value, perform "Idle Air Volume Learning", Idle Air Volume Learning, before conducting "DTC Confirmation Procedure". For the target idle speed, refer to the "Service Data and Specifications (SDS)", EC-721.

TESTING CONDITION:

- Before performing the following procedure, confirm that battery voltage is more than 11V at idle.
- Always perform the test at a temperature above -10°C (14°F).

DTC P0506 ISC SYSTEM

DTC Confirmation Procedure (Cont'd)

4	DATA MONITOR	
	MONITOR	NO DTC
	ENG SPEED	XXX rpm
	COOLAN TEMP/S	XXX °C

SEF174Y

WITH CONSULT-II

NBEC0792S03

- 1) Open engine hood.
- 2) Start engine and warm it up to normal operating temperature.
- 3) Turn ignition switch "OFF" and wait at least 10 seconds.
- 4) Perform "Idle Air Volume Learning (see EC-69).
- 5) Turn ignition switch "OFF" and wait at least 10 seconds.
- 6) Turn ignition switch "ON" again and select "DATA MONITOR" mode with CONSULT-II
- 7) Start engine and run it for at least 1 minute at idle speed.
- 8) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-453.

GI

MA

EM

LC

WITH GST

NBEC0792S04

Follow the procedure "With CONSULT-II" above.

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0506 ISC SYSTEM



Wiring Diagram

Wiring Diagram

NBEC0793

EC-AAC/V-01

— : Detectable line for DTC
— : Non-detectable line for DTC

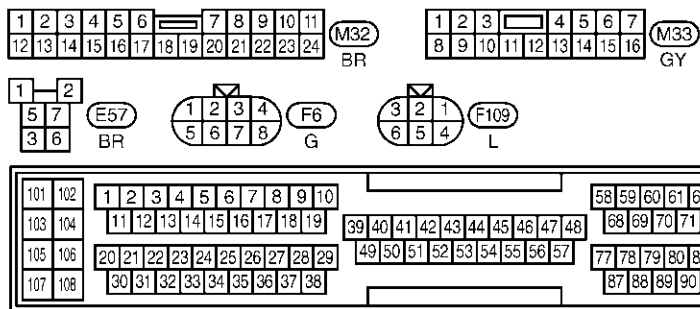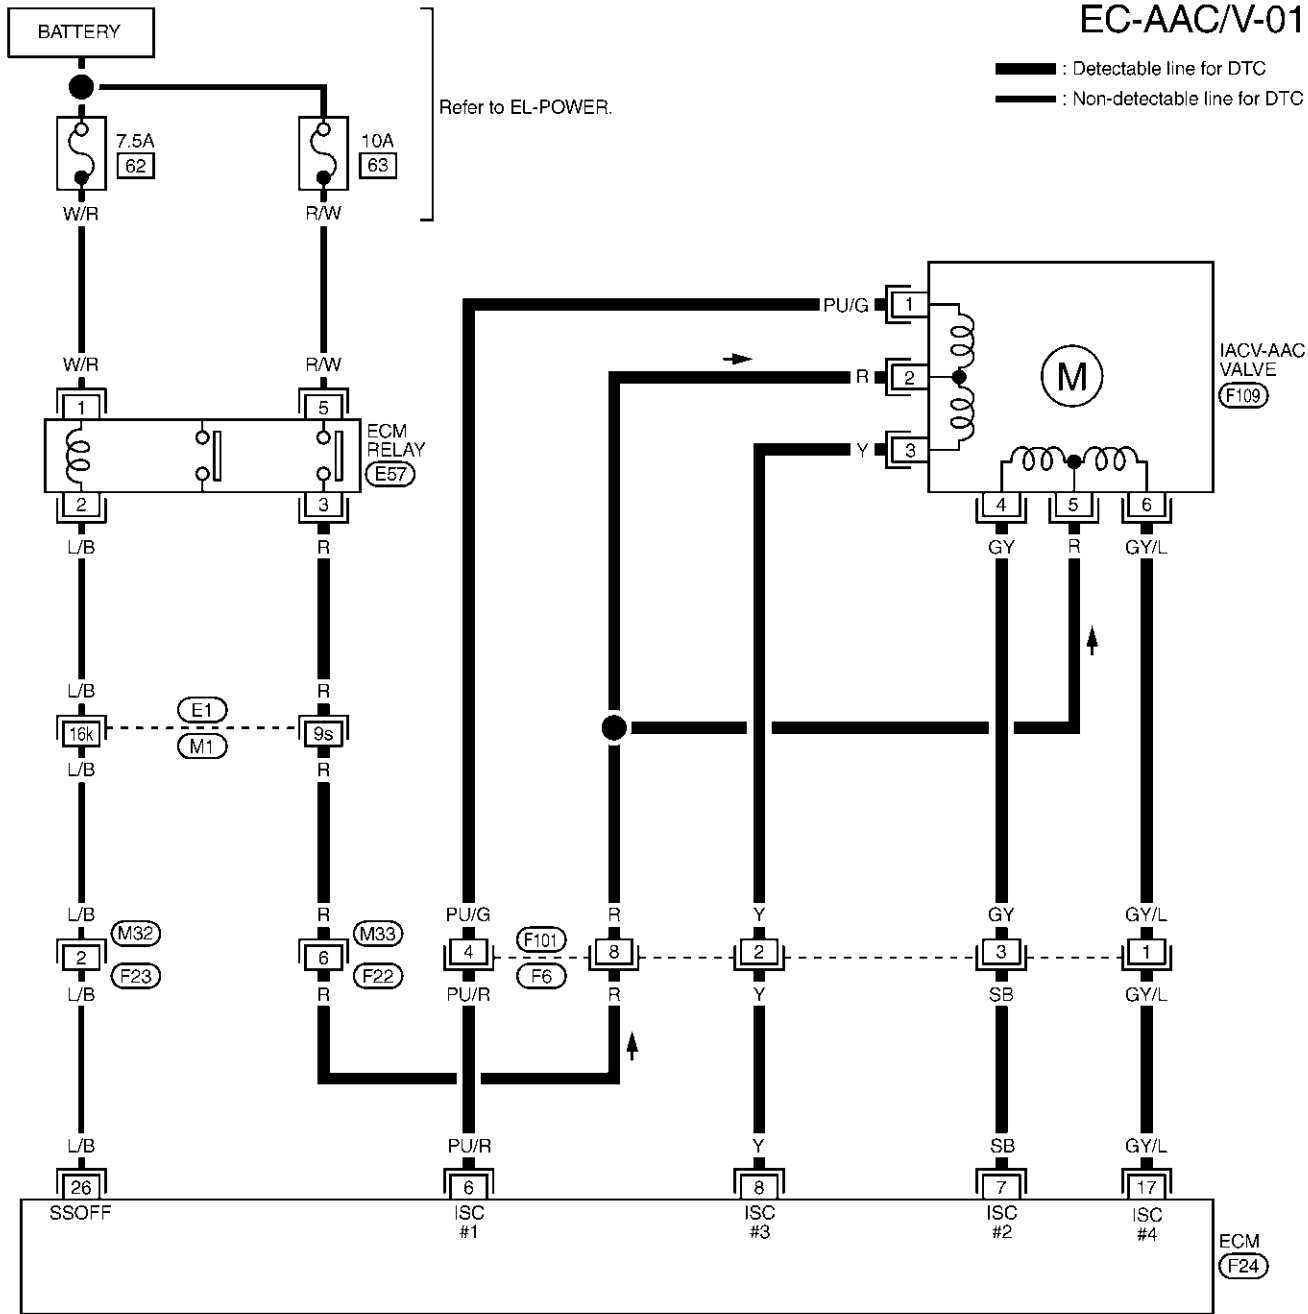



REFER TO THE FOLLOWING.
 (E1) -SUPER
 MULTIPLE JUNCTION (SMJ)



MEC240E

Diagnostic Procedure

NBEC0794

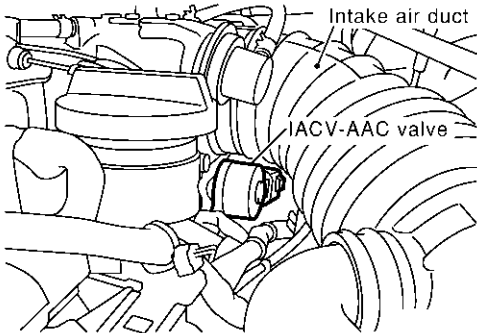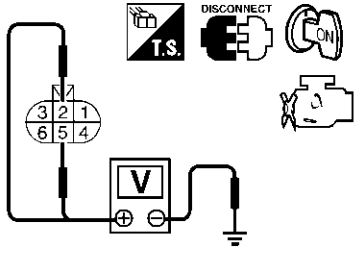1	CHECK IACV-AAC VALVE POWER SUPPLY CIRCUIT	<p>1. Stop engine. 2. Disconnect IACV-AAC valve harness connector.</p>  <p>3. Turn ignition switch "ON". 4. Check voltage between IACV-AAC valve terminals 2, 5 and ground with CONSULT-II or tester.</p>  <p style="text-align: right;">Voltage: Battery voltage</p> <p style="text-align: right;">OK or NG</p>	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p>EC</p> <p>FE</p> <p>AT</p> <p>TF</p> <p>PD</p> <p>AX</p> <p>SU</p>	
	OK	▶	GO TO 3.	
	NG	▶	GO TO 2.	


2	DETECT MALFUNCTIONING PART	<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E1, M1 ● Harness connectors M33, F22 ● Harness connectors F6, F101 ● Harness for open or short between IACV-AAC valve and ECM relay <p style="text-align: right;">▶ Repair harness or connectors.</p>	<p>ST</p> <p>RS</p> <p>BT</p> <p>HA</p> <p>SC</p> <p>EL</p> <p>IDX</p>
----------	-----------------------------------	---	--


DTC P0506 ISC SYSTEM

Diagnostic Procedure (Cont'd)

3	CHECK IACV-AAC VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT											
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminals and IACV-AAC valve terminals as follows. Refer to Wiring Diagram.</p>												
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="padding: 5px;">ECM terminal</th> <th style="padding: 5px;">IACV-AAC valve terminal</th> </tr> </thead> <tbody> <tr> <td style="text-align: center; padding: 5px;">6</td> <td style="text-align: center; padding: 5px;">1</td> </tr> <tr> <td style="text-align: center; padding: 5px;">7</td> <td style="text-align: center; padding: 5px;">4</td> </tr> <tr> <td style="text-align: center; padding: 5px;">8</td> <td style="text-align: center; padding: 5px;">3</td> </tr> <tr> <td style="text-align: center; padding: 5px;">17</td> <td style="text-align: center; padding: 5px;">6</td> </tr> </tbody> </table>			ECM terminal	IACV-AAC valve terminal	6	1	7	4	8	3	17	6
ECM terminal	IACV-AAC valve terminal											
6	1											
7	4											
8	3											
17	6											
MTBL0354												
<p style="text-align: center;">Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>												
OK	▶	GO TO 5.										
NG	▶	GO TO 4.										

4	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors F101, F6 ● Harness for open or short between IACV-AAC valve and ECM 		
Repair harness connectors.		


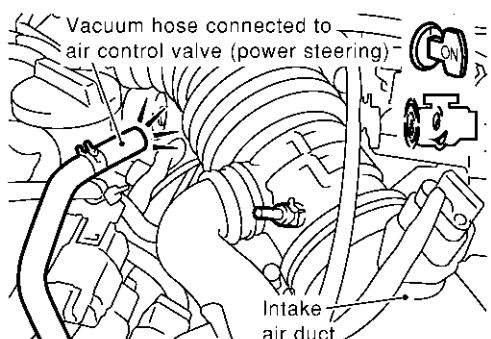
5	CHECK AIR CONTROL VALVE (POWER STEERING) OPERATION-I	
<p>1. Reconnect ECM harness connector and IACV-AAC valve harness connector. 2. Disconnect vacuum hose connected to air control valve (Power steering) at intake air duct. 3. Start engine and let it idle. 4. Check vacuum hose for vacuum existence.</p>		
		
SEF995Y		
<p style="text-align: center;">Vacuum slightly exists or does not exist.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 6.
NG	▶	Replace air control valve (Power steering).

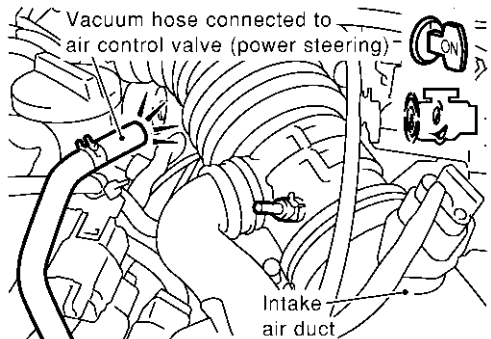6	CHECK AIR CONTROL VALVE (POWER STEERING) OPERATION-II	
<p>Check vacuum hose for vacuum existence when steering wheel is turned.</p> <div style="display: flex; justify-content: space-between; align-items: center;">  <div style="text-align: right;"> <p>SEF995Y</p> </div> </div> <p>Vacuum should exist.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 9.
NG	▶	GO TO 7.

GI
MA
EM
LC
EC

FE

AT

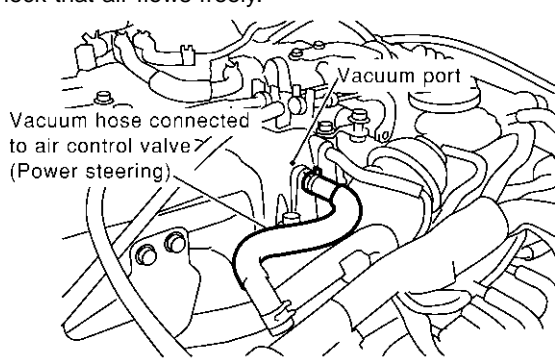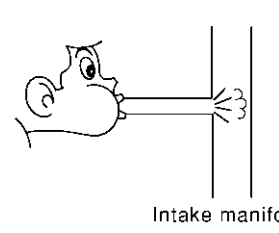7	CHECK VACUUM PORT	
<ol style="list-style-type: none"> 1. Stop engine. 2. Disconnect vacuum hose connected to air control valve (Power steering) at vacuum port. 3. Blow air into vacuum port. 4. Check that air flows freely. <div style="display: flex; justify-content: space-between; align-items: center;">  <div style="text-align: center;">  <p>Intake manifold</p> </div> <div style="text-align: right;"> <p>SEF996Y</p> </div> </div> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 8.
NG	▶	Repair or clean vacuum port.

TF

PD

AX

SU

BR

ST

RS

BT

HA


SC


EL


IDX

DTC P0506 ISC SYSTEM

Diagnostic Procedure (Cont'd)

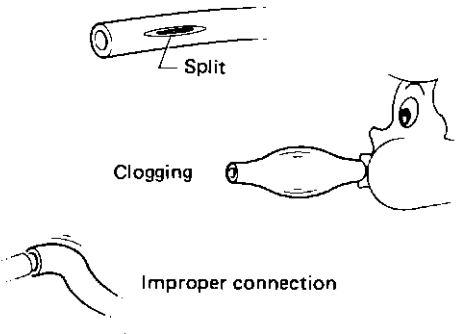8	CHECK VACUUM HOSES AND TUBES	<ol style="list-style-type: none"> 1. Disconnect vacuum hoses between air control valve (Power steering) and vacuum port, air control valve (Power steering) and intake air duct. 2. Check the hoses and tubes for crack, clogging, improper connection or disconnection.
		
		SEF109L
OK or NG		
OK	▶	GO TO 9.
NG	▶	Repair hoses or tubes.

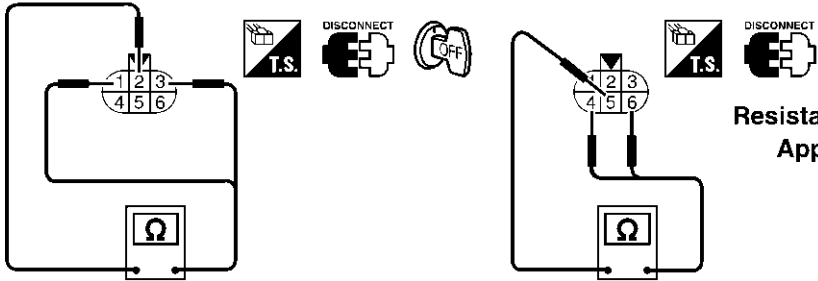9	CHECK IACV-AAC VALVE-I	<ol style="list-style-type: none"> 1. Disconnect IACV-AAC valve harness connector. 2. Check resistance between IACV-AAC valve terminal 2 and terminals 1, 3, terminal 5 and terminals 4, 6.
		
		Resistance: Approximately 20 - 24Ω [at 20°C (68°F)]
		SEF344XA
OK or NG		
OK	▶	GO TO 10.
NG	▶	Replace IACV-AAC valve assembly.

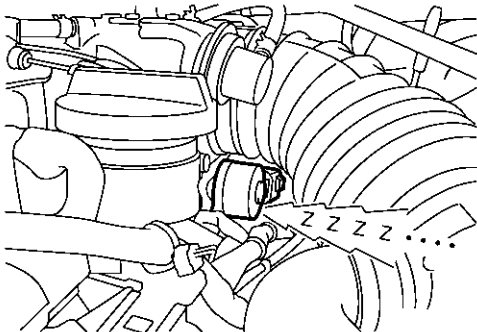10	CHECK IACV-AAC VALVE-II	
<p>1. Reconnect IACV-AAC valve harness connector and ECM harness connector.</p> <p>2. Turn ignition switch "ON" and "OFF", and ensure the IACV-AAC valve makes operating sound according to the ignition switch position.</p>		
		
SEF997Y		
OK or NG		
OK	▶	GO TO 12.
NG	▶	GO TO 11.

GI
 MA
 EM
 LC
EC

FE
 AT

11	REPLACE IACV-AAC VALVE	
<p>1. Replace IACV-AAC valve assembly.</p> <p>2. Perform "Idle Air Volume Learning", EC-69.</p> <p style="color: blue;">Is "Idle Air Volume Learning" carried out successfully?</p>		
Yes or No		
Yes	▶	INSPECTION END
No	▶	Follow the construction of "Idle Air Volume Learning".

TF
 PD
 AX
 SU

12	CHECK TARGET IDLE SPEED	
<p>1. Turn ignition switch "OFF".</p> <p>2. Reconnect all harness connectors and vacuum hoses.</p> <p>3. Start engine and warm it up to normal operating temperature.</p> <p>4. Also warm up transmission to normal operating temperature.</p> <ul style="list-style-type: none"> ● For models with CONSULT-II, drive vehicle until "FLUID TEMP SE" in "DATA MONITOR" mode of "A/T" system indicates less than 0.9V. ● For models without CONSULT-II, drive vehicle for 10 minutes. <p>5. Stop vehicle with engine running.</p> <p>6. Check target idle speed.</p> <p style="color: blue;">750±50 rpm (in "P" or "N" position)</p>		
OK or NG		
OK	▶	GO TO 13.
NG	▶	Perform "Idle Air Volume Learning", EC-69.

BR
 ST
 RS
 BT
 HA

13	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.		
	▶	INSPECTION END

SC
 EL
 IDX

DTC P0507 ISC SYSTEM

Description


Description SYSTEM DESCRIPTION

NBEC0795

NBEC0795S01

Sensor	Input Signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS)	Engine speed (POS signal)	Idle air control	IACV-AAC valve
Crankshaft position sensor (REF)	Engine speed (REF signal)		
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Ignition switch	Start signal		
Throttle position sensor	Throttle position		
Park/neutral position (PNP) switch	Park/neutral position		
Air conditioner switch	Air conditioner operation		
Power steering oil pressure switch	Power steering load signal		
Battery	Battery voltage		
Vehicle speed sensor	Vehicle speed		
Ambient air temperature switch	Ambient air temperature		
Intake air temperature sensor	Intake air temperature		
Absolute pressure sensor	Ambient barometric pressure		

This system automatically controls engine idle speed to a specified level. Idle speed is controlled through fine adjustment of the amount of air which by-passes the throttle valve via IACV-AAC valve. The IACV-AAC valve changes the opening of the air by-pass passage to control the amount of auxiliary air. This valve is actuated by a step motor built into the valve, which moves the valve in the axial direction in steps corresponding to the ECM output signals. One step of IACV-AAC valve movement causes the respective opening of the air by-pass passage. (i.e. when the step advances, the opening is enlarged.) The opening of the valve is varied to allow for optimum control of the engine idling speed. The crankshaft position sensor (POS) detects the actual engine speed and sends a signal to the ECM. The ECM then controls the step position of the IACV-AAC valve so that engine speed coincides with the target value memorized in ECM. The target engine speed is the lowest speed at which the engine can operate steadily. The optimum value stored in the ECM is determined by taking into consideration various engine conditions, such as during warm up, deceleration, and engine load (air conditioner, power steering and cooling fan operation).

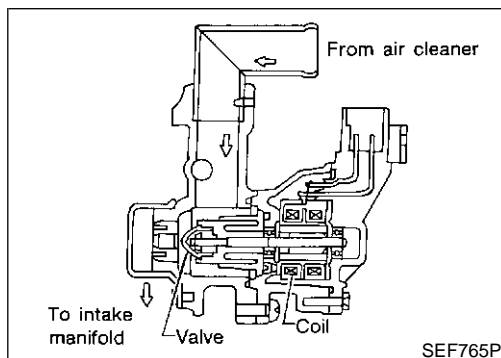

COMPONENT DESCRIPTION IACV-AAC Valve

NBEC0795S02

NBEC0795S0201

The IACV-AAC valve is operated by a step motor for centralized control of auxiliary air supply. This motor has four winding phases and is actuated by the output signals of ECM which turns ON and OFF two windings each in sequence. Each time the IACV-AAC valve opens or closes to change the auxiliary air quantity, the ECM sends a pulse signal to the step motor. When no change in the auxiliary air quantity is needed, the ECM does not issue the pulse signal. A certain voltage signal is issued so that the valve remains at that particular opening.

DTC P0507 ISC SYSTEM

CONSULT-II Reference Value in Data Monitor Mode

CONSULT-II Reference Value in Data Monitor Mode

NBEC0796

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
IACV-AAC/V	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load 	Idle	14 - 20 step
		2,000 rpm	—

ECM Terminals and Reference Value

NBEC0797

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
6 7 8 17	PU/R SB Y GY/L	IACV-AAC valve	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	0.1 - 14V

On Board Diagnosis Logic

NBEC0798

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0507 0507	Idle speed control system RPM higher than expected	The idle speed is more than the target idle speed by 200 rpm or more.	<ul style="list-style-type: none"> ● Harness or connectors (The IACV-AAC valve circuit is open or shorted.) ● IACV-AAC valve ● Air control valve (Power steering) ● Intake air leaks ● PCV system

DTC Confirmation Procedure

NBEC0800

NOTE:

- If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.
- **If the target idle speed is out of the specified value, perform "Idle Air Volume Learning", Idle Air Volume Learning, before conducting "DTC Confirmation Procedure". For the target idle speed, refer to the "Service Data and Specifications (SDS)", EC-721.**

TESTING CONDITION:

- Before performing the following procedure, confirm that battery voltage is more than 11V at idle.
- Always perform the test at a temperature above -10°C (14°F).

DTC P0507 ISC SYSTEM

DTC Confirmation Procedure (Cont'd)

4

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
COOLAN TEMP/S	XXX °C

SEF174Y

WITH CONSULT-II

NBEC0800S03

- 1) Open engine hood.
- 2) Start engine and warm it up to normal operating temperature.
- 3) Turn ignition switch "OFF" and wait at least 10 seconds.
- 4) Perform "Idle Air Volume Learning (see EC-69).
- 5) Turn ignition switch "OFF" and wait at least 10 seconds.
- 6) Turn ignition switch "ON" again and select "DATA MONITOR" mode with CONSULT-II
- 7) Start engine and run it for at least 1 minute at idle speed.
- 8) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-462.

WITH GST

NBEC0800S04

Follow the procedure "With CONSULT-II" above.

Wiring Diagram

NBEC0801

EC-AAC/V-01

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS




BT

HA

SC

EL

IDX

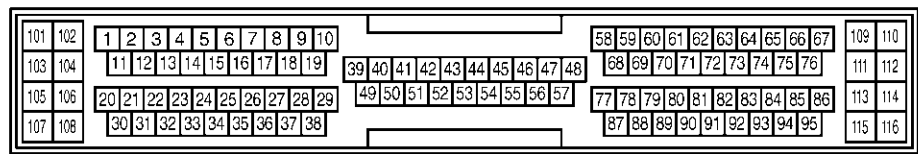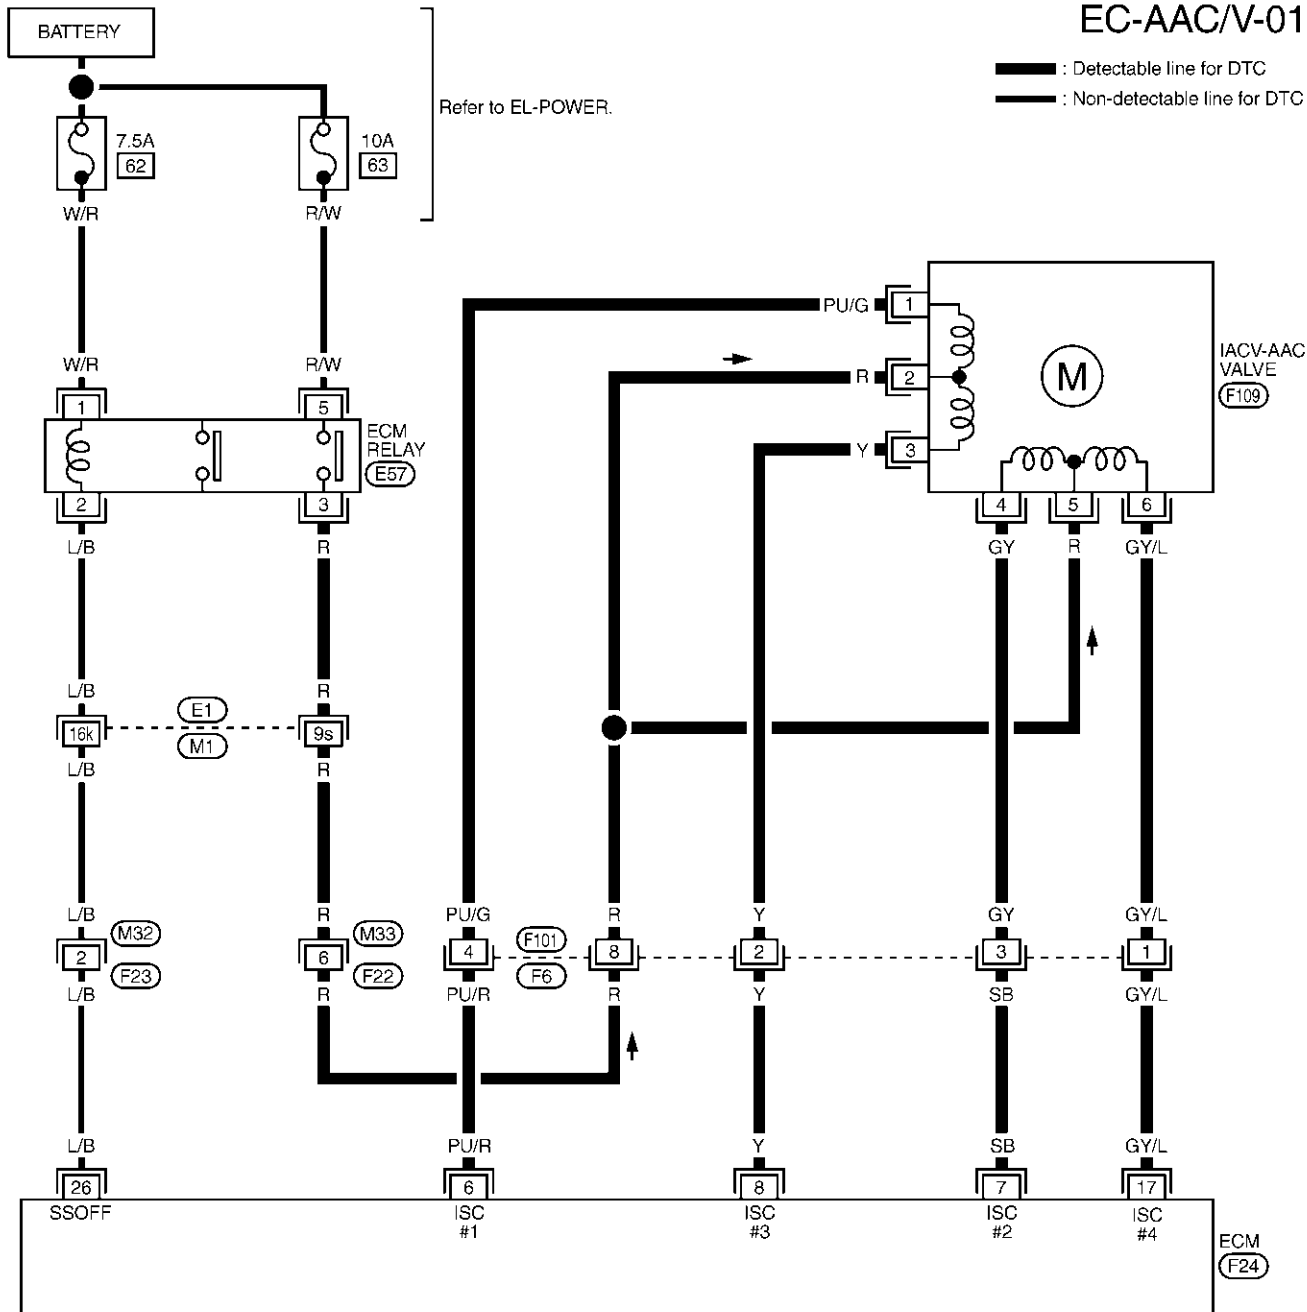

REFER TO THE FOLLOWING.
 (E1) -SUPER
 MULTIPLE JUNCTION (SMJ)





DTC P0507 ISC SYSTEM

Diagnostic Procedure

Diagnostic Procedure

NBEC0802

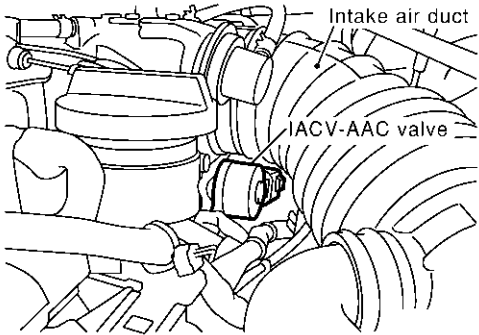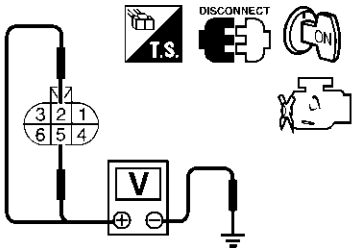1	CHECK IACV-AAC VALVE POWER SUPPLY CIRCUIT
<p>1. Stop engine. 2. Disconnect IACV-AAC valve harness connector.</p> <div style="text-align: center;">  <p>Intake air duct IACV-AAC valve</p> </div> <p>3. Turn ignition switch "ON". 4. Check voltage between IACV-AAC valve terminals 2, 5 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p>Voltage: Battery voltage</p> </div> <p style="text-align: right;">SEF994Y</p> <p style="text-align: right;">SEF343X</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 3.
NG	▶ GO TO 2.

2	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E1, M1 ● Harness connectors M33, F22 ● Harness connectors F6, F101 ● Harness for open or short between IACV-AAC valve and ECM relay 	
▶	Repair harness or connectors.

DTC P0507 ISC SYSTEM


Diagnostic Procedure (Cont'd)

3	CHECK IACV-AAC VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT											
<p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect ECM harness connector.</p> <p>3. Check harness continuity between ECM terminals and IACV-AAC valve terminals as follows. Refer to Wiring Diagram.</p>												
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="padding: 5px;">ECM terminal</th> <th style="padding: 5px;">IACV-AAC valve terminal</th> </tr> </thead> <tbody> <tr> <td style="text-align: center; padding: 5px;">6</td> <td style="text-align: center; padding: 5px;">1</td> </tr> <tr> <td style="text-align: center; padding: 5px;">7</td> <td style="text-align: center; padding: 5px;">4</td> </tr> <tr> <td style="text-align: center; padding: 5px;">8</td> <td style="text-align: center; padding: 5px;">3</td> </tr> <tr> <td style="text-align: center; padding: 5px;">17</td> <td style="text-align: center; padding: 5px;">6</td> </tr> </tbody> </table>			ECM terminal	IACV-AAC valve terminal	6	1	7	4	8	3	17	6
ECM terminal	IACV-AAC valve terminal											
6	1											
7	4											
8	3											
17	6											
MTBL0354												
<p>Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>												
OK	▶	GO TO 5.										
NG	▶	GO TO 4.										

GI
MA
EM
LC
EC

4	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors F101, F6 ● Harness for open or short between IACV-AAC valve and ECM 		
▶ Repair harness connectors.		


AT
TF
PD

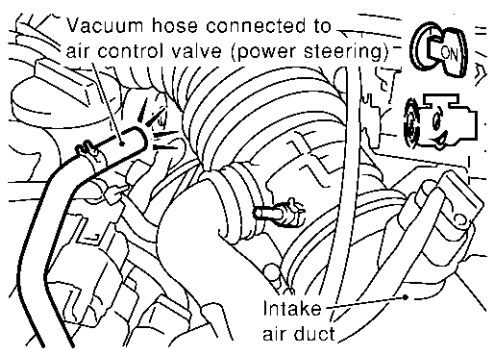5	CHECK AIR CONTROL VALVE (POWER STEERING) OPERATION-I	
<p>1. Reconnect ECM harness connector and IACV-AAC valve harness connector.</p> <p>2. Disconnect vacuum hose connected to air control valve (Power steering) at intake air duct.</p> <p>3. Start engine and let it idle.</p> <p>4. Check vacuum hose for vacuum existence.</p>		
		
SEF995Y		
<p>Vacuum slightly exists or does not exist.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 6.
NG	▶	Replace air control valve (Power steering).



AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P0507 ISC SYSTEM


Diagnostic Procedure (Cont'd)

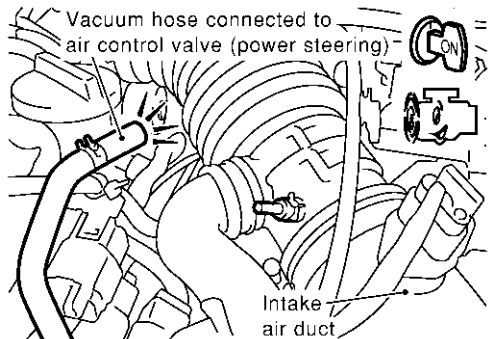
6	CHECK AIR CONTROL VALVE (POWER STEERING) OPERATION-II	
<p>Check vacuum hose for vacuum existence when steering wheel is turned.</p> <div style="display: flex; justify-content: space-around; align-items: center;">  </div> <p style="color: blue; margin-left: 20px;">Vacuum should exist.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 9.
NG	▶	GO TO 7.

SEF995Y

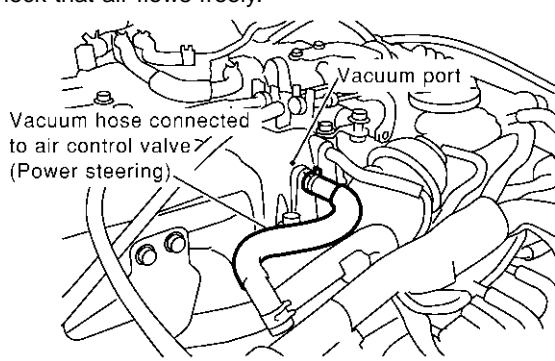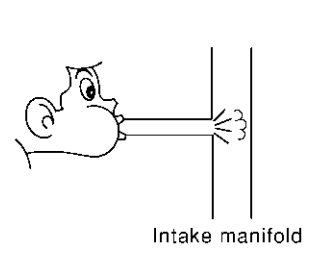7	CHECK VACUUM PORT	
<ol style="list-style-type: none"> 1. Stop engine. 2. Disconnect vacuum hose connected to air control valve (Power steering) at vacuum port. 3. Blow air into vacuum port. 4. Check that air flows freely. <div style="display: flex; justify-content: space-around; align-items: center;">   </div> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 8.
NG	▶	Repair or clean vacuum port.


SEF996Y

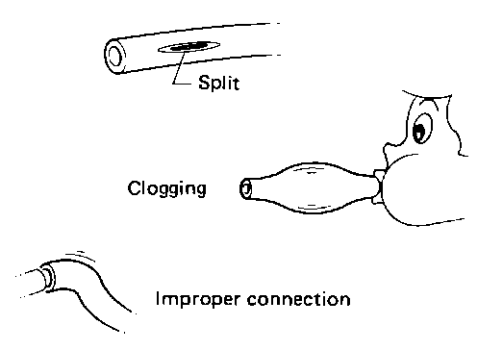8	CHECK VACUUM HOSES AND TUBES	<ol style="list-style-type: none"> 1. Disconnect vacuum hoses between air control valve (Power steering) and vacuum port, air control valve (Power steering) and intake air duct. 2. Check the hoses and tubes for crack, clogging, improper connection or disconnection. <div style="text-align: center; margin-top: 20px;">  <p style="margin-left: 100px;">Split</p> <p style="margin-left: 100px;">Clogging</p> <p style="margin-left: 100px;">Improper connection</p> </div> <p style="text-align: right; margin-right: 20px;">SEF109L</p> <p style="text-align: center; margin-top: 10px;">OK or NG</p>	GI MA EM LC EC FE AT	
OK		▶	GO TO 9.	
NG		▶	Repair hoses or tubes.	

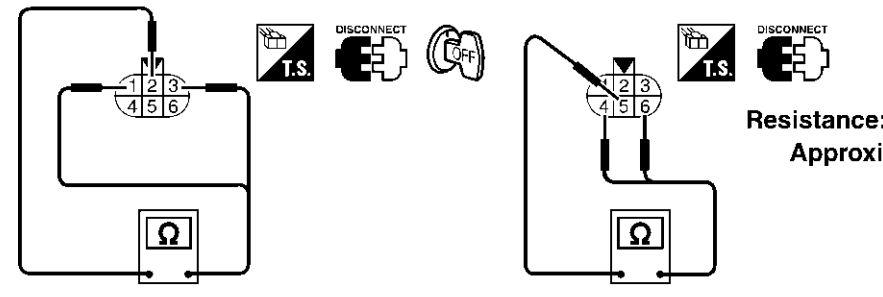9	CHECK IACV-AAC VALVE-I	<ol style="list-style-type: none"> 1. Disconnect IACV-AAC valve harness connector. 2. Check resistance between IACV-AAC valve terminal 2 and terminals 1, 3, terminal 5 and terminals 4, 6. <div style="text-align: center; margin-top: 20px;">  <p style="margin-left: 100px;">Resistance: Approximately 20 - 24Ω [at 20°C (68°F)]</p> </div> <p style="text-align: right; margin-right: 20px;">SEF344XA</p> <p style="text-align: center; margin-top: 10px;">OK or NG</p>	TF PD AX SU BR ST RS BT HA SC EL IDX	
OK		▶	GO TO 10.	
NG		▶	Replace IACV-AAC valve assembly.	

DTC P0507 ISC SYSTEM

Diagnostic Procedure (Cont'd)

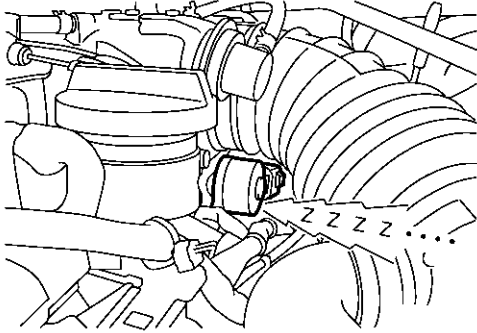10	CHECK IACV-AAC VALVE-II	
<ol style="list-style-type: none"> 1. Reconnect IACV-AAC valve harness connector and ECM harness connector. 2. Turn ignition switch "ON" and "OFF", and ensure the IACV-AAC valve makes operating sound according to the ignition switch position. 		
		
SEF997Y		
OK or NG		
OK	▶	GO TO 12.
NG	▶	GO TO 11.


11	REPLACE IACV-AAC VALVE	
<ol style="list-style-type: none"> 1. Replace IACV-AAC valve assembly. 2. Perform "Idle Air Volume Learning", EC-69. <p style="text-align: center; color: blue;">Is "Idle Air Volume Learning" carried out successfully?</p> <p style="text-align: center;">Yes or No</p>		
Yes	▶	INSPECTION END
No	▶	Follow the construction of "Idle Air Volume Learning".

12	CHECK TARGET IDLE SPEED	
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Reconnect all harness connectors and vacuum hoses. 3. Start engine and warm it up to normal operating temperature. 4. Also warm up transmission to normal operating temperature. <ul style="list-style-type: none"> ● For models with CONSULT-II, drive vehicle until "FLUID TEMP SE" in "DATA MONITOR" mode of "A/T" system indicates less than 0.9V. ● For models without CONSULT-II, drive vehicle for 10 minutes. 5. Stop vehicle with engine running. 6. Check target idle speed. <p style="text-align: center; color: blue;">750±50 rpm (in "P" or "N" position)</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 13.
NG	▶	Perform "Idle Air Volume Learning", EC-69.

13	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.		
		▶ INSPECTION END

DTC P0510 CTP SENSOR

Component Description

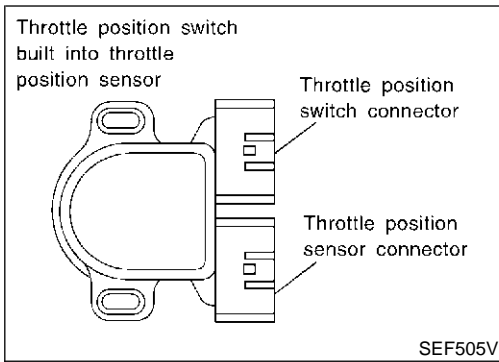

Component Description

NBEC1018

A closed throttle position switch and wide open throttle position switch are built into the throttle position sensor unit. The wide open throttle position switch is used only for A/T control. When the throttle valve is in the closed position, the closed throttle position switch sends a voltage signal to the ECM. The ECM only uses this signal to open or close the EVAP canister purge volume control solenoid valve when the throttle position sensor is malfunctioning.

GI
MA
EM
LC

CONSULT-II Reference Value in Data Monitor Mode

NBEC1019

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
CLSD THL/P SW	<ul style="list-style-type: none"> Engine: After warming up, idle the engine 	Throttle valve: Idle position
		Throttle valve: Slightly open

EC
FE
AT

ECM Terminals and Reference Value

NBEC1020

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
56	OR/L	Throttle position switch (Closed position)	[Engine is running] <ul style="list-style-type: none"> Accelerator pedal fully released 	BATTERY VOLTAGE (11 - 14V)
			[Engine is running] <ul style="list-style-type: none"> Accelerator pedal depressed 	Approximately 0V

TF
PD
AX
SU
BR

On Board Diagnosis Logic

NBEC1021

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0510 0510	Closed throttle position switch	Battery voltage from the closed throttle position switch is sent to ECM with the throttle valve opened.	<ul style="list-style-type: none"> Harness or connectors (The closed throttle position switch circuit is shorted.) Closed throttle position switch Throttle position sensor

ST
RS
BT
HA
SC
EL
IDX

DTC P0510 CTP SENSOR

DTC Confirmation Procedure

4	DATA MONITOR	
	MONITOR	NO DTC
	ENG SPEED	XXX rpm
	COOLAN TEMP/S	XXX °C
	CLSD THL/P SW	ON

SEF197Y

6	DATA MONITOR	
	MONITOR	NO DTC
	COOLAN TEMP/S	XXX °C
	VHCL SPEED SE	XXX km/h
	THRTL POS SEN	XXX V

SEF198Y

DTC Confirmation Procedure

NBEC1022

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

NBEC1022S01

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF", wait at least 10 seconds and then start engine.
- 3) Select "CLSD THL/P SW" in "DATA MONITOR" mode. If "CLSD THL/P SW" is not available, go to step 5.
- 4) Check the signal under the following conditions.

Condition	Signal indication
Throttle valve: Idle position	ON
Throttle valve: Slightly open	OFF


If the result is NG, go to "Diagnostic Procedure", EC-471.

If OK, go to following step.

- 5) Select "DATA MONITOR" mode with CONSULT-II.
- 6) Drive the vehicle for at least 5 consecutive seconds under the following condition.

THRTL POS SEN	More than 2.5V
VHCL SPEED SE	More than 5 km/h (3 MPH)
Selector lever	Suitable position
Driving location	Driving vehicle uphill (Increased engine load) will help maintain the driving conditions required for this test.

- 7) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-471.

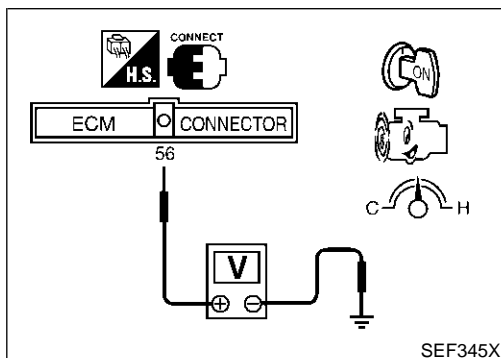

Overall Function Check

NBEC1023

Use this procedure to check the overall function of the closed throttle position switch circuit. During this check, a 1st trip DTC might not be confirmed.

WITHOUT CONSULT-II

NBEC1023S01

- 1) Start engine and warm it up to normal operating temperature.
- 2) Check the voltage between ECM terminal 56 (Closed throttle position switch signal) and ground under the following conditions.

At idle: Battery voltage

DTC P0510 CTP SENSOR

Overall Function Check (Cont'd)

At 2,000 rpm: Approximately 0V

3) If NG, go to "Diagnostic Procedure", EC-471.

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P0510 CTP SENSOR


Wiring Diagram

Wiring Diagram

=NBEC1024

EC-TP/SW-01

: Detectable line for DTC
 : Non-detectable line for DTC

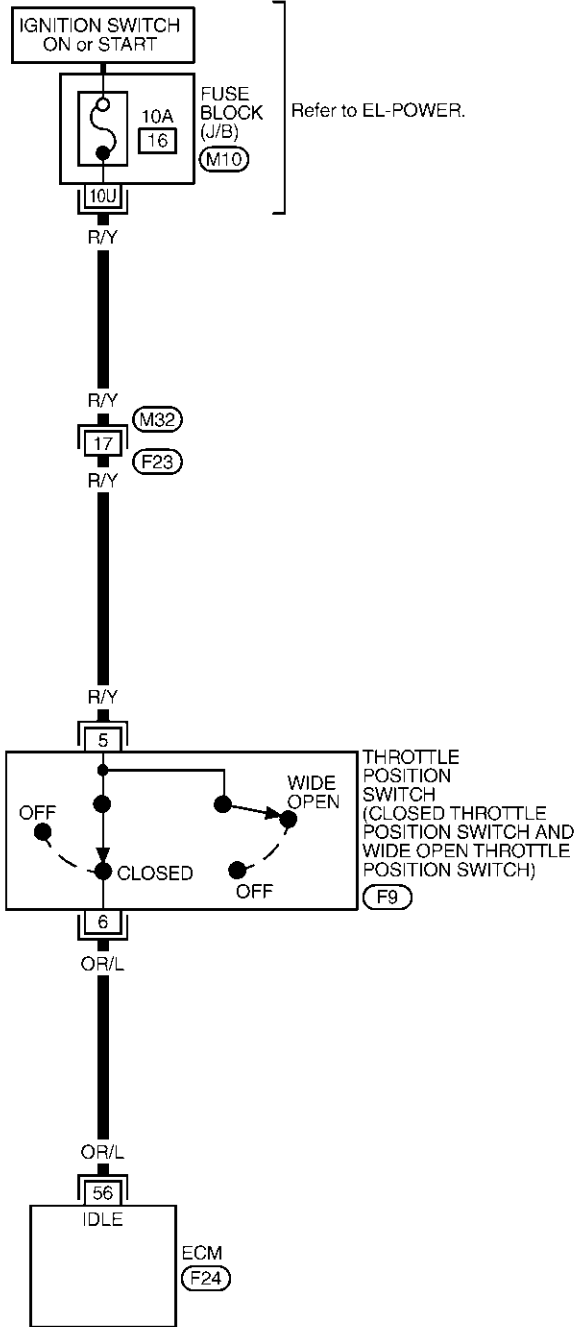

1	2	3	4	5	6	7	8	9	10	11		
12	13	14	15	16	17	18	19	20	21	22	23	24

M32 BR

4	5	6
---	---	---

F9 GY

101	102	1	2	3	4	5	6	7	8	9	10	58	59	60	61	62	63	64	65	66	67	109	110									
103	104	11	12	13	14	15	16	17	18	19	39	40	41	42	43	44	45	46	47	48	68	69	70	71	72	73	74	75	76	111	112	
105	106	20	21	22	23	24	25	26	27	28	29	49	50	51	52	53	54	55	56	57	77	78	79	80	81	82	83	84	85	86	113	114
107	108	30	31	32	33	34	35	36	37	38																					115	116

REFER TO THE FOLLOWING.



M10 - FUSE BLOCK-JUNCTION BOX (J/B)



MEC967C

Diagnostic Procedure

NBEC1025

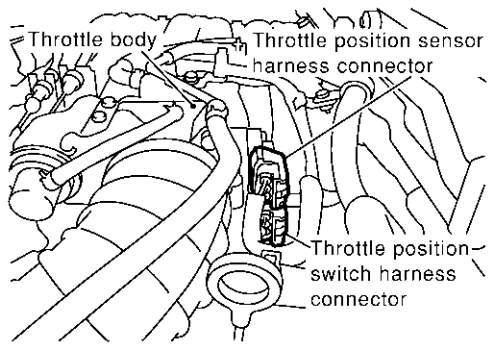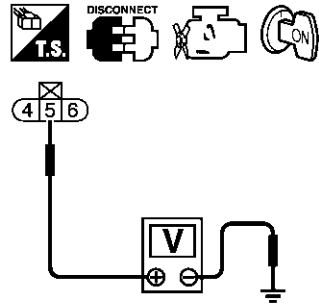1	CHECK CLOSED THROTTLE POSITION SWITCH POWER SUPPLY CIRCUIT	<p>1. Turn ignition switch "OFF". 2. Disconnect throttle position switch harness connector.</p> <div style="text-align: center;">  </div> <p>3. Turn ignition switch "ON". 4. Check voltage between throttle position switch terminal 5 and engine ground with CONSULT-II or tester.</p> <div style="text-align: center;">  </div> <p style="color: blue;">Voltage: Battery voltage</p> <p style="text-align: center;">OK or NG</p>	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p style="background-color: black; color: white; padding: 5px;">EC</p> <p>FE</p> <p>AT</p> <p>TF</p> <p>PD</p> <p>AX</p> <p>SU</p>
OK	▶	GO TO 3.	
NG	▶	GO TO 2.	

SEF944Y

PBIB0633E

2	DETECT MALFUNCTIONING PART	<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M32, F23 ● 10A fuse ● Harness for open or short between throttle position switch and fuse 	
	▶	Repair harness or connectors.	

3	CHECK CLOSED THROTTLE POSITION SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 56 and throttle position switch terminal 6. Refer to Wiring Diagram. Continuity should exist. 4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	<p>HA</p> <p>SC</p> <p>EL</p>
OK	▶	GO TO 4.	
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.	

IDX

DTC P0510 CTP SENSOR



Diagnostic Procedure (Cont'd)

4	CHECK IGNITION TIMING AND ENGINE IDLE SPEED							
Check the following items. Refer to "Basic Inspection", EC-116.								
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Items</th> <th style="width: 50%;">Specifications</th> </tr> </thead> <tbody> <tr> <td>Ignition timing</td> <td>15° ± 5° BTDC</td> </tr> <tr> <td>Idle speed</td> <td>750 ± 50 rpm (in "P" or "N" position)</td> </tr> </tbody> </table>			Items	Specifications	Ignition timing	15° ± 5° BTDC	Idle speed	750 ± 50 rpm (in "P" or "N" position)
Items	Specifications							
Ignition timing	15° ± 5° BTDC							
Idle speed	750 ± 50 rpm (in "P" or "N" position)							
MTBL1811								
Models with CONSULT-II	▶	GO TO 6.						
Models without CONSULT-II	▶	GO TO 6.						

5	CHECK THROTTLE POSITION SWITCH							
<p> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Turn ignition switch "OFF". 3. Turn ignition switch "ON". 4. Select "DATA MONITOR" mode with CONSULT-II. 5. Check indication of "CLSD THL/P SW" under the following conditions. Measurement must be made with throttle position switch installed in vehicle. 								
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Throttle valve conditions</th> <th style="width: 50%;">CLSD THL/P SW</th> </tr> </thead> <tbody> <tr> <td>Completely closed</td> <td>ON</td> </tr> <tr> <td>Partially open or completely open</td> <td>OFF</td> </tr> </tbody> </table>			Throttle valve conditions	CLSD THL/P SW	Completely closed	ON	Partially open or completely open	OFF
Throttle valve conditions	CLSD THL/P SW							
Completely closed	ON							
Partially open or completely open	OFF							
MTBL0355								
OK or NG								
OK (With CONSULT-II)	▶	GO TO 8.						
OK (Without CONSULT-II)	▶	GO TO 9.						
NG	▶	GO TO 7.						

DTC P0510 CTP SENSOR

Diagnostic Procedure (Cont'd)

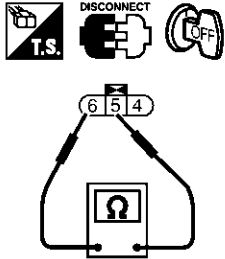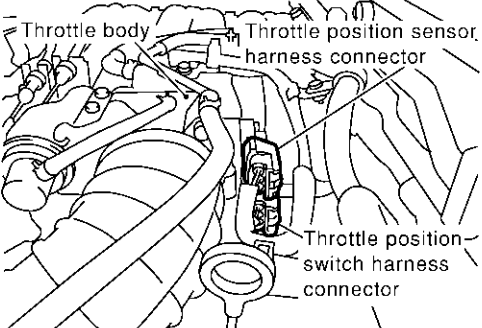6	CHECK THROTTLE POSITION SWITCH							
<p>1. Start engine and warm it up to normal operating temperature. 2. Turn ignition switch "OFF". 3. Disconnect closed throttle position switch harness connector. 4. Check continuity between closed throttle position switch terminals 6 and 5 under the following conditions. Resistance measurement must be made with throttle position switch installed in vehicle.</p>								
<div style="display: flex; justify-content: space-between; align-items: flex-start;"> <div style="width: 20%;">  </div> <div style="width: 40%; text-align: center;">  </div> <div style="width: 30%; border: 1px solid black; padding: 5px;"> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Throttle valve conditions</th> <th style="text-align: center;">Continuity</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Completely closed</td> <td style="text-align: center;">Yes</td> </tr> <tr> <td style="text-align: center;">Partially open or completely open</td> <td style="text-align: center;">No</td> </tr> </tbody> </table> </div> </div>			Throttle valve conditions	Continuity	Completely closed	Yes	Partially open or completely open	No
Throttle valve conditions	Continuity							
Completely closed	Yes							
Partially open or completely open	No							
SEF998Y								
OK or NG								
OK (With CONSULT-II)	▶	GO TO 8.						
OK (Without CONSULT-II)	▶	GO TO 9.						
NG	▶	GO TO 7.						

7	ADJUST THROTTLE POSITION SWITCH									
<p>Check the following items. Refer to "Basic Inspection", EC-116.</p>										
<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Items</th> <th style="text-align: center;">Specifications</th> </tr> </thead> <tbody> <tr> <td>Ignition timing</td> <td>15° ± 5° BTDC</td> </tr> <tr> <td>Closed throttle position switch idle position adjustment</td> <td>Feeler gauge thickness and switch condition 0.05 mm (0.0020 in): ON 0.15 mm (0.0059 in): OFF</td> </tr> <tr> <td>Target idle speed</td> <td>750 ± 50 rpm (in "P" or "N" position)</td> </tr> </tbody> </table>			Items	Specifications	Ignition timing	15° ± 5° BTDC	Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.05 mm (0.0020 in): ON 0.15 mm (0.0059 in): OFF	Target idle speed	750 ± 50 rpm (in "P" or "N" position)
Items	Specifications									
Ignition timing	15° ± 5° BTDC									
Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.05 mm (0.0020 in): ON 0.15 mm (0.0059 in): OFF									
Target idle speed	750 ± 50 rpm (in "P" or "N" position)									
MTBL1810										
<p>Is it possible to adjust closed throttle position switch?</p> <p style="text-align: center;">Yes or No</p>										
Yes (With CONSULT-II)	▶	GO TO 9.								
Yes (Without CONSULT-II)	▶	GO TO 9.								
No	▶	Replace throttle position switch.								

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P0510 CTP SENSOR

Diagnostic Procedure (Cont'd)

8	CHECK THROTTLE POSITION SENSOR									
<p>E With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Stop engine (ignition switch OFF). 3. Turn ignition switch ON. 4. Select "DATA MONITOR" mode with CONSULT-II. 5. Check voltage of "THRTL POS SEN" under the following conditins. <p>Voltage measurement must be made with throttle position sensor installed in vehicle.</p> <table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Throttle valve conditions</th> <th style="text-align: center;">THRTL POS SEN</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Completely closed (a)</td> <td style="text-align: center;">0.15 - 0.85V</td> </tr> <tr> <td style="text-align: center;">Partially open</td> <td style="text-align: center;">Between (a) and (b)</td> </tr> <tr> <td style="text-align: center;">Completely open (b)</td> <td style="text-align: center;">3.5 - 4.7V</td> </tr> </tbody> </table> <p style="text-align: right; margin-right: 20px;">MTBL0230</p> <p style="text-align: center;">OK or NG</p>			Throttle valve conditions	THRTL POS SEN	Completely closed (a)	0.15 - 0.85V	Partially open	Between (a) and (b)	Completely open (b)	3.5 - 4.7V
Throttle valve conditions	THRTL POS SEN									
Completely closed (a)	0.15 - 0.85V									
Partially open	Between (a) and (b)									
Completely open (b)	3.5 - 4.7V									
<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%; border-right: 1px solid black; padding: 2px;">OK</td> <td style="width: 5%; text-align: center; padding: 2px;">▶</td> <td style="padding: 2px;">GO TO 10.</td> </tr> <tr> <td style="border-right: 1px solid black; padding: 2px;">NG</td> <td style="text-align: center; padding: 2px;">▶</td> <td style="padding: 2px;">Replace throttle position sensor.</td> </tr> </table>			OK	▶	GO TO 10.	NG	▶	Replace throttle position sensor.		
OK	▶	GO TO 10.								
NG	▶	Replace throttle position sensor.								

9	CHECK THROTTLE POSITION SENSOR									
<ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Stop engine (ignition switch OFF). 3. Turn ignition switch ON. 4. Check voltage between ECM terminal 91 (Throttle position sensor signal) and ground. <p>Voltage measurement must be made with throttle position sensor installed in vehicle.</p> <div style="display: flex; align-items: center; justify-content: space-between;"> <div style="text-align: center;"> </div> <div style="text-align: center;"> <table border="1" style="border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Throttle valve conditions</th> <th style="text-align: center;">Voltage</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Completely closed (a)</td> <td style="text-align: center;">0.15 - 0.85V</td> </tr> <tr> <td style="text-align: center;">Partially open</td> <td style="text-align: center;">Between (a) and (b)</td> </tr> <tr> <td style="text-align: center;">Completely open (b)</td> <td style="text-align: center;">3.5 - 4.7V</td> </tr> </tbody> </table> </div> </div> <p style="text-align: right; margin-right: 20px;">SEF348X</p> <p style="text-align: center;">OK or NG</p>			Throttle valve conditions	Voltage	Completely closed (a)	0.15 - 0.85V	Partially open	Between (a) and (b)	Completely open (b)	3.5 - 4.7V
Throttle valve conditions	Voltage									
Completely closed (a)	0.15 - 0.85V									
Partially open	Between (a) and (b)									
Completely open (b)	3.5 - 4.7V									
<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%; border-right: 1px solid black; padding: 2px;">OK</td> <td style="width: 5%; text-align: center; padding: 2px;">▶</td> <td style="padding: 2px;">GO TO 10.</td> </tr> <tr> <td style="border-right: 1px solid black; padding: 2px;">NG</td> <td style="text-align: center; padding: 2px;">▶</td> <td style="padding: 2px;">Replace throttle position sensor.</td> </tr> </table>			OK	▶	GO TO 10.	NG	▶	Replace throttle position sensor.		
OK	▶	GO TO 10.								
NG	▶	Replace throttle position sensor.								

10	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.		
▶ INSPECTION END		

System Description

NBEC1026

This circuit line (LAN) is used to control the smooth shifting up and down of A/T during the hard acceleration/ deceleration.

Pulse signals are exchanged between ECM and TCM (Transmission Control Module).

Be sure to erase the malfunction information such as DTC not only in TCM but also ECM after the A/T related repair.

ECM Terminals and Reference Value

NBEC1027

Specification data are reference values and are measured between each terminal and ground.

CAUTION:


Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
114	G/R	Communication line (LAN)	[Engine is running] ● Idle speed	Approximately 2V

On Board Diagnosis Logic

NBEC1028

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0600 0600	A/T control serial communication link	ECM receives incorrect voltage from TCM (Transmission Control Module) continuously.	<ul style="list-style-type: none"> ● Harness or connectors [The communication line circuit between ECM and TCM (Transmission Control Module) is open or shorted.] ● TCM ● Dead (Weak) battery

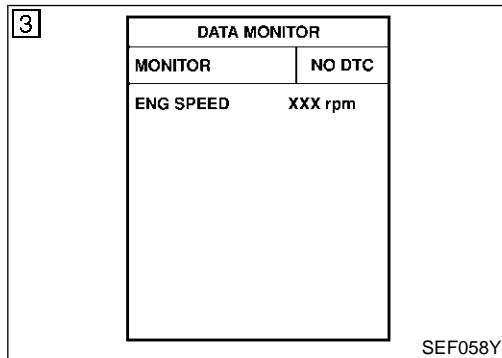

DTC Confirmation Procedure

NBEC1029

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10.5V at idle.

(E) WITH CONSULT-II

NBEC1029S01

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and let it idle for at least 2 seconds.
- 4) If DTC is detected, go to "Diagnostic Procedure", EC-477.



(G) WITH GST

NBEC1029S03

Follow the procedure "WITH CONSULT-II" above.

Diagnostic Procedure

NBEC1031

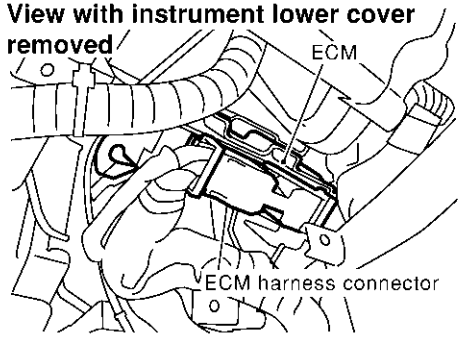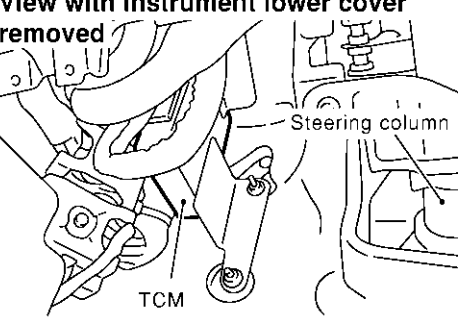1	CHECK A/T CONTROL INPUT SIGNAL CIRCUIT FOR OPEN	
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector and TCM (Transmission Control Module) harness connector.</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>View with instrument lower cover removed</p>  </div> <div style="text-align: center;"> <p>View with instrument lower cover removed</p>  </div> </div> <p>3. Check harness continuity between ECM terminal 114 and TCM terminal 33. Refer to Wiring Diagram. Continuity should exist.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 3.
NG	▶	GO TO 2.

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX


2	DETECT MALFUNCTION PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M94, F27 ● Harness for open or short between ECM and TCM (Transmission control module) 		
▶		Repair harness or connectors.

3	CHECK A/T CONTROL INPUT SIGNAL CIRCUIT FOR SHORT	
<p>1. Check harness continuity between ECM terminal 114 and ground. Refer to Wiring Diagram. Continuity should not exist.</p> <p>2. Also check harness for short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 4.
NG	▶	Repair short to ground or short to power in harness or connectos.

4	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.		
▶		INSPECTION END

DTC P0605 ECM

Component Description

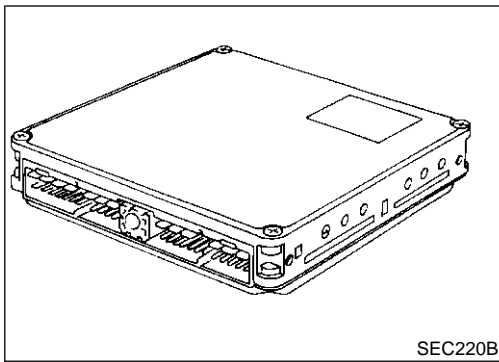

Component Description

The ECM consists of a microcomputer and connectors for signal input and output and for power supply. The unit controls the engine. NBEC1032

On Board Diagnosis Logic

NBEC1033


DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P0605 0605	Engine control module	ECM calculation function is malfunctioning.	<ul style="list-style-type: none"> ECM

DTC Confirmation Procedure

NBEC1034

NOTE:

If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 10 seconds before conducting the next test.

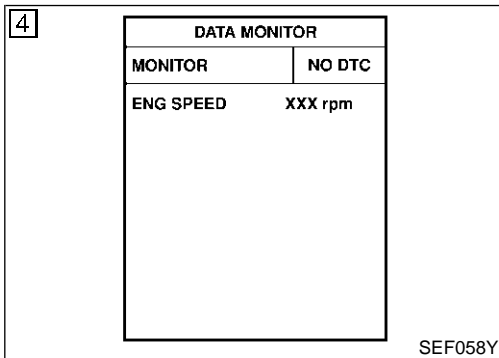

WITH CONSULT-II

NBEC1034S01

- 1) Turn ignition switch “ON”.
- 2) Select “DATA MONITOR” mode with CONSULT-II.
- 3) Start engine.
- 4) Run engine for at least 30 seconds at idle speed.
- 5) If 1st trip DTC is detected, go to “Diagnostic Procedure”, EC-479.

WITH GST

NBEC1034S02

Follow the procedure “WITH CONSULT-II” above.

Diagnostic Procedure

NBEC1035


1	INSPECTION START	
<p>Ⓔ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch "ON". 2. Select "SELF DIAG RESULTS" mode with CONSULT-II. 3. Touch "ERASE". 4. Perform "DTC Confirmation Procedure". See EC-478. 5. Is the 1st trip DTC P0605 displayed again? 		
<p>Ⓔ With GST</p> <ol style="list-style-type: none"> 1. Turn ignition switch "ON". 2. Select MODE 4 with GST. 3. Touch "ERASE". 4. Perform "DTC Confirmation Procedure". See EC-478. 5. Is the 1st trip DTC P0605 displayed again? 		
Yes or No		
Yes	▶	GO TO 2.
No	▶	INSPECTION END

2	REPLACE ECM	
<ol style="list-style-type: none"> 1. Replace ECM. 2. Perform initialization of NVIS (NATS) system and registration of all NVIS (NATS) ignition key IDs. Refer to "NVIS (Nissan Vehicle Immobilizer System — NATS)", EC-87. 3. Perform "Idle Air Volume Learning", EC-69. Is "Idle Air Volume Learning" carried out successfully? 		
Yes or No		
Yes	▶	INSPECTION END
No	▶	Follow the instruction of "Idle Air Volume Learning".

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P1102 MAF SENSOR

Component Description

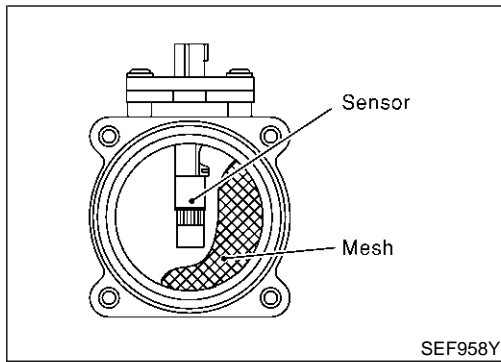

Component Description

NBEC0803

The mass air flow sensor is placed in the stream of intake air. It measures the intake flow rate by measuring a part of the entire intake flow. It consists of a hot film that is supplied with electric current from the ECM. The temperature of the hot film is controlled by the ECM a certain amount. The heat generated by the hot film is reduced as the intake air flows around it. The more air, the greater the heat loss.

Therefore, the ECM must supply more electric current to maintain the temperature of the hot film as air flow increases. The ECM detects the air flow by means of this current change.

CONSULT-II Reference Value in Data Monitor Mode

NBEC0804

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
MAS A/F SE-B1	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load 	Idle	1.2 - 1.8V
		2,500 rpm	1.6 - 2.2V
CAL/LD VALUE	ditto	Idle	14.0 - 33.0%
		2,500 rpm	12.0 - 25.0%
MASS AIRFLOW	ditto	Idle	2.0 - 6.0 g·m/s
		2,500 rpm	7.0 - 20.0 g·m/s

ECM Terminals and Reference Value

NBEC0805

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
61	OR	Mass air flow sensor	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	1.2 - 1.8V
			[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 2,500 rpm. 	1.6 - 2.2V
73	B/P	Mass air flow sensor ground	[Engine is running] <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	Approximately 0V
111	P/B	Sensors' power supply	[Ignition switch "ON"]	Approximately 5V

DTC P1102 MAF SENSOR

On Board Diagnosis Logic

On Board Diagnosis Logic

NBEC0806

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P1102 1102	Mass air flow sensor circuit range/performance problem	A voltage from the sensor is constantly approx. 1.0V when engine is running.	<ul style="list-style-type: none"> • Harness or connectors (The sensor circuit is open or shorted.) • Mass air flow sensor

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MIL lights up.

NBEC0806S01

Detected items	Engine operating condition in fail-safe mode
Mass air flow sensor circuit	Engine speed will not rise more than 2,400 rpm due to the fuel cut.

DTC Confirmation Procedure

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

NBEC0808

WITH CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and wait at least 5 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-483.

NBEC0808S06


WITH GST

Follow the procedure "With CONSULT-II" above.

NBEC0808S07

NOTE:

If 1st trip DTC is confirmed after more than 5 seconds, there may be DTC P0101.

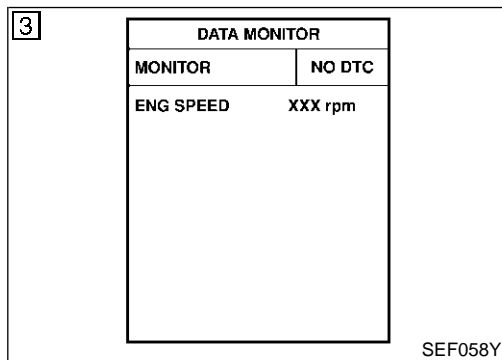

DTC P1102 MAF SENSOR




Wiring Diagram

Wiring Diagram

NBEC0810

EC-MAFS-01

— : Detectable line for DTC
— : Non-detectable line for DTC

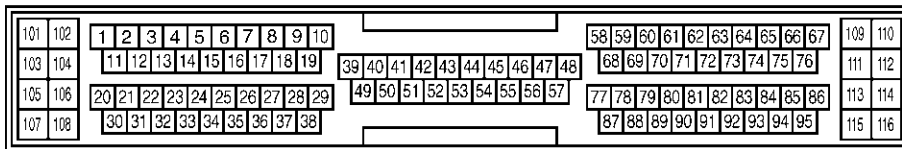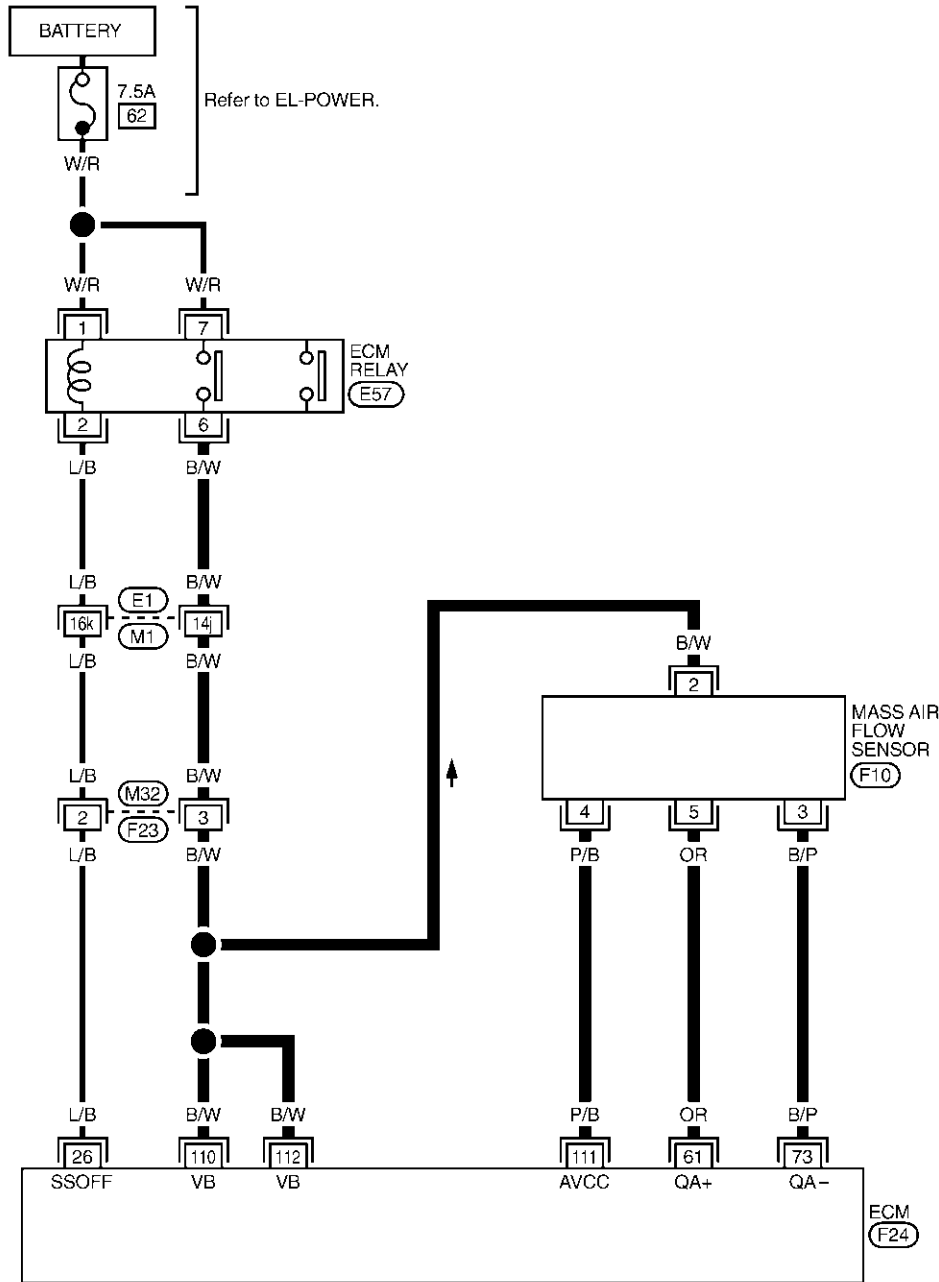

REFER TO THE FOLLOWING.
 (E1) -SUPER
 MULTIPLE JUNCTION (SMJ)




Diagnostic Procedure

NBEC0811

1	CHECK INTAKE SYSTEM	
Check the following for connection. <ul style="list-style-type: none"> ● Air duct ● Vacuum hoses 		
OK or NG		
OK	▶	GO TO 2.
NG	▶	Reconnect the parts.

GI
MA
EM
LC

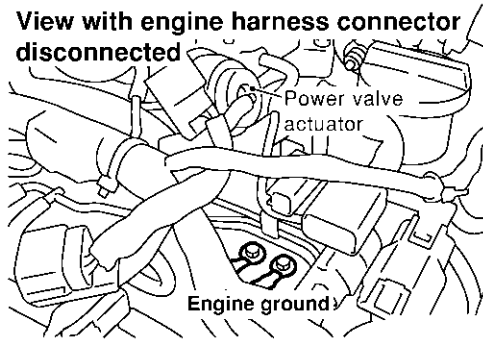2	RETIGHTEN GROUND SCREWS	
1. Turn ignition switch "OFF". 2. Loosen and retighten engine ground screws.		
<p>View with engine harness connector disconnected</p>  <p>The diagram shows a top-down view of the engine compartment. A power valve actuator is labeled at the top. Below it, two engine ground screws are shown with arrows pointing to them from the label 'Engine ground' at the bottom. The diagram is labeled 'View with engine harness connector disconnected'.</p>		
SEF959Y		
▶		GO TO 3.


EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P1102 MAF SENSOR

Diagnostic Procedure (Cont'd)

3 CHECK MAF SENSOR POWER SUPPLY CIRCUIT


1. Disconnect mass air flow (MAF) sensor harness connector.

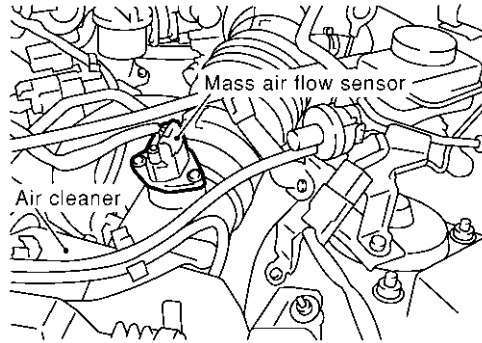

SEF960Y

2. Turn ignition switch "ON".

3. Check voltage between MAF sensor terminals 2, 4 and ground with CONSULT-II or tester.

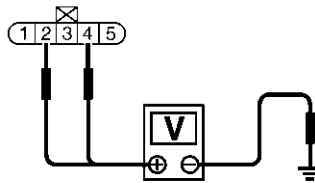

SEC428D

Terminal	Voltage
2	Battery voltage
4	Approximately 5

MTBL1401

OK or NG

OK ► GO TO 5.

NG ► GO TO 4.

4 DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E1, M1
- Harness connectors M32, F23
- Harness for open or short between ECM relay and mass air flow sensor
- Harness for open or short between mass air flow sensor and ECM

► Repair harness or connectors.

5 CHECK MAF SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch "OFF".

2. Disconnect ECM harness connector.

3. Check harness continuity between MAF sensor terminal 3 and ECM terminal 73.
Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to power.

OK or NG

OK ► GO TO 6.

NG ► Repair open circuit or short to ground or short to power in harness or connectors.

DTC P1102 MAF SENSOR

Diagnostic Procedure (Cont'd)

6	CHECK MAF SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
<p>1. Check harness continuity between MAF sensor terminal 5 and ECM terminal 61. Refer to Wiring Diagram. Continuity should exist.</p> <p>2. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 7.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

GI
MA
EM
LC

7	CHECK MASS AIR FLOW SENSOR											
<p>1. Reconnect harness connectors disconnected.</p> <p>2. Start engine and warm it up to normal operating temperature.</p> <p>3. Check voltage between ECM terminal 61 (Mass air flow sensor signal) and ground.</p>												
		<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Condition</th> <th style="text-align: center;">Voltage V</th> </tr> </thead> <tbody> <tr> <td>Ignition switch "ON" (Engine stopped.)</td> <td style="text-align: center;">Approx. 1.0</td> </tr> <tr> <td>Idle (Engine is warmed-up to normal operating temperature.)</td> <td style="text-align: center;">1.2 - 1.8</td> </tr> <tr> <td>2,500 rpm (Engine is warmed-up to normal operating temperature.)</td> <td style="text-align: center;">1.6 - 2.2</td> </tr> <tr> <td>Idle to about 4,000 rpm*</td> <td style="text-align: center;">1.2 - 1.8 to Approx. 4.0</td> </tr> </tbody> </table> <p style="font-size: small;">*: Check for linear voltage rise in response to engine being increased to about 4,000 rpm.</p>	Condition	Voltage V	Ignition switch "ON" (Engine stopped.)	Approx. 1.0	Idle (Engine is warmed-up to normal operating temperature.)	1.2 - 1.8	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.6 - 2.2	Idle to about 4,000 rpm*	1.2 - 1.8 to Approx. 4.0
Condition	Voltage V											
Ignition switch "ON" (Engine stopped.)	Approx. 1.0											
Idle (Engine is warmed-up to normal operating temperature.)	1.2 - 1.8											
2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.6 - 2.2											
Idle to about 4,000 rpm*	1.2 - 1.8 to Approx. 4.0											
<p>4. If the voltage is out of specification, disconnect MAF sensor harness connector and connect it again. Then repeat above check.</p> <p style="text-align: right;">SEF298X</p> <p style="text-align: center;">OK or NG</p>												
OK	▶	GO TO 8.										
NG	▶	Replace mass air flow sensor.										



EC
FE
AT
TF
PD
AX
SU
BR

8	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.		
▶		INSPECTION END

ST
RS
BT
HA
SC
EL
IDX

DTC P1111, P1136 IVT CONTROL SOLENOID VALVE

Component Description

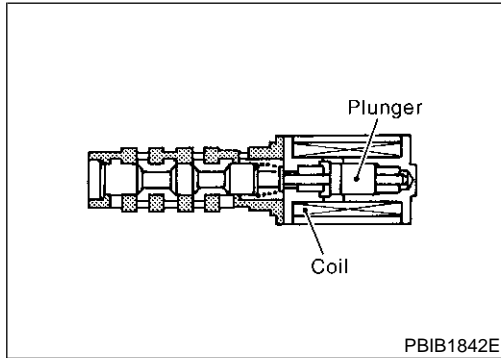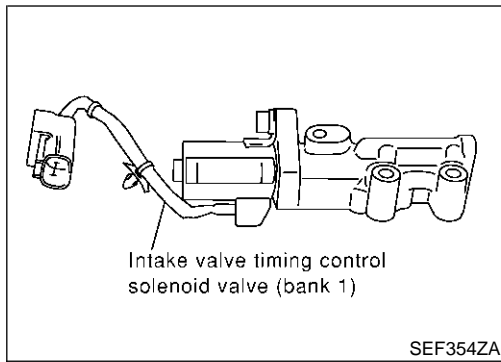

Component Description

NBEC1036

Intake valve timing control solenoid valve is activated by ON/OFF pulse duty (ratio) signals from the ECM.

The intake valve timing control solenoid valve changes the oil amount and direction of flow through intake valve timing control unit or stops oil flow.

The longer pulse width advances valve angle.

The shorter pulse width retards valve angle.

When ON and OFF pulse widths become equal, the solenoid valve stops oil pressure flow to fix the intake valve angle at the control position.

CONSULT-II Reference Value in Data Monitor Mode

NBEC1037

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
INT/V SOL (B1) INT/V SOL (B2)	<ul style="list-style-type: none"> Engine: After warming up Shift lever "N" Quickly depressed accelerator pedal No-load 	Idle	0%
		2,000 rpm	Approximately 40%


ECM Terminals and Reference Value

NBEC1038

Specification data are reference values, and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.

CAUTION:


Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than the ECM terminals, such as the ground.

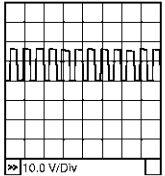TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
13	OR/B	Intake valve timing control solenoid valves (bank 1)	[Engine is running] <ul style="list-style-type: none"> Warm-up condition Idle speed 	Battery voltage
			[Engine is running] <ul style="list-style-type: none"> Warm-up condition Engine speed is 2,000 rpm. 	7 - 8V 

PBIB1790E

DTC P1111, P1136 IVT CONTROL SOLENOID VALVE

ECM Terminals and Reference Value (Cont'd)

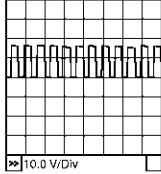TER-MINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
15	P/L	Intake valve timing control solenoid valves (bank 2)	[Engine is running] ● Warm-up condition ● Idle speed	Battery voltage
			[Engine is running] ● Warm-up condition ● Engine speed is 2,000 rpm.	7 - 8V  PBIB1790E

On Board Diagnosis Logic

NBEC1039

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P1111 1111 (Bank 1) P1136 1136 (Bank 2)	Intake valve timing control solenoid valve circuit	An improper voltage is sent to the ECM through intake valve timing control solenoid valve.	<ul style="list-style-type: none"> ● Harness or connectors (Intake valve timing control solenoid valve circuit is open or shorted.) ● Intake valve timing control solenoid valve

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
B/FUEL SCHDL	XXX msec
COOLANTENP/S	XXX °C
VHCL SPEED SE	XXX km/h
INT/V TIM (B1)	XXX °CA
INT/V TIM (B2)	XXX °CA
INT/V SOL (B1)	XXX %
INT/V SOL (B2)	XXX %

SEF353Z

DTC Confirmation Procedure

NBEC1040

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

NBEC1040S01

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Maintain the following conditions for at least 5 seconds.

Engine speed	More than Idle speed
Selector lever	"P" or "N" position

- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-490.

WITH GST

NBEC1040S02

Follow the procedure "With CONSULT-II" above.

DTC P1111, P1136 IVT CONTROL SOLENOID VALVE

Wiring Diagram

Wiring Diagram



NBEC1041

NBEC1041S01

BANK 1


EC-IVCB1-01

: Detectable line for DTC
 : Non-detectable line for DTC

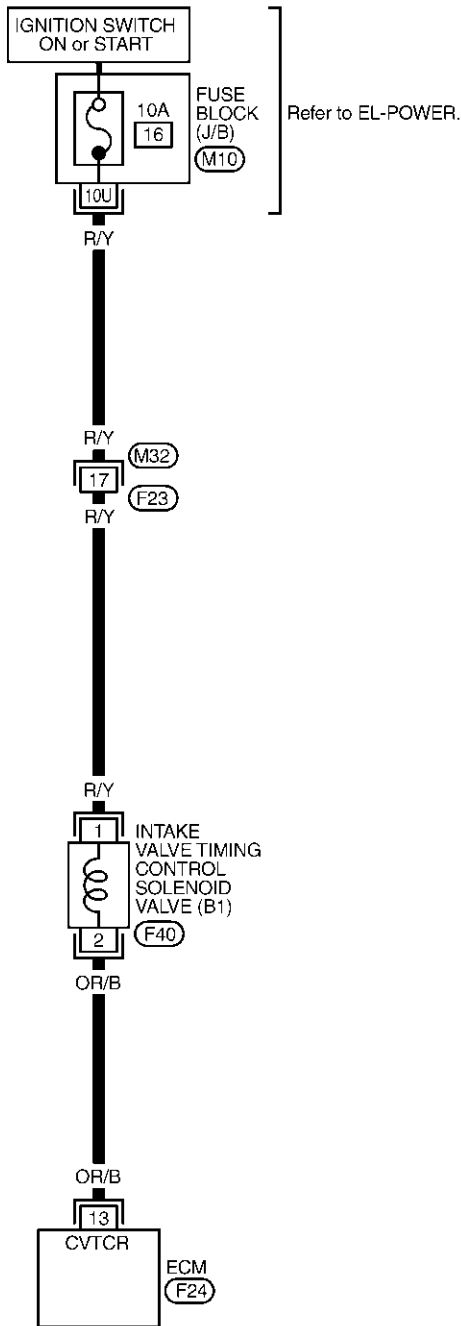

REFER TO THE FOLLOWING.

(M10) - FUSE BLOCK-
JUNCTION BOX (J/B)

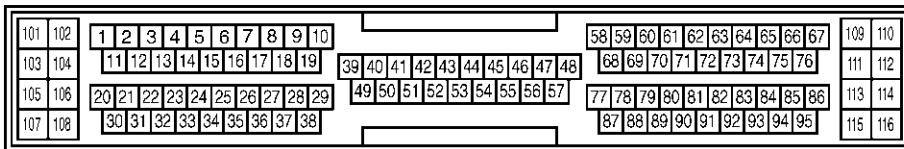


DTC P1111, P1136 IVT CONTROL SOLENOID VALVE

Wiring Diagram (Cont'd)

BANK 2


NBEC1041S02

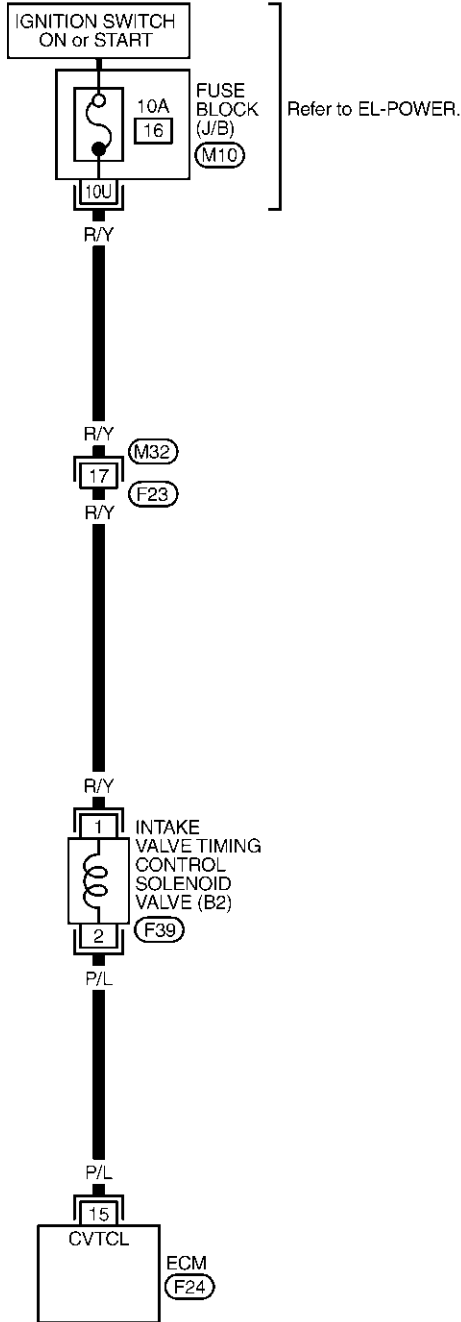

EC-IVCB2-01


: Detectable line for DTC
 : Non-detectable line for DTC

- GI
- MA
- EM
- LC
- EC**
- FE
- AT
- TF
- PD
- AX
- SU
- BR
- ST
- RS
- BT
- HA
- SC
- EL
- IDX



REFER TO THE FOLLOWING.

(M10) - FUSE BLOCK-
JUNCTION BOX (J/B)

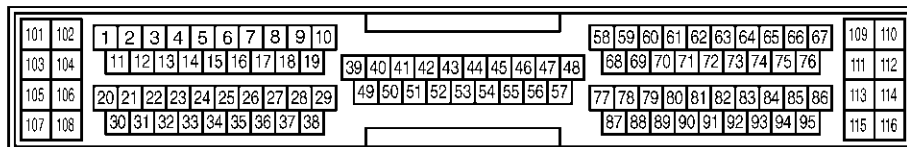

MEC917D

DTC P1111, P1136 IVT CONTROL SOLENOID VALVE



Diagnostic Procedure

Diagnostic Procedure

NBEC1042

1 INTAKE VALVE TIMING CONTROL SOLENOID VALVE POWER SUPPLY CIRCUIT


1. Stop engine.
2. Disconnect intake valve timing control solenoid valve harness connector.

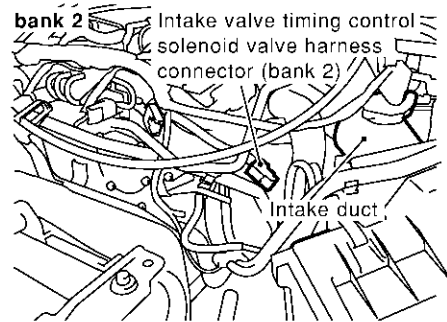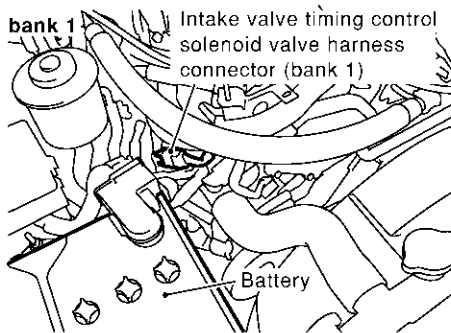

SEF357ZA


3. Turn ignition switch "ON".
4. Check voltage between terminal 1 and ground with CONSULT-II or tester.

BANK 1

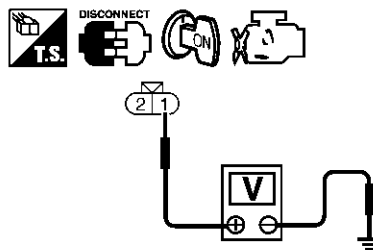

SEC589D

BANK 2

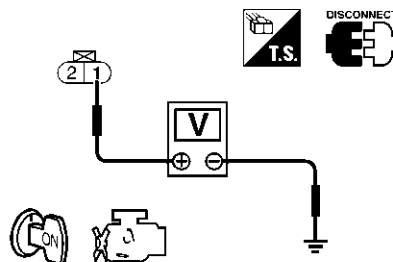

SEF193ZA

Voltage: Battery voltage

OK or NG

OK	▶	GO TO 3.
NG	▶	GO TO 2.

2 DETECT MALFUNCTION PART

Check the following.


- Harness connectors M32, F23
- 10A fuse
- Harness continuity between fuse and intake valve timing control solenoid valve

▶ Repair harness or connectors.

DTC P1111, P1136 IVT CONTROL SOLENOID VALVE

Diagnostic Procedure (Cont'd)

3	CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE OUTPUT CIRCUIT FOR OPEN AND SHORT	<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness connectors continuity between ECM terminal 13 (bank 1) or 15 (bank 2) and terminal 2. Refer to Wiring Diagram. Continuity should exist. 4. Also check harness for short to ground and short to power. <p style="text-align: center;">OK or NG</p>	GI MA EM LC
OK	▶	GO TO 4.	
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.	

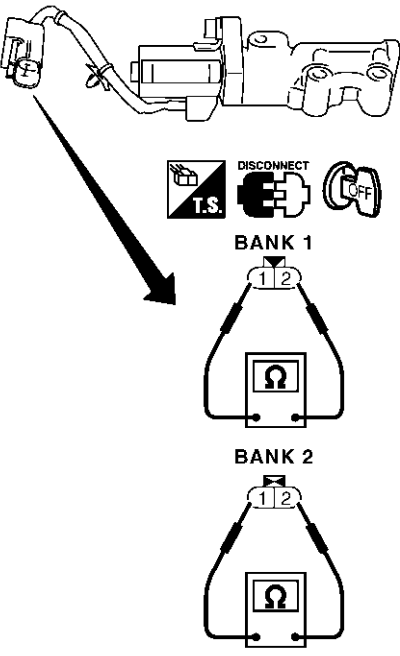4	CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE	<p>Check resistance between intake valve timing control solenoid valve terminals as follows.</p> <div style="text-align: center;">  </div> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>Terminals</th> <th>Resistance</th> </tr> </thead> <tbody> <tr> <td>1 and 2</td> <td>5.5 - 9.2Ω at 20°C (68°F)</td> </tr> <tr> <td>1 or 2 and ground</td> <td>∞ Ω (Continuity should not exist.)</td> </tr> </tbody> </table> <p style="text-align: right; margin-right: 20px;">SEC590D</p> <p style="text-align: center;">OK or NG</p>	Terminals	Resistance	1 and 2	5.5 - 9.2Ω at 20°C (68°F)	1 or 2 and ground	∞ Ω (Continuity should not exist.)	FE AT TF PD AX SU BR ST RS BT HA
Terminals	Resistance								
1 and 2	5.5 - 9.2Ω at 20°C (68°F)								
1 or 2 and ground	∞ Ω (Continuity should not exist.)								
OK	▶	GO TO 5.							
NG	▶	Repair intake valve timing control solenoid valve.							

5	CHECK INTERMITTENT INCIDENT	<p>Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.</p> <p style="text-align: center;">▶ INSPECTION END</p>	EL IDX
----------	------------------------------------	---	-----------

DTC P1130 SWIRL CONTROL VALVE CONTROL SOLENOID VALVE

Description

Description

If DTC P1130 is displayed with P1165, first perform trouble diagnosis for DTC P1165, EC-570. NBEC1043

SYSTEM DESCRIPTION

NBEC1043S01

Sensor	Input Signal to ECM	ECM function	Actuator
Throttle position sensor	Throttle position	Swirl control valve control	Swirl control valve control solenoid valve ↓ Vacuum signal Swirl control valve actuator ↓ Swirl control valve
Ignition switch	Start signal		
Crankshaft position sensor (POS)	Engine speed (POS signal)		
Crankshaft position sensor (REF)	Engine speed (REF signal)		
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		

This system has a swirl control valve in the intake passage of each cylinder.

While idling and during low engine speed operation, the swirl control valve closes. Thus the velocity of the air in the intake passage increases, promoting the vaporization of the fuel and producing a swirl in the combustion chamber.


Because of this operation, this system tends to increase the burning speed of the gas mixture, improve fuel consumption, and increase the stability in running conditions.

Also, except when idling and during low engine speed operation, this system opens the swirl control valve. In this condition, this system tends to increase power by improving intake efficiency via reduction of intake flow resistance, intake flow.

The solenoid valve controls swirl control valve's shut/open condition. This solenoid valve is operated by the ECM.

Throttle position sensor (Idle position)	Engine speed	Swirl control valve control solenoid valve	Swirl control valve
ON	Below 3,200 rpm	ON	Closed
OFF	Less than 3,200 rpm	ON	Closed
	More than 3,600 rpm	OFF	Open


When engine coolant temperature is below 10°C (50°F) and above 55°C (131°F), swirl control valve is kept open regardless of above condition.

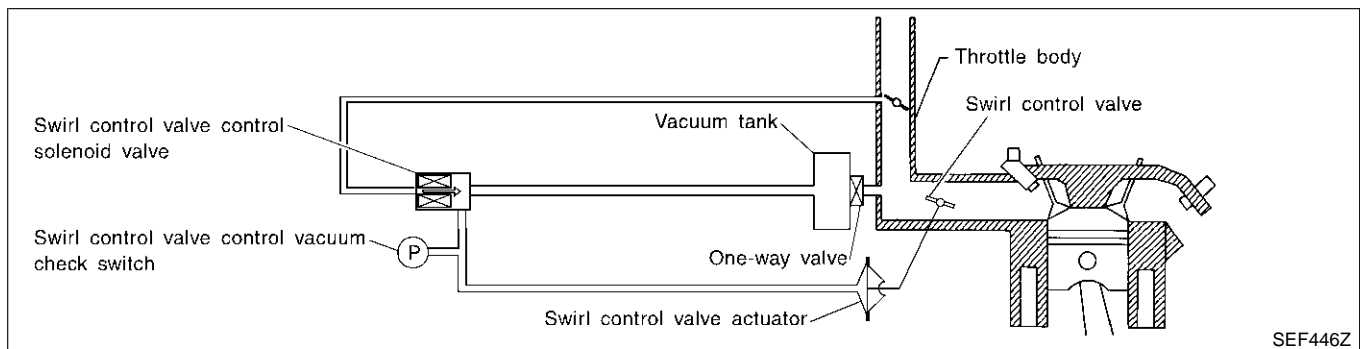

SEF446Z

DTC P1130 SWIRL CONTROL VALVE CONTROL SOLENOID VALVE

Description (Cont'd)

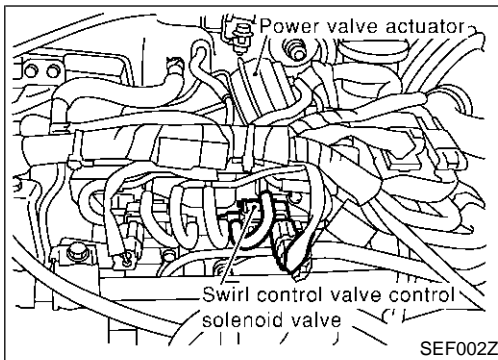

COMPONENT DESCRIPTION

Swirl Control Valve Control Solenoid Valve

NBEC1043S02

NBEC1043S0201

The swirl control valve control solenoid valve responds to signals from the ECM. When the ECM sends an ON (ground) signal, the solenoid valve is bypassed to apply intake manifold vacuum to the swirl control valve actuator. This operation closes the swirl control valve. When the ECM sends an OFF signal, the vacuum signal is cut and the swirl control valve opens.

CONSULT-II Reference Value in Data Monitor Mode

NBEC1044

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
SWRL CONT S/V	● Engine speed: Idle Engine coolant temperature is between 15°C (59°F) to 50°C (122°F).	ON
	Engine coolant temperature is above 55°C (131°F).	OFF

ECM Terminals and Reference Value

NBEC1045

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
29	G	Swirl control valve control solenoid valve	[Engine is running] ● Idle speed ● Engine coolant temperature is between 15 to 50°C (59 to 122°F).	0 - 1.0V
			[Engine is running] ● Idle speed ● Engine coolant temperature is above 55°C (131°F).	BATTERY VOLTAGE (11 - 14V)

DTC P1130 SWIRL CONTROL VALVE CONTROL SOLENOID VALVE

On Board Diagnosis Logic

On Board Diagnosis Logic

NBEC1046

DTC No.	Trouble diagnosis name	DTC Detecting Condition		Possible Cause
P1130 1130	Swirl control valve control solenoid valve	A)	An improper voltage signal is sent to ECM through swirl control valve control solenoid valve.	<ul style="list-style-type: none"> ● Harness or connectors (The swirl control valve control solenoid valve circuit is open or shorted.) ● Swirl control valve control solenoid valve
		B)	The vacuum signal is not sent to swirl control valve under specified driving conditions, even though swirl control valve control solenoid valve is ON.	<ul style="list-style-type: none"> ● Harness or connector (The swirl control valve control solenoid valve circuit is open.) ● Swirl control valve control solenoid valve ● Intake system (Intake air leaks) ● Hoses and tubes between intake manifold, vacuum tank and swirl control valve actuator ● Swirl control valve actuator ● Swirl control valve control vacuum check switch ● Mass air flow sensor ● Crankshaft position sensor (REF) ● Throttle position sensor
		C)	The vacuum signal is sent to swirl control valve even though swirl control valve control solenoid valve is OFF.	<ul style="list-style-type: none"> ● Harness or connector (The swirl control valve control solenoid valve circuit is shorted.) ● Swirl control valve control vacuum check switch ● Crankshaft position sensor (REF) ● Throttle position sensor ● Hoses and tubes between air cleaner and swirl control valve ● Vacuum check switch ● Swirl control valve control solenoid valve

DTC Confirmation Procedure

NBEC1047

Perform "Procedure for malfunction A" first. If the 1st trip DTC cannot be confirmed, perform "Procedure for malfunction B". If the 1st trip DTC is not confirmed on "Procedure for malfunction B", perform "Procedure for malfunction C".

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

2	DATA MONITOR	
	MONITOR	NO DTC
	ENG SPEED	XXX rpm

SEF058Y

PROCEDURE FOR MALFUNCTION A

NBEC1047S01

With CONSULT-II

NBEC1047S0101

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Wait at least 5 seconds.
If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-497.

With GST

NBEC1047S0102

Follow the procedure "With CONSULT-II" above.

DTC P1130 SWIRL CONTROL VALVE CONTROL SOLENOID VALVE

DTC Confirmation Procedure (Cont'd)

4	DATA MONITOR	
	MONITOR	NO DTC
	ENG SPEED	XXX rpm
	COOLAN TEMP/S	XXX °C

SEF174Y

PROCEDURE FOR MALFUNCTION B

NBEC1047S02

TESTING CONDITION:

- For best results, perform the test at a temperature above 5°C (41°F).
- Before performing the following procedure, confirm that battery voltage is more than 10V at idle, then stop engine immediately.

With CONSULT-II

NBEC1047S0201

- 1) Turn ignition switch "OFF" and wait at least 10 seconds.
- 2) Turn ignition switch "ON".
- 3) Check "COOLAN TEMP/S" in "DATA MONITOR" mode with CONSULT-II.
- 4) Confirm COOLAN TEMP/S value is 40°C (104°F) or less. If the value is more than 40°C (104°F), park the vehicle in a cool place and retry from step 1.
- 5) Start engine and wait until COOLAN TEMP/S value increases to more than 55°C (131°F). If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-497.

With GST

NBEC1047S0202

Follow the procedure "With CONSULT-II" above.

4	DATA MONITOR	
	MONITOR	NO DTC
	ENG SPEED	XXX rpm
	COOLAN TEMP/S	XXX °C

SEF174Y

PROCEDURE FOR MALFUNCTION C

NBEC1047S03

TESTING CONDITION:

- For best results, perform the test at a temperature above 5°C (41°F).
- Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

With CONSULT-II

NBEC1047S0301

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 10 seconds.
- 3) Turn ignition switch "ON" again and select "DATA MONITOR" mode with CONSULT-II.
- 4) Start engine and let it idle for at least 20 seconds. If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-497.

With GST

NBEC1047S0302

Follow the procedure "With CONSULT-II" above.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P1130 SWIRL CONTROL VALVE CONTROL SOLENOID VALVE



Wiring Diagram

Wiring Diagram

NBEC1048



EC-SWL/V-01

: Detectable line for DTC
 : Non-detectable line for DTC

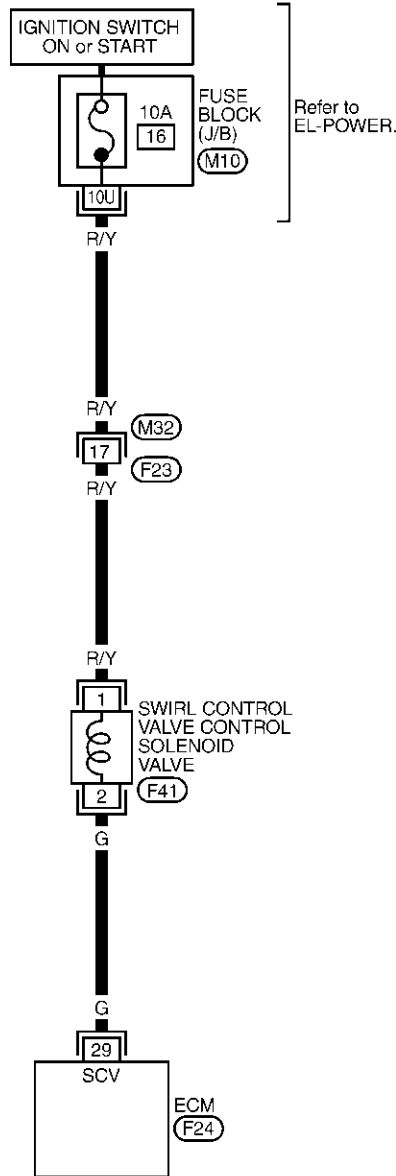

REFER TO THE FOLLOWING.

(M10) - FUSE BLOCK-JUNCTION BOX (J/B)

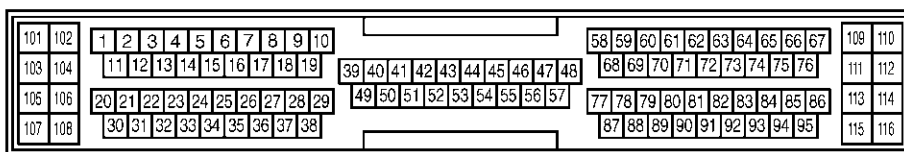

MEC980C

DTC P1130 SWIRL CONTROL VALVE CONTROL SOLENOID VALVE

Diagnostic Procedure

Diagnostic Procedure PROCEDURE A

NBEC1049

NBEC1049S01



1	INSPECTION START	
Do you have CONSULT-II?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	GO TO 3.

2	CHECK SWIRL CONTROL VALVE CONTROL SOLENOID VALVE CIRCUIT																											
<p>Ⓔ With CONSULT-II</p> <ol style="list-style-type: none"> Turn ignition switch "ON". Select "SWIRL CONT SOL VALVE" in "ACTIVE TEST" mode with CONSULT-II. Touch "ON" and "OFF" on CONSULT-II screen. 																												
<table border="1" style="margin: auto;"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <td>SWIRL CONT SOL VALVE</td> <td>OFF</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>IACV-AAC/V</td> <td>XXX step</td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> </thead> <tbody> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> </tbody> </table>			ACTIVE TEST		SWIRL CONT SOL VALVE	OFF	MONITOR		ENG SPEED	XXX rpm	IACV-AAC/V	XXX step																
ACTIVE TEST																												
SWIRL CONT SOL VALVE	OFF																											
MONITOR																												
ENG SPEED	XXX rpm																											
IACV-AAC/V	XXX step																											
<p>4. Make sure that clicking sound is heard from the swirl control valve control solenoid valve.</p> <p style="text-align: center;">OK or NG</p>																												
OK	▶	GO TO 6.																										
NG	▶	GO TO 3.																										

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P1130 SWIRL CONTROL VALVE CONTROL SOLENOID VALVE

Diagnostic Procedure (Cont'd)

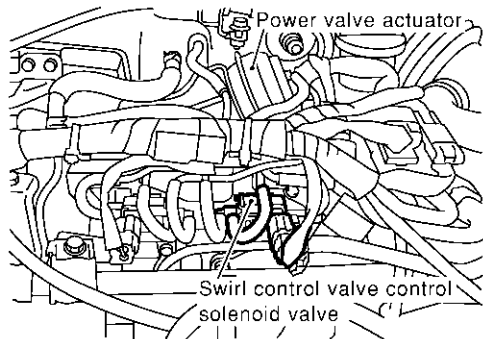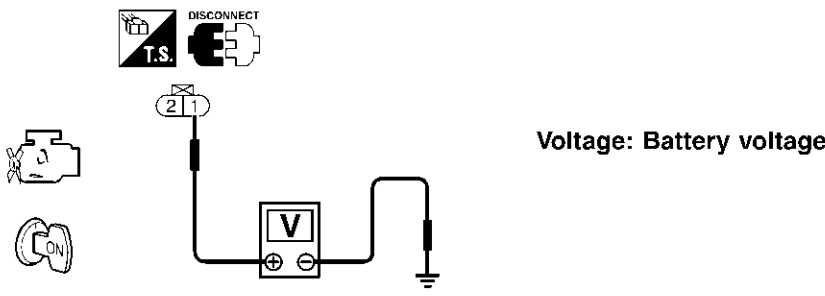3	CHECK SWIRL CONTROL VALVE CONTROL SOLENOID VALVE POWER SUPPLY CIRCUIT
<p>1. Turn ignition switch "OFF". 2. Disconnect swirl control valve control solenoid valve harness connector.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF002Z</p> <p>3. Turn ignition switch "ON". 4. Check voltage between swirl control valve control solenoid valve terminal 1 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p style="text-align: center;">OK or NG</p> <p style="text-align: right;">SEF619X</p> </div>	
OK	▶ GO TO 5.
NG	▶ GO TO 4.

4	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M32, F23 ● Fuse block (J/B) connector M10 ● 10A fuse ● Harness for open or short between swirl control valve control solenoid valve and fuse 	
▶	Repair harness or connectors.

5	CHECK SWIRL CONTROL VALVE CONTROL SOLENOID VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 29 and swirl control valve control solenoid valve terminal 2. Refer to Wiring Diagram. Continuity should exist. 4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 6.
NG	▶ Repair open circuit, short to ground or short to power in harness connectors.

DTC P1130 SWIRL CONTROL VALVE CONTROL SOLENOID VALVE


Diagnostic Procedure (Cont'd)

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

6 CHECK SWIRL CONTROL VALVE CONTROL SOLENOID VALVE

Ⓔ With CONSULT-II

1. Reconnect the disconnected harness connectors.
2. Start engine and let it idle.
3. Remove vacuum hose connected to swirl control valve actuator.
4. Select "SWIRL CONT SOL VALVE" in "ACTIVE TEST" mode with CONSULT-II.
5. Touch "ON" and "OFF" on CONSULT-II screen.
6. Check vacuum existence and operation delay time under the following conditions.

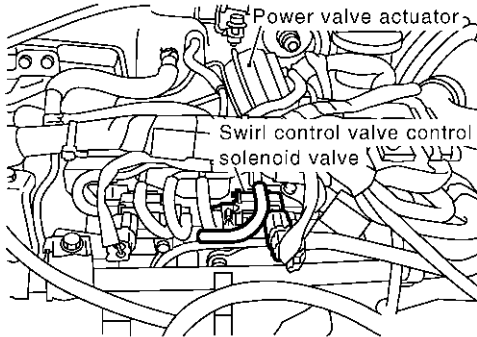

SWIRL CONT SOL/ VALVE	Vacuum
ON	Should exist.
OFF	Should not exist.



Operation takes less than 1 second.



SEC596D

⊗ Without CONSULT-II

1. Reconnect ECM harness connector.
2. Remove vacuum hose connected to swirl control valve actuator.
3. Start engine and let it idle.
4. Apply 12V of direct current between swirl control valve control solenoid valve terminals 1 and 2.
5. Check vacuum existence and operation delay time under the following conditions.

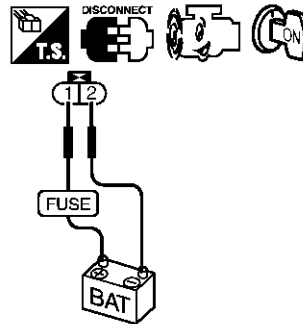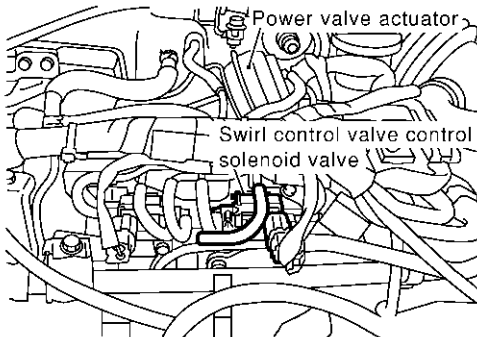

Condition	Vacuum
12V direct current supply	Should exist.
No supply	Should not exist.

Operation takes less than 1 second.

SEF005Z

OK or NG

OK	▶	GO TO 7.
NG	▶	Replace intake manifold collector assembly.

7 CHECK INTERMITTENT INCIDENT

Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.

▶ **INSPECTION END**

DTC P1130 SWIRL CONTROL VALVE CONTROL SOLENOID VALVE

Diagnostic Procedure (Cont'd)

PROCEDURE B

NBEC1049S02



1	CHECK INTAKE SYSTEM	
1. Start engine and let it idle. 2. Check intake air system for air leaks.		
OK or NG		
OK (With CONSULT-II)	▶	GO TO 2.
OK (Without CONSULT-II)	▶	GO TO 3.
NG	▶	Repair intake system.

2	CHECK SWIRL CONTROL VALVE CONTROL SOLENOID VALVE CIRCUIT																			
Ⓔ With CONSULT-II 1. Select "SWIRL CONT SOL VALVE" in "ACTIVE TEST" mode with CONSULT-II. 2. Touch "ON" and "OFF" on CONSULT-II screen.																				
<table border="1" style="margin: auto;"> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <td>SWIRL CONT SOL VALVE</td> <td>OFF</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>IACV-AAC/V</td> <td>XXX step</td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> </table>			ACTIVE TEST		SWIRL CONT SOL VALVE	OFF	MONITOR		ENG SPEED	XXX rpm	IACV-AAC/V	XXX step								
ACTIVE TEST																				
SWIRL CONT SOL VALVE	OFF																			
MONITOR																				
ENG SPEED	XXX rpm																			
IACV-AAC/V	XXX step																			
3. Make sure that clicking sound is heard from the swirl control valve control solenoid valve.																				
OK or NG																				
OK	▶	GO TO 6.																		
NG	▶	GO TO 3.																		

SEF003Z

DTC P1130 SWIRL CONTROL VALVE CONTROL SOLENOID VALVE

Diagnostic Procedure (Cont'd)

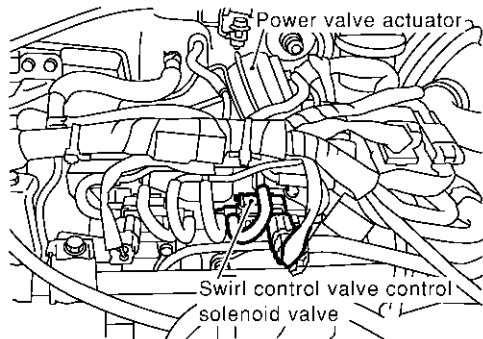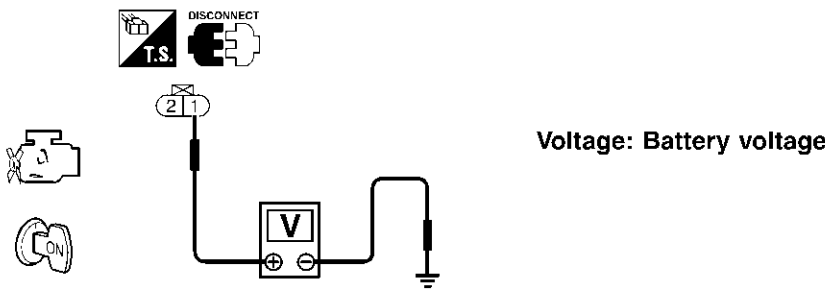3	CHECK SWIRL CONTROL VALVE CONTROL SOLENOID VALVE POWER SUPPLY CIRCUIT
<p>1. Turn ignition switch "OFF". 2. Disconnect swirl control valve control solenoid valve harness connector.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF002Z</p> <p>3. Turn ignition switch "ON". 4. Check voltage between swirl control valve control solenoid valve terminal 1 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p style="text-align: center;">OK or NG</p> <p style="text-align: right;">SEF619X</p> </div>	
OK	▶ GO TO 5.
NG	▶ GO TO 4.


4	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M32, F23 ● Fuse block (J/B) connector M10 ● 10A fuse ● Harness for open or short between swirl control valve control solenoid valve and fuse 	
▶	Repair harness or connectors.

5	CHECK SWIRL CONTROL VALVE CONTROL SOLENOID VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 29 and swirl control valve control solenoid valve terminal 2. Refer to Wiring Diagram. Continuity should exist. 4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 6.
NG	▶ Repair open circuit, short to ground or short to power in harness connectors.

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P1130 SWIRL CONTROL VALVE CONTROL SOLENOID VALVE

Diagnostic Procedure (Cont'd)

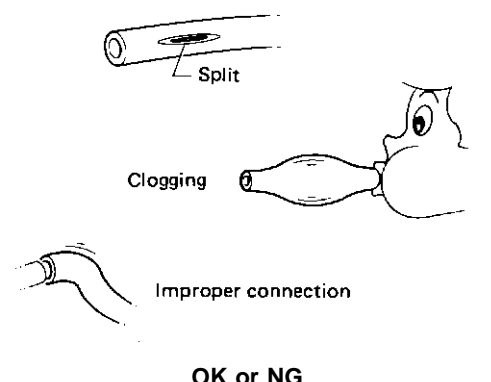6	CHECK HOSES
<p>Check hoses and tubes between intake manifold, and swirl control valve actuator for crack, clogging, improper connection or disconnection.</p> <div data-bbox="568 273 1055 651"><p>The diagrams show three types of hose problems: 1. A hose with a longitudinal crack labeled 'Split'. 2. A hose that is swollen and blocked at the end, labeled 'Clogging'. 3. A hose that is not properly seated on its fitting, labeled 'Improper connection'. Below these diagrams is the text 'OK or NG'.</p></div>	
OK	▶ GO TO 7.
NG	▶ Repair hoses or tubes.

SEF109L


DTC P1130 SWIRL CONTROL VALVE CONTROL SOLENOID VALVE

Diagnostic Procedure (Cont'd)

7 CHECK SWIRL CONTROL VALVE CONTROL SOLENOID VALVE

Ⓔ With CONSULT-II

1. Reconnect the disconnected harness connectors.
2. Start engine and let it idle.
3. Remove vacuum hose connected to swirl control valve actuator.
4. Select "SWIRL CONT SOL/V" in "ACTIVE TEST" mode with CONSULT-II.
5. Touch "ON" and "OFF" on CONSULT-II screen.
6. Check vacuum existence and operation delay time under the following conditions.

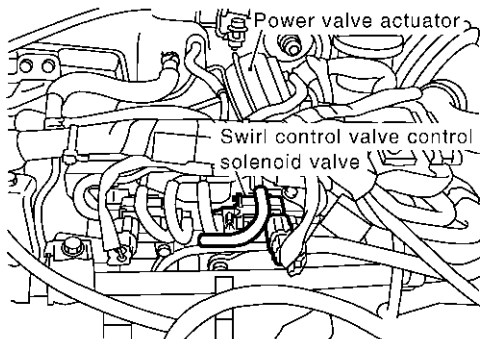

SWIRL CONT SOL/ VALVE	Vacuum
ON	Should exist.
OFF	Should not exist.



Operation takes less than 1 second.



SEC596D

⊗ Without CONSULT-II

1. Reconnect ECM harness connector.
2. Remove vacuum hose connected to swirl control valve actuator.
3. Start engine and let it idle.
4. Apply 12V of direct current between swirl control valve control solenoid valve terminals 1 and 2.
5. Check vacuum existence and operation delay time under the following conditions.

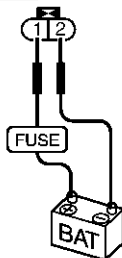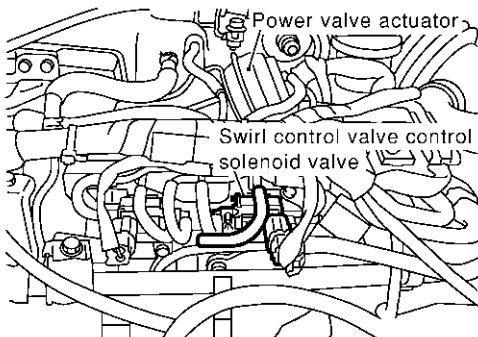

Condition	Vacuum
12V direct current supply	Should exist.
No supply	Should not exist.

Operation takes less than 1 second.

SEF005Z

OK or NG

OK	▶	GO TO 8.
NG	▶	Replace intake manifold collector assembly.

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX


DTC P1130 SWIRL CONTROL VALVE CONTROL SOLENOID VALVE

Diagnostic Procedure (Cont'd)

8 CHECK SWIRL CONTROL VALVE ACTUATOR

Ⓔ With CONSULT-II


1. Reconnect vacuum hose between swirl control valve actuator and swirl control valve control solenoid valve.
2. Start engine and let it idle.
3. Select "SWIRL CONT SOL/V" in "ACTIVE TEST" mode.
4. Touch "ON" and "OFF" on CONSULT-II screen.
5. Make sure that swirl control valve actuator rod moves according to "SWIRL CONT SOL/V" indication.

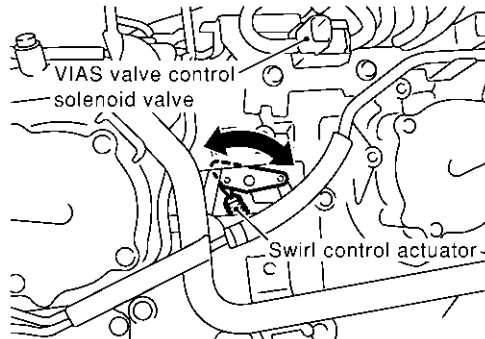

SEF006Z

ⓧ Without CONSULT-II

1. Reconnect vacuum hose between swirl control valve actuator and swirl control valve control solenoid valve.
2. Start engine and let it idle.
3. Apply 12V direct current between swirl control valve control solenoid valve terminals 1 and 2.
4. Make sure that swirl control valve actuator rod moves according to 12V direct current being applied.

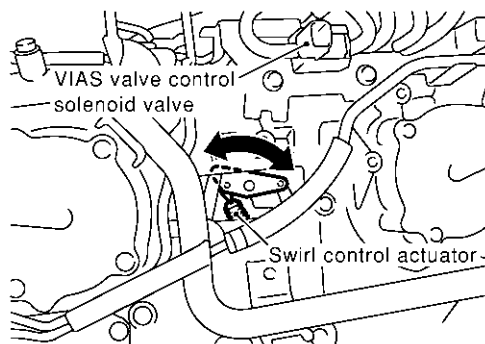

SEF006Z

OK or NG

OK ► GO TO 9.

NG ► Replace swirl control valve and actuator.

DTC P1130 SWIRL CONTROL VALVE CONTROL SOLENOID VALVE

Diagnostic Procedure (Cont'd)

9	CHECK SWIRL CONTROL VALVE CONTROL VACUUM CHECK SWITCH									
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect vacuum hose connected to swirl control valve control vacuum check switch. 3. Attach vacuum pump to swirl control valve control vacuum check switch. 4. Turn ignition switch "ON". 5. Check voltage between ECM terminal 55 and ground under the following conditions. 										
		<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Applied pressure</th> <th style="text-align: center;">Voltage V</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">More than -20.0 kPa (-150 mmHg, -5.91 inHg)</td> <td style="text-align: center;">Engine ground</td> </tr> <tr> <td style="text-align: center;">-20.0 to -23.0 kPa (-150 to -172 mmHg, -5.91 to -6.77 inHg)</td> <td style="text-align: center;">Engine ground or Approx. 4.8</td> </tr> <tr> <td style="text-align: center;">Less than -23.0 kPa (-172 mmHg, -6.77 inHg)</td> <td style="text-align: center;">Approx. 4.8</td> </tr> </tbody> </table>	Applied pressure	Voltage V	More than -20.0 kPa (-150 mmHg, -5.91 inHg)	Engine ground	-20.0 to -23.0 kPa (-150 to -172 mmHg, -5.91 to -6.77 inHg)	Engine ground or Approx. 4.8	Less than -23.0 kPa (-172 mmHg, -6.77 inHg)	Approx. 4.8
Applied pressure	Voltage V									
More than -20.0 kPa (-150 mmHg, -5.91 inHg)	Engine ground									
-20.0 to -23.0 kPa (-150 to -172 mmHg, -5.91 to -6.77 inHg)	Engine ground or Approx. 4.8									
Less than -23.0 kPa (-172 mmHg, -6.77 inHg)	Approx. 4.8									
SEF709X										
OK or NG										
OK	▶	GO TO 10.								
NG	▶	Replace swirl control valve control vacuum check switch.								

10	CHECK MASS AIR FLOW SENSOR											
<ol style="list-style-type: none"> 1. Reconnect harness connectors disconnected. 2. Start engine and warm it up to normal operating temperature. 3. Check voltage between ECM terminal 61 (Mass air flow sensor signal) and ground. 												
		<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Condition</th> <th style="text-align: center;">Voltage V</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Ignition switch "ON" (Engine stopped.)</td> <td style="text-align: center;">Approx. 1.0</td> </tr> <tr> <td style="text-align: center;">Idle (Engine is warmed-up to normal operating temperature.)</td> <td style="text-align: center;">1.2 - 1.8</td> </tr> <tr> <td style="text-align: center;">2,500 rpm (Engine is warmed-up to normal operating temperature.)</td> <td style="text-align: center;">1.6 - 2.2</td> </tr> <tr> <td style="text-align: center;">Idle to about 4,000 rpm*</td> <td style="text-align: center;">1.2 - 1.8 to Approx. 4.0</td> </tr> </tbody> </table> <p style="font-size: small; margin-top: 5px;">*: Check for linear voltage rise in response to engine being increased to about 4,000 rpm.</p>	Condition	Voltage V	Ignition switch "ON" (Engine stopped.)	Approx. 1.0	Idle (Engine is warmed-up to normal operating temperature.)	1.2 - 1.8	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.6 - 2.2	Idle to about 4,000 rpm*	1.2 - 1.8 to Approx. 4.0
Condition	Voltage V											
Ignition switch "ON" (Engine stopped.)	Approx. 1.0											
Idle (Engine is warmed-up to normal operating temperature.)	1.2 - 1.8											
2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.6 - 2.2											
Idle to about 4,000 rpm*	1.2 - 1.8 to Approx. 4.0											
SEF298X												
<ol style="list-style-type: none"> 4. If the voltage is out of specification, disconnect MAF sensor harness connector and connect it again. Then repeat above check. 												
OK or NG												
OK (With CONSULT-II)	▶	GO TO 11.										
OK (Without CONSULT-II)	▶	GO TO 12.										
NG	▶	Replace mass air flow sensor.										

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P1130 SWIRL CONTROL VALVE CONTROL SOLENOID VALVE

Diagnostic Procedure (Cont'd)

11	CHECK THROTTLE POSITION SENSOR																		
<p>E With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Stop engine (ignition switch OFF). 3. Turn ignition switch ON. 4. Select "DATA MONITOR" mode with CONSULT-II. 5. Check voltage of "THRTL POS SEN" under the following conditions. <p>Voltage measurement must be made with throttle position sensor installed in vehicle.</p> <div style="display: flex; justify-content: space-around; align-items: flex-start;"> <table border="1" style="border-collapse: collapse; text-align: center;"> <thead> <tr> <th colspan="2">DATA MONITOR</th> </tr> <tr> <th>MONITOR</th> <th>NO DTC</th> </tr> </thead> <tbody> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>COOLAN TEMP/S</td> <td>XXX °C</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXX V</td> </tr> </tbody> </table> <table border="1" style="border-collapse: collapse; text-align: center;"> <thead> <tr> <th>Throttle valve conditions</th> <th>THRTL POS SEN</th> </tr> </thead> <tbody> <tr> <td>Completely closed (a)</td> <td>0.15 - 0.85V</td> </tr> <tr> <td>Partially open</td> <td>Between (a) and (b)</td> </tr> <tr> <td>Completely open (b)</td> <td>3.5 - 4.7V</td> </tr> </tbody> </table> </div> <p style="text-align: right; margin-top: 10px;">SEF062Y</p> <p style="text-align: center; margin-top: 10px;">OK or NG</p>		DATA MONITOR		MONITOR	NO DTC	ENG SPEED	XXX rpm	COOLAN TEMP/S	XXX °C	THRTL POS SEN	XXX V	Throttle valve conditions	THRTL POS SEN	Completely closed (a)	0.15 - 0.85V	Partially open	Between (a) and (b)	Completely open (b)	3.5 - 4.7V
DATA MONITOR																			
MONITOR	NO DTC																		
ENG SPEED	XXX rpm																		
COOLAN TEMP/S	XXX °C																		
THRTL POS SEN	XXX V																		
Throttle valve conditions	THRTL POS SEN																		
Completely closed (a)	0.15 - 0.85V																		
Partially open	Between (a) and (b)																		
Completely open (b)	3.5 - 4.7V																		
OK	▶ GO TO 14.																		
NG	▶ GO TO 13.																		

12	CHECK THROTTLE POSITION SENSOR								
<p>X Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Stop engine (ignition switch OFF). 3. Turn ignition switch ON. 4. Check voltage between ECM terminal 91 (Throttle position sensor signal) and ground. <p>Voltage measurement must be made with throttle position sensor installed in vehicle.</p> <div style="text-align: center; margin-top: 10px;"> <table border="1" style="border-collapse: collapse;"> <thead> <tr> <th>Throttle valve conditions</th> <th>Voltage</th> </tr> </thead> <tbody> <tr> <td>Completely closed (a)</td> <td>0.15 - 0.85V</td> </tr> <tr> <td>Partially open</td> <td>Between (a) and (b)</td> </tr> <tr> <td>Completely open (b)</td> <td>3.5 - 4.7V</td> </tr> </tbody> </table> </div> <p style="text-align: right; margin-top: 10px;">MTBL0231</p> <p style="text-align: center; margin-top: 10px;">OK or NG</p>		Throttle valve conditions	Voltage	Completely closed (a)	0.15 - 0.85V	Partially open	Between (a) and (b)	Completely open (b)	3.5 - 4.7V
Throttle valve conditions	Voltage								
Completely closed (a)	0.15 - 0.85V								
Partially open	Between (a) and (b)								
Completely open (b)	3.5 - 4.7V								
OK	▶ GO TO 14.								
NG	▶ GO TO 13.								

DTC P1130 SWIRL CONTROL VALVE CONTROL SOLENOID VALVE

Diagnostic Procedure (Cont'd)

13	ADJUST CLOSED THROTTLE POSITION SWITCH									
Adjust closed throttle position switch. Refer to "Basic Inspection", EC-116.										
<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 40%;">Items</th> <th style="width: 60%;">Specifications</th> </tr> </thead> <tbody> <tr> <td>Ignition timing</td> <td>15° ± 5° BTDC</td> </tr> <tr> <td>Closed throttle position switch idle position adjustment</td> <td>Feeler gauge thickness and switch condition 0.05 mm (0.0020 in): ON 0.15 mm (0.0059 in): OFF</td> </tr> <tr> <td>Target idle speed</td> <td>750 ± 50 rpm (in "P" or "N" position)</td> </tr> </tbody> </table>			Items	Specifications	Ignition timing	15° ± 5° BTDC	Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.05 mm (0.0020 in): ON 0.15 mm (0.0059 in): OFF	Target idle speed	750 ± 50 rpm (in "P" or "N" position)
Items	Specifications									
Ignition timing	15° ± 5° BTDC									
Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.05 mm (0.0020 in): ON 0.15 mm (0.0059 in): OFF									
Target idle speed	750 ± 50 rpm (in "P" or "N" position)									
MTBL1810										
OK or NG										
OK	▶	GO TO 14.								
NG	▶	Replace throttle position sensor. To adjust it, perform "Basic Inspection", EC-116.								


GI

MA

EM

LC

EC

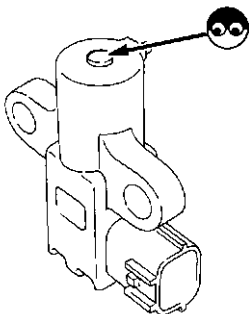14	CHECK CRANKSHAFT POSITION SENSOR (REF)-I	
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Loosen the fixing bolts and remove the CKP sensor (REF). 3. Visually check the CKP sensor (REF) for chipping. 		
		
SEF585P		
OK or NG		
OK	▶	GO TO 15.
NG	▶	Replace crankshaft position sensor (REF).

FE

AT

TF


PD

AX

SU

BR

ST

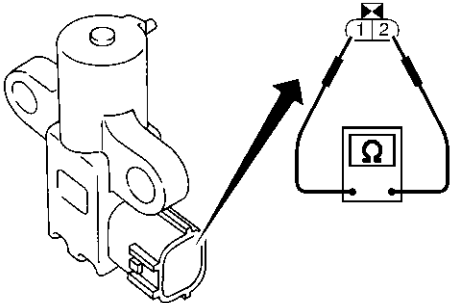15	CHECK CRANKSHAFT POSITION SENSOR (REF)-II	
Check resistance between CKP sensor (REF) terminals 1 and 2.		
		
<p>Resistance: Approximately 470 - 570 Ω [AT 20°C (68°F)]</p>		
SEF350X		
OK or NG		
OK	▶	GO TO 16.
NG	▶	Replace crankshaft position sensor (REF).

RS

BT

HA

SC

EL

IDX

DTC P1130 SWIRL CONTROL VALVE CONTROL SOLENOID VALVE

Diagnostic Procedure (Cont'd)

16	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	
▶	INSPECTION END

PROCEDURE C

NBEC1049S03



1	INSPECTION START
Do you have CONSULT-II?	
Yes or No	
Yes	▶ GO TO 2.
No	▶ GO TO 3.

2	CHECK SWIRL CONTROL VALVE CONTROL SOLENOID VALVE CIRCUIT																												
<p>Ⓔ With CONSULT-II</p> <ol style="list-style-type: none"> Turn ignition switch "OFF". Select "SWIRL CONT SOL VALVE" in "ACTIVE TEST" mode with CONSULT-II. Touch "ON" and "OFF" on CONSULT-II screen. 																													
<table border="1" style="margin: auto;"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <td>SWIRL CONT SOL VALVE</td> <td>OFF</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>IACV-AAC/V</td> <td>XXX step</td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> </thead> <tbody> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> </tbody> </table>		ACTIVE TEST		SWIRL CONT SOL VALVE	OFF	MONITOR		ENG SPEED	XXX rpm	IACV-AAC/V	XXX step																		
ACTIVE TEST																													
SWIRL CONT SOL VALVE	OFF																												
MONITOR																													
ENG SPEED	XXX rpm																												
IACV-AAC/V	XXX step																												
<p>4. Make sure that clicking sound is heard from the swirl control valve control solenoid valve.</p> <p style="text-align: center;">OK or NG</p>																													
OK	▶ GO TO 6.																												
NG	▶ GO TO 3.																												

SEF003Z

DTC P1130 SWIRL CONTROL VALVE CONTROL SOLENOID VALVE

Diagnostic Procedure (Cont'd)

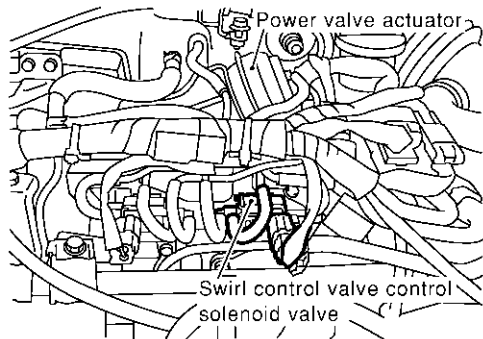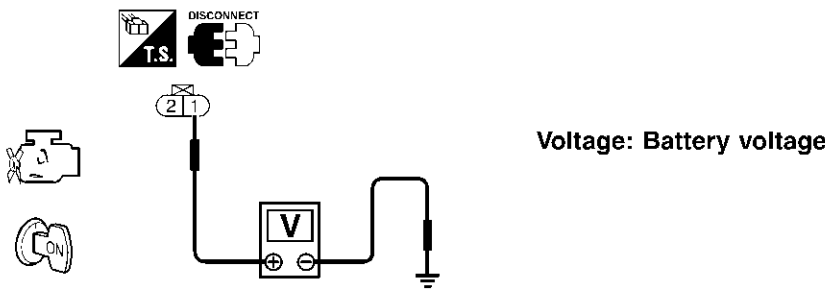3	CHECK SWIRL CONTROL VALVE CONTROL SOLENOID VALVE POWER SUPPLY CIRCUIT
<p>1. Turn ignition switch "OFF". 2. Disconnect swirl control valve control solenoid valve harness connector.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF002Z</p> <p>3. Turn ignition switch "ON". 4. Check voltage between swirl control valve control solenoid valve terminal 1 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p style="text-align: center;">OK or NG</p> <p style="text-align: right;">SEF619X</p> </div>	
OK	▶ GO TO 5.
NG	▶ GO TO 4.


4	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M32, F23 ● Fuse block (J/B) connector M10 ● 10A fuse ● Harness for open or short between swirl control valve control solenoid valve and fuse 	
▶	Repair harness or connectors.

5	CHECK SWIRL CONTROL VALVE CONTROL SOLENOID VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 29 and terminal 2. Refer to Wiring Diagram. Continuity should exist. 4. Also, check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 6.
NG	▶ Repair open circuit, short to ground or short to power in harness connectors.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P1130 SWIRL CONTROL VALVE CONTROL SOLENOID VALVE

Diagnostic Procedure (Cont'd)

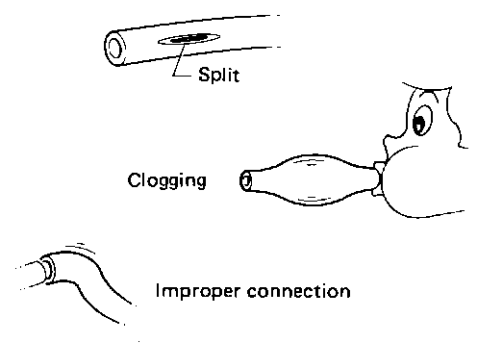6	CHECK HOSES
<p>Check hoses and tubes between air cleaner and swirl control valve vacuum check switch for clogging or improper connection.</p>  <p>The diagrams show three types of hose problems: 1. A hose with a hole labeled 'Split'. 2. A hose that is swollen and blocked, labeled 'Clogging'. 3. A hose that is not properly attached to a fitting, labeled 'Improper connection'. Below these diagrams is the text 'OK or NG'.</p> <p style="text-align: right;">SEF109L</p>	
OK	▶ GO TO 7.
NG	▶ Repair hoses or tubes.


DTC P1130 SWIRL CONTROL VALVE CONTROL SOLENOID VALVE

Diagnostic Procedure (Cont'd)

7 CHECK SWIRL CONTROL VALVE CONTROL SOLENOID VALVE

Ⓔ With CONSULT-II

1. Reconnect the disconnected harness connectors.
2. Start engine and let it idle.
3. Remove vacuum hose connected to swirl control valve actuator.
4. Select "SWIRL CONT SOL/V" in "ACTIVE TEST" mode with CONSULT-II.
5. Touch "ON" and "OFF" on CONSULT-II screen.
6. Check vacuum existence and operation delay time under the following conditions.

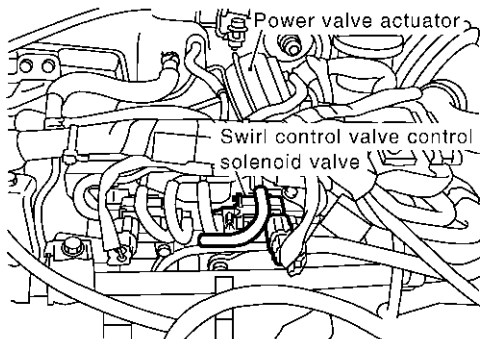

SWIRL CONT SOL/ VALVE	Vacuum
ON	Should exist.
OFF	Should not exist.



Operation takes less than 1 second.



SEC596D

ⓧ Without CONSULT-II

1. Reconnect ECM harness connector.
2. Remove vacuum hose connected to swirl control valve actuator.
3. Start engine and let it idle.
4. Apply 12V of direct current between swirl control valve control solenoid valve terminals 1 and 2.
5. Check vacuum existence and operation delay time under the following conditions.

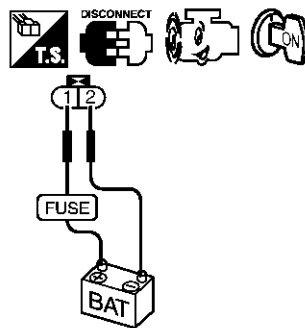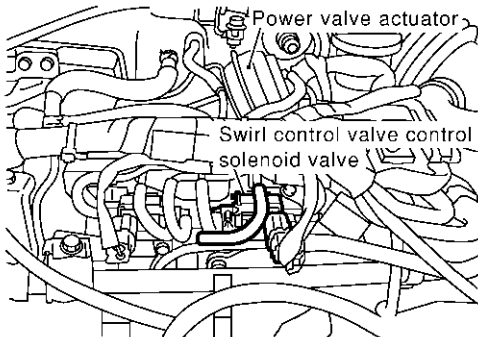

Condition	Vacuum
12V direct current supply	Should exist.
No supply	Should not exist.

Operation takes less than 1 second.

SEF005Z

OK or NG

OK	▶	GO TO 8.
NG	▶	Replace intake manifold collector assembly.

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA


SC


EL

IDX

DTC P1130 SWIRL CONTROL VALVE CONTROL SOLENOID VALVE


Diagnostic Procedure (Cont'd)

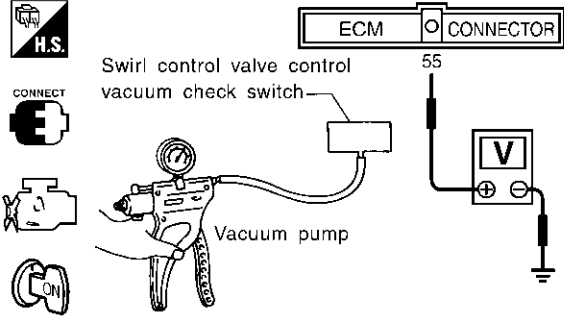8	CHECK SWIRL CONTROL VALVE CONTROL VACUUM CHECK SWITCH								
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect vacuum hose connected to swirl control valve control vacuum check switch. 3. Attach vacuum pump to swirl control valve control vacuum check switch. 4. Turn ignition switch "ON". 5. Check voltage between ECM terminal 55 and ground under the following conditions. 									
<div style="display: flex; justify-content: space-between; align-items: flex-start;"> <div style="width: 45%;">  <p style="font-size: small;">Swirl control valve control vacuum check switch</p> <p style="font-size: small;">Vacuum pump</p> <p style="font-size: small;">ECM CONNECTOR</p> <p style="font-size: small;">55</p> <p style="font-size: small;">V</p> </div> <div style="width: 45%; border: 1px solid black; padding: 5px;"> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Applied pressure</th> <th style="text-align: center;">Voltage V</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">More than -20.0 kPa (-150 mmHg, -5.91 inHg)</td> <td style="text-align: center;">Engine ground</td> </tr> <tr> <td style="text-align: center;">-20.0 to -23.0 kPa (-150 to -172 mmHg, -5.91 to -6.77 inHg)</td> <td style="text-align: center;">Engine ground or Approx. 4.8</td> </tr> <tr> <td style="text-align: center;">Less than -23.0 kPa (-172 mmHg, -6.77 inHg)</td> <td style="text-align: center;">Approx. 4.8</td> </tr> </tbody> </table> </div> </div>		Applied pressure	Voltage V	More than -20.0 kPa (-150 mmHg, -5.91 inHg)	Engine ground	-20.0 to -23.0 kPa (-150 to -172 mmHg, -5.91 to -6.77 inHg)	Engine ground or Approx. 4.8	Less than -23.0 kPa (-172 mmHg, -6.77 inHg)	Approx. 4.8
Applied pressure	Voltage V								
More than -20.0 kPa (-150 mmHg, -5.91 inHg)	Engine ground								
-20.0 to -23.0 kPa (-150 to -172 mmHg, -5.91 to -6.77 inHg)	Engine ground or Approx. 4.8								
Less than -23.0 kPa (-172 mmHg, -6.77 inHg)	Approx. 4.8								
SEF709X									
OK or NG									
OK	▶	GO TO 9.							
NG	▶	Replace swirl control valve control vacuum check switch.							

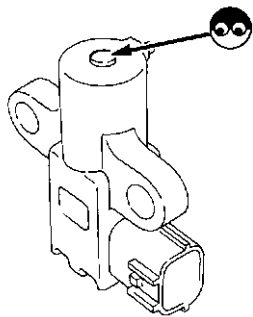9	CHECK CRANKSHAFT POSITION SENSOR (REF)-I	
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Loosen the fixing bolts and remove the CKP sensor (REF). 3. Visually check the CKP sensor (REF) for chipping. 		
		
SEF585P		
OK or NG		
OK	▶	GO TO 10.
NG	▶	Replace crankshaft position sensor (REF).

DTC P1130 SWIRL CONTROL VALVE CONTROL SOLENOID VALVE

Diagnostic Procedure (Cont'd)

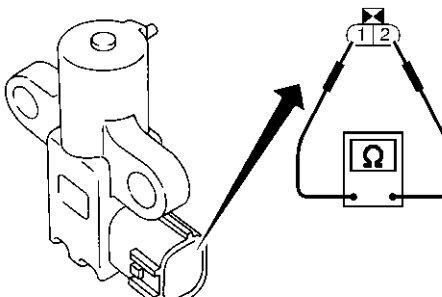10	CHECK CRANKSHAFT POSITION SENSOR (REF)-II	
Check resistance between CKP sensor (REF) terminals 1 and 2.		
		<p>Resistance: Approximately 470 - 570 Ω [AT 20°C (68°F)]</p>
SEF350X		
OK or NG		
OK (With CONSULT-II)	▶	GO TO 11.
OK (Without CONSULT-II)	▶	GO TO 12.
NG	▶	Replace crankshaft position sensor (REF).

11	CHECK THROTTLE POSITION SENSOR																			
<p>Ⓔ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Stop engine (ignition switch OFF). 3. Turn ignition switch ON. 4. Select "DATA MONITOR" mode with CONSULT-II. 5. Check voltage of "THRTL POS SEN" under the following conditions. <p>Voltage measurement must be made with throttle position sensor installed in vehicle.</p>																				
<table border="1" style="border-collapse: collapse; width: 150px;"> <thead> <tr> <th colspan="2" style="text-align: center;">DATA MONITOR</th> </tr> <tr> <th style="text-align: center;">MONITOR</th> <th style="text-align: center;">NO DTC</th> </tr> </thead> <tbody> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>COOLAN TEMP/S</td> <td>XXX °C</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXX V</td> </tr> </tbody> </table>		DATA MONITOR		MONITOR	NO DTC	ENG SPEED	XXX rpm	COOLAN TEMP/S	XXX °C	THRTL POS SEN	XXX V	<table border="1" style="border-collapse: collapse; width: 200px;"> <thead> <tr> <th style="text-align: center;">Throttle valve conditions</th> <th style="text-align: center;">THRTL POS SEN</th> </tr> </thead> <tbody> <tr> <td>Completely closed (a)</td> <td style="text-align: center;">0.15 - 0.85V</td> </tr> <tr> <td>Partially open</td> <td style="text-align: center;">Between (a) and (b)</td> </tr> <tr> <td>Completely open (b)</td> <td style="text-align: center;">3.5 - 4.7V</td> </tr> </tbody> </table>	Throttle valve conditions	THRTL POS SEN	Completely closed (a)	0.15 - 0.85V	Partially open	Between (a) and (b)	Completely open (b)	3.5 - 4.7V
DATA MONITOR																				
MONITOR	NO DTC																			
ENG SPEED	XXX rpm																			
COOLAN TEMP/S	XXX °C																			
THRTL POS SEN	XXX V																			
Throttle valve conditions	THRTL POS SEN																			
Completely closed (a)	0.15 - 0.85V																			
Partially open	Between (a) and (b)																			
Completely open (b)	3.5 - 4.7V																			
SEF062Y																				
OK or NG																				
OK	▶	GO TO 14.																		
NG	▶	GO TO 13.																		

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P1130 SWIRL CONTROL VALVE CONTROL SOLENOID VALVE

Diagnostic Procedure (Cont'd)


12	CHECK THROTTLE POSITION SENSOR								
<p> Without CONSULT-II</p> <ol style="list-style-type: none">1. Start engine and warm it up to normal operating temperature.2. Stop engine (ignition switch OFF).3. Turn ignition switch ON.4. Check voltage between ECM terminal 91 (Throttle position sensor signal) and ground. Voltage measurement must be made with throttle position sensor installed in vehicle.									
<table border="1"><thead><tr><th>Throttle valve conditions</th><th>Voltage</th></tr></thead><tbody><tr><td>Completely closed (a)</td><td>0.15 - 0.85V</td></tr><tr><td>Partially open</td><td>Between (a) and (b)</td></tr><tr><td>Completely open (b)</td><td>3.5 - 4.7V</td></tr></tbody></table>		Throttle valve conditions	Voltage	Completely closed (a)	0.15 - 0.85V	Partially open	Between (a) and (b)	Completely open (b)	3.5 - 4.7V
Throttle valve conditions	Voltage								
Completely closed (a)	0.15 - 0.85V								
Partially open	Between (a) and (b)								
Completely open (b)	3.5 - 4.7V								
MTBL0231									
OK or NG									
OK	▶ GO TO 14.								
NG	▶ GO TO 13.								

13	ADJUST CLOSED THROTTLE POSITION SWITCH								
Adjust closed throttle position switch. Refer to "Basic Inspection", EC-116.									
<table border="1"><thead><tr><th>Items</th><th>Specifications</th></tr></thead><tbody><tr><td>Ignition timing</td><td>15° ± 5° BTDC</td></tr><tr><td>Closed throttle position switch idle position adjustment</td><td>Feeler gauge thickness and switch condition 0.05 mm (0.0020 in): ON 0.15 mm (0.0059 in): OFF</td></tr><tr><td>Target idle speed</td><td>750 ± 50 rpm (in "P" or "N" position)</td></tr></tbody></table>		Items	Specifications	Ignition timing	15° ± 5° BTDC	Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.05 mm (0.0020 in): ON 0.15 mm (0.0059 in): OFF	Target idle speed	750 ± 50 rpm (in "P" or "N" position)
Items	Specifications								
Ignition timing	15° ± 5° BTDC								
Closed throttle position switch idle position adjustment	Feeler gauge thickness and switch condition 0.05 mm (0.0020 in): ON 0.15 mm (0.0059 in): OFF								
Target idle speed	750 ± 50 rpm (in "P" or "N" position)								
MTBL1810									
OK or NG									
OK	▶ GO TO 14.								
NG	▶ Replace throttle position sensor. To adjust it, perform "Basic Inspection", EC-116.								

14	CHECK INTERMITTENT INCIDENT
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	
	▶ INSPECTION END

DTC P1131 SWIRL CONTROL VALVE CONTROL SOLENOID VALVE

Component Description

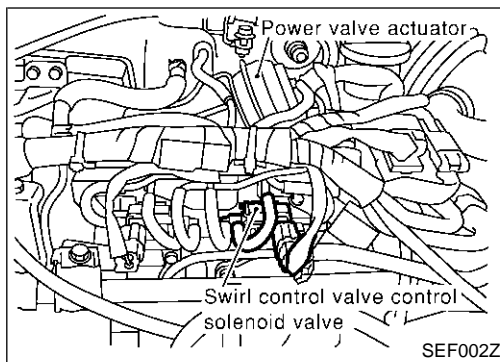

Component Description

NBEC1050

The swirl control valve control solenoid valve responds to signals from the ECM. When the ECM sends an ON (ground) signal, the solenoid valve is bypassed to apply intake manifold vacuum to the swirl control valve actuator. This operation closes the swirl control valve. When the ECM sends an OFF signal, the vacuum signal is cut and the swirl control valve opens.

CONSULT-II Reference Value in Data Monitor Mode

NBEC1051

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
SWRL CONT S/V	● Engine speed: Idle Engine coolant temperature is between 15°C (59°F) to 50°C (122°F).	ON
	Engine coolant temperature is above 55°C (131°F).	OFF

ECM Terminals and Reference Value

NBEC1052

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
29	G	Swirl control valve control solenoid valve	[Engine is running] ● Idle speed ● Engine coolant temperature is between 15 to 50°C (59 to 122°F).	0 - 1.0V
			[Engine is running] ● Idle speed ● Engine coolant temperature is above 55°C (131°F).	BATTERY VOLTAGE (11 - 14V)

On Board Diagnosis Logic

NBEC1053

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P1131 1131	Swirl control valve control solenoid valve circuit	An improper voltage signal is sent to ECM through swirl control valve control solenoid valve.	<ul style="list-style-type: none"> ● Harness or connectors (The swirl control valve control solenoid valve circuit is open or shorted.) ● Swirl control valve control solenoid valve

DTC P1131 SWIRL CONTROL VALVE CONTROL SOLENOID VALVE

DTC Confirmation Procedure

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm

SEF058Y

DTC Confirmation Procedure

NBEC1054

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

NBEC1054S01

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Wait at least 5 seconds.
If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-518.

WITH GST

NBEC1054S02

Follow the procedure "With CONSULT-II" above.

DTC P1131 SWIRL CONTROL VALVE CONTROL SOLENOID VALVE

Wiring Diagram

Wiring Diagram

=NBEC1055

EC-SWL/V-01

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT


HA

SC


EL

IDX

— : Detectable line for DTC
 - - - : Non-detectable line for DTC


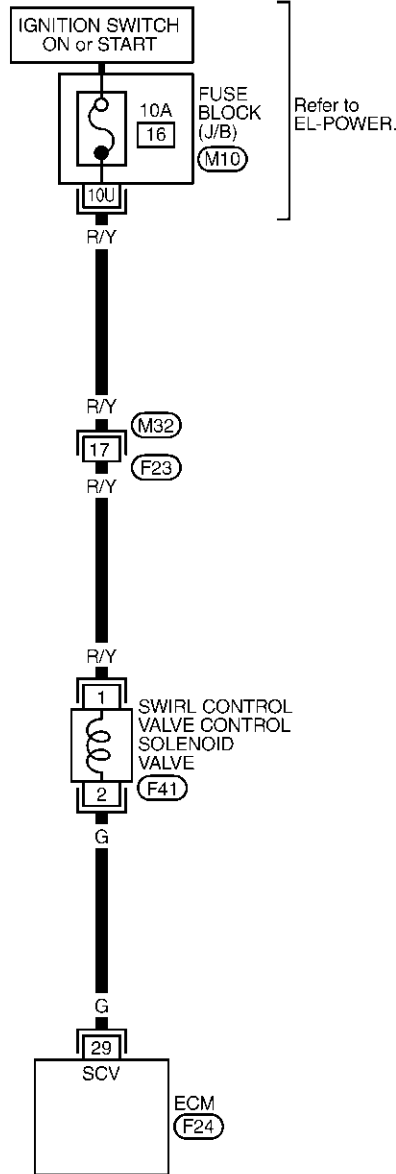


Refer to EL-POWER.



REFER TO THE FOLLOWING.

(M10) - FUSE BLOCK-JUNCTION BOX (J/B)

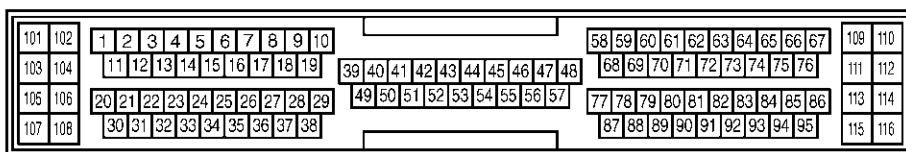

MEC980C


DTC P1131 SWIRL CONTROL VALVE CONTROL SOLENOID VALVE

Diagnostic Procedure

Diagnostic Procedure



NBEC1056

1	INSPECTION START	
Do you have CONSULT-II?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	GO TO 3.

2	CHECK SWIRL CONTROL VALVE CONTROL SOLENOID VALVE CIRCUIT																															
<p> With CONSULT-II</p> <ol style="list-style-type: none"> Turn ignition switch "ON". Select "SWIRL CONT SOL VALVE" in "ACTIVE TEST" mode with CONSULT-II. Touch "ON" and "OFF" on CONSULT-II screen. 																																
<table border="1"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <td>SWIRL CONT SOL VALVE</td> <td>OFF</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>IACV-AAC/V</td> <td>XXX step</td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> </thead> <tbody> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> </tbody> </table>			ACTIVE TEST		SWIRL CONT SOL VALVE	OFF	MONITOR		ENG SPEED	XXX rpm	IACV-AAC/V	XXX step																				
ACTIVE TEST																																
SWIRL CONT SOL VALVE	OFF																															
MONITOR																																
ENG SPEED	XXX rpm																															
IACV-AAC/V	XXX step																															
SEF003Z																																
4. Make sure that clicking sound is heard from the swirl control valve control solenoid valve.																																
OK or NG																																
OK	▶	GO TO 6.																														
NG	▶	GO TO 3.																														

DTC P1131 SWIRL CONTROL VALVE CONTROL SOLENOID VALVE

Diagnostic Procedure (Cont'd)

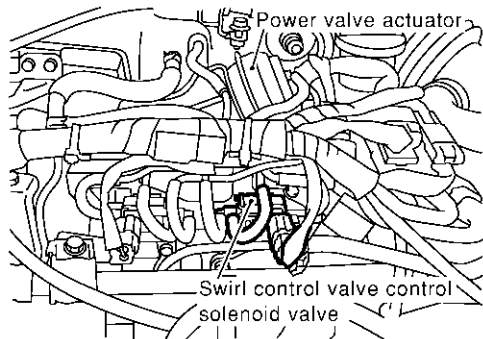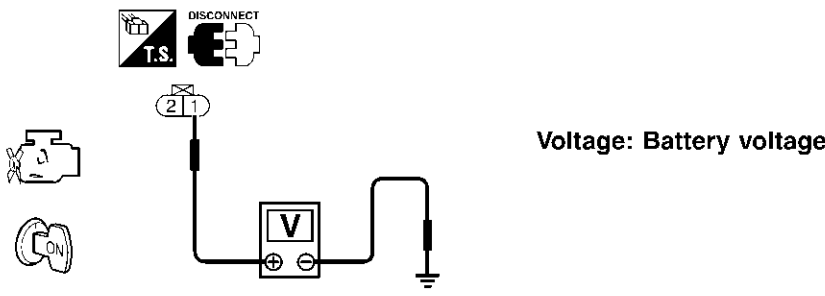3	CHECK SWIRL CONTROL VALVE CONTROL SOLENOID VALVE POWER SUPPLY CIRCUIT
<p>1. Turn ignition switch "OFF". 2. Disconnect swirl control valve control solenoid valve harness connector.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF002Z</p> <p>3. Turn ignition switch "ON". 4. Check voltage between swirl control valve control solenoid valve terminal 1 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p style="text-align: center;">OK or NG</p> <p style="text-align: right;">SEF619X</p> </div>	
OK	▶ GO TO 5.
NG	▶ GO TO 4.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

4	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M32, F23 ● Fuse block (J/B) connector M10 ● 10A fuse ● Harness for open or short between swirl control valve control solenoid valve and fuse 	
▶	Repair harness or connectors.

5	CHECK SWIRL CONTROL VALVE CONTROL SOLENOID VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 29 and swirl control valve control solenoid valve terminal 2. Refer to "Wiring Diagram", EC-517. Continuity should exist. 4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 6.
NG	▶ Repair open circuit, short to ground or short to power in harness connectors.


DTC P1131 SWIRL CONTROL VALVE CONTROL SOLENOID VALVE

Diagnostic Procedure (Cont'd)

6 CHECK SWIRL CONTROL VALVE CONTROL SOLENOID VALVE

Ⓔ With CONSULT-II

1. Reconnect the disconnected harness connectors.
2. Start engine and let it idle.
3. Remove vacuum hose connected to swirl control valve actuator.
4. Select "SWIRL CONT SOL VALVE" in "ACTIVE TEST" mode with CONSULT-II.
5. Touch "ON" and "OFF" on CONSULT-II screen.
6. Check vacuum existence and operation delay time under the following conditions.

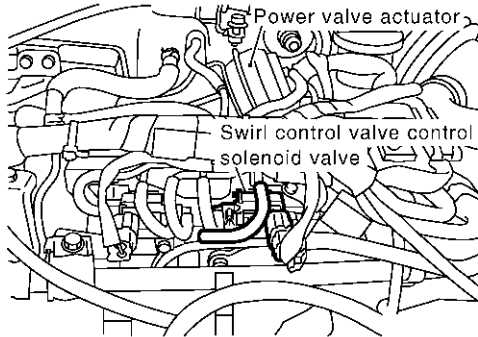

SWIRL CONT SOL/ VALVE	Vacuum
ON	Should exist.
OFF	Should not exist.



Operation takes less than 1 second.



SEC596D

ⓧ Without CONSULT-II

1. Reconnect ECM harness connector.
2. Remove vacuum hose connected to swirl control valve actuator.
3. Start engine and let it idle.
4. Apply 12V of direct current between swirl control valve control solenoid valve terminals 1 and 2.
5. Check vacuum existence and operation delay time under the following conditions.

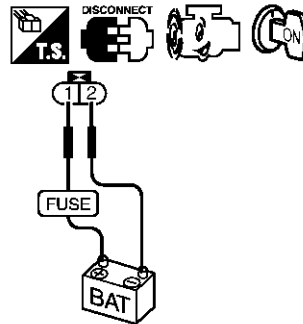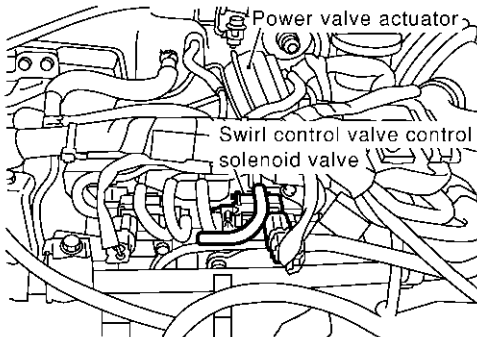

Condition	Vacuum
12V direct current supply	Should exist.
No supply	Should not exist.

Operation takes less than 1 second.

SEF005Z

OK or NG

OK	▶	GO TO 7.
NG	▶	Replace intake manifold collector assembly.


7 CHECK INTERMITTENT INCIDENT

Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.

▶ **INSPECTION END**

DTC P1140, P1145 INTAKE VALVE TIMING CONTROL POSITION SENSOR

Component Description

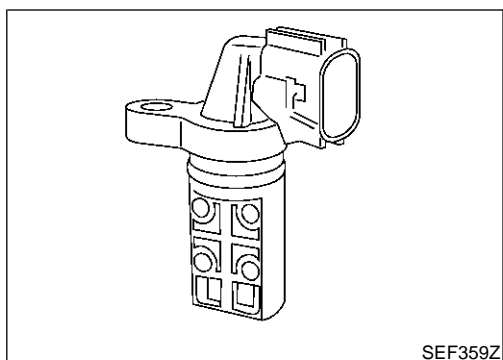

Component Description

NBEC1057

Intake valve advance unit position sensors are located in the front cylinder heads in both bank 1 and bank 2.

This sensor uses a Hall IC (element).

The cam position is determined by the intake primary cam sprocket concave (in three places). The ECM provides feedback to the intake valve timing control for appropriate target valve open-close timing according to drive conditions based on detected cam position.

CONSULT-II Reference Value in Data Monitor Mode

NBEC1058

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
INT/V TIM (B1) INT/V TIM (B2)	<ul style="list-style-type: none"> ● Engine: After warming up ● Shift lever "N" ● Quickly depressed accelerator pedal ● No-load 	Idle	0° CA
		2,000 rpm	Approximately 12 - 18° CA

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P1140, P1145 INTAKE VALVE TIMING CONTROL POSITION SENSOR

ECM Terminals and Reference Value





ECM Terminals and Reference Value

=NBEC1059

Specification data are reference values, and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than the ECM terminals, such as the ground.

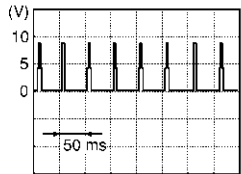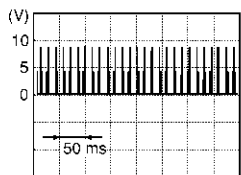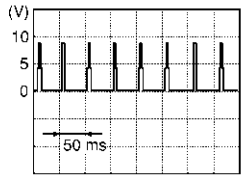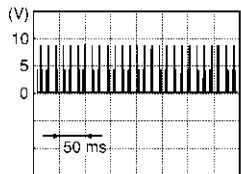TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
79	Y/G	Intake valve timing control position sensors (bank 1)	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0.5V 
			[Engine is running] ● Warm-up condition ● Engine speed is 2,000 rpm.	Approximately 0.5V 
89	OR	Intake valve timing control position sensors (bank 2)	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0.5V 
			[Engine is running] ● Warm-up condition ● Engine speed is 2,000 rpm.	Approximately 0.5V 

On Board Diagnosis Logic

NBEC1060

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P1140 1140 (Bank 1) P1145 1145 (Bank 2)	Intake valve timing control position sensor circuit range/performance	An excessively high or low voltage from the sensor is sent to ECM.	<ul style="list-style-type: none"> ● Harness or connectors (Intake valve timing control position sensor circuit is open or shorted) ● Intake valve timing control position sensor. ● Crankshaft position sensor (REF) ● Crankshaft position sensor (POS) ● Camshaft position sensor (PHASE)

DTC P1140, P1145 INTAKE VALVE TIMING CONTROL POSITION SENSOR

DTC Confirmation Procedure

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
B/FUEL SCHDL	XXX msec
COOLANTENP/S	XXX °C
VHCL SPEED SE	XXX km/h
INT/V TIM (B1)	XXX °CA
INT/V TIM (B2)	XXX °CA
INT/V SOL (B1)	XXX %
INT/V SOL (B2)	XXX %

SEF353Z

DTC Confirmation Procedure

NBEC1061

NOTE:

If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

NBEC1061S01

- 1) Turn ignition switch “ON”.
- 2) Select “DATA MONITOR” mode with CONSULT-II.
- 3) Maintain the following conditions for at least 10 seconds.

Engine speed	More than Idle speed
Selector lever	“P” or “N” position

- 4) If 1st trip DTC is detected, go to “Diagnostic Procedure”, EC-526.

WITH GST

NBEC1061S02

Follow the procedure “With CONSULT-II” above.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P1140, P1145 INTAKE VALVE TIMING CONTROL POSITION SENSOR




Wiring Diagram (Cont'd)

BANK 2

NBEC1062S02


EC-IVCSB2-01

— : Detectable line for DTC
 — : Non-detectable line for DTC

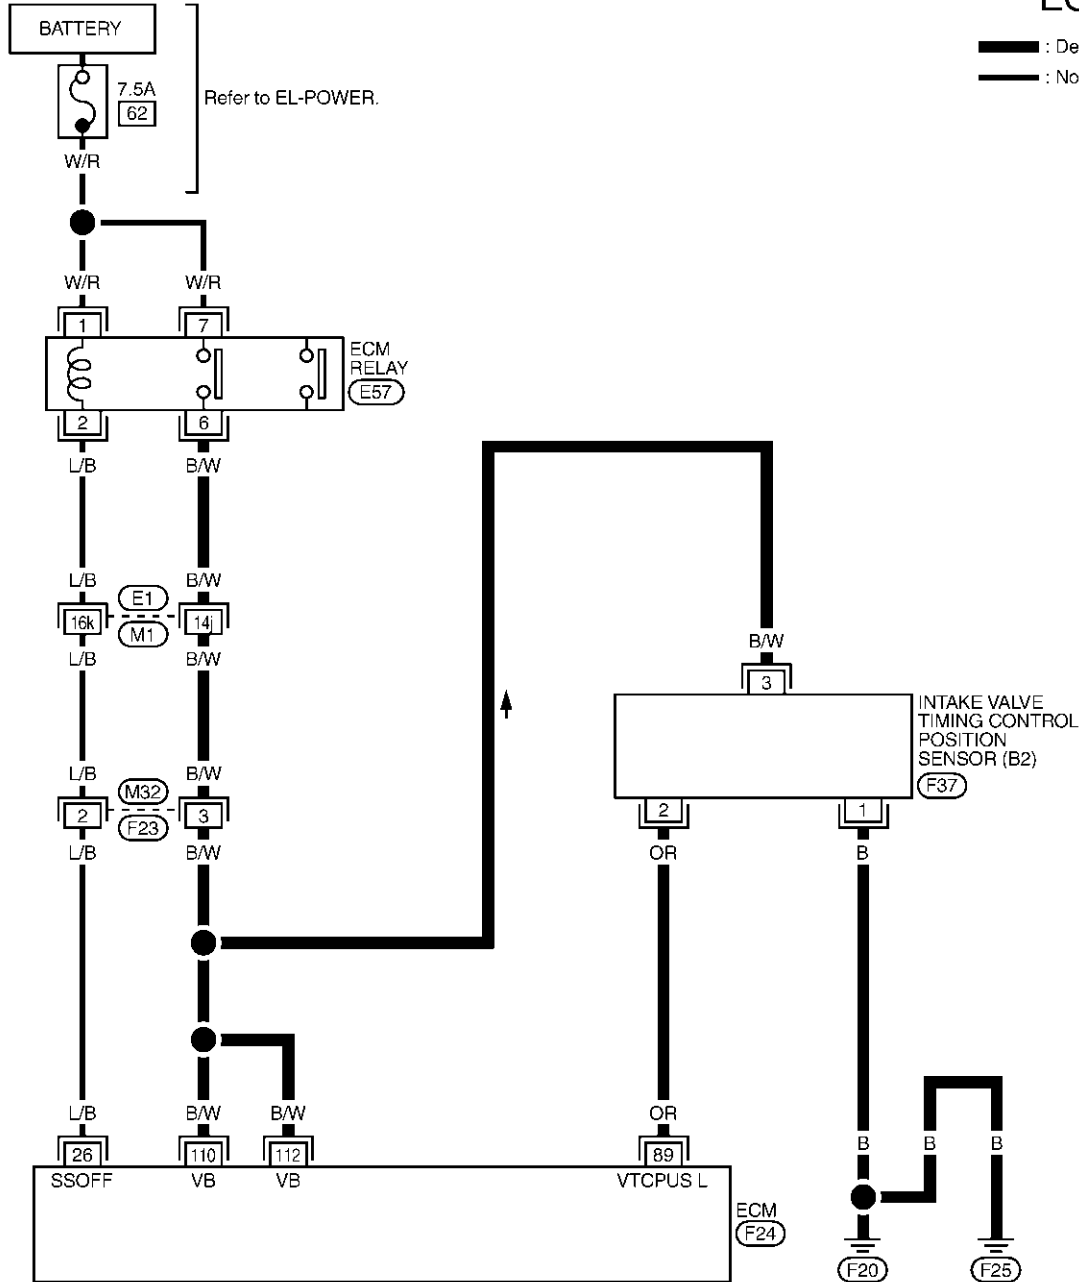

REFER TO THE FOLLOWING.

(E1) -SUPER
 MULTIPLE JUNCTION (SMJ)

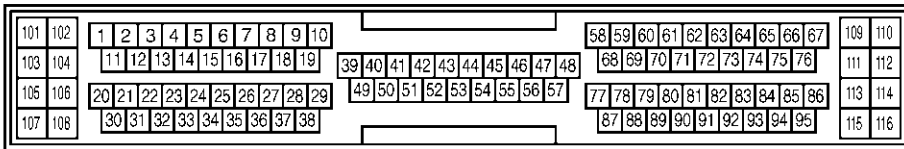

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX


MEC919D




DTC P1140, P1145 INTAKE VALVE TIMING CONTROL POSITION SENSOR

Diagnostic Procedure

Diagnostic Procedure

NBEC1063

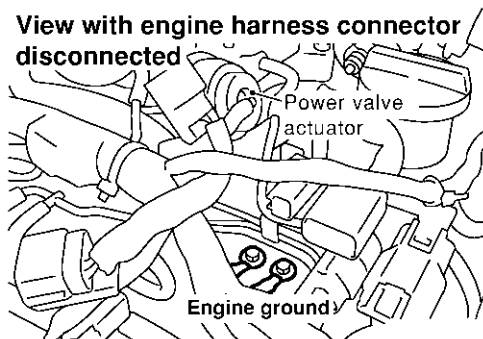1	RETIGHTEN GROUND SCREWS	<ol style="list-style-type: none"> Turn ignition switch "OFF". Loosen and retighten engine ground screws. <p style="text-align: center;">View with engine harness connector disconnected</p>  <p style="text-align: right;">SEF959Y</p>
▶		GO TO 2.

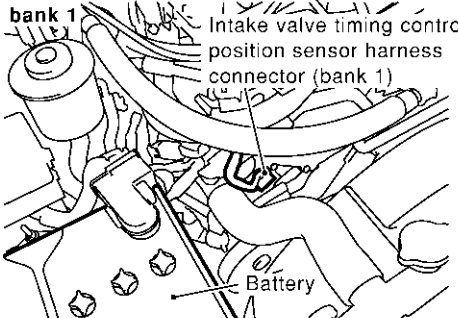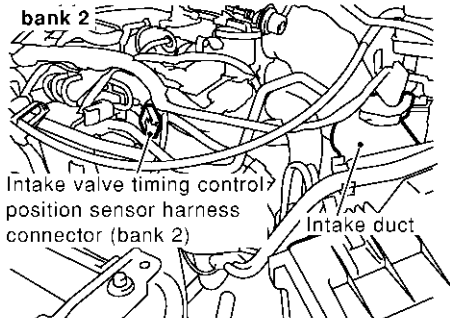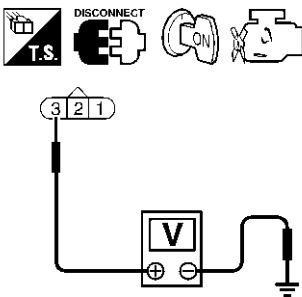2	CHECK INTAKE VALVE TIMING CONTROL POSITION SENSOR POWER SUPPLY CIRCUIT	<ol style="list-style-type: none"> Disconnect intake valve timing control position sensor harness connector. <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  <p>bank 1 Intake valve timing control position sensor harness connector (bank 1) Battery</p> </div> <div style="text-align: center;">  <p>bank 2 Intake valve timing control position sensor harness connector (bank 2) Intake duct connector</p> </div> </div> <p style="text-align: right;">SEF360ZA</p> <ol style="list-style-type: none"> Turn ignition switch "ON". Check voltage between intake valve timing control position sensor harness connector terminal 3 and ground with CONSULT-II or tester. <div style="text-align: center;">  <p style="text-align: right;">SEC202D</p> </div> <p style="color: blue; font-weight: bold;">Voltage: Battery voltage</p> <ol style="list-style-type: none"> Also check harness for short to ground and short to power. <p style="text-align: center;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 15%;">OK</td> <td style="width: 10%; text-align: center;">▶</td> <td>GO TO 4.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 3.</td> </tr> </table>	OK	▶	GO TO 4.	NG	▶	GO TO 3.
OK	▶	GO TO 4.						
NG	▶	GO TO 3.						


DTC P1140, P1145 INTAKE VALVE TIMING CONTROL POSITION SENSOR

Diagnostic Procedure (Cont'd)

3	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M32, F23 ● Harness connectors E1, M1 ● Harness for open or short between ECM and intake valve timing control position sensor ● Harness for open or short between ECM relay and intake valve timing control position sensor 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

4	CHECK INTAKE VALVE TIMING CONTROL POSITION SENSOR GROUND CIRCUIT FOR OPEN AND SHORT
<p>1. Turn ignition switch "OFF".</p> <p>2. Check harness connector continuity between intake valve timing control position sensor harness connector terminal 1 and engine ground. Refer to Wiring Diagram. Continuity should exist.</p> <p>3. Also check harness for short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 5.
NG	▶ Repair open circuit or short to power in harness or connectors.

5	CHECK INTAKE VALVE TIMING CONTROL POSITION SENSOR INPUT SIGNAL CIRCUIT
<p>1. Disconnect ECM harness connector.</p> <p>2. Check harness connectors continuity between ECM terminal 79 (bank 1) or 89 (bank 2) and terminal 2. Refer to Wiring Diagram. Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 6.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

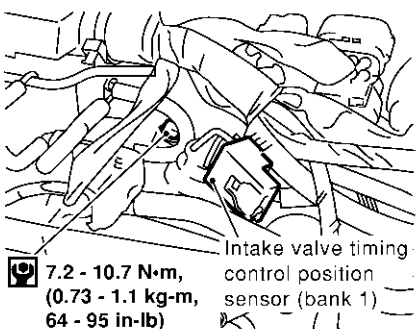
6	CHECK INTAKE VALVE TIMING CONTROL POSITION SENSOR INSTALLATION
<p>Check that intake valve timing control position sensor is installed correctly as shown below.</p> <div style="text-align: center;">  <p>Intake valve timing control position sensor (bank 1)</p> <p>7.2 - 10.7 N·m, (0.73 - 1.1 kg-m, 64 - 95 in-lb)</p> </div> <p style="text-align: right;">SEF361ZA</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 7.
NG	▶ Install intake valve timing control position sensor correctly.


GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P1140, P1145 INTAKE VALVE TIMING CONTROL POSITION SENSOR

Diagnostic Procedure (Cont'd)

7	CHECK IMPROPER INSTALLATION	
<ol style="list-style-type: none"> 1. Loosen and retighten the fixing bolt of the intake valve timing control position sensor. 2. Reconnect harness connector disconnected. 3. Perform "DTC Confirmation Procedure", EC-523 again. 		
Is a 1st trip DTC P1140 (RIGHT, -B1) P1145 (LEFT, -B2) detected?		
Yes	▶	GO TO 8.
No	▶	INSPECTION END

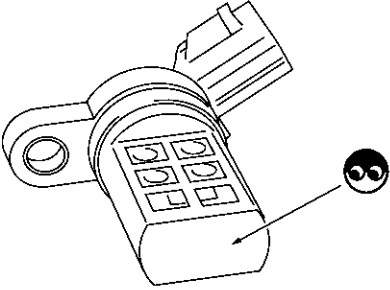8	CHECK INTAKE VALVE TIMING CONTROL POSITION SENSOR	
<ol style="list-style-type: none"> 1. Disconnect intake valve timing control position sensor connector. 2. Loosen the fixing bolt of the sensor. 3. Remove the sensor. 4. Visually check the sensor for chipping. 		
		
SEF362Z		
OK or NG		
OK	▶	GO TO 9.
NG	▶	Replace intake valve timing control position sensor.

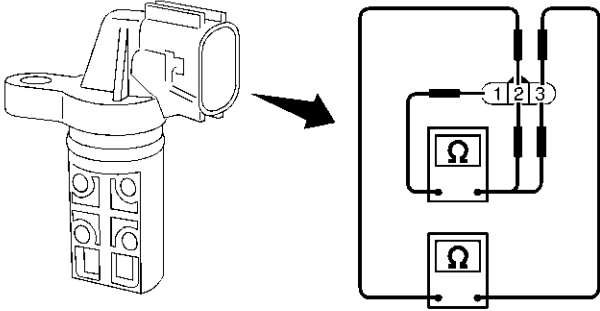9	CHECK INTAKE VALVE TIMING CONTROL POSITION SENSOR-II	
<ul style="list-style-type: none"> • Check resistance as shown below. 		
		
SEF363Z		
OK or NG		
OK	▶	GO TO 10.
NG	▶	Replace intake valve timing control position sensor.

Resistance Ω [at 25°C (77°F)]	Terminal No. (Polarity)
Except 0 or ∞	3 (+) - 1 (-)
	2 (+) - 1 (-)
	3 (+) - 2 (-)

DTC P1140, P1145 INTAKE VALVE TIMING CONTROL POSITION SENSOR

Diagnostic Procedure (Cont'd)

10	CHECK CAMSHAFT
Check accumulation of debris to the signal pick-up portion of the camshaft. Refer to step 35 of "Timing chain removal", EM-24.	
OK or NG	
OK	▶ GO TO 11.
NG	▶ Remove debris and clean the signal pick-up cut out of camshaft.

11	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	
	▶ INSPECTION END

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX

DTC P1143, P1163 HO2S1


Component Description

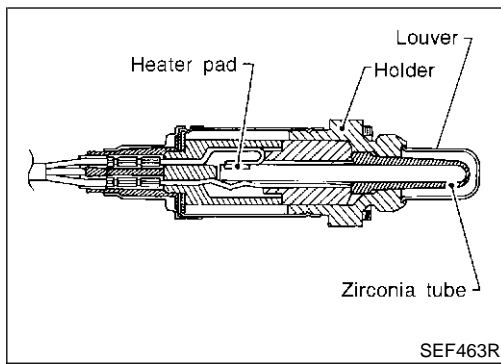

Component Description

NBEC1147

The heated oxygen sensor 1 is placed into the exhaust manifold. It detects the amount of oxygen in the exhaust gas compared to the outside air. The heated oxygen sensor 1 has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The heated oxygen sensor 1 signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

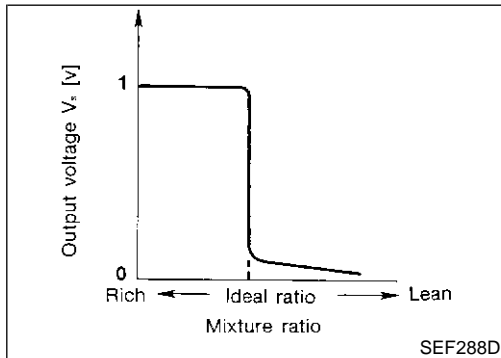

CONSULT-II Reference Value in Data Monitor Mode

NBEC1148

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
HO2S1 (B1) HO2S1 (B2)			0 - 0.3V ↔ Approx. 0.6 - 1.0V
HO2S1 MNTR (B1) HO2S1 MNTR (B2)	<ul style="list-style-type: none"> Engine: After warming up 	Maintaining engine speed at 2,000 rpm	LEAN ↔ RICH Changes more than 5 times during 10 seconds.

ECM Terminals and Reference Value

NBEC1149

Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.


CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
63	G	Heated oxygen sensor 1 (bank 1)	<p>[Engine is running]</p> <ul style="list-style-type: none"> Warm-up condition Engine speed is 2,000 rpm. 	<p>0 - Approximately 1.0V (Periodically change)</p> <p>SEF059V</p>


DTC P1143, P1163 HO2S1

ECM Terminals and Reference Value (Cont'd)

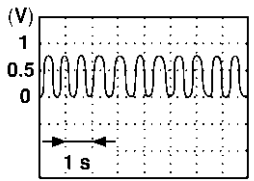TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
62	G/B	Heated oxygen sensor 1 (bank 2)	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 2,000 rpm. 	<p>0 - Approximately 1.0V (Periodically change)</p>  <p>SEF059V</p>

GI
MA
EM
LC
EC

FE
AT
TF

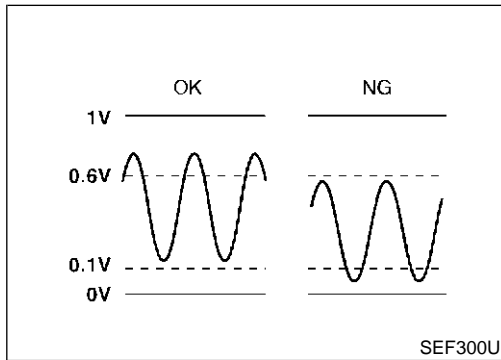

On Board Diagnosis Logic

To judge the malfunction, the output from the heated oxygen sensor 1 is monitored to determine whether the “rich” output is sufficiently high and whether the “lean” output is sufficiently low. When both the outputs are shifting to the lean side, the malfunction will be detected.

NBEC1150

PD
AX
SU
BR

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P1143 1143 (Bank 1) P1163 1163 (Bank 2)	Heated oxygen sensor 1 lean shift monitoring	The maximum and minimum voltage from the sensor are not reached to the specified voltages.	<ul style="list-style-type: none"> ● Heated oxygen sensor 1 ● Heated oxygen sensor 1 heater ● Fuel pressure ● Injectors ● Intake air leaks

ST
RS
BT
HA

DTC Confirmation Procedure

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:





- Always perform at a temperature above -10°C (14°F).
- Before performing following procedure, confirm that battery voltage is more than 11V at idle.

NBEC1151

SC
EL
IDX

DTC P1143, P1163 HO2S1

DTC Confirmation Procedure (Cont'd)

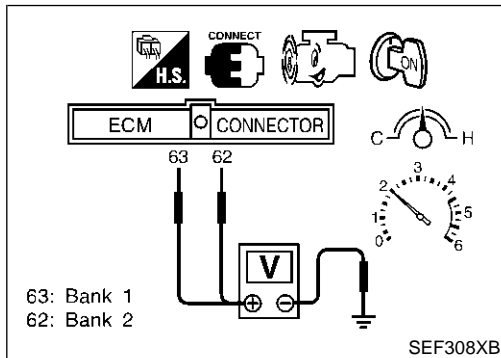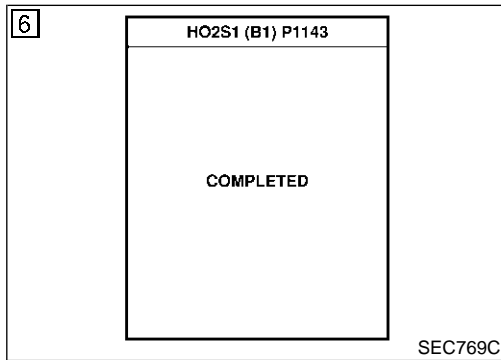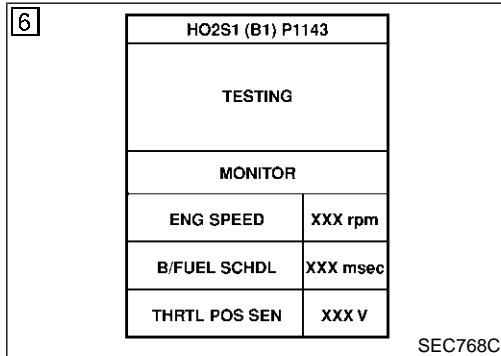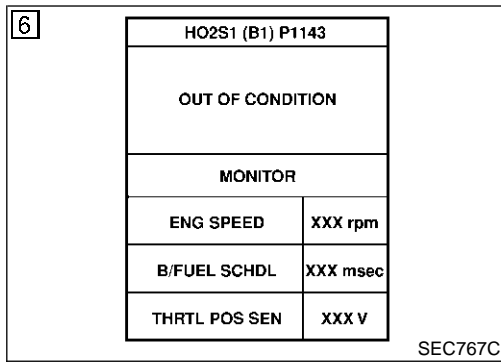

WITH CONSULT-II

NBEC1151S01

- 1) Start engine and warm it up to normal operating temperature.
- 2) Stop engine and wait at least 10 seconds.
- 3) Turn ignition switch "ON" and select "HO2S1 (B1)/(B2) P1143/P0154" of "HO2S1" in "DTC WORK SUPPORT" mode with CONSULT-II.
- 4) Touch "START".
- 5) Start engine and let it idle for at least 3 minutes.

NOTE:

Never raise engine speed above 3,600 rpm after this step. If the engine speed limit is exceeded, return to step 5.

- 6) When the following conditions are met, "TESTING" will be displayed on the CONSULT-II screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take approximately 50 seconds or more.)

ENG SPEED	1,300 - 2,800 rpm
Vehicle speed	Less than 100 km/h (62 MPH)
B/FUEL SCHDL	3 - 10 msec
Selector lever	Suitable position

If "TESTING" is not displayed after 5 minutes, retry from step 2.

- 7) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "Diagnostic Procedure", EC-533.

Overall Function Check

NBEC1152

Use this procedure to check the overall function of the heated oxygen sensor 1 circuit. During this check, a DTC might not be confirmed.


WITH GST

NBEC1152S01

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminal 63 (bank 1 HO2S1 signal) or 62 (bank 2 HO2S1 signal) and engine ground.
- 3) Check one of the following with engine speed held at 2,000 rpm constant under no load.
 - The maximum voltage is over 0.6V at least one time.
 - The minimum voltage is over 0.1V at least one time.
- 4) If NG, go to "Diagnostic Procedure", EC-533.

Diagnostic Procedure

NBEC1153

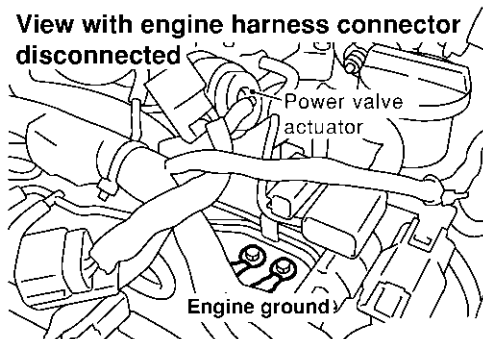1	RETIGHTEN GROUND SCREWS
<p>1. Turn ignition switch "OFF". 2. Loosen and retighten engine ground screws.</p> <p style="text-align: center;">View with engine harness connector disconnected</p>  <p style="text-align: right;">SEF959Y</p>	
▶	GO TO 2.

2	RETIGHTEN HEATED OXYGEN SENSOR 1
<p>Loosen and retighten corresponding heated oxygen sensor 1.</p> <p>Tightening torque: 40 - 60 N·m (4.1 - 6.1 kg-m, 30 - 44 ft-lb)</p>	
▶	GO TO 3.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


DTC P1143, P1163 HO2S1

Diagnostic Procedure (Cont'd)

3	CLEAR THE SELF-LEARNING DATA										
<p>E With CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Select "SELF-LEARNING CONT" in "WORK SUPPORT" mode with CONSULT-II. 3. Clear the self-learning control coefficient by touching "CLEAR". <div style="text-align: center; margin: 10px 0;"> <table border="1" style="border-collapse: collapse;"> <tr> <th colspan="3">WORK SUPPORT</th> </tr> <tr> <td style="padding: 2px;">SELF-LEARNING CONT</td> <td style="padding: 2px;">CLEAR</td> <td style="padding: 2px;">B1 100 %</td> </tr> <tr> <td colspan="2"></td> <td style="padding: 2px;">B2 100 %</td> </tr> </table> </div> <p style="text-align: right; margin-right: 20px;">SEF968Y</p> <ol style="list-style-type: none"> 4. Run engine for at least 10 minutes at idle speed. Is the 1st trip DTC P0171 or P0174 detected? Is it difficult to start engine? 			WORK SUPPORT			SELF-LEARNING CONT	CLEAR	B1 100 %			B2 100 %
WORK SUPPORT											
SELF-LEARNING CONT	CLEAR	B1 100 %									
		B2 100 %									
<p>X Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Turn ignition switch "OFF". 3. Disconnect mass air flow sensor harness connector, and restart and run engine for at least 5 seconds at idle speed. 4. Stop engine and reconnect mass air flow sensor harness connector. 5. Make sure 1st trip DTC P0102 is displayed. 6. Erase the 1st trip DTC memory. Refer to "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION", EC-85. 7. Make sure DTC P0000 is displayed. 8. Run engine for at least 10 minutes at idle speed. Is the 1st trip DTC P0171 or P0174 detected? Is it difficult to start engine? <p style="text-align: center; margin: 10px 0;">Yes or No</p>											
Yes	▶	Perform trouble diagnosis for DTC P0171, P0174. Refer to EC-282.									
No	▶	GO TO 4.									

4 CHECK HEATED OXYGEN SENSOR HEATER 1


1. Stop engine.
2. Check heated oxygen sensor 1 harness protector color.

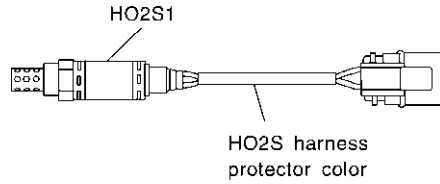

HO2S1 (bank 1): Black
 HO2S1 (bank 2): Blue

SEF505YC

3. Disconnect HO2S1 harness connector.
4. Check resistance between HO2S1 terminals as follows.

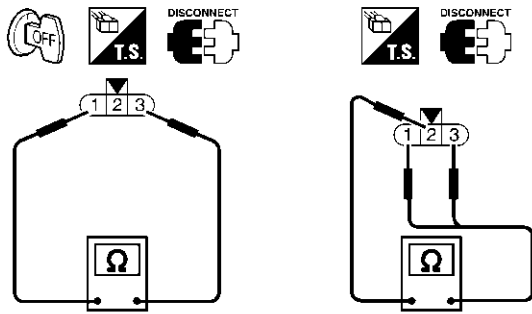

Terminals	Resistance
1 and 3	3.3 - 4.0 Ω at 25°C (77°F)
1 and 2 2 and 3	$\infty \Omega$ (Continuity should not exist.)

SEF969YA

CAUTION:

Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

OK or NG

OK (With CONSULT-II)	▶	GO TO 5.
OK (Without CONSULT-II)	▶	GO TO 6.
NG	▶	GO TO 7.

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P1143, P1163 HO2S1

Diagnostic Procedure (Cont'd)

5 CHECK HEATED OXYGEN SENSOR 1

Ⓔ With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select "MANU TRIG" and adjust "TRIGGER POINT" to 100% in "DATA MONITOR" mode with CONSULT-II.
3. Select "HO2S1 (B1)/(B2)" and "HO2S1 MNTR (B1)/(B2)".
4. Hold engine speed at 2,000 rpm under no load during the following steps.
5. Touch "RECORD" on CONSULT-II screen.

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
COOLAN TEMP/S	XXX °C
HO2S1 (B1)	XXX V
HO2S2 (B2)	XXX V

SEF967Y

6. Check the following.

- "HO2S1 MNTR (B1)/(B2)" in "DATA MONITOR" mode changes from "RICH" to "LEAN" to "RICH" 5 times in 10 seconds. 5 times (cycles) are counted as shown below.

Bank 1
 cycle | 1 | 2 | 3 | 4 | 5 |
 HO2S1 MNTR (B1) R-L-R-L-R-L-R-L-R-L-R


Bank 2
 cycle | 1 | 2 | 3 | 4 | 5 |
 HO2S1 MNTR (B2) R-L-R-L-R-L-R-L-R-L-R

R means HO2S1
 MNTR (B1)/(B2) indicates RICH
 L means HO2S1
 MNTR (B1)/(B2) indicates LEAN

SEF647Y

- "HO2S1 (B1)/(B2)" voltage goes above 0.6V at least once.
- "HO2S1 (B1)/(B2)" voltage goes below 0.3V at least once.
- "HO2S1 (B1)/(B2)" voltage never exceeds 1.0V.

Trigger	ENG SPEED	HO2S1 (B1)
	rpm	V
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX

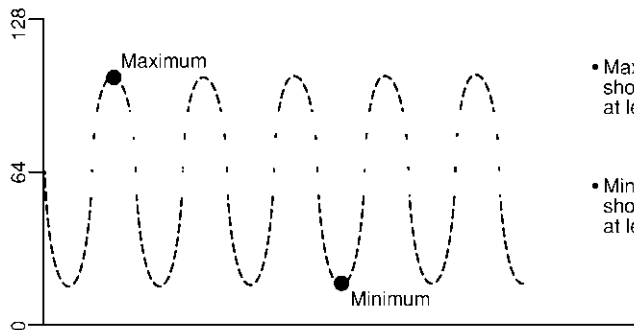

• Maximum voltage should be over 0.6V at least one time.

• Minimum voltage should be below 0.30V at least one time.


SEF648Y


CAUTION:

Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

OK or NG

OK	▶	GO TO 8.
NG	▶	GO TO 7.

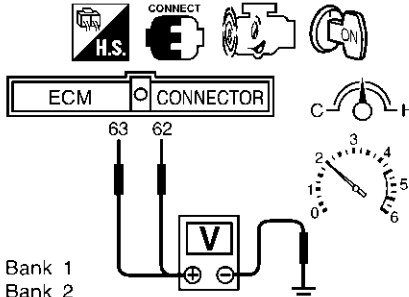6	CHECK HEATED OXYGEN SENSOR 1
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> Start engine and warm it up to normal operating temperature. Set voltmeter probes between ECM terminal 63 (HO2S1 bank 1 signal) or 62 (HO2S1 bank 2 signal) and engine ground. Check the following with engine speed held at 2,000 rpm constant under no load. 	
<div style="display: flex; justify-content: space-between; align-items: flex-start;"> <div style="width: 40%;">  <p>63: Bank 1 62: Bank 2</p> </div> <div style="width: 55%;"> <ul style="list-style-type: none"> • The voltage fluctuates between 0 to 0.3V and 0.6 to 1.0V more than 5 times within 10 seconds. • The maximum voltage is over 0.6V at least one time. • The minimum voltage is below 0.3V at least one time. • The voltage never exceeds 1.0V. <p>1 time: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V 2 times: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V</p> </div> </div>	
SEF967XA	
<p>CAUTION: Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.</p>	
OK or NG	
OK	▶ GO TO 8.
NG	▶ GO TO 7.

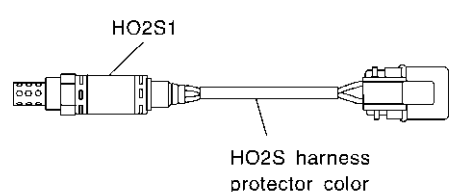
7	REPLACE FRONT HEATED OXYGEN SENSOR
<ol style="list-style-type: none"> Turn ignition switch "OFF". Check heated oxygen sensor 1 harness protector color. 	
	
<p>HO2S1 (bank 1): Black HO2S1 (bank 2): Blue</p>	
SEF505YC	
<p>CAUTION: Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.</p>	
▶	Replace malfunctioning heated oxygen sensor 1.

8	CHECK INTERMITTENT INCIDENT
<p>Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152. For circuit, refer to "Wiring Diagram", EC-252.</p>	
▶	INSPECTION END

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P1144, P1164 HO2S1


Component Description

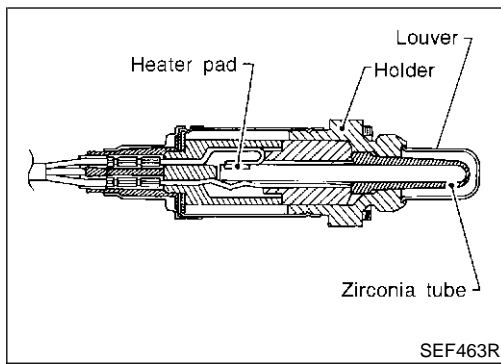

Component Description

NBEC1154

The heated oxygen sensor 1 is placed into the exhaust manifold. It detects the amount of oxygen in the exhaust gas compared to the outside air. The heated oxygen sensor 1 has a closed-end tube made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. The heated oxygen sensor 1 signal is sent to the ECM. The ECM adjusts the injection pulse duration to achieve the ideal air-fuel ratio. The ideal air-fuel ratio occurs near the radical change from 1V to 0V.

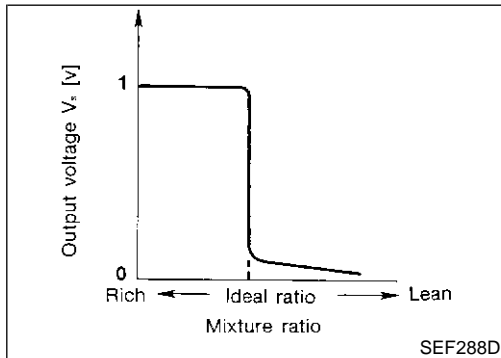

CONSULT-II Reference Value in Data Monitor Mode

NBEC1155

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
HO2S1 (B1) HO2S1 (B2)			0 - 0.3V ↔ Approx. 0.6 - 1.0V
HO2S1 MNTR (B1) HO2S1 MNTR (B2)	<ul style="list-style-type: none"> Engine: After warming up 	Maintaining engine speed at 2,000 rpm	LEAN ↔ RICH Changes more than 5 times during 10 seconds.

ECM Terminals and Reference Value

NBEC1156

Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.


CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
63	G	Heated oxygen sensor 1 (bank 1)	<p>[Engine is running]</p> <ul style="list-style-type: none"> Warm-up condition Engine speed is 2,000 rpm. 	<p>0 - Approximately 1.0V (Periodically change)</p> <p>SEF059V</p>


DTC P1144, P1164 HO2S1

ECM Terminals and Reference Value (Cont'd)

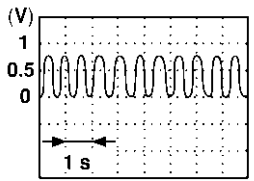TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
62	G/B	Heated oxygen sensor 1 (bank 2)	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 2,000 rpm. 	<p>0 - Approximately 1.0V (Periodically change)</p>  <p>SEF059V</p>

GI
MA
EM
LC
EC

FE
AT
TF

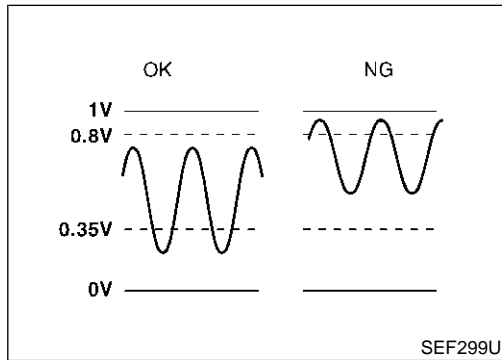

On Board Diagnosis Logic

To judge the malfunction, the output from the heated oxygen sensor 1 is monitored to determine whether the “rich” output is sufficiently high and “lean” output is sufficiently low. When both the outputs are shifting to the rich side, the malfunction will be detected.

NBEC1157

PD
AX
SU
BR

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P1144 1144 (Bank 1) P1164 1164 (Bank 2)	Heated oxygen sensor 1 rich shift monitoring	The maximum and minimum voltages from the sensor are beyond the specified voltages.	<ul style="list-style-type: none"> ● Heated oxygen sensor 1 ● Fuel pressure ● Injectors ● Heated oxygen sensor 1 heater

ST
RS
BT
HA

DTC Confirmation Procedure

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:





- Always perform at a temperature above -10°C (14°F).
- Before performing the following procedure, confirm that battery voltage is more than 11V at idle.

NBEC1158

SC
EL
IDX

DTC P1144, P1164 HO2S1

DTC Confirmation Procedure (Cont'd)

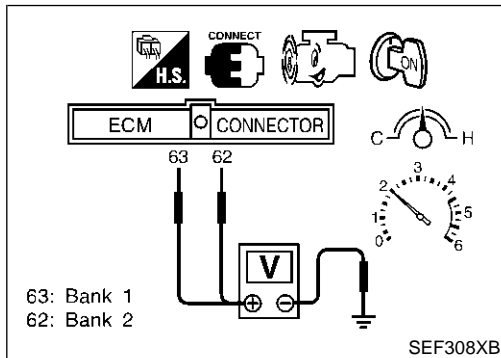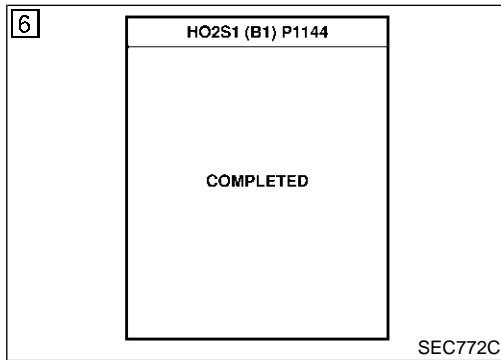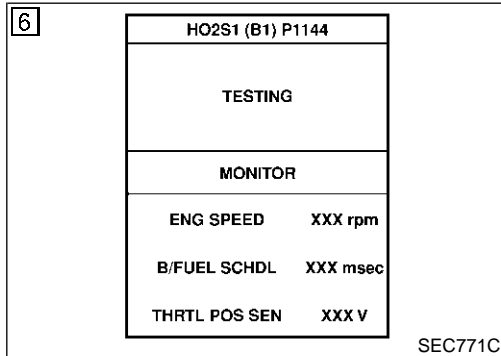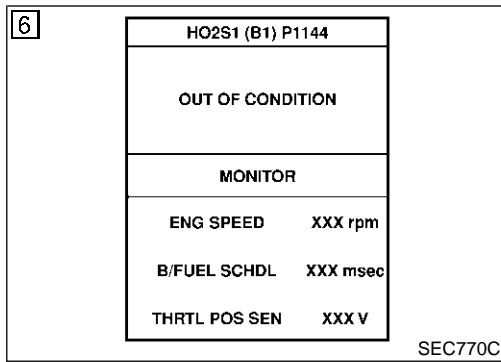

WITH CONSULT-II

NBEC1158S01

- 1) Start engine and warm it up to normal operating temperature.
- 2) Stop engine and wait at least 5 seconds.
- 3) Turn ignition switch "ON" and select "HO2S1 (B1)/(B2) P1144/ P1164" of "HO2S1" in "DTC WORK SUPPORT" mode with CONSULT-II.
- 4) Touch "START".
- 5) Start engine and let it idle for at least 3 minutes.

NOTE:

Never raise engine speed above 3,600 rpm after this step. If the engine speed limit is exceeded, return to step 5.

- 6) When the following conditions are met, "TESTING" will be displayed on the CONSULT-II screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take approximately 50 seconds or more.)

ENG SPEED	1,300 - 2,800 rpm
Vehicle speed	Less than 100 km/h (62 MPH)
B/FUEL SCHDL	3 - 10 msec
Selector lever	Suitable position

If "TESTING" is not displayed after 5 minutes, retry from step 2.

- 7) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "Diagnostic Procedure", EC-541.

Overall Function Check

NBEC1159

Use this procedure to check the overall function of the heated oxygen sensor 1 circuit. During this check, a DTC might not be confirmed.


WITH GST

NBEC1159S01

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminal 63 (HO2S1 bank 1 signal) or 62 (HO2S1 bank 2 signal) and engine ground.
- 3) Check one of the following with engine speed held at 2,000 rpm constant under no load.
 - The maximum voltage is below 0.8V at least one time.
 - The minimum voltage is below 0.35V at least one time.
- 4) If NG, go to "Diagnostic Procedure", EC-541.

Diagnostic Procedure

NBEC1160

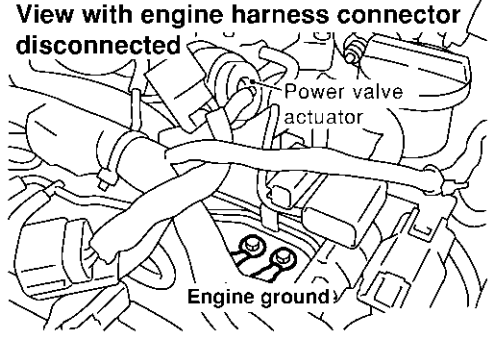1	RETIGHTEN GROUND SCREWS
<p>1. Turn ignition switch "OFF". 2. Loosen and retighten engine ground screws.</p> <div style="text-align: center;"> <p>View with engine harness connector disconnected</p>  <p>The diagram shows a top-down view of the engine compartment. A power valve actuator is labeled at the top right. Below it, two ground screws are labeled 'Engine ground'. The text 'View with engine harness connector disconnected' is positioned above the diagram.</p> </div> <p style="text-align: right;">SEF959Y</p>	
▶ GO TO 2.	

- GI
- MA
- EM
- LC
- EC**
- FE
- AT
- TF
- PD
- AX
- SU
- BR
- ST
- RS
- BT
- HA
- SC
- EL
- IDX

2	RETIGHTEN HEATED OXYGEN SENSOR 1
<p>Loosen and retighten corresponding heated oxygen sensor 1.</p> <p>Tightening torque: 40 - 60 N·m (4.1 - 6.1 kg-m, 30 - 44 ft-lb)</p>	
▶ GO TO 3.	


DTC P1144, P1164 HO2S1

Diagnostic Procedure (Cont'd)

3 CLEAR THE SELF-LEARNING DATA

Ⓔ With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select "SELF-LEARNING CONT" in "WORK SUPPORT" mode with CONSULT-II.
3. Clear the self-learning control coefficient by touching "CLEAR".

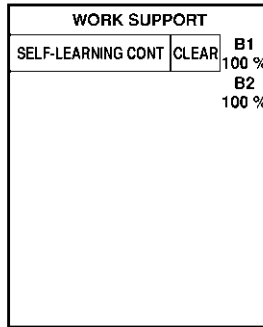

SEF968Y

4. Run engine for at least 10 minutes at idle speed.
Is the 1st trip DTC P0172 or P0175 detected?
Is it difficult to start engine?

ⓧ Without CONSULT-II


1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch "OFF".
3. Disconnect mass air flow sensor harness connector, and restart and run engine for at least 5 seconds at idle speed.
4. Stop engine and reconnect mass air flow sensor harness connector.
5. Make sure 1st trip DTC P0102 is displayed.
6. Erase the 1st trip DTC memory. Refer to "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION", EC-85.
7. Make sure DTC P0000 is displayed.
8. Run engine for at least 10 minutes at idle speed.
Is the 1st trip DTC P0172 or P0175 detected?
Is it difficult to start engine?

Yes or No

Yes	▶	Perform trouble diagnosis for DTC P0172, P0175. Refer to EC-290.
No	▶	GO TO 4.

4 CHECK HO2S 1 CONNECTOR FOR WATER

1. Turn ignition switch "OFF".
2. Check heated oxygen sensor 1 harness protector color.

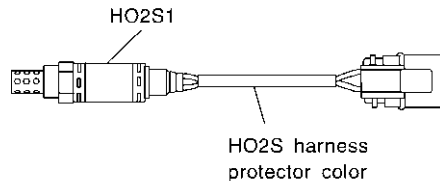

HO2S1 (bank 1): Black
 HO2S1 (bank 2): Blue

SEF505YC

3. Disconnect heated oxygen sensor 1 harness connector.
4. Check connectors for water.
Water should not exist.


OK or NG

OK	▶	GO TO 5.
NG	▶	Repair or replace harness or connectors.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

5 CHECK HEATED OXYGEN SENSOR 1 HEATER

Check resistance between HO2S1 terminals as follows.

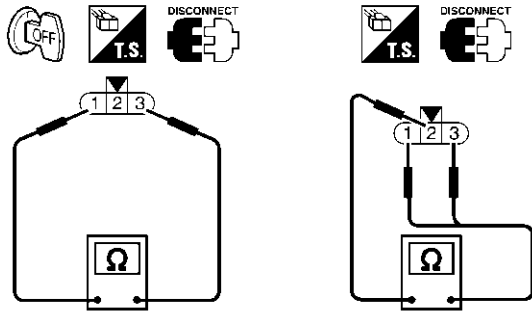

Terminals	Resistance
1 and 3	3.3 - 4.0Ω at 25°C (77°F)
1 and 2 2 and 3	∞Ω (Continuity should not exist.)

SEF969YA

CAUTION:

Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

OK or NG

OK (With CONSULT-II) ▶	GO TO 6.
OK (Without CONSULT-II) ▶	GO TO 7.
NG ▶	GO TO 8.

DTC P1144, P1164 HO2S1

Diagnostic Procedure (Cont'd)

6 CHECK HEATED OXYGEN SENSOR 1

Ⓔ With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select "MANU TRIG" and adjust "TRIGGER POINT" to 100% in "DATA MONITOR" mode with CONSULT-II.
3. Select "HO2S1 (B1)/(B2)" and "HO2S1 MNTR (B1)/(B2)".
4. Hold engine speed at 2,000 rpm under no load during the following steps.
5. Touch "RECORD" on CONSULT-II screen.

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
COOLAN TEMP/S	XXX °C
HO2S1 (B1)	XXX V
HO2S2 (B2)	XXX V

SEF967Y

6. Check the following.

- "HO2S1 MNTR (B1)/(B2)" in "DATA MONITOR" mode changes from "RICH" to "LEAN" to "RICH" 5 times in 10 seconds. 5 times (cycles) are counted as shown below.

Bank 1
 cycle | 1 | 2 | 3 | 4 | 5 |
 HO2S1 MNTR (B1) R-L-R-L-R-L-R-L-R-L-R


Bank 2
 cycle | 1 | 2 | 3 | 4 | 5 |
 HO2S1 MNTR (B2) R-L-R-L-R-L-R-L-R-L-R

R means HO2S1
 MNTR (B1)/(B2) indicates RICH
 L means HO2S1
 MNTR (B1)/(B2) indicates LEAN

SEF647Y

- "HO2S1 (B1)/(B2)" voltage goes above 0.6V at least once.
- "HO2S1 (B1)/(B2)" voltage goes below 0.3V at least once.
- "HO2S1 (B1)/(B2)" voltage never exceeds 1.0V.

Trigger	ENG SPEED	HO2S1 (B1)
	rpm	V
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX
XXX	XXX	XXX

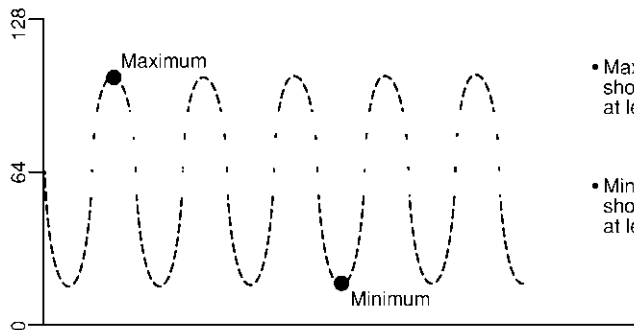

• Maximum voltage should be over 0.6V at least one time.

• Minimum voltage should be below 0.30V at least one time.

SEF648Y

CAUTION:

Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

OK or NG

OK	▶	GO TO 9.
NG	▶	GO TO 8.

7	CHECK HEATED OXYGEN SENSOR 1
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> Start engine and warm it up to normal operating temperature. Set voltmeter probes between ECM terminal 63 (HO2S1 bank 1 signal) or 62 (HO2S1 bank 2 signal) and engine ground. Check the following with engine speed held at 2,000 rpm constant under no load. 	
<div style="display: flex; align-items: flex-start;"> <div style="flex: 1;"> <p>63: Bank 1 62: Bank 2</p> </div> <div style="flex: 2;"> <ul style="list-style-type: none"> • The voltage fluctuates between 0 to 0.3V and 0.6 to 1.0V more than 5 times within 10 seconds. • The maximum voltage is over 0.6V at least one time. • The minimum voltage is below 0.3V at least one time. • The voltage never exceeds 1.0V. <p>1 time: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V 2 times: 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V → 0.6 - 1.0V → 0 - 0.3V</p> </div> </div>	
SEF967XA	
<p>CAUTION: Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.</p>	
OK or NG	
OK	▶ GO TO 9.
NG	▶ GO TO 8.


8	REPLACE HEATED OXYGEN SENSOR 1
<ol style="list-style-type: none"> Turn ignition switch "OFF". Check heated oxygen sensor 1 harness protector color. 	
<p>HO2S1 (bank 1): Black HO2S1 (bank 2): Blue</p>	
SEF505YC	
<p>CAUTION: Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.</p>	
▶	Replace malfunctioning heated oxygen sensor 1.

9	CHECK INTERMITTENT INCIDENT
<p>Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152. For circuit, refer to "Wiring Diagram", EC-252.</p>	
▶	INSPECTION END

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P1146, P1166 HO2S2

Component Description

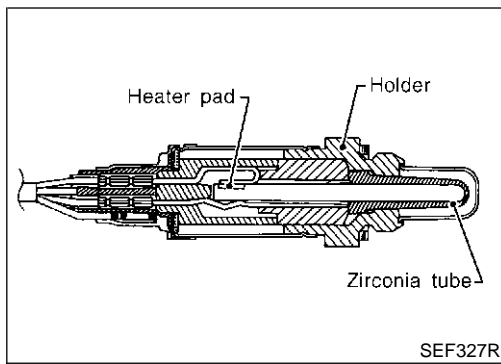

Component Description

NBEC1161

The heated oxygen sensor 2, after three way catalyst (manifold), monitors the oxygen level in the exhaust gas on each bank. Even if switching characteristics of the heated oxygen sensor 1 are shifted, the air fuel ratio is controlled to stoichiometric, by the signal from the heated oxygen sensor 2.

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions.

Under normal conditions the heated oxygen sensor 2 is not used for engine control operation.

CONSULT-II Reference Value in Data Monitor Mode

NBEC1162

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
HO2S2 (B1) HO2S2 (B2)			0 - 0.3V ↔ Approx. 0.6 - 1.0V
HO2S2 MNTR (B1) HO2S2 MNTR (B2)	● Engine: After warming up	Revsing engine from idle up to 2,000 rpm	LEAN ↔ RICH

ECM Terminals and Reference Value


NBEC1163

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
72	OR	Heated oxygen sensor 2 (bank 1)	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Revving engine from idle up to 3,000 rpm quickly after the following conditions are met. <ul style="list-style-type: none"> - After keeping engine speed between 3,500 and 4,000 rpm for one minute and at idle for one minute under no load. 	0 - Approximately 1.0V
71	OR/L	Heated oxygen sensor 2 (bank 2)	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Revving engine from idle up to 3,000 rpm quickly after the following conditions are met. <ul style="list-style-type: none"> - After keeping engine speed between 3,500 and 4,000 rpm for one minute and at idle for one minute under no load. 	0 - Approximately 1.0V

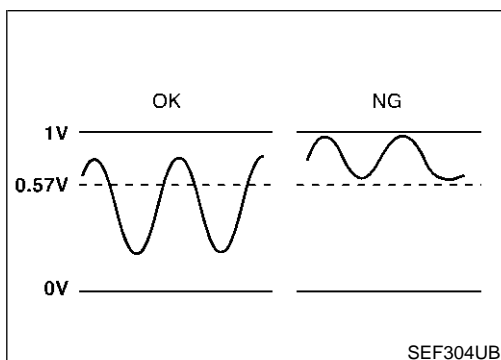

On Board Diagnosis Logic

NBEC1164





The heated oxygen sensor 2 has a much longer switching time between rich and lean than the heated oxygen sensor 1. The oxygen storage capacity of the three way catalyst (manifold) causes the longer switching time. To judge the malfunctions of heated oxygen sensor 2, ECM monitors whether the minimum voltage of sensor is sufficiently low during the various driving condition such as fuel-cut.

DTC P1146, P1166 HO2S2

On Board Diagnosis Logic (Cont'd)

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P1146 1146 (Bank 1) P1166 1166 (Bank 2)	Heated oxygen sensor 2 minimum voltage monitoring	The minimum voltage from the sensor is not reached to the specified voltage.	<ul style="list-style-type: none"> • Harness or connectors (The sensor circuit is open or shorted.) • Heated oxygen sensor 2 • Fuel pressure • Injectors

GI
MA
EM
LC

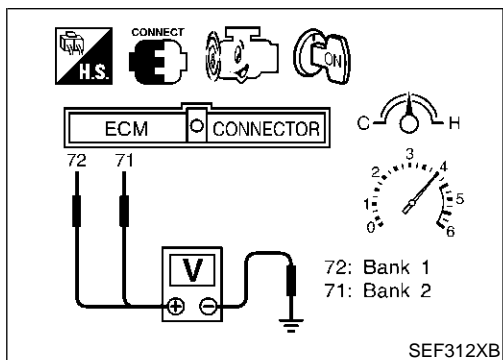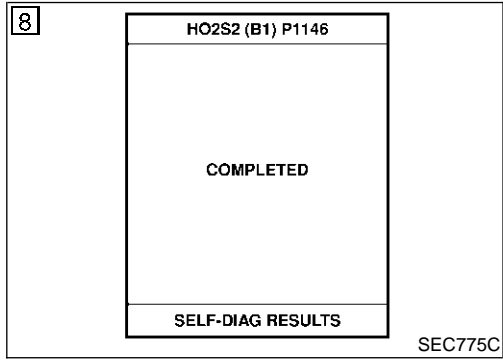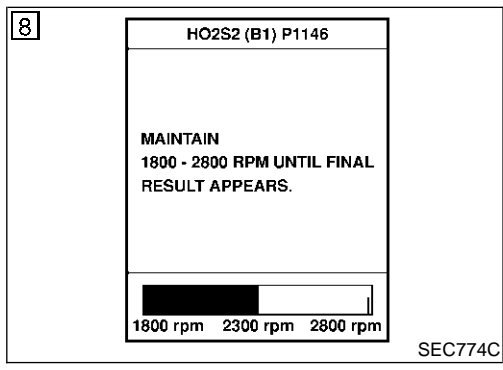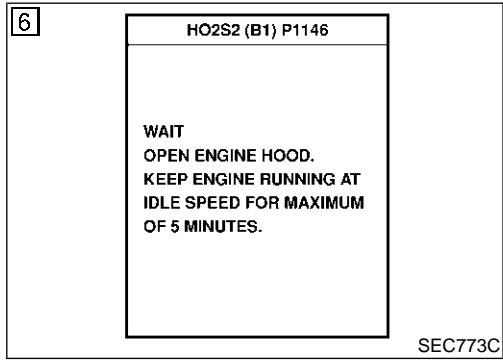

DTC Confirmation Procedure

NBEC1165

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

For better results, perform "DTC WORK SUPPORT" at a temperature of 0 to 30 °C (32 to 86 °F).

WITH CONSULT-II

NBEC1165S01

- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT-II.
- 2) Start engine and warm it up to the normal operating temperature.
- 3) Turn ignition switch "OFF" and wait at least 10 seconds.
- 4) Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least one minute under no load.
- 5) Let engine idle for one minute.
- 6) Make sure that "COOLAN TEMP/S" indicates more than 70°C (158°F).
If not, warm up engine and go to next step when "COOLAN TEMP/S" indication reaches to 70°C (158°F).
- 7) Open engine hood.
- 8) Select "HO2S2 (B1) P1146" or "HO2S2 (B2) P1166" of "HO2S2" in "DTC WORK SUPPORT" mode with CONSULT-II.
- 9) Start engine and following the instruction of CONSULT-II.
- 10) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS".
If "NG" is displayed, refer to EC-551, "Diagnostic Procedure".
If "CANNOT BE DIAGNOSED" is displayed, perform the following.
 - a) Turn ignition switch "OFF" and leave the vehicle in a cool place (soak the vehicle).
 - b) Return to step 1.

EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT

Overall Function Check

NBEC1166

Use this procedure to check the overall function of the heated oxygen sensor 2 circuit. During this check, a DTC might not be confirmed.

WITH GST

NBEC1166S01

- 1) Start engine and warm it up to the normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 10 seconds.
- 3) Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least one minute under no load.

SC
EL
IDX

DTC P1146, P1166 HO2S2

Overall Function Check (Cont'd)

- 4) Let engine idle for one minute.
- 5) Set voltmeter probes between ECM terminal 72 (HO2S2 bank 1 signal) or 71 (HO2S2 bank 2 signal) and engine ground.
- 6) Check the voltage when revving up to 4,000 rpm under no load at least 10 times.
(Depress and release accelerator pedal as soon as possible.)
The voltage should be below 0.57V at least once during this procedure.
If the voltage can be confirmed in step 4, step 5 is not necessary.
- 7) Keep vehicle at idling for 10 minutes, then check the voltage.
Or check the voltage when coasting from 80 km/h (50 MPH) in "D" position with "OD" OFF.
The voltage should be below 0.57V at least once during this procedure.
- 8) If NG, go to "Diagnostic Procedure", EC-551.

Wiring Diagram

=NBEC1167


NBEC1167S01

BANK 1


EC-O2S2B1-01

— : Detectable line for DTC

— : Non-detectable line for DTC

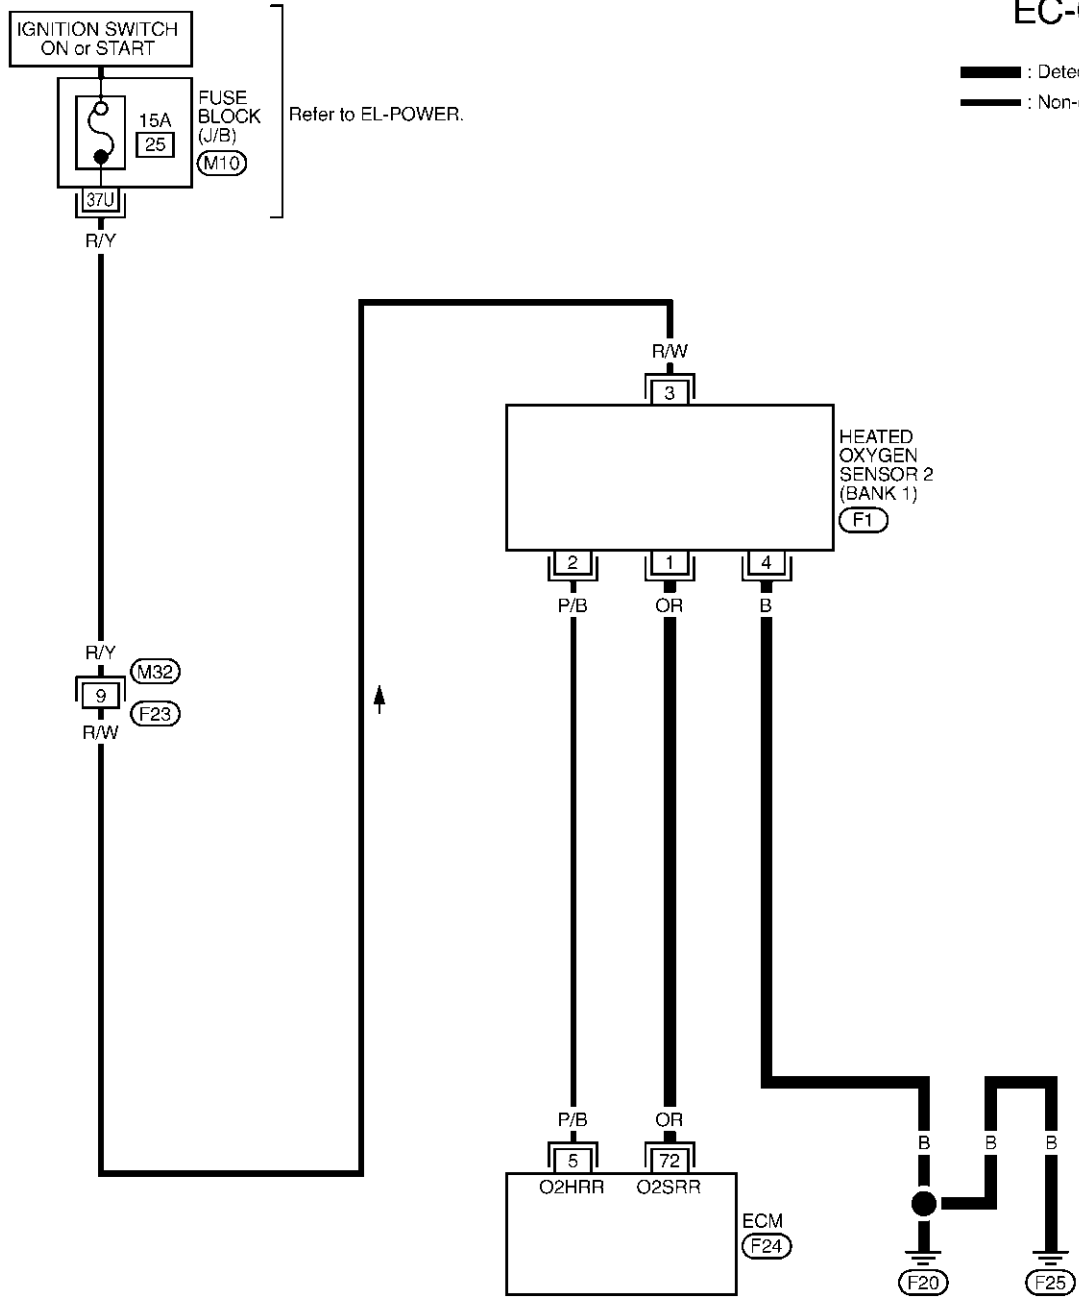


GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX



REFER TO THE FOLLOWING.

(M10) - FUSE BLOCK-JUNCTION BOX (J/B)

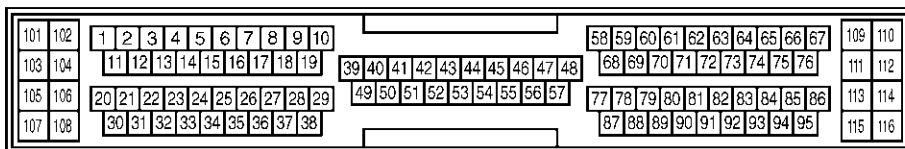

DTC P1146, P1166 HO2S2

Wiring Diagram (Cont'd)



NBEC1167S02

BANK 2

EC-O2S2B2-01


— : Detectable line for DTC

— : Non-detectable line for DTC

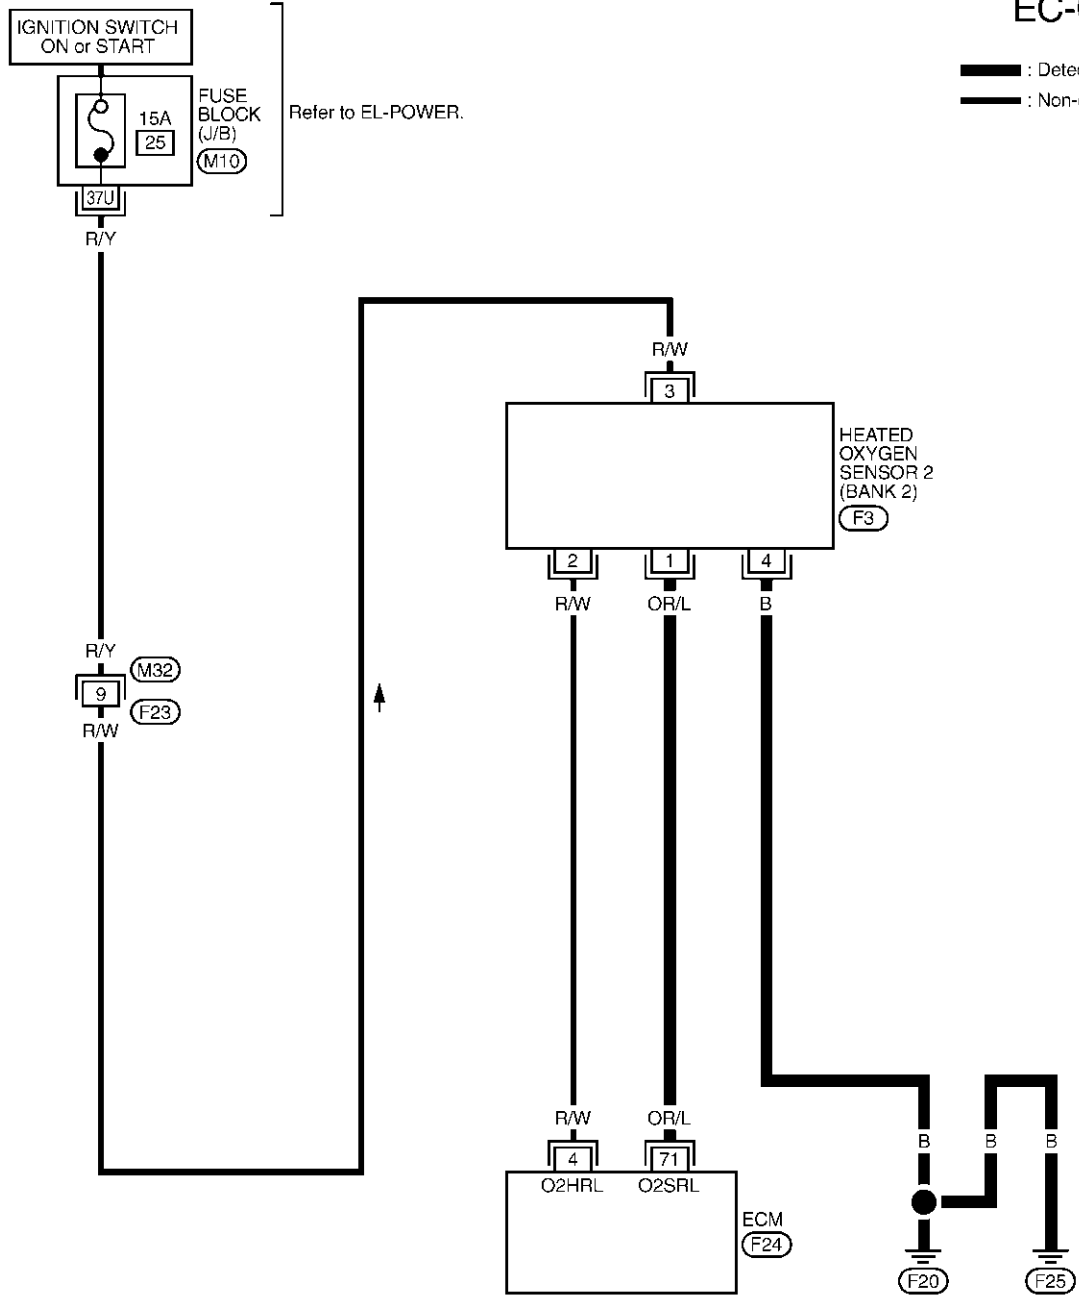

REFER TO THE FOLLOWING.


(M10) - FUSE BLOCK-JUNCTION BOX (J/B)

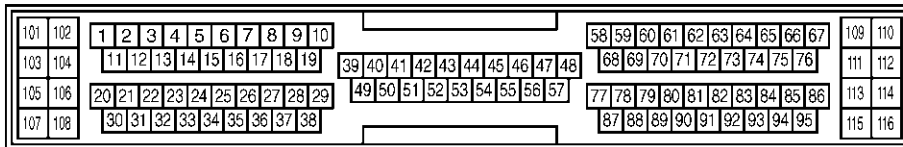

MEC800D

Diagnostic Procedure

NBEC1168

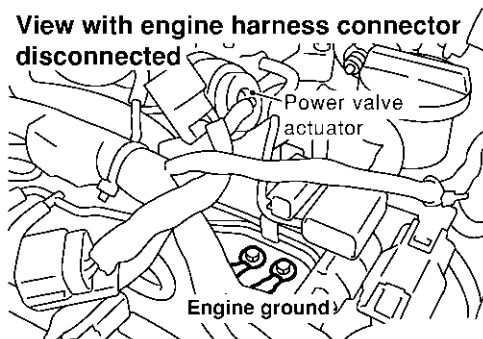1	RETIGHTEN GROUND SCREWS	<p>1. Turn ignition switch "OFF". 2. Loosen and retighten engine ground screws.</p> <div style="text-align: center;"> <p>View with engine harness connector disconnected</p>  <p>The diagram shows a top-down view of an engine compartment. A power valve actuator is labeled at the top right. Below it, two ground screws are labeled "Engine ground".</p> </div> <p style="text-align: right;">SEF959Y</p>	GI MA EM LC EC FE AT
▶ GO TO 2.			


2	CLEAR THE SELF-LEARNING DATA	<p>Ⓔ With CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature. 2. Select "SELF-LEARNING CONT" in "WORK SUPPORT" mode with CONSULT-II. 3. Clear the self-learning control coefficient by touching "CLEAR".</p> <div style="text-align: center;"> <table border="1" style="border-collapse: collapse;"> <tr> <th colspan="3">WORK SUPPORT</th> </tr> <tr> <td style="text-align: center;">SELF-LEARNING CONT</td> <td style="text-align: center;">CLEAR</td> <td style="text-align: center;">B1 100 %</td> </tr> <tr> <td></td> <td></td> <td style="text-align: center;">B2 100 %</td> </tr> </table> </div> <p style="text-align: right;">SEF968Y</p> <p>4. Run engine for at least 10 minutes at idle speed. Is the 1st trip DTC P0172 or P0175 detected? Is it difficult to start engine?</p> <p>ⓧ Without CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature. 2. Turn ignition switch "OFF". 3. Disconnect mass air flow sensor harness connector, and restart and run engine for at least 5 seconds at idle speed. 4. Stop engine and reconnect mass air flow sensor harness connector. 5. Make sure 1st trip DTC P0102 is displayed. 6. Erase the 1st trip DTC memory. Refer to "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION", EC-85. 7. Make sure DTC P0000 is displayed. 8. Run engine for at least 10 minutes at idle speed. Is the 1st trip DTC P0172 or P0175 detected? Is it difficult to start engine?</p> <p style="text-align: center;">Yes or No</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 15%;">Yes</td> <td style="width: 10%; text-align: center;">▶</td> <td style="width: 75%;">Perform trouble diagnosis for DTC P0172, P0175. Refer to EC-290.</td> </tr> <tr> <td>No</td> <td style="text-align: center;">▶</td> <td>GO TO 3.</td> </tr> </table>	WORK SUPPORT			SELF-LEARNING CONT	CLEAR	B1 100 %			B2 100 %	Yes	▶	Perform trouble diagnosis for DTC P0172, P0175. Refer to EC-290.	No	▶	GO TO 3.	TF PD AX SU BR ST RS BT HA SC EL IDX
WORK SUPPORT																		
SELF-LEARNING CONT	CLEAR	B1 100 %																
		B2 100 %																
Yes	▶	Perform trouble diagnosis for DTC P0172, P0175. Refer to EC-290.																
No	▶	GO TO 3.																

DTC P1146, P1166 HO2S2

Diagnostic Procedure (Cont'd)

3 CHECK HO2S2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT



1. Turn ignition switch "OFF".
2. Check heated oxygen sensor 2 harness protector color.

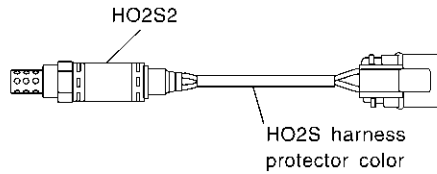

HO2S2 (bank 1): White or Gray
 HO2S2 (bank 2): Red or Red/Brown

SEF372ZB

3. Disconnect corresponding heated oxygen sensor 2 harness connector.

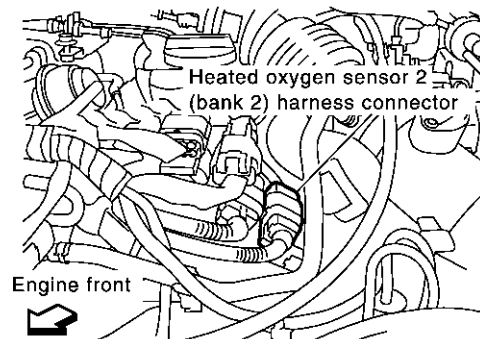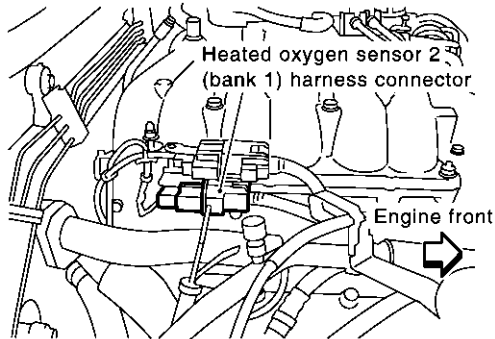

SEF971YA

4. Disconnect ECM harness connector.
5. Check harness continuity between ECM terminal and rear HO2S terminal as follows. Refer to Wiring Diagram.

DTC	Terminals		Bank
	ECM	Sensor	
P1146	72	1	Bank 1
P1166	71	1	Bank 2

MTBL1213

Continuity should exist.

6. Check harness continuity between ECM terminal or HO2S2 terminal and ground as follows. Refer to Wiring Diagram.

DTC	Terminals		Bank
	ECM or Sensor	Ground	
P1146	72 or 1	Ground	Bank 1
P1166	71 or 1	Ground	Bank 2

MTBL1214

Continuity should not exist.

7. Also check harness for short to power.

OK or NG

OK	▶	GO TO 4.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

DTC P1146, P1166 HO2S2

Diagnostic Procedure (Cont'd)

4		CHECK HO2S2 GROUND CIRCUIT FOR OPEN AND SHORT	
1. Check harness continuity between HO2S2 terminal 4 and engine ground. Refer to Wiring Diagram. Continuity should exist.		GI	
2. Also check harness for short to power.		MA	
OK or NG			
OK (With CONSULT-II)	▶	GO TO 5.	EM
OK (Without CONSULT-II)	▶	GO TO 6.	LC
NG	▶	Repair open circuit or short to power in harness or connectors.	

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P1146, P1166 HO2S2

Diagnostic Procedure (Cont'd)

5 CHECK HEATED OXYGEN SENSOR 2

E With CONSULT-II

1. Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT-II.

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
COOLAN TEMP/S	XXX °C

SEF174Y

2. Start engine and warm it up to the normal operating temperature.

3. Turn ignition switch "OFF" and wait at least 10 seconds.

4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least one minute under no load.

5. Let engine idle for one minute.


6. Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "HO2S2 (B1)/(B2)" as the monitor item with CONSULT-II.

ACTIVE TEST	
FUEL INJECTION	25 %
MONITOR	
ENG SPEED	XXX rpm
HO2S1 (B1)	XXX V
HO2S2 (B1)	XXX V
HO2S1 MNTR (B1)	RICH
HO2S2 MNTR (B1)	RICH

SEF662Y

7. Check "HO2S2 (B1)/(B2)" at idle speed when adjusting "FUEL INJECTION" to $\pm 25\%$.

(Reference data)

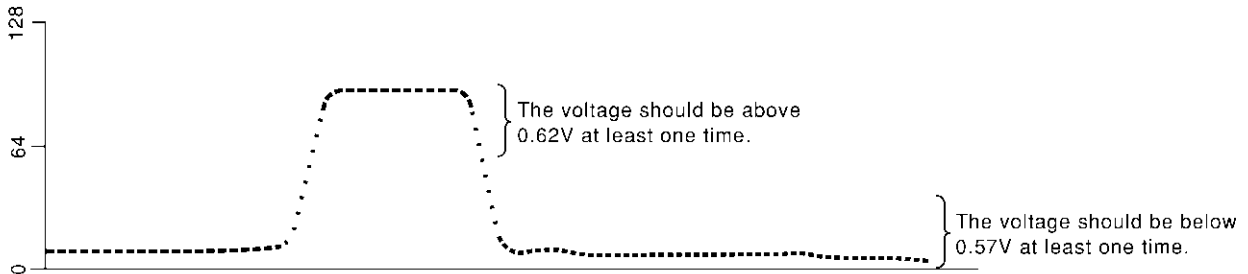

SEF972Y

"HO2S2 (B1)/(B2)" should be above 0.62V at least once when the "FUEL INJECTION" is +25%.


"HO2S2 (B1)/(B2)" should be below 0.57V at least once when the "FUEL INJECTION" is -25%.


CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

OK or NG

OK	▶	GO TO 8.
NG	▶	GO TO 7.

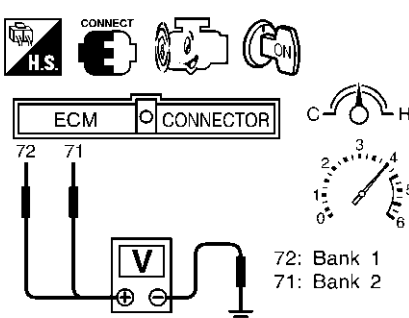
6	CHECK HEATED OXYGEN SENSOR 2-I	<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to the normal operating temperature. 2. Turn ignition switch "OFF" and wait at least 10 seconds. 3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least one minute under no load. 4. Let engine idle for one minute. 5. Set voltmeter probes between ECM terminal 72 [HO2S2 (B1) signal] or 71 [HO2S2 (B2) signal] and engine ground. <div style="text-align: center; margin: 10px 0;">  <p style="margin-left: 150px;">72: Bank 1 71: Bank 2</p> </div> <p style="text-align: right; margin-right: 50px;">SEF312XB</p> <ol style="list-style-type: none"> 6. Check the voltage when revving up to 4,000 rpm under no load at least 10 times. (Depress and release accelerator pedal as soon as possible.) The voltage should be above 0.62V at least once during this procedure. If the voltage is above 0.62V at step 6, step 7 is not necessary. 7. Keep vehicle at idling for 10 minutes, then check voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in "D" position. The voltage should be below 0.57V at least once during this procedure. 8. If NG, replace heated oxygen sensor 2. <p>CAUTION:</p> <ul style="list-style-type: none"> ● Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. ● Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant. <p style="text-align: center; margin: 10px 0;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr> <td style="width: 20%; padding: 5px;">OK</td> <td style="width: 10%; text-align: center; padding: 5px;">▶</td> <td style="padding: 5px;">GO TO 8.</td> </tr> <tr> <td style="padding: 5px;">NG</td> <td style="text-align: center; padding: 5px;">▶</td> <td style="padding: 5px;">GO TO 7.</td> </tr> </table>	OK	▶	GO TO 8.	NG	▶	GO TO 7.	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p style="background-color: black; color: white; padding: 5px;">EC</p> <p>FE</p> <p>AT</p> <p>TF</p> <p>PD</p> <p>AX</p> <p>SU</p> <p>BR</p>
OK	▶	GO TO 8.							
NG	▶	GO TO 7.							

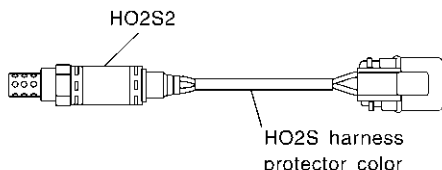7	REPLACE HEATED OXYGEN SENSOR 2	<ol style="list-style-type: none"> 1. Stop vehicle and turn ignition switch OFF. 2. Check heated oxygen sensor 2 harness protector color. <div style="text-align: center; margin: 10px 0;">  </div> <p style="text-align: center; margin: 10px 0;">HO2S2 (bank 1): White or Gray HO2S2 (bank 2): Red or Red/Brown</p> <p style="text-align: right; margin-right: 50px;">SEF372ZB</p> <p>CAUTION: Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.</p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr> <td style="width: 20%;"></td> <td style="width: 10%; text-align: center;">▶</td> <td style="padding: 5px;">Replace malfunctioning heated oxygen sensor 2.</td> </tr> </table>		▶	Replace malfunctioning heated oxygen sensor 2.	<p>ST</p> <p>RS</p> <p>BT</p> <p>HA</p> <p>SC</p> <p>EL</p> <p>IDX</p>
	▶	Replace malfunctioning heated oxygen sensor 2.				

DTC P1146, P1166 HO2S2

Diagnostic Procedure (Cont'd)

8	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	
▶	INSPECTION END

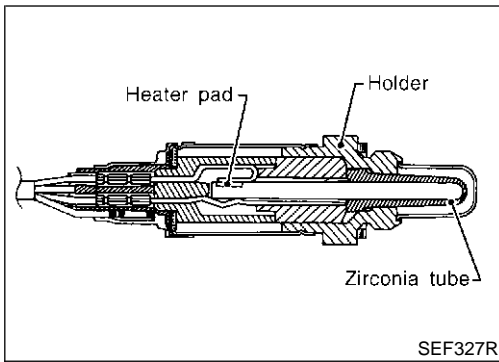

Component Description

The heated oxygen sensor 2, after three way catalyst (manifold), monitors the oxygen level in the exhaust gas on each bank. Even if switching characteristics of the heated oxygen sensor 1 are shifted, the air fuel ratio is controlled to stoichiometric, by the signal from the heated oxygen sensor 2. This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. Under normal conditions the heated oxygen sensor 2 is not used for engine control operation.

CONSULT-II Reference Value in Data Monitor Mode

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
HO2S2 (B1) HO2S2 (B2)	<ul style="list-style-type: none"> Warm-up condition After keeping engine speed between 3,500 and 4,000 rpm for one minute and at idle for one minute under no load 	Revsing engine from idle up to 3,000 rpm quickly	0 - 0.3V ↔ Approx. 0.6 - 1.0V
HO2S2 MNTR (B1) HO2S2 MNTR (B2)			LEAN ↔ RICH


ECM Terminals and Reference Value

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
72	OR	Heated oxygen sensor 2 (bank 1)	<p>[Engine is running]</p> <ul style="list-style-type: none"> Warm-up condition Revsing engine from idle up to 3,000 rpm quickly after the following conditions are met. <ul style="list-style-type: none"> After keeping engine speed between 3,500 and 4,000 rpm for one minute and at idle for one minute under no load. 	0 - Approximately 1.0V
71	OR/L	Heated oxygen sensor 2 (bank 2)	<p>[Engine is running]</p> <ul style="list-style-type: none"> Warm-up condition Revsing engine from idle up to 3,000 rpm quickly after the following conditions are met. <ul style="list-style-type: none"> After keeping engine speed between 3,500 and 4,000 rpm for one minute and at idle for one minute under no load. 	0 - Approximately 1.0V

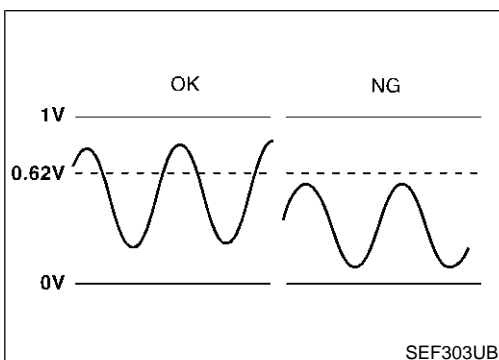


On Board Diagnosis Logic

The heated oxygen sensor 2 has a much longer switching time between rich and lean than the heated oxygen sensor 1. The oxygen storage capacity of the three way catalyst (manifold) causes the longer switching time. To judge the malfunctions of heated oxygen sensor 2, ECM monitors whether the maximum voltage of the sensor is sufficiently high during the various driving condition such as fuel-cut.

DTC P1147, P1167 HO2S2

On Board Diagnosis Logic (Cont'd)

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P1147 1147 (Bank 1) P1167 1167 (Bank 2)	Heated oxygen sensor 2 maximum voltage monitoring	The maximum voltage from the sensor is not reached to the specified voltage.	<ul style="list-style-type: none"> ● Harness or connectors (The sensor circuit is open or shorted.) ● Heated oxygen sensor 2 ● Fuel pressure ● Injectors ● Intake air leaks

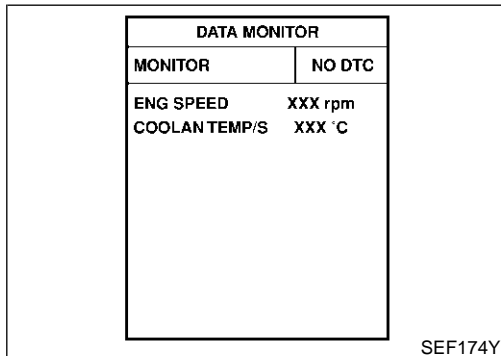

DTC Confirmation Procedure

NBEC1173

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.




TESTING CONDITION:


For better results, perform "DTC WORK SUPPORT" at a temperature of 0 to 30 °C (32 to 86 °F).

⑤ WITH CONSULT-II

NBEC1173S01

- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT-II.
- 2) Start engine and warm it up to the normal operating temperature.
- 3) Turn ignition switch "OFF" and wait at least 10 seconds.
- 4) Start engine and keep engine speed between 3,500 and 4,000 rpm for at least one minute under no load.
- 5) Let engine idle for one minute.
- 6) Make sure that "COOLAN TEMP/S" indicates more than 70°C (158°F).
If not, warm up engine and go to next step when "COOLAN TEMP/S" indication reaches to 70°C (158°F).
- 7) Open engine hood.
- 8) Select "HO2S2 (B1) P1147" or "HO2S2 (B2) P1167" of "HO2S2" in "DTC WORK SUPPORT" mode with CONSULT-II.
- 9) Start engine and following the instruction of CONSULT-II.
- 10) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS".
If "NG" is displayed, refer to EC-562, "Diagnostic Procedure".
If "CANNOT BE DIAGNOSED" is displayed, perform the following.
 - a) Turn ignition switch "OFF" and leave the vehicle in a cool place (soak the vehicle).
 - b) Return to step 1.

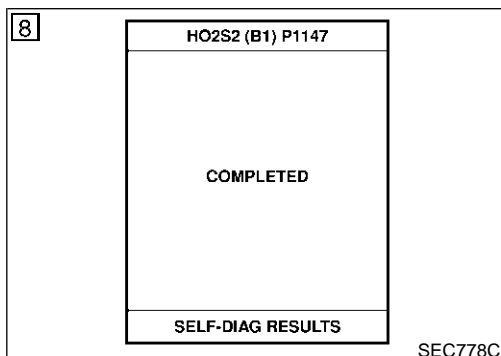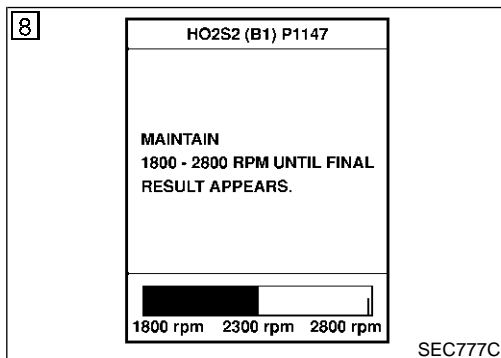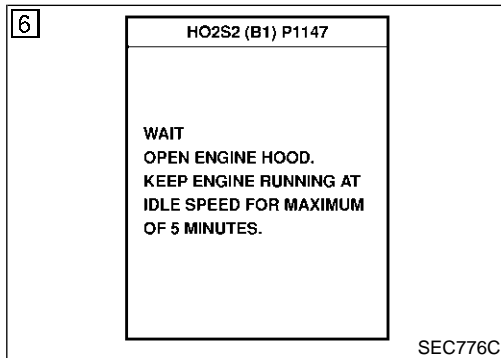

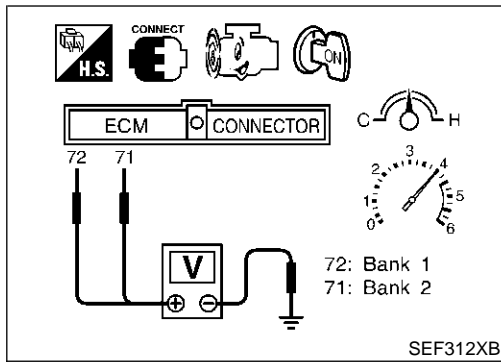

Overall Function Check

Use this procedure to check the overall function of the heated oxygen sensor 2 circuit. During this check, a DTC might not be confirmed. NBEC1174

WITH GST

- 1) Start engine and warm it up to the normal operating temperature. NBEC1174S01
- 2) Turn ignition switch "OFF" and wait at least 10 seconds.
- 3) Start engine and keep engine speed between 3,500 and 4,000 rpm for at least one minute under no load.
- 4) Let engine idle for one minute.
- 5) Set voltmeter probes between ECM terminal 72 (HO2S2 bank 1 signal) or 71 (HO2S2 bank 2 signal) and engine ground.
- 6) Check the voltage when revving up to 4,000 rpm under no load at least 10 times.
(Depress and release accelerator pedal as soon as possible.)
The voltage should be above 0.62V at least once during this procedure.
If the voltage can be confirmed in step 4, step 5 is not necessary.
- 7) Keep vehicle at idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in "D" position with "OD" OFF.
The voltage should be above 0.62V at least once during this procedure.
- 8) If NG, go to "Diagnostic Procedure", EC-562.

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P1147, P1167 HO2S2

Wiring Diagram

Wiring Diagram

=NBEC1175



NBEC1175S01

BANK 1

EC-O2S2B1-01


— : Detectable line for DTC

— : Non-detectable line for DTC

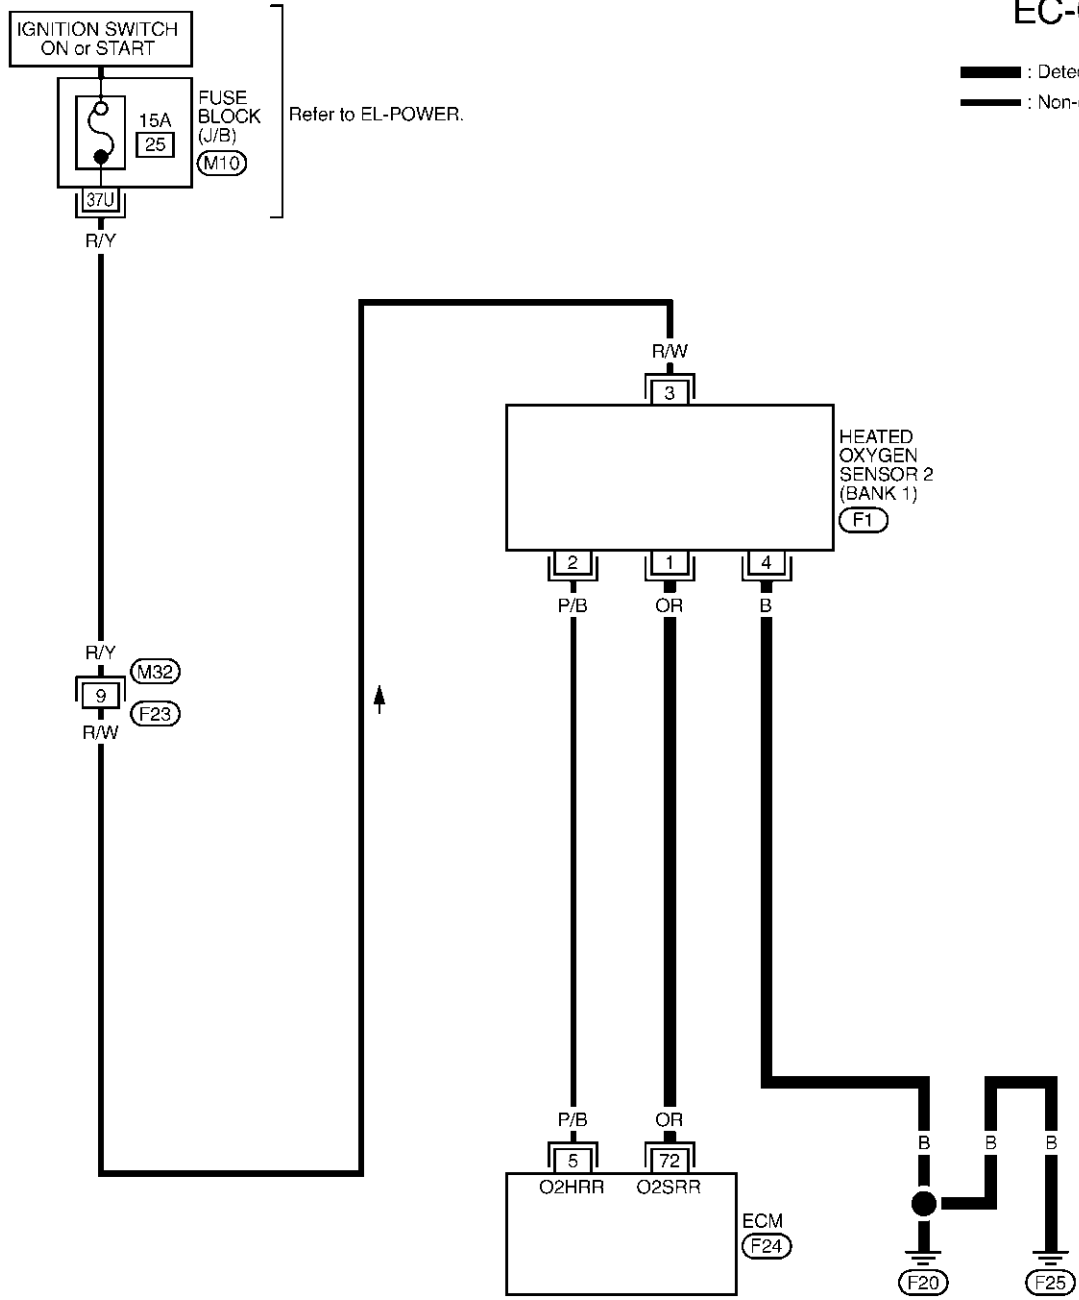

REFER TO THE FOLLOWING.

(M10) - FUSE BLOCK-JUNCTION BOX (J/B)

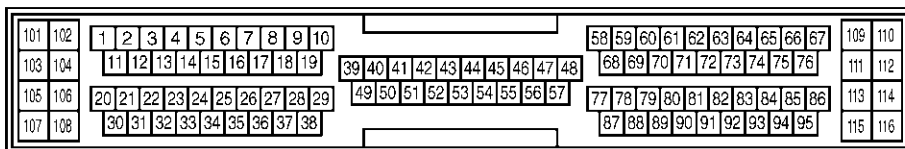

MEC799D

DTC P1147, P1167 HO2S2

Wiring Diagram (Cont'd)

BANK 2

NBEC1175S02

EC-O2S2B2-01

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS


BT

HA

SC



EL

IDX

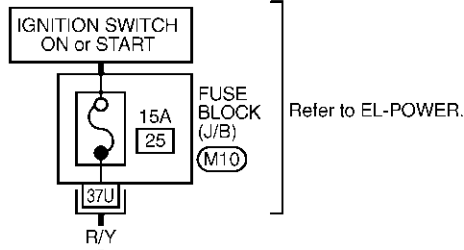


— : Detectable line for DTC

— : Non-detectable line for DTC

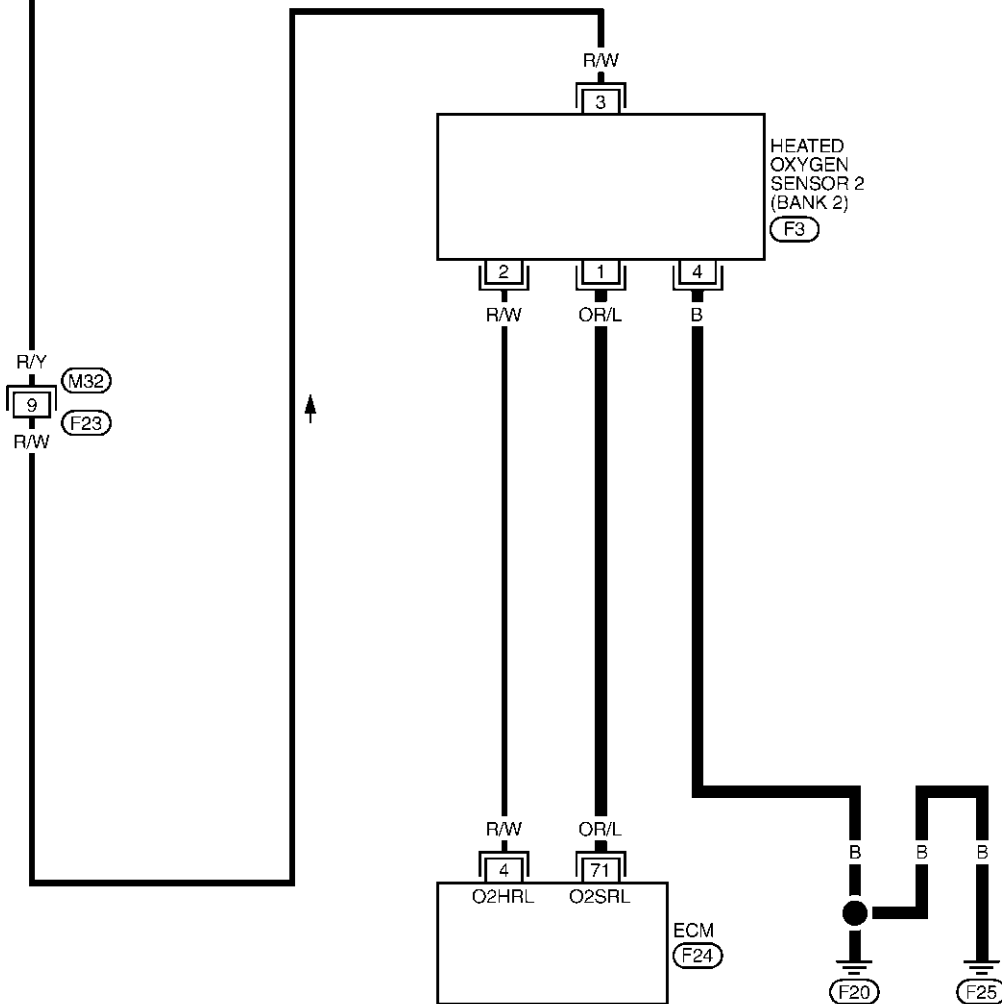

REFER TO THE FOLLOWING.

(M10) - FUSE BLOCK-JUNCTION BOX (J/B)

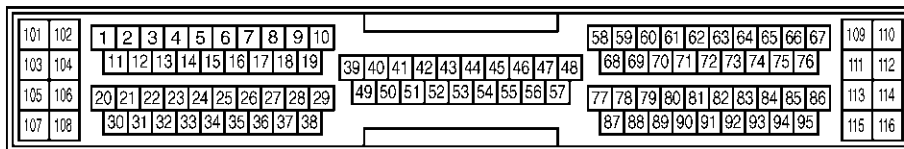


MEC800D

DTC P1147, P1167 HO2S2

Diagnostic Procedure

Diagnostic Procedure

NBEC1176

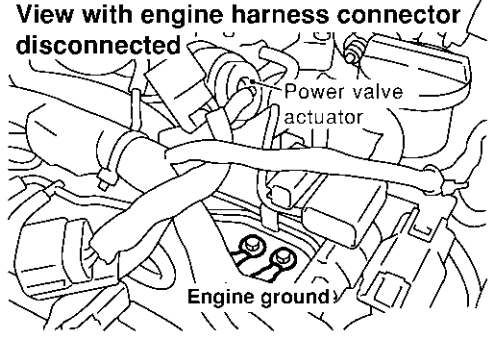
1	RETIGHTEN GROUND SCREWS
<p>1. Turn ignition switch "OFF". 2. Loosen and retighten engine ground screws.</p> <div style="text-align: center;"> <p>View with engine harness connector disconnected</p>  <p>The diagram shows a top-down view of the engine compartment. A power valve actuator is labeled at the top right. Below it, two ground screws are labeled 'Engine ground'. The text 'View with engine harness connector disconnected' is positioned above the diagram.</p> </div> <p style="text-align: right;">SEF959Y</p>	
▶ GO TO 2.	

2	CLEAR THE SELF-LEARNING DATA									
<p>Ⓔ With CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature. 2. Select "SELF-LEARNING CONT" in "WORK SUPPORT" mode with CONSULT-II. 3. Clear the self-learning control coefficient by touching "CLEAR".</p> <div style="text-align: center; margin: 10px 0;"> <table border="1" style="border-collapse: collapse;"> <tr> <th colspan="3">WORK SUPPORT</th> </tr> <tr> <td style="padding: 2px;">SELF-LEARNING CONT</td> <td style="padding: 2px;">CLEAR</td> <td style="padding: 2px;">B1 100 %</td> </tr> <tr> <td colspan="2"></td> <td style="padding: 2px;">B2 100 %</td> </tr> </table> </div> <p style="text-align: right;">SEF968Y</p> <p>4. Run engine for at least 10 minutes at idle speed. Is the 1st trip DTC P0171 or P0174 detected? Is it difficult to start engine?</p>		WORK SUPPORT			SELF-LEARNING CONT	CLEAR	B1 100 %			B2 100 %
WORK SUPPORT										
SELF-LEARNING CONT	CLEAR	B1 100 %								
		B2 100 %								
<p>ⓧ Without CONSULT-II</p> <p>1. Start engine and warm it up to normal operating temperature. 2. Turn ignition switch "OFF". 3. Disconnect mass air flow sensor harness connector, and restart and run engine for at least 5 seconds at idle speed. 4. Stop engine and reconnect mass air flow sensor harness connector. 5. Make sure 1st trip DTC P0102 is displayed. 6. Erase the 1st trip DTC memory. Refer to "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION", EC-85. 7. Make sure DTC P0000 is displayed. 8. Run engine for at least 10 minutes at idle speed. Is the 1st trip DTC P0171 or P0174 detected? Is it difficult to start engine?</p> <p style="text-align: center;">Yes or No</p>										
<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%; padding: 2px;">Yes</td> <td style="width: 5%; text-align: center; padding: 2px;">▶</td> <td style="padding: 2px;">Perform trouble diagnosis for DTC P0171, P0174. Refer to EC-282.</td> </tr> <tr> <td style="padding: 2px;">No</td> <td style="text-align: center; padding: 2px;">▶</td> <td style="padding: 2px;">GO TO 3.</td> </tr> </table>		Yes	▶	Perform trouble diagnosis for DTC P0171, P0174. Refer to EC-282.	No	▶	GO TO 3.			
Yes	▶	Perform trouble diagnosis for DTC P0171, P0174. Refer to EC-282.								
No	▶	GO TO 3.								

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

3 CHECK HO2S2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT



1. Turn ignition switch "OFF".
2. Check heated oxygen sensor 2 harness protector color.

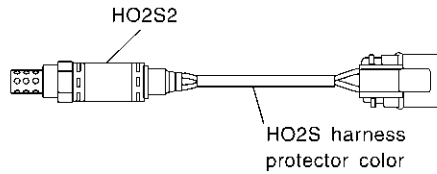

HO2S2 (bank 1): White or Gray
HO2S2 (bank 2): Red or Red/Brown

SEF372ZB

3. Disconnect corresponding heated oxygen sensor 2 harness connector.

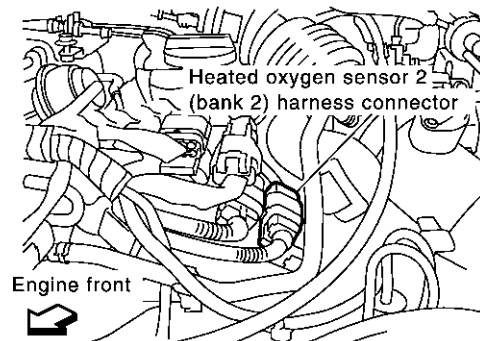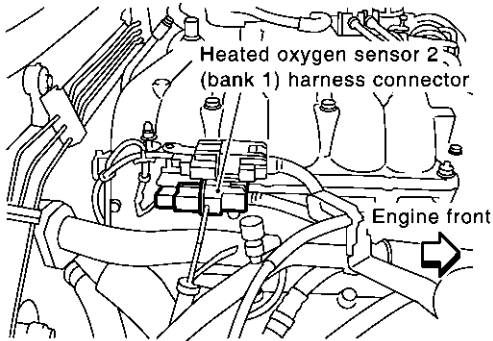

SEF971YA

4. Disconnect ECM harness connector.
5. Check harness continuity between ECM terminal and HO2S2 terminal as follows. Refer to Wiring Diagram.

DTC	Terminals		Bank
	ECM	Sensor	
P1147	72	1	Bank 1
P1167	71	1	Bank 2

MTBL1215

Continuity should exist.

6. Check harness continuity between ECM terminal or HO2S2 terminal and ground as follows. Refer to Wiring Diagram.

DTC	Terminals		Bank
	ECM or Sensor	Ground	
P1147	72 or 1	Ground	Bank 1
P1167	71 or 1	Ground	Bank 2

MTBL1216

Continuity should not exist.

7. Also check harness for short to power.

OK or NG

OK	▶	GO TO 4.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

DTC P1147, P1167 HO2S2

Diagnostic Procedure (Cont'd)

4	CHECK HO2S2 GROUND CIRCUIT FOR OPEN AND SHORT	
1. Check harness continuity between HO2S2 terminal 4 and engine ground. Refer to Wiring Diagram. Continuity should exist. 2. Also check harness for short to power. <p style="text-align: center;">OK or NG</p>		
OK (With CONSULT-II)	▶	GO TO 5.
OK (Without CONSULT-II)	▶	GO TO 6.
NG	▶	Repair open circuit or short to power in harness or connectors.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

5 CHECK HEATED OXYGEN SENSOR 2

E With CONSULT-II

1. Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT-II.

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
COOLAN TEMP/S	XXX °C

SEF174Y


2. Start engine and warm it up to the normal operating temperature.
3. Turn ignition switch "OFF" and wait at least 10 seconds.
4. Start engine and keep engine speed between 3,500 and 4,000 rpm for at least one minute under no load.
5. Let engine idle for one minute.
6. Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "HO2S2 (B1)/(B2)" as the monitor item with CONSULT-II.

ACTIVE TEST	
FUEL INJECTION	25 %
MONITOR	
ENG SPEED	XXX rpm
HO2S1 (B1)	XXX V
HO2S2 (B1)	XXX V
HO2S1 MNTR (B1)	RICH
HO2S2 MNTR (B1)	RICH

SEF662Y

7. Check "HO2S2 (B1)/(B2)" at idle speed when adjusting "FUEL INJECTION" to ±25%.

(Reference data)

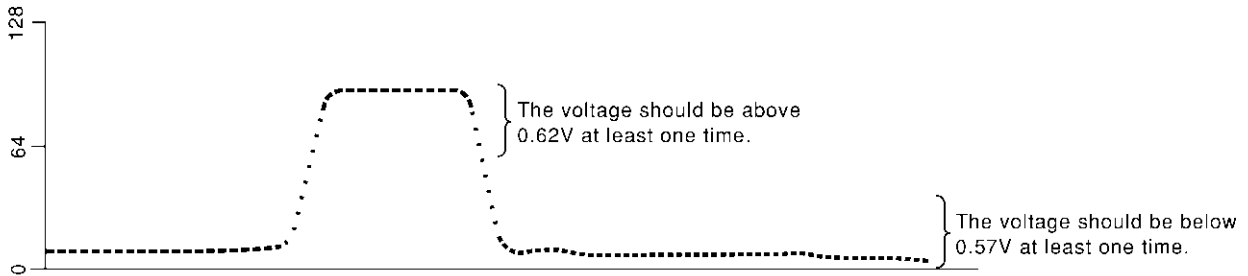

SEF972Y

"HO2S2 (B1)/(B2)" should be above 0.62V at least once when the "FUEL INJECTION" is +25%.

"HO2S2 (B1)/(B2)" should be below 0.57V at least once when the "FUEL INJECTION" is -25%.

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

OK or NG

OK	▶	GO TO 8.
NG	▶	GO TO 7.

DTC P1147, P1167 HO2S2

Diagnostic Procedure (Cont'd)

6	CHECK HEATED OXYGEN SENSOR 2-I						
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Start engine and warm it up to the normal operating temperature. 2. Turn ignition switch "OFF" and wait at least 10 seconds. 3. Start engine and keep engine speed between 3,500 and 4,000 rpm for at least one minute under no load. 4. Let engine idle for one minute. 5. Set voltmeter probes between ECM terminal 72 [HO2S2 (B1) signal] or 71 [HO2S2 (B2) signal] and engine ground. <div style="text-align: center; margin: 10px 0;"> </div> <p style="text-align: right; margin-right: 50px;">SEF312XB</p> <ol style="list-style-type: none"> 6. Check the voltage when revving up to 4,000 rpm under no load at least 10 times. (Depress and release accelerator pedal as soon as possible.) The voltage should be above 0.62V at least once during this procedure. If the voltage is above 0.62V at step 6, step 7 is not necessary. 7. Keep vehicle at idling for 10 minutes, then check voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in "D" position. The voltage should be below 0.57V at least once during this procedure. 8. If NG, replace heated oxygen sensor 2. CAUTION: <ul style="list-style-type: none"> ● Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. ● Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant. <p style="text-align: center; margin: 10px 0;">OK or NG</p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 5px;"> <tr> <td style="width: 20%; padding: 5px;">OK</td> <td style="width: 5%; text-align: center; padding: 5px;">▶</td> <td style="padding: 5px;">GO TO 8.</td> </tr> <tr> <td style="padding: 5px;">NG</td> <td style="text-align: center; padding: 5px;">▶</td> <td style="padding: 5px;">GO TO 7.</td> </tr> </table>		OK	▶	GO TO 8.	NG	▶	GO TO 7.
OK	▶	GO TO 8.					
NG	▶	GO TO 7.					

7	REPLACE HEATED OXYGEN SENSOR 2			
<ol style="list-style-type: none"> 1. Stop vehicle and turn ignition switch "OFF". 2. Check rear heated oxygen sensor 2 harness protector color. <div style="text-align: center; margin: 10px 0;"> </div> <p style="text-align: center; margin: 10px 0;"> HO2S2 (bank 1): White or Gray HO2S2 (bank 2): Red or Red/Brown </p> <p style="text-align: right; margin-right: 50px;">SEF372ZB</p> <p>CAUTION: Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.</p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr> <td style="width: 20%;"></td> <td style="width: 5%; text-align: center;">▶</td> <td>Replace malfunctioning heated oxygen sensor 2.</td> </tr> </table>			▶	Replace malfunctioning heated oxygen sensor 2.
	▶	Replace malfunctioning heated oxygen sensor 2.		

DTC P1147, P1167 HO2S2

Diagnostic Procedure (Cont'd)

8	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	
▶	INSPECTION END

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P1148, P1168 CLOSED LOOP CONTROL

On Board Diagnosis Logic

On Board Diagnosis Logic

★ The closed loop control has the one trip detection logic.

NBEC1064

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P1148 1148 (Bank 1) P1168 1168 (Bank 2)	Closed loop control	The closed loop control function for bank 1 does not operate even when vehicle is driving in the specified condition, the closed loop control function for bank 2 does not operate even when vehicle is driving in the specified condition.	<ul style="list-style-type: none"> • The front heated oxygen sensor circuit is open or shorted. • Heated oxygen sensor 1 • Heated oxygen sensor 1 heater

DTC Confirmation Procedure

NBEC1065

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

- Never raise engine speed above 3,600 rpm during the "DTC Confirmation Procedure". If the engine speed limit is exceeded, retry the procedure from step 2.
- Before performing the following procedure, confirm that battery voltage is more than 11V at idle.

3	DATA MONITOR	
	MONITOR	NO DTC
	ENG SPEED	XXX rpm
	COOLAN TEMP/S	XXX °C
	FR O2 SEN-B1	XXX V
	RR O2 SEN-B2	XXX V

SEF063Y

WITH CONSULT-II

NBEC1065S01

- 1) Start engine and warm it up to normal operating temperature.
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Hold engine speed at 2,000 rpm and check one of the following.
 - "HO2S1 (B1)/(B2)" voltage should go above 0.70V at least once.
 - "HO2S1 (B1)/(B2)" voltage should go below 0.21V at least once.

If the check result is NG, perform "Diagnosis Procedure", EC-569.
If the check result is OK, perform the following step.
- 4) Let engine idle at least 5 minutes.
- 5) Maintain the following condition at least 50 consecutive seconds.

B/FUEL SCHDL	3.6 msec or more
ENG SPEED	1,500 rpm or more
Selector lever	Suitable position
VHCL SPEED SE	More than 70 km/h (43 MPH)

DTC P1148, P1168 CLOSED LOOP CONTROL

DTC Confirmation Procedure (Cont'd)

During this test, P0134 and/or P0154 may be displayed on CONSULT-II screen.


- 6) If DTC is detected, go to "Diagnostic Procedure", EC-569.

GI

MA

EM

LC

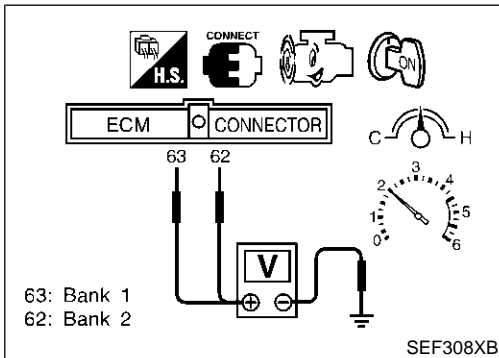

Overall Function Check

Use this procedure to check the overall function of the closed loop control. During this check, a DTC might not be confirmed.

NBEC1066

EC

WITH GST

NBEC1066S01

FE

- 1) Start engine and warm it up to normal operating temperature.
- 2) Set voltmeter probes between ECM terminal 63 [Heated oxygen sensor 1 bank 1 signal] or 62 [Heated oxygen sensor 1 bank 2 signal] and engine ground.
- 3) Check the following with engine speed held at 2,000 rpm constant under no-load.
 - The voltage should go above 0.70V at least once.
 - The voltage should go below 0.21V at least once.
- 4) If NG, go to "Diagnostic Procedure", EC-569.

AT

TF

PD

AX

SU

BR

Diagnostic Procedure

Perform trouble diagnosis for "DTC P0133, P0153", EC-239.

NBEC1067

ST

RS

BT

HA


SC

EL

IDX

DTC P1165 SWIRL CONTROL VALVE CONTROL VACUUM CHECK SWITCH

Component Description

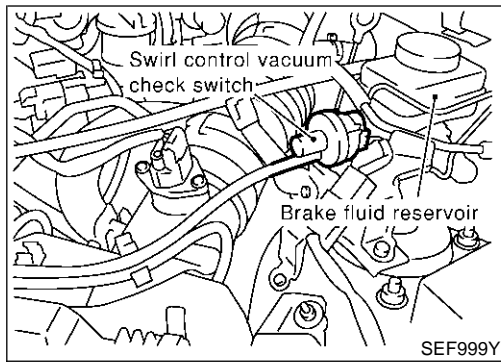


Component Description

NBEC1068

The swirl control valve control vacuum check switch detects vacuum signal to the swirl control valve, and sends "ON" or "OFF" signal to the ECM.

When vacuum is supplied to the valve, the swirl control valve control vacuum check switch sends "OFF" signal to the ECM.

The swirl control valve control vacuum check switch is not used to control the engine system, it is used for on board diagnosis.

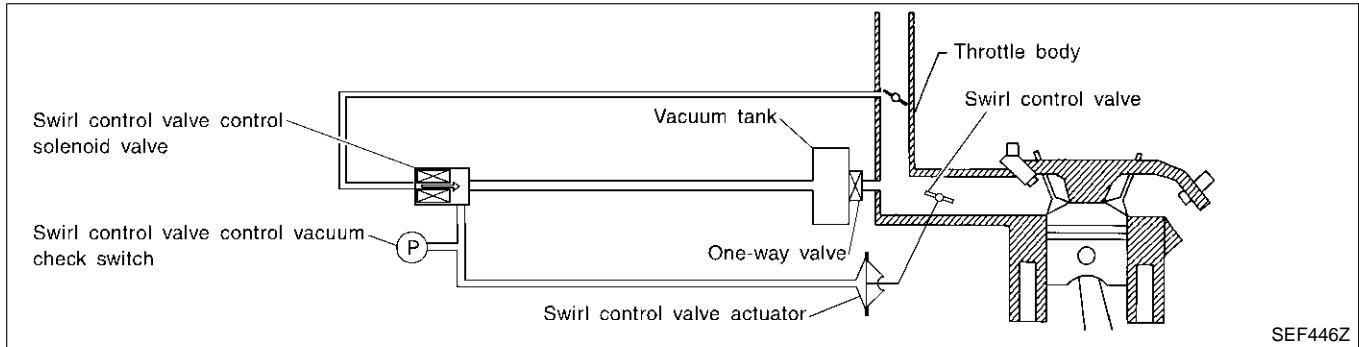

CONSULT-II Reference Value in Data Monitor Mode

NBEC1069

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
SWL CON VC SW	<ul style="list-style-type: none"> Engine speed: Idle Engine coolant temperature is between 15°C (59°F) to 50°C (122°F). 	OFF
	<ul style="list-style-type: none"> Engine speed: Idle Engine coolant temperature is above 55°C (131°F). 	ON

ECM Terminals and Reference Value

NBEC1070

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMINAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
55	W/B	Swirl control valve control vacuum check switch	[Engine is running] <ul style="list-style-type: none"> Idle speed Engine coolant temperature is between 15 to 50°C (59 to 122°F). 	Approximately 5V
			[Engine is running] <ul style="list-style-type: none"> Idle speed Engine coolant temperature is above 55°C (131°F). 	0 - 1.0V

DTC P1165 SWIRL CONTROL VALVE CONTROL VACUUM CHECK SWITCH

On Board Diagnosis Logic

On Board Diagnosis Logic

NBEC1071

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P1165 1165	Swirl control valve control vacuum check switch	The swirl control valve control vacuum check switch remains "OFF" under specified engine conditions.	<ul style="list-style-type: none"> • Harness or connectors (Swirl control valve control vacuum check switch circuit is open.) • Hoses (Hoses are clogged or connected incorrectly.) • Swirl control valve control solenoid valve • Swirl control valve control vacuum check switch

GI

MA

EM


LC

EC

FE

AT

TF

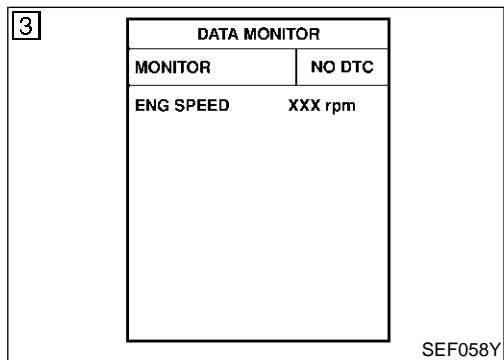

DTC Confirmation Procedure

NBEC1072

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

For best results, perform the test at a temperature above 5°C (41°F).

Ⓔ WITH CONSULT-II

NBEC1072S01

- 1) Turn ignition switch "OFF" and wait at least 10 seconds.
- 2) Turn ignition switch "ON".
- 3) Select "DATA MONITOR" mode with CONSULT-II and wait at least 5 seconds.
If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-573.

Ⓔ WITH GST

NBEC1072S02

Follow the procedure "WITH CONSULT-II" above.

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P1165 SWIRL CONTROL VALVE CONTROL VACUUM CHECK SWITCH



Wiring Diagram

Wiring Diagram


NBEC1073

EC-S/VCSW-01

— : Detectable line for DTC
 — : Non-detectable line for DTC

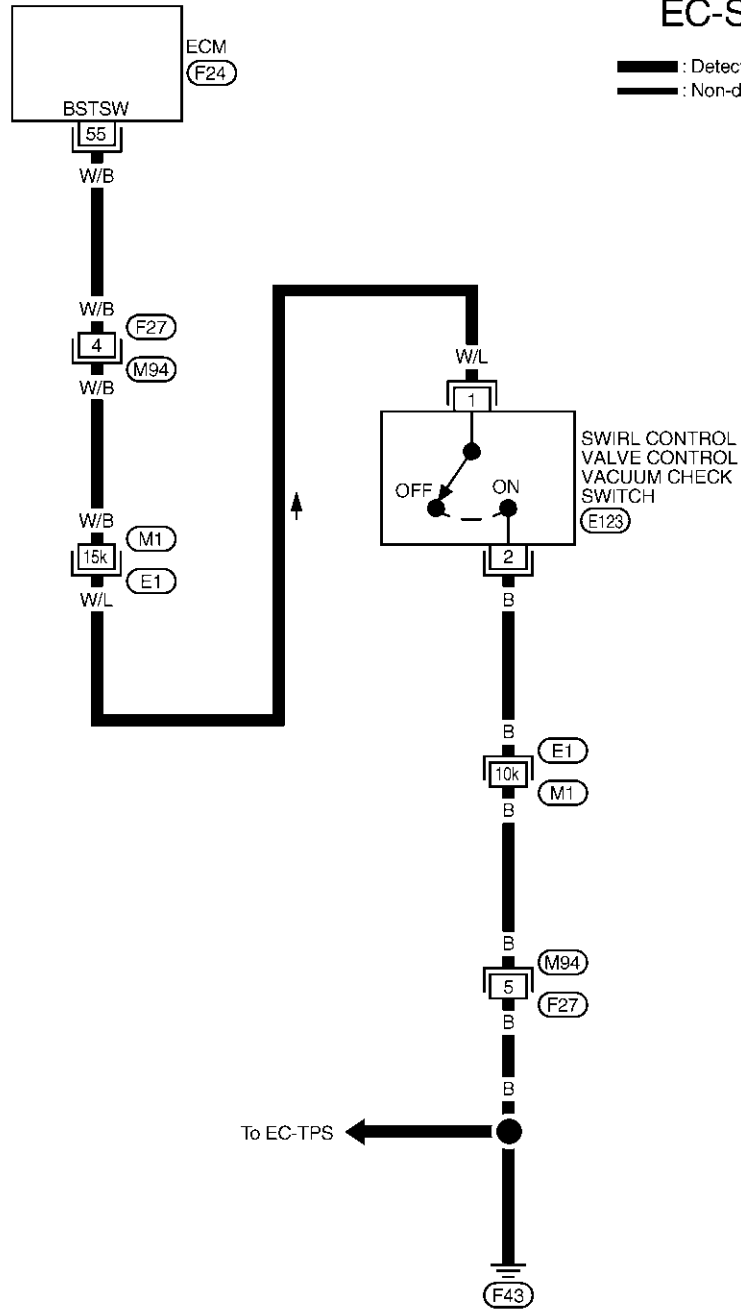


REFER TO THE FOLLOWING.
 (E1) -SUPER
 MULTIPLE JUNCTION (SMJ)

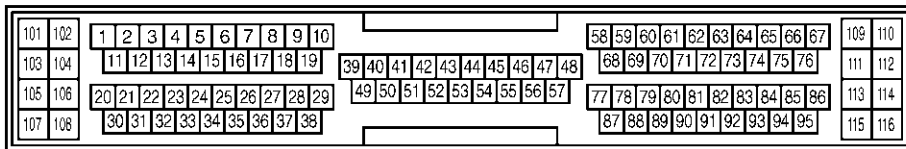


MEC242E

Diagnostic Procedure

NBEC1074

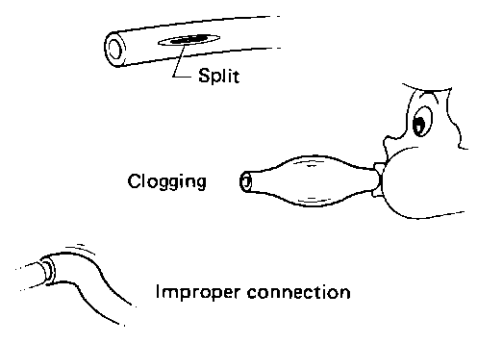1	CHECK HOSES		
<p>1. Turn ignition switch "OFF". 2. Check hose for clogging or improper connection.</p> <div style="text-align: center;">  <p>Split</p> <p>Clogging</p> <p>Improper connection</p> </div> <p style="text-align: right;">SEF109L</p>			
OK or NG			
OK	▶	GO TO 2.	
NG	▶	Repair or reconnect the hose.	

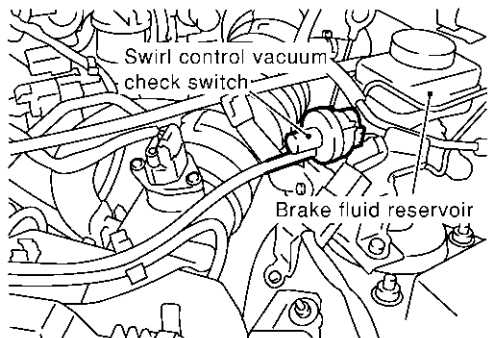2	CHECK SWIRL CONTROL VALVE CONTROL VACUUM CHECK SWITCH GROUND CIRCUIT FOR OPEN AND SHORT		
<p>1. Disconnect swirl control valve control vacuum check switch harness connector.</p> <div style="text-align: center;">  <p>Swirl control vacuum check switch</p> <p>Brake fluid reservoir</p> </div> <p style="text-align: right;">SEF999Y</p>			
<p>2. Check harness continuity between terminal 2 and ground. Refer to Wiring Diagram. Continuity should exist.</p> <p>3. Also check harness for short to power.</p> <p style="text-align: center;">OK or NG</p>			
OK	▶	GO TO 4.	
NG	▶	GO TO 3.	

3	DETECT MALFUNCTIONING PART		
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E1, M1 and M92, F27 ● Harness for open between swirl control valve control vacuum check switch and engine ground 			
		▶	Repair open circuit or short to power in harness connectors.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P1165 SWIRL CONTROL VALVE CONTROL VACUUM CHECK SWITCH

Diagnostic Procedure (Cont'd)

4	CHECK SWIRL CONTROL VALVE CONTROL VACUUM CHECK SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
<ol style="list-style-type: none"> 1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 55 and swirl control valve control vacuum check switch terminal 1. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to ground and short to power. 		
OK or NG		
OK	▶	GO TO 5.
NG	▶	Repair open circuit, short to ground or short to power in harness connectors.

5	CHECK SWIRL CONTROL VALVE CONTROL VACUUM CHECK SWITCH									
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect vacuum hose connected to swirl control valve control vacuum check switch. 3. Attach vacuum pump to swirl control valve control vacuum check switch. 4. Turn ignition switch "ON". 5. Check voltage between ECM terminal 55 and ground under the following conditions. 										
		<table border="1"> <thead> <tr> <th>Applied pressure</th> <th>Voltage V</th> </tr> </thead> <tbody> <tr> <td>More than -20.0 kPa (-150 mmHg, -5.91 inHg)</td> <td>Engine ground</td> </tr> <tr> <td>-20.0 to -23.0 kPa (-150 to -172 mmHg, -5.91 to -6.77 inHg)</td> <td>Engine ground or Approx. 4.8</td> </tr> <tr> <td>Less than -23.0 kPa (-172 mmHg, -6.77 inHg)</td> <td>Approx. 4.8</td> </tr> </tbody> </table>	Applied pressure	Voltage V	More than -20.0 kPa (-150 mmHg, -5.91 inHg)	Engine ground	-20.0 to -23.0 kPa (-150 to -172 mmHg, -5.91 to -6.77 inHg)	Engine ground or Approx. 4.8	Less than -23.0 kPa (-172 mmHg, -6.77 inHg)	Approx. 4.8
Applied pressure	Voltage V									
More than -20.0 kPa (-150 mmHg, -5.91 inHg)	Engine ground									
-20.0 to -23.0 kPa (-150 to -172 mmHg, -5.91 to -6.77 inHg)	Engine ground or Approx. 4.8									
Less than -23.0 kPa (-172 mmHg, -6.77 inHg)	Approx. 4.8									
SEF709X										
OK or NG										
OK	▶	GO TO 6.								
NG	▶	Replace swirl control valve control vacuum check switch.								


DTC P1165 SWIRL CONTROL VALVE CONTROL VACUUM CHECK SWITCH

Diagnostic Procedure (Cont'd)

6 CHECK SWIRL CONTROL VALVE CONTROL SOLENOID VALVE

Ⓔ With CONSULT-II

1. Reconnect the disconnected harness connectors.
2. Start engine and let it idle.
3. Remove vacuum hose connected to swirl control valve actuator.
4. Select "SWIRL CONT SOL/V" in "ACTIVE TEST" mode with CONSULT-II.
5. Touch "ON" and "OFF" on CONSULT-II screen.
6. Check vacuum existence and operation delay time under the following conditions.

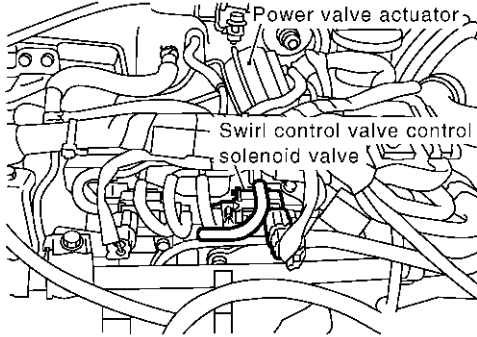

SWIRL CONT SOL/ VALVE	Vacuum
ON	Should exist.
OFF	Should not exist.



Operation takes less than 1 second.



SEC596D

⊗ Without CONSULT-II

1. Reconnect ECM harness connector.
2. Remove vacuum hose connected to swirl control valve actuator.
3. Start engine and let it idle.
4. Apply 12V of direct current between swirl control valve control solenoid valve terminals and 2.
5. Check vacuum existence and operation delay time under the following conditions.

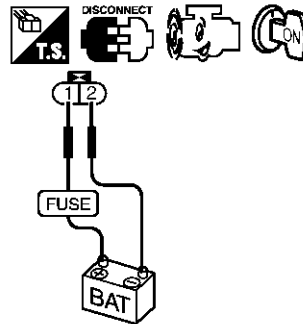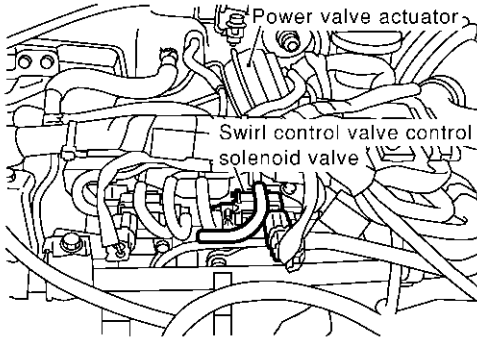

Condition	Vacuum
12V direct current supply	Should exist.
No supply	Should not exist.

Operation takes less than 1 second.

SEF005Z

OK or NG

OK	▶	GO TO 7.
NG	▶	Replace intake manifold collector assembly.

7 CHECK INTERMITTENT INCIDENT

Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.

▶ INSPECTION END

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P1217 ENGINE OVER TEMPERATURE

On Board Diagnosis Logic

On Board Diagnosis Logic

NBEC1177

If the cooling fan or another component in the cooling system malfunctions, engine coolant temperature will rise. When the engine coolant temperature reaches an abnormally high temperature condition, a malfunction is indicated.

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P1217 1217	Engine over temperature	<ul style="list-style-type: none">● Cooling fan does not operate properly (Overheat).● Cooling fan system does not operate properly (Overheat).● Engine coolant was not added to the system using the proper filling method.● Engine coolant is not within the specified range.	<ul style="list-style-type: none">● Cooling fan (Crankshaft driven)● Thermostat● Radiator hose● Radiator● Radiator cap● Water pump <p>For more information, refer to "MAIN 12 CAUSES OF OVERHEATING", EC-580.</p>

CAUTION:

When a malfunction is indicated be sure to replace the coolant, follow the procedure in "Changing Engine Coolant", "ENGINE MAINTENANCE", MA-15. Also, replace the engine oil.

- 1) Fill radiator with coolant up to specified level with a filling speed of 2 liters per minute like pouring coolant by kettle. Be sure to use coolant with the proper mixture ratio. Refer to "Anti-freeze Coolant Mixture Ratio", "RECOMMENDED FLUIDS AND LUBRICANTS", MA-13.
- 2) After refilling coolant, run engine to ensure that no water-flow noise is emitted.

Overall Function Check


NBEC1178

Use this procedure to check the overall function of the cooling fan system, a DTC might not be confirmed.

WARNING:

Never remove the radiator cap when the engine is hot. Serious burns could be caused by high-pressure fluid escaping from the radiator.

Wrap a thick cloth around the cap. Carefully remove the cap by turning it a quarter turn to allow built-up pressure to escape. Then turn the cap all the way off.

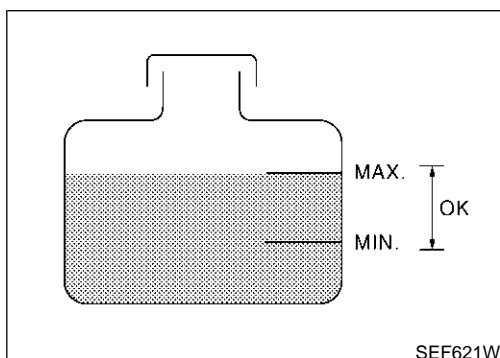

ⓔ WITH CONSULT-II

NBEC1178S01

- 1) Check the coolant level in the reservoir tank and radiator. **Allow engine to cool before checking coolant level.** If the coolant level in the reservoir and/or radiator is below the proper range, go to "Diagnostic Procedure", EC-577.
- 2) Confirm whether customer filled the coolant or not. If customer filled the coolant, go to "Diagnostic Procedure", EC-577.

ⓔ WITH GST

NBEC1178S02

Follow the procedure "WITH CONSULT-II" above.

DTC P1217 ENGINE OVER TEMPERATURE


Diagnostic Procedure

Diagnostic Procedure


NBEC1179

1	CHECK COOLING FAN (CRANKSHAFT DRIVEN) OPERATION	
Start engine and make sure that cooling fan (crankshaft driven) operates.		
OK or NG		
OK	▶	GO TO 2.
NG	▶	Check cooling fan (crankshaft driven). Refer to LC-22, "Cooling Fan".

GI
MA
EM

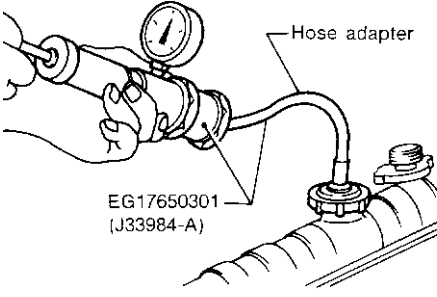2	CHECK COOLING SYSTEM FOR LEAK	
Apply pressure to the cooling system with a tester, and check if the pressure drops.		
CAUTION: Higher than the specified pressure may cause radiator damage.		
Testing pressure: 157 kPa (1.6 kg/cm ² , 23 psi)		
		
Pressure should not drop.		
OK or NG		
OK	▶	GO TO 3.
NG	▶	Check the following for leak <ul style="list-style-type: none"> ● Hose ● Radiator ● Water pump Refer to "Water Pump", LC-13.

LC
EC
FE
AT
TF
PD
AX
SU
BR

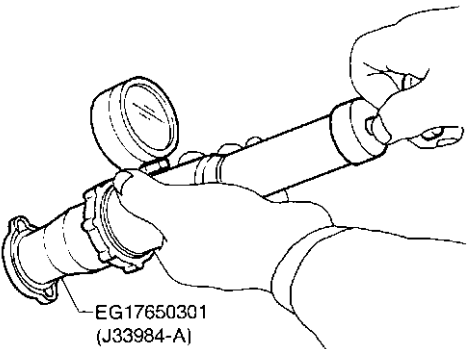3	CHECK RADIATOR CAP	
Apply pressure to cap with a tester and check radiator cap relief pressure.		
		
Radiator cap relief pressure: 59 - 98 kPa (0.59 - 0.98 bar, 0.6 - 1.0 kg/cm ² , 9 - 14 psi)		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Replace radiator cap.


ST
RS
BT
HA
SC
EL
IDX

DTC P1217 ENGINE OVER TEMPERATURE

Diagnostic Procedure (Cont'd)

4 CHECK THERMOSTAT

1. Check valve seating condition at normal room temperatures.
It should seat tightly.
2. Check valve opening temperature and valve lift.

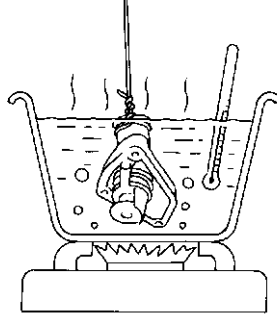

SLC949A

Valve opening temperature:
76.5°C (170°F) [standard]

Valve lift:
More than 8 mm/108°C (0.315 in/226°F)

3. Check if valve is closed at 5°C (9°F) below valve opening temperature.
For details, refer to "Thermostat", LC-18.

OK or NG

OK	▶	GO TO 5.
NG	▶	Replace thermostat


DTC P1217 ENGINE OVER TEMPERATURE

Diagnostic Procedure (Cont'd)

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


5 CHECK ENGINE COOLANT TEMPERATURE SENSOR

Check resistance as shown in the figure.

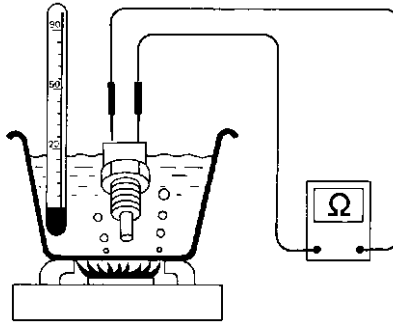

<Reference data>

Temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
50 (122)	0.68 - 1.00
90 (194)	0.236 - 0.260

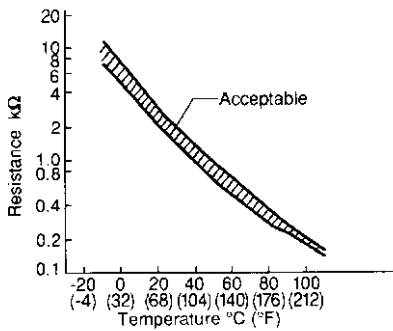

SEF152P

MTBL0229

SEF012P

OK or NG

OK	▶	GO TO 6.
NG	▶	Replace engine coolant temperature sensor.

6 CHECK MAIN 12 CAUSES

If the cause cannot be isolated, go to "MAIN 12 CAUSES OF OVERHEATING", EC-580.

▶ INSPECTION END

DTC P1217 ENGINE OVER TEMPERATURE

Main 12 Causes of Overheating

Main 12 Causes of Overheating

NBEC1180


Engine	Step	Inspection item	Equipment	Standard	Reference page
OFF	1	<ul style="list-style-type: none"> Blocked radiator Blocked condenser Blocked radiator grille Blocked bumper 	<ul style="list-style-type: none"> Visual 	No blocking	—
	2	<ul style="list-style-type: none"> Coolant mixture 	<ul style="list-style-type: none"> Coolant tester 	50 - 50% coolant mixture	See "RECOMMENDED FLUIDS AND LUBRICANTS", MA-12.
	3	<ul style="list-style-type: none"> Coolant level 	<ul style="list-style-type: none"> Visual 	Coolant up to MAX level in reservoir tank and radiator filler neck	See "Changing Engine Coolant", "ENGINE MAINTENANCE", MA-15.
	4	<ul style="list-style-type: none"> Radiator cap 	<ul style="list-style-type: none"> Pressure tester 	59 - 98 kPa (0.6 - 1.0 kg/cm ² , 9 - 14 psi) (Limit)	See "System Check", "ENGINE COOLING SYSTEM", LC-12.
ON*1	5	<ul style="list-style-type: none"> Coolant leaks 	<ul style="list-style-type: none"> Visual 	No leaks	See "System Check", "ENGINE COOLING SYSTEM", LC-12.
ON*1	6	<ul style="list-style-type: none"> Thermostat 	<ul style="list-style-type: none"> Touch the upper and lower radiator hoses 	Both hoses should be hot	See "Thermostat" and "Radiator", "ENGINE COOLING SYSTEM", LC-16, LC-21.
ON*1	7	<ul style="list-style-type: none"> Cooling fan (Crankshaft driven) 	<ul style="list-style-type: none"> Visual 	Operating	See LC-26, "Cooling Fan".
OFF	8	<ul style="list-style-type: none"> Combustion gas leak 	<ul style="list-style-type: none"> Color checker chemical tester 4 Gas analyzer 	Negative	—
ON*2	9	<ul style="list-style-type: none"> Coolant temperature gauge 	<ul style="list-style-type: none"> Visual 	Gauge less than 3/4 when driving	—
		<ul style="list-style-type: none"> Coolant overflow to reservoir tank 	<ul style="list-style-type: none"> Visual 	No overflow during driving and idling	See "Changing Engine Coolant", "ENGINE MAINTENANCE", MA-15.
OFF*3	10	<ul style="list-style-type: none"> Coolant return from reservoir tank to radiator 	<ul style="list-style-type: none"> Visual 	Should be initial level in reservoir tank	See "ENGINE MAINTENANCE", MA-15.
OFF	11	<ul style="list-style-type: none"> Cylinder head 	<ul style="list-style-type: none"> Straight gauge feeler gauge 	0.1 mm (0.004 in) Maximum distortion (warping)	See "Inspection", "CYLINDER HEAD DISTORTION", EM-42.
	12	<ul style="list-style-type: none"> Cylinder block and pistons 	<ul style="list-style-type: none"> Visual 	No scuffing on cylinder walls or piston	See "Inspection", "CYLINDER BLOCK DISTORTION AND WEAR", EM-63.

*1: Engine running at 3,000 rpm for 10 minutes.

*2: Drive at 90 km/h (55 MPH) for 30 minutes and then let idle for 10 minutes.

*3: After 60 minutes of cool down time.

For more information, refer to "Engine Cooling System", "OVERHEATING CAUSE ANALYSIS", LC-26.

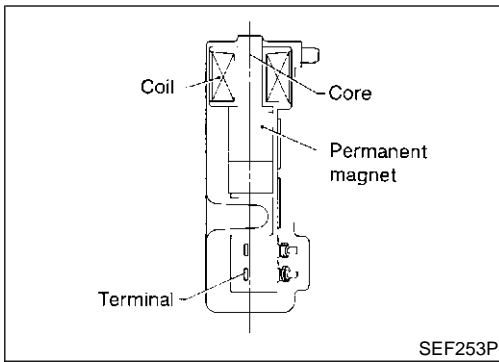

Component Description

NBEC1075

The crankshaft position sensor (REF) is located on the oil pan (upper) facing the crankshaft pulley. It detects the TDC (Top Dead Center) signal (120° signal).

The sensor consists of a permanent magnet, core and coil.

When engine is running, the gap between the sensor and the crankshaft pulley will periodically change. Permeability near the sensor also changes.

Due to the permeability change, the magnetic flux near the core is changed. Therefore, the voltage signal generated in the coil is changed.

The ECM receives the voltage signal and detects the TDC signal (120° signal).

GI

MA

EM

LG

EC

FE

AT

TF

CONSULT-II Reference Value in Data Monitor Mode

NBEC1076

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
CKPS-RPM (POS)	<ul style="list-style-type: none"> Tachometer: Connect Run engine and compare tachometer indication with the CONSULT-II value. 	Almost the same speed as the CONSULT-II value.
ENG SPEED		

PD

AX

SU

ECM Terminals and Reference Value

NBEC1077

Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

BR

ST

RS

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
75	LG	Crankshaft position sensor (REF)	<p>[Engine is running]</p> <ul style="list-style-type: none"> Warm-up condition Idle speed 	<p>Approximately 2.3V★ (AC voltage)</p> <p>SEF581X</p>

BT

HA

SC

EL

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

IDX

DTC P1335 CKP SENSOR

On Board Diagnosis Logic

On Board Diagnosis Logic

NBEC1078

DTC No.	Trouble diagnosis name	DTC Detecting Condition		Possible Cause
P1335 1335	Crankshaft position sensor (REF) circuit	A)	120° signal is not entered to ECM for the first few seconds during engine cranking.	<ul style="list-style-type: none"> • Harness or connectors (The crankshaft position sensor (REF) circuit is open or shorted.) • Crankshaft position sensor (REF) • Starter motor (Refer to SC section.) • Starting system circuit (Refer to SC section.) • Dead (Weak) battery
		B)	120° signal is not entered to ECM during engine running.	
		C)	120° signal cycle excessively changes during engine running.	

FAIL-SAFE MODE

NBEC1078S01

When the ECM enters the fail-safe mode, the MIL illuminates.

Detected items	Engine operating condition in fail-safe mode
Crankshaft position sensor (REF) circuit	Compression TDC signal (120° signal) is controlled by camshaft position sensor (PHASE) signal and crankshaft position sensor (POS) signal. Ignition timing will be delayed 0° to 2°.

DTC Confirmation Procedure

NBEC1079

NOTE:

- Perform "PROCEDURE FOR MALFUNCTION A" first. If 1st trip DTC cannot be confirmed, perform "PROCEDURE FOR MALFUNCTION B AND C".
- If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10.5V at idle.

PROCEDURE FOR MALFUNCTION A

NBEC1079S01

Ⓔ With CONSULT-II

NBEC1079S0101

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Crank engine for at least 2 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-584.

Ⓔ With GST

NBEC1079S0102

Follow the procedure "With CONSULT-II" above.

PROCEDURE FOR MALFUNCTION B AND C

NBEC1079S02

Ⓔ With CONSULT-II

NBEC1079S0201

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and run it for at least 2 seconds at idle speed.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-584.

Ⓔ With GST

NBEC1079S0202

Follow the procedure "With CONSULT-II" above.

2	DATA MONITOR	
	MONITOR	NO DTC
	COOLAN TEMP/S	XXX °C

SEF013Y

3	DATA MONITOR	
	MONITOR	NO DTC
	ENG SPEED	XXX rpm

SEF058Y

DTC P1335 CKP SENSOR

Wiring Diagram

Wiring Diagram

NBEC1080

EC-REF-01

GI

— : Detectable line for DTC

— : Non-detectable line for DTC

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS






BT

HA

SC

EL

IDX

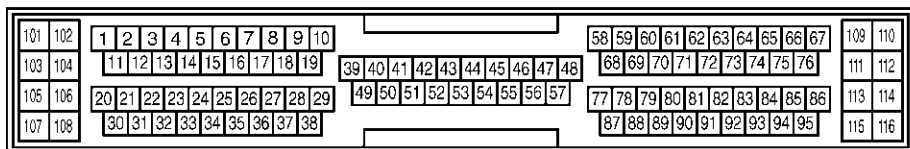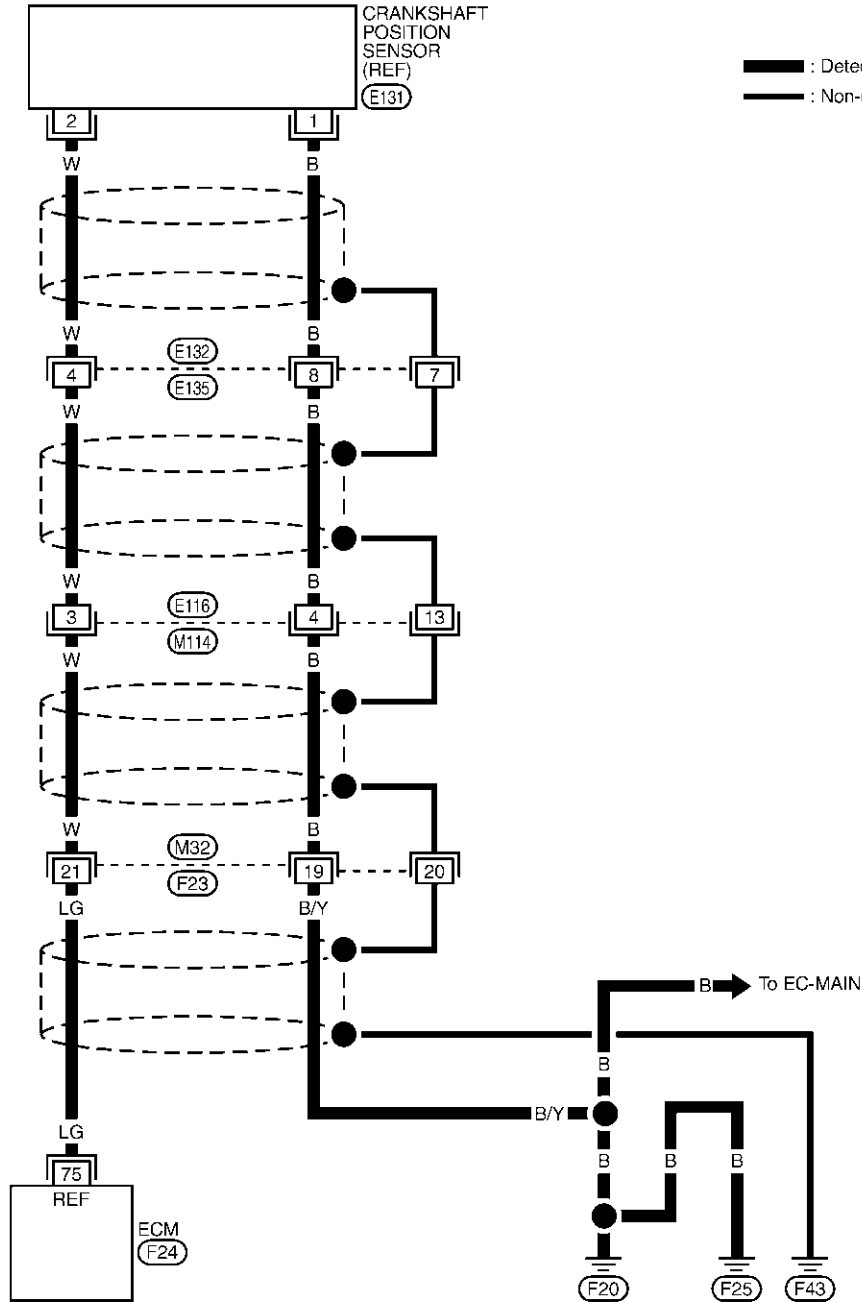


MEC243E


DTC P1335 CKP SENSOR

Diagnostic Procedure

Diagnostic Procedure

NBEC1081

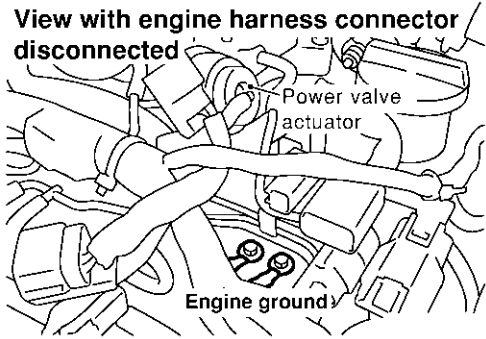1	RETIGHTEN GROUND SCREWS
<p>1. Turn ignition switch "OFF". 2. Loosen and retighten engine ground screws.</p>	
<p>View with engine harness connector disconnected</p>  <p>The diagram shows a top-down view of the engine compartment. Two ground screws are labeled 'Engine ground'. A power valve actuator is also labeled. The engine harness connector is shown disconnected.</p>	
SEF959Y	
▶	GO TO 2.

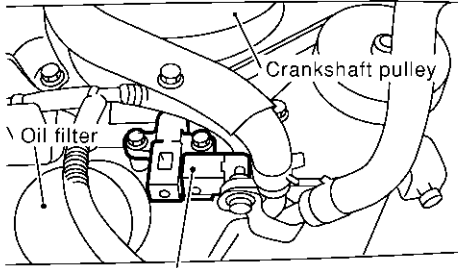2	CHECK CKP SENSOR (REF) INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT
<p>1. Disconnect CKP sensor (REF) harness connector.</p>	
 <p>The diagram shows the crankshaft pulley, oil filter, and the crankshaft position sensor (REF) harness connector. The sensor is labeled 'Crankshaft position sensor (REF) harness connector'.</p>	
SEF011Z	
<p>2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 75 and CKP sensor (REF) terminal 2. Refer to Wiring Diagram. Continuity should exist. 4. Also check harness for short to ground and short to power.</p>	
OK or NG	
OK	▶ GO TO 4.
NG	▶ GO TO 3.

3	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none">● Harness connectors E132, E135● Harness connectors E116, M114● Harness connectors M32, F23● Harness for open or short between crankshaft position sensor (REF) and ECM	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

DTC P1335 CKP SENSOR


Diagnostic Procedure (Cont'd)

4	CHECK CKP SENSOR (REF) GROUND CIRCUIT FOR OPEN AND SHORT	
1. Turn ignition switch "OFF". 2. Check harness continuity between CKP sensor (REF) terminal 1 and engine ground. Continuity should exist. 3. Also check harness for short to power.		
OK or NG		
OK	▶	GO TO 6.
NG	▶	GO TO 5.


GI
MA
EM
LC

5	DETECT MALFUNCTIONING PART	
Check the following. <ul style="list-style-type: none"> ● Harness connectors E132, E135 ● Harness connectors E116, M114 and M32, F23 ● Harness for open between crankshaft position sensor (REF) and engine ground 		
▶ Repair open circuit or short to power in harness or connector.		

EC
FE

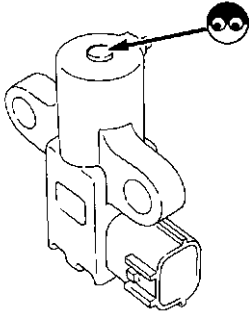6	CHECK CKP SENSOR (REF)-I	
1. Loosen the fixing bolts and remove the CKP sensor (REF). 2. Visually check the CKP sensor (REF) for chipping.		
		
SEF585P		
OK or NG		
OK	▶	GO TO 7.
NG	▶	Replace crankshaft position sensor (REF).

AT
TF
PD
AX
SU
BR
ST

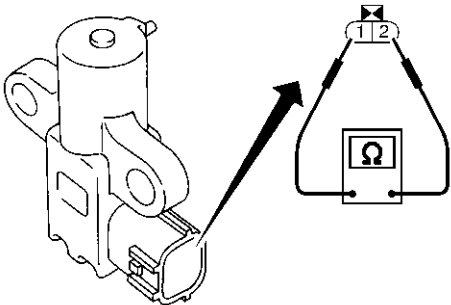7	CHECK CKP SENSOR (REF)-II	
Check resistance between CKP sensor (REF) terminals 1 and 2.		
		
Resistance: Approximately 470 - 570 Ω [AT 20°C (68°F)]		
SEF350X		
OK or NG		
OK	▶	GO TO 8.
NG	▶	Replace crankshaft position sensor (REF).

RS
BT
HA
SC
EL
IDX

DTC P1335 CKP SENSOR

Diagnostic Procedure (Cont'd)


8	CHECK CKP SENSOR (REF) SHIELD CIRCUIT FOR OPEN AND SHORT
1. Turn ignition switch "OFF". 2. Disconnect harness connectors E132, E135. 3. Check harness continuity between harness connector E135 terminal 7 and engine ground. Continuity should exist. 4. Also check harness for short to power.	
OK or NG	
OK	▶ GO TO 10.
NG	▶ GO TO 9.

9	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none">● Harness connectors E132, E135● Harness connectors E116, M114● Harness connectors M32, F23● Harness for open between harness connector F23 and engine ground	
▶	Repair open circuit or short to power in harness or connectors.

10	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	
▶	INSPECTION END

DTC P1336 CKP SENSOR (POS)

Component Description

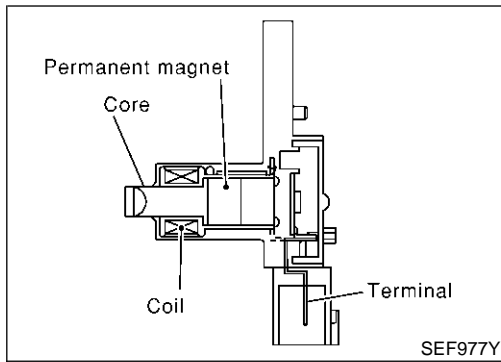

Component Description

NBEC1082

The crankshaft position sensor (POS) is located on the oil pan facing the gear teeth (cogs) of the signal plate. It detects the crankshaft position signal (1° signal).

The sensor consists of a permanent magnet, core and coil.

When engine is running, the gap between the sensor and the gear teeth (cogs) will periodically change. Permeability near the sensor also changes.

Due to the permeability change, the magnetic flux near the core is changed. Therefore, the voltage signal generated in the coil is changed.

The ECM receives the voltage signal and detects the crankshaft position signal (1° signal).

GI

MA

EM

LC

EC

FE

AT

TF

CONSULT-II Reference Value in Data Monitor Mode

NBEC1083

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
CKPS-RPM (POS)	<ul style="list-style-type: none"> Tachometer: Connect Run engine and compare tachometer indication with the CONSULT-II value. 	Almost the same speed as the CONSULT-II value.
ENG SPEED		

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P1336 CKP SENSOR (POS)

ECM Terminals and Reference Value



ECM Terminals and Reference Value

=NBEC1084

Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

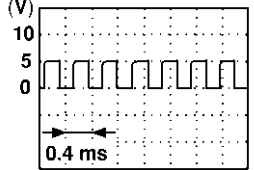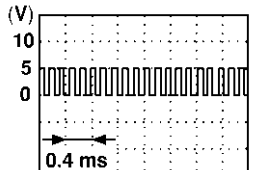TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
85	Y	Crankshaft position sensor (POS)	[Engine is running] ● Idle speed	Approximately 2.4V  SEF057V
			[Engine is running] ● Engine speed is 2,000 rpm.	Approximately 2.3V  SEF058V

On Board Diagnosis Logic

NBEC1085

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P1336 1336	Crankshaft position sensor (POS) range/performance	Malfunction is detected when chipping of the signal plate (drive plate) gear tooth (cog) is detected by the ECM.	<ul style="list-style-type: none"> ● Harness or connectors ● Crankshaft position sensor (POS) ● Signal plate (Drive plate)

DTC Confirmation Procedure

NBEC1086

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10.5V.

DTC P1336 CKP SENSOR (POS)

DTC Confirmation Procedure (Cont'd)

2

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm

SEF058Y

WITH CONSULT-II

- 1) Turn ignition switch "ON" and select "DATA MONITOR" mode with CONSULT-II. NBEC1086S01
- 2) Start engine and run it for at least 70 seconds at idle speed.
- 3) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-591.

GI

MA

WITH GST

Follow the procedure "WITH CONSULT-II" above.

NBEC1086S02

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX



DTC P1336 CKP SENSOR (POS)

Wiring Diagram

Wiring Diagram

NBEC1087

EC-POS-01

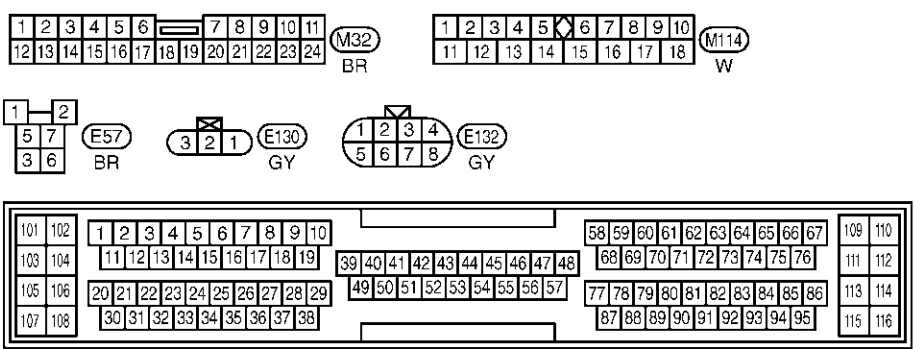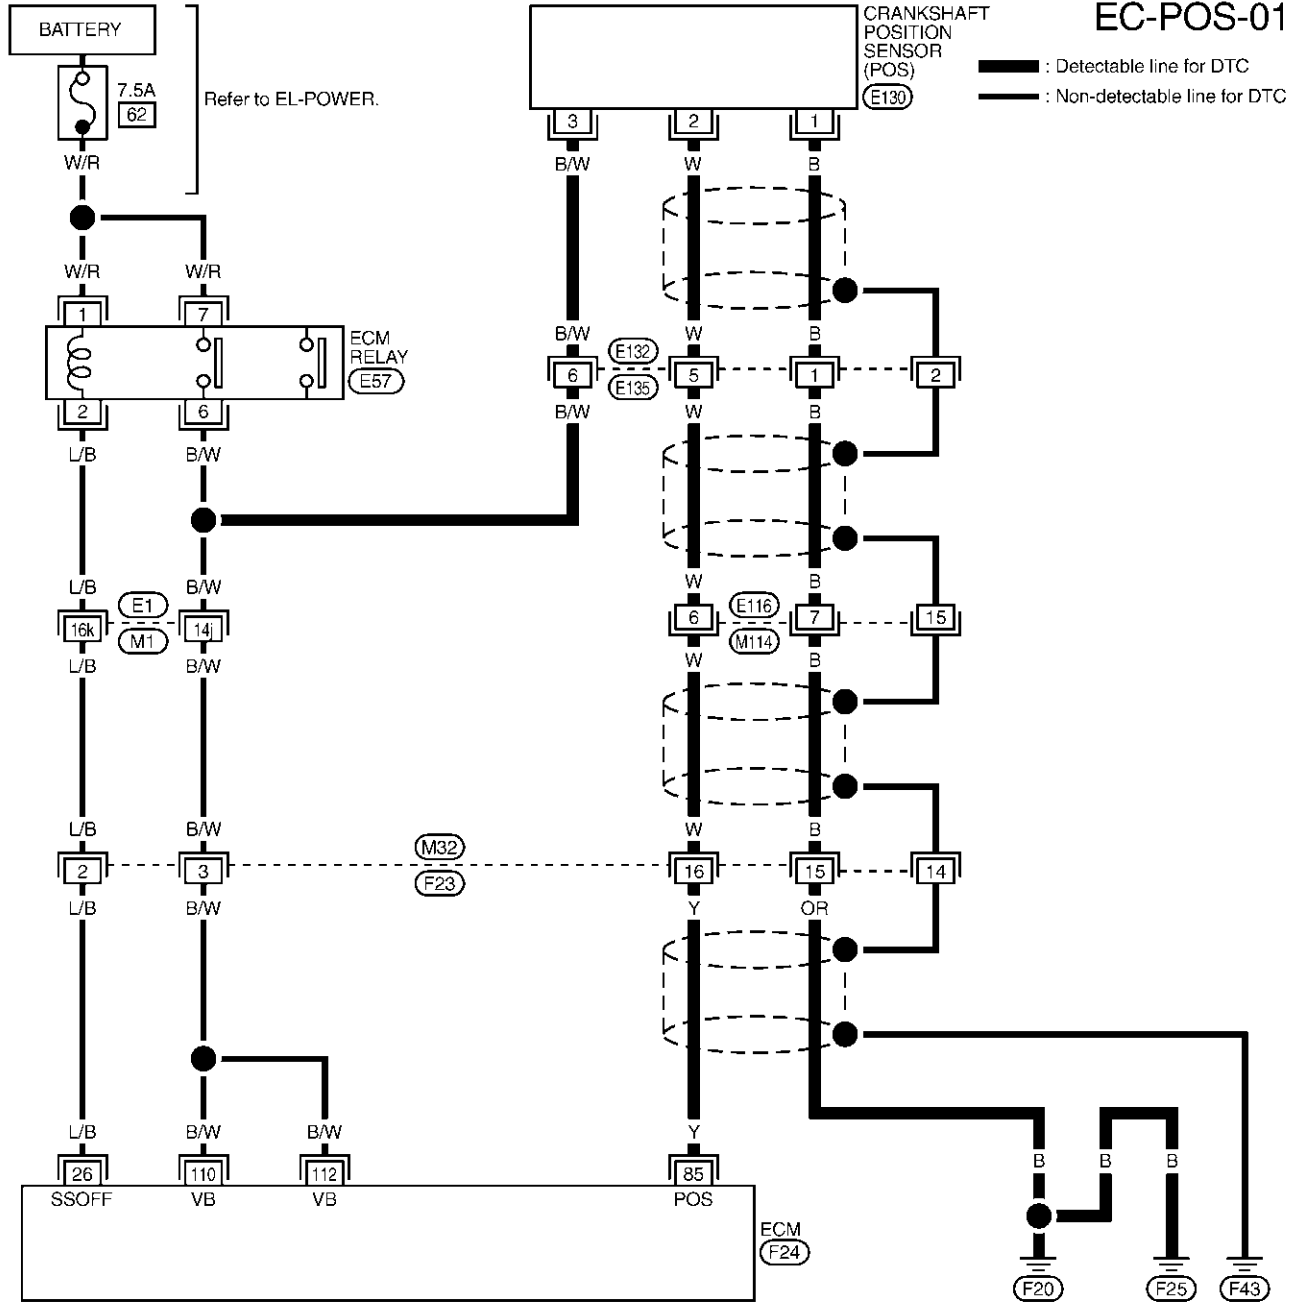

REFER TO THE FOLLOWING.


E1 -SUPER
 MULTIPLE JUNCTION (SMJ)





MEC959C

Diagnostic Procedure

NBEC1088

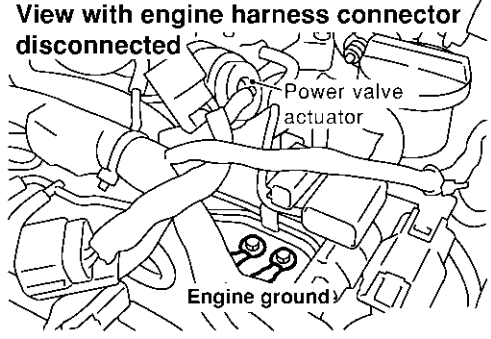1	RETIGHTEN GROUND SCREWS	<p>1. Turn ignition switch "OFF". 2. Loosen and retighten engine ground screws.</p> <div style="text-align: center;"> <p>View with engine harness connector disconnected</p>  <p>Power valve actuator Engine ground</p> </div> <p style="text-align: right; font-size: small;">SEF959Y</p>	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p>EC</p> <p>FE</p>
▶		GO TO 2.	<p>AT</p>

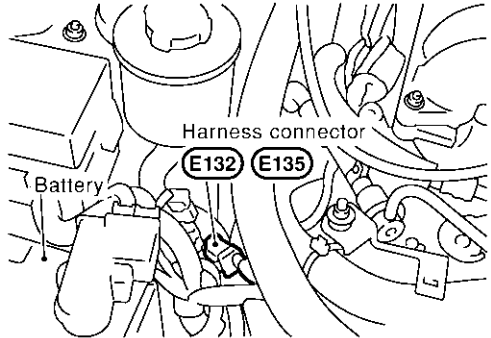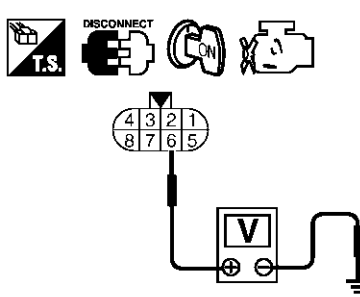2	CHECK CKP SENSOR (POS) POWER SUPPLY CIRCUIT	<p>1. Disconnect harness connectors E132, E135.</p> <div style="text-align: center;">  <p>Battery Harness connector E132 E135</p> </div> <p style="text-align: right; font-size: small;">SEF978Y</p> <p>2. Check voltage between harness connector E135 terminal 6 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p>DISCONNECT T.S. ON</p> <p>4 3 2 1 8 7 6 5</p> <p>V</p> </div> <p style="text-align: right; font-size: small;">SEC595D</p> <p>Voltage: Battery voltage</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	<p>TF</p> <p>PD</p> <p>AX</p> <p>SU</p> <p>BR</p> <p>ST</p> <p>RS</p> <p>BT</p> <p>HA</p> <p>SC</p>
▶		GO TO 4.	<p>EL</p>
▶		GO TO 3.	<p>IDX</p>


DTC P1336 CKP SENSOR (POS)

Diagnostic Procedure (Cont'd)

3	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none">● Harness connectors E132, E135● Harness connectors E1, M1● Harness connectors M32, F23● Harness for open or short between ECM and crankshaft position sensor (POS)● Harness for open or short between ECM relay and crankshaft position sensor (POS)	
▶ Repair open circuit or short to ground or short to power in harness or connectors.	
4	CHECK CKP SENSOR (POS) GROUND CIRCUIT FOR OPEN AND SHORT
1. Check harness continuity between harness connector E135 terminal 1 and engine ground. Refer to Wiring Diagram. Continuity should exist.	
2. Also check harness for short to power.	
OK or NG	
OK	▶ GO TO 6.
NG	▶ GO TO 5.
5	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none">● Harness connectors E132, E135● Harness connectors E116, M114● Harness connectors M32, F23● Harness for open between crankshaft position sensor (POS) and ground	
▶ Repair open circuit or short to power in harness or connectors.	
6	CHECK CKP SENSOR (POS) INPUT SIGNAL CIRCUIT
1. Disconnect ECM harness connector.	
2. Check harness continuity between ECM terminal 85 and harness connector F23 terminal 16. Refer to Wiring Diagram. Continuity should exist.	
3. Also check harness for short to ground and short to power.	
OK or NG	
OK	▶ GO TO 8.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.
7	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none">● Harness connectors E132, E135● Harness connectors E116, M114● Harness connectors M32, F23● Harness for open or short between ECM and crankshaft position sensor (POS)	
▶ Repair open circuit or short to ground or short to power in harness or connectors.	

DTC P1336 CKP SENSOR (POS)

Diagnostic Procedure (Cont'd)

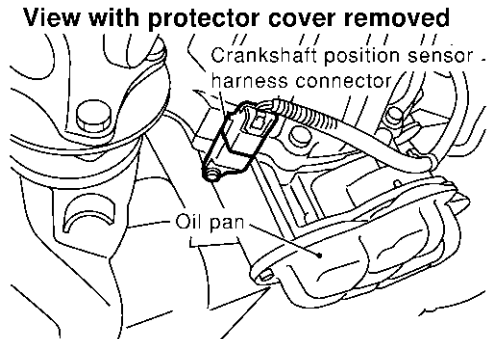
8	CHECK CKP SENSOR (POS) SUB-HARNESS CIRCUIT FOR OPEN AND SHORT									
<p>1. Disconnect CKP sensor (POS) harness connector.</p> <div style="text-align: center;"> <p>View with protector cover removed</p>  </div>										
SEF980Y										
<p>2. Check harness continuity between CKP sensor (POS) terminals and harness connector E132 terminals as follows.</p> <table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">CKP sensor (POS) terminal</th> <th style="text-align: center;">Harness connector E132 terminal</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">1</td> <td style="text-align: center;">1</td> </tr> <tr> <td style="text-align: center;">2</td> <td style="text-align: center;">5</td> </tr> <tr> <td style="text-align: center;">3</td> <td style="text-align: center;">6</td> </tr> </tbody> </table>			CKP sensor (POS) terminal	Harness connector E132 terminal	1	1	2	5	3	6
CKP sensor (POS) terminal	Harness connector E132 terminal									
1	1									
2	5									
3	6									
MTBL1217										
<p>Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>										
OK	▶	GO TO 9.								
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.								


GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

9	CHECK IMPROPER INSTALLATION	
<p>1. Loosen and retighten the fixing bolt of the crankshaft position sensor (POS). 2. Reconnect harness connectors disconnected. 3. Perform "DTC Confirmation Procedure", EC-588 again.</p>		
Is a 1st trip DTC P1336 detected?		
Yes	▶	GO TO 10.
No	▶	INSPECTION END

DTC P1336 CKP SENSOR (POS)

Diagnostic Procedure (Cont'd)

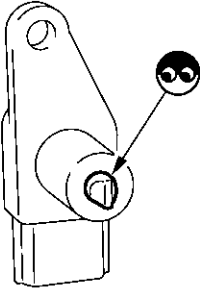10	CHECK CRANKSHAFT POSITION SENSOR (POS)	
<ol style="list-style-type: none"> 1. Disconnect crankshaft position sensor (POS) harness connector. 2. Loosen the fixing bolt of the sensor. 3. Remove the sensor. 4. Visually check the sensor for chipping. 		
		
SEF981Y		
OK or NG		
OK	▶	GO TO 11.
NG	▶	Replace crankshaft position sensor (POS).

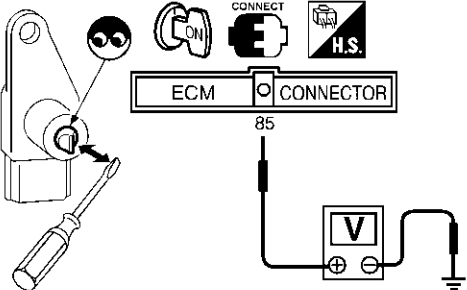11	CHECK CRANKSHAFT POSITION SENSOR (POS)-II	
<ol style="list-style-type: none"> 1. Reconnect harness connectors disconnected. 2. Turn ignition switch ON. 3. Check voltage between ECM terminal 85 and ground by briefly touching the sensor core with a flat-bladed screwdriver. 		
		
SEF343Z		
OK or NG		
OK	▶	GO TO 12.
NG	▶	Replace crankshaft position sensor (POS).

ECM terminal	Condition	Voltage
85	Contacted	Approximately 5V
	Pulled away	Approximately 0V

There should be a steady 5V as the flat-bladed screwdriver is drawn away slowly.

12	CHECK CKP SENSOR (POS) SHIELD CIRCUIT FOR OPEN AND SHORT	
<ol style="list-style-type: none"> 1. Disconnect harness connectors E132, E135. 2. Check harness continuity between harness connector E135 terminal 2 and engine ground. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to power. 		
OK or NG		
OK	▶	GO TO 14.
NG	▶	GO TO 13.

DTC P1336 CKP SENSOR (POS)

Diagnostic Procedure (Cont'd)

13	DETECT MALFUNCTIONING PART	
Check the following. <ul style="list-style-type: none"> ● Harness connectors E132, E135 ● Harness connectors E116, M114 ● Harness connectors M32, F23 ● Harness for open between harness connector E135 and engine ground 		
	▶	Repair open circuit or short to power in harness or connectors.
14	CHECK GEAR TOOTH	
Visually check for chipping signal plate (drive plate) gear tooth (cog).		
OK or NG		
OK	▶	GO TO 15.
NG	▶	Replace the signal plate (drive plate).
15	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.		
	▶	INSPECTION END

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Description


Description SYSTEM DESCRIPTION

NBEC1089

NBEC1089S01

Sensor	Input Signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS)	Engine speed (POS signal)	EVAP canister purge flow control	EVAP canister purge volume control solenoid valve
Crankshaft position sensor (REF)	Engine speed (REF signal)		
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Ignition switch	Start signal		
Throttle position sensor	Throttle position		
Throttle position switch	Closed throttle position		
Heated oxygen sensor 1	Density of oxygen in exhaust gas (Mixture ratio feedback signal)		
Fuel tank temperature sensor	Fuel temperature in fuel tank		
Vehicle speed sensor	Vehicle speed		

This system controls flow rate of fuel vapor from the EVAP canister. The opening of the vapor by-pass passage in the EVAP canister purge volume control solenoid valve changes to control the flow rate. The EVAP canister purge volume control solenoid valve repeats ON/OFF operation according to the signal sent from the ECM. The opening of the valve varies for optimum engine control. The optimum value stored in the ECM is determined by considering various engine conditions. When the engine is operating, the flow rate of fuel vapor from the EVAP canister is regulated as the air flow changes.

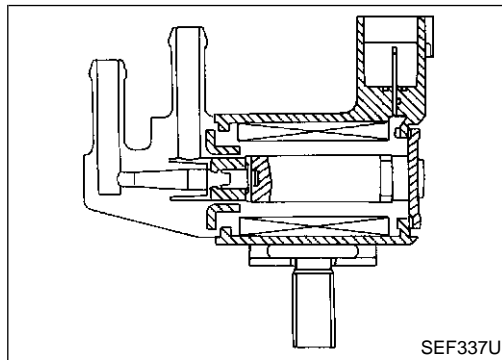

COMPONENT DESCRIPTION

NBEC1089S02

The EVAP canister purge volume control solenoid valve uses an ON/OFF duty to control the flow rate of fuel vapor from the EVAP canister. The EVAP canister purge volume control solenoid valve is moved by ON/OFF pulses from the ECM. The longer the ON pulse, the greater the amount of fuel vapor that will flow through the valve.

CONSULT-II Reference Value in Data Monitor Mode

NBEC1090

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
PURG VOL C/V	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch "OFF" ● Shift lever: "N" ● No-load Idle (Vehicle stopped)	0%
	2,000 rpm	—

DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

ECM Terminals and Reference Value

ECM Terminals and Reference Value

NBEC1091

Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
1	L/Y	EVAP canister purge volume control solenoid valve	<p>[Engine is running]</p> <ul style="list-style-type: none"> Idle speed 	<p>BATTERY VOLTAGE (11 - 14V)</p> <p>SEF994U</p>
			<p>[Engine is running]</p> <ul style="list-style-type: none"> Engine speed is about 2,000 rpm (More than 100 seconds after starting engine). 	<p>BATTERY VOLTAGE (11 - 14V)</p> <p>SEF995U</p>

On Board Diagnosis Logic

NBEC1092

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P1444 1444	EVAP canister purge volume control solenoid valve	The canister purge flow is detected during the specified driving conditions, even when EVAP canister purge volume control solenoid valve is completely closed.	<ul style="list-style-type: none"> EVAP control system pressure sensor EVAP canister purge volume control solenoid valve (The valve is stuck open.) EVAP canister vent control valve EVAP canister Hoses (Hoses are connected incorrectly or clogged.)

DTC Confirmation Procedure

NBEC1093

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Always perform test at a temperature of 0°C (32°F) or more.

DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

DTC Confirmation Procedure (Cont'd)

6	PURG VOL CN/V P1444					
	OUT OF CONDITION					
	MONITOR					
	<table border="0"> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXX V</td> </tr> <tr> <td>B/FUEL SCHDL</td> <td>XXX msec</td> </tr> </table>	ENG SPEED	XXX rpm	THRTL POS SEN	XXX V	B/FUEL SCHDL
ENG SPEED	XXX rpm					
THRTL POS SEN	XXX V					
B/FUEL SCHDL	XXX msec					

SEF205Y

6	PURG VOL CN/V P1444					
	TESTING					
	MONITOR					
	<table border="0"> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXX V</td> </tr> <tr> <td>B/FUEL SCHDL</td> <td>XXX msec</td> </tr> </table>	ENG SPEED	XXX rpm	THRTL POS SEN	XXX V	B/FUEL SCHDL
ENG SPEED	XXX rpm					
THRTL POS SEN	XXX V					
B/FUEL SCHDL	XXX msec					

SEF206Y

6	PURG VOL CN/V P1444
	COMPLETED

SEF237Y

WITH CONSULT-II

NBEC1093S01

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 10 seconds.
- 3) Turn ignition switch "ON".
- 4) Select "PURG VOL CN/V P1444" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT-II.
- 5) Touch "START".
- 6) Start engine and let it idle until "TESTING" on CONSULT-II changes to "COMPLETED". (It will take for approximately 10 seconds.)

If "TESTING" is not displayed after 5 minutes, retry from step 2.

- 7) Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to "Diagnostic Procedure", EC-600.

WITH GST

NBEC1093S02

- 1) Start engine and warm it up to normal operating temperature.
- 2) Turn ignition switch "OFF" and wait at least 10 seconds.
- 3) Start engine and let it idle for at least 20 seconds.
- 4) Select "MODE 7" with GST.
- 5) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-600.

DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Wiring Diagram

Wiring Diagram

NBEC1094

EC-PGC/V-01

GI

: Detectable line for DTC
 : Non-detectable line for DTC

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS



BT

HA

SC



EL

IDX

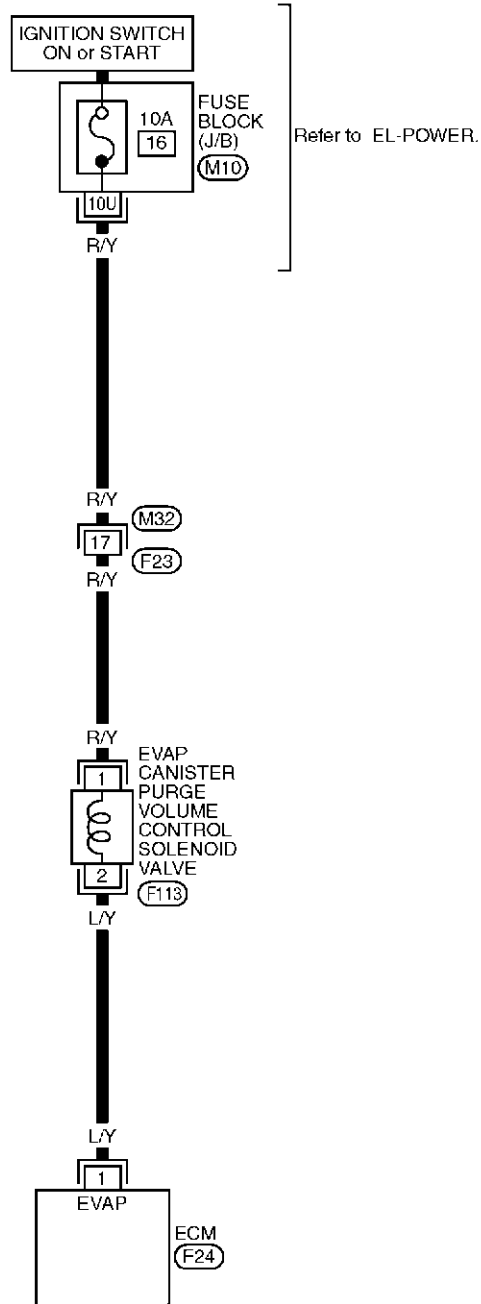

REFER TO THE FOLLOWING.

(M10) - FUSE BLOCK- JUNCTION BOX (J/B)

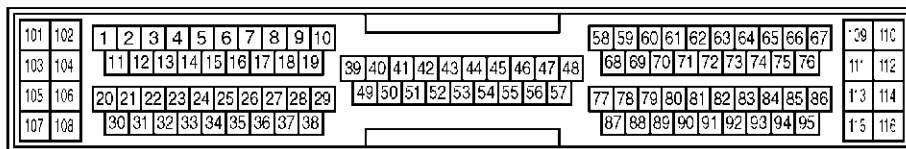



MEC962C

DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Diagnostic Procedure

Diagnostic Procedure

NBEC1095

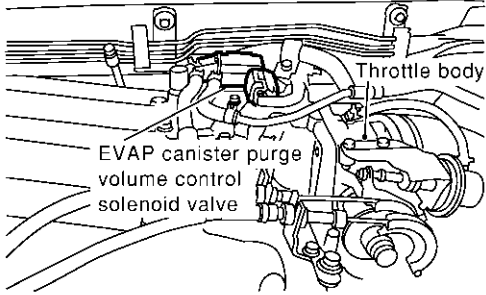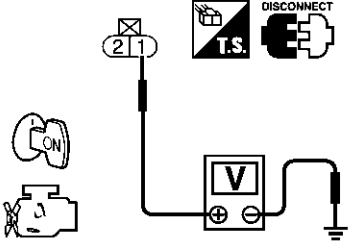
1	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE POWER SUPPLY CIRCUIT	
<p>1. Turn ignition switch "OFF". 2. Disconnect EVAP canister purge volume control solenoid valve harness connector.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF986Y</p> <p>3. Turn ignition switch "ON". 4. Check voltage between EVAP canister purge volume control solenoid valve terminal 1 and engine ground with CONSULT-II or tester.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">PBIB0148E</p> <p>Voltage: Battery voltage</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 3.
NG	▶	GO TO 2.

2	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M32, F23 ● Fuse block (J/B) connector M10 ● 10A fuse ● Harness for open or short between EVAP canister purge volume control solenoid valve and fuse 		
▶		Repair harness or connectors.

3	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 1 and EVAP canister purge volume control solenoid valve terminal 2. Refer to Wiring Diagram. Continuity should exist. 4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 4.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Diagnostic Procedure (Cont'd)

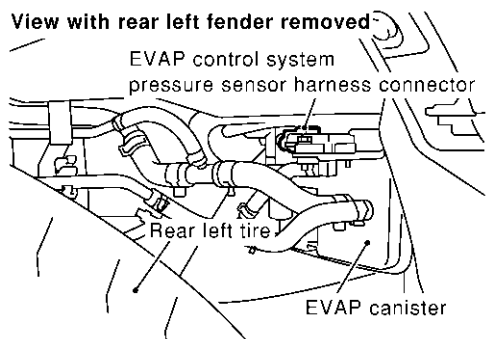4	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR HOSE	
<p>Check disconnection or improper connection of hose connected to EVAP control system pressure sensor.</p> <div style="text-align: center;"> <p>View with rear left fender removed</p>  <p>EVAP control system pressure sensor harness connector</p> <p>Rear left tire</p> <p>EVAP canister</p> </div> <p style="text-align: right;">SEC931C</p>		
OK or NG		
OK	▶	GO TO 5.
NG	▶	Repair it.

5	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR CONNECTOR	
<p>1. Disconnect EVAP control system pressure sensor harness connector. 2. Check connectors for water. Water should not exist.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 6.
NG	▶	Replace EVAP control system pressure sensor.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE


Diagnostic Procedure (Cont'd)

6 CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

1. Remove EVAP control system pressure sensor with its harness connector connected.

CAUTION:

- Never apply force to the air hole protector of the sensor if equipped.

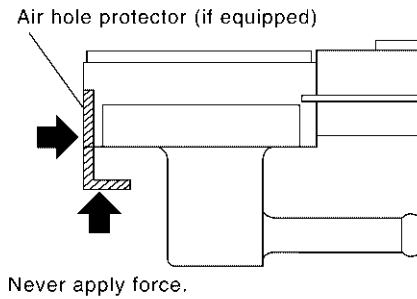

SEF799W

2. Remove hose from EVAP control system pressure sensor.


3. Turn ignition switch "ON".

4. Use pump to apply vacuum and pressure to EVAP control system pressure sensor as shown in figure.

CAUTION:

- Always calibrate the vacuum pump gauge when using it.
- Do not apply below -20 kPa (-150 mmHg, -5.91 inHg) or over 20 kPa (150 mmHg, 5.91 inHg) of pressure.

5. Check input voltage between ECM terminal 84 and ground.

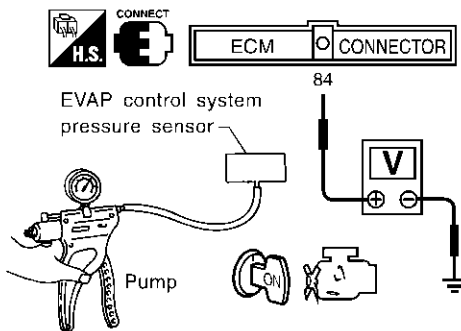

Pressure (Relative to atmospheric pressure)	Voltage V
0 kPa (0 mmHg, 0 inHg)	3.0 - 3.6
-9.3 kPa (-70 mmHg, -2.76 inHg)	0.4 - 0.6

SEF342X

CAUTION:

- Discard and EVAP control system pressure sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

OK or NG


OK (With CONSULT-II)	▶	GO TO 7.
OK (Without CONSULT-II)	▶	GO TO 8.
NG	▶	Replace EVAP control system pressure sensor.

DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE


Diagnostic Procedure (Cont'd)

7	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE																					
<p>E With CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Reconnect harness connectors disconnected. 3. Start engine. 4. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. Check that engine speed varies according to the valve opening. 																						
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <th>PURG VOL CONT/V</th> <th>XXX %</th> </tr> </thead> <tbody> <tr> <td colspan="2" style="text-align: center;">MONITOR</td> </tr> <tr> <th>ENG SPEED</th> <th>XXX rpm</th> </tr> <tr> <td>A/F ALPHA-B1</td> <td>XX %</td> </tr> <tr> <td>A/F ALPHA-B2</td> <td>XX %</td> </tr> <tr> <td>HO2S1 MNTR (B1)</td> <td>LEAN</td> </tr> <tr> <td>HO2S1 MNTR (B2)</td> <td>LEAN</td> </tr> <tr> <td>THRTL POS SEN</td> <td>X. XX V</td> </tr> <tr> <td> </td> <td> </td> </tr> </tbody> </table>			ACTIVE TEST		PURG VOL CONT/V	XXX %	MONITOR		ENG SPEED	XXX rpm	A/F ALPHA-B1	XX %	A/F ALPHA-B2	XX %	HO2S1 MNTR (B1)	LEAN	HO2S1 MNTR (B2)	LEAN	THRTL POS SEN	X. XX V		
ACTIVE TEST																						
PURG VOL CONT/V	XXX %																					
MONITOR																						
ENG SPEED	XXX rpm																					
A/F ALPHA-B1	XX %																					
A/F ALPHA-B2	XX %																					
HO2S1 MNTR (B1)	LEAN																					
HO2S1 MNTR (B2)	LEAN																					
THRTL POS SEN	X. XX V																					
SEF677Y																						
OK or NG																						
OK	▶	GO TO 9.																				
NG	▶	GO TO 8.																				

GI
MA
EM
LC
EC
FE
AT
TF

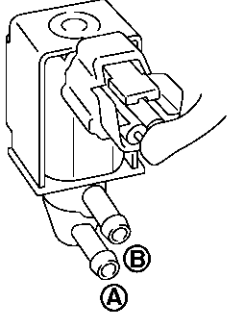8	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE							
<p>E With CONSULT-II</p> <p>Check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.</p>								
								
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th>Condition PURG VOL CONT/V valve</th> <th>Air passage continuity between A and B</th> </tr> </thead> <tbody> <tr> <td>100%</td> <td>Yes</td> </tr> <tr> <td>0%</td> <td>No</td> </tr> </tbody> </table>			Condition PURG VOL CONT/V valve	Air passage continuity between A and B	100%	Yes	0%	No
Condition PURG VOL CONT/V valve	Air passage continuity between A and B							
100%	Yes							
0%	No							
SEF334XB								

PD
AX
SU
BR
ST
RS

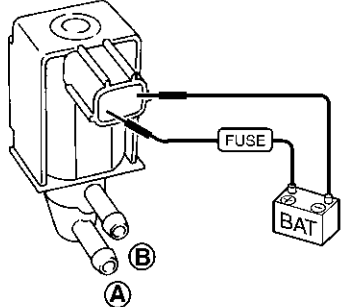
8	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE							
<p>X Without CONSULT-II</p> <p>Check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.</p>								
								
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th>Condition</th> <th>Air passage continuity between A and B</th> </tr> </thead> <tbody> <tr> <td>12V direct current supply between terminals 1 and 2</td> <td>Yes</td> </tr> <tr> <td>No supply</td> <td>No</td> </tr> </tbody> </table>			Condition	Air passage continuity between A and B	12V direct current supply between terminals 1 and 2	Yes	No supply	No
Condition	Air passage continuity between A and B							
12V direct current supply between terminals 1 and 2	Yes							
No supply	No							
SEF335X								
OK or NG								
OK	▶	GO TO 9.						
NG	▶	Replace EVAP canister purge volume control solenoid valve.						

BT
HA
SC
EL
IDX

DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Diagnostic Procedure (Cont'd)

9		CHECK RUBBER TUBE FOR CLOGGING
1. Disconnect rubber tube connected to EVAP canister vent control valve. 2. Check the rubber tube for clogging.		
OK or NG		
OK	▶	GO TO 10.
NG	▶	Clean the rubber tube using an air blower.

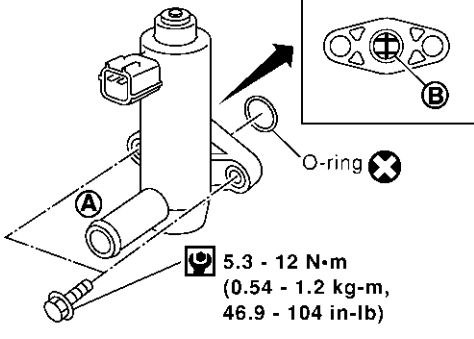10		CHECK EVAP CANISTER VENT CONTROL VALVE-I
1. Remove EVAP canister vent control valve from EVAP canister. 2. Check portion B of EVAP canister vent control valve for being rusted.		
		
OK or NG		
OK	▶	GO TO 11.
NG	▶	Replace EVAP canister vent control valve.

DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE


Diagnostic Procedure (Cont'd)

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

11 CHECK EVAP CANISTER VENT CONTROL VALVE-II

- E With CONSULT-II**
1. Reconnect harness connectors disconnected.
 2. Turn ignition switch "ON".
 3. Perform "VENT CONTROL/V" in "ACTIVE TEST" mode.
 4. Check air passage continuity and operation delay time.

ACTIVE TEST	
VENT CONTROL/V	OFF
MONITOR	
ENG SPEED	XXX rpm
A/F ALPHA-B1	XXX %
A/F ALPHA-B2	XXX %
HO2S1 MNTR (B1)	LEAN
HO2S1 MNTR (B2)	LEAN
THRTL POS SEN	XXX V

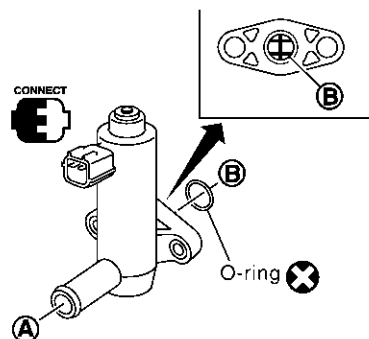


Condition	Air passage continuity between A and B
VENT CONTROL/V ON	No
VENT CONTROL/V OFF	Yes

Operation takes less than 1 second.

SEF377Z

- X Without CONSULT-II**
Check air passage continuity and operation delay time under the following conditions.

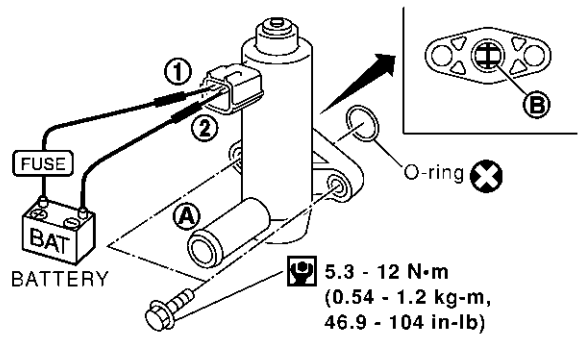

Condition	Air passage continuity between A and B
12V direct current supply between terminals 1 and 2	No
OFF	Yes

Operation takes less than 1 second.

SEF378Z

Make sure new O-ring is installed properly.

OK or NG

OK	▶	GO TO 13.
NG	▶	GO TO 12.

12 CHECK EVAP CANISTER VENT CONTROL VALVE-III


1. Clean the air passage (Portion A to B) of EVAP canister vent control valve using an air blower.
2. Perform procedure 9 again.

OK or NG

OK	▶	GO TO 13.
NG	▶	Replace EVAP canister vent control valve.

DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Diagnostic Procedure (Cont'd)

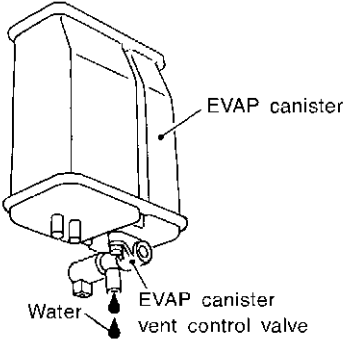13	CHECK IF EVAP CANISTER SATURATED WITH WATER	
<p>1. Remove EVAP canister with EVAP canister vent control valve attached. 2. Check if water will drain from the EVAP canister.</p>		
		
SEF596U		
Yes or No		
Yes	▶	GO TO 14.
No	▶	GO TO 17.

14	CHECK EVAP CANISTER	
<p>Weigh the EVAP canister with the EVAP canister vent control valve attached. The weight should be less than 1.8 kg (4.0 lb).</p>		
OK or NG		
OK	▶	GO TO 16.
NG	▶	GO TO 15.

15	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● EVAP canister for damage ● EVAP hose between EVAP canister and water separator for clogging or poor connection 		
▶		Repair hose or replace EVAP canister.

DTC P1444 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Diagnostic Procedure (Cont'd)



16	CHECK WATER SEPARATOR	
<ol style="list-style-type: none"> 1. Check visually for insect nests in the water separator air inlet. 2. Check visually for cracks or flaws in the appearance. 3. Check visually for cracks or flaws in the hose. 4. Check that A and C are not clogged by blowing air into B with A, and then C plugged. 		
<p style="text-align: center;"> * (A) : Bottom hole (To atmosphere) (B) : Emergency tube (From EVAP canister) (C) : Inlet port (To member) </p>		
PBIB1032E		
<ol style="list-style-type: none"> 5. In case of NG in items 2 - 4, replace the parts. <p>NOTE:</p> <ul style="list-style-type: none"> ● Do not disassemble water separator. 		
OK or NG		
OK	▶	GO TO 17.
NG	▶	Clean or replace water separator.

17	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	
▶	INSPECTION END

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P1446 EVAP CANISTER VENT CONTROL VALVE

Component Description

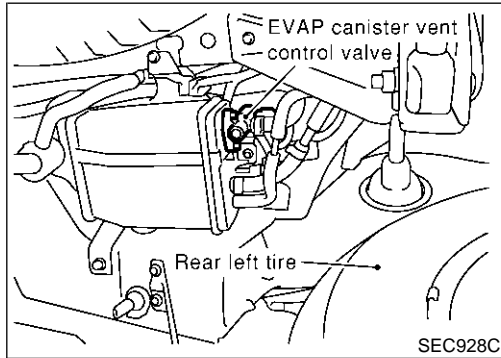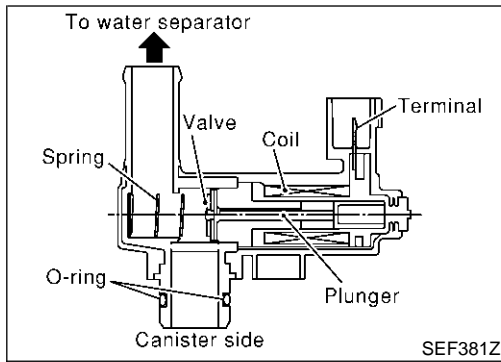

Component Description

NBEC1096

The EVAP canister vent control valve is located on the EVAP canister and is used to seal the canister vent.

This solenoid valve responds to signals from the ECM. When the ECM sends an ON signal, the coil in the solenoid valve is energized. A plunger will then move to seal the canister vent. The ability to seal the vent is necessary for the on board diagnosis of other evaporative emission control system components.

This solenoid valve is used only for diagnosis, and usually remains opened.

When the vent is closed, under normal purge conditions, the evaporative emission control system is depressurized and allows "EVAP Control System" diagnosis.

CONSULT-II Reference Value in Data Monitor Mode

NBEC1097

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
VENT CONT/V	● Ignition switch: ON	OFF

ECM Terminals and Reference Value

NBEC1098

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
40	G/Y	EVAP canister vent control valve	[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)

On Board Diagnosis Logic

NBEC1099

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P1446 1446	EVAP canister vent control valve closed	EVAP canister vent control valve remains closed under specified driving conditions.	<ul style="list-style-type: none"> ● EVAP canister vent control valve ● EVAP control system pressure sensor and the circuit ● Blocked rubber tube to EVAP canister vent control valve ● Water separator ● EVAP canister is saturated with water.

DTC P1446 EVAP CANISTER VENT CONTROL VALVE

DTC Confirmation Procedure

4

DATA MONITOR	
MONITOR	NO DTC
ENG SPEED	XXX rpm
COOLAN TEMP/S	XXX °C
VHCL SPEED SE	XXX km/h
THRTL POS SEN	XXX V
B/FUEL SCHDL	XXX msec

SEF201Y

DTC Confirmation Procedure

NBEC1100

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

ⓔ WITH CONSULT-II

NBEC1100S01

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine.
- 4) Drive vehicle at a speed of approximately 80 km/h (50 MPH) for a maximum of 15 minutes.

NOTE:

If a malfunction exists, NG result may be displayed quicker.

- 5) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-611.

ⓔ WITH GST

NBEC1100S02

Follow the procedure "WITH CONSULT-II" above.

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX



DTC P1446 EVAP CANISTER VENT CONTROL VALVE

Wiring Diagram

Wiring Diagram


NBEC1101

EC-VENT/V-01

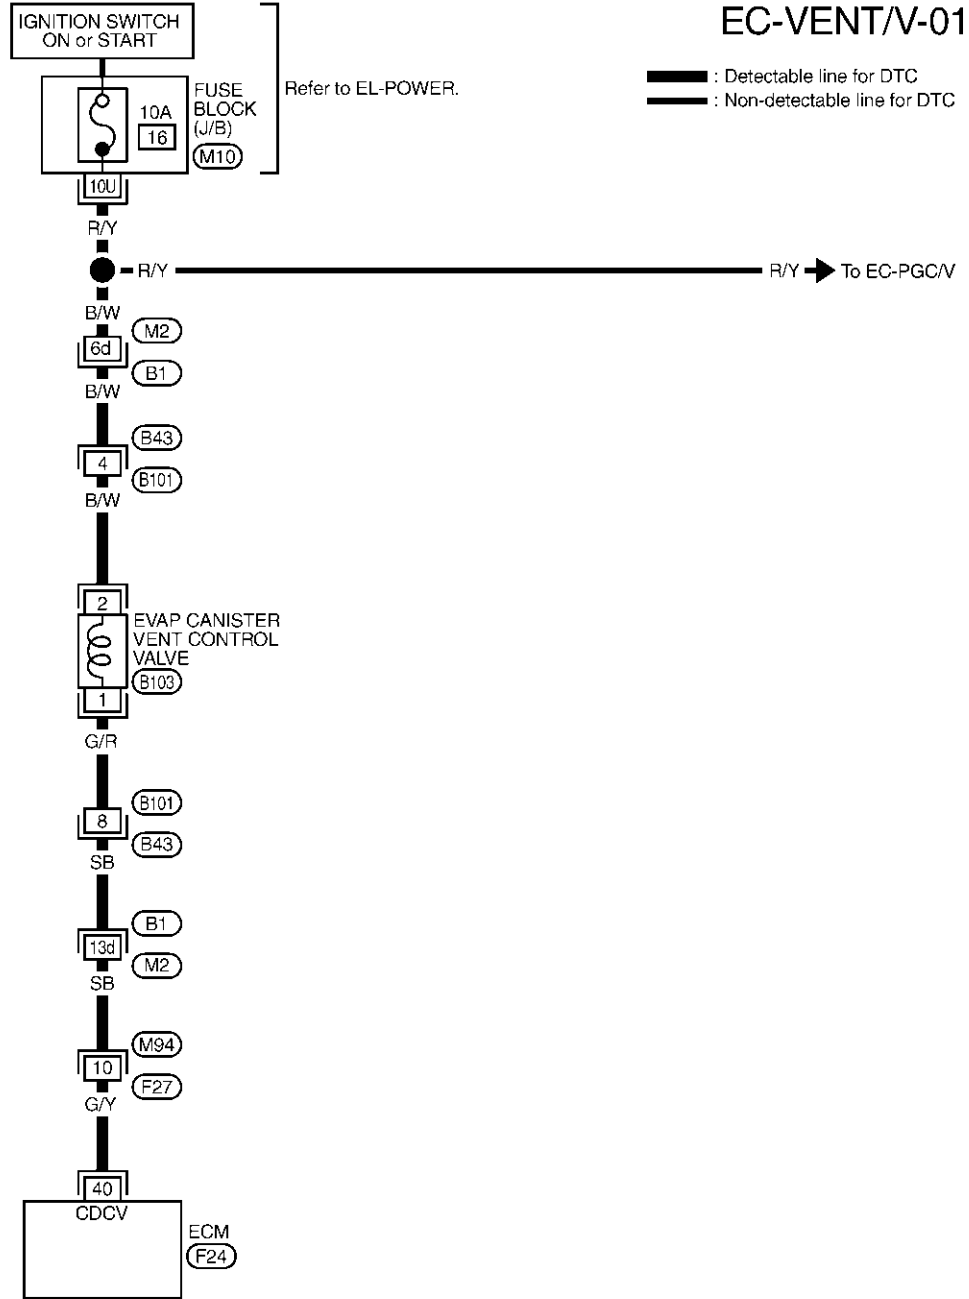

REFER TO THE FOLLOWING.

- (B1) -SUPER
- MULTIPLE JUNCTION (SMJ)
- (M10) -FUSE BLOCK- JUNCTION BOX (J/B)

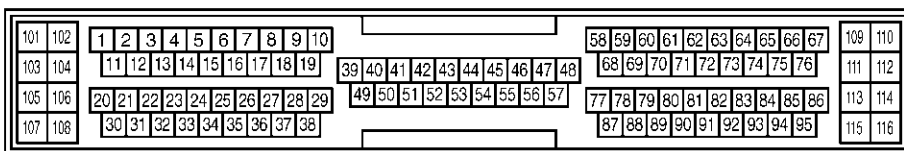


MEC903D

DTC P1446 EVAP CANISTER VENT CONTROL VALVE

Diagnostic Procedure

Diagnostic Procedure

NBEC1102

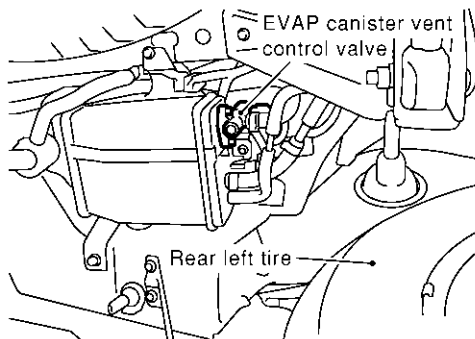1	CHECK RUBBER TUBE		
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect rubber tube connected to EVAP canister vent control valve. 3. Check the rubber tube for clogging. 			
			
OK or NG			
OK	▶	GO TO 2.	
NG	▶	Clean rubber tube using an air blower.	

GI

MA

EM


LC

EC

FE

AT

TF

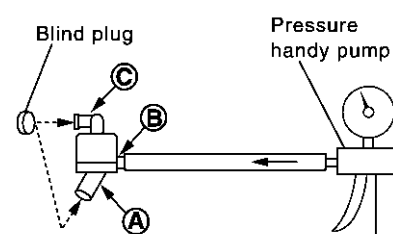2	CHECK WATER SEPARATOR		
<ol style="list-style-type: none"> 1. Check visually for insect nests in the water separator air inlet. 2. Check visually for cracks or flaws in the appearance. 3. Check visually for cracks or flaws in the hose. 4. Check that A and C are not clogged by blowing air into B with A, and then C plugged. 			
			
<p>* (A) : Bottom hole (To atmosphere) (B) : Emergency tube (From EVAP canister) (C) : Inlet port (To member)</p>			
PBIB1032E			
5. In case of NG in items 2 - 4, replace the parts.			
NOTE:			
● Do not disassemble water separator.			
OK or NG			
OK	▶	GO TO 3.	
NG	▶	Clean or replace water separator.	

PD

AX

SU

BR

ST

RS

BT

HA


SC


EL


IDX

DTC P1446 EVAP CANISTER VENT CONTROL VALVE

Diagnostic Procedure (Cont'd)

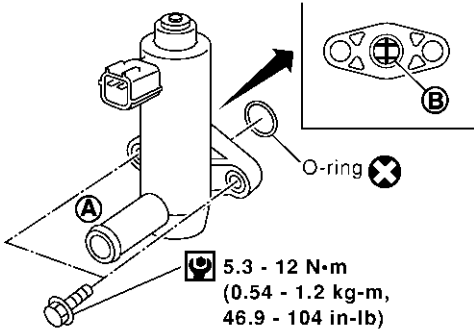3	CHECK EVAP CANISTER VENT CONTROL VALVE-I
<ol style="list-style-type: none"> 1. Remove EVAP canister vent control valve from EVAP canister. 2. Check portion B of EVAP canister vent control valve for being rusted. 	
 <p style="text-align: right;">5.3 - 12 N·m (0.54 - 1.2 kg-m, 46.9 - 104 in-lb)</p>	
SEF376Z	
OK or NG	
OK	▶ GO TO 4.
NG	▶ Replace EVAP canister vent control valve.

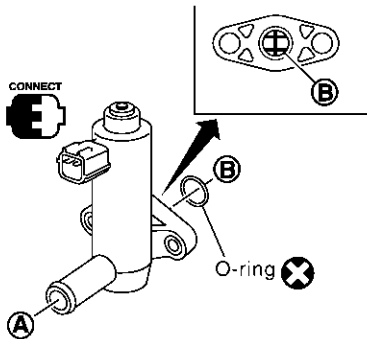4	CHECK EVAP CANISTER VENT CONTROL VALVE-II																								
<p>E With CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch ON. 2. Perform "VENT CONTROL/V" in "ACTIVE TEST" mode. 3. Check air passage continuity and operation delay time. 																									
<table border="1" style="margin-right: 20px;"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> </thead> <tbody> <tr> <td>VENT CONTROL/V</td> <td>OFF</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>A/F ALPHA-B1</td> <td>XXX %</td> </tr> <tr> <td>A/F ALPHA-B2</td> <td>XXX %</td> </tr> <tr> <td>HO2S1 MNTR (B1)</td> <td>LEAN</td> </tr> <tr> <td>HO2S1 MNTR (B2)</td> <td>LEAN</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXX V</td> </tr> </tbody> </table>  <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>Condition</th> <th>Air passage continuity between A and B</th> </tr> </thead> <tbody> <tr> <td>VENT CONTROL/V ON</td> <td>No</td> </tr> <tr> <td>VENT CONTROL/V OFF</td> <td>Yes</td> </tr> </tbody> </table> <p style="text-align: center;">Operation takes less than 1 second.</p>		ACTIVE TEST		VENT CONTROL/V	OFF	MONITOR		ENG SPEED	XXX rpm	A/F ALPHA-B1	XXX %	A/F ALPHA-B2	XXX %	HO2S1 MNTR (B1)	LEAN	HO2S1 MNTR (B2)	LEAN	THRTL POS SEN	XXX V	Condition	Air passage continuity between A and B	VENT CONTROL/V ON	No	VENT CONTROL/V OFF	Yes
ACTIVE TEST																									
VENT CONTROL/V	OFF																								
MONITOR																									
ENG SPEED	XXX rpm																								
A/F ALPHA-B1	XXX %																								
A/F ALPHA-B2	XXX %																								
HO2S1 MNTR (B1)	LEAN																								
HO2S1 MNTR (B2)	LEAN																								
THRTL POS SEN	XXX V																								
Condition	Air passage continuity between A and B																								
VENT CONTROL/V ON	No																								
VENT CONTROL/V OFF	Yes																								
SEF377Z																									

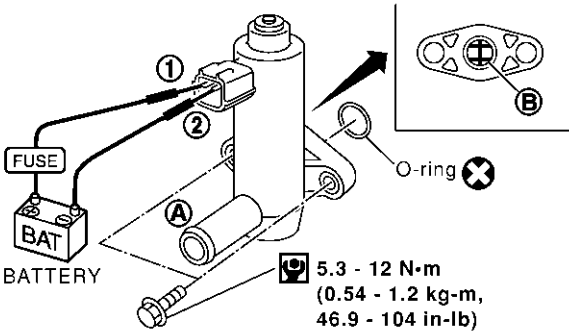
<p>X Without CONSULT-II</p> <p>Check air passage continuity and operation delay time under the following conditions.</p>	
 <p style="text-align: right;">5.3 - 12 N·m (0.54 - 1.2 kg-m, 46.9 - 104 in-lb)</p>	
SEF378Z	
Make sure new O-ring is installed properly.	
OK or NG	
OK	▶ GO TO 6.
NG	▶ GO TO 5.

DTC P1446 EVAP CANISTER VENT CONTROL VALVE

Diagnostic Procedure (Cont'd)

5	CHECK EVAP CANISTER VENT CONTROL VALVE-III
1. Clean the air passage (Portion A to B) of EVAP canister vent control valve using an air blower. 2. Perform the procedure 4 again.	
OK or NG	
OK	▶ GO TO 6.
NG	▶ Replace EVAP canister vent control valve.

GI
MA
EM

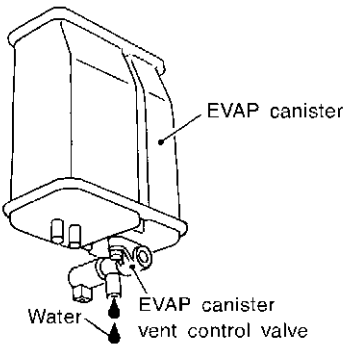6	CHECK IF EVAP CANISTER SATURATED WITH WATER
1. Remove EVAP canister with EVAP canister vent control valve attached. 2. Check if water will drain from the EVAP canister.	
	
SEF596U	
Yes or No	
Yes	▶ GO TO 7.
No	▶ GO TO 9.

LC
EC
FE
AT
TF
PD
AX

7	CHECK EVAP CANISTER
Weigh the EVAP canister with the EVAP canister vent control valve attached. The weight should be less than 1.8 kg (4.0 lb).	
OK or NG	
OK	▶ GO TO 9.
NG	▶ GO TO 8.

SU
BR
ST

8	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none"> ● EVAP canister for damage ● EVAP hose between EVAP canister and water separator for clogging or poor connection 	
	▶ Repair hose or replace EVAP canister.


RS
BT
HA

9	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR HOSE
Check disconnection or improper connection of hose connected to EVAP control system pressure sensor.	
OK or NG	
OK	▶ GO TO 10.
NG	▶ Repair it.

SC
EL
IDX

DTC P1446 EVAP CANISTER VENT CONTROL VALVE

Diagnostic Procedure (Cont'd)

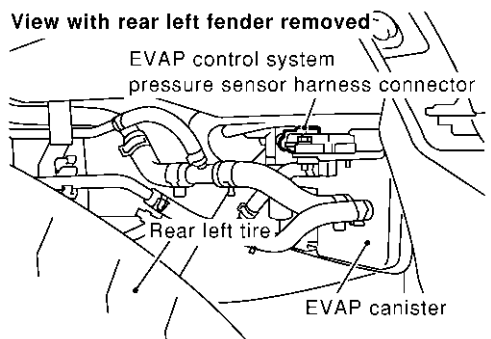10	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR CONNECTOR
<p>1. Disconnect EVAP control system pressure sensor harness connector.</p> <div data-bbox="568 231 1055 567"><p>View with rear left fender removed</p><p>EVAP control system pressure sensor harness connector</p><p>Rear left tire</p><p>EVAP canister</p></div> <p>2. Check connectors for water. Water should not exist.</p> <p style="text-align: right;">SEC931C</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 11.
NG	▶ Replace EVAP control system pressure sensor.

DTC P1446 EVAP CANISTER VENT CONTROL VALVE

Diagnostic Procedure (Cont'd)


GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

11 CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

1. Remove EVAP control system pressure sensor with its harness connector connected.

CAUTION:

- Never apply force to the air hole protector of the sensor if equipped.

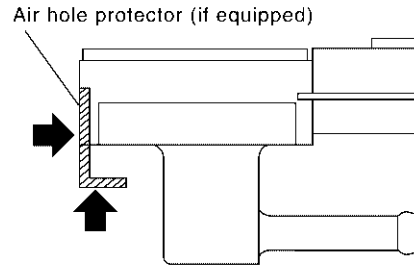


SEF799W

2. Remove hose from EVAP control system pressure sensor.
3. Turn ignition switch "ON".
4. Use pump to apply vacuum and pressure to EVAP control system pressure sensor as shown in figure.

CAUTION:

- Always calibrate the vacuum pump gauge when using it.
- Do not apply below -20 kPa (-150 mmHg, -5.91 inHg) or over 20 kPa (150 mmHg, 5.91 inHg) of pressure.

5. Check input voltage between ECM terminal 84 and ground.

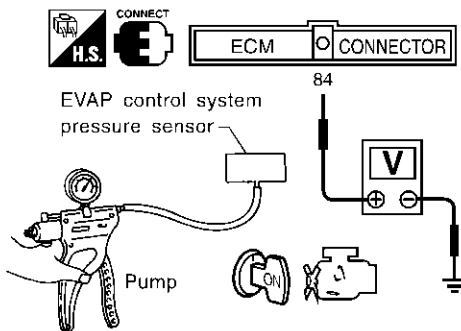

Pressure (Relative to atmospheric pressure)	Voltage V
0 kPa (0 mmHg, 0 inHg)	3.0 - 3.6
-9.3 kPa (-70 mmHg, -2.76 inHg)	0.4 - 0.6

SEF342X

CAUTION:

- Discard and EVAP control system pressure sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

OK or NG

OK	▶	GO TO 12.
NG	▶	Replace EVAP control system pressure sensor.



12 CHECK INTERMITTENT INCIDENT

Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.

▶ INSPECTION END

DTC P1448 EVAP CANISTER VENT CONTROL VALVE

Component Description

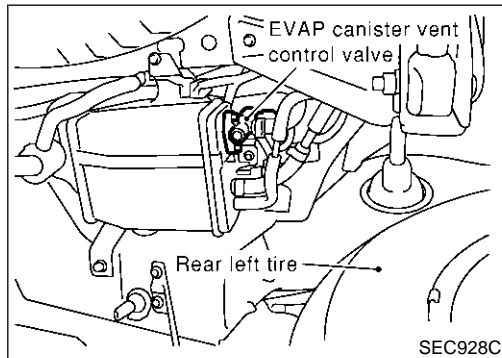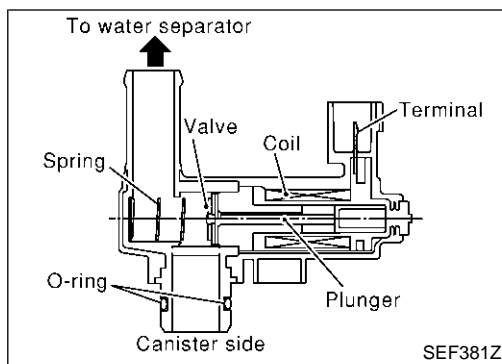

Component Description

NBEC1103

NOTE:

If DTC P1448 is displayed with P0442, perform trouble diagnosis for DTC P1448 first.

The EVAP canister vent control valve is located on the EVAP canister and is used to seal the canister vent.

This solenoid valve responds to signals from the ECM. When the ECM sends an ON signal, the coil in the solenoid valve is energized. A plunger will then move to seal the canister vent. The ability to seal the vent is necessary for the on board diagnosis of other evaporative emission control system components.

This solenoid valve is used only for diagnosis, and usually remains opened.

When the vent is closed, under normal purge conditions, the evaporative emission control system is depressurized and allows "EVAP Control System" diagnosis.

CONSULT-II Reference Value in Data Monitor Mode

NBEC1104

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
VENT CONT/V	● Ignition switch: ON	OFF

ECM Terminals and Reference Value

NBEC1105

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
40	G/Y	EVAP canister vent control valve	[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)

On Board Diagnosis Logic

NBEC1106

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P1448 1448	EVAP canister vent control valve open	EVAP canister vent control valve remains opened under specified driving conditions.	<ul style="list-style-type: none"> ● EVAP canister vent control valve ● EVAP control system pressure sensor and circuit ● Blocked rubber tube to EVAP canister vent control valve ● Water separator ● EVAP canister is saturated with water. ● Vacuum cut valve

DTC P1448 EVAP CANISTER VENT CONTROL VALVE

DTC Confirmation Procedure

DTC Confirmation Procedure

NBEC1107

NOTE:

- If DTC P1448 is displayed with P0442 or P1442, perform trouble diagnosis for DTC P1448 first.
- If “DTC Confirmation Procedure” has been previously conducted, always turn ignition switch “OFF” and wait at least 10 seconds before conducting the next test.

GI

MA

EM

LC

EVAP SML LEAK P0442/P1442

1)FOR BEST RSLT,PERFORM AT FOLLOWING CONDITIONS.
 -FUEL LEVEL: 1/4-3/4
 -AMBIENT TEMP: 0-30 C(32-86F)
 -OPEN ENGINE HOOD.
 2)START ENG WITH VHCL STOPPED. IF ENG IS ON,STOP FOR 5 SEC. THEN RESTART.
 3)TOUCH START.

SEC760C

EVAP SML LEAK P0442/P1442

WAIT
2 TO 10 MINUTES.
KEEP ENGINE RUNNING AT IDLE SPEED.

SEC761C

EVAP SML LEAK P0442/P1442

MAINTAIN
1600 - 2100 RPM UNTIL FINAL RESULT APPEARS.
(APPROX. 3 MINUTES)

1600 rpm 1850 rpm 2100 rpm

SEC762C

EVAP SML LEAK P0442/P1442

OK

SELF-DIAG RESULTS

NO DTC DETECTED.
FURTHER TESTING
MAY BE REQUIRED.

SEC763C

WITH CONSULT-II

NBEC1107S01

TESTING CONDITION:

- Perform “DTC WORK SUPPORT” when the fuel level is between 1/4 to 3/4 full and vehicle is placed on flat level surface.
- Always perform test at a temperature of 0 to 30°C (32 to 86°F).
- Open engine hood before conducting the following procedure.
 - 1) Turn ignition switch “ON”.
 - 2) Turn ignition switch “OFF” and wait at least 10 seconds.
 - 3) Turn ignition switch “ON” and select “DATA MONITOR” mode with CONSULT-II.
 - 4) Make sure that the following conditions are met.

COOLAN TEMP/S	0 - 70°C (32 - 158°F)
INT/A TEMP SE	0 - 30°C (32 - 86°F)

- 5) Select “EVP SML LEAK P0442/P1442” of “EVAPORATIVE SYSTEM” in “DTC WORK SUPPORT” mode with CONSULT-II.
Follow the instruction displayed.

NOTE:

If the engine speed cannot be maintained within the range displayed on the CONSULT-II screen, go to “Basic Inspection”, EC-116.

- 6) Make sure that “OK” is displayed.
If “NG” is displayed, go to the following step.

NOTE:

Make sure that EVAP hoses are connected to EVAP canister purge volume control solenoid valve properly.

- 7) Stop engine and wait at least 10 seconds, then turn “ON”.
- 8) Disconnect hose from water separator.
- 9) Select “VENT CONTROL/V” of “ACTIVE TEST” mode with CONSULT-II.
- 10) Touch “ON” and “OFF” alternately.

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P1448 EVAP CANISTER VENT CONTROL VALVE

DTC Confirmation Procedure (Cont'd)

ACTIVE TEST	
VENT CONTROL/V	OFF
MONITOR	
ENG SPEED	XXX rpm
A/F ALPHA-B1	XXX %
A/F ALPHA-B2	XXX %
HO2S1 (B1)	XXX V
HO2S1 (B2)	XXX V
THRTL POS SEN	XXX V

CONNECT O-ring

A B

SEC934C

11) Make sure the following.

Condition VENT CONTROL/V	Air passage continuity between A and B
ON	No
OFF	Yes

If the result is NG, go to "Diagnostic Procedure", EC-620.

If the result is OK, go to "Diagnostic Procedure" for DTC P0442, EC-354.

FUSE

BAT

BATTERY

1 2

O-ring

5.3 - 12 N·m
(0.54 - 1.2 kg-m,
46.9 - 104 in-lb)

A B

SEF380Z

Overall Function Check

Use this procedure to check the overall function of the EVAP canister vent control valve circuit. During this check, a DTC might not be confirmed. NBEC1108

WITH GST

- 1) Disconnect hose from water separator. NBEC1108S01
- 2) Disconnect EVAP canister vent control valve harness connector.
- 3) Verify the following.

Condition	Air passage continuity
12V direct current supply between terminals 1 and 2	No
No supply	Yes

If the result is NG, go to "Diagnostic Procedure", EC-620.

If the result is OK, go to "Diagnostic Procedure" for DTC P0442, EC-354.

DTC P1448 EVAP CANISTER VENT CONTROL VALVE

Wiring Diagram

Wiring Diagram

NBEC1109

EC-VENT/V-01

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS



BT

HA


SC

EL

IDX

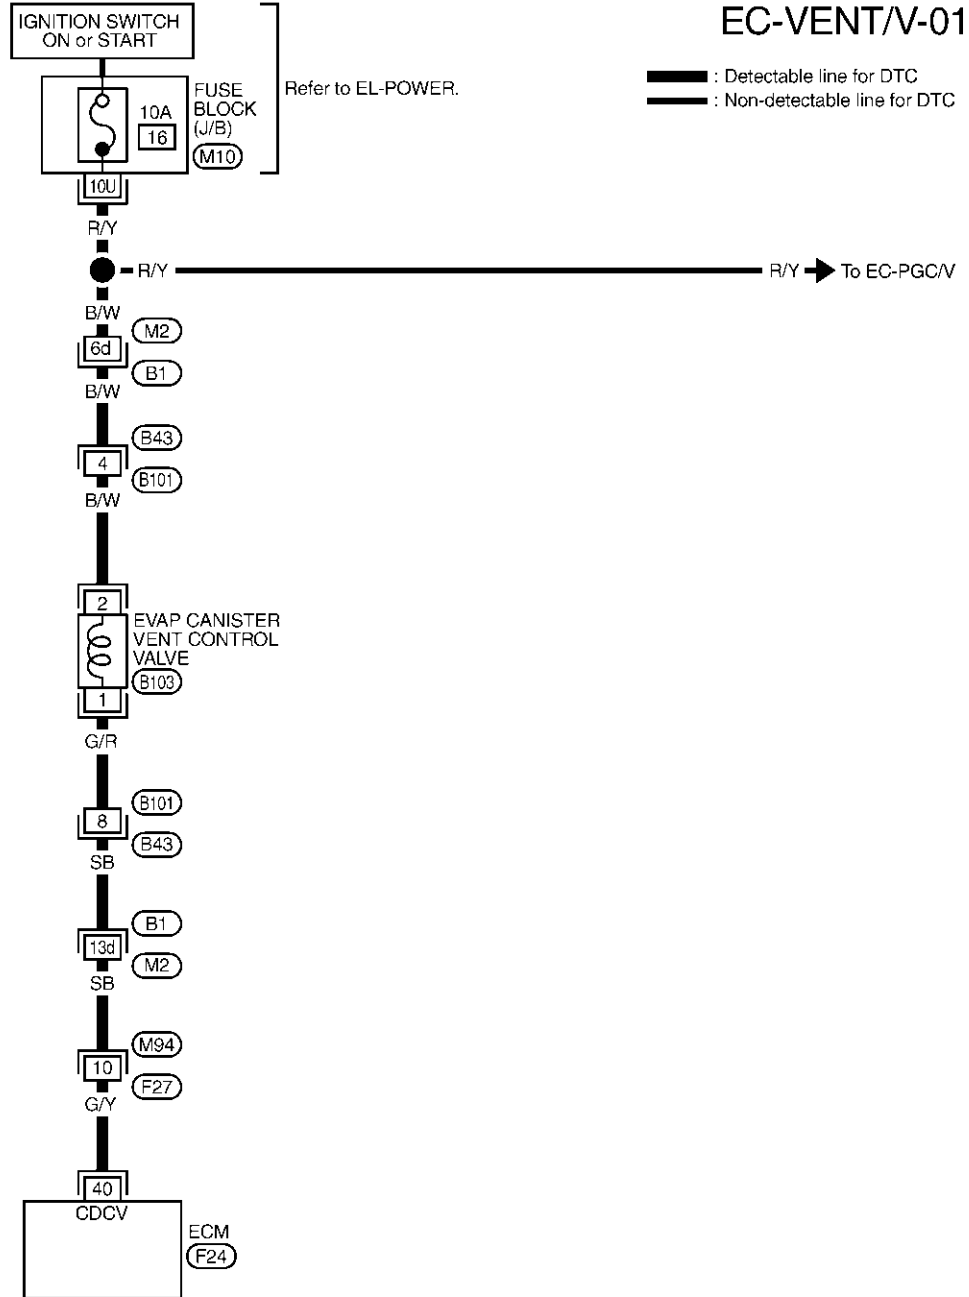

REFER TO THE FOLLOWING.
 (B1) -SUPER
 MULTIPLE JUNCTION (SMJ)
 (M10) -FUSE BLOCK-
 JUNCTION BOX (J/B)

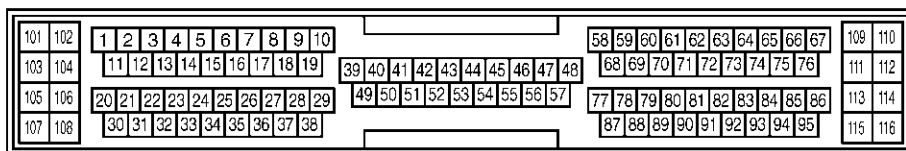


MEC903D

DTC P1448 EVAP CANISTER VENT CONTROL VALVE


Diagnostic Procedure

Diagnostic Procedure

NBEC1110

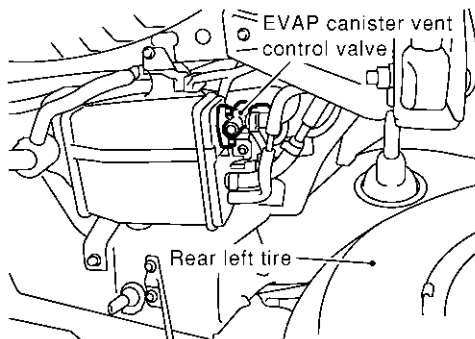1	CHECK RUBBER TUBE
<ol style="list-style-type: none">1. Turn ignition switch "OFF".2. Disconnect rubber tube connected to EVAP canister vent control valve.3. Check the rubber tube for clogging.	
 <p>EVAP canister vent control valve</p> <p>Rear left tire</p>	
OK or NG	
OK	▶ GO TO 2.
NG	▶ Clean rubber tube using an air blower.

SEC928C

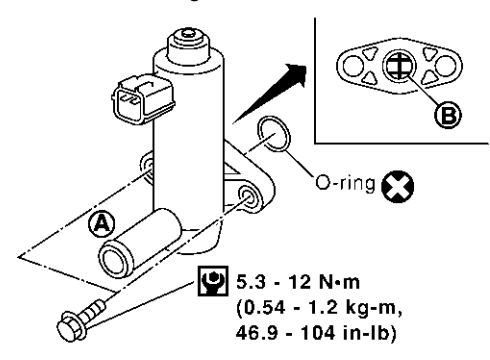2	CHECK EVAP CANISTER VENT CONTROL VALVE-I
<ol style="list-style-type: none">1. Remove EVAP canister vent control valve from EVAP canister.2. Check portion B of EVAP canister vent control valve for being rusted.	
 <p>O-ring</p> <p>5.3 - 12 N·m (0.54 - 1.2 kg-m, 46.9 - 104 in-lb)</p>	
OK or NG	
OK	▶ GO TO 3.
NG	▶ Replace EVAP canister vent control valve.

SEF376Z

DTC P1448 EVAP CANISTER VENT CONTROL VALVE


Diagnostic Procedure (Cont'd)

3 CHECK EVAP CANISTER VENT CONTROL VALVE-II

Ⓔ With CONSULT-II

1. Turn ignition switch ON.
2. Perform "VENT CONTROL/V" in "ACTIVE TEST" mode.
3. Check air passage continuity and operation delay time.

ACTIVE TEST	
VENT CONTROL/V	OFF
MONITOR	
ENG SPEED	XXX rpm
A/F ALPHA-B1	XXX %
A/F ALPHA-B2	XXX %
HO2S1 MNTR (B1)	LEAN
HO2S1 MNTR (B2)	LEAN
THRTL POS SEN	XXX V

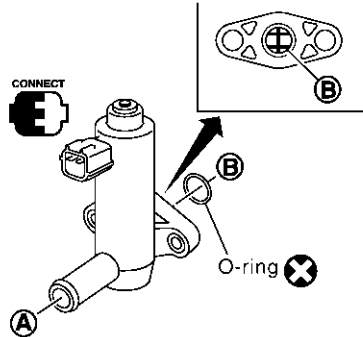


Condition	Air passage continuity between A and B
VENT CONTROL/V ON	No
VENT CONTROL/V OFF	Yes

Operation takes less than 1 second.

SEF377Z

ⓧ Without CONSULT-II

Check air passage continuity and operation delay time under the following conditions.

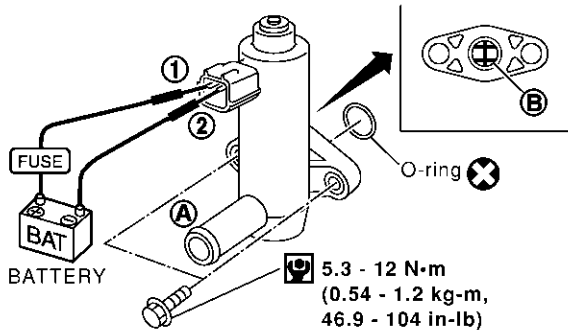

Condition	Air passage continuity between A and B
12V direct current supply between terminals 1 and 2	No
OFF	Yes

Operation takes less than 1 second.

SEF378Z

Make sure new O-ring is installed properly.

OK or NG

OK	▶	GO TO 5.
NG	▶	GO TO 4.

4 CHECK EVAP CANISTER VENT CONTROL VALVE-III

1. Clean the air passage (Portion A to B) of EVAP canister vent control valve using an air blower.
2. Perform Test No. 3 again.


OK or NG


OK	▶	GO TO 5.
NG	▶	Replace EVAP canister vent control valve.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P1448 EVAP CANISTER VENT CONTROL VALVE

Diagnostic Procedure (Cont'd)

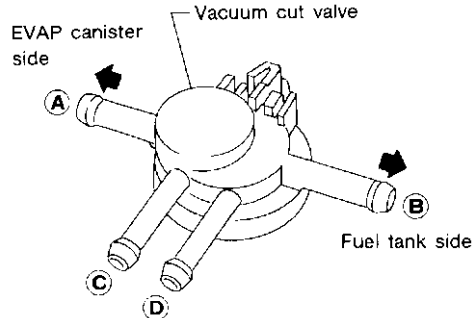5	CHECK VACUUM CUT VALVE	
<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Remove vacuum cut valve. 3. Check vacuum cut valve as follows: 		
		
SEF379Q		
<ol style="list-style-type: none"> a. Plug port C and D with fingers. b. Apply vacuum to port A and check that there is no suction from port B. c. Apply vacuum to port B and check that there is suction from port A. d. Blow air in port B and check that there is a resistance to flow out of port A. e. Open port C and D. f. Blow air in port A check that air flows freely out of port C. g. Blow air in port B check that air flows freely out of port D. 		
OK or NG		
OK	▶	GO TO 6.
NG	▶	Replace vacuum cut valve.

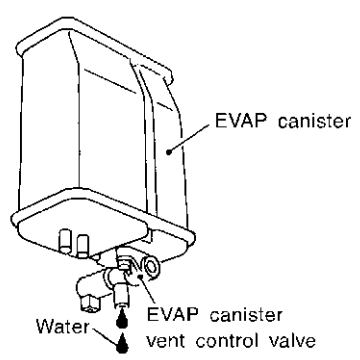6	CHECK IF EVAP CANISTER SATURATED WITH WATER	
<ol style="list-style-type: none"> 1. Remove EVAP canister with EVAP canister vent control valve attached. 2. Check if water will drain from the EVAP canister. 		
		
SEF596U		
Yes or No		
Yes	▶	GO TO 7.
No	▶	GO TO 9.

7	CHECK EVAP CANISTER	
<p>Weigh the EVAP canister with the EVAP canister vent control valve attached. The weight should be less than 1.8 kg (4.0 lb).</p>		
OK or NG		
OK	▶	GO TO 9.
NG	▶	GO TO 8.

DTC P1448 EVAP CANISTER VENT CONTROL VALVE

Diagnostic Procedure (Cont'd)


8	DETECT MALFUNCTIONING PART	
Check the following. <ul style="list-style-type: none"> ● EVAP canister for damage ● EVAP hose between EVAP canister and water separator for clogging or poor connection 		
▶		Repair hose or replace EVAP canister.

GI
MA

9	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR HOSE	
Check disconnection or improper connection of hose connected to EVAP control system pressure sensor.		
OK or NG		
OK	▶	GO TO 10.
NG	▶	Repair it.

EM
LC

EC

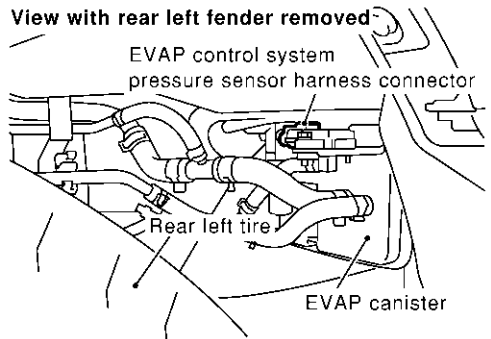10	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR CONNECTOR	
1. Disconnect EVAP control system pressure sensor harness connector.		
View with rear left fender removed  <p>The diagram shows a rear view of the vehicle's engine compartment area with the left fender removed. It labels the 'EVAP control system pressure sensor harness connector' at the top, the 'Rear left tire' at the bottom left, and the 'EVAP canister' at the bottom right. Various hoses and components are shown in a technical drawing style.</p>		
SEC931C		
2. Check connectors for water. Water should not exist.		
OK or NG		
OK	▶	GO TO 11.
NG	▶	Replace EVAP control system pressure sensor.

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P1448 EVAP CANISTER VENT CONTROL VALVE


Diagnostic Procedure (Cont'd)

11 CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

1. Remove EVAP control system pressure sensor with its harness connector connected.

CAUTION:

- Never apply force to the air hole protector of the sensor if equipped.

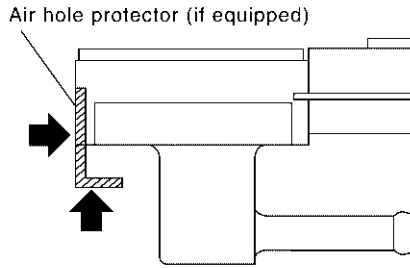

SEF799W

2. Remove hose from EVAP control system pressure sensor.


3. Turn ignition switch "ON".

4. Use pump to apply vacuum and pressure to EVAP control system pressure sensor as shown in figure.

CAUTION:

- Always calibrate the vacuum pump gauge when using it.
- Do not apply below -20 kPa (-150 mmHg, -5.91 inHg) or over 20 kPa (150 mmHg, 5.91 inHg) of pressure.

5. Check input voltage between ECM terminal 84 and ground.

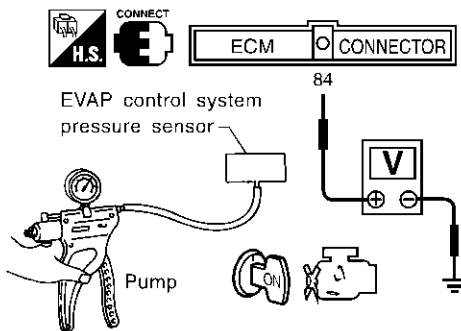

Pressure (Relative to atmospheric pressure)	Voltage V
0 kPa (0 mmHg, 0 inHg)	3.0 - 3.6
-9.3 kPa (-70 mmHg, -2.76 inHg)	0.4 - 0.6

SEF342X

CAUTION:

- Discard and EVAP control system pressure sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

OK or NG

OK ► GO TO 12.

NG ► Replace EVAP control system pressure sensor.


12 CHECK INTERMITTENT INCIDENT

Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.

► INSPECTION END

On Board Diagnosis Logic

NBEC0812

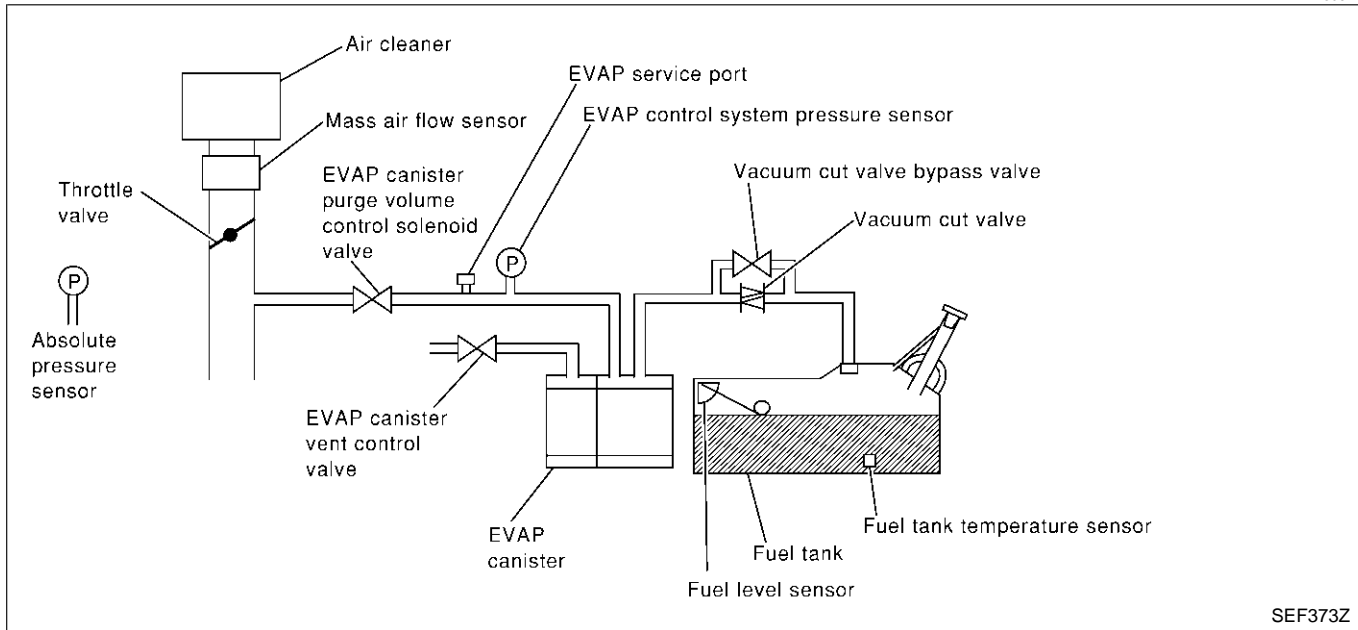

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

This diagnosis detects very small leaks in the EVAP line between fuel tank and EVAP canister purge volume control solenoid valve, using vapor pressure in the fuel tank.

The EVAP canister vent control valve is closed to shut the EVAP purge line. The vacuum cut valve bypass valve will then be opened to clear the line between the fuel tank and the EVAP canister purge volume control solenoid valve. The EVAP control system pressure sensor can now monitor the pressure inside the fuel tank.

If pressure increases, the ECM will check for leaks in the line between the vacuum cut valve and EVAP canister purge volume control solenoid valve.

If ECM judges a leak which corresponds to a very small leak, the very small leak P1456 will be detected.

If ECM judges there are no leaks, the diagnosis will be OK.




DTC P1456 EVAP CONTROL SYSTEM

On Board Diagnosis Logic (Cont'd)

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P1456 1456	Evaporative emission control system very small leak (positive pressure check)	<ul style="list-style-type: none"> ● EVAP system has a very small leak. ● EVAP system does not operate properly. 	<ul style="list-style-type: none"> ● Incorrect fuel tank vacuum relief valve ● Incorrect fuel filler cap used ● Fuel filler cap remains open or fails to close. ● Foreign matter caught in fuel filler cap ● Leak is in line between intake manifold and EVAP canister purge volume control solenoid valve. ● Foreign matter caught in EVAP canister vent control valve ● EVAP canister or fuel tank leaks ● EVAP purge line (Pipe and rubber tube) leaks ● EVAP purge line rubber tube bent ● Blocked or bent rubber tube to EVAP control system pressure sensor ● Loose or disconnected rubber tube ● EVAP canister vent control valve and the circuit ● EVAP canister purge volume control solenoid valve and the circuit ● Absolute pressure sensor ● Fuel tank temperature sensor ● O-ring of EVAP canister vent control valve is missing or damaged. ● Water separator ● EVAP canister saturated with water ● EVAP control system pressure sensor ● Refueling control valve ● ORVR system leaks ● Fuel level sensor and the circuit ● Foreign matter caught in EVAP canister purge volume control solenoid valve

CAUTION:

- Use only a genuine NISSAN fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may come on.
- If the fuel filler cap is not tightened properly, the MIL may come on.
- Use only a genuine NISSAN rubber tube as a replacement.

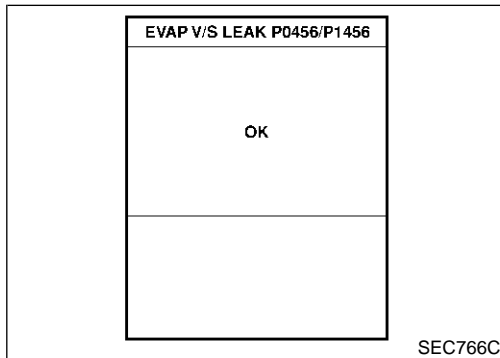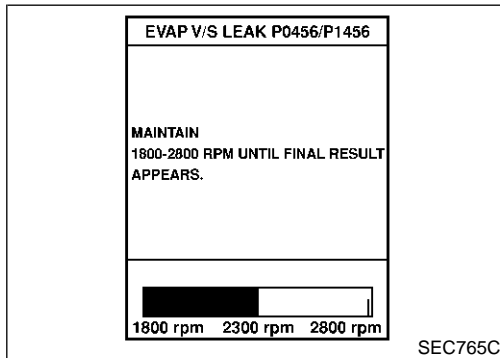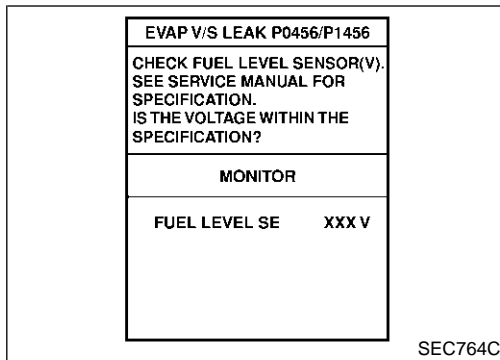

DTC Confirmation Procedure

CAUTION:

Never remove fuel filler cap during the DTC confirmation procedure.

NOTE:

- If DTC P1456 is displayed with P0442, perform TROUBLE DIAGNOSIS FOR DTC P1456 first.
- If “DIAGNOSTIC TROUBLE CODE CONFIRMATION PROCEDURE” has been previously conducted, always turn ignition switch “OFF” and wait at least 10 seconds before conducting the next test.
- After repair, make sure that the hoses and clips are installed properly.

TESTING CONDITION:

- Open engine hood before conducting following procedure.
- If any of following condition is met just before the DTC confirmation procedure, leave the vehicle for more than 1 hour.
 - a) Fuel filler cap is removed.
 - b) Refilled or drained the fuel.
 - c) EVAP component parts is/are removed.
- Before performing the following procedure, confirm that battery voltage is more than 11V at idle.

Ⓔ With CONSULT-II

- 1) Turn ignition switch “ON” and select “DATA MONITOR” mode with CONSULT-II.
- 2) Make sure the following conditions are met.
 - FUEL LEVEL SE: 1.08 - 0.2V**
 - COOLAN TEMP/S: 0 - 32°C (32 - 90°F)**
 - FUEL T/TMP SE: 0 - 35°C (32 - 95°F)**
 - INT A/TEMP SE: More than 0°C (32°F)**
 If NG, turn ignition switch “OFF” and leave the vehicle in a cool place (soak the vehicle) or refilling/draining fuel until the output voltage condition of the “FUEL LEVEL SE” meets within the range above and leave the vehicle for more than 1 hour. Then start from step 1).
- 3) Turn ignition switch “OFF” and wait at least 10 seconds.
- 4) Turn ignition switch “ON”.
- 5) Select “EVP V/S LEAK P0456/P1456” of “EVAPORATIVE SYSTEM” in “DTC WORK SUPPORT” mode with CONSULT-II. Follow the instruction displayed.
- 6) Make sure that “OK” is displayed. If “NG” is displayed, refer to “Diagnostic Procedure”, EC-628.


NOTE:

- If the engine speed cannot be maintained within the range displayed on CONSULT-II screen, go to “Basic inspection”, EC-116.
- Make sure that EVAP hoses are connected to EVAP canister purge volume control solenoid valve properly.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P1456 EVAP CONTROL SYSTEM

Overall Function Check

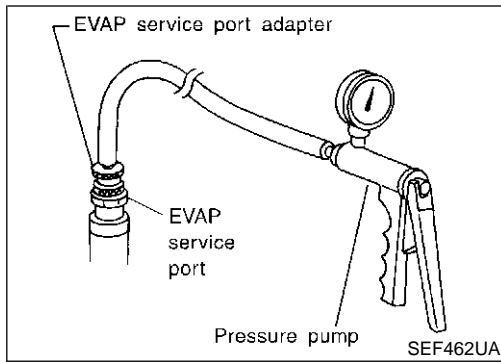

Overall Function Check

NBEC0816

WITH GST

NBEC0816S01

Use this procedure to check the overall function of the EVAP very small leak function. During this check, a 1st trip DTC might not be confirmed.

CAUTION:

- Never use compressed air, doing so may damage the EVAP system.
- Do not start engine.
- Do not exceeded 4.12 kPa (0.042 kg/cm², 0.6 psi).

- 1) Attach the EVAP service port adapter securely to the EVAP service port.
- 2) Set the pressure pump and a hose.
- 3) Also set a vacuum gauge via 3-way connector and a hose.
- 4) Turn ignition switch "ON".
- 5) Connect GST and select mode 8.
- 6) Using mode 8 control the EVAP canister vent control valve (close) and vacuum cut valve bypass valve (open).
- 7) Apply pressure and make sure the following conditions are satisfied.

Pressure to be applied: 2.7 kPa (20 mmHg, 0.79 inHg)

Time to be waited after the pressure drawn in to the EVAP system and the pressure to be dropped: 60 seconds and the pressure should not be dropped more than 0.4 kPa (3 mmHg, 0.12 inHg)

If NG, go to diagnostic procedure, EC-628.

NOTE:

For more information, refer to GST instruction manual.

Diagnostic Procedure

NBEC0815

1	CHECK FUEL FILLER CAP DESIGN	
<p>1. Turn ignition switch "OFF". 2. Check for genuine NISSAN fuel filler cap design.</p>		
OK or NG		
OK	▶	GO TO 2.
NG	▶	Replace with genuine NISSAN fuel filler cap.



SEF915U

DTC P1456 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

2	CHECK FUEL FILLER CAP INSTALLATION	
Check that the cap is tightened properly by rotating the cap clockwise.		
OK or NG		
OK	▶	GO TO 3.
NG	▶	<ul style="list-style-type: none"> • Open fuel filler cap, then clean cap and fuel filler neck threads using air blower. • Retighten until ratcheting sound is heard.

3	CHECK FUEL FILLER CAP FUNCTION	
Check for air releasing sound while opening the fuel filler cap.		
OK or NG		
OK	▶	GO TO 5.
NG	▶	GO TO 4.

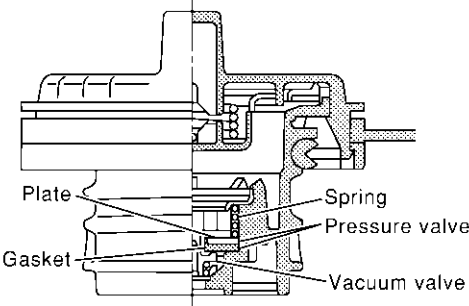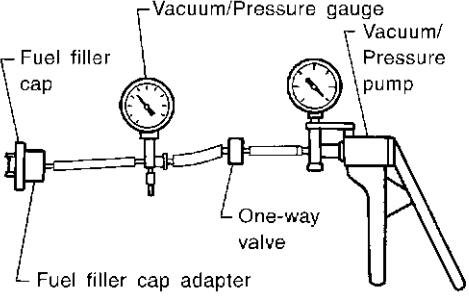4	CHECK FUEL TANK VACUUM RELIEF VALVE	
<ol style="list-style-type: none"> 1. Wipe clean valve housing. 2. Check valve opening pressure and vacuum. 		
		
SEF445Y		
		
SEF943S		
<p>Pressure: 15.3 - 20.0 kPa (0.156 - 0.204 kg/cm², 2.22 - 2.90 psi)</p> <p>Vacuum: -6.0 to -3.3 kPa (-0.061 to -0.034 kg/cm², -0.87 to -0.48 psi)</p> <p>CAUTION: Use only a genuine fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may come on.</p>		
OK or NG		
OK	▶	GO TO 5.
NG	▶	Replace fuel filler cap with a genuine one.


GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P1456 EVAP CONTROL SYSTEM


Diagnostic Procedure (Cont'd)

5 INSTALL THE PRESSURE PUMP

To locate the EVAP leak, install EVAP service port adapter and pressure pump to EVAP service port securely.

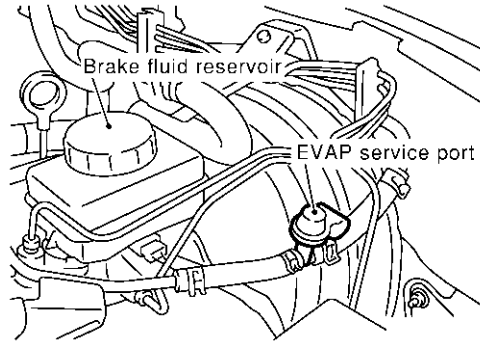

SEF983Y

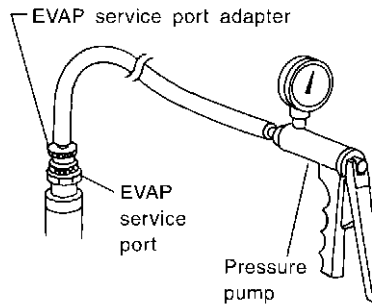

SEF916U

NOTE:

Improper installation of the EVAP service port adapter to the EVAP service port may cause leaking.

Models with CONSULT-II ►	GO TO 6.
Models without CON-SULT-II ►	GO TO 7.

DTC P1456 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


6 CHECK FOR EVAP LEAK

Ⓔ With CONSULT-II

1. Turn ignition switch "ON".
2. Select "EVAP SYSTEM CLOSE" of "WORK SUPPORT" mode with CONSULT-II.
3. Touch "START" and apply pressure into the EVAP line until the pressure indicator reaches the middle of the bar graph.

NOTE:


- Never use compressed air or a high pressure pump.
- Do not exceed 4.12 kPa (0.042 kg/cm², 0.6 psi) of pressure in the system.

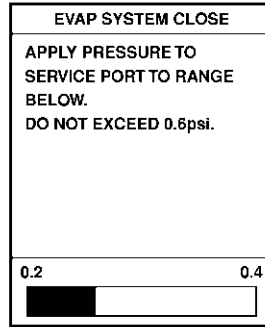

PEF917U

4. Using EVAP leak detector, locate the EVAP leak. For the leak detector, refer to the instruction manual for more details. Refer to "EVAPORATIVE EMISSION LINE DRAWING", EC-38.

Leak detector

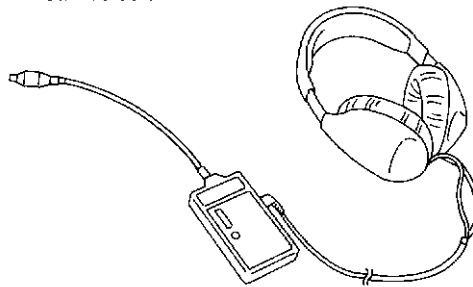

SEF200U

OK or NG

OK	▶	GO TO 8.
NG	▶	Repair or replace.


DTC P1456 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

7 CHECK FOR EVAP LEAK


⊗ Without CONSULT-II

1. Turn ignition switch "OFF".
2. Apply 12 volts DC to EVAP canister vent control valve. The valve will close. (Continue to apply 12 volts until the end of test.)

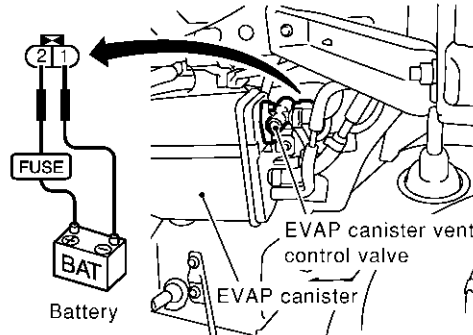

SEC930C

3. Apply 12 volts DC to vacuum cut valve bypass valve. The valve will open. (Continue to apply 12V until the end of test.)

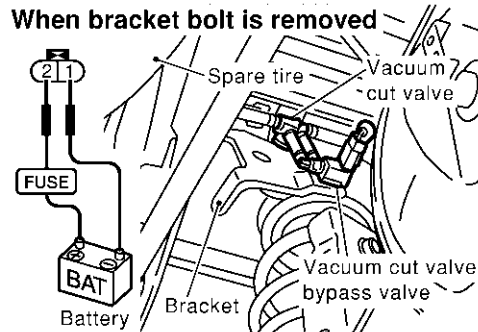


SEC932C

4. Pressurize the EVAP line using pressure pump with 1.3 to 2.7 kPa (10 to 20 mmHg, 0.39 to 0.79 inHg), then remove pump and EVAP service port adapter.

NOTE:

- Never use compressed air or a high pressure pump.
- Do not exceed 4.12 kPa (0.042 kg/cm², 0.6 psi) of pressure in the system.

5. Using EVAP leak detector, locate the EVAP leak. For the leak detector, refer to the instruction manual for more details. Refer to "EVAPORATIVE EMISSION LINE DRAWING", EC-38.

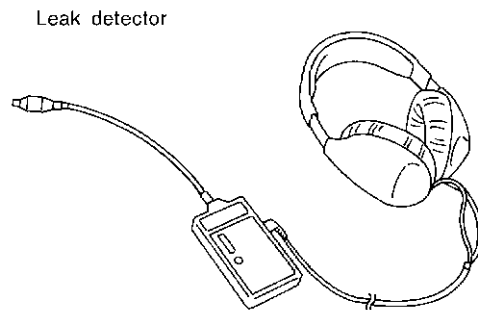

SEF200U

OK or NG

OK	▶	GO TO 8.
NG	▶	Repair or replace.

DTC P1456 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

8	CHECK WATER SEPARATOR
<ol style="list-style-type: none"> 1. Check visually for insect nests in the water separator air inlet. 2. Check visually for cracks or flaws in the appearance. 3. Check visually for cracks or flaws in the hose. 4. Check that A and C are not clogged by blowing air into B with A, and then C plugged. 	
<p>* (A) : Bottom hole (To atmosphere) (B) : Emergency tube (From EVAP canister) (C) : Inlet port (To member)</p>	
PBIB1032E	
<ol style="list-style-type: none"> 5. In case of NG in items 2 - 4, replace the parts. <p>NOTE:</p> <ul style="list-style-type: none"> ● Do not disassemble water separator. 	
OK or NG	
OK	▶ GO TO 9.
NG	▶ Replace water separator.

GI

MA

EM

LC

EC

FE

AT

TF

9	CHECK EVAP CANISTER VENT CONTROL VALVE, O-RING AND CIRCUIT
Refer to "DTC Confirmation Procedure", EC-378.	
OK or NG	
OK	▶ GO TO 10.
NG	▶ Repair or replace EVAP canister vent control valve and O-ring or harness/connector.

PD

AX

SU

10	CHECK IF EVAP CANISTER SATURATED WITH WATER
<ol style="list-style-type: none"> 1. Remove EVAP canister with EVAP canister vent control valve attached. 2. Does water drain from the EVAP canister? 	
Yes or No	
Yes	▶ GO TO 11.
No (With CONSULT-II)	▶ GO TO 13.
No (Without CONSULT-II)	▶ GO TO 14.

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P1456 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

11	CHECK EVAP CANISTER	
Weigh the EVAP canister with the EVAP canister vent control valve attached. The weight should be less than 1.8 kg (4.0 lb).		
OK or NG		
OK (With CONSULT-II)	▶	GO TO 13.
OK (Without CONSULT-II)	▶	GO TO 14.
NG	▶	GO TO 12.

12	DETECT MALFUNCTIONING PART	
Check the following. <ul style="list-style-type: none"> ● EVAP canister for damage ● EVAP hose between EVAP canister and water separator for clogging or poor connection 		
		▶ Repair hose or replace EVAP canister.

13	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION																					
Ⓔ With CONSULT-II <ol style="list-style-type: none"> 1. Disconnect vacuum hose to EVAP canister purge volume control solenoid valve at EVAP service port. 2. Start engine. 3. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode. 4. Touch "Qu" on CONSULT-II screen to increase "PURG VOL CONT/V" opening to 100%. 5. Check vacuum hose for vacuum when revving engine up to 2,000 rpm. 																						
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <td>PURG VOL CONT/V</td> <td>XXX %</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>A/F ALPHA-B1</td> <td>XXX %</td> </tr> <tr> <td>A/F ALPHA-B2</td> <td>XXX %</td> </tr> <tr> <td>HO2S1 MNTR (B1)</td> <td>LEAN</td> </tr> <tr> <td>HO2S1 MNTR (B2)</td> <td>LEAN</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXX V</td> </tr> <tr> <td> </td> <td> </td> </tr> </table>			ACTIVE TEST		PURG VOL CONT/V	XXX %	MONITOR		ENG SPEED	XXX rpm	A/F ALPHA-B1	XXX %	A/F ALPHA-B2	XXX %	HO2S1 MNTR (B1)	LEAN	HO2S1 MNTR (B2)	LEAN	THRTL POS SEN	XXX V		
ACTIVE TEST																						
PURG VOL CONT/V	XXX %																					
MONITOR																						
ENG SPEED	XXX rpm																					
A/F ALPHA-B1	XXX %																					
A/F ALPHA-B2	XXX %																					
HO2S1 MNTR (B1)	LEAN																					
HO2S1 MNTR (B2)	LEAN																					
THRTL POS SEN	XXX V																					
Vacuum should exist.																						
SEF984Y																						
OK or NG																						
OK	▶	GO TO 16.																				
NG	▶	GO TO 15.																				

14	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION	
ⓧ Without CONSULT-II <ol style="list-style-type: none"> 1. Start engine and warm it up to normal operating temperature. 2. Stop engine. 3. Disconnect vacuum hose to EVAP canister purge volume control solenoid valve at EVAP service port. 4. Start engine and let it idle for at least 80 seconds. 5. Check vacuum hose for vacuum when revving engine up to 2,000 rpm. Vacuum should exist. 		
OK or NG		
OK	▶	GO TO 17.
NG	▶	GO TO 15.

DTC P1456 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

15	CHECK VACUUM HOSE	
Check vacuum hoses for clogging or disconnection. Refer to "Vacuum Hose Drawing", EC-28.		
OK or NG		
OK (With CONSULT-II)	▶	GO TO 16.
OK (Without CONSULT-II)	▶	GO TO 17.
NG	▶	Repair or reconnect the hose.

GI

MA

EM

16	CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE																					
<p>Ⓔ With CONSULT-II</p> <p>1. Start engine.</p> <p>2. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. Check that engine speed varies according to the valve opening.</p>																						
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <td>PURG VOL CONT/V</td> <td>XXX %</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>A/F ALPHA-B1</td> <td>XX %</td> </tr> <tr> <td>A/F ALPHA-B2</td> <td>XX %</td> </tr> <tr> <td>HO2S1 MNTR (B1)</td> <td>LEAN</td> </tr> <tr> <td>HO2S1 MNTR (B2)</td> <td>LEAN</td> </tr> <tr> <td>THRTL POS SEN</td> <td>X. XX V</td> </tr> <tr> <td> </td> <td> </td> </tr> </table>			ACTIVE TEST		PURG VOL CONT/V	XXX %	MONITOR		ENG SPEED	XXX rpm	A/F ALPHA-B1	XX %	A/F ALPHA-B2	XX %	HO2S1 MNTR (B1)	LEAN	HO2S1 MNTR (B2)	LEAN	THRTL POS SEN	X. XX V		
ACTIVE TEST																						
PURG VOL CONT/V	XXX %																					
MONITOR																						
ENG SPEED	XXX rpm																					
A/F ALPHA-B1	XX %																					
A/F ALPHA-B2	XX %																					
HO2S1 MNTR (B1)	LEAN																					
HO2S1 MNTR (B2)	LEAN																					
THRTL POS SEN	X. XX V																					
OK or NG																						
OK	▶	GO TO 18.																				
NG	▶	GO TO 17.																				

LC

EC

FE

AT

TF

PD

SEF677Y

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX


DTC P1456 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)


17 CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Ⓔ With CONSULT-II

Check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.

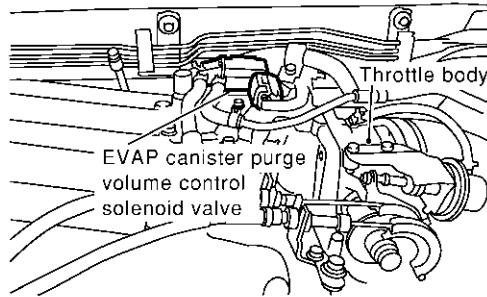

SEF986Y

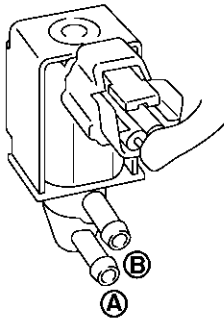


Condition PURG VOL CONT/V valve	Air passage continuity between A and B
100%	Yes
0%	No


SEF334XB

ⓧ Without CONSULT-II

Check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.

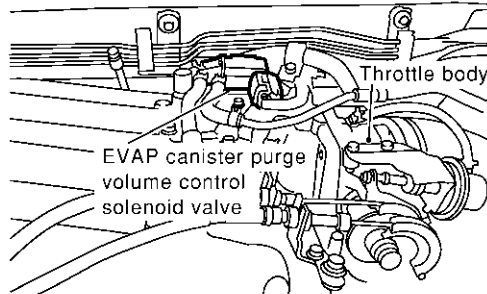

SEF986Y

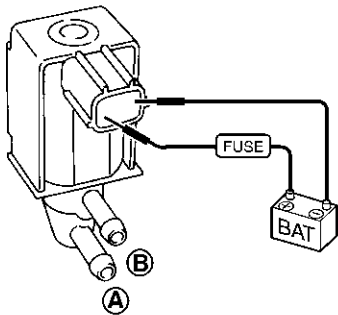

Condition	Air passage continuity between A and B
12V direct current supply between terminals 1 and 2	Yes
No supply	No

SEF335X

OK or NG

OK



GO TO 18.


NG



Replace EVAP canister purge volume control solenoid valve.

DTC P1456 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

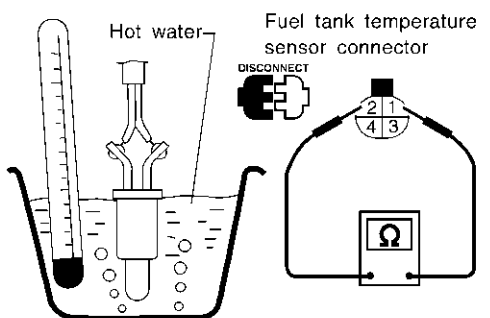18	CHECK FUEL TANK TEMPERATURE SENSOR							
<p>1. Remove fuel level sensor unit. 2. Check resistance between fuel level sensor unit and fuel pump terminals 1 and 2 by heating with hot water or heat gun as shown in the figure.</p>								
								
<table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th style="text-align: center;">Temperature °C (°F)</th> <th style="text-align: center;">Resistance kΩ</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">20 (68)</td> <td style="text-align: center;">2.3 - 2.7</td> </tr> <tr> <td style="text-align: center;">50 (122)</td> <td style="text-align: center;">0.79 - 0.90</td> </tr> </tbody> </table>			Temperature °C (°F)	Resistance kΩ	20 (68)	2.3 - 2.7	50 (122)	0.79 - 0.90
Temperature °C (°F)	Resistance kΩ							
20 (68)	2.3 - 2.7							
50 (122)	0.79 - 0.90							
SEF974Y								
OK or NG								
OK	▶	GO TO 19.						
NG	▶	Replace fuel level sensor unit.						

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P1456 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

19	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR
<p>1. Remove EVAP control system pressure sensor with its harness connector connected.</p> <p>CAUTION:</p> <ul style="list-style-type: none"> ● Never apply force to the air hole protector of the sensor if equipped. 	
SEF799W	
<p>2. Remove hose from EVAP control system pressure sensor.</p> <p>3. Turn ignition switch "ON".</p> <p>4. Use pump to apply vacuum and pressure to EVAP control system pressure sensor as shown in figure.</p> <p>CAUTION:</p> <ul style="list-style-type: none"> ● Always calibrate the vacuum pump gauge when using it. ● Do not apply below -20 kPa (-150 mmHg, -5.91 inHg) or over 20 kPa (150 mmHg, 5.91 inHg) of pressure. <p>5. Check input voltage between ECM terminal 84 and ground.</p>	
SEF342X	
<p>CAUTION:</p> <ul style="list-style-type: none"> ● Discard and EVAP control system pressure sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one. <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 20.
NG	▶ Replace EVAP control system pressure sensor.

20	CHECK EVAP PURGE LINE
<p>Check EVAP purge line (pipe, rubber tube, fuel tank and EVAP canister) for cracks or improper connection. Refer to "Evaporative Emission System", EC-34.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 21.
NG	▶ Repair or reconnect the hose.


21	CLEAN EVAP PURGE LINE
<p>Clean EVAP purge line (pipe and rubber tube) using air blower.</p>	
▶	GO TO 22.

DTC P1456 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

22	CHECK REFUELING EVAP VAPOR LINE	
<ul style="list-style-type: none"> Check refueling EVAP vapor line between EVAP canister and fuel tank for clogging, kink, looseness and improper connection. For location, refer to "EVAPORATIVE EMISSION LINE DRAWING", EC-38. 		
OK or NG		
OK	▶	GO TO 23.
NG	▶	Repair or replace hoses and tubes.

23	CHECK SIGNAL LINE AND RECIRCULATION LINE	
<ul style="list-style-type: none"> Check signal line and recirculation line between filler neck tube and fuel tank for clogging, kink, cracks, looseness and improper connection. 		
OK or NG		
OK	▶	GO TO 24.
NG	▶	Repair or replace hoses, tubes or filler neck tube.

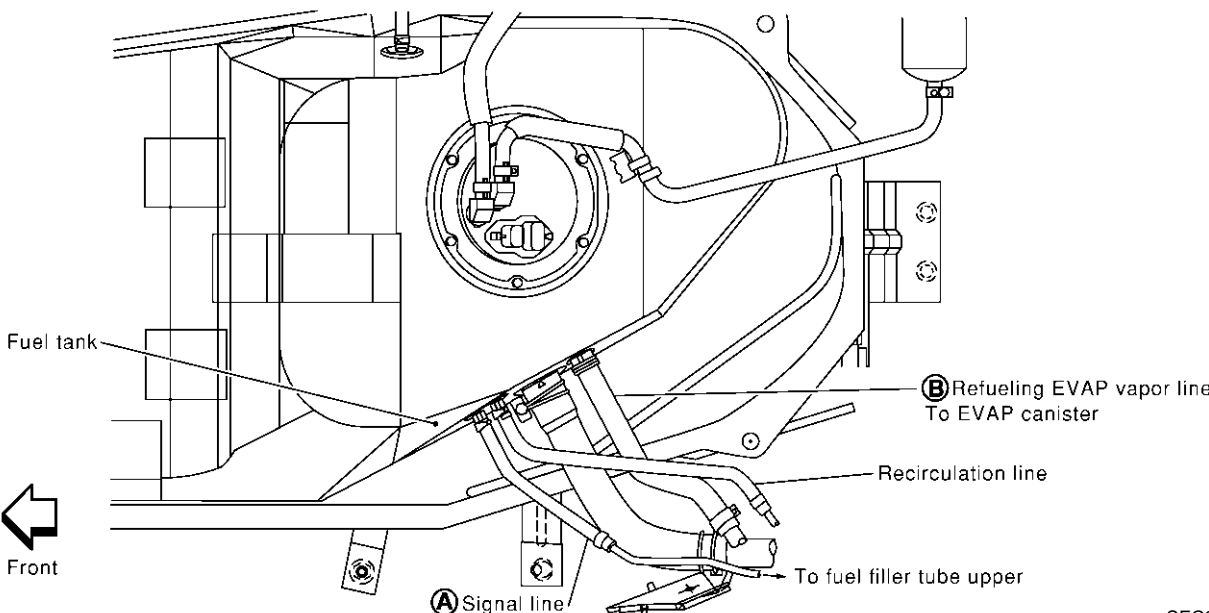24	CHECK REFUELING CONTROL VALVE	
<ol style="list-style-type: none"> Remove fuel filler cap. Check air continuity between hose ends A and B. Blow air into hose end B. Air should flow freely into the fuel tank. Blow air into hose end A and check that there is no leakage. Apply pressure to both hose ends A and B [20 kPa (150 mmHg, 5.91 inHg)] using a pressure pump and a suitable 3-way connector. Check that there is no leakage. 		
		
SEC883C		
OK or NG		
OK	▶	GO TO 25.
NG	▶	Replace or refueling control valve with fuel tank.

25	CHECK FUEL LEVEL SENSOR	
Refer to EL-143, "Fuel Level Sensor Unit Check".		
OK or NG		
OK	▶	GO TO 26.
NG	▶	Replace fuel level sensor unit.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


DTC P1456 EVAP CONTROL SYSTEM

Diagnostic Procedure (Cont'd)

26	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	
▶	INSPECTION END

DTC P1464 FUEL LEVEL SENSOR

Component Description

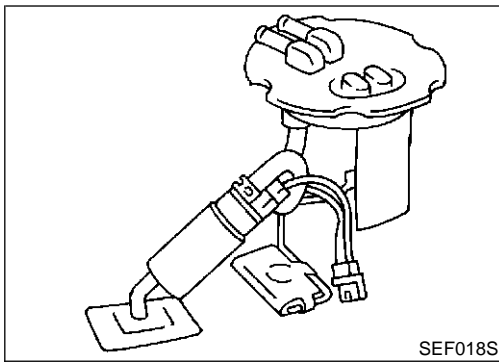

Component Description

The fuel level sensor is mounted in the fuel level sensor unit. The sensor detects a fuel level in the fuel tank and transmits a signal to the ECM.

It consists of two parts, one is mechanical float and the other is variable resistor. Fuel level sensor output voltage changes depending on the movement of the fuel mechanical float.

On Board Diagnostic Logic

ECM receives two signals from the fuel level sensor. One is fuel level sensor power supply circuit, and the other is fuel level sensor ground circuit.


This diagnosis indicates the latter to detect open circuit malfunction.

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P1464 1464	Fuel level sensor circuit ground signal	A high voltage from the sensor is sent to ECM.	<ul style="list-style-type: none"> Fuel level sensor circuit (The fuel level sensor circuit is open or shorted.)

DTC Confirmation Procedure

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

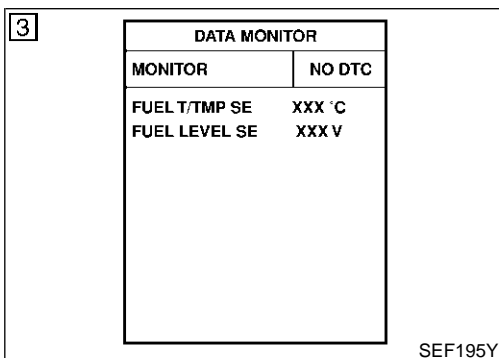

WITH CONSULT-II

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Wait at least 5 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-643.

WITH GST

Follow the procedure "WITH CONSULT-II" above.

DTC P1464 FUEL LEVEL SENSOR






Wiring Diagram

Wiring Diagram

NBEC1114

EC-FLS3-01

— : Detectable line for DTC
— : Non-detectable line for DTC

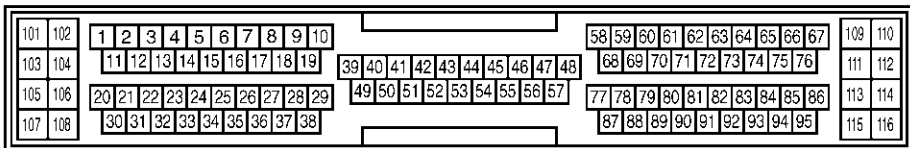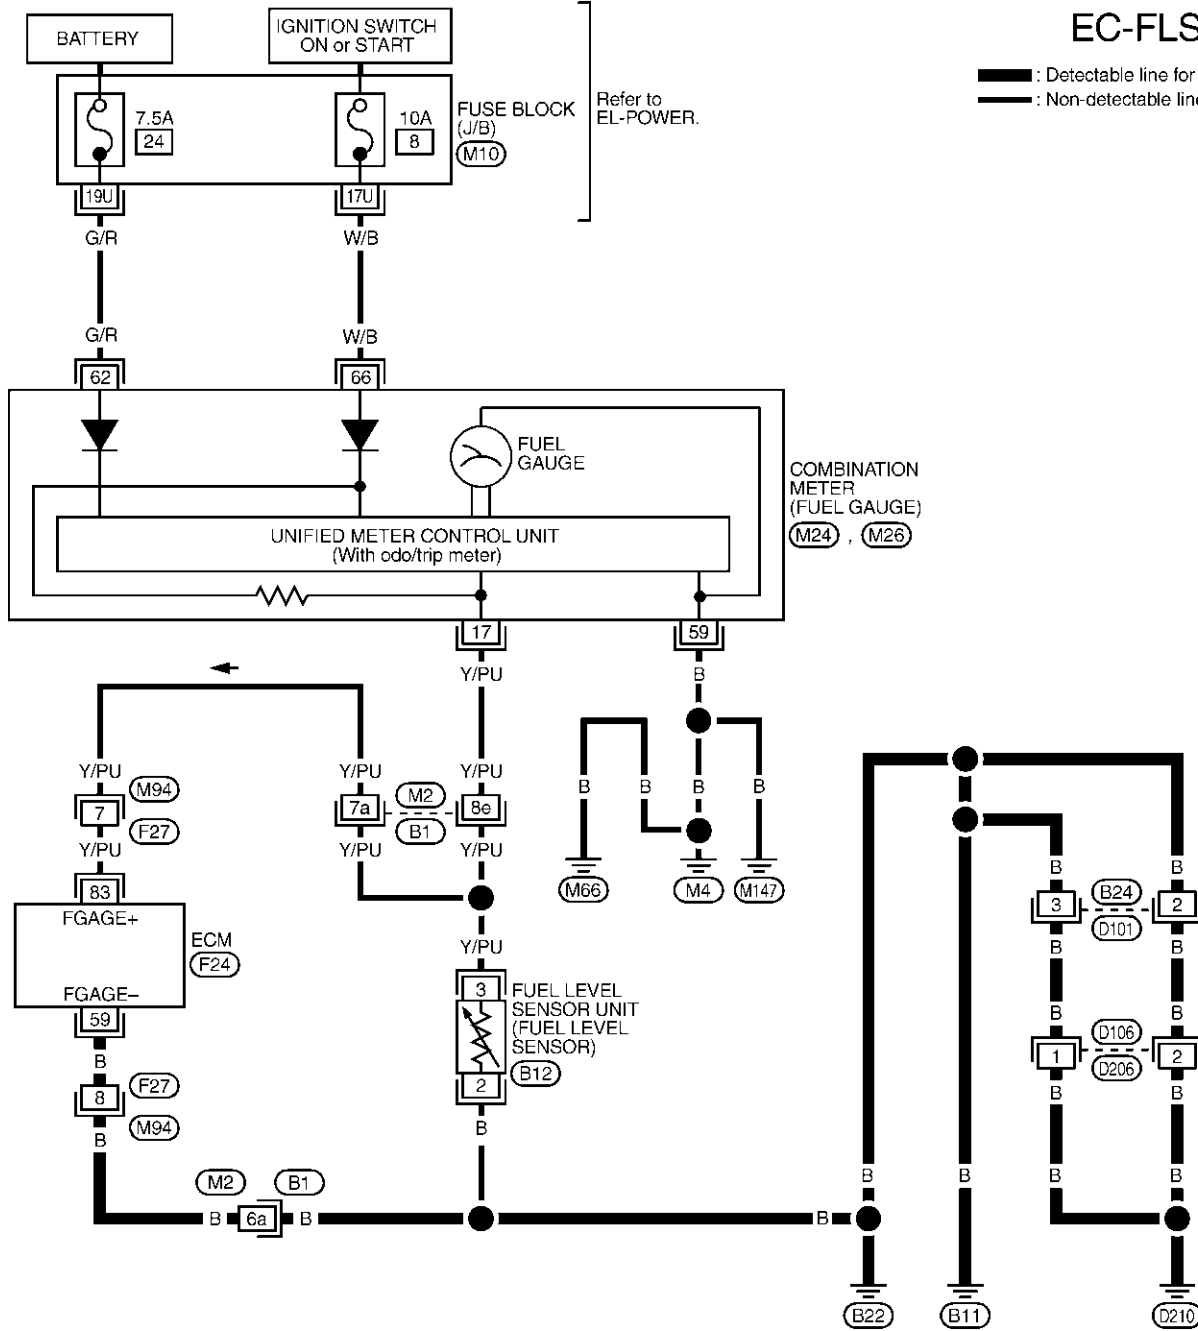

REFER TO THE FOLLOWING.

- (B1) -SUPER
- MULTIPLE JUNCTION (SMJ)
- (M10) -FUSE BLOCK- JUNCTION BOX (J/B)



MEC244E

DTC P1464 FUEL LEVEL SENSOR

Diagnostic Procedure

Diagnostic Procedure

=NBEC1115

1	CHECK FUEL LEVEL SENSOR GROUND CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch "OFF".</p> <p>2. Disconnect ECM harness connector.</p> <p>3. Check harness continuity between ECM terminal 59 and body ground. Refer to Wiring Diagram. Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 3.
NG	▶	GO TO 2.

GI
MA
EM
LC

2	DETECT MALFUNCTIONING PART	
<p>1. Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors F27, M94 ● Harness connectors M2, B1 ● Harness for open between ECM and body ground 		
▶		Replace open circuit or short to power in harness or connectors.

EC
FE
AT

3	CHECK FUEL LEVEL SENSOR	
Refer to EL-143, "Fuel Level Sensor Unit Check".		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Replace fuel level sensor unit.


TF
PD
AX

4	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.		
OK or NG		
▶		INSPECTION END

SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P1490 VACUUM CUT VALVE BYPASS VALVE

Description

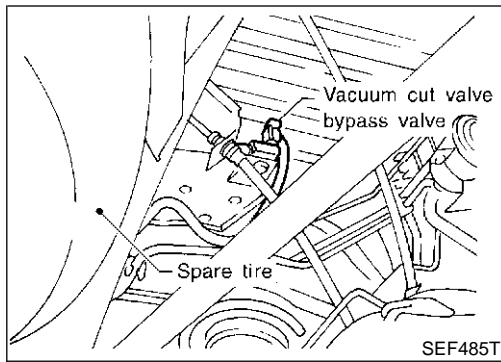

Description

COMPONENT DESCRIPTION

=NBEC1116

NBEC1116S01

The vacuum cut valve and vacuum cut valve bypass valve are installed in parallel on the EVAP purge line between the fuel tank and the EVAP canister.


The vacuum cut valve prevents the intake manifold vacuum from being applied to the fuel tank.

The vacuum cut valve bypass valve is a solenoid type valve and generally remains closed. It opens only for on board diagnosis.

The vacuum cut valve bypass valve responds to signals from the ECM. When the ECM sends an ON (ground) signal, the valve is opened. The vacuum cut valve is then bypassed to apply intake manifold vacuum to the fuel tank.

EVAPORATIVE EMISSION SYSTEM DIAGRAM

NBEC1116S02

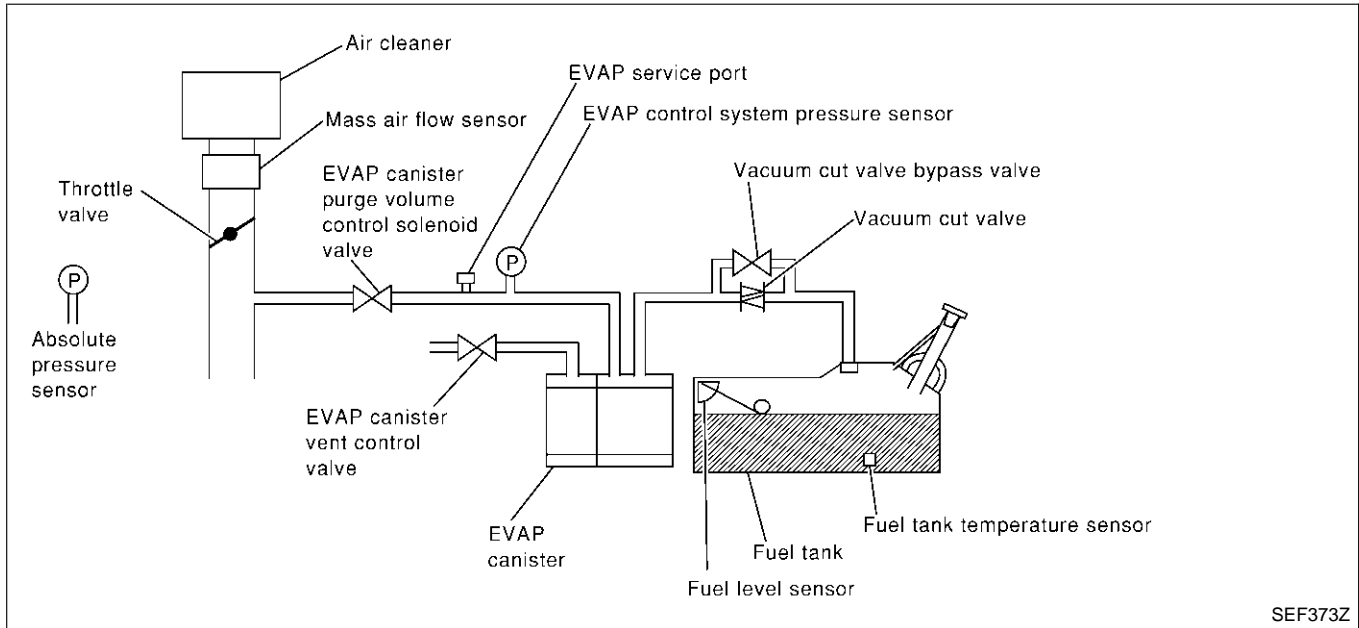

CONSULT-II Reference Value in Data Monitor Mode

NBEC1117

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
VC/V BYPASS/V	● Ignition switch: ON	OFF

ECM Terminals and Reference Value

NBEC1118

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
39	G/W	Vacuum cut valve bypass valve	[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)

DTC P1490 VACUUM CUT VALVE BYPASS VALVE

On Board Diagnosis Logic

On Board Diagnosis Logic

NBEC1119

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P1490 1490	Vacuum cut valve bypass valve circuit	An improper voltage signal is sent to ECM through vacuum cut valve bypass valve.	<ul style="list-style-type: none"> • Harness or connectors (The vacuum cut valve bypass valve circuit is open or shorted.) • Vacuum cut valve bypass valve

GI

MA

EM

LC

DTC Confirmation Procedure

NBEC1120

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:


Before performing the following procedure, confirm that battery voltage is more than 11V at idle speed.

EC

FE

AT

TF

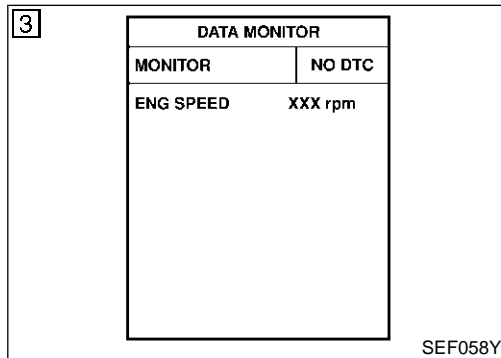

WITH CONSULT-II

NBEC1120S01

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and wait at least 5 seconds.
- 4) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-647.

PD

AX

WITH GST

NBEC1120S02

Follow the procedure "WITH CONSULT-II" above.

SU

BR

ST

RS

BT

HA

SC

EL

IDX






DTC P1490 VACUUM CUT VALVE BYPASS VALVE

Wiring Diagram

Wiring Diagram



NBEC1121

EC-BYPS/V-01

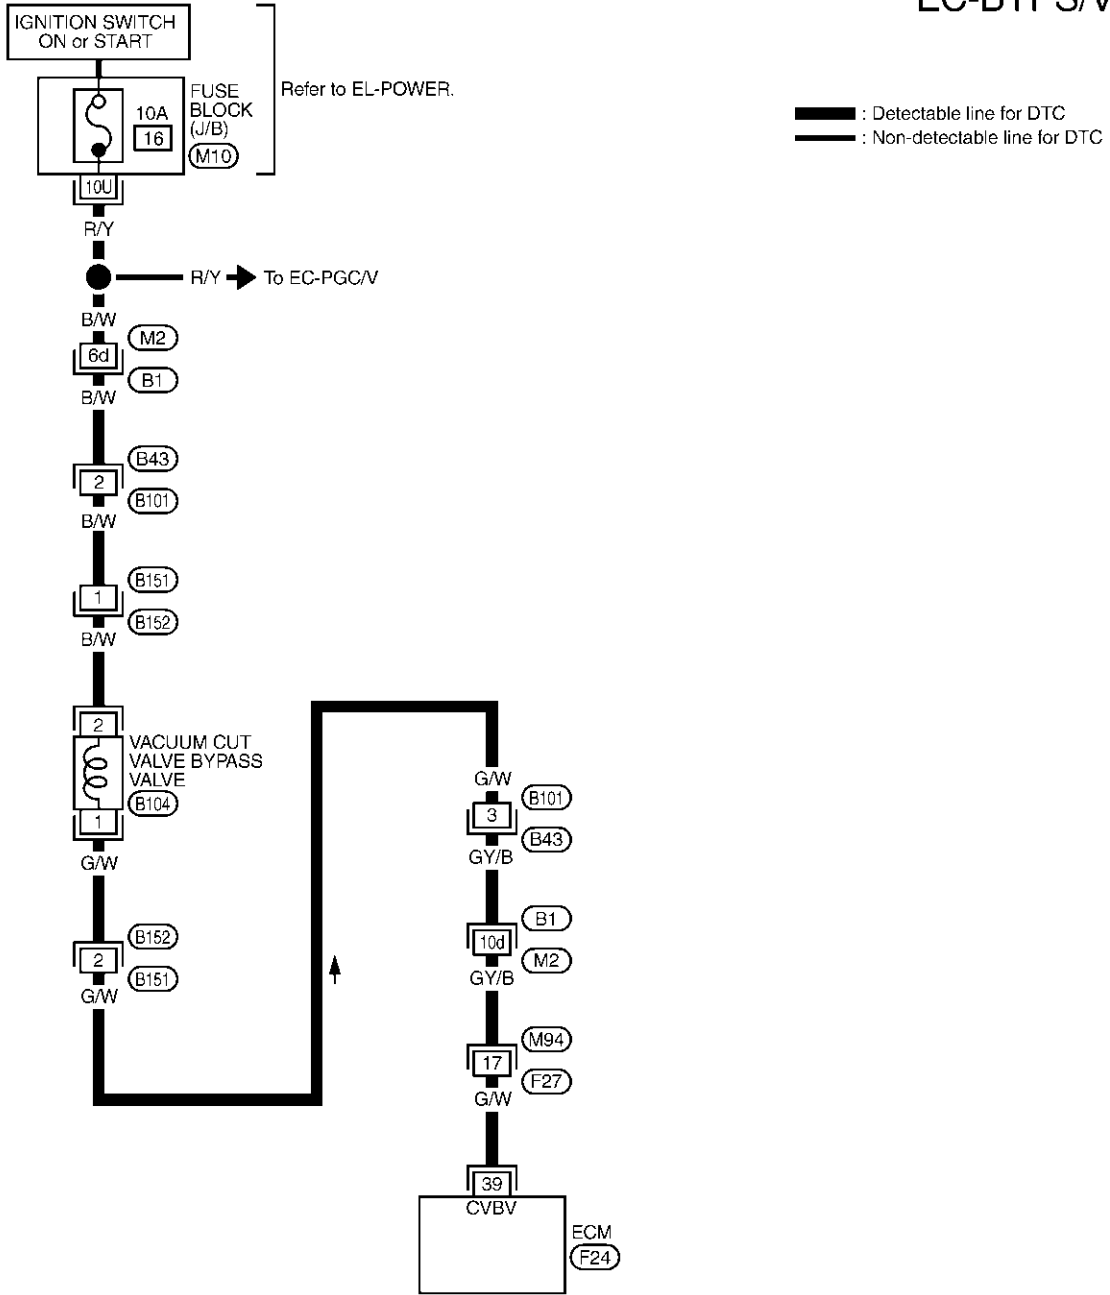

REFER TO THE FOLLOWING.

- (B1) -SUPER
- MULTIPLE JUNCTION (SMJ)
- (M10) -FUSE BLOCK-JUNCTION BOX (J/B)

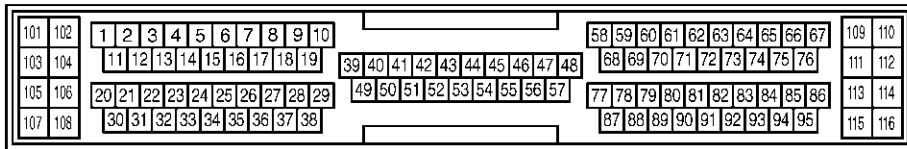

MEC905D

DTC P1490 VACUUM CUT VALVE BYPASS VALVE

Diagnostic Procedure

Diagnostic Procedure


NBEC1122

1	INSPECTION START	
Do you have CONSULT-II?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	GO TO 3.

GI

MA

EM

2	CHECK VACUUM CUT VALVE BYPASS VALVE CIRCUIT																					
<p> With CONSULT-II</p> <ol style="list-style-type: none"> Turn ignition switch "OFF" and then "ON". Select "VC/V BYPASS/V" in "ACTIVE TEST" mode with CONSULT-II. Touch "ON/OFF" on CONSULT-II screen. 																						
<table border="1" style="margin: auto;"> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <td>VC/V BYPASS/V</td> <td>OFF</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>A/F ALPHA-B1</td> <td>XXX %</td> </tr> <tr> <td>A/F ALPHA-B2</td> <td>XXX %</td> </tr> <tr> <td>HO2S1 MNTR (B1)</td> <td>LEAN</td> </tr> <tr> <td>HO2S1 MNTR (B2)</td> <td>LEAN</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXX V</td> </tr> <tr> <td> </td> <td> </td> </tr> </table>			ACTIVE TEST		VC/V BYPASS/V	OFF	MONITOR		ENG SPEED	XXX rpm	A/F ALPHA-B1	XXX %	A/F ALPHA-B2	XXX %	HO2S1 MNTR (B1)	LEAN	HO2S1 MNTR (B2)	LEAN	THRTL POS SEN	XXX V		
ACTIVE TEST																						
VC/V BYPASS/V	OFF																					
MONITOR																						
ENG SPEED	XXX rpm																					
A/F ALPHA-B1	XXX %																					
A/F ALPHA-B2	XXX %																					
HO2S1 MNTR (B1)	LEAN																					
HO2S1 MNTR (B2)	LEAN																					
THRTL POS SEN	XXX V																					
SEF014Z																						
4. Make sure that clicking sound is heard from the vacuum cut valve bypass valve.																						
OK or NG																						
OK	▶	GO TO 7.																				
NG	▶	GO TO 3.																				

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA



SC

EL

IDX

DTC P1490 VACUUM CUT VALVE BYPASS VALVE

Diagnostic Procedure (Cont'd)

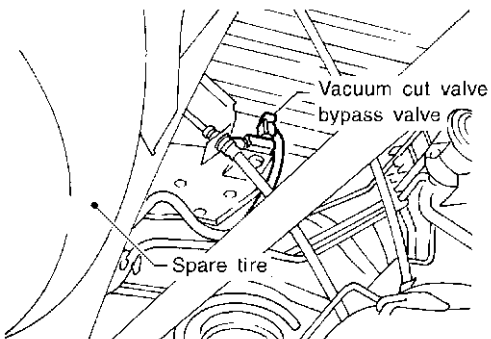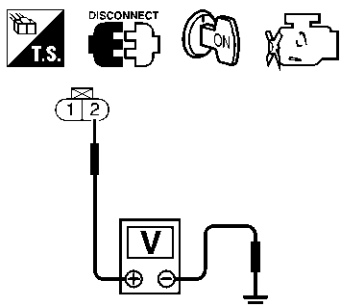3	CHECK VACUUM CUT VALVE BYPASS VALVE POWER SUPPLY CIRCUIT
<p>1. Turn ignition switch "OFF". 2. Disconnect vacuum cut valve bypass valve harness connector.</p>	
	
SEF485T	
<p>3. Turn ignition switch "ON". 4. Check voltage between vacuum cut valve bypass valve terminal 2 and ground with CONSULT-II or tester.</p>	
	
<p>Voltage: Battery voltage</p>	
<p>OK or NG</p>	
OK	▶ GO TO 5.
NG	▶ GO TO 4.


4	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M2, B1 ● Harness connectors B43, B101 ● Harness connectors B151, B152 ● Fuse block (J/B) connector M10 ● 10A fuse ● Harness for open or short between vacuum cut valve bypass valve and fuse 	
▶	Repair harness or connectors.


5	CHECK VACUUM CUT VALVE BYPASS VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 39 and vacuum cut valve bypass valve terminal 1. Refer to Wiring Diagram. Continuity should exist. 4. Also check harness for short to ground and short to power.</p>	
<p>OK or NG</p>	
OK	▶ GO TO 7.
NG	▶ GO TO 6.

DTC P1490 VACUUM CUT VALVE BYPASS VALVE

Diagnostic Procedure (Cont'd)

6	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors B152, B151 ● Harness connectors B101, B43 ● Harness connectors B1, M2 ● Harness connectors M94, F27 ● Harness for open or short between vacuum cut valve bypass valve and ECM 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

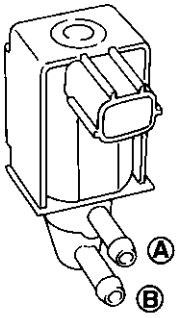7	CHECK VACUUM CUT VALVE BYPASS VALVE																						
<p>Ⓔ With CONSULT-II</p> <ol style="list-style-type: none"> 1. Reconnect harness disconnected connectors. 2. Turn ignition switch ON. 3. Perform "VC/V BYPASS/V" in "ACTIVE TEST" mode. 4. Check air passage continuity and operation delay time under the following conditions. 																							
	<table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse;"> <thead> <tr> <th colspan="2" style="text-align: center;">ACTIVE TEST</th> </tr> <tr> <th style="text-align: center;">VC/V BYPASS/V</th> <th style="text-align: center;">OFF</th> </tr> <tr> <th colspan="2" style="text-align: center;">MONITOR</th> </tr> <tr> <th style="text-align: center;">ENG SPEED</th> <th style="text-align: center;">XXX rpm</th> </tr> <tr> <th style="text-align: center;">A/F ALPHA-B1</th> <th style="text-align: center;">XXX %</th> </tr> <tr> <th style="text-align: center;">A/F ALPHA-B2</th> <th style="text-align: center;">XXX %</th> </tr> <tr> <th style="text-align: center;">HO2S1 MNTR (B1)</th> <th style="text-align: center;">LEAN</th> </tr> <tr> <th style="text-align: center;">HO2S1 MNTR (B2)</th> <th style="text-align: center;">LEAN</th> </tr> <tr> <th style="text-align: center;">THRTL POS SEN</th> <th style="text-align: center;">XXX V</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">ON</td> <td style="text-align: center;">Yes</td> </tr> <tr> <td style="text-align: center;">OFF</td> <td style="text-align: center;">No</td> </tr> </tbody> </table> <p style="text-align: center; margin-top: 10px;">Operation takes less than 1 second.</p>	ACTIVE TEST		VC/V BYPASS/V	OFF	MONITOR		ENG SPEED	XXX rpm	A/F ALPHA-B1	XXX %	A/F ALPHA-B2	XXX %	HO2S1 MNTR (B1)	LEAN	HO2S1 MNTR (B2)	LEAN	THRTL POS SEN	XXX V	ON	Yes	OFF	No
ACTIVE TEST																							
VC/V BYPASS/V	OFF																						
MONITOR																							
ENG SPEED	XXX rpm																						
A/F ALPHA-B1	XXX %																						
A/F ALPHA-B2	XXX %																						
HO2S1 MNTR (B1)	LEAN																						
HO2S1 MNTR (B2)	LEAN																						
THRTL POS SEN	XXX V																						
ON	Yes																						
OFF	No																						
SEF016Z																							

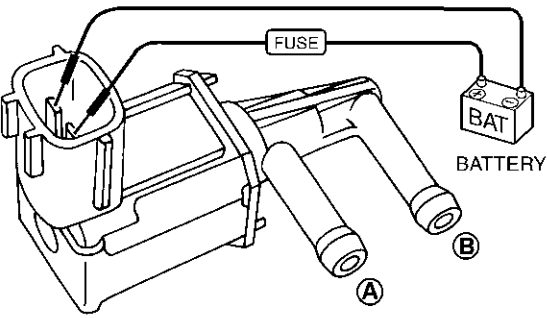
<p>ⓧ Without CONSULT-II</p> <p>Check air passage continuity and operation delay time under the following conditions.</p>							
	<table border="1" style="margin-left: auto; margin-right: auto; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Condition</th> <th style="text-align: center;">Air passage continuity between A and B</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">12V direct current supply between terminals 1 and 2</td> <td style="text-align: center;">Yes</td> </tr> <tr> <td style="text-align: center;">No supply</td> <td style="text-align: center;">No</td> </tr> </tbody> </table> <p style="text-align: center; margin-top: 10px;">Operation takes less than 1 second.</p>	Condition	Air passage continuity between A and B	12V direct current supply between terminals 1 and 2	Yes	No supply	No
Condition	Air passage continuity between A and B						
12V direct current supply between terminals 1 and 2	Yes						
No supply	No						
OK or NG							
OK	▶ GO TO 8.						
NG	▶ Replace vacuum cut valve bypass valve.						
SEF358X							

8	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	
▶	INSPECTION END

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P1491 VACUUM CUT VALVE BYPASS VALVE

Description

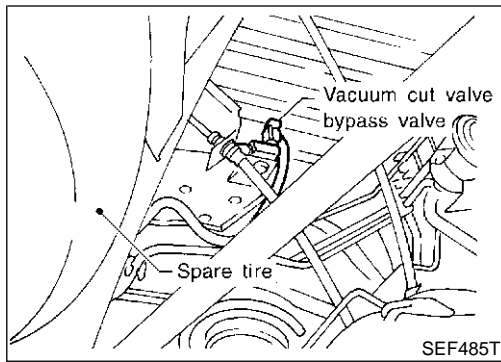

Description

COMPONENT DESCRIPTION

NBEC1123

NBEC1123S01

The vacuum cut valve and vacuum cut valve bypass valve are installed in parallel on the EVAP purge line between the fuel tank and the EVAP canister.


The vacuum cut valve prevents the intake manifold vacuum from being applied to the fuel tank.

The vacuum cut valve bypass valve is a solenoid type valve and generally remains closed. It opens only for on board diagnosis.

The vacuum cut valve bypass valve responds to signals from the ECM. When the ECM sends an ON (ground) signal, the valve is opened. The vacuum cut valve is then bypassed to apply intake manifold vacuum to the fuel tank.

EVAPORATIVE EMISSION SYSTEM DIAGRAM

NBEC1123S02

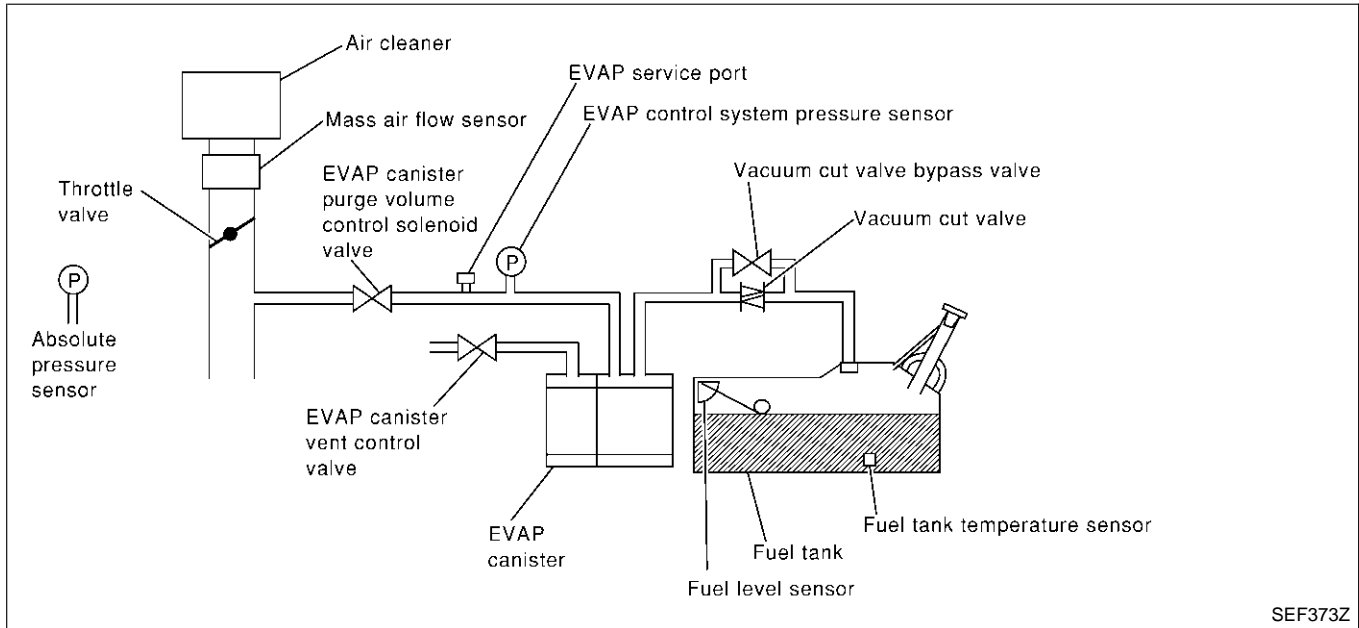

SEF373Z

CONSULT-II Reference Value in Data Monitor Mode

NBEC1124

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
VC/V BYPASS/V	● Ignition switch: ON	OFF

ECM Terminals and Reference Value

NBEC1125

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
39	G/W	Vacuum cut valve bypass valve	[Ignition switch "ON"]	BATTERY VOLTAGE (11 - 14V)

DTC P1491 VACUUM CUT VALVE BYPASS VALVE

On Board Diagnosis Logic

On Board Diagnosis Logic

NBEC1126

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P1491 1491	Vacuum cut valve bypass valve	Vacuum cut valve bypass valve does not operate properly.	<ul style="list-style-type: none"> • Vacuum cut valve bypass valve • Vacuum cut valve • Bypass hoses for clogging • EVAP control system pressure sensor and circuit • EVAP canister vent control valve • Hose between fuel tank and vacuum cut valve clogged • Hose between vacuum cut valve and EVAP canister clogged • EVAP canister • EVAP purge port of fuel tank for clogging

GI

MA

EM

LC

EC

FE

AT

TF

7	VC CUT/V BP/V P1491	
	OUT OF CONDITION	
	MONITOR	
	ENG SPEED	XXX rpm
	VHCL SPEED SE	XXX km/h
	B/FUEL SCHDL	XXX msec

SEF210Y

DTC Confirmation Procedure

NBEC1127

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

For best results, perform test at a temperature of 5 to 30°C (41 to 86°F).

PD

AX

SU

BR

7	VC CUT/V BP/V P1491	
	TESTING	
	MONITOR	
	ENG SPEED	XXX rpm
	VHCL SPEED SE	XXX km/h
	B/FUEL SCHDL	XXX msec

SEF211Y

WITH CONSULT-II

NBEC1127S01

- 1) Turn ignition switch "ON".
- 2) Start engine and warm it up to normal operating temperature.
- 3) Turn ignition switch "OFF" and wait at least 10 seconds.
- 4) Start engine and let it idle for at least 70 seconds.
- 5) Select "VC CUT/V BP/V P1491" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT-II.
- 6) Touch "START".
- 7) When the following conditions are met, "TESTING" will be displayed on the CONSULT-II screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take at least 30 seconds.)

ST

RS

BT

HA

7	VC CUT/V BP/V P1491	
	COMPLETED	

SEF239Y

ENG SPEED	Idle speed or more
Selector lever	Suitable position
Vehicle speed	37 km/h (23 MPH) or more
B/FUEL SCHDL	1.3 - 10 msec

SC

EL

IDX


If "TESTING" is not displayed after 5 minutes, retry from step 3.

- 8) Make sure that "OK" is displayed after touching "SELF-DIAG"

DTC P1491 VACUUM CUT VALVE BYPASS VALVE

DTC Confirmation Procedure (Cont'd)

RESULTS". If "NG" is displayed, refer to "Diagnostic Procedure", EC-654.

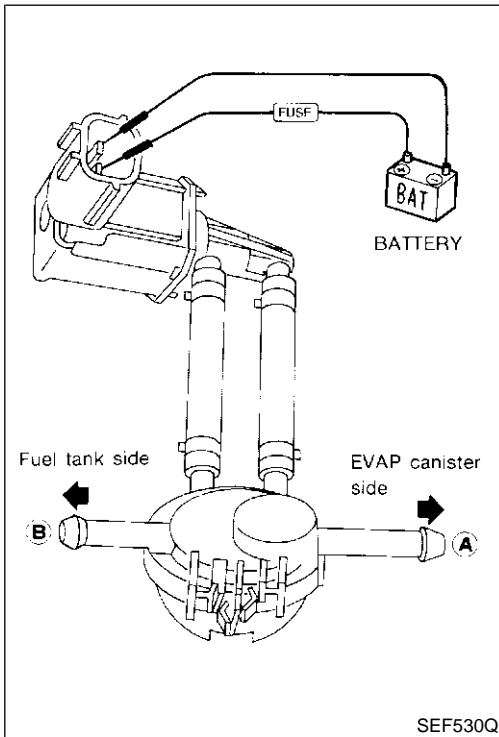

Overall Function Check

Use this procedure to check the overall function of vacuum cut valve bypass valve. During this check, the 1st trip DTC might not be confirmed.

WITH GST

- 1) Remove vacuum cut valve and vacuum cut valve bypass valve as an assembly.
- 2) Apply vacuum to port **A** and check that there is no suction from port **B**.
- 3) Apply vacuum to port **B** and check that there is suction from port **A**.
- 4) Blow air in port **B** and check that there is a resistance to flow out of port **A**.
- 5) Supply battery voltage to the terminal.
- 6) Blow air in port **A** and check that air flows freely out of port **B**.
- 7) Blow air in port **B** and check that air flows freely out of port **A**.
- 8) If NG, go to "Diagnostic Procedure", EC-654.

DTC P1491 VACUUM CUT VALVE BYPASS VALVE

Wiring Diagram

Wiring Diagram

NBEC1129

EC-BYPS/V-01

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS


BT

HA





SC

EL



IDX

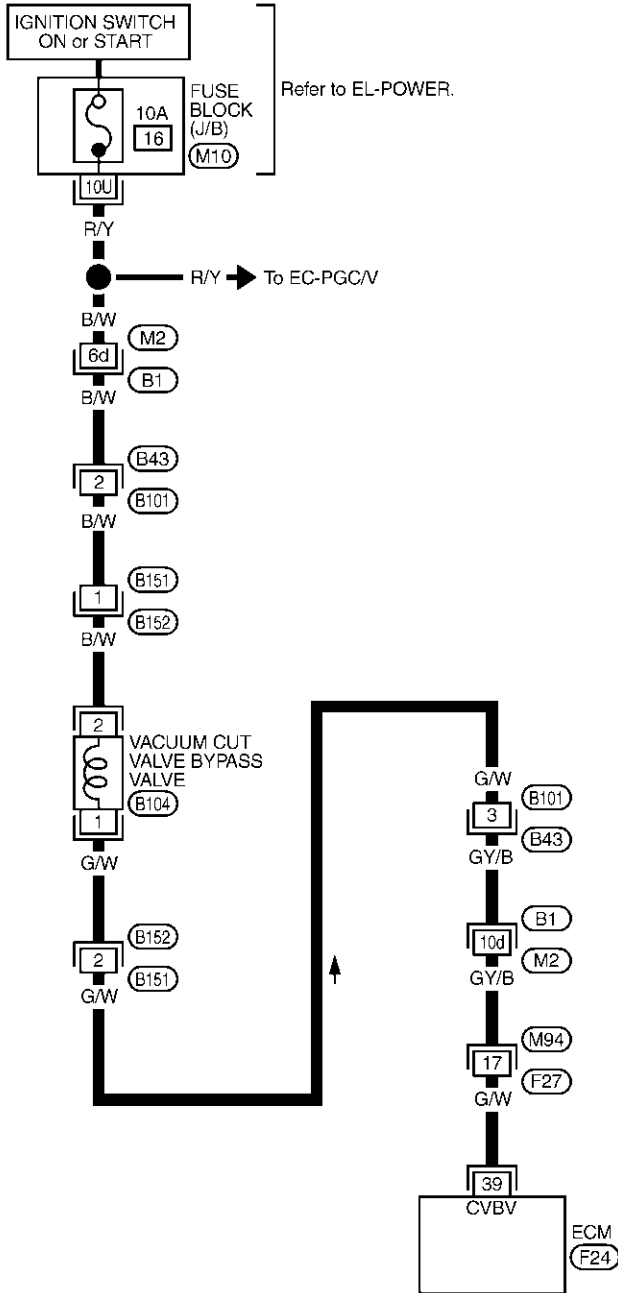

: Detectable line for DTC
 : Non-detectable line for DTC



REFER TO THE FOLLOWING.
 (B1) -SUPER
 MULTIPLE JUNCTION (SMJ)
 (M10) -FUSE BLOCK-JUNCTION BOX (J/B)

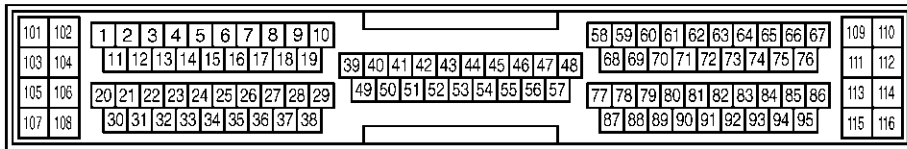

MEC905D


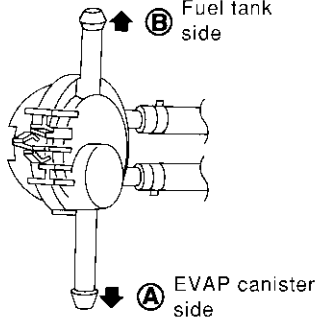
DTC P1491 VACUUM CUT VALVE BYPASS VALVE

Diagnostic Procedure

Diagnostic Procedure

NBEC1130

1	INSPECTION START	
Do you have CONSULT-II?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	GO TO 3.

2	CHECK VACUUM CUT VALVE BYPASS VALVE OPERATION																					
<p> With CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Remove vacuum cut valve and vacuum cut valve bypass valve as an assembly. 3. Apply vacuum to port A and check that there is no suction from port B. 4. Apply vacuum to port B and check that there is suction from port A. 5. Blow air in port B and check that there is a resistance to flow out of port A. 6. Turn ignition switch "ON". 7. Select "VC/V BYPASS/V" in "ACTIVE TEST" mode with CONSULT-II and touch "ON". 8. Blow air in port A and check that air flows freely out of port B. 9. Blow air in port B and check that air flows freely out of port A. 																						
		<table border="1"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> </thead> <tbody> <tr> <td>VC/V BYPASS/V</td> <td>OFF</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>A/F ALPHA-B1</td> <td>XXX %</td> </tr> <tr> <td>A/F ALPHA-B2</td> <td>XXX %</td> </tr> <tr> <td>HO2S1 MNTR (B1)</td> <td>LEAN</td> </tr> <tr> <td>HO2S1 MNTR (B2)</td> <td>LEAN</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXX V</td> </tr> <tr> <td> </td> <td> </td> </tr> </tbody> </table>	ACTIVE TEST		VC/V BYPASS/V	OFF	MONITOR		ENG SPEED	XXX rpm	A/F ALPHA-B1	XXX %	A/F ALPHA-B2	XXX %	HO2S1 MNTR (B1)	LEAN	HO2S1 MNTR (B2)	LEAN	THRTL POS SEN	XXX V		
ACTIVE TEST																						
VC/V BYPASS/V	OFF																					
MONITOR																						
ENG SPEED	XXX rpm																					
A/F ALPHA-B1	XXX %																					
A/F ALPHA-B2	XXX %																					
HO2S1 MNTR (B1)	LEAN																					
HO2S1 MNTR (B2)	LEAN																					
THRTL POS SEN	XXX V																					
OK or NG																						
OK	▶	GO TO 4.																				
NG	▶	GO TO 5.																				

SEF017Z

DTC P1491 VACUUM CUT VALVE BYPASS VALVE

Diagnostic Procedure (Cont'd)

3	CHECK VACUUM CUT VALVE BYPASS VALVE OPERATION
<p>⊗ Without CONSULT-II</p> <ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Remove vacuum cut valve and vacuum cut valve bypass valve as an assembly. 3. Apply vacuum to port A and check that there is no suction from port B. 4. Apply vacuum to port B and check that there is suction from port A. 5. Blow air in port B and check that there is a resistance to flow out of port A. 6. Disconnect vacuum cut valve bypass valve harness connector. 7. Supply battery voltage to the terminal. 8. Blow air in port A and check that air flows freely out of port B. 9. Blow air in port B and check that air flows freely out of port A. 	
SEF914U	
OK or NG	
OK	▶ GO TO 4.
NG	▶ GO TO 7.


4	CHECK EVAP PURGE LINE
Check EVAP purge line between EVAP canister and fuel tank for clogging or disconnection.	
OK or NG	
OK	▶ GO TO 5.
NG	▶ Repair it.

5	CHECK EVAP PURGE PORT
Check EVAP purge port of fuel tank for clogging.	
OK or NG	
OK	▶ GO TO 6.
NG	▶ Clean EVAP purge port.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P1491 VACUUM CUT VALVE BYPASS VALVE

Diagnostic Procedure (Cont'd)

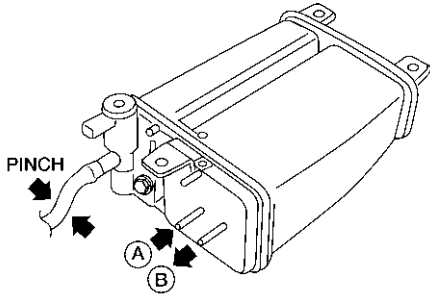6		CHECK EVAP CANISTER
1. Pinch the fresh air hose. 2. Blow air into port A and check that it flows freely out of port B .		
		
AEC630A		
OK or NG		
OK	▶	GO TO 12.
NG	▶	Replace EVAP canister.

7		CHECK BYPASS HOSE
Check bypass hoses for clogging.		
OK or NG		
OK	▶	GO TO 8.
NG	▶	Repair or replace hoses.


DTC P1491 VACUUM CUT VALVE BYPASS VALVE

Diagnostic Procedure (Cont'd)

8 CHECK VACUUM CUT VALVE BYPASS VALVE

Ⓔ With CONSULT-II

1. Perform "VC/V BYPASS/V" in "ACTIVE TEST" mode.
2. Check air passage continuity and operation delay time under the following conditions.

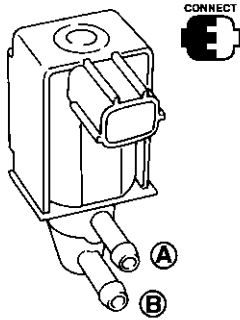

ACTIVE TEST	
VC/V BYPASS/V	OFF
MONITOR	
ENG SPEED	XXX rpm
A/F ALPHA-B1	XXX %
A/F ALPHA-B2	XXX %
HO2S1 MNTR (B1)	LEAN
HO2S1 MNTR (B2)	LEAN
THRTL POS SEN	XXX V


Condition VC/V BYPASS/V	Air passage continuity between A and B
ON	Yes
OFF	No

Operation takes less than 1 second.

SEF016Z

ⓧ Without CONSULT-II

- Check air passage continuity and operation delay time under the following conditions.

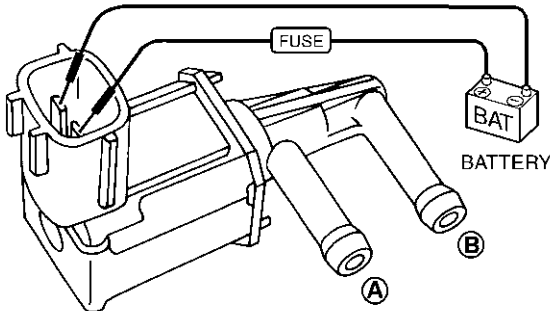

Condition	Air passage continuity between A and B
12V direct current supply between terminals 1 and 2	Yes
No supply	No

Operation takes less than 1 second.

SEF358X

OK or NG

OK	▶	GO TO 9.
NG	▶	Replace vacuum cut valve bypass valve.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DTC P1491 VACUUM CUT VALVE BYPASS VALVE

Diagnostic Procedure (Cont'd)

9	CHECK VACUUM CUT VALVE
<p>Check vacuum cut valve as follows:</p> <div style="text-align: center;"> </div>	
SEF379Q	
<ol style="list-style-type: none"> a. Plug port C and D with fingers. b. Apply vacuum to port A and check that there is no suction from port B. c. Apply vacuum to port B and check that there is suction from port A. d. Blow air in port B and check that there is a resistance to flow out of port A. e. Open port C and D. f. Blow air in port A check that air flows freely out of port C. g. Blow air in port B check that air flows freely out of port D. 	
OK or NG	
OK	▶ GO TO 10.
NG	▶ Replace vacuum cut valve.

10	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR HOSE
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Check disconnection or improper connection of hose connected to EVAP control system pressure sensor. 	
OK or NG	
OK	▶ GO TO 11.
NG	▶ Repair or replace.

11	CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR CONNECTOR
<ol style="list-style-type: none"> 1. Disconnect EVAP control system pressure sensor harness connector. <div style="text-align: center;"> </div>	
SEC931C	
<ol style="list-style-type: none"> 2. Check connectors for water. Water should not exist. 	
OK or NG	
OK	▶ GO TO 12.
NG	▶ Replace EVAP control system pressure sensor.

DTC P1491 VACUUM CUT VALVE BYPASS VALVE

Diagnostic Procedure (Cont'd)

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL


IDX

12 CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

1. Remove EVAP control system pressure sensor with its harness connector connected.

CAUTION:

- Never apply force to the air hole protector of the sensor if equipped.

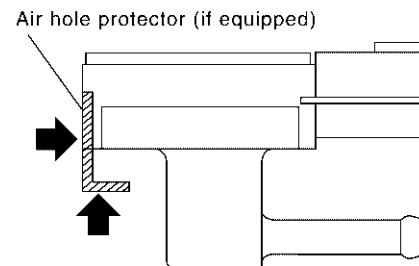

SEF799W

2. Remove hose from EVAP control system pressure sensor.


3. Turn ignition switch "ON".

4. Use pump to apply vacuum and pressure to EVAP control system pressure sensor as shown in figure.

CAUTION:

- Always calibrate the vacuum pump gauge when using it.
- Do not apply below -20 kPa (-150 mmHg, -5.91 inHg) or over 20 kPa (150 mmHg, 5.91 inHg) of pressure.

5. Check input voltage between ECM terminal 84 and ground.

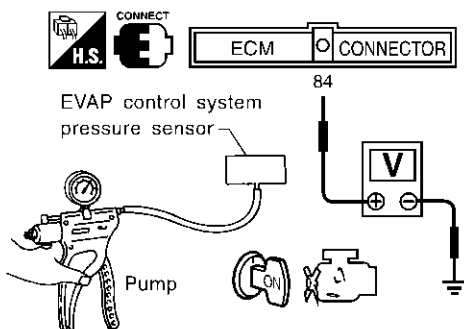

Pressure (Relative to atmospheric pressure)	Voltage V
0 kPa (0 mmHg, 0 inHg)	3.0 - 3.6
-9.3 kPa (-70 mmHg, -2.76 inHg)	0.4 - 0.6

SEF342X

CAUTION:

- Discard and EVAP control system pressure sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

OK or NG

OK ► GO TO 13.

NG ► Replace EVAP control system pressure sensor.

13 CHECK RUBBER TUBE FOR CLOGGING

1. Disconnect rubber tube connected to EVAP canister vent control valve.

2. Check the rubber tube for clogging.


OK or NG

OK ► GO TO 14.


NG ► Clean the rubber tube using an air blower.

DTC P1491 VACUUM CUT VALVE BYPASS VALVE


Diagnostic Procedure (Cont'd)

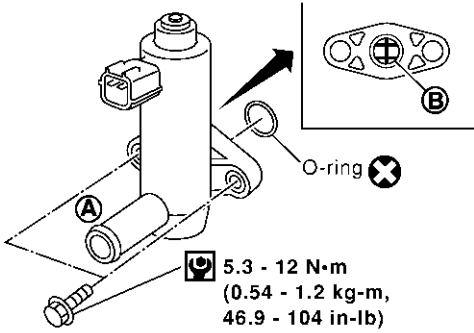14	CHECK EVAP CANISTER VENT CONTROL VALVE-I
<ol style="list-style-type: none"> 1. Remove EVAP canister vent control valve from EVAP canister. 2. Check portion B of EVAP canister vent control valve for being rusted. 	
 <p style="text-align: center;">5.3 - 12 N·m (0.54 - 1.2 kg-m, 46.9 - 104 in-lb)</p>	
OK or NG	
OK	▶ GO TO 15.
NG	▶ Replace EVAP canister vent control valve.

SEF376Z

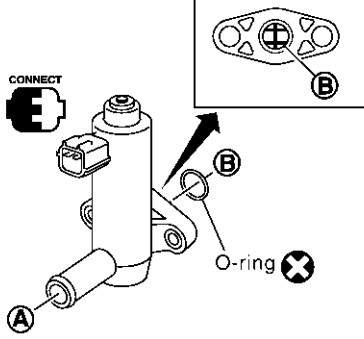15	CHECK EVAP CANISTER VENT CONTROL VALVE-II																								
<p>E With CONSULT-II</p> <ol style="list-style-type: none"> 1. Reconnect harness disconnected connectors. 2. Turn ignition switch ON. 3. Perform "VENT CONTROL/V" in "ACTIVE TEST" mode. 4. Check air passage continuity and operation delay time. 																									
 <p style="text-align: center;">5.3 - 12 N·m (0.54 - 1.2 kg-m, 46.9 - 104 in-lb)</p>																									
<table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <td>VENT CONTROL/V</td> <td>OFF</td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>A/F ALPHA-B1</td> <td>XXX %</td> </tr> <tr> <td>A/F ALPHA-B2</td> <td>XXX %</td> </tr> <tr> <td>HO2S1 MNTR (B1)</td> <td>LEAN</td> </tr> <tr> <td>HO2S1 MNTR (B2)</td> <td>LEAN</td> </tr> <tr> <td>THRTL POS SEN</td> <td>XXX V</td> </tr> </table>	ACTIVE TEST		VENT CONTROL/V	OFF	MONITOR		ENG SPEED	XXX rpm	A/F ALPHA-B1	XXX %	A/F ALPHA-B2	XXX %	HO2S1 MNTR (B1)	LEAN	HO2S1 MNTR (B2)	LEAN	THRTL POS SEN	XXX V	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th>Condition</th> <th>Air passage continuity between A and B</th> </tr> <tr> <td>VENT CONTROL/V ON</td> <td>No</td> </tr> <tr> <td>VENT CONTROL/V OFF</td> <td>Yes</td> </tr> </table> <p>Operation takes less than 1 second.</p>	Condition	Air passage continuity between A and B	VENT CONTROL/V ON	No	VENT CONTROL/V OFF	Yes
ACTIVE TEST																									
VENT CONTROL/V	OFF																								
MONITOR																									
ENG SPEED	XXX rpm																								
A/F ALPHA-B1	XXX %																								
A/F ALPHA-B2	XXX %																								
HO2S1 MNTR (B1)	LEAN																								
HO2S1 MNTR (B2)	LEAN																								
THRTL POS SEN	XXX V																								
Condition	Air passage continuity between A and B																								
VENT CONTROL/V ON	No																								
VENT CONTROL/V OFF	Yes																								
OK or NG																									
OK	▶ GO TO 15.																								
NG	▶ Replace EVAP canister vent control valve.																								

SEF377Z
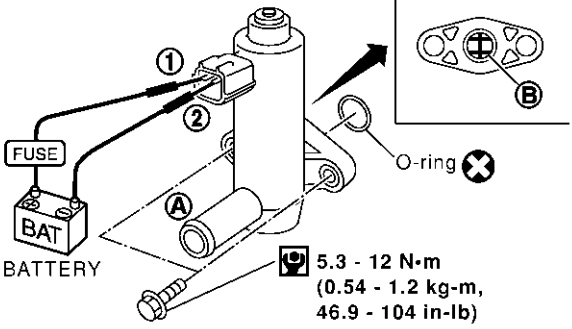
<p>X Without CONSULT-II</p> <p>Check air passage continuity and operation delay time under the following conditions.</p>							
 <p style="text-align: center;">5.3 - 12 N·m (0.54 - 1.2 kg-m, 46.9 - 104 in-lb)</p>							
	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th>Condition</th> <th>Air passage continuity between A and B</th> </tr> <tr> <td>12V direct current supply between terminals 1 and 2</td> <td>No</td> </tr> <tr> <td>OFF</td> <td>Yes</td> </tr> </table> <p>Operation takes less than 1 second.</p>	Condition	Air passage continuity between A and B	12V direct current supply between terminals 1 and 2	No	OFF	Yes
Condition	Air passage continuity between A and B						
12V direct current supply between terminals 1 and 2	No						
OFF	Yes						
OK or NG							
<p>Make sure new O-ring is installed properly.</p>							
OK	▶ GO TO 17.						
NG	▶ GO TO 16.						

SEF378Z

DTC P1491 VACUUM CUT VALVE BYPASS VALVE

Diagnostic Procedure (Cont'd)

16	CHECK EVAP CANISTER VENT CONTROL VALVE-III
1. Clean the air passage (Portion A to B) of EVAP canister vent control valve using an air blower. 2. Perform the Test No. 15 again.	
OK or NG	
OK	▶ GO TO 17.
NG	▶ Replace EVAP canister vent control valve.

17	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	
	▶ INSPECTION END

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

DTC P1605 A/T DIAGNOSIS COMMUNICATION LINE

Component Description


Component Description

The malfunction information related to A/T (Automatic Transmission) is transferred through the line (circuit) from TCM (Transmission control module) to ECM. Therefore, be sure to erase the malfunction information such as DTC not only in TCM (Transmission control module) but also ECM after the A/T related repair. NBEC1131

On Board Diagnosis Logic

NBEC1132

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P1605 1605	A/T diagnosis communication line	An incorrect signal from TCM (Transmission control module) is sent to ECM.	<ul style="list-style-type: none"> ● Harness or connectors [The communication line circuit between ECM and TCM (Transmission control module) is open or shorted.] ● Dead (Weak) battery ● TCM (Transmission control module)

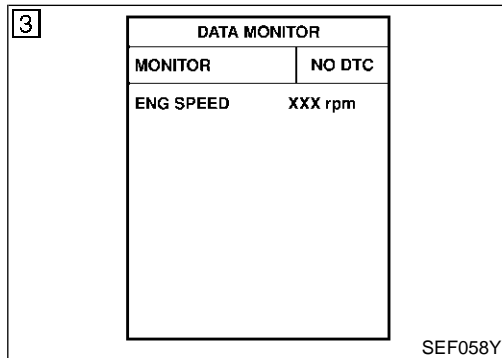

DTC Confirmation Procedure

NBEC1133

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10.5V at idle.

Ⓔ WITH CONSULT-II

NBEC1133S01

- 1) Turn ignition switch "ON".
- 2) Select "DATA MONITOR" mode with CONSULT-II.
- 3) Start engine and wait at least 40 seconds.
- 4) If 1st trip DTC is detected, go to "DTC P0600 A/T COMMUNICATION LINE Diagnostic Procedure", EC-477.


Ⓔ WITH GST

NBEC1133S02

Follow the procedure "WITH CONSULT-II" above.

DTC P1706 PNP SWITCH

Component Description

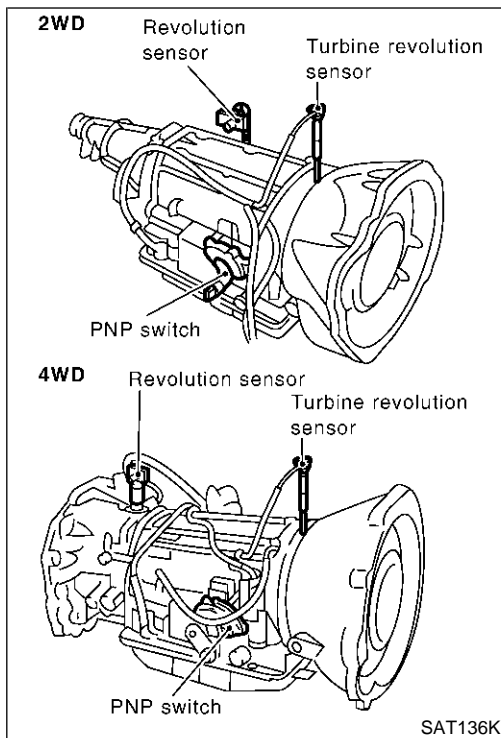

Component Description

When the gear position is "P" or "N", park/neutral position (PNP) switch is "ON".

ECM detects the position because the continuity of the line (the "ON" signal) exists.

The park/neutral position (PNP) switch assembly also includes a transmission range switch to detect selector lever position.

NBEC1134

GI

MA

EM

LC

EC

FE

AT

TF

CONSULT-II Reference Value in Data Monitor Mode

NBEC1135

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
P/N POSI SW	● Ignition switch: ON	Shift lever: "P" or "N" ON
		Except above OFF

AX

SU

ECM Terminals and Reference Value

NBEC1136

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
44	L	PNP switch	[Ignition switch "ON"] ● Gear position is "P" or "N".	Approximately 0V
			[Ignition switch "ON"] ● Except the above gear position	BATTERY VOLTAGE (11 - 14V)

BR

ST

RS

BT

HA

On Board Diagnosis Logic

NBEC1137

DTC No.	Trouble diagnosis name	DTC Detecting Condition	Possible Cause
P1706 1706	Park/Neutral position switch	The signal of the park/neutral position (PNP) switch is not changed in the process of engine starting and driving.	<ul style="list-style-type: none"> Harness or connectors [The park/neutral position (PNP) switch circuit is open or shorted.] Park/neutral position (PNP) switch

SC

EL

IDX

DTC P1706 PNP SWITCH

DTC Confirmation Procedure


NBEC1138

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch "OFF" and wait at least 10 seconds before conducting the next test.

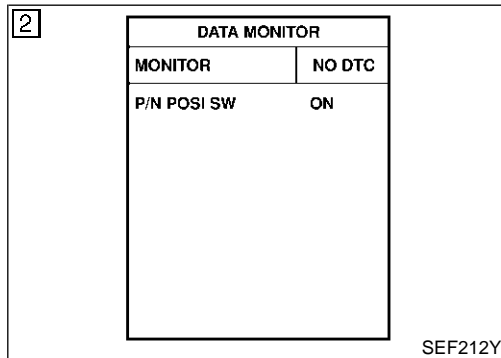

WITH CONSULT-II


NBEC1138S01

- 1) Turn ignition switch "ON".
- 2) Select "P/N POSI SW" in "DATA MONITOR" mode with CONSULT-II. Then check the "P/N POSI SW" signal under the following conditions.

Position (Selector lever)	Known-good signal
"N" and "P" position	ON
Except the above position	OFF

If NG, go to "Diagnostic Procedure", EC-667.


If OK, go to following step.

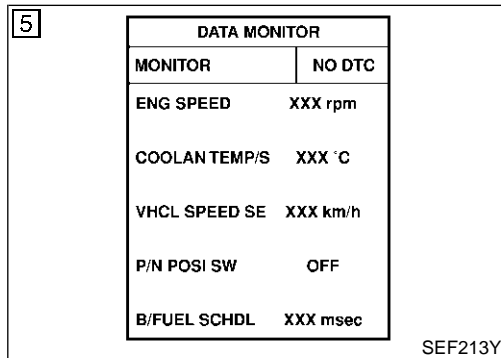

- 3) Select "DATA MONITOR" mode with CONSULT-II.
- 4) Start engine and warm it up to normal operating temperature.
- 5) Maintain the following conditions for at least 60 consecutive seconds.

ENG SPEED	1,500 - 2,500 rpm
COOLAN TEMP/S	More than 70°C (158°F)
B/FUEL SCHDL	3.6 - 12 msec
VHCL SPEED SE	More than 70 km/h (43 MPH)
Selector lever	Suitable position

- 6) If 1st trip DTC is detected, go to "Diagnostic Procedure", EC-667.

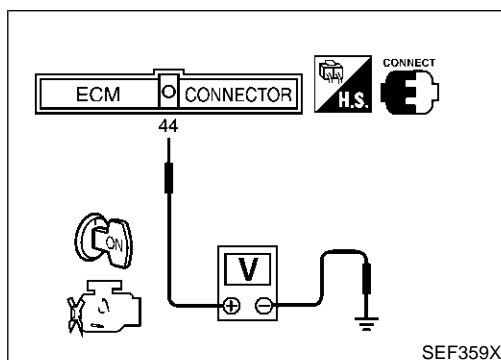

Overall Function Check

NBEC1139

Use this procedure to check the overall function of the park/neutral position (PNP) switch circuit. During this check, a 1st trip DTC might not be confirmed.

WITH GST

NBEC1139S01

- 1) Turn ignition switch "ON".
- 2) Check voltage between ECM terminal 44 and body ground under the following conditions.

Condition (Gear position)	Voltage V (Known-good data)
---------------------------	-----------------------------

DTC P1706 PNP SWITCH

Overall Function Check (Cont'd)

"P" and "N" position	Approx. 0	
Except the above position	Battery voltage	GI

3) If NG, go to "Diagnostic Procedure", EC-667.

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX


DTC P1706 PNP SWITCH

Wiring Diagram





Wiring Diagram

NBEC1140

EC-PNP/SW-01

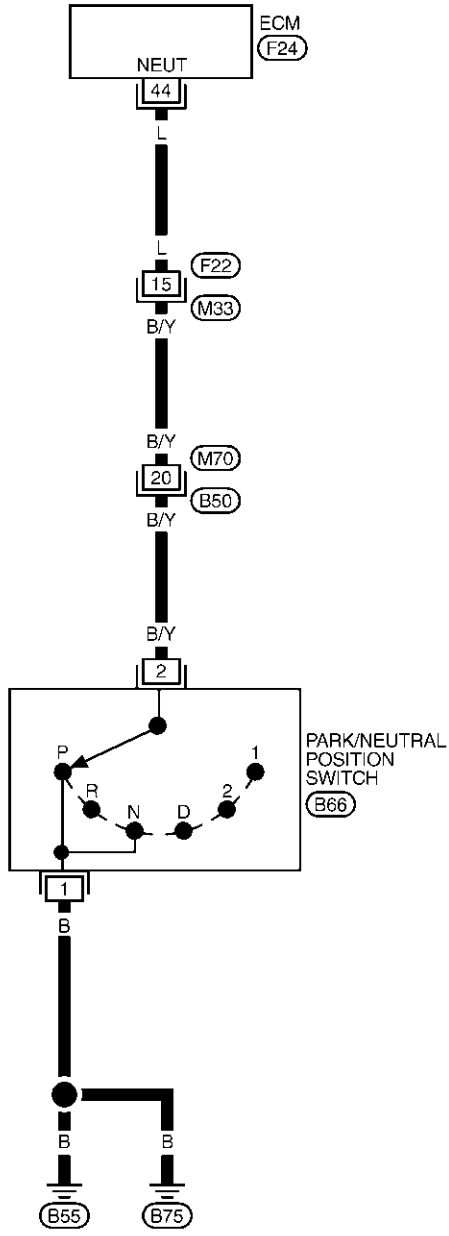


: Detectable line for DTC
 : Non-detectable line for DTC

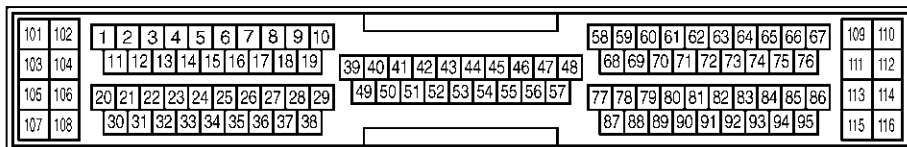

MEC973C

Diagnostic Procedure

NBEC1141

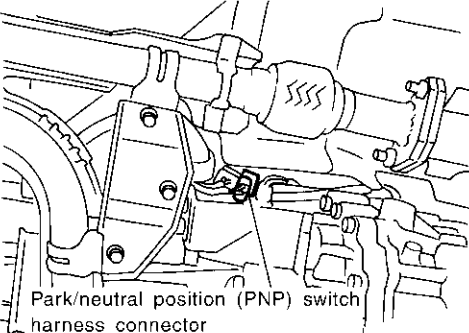1	CHECK PNP SWITCH GROUND CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch "OFF". 2. Disconnect park/neutral position (PNP) switch harness connector.</p> <div style="text-align: center;">  <p>Park/neutral position (PNP) switch harness connector</p> </div> <p style="text-align: right;">SEF011SA</p> <p>3. Check harness continuity between PNP switch terminal 1 and engine ground. Refer to Wiring Diagram. Continuity should exist.</p> <p>4. Also check harness for short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK		▶ GO TO 3.
NG		▶ GO TO 2.

2	DETECT MALFUNCTIONING PART	
Check harness for open between park/neutral position (PNP) switch and engine ground.		
		▶ Repair open circuit or short to power in harness or connectors.

3	CHECK PNP SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
<p>1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 44 and PNP switch terminal 2. Refer to Wiring Diagram. Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK		▶ GO TO 5.
NG		▶ GO TO 4.

4	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors F22, M33 ● Harness connectors M70, B50 ● Harness for open or short between ECM and park/neutral position (PNP) switch 		
		▶ Repair open circuit or short to ground or short to power in harness or connectors.

5	CHECK PARK/NEUTRAL POSITION (PNP) SWITCH	
Refer to AT-103, "Diagnostic Procedure".		
OK or NG		
OK		▶ GO TO 6.
NG		▶ Replace park/neutral position (PNP) switch.

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

DTC P1706 PNP SWITCH

Diagnostic Procedure (Cont'd)

6	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	
▶	INSPECTION END

VARIABLE INDUCTION AIR CONTROL SYSTEM (VIAS)

Description


Description SYSTEM DESCRIPTION

NBEC0596

NBEC0596S01

Sensor	Input Signal to ECM	ECM function	Actuator
Mass air flow sensor	Amount of intake air	VIAS control	VIAS control solenoid valve
Throttle position sensor	Throttle position		
Closed throttle position	Throttle valve idle position		
Ignition switch	Start signal		
Crankshaft position sensor (POS)	Engine speed (POS signal)		
Crankshaft position sensor (REF)	Engine speed (REF signal)		
Engine coolant temperature sensor	Engine coolant temperature		

GI
MA
EM
LC
EC

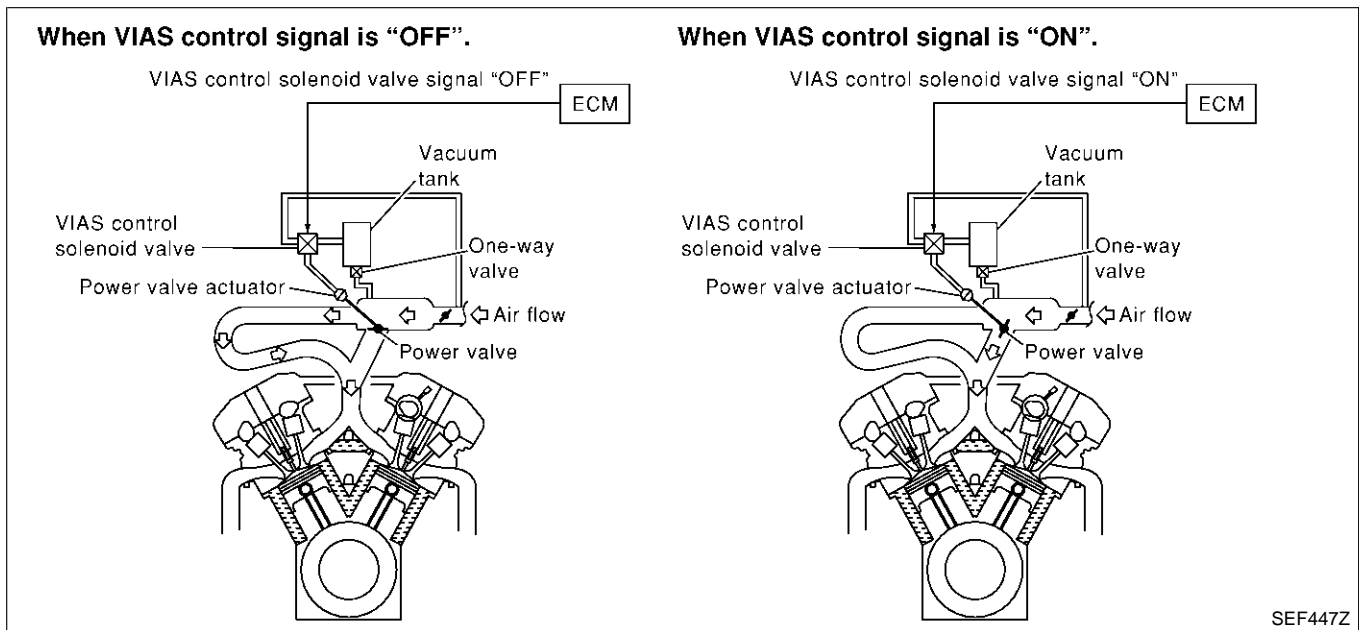

FE
AT
TF
PD
AX
SU
BR
ST

When the engine is running at low or medium speed, the power valve is fully closed. Under this condition, the effective suction port length is equivalent to the total length of the intake manifold collector's suction port including the intake valve. This long suction port provides increased air intake which results in improved suction efficiency and higher torque generation.


The surge tank and one-way valve are provided. When engine is running at high speed, the ECM sends the signal to the VIAS control solenoid valve. This signal introduces the intake manifold vacuum into the power valve actuator and therefore opens the power valve to two suction passages together in the collector.

Under this condition, the effective port length is equivalent to the length of the suction port provided independently for each cylinder. This shortened port length results in enhanced engine output with reduced suction resistance under high speeds.

RS
BT
HA
SC
EL
IDX

VARIABLE INDUCTION AIR CONTROL SYSTEM (VIAS)

Description (Cont'd)

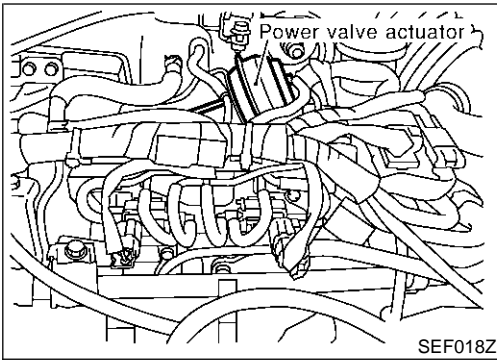


COMPONENT DESCRIPTION

NBEC0596S02

Power Valve

NBEC0596S0201

The power valve is installed in intake manifold collector and used to control the suction passage of the variable induction air control system. It is set in the fully closed or fully opened position by the power valve actuator operated by the vacuum stored in the surge tank. The vacuum in the surge tank is controlled by the VIAS control solenoid valve.

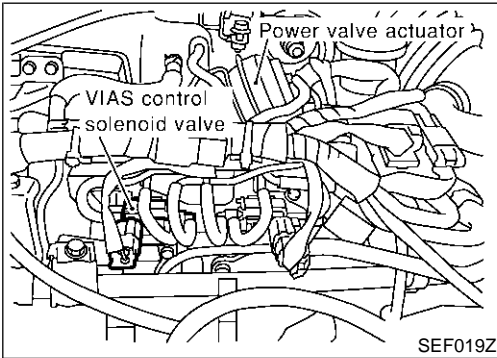

VIAS Control Solenoid Valve

NBEC0596S0202

The VIAS control solenoid valve cuts the intake manifold vacuum signal for power valve control. It responds to ON/OFF signals from the ECM. When the solenoid is off, the vacuum signal from the intake manifold is cut. When the ECM sends an ON signal the coil pulls the plunger downward and feeds the vacuum signal to the power valve actuator.

ECM Terminals and Reference Value

NBEC0684

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
16	Y/G	VIAS control solenoid valve	[Engine is running] ● Idle speed	BATTERY VOLTAGE (11 - 14V)
			[Engine is running] ● Engine speed is above 5,000 rpm.	0 - 1.0V

VARIABLE INDUCTION AIR CONTROL SYSTEM (VIAS)

Wiring Diagram

Wiring Diagram

NBEC0597

EC-VIAS/V-01

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT



HA

SC

EL


IDX

— : Detectable line for DTC
 — : Non-detectable line for DTC

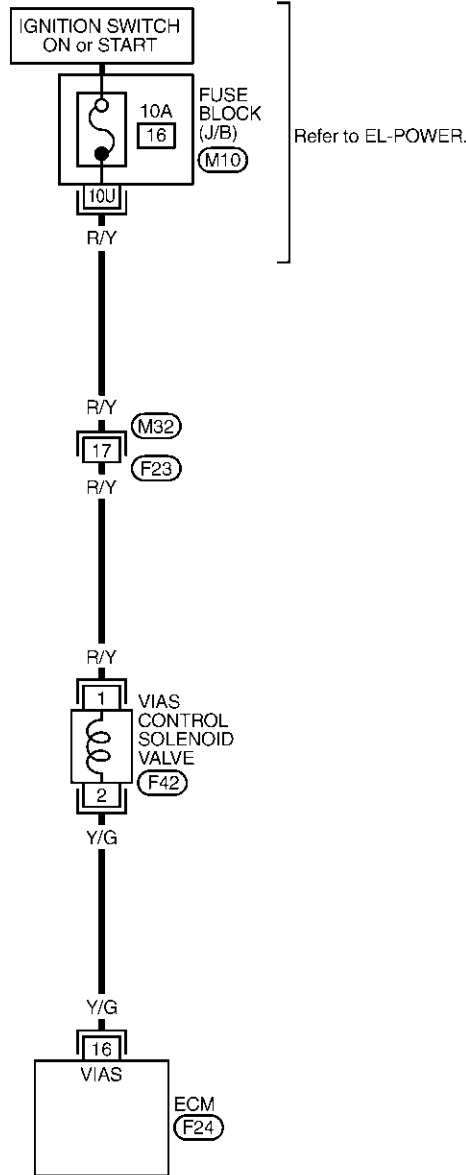

REFER TO THE FOLLOWING.

M10 - FUSE BLOCK -
 JUNCTION BOX (J/B)

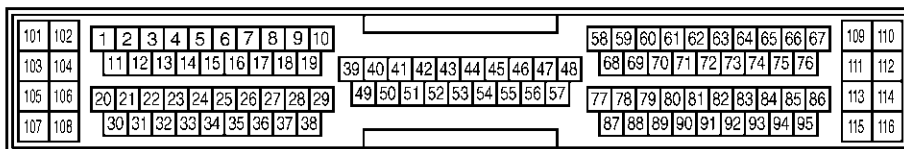

MEC990C

VARIABLE INDUCTION AIR CONTROL SYSTEM (VIAS)

Diagnostic Procedure

Diagnostic Procedure


NBEC0598

1 CHECK OVERALL FUNCTION

With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Perform "VIAS SOL VALVE" in "ACTIVE TEST" mode with CONSULT-II.
3. Turn VIAS control solenoid valve "ON" and "OFF", and make sure that power valve actuator rod moves.


ACTIVE TEST	
VIAS SOL VALVE	OFF
MONITOR	
ENG SPEED	XXX rpm
IACV-AAC/V	XXX step

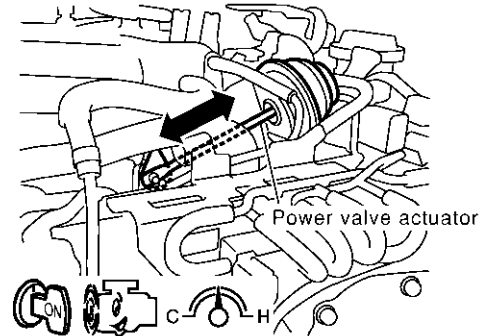

SEC304C

Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Rev engine quickly up to above 5,000 rpm and make sure that power valve actuator rod moves.

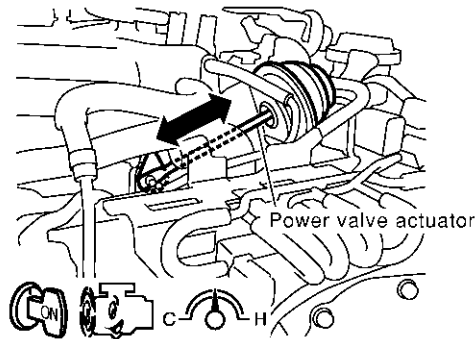

SEF021Z

OK or NG

OK	▶	INSPECTION END
NG	▶	GO TO 2.

VARIABLE INDUCTION AIR CONTROL SYSTEM (VIAS)


Diagnostic Procedure (Cont'd)

2 CHECK VACUUM EXISTENCE

Ⓔ With CONSULT-II

1. Stop engine and disconnect vacuum hose connected to power valve actuator.
2. Start engine and let it idle.
3. Perform "VIAS SOL VALVE" in "ACTIVE TEST" mode with CONSULT-II.
4. Turn VIAS control solenoid valve "ON" and "OFF", and check for the existence of vacuum under the following conditions.

ACTIVE TEST	
VIAS SOL VALVE	OFF
MONITOR	
ENG SPEED	XXX rpm

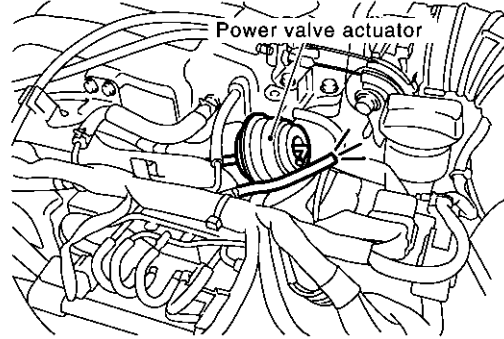



SEC175D

VIAS SOL VALVE	Vacuum
ON	Should exist.
OFF	Should not exist.

MTBL1174

ⓧ Without CONSULT-II

1. Stop engine and disconnect vacuum hose connected to power valve actuator.
2. Disconnect VIAS control solenoid valve harness connector.
3. Start engine and let it idle.
4. Apply 12V of direct current between VIAS control solenoid valve terminals 1 and 2.
5. Check for the existence of vacuum under the following conditions.

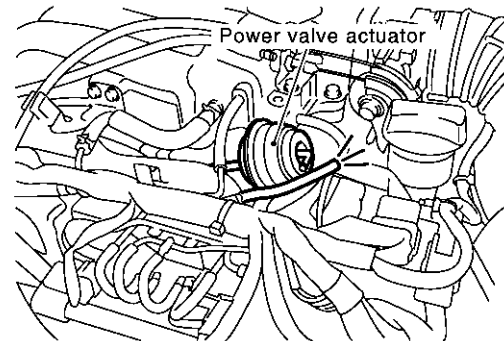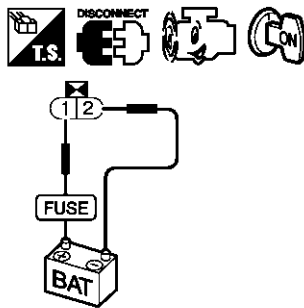

SEC176D

Condition	Vacuum
12V direct current supply	Should exist.
No supply	Should not exist.

MTBL1175

OK or NG

OK	▶	Repair or replace power valve actuator.
NG	▶	GO TO 3.

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA


SC


EL

IDX

VARIABLE INDUCTION AIR CONTROL SYSTEM (VIAS)




Diagnostic Procedure (Cont'd)

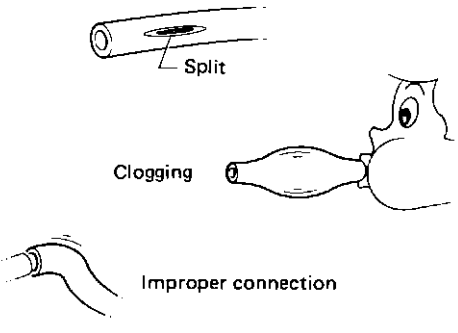3		CHECK VACUUM HOSE
<p>1. Stop engine. 2. Check hoses and tubes between intake manifold and power valve actuator for crack, clogging, disconnection or improper connection.</p>		
 <p>The diagrams show three types of vacuum hose problems: 1. A hose with a hole labeled 'Split'. 2. A hose being squeezed shut, labeled 'Clogging'. 3. A hose not fully seated on a fitting, labeled 'Improper connection'.</p>		
SEF109L		
OK or NG		
OK	▶	GO TO 4.
NG	▶	Replace vacuum hose.

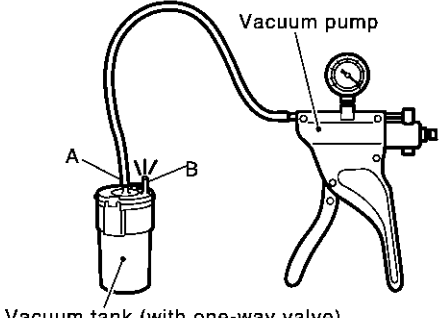4		CHECK VACUUM TANK
<p>1. Disconnect vacuum hose connected to vacuum tank. 2. Connect a vacuum pump to port A of vacuum tank. 3. Apply vacuum and make sure that vacuum exists at the port B.</p>		
 <p>The diagram shows a vacuum pump with a gauge and a handle. A hose connects the pump to a cylindrical vacuum tank. The tank has two ports, A and B. Port A is connected to the pump. The tank is labeled 'Vacuum tank (with one-way valve)'.</p>		
PBIB0846E		
OK or NG		
OK	▶	GO TO 5.
NG	▶	Replace vacuum tank.

VARIABLE INDUCTION AIR CONTROL SYSTEM (VIAS)

Diagnostic Procedure (Cont'd)

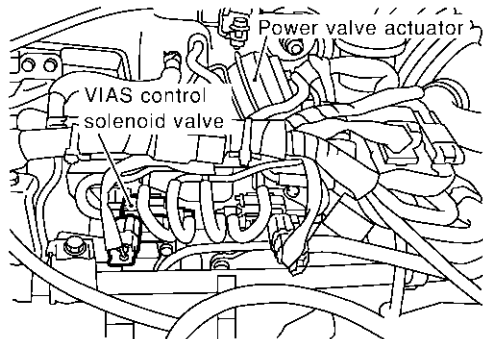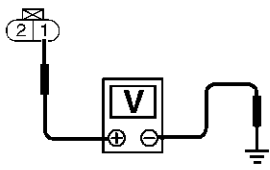5	CHECK VIAS CONTROL SOLENOID VALVE POWER SUPPLY CIRCUIT	
<p>1. Stop engine. 2. Disconnect VIAS control solenoid valve harness connector.</p> <div style="text-align: center;">  <p>Power valve actuator VIAS control solenoid valve</p> </div> <p>3. Turn ignition switch "ON". 4. Check voltage between terminal 1 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p>Voltage: Battery voltage</p>  </div> <p style="text-align: right;">SEF019Z</p> <p style="text-align: right;">SEF603X</p>		
OK or NG		
OK	▶	GO TO 7.
NG	▶	GO TO 6.

6	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M32, F23 ● Fuse block (J/B) connector M10 ● 10A fuse ● Harness continuity between fuse and VIAS control solenoid valve 		
▶		Repair harness or connectors.

7	CHECK VIAS CONTROL SOLENOID VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between ECM terminal 16 and terminal 2. Refer to Wiring Diagram. Continuity should exist. 4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 8.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


VARIABLE INDUCTION AIR CONTROL SYSTEM (VIAS)

Diagnostic Procedure (Cont'd)

8 CHECK VIAS CONTROL SOLENOID VALVE

Ⓔ With CONSULT-II

1. Reconnect disconnected harness connector.
2. Turn ignition switch ON.
3. Perform "VIAS SOL VALVE" in "ACTIVE TEST" mode.
4. Check air passage continuity and operation delay time under the following conditions.

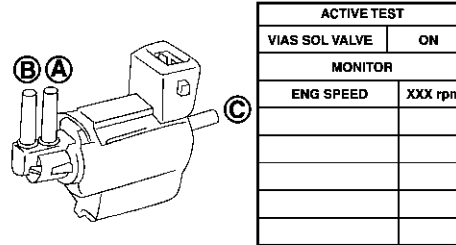


PBIB0177E

Condition VIAS SOL VALVE	Air passage continuity between A and B	Air passage continuity between A and C
ON	Yes	No
OFF	No	Yes

MTBL1171

ⓧ Without CONSULT-II

Check air passage continuity and operation delay time under the following conditions.

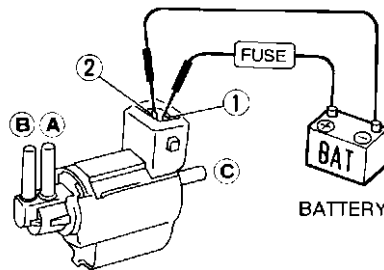

MEC488B

Condition VIAS SOL VALVE	Air passage continuity between A and B	Air passage continuity between A and C
12V direct current supply between terminals 1 and 2	Yes	No
No supply	No	Yes

MTBL1172

OK or NG

OK	▶	GO TO 9.
NG	▶	Replace VIAS control solenoid valve.

9 CHECK INTERMITTENT INCIDENT

Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.

▶	INSPECTION END
---	----------------


Component Description

NBEC0817

NBEC0817S01

IGNITION COIL & POWER TRANSISTOR

The ignition signal from the ECM is sent to and amplified by the power transistor. The power transistor turns on and off the ignition coil primary circuit. This on-off operation induces the proper high voltage in the coil secondary circuit.

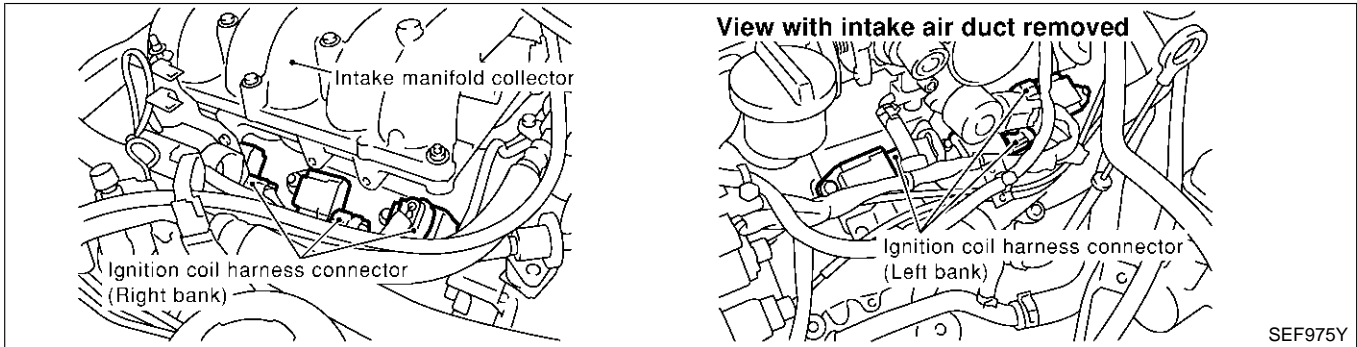



ECM Terminals and Reference Value

NBEC0818

Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

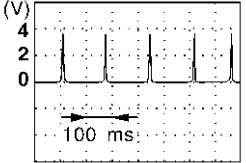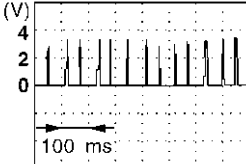TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
21	Y/R	Ignition signal No. 1	<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Idle speed 	<p>0 - 0.2V★</p>  <p style="text-align: right;">SEF399T</p>
22	G/R	Ignition signal No. 2		
23	L/R	Ignition signal No. 3		
30	GY	Ignition signal No. 4		
31	PU/W	Ignition signal No. 5		
32	GY/R	Ignition signal No. 6		
			<p>[Engine is running]</p> <ul style="list-style-type: none"> ● Warm-up condition ● Engine speed is 2,500 rpm. 	<p>0.1 - 0.3V★</p>  <p style="text-align: right;">SEF645T</p>

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

IGNITION SIGNAL


Wiring Diagram

Wiring Diagram

NBEC0819

EC-IGN/SG-01

— : Detectable line for DTC
— : Non-detectable line for DTC

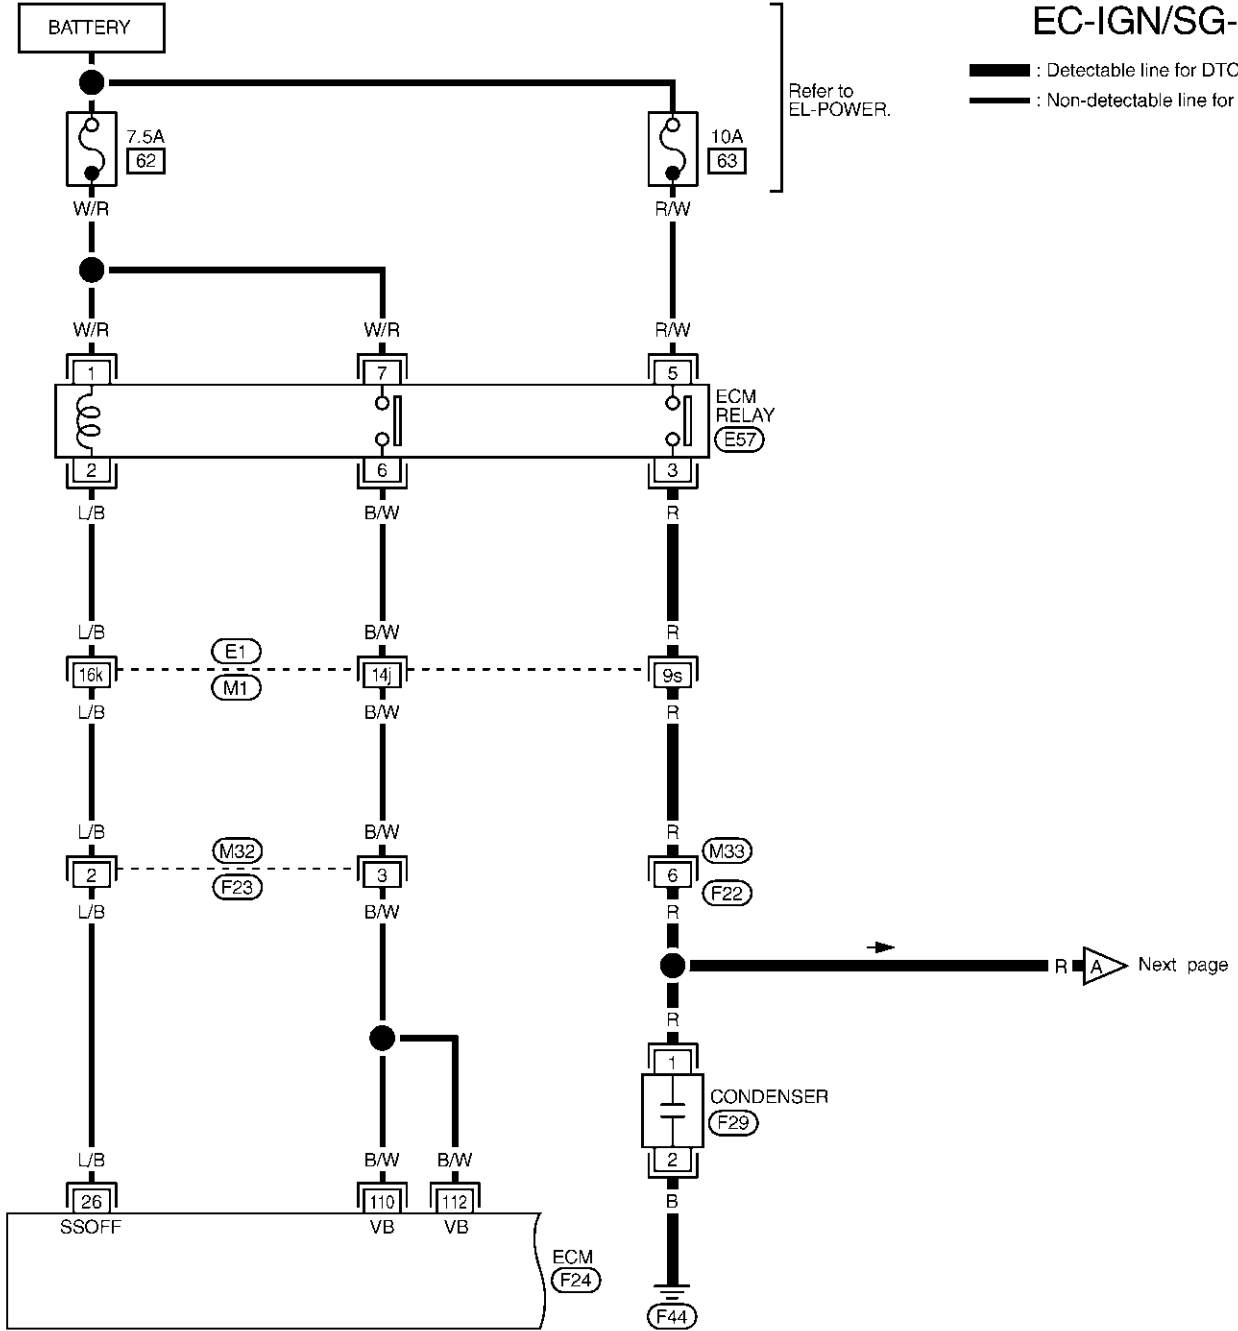

1	2	3	4	5	6	7	8	9	10	11		
12	13	14	15	16	17	18	19	20	21	22	23	24

(M32) BR

1	2	3	4	5	6	7		
8	9	10	11	12	13	14	15	16

(M33) GY

1	2
5	7
3	6

(E57) BR

1
2

(F29) W

101	102	1	2	3	4	5	6	7	8	9	10	58	59	60	61	62	63	64	65	66	67	109	110										
103	104	11	12	13	14	15	16	17	18	19	39	40	41	42	43	44	45	46	47	48	68	69	70	71	72	73	74	75	76	111	112		
105	106	20	21	22	23	24	25	26	27	28	29	49	50	51	52	53	54	55	56	57	77	78	79	80	81	82	83	84	85	86	113	114	
107	108	30	31	32	33	34	35	36	37	38																						115	116

REFER TO THE FOLLOWING.

(E1) -SUPER
 MULTIPLE JUNCTION (SMJ)




IGNITION SIGNAL

Wiring Diagram (Cont'd)

EC-IGN/SG-02

— : Detectable line for DTC
— : Non-detectable line for DTC

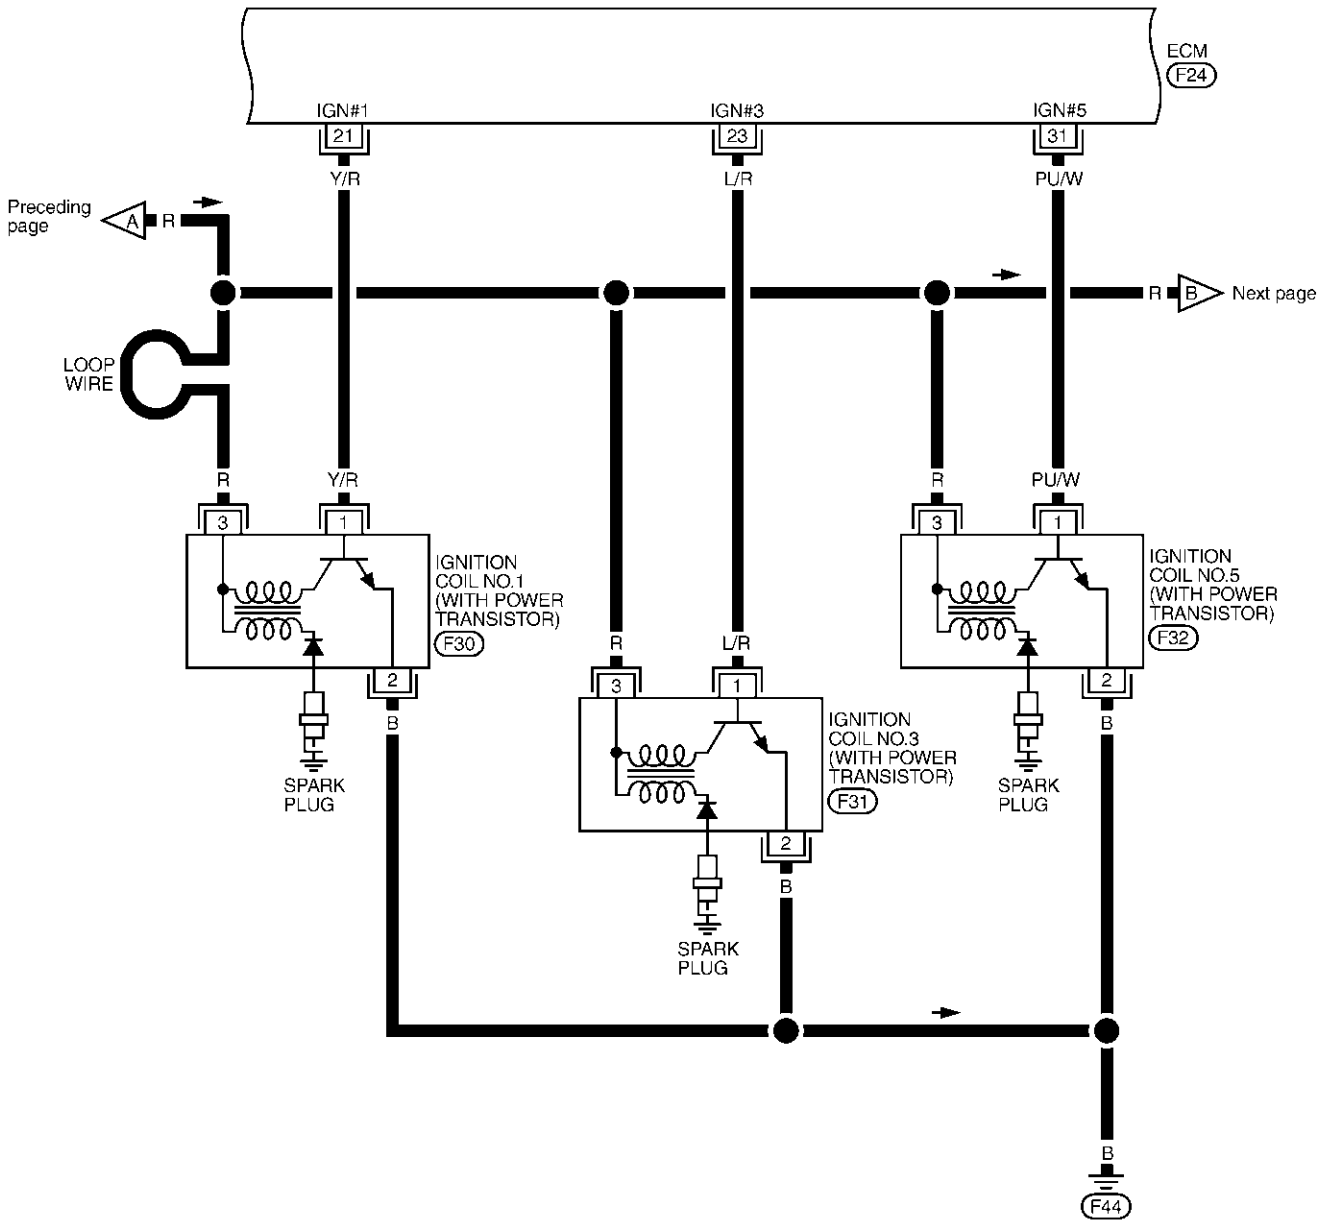

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

3 2 1 (F30), (F31), (F32)
 GY GY GY

101	102	1	2	3	4	5	6	7	8	9	10	58	59	60	61	62	63	64	65	66	67	109	110									
103	104	11	12	13	14	15	16	17	18	19	39	40	41	42	43	44	45	46	47	48	68	69	70	71	72	73	74	75	76	111	112	
105	106	20	21	22	23	24	25	26	27	28	29	49	50	51	52	53	54	55	56	57	77	78	79	80	81	82	83	84	85	86	113	114
107	108	30	31	32	33	34	35	36	37	38		87	88	89	90	91	92	93	94	95										115	116	



MEC970C

IGNITION SIGNAL

Diagnostic Procedure

Diagnostic Procedure

NBEC0820

1	CHECK ENGINE START	
Turn ignition switch "OFF", and restart engine. Is engine running?		
Yes or No		
Yes (With CONSULT-II) ▶	GO TO 2.	
Yes (Without CONSULT-II) ▶	GO TO 12.	
No ▶	GO TO 3.	

GI
MA
EM
LC

2	SEARCH FOR MALFUNCTIONING CIRCUIT																	
<p>E With CONSULT-II</p> <p>1. Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT-II. 2. Search for circuit which does not produce a momentary engine speed drop.</p>																		
<table border="1"> <thead> <tr> <th colspan="2">ACTIVE TEST</th> </tr> </thead> <tbody> <tr> <td>POWER BALANCE</td> <td></td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>MAS A/F SE-B1</td> <td>XXX V</td> </tr> <tr> <td>IACV-AAC/V</td> <td>XXX step</td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> </tbody> </table>			ACTIVE TEST		POWER BALANCE		MONITOR		ENG SPEED	XXX rpm	MAS A/F SE-B1	XXX V	IACV-AAC/V	XXX step				
ACTIVE TEST																		
POWER BALANCE																		
MONITOR																		
ENG SPEED	XXX rpm																	
MAS A/F SE-B1	XXX V																	
IACV-AAC/V	XXX step																	
SEF190Y																		
▶		GO TO 12.																



EC
FE
AT
TF
PD
AX
SU


3	CHECK IGNITION COIL POWER SUPPLY CIRCUIT-I	
<p>1. Turn ignition switch ON. 2. Check voltage between ECM terminals 110, 112 and ground with CONSULT-II or tester.</p>		
<p>The diagram illustrates the testing procedure. At the top, there are icons for CONSULT-II, H.S. (High Speed), and ON. Below these, a box labeled 'ECM' and 'CONNECTOR' has terminals '110, 112' indicated. A voltmeter (V) is connected between these terminals and a ground symbol. The text 'Voltage: Battery voltage' is shown next to the voltmeter. Below the diagram, it says 'OK or NG'.</p>		
SEF366X		
OK ▶	GO TO 4.	
NG ▶	Go to TROUBLE DIAGNOSIS FOR POWER SUPPLY, EC-154.	

BR
ST
RS
BT
HA
SC
EL
IDX

IGNITION SIGNAL

Diagnostic Procedure (Cont'd)

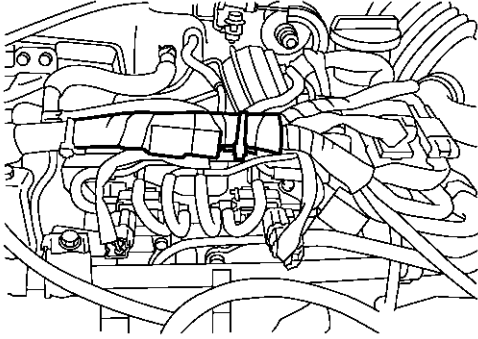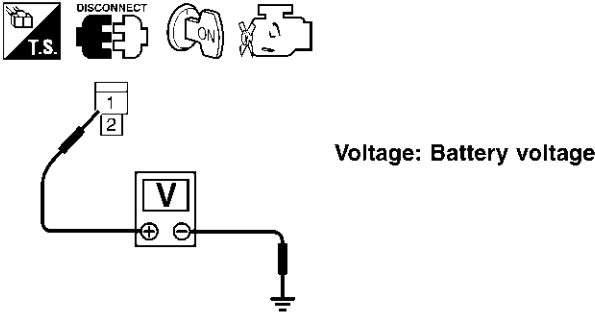4	CHECK IGNITION COIL POWER SUPPLY CIRCUIT-II
<p>1. Turn ignition switch OFF. 2. Disconnect condenser harness connector.</p>	
	
SEF008Z	
<p>3. Turn ignition switch ON. 4. Check voltage between condenser terminal 1 and ground with CONSULT-II or tester.</p>	
 <p style="text-align: center;">Voltage: Battery voltage</p>	
OK or NG	
OK	▶ GO TO 10.
NG	▶ GO TO 5.

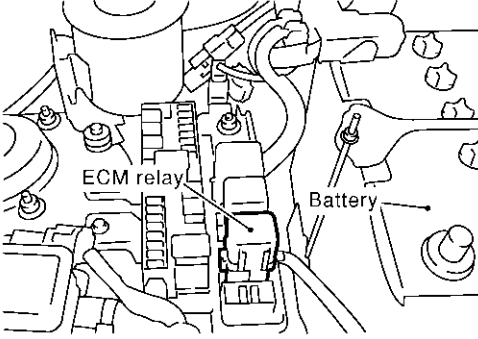5	CHECK IGNITION COIL POWER SUPPLY CIRCUIT-III
<p>1. Turn ignition switch OFF. 2. Disconnect ECM relay.</p>	
	
SEF009Z	
<p>3. Check harness continuity between ECM relay terminal 3 and condenser terminal 1. Refer to Wiring Diagram. Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p>	
OK or NG	
OK	▶ GO TO 7.
NG	▶ GO TO 6.

IGNITION SIGNAL

Diagnostic Procedure (Cont'd)

6	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none"> ● Harness connectors E1, M1 and M33, F22 ● Harness for open or short between ECM relay and condenser 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

GI
MA

7	CHECK IGNITION COIL POWER SUPPLY CIRCUIT-IV
Check voltage between ECM relay terminal 5 and ground with CONSULT-II or tester.	
<p>Voltage: Battery voltage</p>	
OK or NG	
OK	▶ GO TO 9.
NG	▶ GO TO 8.

EM
LC

EC

FE

AT

SEF010Z

TF

PD

8	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none"> ● 10A fuse ● Harness for open and short between ECM relay and fuse 	
▶	Repair or replace harness or connectors.

AX

SU

9	CHECK ECM RELAY						
1. Apply 12V direct current between ECM relay terminals 1 and 2. 2. Check continuity between ECM relay terminals 3 and 5, 6 and 7.							
<table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>Condition</th> <th>Continuity</th> </tr> </thead> <tbody> <tr> <td>12V direct current supply between terminals 1 and 2</td> <td>Yes</td> </tr> <tr> <td>OFF</td> <td>No</td> </tr> </tbody> </table>		Condition	Continuity	12V direct current supply between terminals 1 and 2	Yes	OFF	No
Condition	Continuity						
12V direct current supply between terminals 1 and 2	Yes						
OFF	No						
OK or NG							
OK	▶ GO TO 17.						
NG	▶ Replace ECM relay.						

BR

ST

RS

BT

HA

SEF296X

SC


EL

IDX

IGNITION SIGNAL




Diagnostic Procedure (Cont'd)

10	CHECK CONDENSER GROUND CIRCUIT FOR OPEN AND SHORT	
1. Turn ignition switch OFF. 2. Check harness continuity between condenser terminal 2 and engine ground. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to power.		
OK or NG		
OK	▶	GO TO 11.
NG	▶	Repair open circuit or short to power in harness or connectors.

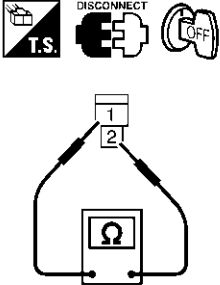11	CHECK CONDENSER	
Check resistance between condenser terminals 1 and 2.		
		
Resistance: Above 1MΩ at 25°C (77°F)		
SEF369X		
OK or NG		
OK	▶	GO TO 12.
NG	▶	Replace condenser.

IGNITION SIGNAL

Diagnostic Procedure (Cont'd)

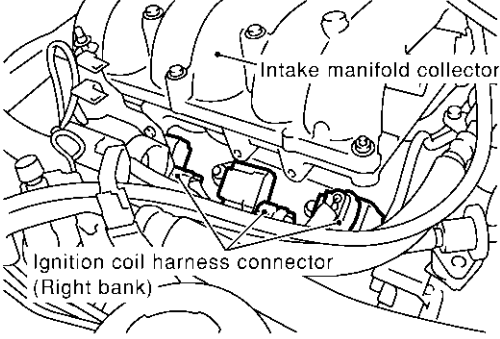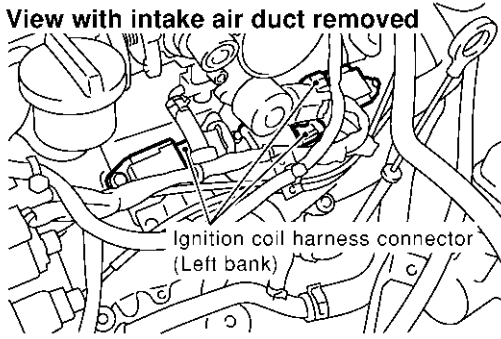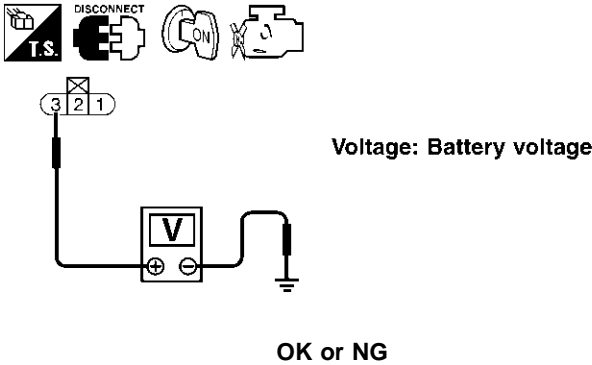12	CHECK IGNITION COIL POWER SUPPLY CIRCUIT-V						
<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Reconnect harness connectors disconnected. 3. Disconnect ignition coil harness connector. 							
<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  <p>Intake manifold collector</p> <p>Ignition coil harness connector (Right bank)</p> </div> <div style="text-align: center;"> <p>View with intake air duct removed</p>  <p>Ignition coil harness connector (Left bank)</p> </div> </div>							
<ol style="list-style-type: none"> 4. Turn ignition switch ON. 5. Check voltage between ignition coil terminal 3 and ground with CONSULT-II or tester. 							
 <p style="text-align: center;">Voltage: Battery voltage</p> <p style="text-align: center;">OK or NG</p>							
<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 15%;">OK</td> <td style="width: 10%; text-align: center;">▶</td> <td>GO TO 14.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>GO TO 13.</td> </tr> </table>		OK	▶	GO TO 14.	NG	▶	GO TO 13.
OK	▶	GO TO 14.					
NG	▶	GO TO 13.					

13	DETECT MALFUNCTIONING PART
Check the harness for open or short between ignition coil and harness connector F22.	
▶ Repair or replace harness or connectors.	


14	CHECK IGNITION COIL GROUND CIRCUIT FOR OPEN AND SHORT						
<ol style="list-style-type: none"> 1. Turn ignition switch OFF. 2. Check harness continuity between ignition coil terminal 2 and engine ground. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to power. 							
OK or NG							
<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 15%;">OK</td> <td style="width: 10%; text-align: center;">▶</td> <td>GO TO 15.</td> </tr> <tr> <td>NG</td> <td style="text-align: center;">▶</td> <td>Repair open circuit or short to power in harness or connectors.</td> </tr> </table>		OK	▶	GO TO 15.	NG	▶	Repair open circuit or short to power in harness or connectors.
OK	▶	GO TO 15.					
NG	▶	Repair open circuit or short to power in harness or connectors.					

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

IGNITION SIGNAL

Diagnostic Procedure (Cont'd)


15	CHECK IGNITION COIL OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
<p>1. Disconnect ECM harness connector.</p> <p>2. Check harness continuity between ECM terminals 21, 22, 23, 30, 31, 32 and ignition coil terminal 1. Refer to Wiring Diagram. Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 16.
NG	▶	Repair open circuit or short to ground or short to power in harness or connectors.

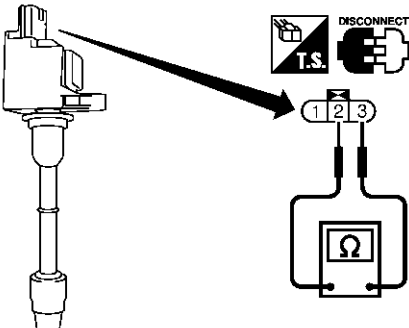16	CHECK IGNITION COIL WITH POWER TRANSISTOR									
<p>Check resistance between ignition coil terminals 2 and 3.</p> <div style="display: flex; align-items: center; justify-content: space-around;">  <table border="1" style="border-collapse: collapse; text-align: center;"> <thead> <tr> <th style="padding: 5px;">Terminals</th> <th style="padding: 5px;">Resistance</th> <th style="padding: 5px;">Result</th> </tr> </thead> <tbody> <tr> <td rowspan="2" style="padding: 5px;">2 and 3</td> <td style="padding: 5px;">Not 0 Ω</td> <td style="padding: 5px;">OK</td> </tr> <tr> <td style="padding: 5px;">0 Ω</td> <td style="padding: 5px;">NG</td> </tr> </tbody> </table> </div> <p style="text-align: right; margin-top: 10px;">SEC933C</p> <p style="text-align: center;">OK or NG</p>			Terminals	Resistance	Result	2 and 3	Not 0 Ω	OK	0 Ω	NG
Terminals	Resistance	Result								
2 and 3	Not 0 Ω	OK								
	0 Ω	NG								
OK	▶	GO TO 17.								
NG	▶	Replace ignition coil with power transistor.								

17	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.		
▶		INSPECTION END

INJECTOR

Component Description

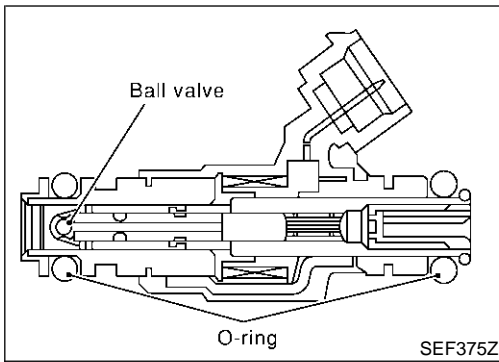

Component Description

The fuel injector is a small, precise solenoid valve. When the ECM supplies a ground to the injector circuit, the coil in the injector is energized. The energized coil pulls the ball valve back and allows fuel to flow through the injector into the intake manifold. The amount of fuel injected depends upon the injection pulse duration. Pulse duration is the length of time the injector remains open. The ECM controls the injection pulse duration based on engine fuel needs.

NBEC0383

GI
MA
EM
LC

CONSULT-II Reference Value in Data Monitor Mode

NBEC0384

EC

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
INJ PULSE-B2 INJ PULSE-B1	<ul style="list-style-type: none"> ● Engine: After warming up ● Air conditioner switch: "OFF" ● Shift lever: "N" ● No-load 	Idle	2.4 - 3.2 msec
		2,000 rpm	1.9 - 2.8 msec
B/FUEL SCHDL	ditto	Idle	2.0 - 3.2 msec
		2,000 rpm	1.4 - 2.6 msec

FE
AT
TF

ECM Terminals and Reference Value

NBEC0685

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
101	R/B	Injector No. 1	[Engine is running] <ul style="list-style-type: none"> ● Idle speed 	BATTERY VOLTAGE (11 - 14V)
102	L/W	Injector No. 5		
103	R/W	Injector No. 2		
104	PU/R	Injector No. 6		
105	R/Y	Injector No. 3		
107	R/L	Injector No. 4		

PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

INJECTOR



Wiring Diagram

Wiring Diagram

NBEC0386


EC-INJECT-01

— : Detectable line for DTC
 - - - : Non-detectable line for DTC

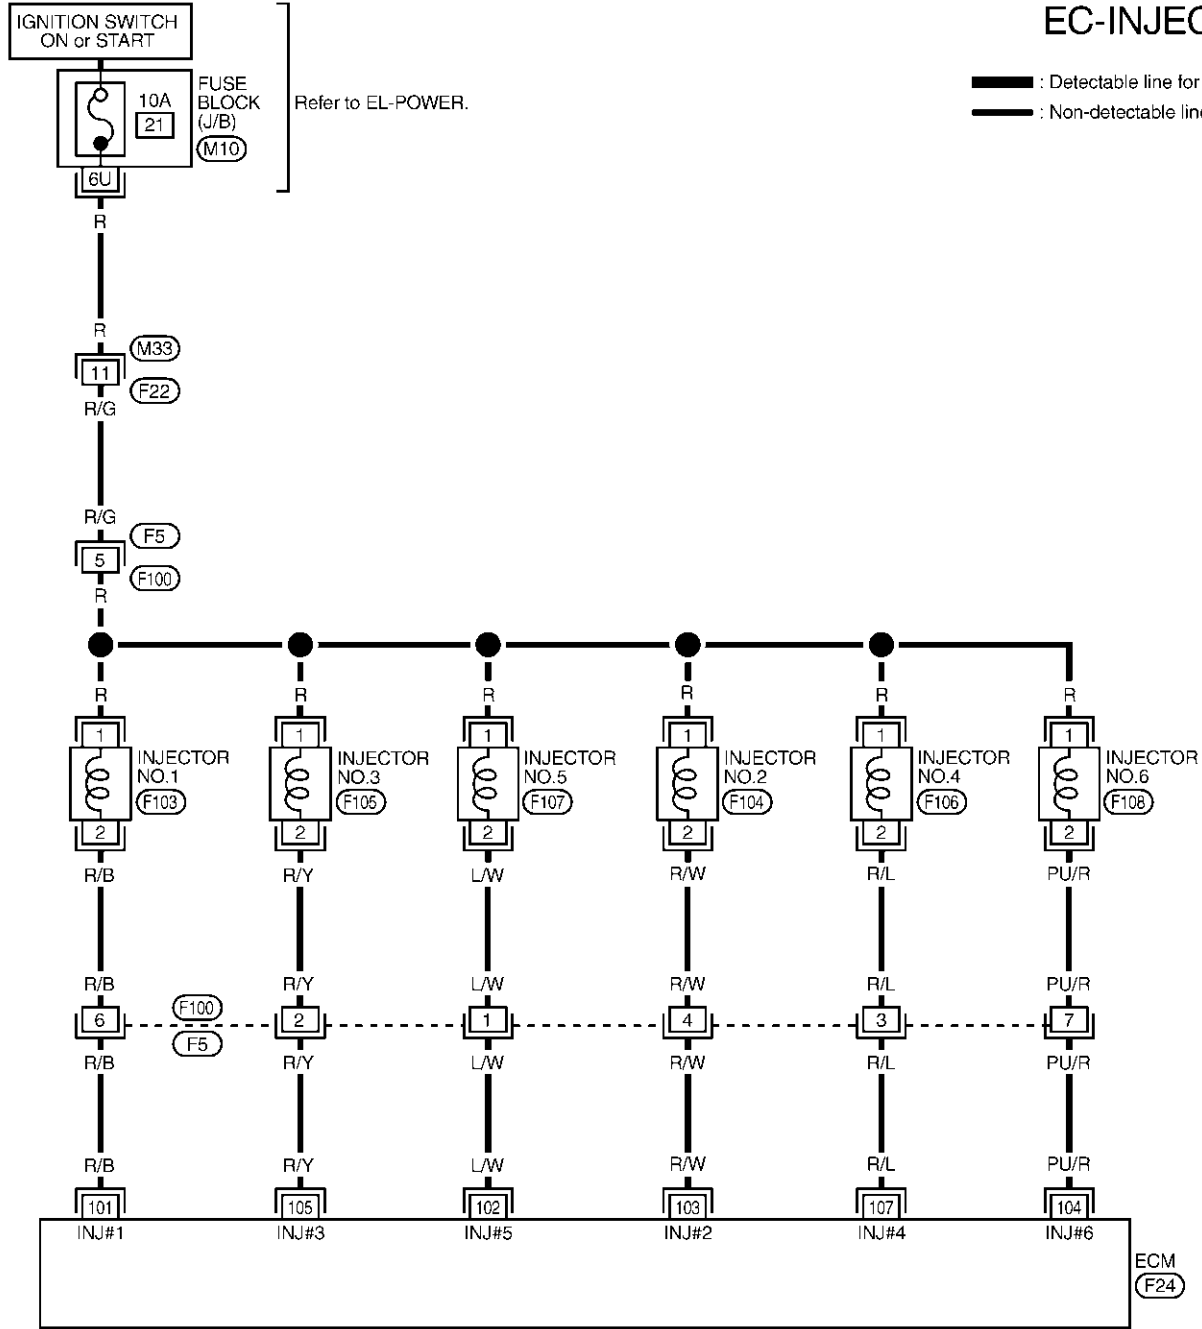

REFER TO THE FOLLOWING.

M10 - FUSE BLOCK-
 JUNCTION BOX (J/B)

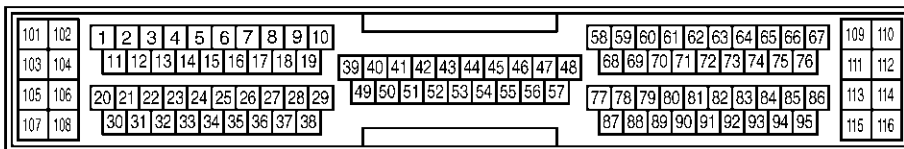

MEC974C

Diagnostic Procedure

NBEC0387

1	INSPECTION START	
Turn ignition switch to "START". Is any cylinder ignited?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	GO TO 3.

GI

MA

EM

2	CHECK OVERALL FUNCTION																	
<p>Ⓔ With CONSULT-II</p> <p>1. Start engine.</p> <p>2. Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT-II.</p>																		
<table border="1" style="margin: auto; border-collapse: collapse;"> <tr> <th colspan="2">ACTIVE TEST</th> </tr> <tr> <td>POWER BALANCE</td> <td></td> </tr> <tr> <th colspan="2">MONITOR</th> </tr> <tr> <td>ENG SPEED</td> <td>XXX rpm</td> </tr> <tr> <td>MAS A/F SE-B1</td> <td>XXX V</td> </tr> <tr> <td>IACV-AAC/V</td> <td>XXX step</td> </tr> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> </table>			ACTIVE TEST		POWER BALANCE		MONITOR		ENG SPEED	XXX rpm	MAS A/F SE-B1	XXX V	IACV-AAC/V	XXX step				
ACTIVE TEST																		
POWER BALANCE																		
MONITOR																		
ENG SPEED	XXX rpm																	
MAS A/F SE-B1	XXX V																	
IACV-AAC/V	XXX step																	
<p>3. Make sure that each circuit produces a momentary engine speed drop.</p>																		

LC

EC


FE

AT

TF

PD

SEF190Y
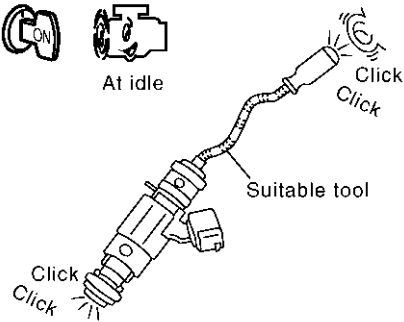
<p>ⓧ Without CONSULT-II</p> <p>1. Start engine.</p> <p>2. Listen to each injector operating sound.</p>		
		
<p>Clicking noise should be heard.</p>		
OK or NG		
OK	▶	INSPECTION END
NG	▶	GO TO 3.

AX

SU

BR

ST

RS

PBIB1725E

BT

HA



SC

EL

IDX

INJECTOR

Diagnostic Procedure (Cont'd)

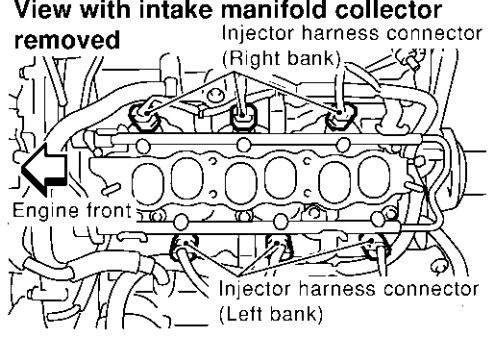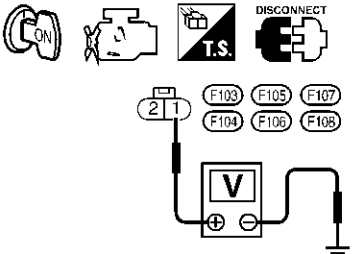3	CHECK INJECTOR POWER SUPPLY CIRCUIT	
<p>1. Turn ignition switch "OFF". 2. Disconnect injector harness connector.</p> <div style="text-align: center;"> <p>View with intake manifold collector removed</p>  <p>Injector harness connector (Right bank) Engine front Injector harness connector (Left bank)</p> </div> <p style="text-align: right;">SEF023Z</p> <p>3. Turn ignition switch "ON". 4. Check voltage between injector terminal 1 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p>Voltage: Battery voltage</p> <p style="text-align: center;">OK or NG</p> <p style="text-align: right;">SEF364Z</p> </div>		
OK	▶	GO TO 5.
NG	▶	GO TO 4.

4	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors M33, F22 ● Harness connectors F5, F100 ● Fuse block (J/B) connector M10 ● 10A fuse ● Harness for open or short between injector and fuse 		
▶		Repair harness or connectors.


5	CHECK INJECTOR OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch "OFF". 2. Disconnect ECM harness connector. 3. Check harness continuity between injector terminal 2 and ECM terminals 103, 104, 107, 101, 105, 102. Refer to Wiring Diagram. Continuity should exist. 4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 7.
NG	▶	GO TO 6.

INJECTOR

Diagnostic Procedure (Cont'd)

6	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors F100, F5 ● Harness for open or short between harness connector F5 and ECM ● Harness for open or short between harness connector F100 and injector 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

7	CHECK SUB-HARNESS CIRCUIT FOR OPEN AND SHORT						
<p>1. Remove intake manifold collector. 2. Disconnect injector harness connectors. 3. Check harness continuity between the following terminals. Refer to Wiring Diagram.</p>							
<table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td style="padding: 5px;">Harness connector F100</td> <td style="padding: 5px;">Injector F103, F105, F107, F104, F106, F108</td> </tr> <tr> <td style="padding: 5px; text-align: center;">5</td> <td style="padding: 5px; text-align: center;">1</td> </tr> <tr> <td style="padding: 5px; text-align: center;">6, 2, 1, 4, 3, 7</td> <td style="padding: 5px; text-align: center;">2</td> </tr> </table>		Harness connector F100	Injector F103, F105, F107, F104, F106, F108	5	1	6, 2, 1, 4, 3, 7	2
Harness connector F100	Injector F103, F105, F107, F104, F106, F108						
5	1						
6, 2, 1, 4, 3, 7	2						
MTBL0483							
Continuity should exist.							
OK or NG							
OK ▶	GO TO 8.						
NG ▶	Repair open circuit or short to ground or short to power in harness or connectors.						

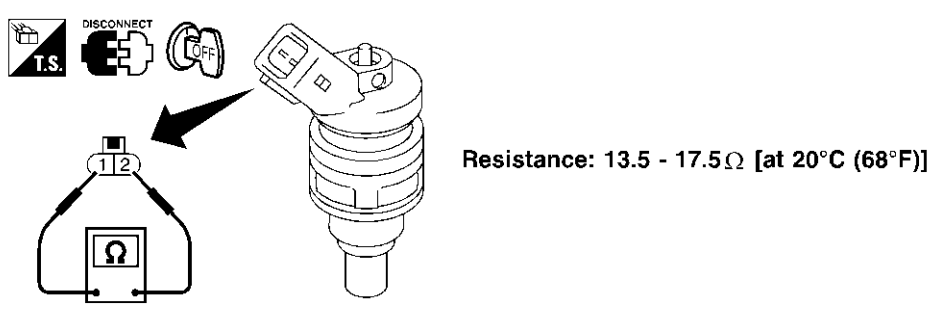8	CHECK INJECTOR
<p>1. Disconnect injector harness connector. 2. Check resistance between terminals as shown in the figure.</p>	
	
SEF964XB	
OK or NG	
OK ▶	GO TO 9.
NG ▶	Replace injector.

9	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	
▶	INSPECTION END

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

START SIGNAL

CONSULT-II Reference Value in Data Monitor Mode

CONSULT-II Reference Value in Data Monitor Mode

NBEC0388

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
START SIGNAL	● Ignition switch: ON → START → ON	OFF → ON → OFF

ECM Terminals and Reference Value

NBEC0688

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
42	B/Y	Start signal	[Ignition switch "ON"]	Approximately 0V
			[Ignition switch "START"]	9 - 12V

START SIGNAL

Wiring Diagram

Wiring Diagram

=NBEC0390

EC-S/SIG-01

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS


BT

HA



SC

EL

IDX

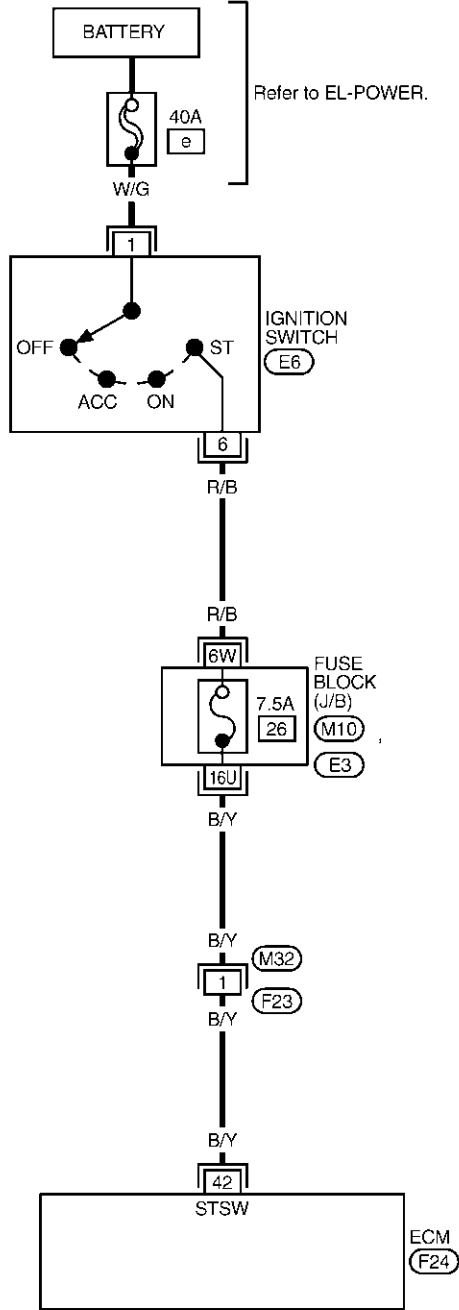

— : Detectable line for DTC
 — : Non-detectable line for DTC

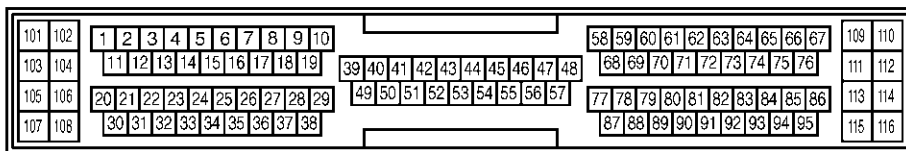

REFER TO THE FOLLOWING.
 (M10), (E3) - FUSE BLOCK-JUNCTION BOX (J/B)



MEC975C


START SIGNAL


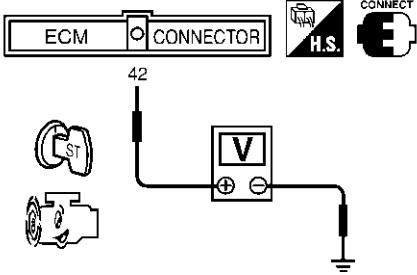
Diagnostic Procedure

Diagnostic Procedure

NBEC0391

1	INSPECTION START	
Do you have CONSULT-II?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	GO TO 3.

2	CHECK OVERALL FUNCTION													
<p> With CONSULT-II</p> <p>1. Turn ignition switch "ON".</p> <p>2. Check "START SIGNAL" in "DATA MONITOR" mode with CONSULT-II under the following conditions.</p>														
<table border="1" style="margin: auto;"> <thead> <tr> <th colspan="2">DATA MONITOR</th> </tr> <tr> <th>MONITOR</th> <th>NO DTC</th> </tr> </thead> <tbody> <tr> <td>START SIGNAL</td> <td>OFF</td> </tr> <tr> <td>CLSD THL POS</td> <td>ON</td> </tr> <tr> <td>AIR COND SIG</td> <td>OFF</td> </tr> <tr> <td>P/N POSI SW</td> <td>ON</td> </tr> </tbody> </table>			DATA MONITOR		MONITOR	NO DTC	START SIGNAL	OFF	CLSD THL POS	ON	AIR COND SIG	OFF	P/N POSI SW	ON
DATA MONITOR														
MONITOR	NO DTC													
START SIGNAL	OFF													
CLSD THL POS	ON													
AIR COND SIG	OFF													
P/N POSI SW	ON													
<table border="1" style="margin: auto;"> <thead> <tr> <th>Condition</th> <th>"START SIGNAL"</th> </tr> </thead> <tbody> <tr> <td>Ignition switch "ON"</td> <td>OFF</td> </tr> <tr> <td>Ignition switch "START"</td> <td>ON</td> </tr> </tbody> </table>			Condition	"START SIGNAL"	Ignition switch "ON"	OFF	Ignition switch "START"	ON						
Condition	"START SIGNAL"													
Ignition switch "ON"	OFF													
Ignition switch "START"	ON													
SEF072Y														
OK or NG														
OK	▶	INSPECTION END												
NG	▶	GO TO 4.												

3	CHECK OVERALL FUNCTION							
<p> Without CONSULT-II</p> <p>Check voltage between ECM terminal 42 and ground under the following conditions.</p>								
								
<table border="1" style="margin: auto;"> <thead> <tr> <th>Condition</th> <th>Voltage</th> </tr> </thead> <tbody> <tr> <td>Ignition switch "START"</td> <td>Battery voltage</td> </tr> <tr> <td>Other positions</td> <td>Approximately 0V</td> </tr> </tbody> </table>			Condition	Voltage	Ignition switch "START"	Battery voltage	Other positions	Approximately 0V
Condition	Voltage							
Ignition switch "START"	Battery voltage							
Other positions	Approximately 0V							
SEF362X								
OK or NG								
OK	▶	INSPECTION END						
NG	▶	GO TO 4.						

4	CHECK STARTING SYSTEM	
Turn ignition switch "OFF", then turn it to "START".		
Does starter motor operate?		
Yes or No		
Yes	▶	GO TO 5.
No	▶	Refer to SC-10, "STARTING SYSTEM".

START SIGNAL

Diagnostic Procedure (Cont'd)

5	CHECK FUSE	
1. Turn ignition switch "OFF". 2. Disconnect 7.5A fuse. 3. Check if 7.5A fuse is OK.		
OK or NG		
OK	▶	GO TO 6.
NG	▶	Replace 7.5A fuse.

GI

MA

EM

6	CHECK START SIGNAL INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
1. Disconnect ECM harness connector. 2. Disconnect ignition switch harness connector. 3. Check harness continuity between ECM terminal 42 and fuse block, ignition switch and fuse block. Refer to Wiring Diagram. Continuity should exist. 4. Also check harness for short to ground and short to power.		
OK or NG		
OK	▶	GO TO 8.
NG	▶	GO TO 7.

LC

EC

FE

AT

TF

7	DETECT MALFUNCTIONING PART	
Check the following. <ul style="list-style-type: none"> ● Harness connectors M32, F23 ● Fuse block (J/B) connectors M10, E3 ● Harness for open or short between ignition switch and fuse ● Harness for open or short between ECM and fuse 		
▶		Repair open circuit or short to ground or short to power in harness or connectors.

PD

AX

SU

8	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.		
▶		INSPECTION END

BR

ST

RS

BT

HA

SC

EL

IDX

FUEL PUMP

System Description


System Description

NBEC0392

Sensor	Input Signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS)	Engine speed (POS signal)	Fuel pump control	Fuel pump relay
Crankshaft position sensor (REF)	Engine speed (REF signal)		
Ignition switch	Start signal		

The ECM activates the fuel pump for several seconds after the ignition switch is turned on to improve engine startability. If the ECM receives a 120° signal from the crankshaft position sensor (REF), it knows that the engine is rotating, and causes the pump to operate. If the 120° signal is not received when the ignition switch is on, the engine stalls. The ECM stops pump operation and prevents battery discharging, thereby improving safety. The ECM does not directly drive the fuel pump. It controls the ON/OFF fuel pump relay, which in turn controls the fuel pump.

Condition	Fuel pump operation
Ignition switch is turned to ON.	Operates for 1 second.
Engine running and cranking	Operates.
When engine is stopped	Stops in 1.5 seconds.
Except as shown above	Stops.

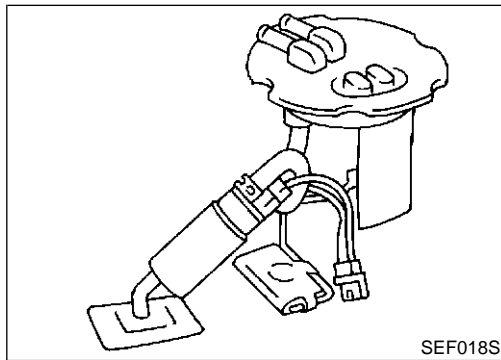

Component Description

NBEC0393

The fuel pump with a fuel damper is an in-tank type (the pump and damper are located in the fuel tank).

CONSULT-II Reference Value in Data Monitor Mode

NBEC0394

Specification data are reference values.

MONITOR ITEM	CONDITION	SPECIFICATION
FUEL PUMP RLY	<ul style="list-style-type: none"> Ignition switch is turned to ON. (Operates for 1 second.) Engine running and cranking 	ON
	Except as shown above	OFF

FUEL PUMP

ECM Terminals and Reference Value

ECM Terminals and Reference Value

=NBEC0686

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
28	P/L	Fuel pump relay	[Ignition switch "ON"] ● For 1 second after turning ignition switch "ON" [Engine is running]	0 - 1.5V
			[Ignition switch "ON"] ● 1 second passed after turning ignition switch "ON".	BATTERY VOLTAGE (11 - 14V)

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

FUEL PUMP


Wiring Diagram

Wiring Diagram


NBEC0396

EC-F/PUMP-01



: Detectable line for DTC
 : Non-detectable line for DTC

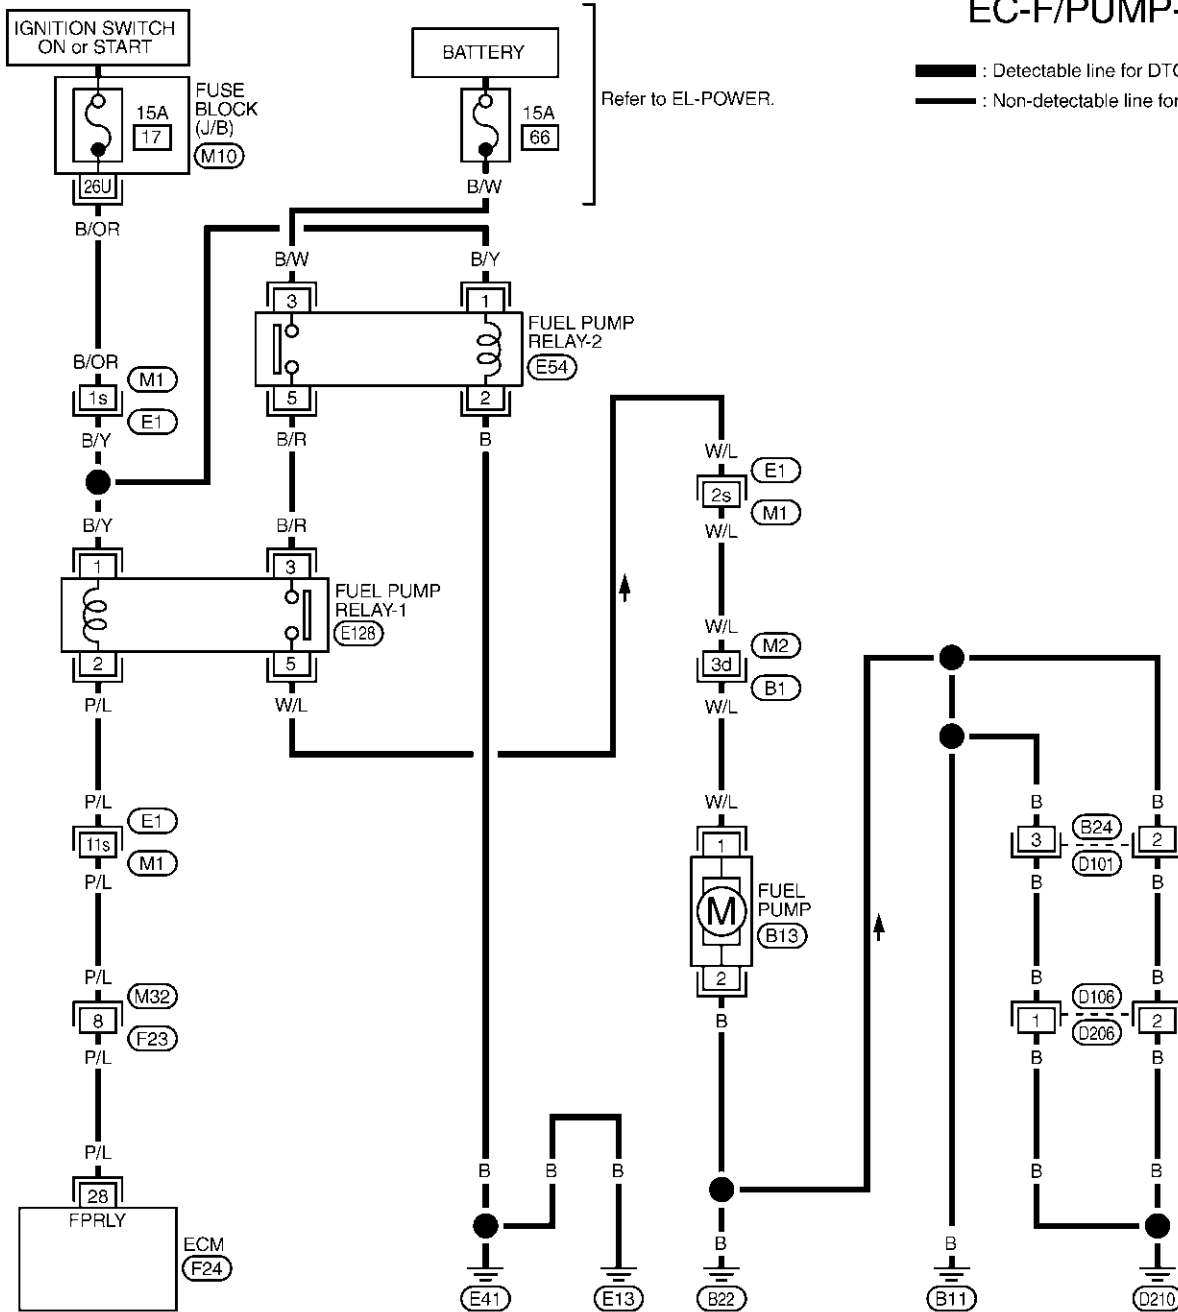

Refer to EL-POWER.

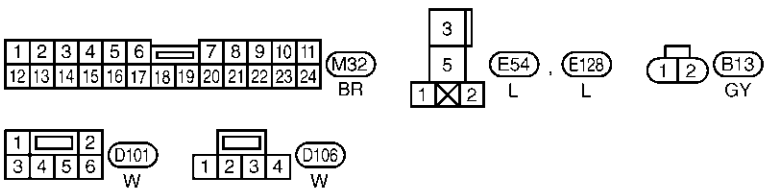


REFER TO THE FOLLOWING.
 (E1), (B1) -SUPER
 MULTIPLE JUNCTION (SMJ)
 (M10) -FUSE BLOCK-
 JUNCTION BOX (J/B)



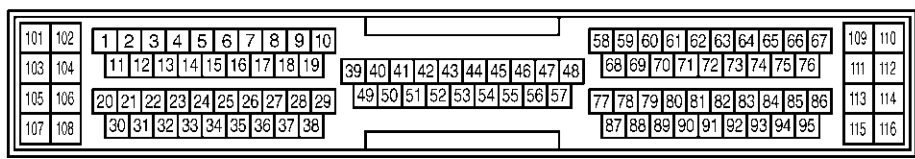


MEC906D

Diagnostic Procedure

NBEC0397

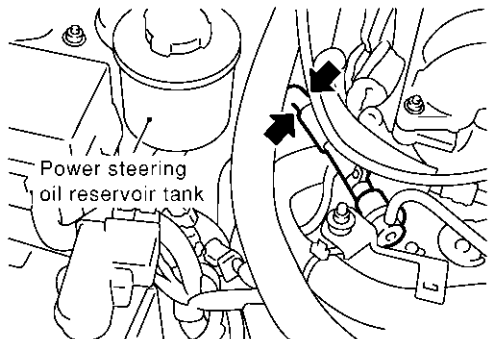1	CHECK OVERALL FUNCTION	<p>1. Turn ignition switch "ON". 2. Pinch fuel feed hose with two fingers.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF025Z</p> <p style="text-align: center;">Fuel pressure pulsation should be felt on the fuel feed hose for 1 second after ignition switch is turned "ON".</p> <p style="text-align: center;">OK or NG</p>	GI MA EM LC EC FE AT TF
OK	▶	INSPECTION END	AT
NG	▶	GO TO 2.	TF

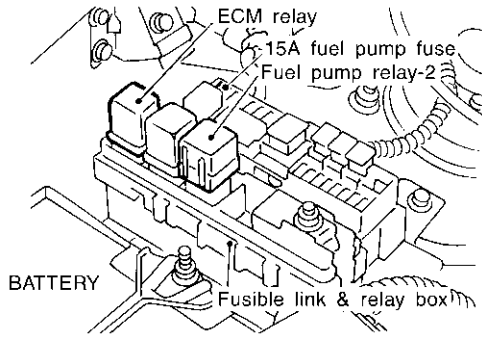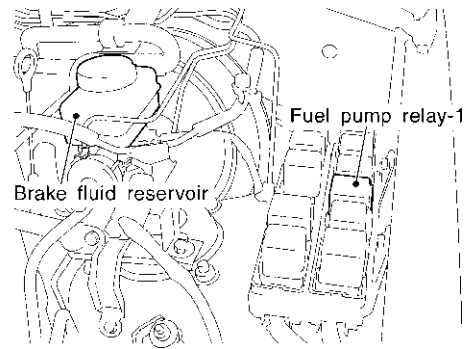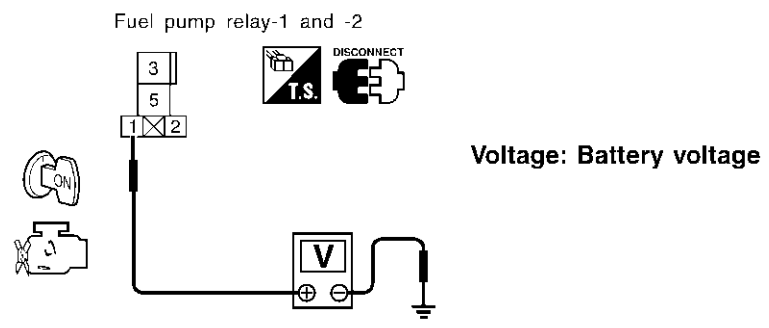2	CHECK FUEL PUMP RELAY-1 and -2 POWER SUPPLY CIRCUIT-I	<p>1. Turn ignition switch "OFF". 2. Disconnect fuel pump relay-1 and -2.</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  </div> <div style="text-align: center;">  </div> </div> <p style="text-align: right;">SEF346Z</p> <p>3. Turn ignition switch "ON". 4. Check voltage between terminals 1 and ground with CONSULT-II or tester.</p> <div style="text-align: center;">  <p style="text-align: center;">OK or NG</p> </div> <p style="text-align: right;">SEC337C</p>	PD AX SU BR ST RS BT HA SC EL IDX
OK	▶	GO TO 4.	RS
NG	▶	GO TO 3.	BT

FUEL PUMP

Diagnostic Procedure (Cont'd)

3	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Fuse block (J/B) connector M10 ● 15A fuse in fuse block (J/B) ● Harness connectors M1, E1 ● Harness for open or short between fuse and fuel pump relay-1 and fuel pump relay-2 	
▶	Repair harness or connectors.

4	CHECK FUEL PUMP RELAY-1 POWER SUPPLY CIRCUIT-II
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Reconnect fuel pump relay-2. 3. Turn ignition switch "ON". 4. Check voltage between fuel pump relay-1 terminal 3 and ground with CONSULT-II or tester. 	
OK	▶ GO TO 8.
NG	▶ GO TO 5.

SEC338C

5	CHECK FUEL PUMP RELAY-2 OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect fuel pump relay-2. 3. Check harness continuity between fuel pump relay-2 terminal 5 and fuel pump relay-1 terminal 3. Refer to Wiring Diagram. Continuity should exist. 4. Also check harness for short to ground and short to power. 	
OK or NG	
OK	▶ GO TO 6.
NG	▶ Repair open circuit or short to ground or short to power in harness or connectors.

FUEL PUMP

Diagnostic Procedure (Cont'd)

6	CHECK FUEL PUMP RELAY POWER SUPPLY CIRCUIT-III
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect fuel pump relay-2. 3. Turn ignition switch "ON". 4. Check voltage between terminals 1, 3 and ground with CONSULT-II or tester. 	
SEC339C	
OK	▶ GO TO 8.
NG	▶ GO TO 7.


7	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● 15A fuse in fusible link and relay box ● Harness for open or short between fuse and fuel pump relay-2 	
▶ Repair harness or connectors.	

8	CHECK FUEL PUMP RELAY-2 GROUND CIRCUIT FOR OPEN AND SHORT
<ol style="list-style-type: none"> 1. Check harness continuity between fuel pump relay-2 terminal 1 and ground. Continuity should exist. 2. Also check harness for short to power. 	
OK or NG	
▶ Repair open circuit or short to power in harness or connector.	

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

FUEL PUMP

Diagnostic Procedure (Cont'd)

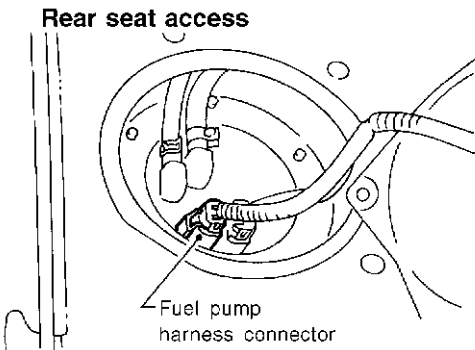9	CHECK FUEL PUMP POWER SUPPLY AND GROUND CIRCUIT FOR OPEN AND SHORT	
<p>1. Turn ignition switch "OFF". 2. Disconnect fuel level sensor unit and fuel pump harness connector.</p> <div style="text-align: center;">  </div> <p style="text-align: right;">SEF021S</p> <p>3. Check harness continuity between fuel pump terminal 2 and body ground, fuel pump terminal 1 and fuel pump relay-1 terminal 5. Refer to Wiring Diagram. Continuity should exist.</p> <p>4. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 11.
NG	▶	GO TO 10.

10	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E1, M1 ● Harness connectors M2, B1 ● Harness for open or short between fuel pump relay-1 and fuel pump 		
▶		Repair open circuit or short to ground or short to power in harness or connectors.


11	CHECK FUEL PUMP RELAY OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
<p>1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 28 and fuel pump relay-1 terminal 2. Refer to Wiring Diagram. Continuity should exist.</p> <p>3. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 13.
NG	▶	GO TO 12.


12	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E1, M1 ● Harness connectors M32, F23 ● Harness for open or short between ECM and fuel pump relay-1 		
▶		Repair open circuit or short to ground or short to power in harness or connectors.

FUEL PUMP

Diagnostic Procedure (Cont'd)

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

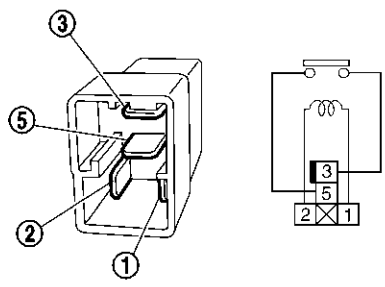13	CHECK FUEL PUMP RELAY-1 AND -2								
<p>E With CONSULT-II</p> <ol style="list-style-type: none"> Reconnect fuel pump relay-1 and -2, fuel level sensor unit and fuel pump harness connector and ECM harness connector. Turn ignition switch "ON". Turn fuel pump relay-1, -2 "ON" and "OFF" in "ACTIVE TEST" mode with CONSULT-II and check operating sound. 									
<table border="1" style="margin: auto;"> <tr><th colspan="2">ACTIVE TEST</th></tr> <tr><td>FUEL PUMP RELAY</td><td>ON</td></tr> <tr><th colspan="2">MONITOR</th></tr> <tr><td>ENG SPEED</td><td>XXX rpm</td></tr> </table>		ACTIVE TEST		FUEL PUMP RELAY	ON	MONITOR		ENG SPEED	XXX rpm
ACTIVE TEST									
FUEL PUMP RELAY	ON								
MONITOR									
ENG SPEED	XXX rpm								
SEF073Y									
<p>X Without CONSULT-II</p> <p>Check continuity between terminals 3 and 5 under the following conditions.</p>									
									
<table border="1" style="margin: auto;"> <thead> <tr> <th>Conditions</th> <th>Continuity</th> </tr> </thead> <tbody> <tr> <td>12V direct current supply between terminals 1 and 2</td> <td style="text-align: center;">Yes</td> </tr> <tr> <td>No current supply</td> <td style="text-align: center;">No</td> </tr> </tbody> </table>		Conditions	Continuity	12V direct current supply between terminals 1 and 2	Yes	No current supply	No		
Conditions	Continuity								
12V direct current supply between terminals 1 and 2	Yes								
No current supply	No								
SEC340C									
OK or NG									
OK	▶ GO TO 14.								
NG	▶ Replace fuel pump relay.								

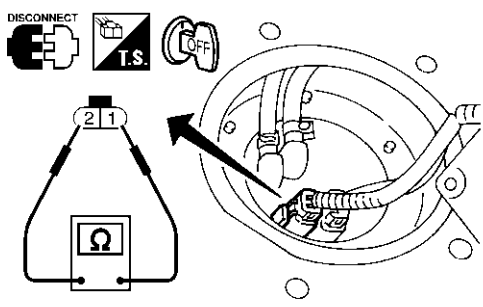14	CHECK FUEL PUMP
<ol style="list-style-type: none"> Disconnect fuel level sensor unit and fuel pump harness connector. Check resistance between fuel level sensor unit and fuel pump terminals 1 and 2. 	
	
<p>Resistance: 0.2 - 5.0 Ω [at 25°C (77°F)]</p>	
SEF027Z	
OK or NG	
OK	▶ GO TO 15.
NG	▶ Replace fuel pump.


FUEL PUMP

Diagnostic Procedure (Cont'd)

15	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	
▶	INSPECTION END

POWER STEERING OIL PRESSURE SWITCH

Component Description

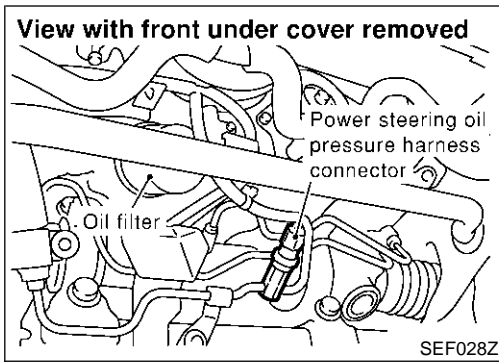

Component Description

NBEC0398

The power steering oil pressure switch is attached to the power steering high-pressure tube and detects a power steering load. When a power steering load is detected, it signals the ECM. The ECM adjusts the IACV-AAC valve to increase the idle speed and adjust for the increased load.

CONSULT-II Reference Value in Data Monitor Mode

NBEC0399

Specification data are reference values.

MONITOR ITEM	CONDITION		SPECIFICATION
PW/ST SIGNAL	<ul style="list-style-type: none"> Engine: After warming up, idle the engine 	Steering wheel in neutral position (forward direction)	OFF
		The steering wheel is fully turned.	ON

ECM Terminals and Reference Value

NBEC0687

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI-NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
47	R/B	Power steering oil pressure switch	[Engine is running] <ul style="list-style-type: none"> Steering wheel is being turned. 	0 - 1.0V
			[Engine is running] <ul style="list-style-type: none"> Steering wheel is not being turned. 	Approximately 5V

POWER STEERING OIL PRESSURE SWITCH


Diagnostic Procedure

Diagnostic Procedure


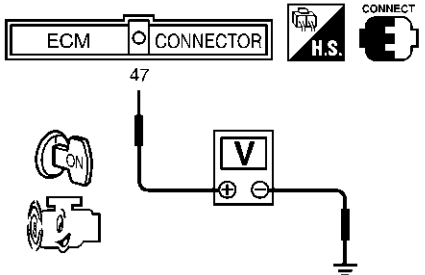
NBEC0402

1	INSPECTION START	
Do you have CONSULT-II?		
Yes or No		
Yes	▶	GO TO 2.
No	▶	GO TO 3.

GI
MA
EM

2	CHECK OVERALL FUNCTION							
<p> With CONSULT-II</p> <p>1. Start engine.</p> <p>2. Check "PW/ST SIGNAL" in "DATA MONITOR" mode with CONSULT-II under the following conditions.</p>								
<table border="1" style="margin: auto;"> <tr> <th colspan="2">DATA MONITOR</th> </tr> <tr> <th>MONITOR</th> <th>NO DTC</th> </tr> <tr> <td>PW/ST SIGNAL</td> <td>OFF</td> </tr> </table>			DATA MONITOR		MONITOR	NO DTC	PW/ST SIGNAL	OFF
DATA MONITOR								
MONITOR	NO DTC							
PW/ST SIGNAL	OFF							
<table border="1" style="margin: auto;"> <tr> <td>Steering is in neutral position</td> <td>OFF</td> </tr> <tr> <td>Steering is turned</td> <td>ON</td> </tr> </table>			Steering is in neutral position	OFF	Steering is turned	ON		
Steering is in neutral position	OFF							
Steering is turned	ON							
SEF228Y								
OK or NG								
OK	▶	INSPECTION END						
NG	▶	GO TO 4.						


LC
EC
FE
AT
TF
PD
AX

3	CHECK OVERALL FUNCTION							
<p> Without CONSULT-II</p> <p>1. Start engine.</p> <p>2. Check voltage between ECM terminal 47 and ground under the following conditions.</p>								
								
<table border="1" style="margin: auto;"> <thead> <tr> <th>Conditions</th> <th>Voltage</th> </tr> </thead> <tbody> <tr> <td>Steering is neutral position.</td> <td>Approximately 5V</td> </tr> <tr> <td>Steering is turned to full position.</td> <td>Approximately 0V</td> </tr> </tbody> </table>			Conditions	Voltage	Steering is neutral position.	Approximately 5V	Steering is turned to full position.	Approximately 0V
Conditions	Voltage							
Steering is neutral position.	Approximately 5V							
Steering is turned to full position.	Approximately 0V							
SEF363X								
OK or NG								
OK	▶	INSPECTION END						
NG	▶	GO TO 4.						

SU
BR
ST
RS
BT
HA
SC
EL
IDX

POWER STEERING OIL PRESSURE SWITCH

Diagnostic Procedure (Cont'd)

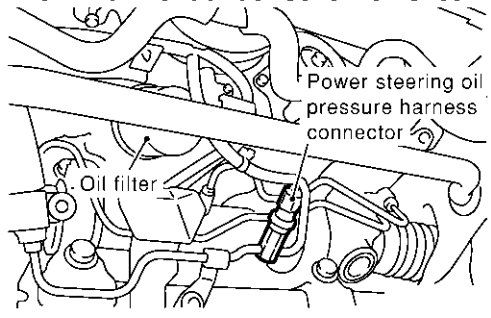
4	CHECK POWER STEERING OIL PRESSURE SWITCH GROUND CIRCUIT FOR OPEN AND SHORT	
<ol style="list-style-type: none"> 1. Turn ignition switch "OFF". 2. Disconnect power steering oil pressure switch harness connector. <div style="text-align: center;"> <p>View with front under cover removed</p>  </div> <p style="text-align: right;">SEF028Z</p> <ol style="list-style-type: none"> 3. Check harness continuity between power steering oil pressure switch terminal 2 and engine ground. Refer to Wiring Diagram. Continuity should exist. 4. Also check harness for short to power. <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 5.
NG	▶	Repair open circuit or short to power in harness or connectors.

5	CHECK POWER STEERING OIL PRESSURE SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT	
<ol style="list-style-type: none"> 1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 47 and power steering oil pressure switch terminal 1. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to ground and short to power. <p style="text-align: center;">OK or NG</p>		
OK	▶	GO TO 7.
NG	▶	GO TO 6.

6	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors F23, M32 ● Harness connectors M1, E1 ● Harness connectors E48, E102 ● Harness for open or short between power steering oil pressure switch and ECM 		
	▶	Repair open circuit, short to ground or short to power in harness or connectors.

POWER STEERING OIL PRESSURE SWITCH

Diagnostic Procedure (Cont'd)

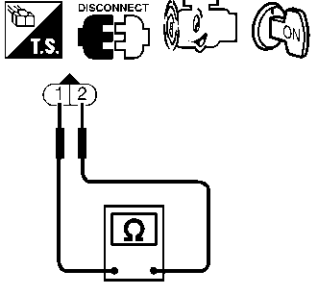
7	CHECK POWER STEERING OIL PRESSURE SWITCH							
<p>1. Disconnect power steering oil pressure switch harness connector then start engine. 2. Check continuity between power steering oil pressure switch terminals 1 and 2 under the following conditions.</p>								
								
<table border="1" style="margin: auto; border-collapse: collapse;"> <thead> <tr> <th style="padding: 5px;">Conditions</th> <th style="padding: 5px;">Continuity</th> </tr> </thead> <tbody> <tr> <td style="padding: 5px;">Steering wheel is being fully turned.</td> <td style="padding: 5px;">Yes</td> </tr> <tr> <td style="padding: 5px;">Steering wheel is not being turned.</td> <td style="padding: 5px;">No</td> </tr> </tbody> </table>			Conditions	Continuity	Steering wheel is being fully turned.	Yes	Steering wheel is not being turned.	No
Conditions	Continuity							
Steering wheel is being fully turned.	Yes							
Steering wheel is not being turned.	No							
SEF364X								
OK or NG								
OK	▶	GO TO 8.						
NG	▶	Replace power steering oil pressure switch.						

8	CHECK INTERMITTENT INCIDENT	
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.		
▶		INSPECTION END

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

REFRIGERANT PRESSURE SENSOR


Description

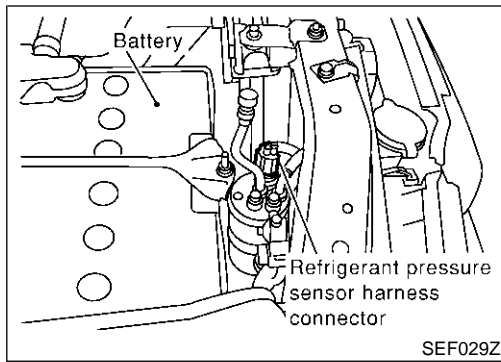

Description

NBEC0636

The refrigerant pressure sensor is installed at the liquid tank of the air conditioner system. The sensor uses an electrostatic volume pressure transducer to convert refrigerant pressure to voltage. The voltage signal is sent to ECM, and ECM controls cooling fan system.

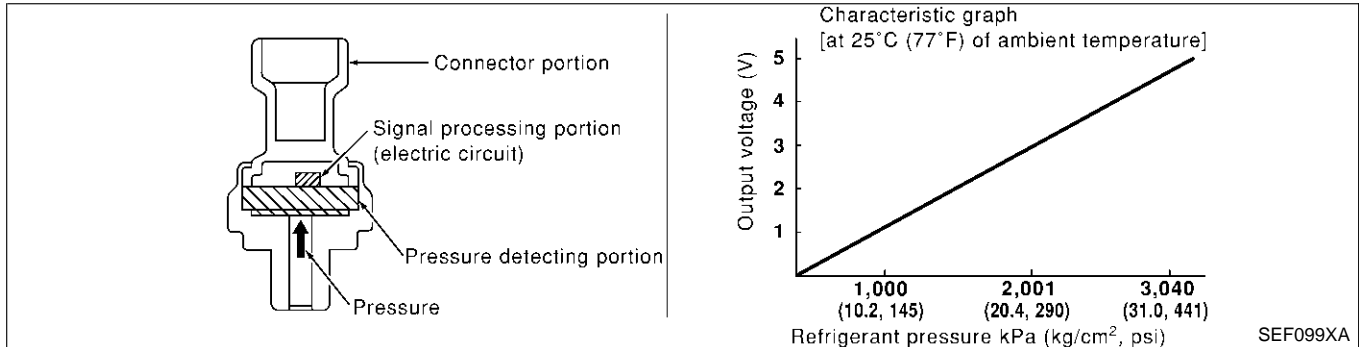

ECM Terminals and Reference Value

NBEC0689

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
58	B/P	Sensors' ground	[Engine is running] ● Warm-up condition ● Idle speed	Approximately 0V
81	W/PU	Refrigerant pressure sensor	[Engine is running] ● Warm-up condition ● Both A/C switch and blower switch are "ON". (Compressor operates.)	1.0 - 3.88V
111	P/B	Sensors' power supply	[Ignition switch "ON"]	Approximately 5V

REFRIGERANT PRESSURE SENSOR

Wiring Diagram

Wiring Diagram

NBEC0637

EC-RP/SEN-01

GI

— : Detectable line for DTC

— : Non-detectable line for DTC

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS






BT

HA

SC


EL

IDX

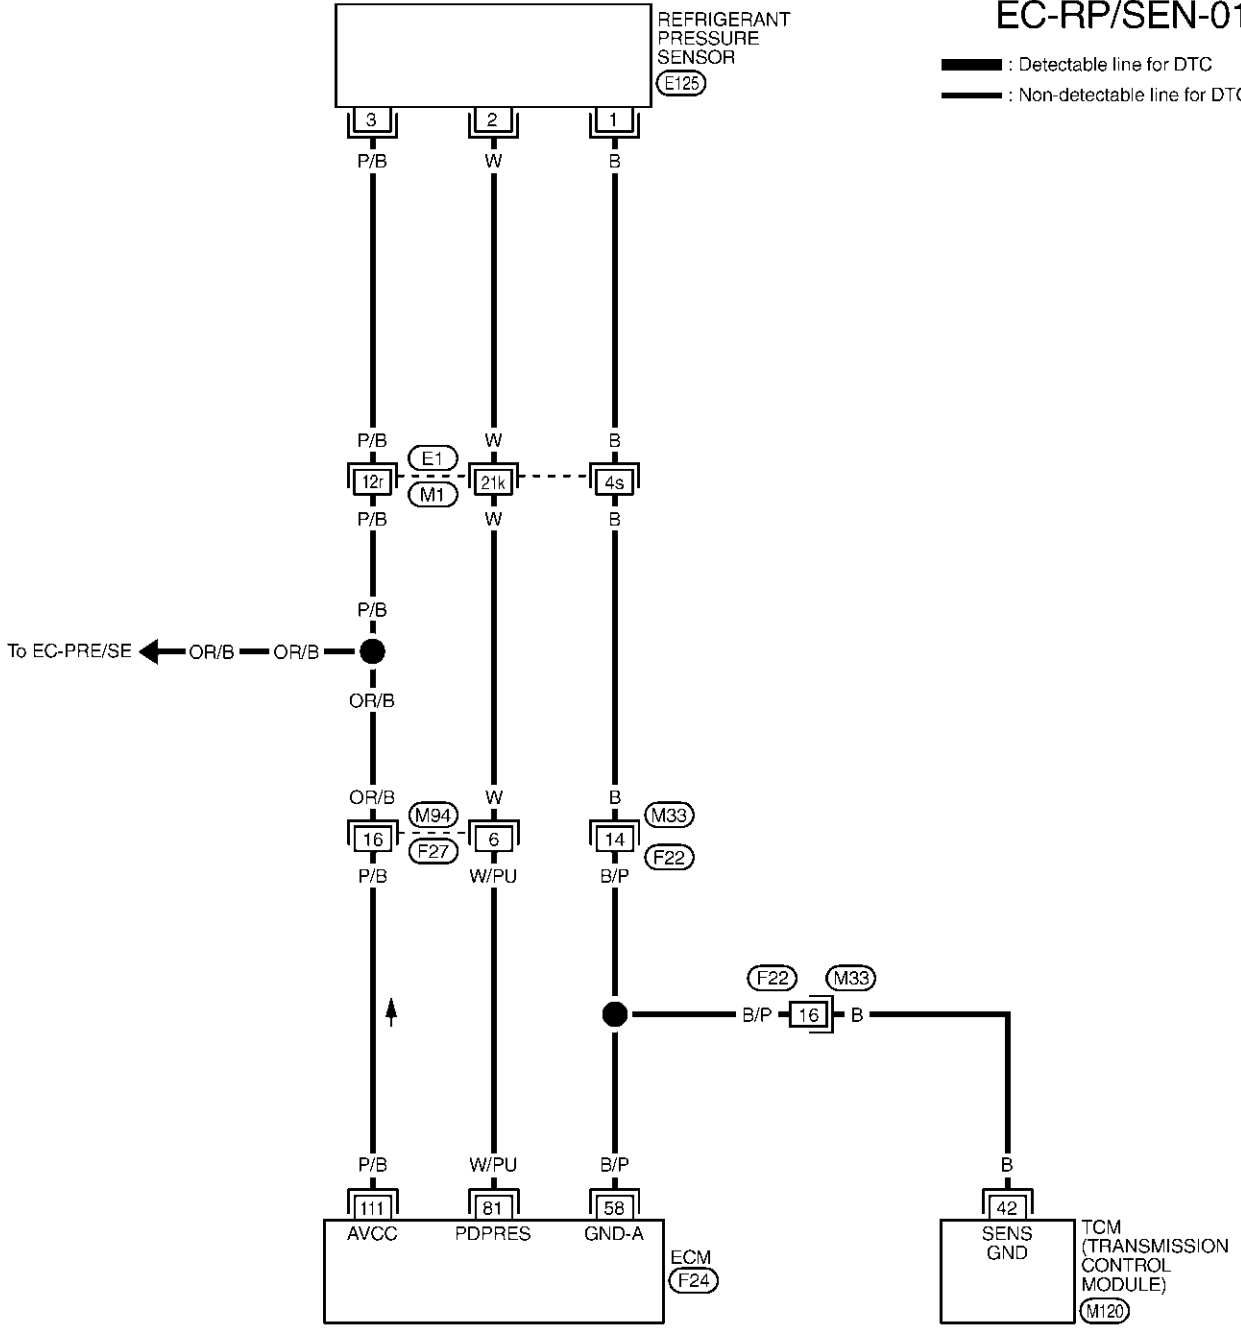

REFER TO THE FOLLOWING.

(E1) -SUPER
MULTIPLE JUNCTION (SMJ)

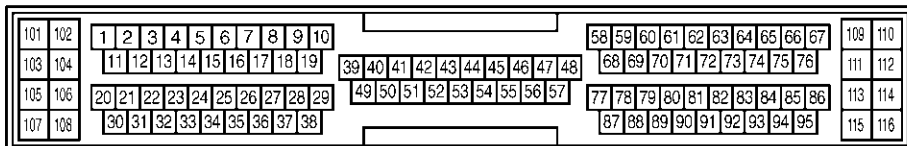


MEC245E



REFRIGERANT PRESSURE SENSOR

Diagnostic Procedure

Diagnostic Procedure

NBEC0638

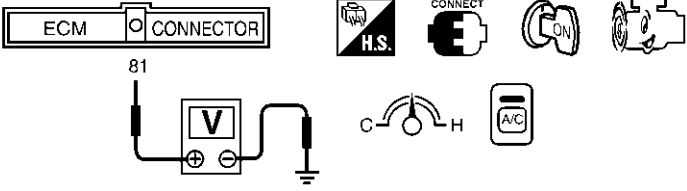1	CHECK REFRIGERANT PRESSURE SENSOR OVERALL FUNCTION	<p>1. Start engine and warm it up to normal operating temperature. 2. Turn A/C switch and blower switch "ON". 3. Check voltage between ECM terminal 81 and ground with CONSULT-II or tester.</p> <div style="display: flex; justify-content: space-around; align-items: center;">  <div style="text-align: right;"> <p>Voltage: 1 - 4V</p> </div> </div> <p style="text-align: right;">SEF617XA</p> <p style="text-align: center;">OK or NG</p>
OK	▶	INSPECTION END
NG	▶	GO TO 2.

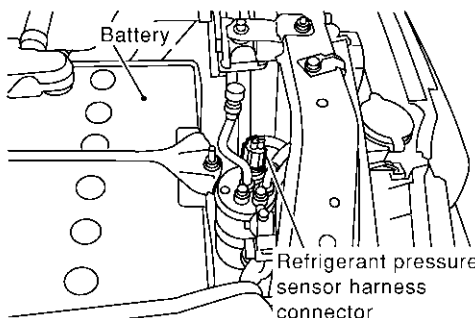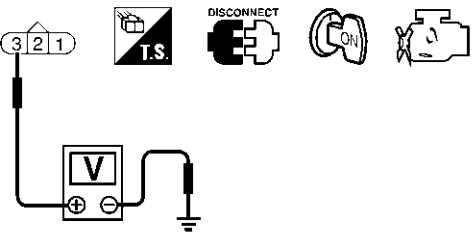2	CHECK REFRIGERANT PRESSURE SENSOR POWER SUPPLY CIRCUIT	<p>1. Turn A/C switch and blower switch "OFF". 2. Stop engine. 3. Disconnect refrigerant pressure sensor harness connector.</p> <div style="display: flex; justify-content: center; align-items: center;">  </div> <p style="text-align: right;">SEF029Z</p> <p>4. Turn ignition switch "ON". 5. Check voltage between refrigerant pressure sensor terminal 3 and ground with CONSULT-II or tester.</p> <div style="display: flex; justify-content: space-around; align-items: center;">  <div style="text-align: right;"> <p>Voltage: Approximately 5V</p> </div> </div> <p style="text-align: right;">SEF030Z</p> <p style="text-align: center;">OK or NG</p>
OK	▶	GO TO 4.
NG	▶	GO TO 3.

REFRIGERANT PRESSURE SENSOR

Diagnostic Procedure (Cont'd)

3	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none"> ● Harness connectors E1, M1 ● Harness connectors M94, F27 ● Harness for open or short between ECM and refrigerant pressure sensor 	
▶	Repair harness or connectors.

GI

MA

EM

4	CHECK REFRIGERANT PRESSURE SENSOR GROUND CIRCUIT FOR OPEN AND SHORT
1. Turn ignition switch "OFF". 2. Check harness continuity between refrigerant pressure sensor terminal 1 and engine ground. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to power.	
OK or NG	
OK	▶ GO TO 6.
NG	▶ GO TO 5.

LC

EC

FE

5	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none"> ● Harness connectors E1, M1 ● Harness connectors M33, F22 ● Harness for open between ECM and refrigerant pressure sensor ● Harness for open between TCM (Transmission control module) and refrigerant pressure sensor 	
▶	Repair open circuit or short to power in harness or connectors.

AT

TF

PD

6	CHECK REFRIGERANT PRESSURE SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT
1. Disconnect ECM harness connector. 2. Check harness continuity between ECM terminal 81 and refrigerant pressure sensor terminal 2. Refer to Wiring Diagram. Continuity should exist. 3. Also check harness for short to ground and short to power.	
OK or NG	
OK	▶ GO TO 8.
NG	▶ GO TO 7.

AX

SU

BR

ST

7	DETECT MALFUNCTIONING PART
Check the following. <ul style="list-style-type: none"> ● Harness connectors E1, M1 ● Harness connectors M94, F27 ● Harness for open or short between ECM and refrigerant pressure sensor 	
▶	Repair open circuit or short to ground or short to power in harness or connectors.

RS

BT

HA

8	CHECK REFRIGERANT PRESSURE SENSOR
Refer to HA-15, "Refrigerant pressure sensor".	
OK or NG	
OK	▶ GO TO 9.
NG	▶ Replace refrigerant pressure sensor.

SC

EL

IDX

REFRIGERANT PRESSURE SENSOR

Diagnostic Procedure (Cont'd)

9	CHECK INTERMITTENT INCIDENT
Refer to "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.	
▶	INSPECTION END

ELECTRICAL LOAD SIGNAL

ECM Terminals and Reference Value

ECM Terminals and Reference Value

NBEC0690

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

TERMI- NAL NO.	WIRE COLOR	ITEM	CONDITION	DATA (DC Voltage)
52	PU	Electrical load signal	[Engine is running] ● Rear window defogger: ON ● Hi-beam headlamp: ON	BATTERY VOLTAGE (11 - 14V)
			[Engine is running] ● Electrical load: OFF	0V

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ELECTRICAL LOAD SIGNAL

Wiring Diagram



Wiring Diagram

NBEC0604

EC-LOAD-01

Refer to EL-POWER.

— : Detectable line for DTC
 — : Non-detectable line for DTC

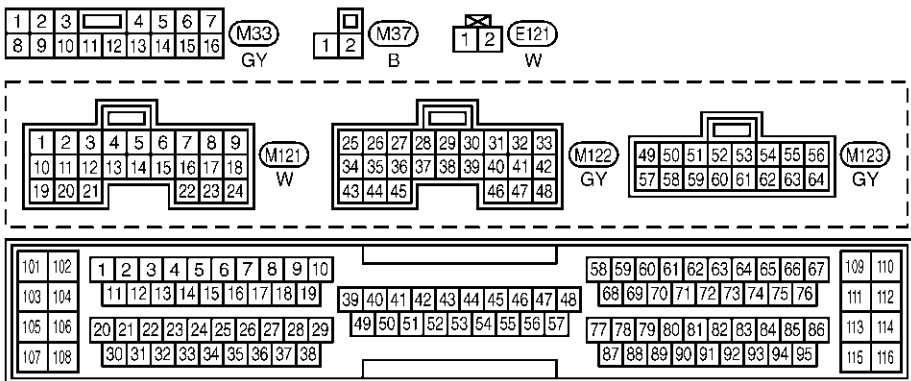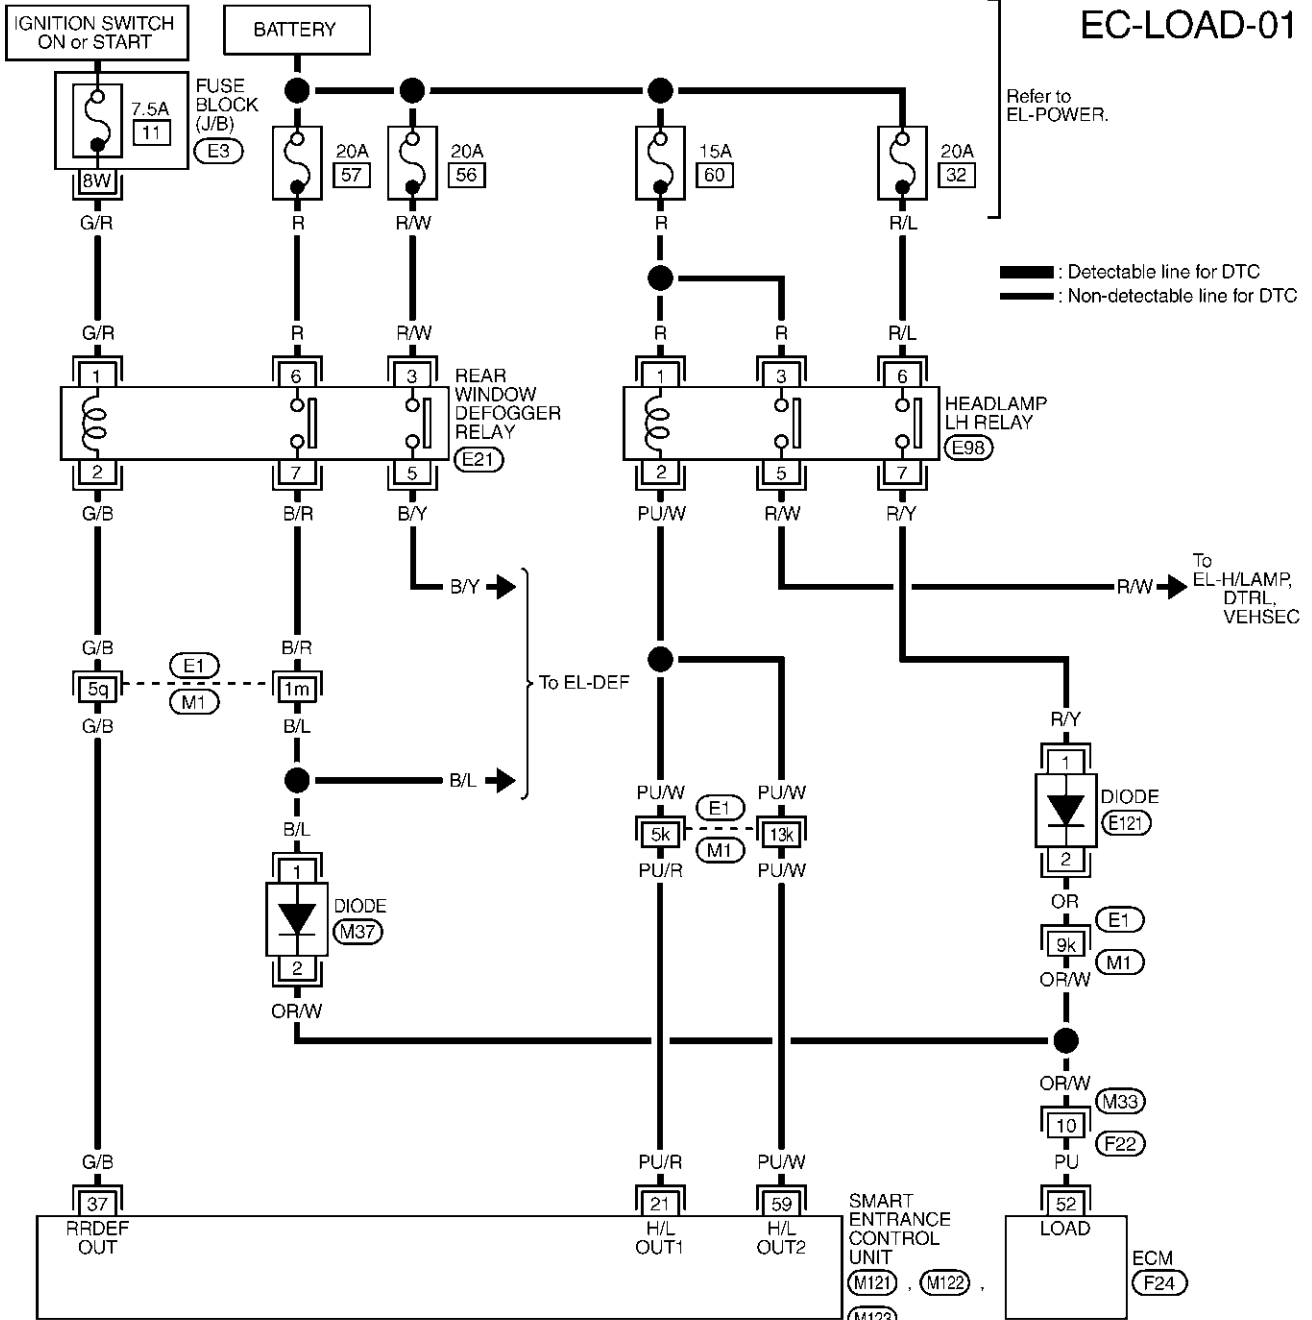


REFER TO THE FOLLOWING.

(E1) -SUPER MULTIPLE

JUNCTION (SMJ)

(E3) -FUSE BLOCK-


JUNCTION BOX (J/B)




MEC246E

Diagnostic Procedure

NBEC0605

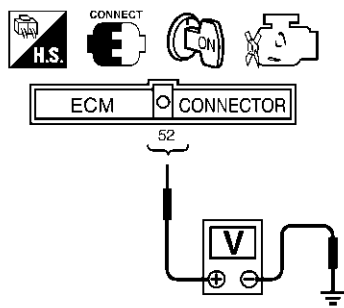1	CHECK LOAD SIGNAL CIRCUIT OVERALL FUNCTION-I							
<p>1. Turn ignition switch "ON". 2. Check voltage between ECM terminal 52 and ground under the following conditions.</p>								
								
<table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th style="width: 60%;">Condition</th> <th>Voltage</th> </tr> </thead> <tbody> <tr> <td>Rear window defogger switch "ON"</td> <td>BATTERY VOLTAGE</td> </tr> <tr> <td>Rear window defogger switch "OFF"</td> <td>0V</td> </tr> </tbody> </table>			Condition	Voltage	Rear window defogger switch "ON"	BATTERY VOLTAGE	Rear window defogger switch "OFF"	0V
Condition	Voltage							
Rear window defogger switch "ON"	BATTERY VOLTAGE							
Rear window defogger switch "OFF"	0V							
SEF610X								
OK or NG								
OK	▶	GO TO 2.						
NG	▶	GO TO 3.						

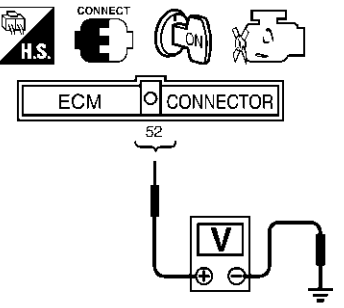2	CHECK LOAD SIGNAL CIRCUIT OVERALL FUNCTION-II							
<p>Check voltage between ECM terminal 52 and ground under the following conditions.</p>								
								
<table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th style="width: 60%;">Condition</th> <th>Voltage</th> </tr> </thead> <tbody> <tr> <td>Lighting switch "ON" at 1st position</td> <td>BATTERY VOLTAGE</td> </tr> <tr> <td>Lighting switch "OFF"</td> <td>0V</td> </tr> </tbody> </table>			Condition	Voltage	Lighting switch "ON" at 1st position	BATTERY VOLTAGE	Lighting switch "OFF"	0V
Condition	Voltage							
Lighting switch "ON" at 1st position	BATTERY VOLTAGE							
Lighting switch "OFF"	0V							
SEF611X								
OK or NG								
OK	▶	INSPECTION END						
NG	▶	GO TO 7.						

3	CHECK REAR WINDOW DEFOGGER FUNCTION	
<p>1. Start engine. 2. Turn "ON" the rear window defogger switch. 3. Check the rear windshield. Is the rear windshield heated up?</p>		
Yes or No		
Yes	▶	GO TO 4.
No	▶	Refer to EL-187, "Rear Window Defogger".

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

ELECTRICAL LOAD SIGNAL

Diagnostic Procedure (Cont'd)

4	CHECK REAR WINDOW DEFOGGER INPUT SIGNAL CIRCUIT FOR OPEN OR SHORT							
<ol style="list-style-type: none"> 1. Stop engine. 2. Disconnect ECM harness connector. 3. Disconnect rear window defogger relay. 4. Check harness continuity between ECM terminal 52 and rear window defogger relay terminal 7. 								
<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>CONDITION 1</p> </div> <div style="text-align: center;"> <p>CONDITION 2</p> </div> </div>								
		<table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th style="width: 15%;">CONDITION</th> <th style="width: 85%;">CONTINUITY</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">1</td> <td style="text-align: center;">Should exist.</td> </tr> <tr> <td style="text-align: center;">2</td> <td style="text-align: center;">Should not exist.</td> </tr> </tbody> </table>	CONDITION	CONTINUITY	1	Should exist.	2	Should not exist.
CONDITION	CONTINUITY							
1	Should exist.							
2	Should not exist.							
<p>5. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>								
OK	▶	GO TO 6.						
NG	▶	GO TO 5.						

SEF031Z

5	DETECT MALFUNCTIONING PART	
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E1, M1 ● Harness connectors M33, F22 ● Diode M37 ● Harness for open and short between ECM and rear window defogger relay 		
▶		Repair open circuit or short to ground or short to power in harness or connectors.

6	CHECK INTERMITTENT INCIDENT	
Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.		
▶		INSPECTION END

7	CHECK HEADLAMP FUNCTION	
<ol style="list-style-type: none"> 1. Start engine. 2. Turn the lighting switch "ON" at 1st position with high beam. 3. Check that headlamps are illuminated. 		
OK or NG		
OK	▶	GO TO 8.
NG	▶	Refer to EL-35, "HEADLAMP (FOR USA)" or EL-52, "HEADLAMP (FOR CANADA) — DAYTIME LIGHT SYSTEM".

ELECTRICAL LOAD SIGNAL

Diagnostic Procedure (Cont'd)

8	CHECK HEADLAMP INPUT SIGNAL CIRCUIT FOR OPEN OR SHORT
<p>1. Stop engine. 2. Disconnect ECM harness connector. 3. Disconnect headlamp LH relay. (Models for USA), daytime light control unit harness connector (Models for Canada). 4. Check harness continuity between ECM terminal 52 and headlamp LH relay terminal 5 under the following conditions.</p>	
<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>CONDITION 1</p> </div> <div style="text-align: center;"> <p>CONDITION 2</p> </div> </div>	
SEC341C	
<p>5. Check harness continuity between ECM terminal 52 and daytime light control unit terminal 5 (with autolight system for Canada) under the following conditions.</p>	
<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>CONDITION 1</p> </div> <div style="text-align: center;"> <p>CONDITION 2</p> </div> </div>	
SEC309C	
<p>6. Also check harness for short to ground and short to power.</p> <p style="text-align: center;">OK or NG</p>	
OK	▶ GO TO 10.
NG	▶ GO TO 9.

9	DETECT MALFUNCTIONING PART
<p>Check the following.</p> <ul style="list-style-type: none"> ● Harness connectors E1, M1 ● Harness connectors M33, F22 ● Diode E121 ● Harness for open and short between ECM and headlamp LH relay or daytime light control unit 	
▶ Repair open circuit or short to ground or short to power in harness or connectors.	

10	CHECK INTERMITTENT INCIDENT
<p>Perform "TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT", EC-152.</p>	
▶ INSPECTION END	

GI
 MA
 EM
 LC
EC
 FE
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX

SERVICE DATA AND SPECIFICATIONS (SDS)

Fuel Pressure Regulator

Fuel Pressure Regulator

NBEC0408

Condition	Fuel pressure at idling kPa (kg/cm ² , psi)
Vacuum hose is connected.	Approximately 235 (2.4, 34)
Vacuum hose is disconnected.	Approximately 294 (3.0, 43)

Idle Speed and Ignition Timing

NBEC0409

Target idle speed*1	No-load*2 (in "P" or N" position)	750±50 rpm
Air conditioner: ON	In "P" or N" position	825 rpm or more
Ignition timing*1	In "P" or N" position	15°±5° BTDC
Throttle position sensor idle position		0.15 - 0.85V

*1: Throttle position sensor harness connector connected

*2: Under the following conditions:

- Air conditioner switch: OFF
- Electric load: OFF (Lights, heater fan & rear window defogger)
- Steering wheel: Kept in straight-ahead position

Mass Air Flow Sensor

NBEC0411

Supply voltage	Battery voltage (11 - 14)V
Output voltage at idle	1.2 - 1.8V
Mass air flow (Using CONSULT-II or GST)	2.0 - 6.0 g-m/sec at idle* 7.0 - 20.0 g-m/sec at 2,500 rpm*

*: Engine is warmed up to normal operating temperature and running under no-load.

Engine Coolant Temperature Sensor

NBEC0412

Temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
50 (122)	0.68 - 1.00
90 (194)	0.236 - 0.260

Heated Oxygen Sensor 1 Heater

NBEC0414

Resistance [at 25°C (77°F)]	3.3 - 4.0Ω
-----------------------------	------------

Heated Oxygen Sensor 2 Heater

NBEC0422

Resistance [at 25°C (77°F)]	3.3 - 4.0Ω
-----------------------------	------------

Fuel Pump

NBEC0415

Resistance [at 25°C (77°F)]	0.2 - 5.0Ω
-----------------------------	------------

IACV-AAC Valve

NBEC0416

Resistance [at 20°C (68°F)]	Approximately 20 - 24Ω
-----------------------------	------------------------

Injector

NBEC0417

Resistance [at 20°C (68°F)]	13.5 - 17.5Ω
-----------------------------	--------------

SERVICE DATA AND SPECIFICATIONS (SDS)

Throttle Position Sensor

Throttle Position Sensor

NBEC0419

Throttle valve conditions	Voltage (at normal operating temperature, engine off, ignition switch ON, throttle opener disengaged)
Completely closed (a)	0.15 - 0.85V
Partially open	Between (a) and (b)
Completely open (b)	3.5 - 4.7V

Calculated Load Value

NBEC0420

	Calculated load value % (Using CONSULT-II or GST)
At idle	14.0 - 33.0
At 2,500 rpm	12.0 - 25.0

Intake Air Temperature Sensor

NBEC0421

Temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
80 (176)	0.27 - 0.38

Crankshaft Position Sensor (REF)

NBEC0423

Resistance [at 20°C (68°F)]	470 - 570Ω
-----------------------------	------------

Fuel Tank Temperature Sensor

NBEC0424

Temperature °C (°F)	Resistance kΩ
20 (68)	2.3 - 2.7
50 (122)	0.79 - 0.90

Camshaft Position Sensor (PHASE)

NBEC0639

Resistance [at 20°C (68°F)]	HITACHI make	1,440 - 1,760Ω
	MITSUBISHI make	2,090 - 2,550Ω