

LT  
**SECTION**  
**LIGHTING SYSTEM**

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

**CONTENTS**

<p><b>PRECAUTIONS</b> ..... 4</p> <p>    Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER” ..... 4</p> <p>    General precautions for service operations ..... 4</p> <p><b>HEADLAMP (FOR USA)</b> ..... 5</p> <p>    Component Parts and Harness Connector Location... 5</p> <p>    System Description ..... 5</p> <p>        OUTLINE ..... 5</p> <p>        XENON HEADLAMP ..... 6</p> <p>        BATTERY SAVER CONTROL ..... 7</p> <p>        AUTO LIGHT OPERATION ..... 7</p> <p>        VEHICLE SECURITY SYSTEM (PANIC ALARM)... 7</p> <p>    CAN Communication System Description ..... 7</p> <p>    Schematic ..... 8</p> <p>    Wiring Diagram — H/LAMP — ..... 9</p> <p>    Terminals and Reference Values for BCM ..... 13</p> <p>    Terminals and Reference Values for IPDM E/R .... 14</p> <p>    How to Proceed With Trouble Diagnosis ..... 14</p> <p>    Preliminary Check ..... 14</p> <p>        CHECK POWER SUPPLY AND GROUND CIRCUIT ..... 14</p> <p>    CONSULT-II Function (BCM) ..... 16</p> <p>        CONSULT-II OPERATION ..... 16</p> <p>        WORK SUPPORT ..... 17</p> <p>        DATA MONITOR ..... 17</p> <p>        ACTIVE TEST ..... 18</p> <p>        SELF-DIAGNOSTIC RESULTS ..... 18</p> <p>    CONSULT-II Function (IPDM E/R) ..... 19</p> <p>        CONSULT-II OPERATION ..... 19</p> <p>        DATA MONITOR ..... 20</p> <p>        ACTIVE TEST ..... 20</p> <p>    Headlamp HI Does Not Illuminate (Both Sides) .... 21</p> <p>    Headlamp HI Does Not Illuminate (One Side) ..... 23</p> <p>    High Beam Indicator Lamp Does Not Illuminate ... 24</p> <p>    Headlamp LO Does Not Illuminate (Both Sides) ... 24</p> <p>    Headlamp LO Does Not Illuminate (One Side) ..... 26</p> <p>    Headlamps Do Not Turn OFF ..... 27</p> <p>    Aiming Adjustment ..... 29</p> <p>        HEADLAMP AIMING ..... 29</p>	<p>    Bulb Replacement ..... 30</p> <p>        HEADLAMP (OUTER SIDE), FOR LOW BEAM.. 30</p> <p>        HEADLAMP (INNER SIDE), FOR HIGH BEAM.. 31</p> <p>        FRONT PARKING LAMP (INNER OR OUTER).. 31</p> <p>        SIDE MARKER LAMP (FRONT) ..... 31</p> <p>    Removal and Installation ..... 31</p> <p>        FRONT COMBINATION LAMP ASSEMBLY ..... 31</p> <p>        INSTALLATION ..... 32</p> <p>    Disassembly and Assembly ..... 32</p> <p>        FRONT COMBINATION LAMP ASSEMBLY ..... 32</p> <p>        DISASSEMBLY ..... 32</p> <p>        ASSEMBLY ..... 32</p> <p><b>HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -</b> ..... 33</p> <p>    Component Parts and Harness Connector Location.. 33</p> <p>    System Description ..... 34</p> <p>        OUTLINE ..... 34</p> <p>        DAYTIME LIGHT OPERATION ..... 34</p> <p>        COMBINATION SWITCH READING FUNCTION.. 34</p> <p>        AUTO LIGHT OPERATION ..... 35</p> <p>    CAN Communication System Description ..... 35</p> <p>    Schematic ..... 36</p> <p>    Wiring Diagram — DTRL — ..... 37</p> <p>    Terminals and Reference Values for BCM ..... 41</p> <p>    How to Proceed With Trouble Diagnosis ..... 42</p> <p>    Preliminary Check ..... 42</p> <p>        CHECK BCM CONFIGURATION ..... 42</p> <p>        INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT ..... 42</p> <p>        INSPECTION PARKING BRAKE SWITCH CIRCUIT ..... 43</p> <p>    CONSULT-II Functions ..... 44</p> <p>    Daytime Light Control Does Not Operate Properly (Normal Headlamps Operate Properly) ..... 44</p> <p>    Aiming Adjustment ..... 46</p> <p>    Bulb Replacement ..... 46</p> <p>    Removal and Installation ..... 46</p> <p>    Disassembly and Assembly ..... 46</p> <p><b>AUTO LIGHT SYSTEM</b> ..... 47</p> <p>    Component Parts and Harness Connector Location.. 47</p>
--	--

System Description .....	48	INSTALLATION .....	79
OUTLINE .....	48	Removal and Installation .....	79
COMBINATION SWITCH READING FUNCTION .....	48	FRONT FOG LAMP .....	79
EXTERIOR LAMP BATTERY SAVER CONTROL .....	48	INSTALLATION .....	79
DELAY TIMER FUNCTION .....	48	<b>TURN SIGNAL AND HAZARD WARNING LAMPS...80</b>	
CAN Communication System Description .....	48	Component Parts and Harness Connector Location .....	80
Major Components and Functions .....	48	System Description .....	80
Schematic .....	49	OUTLINE .....	80
Wiring Diagram — AUTO/L — .....	50	TURN SIGNAL OPERATION .....	80
Terminals and Reference Values for BCM .....	53	HAZARD LAMP OPERATION .....	81
Terminals and Reference Values for IPDM E/R .....	54	REMOTE KEYLESS ENTRY SYSTEM OPERA-	
How to Proceed With Trouble Diagnosis .....	55	TION .....	82
Preliminary Check .....	55	COMBINATION SWITCH READING FUNCTION .....	82
SETTING CHANGE FUNCTIONS .....	55	CAN Communication System Description .....	82
CHECK POWER SUPPLY AND GROUND CIR-		Schematic .....	83
CUIT .....	55	Wiring Diagram — TURN — .....	84
CONSULT-II Function (BCM) .....	57	Terminals and Reference Values for BCM .....	87
CONSULT-II OPERATION .....	57	How to Proceed With Trouble Diagnosis .....	88
WORK SUPPORT .....	58	Preliminary Check .....	89
DATA MONITOR .....	58	CHECK POWER SUPPLY AND GROUND CIR-	
ACTIVE TEST .....	59	CUIT .....	89
SELF-DIAGNOSTIC RESULTS .....	59	CONSULT-II Function (BCM) .....	90
CONSULT-II Function (IPDM E/R) .....	60	CONSULT-II OPERATION .....	90
CONSULT-II OPERATION .....	60	DATA MONITOR .....	91
DATA MONITOR .....	61	ACTIVE TEST .....	91
ACTIVE TEST .....	61	Front Turn Signal Lamp Does Not Operate .....	92
Trouble Diagnosis Chart by Symptom .....	62	Door Mirror Turn Signal Lamp Does Not Operate...93	
Lighting Switch Inspection .....	62	Rear Turn Signal Lamp Does Not Operate .....	94
Optical Sensor System Inspection .....	63	Hazard Warning Lamp Does Not Operate But Turn	
Optical Sensor .....	64	Signal Lamps Operate .....	95
REMOVAL AND INSTALLATION .....	64	Turn Signal Indicator Lamp Does Not Operate .....	96
<b>HEADLAMP AIMING CONTROL .....</b>	<b>65</b>	Bulb Replacement .....	97
System Description .....	65	TURN SIGNAL LAMP (FRONT) .....	97
Wiring Diagram — H/AIM — .....	66	TURN SIGNAL LAMP (REAR) .....	97
Headlamp Aiming Switch .....	68	Removal and Installation .....	97
REMOVAL AND INSTALLATION .....	68	FRONT TURN SIGNAL LAMP .....	97
Switch Circuit Inspection .....	68	REAR TURN SIGNAL LAMP .....	97
<b>FRONT FOG LAMP .....</b>	<b>69</b>	<b>LIGHTING AND TURN SIGNAL SWITCH .....</b>	<b>98</b>
Component Parts and Harness Connector Location .....	69	Removal and Installation .....	98
System Description .....	69	REMOVAL .....	98
OUTLINE .....	69	INSTALLATION .....	98
COMBINATION SWITCH READING FUNCTION .....	70	<b>HAZARD SWITCH .....</b>	<b>99</b>
EXTERIOR LAMP BATTERY SAVER CONTROL .....	70	Removal and Installation .....	99
CAN Communication System Description .....	70	REMOVAL .....	99
Wiring Diagram — F/FOG — .....	71	INSTALLATION .....	99
Terminals and Reference Values for BCM .....	73	<b>COMBINATION SWITCH .....</b>	<b>100</b>
Terminals and Reference Values for IPDM E/R .....	74	Wiring Diagram — COMBSW — .....	100
How to Proceed With Trouble Diagnosis .....	74	Combination Switch Reading Function .....	101
Preliminary Check .....	75	CONSULT-II Function (BCM) .....	101
CHECK POWER SUPPLY AND GROUND CIR-		CONSULT-II OPERATION .....	101
CUIT .....	75	DATA MONITOR .....	102
CONSULT-II Functions .....	76	Combination Switch Inspection .....	103
Front Fog Lamps Do Not Illuminate (Both Sides) ...76		Removal and Installation .....	105
Front Fog Lamp Does Not Illuminate (One Side) ...77		Switch Circuit Inspection .....	105
Aiming Adjustment .....	78	<b>STOP LAMP .....</b>	<b>106</b>
Bulb Replacement .....	79	System Description .....	106
FRONT FOG LAMP .....	79	Wiring Diagram — STOP/L — .....	107
		Bulb Replacement .....	108
		HIGH-MOUNTED STOP LAMP .....	108

STOP LAMP .....	108	Component Parts and Harness Connector Location	126	
Removal and Installation .....	108	System Description .....	126	A
HIGH_MOUNTED STOP LAMP .....	108	TRAILER TAIL LAMP OPERATION .....	127	
STOP LAMP .....	108	TRAILER BRAKE, TURN SIGNAL AND HAZARD		
<b>BACK-UP LAMP .....</b>	<b>109</b>	LAMP OPERATION .....	127	B
Wiring Diagram — BACK/L — .....	109	TRAILER BRAKE OPERATION .....	128	
Bulb Replacement .....	110	TRAILER POWER SUPPLY OPERATION .....	128	
BACK-UP LAMP .....	110	Schematic .....	129	C
INSTALLATION .....	110	Wiring Diagram — T/TOW — .....	130	
Removal and Installation .....	110	<b>INTERIOR ROOM LAMP .....</b>	<b>134</b>	
BACK-UP LAMP .....	110	Component Parts and Harness Connector Location	134	D
<b>PARKING, LICENSE PLATE AND TAIL LAMPS ...</b>	<b>111</b>	System Description .....	135	
Component Parts and Harness Connector Location	111	POWER SUPPLY AND GROUND .....	135	
System Description .....	111	SWITCH OPERATION .....	136	E
OPERATION BY LIGHTING SWITCH .....	112	ROOM LAMP TIMER OPERATION .....	136	
COMBINATION SWITCH READING FUNCTION	112	INTERIOR LAMP BATTERY SAVER CONTROL	137	
EXTERIOR LAMP BATTERY SAVER CONTROL	112	Schematic .....	138	
CAN Communication System Description .....	112	Wiring Diagram — INT/L — .....	140	F
Schematic .....	113	Terminals and Reference Values for BCM .....	147	
Wiring Diagram — TAIL/L — .....	114	How to Proceed With Trouble Diagnosis .....	148	
Terminals and Reference Values for BCM .....	117	Preliminary Check .....	148	G
Terminals and Reference Values for IPDM E/R ...	118	INSPECTION FOR POWER SUPPLY AND		
How to Proceed With Trouble Diagnosis .....	118	GROUND CIRCUIT .....	148	
Preliminary Check .....	118	CONSULT-II Function (BCM) .....	149	H
CHECK POWER SUPPLY AND GROUND CIR-		CONSULT-II OPERATION .....	149	
CUIT .....	118	WORK SUPPORT .....	150	
CONSULT-II Functions .....	119	DATA MONITOR .....	150	
Parking, License Plate and/or Tail Lamps Do Not		ACTIVE TEST .....	151	I
Illuminate .....	120	Room/Map Lamp Control Does Not Operate .....	151	
Parking, License Plate and Tail Lamps Do Not Turn		Personal Lamp Control Does Not Operate (Room/		
OFF (After Approx. 10 Minutes) .....	123	Map Lamps Operate) .....	153	J
Bulb Replacement .....	124	All Step/Foot/Puddle Lamps Do Not Operate .....	154	
FRONT PARKING LAMP .....	124	All Interior Room Lamps Do Not Operate .....	155	
LICENSE PLATE LAMP .....	124	Ignition Keyhole Illumination Control Does Not		
SIDE MARKER LAMP (FRONT) .....	124	Operate .....	155	LT
TAIL LAMP .....	124	<b>ILLUMINATION .....</b>	<b>157</b>	
Removal and Installation .....	124	Component Parts and Harness Connector Location	157	L
FRONT PARKING LAMP .....	124	System Description .....	157	
LICENSE PLATE LAMP .....	124	ILLUMINATION OPERATION BY LIGHTING		
INSTALLATION .....	124	SWITCH .....	158	M
SIDE MARKER LAMP (REAR) .....	124	EXTERIOR LAMP BATTERY SAVER CONTROL	159	
TAIL LAMP .....	124	CAN Communication System Description .....	159	
<b>REAR COMBINATION LAMP .....</b>	<b>125</b>	Schematic .....	160	
Bulb Replacement .....	125	Wiring Diagram — ILL — .....	163	
SIDE MARKER LAMP (REAR) .....	125	Removal and Installation of Illumination Control		
TAIL LAMP .....	125	Switch .....	174	
TURN SIGNAL .....	125	REMOVAL .....	174	
STOP LAMP .....	125	INSTALLATION .....	174	
INSTALLATION .....	125	<b>BULB SPECIFICATIONS .....</b>	<b>175</b>	
Removal and Installation .....	125	Headlamp .....	175	
REAR COMBINATION LAMP .....	125	Exterior Lamp .....	175	
<b>TRAILER TOW .....</b>	<b>126</b>	Interior Lamp/Illumination .....	175	

# PRECAUTIONS

## PRECAUTIONS

PF0:00011

### Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

EKS00B7P

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.



#### WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

### General precautions for service operations

EKS00B7Q

- Never work with wet hands.
- Xenon headlamp includes high voltage generating part. Be sure to disconnect battery negative cable (negative terminal) or power fuse before removing, installing, or touching the xenon headlamp (including lamp bulb).
- Turn the lighting switch OFF before disconnecting and connecting the connector.
- When turning the xenon headlamp on and while it is illuminated, never touch the harness, bulb, and socket of the headlamp.
- When checking the headlamp on/off operation, check it on vehicle and with the power connected to the vehicle-side connector.
- Do not touch the headlamp bulb glass surface with bare hands or allow oil or grease to get on it. Do not touch the headlamp bulb just after the headlamp is turned off, because it is very hot.
- Install the xenon headlamp bulb socket correctly. If it is installed improperly, high-voltage leak or corona discharge may occur that can melt the bulb, connector, and housing. Do not illuminate the xenon headlamp bulb out of the headlamp housing. Doing so can cause fire and harm your eyes.
- When the bulb has burned out, wrap it in a thick vinyl bag and discard. Do not break the bulb.
- Leaving the bulb removed from the headlamp housing for a long period of time can deteriorate the performance of the lens and reflector (dirt, clouding). Always prepare a new bulb and have it on hand when replacing the bulb.
- Do not use organic solvent (paint thinner or gasoline) to clean lamps and to remove old sealant.

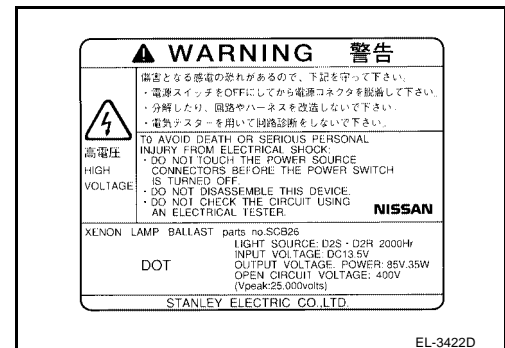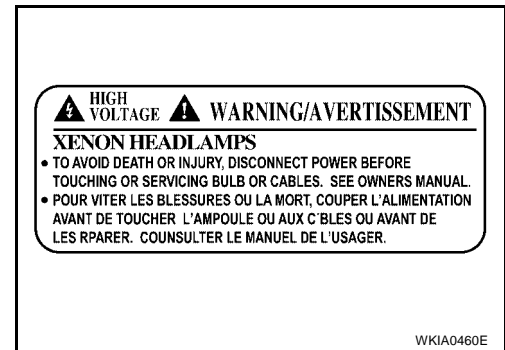


# HEADLAMP (FOR USA)

PFP:26010

EKS00B7S

## HEADLAMP (FOR USA)

### Component Parts and Harness Connector Location

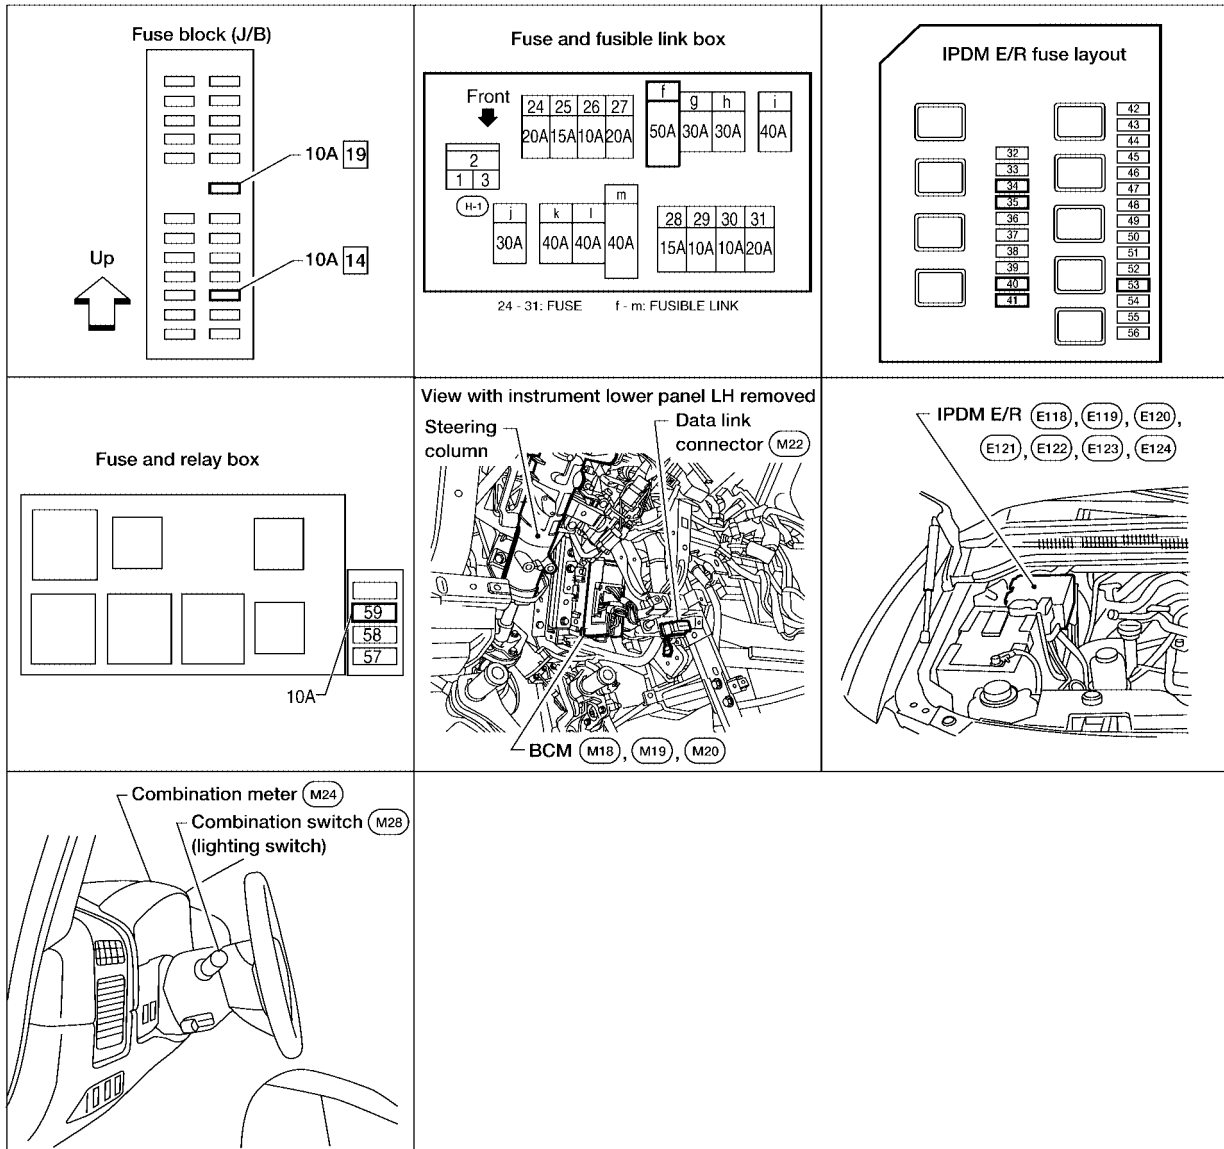

WKIA3463E

EKS00B7T

## System Description

Control of the headlamp system operation is dependent upon the position of the combination switch (lighting switch). When the lighting switch is placed in the 2ND position, the BCM (body control module) receives input requesting the headlamps (and tail lamps) illuminate. This input is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the headlamp high and headlamp low relay coils. When energized, these relays direct power to the respective headlamps, which then illuminate.

## OUTLINE

Power is supplied at all times

- to ignition relay, located in the IPDM E/R, and
- to headlamp high relay, located in the IPDM E/R, and
- to headlamp low relay, located in the IPDM E/R, and
- through 20A fuse (No. 53, located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- through 50A fusible link (letter f , located in the fuse and fusible link box)

## HEADLAMP (FOR USA)

---

- to BCM terminal 70.

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse (No. 59, located in the fuse and relay box)
- to BCM terminal 38.

Ground is supplied

- to BCM terminal 67
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 59
- through grounds E9, E15 and E24.

### Low Beam Operation

With the lighting switch in 2ND position, the BCM receives input requesting the headlamps to illuminate. This input is communicated to the IPDM E/R across the CAN communication lines. The CPU of the IPDM E/R controls the headlamp low relay coil. When energized, this relay directs power

- through 15A fuse (No. 41, located in the IPDM E/R)
- through IPDM E/R terminal 54
- to front combination lamp RH terminal 5, and
- through 15A fuse (No. 40, located in the IPDM E/R)
- through IPDM E/R terminal 52
- to front combination lamp LH terminal 5.

Ground is supplied

- to front combination lamp LH and RH terminal 1
- through grounds E9, E15 and E24.

With power and ground supplied, low beam headlamps illuminate.

### High Beam Operation/Flash-to-Pass Operation

With the lighting switch in 2ND position and placed in HIGH or PASS position, the BCM receives input requesting the headlamp high beams to illuminate. This input is communicated to the IPDM E/R across the CAN communication lines. The CPU of the combination meter controls the ON/OFF status of the HIGH BEAM indicator. The CPU of the IPDM E/R controls the headlamp high relay coil. When energized, this relay directs power

- through 10A fuse (No. 34, located in the IPDM E/R)
- through IPDM E/R terminal 56
- to front combination lamp RH terminal 6, and
- through 10A fuse (No. 35, located in the IPDM E/R)
- through IPDM E/R terminal 55
- to front combination lamp LH terminal 6.

Ground is supplied

- to front combination lamp LH and RH terminal 2
- through grounds E9, E15 and E24.

With power and ground supplied, the high beam headlamps illuminate.

### XENON HEADLAMP

Xenon type headlamp is adopted to the low beam headlamps. Xenon bulbs do not use a filament. Instead, they produce light when a high voltage current is passed between two tungsten electrodes through a mixture of xenon (an inert gas) and certain other metal halides. In addition to added lighting power, electronic control of the power supply gives the headlamps stable quality and tone color.

Following are some of the many advantages of the xenon type headlamp.

- The light produced by the headlamps is a white color comparable to sunlight that is easy on the eyes.
- Light output is nearly double that of halogen headlamps, affording increased area of illumination.
- The light features a high relative spectral distribution at wavelengths to which the human eye is most sensitive. This means that even in the rain, more light is reflected back from the road surface toward the vehicle, for added visibility.

# HEADLAMP (FOR USA)

- Power consumption is approximately 25 percent less than halogen headlamps, reducing battery load.

## BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 2ND position (ON), and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated.

Under this condition, the headlamps remain illuminated for 5 minutes, unless the combination switch (lighting switch) position is changed. If the combination switch (lighting switch) position is changed, then the headlamps are turned off.

## AUTO LIGHT OPERATION

Refer to [LT-48, "System Description"](#) for auto light operation.

## VEHICLE SECURITY SYSTEM (PANIC ALARM)

The vehicle security system (panic alarm) will flash the high beams if the system is triggered. Refer to [BL-48, "Panic Alarm Operation"](#).

## CAN Communication System Description

EKS00B7U

Refer to [LAN-26, "CAN COMMUNICATION"](#).


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M

LT

# HEADLAMP (FOR USA)

## Schematic

EKS00B7V

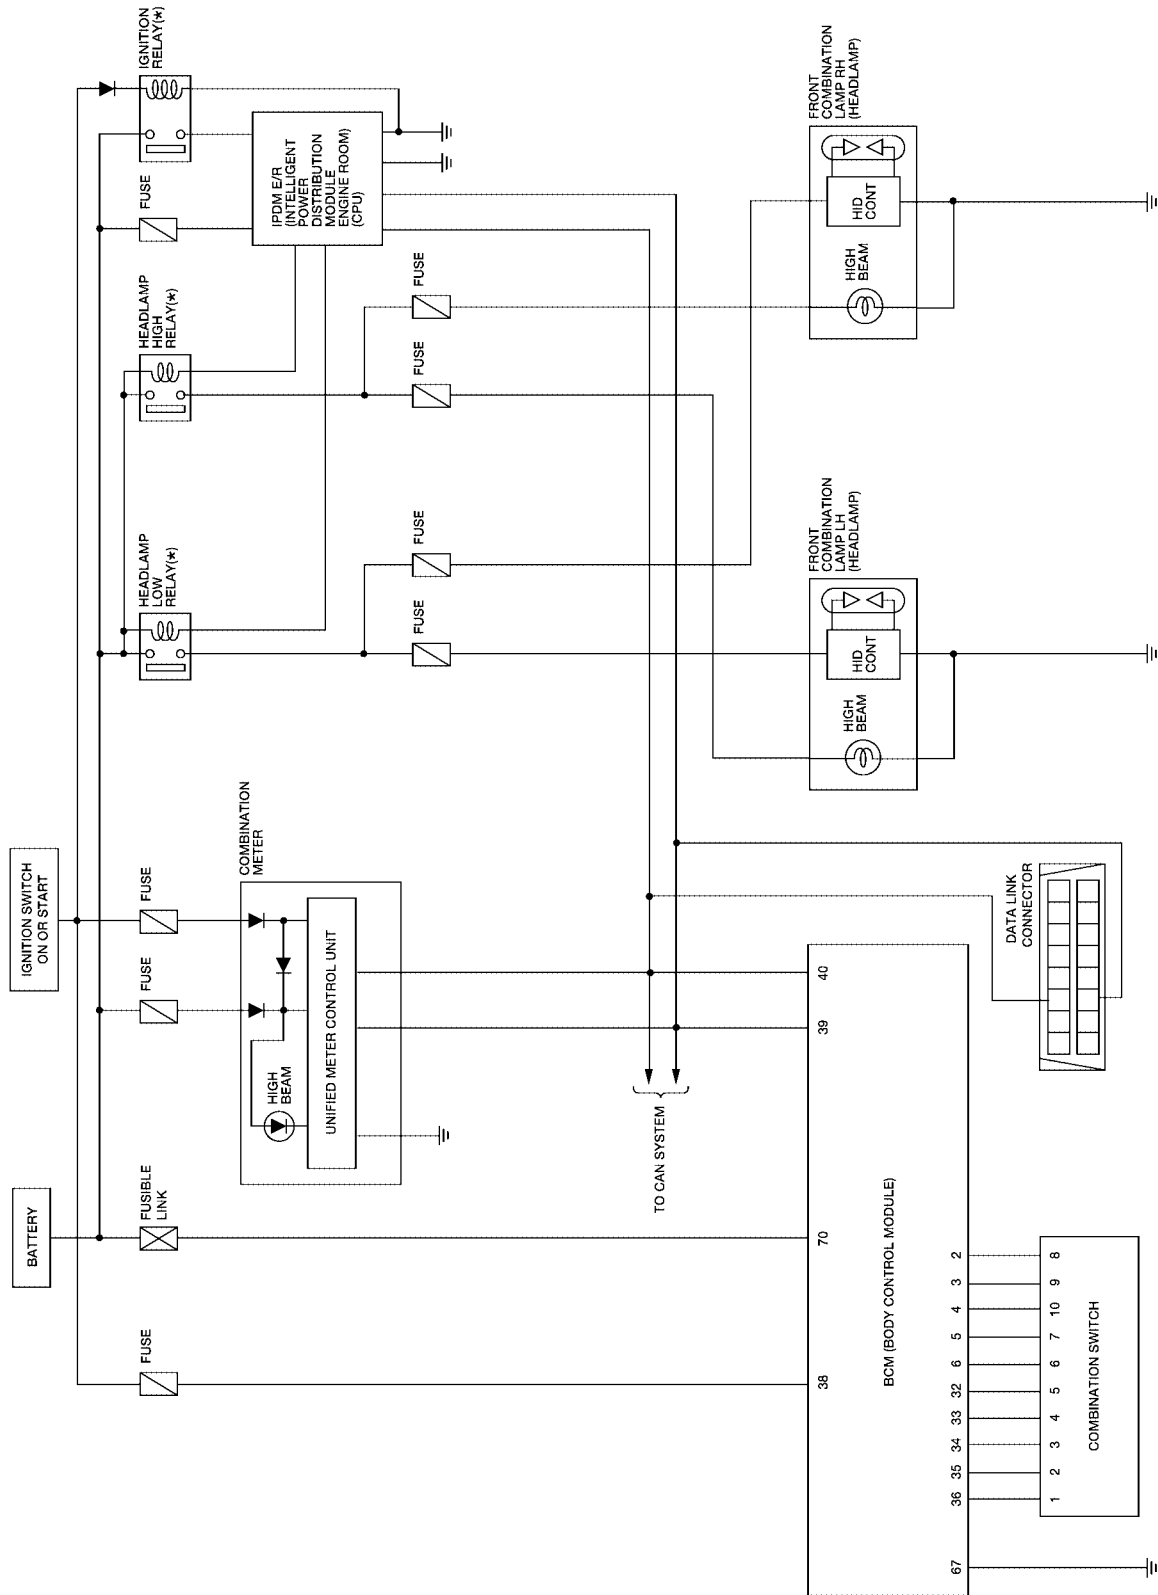

\* : THIS RELAY IS BUILT INTO THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

WKWA3637E





# HEADLAMP (FOR USA)

## Wiring Diagram — H/LAMP —

EKS00B7W

### LT-H/LAMP-01



— : DATA LINE

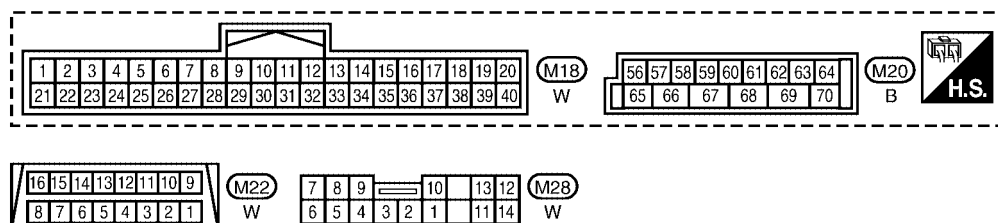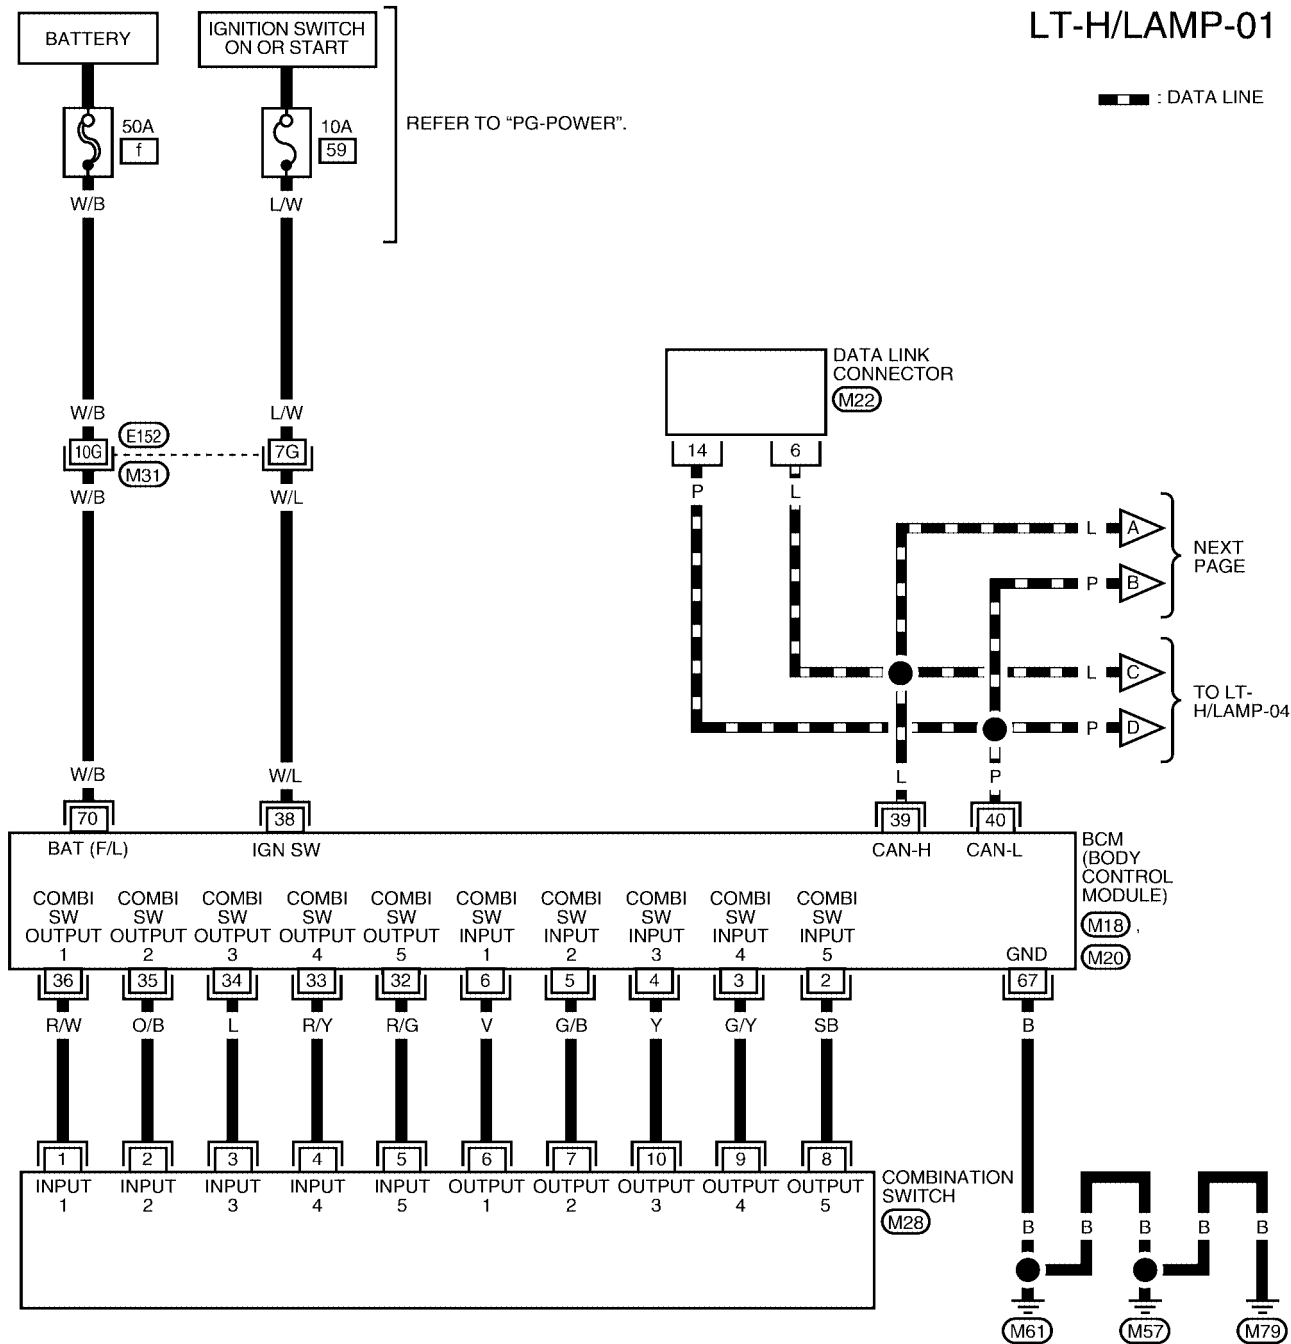

REFER TO THE FOLLOWING.  
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)



# HEADLAMP (FOR USA)

LT-H/LAMP-02

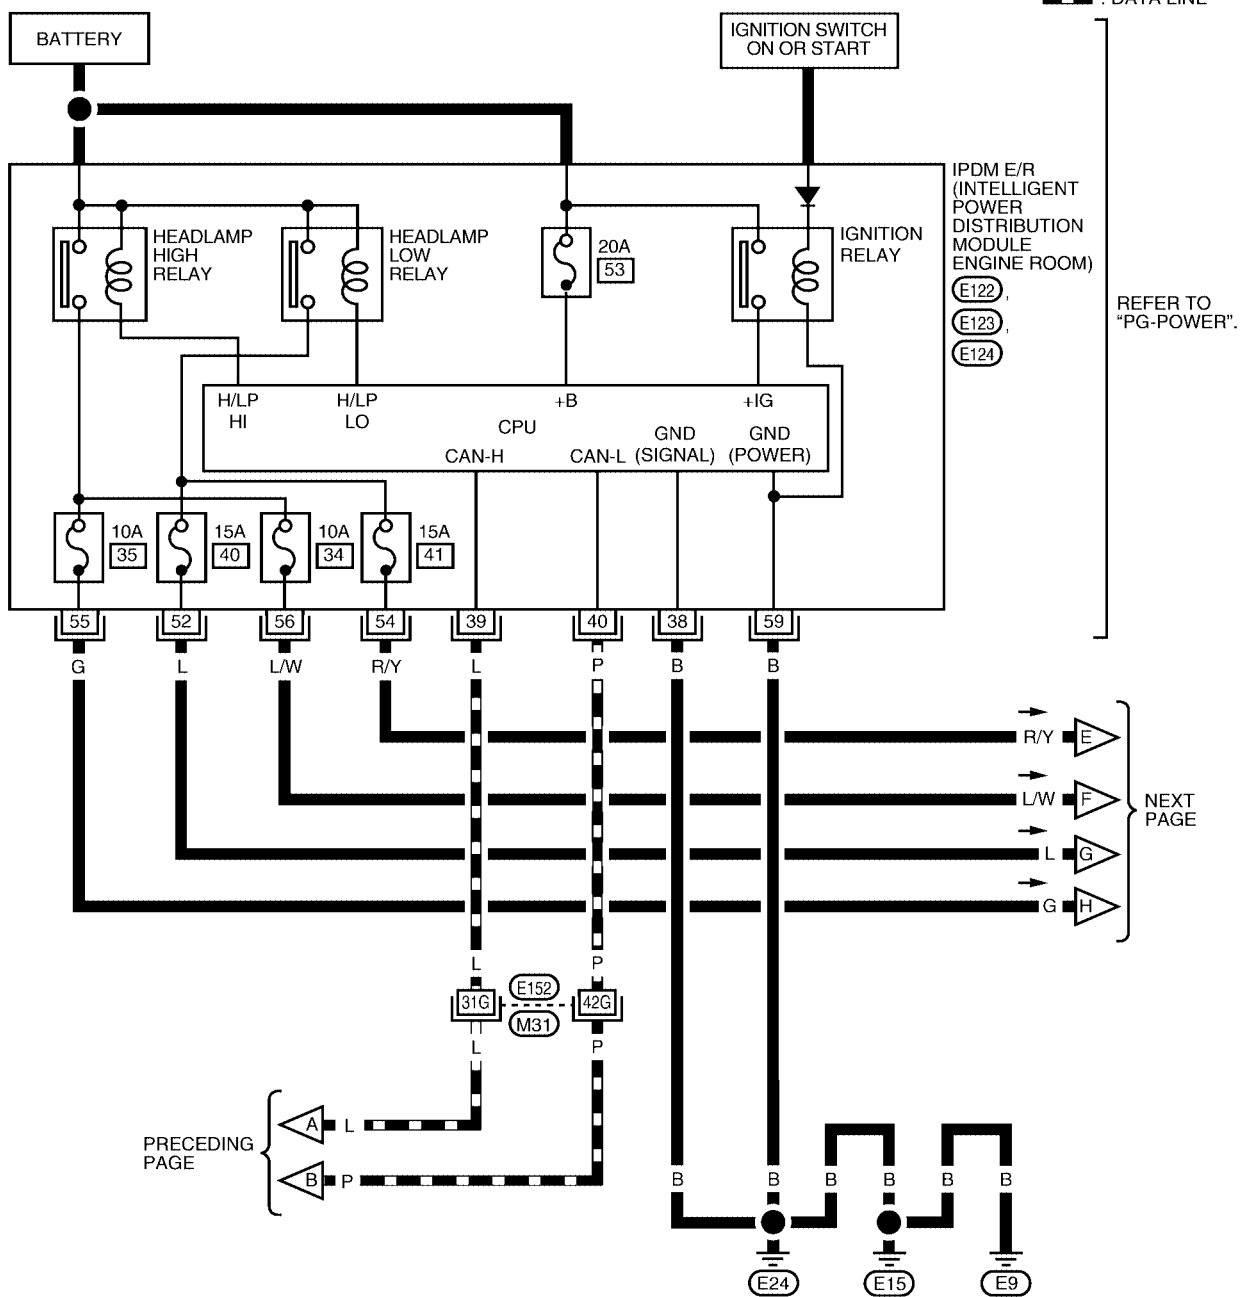

# HEADLAMP (FOR USA)

LT-H/LAMP-03


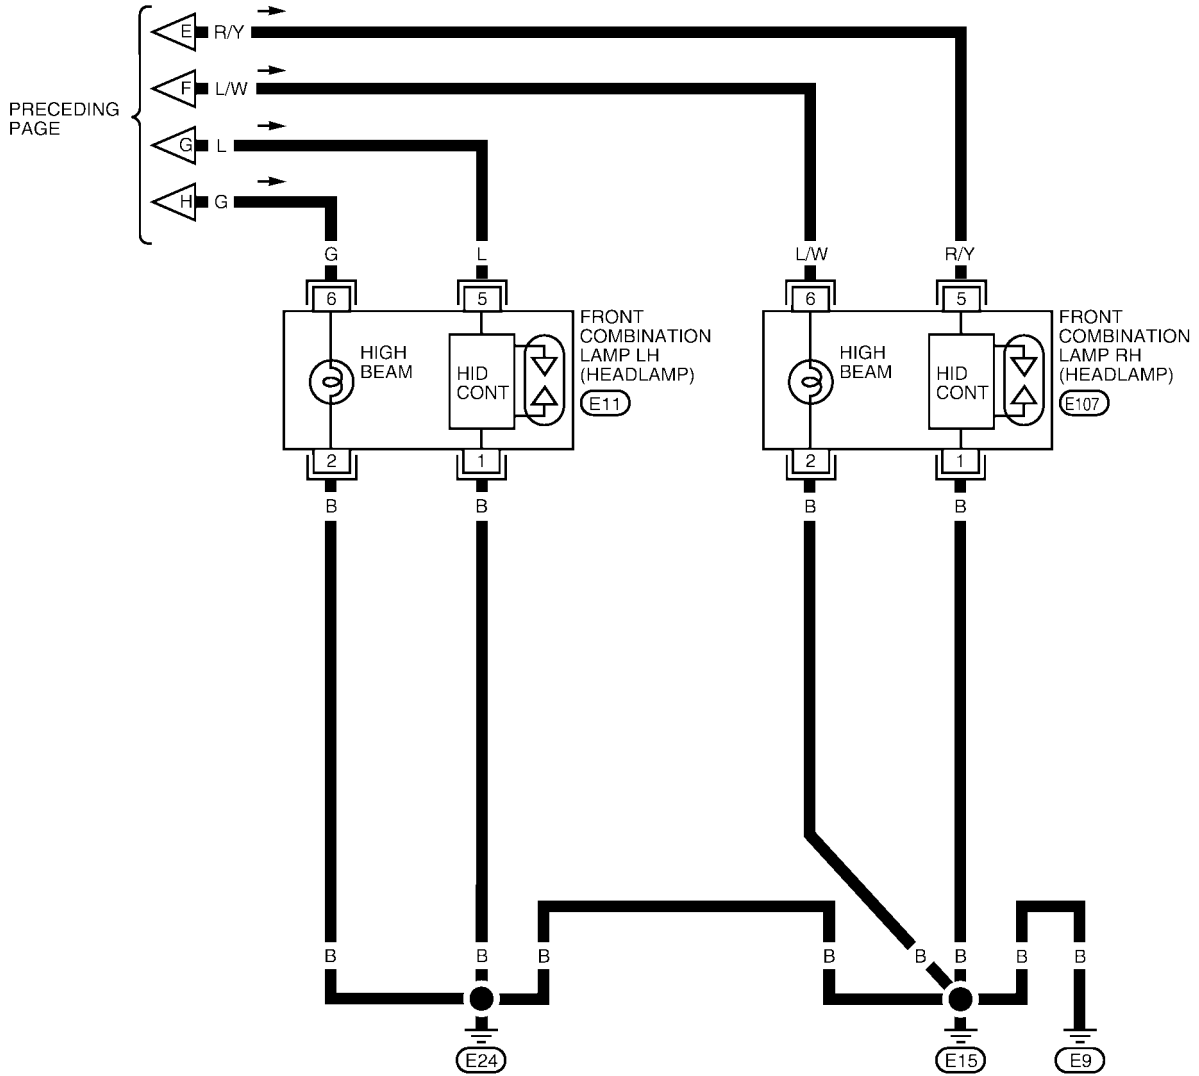


WKWA2482E

# HEADLAMP (FOR USA)

LT-H/LAMP-04

— : DATA LINE






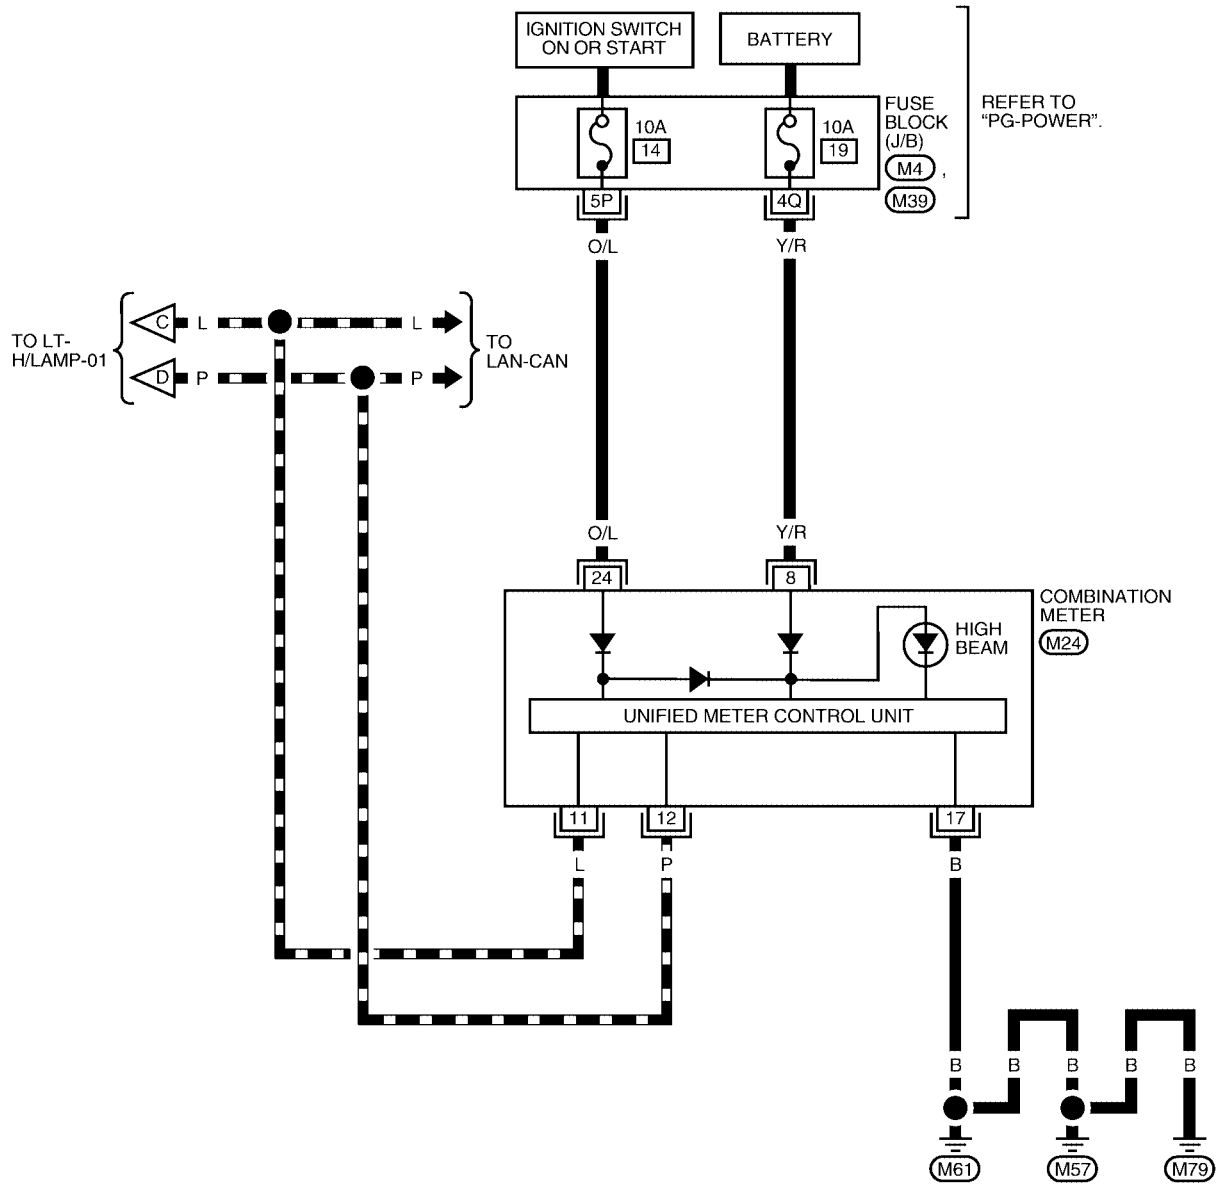



WKWA3640E

# HEADLAMP (FOR USA)


## Terminals and Reference Values for BCM

EKS00B7X

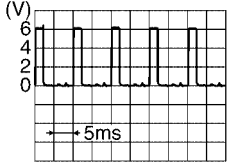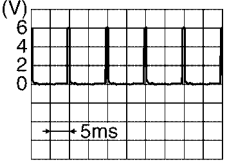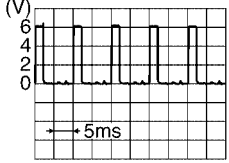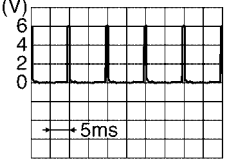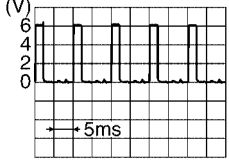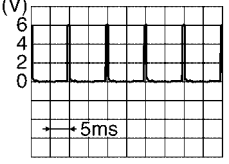Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
2	SB	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
3	G/Y	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
4	Y	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
5	G/B	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
6	V	Combination switch input 1			
32	R/G	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
33	R/Y	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
34	L	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# HEADLAMP (FOR USA)

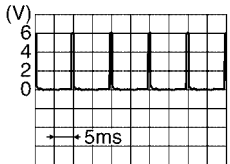Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
35	O/B	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	
36	R/W	Combination switch output 1			
38	W/L	Ignition switch (ON)	ON	—	Battery voltage
39	L	CAN-H	—	—	—
40	P	CAN-L	—	—	—
67	B	Ground	ON	—	0V
70	W/B	Battery power supply (fusible link)	OFF	—	Battery voltage

## Terminals and Reference Values for IPDM E/R

EKS00B7Y

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)	
			Ignition switch	Operation or condition		
38	B	Ground	ON	—	0V	
39	L	CAN-H	—	—	—	
40	P	CAN-L	—	—	—	
52	L	Headlamp low (LH)	ON	Lighting switch 2ND position	OFF	0V
					ON	Battery voltage
54	R/Y	Headlamp low (RH)	ON	Lighting switch 2ND position	OFF	0V
					ON	Battery voltage
55	G	Headlamp high (LH)	ON	Lighting switch HIGH or PASS position	OFF	0V
					ON	Battery voltage
56	L/W	Headlamp high (RH)	ON	Lighting switch HIGH or PASS position	OFF	0V
					ON	Battery voltage
59	B	Ground	ON	—	0V	

## How to Proceed With Trouble Diagnosis

EKS00B7Z

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-5, "System Description"](#).
3. Perform the Preliminary Check. Refer to [LT-14, "Preliminary Check"](#).
4. Check symptom and repair or replace the cause of malfunction.
5. Does the headlamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

## Preliminary Check

EKS00B80

### CHECK POWER SUPPLY AND GROUND CIRCUIT

#### 1. CHECK FUSES OR FUSIBLE LINK

Check for blown fuses or fusible link.

Unit	Power source	Fuse and fusible link No.
BCM	Battery	f
	Ignition switch ON or START position	59

# HEADLAMP (FOR USA)

Unit	Power source	Fuse and fusible link No.
IPDM E/R	Battery	34
		35
		40
		41
		53

Refer to [LT-9, "Wiring Diagram — H/LAMP —"](#) .

OK or NG

OK >> GO TO 2.

NG >> If fuse or fusible link is blown, be sure to eliminate cause of malfunction before installing new fuse or fusible link. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

## 2. CHECK POWER SUPPLY CIRCUIT


1. Disconnect BCM connectors.
2. Check voltage between BCM harness connector and ground.

BCM		(-)	Ignition switch position		
(+) Connector	Terminal		OFF	ACC	ON
M18	38	Ground	0V	0V	Battery voltage
M20	70		Battery voltage	Battery voltage	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between BCM and fuse or fusible link.

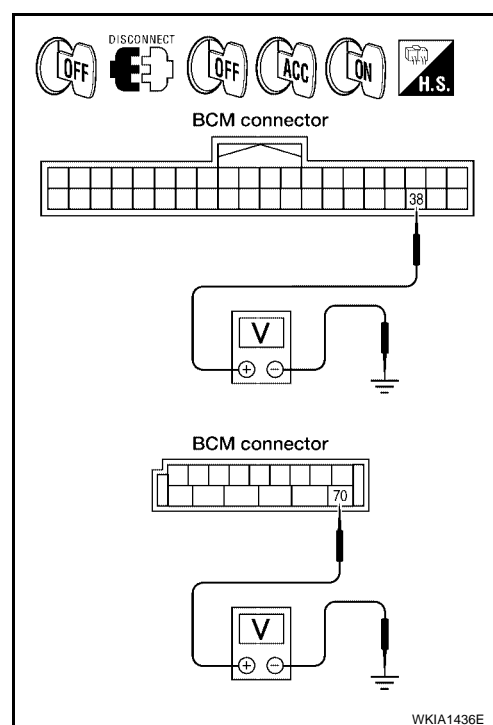

## 3. CHECK GROUND CIRCUIT


Check continuity between BCM harness connector and ground.

BCM			Continuity
Connector	Terminal		
M20	67	Ground	Yes

OK or NG

OK >> Inspection End.

NG >> Check ground circuit harness.

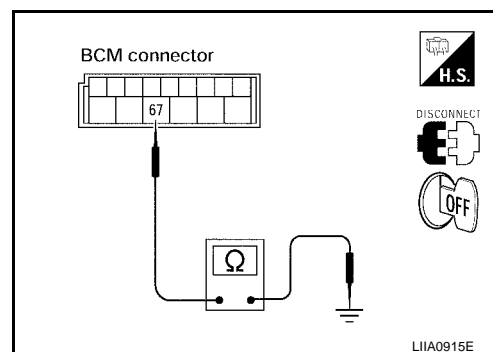

# HEADLAMP (FOR USA)

EKS00B81

## CONSULT-II Function (BCM)

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

## CONSULT-II OPERATION


### CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

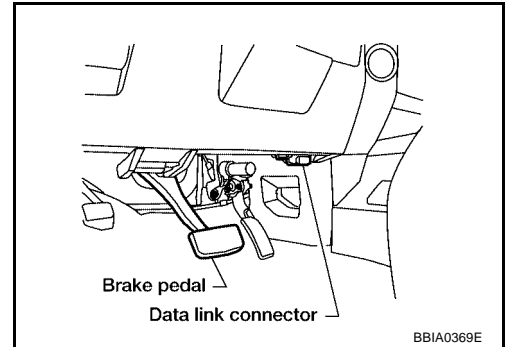

2. Touch "START (NISSAN BASED VHCL)".

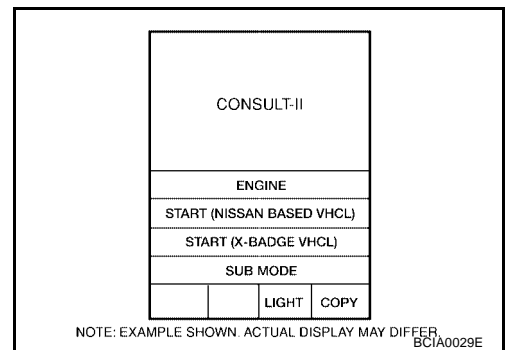


3. Touch "BCM" on "SELECT SYSTEM" screen. If "BCM" is not indicated, go to [GI-40, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

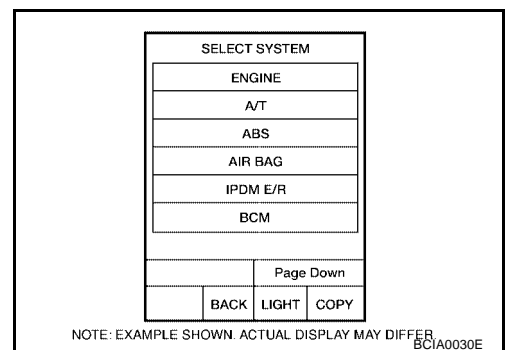



# HEADLAMP (FOR USA)

4. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.

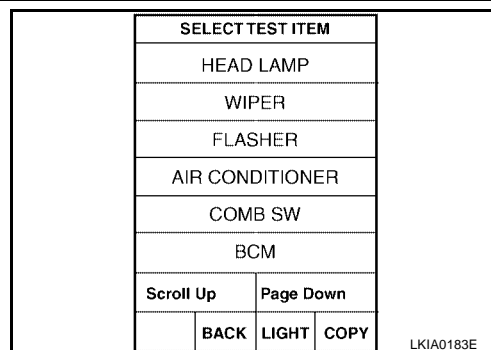

## WORK SUPPORT

### Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch item on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "CHANGE SETT".
6. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
7. Touch "END".

### Display Item List

Item	Description	CONSULT-II	Factory setting
BATTERY SAVER SET	Exterior lamp battery saver control mode can be changed in this mode. Selects exterior lamp battery saver control mode between ON/OFF.	ON	×
		OFF	—

## DATA MONITOR

### Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects and monitors individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch individual items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

### Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
ACC ON SW "ON/OFF"	Displays "ACC (ON)/OFF, Ignition OFF (OFF)" status judged from ignition switch signal.
HI BEAM SW "ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.
HEAD LAMP SW 1 "ON/OFF"	Displays status (headlamp switch 1: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
HEAD LAMP SW 2 "ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
LIGHT SW 1ST "ON/OFF"	Displays status (lighting switch 1st position: ON/Others: OFF) of lighting switch judged from lighting switch signal.

## HEADLAMP (FOR USA)

Monitor item	Contents
AUTO LIGHT SW      "ON/OFF"	Displays status of the lighting switch as judged from the lighting switch signal. (AUTO position: ON/Other than AUTO position: OFF)
PASSING SW          "ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
FR FOG SW            "ON/OFF"	Displays status (front fog lamp switch: ON/Others: OFF) of front fog lamp switch judged from lighting switch signal.
DOOR SW-DR          "ON/OFF"	Displays status of the front door LH as judged from the front door LH switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-AS          "ON/OFF"	Displays status of the front door RH as judged from the front door RH switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-RR          "ON/OFF"	Displays status of the rear door as judged from the rear door switch (RH) signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-RL          "ON/OFF"	Displays status of the rear door as judged from the rear door switch (LH) signal. (Door is open: ON/Door is closed: OFF)
BACK DOOR SW        "ON/OFF"	Displays status of the back door as judged from the back door switch signal. (Door is open: ON/Door is closed: OFF)
TURN SIGNAL R        "ON/OFF"	Displays status (Turn right: ON/Others: OFF) as judged from lighting switch signal.
TURN SIGNAL L        "ON/OFF"	Displays status (Turn left: ON/Others: OFF) as judged from lighting switch signal.
CARGO LAMP SW        "ON/OFF"	Displays status of cargo lamp switch.
OPTICAL SENSOR      [0 - 5V]	Displays "ambient light (close to 5V when dark/close to 0V when light)" judged from optical sensor signal.

### ACTIVE TEST

#### Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

#### Display Item List

Test item	Description
TAIL LAMP	Allows tail lamp relay to operate by switching ON-OFF.
HEAD LAMP	Allows headlamp relay (HI, LO) to operate by switching ON-OFF.
FR FOG LAMP	Allows fog lamp relay to operate by switching ON-OFF.
CARGO LAMP	Allows cargo lamp to operate by switching ON-OFF.
CORNERING LAMP	Not used.

### SELF-DIAGNOSTIC RESULTS

#### Operation Procedure

1. Touch "BCM" on "SELECT TEST ITEM" screen.
2. Touch "SELF-DIAG RESULTS" on "SELECT DIAG MODE" screen.
3. Self-diagnostic results are displayed.

#### Display Item List

Monitored item	CONSULT-II display	Description
CAN communication	CAN communication [U1000]	Malfunction is detected in CAN communication.
CAN communication system	CAN communication system 1 to 6 [U1000]	Malfunction is detected in CAN system.

# HEADLAMP (FOR USA)

EKS00B82

## CONSULT-II Function (IPDM E/R)

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


IPDM E/R diagnostic mode	Description
SELF-DIAG RESULTS	Displays IPDM E/R self-diagnosis results.
DATA MONITOR	Displays IPDM E/R input/output data in real time.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.

## CONSULT-II OPERATION


### CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn the ignition switch ON.

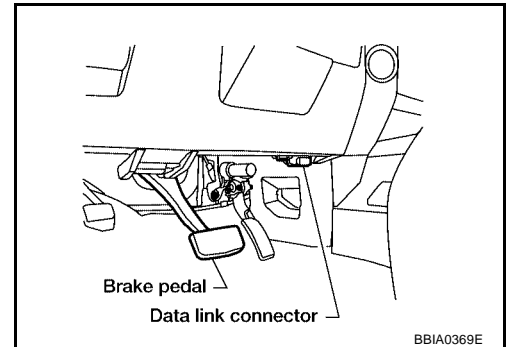

2. Touch "START (NISSAN BASED VHCL)".

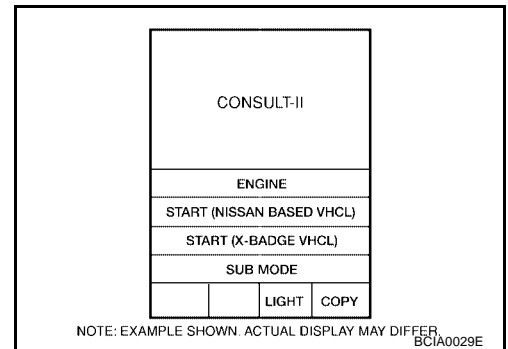


3. Touch "IPDM E/R" on "SELECT SYSTEM" screen. If "IPDM E/R" is not displayed, refer to [GI-40, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

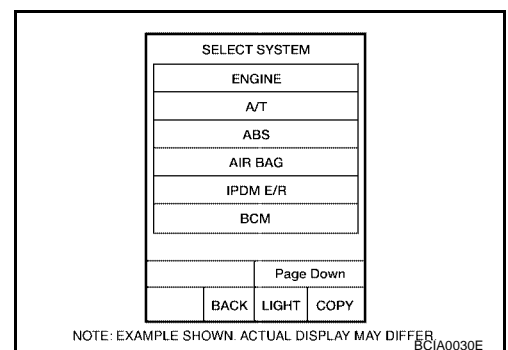

# HEADLAMP (FOR USA)

- Select the desired part to be diagnosed on the "SELECT DIAG MODE" screen.

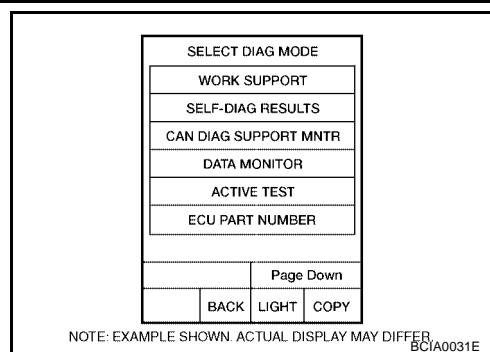

## DATA MONITOR

### Operation Procedure

- Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
- Touch "ALL SIGNALS", "MAIN SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

ALL SIGNALS	All items will be monitored.
MAIN SIGNALS	Monitor the predetermined item.
SELECTION FROM MENU	Select any item for monitoring.

- Touch "START".
- Touch the required monitoring item on "SELECTION FROM MENU". In "ALL SIGNALS", all items are monitored. In "MAIN SIGNALS", predetermined items are monitored.
- Touch "RECORD" while monitoring to record the status of the item being monitored. To stop recording, touch "STOP".

### All Items, Main Items, Select Item Menu

Item name	CONSULT-II screen display	Display or unit	Monitor item selection			Description
			ALL SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
Parking, license plate and tail lamps request	TAIL&CLR REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp low beam request	HL LO REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp high beam request	HL HI REQ	ON/OFF	×	×	×	Signal status input from BCM
Daytime lights request	DTRL REQ	ON/OFF	×	–	×	Signal status input from BCM
Front fog lamps request	FR FOG REQ	ON/OFF	×	×	×	Signal status input from BCM

#### NOTE:

Perform monitoring of IPDM E/R data with the ignition switch ON. When the ignition switch is at ACC, the display may not be correct.

## ACTIVE TEST

### Operation Procedure

- Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
- Touch "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
- Touch item to be tested, and check operation.
- Touch "START".
- Touch "STOP" while testing to stop the operation.

# HEADLAMP (FOR USA)

Test item	CONSULT-II screen display	Description
Headlamp relay (HI, LO) output	EXTERNAL LAMPS	Allows headlamp relay (HI, LO) to operate by switching operation (OFF, HI, LO) at your option (Headlamp high beam repeats ON-OFF every 1 second).
Front fog lamp relay (FOG) output		Allows fog lamp relay (FOG) to operate by switching operation ON-OFF at your option.
Tail lamp relay output		Allows tail lamp relay to operate by switching operation ON-OFF at your option.

## Headlamp HI Does Not Illuminate (Both Sides)

EKS00B83

### 1. CHECK COMBINATION SWITCH INPUT SIGNAL

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "HI BEAM SW" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in HIGH position : HI BEAM SW ON**

OK or NG

OK >> GO TO 2.

NG >> Check lighting switch. Refer to [LT-103, "Combination Switch Inspection"](#).

DATA MONITOR	
MONITOR	
HI BEAM SW	ON

SKIA4193E

### 2. HEADLAMP ACTIVE TEST

- Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
- Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
- Touch "HI" on "ACTIVE TEST" screen.
- Make sure headlamp high beam operates.

**Headlamp high beam should operate.**

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

ACTIVE TEST			
EXTERNAL LAMPS		OFF	
		TAIL	
LO	HI		
FOG			
MODE	BACK	LIGHT	COPY

WKIA1438E

### 3. CHECK IPDM E/R

- Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
- Make sure "HL LO REQ" and "HL HI REQ" turns ON when lighting switch is in HIGH position.

**When lighting switch is in HIGH position : HL LO REQ ON  
: HL HI REQ ON**

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-30, "Removal and Installation of IPDM E/R"](#).

NG >> Replace BCM. Refer to [BCS-20, "BCM"](#).

DATA MONITOR			
MONITOR			
HL LO REQ	ON		
HL HI REQ	ON		
		Page Down	
RECORD			
MODE	BACK	LIGHT	COPY

SKIA5775E

# HEADLAMP (FOR USA)


## 4. CHECK HEADLAMP INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH connectors.
3. Turn ignition switch ON.
4. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
5. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
6. Touch "HI" on "ACTIVE TEST" screen.
7. When headlamp high beam is operating, check voltage between front combination lamp RH and LH harness connector and ground.

Front combination lamp (+)		Terminal	(-)	Voltage
Connector				
RH	E107	6	Ground	Battery voltage
LH	E11			

OK or NG

- OK >> GO TO 6.  
 NG >> GO TO 5.

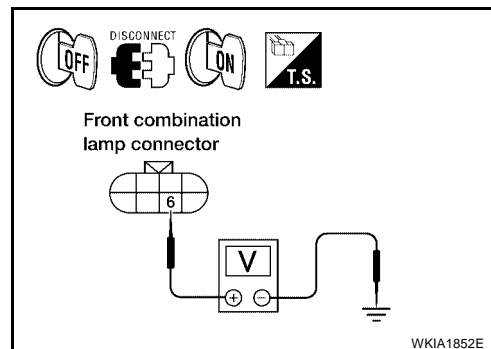


## 5. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector E123 terminal 56 and front combination lamp RH harness connector E107 terminal 6.

**56 - 6 : Continuity should exist.**

4. Check continuity between IPDM E/R harness connector E123 terminal 55 and front combination lamp LH harness connector E11 terminal 6.

**55 - 6 : Continuity should exist.**

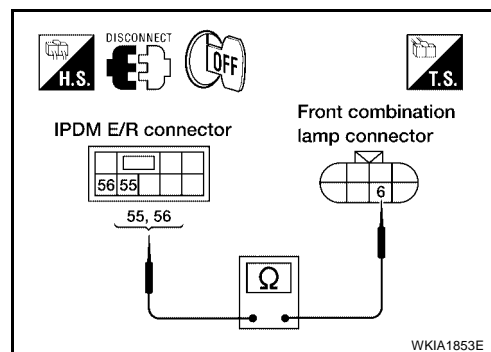

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-30, "Removal and Installation of IPDM E/R"](#) .  
 NG >> Repair harness or connector.

## 6. CHECK HEADLAMP GROUND

1. Turn ignition switch OFF.
2. Check continuity between front combination lamp RH harness connector E107 terminal 2 and ground.


**2 - Ground : Continuity should exist.**

3. Check continuity between front combination lamp LH harness connector E11 terminal 2 (B) and ground.

**2 - Ground : Continuity should exist.**

OK or NG

- OK >> Check front combination lamp connector for damage or poor connection. Repair as necessary.  
 NG >> Repair harness or connector.

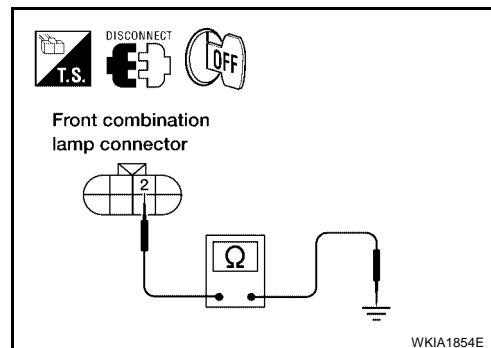

# HEADLAMP (FOR USA)

EKS00B84

## Headlamp HI Does Not Illuminate (One Side)

### 1. BULB INSPECTION

Inspect inoperative headlamp bulb.

OK or NG

OK >> GO TO 2.

NG >> Replace headlamp bulb. Refer to [LT-31, "HEADLAMP \(INNER SIDE\), FOR HIGH BEAM"](#).

### 2. CHECK POWER TO HEADLAMP


1. Disconnect inoperative front combination lamp connector.
2. Turn the high beam headlamps ON.
3. Check voltage between inoperative front combination lamp terminal and ground.

Terminals		Terminal	(-)	Voltage (Approx.)
(+)				
Connector		6	Ground	Battery voltage
RH	E107			
LH	E11			

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

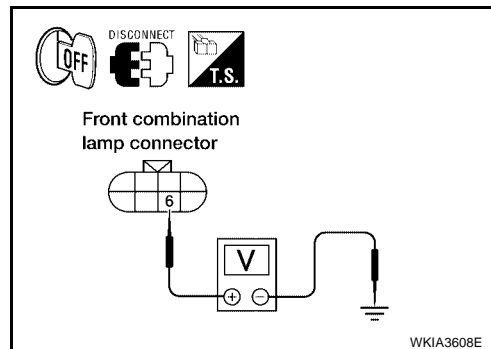

### 3. CHECK HEADLAMP GROUND


1. Turn the high beam headlamps OFF.
2. Check continuity between inoperative front combination lamp connector and ground.

Terminals		Terminal	Ground	Continuity
Connector				
RH	E107	2	Ground	Yes
LH	E11			

OK or NG

OK >> Check front combination lamp connector for damage or poor connection. Repair as necessary.

NG >> Repair open circuit in harness between inoperative front combination lamp and ground.

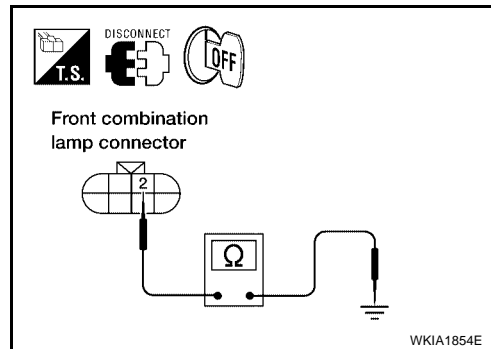

# HEADLAMP (FOR USA)


## 4. INSPECTION BETWEEN IPDM E/R AND HEADLAMPS

1. Disconnect IPDM E/R connector and inoperative front combination lamp connector.
2. Check continuity between harness connector terminal of IPDM E/R and harness connector terminal of inoperative front combination lamp.

IPDM E/R		Front combination lamp		Continuity	
Connector	Terminal	Connector	Terminal		
E123	56	RH	E107	6	Yes
	55	LH	E11		

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-30, "Removal and Installation of IPDM E/R"](#).
- NG >> Check for short and open circuits in harness between IPDM E/R and headlamps. Repair as necessary.

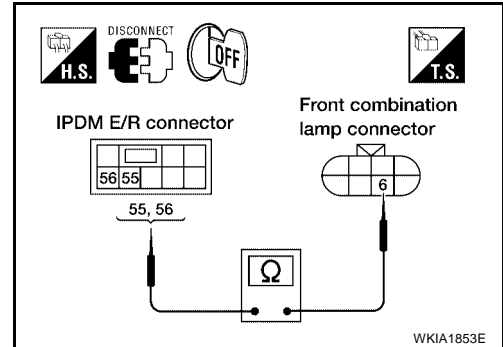

## High Beam Indicator Lamp Does Not Illuminate

EKS00B85

### 1. BULB INSPECTION

Inspect CAN communication system. Refer to [LAN-26, "CAN COMMUNICATION"](#).

OK or NG

- OK >> Replace combination meter. Refer to [IP-13, "COMBINATION METER"](#).
- NG >> Repair as necessary.

## Headlamp LO Does Not Illuminate (Both Sides)

EKS00B86


### 1. CHECK COMBINATION SWITCH INPUT SIGNAL

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "HEAD LAMP SW 1" and "HEAD LAMP SW 2" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in 2ND position :**  
**HEAD LAMP SW 1 ON**  
**HEAD LAMP SW 2 ON**

OK or NG

- OK >> GO TO 2.
- NG >> Check lighting switch. Refer to [LT-103, "Combination Switch Inspection"](#).

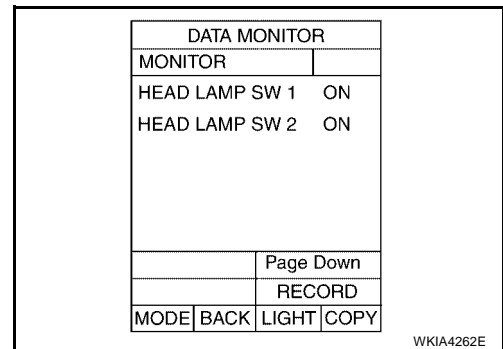


## 2. HEADLAMP ACTIVE TEST

1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
3. Touch "LO" on "ACTIVE TEST" screen.
4. Make sure headlamp low beam operates.

**Headlamp low beam should operate.**

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 4.

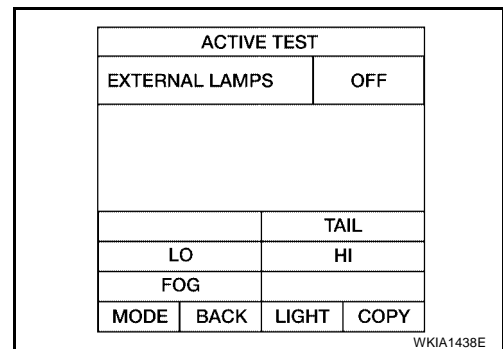



# HEADLAMP (FOR USA)

## 3. CHECK IPDM E/R


1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "HL LO REQ" turns ON when lighting switch is in 2ND position.

**When lighting switch is in 2ND position : HL LO REQ ON**

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-30, "Removal and Installation of IPDM E/R"](#).

NG >> Replace BCM. Refer to [BCS-20, "BCM"](#).

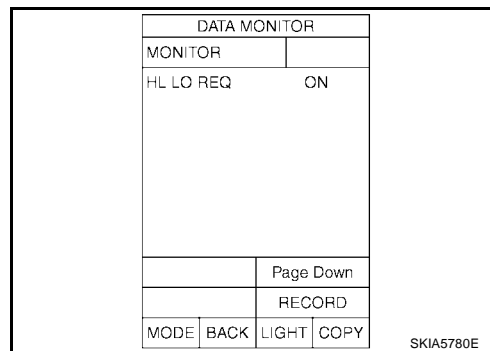

## 4. CHECK HEADLAMP INPUT SIGNAL


1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH connector.
3. Turn ignition switch ON.
4. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
5. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
6. Touch "LO" on "ACTIVE TEST" screen.
7. When headlamp low beam is operating, check voltage between front combination lamp RH and LH harness connector and ground.

(+)		Terminal	(-)	Voltage
Connector				
RH	E107	5	Ground	Battery voltage
LH	E11			

OK or NG

OK >> GO TO 6.

NG >> GO TO 5.

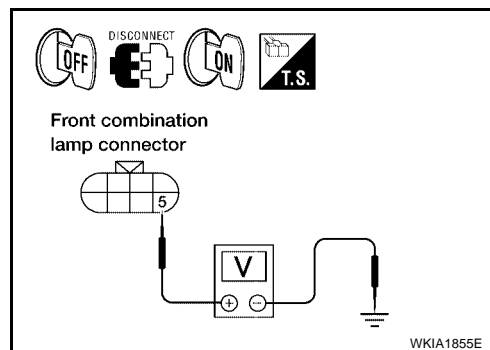

## 5. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector E123 terminal 54 and front combination lamp RH harness connector E107 terminal 5.

**54 - 5 : Continuity should exist.**


4. Check continuity between IPDM E/R harness connector E123 terminal 52 and front combination lamp LH harness connector E11 terminal 5.

**52 - 5 : Continuity should exist.**

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-30, "Removal and Installation of IPDM E/R"](#).

NG >> Repair harness or connector.

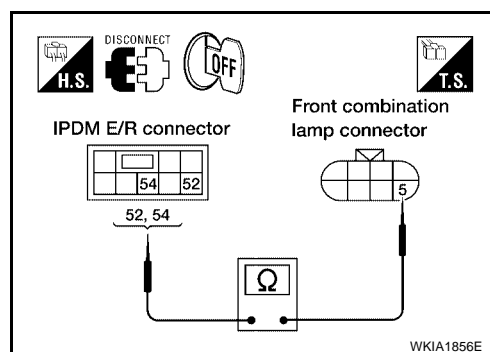

# HEADLAMP (FOR USA)

## 6. CHECK HEADLAMP GROUND

1. Turn ignition switch OFF.
2. Check continuity between front combination lamp RH harness connector E107 terminal 1 and ground.

**1 - Ground : Continuity should exist.**


3. Check continuity between front combination lamp LH harness connector E11 terminal 1 and ground.

**1 - Ground : Continuity should exist.**

OK or NG

OK >> Check front combination lamp connector for damage or poor connection, ballasts (HID control unit) and xenon bulbs. Repair as necessary.

NG >> Repair harness or connector.

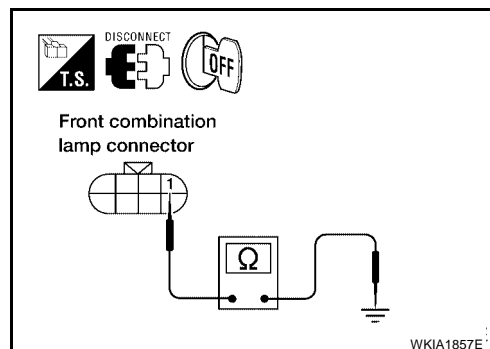

## Headlamp LO Does Not Illuminate (One Side)

EKS00B87

### 1. BULB INSPECTION

Inspect ballasts (HID control unit) and xenon bulb of inoperative headlamp bulb.

OK or NG

OK >> GO TO 2.

NG >> ● (step1) Replace xenon bulb with other side bulb or new one. (If lamp illuminates correctly, replace the xenon bulb).

- (step2) Replace ballast (HID control unit) with other side ballast or new one. (If lamp illuminates correctly, replace the ballast).

### 2. CHECK POWER TO HEADLAMP


1. Disconnect inoperative front combination lamp connector.
2. Turn the low beam headlamps ON.
3. Check voltage between inoperative front combination lamp connector terminal and ground.

(+)		Terminal	(-)	Voltage (Approx.)
Connector				
RH	E107	5	Ground	Battery voltage
LH	E11			

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

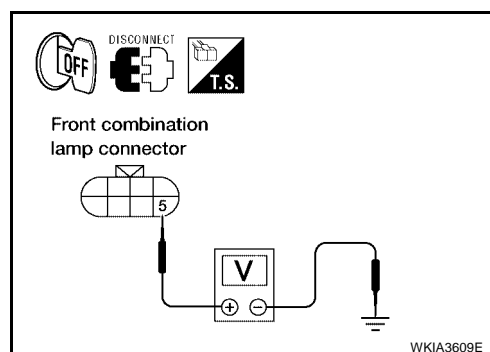

# HEADLAMP (FOR USA)


## 3. CHECK HEADLAMP GROUND

1. Turn the low beam headlamps OFF.
2. Check continuity between inoperative front combination lamp connector terminal and ground.

Connector		Terminal		Continuity
RH	E107	1	Ground	Yes
LH	E11			

OK or NG

- OK >> Check front combination lamp and IPDM E/R connector. Repair as necessary.
- NG >> Repair open circuit in harness between inoperative front combination lamp and ground.

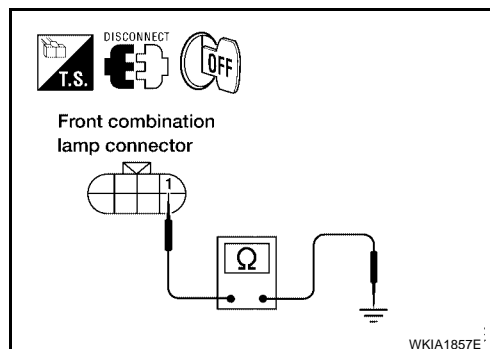


## 4. INSPECTION BETWEEN IPDM E/R AND HEADLAMPS

1. Disconnect IPDM E/R connector.
2. Check continuity between harness connector terminals of IPDM E/R and harness connector terminals of inoperative front combination lamp.

IPDM E/R		Front combination lamp		Continuity
Connector	Terminal	Connector	Terminal (Wire color)	
E123	54	RH	E107	Yes
	52	LH	E11	

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-30, "Removal and Installation of IPDM E/R"](#).
- NG >> Check for short circuits and open circuits in harness between IPDM E/R and front combination lamps. Repair as necessary.

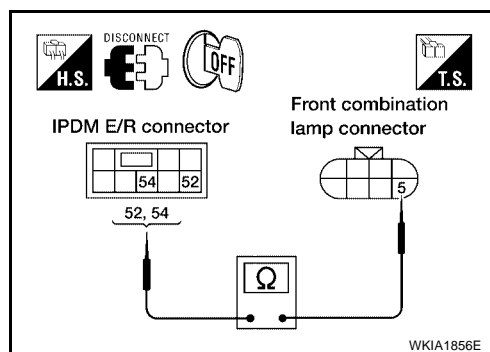

## Headlamps Do Not Turn OFF


### 1. CHECK COMBINATION SWITCH INPUT SIGNAL

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "HEAD LAMP SW 1" and "HEAD LAMP SW 2" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in OFF position : HEAD LAMP SW 1 OFF**  
**: HEAD LAMP SW 2 OFF**

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-30, "Removal and Installation of IPDM E/R"](#).
- NG >> GO TO 2.

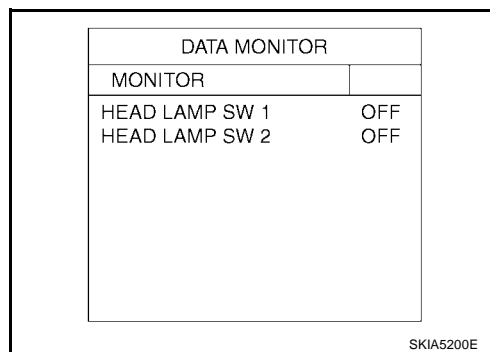

### 2. CHECK LIGHTING SWITCH

Check lighting switch. Refer to [LT-103, "Combination Switch Inspection"](#).

OK or NG

- OK >> GO TO 3.
- NG >> Replace lighting switch. Refer to [LT-105, "Removal and Installation"](#).

# HEADLAMP (FOR USA)

## 3. CHECKING CAN COMMUNICATIONS BETWEEN BCM AND IPDM E/R

Select "BCM" on CONSULT-II and perform self-diagnosis for BCM.

Display of self-diagnosis results

NO DTC>> Replace IPDM E/R. Refer to [PG-30, "Removal and Installation of IPDM E/R"](#) .

CAN COMM CIRCUIT>> Refer to [BCS-13, "CAN Communication Inspection Using CONSULT-II \(Self-Diagnosis\)"](#) .


SELF-DIAG RESULTS			
DTC RESULTS		TIME	
CAN COMM CIRCUIT [U1000]		PAST	
ERASE		PRINT	
MODE	BACK	LIGHT	COPY

SKIA1039E

# HEADLAMP (FOR USA)

## Aiming Adjustment

EKS00B89

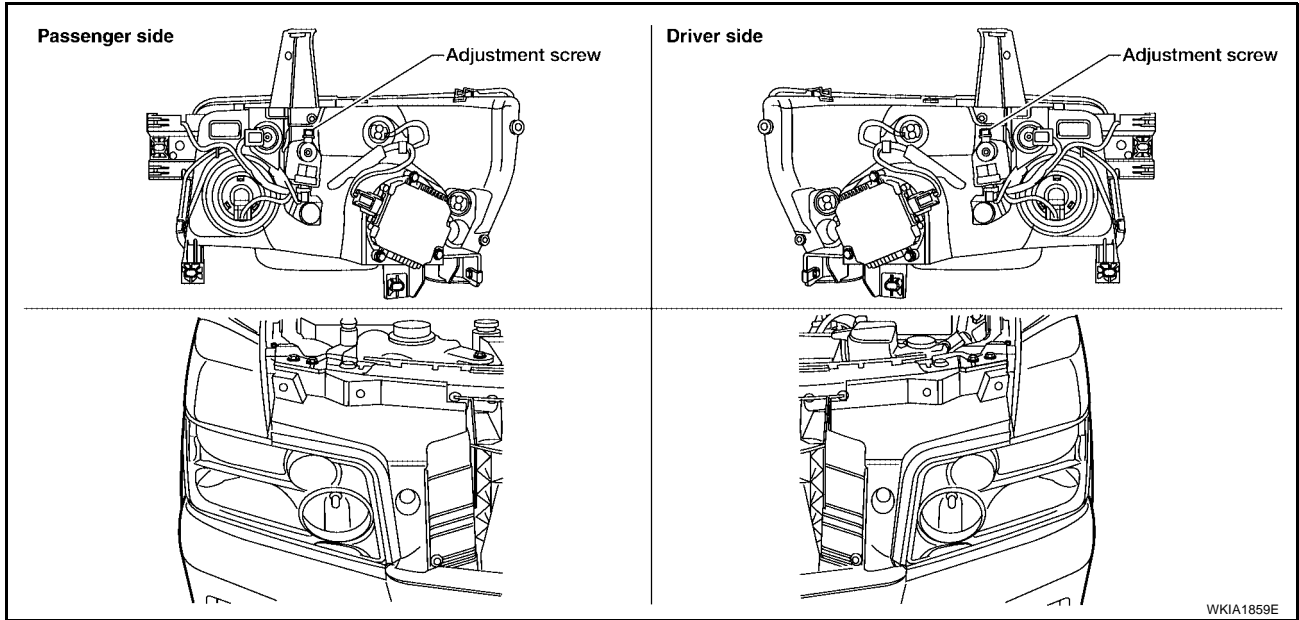

For details, refer to the regulations in your area.

### NOTE:


If vehicle front body has been repaired and /or the headlamp assembly has been replaced, check headlamp aiming.

### HEADLAMP AIMING

#### NOTE:

- Before performing aiming adjustment, check the following:
  - Confirm headlamp aiming switch is set to "0" (zero) position.
  - Ensure all tires are inflated to correct pressure.
  - Place vehicle and screen on level surface.
  - Ensure there is no load in vehicle other than the driver (or equivalent weight placed in driver's position). Coolant and engine oil filled to correct level, and fuel tank full.
  - Confirm spare tire, jack and tools are properly stowed.
  - Aim each headlamp individually and ensure other headlamp beam pattern is blocked from screen.
  - Use adjusting screw to perform aiming adjustment

# HEADLAMP (FOR USA)

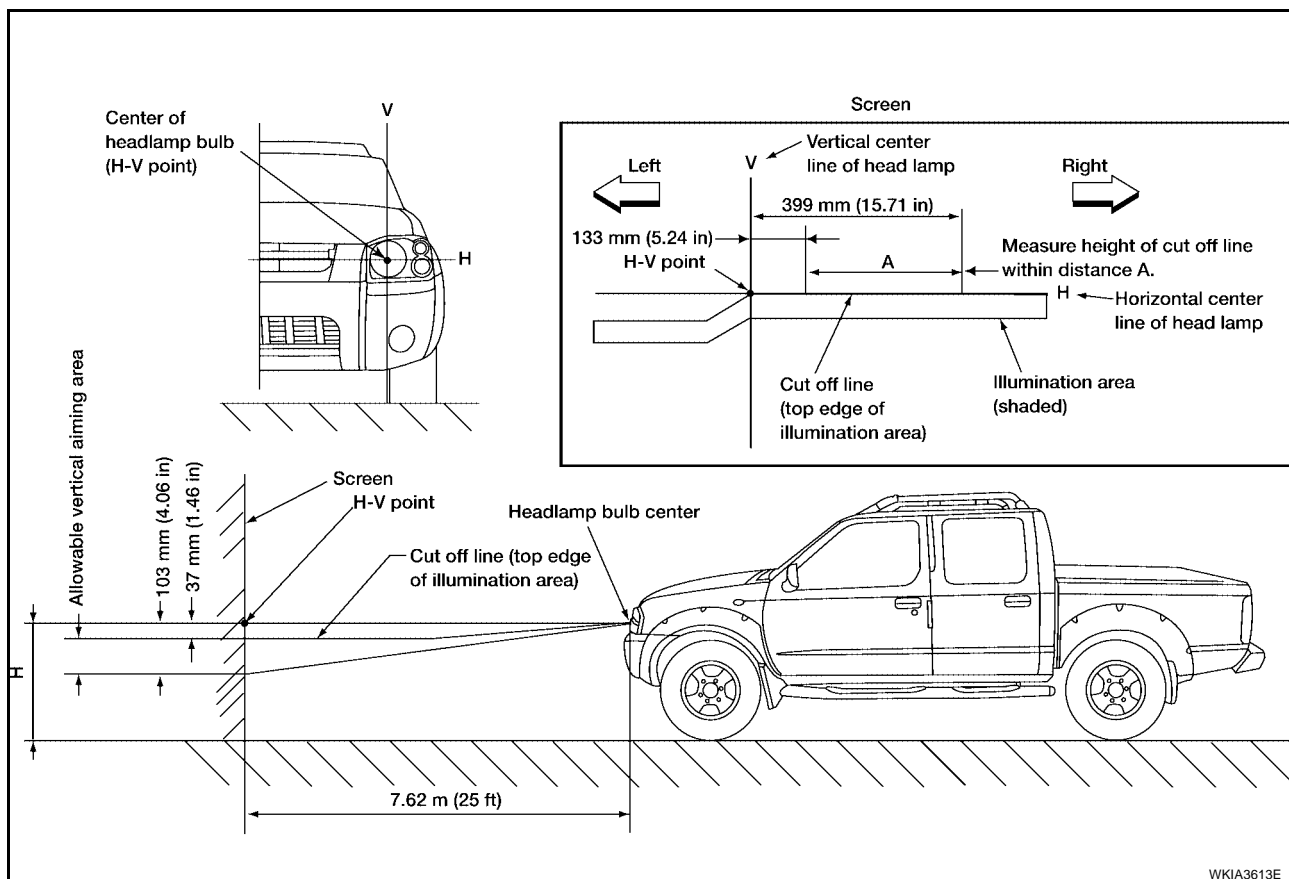

- Basic illuminating area for adjustment should be within the range shown on the aiming chart. Adjust headlamps accordingly.

## Bulb Replacement

EKS00B8A

### CAUTION:

- Disconnect battery negative terminal before touching xenon bulb or headlamp wiring harness assembly.
- Turn headlamp switch OFF before disconnecting headlamp harness connector.
- Do not touch bulb by hand right after being turned off. Burning may result.
- Do not touch the glass of bulb directly by hand. Keep grease and other oily substances away from it.
- Do not turn xenon bulb ON when xenon bulb is removed from front combination lamp assembly.
- After installing the bulb, be sure to install the bulb socket securely to ensure watertightness.
- Do not leave bulb out of front combination lamp assembly for a long time because dust, moisture, smoke, etc. may affect the performance of the lamp. When replacing bulb, be sure to replace it with a new one.

## HEADLAMP (OUTER SIDE), FOR LOW BEAM

### Removal

1. Position fender protector aside.
2. Turn headlamp switch OFF.
3. Disconnect battery negative terminal.
4. Remove ballast.
5. Disconnect headlamp electrical connector.
6. Release bulb retaining spring and pull bulb straight out.

### Installation

Installation is in the reverse order of removal.

# HEADLAMP (FOR USA)

## HEADLAMP (INNER SIDE), FOR HIGH BEAM

### Removal

1. Turn headlamp switch OFF.
2. Disconnect headlamp electrical connector.
3. Turn the bulb counterclockwise to remove it.

### Installation

Installation is in the reverse order of removal.

## FRONT PARKING LAMP (INNER OR OUTER)

### Removal

1. Turn the bulb socket counterclockwise to unlock it.
2. Pull the bulb to remove it from the socket.

### Installation

Installation is in the reverse order of removal.

## SIDE MARKER LAMP (FRONT)

### Removal

1. Position fender protector aside.
2. Turn the side marker lamp (front) bulb socket counterclockwise and remove side marker lamp (front) bulb socket.
3. Pull to remove side marker lamp (front) from the side marker lamp (front) bulb socket.

### Installation

Installation is in the reverse order of removal.

## Removal and Installation FRONT COMBINATION LAMP ASSEMBLY


EKS00B8B

### CAUTION:

- Disconnect battery negative terminal before touching xenon bulb or headlamp wiring harness assembly.
- Turn headlamp switch OFF before disconnecting headlamp harness connector.
- Do not touch bulb by hand right after being turned off. Burning may result.
- Do not touch the glass of bulb directly by hand. Keep grease and other oily substances away from it.
- Do not turn xenon bulb ON when xenon bulb is removed from front combination lamp assembly.
- After installing the bulb, be sure to install the bulb socket securely to ensure watertightness.
- Do not leave bulb out of front combination lamp assembly for a long time because dust, moisture, smoke, etc. may affect the performance of the lamp. When replacing bulb, be sure to replace it with a new one.

### Removal

1. Disconnect battery negative terminal.
2. Disconnect front combination lamp assembly.
3. Remove front fascia. Refer to [EI-13, "FRONT BUMPER"](#).
4. Remove front combination lamp assembly bolts.
5. Remove front combination lamp assembly.

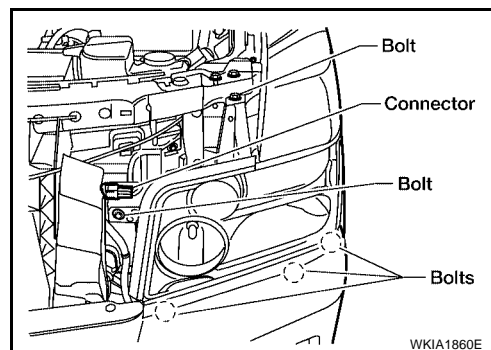


# HEADLAMP (FOR USA)

## INSTALLATION

Installation is in the reverse order of removal.

## Disassembly and Assembly FRONT COMBINATION LAMP ASSEMBLY

EKS00B8C

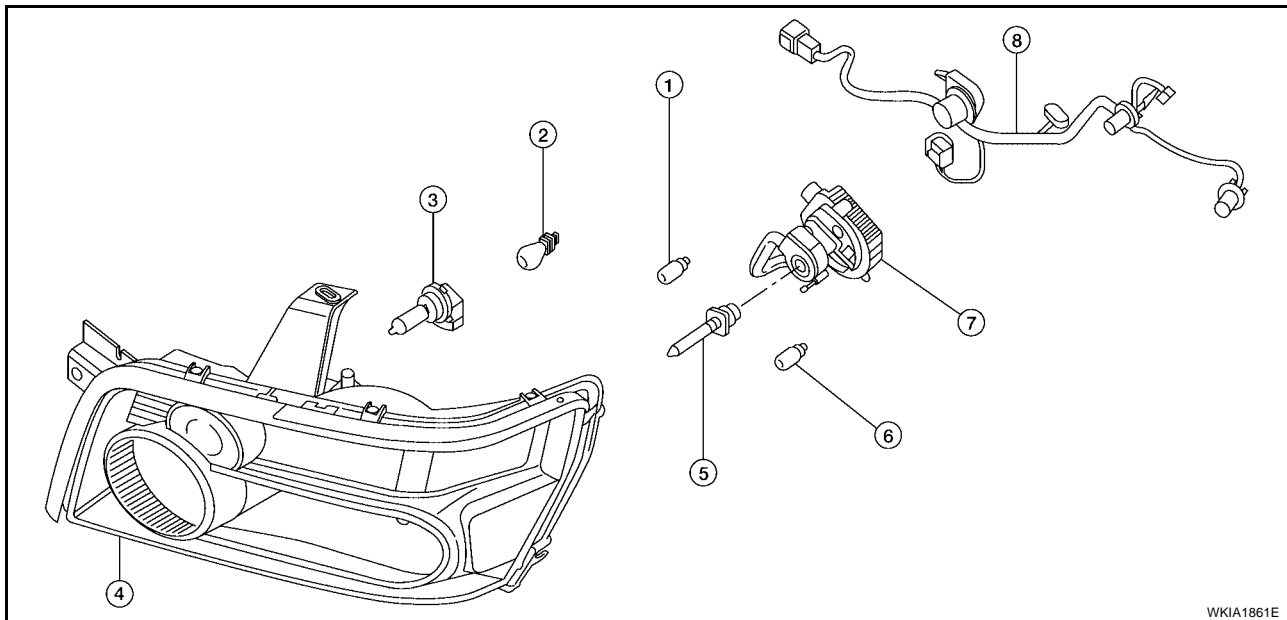

WKIA1861E

- |                              |   |                                  |
|------------------------------|---|----------------------------------|
| 1. Parking lamp bulb (outer) | 2. Parking lamp bulb (inner), if equipped | 3. Headlamp bulb (high beam)     |
| 4. Headlamp assembly         | 5. Xenon bulb (low beam)                  | 6. Side marker lamp (front) bulb |
| 7. Ballast                   | 8. Wiring harness assembly                |                                  |

## DISASSEMBLY

1. Remove ballast.
2. Release xenon bulb retaining spring and remove xenon bulb.
3. Turn high beam bulb counterclockwise to unlock and remove high beam bulb.
4. Turn parking lamp bulb (inner) socket counterclockwise to unlock and remove parking lamp bulb.
5. Turn parking lamp bulb (outer) socket counterclockwise to unlock and remove parking lamp bulb.
6. Turn side marker lamp (front) bulb socket counterclockwise to unlock and remove side marker lamp (front) bulb.

## ASSEMBLY

Assembly is in the reverse order of disassembly.




# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

## HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM - Component Parts and Harness Connector Location

PF2:26010

EKS00B8D

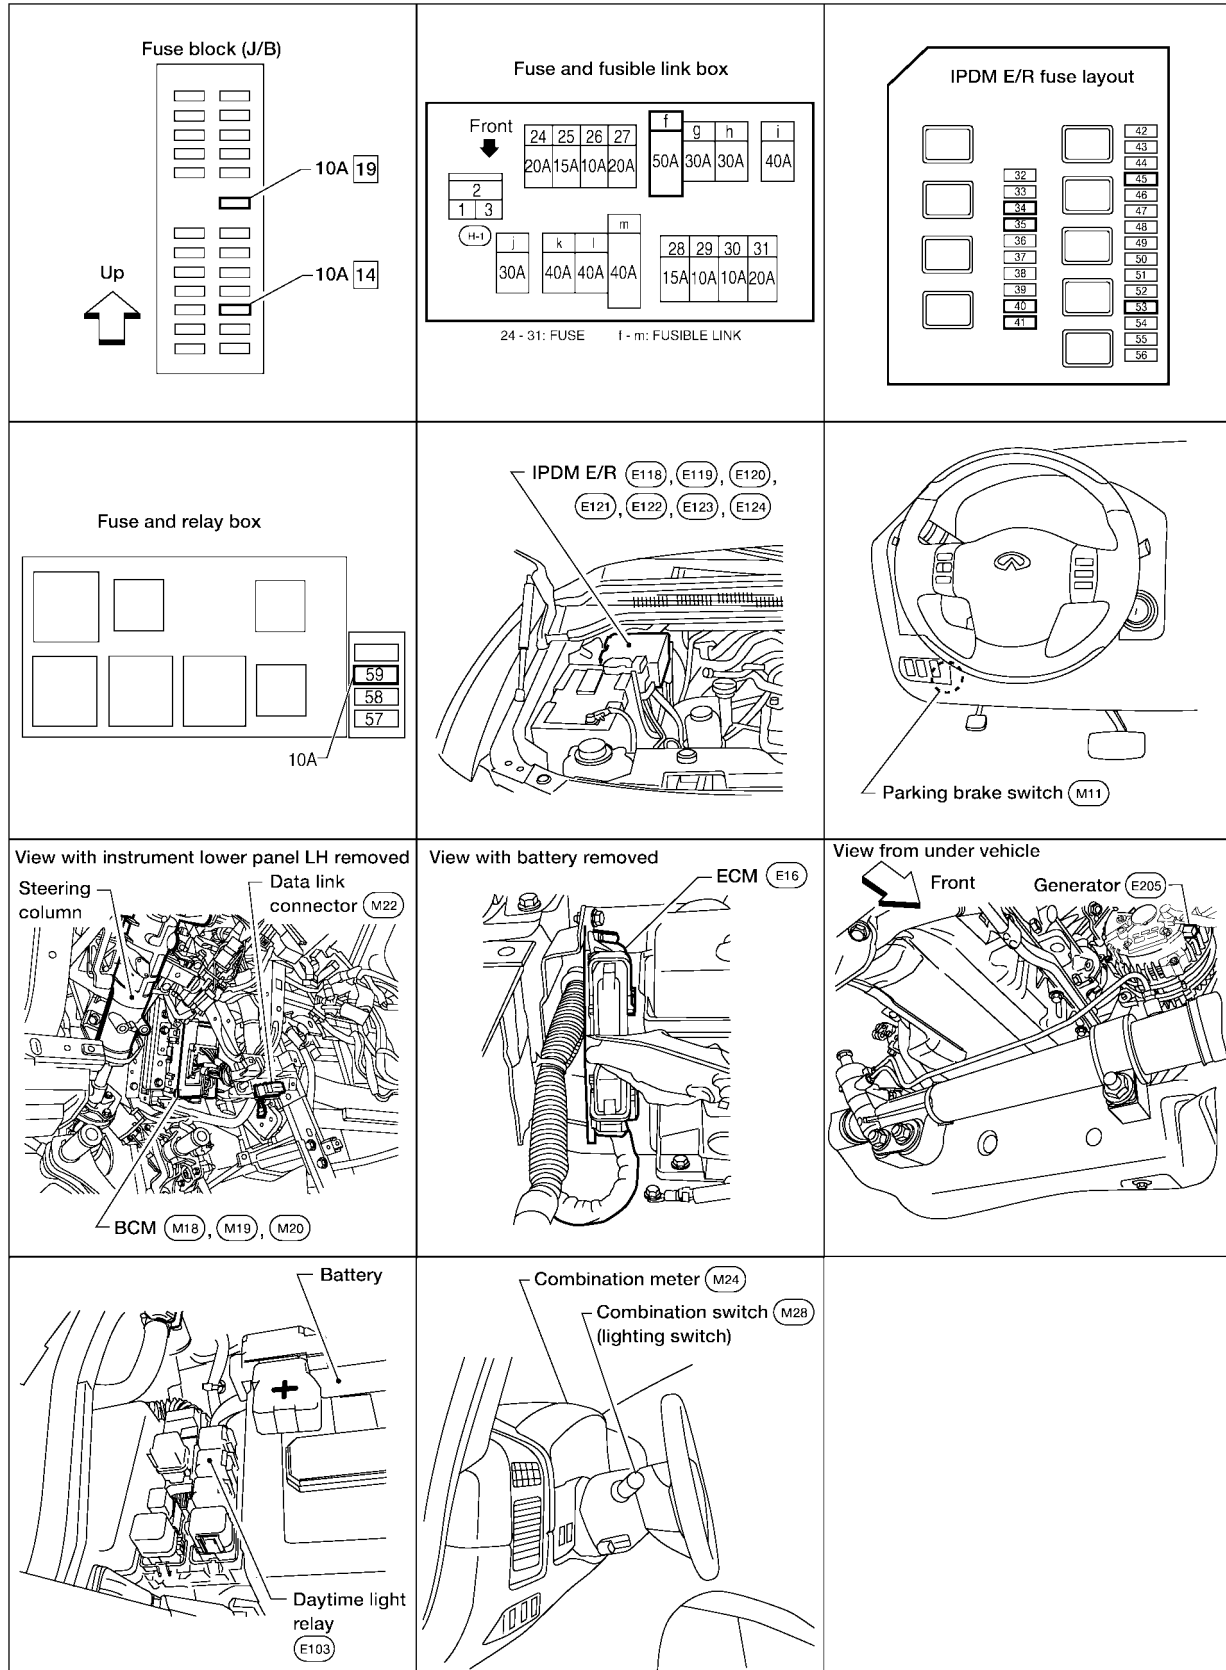

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

EKS00B8E

## System Description

Daytime light system turns on daytime light lamps while driving. Daytime light lamps are not turned on if engine is activated with parking brake applied. Release parking brake to turn on daytime light lamps. The lamps turn off when lighting switch is in the 2ND position or AUTO position (Headlamp is "ON") and when lighting switch is in the PASSING position. (Daytime light lamps are not turned off only by parking brake itself.)

A parking brake signal and engine run or stop signal are sent to BCM (body control module) by CAN communication line.

## OUTLINE

Power is supplied at all times

- to ignition relay, located in the IPDM E/R (intelligent power distribution module engine room), and
- through 50A fusible link (letter f , located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 20A fuse (No. 53, located in the IPDM E/R)
- to CPU (central processing unit) of the IPDM E/R, and
- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 8, and
- through 10A fuse (No. 45, located in the IPDM E/R)
- to daytime light relay terminals 2 and 5.

When the ignition switch is in ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse (No. 59, located in the fuse and relay box)
- to BCM terminal 38, and
- through 10A fuse [No. 14, located in the fuse block (J/B)]
- to combination meter terminal 24.

Ground is supplied

- to BCM terminal 67 and
- to combination meter terminal 17
- through grounds M57, M61 and M79.

## DAYTIME LIGHT OPERATION

With the engine running, the lighting switch in the OFF or 1ST position and parking brake released, the IPDM E/R receives input requesting the daytime lights illuminate. This input is communicated across the CAN communication lines. The CPU of the IPDM E/R controls the daytime light relay coil. When energized, this relay directs power

- through daytime light relay terminal 3
- to front combination lamp LH terminal 2
- through front combination lamp LH terminal 6
- to IPDM E/R terminal 55
- through 10A fuse (No. 35, located in the IPDM E/R)
- through 10A fuse (No. 34, located in the IPDM E/R)
- through IPDM E/R terminal 56
- to front combination lamp RH terminal 6.

Ground is supplied

- to front combination lamp RH terminal 2
- through grounds E9, E15 and E24.

With power and ground supplied, the daytime lights illuminate. The high beam headlamps are now wired in series and illuminate at a reduced intensity.

## COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

---

## AUTO LIGHT OPERATION

For auto light operation, refer to [LT-48, "System Description"](#) in AUTO LIGHT SYSTEM.

## CAN Communication System Description

EKS00B8F

Refer to [LAN-26, "CAN COMMUNICATION"](#) .

A

B

C

D

E

F

G

H

I

J

LT


L

M

# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

## Schematic

EKS00B8G

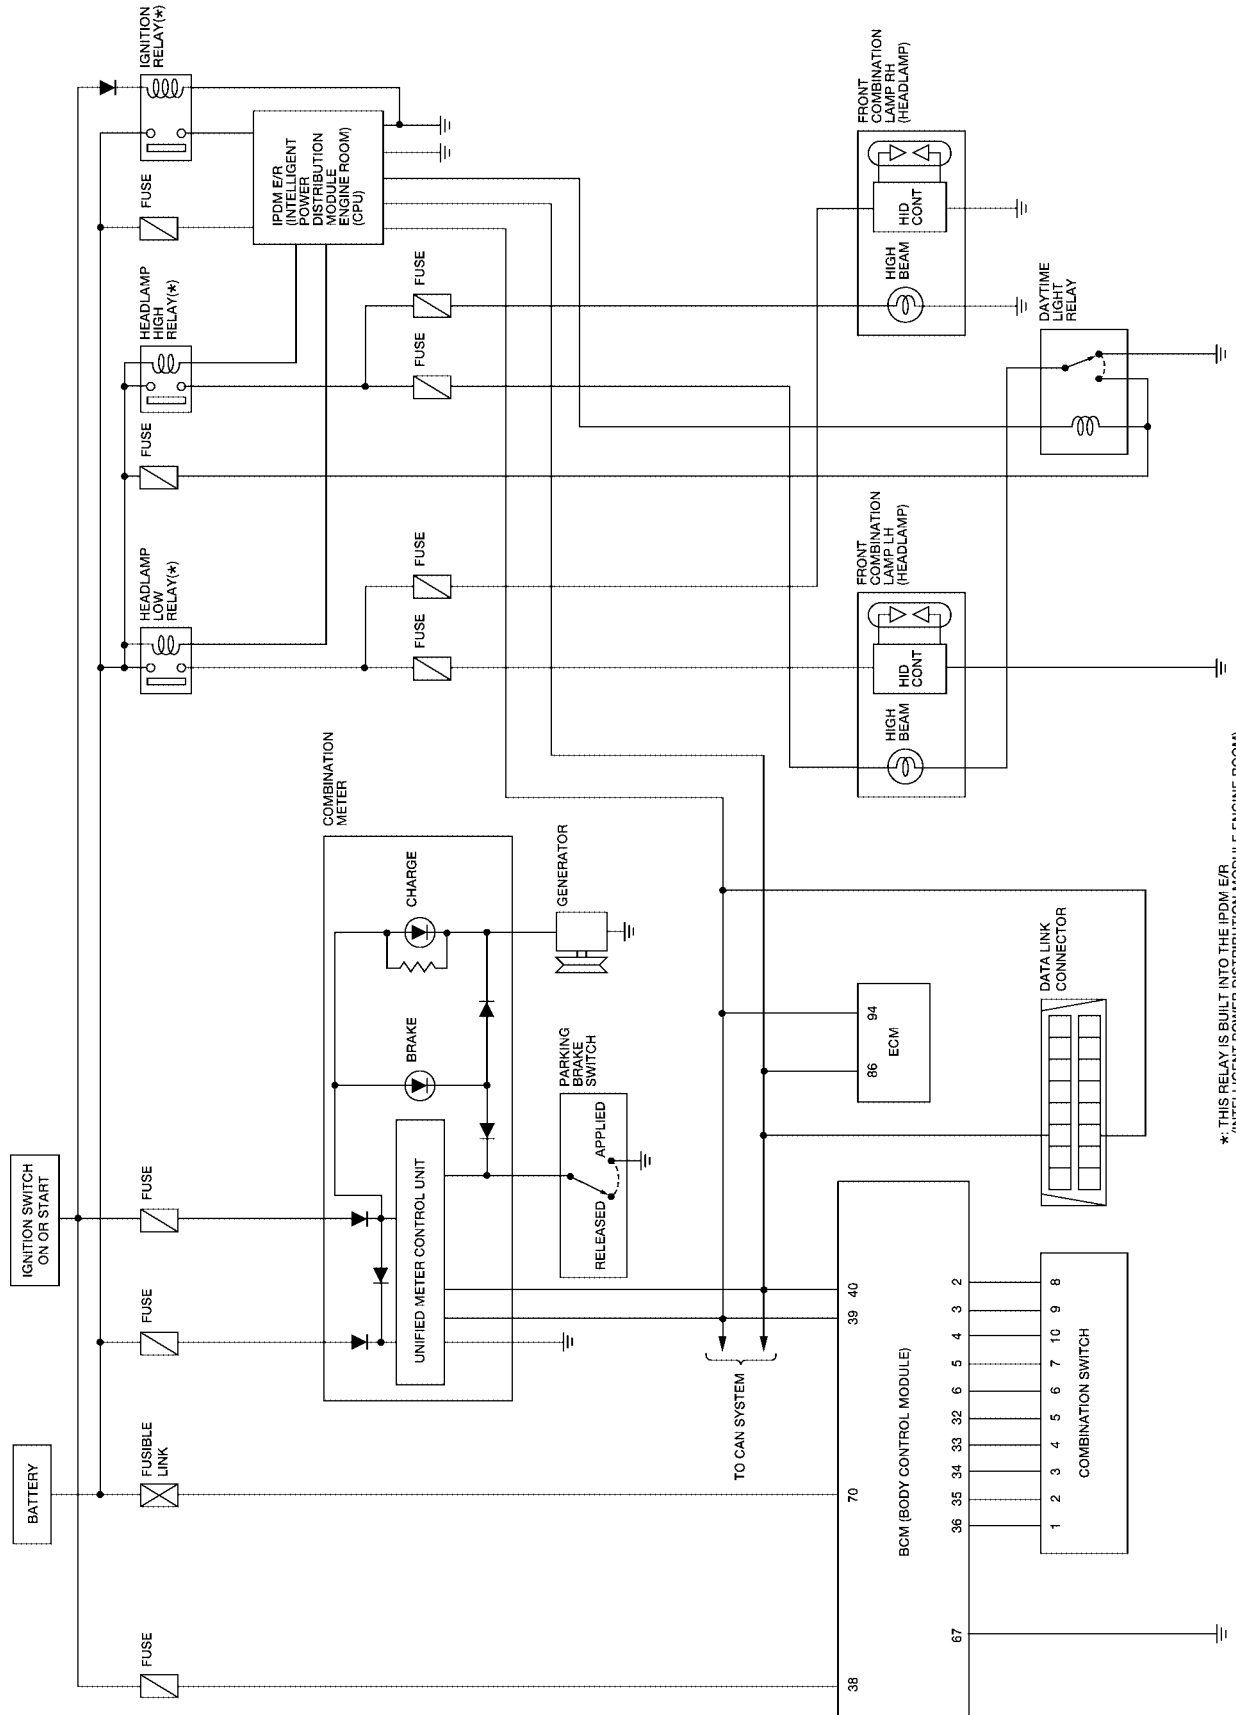

WKWA3641E




# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

## Wiring Diagram — DTRL —

EKS00B8H

LT-DTRL-01

— : DATA LINE


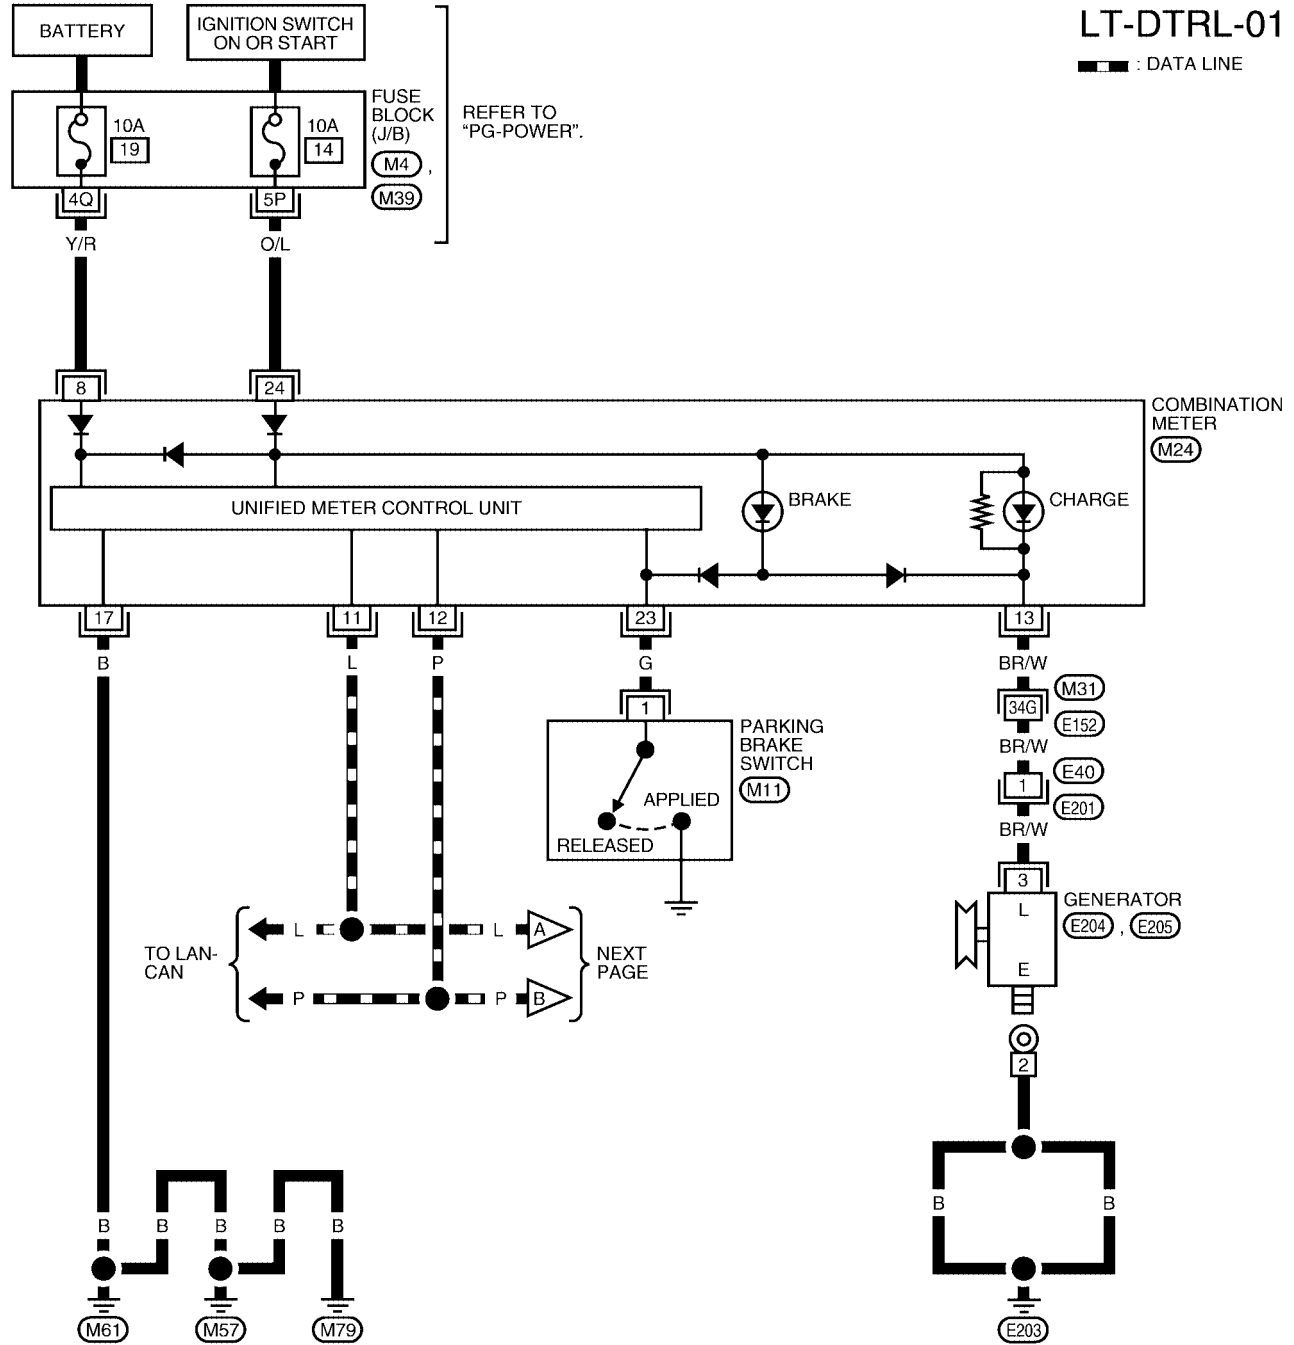


REFER TO THE FOLLOWING.  
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3642E

# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

LT-DTRL-02

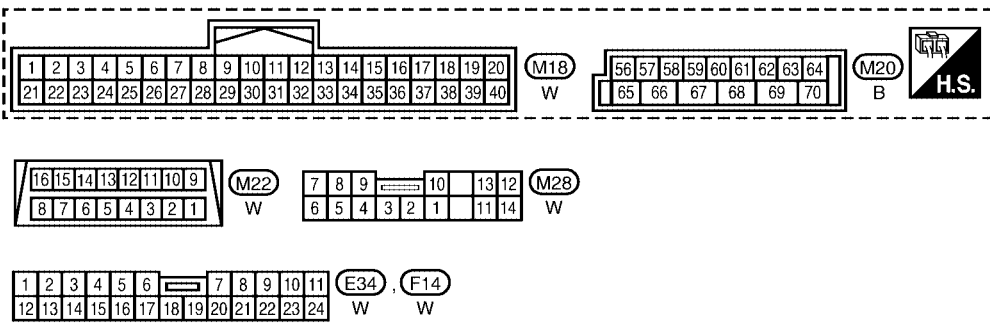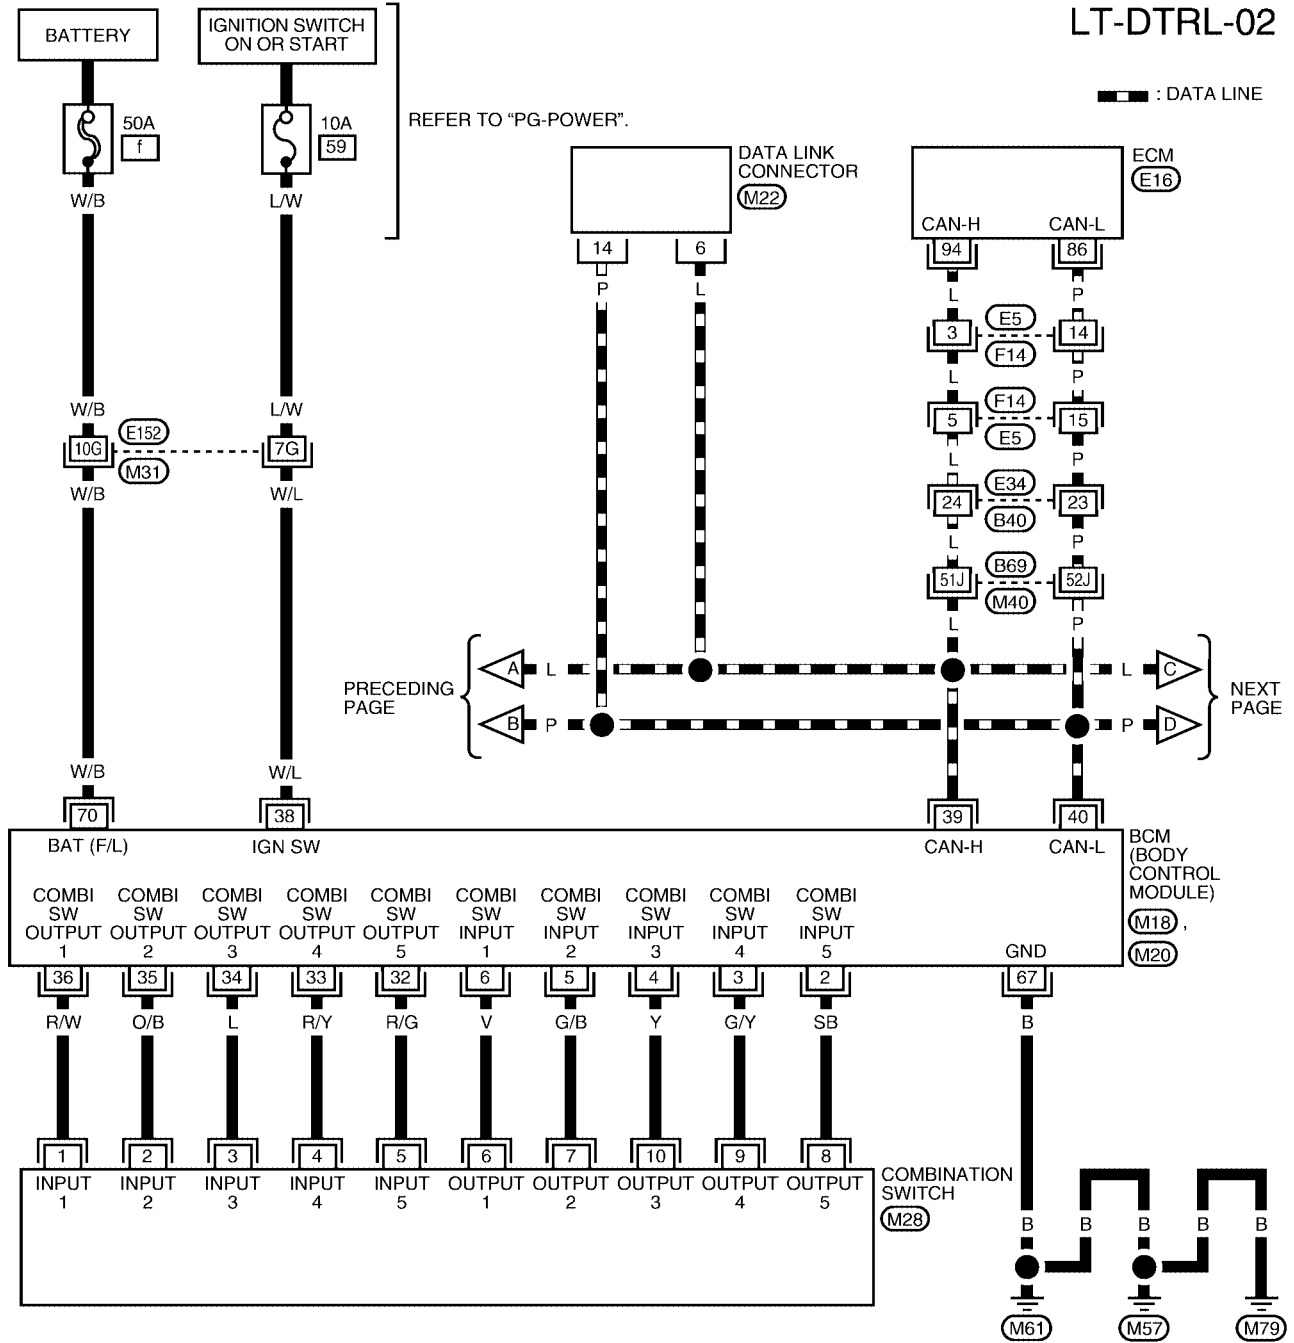

REFER TO THE FOLLOWING.


- (E16) - ELECTRICAL UNITS
- (M31), (M40) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3643E

# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

LT-DTRL-03

— : DATA LINE

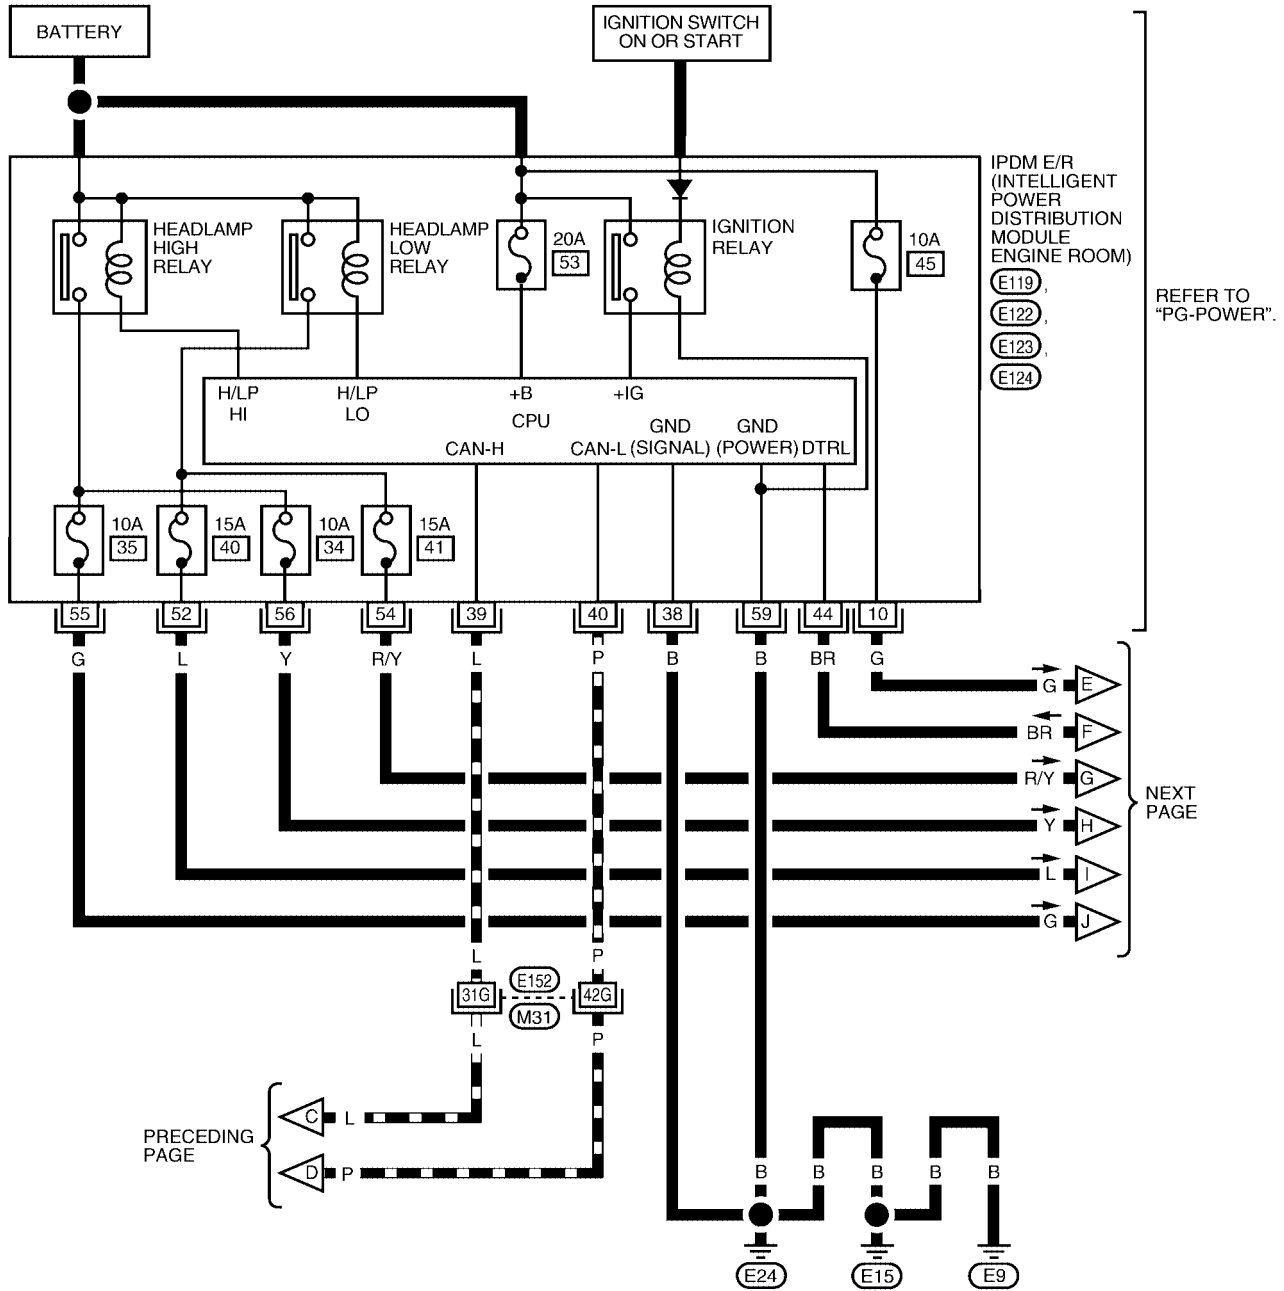

3	4	5	6	7	8	9	(E119)	37	38	39	40	41	42	(E122)	49	50	51	(E123)	57	58	59	(E124)				
10	11	12	13	14	15	16	17	18	W	43	44	45	46	47	48	W	52	53	54	55	56	BR	60	61	62	B



REFER TO THE FOLLOWING.

(M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3644E

# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

LT-DTRL-04

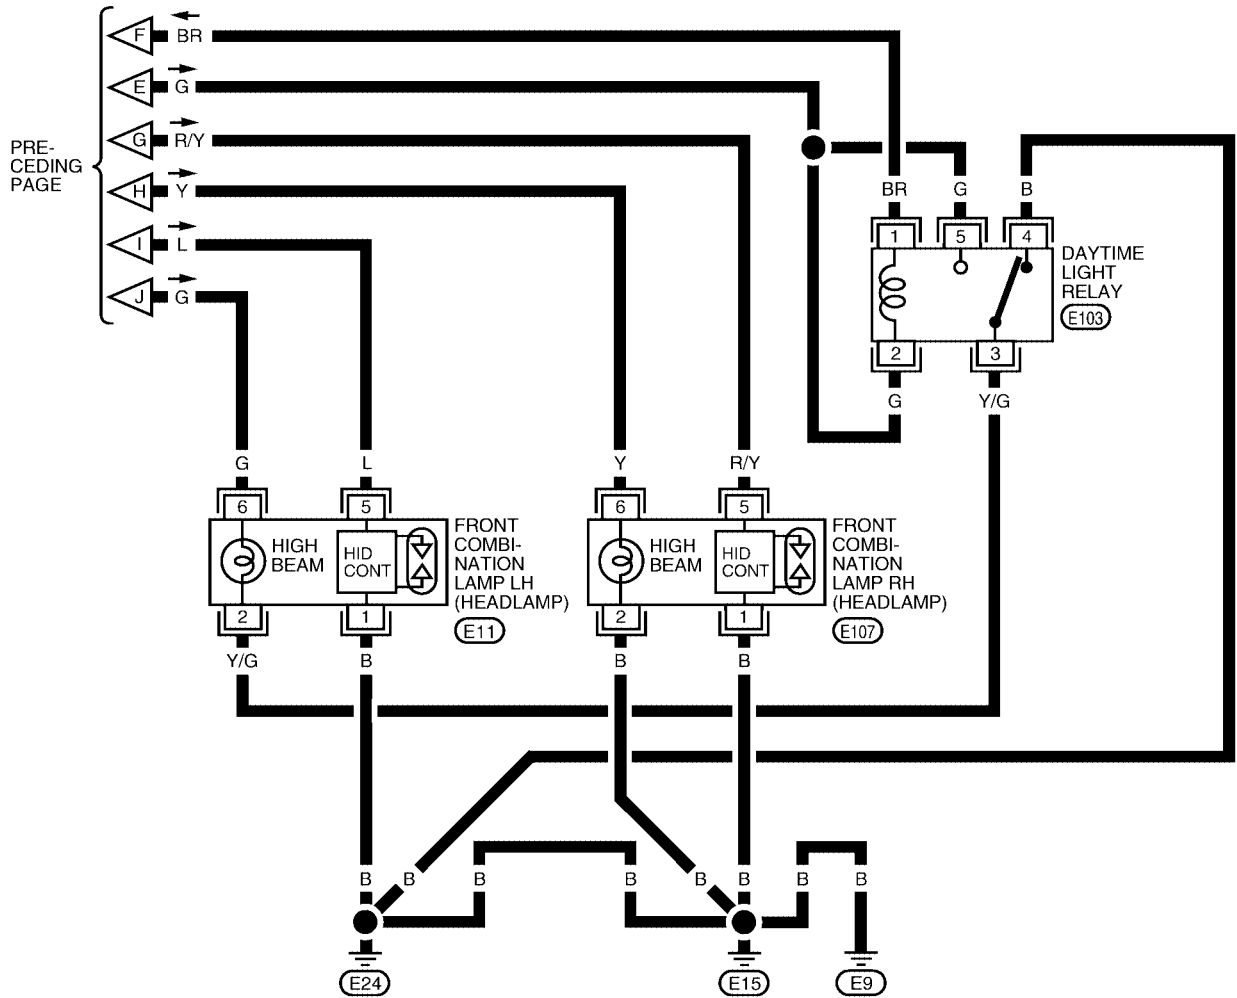


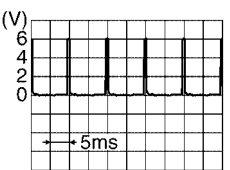
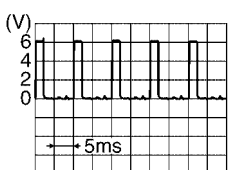




WKWA3645E



# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -


## Terminals and Reference Values for BCM

EKS00B8I

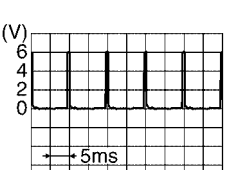Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
2	SB	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
3	G/Y	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
4	Y	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
5	G/B	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
6	V	Combination switch input 1			
32	R/G	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
33	R/Y	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
34	L	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

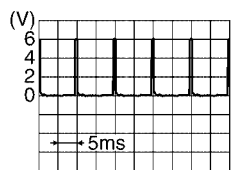Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
35	O/B	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
36	R/W	Combination switch output 1			
38	W/L	Ignition switch (ON)	ON	—	Battery voltage
39	L	CAN-H	—	—	—
40	P	CAN-L	—	—	—
67	B	Ground	ON	—	0V
70	W/B	Battery power supply (fusible link)	OFF	—	Battery voltage

## How to Proceed With Trouble Diagnosis

EKS00B8J

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-34, "System Description"](#).
3. Perform the Preliminary Check. Refer to [LT-42, "Preliminary Check"](#).
4. Check symptom and repair or replace the cause of malfunction.
5. Does the headlamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

## Preliminary Check

EKS00B8K

### CHECK BCM CONFIGURATION

#### 1. CHECK BCM CONFIGURATION

Confirm BCM configuration for "DTRL" is set to "WITH". Refer to [BCS-14, "READ CONFIGURATION PROCEDURE"](#).

OK or NG

- OK >> Continue preliminary check. Refer to [LT-42, "INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT"](#).
- NG >> Change BCM configuration for "DTRL" to "WITH". Refer to [BCS-16, "WRITE CONFIGURATION PROCEDURE"](#).

### INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT

#### 1. CHECK FUSES AND FUSIBLE LINK

Check for blown fuses or fusible link.

Unit	Power source	Fuse and fusible link No.
BCM	Battery	f
	Ignition switch ON or START position	59
Daytime light relay	Battery	45

Refer to [LT-37, "Wiring Diagram — DTRL —"](#).

OK or NG

- OK >> GO TO 2.
- NG >> If fuse or fusible link is blown, be sure to eliminate cause of malfunction before installing new fuse or fusible link. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

## 2. CHECK POWER SUPPLY CIRCUIT


1. Disconnect BCM connectors.
2. Check voltage between BCM harness connector and ground.

BCM		(-)	Ignition switch position		
(+) Connector	Terminal		OFF	ACC	ON
M18	38	Ground	0V	0V	Battery voltage
M20	70		Battery voltage	Battery voltage	Battery voltage

**OK or NG**

OK >> GO TO 3.

NG >> Check harness for open or short between BCM and fuse or fusible link.

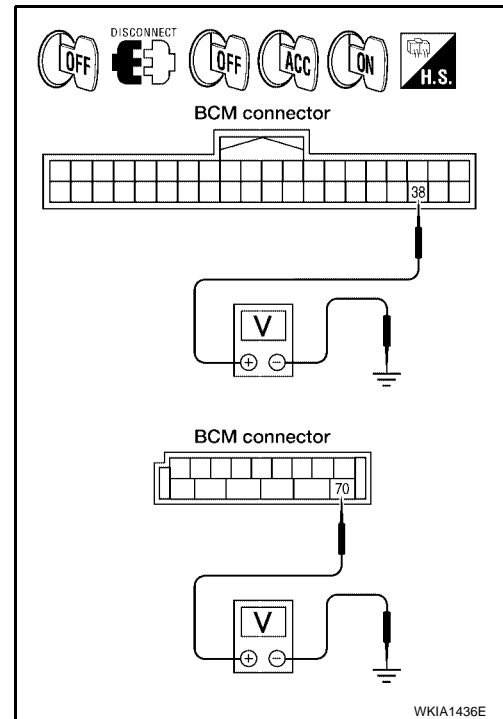

## 3. CHECK GROUND CIRCUIT


Check continuity between BCM harness connector and ground.

BCM			Continuity
Connector	Terminal		
M20	67	Ground	Yes

**OK or NG**

OK >> Inspection End.

NG >> Check ground circuit harness.

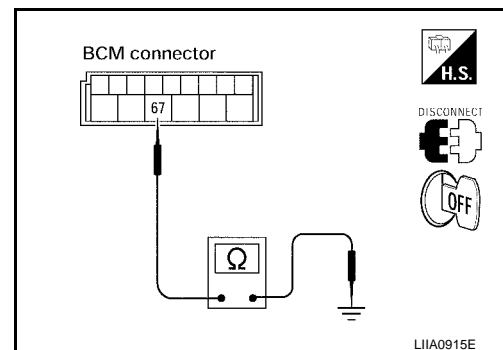

## INSPECTION PARKING BRAKE SWITCH CIRCUIT

### 1. CHECK BRAKE INDICATOR

1. Turn ignition switch ON.
2. Apply parking brake.
3. Release parking brake.

**Brake indicator in combination meter should illuminate when parking brake is applied and turn OFF when released.**

**OK or NG**

OK >> Inspection End.

NG >> GO TO 2.

# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -


## 2. CHECK PARKING BRAKE SWITCH SIGNAL

1. Turn ignition switch OFF.
2. Disconnect parking brake switch connector.
3. Turn ignition switch ON.
4. Check voltage between parking brake switch connector M11 terminal 1 and ground.

**1 - Ground** : Battery voltage should exist.

OK or NG

- OK >> Replace parking brake switch.
- NG >> GO TO 3.

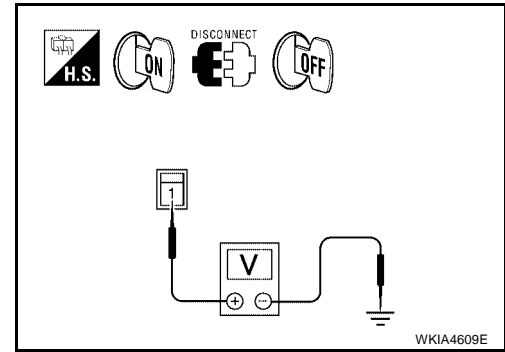


## 3. CHECK PARKING BRAKE SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector.
3. Check continuity between combination meter connector M24 (A) terminal 23 and parking brake switch connector M11 (B) terminal 1.

**1 - 23** : Continuity should exist.

OK or NG

- OK >> Replace combination meter. Refer to [IP-13, "COMBINATION METER"](#).
- NG >> Repair harness or connector.

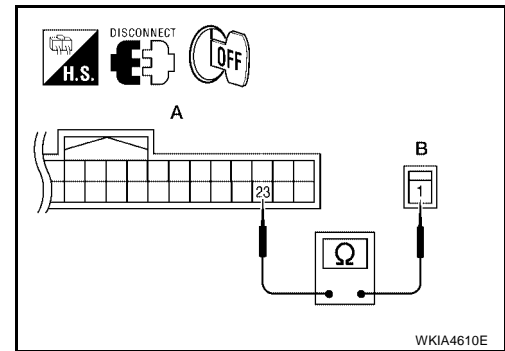

## CONSULT-II Functions

Refer to [LT-16, "CONSULT-II Function \(BCM\)"](#) in HEADLAMP (FOR USA).  
Refer to [LT-19, "CONSULT-II Function \(IPDM E/R\)"](#) in HEADLAMP (FOR USA).

## Daytime Light Control Does Not Operate Properly (Normal Headlamps Operate Properly)


### 1. CHECK DAYTIME LIGHT RELAY POWER SUPPLY CIRCUIT

1. Remove daytime light relay.
2. Check voltage between daytime light relay connector E103 terminals 2, 5 and ground.

**2, 5 - Ground** : Battery voltage should exist.

OK or NG

- OK >> GO TO 2.
- NG >> Repair harness or connector.

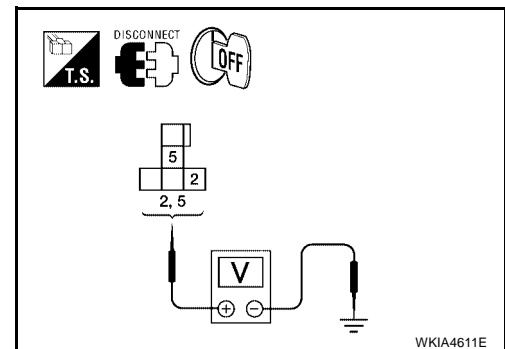

# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -


## 2. CHECK DAYTIME LIGHT RELAY

1. Apply battery voltage to daytime light relay terminal 2 and ground terminal 1.
2. Check continuity between terminals 3 and 5.

**3 - 5 : Continuity should exist.**

OK or NG

- OK >> GO TO 3.
- NG >> Replace daytime light relay.

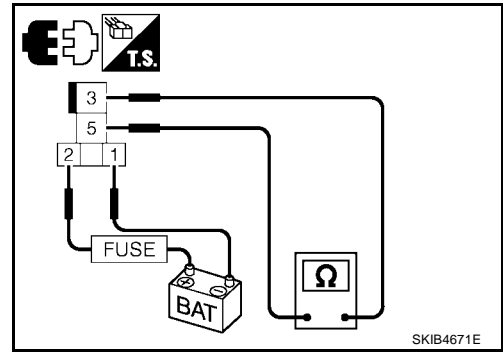


## 3. CHECK DAYTIME LIGHT RELAY CIRCUIT

1. Disconnect IPDM E/R connector E122.
2. Check continuity between daytime light relay connector E103 (B) terminal 1 and front combination lamp LH connector E122 (A) terminal 44.

**44 - 1 : Continuity should exist.**

OK or NG

- OK >> GO TO 4.
- NG >> Repair harness or connector.

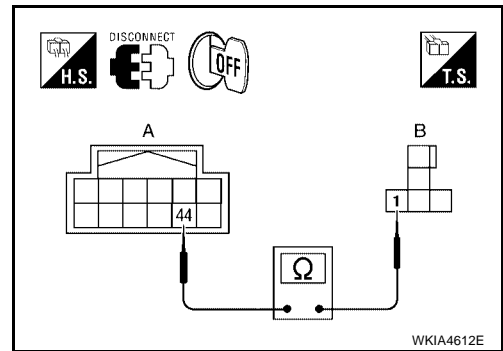


## 4. CHECK INPUT SIGNAL

1. Connect daytime light relay and IPDM E/R connector.
2. Start engine and release parking brake. Headlamp switch OFF.
3. Select "IPDM E/R" on CONSULT-II. With data monitor, make sure "DTRL REQ" turns ON-OFF linked with operation of parking brake switch.

**Parking brake ON : DTRL REQ ON**  
**Parking brake OFF : DTRL REQ OFF**

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-30, "Removal and Installation of IPDM E/R"](#).
- NG >> GO TO 5.

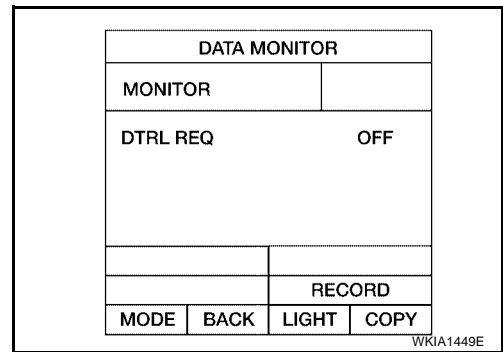


## 5. CHECKING CAN COMMUNICATIONS

Select "BCM" on CONSULT-II and perform self-diagnosis for BCM.

Displayed self-diagnosis results

- NO DTC>> Replace BCM. Refer to [BCS-20, "BCM"](#).
- CAN COMM CIRCUIT>> Check BCM CAN communication system. Refer to [BCS-13, "CAN Communication Inspection Using CONSULT-II \(Self-Diagnosis\)"](#).

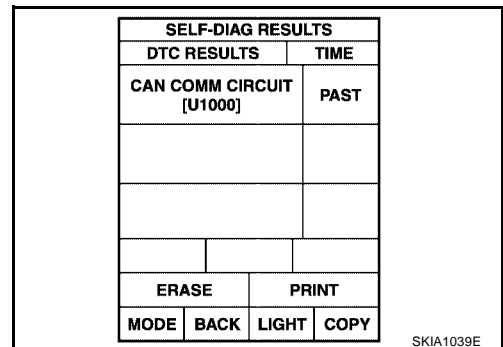

# HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

---

## **Aiming Adjustment**

EKS00D6C

Refer to [LT-29, "Aiming Adjustment"](#) .

## **Bulb Replacement**

EKS00D6D

Refer to [LT-30, "Bulb Replacement"](#) .

## **Removal and Installation**

EKS00D6E

Refer to [LT-31, "Removal and Installation"](#) .

## **Disassembly and Assembly**

EKS00D6F

Refer to [LT-32, "Disassembly and Assembly"](#) .


# AUTO LIGHT SYSTEM

## AUTO LIGHT SYSTEM

### Component Parts and Harness Connector Location

PF2:28491

EKS00B8R

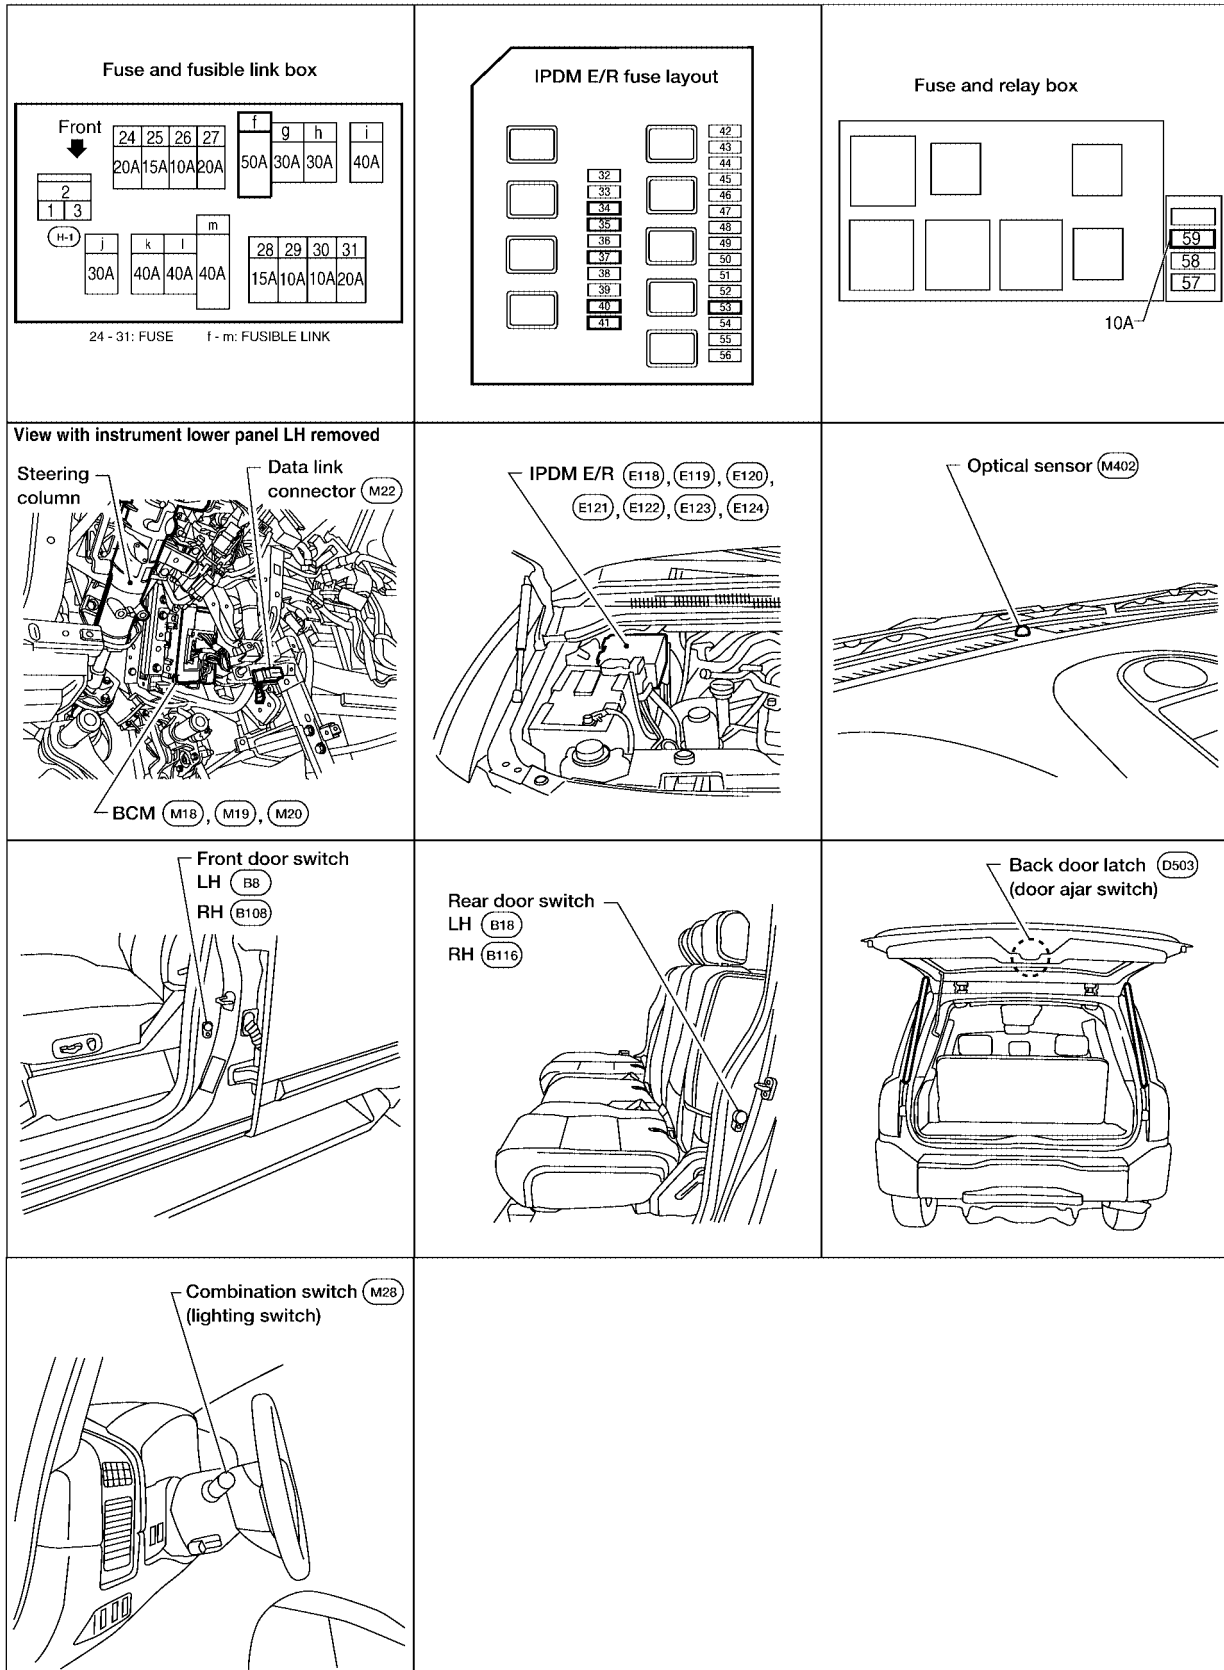

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# AUTO LIGHT SYSTEM

EKS00B8S

## System Description

Automatically turns on/off the parking lamps and the headlamps in accordance with ambient light. Timing for when the lamps turn on/off can be selected using four modes.

### OUTLINE

The auto light control system uses an optical sensor that detects outside brightness.

When the lighting switch is in "AUTO" position, it automatically turns on/off the parking lamps and the headlamps in accordance with the ambient light. Sensitivity can be adjusted in four steps. For the details of the setting, refer to [LT-55, "SETTING CHANGE FUNCTIONS"](#).

Optical sensor ground is supplied

- to optical sensor terminal 3
- through BCM (body control module) terminal 18.

When ignition switch is turned to "ON" position and when outside brightness is darker than prescribed level, input is supplied

- to BCM terminal 58
- through optical sensor terminal 4.

The headlamps will then illuminate. For a description of headlamp operation, refer to [LT-5, "System Description"](#).

### COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#).

### EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the AUTO position, and the ignition switch is turned from ON or ACC to OFF, and one of the front doors is opened, the battery saver control feature is activated.

Under this condition, the headlamps remain illuminated for 5 minutes, then the headlamps are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

### DELAY TIMER FUNCTION

When the ignition switch is ON and auto light switch is ON, the BCM turns on/off the headlamps. In delay timer function, ignition is OFF, auto light sensor power source is OFF and the headlamps are not turned on/off by the BCM. On condition that:

- when the state of ignition switch ON or ACC is ON and output judgment by auto light function is headlamp ON changes to ignition switch and ACC are OFF and any door switch is ON, output judgment by BCM should be headlamp ON for 5 minutes by timer. After time out, output judgment by BCM should be headlamp OFF.
- when the state of any door switch is turned to ON from OFF while 45 second or 5 minute timer is counting, timer stops, and restarts counting for 5 minutes, then BCM judges output as headlamp ON. After time out, BCM judges output as headlamp OFF.
- when the state of front door switch (LH), front door switch (RH), rear door switch LH, rear door switch RH or back door latch (door ajar switch) is ON turns to all door switches are OFF while 45 second or 5 minute timer is counting, timer stops, and restarts counting for 45 seconds, then BCM judges output as headlamp ON. After timer out, BCM judges output as headlamp OFF.
- when the state is ignition switch ON or ACC is ON or auto light switch OFF while timer is counting, timer stops counting and BCM turns on/off lamps according to headlamp function, front fog lamp function, auto light function and headlamp battery save function.

Delay timer control mode can be changed by the function setting of CONSULT-II.

## CAN Communication System Description

EKS00B8T

Refer to [LAN-26, "CAN COMMUNICATION"](#).

## Major Components and Functions

EKS00B8U


Components	Functions
BCM	● Turns on/off circuits of tail light and headlamp according to signals from light sensor, lighting switch (AUTO), front door switch LH, front door switch RH, rear door switch, back door latch (door ajar switch), and ignition switch (ON, OFF).
Optical sensor	● Converts ambient light (lux) to voltage, and sends it to BCM. (Detects lightness of 50 to 1,300 lux)



# AUTO LIGHT SYSTEM

## Schematic

EKS00B8V

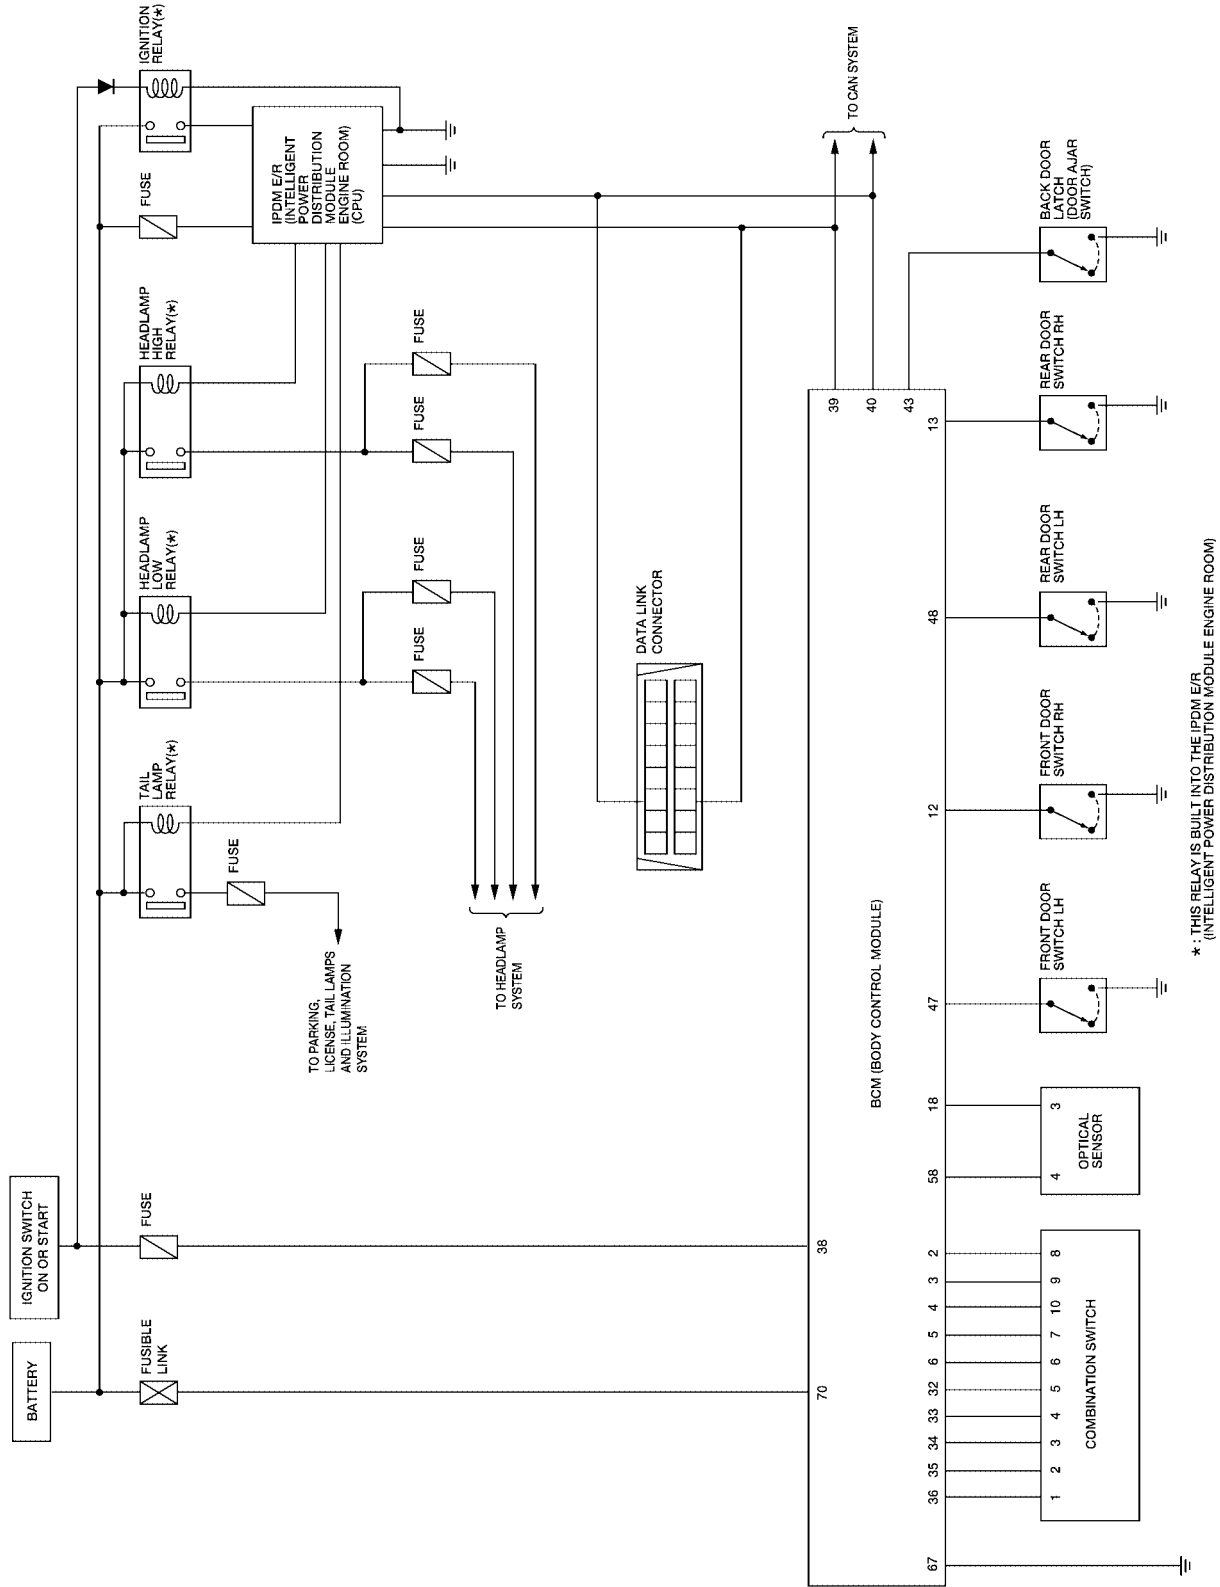

\* : THIS RELAY IS BUILT INTO THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)



A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# AUTO LIGHT SYSTEM

## Wiring Diagram — AUTO/L —

EKS00B8W

LT-AUTO/L-01

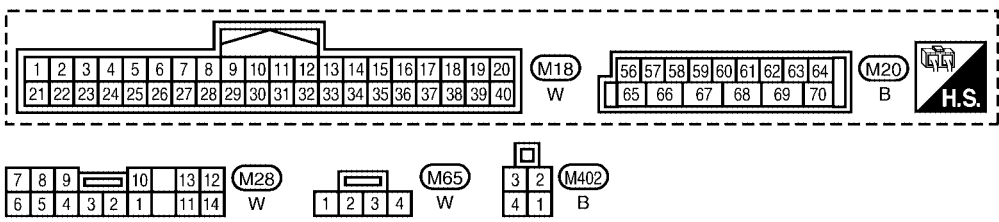
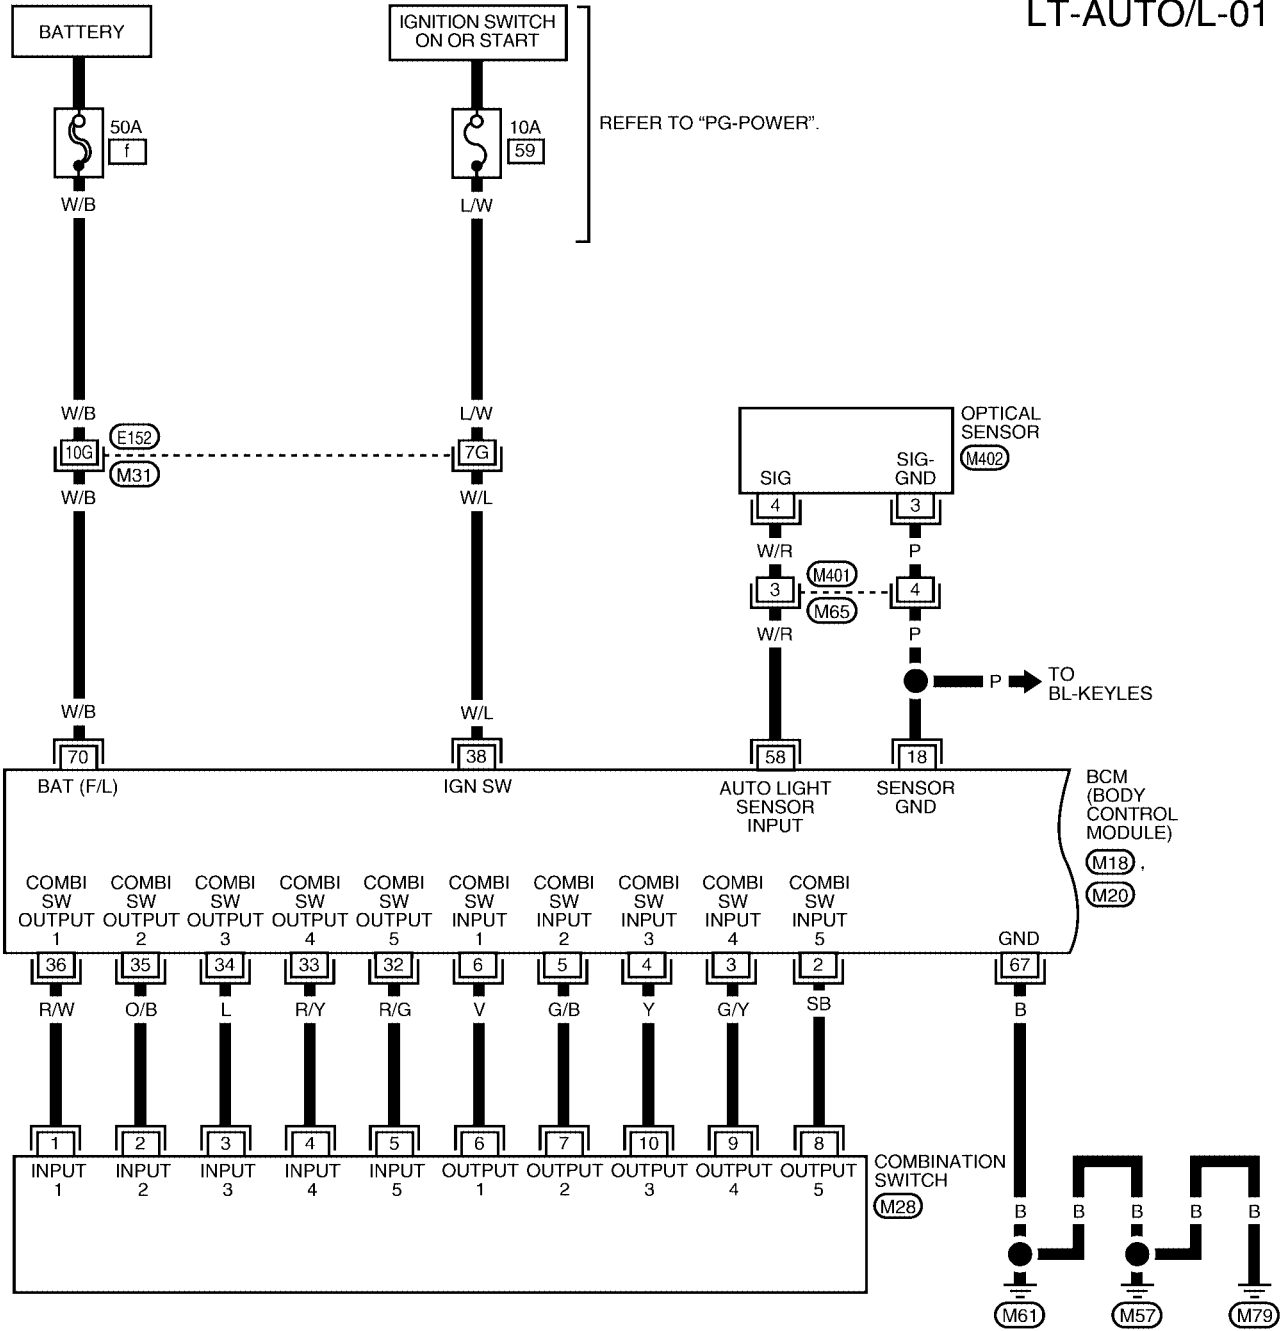


REFER TO THE FOLLOWING.  
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

# AUTO LIGHT SYSTEM

LT-AUTO/L-02

— : DATA LINE


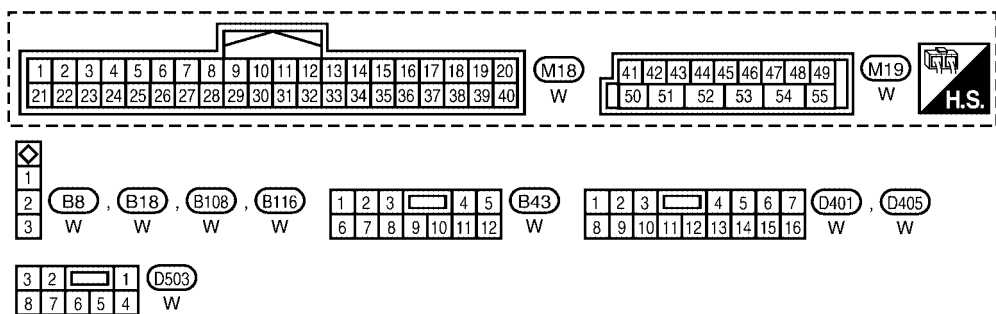
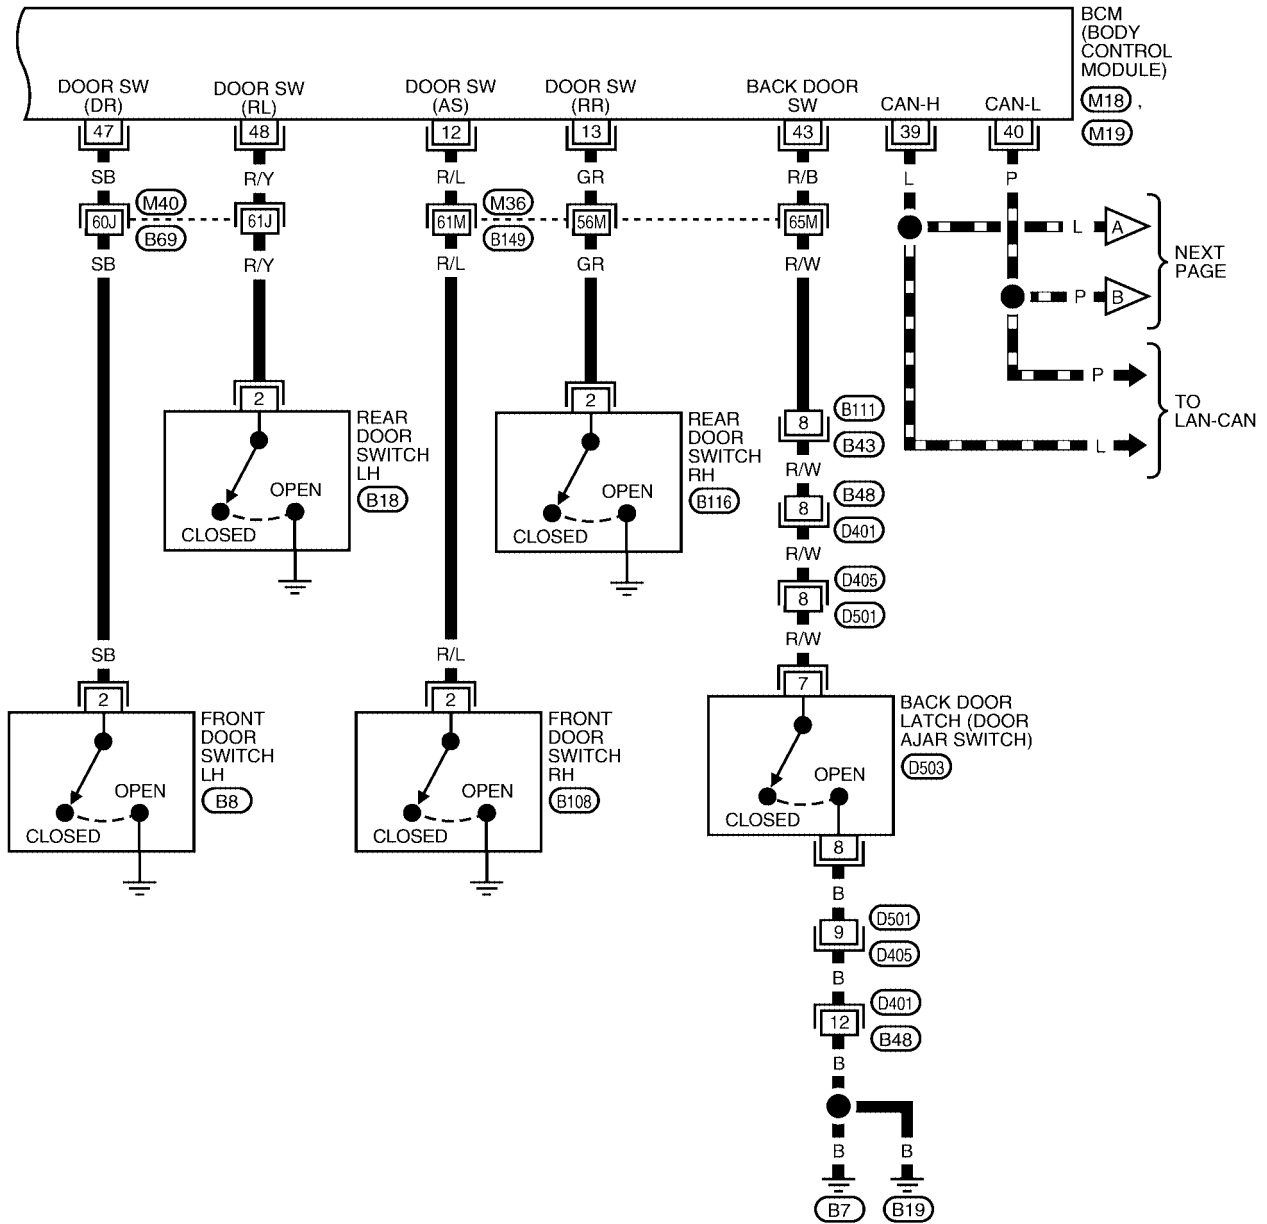


REFER TO THE FOLLOWING.  
 (M36), (M40) - SUPER  
 MULTIPLE JUNCTION (SMJ)

WKWA2486E

# AUTO LIGHT SYSTEM

LT-AUTO/L-03

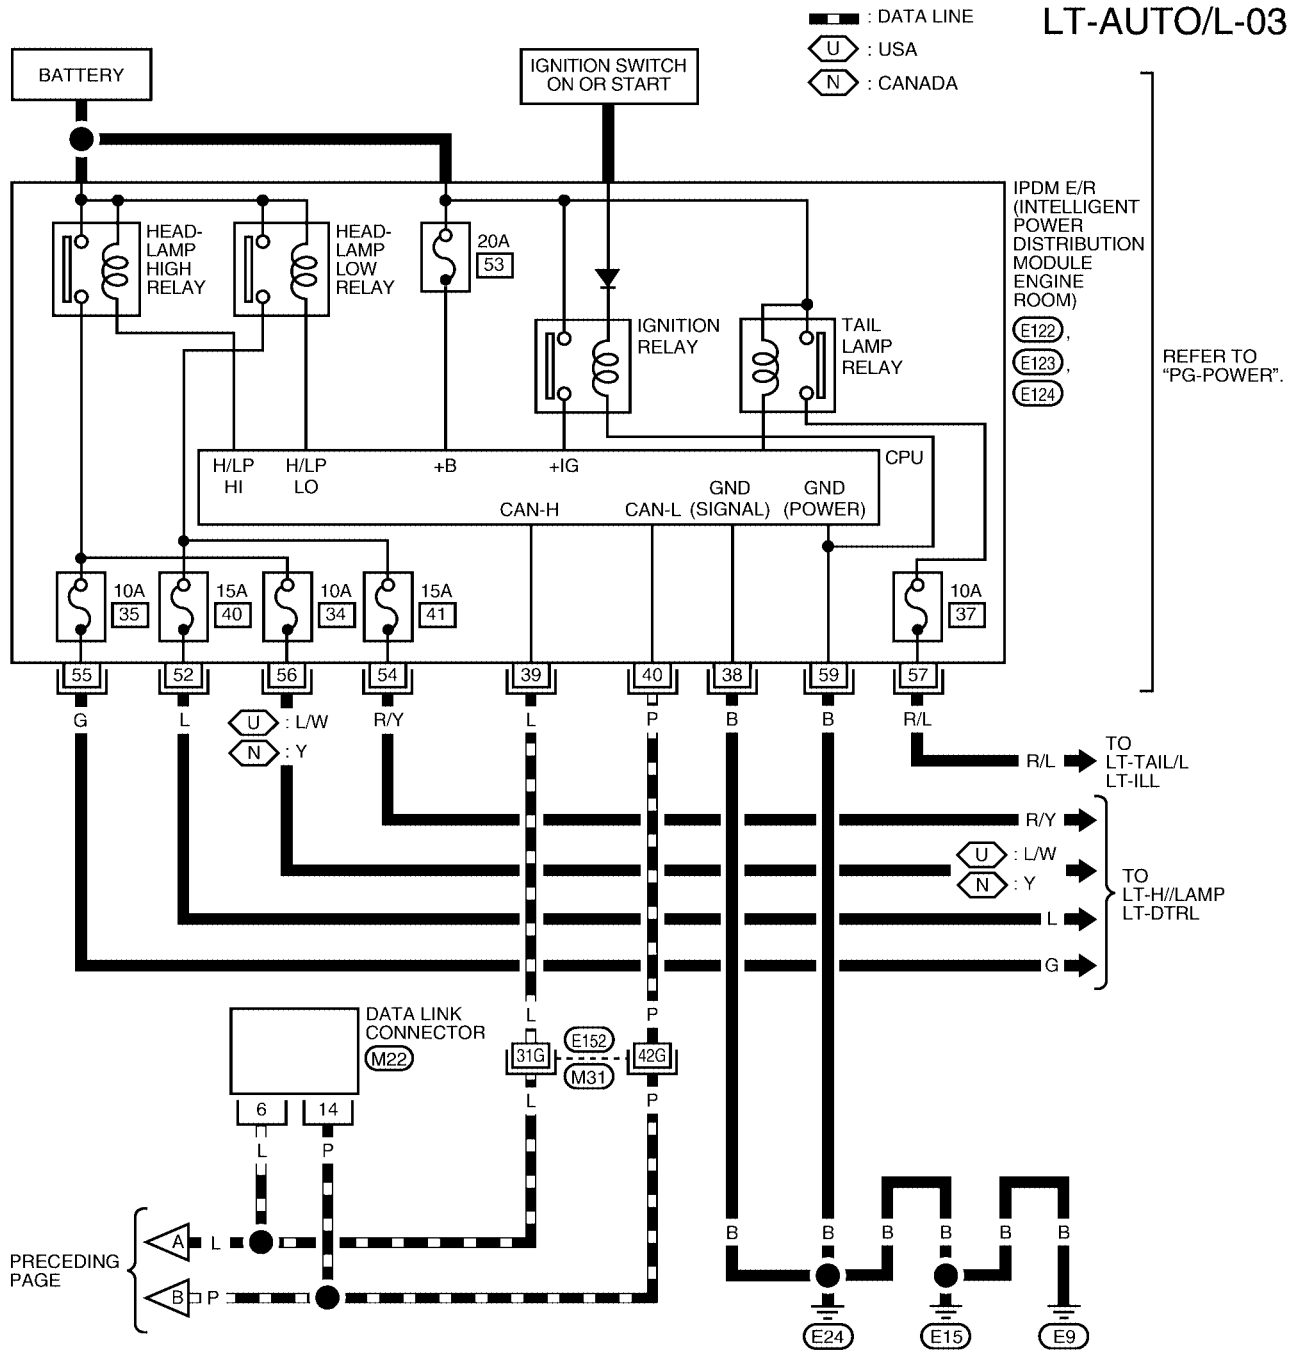



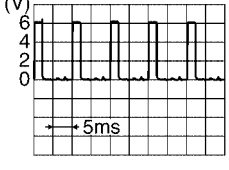
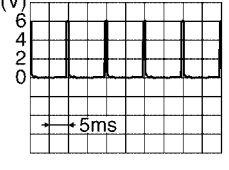


REFER TO THE FOLLOWING.  
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3649E

# AUTO LIGHT SYSTEM


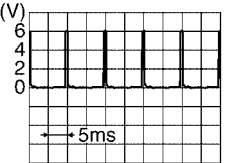
## Terminals and Reference Values for BCM

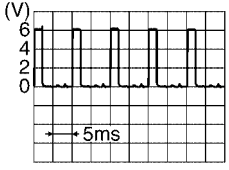EKS00B8X

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)				
			Ignition switch	Operation or condition					
2	SB	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>				
3	G/Y	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>				
4	Y	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>				
5	G/B	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>				
6	V	Combination switch input 1							
12	R/L	Front door switch RH signal	OFF	Front door switch RH	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td>ON (open)</td> <td>0V</td> </tr> <tr> <td>OFF (closed)</td> <td>Battery voltage</td> </tr> </table>	ON (open)	0V	OFF (closed)	Battery voltage
ON (open)	0V								
OFF (closed)	Battery voltage								
13	GR	Rear door switch RH	OFF	Rear door switch RH	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td>ON (open)</td> <td>0V</td> </tr> <tr> <td>OFF (closed)</td> <td>Battery voltage</td> </tr> </table>	ON (open)	0V	OFF (closed)	Battery voltage
ON (open)	0V								
OFF (closed)	Battery voltage								
18	P	Sensor ground	ON	—	0V				
32	R/G	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>				
33	R/Y	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>				

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# AUTO LIGHT SYSTEM

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)	
			Ignition switch	Operation or condition		
34	L	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E	
35	O/B	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E	
36	R/W	Combination switch output 1				
38	W/L	Ignition switch (ON)	ON	—	Battery voltage	
39	L	CAN-H	—	—	—	
40	P	CAN-L	—	—	—	
43	R/B	Back door latch (door ajar switch) signal	OFF	Back door latch (door ajar switch)	ON (open)	0V
					OFF (closed)	Battery voltage
47	SB	Front door switch LH signal	OFF	Front door switch LH	ON (open)	0V
					OFF (closed)	Battery voltage
48	R/Y	Rear door switch LH signal	OFF	Rear door switch LH	ON (open)	0V
					OFF (closed)	Battery voltage
58	W/R	Optical sensor signal	ON	When optical sensor is illuminated		3.1V or more <sup>Note</sup>
				When optical sensor is not illuminated		0.6V or less
67	B	Ground	ON	—	0V	
70	W/B	Battery power supply	OFF	—	Battery voltage	

**NOTE:**

Optical sensor must be completely subjected to work lamp light. If the optical sensor is insufficiently illuminated, the measured value may not satisfy standard.

## Terminals and Reference Values for IPDM E/R

EKS00B8Y

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)	
			Ignition switch	Operation or condition		
38	B	Ground	ON	—	0V	
39	L	CAN-H	—	—	—	
40	P	CAN-L	—	—	—	
52	L	Headlamp low (LH)	ON	Lighting switch 2ND position	OFF	0V
					ON	Battery voltage
54	R/Y	Headlamp low (RH)	ON	Lighting switch 2ND position	OFF	0V
					ON	Battery voltage
55	G	Headlamp high (LH)	ON	Lighting switch HIGH or PASS position	OFF	0V
					ON	Battery voltage

# AUTO LIGHT SYSTEM

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
56	L/W <sup>1</sup> Y <sup>2</sup>	Headlamp high (RH)	ON	Lighting switch HIGH or PASS position	OFF Battery voltage
					ON
57	R/L	Parking, license, and tail lamp	ON	Lighting switch 1ST position	OFF Battery voltage
					ON
59	B	Ground	ON	—	0V

1 USA  
2 Canada

## How to Proceed With Trouble Diagnosis

EKS00B8Z

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-48, "System Description"](#).
3. Carry out the Preliminary Check. Refer to [LT-55, "Preliminary Check"](#).
4. Check symptom and repair or replace the cause of malfunction. Refer to [LT-62, "Trouble Diagnosis Chart by Symptom"](#).
5. Does the auto light system operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

## Preliminary Check

EKS00B90

### SETTING CHANGE FUNCTIONS

- Sensitivity of auto light system can be adjusted using CONSULT-II. Refer to [LT-58, "WORK SUPPORT"](#).

### CHECK POWER SUPPLY AND GROUND CIRCUIT

#### 1. CHECK FUSES OR FUSIBLE LINK

Check for blown fuses or fusible link.

Unit	Power source	Fuse and fusible link No.
BCM	Battery	f
	Ignition switch ON or START position	59
IPDM E/R	Battery	34
		35
		37
		40
		41
		53

Refer to [LT-50, "Wiring Diagram — AUTO/L —"](#).

OK or NG

OK >> GO TO 2.

NG >> If fuse or fusible link is blown, be sure to eliminate cause of malfunction before installing new fuse or fusible link. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

# AUTO LIGHT SYSTEM


## 2. CHECK POWER SUPPLY CIRCUIT

1. Disconnect BCM connectors.
2. Check voltage between BCM harness connector and ground.

BCM		Ignition switch position			
(+)		(-)	OFF	ACC	ON
Connector	Terminal				
M18	38	Ground	0V	0V	Battery voltage
M20	70		Battery voltage	Battery voltage	Battery voltage

**OK or NG**

- OK >> GO TO 3.  
 NG >> Check harness for open between BCM and fuse or fusible link.

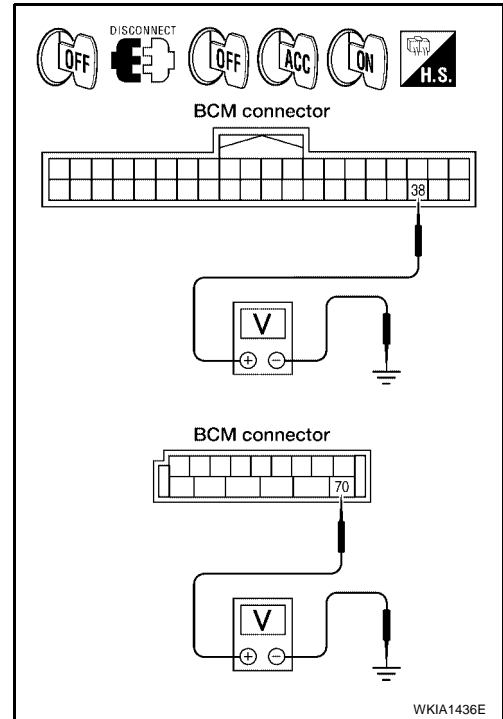


## 3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Continuity
Connector	Terminal	
M20	67	Ground
		Yes

**OK or NG**

- OK >> Inspection End.  
 NG >> Check ground circuit harness.

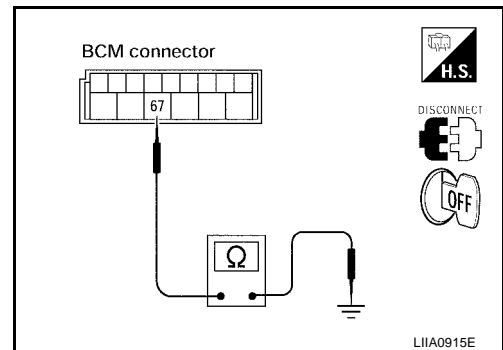



# AUTO LIGHT SYSTEM

## CONSULT-II Function (BCM)

EKS00B91

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

## CONSULT-II OPERATION


### CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

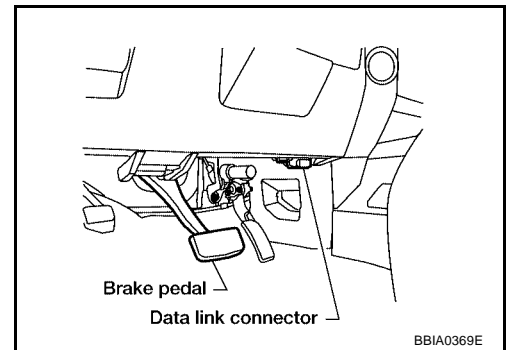

2. Touch "START (NISSAN BASED VHCL)".

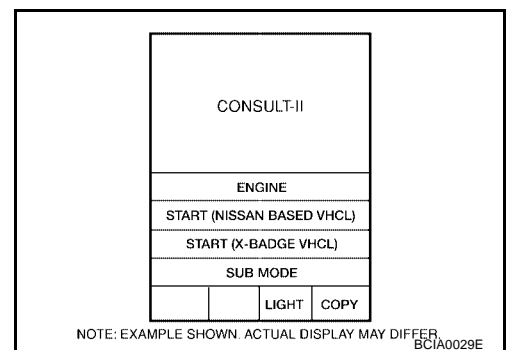

3. Touch "BCM" on "SELECT SYSTEM" screen.  
If "BCM" is not indicated, go to [GI-40, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

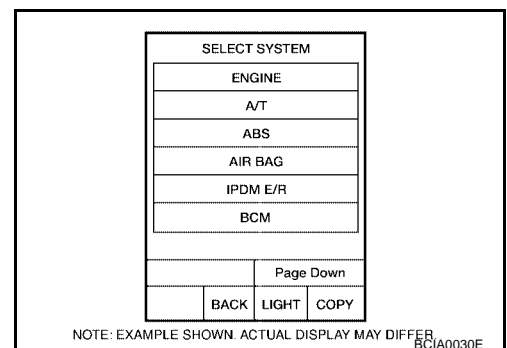

# AUTO LIGHT SYSTEM

4. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.

<b>SELECT TEST ITEM</b>			
HEAD LAMP			
WIPER			
FLASHER			
AIR CONDITIONER			
COMB SW			
BCM			
Scroll Up		Page Down	
	BACK	LIGHT	COPY

LKIA0183E

## WORK SUPPORT

### Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch "CUSTOM A/LIGHT SETTING" or "ILL DELAY SET" on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "MODE 1-4" of setting to be changed (CUSTOM A/LIGHT SETTING). Touch "MODE1-8" of setting to be changed (ILL DELAY SET).
6. Touch "CHANGE SETT".
7. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
8. Touch "END".

### Work Support Setting Item

- Delay timer setting can be selected and set from eight modes.
- Sensitivity of auto light can be selected and set from four modes.

Work item	Description
CUSTOM A/LIGHT SETTING	Auto light sensitivity can be changed in this mode. Sensitivity can be adjusted in four modes. ● MODE 1 (Normal-default)/ MODE 2 (Desensitized)/MODE 3 (Sensitive)/MODE4 (Insensitive)
ILL DELAY SET	Auto light delay off timer period can be changed in this mode. Selects auto light delay off timer period among eight modes. ● MODE 1 (45 sec.)/MODE 2 (OFF)/MODE 3 (30 sec.)/MODE 4 (60 sec.)/MODE 5 (90 sec.)/MODE 6 (120 sec.)/MODE 7 (150 sec.)/MODE 8 (180 sec.)

## DATA MONITOR

### Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects and monitors individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch individual items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

### Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
ACC ON SW "ON/OFF"	Displays "ACC (ON)/OFF, Ignition OFF (OFF)" status judged from ignition switch signal.

# AUTO LIGHT SYSTEM

Monitor item	Contents
HI BEAM SW "ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.
HEAD LAMP SW 1 "ON/OFF"	Displays status (headlamp switch 1: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
HEAD LAMP SW 2 "ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
LIGHT SW 1ST "ON/OFF"	Displays status (lighting switch 1st position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
AUTO LIGHT SW "ON/OFF"	Displays status of the lighting switch as judged from the lighting switch signal. (AUTO position: ON/Other than AUTO position: OFF)
PASSING SW "ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
FR FOG SW "ON/OFF"	Displays status (front fog lamp switch: ON/Others: OFF) of front fog lamp switch judged from lighting switch signal.
DOOR SW-DR "ON/OFF"	Displays status of the front door LH as judged from the front door switch LH signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-AS "ON/OFF"	Displays status of the front door RH as judged from the front door switch RH signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-RR "ON/OFF"	Displays status of the rear door as judged from the rear door switch (RH) signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-RL "ON/OFF"	Displays status of the rear door as judged from the rear door switch (LH) signal. (Door is open: ON/Door is closed: OFF)
BACK DOOR SW "ON/OFF"	Displays status of the back door as judged from the back door latch (door ajar switch) signal. (Door is open: ON/Door is closed: OFF)
TURN SIGNAL R "ON/OFF"	Displays status (Turn right: ON/Others: OFF) as judged from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays status (Turn left: ON/Others: OFF) as judged from lighting switch signal.
CARGO LAMP SW "ON/OFF"	Displays status of cargo lamp.
OPTICAL SENSOR [0 - 5V]	Displays "ambient light (close to 5V when dark/close to 0V when light)" judged from optical sensor signal.

## ACTIVE TEST

### Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

### Display Item List

Test item	Description
TAIL LAMP	Allows tail lamp relay to operate by switching ON-OFF.
HEAD LAMP	Allows headlamp relay (HI, LO) to operate by switching ON-OFF.
FR FOG LAMP	Allows fog lamp relay to operate by switching ON-OFF.
CARGO LAMP	Allows cargo lamp to operate by switching ON-OFF.

## SELF-DIAGNOSTIC RESULTS

### Operation Procedure

1. Touch "BCM" on "SELECT TEST ITEM" screen.
2. Touch "SELF-DIAG RESULTS" on "SELECT DIAG MODE" screen.
3. Self-diagnostic results are displayed.

# AUTO LIGHT SYSTEM

## Display Item List

Monitored item	CONSULT-II display	Description
CAN communication	CAN communication [U1000]	Malfunction is detected in CAN communication.
CAN communication system	CAN communication system 1 to 6 [U1000]	Malfunction is detected in CAN system.

## CONSULT-II Function (IPDM E/R)

EKS00B92

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


IPDM E/R diagnostic mode	Description
SELF-DIAG RESULTS	Displays IPDM E/R self-diagnosis results.
DATA MONITOR	Displays IPDM E/R input/output data in real time.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.

## CONSULT-II OPERATION

### CAUTION:


If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.

1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn the ignition switch ON.

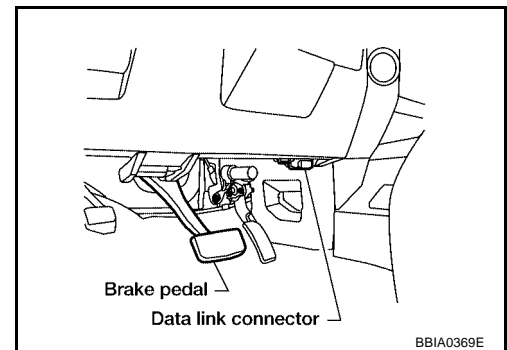


BBA0369E

2. Touch "START (NISSAN BASED VHCL)".

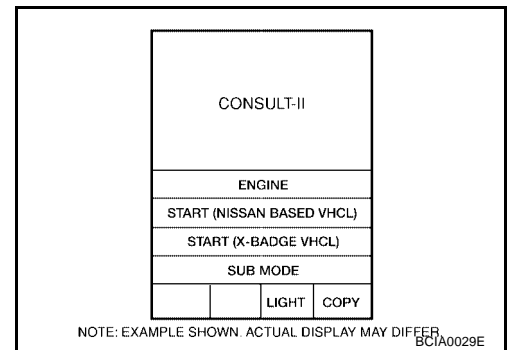

BCIA0029E


3. Touch "IPDM E/R" on "SELECT SYSTEM" screen. If "IPDM E/R" is not displayed, refer to [GI-40, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

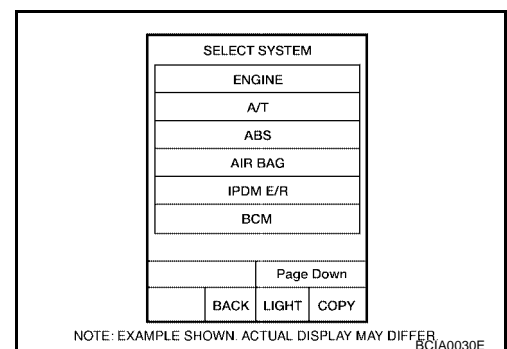

BCIA0030E

# AUTO LIGHT SYSTEM

- Select the desired part to be diagnosed on the "SELECT DIAG MODE" screen.

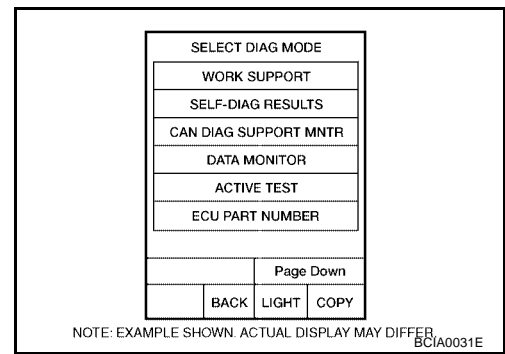

## DATA MONITOR

### Operation Procedure

- Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
- Touch "ALL SIGNALS", "MAIN SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

ALL SIGNALS	All items will be monitored.
MAIN SIGNALS	Monitor the predetermined item.
SELECTION FROM MENU	Select any item for monitoring.

- Touch "START".
- Touch the required monitoring item on "SELECTION FROM MENU". In "ALL SIGNALS", all items are monitored. In "MAIN SIGNALS", predetermined items are monitored.
- Touch "RECORD" while monitoring to record the status of the item being monitored. To stop recording, touch "STOP".

### All Items, Main Items, Select Item Menu

Item name	CONSULT-II screen display	Display or unit	Monitor item selection			Description
			ALL SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
Parking, license plate and tail lamps request	TAIL&CLR REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp low beam request	HL LO REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp high beam request	HL HI REQ	ON/OFF	×	×	×	Signal status input from BCM
Front fog lamps request	FR FOG REQ	ON/OFF	×	×	×	Signal status input from BCM

#### NOTE:

Perform monitoring of IPDM E/R data with the ignition switch ON. When the ignition switch is at ACC, the display may not be correct.

## ACTIVE TEST

### Operation Procedure

- Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
- Touch item to be tested, and check operation.
- Touch "START".
- Touch "STOP" while testing to stop the operation.

Test item	CONSULT-II screen display	Description
Tail lamp relay output	TAIL LAMP	Allows tail lamp relay to operate by switching operation ON-OFF at your option.

# AUTO LIGHT SYSTEM

Test item	CONSULT-II screen display	Description
Headlamp relay (HI, LO) output	LAMPS	Allows headlamp relay (HI, LO) to operate by switching operation (OFF, HI, LO) at your option (Headlamp high beam repeats ON-OFF every 1 second).
Front fog lamp relay output		Allows fog lamp relay to operate by switching operation ON-OFF at your option.

## Trouble Diagnosis Chart by Symptom

EKS00B93

Trouble phenomenon	Malfunction system and reference
<ul style="list-style-type: none"> <li>● Parking lamps and headlamps will not illuminate when outside of the vehicle becomes dark. (Lighting switch 1st position and 2nd position operate normally.)</li> <li>● Parking lamps and headlamp will not go out when outside of the vehicle becomes light. (Lighting switch 1st position and 2nd position operate normally.)</li> <li>● Headlamps go out when outside of the vehicle becomes light, but parking lamps stay on.</li> </ul>	<ul style="list-style-type: none"> <li>● Refer to <a href="#">LT-58, "WORK SUPPORT"</a> .</li> <li>● Refer to <a href="#">LT-62, "Lighting Switch Inspection"</a> .</li> <li>● Refer to <a href="#">LT-63, "Optical Sensor System Inspection"</a> .</li> </ul> <p>If above systems are normal, replace BCM. Refer to <a href="#">BCS-20, "BCM"</a> .</p>
Parking lamps illuminate when outside of the vehicle becomes dark, but headlamps stay off. (Lighting switch 1st position and 2nd position operate normally.)	<ul style="list-style-type: none"> <li>● Refer to <a href="#">LT-58, "WORK SUPPORT"</a> .</li> <li>● Refer to <a href="#">LT-63, "Optical Sensor System Inspection"</a> .</li> </ul> <p>If above systems are normal, replace BCM. Refer to <a href="#">BCS-20, "BCM"</a> .</p>
Auto light adjustment system will not operate. (Lighting switch AUTO, 1st position and 2nd position operate normally.)	<ul style="list-style-type: none"> <li>● Refer to <a href="#">LT-63, "Optical Sensor System Inspection"</a> .</li> </ul> <p>If above system is normal, replace BCM. Refer to <a href="#">BCS-20, "BCM"</a> .</p>
Auto light adjustment system will not operate.	<ul style="list-style-type: none"> <li>● CAN communication line to BCM inspection. Refer to <a href="#">BCS-13, "CAN Communication Inspection Using CONSULT-II (Self-Diagnosis)"</a> .</li> </ul>
Shut off delay feature will not operate.	<ul style="list-style-type: none"> <li>● CAN communication line inspection between BCM and combination meter. Refer to <a href="#">BCS-13, "CAN Communication Inspection Using CONSULT-II (Self-Diagnosis)"</a> .</li> <li>● Refer to <a href="#">BL-31, "Door Switch Check"</a> .</li> </ul> <p>If above system is normal, replace BCM. Refer to <a href="#">BCS-20, "BCM"</a> .</p>

## Lighting Switch Inspection

EKS00B94

### 1. CHECK LIGHTING SWITCH INPUT SIGNAL

④ With CONSULT-II

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "AUTO LIGHT SW" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in AUTO position : AUTO LIGHT SW ON**

⊗ Without CONSULT-II

Refer to [LT-103, "Combination Switch Inspection"](#) .

OK or NG

OK >> Inspection End.

NG >> Check lighting switch. Refer to [LT-103, "Combination Switch Inspection"](#) .

DATA MONITOR	
MONITOR	
AUTO LIGHT SW	ON

SKIA4196E

# AUTO LIGHT SYSTEM

EKS00B95

## Optical Sensor System Inspection

### 1. CHECK OPTICAL SENSOR INPUT SIGNAL

④ With CONSULT-II

Select "BCM" on CONSULT-II. With "OPTICAL SENSOR" data monitor, check difference in the voltage when the optical sensor is illuminated and not illuminated.

**Illuminated**

**OPTICAL SENSOR : 3.1V or more**

**Not illuminated**

**OPTICAL SENSOR : 0.6V or less**

#### NOTE:

Optical sensor must be completely subjected to work lamp light. If the optical sensor is insufficiently illuminated, the measured value may not satisfy the standard.


⊗ Without CONSULT-II

GO TO 2.

OK or NG

OK >> Inspection End.

NG >> GO TO 2.

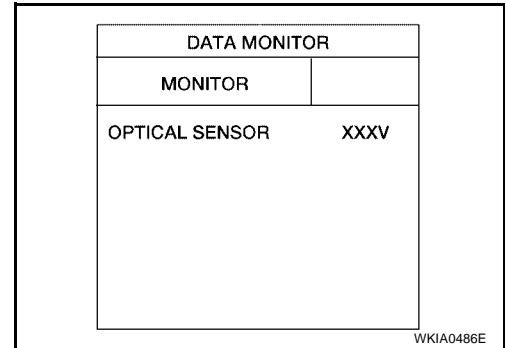


### 2. CHECK OPTICAL SENSOR SIGNAL GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors and optical sensor connector.
3. Check continuity (open circuit) between BCM harness connector M18 terminal 18 and optical sensor harness connector M402 terminal 3.

**18 - 3 : Continuity should exist.**

4. Check continuity (short circuit) between BCM harness connector M18 terminal 18 and ground.

**18 - Ground : Continuity should not exist.**

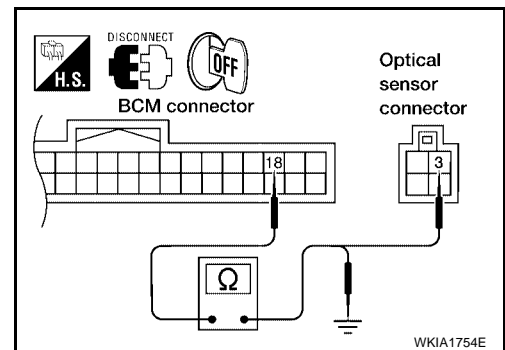

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.


### 3. CHECK OPTICAL SENSOR SIGNAL CIRCUIT

1. Check continuity (open circuit) between BCM harness connector M20 terminal 58 and optical sensor harness connector M402 terminal 4.

**58 - 4 : Continuity should exist.**

2. Check continuity (short circuit) between BCM harness connector M20 terminal 58 and ground.

**58 - Ground : Continuity should not exist.**

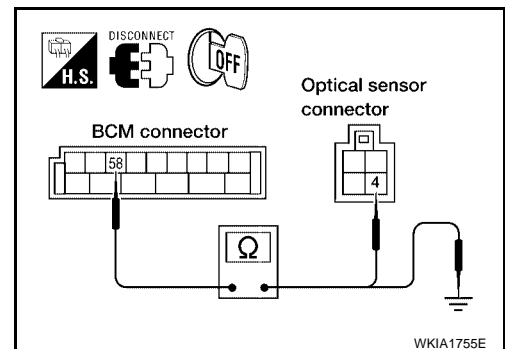

OK or NG

OK >> Replace optical sensor. Refer to [LT-64, "Optical Sensor"](#). Recheck sensor output with CONSULT-II. If NG, replace BCM. Refer to [BCS-20, "BCM"](#).

NG >> Repair harness or connector.


# AUTO LIGHT SYSTEM

EKS00B96

## Optical Sensor REMOVAL AND INSTALLATION

### Removal

1. Remove defrost grille. Refer to [IP-10, "INSTRUMENT PANEL ASSEMBLY"](#).
2. Disconnect the connector.
3. Turn the optical sensor counterclockwise to remove it from defroster grille.

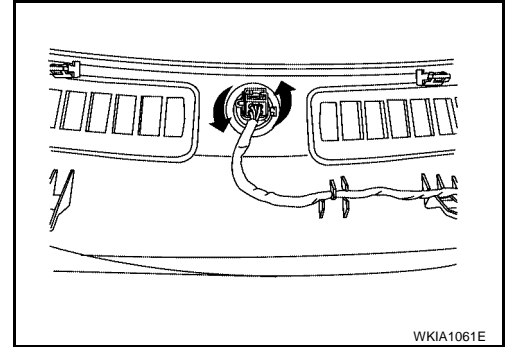

### Installation

Installation is in the reverse order of removal.



# HEADLAMP AIMING CONTROL

## HEADLAMP AIMING CONTROL

PFP:26010

### System Description

EKS00B97

The headlamp aiming system is controlled by the headlamp aiming switch. Power is supplied at all times

- to ignition relay, located in the IPDM E/R (intelligent power distribution module engine room), and
- through 50A fusible link (letter f , located in the fuse and fusible link box)
- to BCM (body control module) terminal 70, and
- to headlamp low relay, located in the IPDM E/R (intelligent power distribution module engine room), and
- through 20A fuse (No. 53, located in the IPDM E/R)
- to CPU (central processing unit) of the IPDM E/R.

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse (No. 59, located in the fuse and relay box)
- to BCM terminal 38.

When the ignition switch is in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to BCM terminal 11.

When the lighting switch is in the 2ND position or AUTO position (auto lights ON), the headlamp low relay (located in the IPDM E/R) is energized. When energized, power is supplied

- through 15A fuse (No. 41, located in the IPDM E/R)
- through IPDM E/R terminal 26
- to front combination lamp LH and RH (headlamp aiming motor) terminal 8.

Ground is supplied

- to front combination lamp LH and RH (headlamp aiming motor) terminal 4
- through grounds E9, E15 and E24, and
- to front combination lamp LH and RH (headlamp aiming motor) terminal 7
- through headlamp aiming switch terminal 1
- through headlamp aiming switch terminal 2
- through grounds M57, M61 and M79.

With power and ground supplied, headlamp aiming motors operate according to the aiming switch position.

A

B

C

D

E

F

G

H

I

J

LT

L

M



# HEADLAMP AIMING CONTROL

EKS00B98

## Wiring Diagram — H/AIM —

LT-H/AIM-01

— : DATA LINE

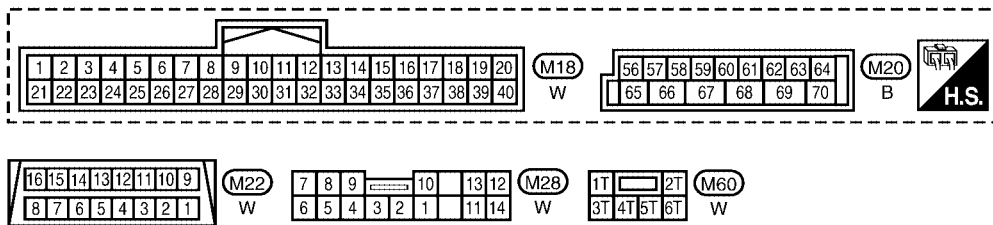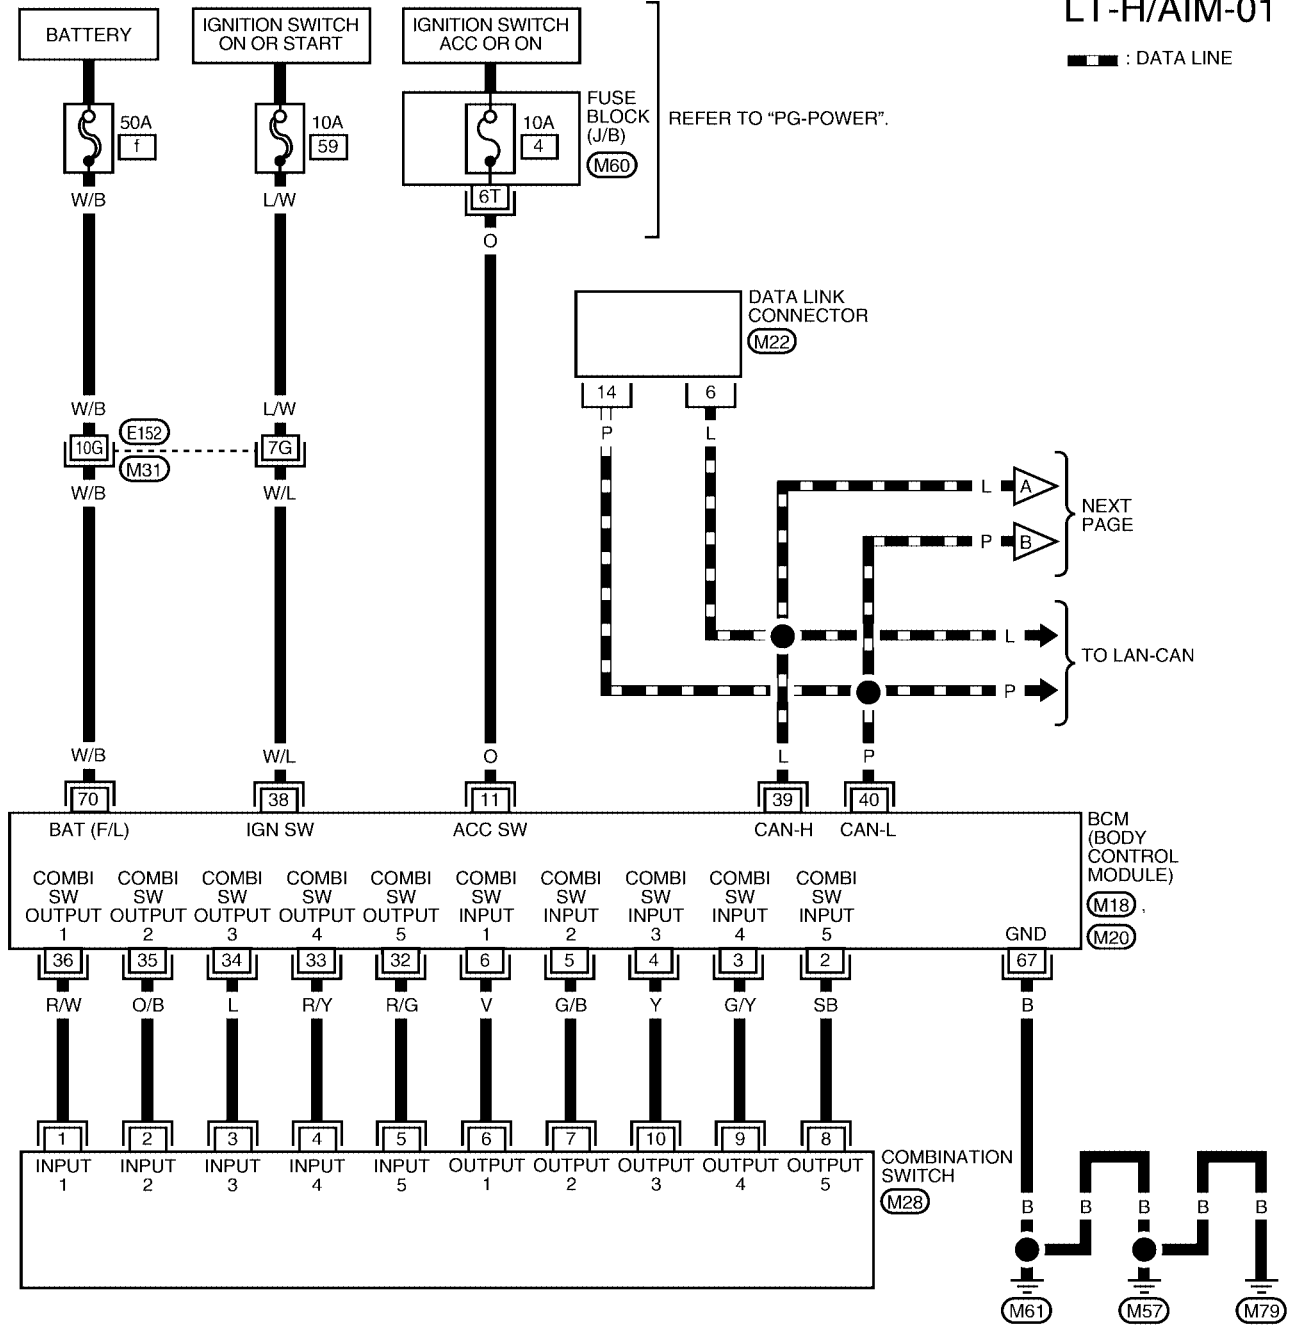




REFER TO THE FOLLOWING.

(M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3650E

# HEADLAMP AIMING CONTROL

LT-H/AIM-02

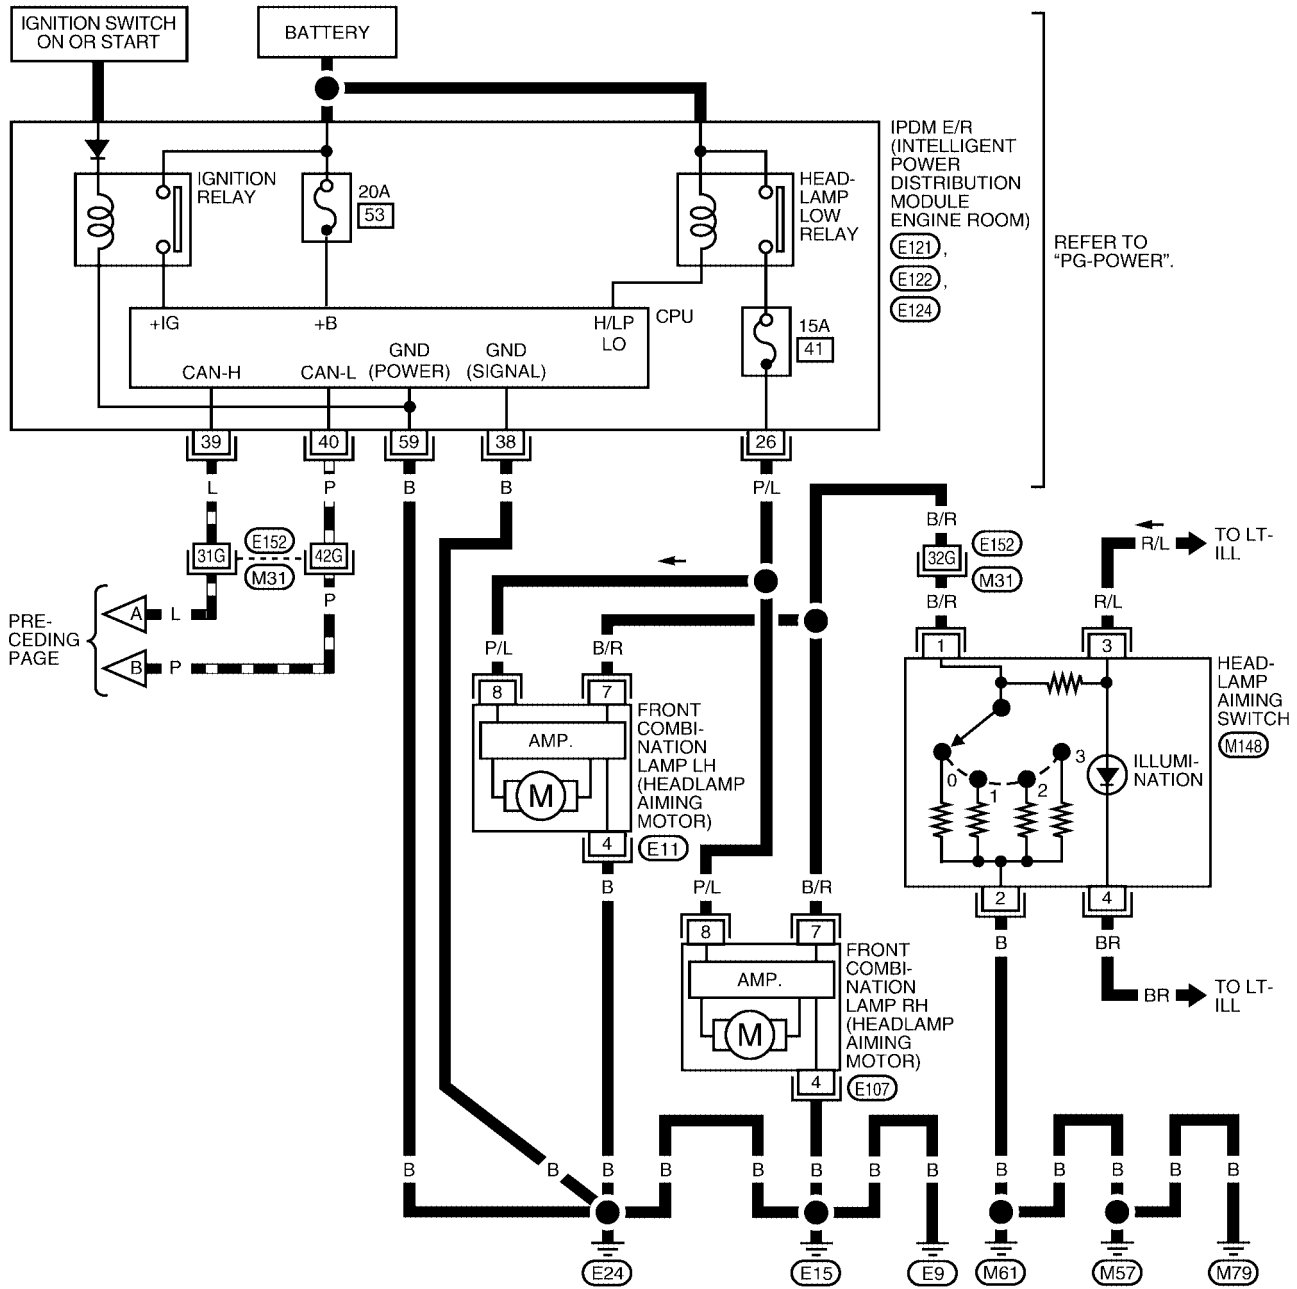

REFER TO THE FOLLOWING.  
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA2488E


# HEADLAMP AIMING CONTROL

## Headlamp Aiming Switch REMOVAL AND INSTALLATION

EKS00B99

### Removal

1. Remove cluster lid A. Refer to [IP-10. "INSTRUMENT PANEL ASSEMBLY"](#).
2. Carefully release the headlamp aiming switch retaining pawls and remove the switch.

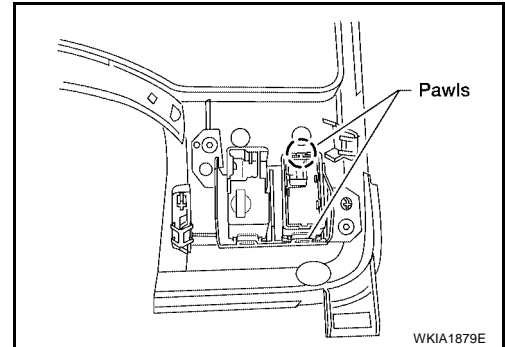

### Installation


Installation is in the reverse order of removal.

### Switch Circuit Inspection

EKS00B9A

Using a circuit tester, check continuity between the headlamp aiming switch connector terminals in each operation status of the aiming switch.

**Resistor tolerance** :  $\pm 5\%$

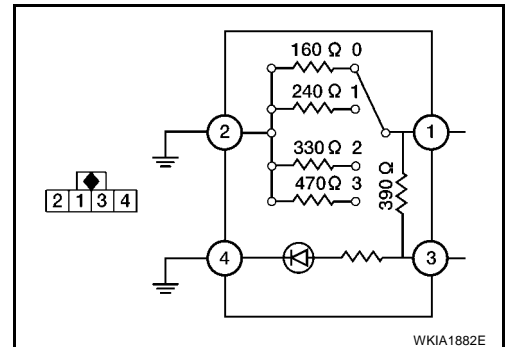


# FRONT FOG LAMP

PFP:26150

EKS00B9B

## FRONT FOG LAMP

### Component Parts and Harness Connector Location

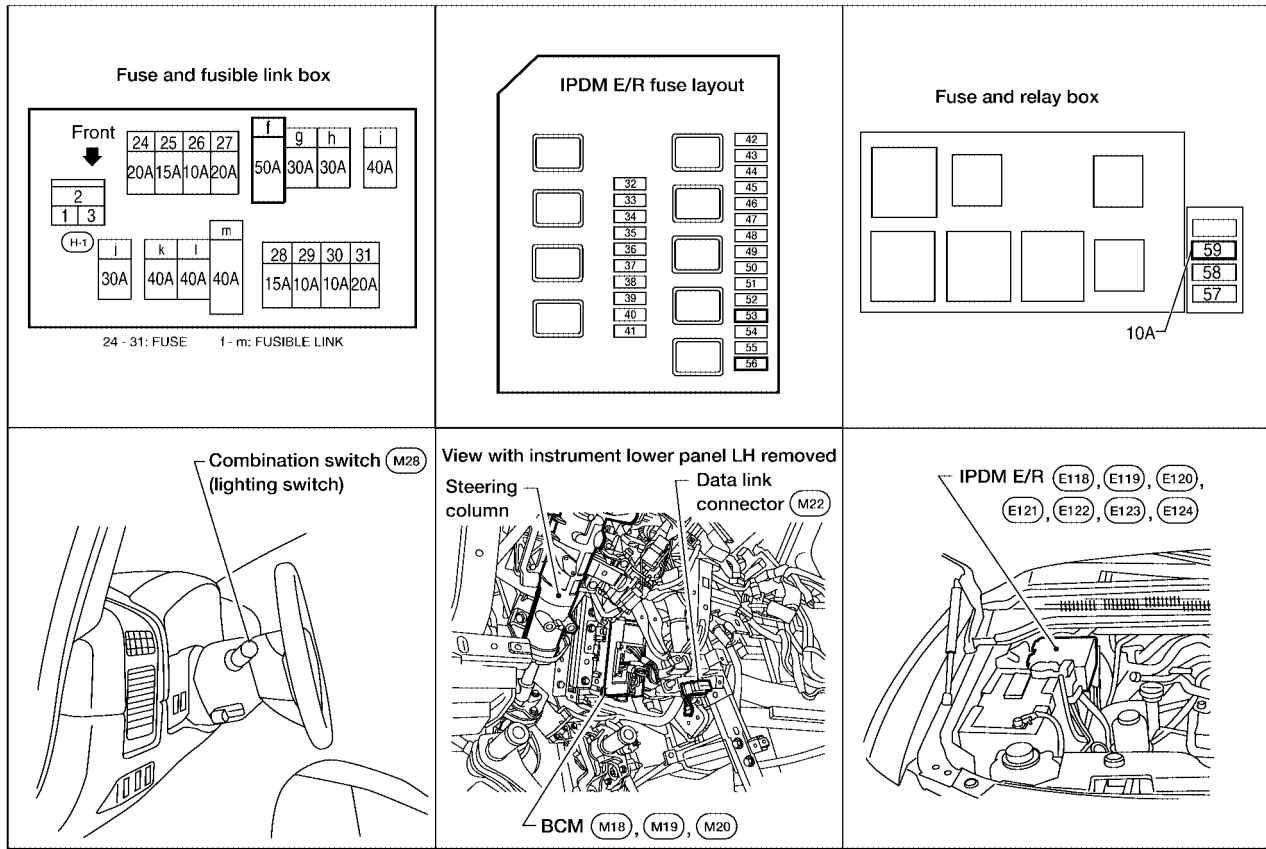

WKIA3466E

## System Description

EKS00B9C

Control of the fog lamps is dependent upon the position of the combination switch (lighting switch). The lighting switch must be in the 2ND position or AUTO position (LOW beam is ON) for front fog lamp operation. When the lighting switch is placed in the fog lamp position, the BCM (body control module) receives input signal requesting the fog lamps to illuminate. When the headlamps are illuminated, this input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the front fog lamp relay coil. When activated, this relay directs power to the front fog lamps.

## OUTLINE

Power is supplied at all times

- to ignition relay, located in the IPDM E/R, and
- to front fog lamp relay, located in the IPDM E/R, and
- through 20A fuse (No. 53, located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- through 50A fusible link (letter f, located in the fuse and fusible link box)
- to BCM terminal 70.

When the ignition switch is in ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse (No. 59, located in the fuse and relay box)
- to BCM terminal 38.

Ground is supplied

- to BCM terminal 67
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 59

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# FRONT FOG LAMP

---

- through grounds E9, E15 and E24.

## FOG LAMP OPERATION

The fog lamp switch is built into the combination switch. The lighting switch must be in the 2ND position or AUTO position (LOW beam is ON) and the fog lamp switch must be ON for fog lamp operation.

With the fog lamp switch in the ON position, the CPU of the IPDM E/R grounds the coil side of the fog lamp relay. The fog lamp relay then directs power

- through 20A fuse (No. 56, located in the IPDM E/R)
- through IPDM E/R terminal 50
- to front turn/fog lamp LH terminal 1, and
- through IPDM E/R terminal 51
- to front turn/fog lamp RH terminal 1.

Ground is supplied

- to front turn/fog lamp LH and RH terminal 3
- through grounds E9, E15 and E24.

With power and ground supplied, the front fog lamps illuminate.

## COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

## EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 2ND position (ON), the fog lamp switch is ON, and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated.

Under this condition, the fog lamps (and headlamps) remain illuminated for 5 minutes, then the fog lamps (and headlamps) are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

## CAN Communication System Description

EKS00B9D

Refer to [LAN-26, "CAN COMMUNICATION"](#) .



# FRONT FOG LAMP

## Wiring Diagram — F/FOG —

EKS00B9E

LT-F/FOG-01

— : DATA LINE

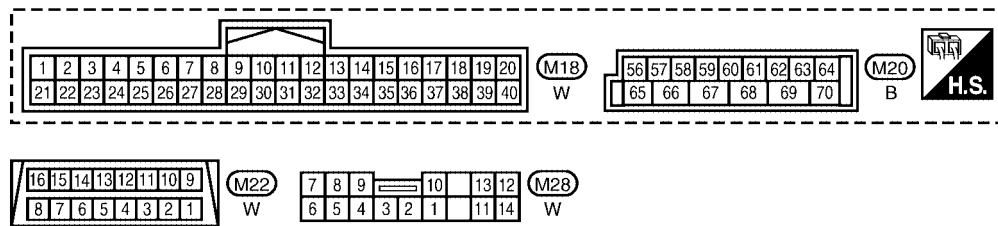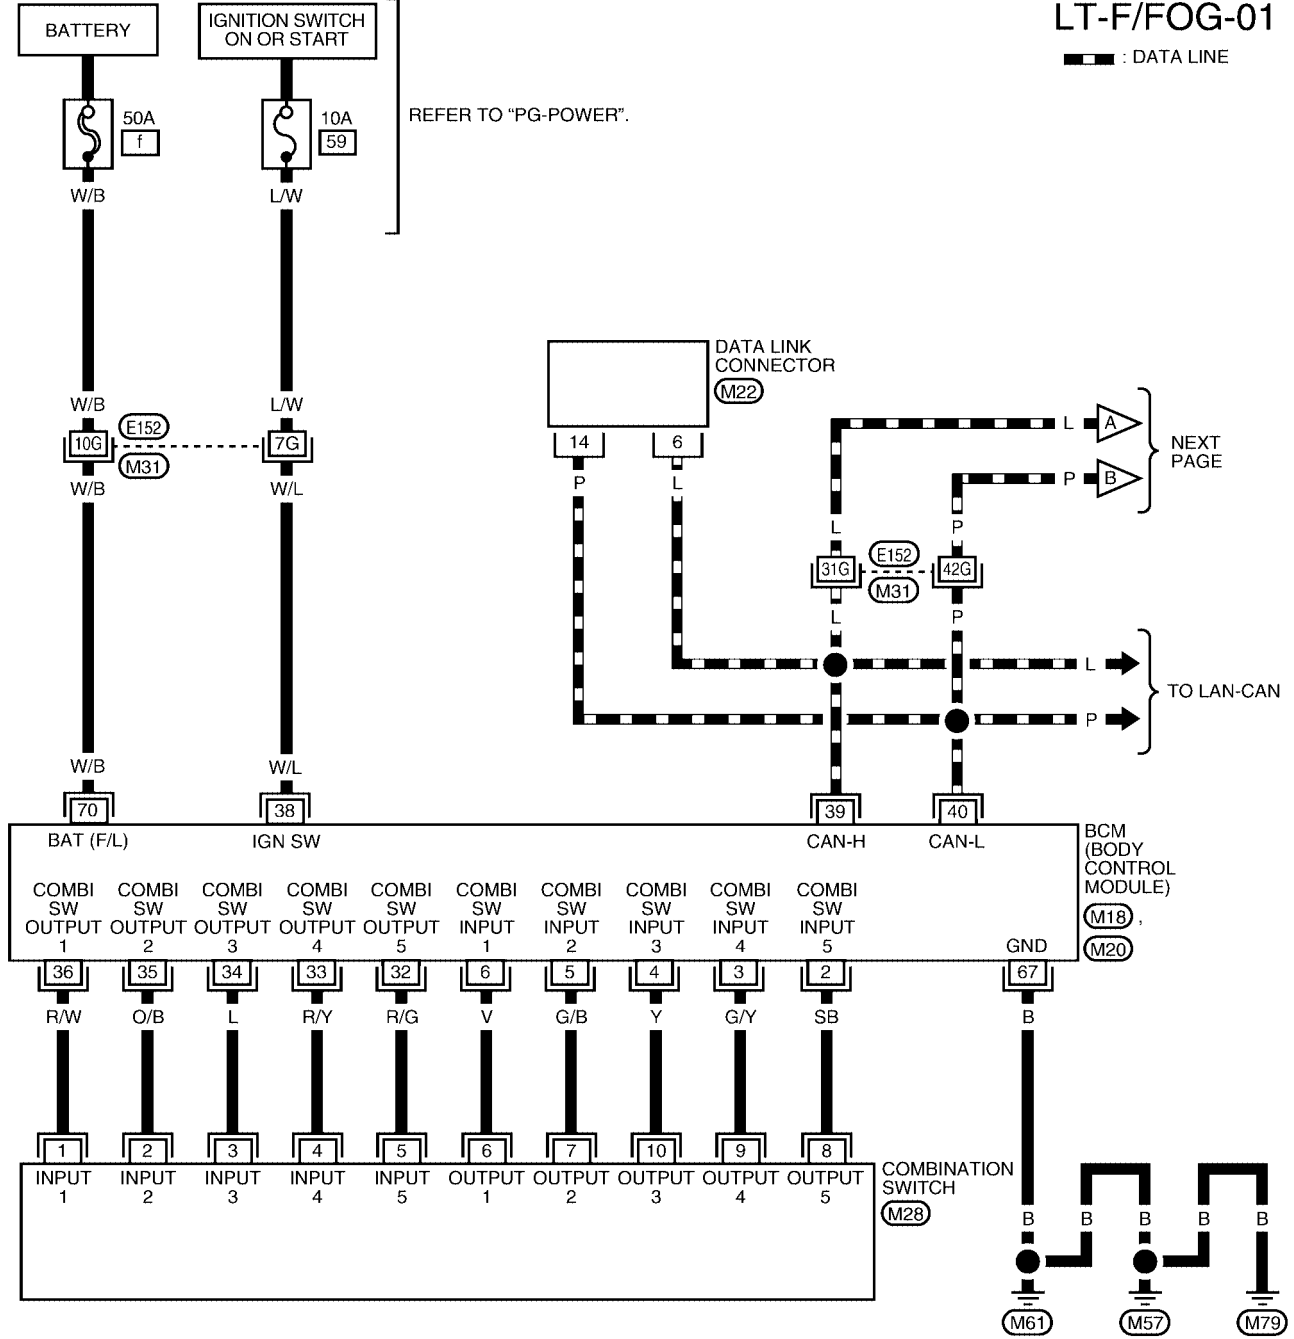


REFER TO THE FOLLOWING.  
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3652E


# FRONT FOG LAMP

LT-F/FOG-02

▬ : DATA LINE

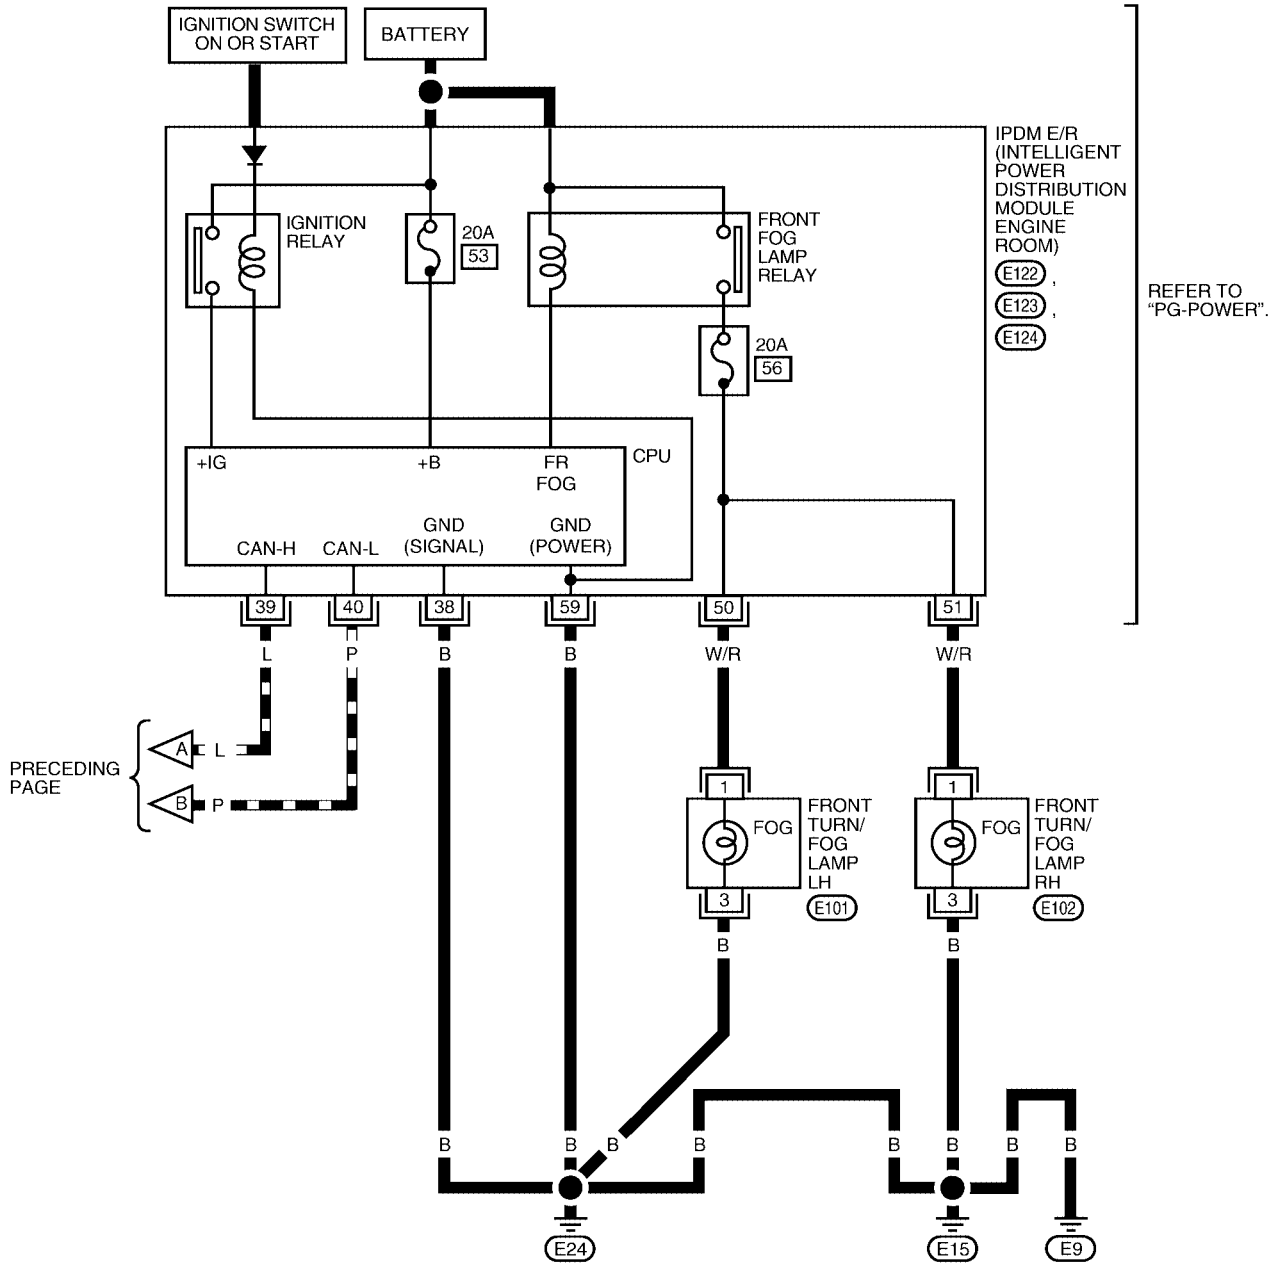

PRECEDING PAGE










WKWA3653E



# FRONT FOG LAMP

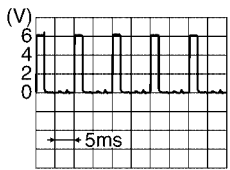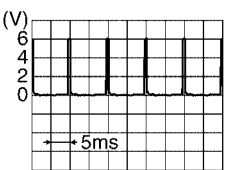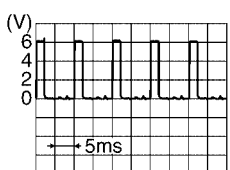
## Terminals and Reference Values for BCM

EKS00B9F

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
2	SB	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
3	G/Y	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
4	Y	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
5	G/B	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
6	V	Combination switch input 1			
32	R/G	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
33	R/Y	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
34	L	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# FRONT FOG LAMP

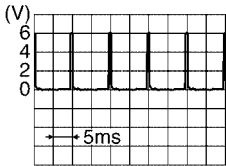Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
35	O/B	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	
36	R/W	Combination switch output 1			
38	W/L	Ignition switch (ON)	ON	—	Battery voltage
39	L	CAN-H	—	—	—
40	P	CAN-L	—	—	—
67	B	Ground	ON	—	0V
70	W/B	Battery power supply (fusible link)	OFF	—	Battery voltage

## Terminals and Reference Values for IPDM E/R

EKS00B9G

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)	
			Ignition switch	Operation or condition		
38	B	Ground	ON	—	0V	
39	L	CAN-H	—	—	—	
40	P	CAN-L	—	—	—	
50	W/R	Front turn/fog lamp (LH)	ON	Lighting switch must be in the 2ND position or AUTO position (LOW beam is ON) and the front fog lamp switch must be ON	OFF	0V
					ON	Battery voltage
51	W/R	Front turn/fog lamp (RH)	ON	Lighting switch must be in the 2ND position or AUTO position (LOW beam is ON) and the front fog lamp switch must be ON	OFF	0V
					ON	Battery voltage
59	B	Ground	ON	—	0V	

## How to Proceed With Trouble Diagnosis

EKS00B9H

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-69, "System Description"](#) .
3. Perform the Preliminary Check. Refer to [LT-75, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Does the front fog lamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

# FRONT FOG LAMP

EKS00B9I

## Preliminary Check CHECK POWER SUPPLY AND GROUND CIRCUIT

### 1. CHECK FUSES OR FUSIBLE LINK

Check for blown fuses or fusible link.

Unit	Power source	Fuse and fusible link No.
BCM	Battery	f
	Ignition switch ON or START position	59
IPDM E/R	Battery	53
	Battery (Fog lamps ON)	56

Refer to [LT-71, "Wiring Diagram — F/FOG —"](#) .

OK or NG

OK >> GO TO 2.

NG >> If fuse or fusible link is blown, be sure to eliminate cause of malfunction before installing new fuse or fusible link. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

### 2. CHECK POWER SUPPLY CIRCUIT


1. Disconnect BCM connectors.
2. Check voltage between BCM harness connector and ground.

BCM		(-)	Ignition switch position		
(+)			OFF	ACC	ON
Connector	Terminal	Ground	0V	0V	Battery voltage
M18	38		Battery voltage	Battery voltage	Battery voltage
M20	70				

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between BCM and fuse or fusible link.

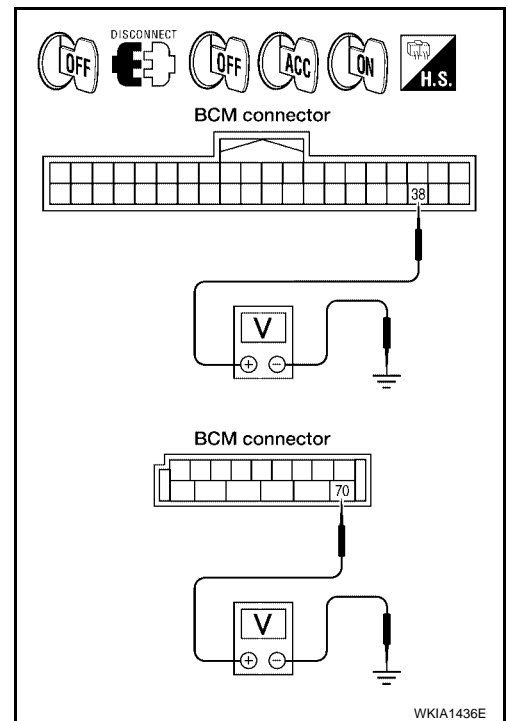

### 3. CHECK GROUND CIRCUIT


Check continuity between BCM harness connector and ground.

BCM			Continuity
Connector	Terminal		
M20	67	Ground	Yes

OK or NG

OK >> Inspection End.

NG >> Check ground circuit harness.

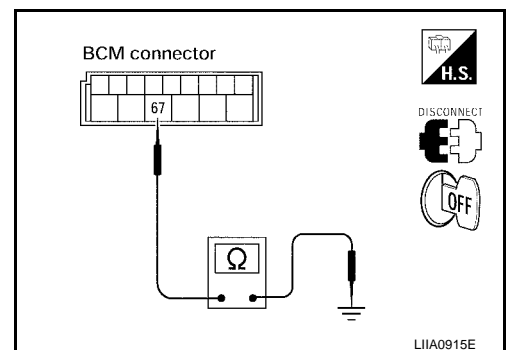

# FRONT FOG LAMP

EKS00B9J

## CONSULT-II Functions

Refer to [LT-16, "CONSULT-II Function \(BCM\)"](#) in HEADLAMP (FOR USA).

Refer to [LT-19, "CONSULT-II Function \(IPDM E/R\)"](#) in HEADLAMP (FOR USA).

## Front Fog Lamps Do Not Illuminate (Both Sides)

EKS00B9K

### 1. CHECK COMBINATION SWITCH INPUT SIGNAL

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "FR FOG SW" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in FOG position : FR FOG SW ON**

OK or NG

OK >> GO TO 2.

NG >> Check lighting switch. Refer to [LT-103, "Combination Switch Inspection"](#) .

DATA MONITOR	
MONITOR	
FR FOG SW	ON

SKIA5897E

### 2. FOG LAMP ACTIVE TEST

1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
3. Touch "FOG" on "ACTIVE TEST" screen.
4. Make sure fog lamps operate.

**Fog lamps should operate.**

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

ACTIVE TEST			
EXTERNAL LAMPS		OFF	
		TAIL	
LO		HI	
FOG			
MODE	BACK	LIGHT	COPY

WKIA1438E

### 3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "FR FOG REQ" turns ON when lighting switch is in FOG position.

**When lighting switch is in FOG position : FR FOG REQ ON**

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-30, "Removal and Installation of IPDM E/R"](#) .

NG >> Replace BCM. Refer to [BCS-20, "BCM"](#) .

DATA MONITOR			
MONITOR			
FR FOG REQ		ON	
		Page Down	
RECORD			
MODE	BACK	LIGHT	COPY

SKIA5898E

# FRONT FOG LAMP

## 4. IPDM E/R INSPECTION


1. Disconnect front turn/fog lamp connectors
2. Start auto active test. Refer to [PG-24, "Auto Active Test"](#) . When front fog lamp relay is operating, check voltage between left/right front turn/fog lamp connector terminal and ground.

Front turn/fog lamp (+)			(-)	Voltage (Approx.)
Connector		Terminal		
LH	E101	1	Ground	Battery voltage
RH	E102	1		

OK or NG

OK >> Check front fog lamp bulbs and replace as necessary.

NG >> Replace IPDM E/R. Refer to [PG-30, "Removal and Installation of IPDM E/R"](#) .

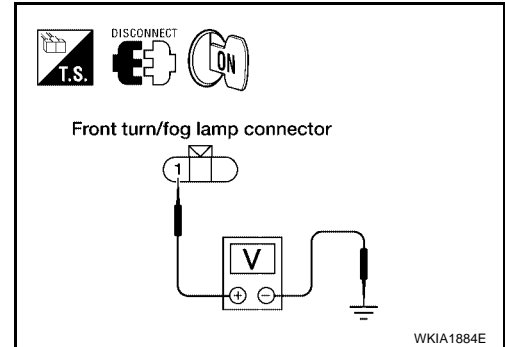

## Front Fog Lamp Does Not Illuminate (One Side)

EKS00B9L

### 1. BULB INSPECTION

Inspect bulbs of lamps which do not illuminate.

OK or NG

OK >> GO TO 2.

NG >> Replace lamp bulb. Refer to [LT-79, "Bulb Replacement"](#) .

### 2. INSPECTION BETWEEN IPDM E/R AND FRONT FOG LAMPS


1. Disconnect IPDM E/R connector and inoperative front fog lamp connector.
2. Check continuity between harness connector terminals of IPDM E/R and harness connector terminal of front turn/fog lamps.

IPDM E/R		Front turn/fog lamp			Continuity
Connector	Terminal	Connector	Terminal	Terminal	
E123	50	LH	E101	1	Yes
	51	RH	E102	1	

OK or NG

OK >> Check ground circuit. If OK, replace IPDM E/R. Refer to [PG-30, "Removal and Installation of IPDM E/R"](#) . If NG, repair harness or connector.

NG >> Check for short circuits and open circuits in harness between IPDM E/R and front turn/fog lamps.

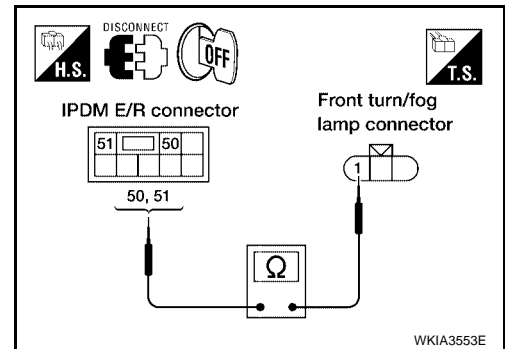

# FRONT FOG LAMP

EKS00B9M

## Aiming Adjustment


The fog lamp is a semi-sealed beam type which uses a replaceable halogen bulb. Before performing aiming adjustment, make sure of the following.

- Keep all tires inflated to correct pressure.
- Place vehicle on level ground.
- See that vehicle is unloaded (except for full levels of coolant, engine oil and fuel, and spare tire, jack, and tools). Have the driver or equivalent weight placed in driver seat.


Adjust aiming in the vertical direction by turning the adjustment screw.

### NOTE:


Access adjustment screw from underneath front bumper. Turn screw clockwise to raise pattern and counterclockwise to lower pattern.

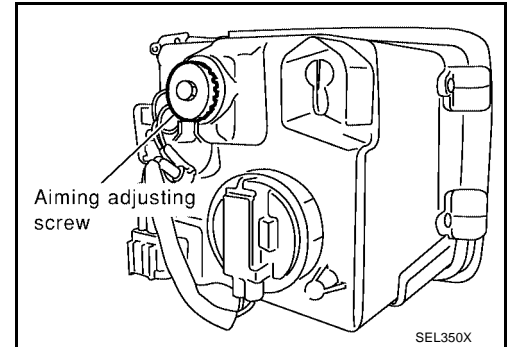

1. Set the distance between the screen and the center of the fog lamp lens as shown.
2. Turn front fog lamps ON.

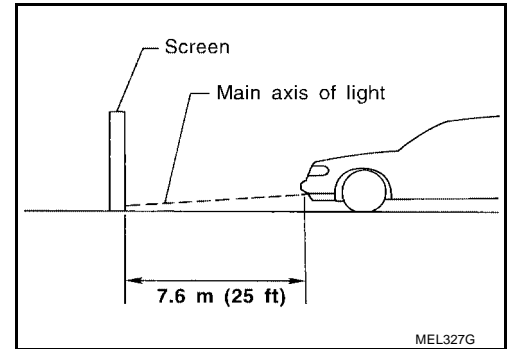

3. Adjust front fog lamps using adjusting screw so that the top edge of the high intensity zone is 200 mm (7.9 in) below the height of the fog lamp centers as shown.
- When performing adjustment, if necessary, cover the headlamps and opposite fog lamp.

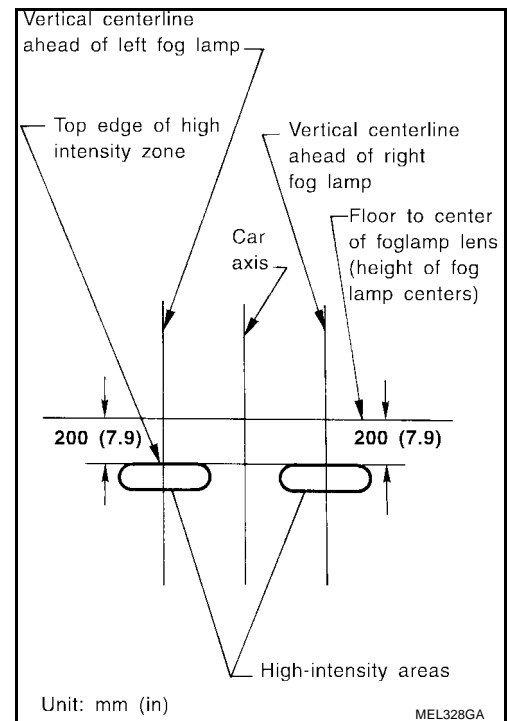

# FRONT FOG LAMP

EKS00B9N


## Bulb Replacement FRONT FOG LAMP

### Removal

1. Remove the front turn/fog lamp assembly. Refer to [LT-79, "Removal and Installation"](#).
2. Turn the bulb cover counterclockwise to remove it.
3. Unlatch retaining spring.
4. Remove bulb and disconnect the connector.

### CAUTION:

- Do not touch the glass of bulb directly by hand. Keep grease and other oily substances away from it. Do not touch bulb by hand while it is lit or right after being turned off. Burning may result.
- Do not leave bulb out of fog lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of fog lamp. When replacing bulb, be sure to replace it with new one.

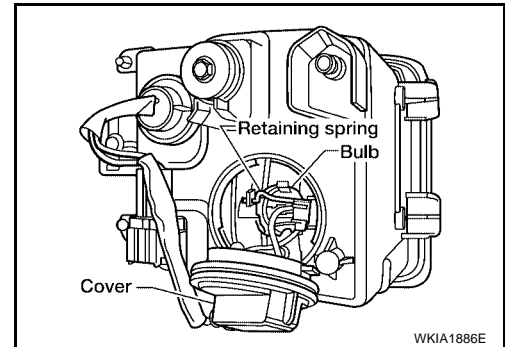

### INSTALLATION

Installation is in the reverse order of removal.

## Removal and Installation FRONT FOG LAMP

EKS00B9O


The fog lamp is a semi-sealed beam type which uses a replaceable halogen bulb.

### CAUTION:


- Do not leave fog lamp assembly without bulb for a long period of time. Dust, moisture, smoke, etc. entering the fog lamp body may affect the performance. Remove the bulb from the headlamp assembly just before replacement bulb is installed.
- Grasp only the plastic base when handling the bulb. Never touch the glass envelope. Touching the glass could significantly affect the bulb life and/or fog lamp performance.

### Removal

1. Remove the front turn/fog lamp finisher.

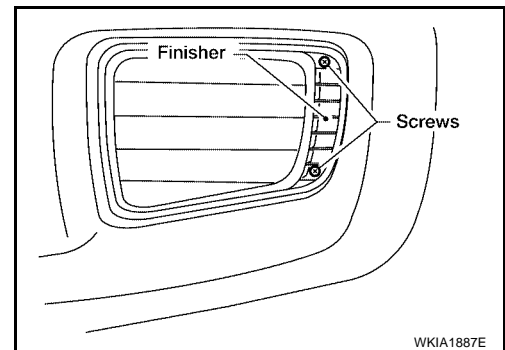

2. Remove bolt and pull fog lamp out of front fascia.
3. Disconnect electrical connector.

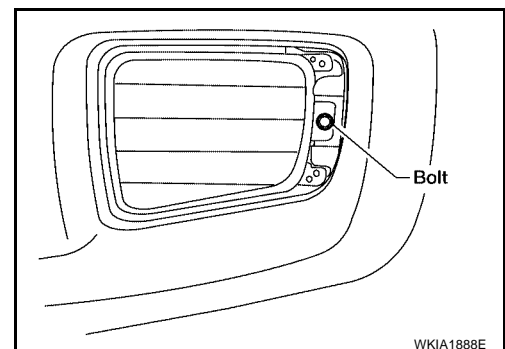

### INSTALLATION

Installation is in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M


# TURN SIGNAL AND HAZARD WARNING LAMPS

## TURN SIGNAL AND HAZARD WARNING LAMPS

PFP:26120

### Component Parts and Harness Connector Location

EKS00B9P

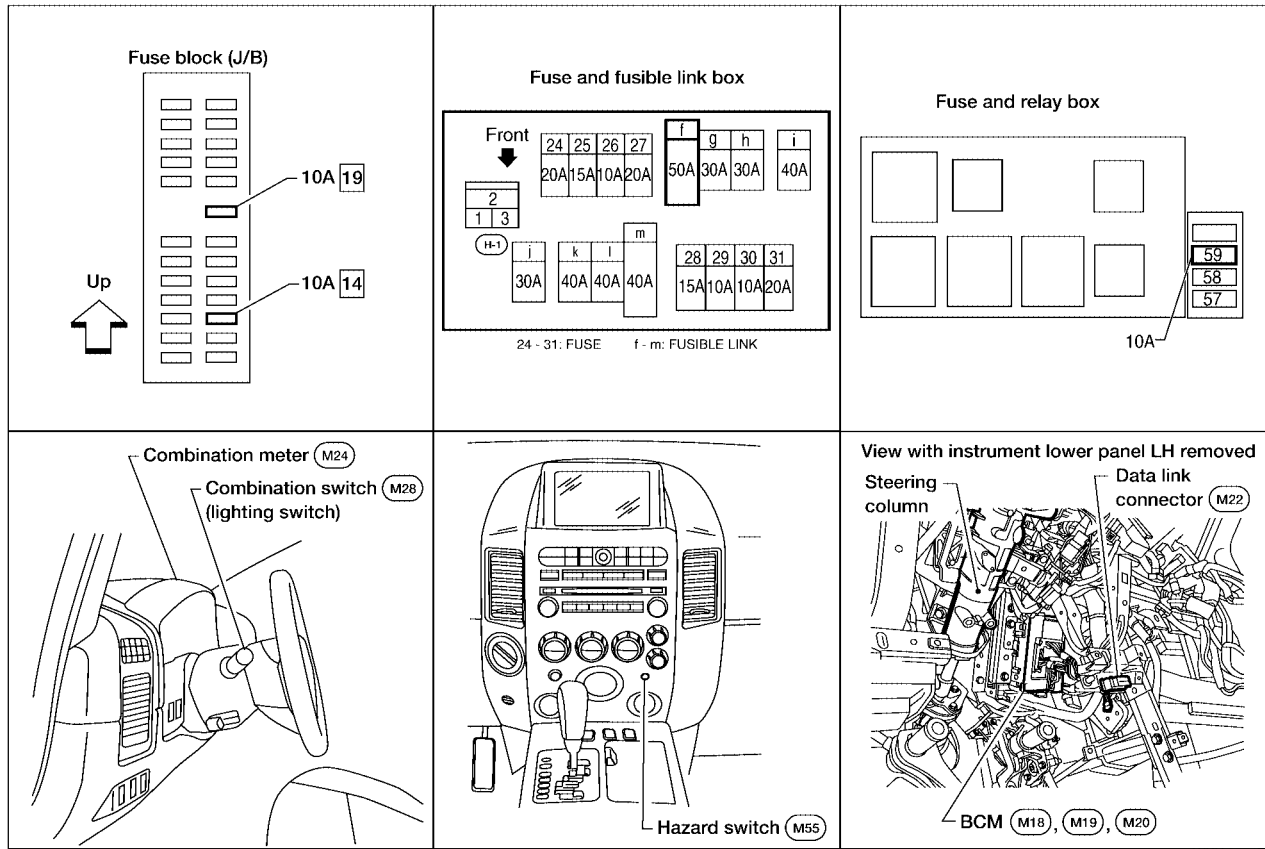

WKIA3554E

### System Description OUTLINE

EKS00B9Q

Power is supplied at all times

- through 50A fusible link (letter **f**, located in the fuse and fusible link box)
- to BCM (body control module) terminal 70, and
- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 8.

### TURN SIGNAL OPERATION

When the ignition switch is in the ON or START position, power is supplied

- through 10A fuse (No. 59, located in the fuse and relay box)
- to BCM terminal 38, and
- through 10A fuse [No. 14, located in the fuse block (J/B)]
- to combination meter terminal 24.

Ground is supplied

- to BCM terminal 67 and
- to combination meter terminal 17
- through grounds M57, M61 and M79.

### LH Turn

When the turn signal switch is moved to the left position, the BCM, interpreting it as turn signal is ON, outputs turn signal from BCM terminal 60.

The BCM supplies power

- through BCM terminal 60
- to front turn/fog lamp LH terminal 2



# TURN SIGNAL AND HAZARD WARNING LAMPS

- through front turn/fog lamp LH terminal 3
- to grounds E9, E15 and E24, and
- to door mirror LH terminal 15
- through door mirror LH terminal 11
- to grounds M57, M61 and M79 and
- to rear combination lamp LH terminal 4
- through rear combination signal lamp LH terminal 6
- to grounds B7 and B19.

BCM sends signal to combination meter through CAN communication lines, and turns on turn signal indicator lamp within combination meter.

## RH Turn

When the turn signal switch is moved to the right position, the BCM, interpreting it as turn signal is ON, outputs turn signal from BCM terminal 61.

The BCM supplies power

- through BCM terminal 61
- to front turn/fog lamp RH terminal 2
- through front turn/fog lamp RH terminal 3
- to grounds E9, E15 and E24, and
- to door mirror RH terminal 15
- through door mirror RH terminal 11
- to grounds M57, M61 and M79 and
- to rear combination lamp RH terminal 4
- through rear combination lamp terminal 6
- to grounds B117 and B132.

BCM sends signal to combination meter through CAN communication lines, and turns on turn signal indicator lamp within combination meter.

## HAZARD LAMP OPERATION

Power is supplied at all times

- through 50A fusible link (letter f , located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 8.

Ground is supplied

- to BCM terminal 67 and
- to combination meter terminal 17
- through grounds M57, M61 and M79.

When the hazard switch is depressed, ground is supplied

- to BCM terminal 29
- through hazard switch terminal 2
- through hazard switch terminal 1
- through grounds M57, M61 and M79.

When the hazard switch is depressed, the BCM, interpreting it as hazard warning lamps are ON, outputs turn signal from BCM terminals 60 and 61.

The BCM supplies power

- through BCM terminals 60 and 61
- to front turn/fog lamp LH and RH terminal 2
- through front turn/fog lamp LH and RH terminal 3
- to grounds E9, E15 and E24, and
- to door mirror LH and RH terminal 15

A

B

C

D

E

F

G

H

I

J

LT

L

M

## TURN SIGNAL AND HAZARD WARNING LAMPS

---

- through door mirror LH and RH terminal 11
- to grounds M57, M61 and M79 and
- to rear turn signal lamp LH terminal 1
- through rear turn signal lamp LH terminal 3
- to grounds B7 and B19, and
- to rear turn signal lamp RH terminal 4
- through rear turn signal lamp RH terminal 6
- to grounds B117 and B132.

BCM sends signal to combination meter through CAN communication lines, and turns on turn signal indicator lamps within combination meter.

### REMOTE KEYLESS ENTRY SYSTEM OPERATION

Power is supplied at all times

- through 50A fusible link (letter f , located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 8.

Ground is supplied

- to BCM terminal 67 and
- to combination meter terminal 17
- through grounds M57, M61 and M79.

When the remote keyless entry system is triggered by input from the keyfob, the BCM, interpreting it as turn signal is ON, outputs turn signal from BCM terminals 60 and 61.

The BCM supplies power

- through BCM terminals 60 and 61
- to front turn/fog lamp LH and RH terminal 2
- through front turn/fog lamp LH and RH terminal 3
- to grounds E9, E15 and E24, and
- to door mirror LH and RH terminal 15
- through door mirror LH and RH terminal 11
- to grounds M57, M61 and M79 and
- to rear turn signal lamp LH terminal 1
- through rear turn signal lamp LH terminal 3
- to grounds B7 and B19, and
- to rear turn signal lamp RH terminal 4
- through rear turn signal lamp RH terminal 6
- to grounds B117 and B132.

BCM sends signal to combination meter through CAN communication lines, and turns on turn signal indicator lamps within combination meter.

With power and input supplied, the BCM controls the flashing of the hazard warning lamps when keyfob is used to activate the remote keyless entry system.

### COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

### CAN Communication System Description


Refer to [LAN-26, "CAN COMMUNICATION"](#) .

EKS00B9R

# TURN SIGNAL AND HAZARD WARNING LAMPS

## Schematic

EKS00GGR

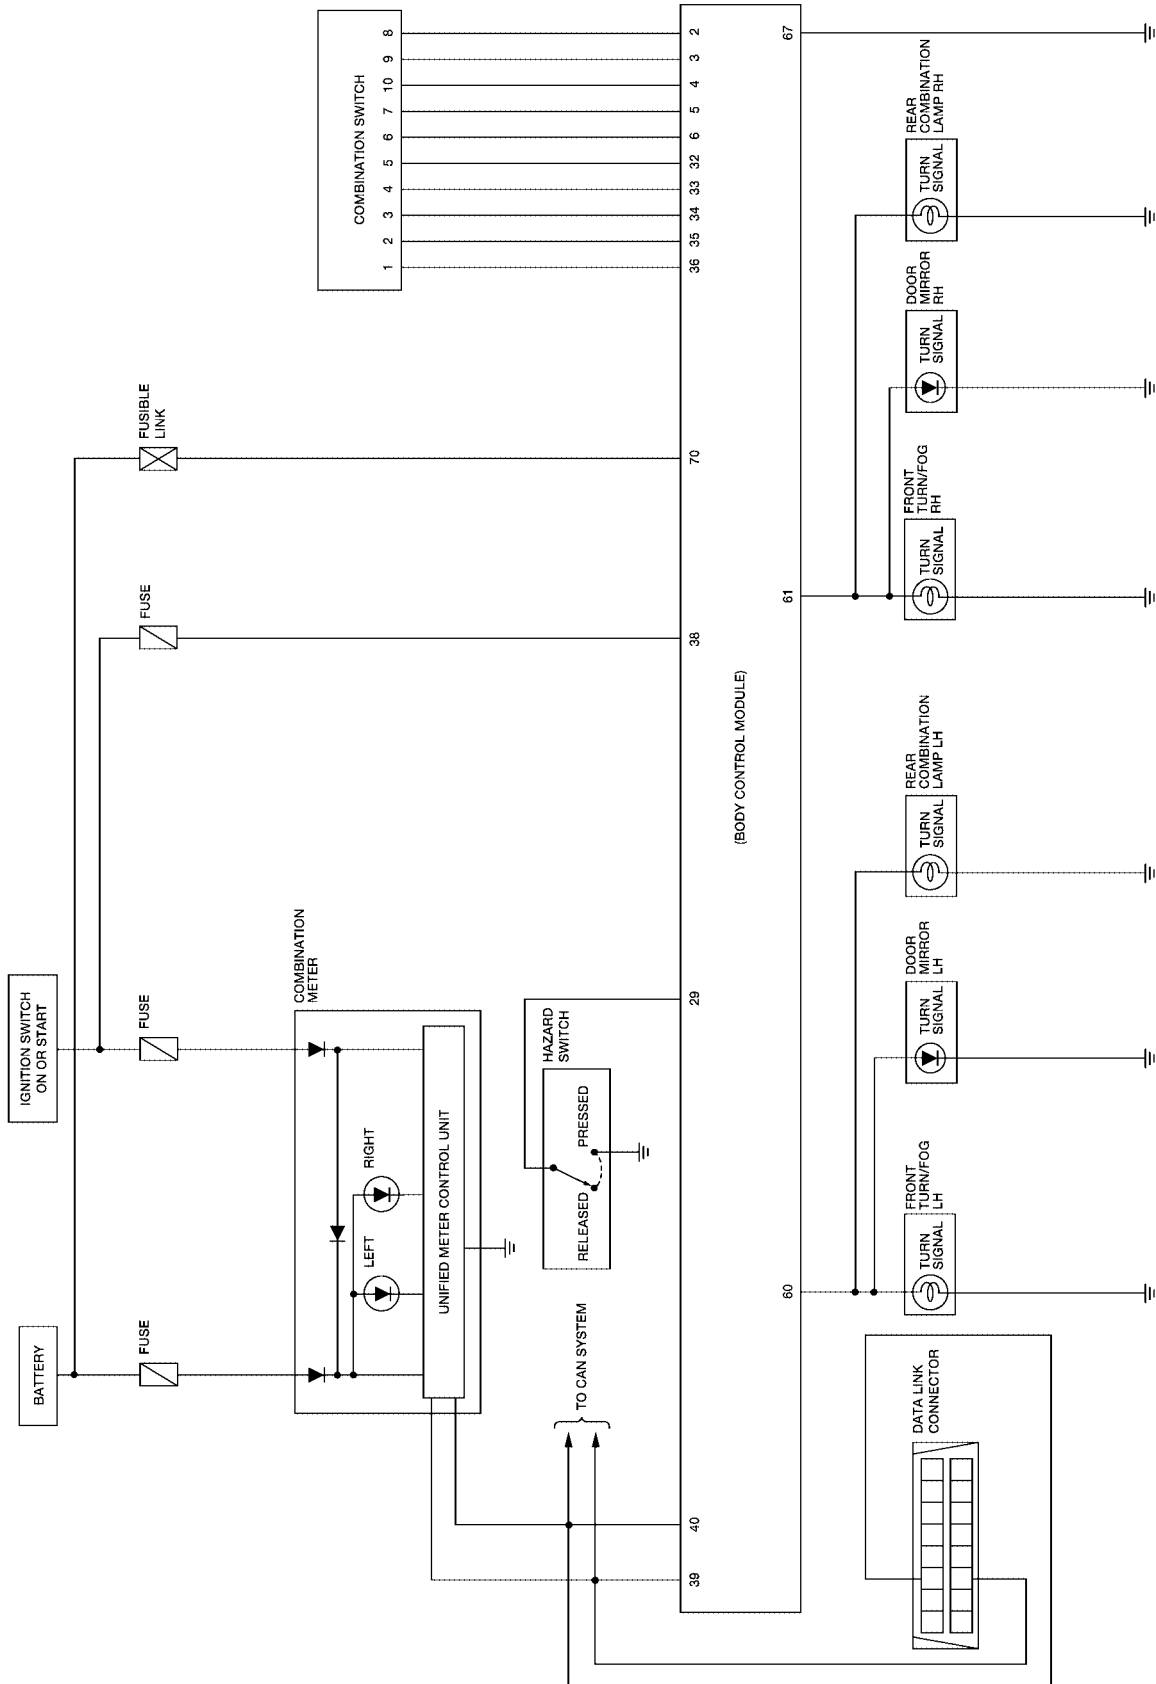

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

WKWA3654E



# TURN SIGNAL AND HAZARD WARNING LAMPS

EKS00B9S

## Wiring Diagram — TURN —

**LT-TURN-01**

— : DATA LINE

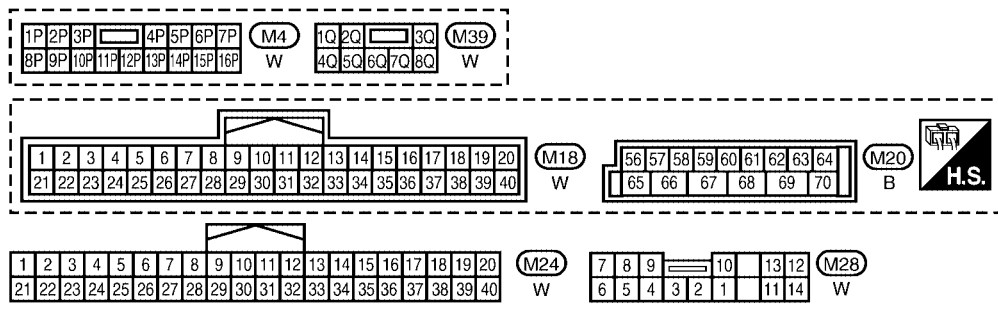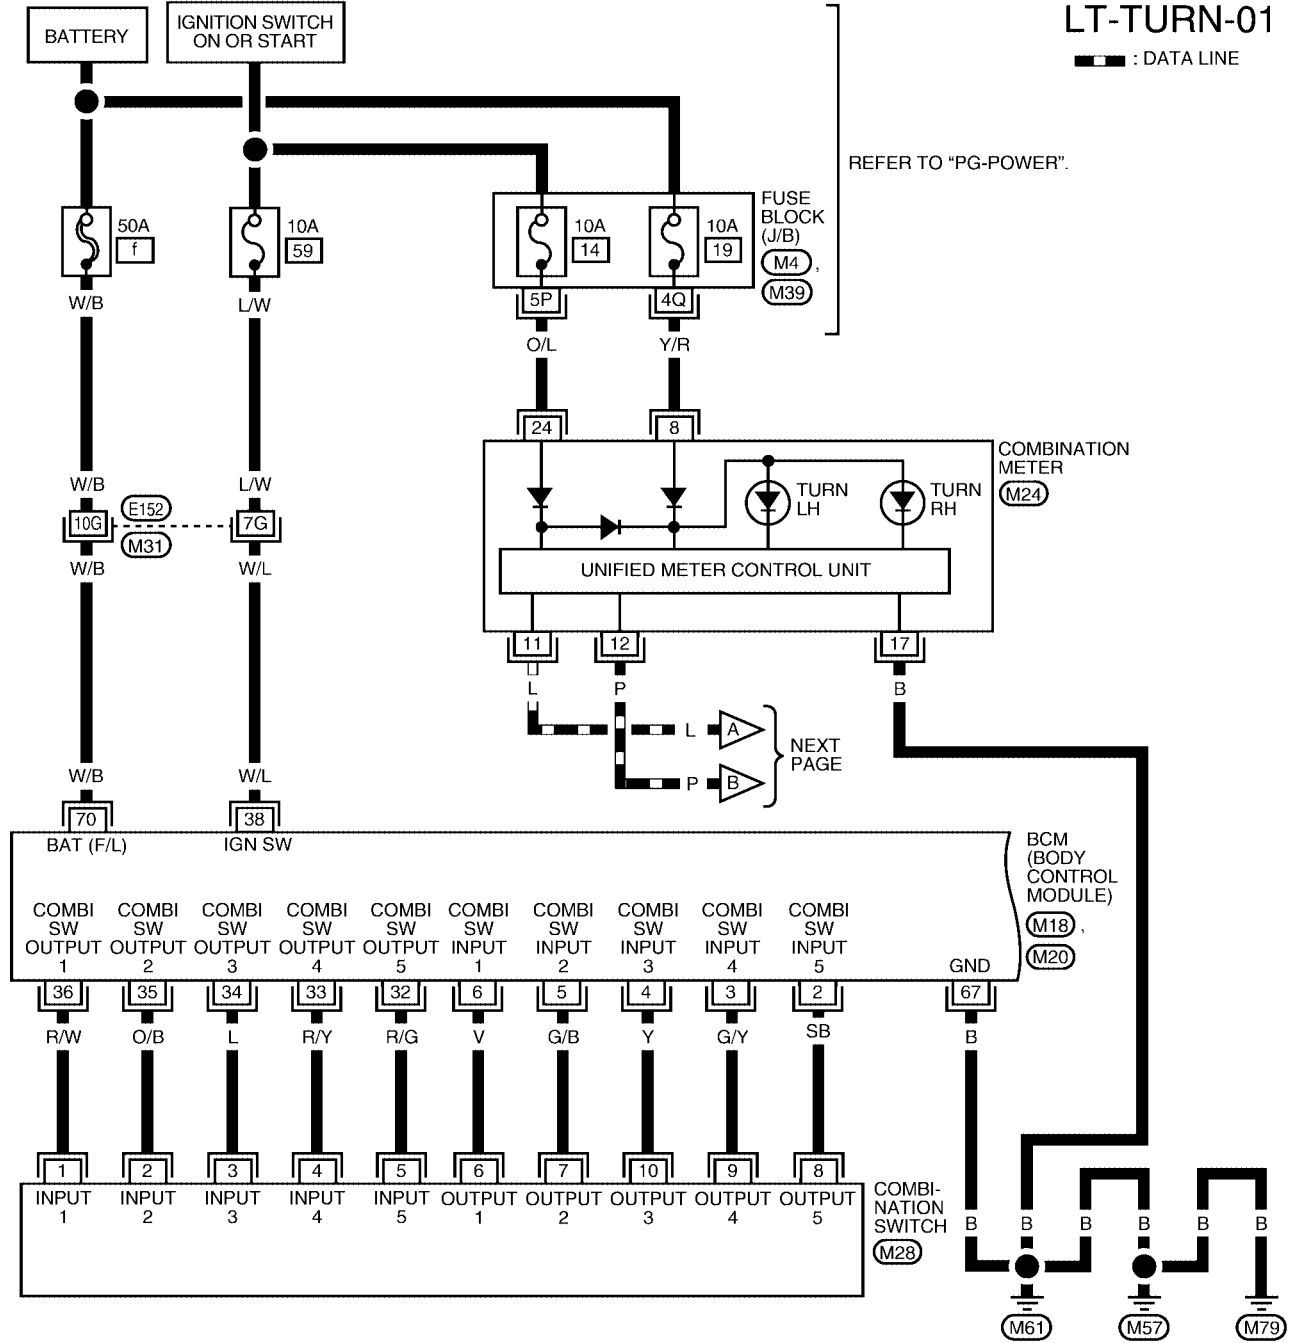


REFER TO THE FOLLOWING.  
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3655E


# TURN SIGNAL AND HAZARD WARNING LAMPS

LT-TURN-02

— : DATA LINE

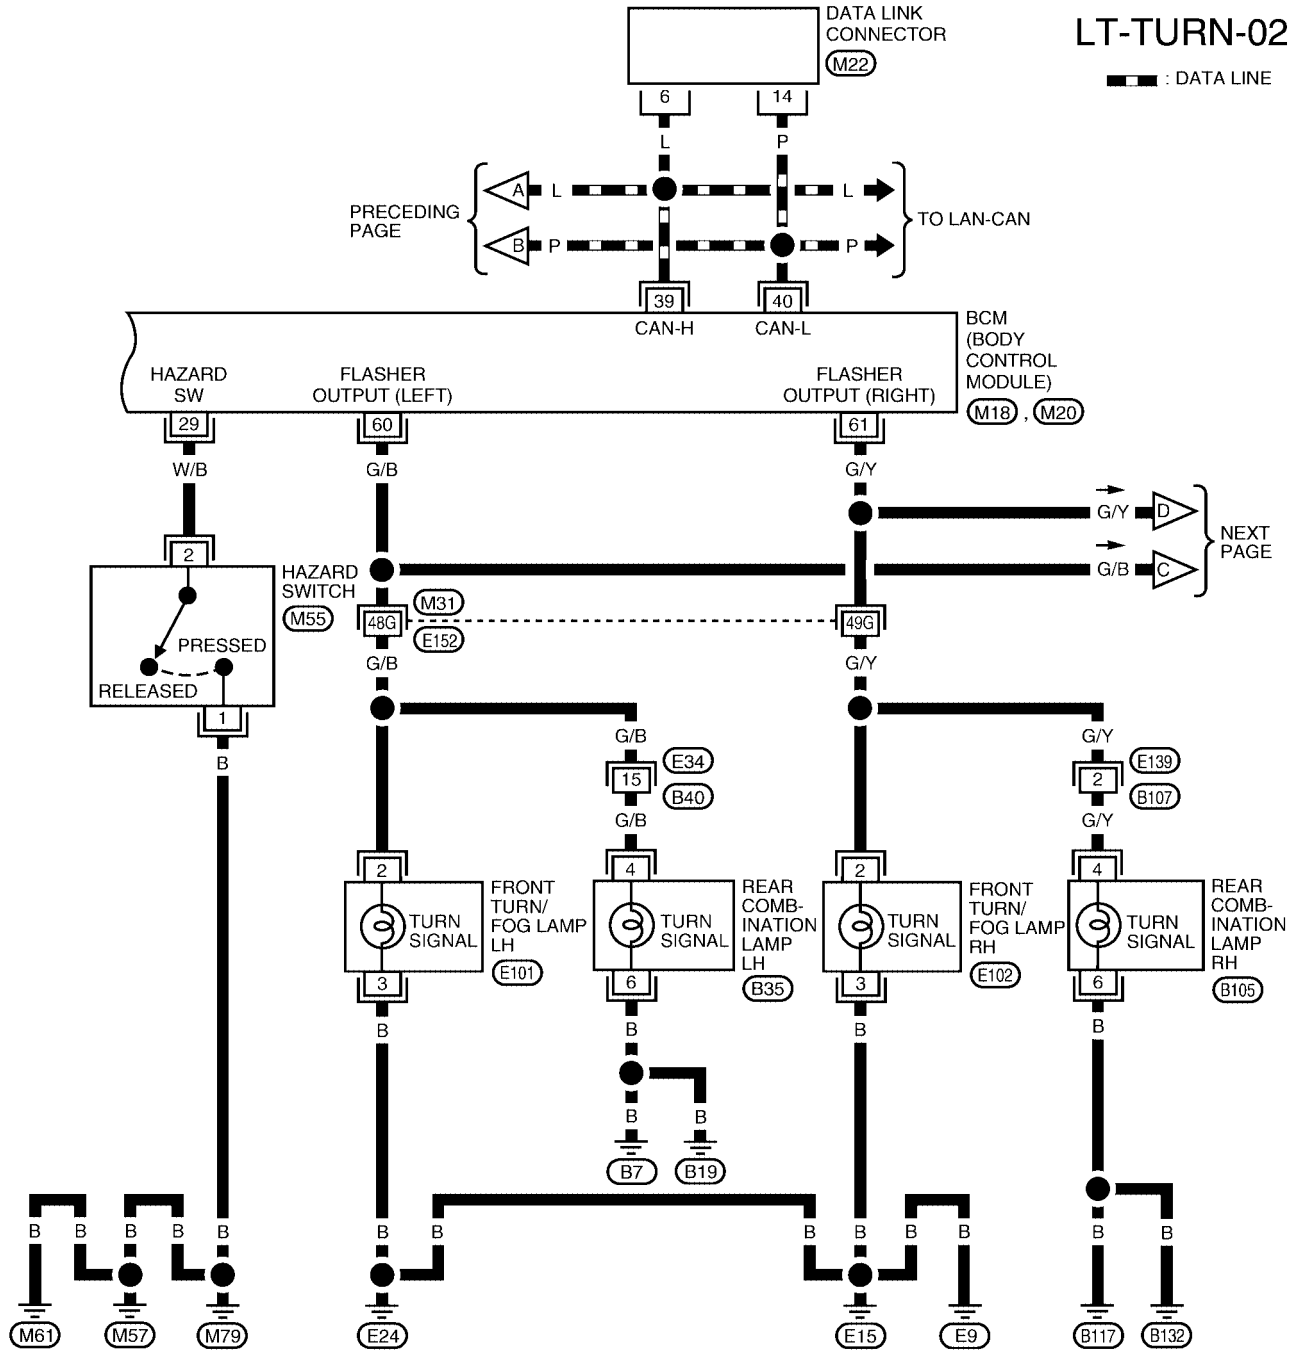

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M


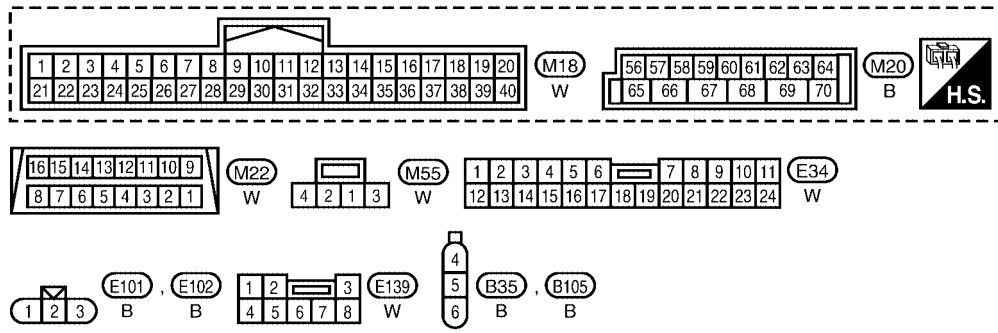


REFER TO THE FOLLOWING.  
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3656E

# TURN SIGNAL AND HAZARD WARNING LAMPS

LT-TURN-03

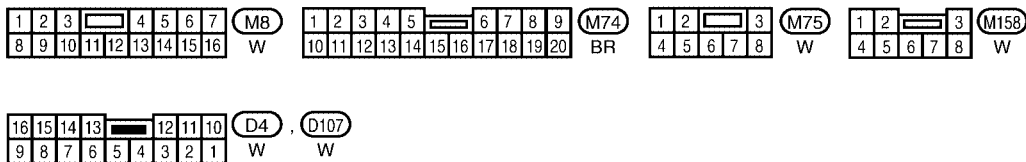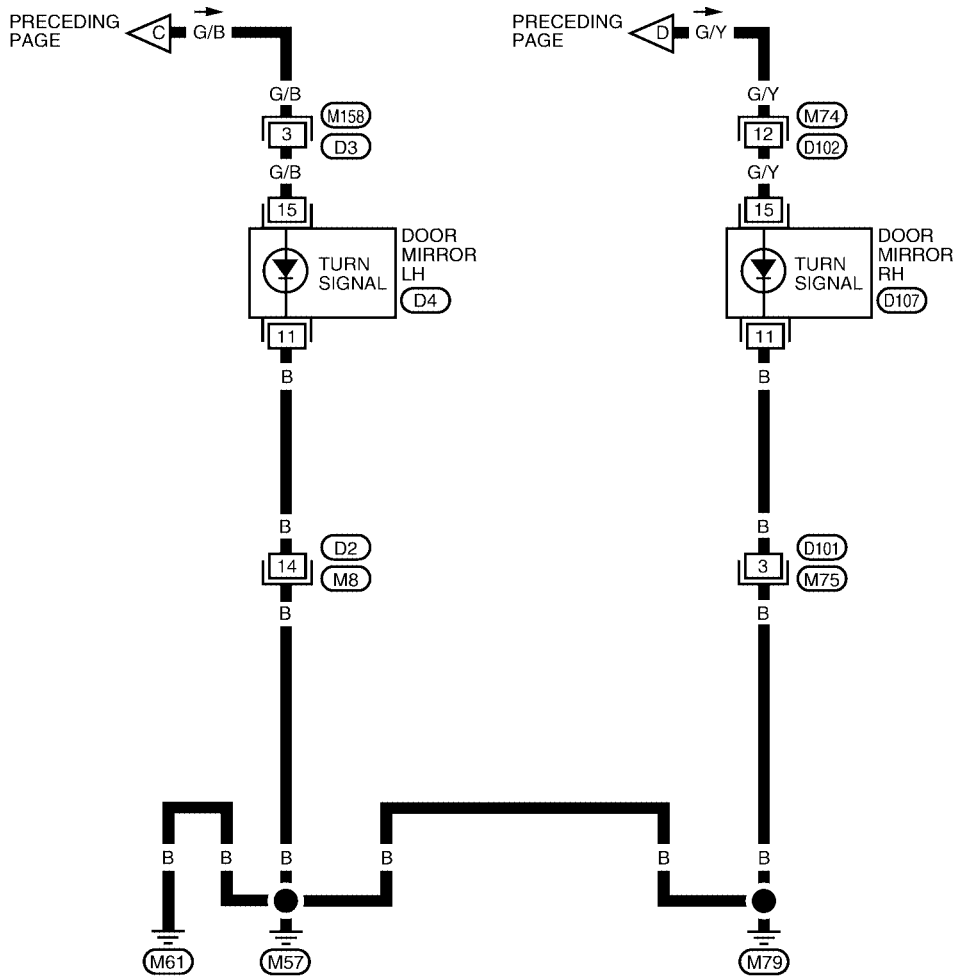

WKWA3657E

# TURN SIGNAL AND HAZARD WARNING LAMPS


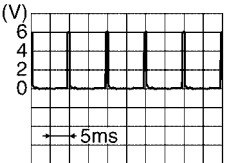
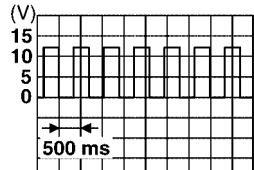
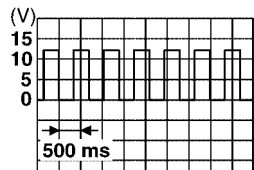
## Terminals and Reference Values for BCM

EKS00B9T

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)				
			Ignition switch	Operation or condition					
2	SB	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	<p style="text-align: right;">SKIA5291E</p>				
3	G/Y	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	<p style="text-align: right;">SKIA5292E</p>				
4	Y	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	<p style="text-align: right;">SKIA5291E</p>				
5	G/B	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	<p style="text-align: right;">SKIA5292E</p>				
6	V	Combination switch input 1							
29	W/B	Hazard switch signal	OFF	Hazard switch	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%; text-align: center;">ON</td> <td style="text-align: center;">0V</td> </tr> <tr> <td style="width: 50%; text-align: center;">OFF</td> <td style="text-align: center;">5V</td> </tr> </table>	ON	0V	OFF	5V
ON	0V								
OFF	5V								
32	R/G	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	<p style="text-align: right;">SKIA5291E</p>				
33	R/Y	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	<p style="text-align: right;">SKIA5292E</p>				

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# TURN SIGNAL AND HAZARD WARNING LAMPS

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)	
			Ignition switch	Operation or condition		
34	L	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E	
35	O/B	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E	
36	R/W	Combination switch output 1				
38	W/L	Ignition switch (ON)	ON	—	Battery voltage	
39	L	CAN-H	—	—	—	
40	P	CAN-L	—	—	—	
60	G/B	Turn signal (left)	ON	Combination switch	Turn left ON	 SKIA3009J
61	G/Y	Turn signal (right)	ON	Combination switch	Turn right ON	 SKIA3009J
67	B	Ground	ON	—	0V	
70	W/B	Battery power supply	OFF	—	Battery voltage	

## How to Proceed With Trouble Diagnosis

EKS00B9U

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-80, "System Description"](#) .
3. Perform preliminary check. Refer to [LT-89, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Do turn signal and hazard warning lamps operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.



# TURN SIGNAL AND HAZARD WARNING LAMPS

EKS00B9V

## Preliminary Check CHECK POWER SUPPLY AND GROUND CIRCUIT

### 1. CHECK FUSES OR FUSIBLE LINK

Check for blown fuses or fusible link.

Unit	Power source	Fuse and fusible link No.
BCM	Battery	f
	Ignition switch ON or START position	59

Refer to [LT-84, "Wiring Diagram — TURN —"](#).

OK or NG

OK >> GO TO 2.

NG >> If fuse or fusible link is blown, be sure to eliminate cause of malfunction before installing new fuse or fusible link. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

### 2. CHECK POWER SUPPLY CIRCUIT


- Disconnect BCM connectors.
- Check voltage between BCM harness connector and ground.

BCM		(-)	Ignition switch position		
(+)			OFF	ACC	ON
Connector	Terminal				
M18	38	Ground	0V	0V	Battery voltage
M20	70		Battery voltage	Battery voltage	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between BCM and fuse or fusible link.

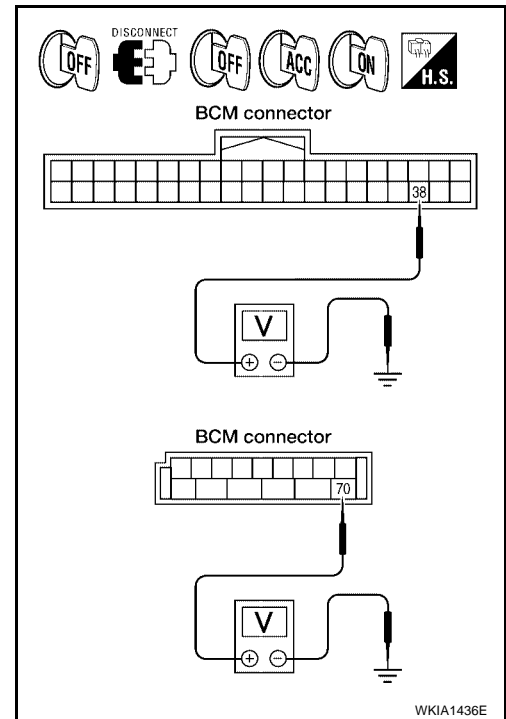

WKIA1436E

### 3. CHECK GROUND CIRCUIT


Check continuity between BCM harness connector and ground.

BCM			Continuity
Connector	Terminal		
M20	67	Ground	Yes

OK or NG

OK >> Inspection End.

NG >> Check ground circuit harness.

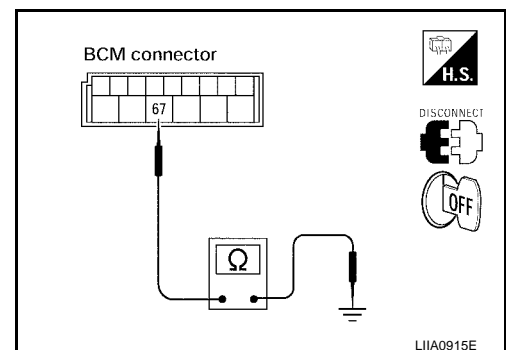

LIA0915E

# TURN SIGNAL AND HAZARD WARNING LAMPS

## CONSULT-II Function (BCM)

EKS00B9W

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

## CONSULT-II OPERATION


### CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

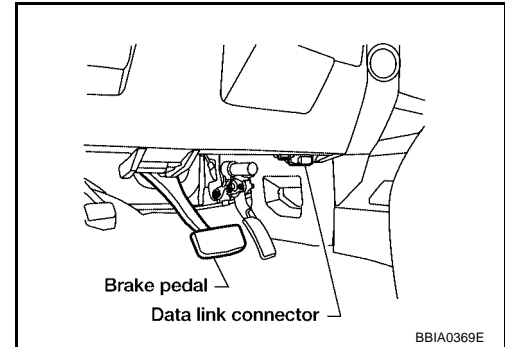

2. Touch "START (NISSAN BASED VHCL)".

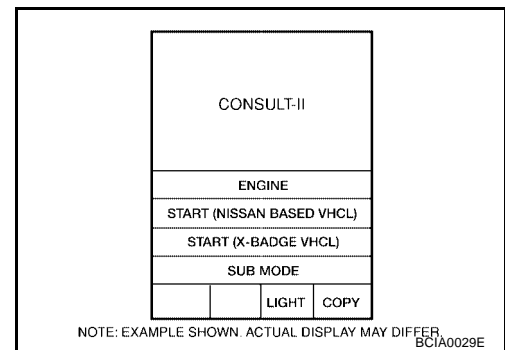


3. Touch "BCM" on "SELECT SYSTEM" screen.  
If "BCM" is not indicated, go to [G1-40, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

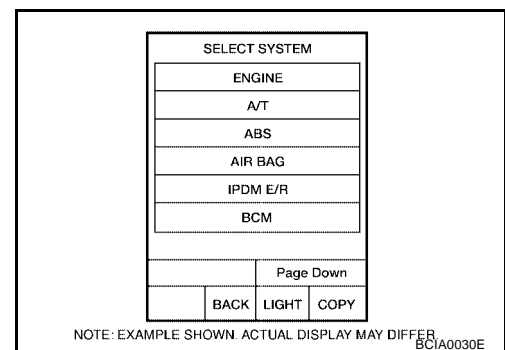

# TURN SIGNAL AND HAZARD WARNING LAMPS

4. Touch "FLASHER" on "SELECT TEST ITEM" screen.

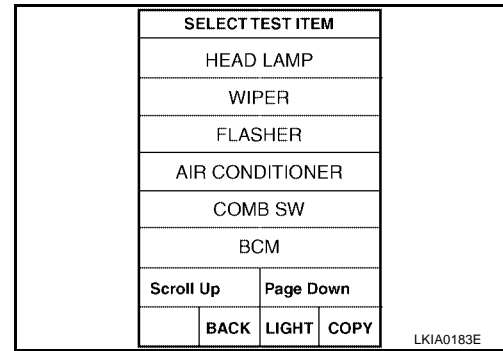

## DATA MONITOR

### Operation Procedure

1. Touch "FLASHER" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects and monitors the individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

### Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
HAZARD SW "ON/OFF"	Displays "Hazard ON (ON)/Hazard OFF (OFF)" status, determined from hazard switch signal.
TURN SIGNAL R "ON/OFF"	Displays "Turn right (ON)/Other (OFF)" status, determined from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays "Turn left (ON)/Other (OFF)" status, determined from lighting switch signal.
BRAKE SW "ON/OFF"	Displays status of stop lamp switch.

## ACTIVE TEST

### Operation Procedure

1. Touch "FLASHER" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" or "OFF" deactivates the operation.

### Display Item List

Test item	Description
FLASHER (RH)	Turn signal lamp (right) can be operated by any ON-OFF operations.
FLASHER (LH)	Turn signal lamp (left) can be operated by any ON-OFF operations.

# TURN SIGNAL AND HAZARD WARNING LAMPS

EKS00B9X

## Front Turn Signal Lamp Does Not Operate

### 1. CHECK COMBINATION SWITCH INPUT SIGNAL

Ⓜ With CONSULT-II

Select "BCM" on CONSULT-II. With "FLASHER" data monitor, make sure "TURN SIGNAL R" and "TURN SIGNAL L" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in : TURN SIGNAL R ON  
TURN RH position**

**When lighting switch is in : TURN SIGNAL L ON  
TURN LH position**

ⓧ Without CONSULT-II

Refer to [LT-103, "Combination Switch Inspection"](#).

OK or NG

OK >> GO TO 2.

NG >> Check lighting switch. Refer to [LT-103, "Combination Switch Inspection"](#).

DATA MONITOR	
MONITOR	
TURN SIGNAL R	ON
TURN SIGNAL L	ON

SKIA4499E

### 2. ACTIVE TEST

Ⓜ With CONSULT-II

1. Select "FLASHER" during active test. Refer to [LT-91, "ACTIVE TEST"](#).

2. Make sure "FLASHER RH" and "FLASHER LH" operate.

ⓧ Without CONSULT-II

GO TO 3.

OK or NG

OK >> Replace BCM. Refer to [BCS-20, "BCM"](#).

NG >> GO TO 3.

ACTIVE TEST	
FLASHER	OFF
RH	LH
MODE	BACK
LIGHT	COPY

SKIA6190E

### 3. CHECK TURN SIGNAL LAMPS CIRCUIT

1. Turn ignition switch OFF.

2. Disconnect BCM connector and front turn/fog lamp LH and RH connectors.

3. Check continuity between BCM harness connector M20 terminal 60 and front turn/fog lamp LH harness connector E101 terminal 2.

**60 - 2 : Continuity should exist.**


4. Check continuity between BCM harness connector M20 terminal 61 (G/Y) and front turn/fog lamp RH harness connector E102 terminal 2 (G/Y).

**61 - 2 : Continuity should exist.**

OK or NG

OK >> GO TO 4.

NG >> Repair harness or connector.

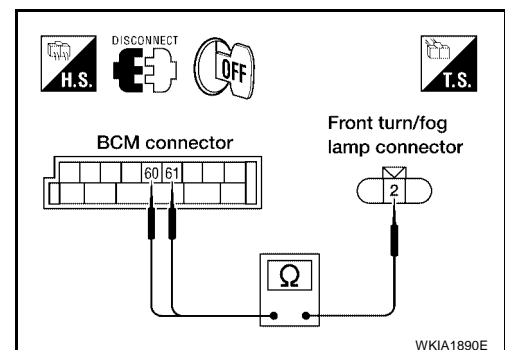

# TURN SIGNAL AND HAZARD WARNING LAMPS

## 4. CHECK GROUND

1. Check continuity between front turn/fog lamp LH harness connector E101 terminal 3 and ground.


**3 - Ground : Continuity should exist.**

2. Check continuity between front turn/fog lamp RH harness connector E102 terminal 3 and ground.

**3 - Ground : Continuity should exist.**

OK or NG

- OK >> GO TO 5.  
 NG >> Repair harness or connector.

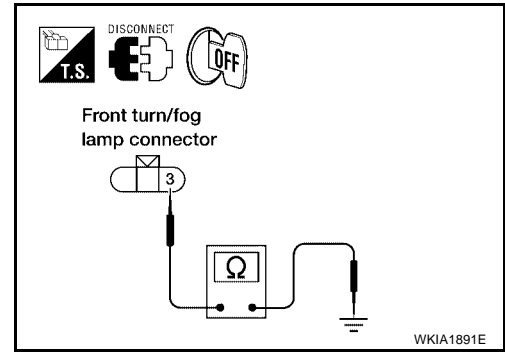

## 5. CHECK BULB

Check bulb standard of each turn signal lamp is correct. Refer to [LT-175, "Exterior Lamp"](#).

OK or NG

- OK >> Replace BCM if turn signal lamps do not work after setting the connector again. Refer to [BCS-20, "BCM"](#).  
 NG >> Replace turn signal lamp bulb. Refer to [LT-31, "FRONT PARKING LAMP \(INNER OR OUTER\)"](#), [LT-31, "FRONT PARKING LAMP \(INNER OR OUTER\)"](#).

## Door Mirror Turn Signal Lamp Does Not Operate

EKS00GGS

### 1. CHECK COMBINATION SWITCH INPUT SIGNAL

☑ With CONSULT-II

Select "BCM" on CONSULT-II. With "FLASHER" data monitor, make sure "TURN SIGNAL R" and "TURN SIGNAL L" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in : TURN SIGNAL R ON  
 TURN RH position**

**When lighting switch is in : TURN SIGNAL L ON  
 TURN LH position**

☒ Without CONSULT-II

Refer to [LT-103, "Combination Switch Inspection"](#).

OK or NG

- OK >> GO TO 2.  
 NG >> Check lighting switch. Refer to [LT-103, "Combination Switch Inspection"](#).

DATA MONITOR	
MONITOR	
TURN SIGNAL R	ON
TURN SIGNAL L	ON

SKIA4499E

### 2. ACTIVE TEST

☑ With CONSULT-II

1. Select "FLASHER" during active test. Refer to [LT-91, "ACTIVE TEST"](#).

2. Make sure "FLASHER RH" and "FLASHER LH" operate.

☒ Without CONSULT-II

GO TO 3.

OK or NG

- OK >> Replace BCM. Refer to [BCS-20, "REMOVAL AND INSTALLATION"](#).  
 NG >> GO TO 3.

ACTIVE TEST			
FLASHER		OFF	
RH	LH		
MODE	BACK	LIGHT	COPY

SKIA6190E

# TURN SIGNAL AND HAZARD WARNING LAMPS


## 3. CHECK TURN SIGNAL LAMPS CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and door mirror LH/RH connector.
3. Check continuity between BCM harness connector M20 (A) terminal 60 (LH), 61 (RH) and door mirror harness connector (LH D4), (RH D107) (B) terminal 15.

**60, 61 - 15** : Continuity should exist.

OK or NG

- OK >> GO TO 4.  
NG >> Repair harness or connector.

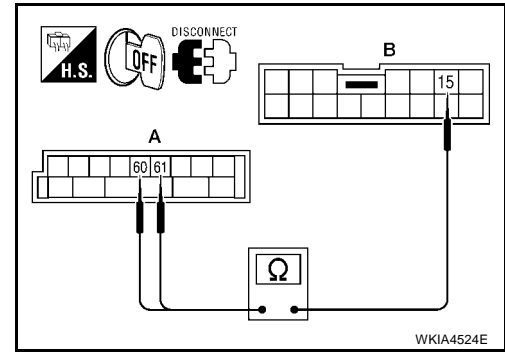


## 4. CHECK GROUND

1. Check continuity between door mirror harness connector (LH D4), (RH D107) terminal 11 and ground.

**11 - Ground** : Continuity should exist.

OK or NG

- OK >> Replace door mirror turn signal.  
NG >> Repair harness or connector.

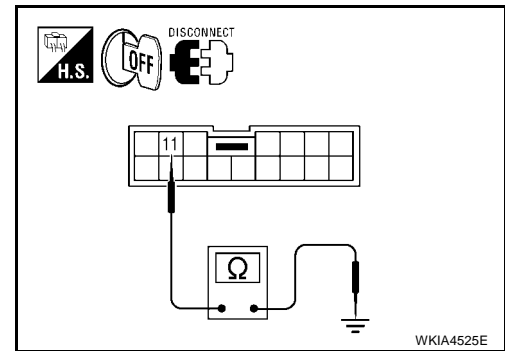

## Rear Turn Signal Lamp Does Not Operate

### 1. CHECK BULB

Check bulb standard of each turn signal lamp is correct. Refer to [LT-175, "Exterior Lamp"](#) .

OK or NG

- OK >> GO TO 2.  
NG >> Replace turn signal lamp bulb. Refer to [LT-125, "Bulb Replacement"](#) .

### 2. CHECK TURN SIGNAL LAMPS CIRCUIT

1. Disconnect BCM connector and rear combination lamp connector.
2. Check continuity between BCM harness connector M20 (A) terminal 61 and rear combination lamp RH harness connector B105 (B) terminal 4.


**61 - 4** : Continuity should exist.

3. Check continuity between BCM harness connector M20 (A) terminal 60 and rear combination lamp LH harness connector B35 (B) terminal 4.

**60 - 4** : Continuity should exist.

OK or NG

- OK >> GO TO 3.  
NG >> Repair harness or connector.

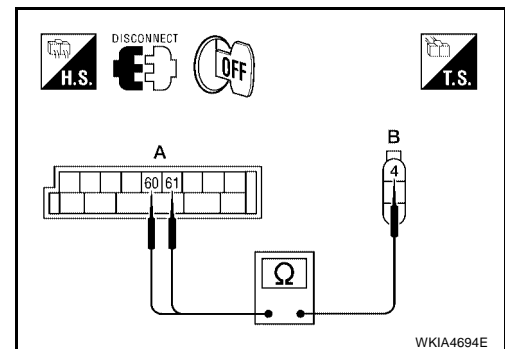

# TURN SIGNAL AND HAZARD WARNING LAMPS


## 3. CHECK GROUND CIRCUIT

Check continuity between rear combination lamp harness connector B35 LH and B105 RH terminal 6 and ground.

**6 - Ground : Continuity should exist.**

OK or NG

- OK >> Check rear combination lamp connector for proper connection. Repair as necessary.
- NG >> Repair harness or connector.

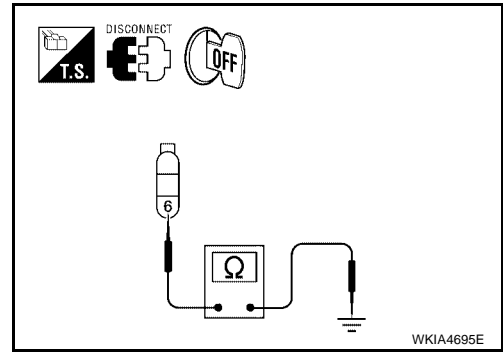

## Hazard Warning Lamp Does Not Operate But Turn Signal Lamps Operate

EKS00B9Z

### 1. CHECK BULB

Make sure bulb standard of each turn signal lamp is correct. Refer to [LT-175, "Exterior Lamp"](#).

OK or NG


- OK >> GO TO 2.
- NG >> Replace turn signal lamp bulb. Refer to [LT-31, "FRONT PARKING LAMP \(INNER OR OUTER\)"](#) for front turn signal bulb. Refer to [LT-125, "Bulb Replacement"](#) for rear turn signal bulb.

### 2. CHECK HAZARD SWITCH INPUT SIGNAL

Ⓜ With CONSULT-II

Select "BCM" on CONSULT-II. With "FLASHER" data monitor, make sure "HAZARD SW" turns ON-OFF linked with operation of hazard switch.

**When hazard switch is in ON position : HAZARD SW ON**

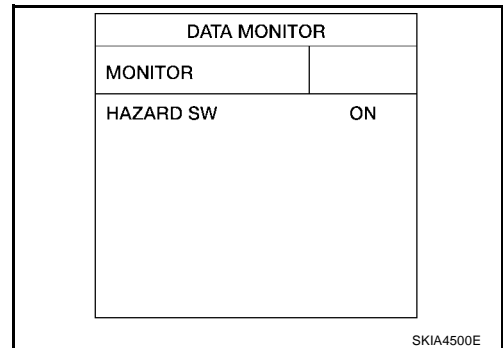


⊗ Without CONSULT-II

Check voltage between BCM harness connector M18 terminal 29 and ground.

Terminals		(-)	Condition	Voltage (Approx.)
(+)				
Connector	Terminal			
M18	29	Ground	Hazard switch is ON	0V
			Hazard switch is OFF	5V

OK or NG

- OK >> Replace BCM. Refer to [BCS-20, "BCM"](#).
- NG >> GO TO 3.

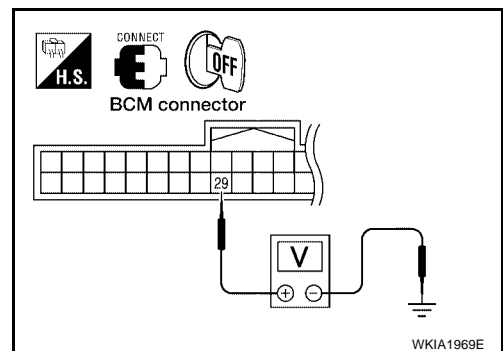

# TURN SIGNAL AND HAZARD WARNING LAMPS


## 3. CHECK HAZARD SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and hazard switch connector.
3. Check continuity between BCM harness connector M18 terminal 29 and hazard switch harness connector M55 terminal 2.

**29 - 2 : Continuity should exist.**

OK or NG

- OK >> GO TO 4.  
 NG >> Repair harness or connector.

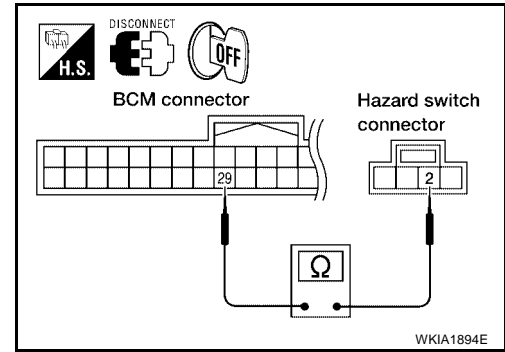


## 4. CHECK GROUND

Check continuity between hazard switch harness connector M55 terminal 1 and ground.

**1 - Ground : Continuity should exist.**

OK or NG

- OK >> GO TO 5.  
 NG >> Repair harness or connector.

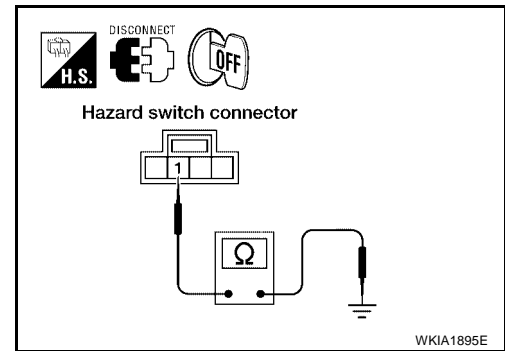


## 5. CHECK HAZARD SWITCH

1. Disconnect hazard switch connector.
2. Check continuity of hazard switch.

Hazard switch		Condition	Continuity
Terminal			
1	2	Hazard switch is ON	Yes
		Hazard switch is OFF	No

OK or NG

- OK >> Replace BCM if hazard warning lamps do not work after setting the connector again. Refer to [BCS-20, "BCM"](#) .  
 NG >> Replace hazard switch. Refer to [LT-99, "Removal and Installation"](#) .

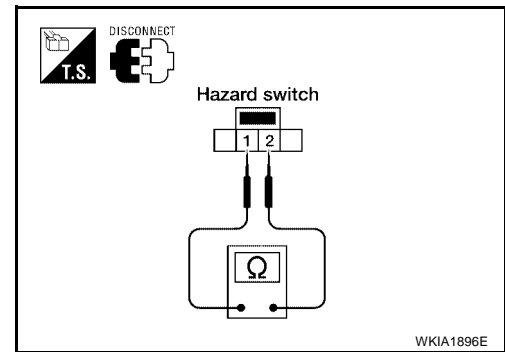

## Turn Signal Indicator Lamp Does Not Operate

EKS00BA0

### 1. CHECK CAN COMMUNICATION SYSTEM

Check CAN communication. Refer to [LAN-26, "CAN COMMUNICATION"](#) .

OK or NG

- OK >> Replace combination meter. Refer to [IP-13, "COMBINATION METER"](#) .  
 NG >> Repair as necessary.



# TURN SIGNAL AND HAZARD WARNING LAMPS

## Bulb Replacement

EKS00BA1

### TURN SIGNAL LAMP (FRONT)

#### Removal

1. Remove front fog lamp. Refer to [LT-79, "Removal and Installation"](#) .
2. Twist turn signal socket and remove from front fog lamp.
3. Remove turn signal bulb from socket.

#### Installation

Installation is in the reverse order of removal.

### TURN SIGNAL LAMP (REAR)

Refer to [LT-125, "Bulb Replacement"](#) .

## Removal and Installation

EKS00BA3

### FRONT TURN SIGNAL LAMP

Refer to [LT-79, "Removal and Installation"](#) .

### REAR TURN SIGNAL LAMP

Refer to [LT-125, "Removal and Installation"](#) .

A

B

C

D

E

F

G

H

I

J

LT

L

M

# LIGHTING AND TURN SIGNAL SWITCH

## LIGHTING AND TURN SIGNAL SWITCH


PF2:25540

### Removal and Installation

EKS00BA5

#### REMOVAL

1. Remove steering column cover.
2. While pressing tabs, pull lighting and turn signal switch toward driver door and disconnect from the base.

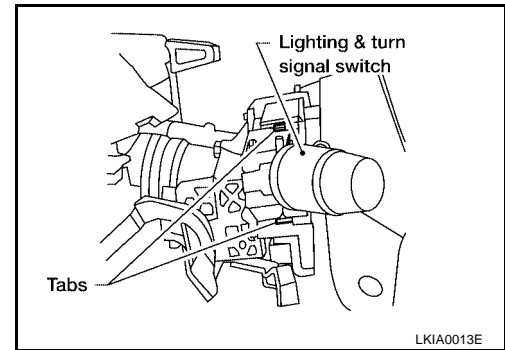

#### INSTALLATION

Installation is in the reverse order of removal.

# HAZARD SWITCH

## HAZARD SWITCH


PF2:25290

### Removal and Installation

EKS00BA6

#### REMOVAL

1. Remove cluster lid C. Refer to [IP-12, "Removal"](#).
2. Remove screws and remove the hazard switch.

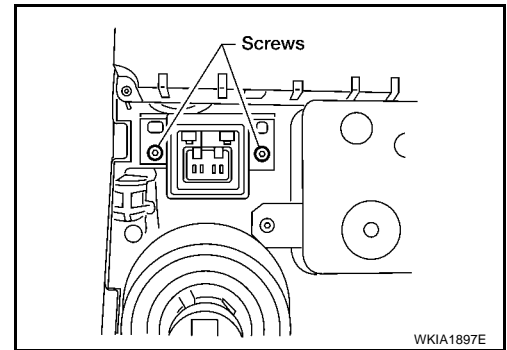

#### INSTALLATION

Installation is in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# COMBINATION SWITCH

PF2:25567



EKS00BA7

## COMBINATION SWITCH

### Wiring Diagram — COMBSW —

## LT-COMBSW-01

▬ : DATA LINE

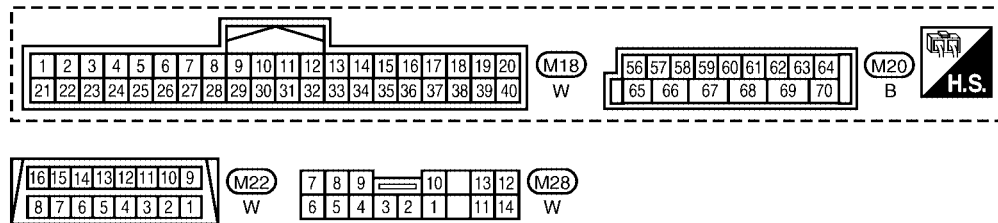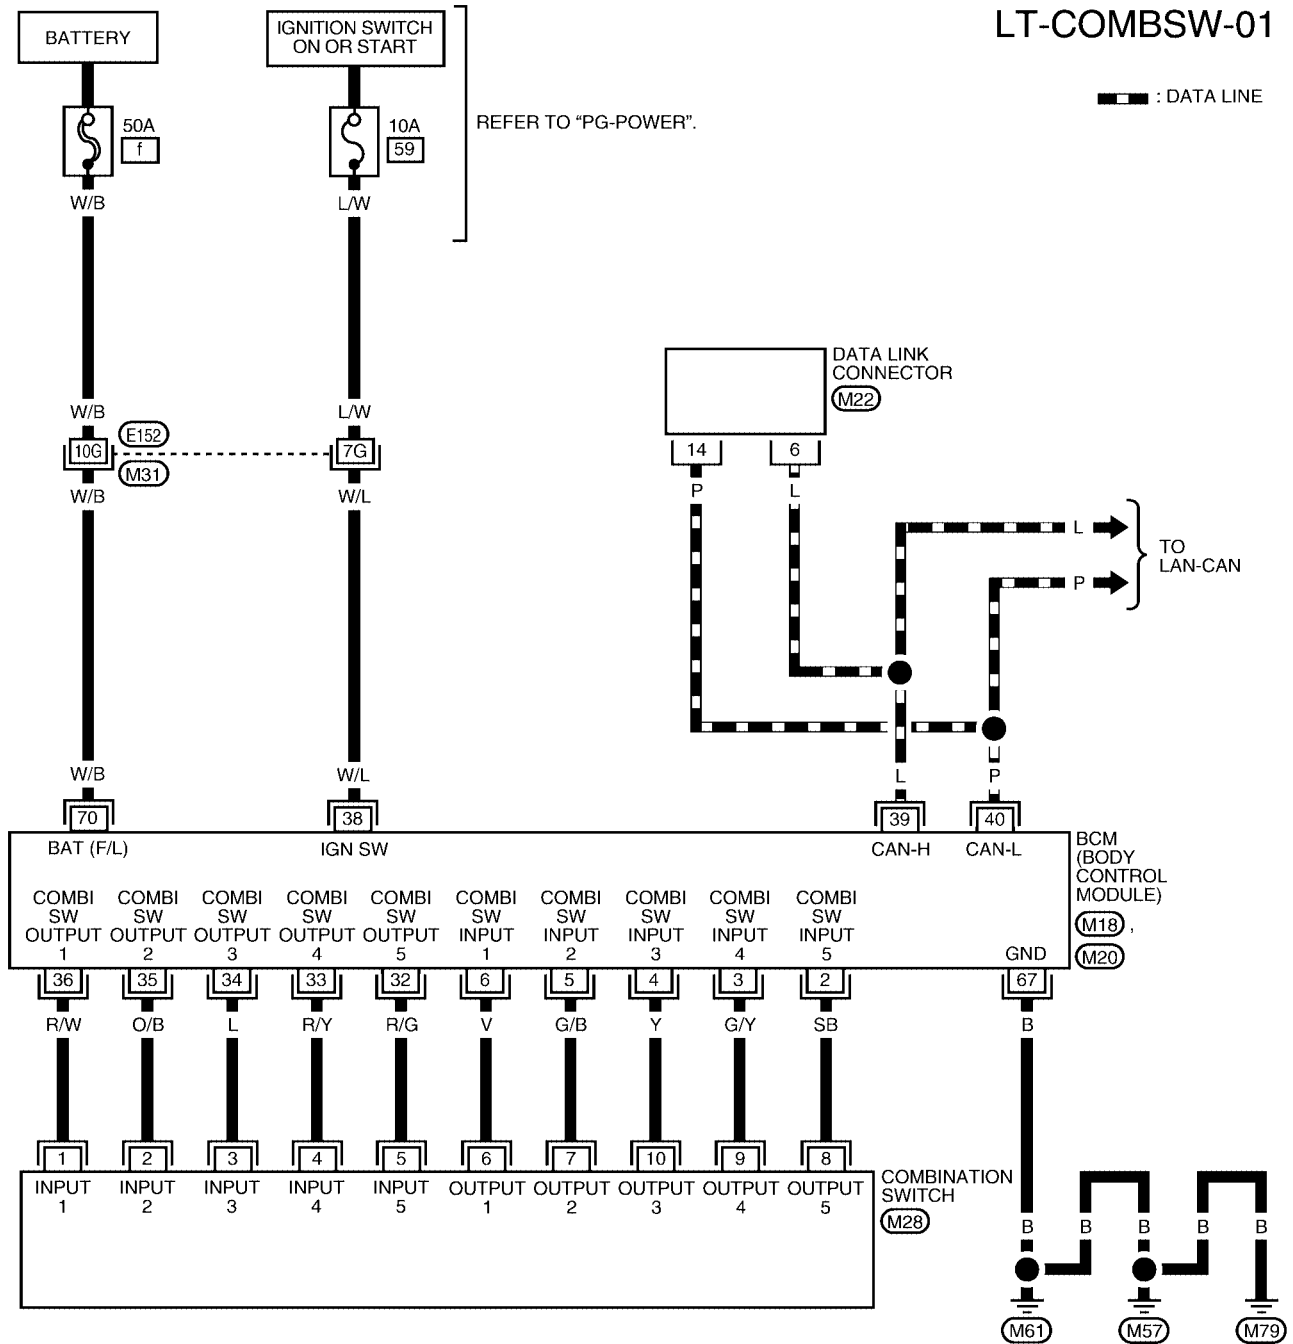

REFER TO THE FOLLOWING.  
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3658E

# COMBINATION SWITCH

## Combination Switch Reading Function

EKS00BA8

For details, refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#).

## CONSULT-II Function (BCM)

EKS00BA9

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

## CONSULT-II OPERATION


### CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

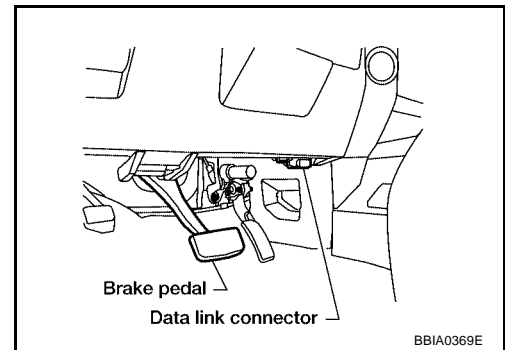

2. Touch "START (NISSAN BASED VHCL)".

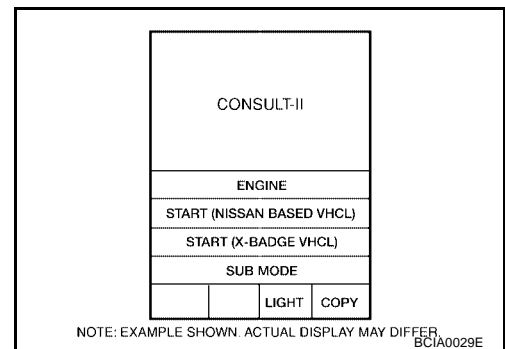


3. Touch "BCM" on "SELECT SYSTEM" screen. If "BCM" is not indicated, go to [GI-40, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

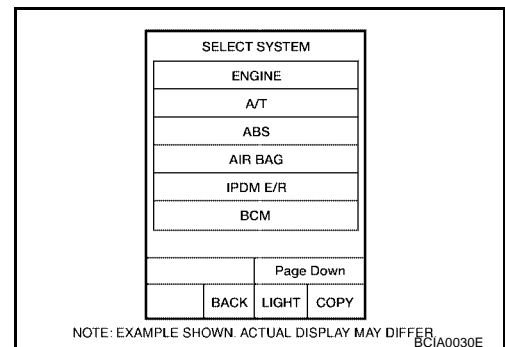

# COMBINATION SWITCH

4. Touch "COMB SW" on "SELECT TEST ITEM" screen.

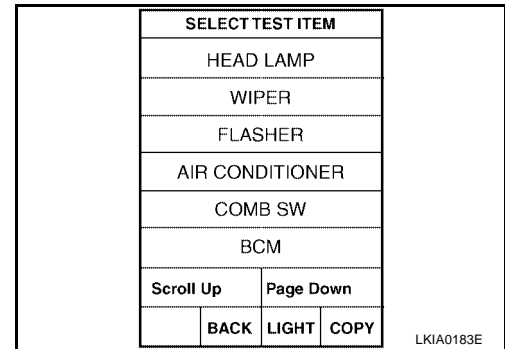

## DATA MONITOR

### Operation Procedure

1. Touch "COMB SW" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects and monitors individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the signals will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

### Display Item List

Monitor item name "OPERATION OR UNIT"	Contents
TURN SIGNAL R "ON/OFF"	Displays "Turn Right (ON)/Other (OFF)" status, determined from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays "Turn Left (ON)/Other (OFF)" status, determined from lighting switch signal.
HI BEAM SW "ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.
HEAD LAMP SW 1 "ON/OFF"	Displays "Headlamp switch 1 (ON)/Other (OFF)" status, determined from lighting switch signal.
HEAD LAMP SW 2 "ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
LIGHT SW 1ST "ON/OFF"	Displays status (lighting switch 1st position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
PASSING SW "ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
AUTO LIGHT SW "ON/OFF"	Displays "Auto light switch (ON)/Other (OFF)" status, determined from lighting switch signal.
FR FOG SW "ON/OFF"	Displays "Front fog lamp switch (ON)/Other (OFF)" status, determined from lighting switch signal.
FR WIPER HI "ON/OFF"	Displays "Front Wiper HI (ON)/Other (OFF)" status, determined from wiper switch signal.
FR WIPER LOW "ON/OFF"	Displays "Front Wiper LOW (ON)/Other (OFF)" status, determined from wiper switch signal.
FR WIPER INT "ON/OFF"	Displays "Front Wiper INT (ON)/Other (OFF)" status, determined from wiper switch signal.
FR WASHER SW "ON/OFF"	Displays "Front Washer Switch (ON)/Other (OFF)" status, determined from wiper switch signal.
INT VOLUME [1 - 7]	Displays intermittent operation knob setting (1 - 7), determined from wiper switch signal.
RR WIPER ON "ON/OFF"	Displays "Rear Wiper (ON)/(OFF)" status, determined from wiper switch signal.
RR WIPER INT "ON/OFF"	Displays "Rear Wiper INT (ON)/(OFF)" status, determined from wiper switch signal.
RR WASHER SW "ON/OFF"	Displays "Rear Washer (ON)/(OFF)" status, determined from wiper switch signal.

# COMBINATION SWITCH

EKS00BAA

## Combination Switch Inspection

### 1. SYSTEM CHECK

- Referring to table below, check which system the malfunctioning switch belongs to.

System 1	System 2	System 3	System 4	System 5
—	FR WASHER	FR WIPER LO	TURN LH	TURN RH
FR WIPER HI	—	FR WIPER INT	PASSING	HEAD LAMP1
INT VOLUME 1	RR WASHER	—	HEAD LAMP2	HI BEAM
RR WIPER INT	INT VOLUME 3	AUTO LIGHT	—	TAIL LAMP
INT VOLUME 2	RR WIPER ON	—	FR FOG	—

>> GO TO 2.

### 2. SYSTEM CHECK

 With CONSULT-II

#### CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.

- Connect CONSULT-II, and select "COMB SW" on "SELECT TEST ITEM" screen.
- Select "DATA MONITOR".
- Select "START", and confirm that other switches in malfunctioning system operate normally.

Example: When auto light switch is malfunctioning, confirm that "FRONT WIPER LOW" and "FRONT WIPER INT" in System 3, to which the auto light switch belongs, turn ON-OFF normally.

DATA MONITOR	
MONITOR	
TURN SIGNAL R	OFF
TURN SIGNAL L	OFF
HIBEAM SW	OFF
HEAD LAMP SW1	OFF
HEAD LAMP SW2	OFF
LIGHT SW 1ST	OFF
PASSING SW	OFF
AUTO LIGHT SW	OFF
FR FOG SW	OFF
	Page Down
	RECORD
MODE	BACK LIGHT COPY

SKIA7075E

 Without CONSULT-II

Operate combination switch, and confirm that other switches in malfunctioning system operate normally.

Example: When auto light switch is malfunctioning, confirm that "FRONT WIPER LOW" and "FRONT WIPER INT" in System 3, to which the auto light switch belongs, operate normally.

#### Check results

Other switches in malfunctioning system operate normally.>>Replace lighting switch or wiper switch.


Other switches in malfunctioning system do not operate normally.>>GO TO 3.

# COMBINATION SWITCH

## 3. HARNESS INSPECTION

1. Turn ignition switch OFF.
2. Disconnect BCM and combination switch connectors.
3. Check for continuity between BCM harness connector of the suspect system and the corresponding combination switch connector terminals.

Suspect system	Terminals				Continuity	
	BCM		Combination switch			
	Connector	Terminal	Connector	Terminal		
1	M18	Input 1	6	M28	6	Yes
		Output 1	36		1	
2		Input 2	5		7	
		Output 2	35		2	
3		Input 3	4		10	
		Output 3	34		3	
4		Input 4	3		9	
		Output 4	33		4	
5		Input 5	2		8	
		Output 5	32		5	

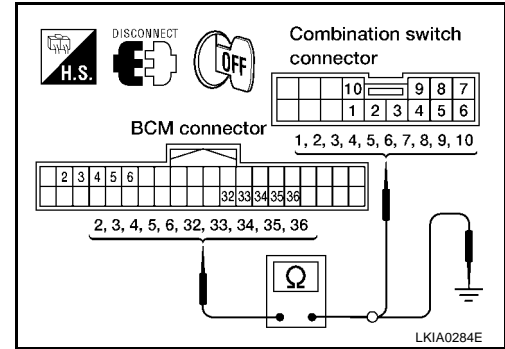

4. Check for continuity between each terminal of BCM harness connector in suspect malfunctioning system and ground.

Suspect system	Terminals				Continuity
	BCM				
	Connector	Terminal			
1	M18	Input 1	6	Ground	No
		Output 1	36		
2		Input 2	5		
		Output 2	35		
3		Input 3	4		
		Output 3	34		
4		Input 4	3		
		Output 4	33		
5		Input 5	2		
		Output 5	32		

OK or NG

OK >> GO TO 4.

NG >> Check harness between BCM and combination switch for open or short circuit.



# COMBINATION SWITCH


## 4. BCM OUTPUT TERMINAL INSPECTION

1. Turn lighting switch and wiper switch to OFF.
2. Set wiper dial to position 4.
3. Connect BCM and combination switch connectors.
4. Turn ignition switch on.
5. Check BCM output terminal voltage waveform of suspect malfunctioning system.

Suspect system	Terminals		
	Combination switch (+)		
	Connector	Terminal	
1	M28	Input 1	1
2		Input 2	2
3		Input 3	3
4		Input 4	4
5		Input 5	5

### OK or NG

- OK >> Open circuit in combination switch, GO TO 5.  
 NG >> Replace BCM. Refer to [BCS-20, "BCM"](#).

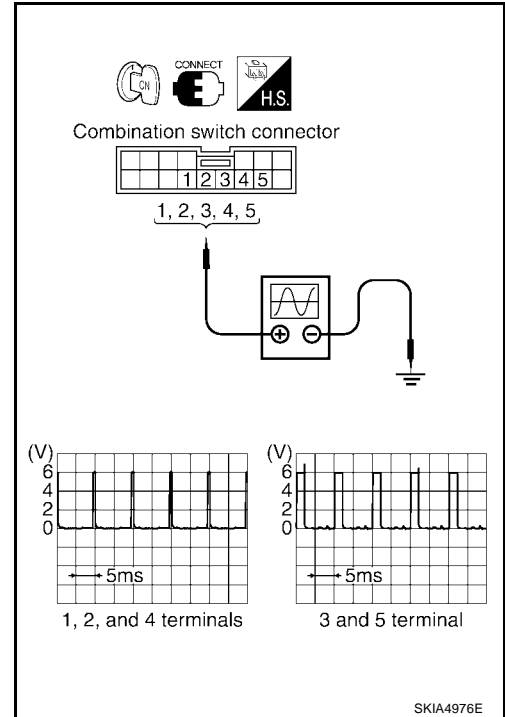

## 5. COMBINATION SWITCH INSPECTION

Referring to table below, perform combination switch inspection.

Procedure									
1	2		3	4		5	6		7
Replace lighting switch.	Confirm check results.	OK	INSPECTION END	Confirm check results.	OK	INSPECTION END	Confirm check results.	OK	INSPECTION END
		NG	Replace wiper switch.		NG	Replace switch base.		NG	Confirm symptom again.

>> Inspection End.

### Removal and Installation

Refer to [LT-98, "Removal and Installation"](#).

### Switch Circuit Inspection

Refer to [LT-103, "Combination Switch Inspection"](#).

# STOP LAMP

---

## STOP LAMP

PF2:26550

### System Description

EKS00BAD

Power is supplied at all times

- through 10A fuse [No. 20, located in fuse block (J/B)]
- to stop lamp switch terminal 3, and
- to stop lamp relay terminal 1.

When the brake pedal is pressed, the stop lamp switch is closed and power is supplied

- through stop lamp switch terminal 4
- to stop lamp relay terminal 3
- through stop lamp relay terminal 4
- to rear combination lamp LH and RH terminal 2, and
- to high-mounted stop lamp terminal 1.

Ground is supplied

- to rear combination lamp LH terminal 1, and
- to high-mounted stop lamp terminal 2
- through grounds B7 and B19, and
- to rear combination lamp RH terminal 1
- through grounds B117 and B132.

With power and ground supplied, the stop lamps illuminate.



# STOP LAMP

## Wiring Diagram — STOP/L —

EKS00BAE

### LT-STOP/L-01

⏏ : TRAILER TOW 7 PIN

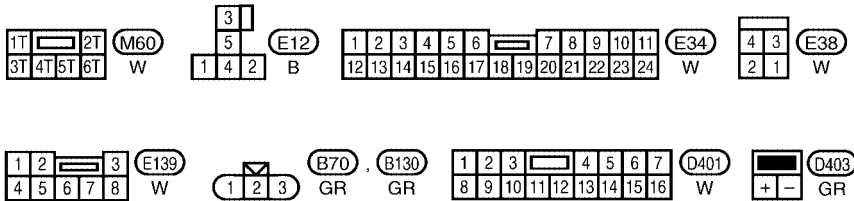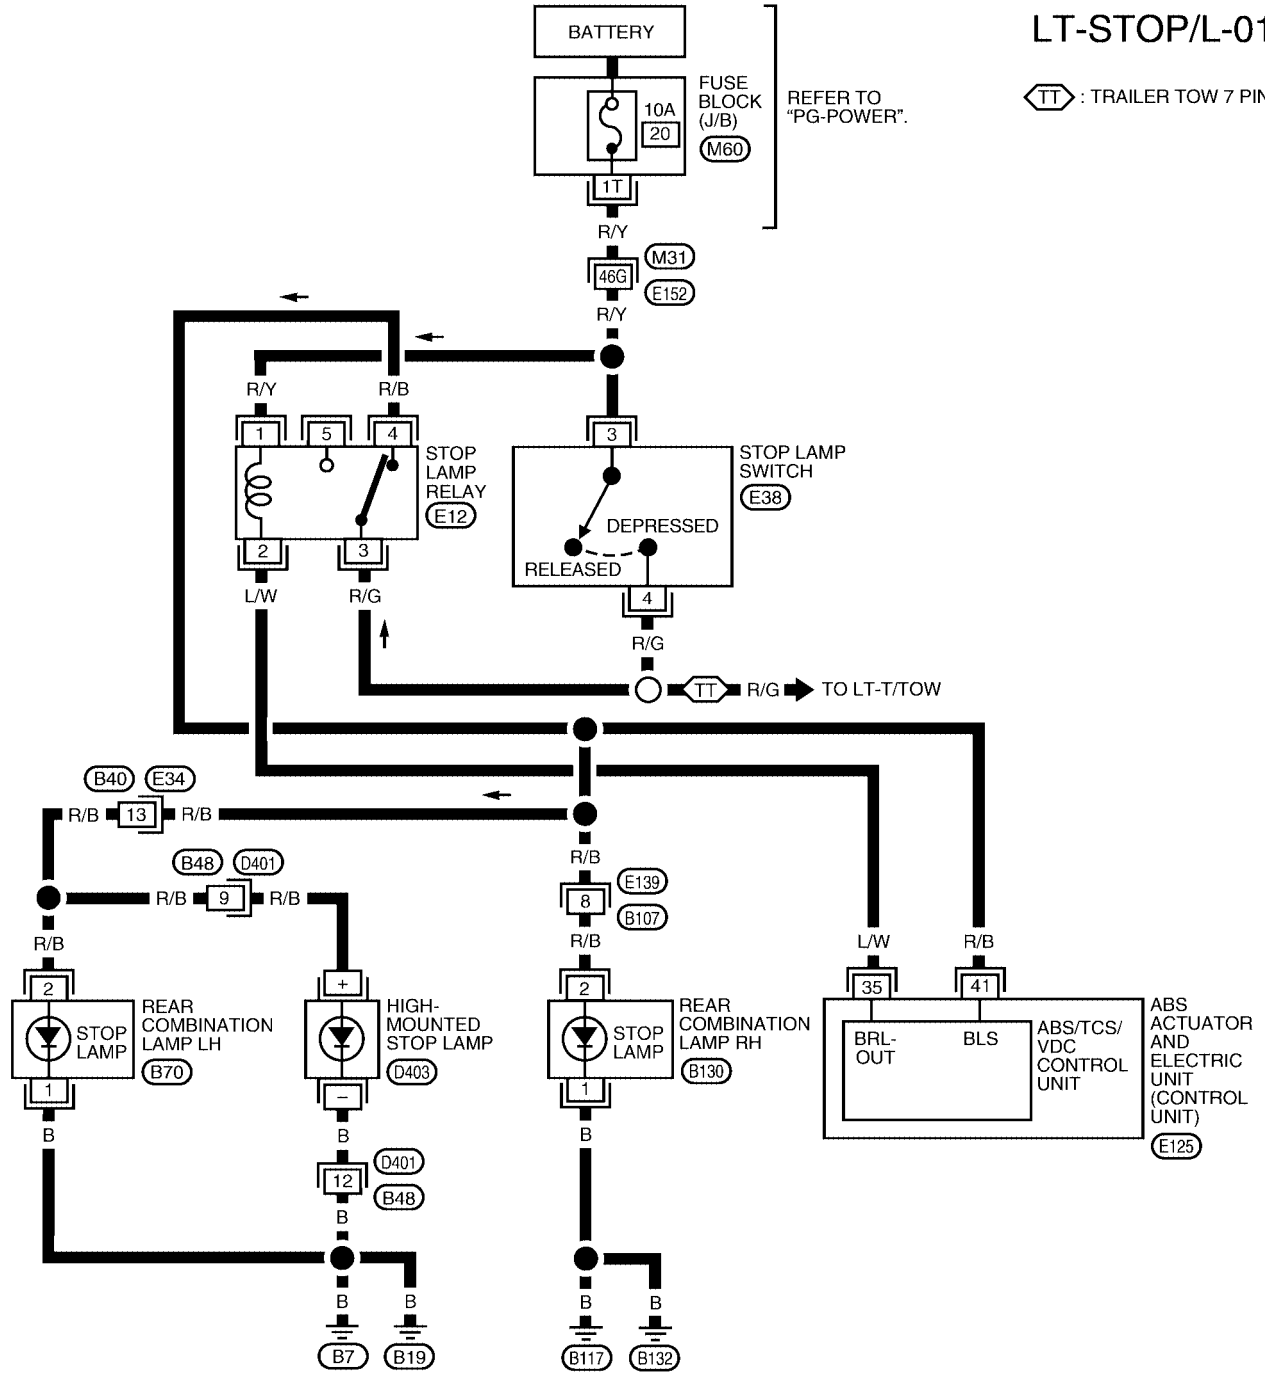

REFER TO THE FOLLOWING.  
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)  
 (E125) - ELECTRICAL UNITS

# STOP LAMP

## Bulb Replacement HIGH-MOUNTED STOP LAMP

EKS00BAF

The high-mounted stop lamp bulbs are not serviceable.

## STOP LAMP


The stop lamp bulbs are not serviceable separately. Replace rear combination lamp. Refer to [LT-125, "Removal and Installation"](#).

## Removal and Installation HIGH\_MOUNTED STOP LAMP

EKS00GDP

### Removal

1. Remove back door upper finisher.
2. Remove 2 nuts and remove high-mounted stop lamp.

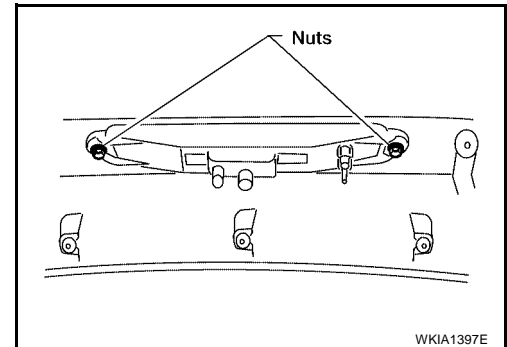

### Installation

Installation is in the reverse order of removal.

## STOP LAMP

Refer to [LT-125, "Removal and Installation"](#).

# BACK-UP LAMP

PF2:26550



## BACK-UP LAMP

### Wiring Diagram — BACK/L —

EKS00BAH

## LT-BACK/L-01

⬡ : TRAILER TOW 7 PIN

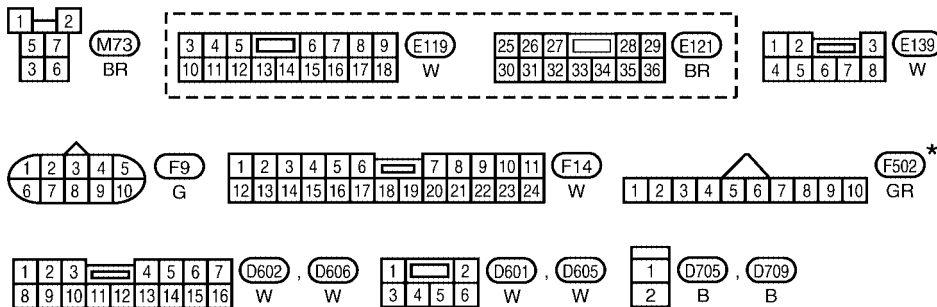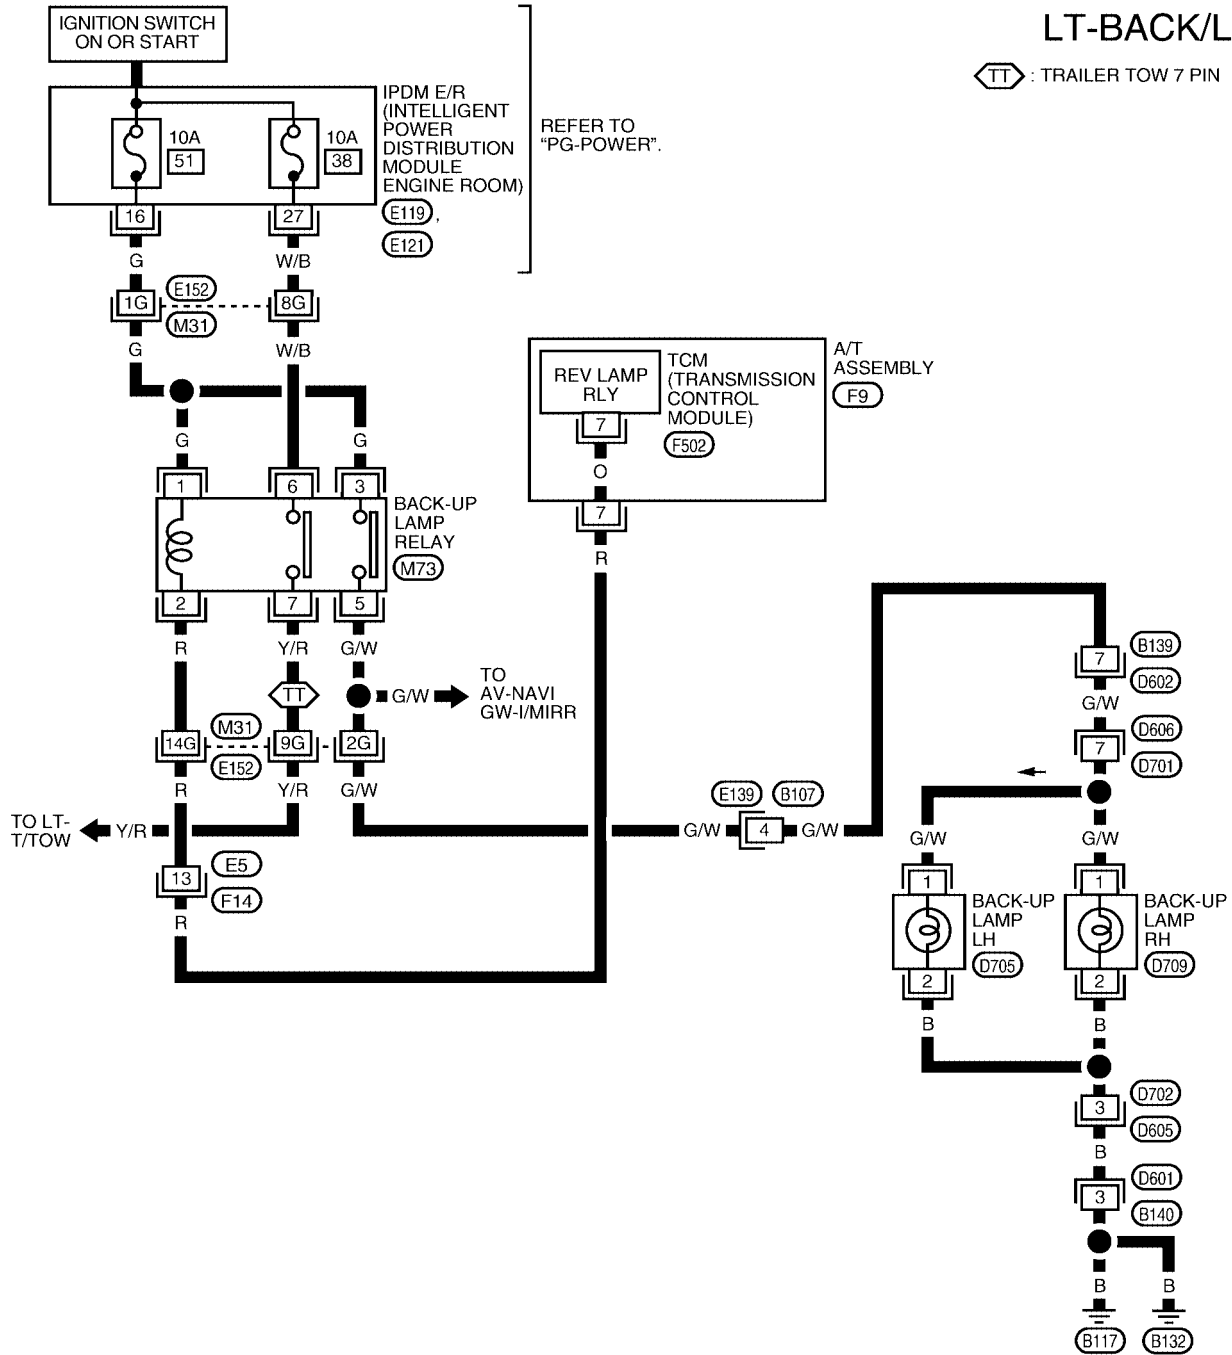

REFER TO THE FOLLOWING.

⬡ - SUPER MULTIPLE JUNCTION (SMJ)

\*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

WKWA5520E

# BACK-UP LAMP

EKS00BAI

## Bulb Replacement BACK-UP LAMP

### Removal

1. Remove back door lower finisher. Refer to [EI-42, "Removal and Installation"](#) .
2. Turn bulb socket counterclockwise and remove it from the lamp housing.
3. Pull bulb from socket.

### INSTALLATION


Installation is in the reverse order of removal.

## Removal and Installation BACK-UP LAMP

EKS00BAJ

### Removal

1. Remove license lamp finisher. Refer to [EI-24, "Removal and Installation"](#) .
2. Carefully release tabs to remove back up lamp housing from license plate finisher.

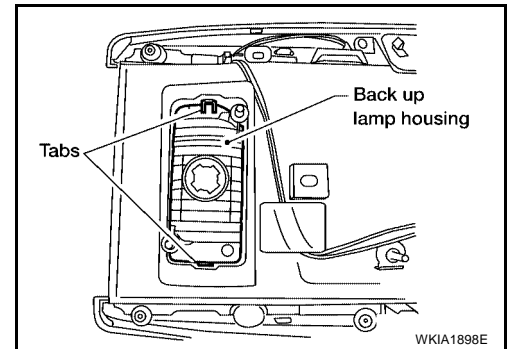


### Installation

Installation is in the reverse order of removal.

PARKING, LICENSE PLATE AND TAIL LAMPS

Component Parts and Harness Connector Location

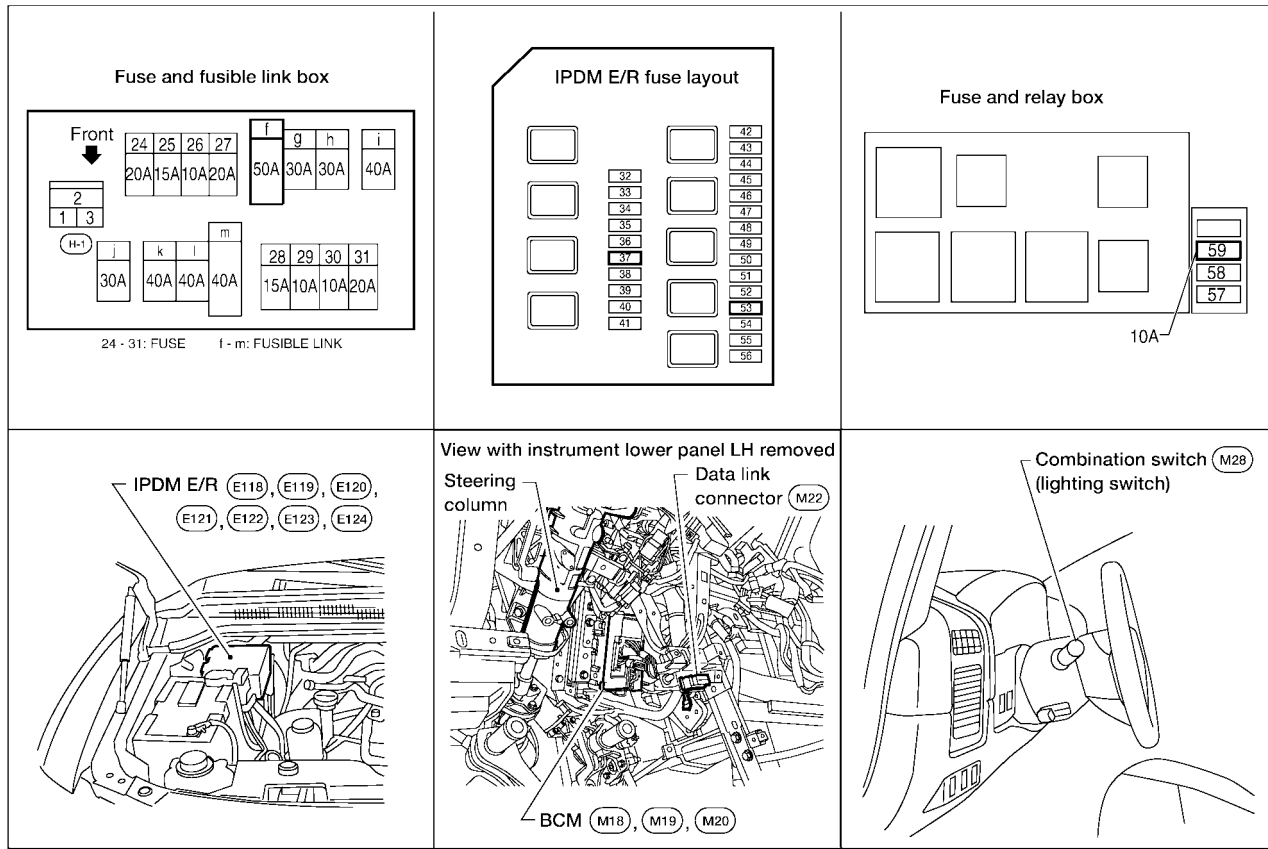

System Description

Control of the parking, license plate, and tail lamp operation is dependent upon the position of the lighting switch (combination switch). When the lighting switch is placed in the 1ST position, the BCM (body control module) receives input signal requesting the parking, license plate, side marker and tail lamps to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the tail lamp relay coil. This relay, when energized, directs power to the parking, license plate and tail lamps, which then illuminate.

Power is supplied at all times

- to ignition relay, located in the IPDM E/R, and
- to tail lamp relay, located in the IPDM E/R, and
- through 20A fuse (No. 53, located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- through 50A fusible link (letter f , located in the fuse and fusible link box)
- to BCM terminal 70.

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse (No. 59, located in the fuse and relay box)
- to BCM terminal 38
- to ignition relay, located in the IPDM E/R, and

Ground is supplied

- to BCM terminal 67
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 59
- through grounds E9, E15 and E24.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# PARKING, LICENSE PLATE AND TAIL LAMPS

---

## OPERATION BY LIGHTING SWITCH

With the lighting switch in the 1ST or 2ND position (or if the auto light system is activated), the BCM receives input signal requesting the parking, license plate, side marker and tail lamps to illuminate. This input signal is communicated to the IPDM E/R across the CAN communication lines. The CPU of the IPDM E/R controls the tail lamp relay coil, which when energized, directs power

- through 10 A fuse (No. 37, located in the IPDM E/R)
- through IPDM E/R terminal 57
- to front combination lamp LH and RH terminal 3
- to license plate lamps terminal 1 and
- to rear combination lamp LH and RH terminal 3.

Ground is supplied

- to front combination lamp LH and RH terminal 4
- through grounds E9, E15 and E24, and
- to rear combination lamp LH terminal 1
- through grounds B7 and B19, and
- to rear combination lamp RH terminal 1 and
- to license plate lamps terminal 2
- through grounds B117 and B132.

With power and ground supplied, the parking, license plate and tail lamps illuminate.

## COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

## EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 1ST (or 2ND) position, and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated.

Under this condition, the parking, license and tail lamps remain illuminated for 5 minutes, then the parking, license plate and tail lamps are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

## CAN Communication System Description

EKS00BAM


Refer to [LAN-26, "CAN COMMUNICATION"](#) .



# PARKING, LICENSE PLATE AND TAIL LAMPS

## Schematic

EKS00BAN

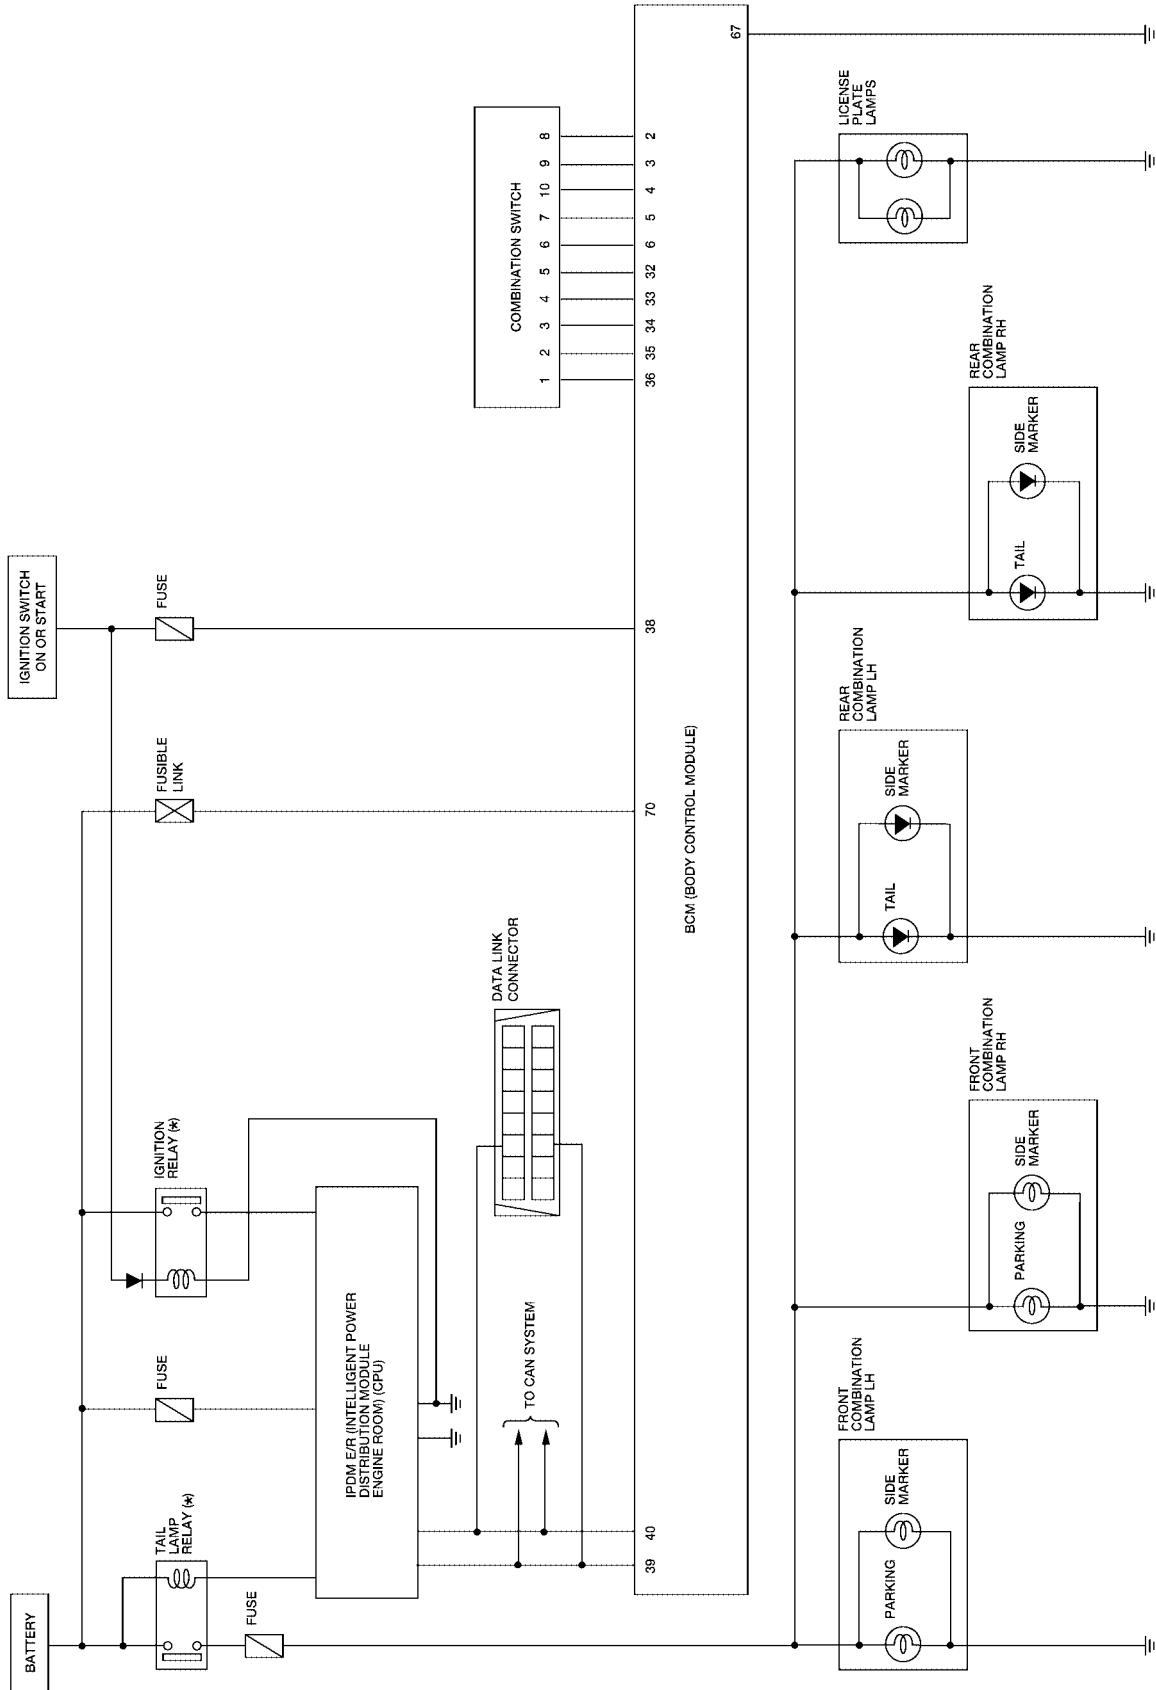

\* THIS RELAY IS BUILT INTO THE IPDM/ER (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

WKWA3661E

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M


# PARKING, LICENSE PLATE AND TAIL LAMPS

## Wiring Diagram — TAIL/L —

EKS00BA0


### LT-TAIL/L-01

— : DATA LINE

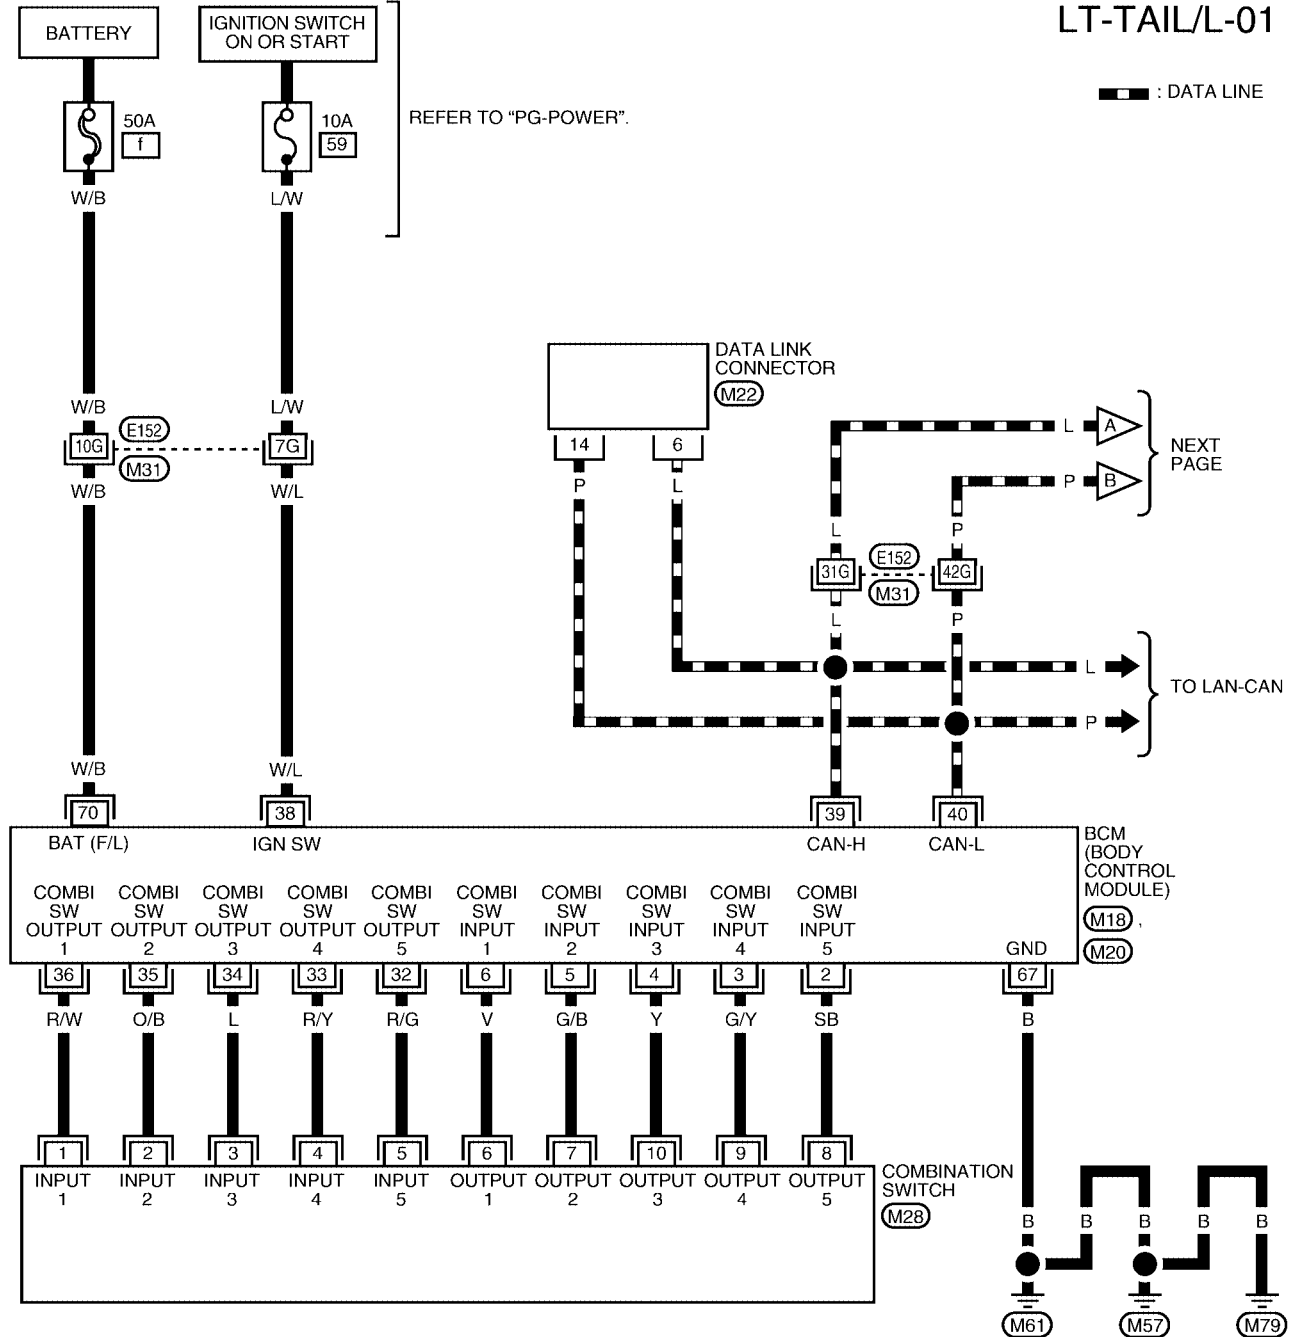

NEXT PAGE

TO LAN-CAN

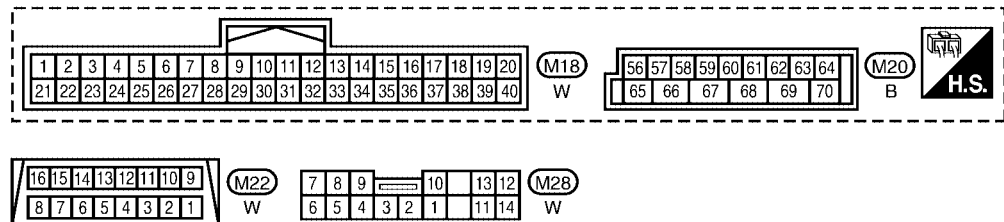


REFER TO THE FOLLOWING.  
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3662E


# PARKING, LICENSE PLATE AND TAIL LAMPS

## LT-TAIL/L-02

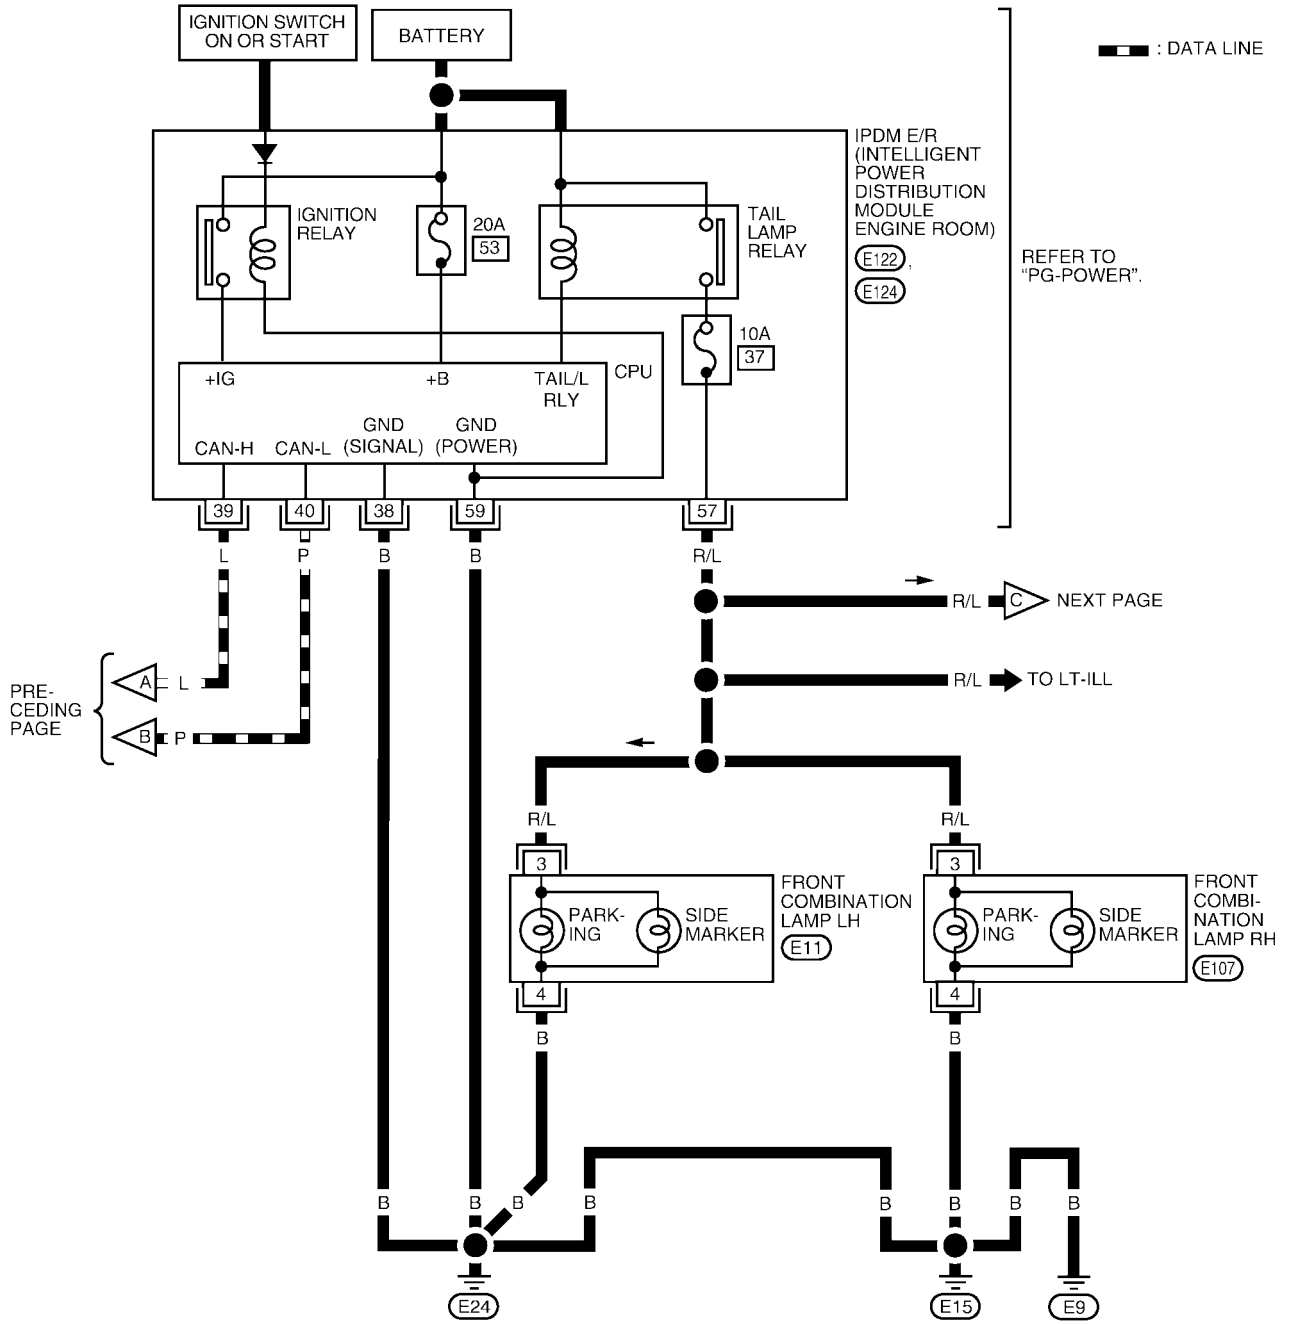

PRE-  
CEDING  
PAGE




A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M



WKWA2494E

# PARKING, LICENSE PLATE AND TAIL LAMPS

LT-TAIL/L-03

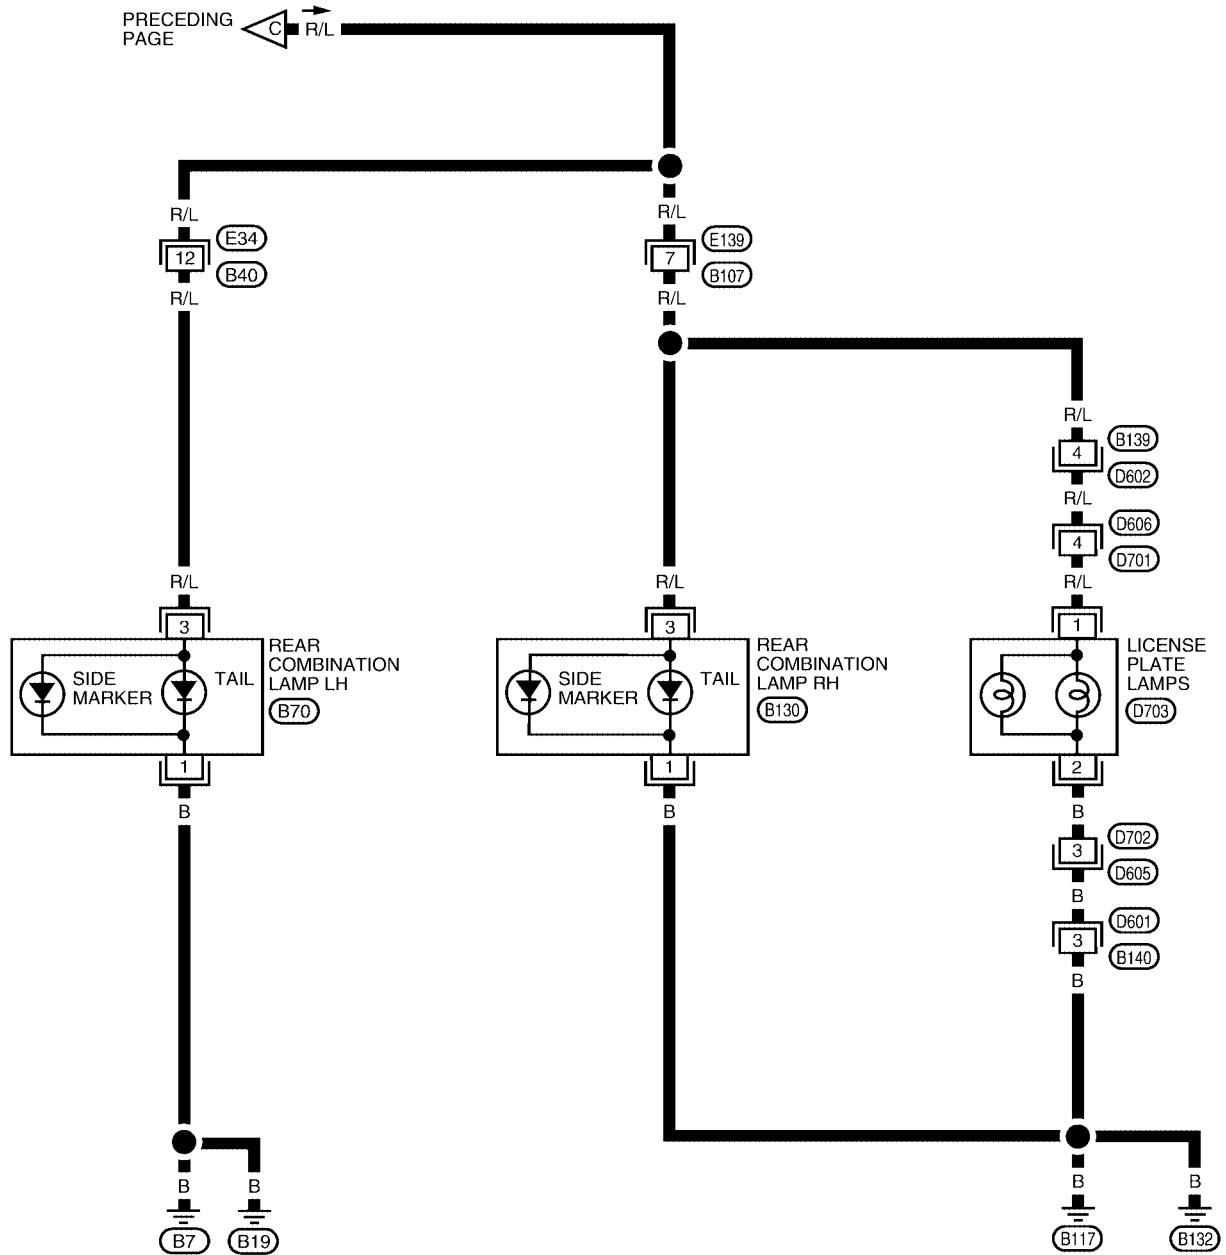
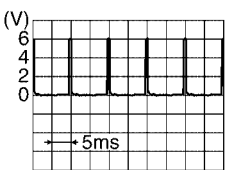
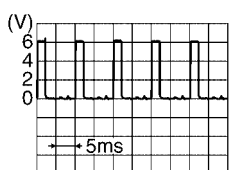
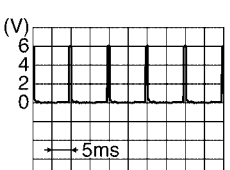

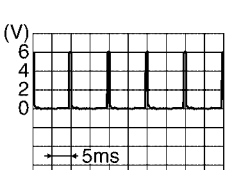



WKWA3663E

# PARKING, LICENSE PLATE AND TAIL LAMPS

## Terminals and Reference Values for BCM

EKS00BAP

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
2	SB	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
3	G/Y	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
4	Y	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
5	G/B	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
6	V	Combination switch input 1			
32	R/G	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
33	R/Y	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
34	L	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# PARKING, LICENSE PLATE AND TAIL LAMPS

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)
			Ignition switch	Operation or condition	
35	O/B	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	
36	R/W	Combination switch output 1			
38	W/L	Ignition switch (ON)	ON	—	Battery voltage
39	L	CAN-H	—	—	—
40	P	CAN-L	—	—	—
67	B	Ground	ON	—	0V
70	W/B	Battery power supply (fusible link)	OFF	—	Battery voltage

## Terminals and Reference Values for IPDM E/R

EKS00BAQ

Terminal No.	Wire color	Signal name	Measuring condition		Reference value (Approx.)	
			Ignition switch	Operation or condition		
38	B	Ground	ON	—	0V	
39	L	CAN-H	—	—	—	
40	P	CAN-L	—	—	—	
57	R/L	Parking, license, and tail lamp	ON	Lighting switch 1ST position	OFF	0V
					ON	Battery voltage
59	B	Ground	ON	—	0V	

## How to Proceed With Trouble Diagnosis

EKS00BAR

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-111, "System Description"](#) .
3. Carry out the Preliminary Check. Refer to [LT-118, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Do the parking, license and tail lamps operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

### Preliminary Check

EKS00BAS

#### CHECK POWER SUPPLY AND GROUND CIRCUIT

#### 1. CHECK FUSES OR FUSIBLE LINK

Check for blown fuses or fusible link.

Unit	Power source	Fuse and fusible link No.
BCM	Battery	f
	Ignition switch ON or START position	59
IPDM E/R	Battery	53
	Battery (Tail lamps ON)	37

Refer to [LT-114, "Wiring Diagram — TAIL/L —"](#) .

#### OK or NG

OK >> GO TO 2.

NG >> If fuse or fusible link is blown, be sure to eliminate cause of malfunction before installing new fuse or fusible link. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

# PARKING, LICENSE PLATE AND TAIL LAMPS

## 2. CHECK POWER SUPPLY CIRCUIT


1. Disconnect BCM connectors.
2. Check voltage between BCM harness connector and ground.

BCM		(-)	Ignition switch position		
(+) Connector	Terminal		OFF	ACC	ON
M18	38	Ground	0V	0V	Battery voltage
M20	70		Battery voltage	Battery voltage	Battery voltage

**OK or NG**

OK >> GO TO 3.

NG >> Check harness for open between BCM and fuse or fusible link.

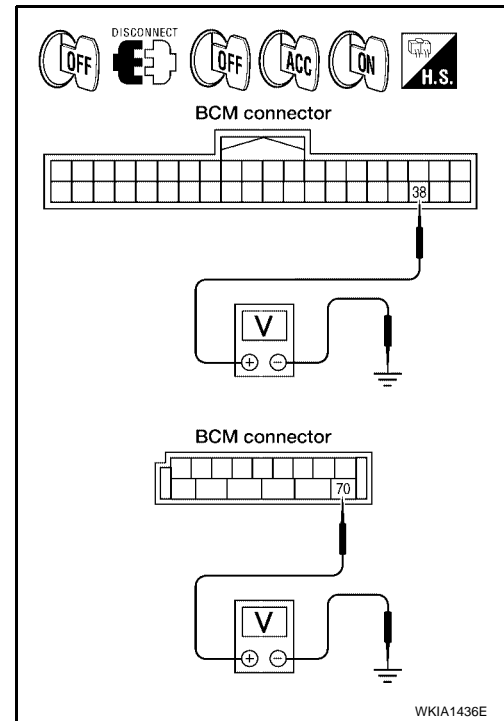

## 3. CHECK GROUND CIRCUIT


Check continuity between BCM harness connector and ground.

BCM			Continuity
Connector	Terminal		
M20	67	Ground	Yes

**OK or NG**

OK >> Inspection End.

NG >> Check ground circuit harness.

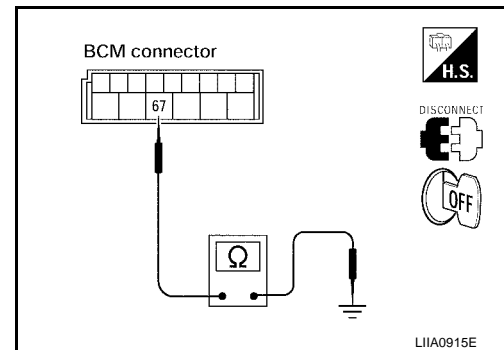

## CONSULT-II Functions

Refer to [LT-19, "CONSULT-II Function \(IPDM E/R\)"](#) and [LT-16, "CONSULT-II Function \(BCM\)"](#) in HEAD-LAMP (FOR USA).

# PARKING, LICENSE PLATE AND TAIL LAMPS

EKS00BAU

## Parking, License Plate and/or Tail Lamps Do Not Illuminate

### 1. CHECK COMBINATION SWITCH INPUT SIGNAL

④ With CONSULT-II

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "LIGHT SW 1ST" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in : LIGHT SW 1ST ON  
1ST position**

⊗ Without CONSULT-II

Refer to [LT-103, "Combination Switch Inspection"](#) .

OK or NG

OK >> GO TO 2.

NG >> Check lighting switch. Refer to [LT-103, "Combination Switch Inspection"](#) .

DATA MONITOR	
MONITOR	
LIGHT SW 1ST	ON

SKIA5956E

### 2. ACTIVE TEST

④ With CONSULT-II

1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
3. Touch "TAIL" on "ACTIVE TEST" screen.
4. Make sure parking, license plate and tail lamp operation.

**Parking, license plate and tail lamp should operate**

⊗ Without CONSULT-II

1. Start auto active test. Refer to [PG-24, "Auto Active Test"](#) .
2. Make sure parking, license plate and tail lamp operation.

**Parking, license plate and tail lamp should operate**

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

ACTIVE TEST			
EXTERNAL LAMPS		OFF	
		TAIL	
LO		HI	
FOG			
MODE	BACK	LIGHT	COPY

WKIA1438E

### 3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "TAIL&CLR REQ" turns ON when lighting switch is in 1ST position.

**When lighting switch is in : TAIL&CLR REQ ON  
1ST position**

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-30, "Removal and Installation of IPDM E/R"](#) .

NG >> Replace BCM. Refer to [BCS-20, "BCM"](#) .

DATA MONITOR			
MONITOR			
TAIL&CLR REQ		ON	
		RECORD	
MODE	BACK	LIGHT	COPY

SKIA5958E



# PARKING, LICENSE PLATE AND TAIL LAMPS

## 4. CHECK INPUT SIGNAL


Ⓟ With CONSULT-II

1. Turn ignition switch OFF.
2. Disconnect front combination lamp, license plate lamp and rear combination lamp connectors.
3. Turn ignition switch ON.
4. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
5. Select "TAIL LAMP" on "SELECT TEST ITEM" screen.
6. Touch "ON" on "ACTIVE TEST" screen.
7. When tail lamp is operating, check voltage between front combination lamp, license plate lamp, rear combination lamp harness connector and ground.


ⓧ Without CONSULT-II

1. Start auto active test. Refer to [PG-24, "Auto Active Test"](#).
2. When tail lamp is operating, check voltage between front combination lamp, license plate lamp, rear combination lamp connector and ground.


Front combination lamp (+)		Terminal	(-)	Voltage
Connector				
RH	E107	3	Ground	Battery voltage
LH	E11			

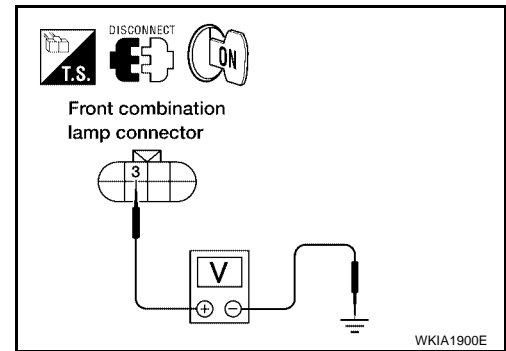

License plate lamps (+)		Terminal	(-)	Voltage
Connector				
D703		1	Ground	Battery voltage

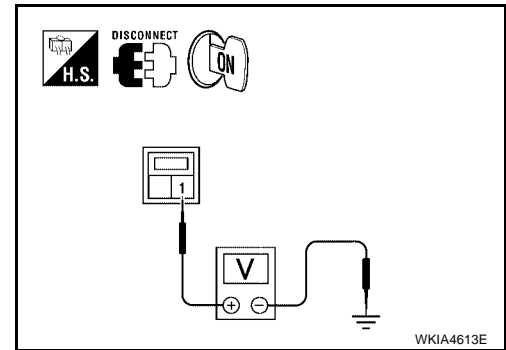

Rear combination lamp (+)		Terminal	(-)	Voltage
Connector				
RH	B130	3	Ground	Battery voltage
LH	B70			

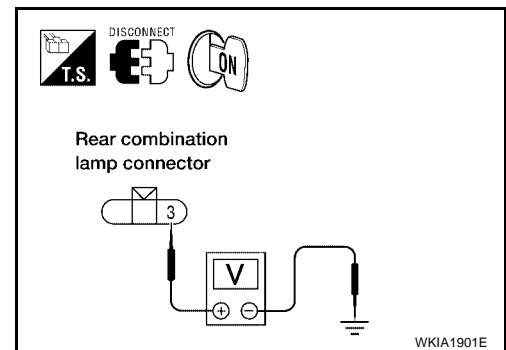

OK or NG

- OK >> GO TO 6.  
 NG >> GO TO 5.


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# PARKING, LICENSE PLATE AND TAIL LAMPS

## 5. CHECK PARKING, LICENSE PLATE AND TAIL LAMP CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front combination lamp harness connector.

IPDM E/R		Front combination lamp		Continuity	
Connector	Terminal	Connector	Terminal		
E124	57	RH	E107	3	Yes
		LH	E11		

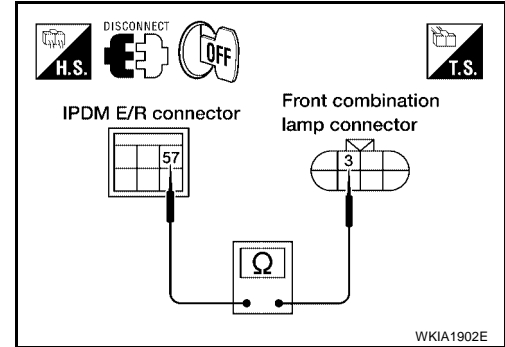


4. Check continuity between IPDM E/R connector E124 (A) and license plate lamps connector D703 (B).

IPDM E/R		License plate lamps		Continuity
Connector	Terminal	Connector	Terminal	
A: E124	57	B: D703	1	Yes

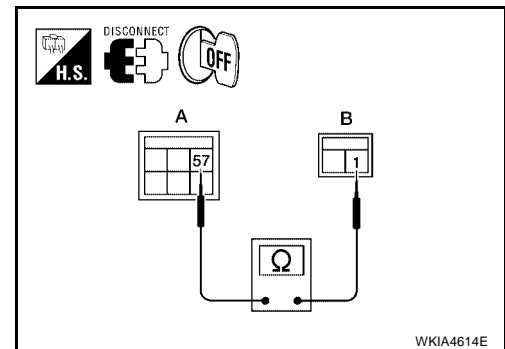

5. Check continuity between IPDM E/R harness connector and rear combination lamp harness connector.

IPDM E/R		Rear combination lamp		Continuity	
Connector	Terminal	Connector	Terminal		
E124	57	RH	B130	3	Yes
		LH	B70		

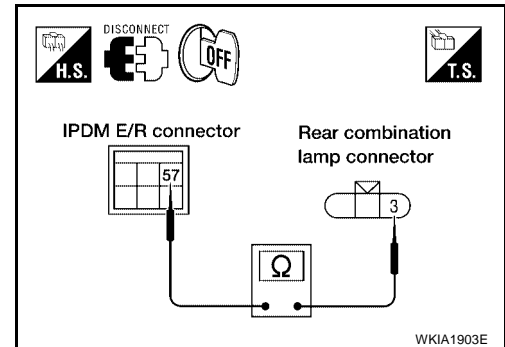

OK or NG


- OK >> Replace IPDM E/R. Refer to [PG-30, "Removal and Installation of IPDM E/R"](#).
- NG >> Repair harness or connector.

# PARKING, LICENSE PLATE AND TAIL LAMPS

## 6. CHECK GROUND


1. Check continuity between front combination lamp harness connector and ground.

Front combination lamp		Terminal	Ground	Continuity
Connector				
RH	E107	4	Ground	Yes
LH	E11			

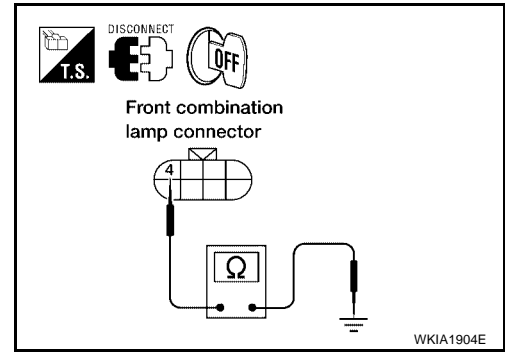


2. Check continuity between license lamps plate connector and ground.

License plate lamps		Terminal	Ground	Continuity
Connector				
D703		2	Ground	Yes

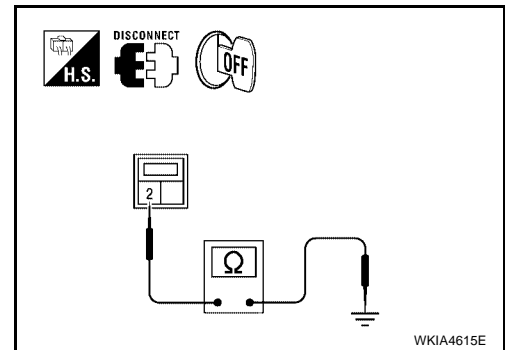

3. Check continuity between rear combination lamp harness connector and ground.

Rear combination lamp		Terminal	Ground	Continuity
Connector				
RH	B130	1	Ground	Yes
LH	B70			

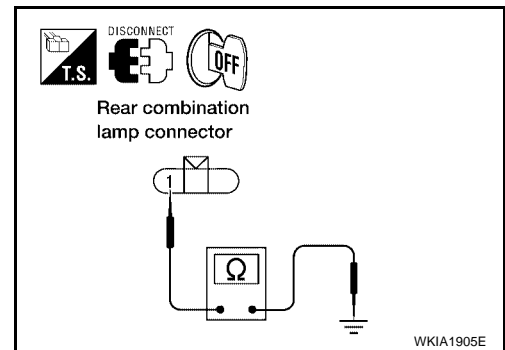

OK or NG

- OK >> Check bulbs.
- NG >> Repair harness or connector.

## Parking, License Plate and Tail Lamps Do Not Turn OFF (After Approx. 10 Minutes)

EKS00BAV

### 1. CHECK IPDM E/R

1. Turn ignition switch ON. Turn the combination switch (lighting switch) to the OFF position. Turn ignition switch OFF.
2. Verify that the parking, license plate, and tail lamps turn on and off after approximately 10 minutes.

OK or NG

- OK >> Ignition relay malfunction. Refer to [PG-19, "Function of Detecting Ignition Relay Malfunction"](#).
- NG >> Inspection End.

# PARKING, LICENSE PLATE AND TAIL LAMPS

---

EKS00BAW

## **Bulb Replacement FRONT PARKING LAMP**

Refer to [LT-31, "FRONT PARKING LAMP \(INNER OR OUTER\)"](#) .

## **LICENSE PLATE LAMP**

### **Removal**

1. Remove back door lower finisher. Refer to [LT-124, "LICENSE PLATE LAMP"](#) .
2. Turn bulb socket counterclockwise to remove it.
3. Pull bulb from socket.

### **Installation**

Installation is in the reverse order of removal.

## **SIDE MARKER LAMP (FRONT)**

Refer to [LT-31, "SIDE MARKER LAMP \(FRONT\)"](#) .

## **TAIL LAMP**

The tail lamp bulbs are not serviceable separately. Replace rear combination lamp. Refer to [LT-125, "Removal and Installation"](#) .

## **Removal and Installation FRONT PARKING LAMP**

EKS00GDQ

Refer to [LT-31, "Removal and Installation"](#) .

## **LICENSE PLATE LAMP**

### **Removal**

1. Remove back door lower finisher. Refer to [EI-42, "Removal and Installation"](#) .
2. Remove license plate lamp screws.
3. Remove license plate lamp.

### **INSTALLATION**

Installation is in the reverse order of removal.

## **SIDE MARKER LAMP (REAR)**

Refer to [LT-125, "Removal and Installation"](#) .

## **TAIL LAMP**

Refer to [LT-125, "Removal and Installation"](#) .

# REAR COMBINATION LAMP

PF2:26554

## REAR COMBINATION LAMP

### Bulb Replacement SIDE MARKER LAMP (REAR)

EKS00BAZ

Side marker lamps (rear) are LED's and are not serviceable separately. Replace rear combination lamp. Refer to [LT-125, "REAR COMBINATION LAMP"](#).


### TAIL LAMP

Tail lamps are LED's and are not serviceable separately. Replace rear combination lamp. Refer to [LT-125, "Removal and Installation"](#).

### TURN SIGNAL

#### Removal

1. Remove rear combination lamp bolts.
2. Pull rear combination lamp to remove from the vehicle.
3. Turn bulb socket counterclockwise and remove turn signal socket.
4. Remove turn signal lamp bulb.

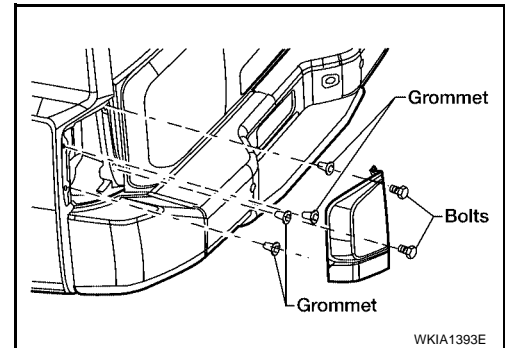

### STOP LAMP

Stop lamps are LED's and are not serviceable separately. Replace rear combination lamp. Refer to [LT-125, "Removal and Installation"](#).

### INSTALLATION


Installation is in the reverse order of removal.

### Removal and Installation REAR COMBINATION LAMP

EKS00BB0

#### Removal

1. Remove rear combination lamp mounting bolts.
2. Pull rear combination lamp to remove from the vehicle.
3. Disconnect rear combination lamp connectors.

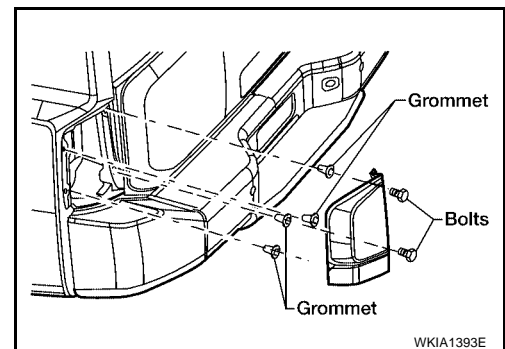

#### Installation

Installation is in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M


# TRAILER TOW

## TRAILER TOW

PF9:93020

### Component Parts and Harness Connector Location

EKS00BB1

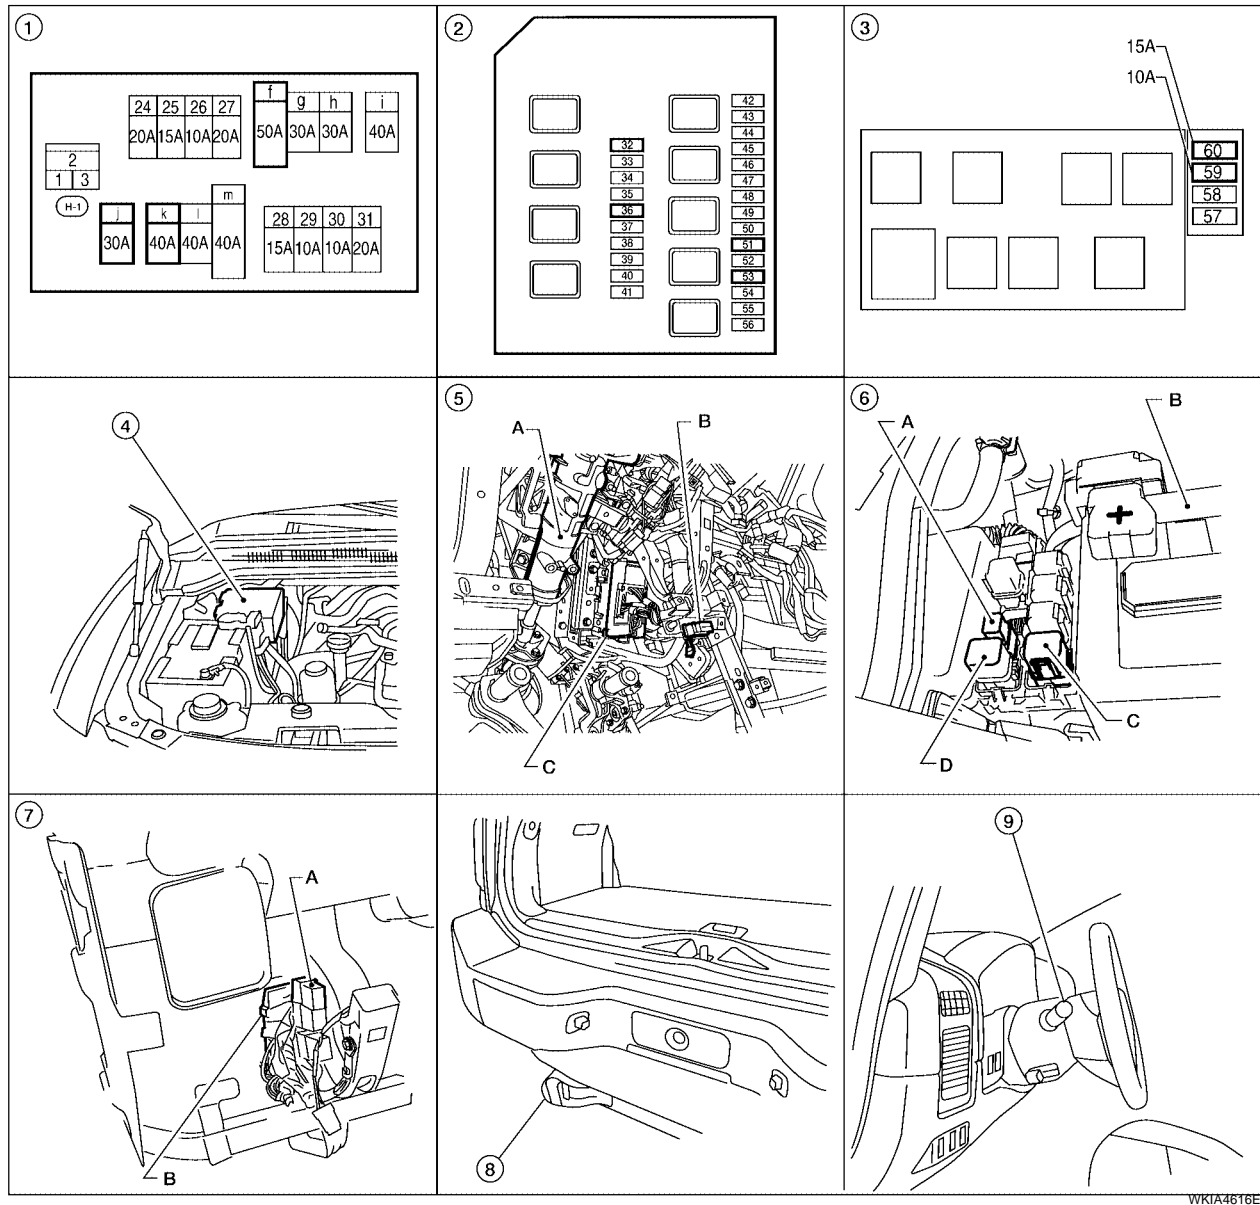

WKIA4616E

1. Fuse and fusible link box
2. IPDM E/R fuse layout
3. Fuse and relay box
4. IPDM E/R E118, E119, E120, E121, E122, E123, E124
5. A. Steering column  
B. Data link connector M22  
C. BCM M18, M19, M20  
(View with instrument lower panel LH removed)
6. A. Trailer turn relay LH E156  
B. Battery  
C. Trailer tow relay 2 E140  
D. Trailer turn relay RH E157
7. A. Trailer tow relay 1 M51  
B. Electric brake (pre-wiring) M76  
(View with instrument lower panel LH removed)
8. Trailer connector C2
9. Combination switch (lighting switch) M28

### System Description

EKS00BB2

Power is supplied at all times

- to ignition relay, located in the IPDM E/R (intelligent power distribution module engine room), and
- through 50A fusible link (letter **f**, located in the fuse and fusible link box)
- to BCM (body control module) terminal 70, and
- through 10A fuse (No. 32, located in the IPDM E/R)

# TRAILER TOW

- through IPDM E/R terminal 61
- to trailer tow relay 1 terminal 3, and
- through 20A fuse (No. 53, located in the IPDM E/R)
- to CPU (central processing unit) of the IPDM E/R, and
- through 30A fusible link (letter **j** , located in the fuse and fusible link box)
- to trailer tow relay 2 terminals 3 and 6, and
- through 40A fusible link (letter **k** , located in the fuse and fusible link box)
- to electric brake (pre-wiring) terminal 5.

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse (No. 59, located in the fuse and relay box)
- to BCM terminal 38, and
- through 10A fuse (No. 51, located in the IPDM E/R)
- to trailer tow relay 2 terminal 1.

Ground is supplied

- to BCM terminal 67
- to electric brake (pre-wiring) terminal 1, and
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 59
- to trailer tow relay 1 terminal 2
- to trailer tow relay 2 terminal 2, and
- to trailer connector terminal 2
- to trailer turn relay LH and RH terminal 2
- through grounds E9, E15 and E24.

## TRAILER TAIL LAMP OPERATION

The trailer tail lamps are controlled by the trailer tow relay 1.

With the lighting switch in the parking and tail lamp ON (1ST) position, AUTO position (and the auto light system is activated) or headlamp ON (2ND) position, power is supplied

- through the tail lamp relay, located in the IPDM E/R
- through 10A fuse (No. 36, located in the IPDM E/R)
- through IPDM E/R terminal 49
- to trailer tow relay 1 terminal 1.

When energized, trailer tow relay 1 supplies tail lamp power to trailer connector terminal 6.

## TRAILER BRAKE, TURN SIGNAL AND HAZARD LAMP OPERATION

The trailer brake, turn signal and hazard lamps are controlled by the BCM through trailer turn relays (LH and RH). When the brake pedal is depressed, the BCM receives stop lamp switch signal through CAN communication. If the brake pedal is depressed or either turn signal or the hazard lamps are turned on, the BCM supplies voltage to the trailer turn relays (LH and RH) to make them cycle on and off.

Trailer turn relay LH output is supplied

- through BCM terminal 52
- to trailer turn relay LH terminal 1.

Trailer turn relay RH output is supplied

- through BCM terminal 51
- to trailer turn relay RH terminal 1.

Left trailer brake, turn signal and hazard lamp output is supplied

- through trailer turn relay LH terminal 3
- to trailer connector terminal 1.

Right trailer brake, turn signal and hazard lamp output is supplied

- through trailer turn relay RH terminal 3

A

B

C

D

E

F

G

H

I

J

LT

L

M

# TRAILER TOW

---

- to trailer connector terminal 4.

## TRAILER BRAKE OPERATION

The trailer brake is controlled by the electric brake. The electric brake receives stop lamp switch signal at electric brake (pre-wiring) terminal 2 when the brake pedal is depressed.

When the brake pedal is depressed, power is supplied by the electric brake

- through electric brake (pre-wiring) terminal 3
- to trailer connector terminal 3.

## TRAILER POWER SUPPLY OPERATION

The trailer power supply is controlled by the trailer tow relay 2.

When the ignition switch is in the ON or START position, power is supplied

- through 10A fuse (No. 51, located in the IPDM E/R)
- through IPDM E/R terminal 16
- to trailer tow relay 2 terminal 1.

When energized, the trailer tow relay 2 supplies power


- through trailer tow relay 2 terminals 5 and 7
- to trailer connector terminal 5.



# TRAILER TOW

## Schematic

EKS00BB3

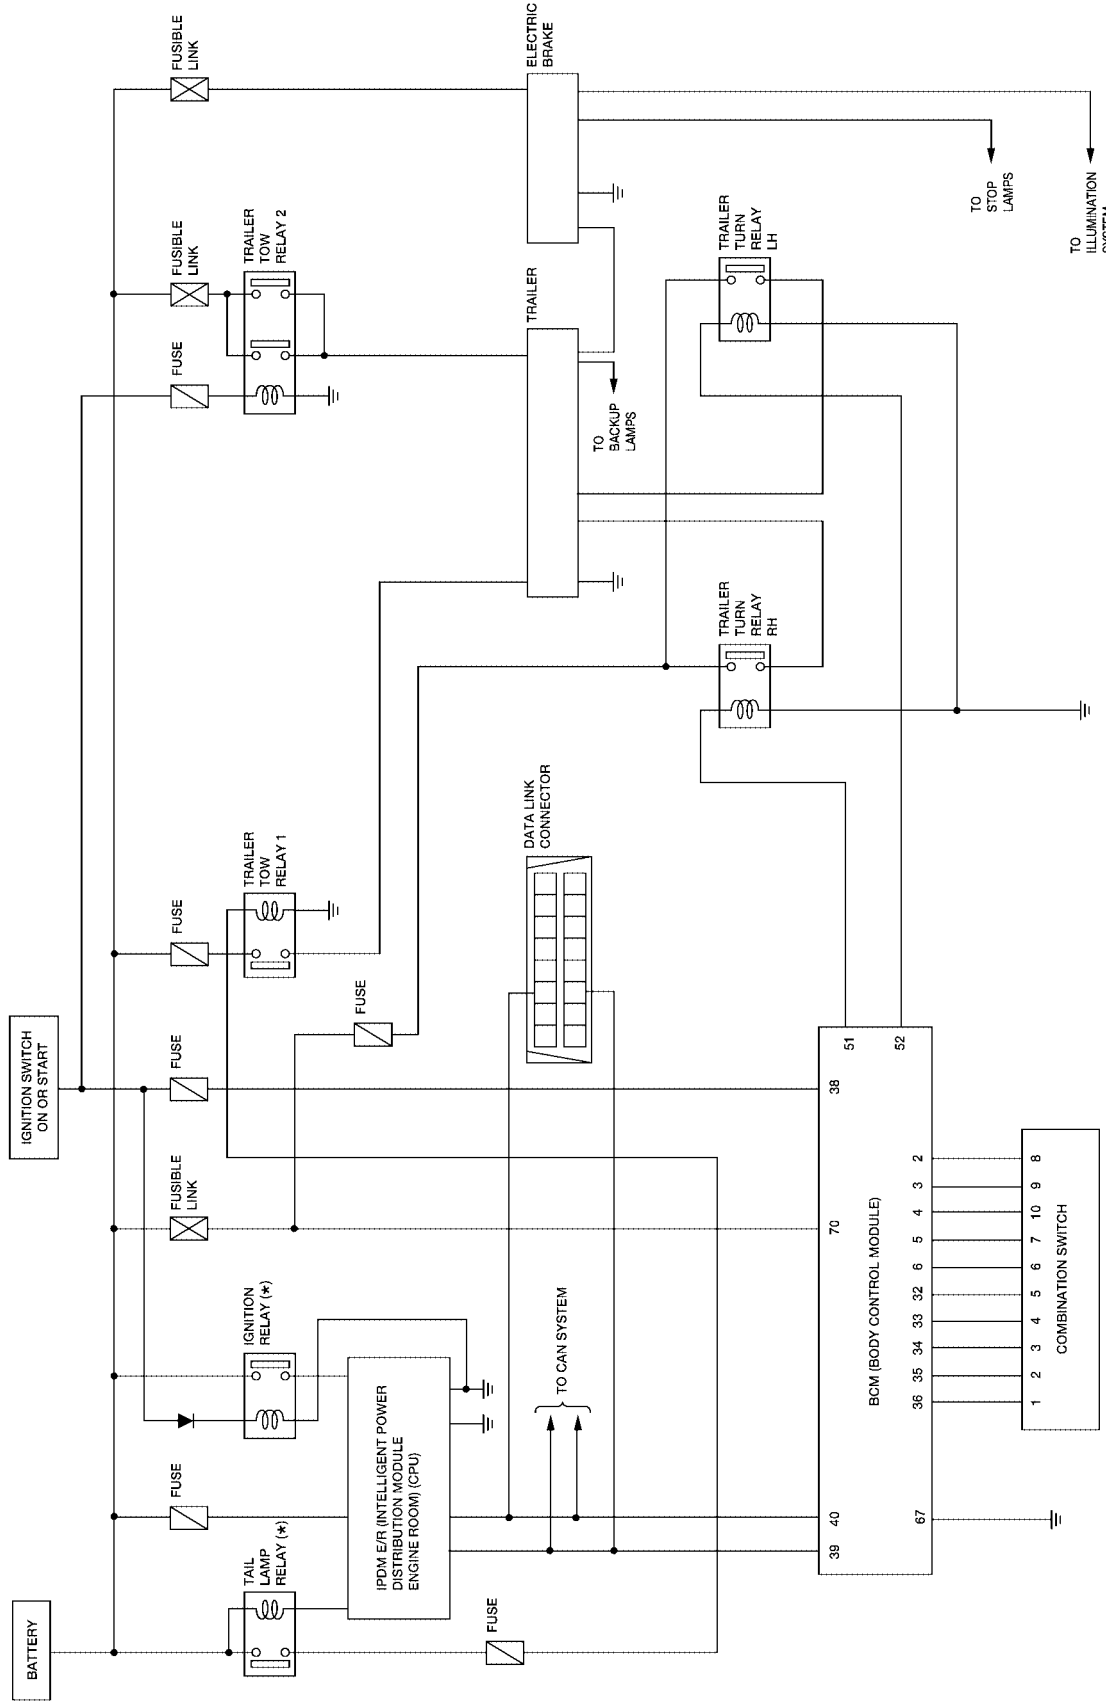

\* : THIS RELAY IS BUILT INTO THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)



A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

WKWA3664E

# TRAILER TOW

EKS00BB4

## Wiring Diagram — T/TOW —

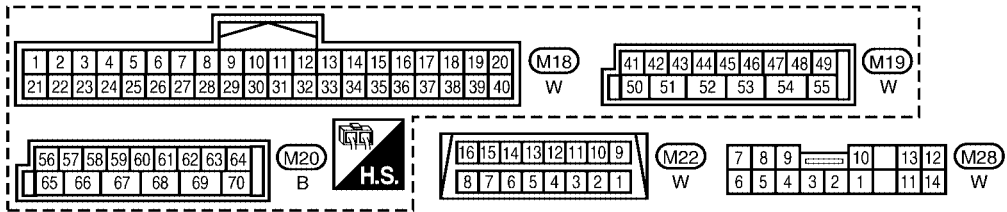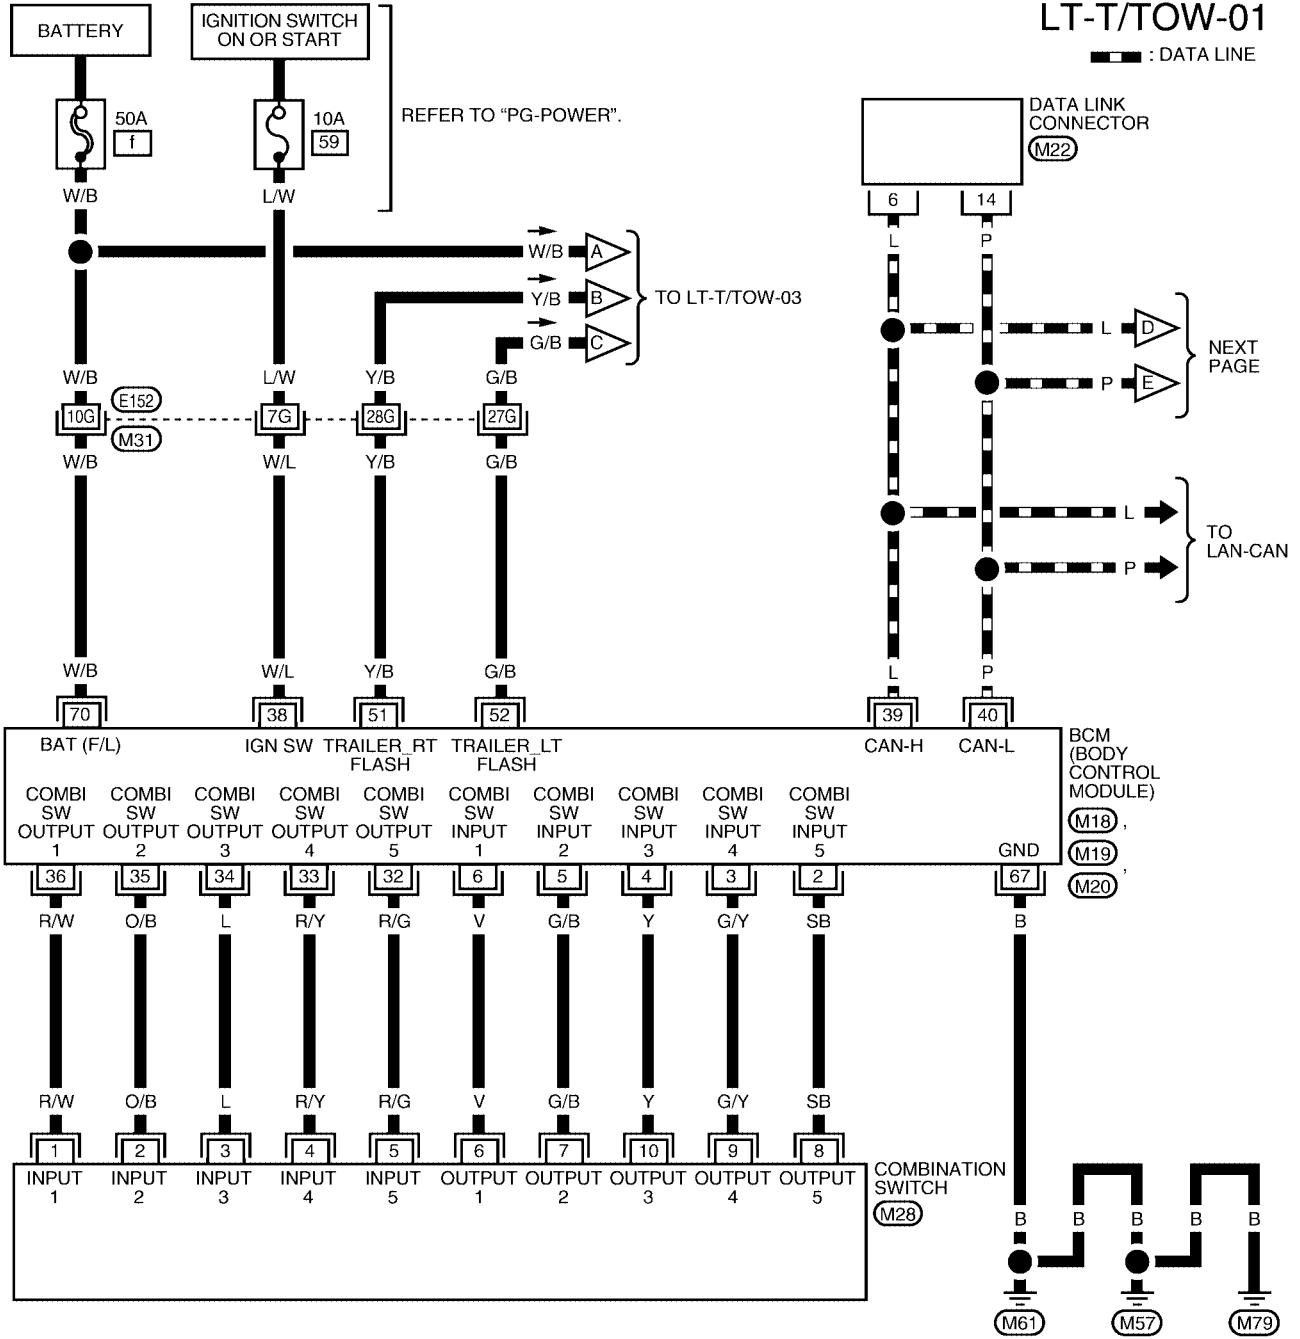



REFER TO THE FOLLOWING.  
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3665E

# TRAILER TOW

## LT-T/TOW-02

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

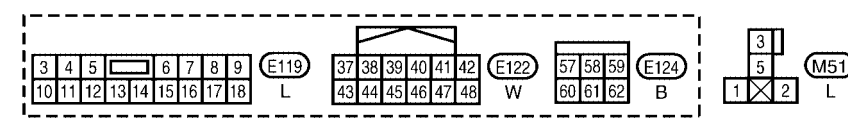
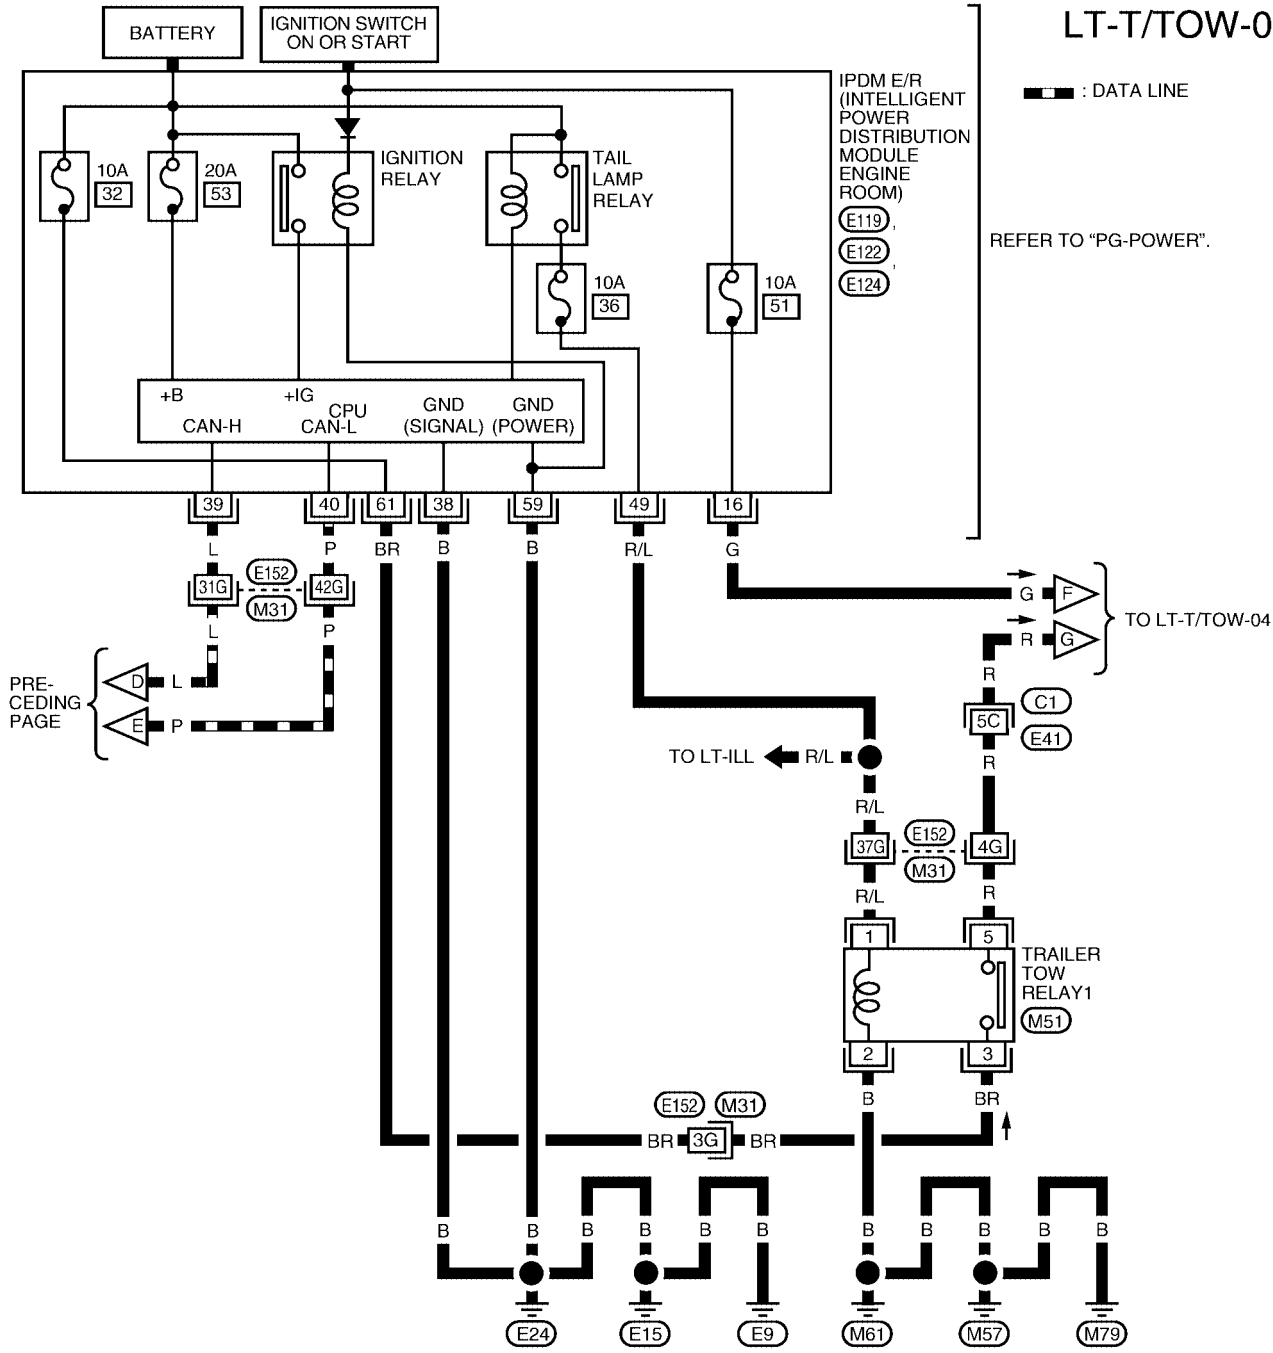


REFER TO THE FOLLOWING.  
**(M31)**, **(C1)** - SUPER MULTIPLE JUNCTION (SMJ)

WKWA366E

# TRAILER TOW

LT-T/TOW-03


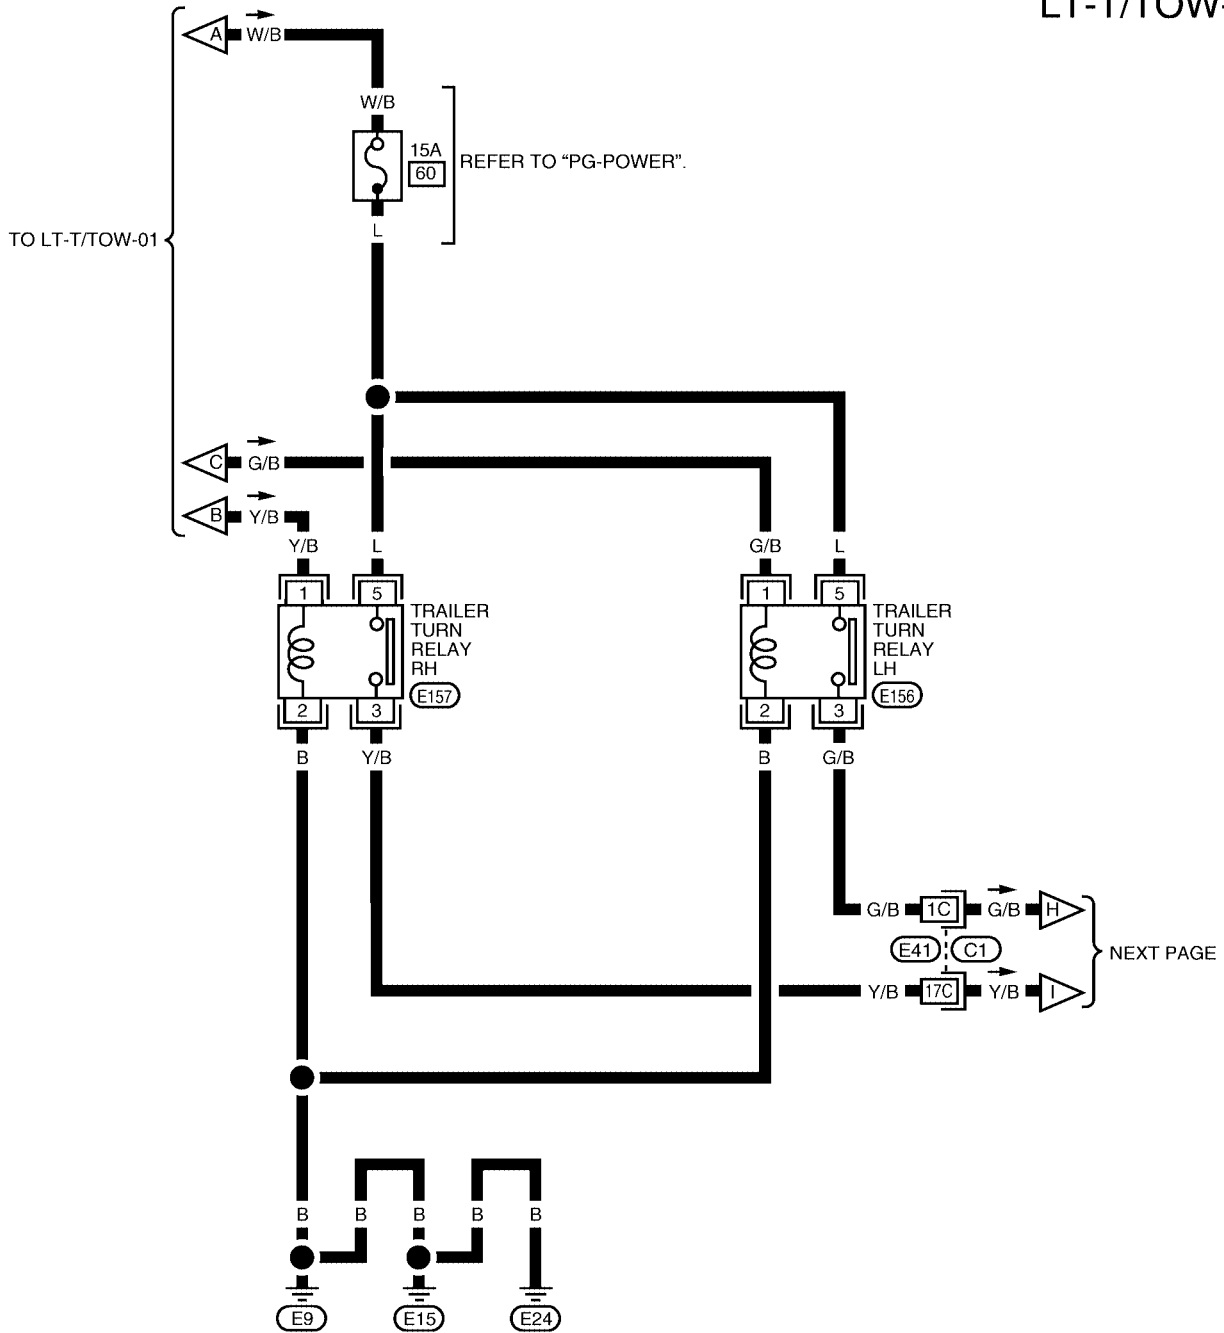


REFER TO THE FOLLOWING.  
 C1 - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3667E

# TRAILER TOW

LT-T/TOW-04

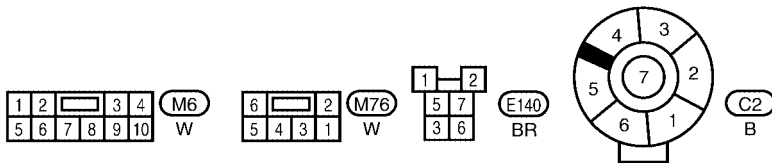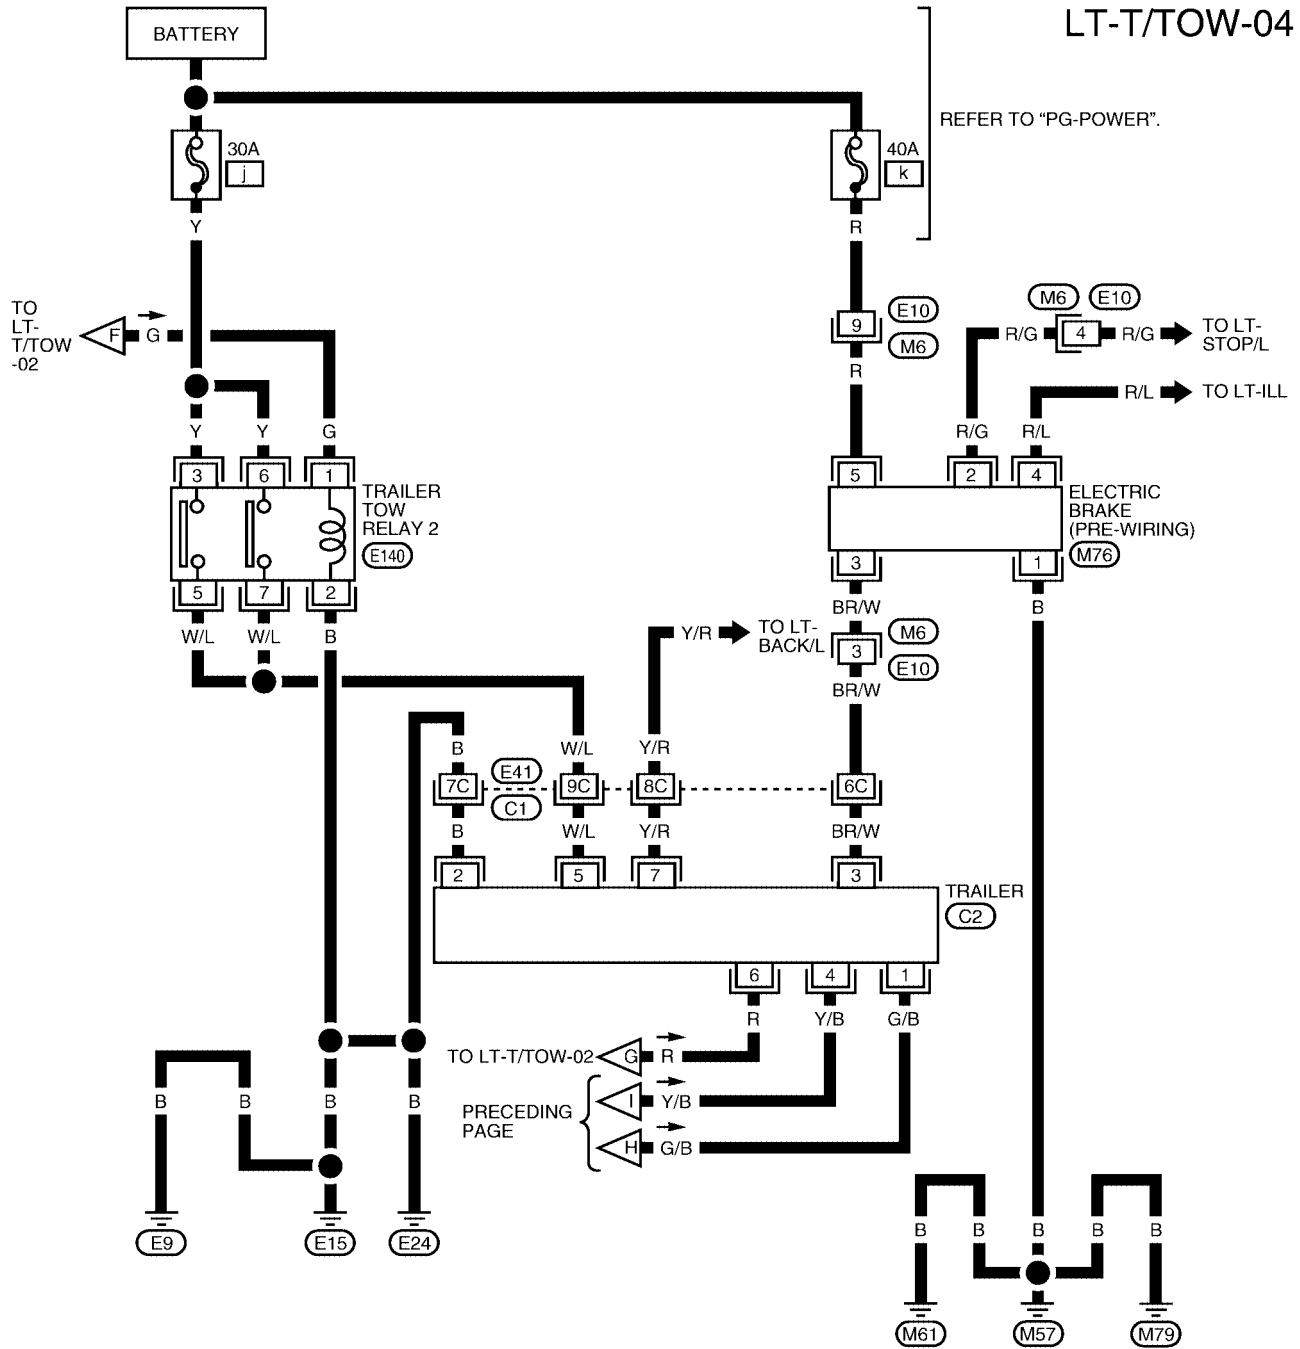

REFER TO THE FOLLOWING.  
**(C1)** - SUPER MULTIPLE JUNCTION (SMJ)

LT


# INTERIOR ROOM LAMP

PFP:26410

## INTERIOR ROOM LAMP

### Component Parts and Harness Connector Location

EKS00BB5

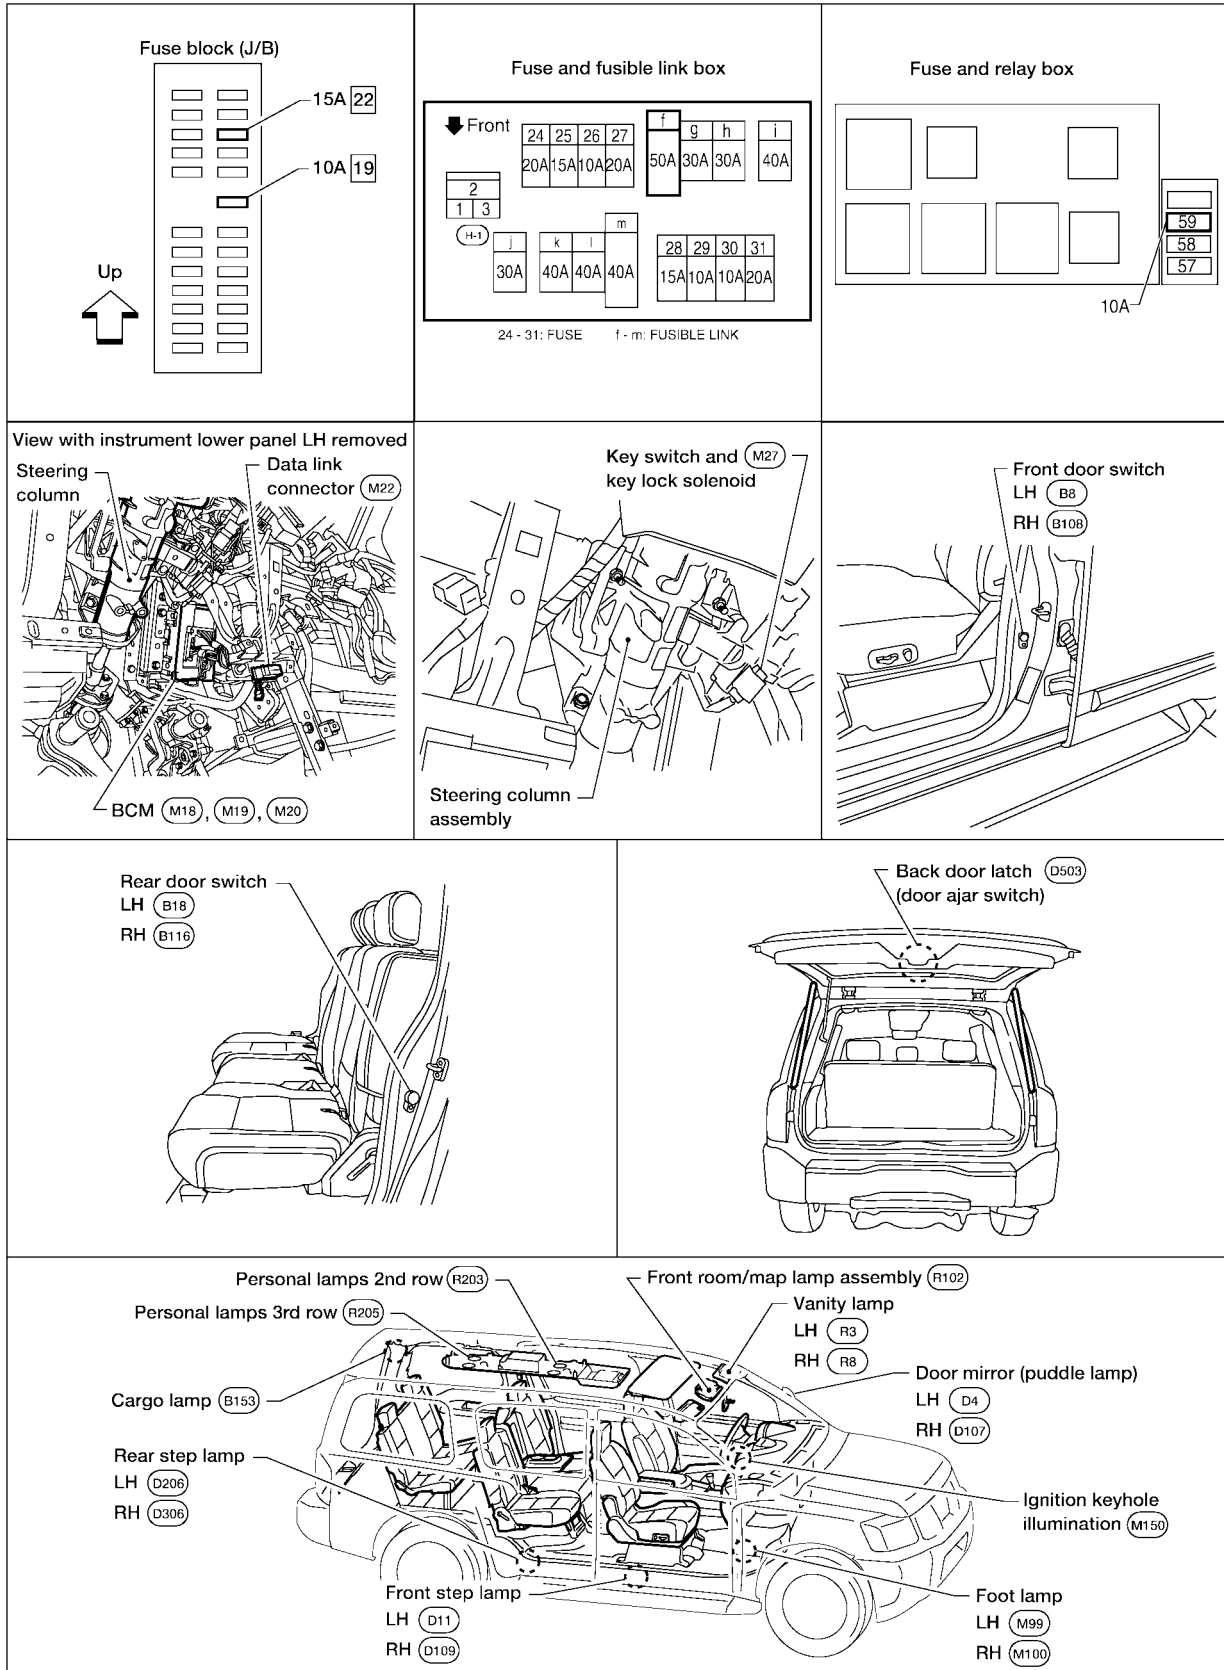

WKIA3555E

# INTERIOR ROOM LAMP

EKS00BB6

## System Description

When room lamp and personal lamp switch is in DOOR position, room lamp and personal lamp ON/OFF is controlled by timer according to signals from switches including key switch and key lock solenoid, front door switch LH, unlock signal from keyfob, door lock and unlock switch, front door lock assembly LH (key cylinder switch), ignition switch, and glass hatch ajar switch.

When room lamp and personal lamp turns ON, there is a gradual brightening over 1 second. When room lamp and personal lamp turns OFF, there is a gradual dimming over 1 second.

The room lamp and personal lamp timer is controlled by the BCM (body control module).

Room lamp and personal lamp timer control settings can be changed with CONSULT-II.

Ignition keyhole illumination turns ON when front door LH is opened (door switch ON) or key is removed from key cylinder. Illumination turns OFF when front door LH is closed (door switch OFF).

Step and foot lamps turn ON when front or rear doors are opened (door switch ON). Lamps turn OFF when front and rear doors are closed (all door switches OFF).

## POWER SUPPLY AND GROUND

Power is supplied at all times

- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to key switch and key lock solenoid terminal 3, and
- through 15A fuse [No. 22, located in the fuse block (J/B)]
- to BCM terminal 57, and
- through 50A fusible link (letter f , located in the fuse and fusible link box)
- to BCM terminal 70.

When the key is inserted in key switch and key lock solenoid, power is supplied

- through the key switch and key lock solenoid terminal 4
- to BCM terminal 37.

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse (No. 59, located in the fuse and relay box)
- to BCM terminal 38.

Ground is supplied

- to BCM terminal 67
- through grounds M57, M61 and M79.

When the front door LH is opened, ground is supplied

- to BCM terminal 47
- through case ground of front door switch LH.

When the front door RH is opened, ground is supplied

- to BCM terminal 12
- through case ground of front door switch RH.

When the rear door LH is opened, ground is supplied

- to BCM terminal 48
- through case ground of rear door switch LH.

When the rear door RH is opened, ground is supplied

- to BCM terminal 13
- through case ground of rear door switch RH.

When the liftgate is opened, ground is supplied

- to BCM terminal 43
- through back door latch (door ajar switch) terminal 7
- through back door latch (door ajar switch) terminal 8
- through grounds B7 and B19.

When the glass hatch is opened, ground is supplied

- to BCM terminal 42
- through case ground of glass hatch ajar switch.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M

LT

# INTERIOR ROOM LAMP

When the front door LH or front door RH door is unlocked by the door lock and unlock switch, BCM receives serial data

- to BCM terminal 22
- through main power window and door lock/unlock switch terminal 14 or power window and door lock/unlock switch RH terminal 16
- through main power window and door lock/unlock switch terminal 17 or power window and door lock/unlock switch RH terminal 11
- through grounds M57, M61 and M79.

When the front door LH is unlocked by the key, the BCM receives serial data

- to BCM terminal 22
- through main power window and door lock/unlock switch terminal 14
- through main power window and door lock/unlock switch terminal 6
- through front door lock assembly LH (key cylinder switch) terminal 6
- through front door lock assembly LH (key cylinder switch) terminal 5
- through grounds M57, M61 and M79.

When a signal, or combination of signals is received by BCM, ground is supplied

- through BCM terminal 63
- to door mirror LH and RH terminal 13
- to front room/map lamp assembly terminal 1
- through front room/map lamp assembly terminal 2
- to personal lamps terminal 1, and
- through BCM terminal 49
- to cargo lamp terminal 1.

With power and ground supplied, the lamps illuminate.

## SWITCH OPERATION

When any door switch is ON (door is opened), ground is supplied

- to front and rear step lamps LH and RH and foot lamp LH and RH terminal –
- through BCM terminal 62.

And power is supplied

- through BCM terminal 56
- to front and rear step lamps LH and RH terminal +
- to ignition keyhole illumination terminal +
- to door mirror LH and RH terminal 12
- to front room/map lamp assembly terminal 6
- to vanity lamp LH and RH terminal 1
- to personal lamp 2nd row and 3rd row terminal 3
- to cargo lamp terminal 2, and
- to foot lamp LH and RH terminal +.

When map lamp switch is ON, ground is supplied

- to front room/map lamp assembly terminal 5
- through grounds M57, M61 and M79.

When vanity lamp (LH and RH) is ON, ground is supplied

- to vanity lamp (LH and RH) terminal 2
- through grounds M57, M61 and M79.

When cargo lamp is ON, ground is supplied through cargo lamp case ground.

## ROOM LAMP TIMER OPERATION

When lamp switch is in DOOR position and all conditions below are met, BCM performs timer control (maximum 30 seconds) for interior room lamp and map lamp ON/OFF.

Power is supplied



# INTERIOR ROOM LAMP

- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to key switch and key lock solenoid terminal 3.

Key is removed from ignition key cylinder (key switch OFF), power will not be supplied to BCM terminal 37. Serial data is supplied

- to BCM terminal 22
- through main power window and door lock/unlock switch terminal 14.

At the time that front door LH is opened, BCM detects that front door LH is unlocked. It determines that interior room lamp and map lamp timer operation conditions are met, and turns the interior room lamps ON for 30 seconds.

Key is in ignition key cylinder (key switch ON), power is supplied

- through key switch and key lock solenoid terminal 4
- to BCM terminal 37.

When key is removed from key switch and key lock solenoid (key switch OFF), power supply to BCM terminal 37 is terminated. BCM detects that key has been removed, determines that interior room lamp and map lamp timer conditions are met, and turns the interior room lamps ON for 30 seconds.

When front door LH opens → closes, and the key is not inserted in the key switch and key lock solenoid (key switch OFF), BCM terminal 47 changes between 0V (door open) → 12V (door closed). The BCM determines that conditions for interior room lamp operation are met and turns the interior room lamp ON for 30 seconds. Timer control is canceled under the following conditions.

- Front door LH is locked [when locked by keyfob, main power window and door lock/unlock switch, or front door lock assembly LH (key cylinder switch)]
- Front door LH is opened (front door switch LH turns ON)
- Ignition switch ON.

## INTERIOR LAMP BATTERY SAVER CONTROL

If interior lamp is left "ON", it will not be turned off even when door is closed.

BCM turns off interior lamp automatically to save battery 30 minutes after ignition switch is turned off.

BCM controls interior lamps listed below:

- Vanity lamp
- Room/map lamp
- Cargo lamp
- Personal lamp
- Step lamps
- Puddle lamps
- Foot lamps
- Ignition keyhole illumination

After lamps turn OFF by the battery saver system, the lamps illuminate again when

- signal received from keyfob, or main power window and door lock/unlock switch or front door lock assembly LH (key cylinder switch) is locked or unlocked
- door is opened or closed
- key is removed from ignition key cylinder (key switch OFF) or inserted in ignition key cylinder (key switch ON).

Interior lamp battery saver control period can be changed by the function setting of CONSULT-II.

A

B

C

D

E

F

G

H

I

J

LT


L

M

# INTERIOR ROOM LAMP


## Schematic

EKS00BB7

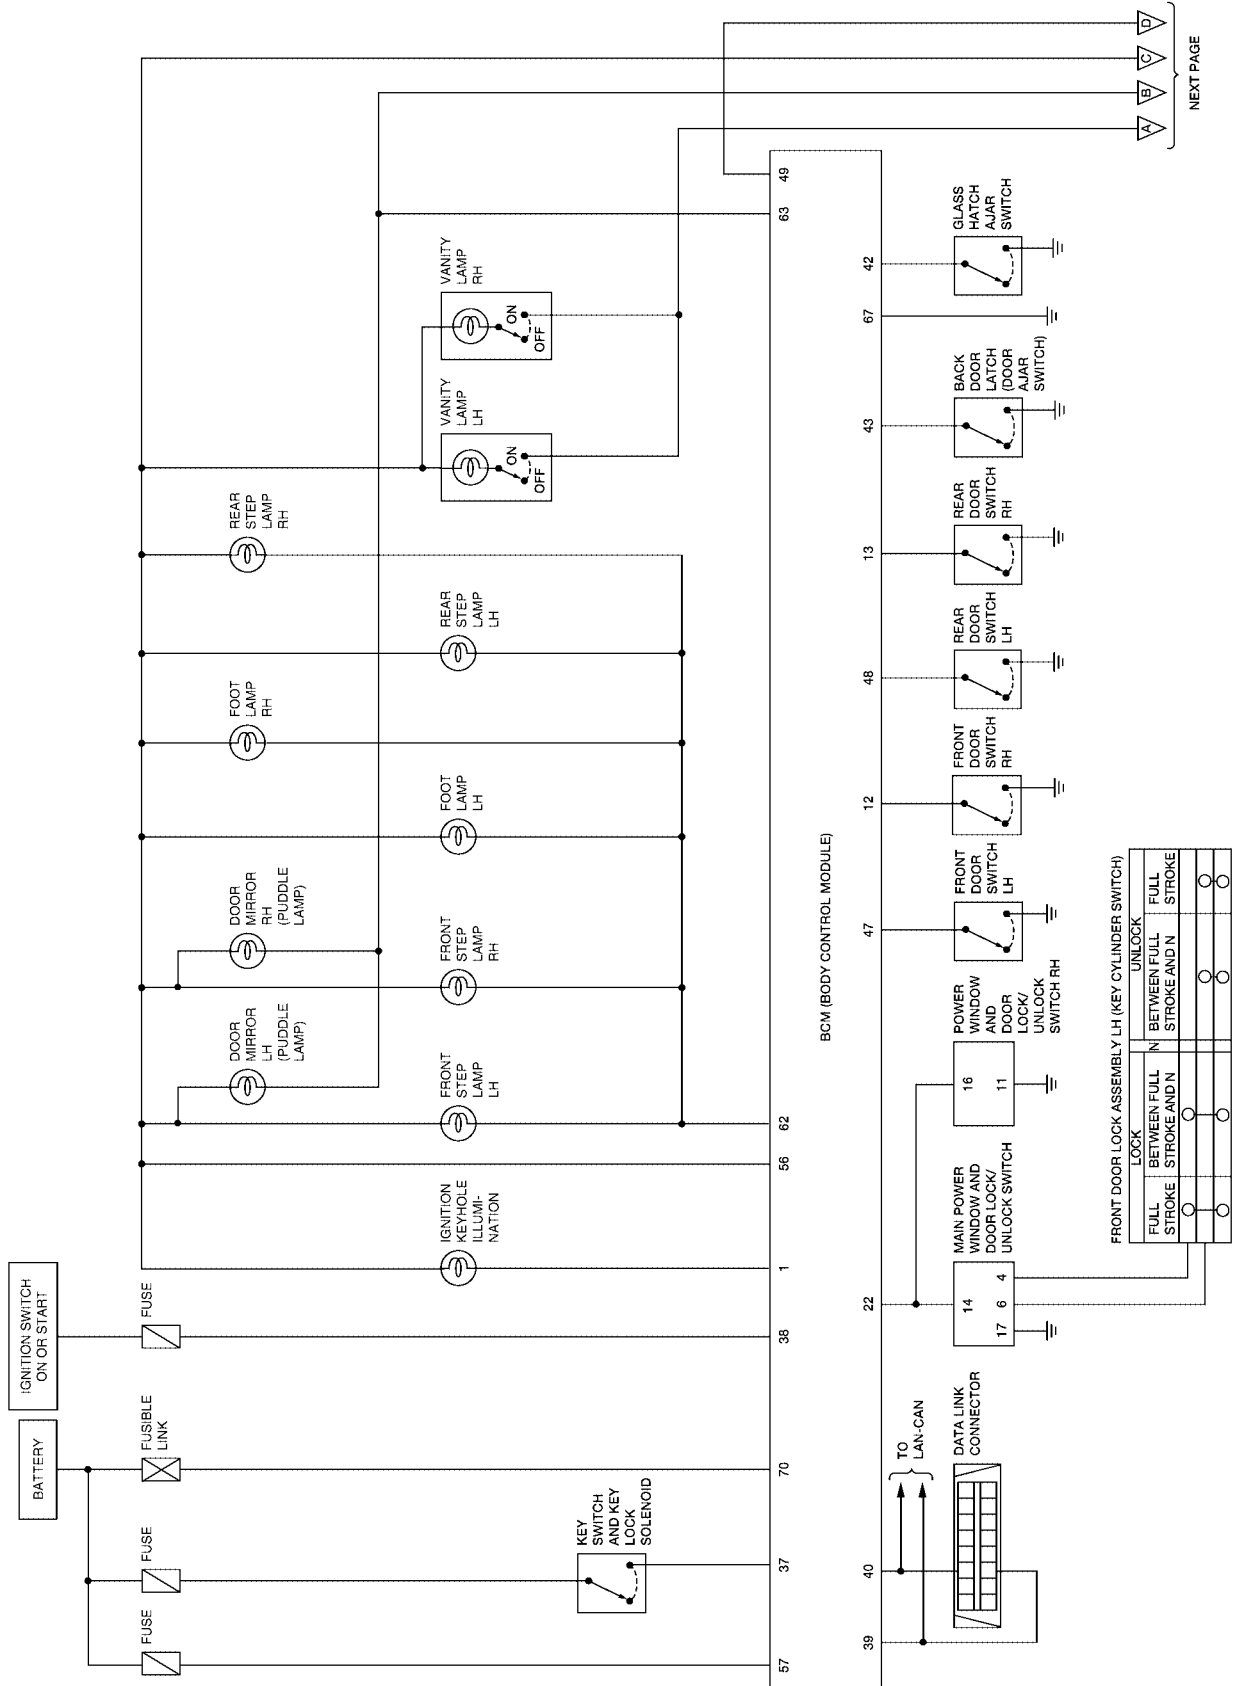

WKWA3669E

# INTERIOR ROOM LAMP

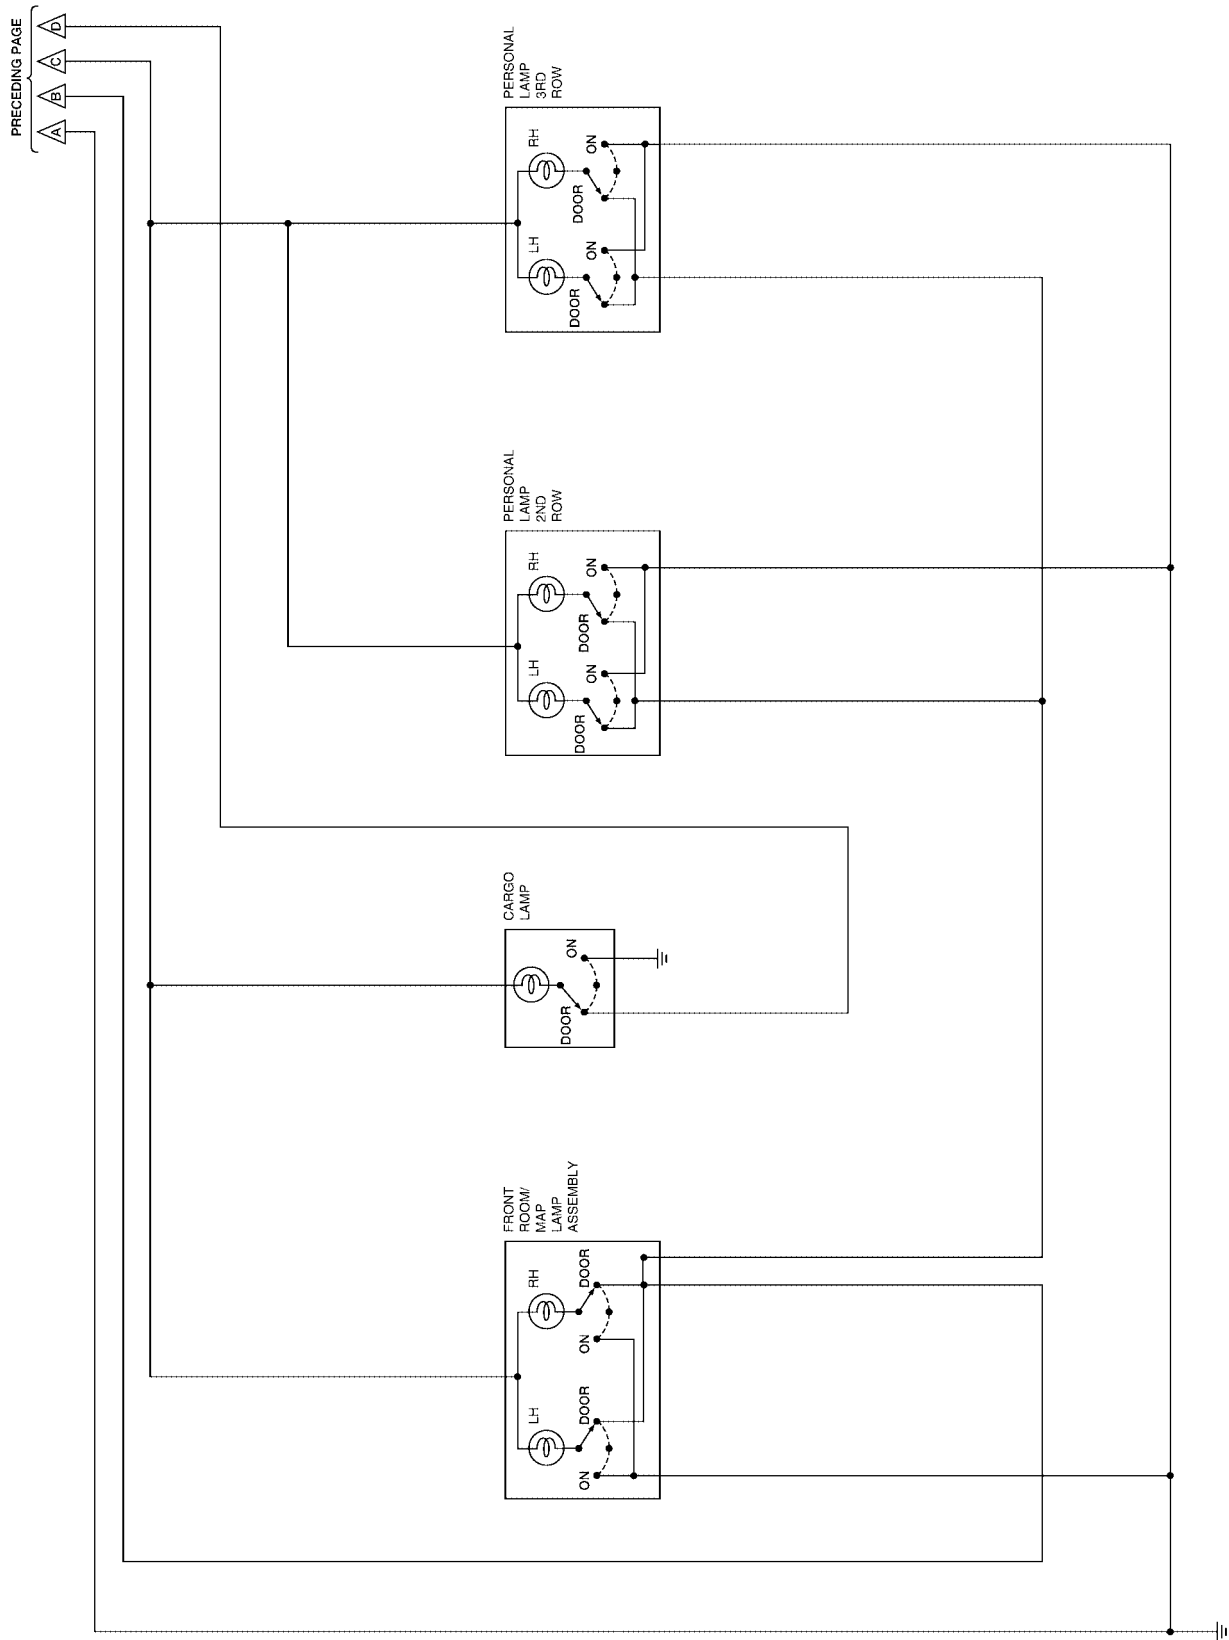

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

WKWA3670E


# INTERIOR ROOM LAMP

## Wiring Diagram — INT/L —

EKS00BB8

LT-INT/L-01

— : DATA LINE

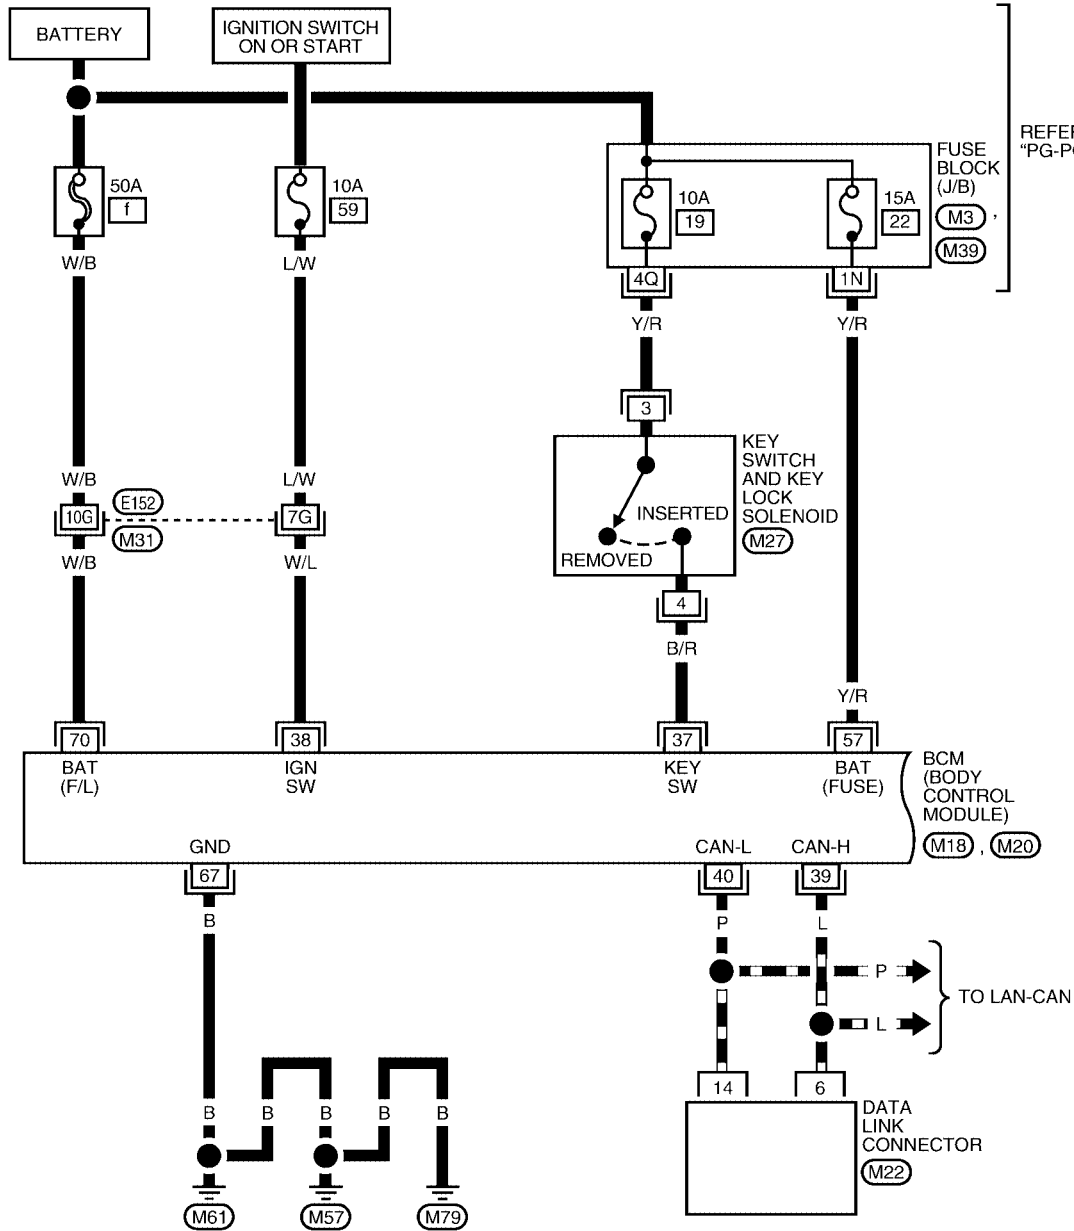


REFER TO "PG-POWER".

BCM (BODY CONTROL MODULE) (M18), (M20)

TO LAN-CAN

DATA LINK CONNECTOR (M22)


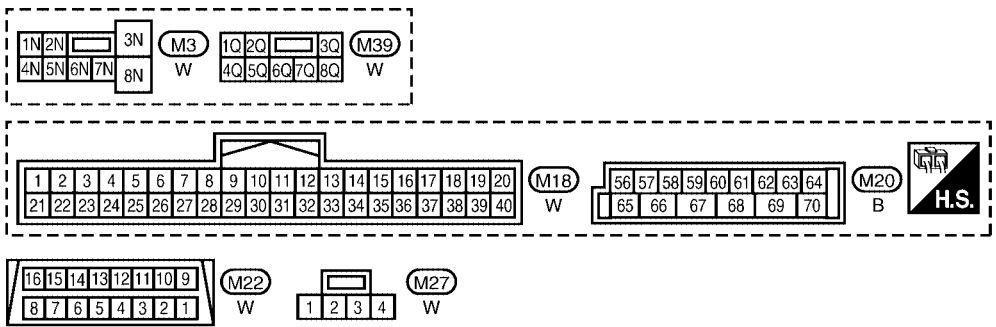


REFER TO THE FOLLOWING.  
(M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA2422E

# INTERIOR ROOM LAMP

LT-INT/L-02

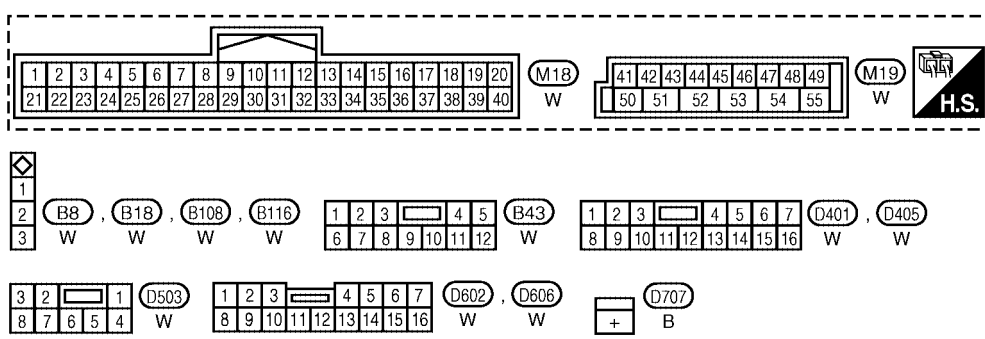
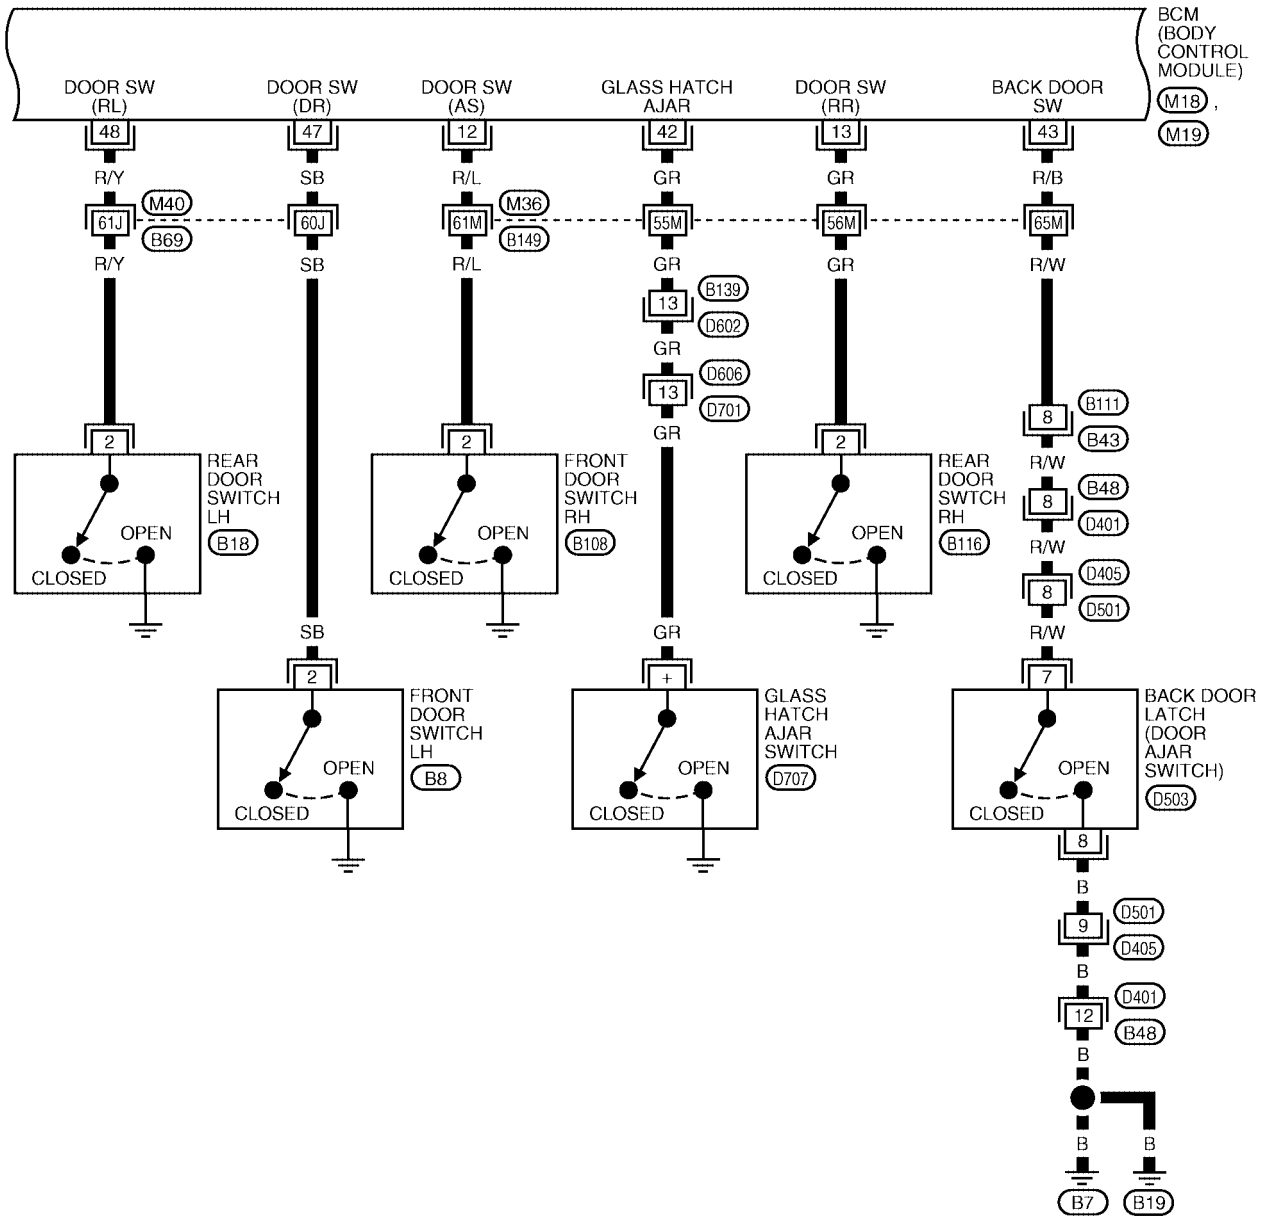


REFER TO THE FOLLOWING.  
 (M36), (M40) - SUPER  
 MULTIPLE JUNCTION (SMJ)

WKWA1214E

# INTERIOR ROOM LAMP





LT-INT/L-03

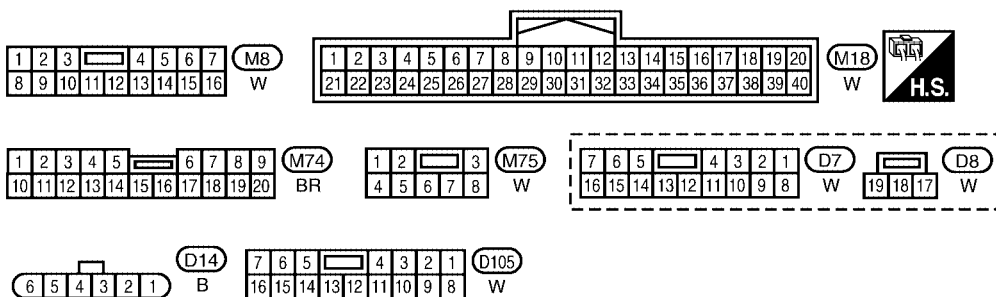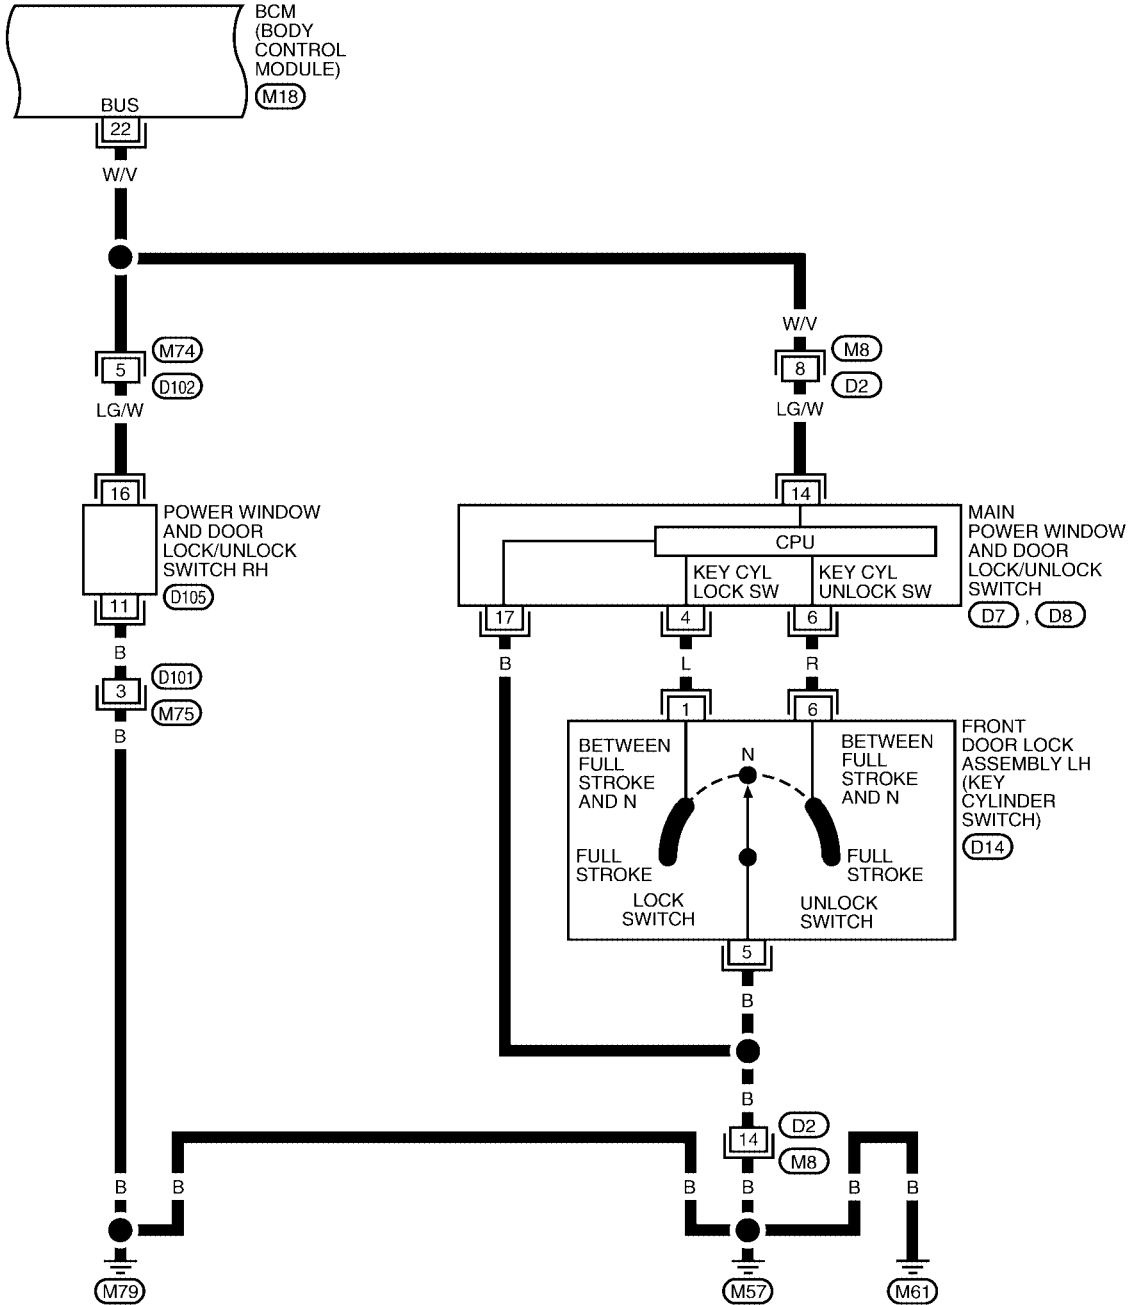

WKWA3671E

# INTERIOR ROOM LAMP



LT-INT/L-04

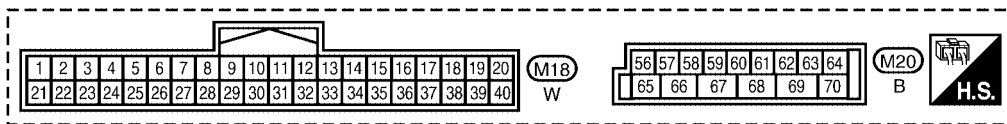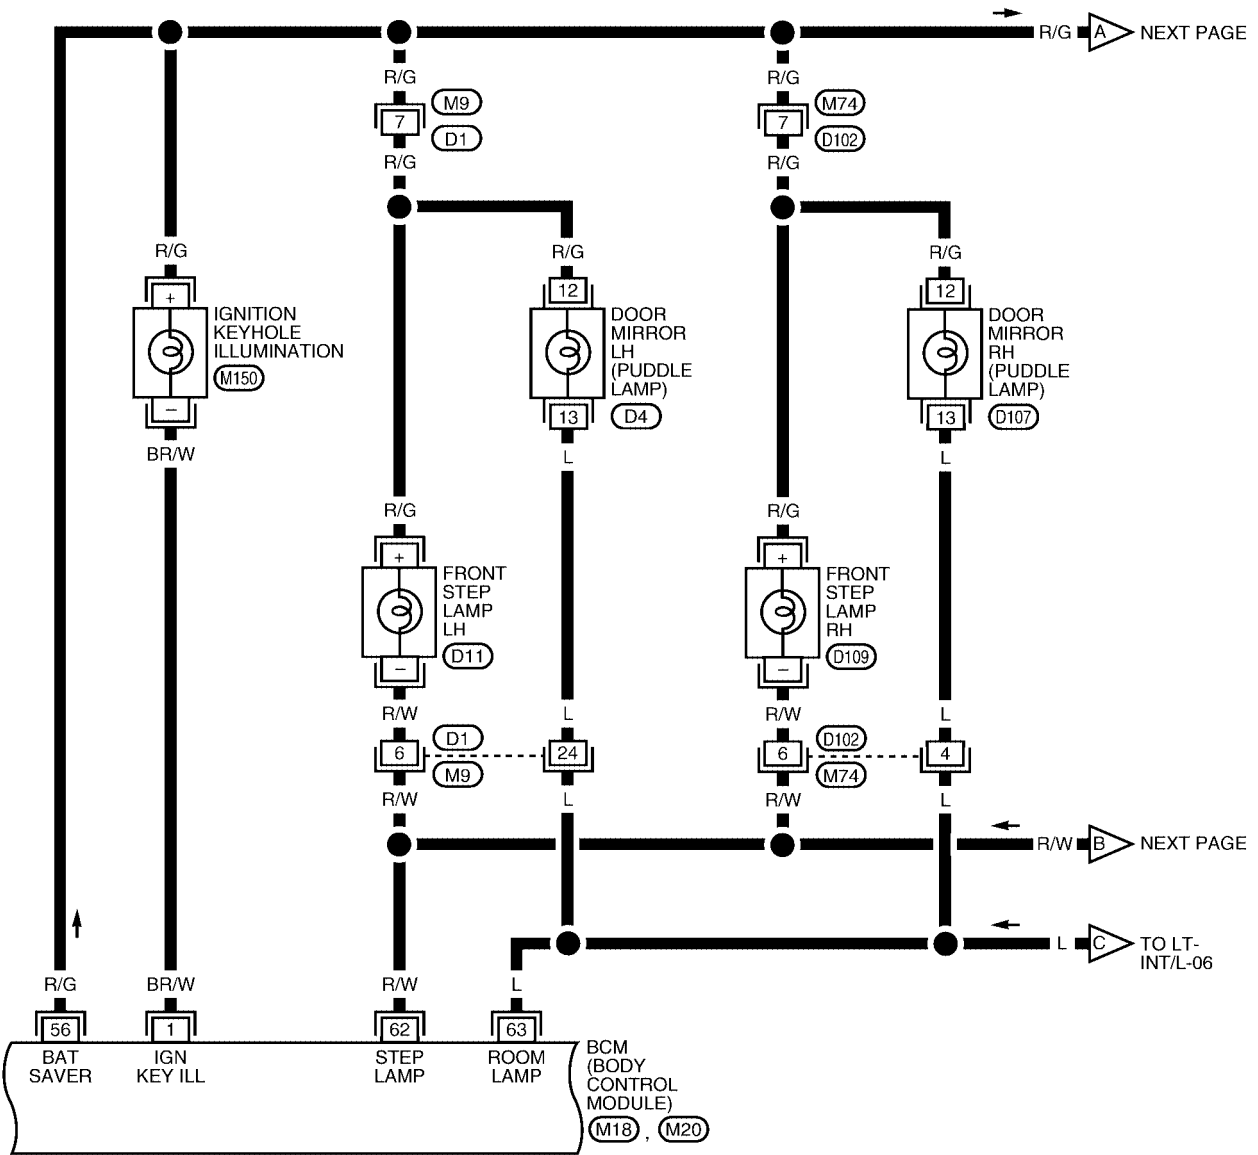

WKWA2496E

# INTERIOR ROOM LAMP

LT-INT/L-05

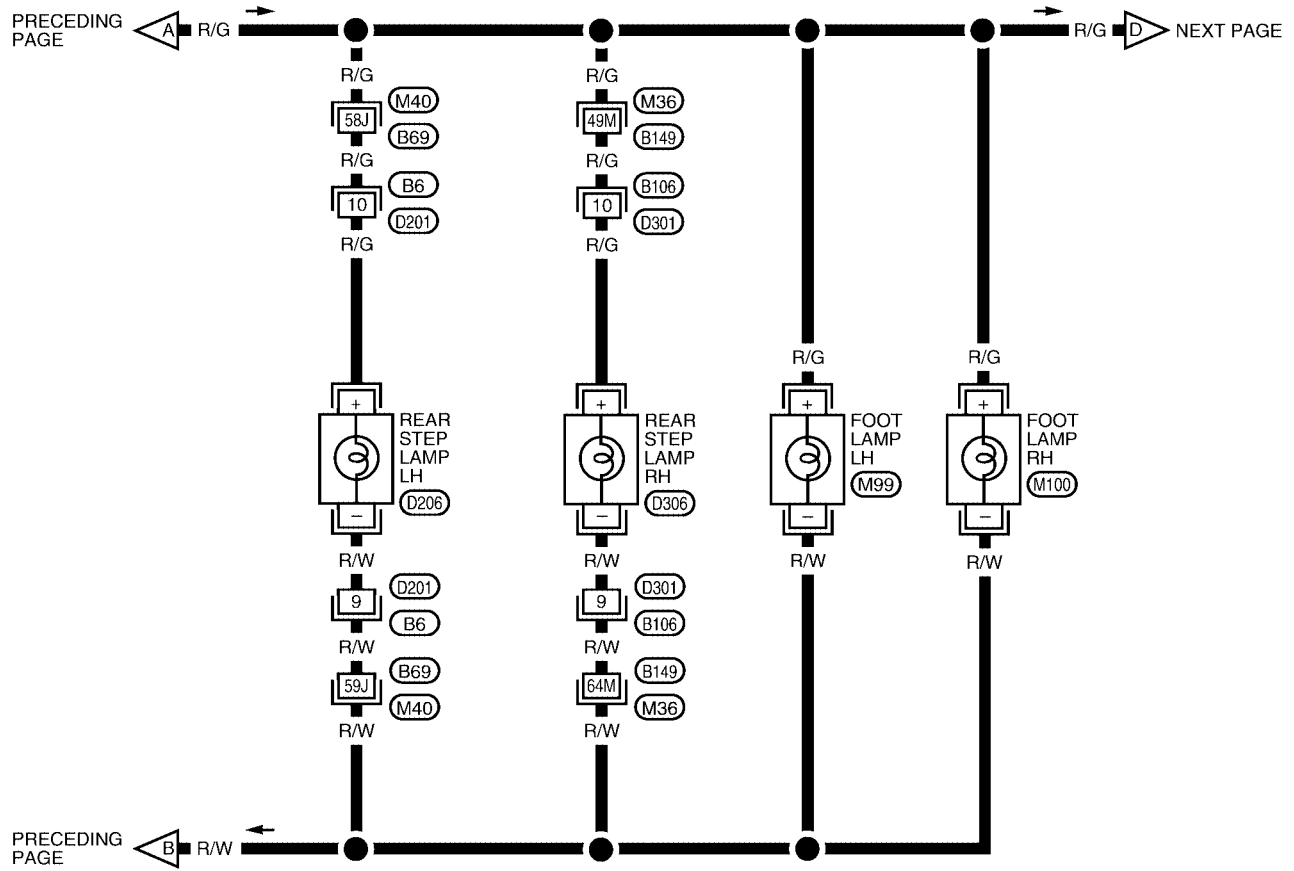



REFER TO THE FOLLOWING.  
 (M36), (M40) - SUPER  
 MULTIPLE JUNCTION (SMJ)

WKWA2497E



# INTERIOR ROOM LAMP


LT-INT/L-06

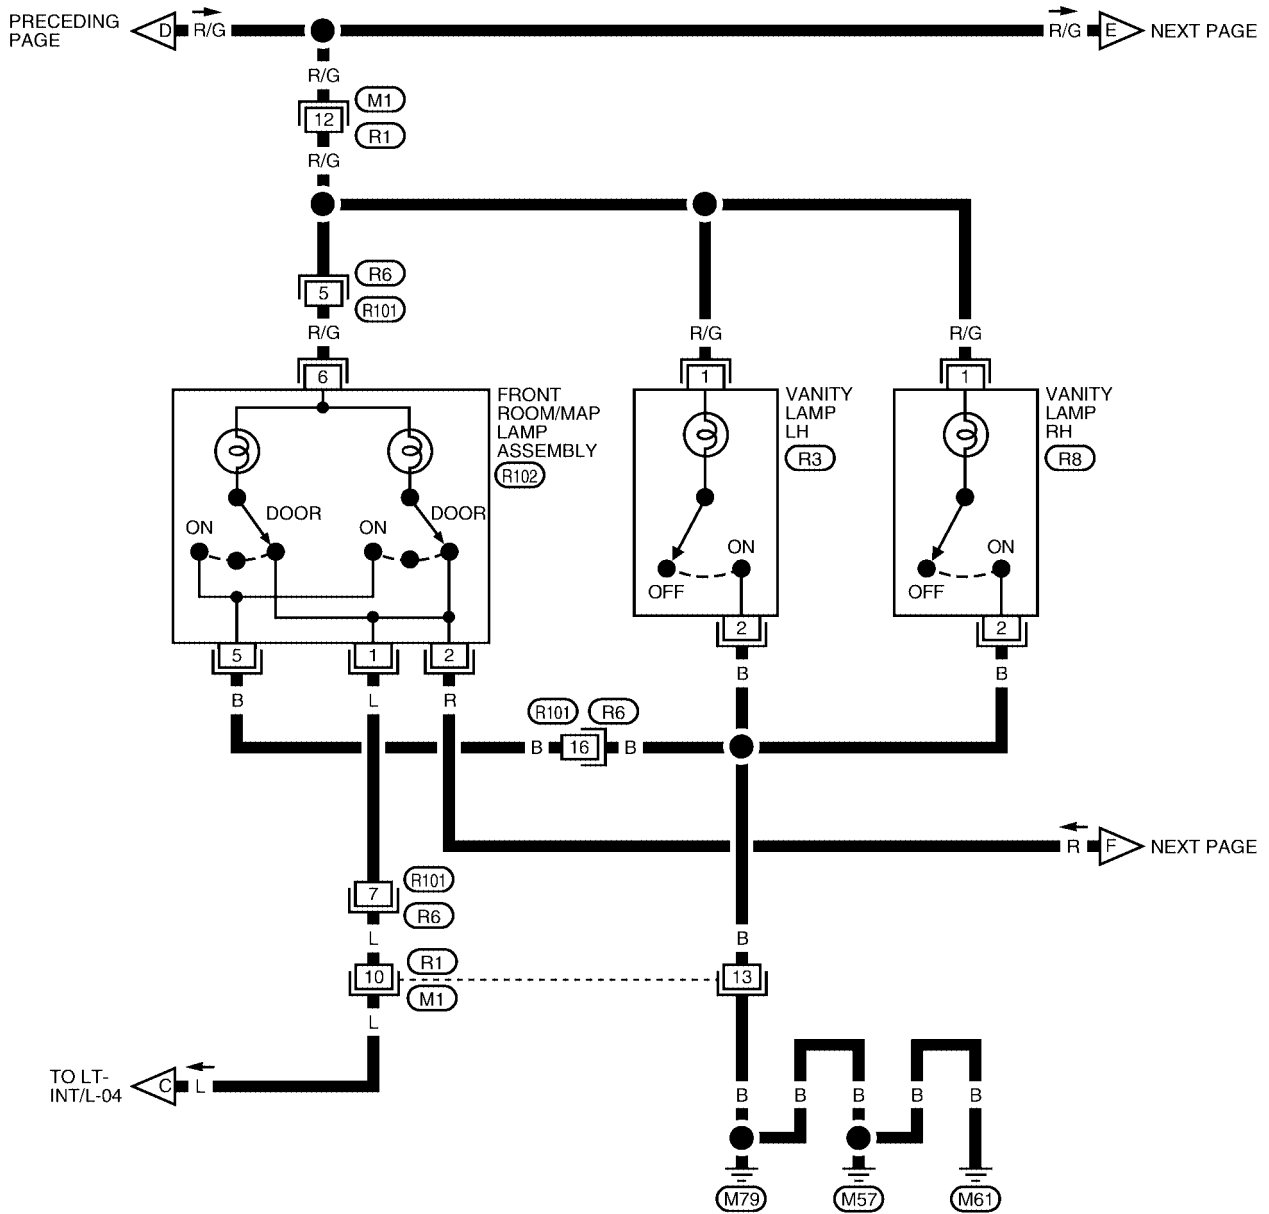







WKWA3672E

# INTERIOR ROOM LAMP

LT-INT/L-07

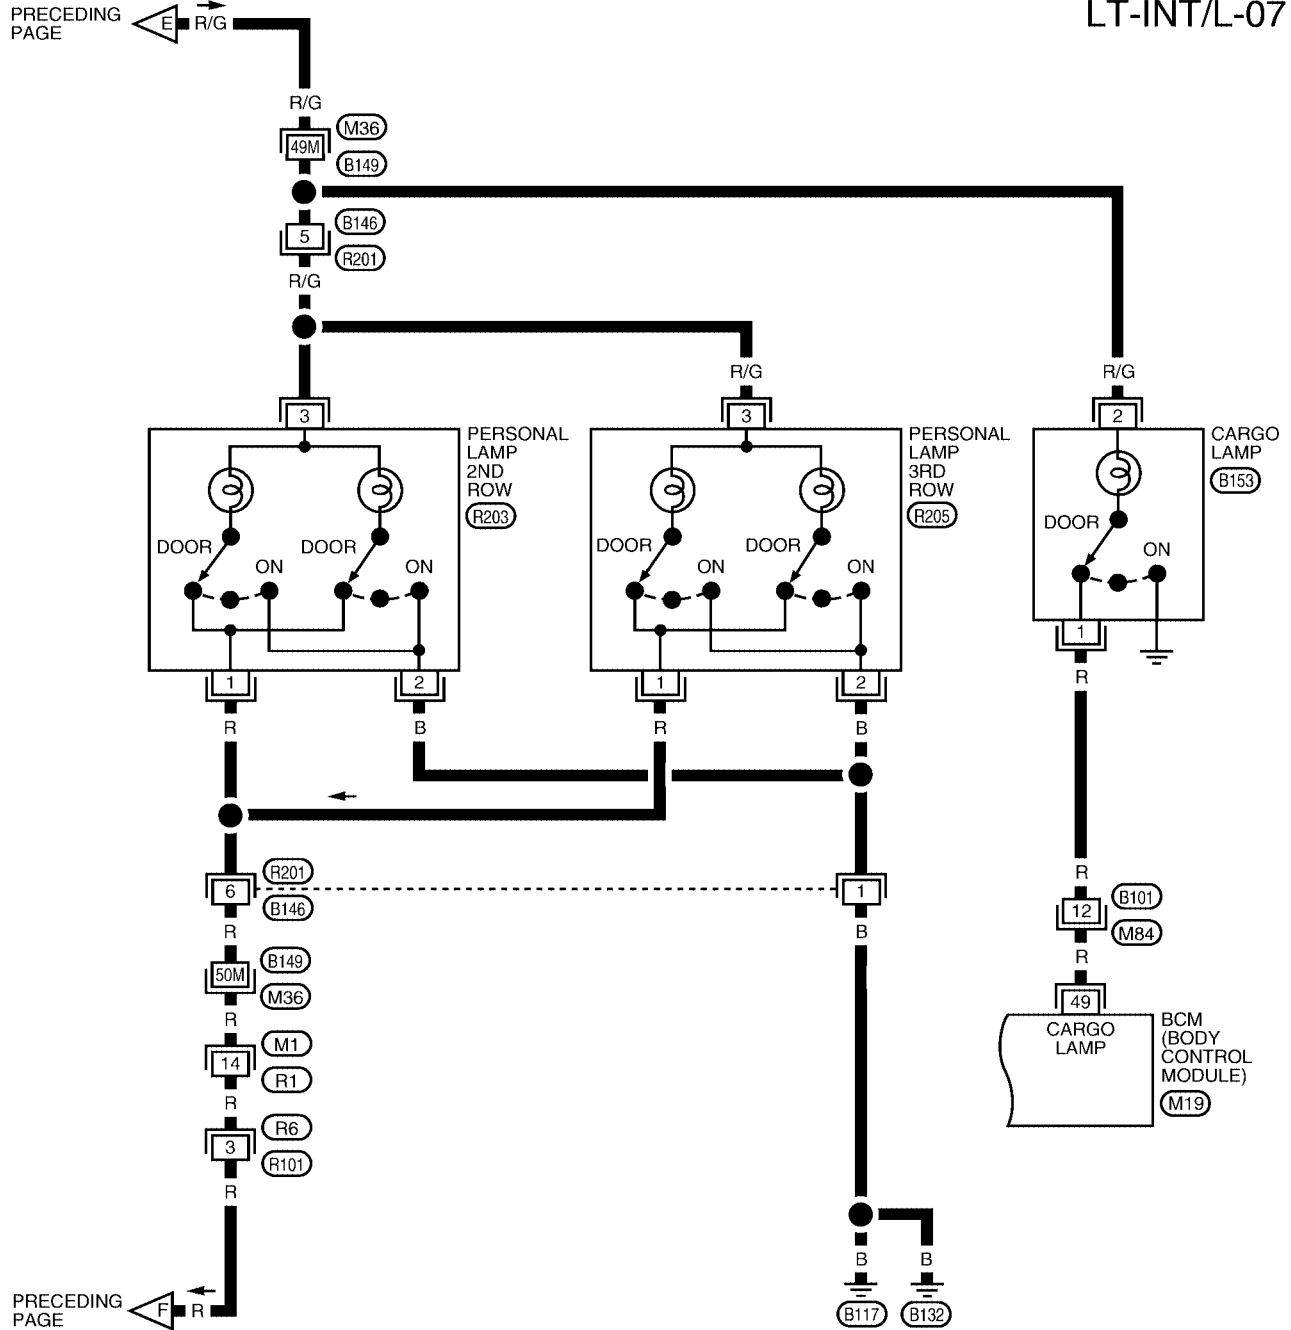

PRECEDING PAGE



REFER TO THE FOLLOWING.  
 (M36) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3673E

# INTERIOR ROOM LAMP

## Terminals and Reference Values for BCM

EKS00BB9

Terminal No.	Wire color	Signal name	Measuring condition			Reference value (Approx.)	
			Ignition switch	Operation or condition			
1	BR/W	Ignition keyhole illumination signal	OFF	Door is locked. (SW OFF)		Battery voltage	
				Door is unlocked. (SW ON)		0V	
12	R/L	Front door switch RH signal	OFF	Front door switch RH	ON (open)	0V	
					OFF (closed)	Battery voltage	
13	GR	Rear door switch RH signal	OFF	Rear door switch RH	ON (open)	0V	
					OFF (closed)	Battery voltage	
22	W/V	Bus	—	—			
37	B/R	Key-in switch detection signal	OFF	Vehicle key is removed.		0V	
				Vehicle key is inserted.		Battery voltage	
38	W/L	Ignition power supply	ON	—		Battery voltage	
39	L	CAN-H	—	—		—	
40	P	CAN-L	—	—		—	
42	GR	Glass hatch ajar switch signal	OFF	Glass hatch ajar switch	ON (open)	0V	
					OFF (closed)	Battery voltage	
43	R/B	Back door latch (door ajar switch) signal	OFF	Back door latch (door ajar switch)	ON (open)	0V	
					OFF (closed)	Battery voltage	
47	SB	Front door switch LH signal	OFF	Front door switch LH	ON (open)	0V	
					OFF (closed)	Battery voltage	
48	R/Y	Rear door switch LH signal	OFF	Rear door switch LH	ON (open)	0V	
					OFF (closed)	Battery voltage	
49	R	Luggage lamp output	OFF	Any door is open (ON)		0V	
				All doors are closed (OFF)		Battery voltage	
56	R/G	Battery saver output signal	OFF	30 minutes after ignition switch is turned to OFF		0V	
			ON	—		Battery voltage	
57	Y/R	Battery power supply	OFF	—		Battery voltage	
62	R/W	Step lamp signal	OFF	Any door is open (ON)		0V	
				All doors are closed (OFF)		Battery voltage	
63	L	Interior room/map lamp signal	OFF	Each interior lamp switch in DOOR position	Any door switch	ON (open)	0V
						OFF (closed)	Battery voltage
67	B	Ground	ON	—		0V	
70	W/B	Battery power supply	OFF	—		Battery voltage	

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

LT

# INTERIOR ROOM LAMP

EKS00BBA

## How to Proceed With Trouble Diagnosis

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-135, "System Description"](#).
3. Carry out the Preliminary Check. Refer to [LT-148, "Preliminary Check"](#).
4. Check symptom and repair or replace the cause of malfunction.
5. Does the interior room lamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

## Preliminary Check

EKS00BBB

### INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT

#### 1. CHECK FUSES OR FUSIBLE LINK

Check for blown BCM fuses or fusible link.

Unit	Power source	Fuse and fusible link No.
BCM	Battery	f
		22
	Ignition switch ON or START position	59

Refer to [LT-140, "Wiring Diagram — INT/L —"](#).

OK or NG

OK >> GO TO 2.

NG >> If fuse or fusible link is blown, be sure to eliminate cause of malfunction before installing new fuse or fusible link. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

#### 2. CHECK POWER SUPPLY CIRCUIT


1. Disconnect BCM connectors.
2. Check voltage between BCM connector and ground.

Terminals		Ignition switch position	Ignition switch position	
(+)			OFF	ON
Connector	Terminal	(-)	OFF	ON
M20	57	Ground	Battery voltage	Battery voltage
	70		Battery voltage	Battery voltage
M18	38		0V	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between BCM and fuse or fusible link.

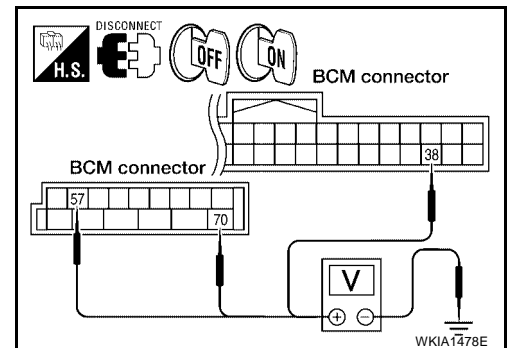

#### 3. CHECK GROUND CIRCUIT


Check continuity between BCM and ground.

Terminals			Continuity
Connector	Terminal		
M20	67	Ground	Yes

OK or NG

OK >> Inspection End.

NG >> Check harness ground circuit.

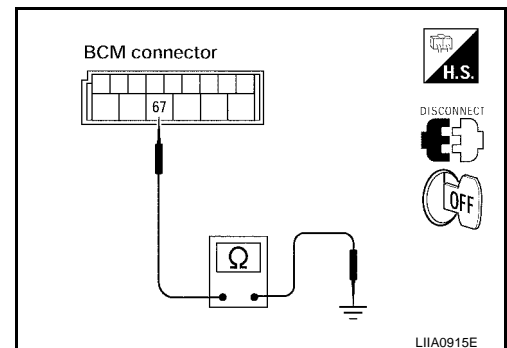

# INTERIOR ROOM LAMP

## CONSULT-II Function (BCM)

EKS00BBC

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

### CONSULT-II OPERATION


**CAUTION:**

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

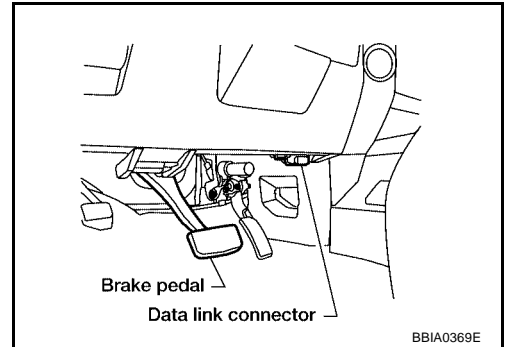

2. Touch "START (NISSAN BASED VHCL)".

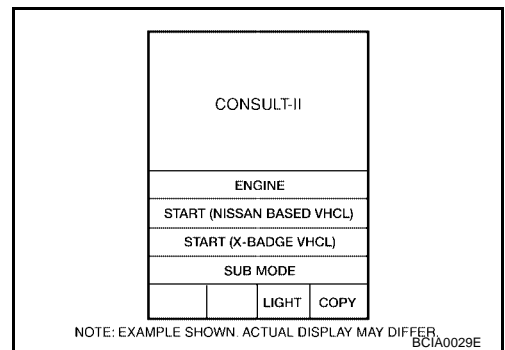


3. Touch "BCM" on "SELECT SYSTEM" screen.  
If "BCM" is not indicated, go to [GI-40, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

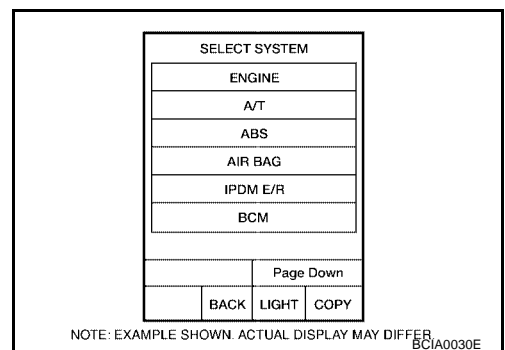

# INTERIOR ROOM LAMP

4. Touch "INT LAMP" on "SELECT TEST ITEM" screen.

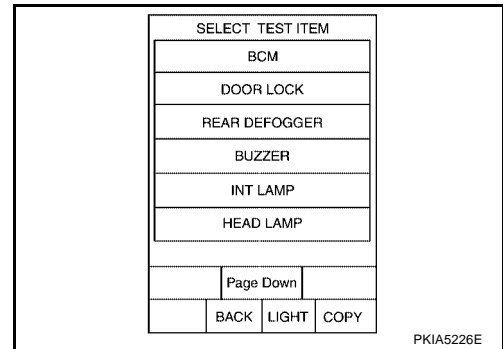

## WORK SUPPORT

### Operation Procedure

1. Touch "INT LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch "SET I/L D-UNLCK INTCON" on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "CHANGE SETT".
6. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
7. Touch "END".

### Display Item List

Item	Description	CONSULT-II
SET I/L D-UNLCK INTCON	The 30 seconds operating function of the interior room lamps and the ignition keyhole illumination can be selected when front door LH is released (unlocked).	ON/OFF
ROOM LAMP ON TIME SET	The time in order to escalate illumination can be adjusted when the interior room lamps and the ignition keyhole illumination is turned on.	MODE 1 - 7
ROOM LAMP OFF TIME SET	The time in order to diminish illumination can be adjusted when the interior room lamps and the ignition keyhole illumination is turned off.	MODE 1 - 7

Reference between "MODE" and "TIME" for "TURN ON/OFF".

MODE	1	2	3	4	5	6	7
Time (sec.)	0.5	1	2	3	4	5	0

## DATA MONITOR

### Operation Procedure

1. Touch "INT LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on "SELECT MONITOR ITEM" screen.

All signals	Monitors all the signals.
Selection from menu	Selects and monitors the individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

# INTERIOR ROOM LAMP

## Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
KEY ON SW "ON/OFF"	Displays "Key inserted (ON)/key removed (OFF)" status judged from the key switch signal.
DOOR SW-DR "ON/OFF"	Displays status of the front door LH as judged from the front door switch LH signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-AS "ON/OFF"	Displays "Door open (ON)/Door closed (OFF)" status, determined from front door switch RH signal.
DOOR SW-RR "ON/OFF"	Displays "Door open (ON)/Door closed (OFF)" status, determined from rear door switch RH signal.
DOOR SW-RL "ON/OFF"	Displays "Door open (ON)/Door closed (OFF)" status, determined from rear door switch LH signal.
BACK DOOR SW "ON/OFF"	Displays "Door open (ON)/Door closed (OFF)" status, determined from back door latch (door ajar switch) signal.
KEY CYL LK-SW "ON/OFF"	Displays "Door locked (ON)" status, determined from front door lock assembly LH (key cylinder switch) in front door LH.
KEY CYL UN-SW "ON/OFF"	Displays "Door unlocked (OFF)" status, determined from front door lock assembly LH (key cylinder switch) in front door LH.
CDL LOCK SW "ON/OFF"	Displays "Door locked (ON)/Door unlocked (OFF)" status, determined from locking detection switch in front door LH.
CDL UNLOCK SW "ON/OFF"	Displays "Door unlocked (OFF)" status, determined from locking detection switch in front door RH.
KEYLESS LOCK "ON/OFF"	Displays "Locked (ON)/Other (OFF)" status, determined from lock signal.
KEYLESS UNLOCK "ON/OFF"	Displays "Unlocked (ON)/Other (OFF)" status, determined from unlock signal.

## ACTIVE TEST

### Operation Procedure

1. Touch "INT LAMP" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" or "OFF" deactivates the operation.

## Display Item List

Test item	Description
INT LAMP	Interior room lamp can be operated by any ON-OFF operations.
IGN ILLUM	Ignition keyhole illumination can be operated by ON-OFF operation.

## Room/Map Lamp Control Does Not Operate

EKS00BBD

### 1. CHECK EACH SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-151, "Display Item List"](#) for switches and their functions.

#### OK or NG

- OK >> GO TO 2.  
 NG >> Inspect malfunctioning switch system.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
KEY ON SW	ON
DOOR SW-DR	ON
DOOR SW-AS	ON
DOOR SW-RR	OFF
DOOR SW-RL	OFF
BACK DOOR SW	OFF
KEY CYL LK-SW	OFF
KEY CYL UN-SW	OFF

SKIA5830E

# INTERIOR ROOM LAMP


## 2. ACTIVE TEST

1. Select "BCM" on CONSULT-II. Select "INT LAMP" active test.
2. When switch is in DOOR position, use active test to make sure interior room lamp operates.

**Room lamps should turn ON.**

OK or NG

- OK >> Replace BCM. Refer to [BCS-20, "BCM"](#) .  
 NG >> GO TO 3.

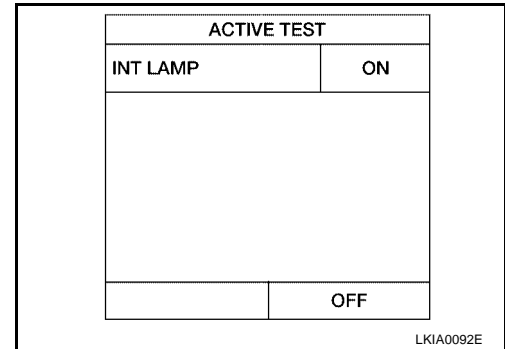


## 3. CHECK INTERIOR ROOM LAMP INPUT

1. Turn ignition switch OFF.
2. Check voltage between front room/map lamp assembly harness connector R102 terminal 1 and ground.

**1 - Ground : Battery voltage should exist.**

OK or NG

- OK >> GO TO 4.  
 NG >> GO TO 5.

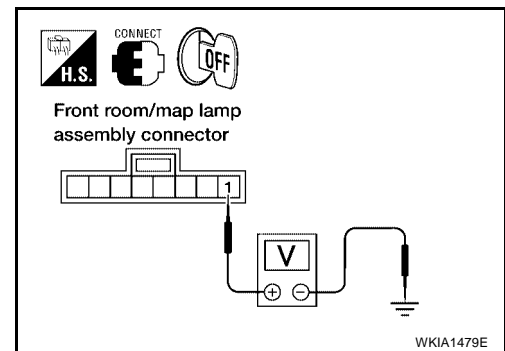


## 4. CHECK INTERIOR ROOM LAMP CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector M20 terminal 63 and front room/map lamp assembly harness connector R102 terminal 1.

**63 - 1 : Continuity should exist.**

OK or NG

- OK >> Replace BCM if interior lamp does not work after setting the connector again. Refer to [BCS-20, "BCM"](#) .  
 NG >> Repair harness or connector.

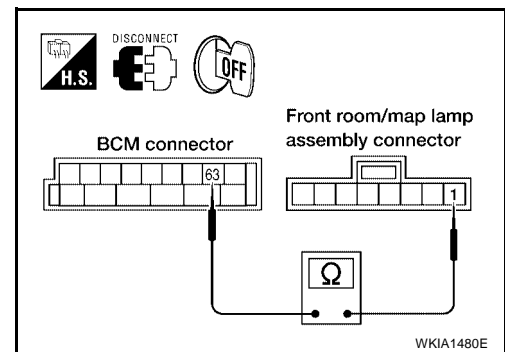


## 5. CHECK INTERIOR ROOM LAMP CIRCUIT

1. Disconnect BCM connector and interior room lamp connector.
2. Check continuity between BCM harness connector M20 terminal 56 and front room/map lamp assembly harness connector R102 terminal 6.

**56 - 6 : Continuity should exist.**

OK or NG

- OK >> Replace BCM if interior lamp does not work after setting the connector again. Refer to [BCS-20, "BCM"](#) .  
 NG >> Repair harness or connector between BCM and room/map lamp.

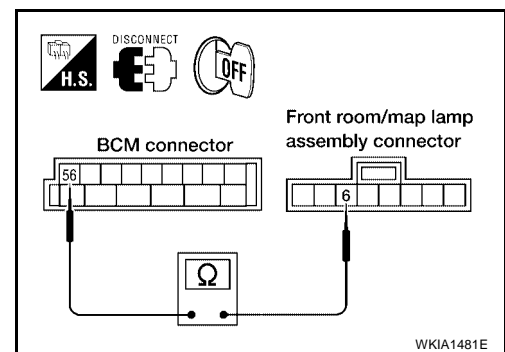



# INTERIOR ROOM LAMP

## Personal Lamp Control Does Not Operate (Room/Map Lamps Operate)

EKS00BBE

### 1. CHECK EACH DOOR SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-136, "SWITCH OPERATION"](#) for switches and their function.

OK or NG

- OK >> GO TO 2.
- NG >> Inspect malfunctioning door switch.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
KEY ON SW	ON
DOOR SW-DR	ON
DOOR SW-AS	ON
DOOR SW-RR	OFF
DOOR SW-RL	OFF
BACK DOOR SW	OFF
KEY CYL LK-SW	OFF
KEY CYL UN-SW	OFF

SKIA5930E


### 2. CHECK PERSONAL LAMP OUTPUT

1. Turn ignition switch OFF.
2. Confirm lamp switch is in the DOOR position.
3. Disconnect personal lamp connector.
4. Open any door.
5. Check voltage between personal lamp harness connector terminal 3 and ground.

**3 - Ground : Battery voltage should exist.**

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector.

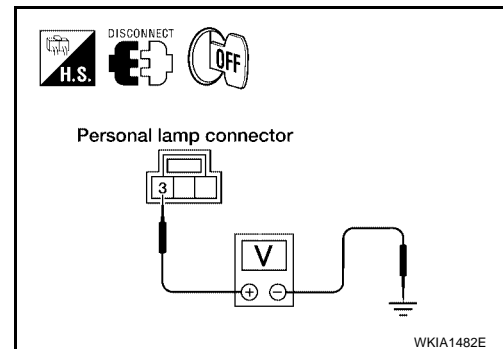


### 3. CHECK PERSONAL LAMP CONTROL CIRCUIT

1. Disconnect front room/map lamp assembly connector.
2. Check continuity between front room/map lamp assembly harness connector R102 terminal 2 and personal lamp harness connector terminal 1.

**2 - 1 : Continuity should exist.**

OK or NG

- OK >> Replace personal lamp.
- NG >> Repair harness or connector.

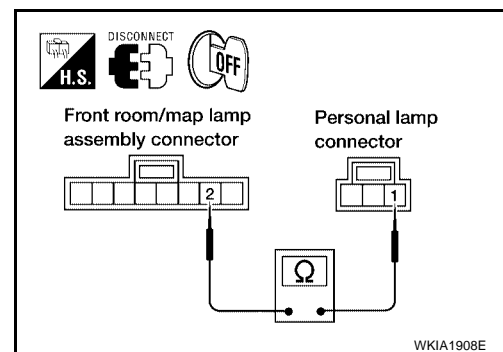

# INTERIOR ROOM LAMP

EKS00BBF

## All Step/Foot/Puddle Lamps Do Not Operate

### 1. CHECK EACH DOOR SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-151, "Display Item List"](#) for switches and their functions.

#### OK or NG

- OK >> GO TO 2.
- NG >> Inspect malfunctioning switch system.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
KEY ON SW	ON
DOOR SW-DR	ON
DOOR SW-AS	ON
DOOR SW-RR	OFF
DOOR SW-RL	OFF
BACK DOOR SW	OFF
KEY CYL LK-SW	OFF
KEY CYL UN-SW	OFF

SKIA5930E


### 2. CHECK STEP LAMP POWER SUPPLY

1. Turn ignition switch OFF.
2. Check voltage between front step lamp LH harness connector D11 terminal + and ground.

**+ - Ground : Battery voltage should exist.**

#### OK or NG

- OK >> GO TO 3.
- NG >> GO TO 4.

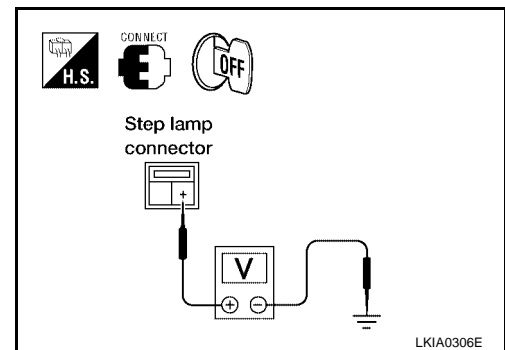


### 3. CHECK STEP LAMP CONTROL CIRCUIT

1. Disconnect BCM connector and front step lamp LH connector.
2. Check continuity between BCM harness connector M20 terminal 62 and front step lamp LH harness connector D11 terminal -.

**- - 62 : Continuity should exist.**

#### OK or NG

- OK >> Replace BCM if front step lamp does not work after setting the connector again. Refer to [BCS-20, "BCM"](#).
- NG >> Repair harness or connector.

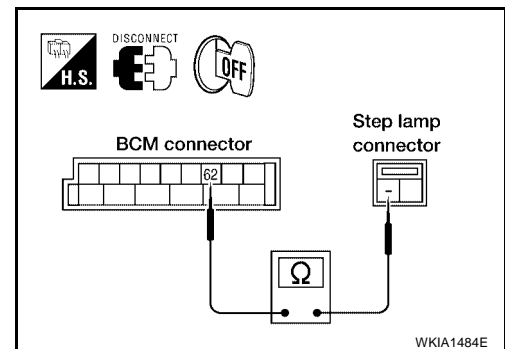


### 4. CHECK STEP LAMP CIRCUIT

1. Disconnect BCM connector and front step lamp LH connector.
2. Check continuity between BCM harness connector M20 terminal 56 and front step lamp LH harness connector D11 terminal +.

**+ - 56 : Continuity should exist.**

#### OK or NG

- OK >> Replace BCM if front step lamp does not work after setting the connector again. Refer to [BCS-20, "BCM"](#).
- NG >> Repair harness or connector.

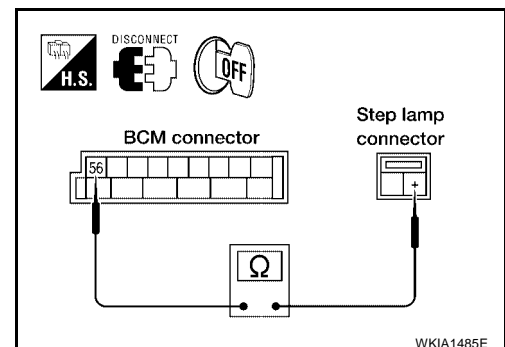

# INTERIOR ROOM LAMP

## All Interior Room Lamps Do Not Operate

EKS00BBG


### 1. CHECK POWER SUPPLY CIRCUIT

1. All interior room lamp switches are OFF.
2. Turn ignition switch ON.
3. Check voltage between BCM harness connector M20 terminal 56 and ground.

**56 - Ground : Battery voltage should exist.**

OK or NG

- OK >> Repair harness or connector. To prevent making a short circuit, be sure to disconnect battery negative cable after repairing harness, and then reconnect.
- NG >> Replace BCM. Refer to [BCS-20, "BCM"](#).

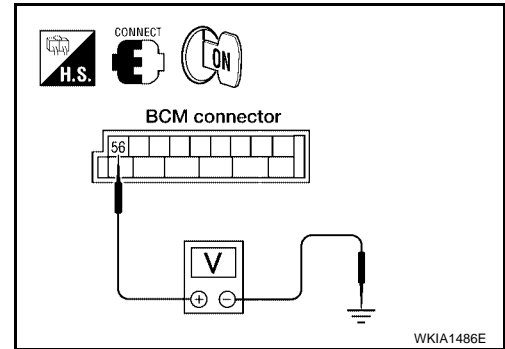

## Ignition Keyhole Illumination Control Does Not Operate

EKS00BBH

### 1. CHECK EACH SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-151, "Display Item List"](#) for switches and their functions.

OK or NG

- OK >> GO TO 2.
- NG >> Inspect malfunctioning switch system.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
KEY ON SW	ON
DOOR SW-DR	ON
DOOR SW-AS	ON
DOOR SW-RR	OFF
DOOR SW-RL	OFF
BACK DOOR SW	OFF
KEY CYL LK-SW	OFF
KEY CYL UN-SW	OFF

Diagram illustrating the DATA MONITOR display. The table shows the status of various switches. The diagram is labeled SKIA5930E.

### 2. ACTIVE TEST

1. Select "BCM" on CONSULT-II. Select "INT LAMP".
2. Select "IGN ILLUM" active test to make sure lamp operates.

**Ignition keyhole illumination should turn ON.**

OK or NG

- OK >> Replace BCM. Refer to [BCS-20, "BCM"](#).
- NG >> GO TO 3.

ACTIVE TEST	
IGN ILLUM	ON
	OFF

Diagram illustrating the ACTIVE TEST display. The table shows the status of the ignition keyhole illumination. The diagram is labeled SKIA3992E.


### 3. CHECK IGNITION KEYHOLE ILLUMINATION INPUT

1. Check voltage between ignition keyhole illumination harness connector M150 terminal + and ground.

**+ - Ground : Battery voltage should exist.**

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 6.

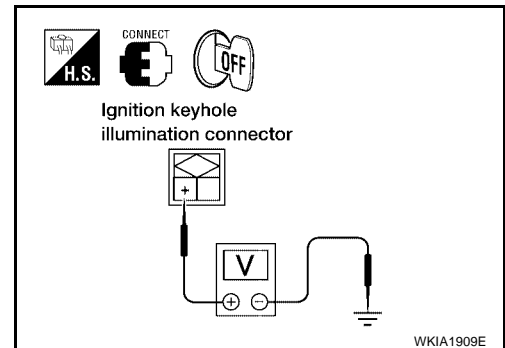

# INTERIOR ROOM LAMP


## 4. CHECK IGNITION KEYHOLE ILLUMINATION BULB

1. Turn ignition switch OFF.
2. Disconnect ignition keyhole illumination connector.
3. Check continuity between ignition keyhole illumination terminals + and -.

**+ - -** : **Continuity should exist.**

OK or NG

- OK >> GO TO 5.  
NG >> Replace ignition keyhole illumination.

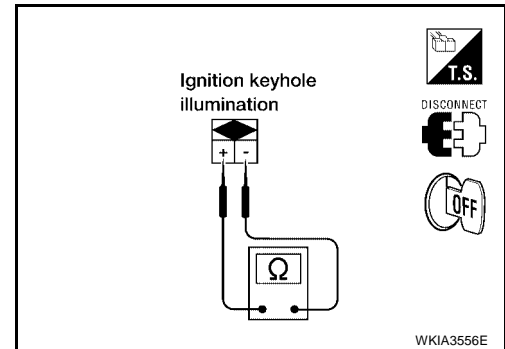


## 5. CHECK IGNITION KEYHOLE ILLUMINATION CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector M18 terminal 1 and ignition keyhole illumination harness connector M150 terminal -.

**- - 1** : **Continuity should exist.**

OK or NG

- OK >> Replace BCM if ignition keyhole illumination does not work after setting the connector again. Refer to [BCS-20](#), "[BCM](#)".
- NG >> Repair harness or connector.

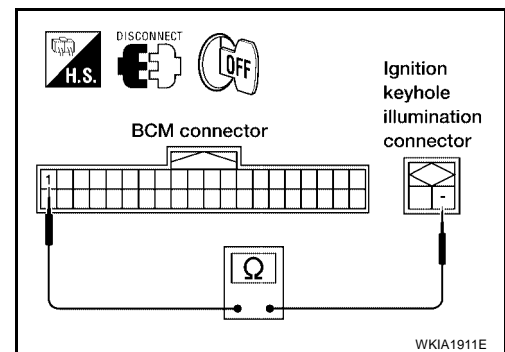


## 6. CHECK IGNITION KEYHOLE ILLUMINATION CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and keyhole illumination connector.
3. Check continuity between BCM harness connector M20 terminal 56 and ignition keyhole illumination harness connector M150 terminal +.

**+ - 56** : **Continuity should exist.**

OK or NG


- OK >> Replace BCM if ignition keyhole illumination does not work after setting the connector again. Refer to [BCS-20](#), "[BCM](#)".
- NG >> Repair harness or connector.

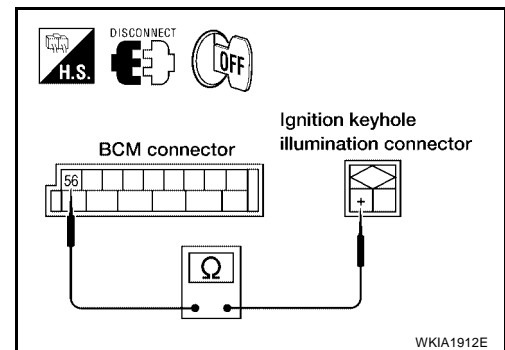

## ILLUMINATION

### Component Parts and Harness Connector Location

EKS00BB1

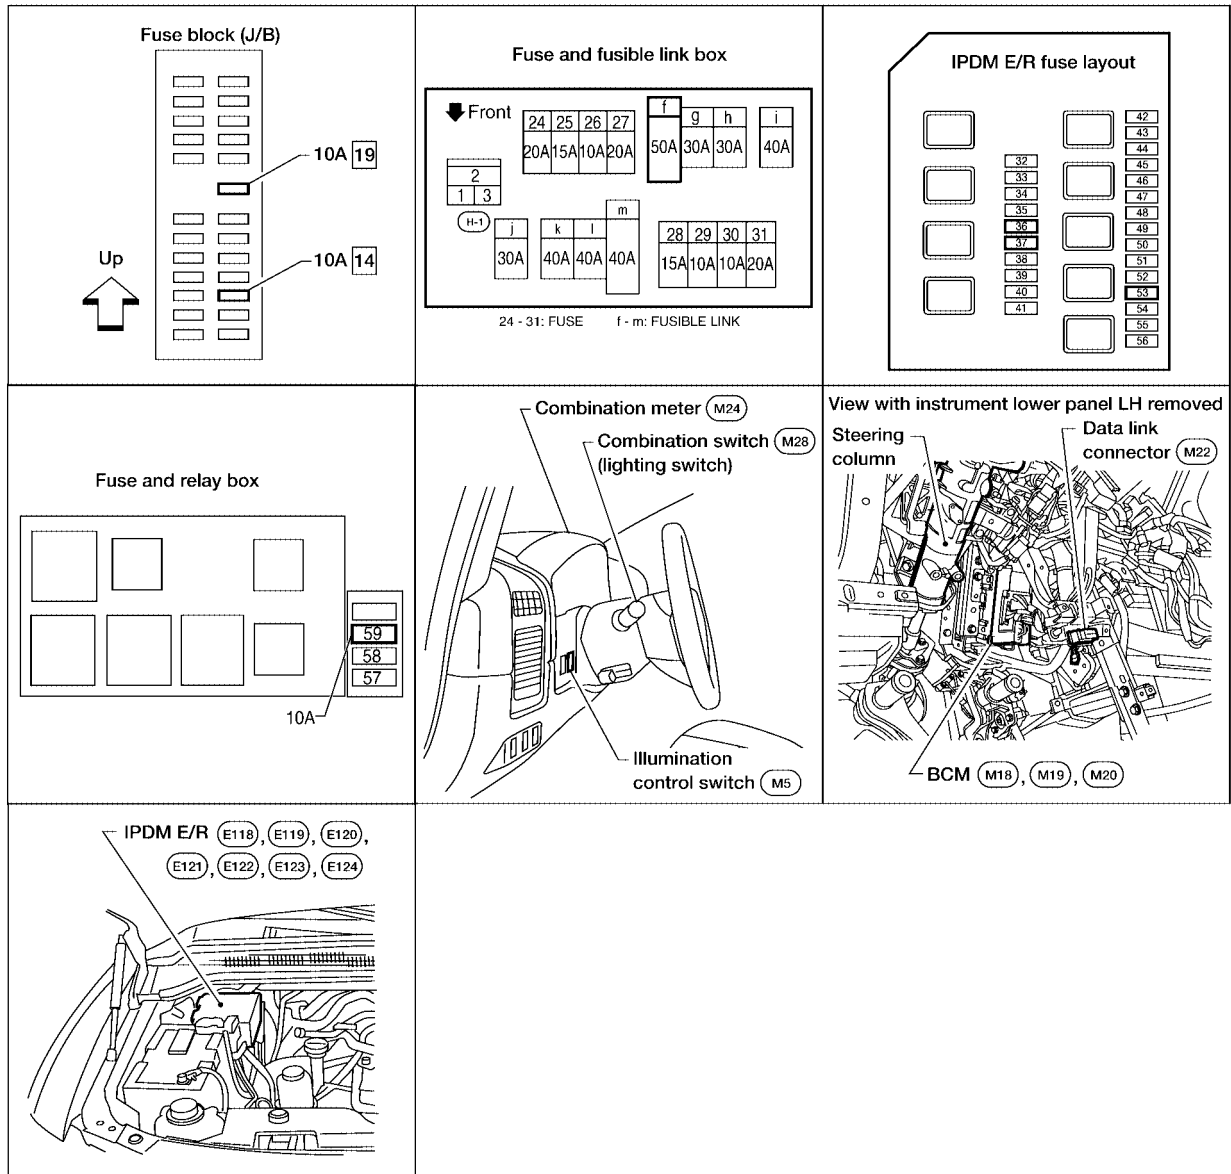

WKIA3471E

### System Description

EKS00BBJ

Control of the illumination lamps operation is dependent upon the position of the lighting switch (combination switch). When the lighting switch is placed in the 1ST or 2ND position (or if the auto light system is activated) the BCM (body control module) receives input signal requesting the illumination lamps to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the tail lamp relay coil. This relay, when energized, directs power to the illumination lamps, which then illuminate. Power is supplied at all times

- to ignition relay, located in the IPDM E/R, and
- to tail lamp relay, located in the IPDM E/R, and
- through 50A fusible link (letter f , located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 20A fuse (No. 53, located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- through 10A fuse [No.19, located in fuse block (J/B)]

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# ILLUMINATION

---

- to combination meter terminal 8

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse (No. 59, located in the fuse and relay box)
- to BCM terminal 38, and
- through 10A fuse [No. 14, located in the fuse block (J/B)]
- to combination meter terminal 24.

Ground is supplied

- to BCM terminal 67 and
- to combination meter terminal 17
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 59
- through grounds E9, E15 and E24.

## ILLUMINATION OPERATION BY LIGHTING SWITCH

With the lighting switch in the 1ST or 2ND position (or if the auto light system is activated), the BCM receives input signal requesting the illumination lamps to illuminate. This input signal is communicated to the IPDM E/R across the CAN communication lines. The CPU of the IPDM E/R controls the tail lamp relay coil, which, when energized, directs power

- through 10A fuse (No. 36, located in the IPDM E/R)
- through IPDM E/R terminal 49
- to illumination control switch terminal 1
- to power liftgate switch terminal 3
- to front room/map lamp assembly (console box illumination) terminal 7
- to hazard switch terminal 3
- to rear sonar system OFF switch terminal 3
- to glove box lamp terminal 1
- to display control unit terminal 14
- to 4WD shift switch terminal 7 (with 4-wheel drive)
- to front air control terminal 23
- to rear power vent window switch terminal 5
- to DVD player terminal 12 (with DVD entertainment system)
- to NAVI control unit terminal 61
- to pedal adjusting switch terminal 5
- to electric brake (pre-wiring) terminal 4 (with trailer tow)
- to front and rear heated seat switch LH and RH terminal 5
- to A/T device terminal 11
- to VDC OFF switch terminal 3
- to tow mode switch terminal 3
- to headlamp aiming switch terminal 3
- to clock terminal 3, and
- through 10A fuse (No. 37, located in the IPDM E/R)
- through IPDM E/R terminal 57
- to AV switch terminal 3
- to audio unit terminal 8
- to rear air control terminal 1 and
- to rear audio remote control unit terminal 6.

Illumination is controlled

- through illumination control switch terminal 2
- to power liftgate switch terminal 4

# ILLUMINATION

- to front room/map lamp assembly (console box illumination) terminal 8
- to AV switch terminal 4
- to hazard switch terminal 4
- to audio unit terminal 7
- to rear sonar system OFF switch terminal 4
- to 4WD switch terminal 8 (with 4-wheel drive)
- to front air control terminal 24
- to rear power vent window switch terminal 6
- to DVD player terminal 10 (with DVD entertainment system)
- to pedal adjusting switch terminal 6
- to A/T device terminal 12
- to front heated seat switch LH and RH terminal 6
- to VDC OFF switch terminal 4
- to tow mode switch terminal 4
- to headlamp aiming switch terminal 4
- to clock terminal 4 and
- to combination meter terminal 18.

Ground is supplied

- to illumination control switch terminal 3
- to glove box lamp terminal 2
- to display control unit terminal 3
- to rear heated seat switches terminal 6
- to electric brake (pre-wiring) terminal 1 (with trailer tow) and
- to compass and thermometer terminal 7
- through grounds M57, M61 and M79, and
- to NAVI control unit terminal 1
- to rear air control terminal 3 and
- to rear audio remote control unit terminal 15
- through grounds B117 and B132.

With power and ground supplied, illumination lamps illuminate.

## EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 1ST or 2ND position (or if auto light system is activated), and the ignition switch is turned from ON or ACC to OFF, the battery saver control function is activated. Under this condition, the illumination lamps remain illuminated for 5 minutes, then the illumination lamps are turned off.

When the lighting switch is turned from OFF to 1ST or 2ND position (or if auto light system is activated) after illumination lamps are turned off by the battery saver control, the illumination lamps illuminate again. Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

## CAN Communication System Description

Refer to [LAN-26, "CAN COMMUNICATION"](#).


EKS00BBK

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT

# ILLUMINATION

## Schematic

EKS00BBL

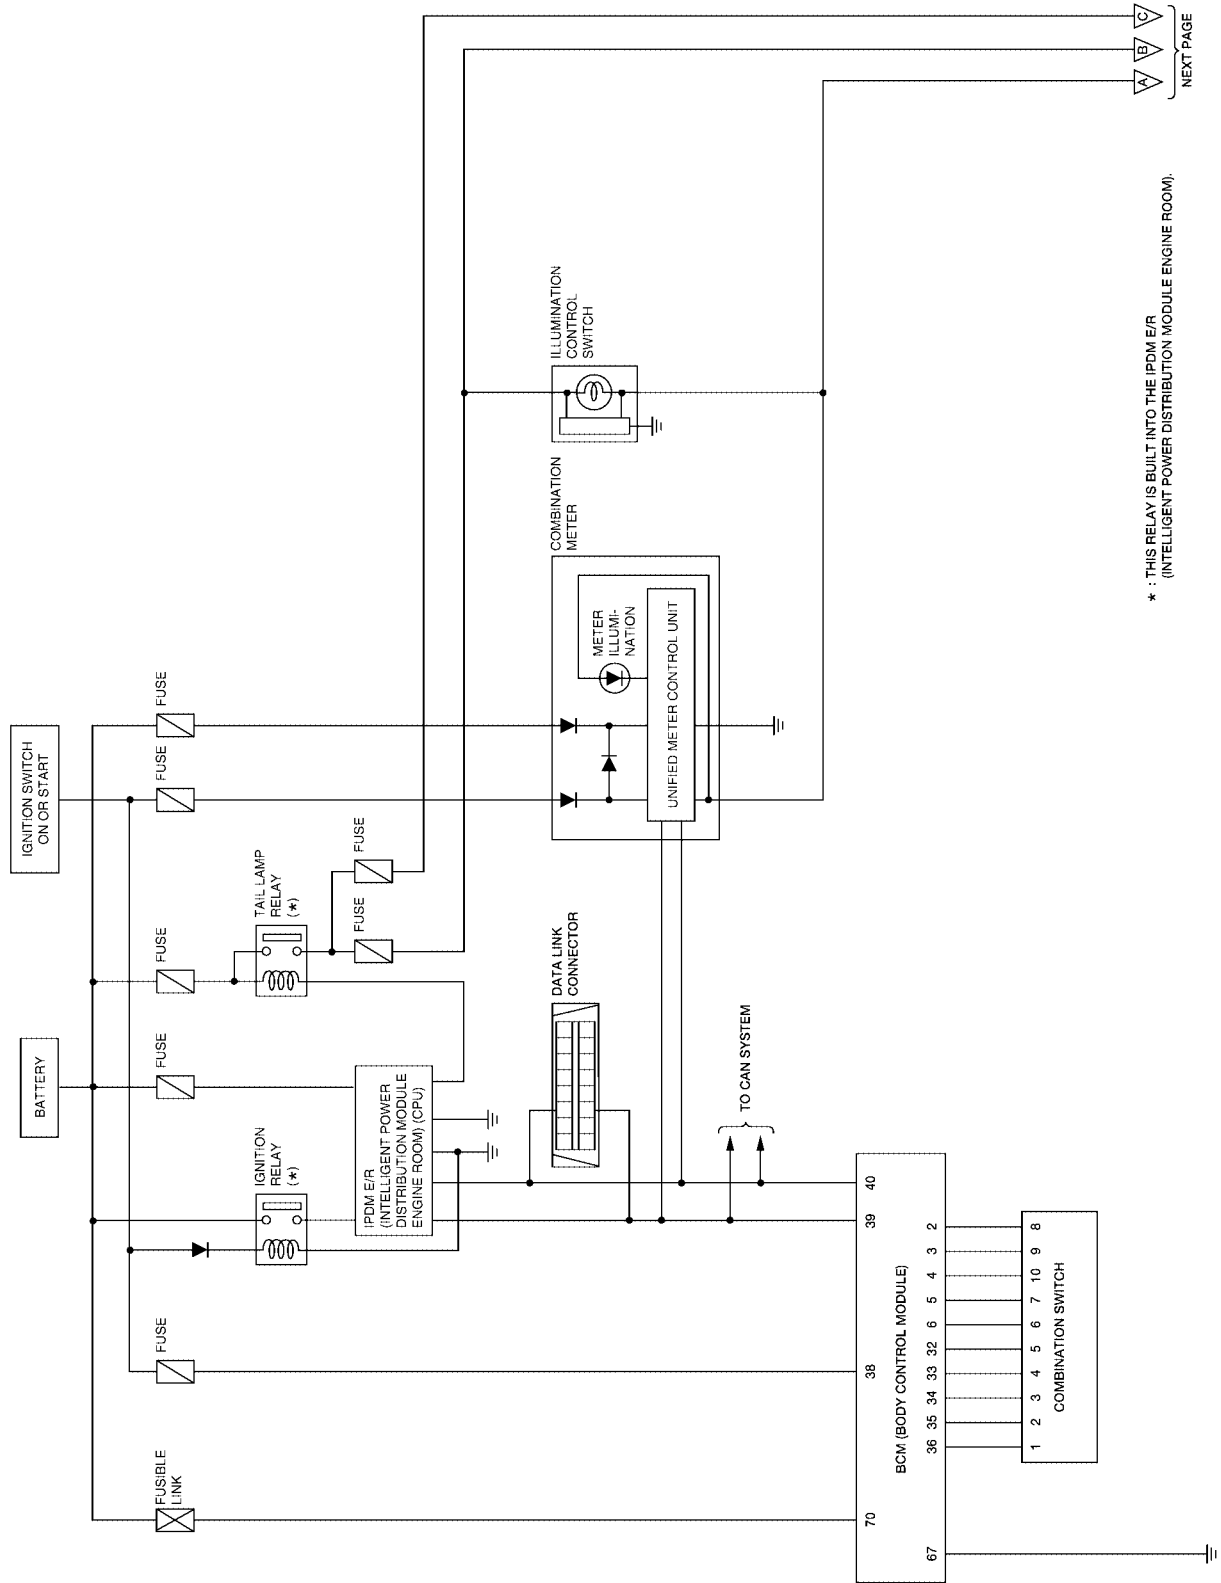


\* : THIS RELAY IS BUILT INTO THE IPDM E/R  
(INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM).

△ A △ B △ C } NEXT PAGE

WKWA3674E




# ILLUMINATION

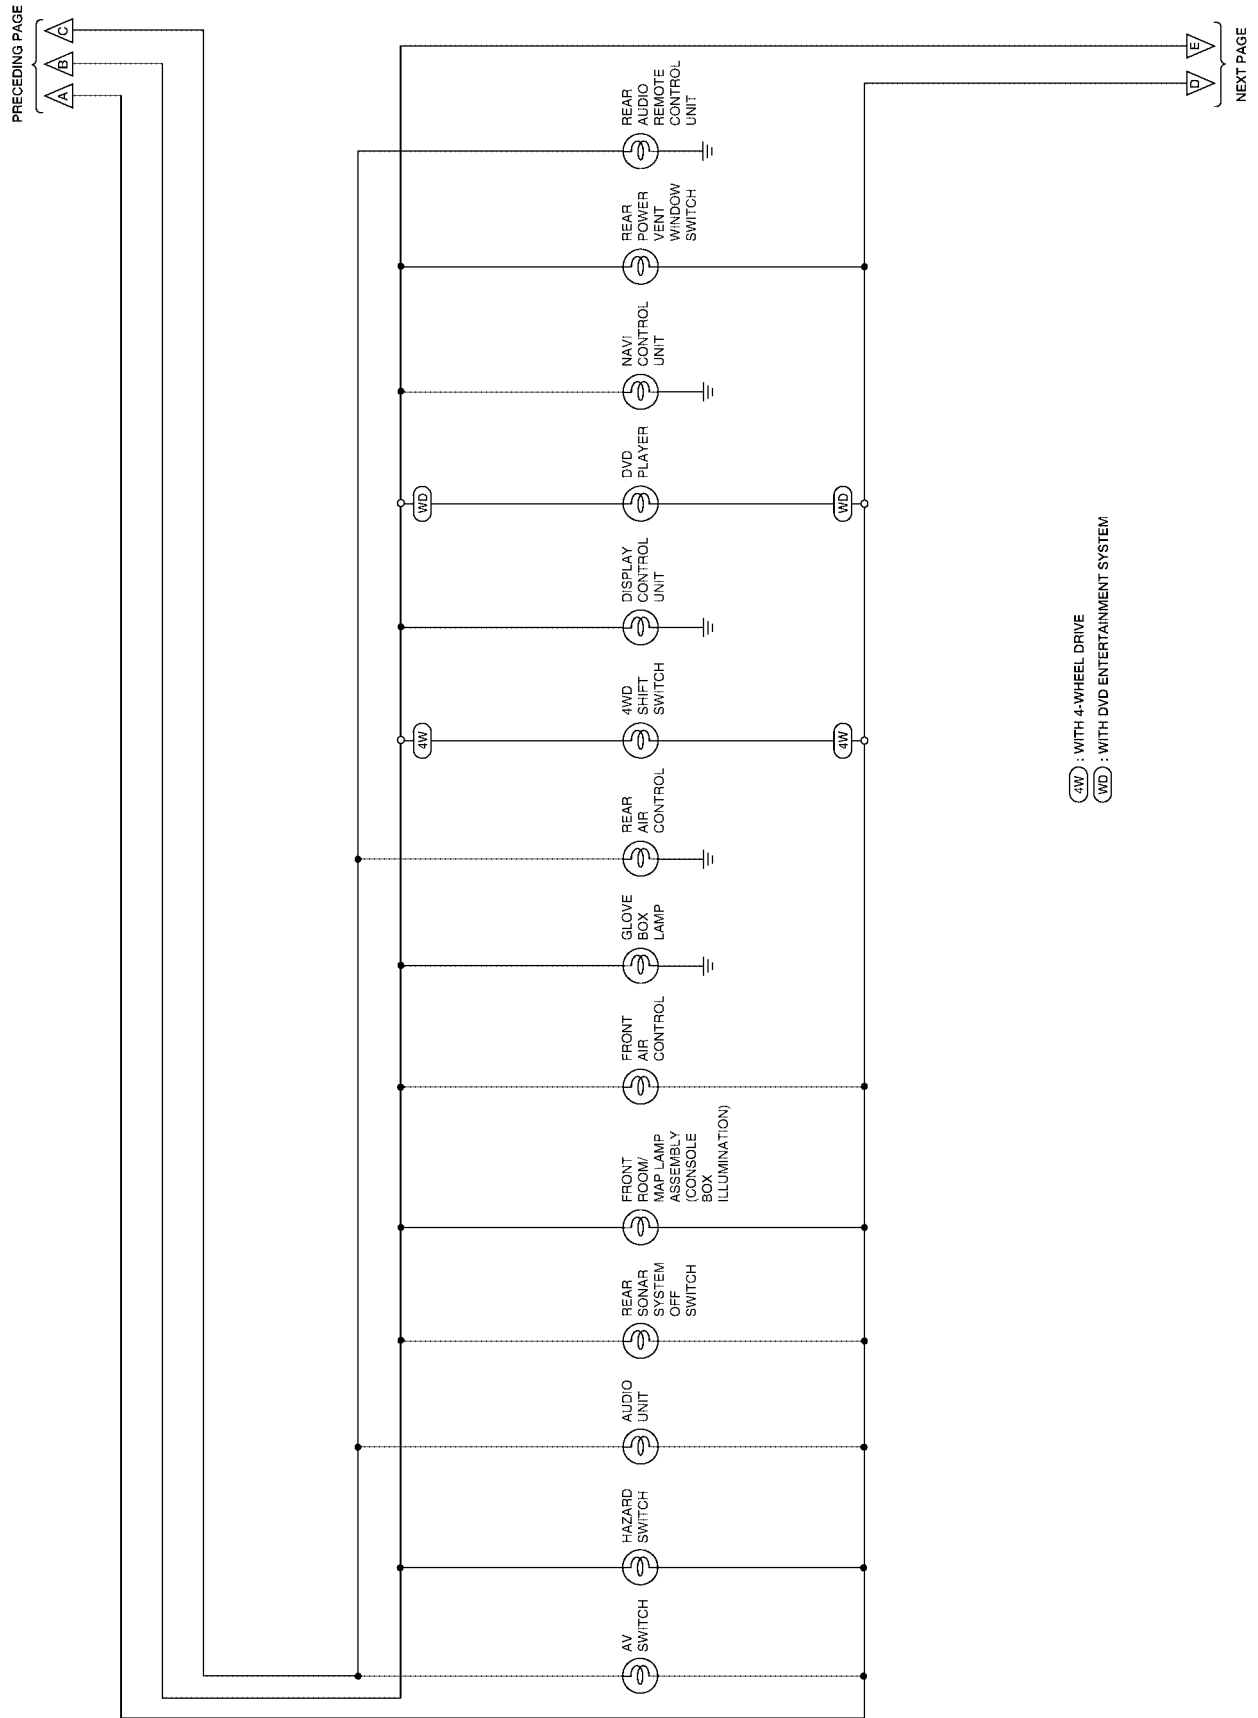

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

# ILLUMINATION

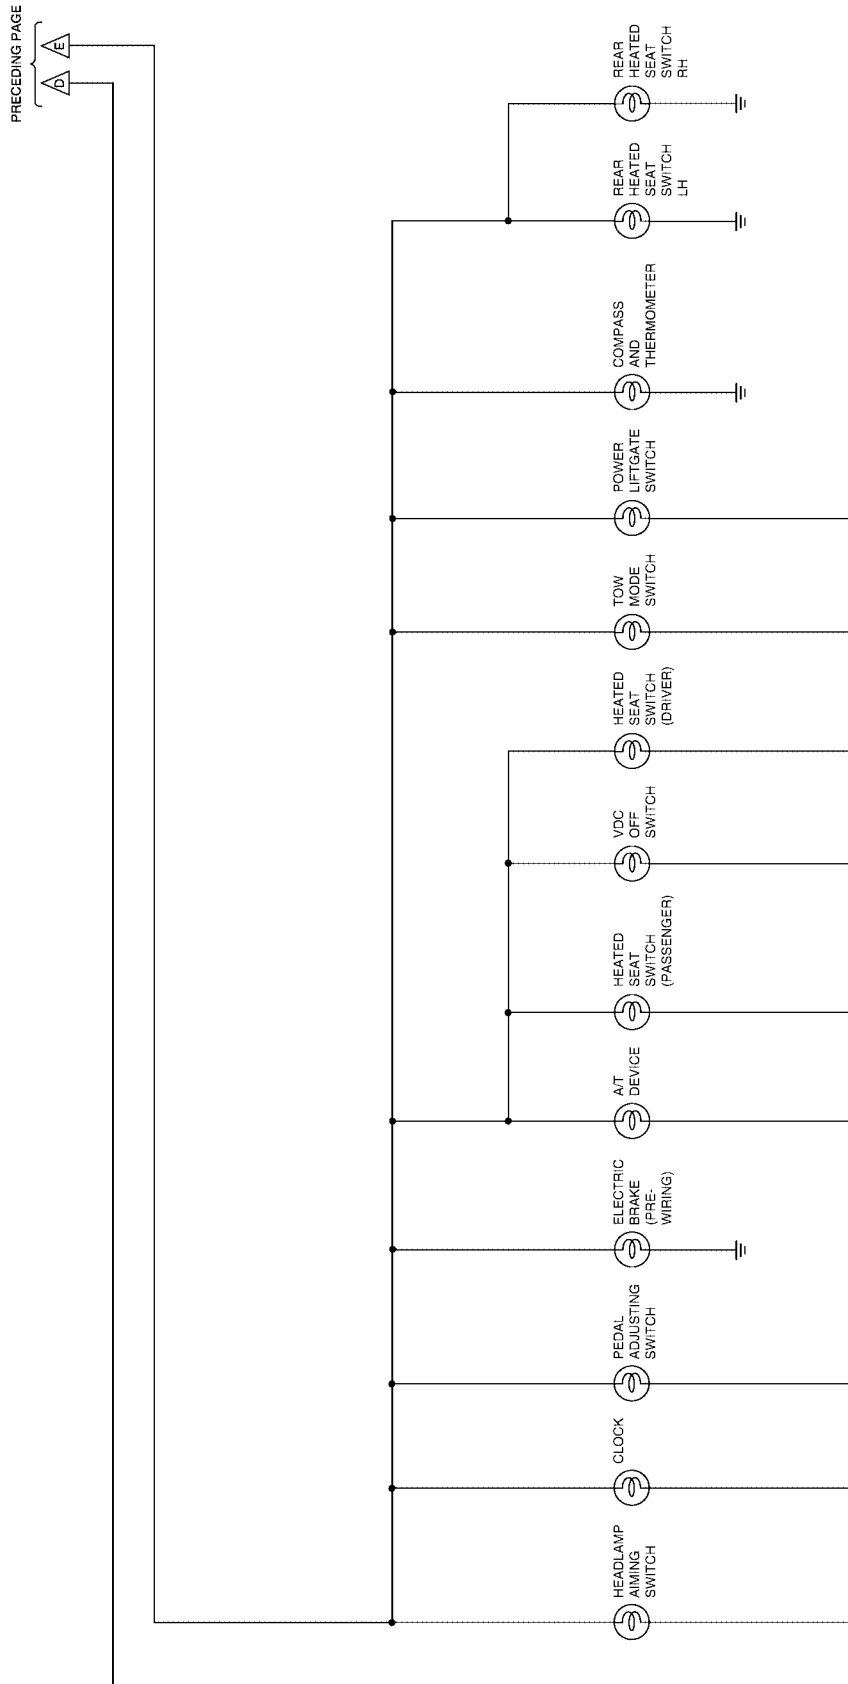


WKWA1222E

# ILLUMINATION


## Wiring Diagram — ILL —

EKS00BBM

LT-ILL-01

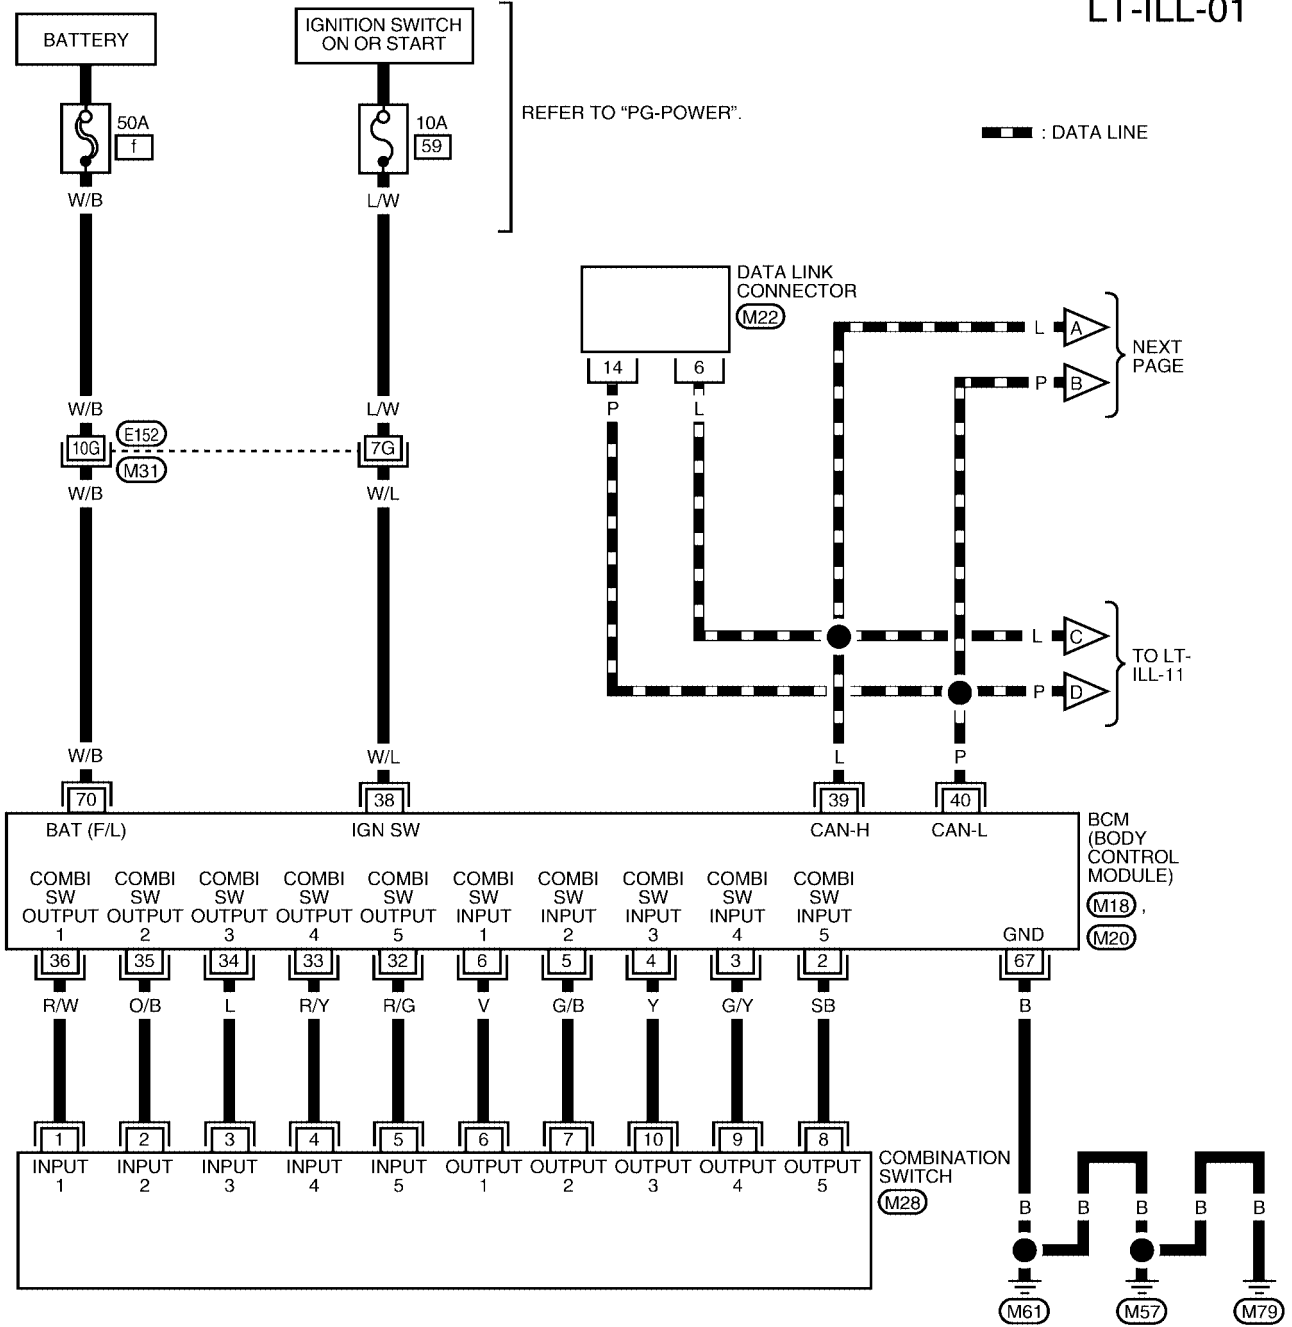

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M

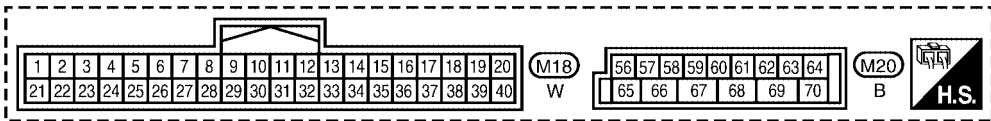

REFER TO THE FOLLOWING.  
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)



WKWA3675E

# ILLUMINATION

LT-ILL-02

— : DATA LINE

◻TT◻ : TRAILER TOW 7 PIN

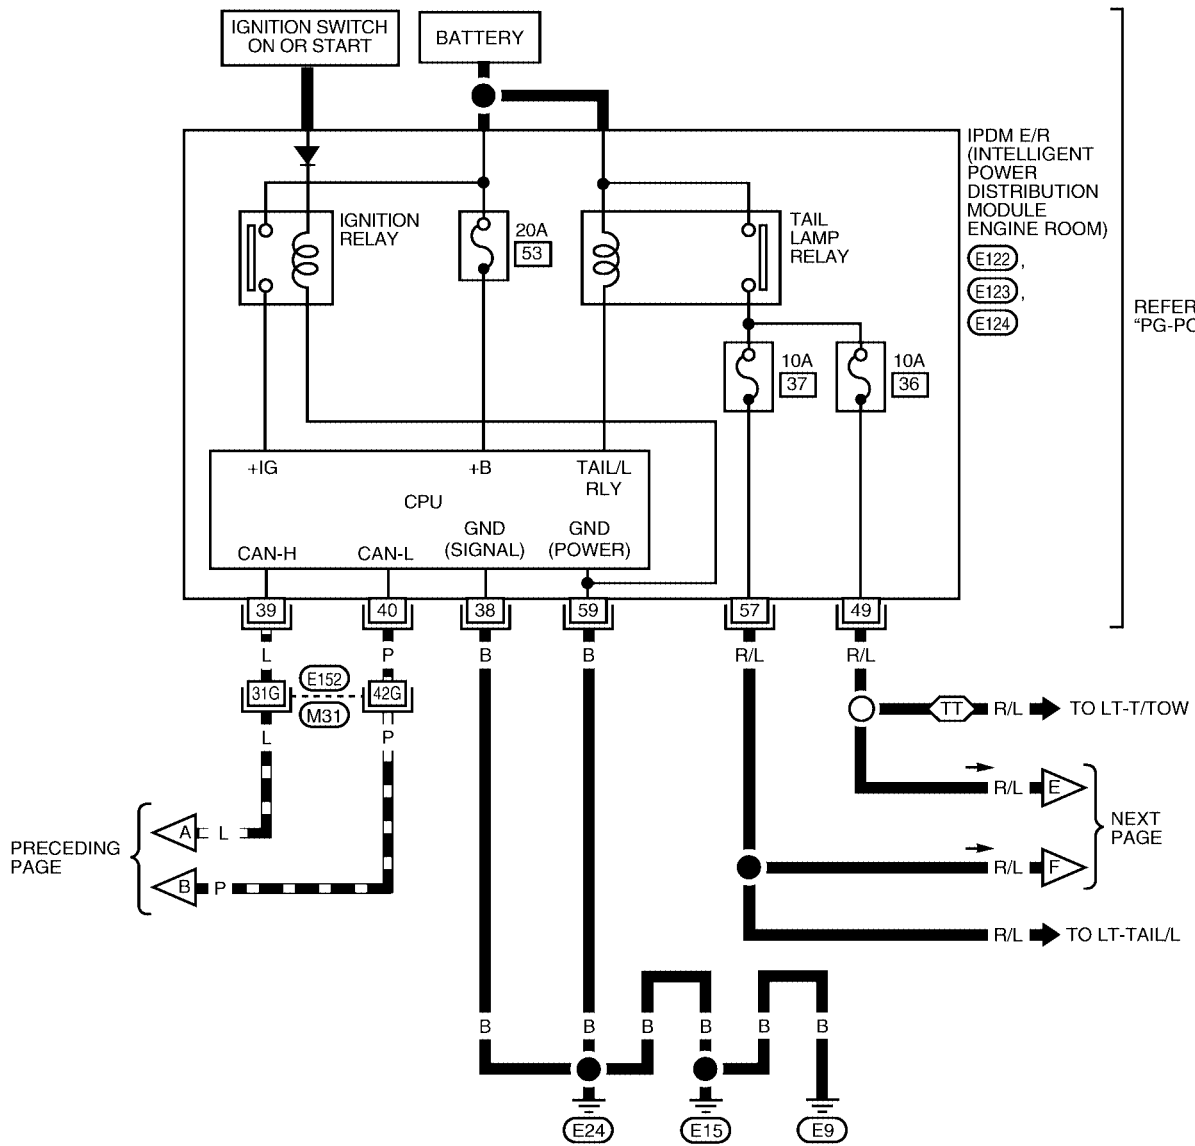



REFER TO THE FOLLOWING.

(M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3676E

# ILLUMINATION

LT-ILL-03

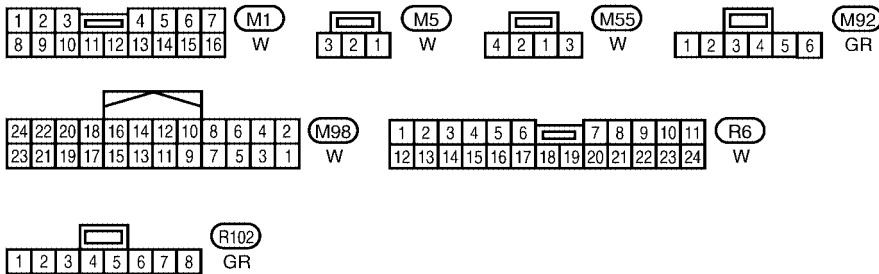
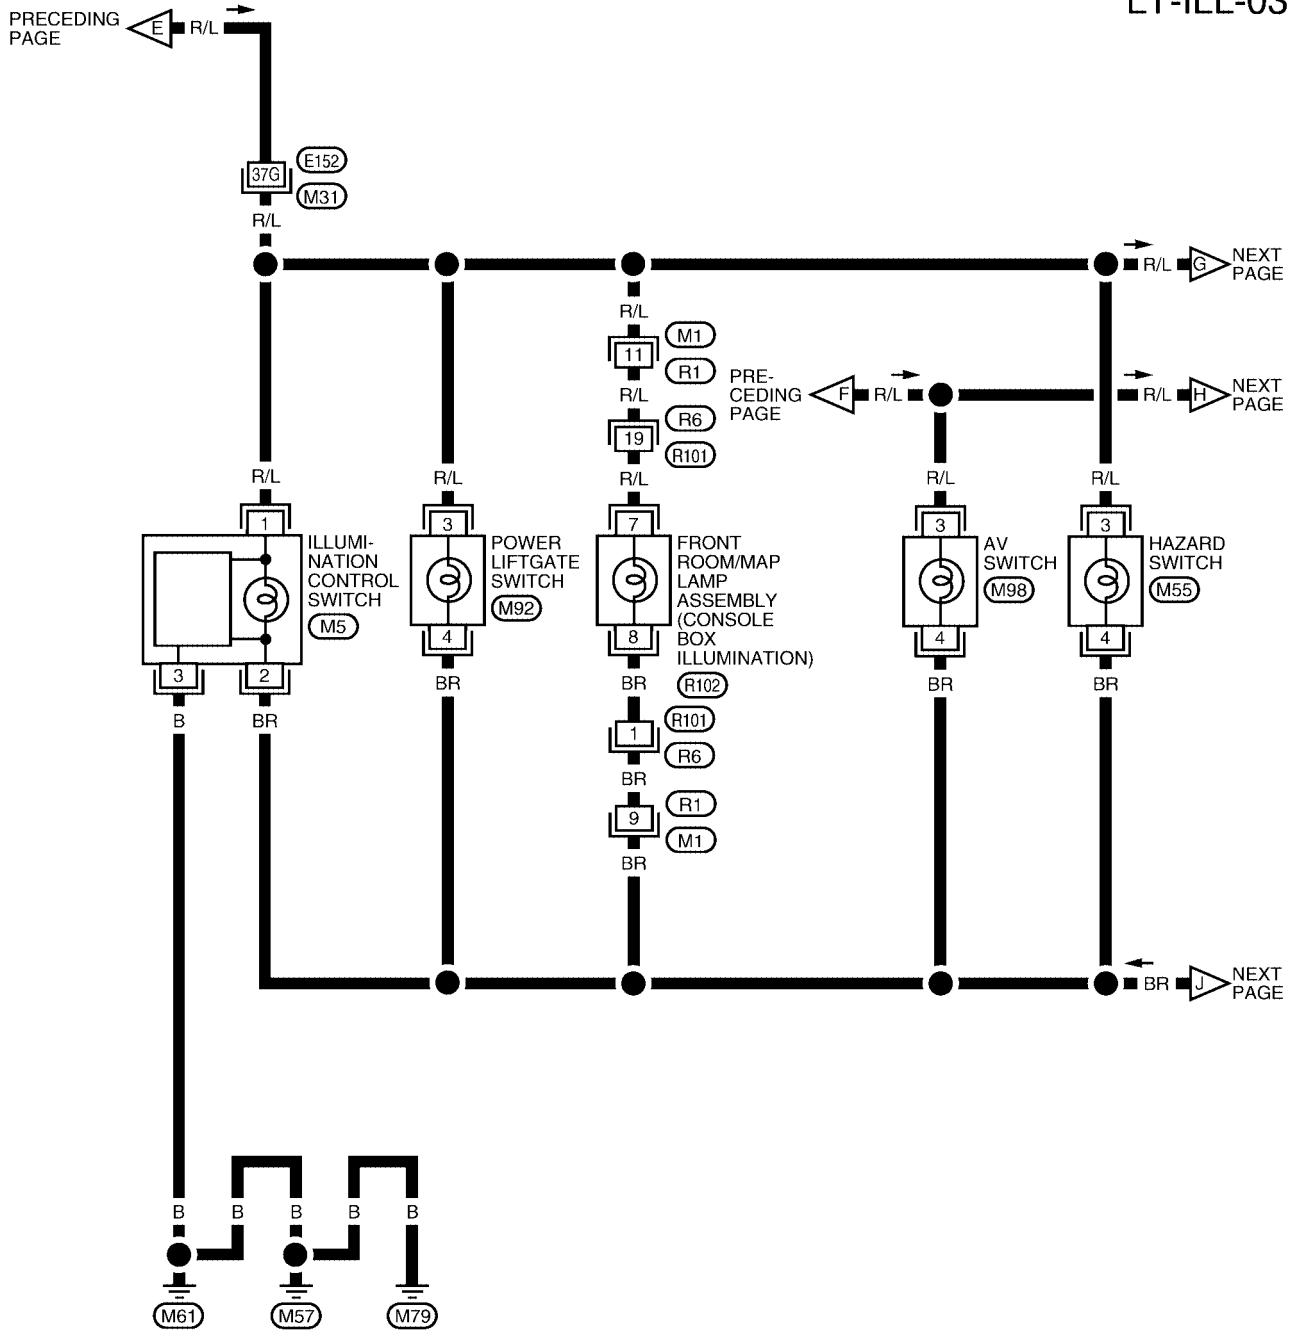


REFER TO THE FOLLOWING.  
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA2499E

# ILLUMINATION


LT-ILL-04

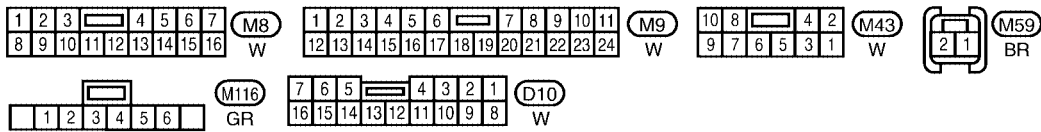
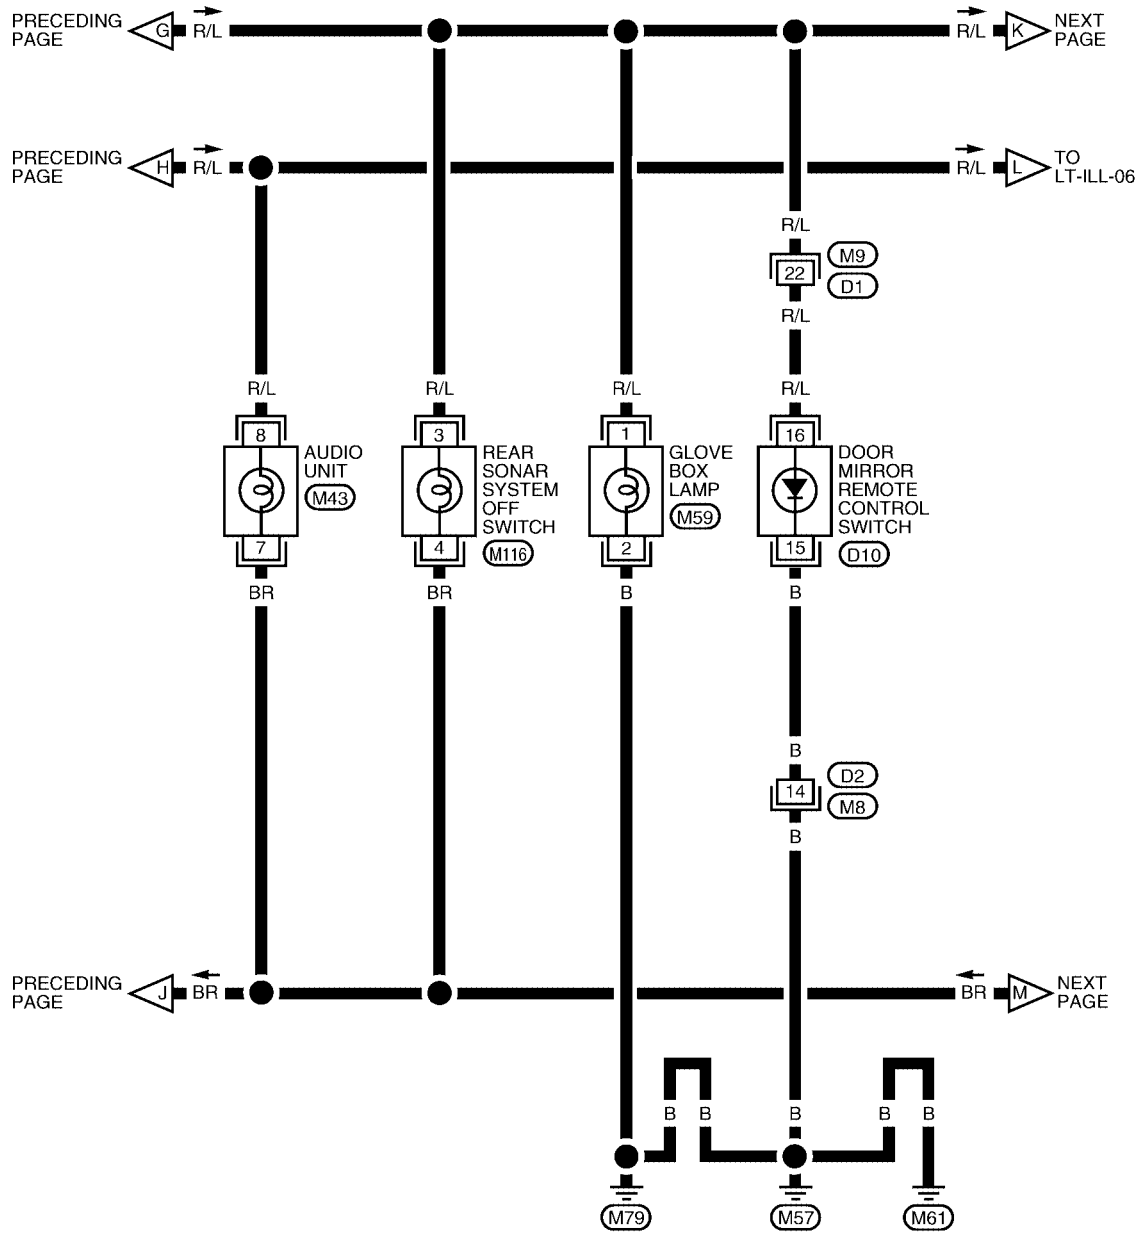


WKWA3678E

# ILLUMINATION

LT-ILL-05

 : WITH 4-WHEEL DRIVE


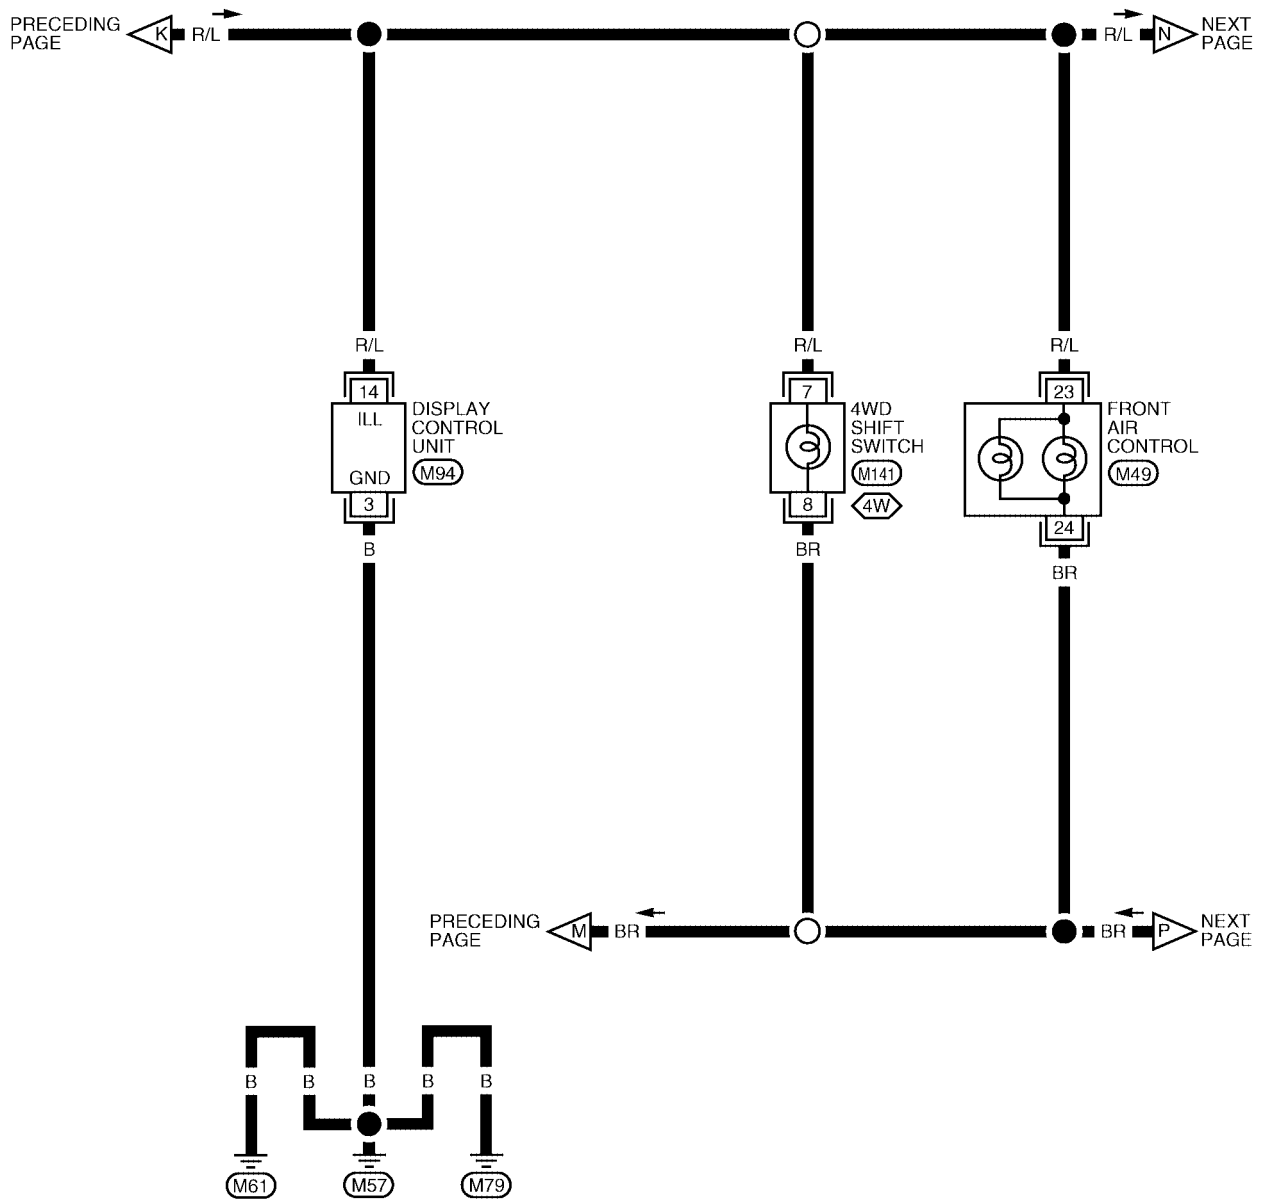


WKWA1227E

# ILLUMINATION

LT-ILL-06

◊WD◊ : WITH DVD ENTERTAINMENT SYSTEM

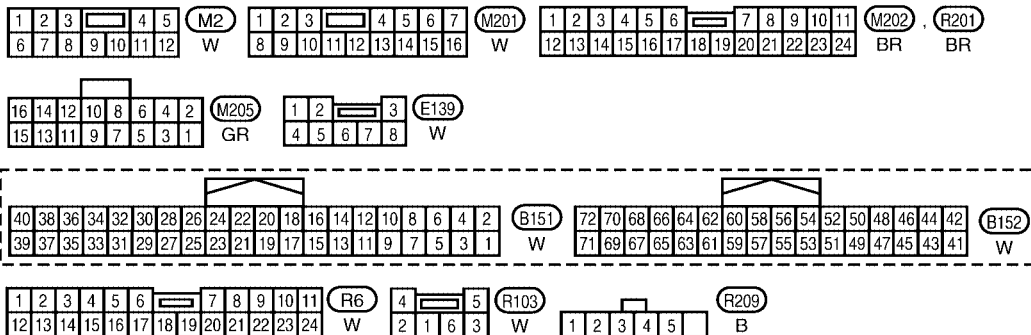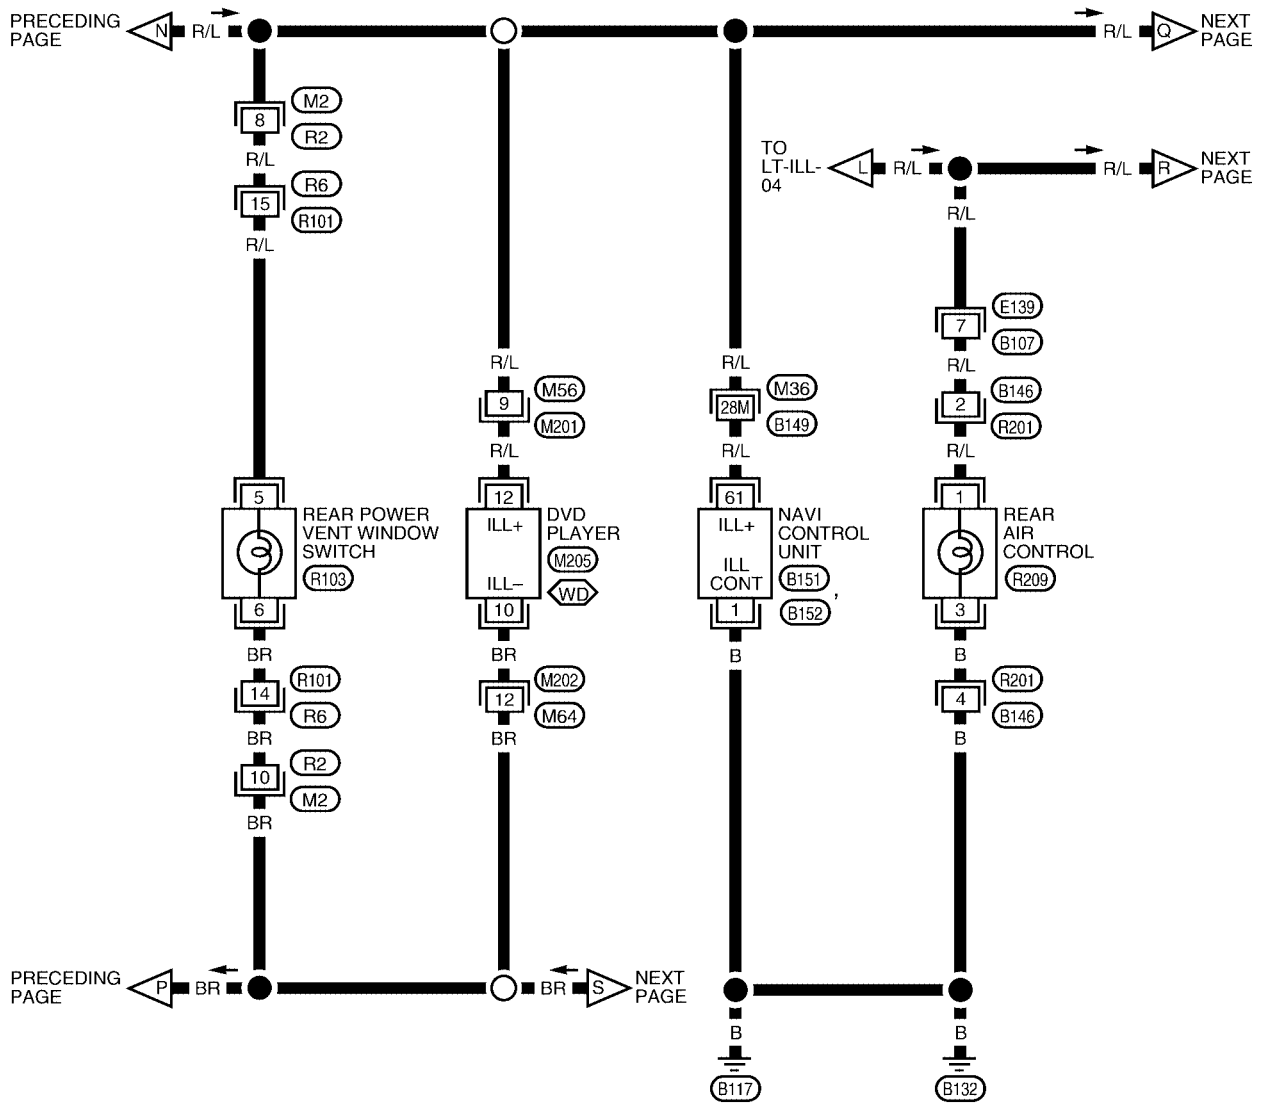

REFER TO THE FOLLOWING.  
 ◊M36◊ - SUPER MULTIPLE JUNCTION (SMJ)


WKWA3679E




# ILLUMINATION

LT-ILL-07

⬡TT⬡ : TRAILER TOW 7 PIN

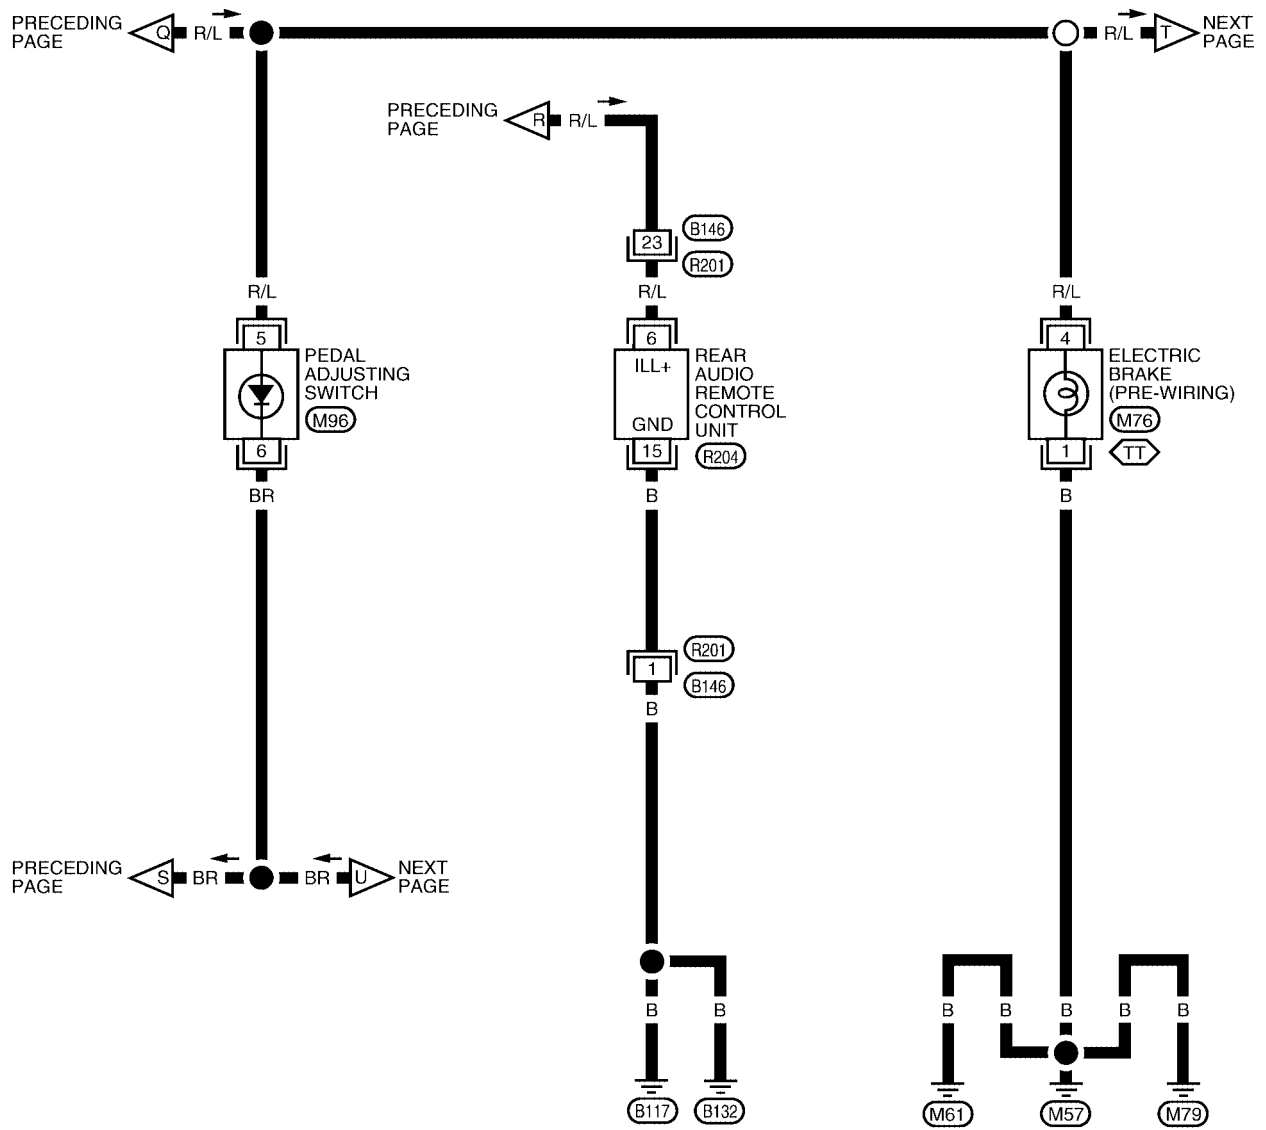



A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M



WKWA3809E

# ILLUMINATION


LT-ILL-08

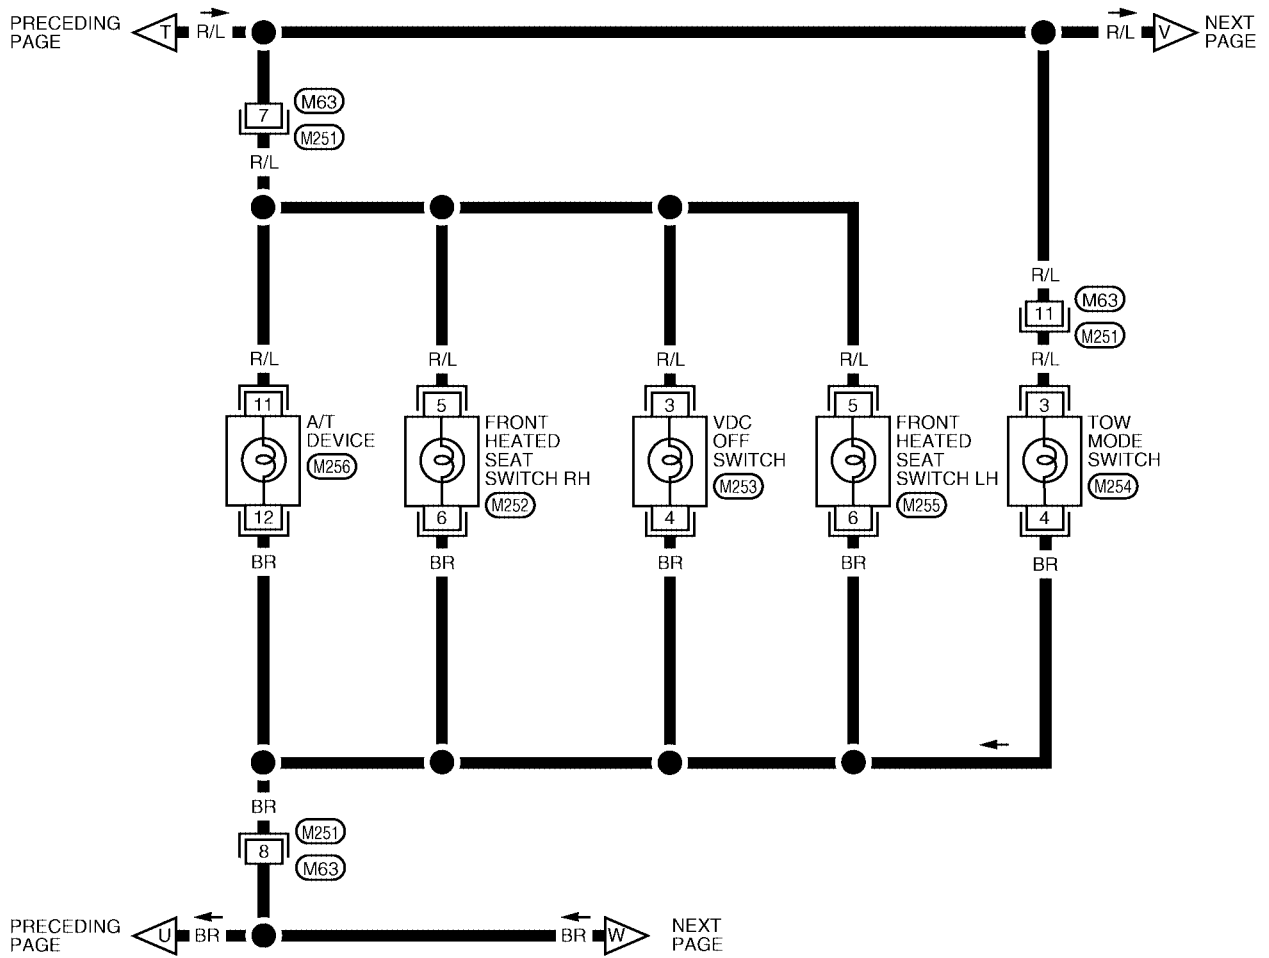


WKWA1230E

# ILLUMINATION

LT-ILL-09

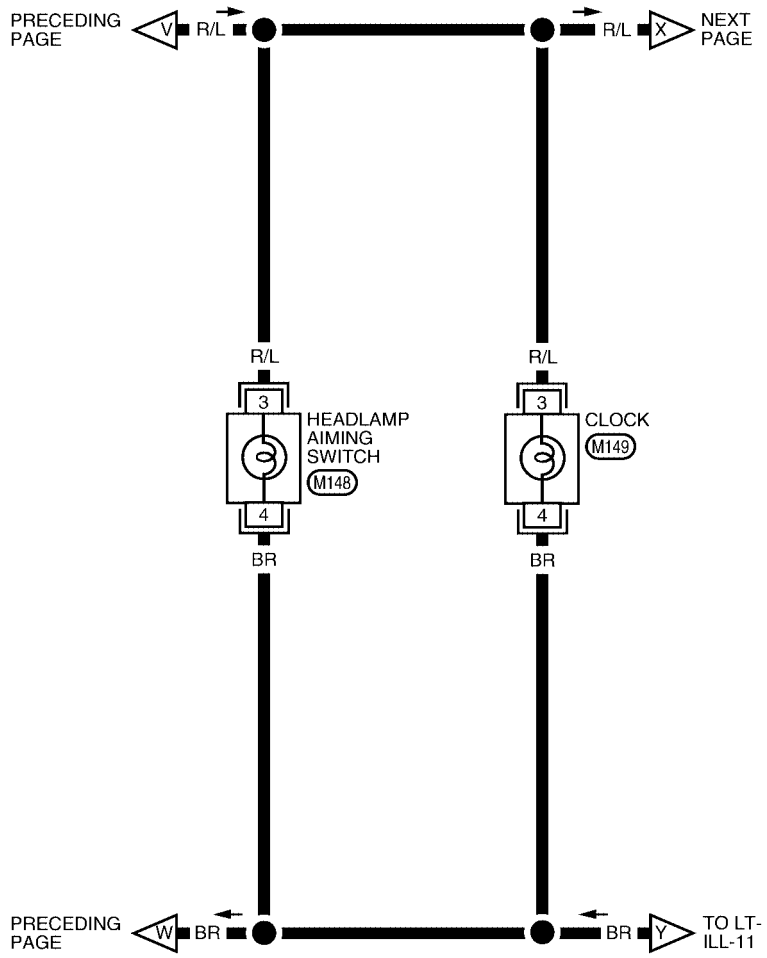


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M



WKWA3680E

# ILLUMINATION

LT-ILL-10

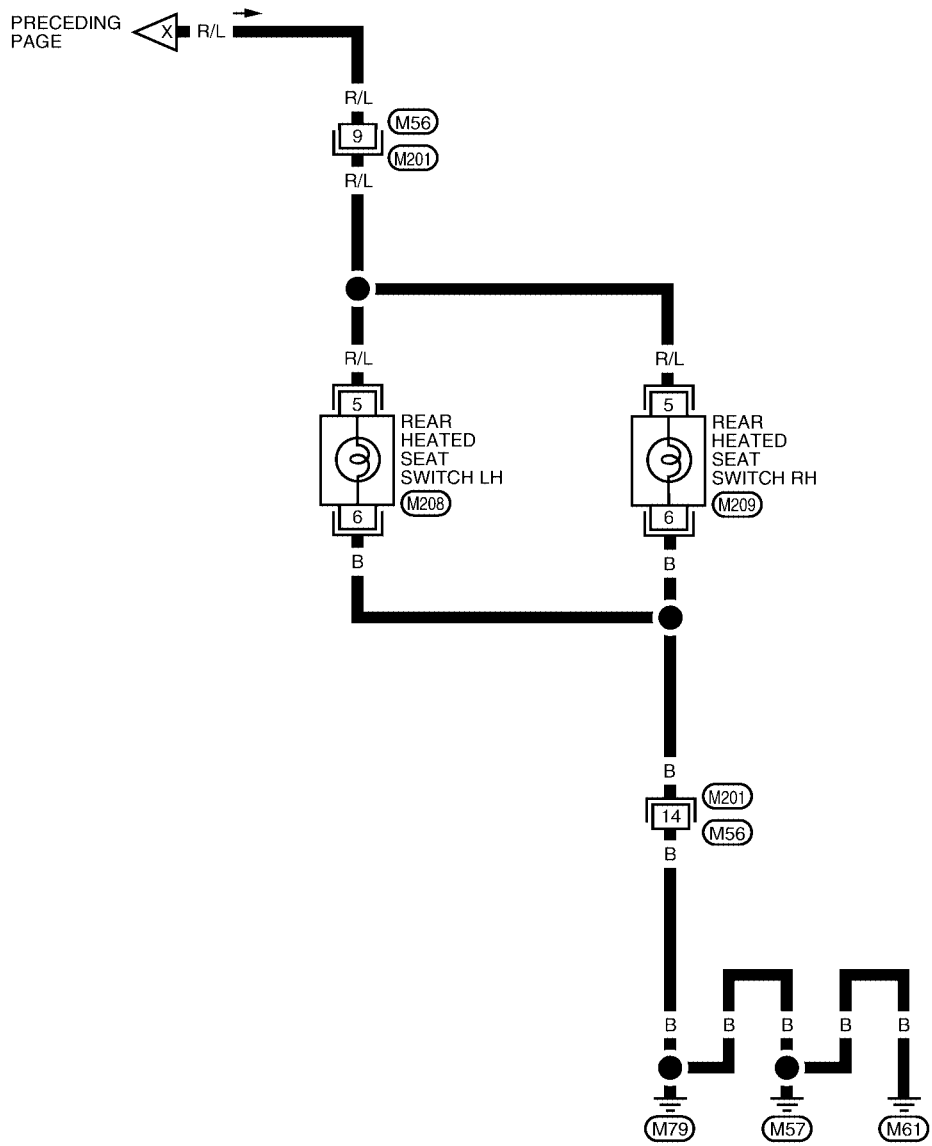


1	2	3	4	5	6	7	(M201)	6	5	(M208)	(M209)				
8	9	10	11	12	13	14	15	16	W	3	1	2	4	BR	BR

WKWA3681E


# ILLUMINATION

LT-ILL-11

— : DATA LINE

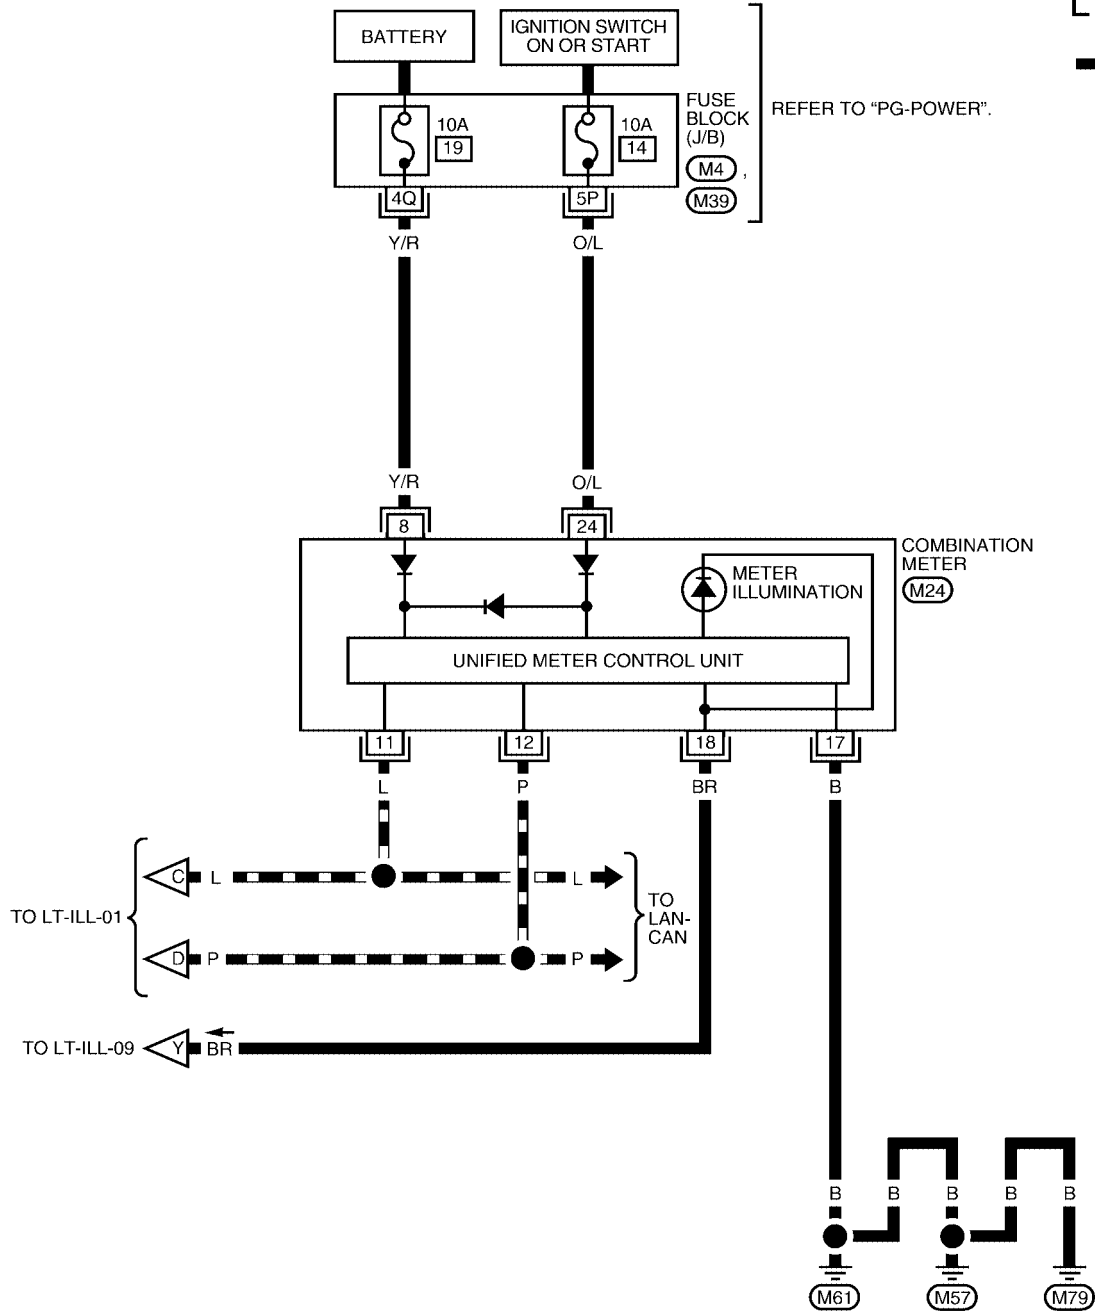

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
LT  
L  
M



WKWA3682E


# ILLUMINATION

## Removal and Installation of Illumination Control Switch

EKS00BBN

### REMOVAL

1. Remove cluster lid A. Refer to [IP-13, "COMBINATION METER"](#) .
2. Carefully pry tabs and remove illumination control switch from cluster lid A.

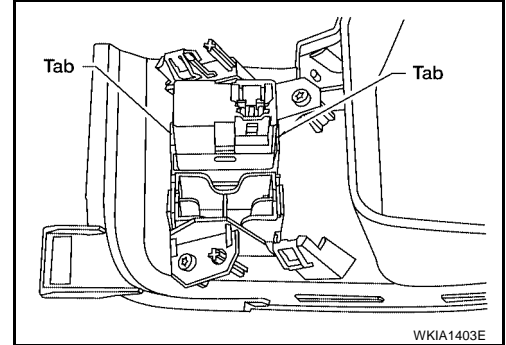

### INSTALLATION

Installation is in the reverse order of removal.

# BULB SPECIFICATIONS

## BULB SPECIFICATIONS

PFP:26297

### Headlamp

EKS00D83

Item	Wattage (W)*
Low	35 (D2R)
High	60 (HB3)

\*: Always check with the Parts Department for the latest parts information.

### Exterior Lamp

EKS00D84

Item	Wattage (W)*	
Front combination lamp	Parking lamp (inner)	7
	Parking lamp (outer)	7
	Side marker lamp (front)	7
Rear combination lamp	Stop/Tail lamp	*
	Side marker lamp (rear)	*
	Turn signal lamp	27
Back-up lamp	*	
Turn/fog lamp	Fog	55 (H3)
	Turn	21
License plate lamp	5	
High-mounted stop lamp	*	

\*: Always check with the Parts Department for the latest parts information.

### Interior Lamp/Illumination

EKS00D85

Item	Wattage (W)*
Glove box lamp	3.4
Room/Map lamp	8
Console box illumination lamp	*
A/T device lamp	2
Foot lamp	3.4
Step lamp	3.8
Cargo lamp	7
Vanity lamp	1.32
Personal lamp	5
Puddle lamp	8
Ignition keyhole illumination lamp	0.74

\*: Always check with the Parts Department for the latest parts information.

# BULB SPECIFICATIONS

---