

SECTION **AV**

AUDIO, VISUAL, NAVIGATION & TELEPHONE SYSTEM

CONTENTS

| | | | |
|--------------------------------------------------------------------------------------------------|----|-----------------------------------------------------------------------------|----|
| SERVICE INFORMATION | 3 | Sound Is Not Heard from Rear Door Speaker or Rear Door Tweeter | 41 |
| PRECAUTIONS | 3 | Sound Is Not Heard from Center Speaker | 44 |
| Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" | 3 | Sound Is Not Heard from Subwoofer | 44 |
| PREPARATION | 4 | Removal and Installation | 46 |
| Commercial Service Tool | 4 | AUDIO ANTENNA | 52 |
| AUDIO | 5 | System Description | 52 |
| Component Parts and Harness Connector Location | 5 | Wiring Diagram - W/ANT - | 53 |
| System Description | 6 | Location of Antenna | 54 |
| Schematic | 8 | Window Antenna Repair | 54 |
| Wiring Diagram - AUDIO - | 9 | TELEPHONE | 56 |
| Terminal and Reference Value for Audio Unit | 20 | Component Parts and Harness Connector Location | 56 |
| Terminal and Reference Value for BOSE Speaker Amp | 23 | System Description | 56 |
| Terminal and Reference Value for Rear Audio Remote Control Unit | 25 | Wiring Diagram - H/PHONE - | 58 |
| Terminal and Reference Value for AV Switch | 26 | Terminal and Reference Value for Bluetooth Control Unit | 60 |
| Terminal and Reference Value for Satellite Radio Tuner (Factory Installed) | 28 | Bluetooth Control Unit Self-Diagnosis Function | 60 |
| AV Switch Self-Diagnosis Function | 28 | Power Supply and Ground Circuit Inspection for Bluetooth Control Unit | 61 |
| Trouble Diagnosis | 29 | Removal and Installation | 62 |
| Noise Inspection | 31 | DVD ENTERTAINMENT SYSTEM | 64 |
| Power Supply Circuit Inspection | 31 | Component Parts and Harness Connector Location | 64 |
| Satellite Radio Tuner (Factory Installed) Power and Ground Supply Circuit Inspection | 32 | Description | 64 |
| Satellite Radio Tuner (Factory Installed) Communication Circuit Inspection | 33 | Schematic | 66 |
| Satellite Radio Tuner (Factory Installed) Left Channel Audio Signal Circuit Inspection | 35 | Wiring Diagram - DVD - | 67 |
| Satellite Radio Tuner (Factory Installed) Right Channel Audio Signal Circuit Inspection | 36 | Trouble Diagnosis | 70 |
| Steering Switch Check | 37 | Power Supply Circuit Inspection | 70 |
| AV Switch Check | 38 | Removal and Installation | 71 |
| Audio Communication Line Check | 38 | NAVIGATION SYSTEM | 73 |
| Sound Is Not Heard from Front Door Speaker or Front Tweeter | 39 | System Description | 73 |
| | | CAN Communication System Description | 75 |
| | | Component Parts Location | 76 |
| | | Schematic | 77 |
| | | Wiring Diagram - NAVI - | 78 |
| | | Schematic | 85 |

| | | | |
|----------------------------------------------------------------------------------------|-----|-------------------------------------------------------------------------------------------------------------------------------------|-----|
| Wiring Diagram - COMM - | 86 | If NAVI Control Unit Detects That Inserted DVD-ROM Map Is Malfunctioning or If It Is Impossible to Load Data from DVD-ROM Map | 123 |
| Terminal and Reference Value for NAVI Control Unit | 89 | If Connection Between NAVI Control Unit and GPS Antenna Is Malfunctioning | 124 |
| Terminal and Reference Value for Display Control unit | 91 | Operating Screen for Audio and A/C Is Not Displayed When Showing NAVI Screen | 124 |
| Terminal and Reference Value for Display unit | 95 | Color of RGB Image Is Not Proper (Only NAVI Screen Looks Bluish) | 125 |
| Terminal and Reference Value for AV Switch | 96 | Color of RGB Image Is Not Proper (Only NAVI Screen Looks Reddish) | 126 |
| Terminal and Reference Value for BCM | 97 | Color of RGB Image Is Not Proper (Only NAVI Screen Looks Yellowish) | 127 |
| On Board Self-Diagnosis Function | 97 | Color of RGB Image Is Not Proper (All Screens Look Bluish) | 128 |
| Self-Diagnosis Mode (DCU) | 98 | Color of RGB Image Is Not Proper (All Screens Look Reddish) | 129 |
| Self-Diagnosis Mode (NAVI) | 101 | Color of RGB Image Is Not Proper (All Screens Look Yellowish) | 129 |
| Confirmation/Adjustment Mode | 103 | NAVI Screen Is Rolling | 130 |
| CAN Diagnostic Support Monitor | 109 | Guide Sound Is Not Heard | 132 |
| AV Switch Self-Diagnosis Function | 110 | Screen Is Not Shown | 132 |
| Power Supply and Ground Circuit Inspection for NAVI Control Unit | 110 | A/C Screen Is Not Shown (NAVI Screen Is Shown) | 133 |
| Power Supply and Ground Circuit Inspection for Display Control Unit | 111 | FUEL ECONOMY Screen Is Not Shown | 133 |
| Power Supply and Ground Circuit Inspection for Display Unit | 112 | Average Fuel Economy Display Is Not Shown (" *** " Is Shown) | 133 |
| Power Supply and Ground Circuit Inspection for AV Switch | 113 | Distance to Empty Display Is Not Shown (" *** " Is Shown) | 133 |
| Vehicle Speed Signal Inspection for NAVI Control Unit | 114 | Driving Distance or Average Speed Display Is Not Shown (" *** " Is Shown) | 134 |
| Vehicle Speed Signal Inspection for Display Control Unit | 115 | WARNING DOOR OPEN Screen Is Not Shown .. | 134 |
| Illumination Signal Inspection for NAVI Control Unit | 116 | Unable to Operate All of AV Switches (Unable to Start Self-Diagnosis) | 134 |
| Illumination Signal Inspection for Display Control Unit | 116 | Audio Does Not Work | 135 |
| Ignition Signal Inspection for NAVI Control Unit .. | 117 | Navigation System Does Not Activate | 135 |
| Ignition Signal Inspection for Display Control Unit .. | 117 | Previous NAVI Conditions Are Not Stored | 135 |
| Reverse Signal Inspection for NAVI Control Unit .. | 117 | Previous Vehicle Conditions Are Not Stored | 135 |
| Reverse Signal Inspection for Display Control Unit .. | 118 | Position of Current Location Mark Is Not Correct .. | 135 |
| AV Communication Line Check (Between Display Control Unit and NAVI Control Unit) | 118 | Radio Wave from GPS Satellite Is Not Received .. | 136 |
| Audio Communication Line Check (Between Display Control Unit and Audio Unit) | 119 | Driving Test | 136 |
| Display Communication Line Check (Between Display Control Unit and Display Unit) | 121 | Example of Symptom Judged Not Malfunction | 137 |
| AV Communication Line Check (Between Display Control Unit and AV Switch) | 122 | Program Loading of NAVI Control Unit | 145 |
| CAN Communication Line Check | 123 | Removal and Installation | 145 |
| If NAVI Control Unit Detects That DVD-ROM Map Is Not Inserted | 123 | | |

PRECAUTIONS

< SERVICE INFORMATION >

SERVICE INFORMATION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000003533661

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

AV


PREPARATION

< SERVICE INFORMATION >

PREPARATION

Commercial Service Tool

INFOID:000000003533662
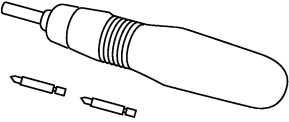
| Tool name | Description |
|--------------------------------------------------------------------------------------------------------------|--------------------------|
| Power tool  PBIC0191E | Loosening bolts and nuts |


AUDIO

< SERVICE INFORMATION >

AUDIO

Component Parts and Harness Connector Location

INFOID:000000003533663

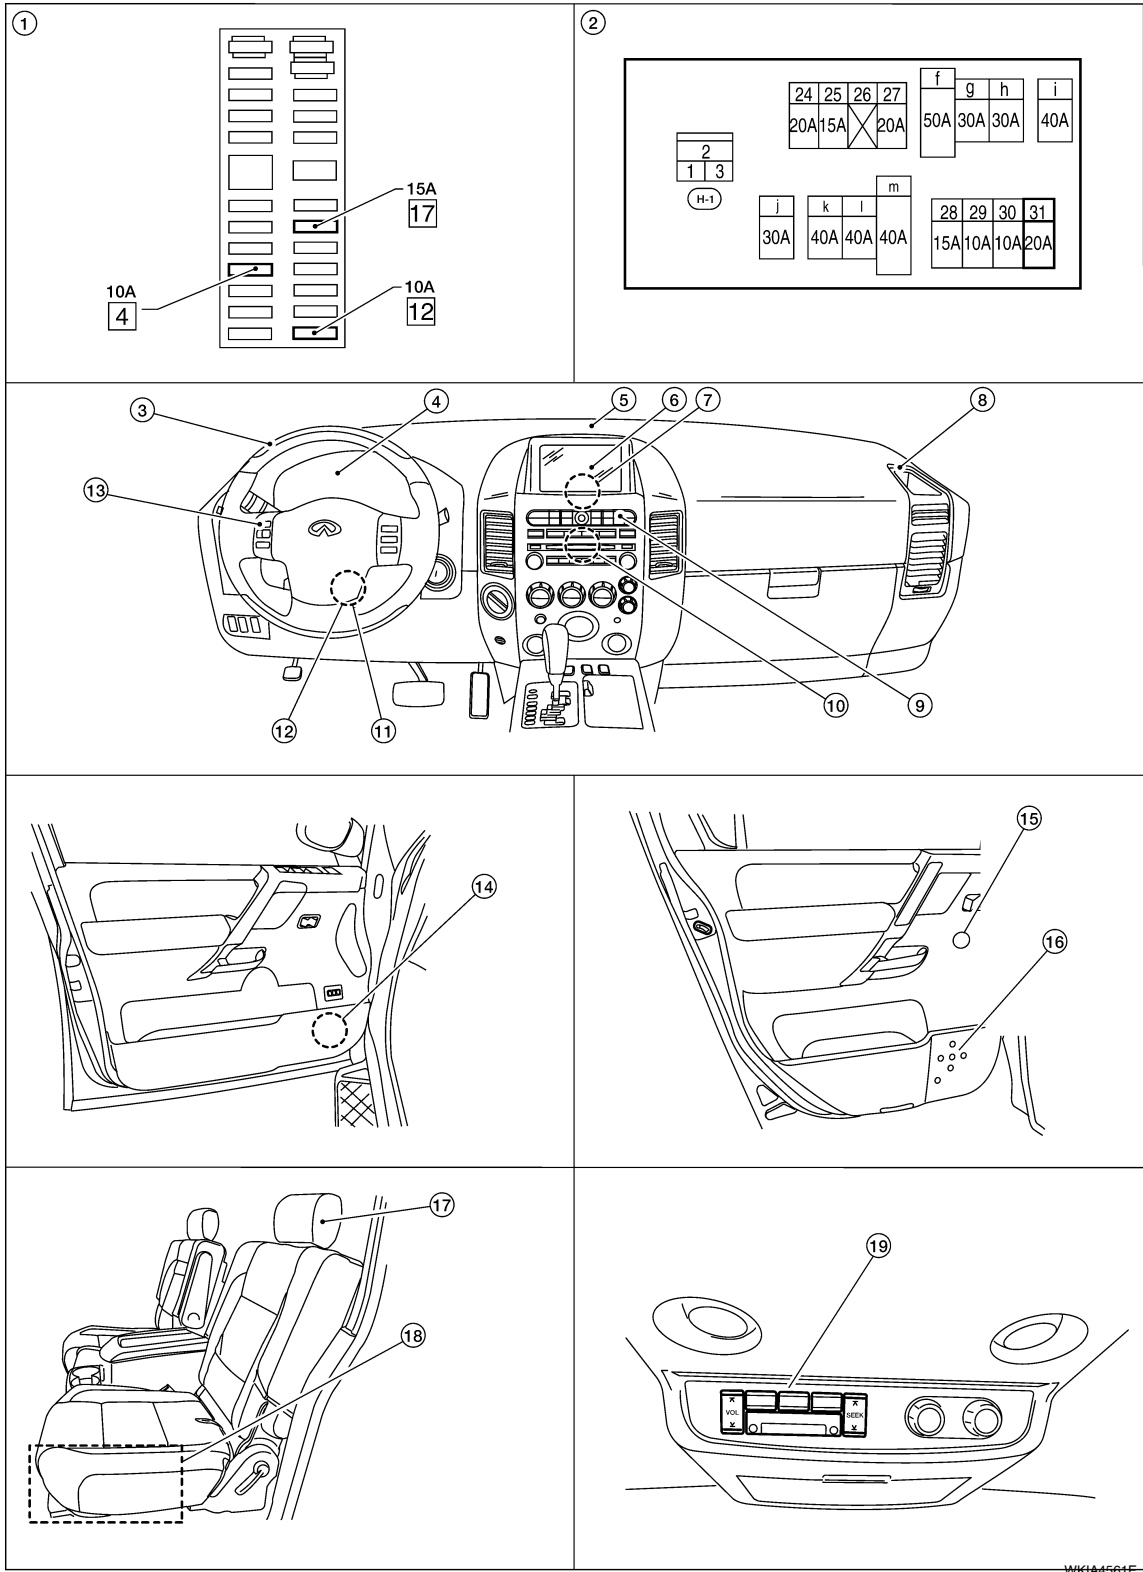

WKA4501E

AUDIO

< SERVICE INFORMATION >

| | | |
|--------------------------------------------|--------------------------------------------|------------------------------------------------------------------------------------|
| 7. Display control unit M94, M95 | 8. Front tweeter RH M111 | 9. AV Switch M98 |
| 10. Audio unit M43, M44, M45, M46 | 11. BOSE speaker amp M112, M113 | 12. Satellite radio tuner (pre-wiring or factory installed, if equipped) M41 |
| 13. Steering wheel audio control switches | 14. Front door speaker LH, RH D12, D112 | 15. Rear door tweeter LH, RH D208, D308 |
| 16. Rear door speaker LH, RH D207, D307 | 17. Driver seat | 18. Subwoofer B72 |
| 19. Rear audio remote control unit R204 | | |

System Description

INFOID:000000003533664

Refer to Owner's Manual for audio system operating instructions.

Power is supplied at all times

- through 15A fuse [No. 17, located in the fuse block (J/B)]
- to subwoofer terminal 6
- through 20A fuse [No. 31, located in the fuse and fusible link box]
- to audio unit terminal 6
- to BOSE speaker amp. terminal 1
- to AV switch terminal 1 and
- to display control unit terminal 1.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to audio unit terminal 10 and
- to AV switch terminal 2 and
- to display control unit terminal 10.

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse [No. 12, located in the fuse block (J/B)]
- to display control unit terminal 12.

Ground is supplied through the case of the audio unit.

Ground is also supplied

- to subwoofer terminal 5
- through body grounds B7 and B19 and
- to BOSE speaker amp. terminal 17
- to AV switch terminal 5 and
- to display unit terminal 1 and
- to display control unit terminal 3
- through body grounds M57, M61 and M79.

Then audio signals are supplied

- through audio unit terminals 1, 2, 3, 4, 13, 14, 15 and 16
- to BOSE speaker amp. terminals 23, 24, 25, 26, 27, 28, 29 and 30.

Audio signals are amplified by the BOSE speaker amp.

The amplified audio signals are supplied

- through BOSE speaker amp. terminals 2, 3, 9, 10, 11, 12, 13, 14, 15, 16, 18 and 19
- to terminals + and - of front door speaker LH and RH and
- to terminals + and - of front tweeter LH and RH and
- to terminals + and - of center speaker and
- to terminals + and - of rear door speaker LH and RH and
- to terminals + and - of rear door tweeter LH and RH and
- to terminals 1 and 2 of subwoofer.

When one of steering wheel audio control switches is pushed, the resistance in steering switch circuit changes depending on which button is pushed.

Rear Audio Remote Control Unit

Power is supplied

- from audio unit terminal 32
- to rear audio remote control unit terminal 13.

Ground is supplied

- to rear audio remote control unit terminal 15

AUDIO

< SERVICE INFORMATION >

- through body grounds B117 and B132.
- Audio signals are supplied
- through audio unit terminals 26, 27, 28 and 29
- to terminals 1, 2, 3, and 4 of rear audio remote control unit.

Satellite Radio Tuner (Pre-wiring)

NOTE:

The satellite radio pre-wiring allows connection of a satellite radio tuner.

Power is supplied at all times

- through 20A fuse [No. 31, located in the fuse and fusible link box]
- to satellite radio tuner terminal 32.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to satellite radio tuner terminal 36.

Audio signals are supplied

- through satellite radio tuner terminals 21, 22, 23 and 24
- to terminals 41, 42, 43 and 44 of audio unit.

Ground is supplied through the case of the satellite radio tuner.

Satellite Radio Tuner (Factory Installed)

NOTE:

Factory installed satellite radio systems may be identified by the location of the satellite radio tuner (factory installed) antenna. Factory installed satellite radio antennas are installed on the front of the roof. Dealer installed antennas may be installed anywhere on the roof.

Power is supplied at all times

- through 20A fuse [No. 31, located in the fuse and fusible link box]
- to satellite radio tuner (factory installed) terminal 32.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to satellite radio tuner (factory installed) terminal 36.

Radio signals are supplied from the satellite radio antenna to satellite radio tuner (factory installed) terminal 37.

Audio signals are supplied

- through satellite radio tuner (factory installed) terminals 21, 22, 23 and 24
- to terminals 41, 42, 43 and 44 of audio unit.

Ground is supplied through the case of the satellite radio tuner (factory installed).

SPEED SENSITIVE VOLUME SYSTEM

Volume level of this system goes up and down automatically in proportion to the vehicle speed. The control level can be selected by the customer. Refer to Owner's Manual for operating instructions.


A
B
C
D
E
F
G
H
I
J
AV
L
M
N
O
P

AUDIO

< SERVICE INFORMATION >

Schematic





INFOID:000000003533665

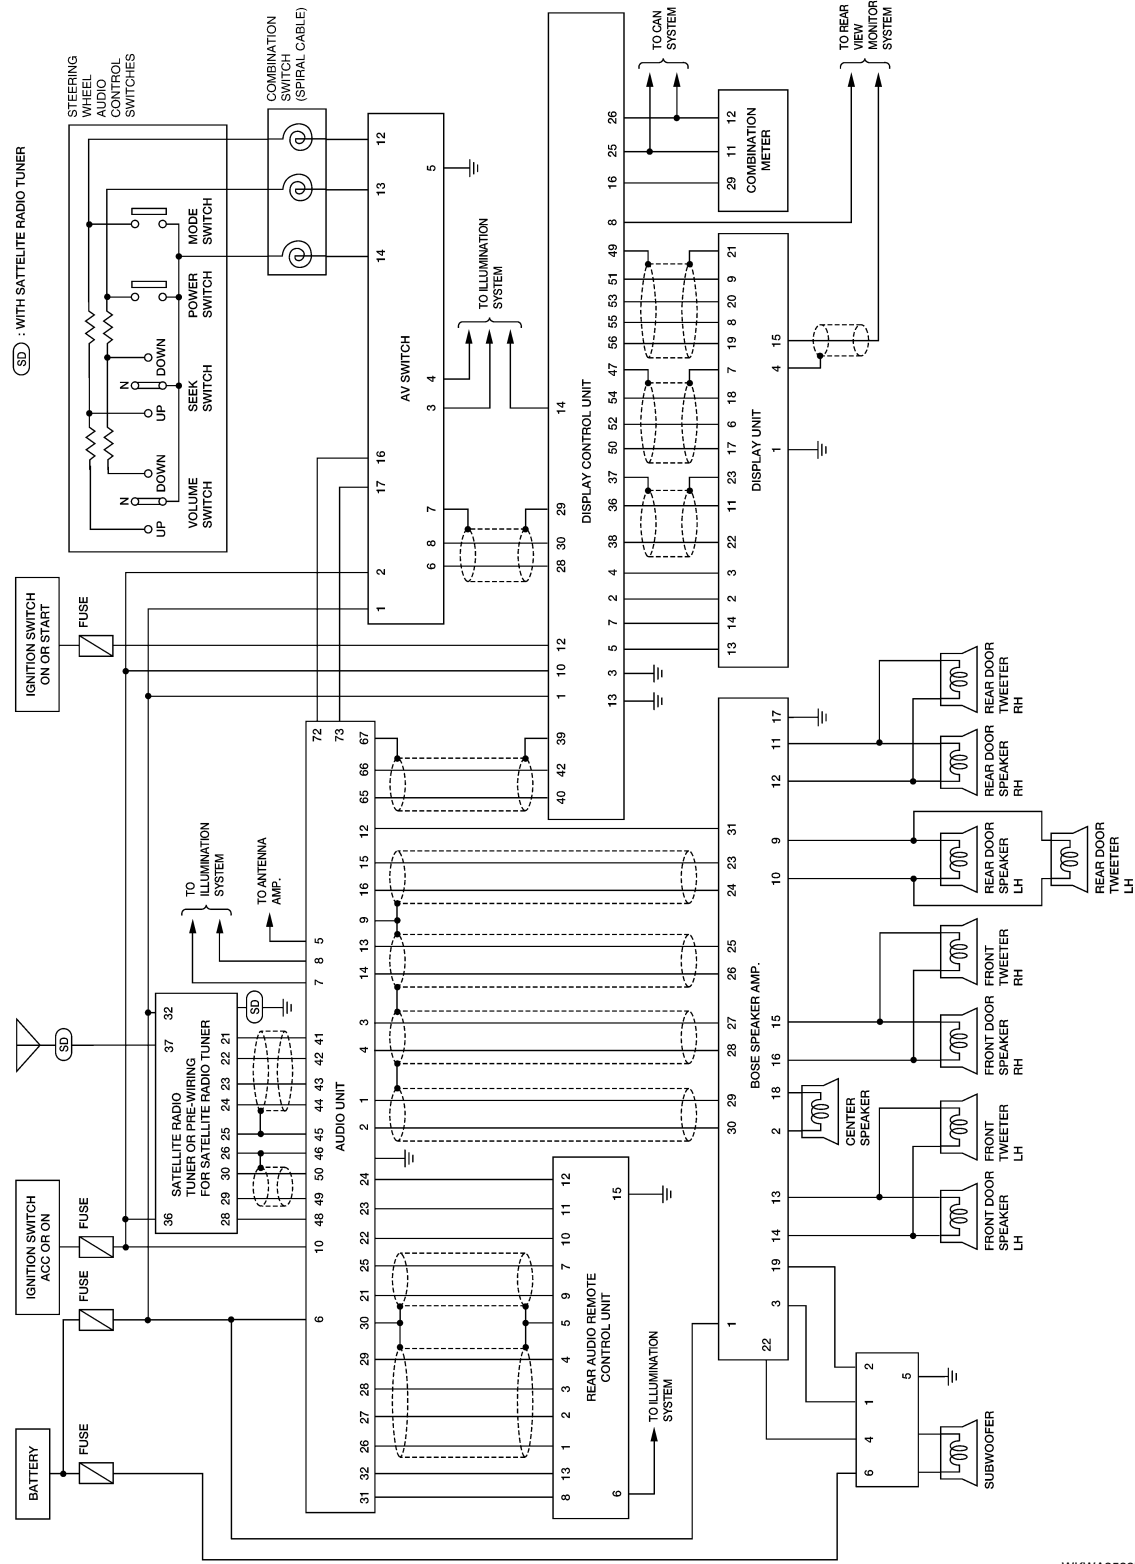

< SERVICE INFORMATION >



Wiring Diagram - AUDIO -

INFOID:0000000003533666

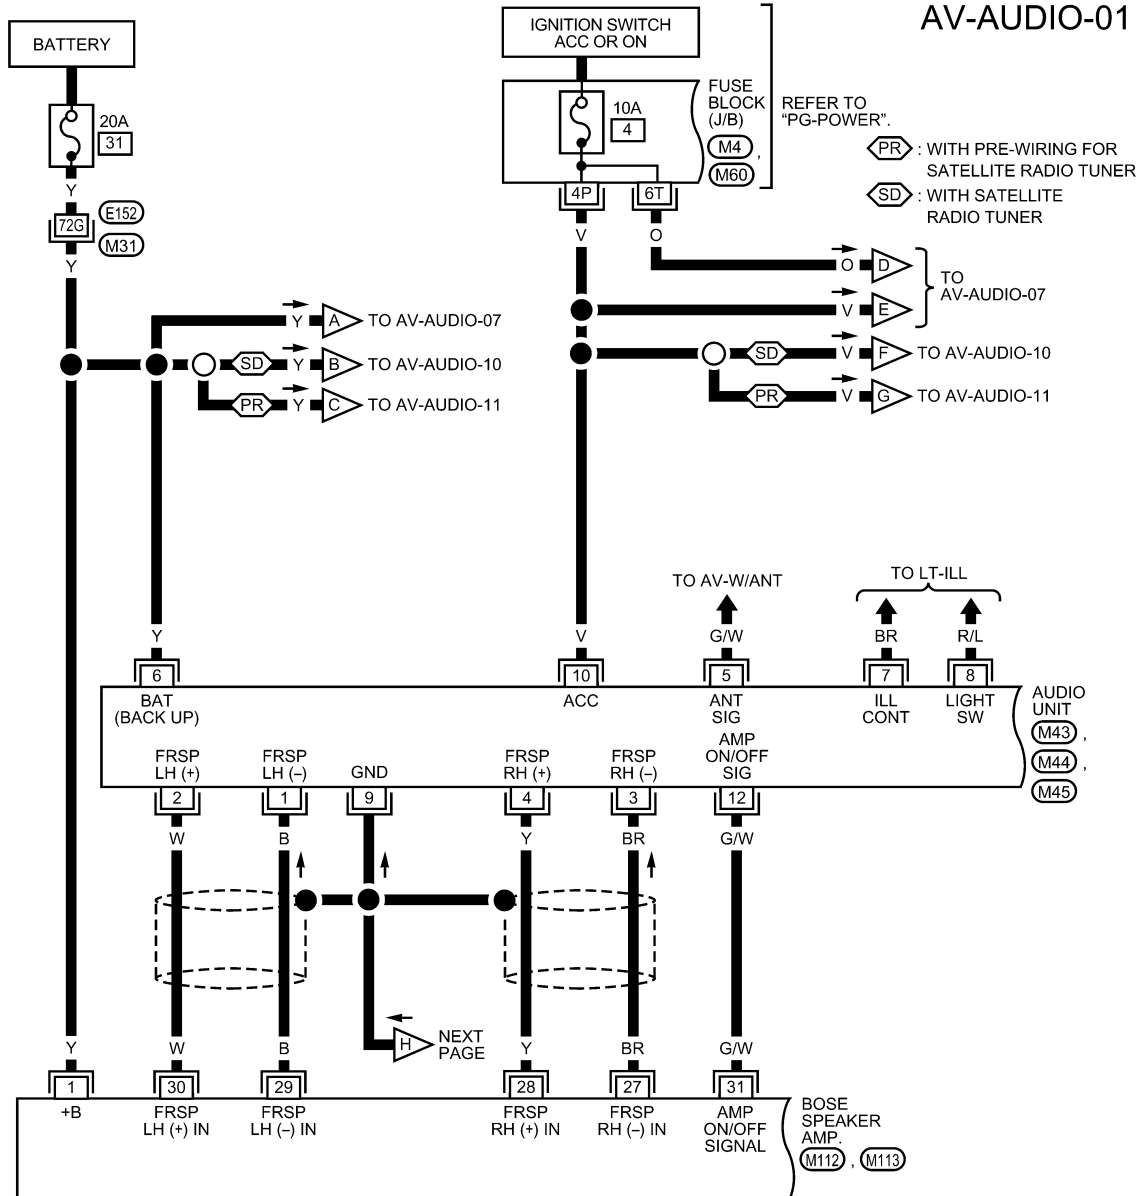

REFER TO THE FOLLOWING.
(M31) - SUPER MULTIPLE
 JUNCTION (SMJ)



AWNWA0326G

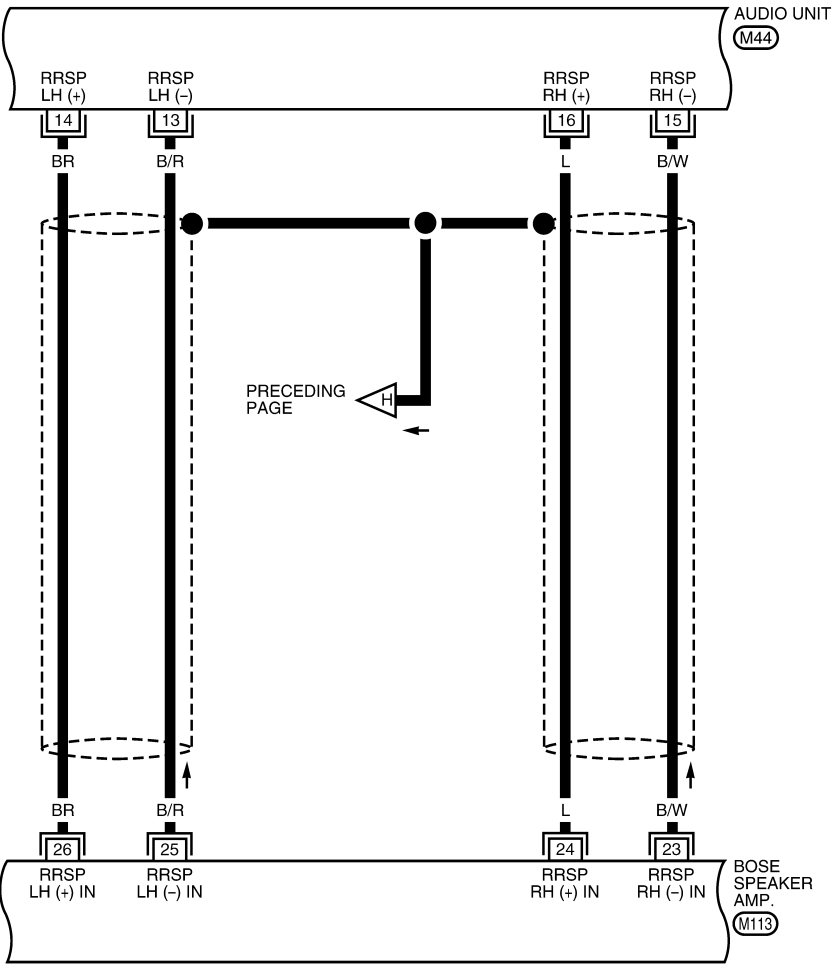

WKWA3585E

< SERVICE INFORMATION >

AV-AUDIO-03

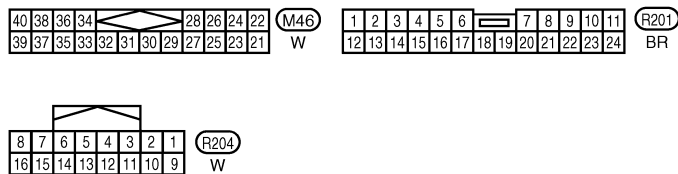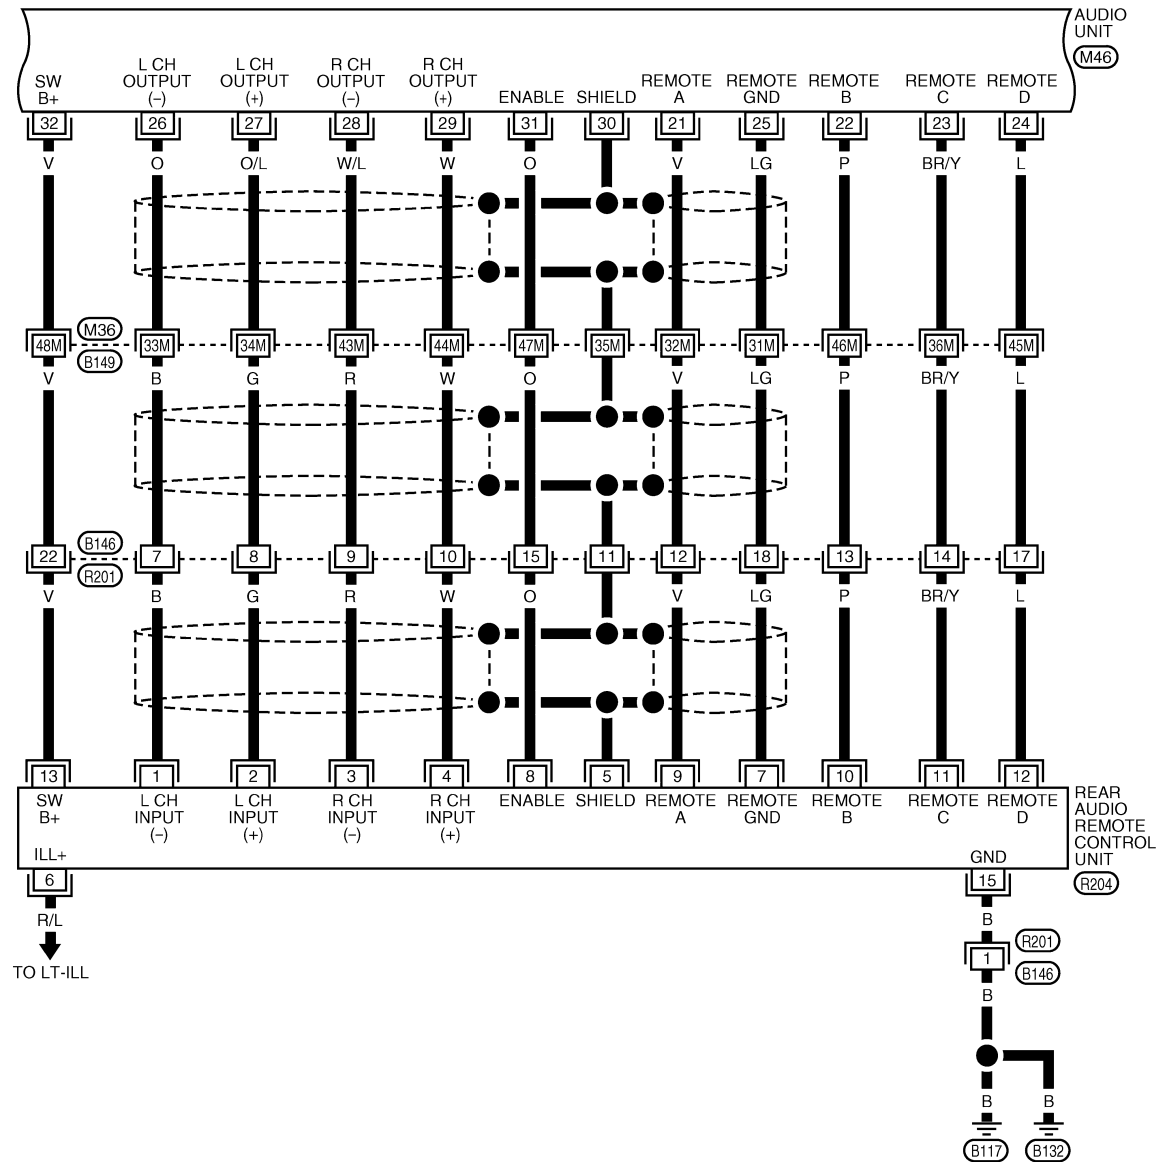

REFER TO THE FOLLOWING.



(M36) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA1237E



AUDIO

< SERVICE INFORMATION >

AV-AUDIO-04

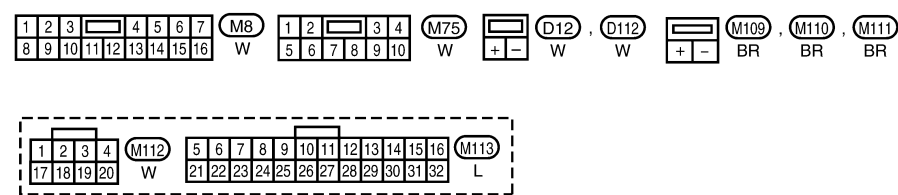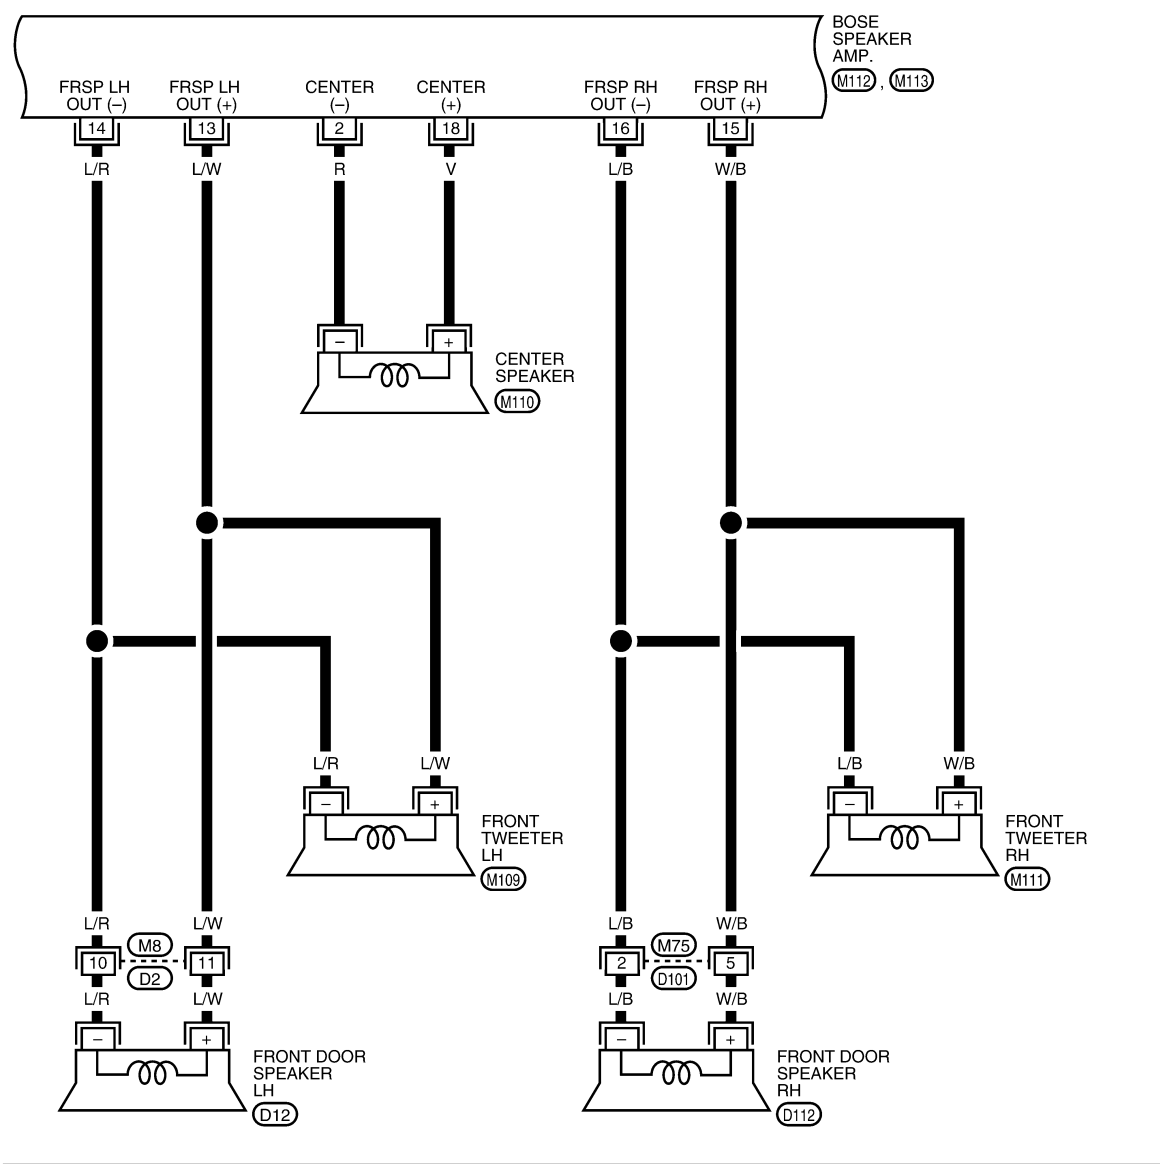


WKWA5149E

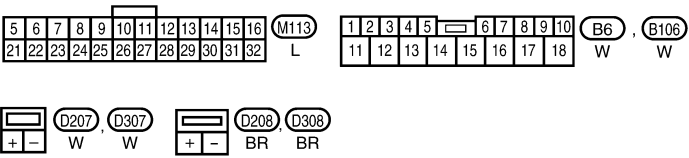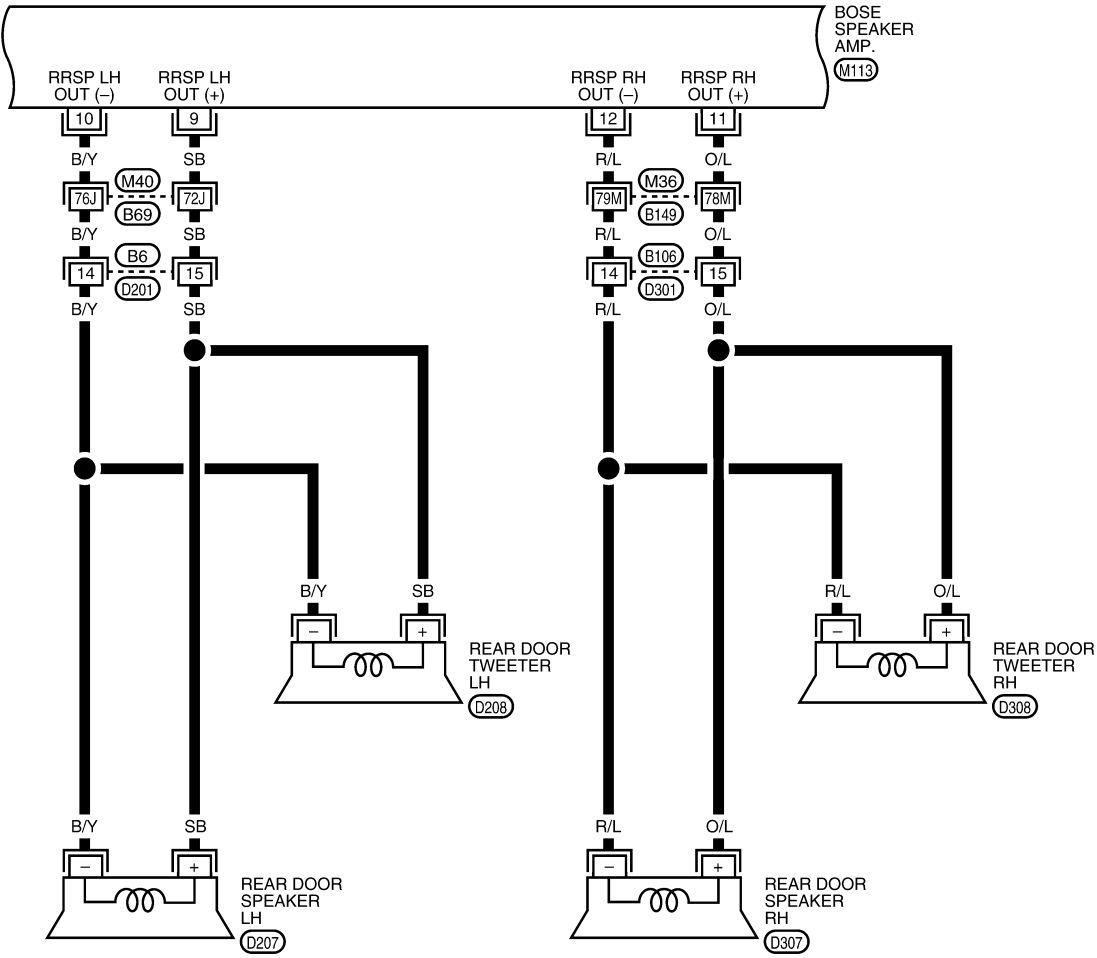

REFER TO THE FOLLOWING.
(M36), (M40) - SUPER
MULTIPLE JUNCTION (SMJ)

< SERVICE INFORMATION >


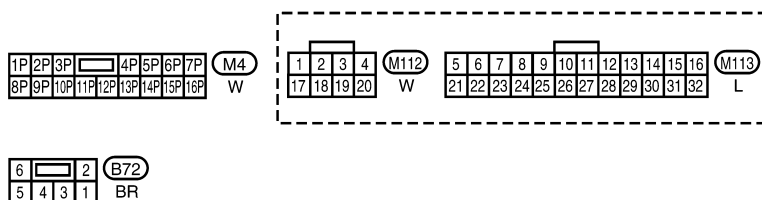


(M40) - SUPER MULTIPLE JUNCTION (SMJ)

AUDIO

< SERVICE INFORMATION >

AV-AUDIO-07



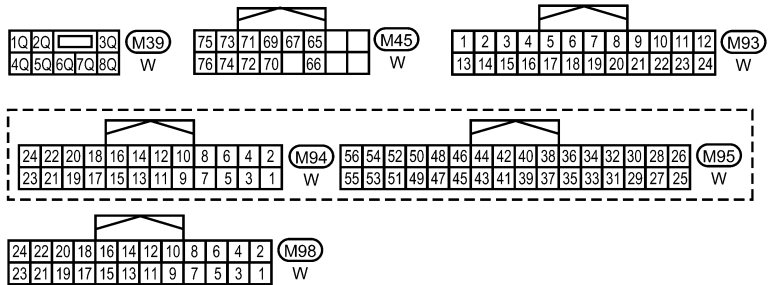
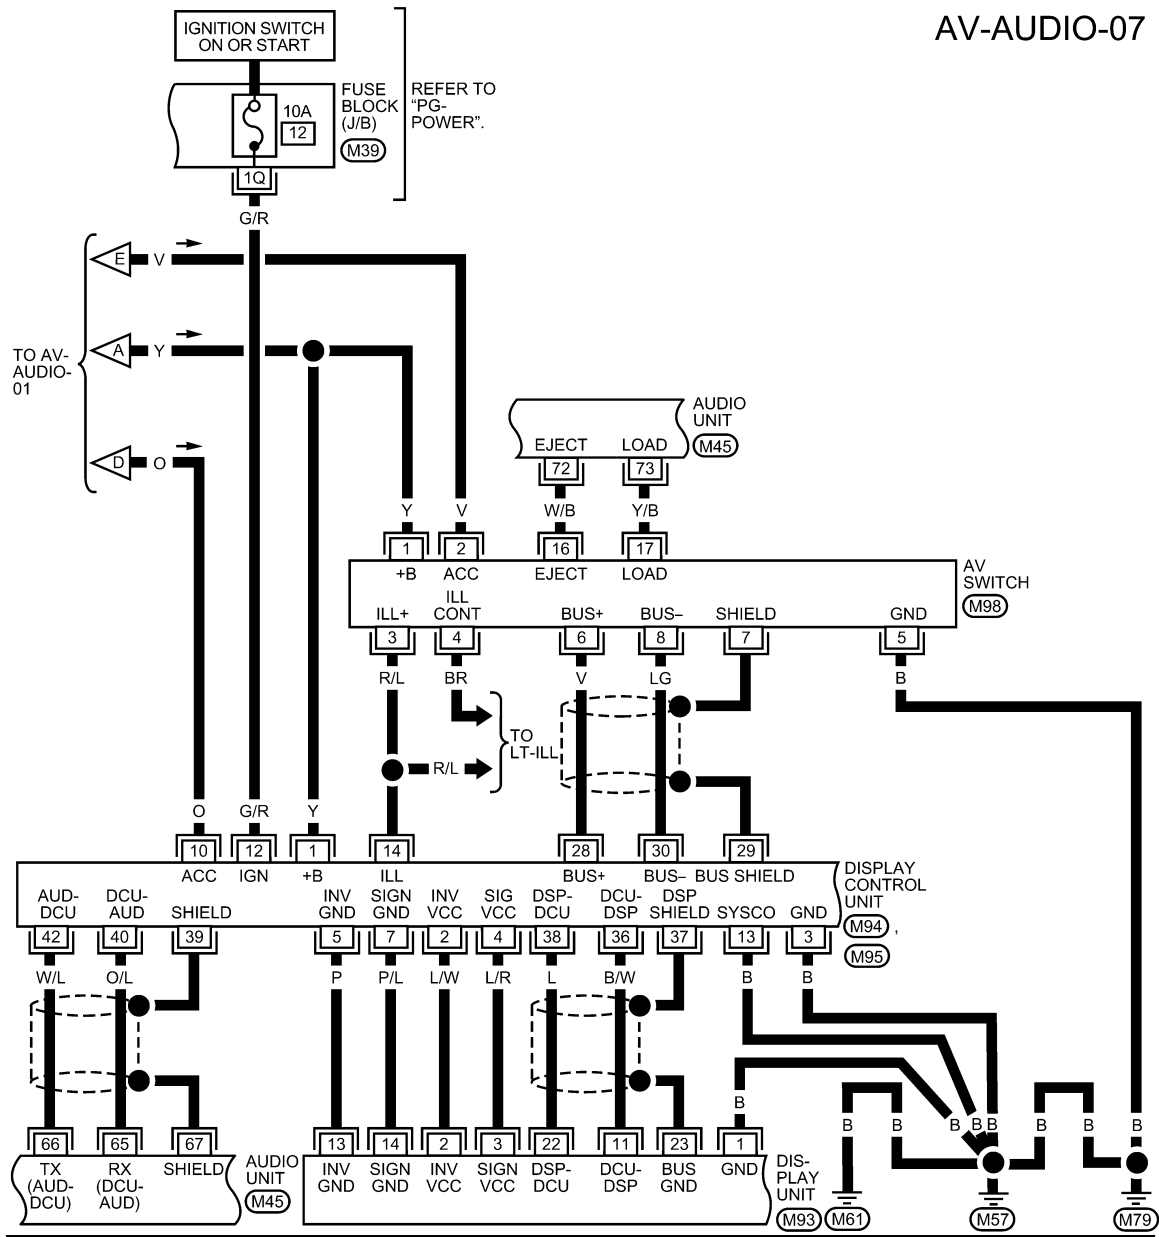


AWNWA0327G

AUDIO

< SERVICE INFORMATION >

AV-AUDIO-08

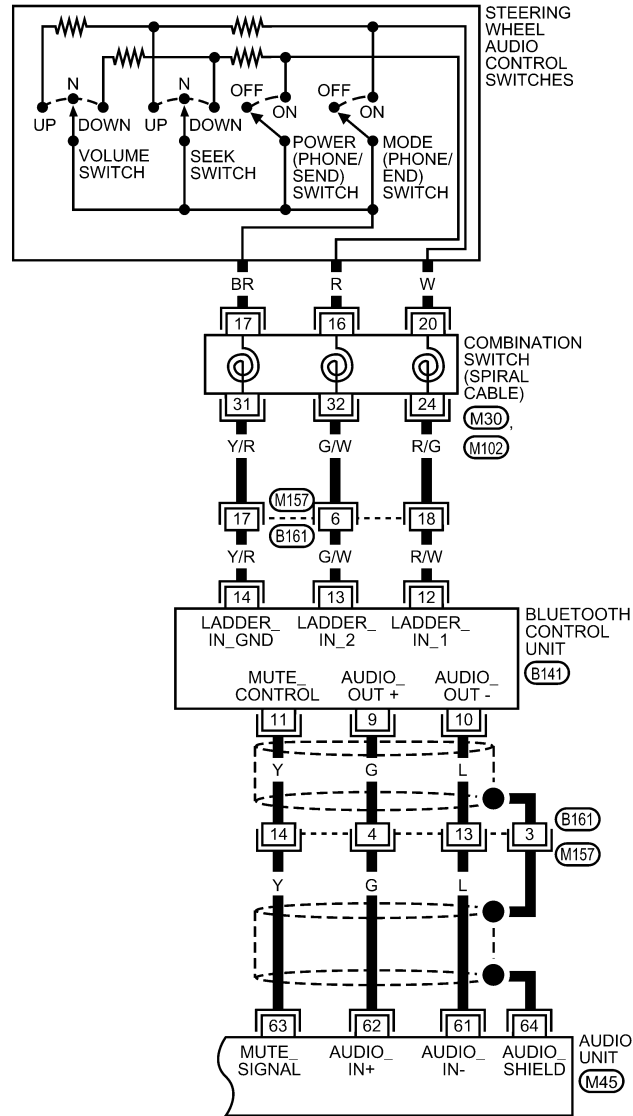


*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

AWNWA0328G

AUDIO

< SERVICE INFORMATION >

AV-AUDIO-09


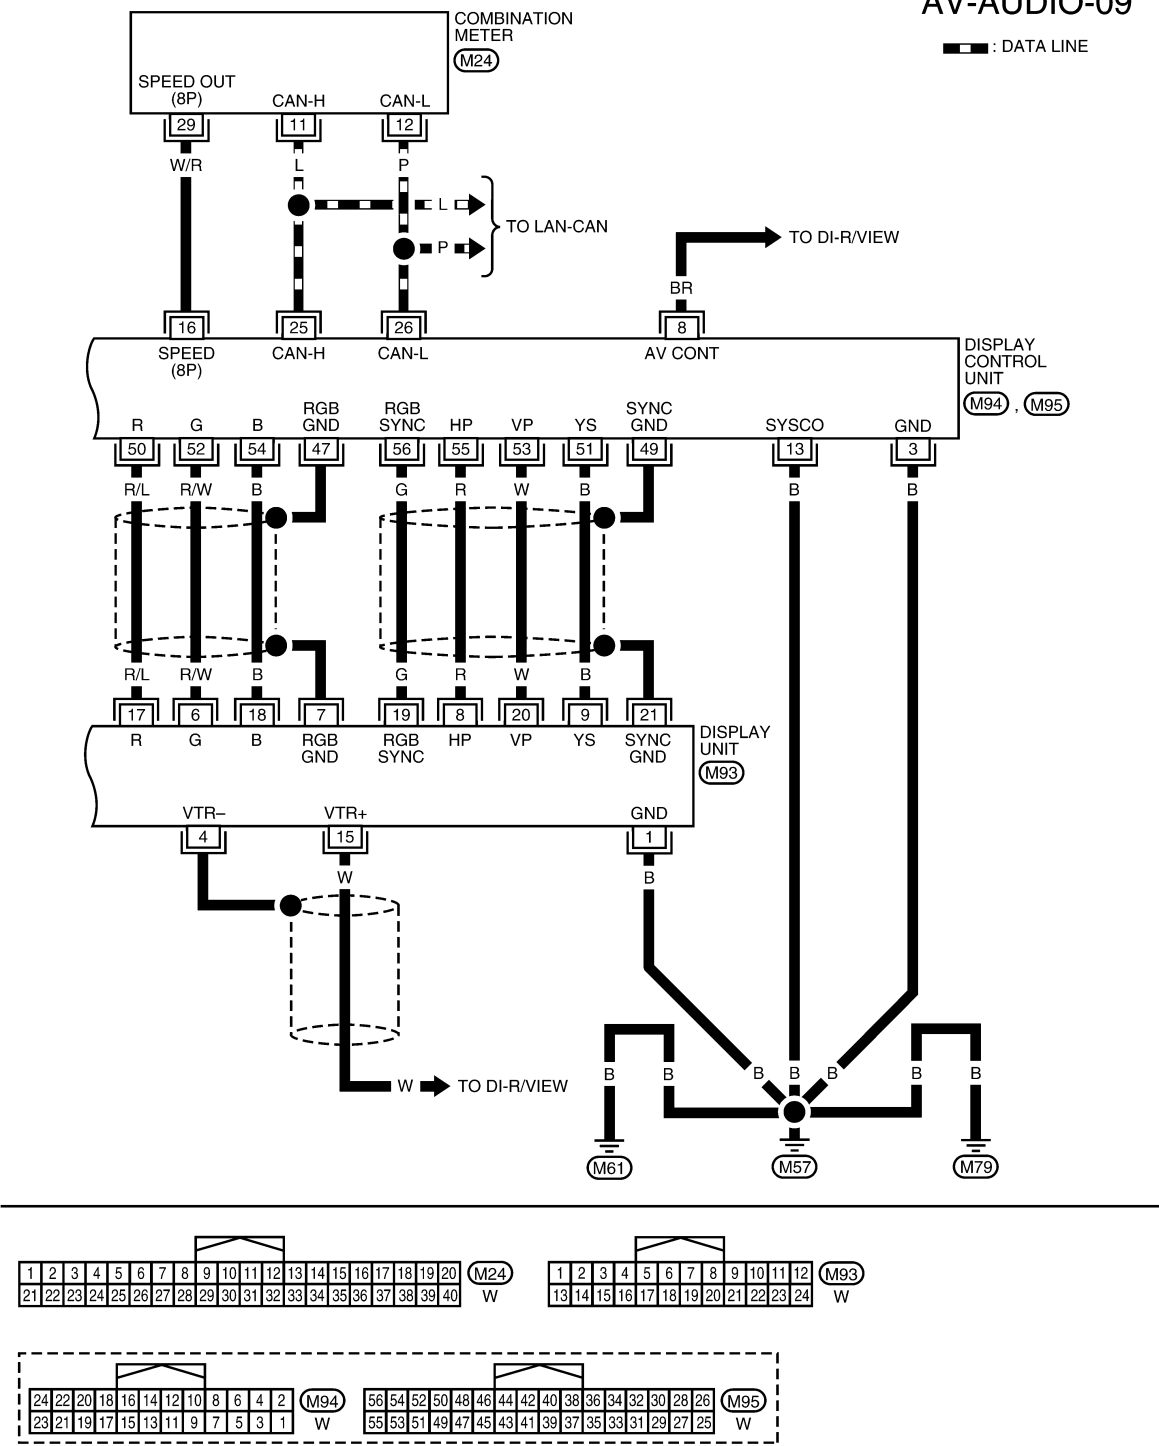


AV

AUDIO


< SERVICE INFORMATION >

AV-AUDIO-10

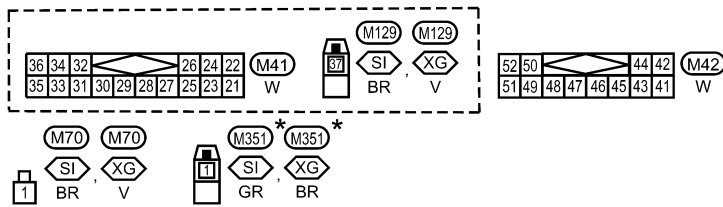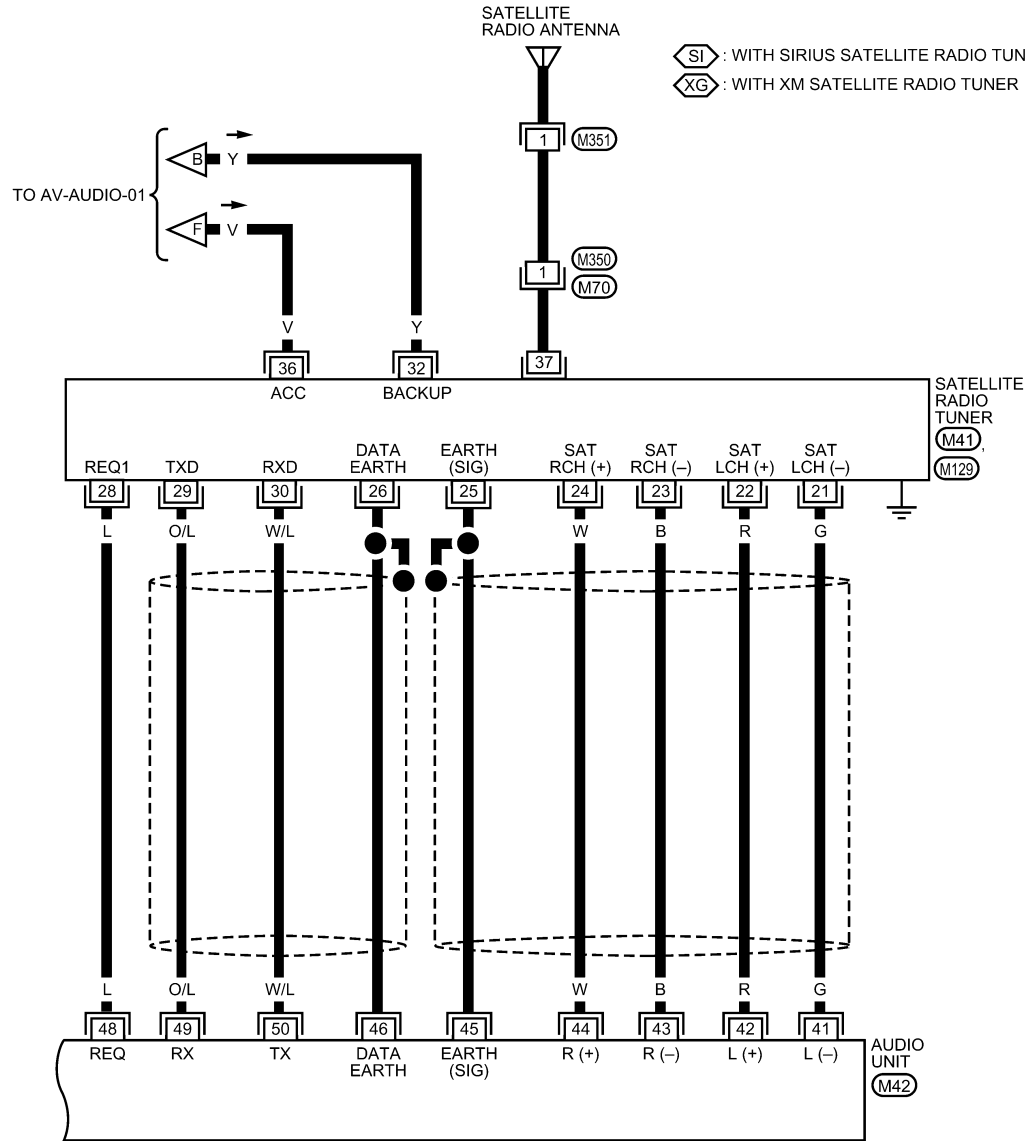

* : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

AWNWA0330G

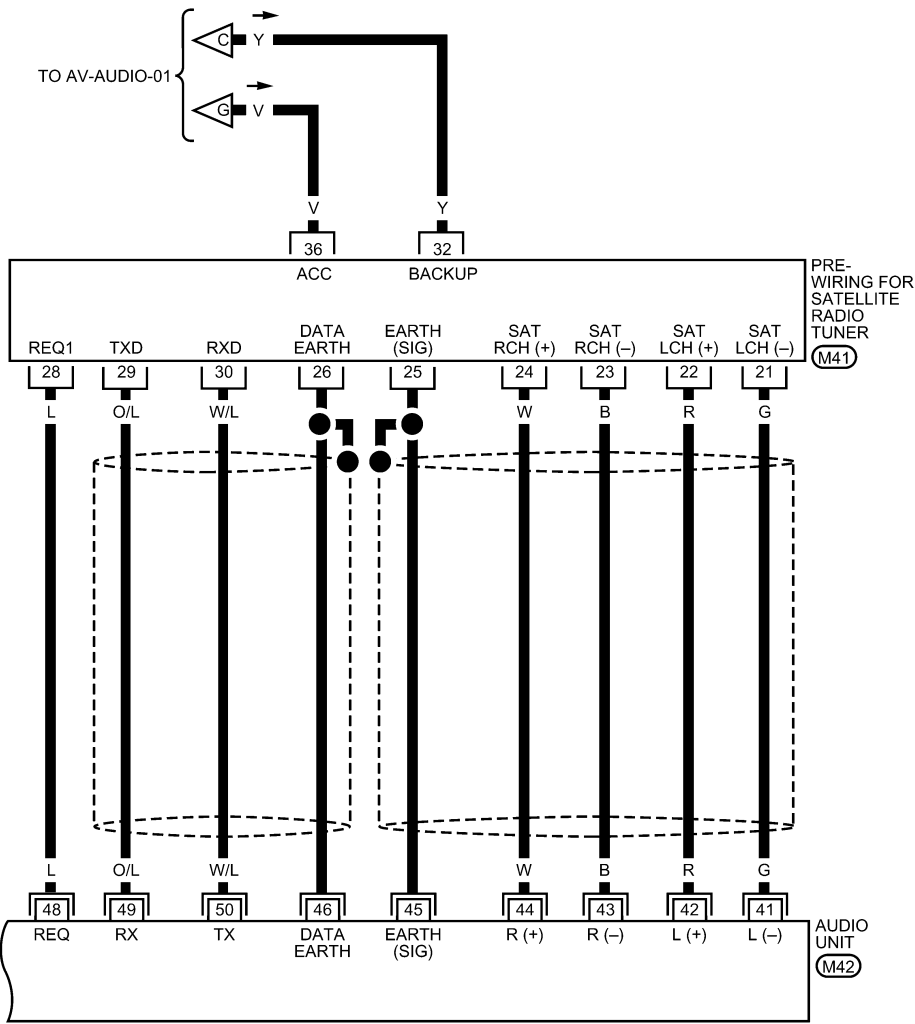




| | | | | | | | | | | | | | | | | | | | |
|----|----|----|-------------------------------------------------------------------------------------|----|----|----|----|----|----|-----|----|----|-------------------------------------------------------------------------------------|----|----|----|----|----|-----|
| 36 | 34 | 32 | | | | | 26 | 24 | 22 | M41 | 52 | 50 | | | | | 44 | 42 | M42 |
| 35 | 33 | 31 | 30 | 29 | 28 | 27 | 25 | 23 | 21 | W | 51 | 49 | 48 | 47 | 46 | 45 | 43 | 41 | W |

AUDIO

< SERVICE INFORMATION >




Terminal and Reference Value for Audio Unit

INFOID:000000003533667
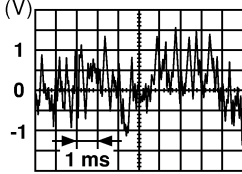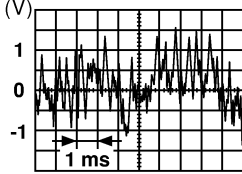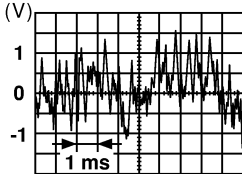
| Terminal (Wire color) | | Item | Signal input/ output | Condition | | Reference value (Approx.) | Example of symptom |
|--------------------------|----------|-------------------------------------|----------------------------|--------------------|-----------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|
| + | – | | | Ignition switch | Operation | | |
| 2 (W) | 1 (B) | Audio sound signal front LH | Output | ON | Receive audio signal |  SKIA0177E | No sound from front door speaker LH or tweeter LH. |
| 4 (Y) | 3 (BR) | Audio sound signal front RH | Output | ON | Receive audio signal |  SKIA0177E | No sound from front door speaker RH or tweeter RH. |
| 5 (G/W) | Ground | Antenna signal | Output | ON | – | More than 10V | Poor radio reception. |
| 6 (Y) | Ground | Battery pow- er | Input | – | – | Battery voltage | System does not work properly. |
| 7 (BR) | Ground | Illumination control sig- nal | Input | ON | Illumination con- trol switch is op- erated by lighting switch in 1st posi- tion. | Changes between 0 and 12V | Audio unit illumina- tion cannot be con- trolled. |
| 8 (R/L) | Ground | Illumination signal | Input | OFF | Lighting switch is in 1st position. | Battery voltage | Audio unit illumina- tion does not come on when lighting switch is in 1st posi- tion. |
| | | | | | Lighting switch is OFF. | 3V or less | |
| 9 | – | Shield | – | – | – | 0V | Interference and dis- tortion heard from speakers. |
| 10 (V) | Ground | ACC signal | Input | ON | – | Battery voltage | System does not work properly. |
| 12 (G/W) | Ground | Amp. ON signal | Output | ON | – | More than 6.5V | Amp. does not work properly. |
| 14 (BR) | 13 (B/R) | Audio sound signal rear LH | Output | ON | Receive audio signal |  SKIA0177E | No sound from rear door speaker LH or rear door tweeter LH. |

AUDIO

< SERVICE INFORMATION >
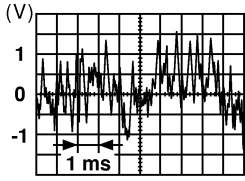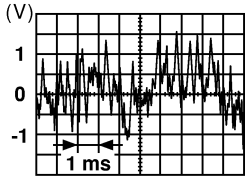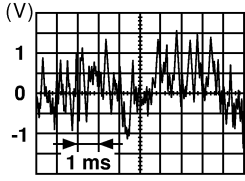
| Terminal (Wire color) | | Item | Signal input/ output | Condition | | Reference value (Approx.) | Example of symptom |
|--------------------------|----------|-----------------------------------------------|----------------------------|--------------------|-------------------------|---------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| + | - | | | Ignition switch | Operation | | |
| 16 (L) | 15 (B/W) | Audio sound signal rear RH | Output | ON | Receive audio signal |  SKIA0177E | No sound from rear door speaker RH or rear door tweeter RH. |
| 21 (V) | Ground | Remote control A | Output | ON | Audio unit ON | 5V | Rear audio remote control unit does not operate properly. |
| 22 (P) | Ground | Remote control B | Output | ON | Audio unit ON | 5V | Rear audio remote control unit does not operate properly. |
| 23 (BR/Y) | Ground | Remote control C | Output | ON | Audio unit ON | 5V | Rear audio remote control unit does not operate properly. |
| 24 (L) | Ground | Remote control D | Output | ON | Audio unit ON | 5V | Rear audio remote control unit does not operate properly. |
| 25 (LG) | - | Remote control ground | - | - | - | 0V | Rear audio remote control switches do not function. |
| 27 (O/L) | 26 (O) | Audio sound signal LH | Output | ON | Receive audio signal |  SKIA0177E | No sound from LH headphone channel. |
| 29 (W) | 28 (W/L) | Audio sound signal RH | Output | ON | Receive audio signal |  SKIA0177E | No sound from RH headphone channel. |
| 30 | - | Shield | - | - | - | 0V | Interference and dis- tortion heard from headphones or rear audio remote control unit switches not op- erating properly. |
| 31 (O) | Ground | Remote control en- able signal | Output | ON | Audio unit ON | 5V | Rear audio remote control unit does not operate. |
| 32 (V) | Ground | Remote control switch pow- er supply | Output | ON | Audio unit ON | 12V | Rear audio remote control unit does not operate. |

A

B

C

D

E

F

G

H

I

J

AV

L

M






N

O

P



AUDIO

< SERVICE INFORMATION >
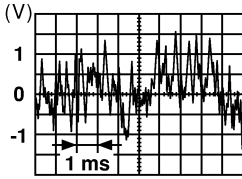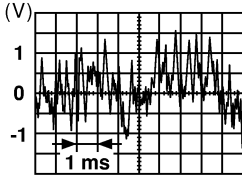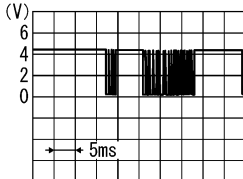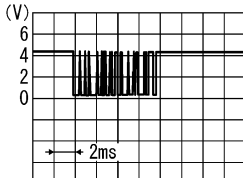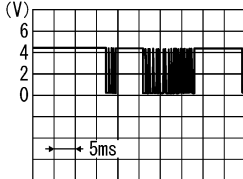
| Terminal (Wire color) | | Item | Signal input/ output | Condition | | Reference value (Approx.) | Example of symptom |
|--------------------------|--------|------------------------------------------------------------------------------|----------------------------|--------------------|-------------------------|---------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------|
| + | - | | | Ignition switch | Operation | | |
| 42 (R) | 41 (G) | Audio left channel sound signal from satel- lite radio tuner | Input | ON | Receive audio signal |  SKIA0177E | No sound from satel- lite radio tuner left channel. |
| 44 (W) | 43 (B) | Audio right channel sound signal from satel- lite radio tuner | Input | ON | Receive audio signal |  SKIA0177E | No sound from satel- lite radio tuner right channel. |
| 45 | - | Shield ground (au- dio signal) | - | - | - | 0V | - |
| 46 | - | Shield ground (da- ta) | - | - | - | 0V | - |
| 48 (L) | Ground | Satellite ra- dio tuner re- quest to audio unit | Input | ON | Turn audio unit ON | 5V | Satellite radio tuner does not operate properly. |
| 49 (O/L) | Ground | Audio RX | Input | ON | Operate audio volume |  SKIA4403E | Satellite radio tuner audio information does not display properly. |
| 50 (W/L) | Ground | Audio TX | Output | ON | Operate audio volume |  SKIA4402E | Satellite radio tuner audio information does not display properly. |
| 65 (O/L) | Ground | Audio RX | Input | ON | Operate audio volume |  SKIA4403E | Audio does not oper- ate properly. |



AUDIO

< SERVICE INFORMATION >
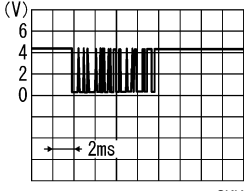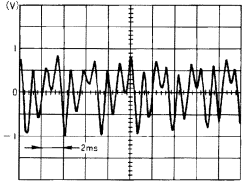
| Terminal (Wire color) | | Item | Signal input/ output | Condition | | Reference value (Approx.) | Example of symptom |
|--------------------------|--------|-----------------------|----------------------------|--------------------|---------------------------------------|-------------------------------------------------------------------------------------------------|-----------------------------------------------------|
| + | - | | | Ignition switch | Operation | | |
| 66 (W/L) | Ground | Audio TX | Output | ON | Operate audio volume |  SKIA4402E | Audio does not operate properly. |
| 67 | - | Shield | - | ON | - | 0V | Interference and distortion heard from speakers. |
| 70 | - | Shield | - | - | - | 0V | Interference and distortion heard from speakers. |
| 71 (B) | 69 (W) | Voice guide signal | Output | ON | Press the "GUIDE/VOICE" button. |  SKIA0171J | Only route guide and operation guide are not heard. |
| 72 (W/B) | Ground | CD eject signal | Input | ON | Operate EJECT button | 0V→5V | CD will not eject from audio unit. |
| 73 (Y/B) | Ground | CD load signal | Input | ON | Operate LOAD button | 0V→5V | CD will not load into audio unit. |







Terminal and Reference Value for BOSE Speaker Amp

INFOID:000000003533668
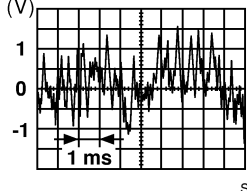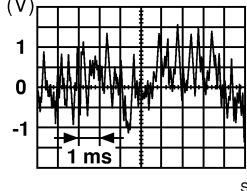
| Terminal (wire color) | | Item | Signal input/ output | Condition | | Reference value (Approx.) | Example of symptom |
|--------------------------|----------|--------------------------------------------------------|----------------------------|--------------------|-------------------------|---------------------------------------------------------------------------------------------------|-------------------------------------------------------------|
| + | - | | | Ignition switch | Operation | | |
| 1 (Y) | Ground | Battery | Input | - | - | Battery voltage | System does not work properly. |
| 9 (SB) | 10 (B/Y) | Rear door speaker LH and rear door tweeter LH | Output | ON | Receive audio signal |  SKIA0177E | No sound from rear door speaker LH or rear door tweeter LH. |
| 11 (O/L) | 12 (R/L) | Rear door speaker RH and rear door tweeter RH | Output | ON | Receive audio signal |  SKIA0177E | No sound from rear door speaker RH or rear door tweeter RH. |



AUDIO

< SERVICE INFORMATION >
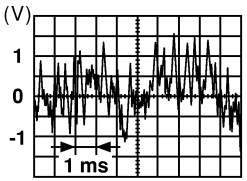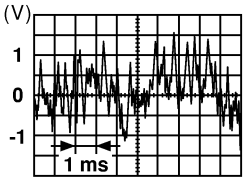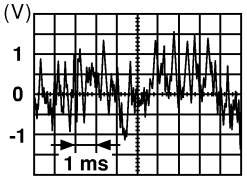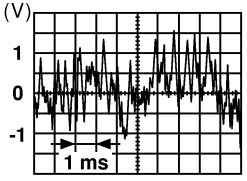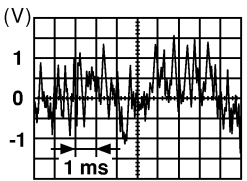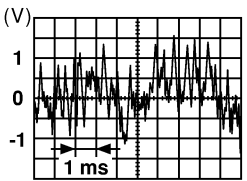
| Terminal (wire color) | | Item | Signal input/ output | Condition | | Reference value (Approx.) | Example of symptom |
|--------------------------|----------|-----------------------------------------------------|----------------------------|--------------------|-------------------------|---------------------------------------------------------------------------------------------------|------------------------------------------------------------------------|
| + | - | | | Ignition switch | Operation | | |
| 13 (L/W) | 14 (L/R) | Front door speaker LH and front tweeter LH | Output | ON | Receive audio signal |  SKIA0177E | No sound from front door speaker LH or front tweeter LH. |
| 15 (W/B) | 16 (L/B) | Front door speaker RH and front tweeter RH | Output | ON | Receive audio signal |  SKIA0177E | No sound from front door speaker RH or front tweeter RH. |
| 17 (B) | Ground | Ground | - | ON | - | - | - |
| 18 (V) | 2 (R) | Center speak- er | Output | ON | Receive audio signal |  SKIA0177E | No sound from center speaker. |
| 19 (W) | 3 (B) | Subwoofer | Output | ON | Receive audio signal |  SKIA0177E | No sound from subwoofer. |
| 22 (W/G) | Ground | Subwoofer ON signal | Input | ON | - | More than 6.5V | Subwoofer does not work properly. |
| 24 (L) | 23 (B/W) | Audio sound signal rear RH | Input | ON | Receive audio signal |  SKIA0177E | No sound from rear door speaker RH or rear door tweet- er RH. |
| 26 (BR) | 25 (B/R) | Audio sound signal rear LH | Input | ON | Receive audio signal |  SKIA0177E | No sound from rear door speaker LH or rear door tweeter LH. |



AUDIO

< SERVICE INFORMATION >
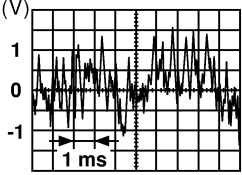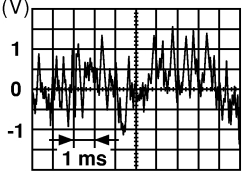
| Terminal (wire color) | | Item | Signal input/ output | Condition | | Reference value (Approx.) | Example of symptom |
|--------------------------|---------|--------------------------------|----------------------------|--------------------|-------------------------|-------------------------------------------------------------------------------------------------|-------------------------------------------------------------------|
| + | – | | | Ignition switch | Operation | | |
| 28 (Y) | 27 (BR) | Audio sound signal front RH | Input | ON | Receive audio signal |  SKIA0177E | No sound from front door speaker RH or front tweeter RH. |
| 30 (W) | 29 (B) | Audio sound signal front LH | Input | ON | Receive audio signal |  SKIA0177E | No sound from front door speaker LH or front tweeter LH. |
| 31 (G/W) | Ground | Amp. ON sig- nal | Input | ON | – | More than 6.5V | System does not work properly. |

Terminal and Reference Value for Rear Audio Remote Control Unit

INFOID:000000003533669
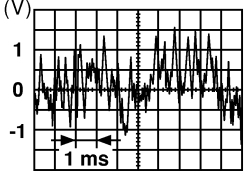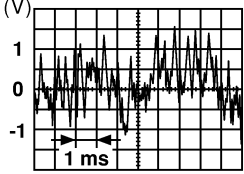
| Terminal (Wire color) | | Item | Signal input/ output | Condition | | Reference value (Approx.) | Example of symptom |
|--------------------------|--------|-----------------------------|----------------------------|--------------------|-------------------------|---------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| + | – | | | Ignition switch | Operation | | |
| 2 (G) | 1 (B) | Audio sound signal LH | Input | ON | Receive audio signal |  SKIA0177E | No sound from LH headphone channel. |
| 4 (W) | 3 (R) | Audio sound signal RH | Input | ON | Receive audio signal |  SKIA0177E | No sound from RH headphone channel. |
| 5 | – | Shield | – | – | – | 0V | Interference and dis- tortion heard from headphones or rear audio remote control unit switches not oper- ating properly. |
| 6 (R/L) | Ground | Illumination | Input | ON | Lighting switch ON | 12V | Rear audio remote control unit does not illuminate. |
| | | | | | Lighting switch OFF | 0V | |
| 7 (LG) | – | Remote control ground | – | – | – | 0V | Rear audio remote control unit switches do not function. |


AUDIO

< SERVICE INFORMATION >

| Terminal (Wire color) | | Item | Signal input/ output | Condition | | Reference value (Approx.) | Example of symptom |
|--------------------------|--------|-----------------------------------------------|----------------------------|--------------------|---------------|------------------------------|-----------------------------------------------------------------|
| + | – | | | Ignition switch | Operation | | |
| 8 (O) | Ground | Remote control en- able signal | Input | ON | Audio unit ON | 5V | Rear audio remote control unit does not operate. |
| 9 (V) | Ground | Remote control A | Input | ON | Audio unit ON | 5V | Rear audio remote control unit does not operate properly. |
| 10 (P) | Ground | Remote control B | Input | ON | Audio unit ON | 5V | Rear audio remote control unit does not operate properly. |
| 11 (BR/Y) | Ground | Remote control C | Input | ON | Audio unit ON | 5V | Rear audio remote control unit does not operate properly. |
| 12 (L) | Ground | Remote control D | Input | ON | Audio unit ON | 5V | Rear audio remote control unit does not operate properly. |
| 13 (V) | Ground | Remote control switch pow- er supply | Input | ON | Audio unit ON | 12V | Rear audio remote control does not op- erate. |
| 15 (B) | – | Ground | – | ON | – | 0V | – |


Terminal and Reference Value for AV Switch

INFOID:000000003533670
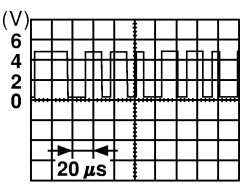
| Terminal No. (Wire color) | | Item | Signal input/ output | Condition | | Voltage (Approx.) | Example of symptom |
|------------------------------|--------|--------------------------------|----------------------------|--------------------|--------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|
| + | – | | | Ignition switch | Operation | | |
| 1 (Y) | Ground | Battery power | Input | OFF | – | Battery voltage | System does not work properly. |
| 2 (V) | Ground | ACC signal | Input | ACC | – | Battery voltage | System does not work properly. |
| 3 (R/L) | Ground | Illumination signal | Input | OFF | Lighting switch is ON (position 1). | Battery voltage | AV switch illumi- nation does not come on when lighting switch is ON (position 1). |
| | | | | | Turn lighting switch OFF. | Approx. 3.0V or less | |
| 4 (BR) | Ground | Illumination control signal | Input | ON | Illumination control switch is operated by lighting switch in 1st position. | Changes between 0 and 12V. | AV switch illumi- nation cannot be controlled. |
| 5 (B) | Ground | Ground | – | ON | – | 0V | – |
| 6 (V) | Ground | Communica- tion signal (+) | Input/ output | ON | – |  SKIA0175E | System does not work properly. |
| 7 | – | Shield ground | – | – | – | – | |

AUDIO

< SERVICE INFORMATION >
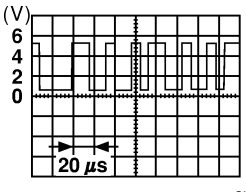
| Terminal No. (Wire color) | | Item | Signal input/ output | Condition | | Voltage (Approx.) | Example of symptom |
|------------------------------|--------|-------------------------------|----------------------------|--------------------|---------------------------|------------------------------------------------------------------------------------|------------------------------------------------------|
| + | - | | | Ignition switch | Operation | | |
| 8 (LG) | Ground | Communica- tion signal (-) | Input/ output | ON | - |  | System does not work properly. |
| 12 (R) | Ground | Remote con- trol A | Input | ON | Press MODE switch | 0V | Steering wheel audio controls do not function. |
| | | | | | Press SEEK UP switch | 0.75V | |
| | | | | | Press VOL UP switch | 2V | |
| | | | | | Except for above | 5V | |
| 13 (G) | Ground | Remote con- trol B | Input | ON | Press POWER switch | 0V | Steering wheel audio controls do not function. |
| | | | | | Press SEEK DOWN switch | 0.75V | |
| | | | | | Press VOL DOWN switch | 2V | |
| | | | | | Except for above | 5V | |
| 14 (L) | - | Remote con- trol ground | - | - | - | - | Steering wheel audio controls do not function. |
| 16 (W/B) | Ground | CD EJECT signal | Output | ON | Pressed | 0V | CD eject does not function. |
| | | | | | Released | 5V | |
| 17 (Y/B) | Ground | CD LOAD signal | Output | ON | Pressed | 0V | CD load does not function. |
| | | | | | Released | 5V | |






A
B
C
D
E
F
G
H
I
J
AV
L
M
N
O
P

AUDIO

< SERVICE INFORMATION >

Terminal and Reference Value for Satellite Radio Tuner (Factory Installed)

INFOID:000000003533671
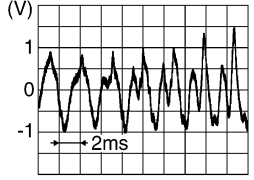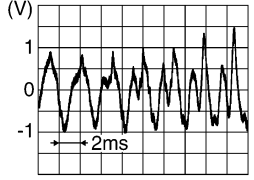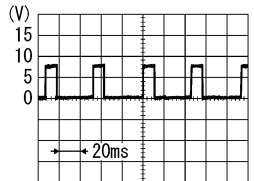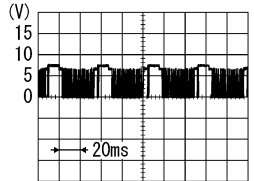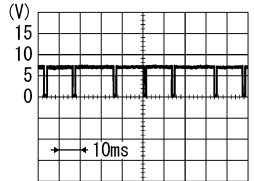
| Terminal (Wire color) | | Item | Signal input/ output | Condition | | Voltage (approx.) |
|--------------------------|--------|-------------------------------------|----------------------------|--------------------|---------------------------------|----------------------------------------------------------------------------------------------------|
| + | – | | | Ignition switch | Operation | |
| 22 (R) | 21 (G) | Audio signal LH | Output | ON | Receive audio signal. |  SKIB3609E |
| 24 (W) | 23 (B) | Audio signal RH | Output | ON | Receive audio signal. |  SKIB3609E |
| 25 | – | Shield | – | – | – | – |
| 26 | | | | ON | | Approx. 0 V |
| 28 (L) | Ground | REQ1 (SAT-AUDIO) | Output | ON | Set to the satellite radio mode |  SKIB3825E |
| 29 (O/L) | Ground | Communication signal (SAT-AUDIO) | Output | ON | Set to the satellite radio mode |  SKIB3824E |
| 30 (W/L) | Ground | Communication signal (AUDIO-SAT) | Input | ON | Set to the satellite radio mode |  SKIB3826E |
| 32 (Y) | Ground | Battery power supply | Input | OFF | – | Battery voltage |
| 36 (V) | | ACC power supply | | ACC | | |
| 37 | – | Antenna signal | – | – | – | – |

AV Switch Self-Diagnosis Function

INFOID:000000003533672

It can check ON/OFF operation of each switch in the AV switch and diagnose the input signals from the steering switch.

AUDIO


< SERVICE INFORMATION >

STARTING THE SELF-DIAGNOSIS MODE

1. Turn ignition switch from OFF to ACC.
2. Within 10 seconds press and hold the switches "MEMORY 1" and "MEMORY 6" simultaneously for 3 seconds. Then the self-diagnosis operates. A single beep indicates self-diagnosis mode is active.
3. Press each switch and listen for beep.

NOTE:

CD player LOAD and EJECT buttons are not included in this test and will not beep when pressed.

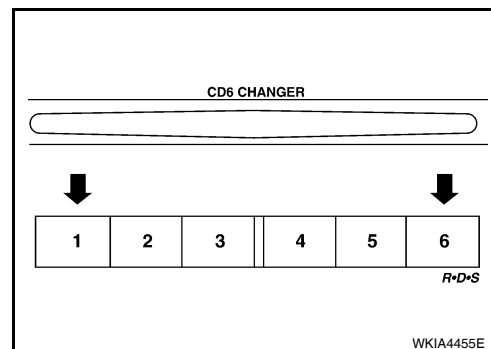

EXITING THE SELF-DIAGNOSIS MODE

Turn ignition switch OFF. Then the self-diagnosis ends.

DIAGNOSIS FUNCTION

- It can check for continuity of the switches by sounding the beep when each AV switch and steering switch is pressed.
- It can check for continuity of harness between AV switch and steering switch.

Trouble Diagnosis

INFOID:000000003533673

The majority of the audio troubles are the result of outside causes (bad CD, electromagnetic interference, etc.). Check the inspection items below to diagnose the malfunction.

MALFUNCTION WITH RADIO AND CD

Before proceeding, confirm that other AV switch functions (except audio functions) operate. If not, refer to [AV-134, "Unable to Operate All of AV Switches \(Unable to Start Self-Diagnosis\)"](#).

| Symptom | Possible cause |
|----------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Inoperative | <ul style="list-style-type: none"> • Audio unit power circuit check. Refer to AV-31, "Power Supply Circuit Inspection". • Audio communication line check. Refer to AV-38, "Audio Communication Line Check". • AV switch check. Refer to AV-38, "AV Switch Check". <p>If above check is OK, replace audio unit. Refer to AV-46, "Removal and Installation".</p> |
| Steering switch does not operate | <ul style="list-style-type: none"> • Steering switch check. Refer to AV-37, "Steering Switch Check". • AV switch check. Refer to AV-38, "AV Switch Check". <p>If above check is OK, replace audio unit. Refer to AV-46, "Removal and Installation".</p> |
| Audio information is not displayed on screen | <ul style="list-style-type: none"> • Display unit check. Refer to AV-98, "Self-Diagnosis Mode (DCU)". |
| All speakers do not sound | <ul style="list-style-type: none"> • Audio unit • BOSE speaker amp. power supply and ground circuit check. Refer to AV-31, "Power Supply Circuit Inspection". • BOSE speaker amp. ON signal • BOSE speaker amp. |
| One or several speakers do not sound | <ul style="list-style-type: none"> • Front door speaker check. Refer to AV-39, "Sound Is Not Heard from Front Door Speaker or Front Tweeter". • Rear door speaker check. Refer to AV-41, "Sound Is Not Heard from Rear Door Speaker or Rear Door Tweeter". • Subwoofer check. Refer to AV-44, "Sound Is Not Heard from Subwoofer". • Center speaker check. Refer to AV-44, "Sound Is Not Heard from Center Speaker". |
| Poor sound | <ul style="list-style-type: none"> • Audio unit • BOSE speaker amp. • Speaker |
| Noisy | <ul style="list-style-type: none"> • Audio unit • BOSE speaker amp. • Electrical equipment (generator, bonding wire, etc.) |

AUDIO

< SERVICE INFORMATION >

FOR RADIO ONLY

| Symptom | Possible cause |
|-------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No sound | <ul style="list-style-type: none"> • Audio unit • Antenna feeder, wiring or connections • Antenna amplifier, power supply, wiring or connections |
| Noisy | <ul style="list-style-type: none"> • Audio unit • Audio unit case ground • Antenna feeder, wiring or connections • Antenna amplifier, power supply, wiring or connections • Noise prevention parts • Each electrical equipment • Wire harness of each piece of electrical equipment |
| All radio stations stored in memory are deleted | <ul style="list-style-type: none"> • Audio unit power circuit check. Refer to AV-31, "Power Supply Circuit Inspection". • Audio unit |

NOTE:

- The following noise results from variations in field strength, such as fading noise and multi-path noise, or external noise from trains and other sources. It is not a malfunction.
 - Fading noise: This noise occurs because of variations in the field strength in a narrow range due to mountains or buildings blocking the signal.
 - Multi-path noise: This noise results from the waves sent directly from the broadcast station arriving at the antenna at a different time from the waves which reflect off mountains or buildings.

FOR CD ONLY

| Symptom | Possible cause |
|---------------------------------------------------|------------------------------------------------------------------------------|
| CD cannot be inserted. | <ul style="list-style-type: none"> • CD • Audio unit |
| CD cannot be ejected. | |
| The CD cannot be played. | |
| The sound skips, stops suddenly, or is distorted. | |

FOR SATELLITE RADIO TUNER (FACTORY INSTALLED) ONLY

| Symptom | Possible cause |
|--------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Inoperative | <ul style="list-style-type: none"> • Satellite radio tuner (factory installed) power and ground circuit inspection. Refer to AV-32, "Satellite Radio Tuner (Factory Installed) Power and Ground Supply Circuit Inspection". • Satellite radio tuner (factory installed) communication circuit inspection. Refer to AV-33, "Satellite Radio Tuner (Factory Installed) Communication Circuit Inspection". <p>If above check is OK, replace satellite radio tuner (factory installed). Refer to AV-46, "Removal and Installation".</p> |
| Right or left channel does not sound | <ul style="list-style-type: none"> • Satellite radio tuner (factory installed) right channel audio signal circuit inspection. Refer to AV-36, "Satellite Radio Tuner (Factory Installed) Right Channel Audio Signal Circuit Inspection". • Satellite radio tuner (factory installed) left channel audio signal circuit inspection. Refer to AV-35, "Satellite Radio Tuner (Factory Installed) Left Channel Audio Signal Circuit Inspection". <p>If above check is OK, replace satellite radio tuner (factory installed). Refer to AV-46, "Removal and Installation".</p> |
| Poor reception | <ul style="list-style-type: none"> • Location of vehicle. Make certain vehicle is in an open area. • Satellite radio antenna or antenna feeder. Refer to AV-52. |
| Noisy | <ul style="list-style-type: none"> • Satellite radio tuner (factory installed) ground. • Satellite radio tuner (factory installed) harness shield wires. • Electrical equipment (generator, bonding wire, etc.). Refer to AV-31, "Noise Inspection". |

NOTE:

Pressing the SAT button, the display unit will display 'NO SAT' when the following conditions exist:

AUDIO

< SERVICE INFORMATION >

- Loss of power to the satellite radio tuner (factory installed)
- Open or short in the REQ1, TXD, or RXD circuits.

If the satellite antenna is disconnected or inoperative, the display unit will display ANTENNA.

Noise Inspection

INFOID:000000003533674

The vehicle itself can be a source of noise if noise prevention parts or electrical equipment is malfunctioning. Check if noise is caused and/or changed by engine speed, ignition switch turned to each position, and operation of each piece of electrical equipment, and determine the cause.

NOTE:

The source of the noise can be found easily by listening to the noise while removing the fuses of electrical components, one by one.

TYPE OF NOISE AND POSSIBLE CAUSE

| Occurrence condition | | Possible cause |
|---------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| Occurs only when engine is ON. | A continuous growling noise occurs. The speed of the noise varies with changes in the engine speed. | • Ignition components |
| | A whistling noise occurs while the engine speed is high. A booming noise occurs while the engine is running and the lighting switch is ON. | • Generator |
| The occurrence of the noise is linked with the operation of the fuel pump. | | • Fuel pump condenser |
| Noise only occurs when various electrical components are operating. | A cracking or snapping sound occurs with the operation of various switches. | • Relay malfunction, audio unit malfunction |
| | The noise occurs when various motors are operating. | • Motor case ground • Motor |
| The noise occurs constantly, not just under certain conditions. | | • Rear defogger coil malfunction • Open circuit in printed heater • Poor ground of antenna amplifier or antenna feeder line |
| A cracking or snapping sound occurs while the vehicle is being driven, especially when it is vibrating excessively. | | • Ground wire of body parts • Ground due to improper part installation • Wiring connections or a short circuit |

Power Supply Circuit Inspection

INFOID:000000003533675

1.CHECK FUSES

Check that the following fuses are not blown.

| Unit | Terminals | Signal name | Fuse No. |
|-------------------|-----------|---------------------------|----------|
| Audio unit | 6 | Battery power | 31 |
| | 10 | Ignition switch ACC or ON | 4 |
| AV switch | 1 | Battery power | 31 |
| | 2 | Ignition switch ACC or ON | 4 |
| BOSE speaker amp. | 1 | Battery power | 31 |
| Subwoofer | 6 | Battery power | 17 |

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of blown fuse before installing new fuse. Refer to [PG-3](#).


2.POWER SUPPLY CIRCUIT CHECK

1. Disconnect audio unit connector M43, subwoofer connector B72 and BOSE speaker amp. connector M112.
2. Check voltage between the audio unit and ground.

AUDIO


< SERVICE INFORMATION >

| Unit | Terminal No. | | | OFF | ACC | ON |
|------------|--------------|----------|--------|-----------------|-----------------|-----------------|
| | (+) | | (-) | | | |
| | Connector | Terminal | | | | |
| Audio unit | M43 | 6 | Ground | Battery voltage | Battery voltage | Battery voltage |
| | | 10 | Ground | 0 V | Battery voltage | Battery voltage |

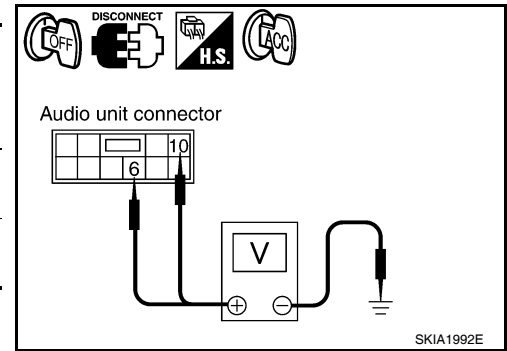


3. Check voltage between subwoofer and ground.

| Unit | Terminal No. | | | OFF | ACC | ON |
|-----------|--------------|----------|--------|-----------------|-----------------|-----------------|
| | (+) | | (-) | | | |
| | Connector | Terminal | | | | |
| Subwoofer | B72 | 6 | Ground | Battery voltage | Battery voltage | Battery voltage |

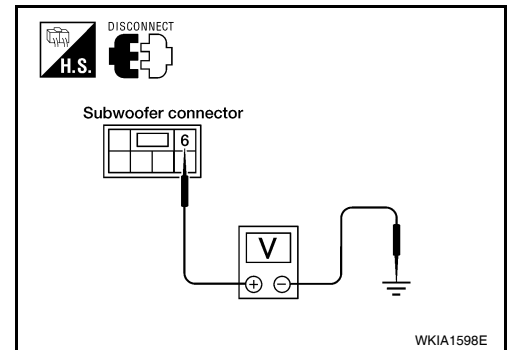

4. Check voltage between BOSE speaker amp. and ground.

| Unit | Terminal No. | | | OFF | ACC | ON |
|-------------------|--------------|----------|--------|-----------------|-----------------|-----------------|
| | (+) | | (-) | | | |
| | Connector | Terminal | | | | |
| BOSE speaker amp. | M112 | 1 | Ground | Battery voltage | Battery voltage | Battery voltage |

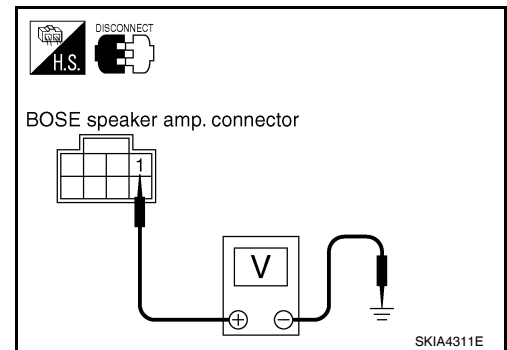

OK or NG

- OK >> GO TO 3.
- NG >> • Check connector housings for disconnected or loose terminals.
- Repair harness or connector.


3. GROUND CIRCUIT CHECK

Check continuity between subwoofer harness connector B72 terminal 5 and BOSE speaker amp. harness connector M112 terminal 17 and ground.

Continuity should exist.

OK or NG

- OK >> Inspection End.
- NG >> • Check connector housings for disconnected or loose terminals.
- Repair harness or connector.

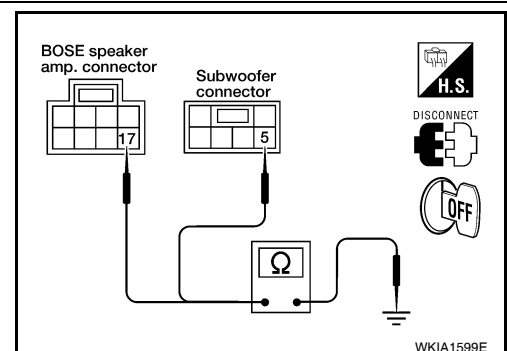

Satellite Radio Tuner (Factory Installed) Power and Ground Supply Circuit Inspection

INFOID:000000003533676

1. CHECK FUSES

- Check that the following fuses are not blown.

AUDIO

< SERVICE INFORMATION >

| Unit | Terminals | Signal name | Fuse No. |
|-------------------------------------------|-----------|---------------------------|----------|
| Satellite radio tuner (factory installed) | 32 | Battery power | 31 |
| | 36 | Ignition switch ACC or ON | 4 |

OK or NG


OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of blown fuse before installing new fuse. Refer to [PG-3](#).

2. POWER SUPPLY CIRCUIT CHECK

- Turn ignition switch OFF.
- Disconnect satellite radio tuner (factory installed) M41 connector.
- Check voltage between the satellite radio tuner (factory installed) and ground.

| Unit | Terminal No. | | | OFF | ACC | ON |
|-------------------------------------------|--------------|----------|--------|-----------------|-----------------|-----------------|
| | (+) | | (-) | | | |
| | Connector | Terminal | | | | |
| Satellite radio tuner (factory installed) | M41 | 32 | Ground | Battery voltage | Battery voltage | Battery voltage |
| | | 36 | Ground | 0V | Battery voltage | Battery voltage |

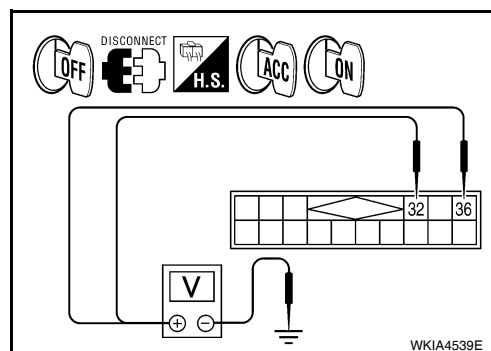

OK or NG


OK >> GO TO 3.

NG >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.

3. GROUND CIRCUIT CHECK

- Turn ignition switch OFF.
- Inspect satellite radio tuner (factory installed) case ground.
- Disconnect satellite radio tuner (factory installed) connector M41 (A) and audio unit connector M42 (B).
- Check continuity between satellite radio tuner (factory installed) and audio unit.

| Terminals | | | | Continuity |
|-------------------------------------------|----------|------------|----------|------------|
| Satellite radio tuner (factory installed) | | Audio unit | | |
| Connector | Terminal | Connector | Terminal | |
| A: M41 | 25 | B: M42 | 45 | Yes |
| | 26 | | 46 | |

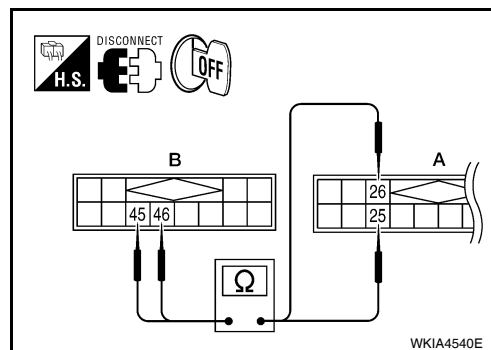

OK or NG

OK >> Inspection End.

NG >> • Check connector housings for disconnected or loose terminals.
• Repair harness, connector or satellite radio tuner (factory installed) case ground.

Satellite Radio Tuner (Factory Installed) Communication Circuit Inspection INFOID:000000003533677

1. CHECK HARNESS - 1

- Turn ignition switch OFF.
- Disconnect satellite radio tuner (factory installed) connector M41 and audio unit connector M42.

AUDIO

< SERVICE INFORMATION >

3. Check continuity between satellite radio tuner (factory installed) harness connector M41 (A) terminal 28 and audio unit harness connector M42 (B) terminal 48

Continuity should exist.

4. Check continuity between satellite radio tuner (factory installed) harness connector M41 (A) terminal 28 and ground.

Continuity should not exist.

OK or NG

OK >> GO TO 2.

NG >> Repair harness or connector.

2.CHECK HARNESS - 2

1. Check continuity between satellite radio tuner (factory installed) harness connector M41 (A) terminal 29 and audio unit harness connector M42 (B) terminal 49

Continuity should exist.

2. Check continuity between satellite radio tuner (factory installed) harness connector M41 (A) terminal 29 and ground.

Continuity should not exist.

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.

3.CHECK HARNESS - 3

1. Check continuity between satellite radio tuner (factory installed) harness connector M41 (A) terminal 30 and audio unit harness connector M42 (B) terminal 50

Continuity should exist.

2. Check continuity between satellite radio tuner (factory installed) harness connector M41 (A) terminal 30 and ground.

Continuity should not exist.

OK or NG

OK >> GO TO 4.

NG >> Repair harness or connector.

4.CHECK REQ1 SIGNAL





1. Connect satellite radio tuner (factory installed) connector and audio unit connector.
2. Turn ignition switch to ACC
3. Check signal between satellite radio tuner (factory installed) harness connector M41 terminal 28 and ground with CONSULT-II or oscilloscope.

28 - Ground

: Refer to [AV-28, "Terminal and Reference Value for Satellite Radio Tuner \(Factory Installed\)"](#).

OK or NG

OK >> GO TO 5.

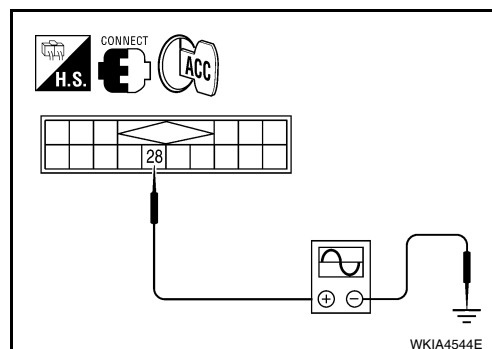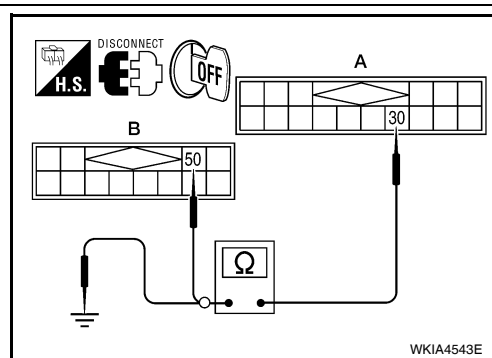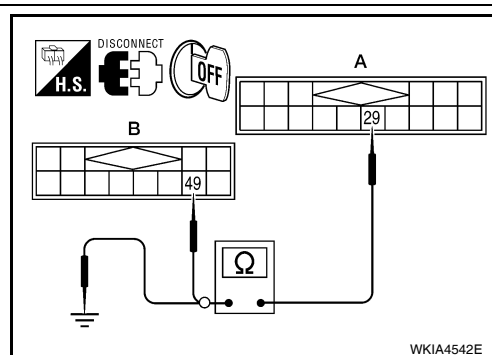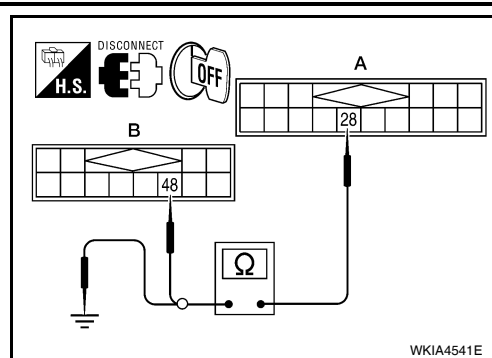

AUDIO

< SERVICE INFORMATION >

NG >> Replace audio unit. Refer to [AV-46. "Removal and Installation"](#).

5.CHECK TXD SIGNAL

1. Check signal between satellite radio tuner (factory installed) harness connector M41 terminal 29 and ground with CONSULT-II or oscilloscope.


29 - Ground

: Refer to [AV-28. "Terminal and Reference Value for Satellite Radio Tuner \(Factory Installed\)"](#).

OK or NG

OK >> GO TO 6.

NG >> Replace audio unit. Refer to [AV-46. "Removal and Installation"](#).

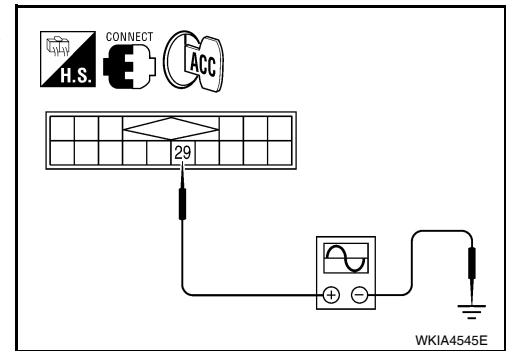

6.CHECK RXD SIGNAL

1. Check signal between satellite radio tuner (factory installed) harness connector M41 terminal 30 and ground with CONSULT-II or oscilloscope.


30 - Ground

: Refer to [AV-28. "Terminal and Reference Value for Satellite Radio Tuner \(Factory Installed\)"](#).

OK or NG

OK >> Replace satellite radio tuner (factory installed). Refer to [AV-46. "Removal and Installation"](#).

NG >> Replace audio unit. Refer to [AV-46. "Removal and Installation"](#).

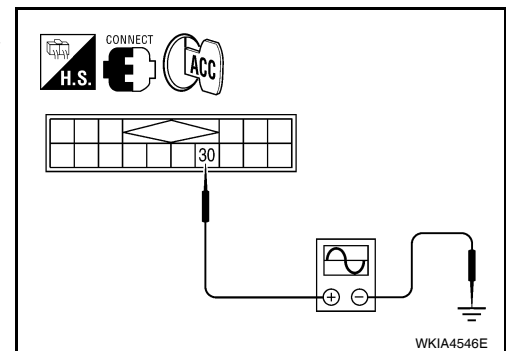

Satellite Radio Tuner (Factory Installed) Left Channel Audio Signal Circuit Inspection

INFOID:000000003533678

1.CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect satellite radio tuner (factory installed) connector M41 (A) and audio unit connector M42 (B).
3. Check continuity between satellite radio tuner (factory installed) and audio unit.

| Terminals | | | | Continuity |
|-------------------------------------------|----------|------------|----------|------------|
| Satellite radio tuner (factory installed) | | Audio unit | | |
| Connector | Terminal | Connector | Terminal | |
| A: M41 | 21 | B: M42 | 41 | Yes |
| | 22 | | 42 | |


4. Check continuity between satellite radio tuner (factory installed) and ground.

| Terminals | | | Continuity |
|-------------------------------------------|----------|--------|------------|
| Satellite radio tuner (factory installed) | | — | |
| Connector | Terminal | | |
| A: M41 | 21 | Ground | No |
| | 22 | | |

OK or NG

OK >> GO TO 2.

NG >> Repair harness or connector.

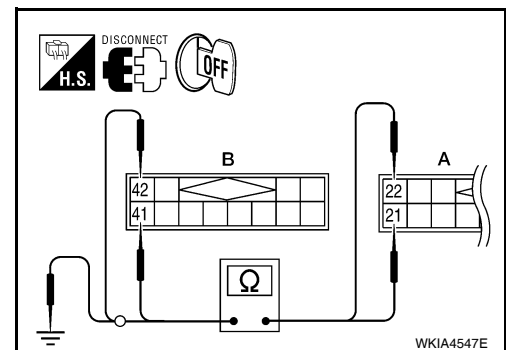

AUDIO

< SERVICE INFORMATION >

2.CHECK LEFT CHANNEL AUDIO SIGNAL

1. Connect satellite radio tuner (factory installed) and audio unit.
2. Turn ignition switch ON.
3. Check signal between satellite radio tuner (factory installed) connector M41 terminals 21 and 22 with CONSULT-II or oscilloscope.


21 - 22

: Refer to [AV-28, "Terminal and Reference Value for Satellite Radio Tuner \(Factory Installed\)"](#).

OK or NG

OK >> Replace satellite radio tuner (factory installed). Refer to [AV-46, "Removal and Installation"](#).

NG >> Replace audio unit. Refer to [AV-46, "Removal and Installation"](#).

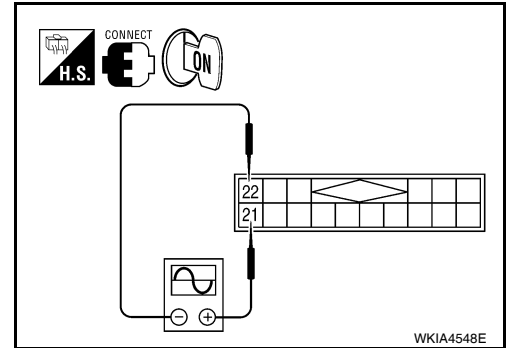

Satellite Radio Tuner (Factory Installed) Right Channel Audio Signal Circuit Inspection

INFOID:000000003533679

1.CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect satellite radio tuner (factory installed) connector M41 (A) and audio unit connector M42 (B).
3. Check continuity between satellite radio tuner (factory installed) and audio unit.

| Terminals | | | | Continuity |
|-------------------------------------------|----------|------------|----------|------------|
| Satellite radio tuner (factory installed) | | Audio unit | | |
| Connector | Terminal | Connector | Terminal | |
| A: M41 | 23 | B: M42 | 43 | Yes |
| | 24 | | 44 | |

4. Check continuity between satellite radio tuner (factory installed) and ground.

| Terminals | | | Continuity |
|-------------------------------------------|----------|--------|------------|
| Satellite radio tuner (factory installed) | | — | |
| Connector | Terminal | | |
| A: M41 | 23 | Ground | No |
| | 24 | | |


OK or NG

OK >> GO TO 2.

NG >> Repair harness or connector.

2.CHECK RIGHT CHANNEL AUDIO SIGNAL

1. Connect satellite radio tuner (factory installed) and audio unit.
2. Turn ignition switch ON.

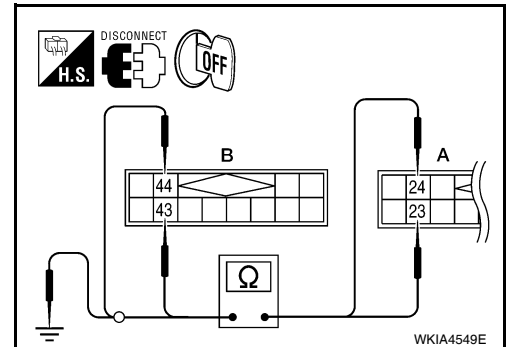

AUDIO

< SERVICE INFORMATION >


- Check signal between satellite radio tuner (factory installed) connector M41 terminals 23 and 24 with CONSULT-II or oscilloscope.

23 - 24

: Refer to [AV-28, "Terminal and Reference Value for Satellite Radio Tuner \(Factory Installed\)"](#).

OK or NG

- OK >> Replace satellite radio tuner (factory installed). Refer to [AV-46, "Removal and Installation"](#).
- NG >> Replace audio unit. Refer to [AV-46, "Removal and Installation"](#).

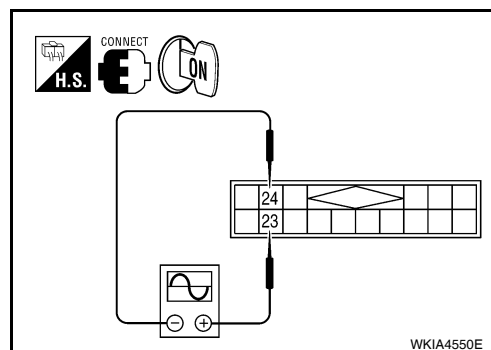

Steering Switch Check

INFOID:000000003533680

1. AV SWITCH SELF-DIAGNOSIS FUNCTION CHECK

- Start AV switch self-diagnosis function. Refer to [AV-28, "AV Switch Self-Diagnosis Function"](#).
- Operate steering switch.

Does steering switch operate normally?

- YES >> Inspection End.
- NO >> GO TO 2.

2. CHECK HARNESS

- Turn ignition switch OFF.
- Disconnect AV switch connector M98 and spiral cable connector M30.
- Check continuity between spiral cable harness connector terminal and AV switch harness connector terminal.

| Terminals | | | | Continuity |
|--------------|----------|-----------|----------|------------|
| Spiral cable | | AV switch | | |
| Connector | Terminal | Connector | Terminal | |
| M30 | 32 | M98 | 13 | Yes |
| | 31 | | 14 | |
| | 24 | | 12 | |

- Check continuity between AV switch and ground.


| Terminals | | | Continuity |
|-----------|----------|--------|------------|
| AV switch | | — | |
| Connector | Terminal | | |
| M98 | 12 | Ground | No |
| | 13 | | |
| | 14 | | |

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness.

3. SPIRAL CABLE CHECK

- Disconnect spiral cable connectors M30 and M102.

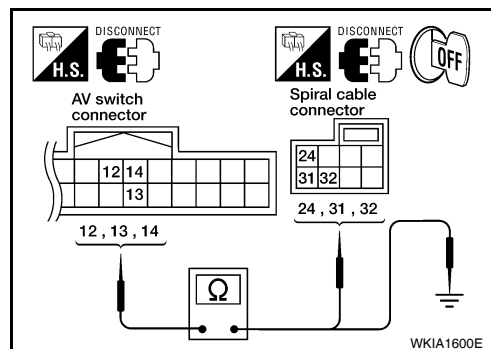

AUDIO

< SERVICE INFORMATION >

2. Check continuity between spiral cable terminals.

| Terminals | | | | Continuity |
|--------------|----------|-----------|----------|------------|
| Spiral cable | | | | |
| Connector | Terminal | Connector | Terminal | |
| M30 | 32 | M102 | 16 | Yes |
| | 31 | | 17 | |
| | 24 | | 20 | |

OK or NG

OK >> GO TO 4.

NG >> Replace spiral cable. Refer to [SRS-37, "Removal and Installation"](#).

4.CHECK STEERING SWITCH RESISTANCE

Check resistance between steering switch terminals.

| Terminal | | Signal name | Condition | Resistance (Ω) (Approx.) |
|----------|----|---------------|--------------------------------|--------------------------------|
| 16 | 17 | Seek (down) | Depress (station) down switch. | 165 |
| | | Power | Depress power switch. | 0 |
| | | Volume (down) | Depress volume down switch. | 652 |
| 20 | 17 | Seek (up) | Depress (station) up switch. | 165 |
| | | Mode | Depress mode switch. | 0 |
| | | Volume (up) | Depress volume up switch. | 652 |

OK or NG

OK >> Inspection End.

NG >> Replace steering switch. Refer to [AV-46, "Removal and Installation"](#).

AV Switch Check

INFOID:000000003533681

1.AV SWITCH SELF-DIAGNOSIS FUNCTION CHECK

1. Perform AV switch self-diagnosis function. Refer to [AV-28, "AV Switch Self-Diagnosis Function"](#).

Does AV switch operate normally?

YES >> Inspection End.

NO >> GO TO 2.

2.CHECK AV SWITCH POWER SUPPLY AND GROUND CIRCUIT

1. Check AV switch power supply and ground circuit. Refer to [AV-113, "Power Supply and Ground Circuit Inspection for AV Switch"](#).

OK or NG

YES >> Replace AV switch. Refer to [AV-145, "Removal and Installation"](#).

NO >> Repair malfunctioning part.

Audio Communication Line Check

INFOID:000000003533682



1.CHECK AUDIO COMMUNICATION LINE

Start audio communication line check. Refer to [AV-119, "Audio Communication Line Check \(Between Display Control Unit and Audio Unit\)"](#).

OK or NG

OK >> Inspection End.

NG >> Replace malfunctioning part.

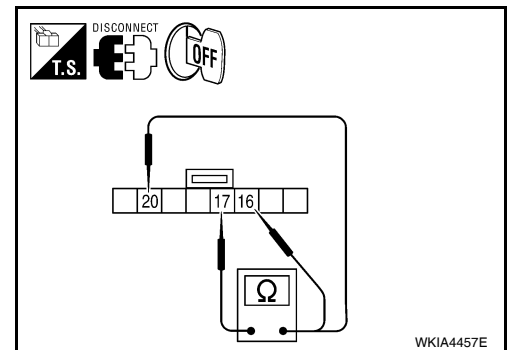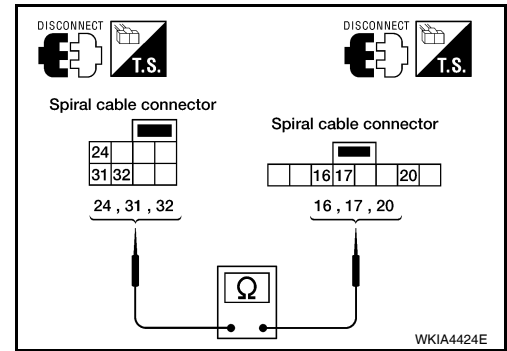

AUDIO

< SERVICE INFORMATION >

Sound Is Not Heard from Front Door Speaker or Front Tweeter

INFOID:000000003533683

1.HARNESS CHECK

1. Disconnect BOSE speaker amp. connector M113 and suspect speaker connector.
2. Check continuity between BOSE speaker amp. harness connector terminal M113 and suspect speaker harness connector terminal.

| Terminals | | | | Continuity |
|-------------------|----------|--------------------|----------|------------|
| BOSE speaker amp. | | Speaker or tweeter | | |
| Connector | Terminal | Connector | Terminal | |
| M113 | 13 | D12 | + | Yes |
| | 14 | | - | |
| | 15 | D112 | + | |
| | 16 | | - | |
| | 13 | M109 | + | |
| | 14 | | - | |
| | 15 | M111 | + | |
| | 16 | | - | |

3. Check continuity between BOSE speaker amp. harness connector terminal M113 and ground.


| Terminals | | | Continuity |
|-------------------|----------|--------|------------|
| BOSE speaker amp. | | — | |
| Connector | Terminal | | |
| M113 | 13 | Ground | No |
| | 14 | | |
| | 15 | | |
| | 16 | | |

OK or NG

- OK >> GO TO 2.
- NG >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.

2.FRONT SPEAKER SIGNAL CHECK


1. Connect BOSE speaker amp. connector M113 and suspect speaker connector.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.

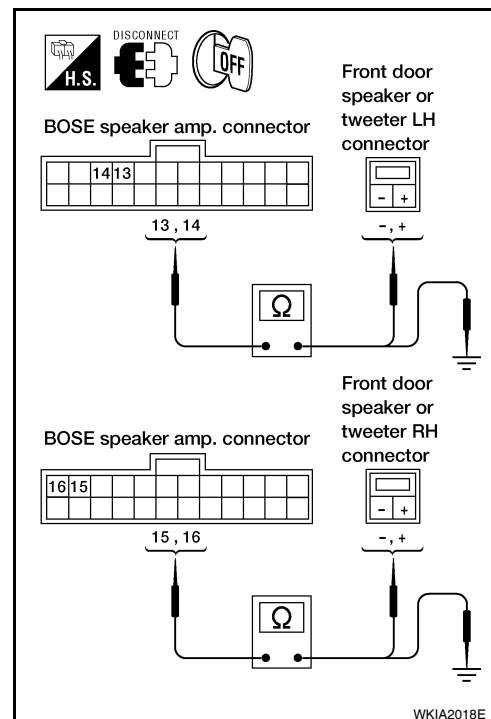

AUDIO

< SERVICE INFORMATION >


- Check the signal between BOSE speaker amp. harness connector M113 terminals with CONSULT-II or oscilloscope.
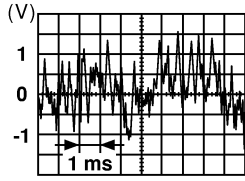
| Terminals | | | | Condi- tion | Reference signal |
|----------------|----------|----------------|----------|---------------------------------|-----------------------------------------------------------------------------------|
| (+) | | (-) | | | |
| Con- nector | Terminal | Con- nector | Terminal | | |
| M113 | 13 | M113 | 14 | Re- ceive audio signal |  |
| | 15 | | 16 | | |

SKIA0177E

OK or NG

- OK >> Replace suspect speaker. Refer to [AV-46, "Removal and Installation"](#) or [AV-46, "Removal and Installation"](#).
- NG >> GO TO 3.

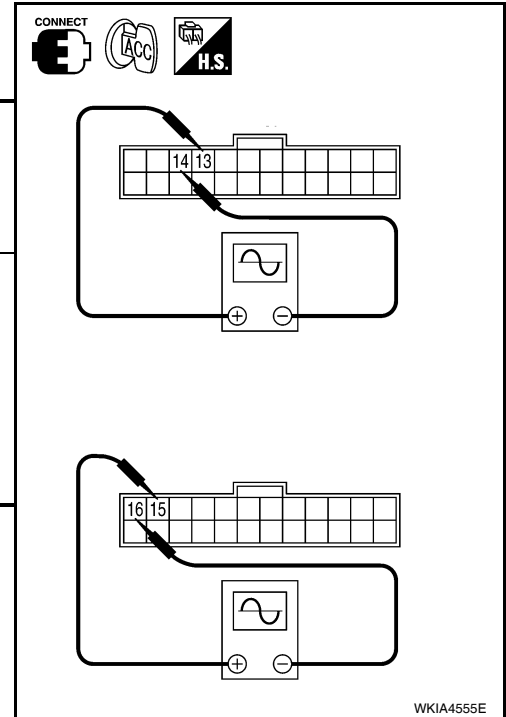

3. HARNESS CHECK

- Disconnect audio unit connector M43 and BOSE speaker amp. connector M113.
- Check continuity between audio unit harness connector terminals and BOSE speaker amp. harness connector terminals.

| Terminals | | | | Continuity |
|------------|----------|-------------------|----------|------------|
| Audio unit | | BOSE speaker amp. | | |
| Connector | Terminal | Connector | Terminal | |
| M43 | 1 | M113 | 29 | Yes |
| | 2 | | 30 | |
| | 3 | | 27 | |
| | 4 | | 28 | |

- Check continuity between audio unit harness connector terminal and ground.


| Terminals | | | Continuity |
|------------|----------|--------|------------|
| Audio unit | | — | |
| Connector | Terminal | | |
| M43 | 1 | Ground | No |
| | 2 | | |
| | 3 | | |
| | 4 | | |

OK or NG

- OK >> GO TO 4.
- NG >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.

4. FRONT SPEAKER SIGNAL CHECK


- Connect audio unit connector and BOSE speaker amp. connector.
- Turn ignition switch ACC.

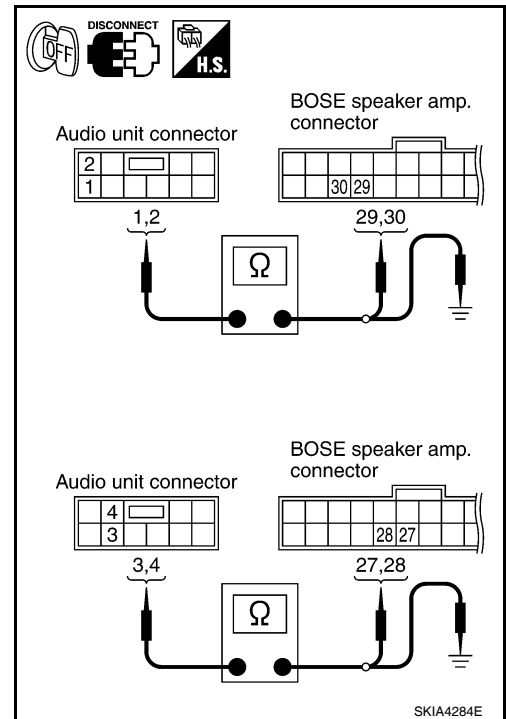

AUDIO


< SERVICE INFORMATION >

- Push "POWER" switch.
- Check the signal between audio unit harness connector terminals with CONSULT-II or oscilloscope.
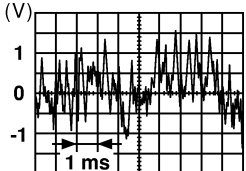
| Terminals | | | | Condi- tion | Reference signal |
|----------------|---------------|----------------|---------------|----------------------------|-----------------------------------------------------------------------------------|
| (+) (+) | | (-) (-) | | | |
| Con- nector | Termi- nal | Con- nector | Termi- nal | | |
| M43 | 2 | M43 | 1 | Receive audio signal |  |
| | 4 | | 3 | | |

OK or NG

- OK >> Replace BOSE speaker amp. Refer to [AV-46, "Removal and Installation"](#).
- NG >> Replace audio unit. Refer to [AV-46, "Removal and Installation"](#).

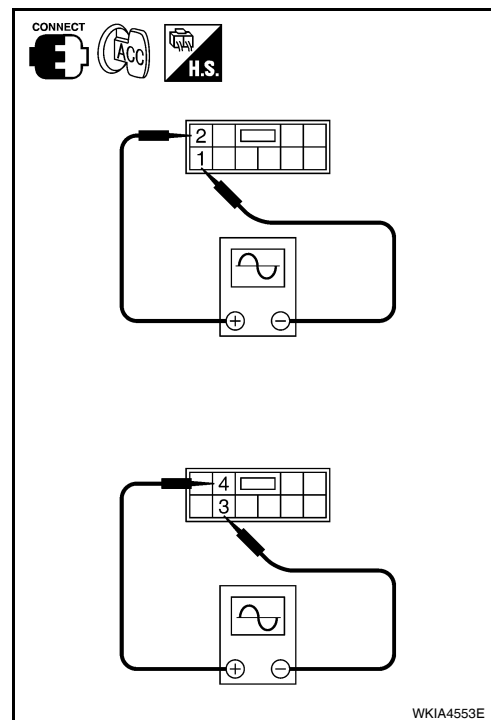

Sound Is Not Heard from Rear Door Speaker or Rear Door Tweeter


INFOID:000000003533684

1. HARNESS CHECK

- Disconnect BOSE speaker amp. connector M113 and suspect speaker connector.
- Check continuity between BOSE speaker amp. harness connector terminal M113 and suspect speaker harness connector terminal.

| Terminals | | | | Continuity |
|-------------------|----------|--------------------|----------|------------|
| BOSE speaker amp. | | Speaker or tweeter | | |
| Connector | Terminal | Connector | Terminal | |
| M113 | 9 | D207 | + | Yes |
| | 10 | | - | |
| | 11 | D307 | + | |
| | 12 | | - | |
| | 9 | D208 | + | |
| | 10 | | - | |
| | 11 | D308 | + | |
| | 12 | | - | |

- Check continuity between BOSE speaker amp. harness connector M113 terminal and ground.

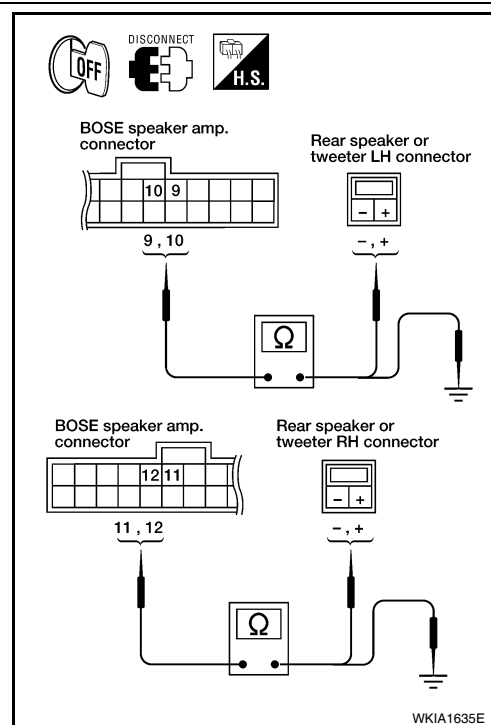

AUDIO

< SERVICE INFORMATION >


| Terminals | | | Continuity |
|-------------------|----------|--------|------------|
| BOSE speaker amp. | | — | |
| Connector | Terminal | | |
| M113 | 9 | Ground | No |
| | 10 | | |
| | 11 | | |
| | 12 | | |

OK or NG

- OK >> GO TO 2.
 NG >> • Check connector housings for disconnected or loose terminals.
 • Repair harness or connector.

2. REAR SPEAKER SIGNAL CHECK

1. Connect BOSE speaker amp. connector M113 and suspect speaker connector.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between BOSE speaker amp. harness connector M113 terminals with CONSULT-II or oscilloscope.
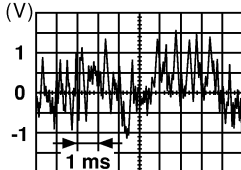
| Terminals | | | | Condi- tion | Reference signal |
|---------------------|----------|---------------------|----------|---------------------------------|-------------------------------------------------------------------------------------|
| (+) | | (-) | | | |
| Con- nec- tor | Terminal | Con- nec- tor | Terminal | | |
| M113 | 9 | M113 | 10 | Re- ceive audio signal |  |
| | 11 | | 12 | | |
| | | | | | |


SKIA0177E

OK or NG

- OK >> Replace suspect speaker. Refer to [AV-46. "Removal and Installation"](#) or [AV-46. "Removal and Installation"](#).
 NG >> GO TO 3.

3. HARNESS CHECK

1. Disconnect audio unit connector M44 and BOSE speaker amp. connector M113.

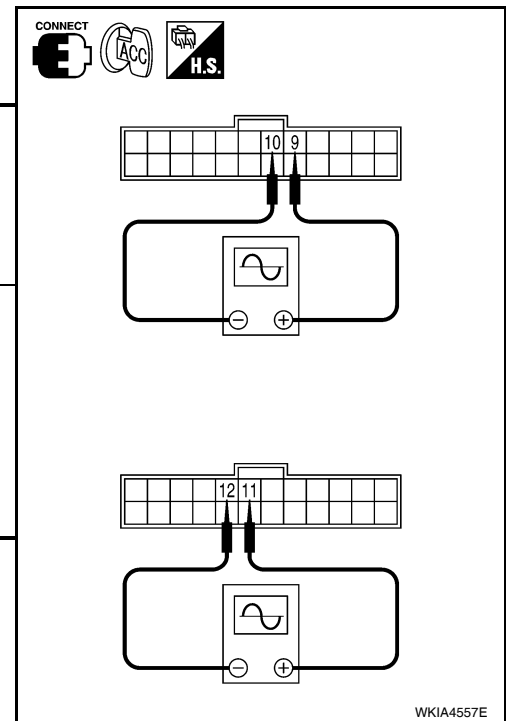

AUDIO

< SERVICE INFORMATION >

- Check continuity between audio unit harness connector M44 terminals and BOSE speaker amp. harness connector M113 terminals.

| Terminals | | | | Continuity |
|------------|----------|-------------------|----------|------------|
| Audio unit | | BOSE speaker amp. | | |
| Connector | Terminal | Connector | Terminal | |
| M44 | 13 | M113 | 25 | Yes |
| | 14 | | 26 | |
| | 15 | | 23 | |
| | 16 | | 24 | |

- Check continuity between audio unit harness connector terminal and ground.

| Terminals | | | Continuity |
|------------|----------|--------|------------|
| Audio unit | | — | |
| Connector | Terminal | | |
| M44 | 13 | Ground | No |
| | 14 | | |
| | 15 | | |
| | 16 | | |


OK or NG

OK >> GO TO 4.

NG >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.

4. REAR SPEAKER SIGNAL CHECK

- Connect audio unit connector M44 and BOSE speaker amp. connector M113.
- Turn ignition switch to ACC.
- Push "POWER" switch.
- Check the signal between audio unit harness connector M44 terminals with CONSULT-II or oscilloscope.


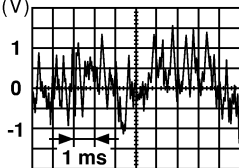
| Terminals | | | | Condi- tion | Reference signal |
|----------------|---------------|----------------|----------|---------------------------------|-------------------------------------------------------------------------------------|
| (+) (+) | | (-) (-) | | | |
| Con- nector | Termi- nal | Con- nector | Terminal | | |
| M44 | 14 | M44 | 13 | Re- ceive audio signal |  |
| | 16 | | 15 | | |

SKIA0177E

OK or NG

OK >> Replace BOSE speaker amp. Refer to [AV-46. "Removal and Installation"](#).

NG >> Replace audio unit. Refer to [AV-46. "Removal and Installation"](#).

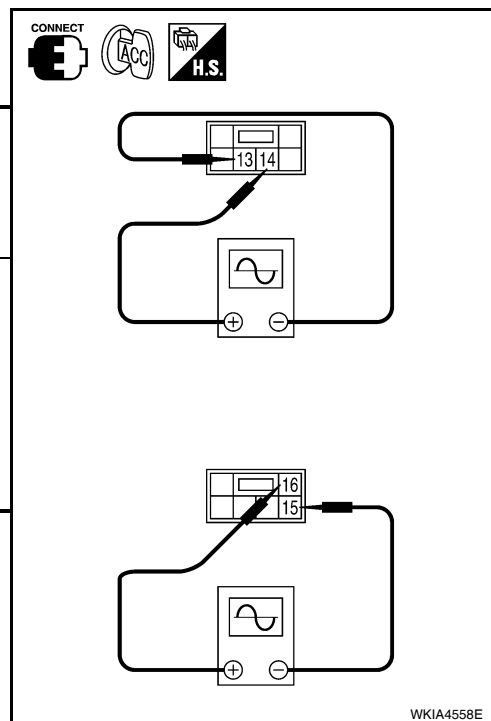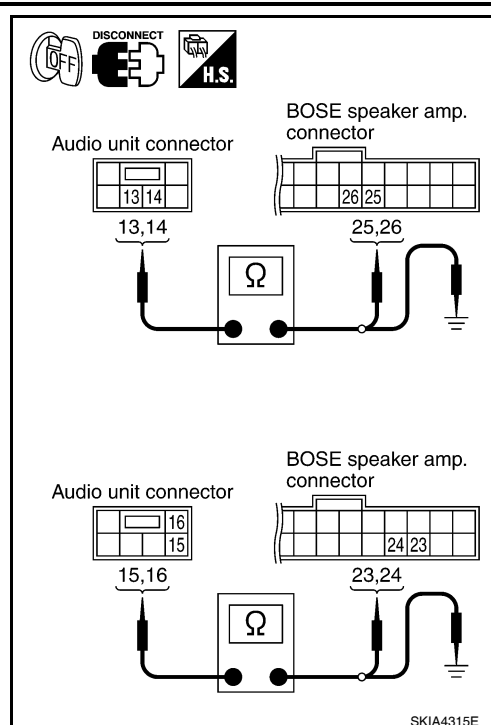

AUDIO

< SERVICE INFORMATION >

Sound Is Not Heard from Center Speaker

INFOID:000000003533685

1. HARNESS CHECK

1. Disconnect BOSE speaker amp. connector M112 and center speaker connector M110.
2. Check continuity between BOSE speaker amp. harness connector M112 terminals and center speaker harness connector M110 terminals.

| Terminals | | | | Continuity |
|-------------------|----------|----------------|----------|------------|
| BOSE speaker amp. | | Center speaker | | |
| Connector | Terminal | Connector | Terminal | |
| M112 | 2 | M110 | - | Yes |
| | 18 | | + | |

3. Check continuity between BOSE speaker amp. harness connector M112 terminals and ground.


| Terminals | | | Continuity |
|-------------------|----------|--------|------------|
| BOSE speaker amp. | | — | |
| Connector | Terminal | | |
| M112 | 2 | Ground | No |
| | 18 | | |

OK or NG

- OK >> GO TO 2.
- NG >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.



2. CENTER SPEAKER SIGNAL CHECK

1. Connect BOSE speaker amp. connector M112 and center speaker connector M110.
2. Turn ignition switch to ACC.
3. Push the "POWER" switch.
4. Check the signal between BOSE speaker amp. harness connector M112 terminals with CONSULT-II or oscilloscope.
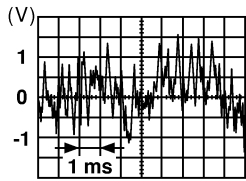
| Terminals | | | | Condi- tion | Reference signal |
|---------------------|----------|---------------------|----------|---------------------------------|-------------------------------------------------------------------------------------|
| (+) | | (-) | | | |
| Con- nec- tor | Terminal | Con- nec- tor | Terminal | | |
| M112 | 18 | M112 | 2 | Re- ceive audio signal |  |

SKIA0177E

SKIA0177E

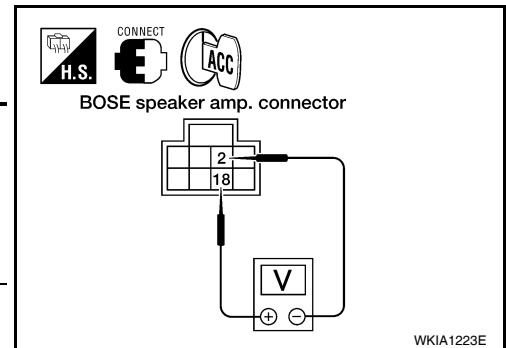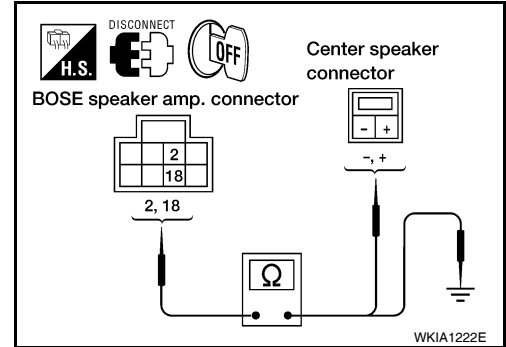

OK or NG

- OK >> Replace center speaker. Refer to [AV-46, "Removal and Installation"](#).
- NG >> Replace BOSE speaker amp. Refer to [AV-46, "Removal and Installation"](#).

Sound Is Not Heard from Subwoofer

INFOID:000000003533686

1. CHECK FUSE

AUDIO

< SERVICE INFORMATION >

Check that the following fuse is not blown.

| Unit | Terminal | Signal name | Fuse No. |
|-----------|----------|---------------|----------|
| Subwoofer | 6 | Battery power | 17 |

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of blown fuse before installing new fuse. Refer to [PG-3](#).

2. POWER SUPPLY CIRCUIT CHECK


1. Disconnect subwoofer connector.
2. Check voltage between the subwoofer and ground.

| Unit | Terminal No. | | | OFF | ACC | ON |
|-----------|--------------|----------|--------|-----------------|-----------------|-----------------|
| | (+) | | (-) | | | |
| | Connector | Terminal | | | | |
| Subwoofer | B72 | 6 | Ground | Battery voltage | Battery voltage | Battery voltage |

OK or NG

OK >> GO TO 3.

NG >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.

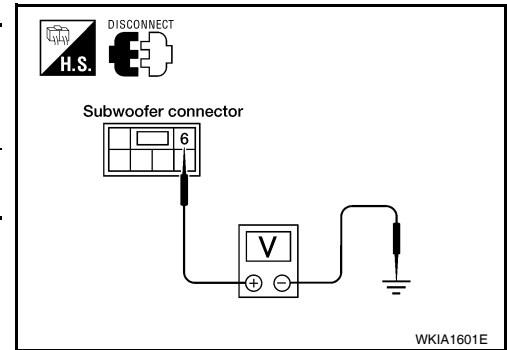

3. GROUND CIRCUIT CHECK


Check continuity between subwoofer harness connector B72 terminal 5 and ground.

Continuity should exist.

OK or NG

OK >> GO TO 4.

NG >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.

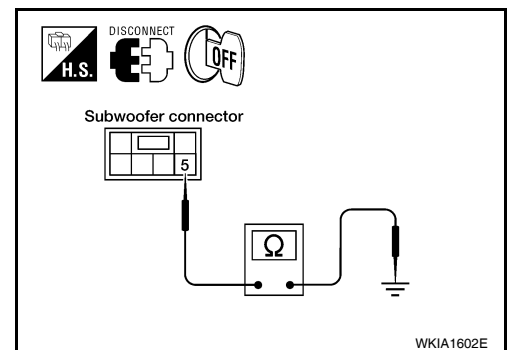

4. CHECK SUBWOOFER AMP. ON SIGNAL


1. Operate system and check voltage between subwoofer harness connector B72 terminal 4 and ground.

Voltage : More than approx. 6.5V

OK or NG

OK >> GO TO 5.

NG >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.

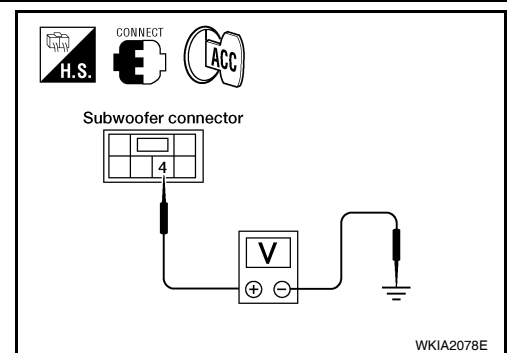

5. HARNESS CHECK

1. Disconnect BOSE speaker amp. connector M112 and subwoofer connector B72.

AUDIO

< SERVICE INFORMATION >

- Check continuity between BOSE speaker amp. harness connector terminal and subwoofer harness connector harness connector terminal.

| Terminals | | | | Continuity |
|-------------------|----------|-----------|----------|------------|
| BOSE speaker amp. | | Subwoofer | | |
| Connector | Terminal | Connector | Terminal | |
| M112 | 3 | B72 | 1 | Yes |
| | 19 | | 2 | |

- Check continuity between BOSE speaker amp. harness connector terminal and ground.

| Terminals | | | Continuity |
|-------------------|----------|--------|------------|
| BOSE speaker amp. | | — | |
| Connector | Terminal | | |
| M112 | 3 | Ground | No |
| | 19 | | |


OK or NG

OK >> GO TO 6.

NG >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.

6.SUBWOOFER SIGNAL CHECK

- Connect BOSE speaker amp. connector and subwoofer connector.
- Turn ignition switch to ACC.
- Check the signal between BOSE speaker amp. harness connector terminals with CONSULT-II or oscilloscope.
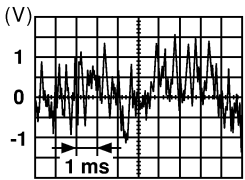
| Terminals | | | | Condi- tion | Reference signal |
|---------------------|---------------|---------------------|---------------|----------------------------|-------------------------------------------------------------------------------------|
| (+) | | (-) | | | |
| Con- nec- tor | Ter- minal | Con- nec- tor | Ter- minal | | |
| M112 | 19 | M112 | 3 | Receive audio signal |  |

SKIA0177E

SKIA0177E

OK or NG

OK >> Replace subwoofer. Refer to [AV-46, "Removal and Installation"](#).

NG >> Replace BOSE speaker amp. Refer to [AV-46, "Removal and Installation"](#).



Removal and Installation

INFOID:000000003533687

AUDIO UNIT

Removal


- Remove cluster lid C. Refer to [IP-10](#).

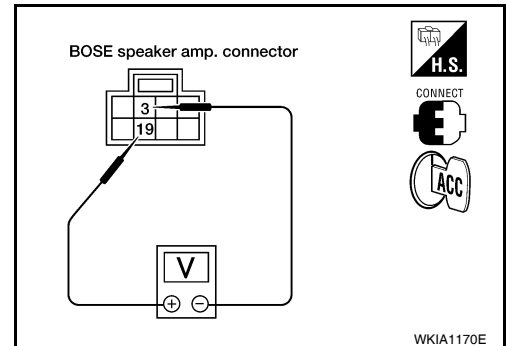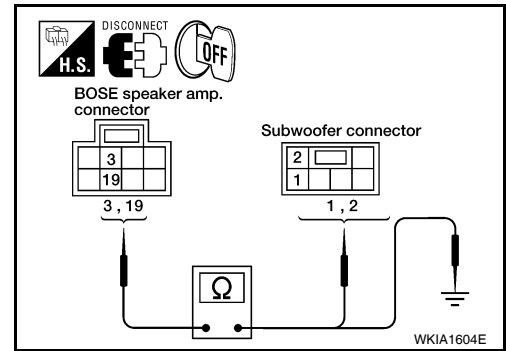

AUDIO

< SERVICE INFORMATION >

2. Remove audio unit screws, using power tool.
3. Pull out audio unit and disconnect audio unit connectors.

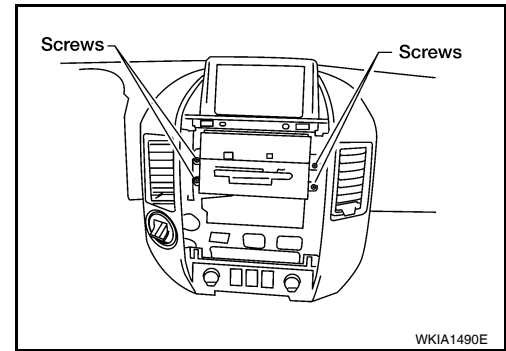


Installation

Installation is in the reverse order of removal.

AV SWITCH

Removal

1. Disconnect battery negative terminal.
2. Remove center console. Refer to [IP-10](#).
3. Disconnect center speaker.
4. Remove AV switch screws.
5. Carefully remove the AV switch.

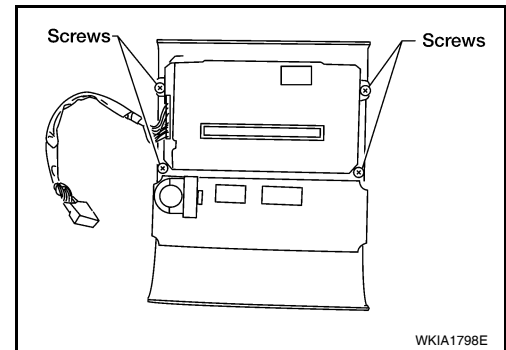


Installation

Installation is in the reverse order of removal.

BOSE SPEAKER AMP.

Removal

1. Remove the accelerator pedal. Refer to [ACC-3](#).
2. Remove BCM. Refer to [BCS-24, "BCM"](#).
3. Disconnect Bose speaker amp. and satellite radio tuner (if equipped) connectors.
4. Remove Bose speaker amp./satellite radio tuner bracket screws and slide Bose speaker amp./satellite radio tuner bracket down.

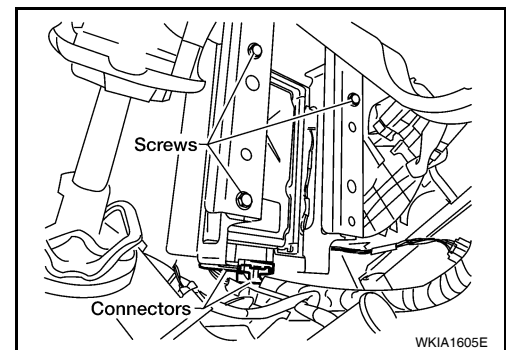

A
B
C
D
E
F
G
H
I
J


AV

L
M
N
O
P

AUDIO

< SERVICE INFORMATION >

5. Remove Bose speaker amp. screws (A) and remove Bose speaker amp. from Bose speaker amp./satellite radio tuner bracket.

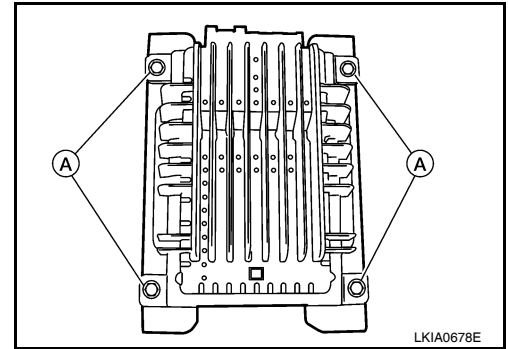


Installation

Installation is in the reverse order of removal.

CENTER SPEAKER

Removal

1. Remove center console. Refer to [IP-10](#).
2. Remove cluster lid D. Refer to [IP-10](#).
3. Disconnect center speaker connectors.
4. Remove the center speaker screws and remove the center speaker.

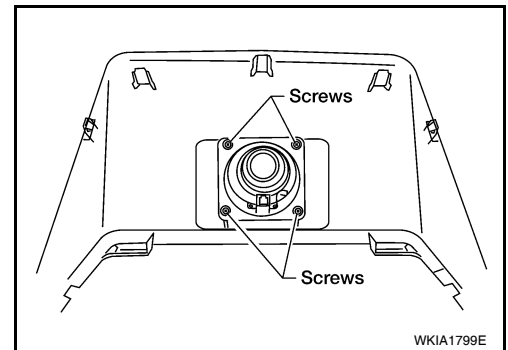


Installation

Installation is in the reverse order of removal.

FRONT DOOR SPEAKER

Removal

1. Remove front door finisher. Refer to [EI-31](#).
2. Remove the four front door speaker screws.
3. Disconnect connector and remove front door speaker.

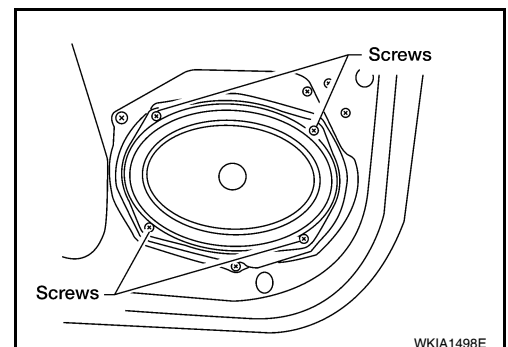

Installation

Installation is in the reverse order of removal.

FRONT TWEETER


Removal

1. Remove front tweeter grille. Refer to [IP-10, "Removal and Installation"](#).

AUDIO

< SERVICE INFORMATION >

2. Remove front tweeter screws (A).
3. Disconnect connector and remove front tweeter.

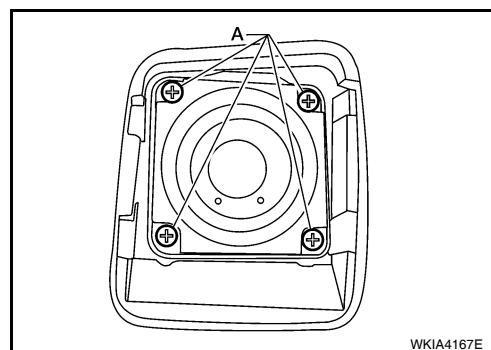

Installation

Installation is in the reverse order of removal.

REAR AUDIO REMOTE CONTROL UNIT


Removal

1. Carefully remove the rear audio remote control unit from the rear roof console assembly.

CAUTION:

Wrap removal tool with clean shop cloth to prevent damage to the headliner.

2. Disconnect connectors and remove the rear audio remote control unit.

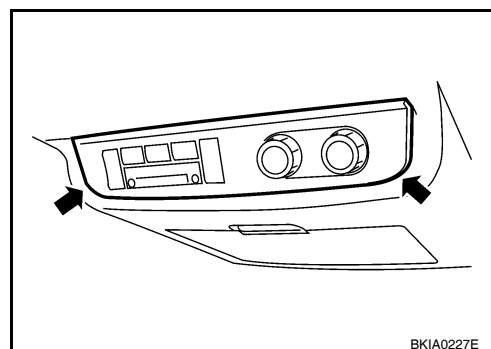


Installation

Installation is in the reverse order of removal.

REAR DOOR SPEAKER

Removal

1. Remove rear door finisher. Refer to [EI-31](#).
2. Remove the three rear door speaker screws and remove rear door speaker.
3. Disconnect rear door speaker connector.

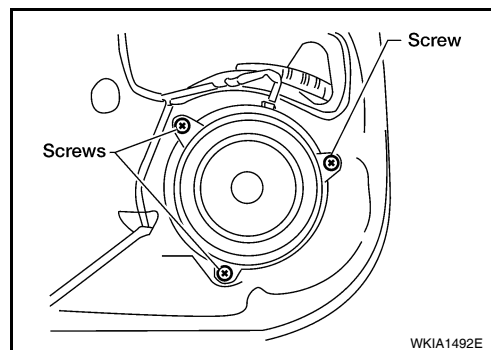

Installation

Installation is in the reverse order of removal.

REAR DOOR TWEETER


Removal

1. Remove rear door finisher. Refer to [EI-31](#).

AUDIO

< SERVICE INFORMATION >

2. Remove rear door tweeter screws and remove rear door tweeter.
3. Disconnect rear door tweeter connector.

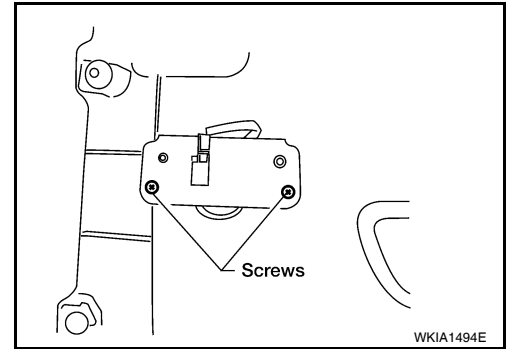


Installation

Installation is in the reverse order of removal.

SATELLITE RADIO ANTENNA

Removal

1. Lower headliner. Refer to [EI-37](#).
2. Disconnect satellite radio antenna connector.
3. Remove satellite radio antenna nut.
4. Remove satellite radio antenna.

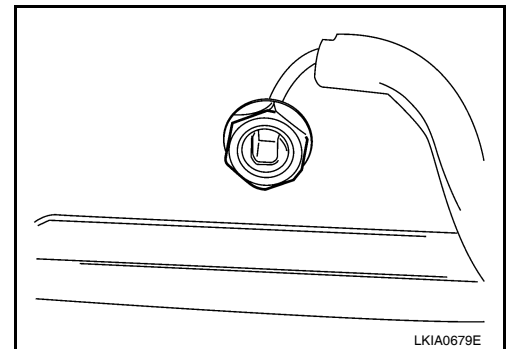


Installation

Installation is in the reverse order of removal.

SATELLITE RADIO TUNER

Removal


1. Remove BCM. Refer to [BCS-24, "BCM"](#).
2. Remove the accelerator pedal. Refer to [ACC-3](#).
3. Disconnect Bose speaker amp. and satellite radio tuner connectors.
4. Remove Bose speaker amp./satellite radio tuner bracket screws and slide Bose speaker amp./satellite radio tuner bracket down.

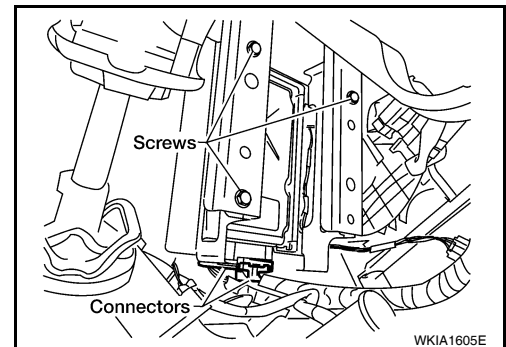

AUDIO

< SERVICE INFORMATION >

5. Remove satellite radio tuner screws (A) and remove satellite radio tuner from Bose speaker amp./satellite radio tuner bracket (1).

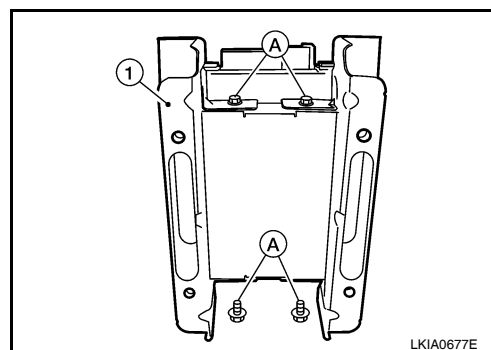


Installation

Installation is in the reverse order of removal.

STEERING WHEEL AUDIO CONTROL SWITCHES

Removal

1. Remove steering wheel. Refer to [PS-7](#).
2. Remove steering wheel rear cover screws and remove steering wheel rear cover.
3. Remove steering wheel switch assembly screws and steering wheel switches.

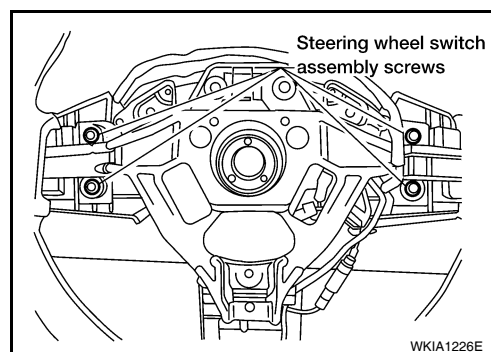


Installation

Installation is in the reverse order of removal.

SUBWOOFER

Removal

1. Remove front driver seat. Refer to [SE-83](#).
2. Remove the subwoofer bolts.
3. Disconnect subwoofer connector and remove the subwoofer.

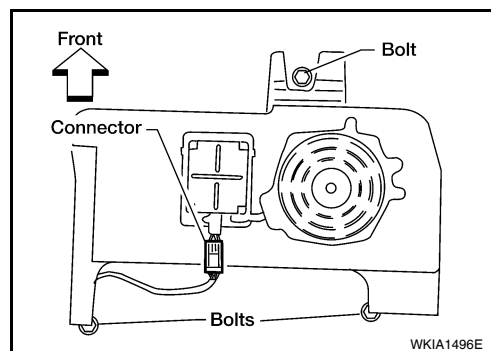

Installation

Installation is in the reverse order of removal.

AUDIO ANTENNA

< SERVICE INFORMATION >

AUDIO ANTENNA

System Description

INFOID:000000003533688

With the ignition switch in ACC or ON, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to audio unit terminal 10.

Ground is supplied through the case of the antenna amp.

When the audio unit switch is turned ON, antenna signal is supplied

- through audio unit terminal 5
- to the antenna amp. terminal 1.

Then the antenna amp. is activated.

The amplified radio signals are supplied to the audio unit through the antenna amp.



AUDIO ANTENNA

< SERVICE INFORMATION >

Wiring Diagram - W/ANT -

INFOID:000000003533689

AV-W/ANT-01

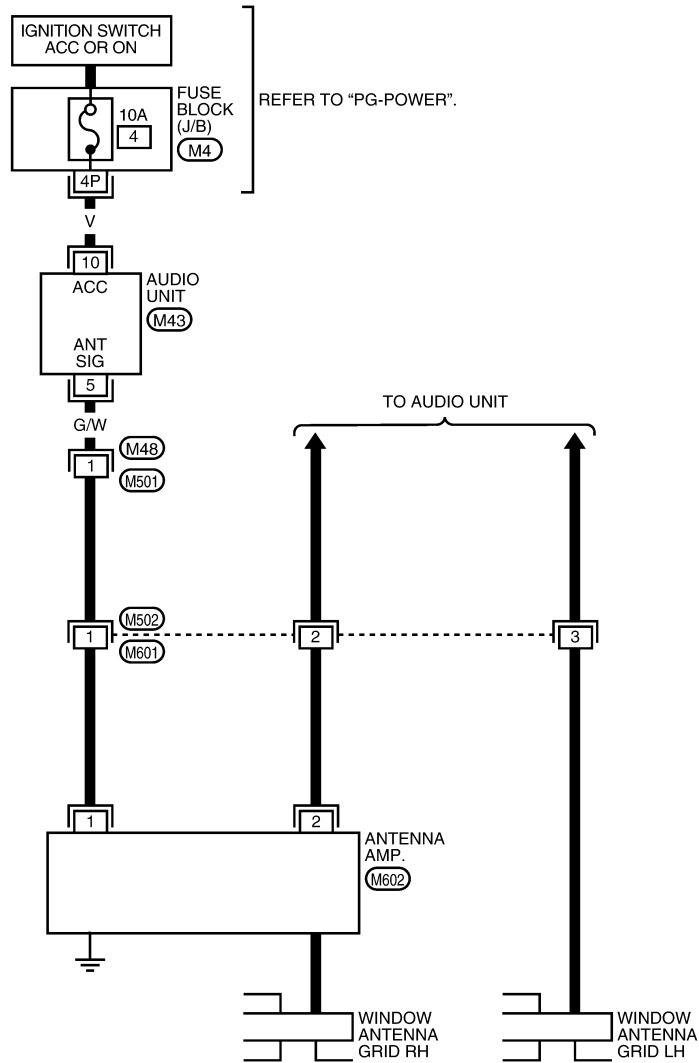

★ : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.


WKWA2285E

AUDIO ANTENNA

< SERVICE INFORMATION >

Location of Antenna

INFOID:000000003533690

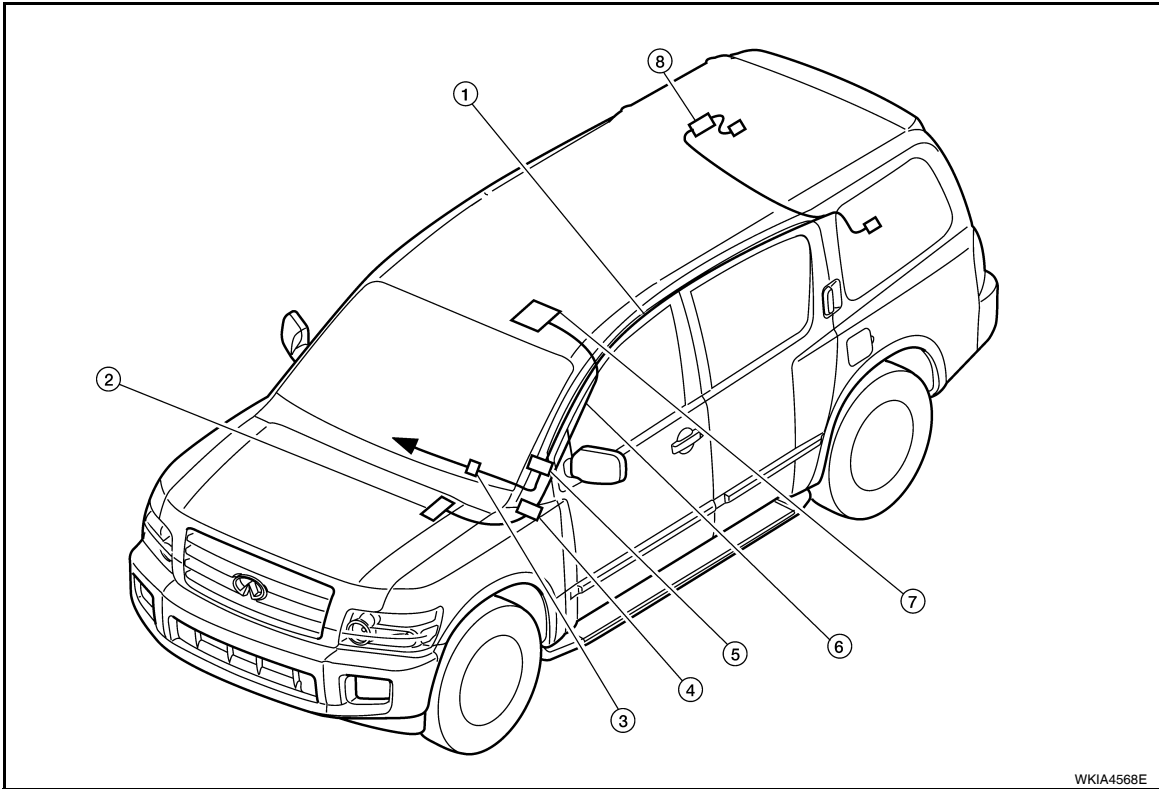

←: To audio unit


- | | | |
|---------------------------------------------------------------|--------------------------|-----------------------------|
| 1. Antenna Feeder | 2. Satellite radio tuner | 3. M48, M501 |
| 4. M64, M35 | 5. M502, M604 | 6. Satellite antenna feeder |
| 7. Satellite antenna (if equipped, factory installed) M351 | 8. Antenna amp | |

Window Antenna Repair

INFOID:000000003533691

ELEMENT CHECK


1. Attach probe circuit tester (ohm setting) to antenna terminal on each side.

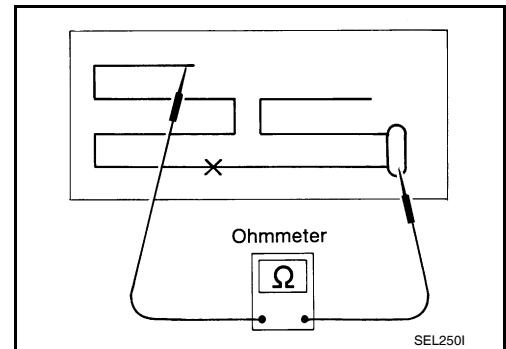


AUDIO ANTENNA

< SERVICE INFORMATION >


- When measuring continuity, wrap tin foil around the top of probe. Then, press the foil against the wire with your finger.

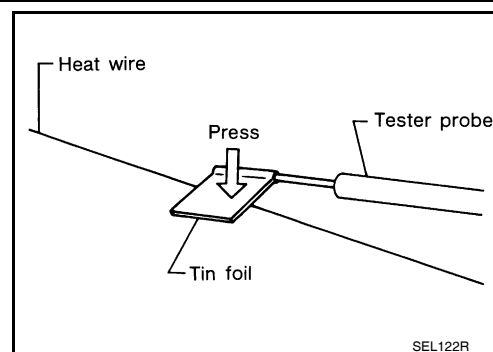

2. If an element is broken, no continuity will exist.

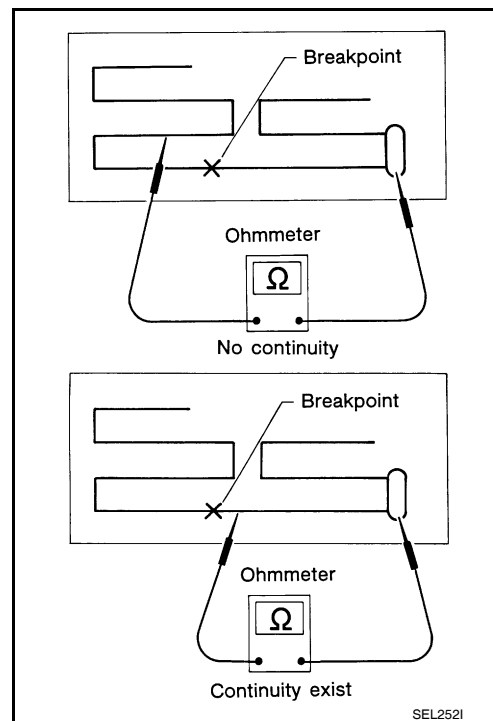

3. To locate a break, move probe along element. Tester indication will change abruptly when probe passes the broken point.

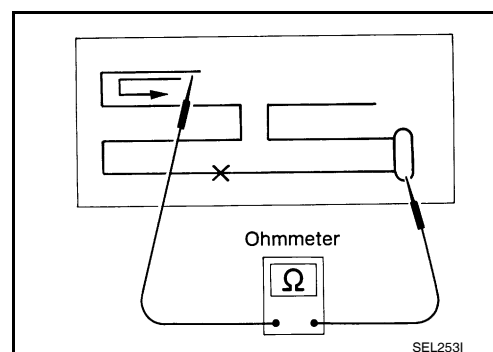

ELEMENT REPAIR

Refer to [GW-81, "Filament Repair"](#).


TELEPHONE

< SERVICE INFORMATION >

TELEPHONE

Component Parts and Harness Connector Location

INFOID:000000003533692

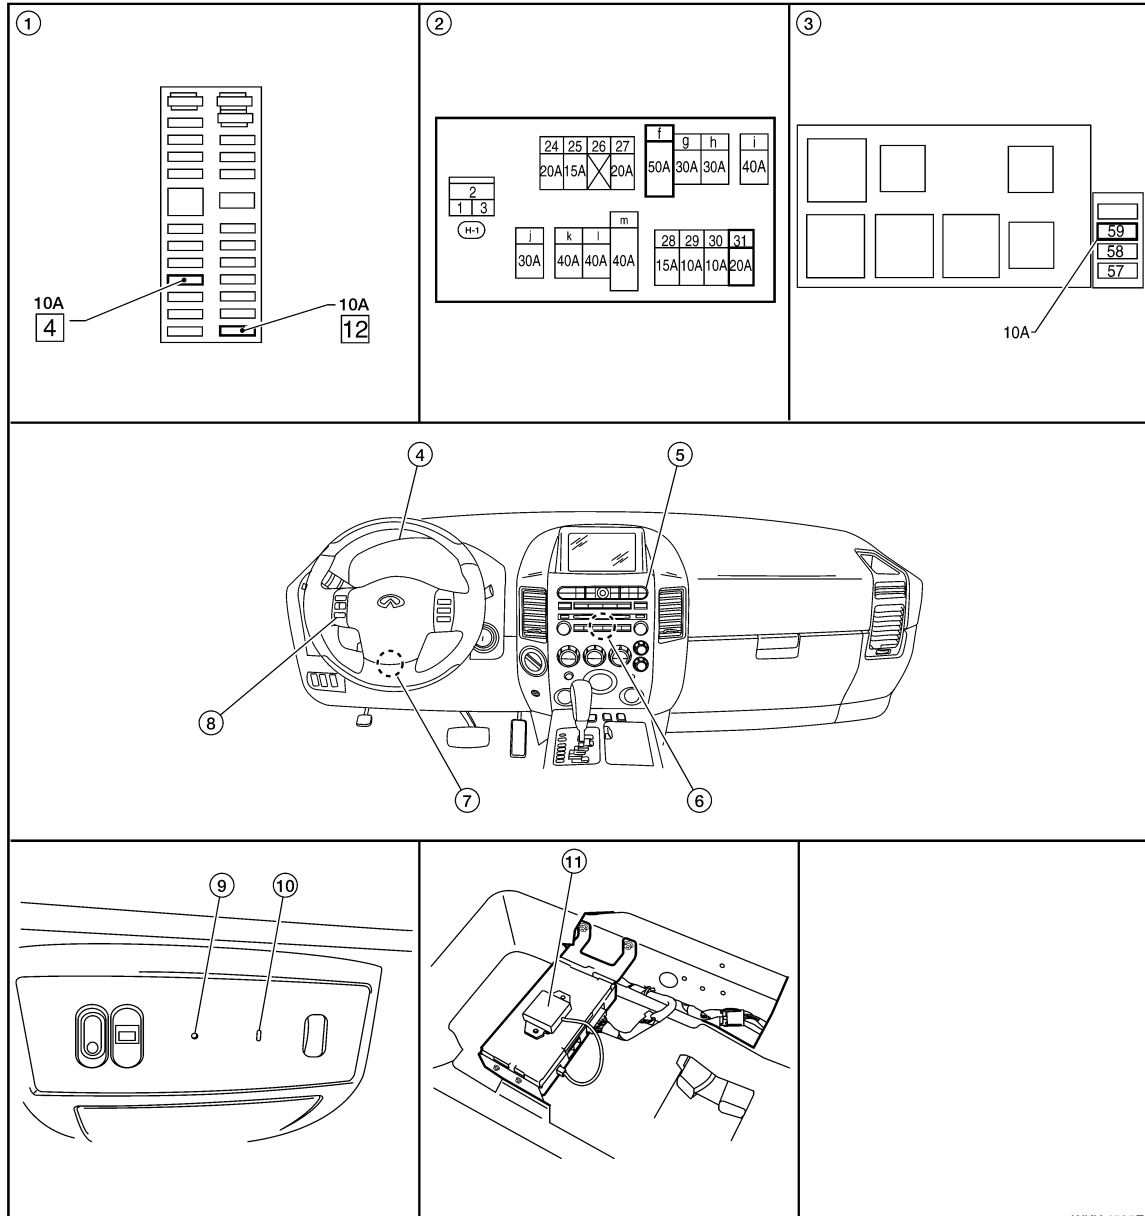

WKIA4565E

- | | | |
|-----------------------------------|----------------------------------------------------------------------|-----------------------|
| 1. Fuse block (J/B) | 2. Fuse and fusible link box | 3. Fuse and relay box |
| 4. Combination meter M24 | 5. AV switch M98 | 6. Audio unit M45 |
| 7. BCM M18, M19 | 8. Steering wheel audio control switches | 9. Microphone R108 |
| 10. Bluetooth ON indicator R16 | 11. Bluetooth control unit B141, B142 (View with seat removed) | |

System Description

INFOID:000000003533693

BLUETOOTH® HANDS-FREE PHONE SYSTEM

Refer to the Owner's Manual for Bluetooth telephone system operating instructions.

NOTE:


Cellular telephones must have their wireless connection set up (paired) before using the Bluetooth telephone system.

TELEPHONE

< SERVICE INFORMATION >

Bluetooth telephone system allows users who have a Bluetooth cellular telephone to make a wireless connection between their cellular telephone and the Bluetooth control unit. Hands-free cellular telephone calls can be sent and received. Personal memos can be created using the Infinity Voice Recognition system. Some Bluetooth cellular telephones may not be recognized by the Bluetooth control unit. When a cellular telephone or the Bluetooth control unit is replaced, the telephone must be paired with the Bluetooth control unit. Different cellular telephones may have different pairing procedures. Refer to the cellular telephone operating manual.

Bluetooth Telephone System Diagram

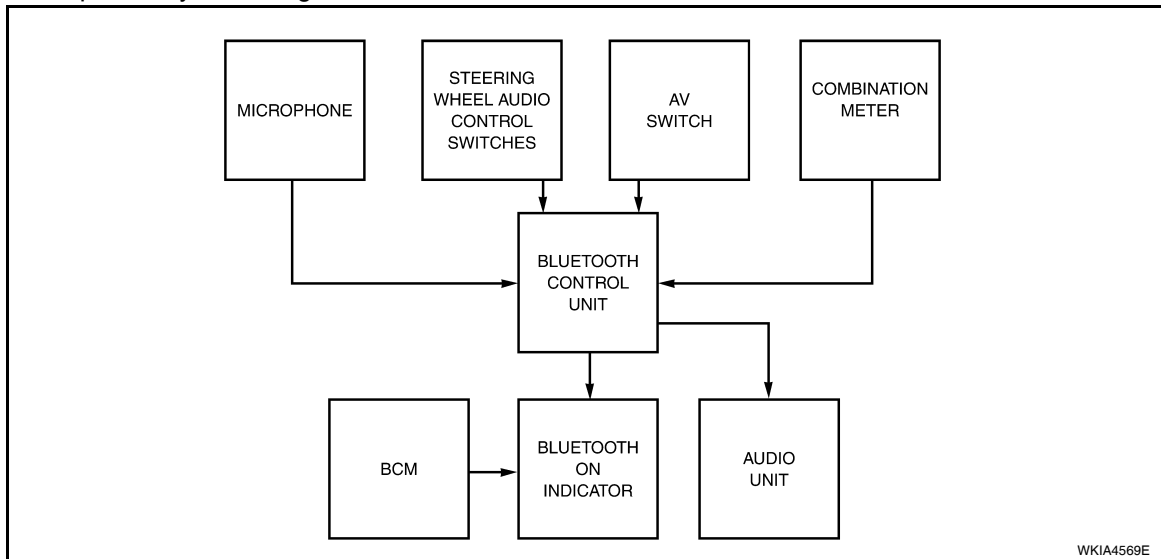

Bluetooth Control Unit

When the ignition switch is turned to ACC or ON, the Bluetooth control unit will power up. During power up, the Bluetooth control unit is initialized and performs various self checks. Initialization may take up to 10 seconds. During this time the Bluetooth ON indicator will flash until initialization is complete. Infinity Voice Recognition will then become active and the Bluetooth ON indicator will remain on. Bluetooth telephone functions can be turned off using the voice recognition system.

BCM

The BCM supplies power for the Bluetooth ON indicator.

Steering Wheel Audio Control Switches

When buttons on the steering wheel audio control switch are pushed, the resistance in steering wheel audio control switch circuit changes depending on which button is pushed. The Bluetooth control module uses this signal to perform various functions while navigating through the voice recognition system.

The following functions can be performed using the steering wheel audio control switch:

- Initiate Self Diagnosis of the Bluetooth telephone system
- Start a voice recognition session
- Answer and end telephone calls
- Adjust the volume of calls
- Record memos

AV Switch

Call volume can be adjusted using the AV switch.

Microphone

The microphone is located in the roof console assembly. The microphone sends a signal to the Bluetooth control unit.

Combination Meter

The combination meter supplies speed signals to the Bluetooth control unit. Vehicle speed signals are used to determine which voice command functions will be disabled based on driving conditions.

Bluetooth ON Indicator

The Bluetooth ON indicator is located in the overhead console. The indicator will flash during power up while the Bluetooth control unit is initializing. This process may take up to 10 seconds. After initialization, the indicator will remain on to indicate that the system is ready for voice commands.

TELEPHONE



< SERVICE INFORMATION >

Audio Unit

The audio unit receives signals from the Bluetooth control unit and sends audio signals to the speakers.

Wiring Diagram - H/PHONE -

INFOID:000000003533694

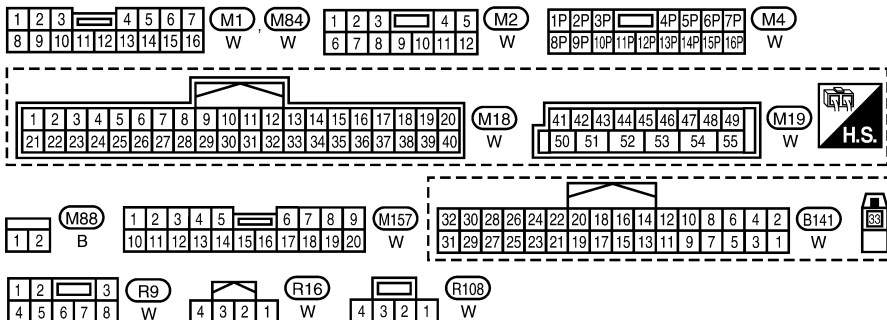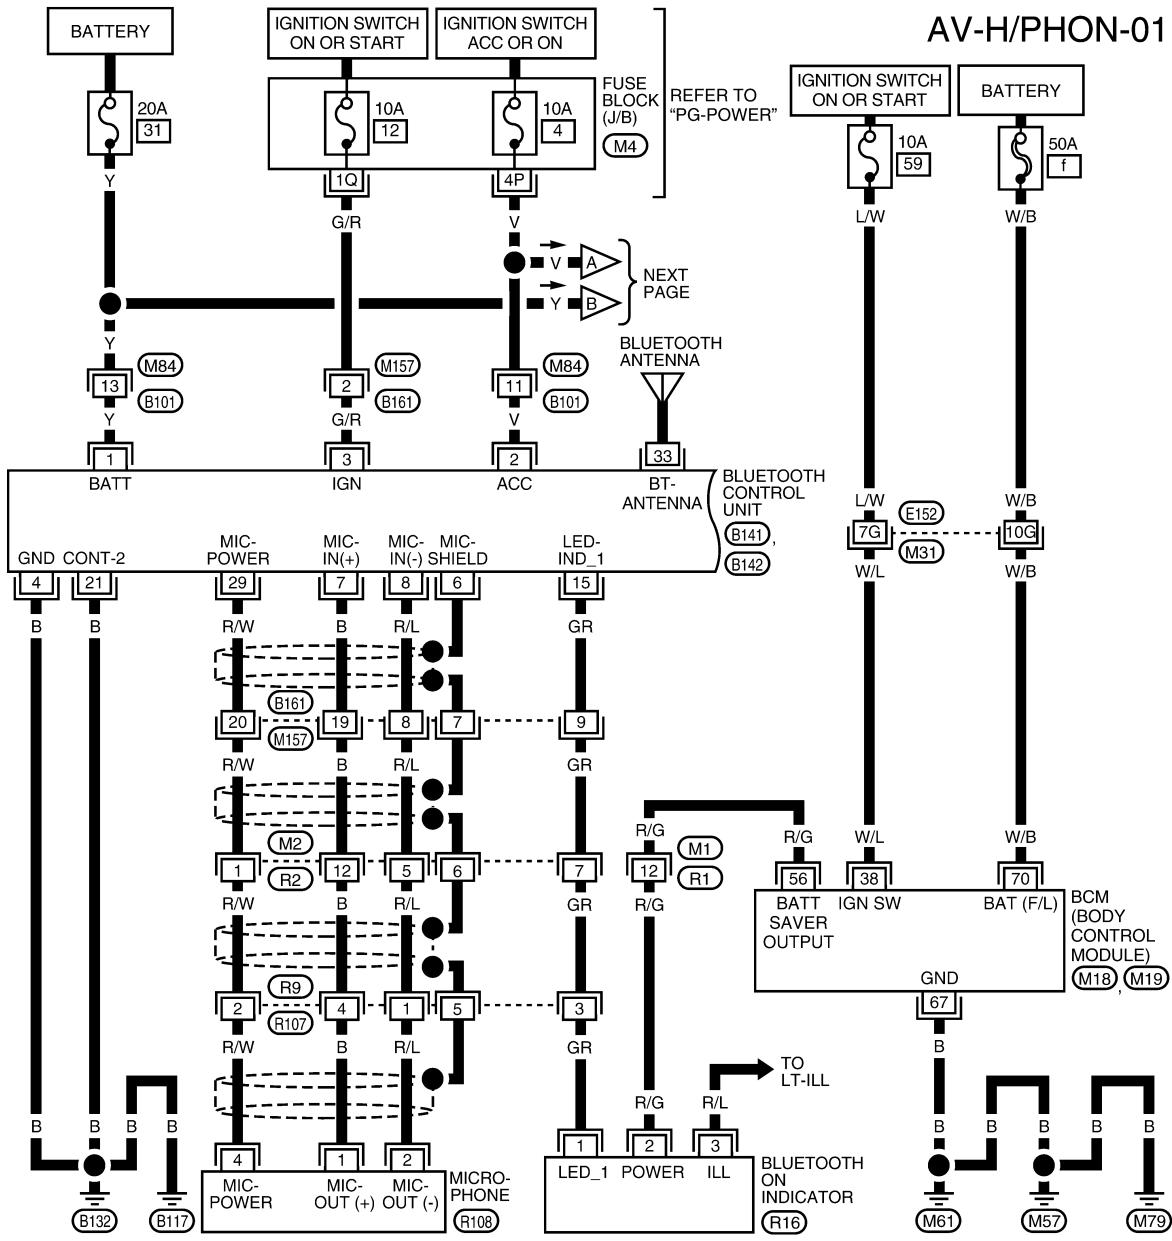



REFER TO THE FOLLOWING.
(M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3603E

TELEPHONE

< SERVICE INFORMATION >

AV-H/PHON-02

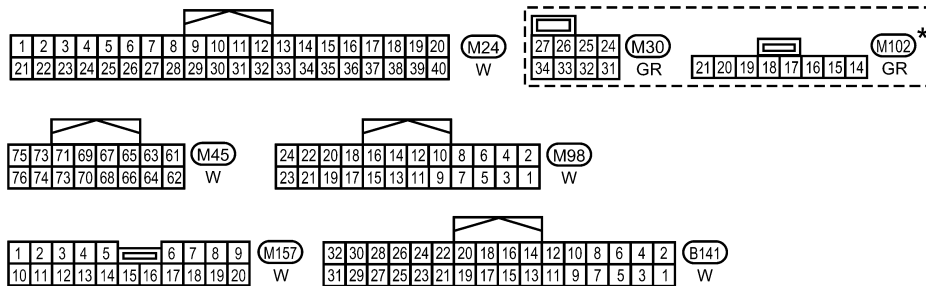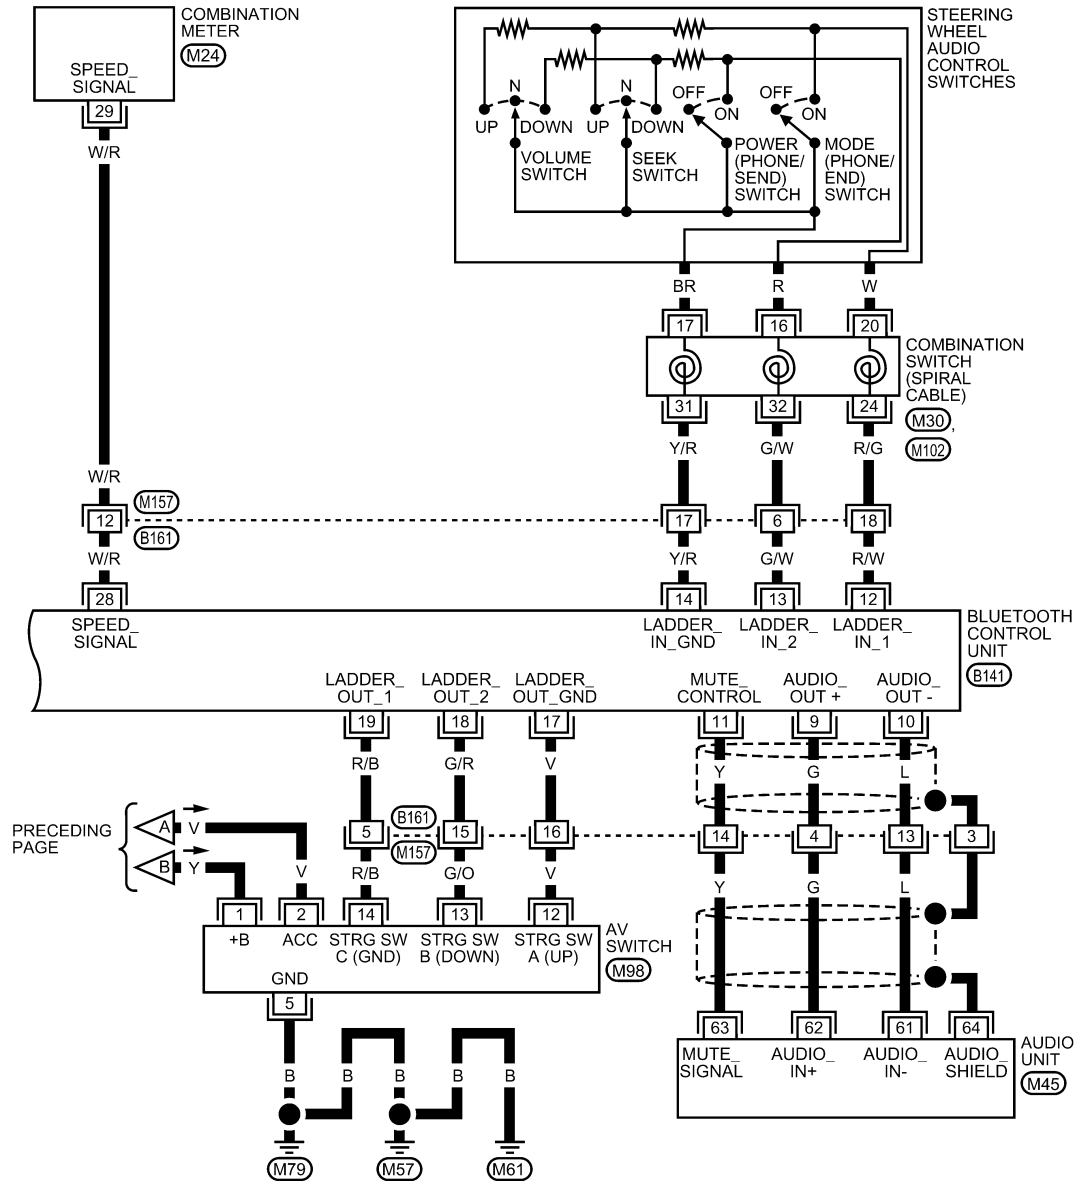

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

AWNWA0332G

TELEPHONE

< SERVICE INFORMATION >

Terminal and Reference Value for Bluetooth Control Unit

INFOID:000000003533695

| Terminal (Wire color) | | Item | Signal input/ output | Condition | | Reference value (Approx.) | Example of symptom |
|--------------------------|---------|--------------------------|----------------------------|--------------------|------------------------|------------------------------|------------------------------------------------|
| + | – | | | Ignition switch | Operation | | |
| 1 (Y) | Ground | Battery power | Input | – | – | Battery voltage | System does not work properly. |
| 2 (V) | Ground | ACC power | Input | ACC/ ON | – | Battery voltage | System does not work properly. |
| 3 (G/R) | Ground | IGN power | Input | ON/ START | – | Battery voltage | System does not work properly. |
| 4 (B) | – | Ground | – | – | – | – | – |
| 6 | – | Shield | – | – | – | – | – |
| 7 (B) | 8 (R/L) | Mic-in signal | Input | ON | – | – | – |
| 9 (R/W) | 10 (R) | Audio out | Output | – | – | – | – |
| 11(B) | – | Mute | – | – | – | – | – |
| 12 (R/G) | Ground | Remote control A | Input | ON | Press MODE switch | Approx. 0V | Steering wheel audio controls do not function. |
| | | | | | Press SEEK UP switch | Approx. 0.75V | |
| | | | | | Press VOL UP switch | Approx. 2V | |
| | | | | | Except for above | Approx. 5V | |
| 13 (G/W) | Ground | Remote control B | Input | ON | Press POWER switch | Approx. 0V | Steering wheel audio controls do not function. |
| | | | | | Press SEEK DOWN switch | Approx. 0.75V | |
| | | | | | Press VOL DOWN switch | Approx. 2V | |
| | | | | | Except for above | Approx. 5V | |
| 14 (Y/R) | – | Remote control ground | – | – | – | – | Steering wheel audio controls do not function. |
| 15 (GR) | – | LED | – | – | – | – | – |
| 17 (V) | – | – | – | – | – | – | – |
| 18 (G/O) | – | – | – | – | – | – | – |
| 19 (R/B) | – | – | – | – | – | – | – |
| 21 (B) | – | Ground | – | – | – | – | – |
| 28 (W/R) | – | Speed signal | – | – | – | – | – |
| 29(R/W) | – | Microphone power | – | – | – | – | – |
| 33 | – | Bluetooth antenna signal | Input | – | – | – | – |

Bluetooth Control Unit Self-Diagnosis Function

INFOID:000000003533696

The Bluetooth control unit has two diagnostic checks. The first diagnostic check is performed automatically every ignition cycle during control unit initialization. The second diagnostic check is performed by the technician using the steering wheel audio control switches prior to trouble diagnosis.

TELEPHONE


< SERVICE INFORMATION >

BLUETOOTH CONTROL UNIT INITIALIZATION CHECKS


- Internal control unit failure
- Bluetooth antenna connection open or shorted
- Steering wheel audio control switches (SEND/END) stuck closed
- Vehicle speed pulse count
- Microphone connection test (with playback to operator)
- Bluetooth inquiry check

STARTING THE DIAGNOSTIC MODE

1. Turn ignition switch to ACC or ON.
2. Wait for the Bluetooth system to complete initialization and the Bluetooth ON indicator to stop flashing. This may take up to 10 seconds.
3. Press and hold the steering wheel audio control switch SEND button for at least 5 seconds. The Bluetooth system will begin to play a verbal prompt.

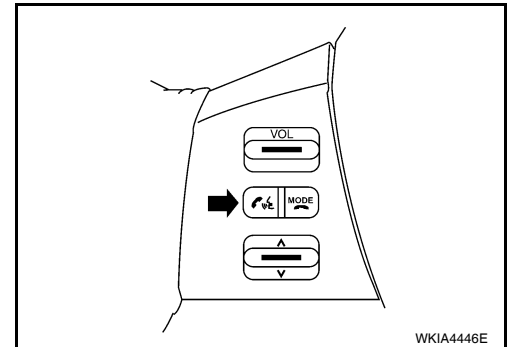

4. While the prompt is playing, momentarily press both the steering wheel audio control switches SEND and END buttons simultaneously. The Bluetooth system will sound a 5 second beep.
5. While the beep is sounding, momentarily press both the steering wheel audio control switches SEND and END buttons simultaneously again.
6. The Bluetooth system has now entered into the diagnostic mode. Results of the diagnostic checks will be verbalized to the technician by the system.

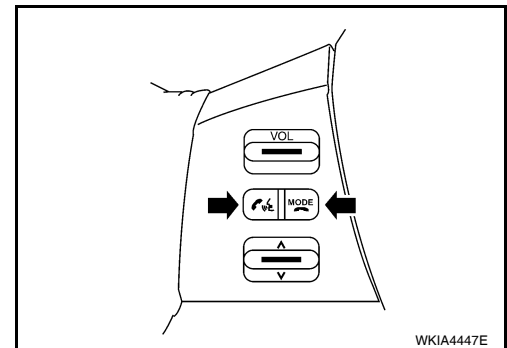

Power Supply and Ground Circuit Inspection for Bluetooth Control Unit

INFOID:000000003533697

1.CHECK FUSES

Make sure the following fuses for the Bluetooth control unit are not blown.

| Terminals | | Ignition Switch | Fuse No. |
|-----------|----------|-----------------|----------|
| Connector | Terminal | | |
| B141 | 1 | All positions | 31 |
| | 2 | ACC/ON | 4 |
| | 3 | ON/START | 12 |

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of blown fuse before installing new fuse. Refer to [PG-3](#).

2.CHECK POWER SUPPLY CIRCUIT


1. Disconnect Bluetooth control unit connector B141.

TELEPHONE

< SERVICE INFORMATION >

- Check voltage between connector terminals and ground as follows.

| Terminals | | | Ignition switch position | | |
|-----------|----------|--------|--------------------------|-----------------|-----------------|
| (+) | | (-) | OFF | ACC | ON |
| Connector | Terminal | | | | |
| B141 | 1 | Ground | Battery voltage | Battery voltage | Battery voltage |
| | 2 | | 0V | Battery voltage | Battery voltage |
| | 3 | | 0V | 0V | Battery voltage |

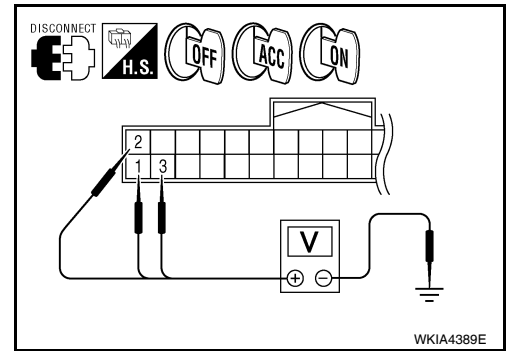

OK or NG


OK >> GO TO 3.

NG >> Check harness for open between Bluetooth control unit and fuse.

3. CHECK GROUND CIRCUITS

- Turn ignition switch OFF.
- Check continuity between the following Bluetooth control unit terminals and ground.

| Terminals | | | Continuity |
|-----------|----------|--------|------------|
| Connector | Terminal | — | |
| B141 | 4 | Ground | Yes |
| | 21 | | |

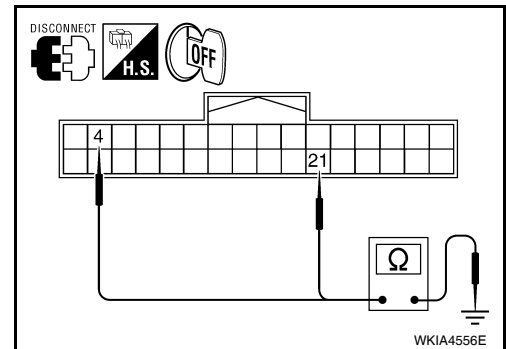

OK or NG

OK >> Inspection End.


NG >> Repair or replace harness.

Removal and Installation

BLUETOOTH CONTROL UNIT

Removal

- Disconnect battery negative terminal.
- Remove front passenger seat. Refer to [SE-83](#).
- Remove Bluetooth control unit kick shield screws (A) and remove bluetooth control unit kick shield (1).
- Disconnect Bluetooth control unit harness connectors.
- Remove Bluetooth control unit screws (B).
- Remove Bluetooth control unit (2) from bluetooth control unit bracket.

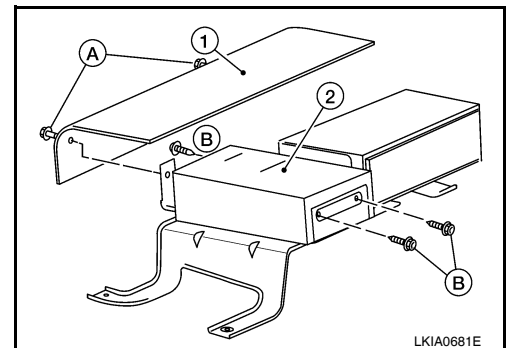

Installation

Installation is in the reverse order of removal.

NOTE:

When replacing bluetooth control unit, Perform pairing procedure. Refer to Owner's Manual Pairing Procedure.

BLUETOOTH ON INDICATOR

Removal

TELEPHONE


< SERVICE INFORMATION >

CAUTION:

To avoid damage use care when removing console finisher.

- Sunroof switch (2).
- Microphone (3).
- Front personal/map lamp LH (4).
- Interior lamp switch (5).
- Front personal/map lamp RH (6).

1. Remove console assembly, roof finisher.
2. Release Bluetooth ON indicator tabs.
3. Disconnect Bluetooth ON indicator connector.

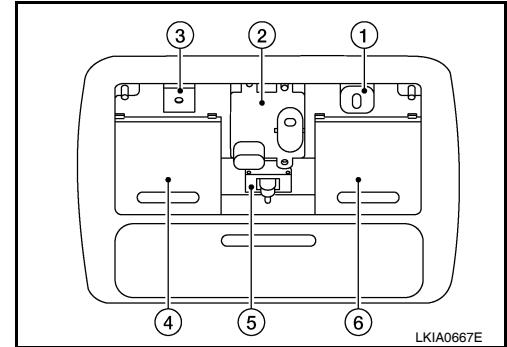

4. Remove Bluetooth ON indicator (1).

Installation

Installation is in the reverse order of removal.

MICROPHONE


Removal

CAUTION:

To avoid damage use care when removing console finisher.

- Bluetooth on indicator (1).
- Sunroof switch (2).
- Front personal/map lamp LH (4).
- Interior lamp switch (5).
- Front personal/map lamp RH (6).

1. Remove console assembly, roof finisher.
2. Release microphone tabs.
3. Disconnect microphone connector.

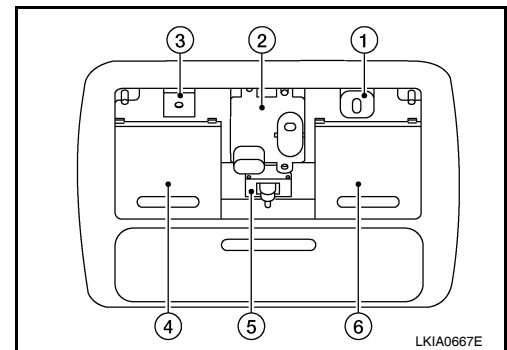

4. Remove microphone (3).

Installation

Installation is in the reverse order of removal.


DVD ENTERTAINMENT SYSTEM

< SERVICE INFORMATION >

DVD ENTERTAINMENT SYSTEM

Component Parts and Harness Connector Location

INFOID:000000003533699

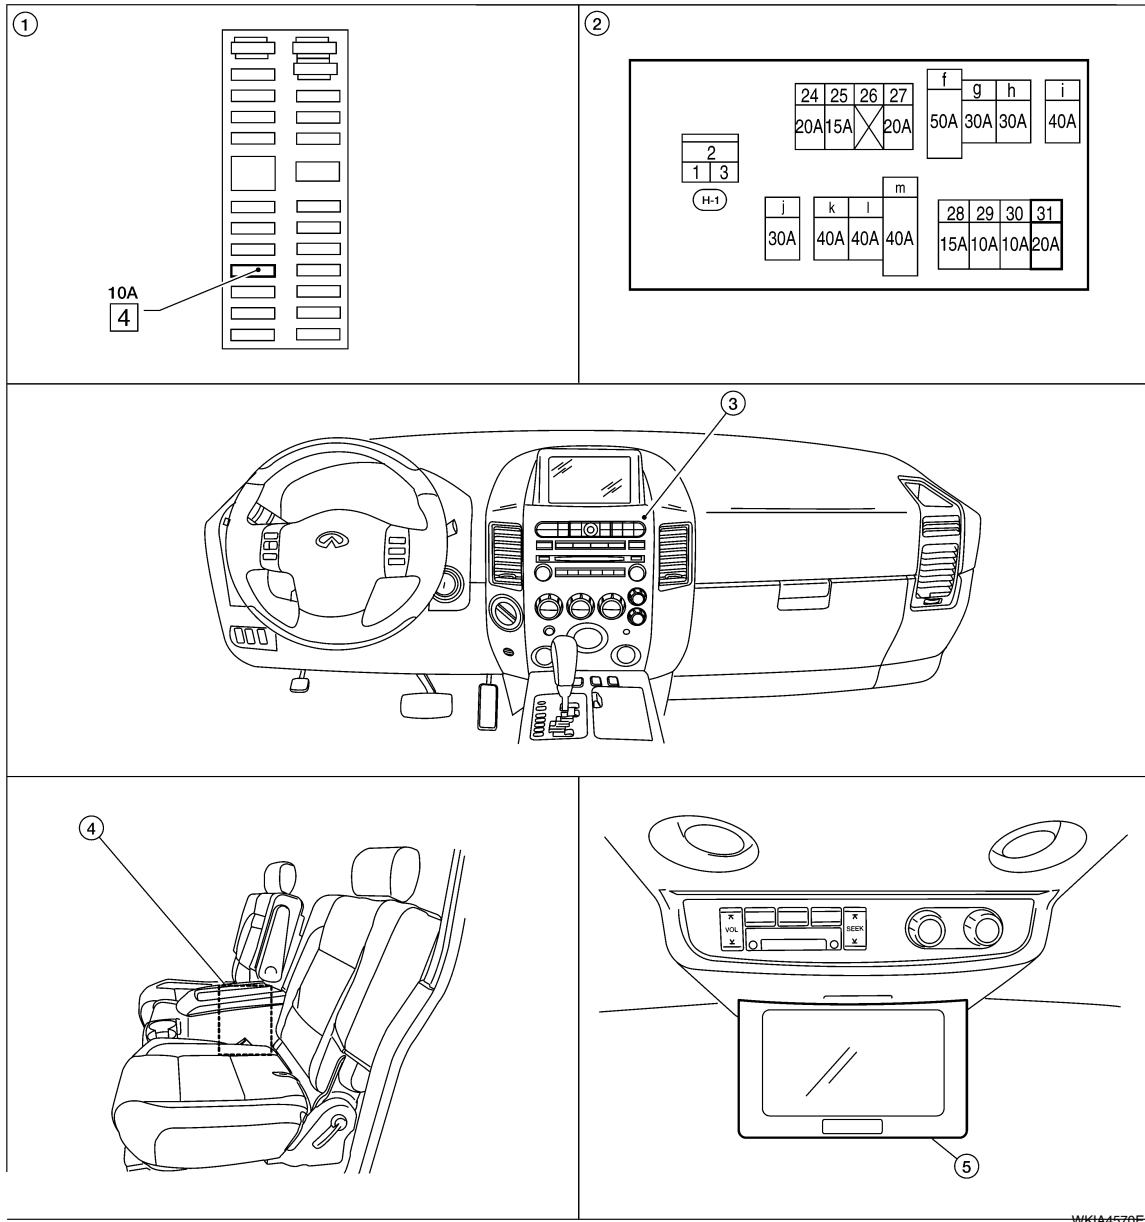

WKA4570E

- | | | |
|-----------------------------|------------------------------|----------------------|
| 1. Fuse block (J/B) M4 | 2. Fuse and fusible link box | 3. Audio Unit M46 |
| 4. DVD player M205, M206 | 5. Video Monitor R202 | |

Description

INFOID:000000003533700

Refer to Owner's Manual for DVD entertainment system operating instructions.

Power is supplied at all times

- through 20A fuse (No. 31, located in the fuse and fusible link box)
- to DVD player terminal 16.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to DVD player terminal 15.

Power is also supplied

- from DVD player terminals 31 and 32

DVD ENTERTAINMENT SYSTEM

< SERVICE INFORMATION >

- to video monitor terminals 11 and 12.
- Ground is supplied
- to DVD player terminal 22
- through body grounds M57, M61 and M79.
- Audio signals are supplied
- through DVD player terminals 1, 2, 3 and 4
- to audio unit terminals 34, 35, 36 and 37.
- Video signals are supplied
- through DVD player terminals 23, 24, 28 and 29
- to video monitor terminals 5, 6, 7 and 8.

A

B

C

D

E

F

G

H

I

J

L

M

N

O

P


AV

DVD ENTERTAINMENT SYSTEM

< SERVICE INFORMATION >

Schematic

INFOID:000000003533701

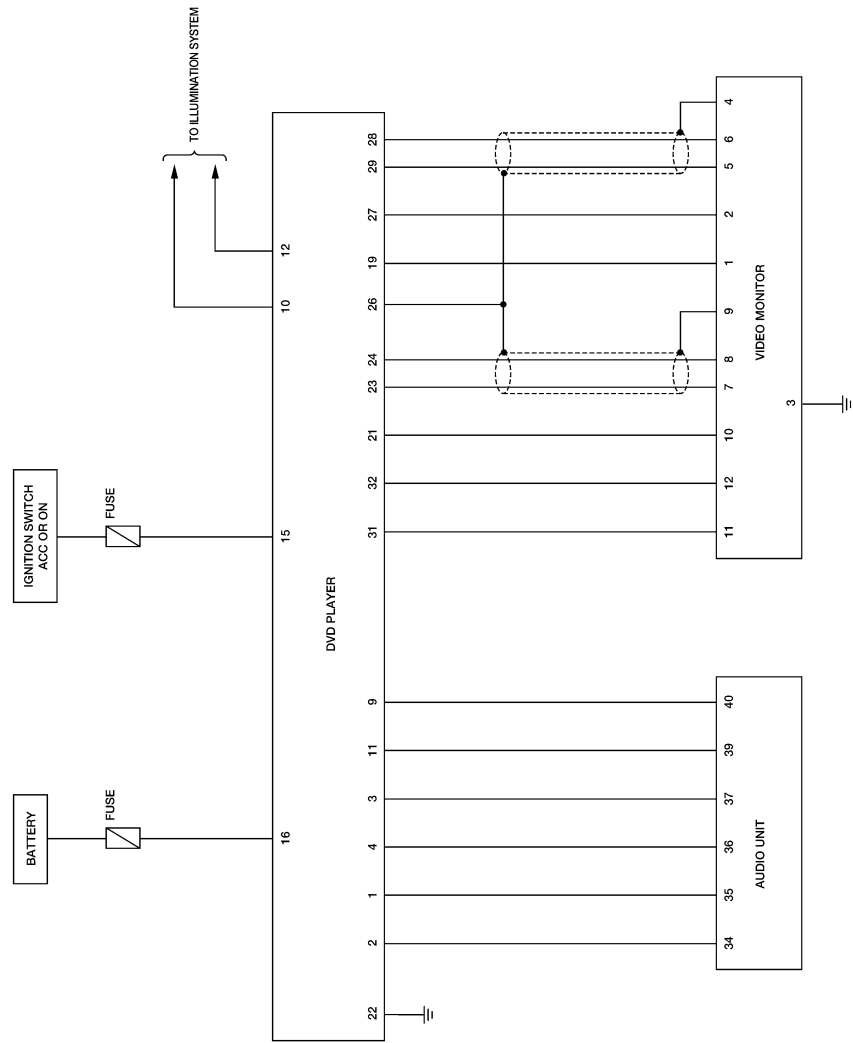

WKWA0801E




DVD ENTERTAINMENT SYSTEM

< SERVICE INFORMATION >

Wiring Diagram - DVD -

INFOID:000000003533702

AV-DVD-01

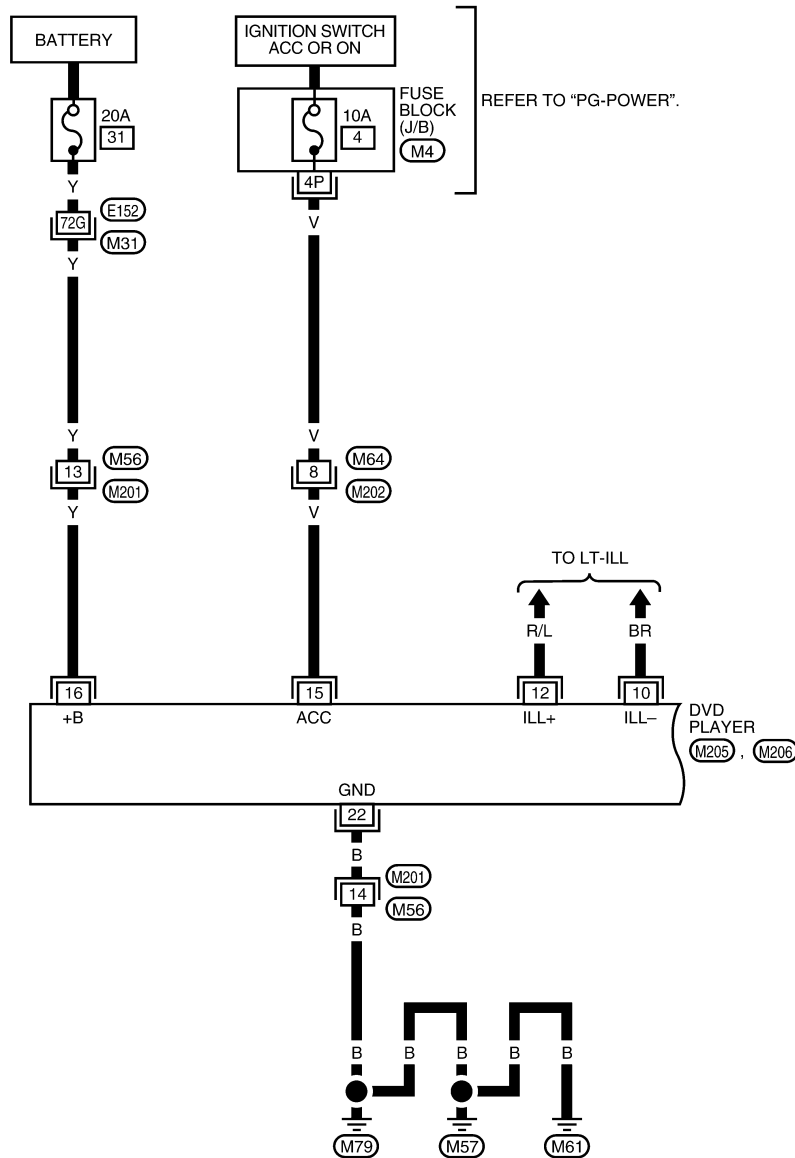

REFER TO THE FOLLOWING.



(M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA2286E

DVD ENTERTAINMENT SYSTEM

< SERVICE INFORMATION >

AV-DVD-02

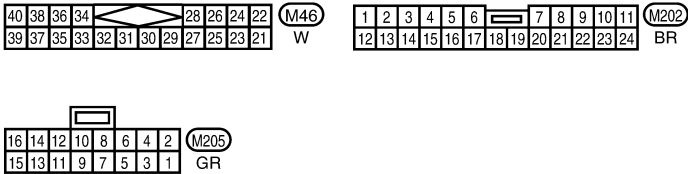
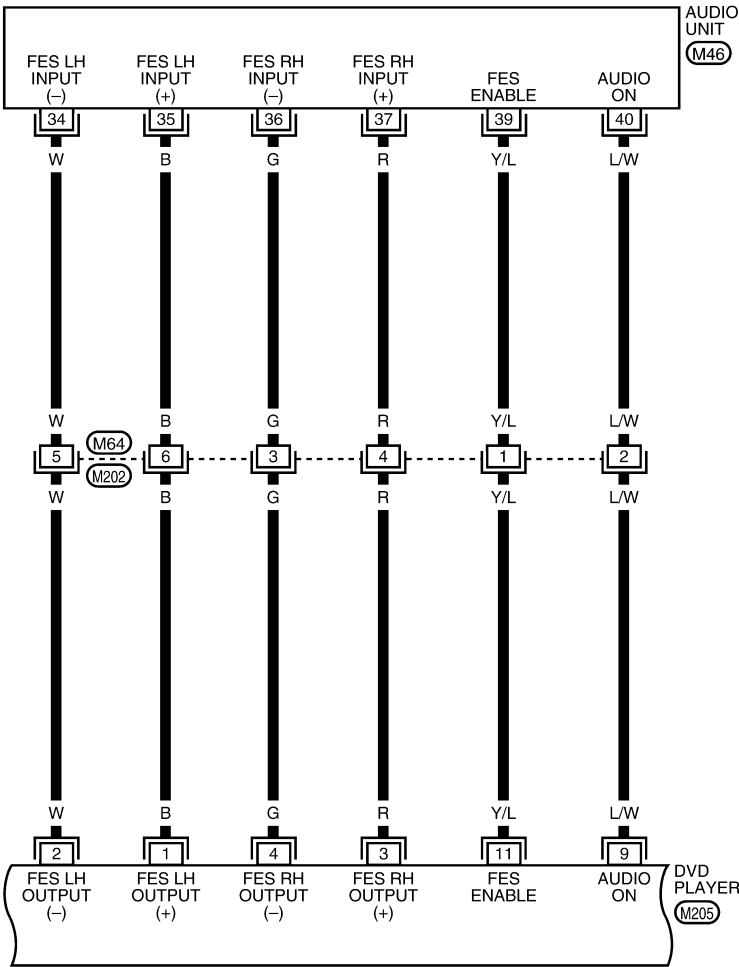


WKWA1188E

DVD ENTERTAINMENT SYSTEM

< SERVICE INFORMATION >

AV-DVD-03

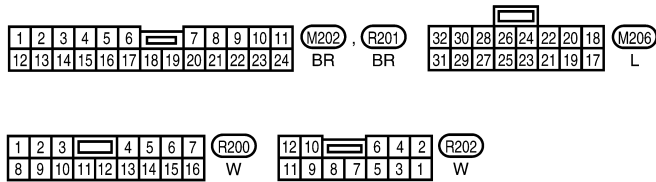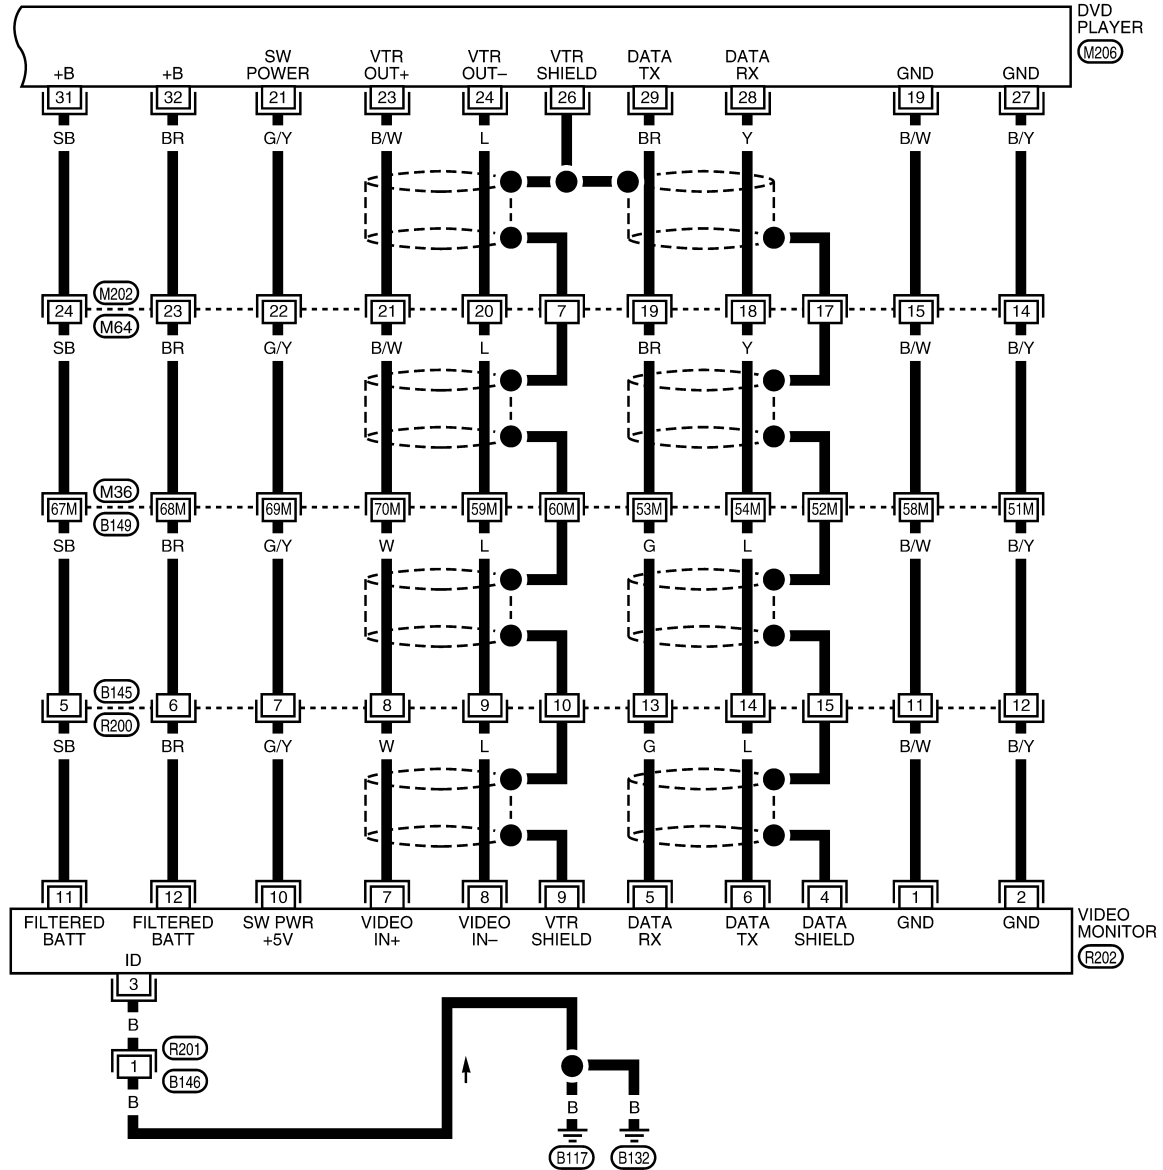

REFER TO THE FOLLOWING.

(M36) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3590E

DVD ENTERTAINMENT SYSTEM

< SERVICE INFORMATION >

Trouble Diagnosis

INFOID:000000003533703

| Symptom | Possible causes | Repair order |
|-------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DVD player inoperative | <ol style="list-style-type: none"> 1. Power supply 2. Ground circuit 3. Audio enable circuit 4. DVD enable signal 5. Audio enable signal 6. DVD player 7. Audio unit | <ol style="list-style-type: none"> 1. Refer to AV-70, "Power Supply Circuit Inspection". 2. Refer to AV-70, "Power Supply Circuit Inspection". 3. Check audio enable circuits for open or short between audio unit terminals 39, 40 and DVD player terminals 11, 9. 4. Push power switch of DVD player and verify approx. 5V is present at terminal 39 of audio unit. 5. Push power switch of DVD player and verify approx. 5V is present at terminal 9 of DVD player. 6. Remove DVD player for repair. 7. Remove audio unit for repair. |
| No sound when playing DVD | <ol style="list-style-type: none"> 1. Audio signal circuits 2. DVD player 3. Audio unit | <ol style="list-style-type: none"> 1. Check audio signal circuits for open or short between DVD player terminals 1, 2, 3 and 4 and audio unit terminals 34, 35, 36 and 37. 2. Remove DVD player for repair. 3. Remove audio unit for repair. |
| Video monitor is inoperative/does not operate properly | <ol style="list-style-type: none"> 1. Power supply 2. Video monitor ground circuit 3. Video circuits 4. Data signal 5. Video monitor 6. DVD player | <ol style="list-style-type: none"> 1. Operate DVD player and verify battery positive voltage is present at terminals 11 and 12 of video monitor. Verify approximately 5 volts is present at terminal 10 of video monitor. 2. Check video monitor ground circuits between DVD player terminals 19 and 27 and video monitor terminals 1 and 2. 3. Check video circuits between DVD player terminals 23 and 24 and video monitor terminals 7 and 8. 4. Check data signal circuit for open or short between DVD player terminal 29 and video monitor terminal 5. 5. Remove video monitor for repair. 6. Remove DVD player for repair. |
| DVD remote control is inoperative/does not operate properly | <ol style="list-style-type: none"> 1. Data signal 2. DVD player remote control batteries 3. DVD player remote control 4. Video monitor | <ol style="list-style-type: none"> 1. Check data signal circuit for open or short between DVD player terminal 28 and video monitor terminal 6. 2. Replace DVD player remote control batteries. 3. Replace DVD player remote control. 4. Remove video monitor for repair. |
| Headphones inoperative | <ol style="list-style-type: none"> 1. Headphone batteries 2. Headphones 3. Rear audio remote control unit | <ol style="list-style-type: none"> 1. Replace headphone batteries. 2. Replace headphones. 3. Replace rear audio remote control unit. |
| Snowy video/poor audio | <ol style="list-style-type: none"> 1. Harness or connectors 2. DVD player | <ol style="list-style-type: none"> 1. Check harness and connectors for open or short. 2. Check DVD player. |
| Snowy video (audio OK) | <ol style="list-style-type: none"> 1. Harness or connectors 2. DVD player | <ol style="list-style-type: none"> 1. Check harness and connectors for open or short. 2. Check DVD player. |
| No video (audio OK) | <ol style="list-style-type: none"> 1. Harness or connectors 2. DVD player 3. Video monitor | <ol style="list-style-type: none"> 1. Check harness and connectors for open or short. 2. Check DVD player. 3. Check video monitor. |
| Dim video (audio OK) | <ol style="list-style-type: none"> 1. Harness or connectors 2. DVD player 3. Video monitor | <ol style="list-style-type: none"> 1. Check harness and connectors for open or short. 2. Check DVD player. 3. Check video monitor. |

Power Supply Circuit Inspection

INFOID:000000003533704

1.CHECK FUSES

Check that the following fuses are not blown.

DVD ENTERTAINMENT SYSTEM

< SERVICE INFORMATION >

| Unit | Terminals | Signal name | Fuse No. |
|------------|-----------|---------------------------|----------|
| DVD player | 16 | Battery power | 31 |
| | 15 | Ignition switch ACC or ON | 4 |

OK or NG


OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of blown fuse before installing new fuse. Refer to [PG-3](#).

2. POWER SUPPLY CIRCUIT CHECK

1. Disconnect DVD player connector M205.
2. Check voltage between the DVD player and ground.

| Unit | Terminal No. | | | OFF | ACC | ON |
|------------|--------------|-----------------------|--------|-----------------|-----------------|-----------------|
| | (+) (+) | | (-) | | | |
| | Connector | Terminal (wire color) | | | | |
| DVD player | M205 | 16 (Y) | Ground | Battery voltage | Battery voltage | Battery voltage |
| | | 15 (V) | Ground | 0 V | Battery voltage | Battery voltage |

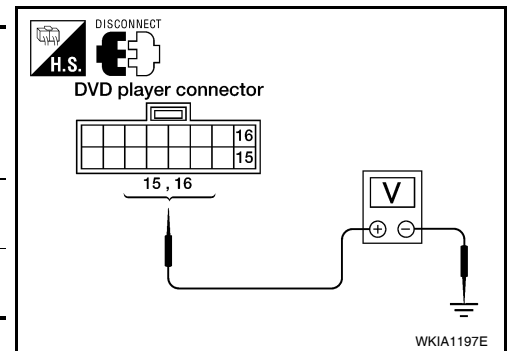

OK or NG

OK >> GO TO 3.

NG >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.

3. GROUND CIRCUIT CHECK


Check continuity between DVD player harness connector M206 terminal 22 and ground.

Continuity should exist.

OK or NG

OK >> Inspection End.

NG >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.

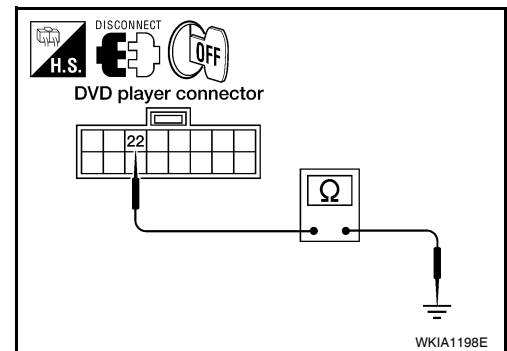

Removal and Installation

DVD PLAYER


Removal

1. Disconnect battery negative terminal.
2. Remove center console compartment. Refer to [IP-10](#).

DVD ENTERTAINMENT SYSTEM

< SERVICE INFORMATION >

3. Remove the DVD player screws.

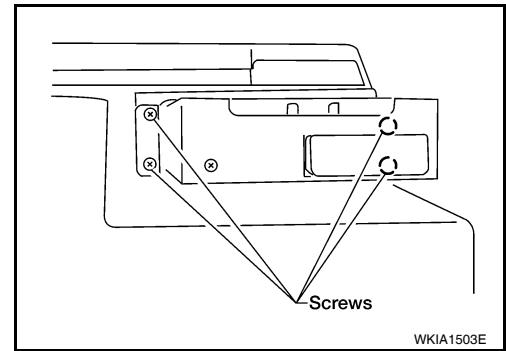

4. Disconnect DVD connectors and remove DVD player.


Installation

Installation is in reverse order of removal.


VIDEO MONITOR

Removal

1. Remove rear roof console assembly. Refer to [EI-37](#).
2. Disconnect the video monitor connector.
3. Remove the video housing screws.

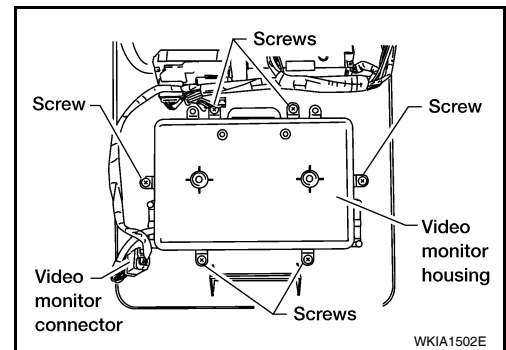

4. Remove the video monitor and housing.
5. Remove the video monitor hinge screws and remove the video monitor.

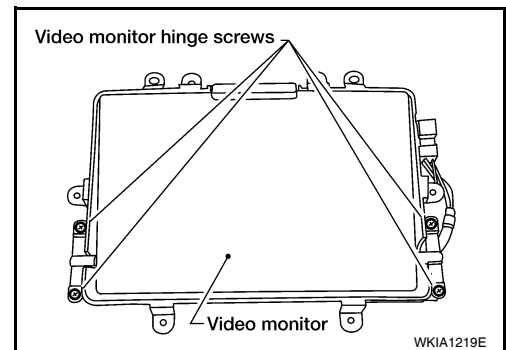

Installation

Installation is in reverse order of removal.

NAVIGATION SYSTEM

< SERVICE INFORMATION >

NAVIGATION SYSTEM

System Description


INFOID:00000000353706

NOTE:

Refer to NAVI System Owner's Manual for system operation.


The navigation system periodically calculates the vehicle's current position according to the following three signals: Travel distance of the vehicle as determined by the vehicle speed sensor, turning angle of the vehicle as determined by the gyroscope (angular velocity sensor), and the direction of vehicle travel as determined by the GPS antenna (GPS information).

The current position of the vehicle is then identified by comparing the calculated vehicle position with map data read from the map DVD-ROM, which is stored in the DVD-ROM drive (map-matching), and indicated on the screen with a current-location mark.

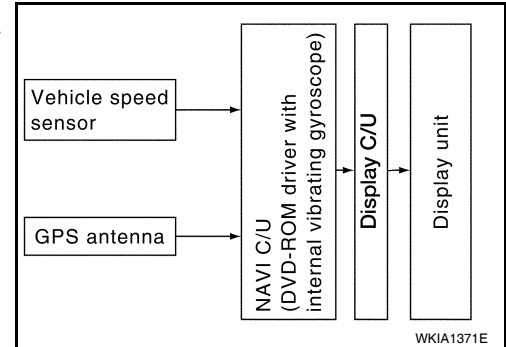

By comparing the vehicle position detection results found by the GPS and by map-matching, more accurate vehicle position data can be used.

The current vehicle position will be calculated by detecting the distance the vehicle moved from the previous calculation point and its direction.

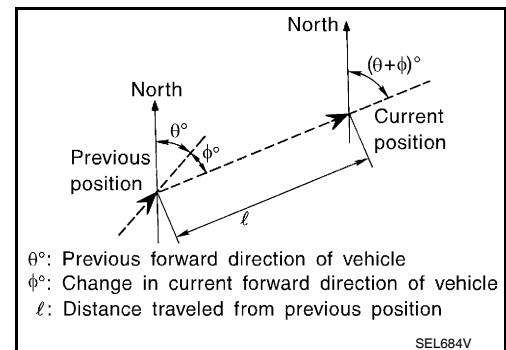

TRAVEL DISTANCE

Travel distance calculations are based on the vehicle speed sensor input signal. Therefore, the calculation may become incorrect as the tires wear down. To prevent this, an automatic distance fine adjustment function has been adopted. Adjustments can be made in extreme cases (such as driving with tire chain fitted on tires). Refer to [AV-103. "Confirmation/Adjustment Mode"](#).

TRAVEL DIRECTION

Change in the travel direction of the vehicle is calculated by a gyroscope (angular velocity sensor) and a GPS antenna (GPS information). As the gyroscope and GPS antenna have both merit and demerit, input signals from them are prioritized in each situation. However, this order of priority may change in accordance with more detailed travel conditions so that the travel direction is detected more accurately.

| Type | Advantage | Disadvantage |
|-------------------------------------|--------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| Gyroscope (angular velocity sensor) | <ul style="list-style-type: none">Can detect the vehicle's turning angle quite accurately. | <ul style="list-style-type: none">Direction errors may accumulate when the vehicle is driven for long distances without stopping. |
| GPS antenna (GPS information) | <ul style="list-style-type: none">Can detect the vehicle's travel direction (North/South/East/West). | <ul style="list-style-type: none">Correct direction cannot be detected when the vehicle speed is low. |

MAP-MATCHING

NAVIGATION SYSTEM

< SERVICE INFORMATION >

Map-matching is a function that repositions the vehicle on the road map when a new location is judged to be the most accurate. This is done by comparing the current vehicle position, calculated by the method described in the position detection principle, with the road map data around the vehicle, read from the map DVD-ROM stored in the DVD-ROM drive.

Therefore, the vehicle position may not be corrected after the vehicle is driven over a certain distance or time in which GPS information is hard to receive. In this case, the current-location mark on the display must be corrected manually.



CAUTION:

The road map data is based on data stored in the map DVD-ROM.

- In map-matching, alternative routes to reach the destination will be shown and prioritized, after the road on which the vehicle is currently driven has been judged and the current-location mark has been repositioned.

If there is an error in distance and/or direction, the alternative routes will be shown in different order of priority, and the wrong road can be avoided.


If two roads are running in parallel, they are of the same priority. Therefore, the current-location mark may appear on either of them alternately, depending on maneuvering of the steering wheel and configuration of the road.

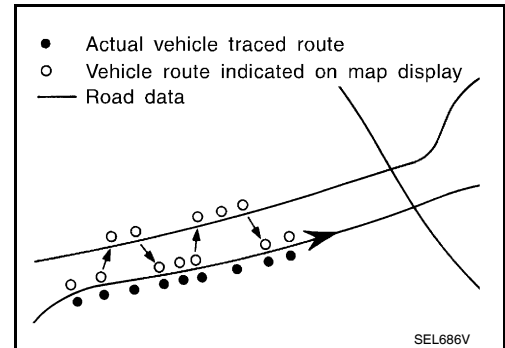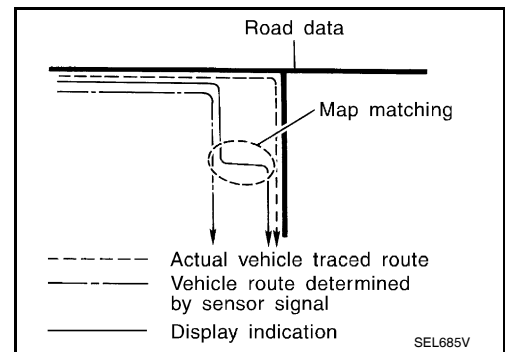

- Map-matching does not function correctly when the road on which the vehicle is driving is new and not recorded in the map DVD-ROM, or when the road pattern stored in the map data and the actual road pattern are different due to repair.

When driving on a road not present in the map, the map-matching function may find another road and position the current-location mark on it. Then, when the correct road is detected, the current-location mark may leap to it.

- Effective range for comparing the vehicle position and travel direction calculated by the distance and direction with the road data read from the map DVD-ROM is limited. Therefore, when there is an excessive gap between the current vehicle position and the position on the map, correction by map-matching is not possible.

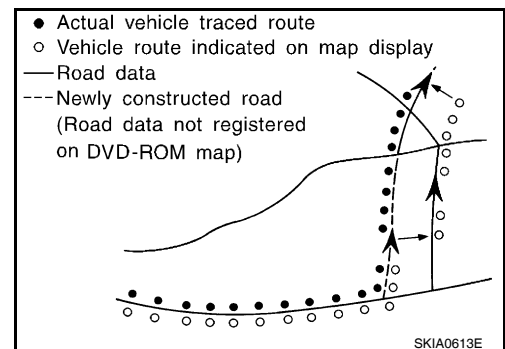


GPS (GLOBAL POSITIONING SYSTEM)

GPS (Global Positioning System) has been developed and controlled by the US Department of Defense. The system utilizes GPS satellite (NAVSTAR), sending out radio waves while flying on an orbit around the earth at the height of approx. 21,000 km (13,000 miles).

The GPS receiver calculates the vehicle's position in three dimensions (latitude/longitude/altitude) according to the time lag of the radio waves received from four or more GPS satellites (three-dimensional positioning). If radio waves were received only from three GPS satellites, the GPS receiver calculates the vehicle's position in two dimensions (latitude/longitude), utilizing the altitude data calculated previously by using radio waves from four or more GPS satellites (two-dimensional positioning).

Accuracy of the GPS will deteriorate under the following conditions.

- In two-dimensional positioning, the GPS accuracy will deteriorate when the altitude of the vehicle position changes.
- There may be an error of approximately 10 m (30 ft) in position detected by three-dimensional positioning, which is more accurate than two-dimensional positioning. The accuracy can be even lower depending on the arrangement of the GPS satellites utilized for the positioning.
- Position detection is not possible when the vehicle is in an area where radio waves from the GPS satellite do not reach, such as in a tunnel, parking lot in a building, and under an elevated highway. Radio waves from the GPS satellites may not be received when some object is located over the GPS antenna.

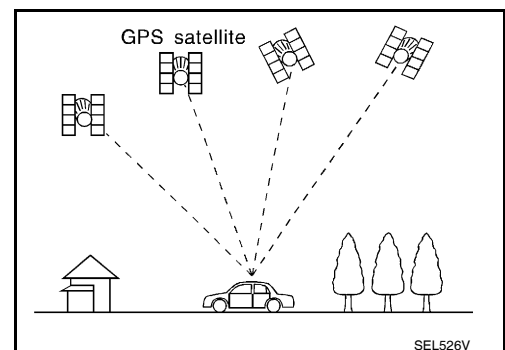

NAVIGATION SYSTEM


< SERVICE INFORMATION >

- Position correction by GPS is not available while the vehicle is stopped.

COMPONENT DESCRIPTION

NAVI Control Unit

- The gyro (angular speed sensor) and the DVD-ROM drive are built-in units that control the navigation functions.
- Signals are received from the gyro, the vehicle speed sensor, and the GPS antenna. Vehicle location is determined by combining this data with the data contained in the DVD-ROM map. Location information is shown on liquid crystal display (display unit).
- Maps, traffic control regulations, and other pertinent information can be easily read from the DVD-ROM disc.
- The oscillator gyro sensor is used to detect changes in vehicle steering angle.

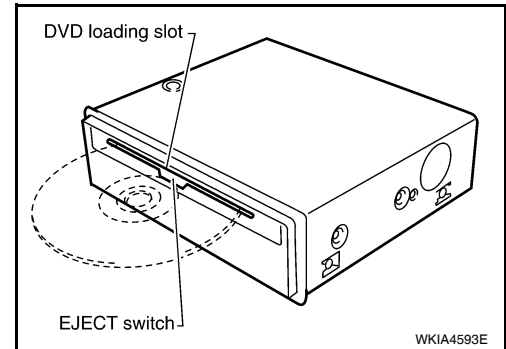

Map DVD-ROM

- The map DVD-ROM has maps, traffic control regulations, and other pertinent information.
- To improve DVD-ROM map matching and route determination functions, the DVD-ROM uses an exclusive Nissan format. Therefore, the use of a DVD-ROM provided by other manufacturers cannot be used.

Display Control Unit

The display control unit coordinates audio and video signals between the NAVI control unit and the display unit.

Display Unit

Displays NAVI system information.

AV Switch

AV switch allows user to input NAVI display settings. Self diagnostics are initiated using AV switch.

GPS Antenna

GPS antenna sends signals to NAVI control unit.

CAN Communication System Description

INFOID:0000000003533707

Refer to [LAN-4](#).

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P


AV

NAVIGATION SYSTEM

< SERVICE INFORMATION >

Component Parts Location

INFOID:000000003533708

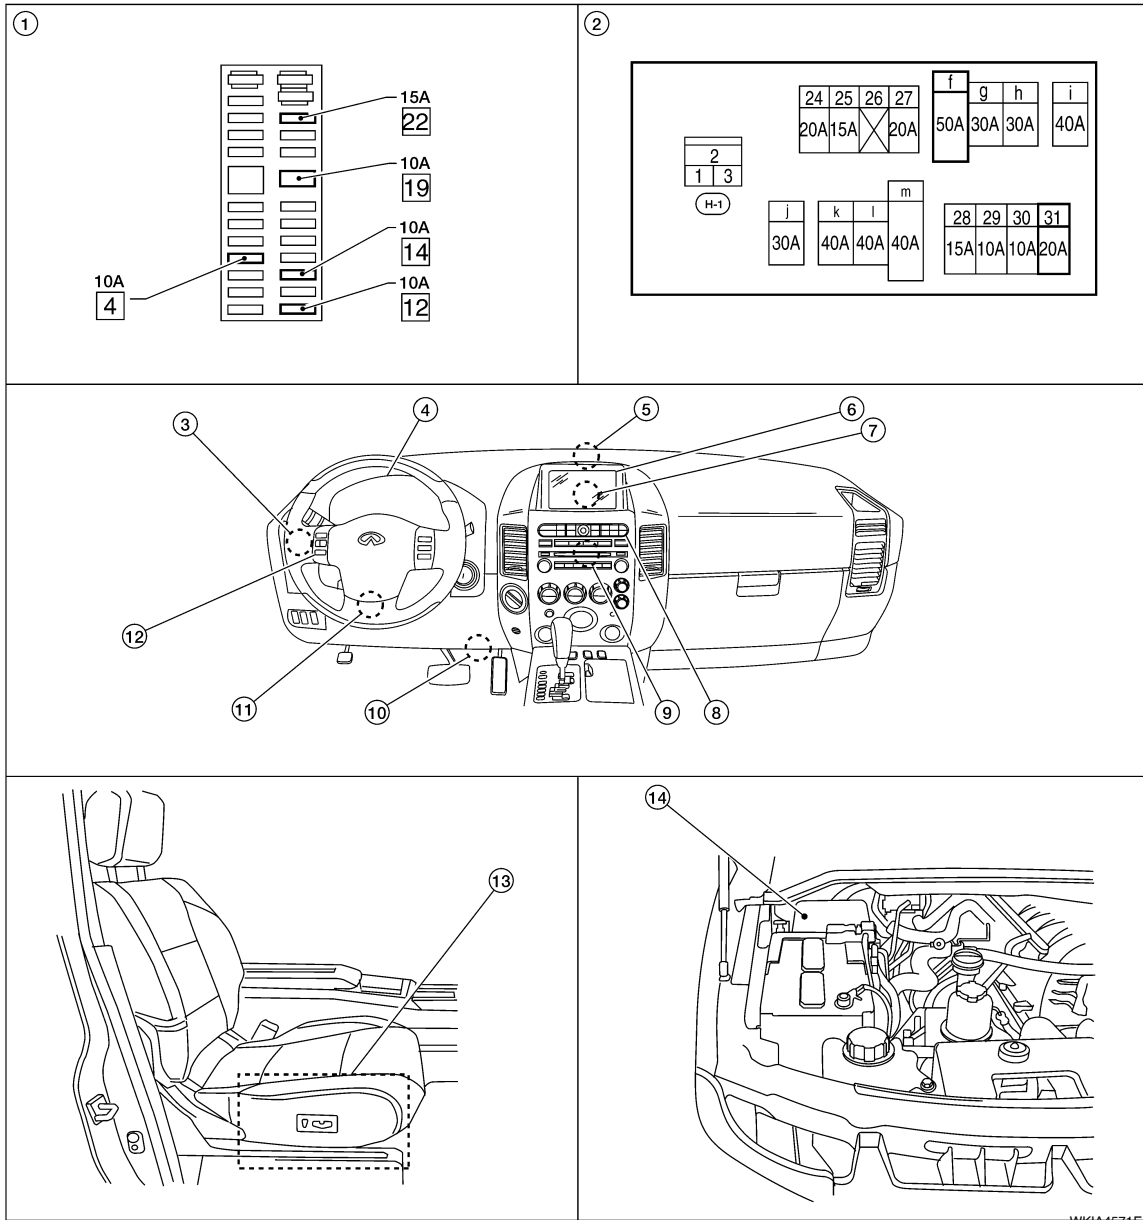


- | | | |
|-------------------------------------------|------------------------------|-------------------------------------------|
| 1. Fuse block (J/B) | 2. Fuse and fusible link box | 3. Combination switch M28 |
| 4. Combination meter M24 | 5. GPS antenna | 6. Display unit M93 |
| 7. Display control unit M94, M95 | 8. AV switch M98 | 9. Audio unit M45 |
| 10. Data link connector M22 | 11. BCM M18, M20 | 12. Steering wheel audio control switches |
| 13. NAVI control unit B151, B152, B154 | 14. IPDM E/R E121, E124 | |

NAVIGATION SYSTEM

< SERVICE INFORMATION >

Schematic

INFOID:000000003533709

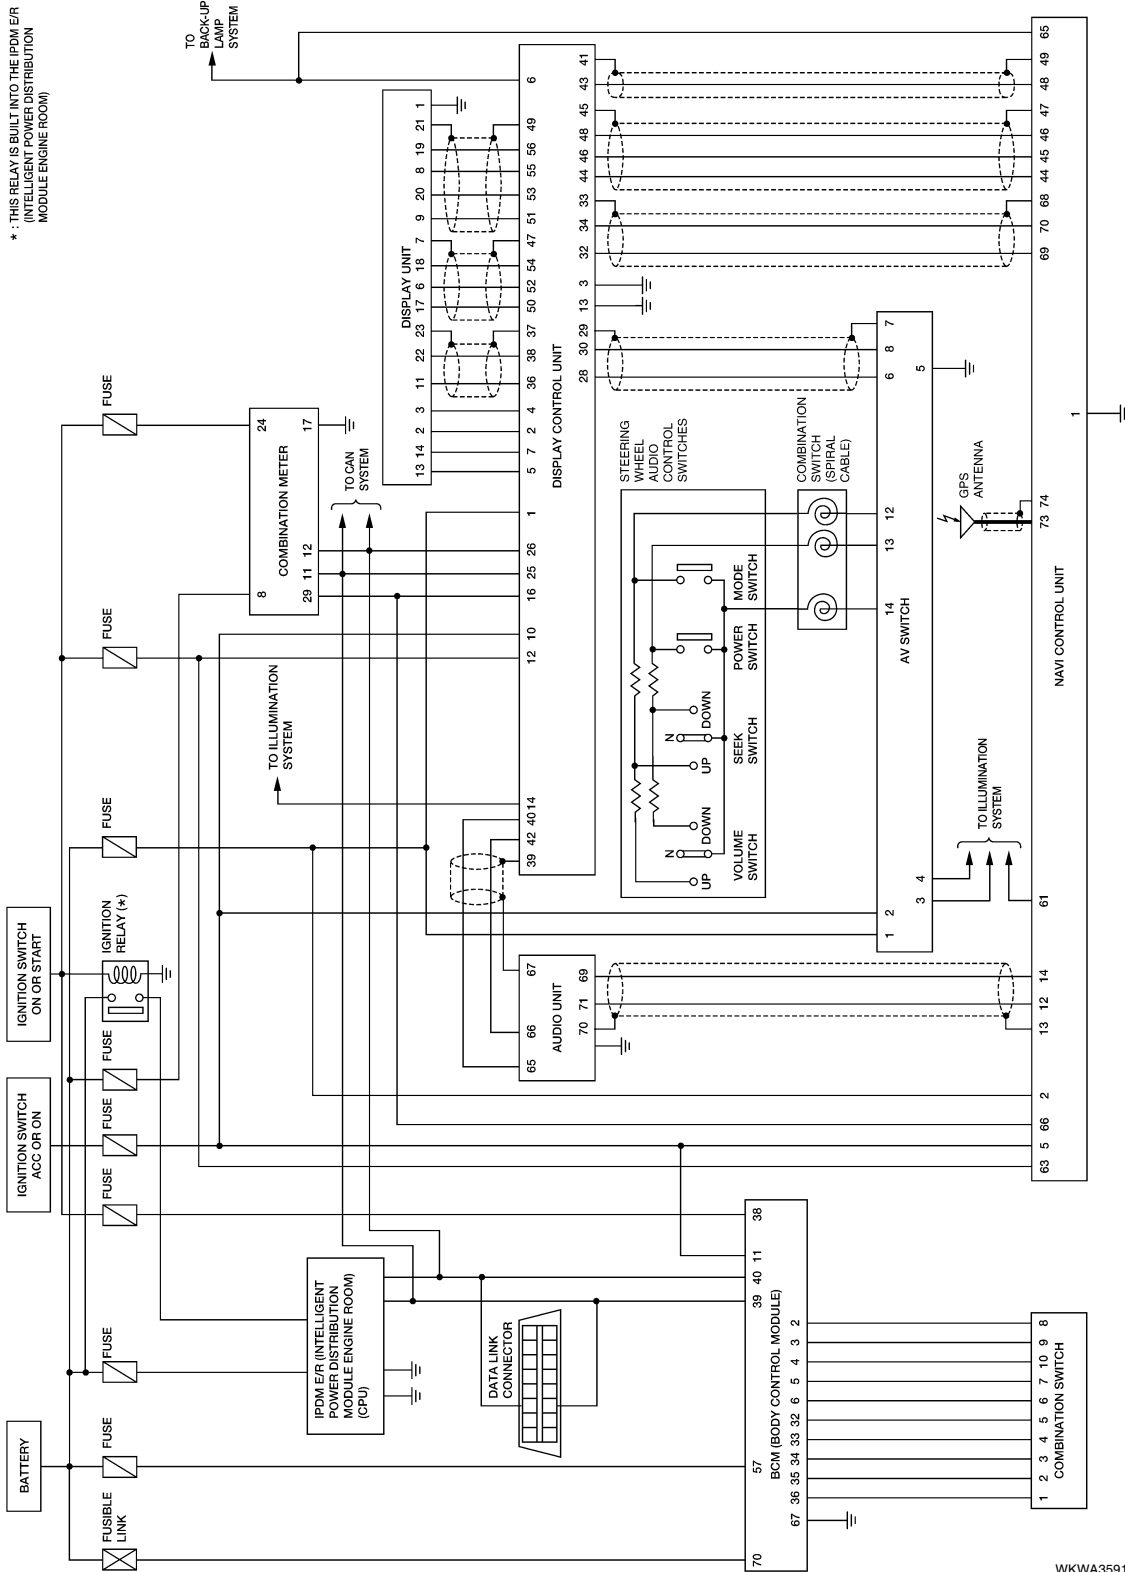

WKWA3591E



NAVIGATION SYSTEM

< SERVICE INFORMATION >

Wiring Diagram - NAVI -

INFOID:000000003533710

AV-NAVI-01



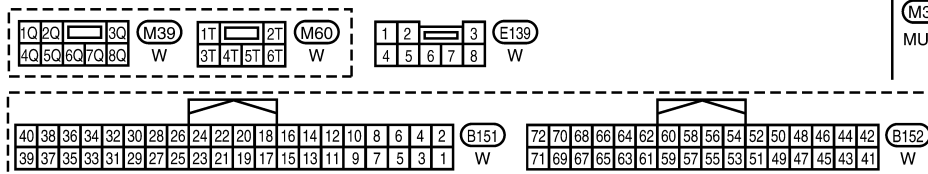
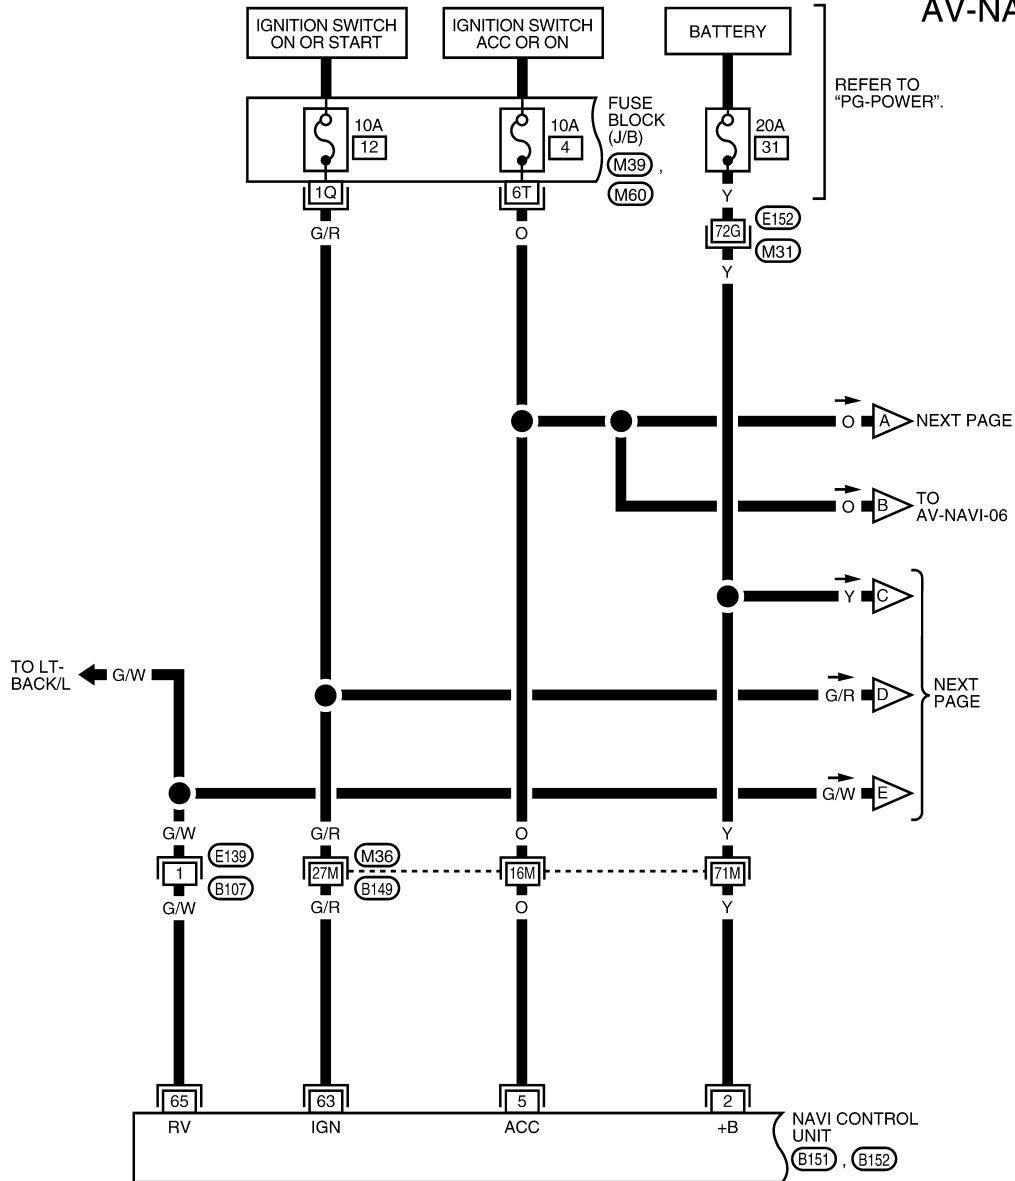


WKWA3592E

NAVIGATION SYSTEM

< SERVICE INFORMATION >

AV-NAVI-02

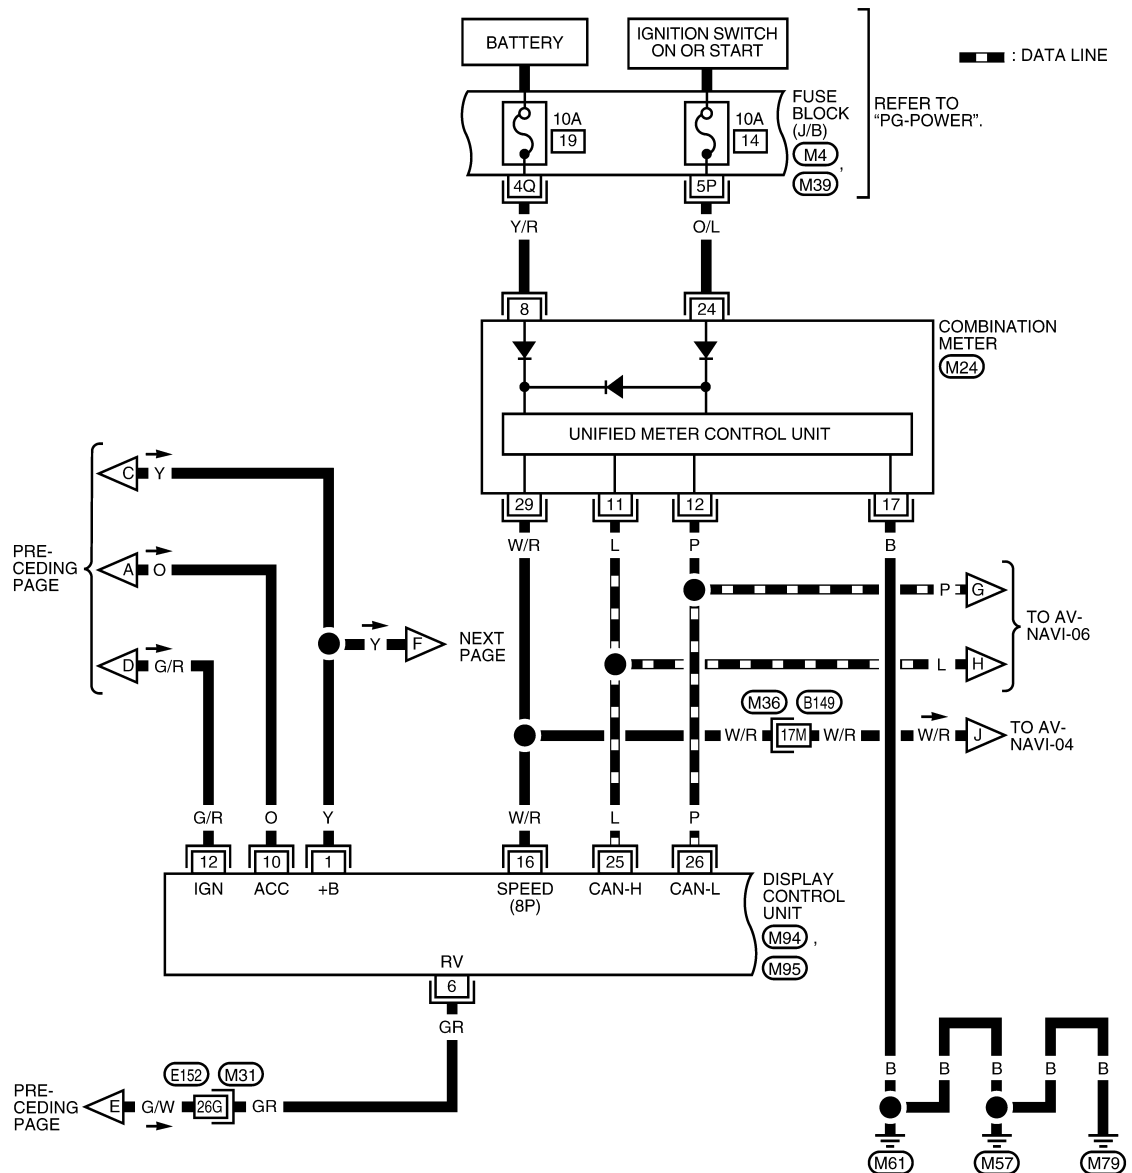


REFER TO THE FOLLOWING.
(M31), (M36) - SUPER
MULTIPLE JUNCTION (SMJ)

WKWA3593E



NAVIGATION SYSTEM

< SERVICE INFORMATION >

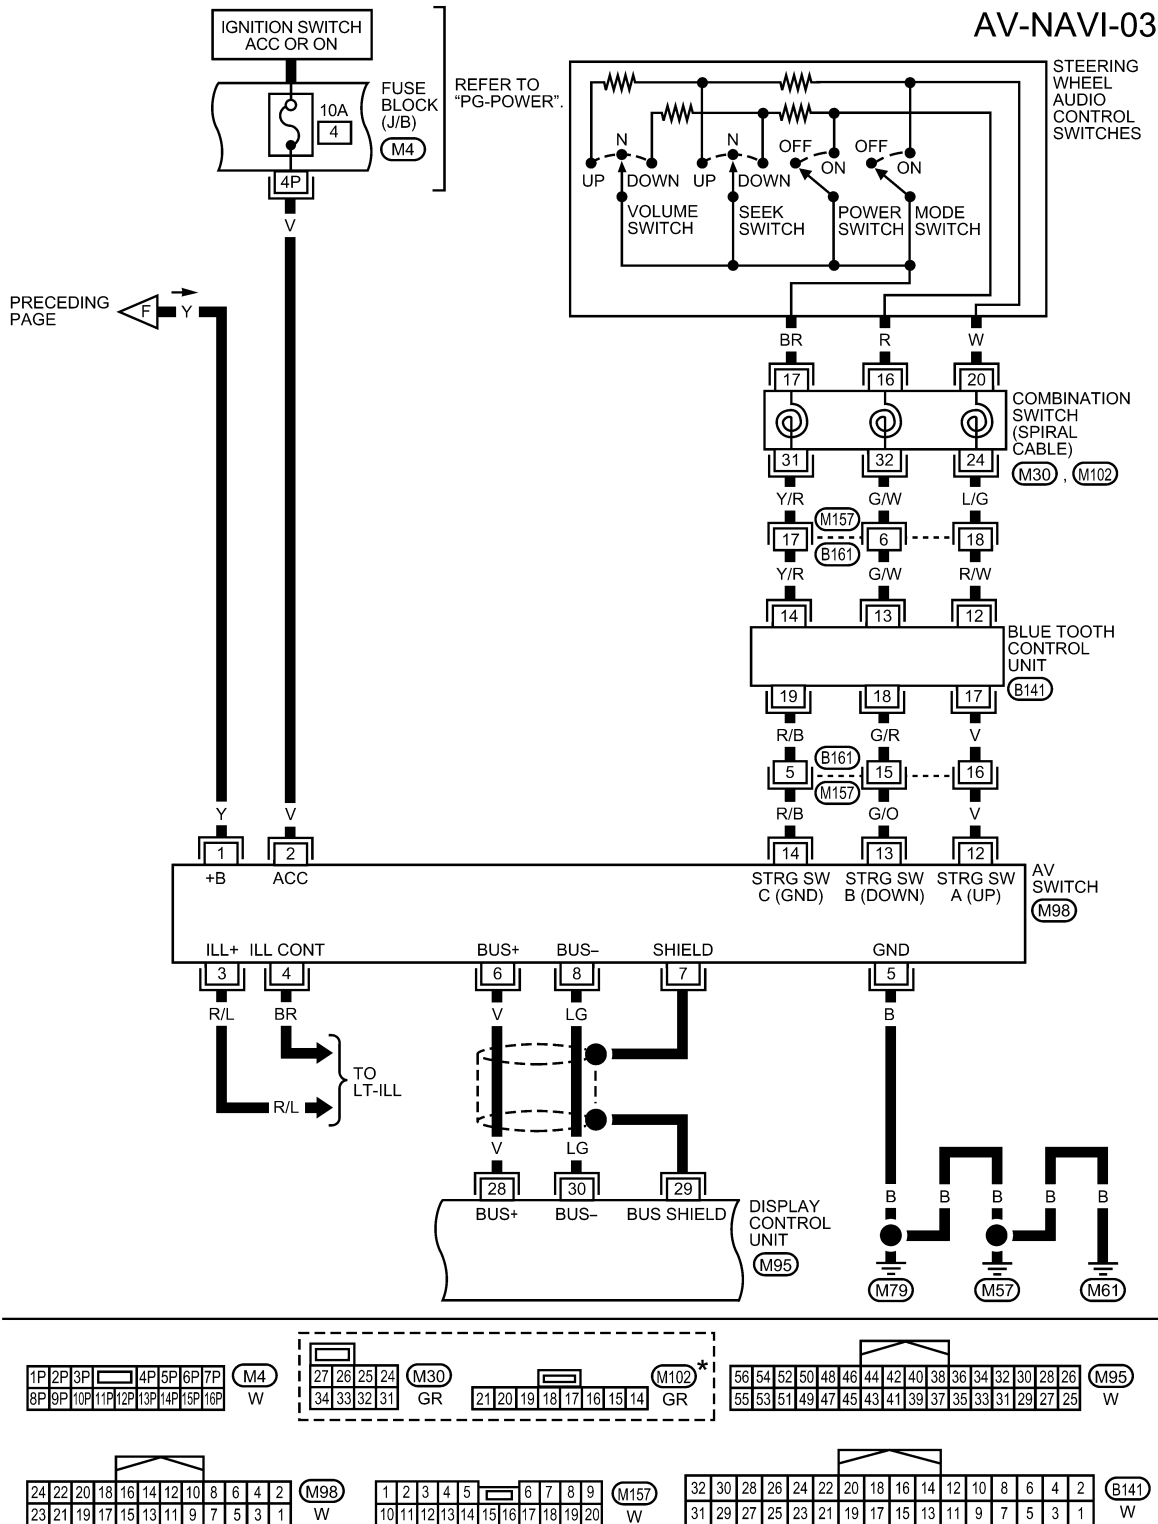

* : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.



AWNWA0333G

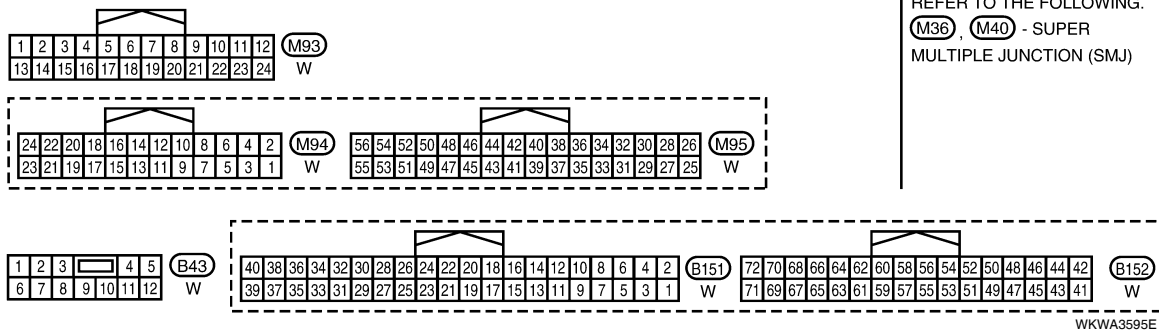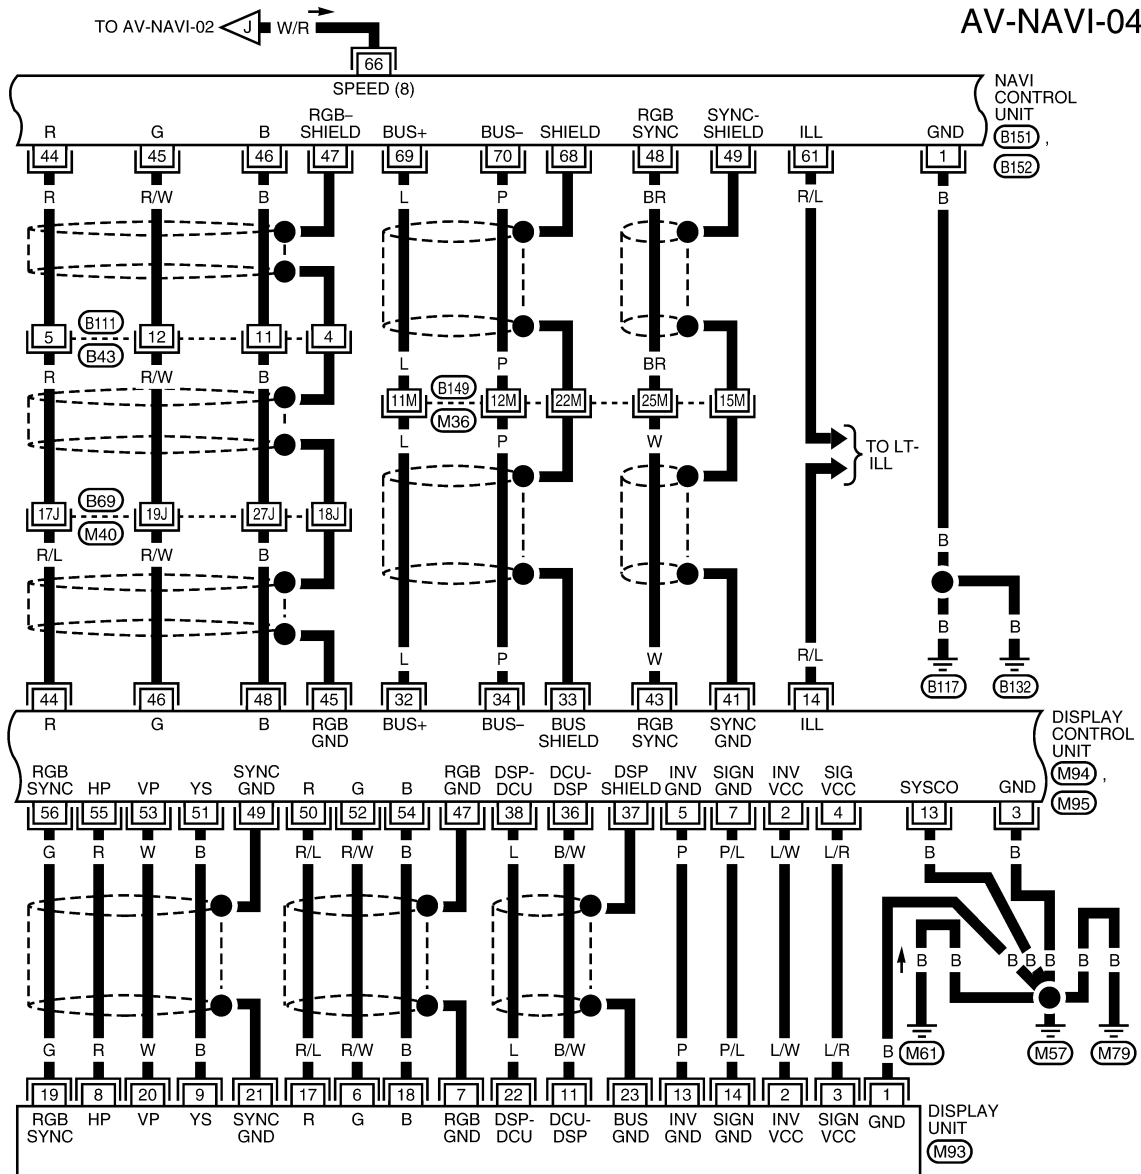

NAVIGATION SYSTEM

< SERVICE INFORMATION >

AV-NAVI-05

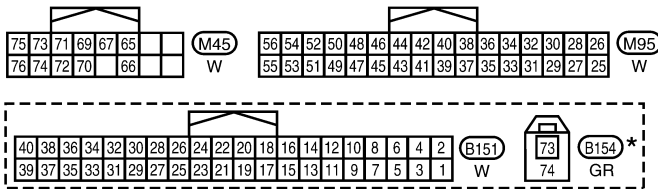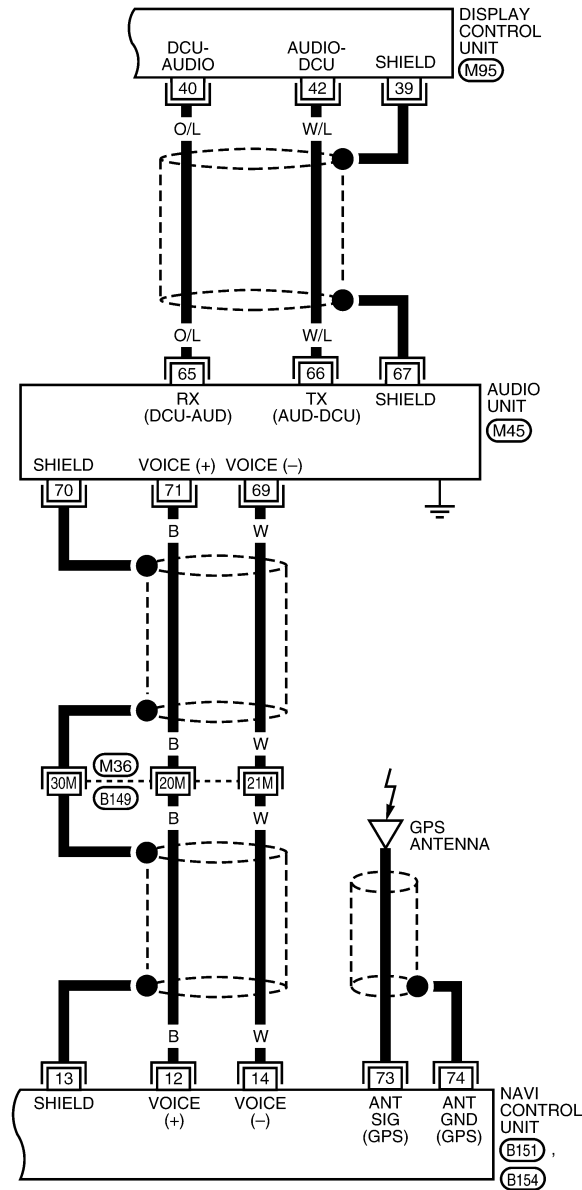

REFER TO THE FOLLOWING.

(M36) - SUPER MULTIPLE JUNCTION (SMJ)





★: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

WKWA5279E

NAVIGATION SYSTEM

< SERVICE INFORMATION >

AV-NAVI-06

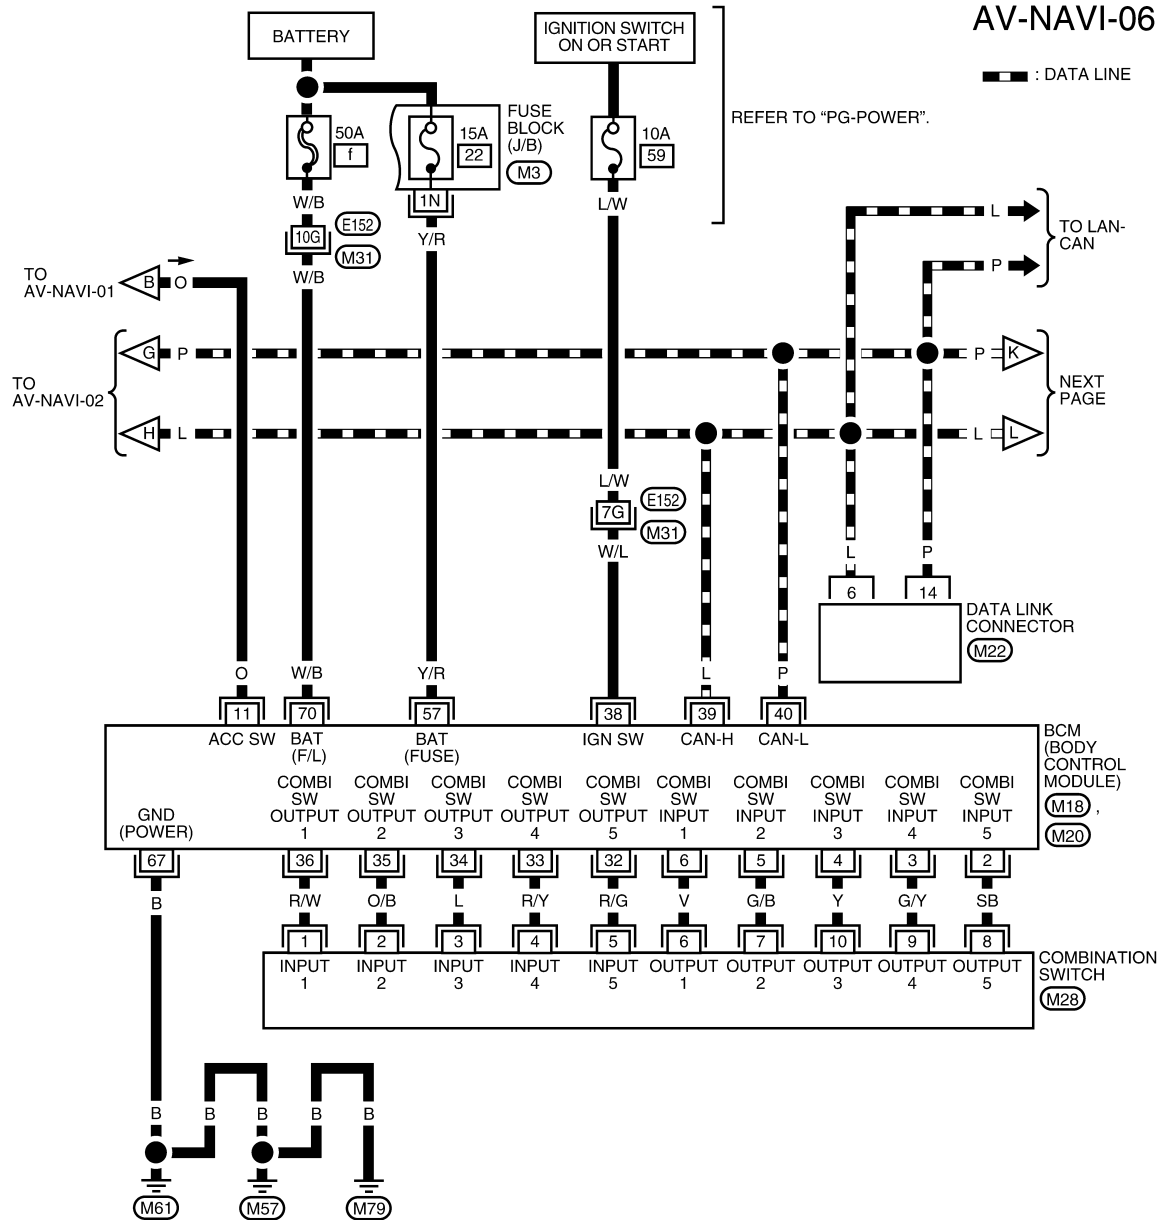

REFER TO THE FOLLOWING.



(M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3597E

NAVIGATION SYSTEM

< SERVICE INFORMATION >

AV-NAVI-07

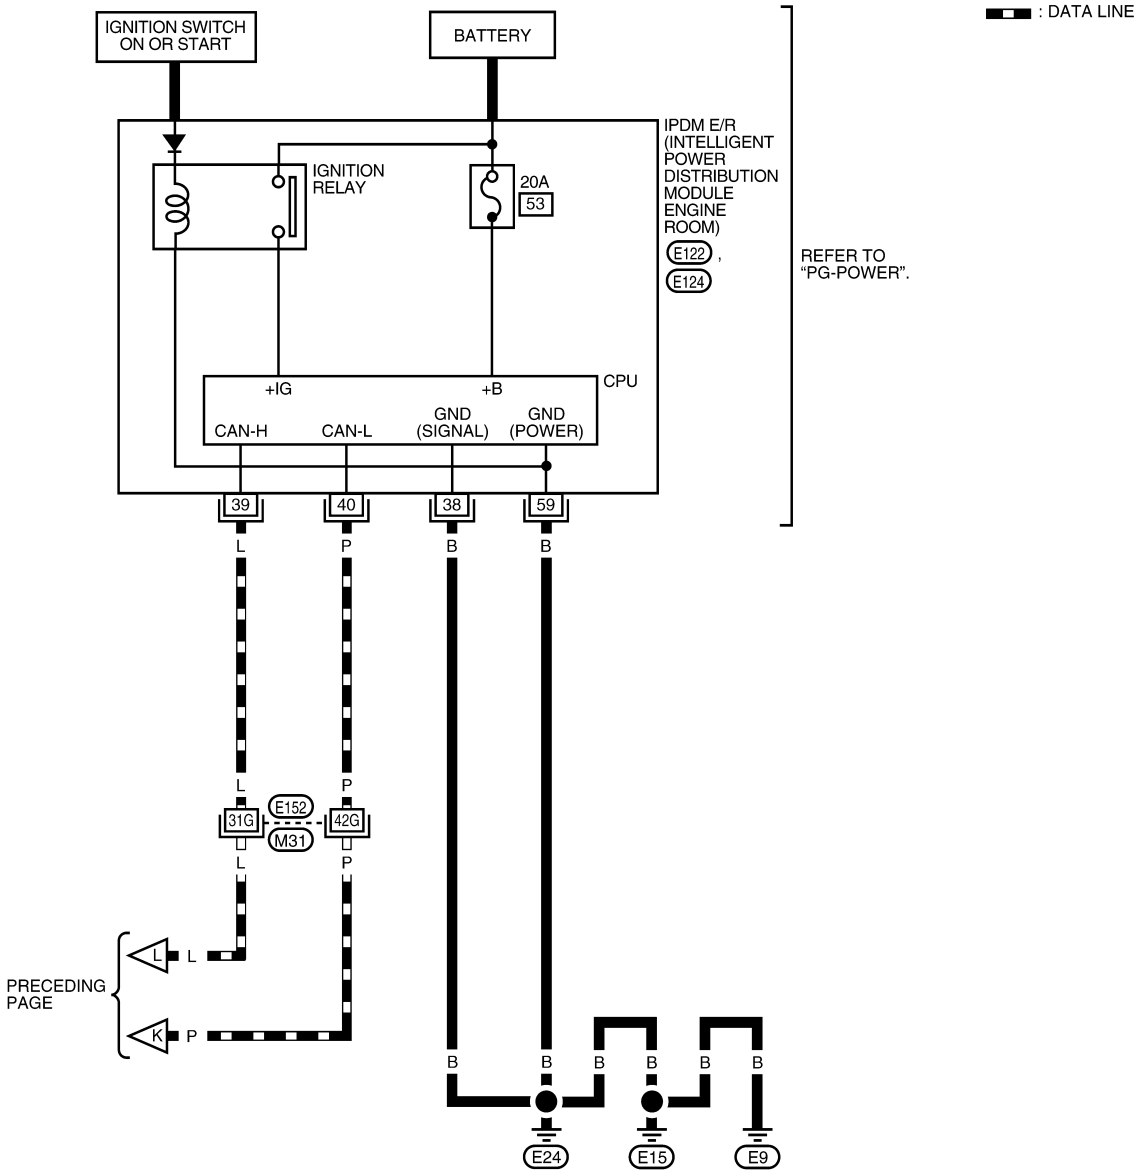

REFER TO THE FOLLOWING.

M31 - SUPER MULTIPLE JUNCTION (SMJ)


WKWA3598E

NAVIGATION SYSTEM

< SERVICE INFORMATION >



Schematic

INFOID:000000003533711

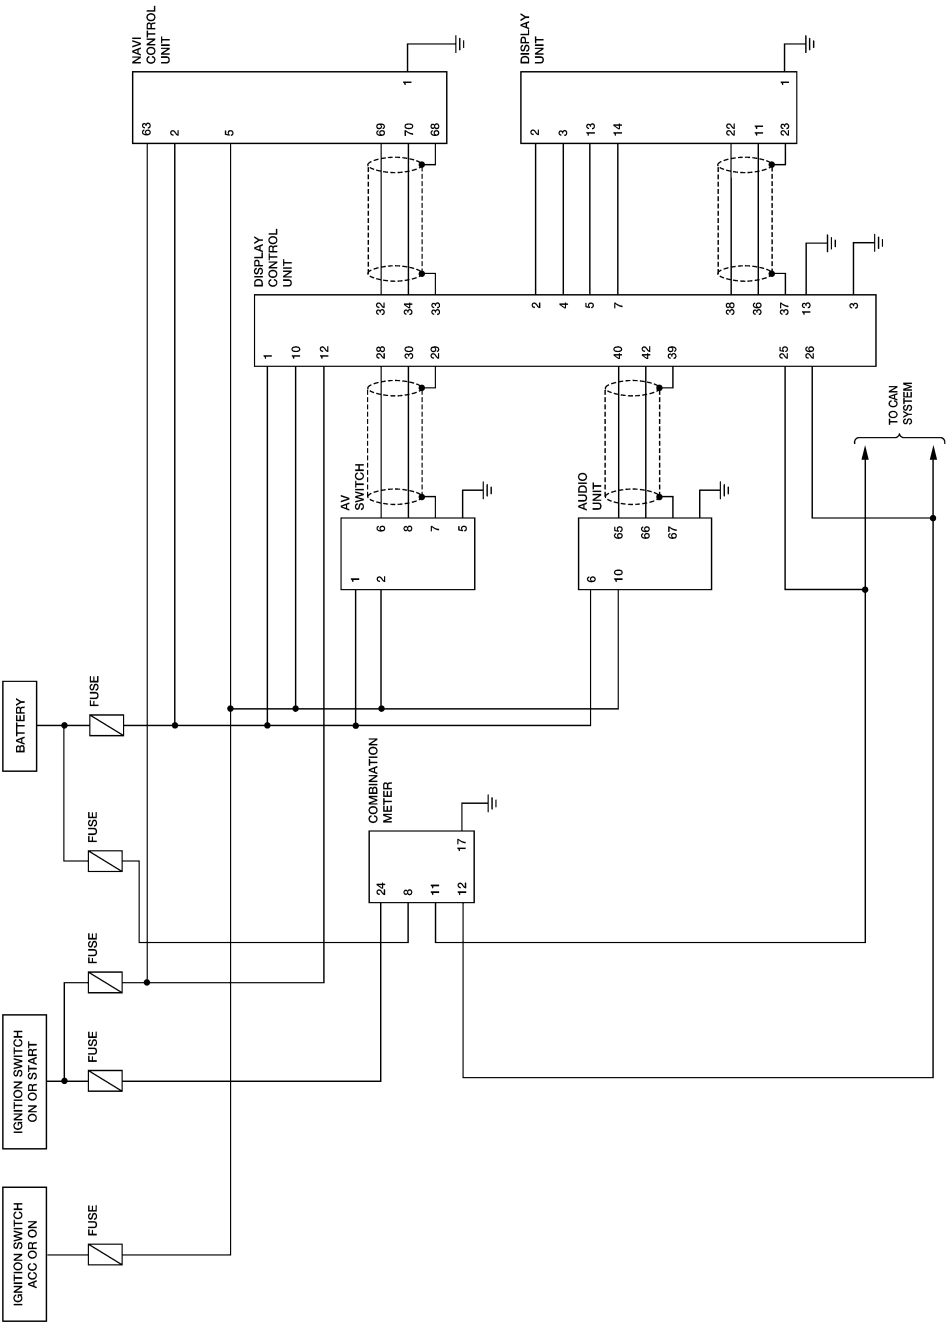

AV






AV-COMM-01

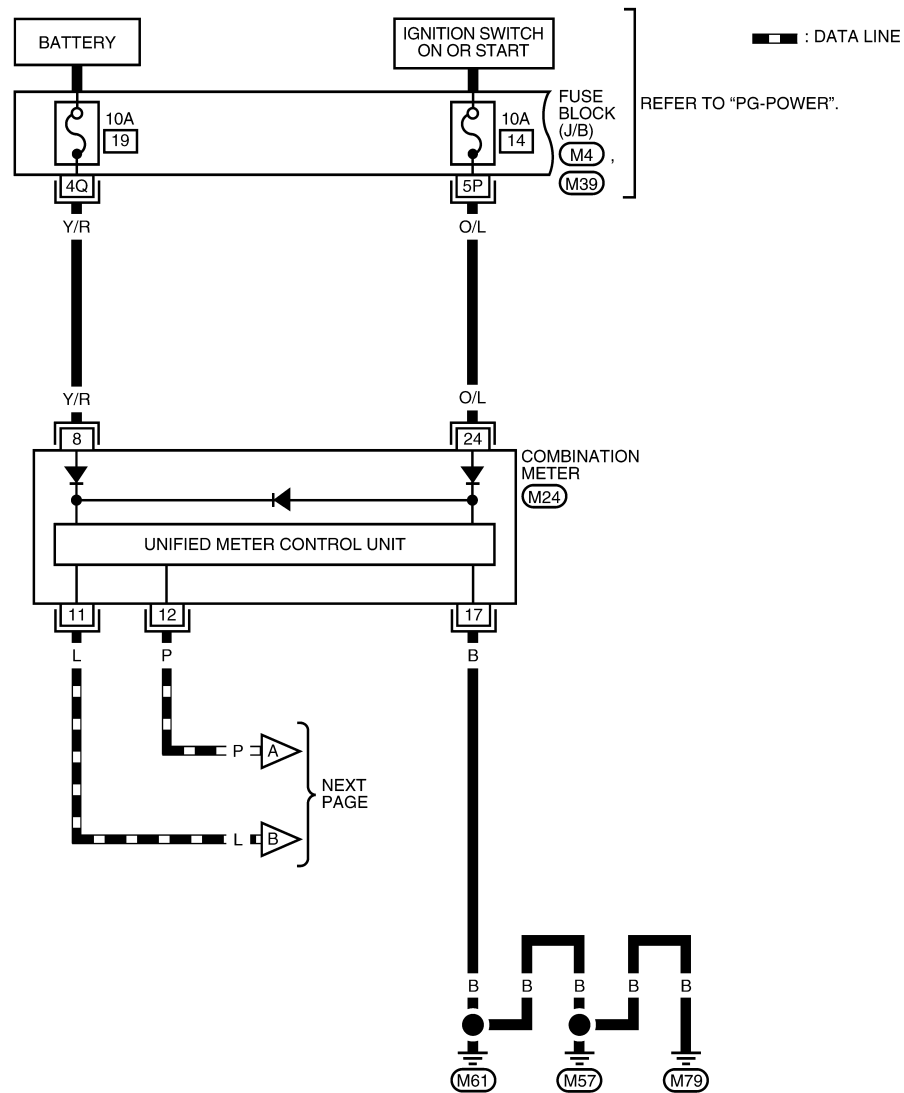

WKWA3600E

NAVIGATION SYSTEM

< SERVICE INFORMATION >

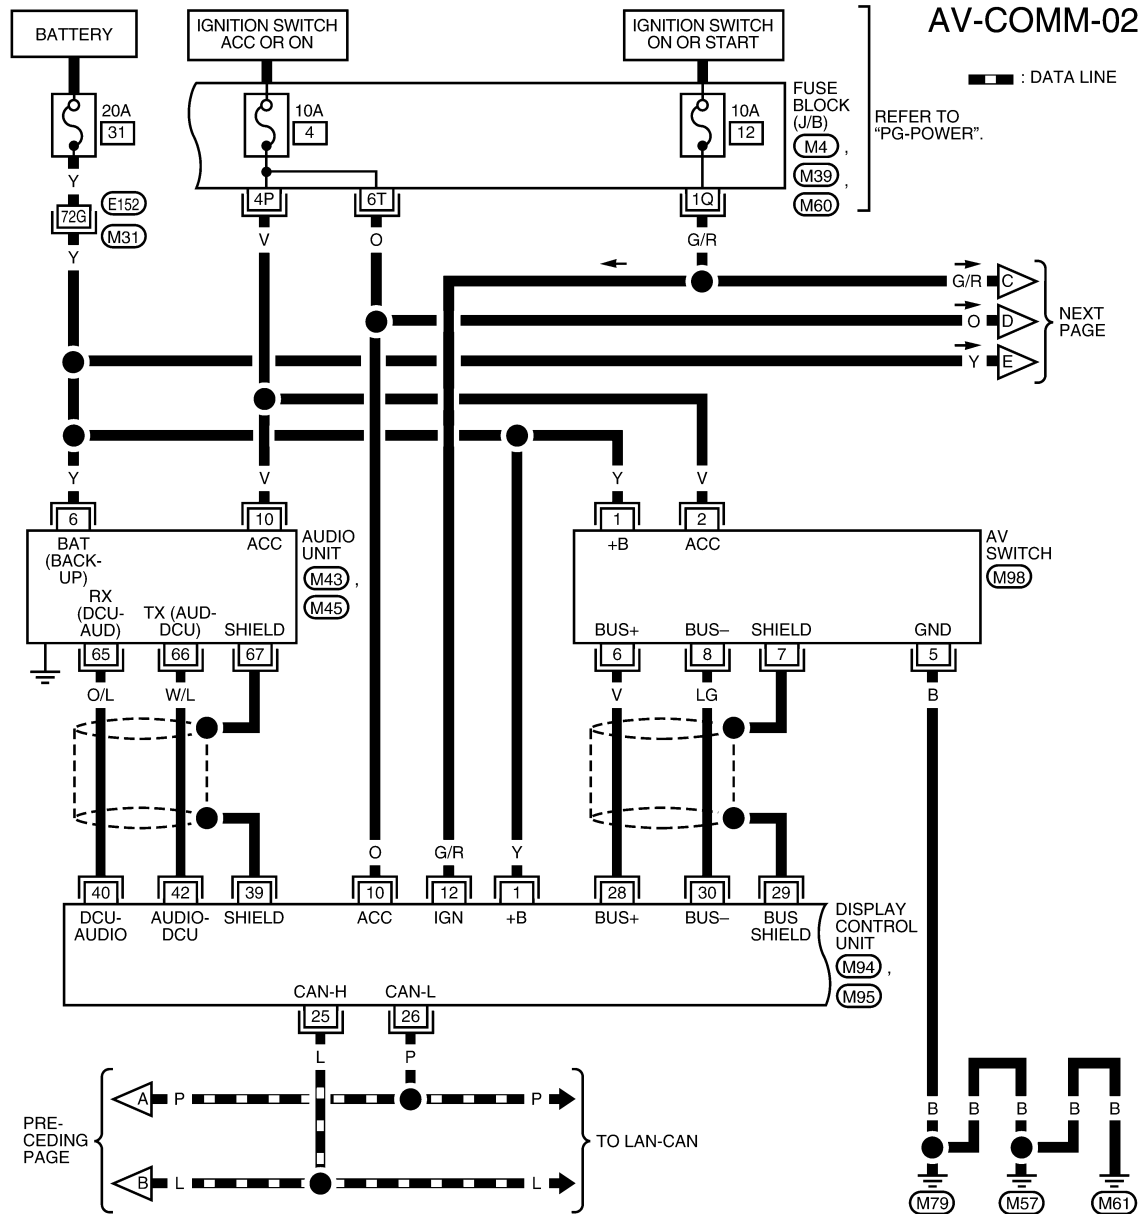


REFER TO THE FOLLOWING.

(M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3601E

< SERVICE INFORMATION >

The diagram illustrates the AV-COMM-03 wiring configuration. It shows the connection of a preceding page (with signals E, Y, C, G/R, D, O) to the NAVI CONTROL UNIT (pins 5, 63, 2, 69, 70, 68, 1, 32, 34, 33) and the DISPLAY CONTROL UNIT (pins 2, 4, 5, 7, 38, 36, 37, 3, 13, 22, 11, 23, 1, 3, 13, 1, 1, 1, 1). The NAVI CONTROL UNIT is connected to the DISPLAY CONTROL UNIT via a common ground (GND) and a shared power supply (+B). The NAVI CONTROL UNIT also has a dedicated ground (GND) and a shared power supply (+B). The DISPLAY CONTROL UNIT has a dedicated ground (GND) and a shared power supply (+B). The NAVI CONTROL UNIT is connected to the DISPLAY CONTROL UNIT via a common ground (GND) and a shared power supply (+B). The NAVI CONTROL UNIT also has a dedicated ground (GND) and a shared power supply (+B). The DISPLAY CONTROL UNIT has a dedicated ground (GND) and a shared power supply (+B).

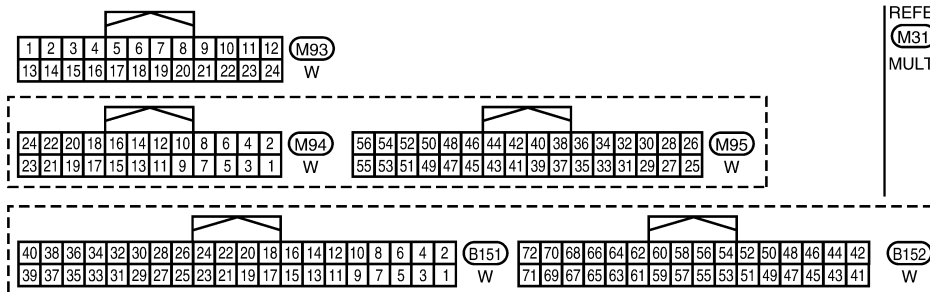






WKWA3602E

NAVIGATION SYSTEM

< SERVICE INFORMATION >




Terminal and Reference Value for NAVI Control Unit

INFOID:000000003533713
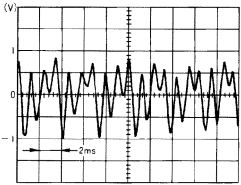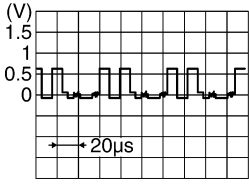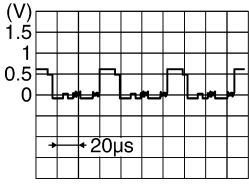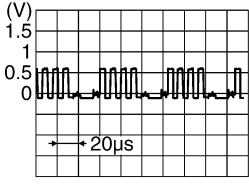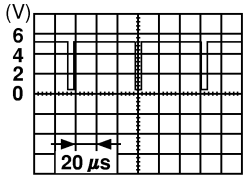
| Terminal No. (Wire color) | | Item | Signal input/ output | Condition | | Voltage (Approx.) | Example of symptom |
|------------------------------|--------|--------------------------|----------------------------|-------------------------|------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|-----------------------------------------------------|
| + | – | | | Igni- tion switch | Operation | | |
| 1 (B) | Ground | Ground | – | ON | – | 0V | – |
| 2 (Y) | Ground | Battery power | Input | OFF | – | Battery voltage | System does not work properly. |
| 5 (O) | Ground | ACC signal | Input | ACC | – | Battery voltage | System does not work properly. |
| 12 (B) | 14 (W) | Voice guide signal | Output | ON | Press the “GUIDE/VOICE” button. |  SKIA0171J | Only route guide and operation guide are not heard. |
| 13 | – | Shield ground | – | – | – | – | Audio noise interference. |
| 44 (R) | 47 | RGB signal (R: red) | Output | ON | Select “Display Diagnosis (NAVI)” of CONFIRMATION/ADJUSTMENT function. |  SKIA4977E | NAVI screen looks bluish. |
| 45 (R/W) | 47 | RGB signal (G: green) | Output | ON | Select “Display Diagnosis (NAVI)” of CONFIRMATION/ADJUSTMENT function. |  SKIA4978E | NAVI screen looks reddish. |
| 46 (B) | 47 | RGB signal (B: blue) | Output | ON | Select “Display Diagnosis (NAVI)” of CONFIRMATION/ADJUSTMENT function. |  SKIA4979E | NAVI screen looks yellowish. |
| 47 | – | Shield ground | – | – | – | – | Video display interference. |
| 48 (BR) | 49 | RGB synchronizing signal | Output | ON | Press the “MAP” button. |  SKIA0164E | NAVI screen is rolling. |

NAVIGATION SYSTEM

< SERVICE INFORMATION >

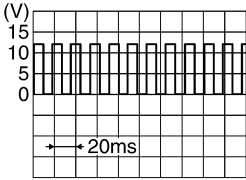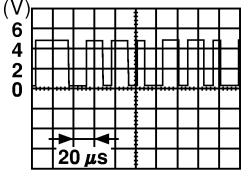
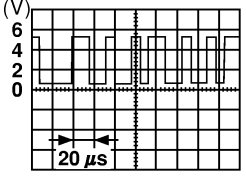
| Terminal No. (Wire color) | | Item | Signal input/ output | Condition | | Voltage (Approx.) | Example of symptom |
|------------------------------|--------|--------------------------------------|----------------------------|-------------------------|------------------------------------------------------|---------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
| + | - | | | Igni- tion switch | Operation | | |
| 49 | - | Shield ground | - | - | - | - | Video display in- terference. |
| 61 (R/L) | Ground | Illumination signal | Input | ON | Lighting switch in 1st position | Battery voltage | Display unit illu- mination does not change when lighting switch is turned to 1st position.- |
| | | | | | Lighting switch is OFF | 3V or less | |
| 63 (G/R) | Ground | Ignition signal | Input | ON | - | Battery voltage | Navigation cur- rent location mark does not indicate the cor- rect position. |
| 65 (G/W) | Ground | Reverse signal | Input | ON | A/T selector lever in R position | Battery voltage | The navigation current-location mark moves strangely when the vehicle is moving back- wards. |
| | | | | | A/T selector lever not in R position | 0V | |
| 66 (W/R) | Ground | Vehicle speed signal (8-pulse) | Input | ON | When vehicle speed is approx. 40 km/h (25 MPH) |  PKIA1935E | Navigation cur- rent location mark does not indicate the cor- rect position. |
| 68 | - | Shield ground | - | - | - | - | - |
| 69 (L) | Ground | Communica- tion signal (+) | Input/ output | ON | - |  SKIA0175E | System does not work properly. |
| 70 (P) | Ground | Communica- tion signal (-) | Input/ output | ON | - |  SKIA0176E | System does not work properly. |
| 73 | 74 | GPS signal | Input | ON | Connector is not connected. | 5V | Navigation sys- tem GPS correc- tion is not possible. |

NAVIGATION SYSTEM

< SERVICE INFORMATION >







Terminal and Reference Value for Display Control unit

INFOID:000000003533714
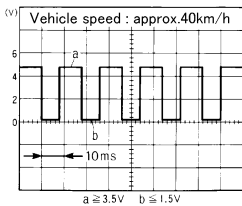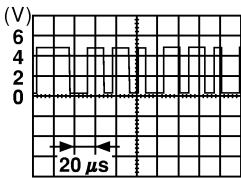
| Terminal No. (Wire color) | | Item | Signal input/ output | Condition | | Voltage (Approx.) | Example of symptom |
|------------------------------|--------|--------------------------------------|----------------------------|-------------------------|------------------------------------------------------|--------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------|
| + | – | | | Igni- tion switch | Operation | | |
| 1 (Y) | Ground | Battery Pow- er | Input | OFF | – | Battery voltage | System does not work properly. |
| 2 (L/W) | Ground | Power Supply (Inverter) | Output | ON | – | 9 V | Screen is not shown. |
| 3 (B) | Ground | Ground | – | ON | – | 0 V | – |
| 4 (L/R) | Ground | Power Supply (Signal) | Output | ON | – | 9 V | Screen is not shown. |
| 5 (P) | Ground | (Inverter) Ground | – | ON | – | 0 V | – |
| 6 (GR) | Ground | Reverse signal | Input | ON | Selector lever in R position | Battery voltage | Impossible to gain direction of vehicle. |
| | | | | | Selector lever not in R position | 0 V | |
| 7 (P/L) | Ground | (Signal) Ground | – | ON | – | 0 V | – |
| 10 (O) | Ground | ACC signal | Input | ACC | – | Battery voltage | System does not work properly. |
| 12 (G/R) | Ground | Ignition signal | Input | ON | – | Battery voltage | Vehicle informa- tion setting is not possible. |
| 13 (B) | Ground | Ground | – | ON | – | 0 V | – |
| 14 (R/L) | Ground | Illumination signal | Input | OFF | Lighting switch posi- tion 1st or 2nd | Battery voltage | Display unit does not change when lighting switch is turned to 1st position. |
| | | | | | Lighting switch posi- tion OFF | 0 V | |
| 16 (W/R) | Ground | Vehicle speed signal (8-pulse) | Input | ON | When vehicle speed is approx. 40 km/h (25 MPH) |  | Value of vehicle speed informa- tion is not accu- rately displayed. |
| 25 (L) | – | CAN-H | – | – | – | – | – |
| 26 (P) | – | CAN-L | – | – | – | – | – |
| 28 (V) | Ground | Communica- tion signal (+) | Input/ Output | ON | – |  | System does not work properly. |
| 29 | – | Shield ground | – | – | – | – | – |





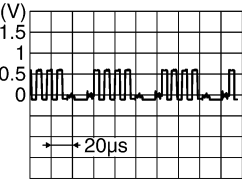
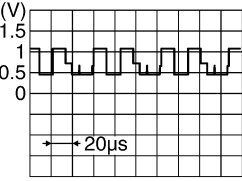
NAVIGATION SYSTEM

< SERVICE INFORMATION >
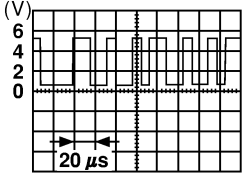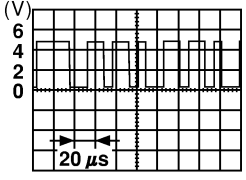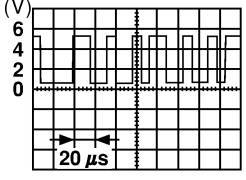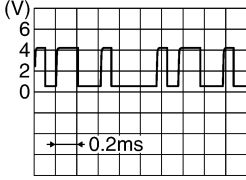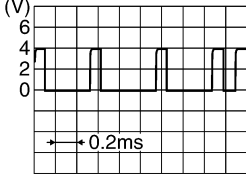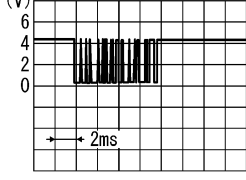
| Terminal No. (Wire color) | | Item | Signal input/ output | Condition | | Voltage (Approx.) | Example of symptom |
|------------------------------|--------|---------------------------------------------------|----------------------------|-------------------------|-----------------------------|---------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------|
| + | - | | | Igni- tion switch | Operation | | |
| 30 (LG) | Ground | Communica- tion signal (-) | Input/ output | ON | - |  SKIA0176E | System does not work properly. |
| 32 (L) | Ground | Communica- tion signal (+) | Input/ output | ON | - |  SKIA0175E | System does not work properly. |
| 33 | - | Shield ground | - | - | - | - | - |
| 34 (P) | Ground | Communica- tion signal (-) | Input/ output | ON | - |  SKIA0176E | System does not work properly. |
| 36 (B/W) | 37 | Display Com- munication signal (DCU-DSP) | Output | ON | Press the "TRIP" button. |  SKIA4364E | Though a screen is displayed, it is impossible to ad- just brightness. |
| 37 | - | Shield ground | - | - | - | - | - |
| 38 (L) | 37 | Display Com- munication signal (DSP-DCU) | Input | ON | Press the "TRIP" button. |  SKIA4363E | Though a screen is displayed, it is impossible to ad- just brightness. |
| 39 | - | Shield ground | - | - | - | - | - |
| 40 (O/L) | Ground | Audio TX Communica- tion signal | Output | ON | Operate audio volume. |  SKIA4402E | Audio does not operate properly. |
| 41 | - | Shield ground | - | - | - | - | - |

NAVIGATION SYSTEM







< SERVICE INFORMATION >
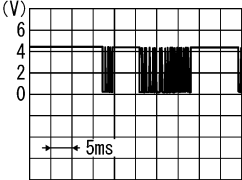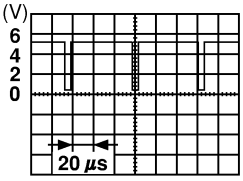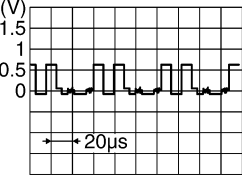
| Terminal No. (Wire color) | | Item | Signal input/ output | Condition | | Voltage (Approx.) | Example of symptom |
|------------------------------|--------|----------------------------------|----------------------------|-------------------------|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|-------------------------------------|
| + | - | | | Igni- tion switch | Operation | | |
| 42 (W/L) | Ground | Audio RX commu- cation signal | Input | ON | Operate audio volume. |  SKIA4403E | Audio does not operate properly. |
| 43 (W) | 41 | RGB syn- chronizing signal | Input | ON | Press the "MAP" button. |  SKIA0164E | NAVI screen is rolling. |
| 44 (R/L) | 45 | RGB signal (R: red) | Input | ON | Select "Display Di- agnosis (NAVI)" of CONFIRMATION/ ADJUSTMENT function. |  SKIA4977E | NAVI screen looks bluish. |
| 45 | - | Shield ground | - | - | - | - | - |
| 46 (R/W) | 45 | RGB signal (G: green) | Input | ON | Select "Display Di- agnosis (NAVI)" of CONFIRMATION/ ADJUSTMENT function. |  SKIA4978E | NAVI screen looks reddish. |
| 47 | - | Shield ground | - | - | - | - | - |
| 48 (B) | 45 | RGB signal (B: blue) | Input | ON | Select "Display Di- agnosis (NAVI)" of CONFIRMATION/ ADJUSTMENT function. |  SKIA4979E | NAVI screen looks yellowish. |
| 49 | - | Shield ground | - | - | - | - | - |
| 50 (R/L) | 47 | RGB signal (R: red) | Output | ON | Select "Display Di- agnosis (DCU)" of CONFIRMATION/ ADJUSTMENT function. |  SKIA4980E | NAVI screen looks bluish. |

A
B
C
D
E
F
G
H
I
J
AV
L
M
N
O
P

NAVIGATION SYSTEM

< SERVICE INFORMATION >

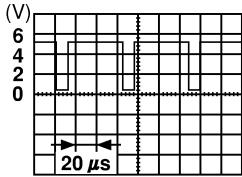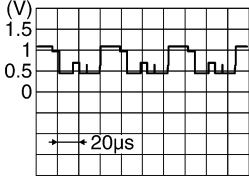
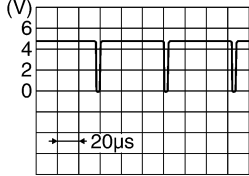
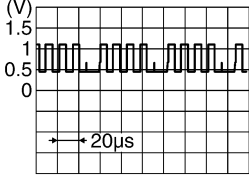
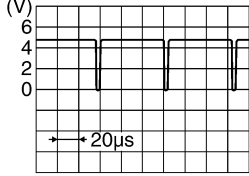
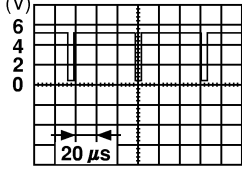
| Terminal No. (Wire color) | | Item | Signal input/ output | Condition | | Voltage (Approx.) | Example of symptom |
|------------------------------|----|---------------------------------------------------|----------------------------|-------------------------|--------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------|
| + | - | | | Igni- tion switch | Operation | | |
| 51 (B) | 49 | RGB area (YS) signal | Output | ON | Press the "TRIP" button. |  SKIA0162E | RGB screen is not shown. |
| 52 (R/W) | 47 | RGB signal (G: green) | Output | ON | Select "Display Di- agnosis (DCU)" of CONFIRMATION/ ADJUSTMENT function. |  SKIA4981E | Screen looks reddish. |
| 53 (W) | 49 | Vertical syn- chronizing (VP) signal | Input | ON | — |  SKIA4983E | Operating screen for audio and A/C is not displayed when showing NAVI screen. |
| 54 (B) | 47 | RGB signal (B: blue) | Output | ON | Select "Display Di- agnosis (DCU)" of CONFIRMATION/ ADJUSTMENT function. |  SKIA4982E | Screen looks yellowish. |
| 55 (R) | 49 | Horizontal synchroniz- ing (HP) sig- nal | Input | ON | — |  SKIA4983E | Operating screen for audio and A/C is not displayed when showing NAVI screen. |
| 56 (G) | 49 | RGB syn- chronizing signal | Output | ON | Press the "TRIP" button. |  SKIA0164E | NAVI screen is rolling. |

NAVIGATION SYSTEM

< SERVICE INFORMATION >





Terminal and Reference Value for Display unit

INFOID:00000000353715
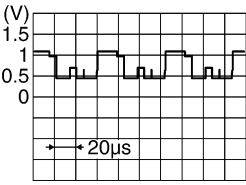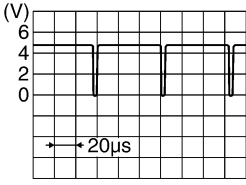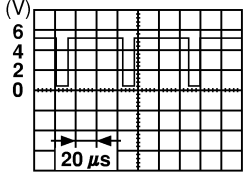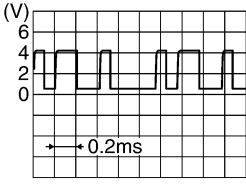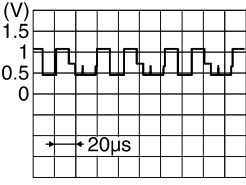
| Terminal No. (Wire color) | | Item | Signal input/output | Condition | | Voltage (Approx.) | Example of symptom |
|---------------------------|--------|----------------------------------------|---------------------|-----------------|-----------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------|
| + | – | | | Ignition switch | Operation | | |
| 1 (B) | Ground | Ground | – | ON | – | 0 V | – |
| 2 (L/W) | Ground | Power supply (Inverter) | Input | ON | – | 9 V | Screen is not shown. |
| 3 (L/R) | Ground | Power supply (Signal) | Input | ON | – | 9 V | Screen is not shown. |
| 6 (R/W) | 7 | RGB signal (G: green) | Input | ON | Select "Display Diagnosis (DCU)" of CONFIRMATION/ADJUSTMENT function. |  SKIA4981E | Screen looks reddish. |
| 7 | – | Shield ground | – | – | – | – | – |
| 8 (R) | 21 | Horizontal synchronizing (HP) signal | Output | ON | – |  SKIA4983E | Operating screen for audio and A/C is not displayed when showing NAVI screen. |
| 9 (B) | 21 | RGB area (YS) signal | Input | ON | Press the "TRIP" button. |  SKIA0162E | RGB screen is not shown. |
| 11 (B/W) | 23 | Display communication signal (DCU-DSP) | Input | ON | – |  SKIA4364E | Though a screen is displayed, it is impossible to adjust brightness. |
| 13 (P) | Ground | (Inverter) Ground | – | ON | – | 0 V | – |
| 14 (P/L) | Ground | (Signal) Ground | – | ON | – | 0 V | – |
| 17 (R/L) | 7 | RGB signal (R: red) | Input | ON | Select "Display Diagnosis (DCU)" of CONFIRMATION/ADJUSTMENT function. |  SKIA4980E | Screen looks bluish. |

NAVIGATION SYSTEM

< SERVICE INFORMATION >
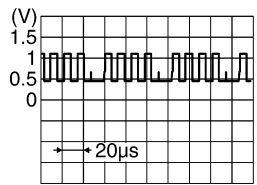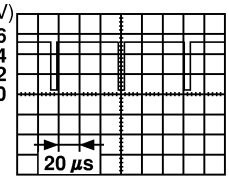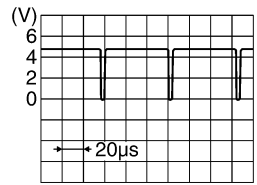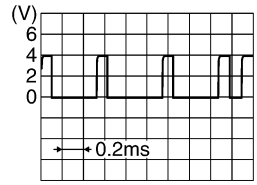
| Terminal No. (Wire color) | | Item | Signal input/output | Condition | | Voltage (Approx.) | Example of symptom |
|---------------------------|----|----------------------------------------|---------------------|-----------------|-----------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------|
| + | - | | | Ignition switch | Operation | | |
| 18 (B) | 7 | RGB signal (B: blue) | Input | ON | Select "Display Diagnosis (DCU)" of CONFIRMATION/ADJUSTMENT function. |  SKIA4982E | Screen looks yellowish. |
| 19 (G) | 21 | RGB synchronizing signal | Input | ON | Press the "TRIP" button. |  SKIA0164E | NAVI screen is rolling. |
| 20 (W) | 21 | Vertical synchronizing (VP) signal | Output | ON | - |  SKIA4983E | Operating screen for audio and A/C is not displayed when showing NAVI screen. |
| 21 | - | Shield ground | - | - | - | - | - |
| 22 (L) | 23 | Display communication signal (DSP-DCU) | Output | ON | - |  SKIA4363E | Though a screen is displayed, it is impossible to adjust brightness. |
| 23 | - | Shield ground | - | - | - | - | - |



Terminal and Reference Value for AV Switch

INFOID:000000003533716

| Terminal No. (Wire color) | | Item | Signal input/output | Condition | | Voltage (Approx.) | Example of symptom |
|---------------------------|--------|---------------------|---------------------|-----------------|-------------------------------------|-------------------|----------------------------------------------------------------------------------|
| + | - | | | Ignition switch | Operation | | |
| 1 (Y) | Ground | Battery power | Input | OFF | - | Battery voltage | System does not work properly. |
| 2 (V) | Ground | ACC signal | Input | ACC | - | Battery voltage | System does not work properly. |
| 3 (R/L) | Ground | Illumination signal | Input | OFF | Lighting switch is ON (position 1). | Battery voltage | AV switch illumination does not come on when lighting switch is ON (position 1). |
| | | | | | Turn lighting switch OFF. | 3.0V or less | |

NAVIGATION SYSTEM

< SERVICE INFORMATION >
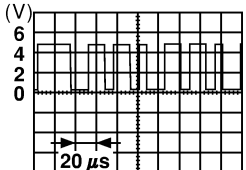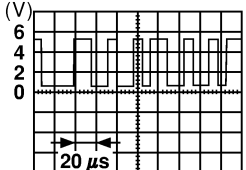
| Terminal No. (Wire color) | | Item | Signal input/ output | Condition | | Voltage (Approx.) | Example of symptom |
|------------------------------|--------|--------------------------------|----------------------------|--------------------|--------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|------------------------------------------------------|
| + | - | | | Ignition switch | Operation | | |
| 4 (BR) | Ground | Illumination control signal | Input | ON | Illumination control switch is operated by lighting switch in 1st position. | Changes between 0 and 12V. | AV switch illumi- nation cannot be controlled. |
| 5 (B) | Ground | Ground | - | ON | - | 0V | - |
| 6 (V) | Ground | Communica- tion signal (+) | Input/ output | ON | - |  SKIA0175E | System does not work properly. |
| 7 | - | Shield ground | - | - | - | - | - |
| 8 (LG) | Ground | Communica- tion signal (-) | Input/ output | ON | - |  SKIA0176E | System does not work properly. |
| 12 (R) | Ground | Remote con- trol A | Input | ON | Press MODE switch | 0V | Steering wheel audio controls do not function. |
| | | | | | Press SEEK UP switch | 0.75V | |
| | | | | | Press VOL UP switch | 2V | |
| | | | | | Except for above | 5V | |
| 13 (G) | Ground | Remote con- trol B | Input | ON | Press POWER switch | 0V | Steering wheel audio controls do not function. |
| | | | | | Press SEEK DOWN switch | 0.75V | |
| | | | | | Press VOL DOWN switch | 2V | |
| | | | | | Except for above | 5V | |
| 14 (L) | - | Remote con- trol ground | - | - | - | - | Steering wheel audio controls do not function. |

Terminal and Reference Value for BCM

INFOID:00000000353717

Refer to [BCS-11, "Terminal and Reference Value for BCM"](#).

On Board Self-Diagnosis Function

INFOID:00000000353718

DESCRIPTION

- Diagnosis function consists of the self-diagnosis mode performed automatically and the CONFIRMATION/ADJUSTMENT mode operated manually.
- Self-diagnosis mode checks for connections between the units constituting this system, analyzes each individual unit at the same time, and displays the results on the LCD screen.
- CONFIRMATION/ADJUSTMENT mode is used to perform trouble diagnosis that require operation and judgment by an operator (trouble that cannot be automatically judged by the system), to check/change the set value, and to display the History of Errors of the navigation system.

NAVIGATION SYSTEM

< SERVICE INFORMATION >

DIAGNOSIS ITEM

| Mode | | | Description | | |
|-----------------------------|----------------------|-------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Self-diagnosis (DCU) | | | Display control unit diagnosis. | | |
| Self-diagnosis (NAVI) | | | <ul style="list-style-type: none">• NAVI Control unit diagnosis (DVD-ROM drive) will not be diagnosed when no map DVD-ROM is in it.• Analyzes connection between the NAVI control unit and the GPS antenna and operation of each unit. | | |
| CONFIRMATION/ ADJUSTMENT | Display diagnosis | | In display control unit mode, color tone and shading of the screen can be checked by the display of a color bar and a gray scale. | | |
| | Vehicle signals | | In display control unit mode, analyzes the following vehicle signals: Vehicle speed signal, light signal ^{NOTE} , ignition switch signal, and reverse signal. | | |
| | Auto Climate Control | | A/C self-diagnosis of A/C system. | | |
| | Navigation | Display diagnosis | | In NAVI C/U mode, color tone and shading of the screen can be checked by the display of a color bar and a gray scale. | |
| | | Vehicle signals | | In NAVI C/U mode, analyzes the following vehicle signals: Vehicle speed signal, light signal, ignition switch signal, and reverse signal. | |
| | | History of Errors | | Diagnosis results previously stored in the memory (before turning ignition switch ON) are displayed in this mode. Time and location when/where the errors occurred are also displayed. | |
| | | Navigation | Display Longitude & Latitude | | Display the map. Use the joystick to adjust position. Longitude and latitude will be displayed. |
| | | | Speed Calibration | | Under ordinary conditions, the navigation system distance measuring function will automatically compensate for minute decreases in wheel and tire diameter caused by tire wear or low-pressure. Speed calibration immediately restores system accuracy in cases such as when distance calibration is needed because of the use of tire chains in inclement weather. |
| | | | Angle adjustment | | Corrects difference between actual turning angle of a vehicle and turning angle of the car mark on the display. |
| Initialize Location | | | This mode is for initializing the current location. Use when the vehicle is transported a long distance on a trailer, etc. | | |
| CAN DIAG SUPPORT MONITOR | | | Display status of CAN communication. | | |

NOTE:

Make the status that is set by D/N function be shown.

Self-Diagnosis Mode (DCU)

INFOID:000000003533719


OPERATION PROCEDURE

1. Start the engine.
2. Turn the audio system off.


NAVIGATION SYSTEM

< SERVICE INFORMATION >


3. While pressing the “MEMORY 4” button, turn the volume control dial clockwise or counterclockwise for 30 clicks or more. (When the self-diagnosis mode is started, a short beep will be heard.)
 - Shifting from current screen to previous screen is performed by pressing “BACK” button.

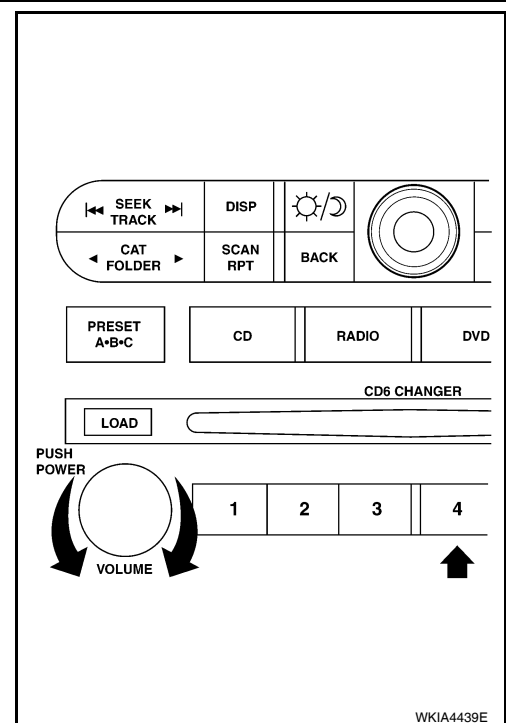


4. The initial self-diagnosis screen will be shown, and items “Self-Diagnosis (DCU)”, “Self-Diagnosis (NAVI)”, “Confirmation/Adjustment” and “CAN DIAG SUPPORT MONITOR” will become selective.

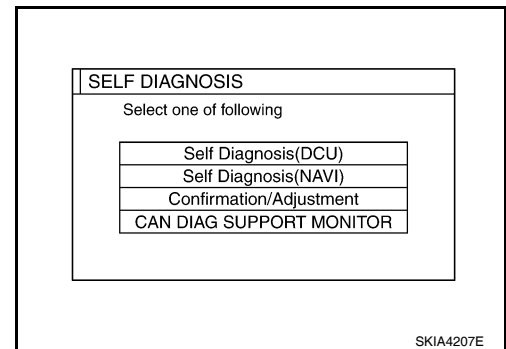

5. Perform self-diagnosis by selecting the “Self-Diagnosis”.
 - Self-diagnosis subdivision screen will be shown and the operation enters the self-diagnosis mode.
 - A bar graph shown below the self-diagnosis subdivision screen indicates progress of the diagnosis.

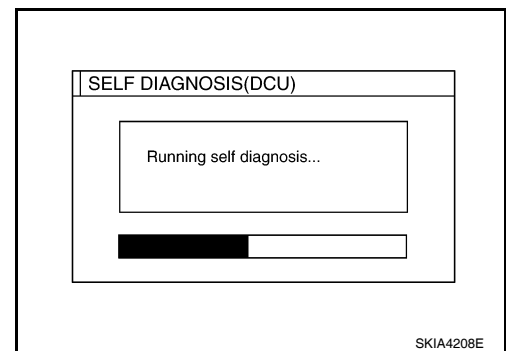

6. When the self-diagnosis completes, optional part confirmation screen will be shown.
 - When connection of an optional part is judged error, a screen to check if the optional part is actually fitted on the vehicle or not will be shown. When fitted, select the switch of the part on the screen and press “End”. Then the “SELF DIAGNOSIS” screen will be shown.
 - When the optional part is connected normally, the switch for the part will not appear on the screen.

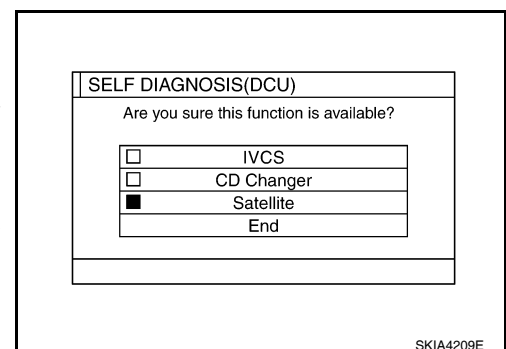


NAVIGATION SYSTEM

< SERVICE INFORMATION >


7. On the "SELF DIAGNOSIS" screen, each unit name will be colored according to the diagnosis result, as follows.

Green : Not malfunctioning.
Yellow : Cannot be judged by self-diagnosis results.
Red : Unit is malfunctioning.
Gray : Diagnosis has not been done.

- If several malfunctions are present in a unit, color of its switch on the screen will be either red, yellow, or gray, determined by the malfunction of the highest priority.

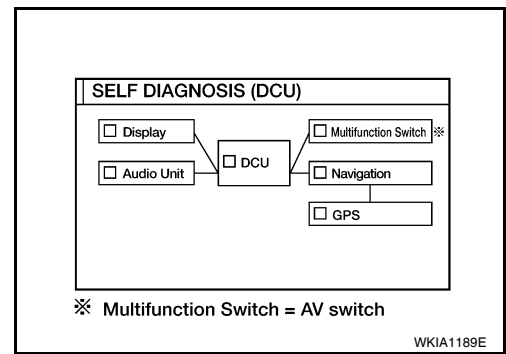

8. Select a switch on the "SELF DIAGNOSIS" screen and comments for the diagnosis results will be shown.
- When the switch is green, the following comment will be shown. "Self-diagnosis was successful. Further diagnosis and adjustments are recommended. Follow the "confirmation/adjustment" menu or refer to the service manual."
 - When the switch is yellow, the following comment will be shown. "Connection to the following unit is abnormal. See the service manual for further details".
 - When the switch is red, the following comment will be shown. "DCU is abnormal".

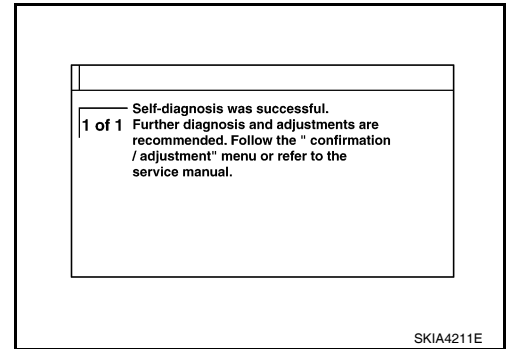

SELF-DIAGNOSIS RESULT

Quick reference table

- Select a malfunctioning diagnosis No. in the diagnosis result quick reference table.
- Find estimated malfunctioning system in the diagnosis No. table and perform check by referring to [AV-86. "Wiring Diagram - COMM -"](#).
- Turn the ignition switch OFF and perform self-diagnosis again.

| Screen switch | | | | | | Diagnosis No. |
|---------------|------|---------|------------|------------|-------------|---------------|
| Switch color | DCU* | DISPLAY | Audio unit | Navigation | GPS antenna | |
| Red | × | | | | | 1 |
| Gray | × | X | | | | 2 |
| | X | | X | | | 3 |
| | × | | | X | X | 4 |

*: DCU = Display control unit

CAUTION:

- When AV switch has a malfunction, you cannot start. Refer to [AV-134. "Unable to Operate All of AV Switches \(Unable to Start Self-Diagnosis\)"](#).
- When display unit has a malfunction, you cannot start. Refer to [AV-132. "Screen Is Not Shown"](#).

Self-Diagnosis Codes

| Diagnosis No. | Possible cause | Reference page |
|---------------|-------------------------------------------------------------------------------------------------------------------------------|-----------------------------------|
| 1 | Display control unit malfunction | Refer to AV-145 . |
| 2 | Display communication line between display control unit and display unit | Refer to AV-121 . |
| 3 | Audio unit power supply and ground circuit Audio communication line between display control unit and audio unit | Refer to AV-119 . |
| 4 | NAVI control unit power supply and ground circuit AV communication line between display control unit and NAVI control unit | Refer to AV-118 . |

NAVIGATION SYSTEM


< SERVICE INFORMATION >

Self-Diagnosis Mode (NAVI)


INFOID:000000003533720

OPERATION PROCEDURE


1. Start the engine.
2. Turn the audio system off.
3. While pressing the “MEMORY 4” button, turn the volume control dial clockwise or counterclockwise for 30 clicks or more. (When the self-diagnosis mode is started, a short beep will be heard.)
 - Shifting from current screen to previous screen is performed by pressing “BACK” button.

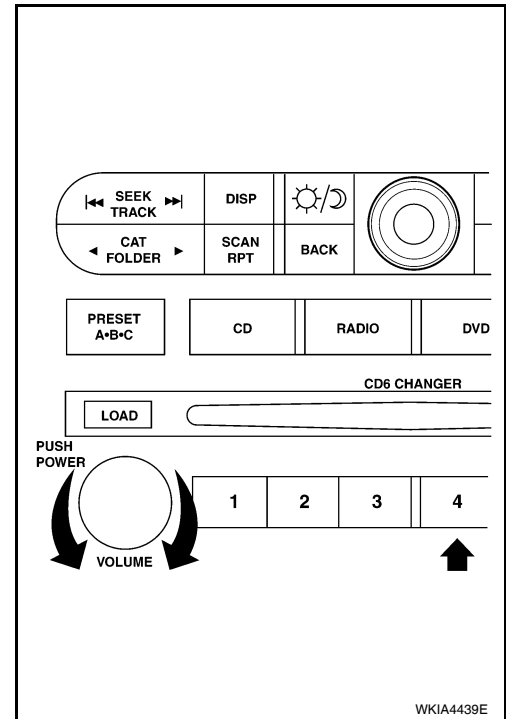

4. The initial self-diagnosis screen will be shown, and items “Self-Diagnosis (DCU)”, “Self-Diagnosis (NAVI)”, “Confirmation/Adjustment” and “CAN DIAG SUPPORT MONITOR” will become selective.

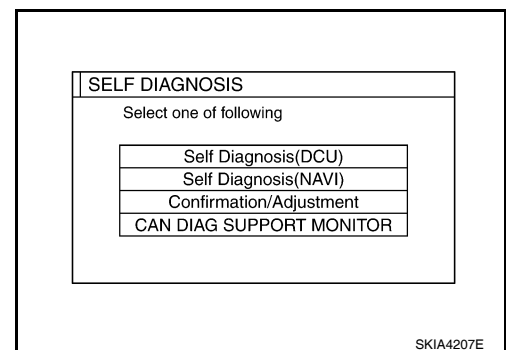

5. Perform self-diagnosis by selecting the “Self-diagnosis (NAVI)”.
 - Self-diagnosis subdivision screen will be shown and the operation enters the self-diagnosis mode.
 - A bar graph will be shown on the screen to indicate progress of the diagnosis.

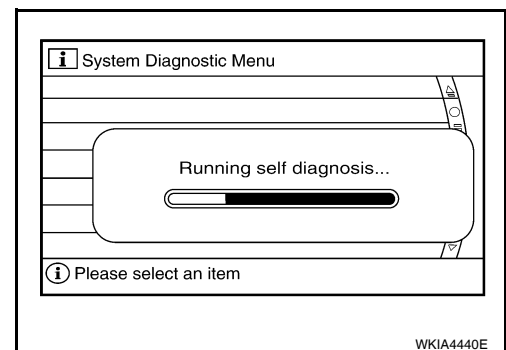


NAVIGATION SYSTEM

< SERVICE INFORMATION >


6. On the "SELF DIAGNOSIS" screen, each unit name will be colored according to the diagnosis result, as follows.

- Green** : Not malfunctioning.
Yellow : Cannot be judged by self-diagnosis results.
Red : Unit is malfunctioning.
Gray : Diagnosis has not been done.

- If several malfunctions are present in a unit, color of its switch on the screen will be either red, yellow, or gray, determined by the malfunction of the highest priority.

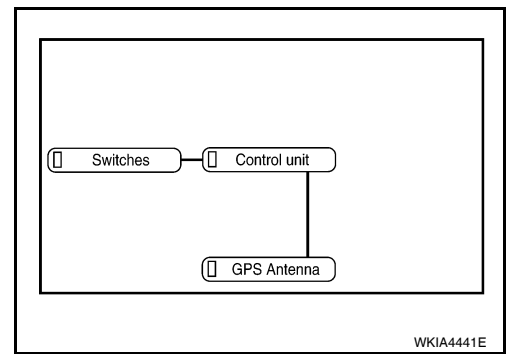

7. Select a switch on the "SELF DIAGNOSIS" screen and comments for the diagnosis results will be shown.
- When the switch is green, the following comment will be shown. "Connection is normal. Please refer to the Confirmation / Adjustment function or service manual for more detailed diagnosis information."
 - When the switch is yellow, the following comment will be shown. "Connection to the following unit is abnormal. See the service manual for further details".
 - When the switch is red, the following comment will be shown. "Center Control Unit is abnormal".
 - When the switch is gray, the following comment will be shown. "Self-diagnosis for DVD-ROM DRIVER of NAVI was not conducted because no DVD-ROM was available."

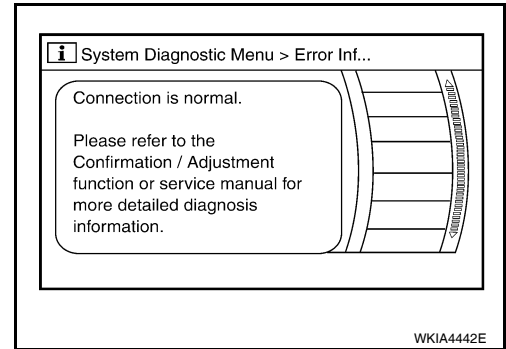

SELF-DIAGNOSIS RESULT

Quick reference table

- Select an malfunctioning diagnosis No. in the diagnosis result quick reference table.
- Find estimated malfunctioning system in the diagnosis No. table and perform check by referring to [AV-86. "Wiring Diagram - COMM -"](#).
- Turn the ignition switch OFF and perform self-diagnosis again.

| Screen switch | | | Diagnosis No. |
|---------------|----------------------|-------------|---------------|
| Switch color | Center control unit* | GPS antenna | |
| Red | × | | 1 |
| Gray | × | | 2 |
| Yellow | × | | 3 |
| | × | | 4 |
| | × | × | 5 |

*: Center Control unit = NAVI control unit

CAUTION:

- When AV switch has a malfunction, you cannot start. Refer to [AV-134. "Unable to Operate All of AV Switches \(Unable to Start Self-Diagnosis\)"](#).
- When display unit has a malfunction, you cannot start. Refer to [AV-132. "Screen Is Not Shown"](#).

Self-diagnosis codes

| Diagnosis No. | Possible cause | Reference page |
|---------------|------------------------------------------------------|---------------------------------|
| 1 | NAVI control unit malfunction. | Refer to AV-145 |
| 2 | No map DVD-ROM is inserted in the NAVI control unit. | Refer to AV-123 |

NAVIGATION SYSTEM

< SERVICE INFORMATION >


| Diagnosis No. | Possible cause | Reference page |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------|
| 3 | When "DVD-ROM error. Please check disc." is shown. 1. Eject map DVD-ROM and check if it is compatible with the system. 2. Check ejected DVD-ROM for dirt, damage, and warpage. 3. If no error is found, insert a known good map DVD-ROM of the same type and perform self-diagnosis again. If same result is shown, the NAVI control unit is malfunctioning. If result is normal, the map DVD-ROM is malfunctioning. | Refer to AV-123 |
| 4 | If "Error found in DVD-ROM or DVD-ROM driver in control unit. Please perform diagnosis in accordance with service manual" is shown, carry out same inspection as diagnosis No. 3. | Refer to AV-123 |
| 5 | GPS antenna system. 1. Visually check for a broken wire in the GPS antenna coaxial cable. 2. Disconnect GPS antenna connector, and make sure approximately 5V is supplied from the NAVI control unit. If not, the NAVI control unit is malfunctioning. If 5V is supplied, replace the GPS antenna. If the connection is still malfunction after the replacement of the GPS antenna, the NAVI control unit is malfunctioning. | Refer to AV-124 |

Confirmation/Adjustment Mode


INFOID:000000003533721

OPERATION PROCEDURE

1. Start the engine.
2. Turn the audio system off.
3. While pressing the "MEMORY 4" button, turn the volume control dial clockwise or counterclockwise for 30 clicks or more. (When the self-diagnosis mode is started, a short beep will be heard.)
 - Shifting from current screen to previous screen is performed by pressing "BACK" button.

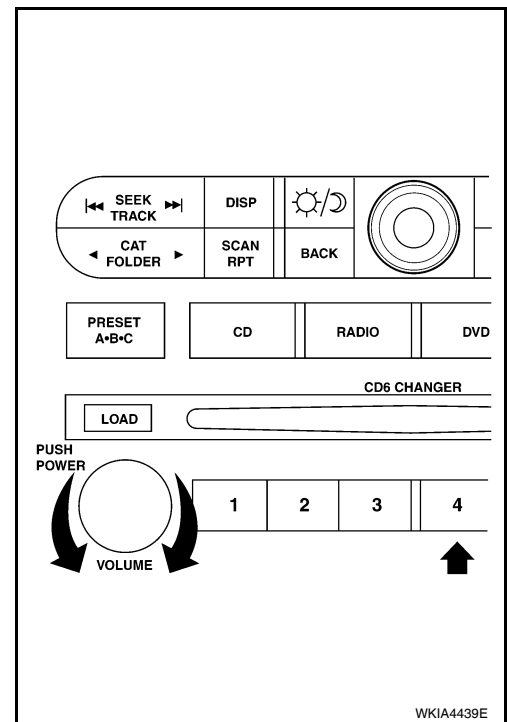


4. The initial self-diagnosis screen will be shown, and items "Self-Diagnosis (DCU)", "Self-Diagnosis (NAVI)", "Confirmation/Adjustment" and "CAN DIAG SUPPORT MONITOR" will become selective.

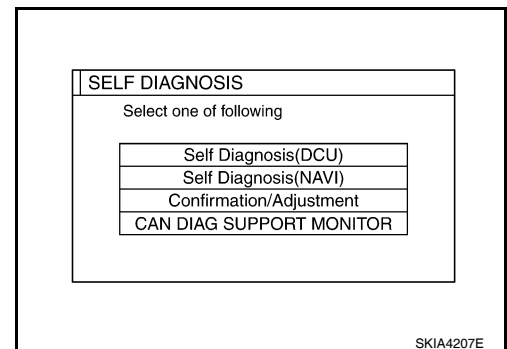


NAVIGATION SYSTEM

< SERVICE INFORMATION >

- When "Confirmation/Adjustment" is selected on the initial self-diagnosis screen, the operation will enter the CONFIRMATION/ADJUSTMENT mode. In this mode, check and adjustment of each item will become possible.
- The initial trouble diagnosis screen will be shown, and items "Display Diagnosis", "Vehicle Signals", "Auto Climate Control" and "Navigation" will become selective.
- Select each switch on "CONFIRMATION/ADJUSTMENT" screen to display the relevant diagnosis screen.

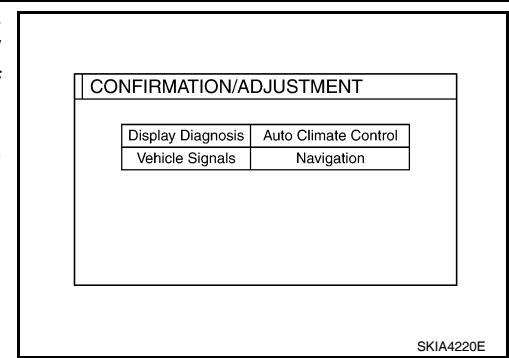

DISPLAY DIAGNOSIS

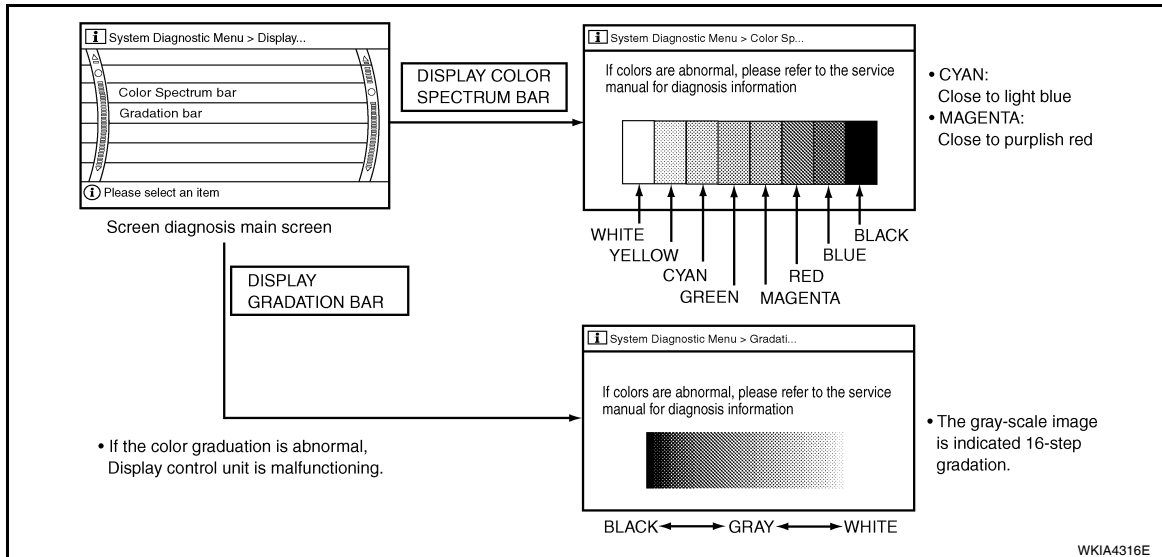

- When RGB signal error occurred in the RGB system, tone of the color bar will change as follows.

- R (red) signal error** : Screen looks bluish
- G (green) signal error** : Screen looks reddish
- B (blue) signal error** : Screen looks yellowish

- When the color of the screen looks unusual, refer to [AV-125, "Color of RGB Image Is Not Proper \(Only NAVI Screen Looks Bluish\)"](#), [AV-129, "Color of RGB Image Is Not Proper \(All Screens Look Reddish\)"](#) and [AV-129, "Color of RGB Image Is Not Proper \(All Screens Look Yellowish\)"](#).

VEHICLE SIGNALS

- A comparison check can be made of each actual vehicle signal and the signals recognized by the system.

CAUTION:

In case of confirming light signal, set D/N mode to ON/OFF of lighting switch (normal setting).

- OFF: D (Day mode)
- ON: N (Night mode)

Unless above setting, light signal (ON/OFF) may not be accurately displayed.

| VEHICLE SIGNALS | |
|-----------------|-----|
| Vehicle Speed | OFF |
| IGN | ON |
| Reverse | OFF |
| IVCS | OFF |
| Light | OFF |

WKIA4306E

| Diagnosis item | Display | Condition | Remarks |
|----------------|---------|---------------------------------|------------------------------------------------------------------------------|
| Vehicle speed | ON | Vehicle speed > 0 km/h (0 MPH) | Changes in indication may be delayed by approx. 1.5 seconds. This is normal. |
| | OFF | Vehicle speed = 0 km/h (0 MPH) | |
| | — | Ignition switch in ACC position | |

NAVIGATION SYSTEM


< SERVICE INFORMATION >

| Diagnosis item | Display | Condition | Remarks |
|----------------|---------|-----------------------------------------|------------------------------------------------------------------------------|
| Light | ON | Lighting switch ON | - |
| | OFF | Lighting switch OFF | |
| IGN | ON | Ignition switch ON | - |
| | OFF | Ignition switch ACC | |
| Reverse | ON | Selector lever in R position | Changes in indication may be delayed by approx. 1.5 seconds. This is normal. |
| | OFF | Selector lever in other than R position | |
| | - | Ignition switch in ACC position | |


- If vehicle speed is NG, refer to [AV-115, "Vehicle Speed Signal Inspection for Display Control Unit"](#).
- If light is NG, refer to [AV-116, "Illumination Signal Inspection for Display Control Unit"](#).
- If IGN is NG, refer to [AV-117, "Ignition Signal Inspection for Display Control Unit"](#).
- If reverse is NG, refer to [AV-118, "Reverse Signal Inspection for Display Control Unit"](#).

NAVIGATION

1. The initial confirmation/adjustment screen will be shown, and items "Display Diagnosis", "Vehicle Signals", "Navigation", "Error History" and "Delete Unit Connection Log" will become selective.
2. Select each switch on "CONFIRMATION/ADJUSTMENT" screen to display the relevant diagnosis screen.

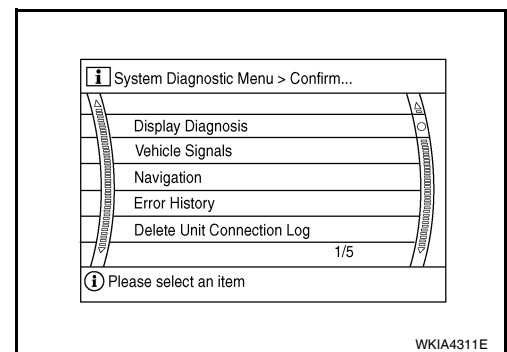

DISPLAY DIAGNOSIS

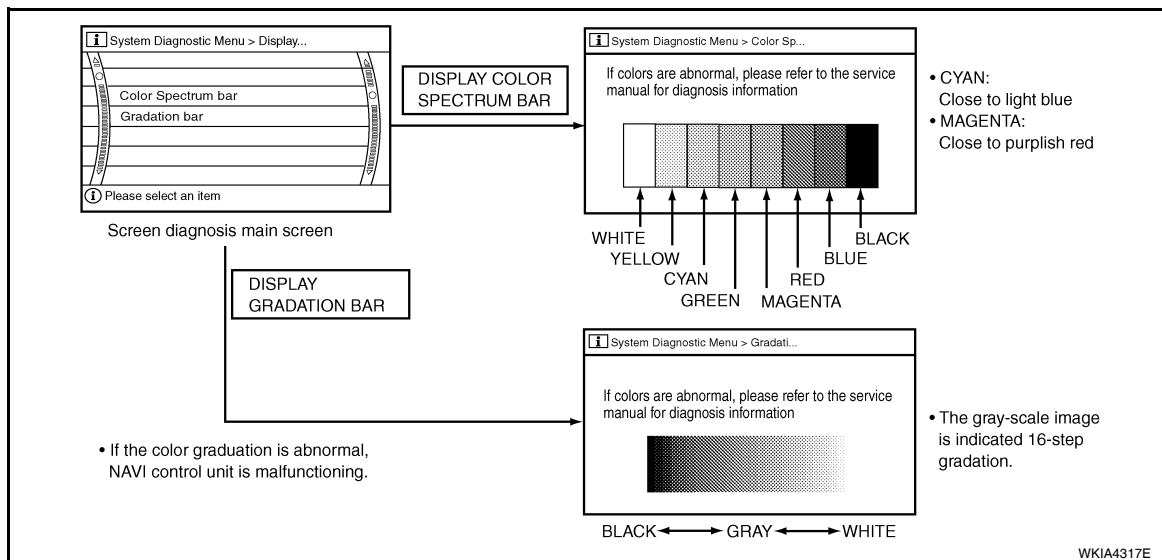

- When RGB signal error occurred in the RGB system, tone of the color bar will change as follows.

- R (red) signal error** : Screen looks bluish
- G (green) signal error** : Screen looks reddish
- B (blue) signal error** : Screen looks yellowish

- When the color of the screen looks unusual, refer to [AV-125, "Color of RGB Image Is Not Proper \(Only NAVI Screen Looks Bluish\)"](#), [AV-126, "Color of RGB Image Is Not Proper \(Only NAVI Screen Looks Reddish\)"](#) and [AV-127, "Color of RGB Image Is Not Proper \(Only NAVI Screen Looks Yellowish\)"](#).

VEHICLE SIGNALS

NAVIGATION SYSTEM

< SERVICE INFORMATION >


- A comparison check can be made of each actual vehicle signal and the signals recognized by the system.

CAUTION:

In case of confirming light signal, set D/N mode to ON/OFF of light switch (normal setting).

- OFF: D (Day mode)
- ON: N (Night mode)


Unless mode is in above setting, light signal (ON/OFF) may not be accurately displayed.

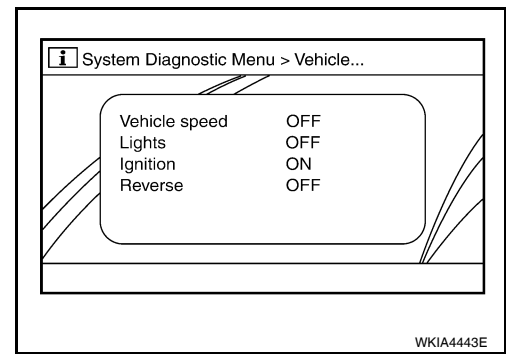

| Diagnosis item | Display | Condition | Remarks |
|----------------|---------|-----------------------------------------|------------------------------------------------------------------------------|
| Vehicle speed | ON | Vehicle speed > 0 km/h (0 MPH) | Changes in indication may be delayed by approx. 1.5 seconds. This is normal. |
| | OFF | Vehicle speed = 0 km/h (0 MPH) | |
| | – | Ignition switch in ACC position | |
| Lights | ON | Lighting switch ON | – |
| | OFF | Lighting switch OFF | |
| Ignition | ON | Ignition switch ON | – |
| | OFF | Ignition switch ACC | |
| Reverse | ON | Selector lever in R position | Changes in indication may be delayed by approx. 1.5 seconds. This is normal. |
| | OFF | Selector lever in other than R position | |
| | – | Ignition switch in ACC position | |

- If vehicle speed is NG, refer to [AV-114. "Vehicle Speed Signal Inspection for NAVI Control Unit"](#).
- If light is NG, refer to [AV-116. "Illumination Signal Inspection for NAVI Control Unit"](#).
- If IGN is NG, refer to [AV-117. "Ignition Signal Inspection for NAVI Control Unit"](#).
- If reverse is NG, refer to [AV-117. "Reverse Signal Inspection for NAVI Control Unit"](#).

ERROR HISTORY

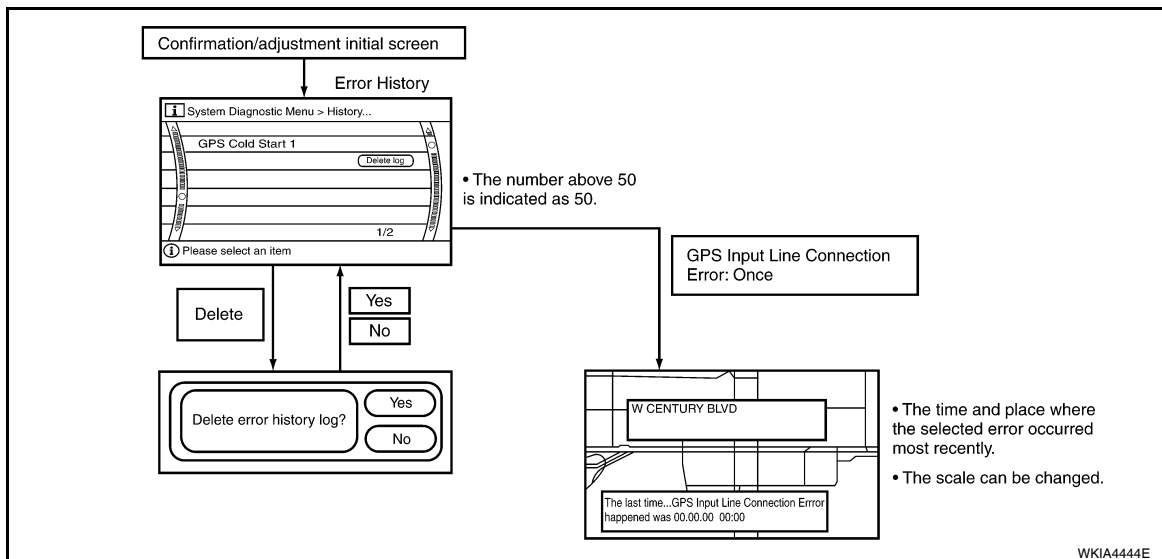

DIAGNOSIS BY ERROR HISTORY

The "Self-diagnosis" results indicate whether an error occurred during the period from when the ignition switch is turned to ON until "Self-diagnosis" is completed.

If an error occurred before the ignition switch was turned to ON and does not occur again until the "Self-diagnosis" is completed, the diagnosis result will be judged normal. Therefore, those errors in the past which cannot be found by the "Self-diagnosis" must be found by diagnosing the "Error History".

NAVIGATION SYSTEM

< SERVICE INFORMATION >

The Error History displays the time and place of the most recent occurrence of that error. However, take note of the following points.

- Correct time of the error occurrence may not be displayed when the GPS antenna substrate within the NAVI control unit has malfunctioned.
- Place of the error occurrence is represented by the position of the current-location mark at the time when the error occurred. If the current-location mark has deviated from the correct position, then the place of the error occurrence may be located correctly.
- The maximum number of occurrences which can be stored is 50. For the 51st and later occurrences, the displayed number remains 50.

When a reproducible malfunction occurred but its cause cannot be identified because several errors are present, record the item, number and place (longitude/latitude) of error occurrence (or delete the Error History), then turn the ignition switch from OFF to ON to reproduce the malfunction. Check the Error History to find the items which show an increased number of occurrences, and diagnose the item.

| Error item | Possible causes | Example of symptom |
|--------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| | Action/symptom | |
| Gyro sensor disconnected | Communications malfunction between NAVI control unit and internal gyro. | <ul style="list-style-type: none"> • Navigation location detection performance has deteriorated. (Angular velocity cannot be detected.) |
| | <ul style="list-style-type: none"> • Perform self-diagnosis. • When the NAVI control unit is judged normal by self-diagnosis, the symptom may be intermittent, caused by strong radio interference. | |
| GPS disconnected | Communication error between NAVI control unit and internal GPS substrate. | <ul style="list-style-type: none"> • Navigation location detection performance has deteriorated. (Location correction using GPS is not performed.) • GPS receiving status remains gray. |
| | <ul style="list-style-type: none"> • Perform self-diagnosis. • When the NAVI control unit is judged normal by self-diagnosis, the symptom may be intermittent, caused by strong radio interference. | |
| GPS transmission cable malfunction | Malfunctioning transmission wires to NAVI control unit and internal GPS substrate. | <ul style="list-style-type: none"> • During self-diagnosis, GPS diagnosis is not performed. |
| | <ul style="list-style-type: none"> • Perform self-diagnosis. • When the NAVI control unit is judged normal by self-diagnosis, the symptom may be intermittent, caused by strong radio interference. | |
| GPS input line connection error | Malfunctioning receiving wires to NAVI control unit and internal GPS substrate. | <ul style="list-style-type: none"> • Navigation location detection performance has deteriorated. (Location correction using GPS is not performed.) • GPS receiving status remains gray. |
| | <ul style="list-style-type: none"> • Perform self-diagnosis. • When the NAVI control unit is judged normal by self-diagnosis, the symptom may be intermittent, caused by strong radio interference. | |
| GPS TCX0 over GPS TCX0 under | Oscillating frequency of the GPS substrate frequency synchronizing oscillation circuit exceeded (or below) the specification | <ul style="list-style-type: none"> • Navigation location detection performance has deteriorated. (Location correction using GPS is not performed.) • GPS receiving status remains gray. |
| | <ul style="list-style-type: none"> • Perform self-diagnosis. • When the NAVI control unit is judged normal by self-diagnosis, the symptom may be intermittent, caused by strong radio interference, or the control unit may have been subjected to excessively high or low temperatures. | |
| GPS ROM malfunction GPS RAM malfunction | Contents of ROM (or RAM) in GPS substrate are malfunctioning. | <ul style="list-style-type: none"> • Location detection accuracy of the navigation system will deteriorate, depending on the error area in the memory, because GPS cannot make correct positioning. (Location correction using GPS is not performed.) |
| | <ul style="list-style-type: none"> • Perform self-diagnosis. • When the NAVI control unit is judged normal by self-diagnosis, the symptom may be intermittent, caused by strong radio interference. | |


NAVIGATION SYSTEM

< SERVICE INFORMATION >

| Error item | Possible causes | Example of symptom |
|---------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| | Action/symptom | |
| GPS RTC malfunction | Clock IC in GPS substrate is malfunctioning. | <ul style="list-style-type: none"> Correct time may not be displayed. After the power is turned on, the system always takes some time until GPS positioning becomes possible. (The GPS receiver starts positioning without re-collecting the whole satellite information when it judged the data stored in the receiver is correct.) Correct time of error occurrence may not be stored in the "Error History". |
| | <ul style="list-style-type: none"> Perform self-diagnosis. When the NAVI control unit is judged normal by self-diagnosis, the symptom may be intermittent, caused by strong radio interference. | |
| GPS antenna disconnected | Malfunctioning connection between GPS substrate in NAVI control unit and GPS antenna. | <ul style="list-style-type: none"> Navigation location detection performance has deteriorated. (Location correction using GPS is not performed.) GPS receiving status remains gray. |
| | <ul style="list-style-type: none"> Perform self-diagnosis. When connection between NAVI control unit and GPS antenna is judged normal by self-diagnosis, the symptom may be intermittent, caused by impact or vibration. | |
| Low voltage of GPS | The power voltage supplied to the GPS circuit board has decreased. | <ul style="list-style-type: none"> Navigation location detection performance has deteriorated. (Location correction using GPS is not performed.) GPS receiving status remains gray. |
| | <ul style="list-style-type: none"> Perform self-diagnosis. When connection between NAVI control unit and GPS antenna is judged normal by self-diagnosis, the symptom may be intermittent, caused by impact or vibration. | |
| DVD-ROM Malfunction DVD-ROM Read error DVD-ROM Response Error | Malfunctioning NAVI control unit. | - |
| | Dedicated map DVD-ROM is in the system, but the data cannot be read. | <ul style="list-style-type: none"> The map of a particular location cannot be displayed. Specific guidance information cannot be displayed. Map display is slow. Guidance information display is slow. System has been affected by vibration. |
| | <ul style="list-style-type: none"> Is map DVD-ROM damaged, warped, or dirty? - If damaged or warped, the map DVD-ROM is malfunctioning. - If dirty, wipe the DVD-ROM clean with a soft cloth. Perform self-diagnosis. When NAVI control unit is judged normal by self-diagnosis, the symptom is judged intermittent, caused by vibration. | |


NAVIGATION

- The navigation screen will be shown, and items "Display Longitude & Latitude", "Speed Calibration", "Angle Adjustment" and "Initialize Location" will become selective.
- Select each switch on "NAVIGATION" screen to display the relevant diagnosis screen.

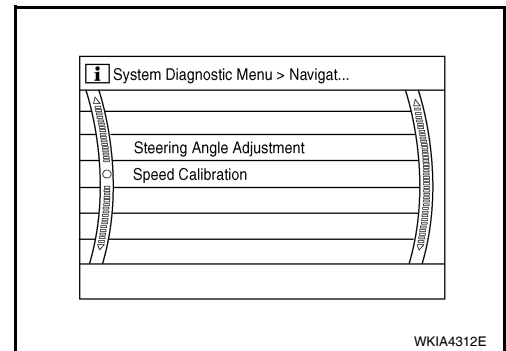

Angle adjustment

- Adjusts turning angle output detected by the gyroscope.

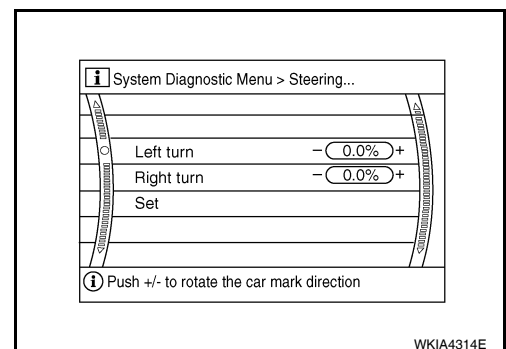


Speed Calibration

NAVIGATION SYSTEM

< SERVICE INFORMATION >

- During normal driving, distance error caused by tire wear and tire pressure change is automatically adjusted for by the automatic distance correction function. This function, on the other hand, is for immediate adjustment, in cases such as driving with tire chain fitted on tires.

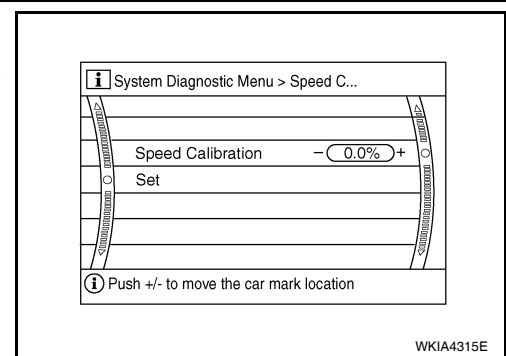


CAN Diagnostic Support Monitor


INFOID:00000000353722

OPERATION PROCEDURE

- Start the engine.
- Turn the audio system off.
- While pressing the “MEMORY 4” button, turn the volume control dial clockwise or counterclockwise for 30 clicks or more. (When the self-diagnosis mode is started, a short beep will be heard.)
 - Shifting from current screen to previous screen is performed by pressing “BACK” button.

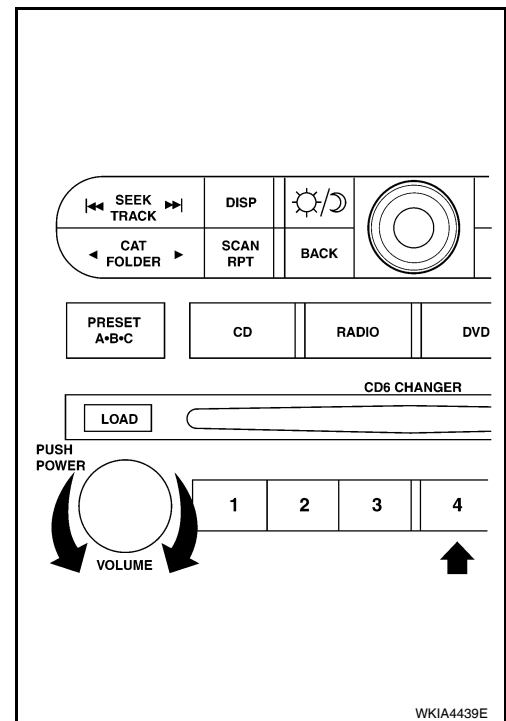

- The initial self-diagnosis screen will be shown, and items “Self-Diagnosis (DCU)”, “Self-Diagnosis (NAVI)”, “Confirmation/Adjustment” and “CAN DIAG SUPPORT MONITOR” will become selective.
- Select “CAN DIAG SUPPORT MONITOR”.

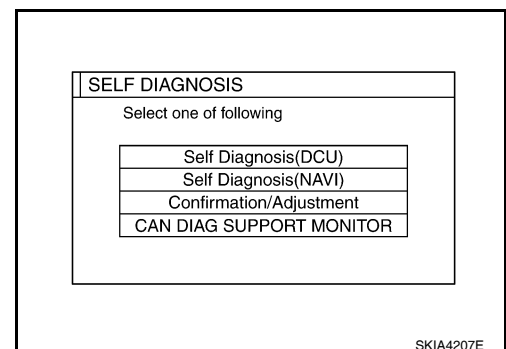


NAVIGATION SYSTEM

< SERVICE INFORMATION >

6. Display status of CAN communication.

| Item | Content | Error counter |
|------------|----------|---------------|
| CAN_COMM | OK/NG | 0-50 |
| CAN_CIRC_1 | OK/UNKWN | 0-50 |
| CAN_CIRC_2 | OK/UNKWN | 0-50 |
| CAN_CIRC_3 | OK/UNKWN | 0-50 |
| CAN_CIRC_4 | OK/UNKWN | 0-50 |
| CAN_CIRC_5 | OK/UNKWN | 0-50 |
| CAN_CIRC_6 | OK/UNKWN | 0-50 |
| CAN_CIRC_7 | OK/UNKWN | 0-50 |
| CAN_CIRC_8 | OK/UNKWN | 0-50 |
| CAN_CIRC_9 | OK/UNKWN | 0-50 |

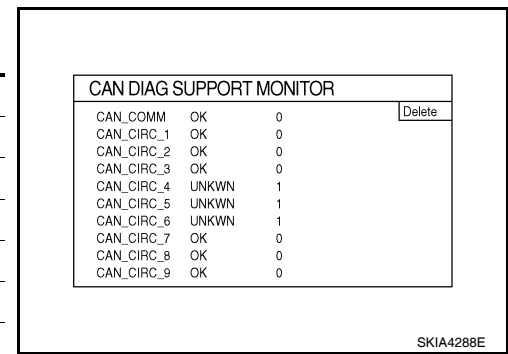

- If the ignition is turned on and UNKWN is shown on the screen, the value of the counter will be up. (MAX50)
- The value of the counter does not change if the ignition changes to OFF. (MAX50)
- If the counter shows the value of 50 and UNKWN is shown, the value of 50 will not be changed.

AV Switch Self-Diagnosis Function

INFOID:0000000003533723

Refer to [AV-28. "AV Switch Self-Diagnosis Function"](#).

Power Supply and Ground Circuit Inspection for NAVI Control Unit

INFOID:0000000003533724

1.CHECK FUSE

Make sure the following fuses of the NAVI control unit are not blown.

| Terminals | | Power source | Fuse No. |
|-----------|----------|---------------|----------|
| Connector | Terminal | | |
| B151 | 2 | Battery power | 31 |
| | 5 | ACC/ON power | 4 |

OK or NG


OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of blown fuse before installing new fuse. Refer to [PG-3](#).

2.CHECK POWER SUPPLY CIRCUIT

1. Disconnect NAVI control unit connector B151.
2. Check voltage between connector terminals and ground as follows.

| Terminals | | Ignition switch position | | | |
|-----------|----------|--------------------------|-----------------|-----------------|-----------------|
| (+) | | (-) | OFF | ACC | ON |
| Connector | Terminal | | | | |
| B151 | 2 | Ground | Battery voltage | Battery voltage | Battery voltage |
| | 5 | | 0V | Battery voltage | Battery voltage |

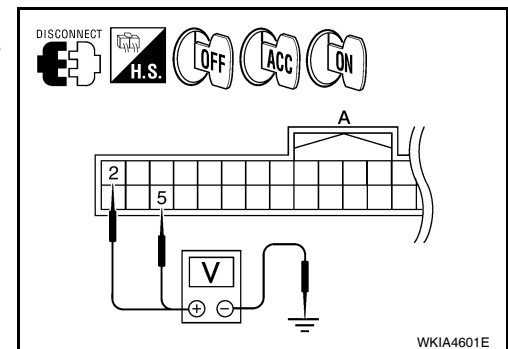

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between NAVI control unit and fuse.

3.CHECK GROUND CIRCUIT

NAVIGATION SYSTEM


< SERVICE INFORMATION >

1. Turn ignition switch OFF.
2. Check continuity between the following NAVI control unit connector terminals and ground.

| Terminals | | | Ignition switch | Continuity |
|-----------|----------|--------|-----------------|------------|
| Connector | Terminal | — | | |
| B151 | 1 | Ground | OFF | Yes |

OK or NG

- OK >> Inspection End.
 NG >> Repair or replace harness.

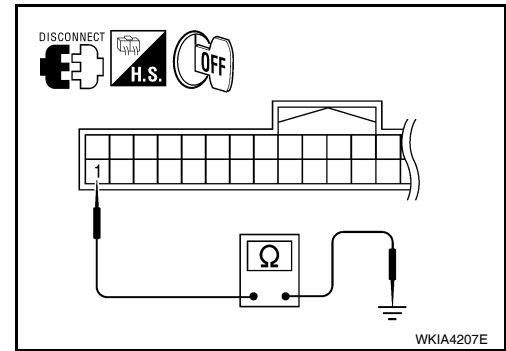

Power Supply and Ground Circuit Inspection for Display Control Unit

INFOID:000000003533725

1.CHECK FUSE

Make sure the following fuses of the display control unit are not blown.

| Terminals | | Power source | Fuse No. |
|-----------|----------|---------------|----------|
| Connector | Terminal | | |
| M94 | 1 | Battery power | 31 |
| | 10 | ACC power | 4 |


OK or NG

- OK >> GO TO 2.
 NG >> If fuse is blown, be sure to eliminate cause of blown fuse before installing new fuse. Refer to [PG-3](#).

2.CHECK POWER SUPPLY CIRCUIT

1. Disconnect display control unit connector M94.
2. Check voltage between connector terminals and ground as follows.

| Terminals | | Ignition switch position | | | |
|-----------|----------|--------------------------|-----------------|-----------------|-----------------|
| (+) | | (-) | OFF | ACC | ON |
| Connector | Terminal | | | | |
| M94 | 1 | Ground | Battery voltage | Battery voltage | Battery voltage |
| | 10 | | 0V | Battery voltage | Battery voltage |

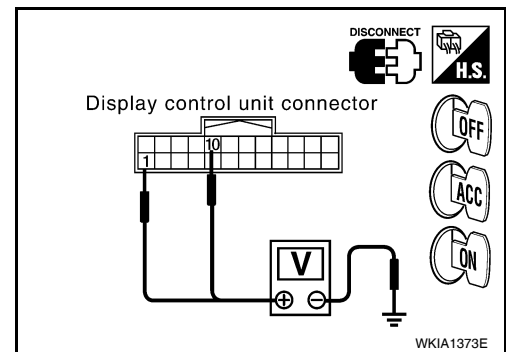

OK or NG

- OK >> GO TO 3.
 NG >> Check harness for open between display control unit and fuse.


3.CHECK GROUND CIRCUIT

Check continuity between the following display control unit connector terminals and ground.

| Terminals | | | Ignition switch | Continuity |
|-----------|----------|--------|-----------------|------------|
| Connector | Terminal | — | | |
| M94 | 3 | Ground | OFF | Yes |

OK or NG

- OK >> Inspection End.
 NG >> Repair or replace harness.

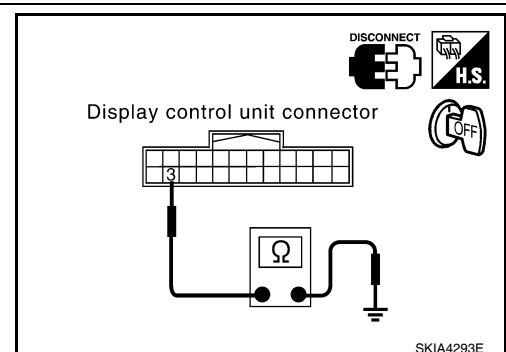

NAVIGATION SYSTEM

< SERVICE INFORMATION >

Power Supply and Ground Circuit Inspection for Display Unit

INFOID:000000003533726

1. CHECK POWER SUPPLY AND GROUND CIRCUIT FOR DISPLAY CONTROL UNIT

1. Check power supply and ground circuit for display control unit. Refer to [AV-111, "Power Supply and Ground Circuit Inspection for Display Control Unit"](#).

OK or NG

- OK >> GO TO 2.
NG >> Repair malfunctioning part.


2. CHECK POWER SUPPLY CIRCUIT FOR DISPLAY UNIT

1. Disconnect display unit connector M93.
2. Turn ignition switch ON.
3. Check voltage between display unit harness connector M93 terminals 2, 3 and ground.

Approx. 9V

OK or NG

- OK >> GO TO 4.
NG >> GO TO 3.

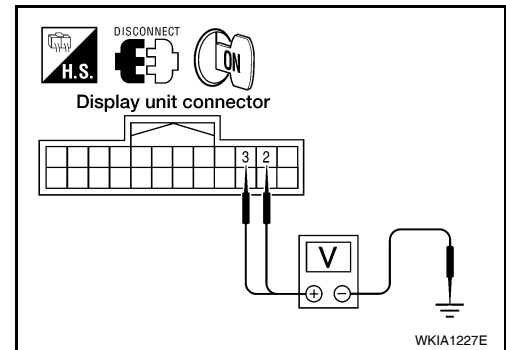


3. CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect display control unit connector M94.
3. Check continuity between display control unit harness connector M94 terminals 2, 4 and display unit harness connector M93 terminals 2, 3.

| Terminals | | | | Continuity |
|----------------------|----------|--------------|----------|------------|
| Display control unit | | Display unit | | |
| Connector | Terminal | Connector | Terminal | |
| M94 | 2 | M93 | 2 | Yes |
| | 4 | | 3 | |

4. Check continuity between display unit and ground.

| Terminals | | | Continuity |
|--------------|----------|--------|------------|
| Display unit | | — | |
| Connector | Terminal | | |
| M93 | 2 | Ground | No |
| | 3 | | |

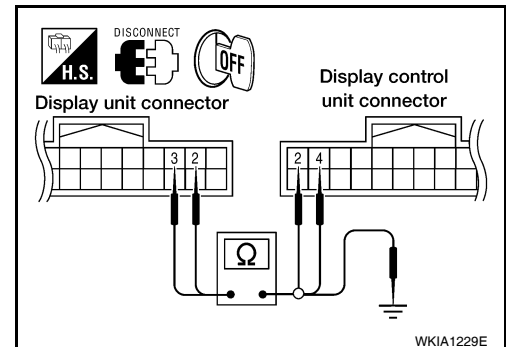

OK or NG

- OK >> Replace display control unit. Refer to [AV-145, "Removal and Installation"](#).
NG >> Repair harness.

4. CHECK GROUND CIRCUIT

NAVIGATION SYSTEM


< SERVICE INFORMATION >

1. Turn ignition switch OFF.
2. Check continuity between display unit harness connector M93 terminals 13, 14 and ground.

Continuity should exist.

OK or NG

- OK >> GO TO 6.
NG >> GO TO 5.

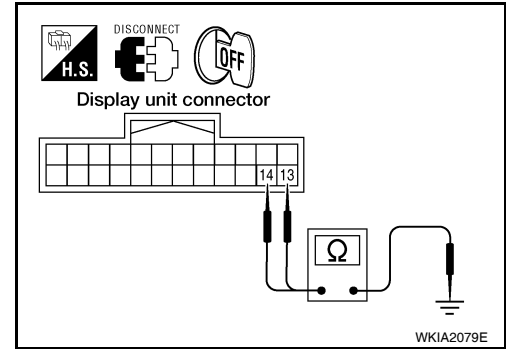


5. CHECK HARNESS

1. Disconnect display control unit connector M94.
2. Check continuity between display unit harness connector M93 terminals 13, 14 and display control unit harness connector M94 terminals 5, 7.

Continuity should exist.

OK or NG

- OK >> Replace display control unit. Refer to [AV-145. "Removal and Installation"](#).
NG >> Repair harness.

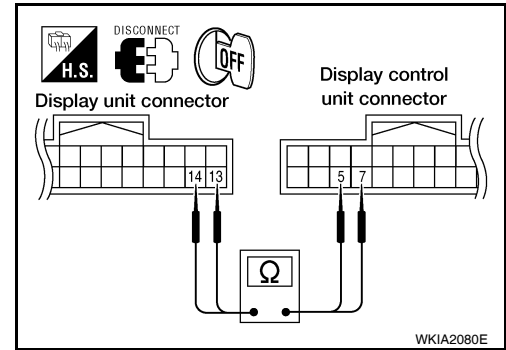


6. CHECK GROUND CIRCUIT

Check continuity between display unit and ground as follows.

| Terminals | | | Ignition switch | Continuity |
|-----------|----------|--------|-----------------|------------|
| Connector | Terminal | — | | |
| M93 | 1 | Ground | OFF | Yes |

OK or NG

- OK >> Inspection End.
NG >> Repair harness.

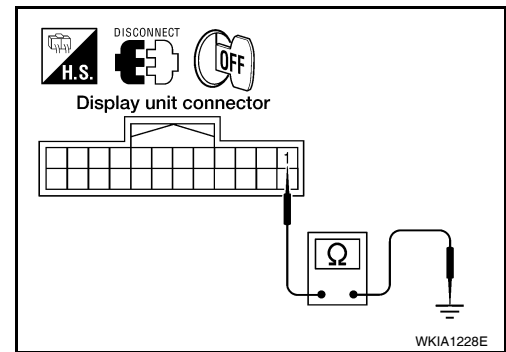

Power Supply and Ground Circuit Inspection for AV Switch

INFOID:000000003533727

1. CHECK FUSE

Make sure the following fuses of the AV switch are not blown.

| Terminals | | Power source | Fuse No. |
|-----------|----------|---------------|----------|
| Connector | Terminal | | |
| M98 | 1 | Battery power | 31 |
| | 2 | ACC power | 4 |

OK or NG

- OK >> GO TO 2.
NG >> If fuse is blown, be sure to eliminate cause of blown fuse before installing new fuse. Refer to [PG-3](#).


2. CHECK POWER SUPPLY CIRCUIT

NAVIGATION SYSTEM

< SERVICE INFORMATION >

1. Disconnect AV switch connector.
2. Check voltage between connector terminals and ground as follows.

| Terminals | | | Ignition switch position | | |
|-----------|----------|--------|--------------------------|-----------------|-----------------|
| (+) | | (-) | OFF | ACC | ON |
| Connector | Terminal | | | | |
| M98 | 1 | Ground | Battery voltage | Battery voltage | Battery voltage |
| | 2 | | 0V | Battery voltage | Battery voltage |

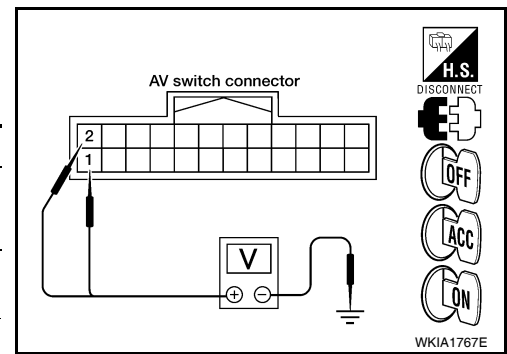

OK or NG

- OK >> GO TO 3.
 NG >> Check harness for open between AV switch and fuse.


3.CHECK GROUND CIRCUIT

Check continuity between AV switch and ground as follows.

| Terminals | | | Ignition switch | Continuity |
|-----------|----------|--------|-----------------|------------|
| Connector | Terminal | — | | |
| M98 | 5 | Ground | OFF | Yes |

OK or NG

- OK >> Inspection End.
 NG >> Repair or replace harness.

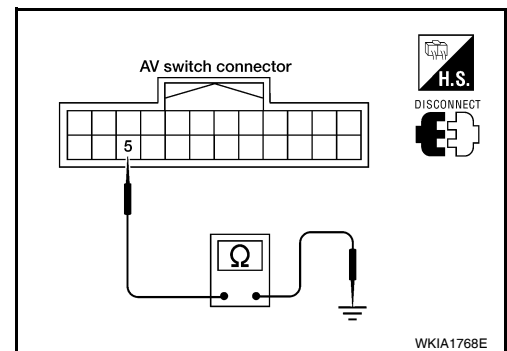

Vehicle Speed Signal Inspection for NAVI Control Unit

INFOID:000000003533728

1.CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect NAVI control unit connector B152, combination meter connector M24 and display control unit connector M94.
3. Check continuity between NAVI control unit harness connector B152 (B) terminal 66 and combination meter harness connector M24 (A) terminal 29.

Continuity should exist.


4. Check continuity between NAVI control unit harness connector B152 (B) terminal 66 and ground.

Continuity should not exist.

OK or NG

- OK >> GO TO 2.
 NG >> Repair harness.

2.CHECK 1: VEHICLE SPEED SIGNAL

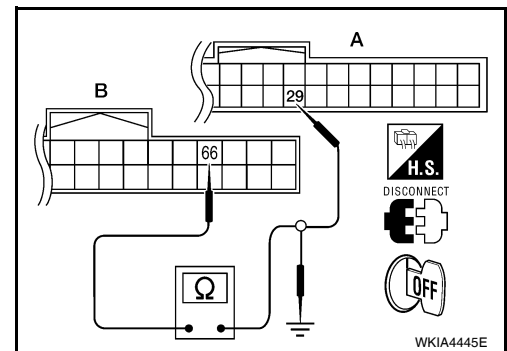

NAVIGATION SYSTEM


< SERVICE INFORMATION >

1. Connect NAVI control unit connector.
2. Turn ignition switch ON.
3. Check voltage between NAVI control unit harness connector B152 terminal 66 and ground.

Approx. 3.5V or more

OK or NG

- OK >> GO TO 3.
NG >> Replace NAVI control unit. Refer to [AV-145, "Removal and Installation"](#).

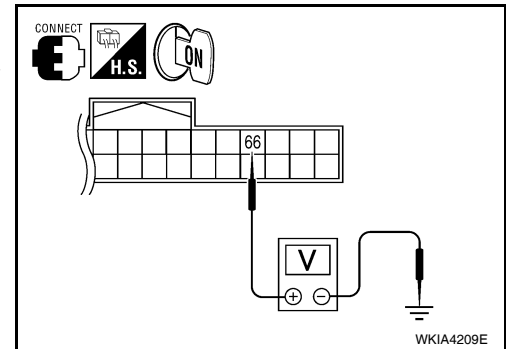

3.CHECK 2: VEHICLE SPEED SIGNAL


1. Connect combination meter connector and display control unit connector.
2. Drive vehicle at a constant speed.
3. Check signal between NAVI control unit harness connector B152 terminal 66 and ground with CONSULT-II or oscilloscope.

66 - Ground

: Refer to [AV-89, "Terminal and Reference Value for NAVI Control Unit"](#).

OK or NG

- OK >> Replace NAVI control unit. Refer to [AV-145, "Removal and Installation"](#).
NG >> Check combination meter system. Refer to [DI-17, "Vehicle Speed Signal Inspection"](#).

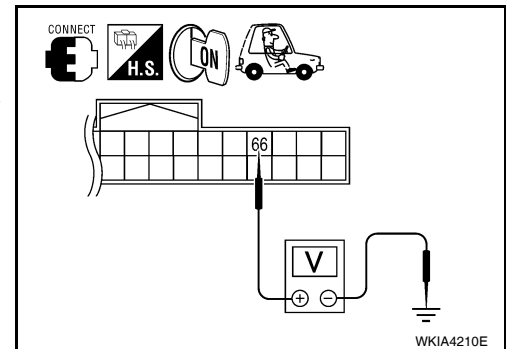

Vehicle Speed Signal Inspection for Display Control Unit

INFOID:00000000353729

1.CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect display control unit connector M94, combination meter connector M24 and NAVI control unit connector B152.
3. Check continuity between display control unit harness connector M94 terminal 16 and combination meter harness connector M24 terminal 29.

Continuity should exist.


4. Check continuity between display control unit harness connector M94 terminal 16 and ground.

Continuity should not exist.

OK or NG

- OK >> GO TO 2.
NG >> Repair harness.

2.CHECK 1: VEHICLE SPEED SIGNAL

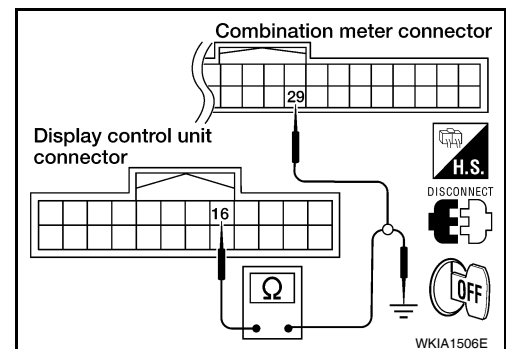

NAVIGATION SYSTEM


< SERVICE INFORMATION >

1. Connect display control unit connector.
2. Turn ignition switch ON.
3. Check voltage between display control unit harness connector M94 terminal 16 and ground.

Approx. 3.5V or more

OK or NG

- OK >> GO TO 3.
 NG >> Replace display control unit. Refer to [AV-145, "Removal and Installation"](#).

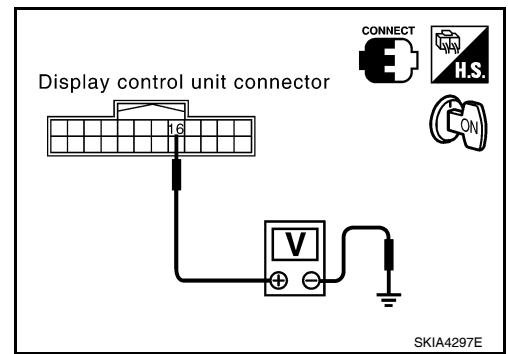

3.CHECK 2: VEHICLE SPEED SIGNAL


1. Connect combination meter connector M24 and NAVI control unit connector B152.
2. Drive vehicle at a constant speed.
3. Check signal between display control unit harness connector M94 terminal 16 and ground with CONSULT-II or oscilloscope.

16 - Ground

: Refer to [AV-91, "Terminal and Reference Value for Display Control unit"](#).

OK or NG

- OK >> Replace display control unit. Refer to [AV-145, "Removal and Installation"](#).
 NG >> Check combination meter system. Refer to [DI-17, "Vehicle Speed Signal Inspection"](#).

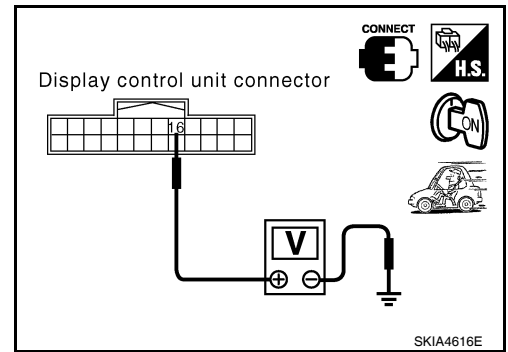

Illumination Signal Inspection for NAVI Control Unit

INFOID:00000000353730


1.CHECK ILLUMINATION SIGNAL

1. Turn the ignition switch ON.
2. Check voltage between NAVI control unit and ground.

| Terminals | | | Lighting switch position | |
|--------------|----------|--------------|--------------------------|------------|
| (+) Terminal | | (-) Terminal | | |
| Connector | Terminal | | 1st or 2nd position | OFF |
| B152 | 61 | Ground | Battery voltage | Approx. 0V |

OK or NG

- OK >> Replace NAVI control unit. Refer to [AV-145, "Removal and Installation"](#).
 NG >> Check harness for open or short between NAVI control unit and IPDM E/R.

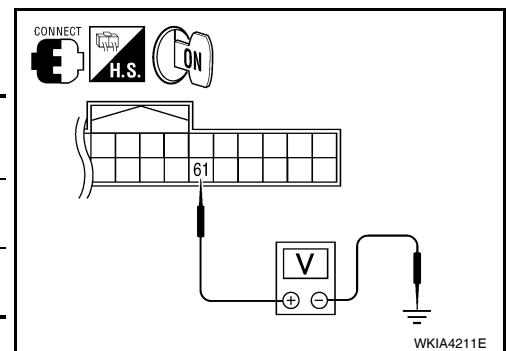

Illumination Signal Inspection for Display Control Unit

INFOID:00000000353731

1.CHECK ILLUMINATION SIGNAL

NAVIGATION SYSTEM


< SERVICE INFORMATION >

1. Turn ignition switch ON.
2. Check voltage between display control unit and ground.

| Terminals | | | Lighting switch position | |
|---------------|----|--------------|--------------------------|------------|
| (+) Connector | | (-) Terminal | 1st or 2nd position | OFF |
| M94 | 14 | | Battery voltage | Approx. 0V |

OK or NG

- OK >> Replace display control unit. Refer to [AV-145, "Removal and Installation"](#).
- NG >> Check harness for open or short between display control unit and IPDM E/R.

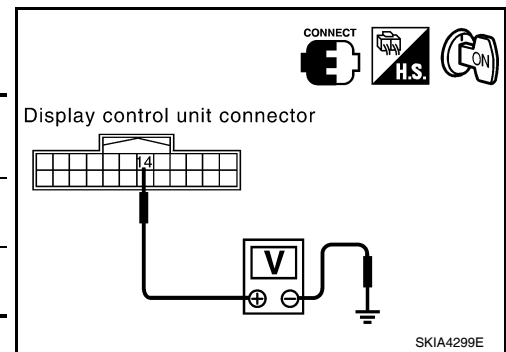

Ignition Signal Inspection for NAVI Control Unit

INFOID:000000003533732


1.CHECK IGNITION SIGNAL

1. Disconnect NAVI control unit connector B152.
2. Turn ignition switch ON.
3. Check voltage between NAVI control unit harness connector B152 terminal 63 and ground.

Battery voltage should exist.

OK or NG

- OK >> Replace NAVI control unit. Refer to [AV-145, "Removal and Installation"](#).
- NG >> Check harness for open or short between NAVI control unit and fuse.

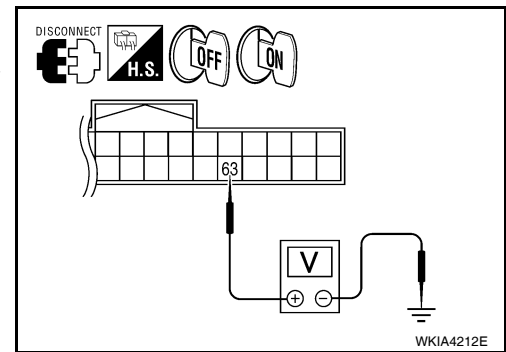

Ignition Signal Inspection for Display Control Unit

INFOID:000000003533733


1.CHECK IGNITION SIGNAL

1. Disconnect display control unit connector M94.
2. Turn ignition switch ON.
3. Check voltage between display control unit harness connector M94 terminal 12 and ground.

Battery voltage should exist.

OK or NG

- OK >> Replace display control unit. Refer to [AV-145, "Removal and Installation"](#).
- NG >> Check harness for open or short between display control unit and fuse.

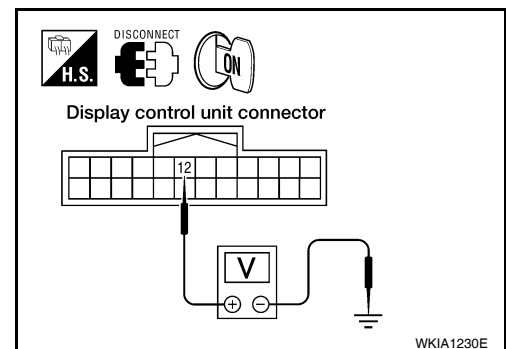

Reverse Signal Inspection for NAVI Control Unit

INFOID:000000003533734

1.CHECK REVERSE LAMP

1. Turn ignition switch ON.
2. Place A/T selector lever into R-position. Do back-up lamps come on?

YES or NO

- YES >> GO TO 2.
- NO >> Check back-up lamp system. Refer to [LT-80](#).


2.CHECK REVERSE SIGNAL

NAVIGATION SYSTEM

< SERVICE INFORMATION >

1. Disconnect NAVI control unit connector B152.
2. Turn ignition switch ON.
3. With the A/T selector lever in R-position, check voltage between NAVI control unit and ground.

| Terminals | | | Selector lever position | |
|-----------|----------|--------|-------------------------|------------|
| (+) | | (-) | | |
| Connector | Terminal | | | R-position |
| B152 | 65 | Ground | Battery voltage | Approx. 0V |

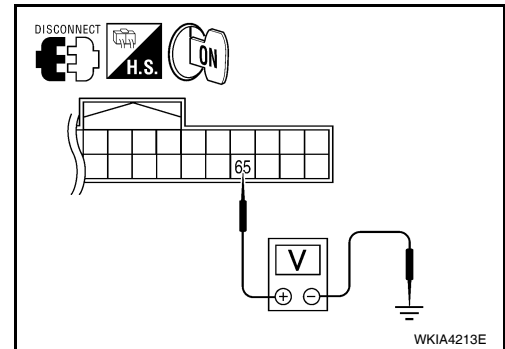

OK or NG

- OK >> Replace NAVI control unit. Refer to [AV-145. "Removal and Installation"](#).
 NG >> Check harness for open or short between NAVI control unit and back-up lamp position relay.

Reverse Signal Inspection for Display Control Unit

INFOID:00000000353735

1.CHECK REVERSE LAMP

1. Turn ignition switch ON.
2. Place A/T selector lever into R-position. Do back-up lamps come on?


YES or NO

- YES >> GO TO 2.
 NO >> Check back-up lamp system. Refer to [LT-80](#).

2.CHECK REVERSE SIGNAL

1. Disconnect display control unit connector M94.
2. Turn ignition switch ON.
3. With the A/T selector lever in R-position, check voltage between display control unit and ground.

| Terminals | | | Selector lever position | |
|-----------|----------|--------|-------------------------|------------|
| (+) | | (−) | | |
| Connector | Terminal | | | R-position |
| M94 | 6 | Ground | Battery voltage | Approx. 0V |

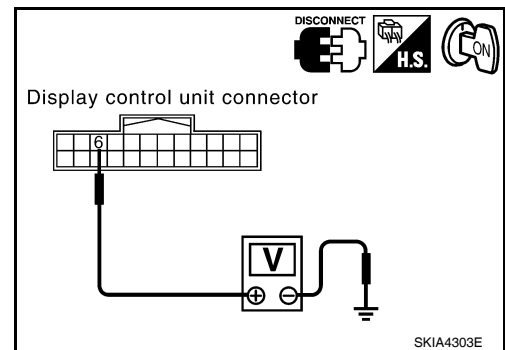

OK or NG

- OK >> Replace display control unit. Refer to [AV-145. "Removal and Installation"](#).
 NG >> Check harness for open or short between display control unit and back-up lamp position relay.

AV Communication Line Check (Between Display Control Unit and NAVI Control Unit)

INFOID:00000000353736

1.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check power supply and ground circuit for NAVI control unit. Refer to [AV-110. "Power Supply and Ground Circuit Inspection for NAVI Control Unit"](#).

OK or NG

- OK >> GO TO 2.
 NG >> Check the malfunctioning parts.

2.CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect NAVI control unit connector B152 and display control unit connector M95.
3. Check continuity between NAVI control unit and display control unit.

NAVIGATION SYSTEM

< SERVICE INFORMATION >

| Terminals | | | | Continuity |
|-------------------------|----------|---------------------------|----------|------------|
| B | | A | | |
| Connector | Terminal | Connector | Terminal | |
| NAVI control unit: B152 | 69 | Display control unit: M95 | 32 | Yes |
| | 70 | | 34 | |

4. Check continuity between NAVI control unit and ground.

| Terminals | | | Continuity |
|----------------------------|----------|--------|------------|
| B | | — | |
| Connector | Terminal | | |
| NAVI control unit: B152 | 69 | Ground | No |
| | 70 | | |

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.

3.CHECK SELF-DIAGNOSIS OF DCU

1. Replace NAVI control unit.
2. Connect NAVI control unit connector and display control unit connector.
3. Turn ignition switch ON.
4. Start self-diagnosis of DCU and check the self-diagnosis result.

OK or NG

OK >> Inspection End.

NG >> Replace display control unit. Refer to [AV-145, "Removal and Installation"](#).

Audio Communication Line Check (Between Display Control Unit and Audio Unit)

INFOID:000000000353377

1.CHECK POWER SUPPLY AND GROUND CIRCUIT

1. Check power supply and ground circuit for audio unit. Refer to [AV-31, "Power Supply Circuit Inspection"](#).

OK or NG

OK >> GO TO 2.

NG >> Check the malfunctioning parts.


2.CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect audio unit connector M45 and display control unit connector M95.
3. Check continuity between audio unit and display control unit.

| Terminals | | | | Continuity |
|----------------------|----------|------------|----------|------------|
| Display control unit | | Audio unit | | |
| Connector | Terminal | Connector | Terminal | |
| M95 | 40 | M45 | 65 | Yes |
| | 42 | | 66 | |

4. Check continuity between display control unit and ground.

| Terminals | | | Continuity |
|----------------------|----------|--------|------------|
| Display control unit | | — | |
| Connector | Terminal | | |
| M95 | 40 | Ground | No |
| | 42 | | |

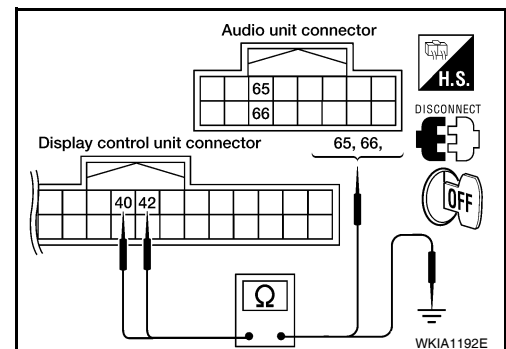

NAVIGATION SYSTEM

< SERVICE INFORMATION >

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector.


3.CHECK 1: AUDIO-TX COMMUNICATION SIGNAL

1. Connect display control unit connector.
2. Turn ignition switch ON.
3. Check voltage between display control unit harness connector M95 terminal 42 and ground.

Approx. 3.5V or more.

OK or NG

- OK >> GO TO 4.
- NG >> Replace display control unit. Refer to [AV-145, "Removal and Installation"](#).

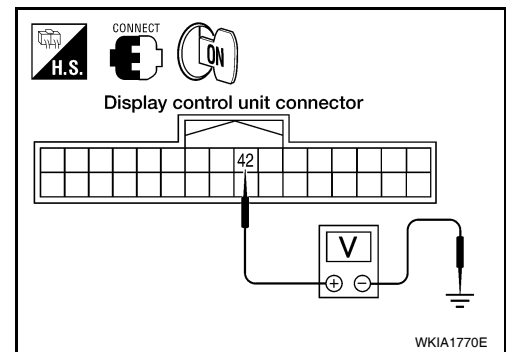


4.CHECK 2: AUDIO-RX COMMUNICATION SIGNAL

1. Turn ignition switch OFF.
2. Disconnect display control unit connector M95.
3. Connect audio unit connector M45.
4. Turn ignition switch ON.
5. Check voltage between audio unit harness connector M45 terminal 65 and ground.

Approx. 3.5V or more.

OK or NG

- OK >> GO TO 5.
- NG >> Replace audio unit. Refer to [AV-46, "Removal and Installation"](#).

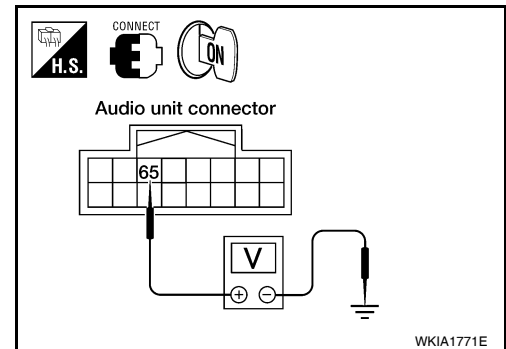

5.CHECK 3: AUDIO-TX COMMUNICATION SIGNAL


Check signal between display control unit harness connector M95 terminal 40 and ground with CONSULT-II or oscilloscope.

40 - Ground

: Refer to [AV-91, "Terminal and Reference Value for Display Control unit"](#).

OK or NG

- OK >> GO TO 6.
- NG >> Replace display control unit. Refer to [AV-145, "Removal and Installation"](#).

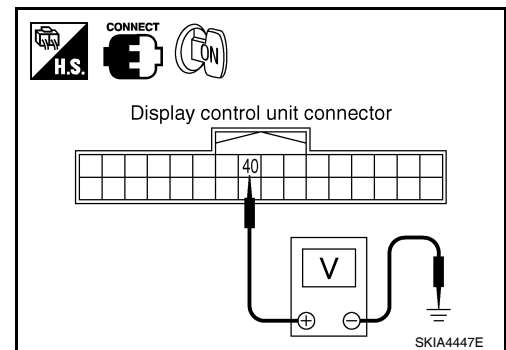

6.CHECK 4: AUDIO-RX COMMUNICATION SIGNAL


1. Turn ignition switch ON.
2. Check signal between display control unit harness connector M95 terminal 42 and ground with CONSULT-II or oscilloscope.

42 - Ground

: Refer to [AV-91, "Terminal and Reference Value for Display Control unit"](#).

OK or NG

- OK >> Inspection End.
- NG >> Replace audio unit. Refer to [AV-46, "Removal and Installation"](#).

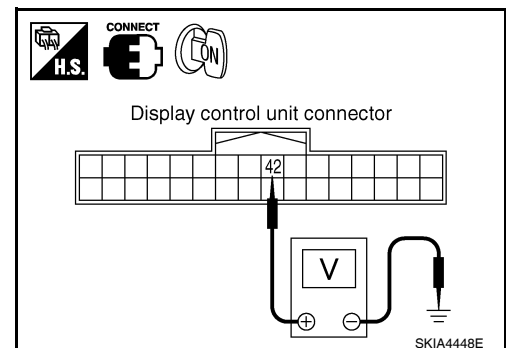

NAVIGATION SYSTEM

< SERVICE INFORMATION >

Display Communication Line Check (Between Display Control Unit and Display Unit)

INFOID:000000003533738

1.CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect display unit connector M93 and display control unit connector M95.
3. Check continuity between display control unit and display unit.

| Terminals | | | | Continuity |
|----------------------|----------|--------------|----------|------------|
| Display control unit | | Display unit | | |
| Connector | Terminal | Connector | Terminal | |
| M95 | 36 | M93 | 11 | Yes |
| | 38 | | 22 | |

4. Check continuity between display control unit and ground.

| Terminals | | | Continuity |
|----------------------|----------|--------|------------|
| Display control unit | | — | |
| Connector | Terminal | | |
| M95 | 36 | Ground | No |
| | 38 | | |

OK or NG

OK >> GO TO 2.

NG >> Repair harness or connector.

2.CHECK 1: COMMUNICATION SIGNAL (DCU–DSP)

1. Connect display unit connector.
2. Turn ignition switch ON.
3. Check voltage between display unit harness connector M93 terminal 11 and ground.

Approx. 3.5V or more.

OK or NG

OK >> GO TO 3.

NG >> Replace display unit. Refer to [AV-145, "Removal and Installation"](#).

3.CHECK 2: COMMUNICATION SIGNAL (DSP–DCU)

1. Turn ignition switch OFF.
2. Connect display control unit connector M95.
3. Turn ignition switch ON.
4. Check voltage between display control unit harness connector M95 terminal 38 and ground.




Approx. 3.5V or more.

OK or NG

OK >> GO TO 4.

NG >> Replace display control unit. Refer to [AV-145, "Removal and Installation"](#).

4.CHECK 3: COMMUNICATION SIGNAL (DCU–DSP)

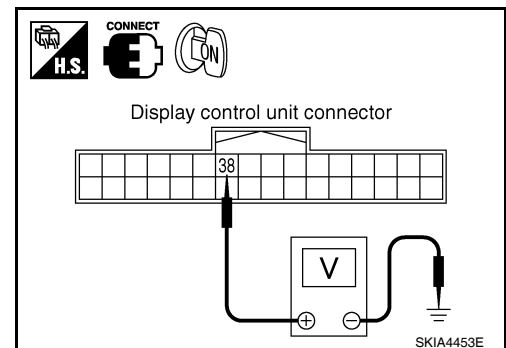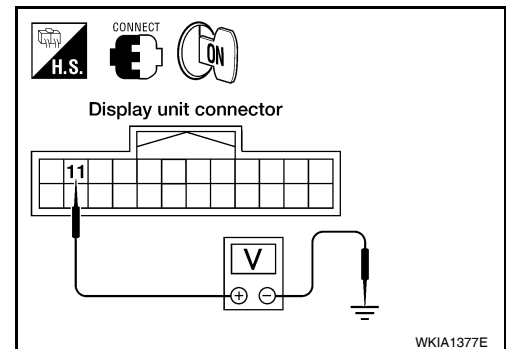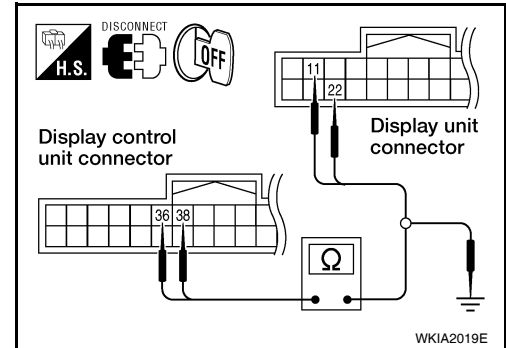

NAVIGATION SYSTEM

< SERVICE INFORMATION >

Check signal between display control unit harness connector M95 terminal 36 and ground with CONSULT-II or oscilloscope.


36 - Ground

: Refer to [AV-91, "Terminal and Reference Value for Display Control unit"](#).

OK or NG

OK >> GO TO 5.

NG >> Replace display control unit. Refer to [AV-145, "Removal and Installation"](#).

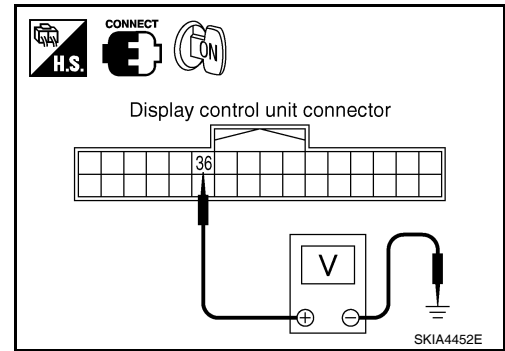

5.CHECK 4: COMMUNICATION SIGNAL (DSP-DCU)

Check signal between display control unit harness connector M95 terminal 38 and ground with CONSULT-II or oscilloscope.


38 - Ground

: Refer to [AV-91, "Terminal and Reference Value for Display Control unit"](#).

OK or NG

OK >> Inspection End.

NG >> Replace display unit. Refer to [AV-145, "Removal and Installation"](#).

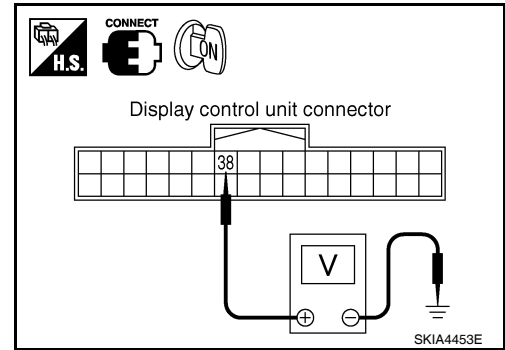

AV Communication Line Check (Between Display Control Unit and AV Switch)

INFOID:000000003533739

1.CHECK AV SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect display control unit connector M95 and AV switch connector M98.
3. Check continuity between display control unit and AV switch.

| Terminals | | | | Continuity |
|----------------------|----------|-----------|----------|------------|
| Display control unit | | AV switch | | |
| Connector | Terminal | Connector | Terminal | |
| M95 | 28 | M98 | 6 | Yes |
| | 30 | | 8 | |

4. Check continuity between display control unit and ground.

| Terminals | | | Continuity |
|----------------------|----------|--------|------------|
| Display control unit | | — | |
| Connector | Terminal | | |
| M95 | 28 | Ground | No |
| | 30 | | |

OK or NG


OK >> GO TO 2.

NG >> Repair harness or connector.

2.CHECK SELF-DIAGNOSIS OF DCU

1. Replace AV switch.
2. Connect display control unit connector and AV switch connector.
3. Turn ignition switch ON.
4. Start self-diagnosis of DCU and check the self-diagnosis result.

OK or NG

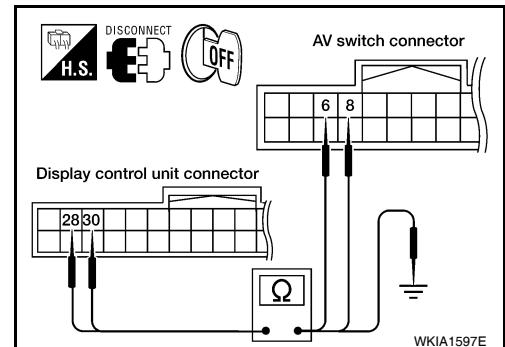

NAVIGATION SYSTEM

< SERVICE INFORMATION >

- OK >> Inspection End.
NG >> Replace display control unit. Refer to [AV-145. "Removal and Installation"](#).

CAN Communication Line Check

INFOID:000000003533740

1.CHECK MONITOR DESCRIPTION

1. Start display control unit self-diagnosis. Refer to [AV-98. "Self-Diagnosis Mode \(DCU\)"](#).
2. Select "CAN DIAG SUPPORT MONITOR". Refer to [AV-109. "CAN Diagnostic Support Monitor"](#).

| Item | content | | Error counter |
|------------|------------------|-----------------|---------------|
| | Normal condition | Error (Example) | |
| CAN_COMM | OK | NG | 0-50 |
| CAN_CIRC_1 | OK | UNKWN | 0-50 |
| CAN_CIRC_2 | OK | UNKWN | 0-50 |
| CAN_CIRC_3 | OK | UNKWN | 0-50 |
| CAN_CIRC_4 | OK | UNKWN | 0-50 |
| CAN_CIRC_5 | OK | UNKWN | 0-50 |
| CAN_CIRC_6 | OK | UNKWN | 0-50 |
| CAN_CIRC_7 | OK | UNKWN | 0-50 |
| CAN_CIRC_8 | OK | UNKWN | 0-50 |
| CAN_CIRC_9 | OK | UNKWN | 0-50 |

| CAN DIAG SUPPORT MONITOR | | | |
|--------------------------|-------|---|--------|
| CAN_COMM | OK | 0 | Delete |
| CAN_CIRC_1 | OK | 0 | |
| CAN_CIRC_2 | OK | 0 | |
| CAN_CIRC_3 | OK | 0 | |
| CAN_CIRC_4 | UNKWN | 1 | |
| CAN_CIRC_5 | UNKWN | 1 | |
| CAN_CIRC_6 | UNKWN | 1 | |
| CAN_CIRC_7 | OK | 0 | |
| CAN_CIRC_8 | OK | 0 | |
| CAN_CIRC_9 | OK | 0 | |

SKIA4288E

3. Record each item display description (OK/NG/UNKWN) displayed on the following CAN DIAG SUPPORT MONITOR Check Sheet.

CAN DIAG SUPPORT MONITOR Check Sheet

| Diagnosis item | Screen display | | Diagnosis item | Screen display | |
|----------------|----------------|-------|----------------|----------------|-------|
| CAN_COMM | OK | NG | CAN_CIRC_5 | OK | UNKWN |
| CAN_CIRC_1 | OK | UNKWN | CAN_CIRC_6 | OK | UNKWN |
| CAN_CIRC_2 | OK | UNKWN | CAN_CIRC_7 | OK | UNKWN |
| CAN_CIRC_3 | OK | UNKWN | CAN_CIRC_8 | OK | UNKWN |
| CAN_CIRC_4 | OK | UNKWN | CAN_CIRC_9 | OK | UNKWN |

>> After filling in CAN DIAG SUPPORT MONITOR Check Sheet, GO TO [LAN-40](#).

If NAVI Control Unit Detects That DVD-ROM Map Is Not Inserted

INFOID:000000003533741

1.CHECK DVD-ROM

Make sure identified DVD-ROM map is inserted.

OK or NG

- OK >> Replace NAVI control unit. Refer to [AV-145. "Removal and Installation"](#).
NG >> Insert identified DVD-ROM map.

If NAVI Control Unit Detects That Inserted DVD-ROM Map Is Malfunctioning or If It Is Impossible to Load Data from DVD-ROM Map

INFOID:000000003533742

1.CHECK 1: DVD-ROM

Remove inserted DVD-ROM map to check that it is identified.

OK or NG

- OK >> GO TO 2.
NG >> Replace identified DVD-ROM map.

NAVIGATION SYSTEM

< SERVICE INFORMATION >

2.CHECK 2: DVD-ROM

Check DVD-ROM for dirt, scratches and warpage.

OK or NG

- OK >> GO TO 3.
- NG >> Replace DVD-ROM map.

3.CHECK 3: DVD-ROM

Insert same DVD-ROM to make sure same diagnosis result is found as last self-diagnosis.

OK or NG

- OK >> Replace NAVI control unit. Refer to [AV-145. "Removal and Installation"](#).
- NG >> Replace DVD-ROM map.

If Connection Between NAVI Control Unit and GPS Antenna Is Malfunctioning

INFOID:0000000003533743

1.CHECK GPS ANTENNA

Check cable for GPS antenna for damage.

OK or NG

- OK >> GO TO 2.
- NG >> Replace GPS antenna. Refer to [AV-145. "Removal and Installation"](#).

2.CHECK BY REPLACEMENT OF GPS ANTENNA

Replace with other functional GPS antenna to try self-diagnosis again.

Result of self-diagnosis: Found same result?

- YES >> Replace NAVI control unit. Refer to [AV-145. "Removal and Installation"](#).
- NO >> Replace GPS antenna. Refer to [AV-145. "Removal and Installation"](#).

Operating Screen for Audio and A/C Is Not Displayed When Showing NAVI Screen

INFOID:0000000003533744

1.CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect display control unit connector M95 and display unit connector M93.
3. Check continuity between display control unit harness connector M95 terminal 49, 51, 53, 55 and display unit harness connector M93 terminal 21, 9, 20, 8.

Continuity should exist.


4. Check continuity between display control unit harness connector M95 terminal 49, 51, 53, 55 and ground.

Continuity should not exist.

OK or NG

- OK >> GO TO 2.
- NG >> Repair harness.

2.CHECK HORIZONTAL SYNCHRONIZATION SIGNAL

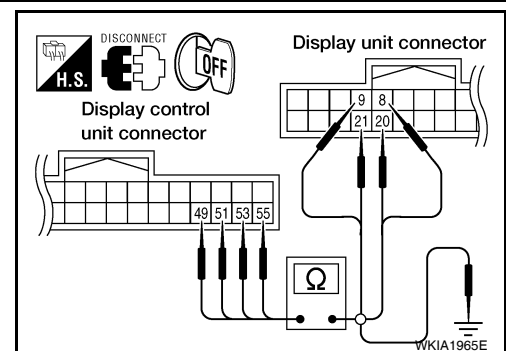

NAVIGATION SYSTEM


< SERVICE INFORMATION >

1. Connect display control unit connector and display unit connector.
2. Turn ignition switch ON.
3. Check signal between display control unit connector M95 terminals 55 and 49 with CONSULT-II or oscilloscope.

55 - 49 : Refer to [AV-91, "Terminal and Reference Value for Display Control unit"](#).

OK or NG

- OK >> GO TO 3.
 NG >> Replace display unit. Refer to [AV-145, "Removal and Installation"](#).

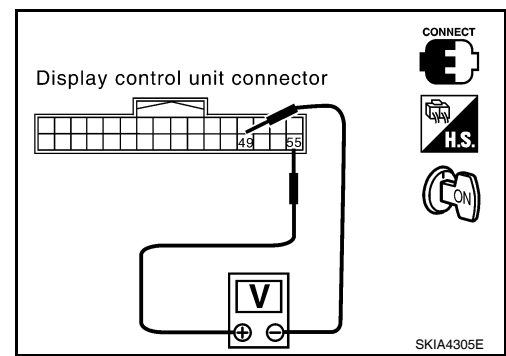


3.CHECK VERTICAL SYNCHRONIZATION SIGNAL

1. Turn ignition switch ON.
2. Check signal between display control unit connector M95 terminals 53 and 49 with CONSULT-II or oscilloscope.

53 - 49 : Refer to [AV-91, "Terminal and Reference Value for Display Control unit"](#).

OK or NG

- OK >> GO TO 4.
 NG >> Replace display unit. Refer to [AV-145, "Removal and Installation"](#).

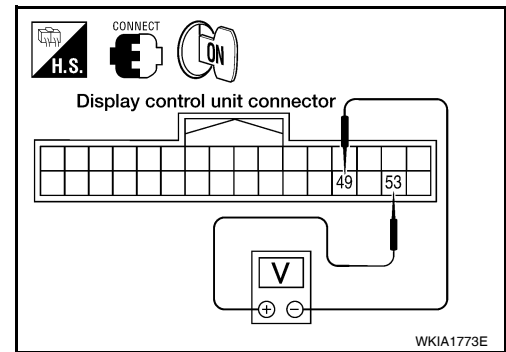


4.CHECK RGB AREA SIGNAL

1. Press the "TRIP" button.
2. Check signal between display control unit connector M95 terminals 51 and 49 with CONSULT-II or oscilloscope.

51 - 49 : Refer to [AV-91, "Terminal and Reference Value for Display Control unit"](#).

OK or NG

- OK >> Replace display unit. Refer to [AV-145, "Removal and Installation"](#).
 NG >> Replace display control unit. Refer to [AV-145, "Removal and Installation"](#).

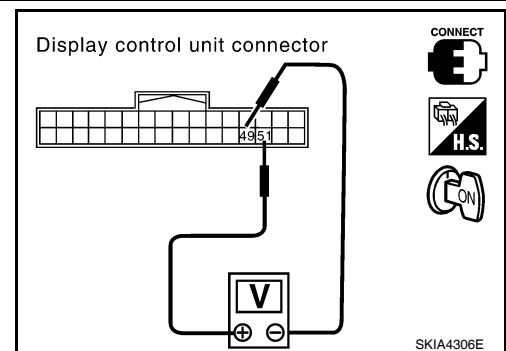

Color of RGB Image Is Not Proper (Only NAVI Screen Looks Bluish)


INFOID:000000003533745

1.CHECK RGB HARNESS

1. Turn ignition switch OFF.
2. Disconnect NAVI control unit connector B152 and display control unit connector M95.
3. Check continuity between NAVI control unit and display control unit.
4. Check continuity between NAVI control unit and ground.

• **When the screen looks bluish.**

| Terminals | | | | Continuity |
|-------------------------|----------|---------------------------|----------|------------|
| B | | A | | |
| Connector | Terminal | Connector | Terminal | |
| NAVI control unit: B152 | 44 | Display control unit: M95 | 44 | Yes |
| | 47 | | 45 | |

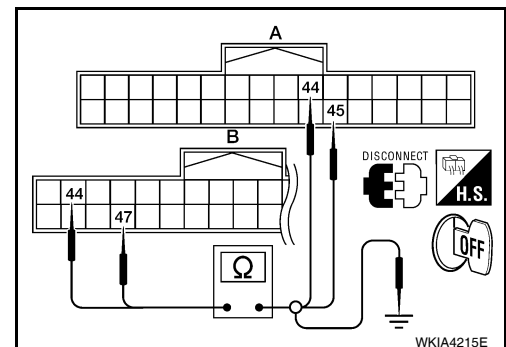

NAVIGATION SYSTEM

< SERVICE INFORMATION >

| Terminals | | | Continuity |
|----------------------------|----------|--------|------------|
| B | | — | |
| Connector | Terminal | | |
| NAVI control unit: B152 | 44 | Ground | No |
| | 47 | | |

OK or NG

OK >> GO TO 2.

NG >> Repair harness or connector.

2.CHECK RGB SIGNAL


1. Connect NAVI control unit connector and display control unit connector.
2. Turn ignition switch ON.
3. Display "Color bar" by "CONFIRMATION/ADJUSTMENT" mode.
4. Check signal between NAVI control unit connector B152 terminal 44 and 47 with CONSULT-II or oscilloscope.

• When the screen looks bluish.

Voltage signal between NAVI control unit connector B152 terminal 44 and 47.

44 - 47

: Refer to [AV-89, "Terminal and Reference Value for NAVI Control Unit"](#).

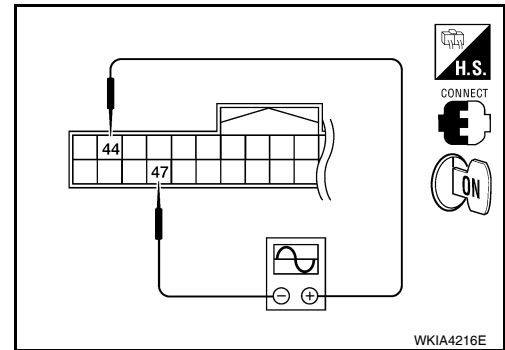

OK or NG

OK >> Replace display control unit. Refer to [AV-145, "Removal and Installation"](#).

NG >> Replace NAVI control unit. Refer to [AV-145, "Removal and Installation"](#).

Color of RGB Image Is Not Proper (Only NAVI Screen Looks Reddish)

INFOID:000000003533746


1.CHECK RGB HARNESS

1. Turn ignition switch OFF.
2. Disconnect NAVI control unit connector B152 and display control unit connector M95.
3. Check continuity between NAVI control unit and display control unit.
4. Check continuity between NAVI control unit and ground.

• When the screen looks reddish.

| Terminals | | | | Continuity |
|-------------------------|----------|---------------------------|----------|------------|
| B | | A | | |
| Connector | Terminal | Connector | Terminal | |
| NAVI control unit: B152 | 45 | Display control unit: M95 | 46 | Yes |
| | 47 | | 45 | |

| Terminals | | | Continuity |
|----------------------------|----------|--------|------------|
| B | | — | |
| Connector | Terminal | | |
| NAVI control unit: B152 | 45 | Ground | No |
| | 47 | | |

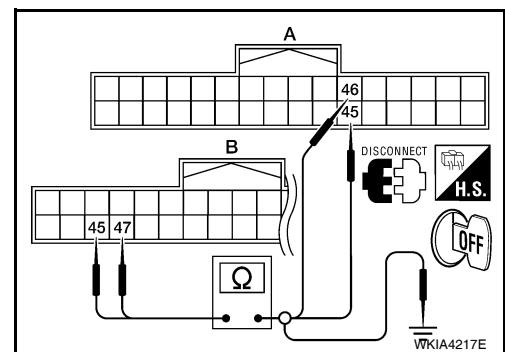

OK or NG

OK >> GO TO 2.


NG >> Repair harness or connector.

2.CHECK RGB SIGNAL

NAVIGATION SYSTEM

< SERVICE INFORMATION >

1. Connect NAVI control unit connector and display control unit connector.
 2. Turn ignition switch ON.
 3. Display "Color bar" by "CONFIRMATION/ADJUSTMENT" mode.
 4. Check signal between NAVI control unit connector B152 terminal 45 and 47 with CONSULT-II or oscilloscope.
- **When the screen looks reddish.**
Voltage signal between NAVI control unit connector B152 terminal 45 and 47.

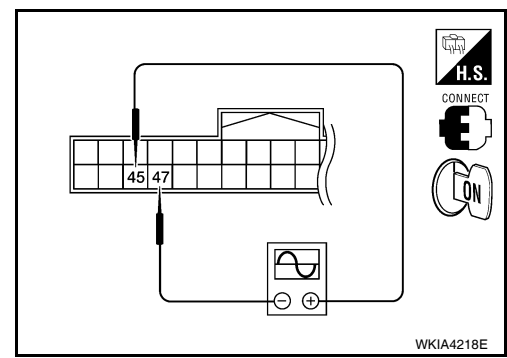

45 - 47

: Refer to [AV-89, "Terminal and Reference Value for NAVI Control Unit"](#).

OK or NG

- OK >> Replace display control unit. Refer to [AV-145, "Removal and Installation"](#).
NG >> Replace NAVI control unit. Refer to [AV-145, "Removal and Installation"](#).

Color of RGB Image Is Not Proper (Only NAVI Screen Looks Yellowish)

INFOID:00000000353747


1.CHECK RGB HARNESS

1. Turn ignition switch OFF.
2. Disconnect NAVI control unit connector B152 and display control unit connector M95.
3. Check continuity between NAVI control unit and display control unit.
4. Check continuity between NAVI control unit and ground.

• When the screen looks yellowish.

| Terminals | | | | Continuity |
|-------------------------|----------|---------------------------|----------|------------|
| B | | A | | |
| Connector | Terminal | Connector | Terminal | |
| NAVI control unit: B152 | 46 | Display control unit: M95 | 48 | Yes |
| | 47 | | 45 | |

| Terminals | | | | Continuity |
|-------------------------|----------|--------|----|------------|
| B | | — | | |
| Connector | Terminal | | | |
| NAVI control unit: B152 | 46 | Ground | No | |
| | 47 | | | |

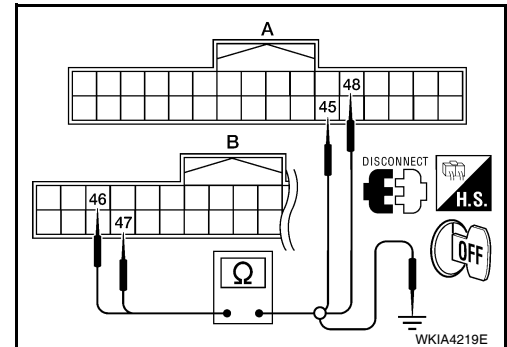

OK or NG

- OK >> GO TO 2.
NG >> Repair harness or connector.

2.CHECK RGB SIGNAL


NAVIGATION SYSTEM

< SERVICE INFORMATION >

1. Connect NAVI control unit connector and display control unit connector.
 2. Turn ignition switch ON.
 3. Display "Color bar" by "CONFIRMATION/ADJUSTMENT" mode.
 4. Check signal between NAVI control unit connector B152 terminal 46 and 47 with CONSULT-II or oscilloscope.
- **When the screen looks yellowish.**
Voltage signal between NAVI control unit connector B152 terminal 46 and 47.

46 - 47

: Refer to [AV-89, "Terminal and Reference Value for NAVI Control Unit"](#).

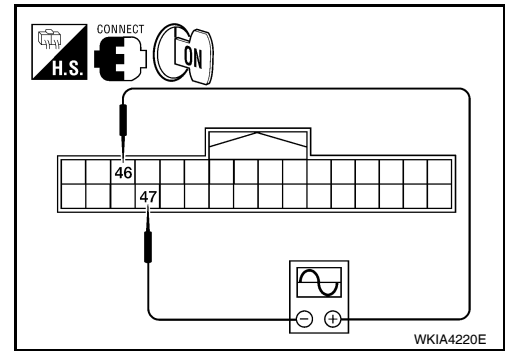

OK or NG

- OK >> Replace display control unit. Refer to [AV-145, "Removal and Installation"](#).
NG >> Replace NAVI control unit. Refer to [AV-145, "Removal and Installation"](#).

Color of RGB Image Is Not Proper (All Screens Look Bluish)


INFOID:00000000353748

1. CHECK RGB HARNESS

1. Turn ignition switch OFF.
 2. Disconnect display control unit connector M95 and display unit connector M93.
 3. Check continuity between display control unit and display unit.
 4. Check continuity between display control unit and ground.
- **When the screen looks bluish.**

| Terminals | | | | Continuity |
|----------------------|----------|--------------|----------|------------|
| Display control unit | | Display unit | | |
| Connector | Terminal | Connector | Terminal | |
| M95 | 50 | M93 | 17 | Yes |
| | 47 | | 7 | |

| Terminals | | | | Continuity |
|----------------------|----------|--------|--|------------|
| Display control unit | | — | | |
| Connector | Terminal | | | |
| M95 | 50 | Ground | | No |
| | 47 | | | |

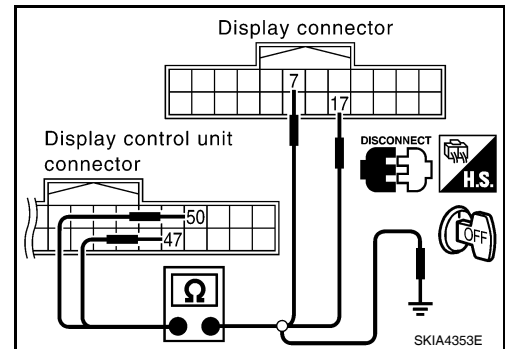

OK or NG


- OK >> GO TO 2.
NG >> Repair harness or connector.

2. CHECK RGB SIGNAL

1. Connect display control unit connector M95 and display unit connector M93.
 2. Turn ignition switch ON.
 3. Display "Color bar" by "CONFIRMATION/ADJUSTMENT" mode.
 4. Check the following with CONSULT-II or oscilloscope.
- **When the screen looks bluish.**
Voltage signal between display control unit connector M95 terminal 50 and 47.

50 - 47

: Refer to [AV-91, "Terminal and Reference Value for Display Control unit"](#).

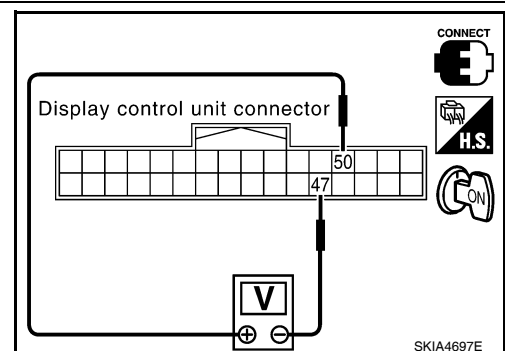

NAVIGATION SYSTEM

< SERVICE INFORMATION >

OK or NG

- OK >> Replace display unit. Refer to [AV-145, "Removal and Installation"](#).
NG >> Replace display control unit. Refer to [AV-145, "Removal and Installation"](#).

Color of RGB Image Is Not Proper (All Screens Look Reddish)


INFOID:000000003533749

1.CHECK RGB HARNESS

1. Turn ignition switch OFF.
 2. Disconnect display control unit connector M95 and display unit connector M93.
 3. Check continuity between display control unit and display unit.
 4. Check continuity between display control unit and ground.
- **When the screen looks reddish.**

| Terminals | | | | Continuity |
|----------------------|----------|--------------|----------|------------|
| Display control unit | | Display unit | | |
| Connector | Terminal | Connector | Terminal | |
| M95 | 52 | M93 | 6 | Yes |
| | 47 | | 7 | |

| Terminals | | | | Continuity |
|----------------------|----------|--------|--|------------|
| Display control unit | | — | | |
| Connector | Terminal | | | |
| M95 | 52 | Ground | | No |
| | 47 | | | |

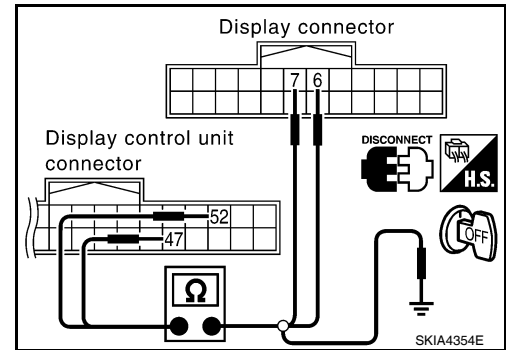

OK or NG


- OK >> GO TO 2.
NG >> Repair harness or connector.

2.CHECK RGB SIGNAL

1. Connect display control unit connector M95 and display unit connector M93.
 2. Turn ignition switch ON.
 3. Display "Color bar" by "CONFIRMATION/ADJUSTMENT" mode.
 4. Check the following with CONSULT-II or oscilloscope.
- **When the screen looks reddish.**
Voltage signal between display control unit connector M95 terminal 52 and 47.

52 - 47

: Refer to [AV-91, "Terminal and Reference Value for Display Control unit"](#).

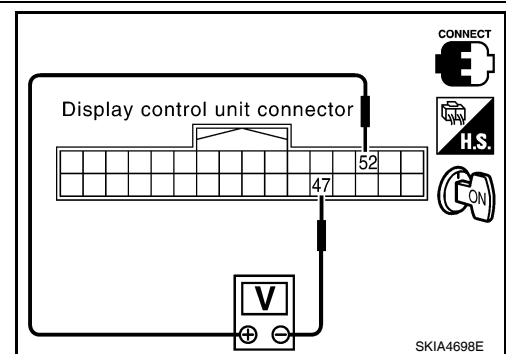

OK or NG

- OK >> Replace display unit. Refer to [AV-145, "Removal and Installation"](#).
NG >> Replace display control unit. Refer to [AV-145, "Removal and Installation"](#).

Color of RGB Image Is Not Proper (All Screens Look Yellowish)

INFOID:000000003533750

1.CHECK RGB HARNESS

1. Turn ignition switch OFF.
2. Disconnect display control unit connector M95 and display unit connector M93.
3. Check continuity between display control unit and display unit.
4. Check continuity between display control unit and ground.


- **When the screen looks yellowish.**

NAVIGATION SYSTEM

< SERVICE INFORMATION >

| Terminals | | | | Continuity |
|----------------------|----------|--------------|----------|------------|
| Display control unit | | Display unit | | |
| Connector | Terminal | Connector | Terminal | |
| M95 | 54 | M93 | 18 | Yes |
| | 47 | | 7 | |

| Terminals | | | | Continuity |
|----------------------|----------|--------|--|------------|
| Display control unit | | — | | |
| Connector | Terminal | | | |
| M95 | 54 | Ground | | No |
| | 47 | | | |

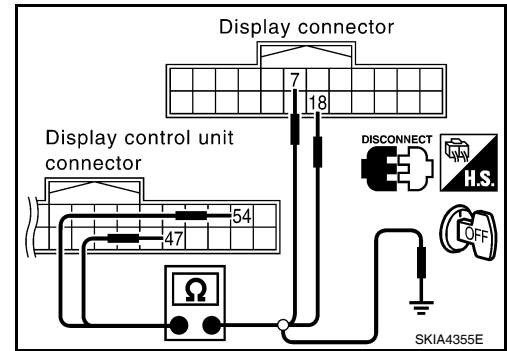

OK or NG

OK >> GO TO 2.

NG >> Repair harness or connector.

2. CHECK RGB SIGNAL


1. Connect display control unit connector M95 and display unit connector M93.
2. Turn ignition switch ON.
3. Display "Color bar" by "CONFIRMATION/ADJUSTMENT" mode.
4. Check the following with CONSULT-II or oscilloscope.

• When the screen looks yellowish.

Voltage signal between display control unit connector M95 terminal 54 and 47.

54 - 47

: Refer to [AV-91, "Terminal and Reference Value for Display Control unit"](#).

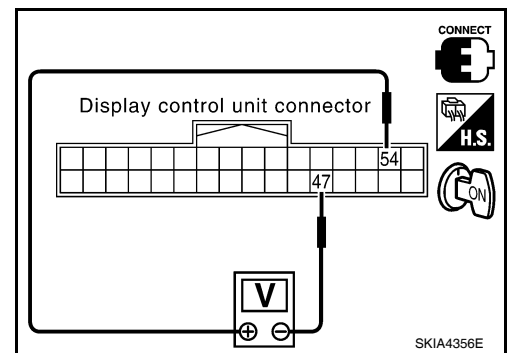

OK or NG

OK >> Replace display unit. Refer to [AV-145, "Removal and Installation"](#).

NG >> Replace display control unit. Refer to [AV-145, "Removal and Installation"](#).

NAVI Screen Is Rolling

INFOID:00000000353751


1. CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect NAVI control unit connector B152 and display control unit connector M95.
3. Check continuity between NAVI control unit and display control unit.

| Terminals | | | | Continuity |
|-------------------------|----------|---------------------------|----------|------------|
| B | | A | | |
| Connector | Terminal | Connector | Terminal | |
| NAVI control unit: B152 | 48 | Display control unit: M95 | 43 | Yes |
| | 49 | | 41 | |

4. Check continuity between NAVI control unit and ground.

| Terminals | | | Continuity |
|----------------------------|----------|--------|------------|
| B | | — | |
| Connector | Terminal | | |
| NAVI control unit: B152 | 48 | Ground | No |
| | 49 | | |

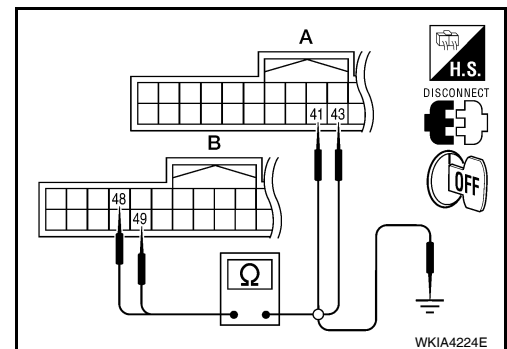

NAVIGATION SYSTEM

< SERVICE INFORMATION >

OK or NG


- OK >> GO TO 2.
- NG >> Repair harness.

2.CHECK RGB SYNCHRONIZING SIGNAL

1. Connect NAVI control unit connector and display control unit connector.
2. Turn ignition switch ON.
3. Check signal between NAVI control unit connector M95 terminals 48 and 49 with CONSULT-II or oscilloscope.

48 - 49

: Refer to [AV-89, "Terminal and Reference Value for NAVI Control Unit"](#).

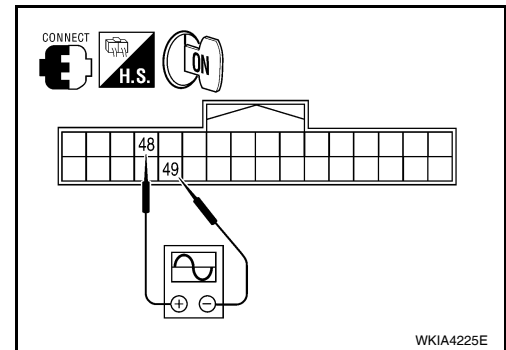

OK or NG

- OK >> GO TO 3.
- NG >> Replace NAVI control unit. Refer to [AV-145, "Removal and Installation"](#).


3.CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect display control unit connector M95 and display unit connector M93.
3. Check continuity between display control unit and display unit.

| Terminals | | | | Continuity |
|----------------------|----------|--------------|----------|------------|
| Display control unit | | Display unit | | |
| Connector | Terminal | Connector | Terminal | |
| M95 | 56 | M93 | 19 | Yes |
| | 49 | | 21 | |

4. Check continuity between display control unit and ground.

| Terminals | | | Continuity |
|----------------------|----------|--------|------------|
| Display control unit | | — | |
| Connector | Terminal | | |
| M95 | 56 | Ground | No |
| | 49 | | |

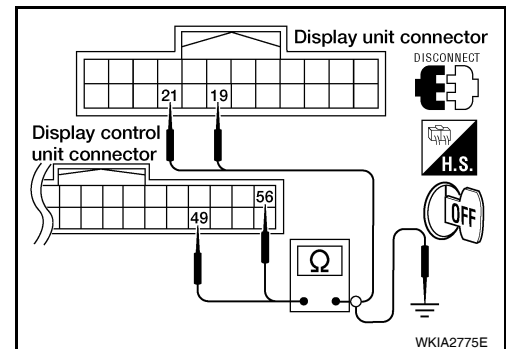

OK or NG


- OK >> GO TO 4.
- NG >> Repair harness.

4.CHECK RGB SYNCHRONIZING SIGNAL

1. Connect display control unit connector and display unit connector.
2. Turn ignition switch ON.
3. Check signal between display unit connector M93 terminals 19 and 21 with CONSULT-II or oscilloscope.

19 - 21

: Refer to [AV-91, "Terminal and Reference Value for Display Control unit"](#).

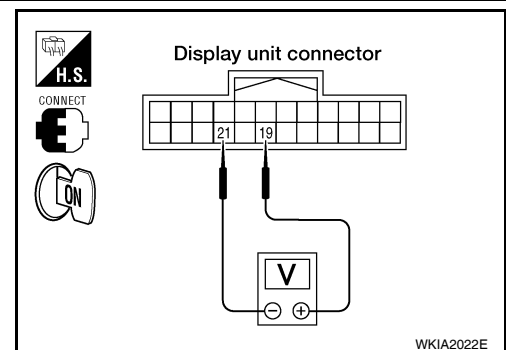

OK or NG

- OK >> Replace display unit. Refer to [AV-145, "Removal and Installation"](#).
- NG >> Replace display control unit. Refer to .

NAVIGATION SYSTEM

< SERVICE INFORMATION >

Guide Sound Is Not Heard

INFOID:000000003533752

1.CHECK VOICE GUIDE SETTING

While driving in the dark pink route, voice guide does not operate. (note)

NOTE:

Voice guide is only available at intersections that satisfy certain conditions (indicated by I on the map). Therefore, guidance may not be given even when the route on the map changes direction.

Is volume setting switched OFF?

- YES >> Switch the setting ON and turn the volume up.
NO >> GO TO 2.


2.CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect NAVI control unit connector B151 and audio unit connector M45.
3. Check continuity between NAVI control unit and audio unit.

| Terminals | | | | Continuity |
|-------------------------|----------|-----------------|----------|------------|
| B | | A | | |
| Connector | Terminal | Connector | Terminal | |
| NAVI control unit: B151 | 12 | Audio unit: M45 | 71 | Yes |
| | 14 | | 69 | |

4. Check continuity between NAVI control unit and ground.

| Terminals | | | Continuity |
|----------------------------|-----------------------|--------|------------|
| B | | — | |
| Connector | Terminal (Wire color) | | |
| NAVI control unit: B151 | 12 | Ground | No |
| | 14 | | |

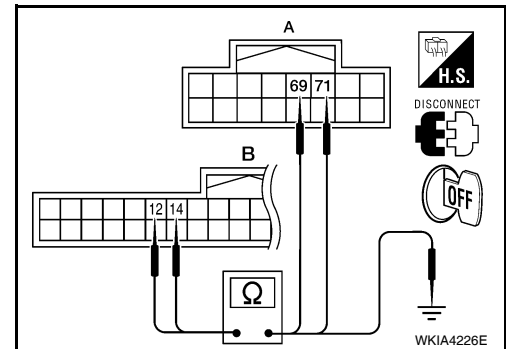

Ok or NG

- OK >> GO TO 3.
NG >> Repair harness.

3.CHECK VOICE GUIDE


1. Connect NAVI control unit connector and audio unit connector.
2. Turn ignition switch ON.
3. Check signal between NAVI control unit harness connector B151 terminal 12 and 14 with CONSULT-II or oscilloscope.

12 - 14

: Refer to [AV-89, "Terminal and Reference Value for NAVI Control Unit"](#).

OK or NG

- OK >> Replace audio unit. Refer to [AV-46, "Removal and Installation"](#).
NG >> Replace NAVI control unit. Refer to [AV-145, "Removal and Installation"](#).

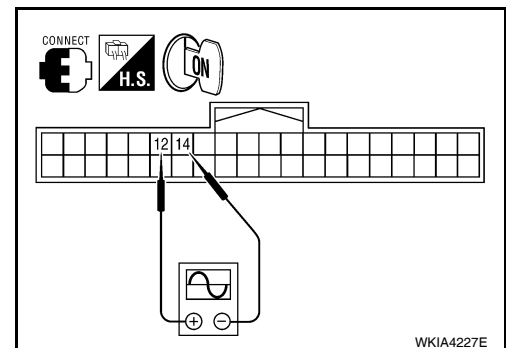

Screen Is Not Shown

INFOID:000000003533753

1.POWER SUPPLY AND GROUND CIRCUIT CHECK

Check power supply and ground circuit for display unit. Refer to [AV-112, "Power Supply and Ground Circuit Inspection for Display Unit"](#).

OK or NG

- OK >> Replace display unit. Refer to [AV-145, "Removal and Installation"](#).
NG >> Check the malfunctioning parts.

NAVIGATION SYSTEM

< SERVICE INFORMATION >

A/C Screen Is Not Shown (NAVI Screen Is Shown)

INFOID:000000003533754

1.CHECK IGNITION SIGNAL

Check ignition signal. Refer to [AV-117, "Ignition Signal Inspection for Display Control Unit"](#).

OK or NG

OK >> GO TO 2.

NG >> Check the malfunctioning parts.

2.CHECK CAN COMMUNICATION LINE

Check CAN communication line. Refer to [AV-123, "CAN Communication Line Check"](#).

OK or NG

OK >> Replace display control unit. Refer to [AV-145, "Removal and Installation"](#).

NG >> After filling out CAN DIAG SUPPORT MONITOR check sheet, GO TO [LAN-40](#).

FUEL ECONOMY Screen Is Not Shown

INFOID:000000003533755

1. CHECK IGNITION SIGNAL

Check ignition signal. Refer to [AV-116, "Illumination Signal Inspection for Display Control Unit"](#).

OK or NG

OK >> GO TO 2.

NG >> Check the malfunctioning parts.

2.CHECK CAN COMMUNICATION LINE

Check CAN communication line. Refer to [AV-123, "CAN Communication Line Check"](#).

OK or NG

OK >> Replace display control unit. Refer to [AV-145, "Removal and Installation"](#).

NG >> After filling out CAN DIAG SUPPORT MONITOR check sheet, GO TO [LAN-40](#).

Average Fuel Economy Display Is Not Shown (" *** " Is Shown)

INFOID:000000003533756

1.CHECK VEHICLE SPEED SIGNAL

Check vehicle speed signal. Refer to [AV-115, "Vehicle Speed Signal Inspection for Display Control Unit"](#).

OK or NG

OK >> GO TO 2.

NG >> Check the malfunctioning parts.

2.CHECK CAN COMMUNICATION LINE

Check CAN communication line. Refer to [AV-123, "CAN Communication Line Check"](#).

OK or NG

OK >> Replace display control unit. Refer to [AV-145, "Removal and Installation"](#).

NG >> After filling out CAN DIAG SUPPORT MONITOR check sheet, GO TO [LAN-40](#).

Distance to Empty Display Is Not Shown (" *** " Is Shown)

INFOID:000000003533757

1.CHECK SPEEDOMETER

Confirm that speedometer is functioning.

Is speedometer functioning?

YES >> GO TO 2.

NO >> Refer to [DI-17, "Vehicle Speed Signal Inspection"](#).

2.CHECK FUEL GAUGE

Confirm that fuel gauge is functioning.

Is fuel gauge functioning?

YES >> GO TO 3.

NO >> Refer to [DI-18, "Fuel Level Sensor Unit Inspection"](#).

NAVIGATION SYSTEM

< SERVICE INFORMATION >

3.CHECK CAN COMMUNICATION LINE

Check CAN communication line. Refer to [AV-123. "CAN Communication Line Check"](#).

OK or NG

- OK >> Replace display control unit. Refer to [AV-145. "Removal and Installation"](#).
- NG >> After filling out CAN DIAG SUPPORT MONITOR check sheet, GO TO [LAN-40](#).

Driving Distance or Average Speed Display Is Not Shown (" *** " Is Shown)

INFOID:000000003533758

1. CHECK IGNITION SIGNAL

Check ignition signal. Refer to [AV-117. "Ignition Signal Inspection for Display Control Unit"](#).

OK or NG

- OK >> GO TO 2.
- NG >> After filling out CAN DIAG SUPPORT MONITOR check sheet, GO TO [LAN-40](#).

2.CHECK VEHICLE SPEED SIGNAL

Check vehicle speed signal. Refer to [AV-115. "Vehicle Speed Signal Inspection for Display Control Unit"](#).

OK or NG

- OK >> Replace display control unit. Refer to [AV-145. "Removal and Installation"](#).
- NG >> Check the malfunctioning parts.

WARNING DOOR OPEN Screen Is Not Shown

INFOID:000000003533759

1. CHECK IGNITION SIGNAL

Check ignition signal. Refer to [AV-117. "Ignition Signal Inspection for Display Control Unit"](#).

OK or NG

- OK >> GO TO 2.
- NG >> Check the malfunctioning parts.

2.CHECK VEHICLE SPEED SIGNAL

Check vehicle speed signal. Refer to [AV-115. "Vehicle Speed Signal Inspection for Display Control Unit"](#).

OK or NG

- OK >> GO TO 3.
- NG >> Check the malfunctioning parts.

3.CHECK CAN COMMUNICATION LINE

Check CAN communication line. Refer to [AV-123. "CAN Communication Line Check"](#).

OK or NG

- OK >> Replace display control unit. Refer to [AV-145. "Removal and Installation"](#).
- NG >> After filling out CAN DIAG SUPPORT MONITOR check sheet, GO TO [LAN-40](#).

Unable to Operate All of AV Switches (Unable to Start Self-Diagnosis)

INFOID:000000003533760

1.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check power supply and ground circuit for AV switch. Refer to [AV-113. "Power Supply and Ground Circuit Inspection for AV Switch"](#).

OK or NG

- OK >> GO TO 2.
- NG >> Check the malfunctioning parts.

2.AV SWITCH SELF-DIAGNOSIS

AV switch self-diagnosis. Refer to [AV-110. "AV Switch Self-Diagnosis Function"](#).

OK or NG

- OK >> GO TO 3.
- NG >> Check the malfunctioning parts.

NAVIGATION SYSTEM

< SERVICE INFORMATION >

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check power supply and ground circuit for display control unit. Refer to [AV-111. "Power Supply and Ground Circuit Inspection for Display Control Unit"](#).

OK or NG

- OK >> GO TO 4.
- NG >> Check the malfunctioning parts.

4.CHECK COMMUNICATION LINE

Check communication line. Refer to [AV-122. "AV Communication Line Check \(Between Display Control Unit and AV Switch\)"](#).

OK or NG

- OK >> Replace AV switch. Refer to [AV-145. "Removal and Installation"](#).
- NG >> Replace display control unit. Refer to [AV-145. "Removal and Installation"](#).

Audio Does Not Work

INFOID:000000003533761

Refer to [AV-29. "Trouble Diagnosis"](#).

Navigation System Does Not Activate

INFOID:000000003533762

1.POWER SUPPLY AND GROUND CIRCUIT CHECK

Check power supply and ground circuit for NAVI control unit. Refer to [AV-110. "Power Supply and Ground Circuit Inspection for NAVI Control Unit"](#).

OK or NG

- OK >> Replace NAVI control unit. Refer to [AV-145. "Removal and Installation"](#).
- NG >> Check the malfunctioning parts.

Previous NAVI Conditions Are Not Stored

INFOID:000000003533763

1.CHECK BATTERY POWER

Check NAVI control unit battery power.

Refer to [AV-110. "Power Supply and Ground Circuit Inspection for NAVI Control Unit"](#).

OK or NG

- OK >> Replace NAVI control unit. Refer to [AV-145. "Removal and Installation"](#).
- NG >> Check NAVI control unit battery power system harness.

Previous Vehicle Conditions Are Not Stored

INFOID:000000003533764

1.CHECK BATTERY POWER

Check display control unit battery power.

Refer to [AV-111. "Power Supply and Ground Circuit Inspection for Display Control Unit"](#).

OK or NG

- OK >> Replace display control unit. Refer to [AV-145. "Removal and Installation"](#).
- NG >> Check display control unit battery power system harness.

Position of Current Location Mark Is Not Correct

INFOID:000000003533765

1.SELF-DIAGNOSIS

Perform "Self-diagnosis mode" of the self-diagnosis function. Refer to [AV-101. "Self-Diagnosis Mode \(NAVI\)"](#).

OK or NG

- OK >> GO TO 2.
- NG >> Check the malfunctioning parts.

2.ERROR HISTORY DIAGNOSIS

Was any error stored in [AV-103. "Confirmation/Adjustment Mode"](#) of the "CONFIRMATION/ADJUSTMENT" mode?

NAVIGATION SYSTEM

< SERVICE INFORMATION >

YES or NO

- YES >> [AV-103, "Confirmation/Adjustment Mode"](#).
NO >> [AV-136, "Driving Test"](#).

Radio Wave from GPS Satellite Is Not Received

INFOID:000000003533766

1.CHECK ENVIRONMENT

Check if any metal object that intercepts radio waves or an object that emits radio waves (such as a portable phone) is located near the GPS antenna. Check if the vehicle is shielded by a building.

OK or NG

- OK >> System is not malfunctioning. The GPS antenna may not be able to receive radio waves from the GPS satellite if it is shielded by metal object or an object emitting radio waves is placed near it.
NG >> GO TO 2.

2.SELF-DIAGNOSIS

Perform "Self-diagnosis mode" of the self-diagnosis function. Refer to [AV-101, "Self-Diagnosis Mode \(NAVI\)"](#).

OK or NG

- OK >> Replace GPS antenna. Refer to [AV-145, "Removal and Installation"](#).
NG >> Check the malfunctioning parts.

Driving Test

INFOID:000000003533767

1.DRIVING TEST 1

1. Scroll the map screen to display the area to make correction. Press "ENTER" and select "CURRENT LOCATION CORRECTION".
2. Correct direction of the vehicle mark.
3. Perform the distance correction of the "CONFIRMATION/ADJUSTMENT" mode.
Note: Normally, adjustment is not necessary because this system has automatic distance correction function. However, when a tire chain is fitted, adjustment in accordance with the tire diameter ratio must be made.
4. Are symptoms malfunctioning to the [AV-137, "Example of Symptom Judged Not Malfunction"](#) after driving the vehicle?

YES or NO

- YES >> Limit of the location detection capacity of the navigation system.
NO >> GO TO 2.

2.DRIVING TEST 2

- Did any malfunction occur when the proper test in the following test patterns is performed?
- Test pattern
Driving test finds the difference between the symptoms monitored with and without each sensor.
- Test pattern 1: Test method with no GPS location correction
Disconnect GPS antenna connector connected to the NAVI control unit. Accurately adjust the current location and the direction, then drive the vehicle.
- Test pattern 2: Test method with no map-matching
Accurately adjust the current location and the direction. Eject the map DVD-ROM from the NAVI control unit with ignition switch turned to OFF, then drive the vehicle. After driving, insert the map DVD-ROM back in the unit, display the track of the vehicle on the map screen and compare it with the actual road configuration.
- Sample tests
- <To determine if the current-location mark skips at the same position, if so, whether it is caused by map-matching or by GPS>
Perform test pattern 1.
- <To determine if the pattern of streets displayed is correct or not>
Perform test pattern 1 & 2.
Compare the track of the vehicle on the map screen and the actual road configuration. For fairly accurate tracking, plotting shall be made every several hundred meters (feet).
- <When the distance is adjusted accurately>
Perform test pattern 1 & 2.
Drive on a road of which distance is accurately known (by utilizing distance posts on a highway). Calculate the rate of change (increased/decreased) of the distance by comparing with the actual distance.

NAVIGATION SYSTEM

< SERVICE INFORMATION >

Correction = A/B

A: Distance shown on the screen

B: Actual distance

YES or NO

- YES >> • If adjustment is insufficient, perform adjustment again.
 • If any error is found in the map, please contact map data supplier. Refer to Navigation System Owner's Manual for contact information.
 • Replace NAVI control unit. Refer to [AV-145, "Removal and Installation"](#).

NO >> Limit of the location detection capacity of the navigation system.

Example of Symptom Judged Not Malfunction

INFOID:000000003533768

BASIC OPERATION

| Symptom | Cause | Remedy |
|------------------------------------------------------------------------|------------------------------------------------------------------------------------|-------------------------------------------------------------------------------|
| No image is shown. | Display brightness adjustment is set fully to DARK side. | Adjust the display brightness. |
| No guide sound is heard. Audio guide volume is too low or too high. | Volume control is set to OFF, MIN or MAX. | Adjust the audio guide volume. |
| | Audio guidance is not available while the vehicle is driving on a dark pink route. | System is not malfunctioning. |
| Screen is too dark. Motion of the image is too slow. | Temperature inside the vehicle is low. | Wait until the temperature inside the vehicle reaches the proper temperature. |
| Small black or bright spots appear on the screen. | Symptom peculiar to a liquid crystal display (display unit). | System is not malfunctioning. |

VEHICLE MARK

| Symptom | Cause | Remedy |
|----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------|
| Map screen and BIRDVIEW™ Name of the place varies with the screen. | Some thinning of the character data is done to prevent the display becoming to complex. In some cases and in some locations, the display contents may differ. The same place name, street name, etc. may not be displayed every time on account of the data processing. | System is not malfunctioning. |
| Vehicle mark is not positioned correctly. | Vehicle is transferred by ferry or by towing after its ignition switch is turned to OFF. | Drive the vehicle for a while in the GPS satellite signal receiving condition. |
| Screen will not switch to nighttime mode after the lighting switch is turned ON. | The daytime screen is selected by the "SWITCH SCREENS" when the last time the screen dimming setting is done. Switching between daytime/nighttime screen may be inhibited by the automatic illumination adjustment function. | Perform screen dimming and select the nighttime screen by "SWITCH SCREENS". |
| Map screen will not scroll in accordance with the vehicle travel. | Current location is not displayed. | Press "MAP" button to display the current location. |
| Vehicle mark will not be shown. | Current location is not displayed. | Press "MAP" button to display the current location. |
| Accuracy indicator (GPS satellite mark) on the map screen stays gray. | GPS satellite signal is intercepted because the vehicle is in or behind a building. | Move the vehicle out to an open space. |
| | GPS satellite signal cannot be received because an obstacle is placed on top of the instrument panel. | Do not place anything in the center on top of the display. |
| | GPS satellites are not visible from current location. | Wait until GPS satellites are visible by moving the vehicle. |

NAVIGATION SYSTEM

< SERVICE INFORMATION >

| Symptom | Cause | Remedy |
|-----------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Vehicle location accuracy is low. | Accuracy indicator (GPS satellite mark) on the map screen stays gray. | Current location is not determined. |
| | Vehicle speed setting by the vehicle speed pulse has been deviated (advanced or retarded) from the actual vehicle speed because tire chain is fitted or the system has been used on another vehicle. | Drive the vehicle for a while [for approx. 30 minutes at approx. 30 km/h (19 MPH)] and the deviation will be automatically adjusted. If advancement or retard still occur, perform the distance adjustment by CONFIRMATION/ADJUSTMENT mode of diagnosis function. |
| | Map data has error or omission. (Vehicle mark is always deviated to the same position.) | As a rule, an updated map DVD-ROM will be released once a year. |

DESTINATION, PASSING POINTS, AND MENU ITEMS CANNOT BE SELECTED/SET

| Symptom | Cause | Remedy |
|-----------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| Destination cannot be set. | Destination to be set is on an expressway. | Set the destination on an ordinary road. |
| Passing point is not searched when re-searching the route. | The vehicle has already passed the passing point, or the system judged so. | To include the passing points that have been passed into the route again, set the route again. |
| Route information will not be displayed. | Route searching has not been done. | Set the destination and perform route searching. |
| | Vehicle mark is not on the recommended route. | Drive on the recommended route. |
| | Route guide is turned OFF. | Turn route guide ON. |
| | Route information is not available on the dark green route. | System is not malfunctioning. |
| After the route searching, no guide sign will appear as the vehicle goes near the entrance/exit to the toll road. | Vehicle mark is not on the recommended route. (On the display, only guide signs related to the recommended route will be shown.) | Drive on the recommended route. |
| Automatic route searching is not possible. | Vehicle is driving on a highway (gray route), or no recommended route is available. | Drive on a road to be searched. Or re-search the route manually. In this case, however, the whole route will be searched. |
| Performed automatic detour search (or detour search). However, the result is the same as that of the previous search. | Performed search with every condition considered. However, the result is the same as that of the previous search. | System is not malfunctioning. |
| Passing points cannot be set. | More than five passing points were set. | Passing points can be set up to five. To stop at more than five points, perform sharing in several steps. |
| When setting the route, the starting point cannot be selected. | The current vehicle location is always set as the starting point of a route. | System is not malfunctioning. |
| Some menu items cannot be selected. | The vehicle is being driven. | Stop the vehicle at a safe place and then operate the system. |

VOICE GUIDE

NAVIGATION SYSTEM

< SERVICE INFORMATION >

| Symptom | Cause | Remedy |
|-----------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------|
| Voice guide will not operate. | Note: Voice guide is only available at intersections that satisfy certain conditions (indicated by I on the map). Therefore, guidance may not be given even when the route on the map changes direction. | System is not malfunctioning. |
| | The vehicle is not on the recommended route. | Return to the recommended route or re-search the route. |
| | Voice guide is turned OFF. | Turn voice guide ON. |
| | Route guide is turned OFF. | Turn route guide ON. |
| Voice guide does not match the actual road pattern. | Voice guide may vary with the direction to which the vehicle is turned and the connection of the road to other roads. | Drive in conformity to the actual traffic rules. |

ROUTE SEARCH

| Symptom | Cause | Remedy |
|------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No route is shown. | No road to be searched is found around the destination. | Find wider road (orange road or wider) nearby and reset the destination and passing points onto it. Take care of the traveling direction when there are separate up and down roads. |
| | Starting point and the destination are too close. | Set the destination at more distant point. |
| | Conditional traffic regulation (day of the week/ time of the day) is set at the area around the current location or the destination. | Turn the time-regulating search conditions OFF. Turn "Avoid regulation time" in the search conditions OFF. |
| Indicated route is intermittent. | In some areas, highways (gray routes) are not used for the search ^(Note) . Therefore, the route to the current location or the passing points may be intermittent. | System is not malfunctioning. |
| When the vehicle has passed the recommended route, it is deleted from the screen. | A recommended route is controlled by each section. When the vehicle has passed the passing point 1, then the map data from the starting point up to the passing point 1 will be deleted. (The data may remain undeleted in some areas.) | System is not malfunctioning. |
| Detouring route is recommended. | In some areas, highways (gray routes) are not used for the search. (Note). Therefore, detour route may be recommended. | Set the route closer to the basic route (gray route). |
| | A detour route may be shown when some traffic regulation (one-way traffic, etc.) is set at the area around the starting point or the destination. | Slightly move the starting point or the destination, or set the passing point on the route of your choice. |
| | In the area where highways (gray routes) are used for the search, left turn has priority around the current location and the destination (passing points). For this reason, the recommended route may be detouring. | System is not malfunctioning. |
| Landmarks on the map do not match the actual ones. | This can be happen due to omission or error in the map data. | As a rule, an updated map DVD-ROM will be released once a year. Wait until the latest map has become available. |
| Recommended route is far from the starting point, passing points, and destination. | Starting point, passing points, and destination of the route guide were set far from the desired points because route searching data around these area were not stored. | Reset the destination onto the road nearby. If this road is one of the highways (gray routes), an ordinary road nearby may be displayed as the recommended route. |

NOTE:


Except for the ordinance-designated cities. (Malfunctioning areas may be changed in the updated map disc.)

EXAMPLES OF CURRENT-LOCATION MARK DISPLACEMENT

NAVIGATION SYSTEM






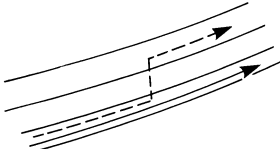
< SERVICE INFORMATION >

Vehicle's travel amount is calculated by reading its travel distance and turning angle. Therefore, if the vehicle is driven in the following manner, an error will occur in the vehicle's current location display. If correct location has not been restored after driving the vehicle for a while, perform location correction.

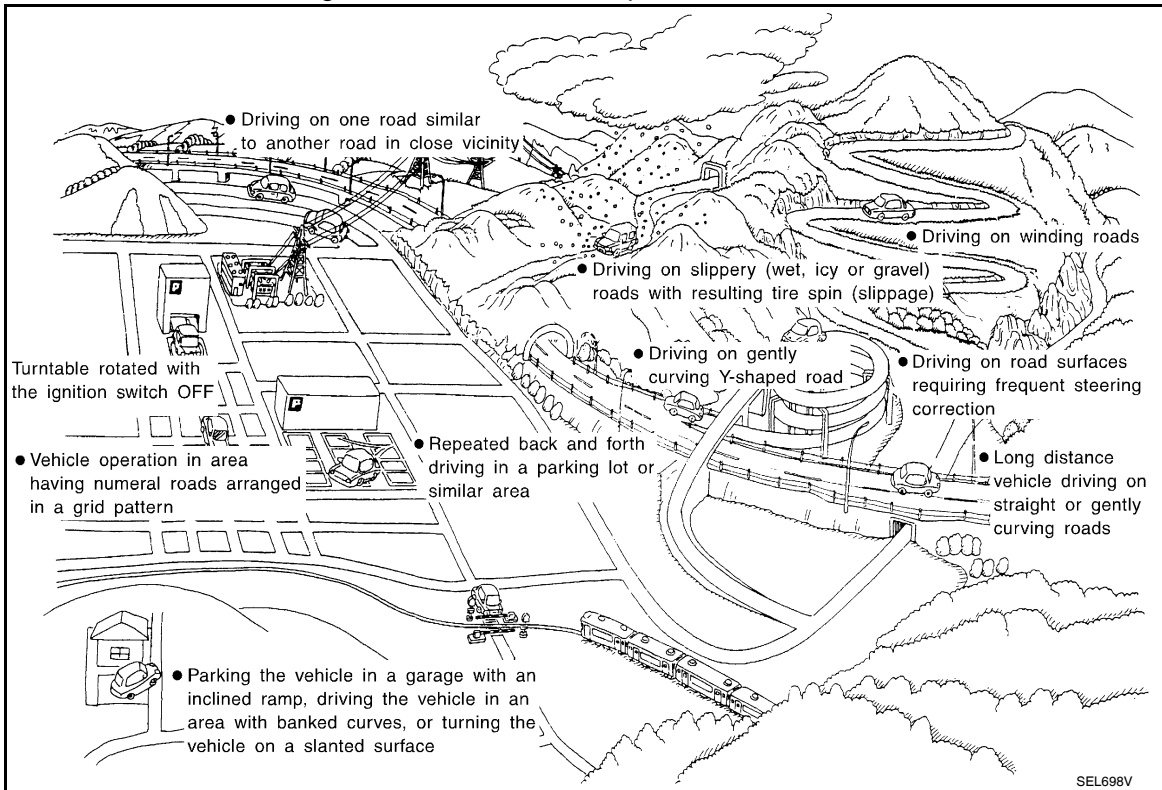





NAVIGATION SYSTEM

< SERVICE INFORMATION >
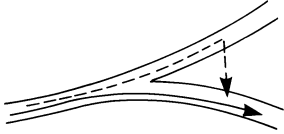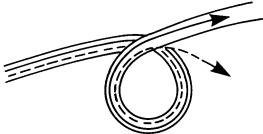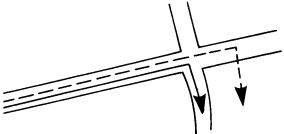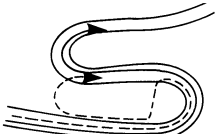
| Cause (condition) -: While driving ooo: Display | | Driving condition | Remarks (correction, etc.) |
|-------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Road configuration | Y-intersections  ELK0192D | At a Y intersection or similar gradual division of roads, an error in the direction of travel deduced by the sensor may result in the current-location mark appearing on the wrong road. | |
| | Spiral roads  ELK0193D | When driving on a large, continuous spiral road (such as loop bridge), turning angle error is accumulated and the vehicle mark may deviate from the correct location. | |
| | Straight roads  ELK0194D | When driving on a long, straight road and slow curve without stopping, map-matching does not work effectively enough and distance errors may accumulate. As a result, the vehicle mark may deviate from the correct location when the vehicle is turned at a corner. | If after travelling about 10 km (6 miles) the correct location has not been restored, perform location correction and, if necessary, direction correction. |
| | Zigzag roads  ELK0195D | When driving on a zigzag road, the map may be matched to other roads in the similar direction nearby at every turn, and the vehicle mark may deviate from the correct location. | |
| | Roads laid out in a grid pattern  ELK0196D | When driving where roads are laid out in a grid pattern, or where many roads are running in the similar direction nearby, the map may be matched to them by mistake and the vehicle mark may deviate from the correct location. | |
| | Parallel roads  ELK0197D | When two roads are running in parallel (such as highway and sideways), the map may be matched to the other road by mistake and the vehicle mark may deviate from the correct location. | |



NAVIGATION SYSTEM

< SERVICE INFORMATION >
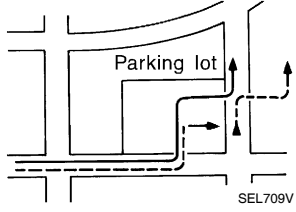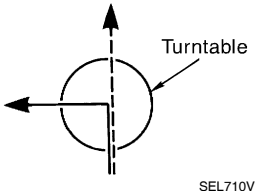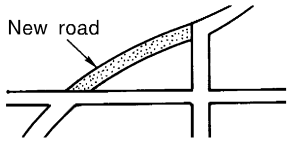
| Cause (condition) -: While driving ooo: Display | | Driving condition | Remarks (correction, etc.) |
|-------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Place | In a parking lot  SEL709V | When driving in a parking lot, or other location where there are no roads on the map, matching may place the vehicle mark on a nearby road. When the vehicle returns to the road, the vehicle mark may have deviated from the correct location. When driving in circle or turning the steering wheel repeatedly, direction errors accumulate, and the vehicle mark may deviate from the correct location. | If after travelling about 10 km (6 miles) the correct location has not been restored, perform location correction and, if necessary, direction correction. |
| | Turntable  SEL710V | When the ignition switch is OFF, the navigation system cannot get the signal from the gyroscope (angular speed sensor). Therefore, the displayed direction may be wrong and the correct road may not be easily returned to after rotating the vehicle on a turntable with the ignition OFF. | |
| | Slippery roads | On snow, wet roads, gravel, or other roads where tires may slip easily, accumulated mileage errors may cause the vehicle mark to deviate from the correct road. | |
| | Slopes | When parking in sloped garages, when travelling on banked roads, or in other cases where the vehicle turns when tilted, an error in the turning angle will occur, and the vehicle mark may deviate from the road. | |
| Map data | Road not displayed on the map screen  SEL699V | When driving on new roads or other roads not displayed on the map screen, map matching does not function correctly and matches the location to a nearby road. When the vehicle returns to a road which is on the map, the vehicle mark may deviate from the correct road. | |
| | Different road pattern (Changed due to repair)  ELK0201D | If the road pattern stored in the map data and the actual road pattern are different, map matching does not function correctly and matches the location to a nearby road. The vehicle mark may deviate from the correct road. | |
| Vehicle | Use of tire chains | When tire chains are used, the mileage is not correctly detected, and the vehicle mark may deviate from the correct road. | Drive the vehicle for a while. If the distance still deviates, adjust it by using the distance adjustment function. (If the tire chain is removed, recover the original value.) |

NAVIGATION SYSTEM

< SERVICE INFORMATION >
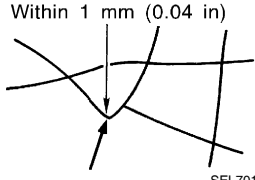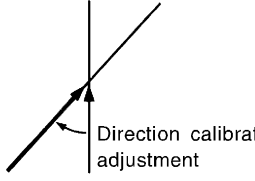
| Cause (condition) -: While driving ooo: Display | | Driving condition | Remarks (correction, etc.) |
|-------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Precautions for driving | Just after the engine is started | If the vehicle is driven just after the engine is started when the gyroscope (angular speed sensor) correction is not completed, the vehicle can lose its direction and may have deviated from the correct location. | Wait for a short while before driving after starting the engine. |
| | Continuous driving without stopping | When driving long distances without stopping, direction errors may accumulate, and the current-location mark may deviate from the correct road. | Stop and adjust the orientation. |
| | Abusive driving | Spinning the wheels or engaging in other kinds of abusive driving may result in the system being unable to perform correct detection, and may cause the vehicle mark to deviate from the correct road. | If after travelling about 10 km (6 miles) the correct location has not been restored, perform location correction and, if necessary, direction correction. |
| How to correct location | Position correction accuracy  | If the accuracy of location settings is poor, accuracy may be reduced when the correct road cannot be found, particularly in places where there are many roads. | Enter in the road displayed on the screen with an accuracy of approx. 1mm. Caution: Whenever possible, use detailed map for the correction. |
| | Direction when location is corrected  | If the accuracy of location settings during correction is poor, accuracy may be reduced afterwards. | Perform direction correction. |

CURRENT-LOCATION MARK SHOWS A POSITION WHICH IS COMPLETELY WRONG

In the following cases, the current-location mark may appear on completely different position in the map depending on the GPS satellite signal receiving conditions. In this case, perform location correction and direction correction.

- When location correction has not been done
 - If the receiving conditions of the GPS satellite signal is poor, or if the current-location mark becomes out of place, it may move to a completely different location and not come back if location correction is not done. The position will be corrected if the GPS signal can be received.
- When the vehicle has traveled by ferry, or when the vehicle has been towed
 - Because calculation of the current location cannot be done when travelling with the ignition OFF, for example when traveling by ferry or when being towed, the location before travel is displayed. If the precise location can be detected with GPS, the location will be corrected.

CURRENT-LOCATION MARK JUMPS

In the following cases, the current-location mark may appear to jump as a result of automatic correction of the current location.

- When map-matching has been done
 - If the current location and the current-location mark are different when map-matching is done, the current-location mark may seem to jump. At this time, the location may be “corrected” to the wrong road or to a location which is not on a road.
- When GPS location correction has been done
 - If the current location and the current-location mark are different when the location is corrected using GPS measurements, the current-location mark may seem to jump. At this time, the location may be “corrected” to a location which is not on a road.

CURRENT-LOCATION MARK IS IN A RIVER OR SEA

The navigation system moves the current-location mark with no distinction between land and rivers or sea. If the location mark is somehow out of place, it may appear that the vehicle is driving in a river or the sea.

WHEN DRIVING ON SAME ROAD, SOMETIMES CURRENT-LOCATION MARK IS IN RIGHT

NAVIGATION SYSTEM

< SERVICE INFORMATION >

PLACE AND SOMETIMES IT IS WRONG PLACE

The conditions of the GPS antenna (GPS data) and gyroscope (angular speed sensor) change gradually. Depending on the road traveled and the operation of the steering wheel, the location detection results will be different. Therefore, even on a road on which the location has never been wrong, conditions may cause the vehicle mark to deviate.

LOCATION CORRECTION BY MAP-MATCHING IS SLOW

- The map-matching function needs to refer to the data of the surrounding area. It is necessary to drive some distance for the function to work.
- Because map-matching operates on this principle, when there are many roads running in similar directions in the surrounding area, no matching determination may be made. The location may not be corrected until some special feature is found.

ALTHOUGH GPS RECEIVING DISPLAY IS GREEN, VEHICLE MARK DOES NOT RETURN TO CORRECT LOCATION

- The GPS accuracy has an error of approximately 10 m (30 ft). In some cases the current-location mark may not be on the correct street, even when GPS location-correction is done.
- The navigation system compares the results of GPS location detection with the results from map-matching location detection. The one which is determined to have higher accuracy is used.
- GPS location correction may not be performed when the vehicle is stopped.

NAME OF CURRENT PLACE IS NOT DISPLAYED

The current place name may not be displayed if there are no place names displayed on the map screen.

CONTENTS OF DISPLAY DIFFER FOR BIRDVIEW™ AND THE (FLAT) MAP SCREEN

Difference of the BIRDVIEW™ screen from the flat map screen are as follows.


- The current place name displays names which are primarily in the direction of vehicle travel.
- The amount of time before the vehicle travel or turn angle is updated on the screen is longer than for the (flat) map display.
- The conditions for display of place names, roads, and other data are different for nearby areas and for more distant areas.
- Some thinning of the character data is done to prevent the display becoming too complex. In some cases and in some locations, the display contents may differ.
- The same place name, street name, etc. may be displayed multiple times.

NAVIGATION SYSTEM

< SERVICE INFORMATION >

Program Loading of NAVI Control Unit

INFOID:000000003533769

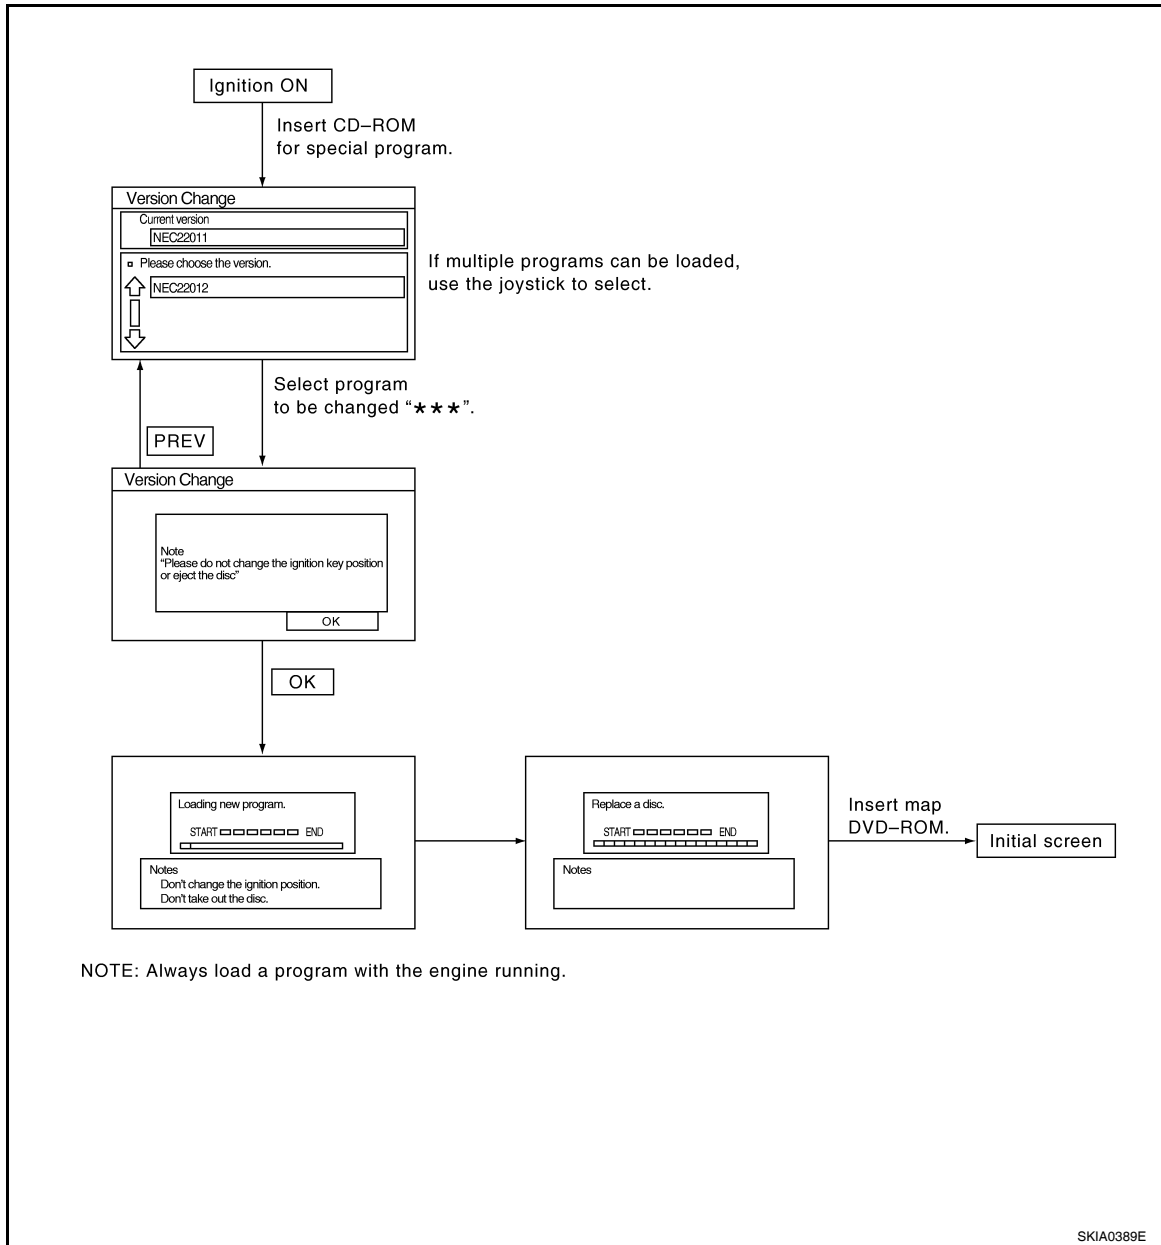

Removal and Installation

INFOID:000000003533770

AV SWITCH

Refer to [AV-46. "Removal and Installation"](#).

DISPLAY CONTROL UNIT


Removal

1. Remove display unit.

NAVIGATION SYSTEM

< SERVICE INFORMATION >

2. Remove display control unit.

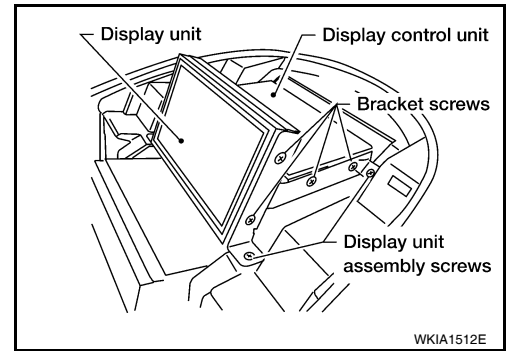


Installation

Installation is in reverse order of removal.

DISPLAY UNIT

Removal

1. Remove center console. Refer to [IP-10](#).
2. Remove cluster lid D. Refer to [IP-10](#).
3. Disconnect center speaker connector.
4. Disconnect display unit connectors.

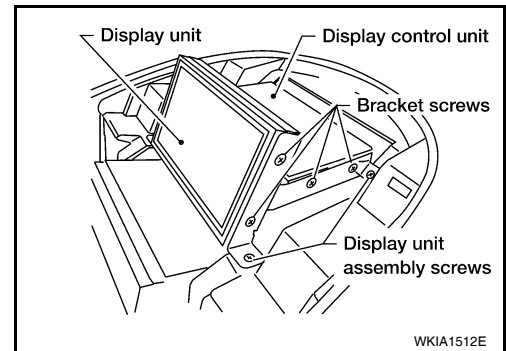

5. Remove display unit.
6. Remove display unit brackets.


Installation

Installation is in reverse order of removal.

GPS ANTENNA

Removal


1. Remove center console. Refer to [IP-10](#).
2. Remove cluster lid D. Refer to [IP-10](#).
3. Disconnect center speaker.
4. Remove defroster grille. Refer to [IP-10](#).
5. Disconnect GPS antenna connector.

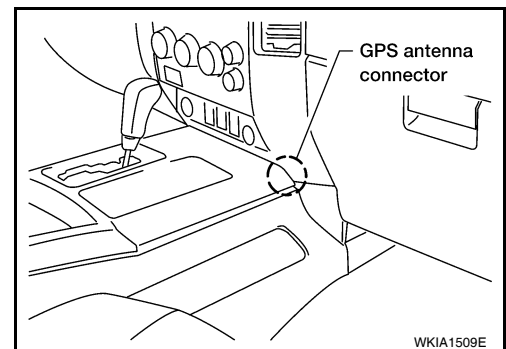

NAVIGATION SYSTEM

< SERVICE INFORMATION >

6. Remove GPS antenna.

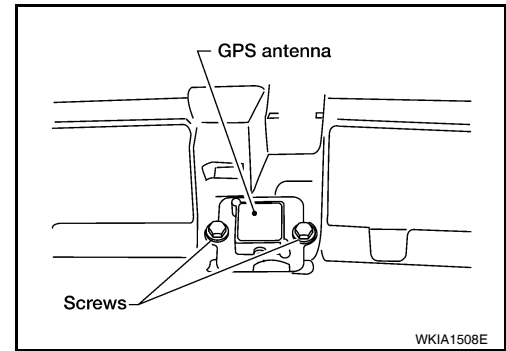

Installation

Installation is in the reverse order of removal.


NAVI CONTROL UNIT

Removal

CAUTION:

To avoid damage, eject map DVD-ROM before removing the NAVI control unit.

1. Disconnect negative battery cable.
2. Remove front passenger seat. Refer to [SE-83](#).
3. Remove NAVI control unit kick shield screws (A).
4. Remove NAVI control unit kick shield (1).
5. Disconnect NAVI control unit connectors.
6. Remove NAVI control unit screws (B).

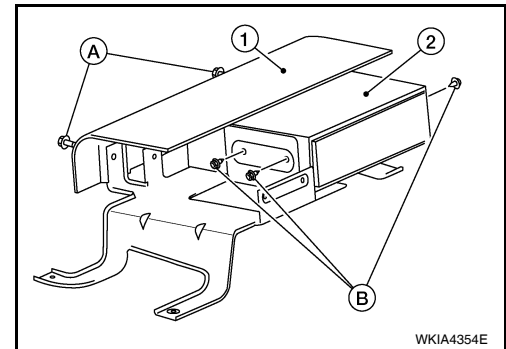

7. Remove NAVI control unit (2).

Installation

Installation is in the reverse order of removal.

STEERING WHEEL AUDIO CONTROL SWITCHES

Refer to [AV-46](#), "Removal and Installation".

A
B
C
D
E
F
G
H
I
J
AV
L
M
N
O
P