

DI

SECTION

DRIVER INFORMATION SYSTEM

CONTENTS

SERVICE INFORMATION	3	Calibration Procedure for Compass	24	
PRECAUTION	3	WARNING LAMPS	26	
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	3	Schematic	26	
PREPARATION	4	Wiring Diagram - WARN -	27	
Commercial Service Tool	4	Oil Pressure Warning Lamp Stays Off (Ignition Switch ON)	32	
COMBINATION METERS	5	Oil Pressure Warning Lamp Does Not Turn Off (Oil Pressure Is Normal)	33	
Component Parts and Harness Connector Location	5	A/T INDICATOR	34	
System Description	5	Wiring Diagram - AT/IND -	34	
Arrangement of Combination Meter	7	A/T Indicator Does Not Illuminate	34	
Internal Circuit	8	WARNING CHIME	36	
Wiring Diagram - METER -	9	Component Parts and Harness Connector Location	36	
Combination Meter Harness Connector Terminal Layout	11	System Description	36	
Terminal and Reference Value for Combination Meter	11	CAN Communication System Description	37	
Self-Diagnosis Mode of Combination Meter	12	Wiring Diagram - CHIME -	38	
How to Proceed with Trouble Diagnosis	15	Terminal and Reference Value for BCM	39	
Preliminary Check	15	Terminal and Reference Value for Combination Meter	39	
Symptom Chart	16	How to Proceed with Trouble Diagnosis	40	
Power Supply and Ground Circuit Inspection	16	Preliminary Check	40	
Vehicle Speed Signal Inspection	17	CONSULT-II Function (BCM)	40	
Engine Oil Pressure Signal Inspection	17	All Warning Chimes Do Not Operate	41	
Water Temperature Signal Inspection	18	Key Warning Chime and Light Warning Chime Do Not Operate (Seat Belt Warning Chime Does Operate)	41	
Engine Speed Signal Inspection	18	Key Warning Chime Does Not Operate	42	
Fuel Level Sensor Unit Inspection	18	Light Warning Chime Does Not Operate	44	
Fuel Gauge Fluctuates, Indicates Wrong Value, or Varies	20	Seat Belt Warning Chime Does Not Operate	44	
Fuel Gauge Does Not Move to Full-position	20	REAR SONAR SYSTEM	46	
Electrical Component Inspection	21	Component Parts and Harness Connector Location	46	
Removal and Installation of Combination Meter	21	System Description	46	
COMPASS AND THERMOMETER	22	Wiring Diagram - SONAR -	48	
System Description	22	Sonar Control Unit Harness Connector Terminal Layout	50	
Wiring Diagram - COMPAS -	23			
Trouble Diagnosis	23			

Terminal and Reference Value for Sonar Control Unit	50	System Description	58
How to Proceed with Trouble Diagnosis	51	Schematic	60
Pre-diagnosis Inspection	51	Wiring Diagram - R/VIEW -	61
Self-Diagnosis Function	51	Rear View Camera Control Unit Harness Connector Terminal Layout	64
Preliminary Check	53	Terminal and Reference Value for Rear View Camera Control Unit	64
Symptom Chart	54	CONSULT-II Function (REARVIEW CAMERA)	64
Component Inspection	55	Side Distance Guideline Correction	65
Removal and Installation	55	Power Supply and Ground Circuit Inspection	67
CLOCK	56	Rear View Is Not Displayed with the A/T Selector Lever in R Position	67
Wiring Diagram - CLOCK -	56	Removal and Installation of Rear View Camera Control Unit	71
Removal and Installation of Clock	56	Removal and Installation of Rear View Camera	72
REAR VIEW MONITOR	58		
Component Parts and Harness Connector Location	58		

PRECAUTION

< SERVICE INFORMATION >

SERVICE INFORMATION

PRECAUTION

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000003533477

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

A
B
C
D
E
F
G
H
I
J
DI
L
M
N
O
P




PREPARATION

< SERVICE INFORMATION >

PREPARATION

Commercial Service Tool

INFOID:000000003533478

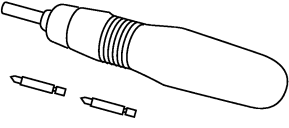Tool name	Description
<p data-bbox="162 352 272 378">Power tool</p>  <p data-bbox="852 571 922 588">PBIC0191E</p>	<p data-bbox="1015 352 1266 378">Loosening bolts and nuts.</p>


COMBINATION METERS

< SERVICE INFORMATION >

COMBINATION METERS

Component Parts and Harness Connector Location

INFOID:000000003533479

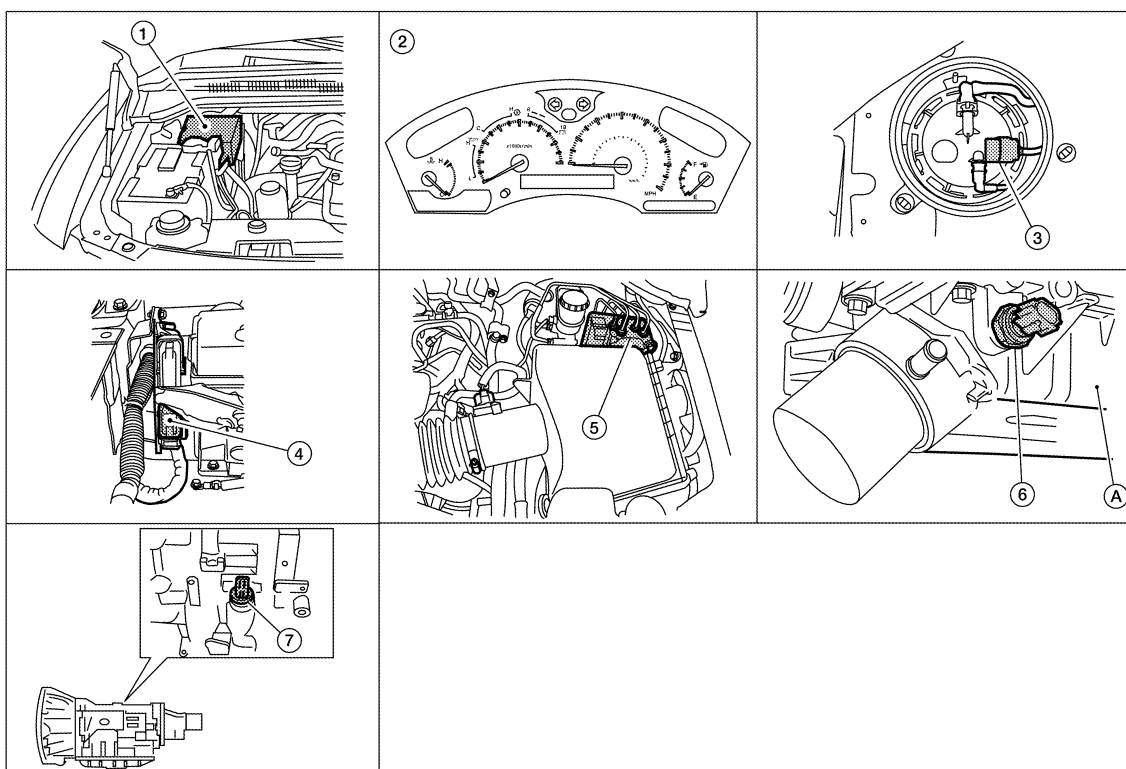

WKIA5718E

- | | | |
|--|---|--|
| 1. IPDM E/R E122 | 2. Combination meter M24 | 3. Fuel level sensor unit and fuel pump C5 (view with inspection hole cover removed) |
| 4. ECM E16 (view with battery removed) | 5. ABS actuator and electric unit (control unit) E125 | 6. Oil pressure switch F4
A. Oil pan (upper) |
| 7. A/T assembly F9 | | |

System Description

INFOID:000000003533480

UNIFIED METER CONTROL UNIT

- Speedometer, odometer, tachometer, fuel gauge, oil pressure gauge, voltage gauge, A/T oil temperature gauge, and water temperature gauge are controlled by the unified meter control unit, which is built into the combination meter.
- Warning indicators are controlled by signals drawn from the CAN communication system, BCM (body control module), and components connected directly to the combination meter.
- Digital meter is adopted for odometer/trip meters*, as well as the A/T position indicator display.
*The record of the odometer is kept even if the battery cable is disconnected.
- Odometer/trip meters and A/T indicator segments can be checked in diagnosis mode.
- Meters/gauges can be checked in diagnosis mode.

Illumination control

The unified meter control unit outputs the speedometer, odometer/trip meters, tachometer, oil pressure gauge, voltage meter, A/T indicator, A/T temperature gauge, fuel and temperature gauge lighting when the ignition switch is turned on. When the lighting switch is turned on, the illumination control switch can be used to adjust the brightness of the combination meter illumination and the odometer/trip meters and meter illumination. When the ignition switch is turned from the OFF to the ON position, the combination meter dial lighting will remain off for 0.7 seconds. For additional combination meter illumination control information, refer to [LT-120, "System Description"](#).

COMBINATION METERS

< SERVICE INFORMATION >

POWER SUPPLY AND GROUND CIRCUIT

Power is supplied at all times

- through 10A fuse [No.19, located in the fuse block (J/B)]
- to combination meter terminal 8.

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse [No.14, located in the fuse block (J/B)]
- to combination meter terminal 24.

Ground is supplied

- to combination meter terminal 17
- through body grounds M57, M61 and M79.

WATER TEMPERATURE GAUGE

The water temperature gauge indicates the engine coolant temperature.

ECM provides an engine coolant temperature signal to combination meter via CAN communication lines.

ENGINE OIL PRESSURE GAUGE

The engine oil pressure gauge indicates whether the engine oil pressure is low or normal.

The oil pressure gauge is controlled by the IPDM E/R (intelligent power distribution module engine room). Low oil pressure causes oil pressure switch terminal 1 to provide ground to IPDM E/R terminal 42. The IPDM E/R then signals the combination meter (unified meter control unit) via CAN communication lines and a low oil pressure indication is displayed by the oil pressure gauge.

A/T OIL TEMPERATURE GAUGE

The A/T oil temperature gauge indicates the A/T fluid temperature.

TCM (transmission control module) provides an A/T fluid temperature signal to combination meter via CAN communication lines.

VOLTAGE GAUGE

The voltage gauge indicates the battery/charging system voltage.

The voltage gauge is regulated by the unified meter control unit.

TACHOMETER

The tachometer indicates engine speed in revolutions per minute (rpm).

ECM provides an engine speed signal to combination meter via CAN communication lines.

FUEL GAUGE

The fuel gauge indicates the approximate fuel level in the fuel tank.

The fuel gauge is regulated by the unified meter control unit and a variable resistor signal supplied

- to combination meter terminal 15.
- through fuel level sensor unit and fuel pump terminal 2
- through fuel level sensor unit and fuel pump terminal 5
- from combination meter terminal 16

SPEEDOMETER

ABS actuator and electric unit (control unit) provides a vehicle speed signal to the combination meter via CAN communication lines.

ODO/TRIP METER

The vehicle speed signal and the memory signals from the meter memory circuit are processed by the combination meter and the mileage is displayed.

How to Change the Display

Refer to Owner's Manual for odo/trip meter operating instructions.

CAN COMMUNICATION SYSTEM DESCRIPTION



Refer to [LAN-4](#).

COMBINATION METERS

< SERVICE INFORMATION >

Arrangement of Combination Meter

INFOID:000000003533481

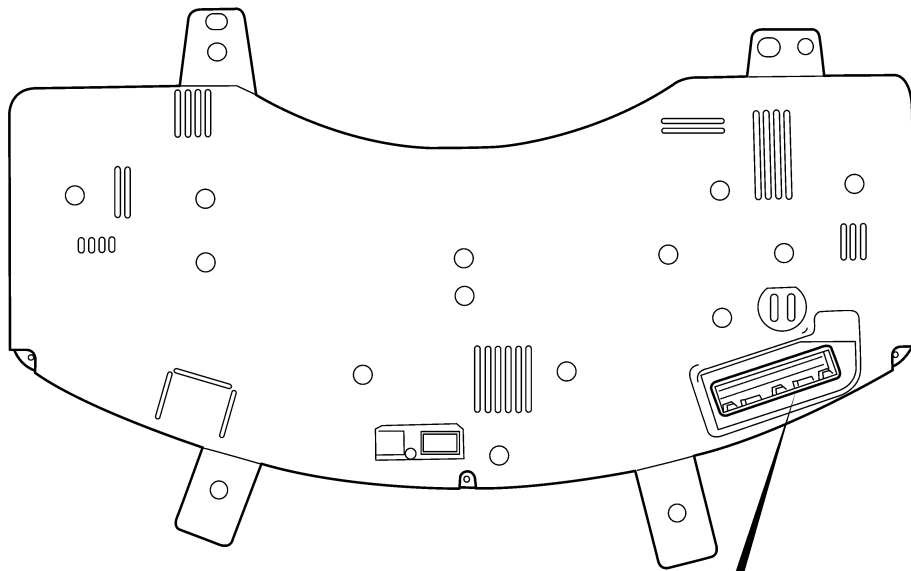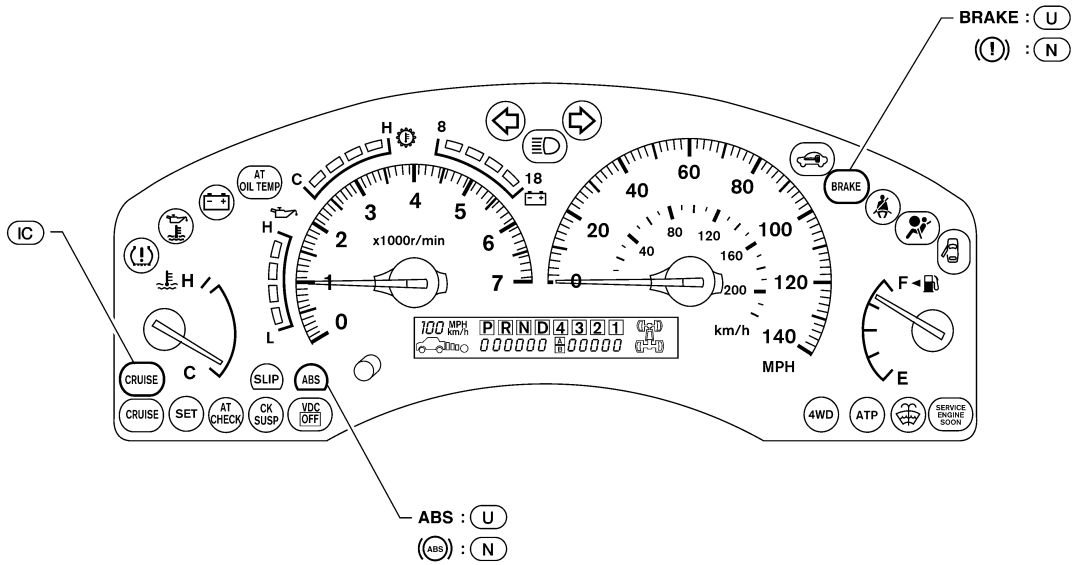

- IC : WITH ICC
- N : CANADA
- U : USA

20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	M24
40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21	

WKIA4592E


A
B
C
D
E
F
G
H
I
J
DI
L
M
N
O
P

COMBINATION METERS

< SERVICE INFORMATION >

Internal Circuit

INFOID:000000003533482


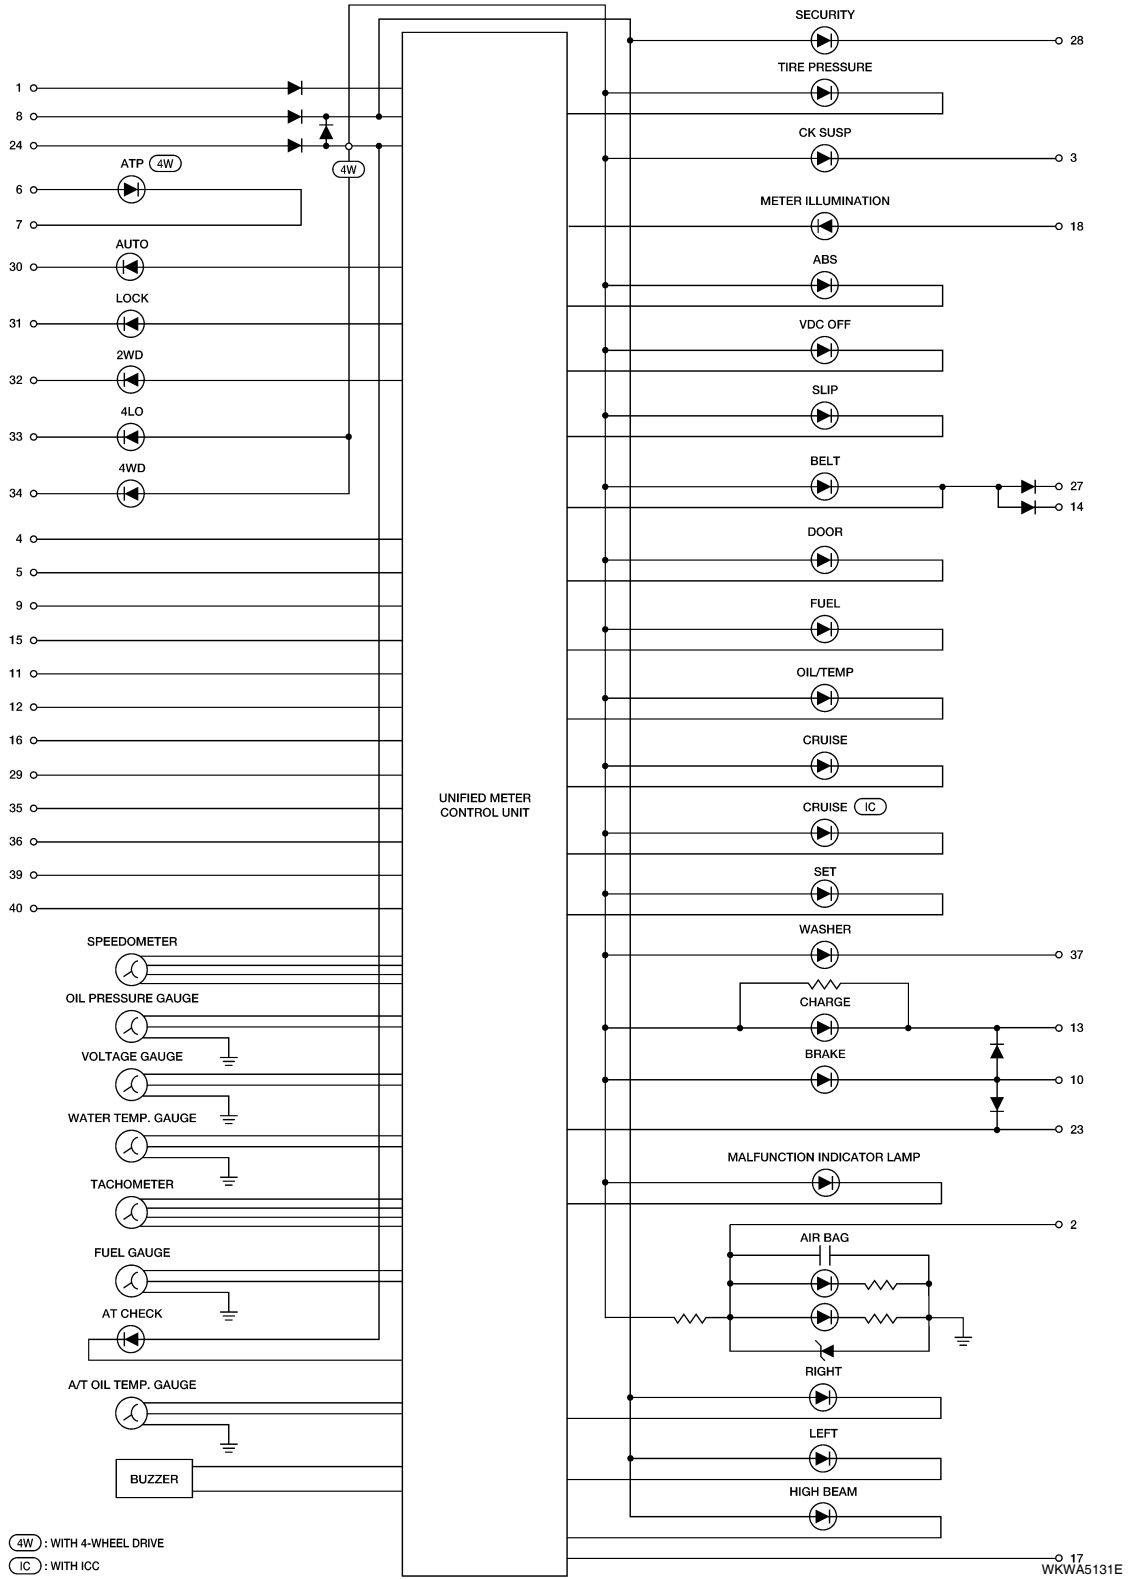


COMBINATION METERS



< SERVICE INFORMATION >

Wiring Diagram - METER -

INFOID:000000003533483

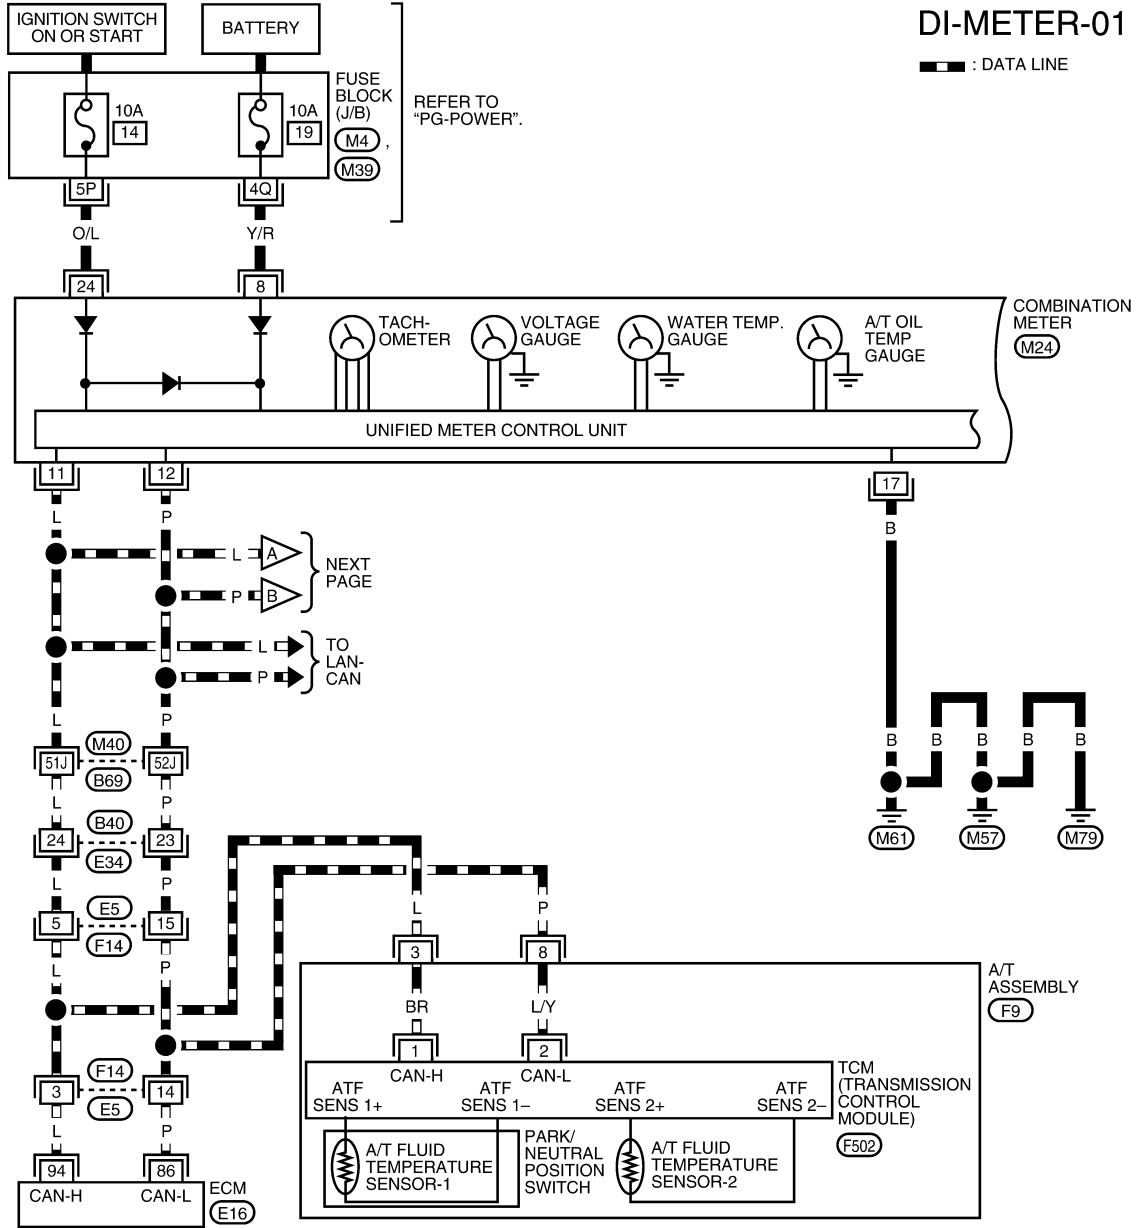

REFER TO THE FOLLOWING.
 (E16) - ELECTRICAL UNITS
 (M40) - SUPER MULTIPLE JUNCTION (SMJ)



*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

WKWA5132E

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


DI

COMBINATION METERS

< SERVICE INFORMATION >

Combination Meter Harness Connector Terminal Layout

INFOID:000000003533484

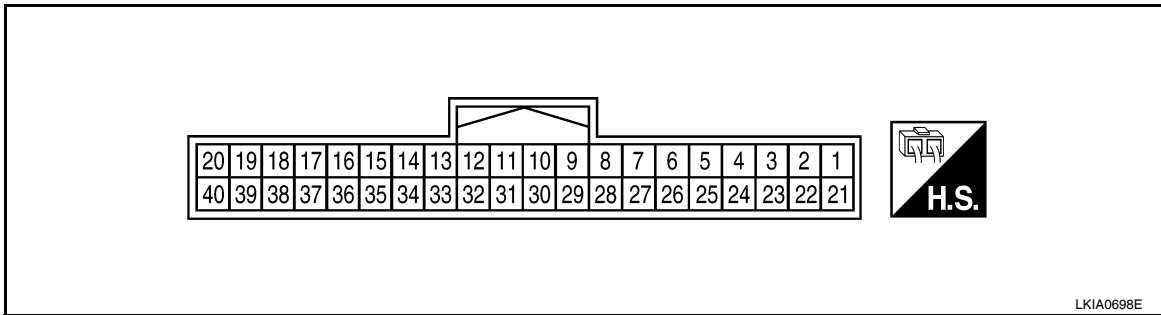

Terminal and Reference Value for Combination Meter

INFOID:000000003533485

Terminal No.	Wire color	Item	Condition		Reference value (V) (Approx.)
			Ignition switch	Operation or condition	
1	O	Ignition switch ACC or ON	ON	—	Battery voltage
8	Y/R	Battery power supply	OFF	—	Battery voltage
9	R/G	Stop lamp switch	ON	Brake pedal depressed	Battery voltage
				Brake pedal released	0
10	P/B	Brake fluid level switch	ON	Brake fluid level low	0
				Brake fluid level normal	Battery voltage
11	L	CAN-H	—	—	—
12	P	CAN-L	—	—	—
14	P/L	Seat belt buckle switch RH	ON	Unfastened (ON)	0
				Fastened (OFF)	Battery voltage
15	Y/L	Fuel level sensor signal	—	—	Refer to DI-18 , "Fuel Level Sensor Unit Inspection".
16	B/P	Fuel level sensor and oil pressure sensor ground	ON	—	0V
17	B	Ground	—	—	0V
18	BR	Illumination control switch	—	Lighting switch ON	Refer to LT-120 , "System Description".
23	G	Parking Brake switch	ON	Parking brake applied	0
				Parking brake released	Battery voltage
24	O/L	Ignition switch ON or START	ON	—	Battery voltage
27	O/B	Seat belt buckle pre-tensioner assembly LH (seat belt buckle switch)	ON	Unfastened (ON)	0
				Fastened (OFF)	Battery voltage
28	G/O	Security indicator input	OFF	Security indicator ON	0
				Security indicator OFF	Battery voltage
29	W/R	Vehicle speed signal (8-pulse)	ON	Speedometer operated [When vehicle speed is approx. 40 km/h (25 MPH)]	

PKIA1935E

COMBINATION METERS

< SERVICE INFORMATION >

Terminal No.	Wire color	Item	Condition		Reference value (V) (Approx.)
			Ignition switch	Operation or condition	
37	W/L	Washer fluid level switch	ON	Washer fluid level low	0
				Washer fluid level normal	Battery voltage

Self-Diagnosis Mode of Combination Meter

INFOID:000000003533486

SELF-DIAGNOSIS FUNCTION

The following items can be checked during Combination Meter Self-Diagnosis Mode.

- Gauge sweep and present gauge values.
- Illuminates all odometer, fuel, and engine temperature segments.
- Illuminates all micro controlled lamps/LED's regardless of switch configuration.
- Displays estimated present battery voltage.
- Displays seat belt buckle switch LH status.

HOW TO INITIATE COMBINATION METER SELF- DIAGNOSIS MODE

NOTE:

Once entered, Combination Meter Self-Diagnosis Mode will function with the ignition switch in ON or START. Combination Meter Self-Diagnosis Mode will exit upon turning the ignition switch to OFF or ACC.

To initiate Combination Meter Self-Diagnosis Mode, refer to the following procedure.

1. Turn the ignition switch ON, while holding the odometer/trip meter switch for 5 - 8 seconds. When the diagnosis function is activated the odometer/trip meter will display tEst.

NOTE:

Check combination meter power supply and ground circuit when self-diagnosis mode of combination meter does not start. Refer to [DI-16, "Power Supply and Ground Circuit Inspection"](#). Replace combination meter if normal. Refer to [IP-10, "Removal and Installation"](#).

COMBINATION METER SELF-DIAGNOSIS MODE FUNCTIONS

To interpret Combination Meter Self-Diagnosis Mode functions, refer to the following table.

Event	Odometer Display	Description of Test/Data	Notes:
Odometer/trip meter A/B switch held from 5 to 8 seconds (or until released)	tEst		Initiating self-diagnosis mode
Odometer/trip meter A/B switch engaged and released = next test requested	rXXXX, FAIL	Return to normal operation of all lamps/LEDs and displays hex ROM rev. If a ROM checksum fault exists, display alternates between "r XXXX" and "FAIL".	
Next test requested	nrXXXX	Displays hex ROM rev as stored in NVM.	
Next test requested	Sc1XX	Displays 8-bit software configuration value in Hex format.	Bit Coding 7-3 = reserved for future use 2 = TCS/VDC 0 = not present 1 = present 1 = Shift type 0 = Column shift 1 = Floor shift 0 = ICC 0 = not present 1 = present
Next test requested	Sc2XX	Displays 8-bit software configuration value in Hex format.	Bit coding 7-0 = Reserved for future use

COMBINATION METERS

< SERVICE INFORMATION >

Event	Odometer Display	Description of Test/Data	Notes:	
Next test requested	EprXX	Displays 8-bit software configuration value in Hex format.	Bit Coding 7-2 = reserved for future use 1 = A/T Oil Temp (gauge) 0 = not present 1 = present 1 = Odo Units 0 = kilometers 1 = miles	A
Next test requested	1nFXX	Displays 8-bit market info value in Hex format.	\$31 = USA \$2A = Canada	B
Next test requested	cYLXX	Displays 8-bit engine configuration value in Hex format.	\$08 = 8 cylinder \$06 = 6 cylinder	C
Next test requested	bulb	Illuminates all micro-controlled lamps/LEDs regardless of SW configuration.		D
Next test requested	D-HI	Meter/LCD Illumination.		E
Next test requested	(All segments illuminated)	Lights all odometer/trip meter, fuel, and engine temperature display segments.	Full daytime brightness all LCD segments active	F
Next test requested	N-HI	Meter/LCD Illumination.		G
Next test requested	(All segments illuminated)	Lights all odometer/trip meter, fuel, and engine temperature display segments.	Full nighttime brightness all LCD segments active	H
Next test requested	N-LO	Meter/LCD Illumination.		I
Next test requested	(All segments illuminated)	Lights all odometer/trip meter, fuel, and engine temperature display segments.	Min. nighttime brightness all LCD segments active	J
Next test requested	dS XX	Current dimming step.	1-21	
Next test requested	EE XX, FAIL	Hex EE level. If EE checksum fault exists, display alternates between "EE XX" and "FAIL".		DI
Next test requested	dtXXXX	Hex coding of final manufacturing test date.		L
Next test requested	GAGE	Performs sweep of all gauges, then displays present gauge values. Performs checksum tests on ROM and EE.	Gauges sweep within 10 seconds	M
Next test requested	FFXXXX	Displays 16-bit fuel flow constant "Q" in tenths of cc/min in Hex format.	\$0000 - \$FFFF	N
Next test requested	tF	Displays 16-bit tire factor "A" in hundredths in Hex format.	\$0000 - \$FFFF	O
Next test requested	oP	Current oil pressure value in A/D counts in hex format.	\$00 - \$FF	P
Next test requested	ot1XX	Displays oil pressure tell-tale "on" threshold in A/D counts in Hex format.	\$00 - \$FF	

COMBINATION METERS

< SERVICE INFORMATION >

Event	Odometer Display	Description of Test/Data	Notes:
Next test requested	ot0XX	Displays oil pressure tell-tale "off" threshold in A/D counts in Hex format.	\$00 - \$FF
Next test requested	XXXXX	Raw uncompensated english speed value in hundredths of MPH. Speedometer indicates present speed.	Will display "-----" if message is not received. Will display "99999" if data received is invalid
Next test requested	XXXXX	Raw uncompensated metric speed value in hundredths of KPH. Speedometer indicates present speed.	Will display "-----" if message is not received. Will display "99999" if data received is invalid
Next test requested	tXXXX	Tachometer value in RPM. Tachometer indicates present RPM.	Will display "-----" if message is not received.
Next test requested	F1 XXXX	Present ratioed fuel level A/D input 1 in decimal format. Fuel gauge indicates present filtered level.	000-009 = Short circuit 010-254 = Normal range 255 = Open circuit --- = Missing 5 seconds
Next test requested	F2 XXX	Present FLPS.	010-254 normal range
Next test requested	FS X	Fuel filter rate	0 = Normal 1 = Fast
Next test requested	XXXXC	Last temperature gauge input value in degrees C. Temperature gauge indicates present filtered temperature.	Will display "---"C if message is not received. Will display "999" if data received is invalid.
Next test requested	BAtXX.X	Estimated present battery voltage.	
Next test requested	rES -X	Seat belt buckle switch LH status.	0 = Unbuckled 1 = Buckled
Next test requested	PA -XX	Hex value port A.	
Next test requested	Pb -XX	Hex value port B.	
Next test requested	PE -XX	Hex value port E.	
Next test requested	PL -XX	Hex value port L.	
Next test requested	P6 -XX	Hex value port K.	
Next test requested	Pn -XX	Hex value port M.	
Next test requested	PP -XX	Hex value port P.	
Next test requested	PS -XX	Hex value port S.	
Next test requested	Pt -XX	Hex value port T.	
Next test requested	Pu -XX	Hex value port U.	
Next test requested	P4 -XX	Hex value port V.	
Next test requested	Puu -XX	Hex value port W.	
Next test requested	A00XXX	A/D port A/D value (non-ratioed).	0-255
Next test requested	A01XXX	A/D port A/D value (non-ratioed).	0-255
Next test requested	A02XXX	A/D port A/D value (non-ratioed).	0-255
Next test requested	A03XXX	A/D port A/D value (non-ratioed).	0-255

COMBINATION METERS

< SERVICE INFORMATION >

Event	Odometer Display	Description of Test/Data	Notes:	
Next test requested	A04XXX	A/D port A/D value (non-ratioed).	0-255	A
Next test requested	A05XXX	A/D port A/D value (non-ratioed).	0-255	B
Next test requested	A06XXX	A/D port A/D value (non-ratioed).	0-255	C
Next test requested	A07XXX	A/D port A/D value (non-ratioed).	0-255	D
Next test requested	A08XXX	A/D port A/D value (non-ratioed).	0-255	E
Next test requested	A09XXX	A/D port A/D value (non-ratioed).	0-255	F
Next test requested	A10XXX	A/D port A/D value (non-ratioed).	0-255	G
Next test requested	A11XXX	A/D port A/D value (non-ratioed).	0-255	H
Next test requested	A12XXX	A/D port A/D value (non-ratioed).	0-255	I
Next test requested	A13XXX	A/D port A/D value (non-ratioed).	0-255	J
Next test requested	A14XXX	A/D port A/D value (non-ratioed).	0-255	
Next test requested	A15XXX	A/D port A/D value (non-ratioed).	0-255	
Next test requested	PA0-XX	Hex value representing state of A/D ports 0-7.		
Next test requested	PA1-XX	Hex value representing state of A/D ports 0-7.		
Next test requested	Thr-XXX	Decimal value of thermistor A/D reading.	0-255	
Next test requested	rXXXX, FAIL		Return to beginning of self-diagnosis.	DI

How to Proceed with Trouble Diagnosis

INFOID:000000003533487

1. Confirm the symptom or customer complaint.
2. Perform preliminary check. Refer to [DI-15, "Preliminary Check"](#).
3. According to the symptom chart, repair or replace the cause of the symptom.
4. Does the meter operate normally? If so, go to 5. If not, go to 2.
5. Inspection End.

Preliminary Check

INFOID:000000003533488

1. CHECK WARNING INDICATOR ILLUMINATION

1. Turn ignition switch ON.
2. Make sure warning indicators (such as malfunction indicator lamp and oil pressure low/coolant temperature high warning indicator) illuminate.

Do warning indicators illuminate?

YES >> GO TO 2.

NO >> Check ignition power supply system of combination meter. Refer to [DI-16, "Power Supply and Ground Circuit Inspection"](#).

2. CHECK OPERATION OF SELF-DIAGNOSIS MODE (COMBINATION METER)

COMBINATION METERS

< SERVICE INFORMATION >

Perform self-diagnosis mode of combination meter. Refer to [DI-12, "Self-Diagnosis Mode of Combination Meter"](#).

Does self-diagnosis mode operate normally?

YES >> GO TO 3.

NO >> Check combination meter power supply and ground circuit. Refer to [DI-16, "Power Supply and Ground Circuit Inspection"](#).


3. CHECK ODOMETER OPERATION

Check segment display status of odometer.

Is the display normal?

YES >> GO TO 4.

NO >> Replace the combination meter. Refer to [IP-10, "Removal and Installation"](#).

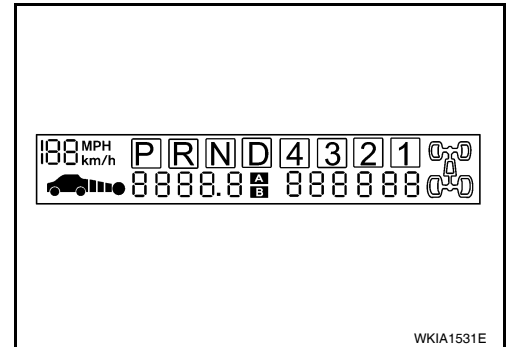


4. CHECK COMBINATION METER CIRCUIT

Check indication of each meter/gauge in self-diagnosis mode.

OK or NG

OK >> Go to [DI-16, "Symptom Chart"](#).

NG >> Replace the combination meter. Refer to [IP-10, "Removal and Installation"](#).

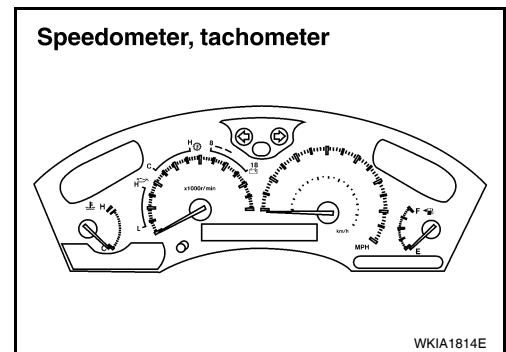

Symptom Chart

INFOID:000000003533489

Trouble phenomenon	Possible cause
Improper tachometer indication.	Refer to DI-18, "Engine Speed Signal Inspection" .
Improper water temperature gauge indication.	Refer to DI-18, "Water Temperature Signal Inspection" .
Improper speedometer or odometer.	Refer to DI-17, "Vehicle Speed Signal Inspection" .
Improper fuel gauge indication.	Refer to DI-18, "Fuel Level Sensor Unit Inspection" .
Fuel warning lamp indication is irregular.	
Improper A/T oil temperature gauge indication	Refer to AT-119 .
Improper voltage gauge indication	Replace combination meter. Refer to IP-10, "Removal and Installation" .
More than one gauge does not give proper indication.	
Improper A/T position indication.	Refer to DI-34 .
Illumination control does not operate properly.	Refer to LT-120 .

Power Supply and Ground Circuit Inspection

INFOID:000000003533490

1. CHECK FUSES

Check for blown combination meter fuses.

COMBINATION METERS

< SERVICE INFORMATION >

Unit	Power source	Fuse No.
Combination meter	Battery	19
	Ignition switch ON or START	14

Refer to [DI-9, "Wiring Diagram - METER -"](#).

OK or NG


OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-3](#).

2. CHECK POWER SUPPLY CIRCUIT

1. Disconnect combination meter connector.
2. Check voltage between combination meter harness connector terminals and ground.

Terminals		(-)	Ignition switch position		
(+)			OFF	ACC	ON
Connector	Terminal	Ground			
M24	8		Battery voltage	Battery voltage	Battery voltage
	24		0V	0V	Battery voltage

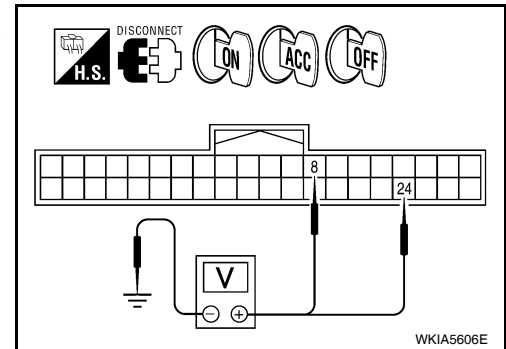

OK or NG


OK >> GO TO 3.

NG >> Check the harness for open between combination meter and fuse.

3. CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between combination meter harness connector terminal and ground.

Terminals		(-)	Continuity
(+)			
Connector	Terminal	Ground	Yes
M24	17		

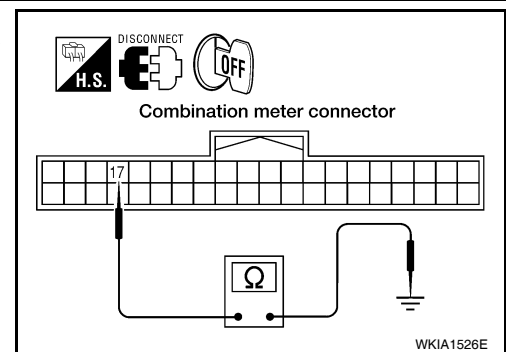

OK or NG

OK >> Inspection End.

NG >> Repair harness or connector.

Vehicle Speed Signal Inspection

INFOID:000000003533491

1. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF-DIAGNOSIS

Refer to [BRC-26, "CONSULT-II Function \(ABS\)"](#).

OK or NG

OK >> Replace the combination meter. Refer to [IP-10, "Removal and Installation"](#).

NG >> Perform "Diagnostic Procedure" for displayed DTC. Refer to [BRC-26, "CONSULT-II Function \(ABS\)"](#).

Engine Oil Pressure Signal Inspection

INFOID:000000003533492

1. CHECK SELF-DIAGNOSTIC RESULTS OF IPDM E/R

Select "IPDM E/R" on CONSULT-II, and perform self-diagnosis of IPDM E/R. Refer to [PG-18, "CONSULT-II Function \(IPDM E/R\)"](#).

COMBINATION METERS

< SERVICE INFORMATION >

Self-diagnostic results content

No malfunction detected>>GO TO 2.

Malfunction detected>>GO TO [PG-18, "CONSULT-II Function \(IPDM E/R\)"](#).

2.CHECK IPDM E/R INPUT SIGNAL

Select "IPDM E/R" on CONSULT-II. Operate ignition switch with "OIL P SW" of "DATA MONITOR" and check operation status.


When ignition switch is in ON position (Engine stopped) : OIL P SW CLOSE

When engine running : OIL P SW OPEN

OK or NG

OK >> Replace combination meter. Refer to [IP-10, "Removal and Installation"](#).

NG >> GO TO 3.

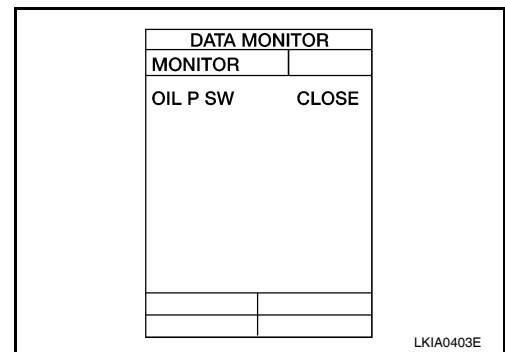

3.CHECK OIL PRESSURE SWITCH CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector E122 and oil pressure switch connector F4.
3. Check continuity between IPDM E/R harness connector E122 (A) terminal 42 and oil pressure switch harness connector F4 (B) terminal 1.

Continuity should exist.

OK or NG

OK >> GO TO 4.

NG >> Repair harness or connector.

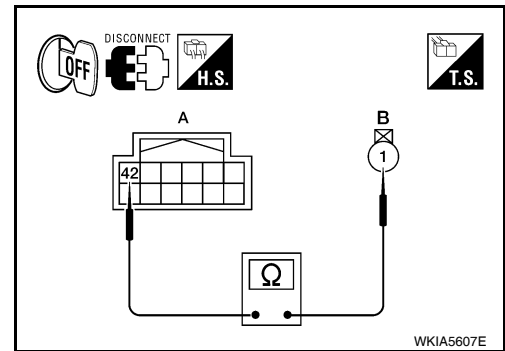

4.CHECK OIL PRESSURE SWITCH

Check oil pressure switch. Refer to [DI-21, "Electrical Component Inspection"](#).

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-28, "Removal and Installation of IPDM E/R"](#).

NG >> Replace oil pressure switch.

Water Temperature Signal Inspection

INFOID:000000003533493

1.CHECK ECM SELF-DIAGNOSIS

Perform ECM self-diagnosis. Refer to [EC-111, "CONSULT-II Function \(ENGINE\)"](#).

OK or NG

OK >> Replace the combination meter. Refer to [IP-10, "Removal and Installation"](#).

NG >> Perform "Diagnostic procedure" for displayed DTC. Refer to [EC-82](#).

Engine Speed Signal Inspection

INFOID:000000003533494

1.CHECK ECM SELF-DIAGNOSIS

Perform ECM self-diagnosis. Refer to [EC-111, "CONSULT-II Function \(ENGINE\)"](#).

OK or NG

OK >> Replace the combination meter. Refer to [IP-10, "Removal and Installation"](#).

NG >> Perform "Diagnostic procedure" for displayed DTC. Refer to [EC-82](#).

Fuel Level Sensor Unit Inspection

INFOID:000000003533495

FUEL LEVEL SENSOR UNIT

The following symptoms do not indicate a malfunction.

COMBINATION METERS

< SERVICE INFORMATION >

- Depending on vehicle position or driving circumstance, the fuel in the tank shifts and the indication may fluctuate.
- If the vehicle is fueled with the ignition switch ON, the indication will update slowly.
- If the vehicle is tilted when the ignition switch is turned ON, fuel in the tank may flow to one direction resulting in a change of reading.

LOW-FUEL WARNING LAMP

Depending on vehicle posture or driving circumstances, the fuel level in the tank varies, and the warning lamp ON timing may be changed.

1. CHECK SELF-DIAGNOSIS

Perform the combination meter self-diagnosis. Refer to [DI-12, "Self-Diagnosis Mode of Combination Meter"](#).

OK or NG

OK >> GO TO 2.

NG >> Replace the combination meter. Refer to [IP-10, "Removal and Installation"](#).

2. CHECK HARNESS CONNECTOR

1. Turn the ignition switch OFF.
2. Check combination meter and fuel level sensor unit and fuel pump terminals (meter-side, and harness-side) for poor connection.

OK or NG

OK >> GO TO 3.

NG >> Repair or replace terminals or connectors.

3. CHECK HARNESS CONNECTOR OUTPUT SIGNAL


1. Disconnect fuel level sensor unit and fuel pump connector.
2. Turn ignition switch ON.
3. Check voltage between combination meter harness connector M24 terminal 15 and ground.

Battery voltage should exist.

OK or NG

OK >> GO TO 4.

NG >> Replace the combination meter. Refer to [IP-10, "Removal and Installation"](#).

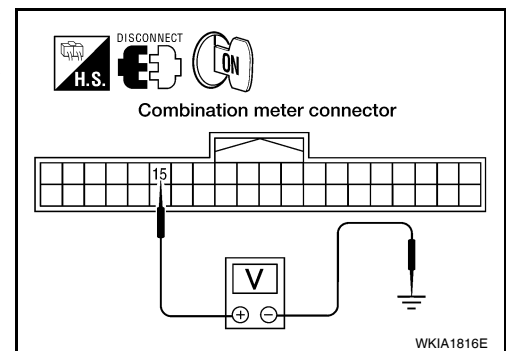

4. CHECK HARNESS FOR OPEN OR SHORT CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect combination meter connector M24.
3. Check continuity between combination meter harness connector M24 (B) terminal 15 and fuel level sensor unit and fuel pump harness connector C5 (A) terminal 2.

Continuity should exist.

4. Check continuity between fuel level sensor unit and fuel pump harness connector C5 (A) terminal 2 and ground.


Continuity should not exist.

OK or NG

OK >> GO TO 5.

NG >> Repair harness or connector.

5. CHECK FUEL LEVEL SENSOR CIRCUIT

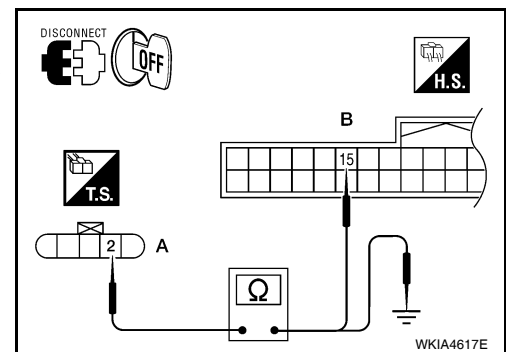

COMBINATION METERS

< SERVICE INFORMATION >

1. Check continuity between combination meter harness connector M24 (B) terminal 16 and fuel level sensor unit and fuel pump harness connector C5 (A) terminal 5.

Continuity should exist.

2. Check continuity between fuel level sensor unit and fuel pump harness connector C5 (A) terminal 5 and ground.

Continuity should not exist.

OK or NG

- OK >> GO TO 6.
- NG >> Repair harness or connector.

6. CHECK FUEL LEVEL SENSOR UNIT

Check the fuel level sensor unit. Refer to [DI-21. "Electrical Component Inspection"](#).

OK or NG

- OK >> GO TO 7.
- NG >> Replace the fuel level sensor unit. Refer to [FL-5. "Removal and Installation"](#).

7. CHECK INSTALLATION CONDITION

Check fuel level sensor unit installation, and determine whether the float arm interferes or binds with any of the internal components in the fuel tank.

OK or NG

- OK >> Replace the combination meter. Refer to [IP-10. "Removal and Installation"](#).
- NG >> Install the fuel level sensor unit properly.

Fuel Gauge Fluctuates, Indicates Wrong Value, or Varies

INFOID:000000003533496

1. CHECK FUEL GAUGE FLUCTUATION

Test drive vehicle to see if gauge fluctuates only during driving or just before or just after stopping.

Does the indication value vary only during driving or just before or just after stopping?

- YES >> The fluctuation may be caused by fuel level change in the fuel tank. Condition is normal.
- NO >> Ask the customer about the situation when the symptom occurs in detail, Refer to [DI-18. "Fuel Level Sensor Unit Inspection"](#).

Fuel Gauge Does Not Move to Full-position

INFOID:000000003533497

1. CHECK POINTER MOVEMENT TO FULL-POSITION

Does it take a long time for the pointer to move to full-position?

YES or NO

- YES >> GO TO 2.
- NO >> GO TO 3.

2. CHECK IGNITION SWITCH POSITION

Was the vehicle fueled with the ignition switch ON?

YES or NO


- YES >> Be sure to fuel the vehicle with the ignition switch OFF. Otherwise, it will take a long time for the pointer to move to full-position because of the characteristic of the fuel gauge.
- NO >> GO TO 3.

3. OBSERVE VEHICLE POSITION

Is the vehicle parked on an incline?

YES or NO

- YES >> Check the fuel level indication with vehicle on a level surface.
- NO >> GO TO 4.

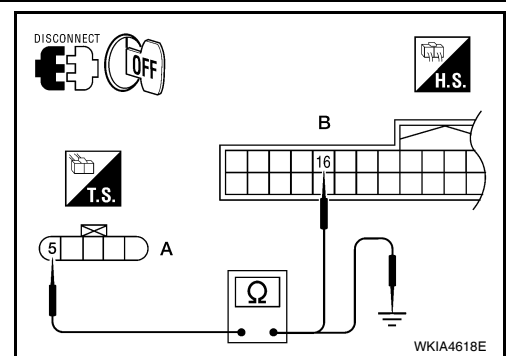

COMBINATION METERS

< SERVICE INFORMATION >

4. CHECK POINTER MOVEMENT TO EMPTY-POSITION

During driving, does the fuel gauge move gradually toward empty-position?

YES or NO

YES >> Check the fuel level sensor unit. Refer to [DI-21. "Electrical Component Inspection"](#).

NO >> Check fuel level sensor unit installation, and determine whether the float arm interferes or binds with any of the internal components in the fuel tank.

Electrical Component Inspection

INFOID:000000003533498

FUEL LEVEL SENSOR UNIT CHECK


For removal, refer to [FL-5. "Removal and Installation"](#).

Check Fuel Level Sensor Unit and Fuel Pump

Check resistance between fuel level sensor unit and fuel pump connector terminals 2 and 5.

Terminals		Float position mm (in)			Resistance value Ω (Approx.)
2	5	*1	Empty	25.86 (1.02)	81.66
		*2	Full	254.6 (10.02)	6.98


*1 and *2: When float rod is in contact with stopper.

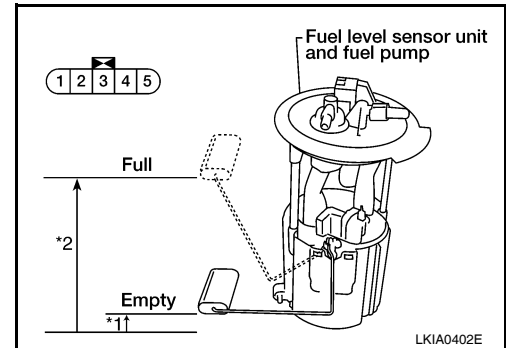

OIL PRESSURE SWITCH CHECK

Check continuity between the oil pressure switch and body ground.

Condition	Oil pressure kPa (kg/cm ² , psi)	Continuity
Engine stopped	Less than 29 (0.3, 4)	Yes
Engine running	More than 29 (0.3, 4)	No

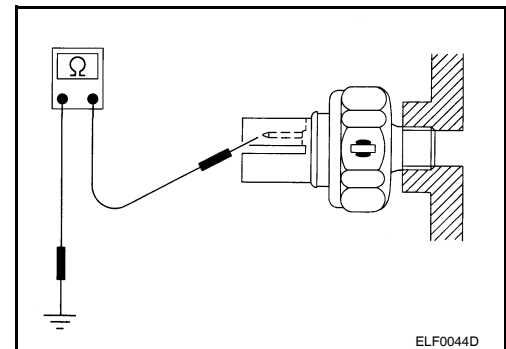

Removal and Installation of Combination Meter

INFOID:000000003533499

Refer to "Removal and Installation of Combination Meter" for removal and installation procedures.

COMPASS AND THERMOMETER

< SERVICE INFORMATION >


COMPASS AND THERMOMETER

System Description

INFOID:000000003533500

This unit displays the following items:

- Earth magnetism and heading direction of vehicle.
- Outside air temperature.
- Caution for frozen road surfaces.

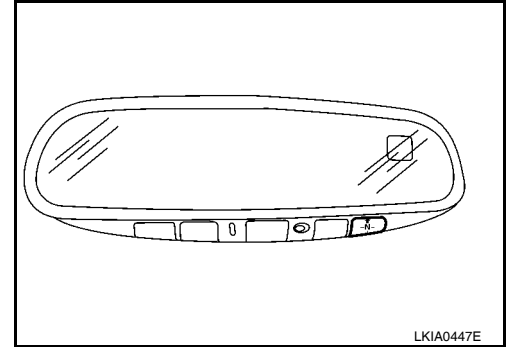

OUTSIDE TEMPERATURE DISPLAY

Push the mode (N) switch when the ignition switch is in the ON position. The outside temperature will be displayed in "°F". To change the indication from "°F" to "°C", push and hold the mode (N) switch for about 3 seconds until the display begins to flash. Press the mode (N) switch again to toggle between "°F" and "°C".

DIRECTION DISPLAY

Push the mode (N) switch when the ignition switch is in the ON position. The direction will be displayed.


COMPASS AND THERMOMETER

< SERVICE INFORMATION >

Wiring Diagram - COMPAS -

INFOID:000000003533501

DI-COMPAS-01

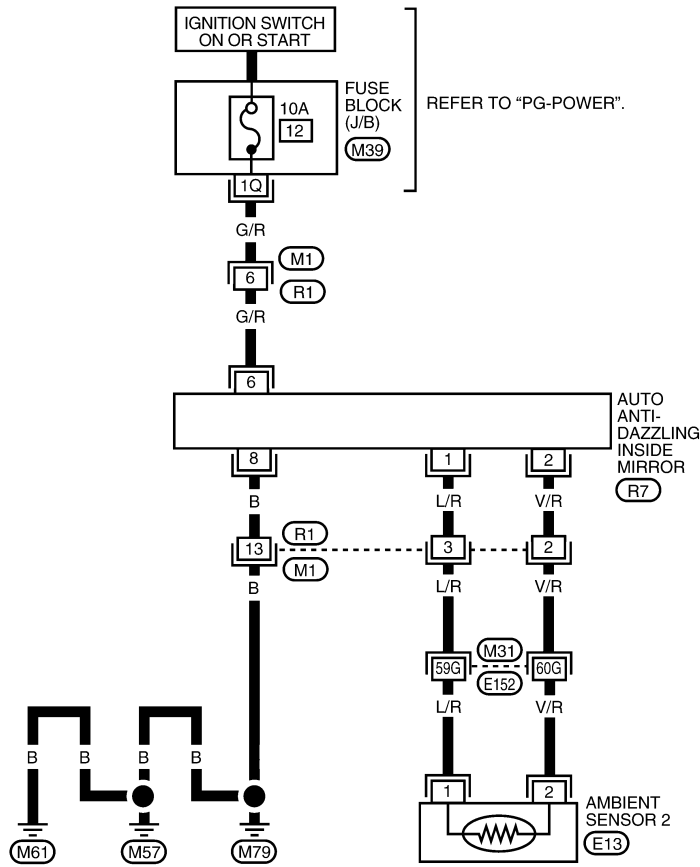

REFER TO THE FOLLOWING.

M31 - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3618E

Trouble Diagnosis

PRELIMINARY CHECK FOR THERMOMETER

1. COOL DOWN CHECK

INFOID:000000003533502

COMPASS AND THERMOMETER

< SERVICE INFORMATION >

1. Turn the ignition switch to the ON position.
2. Cool down ambient sensor 2 with water or ice.

Does the indicated temperature drop?

YES >> GO TO 2.

NO >> The system is malfunctioning. Check the system following "INSPECTION/COMPASS AND THERMOMETER". Refer to "INSPECTION/COMPASS AND THERMOMETER".

2. WARM UP CHECK

1. Leave the vehicle for 10 minutes.
2. With the ignition switch in the ON position, disconnect and reconnect ambient sensor 2 connector.

Does the indicated temperature rise?

YES >> The system is OK.

NO >> The system is malfunctioning. Check the system following "INSPECTION/COMPASS AND THERMOMETER". Refer to "INSPECTION/COMPASS AND THERMOMETER".

INSPECTION/COMPASS AND THERMOMETER

Symptom	Possible causes	Repair order
No display at all	<ol style="list-style-type: none"> 1. 10A fuse. 2. Ground circuit. 3. auto anti-dazzling inside mirror. 	<ol style="list-style-type: none"> 1. Check 10A fuse [No. 12, located in fuse block (J/B)]. Turn the ignition switch ON and verify that battery positive voltage is at terminal 6 of auto anti-dazzling inside mirror. 2. Check ground circuit for auto anti-dazzling inside mirror. 3. Replace auto anti-dazzling inside mirror.
Forward direction indication slips off the mark or incorrect.	<ol style="list-style-type: none"> 1. In manual correction mode (Bar and display vanish). 2. Zone variation change is not done. 	<ol style="list-style-type: none"> 1. Drive the vehicle and turn at an angle of 90°. 2. Perform the zone variation change.
Displays wrong temperature when ambient temperature is between -40°C (-40°F) and 55°C (130°F)	<ol style="list-style-type: none"> 1. Check operation. 2. Ambient sensor 2 circuit. 3. Ambient sensor 2. 4. Auto anti-dazzling inside mirror. 	<ol style="list-style-type: none"> 1. Perform preliminary check shown above. 2. Check harness for open or short between ambient sensor 2 and auto anti-dazzling inside mirror. 3. Replace ambient sensor 2. 4. Replace auto anti-dazzling inside mirror.
Displays SC or OC	<ol style="list-style-type: none"> 1. Ambient sensor 2 circuit. 2. Ambient sensor 2. 3. Auto anti-dazzling inside mirror. 	<ol style="list-style-type: none"> 1. Check harness for open or short between ambient sensor 2 and auto anti-dazzling inside mirror. 2. Replace ambient sensor 2. 3. Replace auto anti-dazzling inside mirror.

Calibration Procedure for Compass


INFOID:000000003533503

The difference between magnetic North and geographical North can sometimes be great enough to cause false compass readings. In order for the compass to operate accurately in a particular zone, it must be calibrated using the following procedure.

COMPASS AND THERMOMETER

< SERVICE INFORMATION >

Zone Variation Chart

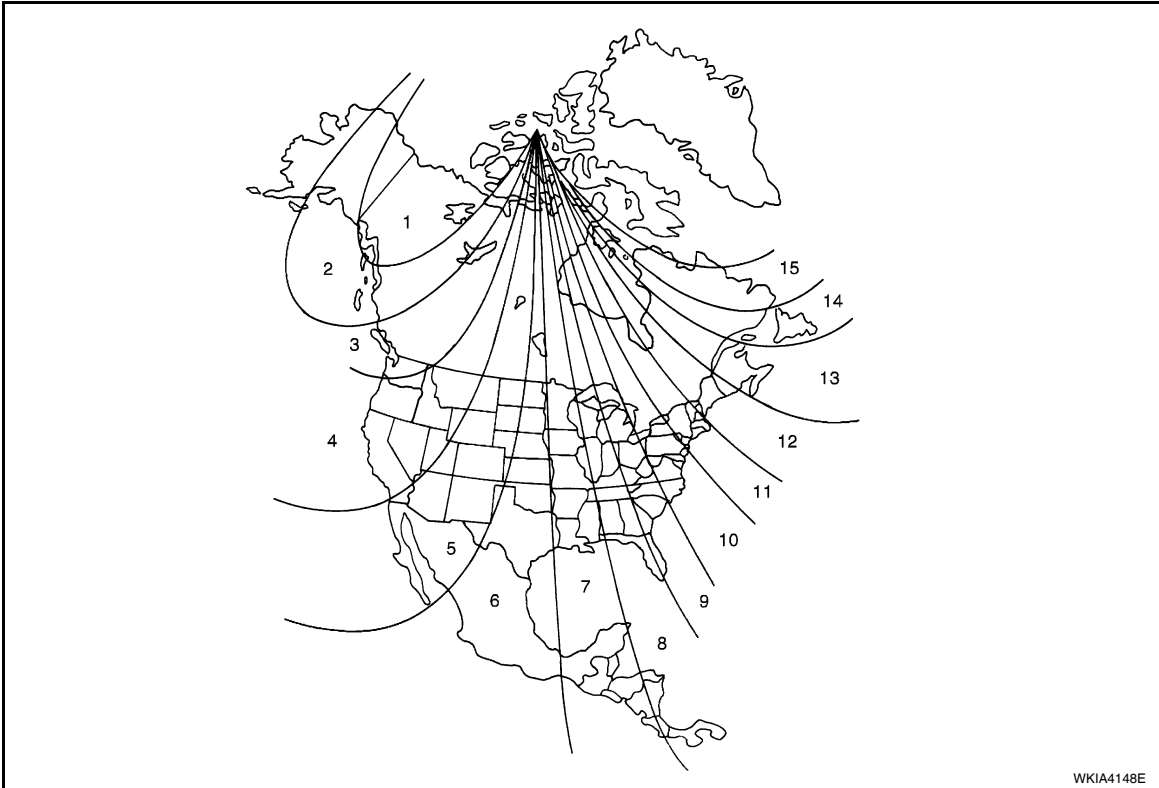


1. Determine your location on the zone map.
 2. Turn the ignition switch to the ON position.
 3. Press and hold the mode (N) switch for about 8 seconds. The current zone number will appear in the display.
 4. Press the mode (N) switch repeatedly until the desired number appears in the display.
- Once the desired zone number is displayed, stop pressing the mode (N) switch and the display will show a compass direction after a few seconds.

NOTE:

Use zone number 5 for Hawaii.

CORRECTION FUNCTIONS OF COMPASS

The direction display is equipped with automatic correction function. If the direction is not shown correctly, carry out initial correction.

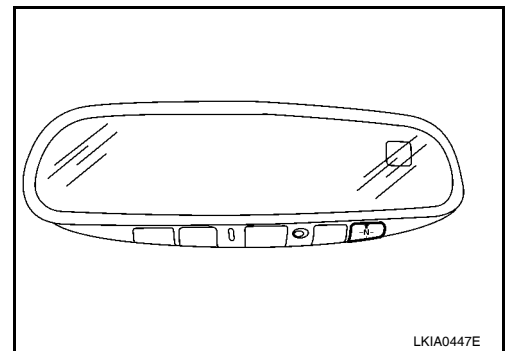

INITIAL CORRECTION PROCEDURE FOR COMPASS

1. Pushing the mode (N) switch for about 10 seconds will enter the initial correction mode. The "CAL" icon will illuminate.
2. Turn the vehicle slowly in an open, safe place. The initial correction is completed in approximately one and a half turns.

NOTE:

In places where the terrestrial magnetism is extremely disturbed, the initial correction may start automatically.


WARNING LAMPS

< SERVICE INFORMATION >

WARNING LAMPS

Schematic

INFOID:000000003533504

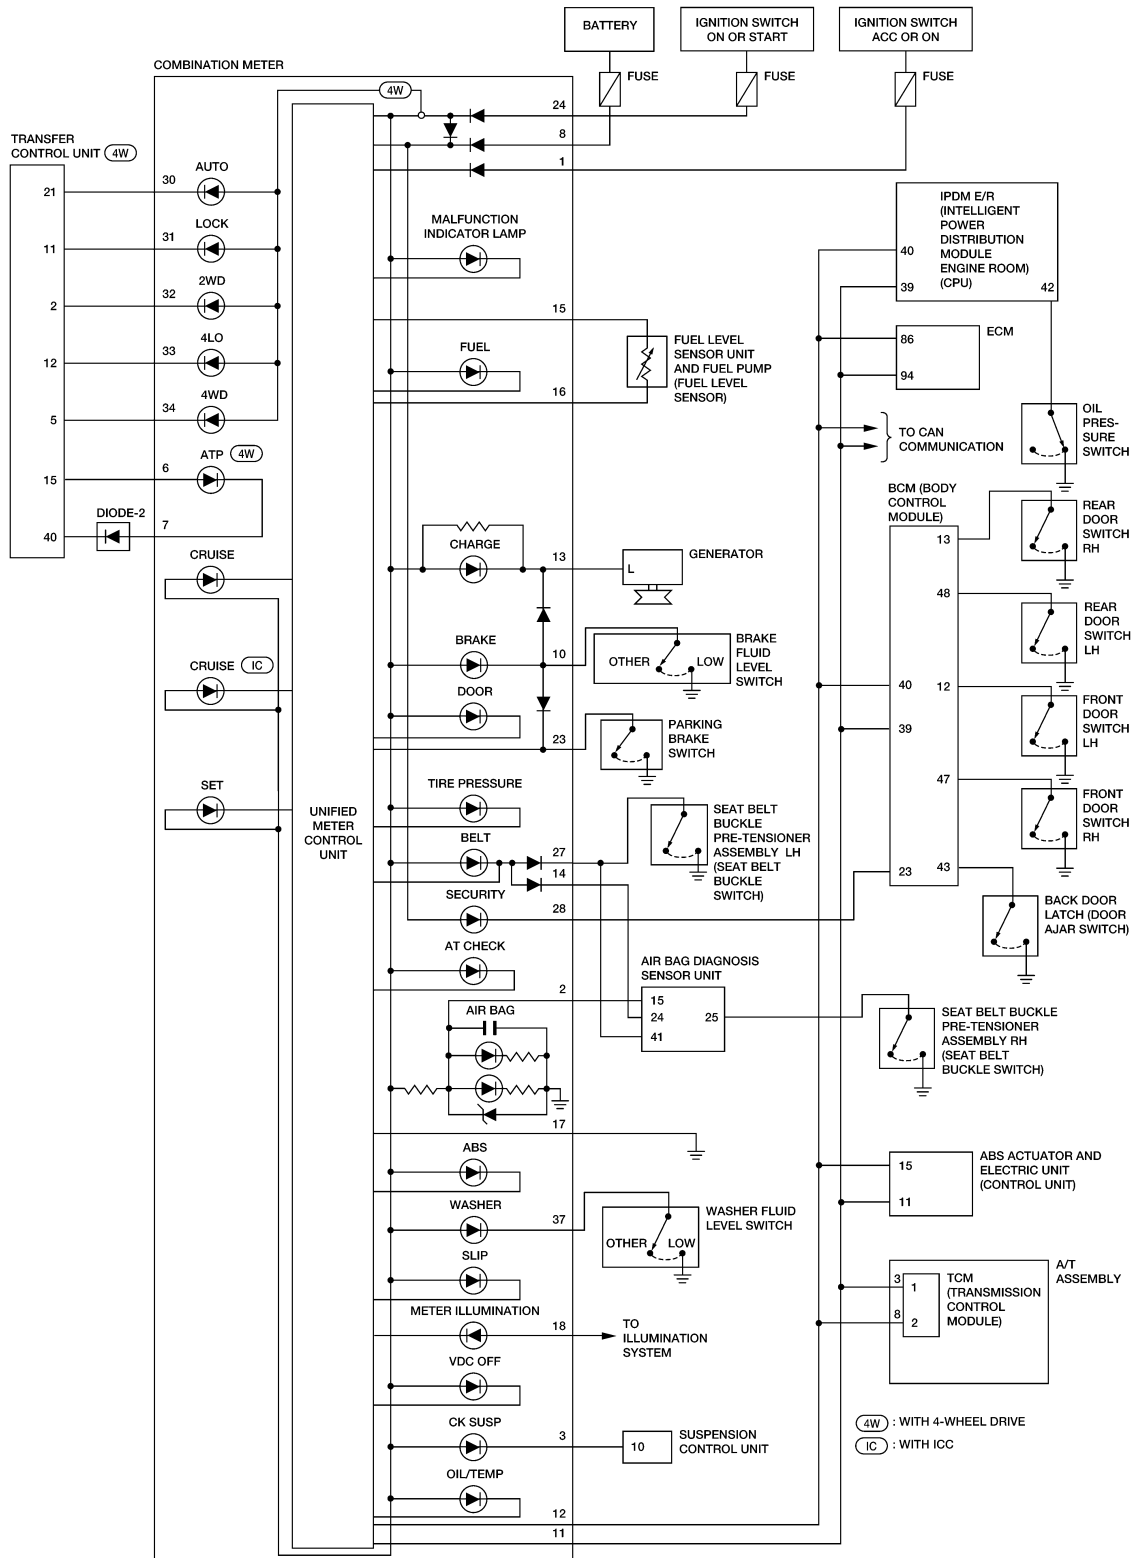

AWNWA0335G




WARNING LAMPS

< SERVICE INFORMATION >

Wiring Diagram - WARN -

INFOID:00000003533505

DI-WARN-01

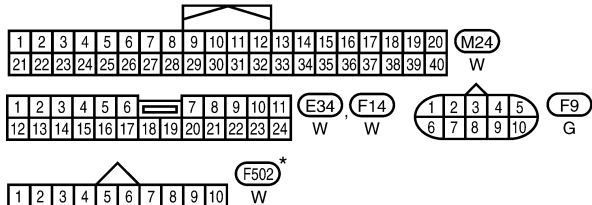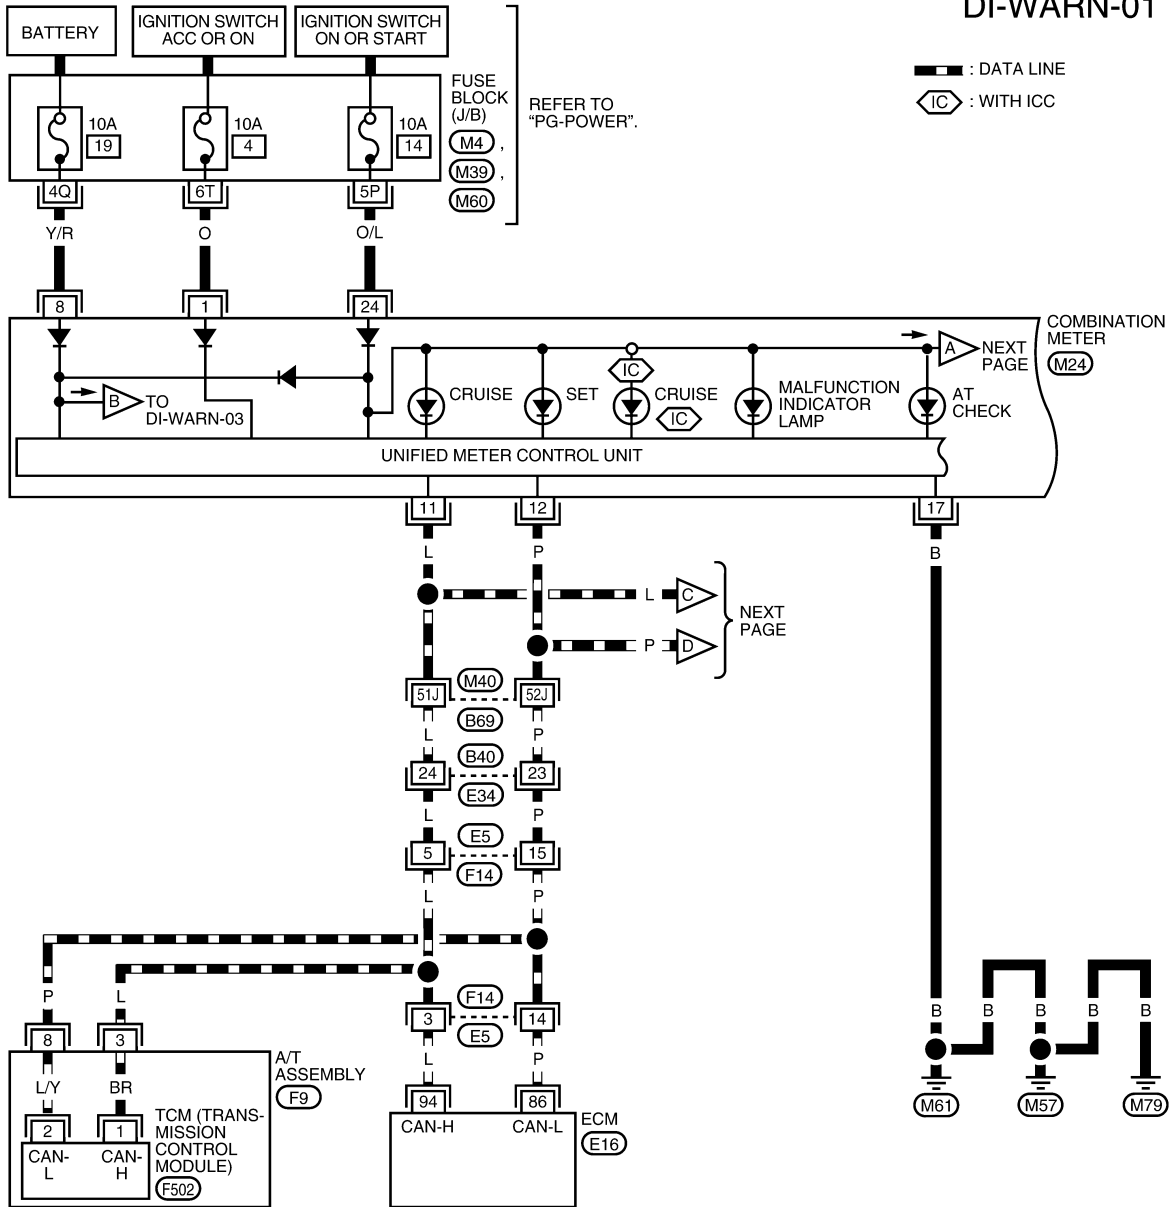

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

REFER TO THE FOLLOWING.
 (E16) - ELECTRICAL UNITS
 (M40) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA5135E



A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P



WARNING LAMPS

< SERVICE INFORMATION >


DI-WARN-02

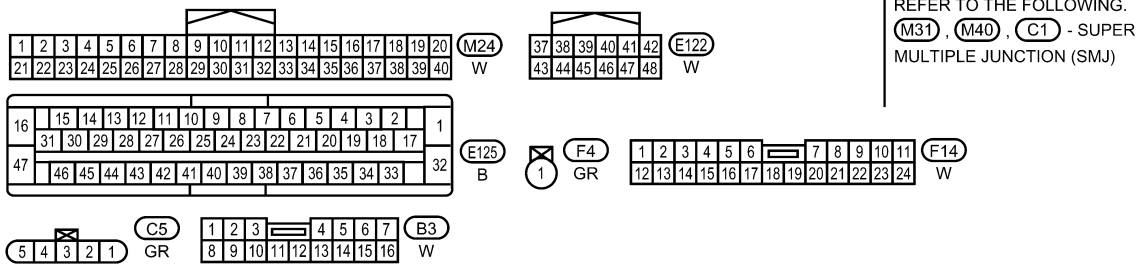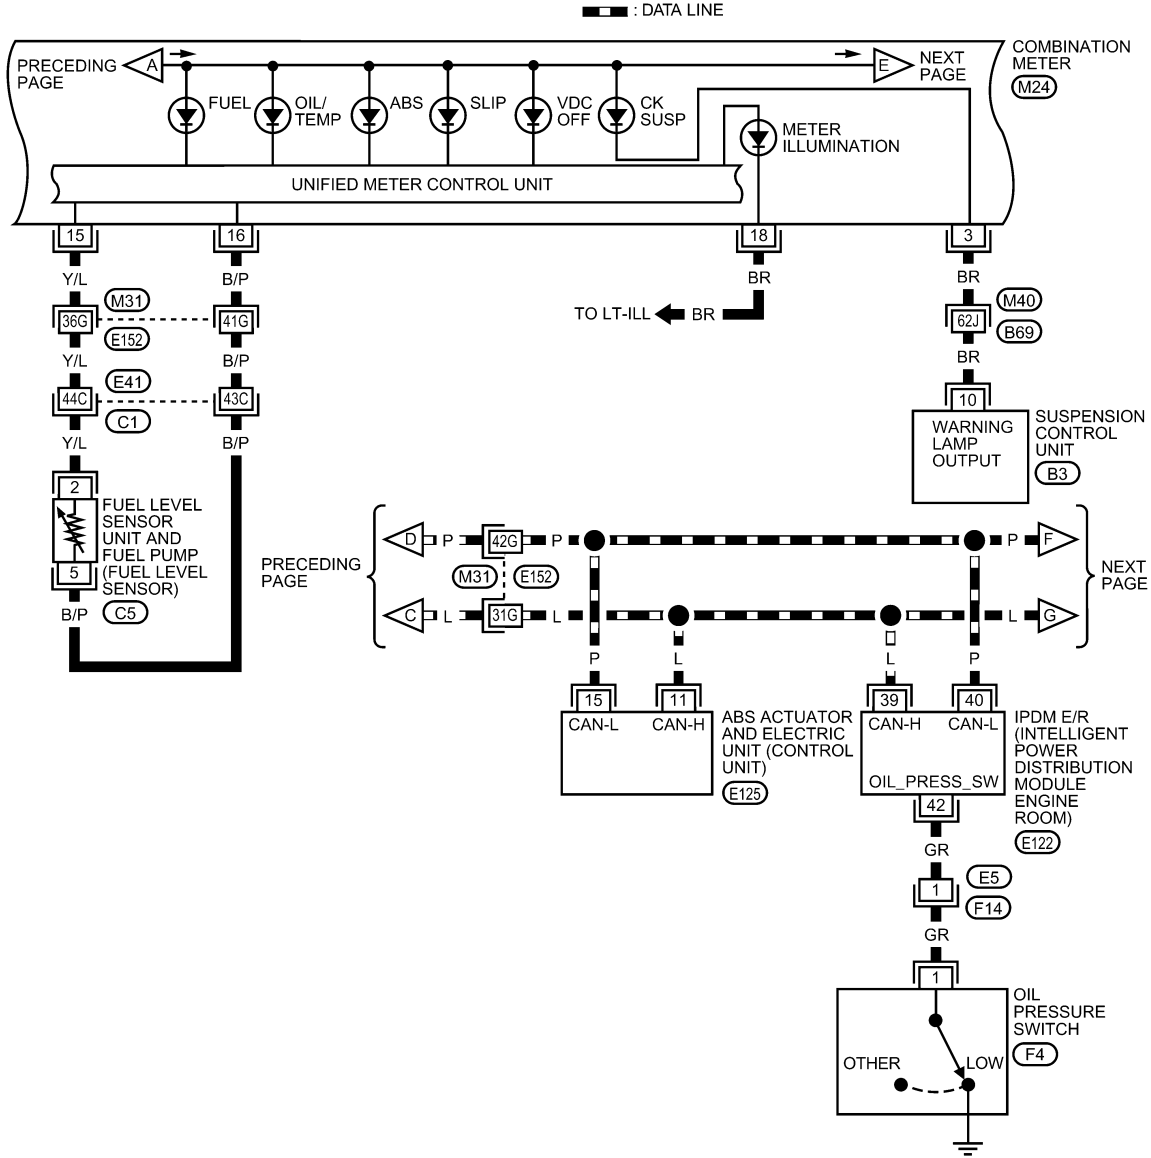

AWNWA0336G


WARNING LAMPS

< SERVICE INFORMATION >

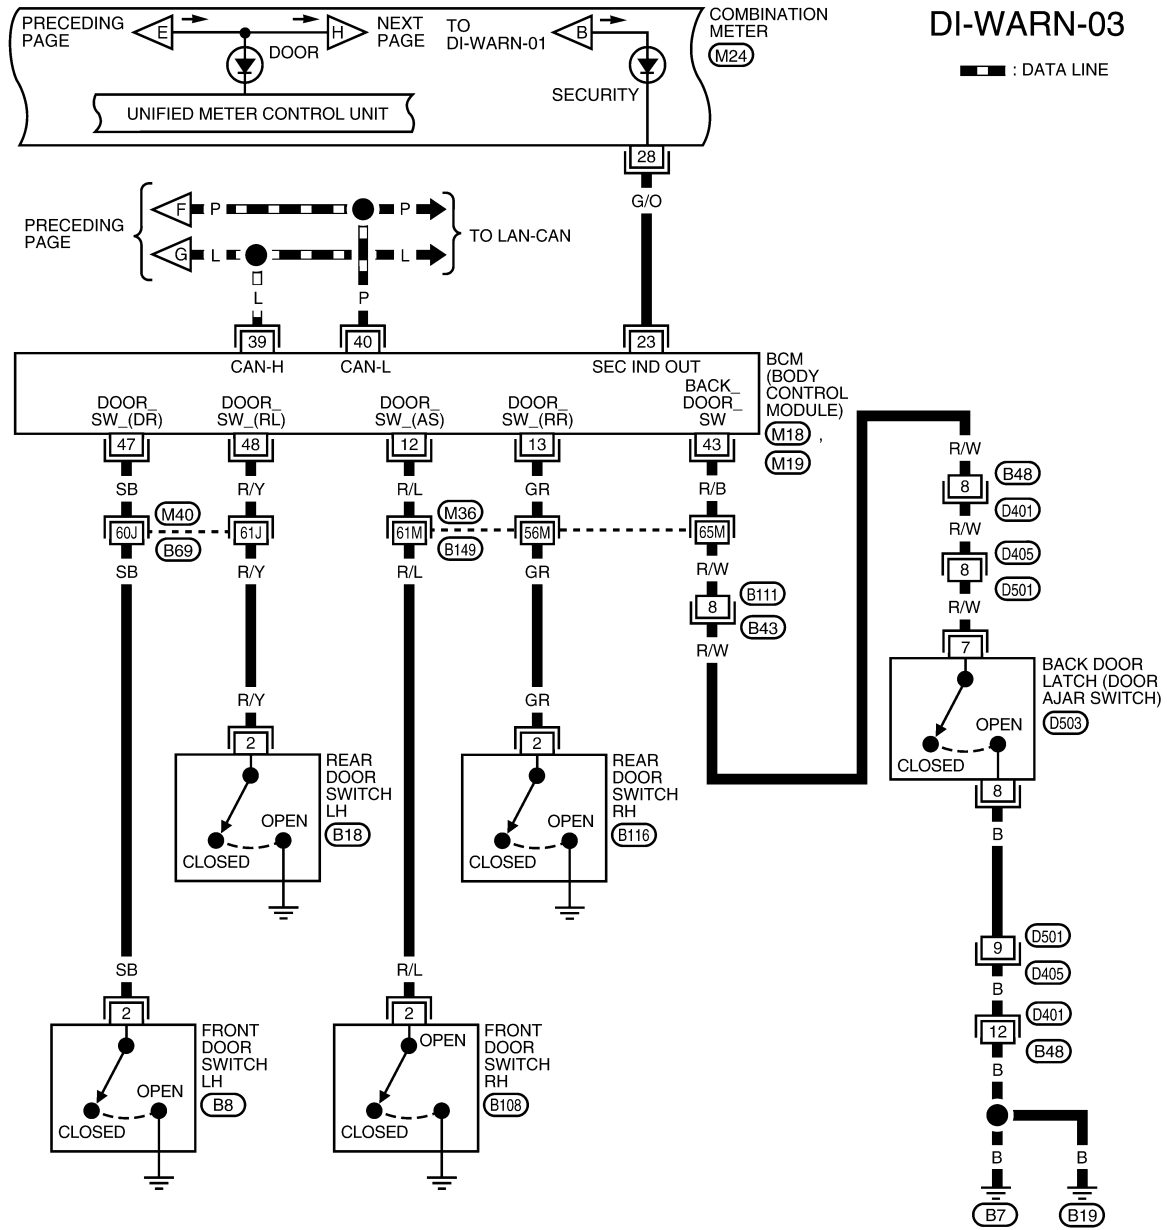

DI-WARN-03

— : DATA LINE

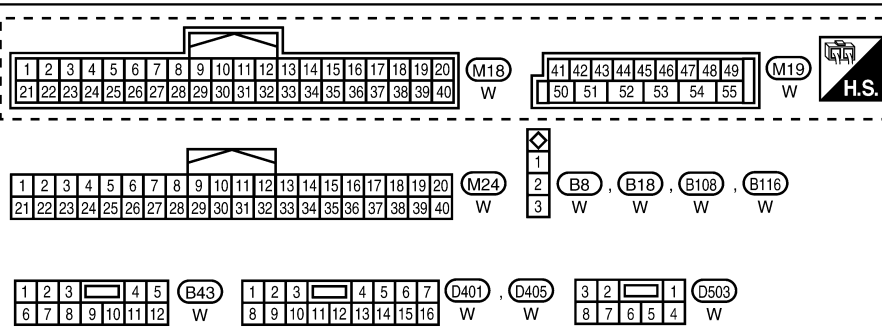

REFER TO THE FOLLOWING.



(M36), (M40) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA5137E

WARNING LAMPS

< SERVICE INFORMATION >

DI-WARN-04

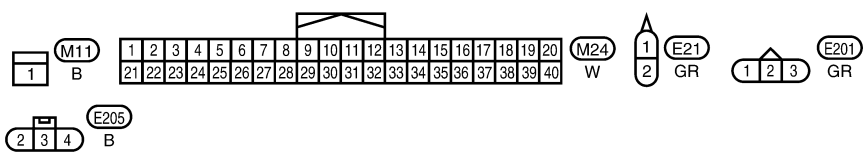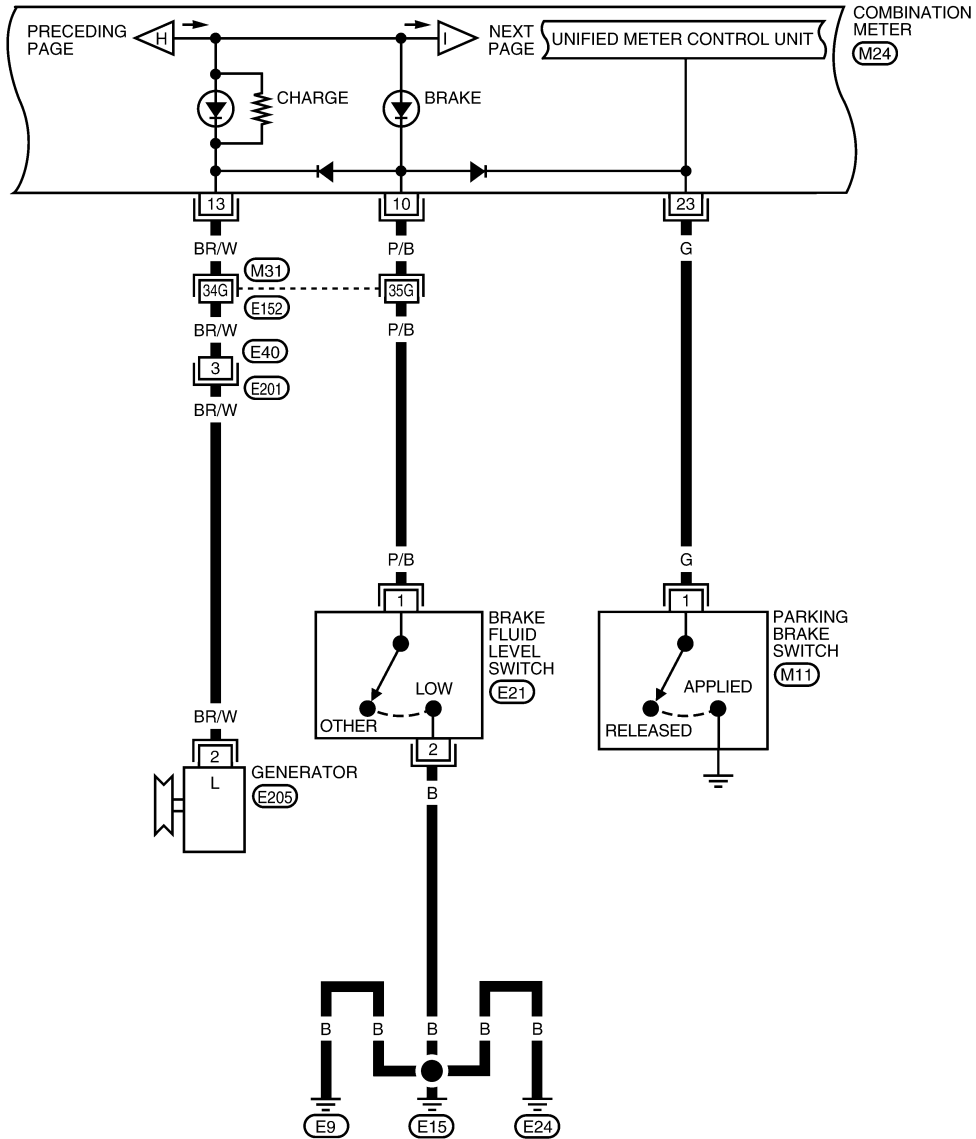

REFER TO THE FOLLOWING.

(M31) - SUPER MULTIPLE JUNCTION (SMJ)





WKWA5138E

WARNING LAMPS

< SERVICE INFORMATION >

4W : WITH 4-WHEEL DRIVE

DI-WARN-05

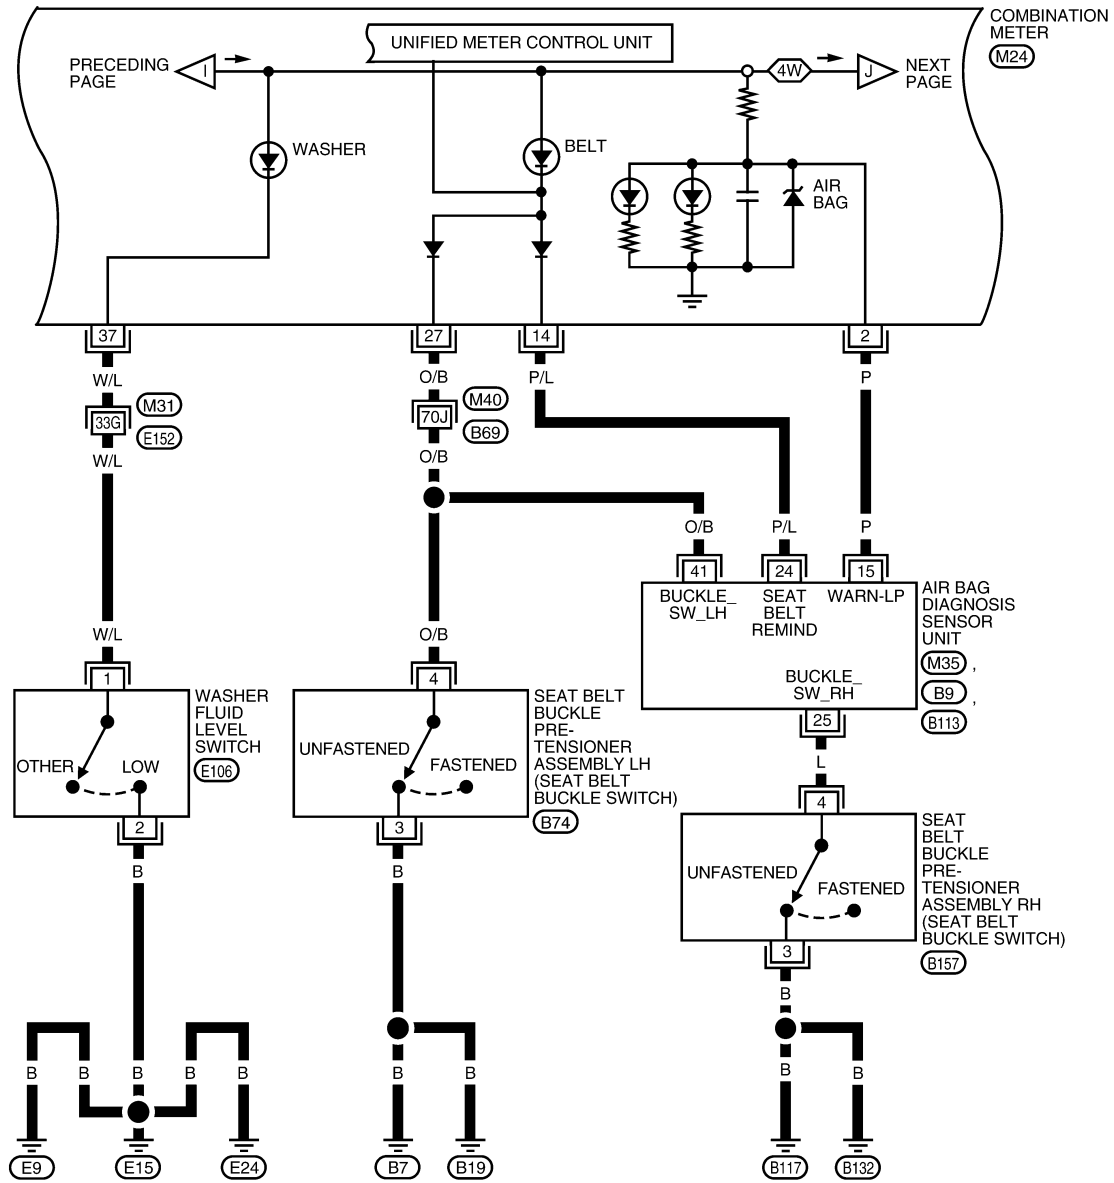

REFER TO THE FOLLOWING.
(M31) (M40) - SUPER
MULTIPLE JUNCTION (SMJ)



WKWA5139E

WARNING LAMPS

< SERVICE INFORMATION >

4WD Models

DI-WARN-06

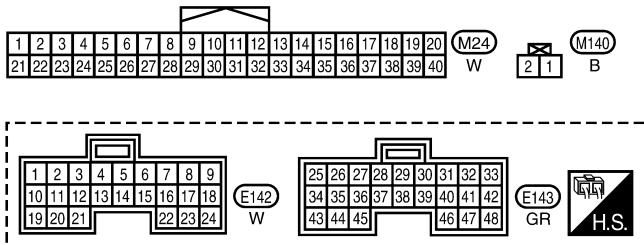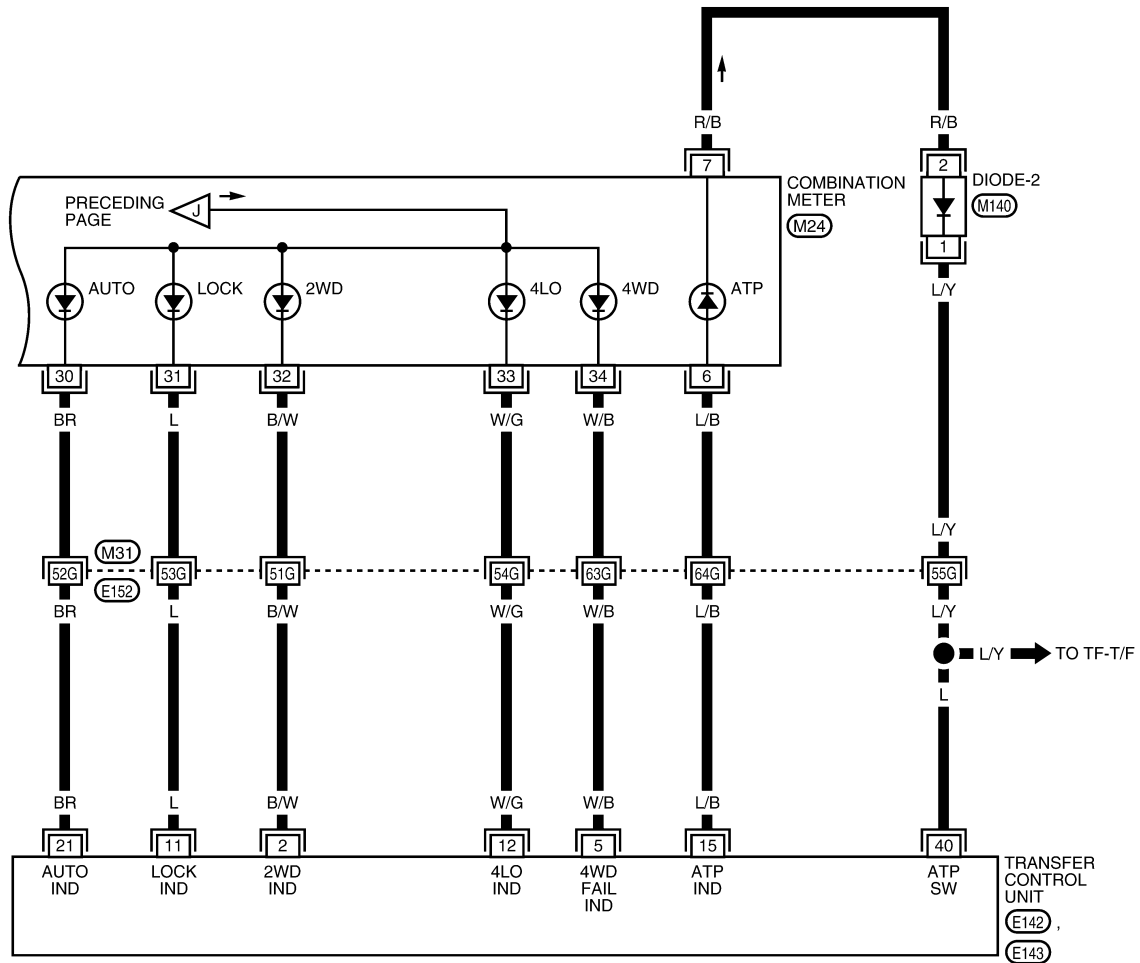

REFER TO THE FOLLOWING.

(M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA5140E

Oil Pressure Warning Lamp Stays Off (Ignition Switch ON)

INFOID:000000003533506

1. CHECK SELF-DIAGNOSTIC RESULTS OF IPDM E/R

Select "IPDM E/R" on CONSULT-II, and perform self-diagnosis of IPDM E/R. Refer to [PG-18, "CONSULT-II Function \(IPDM E/R\)"](#).

Self-diagnostic results content

WARNING LAMPS

< SERVICE INFORMATION >

No malfunction detected>>GO TO 2.

Malfunction detected>>GO TO [PG-18, "CONSULT-II Function \(IPDM E/R\)".](#)

2.CHECK IPDM E/R INPUT SIGNAL

Select "IPDM E/R" on CONSULT-II. Operate ignition switch with "OIL P SW" of "DATA MONITOR" and check operation status.


When ignition switch is in ON : OIL P SW CLOSE position (Engine stopped)

When engine running : OIL P SW OPEN

OK or NG

OK >> Replace combination meter. Refer to [IP-10, "Removal and Installation".](#)

NG >> GO TO 3.

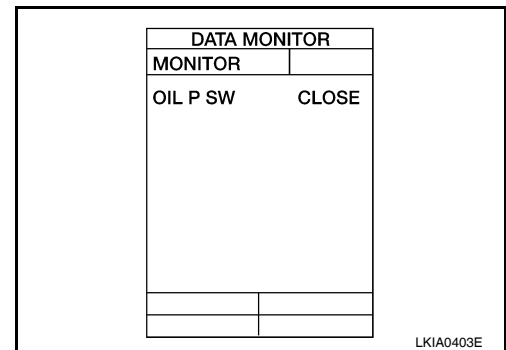

3.CHECK OIL PRESSURE SWITCH CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector E122 and oil pressure switch connector F4.
3. Check continuity between IPDM E/R harness connector E122 (A) terminal 42 and oil pressure switch harness connector F4 (B) terminal 1.

Continuity should exist.

OK or NG

OK >> GO TO 4.

NG >> Repair harness or connector.

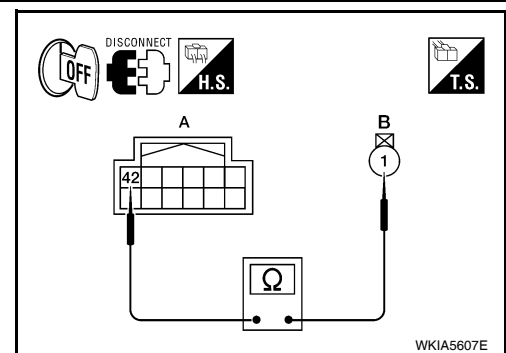

4.CHECK OIL PRESSURE SWITCH

Check oil pressure switch. Refer to [DI-21, "Electrical Component Inspection".](#)

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-28, "Removal and Installation of IPDM E/R".](#)

NG >> Replace oil pressure switch.

Oil Pressure Warning Lamp Does Not Turn Off (Oil Pressure Is Normal)

INFOID:000000003533507

NOTE:

For oil pressure inspection, refer to [DI-21, "Electrical Component Inspection".](#)

1.CHECK ENGINE OIL PRESSURE GAUGE OPERATION

Observe operation of engine oil pressure gauge.

Does engine oil pressure gauge function properly?

YES >> Replace the combination meter. Refer to [IP-10, "Removal and Installation".](#)

NO >> GO TO [DI-17, "Engine Oil Pressure Signal Inspection".](#)

A/T INDICATOR

< SERVICE INFORMATION >



A/T INDICATOR

Wiring Diagram - AT/IND -

INFOID:000000003533508

DI-AT/IND-01

■ : DATA LINE

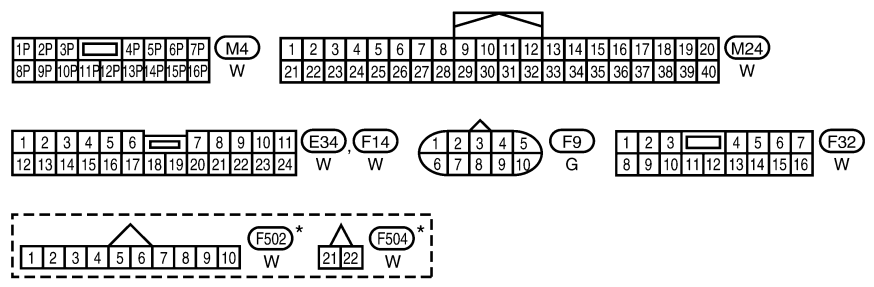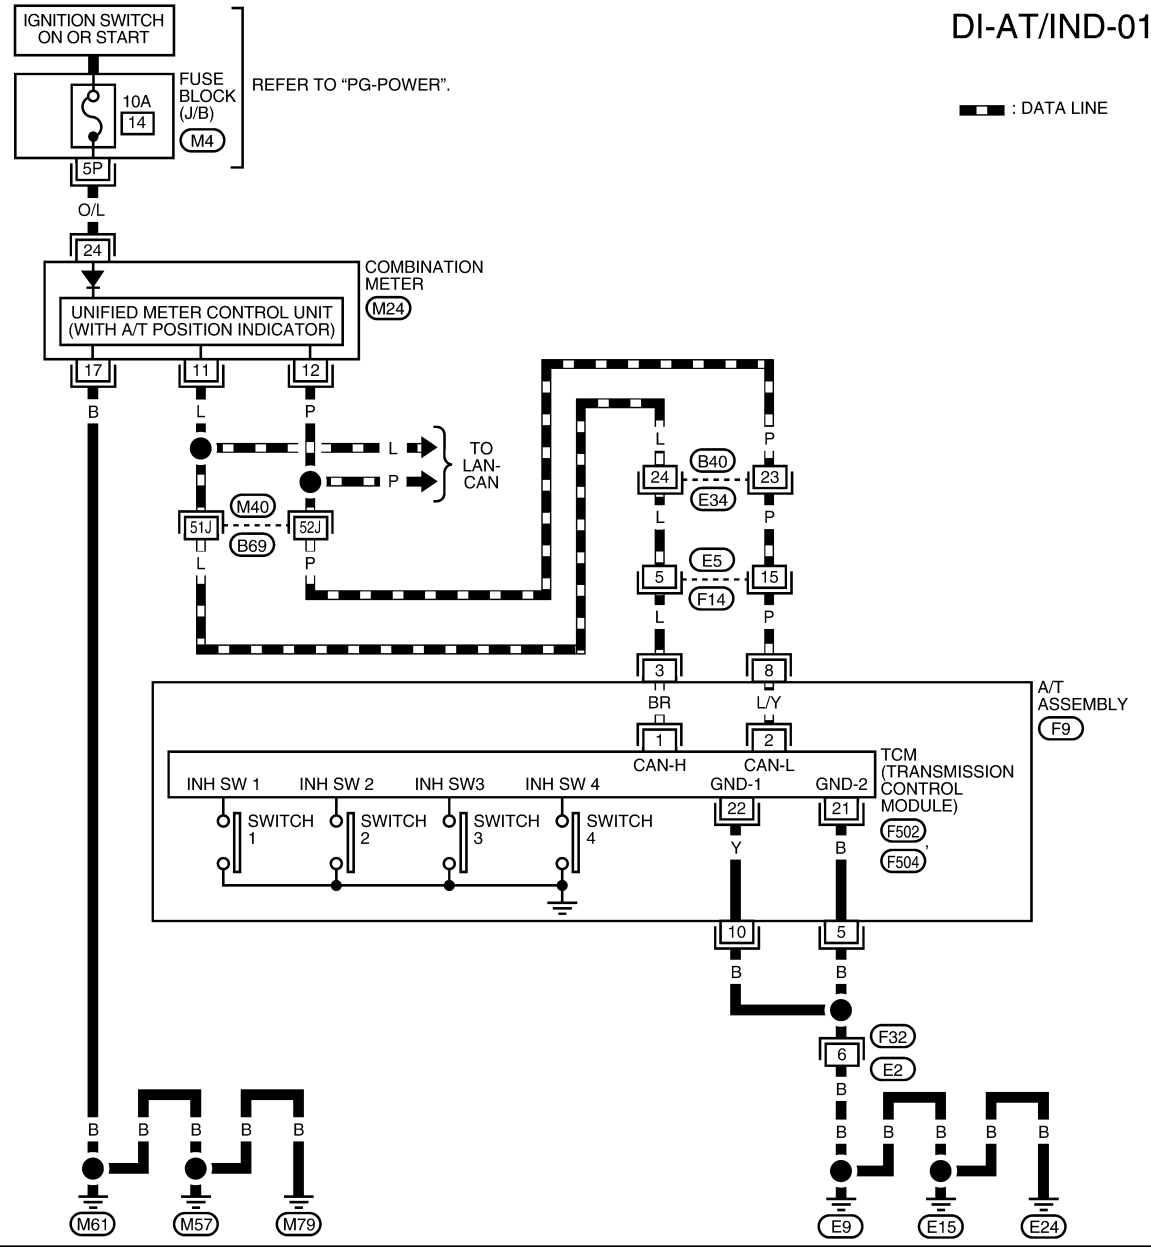

REFER TO THE FOLLOWING.
 (M40) - SUPER MULTIPLE JUNCTION (SMJ)

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

WKWA3626E

A/T Indicator Does Not Illuminate

INFOID:000000003533509

1. CHECK SELF-DIAGNOSIS OF COMBINATION METER

Perform combination meter self-diagnosis. Refer to [DI-12. "Self-Diagnosis Mode of Combination Meter"](#).

A/T INDICATOR

< SERVICE INFORMATION >

OK or NG

OK >> GO TO 2.

NG >> Replace the combination meter. Refer to [IP-10. "Removal and Installation"](#).

2.CHECK TCM

Perform self-diagnosis of TCM. Refer to [AT-83. "CONSULT-II Function \(A/T\)"](#).

OK or NG

OK >> Replace the combination meter. Refer to [IP-10. "Removal and Installation"](#).

NG >> Refer to [AT-83. "CONSULT-II Function \(A/T\)"](#).

A

B

C

D

E

F

G

H

I

J

DI

L

M

N

O

P


WARNING CHIME

< SERVICE INFORMATION >

WARNING CHIME

Component Parts and Harness Connector Location

INFOID:000000003533510

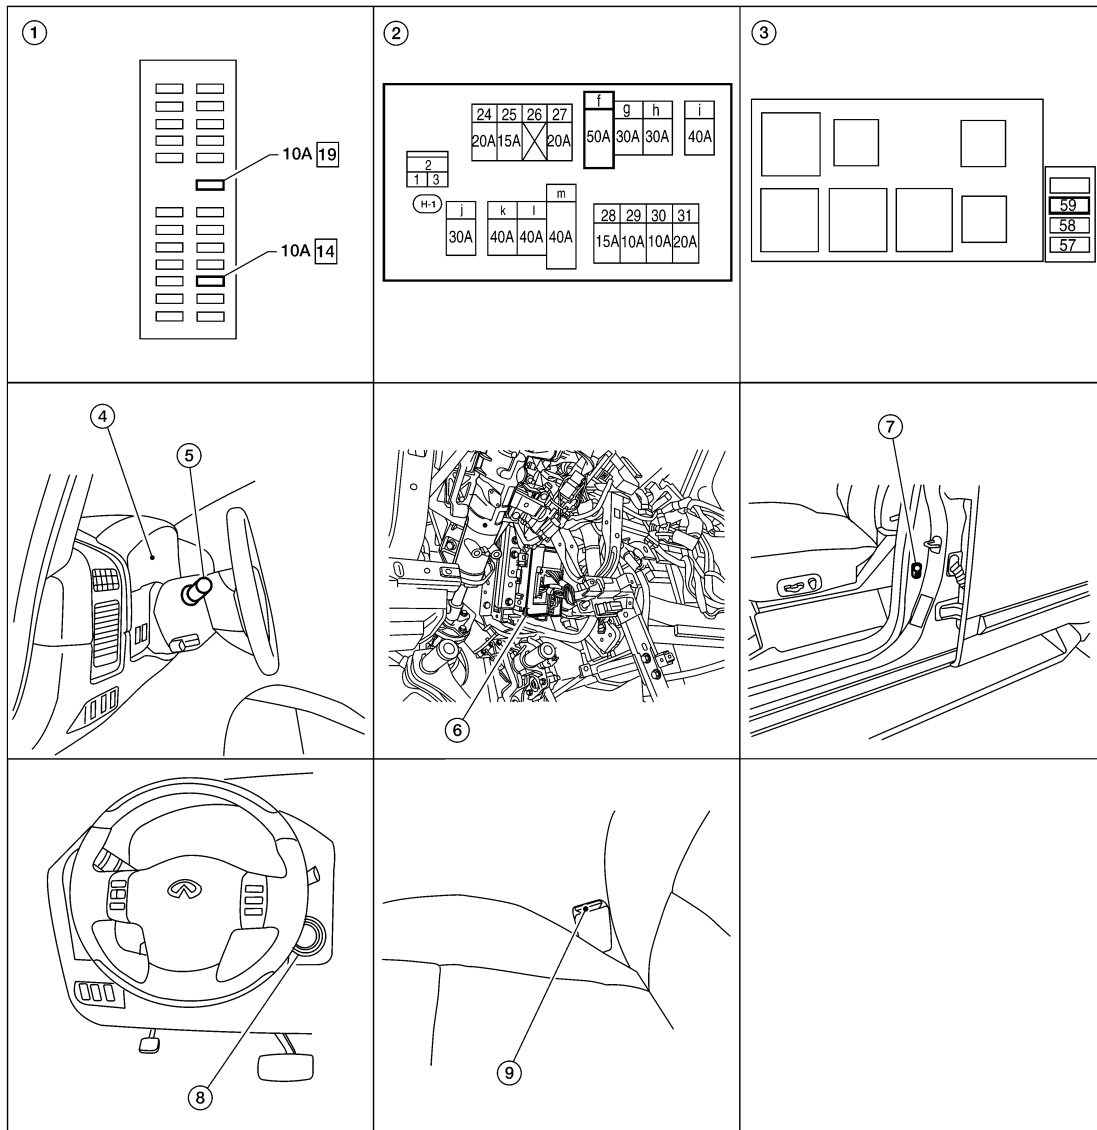

WKIA4594E

- | | | |
|----------------------------|---|---|
| 1. Fuse block (J/B) | 2. Fuse and fusible link box | 3. Fuse and relay box |
| 4. Combination meter M24 | 5. Combination switch (lighting switch) M28 | 6. BCM M18, M19, M20 (view with instrument lower panel LH removed) |
| 7. Front door switch LH B8 | 8. Key switch and key lock solenoid M27 | 9. Seat belt buckle pre-tensioner assembly LH (seat belt buckle switch) B74 |

System Description

INFOID:000000003533511

FUNCTION

Power is supplied at all times

- through 50A fusible link (letter f, located in the fuse and fusible link box)
- to BCM terminal 70,
- through 10A fuse [No. 19, located in the fuse block (J/B)]

WARNING CHIME

< SERVICE INFORMATION >

- to key switch and key lock solenoid terminal 3.
- With ignition switch in ON or START position, power is supplied
- through 10A fuse (No. 59, located in the fuse and relay box)
 - to BCM terminal 38.

Ground is supplied

- to BCM terminal 67
- through body grounds M57, M61, and M79.

NOTE:

When ignition key warning chime, light warning chime, and seat belt warning chime are required at the same time, the priorities for each chime are the following.

1. Light warning chime
2. Ignition key warning chime
3. Seat belt warning chime

IGNITION KEY WARNING CHIME

With the key inserted in the ignition switch, the ignition switch in OFF position, and the driver's door open, the warning chime will sound.

Power is supplied

- through key switch and key lock solenoid terminal 4
- to BCM terminal 37.

Ground is supplied

- to BCM terminal 47
- through front door switch LH terminal 2.

Front door switch LH is case grounded.

BCM detects key inserted into the ignition switch, and sends key warning signal to combination meter via CAN communication lines. When the combination meter receives key warning signal, it sounds warning chime.

LIGHT WARNING CHIME

With the key removed from the ignition switch, the driver's door open, and the lighting switch (part of the combination switch) in 1st or 2nd position, the warning chime will sound. [Except when headlamp battery saver control operates (5 minutes after ignition switch is turned to OFF or ACC position) and headlamps do not illuminate.]

Signal is supplied

- from combination switch (lighting switch) terminals 1, 2, 3, 4, 5, 6, 7, 8, 9 and 10
- to BCM terminals 2, 3, 4, 5, 6, 32, 33, 34, 35 and 36.

NOTE:

BCM detected lighting switch in 1st or 2nd position. Refer to [LT-72. "Combination Switch Reading Function"](#).

Ground is supplied

- to BCM terminal 47
- through front door switch LH terminal 2.

Front door switch LH is case grounded.

BCM detects headlamps are illuminated, and sends light warning signal to combination meter CAN communication lines. When the combination meter receives light warning signal, it sounds warning chime.

SEAT BELT WARNING CHIME

When the ignition switch is turned ON with the seat belt unfastened [seat belt buckle pre-tensioner assembly LH (seat belt buckle switch) unfastened], warning chime will sound for approximately 6 seconds.

Ground is supplied

- to combination meter terminal 27
- through seat belt buckle pre-tensioner assembly LH (seat belt buckle switch) terminal 4.

Seat belt buckle pre-tensioner assembly LH (seat belt buckle switch) terminal 3 is grounded through body grounds B7 and B19.

The combination meter sends seat belt buckle switch LH unfastened signal to BCM via CAN communication line.

BCM receives seat belt buckle pre-tensioner assembly LH (seat belt buckle switch) unfastened signal from combination meter via CAN communication line, and sends seat belt warning signal to the combination meter via CAN communication line. When the combination meter receives the seat belt warning signal, it sounds the warning chime. The BCM controls the (6 second) duration of the seat belt warning chime.

CAN Communication System Description

INFOID:000000003533512



Refer to [LAN-4](#).

WARNING CHIME

< SERVICE INFORMATION >

Wiring Diagram - CHIME -

INFOID:000000003533513

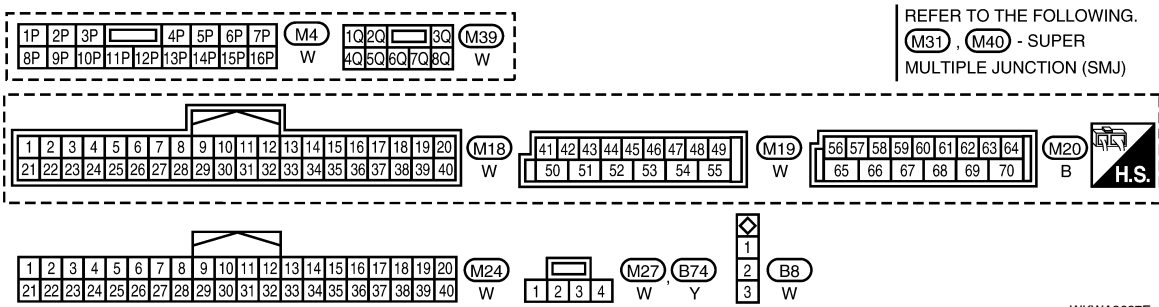
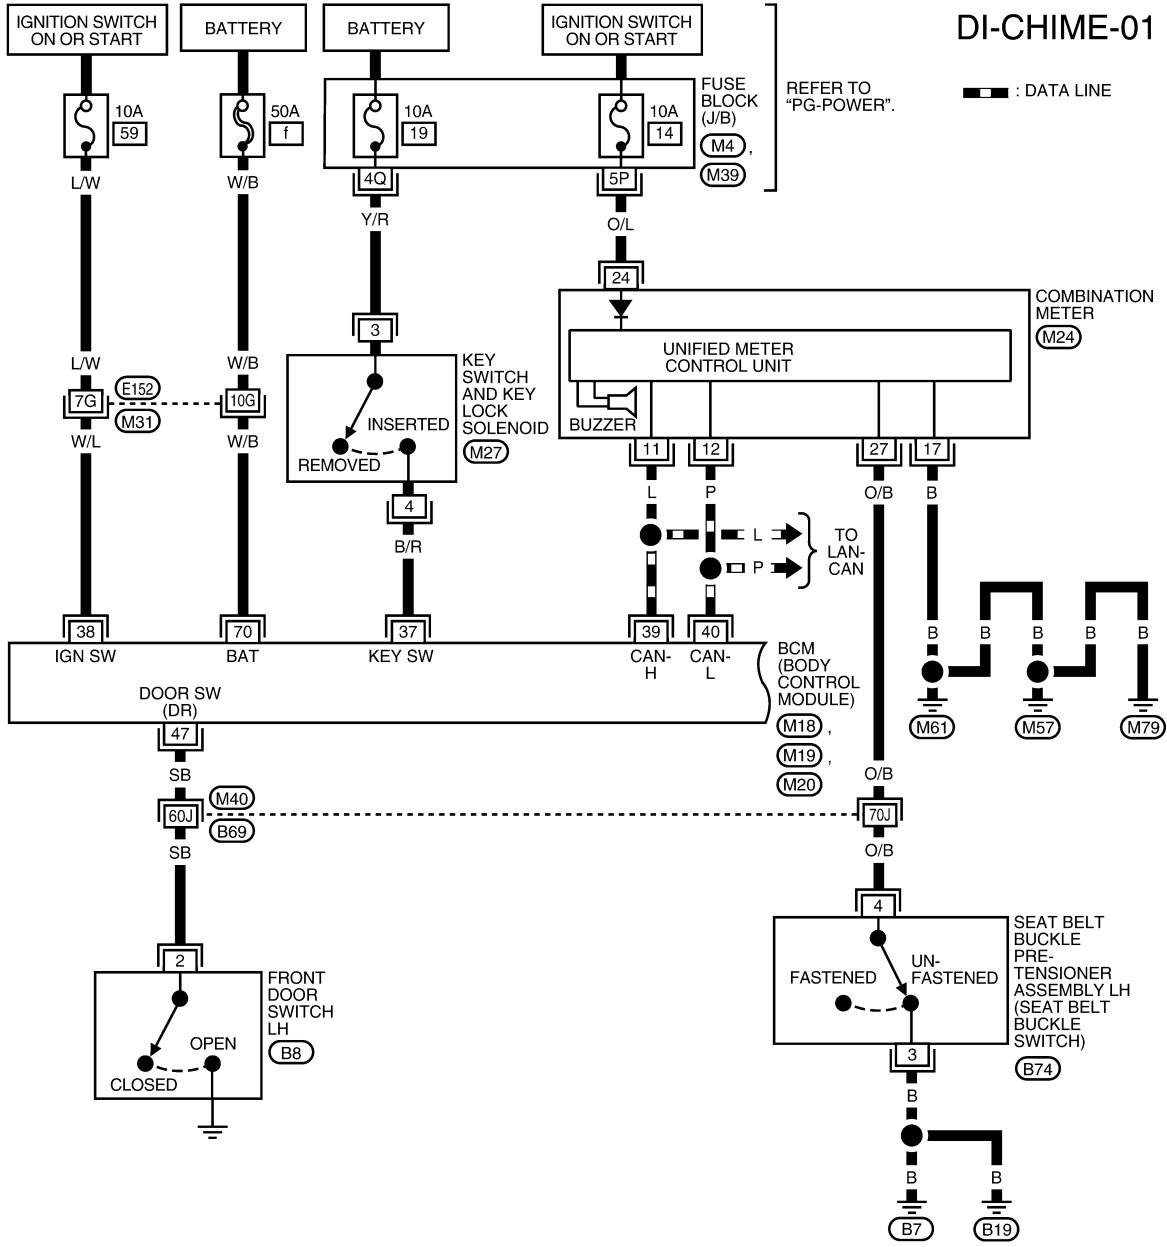


WKWA3627E

WARNING CHIME

< SERVICE INFORMATION >

DI-CHIME-02

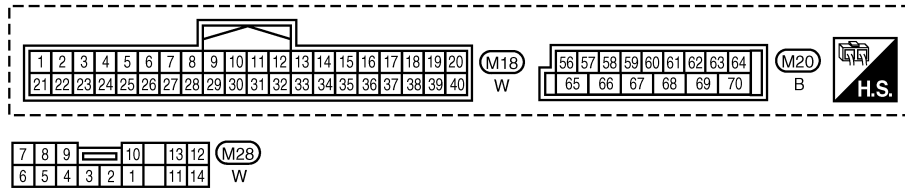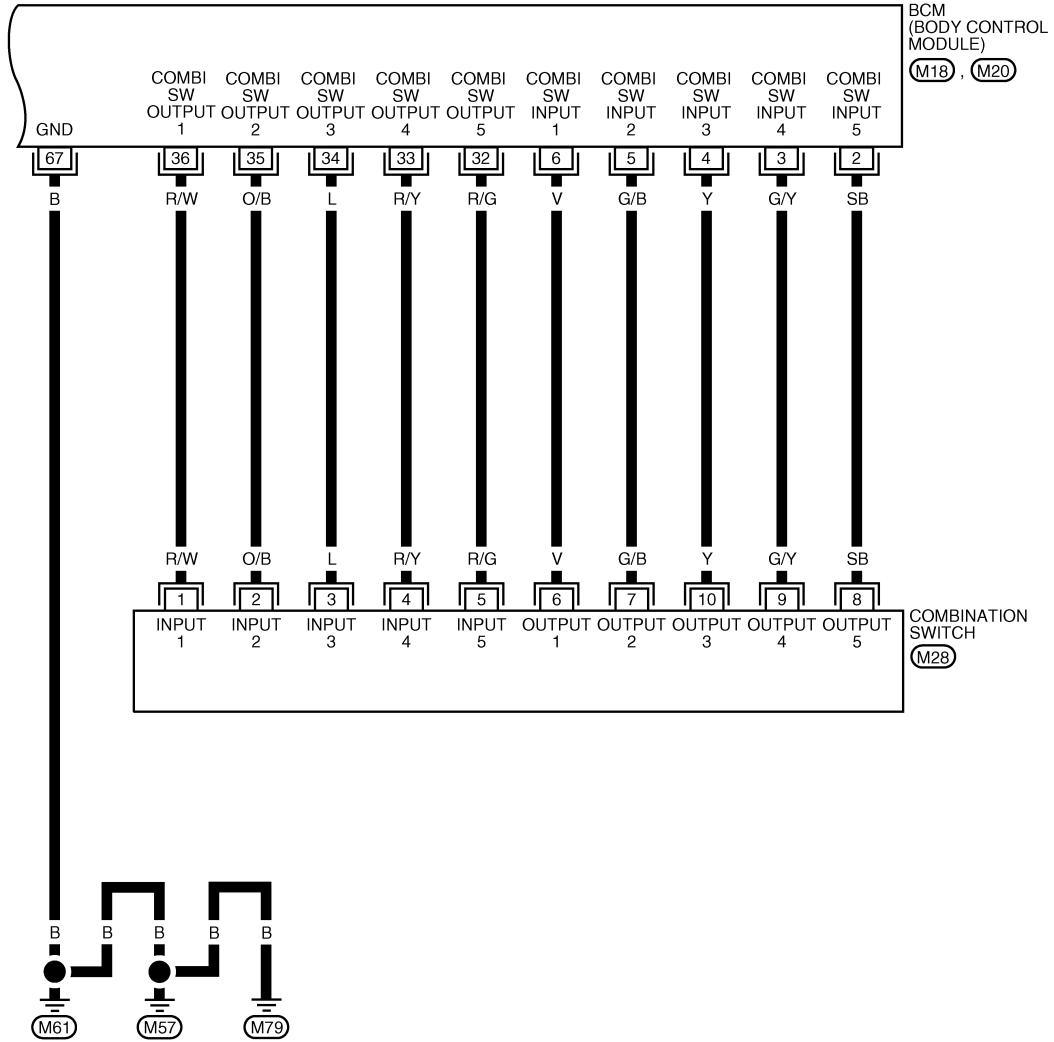

Terminal and Reference Value for BCM

Refer to [BCS-11, "Terminal and Reference Value for BCM"](#).

Terminal and Reference Value for Combination Meter

Refer to [DI-11, "Terminal and Reference Value for Combination Meter"](#).

WKWA3064E

INFOID:000000003533514

INFOID:000000003533515

WARNING CHIME

< SERVICE INFORMATION >

How to Proceed with Trouble Diagnosis

INFOID:000000003533516

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [DI-36, "System Description"](#).
3. Perform the preliminary check. Refer to [DI-40, "Preliminary Check"](#).
4. Check symptom and repair or replace the cause of malfunction.
5. Does the warning chime operate properly? If so, go to 6. If not, go to 3.
6. Inspection End.

Preliminary Check

INFOID:000000003533517

INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT

Refer to [BCS-15, "BCM Power Supply and Ground Circuit Inspection"](#).

CONSULT-II Function (BCM)

INFOID:000000003533518

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.

BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
CONFIGURATION	Performs BCM configuration read/write functions.	

CONSULT-II START PROCEDURE

Refer to [GI-36, "CONSULT-II Start Procedure"](#).

DATA MONITOR

Display Item List

Monitored item	Description
IGN ON SW	Indicates [ON/OFF] condition of ignition switch.
KEY ON SW	Indicates [ON/OFF] condition of key switch.
DOOR SW-DR	Indicates [ON/OFF] condition of front door switch (driver side).
LIGHT SW 1ST	Indicates [ON/OFF] condition of lighting switch.

ACTIVE TEST

Display Item List

Test item	Malfunction is detected when
LIGHT WARN ALM	This test is able to check light warning chime operation. Light warning chime sounds for 2 seconds after touching "ON" on CONSULT-II screen.
IGN KEY WARN ALM	This test is able to check key warning chime operation. Key warning chime sounds for 2 seconds after touching "ON" on CONSULT-II screen.
SEAT BELT WARN TEST	This test is able to check seat belt warning chime operation. Seat belt warning chime sounds for 2 seconds after touching "ON" on CONSULT-II screen.

SELF-DIAGNOSTIC RESULTS

WARNING CHIME

< SERVICE INFORMATION >

Display Item List

Monitored Item	CONSULT-II display	Description
CAN communication	CAN communication [U1000]	Malfunction is detected in CAN communication.
CAN communication system	CAN communication system 1 to 6 [U1000]	Malfunction is detected in CAN system.

All Warning Chimes Do Not Operate


INFOID:000000003533519

1. CHECK BCM CHIME OPERATION

Select "BUZZER" on CONSULT-II, and perform "LIGHT WARN ALM", "IGN KEY WARN ALM", OR "SEAT BELT WARN TEST" active test.

Does chime sound?

- YES >> Replace the BCM. Refer to [BCS-24, "BCM"](#).
- NO >> Replace the combination meter. Refer to [IP-10, "Removal and Installation"](#).

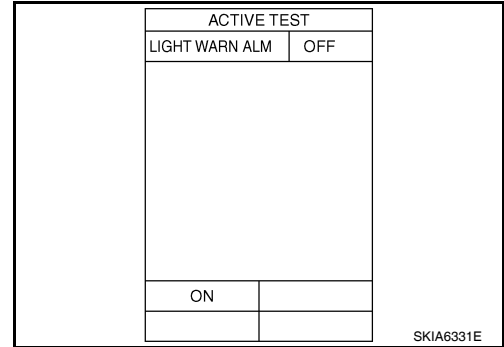

Key Warning Chime and Light Warning Chime Do Not Operate (Seat Belt Warning Chime Does Operate)

INFOID:000000003533520


1. CHECK BCM INPUT SIGNAL

Ⓜ With CONSULT-II

- Select "BCM" on CONSULT-II.
- With "DATA MONITOR" of "BUZZER", confirm "DOOR SW-DR" changes with the status of front door LH.

When front door LH is opened : DOOR SW-DR ON

When front door LH is closed : DOOR SW-DR OFF

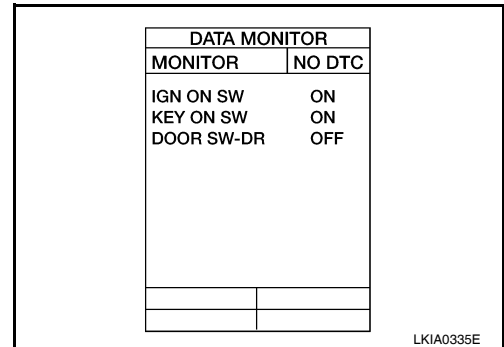


⊗ Without CONSULT-II

Check voltage between BCM harness connector M19 terminal 47 and ground.

When front door LH is opened : Approx. 0V

When front door LH is closed : Approx. 5V

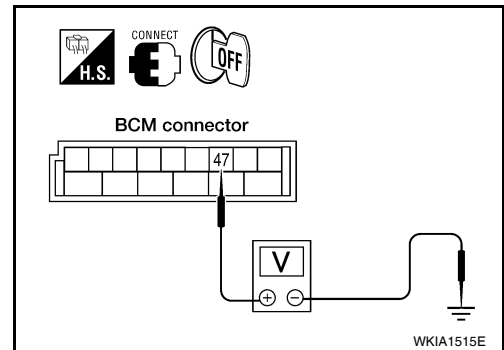

OK or NG

- OK >> Replace the BCM. Refer to [BCS-24, "BCM"](#).
- NG >> GO TO 2.

2. CHECK FRONT DOOR SWITCH LH CIRCUIT

WARNING CHIME


< SERVICE INFORMATION >

1. Turn ignition switch OFF.
2. Disconnect BCM connector M19 and front door switch LH connector B8.
3. Check continuity between BCM harness connector M19 terminal 47 and front door switch LH harness connector B8 terminal 2.

Continuity should exist.

4. Check continuity between BCM harness connector M19 terminal 47 and ground.

Continuity should not exist.

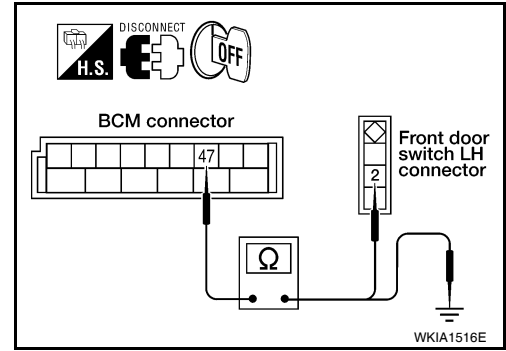

OK or NG

- OK >> GO TO 3.
NG >> Repair harness or connector.

3.CHECK FRONT DOOR SWITCH LH


Check continuity between front door switch LH terminal 2 and exposed metal of switch while pressing and releasing switch.

When front door switch LH is released : Continuity should exist.

When front door switch LH is pressed : Continuity should not exist.

OK or NG

- OK >> Replace the BCM. Refer to [BCS-24, "BCM"](#).
NG >> Replace the front door switch LH.

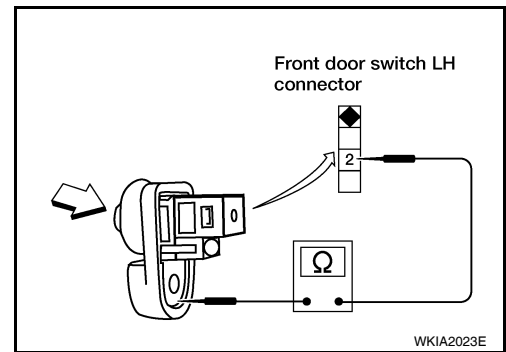

INFOID:000000003533521

Key Warning Chime Does Not Operate

1.CHECK FUSE

Check if the key switch fuse [No. 19, located in the fuse block (J/B)] is blown. Refer to [DI-38, "Wiring Diagram - CHIME -"](#).

Is the fuse blown?

- YES >> Replace the fuse. Be sure to repair the cause of malfunction before installing new fuse.
NO >> GO TO 2.

2.CHECK WARNING CHIME OPERATION

With key removed from the ignition key cylinder and the front door LH open, turn the lighting switch to 1st or 2nd position.

Does warning chime sound?

- YES >> GO TO 3.
NO >> Go to [DI-41, "All Warning Chimes Do Not Operate"](#) or [DI-41, "Key Warning Chime and Light Warning Chime Do Not Operate \(Seat Belt Warning Chime Does Operate\)"](#).

3.CHECK BCM INPUT SIGNAL

 With CONSULT-II


WARNING CHIME

< SERVICE INFORMATION >

With "DATA MONITOR" of "BUZZER", confirm "KEY ON SW" changes when the key is inserted/removed from the ignition key cylinder.

**When key is inserted in ignition : KEY ON SW ON
key cylinder**

When key is removed from ignition key cylinder : KEY ON SW OFF

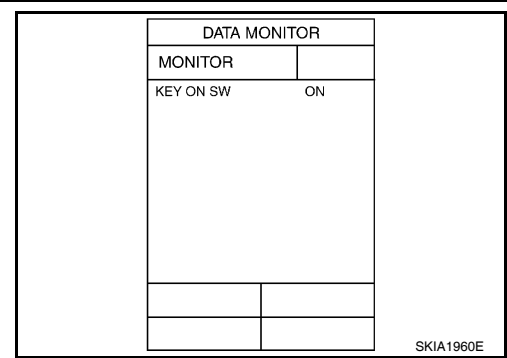

⊗ Without CONSULT-II

Check voltage between BCM harness connector M18 terminal 37 and ground.

Terminals			Condition	Voltage (V)
(+)		(-)		
Connector	Terminal			
M18	37	Ground	Key is inserted	Battery voltage
			Key is removed	0

OK or NG

- OK >> Replace the BCM. Refer to [BCS-24, "BCM"](#).
- NG >> GO TO 4.

4. CHECK KEY SWITCH

1. Turn ignition switch OFF.
2. Disconnect key switch and key lock solenoid connector.
3. Check continuity between key switch and key lock solenoid terminals 3 and 4.

Terminals		Condition	Continuity
3	4		
		Key is inserted	Yes
		Key is removed	No

OK or NG

- OK >> GO TO 5.
- NG >> Replace the key switch and key lock solenoid.

5. CHECK KEY SWITCH CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector M18 terminal 37 and key switch and key lock solenoid harness connector M27 terminal 4.

Continuity should exist.




3. Check continuity between BCM harness connector M18 terminal 37 and ground.

Continuity should not exist.

OK or NG

- OK >> GO TO 6.
- NG >> Repair harness or connector.

6. CHECK KEY SWITCH POWER SUPPLY CIRCUIT

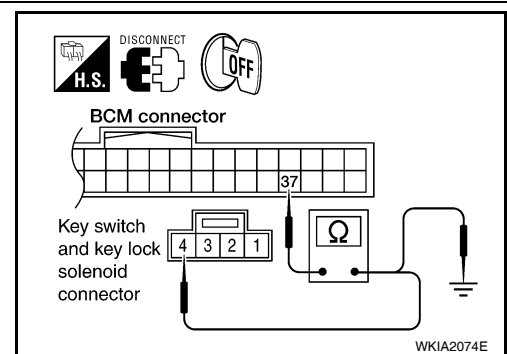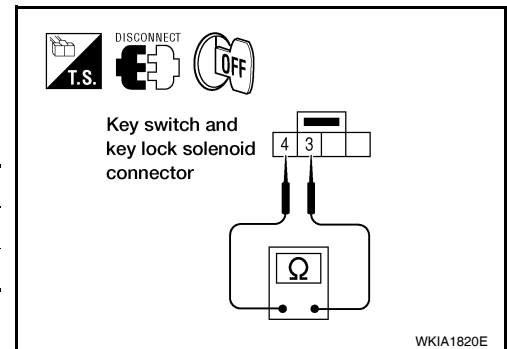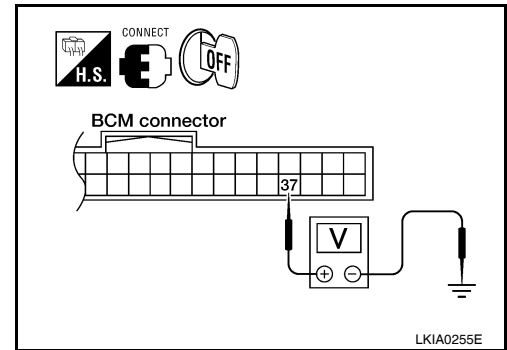

WARNING CHIME


< SERVICE INFORMATION >

Check voltage between key switch and key lock solenoid harness connector M27 terminal 3 and ground.

Battery voltage should exist.

OK or NG

- OK >> Replace the BCM. Refer to [BCS-24, "BCM"](#).
- NG >> Check harness for open or short between fuse and key switch and key lock solenoid.

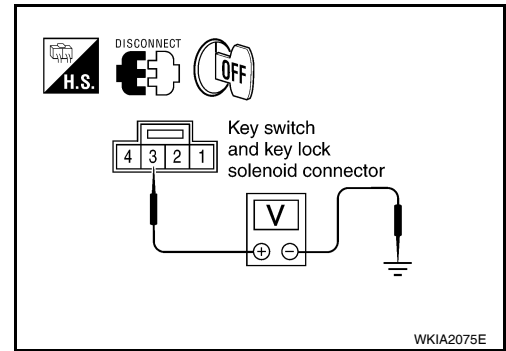

Light Warning Chime Does Not Operate

INFOID:000000003533522

1. CHECK WARNING CHIME OPERATION

Check key warning chime and seat belt warning chime functions.

Do key warning chime and seat belt warning chime sound?

- YES >> GO TO 2.
- NO >> Go to [DI-41, "All Warning Chimes Do Not Operate"](#).

2. CHECK BCM INPUT SIGNAL

With CONSULT-II

1. Select "BCM".
2. With "DATA MONITOR" of "BUZZER", confirm "LIGHT SW 1ST" status changes when the lighting switch is moved from ON (1st position) to OFF.


Lighting switch ON (1st position) : LIGHT SW 1ST ON
Lighting switch OFF : LIGHT SW 1ST OFF

Without CONSULT-II

Check combination switch. Refer to [LT-72, "Combination Switch Reading Function"](#).

OK or NG

- OK >> Replace the BCM. Refer to [BCS-24, "BCM"](#).
- NG >> Check lighting switch. Refer to [LT-72, "Combination Switch Reading Function"](#).

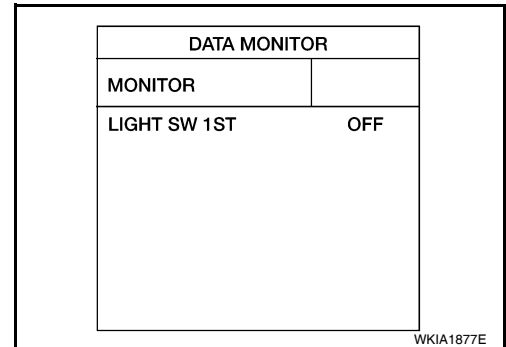

Seat Belt Warning Chime Does Not Operate

INFOID:000000003533523

1. CHECK WARNING CHIME OPERATION

1. With key removed from the ignition and the front door LH open, turn the lighting switch to 1st or 2nd position.
2. Return lighting switch to OFF position, and insert key into ignition.

Does warning chime sound for both steps?

- YES >> GO TO 2.
- NO >> Go to [DI-41, "All Warning Chimes Do Not Operate"](#).

2. CHECK SEAT BELT WARNING LAMP OPERATION

Turn ignition switch ON. Buckle and unbuckle the driver seat belt while watching seat belt warning lamp.

When seat belt is fastened : Warning lamp OFF
When seat belt is unfastened : Warning lamp ON

OK or NG

- OK >> Replace the BCM. Refer to [BCS-24, "BCM"](#).
- NG >> GO TO 3.


WARNING CHIME

< SERVICE INFORMATION >

3. CHECK COMBINATION METER INPUT SIGNAL

1. Turn ignition switch ON.
2. Check voltage between combination meter harness connector M24 terminal 27 and ground.

Terminals		Condition	Voltage (V) (Approx.)
(+)	(-)		
Connector	Terminal		
M24	27	Seat belt is fastened	Battery voltage
		Seat belt is unfastened	0

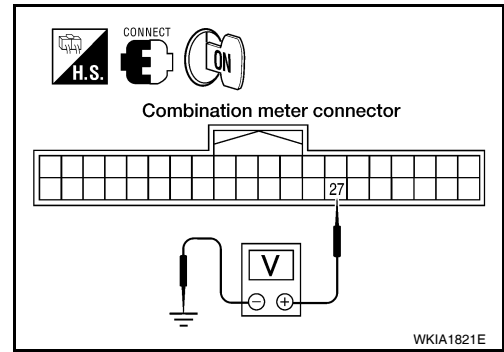


OK or NG

- OK >> Replace the combination meter. Refer to [IP-10, "Removal and Installation"](#).
 NG >> GO TO 4.

4. CHECK SEAT BELT BUCKLE SWITCH

1. Turn ignition switch OFF.
2. Disconnect seat belt buckle pre-tensioner assembly LH (seat belt buckle switch) connector.
3. Check continuity between seat belt buckle pre-tensioner assembly LH (seat belt buckle switch) terminals 3 and 4.

Terminals		Condition	Continuity
3	4		
		Seat belt is fastened	No
		Seat belt is unfastened	Yes

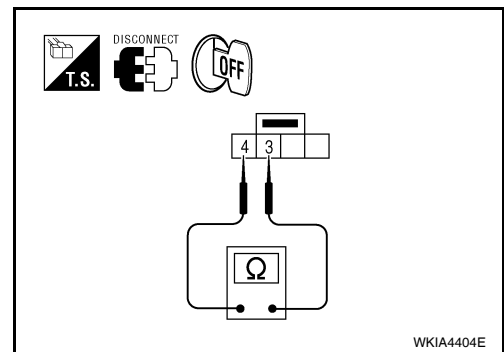

OK or NG

- OK >> GO TO 5.
 NG >> Replace the seat belt buckle pre-tensioner assembly LH (seat belt buckle switch).


5. CHECK SEAT BELT BUCKLE SWITCH CIRCUIT

1. Disconnect combination meter connector.
2. Check continuity between combination meter harness connector M24 (B) terminal 27 and seat belt buckle pre-tensioner assembly LH (seat belt buckle switch) harness connector B74 (A) terminal 4.

Continuity should exist.

3. Check continuity between combination meter harness connector M24 (B) terminal 27 and ground.

Continuity should not exist.

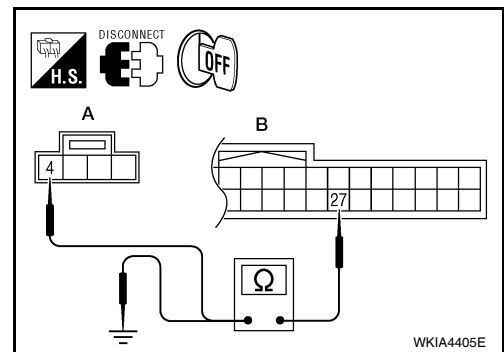

OK or NG

- OK >> Check seat belt buckle pre-tensioner assembly LH (seat belt buckle switch) ground circuit.
 NG >> Repair harness or connector.


REAR SONAR SYSTEM

< SERVICE INFORMATION >

REAR SONAR SYSTEM

Component Parts and Harness Connector Location

INFOID:000000003533524

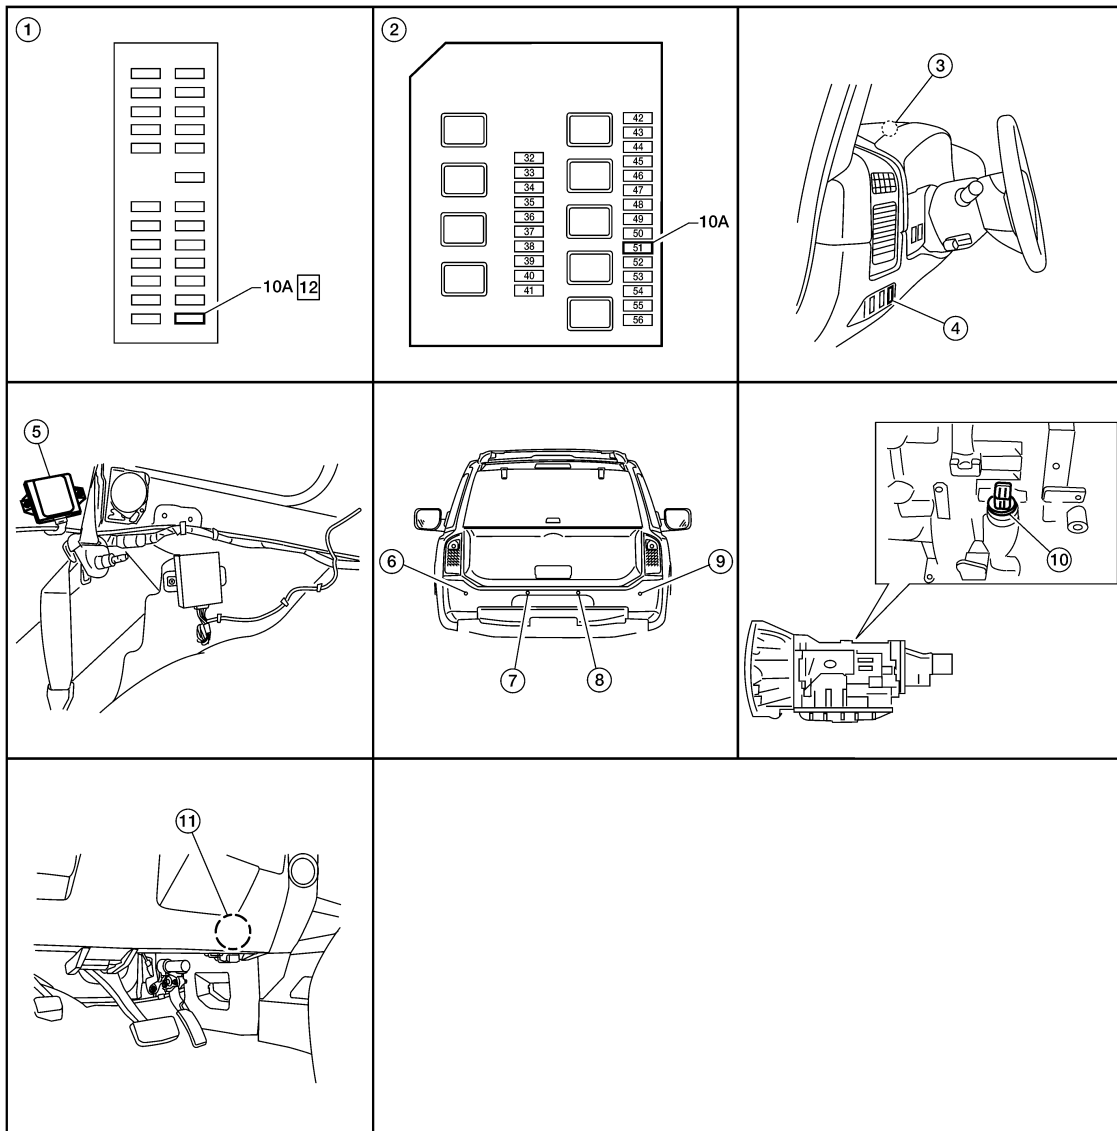

WKIA4595E

- | | | |
|--------------------------------------|--|------------------------------------|
| 1. Fuse block (J/B) | 2. IPDM E/R E119 | 3. Sonar buzzer M117 |
| 4. Rear sonar system OFF switch M116 | 5. Sonar control unit B56 (view of left rear body) | 6. Rear sonar sensor LH outer C102 |
| 7. Rear sonar sensor LH inner C103 | 8. Rear sonar sensor RH inner C104 | 9. Rear sonar sensor RH outer C105 |
| 10. A/T assembly F9 | 11. Back-up lamp relay M73 | |

System Description

INFOID:000000003533525

FUNCTION

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse [No. 12, located in the fuse block (J/B)]
- to sonar control unit terminal 8,
- through 10A fuse (No. 51, located in the IPDM E/R)
- to back-up lamp relay terminals 1 and 3.

REAR SONAR SYSTEM

< SERVICE INFORMATION >

Ground is supplied

- to sonar control unit terminal 6
- through body grounds B7 and B19.

With the ignition switch in the ON or START position, and the transmission gear selector lever in the R position, power is supplied

- to sonar control unit terminal 5
- from back-up lamp relay terminal 5.

With power and ground supplied, transmission gear selector lever in R position, and the rear sonar system OFF switch ON, the rear sonar system will detect obstacles within 1.8 m (5.9 ft.) of the rear sonar sensors. The vehicle operator is notified of obstacles by varied rate of tone from the sonar buzzer depending on distance of obstacle being sensed.

REAR SONAR SYSTEM OFF SWITCH

With power and ground supplied to the sonar control unit, transmission gear selector lever in R position, the sonar system can be disabled and the sonar buzzer silenced by momentarily pressing the rear sonar system OFF switch. The rear sonar system OFF indicator lamp will be illuminated in the rear sonar system OFF switch.

To disable the rear sonar system, ground is supplied

- to sonar control unit terminal 13
- through rear sonar system OFF switch terminal 1
- through rear sonar system OFF switch terminal 2
- from body grounds M57, M61, and M79.

To light the rear sonar system OFF indicator, power is supplied

- from sonar control unit terminal 4
- to the rear sonar system OFF switch terminal 5.

Ground is supplied

- to the rear sonar system OFF switch terminal 6
- from body grounds M57, M61, and M79.

The rear sonar system and buzzer will be disabled and the rear sonar system OFF indicator will be illuminated until the ignition switch is turned OFF. When the ignition switch is turned ON, the rear sonar system will be enabled. Depressing the rear sonar system OFF switch momentarily will enable the rear sonar system also. Enabling the rear sonar system will cause the rear sonar system OFF indicator to go out.

SONAR BUZZER

With power supplied to the sonar control unit and the transmission gear selector lever in R position, a stationary object that is at least 7.0 cm (2.8 in.) wide and 1.0 m (39.0 in.) tall and that is closer than 1.8 meters (5.9 ft.) will be detected by the rear sonar sensors, causing the sonar buzzer to sound a tone. As the vehicle moves closer to the object, the rate of the tone will increase. When the object is less than 25.0 cm (10 in.) from the rear bumper, the tone will sound continuously.

Power is supplied

- from sonar control unit terminal 7
- to sonar buzzer terminal +.

Ground is supplied

- to sonar buzzer terminal -
- from sonar control unit terminal 3.

REAR SONAR SENSOR

With power and ground supplied to the rear sonar sensors, the sonar sensors transmit a 38.4 kHz ultrasonic signal. This signal is reflected back to the sensor by objects large enough and close enough to be detected. The rear sonar sensors measure the time from the transmitted signal to the time the signal is reflected back and sends this information to the sonar control unit.

Power is supplied

- from sonar control unit terminal 16
- to each rear sonar sensor terminal 1.

Ground is supplied

- to each rear sonar sensor terminal 3
- from sonar control unit terminal 15.

Signal is supplied



- from each rear sonar sensor terminal 2
- to sonar control unit terminals 9, 10, 11 and 12.

REAR SONAR SYSTEM

< SERVICE INFORMATION >

Wiring Diagram - SONAR -

INFOID:000000003533526

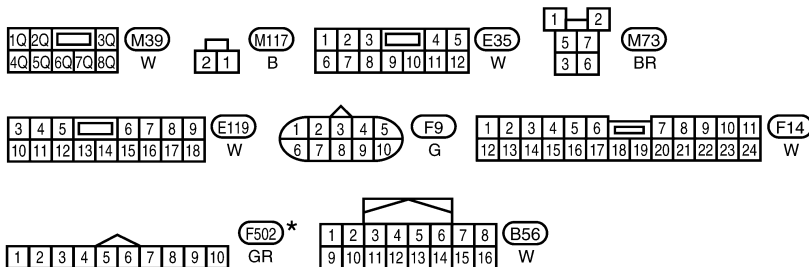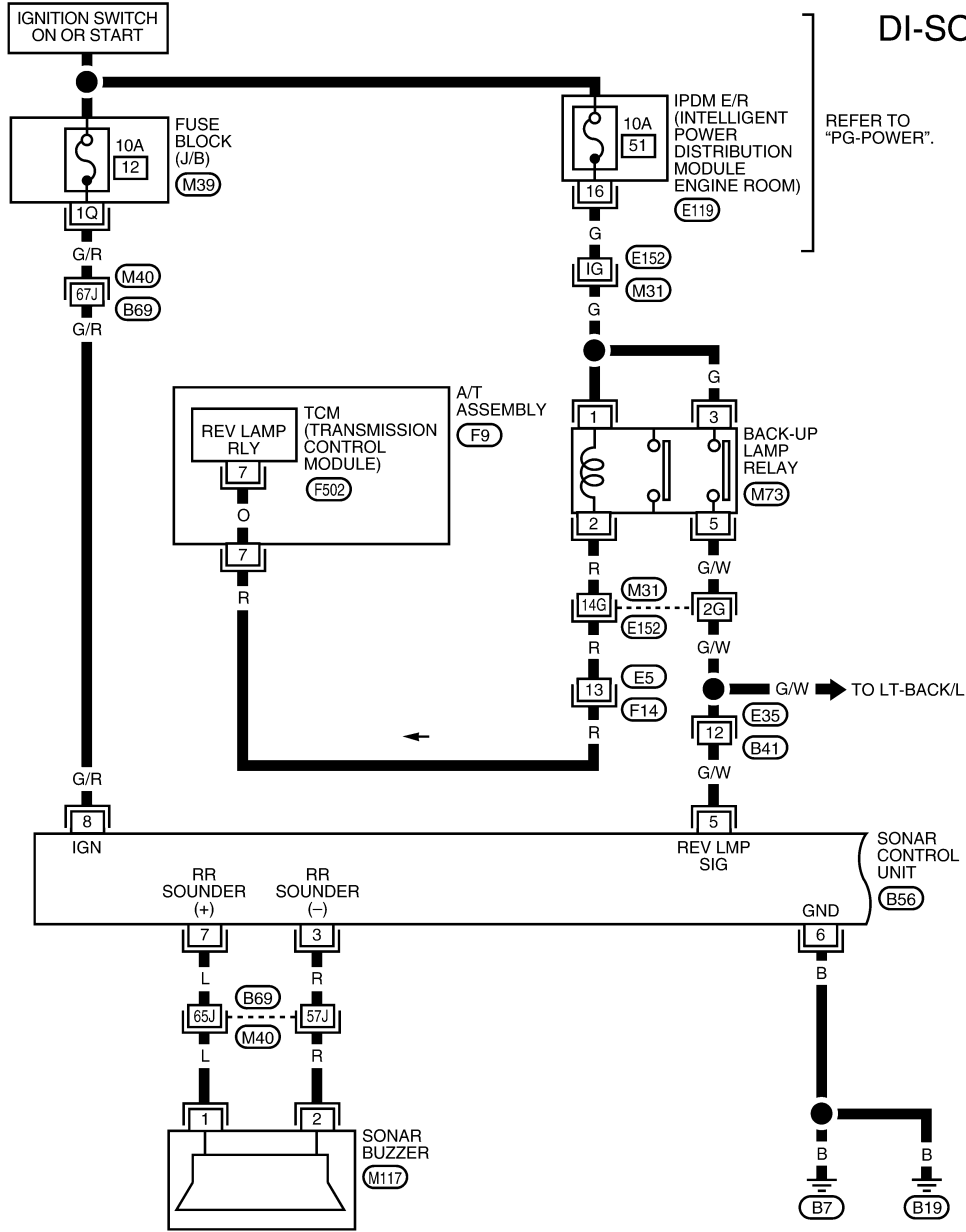

REFER TO THE FOLLOWING.
 (M31) (M40) - SUPER MULTIPLE JUNCTION (SMJ)



*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

WKWA5294E

REAR SONAR SYSTEM

< SERVICE INFORMATION >

DI-SONAR-02

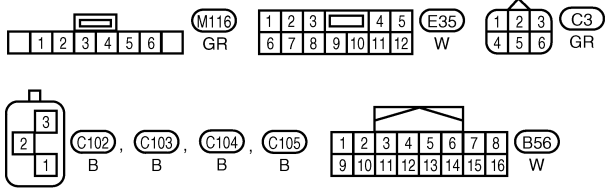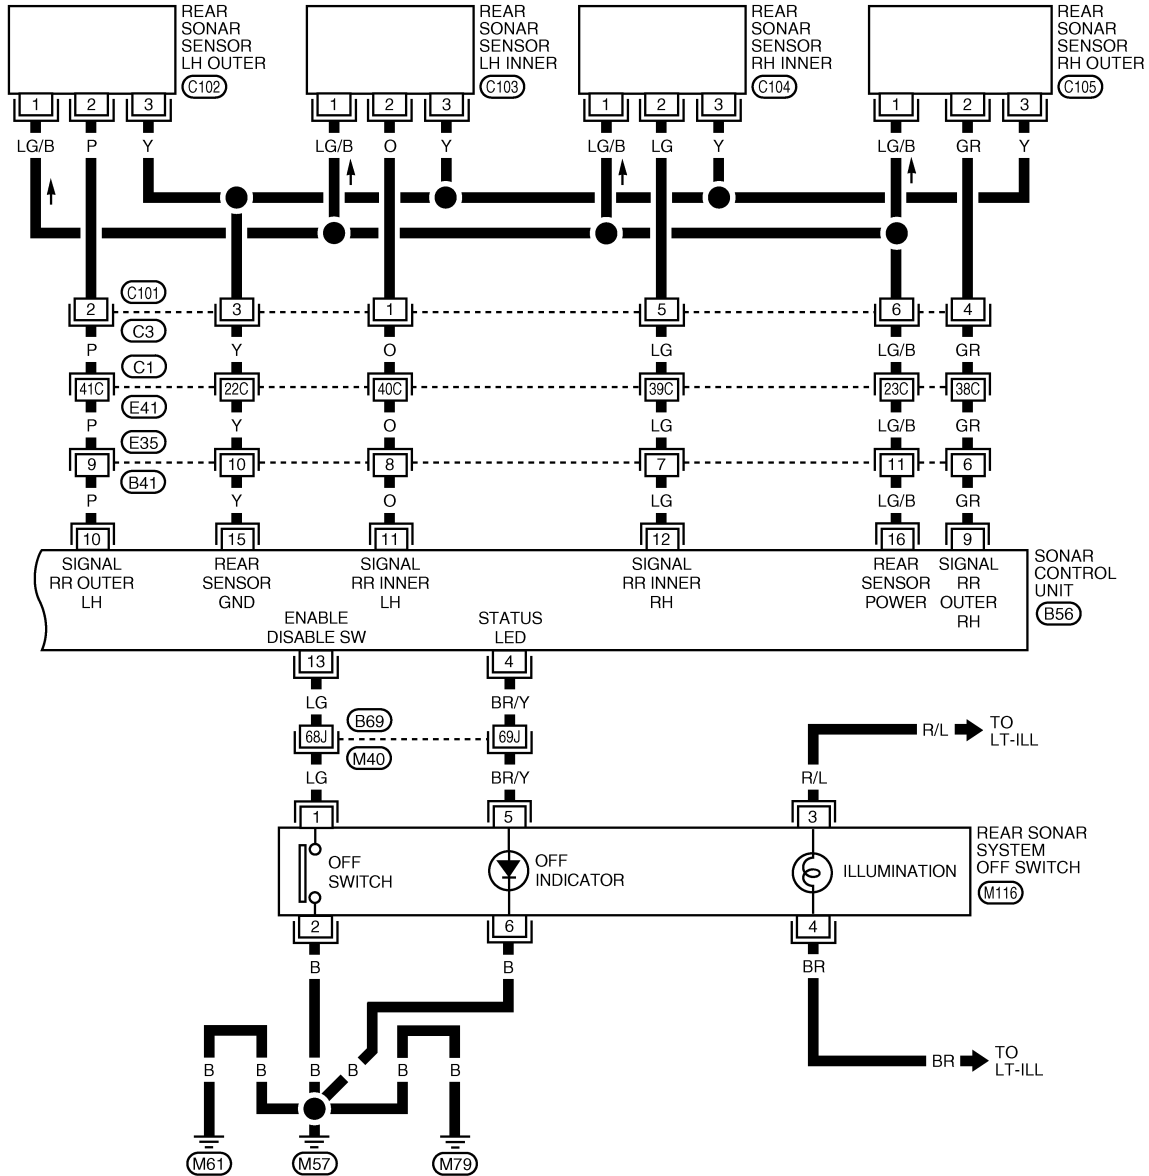

REFER TO THE FOLLOWING.
 (M40), (C1) - SUPER MULTIPLE
 JUNCTION (SMJ)


WKWA1177E

REAR SONAR SYSTEM

< SERVICE INFORMATION >

Sonar Control Unit Harness Connector Terminal Layout

INFOID:000000003533527

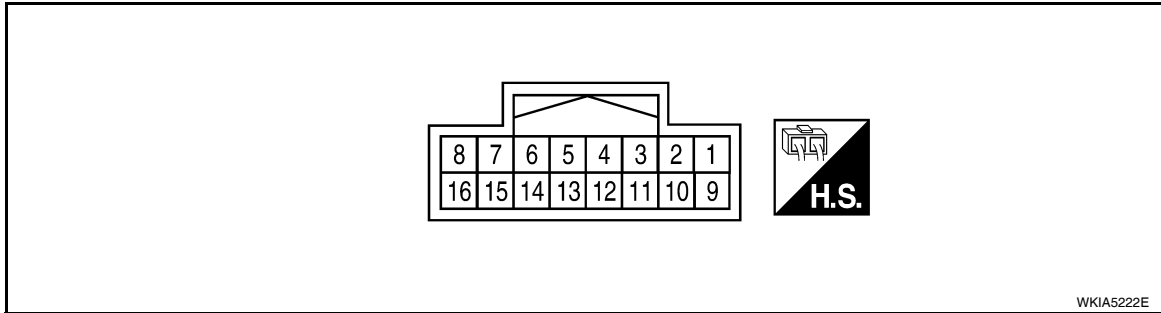

Terminal and Reference Value for Sonar Control Unit

INFOID:000000003533528

Terminal (color)	Item	Condition		Reference value (V) (Approx.)	
		Ignition switch	Operation		
3 (R)	Sonar buzzer return	ON	—	0 - 12 (variable)	
4 (BR/Y)	Rear sonar system OFF indicator output	ON	Rear sonar system OFF switch	ON	0
				OFF	Battery voltage
5 (G/W)	Reverse signal	ON	Transmission gear se- lector lever	R position	Battery voltage
			Transmission gear se- lector lever	Not R position	0
6 (B)	Sonar control unit ground	—	—	0	
7 (L)	Sonar buzzer drive signal	ON	—	Battery voltage	
8 (G/R)	Sonar control unit power	ON	—	Battery voltage	
9 (GR)	Rear sonar sensor signal - RH outer	ON	<ul style="list-style-type: none"> • Rear sonar system OFF switch ON • Transmission gear selector lever in R po- sition • No obstacles 	Battery voltage	
10 (P)	Rear sonar sensor signal - LH outer	ON	<ul style="list-style-type: none"> • Rear sonar system OFF switch ON • Transmission gear selector lever in R po- sition • No obstacles 	Battery voltage	
11 (O)	Rear sonar sensor signal - LH inner	ON	<ul style="list-style-type: none"> • Rear sonar system OFF switch ON • Transmission gear selector lever in R po- sition • No obstacles 	Battery voltage	
12 (LG)	Rear sonar sensor signal - RH inner	ON	<ul style="list-style-type: none"> • Rear sonar system OFF switch ON • Transmission gear selector lever in R po- sition • No obstacles 	Battery voltage	
13 (LG)	Rear sonar system OFF switch signal	ON	Rear sonar system OFF switch	ON	0
				OFF	Battery voltage
15 (Y)	Rear sonar sensor ground	ON	—	0	
16 (LG/B)	Rear sonar sensor power	ON	Ignition switch ON	Battery voltage	

REAR SONAR SYSTEM

< SERVICE INFORMATION >

How to Proceed with Trouble Diagnosis

INFOID:000000003533529

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [DI-46, "System Description"](#).
3. Perform pre-diagnosis inspection. Refer to [DI-51, "Pre-diagnosis Inspection"](#).
4. Perform self-diagnosis. Refer to [DI-51, "Self-Diagnosis Function"](#).
5. Perform the preliminary check. Refer to [DI-53, "Preliminary Check"](#).
6. Check symptom and repair or replace the cause of malfunction. Refer to [DI-54, "Symptom Chart"](#).
7. Does the rear sonar system operate properly? If so, go to 8. If not, go to 3.
8. Clear fault codes. Refer to [DI-51, "Self-Diagnosis Function"](#).
9. Inspection End.

Pre-diagnosis Inspection

INFOID:000000003533530

SENSOR STATUS CHECK

- Check that the rear sonar sensor is properly aligned (bumper is not misaligned, no deformation in sensor mounting area).
- Check that snow, mud, or other foreign objects are not adhering to the rear sonar sensor.
- Check that there is no deformation, scratches, or other damage to the rear sonar sensor.
- Check that water has not accumulated in the rear sonar sensor.

CAUTION:

Use water, cotton swab, or other soft material for cleaning the sensor.

1. Check that there are no obstacles within each rear sonar sensor's detection range.

	Detection range
Rear sonar sensors	Approx. 1.8 m (5.9 ft.) maximum

2. Check that there are no nearby ultrasound sources (such as the sounds of vehicle horns, motorcycle engines, or truck air brakes).
3. Check that the vehicle is on a level surface.


Self-Diagnosis Function

INFOID:000000003533531

There are four modes of self-diagnosis; entering diagnostics, requesting number of fault codes, requesting fault codes, and idling or clearing fault codes. These steps must be followed in order. Self-diagnosis can be manually exited by turning the ignition switch OFF, or selecting reverse gear. Self-diagnosis will exit unless a fault code request occurs before a message is repeated five times without acknowledgement.

ENTERING DIAGNOSTICS MODE

1. Turn ignition switch ON. Rear sonar system OFF switch indicator lamp illuminates for three seconds and then turns off.
2. Immediately push rear sonar system OFF switch ten times within five seconds.
3. The sonar buzzer will sound once and the rear sonar system OFF indicator will flash once.

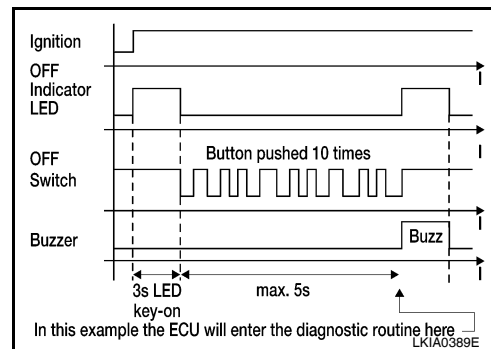

REQUESTING NUMBER OF FAULT CODES MODE


REAR SONAR SYSTEM

< SERVICE INFORMATION >

1. While in diagnostic mode, push rear sonar system OFF switch once.
2. The sonar buzzer will sound once.
3. Rear sonar system OFF indicator will flash once and sonar buzzer will sound once for each fault code detected.
4. There will be a four second pause.
5. The number of fault codes will repeat five times then pause.

NOTE:

Self-diagnosis will exit unless requesting fault codes occurs before five repeats ends.

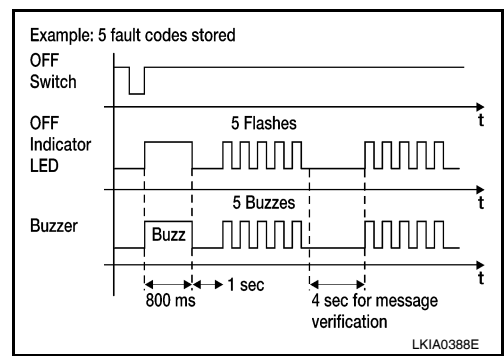


REQUESTING FAULT CODES MODE

1. While in "requesting number of fault codes" mode, push rear sonar system OFF switch once.
2. The sonar buzzer will sound once.
3. Rear sonar system OFF indicator will flash and sonar buzzer will sound the first digit of the fault code followed by a one second pause.
4. Rear sonar system OFF indicator will flash and sonar buzzer will sound the second digit of the fault code followed by a four second pause.
5. The fault codes will repeat five times then pause.

NOTE:

Requesting fault codes will exit unless the fault code is acknowledged before five repeats ends.

The fault code is acknowledged by pushing the rear sonar system OFF switch once (the sonar buzzer may sound). When all fault codes have been indicated, idle mode will be entered. See the following table for fault code identification.

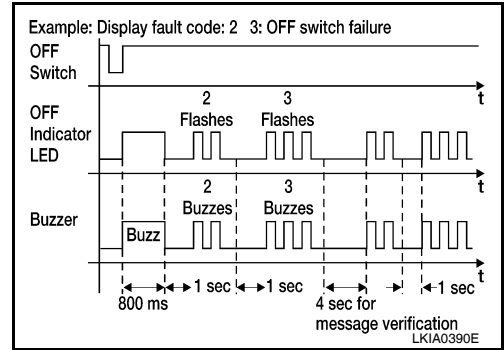

Fault Code	Malfunction	Page Reference
1 1	Rear sonar sensor LH outer	Check harness for open or short. If NG repair or replace harness. If OK replace sensor. Refer to DI-55, "Removal and Installation" .
1 2	Rear sonar sensor LH inner	
1 3	Rear sonar sensor RH inner	
1 4	Rear sonar sensor RH outer	
2 1	Sonar buzzer	DI-55, "Component Inspection"
2 2	Rear sonar system OFF indicator	DI-55, "Component Inspection"
2 3	Rear sonar system OFF switch	DI-55, "Component Inspection"
2 4	Sonar control unit	Replace sonar control unit. Refer to DI-55, "Removal and Installation" .

IDLING OR CLEARING FAULT CODES MODE


NOTE:

While in idle mode, self-diagnosis will automatically exit if no activity occurs for thirty seconds.

REAR SONAR SYSTEM

< SERVICE INFORMATION >

1. Push and hold rear sonar system OFF switch for three seconds to reset time-out counter.
2. Push and hold rear sonar system OFF switch for three seconds to clear codes.

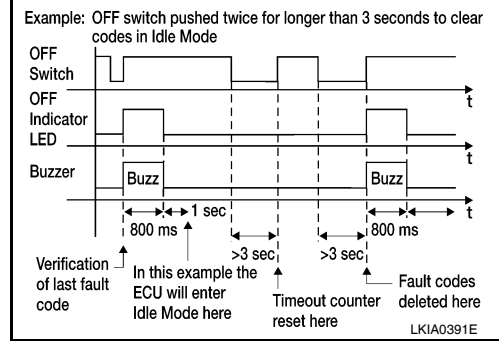

Preliminary Check

INFOID:000000003533532

INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT

1.CHECK FUSE

Check for blown rear sonar system fuse.

Unit	Power Source	Fuse
Sonar control unit	ON or START	12

Refer to [DI-48, "Wiring Diagram - SONAR -"](#).

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of problem before installing new fuse. Refer to [PG-3](#).

2.CHECK POWER SUPPLY CIRCUIT

1. Disconnect sonar control unit connector.
2. Check voltage between sonar control unit connector B56 terminal 8 and ground.

Terminals		Ignition switch position	
(+)		(-)	ON or START
Connector	Terminal		
B56	8	Ground	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between sonar control unit and fuse.

3.CHECK GROUND CIRCUIT



1. Turn ignition switch OFF.
2. Check continuity between sonar control unit B56 terminal 6 and ground.

Terminals		Continuity	
(+)			
Connector	Terminal	(-)	
B56	6	Ground	Yes

OK or NG

OK >> Inspection End.

NG >> Check harness ground circuit.

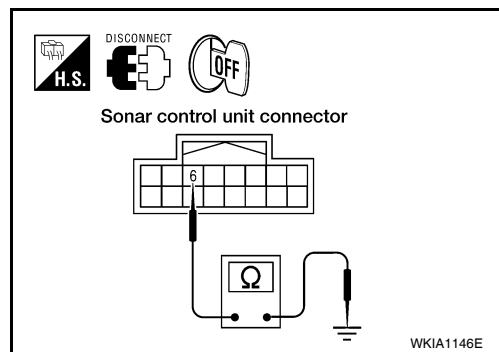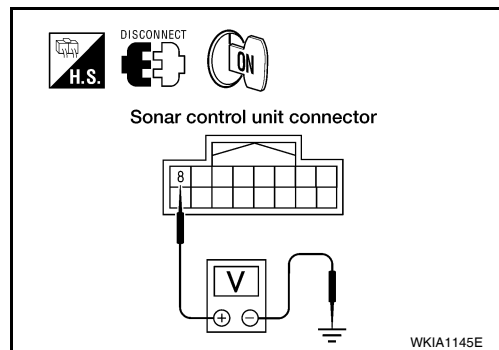

REAR SONAR SYSTEM

< SERVICE INFORMATION >

Symptom Chart

INFOID:000000003533533

Symptom	Repair order
When the rear sonar system OFF switch is OFF, the indicator lamp does not light and the buzzer does not sound.	<ol style="list-style-type: none"> 1. Check rear sonar system OFF switch for malfunction. Refer to DI-55, "Component Inspection". 2. Check rear sonar system OFF switch ground circuit. 3. Check harness and connections between rear sonar system OFF switch and sonar control unit. 4. Replace sonar control unit. Refer to DI-55, "Removal and Installation".
When the rear sonar system OFF switch is OFF, the indicator lamp does not light but buzzer sounds.	<ol style="list-style-type: none"> 1. Check rear sonar system OFF indicator for malfunction. Refer to DI-55, "Component Inspection". 2. Check harness and connections between rear sonar system OFF indicator and sonar control unit. 3. Replace sonar control unit. Refer to DI-55, "Removal and Installation".
When the rear sonar system OFF switch is OFF, the sonar buzzer does not sound but indicator lamp illuminates.	<ol style="list-style-type: none"> 1. Check sonar buzzer. Refer to DI-55, "Component Inspection". 2. Check harness and connections between sonar buzzer and sonar control unit. 3. Replace sonar control unit. Refer to: DI-55, "Removal and Installation".
When rear sonar system OFF switch is ON, the rear sonar system OFF indicator lamp lights up and the sonar buzzer sounds intermittently (for about 4 seconds).	<ol style="list-style-type: none"> 1. Check harness between rear sonar sensors and sonar control unit for an open condition. 2. Check rear sonar sensors for malfunction. 3. Replace sonar control unit. Refer to DI-55, "Removal and Installation".
The rear sonar system operates with the rear sonar system OFF switch OFF.	<ol style="list-style-type: none"> 1. Check rear sonar system OFF switch for malfunction. Refer to DI-55, "Component Inspection". 2. Check rear sonar system OFF switch ground circuit. 3. Check harness and connections between rear sonar system OFF switch and sonar control unit. 4. Replace sonar control unit. Refer to DI-55, "Removal and Installation".
When the transmission gear selector lever is in the R position and the rear sonar system OFF switch is OFF, the sonar system does not operate.	<ol style="list-style-type: none"> 1. Check for PNP switch failure. Refer to AT-83, "CONSULT-II Function (A/T)". 2. Check harness and connections between sonar control unit and PNP/reverse lamp circuits. 3. Replace sonar control unit. Refer to DI-55, "Removal and Installation".
When the rear sonar system OFF switch is OFF, the indicator lamp lights up and buzzer sounds although there is no obstacle within the detection range.	<ol style="list-style-type: none"> 1. Check for adhesion of snow, mud, or other foreign objects to rear sonar sensors; dew condensation; etc. Refer to DI-51, "Pre-diagnosis Inspection". 2. Check that the rear sonar sensor is properly aligned (bumper is not misaligned, no deformation in sensor mounting area) 3. Check harness and connections between rear sonar sensors and sonar control unit. 4. Check rear sonar sensors for malfunction. 5. Replace sonar control unit. Refer to DI-55, "Removal and Installation".
The rear sonar sensors do not operate according to the distance between each sensor and the obstacle. (There is a large error in the obstacle detection distance).	<ol style="list-style-type: none"> 1. Check rear sonar sensors for malfunction. 2. Replace sonar control unit. Refer to DI-55, "Removal and Installation". 3. Check for adhesion of snow, mud, or other foreign objects to rear sonar sensors; dew condensation; etc. Refer to DI-51, "Pre-diagnosis Inspection". 4. Check that the rear sonar sensor is properly aligned (bumper is not misaligned, no deformation in sensor mounting area)

REAR SONAR SYSTEM

< SERVICE INFORMATION >


Component Inspection

INFOID:00000000353534

SONAR BUZZER

1. Disconnect the sonar buzzer connector.
2. Check continuity between buzzer terminal (+) and terminal (-)


(+) - (-) : **Continuity should exist**

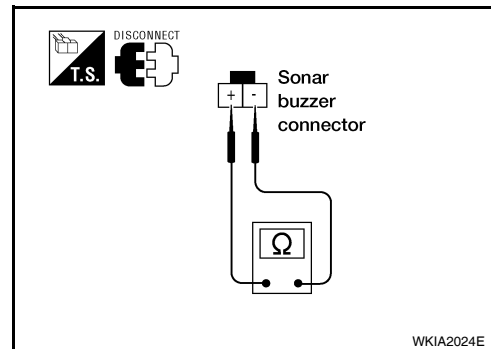

REAR SONAR SYSTEM OFF SWITCH

Disconnect the rear sonar system OFF switch connector M116. Check continuity between the following terminals.


Rear sonar system OFF switch	Terminal to be inspected	Continuity
Depressed	1 - 2	Yes
Released		No

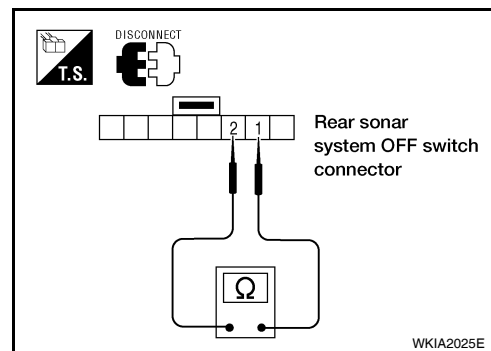

REAR SONAR SYSTEM OFF INDICATOR

Disconnect the rear sonar system OFF switch connector M116, and apply battery voltage (approx. 12V) to switch terminal 5. Check the rear sonar system OFF indicator operation when switch terminal 6 is connected to battery ground.

	Terminal to be inspected	Condition	Operation
Rear sonar system OFF switch	5	Approx. 12V	Rear sonar system OFF indicator lights
	6	Ground	

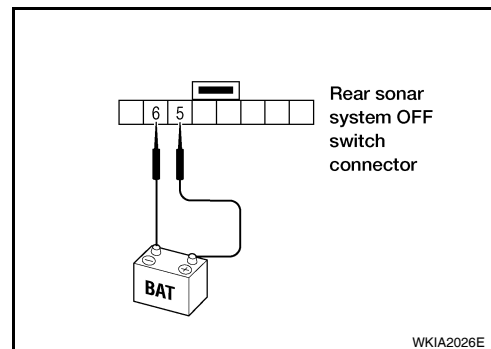

Removal and Installation

INFOID:00000000353535

REAR SONAR SENSORS

Refer to [EI-14. "Removal and Installation"](#) for rear sonar sensor removal and installation procedures.

SONAR CONTROL UNIT

Removal

1. Remove luggage side finisher LH. Refer to [EI-39](#) to gain access to sonar control unit.
2. Disconnect electrical connector then remove sonar control unit. Refer to [DI-46. "Component Parts and Harness Connector Location"](#).

Installation

Installation is in the reverse order of removal.

CLOCK



< SERVICE INFORMATION >

CLOCK

Wiring Diagram - CLOCK -

INFOID:000000003533536

DI-CLOCK-01

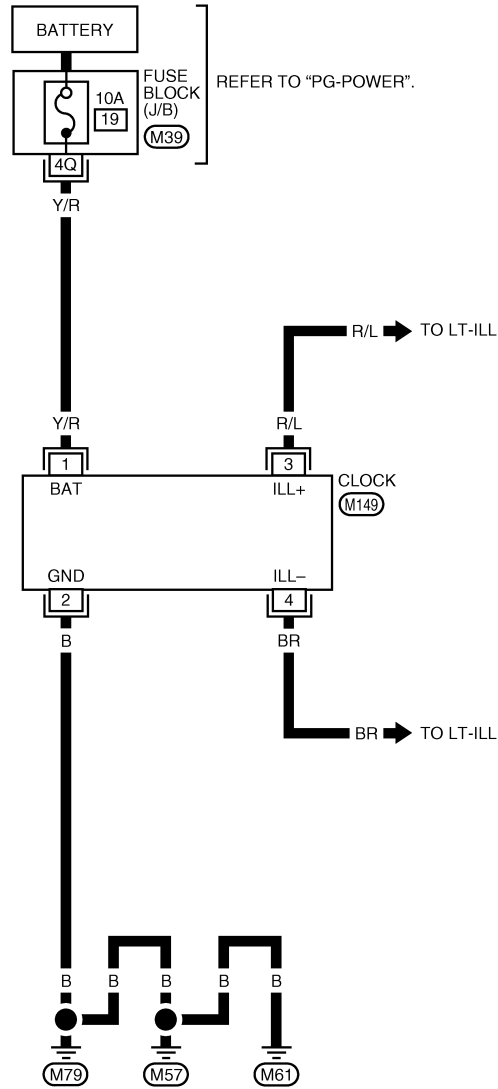

WKWA1178E

Removal and Installation of Clock


INFOID:000000003533537

REMOVAL

CLOCK

< SERVICE INFORMATION >

1. Remove cluster lid C. Refer to [IP-10](#) .
2. Remove screws (3) and remove clock from cluster lid C.

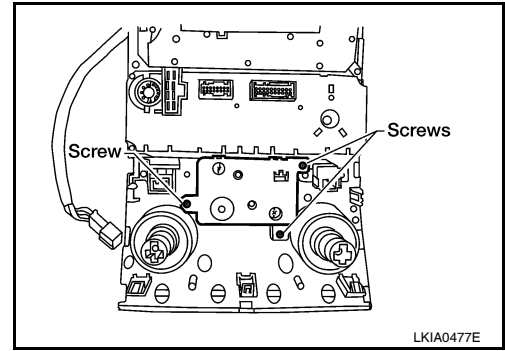

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
DI
L
M
N
O
P


REAR VIEW MONITOR

< SERVICE INFORMATION >

REAR VIEW MONITOR

Component Parts and Harness Connector Location

INFOID:000000003533538

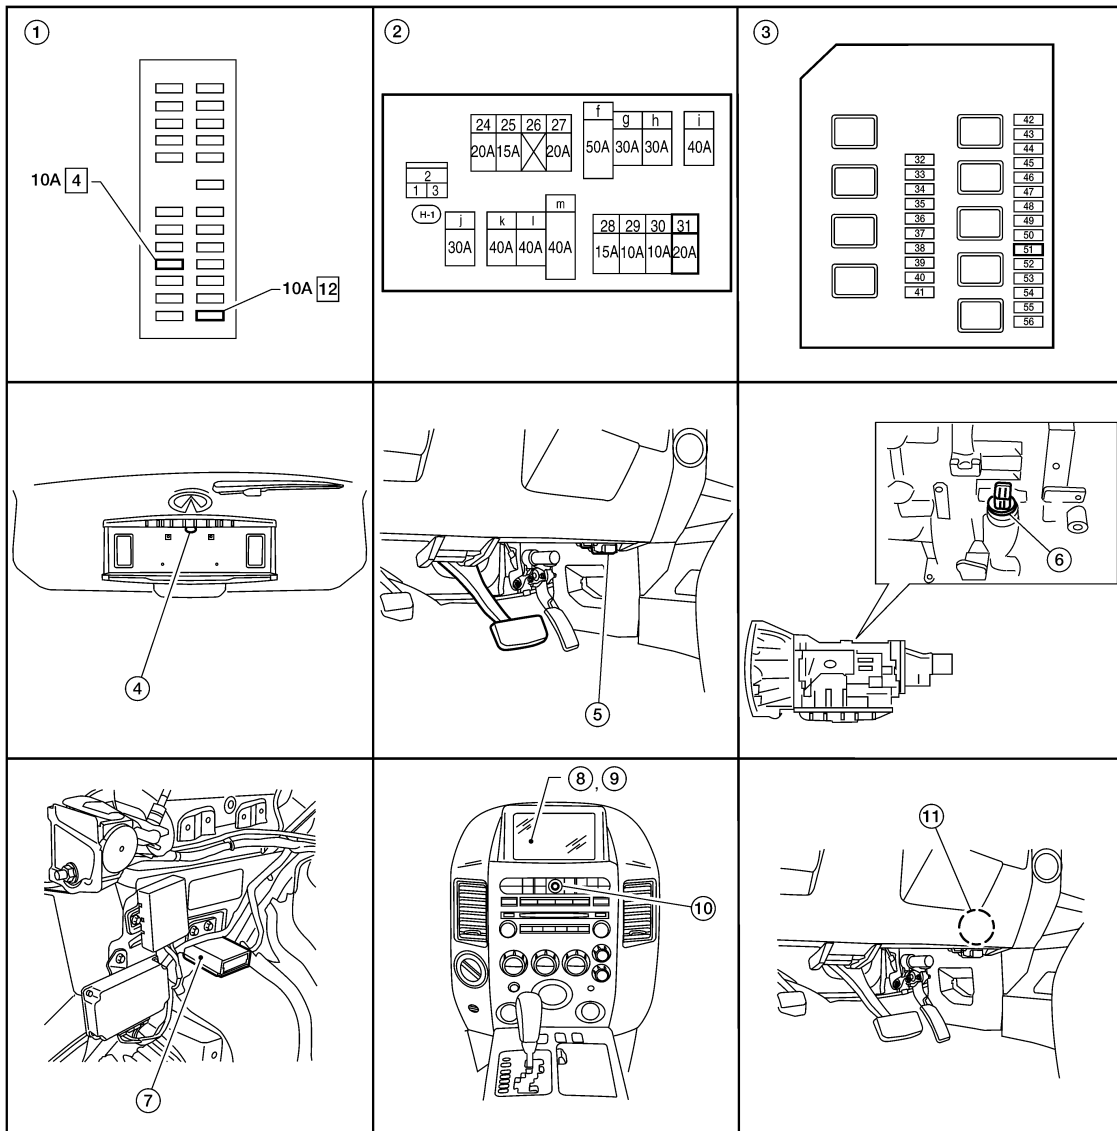

WKIA4596E

- | | | |
|--|------------------------------|----------------------------------|
| 1. Fuse block (J/B) | 2. Fuse and fusible link box | 3. IPDM E/R E119 |
| 4. Rear view camera D504 | 5. Data link connector M22 | 6. A/T assembly F9 |
| 7. Rear view camera control unit B73
(view of left rear body) | 8. Display unit M93 | 9. Display control unit M94, M95 |
| 10. AV switch M98 | 11. Back-up lamp relay M73 | |

System Description

INFOID:000000003533539

- When the A/T selector is in the reverse position, the display shows view to the rear of the vehicle.
- Lines which indicate the vehicle clearance and distances are displayed on the monitor.

POWER SUPPLY AND GROUND

Power is supplied at all times

- through 20A fuse (No. 31, located in the fuse and fusible link box)

REAR VIEW MONITOR

< SERVICE INFORMATION >

- to rear view camera control unit terminal 1.
- When ignition switch is in ACC or ON position, power is supplied
- through 10A fuse [No. 4, located in the fuse block (J/B)]
 - to rear view camera control unit terminal 2.

Ground is supplied

- to rear view camera control unit terminal 3 and
- to rear view camera terminal 2
- through grounds B7 and B19.

AV COMMUNICATION LINE

Rear view camera control unit is connected to the following units with AV communication line. Each unit transmits/receives data with AV communication line.

- NAVI control unit
- Display unit
- Display control unit
- AV switch

REAR VIEW CAMERA OPERATION

When ignition switch is in ON or START position, power is supplied

- through 10A fuse (No. 51, located in the IPDM E/R)
- to back-up lamp relay terminals 1 and 3.

When A/T selector lever is in reverse position, power is supplied

- through back-up lamp relay terminal 2
- to TCM terminal 7.

Then, when back-up lamp relay is energized,

- from back-up lamp relay terminal 5
- to rear view camera control unit terminal 4.

Then, rear view camera control unit is sent camera ON signal

- through rear view camera control unit terminal 8
- to rear view camera terminal 1.

An image taken by rear view camera is sent

- through rear view camera terminals 3 and 4
- to rear view camera control unit terminals 10 and 9.

Then an image is sent

- through rear view camera control unit terminals 11 and 12
- to display unit terminals 4 and 15.

An image of rear view will be projected on the display.

Side Distance Guideline

When A/T selector lever is in reverse position, rear view camera control unit is sent rear view camera guideline image

- through rear view camera control unit terminals 11 and 12
- to display unit terminals 4 and 15.

Rear view camera guideline will be projected on the display.

Display shows image from rear view camera image and rear view camera guideline.

A

B

C

D

E

F

G

H

I

J

DI

L

M

N

O


P

REAR VIEW MONITOR

< SERVICE INFORMATION >

Schematic

INFOID:000000003533540

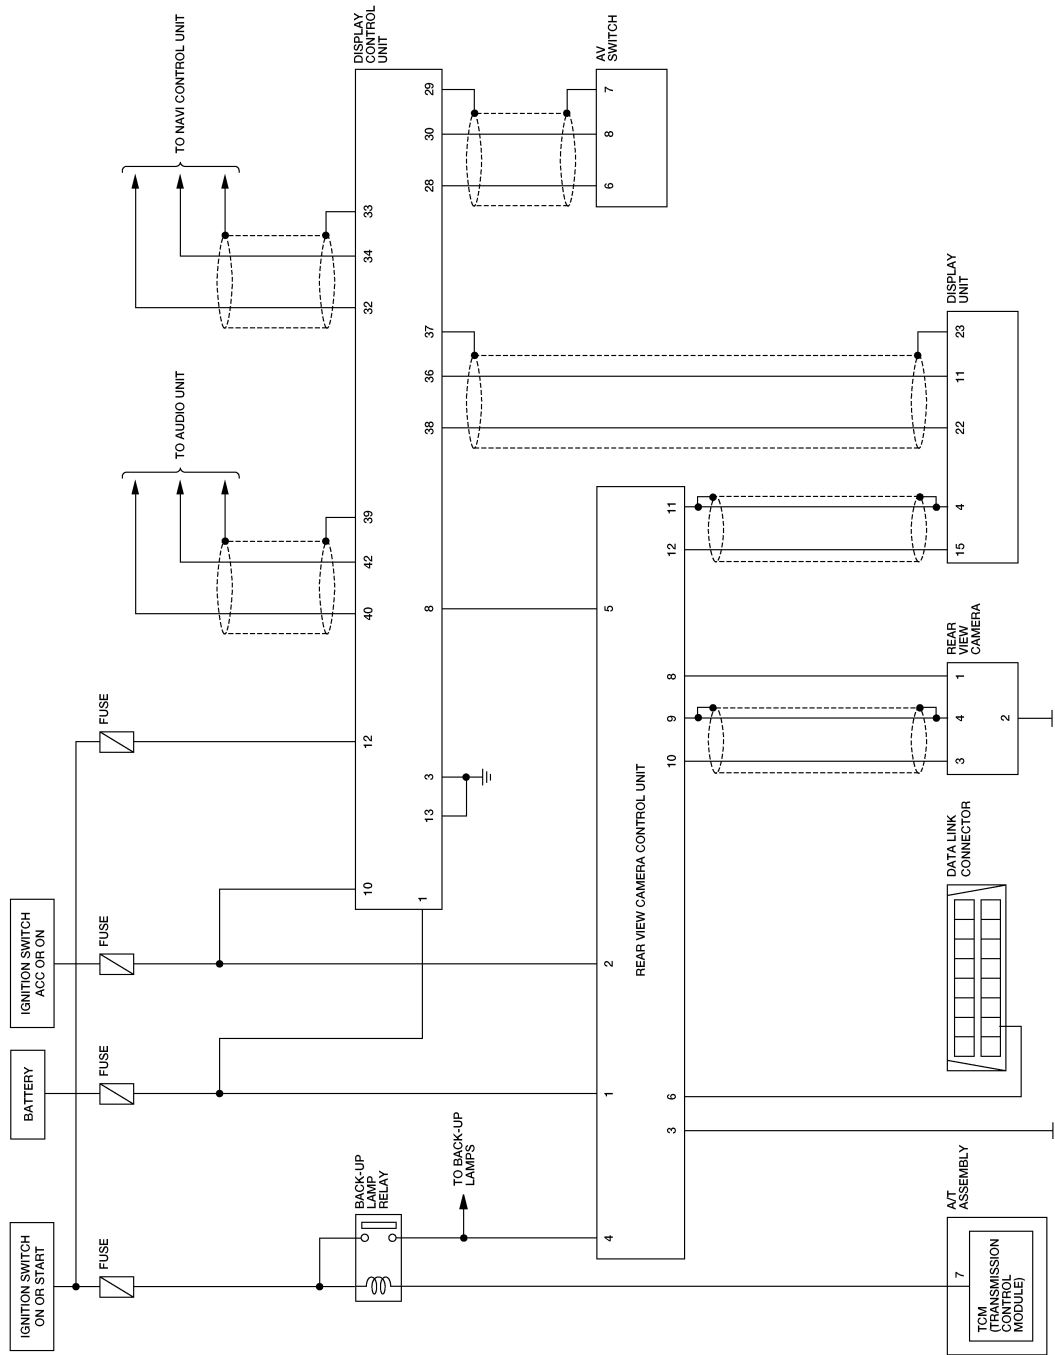


WKWA1179E

REAR VIEW MONITOR

< SERVICE INFORMATION >

Wiring Diagram - R/VIEW -

INFOID:000000003533541




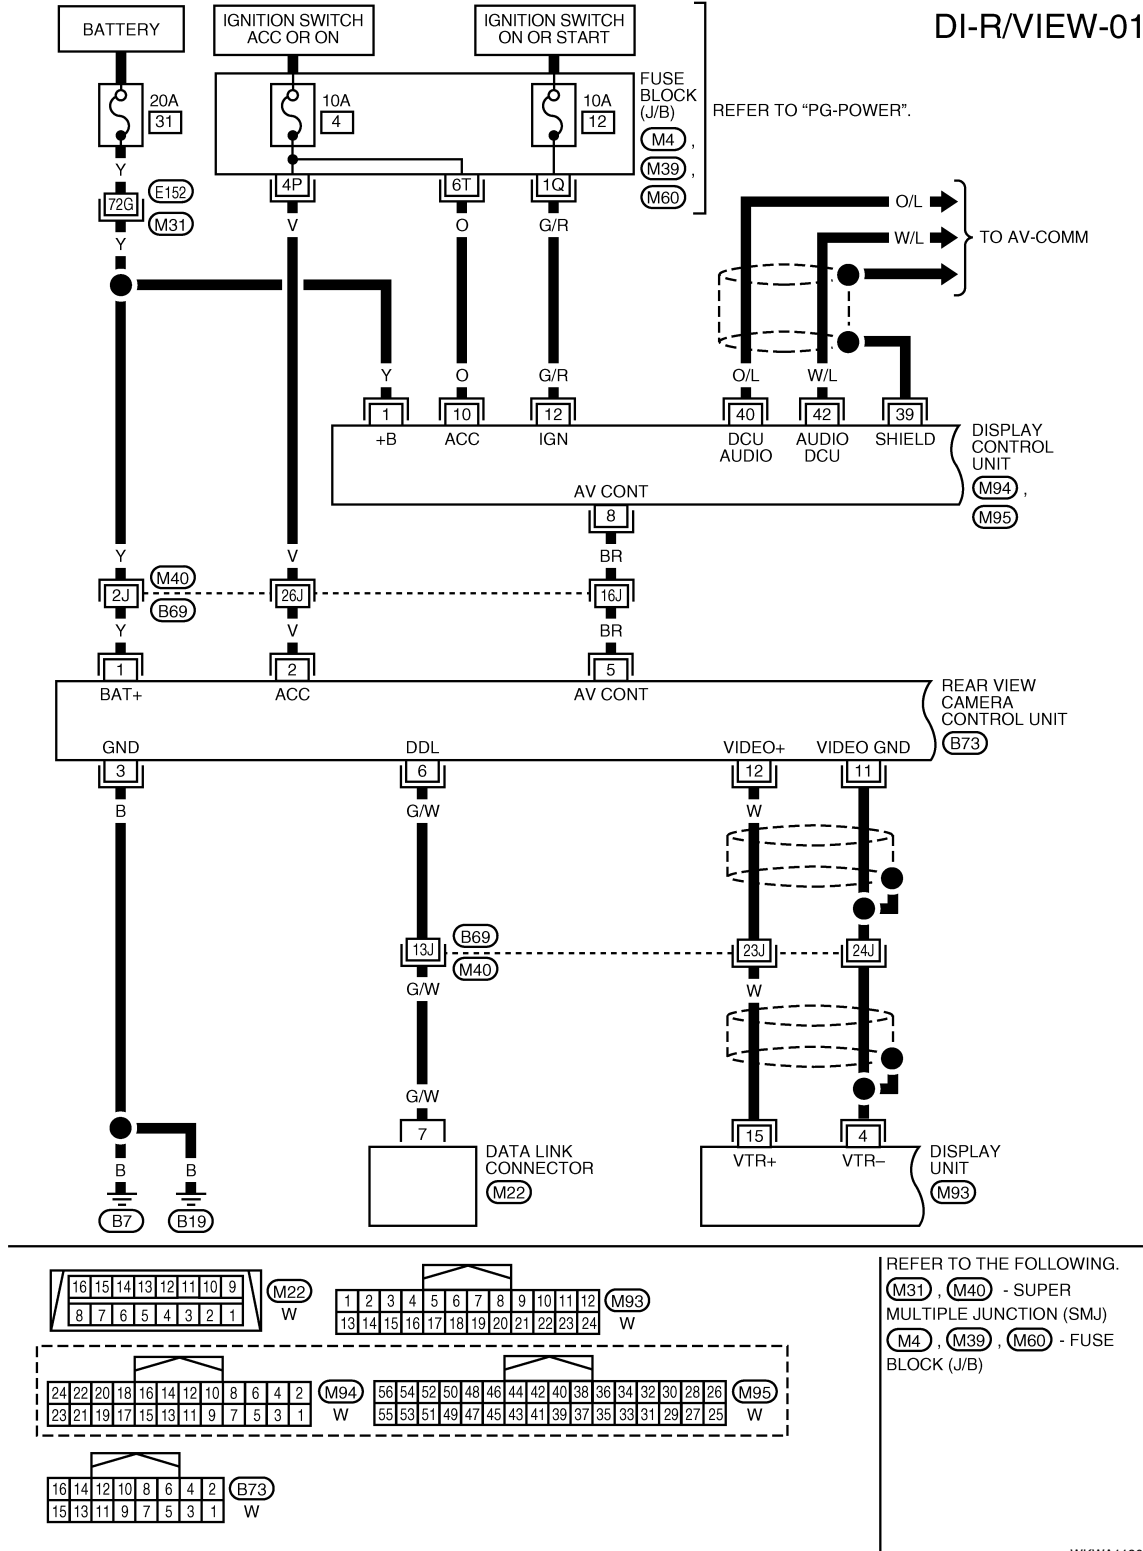


A
B
C
D
E
F
G
H
I
J
DI
L
M
N
O
P

REAR VIEW MONITOR

< SERVICE INFORMATION >

DI-R/VIEW-02

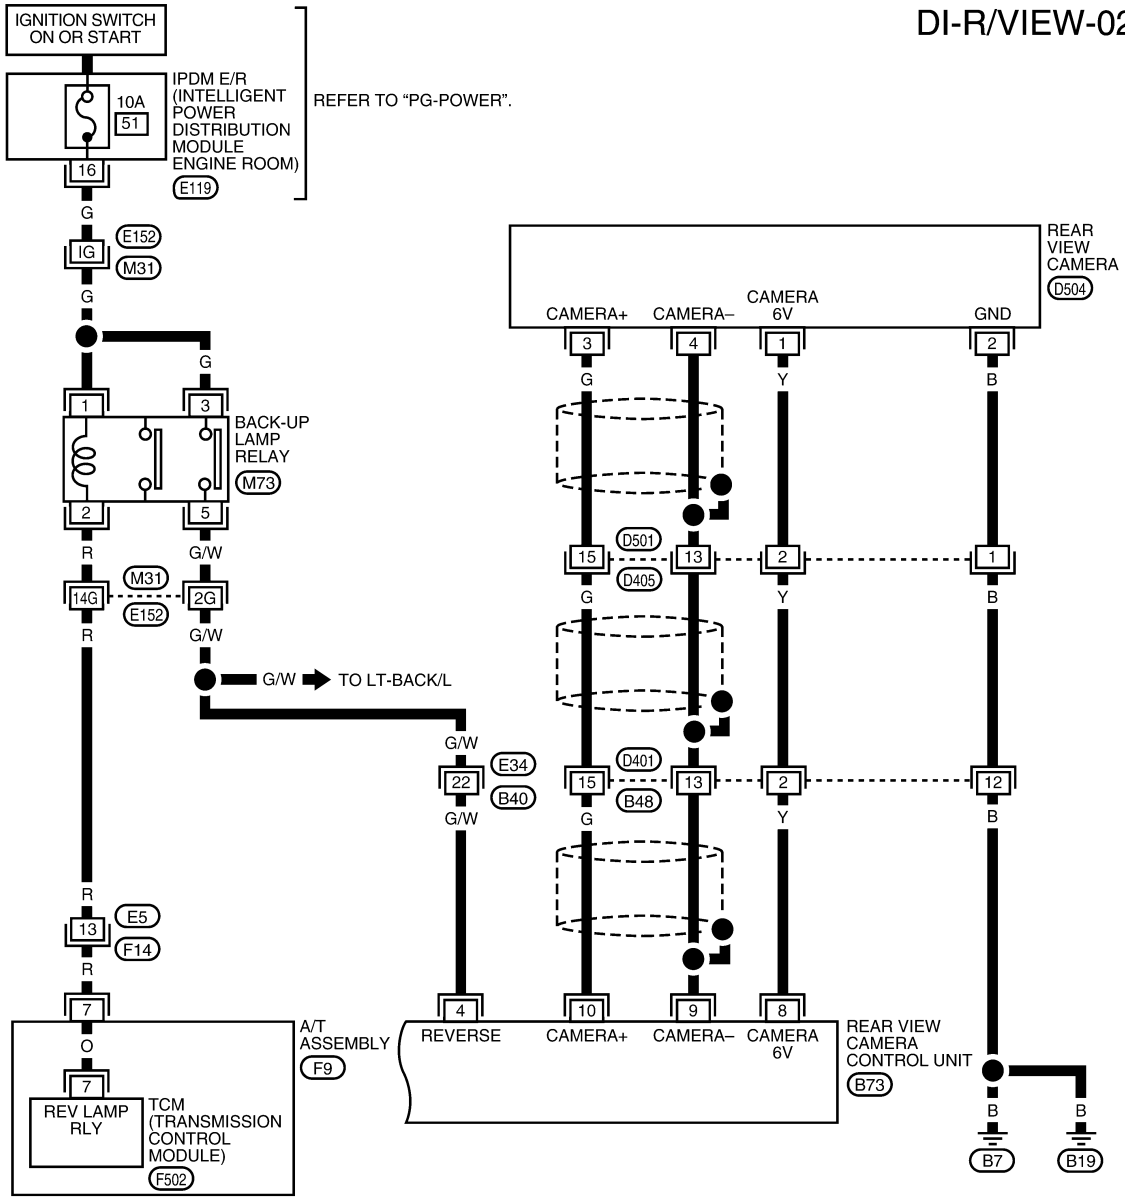

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

REFER TO THE FOLLOWING.



(M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA3629E

REAR VIEW MONITOR

< SERVICE INFORMATION >

DI-R/VIEW-03

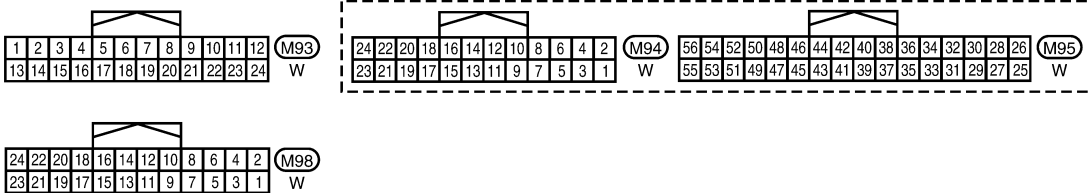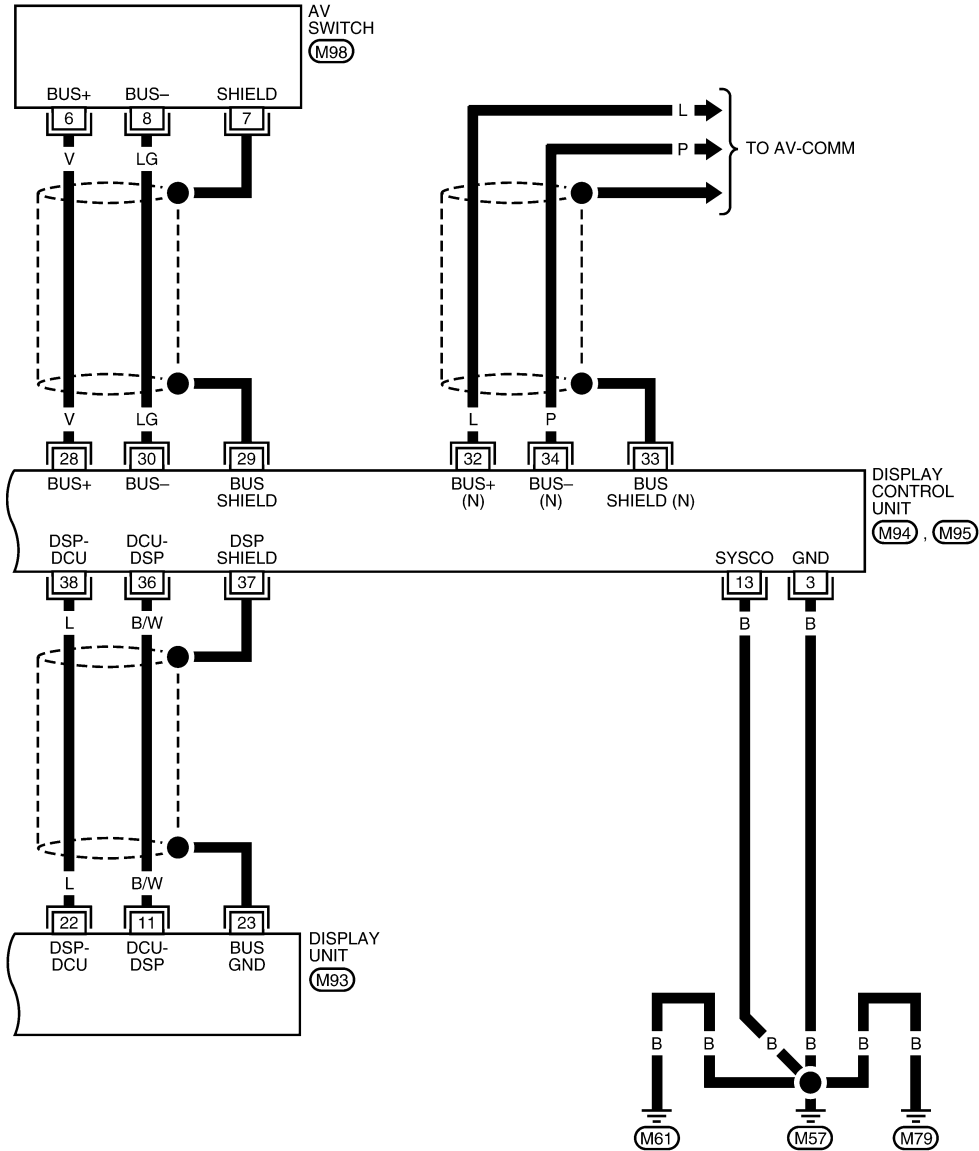

WKWA3630E

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P




REAR VIEW MONITOR

< SERVICE INFORMATION >

Rear View Camera Control Unit Harness Connector Terminal Layout

INFOID:000000003533542

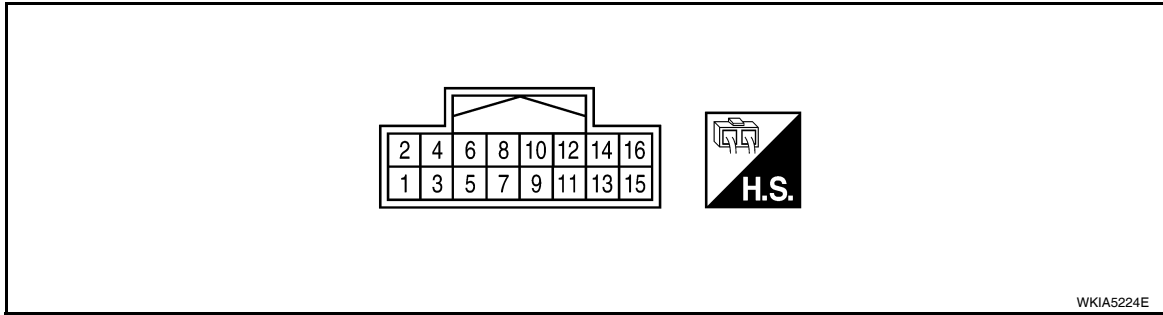

Terminal and Reference Value for Rear View Camera Control Unit

INFOID:000000003533543

Terminal No.	Wire color	Item	Condition		Reference value (V) (Approx.)
			Ignition switch	Operation	
1	Y	Battery power	OFF	—	Battery voltage
2	V	ACC power	ACC	—	Battery voltage
3	B	Ground	ON	—	0
4	G/W	Reverse signal input	ON	A/T selector lever R position	Battery voltage
				A/T selector lever in other than R position	0
5	BR	AV Control	ON	A/T selector lever R position	0
				—	0
6	G/W	DDL	—	—	—
8	Y	Camera power output	ON	A/T selector lever R position	6
9	—	Camera image input (-)	ON	—	0
10	G	Camera image input (+)	ON	A/T selector lever R position	 SKIA4894E
11	—	Shield ground	—	—	—
12	W	Composite image output	ON	A/T selector lever R position	 SKIA4896E

CONSULT-II Function (REARVIEW CAMERA)

INFOID:000000003533544

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.

REAR VIEW MONITOR

< SERVICE INFORMATION >

REARVIEW CAMERA diagnostic mode	Description
WORK SUPPORT	Supports inspection and adjustments. Commands are transmitted to the rearview camera control unit for setting the status suitable for required operation, input/output signals are received from the rearview camera control unit and received data is displayed.
DATA MONITOR	Displays rearview camera control unit input/output data in real time.
ECU PART NUMBER	Rearview camera control unit part number can be read.

CONSULT-II START PROCEDURE

Refer to [GI-36, "CONSULT-II Start Procedure"](#).

WORK SUPPORT

Refer to [DI-65, "Side Distance Guideline Correction"](#) for details.

DATA MONITOR

Display Item List

Display item [Unit]	ALL SIGNALS	SELECTION FROM MENU	Contents
R POSI SIG [ON/OFF]	X	X	Indicates [ON/OFF] condition of R position signal input.

Side Distance Guideline Correction

INFOID:000000003533545


This mode is used to modify the side distance guidelines if they are dislocated from the rear view monitor image, because of variations of body/camera mounting conditions.

SIDE DISTANCE GUIDELINE CORRECTION PROCEDURE

- Create a correction line to modify the screen.
Draw lines on the rearward of the vehicle passing through the following points: 200 mm (7.87 inch) from both sides of the vehicle, and
 - *1: 0.5 m (1.5 feet)
 - *2: 1 m (3 feet)
 - *3: 2 m (7 feet)
 - *4: 3 m (10 feet)
 and from the rear end of the bumper
- With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON. Touch "REARVIEW CAMERA" on "SELECT SYSTEM" screen.

CAUTION:


Stop engine for safety when correcting side distance guideline.

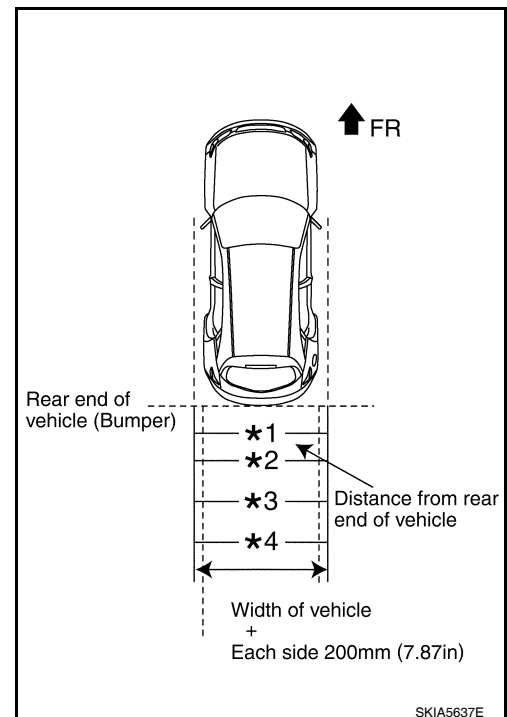


REAR VIEW MONITOR

< SERVICE INFORMATION >

3. Shift the A/T select lever to R position.

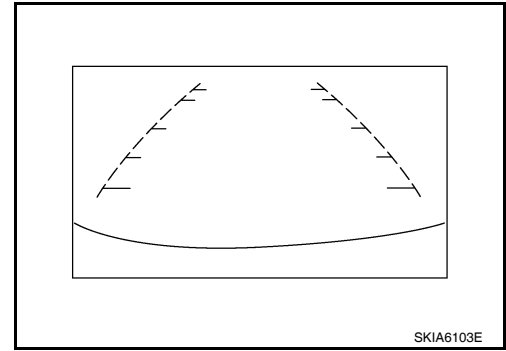


4. Touch "SELCT GUIDELINE PATTERN" on "SELECT WORK ITEM" screen.

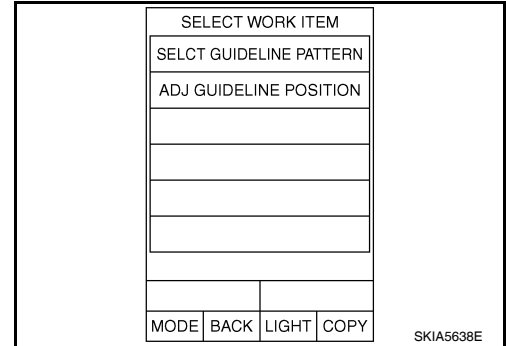


5. Touch "UP" or "DOWN", and select the guide line, "PATTERN NO. 0" or "PATTERN NO. 1", which is the closest to the corrected line.

6. Touch "SAVE", and confirm the guide line.

7. Touch "END".

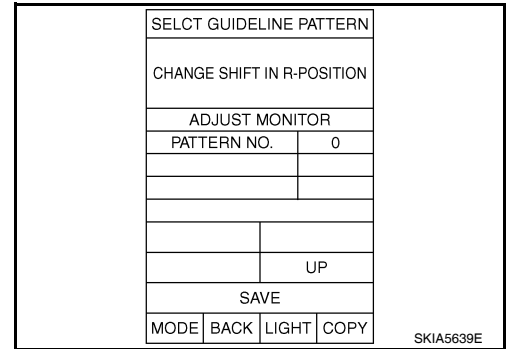


8. Touch "ADJ GUIDELINE POSITION" on "SELECT WORK ITEM" screen.

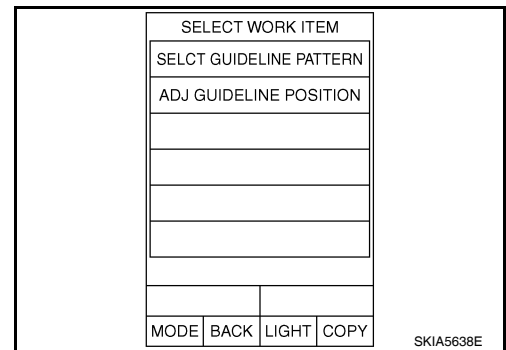

9. Adjust the guide line touching "X UP", "X DOWN", "Y UP" or "Y DOWN" so that the corrected line can fit the guide line.

10. Touch "SAVE", and confirm the guide line.

11. Touch "END" to finish correcting.

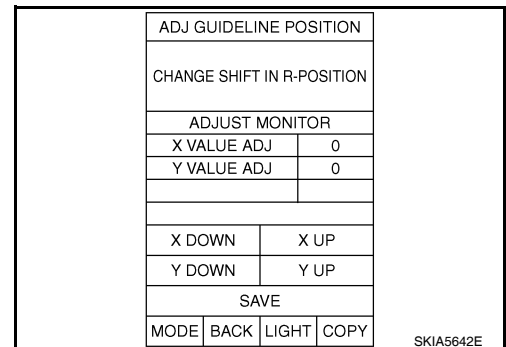

REAR VIEW MONITOR

< SERVICE INFORMATION >

Power Supply and Ground Circuit Inspection

INFOID:000000003533546

1. CHECK FUSES

Check for blown rear view camera system fuses.

Unit	Power source	Fuse No.
Rear view camera control unit	Battery	31
	Ignition switch ACC or ON	4

OK or NG


OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of problem before installing new fuse. Refer to [PG-3](#).

2. CHECK POWER SUPPLY CIRCUIT

1. Disconnect rear view camera control unit connector.
2. Check voltage between rear view camera control unit and ground.

Terminals		(-)	OFF	ACC
(+)				
Connector	Terminal			
B73	1	Ground	Battery voltage	Battery voltage
	2	Ground	0V	Battery voltage

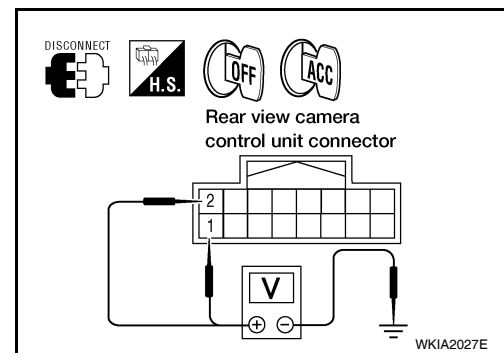

OK or NG

OK >> GO TO 3.

NG >> Check harness for open between rear view camera control unit and fuse.

3. CHECK REAR VIEW CAMERA CONTROL UNIT GROUND CIRCUIT


1. Turn ignition switch OFF.
2. Check continuity between rear view camera control unit harness connector B73 terminal 3 and ground.

Continuity should exist.

OK or NG

OK >> GO TO 4.

NG >> Repair harness or connector.

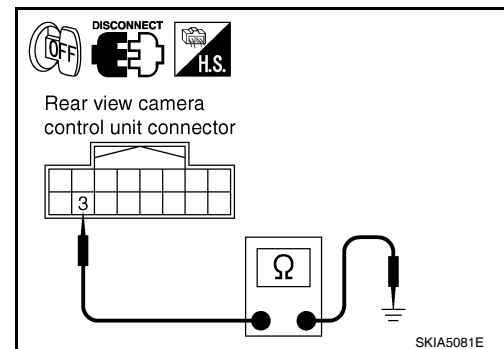

4. CHECK REAR VIEW CAMERA GROUND CIRCUIT


1. Disconnect rear view camera connector.
2. Check continuity between rear view camera harness connector D504 terminal 2 and ground.

Continuity should exist.

OK or NG

OK >> Inspection End.

NG >> Repair harness or connector.

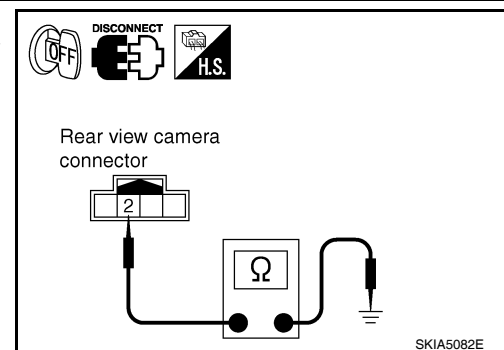

Rear View Is Not Displayed with the A/T Selector Lever in R Position

INFOID:000000003533547

1. BACK-UP LAMP INSPECTION

REAR VIEW MONITOR

< SERVICE INFORMATION >

1. Turn ignition switch ON.
2. Shift A/T selector lever to R position.


Does back-up lamp illuminate?

- YES >> GO TO 2.
NO >> Check back-up lamp system. Refer to [LT-80](#).

2.CHECK REVERSE POSITION INPUT SIGNAL

With CONSULT-II

Select "DATA MONITOR" of "REARVIEW CAMERA". Operate ignition switch with "R POSI SIG" of "DATA MONITOR" and check operate status.

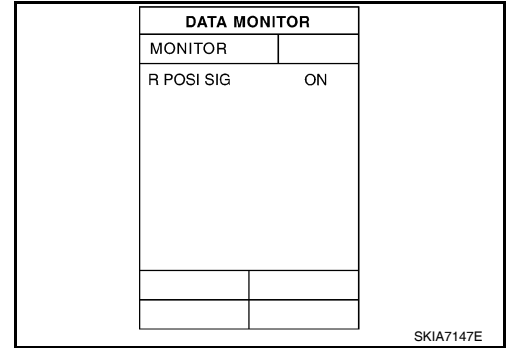


Without CONSULT-II

1. Turn ignition switch OFF.
2. Disconnect rear view camera control unit connector.
3. Turn ignition switch ON.
4. Shift A/T selector lever to R position.
5. Check voltage between rear view camera control unit harness connector B73 terminal 4 and ground.

Battery voltage should exist.

OK or NG

- OK >> GO TO 3.
NG >> Check harness for open or short between rear view camera control unit and back-up lamp relay.

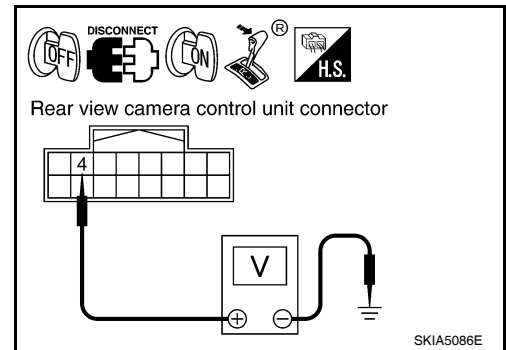


3.CHECK DISPLAY CONTROL UNIT OUTPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect rear view camera control unit connector.
3. Turn ignition switch ON.
4. Check voltage between rear view camera control unit harness connector B73 terminal 5 and ground.

Voltage : Approx. 5V

OK or NG

- OK >> GO TO 5.
NG >> GO TO 4.

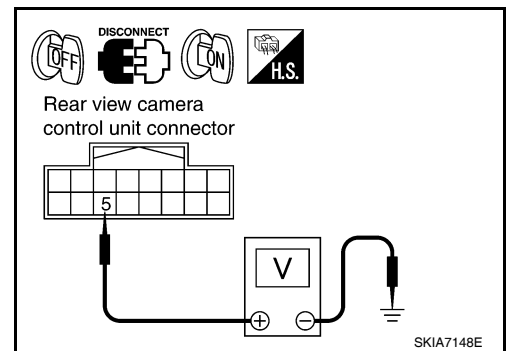

4.CHECK DISPLAY CONTROL UNIT CIRCUIT

REAR VIEW MONITOR


< SERVICE INFORMATION >

1. Turn ignition switch OFF.
2. Disconnect display control unit connector.
3. Check continuity between rear view camera control unit harness connector B73 terminal 5 and display control unit harness connector M94 terminal 8.

Continuity should exist.

4. Check continuity between rear view camera control unit harness connector B73 terminal 5 and ground.

Continuity should not exist.

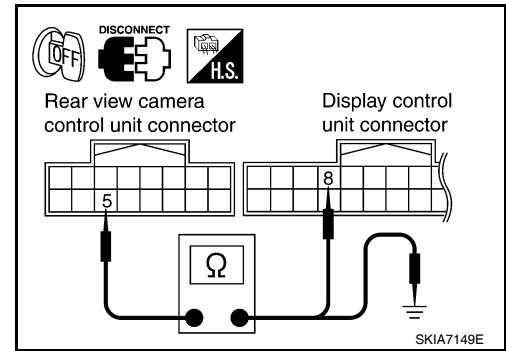

OK or NG

- OK >> Replace display control unit. Refer to [AV-145. "Removal and Installation"](#).
- NG >> Repair harness or connector.


5. CHECK AV CONTROL SIGNAL

1. Turn ignition switch OFF.
2. Connect rear view camera control unit connector.
3. Turn ignition switch ON.
4. Shift A/T selector lever to R position.
5. Check voltage between rear view camera control unit harness connector B73 terminal 5 and ground.

Voltage : Approx. 0V

OK or NG

- OK >> GO TO 6.
- NG >> Replace rear view camera control unit. Refer to [DI-71. "Removal and Installation of Rear View Camera Control Unit"](#).

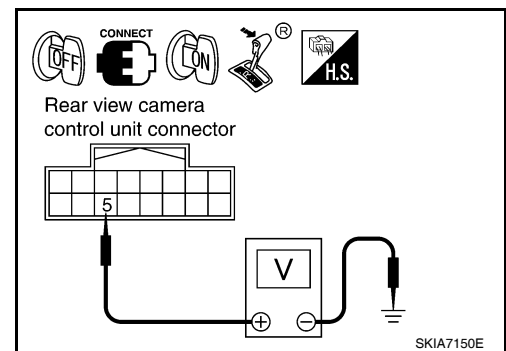

6. CHECK REAR VIEW CAMERA OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect rear view camera and rear view camera control unit connectors.
3. Check continuity between rear view camera control unit harness connector B73 terminal 8 and rear view camera harness connector D504 terminal 1.

Continuity should exist.

4. Check continuity between rear view camera control unit harness connector B73 terminal 9 and rear view camera harness connector D504 terminal 4.

Continuity should exist.


5. Check continuity between rear view camera control unit harness connector B73 terminal 10 and rear view camera harness connector D504 terminal 3.

Continuity should exist.

OK or NG

- OK >> GO TO 7.
- NG >> Repair harness or connector.

7. CHECK REAR VIEW CAMERA SHORT CIRCUIT

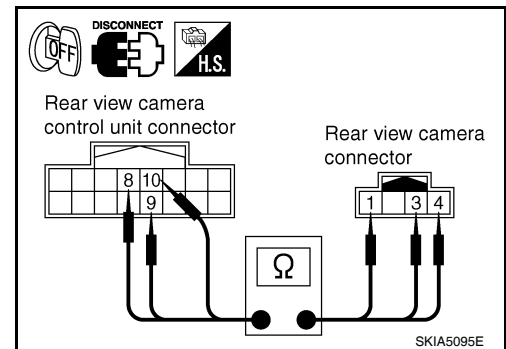

REAR VIEW MONITOR

< SERVICE INFORMATION >

1. Check continuity between rear view camera control unit harness connector B73 terminal 8 and ground.


Continuity should not exist.

2. Check continuity between rear view camera control unit harness connector B73 terminal 9 and ground.

Continuity should not exist.

3. Check continuity between rear view camera control unit harness connector B73 terminal 10 and ground.

Continuity should not exist.

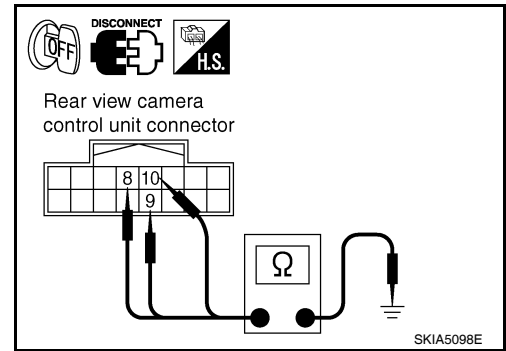

OK or NG

- OK >> GO TO 8.
 NG >> Repair harness on connector.

8. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check power supply and ground circuit. Refer to [DI-67, "Power Supply and Ground Circuit Inspection"](#).

OK or NG

- OK >> GO TO 9.
 NG >> Repair or replace power supply or ground circuit.


9. CHECK REAR VIEW CAMERA CONTROL UNIT OUTPUT SIGNAL

1. Connect rear view camera control unit connector.
2. Turn ignition switch ON.
3. Shift A/T selector lever to R position.
4. Check voltage between rear view camera control unit harness connector B73 terminal 8 and ground.

Voltage : Approx. 6V

OK or NG


- OK >> GO TO 10.
 NG >> Replace the rear view camera control unit. Refer to [DI-71, "Removal and Installation of Rear View Camera Control Unit"](#).

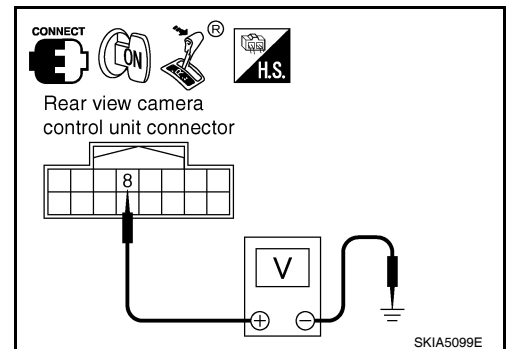


10. CHECK REAR VIEW CAMERA SIGNAL

1. Turn ignition switch OFF.
2. Connect rear view camera connector.
3. Turn ignition switch ON.
4. Shift A/T selector lever to R position.
5. Check voltage signal between rear view camera control unit harness connector B73 terminal 10 and ground.

10 - Ground:

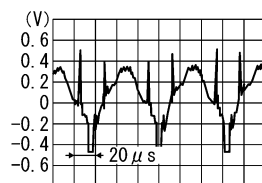

SKIA4894E

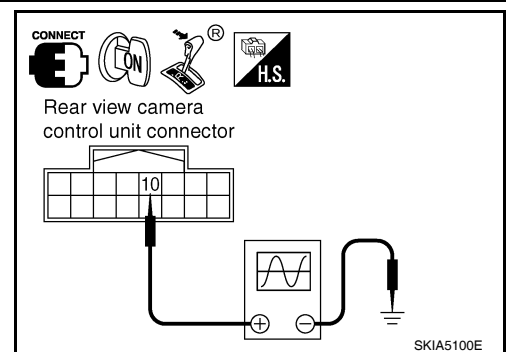

OK or NG

- OK >> GO TO 11.
 NG >> Replace the rear view camera. Refer to [DI-72, "Removal and Installation of Rear View Camera"](#).

11. CHECK COMPOSITE SIGNAL OPEN OR SHORT CIRCUIT

REAR VIEW MONITOR

< SERVICE INFORMATION >

1. Turn ignition switch OFF.
2. Disconnect rear view camera control unit connector and display unit connector.
3. Check continuity between rear view camera control unit harness connector B73 terminal 12 and display unit harness connector M93 terminal 15.

Continuity should exist.

4. Check continuity between rear view camera control unit harness connector B73 terminal 12 and ground.

Continuity should not exist.

OK or NG

OK >> GO TO 12.

NG >> Repair harness or connector.

12. CHECK COMPOSITE SIGNAL GROUND CIRCUIT

1. Check continuity between rear view camera control unit harness connector B73 terminal 11 and display unit harness connector M93 terminal 4.

Continuity should exist.

2. Check continuity between rear view camera control unit harness connector B73 terminal 11 and ground.

Continuity should not exist.

OK or NG


OK >> GO TO 13.

NG >> Repair harness or connector.

13. CHECK REAR VIEW CAMERA CONTROL UNIT COMPOSITE SIGNAL

1. Connect rear view camera control unit connector and display unit connector.
2. Turn ignition switch ON.
3. Check voltage signal between rear view camera control unit harness connector B73 terminal 12 and ground.

12 - Ground:

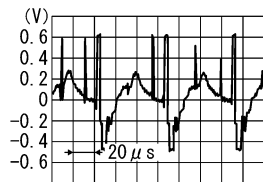

SKIA4896E

OK or NG

OK >> Replace the display unit. Refer to [AV-145, "Removal and Installation"](#).

NG >> Replace the rear view camera control unit. Refer to [DI-71, "Removal and Installation of Rear View Camera Control Unit"](#).

Removal and Installation of Rear View Camera Control Unit

INFOID:000000003533548

REMOVAL


1. Disconnect battery negative terminal.

A
B
C
D
E
F
G
H
I
J
DI
L
M
N
O
P

REAR VIEW MONITOR

< SERVICE INFORMATION >

2. Remove luggage side finishers LH. Refer to [EI-39](#).
3. Disconnect rear view camera control unit electrical connector.
4. Remove screws (2) and remove rear view camera control unit.

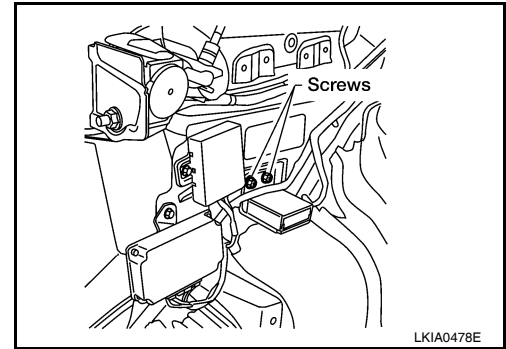

INSTALLATION


Installation is in the reverse order of removal.

Removal and Installation of Rear View Camera

INFOID:000000003533549

REMOVAL

1. Remove back door lower finisher. Refer to [EI-41](#).
2. Remove license lamp finisher. Refer to [EI-23](#).
3. Disconnect rear view camera connector.
4. Remove screws (2) and remove rear view camera.

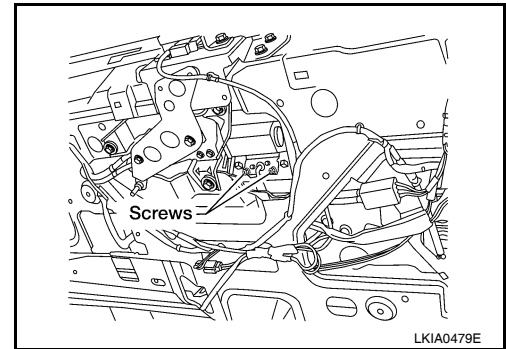

INSTALLATION

Installation is in the reverse order of removal.

NOTE:

After installing rear view camera, perform side distance guideline correction procedure. Refer to [DI-65, "Side Distance Guideline Correction"](#).