

SECTION PG

POWER SUPPLY, GROUND & CIRCUIT ELEMENTS

A
B
C
D
E

CONTENTS

PRECAUTION	2	Fusible Link	30
PRECAUTIONS	2	GROUND	31
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	2	Ground Distribution	31
Precaution Necessary for Steering Wheel Rotation After Battery Disconnect	2	HARNESS	41
Precaution for Power Generation Variable Voltage Control System	3	Harness Layout	41
PREPARATION	4	ELECTRICAL UNITS LOCATION	64
PREPARATION	4	Electrical Units Location	64
Special Service Tool	4	HARNESS CONNECTOR	67
Commercial Service Tool	4	Description	67
BASIC INSPECTION	5	STANDARDIZED RELAY	70
BATTERY	5	Description	70
How to Handle Battery	5	FUSE BLOCK - JUNCTION BOX (J/B)	72
Work Flow	7	Terminal Arrangement	72
INSPECTION AND ADJUSTMENT	8	FUSE, FUSIBLE LINK AND RELAY BOX	73
ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL	8	Terminal Arrangement	73
ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Special Repair Requirement	8	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	75
		IPDM E/R Terminal Arrangement	75
COMPONENT DIAGNOSIS	9	ON-VEHICLE REPAIR	76
POWER SUPPLY ROUTING CIRCUIT	9	BATTERY	76
Wiring Diagram — Battery Power Supply —	9	Removal and Installation	76
Wiring Diagram — Accessory Power Supply —	18	SERVICE DATA AND SPECIFICATIONS (SDS)	77
Wiring Diagram — Ignition Power Supply —	22	SERVICE DATA AND SPECIFICATIONS (SDS)	77
Fuse	30	Battery	77

PG

N

O

P

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000005852239

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution Necessary for Steering Wheel Rotation After Battery Disconnect

INFOID:0000000005852240

NOTE:

- This Procedure is applied only to models with Intelligent Key system and NATS (NISSAN ANTI-THEFT SYSTEM).
- Remove and install all control units after disconnecting both battery cables with the ignition knob in the "LOCK" position.
- Always use CONSULT-III to perform self-diagnosis as a part of each function inspection after finishing work. If DTC is detected, perform trouble diagnosis according to self-diagnostic results.

For models equipped with the Intelligent Key system and NATS, an electrically controlled steering lock mechanism is adopted on the key cylinder.

For this reason, if the battery is disconnected or if the battery is discharged, the steering wheel will lock and steering wheel rotation will become impossible.

If steering wheel rotation is required when battery power is interrupted, follow the procedure below before starting the repair operation.

OPERATION PROCEDURE

1. Connect both battery cables.

NOTE:

Supply power using jumper cables if battery is discharged.

2. Use the Intelligent Key or mechanical key to turn the ignition switch to the "ACC" position. At this time, the steering lock will be released.
3. Disconnect both battery cables. The steering lock will remain released and the steering wheel can be rotated.
4. Perform the necessary repair operation.

PRECAUTIONS

< PRECAUTION >

5. When the repair work is completed, return the ignition switch to the "LOCK" position before connecting the battery cables. (At this time, the steering lock mechanism will engage.)
6. Perform a self-diagnosis check of all control units using CONSULT-III.

Precaution for Power Generation Variable Voltage Control System

INFOID:000000003776561

CAUTION:

For this model, the battery current sensor that is installed to the negative battery cable measures the charging/discharging current of the battery and performs various engine controls. If an electrical component is connected directly to the negative battery terminal, the current flowing through that component will not be measured by the battery current sensor. This condition may cause a malfunction of the engine control system and battery discharge may occur. Do not connect an electrical component or ground wire directly to the battery terminal.

A

B

C

D

E

F

G

H

I

J

K

L

PG

N

O

P

PREPARATION


< PREPARATION >

PREPARATION

PREPARATION


Special Service Tool

INFOID:000000004688046

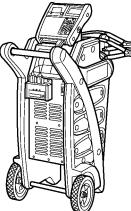Tool number (Kent-Moore No.) Tool name	Description
— (—) Model GR-8 Multitasking Battery Diagnostic Station	 AWIIA1239ZZ Tests batteries, starting and charging systems. For operating instructions, refer to diagnostic station instruction manual.

Commercial Service Tool

INFOID:000000003776563

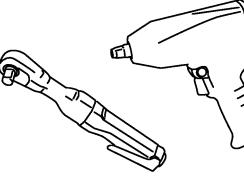Tool name	Description
Power tool	 PBIC0190E Loosening bolts and nuts

< BASIC INSPECTION >

BASIC INSPECTION**BATTERY**

How to Handle Battery

INFOID:000000003776564


CAUTION:

- If it becomes necessary to start the engine with a booster battery and jumper cables, use a 12-volt booster battery.
- After connecting battery cables, ensure that they are tightly clamped to battery terminals for good contact.
- Never add distilled water through the hole used to check specific gravity.


METHODS OF PREVENTING OVER-DISCHARGE

The following precautions must be taken to prevent over-discharging a battery.

- The battery surface (particularly its top) should always be kept clean and dry.
- The terminal connections should be clean and tight.
- At every routine maintenance, check the electrolyte level. This also applies to batteries designated as "low maintenance" and "maintenance-free".

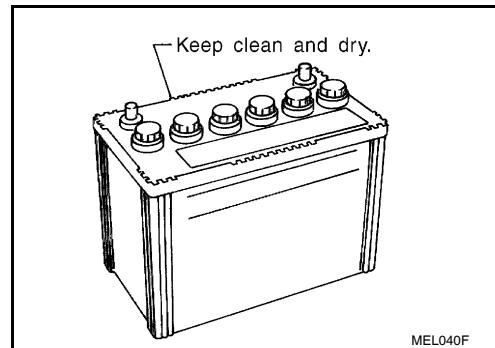


- When the vehicle is not going to be used over a long period of time, disconnect the battery cable from the negative terminal. (If the vehicle has an extended storage switch, turn it off.)

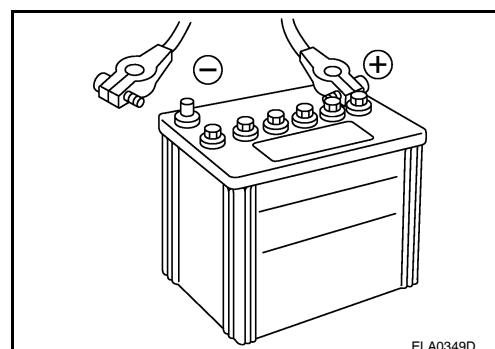

- Check the charge condition of the battery.

Periodically check the specific gravity of the electrolyte. Keep a close check on charge condition to prevent over-discharge.

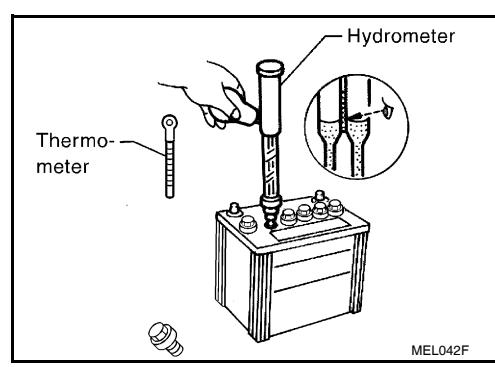

CHECKING ELECTROLYTE LEVEL


WARNING:

Never allow battery fluid to come in contact with skin, eyes, fabrics, or painted surfaces. After touching a battery, never touch or rub your eyes until you have thoroughly washed your hands. If acid contacts eyes, skin or clothing, immediately flush with water for 15 minutes and seek medical attention.

BATTERY

< BASIC INSPECTION >

- Remove the cell plug using a suitable tool.
- Add distilled water up to the MAX level.

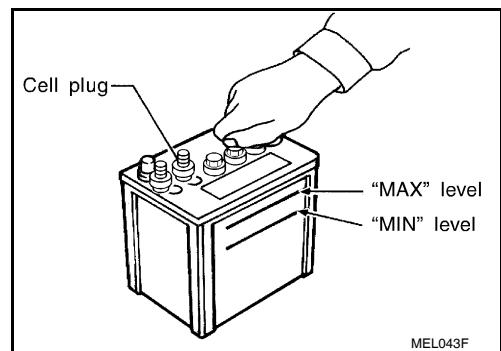


Sulphation

A battery will be completely discharged if it is left unattended for a long time and the specific gravity will become less than 1.100. This may result in sulphation on the cell plates.


To determine if a battery has been "sulphated", note its voltage and current when charging it. As shown in the figure, less current and higher voltage are observed in the initial stage of charging sulphated batteries.

A sulphated battery may sometimes be brought back into service by means of a long, slow charge, 12 hours or more, followed by a battery capacity test.

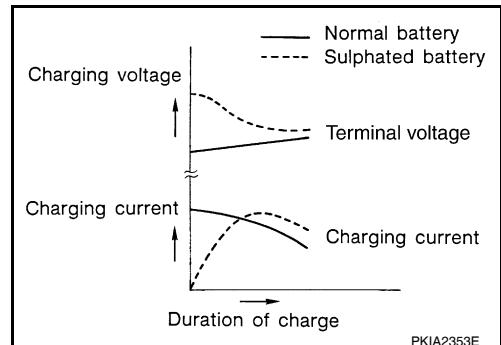

SPECIFIC GRAVITY CHECK

1. Read hydrometer and thermometer indications at eye level.
2. Use the chart below to correct your hydrometer reading according to electrolyte temperature.

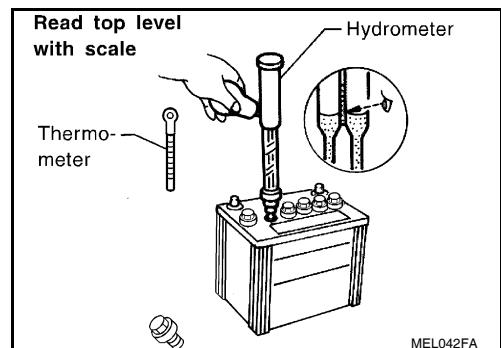

Hydrometer Temperature Correction

Battery electrolyte temperature [°C (°F)]	Add to specific gravity reading
71 (160)	0.032
66 (150)	0.028
60 (140)	0.024
54 (130)	0.020
49 (120)	0.016
43 (110)	0.012
38 (100)	0.008
32 (90)	0.004
27 (80)	0
21 (70)	-0.004
16 (60)	-0.008
10 (50)	-0.012
4 (40)	-0.016
-1 (30)	-0.020
-7 (20)	-0.024

BATTERY

< BASIC INSPECTION >

Battery electrolyte temperature [°C (°F)]	Add to specific gravity reading
-12 (10)	-0.028
-18 (0)	-0.032

Corrected specific gravity	Approximate charge condition
1.260 - 1.280	Fully charged
1.230 - 1.250	3/4 charged
1.200 - 1.220	1/2 charged
1.170 - 1.190	1/4 charged
1.140 - 1.160	Almost discharged
1.110 - 1.130	Completely discharged

CHARGING THE BATTERY

CAUTION:

- Never “quick charge” a fully discharged battery.
- Keep the battery away from open flame while it is being charged.
- When connecting the charger, connect the leads first, then turn on the charger. Never turn on the charger first, as this may cause a spark.
- If battery electrolyte temperature rises above 55 °C (131 °F), stop charging. Always charge battery at a temperature below 55 °C (131 °F).

Charging Rates

Amps	Time
50	1 hour
25	2 hours
10	5 hours
5	10 hours

Do not charge at more than 50 ampere rate.

NOTE:

The ammeter reading on your battery charger will automatically decrease as the battery charges. This indicates that the voltage of the battery is increasing normally as the state of charge improves. The charging amps indicated above refer to initial charge rate.

- If, after charging, the specific gravity of any two cells varies more than 0.050, the battery should be replaced.

Work Flow

INFOID:000000004688047

TROUBLE DIAGNOSIS WITH MULTITASKING BATTERY DIAGNOSTIC STATION

Refer to diagnostic station instruction manual.

A

B

C

D

E

F

G

H

I

J

K

L

PG

N

O

P

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

INSPECTION AND ADJUSTMENT

ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL

ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Special Repair Requirement

INFOID:000000005864655

Required Procedure After Battery Disconnection

System	Item	Reference
Engine Control	Idle Air Volume Learning	Refer to EC-18 .
Brake Control	Steering Angle Sensor Neutral Position	Refer to BRC-8 .
Glasses, Window and Mirrors	Power Window System Initialization	Refer to TSB.
Body, Lock & Security	Automatic Back Door Initialization	Refer to DLK-9 .
Roof	Sunroof Memory Reset/Initialization	Refer to RF-5 .
Seats	Automatic Drive Positioner System Initialization	Refer to Owner's Manual.
Audio-Visual System	Audio (Radio Preset)	Refer to Owner's Manual.
	Navigation System	Refer to Owner's Manual.
	Rear View Monitor Guiding Line Adjustment	Refer to AV-7 .

POWER SUPPLY ROUTING CIRCUIT


< COMPONENT DIAGNOSIS >

COMPONENT DIAGNOSIS

POWER SUPPLY ROUTING CIRCUIT

Wiring Diagram —Battery Power Supply —


INFOID:0000000003776566

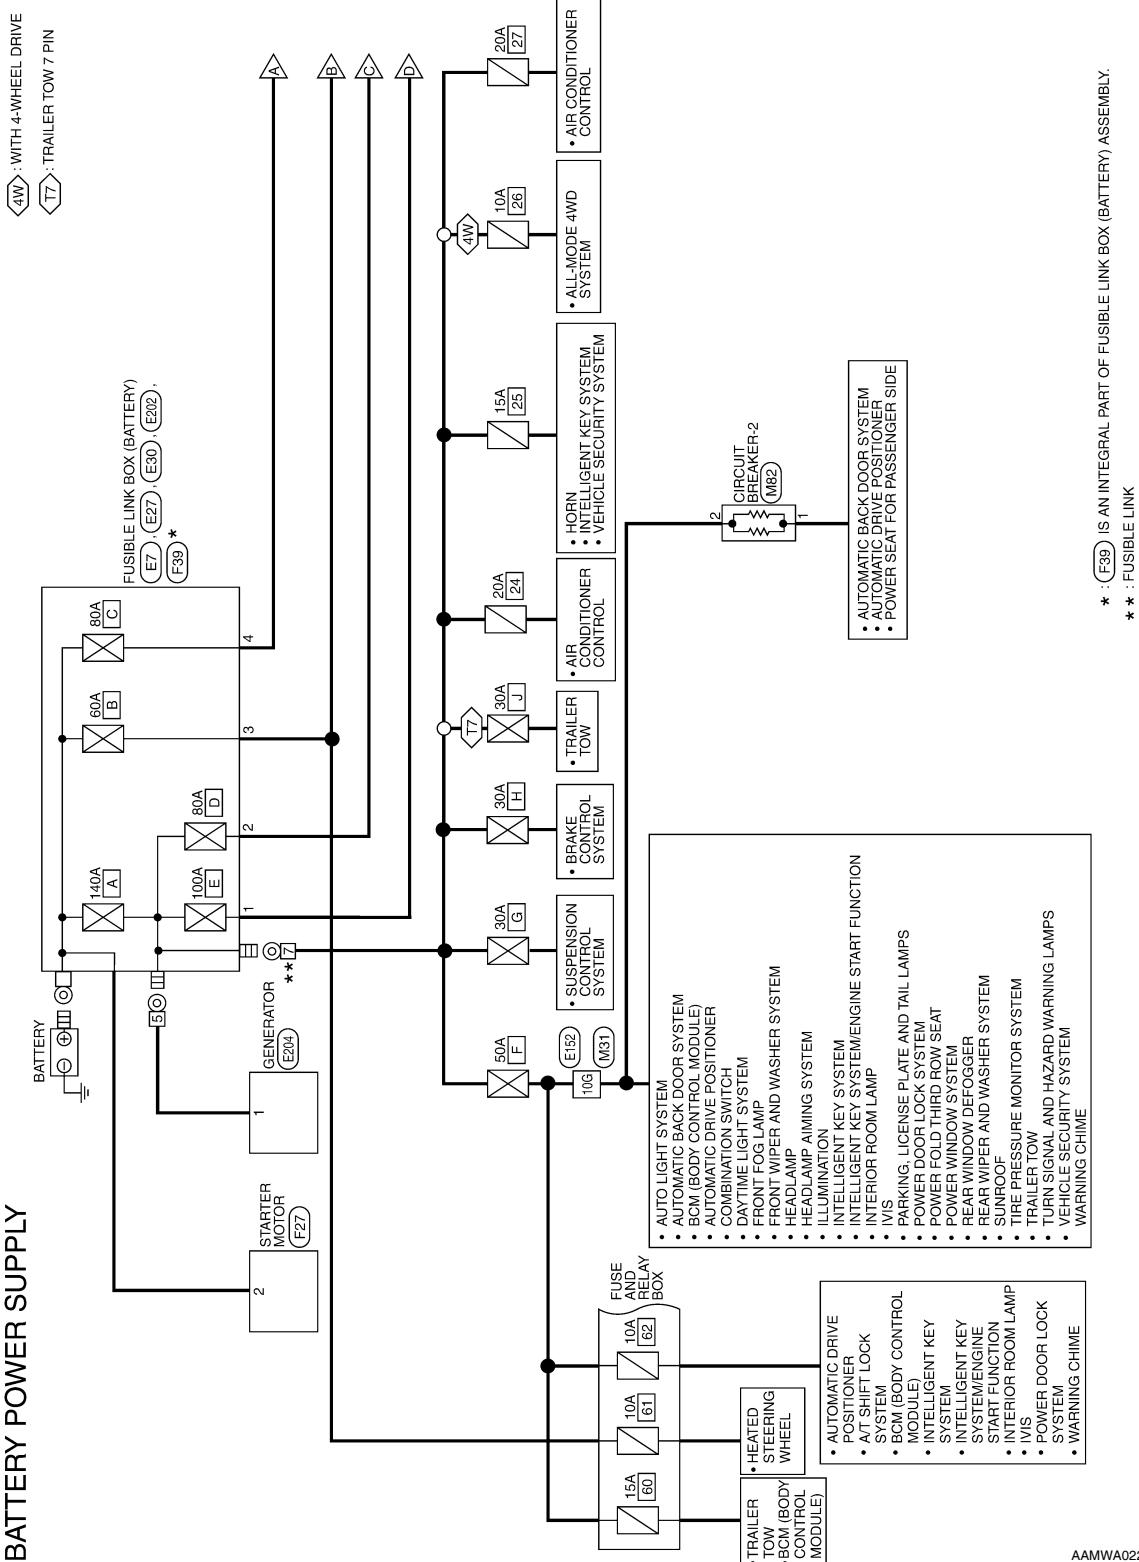

AAMWA0229GI

POWER SUPPLY ROUTING CIRCUIT


< COMPONENT DIAGNOSIS >

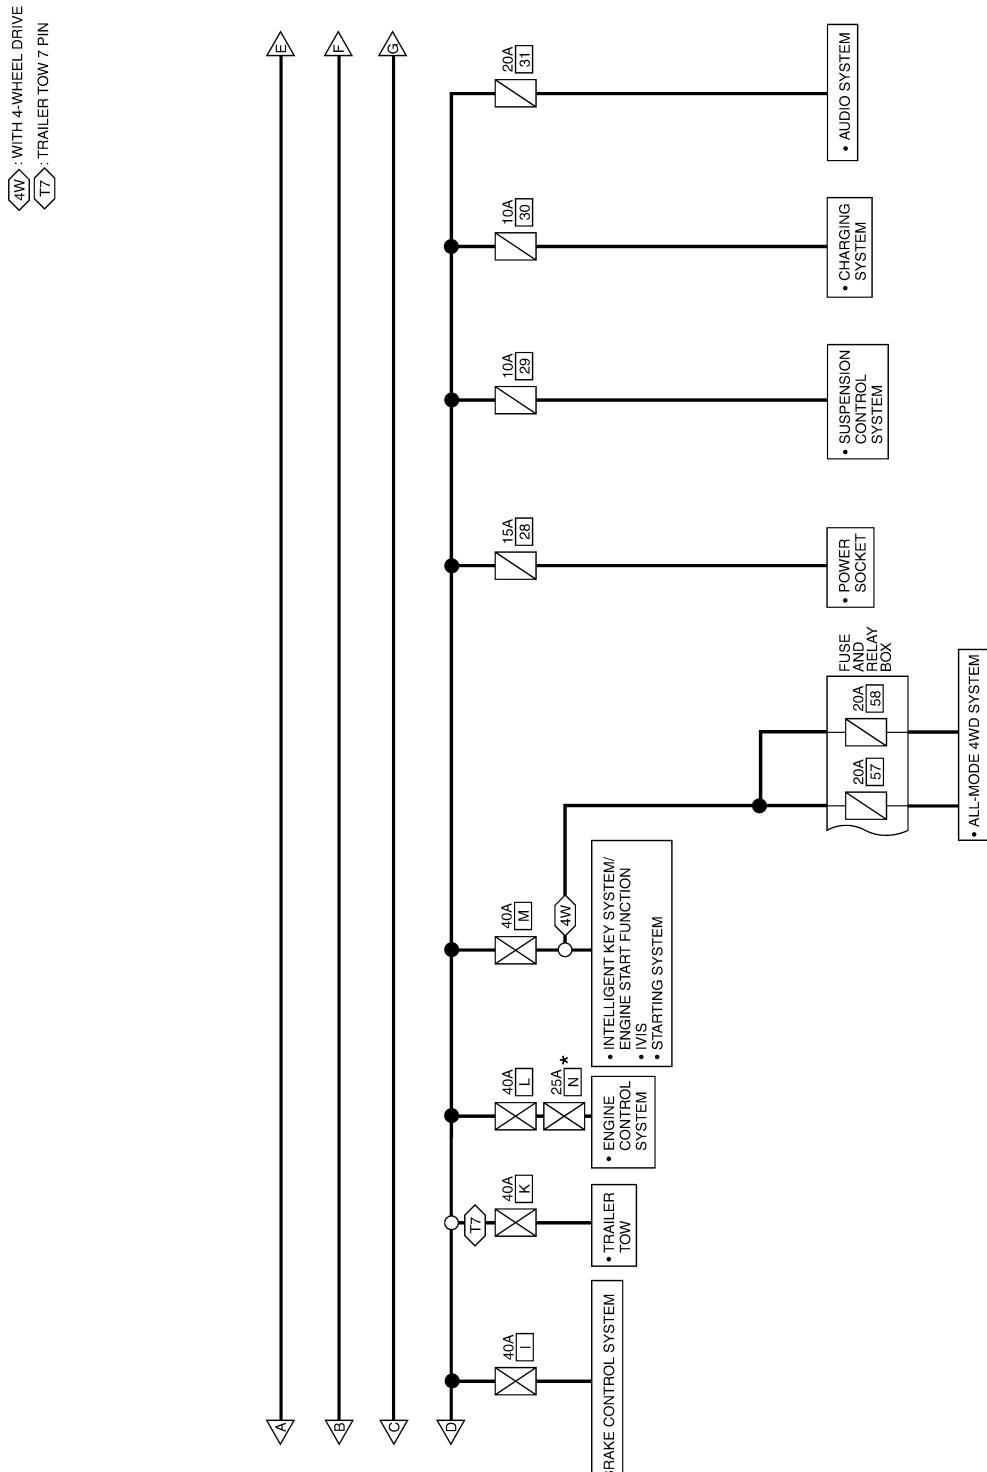

ABMWAA006 : THIS FUSE IS LOCATED IN THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) BOX

POWER SUPPLY ROUTING CIRCUIT


< COMPONENT DIAGNOSIS >

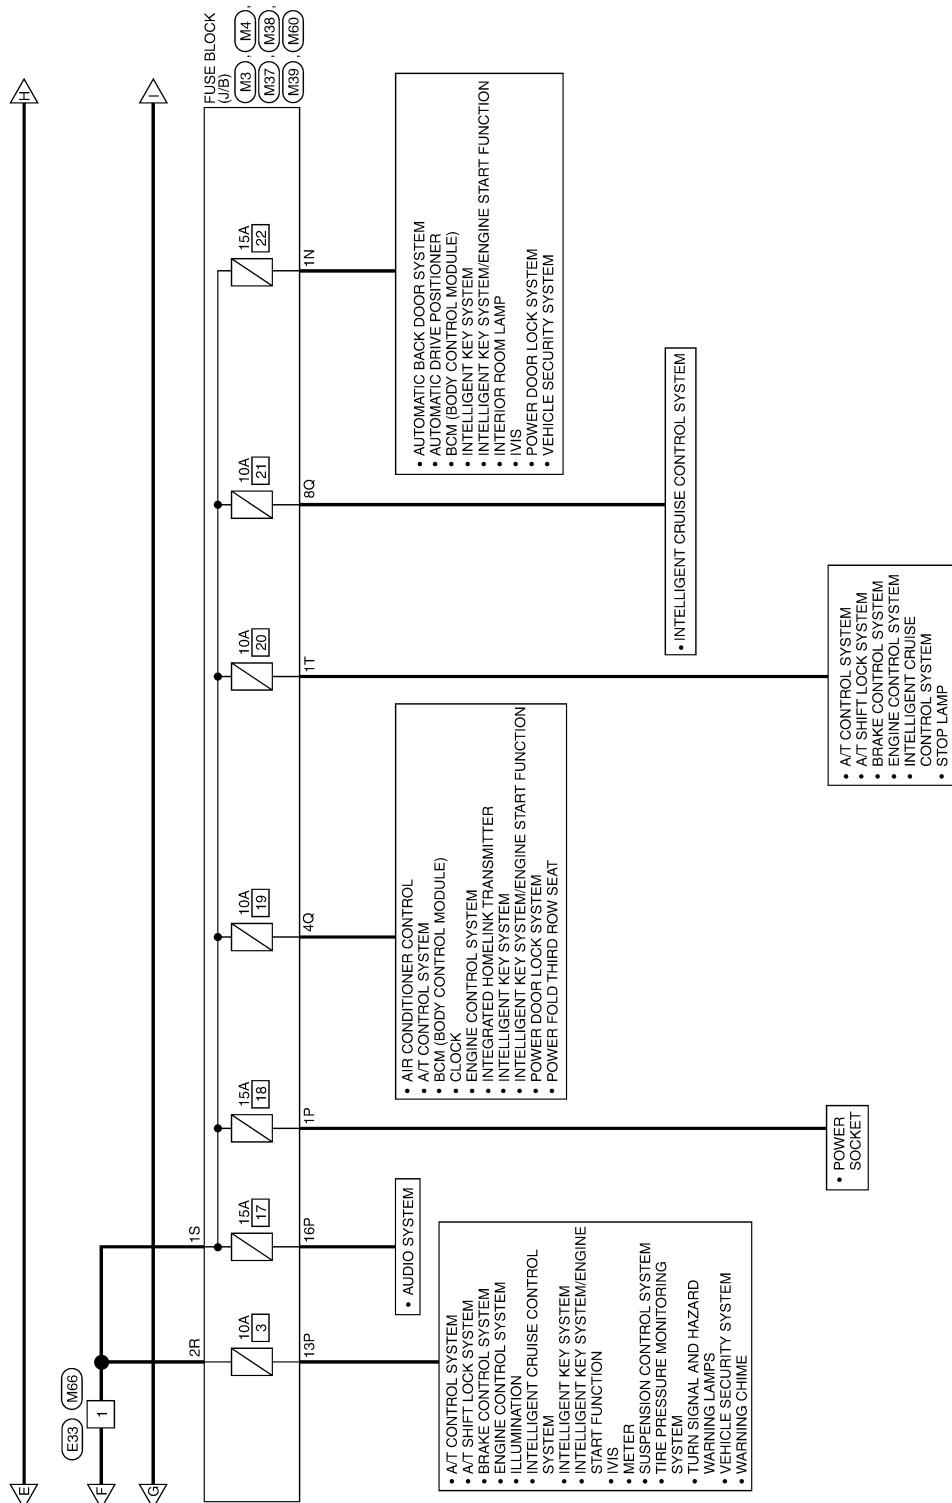

AAMWA0230GI

POWER SUPPLY ROUTING CIRCUIT

< COMPONENT DIAGNOSIS >

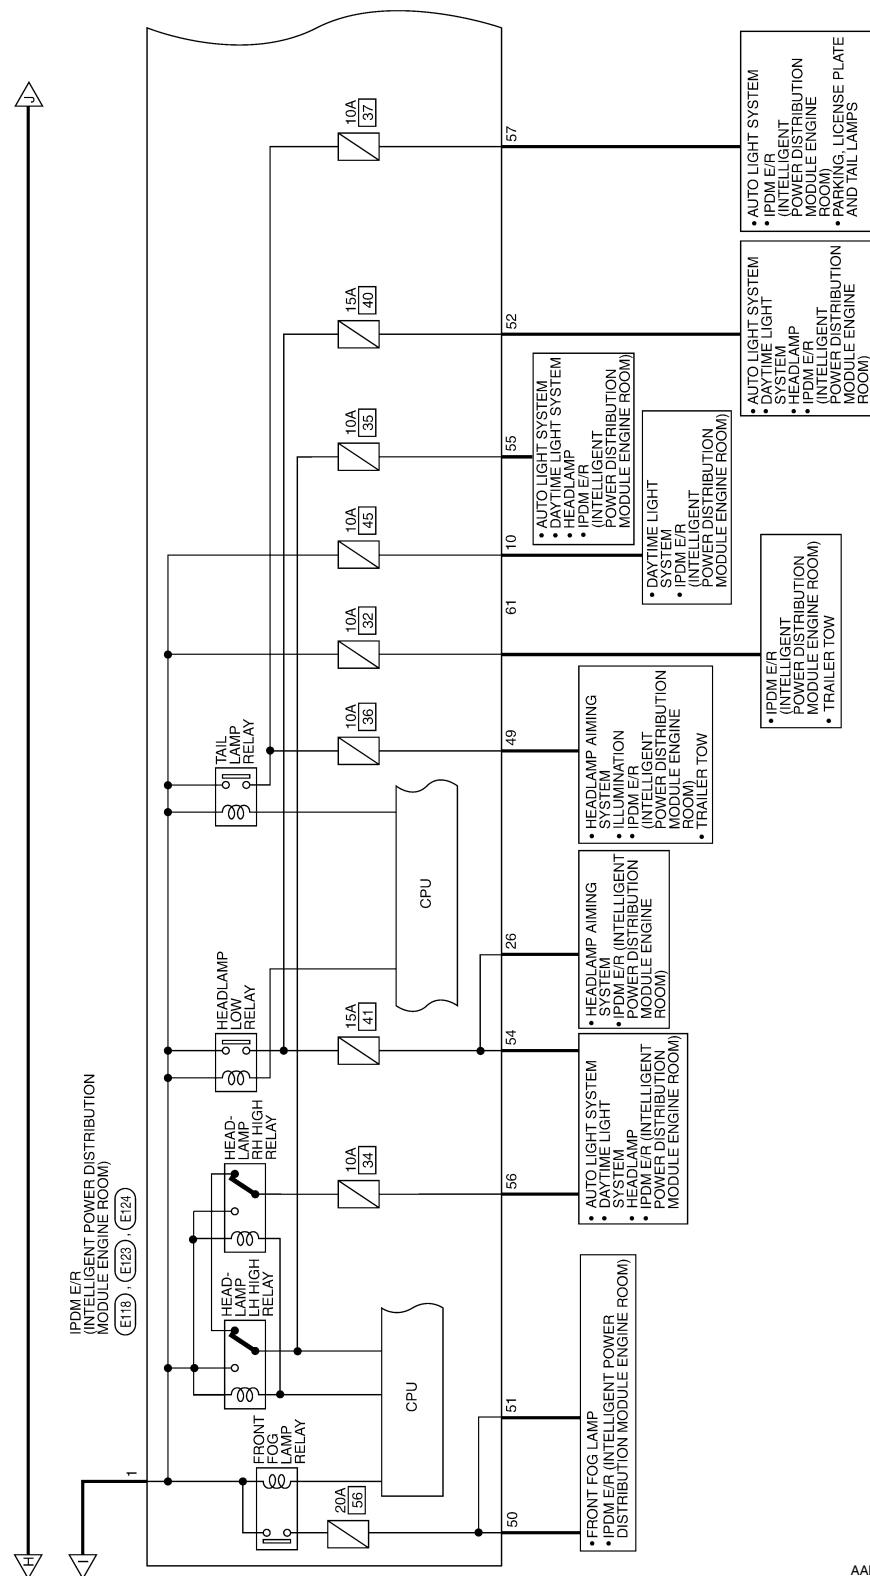


AAMWA0231GI

POWER SUPPLY ROUTING CIRCUIT

< COMPONENT DIAGNOSIS >

■ : DATA LINE

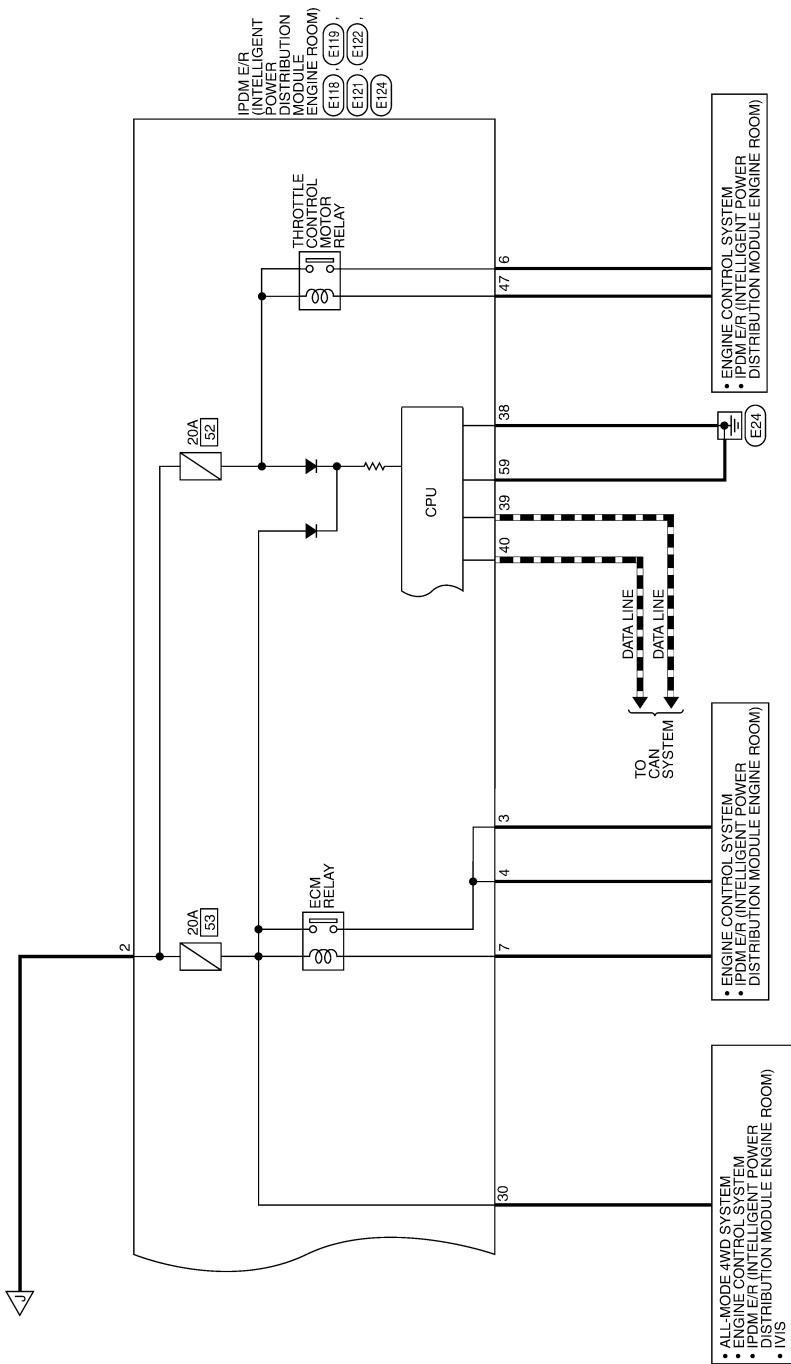

POWER SUPPLY ROUTING CIRCUIT

< COMPONENT DIAGNOSIS >

BATTERY POWER SUPPLY CONNECTORS

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1N	Y/R	—
1P	G	CPM SOCKET
13P	P	—
16P	R	WOOFER

Terminal No.	Color of Wire	Signal Name
1P	G	CPM SOCKET
13P	P	—
16P	R	WOOFER

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

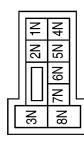

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Connector No.	M39
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
10G	W/B	—
8G	7G	7G
7G	7G	7G

Terminal No.	Color of Wire	Signal Name
10G	W/B	—
8G	7G	7G
7G	7G	7G

Connector No.	M38
Connector Name	FUSE BLOCK (J/B)
Connector Color	BLACK



Connector No.	M37
Connector Name	FUSE BLOCK (J/B)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
2R	W	B
1S	W	B
8Q	W/L	ACC

Terminal No.	Color of Wire	Signal Name
2R	W	B
1S	W	B
8Q	W/L	ACC


POWER SUPPLY ROUTING CIRCUIT

< COMPONENT DIAGNOSIS >

Connector No.	M60
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

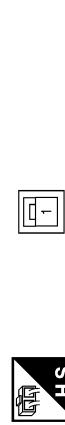

Connector No.	M60
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

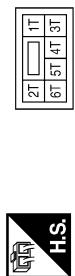

Terminal No.	Color of Wire	Signal Name
1T	R/Y	-

Terminal No.	Color of Wire	Signal Name
1	W	-

Terminal No.	Color of Wire	Signal Name
1	L/B	-
2	W/B	-



Terminal No.	Color of Wire	Signal Name
1	W	-



Terminal No.	Color of Wire	Signal Name
7	W	-

Terminal No.	Color of Wire	Signal Name
7	W	-

Terminal No.	Color of Wire	Signal Name
1	B/R	-
2	B/Y	-




A B C D E F G H I K L M O P PG Z N O P

POWER SUPPLY ROUTING CIRCUIT

< COMPONENT DIAGNOSIS >

Connector No.	E118
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK

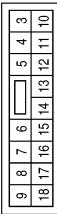


Connector No.	E33
Connector Name	WIRE TO WIRE
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	B/Y	F/L USM
2	R	F/L MAIN

Terminal No.	Color of Wire	Signal Name
3	BR	IGN COIL
4	W/L	ECU (VB)
6	L	ETC
7	W/B	ECM RLY CONT
10	G	DTRL RLY SUPPLY

Terminal No.	Color of Wire	Signal Name
51	50	H/LAMP HI RH (WITH DAYTIME LIGHT SYSTEM)
56	54	H/LAMP LO RH
56	53	H/LAMP HI LH (WITH DAYTIME LIGHT SYSTEM)
56	52	H/LAMP LO LH

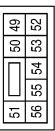

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

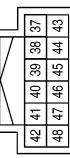

Connector No.	E121
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L
47	O	ETC RLY CONT




Terminal No.	Color of Wire	Signal Name
49	R/L	ILLUMINATION
50	W/R	FR FOG LAMP LH
51	W/R	FR FOG LAMP RH
52	L	H/LAMP LO LH
54	R/Y	H/LAMP LO RH
55	G	H/LAMP HI LH
56	Y	H/LAMP HI RH (WITH DAYTIME LIGHT SYSTEM)
56	W	H/LAMP HI RH (WITHOUT DAYTIME LIGHT SYSTEM)

AAMIA0441GB

POWER SUPPLY ROUTING CIRCUIT

< COMPONENT DIAGNOSIS >

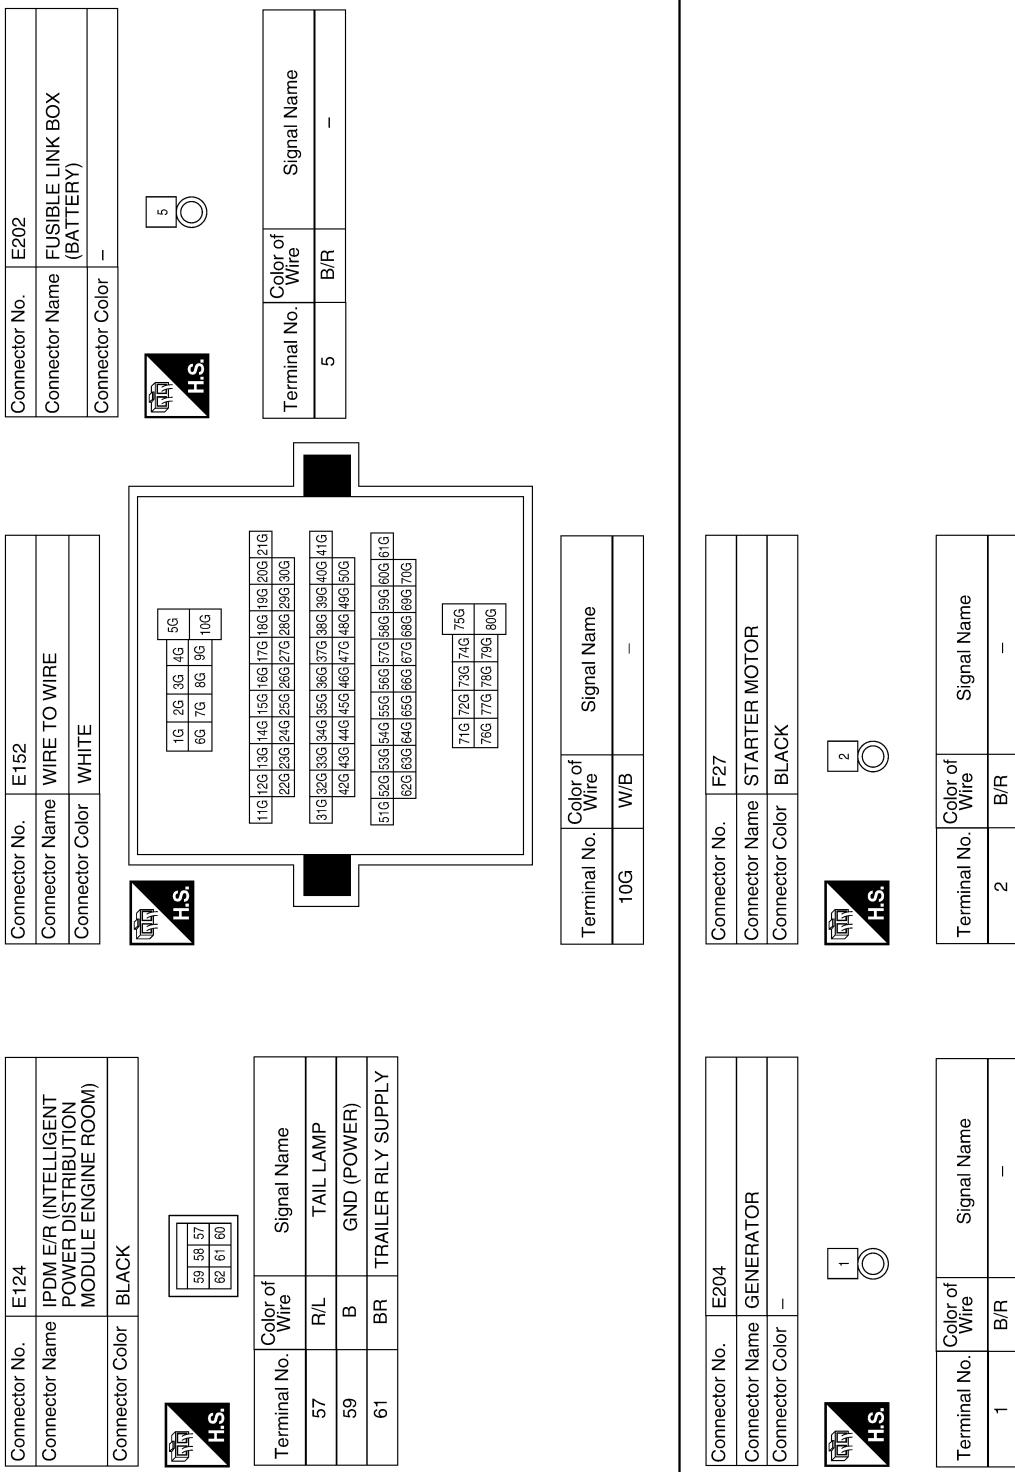


AAMIA0442GB

POWER SUPPLY ROUTING CIRCUIT

< COMPONENT DIAGNOSIS >

Wiring Diagram —Accessory Power Supply —

INFOID:000000004244431

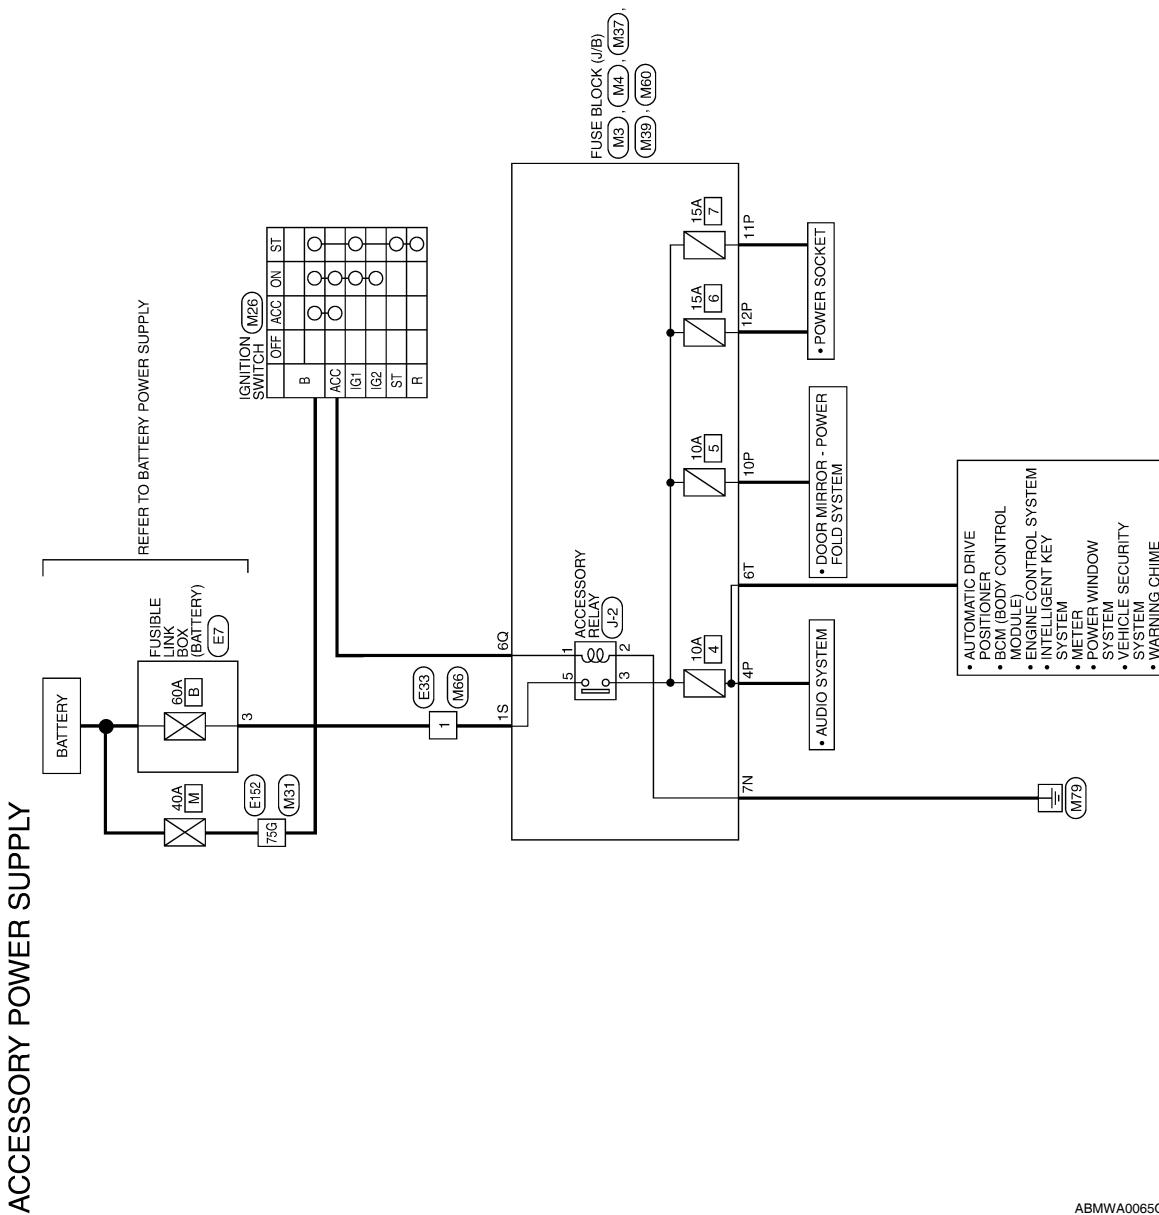

Revision: December 2009

POWER SUPPLY ROUTING CIRCUIT


< COMPONENT DIAGNOSIS >

ACCESSORY POWER SUPPLY CONNECTORS

Connector No.	M26
Connector Name	IGNITION SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
B	G	—
ACC	V	—

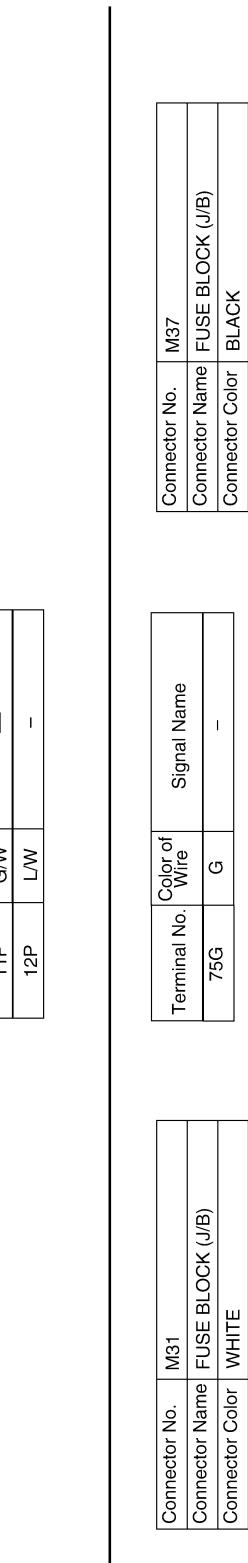

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
4P	V	-
10P	O	-
11P	G/W	-
12P	L/W	-

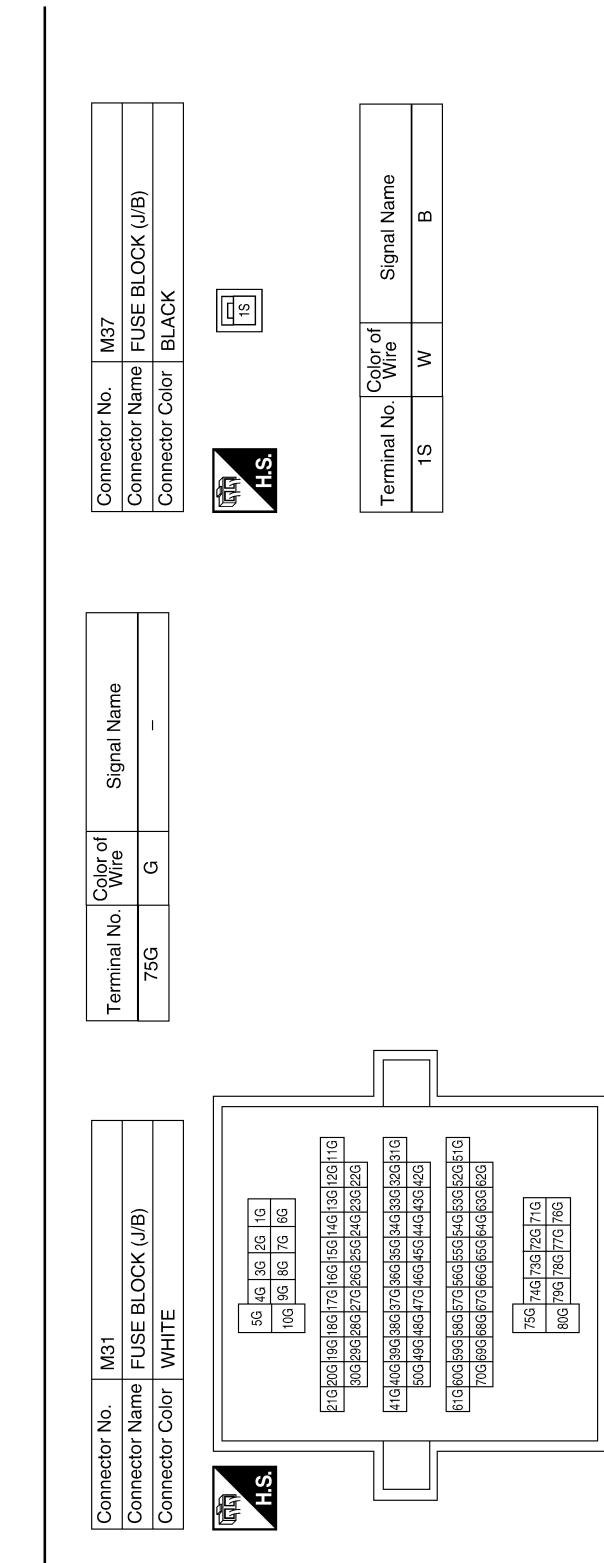

AAMIA0443GB

POWER SUPPLY ROUTING CIRCUIT


< COMPONENT DIAGNOSIS >

Connector No.	M66
Connector Name	WIRE TO WIRE
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	W	-

Connector No.	M60
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

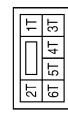

Terminal No.	Color of Wire	Signal Name
6T	O	-

Connector No.	M39
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

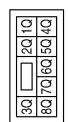

Terminal No.	Color of Wire	Signal Name
6Q	V	ACC

Connector No.	E33
Connector Name	WIRE TO WIRE
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	W	-

Connector No.	E7
Connector Name	FUSIBLE LINK BOX (BATTERY)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
3	W	-

POWER SUPPLY ROUTING CIRCUIT

< COMPONENT DIAGNOSIS >

A

B

C

D

E

F

G

H

J

K

L


PG

N

O


P

Connector No.	J-2
Connector Name	FUSE BLOCK (J/B) (ACCESSORY RELAY)
Connector Color	-

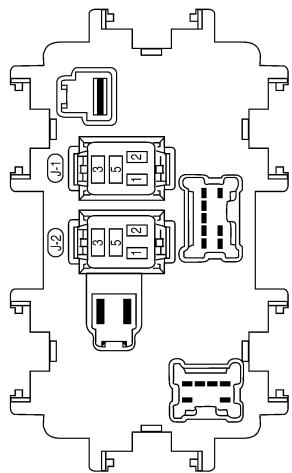

Terminal No.	Color of Wire	Signal Name
1	-	-
2	-	-
3	-	-
5	-	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

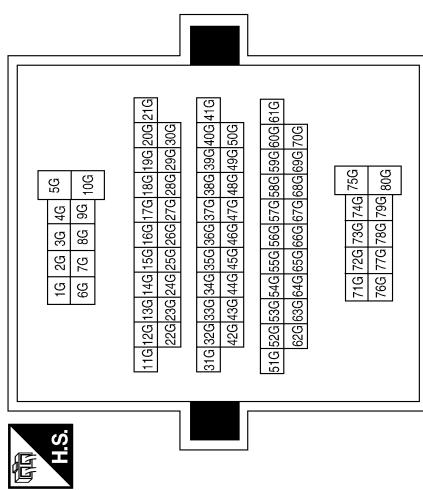


Terminal No.	Color of Wire	Signal Name
75G	G	-

POWER SUPPLY ROUTING CIRCUIT

< COMPONENT DIAGNOSIS >


Wiring Diagram —Ignition Power Supply —

INFOID:0000000003776567

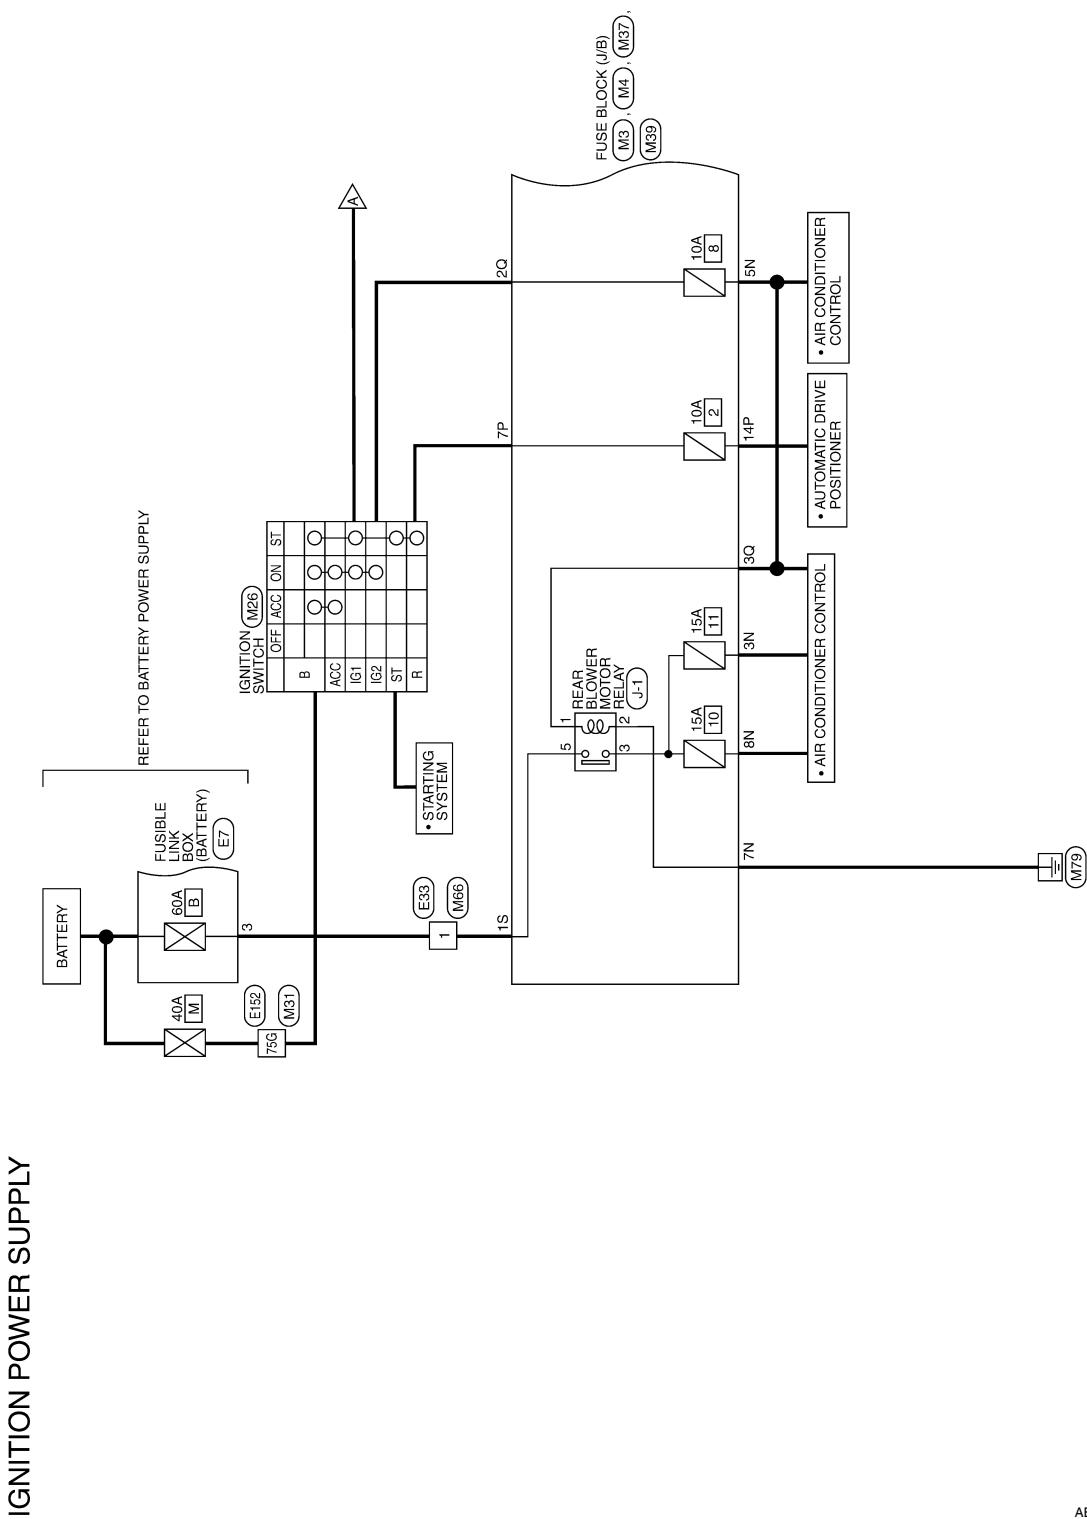


POWER SUPPLY ROUTING CIRCUIT

< COMPONENT DIAGNOSIS >

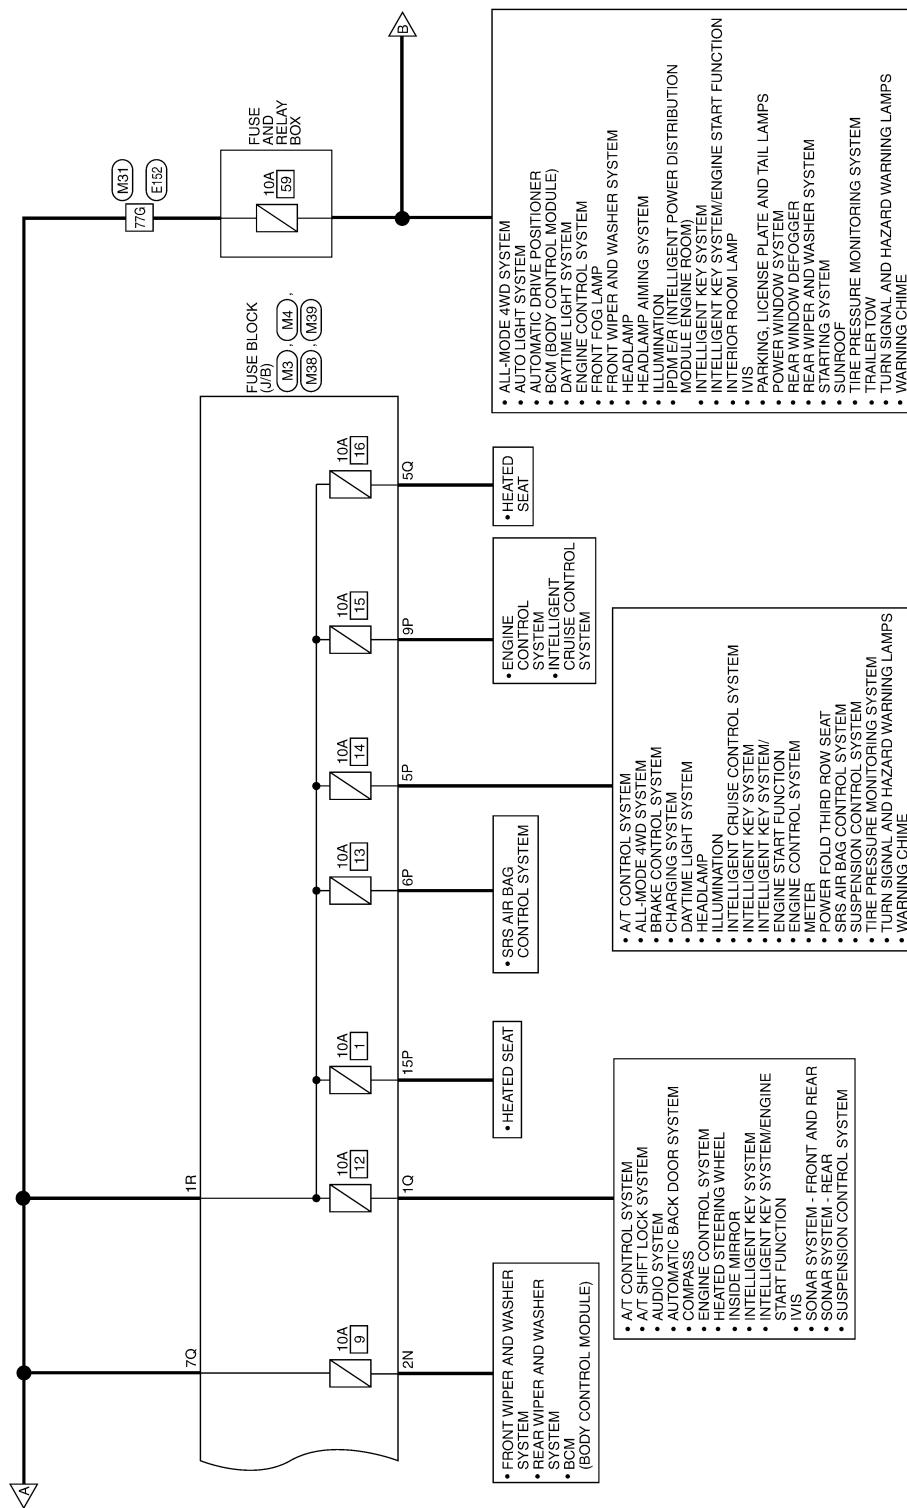

POWER SUPPLY ROUTING CIRCUIT

< COMPONENT DIAGNOSIS >

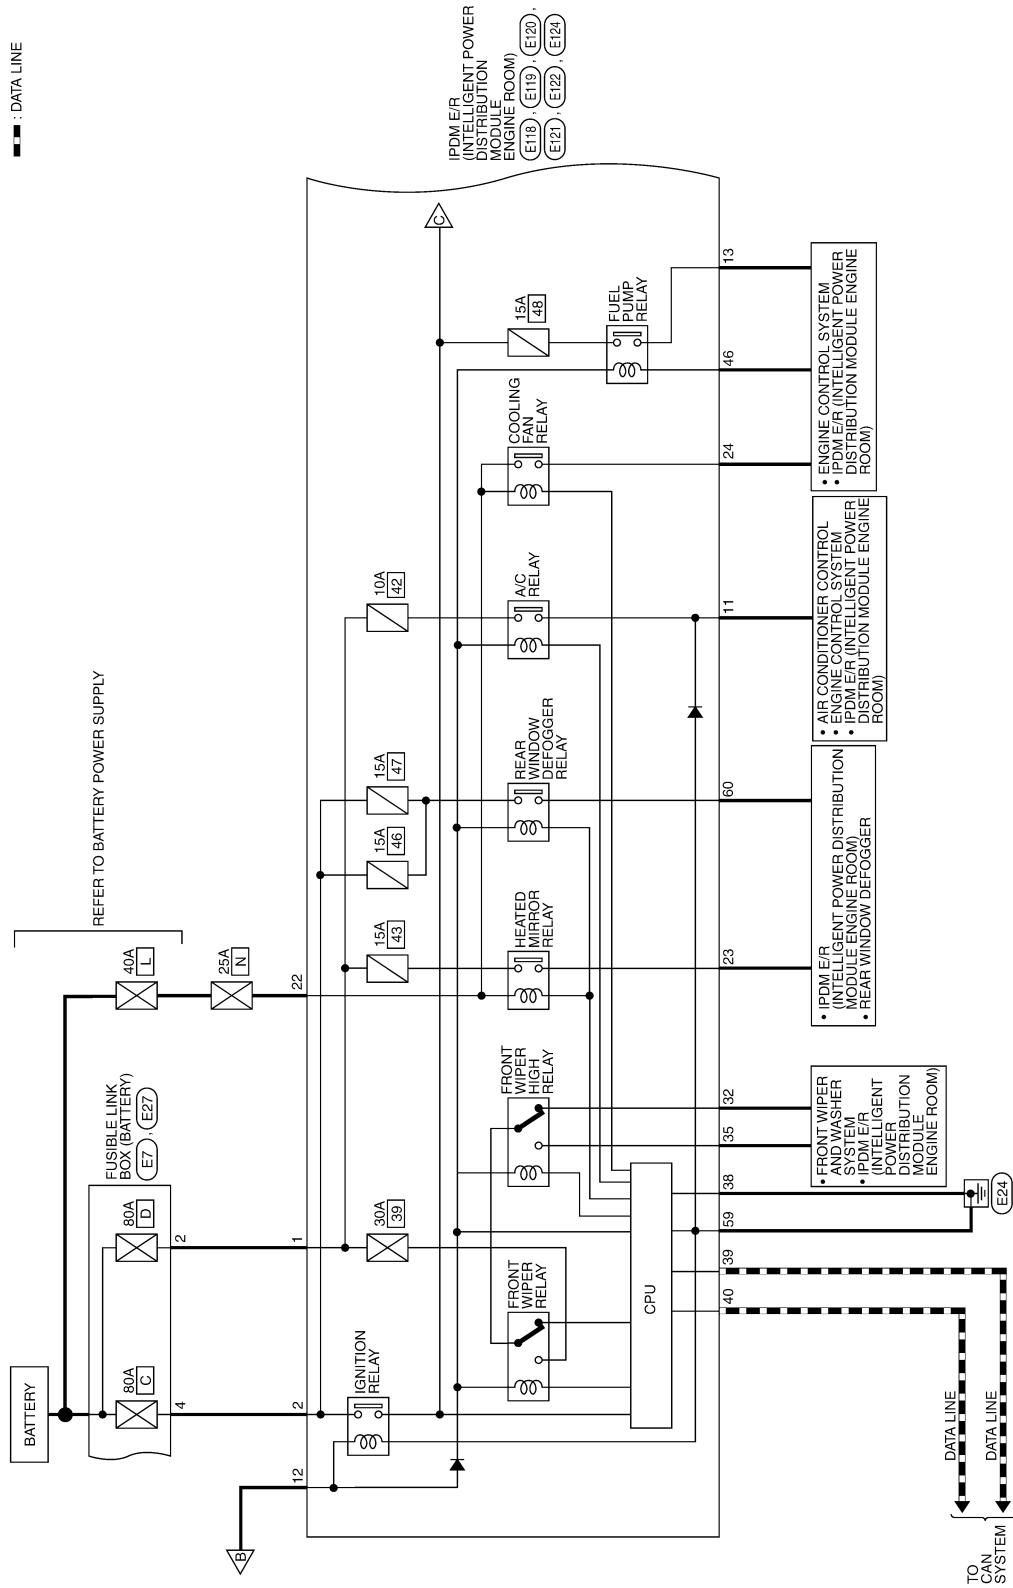


* THIS FUSE IS LOCATED IN THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) BOX.

AAMWA0232GI

POWER SUPPLY ROUTING CIRCUIT

< COMPONENT DIAGNOSIS >


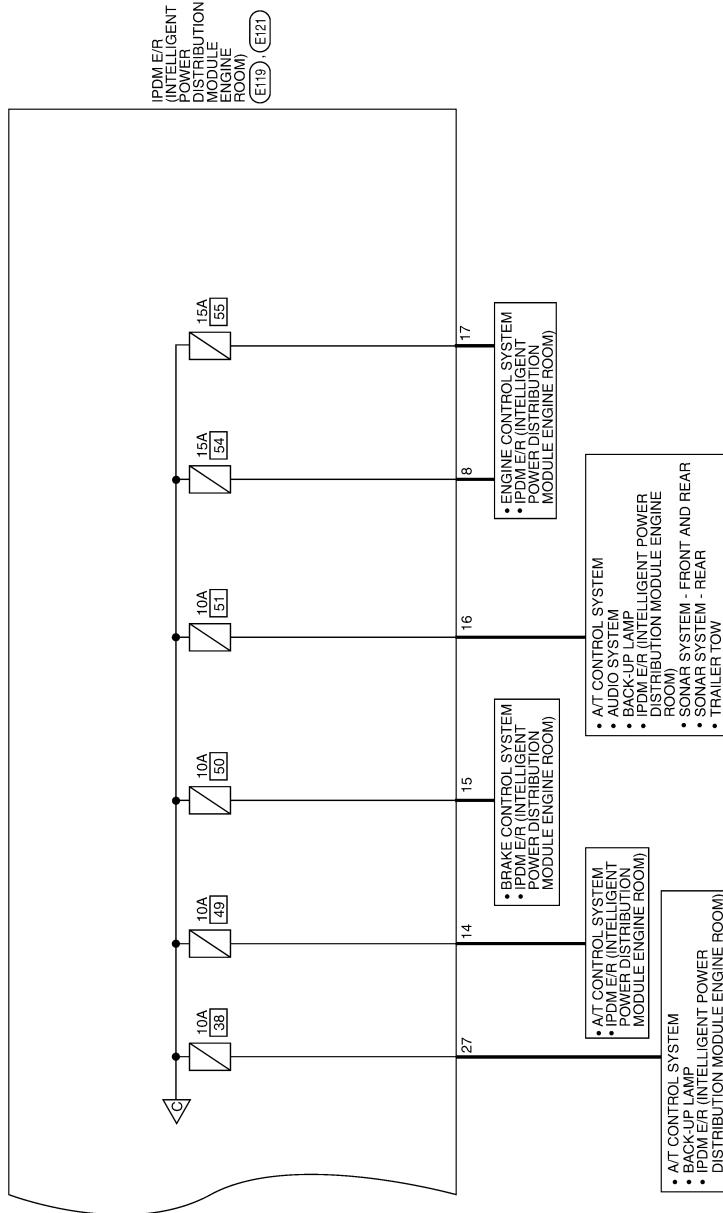


ABMWA0069GI


POWER SUPPLY ROUTING CIRCUIT


< COMPONENT DIAGNOSIS >

IGNITION POWER SUPPLY CONNECTORS

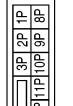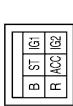Connector No.	M3	Connector No.	M4
Connector Name	FUSE BLOCK (J/B)	Connector Name	IGNITION SWITCH
Connector Color	WHITE	Connector Color	WHITE
			
			

Terminal No.	Color of Wire	Signal Name	Terminal No.	Color of Wire	Signal Name
2N	R/L	WASH	5P	O/L	-
3N	SB	-	6P	W/L	-
5N	Y/G	-	7P	LG	ST-R
7N	B	-	9P	RB	-
8N	L/R	-	14P	O	AUTO DRFO
			15P	O/B	-

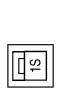Connector No.	M26	Connector No.	M37		
Connector Name	IGNITION SWITCH	Connector Name	FUSE BLOCK (J/B)		
Connector Color	WHITE	Connector Color	BLACK		
					
Terminal No.	Color of Wire	Signal Name	Terminal No.	Color of Wire	Signal Name
75G	G	-	75G	G	-
77G	B/R	-	77G	B/R	-

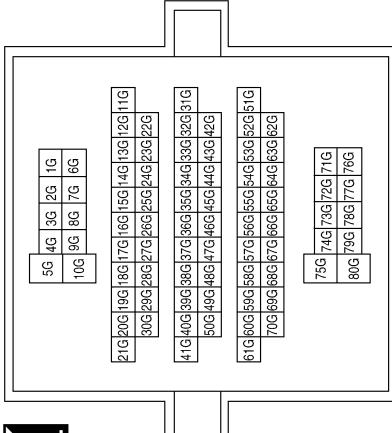

POWER SUPPLY ROUTING CIRCUIT

< COMPONENT DIAGNOSIS >

Connector No.	M38
Connector Name	FUSE BLOCK (J/B)
Connector Color	BLACK



Connector No.	M39
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1Q	G/R	-
2Q	R	IGN N
3Q	Y/G	IGN 2
5Q	G	-
7Q	B/R	GN

Terminal No.	Color of Wire	Signal Name
1R	B/R	IGN

Connector No.	E28
Connector Name	FUSE BLOCK (J/B)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	W	-



Connector No.	E27
Connector Name	FUSIBLE LINK BOX (BATTERY)
Connector Color	BROWN



2	B/Y	-
3	W	-
4	R	-



1	W	-
---	---	---

Connector No.	E33
Connector Name	WIRE TO WIRE
Connector Color	BLACK




A B C D E F G H I K L M O P PG Z N

POWER SUPPLY ROUTING CIRCUIT

< COMPONENT DIAGNOSIS >


Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

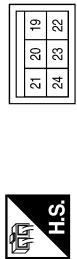

Connector No.	E120
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Connector No.	E118
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK

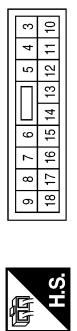

Terminal No.	Color of Wire	Signal Name
1	B/Y	F/L USM
2	R	F/L MAIN

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK




Connector No.	E121
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
27	W/B	T TOW REV LAMP
32	L	FR WIPER LO
35	L/B	FR WIPER HI

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

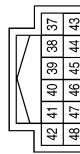


Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
59	B	GND (SIGNAL)
60	B/W	CAN-H
40	P	CAN-L
46	GR	FUEL PUMP RLY CONT

POWER SUPPLY ROUTING CIRCUIT

< COMPONENT DIAGNOSIS >

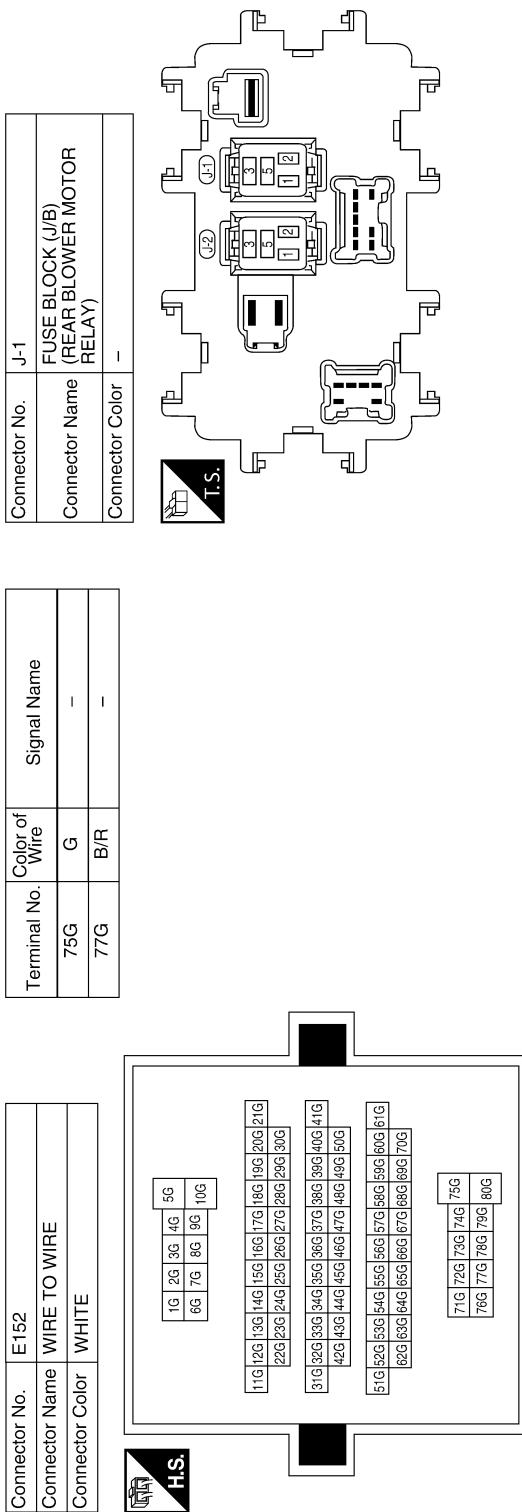

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
PG

AAMIA0447GB


POWER SUPPLY ROUTING CIRCUIT

< COMPONENT DIAGNOSIS >

Fuse

INFOID:000000003776568

- If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse.
- Use fuse of specified rating. Never use fuse of more than specified rating.
- Do not partially install fuse; always insert it into fuse holder properly.
- Remove fuse for "ELECTRICAL PARTS (BAT)" if vehicle is not used for a long period of time.

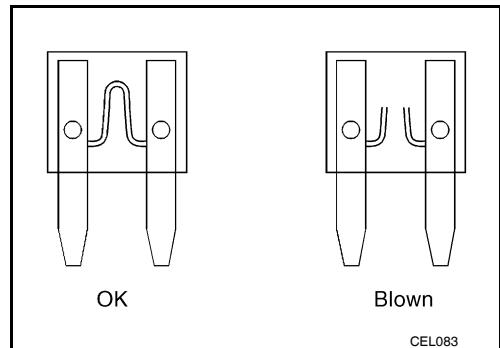

Fusible Link


INFOID:000000003776569

A melted fusible link can be detected either by visual inspection or by feeling with finger tip. If its condition is questionable, use circuit tester or test lamp.

1 : Fusible link

CAUTION:

- If fusible link should melt, it is possible that critical circuit (power supply or large current carrying circuit) is shorted. In such a case, carefully check and eliminate cause of malfunction.
- Never wrap outside of fusible link with vinyl tape. Important: Never let fusible link touch any other wiring harness, vinyl or rubber parts.

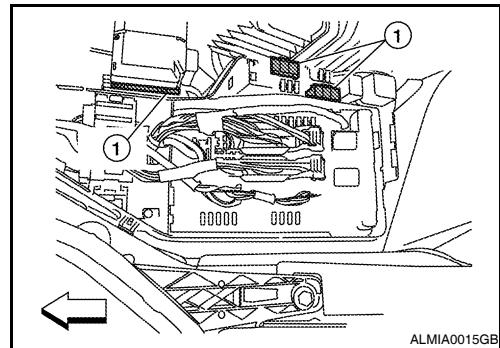

GROUND



< COMPONENT DIAGNOSIS >

GROUND

Ground Distribution


INFOID:0000000003776570

MAIN HARNESS

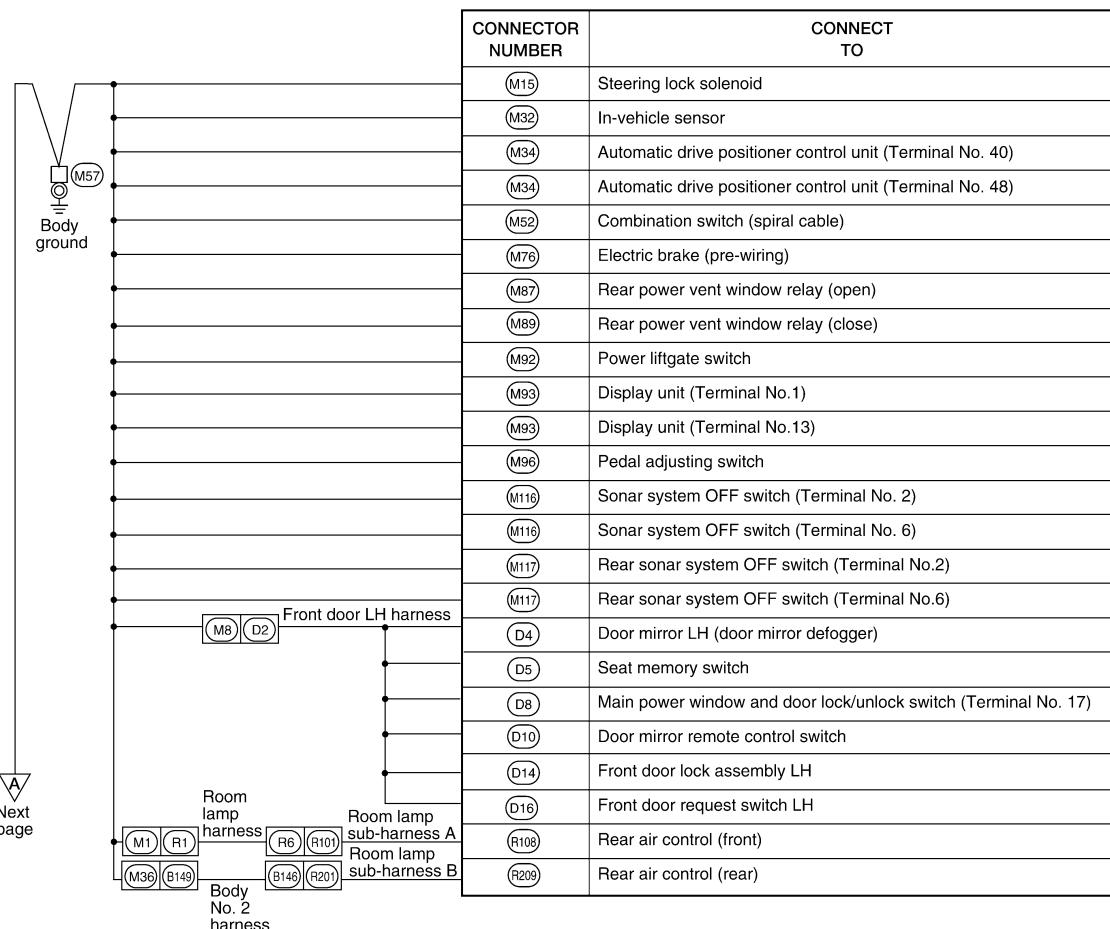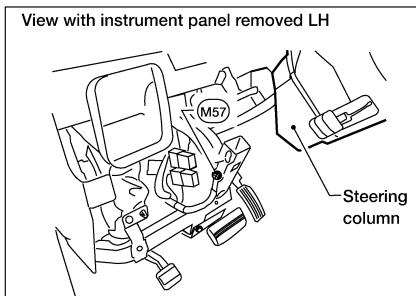

GROUND

< COMPONENT DIAGNOSIS >

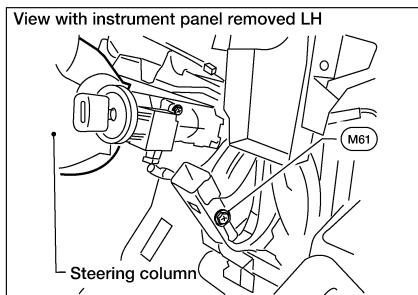

Preceding page
A

Body ground
(M61)



B
Next page

CONNECTOR NUMBER	CONNECT TO
(M16)	ADP Steering switch
(M17)	Steering angle sensor
(M20)	BCM (Terminal No. 67)
(M21)	NATS antenna amp
(M22)	Data link connector (Terminal No. 4)
(M22)	Data link connector (Terminal No. 5)
(M23)	Combination meter (Terminal No. 47)
(M23)	Combination meter (Terminal No. 52)
(M24)	Combination meter (Terminal No. 20)
(M28)	Combination switch (Terminal No. 12)
(M35)	Air bag diagnosis sensor unit (Terminal No.2)
(M45)	AV control unit (Terminal No. 65)
(M45)	AV control unit (Terminal No. 67)
(M45)	AV control unit (Terminal No. 86)
(M45)	AV control unit (Terminal No. 87)
(M50)	A/C auto amp.
(M51)	Trailer tow relay 1
(M70)	Intelligent key unit (Terminal No.12)
(M107)	Front blower relay
(M112)	BOSE speaker amp. (Terminal No. 12)
(M122)	Variable blower control (front)
(M139)	Diode-1
(M148)	Headlamp aiming switch

ABMIA0147GB

GROUND

< COMPONENT DIAGNOSIS >

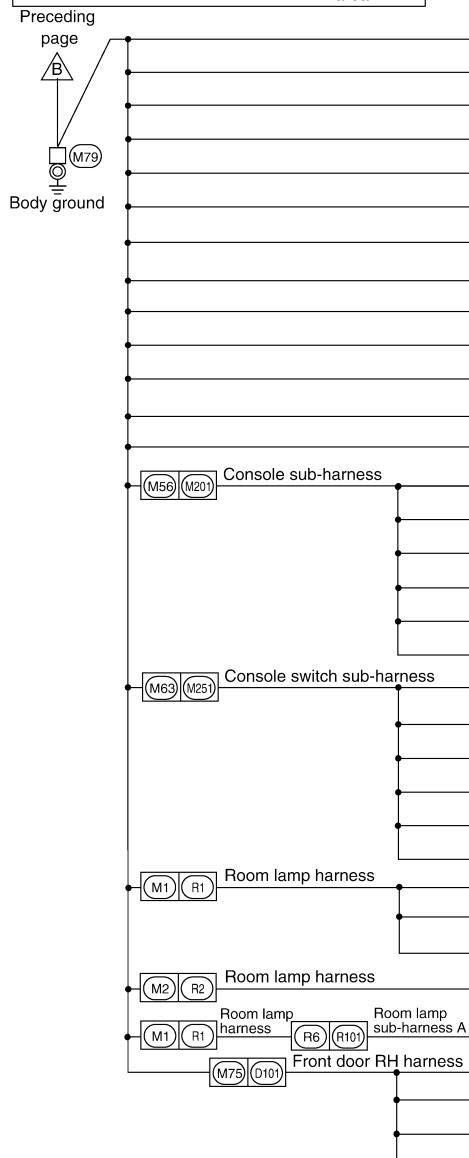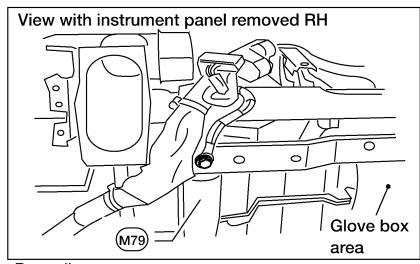

CONNECTOR NUMBER	CONNECT TO
(M3)	Fuse block J/B (Terminal No. 7N)
(M13)	Front passenger air bag OFF indicator
(M42)	AV control unit (Terminal No. 20)
(M53)	Front power socket LH
(M54)	Front power socket RH (for cigarette lighter)
(M55)	Hazard switch
(M59)	Glove box lamp
(M81)	Shift lock control unit (Terminal No.8)
(M93)	Display unit (Terminal No.1)
(M93)	Display unit (Terminal No.13)
(M95)	Rear power vent window switch
(M96)	A/C and AV switch assembly
(M149)	Clock
(M203)	A/T shift selector (Terminal No. 2)
(M203)	A/T shift selector (Terminal No. 8)
(M205)	DVD player (Terminal No. 5)
(M207)	Console power socket
(M212)	Rear heated seat switch LH
(M213)	Rear heated seat switch RH
(M252)	Front heated seat switch RH
(M253)	VDC OFF switch
(M255)	Front heated seat switch LH
(M256)	Tow mode switch (Terminal No.2)
(M256)	Tow mode switch (Terminal No.6)
(M260)	Heated steering wheel switch
(R3)	Vanity lamp LH
(R7)	Auto anti-dazzling inside mirror
(R8)	Vanity lamp RH
(R4)	Sunroof motor assembly
(R102)	Front room/map lamp assembly
(D105)	Power window and door lock/unlock switch RH
(D107)	Door mirror RH (door mirror defogger)
(D114)	Front door lock assembly RH
(D116)	Front door request switch RH


A
B
C
D
E
F
G
H
I
J
K
L
PG
N
O
P

AAMIA0454GB

GROUND

< COMPONENT DIAGNOSIS >

ENGINE ROOM HARNESS

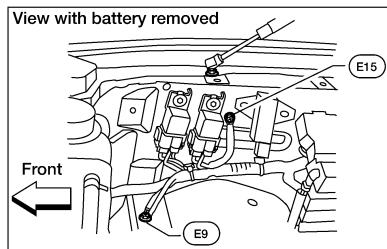


CONNECTOR NUMBER	CONNECT TO
(E16)	ECM (Terminal No. 115)
(E16)	ECM (Terminal No. 116)
(E142)	Transfer control unit (Terminal No. 6)
(E143)	Transfer control unit (Terminal No. 45)
(F9)	A/T assembly (Terminal No. 10)
(F9)	A/T assembly (Terminal No. 5)
(F11)	Crankshaft position sensor (POS)
(F23)	Camshaft position sensor (PHASE)
(F50)	Electric throttle control actuator (throttle position sensor shield)
(F54)	ECM (Terminal No. 1)
(F56)	Transfer terminal cord assembly (clutch pressure solenoid valve)
(F62)	Intake valve timing control position sensor (bank 1)
(F64)	Intake valve timing control position sensor (bank 2)
(F5)	Air fuel ratio (A/F) sensor 1 (bank 2) shield
(F65)	Air fuel ratio (A/F) sensor 1 (bank 1) shield
(F102)	Knock sensor (bank 1) shield
(F104)	Knock sensor (bank 2) shield

CONNECTOR NUMBER	CONNECT TO
(E3)	Horn
(E6)	Front combination lamp LH (headlamp aiming motor) (with daytime light system)
(E11)	Front combination lamp LH (headlamp aiming motor) (without daytime light system)
(E21)	Brake fluid level switch
(E102)	Front turn/fog lamp RH
(E107)	Front combination lamp RH (headlamp) (without daytime light system) (Terminal No. 1)
(E107)	Front combination lamp RH (headlamp) (without daytime light system) (Terminal No. 2)
(E108)	Front combination lamp RH (headlamp) (with daytime light system) (Terminal No. 1)
(E108)	Front combination lamp RH (headlamp) (with daytime light system) (Terminal No. 2)
(E113)	Condenser-2
(E116)	Cooling fan motor
(C5)	Fuel level sensor unit and fuel pump (fuel pump)

Next page

GROUND

< COMPONENT DIAGNOSIS >

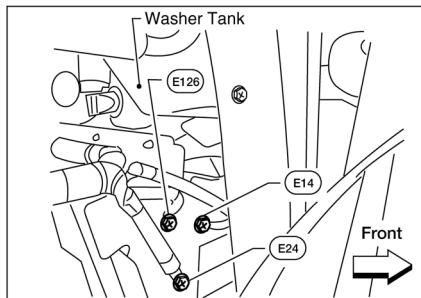

Preceding page

B

CONNECTOR NUMBER	CONNECT TO
(E46)	Transfer shift high relay (Terminal No. 2)
(E46)	Transfer shift high relay (Terminal No. 4)
(E47)	Transfer shift low relay (Terminal No. 2)
(E47)	Transfer shift low relay (Terminal No. 4)
(E130)	Compressor motor relay
(E140)	Trailer tow relay 2
(E142)	Transfer control unit
(E156)	Trailer turn relay LH
(E157)	Trailer turn relay RH
(F55)	ATP switch
(F57)	Transfer motor
(F58)	Transfer control device (actuator position switch) (Terminal No. 22)
(F59)	Wait detection switch
(F60)	Neutral-4LO switch
(C2)	Trailer
(C9)	Suspension air compressor (Terminal No. 1)
(C9)	Suspension air compressor (Terminal No. 3)

Engine control harness

Chassis harness

Body ground

CONNECTOR NUMBER	CONNECT TO
(E6)	Front combination lamp LH (headlamp) (with daytime light system)
(E8)	Hood switch
(E11)	Front combination lamp LH (headlamp) (without daytime light system) (Terminal No. 1)
(E11)	Front combination lamp LH (headlamp) (without daytime light system) (Terminal No. 2)
(E23)	Front wiper motor
(E42)	ICC sensor
(E101)	Front turn/fog lamp LH
(E103)	Daytime light relay
(E106)	Washer fluid level switch
(E107)	Front combination lamp RH (headlamp aiming motor) (without daytime light system)
(E108)	Front combination lamp RH (headlamp aiming motor) (with daytime light system)
(E122)	IPDM E/R (Terminal No. 38)
(E124)	IPDM E/R (Terminal No. 59)
(E134)	ICC brake hold relay

A

B

C

D

E

F

G

H

I

J

K

L

PG

N






O

P

AAMIA0449GB

GROUND

< COMPONENT DIAGNOSIS >

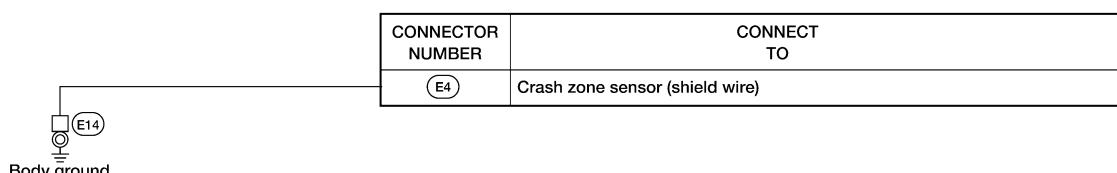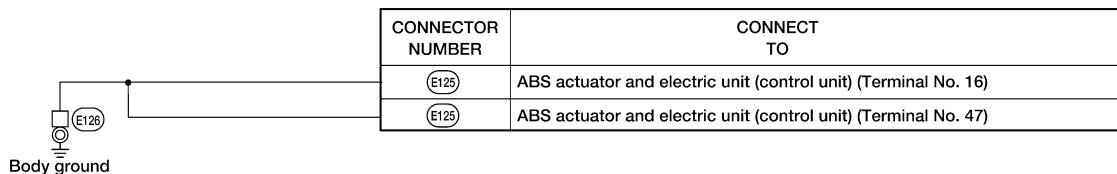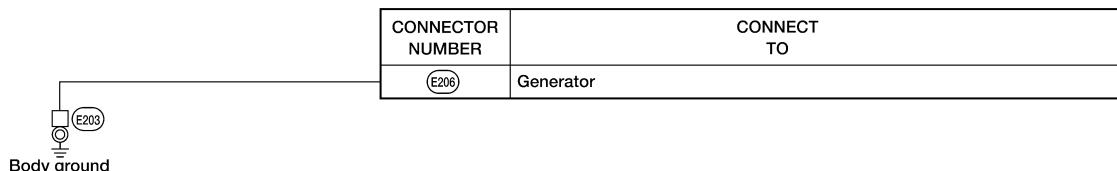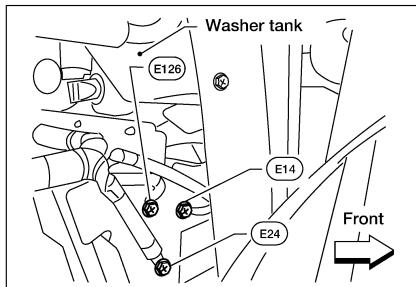
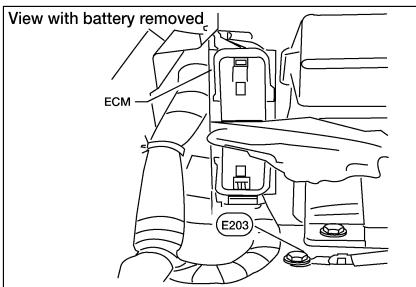


ALMIA0236GB

GROUND

< COMPONENT DIAGNOSIS >

ENGINE CONTROL HARNESS

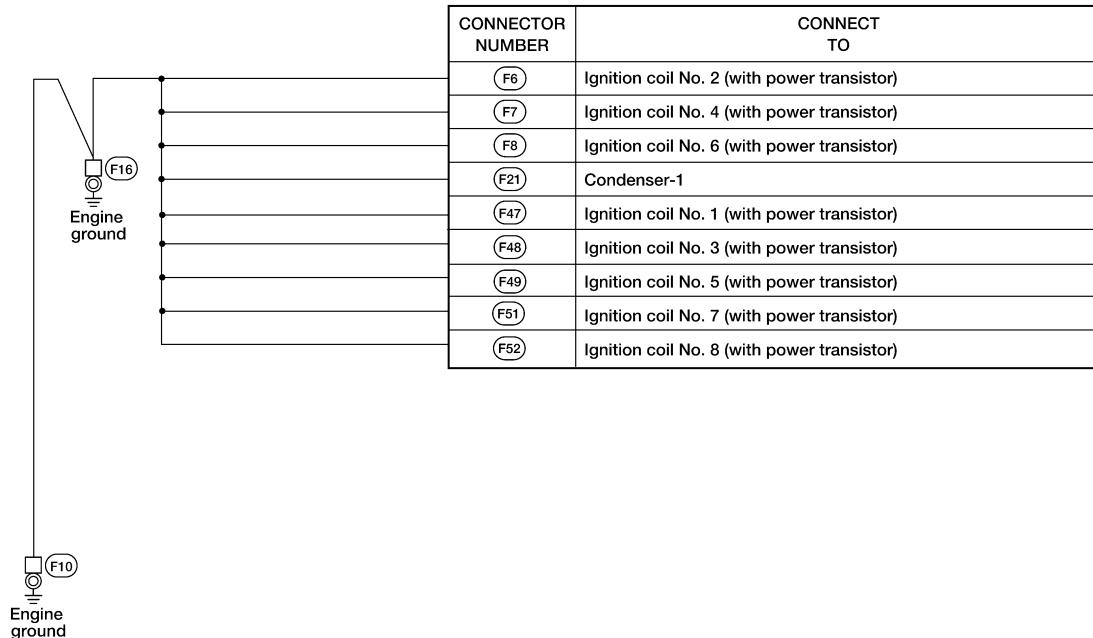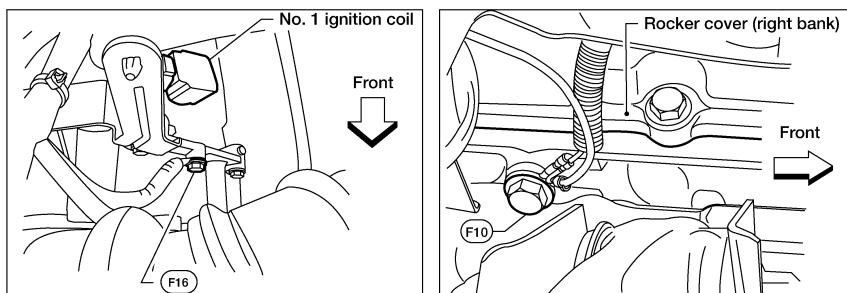

A
B
C
D
E
F
G
H
I
J
K
L

PG



N
O
P

ALMIA0237GB

GROUND

< COMPONENT DIAGNOSIS >

BODY HARNESS

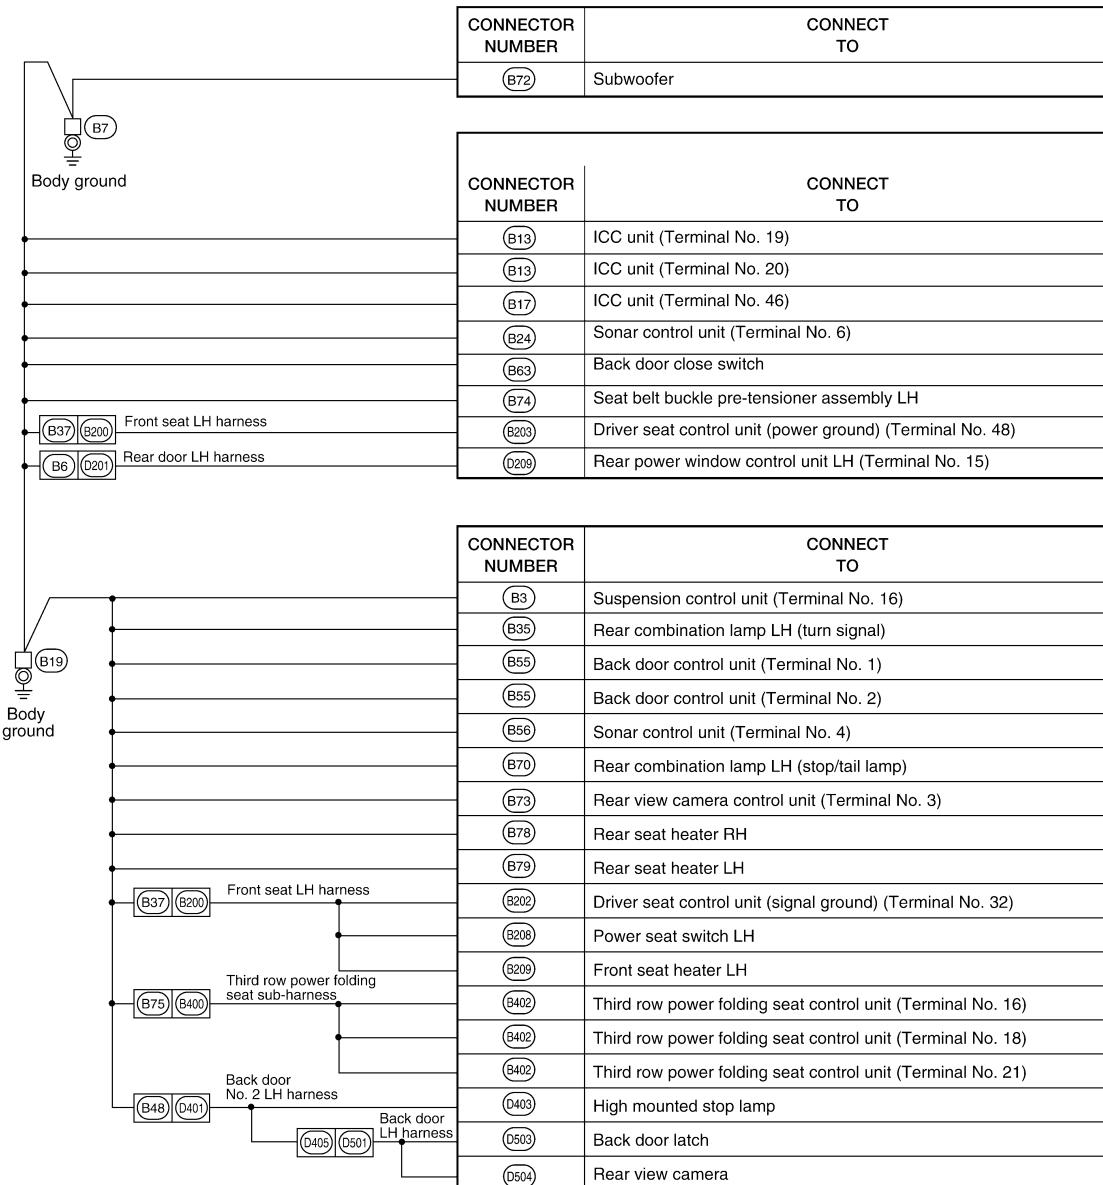
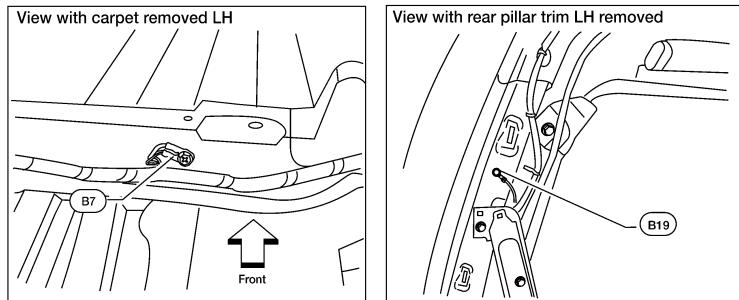


AAMIA0450GB

GROUND

< COMPONENT DIAGNOSIS >

BODY NO. 2 HARNESS

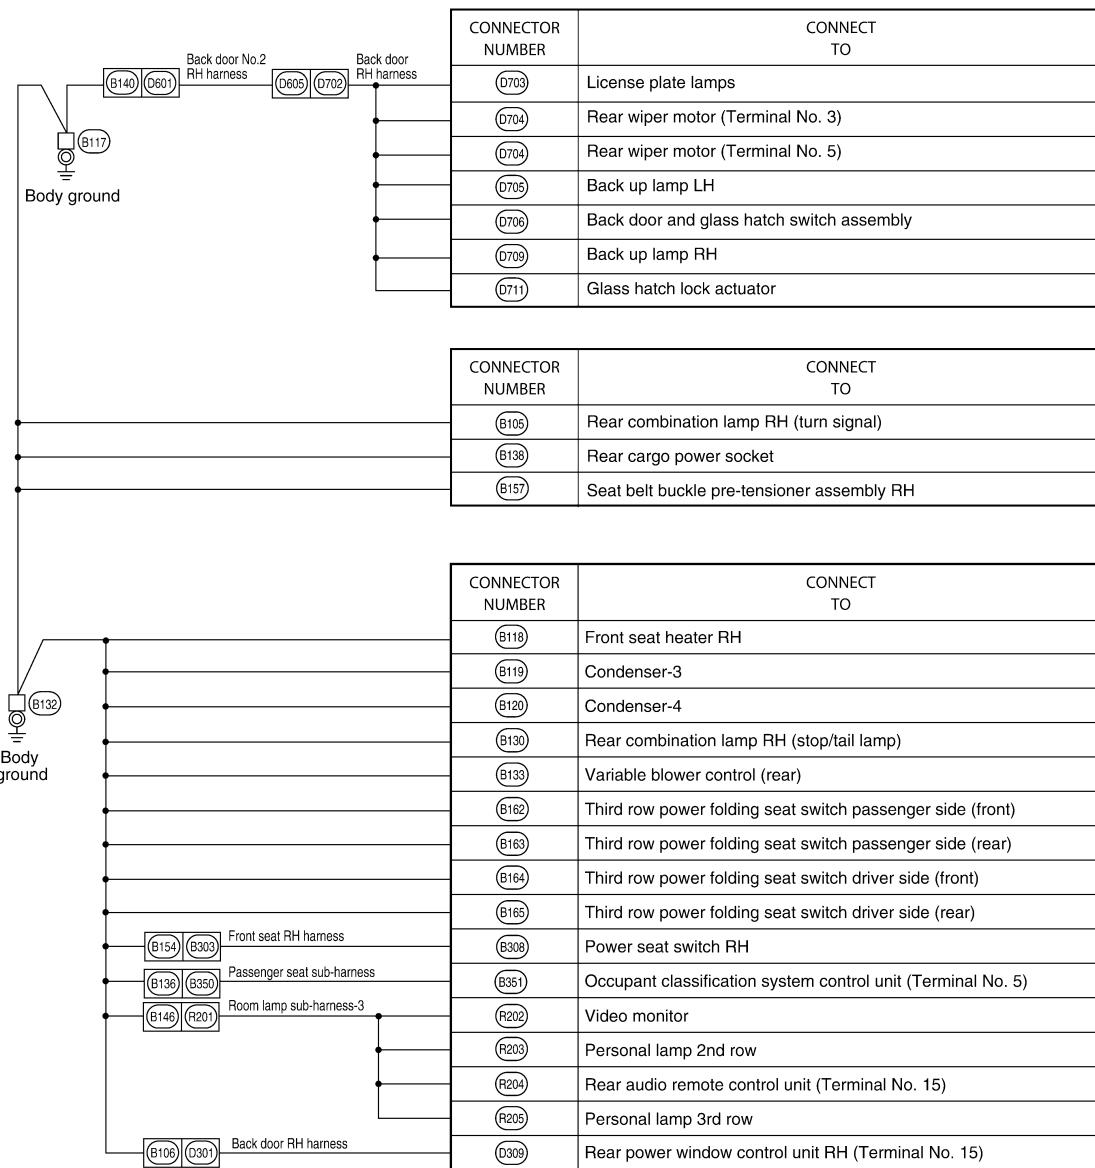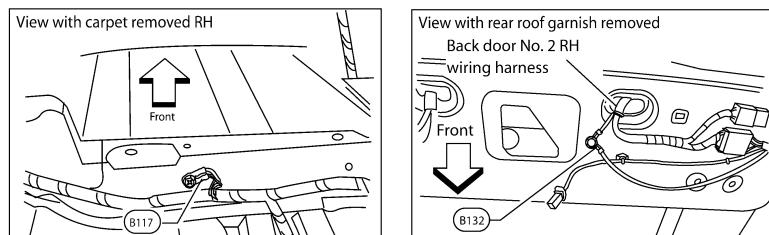


ABMIA0152GB

A
B
C
D
E
F
G
H
I
J
K
L
PG
N
O
P


GROUND

< COMPONENT DIAGNOSIS >

BACK DOOR NO. 2 RH HARNESS

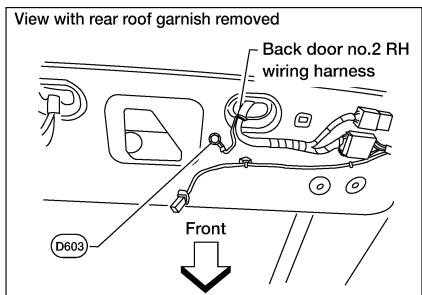

CONNECTOR NUMBER	CONNECT TO
(D604)	Rear window defogger

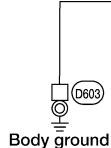

HARNESS

< COMPONENT DIAGNOSIS >

HARNESS


Harness Layout

INFOID:000000003776571

HOW TO IDENTIFY TYPE A AND TYPE B MAIN HARNESES

The differences between Type A and type B harnesses are minimal and mainly consist of differences in the circuit connections to the fuse block (J/B).

Determine type of harness by locating the Nissan Name Plate on the main harness. This can be found on the main harness near SMJ M31 connector above the right hand lower side dash finisher. Find the six digit number on Nissan Name Plate. If the number ends in 001, it is a Type A harness, any other number indicates a Type B harness.

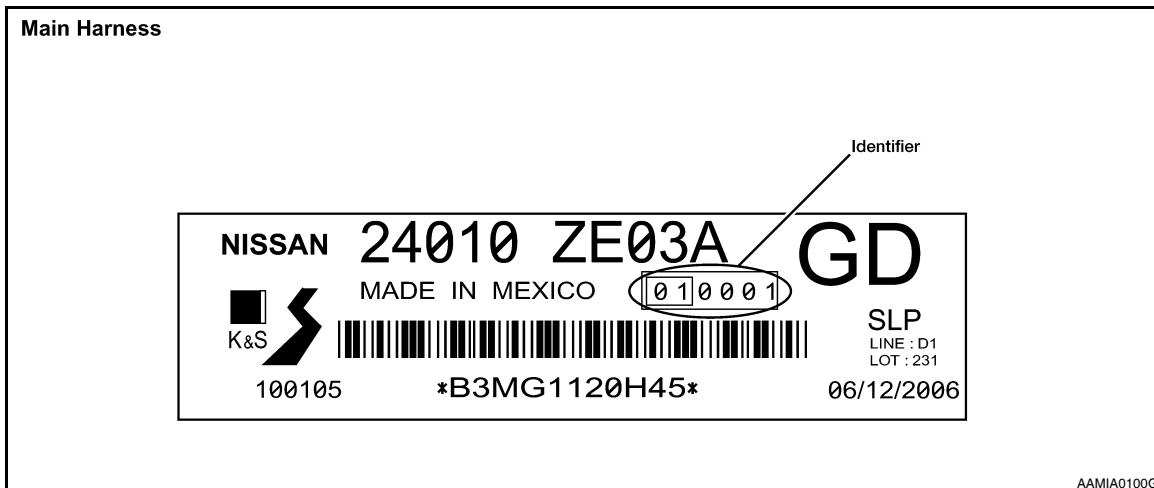


HOW TO READ HARNESS LAYOUT

The following Harness Layouts use a map style grid to help locate connectors on the drawings:

- Main Harness, Console Sub-harness, Console Switch Sub-harness and Optical Sensor Sub-harness
- Engine Room Harness and Engine Room Sub-harness
- Engine Room Harness (Passenger Compartment)
- Engine Control Harness and Engine Control Sub-harness
- Chassis Harness and Rear Sonar Sensor Sub-harness
- Body Harness, Left Front Seat Harness and Third Row Power Folding Seat Sub-harness
- Body No. 2 Harness and Right Front Seat Harness
- Room Lamp Harness, Room Lamp Sub-harness A, and Room Lamp Sub-harness B
- Back Door Harness, Back Door LH Harness, Back Door RH Harness, Back Door No. 2 LH Harness and Back Door No. 2 RH Harness

To use the grid reference


1. Find the desired connector number on the connector list.
2. Find the grid reference.
3. On the drawing, find the crossing of the grid reference letter column and number row.
4. Find the connector number in the crossing zone.
5. Follow the line (if used) to the connector.

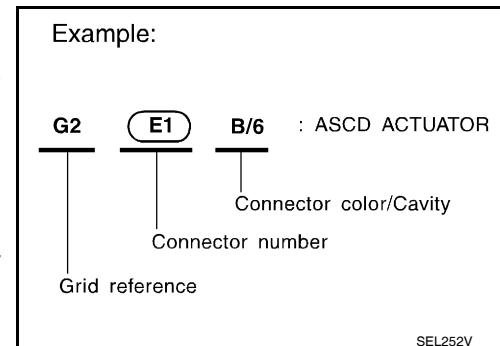

HARNESS

< COMPONENT DIAGNOSIS >


OUTLINE

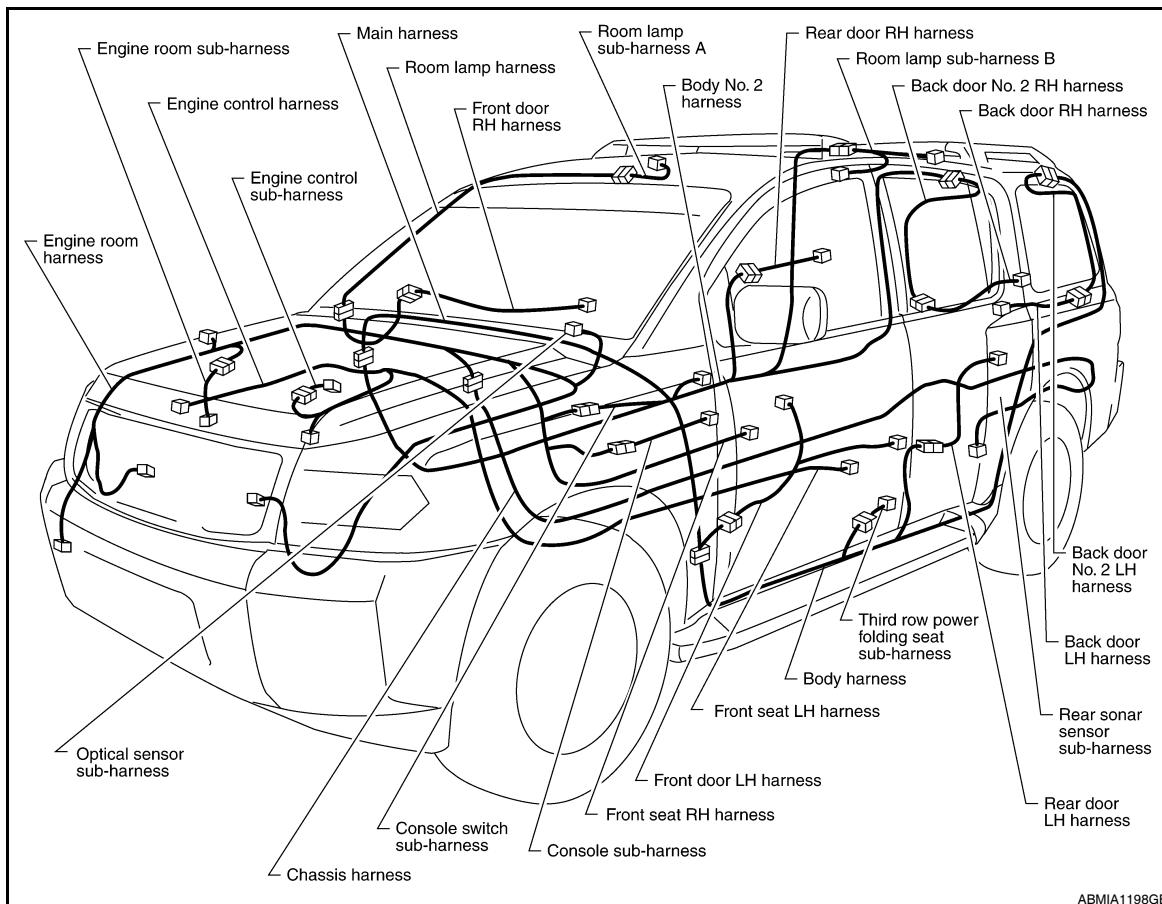

Harness

< COMPONENT DIAGNOSIS >

MAIN HARNESS

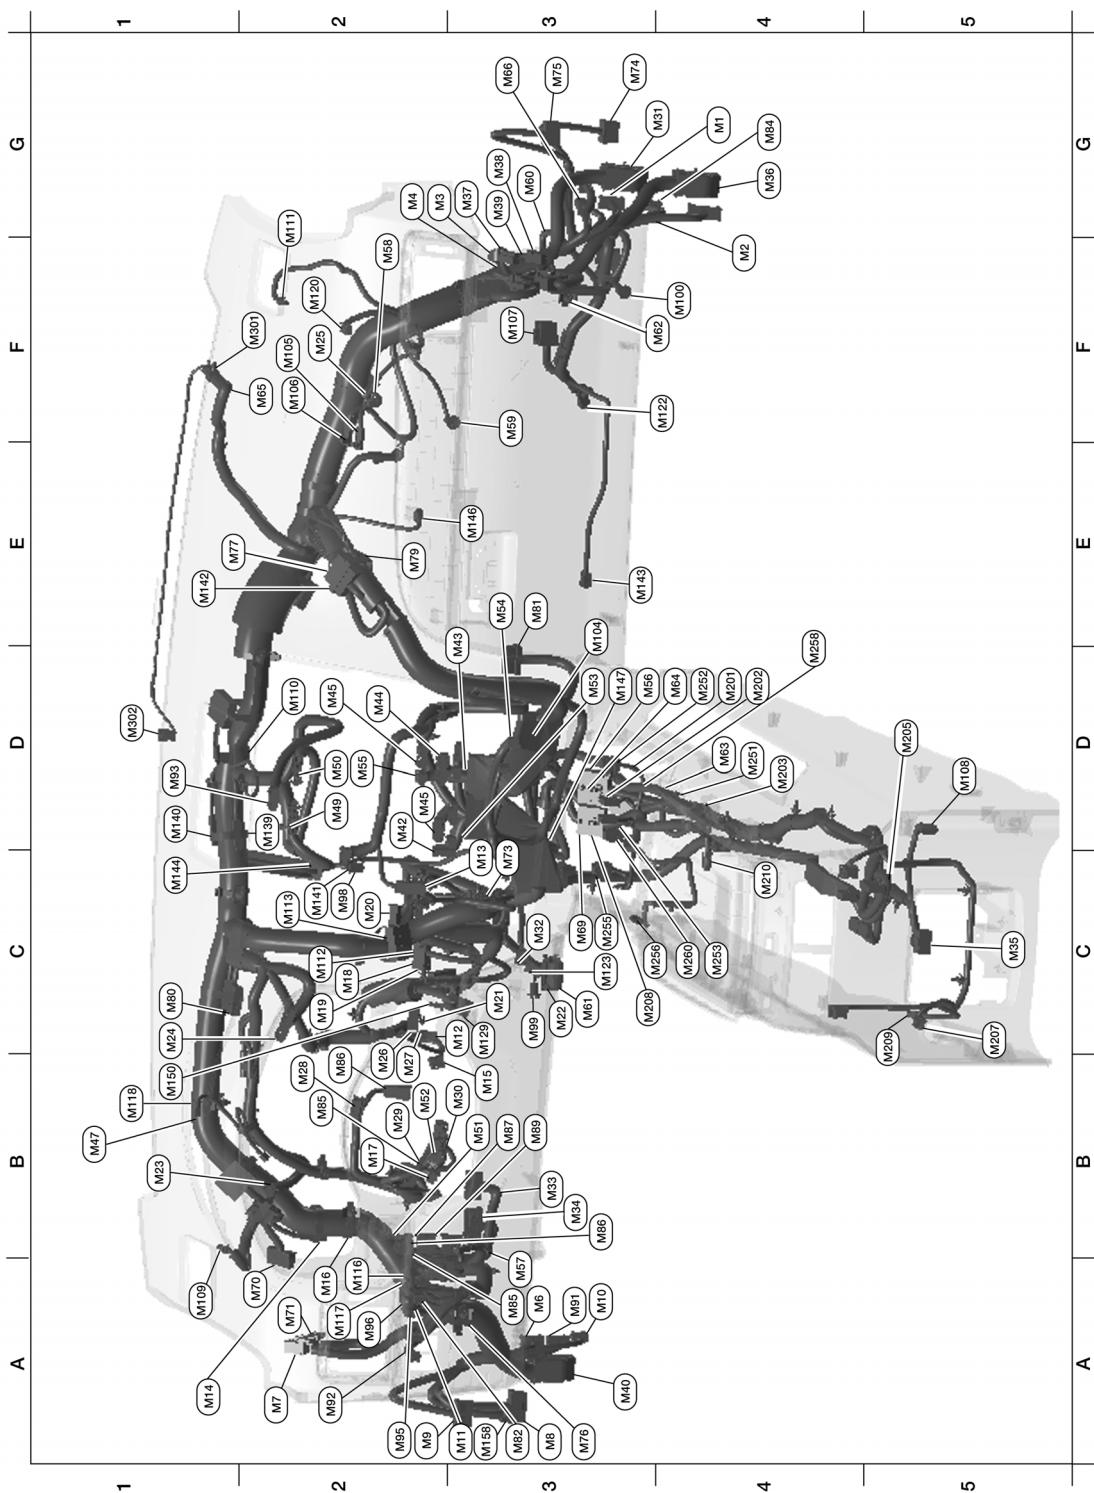

AAMIA0455GB

G4	M1	W/16	: To R1	G3	M78	BR/2	: To M550
F4	M2	W/12	: To R2	E2	M79	—	: Body ground
G2	M3	W/8	: Fuse block (J/B)	C1	M80	B/2	: Resistor
G2	M4	W/16	: Fuse block (J/B)	E3	M81	GR/10	: Shift lock control unit

HARNESS

< COMPONENT DIAGNOSIS >

A3	M6	W/10	: To E10	A3	M82	W/2	: Circuit breaker-2
A2	M7	B/5	: Passenger select unlock relay	G4	M84	W/16	: To B101
A3	M8	W/16	: To D2	A3	M85	W/3	: Tilt motor assembly
A2	M9	BR/24	: To D1	B3	M86	W/2	: Tilt motor assembly
A3	M10	Y/4	: To E29	B3	M87	B/5	: Rear power vent window relay (open)
A3	M11	B/1	: Parking brake switch	B3	M89	B/5	: Rear power vent window relay (close)
C3	M12	GR/6	: Key switch and ignition knob switch	B3	M91	W/16	: To E26
D3	M13	BR/2	: Front passenger air bag OFF indicator	A2	M92	B/6	: Power liftgate switch
A2	M14	GR/6	: Diode-3	D1	M93	W/24	: Display unit
B3	M15	W/4	: Steering lock solenoid	A2	M95	W/6	: Rear power vent window switch
A2	M16	GR/6	: ADP steering switch	A2	M96	BR/6	: Pedal adjusting switch
B2	M17	W/8	: Steering angle sensor	C2	M98	W/16	: A/C and AV switch assembly
C2	M18	W/40	: BCM (body control module)	C3	M99	BR/2	: Foot lamp LH
C2	M19	W/15	: BCM (body control module)	F4	M100	BR/2	: Foot lamp RH
C2	M20	B/15	: BCM (body control module)	E3	M104	W/4	: Aux jack
C3	M21	W/4	: NATS antenna AMP.	F2	M105	Y/2	: Front passenger air bag module
C3	M22	W/16	: Data link connector	F2	M106	O/2	: Front passenger air bag module
B1	M23	W/12	: Combination meter	F3	M107	B/5	: Front blower relay
C1	M24	W/40	: Combination meter	D5	M108	B/6	: Yaw rate/ side/ decel G sensor
F2	M25	B/4	: Remote keyless entry receiver	A1	M109	BR/2	: Front tweeter LH
B2	M26	W/6	: Ignition switch	D2	M110	BR/2	: Center speaker
B2	M28	W/16	: Combination switch	F2	M111	BR/2	: Front tweeter RH
B2	M29	Y/6	: Combination switch (spiral cable)	C2	M112	BR/14	: BOSE speaker amp.
B3	M30	GR/8	: Combination switch (spiral cable)	C2	M113	BR/23	: BOSE speaker amp.
G4	M31	SMJ	: To E152	A2	M116	GR/8	: Sonar system OFF switch
C3	M32	W/4	: In-vehicle sensor	A2	M117	GR/8	: Rear sonar system OFF switch
B3	M33	W/32	: Automatic drive position control unit	B1	M118	B/2	: Front sonar buzzer
B3	M34	W/16	: Automatic drive position control unit	F2	M120	W/4	: Remote keyless entry receiver
C5	M35	Y/28	: Air bag diagnosis sensor unit	F4	M122	W/4	: Variable blower control (front)
G4	M36	SMJ	: To B149	C3	M123	W/2	: Tire pressure warning check connector
G3	M37	B/1	: Fuse block (J/B)	D2	M139	B/2	: Diode-1
G3	M38	B/2	: Fuse block (J/B)	D1	M140	B/2	: Diode-2
D3	M39	W/8	: Fuse block (J/B)	C2	M141	GR/8	: 4WD shift switch
A3	M40	SMJ	: To B69	E1	M142	B/6	: Mode door motor (front)
D2	M42	W/20	: AV control unit	E3	M143	B/6	: Air mix door motor (passenger)
D2	M43	W/12	: AV control unit	C1	M144	B/6	: Defroster door motor
D2	M44	W/32	: AV control unit	E3	M146	GR/2	: Intake sensor
D3	M45	W/40	: AV control unit	D3	M147	B/6	: Air mix door motor (driver)
B1	M47	B/2	: Sonar buzzer	D2	M148	W/4	: Headlamp aiming switch
D2	M49	B/26	: A/C auto amp.	D3	M149	W/4	: Clock
D2	M50	L/26	: A/C auto amp.	B1	M150	W/2	: Ignition keyhole illumination
B3	M51	L/4	: Trailer tow relay 1	A3	M158	W/10	: To D3
B2	M52	W/2	: Combination switch (spiral cable)	Console sub-harness			
D3	M53	B/3	: Front power socket LH	D4	M201	W/16	: To M56
E3	M54	B/3	: Front power socket RH (for cigarette lighter)	D4	M202	BR/24	: To M64

HARNESS

< COMPONENT DIAGNOSIS >

D2	M55	W/4	: Hazard switch	D4	M203	W/12	: A/T shift selector
D4	M56	W/16	: To M201	D5	M205	W/32	: DVD player
A3	M57	—	: Body ground	D5	M207	B/3	: Console power socket
F2	M58	B/6	: Intake door motor	C4	M208	BR/20	: To M69
F3	M59	BR/2	: Glove box lamp	C5	M209	W/2	: Inside key antenna 2 (rear of center console)
G3	M60	W/6	: Fuse block (J/B)	C4	M210	GR/2	: Inside key antenna 3 (front of center console)
C3	M61	—	: Body ground	C4	M212	W/6	: Rear heated seat switch LH
F4	M62	B/2	: Front blower motor	C4	M213	BR/6	: Rear heated seat switch RH
D4	M63	BR/20	: To M251	Console switch sub-harness			
D4	M64	BR/24	: To M202	D4	M251	BR/20	: To M63
F2	M65	W/4	: To M301	D4	M252	BR/6	: Front heated seat switch RH
G3	M66	B/1	: To E33	C4	M253	GR/6	: VDC OFF switch
C3	M69	BR/20	: To M208	C3	M255	W/6	: Front heated seat switch LH
A2	M70	W/40	: Intelligent key unit	C4	M256	B/2	: A/T shift selector
A2	M71	L/4	: Heated steering relay	C4	M260	W/6	: Heated steering wheel switch
D3	M73	BR/6	: Back-up lamp relay	Optical sensor sub-harness			
G3	M74	BR/24	: To D102	F1	M301	W/4	: To M65
G3	M75	W/10	: To D101	D1	M302	B/4	: Optical sensor
A3	M76	W/6	: Electric brake (pre-wiring)				
E2	M77	Y/4	: Front passenger air bag module (service replacement)				

A

B

C

D

E

F

G

H

I

J

K

L

PG

N


O

P

HARNESS

< COMPONENT DIAGNOSIS >

ENGINE ROOM HARNESS

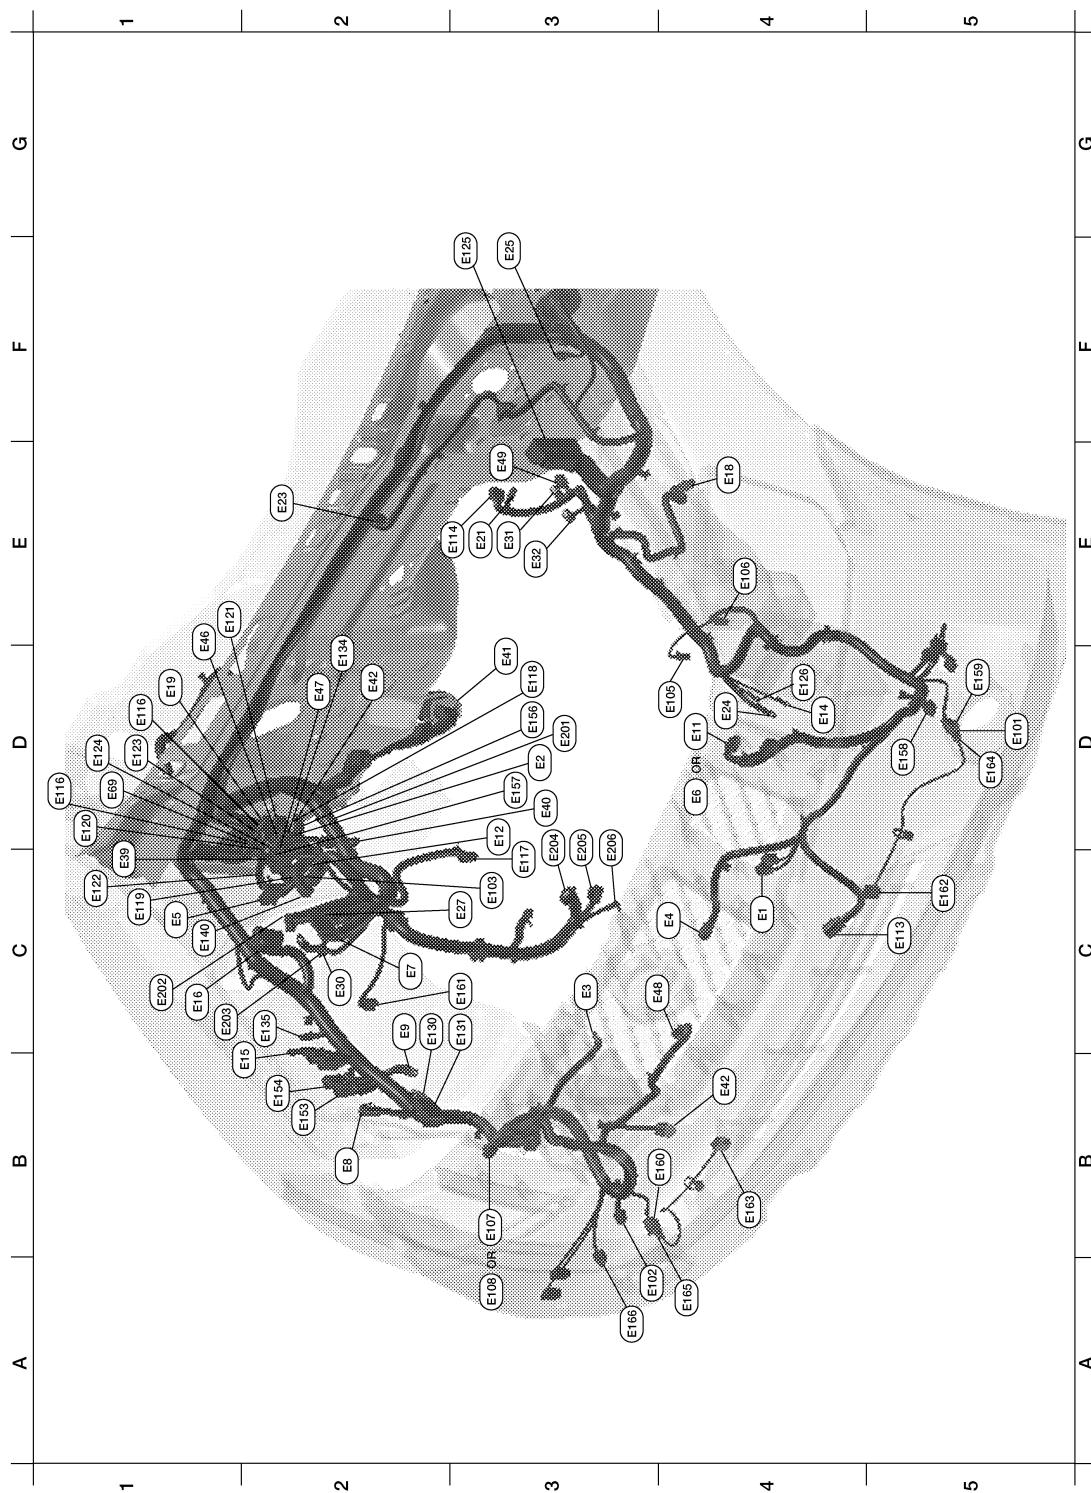

AAMIA0451GB

C4	E1	GR/2	: Ambient sensor	E3	E114	B/6	: Delta stroke motor
D3	E2	W/16	: To F32	D1	E116	W/2	: Condenser-2
C3	E3	B/2	: Horn	D3	E117	GR/2	: Front wheel sensor RH
C3	E4	Y/2	: Crash zone sensor	D3	E118	B/2	: IPDM E/R (intelligent power distribution module engine room)

HARNESS

< COMPONENT DIAGNOSIS >

C1	E5	W/24	: To F14	C1	E119	W/16	: IPDM E/R (intelligent power distribution module engine room)
C2	E7	GR/2	: Fusible link box (battery)	D1	E120	W/6	: IPDM E/R (intelligent power distribution module engine room)
C2	E9	—	: Body ground	E1	E121	BR/12	: IPDM E/R (intelligent power distribution module engine room)
D4	E6	B/8	: Front combination lamp LH (without daytime light system)	C1	E122	W/12	: IPDM E/R (intelligent power distribution module engine room)
B2	E8	W/2	: Hood switch	C1	E123	BR/8	: IPDM E/R (intelligent power distribution module engine room)
D4	E11	B/8	: Front combination lamp LH (with daytime light system)	D1	E124	B/6	: IPDM E/R (intelligent power distribution module engine room)
D3	E12	B/5	: Stop lamp relay	F3	E125	B/47	: ABS actuator and electric unit (control unit)
D4	E14	—	: Body ground	D4	E126	—	: Body ground
C2	E15	—	: Body ground	C2	E130	W/2	: Compressor motor relay
C1	E16	B/40	: ECM	C3	E131	W/2	: Compressor motor relay
E4	E18	GR/2	: Front wheel sensor LH	D2	E134	GR/6	: ICC brake hold relay
D1	E19	W/16	: To F33	C2	E135	GR/2	: Transfer dropping resistor
E3	E21	GR/2	: Brake fluid level switch	C1	E140	BR/6	: Trailer tow relay-2
E2	E23	GR/6	: Front wiper motor	B2	E153	W/2	: Transfer motor relay
D4	E24	—	: Body ground	B2	E154	W/2	: Transfer motor relay
F3	E25	BR/3	: Intelligent key warning buzzer	D3	E156	L/4	: Trailer turn relay LH
C3	E27	BR/2	: Fusible link box (battery)	D3	E157	L/4	: Trailer turn relay RH
C2	E30	/1	: Fusible link box (battery)	D5	E158	B/3	: Front sonar sensor LH outer
E3	E31	B/3	: Front pressure sensor	D5	E159	GR/3	: To E164
E3	E32	B/3	: Rear pressure sensor	B4	E160	GR/3	: To E165
E1	E39	W/2	: To F34	C3	E161	B/3	: Battery current sensor
D3	E40	B/3	: To E201	C5	E162	B/3	: Front sonar sensor LH inner
D3	E41	SMJ	: To C1	B4	E163	B/3	: Front sonar sensor RH inner
D2	E42	B/6	: ICC sensor	D5	E164	GR/3	: To E159
E1	E46	B/5	: Transfer shift high relay	A4	E165	GR/3	: To E160
D2	E47	B/5	: Transfer shift low relay	A3	E166	B/3	: Front sonar sensor RH outer
C4	E48	B/3	: Refrigerant pressure sensor	Engine room sub-harness			
E3	E49	B/6	: Active booster	D3	E201	B/3	: To E40
D1	E69	L/4	: Transfer shut off relay	C1	E202	/1	: Fusible link box (battery)
D5	E101	B/3	: Front turn-fog lamp LH	C2	E203	—	: Engine ground
A4	E102	B/3	: Front turn-fog lamp RH	C3	E204	/1	: Generator
C3	E103	B/5	: Daytime light relay	C3	E205	B/3	: Generator
D4	E105	BR/2	: Front and rear washer motor	C3	E206	/1	: Generator
E4	E106	BR/2	: Washer fluid level switch				
B3	E107	B/8	: Front combination lamp RH (without daytime light system)				
A3	E108	B/6	: Front combination lamp RH (without daytime light system)				
C5	E113	W/2	: Cooling fan motor				

A

B

C

D

E

F

G

H

I

J

K

L

PG

N


O

P

HARNESS

< COMPONENT DIAGNOSIS >

ENGINE ROOM HARNESS (PASSENGER COMPARTMENT)

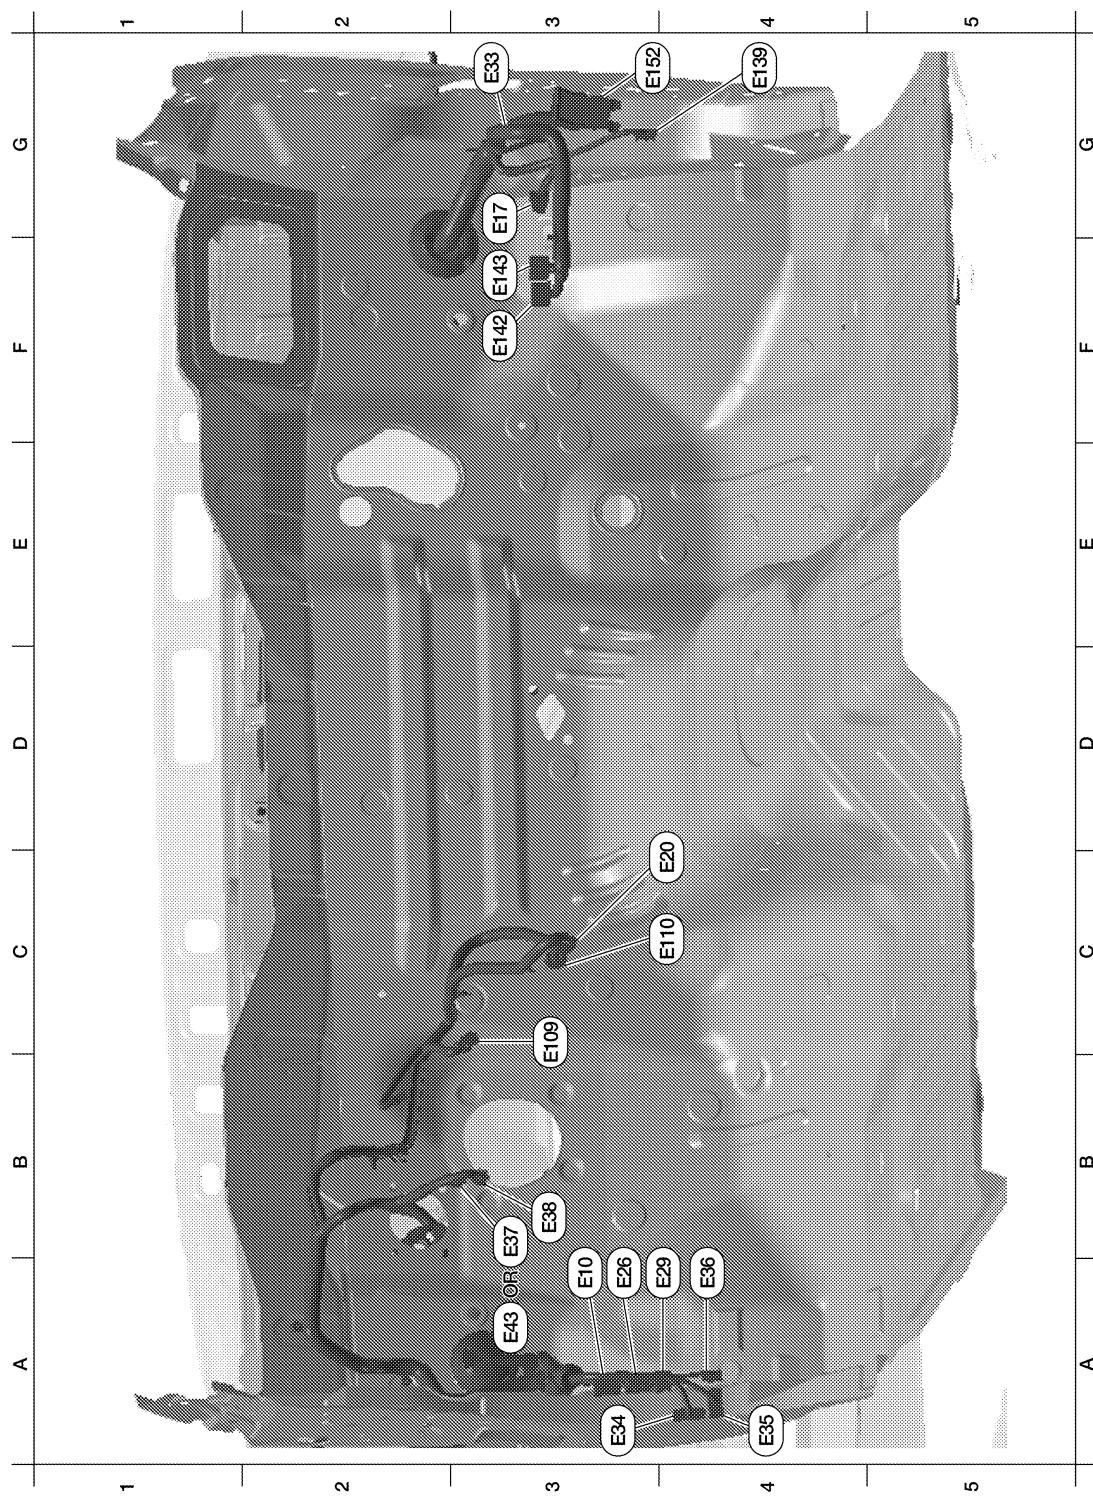

ABMIA0156GB

A3	E10	W/10	: To M6				
C4	E20	B/8	: Accelerator pedal position (APP) sensor				
C4	E26	W/16	: To M91				
B4	E29	Y/4	: To M10				
G3	E33	B/1	: To M66				

HARNESS

< COMPONENT DIAGNOSIS >


A3	E34	W/24	: To B40						A
A4	E35	W/12	: To B41						B
A4	E36	W/2	: To B42						C
B3	E37	BR/2	: ASCD brake switch (with ASCD)						D
B3	E38	W/4	: Stop lamp switch						E
A3	E43	BR/2	: ICC brake switch (with ICC)						F
B3	E109	GR/2	: Pedal adjusting motor assembly						G
B3	E110	GR/3	: Pedal adjusting motor assembly						H
G4	E139	W/8	: To B107						I
F3	E142	W/24	: Transfer control unit						J
F3	E143	GR/24	: Transfer control unit						K
G3	E152	SMJ	: To M31						L

PG

Harness

< COMPONENT DIAGNOSIS >

ENGINE CONTROL HARNESS

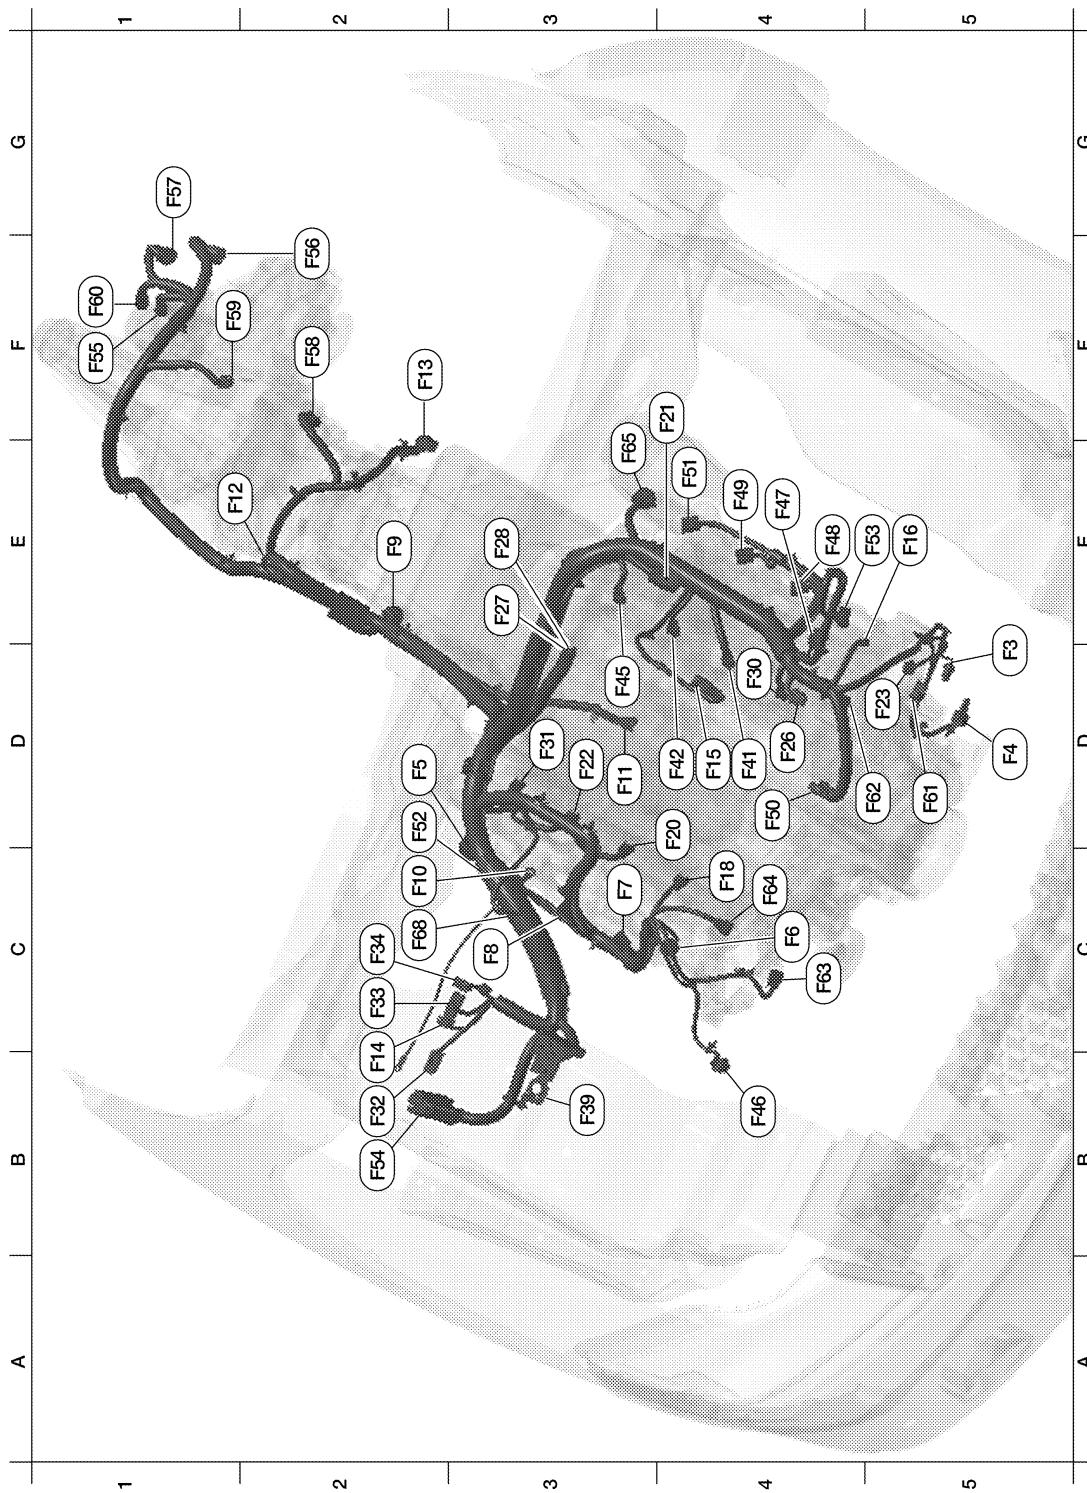

ABMIA0157GB

D5	F3	B/1	: A/C Compressor	F2	F56	B/8	: Transfer terminal cord assembly
D5	F4	GR/1	: Oil pressure switch	G1	F57	B/2	: Transfer motor
D2	F5	GR/4	: Air fuel ratio (A/F) sensor 1 (bank2)	F2	F58	GR/6	: Transfer control device (actuator, position switch)
C4	F6	GR/3	: Ignition coil No. 2 (with power transistor)	F2	F59	B/2	: Wait detection switch

HARNESS


< COMPONENT DIAGNOSIS >

C3	F7	GR/3	: Ignition coil No. 4 (with power transistor)	F1	F60	GR/2	: Neutral-4LO switch	A
C3	F8	GR/3	: Ignition coil No. 6 (with power transistor)	D5	F61	G/2	: Intake valve timing control solenoid valve (bank 1)	B
E2	F9	G/10	: A/T assembly	D5	F62	B/3	: Intake valve timing control position sensor (bank 1)	C
C3	F10	—	: Engine ground	C4	F63	G/2	: Intake valve timing control solenoid valve (bank 2)	D
D3	F11	B/3	: Crankshaft position sensor (POS)	C4	F64	B/3	: Intake valve timing control position sensor (bank 2)	E
E1	F12	G/4	: Heated oxygen sensor 2 (bank2)	E3	F65	GR/4	: Air fuel ratio (A/F) sensor 1 (bank1)	F
F2	F13	G/4	: Heated oxygen sensor 2 (bank1)	C2	F68	GR/2	: Water valve	G
B2	F14	W/24	: To E5	Engine control sub-harness				
D4	F15	GR/2	: EVAP canister purge volume control solenoid valve	C3	F101	B/6	: To F26	H
E5	F16	—	: Engine ground	C3	F102	B/2	: Knock sensor (bank 1)	I
C4	F18	GR/2	: Fuel injector No. 2	C3	F103	GR/2	: Engine coolant temperature sensor	J
D4	F20	GR/2	: Fuel injector No. 4	C3	F104	B/2	: Knock sensor (bank 2)	K
F4	F21	GR/2	: Condenser-1					L
D3	F22	GR/2	: Fuel injector No. 6					M
D4	F23	B/3	: Camshaft position sensor (phase)					N
D4	F26	B/6	: To F101					O
E3	F27	/1	: Starter motor					P
E3	F28	GR/1	: Starter motor					PG
D4	F30	GR/2	: Fuel injector No. 1					
D3	F31	GR/2	: Fuel injector No. 8					
B2	F32	W/16	: To E2					
C2	F33	W/16	: To E19					
C2	F34	W/2	: To E39					
B3	F39	/1	: Fusible link box (battery)					
D4	F41	GR/2	: Fuel injector No. 3					
D4	F42	GR/2	: Fuel injector No. 5					
D3	F45	GR/2	: Fuel injector No. 7					
B4	F46	B/3	: Power steering pressure sensor					
E4	F47	GR/3	: Ignition coil No. 1 (with power transistor)					
E4	F48	GR/3	: Ignition coil No. 3 (with power transistor)					
E4	F49	GR/3	: Ignition coil No. 5 (with power transistor)					
D4	F50	W/6	: Electric throttle control actuator					
E4	F51	GR/3	: Ignition coil No. 7 (with power transistor)					
D2	F52	GR/3	: Ignition coil No. 8 (with power transistor)					
E5	F53	B/6	: Mass air flow sensor					
B2	F54	B/81	: ECM					
F1	F55	B/2	: ATP switch					

HARNESS

< COMPONENT DIAGNOSIS >

CHASSIS HARNESS

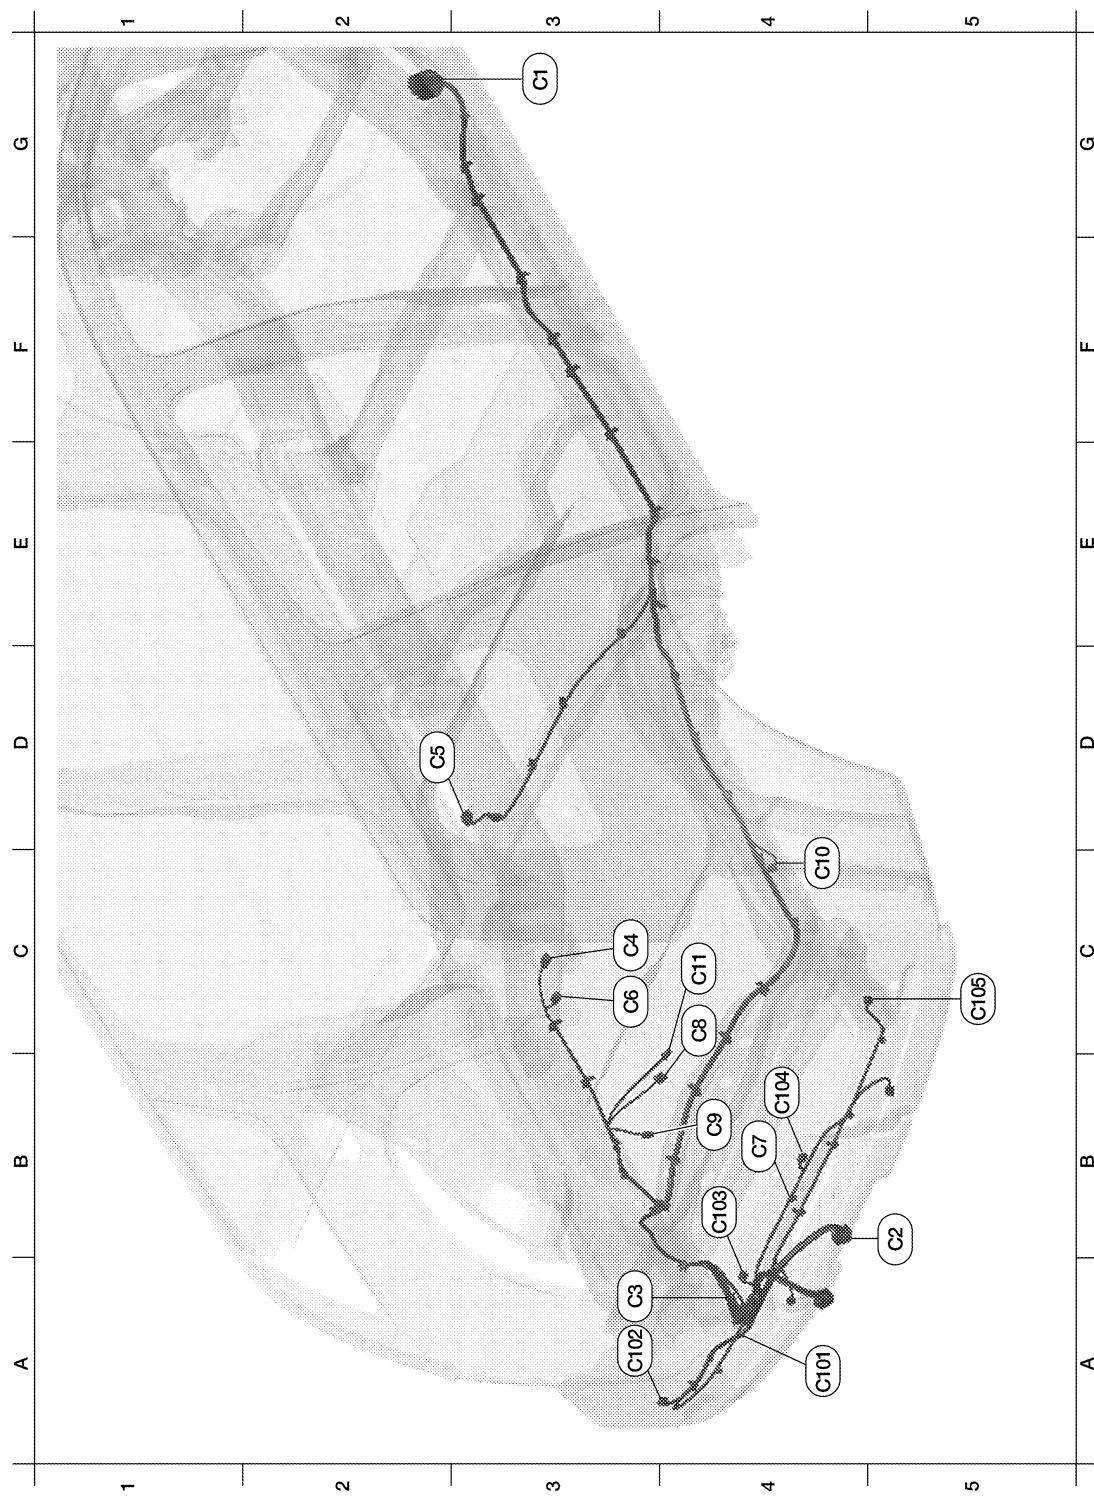

AWMIA0113GB

G2	C1	SMJ	: To E41
B5	C2	B/7	: Trailer
A3	C3	GR/8	: To C101
C3	C4	GR/3	: Evap control system pressure sensor
D2	C5	GR/5	: Fuel level sensor unit and fuel pump

HARNESS

< COMPONENT DIAGNOSIS >

C3	C6	B/2	: Evap canister vent control valve					
B4	C7	GR/2	: Rear bumper antenna					
C4	C8	B/3	: Height sensor					
B4	C9	B/4	: Suspension air compressor					
C4	C10	BR/2	: Rear wheel sensor RH					
C4	C11	BR/2	: Rear wheel sensor LH					
Rear sonar sensor sub-harness								
A4	C101	GR/8	: To C3					
A3	C102	B/3	: Rear sonar sensor LH outer					
B4	C103	B/3	: Rear sonar sensor LH inner					
B4	C104	B/3	: Rear sonar sensor RH inner					
C5	C105	B/3	: Rear sonar sensor RH outer					

A

B

C

D

E

F

G

H

I

J

K

L

PG

N


O

P

Harness

< COMPONENT DIAGNOSIS >

BODY HARNESS

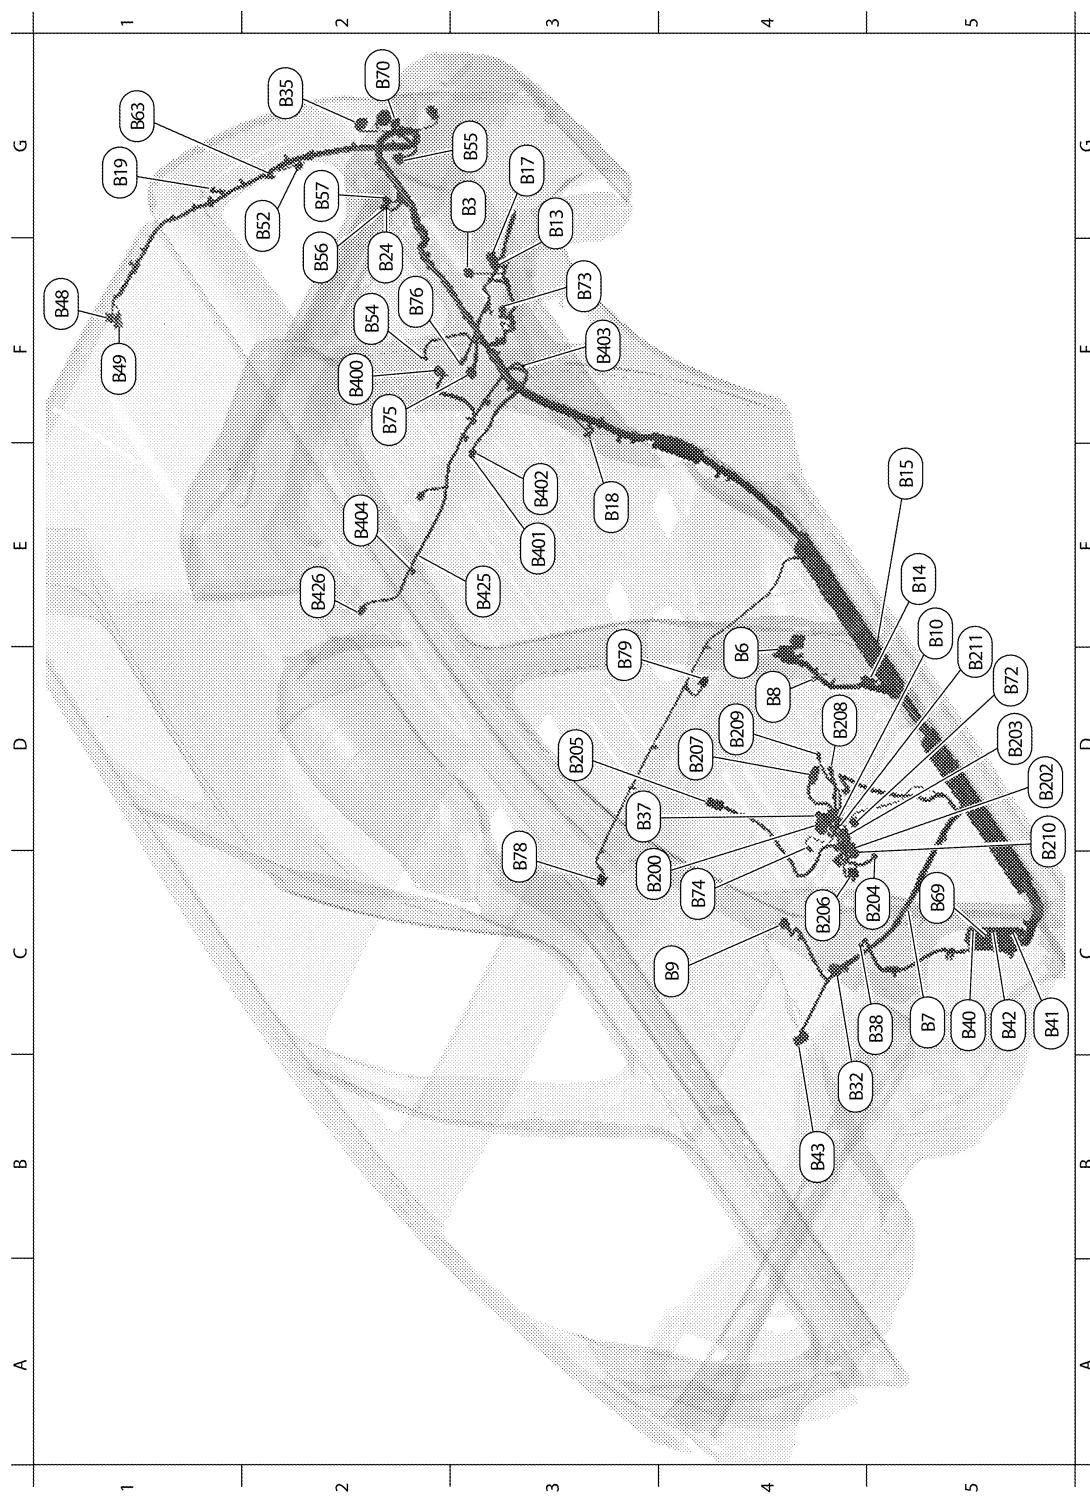

ABMIA0158GB


G3	B3	W/16	: Suspension control unit	A4	B69	SMJ	: To M40
E4	B6	W/18	: To D201	G2	B70	B/3	: Rear combination lamp LH
C5	B7	—	: Body ground	D5	B72	BR/6	: Subwoofer
D4	B8	W/3	: Front door switch LH	F3	B73	W/16	: Rear view camera control unit
C4	B9	Y/12	: Air bag diagnosis sensor unit	C4	B74	Y/4	: Seat belt buckle pretensioner assembly LH (seatbelt buckle switch)

Harness

< COMPONENT DIAGNOSIS >

E5	B10	Y/2	: Front LH side air bag module	F2	B75	W/10	: To B400
F3	B13	W/24	: ICC unit	F2	B76	GR/2	: Inside key antenna 2 (luggage compartment)
E5	B14	Y/2	: Front LH seat belt pre-tensioner	C3	B78	W/3	: Rear seat heater RH
E5	B15	Y/2	: LH side air bag (satellite) sensor	E3	B79	W/3	: Rear seat heater LH
G3	B17	GR/24	: ICC unit	Front seat LH harness			
E3	B18	W/3	: Rear door switch LH	D3	B200	W/16	: To B37
G1	B19	—	: Body ground	D5	B202	W/32	: Driver seat control unit
G2	B24	W/16	: Sonar control unit	D5	B203	W/16	: Driver seat control unit
B4	B32	W/6	: To B124	C5	B204	W/16	: Sliding motor LH
G2	B35	B/3	: Rear combination lamp LH	D3	B205	W/16	: Reclining motor LH
D3	B37	W/16	: To B200	C4	B206	W/6	: Lifting motor (front)
C5	B38	Y/2	: LH side front curtain air bag module	D4	B207	GR/6	: Lifting motor (rear)
C5	B40	W/24	: To E34	D4	B208	W/10	: Power seat switch LH
C5	B41	W/12	: To E35	D4	B209	W/3	: Front seat heater LH
C5	B42	W/2	: To E36	D5	B210	W/4	: Lumbar support switch
B4	B43	W/16	: To B111	E5	B211	B/2	: Lumbar support motor
F1	B48	W/18	: To D401	Third row power folding seat sub-harness			
F1	B49	W/2	: To D402	F2	B400	W/10	: To B75
F2	B52	W/2	: Rear power vent window motor LH	E3	B401	GR/12	: Third row power folding seat control unit
F2	B54	Y/2	: LH side rear curtain air bag module	E3	B402	W/10	: Third row power folding seat control unit
G3	B55	W/26	: Back door control unit	F3	B403	GR/4	: Third row power folding seat motor LH
F2	B56	GR/16	: Sonar control unit	E2	B404	W/4	: To B425
G2	B57	GR/10	: Sonar control unit	E3	B425	W/4	: To B404
G1	B63	W/6	: Back door close switch				

BODY NO. 2 HARNESS

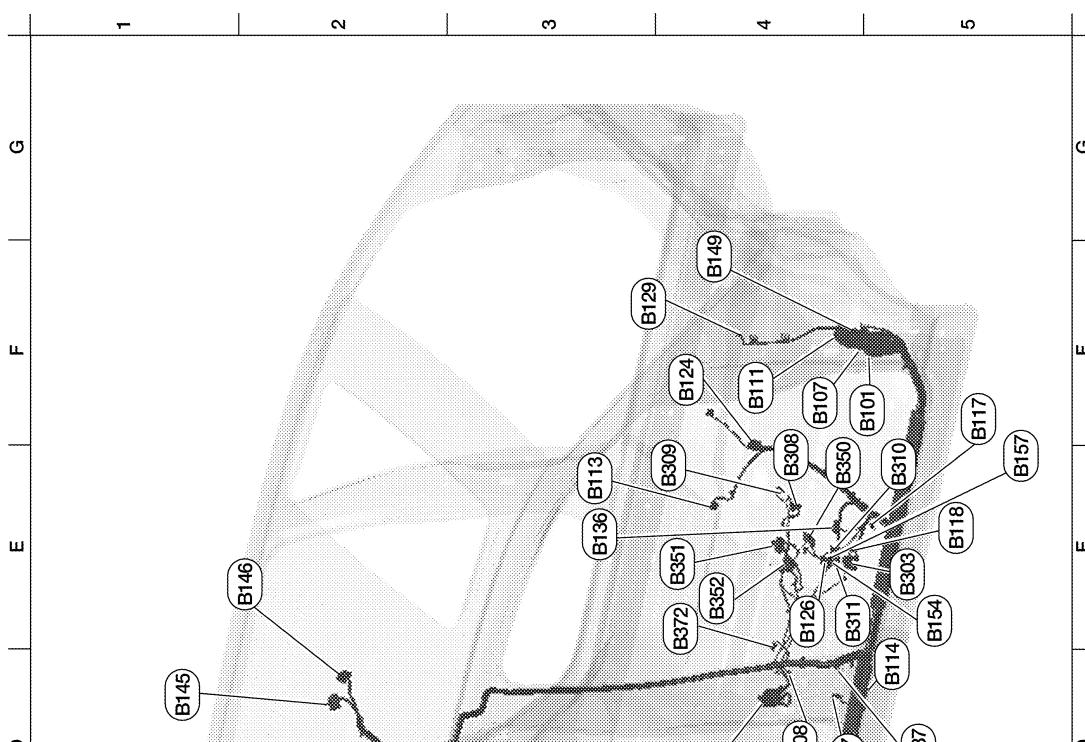

HARNESS


< COMPONENT DIAGNOSIS >

F4	B101	W/16	: To M84	A1	B140	W/6	: To D601
A5	B105	B/3	: Rear combination lamp RH	D1	B145	W/16	: To R200
D4	B106	W/18	: To D301	E2	B146	BR/24	: To R201
F4	B107	W/8	: To E139	F4	B149	SMJ	: To M36
D4	B108	W/3	: Front door switch RH	B2	B150	W/2	: Rear power vent window motor RH
F4	B111	W/16	: To B43	B2	B153	W/2	: Cargo lamp
E3	B113	Y/12	: Air bag diagnosis sensor unit	E5	B154	W/2	: To B303
D5	B114	Y/2	: RH side air bag (satellite) sensor	B3	B155	B/6	: Air mix door motor (rear)
C3	B116	W/3	: Rear door switch RH	B3	B156	B/3	: Mode door motor (rear)
F5	B117	—	: Body ground	E5	B157	Y/4	: Seat belt buckle pre-tensioner assembly RH (seat belt buckle switch)
E5	B118	W/3	: Front seat heater RH	C3	B162	BR/6	: Third row power folding seat switch RH side (front)
A2	B119	W/2	: Condenser-3	A3	B163	W/6	: Third row power folding seat switch RH side (rear)
A2	B120	W/2	: Condenser-4	C3	B164	W/6	: Third row power folding seat switch LH side (front)
F4	B124	W/6	: To B32	A4	B165	BR/6	: Third row power folding seat switch driver side (rear)
E4	B126	Y/2	: Front RH side air bag module	B2	B166	B/2	: Rear sonar buzzer
D4	B127	Y/2	: Front RH seat belt pre-tensioner	Front seat RH harness			
C3	B128	Y/2	: RH side rear curtain air bag module	E5	B303	W/2	: To B154
F3	B129	Y/2	: RH side front curtain air bag module	E4	B308	W/10	: Power seat switch RH
A3	B130	GR/3	: Rear combination lamp RH	E4	B309	B/2	: Sliding motor RH
A3	B132	—	: Body ground	E5	B310	GR/2	: Lifting motor RH (rear)
A3	B133	W/4	: Variable blower control (rear)	E4	B311	GR/2	: Lifting motor RH (front)
B3	B134	W/2	: Rear blower motor	E4	B350	W/8	: To B136
E3	B136	W/8	: To B350	E4	B351	B/18	: Occupant classification system control unit
D5	B137	W/3	: Belt tension sensor	E4	B352	B/3	: Occupant classification system control unit
B2	B138	B/3	: Rear cargo power socket	E4	B372	W/2	: Reclining motor RH
A1	B139	W/16	: To D602				

HARNESS

< COMPONENT DIAGNOSIS >

ROOM LAMP HARNESS

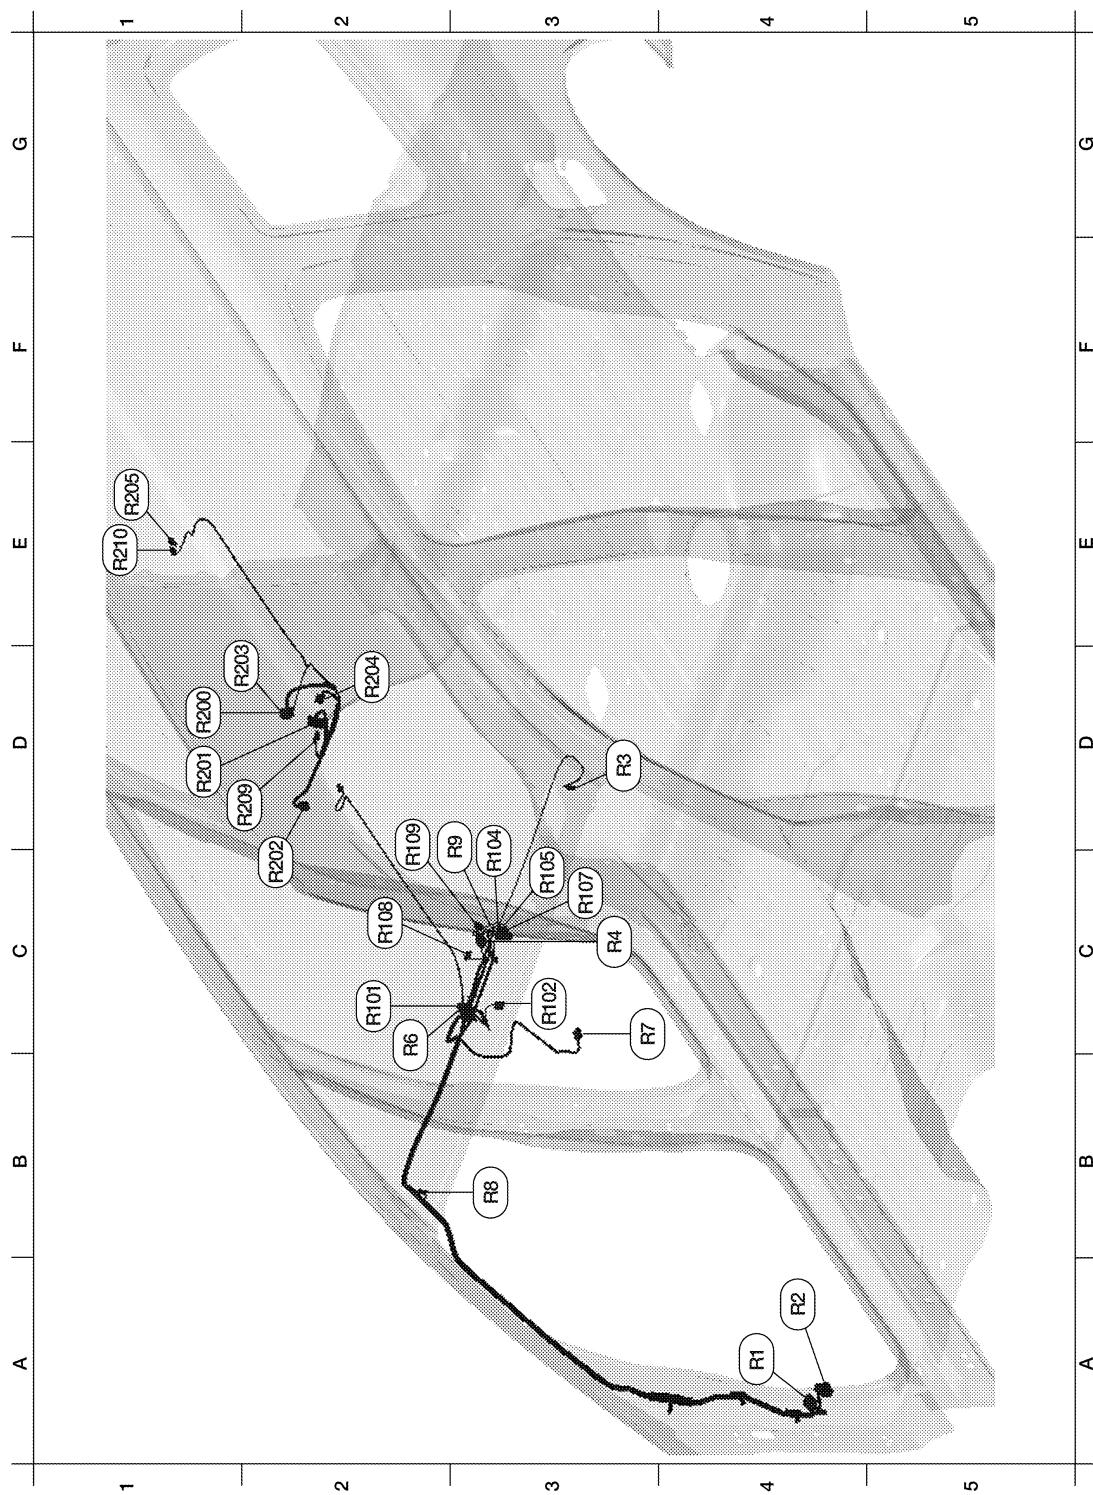

ALMIA0219GB


A4	R1	W/16	: To M1	C3	R107	W/8	: To R9
A4	R2	W/12	: To M2	C2	R108	B/6	: Rear air control (front)
D3	R3	W/2	: Vanity lamp LH	D2	R109	W/4	: Microphone
C3	R4	W/10	: Sunroof motor assembly	Room lamp sub-harness B			
C2	R6	W/16	: To R101	D1	R200	W/16	: To B145

HARNESS

< COMPONENT DIAGNOSIS >

C3	R7	GR/10	: Auto anti-dazzling inside mirror	D1	R201	BR/24	: To B146
B3	R8	W/2	: Vanity lamp RH	C2	R202	W/12	: Video monitor
D3	R9	W/8	: To R107	D1	R203	W/3	: Personal lamp 2ND row
Room lamp sub-harness A				D2	R204	W/16	: Rear audio remote control unit
C2	R101	W/16	: To R6	E1	R205	W/3	: Personal lamp 3RD row
C3	R102	GR/8	: Front room/map lamp assembly	D2	R209	B/6	: Rear air control (rear)
D3	R104	GR/6	: Sunroof switch	E1	R210	W/2	: Inside key antenna 4 (over head console area)

FRONT DOOR LH HARNESS

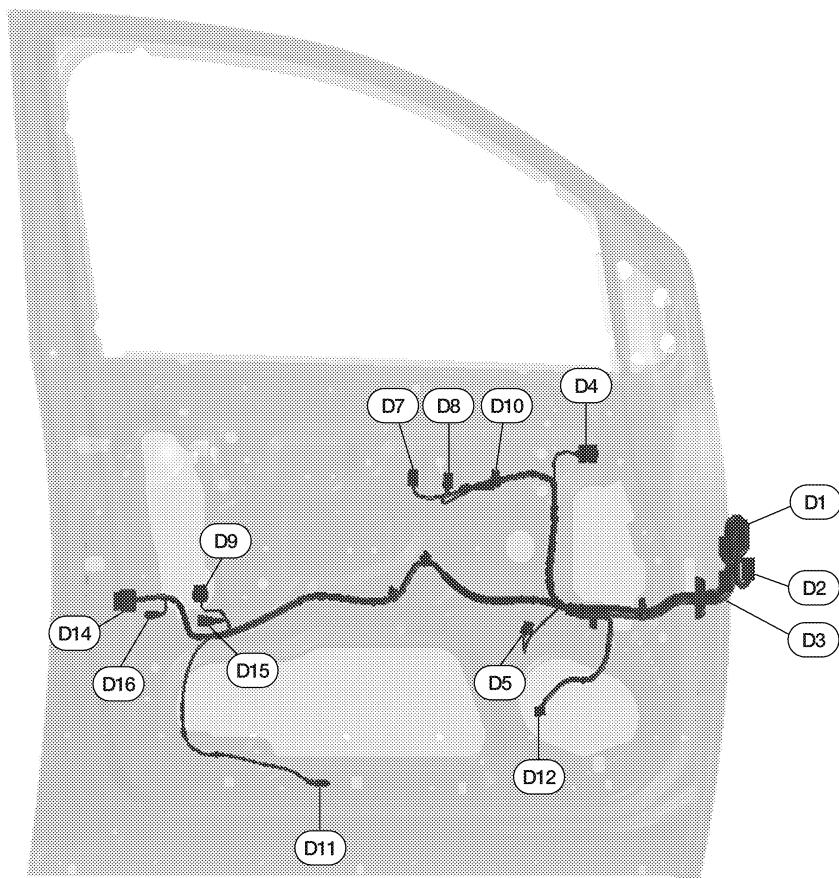


ALMIA0215GB

D1	BR/24	: To M9	D9	GR/6	: Front power window motor LH
D2	W/16	: To M8	D10	W/16	: Door mirror remote control switch
D3	W/10	: To M158	D11	W/2	: Front step lamp LH
D4	W/16	: Door mirror LH	D12	W/2	: Front door speaker LH
D5	W/8	: Seat memory switch	D14	B/6	: Front door lock assembly LH
D7	W/16	: Main power window and door lock/unlock switch	D15	GR/6	: Front outside antenna
D8	W/3	: Main power window and door lock/unlock switch	D16	GR/2	: Front door request switch LH

HARNESS

< COMPONENT DIAGNOSIS >

FRONT DOOR RH HARNESS

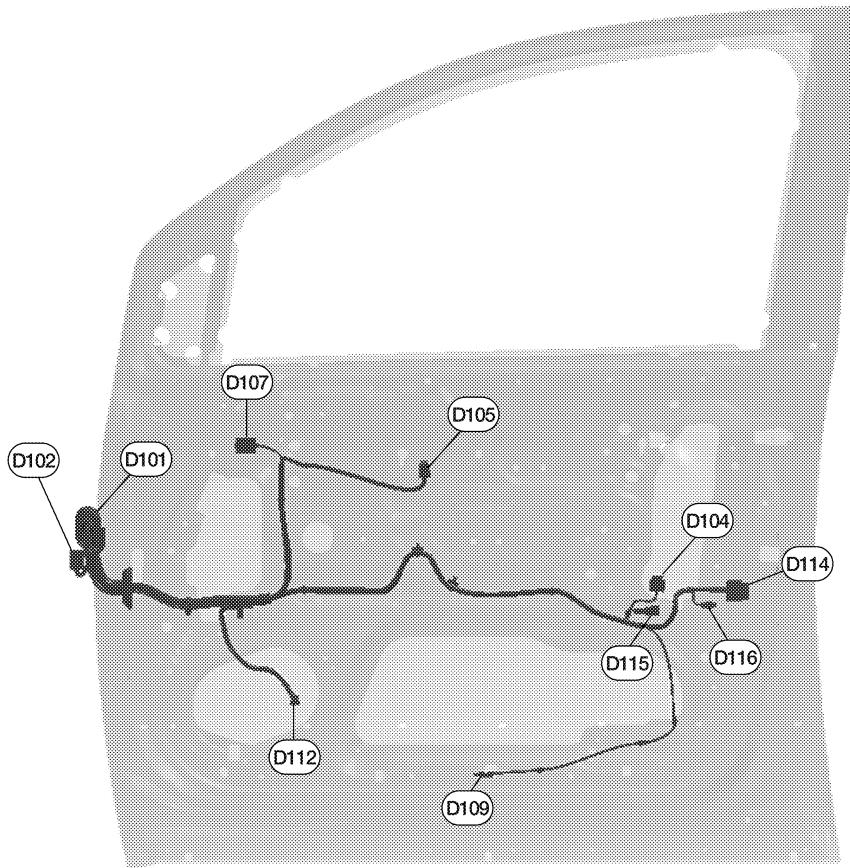

ALMIA0218GB

D101	W/10	: To M75	D109	W/2	: Front step lamp RH
D102	BR/20	: To M74	D112	W/2	: Front door speaker RH
D104	GR/6	: Front power window motor RH	D114	B/6	: Front door lock actuator RH
D105	W/16	: Power window and door lock/unlock switch RH	D115	GR/2	: Front outside antenna RH
D107	W/16	: Door mirror RH	D116	GR/2	: Front door request switch RH

A

B

C

D

E

F

G

H

I

J

K

L

PG

N


O

P

HARNESS

< COMPONENT DIAGNOSIS >

REAR DOOR LH HARNESS

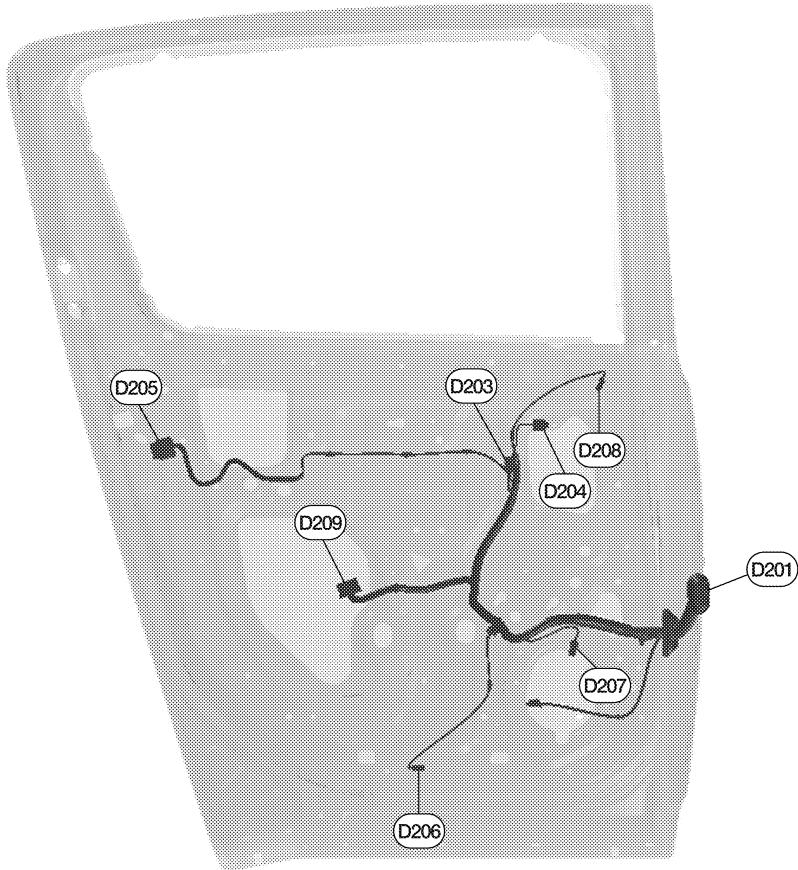


AWMIA0109GB

D201	W/18	: To B6	D206	W/2	: Rear step lamp LH
D203	W/8	: Rear power window switch LH	D207	W/2	: Rear door speaker LH
D204	GR/6	: Rear power window motor LH	D208	BR/2	: Rear door tweeter LH
D205	B/6	: Rear door lock actuator LH	D209	W/18	: Rear power window control unit LH

HARNESS

< COMPONENT DIAGNOSIS >

REAR DOOR RH HARNESS

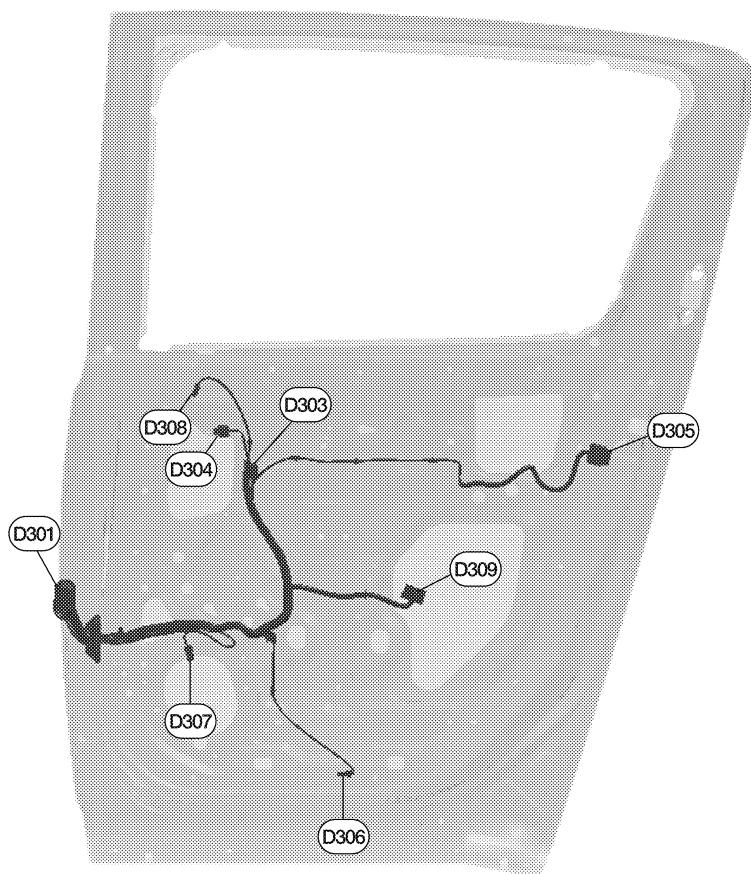

AWMIA0110GB

D301	W/18	: To B106	D306	W/2	: Rear step lamp RH
D303	W/8	: Rear power window switch RH	D307	W/2	: Rear door speaker RH
D304	GR/6	: Rear power window motor RH	D308	BR/2	: Rear door tweeter RH
D305	B/6	: Rear door lock actuator RH	D309	W/18	: Rear power window control unit RH

A
B
C
D
E
F
G
H
I
J
K
L


PG

N
O
P

HARNESS

< COMPONENT DIAGNOSIS >

BACK DOOR HARNESS

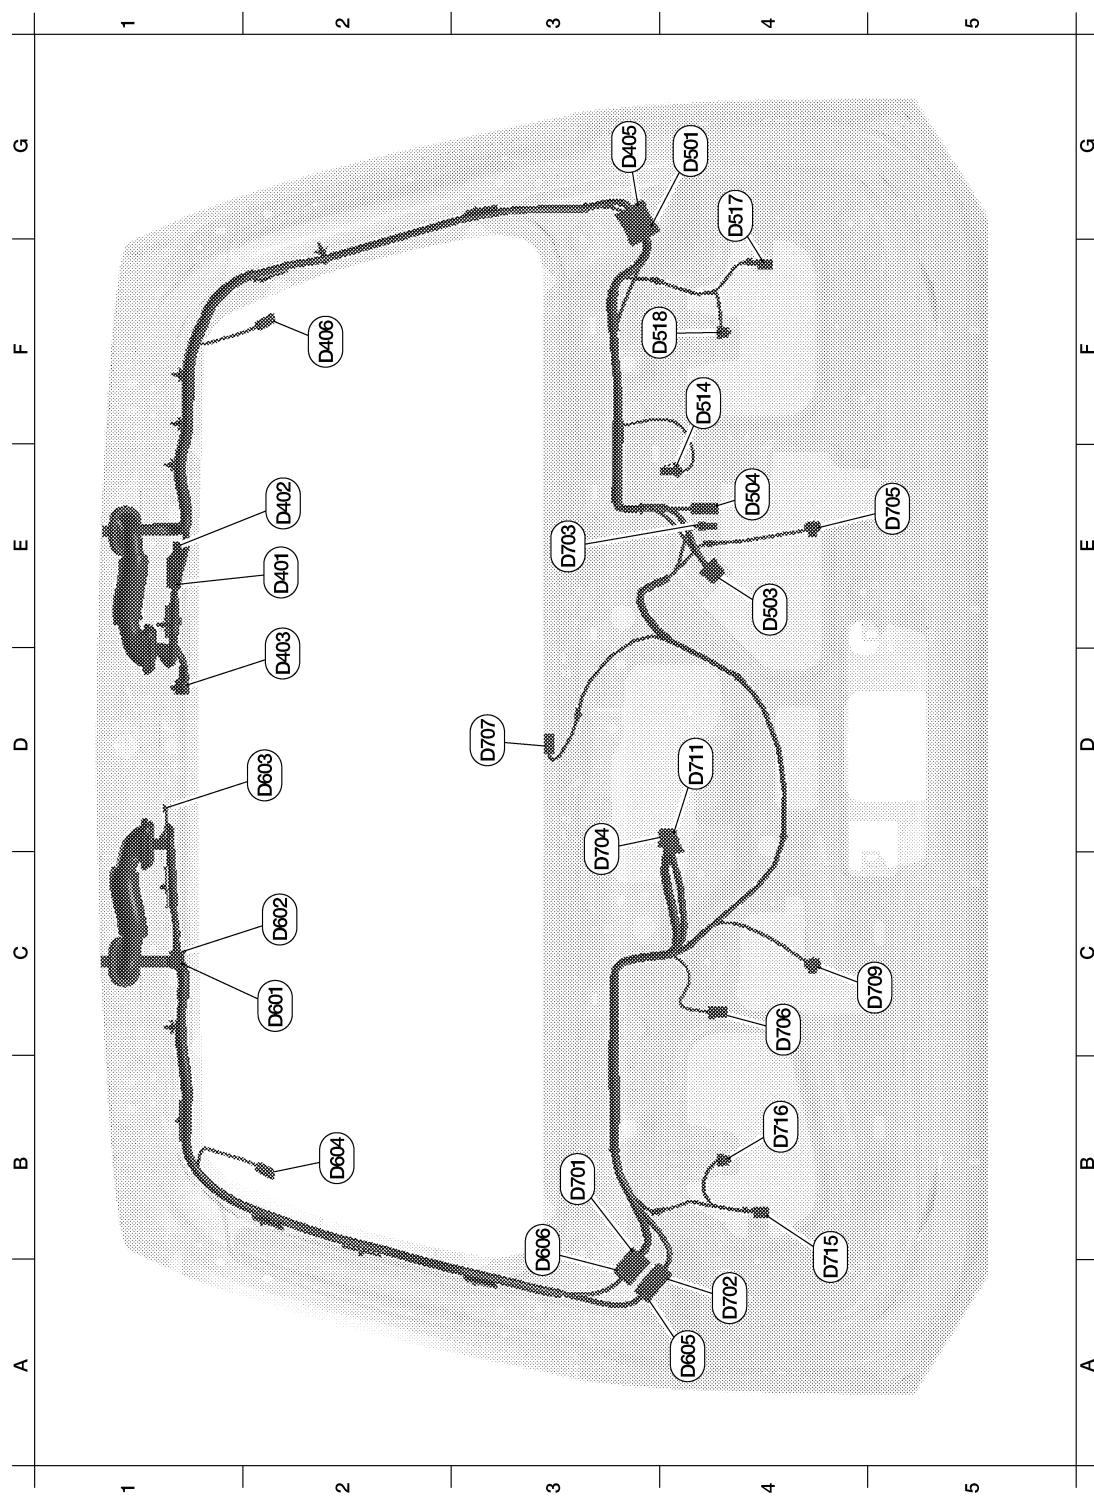

AAMIA0452GB

Back door No. 2 LH harness				Back door RH harness			
E2	D401	W/18	: To B48	B3	D701	W/16	: To D606
E2	D402	W/2	: To B49	A3	D702	W/6	: To D605
D2	D403	GR/2	: High mounted stop lamp	D2	D703	W/2	: License plate lamps
G3	D405	W/18	: To D501	D3	D704	W/6	: Rear wiper motor

HARNESS

< COMPONENT DIAGNOSIS >

F2	D406	B/1	: Rear window defogger	D2	D705	GR/2	: Back-up lamp LH
Back door LH harness				C4	D706	W/4	: Back door and glass hatch switch assembly
G3	D501	W/18	: To D405	D2	D707	B/1	: Glass hatch ajar switch
E4	D503	W/8	: Back door latch	B4	D709	GR/8	: Back-up lamp RH
E4	D504	W/4	: Rear view camera	B4	D711	W/4	: Glass hatch lock actuator
F4	D514	BR/2	: Back door warning chime	B4	D715	BR/2	: Pinch strip RH
F4	D517	BR/2	: Pinch strip LH	B4	D716	BR/2	: Back door speaker RH
F4	D518	BR/2	: Back door speaker LH				
Back door No. 2 RH harness							
C2	D601	W/6	: To B140				
C2	D602	W/16	: To B139				
D2	D603	—	: Body ground				
B2	D604	B/1	: Rear window defogger				
A3	D605	W/6	: To D702				
B3	D606	W/16	: To D701				

A

B

C

D

E

F

G

H

I

J

K

L

PG

N

O

P

ELECTRICAL UNITS LOCATION


< COMPONENT DIAGNOSIS >

ELECTRICAL UNITS LOCATION

Electrical Units Location

INFOID:0000000003776572


ENGINE COMPARTMENT

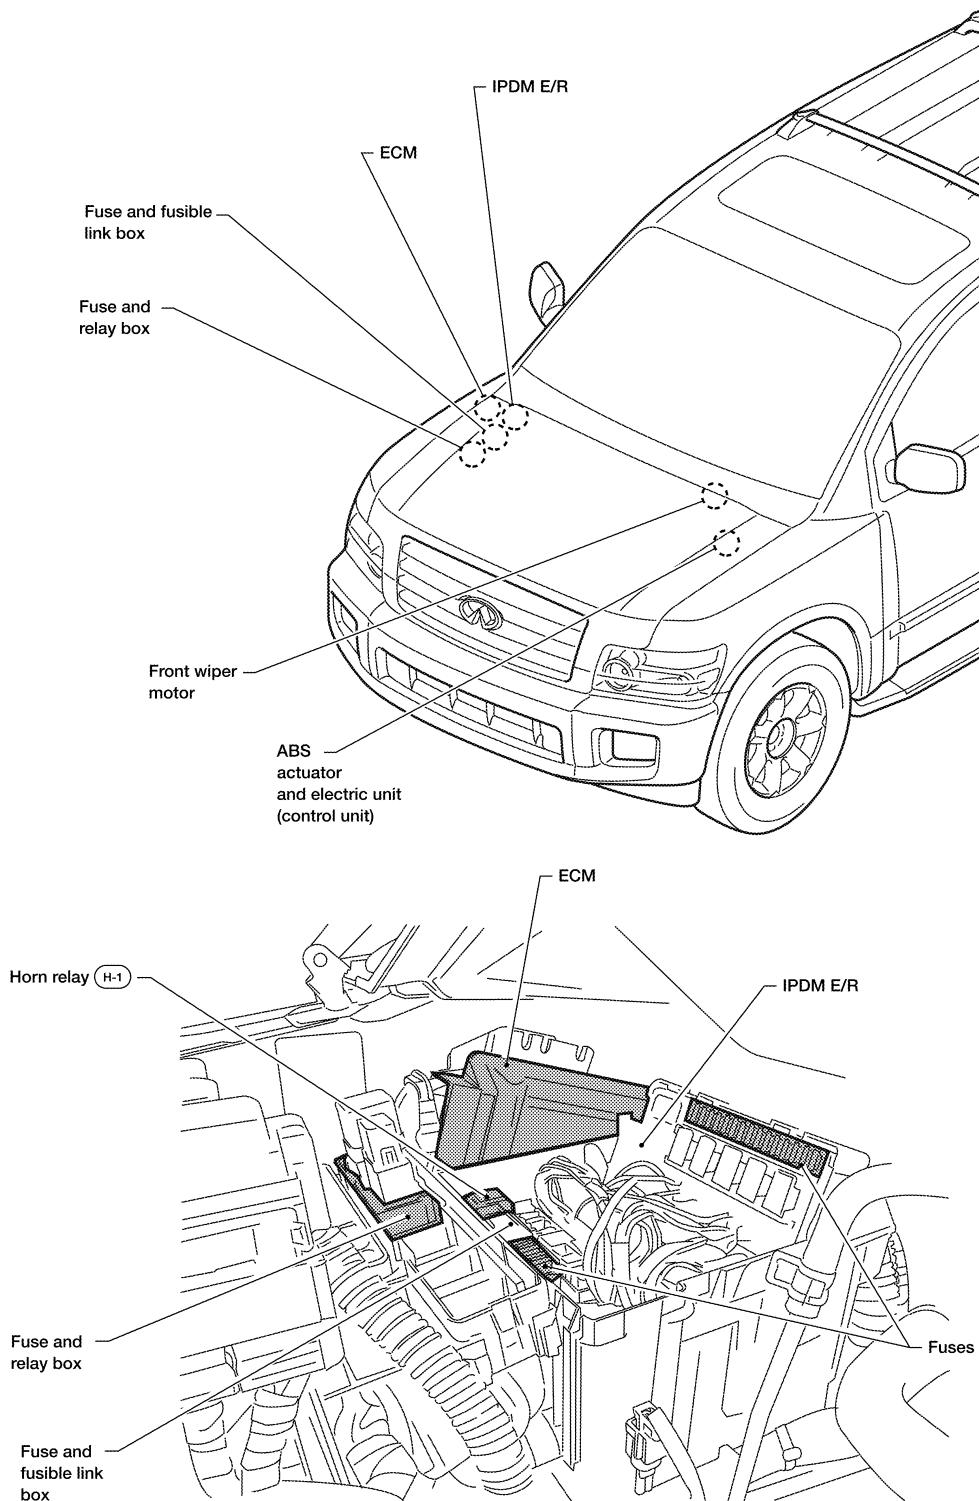


ABMIA0164GB

ELECTRICAL UNITS LOCATION


< COMPONENT DIAGNOSIS >
PASSENGER COMPARTMENT

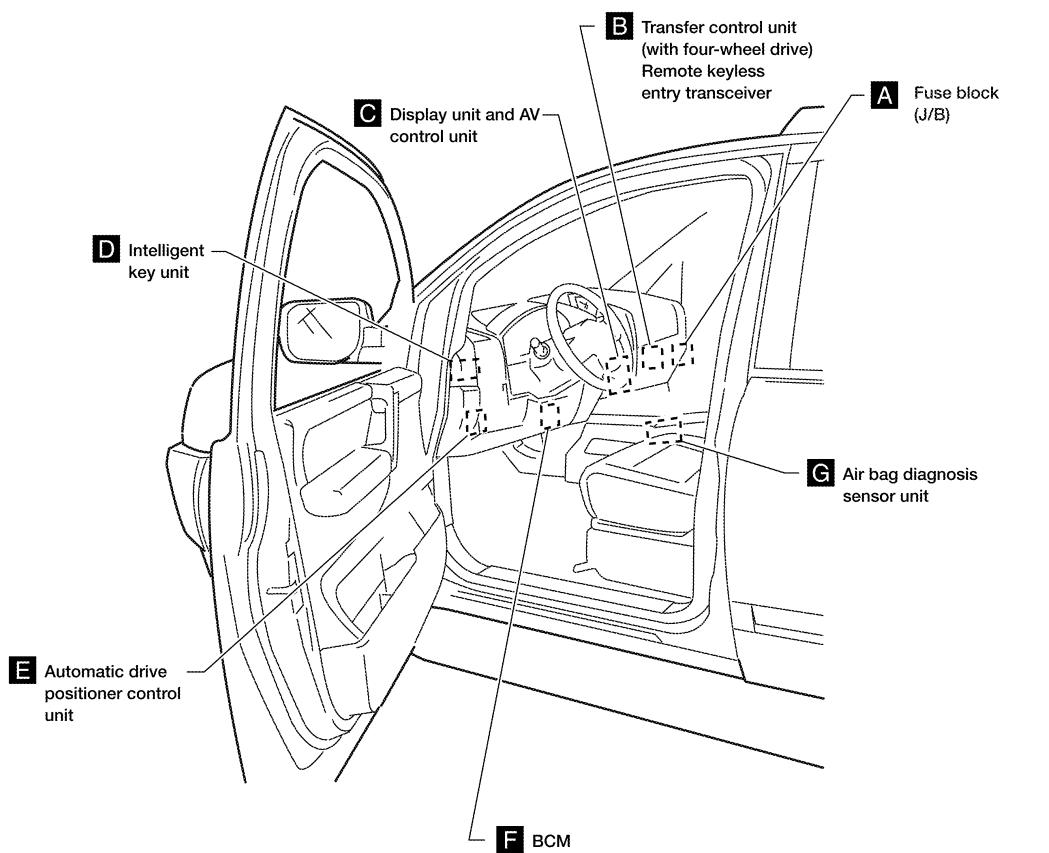

A Instrument panel side RH

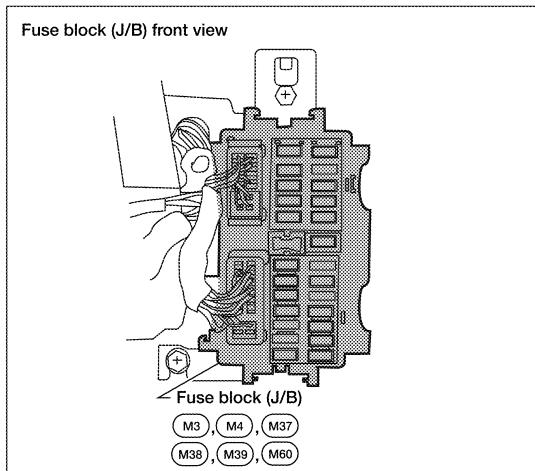

Fuse block (J/B) rear view

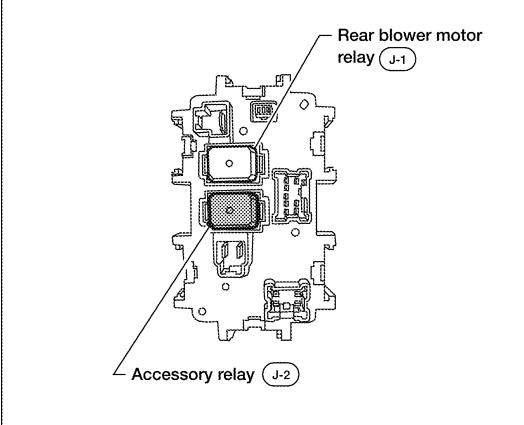

ABMIA0165GB







A
B
C
D
E
F
G
H
I
J
K
L

PG

N
O
P

ELECTRICAL UNITS LOCATION

< COMPONENT DIAGNOSIS >

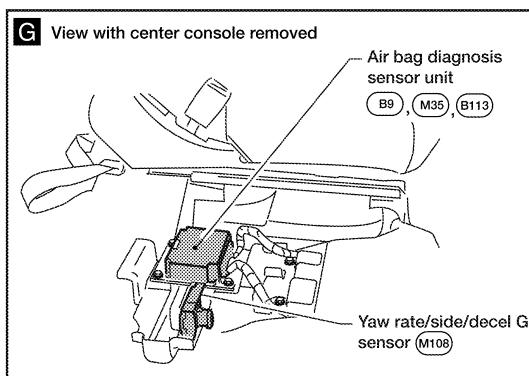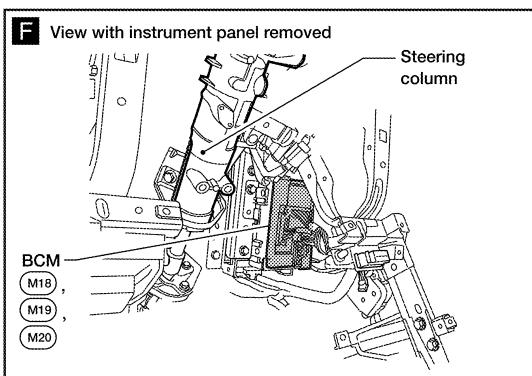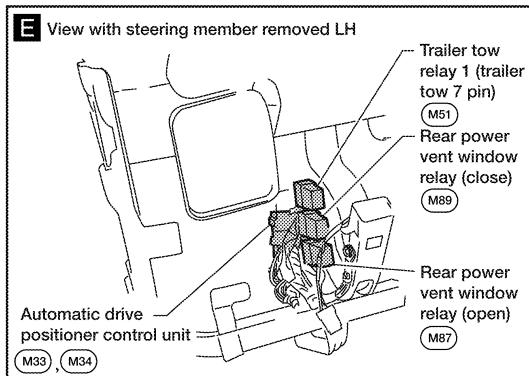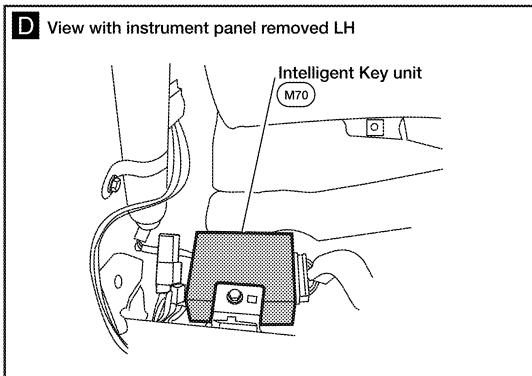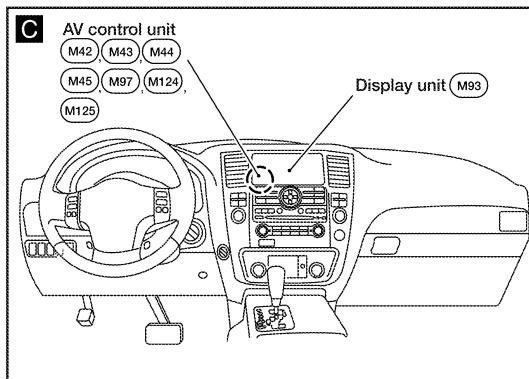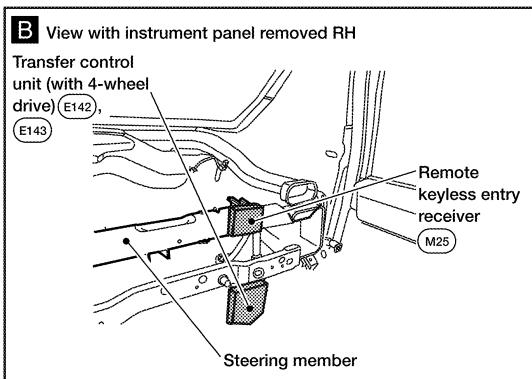

ABMIA0135GB

HARNESS CONNECTOR

< COMPONENT DIAGNOSIS >

HARNESS CONNECTOR

Description

INFOID:000000003776573

HARNESS CONNECTOR (TAB-LOCKING TYPE)


- The tab-locking type connectors help prevent accidental looseness or disconnection.
- The tab-locking type connectors are disconnected by pushing or lifting the locking tab(s). Refer to the figure below.

Refer to the next page for description of the slide-locking type connector.

CAUTION:

Do not pull the harness or wires when disconnecting the connector.

[Example]

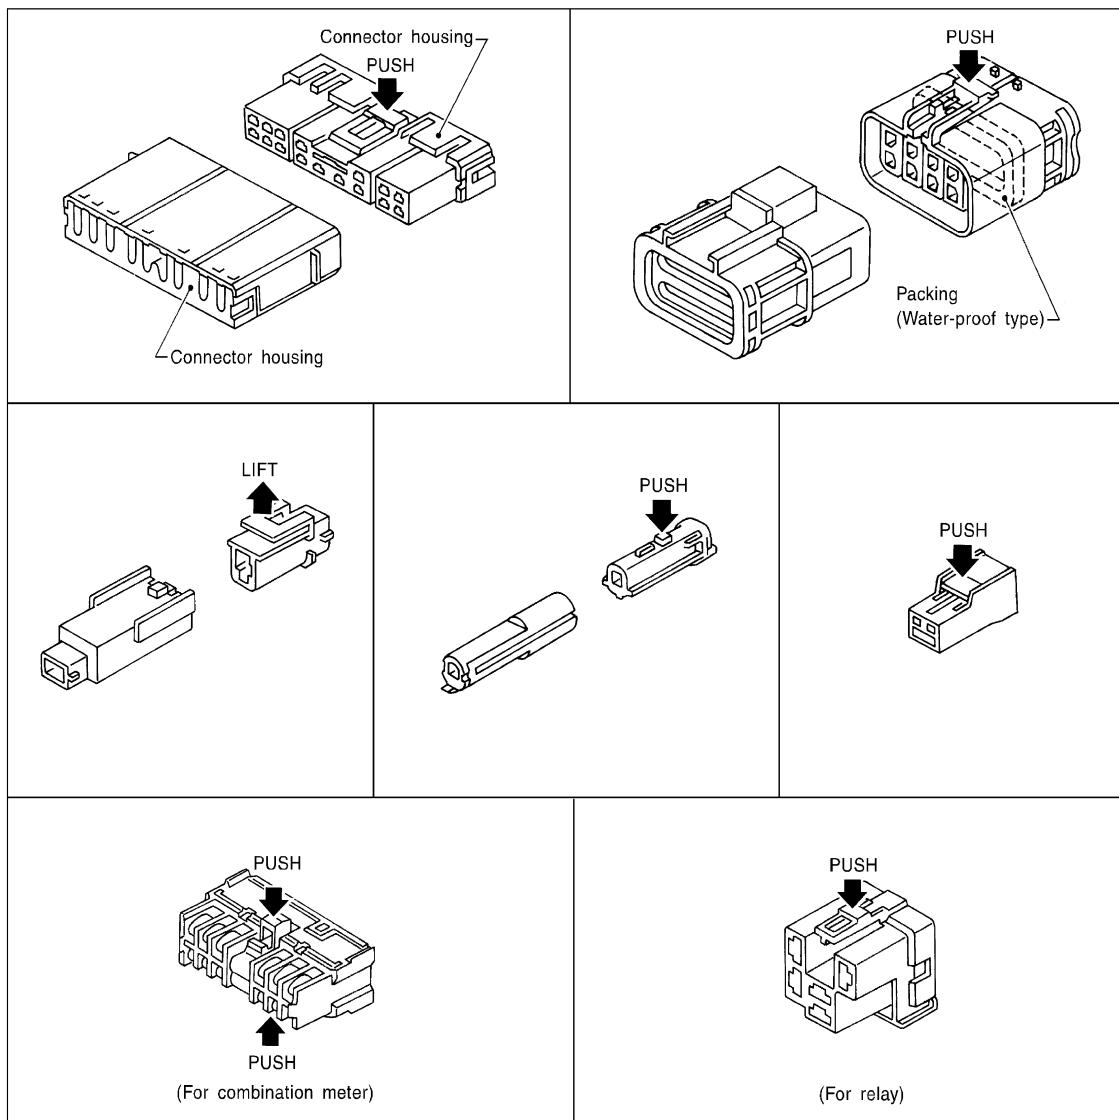

A

B

C

D

E

F

G

H

I

J

K

L

PG

N

O

P

SEL769DA

HARNESS CONNECTOR (SLIDE-LOCKING TYPE)

- A new style slide-locking type connector is used on certain systems and components, especially those related to OBD.
- The slide-locking type connectors help prevent incomplete locking and accidental looseness or disconnection.

HARNESS CONNECTOR


< COMPONENT DIAGNOSIS >

- The slide-locking type connectors are disconnected by pushing or pulling the slider. Refer to the figure below.

CAUTION:

- Do not pull the harness or wires when disconnecting the connector.
- Be careful not to damage the connector support bracket when disconnecting the connector.

[Example]

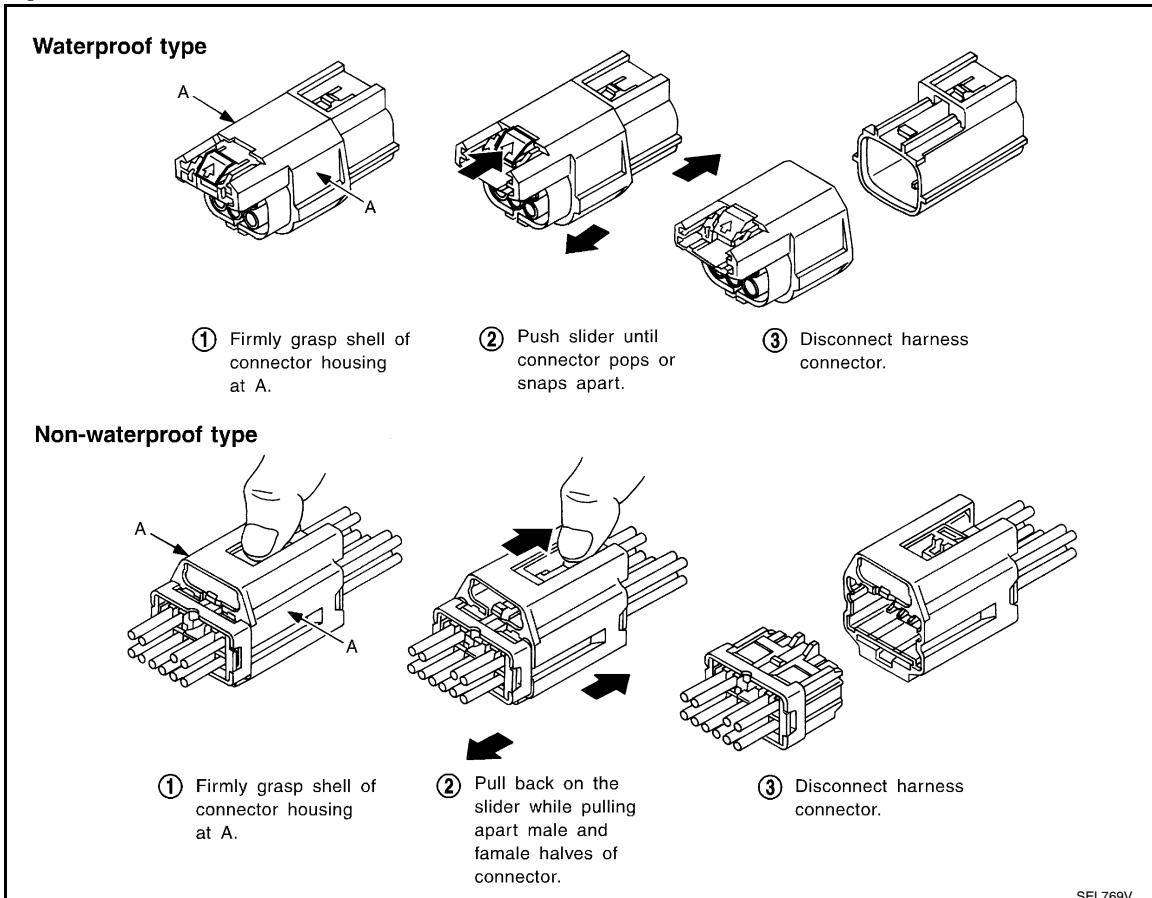

HARNESS CONNECTOR (LEVER LOCKING TYPE)


- Lever locking type harness connectors are used on certain control units and control modules such as ECM, ABS actuator and electric unit (control unit), etc.
- Lever locking type harness connectors are also used on super multiple junction (SMJ) connectors.
- Always confirm the lever is fully locked in place by moving the lever as far as it will go to ensure full connection.

CAUTION:

HARNESS CONNECTOR

< COMPONENT DIAGNOSIS >

- Always confirm the lever is fully released (loosened) before attempting to disconnect or connect these connectors to avoid damage to the connector housing or terminals.

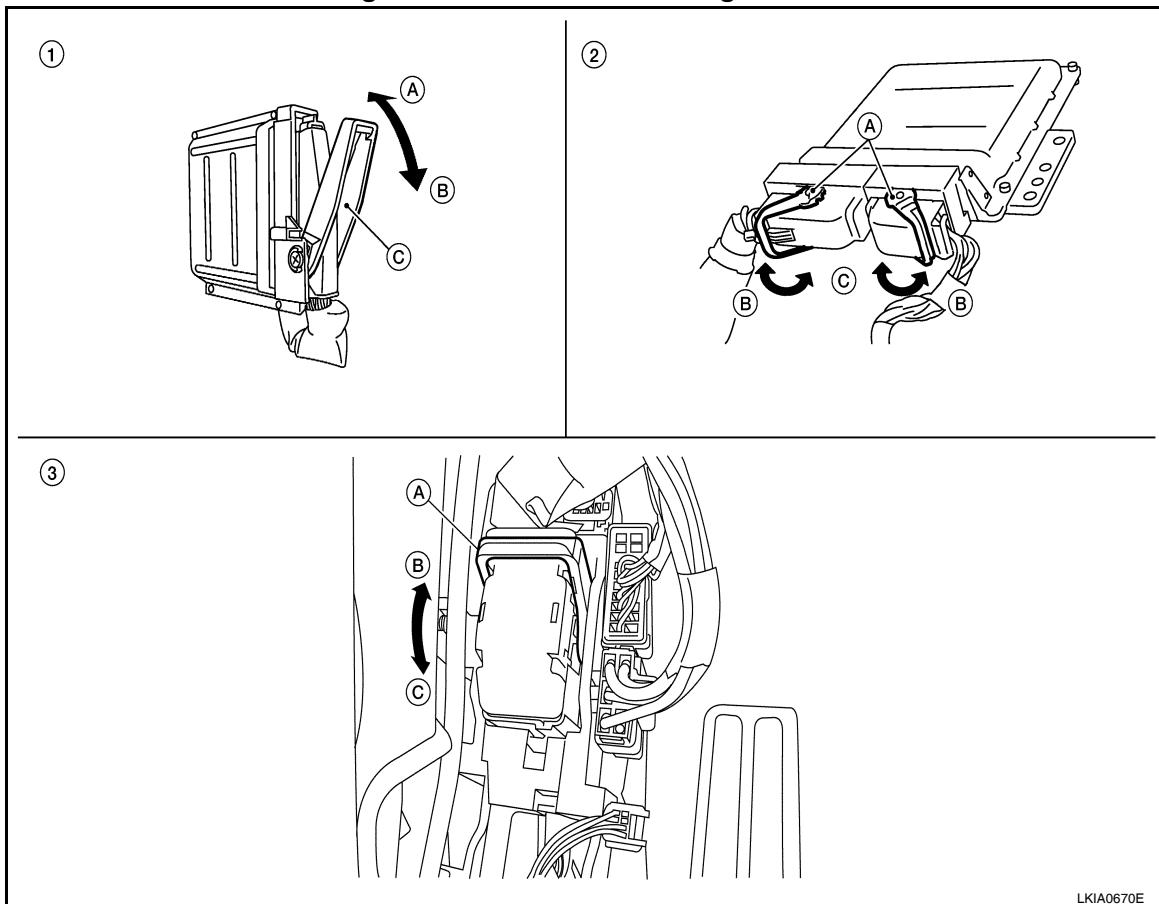


- | | | |
|-----------------------------------|---------------------------------|------------------|
| 1. Control unit with single lever | 2. Control unit with dual lever | 3. SMJ connector |
| A. Fasten | A. Fasten | A. Fasten |
| B. Loosen | B. Loosen | B. Loosen |
| C. Lever | C. Lever | C. Lever |

HARNESS CONNECTOR (DIRECT-CONNECT SRS COMPONENT TYPE)

- SRS direct-connect type harness connectors are used on certain SRS components such as air bag modules and seat belt pre-tensioners.
- Always pull up to release black locking tab prior to removing connector from SRS components.
- Always push down to lock black locking tab after installing connector to SRS components. When locked, the black locking tab is level with the connector housing.

CAUTION:

- Do not pull the harness or wires when removing connectors from SRS components.

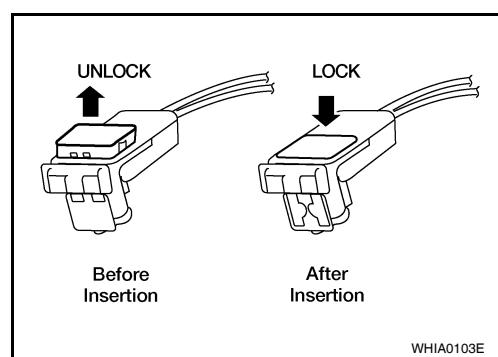

STANDARDIZED RELAY

< COMPONENT DIAGNOSIS >


STANDARDIZED RELAY

Description

INFOID:0000000003776574

NORMAL OPEN, NORMAL CLOSED AND MIXED TYPE RELAYS


Relays can mainly be divided into three types: normal open, normal closed and mixed type relays.

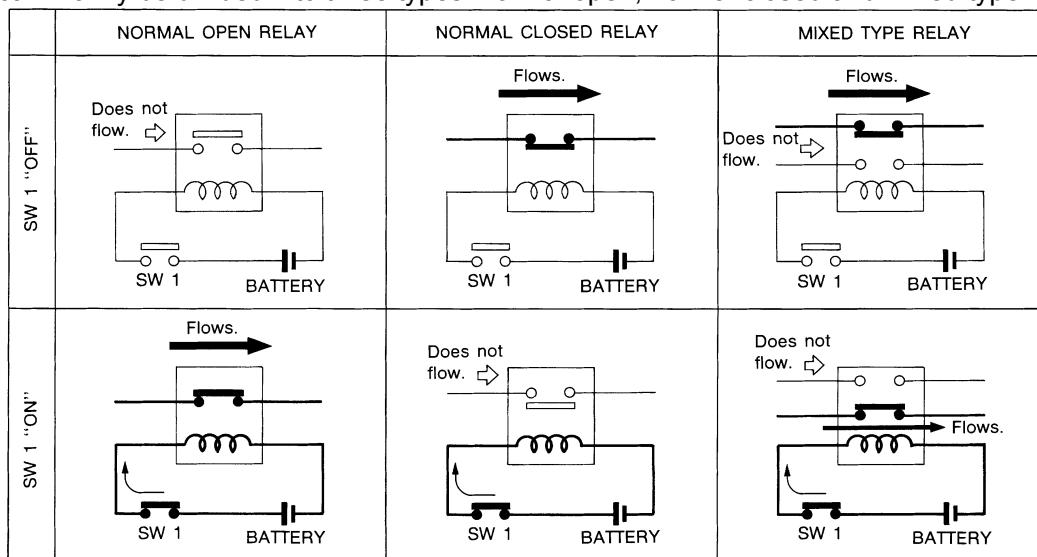

SEL881H

TYPE OF STANDARDIZED RELAYS














- | | | | |
|----------|------------|-------------|----------------|
| 1M | 1 Make | 2M | 2 Make |
| 1T | 1 Transfer | 1M·1B | 1 Make 1 Break |

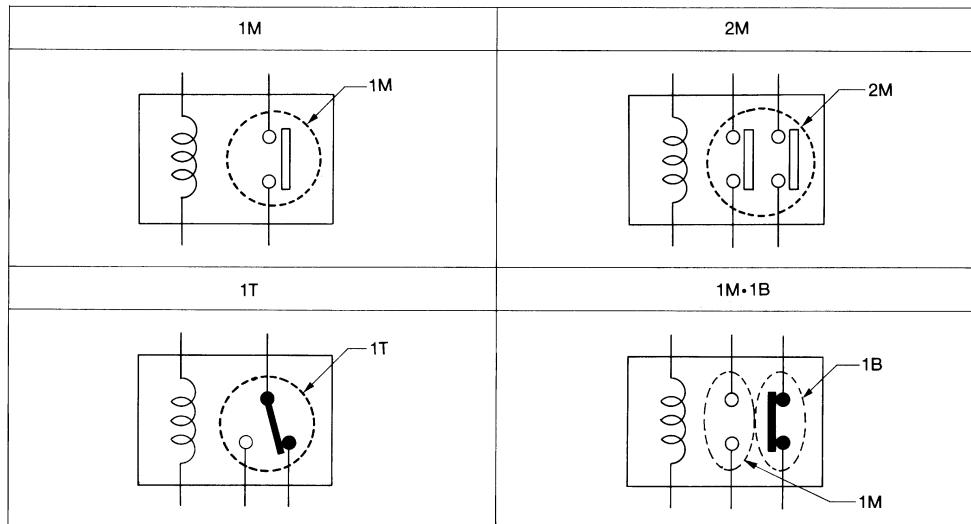

SEL882H

STANDARDIZED RELAY

< COMPONENT DIAGNOSIS >

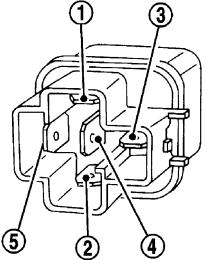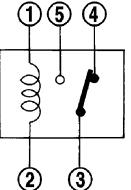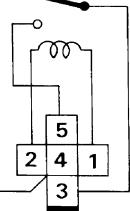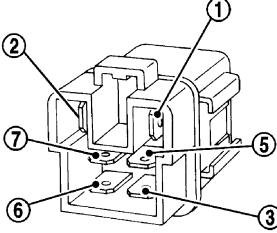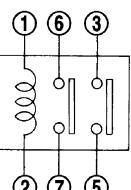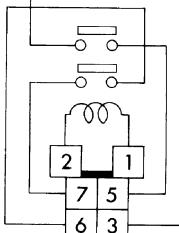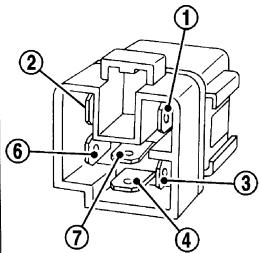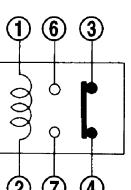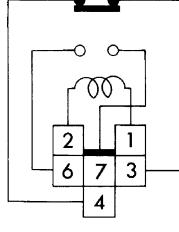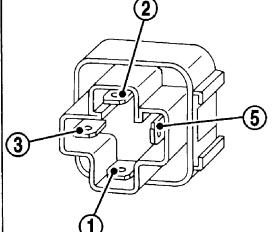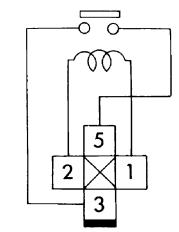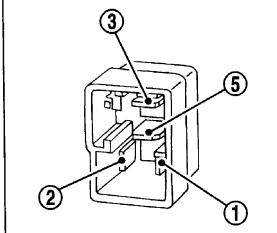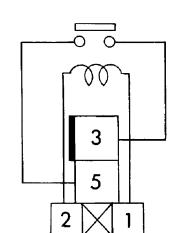Type	Outer view	Circuit	Connector symbol and connection	Case color
1T				BLACK
2M				BROWN
1M+1B				GRAY
1M				BLUE
				

The arrangement of terminal numbers on the actual relays may differ from those shown above.

SEL188W

A
B
C
D
E
F
G
H
I
J
K
L
PG
N
O
P


FUSE BLOCK - JUNCTION BOX (J/B)

< COMPONENT DIAGNOSIS >

FUSE BLOCK - JUNCTION BOX (J/B)

Terminal Arrangement

INFOID:0000000003776575

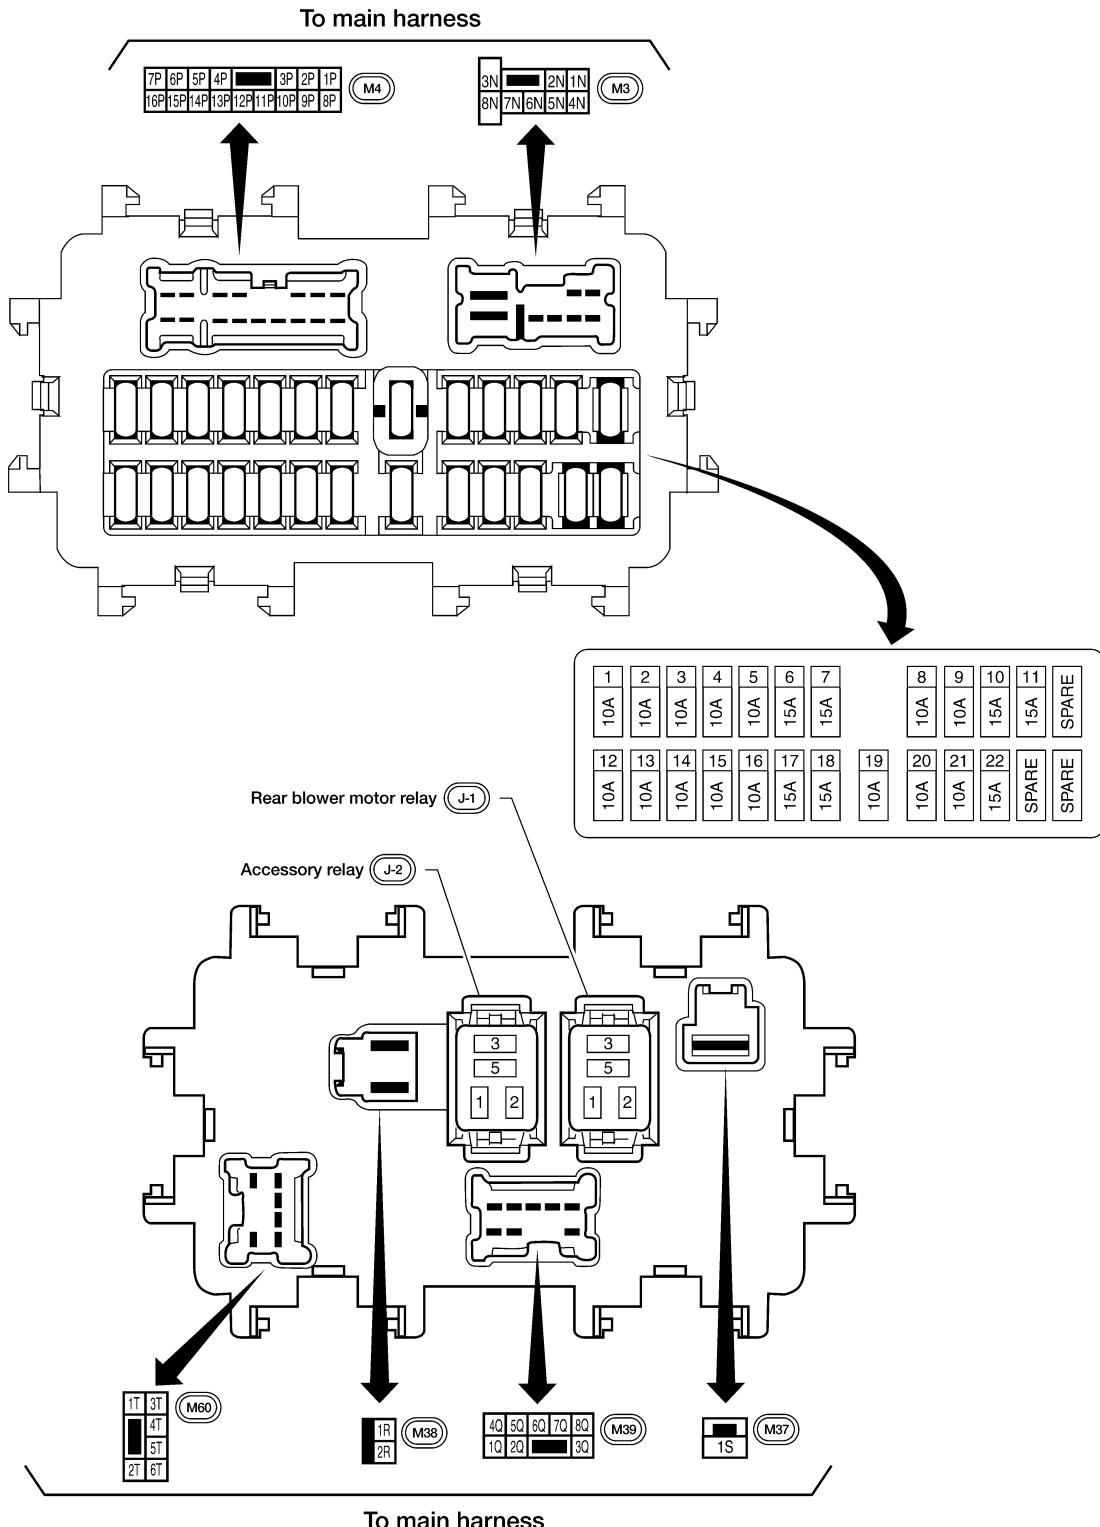

Revision: December 2009

FUSE, FUSIBLE LINK AND RELAY BOX

< COMPONENT DIAGNOSIS >

FUSE, FUSIBLE LINK AND RELAY BOX

Terminal Arrangement

INFOID:000000003776576

FUSE AND FUSIBLE LINK BOX

A

B

C

D

E

F

G

H

I

J

K

L


PG

N


O

P

FUSIBLE LINK BOX (BATTERY)

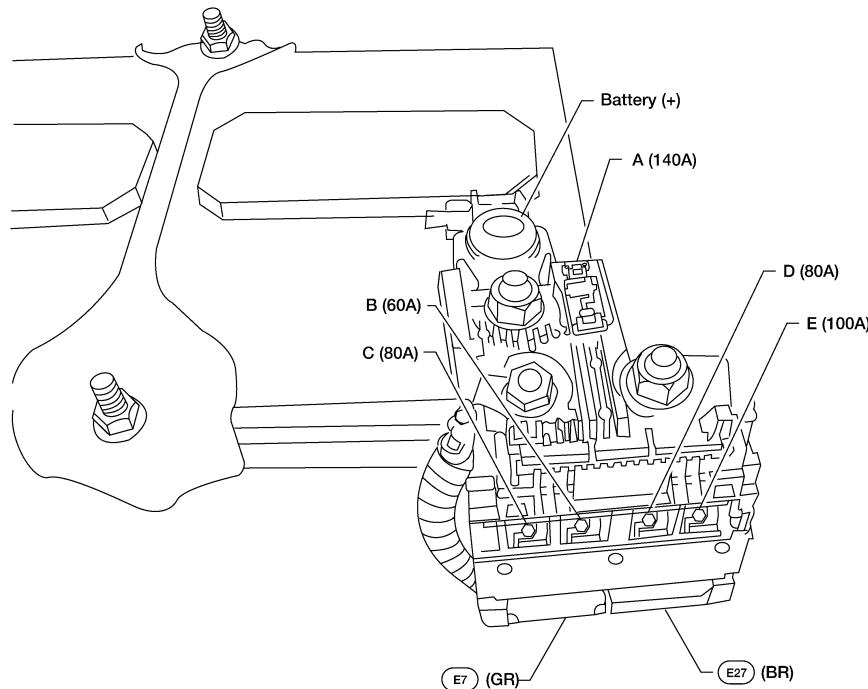


FUSE AND FUSIBLE LINK BOX

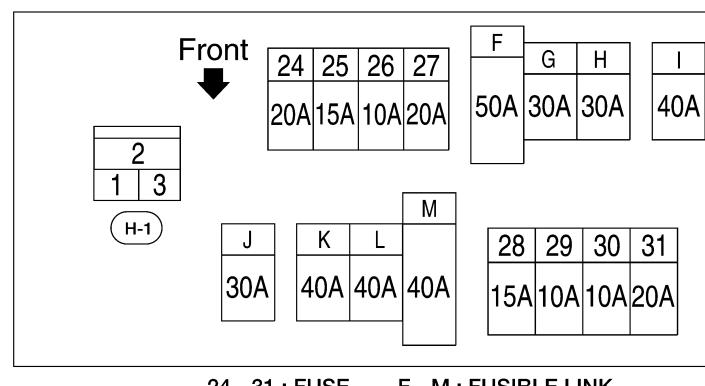

FUSE, FUSIBLE LINK AND RELAY BOX

< COMPONENT DIAGNOSIS >

FUSE AND RELAY BOX

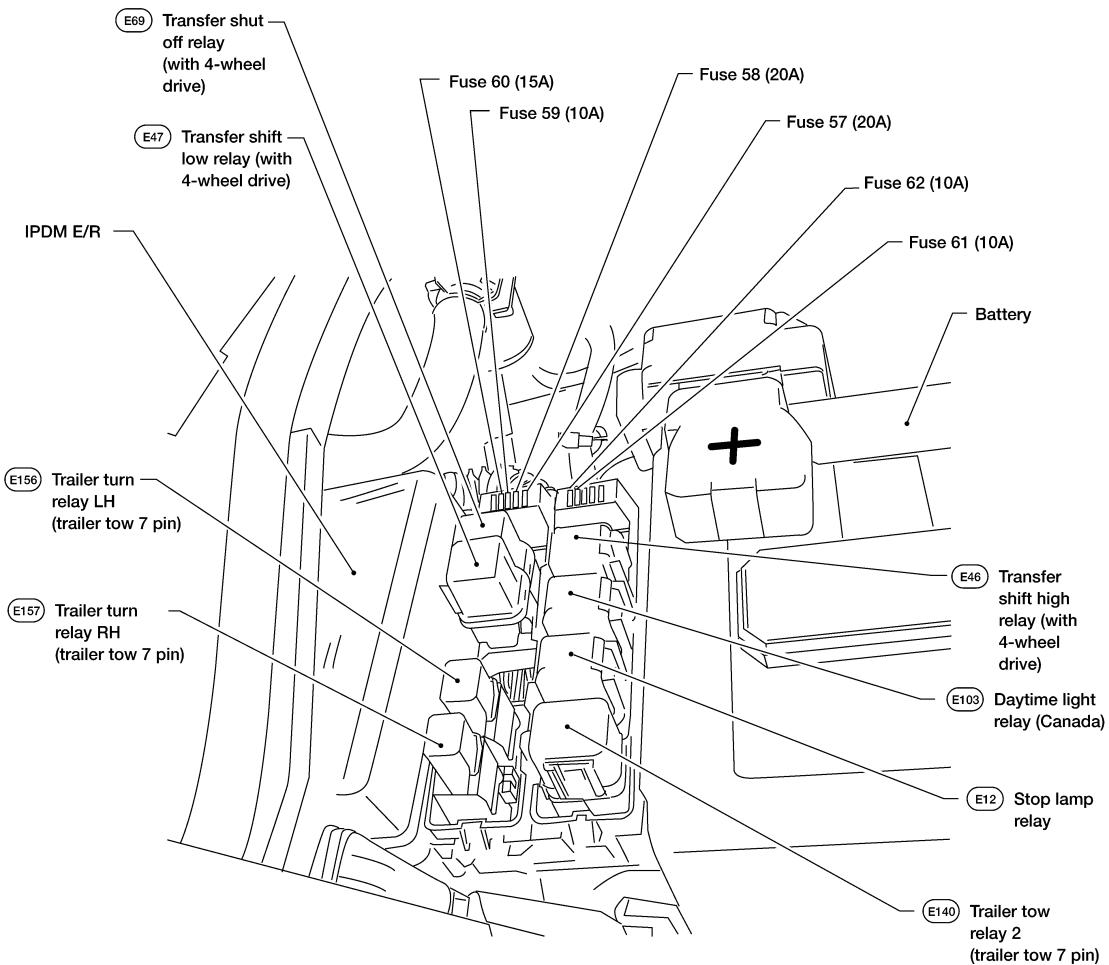

ABMIA0166GB


IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< COMPONENT DIAGNOSIS >

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

IPDM E/R Terminal Arrangement

INFOID:000000005783139

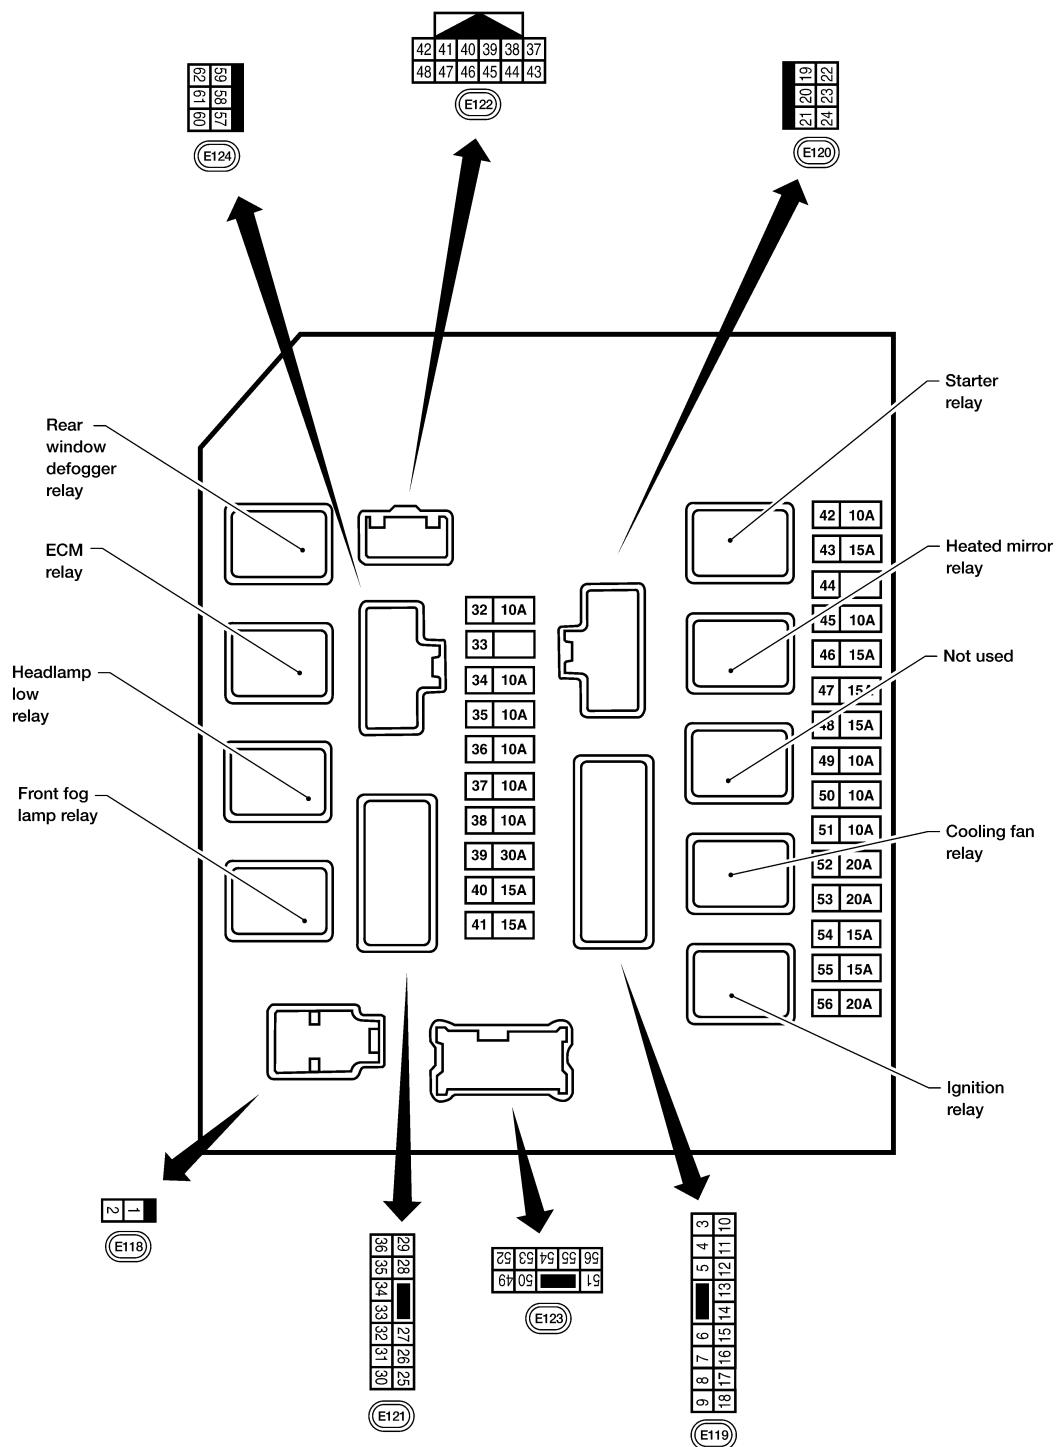

< ON-VEHICLE REPAIR >

ON-VEHICLE REPAIR**BATTERY****Removal and Installation**

INFOID:000000003776577

REMOVAL


1. Disconnect the negative battery terminal (1) and positive battery terminal (2).

CAUTION:

Remove negative battery terminal first.

◀ : Front

2. Remove the battery cover.
3. Remove the battery clamp bolt (3) and battery clamp.
4. Remove the battery.

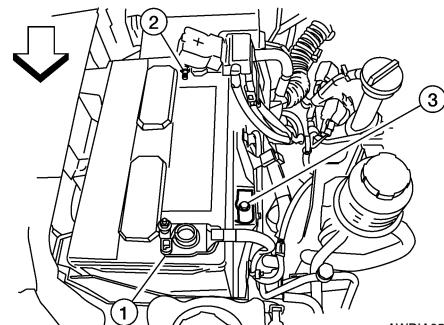

AWBIA0504ZZ

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

When installing, install the positive battery terminal first.

Battery clamp bolt : 14.7 N·m (1.5 kg·m, 11 ft-lb)

Battery terminal nut : 3.5 N·m (0.36 kg·m, 31 in-lb)

Reset electronic systems as necessary. Refer to [PG-8, "ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Special Repair Requirement"](#).

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Battery

INFOID:000000003776578

Type*	Gr. 27F
Capacity (20 HR) minimum V-AH	12-80
Cold cranking current A @ -18°C (0°F) (For reference value)	710

*: Always check with the Parts Department for the latest parts information

A

B

C

D

E

F

G

H

I

J

K

L

PG

N

O

P