

**SECTION LAN**  
**LAN SYSTEM**

A  
B  
C

**CONTENTS**

D  
E

<b>CAN FUNDAMENTAL</b>		
<b>PRECAUTION</b> .....	3	
<b>PRECAUTIONS</b> .....	3	
Precaution for Trouble Diagnosis .....	3	
Precaution for Harness Repair .....	3	
<b>FUNCTION DIAGNOSIS</b> .....	4	
<b>CAN COMMUNICATION SYSTEM</b> .....	4	
System Description .....	4	
System Diagram .....	4	
CAN Communication Control Circuit .....	5	
<b>DIAG ON CAN</b> .....	6	
Description .....	6	
System Diagram .....	6	
<b>TROUBLE DIAGNOSIS</b> .....	7	
Condition of Error Detection .....	7	
Symptom When Error Occurs in CAN Communi- cation System .....	7	
Self-Diagnosis .....	11	
CAN Diagnostic Support Monitor .....	11	
<b>BASIC INSPECTION</b> .....	13	
<b>DIAGNOSIS AND REPAIR WORKFLOW</b> .....	13	
Information Needed for Trouble Diagnosis .....	13	
How to Use CAN Communication Signal Chart .....	13	
Trouble Diagnosis Flow Chart .....	14	
Trouble Diagnosis Procedure .....	14	
<b>CAN</b>		
<b>HOW TO USE THIS MANUAL</b> .....	36	
<b>HOW TO USE THIS SECTION</b> .....	36	
Caution .....	36	
Abbreviation List .....	36	
<b>PRECAUTION</b> .....	37	
<b>PRECAUTIONS</b> .....	37	
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER" .....	37	
Precautions for Trouble Diagnosis .....	37	
Precautions for Harness Repair .....	37	
<b>BASIC INSPECTION</b> .....	39	
<b>DIAGNOSIS AND REPAIR WORKFLOW</b> .....	39	
Interview Sheet .....	39	
Diagnosis Sheet (CAN Type 1) .....	40	
Diagnosis Sheet (CAN Type 2) .....	41	
Diagnosis Sheet (CAN Type 3) .....	42	
Diagnosis Sheet (CAN Type 4) .....	43	
<b>FUNCTION DIAGNOSIS</b> .....	44	
<b>CAN COMMUNICATION SYSTEM</b> .....	44	
CAN System Specification Chart .....	44	
CAN Communication Signal Chart .....	44	
<b>TROUBLE DIAGNOSIS</b> .....	47	
CAN Diagnostic Support Monitor .....	47	
DTC Index .....	51	
<b>COMPONENT DIAGNOSIS</b> .....	52	
<b>CAN COMMUNICATION SYSTEM</b> .....	52	
Component Parts Location .....	52	
Wiring Diagram - CAN SYSTEM - .....	53	
<b>MALFUNCTION AREA CHART</b> .....	60	
Main Line .....	60	
Branch Line .....	60	
Short Circuit .....	60	
<b>MAIN LINE BETWEEN TCM AND ADP CIR- CUIT</b> .....	61	
Diagnosis Procedure .....	61	

F  
G  
H  
I  
J  
K  
L  
LAN

N  
O  
P

<b>MAIN LINE BETWEEN TCM AND LASER CIRCUIT</b> .....	<b>63</b>	<b>LASER BRANCH LINE CIRCUIT</b> .....	<b>74</b>
Diagnosis Procedure .....	63	Diagnosis Procedure .....	74
<b>MAIN LINE BETWEEN LASER AND ICC CIRCUIT</b> .....	<b>64</b>	<b>ICC BRANCH LINE CIRCUIT</b> .....	<b>75</b>
Diagnosis Procedure .....	64	Diagnosis Procedure .....	75
<b>MAIN LINE BETWEEN ICC AND ADP CIRCUIT</b> .....	<b>65</b>	<b>ADP BRANCH LINE CIRCUIT</b> .....	<b>76</b>
Diagnosis Procedure .....	65	Diagnosis Procedure .....	76
<b>MAIN LINE BETWEEN ADP AND AV CIRCUIT</b> .....	<b>66</b>	<b>AV BRANCH LINE CIRCUIT</b> .....	<b>77</b>
Diagnosis Procedure .....	66	Diagnosis Procedure .....	77
<b>MAIN LINE BETWEEN AV AND DLC CIRCUIT</b> .....	<b>67</b>	<b>BCM BRANCH LINE CIRCUIT</b> .....	<b>78</b>
Diagnosis Procedure .....	67	Diagnosis Procedure .....	78
<b>MAIN LINE BETWEEN DLC AND M&amp;A CIRCUIT</b> .....	<b>68</b>	<b>DLC BRANCH LINE CIRCUIT</b> .....	<b>79</b>
Diagnosis Procedure .....	68	Diagnosis Procedure .....	79
<b>MAIN LINE BETWEEN M&amp;A AND ABS CIRCUIT</b> .....	<b>69</b>	<b>HVAC BRANCH LINE CIRCUIT</b> .....	<b>80</b>
Diagnosis Procedure .....	69	Diagnosis Procedure .....	80
<b>MAIN LINE BETWEEN M&amp;A AND 4WD CIRCUIT</b> .....	<b>70</b>	<b>I-KEY BRANCH LINE CIRCUIT</b> .....	<b>81</b>
Diagnosis Procedure .....	70	Diagnosis Procedure .....	81
<b>MAIN LINE BETWEEN 4WD AND ABS CIRCUIT</b> .....	<b>71</b>	<b>M&amp;A BRANCH LINE CIRCUIT</b> .....	<b>82</b>
Diagnosis Procedure .....	71	Diagnosis Procedure .....	82
<b>ECM BRANCH LINE CIRCUIT</b> .....	<b>72</b>	<b>STRG BRANCH LINE CIRCUIT</b> .....	<b>83</b>
Diagnosis Procedure .....	72	Diagnosis Procedure .....	83
<b>TCM BRANCH LINE CIRCUIT</b> .....	<b>73</b>	<b>4WD BRANCH LINE CIRCUIT</b> .....	<b>84</b>
Diagnosis Procedure .....	73	Diagnosis Procedure .....	84
		<b>ABS BRANCH LINE CIRCUIT</b> .....	<b>85</b>
		Diagnosis Procedure .....	85
		<b>IPDM-E BRANCH LINE CIRCUIT</b> .....	<b>86</b>
		Diagnosis Procedure .....	86
		<b>CAN COMMUNICATION CIRCUIT</b> .....	<b>87</b>
		Diagnosis Procedure .....	87

PRECAUTION

PRECAUTIONS

Precaution for Trouble Diagnosis

INFOID:000000005146437

**CAUTION:**

- Never apply 7.0 V or more to the measurement terminal.
- Use a tester with open terminal voltage of 7.0 V or less.
- Turn the ignition switch OFF and disconnect the battery cable from the negative terminal when checking the harness.


Precaution for Harness Repair

INFOID:000000005146438

- Solder the repaired area and wrap tape around the soldered area.

**NOTE:**


A fray of twisted lines must be within 110 mm (4.33 in).

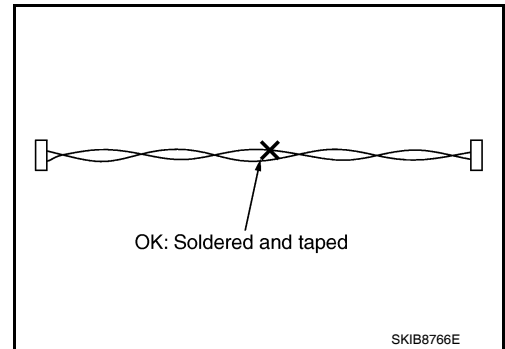

- Bypass connection is never allowed at the repaired area.

**NOTE:**

Bypass connection may cause CAN communication error. The spliced wire becomes separated and the characteristics of twisted line are lost.

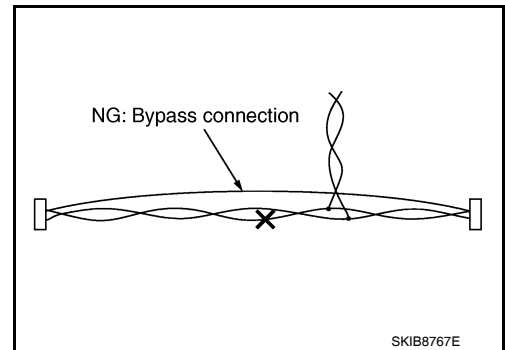

- Replace the applicable harness as an assembly if error is detected on the shield lines of CAN communication line.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

LAN

## FUNCTION DIAGNOSIS

### CAN COMMUNICATION SYSTEM


#### System Description

INFOID:000000005146439

- CAN communication is a multiplex communication system. This enables the system to transmit and receive large quantities of data at high speed by connecting control units with two communication lines (CAN-H and CAN-L).
- Control units on the CAN network transmit signals using the CAN communication control circuit. They receive only necessary signals from other control units to operate various functions.
- CAN communication lines adopt twisted-pair line style (two lines twisted) for noise immunity.

#### System Diagram

INFOID:000000005146440

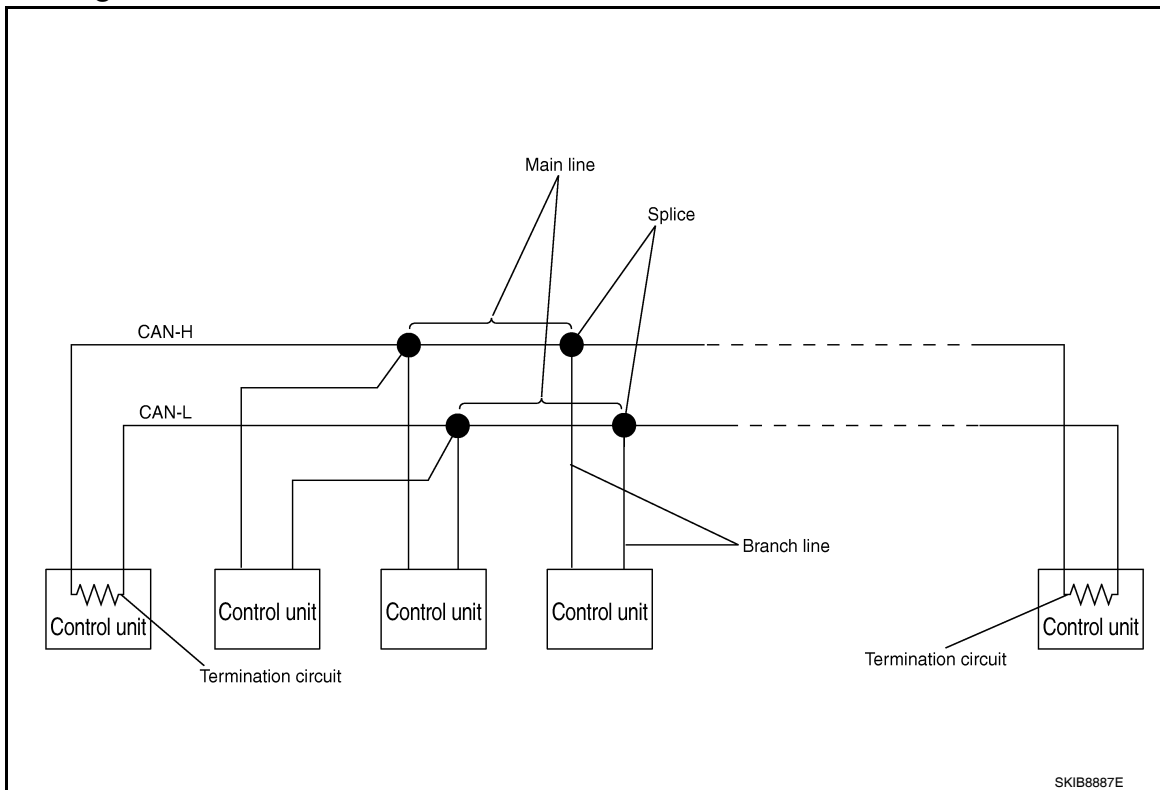

Each control unit passes an electric current to the termination circuits when transmitting CAN communication signal. The termination circuits produce an electrical potential difference between CAN-H and CAN-L. CAN communication system transmits and receives CAN communication signals by the potential difference.

Component	Description
Main line	CAN communication line between splices
Branch line	CAN communication line between splice and a control unit
Splice	A point connecting a branch line with a main line
Termination circuit	Refer to <a href="#">LAN-5, "CAN Communication Control Circuit"</a> .


# CAN COMMUNICATION SYSTEM

< FUNCTION DIAGNOSIS >

[CAN FUNDAMENTAL]

## CAN Communication Control Circuit

INFOID:000000005146441

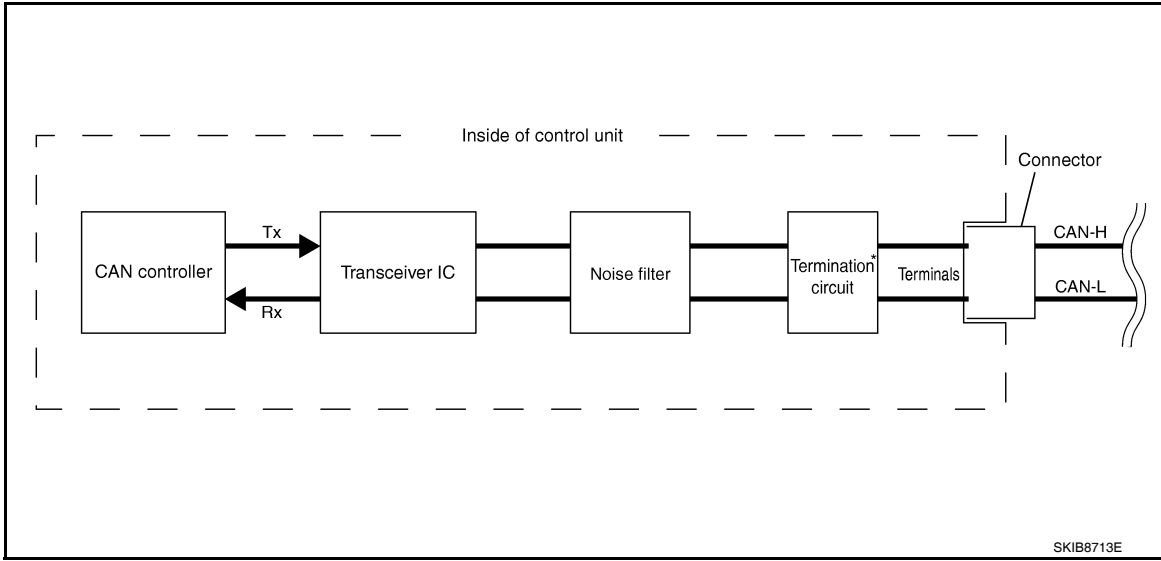

Component	System description
CAN controller	It controls CAN communication signal transmission and reception, error detection, etc.
Transceiver IC	It converts digital signal into CAN communication signal, and CAN communication signal into digital signal.
Noise filter	It eliminates noise of CAN communication signal.
Termination circuit* (Resistance of approx. 120 Ω)	It produces potential difference.

\*: These are the only control units wired with both ends of CAN communication system.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

LAN

N  
O  
P

## DIAG ON CAN


### Description

INFOID:000000005146442

“Diag on CAN” is a diagnosis using CAN communication instead of previous DDL1 and DDL2 communication lines, between control units and diagnosis unit.

### System Diagram

INFOID:000000005146443

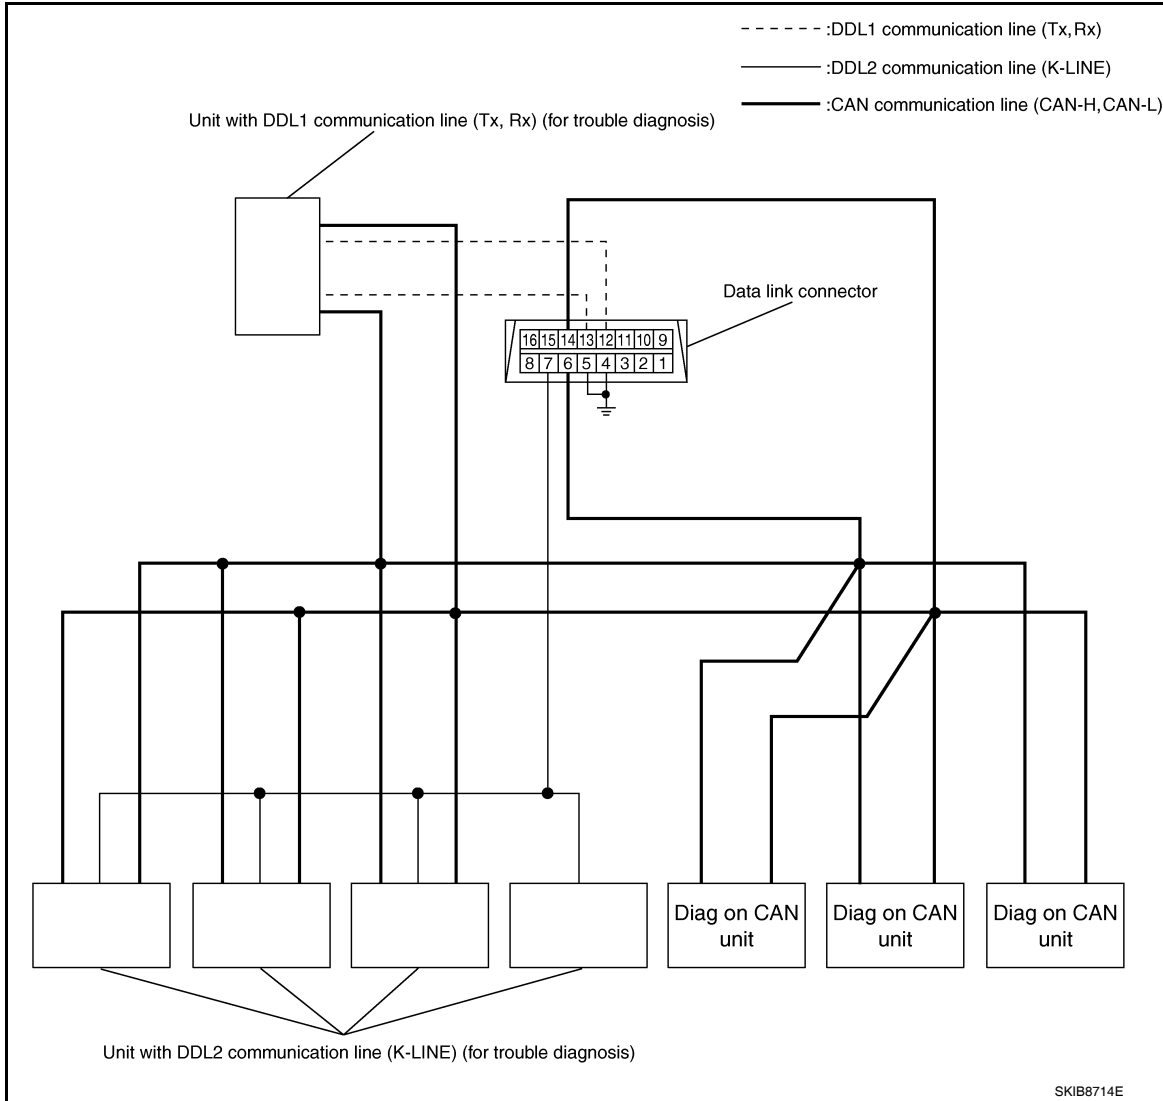

Name	Harness	Description
DDL1	Tx Rx	It is used for trouble diagnosis. (CAN-H and CAN-L are used for controlling)
DDL2	K-LINE	It is used for trouble diagnosis. (CAN-H and CAN-L are used for controlling)
Diag on CAN	CAN-H CAN-L	It is used for trouble diagnosis and control.

## TROUBLE DIAGNOSIS

## Condition of Error Detection

INFOID:000000005152906

DTC of CAN communication is indicated on SELF-DIAG RESULTS on CONSULT-III if a CAN communication signal is not transmitted or received between units for 2 seconds or more.

**NOTE:**

DTCs of CAN communication are follows:

- U0101
- U0140
- U0164
- U1000
- U1001

## CAN COMMUNICATION SYSTEM ERROR

- CAN communication line open (CAN-H, CAN-L, or both)
- CAN communication line short (ground, between CAN communication lines, other harnesses)
- Error of CAN communication control circuit of the unit connected to CAN communication line

## WHEN DTC OF CAN COMMUNICATION IS INDICATED EVEN THOUGH CAN COMMUNICATION SYSTEM IS NORMAL

- Removal/installation of parts: Error may be detected when removing and installing CAN communication unit and related parts while turning the ignition switch ON. (A DTC except for CAN communication may be detected.)
- Fuse blown out (removed): CAN communication of the unit may cease.
- Voltage drop: Error may be detected if voltage drops due to discharged battery when turning the ignition switch ON (Depending on the control unit which carries out CAN communication).
- Error may be detected if the power supply circuit of the control unit, which carries out CAN communication, malfunctions (Depending on the control unit which carries out CAN communication).
- Error may be detected if reprogramming is not completed normally.

**CAUTION:**

**CAN communication system is normal if DTC of CAN communication is indicated on SELF-DIAG RESULTS of CONSULT-III under the above conditions. Erase the memory of the self-diagnosis of each unit.**

## Symptom When Error Occurs in CAN Communication System

INFOID:000000005146445

In CAN communication system, multiple units mutually transmit and receive signals. Each unit cannot transmit and receive signals if any error occurs on CAN communication line. Under this condition, multiple control units related to the root cause malfunction or go into fail-safe mode.

## ERROR EXAMPLE

**NOTE:**

- Each vehicle differs in symptom of each unit under fail-safe mode and CAN communication line wiring.
- Refer to [LAN-36, "Abbreviation List"](#) for the unit abbreviation.

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O


P

# TROUBLE DIAGNOSIS

< FUNCTION DIAGNOSIS >


[CAN FUNDAMENTAL]

Example: TCM branch line open circuit

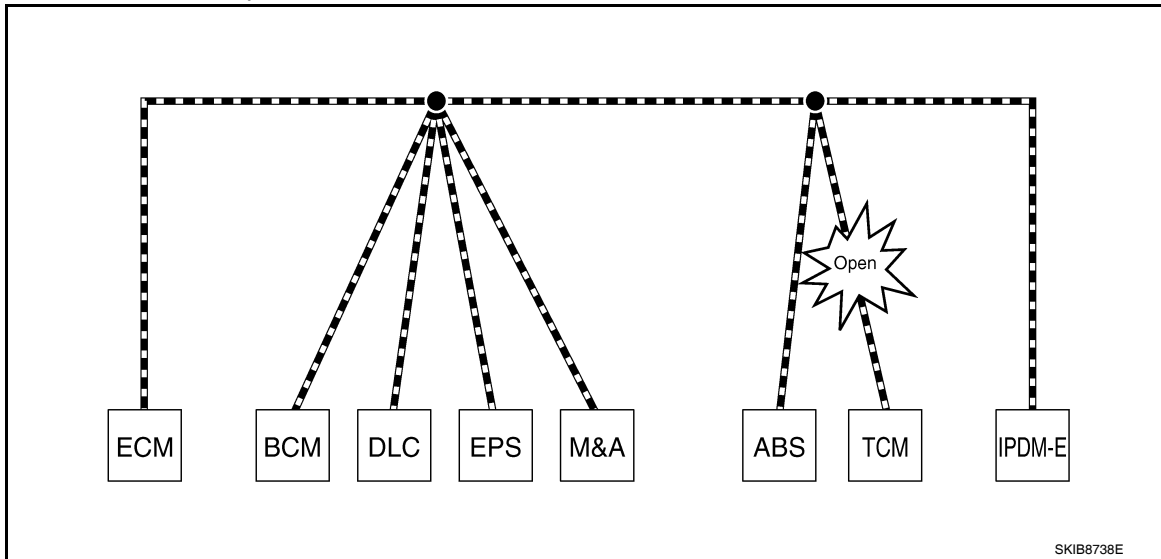

Unit name	Symptom
ECM	Engine torque limiting is affected, and shift harshness increases.
BCM	Reverse warning chime does not sound.
EPS control unit	Normal operation.
Combination meter	<ul style="list-style-type: none"> <li>Shift position indicator and OD OFF indicator turn OFF.</li> <li>Warning lamps turn ON.</li> </ul>
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	Normal operation.

Example: Data link connector branch line open circuit

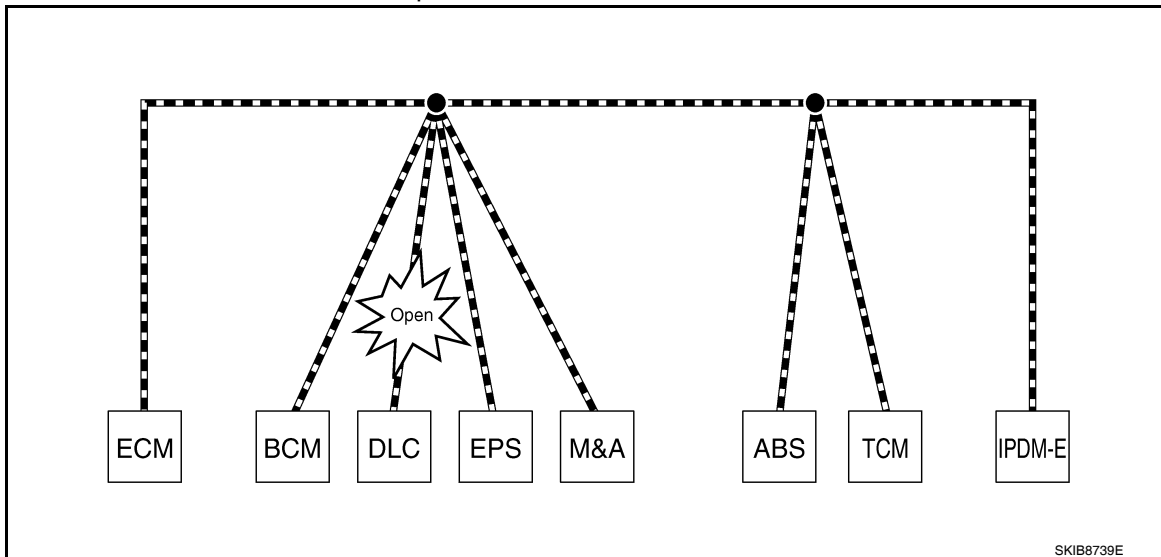



# TROUBLE DIAGNOSIS

< FUNCTION DIAGNOSIS >

[CAN FUNDAMENTAL]


Unit name	Symptom
ECM	Normal operation.
BCM	
EPS control unit	
Combination meter	
ABS actuator and electric unit (control unit)	
TCM	
IPDM E/R	

**NOTE:**

- When data link connector branch line is open, transmission and reception of CAN communication signals are not affected. Therefore, no symptoms occur. However, be sure to repair malfunctioning circuit.
- When data link connector branch line is open, "ECU list" displayed on the CONSULT-III "CAN DIAG SUPPORT MNTR" may be the same as when the CAN communication line has short-circuit. However, symptoms differ depending on the case. See below chart for the differences.

	"ECU list" on the "CAN DIAG SUPPORT MNTR" (CONSULT-III)	Difference of symptom
Data link connector branch line open circuit	All Diag on CAN units are not indicated.	Normal operation.
CAN-H, CAN-L harness short-circuit		Most of the units which are connected to the CAN communication system enter fail-safe mode or are deactivated.

Example: Main Line Between Data Link Connector and ABS Actuator and Electric Unit (Control Unit) Open Circuit

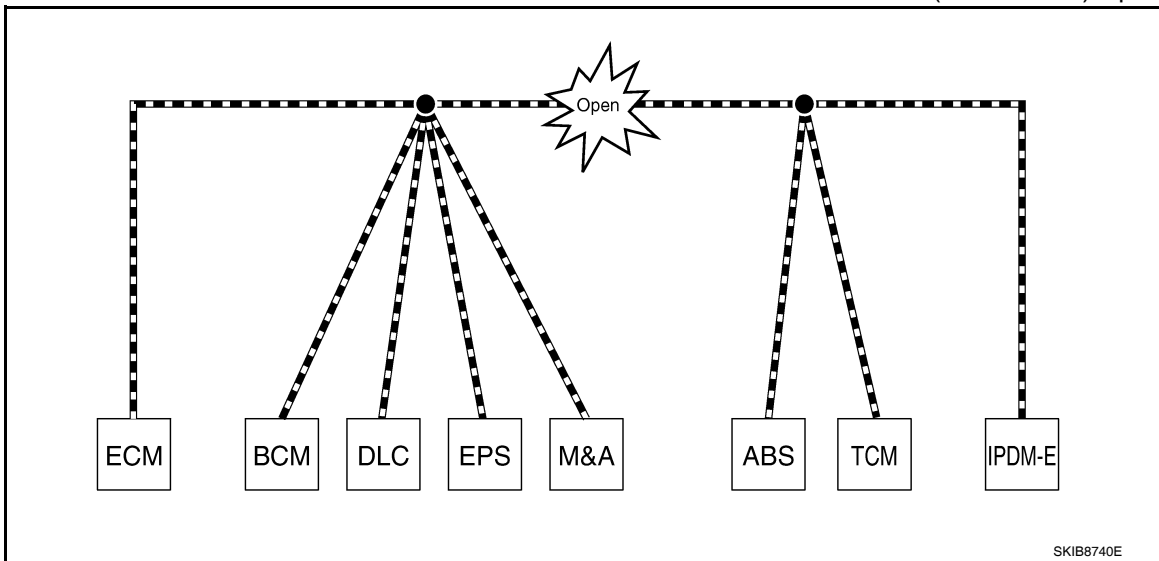

Unit name	Symptom
ECM	Engine torque limiting is affected, and shift harshness increases.
BCM	<ul style="list-style-type: none"> <li>• Reverse warning chime does not sound.</li> <li>• The front wiper moves under continuous operation mode even though the front wiper switch being in the intermittent position.</li> </ul>
EPS control unit	The steering effort increases.
Combination meter	<ul style="list-style-type: none"> <li>• The shift position indicator and OD OFF indicator turn OFF.</li> <li>• The speedometer is inoperative.</li> <li>• The odo/trip meter stops.</li> </ul>
ABS actuator and electric unit (control unit)	Normal operation.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

LAN


# TROUBLE DIAGNOSIS

< FUNCTION DIAGNOSIS >

[CAN FUNDAMENTAL]

Unit name	Symptom
TCM	No impact on operation.
IPDM E/R	When the ignition switch is ON, <ul style="list-style-type: none"> <li>• The headlamps (Lo) turn ON.</li> <li>• The cooling fan continues to rotate.</li> </ul>

Example: CAN-H, CAN-L Harness Short Circuit

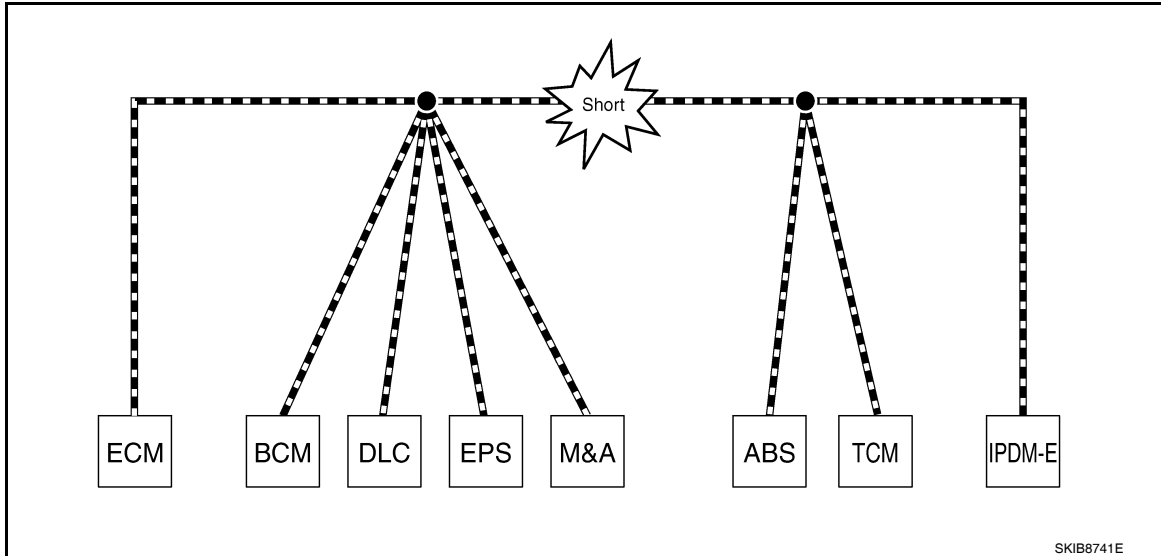

Unit name	Symptom
ECM	<ul style="list-style-type: none"> <li>• Engine torque limiting is affected, and shift harshness increases.</li> <li>• Engine speed drops.</li> </ul>
BCM	<ul style="list-style-type: none"> <li>• Reverse warning chime does not sound.</li> <li>• The front wiper moves under continuous operation mode even though the front wiper switch being in the intermittent position.</li> <li>• The room lamp does not turn ON.</li> <li>• The engine does not start (if an error or malfunction occurs while turning the ignition switch OFF.)</li> <li>• The steering lock does not release (if an error or malfunction occurs while turning the ignition switch OFF.)</li> </ul>
EPS control unit	The steering effort increases.
Combination meter	<ul style="list-style-type: none"> <li>• The tachometer and the speedometer do not move.</li> <li>• Warning lamps turn ON.</li> <li>• Indicator lamps do not turn ON.</li> </ul>
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	When the ignition switch is ON, <ul style="list-style-type: none"> <li>• The headlamps (Lo) turn ON.</li> <li>• The cooling fan continues to rotate.</li> </ul>

# TROUBLE DIAGNOSIS

< FUNCTION DIAGNOSIS >

[CAN FUNDAMENTAL]

## Self-Diagnosis

INFOID:000000005152908

DTC	Self-diagnosis item (CONSULT-III indication)	DTC detection condition	Inspection/Action	
U0101	LOST COMM (TCM)	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) from TCM for 2 seconds or more.	Start the inspection. Refer to the applicable section of the indicated control unit.	
U0140	LOST COMM (BCM)	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) from BCM for 2 seconds or more.		
U0164	LOST COMM (HVAC)	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) from A/C auto amp. or unified meter and A/C amp. for 2 seconds or more.		
U1000	CAN COMM CIRCUIT	ECM		When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) for 2 seconds or more.
		Except for ECM		When a control unit (except for ECM) is not transmitting or receiving CAN communication signal for 2 seconds or more.
U1001	CAN COMM CIRCUIT	When ECM is not transmitting or receiving CAN communication signal other than OBD (emission-related diagnosis) for 2 seconds or more.		
U1002	SYSTEM COMM	When a control unit is not transmitting or receiving CAN communication signal for 2 seconds or less.		
U1010	CONTROL UNIT(CAN)	When an error is detected during the initial diagnosis for CAN controller of each control unit.	Replace the control unit indicating "U1010" or "P0607".	
P0607	ECM			

## CAN Diagnostic Support Monitor

INFOID:000000005146447

CONSULT-III and CAN diagnostic support monitor (on-board diagnosis function) are used for detecting root cause.

### MONITOR ITEM (CONSULT-III)

Example: CAN DIAG SUPPORT MNTR indication

Without PAST			With PAST		
ECM			ECM		
	PRSENT	PAST		PRSENT	PAST
INITIAL DIAG	OK		TRANSMIT DIAG	OK	OK
TRANSMIT DIAG	OK		VDC/TCS/ABS	-	-
TCM	OK		METER/M&A	OK	OK
VDC/TCS/ABS	UNKWN		BCM/SEC	OK	OK
METER/M&A	OK		ICC	-	-
ICC	UNKWN		HVAC	-	-
BCM/SEC	OK		TCM	OK	OK
IPDM E/R	OK		EPS	-	-
			IPDM E/R	OK	OK
			e4WD	-	-
			AWD/4WD	OK	OK

PKID1075E

Without PAST

# TROUBLE DIAGNOSIS

< FUNCTION DIAGNOSIS >

[CAN FUNDAMENTAL]

Item	PRSNT	Description
Initial diagnosis	OK	Normal at present
	NG	Control unit error (Except for some control units)
Transmission diagnosis	OK	Normal at present
	UNKWN	Unable to transmit signals for 2 seconds or more. Diagnosis not performed
Control unit name (Reception diagnosis)	OK	Normal at present
	UNKWN	Unable to receive signals for 2 seconds or more. Diagnosis not performed
		No control unit for receiving signals. (No applicable optional parts)

With PAST

Item	PRSNT	PAST	Description
Transmission diagnosis	OK	OK	Normal at present and in the past
		1 – 39	Normal at present, but unable to transmit signals for 2 seconds or more in the past. (The number indicates the number of ignition switch cycles from OFF to ON.)
	UNKWN	0	Unable to transmit signals for 2 seconds or more at present.
Control unit name (Reception diagnosis)	OK	OK	Normal at present and in the past
		1 – 39	Normal at present, but unable to receive signals for 2 seconds or more in the past. (The number indicates the number of ignition switch cycles from OFF to ON.)
	UNKWN	0	Unable to receive signals for 2 seconds or more at present.
	-	-	Diagnosis not performed.
			No control unit for receiving signals. (No applicable optional parts)

## MONITOR ITEM (ON-BOARD DIAGNOSIS)

**NOTE:**

For some models, CAN communication diagnosis result is received from the vehicle monitor. (CONSULT-III is not available.)

Example: Vehicle Display

Item	Result indicated	Error counter	Description
CAN_COMM (Initial diagnosis)	OK	0	Normal at present
	NG	1 – 50	Control unit error (The number indicates how many times diagnosis has been run.)
CAN_CIRC_1 (Transmission diagnosis)	OK	0	Normal at present
	UNKWN	1 – 50	Unable to transmit for 2 seconds or more at present. (The number indicates how many times diagnosis has been run.)
CAN_CIRC_2 – 9 (Reception diagnosis of each unit)	OK	0	Normal at present
	UNKWN	1 – 50	Unable to transmit for 2 seconds or more at present. (The number indicates how many times diagnosis has been run.)
			Diagnosis not performed. No control unit for receiving signals. (No applicable optional parts)

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Information Needed for Trouble Diagnosis

INFOID:000000005146448

CAN communication system performs trouble diagnosis with the following tools.

Tool	Usage
Interview sheet	For filling in vehicle information and interview with customer.
Data sheet	For copying on-board diagnosis data.
Diagnosis sheet	For detecting the root cause. (Diagnosis sheet includes system diagram for every CAN system type)
ECU list (On the "CAN DIAG SUPPORT MNTR")	For checking the condition of control units and the status of CAN communication.
SELF-DIAG RESULTS (CONSULT-III)	
CAN DIAG SUPPORT MNTR (CONSULT-III)	
CAN communication signal chart	For converting information received from a customer into CAN communication signal transmission and reception. This information can be used to judge whether a circuit between control units is normal or abnormal.
Abbreviation list	For checking abbreviations in CAN communication signal chart and diagnosis sheet.

How to Use CAN Communication Signal Chart

INFOID:000000005146449

The CAN communication signal chart lists the signals needed for trouble diagnosis. It is useful for detecting the root cause by finding a signal related to the symptom, and by checking transmission and reception unit.

Example: Tachometer does not move even though the engine rotates.

T: Transmit R: Receive

Signal name/Connecting unit	ECM	BCM	M&A	STRG	ABS	IPDM-E
A/C compressor feedback signal	T		R			
A/C compressor request signal	T					R
Accelerator pedal position signal	T				R	
Cooling fan motor operation signal	T					R
Engine coolant temperature signal	T		R			
Engine speed signal	T		R		R	
Fuel consumption monitor signal	T		R			
Malfunction indicator lamp signal	T		R			
A/C switch signal	R	T				
Ignition switch signal		T				R
Sleep/wake up signal		T	R			R

No communication between ECM and M&A.


It indicates that an error occurs between ECM and M&A (Shaded area).

CAN-H, CAN-L

SKIB8715E

## Trouble Diagnosis Flow Chart

INFOID:000000005146450

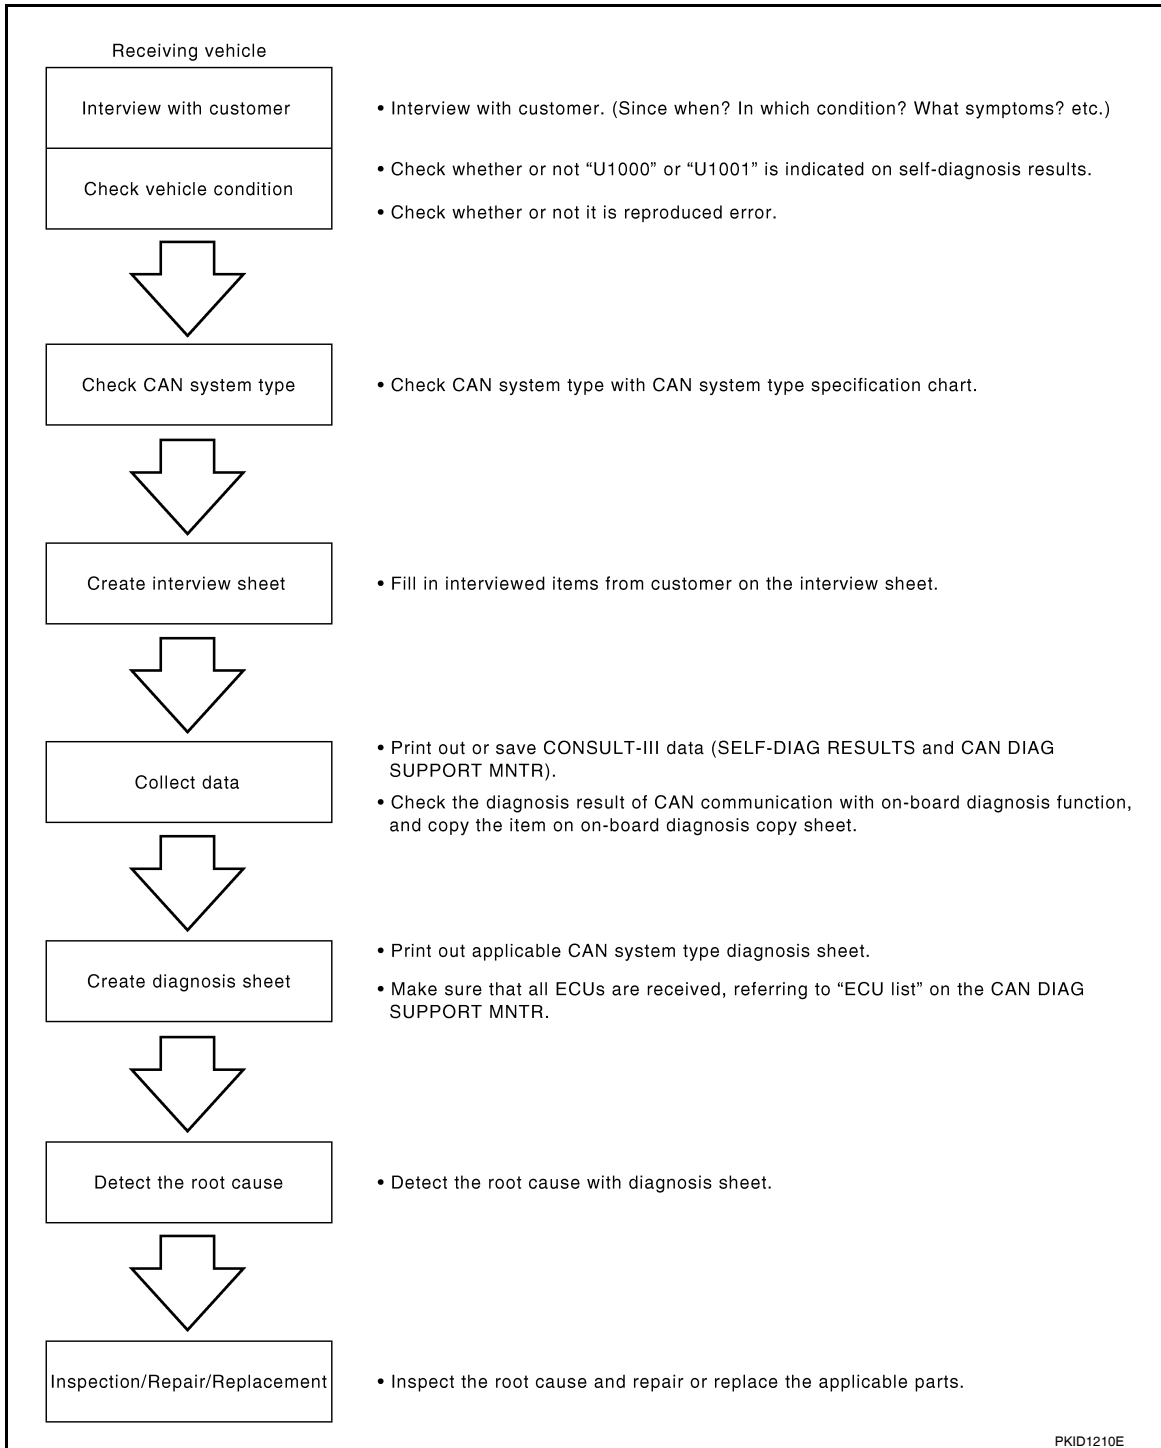

## Trouble Diagnosis Procedure

INFOID:000000005146451

### INTERVIEW WITH CUSTOMER

Interview with the customer is important to detect the root cause of CAN communication system errors and to understand vehicle condition and symptoms for proper trouble diagnosis.

#### Points in interview

- What: Parts name, system name
- When: Date, Frequency
- Where: Road condition, Place
- In what condition: Driving condition/environment

# DIAGNOSIS AND REPAIR WORKFLOW


< BASIC INSPECTION >

[CAN FUNDAMENTAL]

- Result: Symptom

**NOTE:**

- Check normal units as well as error symptoms.
- Example: Circuit between ECM and the combination meter is judged normal if the customer indicates tachometer functions normally.
- When a CAN communication system error is present, multiple control units may malfunction or go into fail-safe mode.
- Indication of the combination meter is important to detect the root cause because it is the most obvious to the customer, and it performs CAN communication with many units.

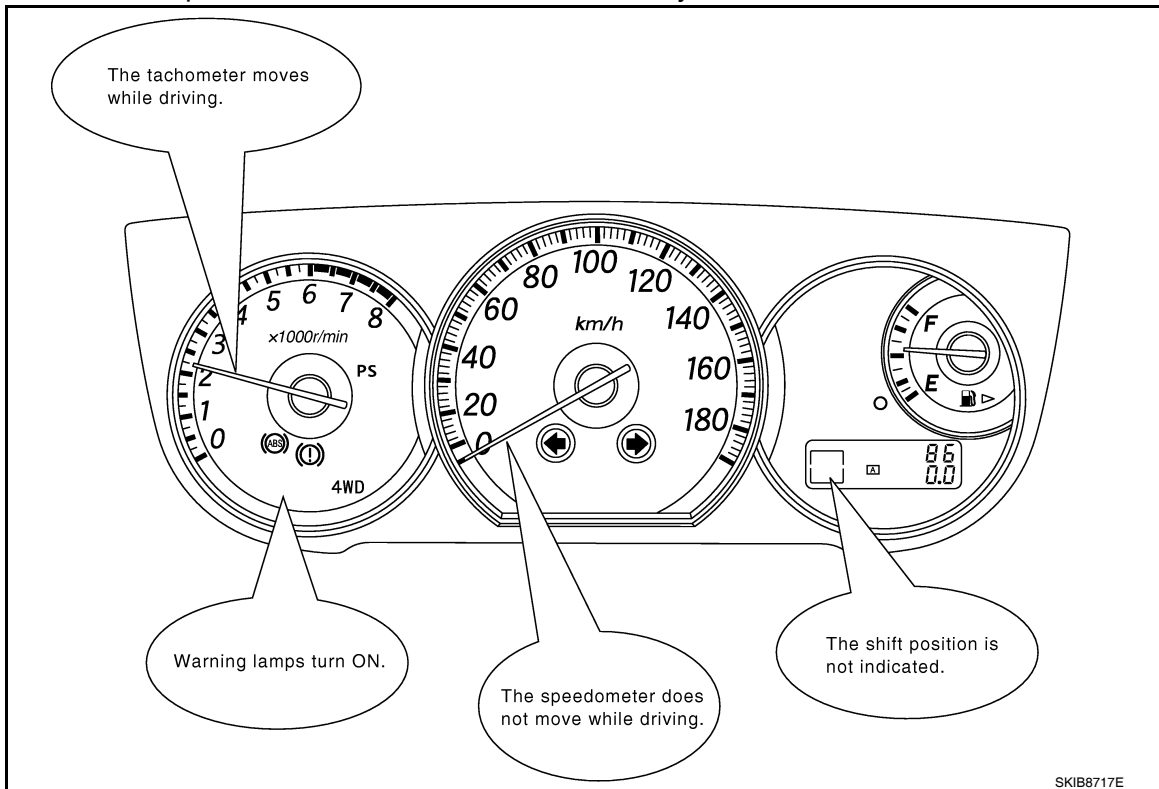

## INSPECTION OF VEHICLE CONDITION

- Check whether or not “U1000” or “U1001” is indicated on “SELF-DIAG RESULTS” by CONSULT-III.

**NOTE:**

Root cause cannot be detected using the procedure in this section if “U1000” or “U1001” is not indicated.

- Check whether the symptom is reproduced or not.

**NOTE:**

- Do not turn the ignition switch OFF or disconnect the battery cable while reproducing the error. The error may temporarily correct itself, making it difficult to determine the root cause.
- The procedures for present errors differ from the procedures for past errors. Refer to “DETECT THE ROOT CAUSE”.

## CHECK OF CAN SYSTEM TYPE (HOW TO USE CAN SYSTEM TYPE SPECIFICATION CHART)

Determine CAN system type based on vehicle equipment. Then choose the correct diagnosis sheet.

**NOTE:**

There are two styles for CAN system type specification charts. Depending on the number of available system types, either style A or style B may be used.

### CAN System Type Specification Chart (Style A)

**NOTE:**

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
LAN  
N  
O  
P

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

CAN system type is easily checked with the vehicle equipment identification information shown in the chart.

Example:  
Vehicle is equipped as follows: Wagon, AWD, VQ35DE, CVT, VDC, and Intelligent Key system. (○ shows an example of CAN system type.)


**CAN System Specification Chart**  
Determine CAN system type from the following specification chart. Then choose the correct diagnosis sheet.

Body type	Wagon					
Axle	2WD			AWD		
Engine	QR25DE		VQ35DE			
Transmission	A/T		CVT			
Brake control	ABS					VDC
Intelligent Key system		X		X		X
CAN system type	1	2	3	4	5	6
Diagnosis sheet	(XX-XX)	(XX-XX)	(XX-XX)	(XX-XX)	(XX-XX)	(XX-XX)
CAN communication signal chart	XX-XX. "TYPE 1/TYPE 2"		XX-XX. "TYPE 3/TYPE 4"		XX-XX. "TYPE 5/TYPE 6"	

X : Applicable


**VEHICLE EQUIPMENT IDENTIFICATION INFORMATION**  
**NOTE:**  
Check CAN system type from the vehicle shape and equipment.

With VDC

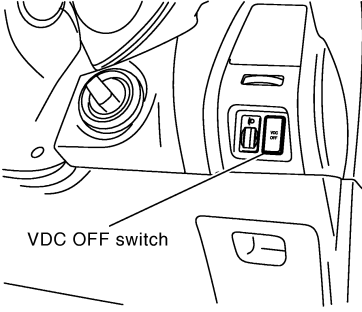

VDC OFF switch

With Intelligent Key system

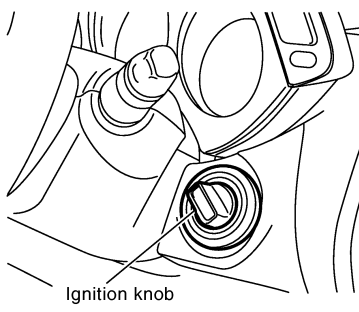

Ignition knob

[ For the above case, CAN system type is "6". ]

SKIB8888E

CAN System Type Specification Chart (Style B)

**NOTE:**



# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

CAN system type is easily checked with the vehicle equipment identification information shown in the chart.

Example:  
Vehicle is equipped as follows: Sedan, 2WD, MR20DE, CVT, ABS, Active AFS, Intelligent Key system, Navigation system and Automatic drive positioner. (○ shows an example of CAN system type.)

**CAN System Specification Chart**  
Refer to the specification as shown in the chart.

Body type	Sedan		
Axle	2WD		AWD
Engine	HR15DE	MR20DE	HR15DE
Transmission	A/T	CVT	A/T
Brake control		ABS	
Specification chart	XX.XX SPECIFICATION CHART A	YY.YY SPECIFICATION CHART B	ZZ.ZZ SPECIFICATION CHART C

x: Applicable

Check the vehicle equipment with the vehicle identification number plate.  
Check the vehicle equipment.  
Select the applicable vehicle equipment. Refer to the specification chart.

**SPECIFICATION CHART B**  
Determine CAN system type from the following specification chart. Then choose the correct diagnosis sheet.

Body type	Sedan											
Axle	2WD											
Engine	MR20DE											
Transmission	CVT											
Brake control	ABS											
Active AFS		x			x		x	x			x	x
Intelligent Key system			x		x		x	x	x	x	x	x
Navigation system				x		x	x		x		x	x
Automatic drive positioner								x		x	x	x
CAN system type	9	10	11	12	13	14	15	16	17	18	19	20
Diagnosis sheet	AA: XX	AA: XX	AA: XX	AA: XX	AA: XX	AA: XX	AA: XX	AA: XX	AA: XX	AA: XX	AA: XX	AA: XX
CAN communication signal chart	XX.XX TYPE 8TYPE 10TYPE 12TYPE 14TYPE 16TYPE 18TYPE 20TYPE 22TYPE 24TYPE 26TYPE 28TYPE 30TYPE 32TYPE 34TYPE 36TYPE 38TYPE 40TYPE 42TYPE 44TYPE 46TYPE 48TYPE 50TYPE 52TYPE 54TYPE 56TYPE 58TYPE 60TYPE 62TYPE 64TYPE 66TYPE 68TYPE 70TYPE 72TYPE 74TYPE 76TYPE 78TYPE 80TYPE 82TYPE 84TYPE 86TYPE 88TYPE 90TYPE 92TYPE 94TYPE 96TYPE 98TYPE 100TYPE 102TYPE 104TYPE 106TYPE 108TYPE 110TYPE 112TYPE 114TYPE 116TYPE 118TYPE 120TYPE 122TYPE 124TYPE 126TYPE 128TYPE 130TYPE 132TYPE 134TYPE 136TYPE 138TYPE 140TYPE 142TYPE 144TYPE 146TYPE 148TYPE 150TYPE 152TYPE 154TYPE 156TYPE 158TYPE 160TYPE 162TYPE 164TYPE 166TYPE 168TYPE 170TYPE 172TYPE 174TYPE 176TYPE 178TYPE 180TYPE 182TYPE 184TYPE 186TYPE 188TYPE 190TYPE 192TYPE 194TYPE 196TYPE 198TYPE 200TYPE 202TYPE 204TYPE 206TYPE 208TYPE 210TYPE 212TYPE 214TYPE 216TYPE 218TYPE 220TYPE 222TYPE 224TYPE 226TYPE 228TYPE 230TYPE 232TYPE 234TYPE 236TYPE 238TYPE 240TYPE 242TYPE 244TYPE 246TYPE 248TYPE 250TYPE 252TYPE 254TYPE 256TYPE 258TYPE 260TYPE 262TYPE 264TYPE 266TYPE 268TYPE 270TYPE 272TYPE 274TYPE 276TYPE 278TYPE 280TYPE 282TYPE 284TYPE 286TYPE 288TYPE 290TYPE 292TYPE 294TYPE 296TYPE 298TYPE 300TYPE 302TYPE 304TYPE 306TYPE 308TYPE 310TYPE 312TYPE 314TYPE 316TYPE 318TYPE 320TYPE 322TYPE 324TYPE 326TYPE 328TYPE 330TYPE 332TYPE 334TYPE 336TYPE 338TYPE 340TYPE 342TYPE 344TYPE 346TYPE 348TYPE 350TYPE 352TYPE 354TYPE 356TYPE 358TYPE 360TYPE 362TYPE 364TYPE 366TYPE 368TYPE 370TYPE 372TYPE 374TYPE 376TYPE 378TYPE 380TYPE 382TYPE 384TYPE 386TYPE 388TYPE 390TYPE 392TYPE 394TYPE 396TYPE 398TYPE 400TYPE 402TYPE 404TYPE 406TYPE 408TYPE 410TYPE 412TYPE 414TYPE 416TYPE 418TYPE 420TYPE 422TYPE 424TYPE 426TYPE 428TYPE 430TYPE 432TYPE 434TYPE 436TYPE 438TYPE 440TYPE 442TYPE 444TYPE 446TYPE 448TYPE 450TYPE 452TYPE 454TYPE 456TYPE 458TYPE 460TYPE 462TYPE 464TYPE 466TYPE 468TYPE 470TYPE 472TYPE 474TYPE 476TYPE 478TYPE 480TYPE 482TYPE 484TYPE 486TYPE 488TYPE 490TYPE 492TYPE 494TYPE 496TYPE 498TYPE 500TYPE 502TYPE 504TYPE 506TYPE 508TYPE 510TYPE 512TYPE 514TYPE 516TYPE 518TYPE 520TYPE 522TYPE 524TYPE 526TYPE 528TYPE 530TYPE 532TYPE 534TYPE 536TYPE 538TYPE 540TYPE 542TYPE 544TYPE 546TYPE 548TYPE 550TYPE 552TYPE 554TYPE 556TYPE 558TYPE 560TYPE 562TYPE 564TYPE 566TYPE 568TYPE 570TYPE 572TYPE 574TYPE 576TYPE 578TYPE 580TYPE 582TYPE 584TYPE 586TYPE 588TYPE 590TYPE 592TYPE 594TYPE 596TYPE 598TYPE 600TYPE 602TYPE 604TYPE 606TYPE 608TYPE 610TYPE 612TYPE 614TYPE 616TYPE 618TYPE 620TYPE 622TYPE 624TYPE 626TYPE 628TYPE 630TYPE 632TYPE 634TYPE 636TYPE 638TYPE 640TYPE 642TYPE 644TYPE 646TYPE 648TYPE 650TYPE 652TYPE 654TYPE 656TYPE 658TYPE 660TYPE 662TYPE 664TYPE 666TYPE 668TYPE 670TYPE 672TYPE 674TYPE 676TYPE 678TYPE 680TYPE 682TYPE 684TYPE 686TYPE 688TYPE 690TYPE 692TYPE 694TYPE 696TYPE 698TYPE 700TYPE 702TYPE 704TYPE 706TYPE 708TYPE 710TYPE 712TYPE 714TYPE 716TYPE 718TYPE 720TYPE 722TYPE 724TYPE 726TYPE 728TYPE 730TYPE 732TYPE 734TYPE 736TYPE 738TYPE 740TYPE 742TYPE 744TYPE 746TYPE 748TYPE 750TYPE 752TYPE 754TYPE 756TYPE 758TYPE 760TYPE 762TYPE 764TYPE 766TYPE 768TYPE 770TYPE 772TYPE 774TYPE 776TYPE 778TYPE 780TYPE 782TYPE 784TYPE 786TYPE 788TYPE 790TYPE 792TYPE 794TYPE 796TYPE 798TYPE 800TYPE 802TYPE 804TYPE 806TYPE 808TYPE 810TYPE 812TYPE 814TYPE 816TYPE 818TYPE 820TYPE 822TYPE 824TYPE 826TYPE 828TYPE 830TYPE 832TYPE 834TYPE 836TYPE 838TYPE 840TYPE 842TYPE 844TYPE 846TYPE 848TYPE 850TYPE 852TYPE 854TYPE 856TYPE 858TYPE 860TYPE 862TYPE 864TYPE 866TYPE 868TYPE 870TYPE 872TYPE 874TYPE 876TYPE 878TYPE 880TYPE 882TYPE 884TYPE 886TYPE 888TYPE 890TYPE 892TYPE 894TYPE 896TYPE 898TYPE 900TYPE 902TYPE 904TYPE 906TYPE 908TYPE 910TYPE 912TYPE 914TYPE 916TYPE 918TYPE 920TYPE 922TYPE 924TYPE 926TYPE 928TYPE 930TYPE 932TYPE 934TYPE 936TYPE 938TYPE 940TYPE 942TYPE 944TYPE 946TYPE 948TYPE 950TYPE 952TYPE 954TYPE 956TYPE 958TYPE 960TYPE 962TYPE 964TYPE 966TYPE 968TYPE 970TYPE 972TYPE 974TYPE 976TYPE 978TYPE 980TYPE 982TYPE 984TYPE 986TYPE 988TYPE 990TYPE 992TYPE 994TYPE 996TYPE 998TYPE 1000											

x: Applicable

Check the vehicle equipment.  
The number indicates the CAN system type of the vehicle.

**VEHICLE EQUIPMENT IDENTIFICATION INFORMATION**  
**NOTE:**  
Check CAN system type from the vehicle shape and equipment.

<p>With active AFS</p> <p>Bending lamp Xenon bulb</p>	<p>With Intelligent Key system</p> <p>Ignition knob</p>
<p>With navigation system</p> <p>Display Multifunction switch</p>	<p>With automatic drive positioner</p> <p>Seat memory switch</p>

In the above example,  
• Checking Xenon bulb and bending lamp lead to judge whether or not Active AFS is equipped.  
• Checking the ignition knob leads to judge whether or not Intelligent Key system is equipped.  
• Checking display and multifunction switch lead to judge whether or not Navigation system is equipped.  
• Checking seat memory switch leads to judge whether or not Automatic drive positioner is equipped.

For the above case, CAN system type is "20".

SKIB8889E

## CREATE INTERVIEW SHEET

Fill out the symptom described by the customer, vehicle condition, and CAN system type on the interview sheet.

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

Interview Sheet (Example)

CAN Communication System Diagnosis Interview Sheet	
Date received:	3, Feb. 2005
Type: DBA-KG11	VIN No.: KG11-005040
Model: BDRARGZ397EDA-E-J-	
First registration: 10, Jan. 2005	Mileage: 621
CAN system type: Type 19	
Symptom (Results from interview with customer)	
<ul style="list-style-type: none"><li>• Headlamps suddenly turn ON while driving the vehicle.</li><li>• The engine does not restart after stopping the vehicle and turning the ignition switch OFF.</li><li>• The cooling fan continues rotating while turning the ignition switch ON.</li></ul>	
Condition at inspection	
Error Symptom: Present / Past	
<p>The engine does not start. While turning the ignition switch ON,</p> <ul style="list-style-type: none"><li>• The headlamps (Lo) turn ON, and the cooling fan continues rotating.</li><li>• The interior lamp does not turn ON.</li></ul> <p>On CONSULT-III screen,</p> <ul style="list-style-type: none"><li>• IPDM E/R is not indicated on SELECT SYSTEM.</li><li>• ENGINE: U1001</li><li>• BCM, ADAPTIVE LIGHT: U1000</li></ul>	

PKID1211E

## COLLECT DATA

Collect CONSULT-III Data

Print out or save the following CONSULT-III data.

- SELF-DIAG RESULTS
- CAN DIAG SUPPORT MNTR ("ECU list" included)

**NOTE:**

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

Some items may not be needed depending on CAN system type of vehicle.

(Example)

**CAN DIAG SUPPORT MNTR**

ECU list

**SELF-DIAG RESULTS**

PKID1212E

Create On-board Diagnosis Copy Sheet

Display the trouble diagnosis result of CAN communication with the on-board diagnosis function on the vehicle monitor, etc. Copy them on the on-board diagnosis copy sheet.

**NOTE:**

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

LAN

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

For some models, CAN communication diagnosis result is received from the vehicle monitor. (CONSULT-III is not available.)

Example: Copy the diagnosis result of CAN communication from the vehicle monitor.

Vehicle monitor indication

CAN DIAG SUPPORT MONITOR			Delete
CAN_COMM	OK	0	
CAN_CIRC_1	OK	0	
CAN_CIRC_2	UNKWN	12	
CAN_CIRC_3	UNKWN	12	
CAN_CIRC_4	UNKWN	0	
CAN_CIRC_5	OK	0	
CAN_CIRC_6	UNKWN	0	
CAN_CIRC_7	OK	0	
CAN_CIRC_8	UNKWN	0	
CAN_CIRC_9	UNKWN	50	



Copy

Vehicle monitor (Display control unit) CAN DIAG SUPPORT MONITOR copy sheet

Indication item (Diagnosis item)	Vehicle monitor		Indication item (Diagnosis item)	Vehicle monitor	
	Result indicated	Error counter		Result indicated	Error counter
CAN_COMM (Initial diagnosis)	OK	0	CAN_CIRC_5 (Receive diagnosis of Unified meter and A/C amp.)	OK	0
CAN_CIRC_1 (Transmit diagnosis)	OK	0	CAN_CIRC_6	Not available	
CAN_CIRC_2 (Receive diagnosis of BCM)	UNKWN	12	CAN_CIRC_7 (Receive diagnosis of IPDM E/R)	OK	0
CAN_CIRC_3 (Receive diagnosis of ECM)	UNKWN	12	CAN_CIRC_8	Not available	
CAN_CIRC_4	Not available		CAN_CIRC_9	Not available	

Result indicated: Fill in the indication (OK, NG or UNKWN).  
Error counter: Fill in the indicated number.

SKIB8722E

## CREATE DIAGNOSIS SHEET

### NOTE:

Be sure to use the diagnosis sheet for the correct CAN system type.

Print Diagnosis Sheet

Print the diagnosis sheet for the applicable CAN system type.

Check Collected Data

Make sure that all ECUs are received, referring to "ECU list".

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

- For abbreviations, refer to [LAN-36, "Abbreviation List"](#).

Unit names are indicated by abbreviations.

CAN-H and CAN-L are described with one line.

Used for detecting root cause.

▲ indicates Diag on CAN unit.

▲ indicates Diag on CAN unit.

Fill out possible root cause and inspection result.

Make sure that all ECUs are received, referring to "ECU list".

< Checklist >

Item	Check box
1 ECM	<input type="checkbox"/>
2 AFS*	<input type="checkbox"/>
3 AV*	<input type="checkbox"/>
4 BCM*	<input type="checkbox"/>
5 EPS*	<input type="checkbox"/>
6 I-KEY*	<input type="checkbox"/>
7 M&A*	<input type="checkbox"/>
8 ADP*	<input type="checkbox"/>
9 ABS	<input type="checkbox"/>
10 TCM*	<input type="checkbox"/>
11 IPDM-E*	<input type="checkbox"/>

Possible root cause

Inspection result

CAN DIAG SUPPORT MNTR

CAN1	CAN2	IPDM-E		
CAN_H max=4.4V			PRSENT	PAST
CAN_H min=2.3V				
CAN_L max=3.1V		TRANSMIT DIAG	OK	OK
CAN_L min=1.0V		ECM	OK	OK
Battery(V)11.7V		BCM/SEC	OK	OK
CAN		AV		
ECU list		TRANSMIT DIAG	PRSENT	PAST
ABS, IPDM-E, AV, BCM, TCM, M&A, ECM, EPS, AFS, I-KEY, ADP		ECM	OK	OK
		METER/M&A	OK	OK
		BCM/SEC	-	-
		HVAC	-	-
		IPDM E/R	-	-
		TIRE-P	-	-
INITIAL DIAG		PRSENT	PAST	
TRANSMIT DIAG		OK		
ECM		OK		

PKID1213E

## DETECT THE ROOT CAUSE

Identify the root cause using the created diagnosis sheet.

Identifying the root cause

- Draw a line on the diagnosis sheet to indicate the possible cause. Narrow the search.

**NOTE:**

- Color-code when drawing lines.
- Do not draw a line onto a existing line.
- Drawing a line is not necessary if the circuit is shorted. Refer to "Present Error — Short Circuit —", "Past Error — Short Circuit —".

Refer to the following for details of the trouble diagnosis procedure.

- "Present Error — Open Circuit —"
- "Present Error — Short Circuit —"
- "Past Error — Open Circuit —"
- "Past Error — Short Circuit —"

**NOTE:**

When the root cause appears to be a branch line or short circuit, be sure to check the control unit as well as the communication line.

Present Error — Open Circuit —

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

LAN

N  
O  
P

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

Identify the error circuit using information from the “CAN DIAG SUPPORT MNTR” (“ECU list” included).

1. ECU list: Check the items indicated in “ECU list”. Draw a line on the diagnosis sheet to indicate the error circuit.


**NOTE:**

CAN communication line has no error if units other than Diag on CAN units are not indicated. An error may be on the power supply of the control unit, DDL1 line or DDL2 line.

- a. “TCM” which is Diag on CAN unit, is not indicated on “ECU list”. This indicates that DLC is not receiving a signal from TCM. Draw a line to indicate an error between DLC and TCM (line 1-a in the figure below).

**NOTE:**

- Diag on CAN units are not indicated on the “ECU list” when the CAN line between Diag on CAN unit and the data link connector is open.
- For a description of Diag on CAN, refer to [LAN-6, "Description"](#).

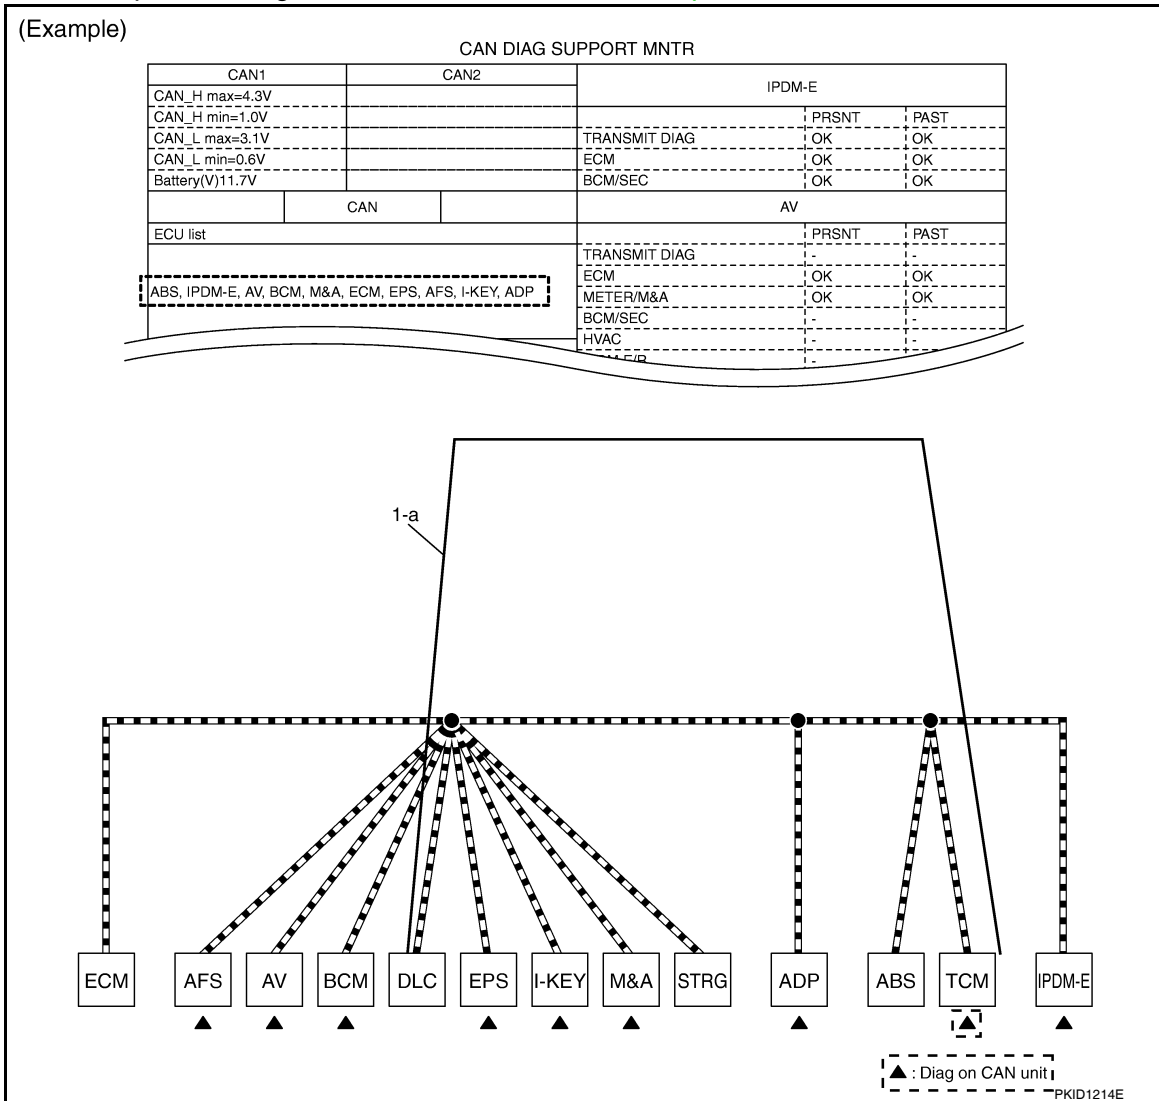

2. CAN DIAG SUPPORT MNTR: Check each item on “CAN DIAG SUPPORT MNTR”. Draw a line on the diagnosis sheet to indicate the error circuit.

- a. Reception item of “ECM”: On “TCM”, “UNKWN” is indicated. This means ECM cannot receive the signal from TCM. Draw a line to indicate an error between ECM and TCM (line 2-a in the figure below).

**NOTE:**

If “UNKWN” is indicated on “TRANSMIT DIAG”, then the control unit cannot transmit CAN communication signal to each unit. Draw a line between the control unit and the splice.


- b. Reception item of “AFS”: On “TCM”, “UNKWN” is indicated. This means AFS cannot receive the signal from TCM. Draw a line to indicate an error between AFS and TCM (line 2-b in the figure below).

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

- c. Reception item of "AV": "UNKWN" is not indicated. This indicates normal communication between AV and its receiving units. Do not draw any line.

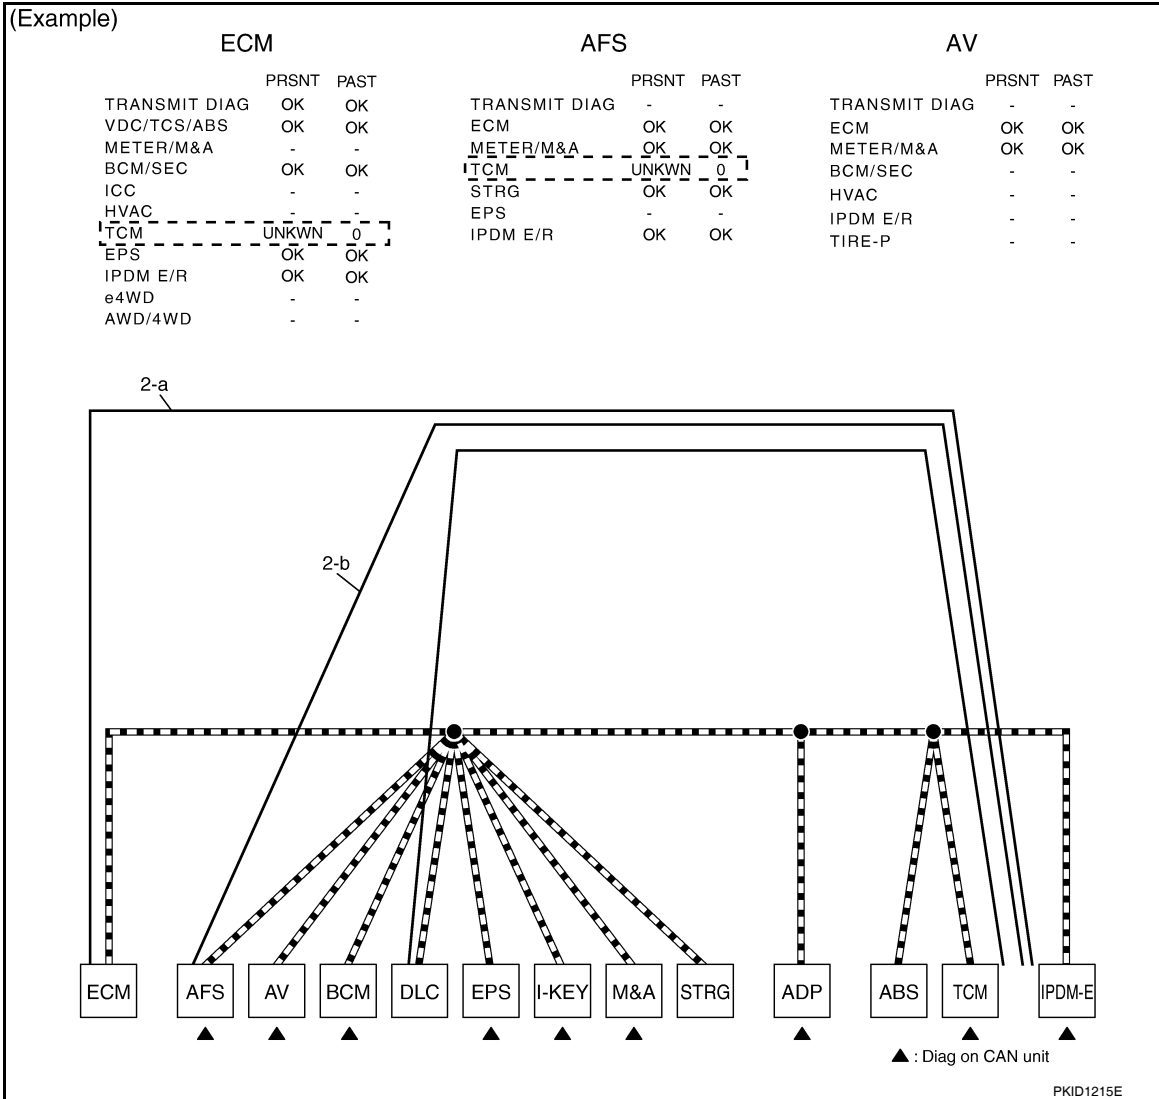

- d. Reception item of "BCM": On "TCM", "UNKWN" is indicated. This means BCM cannot receive the signal from TCM. Draw a line to indicate an error between BCM and TCM (line 2-d in the figure below).
- e. Reception item of "EPS" and "I-KEY": "UNKWN" is not indicated. This indicates normal communication between EPS and I-KEY and their receiving units. Do not draw any line.

**NOTE:**

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P


LAN

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

On CAN DIAG SUPPORT MNTR (without PAST), “UNKWN” is indicated even though the item is not used in the trouble diagnosis. For the details of each item on CAN diagnostic support monitor, refer to [LAN-47, "CAN Diagnostic Support Monitor"](#).

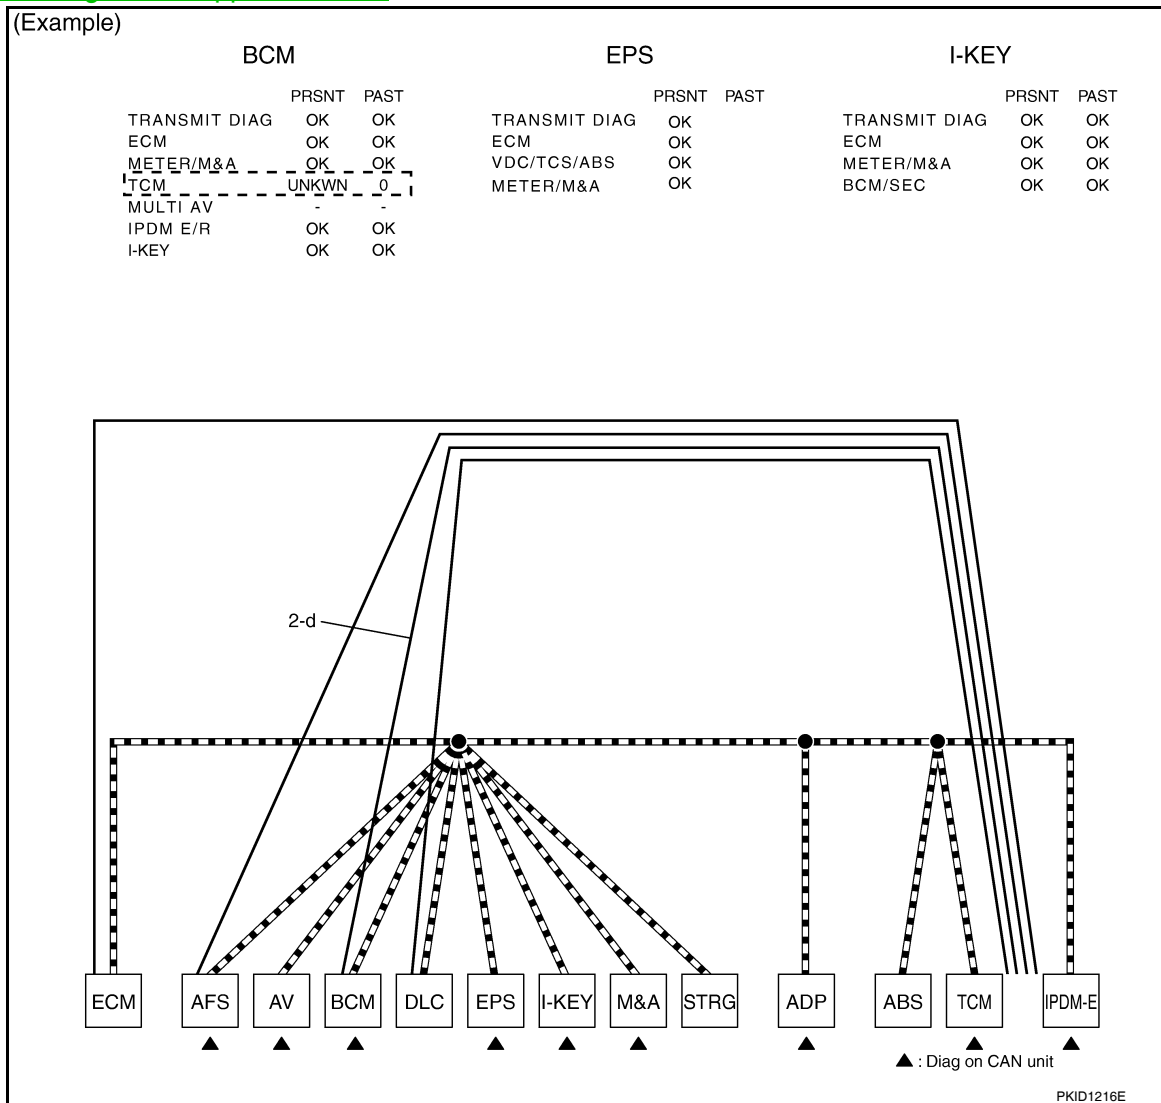

- f. Reception item of “M&A”: On “TCM”, “UNKWN” is indicated. This means M&A cannot receive the signal from TCM. Draw a line to indicate an error between M&A and TCM (line 2-f in the figure below).
- g. Reception item of “ADP”: On “TCM”, “UNKWN” is indicated. This means ADP cannot receive the signal from TCM. Draw a line to indicate an error between ADP and TCM (line 2-g in the figure below).




# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

- h. Reception item of "ABS": "UNKWN" is not indicated. This indicates normal communication between ABS and its receiving units. Do not draw any line.

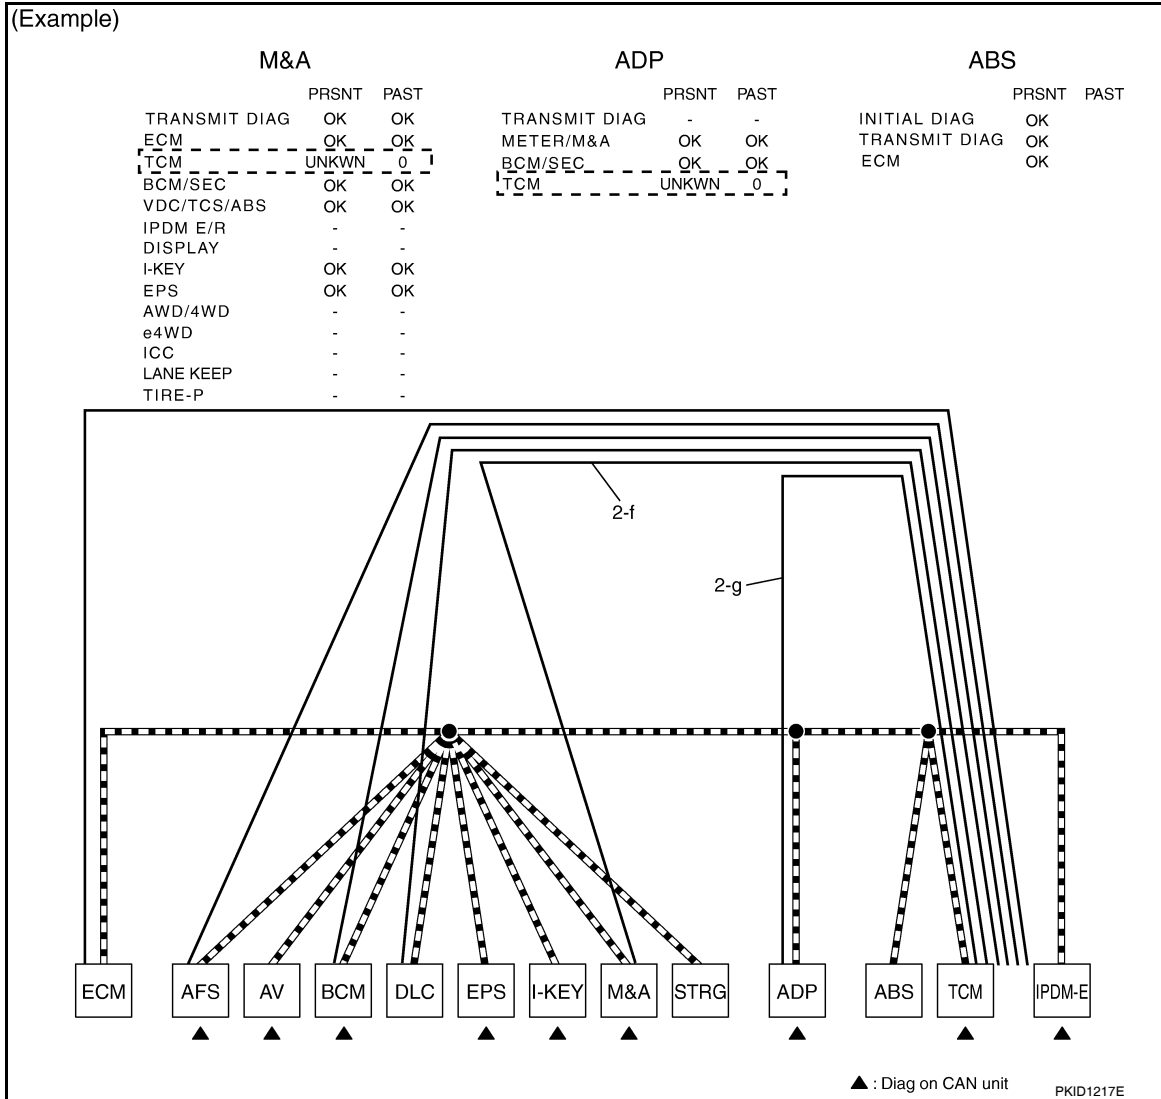


- i. Reception item of "IPDM-E": "UNKWN" is not indicated. This indicates normal communication between IPDM-E and its receiving units. Do not draw any line.
3. Based on information received from "CAN DIAG SUPPORT MNTR", place a check mark on the known good CAN communication line between ECM and IPDM-E.
- a. Through the previous procedure, the circuit between ADP splice and TCM has the most amount of lines (shade 3-a in the figure below).
- b. Place a check mark on the known good lines to establish the error circuit.

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

Reception item of "IPDM-E": On "ECM", "OK" is indicated. IPDM-E communicates normally with ECM. Put a check mark on the normal circuit between ECM and IPDM-E (check mark 3-b in the figure below).

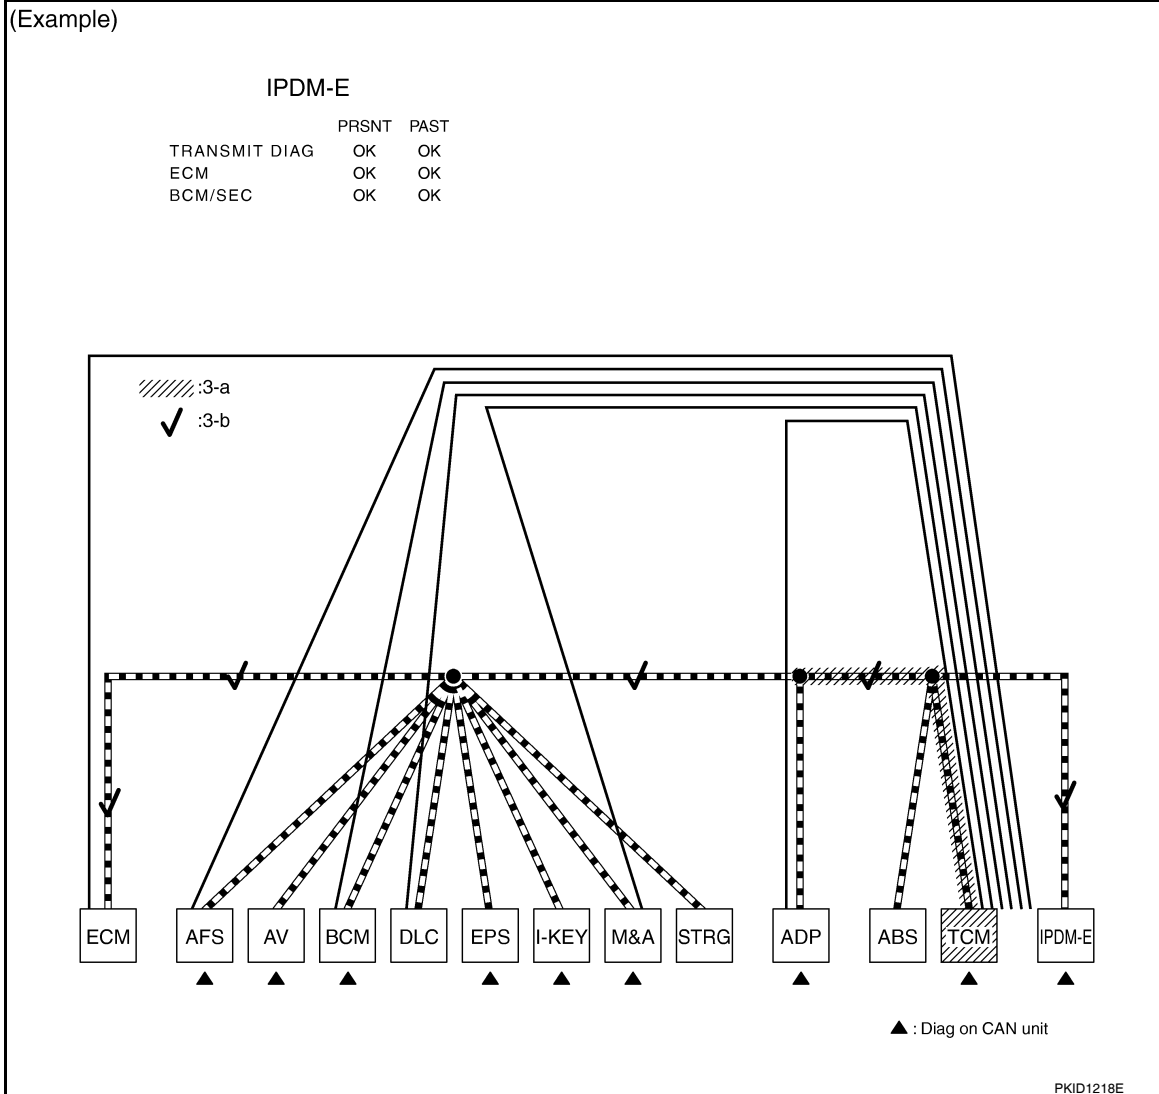

- Through the above procedure, the error is detected in the TCM branch line (shaded in the figure below).

**NOTE:**


For abbreviations, refer to [LAN-36. "Abbreviation List"](#).

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

- Perform the inspection for the detected error circuit. For the inspection procedure, refer to "MALFUNCTION AREA CHART".

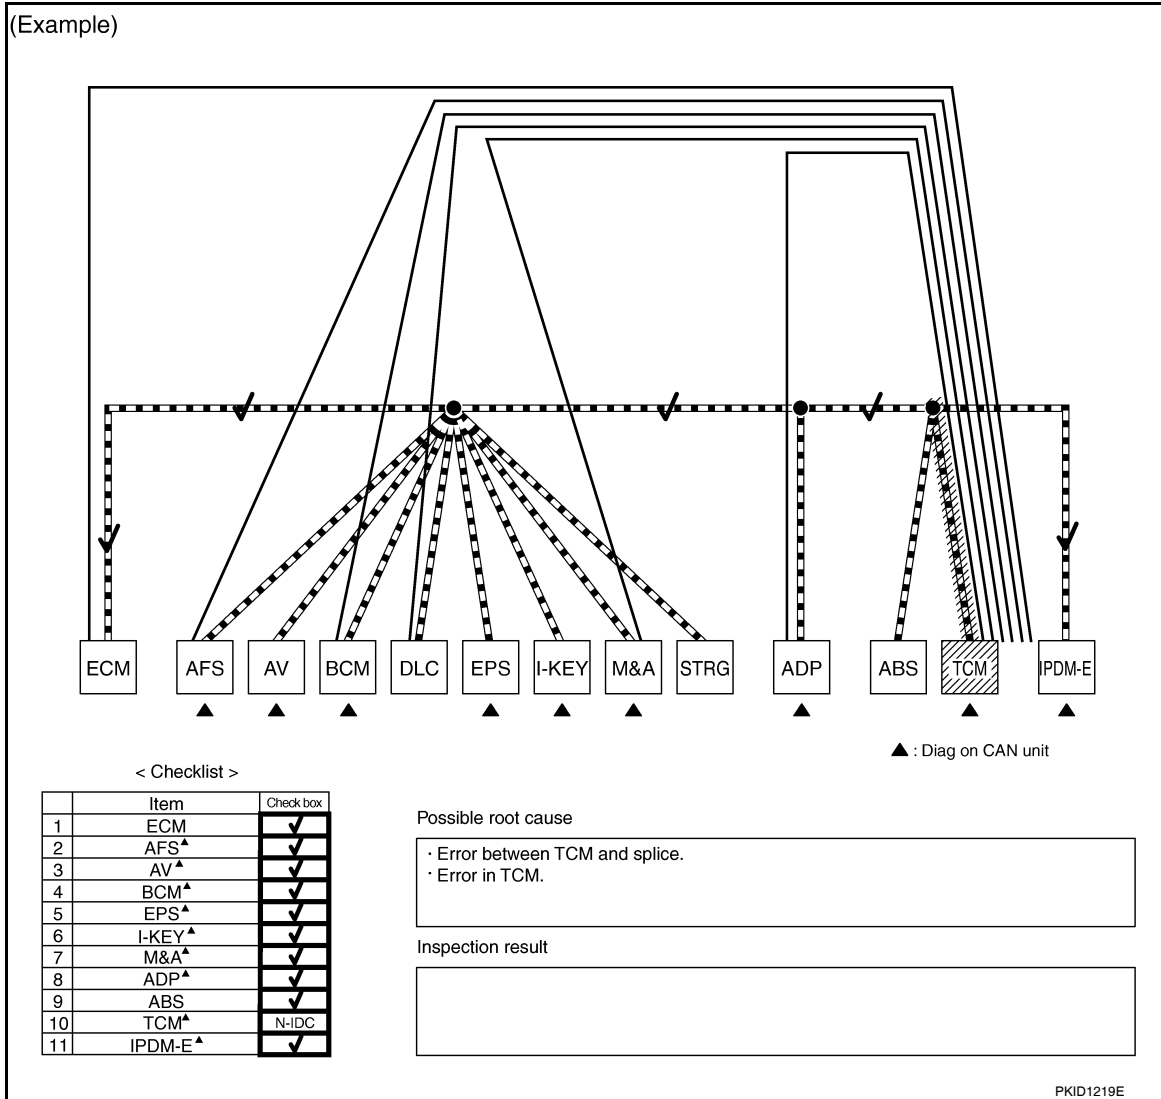

## Present Error — Short Circuit —

When the symptoms listed below exist, a short circuit of the CAN communication line is a possible cause.

Received data

Item (CONSULT-III)	Indication
ECU list (on the CAN DIAG SUPPORT MNTR)	All Diag on CAN units are not indicated.
CAN DIAG SUPPORT MNTR	"UNKWVN" is indicated under "TRANSMIT DIAG" and most reception items.

## Error symptom

- Most the units connected to the CAN communication system go into fail-safe mode or are deactivated.

## Inspection procedure

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

- Refer to "MALFUNCTION AREA CHART".

(Example)

CAN DIAG SUPPORT MNTR

CAN1		CAN2		ECM		
CAN_H max=4.3V					PRSENT	PAST
CAN_H min=1.0V					UNKWN	0
CAN_L max=3.1V				TRANSMIT DIAG	UNKWN	0
CAN_L min=0.6V				VDC/TCS/ABS	UNKWN	0
Battery(V)11.7V				METER/M&A	-	-
		CAN		BCM/SEC	UNKWN	0
ECU list				ICC	-	-
				HVAC	-	-
All Diag on CAN units are not indicated. { ABS, ECM				TCM	UNKWN	0
				EPS	UNKWN	0
				IPDM E/R	UNKWN	0
				e4WD	-	-
				AWD/4WD	-	-
		ABS				
					PRSENT	PAST
				INITIAL DIAG	NG	
				TRANSMIT DIAG	UNKWN	
				ECM	UNKWN	

"UNKWN" is indicated under most reception items of CAN DIAG SUPPORT MNTR.

PKID1220E

Past Error — Open Circuit —

Review CAN communication signal chart based on information received from the interview with the customer and on past error information from SELF-DIAG RESULTS and CAN DIAG SUPPORT MNTR.

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

1. SELF-DIAG RESULTS: Inspect the control units indicating “U1000” or “U1001” on SELF-DIAG RESULTS.

ALL DTC READING			
DTC RESULTS	TIME	DTC RESULTS	TIME
ABS		BCM	
U1000 : CAN COMM CIRCUIT	3	No DTC is detected. Further testing may be required.	
IPDM E/R		TRANSMISSION	
No DTC is detected. Further testing may be required.		U1000 : CAN COMM CIRCUIT	3
MULTI AV		METER	
No DTC is detected. Further testing may be required.		U1000 : CAN COMM CIRCUIT	3

DTC RESULTS	TIME	DTC RESULTS	TIME
EPS		AUTO DRIVE POS.	
U1000 : CAN COMM CIRCUIT	PAST	No DTC is detected. Further testing may be required.	
ENGINE			
U1001 : CAN COMM CIRCUIT	1t		
ADAPTIVE LIGHT			
No DTC is detected. Further testing may be required.			
INTELLIGENT KEY			
No DTC is detected. Further testing may be required.			

PKID1221E

2. CAN DIAG SUPPORT MNTR (with PAST): Check the CAN DIAG SUPPORT MNTR (with PAST) of units indicating “U1000” or “U1001” on SELF-DIAG RESULTS. Draw a line on the diagnosis sheet to indicate the possible error circuit.

**NOTE:**

For the details of each indication on CAN DIAG SUPPORT MNTR, refer to [LAN-47, "CAN Diagnostic Support Monitor"](#).

- a. Reception item of “ECM”: “VDC/TCS/ABS”, “3” is indicated in the “PAST”. This means ECM could not receive the signal from ABS in the past. Draw a line between ECM and ABS (line 2-a in the figure below).
- b. Reception item of “M&A”: “VDC/TCS/ABS”, “3” is indicated in the “PAST”. This means M&A could not receive the signal from ABS in the past. Draw a line between M&A and ABS (line 2-b in the figure below).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

LAN


N  
O  
P

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

- c. Reception item of "TCM": "VDC/TCS/ABS", "3" is indicated in the "PAST". This means TCM could not receive the signal from ABS in the past. Draw a line between TCM and ABS (line 2-c in the figure below).

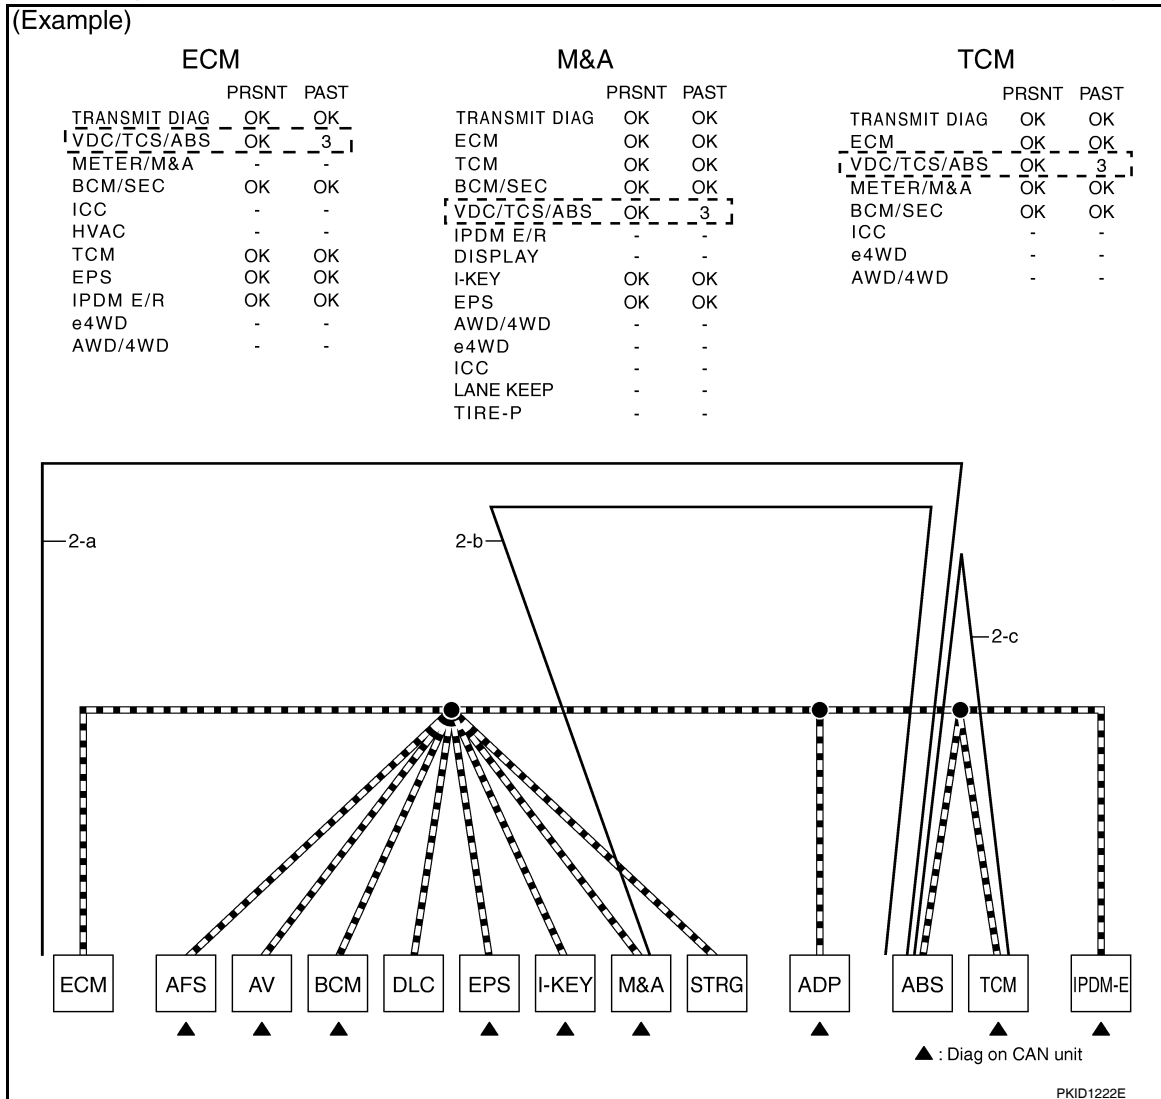

3. CAN DIAG SUPPORT MNTR (without PAST): Check the CAN DIAG SUPPORT MNTR (without PAST) of units indicating "U1000" or "U1001" on SELF-DIAG RESULTS. Draw a line on the diagnosis sheet to indicate the possible error circuit.

**NOTE:**

- While an error occurred in the past according to SELF-DIAG RESULTS, it is unclear which signal is not received. Assume that errors were detected from all reception items.
- Draw a single line among the unit and all reception items. (Work flow differs from CAN DIAG SUPPORT MNTR (with PAST).)


- a. Reception item of "EPS": Assume that the unit could not receive the signals from ECM, ABS, and M&A. Draw a line among EPS, ECM, ABS, and M&A (line 3-a in the figure below).

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

- b. Reception item of "ABS": Assume that the unit could not receive the signal from ECM. Draw a line between ABS and ECM (line 3-b in the figure below).

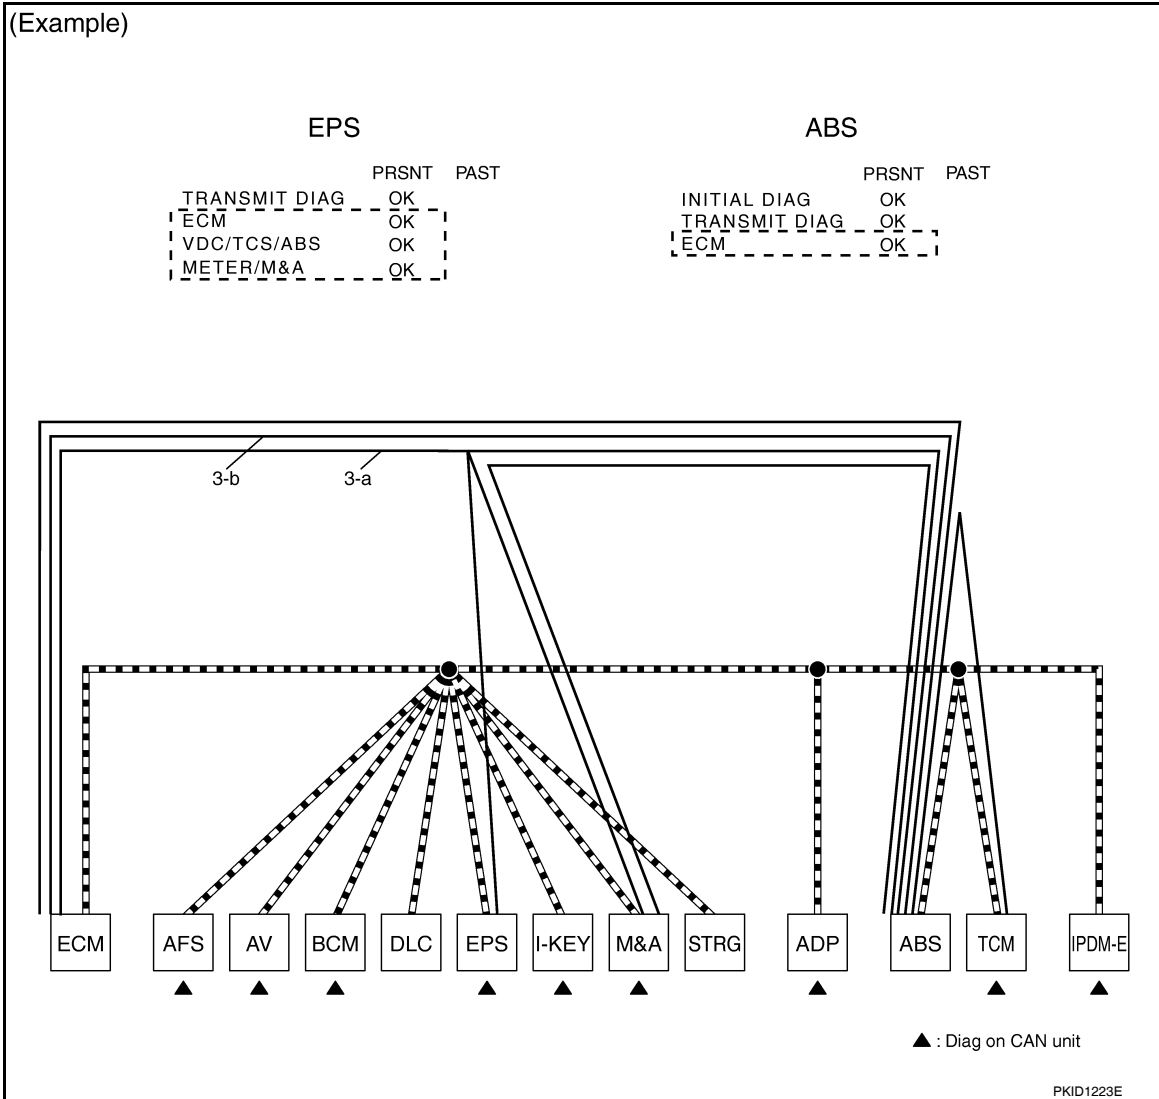

4. Search for the possible cause using CAN communication signal chart using information from the interview with the customer.

**NOTE:**

For the details of CAN communication signal, refer to [LAN-44, "CAN Communication Signal Chart"](#).

- a. ABS warning lamp turned ON and speedometer did not move: This means that "ABS warning lamp signal" and "Vehicle speed signal" could not communicate between M&A and ABS (4-a in the figure below).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

LAN

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

- b. The tachometer moved normally: This means that “Engine speed signal” could communicate normally between ECM and M&A (4-b in the figure below).

(Example)

First registration:

CAN system type:

Symptom (Results from interview with customer)

While driving,

- ABS warning lamp turned ON.
- Speedometer did not move.
- Tachometer moved normally.

**CAN Communication Signal Chart**

Signal name/Connecting unit	T: Transmit R: Receive											
	ECM	AFS <sup>1</sup>	AV <sup>2</sup>	BCM	EPS	I-KEY <sup>3</sup>	M&A	STRG <sup>1</sup>	ADP <sup>4</sup>	ABS	TCM	IPDM/E
A/C compressor request signal	T											R
Accelerator pedal position signal	T										R	
Closed throttle position signal	T										R	
Cooling fan speed request signal	T											R
Engine and CVT integrated control signal	T R										R T	
Engine coolant temperature signal	T						R				R	
4-b Engine speed signal	T						R				R	
Engine status signal	T		R		R							
Fuel consumption monitor signal	T		R				R					
MI signal	T						R					
Wide open throttle position signal	T										R	
4-a ABS warning lamp signal							R			T		
Brake warning lamp signal							R			T		
Steering angle sensor signal		R						T				
Vehicle speed signal	R	R		R	R	R	T		R	T	R	
Input shaft revolution signal	R											T
Output shaft revolution signal	R											T
Shift position indicator signal	R	R	R	R <sup>5</sup>			R		R <sup>6</sup>		T	
Second position indicator signal							R				T	
Front wiper stop position signal				R								T
High beam status signal	R	R										T
Low beam status signal	R	R										T

SKIB8895E

5. Fill out the diagnosis sheet based on information from step 4.
- a. The ABS warning lamp turned ON and speedometer did not move: Assume that a possible cause is no communication between M&A and ABS. Draw a line between M&A and ABS. (Line 5-a in the figure below).




# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

- b. The tachometer moved normally: Put check marks between ECM and M&A. The circuit between ECM and M&A is functioning properly (check marks 5-b in the figure below).

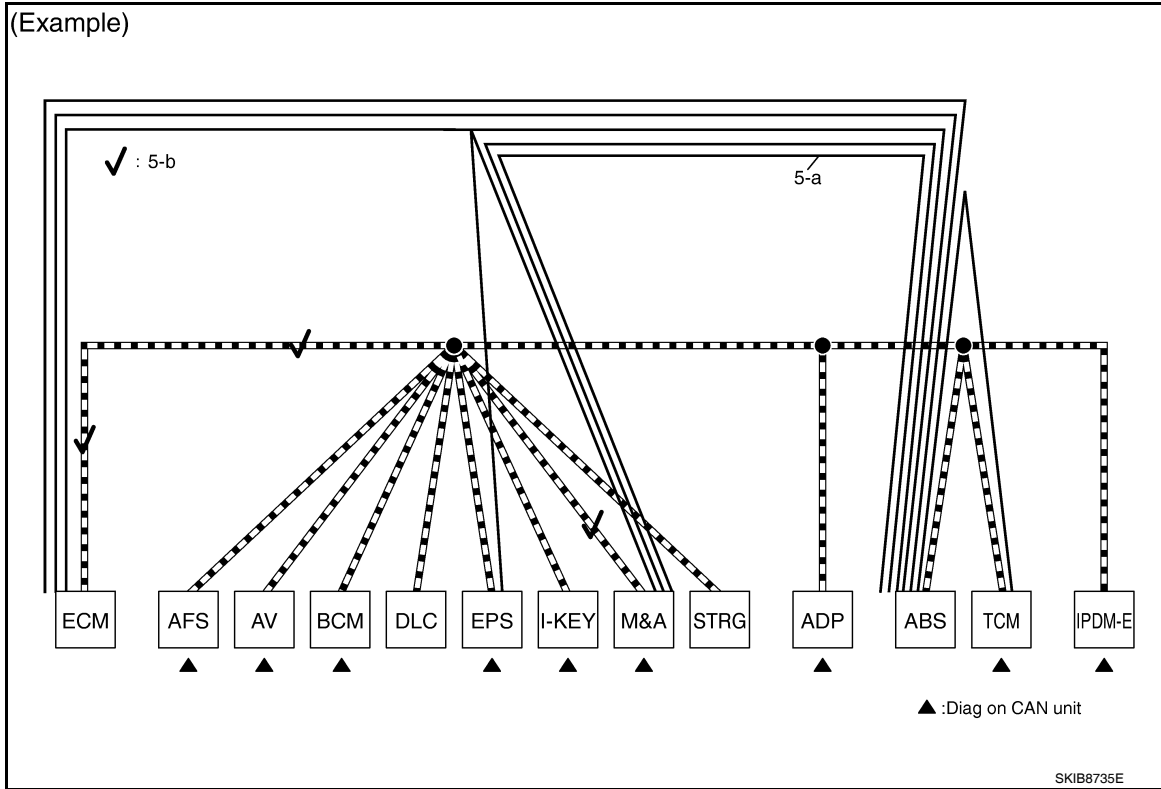

6. The circuit which has the most amount of lines are the possible cause. Error is detected from ABS actuator and electric unit (control unit) branch line (shaded in the figure below).

**NOTE:**

For abbreviations, refer to [LAN-36, "Abbreviation List"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L


LAN

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

7. Perform the inspection procedure for the possible cause. Refer to "MALFUNCTION AREA CHART".

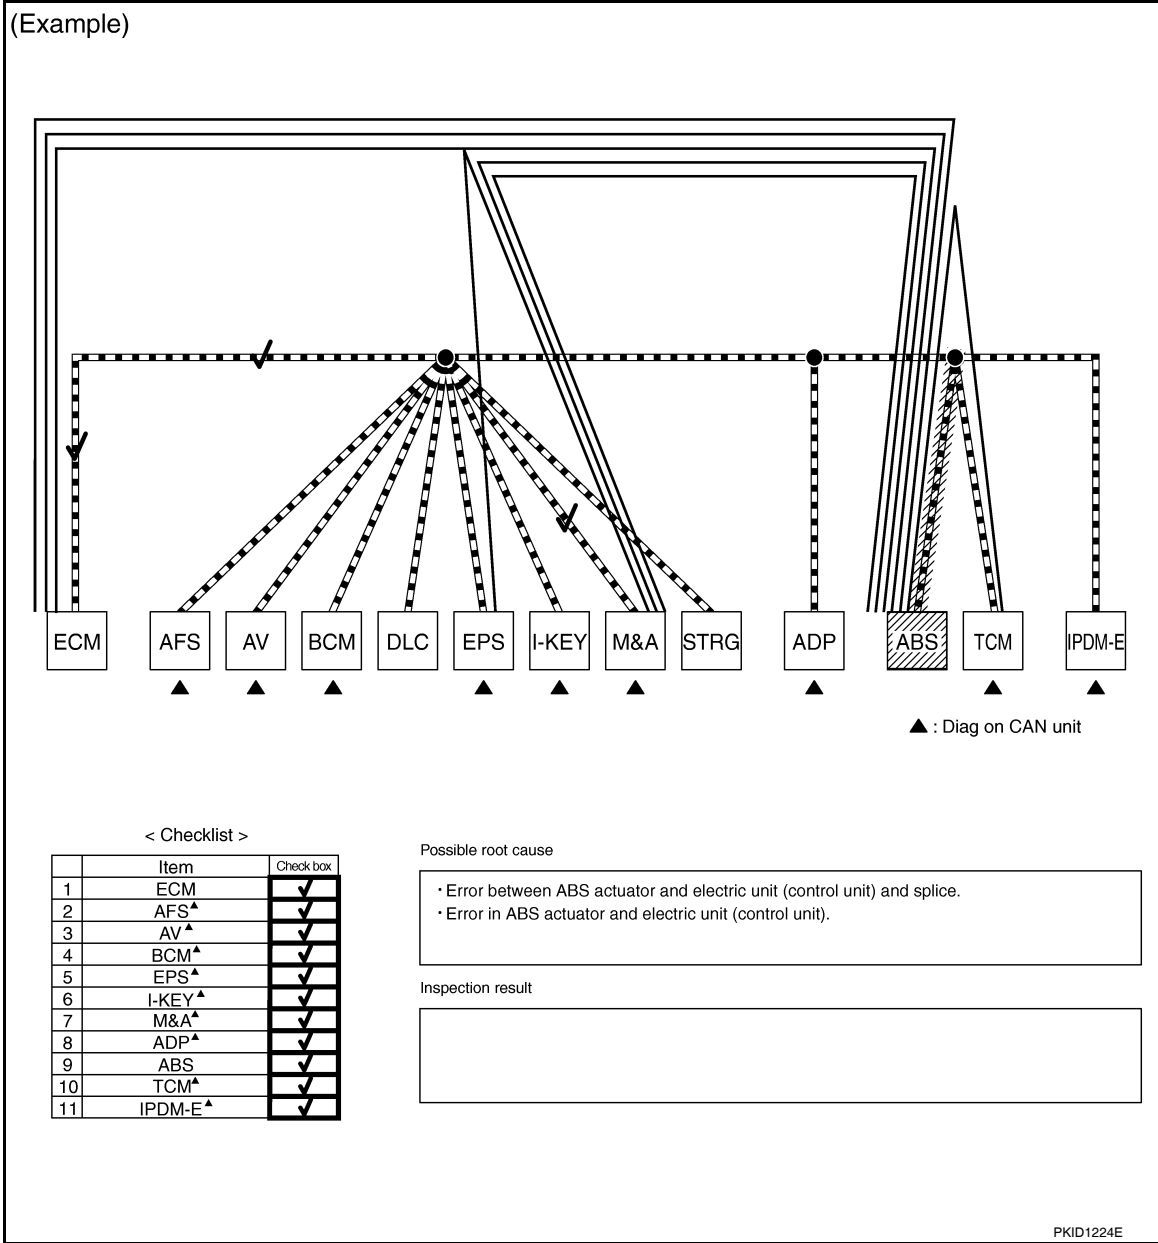

**Past Error — Short Circuit —**

When the symptoms listed below exist, a short circuit of the CAN communication line is a possible cause.

Item (CONSULT-III)	Indication	Inspection procedure
SELF-DIAG RESULTS	"U1000" and "U1001" is indicated in the past for most units.	Refer to "MALFUNCTION AREA CHART".
CAN DIAG SUPPORT MNTR	Only on CAN DIAG SUPPORT MNTR (with PAST), "1 - 39" is indicated on "PAST" of "TRANSMIT DIAG" and the reception item.	

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

(Example)

DTC RESULTS	TIME	DTC RESULTS	TIME	DTC RESULTS	TIME	DTC RESULTS	TIME
ENGINE		ADAPTIVE LIGHT		MULTI AV		BCM	
U1000 : CAN COMM CIRCUIT	1t	U1000 : CAN COMM CIRCUIT	5	U1000 : CAN COMM CIRCUIT	5	U1000 : CAN COMM CIRCUIT	5
U1001 : CAN COMM CIRCUIT	1t						
EPS		INTELLIGENT KEY		METER		AUTO DRIVE POS.	
U1000 : CAN COMM CIRCUIT	5	U1000 : CAN COMM CIRCUIT	5	U1000 : CAN COMM CIRCUIT	5	U1000 : CAN COMM CIRCUIT	PAST

“U1000” and “U1001” is indicated in the past for most units.

ECM			AFS			AV			BCM		
	PRSNT	PAST		PRSNT	PAST		PRSNT	PAST		PRSNT	PAST
TRANSMIT DIAG	OK	5	TRANSMIT DIAG	-	-	TRANSMIT DIAG	-	-	TRANSMIT DIAG	OK	5
VDC/TCS/ABS	OK	5	ECM	OK	5	ECM	OK	5	ECM	OK	5
METER/M&A	-	-	METER/M&A	OK	5	METER/M&A	OK	5	METER/M&A	OK	5
BCM/SEC	OK	5	TCM	OK	5	BCM/SEC	-	-	TCM	OK	5
ICC	-	-	STRG	OK	5	HVAC	-	-	MULTI AV	-	-
HVAC	-	-	EPS	-	-	IPDM E/R	-	-	IPDM E/R	OK	5
TCM	OK	5	IPDM E/R	OK	5	TIRE-P	-	-	I-KEY	OK	5
EPS	OK	5									
IPDM E/R	OK	5									
e4WD	-	-									
AWD/4WD	-	-									

EPS			I-KEY			M&A			ADP		
	PRSNT	PAST		PRSNT	PAST		PRSNT	PAST		PRSNT	PAST
TRANSMIT DIAG	OK	-	TRANSMIT DIAG	OK	5	TRANSMIT DIAG	OK	5	TRANSMIT DIAG	-	-
ECM	OK	-	ECM	OK	5	ECM	OK	5	METER/M&A	OK	5
VDC/TCS/ABS	OK	-	METER/M&A	OK	5	TCM	OK	5	BCM/SEC	OK	5
METER/M&A	-	-				BCM/SEC	OK	5	TCM	OK	5
						VDC/TCS/ABS	OK	5			
						IPDM E/R	-	-			
							OK	5			
								5			

Only on CAN DIAG SUPPORT MNTR (with PAST), “1-39” is indicated on “PAST” of “TRANSMIT DIAG” and the reception item.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

LAN

PKID1225E

## HOW TO USE THIS SECTION

< HOW TO USE THIS MANUAL >

[CAN]

# HOW TO USE THIS MANUAL

## HOW TO USE THIS SECTION

### Caution

INFOID:000000005146452

- This section describes information peculiar to a vehicle, sheets for trouble diagnosis, and inspection procedures.
- For trouble diagnosis procedure, refer to [LAN-14, "Trouble Diagnosis Procedure"](#).

### Abbreviation List

INFOID:000000005146453

Abbreviations in CAN communication signal chart, and the diagnosis sheet are as per the following list.

Abbreviation	Unit name	SELECT SYSTEM (CONSULT-III)	CAN DIAG SUPPORT MNTR (CONSULT-III)
4WD	Transfer control unit	ALL MODE AWD/4WD	AWD/4WD
A-BAG	Air bag diagnosis sensor unit	AIR BAG	—
ABS	ABS actuator and electric unit (control unit)	ABS	VDC/TCS/ABS
ADP	Driver seat control unit	AUTO DRIVE POS.	—
AV	AV control unit	MULTI AV	DISPLAY
BCM	BCM	BCM	BCM/SEC
DLC	Data link connector	—	—
ECM	ECM	ENGINE	ECM
HVAC	A/C auto amp.	HVAC	—
ICC	ICC unit	ICC	ICC
			ICC/e4WD
I-KEY	Intelligent Key unit	INTELLIGENT KEY	I-KEY
IPDM-E	IPDM E/R	IPDM E/R	IPDM E/R
LASER	ICC sensor	—	ICC SENSOR
M&A	Combination meter	METER/M&A	METER/M&A
STRG	Steering angle sensor	—	STRG
TCM	TCM	TRANSMISSION	TCM

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005152909

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

**WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIR BAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

**WARNING:**

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precautions for Trouble Diagnosis

INFOID:000000005146455

**CAUTION:**

- Never apply 7.0 V or more to the measurement terminal.
- Use a tester with open terminal voltage of 7.0 V or less.
- Turn the ignition switch OFF and disconnect the battery cable from the negative terminal when checking the harness.


Precautions for Harness Repair

INFOID:000000005146456

- Solder the repaired area and wrap tape around the soldered area.

**NOTE:**

A fray of twisted lines must be within 110 mm (4.33 in).

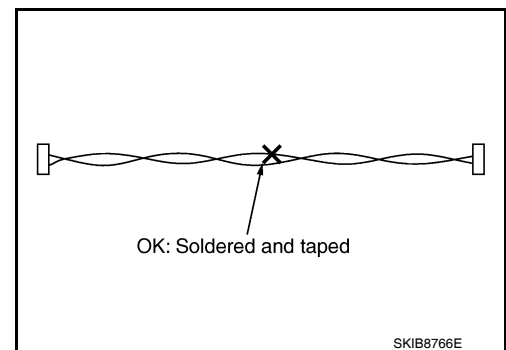

## PRECAUTIONS


[CAN]

### < PRECAUTION >

- Bypass connection is never allowed at the repaired area.

**NOTE:**

Bypass connection may cause CAN communication error. The spliced wire becomes separated and the characteristics of twisted line are lost.

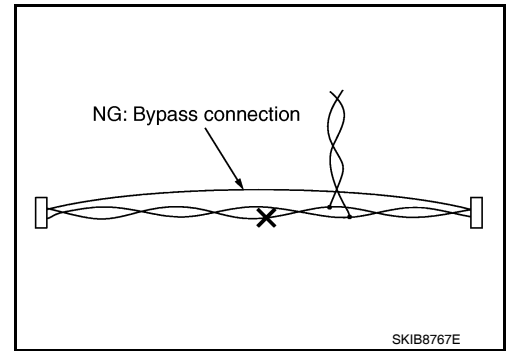

- Replace the applicable harness as an assembly if error is detected on the shield lines of CAN communication line.

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Interview Sheet

INFOID:000000005146457

CAN Communication System Diagnosis Interview Sheet

Date received:

Type:

VIN No.:

Model:

First registration:

Mileage:

CAN system type:

Symptom (Results from interview with customer)

Condition at inspection

Error symptom : Present / Past

SKIB8898E

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

LAN


# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN]

## Diagnosis Sheet (CAN Type 1)

INFOID:000000005146458

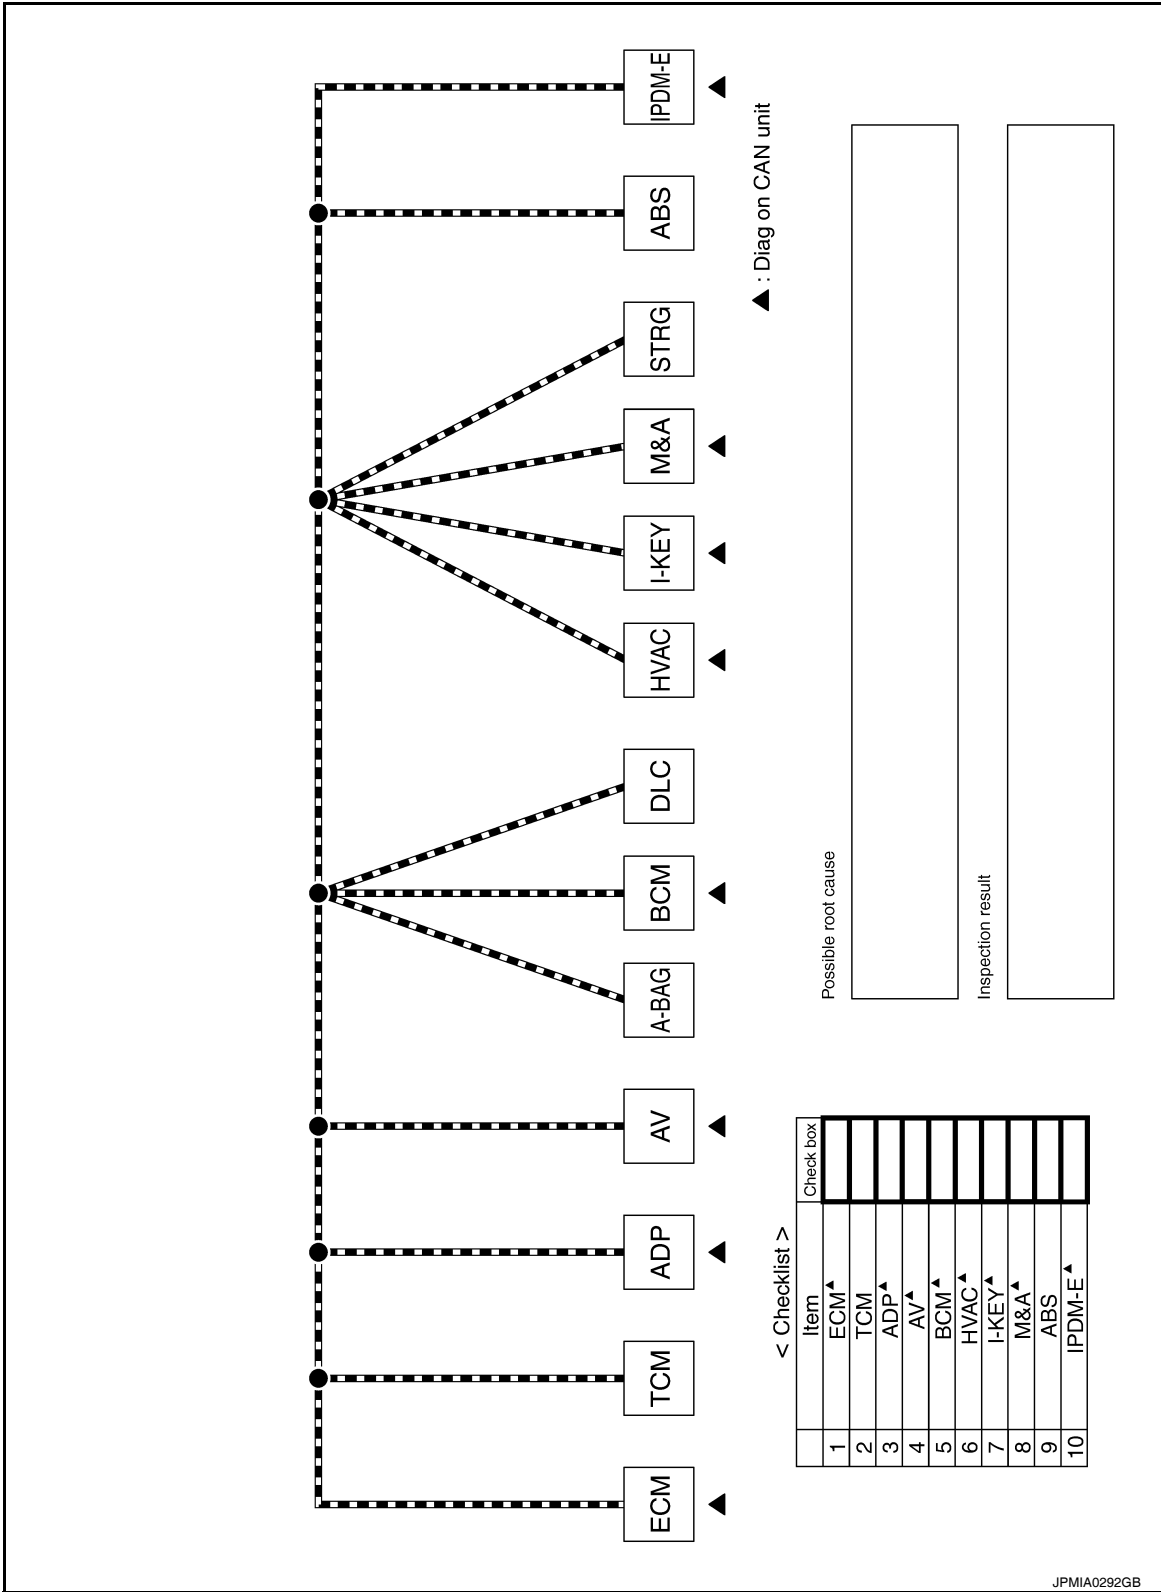




# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN]

## Diagnosis Sheet (CAN Type 2)

INFOID:000000005146459

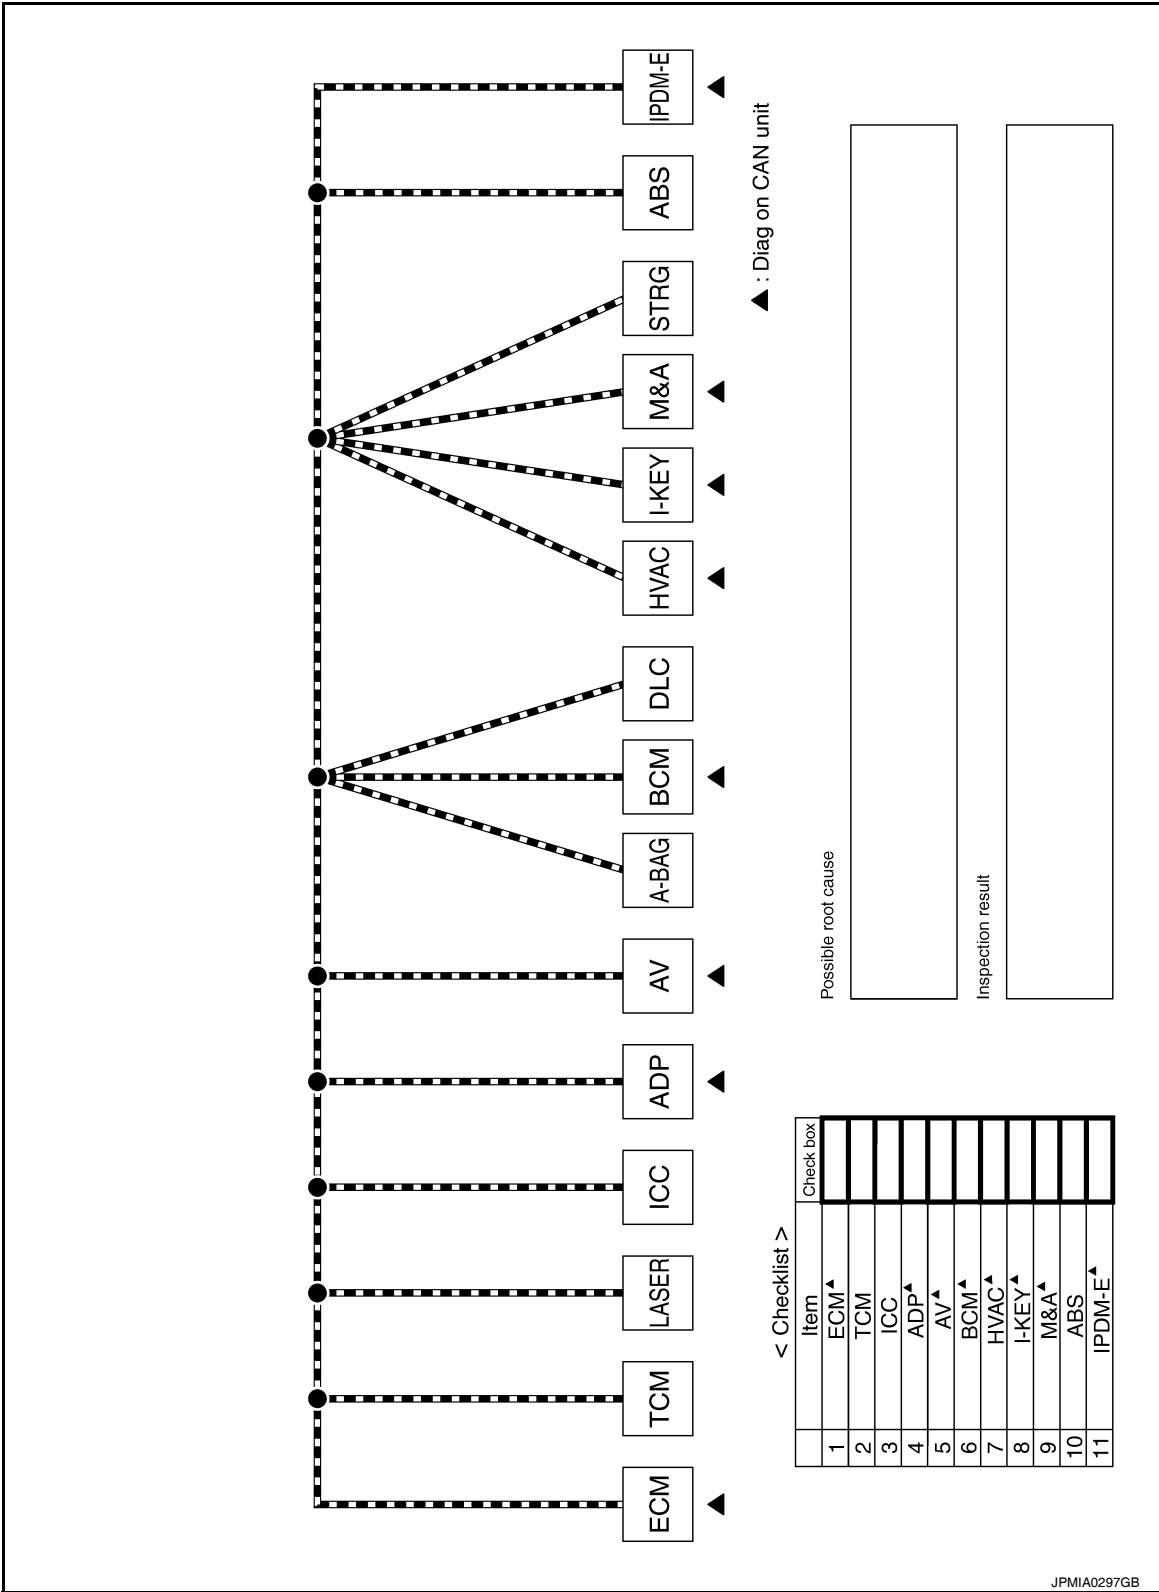

JPMIA0297GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
LAN  
N  
O  
P


# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN]

## Diagnosis Sheet (CAN Type 3)

INFOID:000000005146460

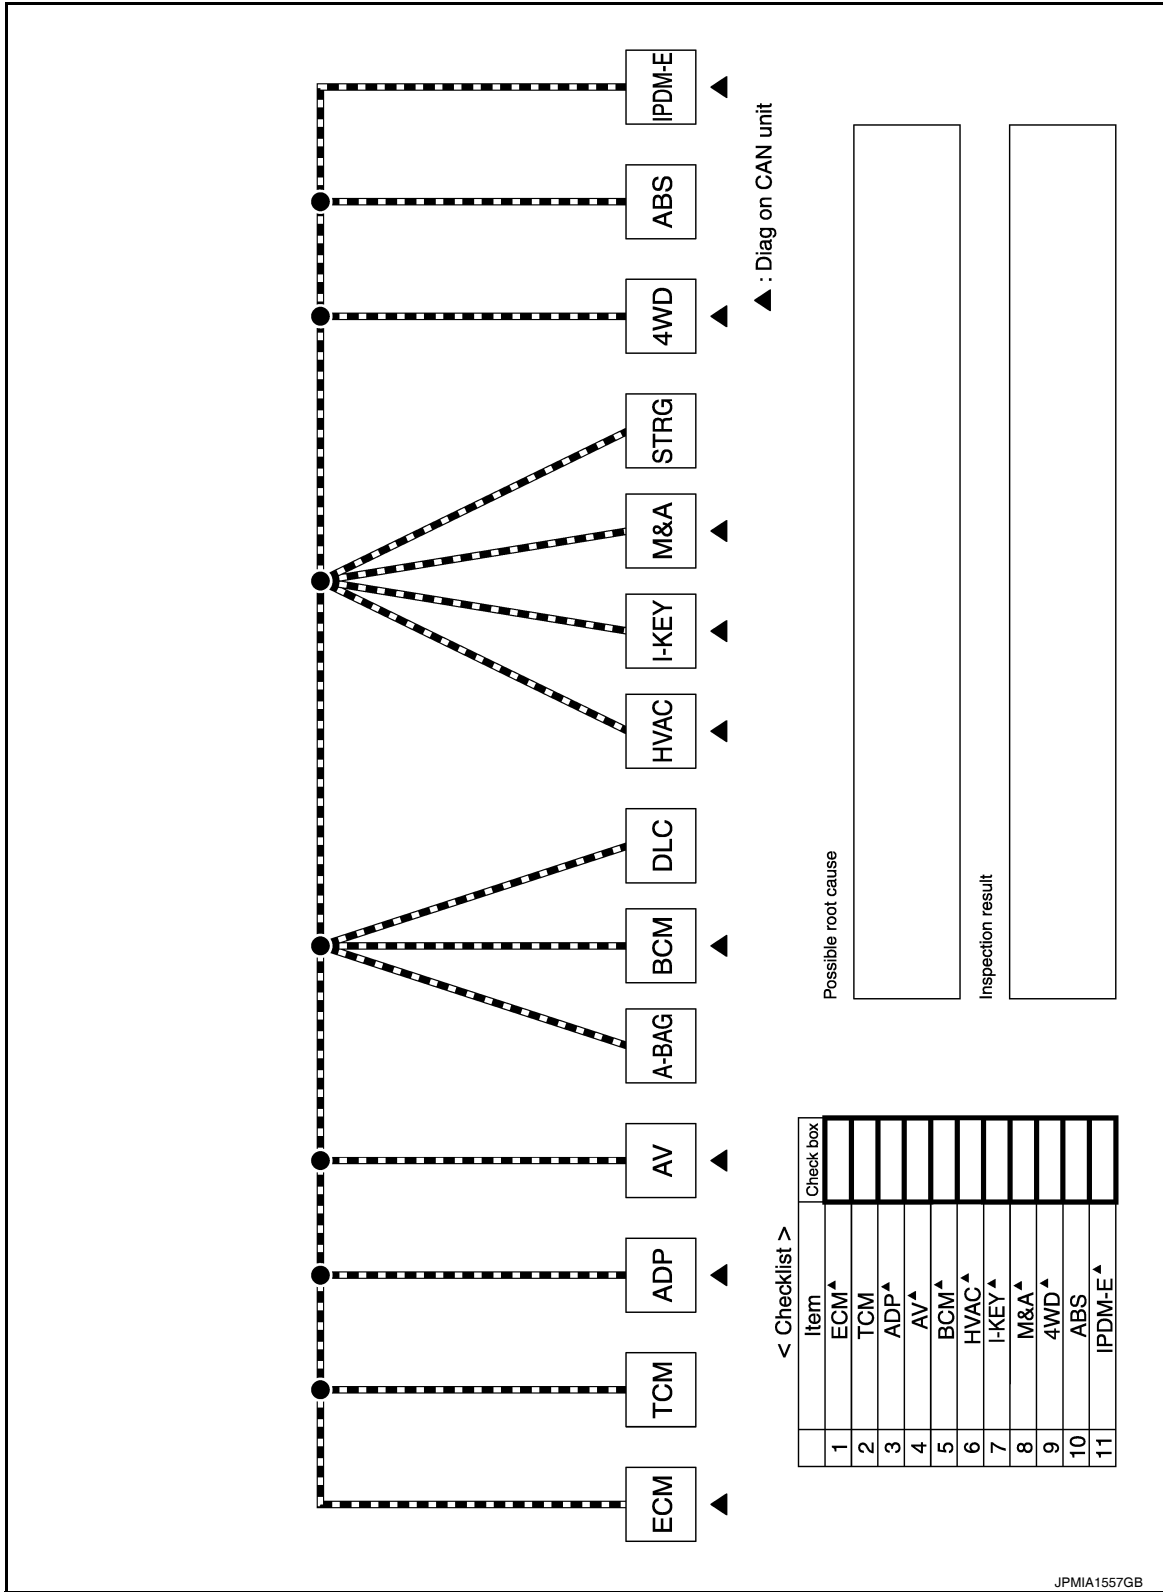

JPMIA1557GB


# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN]

## Diagnosis Sheet (CAN Type 4)

INFOID:000000005146461

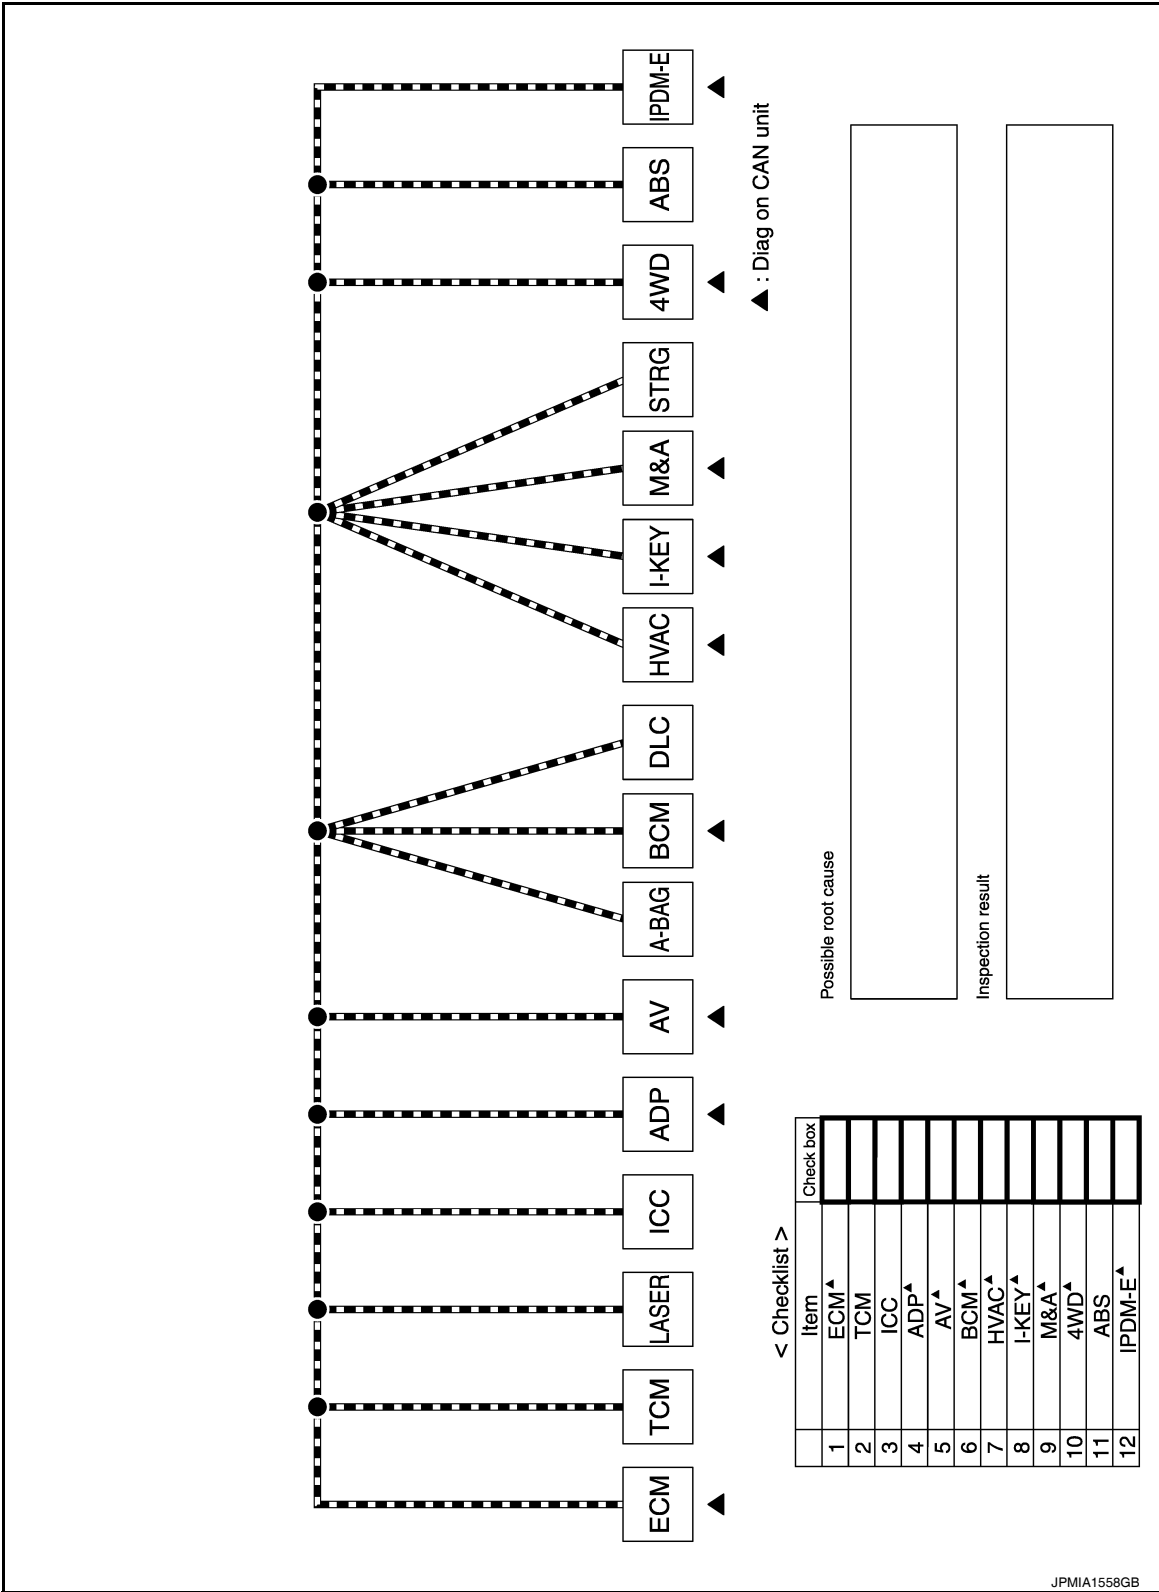

JPMIA1558GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
LAN  
N  
O  
P

# CAN COMMUNICATION SYSTEM

< FUNCTION DIAGNOSIS >

[CAN]

## FUNCTION DIAGNOSIS

### CAN COMMUNICATION SYSTEM

#### CAN System Specification Chart

INFOID:000000005146462

Determine CAN system type from the following specification chart. Then choose the correct diagnosis sheet.

**NOTE:**

Refer to [LAN-14. "Trouble Diagnosis Procedure"](#) for how to use CAN system specification chart.


Body type	Wagon			
Axle	2WD		4WD	
Engine	VK56DE			
Transmission	A/T			
Brake control	VDC			
ICC system		×		×
CAN system type	1	2	3	4
Diagnosis sheet	<a href="#">LAN-40</a>	<a href="#">LAN-41</a>	<a href="#">LAN-42</a>	<a href="#">LAN-43</a>

×: Applicable

#### VEHICLE EQUIPMENT IDENTIFICATION INFORMATION

**NOTE:**

Check CAN system type from the vehicle shape and equipment.

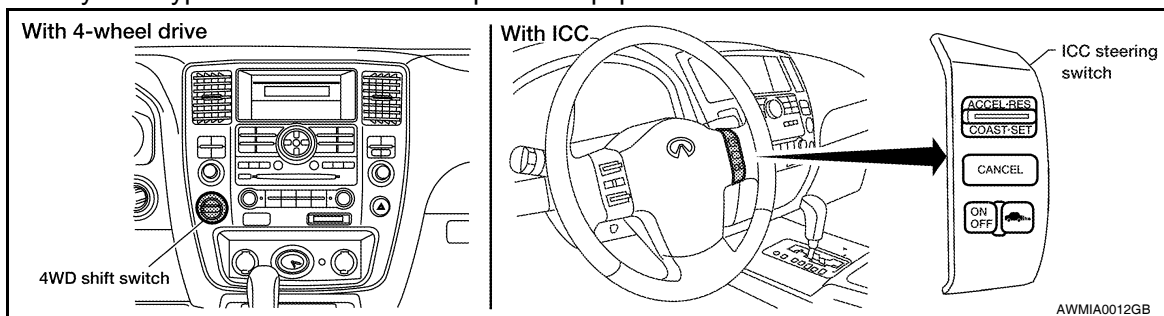

#### CAN Communication Signal Chart

INFOID:000000005146463

Refer to [LAN-13. "How to Use CAN Communication Signal Chart"](#) for how to use CAN communication signal chart.

**NOTE:**

Refer to [LAN-36. "Abbreviation List"](#) for the abbreviations of the connecting units.

Signal name/Connecting unit	T: Transmit R: Receive													
	ECM	TCM	LASER	ICC	ADP	AV	BCM	HVAC	I-KEY	M&A	STRG	4WD	ABS	IPDM-E
Accelerator pedal position signal	T	R		R								R	R	
A/C compressor request signal	T													R
ASCD CRUISE lamp signal	T									R				
ASCD OD cancel request signal	T	R												
ASCD operation signal	T	R												
ASCD SET lamp signal	T									R				
Battery voltage signal	T	R												
Closed throttle position signal	T	R		R										
Cooling fan speed request signal	T													R
Engine coolant temperature signal	T							R		R				

# CAN COMMUNICATION SYSTEM

< FUNCTION DIAGNOSIS >

[CAN]

Signal name/Connecting unit	ECM	TCM	LASER	ICC	ADP	AV	BCM	HVAC	I-KEY	M&A	STRG	4WD	ABS	IPDM-E	A
Engine speed signal	T	R		R		R		R	R	R		R	R		B
Engine status signal	T						R								C
Fuel consumption monitor signal	T					R				R					D
ICC steering switch signal	T			R						T					E
Malfunction indicator lamp signal	T									R					F
Wide open throttle position signal	T	R													G
A/T CHECK indicator lamp signal		T								R					H
A/T fluid temperature sensor signal		T								R					I
A/T position indicator lamp signal		T		R						R		R			J
A/T self-diagnosis signal	R	T													K
Current gear position signal		T		R									R		L
Input speed signal	R	T		R											M
Output shaft revolution signal	R	T		R								R			N
P range signal		T		R	R					R			R		O
ICC sensor signal			T	R											P
Buzzer output signal				T						R					
ICC OD cancel request signal	R	R		T			T			R					
ICC operation signal	R	R		T											
ICC system display signal				T						R					
System setting signal					T	R	T								
A/C switch/indicator signal					R	T	R								
A/C switch signal						T		R							
Blower fan motor switch signal	R						T								
Day time running light request signal							T			R				R	
Door lock/unlock status signal							T		R						
Door switch signal					R	R	T		R	R				R	LAN
Front fog light request signal							T							R	
Front wiper request signal				R			T							R	
High beam request signal							T			R				R	N
Horn chirp signal							T							R	
Ignition switch signal					R		T		R					R	O
Key fob door unlock signal					R		T								
Key fob ID signal					R		T								
Key switch signal					R		T								P
Low beam request signal							T							R	
Position light request signal							T			R				R	
Rear window defogger switch signal							T	R						R	
Sleep wake up signal					R		T			R				R	
Theft warning horn request signal							T							R	

# CAN COMMUNICATION SYSTEM

< FUNCTION DIAGNOSIS >

[CAN]

Signal name/Connecting unit	ECM	TCM	LASER	ICC	ADP	AV	BCM	HVAC	I-KEY	M&A	STRG	4WD	ABS	IPDM-E
Tire pressure data signal						R	T							
Tire pressure signal						R	T			R				
Turn indicator signal							T			R				
Buzzer output signal									T	R				
Door lock/unlock request signal							R		T					
Hazard request signal							R		T					
Hazard warning lamp request signal							R		T					
Ignition knob switch signal							R		T					
KEY warning signal									T	R				
LOCK warning signal									T	R				
Panic alarm request signal							R		T					
Power window open request signal							R		T					
1st position switch signal		R								T				
4th position switch signal		R								T				
Distance to empty signal						R				T				
Fuel level low warning signal						R				T				
Fuel level sensor signal	R									T				
Parking brake switch signal							R			T				
Seat belt buckle switch signal							R			T				
Stop lamp switch signal		R								T				
Tow mode switch signal		R								T				
Vehicle speed signal	R	R	R		R	R	R		R	T				
								R		R		R	T	
Steering angle sensor signal											T		R	
ABS malfunction signal				R									T	
ABS warning lamp signal										R			T	
Brake pressure sensor signal				R									T	
Brake warning lamp signal										R			T	
SLIP indicator lamp signal										R			T	
TCS malfunction signal				R									T	
VDC malfunction signal				R									T	
VDC OFF indicator lamp signal				R						R			T	
VDC operation signal				R									T	
Front wiper stop position signal							R							T
High beam status signal	R													T
Hood switch signal							R							T
Low beam status signal	R													T
Rear window defogger control signal	R					R								T

**NOTE:**

CAN data of the air bag diagnosis sensor unit is not used by usual service work, thus it is omitted.

# TROUBLE DIAGNOSIS

< FUNCTION DIAGNOSIS >

[CAN]

## TROUBLE DIAGNOSIS

### CAN Diagnostic Support Monitor

INFOID:000000005146464

Use "CAN DIAG SUPPORT MNTR" for detecting the root cause.

#### MONITOR ITEM LIST (CONSULT-III)

#### ECM

0: Error at present, 1 – 39: Error in the past (Number means the number of times the ignition switch is turned OFF→ON)

ITEM	CAN DIAG SUP-PORT MNTR	Description	Normal		Error	
			PRSNT	PAST	PRSNT	PAST
ECM	TRANSMIT DIAG	Signal transmission status	OK	OK or 1 – 39*	UNKWN	0
	VDC/TCS/ABS	Signal receiving status from the ABS actuator and electric unit (control unit)				
	METER/M&A	Signal receiving status from the combination meter				
	BCM/SEC	Signal receiving status from the BCM				
	ICC	Signal receiving status from the ICC unit				
	HVAC	Not used even though indicated				
	TCM	Signal receiving status from the TCM	OK	OK or 1 – 39*	UNKWN	0
	EPS	Not used even though indicated				
	IPDM E/R	Signal receiving status from the IPDM E/R	OK	OK or 1 – 39*	UNKWN	0
	e4WD	Not used even though indicated				
	AWD/4WD	Signal receiving status from the transfer control unit	OK	OK or 1 – 39*	UNKWN	0

\*: 39 or higher number is fixed at 39 until the self-diagnosis result is erased.

#### TCM

#### NOTE:

Replace the unit when "NG" is indicated on the "INITIAL DIAG".

ITEM	CAN DIAG SUP-PORT MNTR	Description	Normal	Error
			PRSNT	
TCM	INITIAL DIAG	Status of CAN controller	OK	NG
	TRANSMIT DIAG	Signal transmission status		UNKWN
	ECM	Signal receiving status from the ECM		
	VDC/TCS/ABS	Signal receiving status from the ABS actuator and electric unit (control unit)		
	METER/M&A	Signal receiving status from the combination meter		
	ICC/e4WD	Signal receiving status from the ICC unit		
	AWD/4WD	Signal receiving status from the transfer control unit		

#### ICC Unit

#### NOTE:

Replace the unit when "NG" is indicated on the "INITIAL DIAG".

# TROUBLE DIAGNOSIS

< FUNCTION DIAGNOSIS >

[CAN]

ITEM	CAN DIAG SUP-PORT MNTR	Description	Normal	Error
			PRSNT	
ICC	INITIAL DIAG	Status of CAN controller	OK	NG
	TRANSMIT DIAG	Signal transmission status		UNKWN
	ECM	Signal receiving status from the ECM		
	VDC/TCS/ABS	Signal receiving status from the ABS actuator and electric unit (control unit)		
	TCM	Signal receiving status from the TCM		
	METER/M&A	Not used even though indicated		
	LANE KEEP			
	ECM (I)			
	ICC SENSOR	Signal receiving status from the ICC sensor	OK	UNKWN
	STRG	Not used even though indicated		
	METER/M&A (I)			
	ERROR (I)			
	LANE DETECTOR			
	TCM (I)	Not used even though indicated		
BCM/SEC	Signal receiving status from the BCM			

## Driver Seat Control Unit

0: Error at present, 1 – 39: Error in the past (Number means the number of times the ignition switch is turned OFF→ON)

ITEM	CAN DIAG SUP-PORT MNTR	Description	Normal		Error	
			PRSNT	PAST	PRSNT	PAST
ADP	TRANSMIT DIAG	Not used even though indicated				
	METER/M&A	Signal receiving status from the combination meter	OK	OK or 1 – 39*	UNKWN	0
	BCM/SEC	Signal receiving status from the BCM				
	TCM	Signal receiving status from the TCM				

\*: 39 or higher number is fixed at 39 until the self-diagnosis result is erased.

## AV Control Unit

0: Error at present, 1 – 39: Error in the past (Number means the number of times the ignition switch is turned OFF→ON)

ITEM	CAN DIAG SUP-PORT MNTR	Description	Normal		Error	
			PRSNT	PAST	PRSNT	PAST
AV	TRANSMIT DIAG	Signal transmission status	OK	OK or 1 – 39*	UNKWN	0
	ECM	Signal receiving status from the ECM				
	METER/M&A	Signal receiving status from the combination meter				
	BCM/SEC	Signal receiving status from the BCM				
	HVAC	Signal receiving status from the A/C auto amp.				
	STRG	Not used even though indicated				
	IPDM E/R	Signal receiving status from the IPDM E/R	OK	OK or 1 – 39*	UNKWN	0
TIRE-P	Not used even though indicated					

\*: 39 or higher number is fixed at 39 until the self-diagnosis result is erased.

BCM



# TROUBLE DIAGNOSIS

< FUNCTION DIAGNOSIS >

[CAN]

**NOTE:**

Replace the unit when “NG” is indicated on the “INITIAL DIAG”.

ITEM	CAN DIAG SUP-PORT MNTR	Description	Normal	Error
			PRSNT	
BCM	INITIAL DIAG	Status of CAN controller	OK	NG
	TRANSMIT DIAG	Signal transmission status		UNKWN
	ECM	Signal receiving status from the ECM		
	IPDM E/R	Signal receiving status from the IPDM E/R		
	METER/M&A	Signal receiving status from the combination meter		
	I-KEY	Not used even though indicated		

**A/C Auto Amp.**

0: Error at present, 1 – 39: Error in the past (Number means the number of times the ignition switch is turned OFF→ON)

ITEM	CAN DIAG SUP-PORT MNTR	Description	Normal		Error	
			PRSNT	PAST	PRSNT	PAST
HVAC	TRANSMIT DIAG	Signal transmission status	OK	OK or 1 – 39*	UNKWN	0
	ECM	Signal receiving status from the ECM				
	TCM	Not used even though indicated				
	BCM/SEC	Signal receiving status from the BCM	OK	OK or 1 – 39*	UNKWN	0
	VDC/TCS/ABS	Signal receiving status from the ABS actuator and electric unit (control unit)				
	IPDM E/R	Not used even though indicated				
	DISPLAY	Signal receiving status from the AV control unit	OK	OK or 1 – 39*	UNKWN	0
	I-KEY	Not used even though indicated				
	EPS					
	AWD/4WD					
	e4WD					
	ICC					
LANE CAMERA						
TIRE-P						

\*: 39 or higher number is fixed at 39 until the self-diagnosis result is erased.

**Intelligent Key Unit**

0: Error at present, 1 – 39: Error in the past (Number means the number of times the ignition switch is turned OFF→ON)

ITEM	CAN DIAG SUP-PORT MNTR	Description	Normal		Error	
			PRSNT	PAST	PRSNT	PAST
I-KEY	TRANSMIT DIAG	Signal transmission status	OK	OK or 1 – 39*	UNKWN	0
	ECM	Signal receiving status from the ECM				
	METER/M&A	Signal receiving status from the combination meter				
	BCM/SEC	Signal receiving status from the BCM				

\*: 39 or higher number is fixed at 39 until the self-diagnosis result is erased.

**Combination Meter**

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

LAN

N  
O  
P

# TROUBLE DIAGNOSIS

## < FUNCTION DIAGNOSIS >

[CAN]

0: Error at present, 1 – 39: Error in the past (Number means the number of times the ignition switch is turned OFF→ON)

ITEM	CAN DIAG SUP-PORT MNTR	Description	Normal		Error	
			PRSNT	PAST	PRSNT	PAST
M&A	TRANSMIT DIAG	Signal transmission status	OK	OK or 1 – 39*	UNKWN	0
	ECM	Signal receiving status from the ECM				
	TCM	Signal receiving status from the TCM				
	BCM/SEC	Signal receiving status from the BCM				
	VDC/TCS/ABS	Signal receiving status from the ABS actuator and electric unit (control unit)				
	IPDM E/R	Signal receiving status from the IPDM E/R				
	DISPLAY	Not used even though indicated				
	I-KEY	Signal receiving status from the Intelligent Key unit	OK	OK or 1 – 39*	UNKWN	0
	EPS	Not used even though indicated				
	AWD/4WD					
	e4WD					
	ICC	Signal receiving status from the ICC unit	OK	OK or 1 – 39*	UNKWN	0
	LANE CAMERA	Not used even though indicated				
TIRE-P						

\*: 39 or higher number is fixed at 39 until the self-diagnosis result is erased.

### Transfer Control Unit

0: Error at present, 1 – 39: Error in the past (Number means the number of times the ignition switch is turned OFF→ON)

ITEM	CAN DIAG SUP-PORT MNTR	Description	Normal		Error	
			PRSNT	PAST	PRSNT	PAST
4WD	TRANSMIT DIAG	Signal transmission status	OK	OK or 1 – 39*	UNKWN	0
	ECM	Signal receiving status from the ECM				
	VDC/TCS/ABS	Signal receiving status from the ABS actuator and electric unit (control unit)				
	TCM	Signal receiving status from the TCM				
	STRG	Signal receiving status from the steering angle sensor				

\*: 39 or higher number is fixed at 39 until the self-diagnosis result is erased.

### ABS Actuator and Electric Unit (Control Unit)

ITEM	CAN DIAG SUP-PORT MNTR	Description	Normal	Error
			PRSNT	
ABS	INITIAL DIAG	Status of CAN controller	OK	NG <sup>Caution</sup>
	TRANSMIT DIAG	Signal transmission status		
	ECM	Signal receiving status from the ECM		
	TCM	Signal receiving status from the TCM		
	METER/M&A	Not used even though indicated		
	STRG	Signal receiving status from the steering angle sensor	OK	UNKWN
	ICC	Signal receiving status from the ICC unit		
	AWD/4WD	Signal receiving status from the transfer control unit		

**CAUTION:**

# TROUBLE DIAGNOSIS

< FUNCTION DIAGNOSIS >

[CAN]

Never replace the unit even when "NG" is indicated on the "INITIAL DIAG" at this stage. Follow the trouble diagnosis procedures.

IPDM E/R

0: Error at present, 1 – 39: Error in the past (Number means the number of times the ignition switch is turned OFF→ON)

ITEM	CAN DIAG SUPPORT MNTR	Description	Normal		Error	
			PRSNT	PAST	PRSNT	PAST
IPDM-E	TRANSMIT DIAG	Signal transmission status	OK	OK or 1 – 39*	UNKWN	0
	ECM	Signal receiving status from the ECM				
	BCM/SEC	Signal receiving status from the BCM				

\*: 39 or higher number is fixed at 39 until the self-diagnosis result is erased.

## DTC Index

INFOID:000000005152903

DTC	Self-diagnosis item (CONSULT-III indication)	DTC detection condition		Inspection/Action
U0101	LOST COMM (TCM)	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) from TCM for 2 seconds or more.		Start the inspection. Refer to the applicable section of the indicated control unit.
U0140	LOST COMM (BCM)	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) from BCM for 2 seconds or more.		
U0164	LOST COMM (HVAC)	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) from A/C auto amp. or unified meter and A/C amp. for 2 seconds or more.		
U1000	CAN COMM CIRCUIT	ECM	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) for 2 seconds or more.	
		Except for ECM	When a control unit (except for ECM) is not transmitting or receiving CAN communication signal for 2 seconds or more.	
U1001	CAN COMM CIRCUIT	When ECM is not transmitting or receiving CAN communication signal other than OBD (emission-related diagnosis) for 2 seconds or more.		
U1002	SYSTEM COMM	When a control unit is not transmitting or receiving CAN communication signal for 2 seconds or less.		
U1010	CONTROL UNIT(CAN)	When an error is detected during the initial diagnosis for CAN controller of each control unit.		Replace the control unit indicating "U1010" or "P0607".
P0607	ECM			

# CAN COMMUNICATION SYSTEM

< COMPONENT DIAGNOSIS >


[CAN]

## COMPONENT DIAGNOSIS

### CAN COMMUNICATION SYSTEM

#### Component Parts Location

INFOID:000000005146466

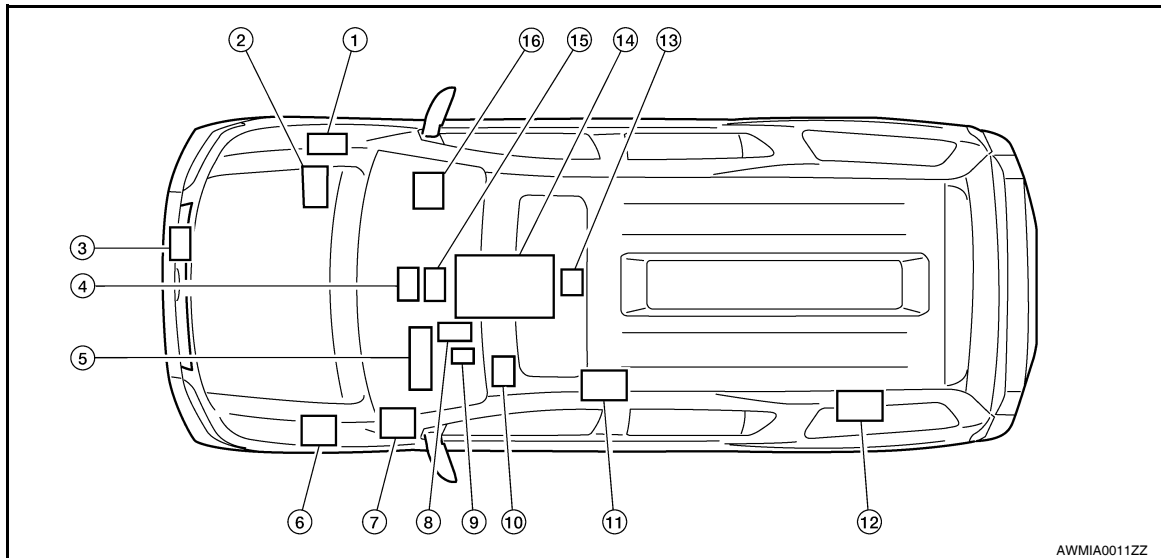

- |                                       |                                   |   |
|---------------------------------------|-----------------------------------|---|
| 1. ECM E16                            | 2. IPDM E/R E122                  | 3. ICC sensor E42                                     |
| 4. AV control unit M45                | 5. Combination meter M24          | 6. ABS actuator and electric unit (control unit) E125 |
| 7. Intelligent Key unit M70           | 8. BCM M18                        | 9. Data link connector M22                            |
| 10. Steering angle sensor M17         | 11. Driver seat control unit B202 | 12. ICC unit B13                                      |
| 13. Air bag diagnosis sensor unit M35 | 14. A/T assembly F9               | 15. A/C auto amp. M50                                 |
| 16. Transfer control unit E142        |                                   |   |

# CAN COMMUNICATION SYSTEM


< COMPONENT DIAGNOSIS >

[CAN]

## Wiring Diagram - CAN SYSTEM -

INFOID:000000005146467

CAN SYSTEM

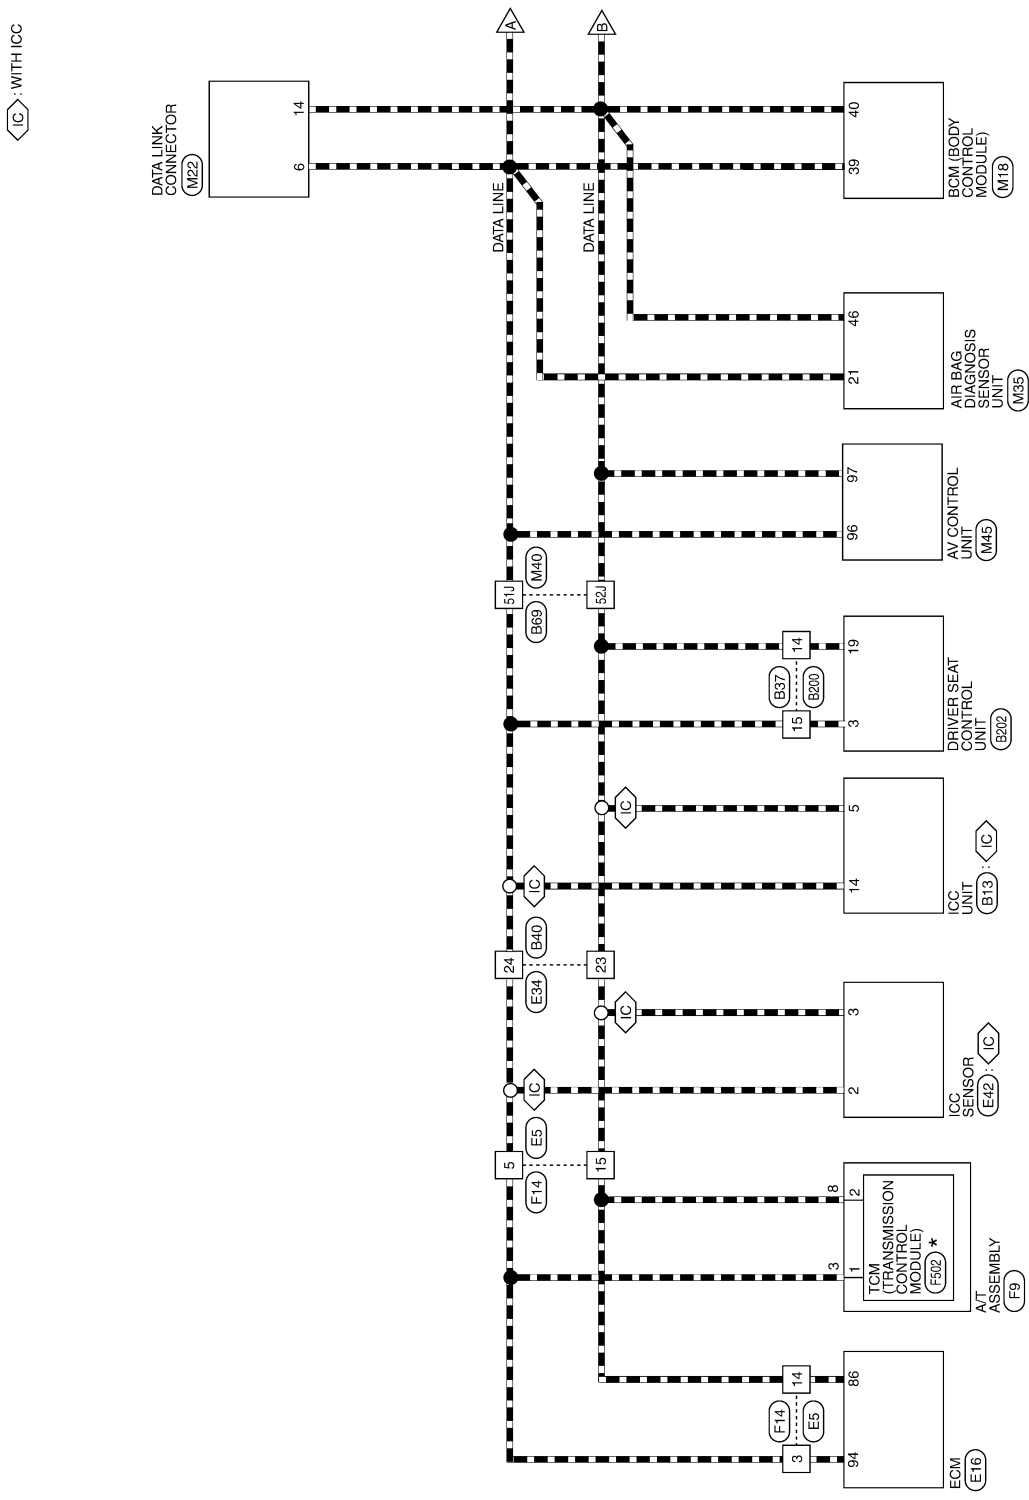

\*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

ABMWA0423GB


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
LAN  
N  
O  
P

# CAN COMMUNICATION SYSTEM

< COMPONENT DIAGNOSIS >

[CAN]

◁4W> : WITH 4-WHEEL DRIVE

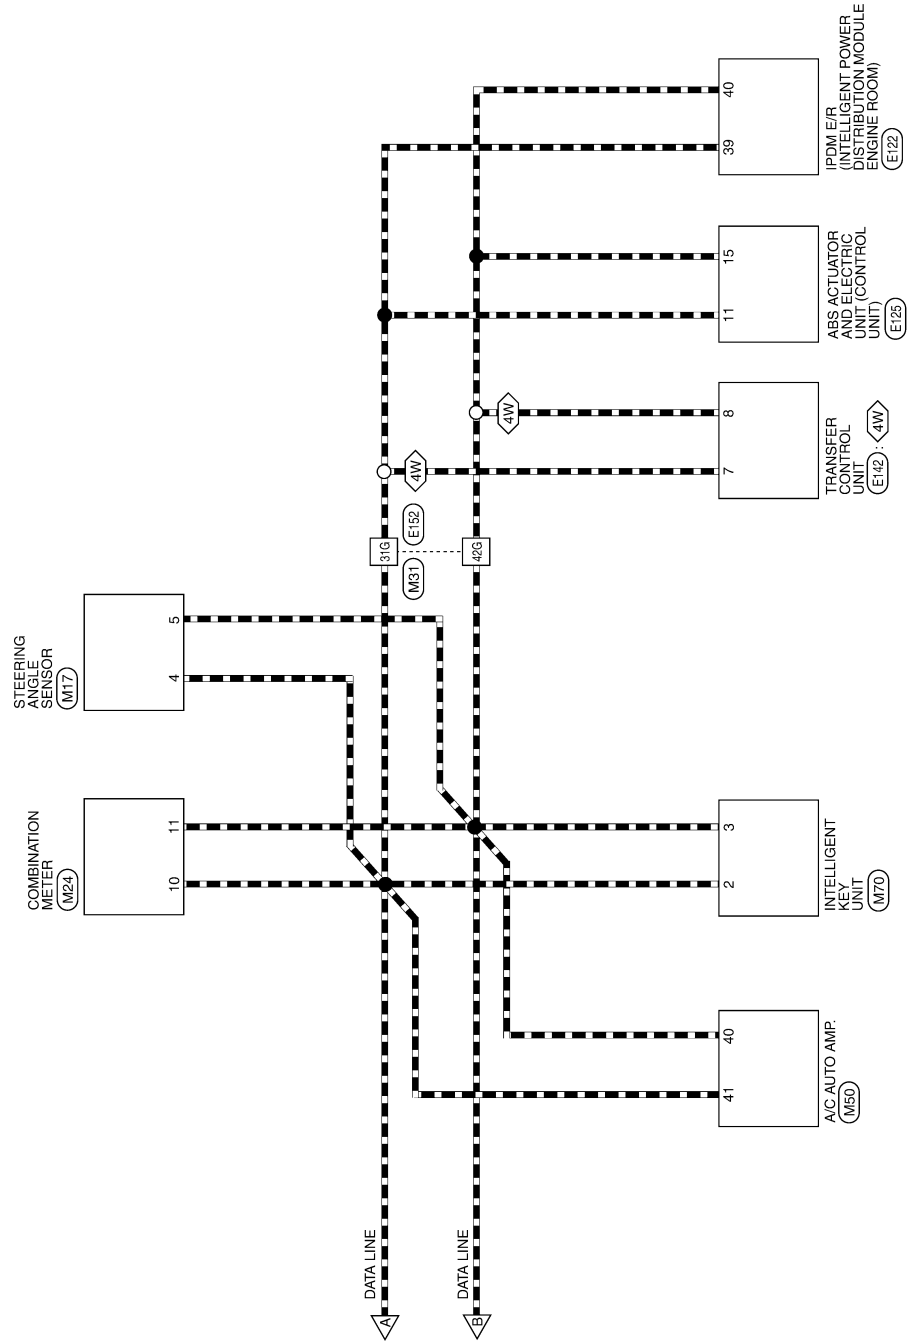

AAMWA0130GB


## CAN SYSTEM CONNECTORS

Connector No.	M17
Connector Name	STEERING ANGLE SENSOR
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
4	L	CAN-H
5	P	CAN-L

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
39	L	CAN-H
40	P	CAN-L

Connector No.	M22
Connector Name	DATA LINK CONNECTOR
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
6	L	-
14	P	-

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE

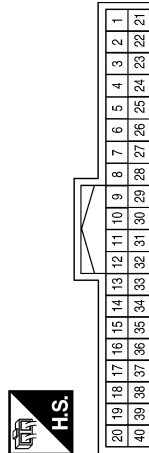


Terminal No.	Color of Wire	Signal Name
10	L	CAN-H
11	P	CAN-L

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

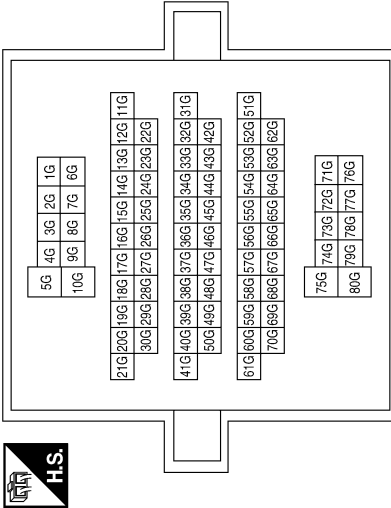

Terminal No.	Color of Wire	Signal Name
31G	L	-
42G	P	-

Connector No.	M35
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT
Connector Color	YELLOW



Terminal No.	Color of Wire	Signal Name
21	L	CAN-H
46	P	CAN-L


AAMIA0012GB

# CAN COMMUNICATION SYSTEM

< COMPONENT DIAGNOSIS >


[CAN]

Connector No.	M50
Connector Name	A/C AUTO AMP.
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
40	P	CAN-L
41	L	CAN-H

Connector No.	M45
Connector Name	AV CONTROL UNIT
Connector Color	WHITE

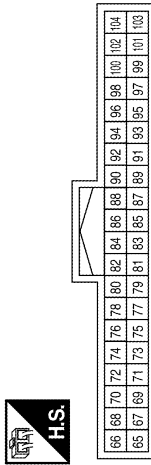


Terminal No.	Color of Wire	Signal Name
96	L	CAN-H
97	P	CAN-L

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	WHITE

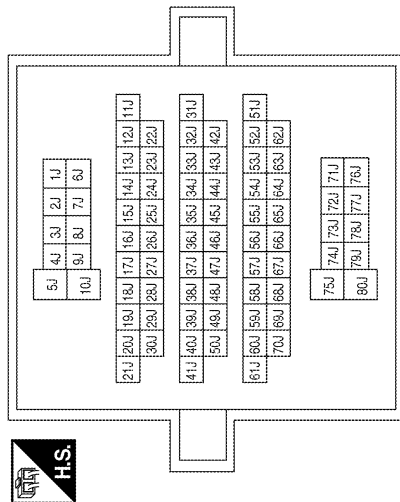


Terminal No.	Color of Wire	Signal Name
51J	L	--
52J	P	--

Connector No.	E16
Connector Name	ECM
Connector Color	BLACK

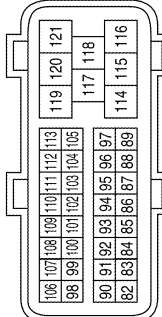


Terminal No.	Color of Wire	Signal Name
86	P	CAN-L
94	L	CAN-H

Connector No.	E5
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	L	--
5	L	--
14	P	--
15	P	--

Connector No.	M70
Connector Name	INTELLIGENT KEY UNIT
Connector Color	WHITE

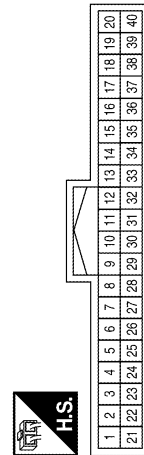

Terminal No.	Color of Wire	Signal Name
2	L	CAN-H
3	P	CAN-L

AAMIA0013GB




# CAN COMMUNICATION SYSTEM

< COMPONENT DIAGNOSIS >


[CAN]

Connector No.	E34
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
23	P	-
24	L	-

Connector No.	E125
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
11	L	CAN-H
15	P	CAN-L

Connector No.	E42
Connector Name	ICC SENSOR
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
2	L	CAN-H
3	P	CAN-L

Connector No.	E142
Connector Name	TRANSFER CONTROL UNIT
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
7	L	CAN-H
8	P	CAN-L

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
39	L	CAN-H
40	P	CAN-L

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

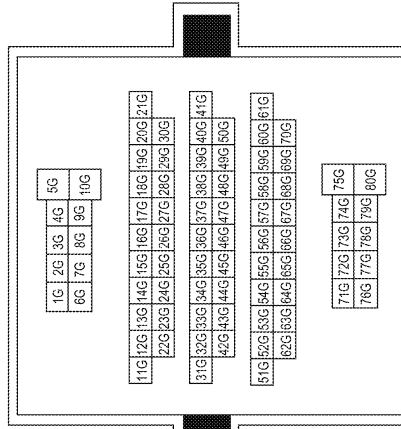

Terminal No.	Color of Wire	Signal Name
31G	L	-
42G	P	-


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
LAN  
N  
O  
P

# CAN COMMUNICATION SYSTEM

< COMPONENT DIAGNOSIS >


[CAN]

Connector No.	F502
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
1	BR	CAN-H
2	L/Y	CAN-L

Connector No.	F14
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
3	L	--
5	L	--
14	P	--
15	P	--

Connector No.	F9
Connector Name	A/T ASSEMBLY
Connector Color	GREEN




Terminal No.	Color of Wire	Signal Name
3	L	--
8	P	--

Connector No.	B40
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
23	P	--
24	L	--

Connector No.	B37
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
14	P	--
15	L	--

Connector No.	B13
Connector Name	ICC UNIT
Connector Color	WHITE

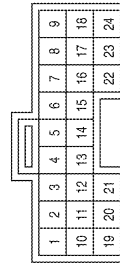

Terminal No.	Color of Wire	Signal Name
5	P	CAN-L
14	L	CAN-H


AAMIA0015GB

# CAN COMMUNICATION SYSTEM

< COMPONENT DIAGNOSIS >


[CAN]

Connector No.	B202
Connector Name	DRIVER SEAT CONTROL UNIT
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
3	L	CAN-H
19	P	CAN-L

Connector No.	B200
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
14	P	-
15	L	-

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

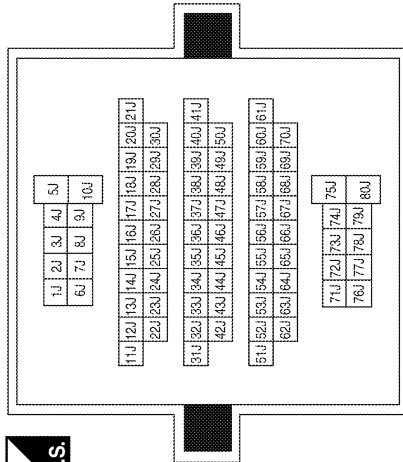

Terminal No.	Color of Wire	Signal Name
51J	L	-
52J	P	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
LAN  
N  
O  
P

# MALFUNCTION AREA CHART

< COMPONENT DIAGNOSIS >

[CAN]

## MALFUNCTION AREA CHART

### Main Line

INFOID:000000005146468

Malfunction area	Reference
Main line between TCM and driver seat control unit	<a href="#">LAN-61. "Diagnosis Procedure"</a>
Main line between TCM and ICC sensor	<a href="#">LAN-63. "Diagnosis Procedure"</a>
Main line between ICC sensor and ICC unit	<a href="#">LAN-64. "Diagnosis Procedure"</a>
Main line between ICC unit and driver seat control unit	<a href="#">LAN-65. "Diagnosis Procedure"</a>
Main line between driver seat control unit and AV control unit	<a href="#">LAN-66. "Diagnosis Procedure"</a>
Main line between AV control unit and data link connector	<a href="#">LAN-67. "Diagnosis Procedure"</a>
Main line between data link connector and combination meter	<a href="#">LAN-68. "Diagnosis Procedure"</a>
Main line between combination meter and ABS actuator and electric unit (control unit)	<a href="#">LAN-69. "Diagnosis Procedure"</a>
Main line between combination meter and transfer control unit	<a href="#">LAN-70. "Diagnosis Procedure"</a>
Main line between transfer control unit and ABS actuator and electric unit (control unit)	<a href="#">LAN-71. "Diagnosis Procedure"</a>

### Branch Line

INFOID:000000005146469

Malfunction area	Reference
ECM branch line circuit	<a href="#">LAN-72. "Diagnosis Procedure"</a>
TCM branch line circuit	<a href="#">LAN-73. "Diagnosis Procedure"</a>
ICC sensor branch line circuit	<a href="#">LAN-74. "Diagnosis Procedure"</a>
ICC unit branch line circuit	<a href="#">LAN-75. "Diagnosis Procedure"</a>
Driver seat control unit branch line circuit	<a href="#">LAN-76. "Diagnosis Procedure"</a>
AV control unit branch line circuit	<a href="#">LAN-77. "Diagnosis Procedure"</a>
BCM branch line circuit	<a href="#">LAN-78. "Diagnosis Procedure"</a>
Data link connector branch line circuit	<a href="#">LAN-79. "Diagnosis Procedure"</a>
A/C auto amp. branch line circuit	<a href="#">LAN-80. "Diagnosis Procedure"</a>
Intelligent Key unit branch line circuit	<a href="#">LAN-81. "Diagnosis Procedure"</a>
Combination meter branch line circuit	<a href="#">LAN-82. "Diagnosis Procedure"</a>
Steering angle sensor branch line circuit	<a href="#">LAN-83. "Diagnosis Procedure"</a>
Transfer control unit branch line circuit	<a href="#">LAN-84. "Diagnosis Procedure"</a>
ABS actuator and electric unit (control unit) branch line circuit	<a href="#">LAN-85. "Diagnosis Procedure"</a>
IPDM E/R branch line circuit	<a href="#">LAN-86. "Diagnosis Procedure"</a>

### Short Circuit

INFOID:000000005146470

Malfunction area	Reference
CAN communication circuit	<a href="#">LAN-87. "Diagnosis Procedure"</a>

# MAIN LINE BETWEEN TCM AND ADP CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

## MAIN LINE BETWEEN TCM AND ADP CIRCUIT

### Diagnosis Procedure

INFOID:000000005146471

#### 1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
  - Harness connector F14
  - Harness connector E5
  - Harness connector E34
  - Harness connector B40

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

#### 2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors F14 and E5.
2. Check the continuity between the harness connector terminals.

Connector No.	Terminal No.		Continuity
F14	3	5	Existed
	14	15	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the A/T assembly and the harness connector F14.

#### 3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors E34 and B40.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E5	5	E34	24	Existed
	15		23	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors E5 and E34.

#### 4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors B37 and B200.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B40	24	B37	15	Existed
	23		14	Existed

Is the inspection result normal?

YES (Present error)>>Check the following items again.

- Decision of CAN system type.
- Not received CONSULT-III data [SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR ("ECU list" included)].
- Procedure for detecting root cause.

YES (Past error)>>Error was detected in the main line between the TCM and the driver seat control unit.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

LAN

## MAIN LINE BETWEEN TCM AND ADP CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

---

NO >> Repair the main line between the harness connectors B40 and B37.

# MAIN LINE BETWEEN TCM AND LASER CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

## MAIN LINE BETWEEN TCM AND LASER CIRCUIT

### Diagnosis Procedure

INFOID:000000005146472

#### 1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
  - Harness connector F14
  - Harness connector E5

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair the terminal and connector.

#### 2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors F14 and E5.
2. Check the continuity between the harness connector terminals.

Connector No.	Terminal No.		Continuity
F14	3	5	Existed
	14	15	Existed

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair the main line between the A/T assembly and the harness connector F14.

#### 3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ICC sensor.
2. Check the continuity between the harness connector and the ICC sensor harness connector.

Harness connector		ICC sensor harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E5	5	E42	2	Existed
	15		3	Existed

Is the inspection result normal?

- YES (Present error)>>Check the following items again.
- Decision of CAN system type.
  - Not received CONSULT-III data [SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR (“ECU list” included)].
  - Procedure for detecting root cause.

- YES (Past error)>>Error was detected in the main line between the A/T assembly and the ICC sensor.  
NO >> Repair the main line between the harness connector E5 and the ICC sensor.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

LAN

# MAIN LINE BETWEEN LASER AND ICC CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

## MAIN LINE BETWEEN LASER AND ICC CIRCUIT

### Diagnosis Procedure

INFOID:000000005146473

#### 1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
  - Harness connector E34
  - Harness connector B40

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

#### 2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
  - ICC sensor
  - Harness connectors E34 and B40
2. Check the continuity between the ICC sensor harness connector and the harness connector.

ICC sensor harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E42	2	E34	24	Existed
	3		23	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the ICC sensor and the harness connector E34.

#### 3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ICC unit.
2. Check the continuity between the harness connector and the ICC unit harness connector.

Harness connector		ICC unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B40	24	B13	14	Existed
	23		5	Existed

Is the inspection result normal?

YES (Present error)>>Check the following items again.

- Decision of CAN system type.
- Not received CONSULT-III data [SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR ("ECU list" included)].
- Procedure for detecting root cause.

YES (Past error)>>Error was detected in the main line between the ICC sensor and the ICC unit.

NO >> Repair the main line between the harness connector B40 and the ICC unit.



# MAIN LINE BETWEEN ICC AND ADP CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

## MAIN LINE BETWEEN ICC AND ADP CIRCUIT

### Diagnosis Procedure

INFOID:000000005146474

#### 1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
  - ECM
  - ICC unit
  - Harness connectors B37 and B200
4. Check the continuity between the ICC unit harness connector and the harness connector.

ICC unit harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B13	14	B37	15	Existed
	5		14	Existed

#### Is the inspection result normal?

YES (Present error)>>Check the following items again.

- Decision of CAN system type.
- Not received CONSULT-III data [SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR (“ECU list” included)].
- Procedure for detecting root cause.

YES (Past error)>>Error was detected in the main line between the ICC unit and the driver seat control unit.

NO >> Repair the main line between the ICC unit and the harness connector B37.

LAN

# MAIN LINE BETWEEN ADP AND AV CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

## MAIN LINE BETWEEN ADP AND AV CIRCUIT

### Diagnosis Procedure

INFOID:000000005146475

#### 1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
  - Harness connector B69
  - Harness connector M40

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

#### 2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
  - Harness connectors B200 and B37
  - Harness connectors B69 and M40
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B37	15	B69	51J	Existed
	14		52J	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the harness connectors B37 and B69.

#### 3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of AV control unit.
2. Check the continuity between the harness connector and the AV control unit harness connector.

Harness connector		AV control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M40	51J	M45	96	Existed
	52J		97	Existed

Is the inspection result normal?

YES (Present error)>>Check the following items again.

- Decision of CAN system type.
- Not received CONSULT-III data [SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR ("ECU list" included)].
- Procedure for detecting root cause.

YES (Past error)>>Error was detected in the main line between the driver seat control unit and the AV control unit.

NO >> Repair the main line between the harness connector M40 and the AV control unit.

# MAIN LINE BETWEEN AV AND DLC CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

## MAIN LINE BETWEEN AV AND DLC CIRCUIT

### Diagnosis Procedure

INFOID:000000005146476

#### 1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
  - ECM
  - AV control unit
4. Check the continuity between the AV control unit harness connector and the data link connector.

AV control unit harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M45	96	M22	6	Existed
	97		14	Existed

#### Is the inspection result normal?

YES (Present error)>>Check the following items again.

- Decision of CAN system type.
- Not received CONSULT-III data [SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR (“ECU list” included)].
- Procedure for detecting root cause.

YES (Past error)>>Error was detected in the main line between the AV control unit and the data link connector.

NO >> Repair the main line between the AV control unit and the data link connector.

LAN

# MAIN LINE BETWEEN DLC AND M&A CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

## MAIN LINE BETWEEN DLC AND M&A CIRCUIT

### Diagnosis Procedure

INFOID:000000005146477

#### 1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
  - ECM
  - Combination meter
4. Check the continuity between the data link connector and the combination meter harness connector.

Data link connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M22	6	M24	10	Existed
	14		11	Existed

#### Is the inspection result normal?

YES (Present error)>>Check the following items again.

- Decision of CAN system type.
- Not received CONSULT-III data [SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR ("ECU list" included)].
- Procedure for detecting root cause.

YES (Past error)>>Error was detected in the main line between the data link connector and the combination meter.

NO >> Repair the main line between the data link connector and the combination meter.

# MAIN LINE BETWEEN M&A AND ABS CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

## MAIN LINE BETWEEN M&A AND ABS CIRCUIT

### Diagnosis Procedure

INFOID:000000005156117

#### INSPECTION PROCEDURE

##### 1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
  - Harness connector M31
  - Harness connector E152

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

##### 2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
  - Combination meter
  - Harness connectors M31 and E152
2. Check the continuity between the combination meter harness connector and the harness connector.

Combination meter harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M24	10	M31	31G	Existed
	11		42G	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the combination meter and the harness connector M31.

##### 3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the continuity between the harness connector and the ABS actuator and electric unit (control unit) harness connector.

Harness connector		ABS actuator and electric unit (control unit) harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E152	31G	E125	11	Existed
	42G		15	Existed

Is the inspection result normal?

YES (Present error)>>Check the following items again.

- Decision of CAN system type.
- Not received CONSULT-III data [SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR (“ECU list” included)].
- Procedure for detecting root cause.

YES (Past error)>>Error was detected in the main line between the combination meter and the ABS actuator and electric unit (control unit).

NO >> Repair the main line between the harness connector E152 and the ABS actuator and electric unit (control unit).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

LAN

# MAIN LINE BETWEEN M&A AND 4WD CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

## MAIN LINE BETWEEN M&A AND 4WD CIRCUIT

### Diagnosis Procedure

INFOID:000000005146478

#### 1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
  - Harness connector M31
  - Harness connector E152

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

#### 2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
  - Combination meter
  - Harness connectors M31 and E152
2. Check the continuity between the combination meter harness connector and the harness connector.

Combination meter harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M24	10	M31	31G	Existed
	11		42G	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the combination meter and the harness connector M31.

#### 3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of transfer control unit.
2. Check the continuity between the harness connector and the transfer control unit harness connector.

Harness connector		Transfer control unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E152	31G	E142	7	Existed
	42G		8	Existed

Is the inspection result normal?

YES (Present error)>>Check the following items again.

- Decision of CAN system type.
- Not received CONSULT-III data [SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR ("ECU list" included)].
- Procedure for detecting root cause.

YES (Past error)>>Error was detected in the main line between the combination meter and the transfer control unit.

NO >> Repair the main line between the harness connector E152 and the transfer control unit.

# MAIN LINE BETWEEN 4WD AND ABS CIRCUIT

[CAN]

< COMPONENT DIAGNOSIS >

## MAIN LINE BETWEEN 4WD AND ABS CIRCUIT

### Diagnosis Procedure

INFOID:000000005152915

#### 1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
  - ECM
  - Transfer control unit
  - ABS actuator and electric unit (control unit)
4. Check the continuity between the transfer control unit harness connector and the ABS actuator and electric unit (control unit) harness connector.

Transfer control unit harness connector		ABS actuator and electric unit (control unit) harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E142	7	E125	11	Existed
	8		15	Existed

#### Is the inspection result normal?

YES (Present error)>>Check the following items again.

- Decision of CAN system type.
- Not received CONSULT-III data [SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR (“ECU list” included)].
- Procedure for detecting root cause.

YES (Past error)>>Error was detected in the main line between the transfer control unit and the ABS actuator and electric unit (control unit).

NO >> Repair the main line between the transfer control unit and the ABS actuator and electric unit (control unit).

LAN

# ECM BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

## ECM BRANCH LINE CIRCUIT

### Diagnosis Procedure

INFOID:000000005146479

#### 1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
  - ECM
  - Harness connector E5
  - Harness connector F14

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

#### 2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.

ECM harness connector		Resistance ( $\Omega$ )
Connector No.	Terminal No.	
E16	94                      86	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ECM branch line.

#### 3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to [EC-82, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the ECM. Refer to [EC-17, "Procedure After Replacing ECM"](#).

YES (Past error)>>Error was detected in the ECM branch line.

NO >> Repair the power supply and the ground circuit.



# TCM BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

## TCM BRANCH LINE CIRCUIT

### Diagnosis Procedure

INFOID:000000005152919

#### 1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the A/T assembly for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair the terminal and connector.

#### 2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/T assembly.
2. Check the resistance between the A/T assembly harness connector terminals.

A/T assembly harness connector			Resistance (Ω)
Connector No.	Terminal No.		
F9	3	8	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.  
NO >> Repair the TCM branch line.

#### 3. CHECK HARNESS FOR OPEN CIRCUIT

1. Remove the control valve with TCM. Refer to [TM-172, "Control Valve with TCM and A/T Fluid Temperature Sensor 2 and Plug"](#).
2. Disconnect the connector of TCM.
3. Check the continuity between the A/T assembly connector and the TCM harness connector.

A/T assembly connector Terminal No.	TCM harness connector		Continuity
	Connector No.	Terminal No.	
3	F502	1	Existed
8		2	Existed

Is the inspection result normal?

- YES >> GO TO 4.  
NO >> Repair the harness between the A/T assembly connector and the TCM harness connector.

#### 4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-94, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the control valve with TCM. Refer to [TM-172, "Control Valve with TCM and A/T Fluid Temperature Sensor 2 and Plug"](#).  
YES (Past error)>>Error was detected in the TCM branch line.  
NO >> Repair the power supply and the ground circuit.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
LAN  
N  
O  
P

# LASER BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

## LASER BRANCH LINE CIRCUIT

### Diagnosis Procedure

INFOID:000000005146481

#### 1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ICC sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair the terminal and connector.

#### 2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ICC sensor.
2. Check the resistance between the ICC sensor harness connector terminals.

ICC sensor harness connector			Resistance ( $\Omega$ )
Connector No.	Terminal No.		
E42	2	3	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.  
NO >> Repair the ICC sensor branch line.

#### 3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ICC sensor. Refer to [CCS-48, "Wiring Diagram"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ICC sensor. Refer to [CCS-72, "ICC Sensor"](#).  
YES (Past error)>>Error was detected in the ICC sensor branch line.  
NO >> Repair the power supply and the ground circuit.

# ICC BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

## ICC BRANCH LINE CIRCUIT

### Diagnosis Procedure

INFOID:000000005146482

#### 1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ICC unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair the terminal and connector.

#### 2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ICC unit.
2. Check the resistance between the ICC unit harness connector terminals.

ICC unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B13	14	5	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.  
NO >> Repair the ICC unit branch line.

#### 3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ICC unit. Refer to [CCS-48, "Wiring Diagram"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ICC unit. Refer to [CCS-71, "ICC Unit"](#).  
YES (Past error)>>Error was detected in the ICC unit branch line.  
NO >> Repair the power supply and the ground circuit.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

LAN

N  
O  
P

# ADP BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

## ADP BRANCH LINE CIRCUIT

### Diagnosis Procedure

INFOID:000000005146483

#### 1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
  - Driver seat control unit
  - Harness connector B200
  - Harness connector B37

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

#### 2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of driver seat control unit.
2. Check the resistance between the driver seat control unit harness connector terminals.

Driver seat control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B202	3	19	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the driver seat control unit branch line.

#### 3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the driver seat control unit. Refer to [ADP-47, "DRIVER SEAT CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the driver seat control unit. Refer to [ADP-174, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the driver seat control unit branch line.

NO >> Repair the power supply and the ground circuit.

# AV BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

## AV BRANCH LINE CIRCUIT

### Diagnosis Procedure

INFOID:000000005146484

#### 1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the AV control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair the terminal and connector.

#### 2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
2. Check the resistance between the AV control unit harness connector terminals.

AV control unit harness connector			Resistance ( $\Omega$ )
Connector No.	Terminal No.		
M45	96	97	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.  
NO >> Repair the AV control unit branch line.

#### 3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to [AV-68, "AV CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the AV control unit. Refer to [AV-169, "Removal and Installation"](#).  
YES (Past error)>>Error was detected in the AV control unit branch line.  
NO >> Repair the power supply and the ground circuit.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

LAN

N  
O  
P

# BCM BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

## BCM BRANCH LINE CIRCUIT

### Diagnosis Procedure

INFOID:000000005146485

#### 1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair the terminal and connector.

#### 2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M18	39	40	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.  
NO >> Repair the BCM branch line.

#### 3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-33. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to [BCS-59. "Removal and Installation"](#).  
YES (Past error)>>Error was detected in the BCM branch line.  
NO >> Repair the power supply and the ground circuit.

# DLC BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

## DLC BRANCH LINE CIRCUIT

### Diagnosis Procedure

INFOID:000000005146486

#### 1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

#### 2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M22	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check the following items again.

- Decision of CAN system type.
- Not received CONSULT-III data [SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR (“ECU list” included)].
- Procedure for detecting root cause.

YES (Past error)>>Error was detected in the data link connector branch line circuit.

NO >> Repair the data link connector branch line.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

LAN

N  
O  
P

# HVAC BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

## HVAC BRANCH LINE CIRCUIT

### Diagnosis Procedure

INFOID:000000005146487

#### 1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the A/C auto amp. for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair the terminal and connector.

#### 2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/C auto amp.
2. Check the resistance between the A/C auto amp. harness connector terminals.

A/C auto amp. harness connector			Resistance ( $\Omega$ )
Connector No.	Terminal No.		
M50	41	40	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.  
NO >> Repair the A/C auto amp. branch line.

#### 3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the A/C auto amp. Refer to [HAC-87, "A/C Auto Amp Power and Ground Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the A/C auto amp. Refer to [VTL-7, "Removal and Installation"](#).  
YES (Past error)>>Error was detected in the A/C auto amp. branch line.  
NO >> Repair the power supply and the ground circuit.



# I-KEY BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

## I-KEY BRANCH LINE CIRCUIT

### Diagnosis Procedure

INFOID:000000005146488

#### 1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the Intelligent Key unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair the terminal and connector.

#### 2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of Intelligent Key unit.
2. Check the resistance between the Intelligent Key unit harness connector terminals.

Intelligent Key unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M70	2	3	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.  
NO >> Repair the Intelligent Key unit branch line.

#### 3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the Intelligent Key unit. Refer to [DLK-68, "INTELLIGENT KEY UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the Intelligent Key unit. Refer to [SEC-120, "Removal and Installation"](#).  
YES (Past error)>>Error was detected in the Intelligent Key unit branch line.  
NO >> Repair the power supply and the ground circuit.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

LAN

N  
O  
P

# M&A BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

## M&A BRANCH LINE CIRCUIT

### Diagnosis Procedure

INFOID:000000005146489

#### 1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair the terminal and connector.

#### 2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance ( $\Omega$ )
Connector No.	Terminal No.		
M24	10	11	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.  
NO >> Repair the combination meter branch line.

#### 3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to [MWI-28, "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the combination meter. Refer to [MWI-100, "Removal and Installation"](#).  
YES (Past error)>>Error was detected in the combination meter branch line.  
NO >> Repair the power supply and the ground circuit.

# STRG BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

## STRG BRANCH LINE CIRCUIT

### Diagnosis Procedure

INFOID:000000005146490

#### 1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair the terminal and connector.

#### 2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M17	4	5	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.  
NO >> Repair the steering angle sensor branch line.

#### 3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to [BRC-92, "Wiring Diagram - BRAKE CONTROL SYSTEM -"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-118, "Removal and Installation"](#).  
YES (Past error)>>Error was detected in the steering angle sensor branch line.  
NO >> Repair the power supply and the ground circuit.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

LAN

N  
O  
P

# 4WD BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

## 4WD BRANCH LINE CIRCUIT

### Diagnosis Procedure

INFOID:000000005146491

#### 1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the transfer control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair the terminal and connector.

#### 2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of transfer control unit.
2. Check the resistance between the transfer control unit harness connector terminals.

Transfer control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E142	7	8	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.  
NO >> Repair the transfer control unit branch line.

#### 3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the transfer control unit. Refer to [DLN-22, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the transfer control unit. Refer to [DLN-130, "Removal and Installation"](#).  
YES (Past error)>>Error was detected in the transfer control unit branch line.  
NO >> Repair the power supply and the ground circuit.

# ABS BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

## ABS BRANCH LINE CIRCUIT

### Diagnosis Procedure

INFOID:000000005146492

#### 1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair the terminal and connector.

#### 2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E125	11	15	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.  
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

#### 3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-34, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-116, "Removal and Installation"](#).  
YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.  
NO >> Repair the power supply and the ground circuit.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

LAN

# IPDM-E BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

## IPDM-E BRANCH LINE CIRCUIT

### Diagnosis Procedure

INFOID:000000005146493

#### 1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair the terminal and connector.

#### 2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E122	39	40	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.  
NO >> Repair the IPDM E/R branch line.

#### 3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-18, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-35, "Removal and Installation of IPDM E/R"](#).  
YES (Past error)>>Error was detected in the IPDM E/R branch line.  
NO >> Repair the power supply and the ground circuit.

# CAN COMMUNICATION CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

## CAN COMMUNICATION CIRCUIT

### Diagnosis Procedure

INFOID:000000005146494

#### 1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication system.
4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair the terminal and connector.

#### 2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M22	6 14	Not existed

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Check the harness and repair the root cause.

#### 3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M22	6		Not existed
	14		Not existed

Is the inspection result normal?

- YES >> GO TO 4.  
NO >> Check the harness and repair the root cause.

#### 4.CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.

ECM		Resistance ( $\Omega$ )
Terminal No.		
94	86	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.


IPDM E/R		Resistance ( $\Omega$ )
Terminal No.		
39	40	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 5.  
NO >> Replace the ECM and/or the IPDM E/R.

#### 5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

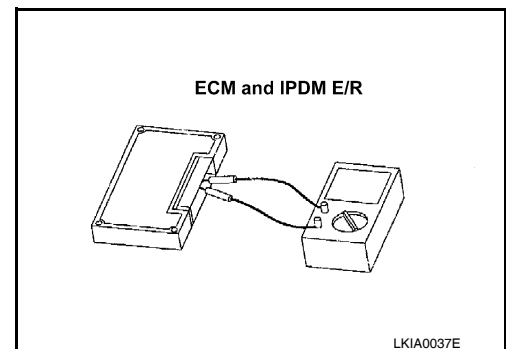

LKIA0037E

# CAN COMMUNICATION CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

---

## Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

## 6.CHECK UNIT REPRODUCTION

---

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication system.

**NOTE:**

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

**NOTE:**

Although unit-related error symptoms occur, do not confuse them with other symptoms.

## Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.