

# PWC

## SECTION

### POWER WINDOW CONTROL SYSTEM

## CONTENTS

<b>BASIC INSPECTION</b> .....	4	REAR POWER WINDOW SWITCH : Description.....	15
<b>DIAGNOSIS AND REPAIR WORKFLOW</b> .....	4	REAR POWER WINDOW SWITCH : Component	
Work Flow .....	4	Function Check .....	15
<b>FUNCTION DIAGNOSIS</b> .....	5	REAR POWER WINDOW SWITCH : Diagnosis	
<b>POWER WINDOW SYSTEM</b> .....	5	Procedure .....	15
System Diagram .....	5	REAR POWER WINDOW SWITCH : Component	
System Description .....	5	Inspection .....	16
Component Parts Location .....	8	<b>POWER WINDOW MOTOR</b> .....	17
Component Description .....	8	<b>DRIVER SIDE</b> .....	17
<b>DIAGNOSIS SYSTEM (BCM)</b> .....	10	DRIVER SIDE : Description .....	17
<b>COMMON ITEM</b> .....	10	DRIVER SIDE : Component Function Check .....	17
COMMON ITEM : CONSULT-III Function (BCM -		DRIVER SIDE : Diagnosis Procedure .....	17
COMMON ITEM) .....	10	DRIVER SIDE : Component Inspection .....	18
<b>RETAINED PWR</b> .....	10	<b>PASSENGER SIDE</b> .....	18
RETAINED PWR : CONSULT-III Function (BCM -		PASSENGER SIDE : Description .....	18
RETAINED PWR) .....	11	PASSENGER SIDE : Component Function Check	18
<b>COMPONENT DIAGNOSIS</b> .....	12	.....	18
<b>POWER SUPPLY AND GROUND CIRCUIT</b> .....	12	PASSENGER SIDE : Diagnosis Procedure .....	18
<b>POWER WINDOW MAIN SWITCH</b> .....	12	PASSENGER SIDE : Component Inspection .....	19
POWER WINDOW MAIN SWITCH : Description.....	12	<b>REAR LH</b> .....	20
POWER WINDOW MAIN SWITCH : Component		REAR LH : Description .....	20
Function Check .....	12	REAR LH : Component Function Check .....	20
POWER WINDOW MAIN SWITCH : Diagnosis		REAR LH : Diagnosis Procedure .....	20
Procedure .....	12	REAR LH : Component Inspection .....	21
<b>FRONT POWER WINDOW SWITCH</b> .....	13	<b>REAR RH</b> .....	21
FRONT POWER WINDOW SWITCH : Descrip-		REAR RH : Description .....	21
tion .....	13	REAR RH : Component Function Check .....	21
FRONT POWER WINDOW SWITCH : Compo-		REAR RH : Diagnosis Procedure .....	21
nent Function Check .....	13	REAR RH : Component Inspection .....	22
FRONT POWER WINDOW SWITCH : Diagnosis		<b>ENCODER</b> .....	23
Procedure .....	14	<b>DRIVER SIDE</b> .....	23
<b>REAR POWER WINDOW SWITCH</b> .....	15	DRIVER SIDE : Description .....	23
		DRIVER SIDE : Component Function Check .....	23
		DRIVER SIDE : Diagnosis Procedure .....	23
		<b>PASSENGER SIDE</b> .....	25

PASSENGER SIDE : Description .....	25	<b>REAR POWER VENT WINDOW MOTOR RH</b>	
PASSENGER SIDE : Component Function Check .....	25	<b>CIRCUIT CHECK .....</b>	<b>46</b>
PASSENGER SIDE : Diagnosis Procedure .....	25	Description .....	46
		Diagnosis Procedure .....	46
<b>REAR LH .....</b>	<b>28</b>	<b>REAR POWER VENT WINDOW RELAY</b>	
REAR LH : Description .....	28	<b>(OPEN) CHECK .....</b>	<b>47</b>
REAR LH : Component Function Check .....	28	Description .....	47
REAR LH : Diagnosis Procedure .....	28	Diagnosis Procedure .....	47
<b>REAR RH .....</b>	<b>30</b>	<b>REAR POWER VENT WINDOW RELAY</b>	
REAR RH : Description .....	31	<b>(CLOSE) CHECK .....</b>	<b>49</b>
REAR RH : Component Function Check .....	31	Description .....	49
REAR RH : Diagnosis Procedure .....	31	Diagnosis Procedure .....	49
<b>DOOR SWITCH .....</b>	<b>34</b>	<b>ECU DIAGNOSIS .....</b>	<b>51</b>
Description .....	34	<b>POWER WINDOW MAIN SWITCH .....</b>	<b>51</b>
Component Function Check .....	34	Reference Value .....	51
Diagnosis Procedure .....	34	Wiring Diagram .....	53
Component Inspection .....	35	Fail Safe .....	64
<b>DOOR KEY CYLINDER SWITCH .....</b>	<b>36</b>	<b>FRONT POWER WINDOW SWITCH .....</b>	<b>66</b>
Description .....	36	Reference Value .....	66
Component Function Check .....	36	Wiring Diagram .....	68
Diagnosis Procedure .....	36	Fail Safe .....	79
Component Inspection .....	37	<b>BCM (BODY CONTROL MODULE) .....</b>	<b>81</b>
<b>POWER WINDOW SERIAL LINK .....</b>	<b>39</b>	Reference Value .....	81
<b>POWER WINDOW MAIN SWITCH .....</b>	<b>39</b>	Terminal Layout .....	84
POWER WINDOW MAIN SWITCH : Description ...	39	Physical Values .....	84
POWER WINDOW MAIN SWITCH : Component		Wiring Diagram .....	90
Function Check .....	39	Fail Safe .....	94
POWER WINDOW MAIN SWITCH : Diagnosis		DTC Inspection Priority Chart .....	95
Procedure .....	39	DTC Index .....	95
<b>FRONT POWER WINDOW SWITCH .....</b>	<b>40</b>	<b>SYMPTOM DIAGNOSIS .....</b>	<b>97</b>
FRONT POWER WINDOW SWITCH : Descrip-		<b>NONE OF THE POWER WINDOWS CAN BE</b>	
tion .....	40	<b>OPERATED USING ANY SWITCH .....</b>	<b>97</b>
FRONT POWER WINDOW SWITCH : Compo-		Diagnosis Procedure .....	97
nent Function Check .....	40	<b>DRIVER SIDE POWER WINDOW ALONE</b>	
FRONT POWER WINDOW SWITCH : Diagnosis		<b>DOES NOT OPERATE .....</b>	<b>98</b>
Procedure .....	41	Diagnosis Procedure .....	98
<b>REAR POWER WINDOW SWITCH .....</b>	<b>42</b>	<b>FRONT PASSENGER SIDE POWER WIN-</b>	
REAR POWER WINDOW SWITCH : Power Win-		<b>DOW ALONE DOES NOT OPERATE .....</b>	<b>99</b>
dow Serial Link Check Rear LH or RH .....	42	Diagnosis Procedure .....	99
<b>POWER WINDOW LOCK SWITCH .....</b>	<b>43</b>	<b>REAR LH SIDE POWER WINDOW ALONE</b>	
Description .....	43	<b>DOES NOT OPERATE .....</b>	<b>100</b>
Component Function Check .....	43	Diagnosis Procedure .....	100
<b>REAR POWER VENT WINDOW SWITCH</b>		<b>REAR RH SIDE POWER WINDOW ALONE</b>	
<b>CIRCUIT CHECK .....</b>	<b>44</b>	<b>DOES NOT OPERATE .....</b>	<b>101</b>
Description .....	44	Diagnosis Procedure .....	101
Diagnosis Procedure .....	44	<b>ANTI-PINCH SYSTEM DOES NOT OPERATE</b>	
<b>REAR POWER VENT WINDOW MOTOR LH</b>		<b>NORMALLY (DRIVER SIDE) .....</b>	<b>102</b>
<b>CIRCUIT CHECK .....</b>	<b>45</b>	Diagnosis Procedure .....	102
Description .....	45		
Diagnosis Procedure .....	45		

<b>ANTI-PINCH SYSTEM DOES NOT OPERATE NORMALLY (PASSENGER SIDE) .....</b>	<b>103</b>	<b>DOES NOT OPERATE BY KEY CYLINDER SWITCH .....</b>	<b>111</b>	<b>A</b>
Diagnosis Procedure .....	103	Diagnosis Procedure .....	111	
<b>ANTI-PINCH SYSTEM DOES NOT OPERATE NORMALLY (REAR LH SIDE) .....</b>	<b>104</b>	<b>KEYLESS POWER WINDOW DOWN DOES NOT OPERATE .....</b>	<b>112</b>	<b>B</b>
Diagnosis Procedure .....	104	Diagnosis Procedure .....	112	
<b>ANTI-PINCH SYSTEM DOES NOT OPERATE NORMALLY (REAR RH SIDE) .....</b>	<b>105</b>	<b>POWER WINDOW LOCK SWITCH DOES NOT FUNCTION .....</b>	<b>113</b>	<b>C</b>
Diagnosis Procedure .....	105	Diagnosis Procedure .....	113	
<b>AUTO OPERATION DOES NOT OPERATE BUT MANUAL OPERATES NORMALLY (DRIVER SIDE) .....</b>	<b>106</b>	<b>REAR POWER VENT WINDOWS DO NOT OPERATE .....</b>	<b>114</b>	<b>D</b>
Diagnosis Procedure .....	106	Diagnosis Procedure .....	114	
<b>AUTO OPERATION DOES NOT OPERATE BUT MANUAL OPERATES NORMALLY (PASSENGER SIDE) .....</b>	<b>107</b>	<b>PRECAUTION .....</b>	<b>115</b>	<b>E</b>
Diagnosis Procedure .....	107	<b>PRECAUTIONS .....</b>	<b>115</b>	<b>F</b>
<b>AUTO OPERATION DOES NOT OPERATE BUT MANUAL OPERATES NORMALLY (REAR LH SIDE) .....</b>	<b>108</b>	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	115	<b>G</b>
Diagnosis Procedure .....	108	Precaution Necessary for Steering Wheel Rotation After Battery Disconnect .....	115	
<b>AUTO OPERATION DOES NOT OPERATE BUT MANUAL OPERATES NORMALLY (REAR RH SIDE) .....</b>	<b>109</b>	<b>ON-VEHICLE REPAIR .....</b>	<b>117</b>	<b>H</b>
Diagnosis Procedure .....	109	<b>POWER WINDOW MAIN SWITCH .....</b>	<b>117</b>	<b>I</b>
<b>POWER WINDOW RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY .. 110</b>	<b>110</b>	Removal and Installation .....	117	
Diagnosis Procedure .....	110	<b>FRONT POWER WINDOW SWITCH .....</b>	<b>118</b>	<b>J</b>
		Removal and Installation .....	118	
		<b>REAR POWER WINDOW SWITCH .....</b>	<b>119</b>	
		Removal and Installation .....	119	
		<b>REAR POWER VENT WINDOW SWITCH .....</b>	<b>120</b>	<b>PWC</b>
		Removal and Installation .....	120	

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORKFLOW

#### Work Flow

INFOID:000000005147164

#### DETAILED FLOW

##### 1. OBTAIN INFORMATION ABOUT SYMPTOM

Interview the customer to obtain the malfunction information (conditions and environment when the malfunction occurred) as much as possible when the customer brings the vehicle in.

>> GO TO 2

##### 2. REPRODUCE THE MALFUNCTION INFORMATION

Check the malfunction on the vehicle that the customer describes.  
Inspect the relation of the symptoms and the condition when the symptoms occur.

>> GO TO 3

##### 3. IDENTIFY THE MALFUNCTIONING SYSTEM WITH "SYMPTOM DIAGNOSIS"

Use "Symptom diagnosis" from the symptom inspection result in step 2 and then identify where to start performing the diagnosis based on possible causes and symptoms.

>> GO TO 4

##### 4. IDENTIFY THE MALFUNCTIONING PARTS WITH "COMPONENT DIAGNOSIS"

Perform the diagnosis with "Component diagnosis" of the applicable system.

>> GO TO 5

##### 5. REPAIR OR REPLACE THE MALFUNCTIONING PARTS

Repair or replace the specified malfunctioning parts.

>> GO TO 6

##### 6. FINAL CHECK

Check that malfunctions are not reproduced when obtaining the malfunction information from the customer, referring to the symptom inspection result in step 2.

Are the malfunctions corrected?

- YES >> Inspection End.
- NO >> Refer to [GI-38, "Intermittent Incident"](#).

# POWER WINDOW SYSTEM

< FUNCTION DIAGNOSIS >


## FUNCTION DIAGNOSIS

### POWER WINDOW SYSTEM

#### System Diagram

INFOID:000000005147165

#### POWER WINDOW ANTI-PINCH SYSTEM

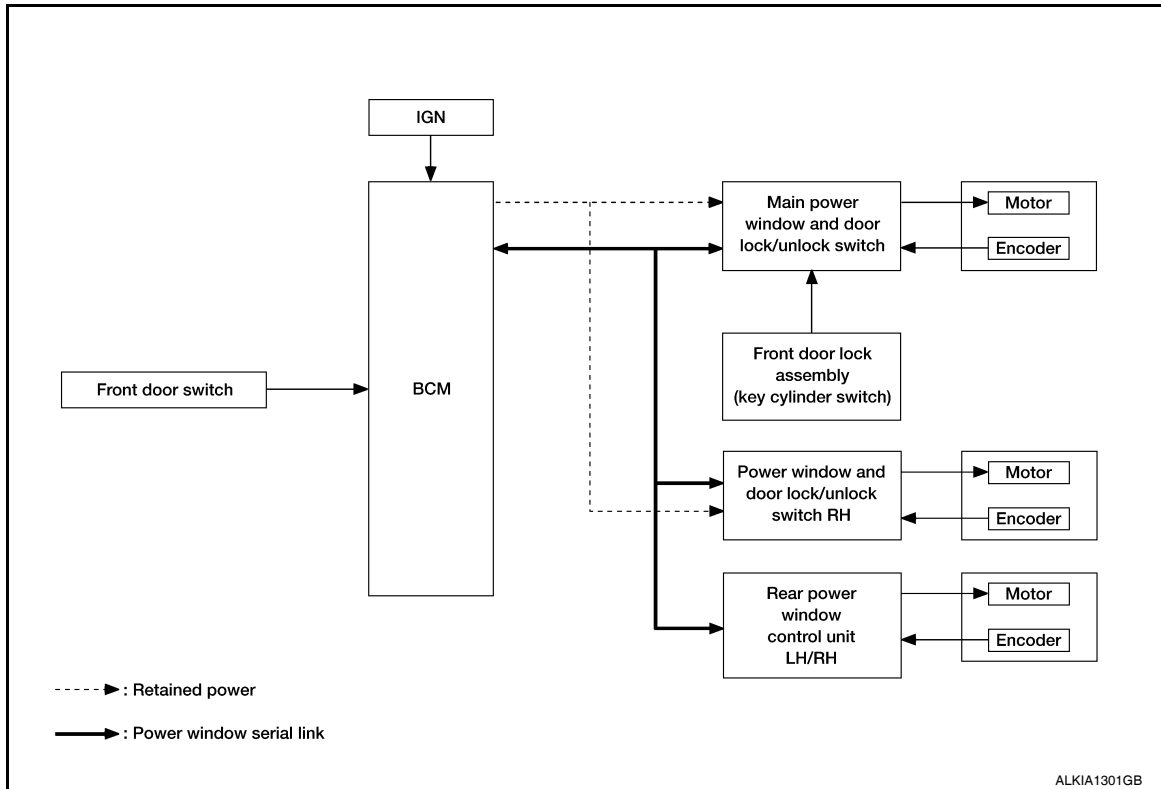

#### System Description

INFOID:000000005147166

#### POWER WINDOW MAIN SWITCH INPUT/OUTPUT SIGNAL CHART

PWC

Item	Input signal to main power window and door lock/unlock switch	Main power window and door lock/unlock switch function	Actuator
Key cylinder switch	LOCK/UNLOCK signal (more than 1.5 seconds over)	Power window control	Front power window motor
Encoder	Encoder pulse signal		
Main power window and door lock/unlock switch	Front power window motor LH UP/DOWN signal		
Power window and door lock/unlock switch RH	Front power window motor RH UP/DOWN signal		
BCM	RAP signal		Rear power window motor
Rear power window control unit	Rear power window motor UP/DOWN signal		

#### POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH INPUT/OUTPUT SIGNAL CHART

# POWER WINDOW SYSTEM

## < FUNCTION DIAGNOSIS >

Item	Input signal to front power window switch	Front power window switch function	Actuator
Power window and door lock/unlock switch RH	Front power window motor RH UP/DOWN signal	Power window control	Front power window motor RH
Encoder	Encoder pulse signal		
BCM	RAP signal		

## REAR POWER WINDOW CONTROL INPUT/OUTPUT SIGNAL CHART

Item	Input signal to front power window switch	Front power window switch function	Actuator
Main power window and door lock/unlock switch	Rear power window motor LH/RH UP/DOWN signal	Power window control	Rear power window motor LH/RH
Rear power window switch LH/RH	Rear power window motor LH/RH UP/DOWN signal		
Rear power window control unit LH/RH	Rear power window motor control LH RH UP/DOWN signal		
Encoder	Encoder pulse signal		
BCM	Power window serial link signal		

## POWER WINDOW OPERATION

- Power window system is operable during the retained power operation timer after turning ignition switch ON and OFF.
- Main power window and door lock/unlock switch can open/close all windows.
- Power window and door lock unlock switch RH & rear power window switches LH and RH can open/close the corresponding windows.

## REAR POWER VENT WINDOW OPERATION

- Rear power vent window system is operable during the retained power operation timer after turning ignition switch ON and OFF.
- Rear power vent window switch can open/close the rear power vent window LH and RH.

## POWER WINDOW AUTO-OPERATION

- AUTO UP/DOWN operation can be performed when main power window and door lock/unlock switch or power window and door lock/unlock switch RH turns to AUTO.
- Main power window and door lock/unlock switch controls rear power window LH/RH auto-operation.
- Encoder continues detecting the movement of power window motor and transmits to front power window switch LH/RH or rear power window control unit LH/RH as the encoder pulse signal while power window motor is operating.
- Front power window switch LH/RH or rear power window control unit LH/RH reads the changes of encoder signal and stops AUTO operation when door glass is at fully opened/closed position.
- Power window motor is operable in case encoder is malfunctioning.

## RETAINED POWER OPERATION

- Retained power operation is an additional power supply function that enables power window system to operate during the 45 seconds even when ignition switch is turned OFF

Retained power function cancel conditions

- Front door CLOSE (door switch OFF)→OPEN (door switch ON).
- When ignition switch is ON.
- When timer time passes. (45 seconds)

## POWER WINDOW LOCK

The power window lock is designed to lock operation of all windows except for front door window LH. When in the lock position, the power window lock signal is transmitted to power window and door lock/unlock switch RH and rear power window control unit LH/RH by power window serial link. This prevents the power window motor from operating.

# POWER WINDOW SYSTEM

## < FUNCTION DIAGNOSIS >

### ANTI-PINCH OPERATION

- Pinch foreign material in the door glass during AUTO-UP operation, and it is the anti-pinch function that lowers the door glass 150 mm (5.91 in) or 2 seconds when detected.
- Encoder continues detecting the movement of power window motor and transmits to power window switch as the encoder pulse signal while power window motor is operating.
- Resistance is applied to the power window motor rotation that changes the frequency of encoder pulse signal if foreign material is trapped in the door glass.
- Front power window switch LH/RH and rear power window control unit LH/RH controls to lower the window glass for 150 mm (5.91 in) or 2 seconds after it detects encoder pulse signal frequency change.

### OPERATION CONDITION

- When all door glass AUTO-UP operation is performed (anti-pinch function does not operate just before the door glass closes and is fully closed)

#### NOTE:

Depending on environment and driving conditions, if a similar impact or load is applied to the door glass, it may lower.

### KEY CYLINDER SWITCH OPERATION

Hold the door key cylinder to the LOCK or UNLOCK direction for more than 1 second to OPEN or CLOSE front power windows when ignition switch is OFF. In addition, it stops when key position is moved to NEUTRAL when operating.

### OPERATION CONDITION

- Ignition switch OFF
- Hold door key cylinder to LOCK position for more than 1 second to perform CLOSE operation of the door glass.
- Hold door key cylinder to UNLOCK position for more than 1 second to perform OPEN operation of the door glass.

### KEYLESS POWER WINDOW DOWN OPERATION

Front power windows open when the unlock button on Intelligent Key is activated and kept pressed for more than 3<sup>(NOTE)</sup> seconds with the ignition switch OFF. The windows keep opening if the unlock button is continuously pressed.

The power window opening stops when the following operations are performed:

- When the unlock button is kept pressed more than 15 seconds.
- When the ignition switch is turned ON while the power window opening is operated.
- When the unlock button is released.

While retained power operation is activated, keyless power window down function cannot be operated.

#### NOTE:

Keyless power window down operation mode can be changed by "PW DOWN SET" mode in "WORK SUPPORT". Refer to [DLK-56, "CONSULT-III Function \(INTELLIGENT KEY\)"](#).

#### NOTE:

Use CONSULT-III to change settings.

MODE1 (3sec)/MODE2 (OFF)/MODE3 (5sec)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P


PWC

# POWER WINDOW SYSTEM

< FUNCTION DIAGNOSIS >

## Component Parts Location

INFOID:000000005147167

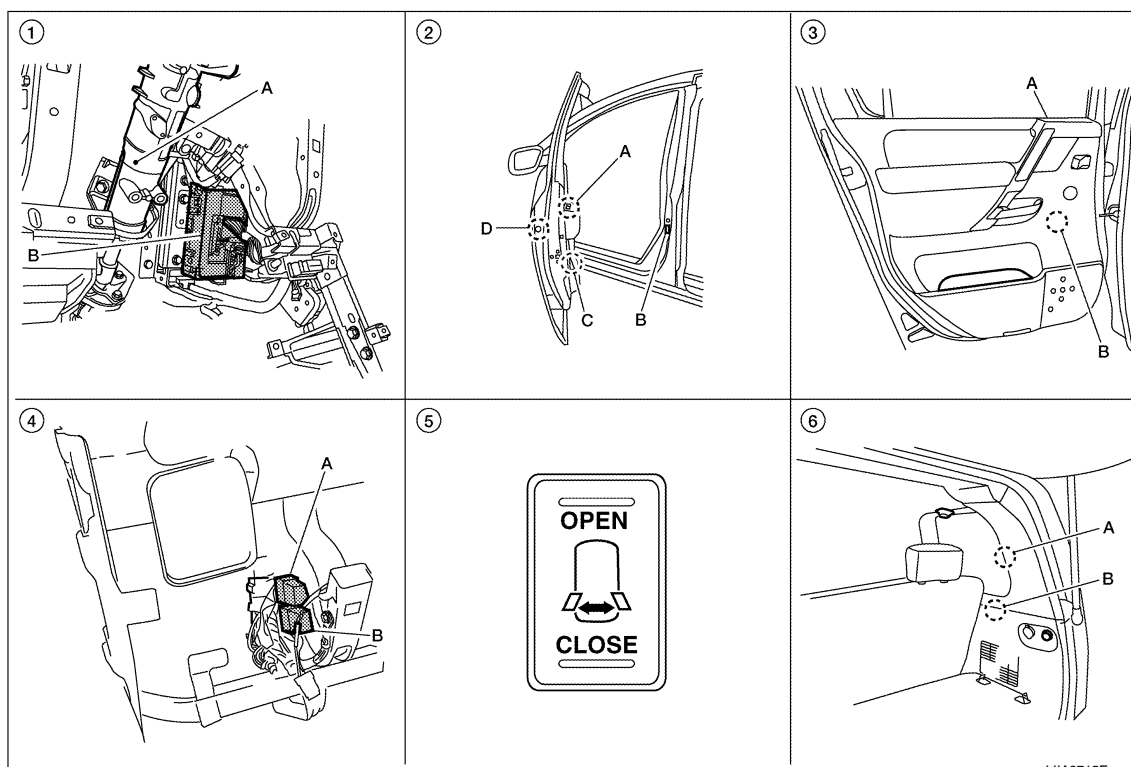

1. A. Steering column  
B. BCM M18, M19, M20 (view with instrument panel removed)
2. A. Main power window and door lock/unlock switch D7, D8  
Power window and door lock/unlock switch RH D105  
B. Front door switch LH B8, RH B108  
C. Front power window motor LH D9, RH D104  
D. Front door lock assembly LH (key cylinder switch) D14
3. A. Rear power window switch LH D203, RH D303  
Rear power window control unit LH D209, RH D309  
B. Rear power window motor LH D204, RH D304
4. A. Rear power vent window relay (CLOSE) M89  
B. Rear power vent window relay (OPEN) M87
5. Rear power vent window switch M95
6. A. Rear power vent window motor LH B52, RH B150  
B. Condenser-3 B119  
Condenser-4 B120

## Component Description

INFOID:000000005147168

## POWER WINDOW ANTI-PINCH SYSTEM

Component	Function
BCM	<ul style="list-style-type: none"> <li>Supplies power supply to power window switch.</li> <li>Controls retained power.</li> </ul>
Main power window and door lock/unlock switch	<ul style="list-style-type: none"> <li>Directly controls all power window motor of all doors.</li> <li>Controls anti-pinch operation of front power window LH.</li> </ul>
Power window and door lock/unlock switch RH	<ul style="list-style-type: none"> <li>Controls front power window motor RH.</li> <li>Controls anti-pinch operation of front power window RH.</li> </ul>
Rear power window switch	<ul style="list-style-type: none"> <li>Controls rear power window control units LH and RH.</li> </ul>
Rear power window control unit	<ul style="list-style-type: none"> <li>Controls rear power window motors LH and RH.</li> <li>Controls anti-pinch operation of rear power window LH/RH.</li> </ul>



## POWER WINDOW SYSTEM

### < FUNCTION DIAGNOSIS >

Component	Function
Front power window motor LH	<ul style="list-style-type: none"><li>• Integrates the ENCODER POWER and WINDOW MOTOR.</li><li>• Starts operating with signals from main power window and door lock/unlock switch.</li><li>• Transmits power window motor rotation as a pulse signal to main power window and door lock/unlock switch.</li></ul>
Front power window motor RH	Starts operating with signals from main power window and door lock/unlock switch & power window and door lock/unlock switch RH.
Rear power window motor	Starts operating with signals from main power window and door lock/unlock switch & rear power window switch.
Front door lock assembly LH (key cylinder switch)	Transmits operation condition of key cylinder switch to power window main switch.
Front door switch LH or RH	Detects door open/close condition and transmits to BCM.

A

B

C

D

E

F

G

H

I

J

PWC

L

M

N

O

P

## DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

### DIAGNOSIS SYSTEM (BCM)

#### COMMON ITEM

#### COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)

INFOID:000000005369205

#### APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
WORK SUPPORT	Changes the setting for each system function.
SELF-DIAG RESULTS	Displays the diagnosis results judged by BCM. Refer to <a href="#">BCS-54, "DTC Index"</a> .
CAN DIAG SUPPORT MNTR	Monitors the reception status of CAN communication viewed from BCM.
DATA MONITOR	The BCM input/output signals are displayed.
ACTIVE TEST	The signals used to activate each device are forcibly supplied from BCM.
ECU IDENTIFICATION	The BCM part number is displayed.
CONFIGURATION	<ul style="list-style-type: none"><li>Enables to read and save the vehicle specification.</li><li>Enables to write the vehicle specification when replacing BCM.</li></ul>

#### SYSTEM APPLICATION

BCM can perform the following functions for each system.

#### NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

System	Sub system selection item	Diagnosis mode		
		WORK SUPPORT	DATA MONITOR	ACTIVE TEST
BCM	BCM	×		
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP	×	×	×
Remote keyless entry system	MULTI REMOTE ENT	×	×	
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER		×	×
Air conditioner	AIR CONDITONER		×	
Intelligent Key system	INTELLIGENT KEY		×	
Combination switch	COMB SW		×	
Immobilizer	IMMU		×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
Back door open	TRUNK		×	×
RAP (retained accessory power)	RETAINED PWR	×	×	×
Signal buffer system	SIGNAL BUFFER		×	×
TPMS (tire pressure monitoring system)	AIR PRESSURE MONITOR	×	×	×
Vehicle security system	THEFT ALM	×	×	×
Panic alarm system	PANIC ALARM			×

#### RETAINED PWR

## DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

### RETAINED PWR : CONSULT-III Function (BCM - RETAINED PWR)

INFOID:000000005369878

#### DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [ON/OFF]	Indicates condition of ignition switch.
DOOR SW-DR [ON/OFF]	Indicates condition of front door switch LH.
DOOR SW-AS [ON/OFF]	Indicates condition of front door switch RH.

#### ACTIVE TEST

Test Item	Description
RETAINED PWR	<p>This test is able to supply RAP signal (power) from BCM (body control module) to power window system and power sunroof system (if equipped). Those systems can be operated when turning on "RETAINED PWR" on CONSULT-III screen even if the ignition switch is turned OFF.</p> <p><b>NOTE:</b></p> <p>During this test, CONSULT-III can be operated with ignition switch in OFF position. "RETAINED PWR" should be turned "ON" or "OFF" on CONSULT-III screen when ignition switch is ON. Then turn ignition switch OFF to check retained power operation. CONSULT-III might be stuck if "RETAINED PWR" is turned "ON" or "OFF" on CONSULT-III screen when ignition switch is OFF.</p>

#### WORK SUPPORT

Work item	Description
RETAINED PWR SET	<p>RAP signal's power supply period can be changed by mode setting. Selects RAP signal's power supply period between three steps</p> <ul style="list-style-type: none"><li>• MODE1 (45 sec.)/MODE2 (OFF)/MODE 3 (2 min.).</li></ul>

PWC

# POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

## COMPONENT DIAGNOSIS

### POWER SUPPLY AND GROUND CIRCUIT

#### POWER WINDOW MAIN SWITCH

##### POWER WINDOW MAIN SWITCH : Description

INFOID:000000005147171

- BCM supplies power.
- It operates each power window motor via corresponding power window switch and makes window move up/down when main power window and door lock/unlock switch is operated.

##### POWER WINDOW MAIN SWITCH : Component Function Check

INFOID:000000005147172

##### Main Power Window And Door Lock/Unlock Switch

#### 1. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH FUNCTION

Does power window motor operate with main power window and door lock/unlock switch operation?

Is the inspection result normal?

- YES >> Main power window and door lock/unlock switch power supply and ground circuit are OK.  
NO >> Refer to [PWC-12, "POWER WINDOW MAIN SWITCH : Diagnosis Procedure"](#).

##### POWER WINDOW MAIN SWITCH : Diagnosis Procedure


INFOID:000000005147173

Regarding Wiring Diagram information, refer to [PWC-53, "Wiring Diagram"](#).

#### 1. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch ON.
2. Check voltage between main power window and door lock/unlock switch connectors and ground.

Terminal		Voltage (V) (Approx.)
(+)	(-)	
Main power window and door lock/unlock switch connector	Terminal	
D7 (A)	10	Ground Battery voltage
D8 (B)	19	

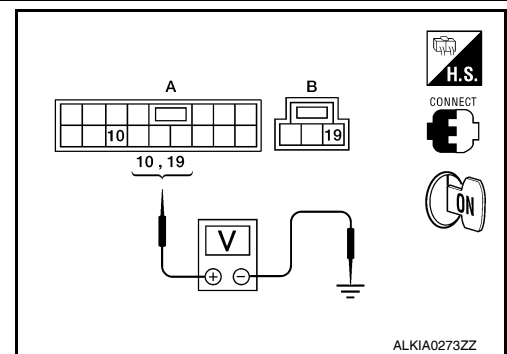


Is the measurement value within the specification?

- YES >> GO TO 3  
NO >> GO TO 2

#### 2. CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect BCM and main power window and door lock/unlock switch.
3. Check continuity between BCM connector and main power window and door lock/unlock switch connectors.

BCM connector	Terminal	Main power window and door lock/unlock switch connector	Terminal	Continuity
M20 (A)	68	D7 (B)	10	Yes
	69	D8 (C)	19	

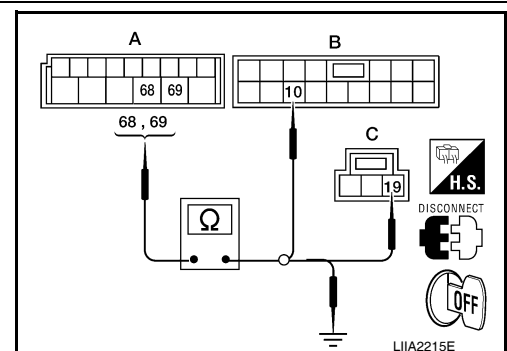

# POWER SUPPLY AND GROUND CIRCUIT

## < COMPONENT DIAGNOSIS >

4. Check continuity between BCM connector and ground.

BCM connector	Terminal	Ground	Continuity
M20 (A)	68		No
	69		

Is the inspection result normal?

YES >> GO TO 4

NO >> Repair or replace harness.

## 3. CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect main power window and door lock/unlock switch.
3. Check continuity between main power window and door lock/unlock switch connector and ground.

Main power window and door lock/unlock switch connector	Terminal	Ground	Continuity
D8	17		Yes

Is the inspection result normal?

YES >> Replace main power window and door lock/unlock switch. Refer to [PWC-117, "Removal and Installation"](#).

NO >> Repair or replace harness.

## 4. CHECK BCM OUTPUT SIGNAL

1. Connect BCM.
2. Turn ignition switch ON.
3. Check voltage between BCM connector and ground.

Terminals		Voltage (V) (Approx.)
(+)	(-)	
BCM connector	Terminal	Battery voltage
M20	68	
	69	

Is the measurement value within the specification?

YES >> Replace BCM. Refer to [BCS-59, "Removal and Installation"](#).

NO >> Repair or replace harness.

## FRONT POWER WINDOW SWITCH

### FRONT POWER WINDOW SWITCH : Description

INFOID:0000000005147174

- BCM supplies power.
- Front power window motor RH will be operated if power window and door lock/unlock switch RH is operated.

### FRONT POWER WINDOW SWITCH : Component Function Check

INFOID:0000000005147175

#### Power Window And Door Lock/Unlock Switch RH



## 1. CHECK FRONT POWER WINDOW MOTOR RH FUNCTION

Does front power window motor RH operate with power window and door lock/unlock switch RH operation?

Is the inspection result normal?

YES >> Power window and door lock/unlock switch RH power supply and ground circuit are OK.

NO >> Refer to [PWC-14, "FRONT POWER WINDOW SWITCH : Diagnosis Procedure"](#).

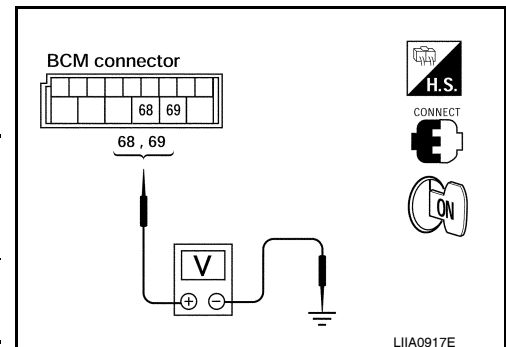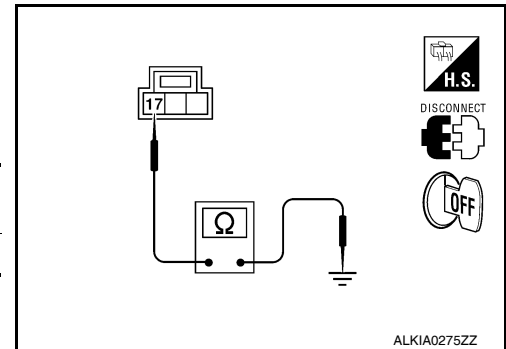

# POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

## FRONT POWER WINDOW SWITCH : Diagnosis Procedure


INFOID:000000005147176

Regarding Wiring Diagram information, refer to [PWC-68, "Wiring Diagram"](#).

### 1. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch ON.
2. Check voltage between power window and door lock/unlock switch RH connector and ground.

Terminal		Voltage (V) (Approx.)
(+)	(-)	
Power window and door lock/ unlock switch RH connector	Terminal	
D105	10	Ground
		Battery voltage

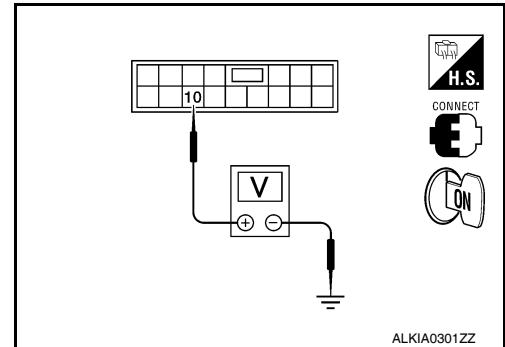

Is the measurement value within the specification?


YES >> GO TO 3

NO >> GO TO 2

### 2. CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect BCM and power window and door lock/unlock switch RH.
3. Check continuity between BCM connector and power window and door lock/unlock switch RH connector.

BCM connector	Terminal	Power window and door lock/unlock switch RH connector	Terminal	Continuity
M20 (A)	69	D105 (B)	10	Yes

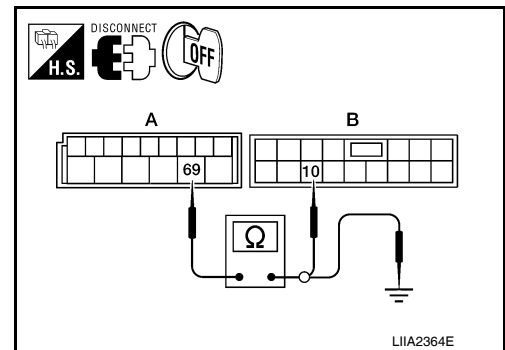

4. Check continuity between BCM connector and ground.

BCM connector	Terminal	Ground	Continuity
M20 (A)	69		No

Is the inspection result normal?

YES >> GO TO 4

NO >> Repair or replace harness.

### 3. CHECK GROUND CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect power window and door lock/unlock switch RH.
3. Check continuity between power window and door lock/unlock switch RH connector and ground.

Power window and door lock/unlock switch RH	Terminal	Ground	Continuity
D105	11		Yes

Is the inspection result normal?

YES >> Replace power window and door lock/unlock switch RH.  
Refer to [PWC-118, "Removal and Installation"](#).

NO >> Repair or replace harness.

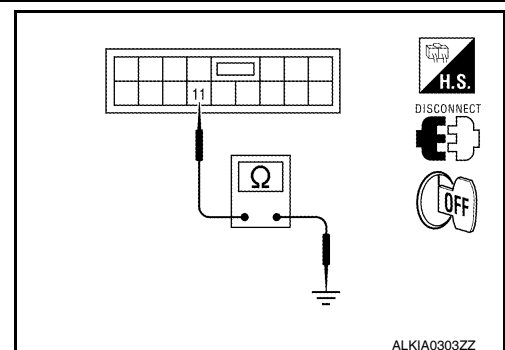

# POWER SUPPLY AND GROUND CIRCUIT

## < COMPONENT DIAGNOSIS >

### 4. CHECK BCM OUTPUT SIGNAL

1. Connect BCM.
2. Turn ignition switch ON.
3. Check voltage between BCM connector and ground.

Terminals		Voltage (V) (Approx.)
(+)	(-)	
BCM connector	Terminal	
M20	69	Battery voltage

Is the measurement value within the specification?

YES >> Replace power window and door lock/unlock switch RH.

Refer to [PWC-118, "Removal and Installation"](#).

NO >> Replace BCM. Refer to [BCS-59, "Removal and Installation"](#).

### REAR POWER WINDOW SWITCH

#### REAR POWER WINDOW SWITCH : Description

INFOID:000000005147177

- BCM supplies power.
- Rear power window motor will be operated if rear power window switch is operated. Rear power window switch.

#### REAR POWER WINDOW SWITCH : Component Function Check

INFOID:000000005147178

#### Rear Power Window Switch

### 1. CHECK REAR POWER WINDOW MOTOR FUNCTION

Does rear power window motor operate with rear power window switch operation?

Is the inspection result normal?

YES >> Rear power window switch power supply and ground circuit are OK.

NO >> Refer to [PWC-15, "REAR POWER WINDOW SWITCH : Diagnosis Procedure"](#).

### REAR POWER WINDOW SWITCH : Diagnosis Procedure

INFOID:000000005147179

Regarding Wiring Diagram information, refer to [PWC-53, "Wiring Diagram"](#).

### 1. CHECK POWER WINDOW POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect rear power window switch LH or RH.
3. Turn ignition switch ON.
4. Check voltage between rear power window switch LH or RH connector D203 (LH), D303 (RH) terminals 2, 3 and ground.

**2 - Ground : Battery voltage**



**3 - Ground : Battery voltage**

Is the inspection result normal?

YES >> GO TO 2

NO >> Repair or replace harness.

### 2. CHECK POWER WINDOW GROUND CIRCUIT

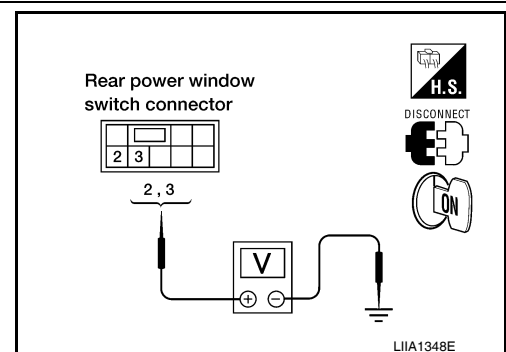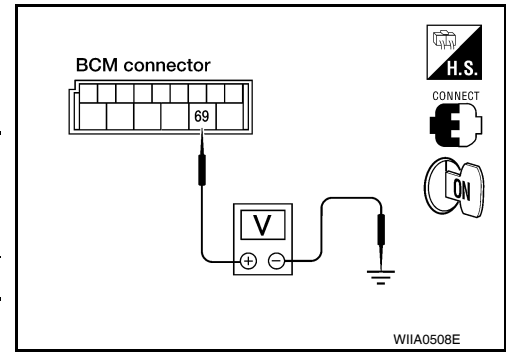

# POWER SUPPLY AND GROUND CIRCUIT

## < COMPONENT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Check continuity between rear power window switch LH or RH connector D203 (LH), D303 (RH) terminals 1, 7 and ground.


**1 - Ground** : Continuity should exist.

**7 - Ground** : Continuity should exist.

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace harness.

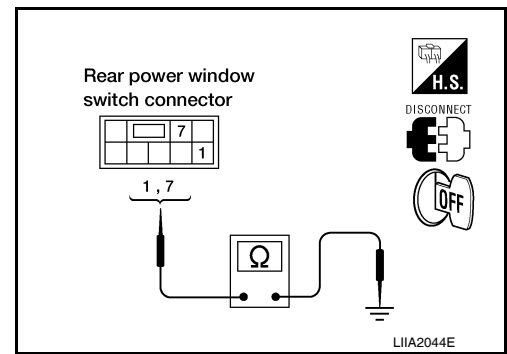

## 3. CHECK REAR POWER WINDOW SWITCH

Check rear power window switch.

Refer to [PWC-16, "REAR POWER WINDOW SWITCH : Component Inspection"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-38, "Intermittent Incident"](#).

NO >> Replace rear power window switch. Refer to [PWC-119, "Removal and Installation"](#).

## REAR POWER WINDOW SWITCH : Component Inspection


INFOID:000000005147180

### COMPONENT INSPECTION

#### 1. CHECK REAR POWER WINDOW SWITCH

Check rear power window switch.

Terminal		Power window switch condition	Continuity
2	5	UP	Yes
1	4		
1	4	NEUTRAL	
1	5		
2	4	DOWN	
1	5		

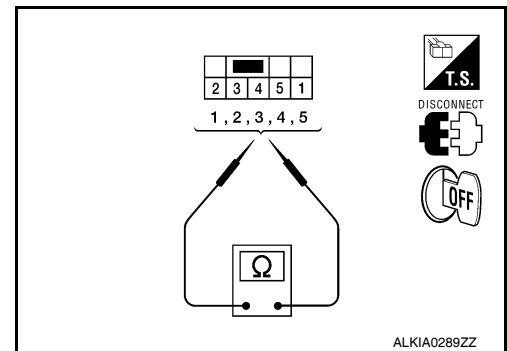

Is the inspection result normal?

YES >> Rear power window switch is OK.

NO >> Replace rear power window switch. Refer to [PWC-119, "Removal and Installation"](#).



# POWER WINDOW MOTOR

< COMPONENT DIAGNOSIS >

## POWER WINDOW MOTOR DRIVER SIDE

### DRIVER SIDE : Description

INFOID:000000005147181

Door glass moves UP/DOWN by receiving the signal from power window main switch.

### DRIVER SIDE : Component Function Check

INFOID:000000005147182

#### 1. CHECK POWER WINDOW MOTOR CIRCUIT

Does front power window motor LH operate with operating main power window and door lock/unlock switch?  
Is the inspection result normal?

YES >> Front power window motor LH is OK.

NO >> Refer to [PWC-17, "DRIVER SIDE : Diagnosis Procedure"](#).

### DRIVER SIDE : Diagnosis Procedure


INFOID:000000005147183

Regarding Wiring Diagram information, refer to [PWC-53, "Wiring Diagram"](#).

#### 1. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH OUTPUT SIGNAL

1. Disconnect front power window motor LH.
2. Turn ignition switch ON.
3. Check voltage between front power window motor LH connector and ground.

Terminal			Main power win- dow and door lock/ unlock switch con- dition	Voltage (V) (Approx.)
(+)		(−)		
Power window motor LH con- nector	Terminal			
D9	2	Ground	UP	Battery voltage
			DOWN	0
	1		UP	0
			DOWN	Battery voltage

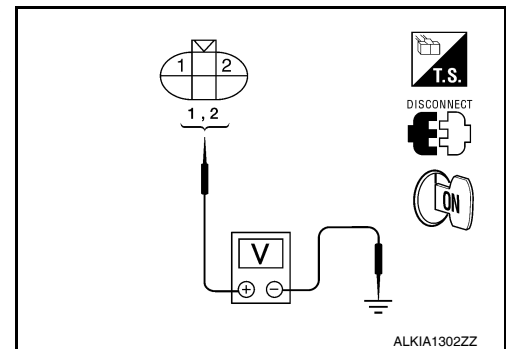

Is the measurement value within the specification?


YES >> GO TO 2

NO >> Replace main power window and door lock/unlock switch. Refer to [PWC-117, "Removal and Installation"](#).

#### 2. CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect main power window and door lock/unlock switch.
3. Check continuity between main power window and door lock/unlock switch connector and front power window motor connector LH.

Main power window and door lock/unlock switch connector	Terminal	Front power window motor LH connector	Terminal	Continuity
D7 (A)	8	D9 (B)	2	Yes
	11		1	

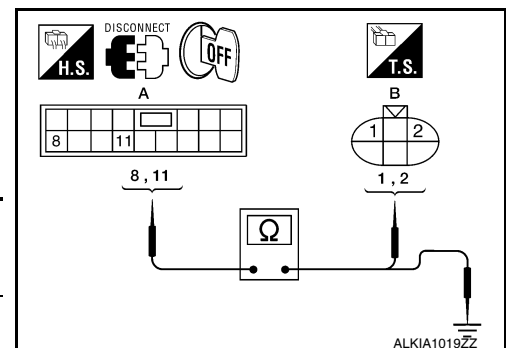

4. Check continuity between main power window and door lock/unlock switch connector and ground.

# POWER WINDOW MOTOR

## < COMPONENT DIAGNOSIS >

Main power window and door lock/unlock switch connector	Terminal	Ground	Continuity
D7 (A)	8		No
	11		

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace harness.

### 3. CHECK POWER WINDOW MOTOR

Check front power window motor LH.

Refer to [PWC-18, "DRIVER SIDE : Component Inspection"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-38, "Intermittent Incident"](#).

NO >> Replace power window motor LH. Refer to [GW-15, "Removal and Installation"](#).

## DRIVER SIDE : Component Inspection

INFOID:0000000005147184

### COMPONENT INSPECTION

#### 1. CHECK FRONT POWER WINDOW MOTOR LH

Does motor operate by connecting the battery voltage directly to power window motor?

Terminal		Motor condition
(+)	(-)	
1	2	DOWN
2	1	UP

Is the inspection result normal?

YES >> Front power window motor LH is OK.

NO >> Replace front power window motor LH. Refer to [GW-15, "Removal and Installation"](#).

## PASSENGER SIDE

### PASSENGER SIDE : Description

INFOID:0000000005147185

Door glass moves UP/DOWN by receiving the signal from main power window and door lock/unlock switch or power window and door lock/unlock switch RH.

### PASSENGER SIDE : Component Function Check

INFOID:0000000005147186

#### 1. CHECK POWER WINDOW MOTOR CIRCUIT

Does power window motor operate with operating main power window and door lock/unlock switch or power window and door lock/unlock switch RH?

Is the inspection result normal?

YES >> Front power window motor RH is OK.

NO >> Refer to [PWC-18, "PASSENGER SIDE : Diagnosis Procedure"](#).

### PASSENGER SIDE : Diagnosis Procedure

INFOID:0000000005147187

Regarding Wiring Diagram information, refer to [PWC-68, "Wiring Diagram"](#).


#### 1. CHECK FRONT POWER WINDOW SWITCH RH OUTPUT SIGNAL

# POWER WINDOW MOTOR

## < COMPONENT DIAGNOSIS >

1. Disconnect front power window motor RH.
2. Turn ignition switch ON.
3. Check voltage between front power window motor RH connector and ground.

Terminal		Front power window motor RH condition	Voltage (V) (Approx.)
(+)	(-)		
Front power window motor RH connector	Terminal		
D104	2	UP	Battery voltage
		DOWN	0
	1	UP	0
		DOWN	Battery voltage

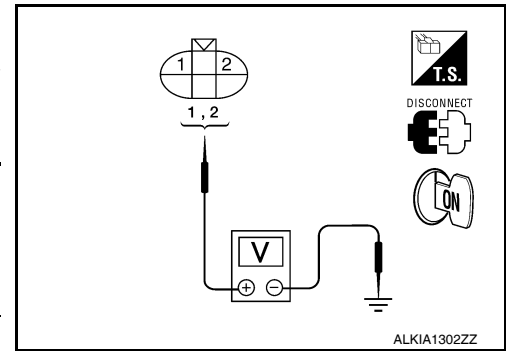

Is the measurement value within the specification?


YES >> GO TO 2

NO >> Replace power window and door lock/unlock switch RH. Refer to [PWC-118, "Removal and Installation"](#).

## 2. CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect power window and door lock/unlock switch RH.
3. Check continuity between power window and door lock/unlock switch RH connector and front power window motor RH connector.

Power window and door lock/unlock switch RH connector	Terminal	Front power window motor RH connector	Terminal	Continuity
D105 (A)	8	D104 (B)	2	Yes
	9		1	

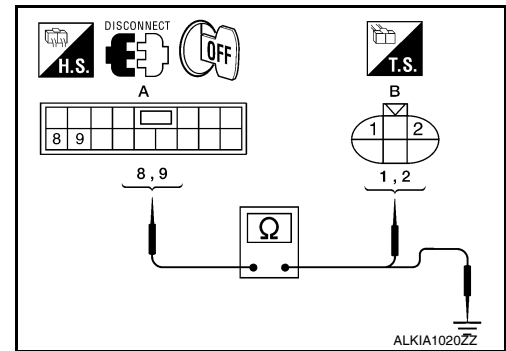

4. Check continuity between power window and door lock/unlock switch RH connector and ground.

Power window and door lock/unlock switch RH connector	Terminal	Ground	Continuity
D105 (A)	8	Ground	No
	9		

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace harness.

## 3. CHECK FRONT POWER WINDOW MOTOR RH

Check front power window motor RH.

Refer to [PWC-19, "PASSENGER SIDE : Component Inspection"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-38, "Intermittent Incident"](#).

NO >> Replace front power window motor RH. Refer to [GW-15, "Removal and Installation"](#).

## PASSENGER SIDE : Component Inspection

INFOID:000000005147188

### COMPONENT INSPECTION

#### 1. CHECK FRONT POWER WINDOW MOTOR RH

Does motor operate by connecting the battery voltage directly to front power window motor RH?

# POWER WINDOW MOTOR

## < COMPONENT DIAGNOSIS >

Terminal		Motor condition
(+)	(-)	
1	2	DOWN
2	1	UP

### Is the inspection result normal?

YES >> Front power window motor RH is OK.

NO >> Replace front power window motor RH. Refer to [GW-15, "Removal and Installation"](#).

## REAR LH

### REAR LH : Description

INFOID:000000005147189

Door glass moves UP/DOWN by receiving the signal from power window main switch or rear power window switch LH.

### REAR LH : Component Function Check

INFOID:000000005147190

#### 1. CHECK REAR POWER WINDOW MOTOR LH CIRCUIT

Does rear power window motor LH operate with main power window and door lock/unlock switch or rear power window switch LH?

### Is the inspection result normal?

YES >> Rear power window motor LH is OK.

NO >> Refer to [PWC-20, "REAR LH : Diagnosis Procedure"](#).

### REAR LH : Diagnosis Procedure


INFOID:000000005147191

Regarding Wiring Diagram information, refer to [PWC-53, "Wiring Diagram"](#).

#### 1. CHECK REAR POWER WINDOW SWITCH LH OUTPUT SIGNAL

1. Turn ignition switch ON.
2. Check voltage between rear power window switch LH connector D203 terminals 4, 5 and ground.

Connector	Terminals		Condition	Voltage (V) (Approx.)
	(+)	(-)		
D203	4	Ground	Closing	0
			Opening	Battery voltage
	5		Closing	Battery voltage
			Opening	0

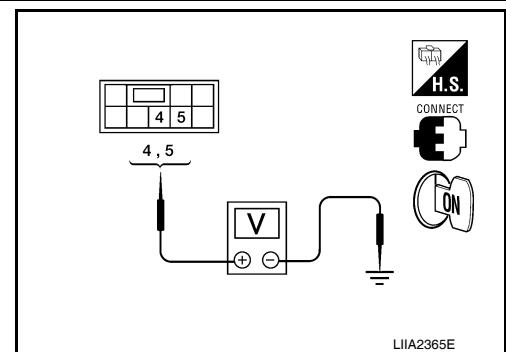

### Is the inspection result normal?

YES >> Replace rear power window switch LH. Refer to [PWC-119, "Removal and Installation"](#).

NO >> GO TO 2

#### 2. CHECK REAR POWER WINDOW SWITCH LH CIRCUIT

# POWER WINDOW MOTOR

## < COMPONENT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect rear power window switch LH and rear power window control unit LH.
3. Check continuity between rear power window switch LH connector D203 terminals 4, 5 and rear power window control unit LH connector D209 terminals 9, 10.

**4 - 9** : Continuity should exist.

**5 - 10** : Continuity should exist.

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace harness.

### 3. CHECK REAR POWER WINDOW MOTOR LH

Check rear power window motor LH.

Refer to [PWC-21, "REAR LH : Component Inspection"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-38, "Intermittent Incident"](#).

NO >> Replace rear power window motor LH. Refer to [GW-15, "Removal and Installation"](#).

## REAR LH : Component Inspection

INFOID:0000000005147192

### COMPONENT INSPECTION

#### 1. CHECK REAR POWER WINDOW MOTOR LH

Does motor operate by connecting the battery voltage directly to rear power window motor LH?

Terminal		Motor condition
(+)	(-)	
2	1	DOWN
1	2	UP

Is the inspection result normal?

YES >> Rear power window motor LH is OK.

NO >> Replace rear power window motor LH. Refer to [GW-18, "Removal and Installation"](#).

## REAR RH

### REAR RH : Description

INFOID:0000000005147193

Door glass moves UP/DOWN by receiving the signal from main power window and door lock/unlock switch or rear power window switch RH.

### REAR RH : Component Function Check

INFOID:0000000005147194

#### 1. CHECK REAR POWER WINDOW MOTOR RH CIRCUIT

Does rear power window motor RH operate with operating main power window and door lock/unlock switch or rear power window switch RH?

Is the inspection result normal?


YES >> Rear power window motor RH is OK.

NO >> Refer to [PWC-21, "REAR RH : Diagnosis Procedure"](#).

### REAR RH : Diagnosis Procedure

INFOID:0000000005147195

Regarding Wiring Diagram information, refer to [PWC-53, "Wiring Diagram"](#).

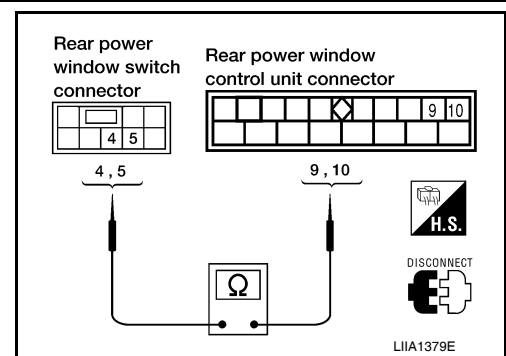


# POWER WINDOW MOTOR

## < COMPONENT DIAGNOSIS >

### 1. CHECK REAR POWER WINDOW SWITCH RH OUTPUT SIGNAL

1. Turn ignition switch ON.
2. Check voltage between rear power window switch RH connector D303 terminals 4, 5 and ground.

Connector	Terminals		Condition	Voltage (V) (Approx.)
	(+)	(-)		
D303	4	Ground	Closing	0
			Opening	Battery voltage
	5		Closing	Battery voltage
			Opening	0

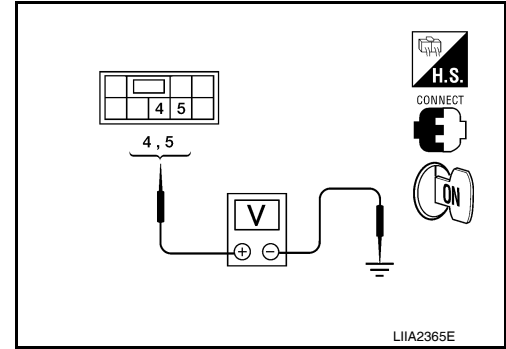

Is the inspection result normal?

- YES >> Replace rear power window switch RH. Refer to [PWC-119, "Removal and Installation"](#).  
 NO >> GO TO 2

### 2. CHECK REAR POWER WINDOW SWITCH RH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect rear power window switch RH and rear power window control unit RH.
3. Check continuity between rear power window switch RH connector D303 terminals 4, 5 and rear power window control unit RH connector D309 terminals 9, 10.

**4 - 9 : Continuity should exist.**  
**5 - 10 : Continuity should exist.**

Is the inspection result normal?

- YES >> GO TO 3  
 NO >> Repair or replace harness.

### 3. CHECK REAR POWER WINDOW MOTOR RH

Check rear power window motor RH.

Refer to [PWC-22, "REAR RH : Component Inspection"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-38, "Intermittent Incident"](#).  
 NO >> Replace rear power window motor RH. Refer to [GW-18, "Removal and Installation"](#).

## REAR RH : Component Inspection

INFOID:000000005147196

## COMPONENT INSPECTION

### 1. CHECK REAR POWER WINDOW MOTOR RH

Does motor operate by connecting the battery voltage directly to rear power window motor RH?

Terminal		Motor condition
(+)	(-)	
2	1	DOWN
1	2	UP

Is the inspection result normal?

- YES >> Rear power window motor RH is OK.  
 NO >> Replace rear power window motor RH. Refer to [GW-18, "Removal and Installation"](#).

# ENCODER

< COMPONENT DIAGNOSIS >

## ENCODER DRIVER SIDE

### DRIVER SIDE : Description

INFOID:000000005147197

Detects condition of the front power window motor LH operation and transmits to main power window and door lock/unlock switch as pulse signal.

### DRIVER SIDE : Component Function Check

INFOID:000000005147198

#### 1. CHECK ENCODER OPERATION

Does front door glass LH perform AUTO open/close operation normally when operating main power window and door lock/unlock switch?

Is the inspection result normal?

YES >> Encoder operation is OK.

NO >> Refer to [PWC-23, "DRIVER SIDE : Diagnosis Procedure"](#).

### DRIVER SIDE : Diagnosis Procedure



INFOID:000000005147199

Regarding Wiring Diagram information, refer to [PWC-53, "Wiring Diagram"](#).

#### 1. CHECK ENCODER OPERATION

1. Turn ignition switch ON.
2. Check signal between main power window and door lock/unlock switch connector and ground with oscilloscope.

Terminals			Signal (Reference value)
(+)	Terminal		
Main power window and door lock/unlock switch connector		(-)	
D7	9	Ground	Refer to following signal
	13		

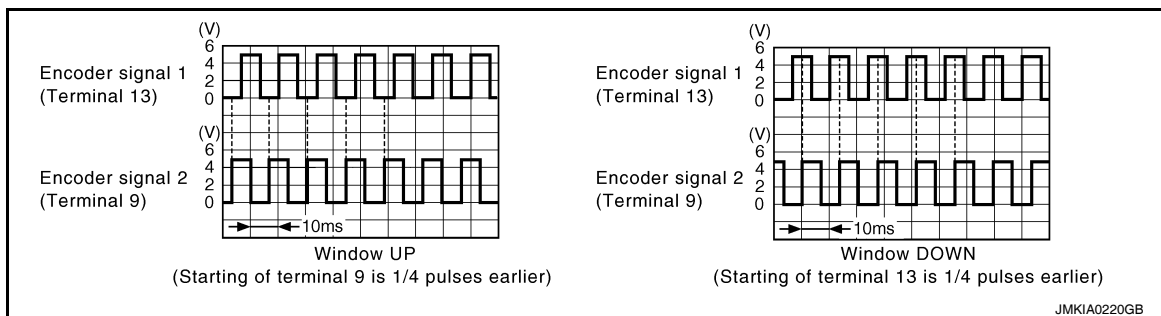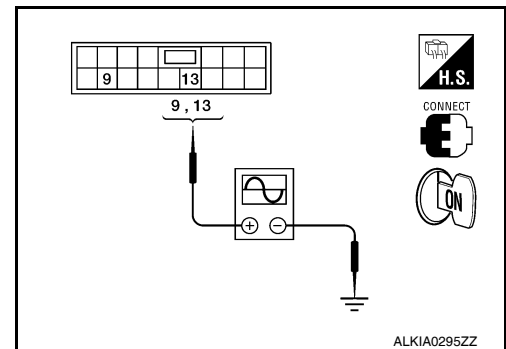

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-38, "Intermittent Incident"](#).

NO >> GO TO 2


#### 2. CHECK FRONT POWER WINDOW MOTOR LH POWER SUPPLY

# ENCODER

## < COMPONENT DIAGNOSIS >

1. Turn ignition switch ON.
2. Check voltage between front power window motor LH connector and ground.

Terminal			Voltage (V) (Approx.)
(+)		(-)	
Front power win- dow motor LH con- nector	Terminal		
D9	4	Ground	

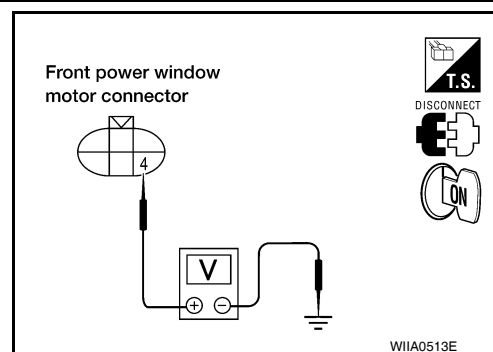

Is the measurement value within the specification?


YES >> GO TO 4

NO >> GO TO 3

## 3. CHECK HARNESS CONTINUITY 1

1. Turn ignition switch OFF.
2. Disconnect main power window and door lock/unlock switch and front power window motor LH.
3. Check continuity between main power window and door lock/unlock switch connector and front power window motor LH connector.

Main power window and door lock/unlock switch connector	Terminal	Front power window motor LH connector	Terminal	Continuity
D7 (A)	15	D9 (B)	4	Yes

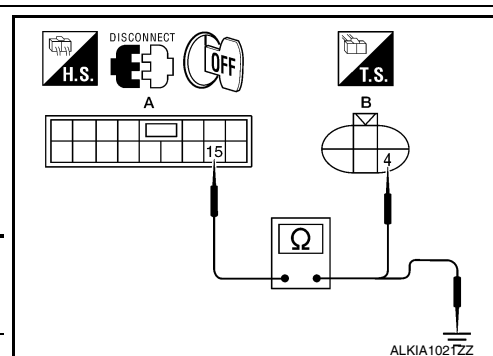

4. Check continuity between main power window and door lock/unlock switch connector and ground.

Main power window and door lock/unlock switch connector	Terminal	Ground	Continuity
D7 (A)	15		No

Is the inspection result normal?

YES >> Replace main power window and door lock/unlock switch. Refer to [PWC-117, "Removal and Installation"](#).

NO >> Repair or replace harness.

## 4. CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect front power window motor LH.
3. Check continuity between front power window motor LH connector and ground.


Front power window motor LH connector	Terminal	Ground	Continuity
D9	6		Yes

Is the inspection result normal?

YES >> GO TO 6

NO >> GO TO 5

## 5. CHECK HARNESS CONTINUITY 2

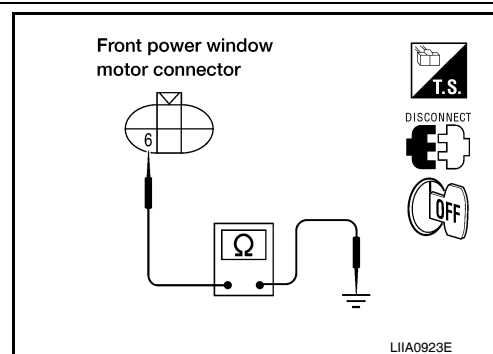



# ENCODER

## < COMPONENT DIAGNOSIS >

1. Disconnect main power window and door lock/unlock switch.
2. Check continuity between main power window and door lock/unlock switch connector and front power window motor LH connector.

Main power window and door lock/unlock switch connector	Terminal	Front power window motor LH connector	Terminal	Continuity
D7	2	D9	6	Yes

Is the inspection result normal?

- YES >> Replace main power window and door lock/unlock switch. Refer to [PWC-117, "Removal and Installation"](#).  
 NO >> Repair or replace harness.

## 6. CHECK HARNESS CONTINUITY 3

1. Disconnect main power window and door lock/unlock switch.
2. Check continuity between main power window and door lock/unlock switch connector and front power window motor LH connector.

Main power window and door lock/unlock switch connector	Terminal	Front power window motor LH connector	Terminal	Continuity
D7 (A)	9	D9 (B)	5	Yes
	13		3	

3. Check continuity between main power window and door lock/unlock switch connector and ground.

Main power window and door lock/unlock switch connector	Terminal	Ground	Continuity
D7 (A)	9	Ground	No
	13		

Is the inspection result normal?

- YES >> Replace front power window motor LH. Refer to [GW-15, "Removal and Installation"](#).  
 NO >> Repair or replace harness.

## PASSENGER SIDE

### PASSENGER SIDE : Description

INFOID:000000005147200

Detects condition of the front power window motor RH operation and transmits to power window and door lock/unlock switch RH as pulse signal.

### PASSENGER SIDE : Component Function Check

INFOID:000000005147201

## 1.CHECK ENCODER OPERATION

Does front door glass RH perform AUTO open/close operation normally when operating power window and door lock/unlock switch RH?



Is the inspection result normal?

- YES >> Encoder operation is OK.  
 NO >> Refer to [PWC-25, "PASSENGER SIDE : Diagnosis Procedure"](#).

### PASSENGER SIDE : Diagnosis Procedure

INFOID:000000005147202

Regarding Wiring Diagram information, refer to [PWC-68, "Wiring Diagram"](#).

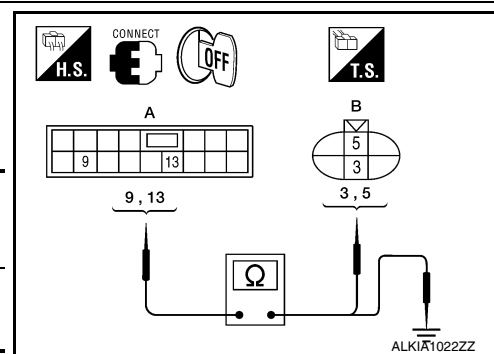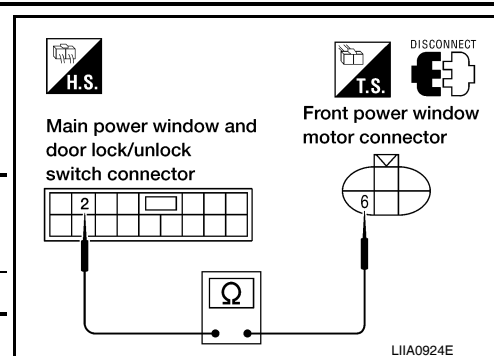

PWC



# ENCODER

## < COMPONENT DIAGNOSIS >

### 1. CHECK ENCODER SIGNAL

1. Turn ignition switch ON.
2. Check signal between power window and door lock/unlock switch RH connector and ground with oscilloscope.

Terminals			Signal (Reference value)
(+)		(-)	
Power window and door lock/unlock switch RH connector	Terminal		
D105	12	Ground	Refer to following signal
	15		

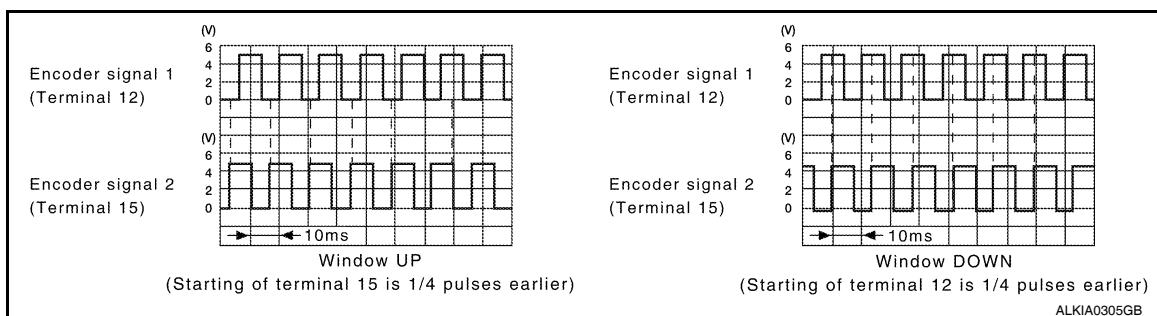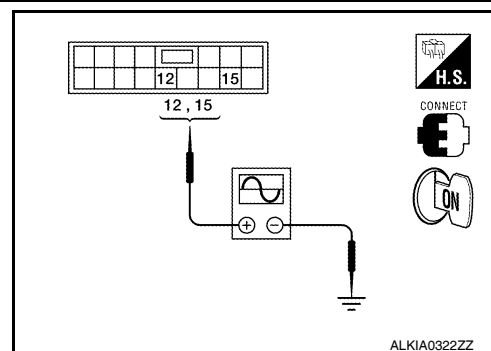

Is the inspection result normal?


YES >> Check intermittent incident. Refer to [GI-38. "Intermittent Incident"](#).

NO >> GO TO 2

### 2. CHECK FRONT POWER WINDOW MOTOR RH POWER SUPPLY

1. Turn ignition switch ON.
2. Check voltage between front power window motor RH connector and ground.

Terminal			Voltage (V) (Approx.)
(+)		(-)	
Front power window motor RH connector	Terminal		
D105	4	Ground	10

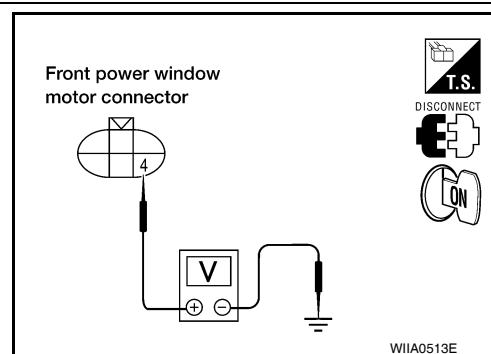

Is the measurement value within the specification?


YES >> GO TO 4

NO >> GO TO 3

### 3. CHECK HARNESS CONTINUITY 1

1. Turn ignition switch OFF.
2. Disconnect power window and door lock/unlock switch RH and front power window motor RH.
3. Check continuity between power window and door lock/unlock switch RH connector and front power window motor RH connector.

Power window and door lock/unlock switch RH connector	Terminal	Front power window motor RH connector	Terminal	Continuity
D105 (A)	4	D104 (B)	4	Yes

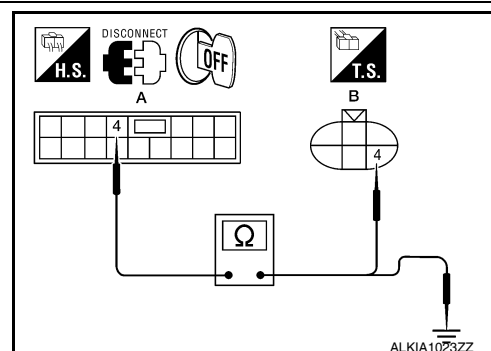

4. Check continuity between power window and door lock/unlock switch RH connector and ground.

# ENCODER

## < COMPONENT DIAGNOSIS >

Power window and door lock/unlock switch RH connector	Terminal	Ground	Continuity
D105 (A)	4		No

Is the inspection result normal?

YES >> Replace power window and door lock/unlock switch RH. Refer to [PWC-118. "Removal and Installation"](#).

NO >> Repair or replace harness.

### 4. CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect front power window motor RH.
3. Check continuity between front power window motor RH connector and ground.

Front power window motor RH connector	Terminal	Ground	Continuity
D104	6		Yes

Is the inspection result normal?

YES >> GO TO 6

NO >> GO TO 5

### 5. CHECK HARNESS CONTINUITY 2

1. Disconnect power window and door lock/unlock switch RH.
2. Check continuity between power window and door lock/unlock switch RH connector and front power window motor RH connector.

Power window and door lock/unlock switch RH connector	Terminal	Front power window motor RH connector	Terminal	Continuity
D105	3	D104	6	Yes

Is the inspection result normal?

YES >> Replace power window and door lock/unlock switch RH. Refer to [PWC-118. "Removal and Installation"](#).




NO >> Repair or replace harness.

### 6. CHECK HARNESS CONTINUITY 3

1. Disconnect power window and door lock/unlock switch RH.
2. Check continuity between power window and door lock/unlock switch RH connector and front power window motor RH connector.

Power window and door lock/unlock switch RH connector	Terminal	Front power window motor RH connector	Terminal	Continuity
D105 (A)	12	D104 (B)	3	Yes
	15		5	

3. Check continuity between power window and door lock/unlock switch RH connector and ground.

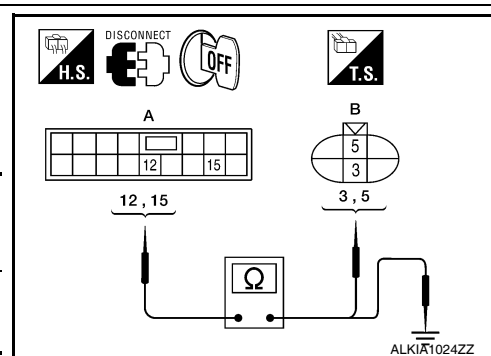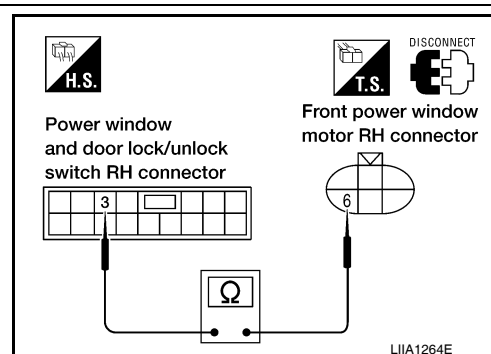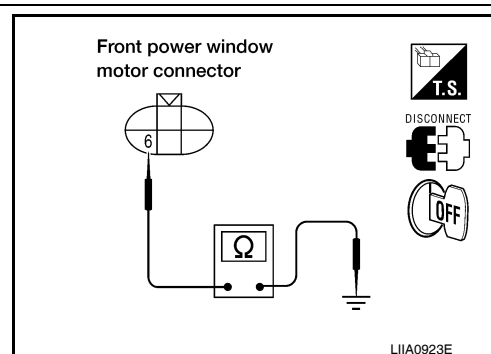

# ENCODER

## < COMPONENT DIAGNOSIS >

Power window and door lock/unlock switch RH connector	Terminal	Ground	Continuity
D105 (A)	12		No
	15		

Is the inspection result normal?

YES >> Replace front power window motor RH. Refer to [GW-15, "Removal and Installation"](#).

NO >> Repair or replace harness.

## REAR LH

### REAR LH : Description

INFOID:000000005147203

Detects condition of the front power window motor LH operation and transmits to main power window and door lock/unlock switch as pulse signal.

### REAR LH : Component Function Check

INFOID:000000005147204

## 1. CHECK ENCODER OPERATION

Does front door glass LH perform AUTO open/close operation normally when operating main power window and door lock/unlock switch?

Is the inspection result normal?

YES >> Encoder operation is OK.

NO >> Refer to [PWC-31, "REAR RH : Diagnosis Procedure"](#).


## REAR LH : Diagnosis Procedure


INFOID:000000005147205

Regarding Wiring Diagram information, refer to [PWC-53, "Wiring Diagram"](#).

## 1. CHECK ENCODER SIGNAL

1. Turn ignition switch ON.
2. Check the signal between rear power window control unit LH connector D209 terminal 4 and ground with oscilloscope.

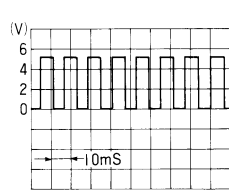Connector	Terminals		Condition	Signal
	(+)	(-)		
D209	4	Ground	Opening	 OCC3383D

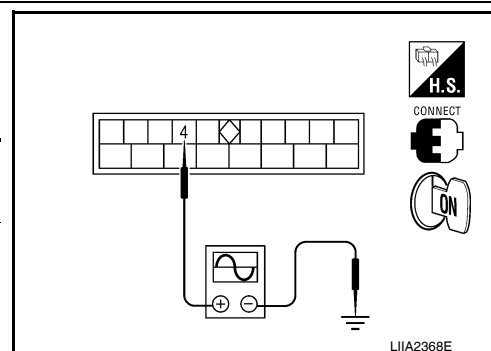

Is the inspection result normal?

YES >> GO TO 2

NO >> Replace rear power window control unit LH.

## 2. CHECK HARNESS CONTINUITY

# ENCODER

## < COMPONENT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect rear power window control unit LH and rear power window motor LH.
3. Check continuity between rear power window control unit LH or RH connector D209 terminal 4 and rear power window motor LH connector D204 terminal 3.

**4 - 3 : Continuity should exist.**

Is the inspection result normal?

- YES >> GO TO 3  
NO >> Repair or replace harness.

## 3. CHECK REAR POWER WINDOW MOTOR LH POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect rear power window motor LH or RH.
3. Turn ignition switch ON.
4. Check voltage between rear power window motor LH connector D204 terminal 4 and ground.

**4 - Ground : Approx. 10V**

Is the inspection result normal?

- YES >> GO TO 5  
NO >> GO TO 4

## 4. CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect rear power window motor LH and rear power window control unit LH.
3. Check continuity between rear power window motor LH connector D204 (B) terminal 4 and rear power window control unit LH connector D209 (A) terminal 5.

**4 - 5 : Continuity should exist.**

Is the inspection result normal?

- YES >> Replace rear power window switch LH. Refer to [PWC-119. "Removal and Installation"](#).  
NO >> Repair or replace harness.

## 5. CHECK ENCODER GROUND





1. Disconnect rear power window motor LH.
2. Check continuity between rear power window motor LH connector D204 terminal 6 and ground.

**6 - Ground : Continuity should exist.**

Is the inspection result normal?

- YES >> GO TO 7  
NO >> GO TO 6

## 6. CHECK ENCODER GROUND CIRCUIT

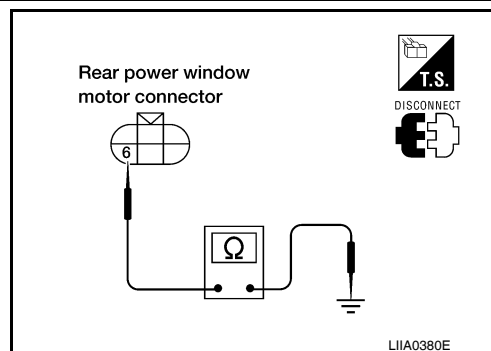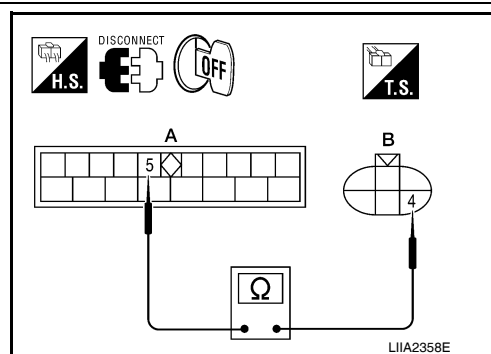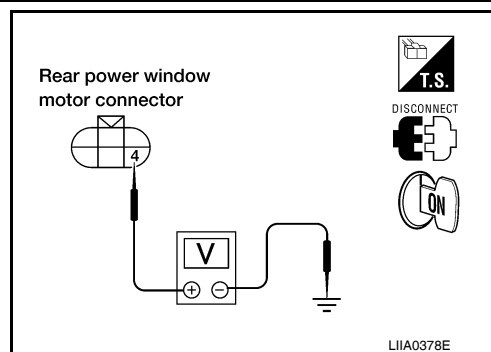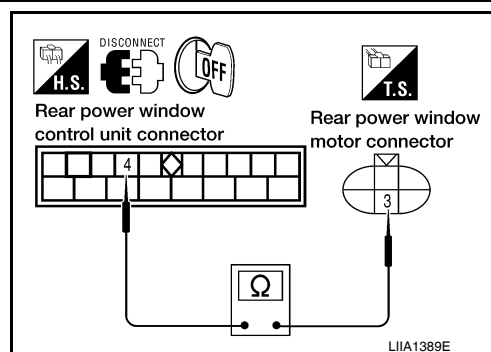

# ENCODER


## < COMPONENT DIAGNOSIS >

1. Disconnect rear power window control unit LH.
2. Check continuity between rear power window motor LH connector D204 terminal 6 and rear power window control unit LH connector D209 terminal 3.

**6 - 3 : Continuity should exist.**

Is the inspection result normal?


- YES >> Replace rear power window control unit LH.  
NO >> Repair or replace harness.

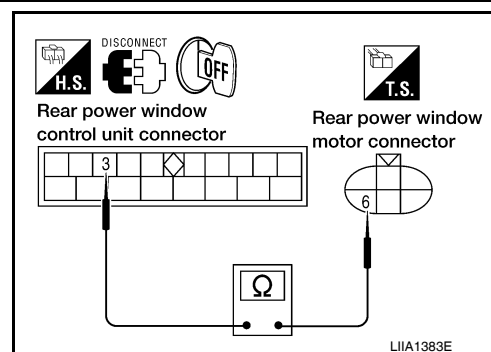

## 7. CHECK REAR POWER WINDOW MOTOR LH LIMIT SWITCH SIGNAL

1. Turn ignition switch ON.
2. Check voltage between rear power window control unit LH connector and ground.

Connector	Terminals		Condition	Voltage (V) (Approx.)
	(+)	(-)		
D209	3	Ground	Rear power window LH is between fully-open and just before fully-closed position (ON)	0
			Rear power window LH is between just before fully-closed position and fully-closed position (OFF)	5

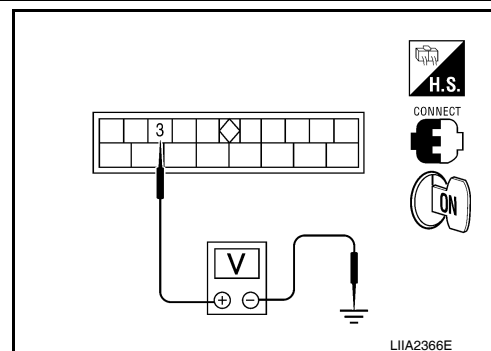

Is the inspection result normal?

- YES >> Limit switch circuit is OK.  
NO >> GO TO 8


## 8. CHECK REAR POWER WINDOW SWITCH LH OUTPUT SIGNAL

1. Turn ignition switch ON.
2. Check voltage between rear power window control unit LH harness connector D209 terminal 2 and ground.

**2 - Ground : Approx. 5V**

Is the inspection result normal?

- YES >> GO TO 9  
NO >> Replace rear power window control unit LH.

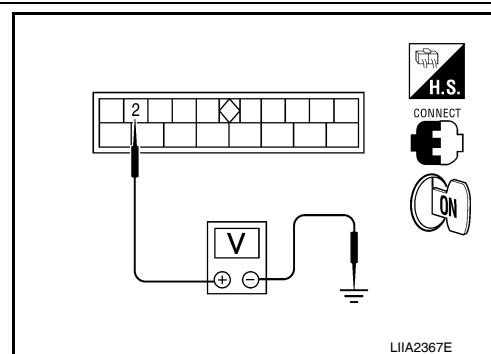


## 9. CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect rear power window control unit LH.
3. Check continuity between rear power window control unit LH connector D209 terminal 2 and rear power window motor LH connector D204 terminal 5.

**2 - 5 : Continuity should exist.**

Is the inspection result normal?

- YES >> Replace rear power window motor LH. Refer to [GW-18, "Removal and Installation"](#).  
NO >> Repair or replace harness.

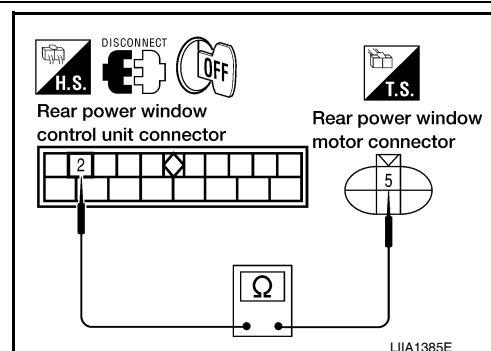

REAR RH

# ENCODER

## < COMPONENT DIAGNOSIS >

### REAR RH : Description

INFOID:000000005147206

Detects condition of the front power window motor LH operation and transmits to main power window and door lock/unlock switch as pulse signal.

### REAR RH : Component Function Check

INFOID:000000005147207

#### 1. CHECK ENCODER OPERATION

Does front door glass RH perform AUTO open/close operation normally when operating main power window and door lock/unlock switch?

Is the inspection result normal?

- YES >> Encoder operation is OK.  
NO >> Refer to [PWC-31, "REAR RH : Diagnosis Procedure"](#).


### REAR RH : Diagnosis Procedure


INFOID:000000005147208

Regarding Wiring Diagram information, refer to [PWC-53, "Wiring Diagram"](#).

#### 1. CHECK ENCODER SIGNAL

- Turn ignition switch ON.
- Check the signal between rear power window control unit RH connector D309 terminal 4 and ground with oscilloscope.

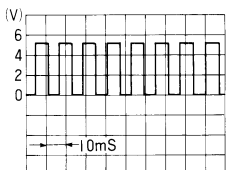Connector	Terminals		Condition	Signal
	(+)	(-)		
D309	4	Ground	Opening	

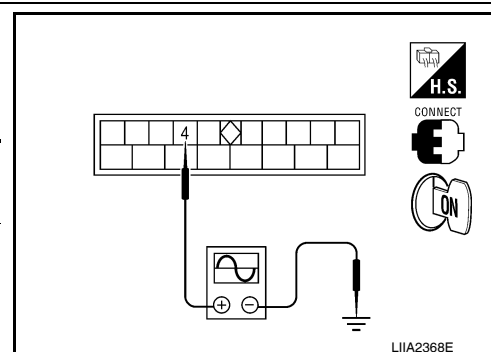

Is the inspection result normal?

- YES >> GO TO 2  
NO >> Replace rear power window control unit RH.

#### 2. CHECK HARNESS CONTINUITY


- Turn ignition switch OFF.
- Disconnect rear power window control unit RH and rear power window motor RH.
- Check continuity between rear power window control unit RH connector D309 terminal 4 and rear power window motor RH connector D304 terminal 3.

**4 - 3 : Continuity should exist.**

Is the inspection result normal?

- YES >> GO TO 3  
NO >> Repair or replace harness.

#### 3. CHECK REAR POWER WINDOW MOTOR RH POWER SUPPLY

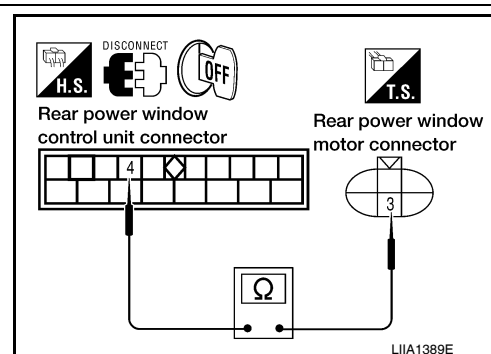

# ENCODER

## < COMPONENT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect rear power window motor RH.
3. Turn ignition switch ON.
4. Check voltage between rear power window motor RH connector D304 terminal 4 and ground.


**4 - Ground**

**: Approx. 10V**

Is the inspection result normal?

YES >> GO TO 5

NO >> GO TO 4

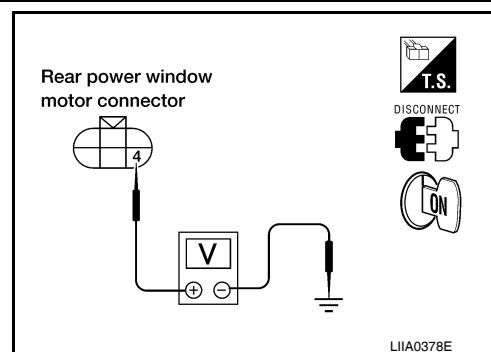

## 4. CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect rear power window motor RH and rear power window control unit RH.
3. Check continuity between rear power window motor RH connector D304 (B) terminal 4 and rear power window control unit RH connector D309 (A) terminal 5.


**4 - 5**

**: Continuity should exist.**

Is the inspection result normal?

YES >> Replace rear power window switch RH. Refer to [PWC-119, "Removal and Installation"](#).

NO >> Repair or replace harness.

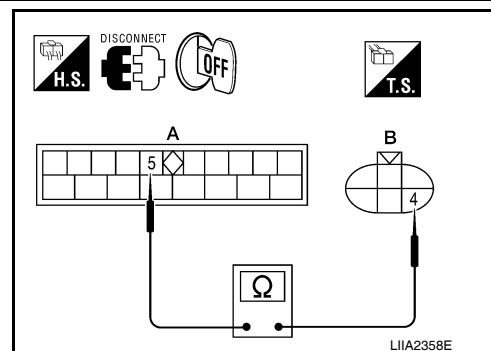

## 5. CHECK ENCODER GROUND

1. Disconnect rear power window motor RH.
2. Check continuity between rear power window motor RH connector D304 terminal 6 and ground.


**6 - Ground**

**: Continuity should exist.**

Is the inspection result normal?

YES >> GO TO 7

NO >> GO TO 6

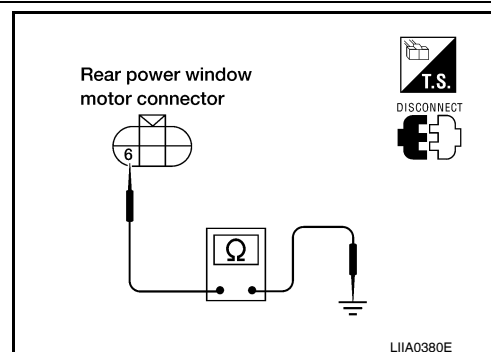

## 6. CHECK ENCODER GROUND CIRCUIT

1. Disconnect rear power window control unit RH.
2. Check continuity between rear power window motor RH connector D304 terminal 6 and rear power window control unit RH connector D309 terminal 3.


**6 - 3**

**: Continuity should exist.**

Is the inspection result normal?

YES >> Replace rear power window control unit RH.

NO >> Repair or replace harness.

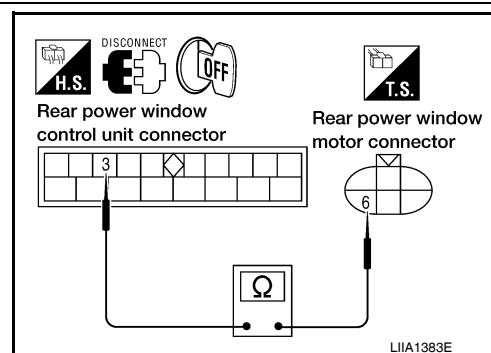

## 7. CHECK REAR POWER WINDOW MOTOR RH LIMIT SWITCH SIGNAL




# ENCODER

## < COMPONENT DIAGNOSIS >

1. Turn ignition switch ON.
2. Check voltage between rear power window control unit RH connector and ground.

Connector	Terminals		Condition	Voltage (V) (Approx.)
	(+)	(-)		
D209	3	Ground	Rear power window RH is between fully-open and just before fully-closed position (ON)	0
			Rear power window RH is between just before fully-closed position and fully-closed position (OFF)	5

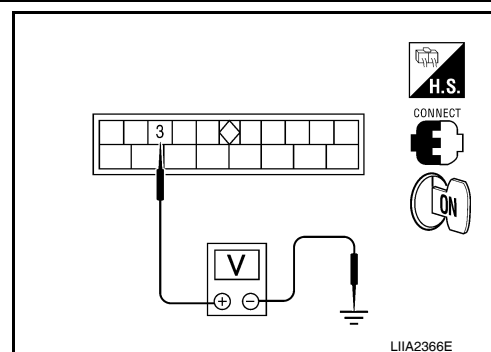

Is the inspection result normal?

- YES >> Limit switch circuit is OK.  
 NO >> GO TO 8


## 8. CHECK REAR POWER WINDOW SWITCH RH OUTPUT SIGNAL

1. Turn ignition switch ON.
2. Check voltage between rear power window control unit RH harness connector D309 terminal 2 and ground.

**2 - Ground : Approx. 5V**

Is the inspection result normal?

- YES >> GO TO 9  
 NO >> Replace rear power window control unit RH.

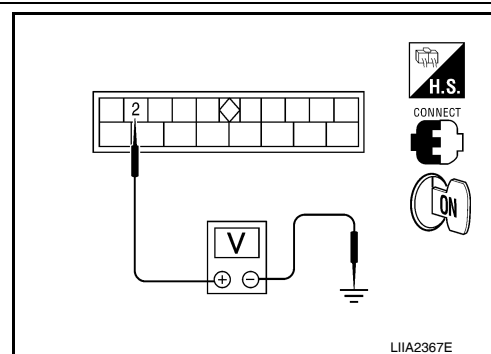


## 9. CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect rear power window control unit RH.
3. Check continuity between rear power window control unit RH connector D309 terminal 2 and rear power window motor RH connector D304 terminal 5.

**2 - 5 : Continuity should exist.**

Is the inspection result normal?

- YES >> Replace rear power window motor RH. Refer to [GW-18, "Removal and Installation"](#).  
 NO >> Repair or replace harness.

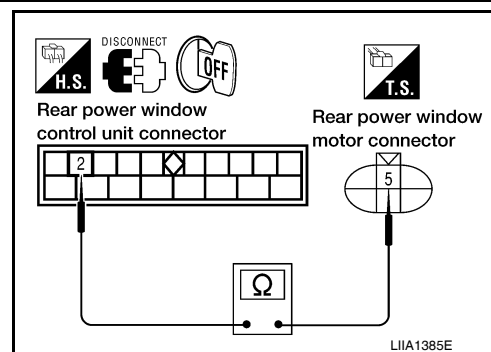

# DOOR SWITCH

< COMPONENT DIAGNOSIS >

## DOOR SWITCH

### Description

INFOID:000000005147209

Detects door open/close condition and transmits the signal to BCM.

### Component Function Check

INFOID:000000005147210

#### 1. CHECK FRONT DOOR SWITCH INPUT SIGNAL

Check ("DOOR SW-DR" and "DOOR SW-AS") in "DATA MONITOR" mode with CONSULT-III. Refer to [BCS-27, "RETAINED PWR : CONSULT-III Function \(BCM - RETAINED PWR\)"](#).

Monitor item	Condition	
DOOR SW-DR	OPEN	: ON
	CLOSE	: OFF
DOOR SW-AS	OPEN	: ON
	CLOSE	: OFF

Is the inspection result normal?

YES >> Front door switch circuit is OK.

NO >> Refer to [PWC-34, "Diagnosis Procedure"](#).

### Diagnosis Procedure


INFOID:000000005147211

Regarding Wiring Diagram information, refer to [PWC-53, "Wiring Diagram"](#).

#### 1. CHECK FRONT DOOR SWITCH

Check voltage between BCM connector and ground.

Terminals		Door condition	Voltage (V) (Approx.)
(+)	(-)		
BCM connector	Terminal		
M18	12	Front door RH	0
		CLOSE	Battery voltage
M19	47	Front door LH	0
		CLOSE	Battery voltage

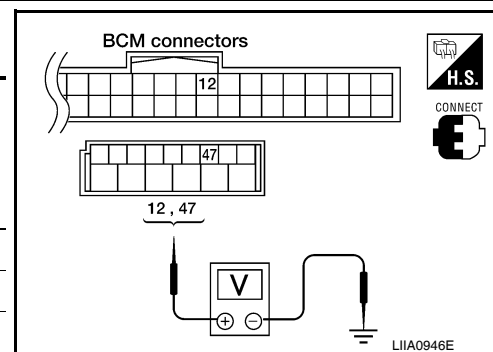

Is the measurement value within the specification?

YES >> Replace BCM. Refer to [BCS-59, "Removal and Installation"](#).

NO >> GO TO 2

#### 2. CHECK HARNESS CONTINUITY

# DOOR SWITCH

## < COMPONENT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect BCM and front door switch.
3. Check continuity between BCM connector and front door switch connector.

BCM connector	Terminal	Front door switch connector	Terminal	Continuity
M18	12	RH: B108	2	Yes
M19	47	LH: B8		

4. Check continuity between front door switch connector and ground.

Front door switch connector	Terminal	Ground	Continuity
B8 (LH)	2	Ground	No
B108 (RH)			

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace harness.

## 3. CHECK BCM OUTPUT SIGNAL

1. Connect BCM connector.
2. Check voltage between BCM connector and ground.

Terminal			Voltage (V) (Approx.)
(+)		(-)	
BCM connector	Terminal		
M18	12	Ground	Battery voltage
M19	47		

Is the measurement value within the specification?

YES >> GO TO 4

NO >> Replace BCM. Refer to [BCS-59, "Removal and Installation"](#).

## 4. CHECK FRONT DOOR SWITCH

Check front door switch.

Refer to [PWC-35, "Component Inspection"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-38, "Intermittent Incident"](#).

NO >> Replace front door switch.

## Component Inspection

INFOID:000000005147212

## 1. CHECK FRONT DOOR SWITCH




Check front door switches.

Terminal		Door switch	Continuity
Door switches			
2	Ground part of door switch	Pressed	No
		Released	Yes

Is the inspection result normal?

YES >> Front door switch is OK.

NO >> Replace front door switch.

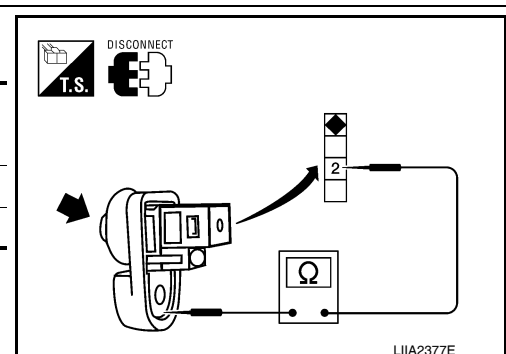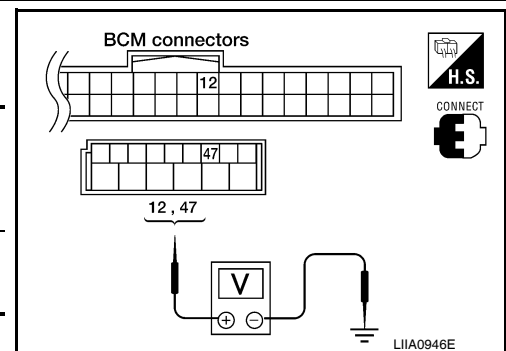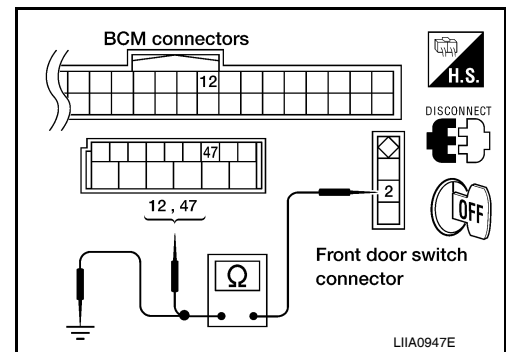

# DOOR KEY CYLINDER SWITCH

< COMPONENT DIAGNOSIS >

## DOOR KEY CYLINDER SWITCH

### Description

INFOID:000000005147213

Main power window and door lock/unlock switch detects condition of the door key cylinder and transmits to BCM as the LOCK or UNLOCK signals.

### Component Function Check

INFOID:000000005147214

### 1. CHECK DOOR KEY CYLINDER SWITCH INPUT SIGNAL

Check ("KEY CYL LK-SW", "KEY CYL UN-SW") in "DATA MONITOR" mode for "POWER DOOR LOCK SYSTEM" with CONSULT-III. Refer to [DLK-56. "CONSULT-III Function \(INTELLIGENT KEY\)"](#).

Monitor item	Condition
KEY CYL LK-SW	Lock : ON
	Neutral / Unlock : OFF
KEY CYL UN-SW	Unlock : ON
	Neutral / Lock : OFF

Is the inspection result normal?

YES >> Key cylinder switch is OK.

NO >> Refer to [PWC-36. "Diagnosis Procedure"](#).

### Diagnosis Procedure


INFOID:000000005147215

Regarding Wiring Diagram information, refer to [PWC-53. "Wiring Diagram"](#).

### 1. CHECK DOOR KEY CYLINDER SWITCH INPUT SIGNAL

1. Turn ignition switch ON.
2. Check voltage between main power window and door lock/unlock switch connector and ground.

Terminals		Key position	Voltage (V) (Approx.)
(+)	(-)		
Main power window and door lock/unlock switch connector	Terminal		
D7	4	Lock	0
		Neutral/Unlock	5
	6	Unlock	0
		Neutral/Lock	5

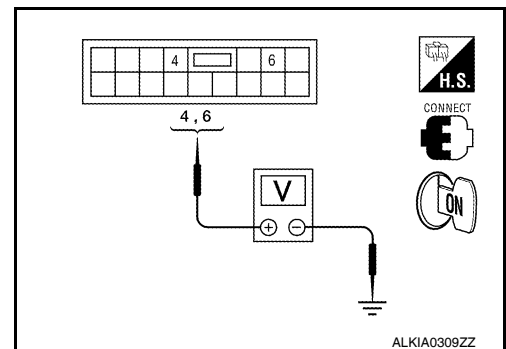

Is the measurement value within the specification?

YES >> Replace main power window and door lock/unlock switch.

NO >> GO TO 2


### 2. CHECK DOOR KEY CYLINDER SIGNAL CIRCUIT

# DOOR KEY CYLINDER SWITCH

## < COMPONENT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect main power window and door lock/unlock switch and front door lock assembly LH (key cylinder switch).
3. Check continuity between main power window and door lock/unlock switch connector and front door lock assembly LH (key cylinder switch) connector.

Main power window and door lock/unlock switch connector	Terminal	Front door lock assembly LH (key cylinder switch) connector	Terminal	Continuity
D7 (A)	4	D14 (B)	1	Yes
	6		6	

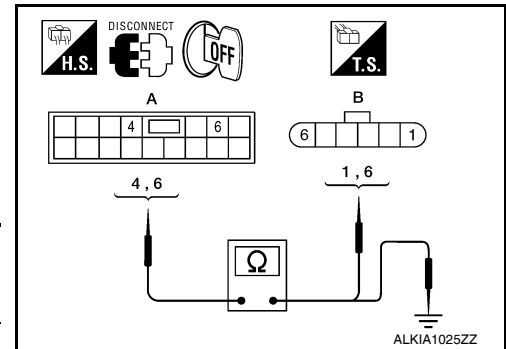

4. Check continuity between main power window and door lock/unlock switch connector and ground.

Main power window and door lock/unlock switch connector	Terminal	Ground	Continuity
D7 (A)	4	Ground	No
	6		

### Is the inspection result normal?

- YES >> GO TO 3  
NO >> Repair or replace harness.


## 3. CHECK DOOR KEY CYLINDER SWITCH GROUND CIRCUIT

Check continuity between front door lock assembly LH (key cylinder switch) connector and ground.

Front door lock assembly LH (key cylinder switch) connector	Terminal	Ground	Continuity
D14	5	Ground	Yes

### Is the inspection result normal?

- YES >> GO TO 4  
NO >> Repair or replace harness.

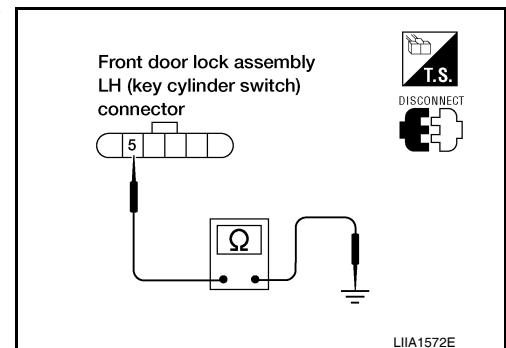

## 4. CHECK DOOR KEY CYLINDER SWITCH

Check door key cylinder switch.

Refer to [PWC-37, "Component Inspection"](#).

### Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-38, "Intermittent Incident"](#).  
NO >> Replace front door lock assembly LH (door key cylinder switch).

## Component Inspection

INFOID:000000005147216

## COMPONENT INSPECTION


### 1. CHECK DOOR KEY CYLINDER SWITCH

# DOOR KEY CYLINDER SWITCH

## < COMPONENT DIAGNOSIS >

Check front door lock assembly LH (key cylinder switch).

Terminal		Key position	Continuity
Front door lock assembly LH (key cylinder switch) connector			
6	5	Unlock	Yes
		Neutral/Lock	No
1		Lock	Yes
		Neutral/Unlock	No

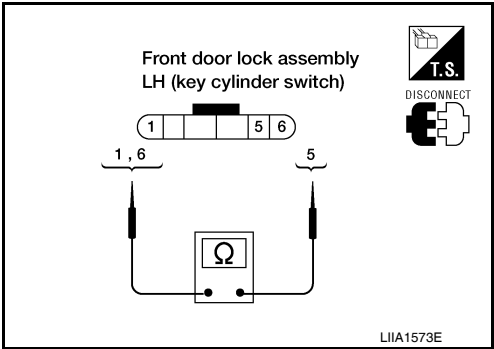

Is the inspection result normal?

- YES    >> Key cylinder switch is OK.  
NO    >> Replace front door lock assembly LH (key cylinder switch).

# POWER WINDOW SERIAL LINK

< COMPONENT DIAGNOSIS >

## POWER WINDOW SERIAL LINK

### POWER WINDOW MAIN SWITCH

#### POWER WINDOW MAIN SWITCH : Description

INFOID:000000005147217

Main power window and door lock/unlock switch, power window and door lock/unlock switch RH and BCM transmit and receive the signal by power window serial link.

The signal mentioned below is transmitted from BCM to main power window and door lock/unlock switch and power window and door lock/unlock switch RH

- Keyless power window down signal

The signal mentioned below is transmitted from main power window and door lock/unlock switch to power window and door lock/unlock switch RH

- Front door window RH operation signal
- Power window control by key cylinder switch signal
- Power window lock switch signal
- Retained power operation signal

#### POWER WINDOW MAIN SWITCH : Component Function Check

INFOID:000000005147218

##### 1. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH OUTPUT SIGNAL

Check ("CDL LOCK SW ", "CDL UNLOCK SW") in "DATA MONITOR" mode for "POWER DOOR LOCK SYSTEM" with CONSULT-III. Refer to [BCS-17, "DOOR LOCK : CONSULT-III Function \(BCM - DOOR LOCK\)"](#).

Monitor item	Condition
CDL LOCK SW	LOCK : ON
	UNLOCK : OFF
CDL UNLOCK SW	LOCK : OFF
	UNLOCK : ON

Is the inspection result normal?

YES >> Power window serial link is OK.

NO >> Refer to [PWC-39, "POWER WINDOW MAIN SWITCH : Diagnosis Procedure"](#).


#### POWER WINDOW MAIN SWITCH : Diagnosis Procedure

INFOID:000000005147219

Regarding Wiring Diagram information, refer to [PWC-53, "Wiring Diagram"](#).

##### 1. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH OUTPUT SIGNAL


1. Remove Intelligent Key or ignition key, and close front door LH and RH.
2. Check signal between BCM connector and ground with oscilloscope when door lock and unlock switch (LH and RH) is turned to "LOCK" or "UNLOCK".
3. Check that signals which are shown in the figure below can be detected during 10 second just after door lock and unlock switch (LH and RH) is turned to "LOCK" or "UNLOCK".

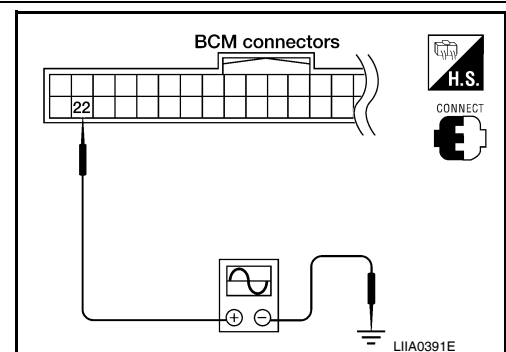

# POWER WINDOW SERIAL LINK

## < COMPONENT DIAGNOSIS >

Terminal		Signal (Reference value)
(+)	(-)	
BCM connector	Terminal	
M18	22	Ground

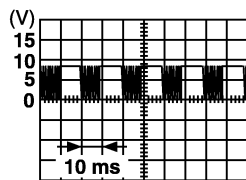

PIIA1297E

Is the inspection result normal?


YES >> Power window serial link is OK.

NO >> GO TO 2

## 2. CHECK POWER WINDOW SERIAL LINK CIRCUIT

- Turn ignition switch OFF.
- Disconnect BCM and main power window and door lock/unlock switch.
- Check continuity between BCM connector and main power window and door lock/unlock switch connector.

BCM connector	Terminal	Main power window and door lock/unlock switch connector	Terminal	Continuity
M18 (A)	22	D7 (B)	14	Yes

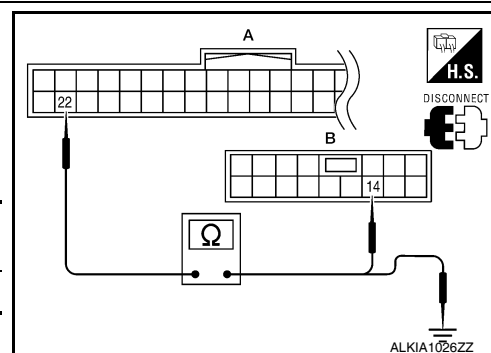

- Check continuity between BCM connector and ground.

BCM connector	Terminal	Ground	Continuity
M18 (A)	22		No

Is the inspection result normal?

YES >> Replace main power window and door lock/unlock switch. Refer to [PWC-117, "Removal and Installation"](#).

NO >> Repair or replace harness.

## FRONT POWER WINDOW SWITCH

### FRONT POWER WINDOW SWITCH : Description

INFOID:000000005147220

Main power window and door lock/unlock switch, power window and door lock/unlock switch RH and BCM transmit and receive the signal by power window serial link.

The signal mentioned below is transmitted from BCM to main power window and door lock/unlock switch and power window and door lock/unlock switch RH

- Keyless power window down signal

The signal mentioned below is transmitted from main power window and door lock/unlock switch to power window and door lock/unlock switch RH

- Front door window RH operation signal
- Power window control by key cylinder switch signal
- Retained power operation signal
- Power window lock switch signal

### FRONT POWER WINDOW SWITCH : Component Function Check

INFOID:000000005147221

## 1. CHECK POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH OUTPUT SIGNAL



# POWER WINDOW SERIAL LINK

## < COMPONENT DIAGNOSIS >

Check ("CDL LOCK SW", "CDL UNLOCK SW") in "DATA MONITOR" mode for "POWER DOOR LOCK SYSTEM" with CONSULT-III. Refer to [BCS-17, "DOOR LOCK : CONSULT-III Function \(BCM - DOOR LOCK\)"](#).

Monitor item	Condition	
CDL LOCK SW	LOCK	: ON
	UNLOCK	: OFF
CDL UNLOCK SW	LOCK	: OFF
	UNLOCK	: ON

### Is the inspection result normal?

YES >> Power window serial link is OK.

NO >> Refer to [PWC-41, "FRONT POWER WINDOW SWITCH : Diagnosis Procedure"](#).

## FRONT POWER WINDOW SWITCH : Diagnosis Procedure


INFOID:000000005147222

Regarding Wiring Diagram information, refer to [PWC-68, "Wiring Diagram"](#).


### 1. CHECK POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH

1. Remove Intelligent Key or ignition key, and close the front door LH and RH.
2. Check signal between BCM connector and ground with oscilloscope when door lock and unlock switch (LH and RH) is turned to "LOCK" or "UNLOCK".
3. Check that signals which are shown in the figure below can be detected during 10 second just after door lock and unlock switch (LH and RH) is turned to "LOCK" or "UNLOCK".

Terminal		Signal (Reference value)
(+)	(-)	
BCM connector	Terminal	
M18	2	Ground

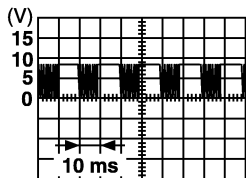

PIIA1297E

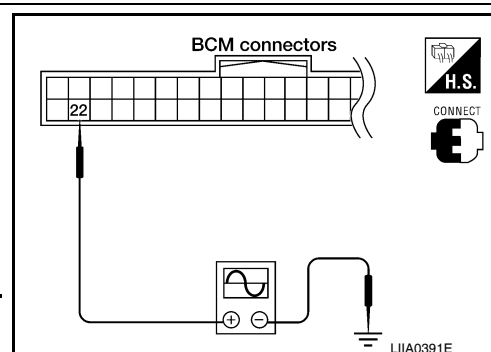

### Is the inspection result normal?


YES >> Power window serial link is OK.

NO >> GO TO 2

### 2. CHECK POWER WINDOW SERIAL LINK CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM.
3. Check continuity between BCM connector and power window and door lock/unlock switch RH connector.

BCM connector	Terminal	Power window and door lock/unlock switch RH connector	Terminal	Continuity
M18 (A)	22	D105 (B)	16	Yes

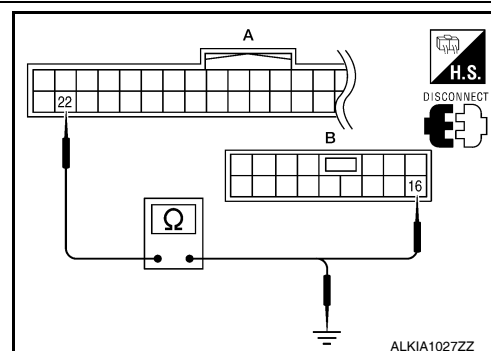

## POWER WINDOW SERIAL LINK

### < COMPONENT DIAGNOSIS >

4. Check continuity between BCM connector and ground.

BCM connector	Terminal	Ground	Continuity
M18 (A)	22		No

Is the inspection result normal?

- YES >> Replace main power window and door lock/unlock switch. Refer to [PWC-117. "Removal and Installation"](#).  
NO >> Repair or replace harness.

## REAR POWER WINDOW SWITCH

### REAR POWER WINDOW SWITCH : Power Window Serial Link Check Rear LH or RH

INFOID:000000005147223

Regarding Wiring Diagram information, refer to [PWC-53. "Wiring Diagram"](#).

## 1. CHECK REAR POWER WINDOW CONTROL UNIT LH OR RH

1. Replace with operative rear power window control unit LH or RH.
2. Does window operate normally?

Is the inspection result normal?

- YES >> Replace rear power window control unit LH or RH.  
NO >> GO TO 2


## 2. CHECK POWER WINDOW SERIAL LINK CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect main power window and door lock/unlock switch and rear power window control unit LH or RH.
3. Check continuity between main power window and door lock/unlock switch connector D7 terminal 14 and rear power window control unit LH or RH connector D209 (LH) or D309 (RH) terminal 1.

**14 - 1 : Continuity should exist.**

Is the inspection result normal?

- YES >> Replace main power window and door lock/unlock switch. Refer to [PWC-117. "Removal and Installation"](#).  
NO >> Repair or replace harness.

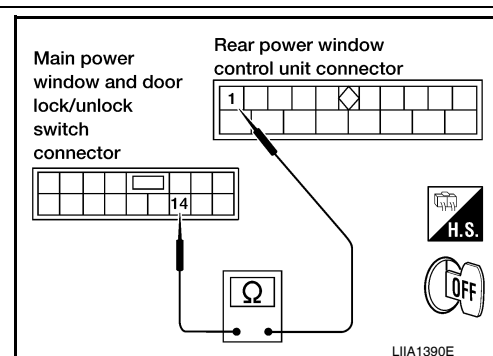

# POWER WINDOW LOCK SWITCH

< COMPONENT DIAGNOSIS >

## POWER WINDOW LOCK SWITCH

### Description

INFOID:000000005147224

Ground circuit of main power window and door lock/unlock switch shuts off if power window lock switch of main power window and door lock/unlock switch is operated. This inhibits all operation, except for the main switch.

### Component Function Check

INFOID:000000005147225

#### 1. CHECK POWER WINDOW LOCK SIGNAL

Exchanges for a normal main power window and door lock/unlock switch, and operation is checked.

Does power window lock operate?

- YES >> Replace main power window and door lock/unlock switch. Refer to [PWC-117, "Removal and Installation"](#).
- NO >> Check condition of harness and connector.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

PWC

# REAR POWER VENT WINDOW SWITCH CIRCUIT CHECK

< COMPONENT DIAGNOSIS >

## REAR POWER VENT WINDOW SWITCH CIRCUIT CHECK

### Description

INFOID:000000005147226

Rear power vent window motor LH and RH will be operated if rear power vent window switch is operated.

### Diagnosis Procedure

INFOID:000000005147227

Regarding Wiring Diagram information, refer to [PWC-53, "Wiring Diagram"](#).

### 1. CHECK REAR POWER VENT WINDOW SWITCH OPERATION

1. Turn ignition switch OFF.
2. Disconnect rear power vent window switch.
3. Check continuity between rear power vent window switch terminals 1, 3 and 4.

Terminals		Condition	Continuity
3	1	Rear power vent window switch is pressed OPEN.	Yes
4	1	Rear power vent window switch is pressed CLOSE.	Yes

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace rear power vent window switch.

### 2. CHECK REAR POWER VENT WINDOW SWITCH CIRCUIT HARNESS CONTINUITY



Check continuity between rear power vent window switch connector M95 terminal 1 and ground.

**1 - Ground : Continuity should exist.**

Is the inspection result normal?

YES >> Rear power vent window switch circuit harness OK.

NO >> Repair or replace harness.

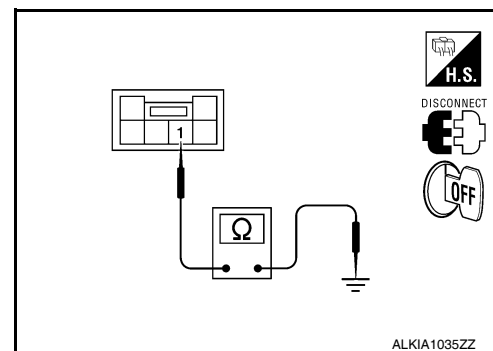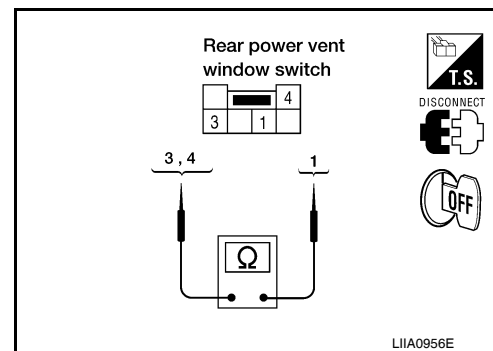

# REAR POWER VENT WINDOW MOTOR LH CIRCUIT CHECK

< COMPONENT DIAGNOSIS >

## REAR POWER VENT WINDOW MOTOR LH CIRCUIT CHECK

### Description

INFOID:0000000005147228

Rear power vent windows OPEN/CLOSE by receiving the signal from rear power vent window switch.

### Diagnosis Procedure


INFOID:0000000005147229

Regarding Wiring Diagram information, refer to [PWC-53, "Wiring Diagram"](#).

### 1. CHECK REAR POWER VENT WINDOW LH SIGNAL

1. Turn ignition switch OFF.
2. Disconnect rear power vent window motor LH.
3. Turn ignition switch ON.
4. Check voltage between rear power vent window motor LH connector B52 terminals 1, 2 and ground.

Connector	Terminals		Condition	Voltage (V) (Approx.)
	(+)	(-)		
B52	1	Ground	Opening	Battery voltage
			Closing	0
	2		Opening	0
			Closing	Battery voltage

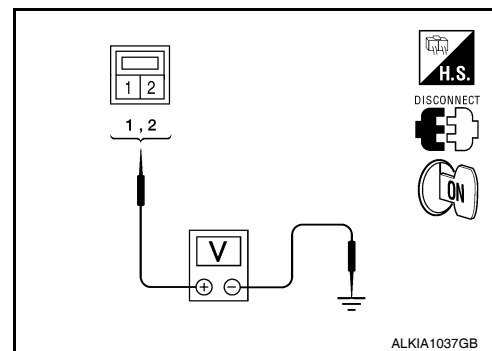

Is the inspection result normal?

- YES >> Replace rear power vent window motor LH. Refer to [GW-21, "Removal and Installation"](#).  
NO >> Repair or replace harness.

# REAR POWER VENT WINDOW MOTOR RH CIRCUIT CHECK

< COMPONENT DIAGNOSIS >

## REAR POWER VENT WINDOW MOTOR RH CIRCUIT CHECK

### Description

INFOID:000000005147230

Rear power vent windows OPEN/CLOSE by receiving the signal from rear power vent window switch.

### Diagnosis Procedure


INFOID:000000005147231

Regarding Wiring Diagram information, refer to [PWC-53, "Wiring Diagram"](#).

### 1. CHECK REAR POWER VENT WINDOW SWITCH RH SIGNAL

1. Turn ignition switch OFF.
2. Disconnect rear power vent window motor RH.
3. Turn ignition switch ON.
4. Check voltage between rear power vent window motor LH connector B150 terminals 1, 2 and ground.

Connector	Terminals		Condition	Voltage (V) (Approx.)
	(+)	(-)		
B150	1	Ground	Opening	Battery voltage
			Closing	0
	2		Opening	0
			Closing	Battery voltage

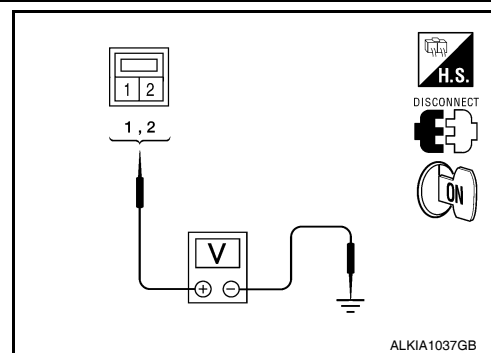

Is the inspection result normal?

- YES >> Replace rear power vent window motor RH. Refer to [GW-21, "Removal and Installation"](#).
- NO >> Repair or replace harness.

# REAR POWER VENT WINDOW RELAY (OPEN) CHECK

< COMPONENT DIAGNOSIS >

## REAR POWER VENT WINDOW RELAY (OPEN) CHECK

### Description

INFOID:000000005147232

Rear power vent windows OPEN/CLOSE by receiving the signal from rear power vent window switch.

### Diagnosis Procedure


INFOID:000000005147233

Regarding Wiring Diagram information, refer to [PWC-53, "Wiring Diagram"](#).

### 1.CHECK REAR POWER VENT WINDOW RELAY (OPEN) POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect rear power vent window relay (OPEN).
3. Turn ignition switch ON.
4. Check voltage between rear power vent window relay (OPEN) connector and ground.

Connector	Terminals		Voltage (V) (Approx.)
	(+)	(-)	
M87	1	Ground	Battery voltage
	5		

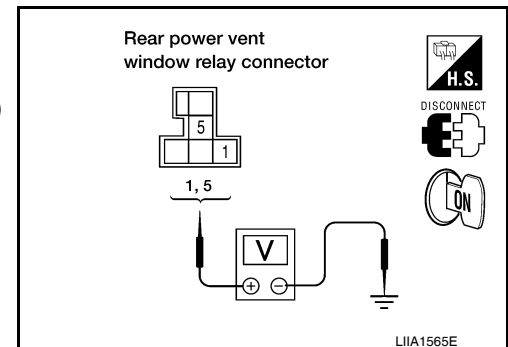

Is the inspection result normal?


YES >> GO TO 2

NO >> Repair or replace harness.

### 2.CHECK REAR POWER VENT WINDOW RELAY (OPEN)

Check continuity between rear power vent window relay (OPEN) terminals 3 and 4, 3 and 5.

Terminals		Condition	Continuity
3	4	12V direct current supply between terminals 1 and 2	No
		No current supply	Yes
3	5	12V direct current supply between terminals 1 and 2	Yes
		No current supply	No

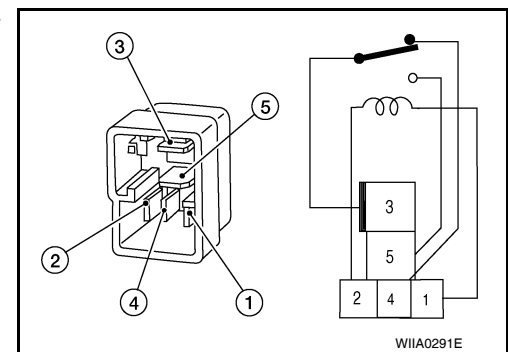

Is the inspection result normal?

YES >> GO TO 3

NO >> Replace rear power vent window relay (OPEN).

### 3.CHECK REAR POWER VENT WINDOW RELAY (OPEN) GROUND CIRCUIT


Check continuity between rear power vent window relay (OPEN) connector M87 terminal 4 and ground.

**4 - Ground : Continuity should exist.**

Is the inspection result normal?

YES >> GO TO 4

NO >> Repair or replace harness.

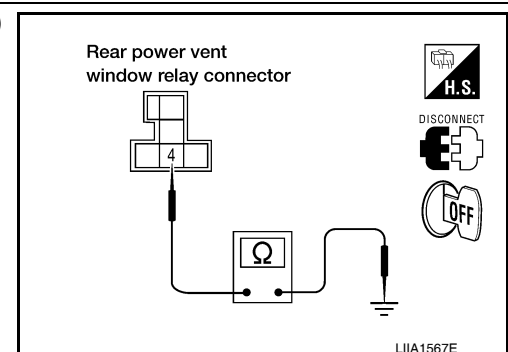

### 4.CHECK REAR POWER VENT WINDOW RELAY (OPEN) CIRCUIT

## REAR POWER VENT WINDOW RELAY (OPEN) CHECK

### < COMPONENT DIAGNOSIS >


1. Disconnect rear power vent window switch.
2. Check continuity between rear power vent window relay (OPEN) connector M87 terminal 2 and rear power vent window switch connector M95 terminal 3.

**2 - 3**

**: Continuity should exist.**

Is the inspection result normal?

- YES >> Replace rear power vent window switch.  
NO >> Repair or replace harness.

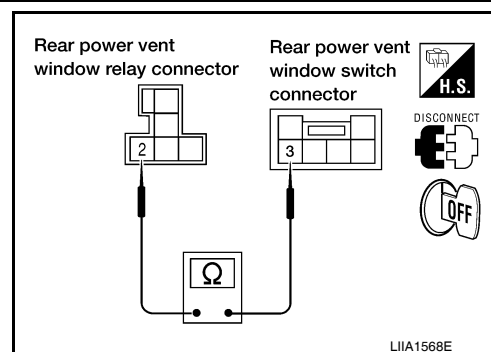



# REAR POWER VENT WINDOW RELAY (CLOSE) CHECK

< COMPONENT DIAGNOSIS >

## REAR POWER VENT WINDOW RELAY (CLOSE) CHECK

### Description

INFOID:000000005147234

Rear power vent windows OPEN/CLOSE by receiving the signal from rear power vent window switch.

### Diagnosis Procedure


INFOID:000000005147235

Regarding Wiring Diagram information, refer to [PWC-53, "Wiring Diagram"](#).

### 1.CHECK REAR POWER VENT WINDOW RELAY (CLOSE) POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect rear power vent window relay (CLOSE).
3. Turn ignition switch ON.
4. Check voltage between rear power vent window relay (CLOSE) connector and ground.

Connector	Terminals		Voltage (V) (Approx.)
	(+)	(-)	
M89	1	Ground	Battery voltage
	5		

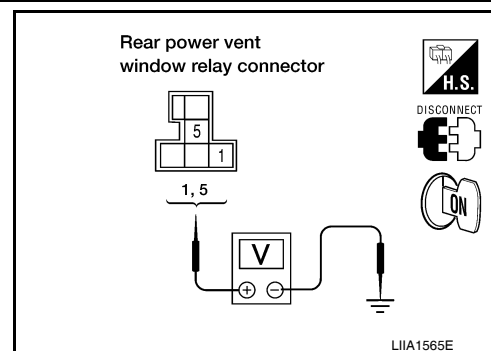

Is the inspection result normal?


YES >> GO TO 2

NO >> Repair or replace harness.

### 2.CHECK REAR POWER VENT WINDOW RELAY (CLOSE)

Check continuity between rear power vent window relay (CLOSE) terminals 3 and 4, 3 and 5.

Terminals		Condition	Continuity
3	4	12V direct current supply between terminals 1 and 2	No
		No current supply	Yes
3	5	12V direct current supply between terminals 1 and 2	Yes
		No current supply	No

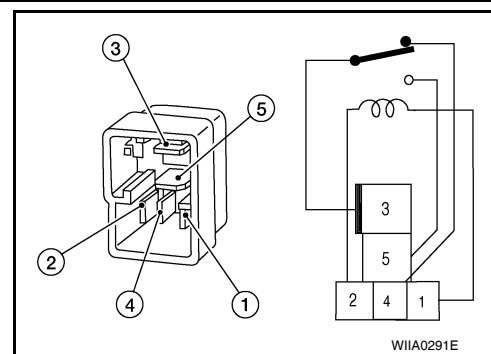

Is the inspection result normal?

YES >> GO TO 3

NO >> Replace rear power vent window relay (CLOSE).

### 3.CHECK REAR POWER VENT WINDOW RELAY (CLOSE) GROUND CIRCUIT


Check continuity between rear power vent window relay (CLOSE) connector M89 terminal 4 and ground.

**4 - Ground : Continuity should exist.**

Is the inspection result normal?

YES >> GO TO 4

NO >> Repair or replace harness.

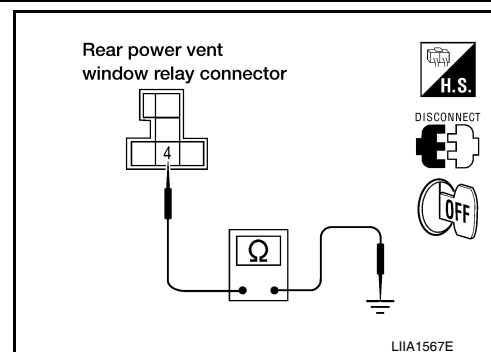

### 4.CHECK REAR POWER VENT WINDOW RELAY (CLOSE) CIRCUIT

## REAR POWER VENT WINDOW RELAY (CLOSE) CHECK

### < COMPONENT DIAGNOSIS >


1. Disconnect rear power vent window switch.
2. Check continuity between rear power vent window relay (CLOSE) connector M89 terminal 2 and rear power vent window switch M95 terminal 4.

**2 - 4**

**: Continuity should exist.**

Is the inspection result normal?

- YES >> Replace rear power vent window switch.  
NO >> Repair or replace harness.

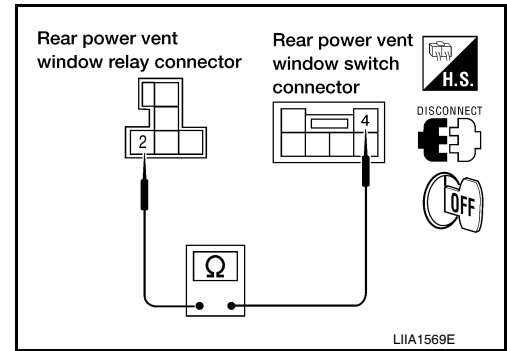

# POWER WINDOW MAIN SWITCH

< ECU DIAGNOSIS >


## ECU DIAGNOSIS

### POWER WINDOW MAIN SWITCH

Reference Value


INFOID:000000005147240

#### TERMINAL LAYOUT

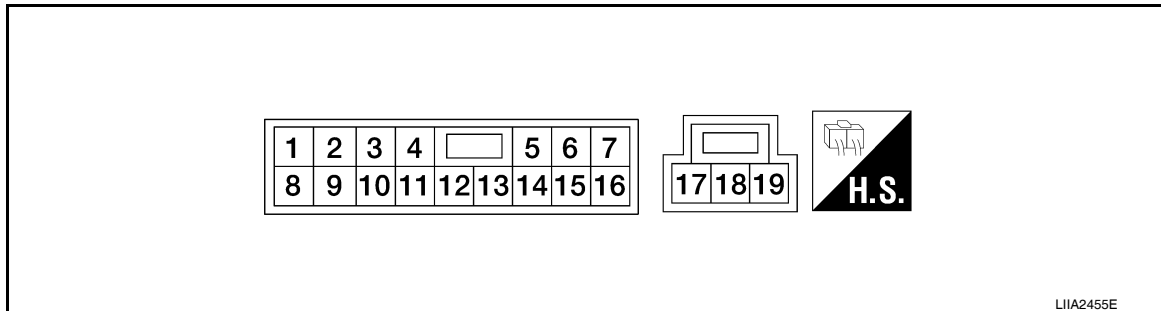



#### PHYSICAL VALUES

#### MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH

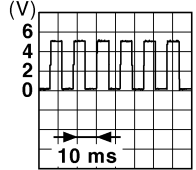Terminal No. (Wire color)		Description		Condition	Voltage [V] (Approx.)
+	-	Signal name	Input/ Output		
2 (W/B)	Ground	Encoder ground	—	—	0
4 (L)	Ground	Door key cylinder switch LH LOCK signal	Input	Key position (Neutral → Locked)	5 → 0
6 (R)	Ground	Door key cylinder switch LH UNLOCK signal	Input	Key position (Neutral → Unlocked)	5 → 0
8 (G/R)	11	Front door power window mo- tor LH UP signal	Output	When front LH switch in power window main switch is operated UP.	Battery voltage
9 (O)	2	Encoder pulse signal 2	Input	When power window mo- tor operates.	
10 (W/L)	Ground	RAP signal	Input	IGN SW ON	Battery voltage
				Within 45 second after ig- nition switch is turned to OFF.	Battery voltage
				When front LH or RH door is opened during retained power operation.	0
11 (G/W)	8	Front door power window mo- tor LH DOWN signal	Output	When front LH switch in power window main switch is operated DOWN.	Battery voltage

# POWER WINDOW MAIN SWITCH

## < ECU DIAGNOSIS >

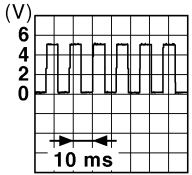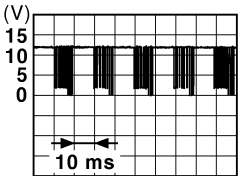Terminal No. (Wire color)		Description		Condition	Voltage [V] (Approx.)
+	—	Signal name	Input/ Output		
13 (G/Y)	2	Encoder pulse signal 1	Input	When power window motor operates.	 JMKIA0070GB
14 (LG/W)	Ground	Power window serial link	Input/ Output	IGN SW ON or power window timer operating.	 JPMIA0013GB
15 (BR)	Ground	Encoder power supply	Output	When ignition switch ON or power window timer operates.	10
17 (B)	Ground	Ground	—	—	0
19 (W/R)	Ground	Battery power supply	Input	—	Battery voltage


INFOID:0000000005147241

## Wiring Diagram



# POWER WINDOW MAIN SWITCH

< ECU DIAGNOSIS >

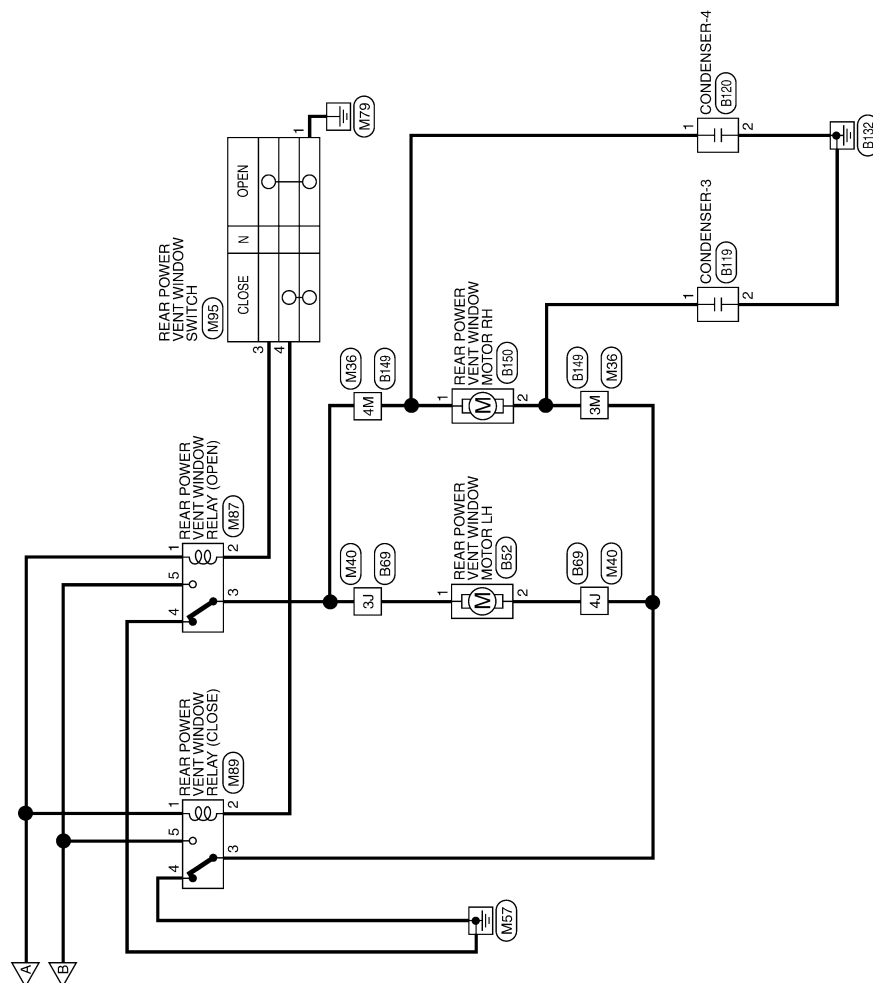

ABKWA0453GB

# POWER WINDOW MAIN SWITCH

< ECU DIAGNOSIS >

## POWER WINDOW SYSTEM CONNECTORS

Connector No.	M8
Connector Name	WIRE TO WIRE
Connector Color	WHITE

7	6	5	4	3	2	1		
16	15	14	13	12	11	10	9	8



Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



41	42	43	44	45	46	47	48	49
50	51	52	53	54	55			

Terminal No.	Color of Wire	Signal Name
5	W/R	-
8	W/V	-
9	W/L	-
14	B	-

Terminal No.	Color of Wire	Signal Name
11	O	ACC SW
12	R/L	DOOR SW (AS)
22	W/V	ANTI-PINCH SERIAL LINK (RX, TX)
38	W/L	IGN SW

Terminal No.	Color of Wire	Signal Name
47	SB	DOOR SW (DR)


Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK

56	57	58	59	60	61	62	63	64
65	66	67	68	69	70			



Terminal No.	Color of Wire	Signal Name
67	B	GND (POWER)
68	W/L	POWER WINDOW POWER SUPPLY (LINKED TO RAP)
69	W/R	POWER WINDOW POWER SUPPLY(BAT)
70	W/B	BAT (F/L)

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

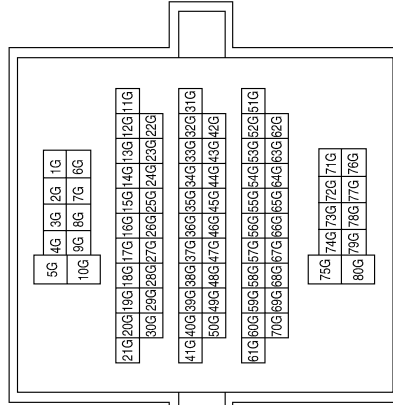

Terminal No.	Color of Wire	Signal Name
7G	W/L	-
10G	W/B	-

ABK1A1340GB

# POWER WINDOW MAIN SWITCH

< ECU DIAGNOSIS >


Connector No.	M60
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

2T	1T
6T	5T 4T 3T




Terminal No.	Color of Wire	Signal Name
6T	O	-

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	WHITE

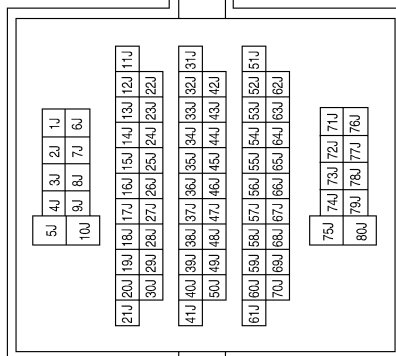

Terminal No.	Color of Wire	Signal Name
3J	BR	-
4J	R	-
40J	W/V	-
60J	SB	-
79J	W/R	-

Connector No.	M36
Connector Name	WIRE TO WIRE
Connector Color	WHITE

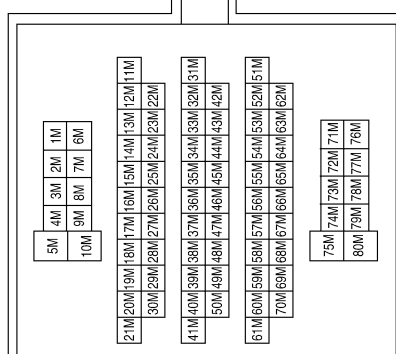

Terminal No.	Color of Wire	Signal Name
2M	W/R	-
3M	R	-
4M	BR	-
61M	R/L	-

Connector No.	M84
Connector Name	WIRE TO WIRE
Connector Color	WHITE

7	6	5	4	3	2	1
16	15	14	13	12	11	10
9	8	7	6	5	4	3



Terminal No.	Color of Wire	Signal Name
5	W/V	-

Connector No.	M75
Connector Name	WIRE TO WIRE
Connector Color	WHITE

4	3	2	1
10	9	8	7
6	5	4	3



Terminal No.	Color of Wire	Signal Name
1	W/R	-
3	B	-

Connector No.	M74
Connector Name	WIRE TO WIRE
Connector Color	BROWN

9	8	7	6	5	4	3	2	1
20	19	18	17	16	15	14	13	12
11	10	9	8	7	6	5	4	3



Terminal No.	Color of Wire	Signal Name
5	W/V	-

AAKIA0104GB



# POWER WINDOW MAIN SWITCH

< ECU DIAGNOSIS >

Connector No.	M87
Connector Name	REAR POWER VENT WINDOW RELAY (OPEN)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	W/L	-
2	R/G	-
3	BR	-
4	B	-
5	W/R	-

Connector No.	M89
Connector Name	REAR POWER VENT WINDOW RELAY (CLOSE)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	W/L	-
2	G/R	-
3	R	-
4	B	-
5	W/R	-

Connector No.	M95
Connector Name	REAR POWER VENT WINDOW SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	B	-
3	R/G	-
4	G/R	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

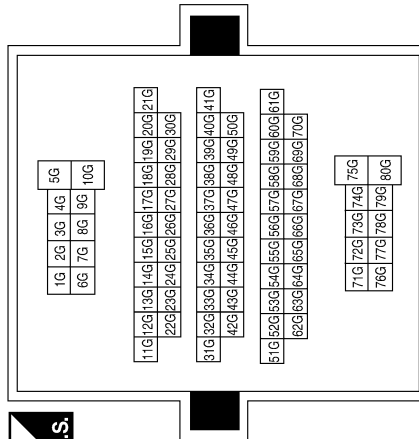

Terminal No.	Color of Wire	Signal Name
7G	L/W	-
10G	W/B	-

Connector No.	B6
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W/V	-
11	B	-
16	W/R	-

ABKIA1341GB

# POWER WINDOW MAIN SWITCH

< ECU DIAGNOSIS >

Connector No.	B8
Connector Name	FRONT DOOR SWITCH LH
Connector Color	WHITE

1	2	3
---	---	---



Terminal No.	Color of Wire	Signal Name
2	SB	—


Connector No.	B52
Connector Name	REAR POWER VENT WINDOW MOTOR LH
Connector Color	WHITE

1	2
---	---



Terminal No.	Color of Wire	Signal Name
1	Y	—
2	G	—

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

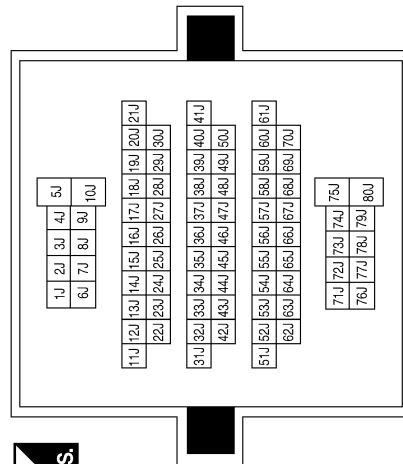

Terminal No.	Color of Wire	Signal Name
3J	Y	—
4J	G	—
40J	W/V	—
60J	SB	—
79J	W/R	—

Connector No.	B101
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3			4	5	6	7
8	9	10	11	12	13	14	15	16

Terminal No.	Color of Wire	Signal Name
5	W/V	—

# POWER WINDOW MAIN SWITCH

< ECU DIAGNOSIS >

Connector No.	B106
Connector Name	WIRE TO WIRE
Connector Color	WHITE



10	9	8	7	6	5	4	3	2	1
18	17	16	15	14	13	12	11		



1	2	3
---	---	---

Connector No.	B108
Connector Name	FRONT DOOR SWITCH RH
Connector Color	WHITE



1	2
---	---

Connector No.	B119
Connector Name	CONDENSER-3
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
1	W/V	-
11	B	-
16	W/R	-

Terminal No.	Color of Wire	Signal Name
2	R/L	-

Terminal No.	Color of Wire	Signal Name
1	BR	-
2	B	-


Connector No.	B120
Connector Name	CONDENSER-4
Connector Color	WHITE



1	2
---	---

Terminal No.	Color of Wire	Signal Name
1	R	-
2	B	-

Connector No.	B149
Connector Name	WIRE TO WIRE
Connector Color	WHITE

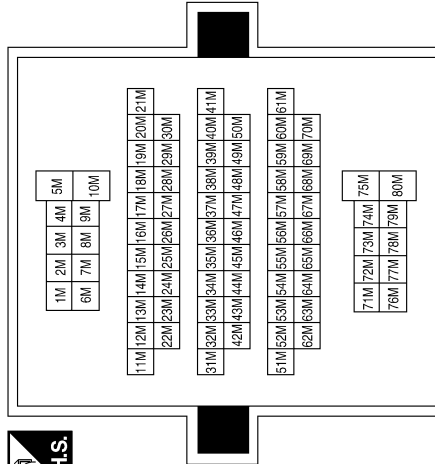

Terminal No.	Color of Wire	Signal Name
2M	W/R	-
3M	BR	-
4M	R	-
61M	R/L	-

AAKIA0106GB

# POWER WINDOW MAIN SWITCH


< ECU DIAGNOSIS >

Connector No.	B150
Connector Name	REAR POWER VENT WINDOW MOTOR RH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	R	-
2	BR	-

Connector No.	D2
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
5	W/R	-
8	LG/W	-
9	W/L	-
14	B	-


Connector No.	D7
Connector Name	MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	-	-
2	W/B	-
3	-	-
4	L	LOCK
5	-	-

Terminal No.	Color of Wire	Signal Name
6	R	UNLOCK
7	-	-
8	G/R	-
9	O	-
10	W/L	-
11	G/W	-
12	-	-
13	G/Y	-
14	LG/W	ANTI PINCH SERIAL LINK
15	BR	-
16	-	-

Connector No.	D8
Connector Name	MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
17	B	GND
18	-	-
19	W/R	P-WDW/BAT

ABKIA1439GB

# POWER WINDOW MAIN SWITCH


< ECU DIAGNOSIS >

Connector No.	D9
Connector Name	FRONT POWER WINDOW MOTOR LH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	G/W	-
2	G/R	-
3	G/Y	-
4	BR	-
5	O	-
6	W/B	-

Connector No.	D102
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
5	LG/W	-

Connector No.	D14
Connector Name	FRONT DOOR LOCK ASSEMBLY LH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	L	LOCK
5	B	GND
6	R	UNLOCK

Connector No.	D104
Connector Name	FRONT POWER WINDOW MOTOR RH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	G	-
2	L	-
3	G/Y	-
4	G/R	-
5	G/W	-
6	W/B	-

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W/R	-
3	B	-

AAKIA0107GB

# POWER WINDOW MAIN SWITCH

< ECU DIAGNOSIS >

Connector No.	D201
Connector Name	WIRE TO WIRE
Connector Color	WHITE

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18		



Terminal No.	Color of Wire	Signal Name
1	W/V	-
11	B	-
16	W/R	-

Terminal No.	Color of Wire	Signal Name
5	-	-
6	-	-
7	-	-
8	L	-
9	G	-
10	W/R	-
11	B	GND
12	G/Y	-
13	-	-
14	-	-
15	G/W	-
16	LG/W	ANTI PINCH SERIAL LINK

Connector No.	D105
Connector Name	POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH
Connector Color	WHITE

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					



Terminal No.	Color of Wire	Signal Name
1	-	-
2	-	-
3	W/B	-
4	G/R	-

Connector No.	D204
Connector Name	REAR POWER WINDOW MOTOR LH
Connector Color	GRAY

2	5	1
4	3	6



Terminal No.	Color of Wire	Signal Name
1	BR	DOWN
2	O	UP
3	Y/R	PULSE
4	BR/W	PWR
5	SB	LIMIT SW
6	G	GND

Connector No.	D203
Connector Name	REAR POWER WINDOW SWITCH LH
Connector Color	WHITE

8	7	6
2	3	4
5	1	




Terminal No.	Color of Wire	Signal Name
1	L	-
2	G/W	-
3	G/W	-
4	W	-
5	W/R	-
6	R	-
7	L	-
8	-	-

ABK1A1441GB

# POWER WINDOW MAIN SWITCH

< ECU DIAGNOSIS >


Connector No.	D301
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W/V	-
11	B	-
16	W/R	-

Terminal No.	Color of Wire	Signal Name
6	R	ILL
7	G/W	V
8	-	-
9	W	DOWN
10	W/R	UP
11	O	UP
12	BR	DOWN
13	W/R	BAT
14	-	-
15	B	GND
16	L	SW GND
17	-	-
18	-	-

Connector No.	D209
Connector Name	REAR POWER WINDOW CONTROL UNIT LH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	W/V	COMMUNICATION
2	SB	LIMIT SW
3	G	ENCODER GND
4	Y/R	ENCODER PULSE
5	BR/W	ENCODER PWR

Connector No.	D304
Connector Name	REAR POWER WINDOW MOTOR RH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	BR	DOWN
2	O	UP
3	Y/B	PULSE
4	BR/W	PWR
5	SB	LIMIT SW
6	G	GND

Connector No.	D303
Connector Name	REAR POWER WINDOW SWITCH RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	G/W	-
3	G/W	-
4	W	-
5	W/L	-
6	R	-
7	L	-
8	-	-

ABKIA0016GB

# POWER WINDOW MAIN SWITCH

< ECU DIAGNOSIS >

Terminal No.	Color of Wire	Signal Name
6	R	ILL
7	GW	V
8	-	-
9	W	DOWN
10	W/L	UP
11	O	UP
12	BR	DOWN
13	W/R	BAT
14	-	-
15	B	GND
16	L	SW_GND
17	-	-
18	-	-

Connector No.	D309
Connector Name	REAR POWER WINDOW CONTROL UNIT RH
Connector Color	WHITE

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18		



Terminal No.	Color of Wire	Signal Name
1	W/V	COMMUNICATION
2	SB	LIMIT_SW
3	G	ENCODER_GND
4	Y/R	ENCODER_PULSE
5	BR/W	ENCODER_PWR

ABKIA0172GB

INFOID:000000005147242

## Fail Safe

### FAIL-SAFE CONTROL

Switches to fail-safe control when malfunction is detected in encoder signal that detects up/down speed and direction of door glass. Switches to fail-safe control when error beyond regulation value is detected between the fully closed position and the actual position of the glass.



# POWER WINDOW MAIN SWITCH

## < ECU DIAGNOSIS >

Error	Error condition
Pulse sensor malfunction	When only one side of pulse signal is being detected for more than the specified value.
Both pulse sensors malfunction	When both pulse signals have not been detected for more than the specified value during glass open/close operation.
Pulse direction malfunction	When the pulse signal that is detected during glass open/close operation detects the opposite condition of power window motor operating direction.
Glass recognition position malfunction 1	When it detects the error between glass fully closed position in power window switch memory and actual fully closed position during glass open/close operation is more than the specified value.
Glass recognition position malfunction 2	When it detects pulse count more than the value of glass full stroke during glass open/close operation.
Malfunction of not yet updated closed position of glass	When glass open/close operation is continuously performed without fully closing more than the specified value (approximately 10 strokes).

It changes to condition before initialization and the following functions do not operate when switched to fail-safe control.

- Auto-up operation
- Anti-pinch function
- Retained power function

Perform initial operation to recover when switched to fail-safe mode. However, it switches back to fail-safe control when malfunction is found in power window switch or in motor.

PWC

# FRONT POWER WINDOW SWITCH


< ECU DIAGNOSIS >

## FRONT POWER WINDOW SWITCH

Reference Value


INFOID:000000005147243

### TERMINAL LAYOUT

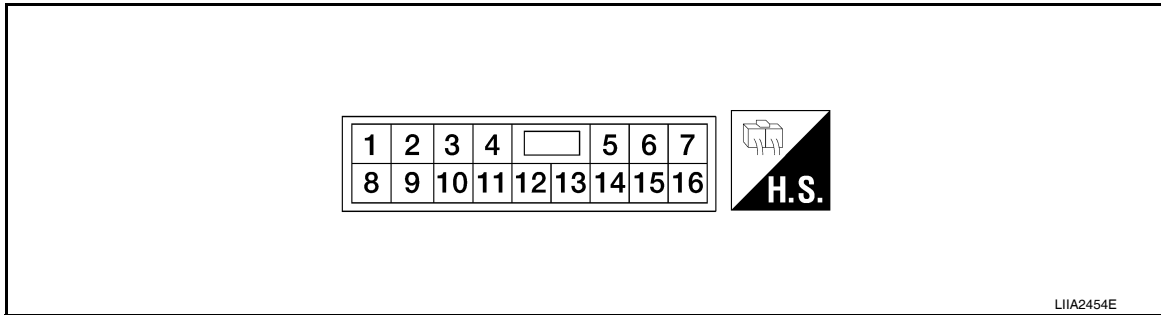

### PHYSICAL VALUES



#### POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH

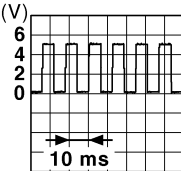Terminal No. (Wire color)		Description		Condition	Voltage [V] (Approx.)
+	–	Signal name	Input/ Output		
3 (W/B)	Ground	Encoder ground	—	—	0
4 (G/R)	Ground	Encoder power supply	Output	When ignition switch ON or power window timer operates	10
8 (L)	9	Power window motor UP signal	Output	When power window motor is UP at operated.	Battery voltage
9 (G)	8	Power window motor DOWN signal	Output	When power window motor is DOWN at operated.	Battery voltage
10 (W/R)	Ground	Battery power supply	Input	—	Battery voltage
11 (B)	Ground	Ground	—	—	0
12 (G/Y)	3	Encoder pulse signal 1	Input	When power window motor op- erates.	

JMKIA0070GB

# FRONT POWER WINDOW SWITCH

## < ECU DIAGNOSIS >

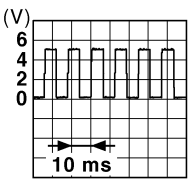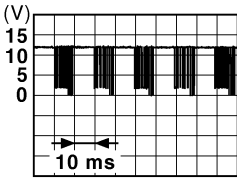Terminal No. (Wire color)		Description		Condition	Voltage [V] (Approx.)
+	–	Signal name	Input/ Output		
15 (G/W)	3	Encoder pulse signal 2	Input	When power window motor operates.	 JMKIA0070GB
16 (LG/W)	Ground	Power window serial link	Input/ Output	IGN SW ON or power window timer operating.	 JPMIA0013GB


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

PWC

INFOID:0000000005367566



## < ECU DIAGNOSIS >

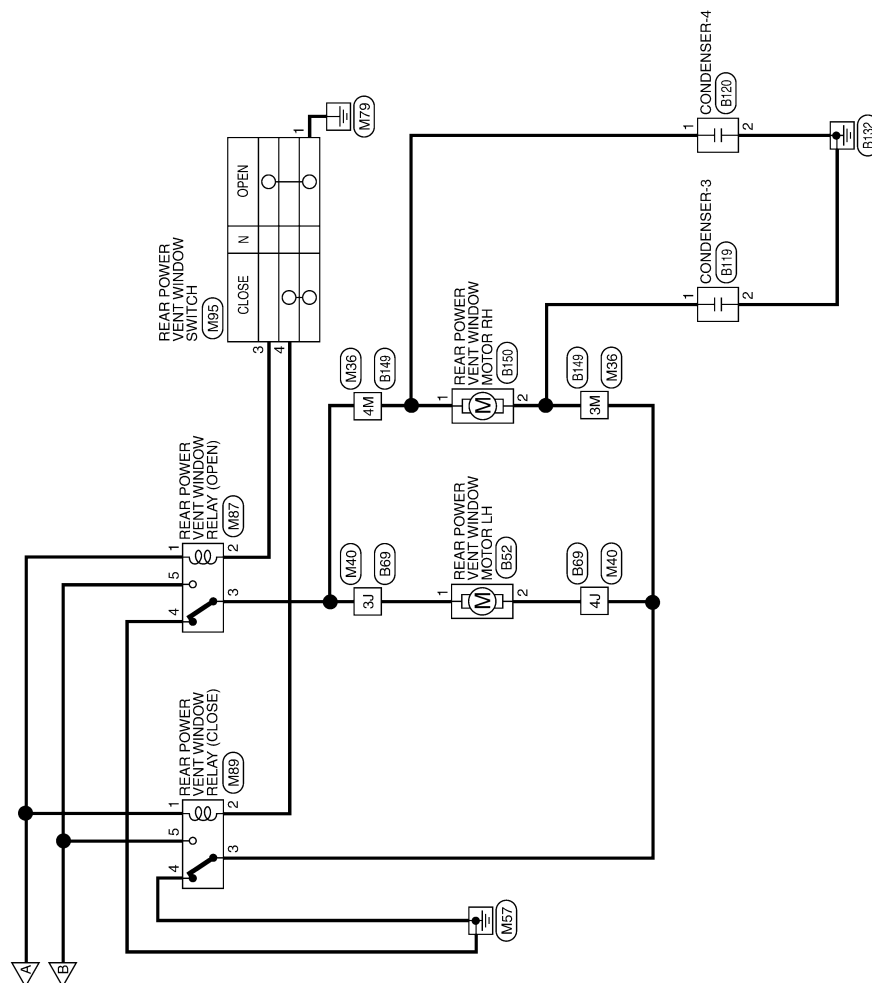

ABKWA0453GB

PWC

# FRONT POWER WINDOW SWITCH

< ECU DIAGNOSIS >

## POWER WINDOW SYSTEM CONNECTORS

Connector No.	M8
Connector Name	WIRE TO WIRE
Connector Color	WHITE

7	6	5	4	3		2	1	
16	15	14	13	12	11	10	9	8



Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



41	42	43	44	45	46	47	48	49
50	51	52	53	54	55			

Terminal No.	Color of Wire	Signal Name
5	W/R	-
8	W/V	-
9	W/L	-
14	B	-

Terminal No.	Color of Wire	Signal Name
11	O	ACC SW
12	R/L	DOOR SW (AS)
22	W/V	ANTI-PINCH SERIAL LINK (RX, TX)
38	W/L	IGN SW

Terminal No.	Color of Wire	Signal Name
47	SB	DOOR SW (DR)

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK

56	57	58	59	60	61	62	63	64
65	66	67	68	69	70			




Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
7G	W/L	-
10G	W/B	-

Terminal No.	Color of Wire	Signal Name
67	B	GND (POWER)
68	W/L	POWER WINDOW POWER SUPPLY (LINKED TO RAP)
69	W/R	POWER WINDOW POWER SUPPLY (BAT)
70	W/B	BAT (F/L)

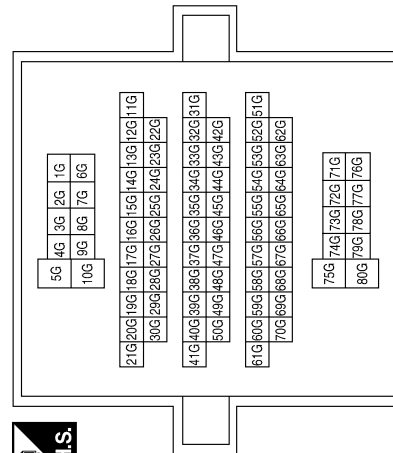


ABK1A1340GB

# FRONT POWER WINDOW SWITCH


< ECU DIAGNOSIS >

Connector No.	M60
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
6T	O	-

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	WHITE

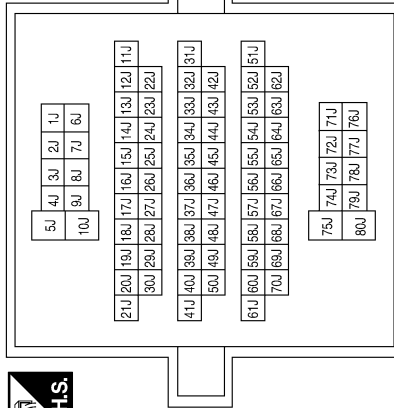


Connector No.	M36
Connector Name	WIRE TO WIRE
Connector Color	WHITE

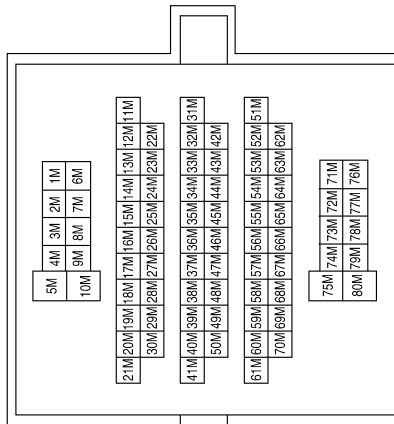

Terminal No.	Color of Wire	Signal Name
3J	BR	-
4J	R	-
40J	W/V	-
60J	SB	-
79J	W/R	-


Terminal No.	Color of Wire	Signal Name
2M	W/R	-
3M	R	-
4M	BR	-
61M	R/L	-

Connector No.	M84
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
5	W/V	-

Connector No.	M75
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W/R	-
3	B	-

Connector No.	M74
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
5	W/V	-

AAKIA0104GB

# FRONT POWER WINDOW SWITCH

< ECU DIAGNOSIS >

Connector No.	M87
Connector Name	REAR POWER VENT WINDOW RELAY (OPEN)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	W/L	-
2	R/G	-
3	BR	-
4	B	-
5	W/R	-

Connector No.	M89
Connector Name	REAR POWER VENT WINDOW RELAY (CLOSE)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	W/L	-
2	G/R	-
3	R	-
4	B	-
5	W/R	-

Connector No.	M95
Connector Name	REAR POWER VENT WINDOW SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	B	-
3	R/G	-
4	G/R	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

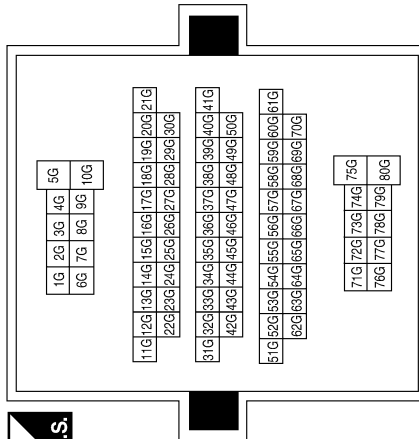

Connector No.	B6
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W/V	-
11	B	-
16	W/R	-



# FRONT POWER WINDOW SWITCH

< ECU DIAGNOSIS >

Connector No.	B8
Connector Name	FRONT DOOR SWITCH LH
Connector Color	WHITE

1	2	3
---	---	---



Terminal No.	Color of Wire	Signal Name
2	SB	—

Connector No.	B52
Connector Name	REAR POWER VENT WINDOW MOTOR LH
Connector Color	WHITE



1	2
---	---

Terminal No.	Color of Wire	Signal Name
1	Y	—
2	G	—

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1J	2J	3J	4J	5J
6J	7J	8J	9J	10J

11J	12J	13J	14J	15J	16J	17J	18J	19J	20J	21J
22J	23J	24J	25J	26J	27J	28J	29J	30J		
31J	32J	33J	34J	35J	36J	37J	38J	39J	40J	41J
42J	43J	44J	45J	46J	47J	48J	49J	50J		
51J	52J	53J	54J	55J	56J	57J	58J	59J	60J	61J
62J	63J	64J	65J	66J	67J	68J	69J	70J		

71J	72J	73J	74J	75J
76J	77J	78J	79J	80J


Terminal No.	Color of Wire	Signal Name
3J	Y	—
4J	G	—
40J	W/V	—
60J	SB	—
79J	W/R	—

Connector No.	B101
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					

Terminal No.	Color of Wire	Signal Name
5	W/V	—

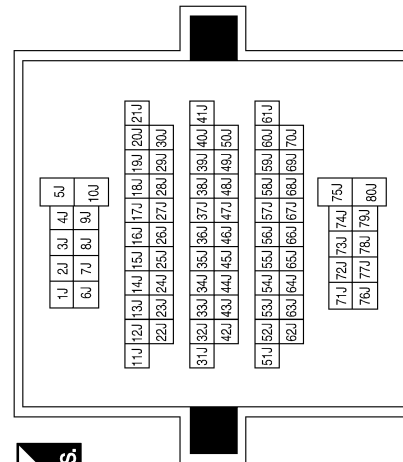


ABKIA1437GB

# FRONT POWER WINDOW SWITCH


< ECU DIAGNOSIS >

Connector No.	B106
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W/V	-
11	B	-
16	W/R	-

Connector No.	B108
Connector Name	FRONT DOOR SWITCH RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	R/L	-

Connector No.	B119
Connector Name	CONDENSER-3
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	BR	-
2	B	-

Connector No.	B120
Connector Name	CONDENSER-4
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R	-
2	B	-

Connector No.	B149
Connector Name	WIRE TO WIRE
Connector Color	WHITE

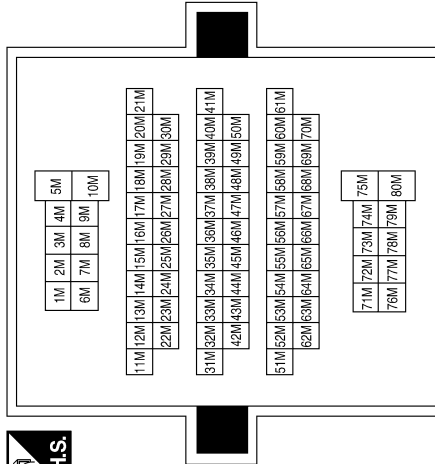

Terminal No.	Color of Wire	Signal Name
2M	W/R	-
3M	BR	-
4M	R	-
61M	R/L	-

# FRONT POWER WINDOW SWITCH


< ECU DIAGNOSIS >

Connector No.	B150
Connector Name	REAR POWER VENT WINDOW MOTOR RH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	R	-
2	BR	-

Connector No.	D2
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
5	W/R	-
8	LG/W	-
9	W/L	-
14	B	-


Connector No.	D7
Connector Name	MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	-	-
2	W/B	-
3	-	-
4	L	LOCK
5	-	-

Terminal No.	Color of Wire	Signal Name
6	R	UNLOCK
7	-	-
8	G/R	-
9	O	-
10	W/L	-
11	G/W	-
12	-	-
13	G/Y	-
14	LG/W	ANTI PINCH SERIAL LINK
15	BR	-
16	-	-

Connector No.	D8
Connector Name	MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
17	B	GND
18	-	-
19	W/R	P-WDW BAT

ABKIA1439GB

# FRONT POWER WINDOW SWITCH


< ECU DIAGNOSIS >

Connector No.	D9
Connector Name	FRONT POWER WINDOW MOTOR LH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	G/W	-
2	G/R	-
3	G/Y	-
4	BR	-
5	O	-
6	W/B	-

Connector No.	D102
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
5	LG/W	-

Connector No.	D14
Connector Name	FRONT DOOR LOCK ASSEMBLY LH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	L	LOCK
5	B	GND
6	R	UNLOCK

Connector No.	D104
Connector Name	FRONT POWER WINDOW MOTOR RH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	G	-
2	L	-
3	G/Y	-
4	G/R	-
5	G/W	-
6	W/B	-

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W/R	-
3	B	-

# FRONT POWER WINDOW SWITCH

< ECU DIAGNOSIS >

Connector No.	D201
Connector Name	WIRE TO WIRE
Connector Color	WHITE

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18		



Terminal No.	Color of Wire	Signal Name
1	W/V	-
11	B	-
16	W/R	-

Terminal No.	Color of Wire	Signal Name
5	-	-
6	-	-
7	-	-
8	L	-
9	G	-
10	W/R	-
11	B	GND
12	G/Y	-
13	-	-
14	-	-
15	G/W	-
16	LG/W	ANTI PINCH SERIAL LINK

Connector No.	D105
Connector Name	POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH
Connector Color	WHITE

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					



Terminal No.	Color of Wire	Signal Name
1	-	-
2	-	-
3	W/B	-
4	G/R	-

Connector No.	D204
Connector Name	REAR POWER WINDOW MOTOR LH
Connector Color	GRAY

2	5	1
4	3	6



Terminal No.	Color of Wire	Signal Name
1	BR	DOWN
2	O	UP
3	Y/R	PULSE
4	BR/W	PWR
5	SB	LIMIT SW
6	G	GND

Connector No.	D203
Connector Name	REAR POWER WINDOW SWITCH LH
Connector Color	WHITE

8	7	6
2	3	4
5	1	



Terminal No.	Color of Wire	Signal Name
1	L	-
2	G/W	-
3	G/W	-
4	W	-
5	W/R	-
6	R	-
7	L	-
8	-	-

ABKIA1441GB

# FRONT POWER WINDOW SWITCH

< ECU DIAGNOSIS >

Connector No.	D301
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18		

Terminal No.	Color of Wire	Signal Name
1	W/V	-
11	B	-
16	W/R	-

Terminal No.	Color of Wire	Signal Name
6	R	ILL
7	G/W	V
8	-	-
9	W	DOWN
10	W/R	UP
11	O	UP
12	BR	DOWN
13	W/R	BAT
14	-	-
15	B	GND
16	L	SW GND
17	-	-
18	-	-

Connector No.	D209
Connector Name	REAR POWER WINDOW CONTROL UNIT LH
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18		

Terminal No.	Color of Wire	Signal Name
1	W/V	COMMUNICATION
2	SB	LIMIT SW
3	G	ENCODER GND
4	Y/R	ENCODER PULSE
5	BR/W	ENCODER PWR

Connector No.	D304
Connector Name	REAR POWER WINDOW MOTOR RH
Connector Color	GRAY



2	5	1
4	3	6

Terminal No.	Color of Wire	Signal Name
1	BR	DOWN
2	O	UP
3	Y/B	PULSE
4	BR/W	PWR
5	SB	LIMIT SW
6	G	GND

Connector No.	D303
Connector Name	REAR POWER WINDOW SWITCH RH
Connector Color	WHITE



8	7	6
2	3	4
5	1	

Terminal No.	Color of Wire	Signal Name
1	L	-
2	G/W	-
3	G/W	-
4	W	-
5	W/L	-
6	R	-
7	L	-
8	-	-

ABKIA0016GB

# FRONT POWER WINDOW SWITCH

< ECU DIAGNOSIS >

Terminal No.	Color of Wire	Signal Name
6	R	ILL
7	GW	V
8	-	-
9	W	DOWN
10	W/L	UP
11	O	UP
12	BR	DOWN
13	W/R	BAT
14	-	-
15	B	GND
16	L	SW_GND
17	-	-
18	-	-

Connector No.	D309
Connector Name	REAR POWER WINDOW CONTROL UNIT RH
Connector Color	WHITE

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18		



Terminal No.	Color of Wire	Signal Name
1	W/V	COMMUNICATION
2	SB	LIMIT_SW
3	G	ENCODER_GND
4	Y/R	ENCODER_PULSE
5	BR/W	ENCODER_PWR

## Fail Safe

### FAIL-SAFE CONTROL

Switches to fail-safe control when malfunction is detected in encoder signal that detects up/down speed and direction of door glass. Switches to fail-safe control when error beyond regulation value is detected between the fully closed position and the actual position of the glass.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
PWC  
L  
M  
N  
O  
P

ABKIA0172GB

INFOID:000000005147245

## FRONT POWER WINDOW SWITCH

### < ECU DIAGNOSIS >

Error	Error condition
Pulse sensor malfunction	When only one side of pulse signal is being detected for more than the specified value.
Both pulse sensors malfunction	When both pulse signals have not been detected for more than the specified value during glass open/close operation.
Pulse direction malfunction	When the pulse signal that is detected during glass open/close operation detects the opposite condition of power window motor operating direction.
Glass recognition position malfunction 1	When it detects the error between glass fully closed position in power window switch memory and actual fully closed position during glass open/close operation is more than the specified value.
Glass recognition position malfunction 2	When it detects pulse count more than the value of glass full stroke during glass open/close operation.
Malfunction of not yet updated closed position of glass	When glass open/close operation is continuously performed without fully closing more than the specified value (approximately 10 strokes).

It changes to condition before initialization and the following functions do not operate when switched to fail-safe control.

- Auto-up operation
- Anti-pinch function
- Retained power function

Perform initial operation to recover when switched to fail-safe mode. However, it switches back to fail-safe control when malfunction is found in power window switch or in motor.



# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

## BCM (BODY CONTROL MODULE)

### Reference Value

INFOID:000000005367559

### VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition	Value/Status
AIR COND SW	A/C switch OFF	OFF
	A/C switch ON	ON
AUT LIGHT SYS	Outside of the room is dark	OFF
	Outside of the room is bright	ON
AUTO LIGHT SW	Lighting switch OFF	OFF
	Lighting switch AUTO	ON
BACK DOOR SW	Back door closed	OFF
	Back door opened	ON
CARGO LAMP SW	Cargo lamp switch OFF	OFF
	Cargo lamp switch ON	ON
CDL LOCK SW	Door lock/unlock switch does not operate	OFF
	Press door lock/unlock switch to the LOCK side	ON
CDL UNLOCK SW	Door lock/unlock switch does not operate	OFF
	Press door lock/unlock switch to the UNLOCK side	ON
DOOR SW-AS	Front door RH closed	OFF
	Front door RH opened	ON
DOOR SW-DR	Front door LH closed	OFF
	Front door LH opened	ON
DOOR SW-RL	Rear door LH closed	OFF
	Rear door LH opened	ON
DOOR SW-RR	Rear door RH closed	OFF
	Rear door RH opened	ON
ENGINE RUN	Engine stopped	OFF
	Engine running	ON
FR FOG SW	Front fog lamp switch OFF	OFF
	Front fog lamp switch ON	ON
FR WASHER SW	Front washer switch OFF	OFF
	Front washer switch ON	ON
FR WIPER LOW	Front wiper switch OFF	OFF
	Front wiper switch LO	ON
FR WIPER HI	Front wiper switch OFF	OFF
	Front wiper switch HI	ON
FR WIPER INT	Front wiper switch OFF	OFF
	Front wiper switch INT	ON
FR WIPER STOP	Any position other than front wiper stop position	OFF
	Front wiper stop position	ON
HAZARD SW	When hazard switch is not pressed	OFF
	When hazard switch is pressed	ON

A

B

C

D

E

F

G

H

I

J

PWC

L

M

N

O

P

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status
LIGHT SW 1ST	Lighting switch OFF	OFF
	Lighting switch 1st	ON
HEAD LAMP SW1	Headlamp switch OFF	OFF
	Headlamp switch 1st	ON
HEAD LAMP SW2	Headlamp switch OFF	OFF
	Headlamp switch 1st	ON
HI BEAM SW	High beam switch OFF	OFF
	High beam switch HI	ON
IGN ON SW	Ignition switch OFF or ACC	OFF
	Ignition switch ON	ON
IGN SW CAN	Ignition switch OFF or ACC	OFF
	Ignition switch ON	ON
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	1 - 7
I-KEY LOCK	LOCK button of Intelligent Key is not pressed	OFF
	LOCK button of Intelligent Key is pressed	ON
I-KEY UNLOCK	UNLOCK button of Intelligent Key is not pressed	OFF
	UNLOCK button of Intelligent Key is pressed	ON
KEY CYL LK-SW	Door key cylinder LOCK position	ON
	Door key cylinder other than LOCK position	OF
KEY CYL UN-SW	Door key cylinder UNLOCK position	ON
	Door key cylinder other than UNLOCK position	ON
KEY ON SW	Mechanical key is removed from key cylinder	OFF
	Mechanical key is inserted to key cylinder	ON
OIL PRESS SW	<ul style="list-style-type: none"> <li>Ignition switch OFF or ACC</li> <li>Engine running</li> </ul>	OFF
	Ignition switch ON	ON
OPTICAL SENSOR	Bright outside of the vehicle	Close to 5V
	Dark outside of the vehicle	Close to 0V
PASSING SW	Other than lighting switch PASS	OFF
	Lighting switch PASS	ON
PUSH SW	Return to ignition switch to LOCK position	OFF
	Press ignition switch	ON
REAR DEF SW	Rear window defogger switch OFF	OFF
	Rear window defogger switch ON	ON
RR WASHER SW	Rear washer switch OFF	OFF
	Rear washer switch ON	ON
RR WIPER INT	Rear wiper switch OFF	OFF
	Rear wiper switch INT	ON
RR WIPER ON	Rear wiper switch OFF	OFF
	Rear wiper switch ON	ON
RR WIPER STOP	Rear wiper stop position	OFF
	Other than rear wiper stop position	ON
RR WIPER STP2	Rear wiper stop position	OFF
	Other than rear wiper stop position	ON

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status
TRNK OPNR SW	When back door opener switch is not pressed	OFF
	When back door opener switch is pressed	ON
TURN SIGNAL L	Turn signal switch OFF	OFF
	Turn signal switch LH	ON
TURN SIGNAL R	Turn signal switch OFF	OFF
	Turn signal switch RH	ON
VEHICLE SPEED	While driving	Equivalent to speedometer reading

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P


PWC

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal Layout

INFOID:000000005367560

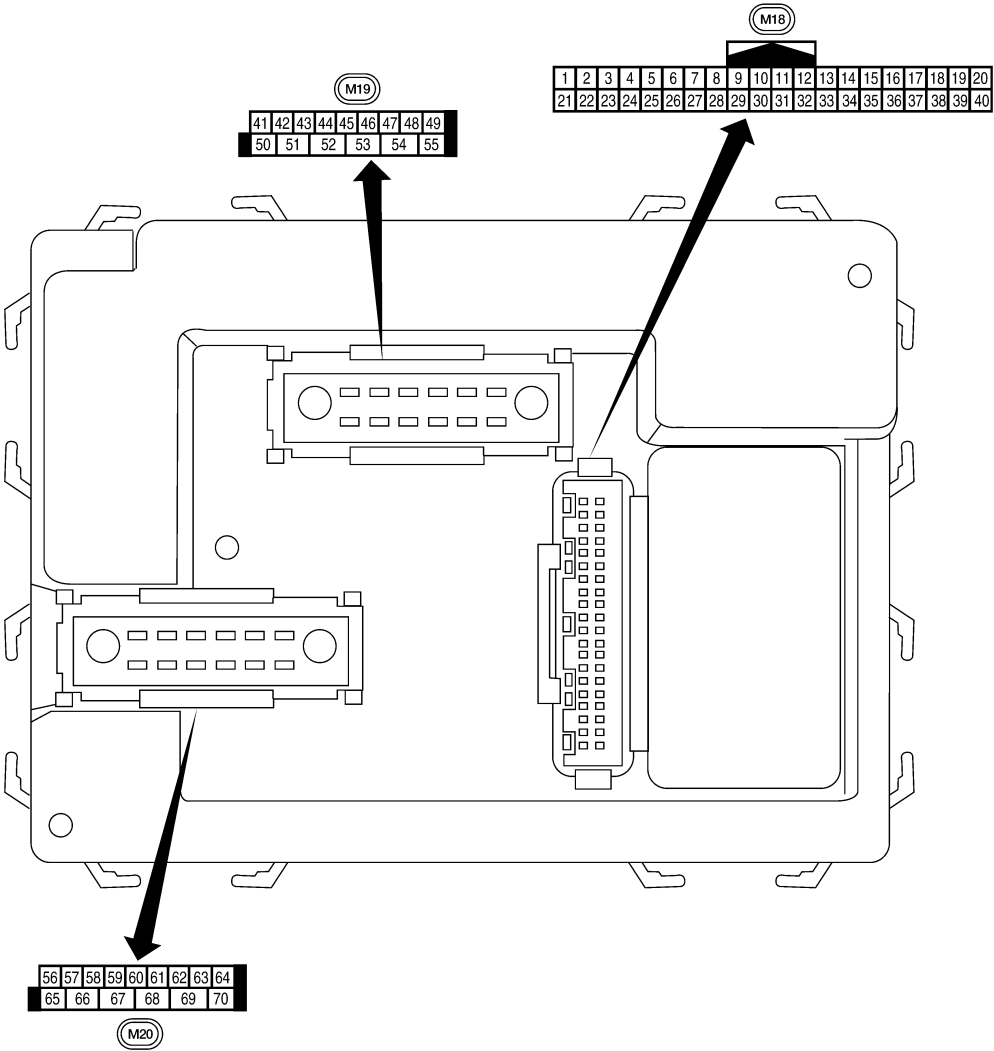


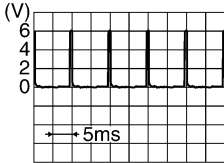

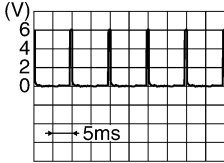
Physical Values

LIIA2443E

INFOID:000000005367561





# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
1	BR/W	Ignition keyhole illumination	Output	OFF	Door is locked (SW OFF)	Battery voltage
					Door is unlocked (SW ON)	0V
2	SB	Combination switch input 5	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
3	G/Y	Combination switch input 4	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
4	Y	Combination switch input 3	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
5	G/B	Combination switch input 2	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
6	V	Combination switch input 1				
9	GR/R	Rear window defogger switch	Input	ON	Rear window defogger switch ON	0V
					Rear window defogger switch OFF	5V
10	G	Hazard lamp flash	Input	OFF	ON (opening or closing)	0V
					OFF (other than above)	Battery voltage
11	O	Ignition switch (ACC or ON)	Input	ACC or ON	Ignition switch ACC or ON	Battery voltage
12	R/L	Front door switch RH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
13	GR	Rear door switch RH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
15	L/W	Tire pressure warning check connector	Input	OFF	—	5V
18	P	Remote keyless entry receiver and optical sensor (ground)	Output	OFF	—	0V





# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

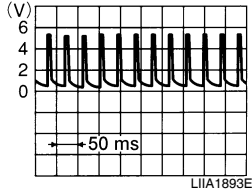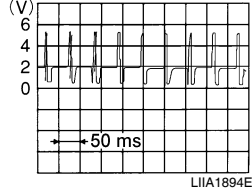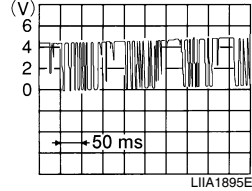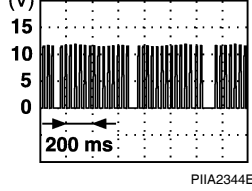Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
19	V/W	Remote keyless entry receiver (power supply)	Output	OFF	Ignition switch OFF	 LI1A1893E
20	G/W	Remote keyless entry receiver (signal)	Input	OFF	Stand-by (keyfob buttons released)	 LI1A1894E
					When remote keyless entry receiver receives signal from keyfob (keyfob buttons pressed)	 LI1A1895E
21	G	NATS antenna amp.	Input	OFF → ON	Ignition switch (OFF → ON)	Just after turning ignition switch ON: Pointer of tester should move for approx. 1 second, then return to battery voltage.
22	W/V	BUS	—	—	Ignition switch ON or power window timer operates	 PI1A2344E
23	G/O	Security indicator lamp	Output	OFF	Goes OFF → illuminates (Every 2.4 seconds)	Battery voltage → 0V
25	BR	NATS antenna amp.	Input	OFF → ON	Ignition switch (OFF → ON)	Just after turning ignition switch ON: Pointer of tester should move for approx. 1 second, then return to battery voltage.
26	Y/L	Rear wiper auto stop switch 2	Input	ON	Rise up position (rear wiper arm on stopper)	0V
					A Position (full clockwise stop position)	0V
					Forward sweep (counterclockwise direction)	Fluctuating
					B Position (full counterclockwise stop position)	Battery voltage
					Reverse sweep (clockwise direction)	Fluctuating
27	W/R	Compressor ON signal	Input	ON	A/C switch OFF	5V
					A/C switch ON	0V

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

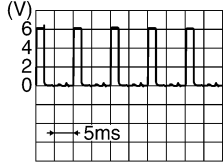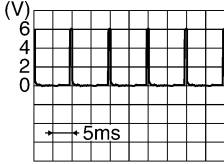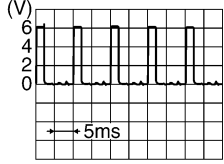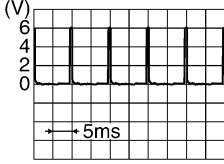Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
28	L/R	Front blower monitor	Input	ON	Front blower motor OFF	Battery voltage
					Front blower motor ON	0V
29	W/B	Hazard switch	Input	OFF	ON	0V
					OFF	5V
30	Y/BR	Glass hatch switch	Input	OFF	Glass hatch switch released	0V
					Glass hatch switch pressed	Battery
32	R/G	Combination switch output 5	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
33	R/Y	Combination switch output 4	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
34	L	Combination switch output 3	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
35	O/B	Combination switch output 2	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
36	R/W	Combination switch output 1				
37	B/R	Key switch and ignition knob switch	Input	OFF	Intelligent Key inserted	Battery voltage
					Intelligent Key inserted	0V
38	W/L	Ignition switch (ON)	Input	ON	—	Battery voltage
39	L	CAN-H	—	—	—	—
40	P	CAN-L	—	—	—	—
42	GR	Glass hatch ajar switch	Input	ON	Glass hatch open	0V
					Glass hatch closed	Battery
43	R/B	Back door latch (door ajar switch)	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage

A

B

C

D

E

F

G

H

I

J

PWC

L

M



N

O

P

# BCM (BODY CONTROL MODULE)



## < ECU DIAGNOSIS >

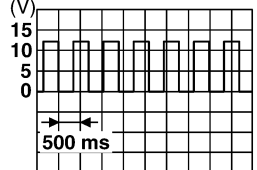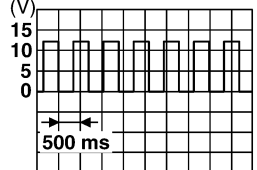Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
44	O	Rear wiper auto stop switch 1	Input	ON	Rise up position (rear wiper arm on stopper)	0V
					A Position (full clockwise stop position)	Battery voltage
					Forward sweep (counterclockwise direction)	Fluctuating
					B Position (full counterclockwise stop position)	0V
					Reverse sweep (clockwise direction)	Fluctuating
47	SB	Front door switch LH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
48	R/Y	Rear door switch LH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
49	R	Cargo lamp	Output	OFF	Any door open (ON)	0V
					All doors closed (OFF)	Battery voltage
51	G/Y	Trailer turn signal (right)	Output	ON	Turn right ON	 SKIA3009J
52	G/B	Trailer turn signal (left)	Output	ON	Turn left ON	 SKIA3009J
53	L/W	Glass hatch lock actuator	Output	OFF	Glass hatch switch released	0V
					Glass hatch switch pressed	Battery voltage
54	Y	Rear wiper output circuit 2	Input	ON	Rise up position (rear wiper arm on stopper)	0V
					A Position (full clockwise stop position)	0V
					Forward sweep (counterclockwise direction)	0V
					B Position (full counterclockwise stop position)	Battery voltage
					Reverse sweep (clockwise direction)	Battery voltage
55	SB	Rear wiper output circuit 1	Output	ON	OFF	0V
					ON	Battery voltage
56	R/G	Battery saver output	Output	OFF	30 minutes after ignition switch is turned OFF	0V
				ON	—	Battery voltage
57	Y/R	Battery power supply	Input	OFF	—	Battery voltage



# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

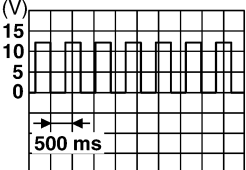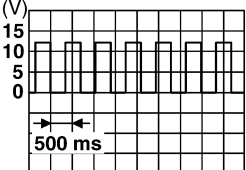Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
58	W/R	Optical sensor	Input	ON	When optical sensor is illuminated	3.1V or more
					When optical sensor is not illuminated	0.6V or less
59	G	Front door lock assembly LH actuator (unlock)	Output	OFF	OFF (neutral)	0V
					ON (unlock)	Battery voltage
60	G/B	Turn signal (left)	Output	ON	Turn left ON	 SKIA3009J
61	G/Y	Turn signal (right)	Output	ON	Turn right ON	 SKIA3009J
62	R/W	Step lamp LH and RH	Output	OFF	ON (any door open)	0V
					OFF (all doors closed)	Battery voltage
63	L	Interior room/map lamp	Output	OFF	Any door switch	ON (open) 0V OFF (closed) Battery voltage
65	V	All door lock actuators (lock)	Output	OFF	OFF (neutral)	0V
					ON (lock)	Battery voltage
66	G/Y	Front door lock actuator RH, rear door lock actuators LH/RH and back door lock actuator (unlock)	Output	OFF	OFF (neutral)	0V
					ON (unlock)	Battery voltage
67	B	Ground	Input	ON	—	0V
68	W/L	Power window power supply (RAP)	Output	—	Ignition switch ON	Battery voltage
					Within 45 seconds after ignition switch OFF	Battery voltage
					More than 45 seconds after ignition switch OFF	0V
					When front door LH or RH is open or power window timer operates	0V
69	W/R	Power window power supply	Output	—	—	Battery voltage
70	W/B	Battery power supply	Input	OFF	—	Battery voltage

A

B

C

D

E

F

G

H

I

J

PWC

L

M


N

O

P

## Wiring Diagram

T7: TRAILER TOW 7 PIN

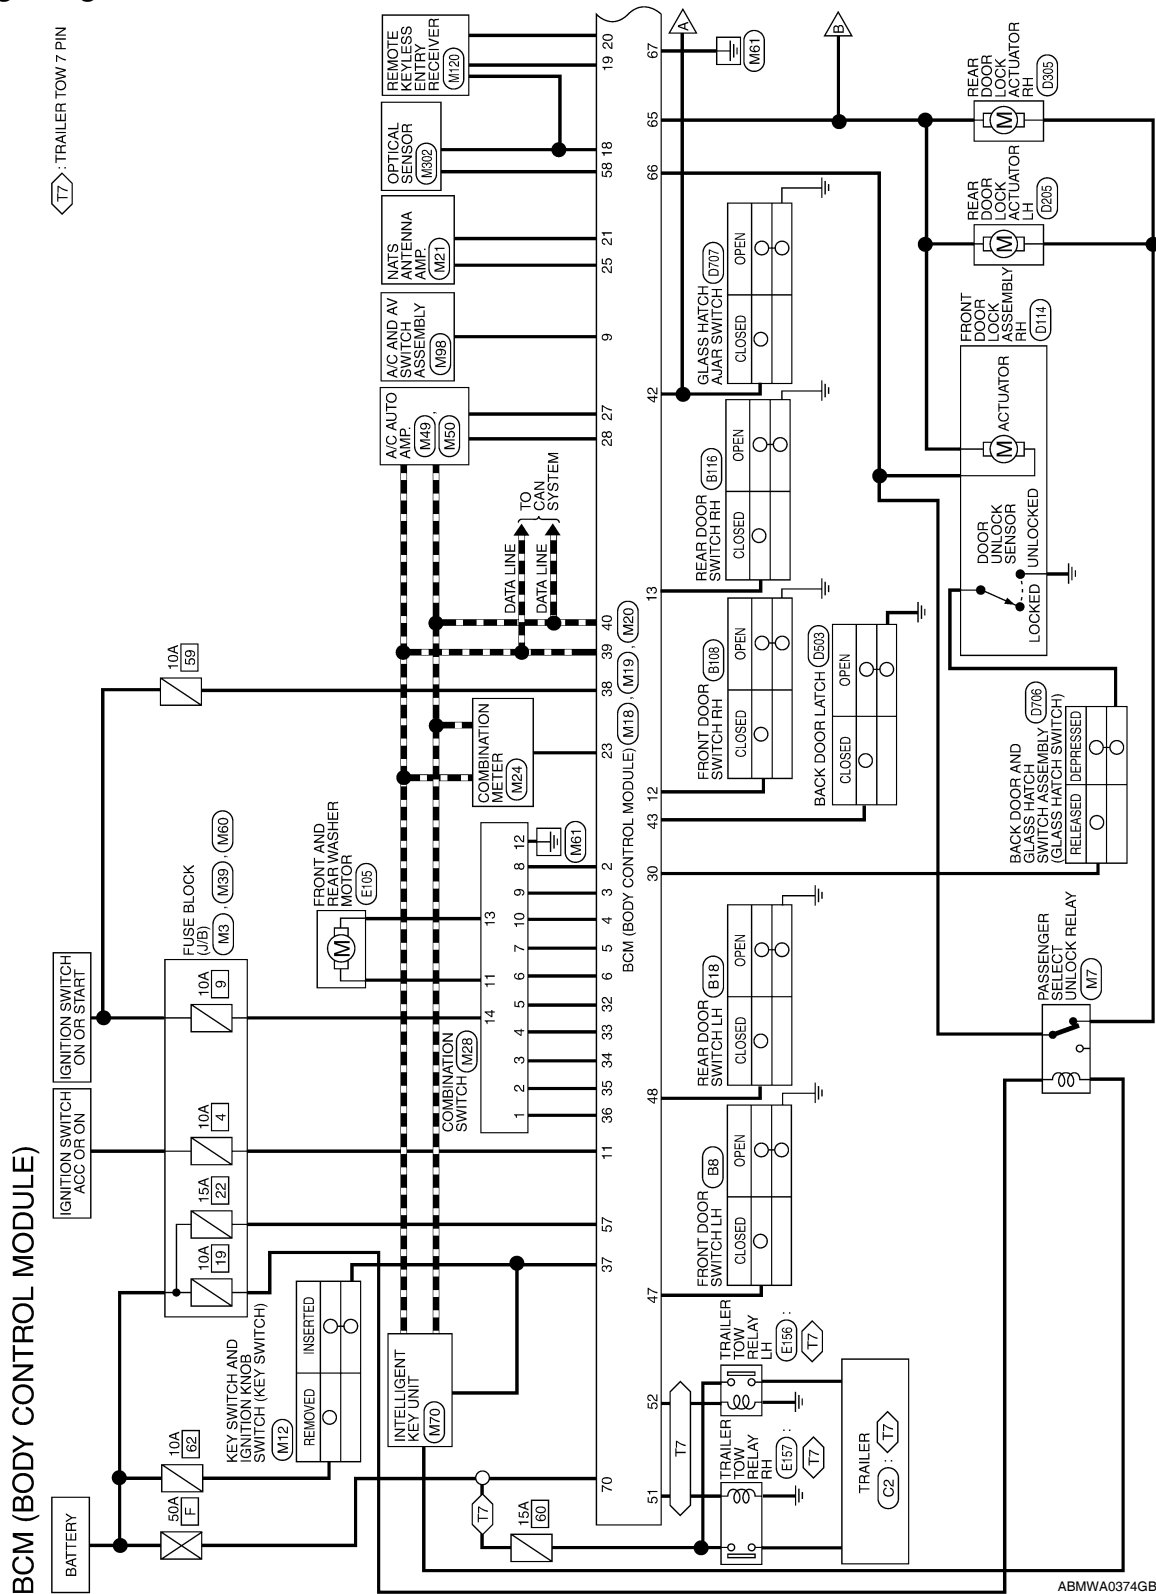


ABMWA0374GB

## < ECU DIAGNOSIS >



BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

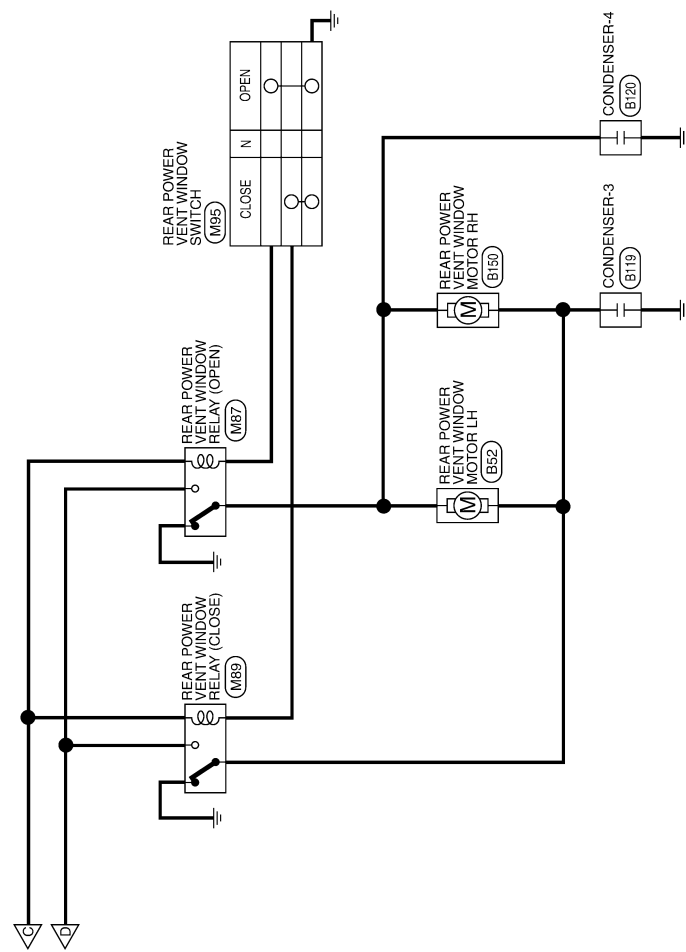

AAMWA0183GB

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

## BCM (BODY CONTROL MODULE) CONNECTORS

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name
1	BR/W	KEY RING OUTPUT
2	SB	INPUT 5
3	G/Y	INPUT 4
4	Y	INPUT 3
5	G/B	INPUT 2
6	V	INPUT 1
7	-	-
8	-	-
9	GR/R	REAR DEFOGGER SW
10	G	IVCS INPUT
11	O	ACC SW
12	R/L	DOOR SW (AS)
13	GR	DOOR SW (RR)
14	-	-
15	L/W	TPMS (MODE TRIGGER SWITCH)

Terminal No.	Color of Wire	Signal Name
16	-	-
17	-	-
18	P	KEYLESS AND AUTO LIGHT SENSOR GND
19	V/W	KEYLESS TUNER POWER SUPPLY OUTPUT
20	G/W	KEYLESS TUNER SIGNAL
21	G	IMMOBILIZER ANTENNA SIGNAL (CLOCK)
22	W/V	ANTI-PINCH SERIAL LINK (RX, TX)
23	G/O	SECURITY INDICATOR OUTPUT
24	-	-
25	BR	IMMOBILIZER ANTENNA SIGNAL (RX, TX)
26	Y/L	REAR WIPER AUTO STOP SW2
27	W/R	AIRCON SW
28	L/R	BLOWER FAN SW
29	W/B	HAZARD SW
30	Y/BR	GLASS HATCH OPENER
31	-	-
32	R/G	OUTPUT 5
33	R/Y	OUTPUT 4
34	L	OUTPUT 3
35	O/B	OUTPUT 2
36	R/W	OUTPUT 1
37	B/R	KEY SW
38	W/L	IGN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



41	42	43	44	45	46	47	48	49
50	51	52	53	54	55			

Terminal No.	Color of Wire	Signal Name
41	-	-
42	GR	GLASS HATCH SW
43	R/B	BACK DOOR SW
44	O	REAR WIPER AUTO STOP SW1
45	-	-
46	-	-
47	SB	DOOR SW (DR)
48	R/Y	DOOR SW (RL)
49	R	LUGGAGE LAMP OUTPUT
50	-	-
51	G/Y	TRAILER FLASH OUTPUT (RIGHT)
52	G/B	TRAILER FLASH OUTPUT (LEFT)
53	L/W	GLASS HATCH OPENER OUTPUT
54	Y	REAR WIPER MOTOR OUTPUT 2
55	SB	REAR WIPER MOTOR OUTPUT 1

ABMIA1059GB

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE

12	13	10	9		8	7	
14	11	1	2	3	4	5	6



Terminal No.	Color of Wire	Signal Name
1	R/W	INPUT 1
2	O/B	INPUT 2
3	L	INPUT 3
4	R/Y	INPUT 4
5	R/G	INPUT 5
6	V	OUTPUT 1
7	G/B	OUTPUT 2
8	SB	OUTPUT 5
9	G/Y	OUTPUT 4
10	Y	OUTPUT 3
11	V/W	WASHER MOTOR
12	B	GND
13	W/R	WASHER MOTOR
14	R/L	IGN

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK

56	57	58	59	60	61	62	63	64
65	66	67	68	69	70			



Terminal No.	Color of Wire	Signal Name
56	R/G	BATTERY SAVER OUTPUT
57	Y/R	BAT (FUSE)
58	W/R	AUTO LIGHT SENSOR INPUT 2
59	G	DOOR UNLOCK OUTPUT (DR)
60	G/B	FLASHER OUTPUT (LEFT)
61	G/Y	FLASHER OUTPUT (RIGHT)
62	R/W	STEP LAMP OUTPUT
63	L	ROOM LAMP OUTPUT
64	-	-
65	V	DOOR LOCK OUTPUT (ALL)
66	G/Y	DOOR UNLOCK OUTPUT (OTHER)
67	B	GND (POWER)
68	W/L	POWER WINDOW POWER SUPPLY (LINKED TO RAP)
69	W/R	POWER WINDOW POWER SUPPLY (BAT)
70	W/B	BAT (F/L)

ABMIA1060GB

INFOID:000000005367563

## Fail Safe

### Fail-safe index

BCM performs fail-safe control when any DTC listed below is detected.

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS >

Display contents of CONSULT	Fail-safe	Cancellation
U1000: CAN COMM CIRCUIT	Inhibit engine cranking	When the BCM re-establishes communication with the other modules.

## DTC Inspection Priority Chart

INFOID:000000005367564

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	<ul style="list-style-type: none"><li>• U1000: CAN COMM CIRCUIT</li></ul>
2	<ul style="list-style-type: none"><li>• B2190: NATS ANTENNA AMP</li><li>• B2191: DIFFERENCE OF KEY</li><li>• B2192: ID DISCORD BCM-ECM</li><li>• B2193: CHAIN OF BCM-ECM</li><li>• B2013: STRG COMM 1</li><li>• B2552: INTELLIGENT KEY</li><li>• B2590: NATS MALFUNCTION</li></ul>
3	<ul style="list-style-type: none"><li>• C1729: VHCL SPEED SIG ERR</li><li>• C1735: IGNITION SIGNAL</li></ul>
4	<ul style="list-style-type: none"><li>• C1708: [NO DATA] FL</li><li>• C1709: [NO DATA] FR</li><li>• C1710: [NO DATA] RR</li><li>• C1711: [NO DATA] RL</li><li>• C1712: [CHECKSUM ERR] FL</li><li>• C1713: [CHECKSUM ERR] FR</li><li>• C1714: [CHECKSUM ERR] RR</li><li>• C1715: [CHECKSUM ERR] RL</li><li>• C1716: [PRESSDATA ERR] FL</li><li>• C1717: [PRESSDATA ERR] FR</li><li>• C1718: [PRESSDATA ERR] RR</li><li>• C1719: [PRESSDATA ERR] RL</li><li>• C1720: [CODE ERR] FL</li><li>• C1721: [CODE ERR] FR</li><li>• C1722: [CODE ERR] RR</li><li>• C1723: [CODE ERR] RL</li><li>• C1724: [BATT VOLT LOW] FL</li><li>• C1725: [BATT VOLT LOW] FR</li><li>• C1726: [BATT VOLT LOW] RR</li><li>• C1727: [BATT VOLT LOW] RL</li></ul>

## DTC Index

INFOID:000000005367565

### NOTE:

- Details of time display
- CRNT: Displays when there is a malfunction now or after returning to the normal condition until turning ignition switch OFF → ON again.
- 1 - 39: Displayed if any previous malfunction is present when current condition is normal. It increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The counter remains at 39 even if the number of cycles exceeds it. It is counted from 1 again when turning ignition switch OFF → ON after returning to the normal condition if the malfunction is detected again.

CONSULT display	Fail-safe	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
No DTC is detected. further testing may be required.	—	—	—	—
U1000: CAN COMM CIRCUIT	—	—	—	<a href="#">BCS-32</a>
B2190: NATS ANTENNA AMP	—	—	—	<a href="#">SEC-31</a>

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS >

CONSULT display	Fail-safe	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
B2191: DIFFERENCE OF KEY	—	—	—	<a href="#">SEC-34</a>
B2192: ID DISCORD BCM-ECM	—	—	—	<a href="#">SEC-35</a>
B2193: CHAIN OF BCM-ECM	—	—	—	<a href="#">SEC-37</a>
B2552: INTELLIGENT KEY	—	—	—	<a href="#">SEC-39</a>
B2590: NATS MALFUNCTION	—	—	—	<a href="#">SEC-40</a>
C1708: [NO DATA] FL	—	—	—	<a href="#">WT-14</a>
C1709: [NO DATA] FR	—	—	—	<a href="#">WT-14</a>
C1710: [NO DATA] RR	—	—	—	<a href="#">WT-14</a>
C1711: [NO DATA] RL	—	—	—	<a href="#">WT-14</a>
C1712: [CHECKSUM ERR] FL	—	—	—	<a href="#">WT-16</a>
C1713: [CHECKSUM ERR] FR	—	—	—	<a href="#">WT-16</a>
C1714: [CHECKSUM ERR] RR	—	—	—	<a href="#">WT-16</a>
C1715: [CHECKSUM ERR] RL	—	—	—	<a href="#">WT-16</a>
C1716: [PRESSDATA ERR] FL	—	—	—	<a href="#">WT-18</a>
C1717: [PRESSDATA ERR] FR	—	—	—	<a href="#">WT-18</a>
C1718: [PRESSDATA ERR] RR	—	—	—	<a href="#">WT-18</a>
C1719: [PRESSDATA ERR] RL	—	—	—	<a href="#">WT-18</a>
C1720: [CODE ERR] FL	—	—	—	<a href="#">WT-16</a>
C1721: [CODE ERR] FR	—	—	—	<a href="#">WT-16</a>
C1722: [CODE ERR] RR	—	—	—	<a href="#">WT-16</a>
C1723: [CODE ERR] RL	—	—	—	<a href="#">WT-16</a>
C1724: [BATT VOLT LOW] FL	—	—	—	<a href="#">WT-16</a>
C1725: [BATT VOLT LOW] FR	—	—	—	<a href="#">WT-16</a>
C1726: [BATT VOLT LOW] RR	—	—	—	<a href="#">WT-16</a>
C1727: [BATT VOLT LOW] RL	—	—	—	<a href="#">WT-16</a>
C1729: VHCL SPEED SIG ERR	—	—	—	<a href="#">WT-19</a>
C1735: IGNITION SIGNAL	—	—	—	<a href="#">WT-20</a>



# NONE OF THE POWER WINDOWS CAN BE OPERATED USING ANY SWITCH

< SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS

NONE OF THE POWER WINDOWS CAN BE OPERATED USING ANY SWITCH

### Diagnosis Procedure

INFOID:000000005147246

#### 1. CHECK BCM POWER SUPPLY AND GROUND CIRCUIT

Check BCM power supply and ground circuit.

Refer to [BCS-33, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2

NO >> Repair or replace the malfunctioning parts.

#### 2. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH POWER SUPPLY AND GROUND CIRCUIT

Check power window switch main power supply and ground circuit.

Refer to [PWC-12, "POWER WINDOW MAIN SWITCH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace the malfunctioning parts.

#### 3. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH SERIAL CIRCUIT

Check main power window and door lock/unlock switch serial circuit.

Refer to [PWC-12, "POWER WINDOW MAIN SWITCH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 4

NO >> Repair or replace the malfunctioning parts.

#### 4. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH

Check main power window and door lock/unlock switch.

Refer to [PWC-12, "POWER WINDOW MAIN SWITCH : Component Function Check"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Check intermittent incident. Refer to [GI-38, "Intermittent Incident"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

PWC

## DRIVER SIDE POWER WINDOW ALONE DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

---

### DRIVER SIDE POWER WINDOW ALONE DOES NOT OPERATE

#### Diagnosis Procedure

INFOID:000000005147247

#### 1. CHECK FRONT POWER WINDOW MOTOR LH

---

Check front power window motor LH.

Refer to [PWC-17, "DRIVER SIDE : Component Function Check"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Check intermittent incident. Refer to [GI-38, "Intermittent Incident"](#).

# FRONT PASSENGER SIDE POWER WINDOW ALONE DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

## FRONT PASSENGER SIDE POWER WINDOW ALONE DOES NOT OPERATE

### Diagnosis Procedure

INFOID:000000005147248

#### 1. CHECK POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH

Check power window and door lock/unlock switch RH.

Refer to [PWC-13, "FRONT POWER WINDOW SWITCH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2

NO >> Repair or replace the malfunctioning parts.

#### 2. CHECK POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH SERIAL LINK CIRCUIT

Check power window and door lock/unlock switch RH serial link circuit.

Refer to [PWC-40, "FRONT POWER WINDOW SWITCH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace the malfunctioning parts.

#### 3. CHECK FRONT POWER WINDOW MOTOR RH CIRCUIT

Check front power window motor RH circuit.

Refer to [PWC-18, "PASSENGER SIDE : Component Function Check"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Check intermittent incident. Refer to [GI-38, "Intermittent Incident"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

PWC

# REAR LH SIDE POWER WINDOW ALONE DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

## REAR LH SIDE POWER WINDOW ALONE DOES NOT OPERATE

---

### Diagnosis Procedure

INFOID:000000005147249

#### 1. CHECK REAR POWER WINDOW SWITCH LH

---

Check rear power window switch LH.

Refer to [PWC-15, "REAR POWER WINDOW SWITCH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2

NO >> Repair or replace the malfunctioning parts.

#### 2. CHECK REAR POWER WINDOW MOTOR LH

---

Check rear power window motor LH.

Refer to [PWC-20, "REAR LH : Component Function Check"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Check intermittent incident. Refer to [GI-38, "Intermittent Incident"](#).

# REAR RH SIDE POWER WINDOW ALONE DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

## REAR RH SIDE POWER WINDOW ALONE DOES NOT OPERATE

### Diagnosis Procedure

INFOID:000000005147250

#### 1. CHECK REAR POWER WINDOW SWITCH RH

Check rear power window switch RH.

Refer to [PWC-15, "REAR POWER WINDOW SWITCH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2

NO >> Repair or replace the malfunctioning parts.

#### 2. CHECK REAR POWER WINDOW MOTOR RH

Check rear power window motor RH.

Refer to [PWC-21, "REAR RH : Component Function Check"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Check intermittent incident. Refer to [GI-38, "Intermittent Incident"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

PWC

## ANTI-PINCH SYSTEM DOES NOT OPERATE NORMALLY (DRIVER SIDE)

< SYMPTOM DIAGNOSIS >

### ANTI-PINCH SYSTEM DOES NOT OPERATE NORMALLY (DRIVER SIDE)

#### Diagnosis Procedure

INFOID:000000005147251

#### 1. CHECK DOOR WINDOW SLIDING PART

---

- A foreign material adheres to window glass or glass run rubber.
- Glass run rubber wear or deformation.
- Sash is tilted too much or not enough.

Is the inspection result normal?

YES >> GO TO 2

NO >> Repair or replace the malfunctioning parts.

#### 2. CHECK ENCODER CIRCUIT

---

Check encoder circuit.

Refer to [PWC-23, "DRIVER SIDE : Component Function Check"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Check intermittent incident. Refer to [GI-38, "Intermittent Incident"](#).

# ANTI-PINCH SYSTEM DOES NOT OPERATE NORMALLY (PASSENGER SIDE)

< SYMPTOM DIAGNOSIS >

## ANTI-PINCH SYSTEM DOES NOT OPERATE NORMALLY (PASSENGER SIDE)

### Diagnosis Procedure

INFOID:000000005147252

#### 1. CHECK DOOR WINDOW SLIDING PART

- A foreign material adheres to window glass or glass run rubber.
- Glass run rubber wear or deformation.
- Sash is tilted too much or not enough.

Is the inspection result normal?

YES >> GO TO 2

NO >> Repair or replace the malfunctioning parts.

#### 2. CHECK ENCODER CIRCUIT

Check encoder circuit.

Refer to [PWC-25, "PASSENGER SIDE : Component Function Check"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Check intermittent incident. Refer to [GI-38, "Intermittent Incident"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

PWC

## ANTI-PINCH SYSTEM DOES NOT OPERATE NORMALLY (REAR LH SIDE)

< SYMPTOM DIAGNOSIS >

### ANTI-PINCH SYSTEM DOES NOT OPERATE NORMALLY (REAR LH SIDE)

#### Diagnosis Procedure

INFOID:000000005147253

#### 1. CHECK DOOR WINDOW SLIDING PART

---

- A foreign material adheres to window glass or glass run rubber.
- Glass run rubber wear or deformation.
- Sash is tilted too much or not enough.

Is the inspection result normal?

YES >> GO TO 2

NO >> Repair or replace the malfunctioning parts.

#### 2. CHECK ENCODER CIRCUIT

---

Check encoder circuit.

Refer to [PWC-23, "DRIVER SIDE : Component Function Check"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Check intermittent incident. Refer to [GI-38, "Intermittent Incident"](#).



# ANTI-PINCH SYSTEM DOES NOT OPERATE NORMALLY (REAR RH SIDE)

< SYMPTOM DIAGNOSIS >

## ANTI-PINCH SYSTEM DOES NOT OPERATE NORMALLY (REAR RH SIDE)

### Diagnosis Procedure

INFOID:000000005147254

#### 1. CHECK DOOR WINDOW SLIDING PART

- A foreign material adheres to window glass or glass run rubber.
- Glass run rubber wear or deformation.
- Sash is tilted too much or not enough.

Is the inspection result normal?

YES >> GO TO 2

NO >> Repair or replace the malfunctioning parts.

#### 2. CHECK ENCODER CIRCUIT

Check encoder circuit.

Refer to [PWC-23, "DRIVER SIDE : Component Function Check"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Check intermittent incident. Refer to [GI-38, "Intermittent Incident"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

PWC

# AUTO OPERATION DOES NOT OPERATE BUT MANUAL OPERATES NORMALLY (DRIVER SIDE)

< SYMPTOM DIAGNOSIS >

AUTO OPERATION DOES NOT OPERATE BUT MANUAL OPERATES NORMALLY (DRIVER SIDE)

Diagnosis Procedure

INFOID:000000005147255

## 1. CHECK ENCODER

Check encoder.

Refer to [PWC-23, "DRIVER SIDE : Component Function Check"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Check intermittent incident. Refer to [GI-38, "Intermittent Incident"](#).

**AUTO OPERATION DOES NOT OPERATE BUT MANUAL OPERATES NORMALLY (PASSENGER SIDE)**

< SYMPTOM DIAGNOSIS >

**AUTO OPERATION DOES NOT OPERATE BUT MANUAL OPERATES NORMALLY (PASSENGER SIDE)**

Diagnosis Procedure

INFOID:000000005147256

**1. CHECK ENCODER**

Check encoder.

Refer to [PWC-25. "PASSENGER SIDE : Component Function Check"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Check intermittent incident. Refer to [GI-38. "Intermittent Incident"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

PWC

# AUTO OPERATION DOES NOT OPERATE BUT MANUAL OPERATES NORMALLY (REAR LH SIDE)

< SYMPTOM DIAGNOSIS >

AUTO OPERATION DOES NOT OPERATE BUT MANUAL OPERATES NORMALLY (REAR LH SIDE)

Diagnosis Procedure

INFOID:000000005147257

## 1. CHECK ENCODER

Check encoder.

Refer to [PWC-23, "DRIVER SIDE : Component Function Check"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Check intermittent incident. Refer to [GI-38, "Intermittent Incident"](#).

**AUTO OPERATION DOES NOT OPERATE BUT MANUAL OPERATES NORMALLY (REAR RH SIDE)**

< SYMPTOM DIAGNOSIS >

**AUTO OPERATION DOES NOT OPERATE BUT MANUAL OPERATES NORMALLY (REAR RH SIDE)**

Diagnosis Procedure

INFOID:000000005147258

**1. CHECK ENCODER**

Check encoder.

Refer to [PWC-23. "DRIVER SIDE : Component Function Check"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Check intermittent incident. Refer to [GI-38. "Intermittent Incident"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

PWC

# POWER WINDOW RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY

< SYMPTOM DIAGNOSIS >

## POWER WINDOW RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY

### Diagnosis Procedure

INFOID:000000005147259

#### 1. CHECK FRONT DOOR SWITCH

Check front door switch.

Refer to [PWC-34, "Component Function Check"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Check intermittent incident. Refer to [GI-38, "Intermittent Incident"](#).

# DOES NOT OPERATE BY KEY CYLINDER SWITCH

< SYMPTOM DIAGNOSIS >

## DOES NOT OPERATE BY KEY CYLINDER SWITCH

### Diagnosis Procedure

INFOID:000000005147260

#### 1. CHECK FRONT DOOR LOCK ASSEMBLY LH (KEY CYLINDER SWITCH)

Check front door lock assembly LH (key cylinder switch).

Refer to [PWC-36. "Component Function Check"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Check intermittent incident. Refer to [GI-38. "Intermittent Incident"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

PWC

# KEYLESS POWER WINDOW DOWN DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

---

## KEYLESS POWER WINDOW DOWN DOES NOT OPERATE

### Diagnosis Procedure

INFOID:000000005147261

#### 1. CHECK INTELLIGENT KEY FUNCTION

---

Check Intelligent Key function.

Refer to [DLK-56, "CONSULT-III Function \(INTELLIGENT KEY\)"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-38, "Intermittent Incident"](#).

NO >> Replace BCM. Refer to [BCS-59, "Removal and Installation"](#).



# POWER WINDOW LOCK SWITCH DOES NOT FUNCTION

< SYMPTOM DIAGNOSIS >

## POWER WINDOW LOCK SWITCH DOES NOT FUNCTION

### Diagnosis Procedure

INFOID:000000005147262

#### 1. REPLACE MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH

Replace main power window and door lock/unlock switch.

Refer to [PWC-117, "Removal and Installation"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Check intermittent incident. Refer to [GI-38, "Intermittent Incident"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

PWC

# REAR POWER VENT WINDOWS DO NOT OPERATE

< SYMPTOM DIAGNOSIS >

---

## REAR POWER VENT WINDOWS DO NOT OPERATE

### Diagnosis Procedure

INFOID:000000005147263

#### 1. CHECK BCM POWER SUPPLY AND GROUND CIRCUIT

---

Check BCM power supply and ground circuit.

Refer to [BCS-33, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2

NO >> Repair or replace the malfunctioning parts.

#### 2. CHECK REAR POWER VENT WINDOW SWITCH

---

Check rear power vent window switch.

Refer to [PWC-44, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace the malfunctioning parts.

#### 3. CHECK REAR POWER VENT WINDOW MOTOR CIRCUIT

---

Check rear power vent window motor circuit.

Refer to [PWC-45, "Diagnosis Procedure"](#) and [PWC-46, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 4

NO >> Repair or replace the malfunctioning parts.

#### 4. CHECK REAR POWER VENT WINDOW RELAY

---

Check rear power vent window relay.

Refer to [PWC-47, "Diagnosis Procedure"](#) and [PWC-49, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Check intermittent incident. Refer to [GI-38, "Intermittent Incident"](#).

# PRECAUTIONS

< PRECAUTION >

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005268965

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

#### Precaution Necessary for Steering Wheel Rotation After Battery Disconnect

INFOID:000000005268966

#### **NOTE:**

- This Procedure is applied only to models with Intelligent Key system and NATS (NISSAN ANTI-THEFT SYSTEM).
- Remove and install all control units after disconnecting both battery cables with the ignition knob in the "LOCK" position.
- Always use CONSULT-III to perform self-diagnosis as a part of each function inspection after finishing work. If DTC is detected, perform trouble diagnosis according to self-diagnostic results.

For models equipped with the Intelligent Key system and NATS, an electrically controlled steering lock mechanism is adopted on the key cylinder.

For this reason, if the battery is disconnected or if the battery is discharged, the steering wheel will lock and steering wheel rotation will become impossible.

If steering wheel rotation is required when battery power is interrupted, follow the procedure below before starting the repair operation.

#### OPERATION PROCEDURE

1. Connect both battery cables.

#### **NOTE:**

Supply power using jumper cables if battery is discharged.

2. Use the Intelligent Key or mechanical key to turn the ignition switch to the "ACC" position. At this time, the steering lock will be released.
3. Disconnect both battery cables. The steering lock will remain released and the steering wheel can be rotated.
4. Perform the necessary repair operation.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
PWC  
L  
M  
N  
O  
P

## PRECAUTIONS

### < PRECAUTION >

---

5. When the repair work is completed, return the ignition switch to the "LOCK" position before connecting the battery cables. (At this time, the steering lock mechanism will engage.)
6. Perform a self-diagnosis check of all control units using CONSULT-III.

# POWER WINDOW MAIN SWITCH

< ON-VEHICLE REPAIR >

## ON-VEHICLE REPAIR


### POWER WINDOW MAIN SWITCH

#### Removal and Installation

INFOID:000000005147265

#### REMOVAL

1. Remove the power window main switch finisher (2) from the door finisher LH. Refer to [INT-11, "Removal and Installation"](#).
2. Using a suitable tool (A), remove the screws from the power window main switch (1), then release from the finisher (2).

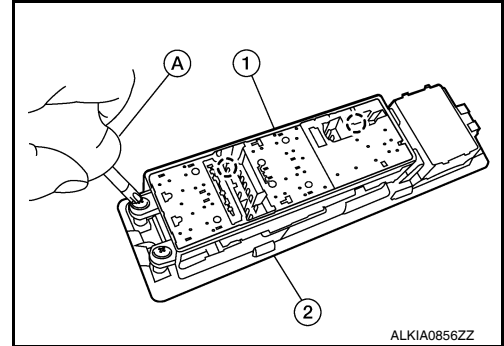

#### INSTALLATION

Installation is in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

PWC

# FRONT POWER WINDOW SWITCH

< ON-VEHICLE REPAIR >


## FRONT POWER WINDOW SWITCH

### Removal and Installation

INFOID:000000005147266

#### REMOVAL

1. Remove the front power window switch finisher (2) from the front door finisher RH. Refer to [INT-11, "Removal and Installation"](#).  
○: Pawl
2. Using a suitable tool (A), release the tabs and remove the front power window switch (1).

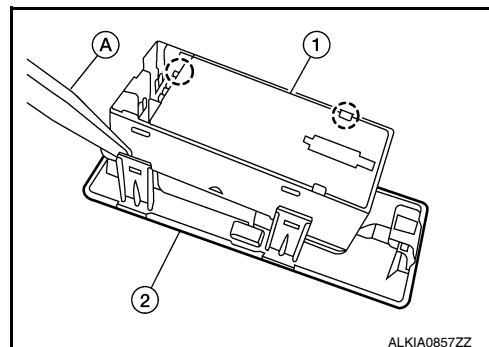

#### INSTALLATION

Installation is in the reverse order of removal.

# REAR POWER WINDOW SWITCH

< ON-VEHICLE REPAIR >


## REAR POWER WINDOW SWITCH

### Removal and Installation

INFOID:000000005147267

#### REMOVAL

1. Remove the rear power window switch finisher (1) from the rear door finisher. Refer to [INT-11, "Removal and Installation"](#).
2. Using a suitable tool (A), release the tabs and remove the rear power window switch (2).

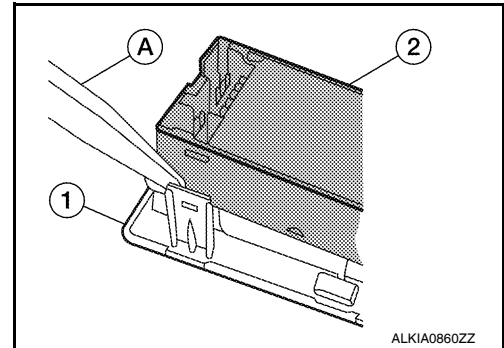

#### INSTALLATION

Installation is in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

PWC

# REAR POWER VENT WINDOW SWITCH


< ON-VEHICLE REPAIR >

## REAR POWER VENT WINDOW SWITCH

### Removal and Installation

INFOID:000000005268493

#### REMOVAL

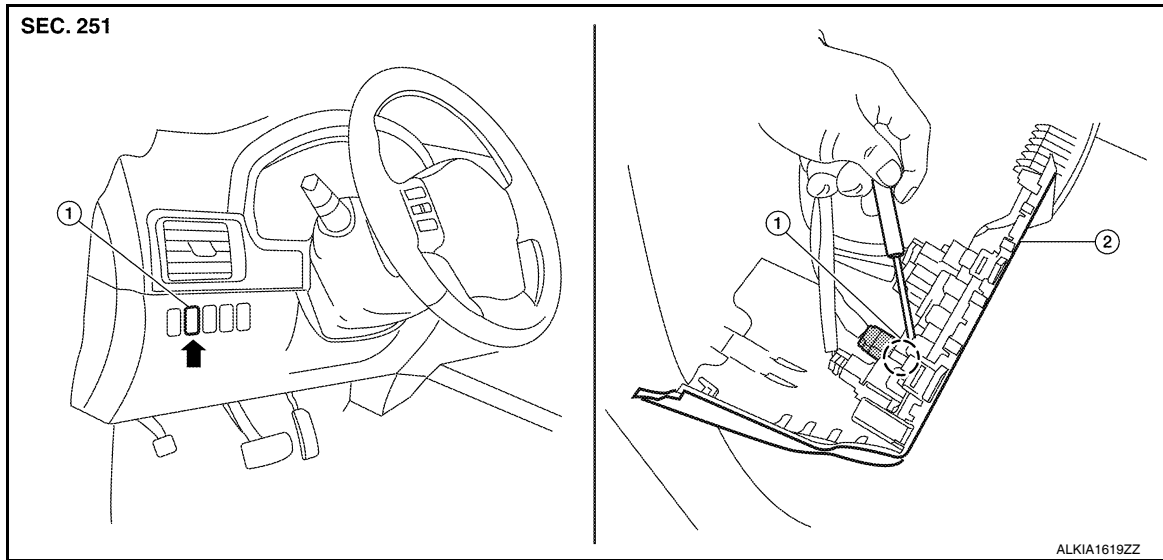

1. Remove the instrument lower panel LH, refer to [IP-14, "Removal and Installation"](#).
2. Using a suitable tool, release the upper and lower tabs, then remove the rear power vent window switch.

#### INSTALLATION

Installation is in the reverse order of removal.