

SECTION

LAN

LAN SYSTEM

A

B

C

CONTENTS

E

CAN FUNDAMENTAL		
PRECAUTION	7	
PRECAUTIONS	7	
Precautions for Trouble Diagnosis	7	
Precautions for Harness Repair	7	
SYSTEM DESCRIPTION	8	
SYSTEM	8	
CAN COMMUNICATION SYSTEM	8	
CAN COMMUNICATION SYSTEM : System Description	8	
CAN COMMUNICATION SYSTEM : System Diagram	8	
CAN COMMUNICATION SYSTEM : CAN Communication Control Circuit	9	
DIAG ON CAN	9	
DIAG ON CAN : Description	9	
DIAG ON CAN : System Diagram	10	
TROUBLE DIAGNOSIS	11	
Condition of Error Detection	11	
Symptom When Error Occurs in CAN Communication System	11	
CAN Diagnosis with CONSULT-III	14	
Self-Diagnosis	15	
CAN Diagnostic Support Monitor	15	
How to Use CAN Communication Signal Chart	17	
BASIC INSPECTION	18	
DIAGNOSIS AND REPAIR WORKFLOW	18	
Trouble Diagnosis Flow Chart	18	
Trouble Diagnosis Procedure	18	
CAN		
HOW TO USE THIS MANUAL	23	
HOW TO USE THIS SECTION	23	
Caution	23	F
Abbreviation List	23	
PRECAUTION	24	G
PRECAUTIONS	24	
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	24	H
Precautions for Trouble Diagnosis	24	
Precautions for Harness Repair	24	I
SYSTEM DESCRIPTION	26	
COMPONENT PARTS	26	J
Component Parts Location	26	
SYSTEM	27	K
CAN COMMUNICATION SYSTEM	27	
CAN COMMUNICATION SYSTEM : CAN System Specification Chart	27	L
CAN COMMUNICATION SYSTEM : CAN Communication Signal Chart	28	
WIRING DIAGRAM	33	LAN
CAN SYSTEM (WITH ICC)	33	
Wiring Diagram	33	N
CAN SYSTEM (WITHOUT ICC)	46	
Wiring Diagram	46	O
BASIC INSPECTION	56	
DIAGNOSIS AND REPAIR WORKFLOW	56	P
Interview Sheet	56	
DTC/CIRCUIT DIAGNOSIS	57	
MALFUNCTION AREA CHART	57	
System Diagram	57	
CAN Communication Circuit	57	

ITS Communication Circuit	58	DLC BRANCH LINE CIRCUIT	78
MAIN LINE BETWEEN ABS AND DLC CIRCUIT	60	Diagnosis Procedure	78
Diagnosis Procedure	60	HVAC BRANCH LINE CIRCUIT	79
MAIN LINE BETWEEN DLC AND E-SUS CIRCUIT	61	Diagnosis Procedure	79
Diagnosis Procedure	61	M&A BRANCH LINE CIRCUIT	80
MAIN LINE BETWEEN E-SUS AND ADP CIRCUIT	62	Diagnosis Procedure	80
Diagnosis Procedure	62	STRG BRANCH LINE CIRCUIT	81
MAIN LINE BETWEEN ADP AND PWBD CIRCUIT	63	Diagnosis Procedure	81
Diagnosis Procedure	63	TPMS BRANCH LINE CIRCUIT	82
MAIN LINE BETWEEN RDR-R AND RDR-L CIRCUIT	64	Diagnosis Procedure	82
Diagnosis Procedure	64	IPDM-E BRANCH LINE CIRCUIT	83
MAIN LINE BETWEEN RDR-L AND LANE CIRCUIT	65	Diagnosis Procedure	83
Diagnosis Procedure	65	ADP BRANCH LINE CIRCUIT	84
MAIN LINE BETWEEN LANE AND APA CIRCUIT	67	Diagnosis Procedure	84
Diagnosis Procedure	67	PSB BRANCH LINE CIRCUIT	85
ECM BRANCH LINE CIRCUIT	68	Diagnosis Procedure	85
Diagnosis Procedure	68	E-SUS BRANCH LINE CIRCUIT	86
4WD BRANCH LINE CIRCUIT	69	Diagnosis Procedure	86
Diagnosis Procedure	69	ICC BRANCH LINE CIRCUIT	87
ABS BRANCH LINE CIRCUIT	70	Diagnosis Procedure	87
Diagnosis Procedure	70	PWBD BRANCH LINE CIRCUIT	88
TCM BRANCH LINE CIRCUIT	71	Diagnosis Procedure	88
Diagnosis Procedure	71	RDR-R BRANCH LINE CIRCUIT	89
A-BAG BRANCH LINE CIRCUIT	72	Diagnosis Procedure	89
Diagnosis Procedure	72	RDR-L BRANCH LINE CIRCUIT	90
AFS BRANCH LINE CIRCUIT	73	Diagnosis Procedure	90
Diagnosis Procedure	73	LANE BRANCH LINE CIRCUIT	91
AV BRANCH LINE CIRCUIT	74	Diagnosis Procedure	91
Diagnosis Procedure	74	APA BRANCH LINE CIRCUIT	92
BCM BRANCH LINE CIRCUIT	75	Diagnosis Procedure	92
Diagnosis Procedure	75	LASER BRANCH LINE CIRCUIT	93
CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)	76	Diagnosis Procedure	93
Diagnosis Procedure	76	CAN COMMUNICATION CIRCUIT	94
CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)	77	Diagnosis Procedure	94
Diagnosis Procedure	77	CAN COMMUNICATION CIRCUIT 1	96
		Diagnosis Procedure	96
		CAN COMMUNICATION CIRCUIT 2	98
		Diagnosis Procedure	98
		ITS COMMUNICATION CIRCUIT	100
		Diagnosis Procedure	100
		CAN GATEWAY	
		PRECAUTION	102
		PRECAUTIONS	102

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	102	CAN SYSTEM (TYPE 1)	
SYSTEM DESCRIPTION	103	DTC/CIRCUIT DIAGNOSIS	118
COMPONENT PARTS	103	MAIN LINE BETWEEN ABS AND DLC CIRCUIT	118
Component Parts Location	103	Diagnosis Procedure	118
SYSTEM	104	MAIN LINE BETWEEN DLC AND E-SUS CIRCUIT	119
System Description	104	Diagnosis Procedure	119
DIAGNOSIS SYSTEM (CAN GATEWAY)	105	MAIN LINE BETWEEN E-SUS AND ADP CIRCUIT	120
CONSULT-III Function	105	Diagnosis Procedure	120
ECU DIAGNOSIS INFORMATION	106	ECM BRANCH LINE CIRCUIT	121
CAN GATEWAY	106	Diagnosis Procedure	121
Reference Value	106	ABS BRANCH LINE CIRCUIT	122
DTC Inspection Priority Chart	106	Diagnosis Procedure	122
DTC Index	106	TCM BRANCH LINE CIRCUIT	123
WIRING DIAGRAM	108	Diagnosis Procedure	123
CAN GATEWAY SYSTEM	108	A-BAG BRANCH LINE CIRCUIT	124
Wiring Diagram	108	Diagnosis Procedure	124
BASIC INSPECTION	110	AV BRANCH LINE CIRCUIT	125
ADDITIONAL SERVICE WHEN REPLACING CAN GATEWAY	110	Diagnosis Procedure	125
Description	110	BCM BRANCH LINE CIRCUIT	126
Work Procedure	110	Diagnosis Procedure	126
CONFIGURATION (CAN GATEWAY)	111	DLC BRANCH LINE CIRCUIT	127
Description	111	Diagnosis Procedure	127
Work Procedure	111	HVAC BRANCH LINE CIRCUIT	128
DTC/CIRCUIT DIAGNOSIS	113	Diagnosis Procedure	128
U1000 CAN COMM CIRCUIT	113	M&A BRANCH LINE CIRCUIT	129
Description	113	Diagnosis Procedure	129
DTC Logic	113	STRG BRANCH LINE CIRCUIT	130
Diagnosis Procedure	113	Diagnosis Procedure	130
U1010 CONTROL UNIT (CAN)	114	TPMS BRANCH LINE CIRCUIT	131
Description	114	Diagnosis Procedure	131
DTC Logic	114	IPDM-E BRANCH LINE CIRCUIT	132
Diagnosis Procedure	114	Diagnosis Procedure	132
B2600 CONFIG ERROR	115	ADP BRANCH LINE CIRCUIT	133
Description	115	Diagnosis Procedure	133
DTC Logic	115	E-SUS BRANCH LINE CIRCUIT	134
Diagnosis Procedure	115	Diagnosis Procedure	134
POWER SUPPLY AND GROUND CIRCUIT	116	PWBD BRANCH LINE CIRCUIT	135
Diagnosis Procedure	116	Diagnosis Procedure	135
REMOVAL AND INSTALLATION	117	CAN COMMUNICATION CIRCUIT	136
CAN GATEWAY	117	Diagnosis Procedure	136
Removal and Installation	117		

CAN SYSTEM (TYPE 2)

DTC/CIRCUIT DIAGNOSIS	138
MAIN LINE BETWEEN ABS AND DLC CIR- CUIT	138
Diagnosis Procedure	138
MAIN LINE BETWEEN ADP AND PWBD CIR- CUIT	139
Diagnosis Procedure	139
MAIN LINE BETWEEN RDR-R AND RDR-L CIRCUIT	140
Diagnosis Procedure	140
MAIN LINE BETWEEN RDR-L AND LANE CIRCUIT	141
Diagnosis Procedure	141
MAIN LINE BETWEEN LANE AND APA CIR- CUIT	143
Diagnosis Procedure	143
ECM BRANCH LINE CIRCUIT	144
Diagnosis Procedure	144
ABS BRANCH LINE CIRCUIT	145
Diagnosis Procedure	145
TCM BRANCH LINE CIRCUIT	146
Diagnosis Procedure	146
A-BAG BRANCH LINE CIRCUIT	147
Diagnosis Procedure	147
AFS BRANCH LINE CIRCUIT	148
Diagnosis Procedure	148
AV BRANCH LINE CIRCUIT	149
Diagnosis Procedure	149
BCM BRANCH LINE CIRCUIT	150
Diagnosis Procedure	150
CGW BRANCH LINE CIRCUIT (CAN COM- MUNICATION CIRCUIT 1)	151
Diagnosis Procedure	151
CGW BRANCH LINE CIRCUIT (CAN COM- MUNICATION CIRCUIT 2)	152
Diagnosis Procedure	152
DLC BRANCH LINE CIRCUIT	153
Diagnosis Procedure	153
HVAC BRANCH LINE CIRCUIT	154
Diagnosis Procedure	154
M&A BRANCH LINE CIRCUIT	155
Diagnosis Procedure	155
STRG BRANCH LINE CIRCUIT	156

Diagnosis Procedure	156
TPMS BRANCH LINE CIRCUIT	157
Diagnosis Procedure	157
IPDM-E BRANCH LINE CIRCUIT	158
Diagnosis Procedure	158
ADP BRANCH LINE CIRCUIT	159
Diagnosis Procedure	159
PSB BRANCH LINE CIRCUIT	160
Diagnosis Procedure	160
E-SUS BRANCH LINE CIRCUIT	161
Diagnosis Procedure	161
ICC BRANCH LINE CIRCUIT	162
Diagnosis Procedure	162
PWBD BRANCH LINE CIRCUIT	163
Diagnosis Procedure	163
RDR-R BRANCH LINE CIRCUIT	164
Diagnosis Procedure	164
RDR-L BRANCH LINE CIRCUIT	165
Diagnosis Procedure	165
LANE BRANCH LINE CIRCUIT	166
Diagnosis Procedure	166
APA BRANCH LINE CIRCUIT	167
Diagnosis Procedure	167
LASER BRANCH LINE CIRCUIT	168
Diagnosis Procedure	168
CAN COMMUNICATION CIRCUIT 1	169
Diagnosis Procedure	169
CAN COMMUNICATION CIRCUIT 2	171
Diagnosis Procedure	171
ITS COMMUNICATION CIRCUIT	173
Diagnosis Procedure	173

CAN SYSTEM (TYPE 3)

DTC/CIRCUIT DIAGNOSIS	175
MAIN LINE BETWEEN ABS AND DLC CIR- CUIT	175
Diagnosis Procedure	175
MAIN LINE BETWEEN DLC AND E-SUS CIR- CUIT	176
Diagnosis Procedure	176
MAIN LINE BETWEEN E-SUS AND ADP CIR- CUIT	177
Diagnosis Procedure	177
ECM BRANCH LINE CIRCUIT	178

Diagnosis Procedure	178	Diagnosis Procedure	198
4WD BRANCH LINE CIRCUIT	179	MAIN LINE BETWEEN RDR-L AND LANE CIRCUIT	199
Diagnosis Procedure	179	Diagnosis Procedure	199
ABS BRANCH LINE CIRCUIT	180	MAIN LINE BETWEEN LANE AND APA CIRCUIT	201
Diagnosis Procedure	180	Diagnosis Procedure	201
TCM BRANCH LINE CIRCUIT	181	ECM BRANCH LINE CIRCUIT	202
Diagnosis Procedure	181	Diagnosis Procedure	202
A-BAG BRANCH LINE CIRCUIT	182	4WD BRANCH LINE CIRCUIT	203
Diagnosis Procedure	182	Diagnosis Procedure	203
AV BRANCH LINE CIRCUIT	183	ABS BRANCH LINE CIRCUIT	204
Diagnosis Procedure	183	Diagnosis Procedure	204
BCM BRANCH LINE CIRCUIT	184	TCM BRANCH LINE CIRCUIT	205
Diagnosis Procedure	184	Diagnosis Procedure	205
DLC BRANCH LINE CIRCUIT	185	A-BAG BRANCH LINE CIRCUIT	206
Diagnosis Procedure	185	Diagnosis Procedure	206
HVAC BRANCH LINE CIRCUIT	186	AFS BRANCH LINE CIRCUIT	207
Diagnosis Procedure	186	Diagnosis Procedure	207
M&A BRANCH LINE CIRCUIT	187	AV BRANCH LINE CIRCUIT	208
Diagnosis Procedure	187	Diagnosis Procedure	208
STRG BRANCH LINE CIRCUIT	188	BCM BRANCH LINE CIRCUIT	209
Diagnosis Procedure	188	Diagnosis Procedure	209
TPMS BRANCH LINE CIRCUIT	189	CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)	210
Diagnosis Procedure	189	Diagnosis Procedure	210
IPDM-E BRANCH LINE CIRCUIT	190	CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)	211
Diagnosis Procedure	190	Diagnosis Procedure	211
ADP BRANCH LINE CIRCUIT	191	DLC BRANCH LINE CIRCUIT	212
Diagnosis Procedure	191	Diagnosis Procedure	212
E-SUS BRANCH LINE CIRCUIT	192	HVAC BRANCH LINE CIRCUIT	213
Diagnosis Procedure	192	Diagnosis Procedure	213
PWBD BRANCH LINE CIRCUIT	193	M&A BRANCH LINE CIRCUIT	214
Diagnosis Procedure	193	Diagnosis Procedure	214
CAN COMMUNICATION CIRCUIT	194	STRG BRANCH LINE CIRCUIT	215
Diagnosis Procedure	194	Diagnosis Procedure	215
CAN SYSTEM (TYPE 4)		TPMS BRANCH LINE CIRCUIT	216
DTC/CIRCUIT DIAGNOSIS	196	Diagnosis Procedure	216
MAIN LINE BETWEEN ABS AND DLC CIRCUIT	196	IPDM-E BRANCH LINE CIRCUIT	217
Diagnosis Procedure	196	Diagnosis Procedure	217
MAIN LINE BETWEEN ADP AND PWBD CIRCUIT	197	ADP BRANCH LINE CIRCUIT	218
Diagnosis Procedure	197	Diagnosis Procedure	218
MAIN LINE BETWEEN RDR-R AND RDR-L CIRCUIT	198		

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

PSB BRANCH LINE CIRCUIT	219	LANE BRANCH LINE CIRCUIT	225
Diagnosis Procedure	219	Diagnosis Procedure	225
E-SUS BRANCH LINE CIRCUIT	220	APA BRANCH LINE CIRCUIT	226
Diagnosis Procedure	220	Diagnosis Procedure	226
ICC BRANCH LINE CIRCUIT	221	LASER BRANCH LINE CIRCUIT	227
Diagnosis Procedure	221	Diagnosis Procedure	227
PWBD BRANCH LINE CIRCUIT	222	CAN COMMUNICATION CIRCUIT 1	228
Diagnosis Procedure	222	Diagnosis Procedure	228
RDR-R BRANCH LINE CIRCUIT	223	CAN COMMUNICATION CIRCUIT 2	230
Diagnosis Procedure	223	Diagnosis Procedure	230
RDR-L BRANCH LINE CIRCUIT	224	ITS COMMUNICATION CIRCUIT	232
Diagnosis Procedure	224	Diagnosis Procedure	232

PRECAUTION

PRECAUTIONS

Precautions for Trouble Diagnosis

INFOID:000000006220510

CAUTION:

- Never apply 7.0 V or more to the measurement terminal.
- Use a tester with open terminal voltage of 7.0 V or less.
- Turn the ignition switch OFF and disconnect the battery cable from the negative terminal when checking the harness.


Precautions for Harness Repair

INFOID:000000006220511

- Solder the repaired area and wrap tape around the soldered area.

NOTE:


A fray of twisted lines must be within 110 mm (4.33 in).

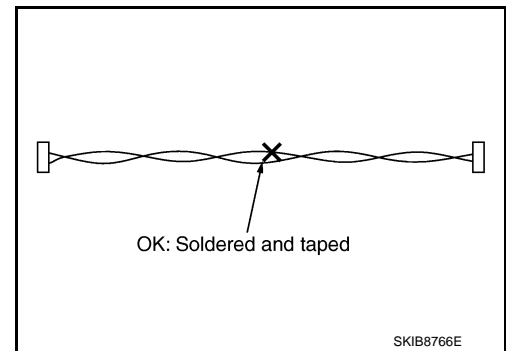

- Bypass connection is never allowed at the repaired area.

NOTE:

Bypass connection may cause CAN communication error. The spliced wire becomes separated and the characteristics of twisted line are lost.

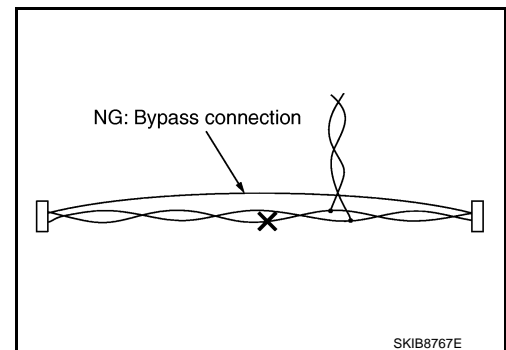

- Replace the applicable harness as an assembly if error is detected on the shield lines of CAN communication line.

SYSTEM DESCRIPTION

SYSTEM

CAN COMMUNICATION SYSTEM


CAN COMMUNICATION SYSTEM : System Description

INFOID:0000000006220512

- CAN communication is a multiplex communication system. This enables the system to transmit and receive large quantities of data at high speed by connecting control units with two communication lines (CAN-H and CAN-L).
- Control units on the CAN network transmit signals using the CAN communication control circuit. They receive only necessary signals from other control units to operate various functions.
- CAN communication lines adopt twisted-pair line style (two lines twisted) for noise immunity.

CAN COMMUNICATION SYSTEM : System Diagram

INFOID:0000000006220513

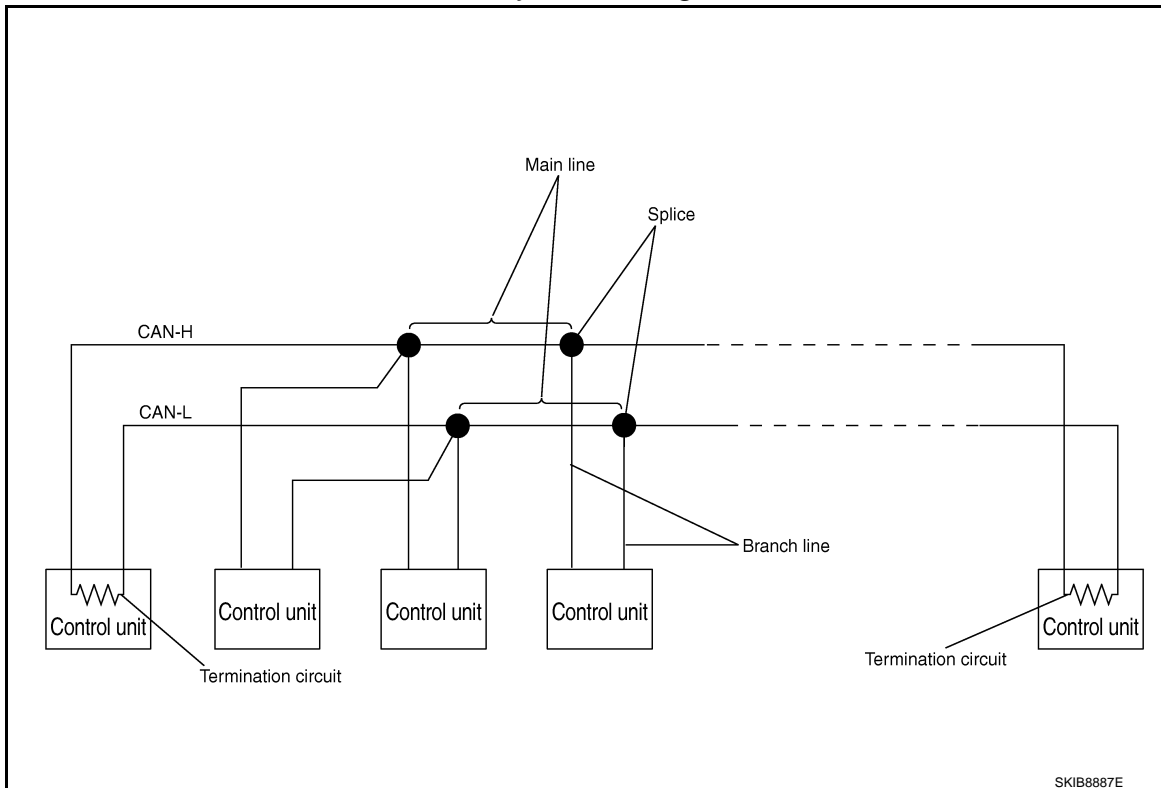


Each control unit passes an electric current to the termination circuits when transmitting CAN communication signal. The termination circuits produce an electrical potential difference between CAN-H and CAN-L. CAN communication system transmits and receives CAN communication signals by the potential difference.

Component	Description
Main line	CAN communication line between splices
Branch line	CAN communication line between splice and a control unit
Splice	A point connecting a branch line with a main line
Termination circuit	Refer to LAN-9, "CAN COMMUNICATION SYSTEM : CAN Communication Control Circuit" .

CAN COMMUNICATION SYSTEM : CAN Communication Control Circuit

INFOID:000000006220514

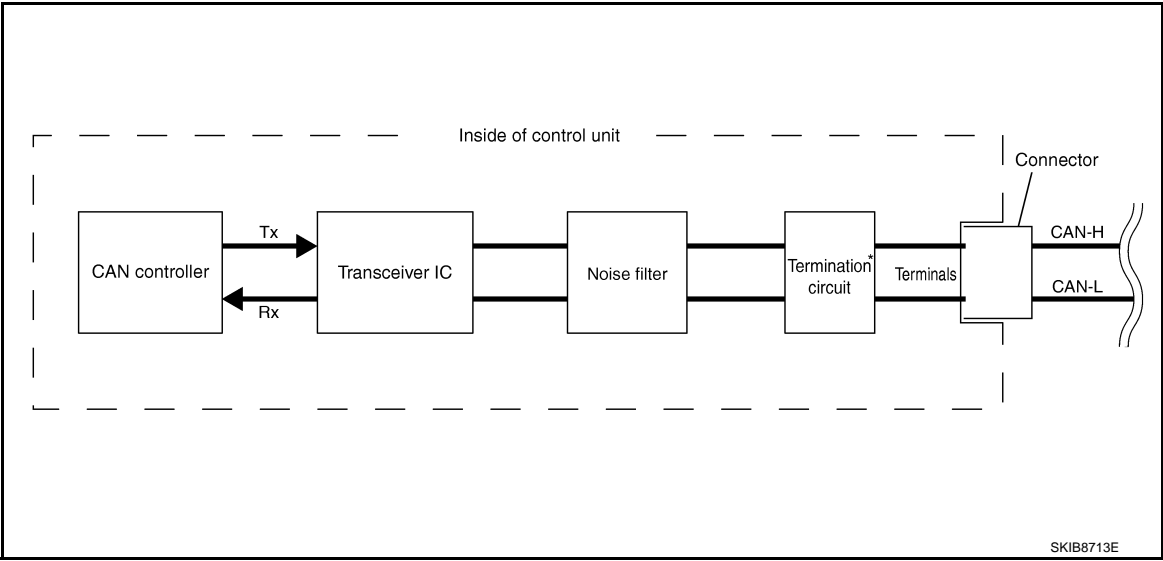

Component	System description
CAN controller	It controls CAN communication signal transmission and reception, error detection, etc.
Transceiver IC	It converts digital signal into CAN communication signal, and CAN communication signal into digital signal.
Noise filter	It eliminates noise of CAN communication signal.
Termination circuit* (Resistance of approx. 120 Ω)	It produces potential difference.

*: These are the only control units wired with both ends of CAN communication system.

DIAG ON CAN


DIAG ON CAN : Description

INFOID:000000006220515

“Diag on CAN” is a diagnosis using CAN communication instead of previous DDL1 and DDL2 communication lines, between control units and diagnosis unit.

DIAG ON CAN : System Diagram

INFOID:000000006220516

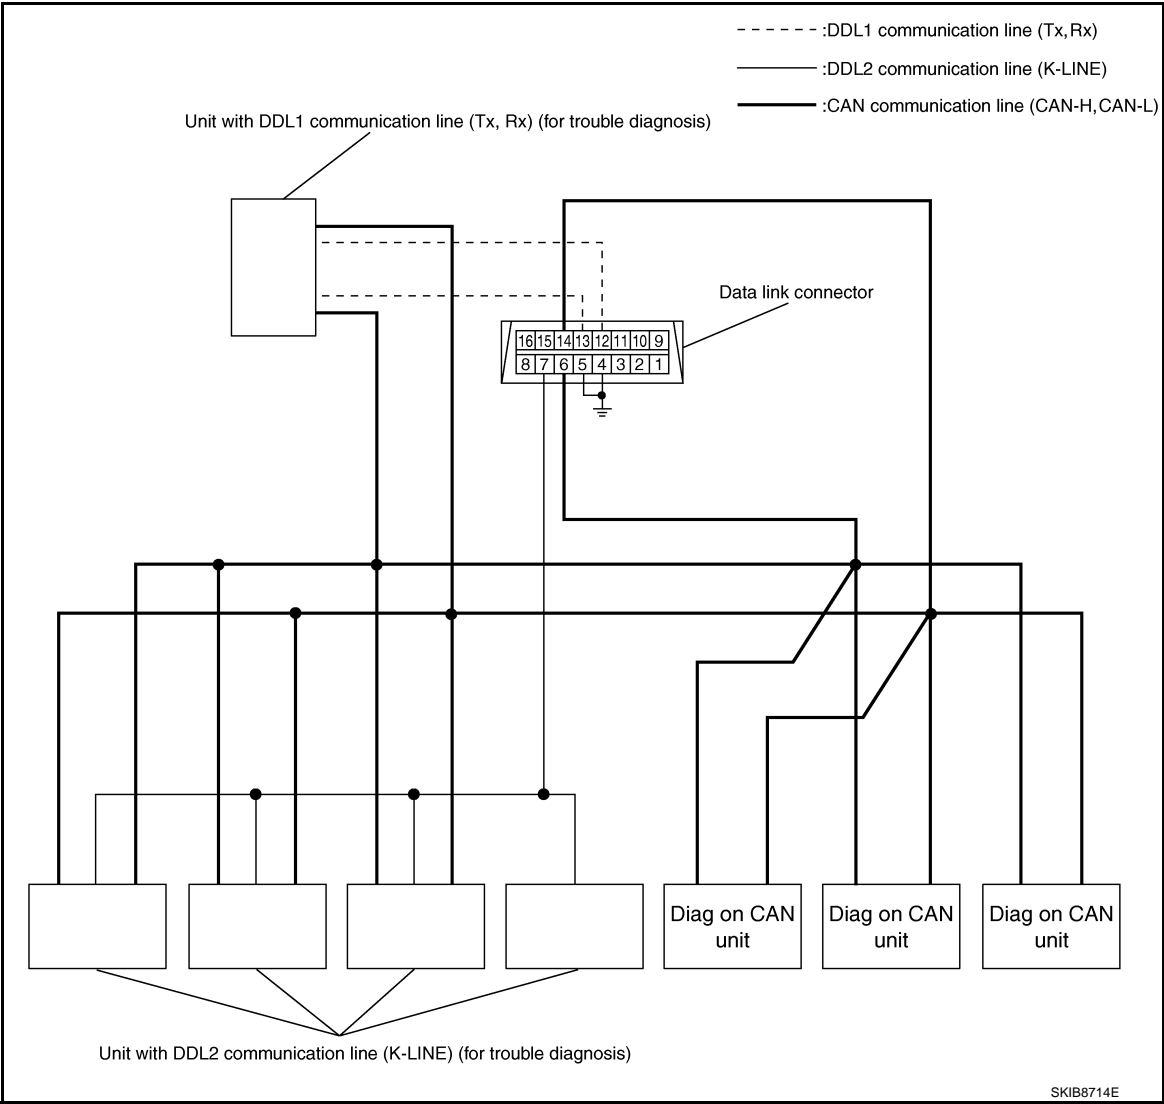

Name	Harness	Description
DDL1	Tx Rx	It is used for trouble diagnosis. (CAN-H and CAN-L are used for controlling)
DDL2	K-LINE	It is used for trouble diagnosis. (CAN-H and CAN-L are used for controlling)
Diag on CAN	CAN-H CAN-L	It is used for trouble diagnosis and control.

TROUBLE DIAGNOSIS

Condition of Error Detection

INFOID:000000006220517

DTC of CAN communication is indicated on SELF-DIAG RESULTS on CONSULT-III if a CAN communication signal is not transmitted or received between units for 2 seconds or more.

NOTE:

DTCs of CAN communication are as follows:

- U0101
- U0140
- U0164
- U1000
- U1001
- U1507
- U1508

CAN COMMUNICATION SYSTEM ERROR

- CAN communication line open (CAN-H, CAN-L, or both)
- CAN communication line short (ground, between CAN communication lines, other harnesses)
- Error of CAN communication control circuit of the unit connected to CAN communication line

WHEN DTC OF CAN COMMUNICATION IS INDICATED EVEN THOUGH CAN COMMUNICATION SYSTEM IS NORMAL

- Removal/installation of parts: Error may be detected when removing and installing CAN communication unit and related parts while turning the ignition switch ON. (A DTC except for CAN communication may be detected.)
- Fuse blown out (removed): CAN communication of the unit may cease.
- Voltage drop: Error may be detected if voltage drops due to discharged battery when turning the ignition switch ON (Depending on the control unit which carries out CAN communication).
- Error may be detected if the power supply circuit of the control unit, which carries out CAN communication, malfunctions (Depending on the control unit which carries out CAN communication).
- Error may be detected if reprogramming is not completed normally.

CAUTION:

CAN communication system is normal if DTC of CAN communication is indicated on SELF-DIAG RESULTS of CONSULT-III under the above conditions. Erase the memory of the self-diagnosis of each unit.

Symptom When Error Occurs in CAN Communication System

INFOID:000000006220518

In CAN communication system, multiple units mutually transmit and receive signals. Each unit cannot transmit and receive signals if any error occurs on CAN communication line. Under this condition, multiple control units related to the root cause malfunction or go into fail-safe mode.

ERROR EXAMPLE

NOTE:

- Each vehicle differs in symptom of each unit under fail-safe mode and CAN communication line wiring.
- Refer to [LAN-23, "Abbreviation List"](#) for the unit abbreviation.

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O


P

TROUBLE DIAGNOSIS

< SYSTEM DESCRIPTION >


[CAN FUNDAMENTAL]

Example: TCM branch line open circuit

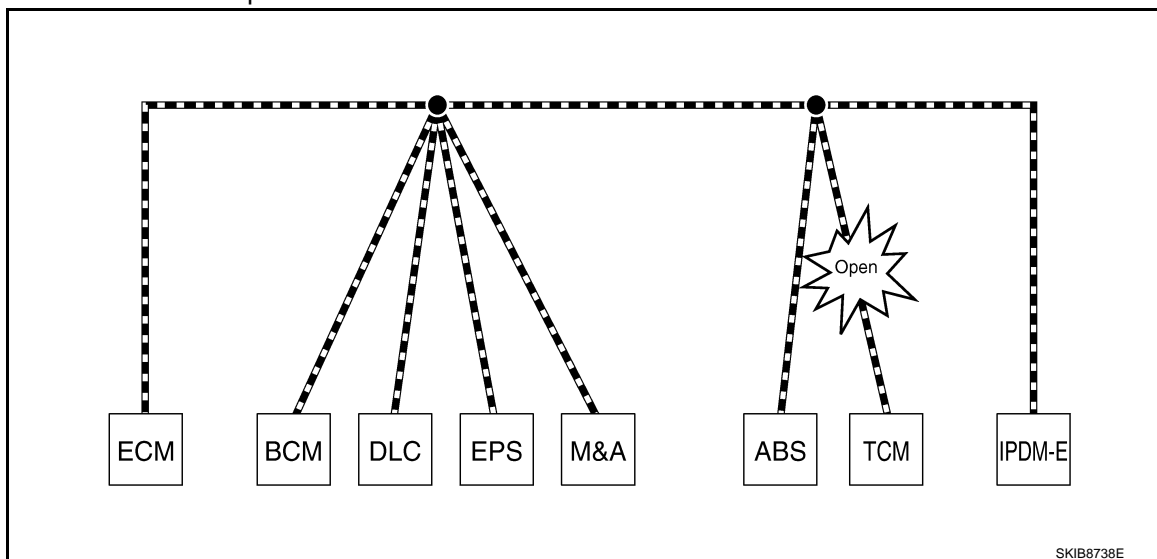

Unit name	Major symptom
ECM	Engine torque limiting is affected, and shift harshness increases.
BCM	Reverse warning chime does not sound.
EPS control unit	Normal operation.
Combination meter	<ul style="list-style-type: none"> Shift position indicator and OD OFF indicator turn OFF. Warning lamps turn ON.
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	Normal operation.

Example: Data link connector branch line open circuit

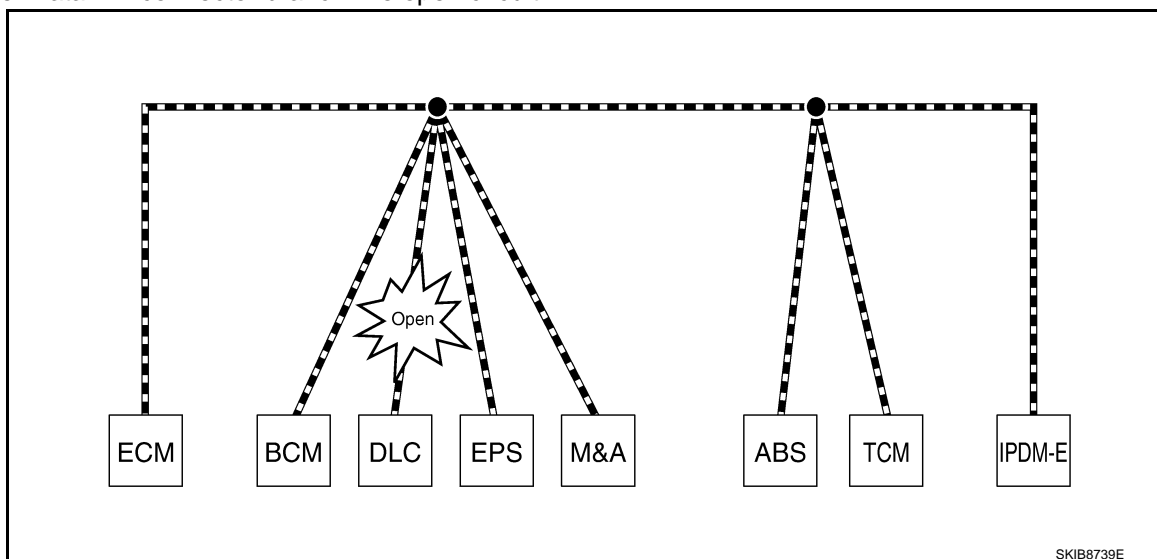

TROUBLE DIAGNOSIS

< SYSTEM DESCRIPTION >

[CAN FUNDAMENTAL]


Unit name	Major symptom
ECM	Normal operation.
BCM	
EPS control unit	
Combination meter	
ABS actuator and electric unit (control unit)	
TCM	
IPDM E/R	

NOTE:

- When data link connector branch line is open, transmission and reception of CAN communication signals are not affected. Therefore, no symptoms occur. However, be sure to repair malfunctioning circuit.
- The model (all units on CAN communication system are Diag on CAN) cannot perform CAN diagnosis with CONSULT-III if the following error occurs. The error is judged by the symptom.

Error	Difference of symptom
Data link connector branch line open circuit	Normal operation.
CAN-H, CAN-L harness short-circuit	Most of the units which are connected to the CAN communication system enter fail-safe mode or are deactivated.

Example: Main Line Between Data Link Connector and ABS Actuator and Electric Unit (Control Unit) Open Circuit

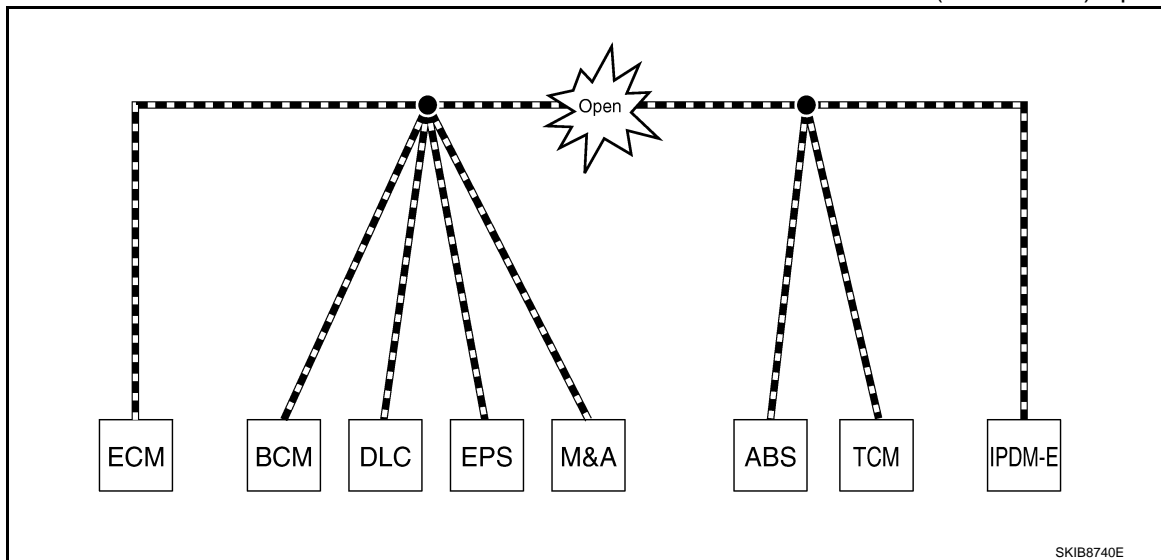


Unit name	Major symptom
ECM	Engine torque limiting is affected, and shift harshness increases.
BCM	<ul style="list-style-type: none"> Reverse warning chime does not sound. The front wiper moves under continuous operation mode even though the front wiper switch being in the intermittent position.
EPS control unit	The steering effort increases.
Combination meter	<ul style="list-style-type: none"> The shift position indicator and OD OFF indicator turn OFF. The speedometer is inoperative. The odo/trip meter stops.
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	When the ignition switch is ON, <ul style="list-style-type: none"> The headlamps (Lo) turn ON. The cooling fan continues to rotate.

TROUBLE DIAGNOSIS

< SYSTEM DESCRIPTION >

[CAN FUNDAMENTAL]

Example: CAN-H, CAN-L Harness Short Circuit

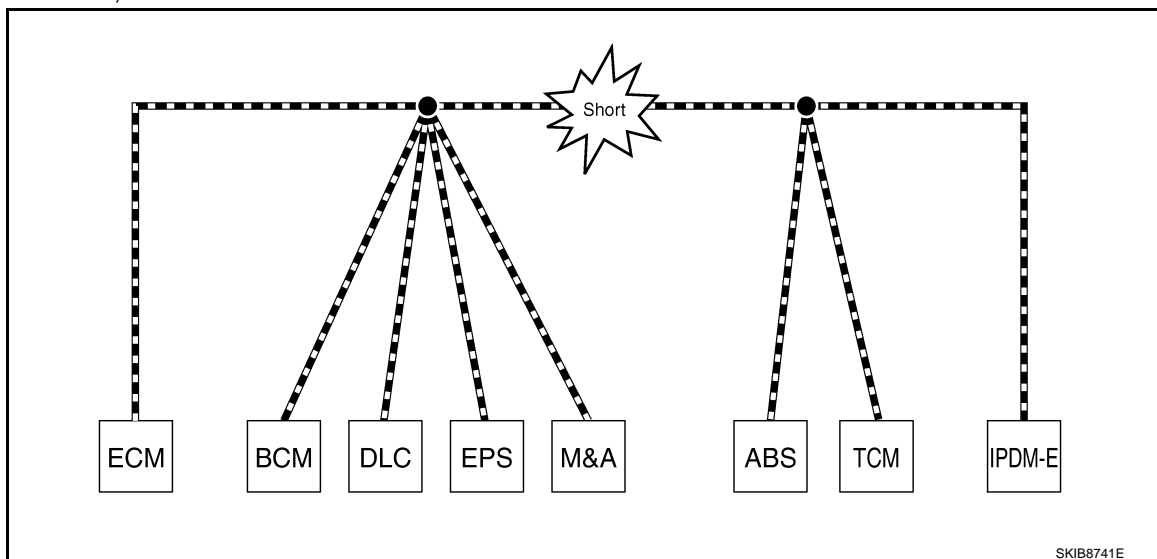

Unit name	Major symptom
ECM	<ul style="list-style-type: none"> Engine torque limiting is affected, and shift harshness increases. Engine speed drops.
BCM	<ul style="list-style-type: none"> Reverse warning chime does not sound. The front wiper moves under continuous operation mode even though the front wiper switch being in the intermittent position. The room lamp does not turn ON. The engine does not start (if an error or malfunction occurs while turning the ignition switch OFF.) The steering lock does not release (if an error or malfunction occurs while turning the ignition switch OFF.)
EPS control unit	The steering effort increases.
Combination meter	<ul style="list-style-type: none"> The tachometer and the speedometer do not move. Warning lamps turn ON. Indicator lamps do not turn ON.
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	When the ignition switch is ON, <ul style="list-style-type: none"> The headlamps (Lo) turn ON. The cooling fan continues to rotate.

CAN Diagnosis with CONSULT-III

INFOID:000000006220519

CAN diagnosis on CONSULT-III extracts the root cause by receiving the following information.

- Response to the system call
- Control unit diagnosis information
- Self-diagnosis
- CAN diagnostic support monitor

TROUBLE DIAGNOSIS

< SYSTEM DESCRIPTION >

[CAN FUNDAMENTAL]

Self-Diagnosis

INFOID:000000006220520

DTC	Self-diagnosis item (CONSULT-III indication)	DTC detection condition		Inspection/Action
U0101	LOST COMM (TCM)	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) from TCM for 2 seconds or more.		Start the inspection. Refer to the applicable section of the indicated control unit.
U0140	LOST COMM (BCM)	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) from BCM for 2 seconds or more.		
U0164	LOST COMM (HVAC)	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) from A/C auto amp. or unified meter and A/C amp. for 2 seconds or more.		
U1000	CAN COMM CIRCUIT	ECM	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) for 2 seconds or more.	
		Except for ECM	When a control unit (except for ECM) is not transmitting or receiving CAN communication signal for 2 seconds or more.	
U1001	CAN COMM CIRCUIT	When ECM is not transmitting or receiving CAN communication signal other than OBD (emission-related diagnosis) for 2 seconds or more.		
U1002	SYSTEM COMM	When a control unit is not transmitting or receiving CAN communication signal for 2 seconds or less.		
U1010	CONTROL UNIT(CAN)	When an error is detected during the initial diagnosis for CAN controller of each control unit.		Replace the control unit indicating “U1010” or “P0607”.
P0607	ECM			
U1507	LOST COMM (SIDE RDR R)	When ADAS control unit is not receiving CAN communication signal from side radar RH for 2 seconds or more.		Start the inspection. Refer to the applicable section of the indicated control unit.
U1508	LOST COMM (SIDE RDR L)	When ADAS control unit is not receiving CAN communication signal from side radar LH for 2 seconds or more.		

CAN Diagnostic Support Monitor

INFOID:000000006220521

MONITOR ITEM (CONSULT-III)

Example: CAN DIAG SUPPORT MNTR indication

Without PAST			With PAST		
ECM			ECM		
	PRSENT	PAST		PRSENT	PAST
INITIAL DIAG	OK		TRANSMIT DIAG	OK	OK
TRANSMIT DIAG	OK		VDC/TCS/ABS	-	-
TCM	OK		METER/M&A	OK	OK
VDC/TCS/ABS	UNKWN		BCM/SEC	OK	OK
METER/M&A	OK		ICC	-	-
ICC	UNKWN		HVAC	-	-
BCM/SEC	OK		TCM	OK	OK
IPDM E/R	OK		EPS	-	-
			IPDM E/R	OK	OK
			e4WD	-	-
			AWD/4WD	OK	OK

JSMIA0015GB

Without PAST

TROUBLE DIAGNOSIS

< SYSTEM DESCRIPTION >

[CAN FUNDAMENTAL]

Item	PRSNT	Description
Initial diagnosis	OK	Normal at present
	NG	Control unit error (Except for some control units)
Transmission diagnosis	OK	Normal at present
	UNKWN	Unable to transmit signals for 2 seconds or more.
		Diagnosis not performed
Control unit name (Reception diagnosis)	OK	Normal at present
	UNKWN	Unable to receive signals for 2 seconds or more.
		Diagnosis not performed
		No control unit for receiving signals. (No applicable optional parts)

With PAST

Item	PRSNT	PAST	Description
Transmission diagnosis	OK	OK	Normal at present and in the past
		1 – 39	Normal at present, but unable to transmit signals for 2 seconds or more in the past. (The number indicates the number of ignition switch cycles from OFF to ON.)
	UNKWN	0	Unable to transmit signals for 2 seconds or more at present.
Control unit name (Reception diagnosis)	OK	OK	Normal at present and in the past
		1 – 39	Normal at present, but unable to receive signals for 2 seconds or more in the past. (The number indicates the number of ignition switch cycles from OFF to ON.)
	UNKWN	0	Unable to receive signals for 2 seconds or more at present.
	–	–	Diagnosis not performed.
			No control unit for receiving signals. (No applicable optional parts)

MONITOR ITEM (ON-BOARD DIAGNOSIS)

NOTE:

For some models, CAN communication diagnosis result is received from the vehicle monitor.

Example: Vehicle Display

Item	Result indicated	Error counter	Description
CAN_COMM (Initial diagnosis)	OK	0	Normal at present
	NG	1 – 50	Control unit error (The number indicates how many times diagnosis has been run.)
CAN_CIRC_1 (Transmission diagnosis)	OK	0	Normal at present
	UNKWN	1 – 50	Unable to transmit for 2 seconds or more at present. (The number indicates how many times diagnosis has been run.)
CAN_CIRC_2 – 9 (Reception diagnosis of each unit)	OK	0	Normal at present
	UNKWN	1 – 50	Unable to transmit for 2 seconds or more at present. (The number indicates how many times diagnosis has been run.)
			Diagnosis not performed. No control unit for receiving signals. (No applicable optional parts)

TROUBLE DIAGNOSIS

< SYSTEM DESCRIPTION >

[CAN FUNDAMENTAL]

How to Use CAN Communication Signal Chart

INFOID:000000006220522

The CAN communication signal chart lists the signals needed for trouble diagnosis. It is useful for detecting the root cause by finding a signal related to the symptom, and by checking transmission and reception unit.


Example: Tachometer does not move even though the engine rotates.

T: Transmit R: Receive

Signal name/Connecting unit	ECM	BCM	M&A	STRG	ABS	IPDM-E
A/C compressor feedback signal	T		R			
A/C compressor request signal	T					R
Accelerator pedal position signal	T				R	
Cooling fan motor operation signal	T					R
Engine coolant temperature signal	T		R			
Engine speed signal	T		R		R	
Fuel consumption monitor signal	T		R			
Malfunction indicator lamp signal	T		R			
A/C switch signal	R	T				
Ignition switch signal		T				R
Sleep/wake up signal		T	R			R

No communication between ECM and M&A.

It indicates that an error occurs between ECM and M&A (Shaded area).

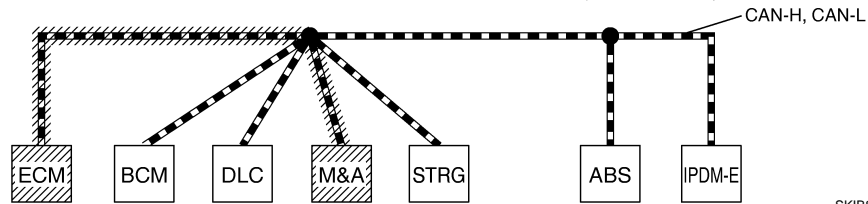

SKIB8715E

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P


LAN

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Trouble Diagnosis Flow Chart

INFOID:000000006220523

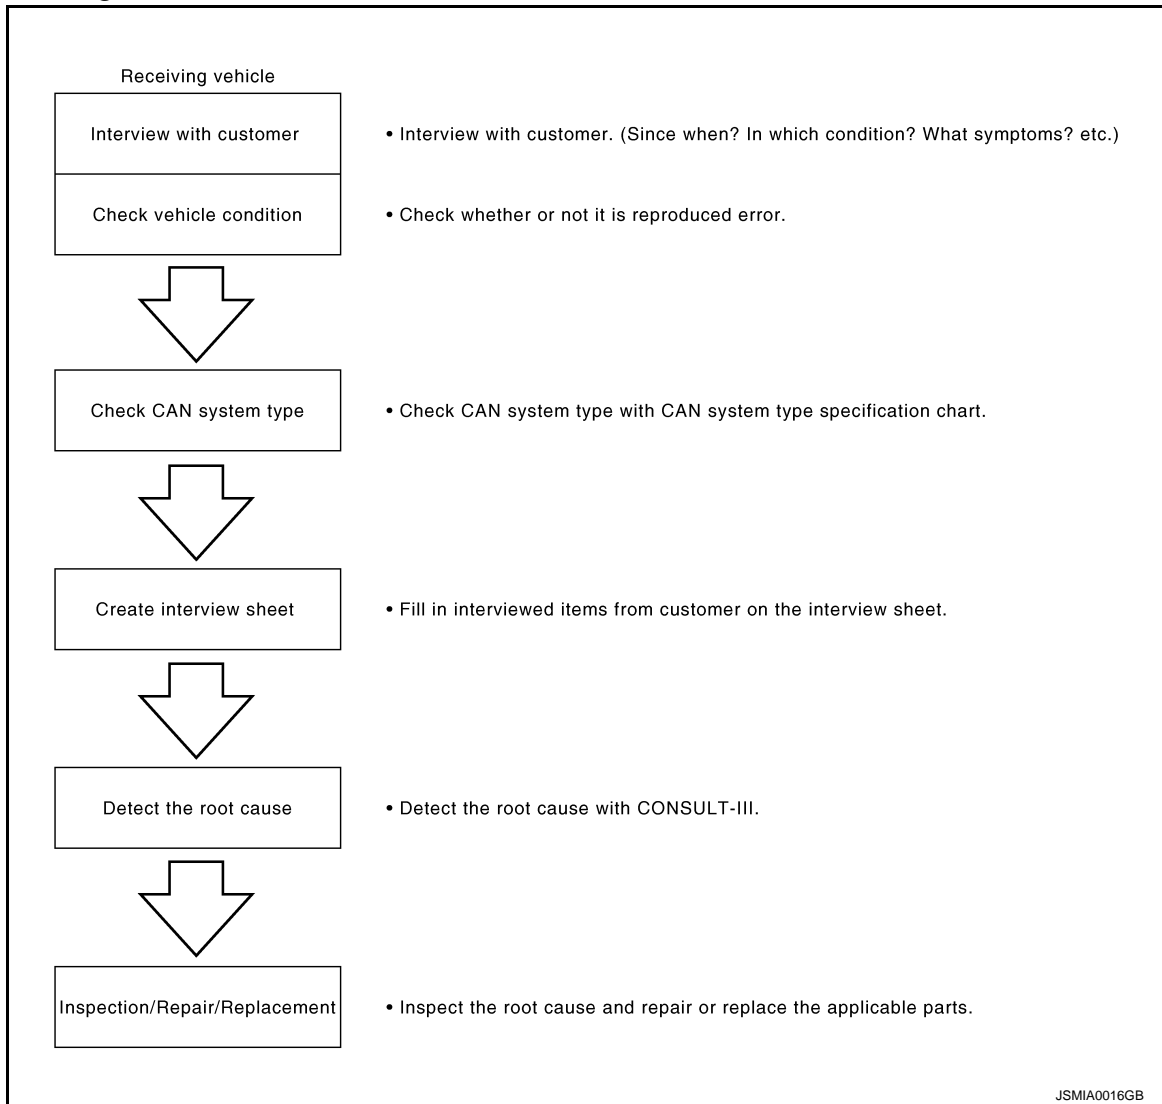

Trouble Diagnosis Procedure

INFOID:000000006220524

INTERVIEW WITH CUSTOMER

Interview with the customer is important to detect the root cause of CAN communication system errors and to understand vehicle condition and symptoms for proper trouble diagnosis.

Points in interview

- What: Parts name, system name
- When: Date, Frequency
- Where: Road condition, Place
- In what condition: Driving condition/environment
- Result: Symptom

NOTE:


- Check normal units as well as error symptoms.
- Example: Circuit between ECM and the combination meter is judged normal if the customer indicates tachometer functions normally.
- When a CAN communication system error is present, multiple control units may malfunction or go into fail-safe mode.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

- Indication of the combination meter is important to detect the root cause because it is the most obvious to the customer, and it performs CAN communication with many units.

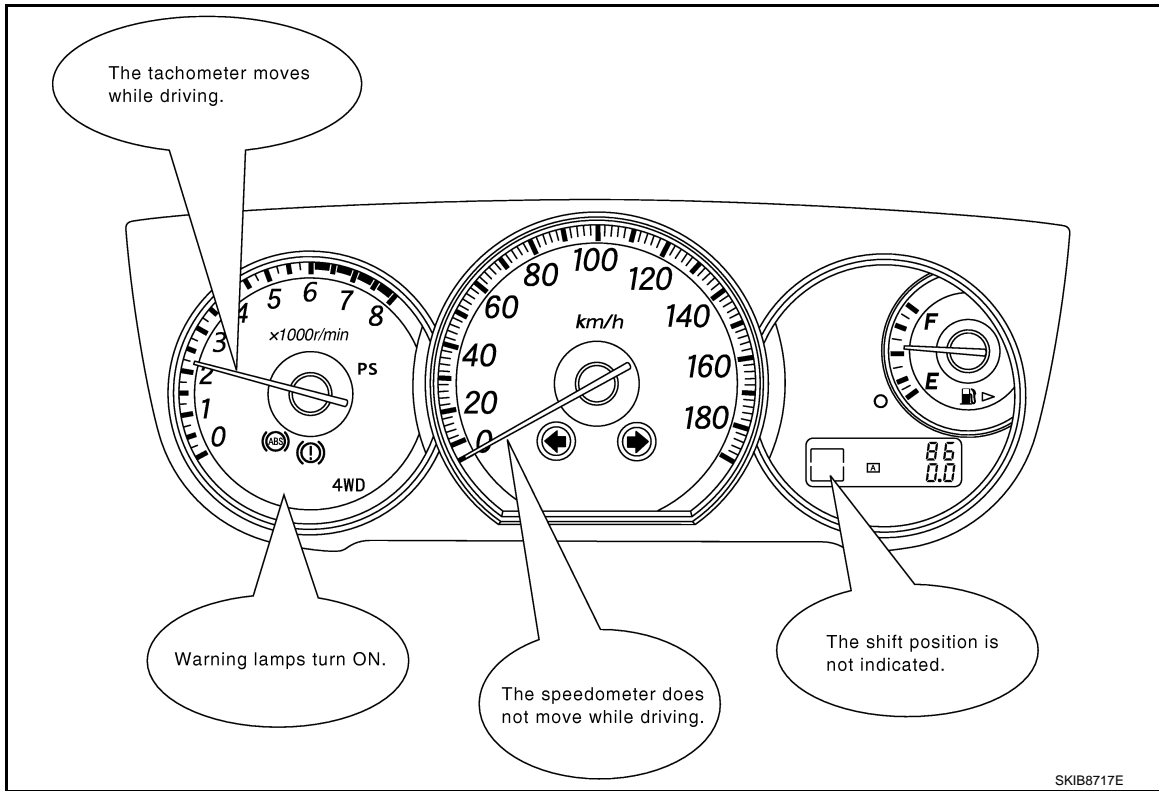

INSPECTION OF VEHICLE CONDITION

Check whether the symptom is reproduced or not.

NOTE:

Do not turn the ignition switch OFF or disconnect the battery cable while reproducing the error. The error may temporarily correct itself, making it difficult to determine the root cause.

CHECK OF CAN SYSTEM TYPE (HOW TO USE CAN SYSTEM TYPE SPECIFICATION CHART)

Determine CAN system type based on vehicle equipment.

NOTE:

- This chart is used if CONSULT-III does not automatically recognize CAN system type.
- There are two styles for CAN system type specification charts. Depending on the number of available system types, either style A or style B may be used.

CAN System Type Specification Chart (Style A)

NOTE:

LAN

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

CAN system type is easily checked with the vehicle equipment identification information shown in the chart.

Example:
Vehicle is equipped as follows: Wagon, AWD, VQ35DE, CVT, VDC, and Intelligent Key system. (○ shows an example of CAN system type.)

CAN System Specification Chart
Determine CAN system type from the following specification chart.

Body type	Wagon					
Axle	2WD			AWD		
Engine	QR25DE			VQ35DE		
Transmission	A/T			CVT		
Brake control	ABS			VDC		
Intelligent Key system		X		X		X
CAN system type	1	2	3	4	5	6
CAN communication signal chart	XX-XX. "TYPE 1/TYPE 2"		XX-XX. "TYPE 3/TYPE 4"		XX-XX. "TYPE 5/TYPE 6"	

X : Applicable


Check the vehicle equipment with the vehicle identification number plate.

Check the vehicle equipment.

The number indicates the CAN system type of the vehicle.


VEHICLE EQUIPMENT IDENTIFICATION INFORMATION
NOTE:
Check CAN system type from the vehicle shape and equipment.

With VDC

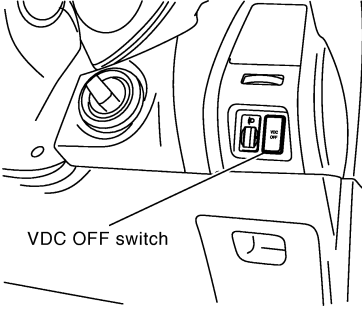

VDC OFF switch

With Intelligent Key system

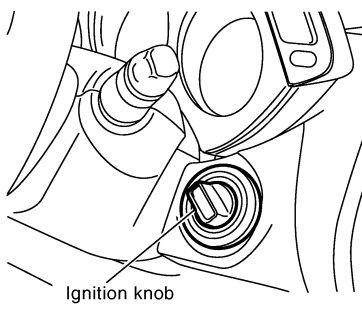

Ignition knob

In the above example,

- Checking VDC OFF switch leads to judge whether or not VDC is equipped.
- Checking the ignition knob leads to judge whether or not Intelligent Key system is equipped.

[For the above case, CAN system type is "6".]

JSMIA0017GB

CAN System Type Specification Chart (Style B)

NOTE:

[CAN FUNDAMENTAL]

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

Interview Sheet (Example)

CAN Communication System Diagnosis Interview Sheet	
Date received: 3, Feb. 2006	
Type: DBA-KG11	VIN No.: KG11-005040
Model: BDRARGZ397EDA-E-J-	
First registration: 10, Jan. 2001	Mileage: 62,140
CAN system type: Type 19	
Symptom (Results from interview with customer)	
<ul style="list-style-type: none">•Headlamps suddenly turn ON while driving the vehicle.•The engine does not restart after stopping the vehicle and turning the ignition switch OFF.•The cooling fan continues rotating while turning the ignition switch ON.	
Condition at inspection	
Error Symptom: Present / Past	
<p>The engine does not start.</p> <p>While turning the ignition switch ON,</p> <ul style="list-style-type: none">• The headlamps (Lo) turn ON, and the cooling fan continues rotating.• The interior lamp does not turn ON.	

JSMIA0019GB

DETECT THE ROOT CAUSE

CAN diagnosis function of CONSULT-III detects the root cause.

HOW TO USE THIS SECTION

< HOW TO USE THIS MANUAL >

[CAN]

HOW TO USE THIS MANUAL

HOW TO USE THIS SECTION

Caution

INFOID:000000006220525

- This section describes information peculiar to a vehicle and inspection procedures.
- For trouble diagnosis procedure, refer to [LAN-18, "Trouble Diagnosis Procedure"](#).

Abbreviation List

INFOID:000000006220526

Unit name abbreviations in CONSULT-III CAN diagnosis and in this section are as per the following list.

Abbreviation	Unit name
4WD	Transfer control unit
A-BAG	Air bag diagnosis sensor unit
ABS	ABS actuator and electric unit (control unit)
ADP	Driver seat control unit
AFS	AFS control unit
APA	Accelerator pedal actuator
AV	AV control unit
BCM	BCM
CGW	CAN gateway
DLC	Data link connector
E-SUS	Air levelizer control module
ECM	ECM
HVAC	A/C auto amp.
ICC	ADAS control unit
IPDM-E	IPDM E/R
LANE	Lane camera unit
LASER	ICC sensor
M&A	Combination meter
PSB	Pre-crash seat belt control unit (driver side)
PWBD	Automatic back door control module
RDR-L	Side radar LH
RDR-R	Side radar RH
STRG	Steering angle sensor
TCM	TCM
TPMS	Low tire pressure warning control unit

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000006238426

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIR BAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precautions for Trouble Diagnosis

INFOID:000000006220528

CAUTION:

- Never apply 7.0 V or more to the measurement terminal.
- Use a tester with open terminal voltage of 7.0 V or less.
- Turn the ignition switch OFF and disconnect the battery cable from the negative terminal when checking the harness.


Precautions for Harness Repair

INFOID:000000006220529

- Solder the repaired area and wrap tape around the soldered area.

NOTE:

A fray of twisted lines must be within 110 mm (4.33 in).

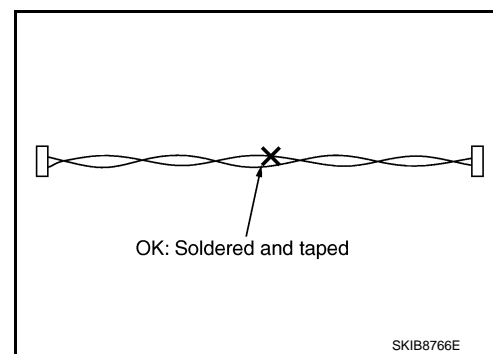

PRECAUTIONS


< PRECAUTION >

[CAN]

- Bypass connection is never allowed at the repaired area.

NOTE:

Bypass connection may cause CAN communication error. The spliced wire becomes separated and the characteristics of twisted line are lost.

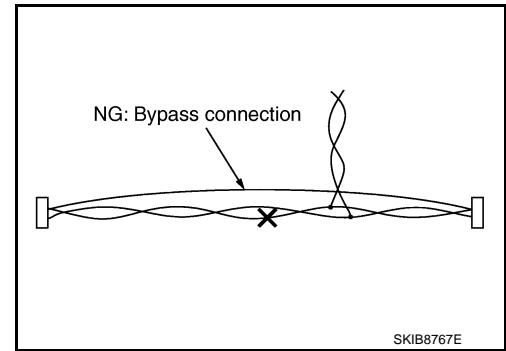

- Replace the applicable harness as an assembly if error is detected on the shield lines of CAN communication line.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P


LAN

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:000000006220530

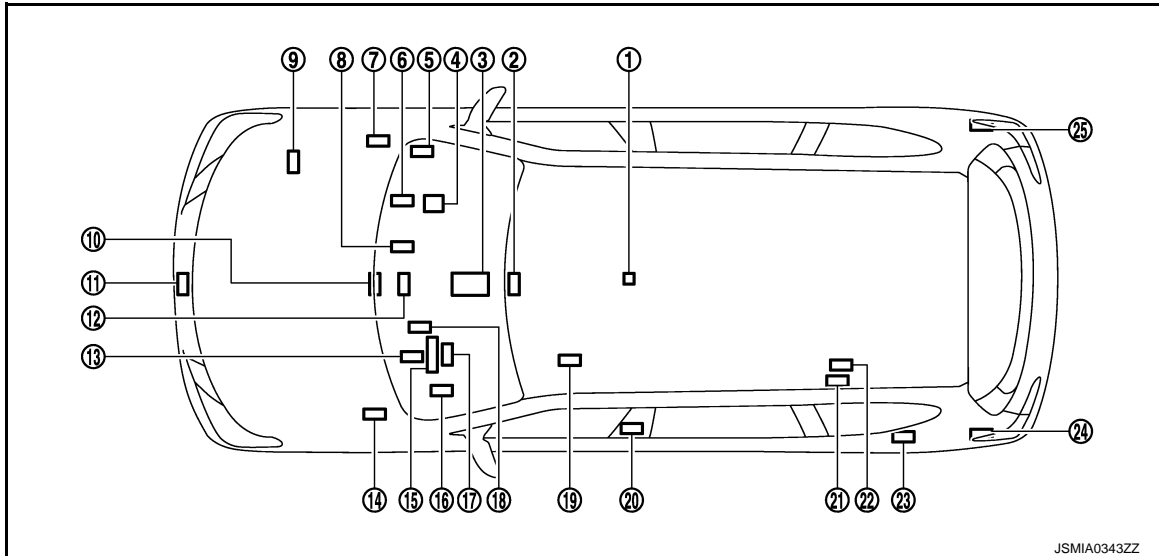

- | | | |
|----------------------------------|--|---|
| 1. Air bag diagnosis sensor unit | 2. Lane camera unit | 3. A/T assembly |
| 4. AFS control unit | 5. Transfer control unit | 6. Low tire pressure warning control unit |
| 7. IPDM E/R | 8. CAN gateway | 9. ECM |
| 10. A/C auto amp. | 11. ICC sensor | 12. AV control unit |
| 13. BCM | 14. ABS actuator and electric unit (control unit) | 15. Combination meter |
| 16. Data link connector | 17. Steering angle sensor | 18. Accelerator pedal actuator |
| 19. Driver seat control unit | 20. Pre-crash seat belt control unit (driver side) | 21. Air levelizer control module |
| 22. ADAS control unit | 23. Automatic back door control module | 24. Side radar LH |
| 25. Side radar RH | | |

SYSTEM

< SYSTEM DESCRIPTION >

[CAN]

SYSTEM

CAN COMMUNICATION SYSTEM

CAN COMMUNICATION SYSTEM : CAN System Specification Chart

INFOID:0000000006220532

Determine CAN system type from the following specification chart.

NOTE:

Refer to [LAN-18. "Trouble Diagnosis Procedure"](#) for how to use CAN system specification chart.

Body type	Wagon			
Axle	2WD		4WD	
Engine	VK56VD			
Transmission	A/T			
Brake control	VDC			
ICC system		×		×
CAN system type	1	2	3	4
CAN communication unit				
ECM	×	×	×	×
Transfer control unit			×	×
ABS actuator and electric unit (control unit)	×	×	×	×
TCM	×	×	×	×
Air bag diagnosis sensor unit	×	×	×	×
AFS control unit		×		×
AV control unit	×	×	×	×
BCM	×	×	×	×
CAN gateway		×		×
Data link connector	×	×	×	×
A/C auto amp.	×	×	×	×
Combination meter	×	×	×	×
Steering angle sensor	×	×	×	×
Low tire pressure warning control unit	×	×	×	×
IPDM E/R	×	×	×	×
Driver seat control unit	×	×	×	×
Pre-crash seat belt control unit (driver side)		×		×
Air levelizer control module	×	×	×	×
ADAS control unit		×		×
Automatic back door control module	×	×	×	×
ITS communication unit				
ADAS control unit		×		×
Side radar RH		×		×
Side radar LH		×		×
Lane camera unit		×		×
Accelerator pedal actuator		×		×
ICC sensor		×		×

×: Applicable

VEHICLE EQUIPMENT IDENTIFICATION INFORMATION


NOTE:

SYSTEM

< SYSTEM DESCRIPTION >

[CAN]

Check CAN system type from the vehicle shape and equipment.

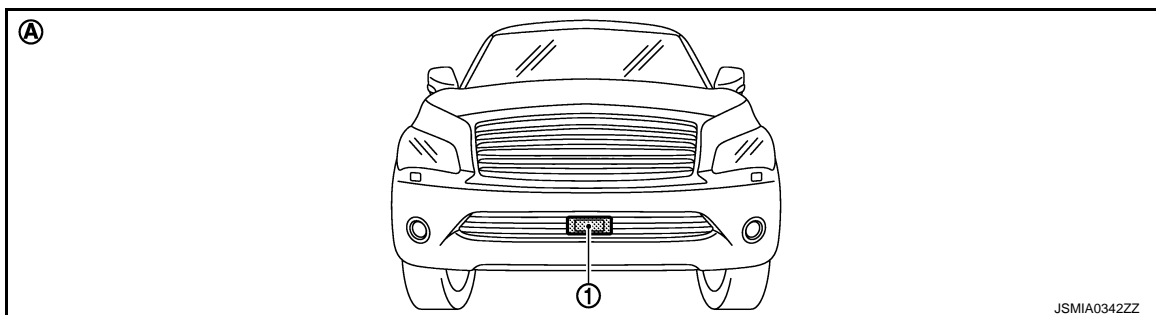

- 1. ICC sensor
- A. With ICC system

CAN COMMUNICATION SYSTEM : CAN Communication Signal Chart

INFOID:000000006220533

Refer to [LAN-17. "How to Use CAN Communication Signal Chart"](#) for how to use CAN communication signal chart.

T: Transmit R: Receive

Signal name	ECM	4WD	ABS	TCM	A-BAG	AFS	AV	BCM	CGW	HVAC	M&A	STRG	TPMS	IPDM-E	ADP	PSB	E-SUS	ICC	PWBD
A/C compressor request signal	T													R					
Accelerator pedal position signal	T	R	R	R														R	
ASCD OD cancel request signal	T			R															
ASCD operation signal	T			R															
ASCD status signal	T										R								
Closed throttle position signal	T			R														R	
Cooling fan speed request signal	T													R					
Engine and A/T integrated control signal	T			R															
	R			T															
Engine coolant temperature signal	T									R	R								
Engine restart request signal	T							R						R					
								T						R					
Engine speed signal	T	R	R	R		R					R						R	R	
Engine status signal	T						R	R			R								
Engine torque signal	T	R																	
Fuel consumption monitor signal	T						R				R								
ICC brake switch signal	T																	R	
ICC prohibition signal	T																	R	
ICC steering switch signal	T																	R	
Malfunctioning indicator lamp signal	T										R								
N idle instruction signal	T			R															
	R			T															

SYSTEM

< SYSTEM DESCRIPTION >

[CAN]

Signal name	ECM	4WD	ABS	TCM	A-BAG	AFS	AV	BCM	CGW	HVAC	M&A	STRG	TPMS	IPDM-E	ADP	PSB	E-SUS	ICC	PWBD
Power generation command value signal	T													R					
Snow mode signal	T																	R	
Stop lamp switch signal	T																	R	
				R				T											
		R	T															R	
Wide open throttle position signal	T			R															
ATP warning lamp signal		T									R								
4WD malfunction signal		T	R																
4WD mode indicator signal		T									R								
4WD warning lamp signal		T									R								
Current 4WD mode signal		T	R															R	
A/T shift schedule change demand signal			T	R															
ABS malfunction signal		R	T															R	
ABS operation signal		R	T	R												R		R	
ABS warning lamp signal			T								R							R	
Brake warning lamp signal			T								R								
Decel G sensor signal			T	R															
Pressure sensor signal			T	R															
Side G sensor signal			T	R														R	
Target throttle position signal	R		T																
TCS malfunction signal		R	T															R	
TCS operation signal		R	T															R	
VDC malfunction signal		R	T															R	
VDC OFF indicator lamp signal			T								R								
VDC OFF switch signal			T															R	
VDC operation signal		R	T															R	
VDC warning lamp signal			T								R								
Vehicle speed signal	R			R		R	R	R		R	T			R	R	R			R
	R	R	T					R			R		R		R		R	R	R
Yaw rate signal			T															R	
A/T CHECK indicator lamp signal				T		R					R								
Current gear position signal		R	R	T														R	
Input speed signal	R			T														R	
Manual mode shift refusal signal				T							R								
N range signal				T				R							R				
Next gear position signal		R		T															
Output shaft revolution signal	R	R		T														R	

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

SYSTEM

< SYSTEM DESCRIPTION >

[CAN]

Signal name	ECM	4WD	ABS	TCM	A-BAG	AFS	AV	BCM	CGW	HVAC	M&A	STRG	TPMS	IPDM-E	ADP	PSB	E-SUS	ICC	PWBD
P range signal				T				R							R				
R range signal				T				R							R				
Shift position signal		R	R	T		R		R			R							R	R
Tow mode indicator lamp signal				T							R								
Pre-roll over signal					T											R			
Pre-tensioner operation signal					T											R			
AFS OFF indicator lamp signal						T					R								
A/C switch operation signal							T			R									
Rear window defogger switch signal							T	R											
System selection signal							T											R	
System setting signal							T	R							R				
							R								T				
							R	T											
Automatic back door request signal								T											R
Back door lock status signal								T											R
Buzzer output signal								T			R								
											R							T	
Buzzer request signal								T			R								
								R					T						
Dimmer signal								T			R							R	
Door switch signal								T			R			R	R	R			
Door unlock signal								T							R				
Front fog light request signal								T						R					
Front wiper request signal								T						R				R	
Handle position signal								T							R				
Headlamp washer request signal								T						R					
High beam request signal								T			R			R					
Horn reminder signal								T						R					
Ignition switch ON signal								T						R	R	R			
								R						T					
Ignition switch signal								T							R				
Interlock/PNP switch signal								T						R					
								R						T					
Key ID signal								T							R				
Key switch signal								T							R				
Key warning lamp signal								T			R								
Low beam request signal								T						R					

SYSTEM

< SYSTEM DESCRIPTION >

[CAN]

Signal name	ECM	4WD	ABS	TCM	A-BAG	AFS	AV	BCM	CGW	HVAC	M&A	STRG	TPMS	IPDM-E	ADP	PSB	E-SUS	ICC	PWBD
Meter display signal								T			R								
Oil pressure switch signal								T			R							T	
Position light request signal								T			R			T					
Rear fog light status signal								T			R								
Rear window defogger control signal								T						R					
Sleep wake up signal							R	T	R		R			R	R	R			R
Starter control relay signal								T						R					
Starter relay status signal								T			R			R					
Starting mode signal								T							R				
Steering lock relay signal								T						R	R				
Theft warning horn request signal								R						T					
Turn indicator signal				R				T			R							R	
A/C display signal							R			T									
A/C ON signal	R									T									
Ambient temperature signal										T								R	
Blower fan ON signal	R									T									
Distance to empty signal							R				T								
Fuel level low warning signal							R				T								
Fuel level sensor signal	R										T								
Manual mode shift down signal				R							T								
Manual mode shift up signal				R							T								
Manual mode signal				R							T								
Non-manual mode signal				R							T								
Odometer signal								R			T								
Parking brake switch signal			R					R			T				R			R	
Sleep-ready signal								R											T
Tow mode switch signal				R							T			T					
Wake up signal								R											T
Steering angle sensor malfunction signal		R	R									T				R		R	
Steering angle sensor signal		R	R			R	R					T				R		R	
Steering angle speed signal			R									T				R		R	

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

SYSTEM

< SYSTEM DESCRIPTION >


[CAN]

Signal name	ECM	4WD	ABS	TCM	A-BAG	AFS	AV	BCM	CGW	HVAC	M&A	STRG	TPMS	IPDM-E	ADP	PSB	E-SUS	ICC	PWBD
Steering calibration signal			R									T				R			
Hazard request signal								R					T						
								R											T
Horn request signal								R					T						
Low tire pressure warning lamp signal											R		T						
Tire pressure data signal							R						T						
A/C compressor feedback signal	R									R				T					
Detention switch signal								R						T	R				
Engine restart control signal								R						T					
Front wiper stop position signal								R						T					
High beam status signal	R													T					
Hood switch signal								R						T					
Low beam status signal	R					R								T					
Push-button ignition switch status signal								R						T					
Starter control relay signal								R						T					
Steering lock unit status signal								R						T					
CK SUSP indicator lamp signal											R						T		
Brake fluid pressure control signal			R															T	
BSW warning lamp signal											R							T	
IBA OFF indicator lamp signal											R							T	
IBA operation signal																R		T	
ICC operation signal	R																	T	
ICC warning lamp signal											R							T	
Lane departure warning lamp signal											R							T	
LDP ON indicator lamp signal											R							T	
Target yaw moment signal			R															T	

CAN SYSTEM (WITH ICC)

< WIRING DIAGRAM >


[CAN]

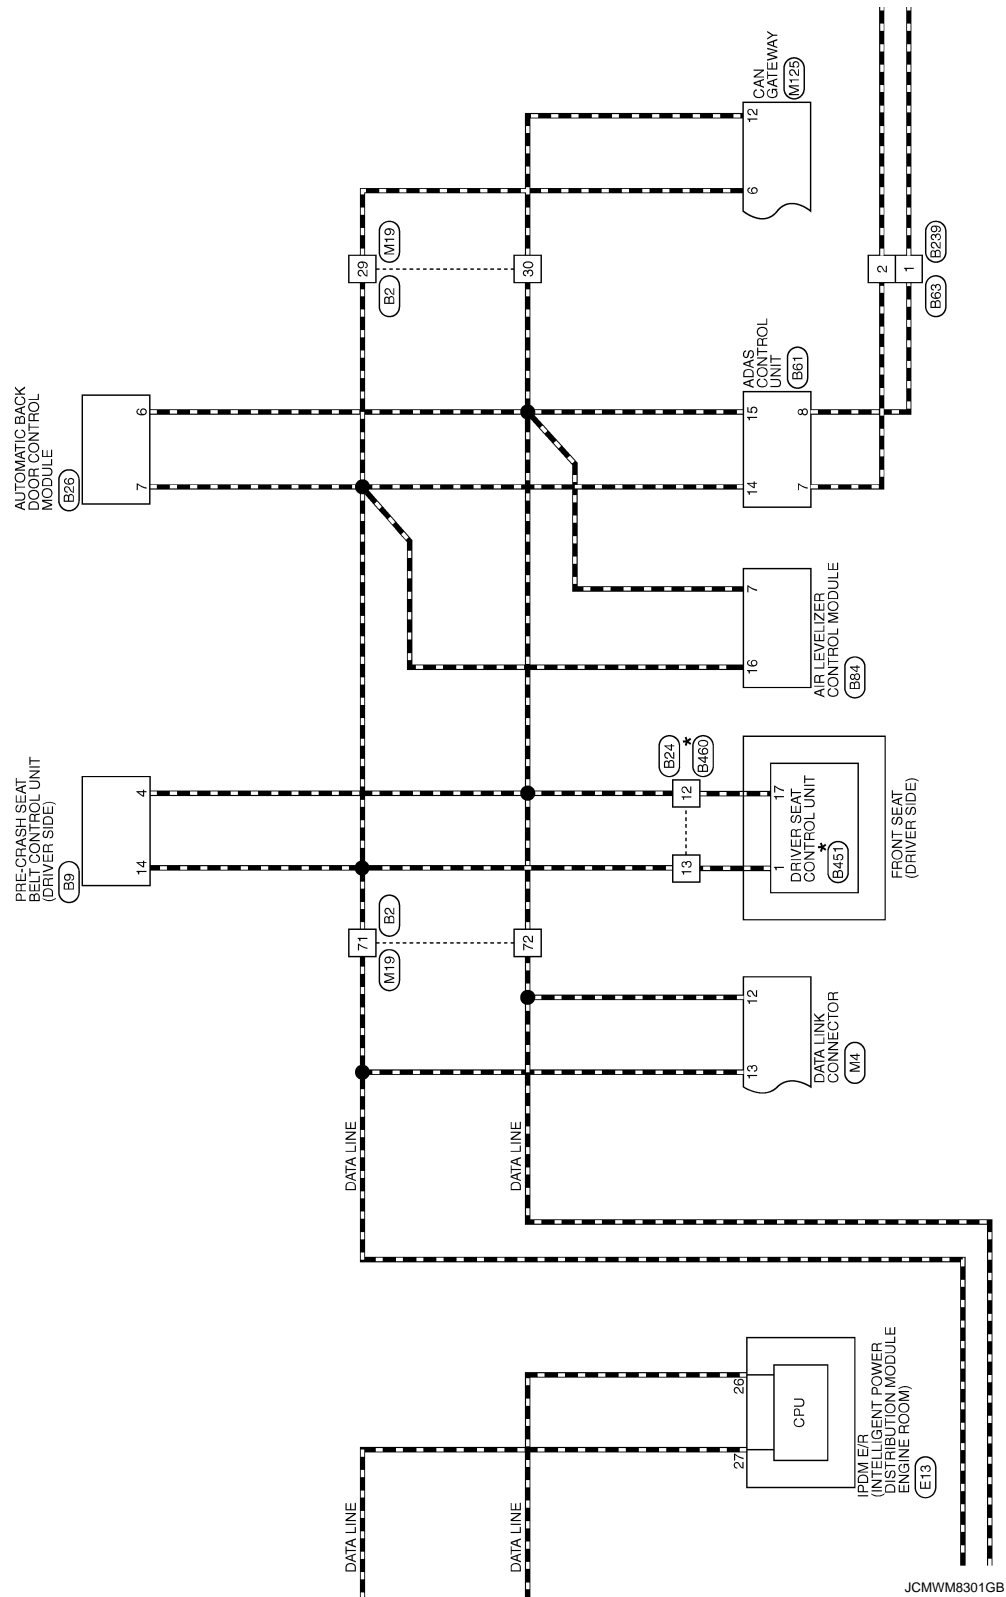

CAN SYSTEM (WITH ICC)

< WIRING DIAGRAM >

[CAN]

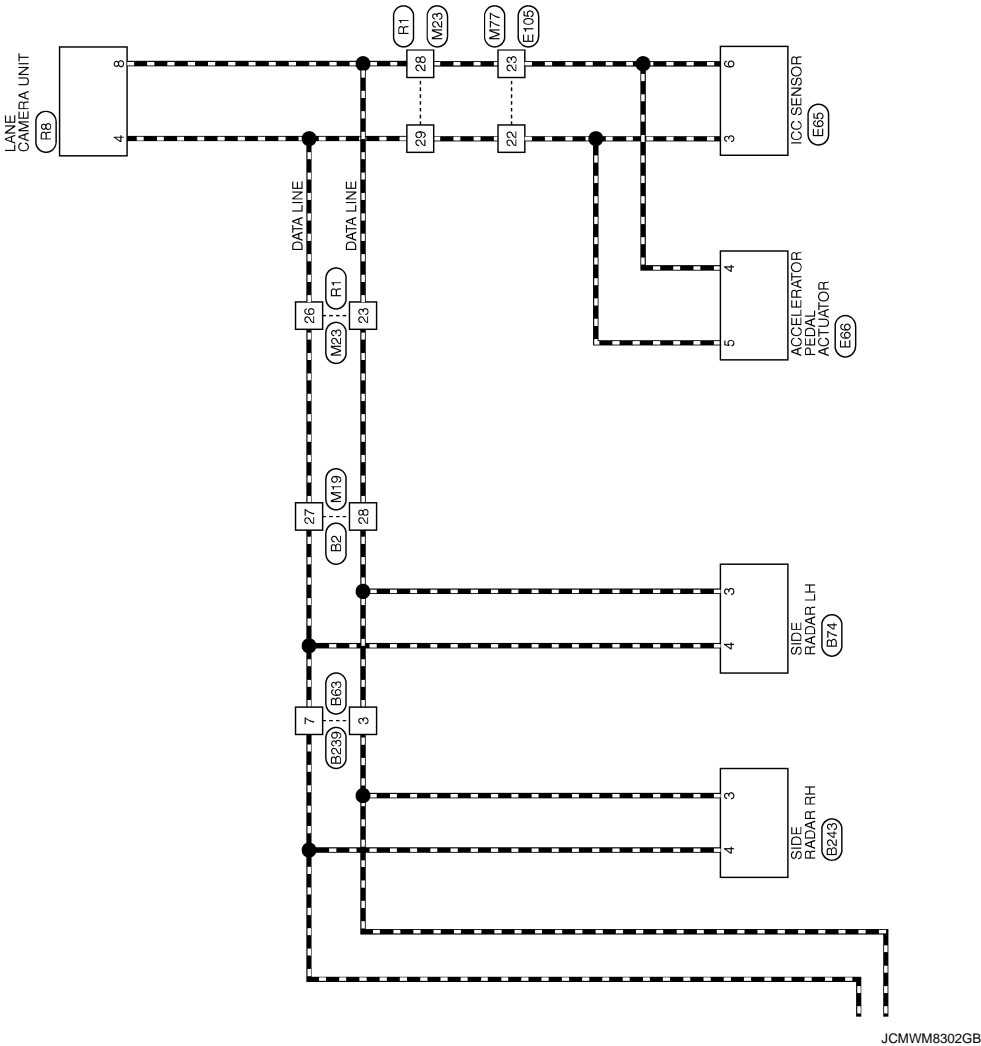

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN


CAN SYSTEM (WITH ICC)

< WIRING DIAGRAM >

[CAN]

CAN SYSTEM (WITH ICC)


Connector No.	B2
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
2	L	-
3	BR	-
5	R/W	-
6	L	-
7	V	-
9	G	-
11	W/B	-
12	BR	-
13	G/R	-
14	B/Y	-
15	W/R	-
16	GR/R	-
18	G/W	-
19	V	-
20	W/G	-
21	B/W	-
22	V	-
23	SHIELD	-
24	G	-
25	O	-
26	Y	-
27	L/O	-
28	Y/R	-
29	L	-
30	R	-
31	G/Y	-
32	B/SB	-
33	LG/R	-
34	BR/W	-
35	GR/R	-
36	SB	-
37	LG	-
38	L	-
39	P	-
40	W/G	-
42	G/R	-
43	V/W	-
44	LG/B	-


45	R/Y	-
46	B	-
49	GR	-
50	R/B	-
51	W/R	-
52	BR/Y	-
53	O/B	-
54	G/O	-
55	R/O	-
56	LG/R	-
57	GR/R	-
58	Y/G	-
59	V/W	-
60	R	-
63	Y	-
64	R	-
65	W	-
66	G	-
67	B	-
68	SHIELD	-
69	LG/B	-
70	P/L	-
71	L	-
72	R	-
77	Y/B	-
78	Y/L	-
79	Y	-
80	W/R	-
81	Y/L	-
83	BR	-
84	L/O	-
87	W/R	-
88	O	-
89	W/L	-
90	GR/L	-
91	W	-
92	G	-
94	W/R	-
96	L/W	-
97	R	-
98	V	-
99	L/W	-
100	P/B	-

Connector No.	B9
Connector Name	PRE-CRASH SEAT BELT CONTROL UNIT (DRIVER SIDE)
Connector Type	TH18FW-CS2



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	SIG BAT
2	G	OUT 1
4	P	CAN-L
6	LG/R	BUCKLE SW LH NO
8	G	LOCAL COMM 2
9	SHIELD	SHIELD GND
10	R	SENS POWER 1
12	B	OUT 2
14	L	CAN-H
16	W	LOCAL COMM 1
17	W	SENS GND 1
18	B	SIG GND
19	W	MOTOR BAT
20	B	MOTOR GND


Connector No.	B24
Connector Name	WIRE TO WIRE
Connector Type	NS18FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	W/R	-
2	Y/G	-
3	P/L	-
4	GR/R	-
5	LG/B	-
7	B	-
8	G/O	-
9	L	-

10	R/B	-
11	LG/R	-
12	P	-
13	L	-
14	V/W	-
15	BR	-

Connector No.	B26
Connector Name	AUTOMATIC BACK DOOR CONTROL MODULE
Connector Type	TH20FW-TB8



Terminal No.	Color of Wire	Signal Name [Specification]
1	L	BUZZER
2	Y/B	ABD SW
4	GR	ABD CLOSE SW
6	P	CAN-L
7	L	CAN-H
8	L/W	HALF LATCH SW
9	GR/L	IGN
10	Y	BAT
11	R	CLOSURE MTR (CLOSE)
12	V	CLOSURE MTR (OPEN)
14	G/W	TOUCH SENS LH
15	L/R	TOUCH SENS GND
16	LG	TOUCH SENS RH
17	O	MAIN SW
19	L/Y	CLOSE SW
20	G/Y	OPEN SW
22	B	GND
23	B	GND
28	R/W	BAT
34	B	GND

JCMWM8303GB

CAN SYSTEM (WITH ICC)

< WIRING DIAGRAM >

[CAN]

CAN SYSTEM (WITH ICC)

Connector No.	B61
Connector Name	ADAS CONTROL UNIT
Connector Type	TH16FW-NH

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----



Terminal No.	Color of Wire	Signal Name [Specification]
1	V/W	WARNING SYSTEMS SW
3	R/Y	IEA OFF SW
4	L/G/B	WARNING SYSTEMS ON IND
5	B	BRAKE HOLD RLY DRIVE SIGNAL
6	B	GND
7	L	ITS COMM-H
8	Y	ITS COMM-L
12	G/R	WARNING BUZZER
14	L	CAN-H
15	P	CAN-L
16	W/G	IGNITION

Connector No.	B63
Connector Name	WIRE TO WIRE
Connector Type	TH16FW-NH

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-
2	L	-
3	Y/R	-
4	SB	-
5	L/G	-
6	Y	-
7	L/O	-
8	G	-
13	R/L	-
14	G	-
15	SHIELD	-

16	W	-
----	---	---

Connector No.	B74
Connector Name	SIDE RADAR LH
Connector Type	AAQ06FB-WP-5P

1	2	3	4	5	6
---	---	---	---	---	---



Terminal No.	Color of Wire	Signal Name [Specification]
2	B	GND
3	Y	ITS COMM-L
4	L	ITS COMM-H
5	W/G	IGNITION
6	BR	BSW INDICATOR

Connector No.	B84
Connector Name	AIR LEVELIZER CONTROL MODULE
Connector Type	TH16FW-NH

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----



Terminal No.	Color of Wire	Signal Name [Specification]
2	B	GND
3	V	AIR COMPRESSOR RELAY
4	L/W	VEHICLE HEIGHT SENSOR GND
5	W	VEHICLE HEIGHT SENSOR SIGNAL
7	P	CAN-L
9	P/L	IGN
11	V/W	EXHAUST SOLENOID
13	R	VEHICLE HEIGHT SENSOR POWER SUPPLY
16	L	CAN-H

Connector No.	B239
Connector Name	WIRE TO WIRE
Connector Type	TH16MW-NH

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-
2	L	-
3	Y	-
4	SB	-
5	L/G	-
8	Y	-
7	L	-
8	G	-
13	R/L	-
14	G	-
15	SHIELD	-
16	W	-

Connector No.	B243
Connector Name	SIDE RADAR RH
Connector Type	AAQ06FB-WP

1	2	3	4	5	6
---	---	---	---	---	---



Terminal No.	Color of Wire	Signal Name [Specification]
1	B/Y	RIGHT/LEFT SWITCHING SIGNAL
2	B	GND
3	Y	ITS COMM-L
4	L	ITS COMM-H
5	W/G	IGNITION
6	L/R	BSW INDICATOR

Connector No.	B451
Connector Name	DRIVER SEAT CONTROL UNIT
Connector Type	TH32FW-NH

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----



Terminal No.	Color of Wire	Signal Name [Specification]
1	R/Y	CAN-H
2	R	UART (TX/RX)
4	R/L	PULSE (RECLINER)
5	R/B	TELESCOPIC SENSOR
6	R/W	ADDRESS 2
7	R/G	IND-2
8	SB	SLIDE SW (BACKWARD)
9	L	RECLINER SW (BACKWARD)
10	L/B	FRONT LIFTER SW (DOWNWARD)
11	L/W	REAR LIFTER SW (DOWNWARD)
12	L/R	SENSOR POWER SUPPLY
17	V	CAN-L
18	B/W	PULSE (SLIDE)
19	B/R	PULSE (FRONT LIFTER)
20	B/L	PULSE (REAR LIFTER)
21	W/B	TILT SENSOR
22	W/L	ADDRESS 1
23	W/R	IND-1
24	V/W	SLIDE SW (FORWARD)
25	Y/B	RECLINER SW (FORWARD)
26	Y/R	FRONT LIFTER SW (UPWARD)
27	Y/L	REAR LIFTER SW (UPWARD)
28	G	SET SW

CAN SYSTEM (WITH ICC)

[CAN]

< WIRING DIAGRAM >

CAN SYSTEM (WITH ICC)

Connector No.	E460
Connector Name	WIRE TO WIRE
Connector Type	NS16MW-CS



1	2	3	4	5	6	7		
8	9	10	11	12	13	14	15	16

Terminal No.	Color of Wire	Signal Name [Specification]
1	R	-
2	R/G	-
3	R/W	-
4	W/R	-
5	W/L	-
7	L/G	-
8	W/B	-
9	-	-
10	R/B	-
11	R	-
12	V	-
13	R/Y	-
14	G	-
15	-	-

Connector No.	E7
Connector Name	WIRE TO WIRE
Connector Type	TH2MW-NH



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32

Terminal No.	Color of Wire	Signal Name [Specification]
1	W	-
2	G	-
3	L/O	-
4	L/G	-
5	W/L	-
6	G/O	-
7	L/R	-
8	L/G/R	-

14	R	-
16	SB	-
17	R/W	-
18	Y/G	-
19	BR/Y	-
20	P/B	-
21	R/B	-
22	Y	-
23	BR	-
24	P/L	-
29	P	-
30	BR	-
31	L	-
32	P	-

Connector No.	E13
Connector Name	ENGINE R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH12FW-NH



28	27	26	25	24	23
34	33	32	31	30	29

Terminal No.	Color of Wire	Signal Name [Specification]
23	GR/R	-
24	W/G	-
25	L/Y	-
26	P	-
27	L	-
30	R/W	-
31	B	-
32	L/G	-
33	R	-
34	P/B	-

Connector No.	E36
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	SA242FB-SJZ4



46	45	44	43	42	41	40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	---	---	---	---	---	---	---	---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	G	BAT
2	B	GND
3	B	GND
4	W	MOTOR SUPPLY
9	R/B	WAVE RATE / SIDE / DIESEL G SENSOR COMMUNICATION-H
10	P/B	WAVE RATE / SIDE / DIESEL G SENSOR COMMUNICATION-L
13	GR	BRAKE FLUID LEVEL SW
17	L/R	STP2
18	W/B	IGN
19	O	DS PR
20	SB	DP FL
21	R/Y	DS RR
22	V	DP RL
27	P	CAN-L
33	L/G	DP FR
34	G	DS FL
35	BR	DP RR
36	P	DS RL
37	R	STP
39	L/W	VDC OFF SW
41	L	CAN-H
46	W	STOP LAMP SW ON

Connector No.	E59
Connector Name	TRANSFER CONTROL UNIT
Connector Type	TH40FW-NH



50	49	48	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	---	---	---	---	---	---	---	---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	W	TRANSFER CONTROL UNIT
2	W	TRANSFER CONTROL UNIT
3	W	TRANSFER CONTROL UNIT
4	W	TRANSFER CONTROL UNIT
5	W	TRANSFER CONTROL UNIT
6	W	TRANSFER CONTROL UNIT
7	W	TRANSFER CONTROL UNIT
8	W	TRANSFER CONTROL UNIT
9	W	TRANSFER CONTROL UNIT
10	W	TRANSFER CONTROL UNIT
11	W	TRANSFER CONTROL UNIT
12	W	TRANSFER CONTROL UNIT
13	W	TRANSFER CONTROL UNIT
14	W	TRANSFER CONTROL UNIT
15	W	TRANSFER CONTROL UNIT
16	W	TRANSFER CONTROL UNIT
17	W	TRANSFER CONTROL UNIT
18	W	TRANSFER CONTROL UNIT
19	W	TRANSFER CONTROL UNIT
20	W	TRANSFER CONTROL UNIT
21	W	TRANSFER CONTROL UNIT
22	W	TRANSFER CONTROL UNIT
23	W	TRANSFER CONTROL UNIT
24	W	TRANSFER CONTROL UNIT
25	W	TRANSFER CONTROL UNIT
26	W	TRANSFER CONTROL UNIT
27	W	TRANSFER CONTROL UNIT
28	W	TRANSFER CONTROL UNIT
29	W	TRANSFER CONTROL UNIT
30	W	TRANSFER CONTROL UNIT
31	W	TRANSFER CONTROL UNIT
32	W	TRANSFER CONTROL UNIT
33	W	TRANSFER CONTROL UNIT
34	W	TRANSFER CONTROL UNIT
35	W	TRANSFER CONTROL UNIT
36	W	TRANSFER CONTROL UNIT
37	W	TRANSFER CONTROL UNIT
38	W	TRANSFER CONTROL UNIT
39	W	TRANSFER CONTROL UNIT
40	W	TRANSFER CONTROL UNIT
41	W	TRANSFER CONTROL UNIT
42	W	TRANSFER CONTROL UNIT
43	W	TRANSFER CONTROL UNIT
44	W	TRANSFER CONTROL UNIT
45	W	TRANSFER CONTROL UNIT
46	W	TRANSFER CONTROL UNIT
47	W	TRANSFER CONTROL UNIT
48	W	TRANSFER CONTROL UNIT
49	W	TRANSFER CONTROL UNIT
50	W	TRANSFER CONTROL UNIT

6	BR	H-LO POSITION SEN 1
7	Y	TRANSFER FLUID TEMP SEN SUPPLY
9	G	INTERNAL SPEED SEN GND
10	Y/G	INTERNAL SPEED SEN IMP
11	V	4LO SW
12	L	CAN-H
13	P	CAN-L
14	W/R	AUTO SW
15	P/B	ROTARY POSITION SEN PWM
16	L/G	ROTARY POSITION SEN GND
17	W/L	LOCK POSITION SEN SUPPLY
18	BR/Y	ROTARY POSITION SEN GND
20	GR	TRANSFER C/U SUPPLY
25	P/L	H-LO POSITION SEN 3
28	W	MOTOR TEMP SEN SUPPLY
29	L/G/R	H-LO POSITION SEN 2
30	R/B	LOCK POSITION SEN GND
31	L/O	INT SPEED SEN DIR
32	BR/R	IGN
35	R	LOCK SW
36	L/R	TRANSFER FLUID TEMP SEN GND
38	G/O	LOCK POSITION SEN SIGNAL
39	R/W	INTERNAL SPEED SEN SUPPLY

Connector No.	E65
Connector Name	ICC SENSOR
Connector Type	RS08FB-PR



1	2	3	4	5	6
---	---	---	---	---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	W/G	IGNITION
3	L	ITS COMM-H
4	B	GND
6	Y	ITS COMM-L

JCMWM8305GB


CAN SYSTEM (WITH ICC)

< WIRING DIAGRAM >

[CAN]


CAN SYSTEM (WITH ICC)

Connector No.	E66
Connector Name	ACCELERATOR PEDAL ACTUATOR
Connector Type	RH06FLGY



Terminal No.	Color of Wire	Signal Name [Specification]
1	B/O	BATTERY
2	B	GND
3	W/G	IGNITION
4	Y	ITS COMM-L
5	L	ITS COMM-H


Connector No.	E60
Connector Name	ECM
Connector Type	MAB55FB-MEB10-LH



Terminal No.	Color of Wire	Signal Name [Specification]
111	R	FUEL INJECTOR DRIVER POWER SUPPLY
112	SB	FUEL INJECTOR DRIVER POWER SUPPLY
113	G	FUEL RETURN VALVE
114	B	ECM GROUND
115	B	ECM GROUND
120	Y	EVAP CANISTER VENT CONTROL VALVE
122	BR/W	VEEL ACTUATOR MOTOR RELAY (RIGHT SIGNAL LINE CONTROL MODULE)
123	V/R	THROTTLE CONTROL MOTOR RELAY
125	GR	FUEL PUMP CONTROL MODULE (FPCM)
126	O	ACCELERATOR PEDAL POSITION SENSOR 2
128	Y	ICC STEERING SWITCH
129	P/L	SENSOR GROUND (APP SENSOR 2)
130	R	SENSOR GROUND
131	L/W	SENSOR POWER SUPPLY
133	SB	SENSOR POWER SUPPLY
134	V/W	IF
136	W/R	ACCELERATOR PEDAL POSITION SENSOR 1

137	W/G	SENSOR POWER SUPPLY (APP SENSOR 1)
138	V	BATTERY CURRENT SENSOR
139	G	BATTERY TEMPERATURE SENSOR
140	R/Y	SENSOR GROUND
141	SB	IGNITION SWITCH
142	R/W	FUEL PUMP CONTROL MODULE (FPCM) CHECK
143	L/Y	EVAP CONTROL SYSTEM PRESSURE SENSOR
144	O/B	REFRIGERANT PRESSURE SENSOR
146	L	CAN COMMUNICATION LINE
147	G/Y	ICC BRAKE SWITCH
150	R	SENSOR GROUND
151	P	CAN COMMUNICATION LINE
156	L	POWER SUPPLY FOR ECM (BACK-UP)
158	W/B	STOP LAMP SWITCH
161	R/W	ECM COMMUNICATION LINE
163	L/G	ECM RELAY (SELF SHUT-OFF)
165	GR/R	ECM COMMUNICATION LINE
166	W	ENGINE SPEED SIGNAL OUTPUT
169	G/B	ENGINE SPEED SIGNAL OUTPUT
171	W	POWER SUPPLY FOR ECM
172	W	POWER SUPPLY FOR ECM
173	O	THROTTLE CONTROL MOTOR POWER SUPPLY
174	B	ECM GROUND
175	B	ECM GROUND

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH80MMH-CS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
1	L	
2	L/W	
3	R/B	
4	L	
5	Y	
7	W/G	
8	P/B	
9	W/B	
10	L	
11	L	
12	P	
13	P/B	

14	BR	
15	L/B	
16	SB	
17	P	
18	BR	
19	Y/G	
20	BR/Y	
21	Y/V	
22	L	
23	Y	
24	L/W	
26	L	
27	L/W	
28	O	
29	R/W	
30	L/B	
31	Y	
32	GR/R	
34	Y	
35	B	
36	B/R	
37	G/Y	
38	G	
40	SB	
41	W/R	
42	R	
43	V	
51	L/O	
52	BR/W	
53	BR/Y	
54	GR/L	
60	W	
61	B	
62	R	
63	G	
64	SHIELD	
91	BR	
92	L/W	
94	Y/B	
95	G/R	
97	R	
98	G/B	
100	W/R	

JCMWM8306GB

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CAN SYSTEM (WITH ICC)

[CAN]

< WIRING DIAGRAM >

CAN SYSTEM (WITH ICC)


Connector No.	E107
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
4	V/W	-
5	G/R	-
6	P	-
9	GR/L	-
10	Y/R	-
11	L/R	-
12	W/G	-
13	BR/Y	-
14	LG	-
15	BR/W	-
17	W/B	-
18	GR/R	-
20	W/R	-
21	B	-
22	R/L	-
23	G/R	-
24	R/W	-
25	W/L	-
26	R	-
27	L	-
28	G/B	-
32	G/Y	-
38	G/Y	-
39	O	-
40	W	-
41	R	-
42	B	-
43	Y	-
44	G	-
45	SHIELD	-
46	G/O	-
47	G/R	-
48	SHIELD	-
49	W	-
50	SHIELD	-
51	Y/R	-
52	GR	-

53	LG/B	-
54	LG/R	-
55	R/G	-
56	B/R	-
57	SB	-
60	G	-
61	B	-
62	W	-
63	R	-
64	SHIELD	-
65	L/Y	-
66	V	-
67	B/W	-
91	G/R	-
95	SB	-
96	G/R	-
97	GR/L	-
98	G/W	-
99	R/Y	-
100	L	-

Connector No.	F1
Connector Name	WIRE TO WIRE
Connector Type	TH432FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	-
2	G	-
3	L/O	-
4	LG	-
5	W/L	-
6	G/O	-
7	L/R	-
8	LG/R	-
14	R	-
16	SB	-
17	R/W	-
18	Y/G	-
19	BR/Y	-
20	P/B	-
21	R/B	-
22	Y	-


23	BR/W	-
24	P/L	-
29	P	-
30	BR	-
31	L	-
32	P	-

Connector No.	F51
Connector Name	A/T ASSEMBLY
Connector Type	RK10FG



Terminal No.	Color of Wire	Signal Name [Specification]
1	V	-
2	P	-
3	L	-
4	SB	-
5	B	-
6	V	-
7	R	-
8	P	-
9	BR	-
10	B	-


Connector No.	F301
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Type	SP10FG



Terminal No.	Color of Wire	Signal Name [Specification]
1	-	VIGN
2	-	BATT
3	-	CAN-H
4	-	K LINE

5	-	GND
6	-	VIGN
7	-	REV LAMP RLY
8	-	CAN-L
9	-	START RLY
10	-	GND

Connector No.	M4
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW



Terminal No.	Color of Wire	Signal Name [Specification]
3	LG	-
4	B	-
5	B	-
6	L	-
7	SS	-
8	GR	-
11	SS	-
12	R	-
13	L	-
14	P	-
16	Y	-

CAN SYSTEM (WITH ICC)

< WIRING DIAGRAM >

[CAN]

CAN SYSTEM (WITH ICC)

Connector No.	M19
Connector Name	WIRE TO WIRE
Connector Type	TH08FW-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
2	L	-
3	BR	-
5	R/W	-
6	L	-
7	V	-
9	G	-
11	W/B	-
12	BR	-
13	G/R	-
14	B/Y	-
15	W/R	-
16	GR/R	-
18	G/W	-
19	V	-
20	W/G	-
21	B/W	-
22	V	-
23	SHIELD	-
24	G	-
25	O	-
26	Y	-
27	L/O	-
28	Y/R	-
29	L	-
30	R	-
31	G/Y	- [With ICC]
32	B/SB	- [Without ICC]
33	LG/R	-
34	BR/W	-
35	GR/R	-
36	SB	-
37	LG	-
38	L	-
39	P	-
40	W/G	-
42	G/R	-
43	V/W	-

44	LG/B	-
45	R/Y	-
46	B	-
48	GR	-
50	R/B	-
51	W/R	-
52	BR/Y	-
53	O/B	-
54	G/O	-
55	R/B	-
56	LG/R	-
57	GR/R	-
58	Y/G	-
59	V/W	-
60	R	-
63	Y	-
64	R	-
65	W	-
66	G	-
67	B	-
68	SHIELD	-
69	LG/B	-
70	P/L	-
71	L	-
72	R	-
77	Y/B	-
78	Y/L	-
79	Y	-
80	W/R	-
81	Y/L	-
83	BR/W	-
84	L/O	-
86	O	-
87	W/R	-
88	O	-
89	W/L	-
90	GR/L	-
91	W	-
92	G	-
94	W/R	-
96	L/W	-
97	R	-
98	V	-
99	L/W	-
100	P/B	-


Connector No.	M23
Connector Name	WIRE TO WIRE
Connector Type	TH02MW-NH



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32

Terminal No.	Color of Wire	Signal Name [Specification]
1	W	-
4	Y	-
7	B	-
8	Y/L	-
10	B	-
11	R	-
12	Y	-
13	SHIELD	-
14	Y	-
15	W/R	-
16	L/O	-
17	Y	-
20	W	-
22	SB	-
23	Y/R	-
24	SHIELD	-
25	Y/G	-
26	L/O	-
27	W/G	-
28	Y	-
29	L	-
30	B/SB	-
31	BR	-
32	GR/L	-

Connector No.	M30
Connector Name	STEERING ANGLE SENSOR
Connector Type	TH08FW-NH



JCMWM8308GB

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CAN SYSTEM (WITH ICC)

< WIRING DIAGRAM >

[CAN]

CAN SYSTEM (WITH ICC)

Connector No.	M34
Connector Name	COMBINATION METER
Connector Type	TH40FW-NH



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	BATTERY POWER SUPPLY
2	GR	IGNITION SIGNAL
3	B	GROUND
4	B	GROUND
5	B	ILL GND
7	R	TOW MODE SIGNAL
8	P/L	TRIP RESET SWITCH SIGNAL
11	G	ENTER SWITCH SIGNAL
12	O	SELECT SWITCH SIGNAL
13	W/R	ILLUMINATION CONTROL SWITCH SIGNAL (+)
14	R	ILLUMINATION CONTROL SWITCH SIGNAL (-)
15	R/W	AIR BAG SIGNAL
18	W/R	AMBIENT SENSOR SIGNAL
19	V/W	A/C AUTO AMP CONNECTION RECOGNITION SIGNAL
20	B	AMBIENT SENSOR GROUND
21	L	CAN-H
22	P	CAN-L
23	B	GROUND
24	V	FUEL LEVEL SENSOR GROUND
25	O/L	ALTERNATOR SIGNAL
26	W	PARKING BRAKE SWITCH SIGNAL
28	GR/R	SECURITY SIGNAL
29	BR	WASHER LEVEL SWITCH SIGNAL
30	SB	VEHICLE SPEED SIGNAL (2-PULSE)
31	BR/W	VEHICLE SPEED SIGNAL (8-PULSE)
33	W	SNOW MODE SIGNAL
34	BR/Y	FUEL LEVEL SENSOR SIGNAL
35	O/B	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
36	G/Y	PASSENGER SEAT BELT WARNING SIGNAL
37	R/Y	NON-MANUAL MODE SIGNAL
38	L/W	MANUAL MODE SHIFT DOWN SIGNAL
39	Y/B	MANUAL MODE SHIFT UP SIGNAL
40	G/W	MANUAL MODE SIGNAL

Connector No.	M50
Connector Name	A/C AUTO AMP
Connector Type	SAB40FW



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name [Specification]
1	L	CAN-H
2	B	GROUND
3	Y/G	BATTERY POWER SUPPLY
4	W	ACC POWER SUPPLY
5	W	IGNITION CONTROL SIGNAL
6	V/W	A/C AUTO AMP CONNECTION RECOGNITION SIGNAL
7	W/R	AMBIENT SENSOR SIGNAL
8	GR/L	RR IN-VEHICLE SENSOR SIGNAL
9	BR	SUNLOAD SENSOR (DR) SIGNAL
10	V/W	EXH GAS / OUTSIDE DOOR DETECTING SENSOR SIGNAL
11	W	COMM (A/C AUTO AMP → RR A/C CONT)
14	O/L	RR BLOWER MOTOR CONTROL SIGNAL
16	R/G	EACH DOOR MOTOR LIN SIGNAL
17	L/Y	EACH DOOR MOTOR POWER SUPPLY
21	P	CAN-L
22	B	GROUND
23	GR/L	IGNITION POWER SUPPLY
25	R	-
26	B	SENSOR GROUND
27	GR	FR IN-VEHICLE SENSOR SIGNAL
28	R	INTAKE SENSOR SIGNAL
29	O	SUNLOAD SENSOR (PASS) SIGNAL
31	O/L	COMM (RR A/C CONT → A/C AUTO AMP)
34	L/O	RR BLOWER MOTOR CONTROL SIGNAL
37	B	GROUND
38	G/W	RR A/C RELAY CONTROL SIGNAL

Connector No.	M59
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT
Connector Type	NH2BFY-EX



8	9	7	6	2	5	4	3
19				23		24	22
18				60	59	25	57
				58		51	

Terminal No.	Color of Wire	Signal Name [Specification]
1	R/L	IGN
2	B	GND
3	Y	DR1 (+)
4	Y/R	DR1 (-) DR2 (-)
5	Y/G	DR2 (+)
6	Y/L	ASI (+)
7	Y/B	ASI (-)
8	B/Y	AS2 (+)
9	Y	AS2 (-)
18	O	ECZS (+)
19	W	ECZS (-)
22	SHIELD	GND
23	R/W	AIRBAG W/L
24	G/Y	SEATBELT W/L
25	R	CUTOFF TELLTALE
59	L	CAN-H
60	P	CAN-L

Connector No.	M68
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name [Specification]
2	BR/Y	COMBI SW INPUT 5
3	GR	COMBI SW INPUT 4
4	L	COMBI SW INPUT 3
5	G	COMBI SW INPUT 2
6	V	COMBI SW INPUT 1

8	V	POWER WINDOW SW COMM
9	R	STOP LAMP SW 1
11	R	LAR SENSOR SERIAL LINK
14	P/B	OPTICAL SENSOR
16	L/O	DIMMER SIGNAL
17	Y/G	SENSOR PWR SPLY
18	B/Y	RECEIVER SENSOR GND
19	BR	RECEIVER PWR SPLY
20	G/R	KYLS ENT RECEIVER COMM
21	P	NATS ANT AMP
22	W/B	KYLS ENT RECEIVER RSSI
23	GR/R	SECURITY IND CONT
24	SB	DONGLE LINK
25	LG/R	NATS ANT AMP
29	W	HAZARD SW
30	W/L	BK DOOR OPNR SW
31	W/G	DR DOOR UNLOCK SENSOR
32	LG	COMBI SW OUTPUT 5
33	Y	COMBI SW OUTPUT 4
34	W	COMBI SW OUTPUT 3
35	R/W	COMBI SW OUTPUT 2
36	SB	COMBI SW OUTPUT 1
37	G/Y	SHIFT P
39	L	CAN-H
40	P	CAN-L


CAN SYSTEM (WITH ICC)

< WIRING DIAGRAM >

[CAN]

CAN SYSTEM (WITH ICC)


Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Type	TH80PW-CS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	-
2	L/W	-
3	R/B	-
4	L	-
5	Y	-
7	W/G	-
8	P/B	-
9	W/B	-
10	L	-
11	L	-
12	P	- [With ICC]
13	R	- [Without ICC]
14	BR	-
15	O/L	-
16	SB	-
17	P	-
18	BR	-
19	Y/G	-
20	BR/Y	-
21	Y	-
22	L	-
23	Y	-
24	L/W	-
26	L	-
27	L/W	-
28	O	-
29	R/W	-
30	O/L	-
31	Y	-
32	GR/R	-
34	Y	-
35	R	-
36	B/O	-
37	G/Y	-
38	G	-
40	SB	-
41	W/R	-

42	R	-
43	V	-
51	L/O	-
52	BR/W	-
53	BR/Y	-
54	GR/L	-
60	W	-
61	B	-
62	G	-
63	R	-
64	SHIELD	-
91	BR	-
92	L/W	-
94	Y/B	-
95	L/R	-
97	R	-
98	O/L	-
100	W/B	-

Connector No.	M82
Connector Name	WIRE TO WIRE
Connector Type	TH80PW-CS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
4	V/W	-
5	G/R	-
6	P	-
9	GR/L	-
10	Y/R	-
11	L/R	-
12	W/G	-
13	BR/Y	-
14	LG	-
15	BR/W	-
17	W/B	-
18	GR/R	-
20	W/R	-
21	B	-
22	R/L	-
23	G/R	-
24	R/W	-

25	W/L	-
26	R	-
27	L	-
28	B/SB	-
37	G/Y	-
38	O	-
40	W	-
41	R	-
42	B	-
43	Y	-
44	G	-
45	SHIELD	-
46	G/O	-
47	G/R	-
48	SHIELD	-
49	W	-
50	SHIELD	-
51	Y/R	-
52	GR	-
53	LG/B	-
54	LG/R	-
55	R/G	-
56	B/O	-
57	SB	-
60	G	-
61	B	-
62	W	-
63	R	-
64	SHIELD	-
65	L/Y	-
66	V	-
67	B/W	-
91	G/R	-
95	SB	-
96	G/R	-
97	GR/L	-
98	G/W	-
99	P	-
100	L	-

Connector No.	M86
Connector Name	LOW TIRE PRESSURE WARNING CONTROL UNIT
Connector Type	TH42FW-NH



1	2	3	4	5	6	7	8	9	10	12	15
19	20	21	22	23	24	25	26	30	32		

Terminal No.	Color of Wire	Signal Name [Specification]
1	P	CAN-L
2	L	CAN-H
3	O/L	RR TIRE PRESSURE RECEIVER SIGNAL
4	L	RL TIRE PRESSURE RECEIVER SIGNAL
5	R/L	FR TIRE PRESSURE RECEIVER SIGNAL
6	W/G	FL TIRE PRESSURE RECEIVER SIGNAL
7	SB	RR TIRE PRESSURE RECEIVER POWER SUPPLY
8	GR	RL TIRE PRESSURE RECEIVER POWER SUPPLY
9	R/W	FR TIRE PRESSURE RECEIVER POWER SUPPLY
10	LG	FL TIRE PRESSURE RECEIVER POWER SUPPLY
15	GR	IGN
19	L/R	RR TIRE PRESSURE RECEIVER SIGNAL (SENSITIVITY)
20	P	RL TIRE PRESSURE RECEIVER SIGNAL (SENSITIVITY)
21	G/R	FR TIRE PRESSURE RECEIVER SIGNAL (SENSITIVITY)
22	BR/Y	FL TIRE PRESSURE RECEIVER SIGNAL (SENSITIVITY)
23	V/W	RR TIRE PRESSURE RECEIVER GND
24	R/B	RL TIRE PRESSURE RECEIVER GND
25	W/L	FR TIRE PRESSURE RECEIVER GND
26	BR/W	FL TIRE PRESSURE RECEIVER GND
32	B	GND

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

CAN SYSTEM (WITH ICC)

[CAN]

< WIRING DIAGRAM >

CAN SYSTEM (WITH ICC)

Connector No.	M119
Connector Name	WIRE TO WIRE
Connector Type	TH40MW-NH



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color of Wire	Signal Name [Specification]
1	SB	-
2	SB	-
3	L	-
4	W/B	-
5	SHIELD	-
6	LG	-
7	V	-
8	W	-
9	O	-
10	SHIELD	-
11	W/L	-
17	W	-
18	G/R	-
21	LG	-
22	LG	-
23	P	-
24	R/W	-
25	L/O	-
26	GR/L	-
27	W	-
28	V	-
29	BR/W	-
30	Y/G	-
31	Y/L	-
32	B	-
37	SHIELD	-
38	GR/R	-

Connector No.	M125
Connector Name	CAN GATEWAY
Connector Type	TH12FW-NH



1	2	3	4	5	6
7	8	9	10	11	12

Terminal No.	Color of Wire	Signal Name [Specification]
1	L	CAN-H
3	Y	BATTERY
4	L	CAN-H
5	B	GND
6	L	CAN-H
7	P	CAN-L
9	GR	IGNITION
10	R	CAN-L
11	B	GND
12	R	CAN-L

Connector No.	M135
Connector Name	AFS CONTROL UNIT
Connector Type	TH40FW-NH



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	IGN
2	LG/B	PSG-R
3	GR/R	SW
4	Y/R	PSV-R
5	L/Y	HSV-F
6	LG/R	HSV-R
7	P	CAN-L
8	B/O	HSG-R
9	GR	PS-R
10	B/W	HSG-F
11	R	SMR-2 (-)
13	B	SMR-1 (-)

15	W	SMR-1 (-)
17	G	SMR-2 (-)
19	SB	AMDS-R
22	V	HS-F
24	L/O	PSV-L
25	B	GND
27	BR/Y	PSG-L
28	R/G	HS-R
29	BR/W	PS-L
30	L	CAN-H
32	G	SMR-1 (-)
34	W	SMR-2 (-)
36	R	SMR-2 (-)
38	B	SMR-1 (-)
40	GR/L	AMDS-L

Connector No.	M210
Connector Name	AV CONTROL UNIT
Connector Type	TH22FW-NH



64	65	66	67	68	71	72	73	74	75	76
----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color of Wire	Signal Name [Specification]
65	W	PARKING BRAKE SIGNAL
67	W	COMPOSITE IMAGE SIGNAL GND
68	R	COMPOSITE IMAGE SIGNAL
71	SHIELD	MICROPHONE SHIELD
72	Y/G	MICROPHONE VCC
73	Y/G	COMM (CONT->DISP)
74	P	CAN-L
75	LG	AV COMM (L)
76	LG	AV COMM (L)
79	L/O	DIMMER SIGNAL
80	GR/L	IGNITION SIGNAL
81	R/Y	REVERSE SIGNAL
82	BR/W	VEHICLE SPEED SIGNAL (8-PULSE)
83	SHIELD	SHIELD
84	W/B	COMPOSITE IMAGE SYNC SIGNAL
87	Y/L	MICROPHONE SIGNAL
88	SHIELD	SHIELD
89	Y/L	COMM (DISP->CONT)
90	L	CAN-H
91	SB	AV COMM (H)
92	SB	AV COMM (H)

Connector No.	M222
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-NH



25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color of Wire	Signal Name [Specification]
1	SB	-
2	SB	-
3	L	-
4	W/B	-
5	SHIELD	-
6	LG	-
7	V	-
8	W	-
9	O	-
10	SHIELD	-
11	W/L	-
17	W	-
18	G/R	-
21	LG	-
22	LG	-
23	P	-
24	R/W	-
25	L/O	-
26	GR/L	-
27	W	-
28	V	-
29	BR/W	-
30	Y/G	-
31	Y/L	-
32	B	-
37	SHIELD	-
38	GR/R	-

CAN SYSTEM (WITH ICC)

< WIRING DIAGRAM >

[CAN]

CAN SYSTEM (WITH ICC)

Connector No.	R1
Connector Name	WIRE TO WIRE
Connector Type	TH02FW-NH



16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17

Terminal No.	Color of Wire	Signal Name [Specification]
1	W	-
4	Y	-
7	B	-
8	Y/L	-
10	B	-
11	R	-
12	Y	-
13	SHIELD	-
14	B/Y	-
15	W/R	-
16	L/O	-
17	Y	-
20	W	-
22	SB	-
23	Y	-
24	SHIELD	-
25	Y/G	-
26	L	-
27	W/G	-
28	Y	-
29	L	-
30	B/SB	-
31	BR	-
32	B/R	-

Connector No.	R8
Connector Name	LANE CAMERA UNIT
Connector Type	TH08FW-NH



4	1
8	5

Terminal No.	Color of Wire	Signal Name [Specification]
1	B	GND
4	L	ITS COMM-H
5	B	GND
7	W/G	IGNITION
8	Y	ITS COMM-L

JCMWM8312GB

LAN

CAN SYSTEM (WITHOUT ICC)


< WIRING DIAGRAM >

[CAN]

CAN SYSTEM (WITHOUT ICC)

Wiring Diagram

INFOID:000000006220534

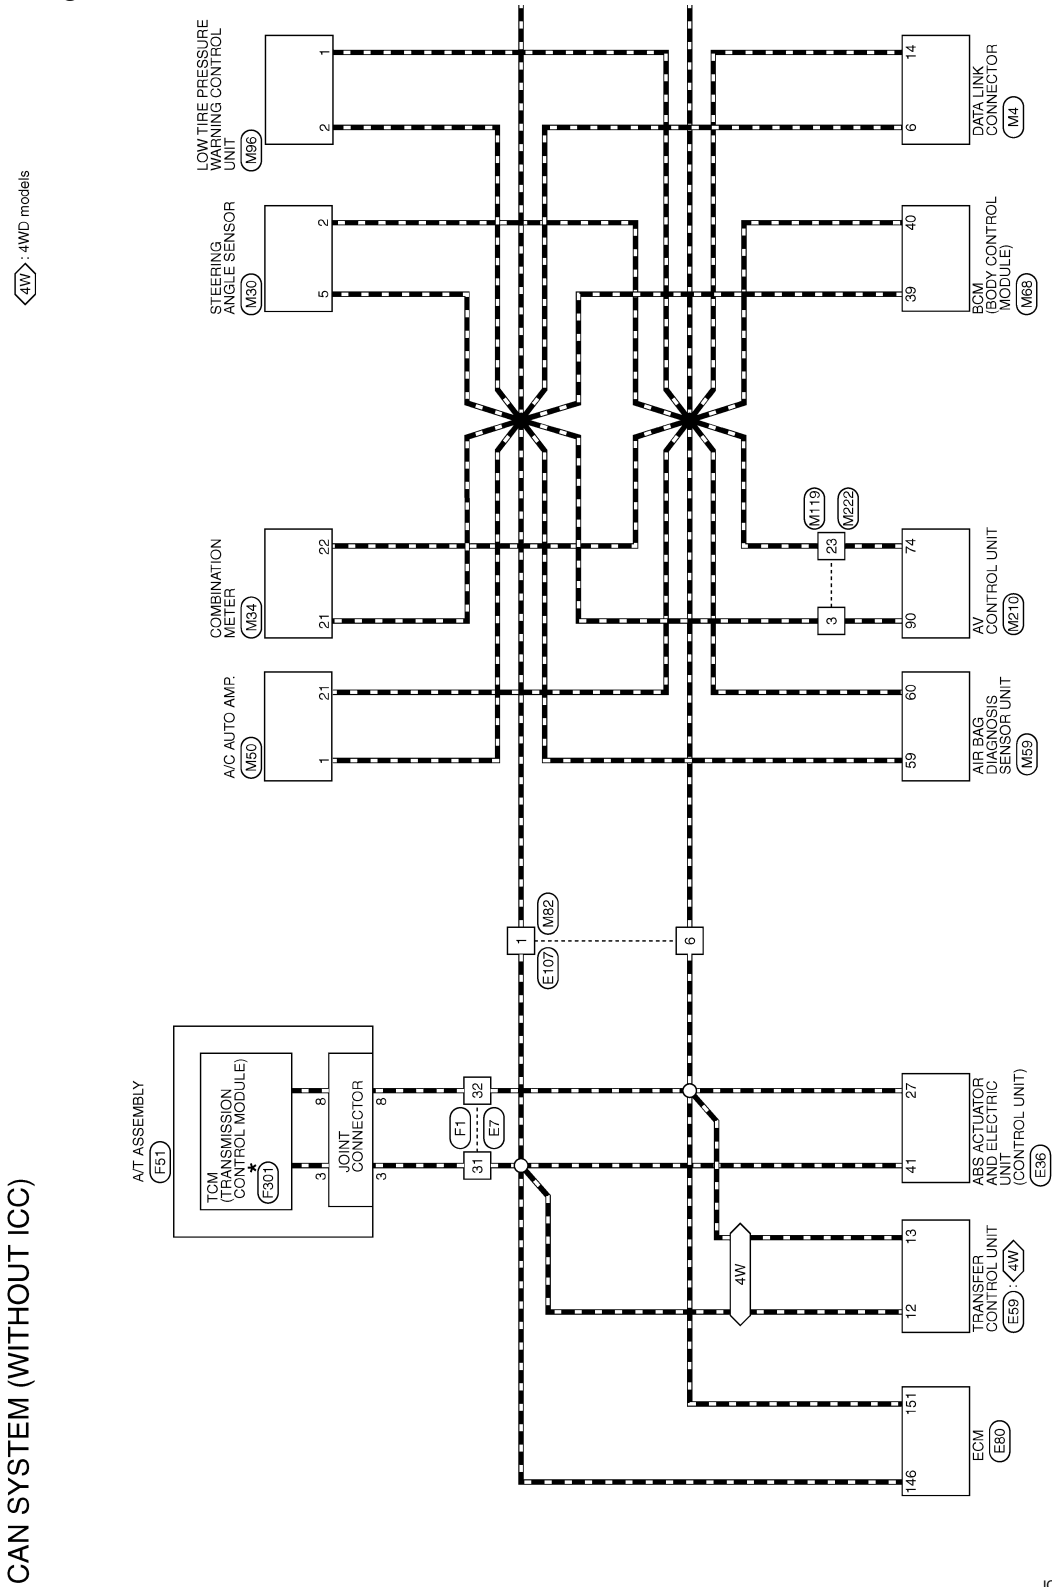

* : This connector is not shown in "Harness Layout".


2010/05/13

JCMWM8313GB

CAN SYSTEM (WITHOUT ICC)

< WIRING DIAGRAM >

[CAN]

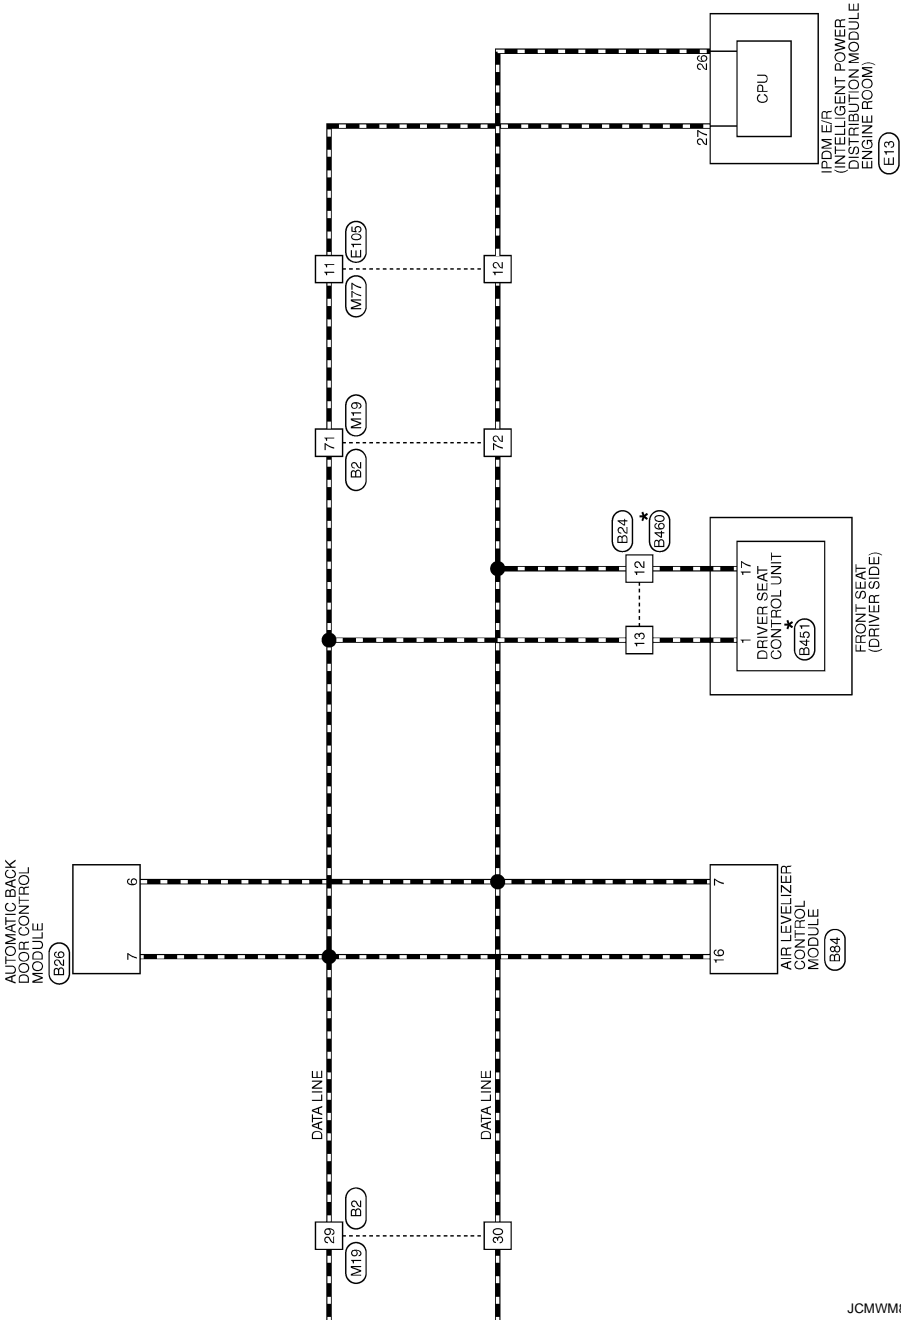

JCMWM8314GB

LAN

CAN SYSTEM (WITHOUT ICC)

[CAN]

< WIRING DIAGRAM >


CAN SYSTEM (WITHOUT ICC)

Connector No.	B2
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4




Terminal No.	Color of Wire	Signal Name [Specification]
2	L	-
3	BR	-
5	R/W	-
6	L	-
7	V	-
9	G	-
11	W/B	-
12	BR	-
13	G/R	-
14	B/Y	-
15	W/R	-
16	GR/R	-
18	G/W	-
19	V	-
20	W/G	-
21	B/W	-
22	V	-
23	SHIELD	-
24	G	-
25	O	-
26	Y	-
27	L/O	-
28	Y/R	-
29	L	-
30	R	-
31	G/Y	-
32	B/SB	-
33	LG/R	-
34	BR/W	-
35	GR/R	-
36	SB	-
37	LG	-
38	L	-
39	P	-
40	W/G	-
42	G/R	-
43	V/W	-
44	LG/B	-

Connector No.	B24
Connector Name	WIRE TO WIRE
Connector Type	TH18FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	W/R	-
2	Y/G	-
3	P/L	-
4	GR/R	-
5	LG/B	-
7	B	-
8	G/O	-
9	L	-
10	R/B	-
11	LG/R	-
12	P	-
13	L	-
14	V/W	-
15	BR	-

Connector No.	B26
Connector Name	AUTOMATIC BACK DOOR CONTROL MODULE
Connector Type	TH20FW-TB6



Terminal No.	Color of Wire	Signal Name [Specification]
1	L	BUZZER
2	Y/B	ABD SW
4	GR	ABD CLOSE SW
6	P	CAN-L
7	L	CAN-H
8	L/W	HALF LATCH SW
9	GR/L	IGN
10	Y	BAT

11	R	CLOSURE MTR (CLOSE)
12	V	CLOSURE MTR (OPEN)
14	G/W	TOUCH SENS LH
15	L/R	TOUCH SENS GND
16	LG	TOUCH SENS RH
17	O	MAIN SW
19	L/Y	CLOSE SW
20	G/Y	OPEN SW
22	B	GND
23	B	GND
28	R/W	BAT
34	B	GND

Connector No.	B84
Connector Name	AIR LEVELIZER CONTROL MODULE
Connector Type	TH18FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
2	B	GND
3	V	AIR COMPRESSOR RELAY
4	L/W	VEHICLE HEIGHT SENSOR GND
5	W	VEHICLE HEIGHT SENSOR SIGNAL
7	P	CAN-L
9	P/L	IGN
11	V/W	EXHAUST SOLENOID
13	R	VEHICLE HEIGHT SENSOR POWER SUPPLY
18	L	CAN-H

JCMWM8315GB

CAN SYSTEM (WITHOUT ICC)

< WIRING DIAGRAM >

[CAN]

CAN SYSTEM (WITHOUT ICC)

Connector No.	B461
Connector Name	DRIVER SEAT CONTROL UNIT
Connector Type	TH2FW-NH



1	2	3	4	5	6	7	8	9	10	11	12
17	18	19	20	21	22	23	24	25	26	27	28

Terminal No.	Color of Wire	Signal Name [Specification]
1	R/Y	CAN-H
2	R	UART (TX/RX)
4	R/L	PULSE (RECLINER)
5	R/B	TELESCOPIC SENSOR
6	R/W	ADDRESS 2
7	R/G	IND-2
8	SB	SLIDE SW (BACKWARD)
9	L	RECLINER SW (BACKWARD)
10	L/B	FRONT LIFTER SW (DOWNWARD)
11	L/W	REAR LIFTER SW (DOWNWARD)
12	L/R	SENSOR POWER SUPPLY
17	V	CAN-L
18	B/W	PULSE (SLIDE)
19	B/R	PULSE (FRONT LIFTER)
20	B/L	PULSE (REAR LIFTER)
21	W/B	TILT SENSOR
22	W/L	ADDRESS 1
23	W/R	IND-1
24	V/W	SLIDE SW (FORWARD)
25	Y/B	RECLINER SW (FORWARD)
26	Y/R	FRONT LIFTER SW (UPWARD)
27	Y/L	REAR LIFTER SW (UPWARD)
28	G	SET SW

Connector No.	B460
Connector Name	WIRE TO WIRE
Connector Type	NS16MW-CS



1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					

Terminal No.	Color of Wire	Signal Name [Specification]
1	R	-
2	R/G	-
3	R/W	-
4	W/R	-
5	W/L	-
7	LG	-
8	W/B	-
9	-	-
10	R/B	-
11	R	-
12	V	-
13	R/Y	-
14	G	-
15	-	-

Connector No.	E7
Connector Name	WIRE TO WIRE
Connector Type	TH432MW-NH



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32

Terminal No.	Color of Wire	Signal Name [Specification]
1	W	-
2	G	-
3	L/O	-
4	LG	-
5	W/L	-
6	G/O	-
7	L/R	-
8	LG/R	-
14	R	-
16	SB	-
17	R/W	-
18	Y/G	-
19	BR/Y	-
20	P/B	-
21	R/B	-
22	Y	-
23	BR	-
24	P/L	-
29	P	-
30	BR	-

31	L	-
32	P	-

Connector No.	E13
Connector Name	ENGINE R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE HOUSE)
Connector Type	TH12FW-NH



29	27	26	25	24	23
34	33	32	31	30	29

Terminal No.	Color of Wire	Signal Name [Specification]
23	GR/R	-
24	W/G	-
25	L/Y	-
26	P	-
27	L	-
30	R/W	-
31	B	-
32	LG	-
33	R	-
34	P/B	-

Connector No.	E38
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	SA242FB-SJZ4



45	44	43	42	41	39	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	---	---	---	---	---	---	---	---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	G	BAT
2	B	GND
3	B	GND
4	W	MOTOR SUPPLY
9	R/B	YAW RATE / SIDE / DIESEL G SENSOR COMMUNICATION-H
10	P/B	YAW RATE / SIDE / DIESEL G SENSOR COMMUNICATION-L
13	GR	BRAKE FLUID LEVEL SW
17	L/R	STP2

18	W/B	IGN
19	O	DS FR
20	SB	DP FL
21	R/Y	DS RR
22	V	DP RL
27	P	CAN-L
33	LG	DP FR
34	G	DS FL
35	BR	DP RR
36	P	DS RL
37	R	STP
39	L/W	VDC OFF SW
41	L	CAN-H
46	W	STOP LAMP SW ON

CAN SYSTEM (WITHOUT ICC)

< WIRING DIAGRAM >

[CAN]

CAN SYSTEM (WITHOUT ICC)

Connector No.	E169
Connector Name	TRANSFER CONTROL UNIT
Connector Type	TH407V-NH



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----

Terminal No.	Color of Wire	Signal Name [Specification]
6	BR	HI-LO POSITION SEN 1
7	Y	TRANSFER FLUID TEMP SEN SUPPLY
9	G	INTERNAL SPEED SEN GND
10	Y/G	INTERNAL SPEED SEN IMP
11	V	4LO SW
12	L	CAN-H
13	P	CAN-L
14	W/R	AUTO SW
15	P/B	ROTARY POSITION SEN PWM
16	LG	ROTARY POSITION SEN GND
17	W/L	LOCK POSITION SEN SUPPLY
18	BR/Y	ROTARY POSITION SEN SUPPLY
20	GR	TRANSFER C/U SUPPLY
25	P/L	HI-LO POSITION SEN 3
28	W	MOTOR TEMP SEN SUPPLY
29	LG/R	HI-LO POSITION SEN 2
30	R/B	LOCK POSITION SEN GND
31	L/O	INT SPEED SEN DIR
32	BR/R	IGN
35	R	LOCK SW
36	L/R	TRANSFER FLUID TEMP SEN GND
38	G/O	LOCK POSITION SEN SIGNAL
39	R/W	INTERNAL SPEED SEN SUPPLY

Connector No.	E160
Connector Name	ECM
Connector Type	MAB55FB-MEB10-LH



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----

Terminal No.	Color of Wire	Signal Name [Specification]
111	R	FUEL INJECTOR DRIVER POWER SUPPLY
112	SB	FUEL INJECTOR DRIVER POWER SUPPLY
113	G	FUEL RETURN VALVE
114	B	ECM GROUND
115	B	ECM GROUND
120	Y	EVAP CANISTER VENT CONTROL VALVE
122	BR/W	YVAL ACTUATOR MOTOR RELAY ADJUST SIGNAL VOLTAGE CONTROL MODULE
123	V/R	THROTTLE CONTROL MOTOR RELAY
125	GR	FUEL PUMP CONTROL MODULE (FPCM)
126	O	ACCELERATOR PEDAL POSITION SENSOR 2
128	Y	ICC STEERING SWITCH
129	P/L	SENSOR GROUND (APP SENSOR 2)
130	R	SENSOR GROUND
131	L/W	SENSOR POWER SUPPLY
133	SB	SENSOR POWER SUPPLY
134	V/W	TF
136	W/R	ACCELERATOR PEDAL POSITION SENSOR 1
137	W/G	SENSOR POWER SUPPLY (APP SENSOR 1)
138	V	BATTERY CURRENT SENSOR
139	G	BATTERY TEMPERATURE SENSOR
140	R/Y	SENSOR GROUND
141	SB	IGNITION SWITCH
142	R/W	FUEL PUMP CONTROL MODULE (FPCM) CHECK
143	L/Y	EVAP CONTROL SYSTEM PRESSURE SENSOR
144	O/B	REFRIGERANT PRESSURE SENSOR
146	L	CAN COMMUNICATION LINE
147	G/Y	ICC BRAKE SWITCH
150	R	SENSOR GROUND
151	P	CAN COMMUNICATION LINE
156	L	POWER SUPPLY FOR ECM (BACK-UP)
158	W/B	STOP LAMP SWITCH
161	R/W	ECM COMMUNICATION LINE
163	L/G	ECM RELAY (SELF SHUT-OFF)
165	GR/R	ECM COMMUNICATION LINE
166	W	ECM COMMUNICATION LINE
169	G/B	ENGINE SPEED SIGNAL OUTPUT
171	W	POWER SUPPLY FOR ECM
172	W	POWER SUPPLY FOR ECM
173	O	THROTTLE CONTROL MOTOR POWER SUPPLY
174	B	ECM GROUND
175	B	ECM GROUND

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH50MW-CS16-TM4



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----

Terminal No.	Color of Wire	Signal Name [Specification]
1	L	
2	L/W	
3	R/B	
4	L	
5	Y	
7	W/G	
8	P/B	
9	W/B	
10	L	
11	L	
12	P	
13	P/B	
14	BR	
15	L/B	
16	SB	
17	P	
18	BR	
19	Y/G	
20	BR/Y	
21	Y/V	
22	L	
23	Y	
24	L/W	
26	L	
27	L/W	
28	O	
29	R/W	
30	L/B	
31	Y	
32	GR/R	
34	Y	
35	R	
36	B/R	
37	G/Y	
38	G	
40	SB	
41	W/R	
42	R	


CAN SYSTEM (WITHOUT ICC)

< WIRING DIAGRAM >

[CAN]

CAN SYSTEM (WITHOUT ICC)


Connector No.	E107
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4

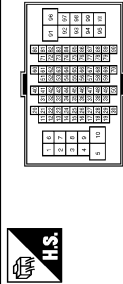

Terminal No.	Color of Wire	Signal Name [Specification]
1	L	
4	V/W	
5	G/R	
6	P	
9	GB/L	
10	Y/R	
11	L/R	
12	W/G	
13	BR/Y	
14	LG	
15	BR/W	
17	W/B	
18	GR/R	
20	W/R	
21	B	
22	R/L	
23	G/R	
24	R/W	
25	W/L	
26	R	
27	L	
28	G/B	
37	G/Y	
38	G/Y	
39	O	
40	W	
41	R	
42	B	
43	Y	
44	G	
45	SHIELD	
46	G/O	
47	G/R	
48	SHIELD	
49	W	
50	SHIELD	
51	Y/R	
52	GR	

53	LG/B	-
54	LG/R	-
55	R/G	-
56	B/R	-
57	SB	-
60	G	-
61	B	-
62	W	-
63	R	-
64	SHIELD	-
65	L/Y	-
66	V	-
67	B/W	-
91	G/R	-
95	SB	-
96	G/R	-
97	GR/L	-
98	G/W	-
99	R/Y	-
100	L	-


Connector No.	F1
Connector Name	WIRE TO WIRE
Connector Type	TH32FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	
2	G	
3	L/O	
4	LG	
5	W/L	
6	G/O	
7	L/R	
8	LG/R	
14	R	
16	SB	
17	R/W	
18	Y/G	
19	BR/Y	
20	P/B	
21	R/B	
22	Y	


23	BR/W	-
24	P/L	-
29	P	-
30	BR	-
31	L	-
32	P	-

Connector No.	F51
Connector Name	A/T ASSEMBLY
Connector Type	RK10FG



Terminal No.	Color of Wire	Signal Name [Specification]
1	V	
2	P	
3	L	
4	SB	
5	B	
6	V	
7	R	
8	P	
9	BR	
10	B	


Connector No.	F301
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Type	SP10FG



Terminal No.	Color of Wire	Signal Name [Specification]
1	-	VIGN
2	-	BATT
3	-	CAN-H
4	-	K LINE

5	-	GND
6	-	VIGN
7	-	REV LAMP RLY
8	-	CAN-L
9	-	START RLY
10	-	GND

Connector No.	M4
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW



Terminal No.	Color of Wire	Signal Name [Specification]
3	LG	
4	B	
5	B	
6	L	
7	SB	
8	GR	
11	SB	
12	R	
13	L	
14	P	
16	Y	

CAN SYSTEM (WITHOUT ICC)

[CAN]

< WIRING DIAGRAM >


CAN SYSTEM (WITHOUT ICC)

Connector No.	M19
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
2	L	-
3	BR	-
5	R/W	-
6	L	-
7	V	-
9	G	-
11	W/B	-
12	BR	-
13	G/R	-
14	B/Y	-
15	W/R	-
16	GR/R	-
18	G/W	-
19	V	-
20	W/G	-
21	B/W	-
22	V	-
23	SHIELD	-
24	G	-
25	O	-
26	Y	-
27	L/O	-
28	Y/R	-
29	L	-
30	R	- [With ICC]
31	P	- [Without ICC]
32	B/SB	-
33	LG/R	-
34	BR/W	-
35	GR/R	-
36	SB	-
37	LG	-
38	L	-
39	P	-
40	W/G	-
42	G/R	-
43	V/W	-

Connector No.	M30
Connector Name	STEERING ANGLE SENSOR
Connector Type	TH80FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	B	-
2	P	-
4	GR	-
5	L	-

Connector No.	M34
Connector Name	COMBINATION METER
Connector Type	TH40FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	BATTERY POWER SUPPLY
2	GR	IGNITION SIGNAL
3	B	GROUND
4	B	GROUND
5	B	ILL GND
7	R	TOW MODE SIGNAL
8	P/L	TRIP RESET SWITCH SIGNAL
11	G	ENTER SWITCH SIGNAL
12	O	SELECT SWITCH SIGNAL
13	W/R	ILLUMINATION CONTROL SWITCH SIGNAL (+)
14	R	ILLUMINATION CONTROL SWITCH SIGNAL (-)
15	R/W	AIR BAG SIGNAL
18	W/R	AMBIENT SENSOR SIGNAL
19	V/W	A/C AUTO AMP. CONNECTION RECOGNITION SIGNAL
20	B	AMBIENT SENSOR GROUND
21	L	CAN-H
22	P	CAN-L
23	B	GROUND

24	V	FUEL LEVEL SENSOR GROUND
25	O/L	ALTERNATOR SIGNAL
26	W	PARKING BRAKE SWITCH SIGNAL
28	GR/R	SECURITY SIGNAL
29	BR	WASHER LEVEL SWITCH SIGNAL
30	SB	VEHICLE SPEED SIGNAL (2-PULSE)
31	BR/W	VEHICLE SPEED SIGNAL (8-PULSE)
33	W	SNOW MODE SIGNAL
34	BR/Y	FUEL LEVEL SENSOR SIGNAL
35	O/B	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
36	G/Y	PASSENGER SEAT BELT WARNING SIGNAL
37	R/Y	NON-MANUAL MODE SIGNAL
38	L/W	MANUAL MODE SHIFT DOWN SIGNAL
39	Y/B	MANUAL MODE SHIFT UP SIGNAL
40	G/W	MANUAL MODE SIGNAL

JCMWM8319GB

CAN SYSTEM (WITHOUT ICC)

[CAN]

< WIRING DIAGRAM >

CAN SYSTEM (WITHOUT ICC)

Connector No.	M69
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT
Connector Type	NI428FY-EX



--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--


CAN SYSTEM (WITHOUT ICC)

[CAN]

< WIRING DIAGRAM >

CAN SYSTEM (WITHOUT ICC)


Connector No.	M82
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4

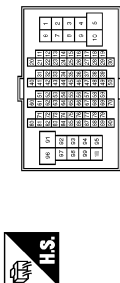

Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
4	V/W	-
5	G/R	-
6	P	-
9	GR/L	-
10	Y/R	-
11	L/R	-
12	W/G	-
13	BR/Y	-
14	LG	-
15	BR/W	-
17	W/B	-
18	GR/R	-
20	W/R	-
21	B	-
22	R/L	-
23	G/R	-
24	R/W	-
25	W/L	-
26	R	-
27	L	-
28	B/SB	-
37	G/Y	-
38	G/Y	-
39	O	-
40	W	-
41	R	-
42	B	-
43	Y	-
44	G	-
45	SHIELD	-
46	G/O	-
47	G/R	-
48	SHIELD	-
49	W	-
50	SHIELD	-
51	Y/R	-
52	GR	-

53	LG/B	-
54	LG/R	-
55	B/G	-
56	B/O	-
57	SB	-
60	G	-
61	B	-
62	W	-
63	R	-
64	SHIELD	-
65	L/Y	-
66	V	-
67	B/W	-
91	G/R	-
95	SB	-
96	G/R	-
97	GR/L	-
98	G/W	-
99	P	-
100	L	-


Connector No.	M86
Connector Name	LOW TIRE PRESSURE WARNING CONTROL UNIT
Connector Type	TH432FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	P	-
2	L	-
3	O/L	-
4	L	-
5	R/L	-
6	W/G	-
7	SB	-
8	GR	-
9	R/W	-
10	LG	-
15	GR	-
19	L/R	-
20	P	-
21	G/R	-
22	BR/Y	-
23	Y/W	-


24	R/B	-
25	W/L	-
26	BR/W	-
32	B	-

Connector No.	M119
Connector Name	WIRE TO WIRE
Connector Type	TH40MW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	SB	-
2	SB	-
3	L	-
4	W/B	-
5	SHIELD	-
6	LG	-
7	V	-
8	W	-
9	O	-
10	SHIELD	-
11	W/L	-
17	W	-
18	G/R	-
21	LG	-
22	LG	-
23	P	-
24	R/W	-
25	L/O	-
26	GR/L	-
27	W	-
28	V	-
29	BR/W	-
30	Y/G	-
31	Y/L	-
32	B	-
37	SHIELD	-
38	GR/R	-

Connector No.	M210
Connector Name	AV CONTROL UNIT
Connector Type	TH42FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
65	W	-
67	W	-
68	R	-
71	SHIELD	-
72	Y/G	-
73	Y/G	-
74	P	-
75	LG	-
76	LG	-
79	L/O	-
80	GR/L	-
81	R/Y	-
82	BR/W	-
83	SHIELD	-
84	W/B	-
87	Y/L	-
88	SHIELD	-
89	Y/L	-
90	L	-
91	SB	-
92	SB	-

JCMWM8321GB

CAN SYSTEM (WITHOUT ICC)

< WIRING DIAGRAM >

[CAN]

CAN SYSTEM (WITHOUT ICC)

Connector No.

M222

Connector Name

WIRE TO WIRE

Connector Type

TH40PV-NH

HS.

20

19

18

17

16

15

14

13

12

11

10

9

8

7

6

5

4

3

2

1

20

19

18

17

16

15

14

13

12

11

10

9

8

7

6

5

4

3

2

1

Terminal No.

Color of Wire

Signal Name (Specification)

1

SB

-

2

SB

-

3

L

-

4

W/B

-

5

SHIELD

-

6

LG

-

7

V

-

8

W

-

9

O

-

10

SHIELD

-

11

W/L

-

17

W

-

18

G/R

-

21

LG

-

22

LG

-

23

P

-

24

R/W

-

25

L/O

-

26

GR/L

-

27

W

-

28

V

-

28

BR/W

-

30

Y/G

-

31

Y/L

-

32

B

-

37

SHIELD

-

38

GR/R

-

JCMWM8322GB

LAN

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Interview Sheet

INFOID:000000006220535

CAN Communication System Diagnosis Interview Sheet

Date received:

Type:

VIN No.:

Model:

First registration:

Mileage:

CAN system type:

Symptom (Results from interview with customer)

Condition at inspection

Error symptom : Present / Past


SKIB8898E

DTC/CIRCUIT DIAGNOSIS

MALFUNCTION AREA CHART

System Diagram

INFOID:0000000006220536

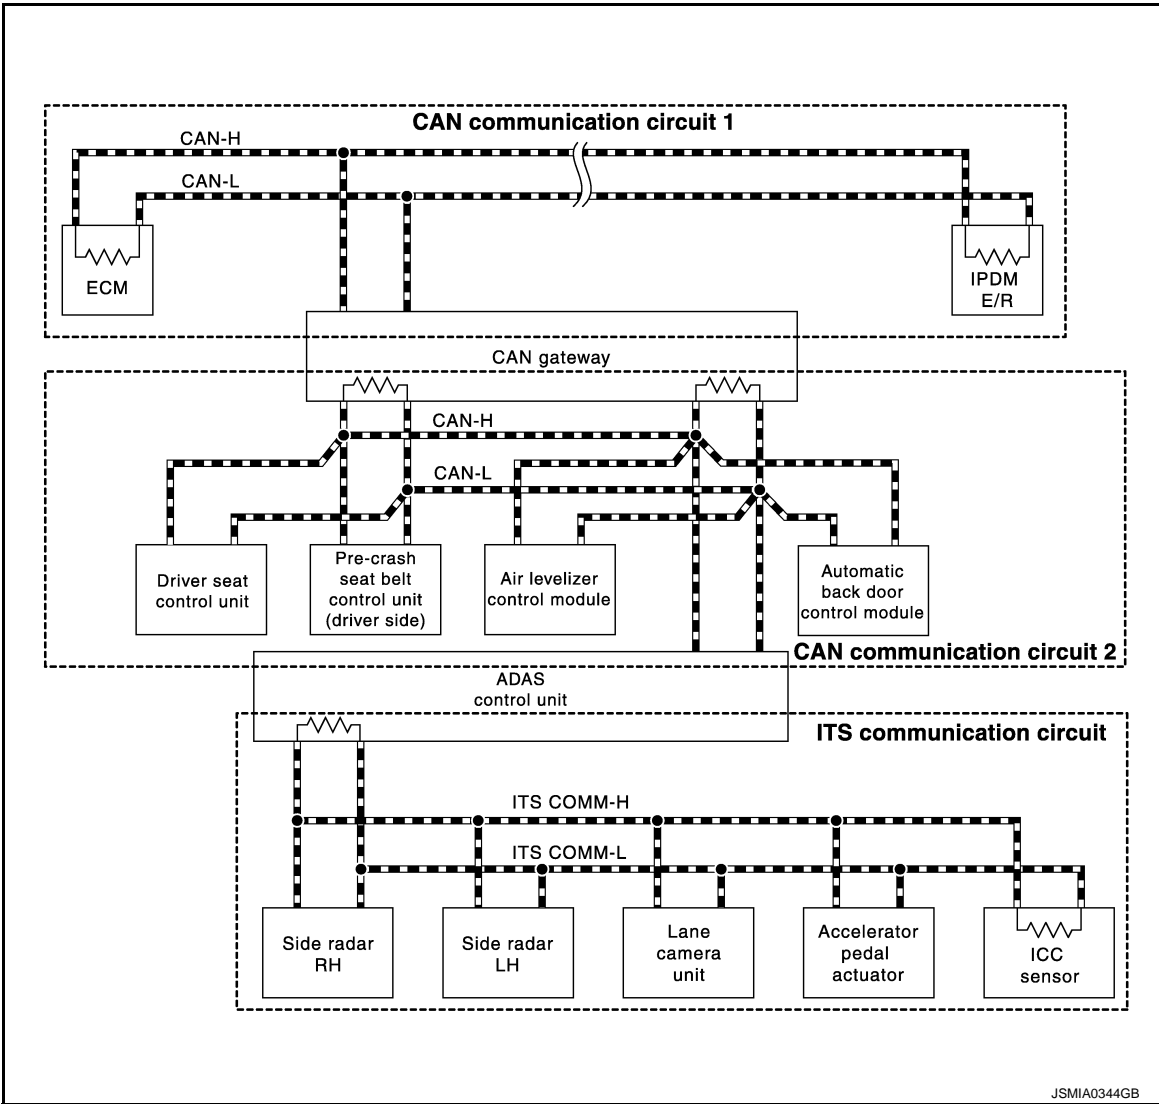

JSMIA0344GB

CAN Communication Circuit

INFOID:0000000006220537

MAIN LINE

Malfunction area	Reference
Main line between ABS actuator and electric unit (control unit) and data link connector	LAN-60, "Diagnosis Procedure"
Main line between data link connector and air levelizer control module	LAN-61, "Diagnosis Procedure"
Main line between air levelizer control module and driver seat control unit (Without ICC system)	LAN-62, "Diagnosis Procedure"
Main line between driver seat control unit and automatic back door control module (With ICC system)	LAN-63, "Diagnosis Procedure"

BRANCH LINE

MALFUNCTION AREA CHART

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

Malfunction area	Reference
ECM branch line circuit	LAN-68. "Diagnosis Procedure"
Transfer control unit branch line circuit	LAN-69. "Diagnosis Procedure"
ABS actuator and electric unit (control unit) branch line circuit	LAN-70. "Diagnosis Procedure"
TCM branch line circuit	LAN-71. "Diagnosis Procedure"
Air bag diagnosis sensor unit branch line circuit	LAN-72. "Diagnosis Procedure"
AFS control unit branch line circuit	LAN-73. "Diagnosis Procedure"
AV control unit branch line circuit	LAN-74. "Diagnosis Procedure"
BCM branch line circuit	LAN-75. "Diagnosis Procedure"
CAN gateway branch line circuit (CAN communication circuit 1)	LAN-76. "Diagnosis Procedure"
CAN gateway branch line circuit (CAN communication circuit 2)	LAN-77. "Diagnosis Procedure"
Data link connector branch line circuit	LAN-78. "Diagnosis Procedure"
A/C auto amp. branch line circuit	LAN-79. "Diagnosis Procedure"
Combination meter branch line circuit	LAN-80. "Diagnosis Procedure"
Steering angle sensor branch line circuit	LAN-81. "Diagnosis Procedure"
Low tire pressure warning control unit branch line circuit	LAN-82. "Diagnosis Procedure"
IPDM E/R branch line circuit	LAN-83. "Diagnosis Procedure"
Driver seat control unit branch line circuit	LAN-84. "Diagnosis Procedure"
Pre-crash seat belt control unit (driver side) branch line circuit	LAN-85. "Diagnosis Procedure"
Air levelizer control module branch line circuit	LAN-86. "Diagnosis Procedure"
ADAS control unit branch line circuit	LAN-87. "Diagnosis Procedure"
Automatic back door control module branch line circuit	LAN-88. "Diagnosis Procedure"

SHORT CIRCUIT

Malfunction area	Reference
CAN communication circuit (Without ICC system)	LAN-94. "Diagnosis Procedure"
CAN communication circuit 1 (With ICC system)	LAN-96. "Diagnosis Procedure"
CAN communication circuit 2 (With ICC system)	LAN-98. "Diagnosis Procedure"

ITS Communication Circuit

INFOID:000000006220538

MAIN LINE

Malfunction area	Reference
Main line between side radar RH and side radar LH	LAN-64. "Diagnosis Procedure"
Main line between side radar LH and lane camera unit	LAN-65. "Diagnosis Procedure"
Main line between lane camera unit and accelerator pedal actuator	LAN-67. "Diagnosis Procedure"

BRANCH LINE

Malfunction area	Reference
Side radar RH branch line circuit	LAN-89. "Diagnosis Procedure"
Side radar LH branch line circuit	LAN-90. "Diagnosis Procedure"
Lane camera unit branch line circuit	LAN-91. "Diagnosis Procedure"
Accelerator pedal actuator branch line circuit	LAN-92. "Diagnosis Procedure"
ICC sensor branch line circuit	LAN-93. "Diagnosis Procedure"

MALFUNCTION AREA CHART

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

SHORT CIRCUIT OR OPEN CIRCUIT

Malfunction area	Reference
ITS communication circuit	LAN-100. "Diagnosis Procedure"

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN ABS AND DLC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN ABS AND DLC CIRCUIT

Diagnosis Procedure

INFOID:000000006220539

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector E107
 - Harness connector M82

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - ABS actuator and electric unit (control unit)
 - Harness connectors E107 and M82
2. Check the continuity between the ABS actuator and electric unit (control unit) harness connector and the harness connector.

ABS actuator and electric unit (control unit) harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E36	41	E107	1	Existed
	27		6	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the ABS actuator and electric unit (control unit) and the harness connector E107.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector and the data link connector.

Harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M82	1	M4	6	Existed
	6		14	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the ABS actuator and electric unit (control unit) and the data link connector.

NO >> Repair the main line between the harness connector M82 and the data link connector.

MAIN LINE BETWEEN DLC AND E-SUS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN DLC AND E-SUS CIRCUIT

Diagnosis Procedure

INFOID:000000006238655

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M19
 - Harness connector B2

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M19 and B2.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M4	6	M19	29	Existed
	14		30	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the data link connector and the harness connector M19.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of air levelizer control module.
2. Check the continuity between the harness connector and the air levelizer control module harness connector.

Harness connector		Air levelizer control module harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B2	29	B84	16	Existed
	30		7	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the air levelizer control module.

NO >> Repair the main line between the harness connector B2 and the air levelizer control module.

MAIN LINE BETWEEN E-SUS AND ADP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN E-SUS AND ADP CIRCUIT

Diagnosis Procedure

INFOID:000000006238656

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Air levelizer control module
 - Harness connectors B24 and B460
4. Check the continuity between the air levelizer control module harness connector and the harness connector.

Air levelizer control module harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B84	16	B24	13	Existed
	7		12	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the air levelizer control module and the driver seat control unit.

NO >> Repair the main line between the air levelizer control module and the harness connector B24.

MAIN LINE BETWEEN ADP AND PWBD CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN ADP AND PWBD CIRCUIT

Diagnosis Procedure

INFOID:000000006220540

1.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - CAN gateway
 - Harness connectors B460 and B24
 - Automatic back door control module
4. Check the continuity between the harness connector and the automatic back door control module harness connector.

Harness connector		Automatic back door control module harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B24	13	B26	7	Existed
	12		6	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the driver seat control unit and the automatic back door control module.

NO >> Repair the main line between the harness connector B24 and the automatic back door control module.

LAN

MAIN LINE BETWEEN RDR-R AND RDR-L CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN RDR-R AND RDR-L CIRCUIT

Diagnosis Procedure

INFOID:000000006220541

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B239
 - Harness connector B63

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar RH
 - Harness connectors B239 and B63
2. Check the continuity between the side radar RH harness connector and the harness connector.

Side radar RH harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B243	4	B239	7	Existed
	3		3	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the side radar RH and the harness connector B239.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of side radar LH.
2. Check the continuity between the harness connector and the side radar LH harness connector.

Harness connector		Side radar LH harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B63	7	B74	4	Existed
	3		3	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the side radar RH and the side radar LH.

NO >> Repair the main line between the harness connector B63 and the side radar LH.

MAIN LINE BETWEEN RDR-L AND LANE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN RDR-L AND LANE CIRCUIT

Diagnosis Procedure

INFOID:000000006220542

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B2
 - Harness connector M19
 - Harness connector M23
 - Harness connector R1

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar LH
 - Harness connectors B2 and M19
2. Check the continuity between the side radar LH harness connector and the harness connector.

Side radar LH harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B74	4	B2	27	Existed
	3		28	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the side radar LH and the harness connector B2.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M23 and R1.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M19	27	M23	26	Existed
	28		23	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M19 and M23.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of lane camera unit.
2. Check the continuity between the harness connector and the lane camera unit harness connector.

Harness connector		Lane camera unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
R1	26	R8	4	Existed
	23		8	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the side radar LH and the lane camera unit.

MAIN LINE BETWEEN RDR-L AND LANE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

NO >> Repair the main line between the harness connector R1 and the lane camera unit.

MAIN LINE BETWEEN LANE AND APA CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN LANE AND APA CIRCUIT

Diagnosis Procedure

INFOID:000000006220543

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector R1
 - Harness connector M23
 - Harness connector M77
 - Harness connector E105

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors R1 and M23.
2. Check the continuity between the harness connector terminals.

Connector No.	Terminal No.		Continuity
R1	26	29	Existed
	23	28	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the lane camera unit and the harness connector R1.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M77 and E105.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M23	29	M77	22	Existed
	28		23	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M23 and M77.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of accelerator pedal actuator.
2. Check the continuity between the harness connector and the accelerator pedal actuator harness connector.

Harness connector		Accelerator pedal actuator harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E105	22	E66	5	Existed
	23		4	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the lane camera unit and the accelerator pedal actuator.

NO >> Repair the main line between the harness connector E105 and the accelerator pedal actuator.

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006220544

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ECM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E80	146	151	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ECM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to [EC-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the ECM. Refer to [EC-535, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the ECM branch line.

NO >> Repair the power supply and the ground circuit.

4WD BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

4WD BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006220545

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the transfer control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of transfer control unit.
2. Check the resistance between the transfer control unit harness connector terminals.

Transfer control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E59	12	13	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the transfer control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the transfer control unit. Refer to [DLN-93, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the transfer control unit. Refer to [DLN-107, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the transfer control unit branch line.
NO >> Repair the power supply and the ground circuit.

LAN

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006220546

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E36	41	27	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-113. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-137. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.

NO >> Repair the power supply and the ground circuit.

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006220547

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - A/T assembly
 - Harness connector F1
 - Harness connector E7

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/T assembly.
2. Check the resistance between the A/T assembly harness connector terminals.

A/T assembly harness connector			Resistance (Ω)
Connector No.	Terminal No.		
F51	3	8	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the TCM branch line.

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Remove the joint connector. Refer to [TM-182, "Removal and Installation"](#).
2. Check the continuity between the A/T assembly harness connector side and the TCM harness connector side of the joint connector.

A/T assembly harness connector side	TCM harness connector side	Continuity
Terminal No.	Terminal No.	
3	3	Existed
8	8	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the joint connector.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-151, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the control valve & TCM. Refer to [TM-182, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the TCM branch line.

NO >> Repair the power supply and the ground circuit.

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006220548

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the main harness.

2.CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-36, "Work Flow"](#).

Is the inspection result normal?

YES >> Replace the main harness.

NO >> Replace parts whose air bag system has a malfunction.

AFS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

AFS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006220549

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the AFS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AFS control unit.
2. Check the resistance between the AFS control unit harness connector terminals.

AFS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M135	30	7	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the AFS control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AFS control unit. Refer to [EXL-84, "AFS CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the AFS control unit. Refer to [EXL-135, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the AFS control unit branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006220550

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - AV control unit
 - Harness connector M222
 - Harness connector M119

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
2. Check the resistance between the AV control unit harness connector terminals.

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M210	90	74	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> Repair the AV control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to [AV-161, "AV CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the AV control unit. Refer to [AV-212, "Removal and Installation"](#).
 YES (Past error)>>Error was detected in the AV control unit branch line.
 NO >> Repair the power supply and the ground circuit.

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006220551

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M68	39	40	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the BCM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-75, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to [BCS-81, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the BCM branch line.
NO >> Repair the power supply and the ground circuit.

LAN

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

[CAN]

< DTC/CIRCUIT DIAGNOSIS >

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

Diagnosis Procedure

INFOID:000000006220552

1.CHECK DTC

Check DTC of the CAN gateway with CONSULT-III.

Is U1010 or B2600 indicated?

- YES >> Perform a diagnosis of the indicated DTC.
- NO >> GO TO 2.

2.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the CAN gateway for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair the terminal and connector.

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of CAN gateway.
2. Check the resistance between the CAN gateway harness connector terminals.

CAN gateway harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M125	1	7	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 4.
- NO >> Repair the CAN gateway branch line (CAN communication circuit 1). Refer to [LAN-57, "System Diagram"](#).

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the CAN gateway. Refer to [LAN-116, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the CAN gateway. Refer to [LAN-117, "Removal and Installation"](#).
- YES (Past error)>>Error was detected in the CAN gateway branch line (CAN communication circuit 1).
- NO >> Repair the power supply and the ground circuit.

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

[CAN]

< DTC/CIRCUIT DIAGNOSIS >

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

Diagnosis Procedure

INFOID:000000006220553

1.CHECK DTC

Check DTC of the CAN gateway with CONSULT-III.

Is U1010 or B2600 indicated?

- YES >> Perform a diagnosis of the indicated DTC.
- NO >> GO TO 2.

2.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - CAN gateway
 - Harness connector M19
 - Harness connector B2

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair the terminal and connector.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Repair the CAN gateway branch line (CAN communication circuit 2). Refer to [LAN-57. "System Diagram"](#).

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the CAN gateway. Refer to [LAN-116. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the CAN gateway. Refer to [LAN-117. "Removal and Installation"](#).
- YES (Past error)>>Error was detected in the CAN gateway branch line (CAN communication circuit 2).
- NO >> Repair the power supply and the ground circuit.

LAN

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006220554

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M4	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit.

NO >> Repair the data link connector branch line.

HVAC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006220555

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the A/C auto amp. for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/C auto amp.
2. Check the resistance between the A/C auto amp. harness connector terminals.

A/C auto amp. harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M50	1	21	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the A/C auto amp. branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the A/C auto amp. Refer to [HAC-110, "A/C AUTO AMP. : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the A/C auto amp. Refer to [HAC-146, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the A/C auto amp. branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

M&A BRANCH LINE CIRCUIT**Diagnosis Procedure**

INFOID:000000006220556

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M34	21	22	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the combination meter branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to [MWI-64, "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?YES (Present error)>>Replace the combination meter. Refer to [MWI-85, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the combination meter branch line.

NO >> Repair the power supply and the ground circuit.

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006220557

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M30	5	2	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the steering angle sensor branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to [BRC-53, "Wiring Diagram"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-139, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the steering angle sensor branch line.
NO >> Repair the power supply and the ground circuit.

LAN

TPMS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

TPMS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006220558

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the low tire pressure warning control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of low tire pressure warning control unit.
2. Check the resistance between the low tire pressure warning control unit harness connector terminals.

Low tire pressure warning control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M96	2	1	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the low tire pressure warning control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the low tire pressure warning control unit. Refer to [WT-51, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the low tire pressure warning control unit. Refer to [WT-65, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the low tire pressure warning control unit branch line.

NO >> Repair the power supply and the ground circuit.

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006220559

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - IPDM E/R
 - Harness connector E105
 - Harness connector M77
 - Harness connector M19 (Without ICC system)
 - Harness connector B2 (Without ICC system)

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E13	27	26	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the IPDM E/R branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-31. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-32. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the IPDM E/R branch line.

NO >> Repair the power supply and the ground circuit.

LAN

ADP BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006220560

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Driver seat control unit
 - Harness connector B460
 - Harness connector B24
 - CAN gateway (With ICC system)

Is the inspection result normal?

YES (With ICC system)>>GO TO 2.

YES (Without ICC system)>>GO TO 3.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (CAN communication circuit 2). Refer to [LAN-57, "System Diagram"](#).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway. (With ICC system)
2. Disconnect the connector of driver seat control unit.
3. Check the resistance between the driver seat control unit harness connector terminals.

Driver seat control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B451	1	17	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the driver seat control unit branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the driver seat control unit. Refer to [ADP-67, "DRIVER SEAT CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the driver seat control unit. Refer to [ADP-135, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the driver seat control unit branch line.

NO >> Repair the power supply and the ground circuit.

PSB BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

PSB BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006220561

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Pre-crash seat belt control unit (driver side)
 - CAN gateway

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (CAN communication circuit 2). Refer to [LAN-57, "System Diagram"](#).

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway.
2. Disconnect the connector of pre-crash seat belt control unit (driver side).
3. Check the resistance between the pre-crash seat belt control unit (driver side) harness connector terminals.

Pre-crash seat belt control unit (driver side) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B9	14	4	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the pre-crash seat belt control unit (driver side) branch line.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the pre-crash seat belt control unit (driver side). Refer to [SBC-52, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the seat belt pre-tensioner retractor (LH side). Refer to [SB-6, "SEAT BELT RETRACTOR : Removal and Installation"](#).

YES (Past error)>>Error was detected in the pre-crash seat belt control unit (driver side) branch line.

NO >> Repair the power supply and the ground circuit.

E-SUS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006220562

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Air levelizer control module
 - CAN gateway (With ICC system)

Is the inspection result normal?

YES (With ICC system)>>GO TO 2.

YES (Without ICC system)>>GO TO 3.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (CAN communication circuit 2). Refer to [LAN-57, "System Diagram"](#).

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway. (With ICC system)
2. Disconnect the connector of air levelizer control module.
3. Check the resistance between the air levelizer control module harness connector terminals.

Air levelizer control module harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B84	16	7	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the air levelizer control module branch line.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the air levelizer control module. Refer to [SCS-89, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the air levelizer control module. Refer to [SCS-94, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the air levelizer control module branch line.

NO >> Repair the power supply and the ground circuit.

ICC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

ICC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006220563

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ADAS control unit
 - CAN gateway

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (CAN communication circuit 2). Refer to [LAN-57, "System Diagram"](#).

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway.
2. Disconnect the connector of ADAS control unit.
3. Check the resistance between the ADAS control unit harness connector terminals.

ADAS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B61	14	15	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the ADAS control unit branch line.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ADAS control unit. Refer to [DAS-62, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the ADAS control unit. Refer to [DAS-63, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the ADAS control unit branch line.

NO >> Repair the power supply and the ground circuit.

PWBD BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006220564

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Automatic back door control module
 - CAN gateway (With ICC system)

Is the inspection result normal?

YES (With ICC system)>>GO TO 2.

YES (Without ICC system)>>GO TO 3.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (CAN communication circuit 2). Refer to [LAN-57, "System Diagram"](#).

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway. (With ICC system)
2. Disconnect the connector of automatic back door control module.
3. Check the resistance between the automatic back door control module harness connector terminals.

Automatic back door control module harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B26	7	6	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the automatic back door control module branch line.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the automatic back door control module. Refer to [DLK-116, "AUTOMATIC BACK DOOR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the automatic back door control module. Refer to [DLK-262, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the automatic back door control module branch line.

NO >> Repair the power supply and the ground circuit.

RDR-R BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

RDR-R BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006220565

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the side radar RH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK RIGHT/LEFT SWITCHING SIGNAL CIRCUIT

Check the right/left switching signal circuit of the side radar RH. Refer to [DAS-514, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair the root cause.

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of side radar RH.
2. Check the resistance between the side radar RH harness connector terminals.

Side radar RH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B243	4	3	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 4.
NO >> Repair the side radar RH branch line.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar RH. Refer to [DAS-513, "SIDE RADAR RH: Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the side radar RH. Refer to [DAS-523, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the side radar RH branch line.
NO >> Repair the power supply and the ground circuit.

LAN

RDR-L BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006220566

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the side radar LH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of side radar LH.
2. Check the resistance between the side radar LH harness connector terminals.

Side radar LH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B74	4	3	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the side radar LH branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar LH. Refer to [DAS-512, "SIDE RADAR LH : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the side radar LH. Refer to [DAS-523, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the side radar LH branch line.

NO >> Repair the power supply and the ground circuit.

LANE BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

LANE BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006220567

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the lane camera unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of lane camera unit.
2. Check the resistance between the lane camera unit harness connector terminals.

Lane camera unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
R8	4	8	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the lane camera unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the lane camera unit. Refer to [DAS-387, "LANE CAMERA UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the lane camera unit. Refer to [DAS-403, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the lane camera unit branch line.
NO >> Repair the power supply and the ground circuit.

LAN

APA BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006220568

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the accelerator pedal actuator for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of accelerator pedal actuator.
2. Check the resistance between the accelerator pedal actuator harness connector terminals.

Accelerator pedal actuator harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E66	5	4	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the accelerator pedal actuator branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the accelerator pedal actuator. Refer to [DAS-195, "ACCELERATOR PEDAL ACTUATOR : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the accelerator pedal assembly. Refer to [ACC-4, "MODELS WITH DISTANCE CONTROL ASSIST SYSTEM : Removal and Installation"](#).
YES (Past error)>>Error was detected in the accelerator pedal actuator branch line.
NO >> Repair the power supply and the ground circuit.

LASER BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

LASER BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006220569

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ICC sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ICC sensor.
2. Check the resistance between the ICC sensor harness connector terminals.

ICC sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E65	3	6	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ICC sensor branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ICC sensor. Refer to [CCS-158, "ICC SENSOR : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ICC sensor. Refer to [CCS-176, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ICC sensor branch line.
NO >> Repair the power supply and the ground circuit.

LAN

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000006256269

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit.
4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		
M4	6	14	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M4	6		Not existed
	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair the root cause.

4.CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		
146	151	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

IPDM E/R		Resistance (Ω)
Terminal No.		
27	26	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

CAN COMMUNICATION CIRCUIT

[CAN]

< DTC/CIRCUIT DIAGNOSIS >

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

CAN COMMUNICATION CIRCUIT 1

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

CAN COMMUNICATION CIRCUIT 1

Diagnosis Procedure

INFOID:000000006220570

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit 1.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-57. "System Diagram"](#).

4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		
M4	6	14	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M4	6		Not existed
	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair the root cause.

4.CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		
146	151	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

IPDM E/R		Resistance (Ω)
Terminal No.		
27	26	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

CAN COMMUNICATION CIRCUIT 1

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit 1.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CAN COMMUNICATION CIRCUIT 2

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

CAN COMMUNICATION CIRCUIT 2

Diagnosis Procedure

INFOID:000000006220571

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit 2.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-57. "System Diagram"](#).

4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		
M4	13	12	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M4	13		Not existed
	12		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair the root cause.

4.CHECK CAN GATEWAY TERMINATION CIRCUIT

1. Remove the CAN gateway.
2. Check the resistance between the CAN gateway terminals.

CAN gateway		Resistance (Ω)
Terminal No.		
4	10	Approx. 108 – 132
6	12	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the CAN gateway.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

Inspection result

Reproduced>>GO TO 6.

CAN COMMUNICATION CIRCUIT 2

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit 2.

NOTE:

CAN gateway has two termination circuits. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

ITS COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000006220572

1.CHECK CAN DIAGNOSIS

Check the CAN diagnosis results from CONSULT-III to see that the CAN communication circuit 1 and CAN communication circuit 2 have no malfunction.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-57, "System Diagram"](#).

Are the CAN communication 1 and CAN communication 2 circuits normal?

YES >> GO TO 2.

NO >> Check and repair CAN communication circuit 1 and/or CAN communication circuit 2.

2.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ADAS control unit
 - Harness connector B63
 - Harness connector B239

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the terminal and connector.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - ADAS control unit
 - ICC sensor
2. Check the continuity between the ADAS control unit harness connector and the ICC sensor harness connector.

ADAS control unit harness connector		ICC sensor harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B61	7	E65	3	Existed
	8		6	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the ADAS control unit branch line. (ITS communication circuit). Refer to [LAN-57, "System Diagram"](#).

4.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar RH
 - Side radar LH
 - Lane camera unit
 - Accelerator pedal actuator
2. Check the continuity between the ADAS control unit harness connector terminals.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
B61	7	8	Not existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Check the harness and repair the root cause.

ITS COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

5.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the ADAS control unit harness connector and the ground.

ADAS control unit harness connector		Ground	Continuity
Connector No.	Terminal No.		
B61	7		Not existed
	8		Not existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Check the harness and repair the root cause.

6.CHECK TERMINATION CIRCUIT

1. Remove the ADAS control unit and the ICC sensor.
2. Check the resistance between the ADAS control unit terminals.

ADAS control unit		Resistance (Ω)
Terminal No.		
7	8	Approx. 108 – 132

3. Check the resistance between the ICC sensor terminals.

ICC sensor		Resistance (Ω)
Terminal No.		
3	6	Approx. 108 – 132

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace the ADAS control unit and/or the ICC sensor.

7.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

Inspection result

Reproduced>>GO TO 8.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

8.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of ITS communication circuit.

NOTE:

ADAS control unit and ICC sensor have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000006238427

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIR BAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:


- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:0000000006220574

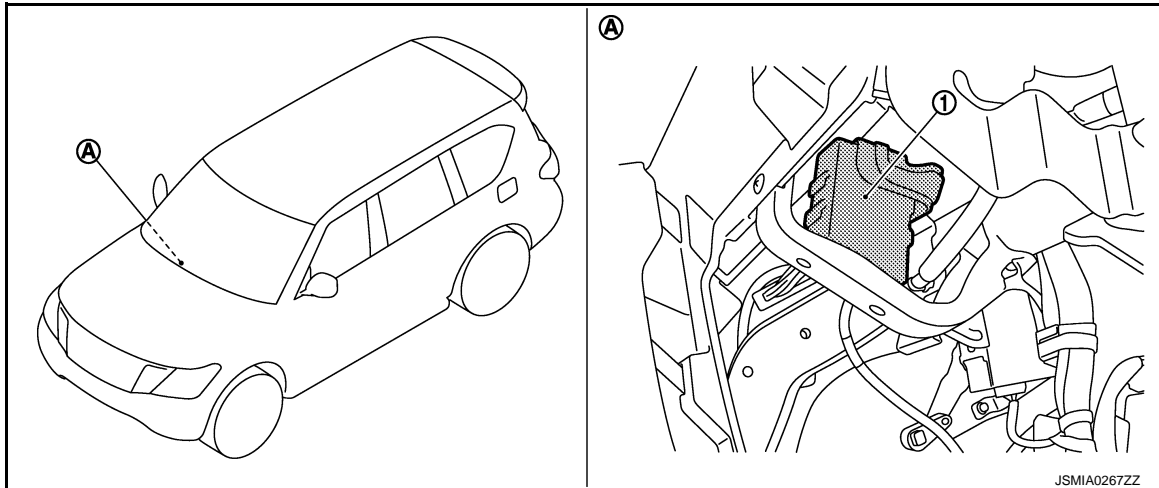

- 1. CAN gateway
- A. Over the glove box

A
B
C
D
E
F
G
H
I
J
K
L


LAN

N
O
P

SYSTEM

System Description

INFOID:000000006220575

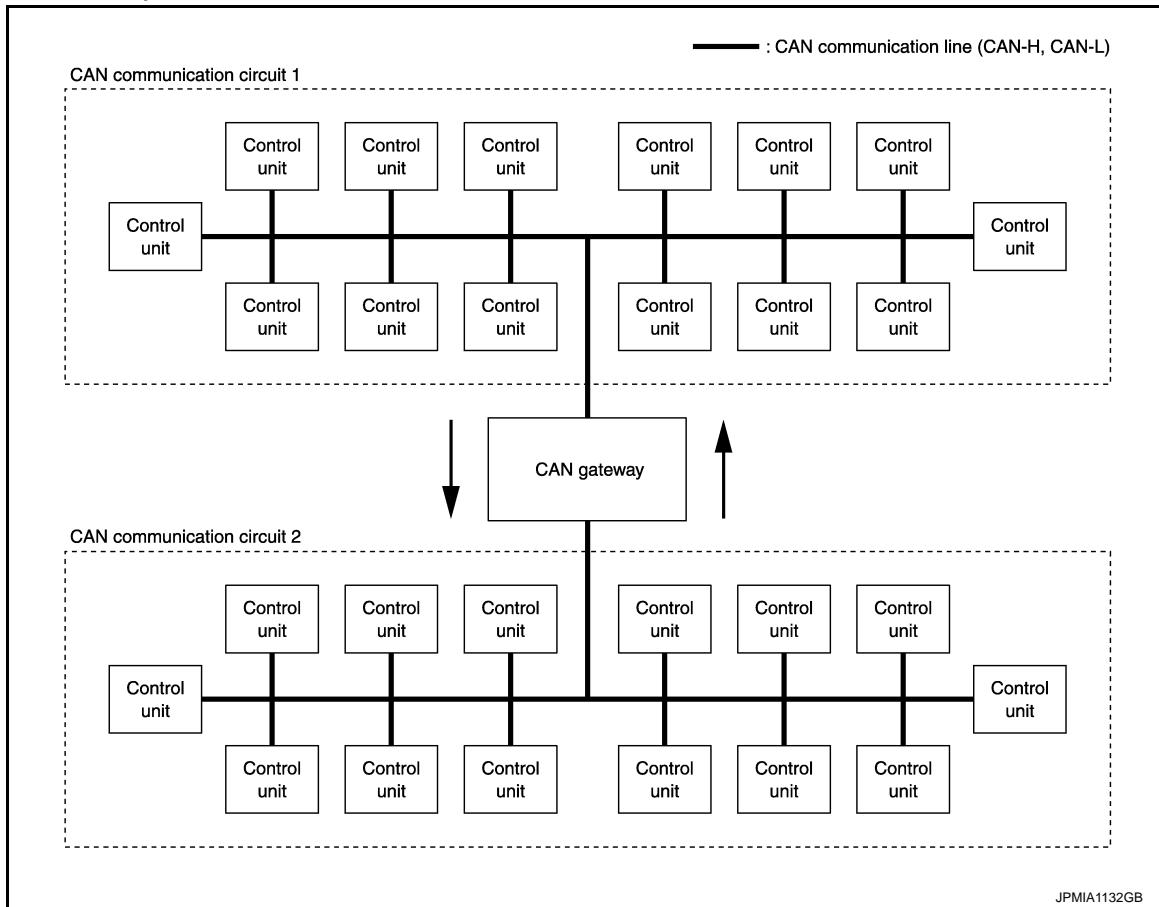

- The CAN gateway system communicates between two CAN communication circuits.
- This system selects and transmits only necessary information.

DIAGNOSIS SYSTEM (CAN GATEWAY)

[CAN GATEWAY]

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (CAN GATEWAY)

CONSULT-III Function

INFOID:000000006220576

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with CAN gateway.

Diagnosis mode	Function Description
Ecu Identification	The CAN gateway part number is displayed.
Self Diagnostic Result	Displays the diagnosis results judged by CAN gateway.
CAN Diag Support Monitor	The results of transmit/receive diagnosis of CAN communication can be read.
Configuration	<ul style="list-style-type: none">Read and save the vehicle specification.Write the vehicle specification when replacing CAN gateway.

SELF DIAGNOSTIC RESULT

Refer to [LAN-106, "DTC Index"](#).

LAN


ECU DIAGNOSIS INFORMATION

CAN GATEWAY

Reference Value

INFOID:000000006220577

TERMINAL LAYOUT

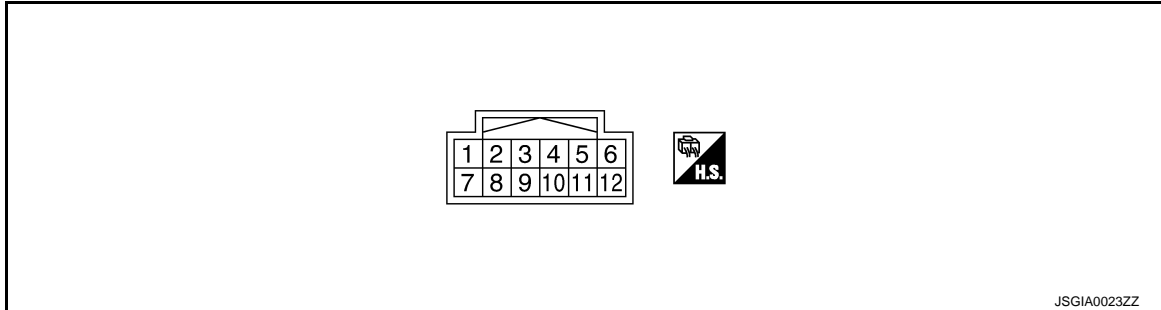

JSGIA0023ZZ

PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	—	Signal name	Input/ Output		
1 (L)	—	CAN-H (CAN communication circuit 1)	Input/ Output	—	—
3 (Y)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage
4 (L)	—	CAN-H (CAN communication circuit 2)	Input/ Output	—	—
5 (B)	Ground	Ground	—	Ignition switch ON	0 V
6 (L)	—	CAN-H (CAN communication circuit 2)	Input/ Output	—	—
7 (P)	—	CAN-L (CAN communication circuit 1)	Input/ Output	—	—
9 (GR)	Ground	Ignition power supply	Input	Ignition switch ON	Battery voltage
10 (R)	—	CAN-L (CAN communication circuit 2)	Input/ Output	—	—
11 (B)	Ground	Ground	—	Ignition switch ON	0 V
12 (R)	—	CAN-L (CAN communication circuit 2)	Input/ Output	—	—

DTC Inspection Priority Chart

INFOID:000000006220578

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	<ul style="list-style-type: none"> • B2600: CONFIG ERROR • U1010: CONTROL UNIT(CAN)
2	U1000: CAN COMM CIRCUIT

DTC Index

INFOID:000000006220579

NOTE:

CAN GATEWAY

[CAN GATEWAY]

< ECU DIAGNOSIS INFORMATION >

- The details of time display are as follows.
- CRNT: A malfunction is detected now
- PAST: A malfunction was detected in the past.
- IGN counter is displayed on FFD (Freeze Frame Data).
- The number is 0 when is detected now
- The number increases like 1 → 2 ... 38 → 39 after returning to the normal condition whenever IGN OFF → ON.
- The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

DTC		Reference
No DTC is detected. Further testing may be required.		—
U1000: CAN COMM CIRCUIT		LAN-113
U1010: CONTROL UNIT(CAN)		LAN-114
B2600: CONFIG ERROR	WRONG DATA	LAN-115
	NOT CONFIGURED	

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O


P

WIRING DIAGRAM

CAN GATEWAY SYSTEM

Wiring Diagram

INFOID:000000006220580

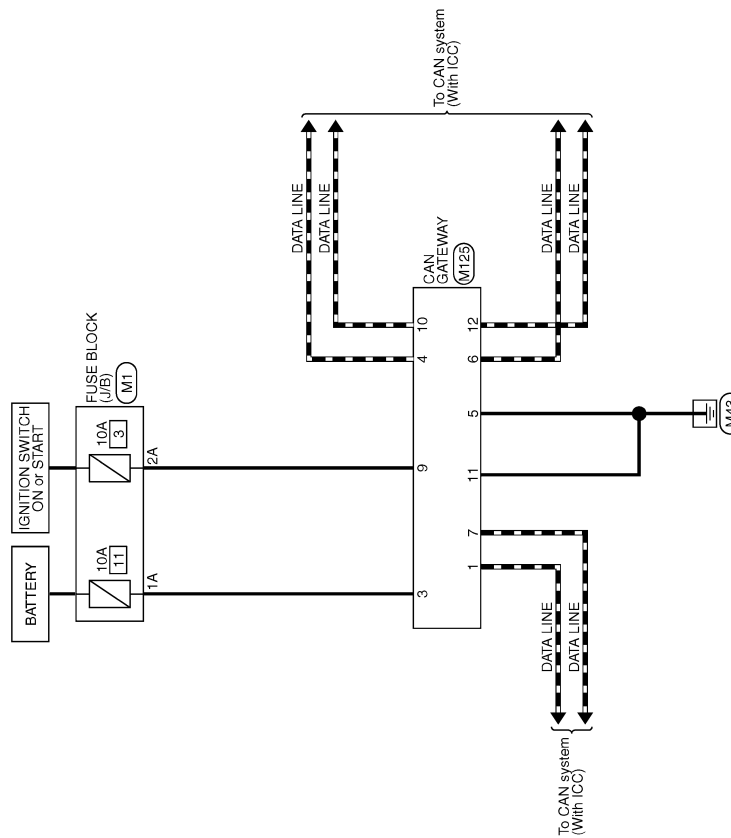

CAN GATEWAY SYSTEM



2010/05/13

JCMWM8323GB

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

CAN GATEWAY SYSTEM



Connector No.	IM1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS8FW-M2



Terminal No.	Color of Wire	Signal Name [Specification]
1A	Y	-
2A	GR	-
3A	W	-
4A	Y/G	-
5A	V	-
6A	L/W	-
7A	LG	-
8A	W	-

IM25

Connector No.	IM25
Connector Name	CAN GATEWAY
Connector Type	TH12FW-NH

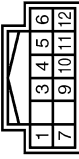

Terminal No.	Color of Wire	Signal Name [Specification]
1	L	CAN-H
3	Y	BATTERY
4	L	CAN-H
5	B	GND
6	L	CAN-H
7	P	CAN-L
9	GR	IGNITION
10	R	CAN-L
11	B	GND
12	R	CAN-L

JCMWM8324GB

LAN

Revision: 2010 May

LAN-109

2011 QX56

BASIC INSPECTION

ADDITIONAL SERVICE WHEN REPLACING CAN GATEWAY

Description

INFOID:000000006220581

BEFORE REPLACEMENT

When replacing CAN gateway, save or print current vehicle specification with CONSULT-III configuration before replacement.

NOTE:

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual selection" after replacing CAN gateway.

AFTER REPLACEMENT

CAUTION:

- When replacing CAN gateway, you must perform "WRITE CONFIGURATION" with CONSULT-III.
- Complete the procedure of "WRITE CONFIGURATION" in order.
- If you set incorrect "WRITE CONFIGURATION", incidents might occur.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.
- Never perform "WRITE CONFIGURATION" except for new CAN gateway.

Work Procedure

INFOID:000000006220582

1.SAVING VEHICLE SPECIFICATION

CONSULT-III Configuration

Perform "READ CONFIGURATION" to save or print current vehicle specification. Refer to [LAN-111, "Description"](#).

NOTE:

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual selection" after replacing CAN gateway.

>> GO TO 2.

2.REPLACE CAN GATEWAY

Replace CAN gateway. Refer to [LAN-117, "Removal and Installation"](#).

>> GO TO 3.

3.WRITING VEHICLE SPECIFICATION

CONSULT-III Configuration

Perform "WRITE CONFIGURATION - Config file" or "WRITE CONFIGURATION - Manual selection" to write vehicle specification. Refer to [LAN-111, "Work Procedure"](#).

>> WORK END

CONFIGURATION (CAN GATEWAY)

Description

INFOID:000000006220583

Vehicle specification needs to be written with CONSULT-III because it is not written after replacing CAN gateway.

Configuration has three functions as follows

Function	Description
READ CONFIGURATION	<ul style="list-style-type: none"> Reads the vehicle configuration of current CAN gateway. Saves the read vehicle configuration.
WRITE CONFIGURATION - Manual selection	Writes the vehicle configuration with manual selection.
WRITE CONFIGURATION - Config file	Writes the vehicle configuration with saved data.


CAUTION:

- When replacing CAN gateway, you must perform "WRITE CONFIGURATION" with CONSULT-III.
- Complete the procedure of "WRITE CONFIGURATION" in order.
- If you set incorrect "WRITE CONFIGURATION", incidents might occur.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.
- Never perform "WRITE CONFIGURATION" except for new CAN gateway.

Work Procedure

INFOID:000000006220584

1. WRITING MODE SELECTION


 CONSULT-III Configuration

Select "CONFIGURATION" of CAN gateway.

When writing saved data>>GO TO 2.

When writing manually>>GO TO 3.


2. PERFORM "WRITE CONFIGURATION - CONFIG FILE"

 CONSULT-III Configuration

Perform "WRITE CONFIGURATION - Config file".

>> WORK END

3. PERFORM "WRITE CONFIGURATION - MANUAL SELECTION"

 CONSULT-III Configuration

- Select "WRITE CONFIGURATION - Manual selection".
- Select "SETTING".
- When "COMMAND FINISHED", select "End".

>> GO TO 4.

4. CHECK "SELF DIAGNOSTIC RESULT"

- Erase all ECU self-diagnosis results using CONSULT-III.
- Turn the ignition switch OFF.
- Turn the ignition switch ON and wait for 2 seconds or more.
- Perform "All DTC Reading" using CONSULT-III.
- Check that all ECU self-diagnosis results have no DTC of CAN communication.

NOTE:

DTCs of CAN communication are as follows:

- U0101
- U0140
- U0164
- U1000
- U1001
- U1507

CONFIGURATION (CAN GATEWAY)

< BASIC INSPECTION >

[CAN GATEWAY]

- U1508

>> WORK END

DTC/CIRCUIT DIAGNOSIS**U1000 CAN COMM CIRCUIT****Description**

INFOID:0000000006220585

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with two communication lines (CAN-H and CAN-L) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Signal Chart. Refer to [LAN-28, "CAN COMMUNICATION SYSTEM : CAN Communication Signal Chart"](#).

DTC Logic

INFOID:0000000006220586

DTC DETECTION LOGIC

DTC	CONSULT-III display description	DTC Detection Condition	Possible cause
U1000	CAN COMM CIRCUIT	When CAN gateway cannot communicate CAN communication signal continuously for 2 seconds or more.	CAN communication system

Diagnosis Procedure

INFOID:0000000006220587

1.PERFORM SELF DIAGNOSTIC

1. Turn the ignition switch ON and wait for 2 seconds or more.
2. Check "Self Diagnostic Result".

Is "U1000: CAN COMM CIRCUIT" displayed?

- YES >> Refer to [LAN-18, "Trouble Diagnosis Flow Chart"](#).
 NO >> Refer to [GI-40, "Intermittent Incident"](#).

U1010 CONTROL UNIT (CAN)

Description

INFOID:000000006220588

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with two communication lines (CAN-H and CAN-L) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Signal Chart. Refer to [LAN-28, "CAN COMMUNICATION SYSTEM : CAN Communication Signal Chart"](#).

DTC Logic

INFOID:000000006220589

DTC DETECTION LOGIC

DTC	CONSULT-III display description	DTC Detection Condition	Possible cause
U1010	CONTROL UNIT(CAN)	When an error is detected during the initial diagnosis for CAN controller of CAN gateway.	CAN gateway

Diagnosis Procedure

INFOID:000000006220590

1.REPLACE CAN GATEWAY

When DTC "U1010: CONTROL UNIT(CAN)" is detected, replace CAN gateway.

>> Replace CAN gateway. Refer to [LAN-117, "Removal and Installation"](#).

B2600 CONFIG ERROR

< DTC/CIRCUIT DIAGNOSIS >

[CAN GATEWAY]

B2600 CONFIG ERROR

Description

INFOID:000000006220591

The CAN gateway requires initial settings to judge necessary information, according to a vehicle specification.

DTC Logic

INFOID:000000006220592

DTC DETECTION LOGIC

DTC	CONSULT-III display description	DTC Detection Condition	Probable cause
B2600	CONFIG ERROR WRONG DATA	When errors are detected in the configuration data stored in the CAN gateway.	CAN gateway
	CONFIG ERROR NOT CONFIGURED	When no data are stored in the CAN gateway.	

Diagnosis Procedure

INFOID:000000006220593

1.REPLACE CAN GATEWAY

When DTC "B2600: CONFIG ERROR" is detected, replace CAN gateway.

>> Replace CAN gateway. Refer to [LAN-117, "Removal and Installation"](#).

LAN

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN GATEWAY]

POWER SUPPLY AND GROUND CIRCUIT

Diagnosis Procedure

INFOID:000000006220594

1.CHECK FUSE

Check that the following fuse are not blown.

Signal name	Fuse No.
Battery power supply	11
Ignition power supply	3

Is the fuse fusing?

YES >> Replace the blown fuse after repairing the affected circuit if a fuse is blown.

NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect the connector of CAN gateway.
3. Check voltage between CAN gateway harness connector and ground.

Terminals		Condition	Voltage (Approx.)
(+)	(-)		
CAN gateway		Ignition switch	
Connector	Terminal		
M125	3	OFF	Battery voltage
	9	ON	Battery voltage

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3.CHECK GROUND CIRCUIT

Check continuity between CAN gateway harness connector and ground.

CAN gateway		Ground	Continuity
Connector	Terminal		
M125	5		Existed
	11		

Does continuity exist?

YES >> INSPECTION END

NO >> Repair harness or connector.

REMOVAL AND INSTALLATION

CAN GATEWAY

Removal and Installation

INFOID:0000000006220595

CAUTION:

Before replacing CAN gateway, perform "READ CONFIGURATION" to save or print current vehicle specification. Refer to [LAN-110, "Description"](#).

REMOVAL

1. Remove glove box assembly. Refer to [IP-14, "Removal and Installation"](#).
2. Disconnect CAN gateway connector.
3. Remove mounting screw to remove CAN gateway.

INSTALLATION

Install in the reverse order of removal.

CAUTION:

Be sure to perform "WRITE CONFIGURATION" when replacing CAN gateway. Refer to [LAN-110, "Description"](#).

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN ABS AND DLC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN ABS AND DLC CIRCUIT

Diagnosis Procedure

INFOID:000000006256233

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector E107
 - Harness connector M82

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - ABS actuator and electric unit (control unit)
 - Harness connectors E107 and M82
2. Check the continuity between the ABS actuator and electric unit (control unit) harness connector and the harness connector.

ABS actuator and electric unit (control unit) harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E36	41	E107	1	Existed
	27		6	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the ABS actuator and electric unit (control unit) and the harness connector E107.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector and the data link connector.

Harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M82	1	M4	6	Existed
	6		14	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the ABS actuator and electric unit (control unit) and the data link connector.

NO >> Repair the main line between the harness connector M82 and the data link connector.

MAIN LINE BETWEEN DLC AND E-SUS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

MAIN LINE BETWEEN DLC AND E-SUS CIRCUIT

Diagnosis Procedure

INFOID:000000006256234

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M19
 - Harness connector B2

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M19 and B2.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M4	6	M19	29	Existed
	14		30	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the data link connector and the harness connector M19.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of air levelizer control module.
2. Check the continuity between the harness connector and the air levelizer control module harness connector.

Harness connector		Air levelizer control module harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B2	29	B84	16	Existed
	30		7	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the air levelizer control module.

NO >> Repair the main line between the harness connector B2 and the air levelizer control module.

LAN

MAIN LINE BETWEEN E-SUS AND ADP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

MAIN LINE BETWEEN E-SUS AND ADP CIRCUIT

Diagnosis Procedure

INFOID:000000006256235

1.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Air levelizer control module
 - Harness connectors B24 and B460
4. Check the continuity between the air levelizer control module harness connector and the harness connector.

Air levelizer control module harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B84	16	B24	13	Existed
	7		12	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the air levelizer control module and the driver seat control unit.

NO >> Repair the main line between the air levelizer control module and the harness connector B24.

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256240

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ECM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E80	146	151	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ECM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to [EC-168. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ECM. Refer to [EC-535. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ECM branch line.
NO >> Repair the power supply and the ground circuit.

LAN

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256242

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E36	41	27	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-113. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-137. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.
NO >> Repair the power supply and the ground circuit.

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256243

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - A/T assembly
 - Harness connector F1
 - Harness connector E7

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/T assembly.
2. Check the resistance between the A/T assembly harness connector terminals.

A/T assembly harness connector			Resistance (Ω)
Connector No.	Terminal No.		
F51	3	8	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the TCM branch line.

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Remove the joint connector. Refer to [TM-182, "Removal and Installation"](#).
2. Check the continuity between the A/T assembly harness connector side and the TCM harness connector side of the joint connector.

A/T assembly harness connector side	TCM harness connector side	Continuity
Terminal No.	Terminal No.	
3	3	Existed
8	8	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the joint connector.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-151, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the control valve & TCM. Refer to [TM-182, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the TCM branch line.

NO >> Repair the power supply and the ground circuit.

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256244

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the main harness.

2.CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-36, "Work Flow"](#).

Is the inspection result normal?

YES >> Replace the main harness.

NO >> Replace parts whose air bag system has a malfunction.

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256246

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - AV control unit
 - Harness connector M222
 - Harness connector M119

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
2. Check the resistance between the AV control unit harness connector terminals.

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M210	90	74	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> Repair the AV control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to [AV-161, "AV CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the AV control unit. Refer to [AV-212, "Removal and Installation"](#).
 YES (Past error)>>Error was detected in the AV control unit branch line.
 NO >> Repair the power supply and the ground circuit.

LAN

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256247

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M68	39	40	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> Repair the BCM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-75. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to [BCS-81. "Removal and Installation"](#).
 YES (Past error)>>Error was detected in the BCM branch line.
 NO >> Repair the power supply and the ground circuit.

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256250

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M4	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit.

NO >> Repair the data link connector branch line.

LAN

HVAC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256251

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the A/C auto amp. for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/C auto amp.
2. Check the resistance between the A/C auto amp. harness connector terminals.

A/C auto amp. harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M50	1	21	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the A/C auto amp. branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the A/C auto amp. Refer to [HAC-110, "A/C AUTO AMP. : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the A/C auto amp. Refer to [HAC-146, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the A/C auto amp. branch line.

NO >> Repair the power supply and the ground circuit.

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256252

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M34	21	22	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the combination meter branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to [MWI-64, "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the combination meter. Refer to [MWI-85, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the combination meter branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256253

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M30	5	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the steering angle sensor branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to [BRC-53, "Wiring Diagram"](#).

Is the inspection result normal?

YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-139, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the steering angle sensor branch line.

NO >> Repair the power supply and the ground circuit.

TPMS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

TPMS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256254

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the low tire pressure warning control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of low tire pressure warning control unit.
2. Check the resistance between the low tire pressure warning control unit harness connector terminals.

Low tire pressure warning control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M96	2	1	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the low tire pressure warning control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the low tire pressure warning control unit. Refer to [WT-51, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the low tire pressure warning control unit. Refer to [WT-65, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the low tire pressure warning control unit branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256255

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - IPDM E/R
 - Harness connector E105
 - Harness connector M77
 - Harness connector M19 (Without ICC system)
 - Harness connector B2 (Without ICC system)

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E13	27	26	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the IPDM E/R branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-31. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-32. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the IPDM E/R branch line.

NO >> Repair the power supply and the ground circuit.

ADP BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256256

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Driver seat control unit
 - Harness connector B460
 - Harness connector B24
 - CAN gateway (With ICC system)

Is the inspection result normal?

YES (With ICC system)>>GO TO 2.

YES (Without ICC system)>>GO TO 3.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (CAN communication circuit 2). Refer to [LAN-57, "System Diagram"](#).

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway. (With ICC system)
2. Disconnect the connector of driver seat control unit.
3. Check the resistance between the driver seat control unit harness connector terminals.

Driver seat control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B451	1	17	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the driver seat control unit branch line.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the driver seat control unit. Refer to [ADP-67, "DRIVER SEAT CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the driver seat control unit. Refer to [ADP-135, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the driver seat control unit branch line.

NO >> Repair the power supply and the ground circuit.

E-SUS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256258

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Air levelizer control module
 - CAN gateway (With ICC system)

Is the inspection result normal?

YES (With ICC system)>>GO TO 2.

YES (Without ICC system)>>GO TO 3.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (CAN communication circuit 2). Refer to [LAN-57, "System Diagram"](#).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway. (With ICC system)
2. Disconnect the connector of air levelizer control module.
3. Check the resistance between the air levelizer control module harness connector terminals.

Air levelizer control module harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B84	16	7	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the air levelizer control module branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the air levelizer control module. Refer to [SCS-89, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the air levelizer control module. Refer to [SCS-94, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the air levelizer control module branch line.

NO >> Repair the power supply and the ground circuit.

PWBD BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256260

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Automatic back door control module
 - CAN gateway (With ICC system)

Is the inspection result normal?

YES (With ICC system)>>GO TO 2.

YES (Without ICC system)>>GO TO 3.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector		Continuity
Connector No.	Terminal No.	
M125	4	Existed
	10	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (CAN communication circuit 2). Refer to [LAN-57, "System Diagram"](#).

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway. (With ICC system)
2. Disconnect the connector of automatic back door control module.
3. Check the resistance between the automatic back door control module harness connector terminals.

Automatic back door control module harness connector		Resistance (Ω)
Connector No.	Terminal No.	
B26	7	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the automatic back door control module branch line.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the automatic back door control module. Refer to [DLK-116, "AUTOMATIC BACK DOOR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the automatic back door control module. Refer to [DLK-262, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the automatic back door control module branch line.

NO >> Repair the power supply and the ground circuit.

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000006256274

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit.
4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		
M4	6	14	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M4	6		Not existed
	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair the root cause.

4.CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		
146	151	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

IPDM E/R		Resistance (Ω)
Terminal No.		
27	26	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

MAIN LINE BETWEEN ABS AND DLC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN ABS AND DLC CIRCUIT

Diagnosis Procedure

INFOID:000000006256279

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector E107
 - Harness connector M82

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - ABS actuator and electric unit (control unit)
 - Harness connectors E107 and M82
2. Check the continuity between the ABS actuator and electric unit (control unit) harness connector and the harness connector.

ABS actuator and electric unit (control unit) harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E36	41	E107	1	Existed
	27		6	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the ABS actuator and electric unit (control unit) and the harness connector E107.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector and the data link connector.

Harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M82	1	M4	6	Existed
	6		14	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the ABS actuator and electric unit (control unit) and the data link connector.

NO >> Repair the main line between the harness connector M82 and the data link connector.

MAIN LINE BETWEEN ADP AND PWBD CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

MAIN LINE BETWEEN ADP AND PWBD CIRCUIT

Diagnosis Procedure

INFOID:000000006256282

1.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - CAN gateway
 - Harness connectors B460 and B24
 - Automatic back door control module
4. Check the continuity between the harness connector and the automatic back door control module harness connector.

Harness connector		Automatic back door control module harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B24	13	B26	7	Existed
	12		6	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the driver seat control unit and the automatic back door control module.

NO >> Repair the main line between the harness connector B24 and the automatic back door control module.

LAN

MAIN LINE BETWEEN RDR-R AND RDR-L CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

MAIN LINE BETWEEN RDR-R AND RDR-L CIRCUIT

Diagnosis Procedure

INFOID:000000006256283

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B239
 - Harness connector B63

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar RH
 - Harness connectors B239 and B63
2. Check the continuity between the side radar RH harness connector and the harness connector.

Side radar RH harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B243	4	B239	7	Existed
	3		3	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the side radar RH and the harness connector B239.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of side radar LH.
2. Check the continuity between the harness connector and the side radar LH harness connector.

Harness connector		Side radar LH harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B63	7	B74	4	Existed
	3		3	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the side radar RH and the side radar LH.

NO >> Repair the main line between the harness connector B63 and the side radar LH.

MAIN LINE BETWEEN RDR-L AND LANE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

MAIN LINE BETWEEN RDR-L AND LANE CIRCUIT

Diagnosis Procedure

INFOID:000000006256284

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B2
 - Harness connector M19
 - Harness connector M23
 - Harness connector R1

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar LH
 - Harness connectors B2 and M19
2. Check the continuity between the side radar LH harness connector and the harness connector.

Side radar LH harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B74	4	B2	27	Existed
	3		28	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the side radar LH and the harness connector B2.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M23 and R1.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M19	27	M23	26	Existed
	28		23	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M19 and M23.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of lane camera unit.
2. Check the continuity between the harness connector and the lane camera unit harness connector.

Harness connector		Lane camera unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
R1	26	R8	4	Existed
	23		8	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the side radar LH and the lane camera unit.

MAIN LINE BETWEEN RDR-L AND LANE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

NO >> Repair the main line between the harness connector R1 and the lane camera unit.

MAIN LINE BETWEEN LANE AND APA CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

MAIN LINE BETWEEN LANE AND APA CIRCUIT

Diagnosis Procedure

INFOID:000000006256285

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector R1
 - Harness connector M23
 - Harness connector M77
 - Harness connector E105

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors R1 and M23.
2. Check the continuity between the harness connector terminals.

Connector No.		Terminal No.		Continuity
R1		26	29	Existed
		23	28	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the lane camera unit and the harness connector R1.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M77 and E105.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M23	29	M77	22	Existed
	28		23	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M23 and M77.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of accelerator pedal actuator.
2. Check the continuity between the harness connector and the accelerator pedal actuator harness connector.

Harness connector		Accelerator pedal actuator harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E105	22	E66	5	Existed
	23		4	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the lane camera unit and the accelerator pedal actuator.

NO >> Repair the main line between the harness connector E105 and the accelerator pedal actuator.

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256286

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ECM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E80	146	151	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ECM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to [EC-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the ECM. Refer to [EC-535, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the ECM branch line.

NO >> Repair the power supply and the ground circuit.

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256288

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E36	41	27	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-113, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-137, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.
NO >> Repair the power supply and the ground circuit.

LAN

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256289

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - A/T assembly
 - Harness connector F1
 - Harness connector E7

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/T assembly.
2. Check the resistance between the A/T assembly harness connector terminals.

A/T assembly harness connector			Resistance (Ω)
Connector No.	Terminal No.		
F51	3	8	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the TCM branch line.

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Remove the joint connector. Refer to [TM-182, "Removal and Installation"](#).
2. Check the continuity between the A/T assembly harness connector side and the TCM harness connector side of the joint connector.

A/T assembly harness connector side	TCM harness connector side	Continuity
Terminal No.	Terminal No.	
3	3	Existed
8	8	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the joint connector.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-151, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the control valve & TCM. Refer to [TM-182, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the TCM branch line.

NO >> Repair the power supply and the ground circuit.

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256290

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the main harness.

2. CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-36, "Work Flow"](#).

Is the inspection result normal?

YES >> Replace the main harness.

NO >> Replace parts whose air bag system has a malfunction.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

AFS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256291

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the AFS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AFS control unit.
2. Check the resistance between the AFS control unit harness connector terminals.

AFS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M135	30	7	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the AFS control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AFS control unit. Refer to [EXL-84, "AFS CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the AFS control unit. Refer to [EXL-135, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the AFS control unit branch line.

NO >> Repair the power supply and the ground circuit.

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256292

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - AV control unit
 - Harness connector M222
 - Harness connector M119

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
2. Check the resistance between the AV control unit harness connector terminals.

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M210	90	74	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> Repair the AV control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to [AV-161, "AV CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the AV control unit. Refer to [AV-212, "Removal and Installation"](#).
 YES (Past error)>>Error was detected in the AV control unit branch line.
 NO >> Repair the power supply and the ground circuit.

LAN

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256293

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M68	39	40	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> Repair the BCM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-75. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to [BCS-81. "Removal and Installation"](#).
 YES (Past error)>>Error was detected in the BCM branch line.
 NO >> Repair the power supply and the ground circuit.

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

Diagnosis Procedure

INFOID:000000006256294

1.CHECK DTC

Check DTC of the CAN gateway with CONSULT-III.

Is U1010 or B2600 indicated?

- YES >> Perform a diagnosis of the indicated DTC.
NO >> GO TO 2.

2.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the CAN gateway for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair the terminal and connector.

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of CAN gateway.
2. Check the resistance between the CAN gateway harness connector terminals.

CAN gateway harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M125	1	7	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 4.
NO >> Repair the CAN gateway branch line (CAN communication circuit 1). Refer to [LAN-57, "System Diagram"](#).

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the CAN gateway. Refer to [LAN-116, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the CAN gateway. Refer to [LAN-117, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the CAN gateway branch line (CAN communication circuit 1).
NO >> Repair the power supply and the ground circuit.

LAN

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

Diagnosis Procedure

INFOID:000000006256295

1.CHECK DTC

Check DTC of the CAN gateway with CONSULT-III.

Is U1010 or B2600 indicated?

YES >> Perform a diagnosis of the indicated DTC.

NO >> GO TO 2.

2.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - CAN gateway
 - Harness connector M19
 - Harness connector B2

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the terminal and connector.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the CAN gateway branch line (CAN communication circuit 2). Refer to [LAN-57. "System Diagram"](#).

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the CAN gateway. Refer to [LAN-116. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the CAN gateway. Refer to [LAN-117. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the CAN gateway branch line (CAN communication circuit 2).

NO >> Repair the power supply and the ground circuit.

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256296

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M4	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit.

NO >> Repair the data link connector branch line.

LAN

HVAC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256297

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the A/C auto amp. for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/C auto amp.
2. Check the resistance between the A/C auto amp. harness connector terminals.

A/C auto amp. harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M50	1	21	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the A/C auto amp. branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the A/C auto amp. Refer to [HAC-110, "A/C AUTO AMP. : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the A/C auto amp. Refer to [HAC-146, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the A/C auto amp. branch line.

NO >> Repair the power supply and the ground circuit.

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256298

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M34	21	22	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the combination meter branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to [MWI-64, "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the combination meter. Refer to [MWI-85, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the combination meter branch line.
NO >> Repair the power supply and the ground circuit.

LAN

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256299

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M30	5	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the steering angle sensor branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to [BRC-53, "Wiring Diagram"](#).

Is the inspection result normal?

YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-139, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the steering angle sensor branch line.

NO >> Repair the power supply and the ground circuit.

TPMS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

TPMS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256300

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the low tire pressure warning control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of low tire pressure warning control unit.
2. Check the resistance between the low tire pressure warning control unit harness connector terminals.

Low tire pressure warning control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M96	2	1	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the low tire pressure warning control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the low tire pressure warning control unit. Refer to [WT-51, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the low tire pressure warning control unit. Refer to [WT-65, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the low tire pressure warning control unit branch line.
NO >> Repair the power supply and the ground circuit.

LAN

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256301

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - IPDM E/R
 - Harness connector E105
 - Harness connector M77
 - Harness connector M19 (Without ICC system)
 - Harness connector B2 (Without ICC system)

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E13	27	26	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the IPDM E/R branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-31. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-32. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the IPDM E/R branch line.

NO >> Repair the power supply and the ground circuit.

ADP BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256302

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Driver seat control unit
 - Harness connector B460
 - Harness connector B24
 - CAN gateway (With ICC system)

Is the inspection result normal?

YES (With ICC system)>>GO TO 2.

YES (Without ICC system)>>GO TO 3.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (CAN communication circuit 2). Refer to [LAN-57, "System Diagram"](#).

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway. (With ICC system)
2. Disconnect the connector of driver seat control unit.
3. Check the resistance between the driver seat control unit harness connector terminals.

Driver seat control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B451	1	17	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the driver seat control unit branch line.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the driver seat control unit. Refer to [ADP-67, "DRIVER SEAT CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?YES (Present error)>>Replace the driver seat control unit. Refer to [ADP-135, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the driver seat control unit branch line.

NO >> Repair the power supply and the ground circuit.

PSB BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256303

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Pre-crash seat belt control unit (driver side)
 - CAN gateway

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (CAN communication circuit 2). Refer to [LAN-57, "System Diagram"](#).

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway.
2. Disconnect the connector of pre-crash seat belt control unit (driver side).
3. Check the resistance between the pre-crash seat belt control unit (driver side) harness connector terminals.

Pre-crash seat belt control unit (driver side) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B9	14	4	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the pre-crash seat belt control unit (driver side) branch line.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the pre-crash seat belt control unit (driver side). Refer to [SBC-52, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the seat belt pre-tensioner retractor (LH side). Refer to [SB-6, "SEAT BELT RETRACTOR : Removal and Installation"](#).

YES (Past error)>>Error was detected in the pre-crash seat belt control unit (driver side) branch line.

NO >> Repair the power supply and the ground circuit.

E-SUS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

E-SUS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256304

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Air levelizer control module
 - CAN gateway (With ICC system)

Is the inspection result normal?

YES (With ICC system)>>GO TO 2.

YES (Without ICC system)>>GO TO 3.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector		Continuity
Connector No.	Terminal No.	
M125	4	Existed
	10	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (CAN communication circuit 2). Refer to [LAN-57, "System Diagram"](#).

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway. (With ICC system)
2. Disconnect the connector of air levelizer control module.
3. Check the resistance between the air levelizer control module harness connector terminals.

Air levelizer control module harness connector		Resistance (Ω)
Connector No.	Terminal No.	
B84	16	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the air levelizer control module branch line.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the air levelizer control module. Refer to [SCS-89, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the air levelizer control module. Refer to [SCS-94, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the air levelizer control module branch line.

NO >> Repair the power supply and the ground circuit.

ICC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256305

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ADAS control unit
 - CAN gateway

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (CAN communication circuit 2). Refer to [LAN-57, "System Diagram"](#).

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway.
2. Disconnect the connector of ADAS control unit.
3. Check the resistance between the ADAS control unit harness connector terminals.

ADAS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B61	14	15	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the ADAS control unit branch line.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ADAS control unit. Refer to [DAS-62, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the ADAS control unit. Refer to [DAS-63, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the ADAS control unit branch line.

NO >> Repair the power supply and the ground circuit.

PWBD BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256306

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Automatic back door control module
 - CAN gateway (With ICC system)

Is the inspection result normal?

YES (With ICC system)>>GO TO 2.

YES (Without ICC system)>>GO TO 3.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector		Continuity
Connector No.	Terminal No.	
M125	4	Existed
	10	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (CAN communication circuit 2). Refer to [LAN-57, "System Diagram"](#).

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway. (With ICC system)
2. Disconnect the connector of automatic back door control module.
3. Check the resistance between the automatic back door control module harness connector terminals.

Automatic back door control module harness connector		Resistance (Ω)
Connector No.	Terminal No.	
B26	7	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the automatic back door control module branch line.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the automatic back door control module. Refer to [DLK-116, "AUTOMATIC BACK DOOR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the automatic back door control module. Refer to [DLK-262, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the automatic back door control module branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

RDR-R BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256307

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the side radar RH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2.CHECK RIGHT/LEFT SWITCHING SIGNAL CIRCUIT

Check the right/left switching signal circuit of the side radar RH. Refer to [DAS-514. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> Repair the root cause.

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of side radar RH.
2. Check the resistance between the side radar RH harness connector terminals.

Side radar RH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B243	4	3	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 4.
 NO >> Repair the side radar RH branch line.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar RH. Refer to [DAS-513. "SIDE RADAR RH: Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the side radar RH. Refer to [DAS-523. "Removal and Installation"](#).
 YES (Past error)>>Error was detected in the side radar RH branch line.
 NO >> Repair the power supply and the ground circuit.

RDR-L BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

RDR-L BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256308

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the side radar LH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of side radar LH.
2. Check the resistance between the side radar LH harness connector terminals.

Side radar LH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B74	4	3	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the side radar LH branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar LH. Refer to [DAS-512, "SIDE RADAR LH: Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the side radar LH. Refer to [DAS-523, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the side radar LH branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

LANE BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256309

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the lane camera unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of lane camera unit.
2. Check the resistance between the lane camera unit harness connector terminals.

Lane camera unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
R8	4	8	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the lane camera unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the lane camera unit. Refer to [DAS-387, "LANE CAMERA UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the lane camera unit. Refer to [DAS-403, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the lane camera unit branch line.

NO >> Repair the power supply and the ground circuit.

APA BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256310

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the accelerator pedal actuator for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of accelerator pedal actuator.
2. Check the resistance between the accelerator pedal actuator harness connector terminals.

Accelerator pedal actuator harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E66	5	4	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the accelerator pedal actuator branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the accelerator pedal actuator. Refer to [DAS-195, "ACCELERATOR PEDAL ACTUATOR : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the accelerator pedal assembly. Refer to [ACC-4, "MODELS WITH DISTANCE CONTROL ASSIST SYSTEM : Removal and Installation"](#).
YES (Past error)>>Error was detected in the accelerator pedal actuator branch line.
NO >> Repair the power supply and the ground circuit.

LAN

LASER BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256311

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ICC sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ICC sensor.
2. Check the resistance between the ICC sensor harness connector terminals.

ICC sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E65	3	6	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ICC sensor branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ICC sensor. Refer to [CCS-158, "ICC SENSOR : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the ICC sensor. Refer to [CCS-176, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the ICC sensor branch line.

NO >> Repair the power supply and the ground circuit.

CAN COMMUNICATION CIRCUIT 1

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

CAN COMMUNICATION CIRCUIT 1

Diagnosis Procedure

INFOID:000000006256313

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit 1.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-57. "System Diagram"](#).

4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M4	6	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M4	6		Not existed
	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair the root cause.

4.CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		
146	151	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

IPDM E/R		Resistance (Ω)
Terminal No.		
27	26	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

CAN COMMUNICATION CIRCUIT 1

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit 1.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

CAN COMMUNICATION CIRCUIT 2

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

CAN COMMUNICATION CIRCUIT 2

Diagnosis Procedure

INFOID:000000006256314

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit 2.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-57. "System Diagram"](#).

4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		
M4	13	12	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M4	13		Not existed
	12		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair the root cause.

4.CHECK CAN GATEWAY TERMINATION CIRCUIT

1. Remove the CAN gateway.
2. Check the resistance between the CAN gateway terminals.

CAN gateway		Resistance (Ω)
Terminal No.		
4	10	Approx. 108 – 132
6	12	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the CAN gateway.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

Inspection result

Reproduced>>GO TO 6.

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

CAN COMMUNICATION CIRCUIT 2

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit 2.

NOTE:

CAN gateway has two termination circuits. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

ITS COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000006256315

1.CHECK CAN DIAGNOSIS

Check the CAN diagnosis results from CONSULT-III to see that the CAN communication circuit 1 and CAN communication circuit 2 have no malfunction.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-57, "System Diagram"](#).

Are the CAN communication 1 and CAN communication 2 circuits normal?

YES >> GO TO 2.

NO >> Check and repair CAN communication circuit 1 and/or CAN communication circuit 2.

2.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ADAS control unit
 - Harness connector B63
 - Harness connector B239

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the terminal and connector.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - ADAS control unit
 - ICC sensor
2. Check the continuity between the ADAS control unit harness connector and the ICC sensor harness connector.

ADAS control unit harness connector		ICC sensor harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B61	7	E65	3	Existed
	8		6	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the ADAS control unit branch line. (ITS communication circuit). Refer to [LAN-57, "System Diagram"](#).

4.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar RH
 - Side radar LH
 - Lane camera unit
 - Accelerator pedal actuator
2. Check the continuity between the ADAS control unit harness connector terminals.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
B61	7	8	Not existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Check the harness and repair the root cause.

ITS COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

5.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the ADAS control unit harness connector and the ground.

ADAS control unit harness connector		Ground	Continuity
Connector No.	Terminal No.		
B61	7		Not existed
	8		Not existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Check the harness and repair the root cause.

6.CHECK TERMINATION CIRCUIT

1. Remove the ADAS control unit and the ICC sensor.
2. Check the resistance between the ADAS control unit terminals.

ADAS control unit		Resistance (Ω)
Terminal No.		
7	8	Approx. 108 – 132

3. Check the resistance between the ICC sensor terminals.

ICC sensor		Resistance (Ω)
Terminal No.		
3	6	Approx. 108 – 132

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace the ADAS control unit and/or the ICC sensor.

7.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

Inspection result

Reproduced>>GO TO 8.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

8.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of ITS communication circuit.

NOTE:

ADAS control unit and ICC sensor have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

MAIN LINE BETWEEN ABS AND DLC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN ABS AND DLC CIRCUIT

Diagnosis Procedure

INFOID:000000006256326

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector E107
 - Harness connector M82

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - ABS actuator and electric unit (control unit)
 - Harness connectors E107 and M82
2. Check the continuity between the ABS actuator and electric unit (control unit) harness connector and the harness connector.

ABS actuator and electric unit (control unit) harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E36	41	E107	1	Existed
	27		6	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the ABS actuator and electric unit (control unit) and the harness connector E107.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector and the data link connector.

Harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M82	1	M4	6	Existed
	6		14	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the ABS actuator and electric unit (control unit) and the data link connector.

NO >> Repair the main line between the harness connector M82 and the data link connector.

MAIN LINE BETWEEN DLC AND E-SUS CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

MAIN LINE BETWEEN DLC AND E-SUS CIRCUIT

Diagnosis Procedure

INFOID:000000006256327

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M19
 - Harness connector B2

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M19 and B2.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M4	6	M19	29	Existed
	14		30	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the data link connector and the harness connector M19.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of air levelizer control module.
2. Check the continuity between the harness connector and the air levelizer control module harness connector.

Harness connector		Air levelizer control module harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B2	29	B84	16	Existed
	30		7	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the air levelizer control module.

NO >> Repair the main line between the harness connector B2 and the air levelizer control module.

MAIN LINE BETWEEN E-SUS AND ADP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

MAIN LINE BETWEEN E-SUS AND ADP CIRCUIT

Diagnosis Procedure

INFOID:000000006256328

1.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Air levelizer control module
 - Harness connectors B24 and B460
4. Check the continuity between the air levelizer control module harness connector and the harness connector.

Air levelizer control module harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B84	16	B24	13	Existed
	7		12	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the air levelizer control module and the driver seat control unit.

NO >> Repair the main line between the air levelizer control module and the harness connector B24.

LAN

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256333

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ECM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E80	146	151	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ECM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to [EC-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the ECM. Refer to [EC-535, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the ECM branch line.

NO >> Repair the power supply and the ground circuit.

4WD BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

4WD BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256334

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the transfer control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of transfer control unit.
2. Check the resistance between the transfer control unit harness connector terminals.

Transfer control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E59	12	13	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the transfer control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the transfer control unit. Refer to [DLN-93, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the transfer control unit. Refer to [DLN-107, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the transfer control unit branch line.
NO >> Repair the power supply and the ground circuit.

LAN

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256335

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E36	41	27	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-113. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-137. "Removal and Installation"](#).
 YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.
 NO >> Repair the power supply and the ground circuit.

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256336

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - A/T assembly
 - Harness connector F1
 - Harness connector E7

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/T assembly.
2. Check the resistance between the A/T assembly harness connector terminals.

A/T assembly harness connector			Resistance (Ω)
Connector No.	Terminal No.		
F51	3	8	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the TCM branch line.

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Remove the joint connector. Refer to [TM-182, "Removal and Installation"](#).
2. Check the continuity between the A/T assembly harness connector side and the TCM harness connector side of the joint connector.

A/T assembly harness connector side	TCM harness connector side	Continuity
Terminal No.	Terminal No.	
3	3	Existed
8	8	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the joint connector.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-151, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the control valve & TCM. Refer to [TM-182, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the TCM branch line.

NO >> Repair the power supply and the ground circuit.

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256337

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the main harness.

2.CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-36, "Work Flow"](#).

Is the inspection result normal?

YES >> Replace the main harness.

NO >> Replace parts whose air bag system has a malfunction.

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256339

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - AV control unit
 - Harness connector M222
 - Harness connector M119

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
2. Check the resistance between the AV control unit harness connector terminals.

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M210	90	74	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> Repair the AV control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to [AV-161, "AV CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the AV control unit. Refer to [AV-212, "Removal and Installation"](#).
 YES (Past error)>>Error was detected in the AV control unit branch line.
 NO >> Repair the power supply and the ground circuit.

LAN

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256340

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M68	39	40	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the BCM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-75. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the BCM. Refer to [BCS-81. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the BCM branch line.

NO >> Repair the power supply and the ground circuit.

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256343

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M4	6	14	Approx. 54 – 66

Is the measurement value within the specification?

- YES (Present error)>>Check CAN system type decision again.
YES (Past error)>>Error was detected in the data link connector branch line circuit.
NO >> Repair the data link connector branch line.

LAN

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256344

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the A/C auto amp. for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/C auto amp.
2. Check the resistance between the A/C auto amp. harness connector terminals.

A/C auto amp. harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M50	1	21	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the A/C auto amp. branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the A/C auto amp. Refer to [HAC-110, "A/C AUTO AMP. : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the A/C auto amp. Refer to [HAC-146, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the A/C auto amp. branch line.

NO >> Repair the power supply and the ground circuit.

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256345

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M34	21	22	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the combination meter branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to [MWI-64, "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the combination meter. Refer to [MWI-85, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the combination meter branch line.
NO >> Repair the power supply and the ground circuit.

LAN

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256346

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M30	5	2	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the steering angle sensor branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to [BRC-53, "Wiring Diagram"](#).

Is the inspection result normal?

YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-139, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the steering angle sensor branch line.

NO >> Repair the power supply and the ground circuit.

TPMS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

TPMS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256347

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the low tire pressure warning control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of low tire pressure warning control unit.
2. Check the resistance between the low tire pressure warning control unit harness connector terminals.

Low tire pressure warning control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M96	2	1	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the low tire pressure warning control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the low tire pressure warning control unit. Refer to [WT-51, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the low tire pressure warning control unit. Refer to [WT-65, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the low tire pressure warning control unit branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256348

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - IPDM E/R
 - Harness connector E105
 - Harness connector M77
 - Harness connector M19 (Without ICC system)
 - Harness connector B2 (Without ICC system)

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E13	27	26	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the IPDM E/R branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-31. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-32. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the IPDM E/R branch line.

NO >> Repair the power supply and the ground circuit.

ADP BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256349

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Driver seat control unit
 - Harness connector B460
 - Harness connector B24
 - CAN gateway (With ICC system)

Is the inspection result normal?

YES (With ICC system)>>GO TO 2.

YES (Without ICC system)>>GO TO 3.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (CAN communication circuit 2). Refer to [LAN-57, "System Diagram"](#).

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway. (With ICC system)
2. Disconnect the connector of driver seat control unit.
3. Check the resistance between the driver seat control unit harness connector terminals.

Driver seat control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B451	1	17	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the driver seat control unit branch line.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the driver seat control unit. Refer to [ADP-67, "DRIVER SEAT CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?YES (Present error)>>Replace the driver seat control unit. Refer to [ADP-135, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the driver seat control unit branch line.

NO >> Repair the power supply and the ground circuit.

E-SUS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256351

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Air levelizer control module
 - CAN gateway (With ICC system)

Is the inspection result normal?

YES (With ICC system)>>GO TO 2.

YES (Without ICC system)>>GO TO 3.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (CAN communication circuit 2). Refer to [LAN-57, "System Diagram"](#).

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway. (With ICC system)
2. Disconnect the connector of air levelizer control module.
3. Check the resistance between the air levelizer control module harness connector terminals.

Air levelizer control module harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B84	16	7	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the air levelizer control module branch line.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the air levelizer control module. Refer to [SCS-89, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the air levelizer control module. Refer to [SCS-94, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the air levelizer control module branch line.

NO >> Repair the power supply and the ground circuit.

PWBD BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256353

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Automatic back door control module
 - CAN gateway (With ICC system)

Is the inspection result normal?

YES (With ICC system)>>GO TO 2.

YES (Without ICC system)>>GO TO 3.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (CAN communication circuit 2). Refer to [LAN-57, "System Diagram"](#).

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway. (With ICC system)
2. Disconnect the connector of automatic back door control module.
3. Check the resistance between the automatic back door control module harness connector terminals.

Automatic back door control module harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B26	7	6	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the automatic back door control module branch line.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the automatic back door control module. Refer to [DLK-116, "AUTOMATIC BACK DOOR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the automatic back door control module. Refer to [DLK-262, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the automatic back door control module branch line.

NO >> Repair the power supply and the ground circuit.

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000006256359

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit.
4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		
M4	6	14	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M4	6		Not existed
	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair the root cause.

4.CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		
146	151	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

IPDM E/R		Resistance (Ω)
Terminal No.		
27	26	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

MAIN LINE BETWEEN ABS AND DLC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN ABS AND DLC CIRCUIT

Diagnosis Procedure

INFOID:000000006256366

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector E107
 - Harness connector M82

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - ABS actuator and electric unit (control unit)
 - Harness connectors E107 and M82
2. Check the continuity between the ABS actuator and electric unit (control unit) harness connector and the harness connector.

ABS actuator and electric unit (control unit) harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E36	41	E107	1	Existed
	27		6	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the ABS actuator and electric unit (control unit) and the harness connector E107.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector and the data link connector.

Harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M82	1	M4	6	Existed
	6		14	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the ABS actuator and electric unit (control unit) and the data link connector.

NO >> Repair the main line between the harness connector M82 and the data link connector.

MAIN LINE BETWEEN ADP AND PWBD CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

MAIN LINE BETWEEN ADP AND PWBD CIRCUIT

Diagnosis Procedure

INFOID:000000006256369

1.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - CAN gateway
 - Harness connectors B460 and B24
 - Automatic back door control module
4. Check the continuity between the harness connector and the automatic back door control module harness connector.

Harness connector		Automatic back door control module harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B24	13	B26	7	Existed
	12		6	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the driver seat control unit and the automatic back door control module.

NO >> Repair the main line between the harness connector B24 and the automatic back door control module.

LAN

MAIN LINE BETWEEN RDR-R AND RDR-L CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

MAIN LINE BETWEEN RDR-R AND RDR-L CIRCUIT

Diagnosis Procedure

INFOID:000000006256370

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B239
 - Harness connector B63

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar RH
 - Harness connectors B239 and B63
2. Check the continuity between the side radar RH harness connector and the harness connector.

Side radar RH harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B243	4	B239	7	Existed
	3		3	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the side radar RH and the harness connector B239.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of side radar LH.
2. Check the continuity between the harness connector and the side radar LH harness connector.

Harness connector		Side radar LH harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B63	7	B74	4	Existed
	3		3	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the side radar RH and the side radar LH.

NO >> Repair the main line between the harness connector B63 and the side radar LH.

MAIN LINE BETWEEN RDR-L AND LANE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

MAIN LINE BETWEEN RDR-L AND LANE CIRCUIT

Diagnosis Procedure

INFOID:000000006256371

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B2
 - Harness connector M19
 - Harness connector M23
 - Harness connector R1

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar LH
 - Harness connectors B2 and M19
2. Check the continuity between the side radar LH harness connector and the harness connector.

Side radar LH harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B74	4	B2	27	Existed
	3		28	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the side radar LH and the harness connector B2.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M23 and R1.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M19	27	M23	26	Existed
	28		23	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M19 and M23.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of lane camera unit.
2. Check the continuity between the harness connector and the lane camera unit harness connector.

Harness connector		Lane camera unit harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
R1	26	R8	4	Existed
	23		8	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the side radar LH and the lane camera unit.

MAIN LINE BETWEEN RDR-L AND LANE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

NO >> Repair the main line between the harness connector R1 and the lane camera unit.

MAIN LINE BETWEEN LANE AND APA CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

MAIN LINE BETWEEN LANE AND APA CIRCUIT

Diagnosis Procedure

INFOID:000000006256372

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector R1
 - Harness connector M23
 - Harness connector M77
 - Harness connector E105

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors R1 and M23.
2. Check the continuity between the harness connector terminals.

Connector No.	Terminal No.		Continuity
R1	26	29	Existed
	23	28	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the lane camera unit and the harness connector R1.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M77 and E105.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M23	29	M77	22	Existed
	28		23	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connectors M23 and M77.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of accelerator pedal actuator.
2. Check the continuity between the harness connector and the accelerator pedal actuator harness connector.

Harness connector		Accelerator pedal actuator harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E105	22	E66	5	Existed
	23		4	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the lane camera unit and the accelerator pedal actuator.

NO >> Repair the main line between the harness connector E105 and the accelerator pedal actuator.

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256373

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ECM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E80	146	151	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ECM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to [EC-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the ECM. Refer to [EC-535, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the ECM branch line.

NO >> Repair the power supply and the ground circuit.

4WD BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

4WD BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256374

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the transfer control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of transfer control unit.
2. Check the resistance between the transfer control unit harness connector terminals.

Transfer control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E59	12	13	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the transfer control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the transfer control unit. Refer to [DLN-93, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the transfer control unit. Refer to [DLN-107, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the transfer control unit branch line.
NO >> Repair the power supply and the ground circuit.

LAN

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256375

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E36	41	27	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-113. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-137. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.

NO >> Repair the power supply and the ground circuit.

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256376

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - A/T assembly
 - Harness connector F1
 - Harness connector E7

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/T assembly.
2. Check the resistance between the A/T assembly harness connector terminals.

A/T assembly harness connector			Resistance (Ω)
Connector No.	Terminal No.		
F51	3	8	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the TCM branch line.

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Remove the joint connector. Refer to [TM-182, "Removal and Installation"](#).
2. Check the continuity between the A/T assembly harness connector side and the TCM harness connector side of the joint connector.

A/T assembly harness connector side	TCM harness connector side	Continuity
Terminal No.	Terminal No.	
3	3	Existed
8	8	Existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Replace the joint connector.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-151, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the control valve & TCM. Refer to [TM-182, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the TCM branch line.
NO >> Repair the power supply and the ground circuit.

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256377

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the main harness.

2. CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-36, "Work Flow"](#).

Is the inspection result normal?

YES >> Replace the main harness.

NO >> Replace parts whose air bag system has a malfunction.

AFS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256378

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the AFS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AFS control unit.
2. Check the resistance between the AFS control unit harness connector terminals.

AFS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M135	30	7	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the AFS control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AFS control unit. Refer to [EXL-84, "AFS CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the AFS control unit. Refer to [EXL-135, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the AFS control unit branch line.
NO >> Repair the power supply and the ground circuit.

LAN

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256379

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - AV control unit
 - Harness connector M222
 - Harness connector M119

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
2. Check the resistance between the AV control unit harness connector terminals.

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M210	90	74	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> Repair the AV control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to [AV-161, "AV CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the AV control unit. Refer to [AV-212, "Removal and Installation"](#).
 YES (Past error)>>Error was detected in the AV control unit branch line.
 NO >> Repair the power supply and the ground circuit.

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256380

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M68	39	40	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the BCM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-75, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to [BCS-81, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the BCM branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)

Diagnosis Procedure

INFOID:000000006256381

1.CHECK DTC

Check DTC of the CAN gateway with CONSULT-III.

Is U1010 or B2600 indicated?

YES >> Perform a diagnosis of the indicated DTC.

NO >> GO TO 2.

2.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the CAN gateway for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the terminal and connector.

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of CAN gateway.
2. Check the resistance between the CAN gateway harness connector terminals.

CAN gateway harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M125	1	7	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the CAN gateway branch line (CAN communication circuit 1). Refer to [LAN-57, "System Diagram"](#).

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the CAN gateway. Refer to [LAN-116, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the CAN gateway. Refer to [LAN-117, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the CAN gateway branch line (CAN communication circuit 1).

NO >> Repair the power supply and the ground circuit.

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)

Diagnosis Procedure

INFOID:000000006256382

1.CHECK DTC

Check DTC of the CAN gateway with CONSULT-III.

Is U1010 or B2600 indicated?

- YES >> Perform a diagnosis of the indicated DTC.
- NO >> GO TO 2.

2.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - CAN gateway
 - Harness connector M19
 - Harness connector B2

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair the terminal and connector.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Repair the CAN gateway branch line (CAN communication circuit 2). Refer to [LAN-57. "System Diagram"](#).

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the CAN gateway. Refer to [LAN-116. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the CAN gateway. Refer to [LAN-117. "Removal and Installation"](#).
- YES (Past error)>>Error was detected in the CAN gateway branch line (CAN communication circuit 2).
- NO >> Repair the power supply and the ground circuit.

LAN

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256383

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M4	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the data link connector branch line circuit.

NO >> Repair the data link connector branch line.

HVAC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256384

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the A/C auto amp. for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/C auto amp.
2. Check the resistance between the A/C auto amp. harness connector terminals.

A/C auto amp. harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M50	1	21	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the A/C auto amp. branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the A/C auto amp. Refer to [HAC-110, "A/C AUTO AMP. : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the A/C auto amp. Refer to [HAC-146, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the A/C auto amp. branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256385

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M34	21	22	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the combination meter branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to [MWI-64, "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the combination meter. Refer to [MWI-85, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the combination meter branch line.

NO >> Repair the power supply and the ground circuit.

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256386

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M30	5	2	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the steering angle sensor branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to [BRC-53, "Wiring Diagram"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-139, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the steering angle sensor branch line.
NO >> Repair the power supply and the ground circuit.

LAN

TPMS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

TPMS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256387

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the low tire pressure warning control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of low tire pressure warning control unit.
2. Check the resistance between the low tire pressure warning control unit harness connector terminals.

Low tire pressure warning control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M96	2	1	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the low tire pressure warning control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the low tire pressure warning control unit. Refer to [WT-51, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the low tire pressure warning control unit. Refer to [WT-65, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the low tire pressure warning control unit branch line.

NO >> Repair the power supply and the ground circuit.

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256388

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - IPDM E/R
 - Harness connector E105
 - Harness connector M77
 - Harness connector M19 (Without ICC system)
 - Harness connector B2 (Without ICC system)

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E13	27	26	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the IPDM E/R branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-31. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-32. "Removal and Installation"](#).

YES (Past error)>>Error was detected in the IPDM E/R branch line.

NO >> Repair the power supply and the ground circuit.

LAN

ADP BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256389

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Driver seat control unit
 - Harness connector B460
 - Harness connector B24
 - CAN gateway (With ICC system)

Is the inspection result normal?

YES (With ICC system)>>GO TO 2.

YES (Without ICC system)>>GO TO 3.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (CAN communication circuit 2). Refer to [LAN-57, "System Diagram"](#).**3.CHECK HARNESS FOR OPEN CIRCUIT**

1. Connect the connector of CAN gateway. (With ICC system)
2. Disconnect the connector of driver seat control unit.
3. Check the resistance between the driver seat control unit harness connector terminals.

Driver seat control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B451	1	17	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the driver seat control unit branch line.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the driver seat control unit. Refer to [ADP-67, "DRIVER SEAT CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?YES (Present error)>>Replace the driver seat control unit. Refer to [ADP-135, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the driver seat control unit branch line.

NO >> Repair the power supply and the ground circuit.

PSB BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256390

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Pre-crash seat belt control unit (driver side)
 - CAN gateway

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (CAN communication circuit 2). Refer to [LAN-57, "System Diagram"](#).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway.
2. Disconnect the connector of pre-crash seat belt control unit (driver side).
3. Check the resistance between the pre-crash seat belt control unit (driver side) harness connector terminals.

Pre-crash seat belt control unit (driver side) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B9	14	4	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the pre-crash seat belt control unit (driver side) branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the pre-crash seat belt control unit (driver side). Refer to [SBC-52, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the seat belt pre-tensioner retractor (LH side). Refer to [SB-6, "SEAT BELT RETRACTOR : Removal and Installation"](#).

YES (Past error)>>Error was detected in the pre-crash seat belt control unit (driver side) branch line.

NO >> Repair the power supply and the ground circuit.

E-SUS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256391

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Air levelizer control module
 - CAN gateway (With ICC system)

Is the inspection result normal?

YES (With ICC system)>>GO TO 2.

YES (Without ICC system)>>GO TO 3.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (CAN communication circuit 2). Refer to [LAN-57, "System Diagram"](#).

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway. (With ICC system)
2. Disconnect the connector of air levelizer control module.
3. Check the resistance between the air levelizer control module harness connector terminals.

Air levelizer control module harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B84	16	7	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the air levelizer control module branch line.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the air levelizer control module. Refer to [SCS-89, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the air levelizer control module. Refer to [SCS-94, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the air levelizer control module branch line.

NO >> Repair the power supply and the ground circuit.

ICC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256392

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ADAS control unit
 - CAN gateway

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (CAN communication circuit 2). Refer to [LAN-57, "System Diagram"](#).

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway.
2. Disconnect the connector of ADAS control unit.
3. Check the resistance between the ADAS control unit harness connector terminals.

ADAS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B61	14	15	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the ADAS control unit branch line.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ADAS control unit. Refer to [DAS-62, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the ADAS control unit. Refer to [DAS-63, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the ADAS control unit branch line.

NO >> Repair the power supply and the ground circuit.

PWBD BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256393

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Automatic back door control module
 - CAN gateway (With ICC system)

Is the inspection result normal?

YES (With ICC system)>>GO TO 2.

YES (Without ICC system)>>GO TO 3.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of CAN gateway.
2. Check the continuity between the CAN gateway harness connector terminals.

CAN gateway harness connector			Continuity
Connector No.	Terminal No.		
M125	4	6	Existed
	10	12	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (CAN communication circuit 2). Refer to [LAN-57, "System Diagram"](#).

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of CAN gateway. (With ICC system)
2. Disconnect the connector of automatic back door control module.
3. Check the resistance between the automatic back door control module harness connector terminals.

Automatic back door control module harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B26	7	6	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the automatic back door control module branch line.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the automatic back door control module. Refer to [DLK-116, "AUTOMATIC BACK DOOR CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the automatic back door control module. Refer to [DLK-262, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the automatic back door control module branch line.

NO >> Repair the power supply and the ground circuit.

RDR-R BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

RDR-R BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256394

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the side radar RH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK RIGHT/LEFT SWITCHING SIGNAL CIRCUIT

Check the right/left switching signal circuit of the side radar RH. Refer to [DAS-514. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair the root cause.

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of side radar RH.
2. Check the resistance between the side radar RH harness connector terminals.

Side radar RH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B243	4	3	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 4.
NO >> Repair the side radar RH branch line.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar RH. Refer to [DAS-513. "SIDE RADAR RH: Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the side radar RH. Refer to [DAS-523. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the side radar RH branch line.
NO >> Repair the power supply and the ground circuit.

LAN

RDR-L BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256395

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the side radar LH for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of side radar LH.
2. Check the resistance between the side radar LH harness connector terminals.

Side radar LH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B74	4	3	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the side radar LH branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar LH. Refer to [DAS-512, "SIDE RADAR LH : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the side radar LH. Refer to [DAS-523, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the side radar LH branch line.

NO >> Repair the power supply and the ground circuit.

LANE BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

LANE BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256396

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the lane camera unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of lane camera unit.
2. Check the resistance between the lane camera unit harness connector terminals.

Lane camera unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
R8	4	8	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the lane camera unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the lane camera unit. Refer to [DAS-387, "LANE CAMERA UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the lane camera unit. Refer to [DAS-403, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the lane camera unit branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

APA BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256397

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the accelerator pedal actuator for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of accelerator pedal actuator.
2. Check the resistance between the accelerator pedal actuator harness connector terminals.

Accelerator pedal actuator harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E66	5	4	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the accelerator pedal actuator branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the accelerator pedal actuator. Refer to [DAS-195, "ACCELERATOR PEDAL ACTUATOR : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the accelerator pedal assembly. Refer to [ACC-4, "MODELS WITH DISTANCE CONTROL ASSIST SYSTEM : Removal and Installation"](#).
YES (Past error)>>Error was detected in the accelerator pedal actuator branch line.
NO >> Repair the power supply and the ground circuit.

LASER BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

LASER BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006256398

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ICC sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ICC sensor.
2. Check the resistance between the ICC sensor harness connector terminals.

ICC sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E65	3	6	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ICC sensor branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ICC sensor. Refer to [CCS-158, "ICC SENSOR : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ICC sensor. Refer to [CCS-176, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ICC sensor branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CAN COMMUNICATION CIRCUIT 1

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

CAN COMMUNICATION CIRCUIT 1

Diagnosis Procedure

INFOID:000000006256400

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit 1.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-57. "System Diagram"](#).

4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		
M4	6	14	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M4	6		Not existed
	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair the root cause.

4.CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		
146	151	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

IPDM E/R		Resistance (Ω)
Terminal No.		
27	26	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the ECM and/or the IPDM E/R.

CAN COMMUNICATION CIRCUIT 1

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit 1.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

CAN COMMUNICATION CIRCUIT 2

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

CAN COMMUNICATION CIRCUIT 2

Diagnosis Procedure

INFOID:000000006256401

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication circuit 2.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-57. "System Diagram"](#).

4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		
M4	13	12	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M4	13		Not existed
	12		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair the root cause.

4.CHECK CAN GATEWAY TERMINATION CIRCUIT

1. Remove the CAN gateway.
2. Check the resistance between the CAN gateway terminals.

CAN gateway		Resistance (Ω)
Terminal No.		
4	10	Approx. 108 – 132
6	12	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the CAN gateway.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

Inspection result

Reproduced>>GO TO 6.

CAN COMMUNICATION CIRCUIT 2

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication circuit 2.

NOTE:

CAN gateway has two termination circuits. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

ITS COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000006256402

1.CHECK CAN DIAGNOSIS

Check the CAN diagnosis results from CONSULT-III to see that the CAN communication circuit 1 and CAN communication circuit 2 have no malfunction.

NOTE:

For identification of CAN communication circuit 1, CAN communication circuit 2, and ITS communication circuit, refer to [LAN-57, "System Diagram"](#).

Are the CAN communication 1 and CAN communication 2 circuits normal?

YES >> GO TO 2.

NO >> Check and repair CAN communication circuit 1 and/or CAN communication circuit 2.

2.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ADAS control unit
 - Harness connector B63
 - Harness connector B239

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the terminal and connector.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - ADAS control unit
 - ICC sensor
2. Check the continuity between the ADAS control unit harness connector and the ICC sensor harness connector.

ADAS control unit harness connector		ICC sensor harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B61	7	E65	3	Existed
	8		6	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the ADAS control unit branch line. (ITS communication circuit). Refer to [LAN-57, "System Diagram"](#).

4.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar RH
 - Side radar LH
 - Lane camera unit
 - Accelerator pedal actuator
2. Check the continuity between the ADAS control unit harness connector terminals.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
B61	7	8	Not existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Check the harness and repair the root cause.

ITS COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

5.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the ADAS control unit harness connector and the ground.

ADAS control unit harness connector		Ground	Continuity
Connector No.	Terminal No.		
B61	7		Not existed
	8		Not existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Check the harness and repair the root cause.

6.CHECK TERMINATION CIRCUIT

1. Remove the ADAS control unit and the ICC sensor.
2. Check the resistance between the ADAS control unit terminals.

ADAS control unit		Resistance (Ω)
Terminal No.		
7	8	Approx. 108 – 132

3. Check the resistance between the ICC sensor terminals.

ICC sensor		Resistance (Ω)
Terminal No.		
3	6	Approx. 108 – 132

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace the ADAS control unit and/or the ICC sensor.

7.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

Inspection result

Reproduced>>GO TO 8.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

8.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of ITS communication circuit.

NOTE:

ADAS control unit and ICC sensor have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN