

# SECTION WCS

## WARNING CHIME SYSTEM

### CONTENTS

<b>PRECAUTION</b>	3	<b>DIAGNOSIS SYSTEM (BCM)</b>	13
<b>PRECAUTIONS</b>	3	<b>COMMON ITEM</b>	13
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER"	3	COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)	13
<b>SYSTEM DESCRIPTION</b>	4	<b>BUZZER</b>	14
<b>COMPONENT PARTS</b>	4	BUZZER : CONSULT Function (BCM - BUZZER)	14
Component Parts Location	4	<b>ECU DIAGNOSIS INFORMATION</b>	15
Component Description	5	<b>BCM, COMBINATION METER</b>	15
<b>SYSTEM</b>	6	List of ECU Reference	15
<b>WARNING CHIME SYSTEM</b>	6	<b>WIRING DIAGRAM</b>	16
WARNING CHIME SYSTEM : System Diagram	6	<b>WARNING CHIME SYSTEM</b>	16
WARNING CHIME SYSTEM : System Description	6	Wiring Diagram	16
<b>LIGHT REMINDER WARNING CHIME</b>	6	<b>BASIC INSPECTION</b>	25
LIGHT REMINDER WARNING CHIME : System Diagram	6	<b>DIAGNOSIS AND REPAIR WORKFLOW</b>	25
LIGHT REMINDER WARNING CHIME : System Description	6	Work Flow	25
<b>SEAT BELT WARNING CHIME</b>	7	<b>DTC/CIRCUIT DIAGNOSIS</b>	27
SEAT BELT WARNING CHIME : System Diagram	7	<b>POWER SUPPLY AND GROUND CIRCUIT</b>	27
SEAT BELT WARNING CHIME : System Descrip- tion	7	<b>COMBINATION METER</b>	27
<b>PARKING BRAKE RELEASE WARNING CHIME</b>	7	COMBINATION METER : Diagnosis Procedure	27
PARKING BRAKE RELEASE WARNING CHIME : System Diagram	7	<b>BCM (BODY CONTROL MODULE)</b>	27
PARKING BRAKE RELEASE WARNING CHIME : System Description	7	BCM (BODY CONTROL MODULE) : Diagnosis Procedure	28
<b>DIAGNOSIS SYSTEM (COMBINATION METER)</b>	9	<b>METER BUZZER CIRCUIT</b>	29
Description	9	Description	29
CONSULT Function (METER/M&A)	9	Component Function Check	29
		Diagnosis Procedure	29
<b>SEAT BELT BUCKLE SWITCH SIGNAL CIR- CUIT</b>	30	<b>SEAT BELT BUCKLE SWITCH SIGNAL CIR- CUIT</b>	30
Description	30	Description	30
Component Function Check	30	Component Function Check	30

---

Diagnosis Procedure .....	30	<b>THE SEAT BELT WARNING CONTINUES SOUNDING, OR DOES NOT SOUND .....</b>	<b>34</b>
Component Inspection .....	31	Description .....	34
<b>SYMPTOM DIAGNOSIS .....</b>	<b>32</b>	Diagnosis Procedure .....	34
<b>WARNING CHIME SYSTEM SYMPTOMS .....</b>	<b>32</b>		
Symptom Table .....	32		
<b>THE LIGHT REMINDER WARNING DOES NOT SOUND .....</b>	<b>33</b>	<b>THE PARKING BRAKE RELEASE WARNING CONTINUES SOUNDING, OR DOES NOT SOUND .....</b>	<b>35</b>
Description .....	33	Description .....	35
Diagnosis Procedure .....	33	Diagnosis Procedure .....	35

## PRECAUTIONS

< PRECAUTION >

# PRECAUTION

## PRECAUTIONS

### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000011545836

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes dual stage front air bag modules. The SRS system may only deploy one front air bag, depending on the severity of a collision and whether the front passenger seat is occupied. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

A

B

C

D

E

F

G

H

I

J

K

L

M

WCS

O

P

## COMPONENT PARTS


< SYSTEM DESCRIPTION >

# SYSTEM DESCRIPTION

## COMPONENT PARTS

### Component Parts Location

INFOID:0000000011133141

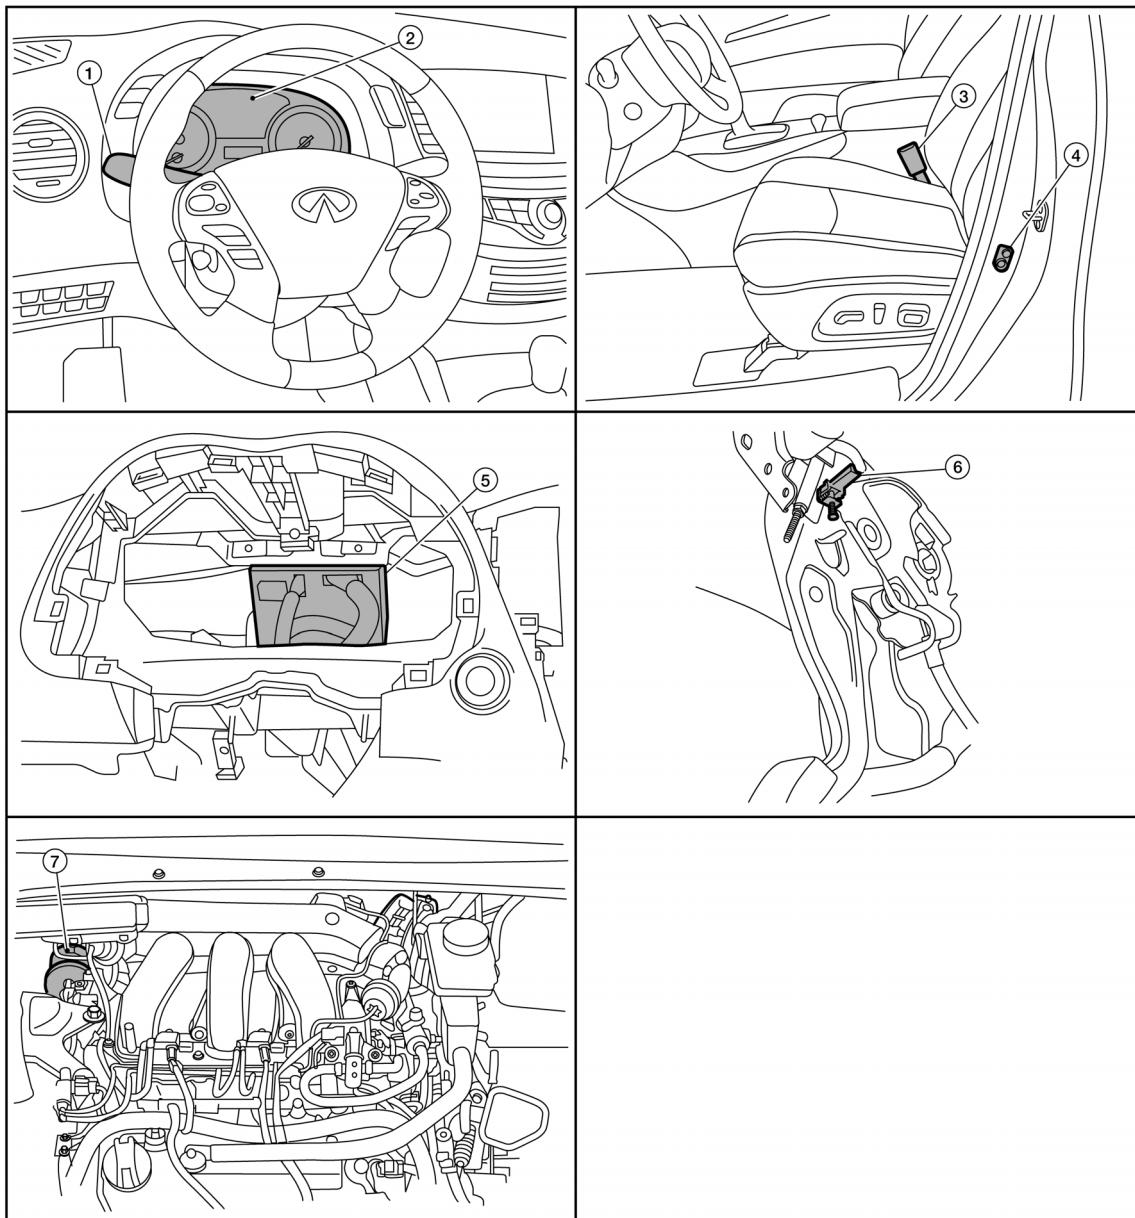

AWNIA2540ZZ

- |   |  |  |
|---|--|--|
| 1. Combination switch (lighting and turn signal switch) | 2. Combination meter                         | 3. Seat belt buckle switch (driver seat) |
| 4. Front door switch LH                                 | 5. BCM (view with combination meter removed) | 6. Parking brake switch                  |
| 7. ABS actuator and electric unit (control unit)        |  |  |

# COMPONENT PARTS

< SYSTEM DESCRIPTION >

## Component Description

INFOID:000000011133142

A

B

C

D

E

F

G

H

I

J

K

L

M

WCS

O

P

Unit	Description
Combination switch (lighting and turn signal switch)	Transmits the lighting switch signal to the BCM.
Combination meter	<ul style="list-style-type: none"><li>• Receives a buzzer output signal from the BCM with CAN communication line and sounds the buzzer.</li><li>• Receives the seat belt buckle switch signal from the seat belt buckle switch (driver seat) and transmits it to the BCM via CAN communication.</li><li>• Judges whether the parking brake is released using the vehicle speed signal and the parking brake switch signal, and sounds the buzzer if necessary.</li></ul>
BCM	Based on the signals received from various units and switches, transmits the buzzer output signal to the combination meter via CAN communication.
Front door switch LH	Transmits the front door switch LH signal to the BCM.
Seat belt buckle switch (driver seat)	Transmits the seat belt buckle switch (driver seat) signal to the combination meter.
Parking brake switch	Transmits the parking brake switch signal to the combination meter.
ABS actuator and electric unit (control unit)	Transmits the vehicle speed signal to the combination meter via CAN communication.

# SYSTEM


< SYSTEM DESCRIPTION >

## SYSTEM

### WARNING CHIME SYSTEM

#### WARNING CHIME SYSTEM : System Diagram

INFOID:0000000011133143

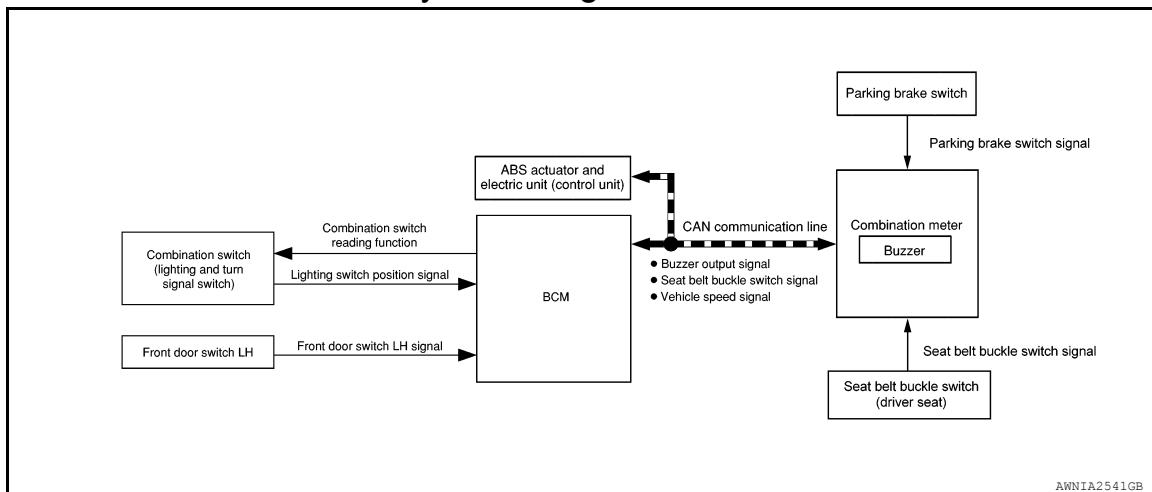

#### WARNING CHIME SYSTEM : System Description

INFOID:0000000011133144


##### DESCRIPTION

- The buzzer for the warning chime system is installed in the combination meter.
- The buzzer sounds when the combination meter receives a buzzer output signal from the BCM.
- The BCM receives signals from various units and transmits a buzzer output signal to the combination meter with CAN communication line if it judges that the warning buzzer should be activated.

## LIGHT REMINDER WARNING CHIME

#### LIGHT REMINDER WARNING CHIME : System Diagram

INFOID:0000000011133145

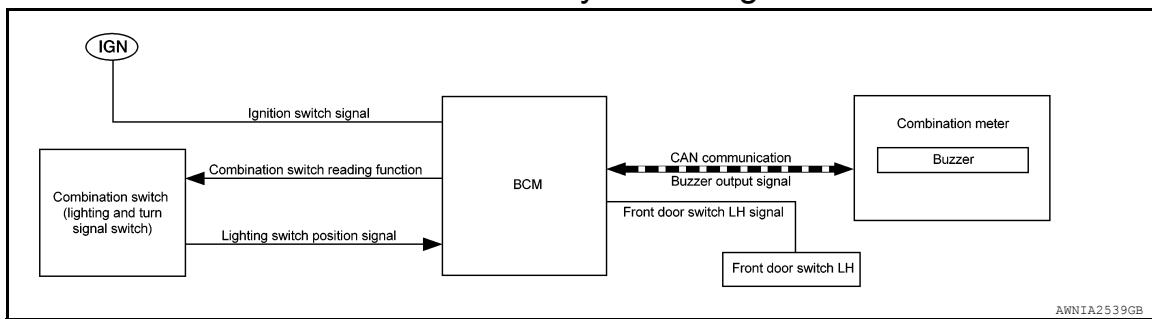

#### LIGHT REMINDER WARNING CHIME : System Description

INFOID:0000000011133146

##### DESCRIPTION

With the ignition switch in the OFF or ACC position, driver door open, and lighting switch in 1st or 2nd position, the light warning chime will sound.

- BCM detects the ignition switch in the OFF or ACC position, the front door switch LH ON, and the lighting switch in 1st or 2nd position, and then transmits the buzzer output signal (light reminder warning chime) to the combination meter with CAN communication line.
- When the combination meter receives the buzzer output signal (light reminder warning chime), it sounds the buzzer.

## WARNING OPERATION CONDITIONS

If all of the following conditions are fulfilled:

- Lighting switch is in 1st or 2nd position
- Ignition switch is in OFF or ACC
- Front door switch LH is ON

# SYSTEM

## < SYSTEM DESCRIPTION >

### WARNING CANCEL CONDITIONS


Warning is canceled if any of the following conditions is fulfilled:

- Lighting switch OFF
- Ignition switch ON
- Front door switch LH is OFF

### SEAT BELT WARNING CHIME

#### SEAT BELT WARNING CHIME : System Diagram

INFOID:0000000011133147

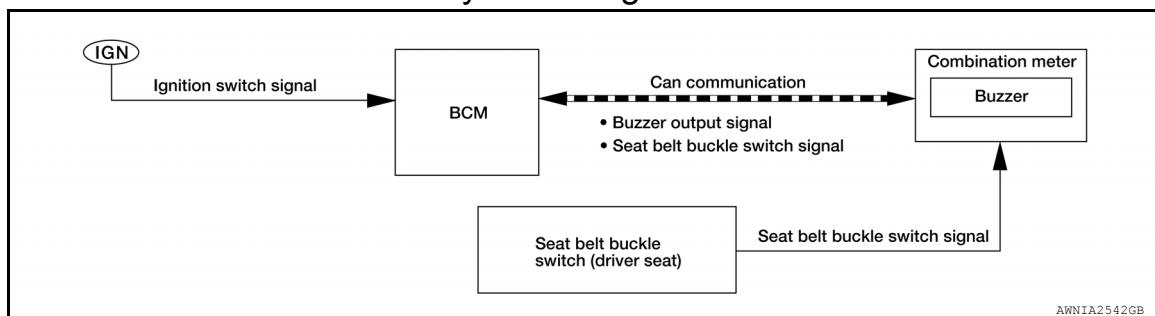

AWNIA2542GB

#### SEAT BELT WARNING CHIME : System Description

INFOID:0000000011133148

### DESCRIPTION

With the ignition switch turned ON and driver seat belt unfastened, the seat belt warning chime will sound for approximately 6 seconds.

- BCM receives seat belt buckle switch (driver seat) signal from combination meter with CAN communication line.
- BCM detects the ignition switch turned ON and the seat belt buckle switch (driver seat) is ON, and then transmits buzzer output signal (seat belt warning chime) to combination meter with CAN communication line.
- When the combination meter receives the buzzer output signal (seat belt warning chime), it sounds the buzzer.

### WARNING OPERATION CONDITIONS

If all of the following conditions are fulfilled:

- Ignition switch OFF→ON
- Seat belt buckle switch (driver seat) is ON (seat belt not fastened).

### WARNING CANCEL CONDITIONS


Cancels the warning if any of the following conditions is fulfilled:

- Ignition switch OFF
- Seat belt buckle switch (driver seat) is OFF (seat belt fastened).

### PARKING BRAKE RELEASE WARNING CHIME

#### PARKING BRAKE RELEASE WARNING CHIME : System Diagram

INFOID:0000000011133149

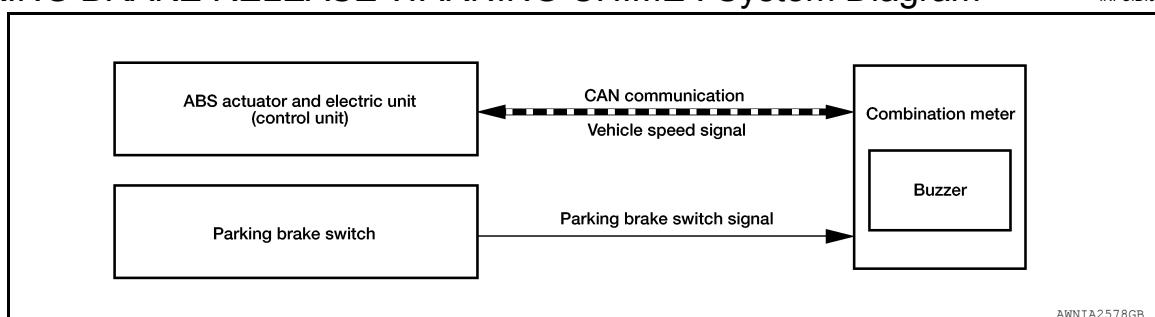

AWNIA2578GB

#### PARKING BRAKE RELEASE WARNING CHIME : System Description

INFOID:0000000011133150

### DESCRIPTION

## **SYSTEM**

### < SYSTEM DESCRIPTION >

- The combination meter receives the vehicle speed signal from the ABS actuator and electric unit (control unit) via CAN communication line.
- The combination meter judges whether the parking brake is released using the parking brake switch signal from the parking brake switch, and sounds the warning buzzer if necessary.

### WARNING OPERATION CONDITIONS

If all of the following conditions are fulfilled:

- Vehicle speed is approximately 4 MPH (7 km/h) or higher.
- Parking brake switch ON

### WARNING CANCEL CONDITIONS

Warning is canceled if any of the following conditions are fulfilled:

- Vehicle speed is approximately 2 MPH (3 km/h) or less.
- Parking brake switch OFF

# DIAGNOSIS SYSTEM (COMBINATION METER)

< SYSTEM DESCRIPTION >

## DIAGNOSIS SYSTEM (COMBINATION METER)

### Description

INFOID:0000000011545915

#### COMBINATION METER SELF-DIAGNOSIS MODE

The following meter functions can be checked during Combination Meter Self-Diagnosis Mode:

- Pointer sweep of speedometer, tachometer and gauges.
- Illumination of all LCD segments and color patterns for meter displays.
- Illumination of all lamps/LEDs that are controlled by the combination meter (regardless of switch status).


#### STARTING COMBINATION METER SELF-DIAGNOSIS MODE

##### NOTE:

- Check combination meter power supply and ground circuits if self-diagnosis mode does not start. Refer to [MWI-76, "COMBINATION METER : Diagnosis Procedure"](#). Replace combination meter if power supply and ground circuits are found to be normal and self-diagnosis mode does not start. Refer to [MWI-96, "Removal and Installation"](#).
- Combination meter self-diagnosis mode will function with the ignition switch in ON. Combination meter self-diagnosis mode will exit upon turning the ignition switch to OFF.

##### How to Initiate Self-Diagnosis Mode

1. Press and hold the trip reset switch while turning the ignition switch ON. After 2 seconds release trip reset switch, then press the trip reset switch 3 times within 7 seconds after the ignition switch is turned ON.
2. When the diagnosis function is activated, the meter illuminates all of the following:
  - Warning lights/indicators.
  - Meter assembly.
  - Information display color bars red, green, blue and white (1).
  - Odometer, trip A/B odometers and CVT indicator LCD display segments (2).
3. Press and hold the trip reset switch performs the pointer sweep test.

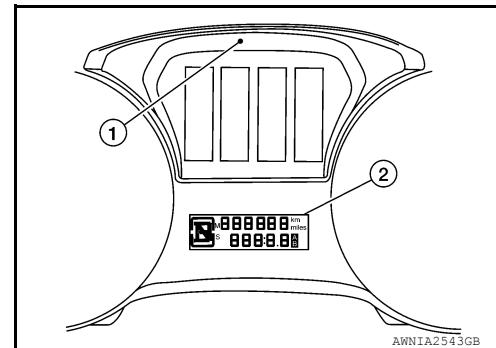

### CONSULT Function (METER/M&A)

INFOID:0000000011545916

##### CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and no-start condition.

WCS

#### APPLICATION ITEMS

CONSULT can display each diagnostic item using the diagnostic test modes shown.

METER/M&A Diagnosis mode	Description
Self Diagnostic Result	Displays combination meter self-diagnosis results.
Data Monitor	Displays combination meter input/output data in real time.
Work support	Displays diagnosis procedure of each work item.
Warning History	Lighting history of the warning lamp and indicator lamp can be checked.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.

# DIAGNOSIS SYSTEM (COMBINATION METER)

< SYSTEM DESCRIPTION >

## SELF DIAG RESULT

Refer to [MWI-26, "DTC Index"](#).

## DATA MONITOR

### Display Item List

X: Applicable

Display item [Unit]	MAIN SIGNALS	Description
SPEED METER	X	Displays the value of vehicle speed signal.
SPEED OUTPUT [mph or km/h]	X	Vehicle speed signal value transmitted to other units via CAN communication.
ODO OUTPUT [mph or km/h]		Odometer signal value transmitted to other units via CAN communication.
TACHO METER [rpm]	X	Value of the engine speed signal received from ECM via CAN communication.
FUEL METER [L]	X	Fuel level indicated on combination meter.
W TEMP METER [°F] or [°C]	X	Displays the value of engine coolant temperature signal, which is input from ECM.
ABS W/L [ON/OFF]		Displays [ON/OFF] condition of ABS warning indicator.
VDC/TCS IND [ON/OFF]		Displays [ON/OFF] condition of VDC OFF indicator lamp.
SLIP IND [ON/OFF]		Displays [ON/OFF] condition of SLIP indicator lamp.
BRAKE W/L [ON/OFF]		Displays [ON/OFF] condition of brake warning indicator.
DOOR W/L [ON/OFF]		Displays [ON/OFF] condition of door warning message.
HI-BEAM IND [ON/OFF]		Displays [ON/OFF] condition of high beam indicator.
TURN IND [On/Off]		Displays [ON/OFF] condition of turn indicator.
FR FOG IND [On/Off]		Displays [ON/OFF] condition of front fog lamp indicator.
LIGHT IND [On/Off]		Displays [ON/OFF] condition of light indicator.
OIL W/L [ON/OFF]		Displays [ON/OFF] condition of low oil pressure warning message.
MIL [ON/OFF]		Displays [ON/OFF] condition of malfunction indicator.
CRUISE IND [Off]		Displays [ON/OFF] condition of CRUISE indicator in the information display.
CRUISE W/L [ON/OFF]		Displays [ON/OFF] condition of tire CRUISE warning message.
BA W/L [On/Off]		Displays [On/Off] condition of IBA OFF indicator.
4WD W/L [ON/OFF]		Displays [ON/OFF] condition of tire 4WD warning message.
SET IND [On/Off]		Displays [ON/OFF] condition of SET indicator in the information display.
FUEL W/L [On/Off]		Displays [ON/OFF] condition of low-fuel warning message.

# DIAGNOSIS SYSTEM (COMBINATION METER)

## < SYSTEM DESCRIPTION >

Display item [Unit]	MAIN SIGNALS	Description	
WASHER W/L [On/Off]		Displays [ON/OFF] condition of low washer fluid warning message.	A
AIR PRES W/L [ON/OFF]		Displays [ON/OFF] condition of tire pressure warning lamp.	B
KEY G/Y W/L [On/Off]		Displays [ON/OFF] condition of key green warning lamp.	C
EPS W/L [On/Off]		Displays [ON/OFF] condition of EPS warning indicator.	D
ECO MODE IND [On/Off]		Displays [ON/OFF] condition of ECO MODE indicator in the information display.	E
LCD		Displays the value of Intelligent Key system message indication.	F
ACC TARGET [On/Off]		Displays [ON/OFF] condition of the vehicle ahead detection indicator in the information display.	G
ACC DISTANCE [Off/Short/Middle/Long]		Displays [Off/Short/Middle/Long] condition of the set distance indicator in the information display.	H
ACC SET SPEED [Off, km/h or mph]		Displays OFF or SET vehicle speed status in the information display.	I
ACC UNIT [On/Off]		Displays [ON/OFF] condition of display unit in the information display.	J
SHIFT IND [P, R, N, D]		Displays shift selector position.	K
ECO DRIVE IND G [On/Off]		Displays [ON/OFF] condition of green ECO DRIVE indicator in the information display.	L
ECO DRIVE IND O [On/Off]		Displays [ON/OFF] condition of orange ECO DRIVE indicator in the information display.	M
DRIVE MODE STATS [STANDARD/ECO/SPORT/SNOW]		Displays condition of drive mode switch.	N
FUEL CAP W/L [On/Off]		Displays [ON/OFF] condition of loose fuel cap warning message.	O
M RANGE SW [On/Off]		Displays [ON/OFF] condition of manual mode switch.	P
NM RANGE SW [On/Off]		Displays [ON/OFF] condition of non-manual mode switch.	WCS
AT SFT UP SW [On/Off]		Displays [ON/OFF] condition of manual mode shift up switch.	
AT SFT DWN SW [On/Off]		Displays [ON/OFF] condition of manual mode shift down switch.	
PKB SW [On/Off]		Displays [ON/OFF] condition of parking brake switch.	
BUCKLE SW [On/Off]		Status of seat belt buckle switch LH.	
BRAKE OIL SW [On/Off]		Displays [ON/OFF] condition of brake fluid level switch.	
PASS BUCKLE SW [On/Off]		Status of passenger seat belt buckle switch RH.	
DISTANCE [km] or [Mi]		Displays distance to empty.	
OUTSIDE TEMP [°F or °C]		Displays the ambient air temperature which is input from the ambient sensor.	
FUEL LOW SIG [On/Off]		Displays [ON/OFF] condition of low-fuel warning signal.	

# DIAGNOSIS SYSTEM (COMBINATION METER)

## < SYSTEM DESCRIPTION >

Display item [Unit]	MAIN SIGNALS	Description
BUZZER [On/Off]	X	Buzzer status (in the combination meter) is detected from the buzzer output signal received from each unit via CAN communication and the warning output condition of the combination meter.
TPMS MALF [ON/OFF]		Displays [ON/OFF] condition of TPMS warning indicator.
BSW IND [On/Off]		Displays [On/Off] condition of vehicle ahead detection indicator in the information display.
LDP IND [On/Off]		Displays [Off, Short, Middle, Long] status of set distance indicator in the information display.

## WORK SUPPORT

Work support item	Description
Outside air temperature diagnosis	A possible malfunction can be narrowed down by following the displayed instructions.
Fuel meter diagnosis (Analog pointer)	
Warning lamp diagnosis	

## WARNING HISTORY

### Special menu

Display item	Description
W/L ON HISTORY	Lighting history of warning lamp and indicator lamp can be checked.

### W/L ON HISTORY

- “W/L ON HISTORY” indicates the “TIME” when the warning/ indicator lamp is turned on.
- The “TIME” above is:
  - 0: The condition that the warning/indicator lamp has been turned on 1 or more times after starting the engine and waiting for 30 seconds.
  - 1 - 39: The number of times the engine was restarted after the 0 condition.
  - NO W/L ON HISTORY: No warning/indicator lamp history is stored.

### NOTE:

- W/L ON HISTORY is not stored for approximately 30 seconds after the engine starts.
- Brake warning lamp does not store any history when the parking brake is applied or the brake fluid level gets low.

# DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

## DIAGNOSIS SYSTEM (BCM)

### COMMON ITEM

#### COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000011545917

##### CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

### APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Direct Diagnostic Mode	Description
Ecu Identification	The BCM part number is displayed.
Self Diagnostic Result	The BCM self diagnostic results are displayed.
Data Monitor	The BCM input/output data is displayed in real time.
Active Test	The BCM activates outputs to test components.
Work support	The settings for BCM functions can be changed.
Configuration	<ul style="list-style-type: none"><li>The vehicle specification can be read and saved.</li><li>The vehicle specification can be written when replacing BCM.</li></ul>
CAN Diag Support Mntr	The result of transmit/receive diagnosis of CAN communication is displayed.

### SYSTEM APPLICATION

BCM can perform the following functions.

System	Sub System	Direct Diagnostic Mode						
		Ecu Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN Diag Support Mntr
Door lock	DOOR LOCK		x	x	x	x		
Rear window defogger	REAR DEFOGGER			x	x	x		
Warning chime	BUZZER			x	x			
Interior room lamp timer	INT LAMP			x	x	x		
Exterior lamp	HEADLAMP			x	x	x		
Wiper and washer	WIPER			x	x	x		
Turn signal and hazard warning lamps	FLASHER			x	x			
Air conditioner	AIR CONDITIONER			x				
Intelligent Key system	INTELLIGENT KEY		x	x	x	x		
Combination switch	COMB SW			x				
BCM	BCM	x	x			x	x	x
Immobilizer	IMMU		x	x	x			
Interior room lamp battery saver	BATTERY SAVER			x	x			
Back door open	TRUNK			x				
Vehicle security system	THEFT ALM			x	x	x		
RAP system	RETAINED PWR			x				

# DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

System	Sub System	Direct Diagnostic Mode					
		Ecu Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration
Signal buffer system	SIGNAL BUFFER			x			
TPMS	AIR PRESSURE MONITOR		x	x	x	x	

## BUZZER

### BUZZER : CONSULT Function (BCM - BUZZER)

INFOID:000000011545918

#### CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

## DATA MONITOR

Monitor Item [Unit]	Description
PUSH SW [On/Off]	Indicates condition of push-button ignition switch.
UNLK SEN -DR [On/Off]	Indicates condition of door unlock sensor.
VEH SPEED 1 [km/h]	Indicates vehicle speed signal received from ABS on CAN communication line.
TAIL LAMP SW [On/Off]	Indicates condition of combination switch.
FR FOG SW [On/Off]	Indicates condition of front fog lamp switch.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.

## ACTIVE TEST

Test Item	Description
SEAT BELT WARN TEST	This test is able to check seat belt warning chime operation [On/Off].
LIGHT WARN ALM	This test is able to check light warning chime operation [On/Off].
REVERSE WARNING	This test is able to check reverse warning chime operation [On/Off].
ID REGIST WARNING	This test is able to check TPMS transmitter ID regist warning chime operation [On/Off].
RUN FLAT/T WARN BUZZER	This test is able to check tire warning buzzer operation [On/Off].

# BCM, COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

## ECU DIAGNOSIS INFORMATION

### BCM, COMBINATION METER

#### List of ECU Reference

INFOID:0000000011133155

ECU	Reference
BCM	<a href="#">BCS-29, "Reference Value"</a>
	<a href="#">BCS-49, "Fail_Safe"</a>
	<a href="#">BCS-49, "DTC Inspection Priority Chart"</a>
	<a href="#">BCS-51, "DTC Index"</a>
COMBINATION METER	<a href="#">MWI-21, "Reference Value"</a>
	<a href="#">MWI-26, "Fail-Safe"</a>
	<a href="#">MWI-26, "DTC Index"</a>

A

B

C

D

E

F

G

H

I

J

K

L

M

WCS

O

P

## **WARNING CHIME SYSTEM**


## < WIRING DIAGRAM >

# WIRING DIAGRAM

## WARNING CHIME SYSTEM

## Wiring Diagram

INFOID:0000000011133156

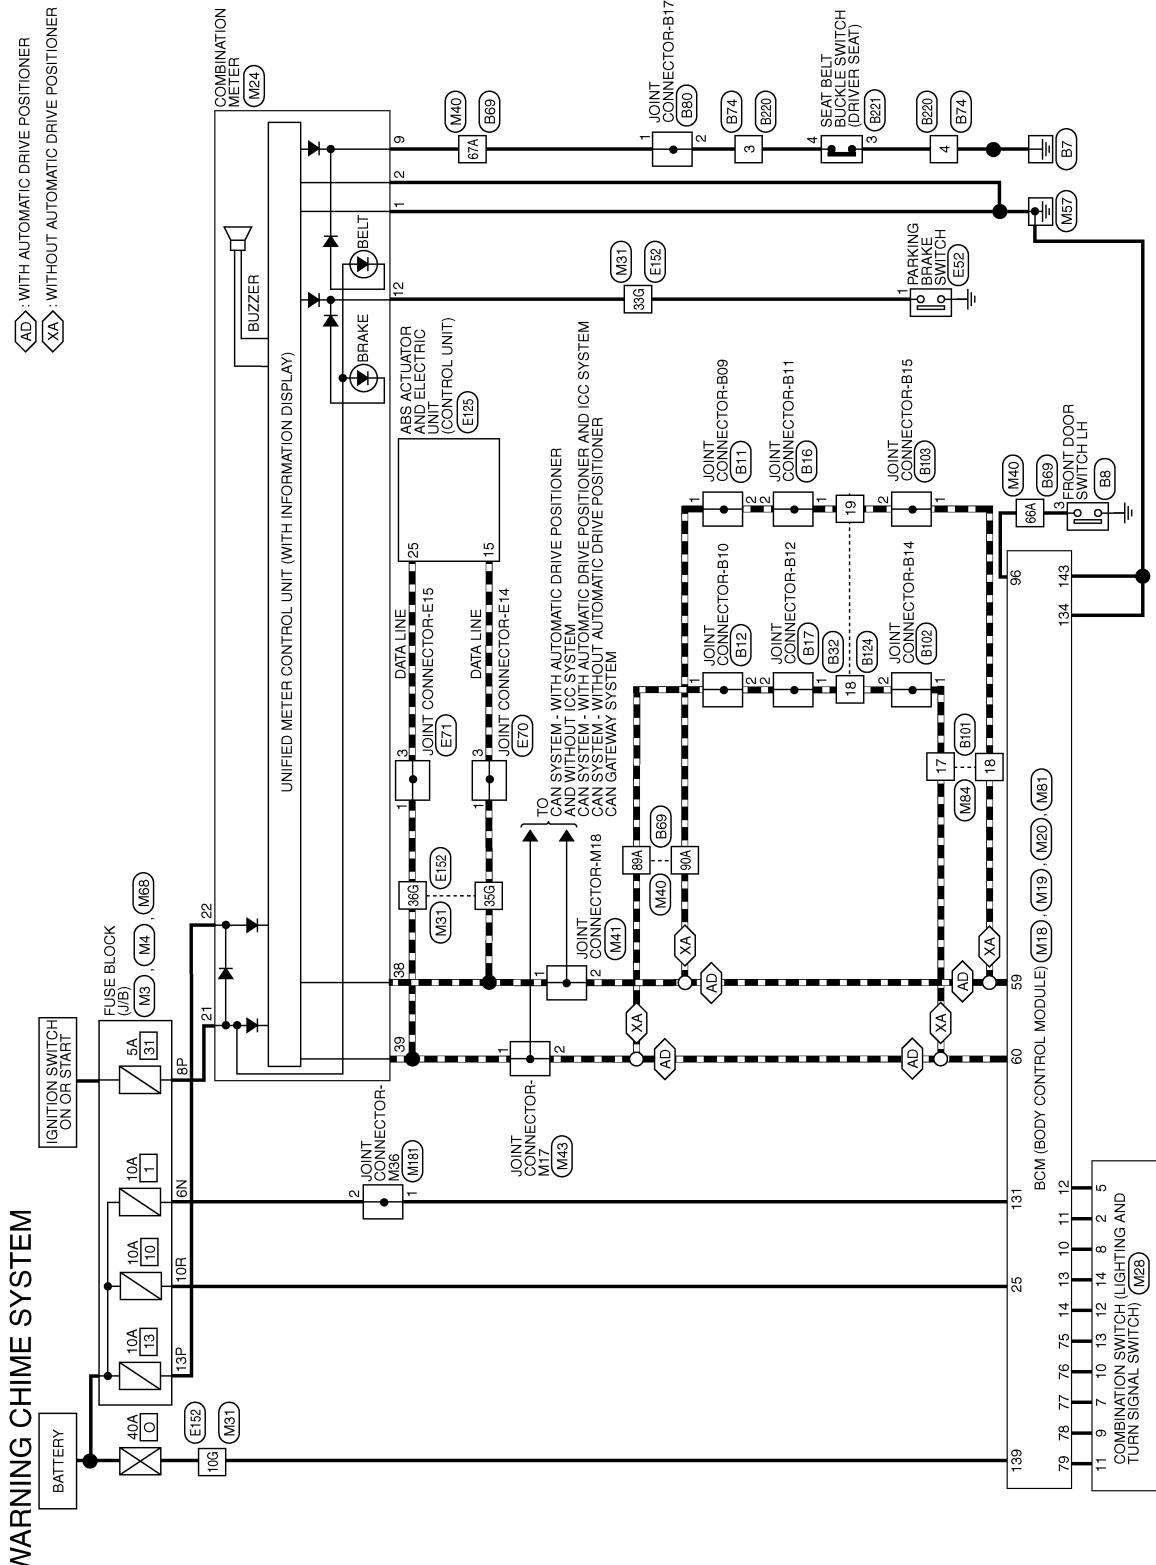


Revision: August 2014

# WARNING CHIME SYSTEM

**< WIRING DIAGRAM >**

## WARNING CHIME SYSTEM CONNECTORS


Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

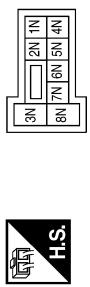

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN

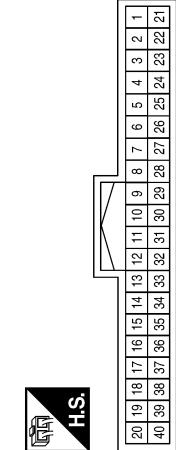


Terminal No.	Color of Wire	Signal Name
8P	BG	-
13P	W	-

Terminal No.	Color of Wire	Signal Name
6N	W	-
13P	W	-

Terminal No.	Color of Wire	Signal Name
8P	BG	-
13P	W	-
14	P	COMBI SW IN 1
25	W	BRAKE SW FUSE

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK

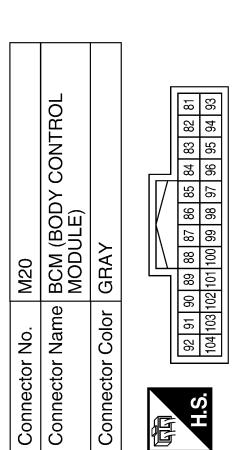

Terminal No.	Color of Wire	Signal Name
59	P	CAN-L
60	L	CAN-H
75	BG	COMBI SW OUT 5
76	P	COMBI SW OUT 4
77	P	COMBI SW OUT 3
78	W	COMBI SW OUT 2
79	W	COMBI SW OUT 1

96	BG	DR DOOR SW
----	----	------------


A B C D E F G H I J K L M N O P Q R S T U V W X Y Z

WCS

# WARNING CHIME SYSTEM


< WIRING DIAGRAM >

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE

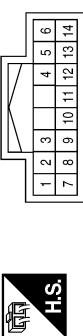



Terminal No.	Color of Wire	Signal Name	Signal Name
1	B	GND1	-
2	B	GND2	-
9	Y	DR BUCKLE SW	-
12	G	PKB	-
21	BG	IGN	-
22	W	BAT	-
38	P	CAN-L	-
39	L	CAN-H	-
13	BG	-	-
14	W	-	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

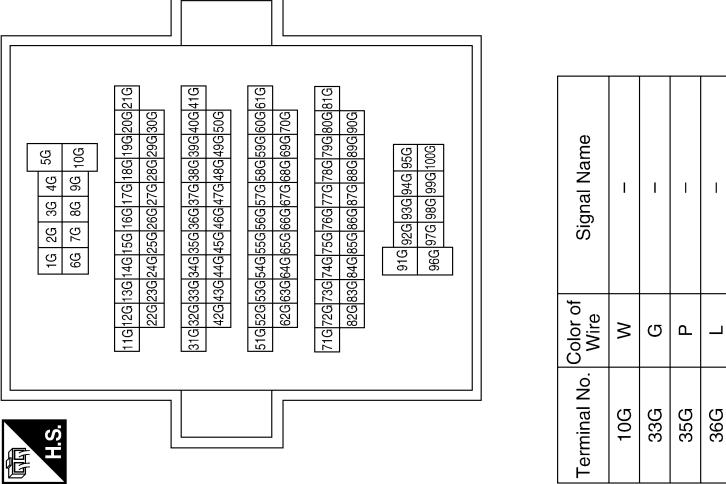

# WARNING CHIME SYSTEM

< WIRING DIAGRAM >

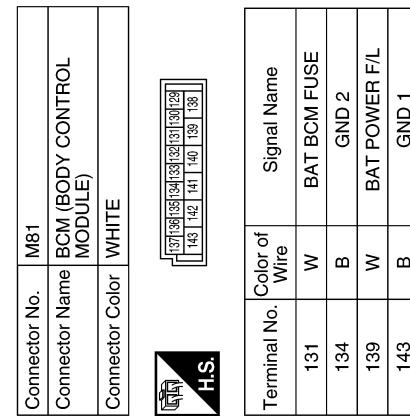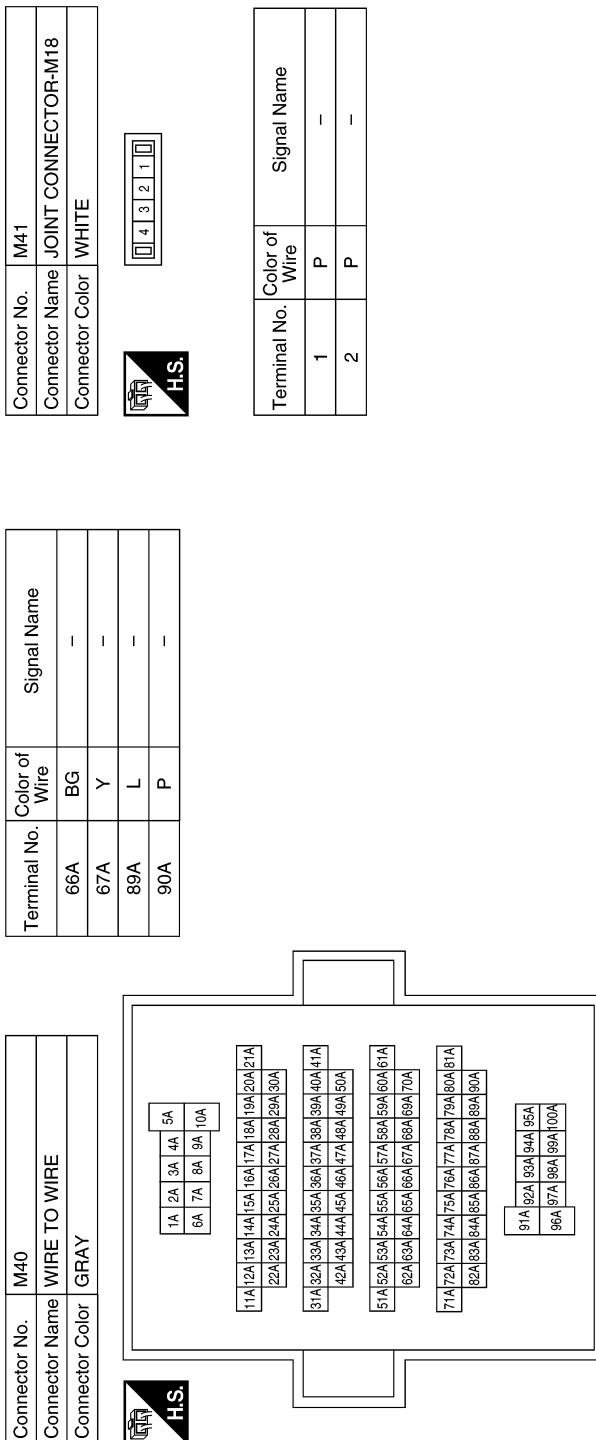

A B C D E F G H I J K L M P O

WCS

# WARNING CHIME SYSTEM

**< WIRING DIAGRAM >**

---


Connector No.	M181
Connector Name	JOINT CONNECTOR-M36
Connector Color	WHITE



Connector No.	E52
Connector Name	PARKING BRAKE SWITCH
Connector Color	BLACK



Connector No.	WIRE TO WIRE
Connector Color	WHITE

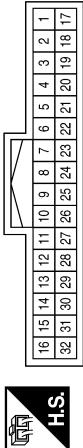

Terminal No.	Color of Wire	Signal Name
1	W	—
2	W	—

Terminal No.	Color of Wire	Signal Name
17	L	—
18	P	—

Terminal No.	Color of Wire	Signal Name
1	LG	—


Connector No.	E71
Connector Name	JOINT CONNECTOR-E15
Connector Color	BLACK

Connector No.	E70
Connector Name	JOINT CONNECTOR-E14
Connector Color	BLACK

Connector No.	H.S.
Connector Name	—

Connector No.	E125
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Color	BLACK

Connector No.	H.S.
Connector Name	—

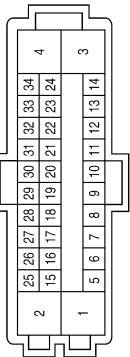


Terminal No.	Color of Wire	Signal Name
15	P	CAN-L
25	L	CAN-H

Terminal No.	Color of Wire	Signal Name
1	L	—
3	L	—

ABNIA3466GB

# WARNING CHIME SYSTEM

< WIRING DIAGRAM >

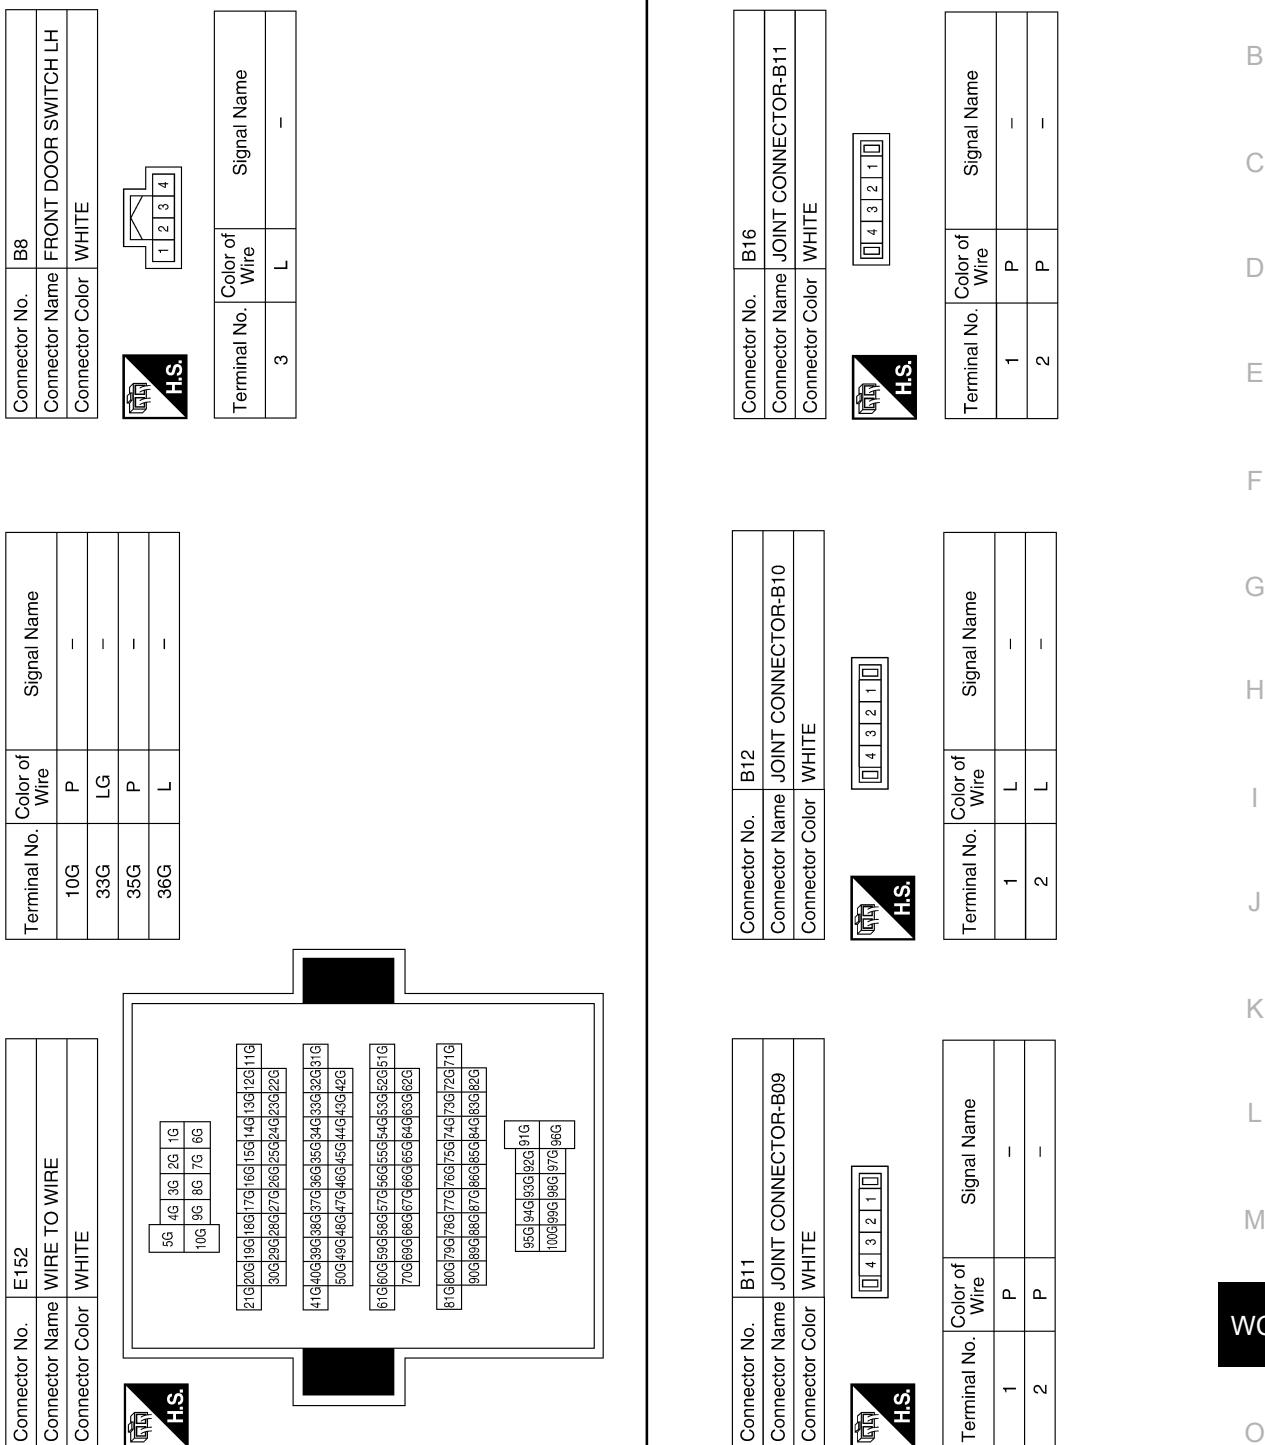


ABNIA4336GB

# WARNING CHIME SYSTEM


< WIRING DIAGRAM >

Connector No.	B17
Connector Name	JOINT CONNECTOR-B12
Connector Color	WHITE

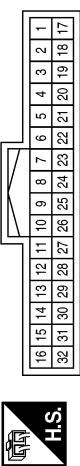

Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

Terminal No.	Color of Wire	Signal Name
18	L	-
19	P	-

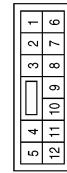

Terminal No.	Color of Wire	Signal Name
66A	L	-
67A	LG	-



Terminal No.	Color of Wire	Signal Name
89A	L	-
90A	P	-

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

Terminal No.	Color of Wire	Signal Name
21A	20A	19A
23A	28A	18A
30A	29A	17A
41A	40A	39A
50A	49A	48A
61A	60A	59A
70A	69A	68A
81A	80A	79A
90A	89A	88A

Terminal No.	Color of Wire	Signal Name
17A	16A	15A
27A	26A	25A
37A	36A	35A
47A	46A	45A
57A	56A	55A
67A	66A	65A
77A	76A	75A
87A	86A	85A
97A	96A	95A


Terminal No.	Color of Wire	Signal Name
13A	12A	11A
23A	22A	21A
33A	32A	31A
43A	42A	41A
53A	52A	51A
63A	62A	61A
73A	72A	71A
83A	82A	81A
93A	92A	91A

# WARNING CHIME SYSTEM


< WIRING DIAGRAM >

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P  
WCS

Connector No.	B101
Connector Name	JOINT CONNECTOR-B17
Connector Color	WHITE

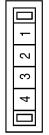


Connector No.	B80
Connector Name	JOINT CONNECTOR-B17
Connector Color	WHITE

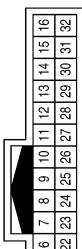


Terminal No.	Color of Wire	Signal Name
17	L	-
18	P	-

Terminal No.	Color of Wire	Signal Name
1	LG	-
2	LG	-


Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

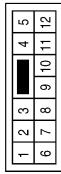

Connector No.	B124
Connector Name	WIRE TO WIRE
Connector Color	WHITE

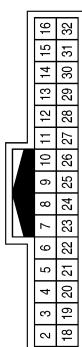

Terminal No.	Color of Wire	Signal Name
18	L	-
19	P	-

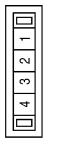

Terminal No.	Color of Wire	Signal Name
3	BG	-
4	GR	-

Terminal No.	Color of Wire	Signal Name
3	BG	-
4	GR	-

ABNIA3469GB

# **WARNING CHIME SYSTEM**

< WIRING DIAGRAM >

---

Connector No.	B221
Connector Name	SEAT BELT BUCKLE SWITCH (DRIVER SEAT)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	GR	-
4	BG	-

AANIA0713GB

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORKFLOW

#### Work Flow

INFOID:000000011133157

#### OVERALL SEQUENCE

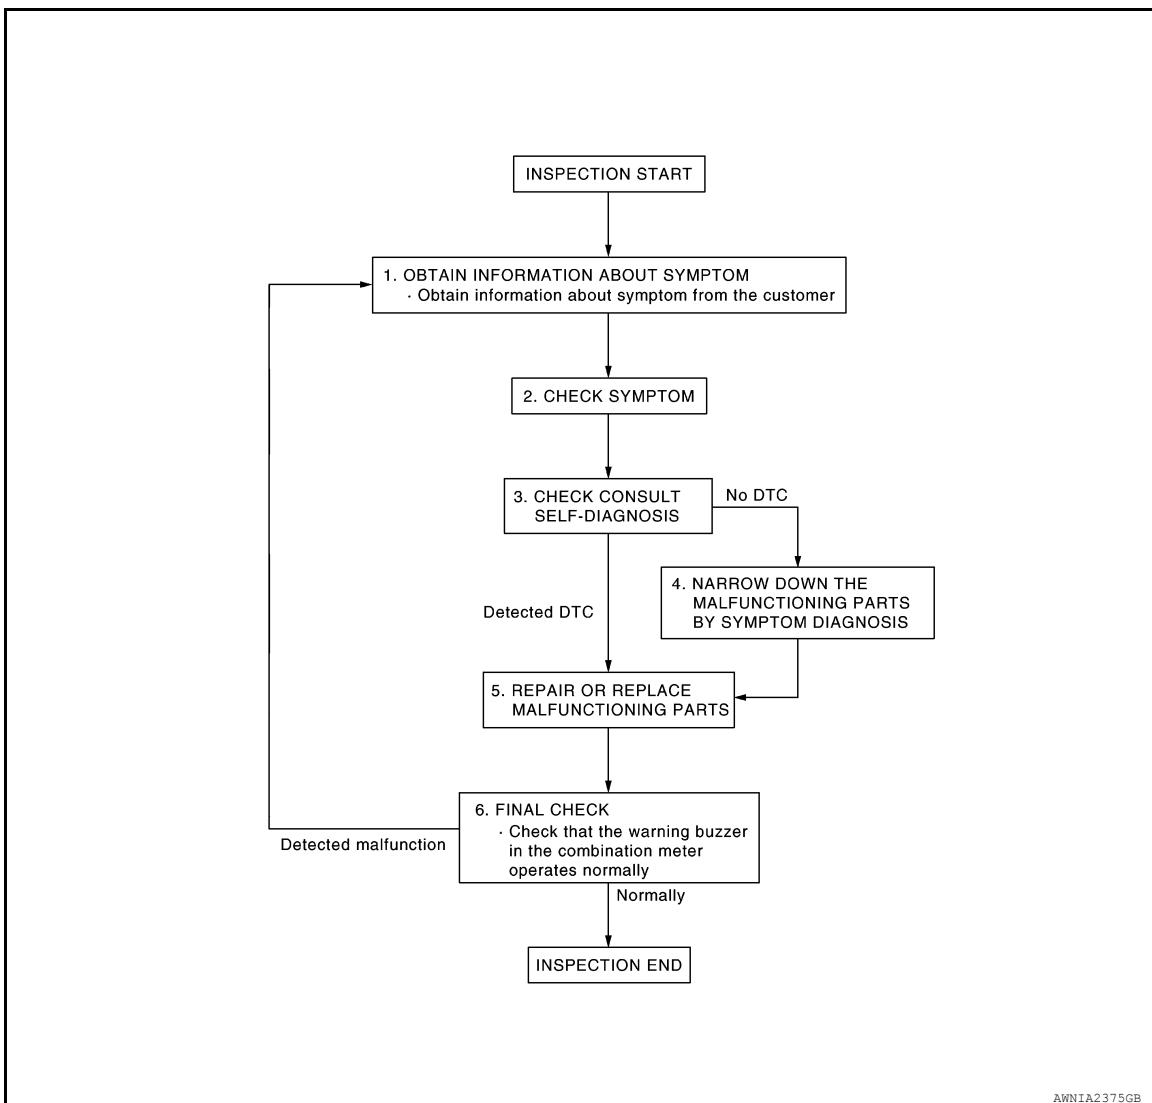

AWNIA2375GB

#### DETAILED FLOW

##### 1. OBTAIN INFORMATION ABOUT SYMPTOM

Interview the customer to obtain as much information as possible about the conditions and environment under which the malfunction occurred.

WCS

>> GO TO 2.

##### 2. CHECK SYMPTOM

- Check the symptom based on the information obtained from the customer.
- Check if any other malfunctions are present.

>> GO TO 3.

##### 3. CHECK CONSULT SELF-DIAGNOSIS RESULTS

Connect CONSULT and perform self-diagnosis. Refer to [MWI-26, "DTC Index"](#).

O

P

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

Are self-diagnosis results normal?

YES    >> GO TO 4.

NO    >> GO TO 5.

## 4. NARROW DOWN MALFUNCTIONING PARTS BY SYMPTOM DIAGNOSIS

Perform symptom diagnosis. Refer to [WCS-32, "Symptom Table"](#).

>> GO TO 5.

## 5. REPAIR OR REPLACE MALFUNCTIONING PARTS

Repair or replace malfunctioning parts.

**NOTE:**

If DTC is displayed, erase DTC after repairing or replacing malfunctioning parts.

>> GO TO 6.

## 6. FINAL CHECK

Check that the warning buzzer in the combination meter operates normally.

Does it operate normally?

YES    >> Inspection End.

NO    >> GO TO 1.

# POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## DTC/CIRCUIT DIAGNOSIS

### POWER SUPPLY AND GROUND CIRCUIT COMBINATION METER

#### COMBINATION METER : Diagnosis Procedure

INFOID:0000000011545919

Regarding Wiring Diagram information, refer to [MWI-29, "Wiring Diagram - With Automatic Drive Positioner"](#) or [MWI-49, "Wiring Diagram - Without Automatic Drive Positioner"](#).

#### 1. CHECK FUSES

Check for blown combination meter fuses.

Unit	Power source	Fuse No.
Combination meter	Battery	13
		65
	Ignition switch ON or START	31

Is the inspection result normal?

YES >> GO TO 2

NO >> Replace the fuse after repairing the affected circuit.

#### 2. POWER SUPPLY CIRCUIT CHECK

1. Disconnect combination meter connector.
2. Check voltage between combination meter harness connector M24 terminals 5, 21, 22 and ground.

Terminals		Ignition switch position			
(+) (-)		OFF	ACC	ON	START
Connector	Terminal				
M24	22	Ground	Battery voltage	Battery voltage	Battery voltage
	21		0V	0V	Battery voltage
	5		0V	Battery voltage	0V

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace harness or connectors.

#### 3. GROUND CIRCUIT CHECK

1. Turn ignition switch OFF.
2. Check continuity between combination meter harness connector M24 terminals 1, 2 and ground.

Terminals		Continuity
(+)	(-)	
Connector	Terminal	
M24	1	Yes
	2	

Is the inspection result normal?

YES >> Inspection End.

NO >> Repair or replace harness or connectors.

#### BCM (BODY CONTROL MODULE)

# POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## BCM (BODY CONTROL MODULE) : Diagnosis Procedure

INFOID:000000011545922

Regarding Wiring Diagram information, refer to [BCS-54, "Wiring Diagram"](#).

### 1. CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

Terminal No.	Signal name	Fuse and fusible link No.
139	Fusible link battery power	O (40A)
131	BCM battery fuse	1 (10A)

Is the fuse or fusible link blown?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit.

NO >> GO TO 2

### 2. CHECK POWER SUPPLY CIRCUIT

1. Disconnect BCM connector M81.
2. Check voltage between BCM connector M81 terminals 131, 139 and ground.

BCM		Ground	Voltage (Approx.)
Connector	Terminal		
M81	131	—	Battery voltage
	139		

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace harness or connectors.

### 3. CHECK GROUND CIRCUIT

Check continuity between BCM connector M81 terminals 134, 143 and ground.

BCM		Ground	Continuity
Connector	Terminal		
M81	134	—	Yes
	143		

Is the inspection result normal?

YES >> Inspection End.

NO >> Repair or replace harness or connectors.

# METER BUZZER CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## METER BUZZER CIRCUIT

### Description

INFOID:0000000011133160

- The buzzer for the warning chime system is installed in the combination meter.
- The combination meter sounds the buzzer based on the signals transmitted from various units.

### Component Function Check

INFOID:0000000011133161

#### 1. CHECK OPERATION OF METER BUZZER

1. Select BUZZER of BCM on CONSULT.
2. Perform LIGHT WARN ALM or SEAT BELT WARN TEST of ACTIVE TEST.

#### Does meter buzzer activate?

- YES    >> Inspection End.  
NO    >> Refer to [WCS-29, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:0000000011133162

#### 1. CHECK COMBINATION METER INPUT SIGNAL

Select the Data Monitor for the "METER/M&A" and check the BUZZER monitor value.

BUZZER  
Under the condition of buzzer input : On  
Except above : Off

#### Is the inspection result normal?

- YES    >> Replace combination meter. Refer to [MWI-96, "Removal and Installation"](#).  
NO    >> Replace BCM. Refer to [BCS-79, "Removal and Installation"](#).

WCS

# SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT

### Description

INFOID:0000000011133163

Transmits a seat belt buckle switch signal to the combination meter.

### Component Function Check

INFOID:0000000011133164

#### 1. CHECK COMBINATION METER INPUT SIGNAL

1. Start engine.
2. Monitor seat belt warning lamp while fastening and unfastening the driver seat belt buckle.

##### **Seat belt warning lamp**

**When driver seat belt is fastened : OFF**

**When driver seat belt is unfastened : ON**

Is the inspection result normal?

YES >> Inspection End.

NO >> Refer to [WCS-30, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:0000000011133165

Regarding Wiring Diagram information, refer to [WCS-16, "Wiring Diagram"](#).

#### 1. CHECK COMBINATION METER INPUT SIGNAL

1. Turn ignition switch ON.
2. Check voltage between combination meter harness connector M24 terminal 9 and ground.

##### **9 - Ground**

**When driver seat belt is fastened : Approx. 12V**

**When driver seat belt is unfastened : Approx. 0V**

Is the inspection result normal?

YES >> Replace combination meter. Refer to [MWI-96, "Removal and Installation"](#).

NO >> GO TO 2

#### 2. CHECK SEAT BELT BUCKLE SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter harness connector M24 and seat belt buckle switch (driver seat) harness connector B221.
3. Check continuity between combination meter harness connector M24 terminal 9 and seat belt buckle switch (driver seat) harness connector B221 terminal 4.

**9 - 4 : Continuity should exist.**

4. Check continuity between combination meter harness connector M24 terminal 9 and ground.

**9 - Ground : Continuity should not exist.**

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace harness or connectors.

#### 3. CHECK SEAT BELT BUCKLE SWITCH GROUND CIRCUIT

Check continuity between seat belt buckle switch (driver seat) harness connector B221 terminal 3 and ground.

**3 - Ground : Continuity should exist.**

# SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

- YES    >> Inspection End.  
NO    >> Repair or replace harness or connectors.

## Component Inspection

INFOID:000000011133166

### 1. CHECK SEAT BELT BUCKLE SWITCH

1. Turn ignition switch OFF.
2. Disconnect the seat belt buckle switch (driver seat) connector.
3. Check continuity between the seat belt buckle switch (driver seat) terminals 3 and 4.

**3– 4**

**When seat belt is fastened**    : Continuity should not exist.

**When seat belt is unfastened**    : Continuity should exist.

Is the inspection result normal?

- YES    >> Inspection End.  
NO    >> Replace the seat belt buckle switch (driver seat). Refer to [SR-30, "Removal and Installation"](#).

A

B

C

D

E

F

G

H

I

J

K

L

M

WCS

O

P

## WARNING CHIME SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

### SYMPTOM DIAGNOSIS

#### WARNING CHIME SYSTEM SYMPTOMS

##### Symptom Table

INFOID:0000000011133167

##### CAUTION:

Perform the self-diagnosis with CONSULT before the symptom diagnosis. Perform the trouble diagnosis if any DTC is detected.

Symptom	Possible cause	Inspection item
The light reminder warning does not sound.	<ul style="list-style-type: none"><li>• Harness between BCM and front door switch LH</li><li>• Front door switch LH</li><li>• BCM</li><li>• Combination meter</li></ul>	Refer to <a href="#">WCS-33</a> .
The parking brake release warning continues sounding or does not sound.	<ul style="list-style-type: none"><li>• Harness between combination meter and parking brake switch</li><li>• Parking brake switch</li><li>• BCM</li><li>• Combination meter</li></ul>	Refer to <a href="#">WCS-35</a> .
The seat belt warning continues sounding or does not sound.	<ul style="list-style-type: none"><li>• Harness between combination meter and seat belt buckle switch (driver seat)</li><li>• Seat belt buckle switch (driver seat)</li><li>• BCM</li><li>• Combination meter</li></ul>	Refer to <a href="#">WCS-34</a> .
Warning chime does not sound at all.	<ul style="list-style-type: none"><li>• BCM</li><li>• Combination meter</li></ul>	Refer to <a href="#">WCS-29</a> .

# THE LIGHT REMINDER WARNING DOES NOT SOUND

< SYMPTOM DIAGNOSIS >

## THE LIGHT REMINDER WARNING DOES NOT SOUND

### Description

INFOID:0000000011133168

Light reminder warning does not sound even though headlamp is illuminated.

### Diagnosis Procedure

INFOID:0000000011133169

#### 1. CHECK COMBINATION METER INPUT SIGNAL

Select the "Data Monitor" for the "METER/M&A" and check the "BUZZER" monitor value.

##### BUZZER

Under the condition of buzzer input : On  
Except above : Off

##### Is the inspection result normal?

YES >> Replace combination meter. Refer to [MWI-96, "Removal and Installation"](#).

NO >> GO TO 2

#### 2. CHECK FRONT DOOR SWITCH LH SIGNAL CIRCUIT

Perform inspection of the front door switch LH signal circuit. Refer to [DLK-171, "Diagnosis Procedure"](#).

##### Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace harness or connectors.

#### 3. CHECK FRONT DOOR SWITCH LH

Perform a unit inspection for the front door switch LH. Refer to [DLK-172, "Component Inspection"](#).

##### Is the inspection result normal?

YES >> Replace the BCM. Refer to [BCS-79, "Removal and Installation"](#).

NO >> Replace the front door switch LH. Refer to [DLK-308, "Removal and Installation"](#).

A

B

C

D

E

F

G

H

I

J

K

L

M

WCS

O

P

# THE SEAT BELT WARNING CONTINUES SOUNDING, OR DOES NOT SOUND

< SYMPTOM DIAGNOSIS >

## THE SEAT BELT WARNING CONTINUES SOUNDING, OR DOES NOT SOUND

### Description

INFOID:000000011133170

- Seat belt warning does not sound even though driver seat belt is not fastened.
- Seat belt warning sounds even though driver seat belt is fastened.

### Diagnosis Procedure

INFOID:000000011133171

#### 1. CHECK WARNING CHIME OPERATION

1. Select "BUZZER" of "BCM" on CONSULT.
2. Perform "SEAT BELT WARN TEST" of "ACTIVE TEST".

Is the inspection result normal?

YES >> GO TO 2

NO >> Replace combination meter. Refer to [MWI-96, "Removal and Installation"](#).

#### 2. CHECK SEAT BELT WARNING LAMP

1. Turn ignition switch ON.
2. Check the operation of the seat belt warning lamp in the combination meter.

**Driver seat belt fastened : OFF**

**Driver seat belt not fastened : ON**

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-79, "Removal and Installation"](#).

NO >> GO TO 3

#### 3. CHECK SEAT BELT BUCKLE SWITCH CIRCUIT

Perform inspection of the seat belt buckle switch (driver seat) circuit. Refer to [WCS-30, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 4

NO >> Repair or replace harness or connectors.

#### 4. CHECK SEAT BELT BUCKLE SWITCH

Perform a unit inspection for the seat belt buckle switch (driver seat). Refer to [WCS-31, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace the combination meter. Refer to [MWI-96, "Removal and Installation"](#).

NO >> Replace the seat belt buckle switch (driver seat). Refer to [SB-8, "Front Seat Belt"](#).

# THE PARKING BRAKE RELEASE WARNING CONTINUES SOUNDING, OR DOES NOT SOUND

< SYMPTOM DIAGNOSIS >

## THE PARKING BRAKE RELEASE WARNING CONTINUES SOUNDING, OR DOES NOT SOUND

### Description

INFOID:000000011133172

- The parking brake warning buzzer sounds continuously during vehicle travel though the parking brake is released.
- The parking brake warning buzzer does not sound at all even though driving the vehicle with the parking brake applied.

### Diagnosis Procedure

INFOID:000000011133173

#### 1. CHECK PARKING BRAKE WARNING LAMP

1. Start the engine.
2. Check the operation of the brake warning lamp by operating the parking brake.

Parking brake ON : ON

Parking brake OFF : OFF

Is the inspection result normal?

YES >> Replace the combination meter. Refer to [MWI-96, "Removal and Installation"](#).

NO >> GO TO 2

#### 2. CHECK PARKING BRAKE SWITCH SIGNAL CIRCUIT

Perform inspection of the parking brake switch signal circuit. Refer to [MWI-84, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace harnessor connectors.

#### 3. CHECK PARKING BRAKE SWITCH UNIT

Perform a unit inspection for the parking brake switch. Refer to [MWI-84, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace the combination meter. Refer to [MWI-96, "Removal and Installation"](#).

NO >> Replace the parking brake switch.

A

B

C

D

E

F

G

H

I

J

K

L

M

WCS

O

P