

DLN

Е

# **CONTENTS**

TRANSFER: TY21C	ECU DIAGNOSIS INFORMATION19
PRECAUTION	Defended Malace
PRECAUTIONS	Reference Value19 G
Precaution for Supplemental Restraint System	Protection Function21
(SRS) "AIR BAG" and "SEAT BELT PRE-TEN-	DTC Inspection Priority Chart 21
SIONER"	4 DTC Index22
Precaution for Procedure without Cowl Top Cove Precaution for Battery Service	er4 4 WIRING DIAGRAM23
Service Notice or Precautions for Transfer	<sup>4</sup> AWD SYSTEM23
PREPARATION	
PREPARATION	
Special Service Tool  Commercial Service Tool	
	Work Flow33
SYSTEM DESCRIPTION	9 Diagnostic Work Sheet
COMPONENT PARTS  Component Parts Location	
AWD Control Unit	
AWD Solenoid	10 Work Procedure36
Electric Controlled Coupling	10
AWD Warning Icon/Display	UNIT CHARACTERISTICS WRITING37
STRUCTURE AND OPERATION	Description
Sectional View	
Operation Description	····· <sup>12</sup>
SYSTEM	
	DTC Logic38
AWD SYSTEM	
AWD SYSTEM : System Description	
AWD SYSTEM : Circuit Diagram	10
AWD SYSTEM : Fail-SafeAWD SYSTEM : Protection Function	
AVVD STSTEM . Protection Function	16 DTC Logic39 Diagnosis Procedure39
DIAGNOSIS SYSTEM (AWD CONTROL	•
UNIT)	
CONSULT Function	
	Diagnosis Procedure40

Component Inspection	42	PERIODIC MAINTENANCE	60
C1205 AWD ACTUATOR RELAY	43	TRANSFER OIL	60
DTC Logic	43	Inspection	60
Diagnosis Procedure	43	Draining	
		Refilling	
C1210 ECM			
DTC Logic		REMOVAL AND INSTALLATION	62
Diagnosis Procedure	45		
DAGGA ANAD CONTROL LINUT		AWD CONTROL UNIT	
P1804 AWD CONTROL UNIT		Removal and Installation	62
DTC Logic		TRANSFER COVER	
Diagnosis Procedure	46	TRANSFER COVER	
P181F INCOMPLETE CALIBRATION	47	Removal and Installation	63
		UNIT REMOVAL AND INSTALLATION	C 4
DTC Logic		UNIT REMOVAL AND INSTALLATION	64
Diagnosis Procedure	47	TRANSFER ASSEMBLY	64
U1000 CAN COMM CIRCUIT	48	Exploded View	
Description		Removal and Installation	
DTC Logic		Removal and installation	04
Diagnosis Procedure		UNIT DISASSEMBLY AND ASSEMBLY	66
Diagnosis i rocedure	40		-
U1010 CONTROL UNIT (CAN)	49	TRANSFER COVER	66
Description		Exploded View	66
DTC Logic		Disassembly	67
Diagnosis Procedure		Assembly	
		Inspection	
POWER SUPPLY AND GROUND CIRCUIT .	50	·	
Diagnosis Procedure	50	RING GEAR SHAFT	70
		Exploded View	70
AWD WARNING ICON/DISPLAY		Disassembly	71
Diagnosis Procedure	53	Assembly	
OVMBTOM BLACKOOK		Inspection	
SYMPTOM DIAGNOSIS	54		
AWD ERROR IS DISPLAYED ON INFORMA		DRIVE PINION	
TION DISPLAY		Exploded View	
		Disassembly	
Description		Assembly	
Diagnosis Procedure	54	Adjustment	
HEAVY TIGHT-CORNER BRAKING SYMP-		Inspection	82
TOM OCCURS	55	TDANCEED CACE	
Description		TRANSFER CASE	
Diagnosis Procedure		Exploded View	
Diagnosis Procedure	၁၁	Disassembly	
VEHICLE DOES NOT ENTER AWD MODE.	56	Assembly	
Description		Inspection	86
Diagnosis Procedure		SERVICE DATA AND SPECIFICATIONS	
•			
AWD HIGH TEMP IS DISPLAYED ON INFOR	-	(SDS)	87
MATION DISPLAY	57	SERVICE DATA AND SPECIFICATIONS	
Description			~=
·	•.	(SDS)	
TIRE SIZE INCORRECT IS DISPLAYED ON		General Specifications	
INFORMATION DISPLAY	58	Preload Torque	
Description		Backlash	
Diagnosis Procedure		Companion Flange Runout	
-		REAR PROPELLER SHAFT: 3FCJ-CVJ	
NOISE, VIBRATION AND HARSHNESS			
(NVH) TROUBLESHOOTING	59	PRECAUTION	88
NVH Troubleshooting Chart			
<u> </u>	-		

PRECAUTIONS88	Description101
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN-	Work Procedure
SIONER"88	ADDITIONAL SERVICE WHEN REPLACING ELECTRIC CONTROLLED COUPLING 102
PREPARATION89	Description
PREPARATION89	CVMPTOM DIA CNOCIC
Commercial Service Tool89	SYMPTOM DIAGNOSIS103
SYMPTOM DIAGNOSIS90	NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING103
NOISE, VIBRATION AND HARSHNESS	NVH Troubleshooting Chart103
(NVH) TROUBLESHOOTING90	DEDIODIO MAINTENANOE
NVH Troubleshooting Chart90	PERIODIC MAINTENANCE104
BASIC INSPECTION91	REAR DIFFERENTIAL GEAR OIL104 Inspection104
PROPELLER SHAFT ASSEMBLY91	Draining 104
Inspection91	Refilling104
REMOVAL AND INSTALLATION92	REMOVAL AND INSTALLATION 106
REAR PROPELLER SHAFT92	TORSIONAL DAMPER106
Exploded View92	Exploded View106
Removal and Installation92	Removal and Installation106
Inspection94	SIDE OIL SEAL108
SERVICE DATA AND SPECIFICATIONS	Exploded View
(SDS)96	Removal and Installation
,	
SERVICE DATA AND SPECIFICATIONS	ELECTRIC CONTROLLED COUPLING 110
(SDS)96	Exploded View
General Specifications96	Removal and Installation110
Propeller Shaft Runout96	FRONT OIL SEAL113
Journal Axial Play96  REAR FINAL DRIVE: R145K1	Exploded View113
KEAKTINAL DIVE. K145K1	Removal and Installation113
PRECAUTION97	UNIT REMOVAL AND INSTALLATION 117
PRECAUTIONS97	REAR FINAL DRIVE ASSEMBLY117
Precaution for Supplemental Restraint System	Exploded View117
(SRS) "AIR BAG" and "SEAT BELT PRE-TEN-	Removal and Installation117
SIONER"97 Service Notice or Precautions for Rear Final Drive97	UNIT DISASSEMBLY AND ASSEMBLY . 120
PREPARATION98	REAR FINAL DRIVE ASSEMBLY120
PREPARATION98	Exploded View120
Special Service Tools98	Disassembly120
Commercial Service Tools98	Assembly
	Adjustment
SYSTEM DESCRIPTION100	Inspection124
STRUCTURE AND OPERATION100	SERVICE DATA AND SPECIFICATIONS
Sectional View100	(SDS)125
Electric Controlled Coupling100	SERVICE DATA AND SPECIFICATIONS
BASIC INSPECTION101	(SDS)125
	General Specification
ADDITIONAL SERVICE WHEN REPLACING REAR FINAL DRIVE ASSEMBLY101	Companion Flange Runout125

< PRECAUTION > [TRANSFER: TY21C]

# **PRECAUTION**

### **PRECAUTIONS**

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes dual stage front air bag modules. The SRS system may only deploy one front air bag, depending on the severity of a collision and whether the front passenger seat is occupied. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, it is recommended that all maintenance and repair be performed by an authorized NISSAN/INFINITI dealer.
- Improper repair, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS


### **WARNING:**

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery or batteries, and wait at least three minutes before performing any service.

# Precaution for Procedure without Cowl Top Cover

INFOID:0000000012856436

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

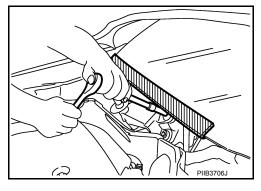

# Precaution for Battery Service

INFOID:0000000012856437

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

### Service Notice or Precautions for Transfer

INFOID:0000000012856438

- · After overhaul refill the transfer with new transfer oil.
- Check the oil level or replace the oil only with the vehicle parked on level surface.
- · During removal or installation, keep inside of transfer clear of dust or dirt.

Revision: April 2016 DLN-4 2016 QX60

### **PRECAUTIONS**

< PRECAUTION > [TRANSFER: TY21C]

 Replace all tires at the same time. Always use tires of the proper size and the same brand and pattern. Fitting improper size and unusual wear tires applies excessive force to vehicle mechanism and can cause longitudinal vibration.

- Disassembly should be done in a clean work area.
- Before proceeding with disassembly, thoroughly clean the transfer. It is important to prevent the internal parts from becoming contaminated by dirt or other foreign matter.
- Check for the correct installation status prior to removal or disassembly. If matching marks are required, be certain they do not interfere with the function of the parts when applied.
- All parts should be carefully cleaned with a general purpose, non-flammable solvent before inspection or reassembly.
- Check appearance of the disassembled parts for damage, deformation, and unusual wear. Replace them with a new one if necessary.
- Gaskets, seals, O-rings and lock nuts should be replaced any time when the transfer is disassembled.
- In principle, tighten bolts or nuts gradually in several steps working diagonally from inside to outside. If tightening sequence is specified, use it.
- Observe the specified torque when assembling.
- Clean and flush the parts sufficiently and blow-dry them.
- Be careful not to damage sliding surfaces and mating surfaces.
- Use lint-free cloth or towels for wiping parts clean. Common shop rags can leave fibers that could interfere with the operation of the transfer.

DLN

В

Е

F

G

Н

K

L

M

Ν

0

Р

### **PREPARATION**

< PREPARATION > [TRANSFER: TY21C]

# **PREPARATION**

# **PREPARATION**

# Special Service Tool

INFOID:0000000012856439

Tool number (TechMate No.) Tool name		Description
ST33061000 (J-8107-2) Drift a: 38 mm (1.50 in) dia. b: 28.5 mm (1.122 in) dia.	ZZAO810D	Removing ring gear bearing (left) inner race (transfer case side)
KV381054S0		Removing ring gear shaft oil seal
(J-34286) Puller	ZZA0601D	
ST3127S000 (J-25765-A) Preload gauge		Measuring preload torque
	ZZA0503D	

# **Commercial Service Tool**

INFOID:0000000012856440

Tool name		Description
Power tool		Loosening nuts and bolts and nuts
	PIIB1407E	
Drift a: 52 mm (2.05 in) dia. b: 44 mm (1.73 in) dia.		Removing gear ring bearing inner race (adapter case side)
	a b ZZA1002D	

ZZA0503D

# **PREPARATION**

< PREPARATION > [TRANSFER: TY21C]

PREPARATION >		[TRANSFER: 11210]
Tool name		Description
Drift a: 56.5 mm (2.224 in) dia. b: 48 mm (1.89 in) dia.		Installing side oil seal (installing transfer case oil seal)
	a b	
Drift	NT115	Installing ring gear shaft oil seal
: 44 mm (1.73 in) dia. :: 33 mm (1.3 in) dia.		moduling mig godi ondit on ood.
	a b	
Puller	NT115	Removing ring gear bearing (left) inner race (transfer case side)
Drift	U	Installing oil seal (installing pinion bearing
a: 70 mm (2.76 in) dia. b: 60 mm (2.36 in) dia.	b	seal)
	A NT115	
Orift a: 78 mm (3.07 in) dia. o: 68 mm (2.68 in) dia.		Installing side oil seal (installing transfer cover oil seal)
	a b	
Replacer	NT115	Removing drive pinion     Removing ring gear bearing (left) inner race
		(transfer cover side)
Drift	ZZA0700D	Installing ring goar boaring (Io#) inner roce
Driπ a: 58 mm (2.28 in) dia. b: 55 mm (2.17 in) dia.		Installing ring gear bearing (left) inner race (transfer case side)
	a b	
	NT115	

# **PREPARATION**


< PREPARATION > [TRANSFER: TY21C]

< PREPARATION >		[TRANSFER: TY21C]
Tool name		Description
Drift a: 62 mm (2.44 in) dia. b: 58 mm (2.28 in) dia.	a b NT115	Installing ring gear bearing (right) inner race (transfer cover side)
Drift a: 73.5 mm (2.894 in) dia.	a SCIA5338E	Installing ring gear bearing (left) outer race (transfer case side)
Drift a: 87 mm (3.43 in) dia.	a SCIA5338E	Installing ring gear bearing (right) outer race (transfer cover side)
Drift a: 20 mm (0.79 in) dia.	a SCIA5338E	Removing drive pinion
Drift a: 50 mm (1.97 in) dia. b: 41 mm (1.61 in) dia.	a b NT115	Installing pinion bearing
Drift a: 40 mm (1.57 in) dia. b: 25 mm (0.98 in) dia.	NT115	Installing companion flange

# SYSTEM DESCRIPTION

# **COMPONENT PARTS**

# **Component Parts Location**

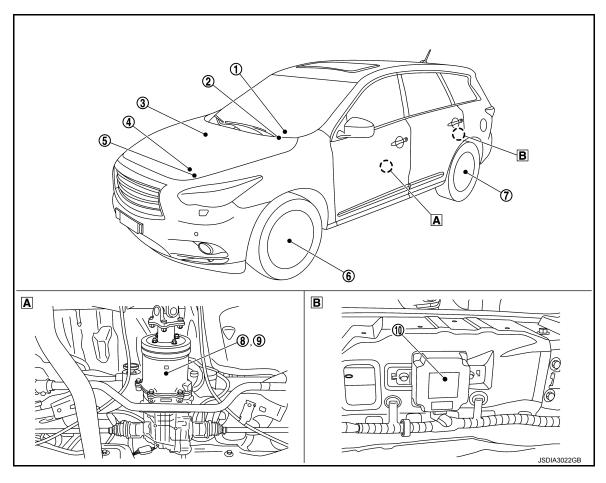

A. Rear final drive assembly

B. Inside storage room

No.	Component parts	Reference/Function
1	Combination meter (AWD warning icon/display)	Transmits/receives the signals for control of AWD system via CAN communication line to/from AWD control unit. For transmitting/receiving mainly signals, refer to <a href="DLN-14">DLN-14</a> , "AWD SYSTEM: System Description" Refer to <a href="MWI-6">MWI-6</a> , "METER SYSTEM: Component Parts Location" for detailed installation location.
2	Steering angle sensor	Transmits/receives the signals for control of AWD system via CAN communication line to/from AWD control unit. For transmitting/receiving mainly signals, refer to <a href="DLN-14">DLN-14</a> , "AWD SYSTEM: System Description" Refer to <a href="BRC-12">BRC-12</a> , "Steering Angle Sensor".
3	ABS actuator and electric unit (control unit)	Transmits/receives the signals for control of AWD system via CAN communication line to/from AWD control unit. For transmitting/receiving mainly signals, refer to <u>DLN-14</u> , "AWD SYSTEM: System Description" Refer to <u>BRC-11</u> , "ABS Actuator and Electric Unit (Control Unit)".
4	TCM	Transmits/receives the signals for control of AWD system via CAN communication line to/from AWD control unit. For transmitting/receiving mainly signals, refer to <a href="DLN-14">DLN-14</a> , "AWD SYSTEM: System Description" Refer to <a href="TM-15">TM-15</a> , "CVT CONTROL SYSTEM: Component Parts Location" (RE0F10E) or <a href="TM-241">TM-241</a> , "CVT CONTROL SYSTEM: Component Parts Location" (RE0F10J) for detailed installation location.

Revision: April 2016 **DLN-9** 2016 QX60

С

Α

В

[TRANSFER: TY21C]

INFOID:0000000012856441

DLN

Е

F

G

Н

1

K

. .

L

 $\mathbb{N}$ 

Ν

0

Р

### COMPONENT PARTS

### < SYSTEM DESCRIPTION >

No.	Component parts	Reference/Function
5	ECM	Transmits/receives the signals for control of AWD system via CAN communication line to/from AWD control unit. For transmitting/receiving mainly signals, refer to <a href="DLN-14">DLN-14</a> , "AWD SYSTEM: System Description" Refer to <a href="EC-22">EC-22</a> , "ENGINE CONTROL SYSTEM: Component Parts Location" (except for Mexico) or <a href="EC-574">EC-574</a> , "ENGINE CONTROL SYSTEM: Component Parts Location" (for Mexico) for detailed installation location.
6	Front wheel sensor	BRC-11, "Wheel Sensor and Sensor Rotor"
7	Rear wheel sensor	BRC-11, Wheel Sensor and Sensor Rotor
8	AWD solenoid	DLN-10, "AWD Solenoid"
9	Electric controlled coupling	DLN-10, "Electric Controlled Coupling"
10	AWD control unit	DLN-10, "AWD Control Unit"

AWD Control Unit

- Controls driving force distribution by signals from each sensor from front wheel driving mode (100:0) to 4wheel driving mode (50:50).
- Front wheel driving conditions is available by fail-safe function if malfunction is detected in AWD system.
- AWD actuator relay is integrated with AWD control unit, and supplies AWD solenoid with voltage.

AWD Solenoid

Controls electric controlled coupling by command current from AWD control unit.

### Electric Controlled Coupling

INFOID:0000000012856444

[TRANSFER: TY21C]

Electric controlled coupling is integrated with rear final drive and transmits driving force to rear final drive. For operation, refer to <u>DLN-12</u>, "<u>Operation Description</u>".

### AWD Warning Icon/Display

INFOID:0000000012856445

AWD warning icon/display is displayed when there is a malfunction in AWD system. AWD warning icon/display indicates the vehicle is in fail-safe mode and shifting to front-wheel drive or 4-wheel drive (rear-wheels still have some driving torque).

### AWD WARNING ICON/DISPLAY INDICATION

Condition	AWD warning icon/display
AWD system malfunction	AWD Error: See Owner's Manual
Protection function is activated due to heavy load to electric controlled coupling. (AWD system is not malfunctioning and AWD system changes to front wheel drive.) When this message is displayed, refer to <a href="DLN-57">DLN-57</a> . "Description".	AWD High Temp. Stop Vehicle  JSDIA3104GB  (Displaying for approximately 1 minute and then turned OFF)

# **COMPONENT PARTS**

# < SYSTEM DESCRIPTION >

Condition	AWD warning icon/display	
Large difference in diameter of front/rear tires When this message is displayed, refer to <u>DLN-58</u> , " <u>Diagnosis Procedure</u> ".	Tire Size Incorrect: See Owner's Manual	ı
	JSDIA3105GB (Continuing to display until ignition switch is turned OFF)	
Other than above (system normal)	OFF	- - D

### **CAUTION:**

• AWD warning icon/display is displayed due to data reception error, CAN communication error etc.

[TRANSFER: TY21C]

F

Е

G

Н

.

K

L

M


Ν

0

Р

# STRUCTURE AND OPERATION

Sectional View

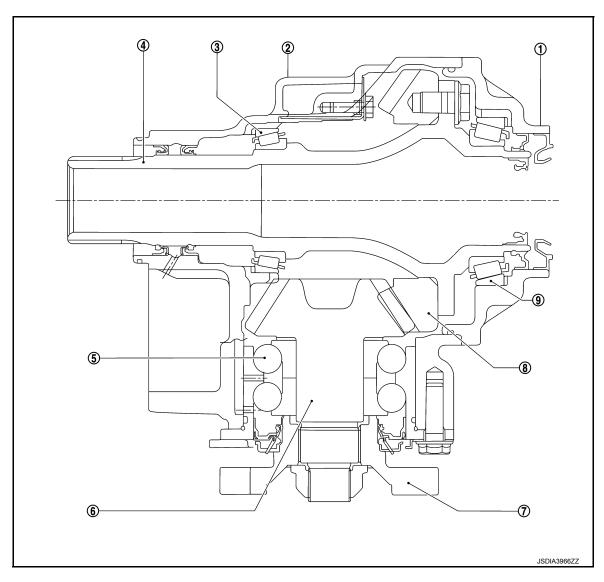

- 1. Transfer cover
- 4. Ring gear shaft
- 7. Companion flange

- 2. Transfer case
- 5. Pinion bearing
- 8. Ring gear

3. Ring gear bearing (transfer case side)


[TRANSFER: TY21C]

- 6. Drive pinion
- 9. Ring gear bearing (transfer cover side)

# **Operation Description**

INFOID:0000000012856447

### POWER TRANSFER DIAGRAM

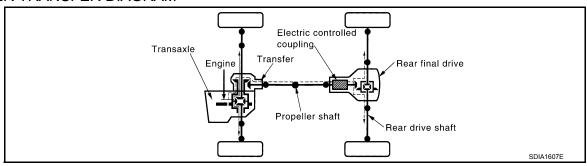


### STRUCTURE AND OPERATION

### < SYSTEM DESCRIPTION >

### **ELECTRIC CONTROLLED COUPLING**

- 1. The AWD control unit supplies command current to electric controlled coupling (AWD solenoid).
- 2. The control clutch is engaged by electromagnet and torque is detected in control clutch.
- 3. The cam operates in response to control clutch torque and applies pressure to main clutch.
- The main clutch transmits torque to front wheels according to pressing power.

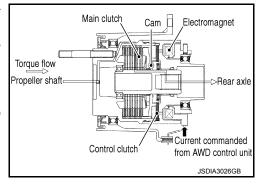


[TRANSFER: TY21C]

DLN

Α

В

Transmission torque to the rear wheels is determined according to command current.

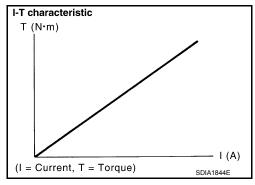

F

Е

Н

1

K

L

M

Ν

0

Р

# **SYSTEM**


# **AWD SYSTEM**

AWD SYSTEM: System Description

INFOID:0000000012856448

[TRANSFER: TY21C]

### SYSTEM DIAGRAM

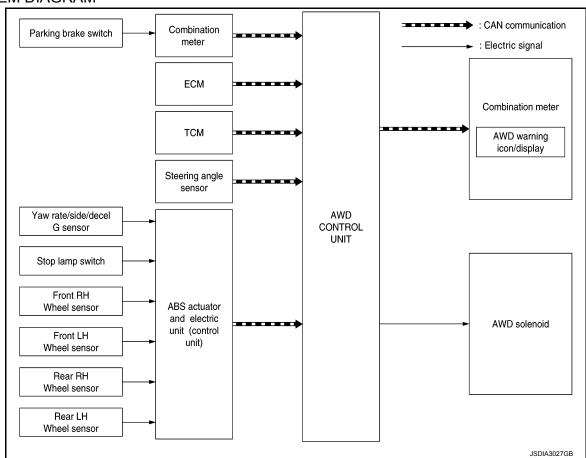

### INPUT/OUTPUT SIGNAL

It transmits/receives each signal from the following AWD control unit via CAN communication line.

Component parts	Function
ABS actuator and electric unit (control unit)	Transmits the following signals via CAN communication to AWD control unit.  • Vehicle speed signal  • Stop lamp switch signal (brake signal)  • Yaw rate sensor signal  • Side G sensor signal  • Decel G sensor signal
ECM	Transmits the following signals via CAN communication to AWD control unit.  • Accelerator pedal position signal  • Engine speed signal
TCM	Transmits the following signals via CAN communication to AWD control unit.  Input shaft revolutional signal  CVT ratio signal
Combination meter	Transmits conditions of parking brake switch signal via CAN communication to AWD control unit.
	Receives the following signal via CAN communication from AWD control unit.  • AWD warning icon/display signal
Steering angle sensor	Transmits conditions of steering angle sensor signal via CAN communication to AWD control unit.

### **DESCRIPTION**

- AWD controls distribution of drive power between front-wheel drive (100:0) and 4-wheel drive (50:50) conditions according to signals from sensors.
- By receiving the steering angle sensor signal, yaw rate sensor signal, side G sensor signal and decel G sensor signal, vehicle with VDC corrects a torque distribution for front and rear wheels according to a driving operation and a behavior of the vehicle during cornering and improves drivability and safety on a slippery road surface.
- Electronic control allows optimal distribution of torque to front/rear wheels to match road conditions.
- AWD mode makes possible stable driving possible with no wheel spin, on snowy roads or other slippery surfaces.
- On roads which do not require 4-wheel drive, it contributes to improved fuel economy by driving in conditions close to front-wheel drive.
- Sensor inputs determine the vehicle's turning condition, and tight cornering/braking are controlled by distributing optimum torque to rear wheels.


### NOTE:

Light tight-corner braking symptom may occur depending on driving condition. This is not malfunction.

### AWD SYSTEM: Circuit Diagram

INFOID:0000000012856449

[TRANSFER: TY21C]

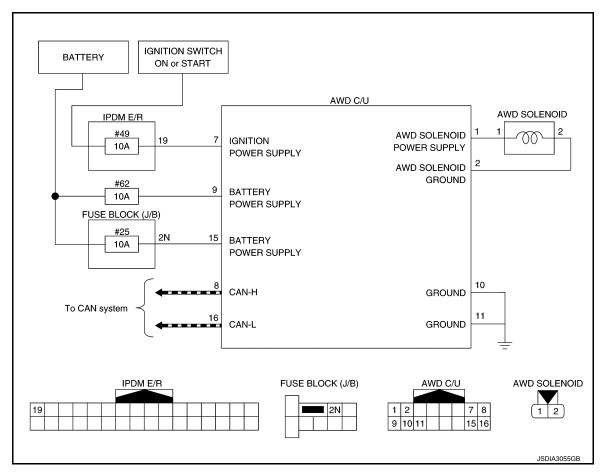

### AWD SYSTEM: Fail-Safe

INFOID:0000000012856450

 If any malfunction occurs in AWD electrical system, and control unit detects the malfunction, AWD warning icon/display on information display is displayed to indicate system malfunction.

 When AWD warning icon/display is displayed, vehicle changes to front-wheel drive or shifts to 4-wheel drive (rear-wheels still have some driving torque).

Revision: April 2016 **DLN-15** 2016 QX60

DLN

Α

В

Е

G

Н

.

/

VI

Ν

 $\circ$ 

DTC	AWD warning icon/display	Possible cause	Vehicle condition
C1201		Internal malfunction of AWD control unit	
C1203		ABS malfunction  • Vehicle speed signal error	
C1204		Internal malfunction of electronic controlled coupling     Malfunction of AWD solenoid power supply circuit (open or short)     Malfunction of AWD solenoid command current	
C1205	AWD Error: See Owner's Manual	Internal malfunction of AWD control unit     Malfunction of AWD solenoid power supply circuit (ground short)	Front-wheel drive or shifts to 4-wheel drive (Rear- wheels still have some driving torque)
C1210		Malfunction of engine control system	]
P1804	JSDIA3103GB	Internal malfunction of AWD control unit	<del> </del>
P181F		Writing unit characteristics is incomplete.	<del>-</del>
U1000		CAN communication error     Malfunction of AWD control unit	
U1010		Malfunction of AWD control unit	

# AWD SYSTEM: Protection Function

INFOID:0000000012856451

[TRANSFER: TY21C]

AWD system activates its protection function (shuts down AWD system temporarily) if AWD system detects high load continuously or the front wheel tire size differs from the rear tire size. (AWD system is automatically restored if AWD system no longer detects any overload or the tire size difference is eliminated.)

AWD warning icon/display	Possible cause	Vehicle condition
AWD High Temp. Stop Vehicle	Drive train parts in protection mode. It is not malfunction. (Internal temperature rise of electronic controlled coupling) When this message is displayed, refer to <a href="DLN-57">DLN-57</a> , "Description".	
JSDIA3104GB (Displaying for approximately 1 minute and then turned OFF)		Shuts down AWD system tem-
Tire Size Incorrect:	Malfunction in each tire or different tire diameter	porarily (Front wheel drive)
See Owner's Manual	When this message is displayed, refer to <u>DLN-58</u> , " <u>Diagnosis Procedure</u> ".	
(Continuing to display until ignition switch is turned OFF)		

### **DIAGNOSIS SYSTEM (AWD CONTROL UNIT)**

< SYSTEM DESCRIPTION >

# DIAGNOSIS SYSTEM (AWD CONTROL UNIT)

CONSULT Function

[TRANSFER: TY21C]

Α

C

DLN

Е

Н

Ν

### **CAUTION:**

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF  $\rightarrow$  ON (for at least 5 seconds)  $\rightarrow$  OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and no-start condition.

### APPLICATION ITEMS

CONSULT can display each diagnostic item using the diagnostic test modes as follows.

Diagnostic test mode	Function	
ECU Identification	AWD control unit part number can be read.	
Self Diagnostic Result	Self-diagnostic results and freeze frame data can be read and erased quickly.*	
Data Monitor	Input/Output data in the AWD control unit can be read.	
Active Test	Diagnostic Test Mode in which CONSULT drives some actuators apart from the AWD control unit and also shifts some parameters in a specified range.	
Work support	This mode enable a technican to adjust some devices faster and more accurately by following the indication on the CONSULT.	

- \*: The following diagnosis information is erased by erasing.
- DTC
- Freeze frame data (FFD)

### **ECU IDENTIFICATION**

AWD control unit part number can be read.

### SELF DIAGNOSTIC RESULT

Refer to DLN-22, "DTC Index".

When "PRSNT" is displayed on self-diagnosis result.

The system is presently malfunctioning.

When "PAST" is displayed on self-diagnosis result.

System malfunction in the past is detected, but the system is presently normal.

### FREEZE FRAME DATA (FFD)

The following vehicle status is recorded when DTC is detected and is displayed.

Freeze Frame Data Item	Description
IGN COUNTER [0 - 39]	<ul> <li>The number of times that ignition switch is turned ON after the DTC is detected is displayed.</li> <li>When "0" is displayed: It indicates that the system is presently malfunctioning.</li> <li>When except "0" is displayed: It indicates that system malfunction in the past is detected, but the system is presently normal.</li> <li>NOTE: Each time when ignition switch is turned OFF to ON, numerical number increases in 1→2→338→39. When the operation number of times exceeds 39, the number do not increase and "39" is displayed until self-diagnosis is erased.</li> </ul>

### DATA MONITOR

### NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor item (Unit)	Remarks
STOP LAMP SW [On/Off]	Stop lamp switch signal status via CAN communication line is displayed.
ENG SPEED SIG [Run/Stop]	Engine status is displayed.
ETS ACTUATOR [On/Off]	Operating condition of AWD actuator relay (integrated in AWD control unit) is displayed.

Revision: April 2016 **DLN-17** 2016 QX60

# **DIAGNOSIS SYSTEM (AWD CONTROL UNIT)**

[TRANSFER: TY21C]

# < SYSTEM DESCRIPTION >

Monitor item (Unit)	Remarks
4WD WARN LAMP [On/Off]	Control status of AWD warning icon/display is displayed.
4WD MODE SW [AUTO/LOCK]	Mode switch is not equipped, but displayed.
4WD MODE MON [AUTO/LOCK]	Control status of AWD is displayed.
DIS-TIRE MONI [mm]	Improper size tire installed condition is displayed.
P BRAKE SW [On/Off]	Parking switch signal status via CAN communication line is displayed.
BATTERY VOLT [V]	Power supply voltage for AWD control unit
THRTL POS SEN [%]	Throttle opening status is displayed.
ETS SOLENOID [A]	Monitored value of current at AWD solenoid
FR RH SENSOR [km/h] or [mph]	Wheel speed calculated by front RH wheel sensor signal is displayed.
FR LH SENSOR [km/h] or [mph]	Wheel speed calculated by front LH wheel sensor signal is displayed.
RR RH SENSOR [km/h] or [mph]	Wheel speed calculated by rear RH wheel sensor signal is displayed.
RR LH SENSOR [km/h] or [mph]	Wheel speed calculated by rear LH wheel sensor signal is displayed.

### **ACTIVE TEST**

Use this mode to determine and identify the details of a malfunction based on self-diagnostic results or data monitor. AWD control unit gives drive signal to actuator with receiving command from CONSULT to check operation of actuator.

Test item	Condition	Description	
ETS S/V (Detects AWD solenoid)	Vehicle stopped     Engine running     No DTC detected	Change command current value to AWD solenoid, and then change driving mode. (Monitor value is normal if it is within approx. ±10% of command value.)  • Qu: Increase current value in increments of 0.2 A  • Qd: Decrease current value in increments of 0.2 A  • UP: Increase current value in increments of 0.02 A  • DOWN: Decrease current value in increments of 0.02 A	

### **CAUTION:**

Never energize continuously for a long time.

### **WORK SUPPORT**

Item	Usage	
UNIT CHARACTERISTICS DATA	Display the unit characteristics of electric controlled coupling written to AWD control unit.	
UNIT CHARACTERISTICS WRITE	Writes the unit characteristics of electric controlled coupling to AWD control unit.	

[TRANSFER: TY21C]

Α

В

DLN

Е

F

Н

J

K

L

M

Ν

0

Р

< ECU DIAGNOSIS INFORMATION >

# **ECU DIAGNOSIS INFORMATION**

# AWD CONTROL UNIT

Reference Value

### VALUES ON THE DIAGNOSIS TOOL

### NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.


Monitor item	Condition	Value/Status
STOP LAMP SW	Brake pedal: Depressed	On
	Brake pedal: Released	Off
ENG SPEED SIG	Engine stopped (Engine speed: Less than 400 rpm)	Stop
	Engine running (Engine speed: 400 rpm or more)	Run
ETS ACTUATOR	Engine stopped (Ignition switch: ON)	Off
	Engine running	On
4WD WARN LAMP	AWD warning icon/display: ON	On
	AWD warning icon/display: OFF	Off
4WD MODE SW	Always	AUTO
4WD MODE MON	Always	AUTO
	Vehicle running with normal size tire installed	0 – 4 mm
DIS-TIRE MONI	Vehicle running with improper size tire installed (Front/rear tire size difference, wear condition)	4 – 8 mm, 8 – mm
P BRAKE SW	Parking brake operated	On
	Parking brake not operated	Off
BATTERY VOLT	Always	Battery voltage
THRTL POS SEN	When depressing accelerator pedal (Value rises gradually in response to throttle position.)	0 – 100%
ETS SOI ENOID	Engine running • At idle speed	Approx. 0.000 A
ETS SOLENOID	Engine running  • 3,000 rpm or more constant	Approx. 0.000 – 1.800 A*
	Vehicle stopped	0.00 km/h (0.00 mph)
FR RH SENSOR	Vehicle running CAUTION: Check air pressure of tire under standard condition.	Nearly matches the speed meter display (±10% or less)
	Vehicle stopped	0.00 km/h (0.00 mph)
FR LH SENSOR	Vehicle running CAUTION: Check air pressure of tire under standard condition.	Nearly matches the speed meter display (±10% or less)
	Vehicle stopped	0.00 km/h (0.00 mph)
RR RH SENSOR	Vehicle running CAUTION: Check air pressure of tire under standard condition.	Nearly matches the speed meter display (±10% or less)
	Vehicle stopped	0.00 km/h (0.00 mph)
RR LH SENSOR	Vehicle running CAUTION: Check air pressure of tire under standard condition.	Nearly matches the speed meter display (±10%)

[TRANSFER: TY21C]

### < ECU DIAGNOSIS INFORMATION >

\*: The values are changed by throttle opening and engine speed.

### **TERMINAL LAYOUT**

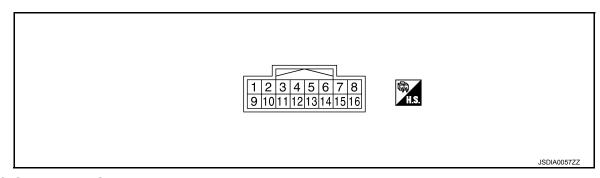

### PHYSICAL VALUES

	nal No. color)	Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output	Condition	value (rippiox.)	
1	Ground	AWD solenoid power sup-	Output	Engine speed: At idle	0 V	
(LG)	Giodila	ply	Output	Engine speed: 3,000 rpm or more constant	2.5 V*	
2 (V)	Ground	AWD solenoid ground	_	Always	0 V	
7	Ground	Ignition switch	Input	Ignition switch: ON	Battery voltage	
(W)	Ground	Igrillion Switch	Input	Ignition switch: OFF	0 V	
8 (L)	_	CAN-H	Input/ Output	_	_	
9 (SB)	Ground	Power supply (AWD sole- noid)	Input	Always	Battery voltage	
10 (GR)	Ground	Ground	_	Always	0 V	
11 (GR)	Ground	Ground	_	Always	0 V	
15 (Y)	Ground	Power supply (AWD control unit)	Input	Always	Battery voltage	
16 (P)	_	CAN-L	Input/ Output		_	

<sup>\*:</sup> The values are changed by throttle opening and engine speed.

### **CAUTION:**

When using circuit tester to measure voltage for inspection, be sure not to extend forcibly any connector terminals.

Fail-Safe

- If any malfunction occurs in AWD electrical system, and control unit detects the malfunction, AWD warning icon/display on information display is displayed to indicate system malfunction.
- When AWD warning icon/display is displayed, vehicle changes to front-wheel drive or shifts to 4-wheel drive (rear-wheels still have some driving torque).

[TRANSFER: TY21C]

Н

Ν

Р

INFOID:0000000012856456

INFOID:0000000012856455

### < ECU DIAGNOSIS INFORMATION >

DTC	AWD warning icon/display	Possible cause	Vehicle condition	Α
C1201		Internal malfunction of AWD control unit		•
C1203		ABS malfunction  • Vehicle speed signal error		В
C1204		Internal malfunction of electronic controlled coupling     Malfunction of AWD solenoid power supply circuit (open or short)     Malfunction of AWD solenoid command current		С
C1205	AWD Error: See Owner's Manual	Internal malfunction of AWD control unit     Malfunction of AWD solenoid power supply circuit (ground short)	Front-wheel drive or shifts to 4-wheel drive (Rear- wheels still have some driving torque)	DLN
C1210		Malfunction of engine control system	3 3 4 7	
P1804	JSDIA3103GB	Internal malfunction of AWD control unit		Е
P181F		Writing unit characteristics is incomplete.		
U1000		CAN communication error     Malfunction of AWD control unit		F
U1010		Malfunction of AWD control unit		

# **Protection Function**

AWD system activates its protection function (shuts down AWD system temporarily) if AWD system detects high load continuously or the front wheel tire size differs from the rear tire size. (AWD system is automatically restored if AWD system no longer detects any overload or the tire size difference is eliminated.)

AWD warning icon/display	Possible cause	Vehicle condition
AWD High Temp. Stop Vehicle	Drive train parts in protection mode. It is not malfunction. (Internal temperature rise of electronic controlled coupling) When this message is displayed, refer to <a href="DLN-57">DLN-57</a> , "Description".	
(Displaying for approximately 1 minute and then turned OFF)		Shuts down AWD system tem-
		(Front wheel drive)
Tire Size Incorrect: See Owner's Manual	Malfunction in each tire or different tire diameter When this message is displayed, refer to <u>DLN-58</u> , " <u>Diagnosis Procedure</u> ".	
JSDIA3105GB (Continuing to display until ignition switch is turned OFF)		

# **DTC Inspection Priority Chart**

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	Detected items (DTC)
1	U1000 CAN COMM CIRCUIT     U1010 CONTROL UNIT (CAN)
2	C1201 CONTROLLER FAILURE     C1205 4WD ACTUATOR RLY

[TRANSFER: TY21C]

### < ECU DIAGNOSIS INFORMATION >

Priority	Detected items (DTC)
3	C1204 4WD SOLENOID
4	C1203 ABS SYSTEM     C1210 ENGINE SIGNAL 1
5	• P1804 CONTROL UNIT 3
6	P181F INCOMP CALIBRATION

DTC Index

DTC	Display Item	Reference
C1201	CONTROLLER FAILURE	DLN-38, "DTC Logic"
C1203	ABS SYSTEM	DLN-39, "DTC Logic"
C1204	4WD SOLENOID	DLN-40, "DTC Logic"
C1205	4WD ACTUATOR RLY	DLN-43, "DTC Logic"
C1210	ENGINE SIGNAL 1	DLN-45, "DTC Logic"
P1804	CONTROL UNIT 3	DLN-46, "DTC Logic"
P181F	INCOMP CALIBRATION	DLN-47, "DTC Logic"
U1000	CAN COMM CIRCUIT	DLN-48, "DTC Logic"
U1010	CONTROL UNIT (CAN)	DLN-49, "DTC Logic"

### **AWD SYSTEM**

[TRANSFER: TY21C] < WIRING DIAGRAM >

# WIRING DIAGRAM

**AWD SYSTEM** 

Wiring Diagram INFOID:0000000012856458 В

WITH AUTOMATIC DRIVE POSITIONER

WITH AUTOMATIC DRIVE POSITIONER AND WITHOUT ICC SYSTEM DLN CAN COMMUNICATION LINE FOR DIAGNOSIS

(G1): WITH CAN GATEWAY SYSTEM

(UR): WITH AUTOMATIC DRIVE POSITIONER AND ICC SYSTEM

(US): WITH AUTOMATIC DRIVE POSITIONED AND ICC SYSTEM Е F G Н (C13) J 2 AWD SYSTEM - WITH AUTOMATIC DRIVE POSITIONER IPDM E/R (INTELLIGENT POWER DISTRIBUTION DODULE ENGINE IROOM) K DATA LINE L AWD CONTROL UNIT (B67) GNITION SWITCH ON OR START 21 M 10A Ν 20 0 FUSE BLOCK
(J/B)
(M3) Р M40 (B86) BATTERY 15

ABDWA0978GB

C

Α

# AWD SYSTEM CONNECTORS - WITH AUTOMATIC DRIVE POSITIONER

				_										
TO ENGINE ROOM HARNESS														
W	,	-	_	۵	H	>	H	>	97	SB	W	W	W	-
10	1	12	13	14	15	16	17	18	19	20	21	22	23	24

Connector No.   B	B67
Connector Name A	AWD CONTROL UNIT
Connector Type Ti	TH16FW-NH
Connector Color M	WHITE

Signal Name

Color of Wire

	1 2 3 4 5 6 7 8	9 10 11 12 13 14 15 16		Signal Name
			J	Color of
U	į			minal

	₽,	•												
	Color of	WILE	ΓG	>	'	1	-	-	Μ	٦	BS	GR	GR	
	Terminal	NO.	-	2	ဇ	4	5	9	7	8	6	10	11	
CHACOL HANNES				WIRE	-NH					6 7 8 9 10 11 12	18 19 20 21 22 23 24			

AWD SOLENOID (+)
AWD SOLENOID (-)

CAN-H
BATTERY (AWD SOLENOID)
GROUND
GROUND

IGNITION SWITCH

BATTERY (CONTROL UNIT)

Connector No.		ш	B40						
Connector Name	e	>	¥	Ш	WIRE TO WIRE	₹	뿠		
Connector Type	a	_	문	Α	TH24MW-NH	ż	_		
Connector Color	or	_	Ŧ	WHITE					
F									
Ę				L	Ш	- 17	11.	1	_
Ę.				7	T				╝
	-	2	3	4	'n	9	7	œ	6
	13	14	15	16	13 14 15 16 17 18 19 20 21	00	19	20	21

Signal Name	TO ENGINE ROOM HARNESS
Color of Wire	57
erminal No.	-

Signal Name	TO ENGINE ROOM HARNESS								
Color of Wire	P	<b>*</b>	н	5	W	SHIELD	ш	g	В
Terminal No.	-	2	3	4	9	9	2	8	6
					ΑE	BDIA	119	730	В

[TRANSFER: TY21C]

H.S.	Connector Color BLACK	Connector Type RH12FB-RS2	Connector Name WIRE TO WIRE		Connector No. Connector Nam Connector Type Connector Colo
13 4 4 3	V.	BLACK		4 00	
				B13	Connector No.

Revision: April 2016	DLN-24	2016 QX60
Revision. April 2010		2010 9700

AWD SYSTEM CONNECTORS - WITH AUTOMATIC DRIVE POSITIONER

Connector No.

Connector Name

Connector Type

Connector Color

[TRANSFER: TY21C]

Α

В

С

DLN

Е

F

G

Н

J

K

 $\mathbb{N}$ 

Ν

0

Р

m		WIRE TO WIRE	RH12MB-RS2	BLACK				2	2 9	9   10   11   12   17			Signal Name	oction of or	TO BODY HARNESS	TO BODY HABNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS																				
Jo. C13													Color of	wire	، ا	5 6	8 8	*	>	В	FG	M	В	۵	>	88	>																				
Connector No.		Connector Name	Connector Type	Connector Color	The state of the s		SH	5					Terminal	No.		4 6	4	. 2	9	7	8	6	10	Ε	12	13	14																				
			l					_				I				_ _	<u> </u>	<u> </u>	T	T	T	T	 	]																							
TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HABNESS	TO MAIN HARNESS			4	Olon					ď	2			Cional Mamo	grai Name	SOL+	SOL-								
101	2	101	101	TOT	TOT	101	101	101	101	101	101	101	101	101	TO	101	101	0	101		101	101	101		613	210	AWD SOLENOID	RS02FGY	GRAY		L	Ų	_	IJ			ō										
œ	>	97	HB	>	_	BG	>	97	SHIELD	eg eg	SB	BG	_	۵	7	9	8	'	'	. 8	_					$^{+}$										Color of	Wire	SB	>								
76A	77A	78A	79A	80A	81A	82A	83A	84A	85A	86A	87A	88A	89A	90A	91A	92A	93A	94A	95A	97A	98A	A66	100A		Connector No		Connector Name	Connector Type	Connector Color	E	TIT T	H.S.				Terminal	No.	-	2								
																											I				TUO!	E E	í k	I							T				I		
TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HABNESS	TO MAIN HARNESS	TO MAIN HABNESS	TO MAIN HARNESS	JESS - (WITH	TO MAIN HARNESS - (WITH	TO MAIN HABNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HABNESS	TO MAIN HABNESS	TO MAIN HABNESS	TO MAIN HARNESS		TO MAIN HARNESS	TO MAIN HARNESS TO MAIN HARNESS							
TO MAI	TO MAI	TO MAI	TO MAI	TO MAI	TO MAI	TO MAI	TO MAI	TO MAI	TO MAI	TO MAI	TO MAI	TO MAI	TO MAI	TO MAI	TO MAI	TO MAI	TO MAI	TO MAI	TO MAI	TO MAI	TO MAI	TO MAI	TO MAI	TO MAI	TO MAI	TO MAI	TO MAI	TO MAI	TO MAI	TO MAI	TO MAIN HARNESS - (WITHOUT	TO MAIN HA	TO MAI	TO MAI	TO MAI	TO MAI	TO MAI	TO MAI	TO MAI	OMA	TO MAI	TO MAI	TO MAI	TO MAI	1	JO MAI	TO MAI
SHIELD	8	8	SHIELD	œ	В	В		×	В	SHIELD	-	97	>	SB	BR	>	,		> 0	5 >	1	88	g	W		-	œ	88	9	>	BS	>	a	# # # # # # # # # # # # # # # # # # #	1	>	,	۵	cc (	g .	_ =	a	- 8	5		H H	ž ,
25A	26A	27A	28A	29A	30A	31A	32A	33A	34A	35A	36A	37A	38A	39A	40A	41A	42A	43A	44A	46A	47A	48A	49A	50A	51A	52A	53A	54A	55A	56A	57A	57A	484	59A	60A	61A	62A	63A	64A	Aco S	67A	68A	A99	70A		A.	72A
	_		_				F										_	_	_	_					_			_	_	L .							_								_	_ T	
		VIRE	TH80MDGY-CS16-TM4					24 04 44	A		21A 20A 19A 18A 17A 16A 15A 14A 13A 12A 11A	26A 25A 24A 23A 22A	41A 40A 39A 38A 37A 36A 35A 34A 33A 32A 31A	468, 458, 448, 438, 428	61A 60A 59A 58A 57A 56A 55A 54A 53A 52A 51A		81A 80A 78A 78A 77A 76A 75A 74A 73A 72A 71A ona 80a 88a 87a 86a 85a 84a 83a 87a		95A 94A 93A 92A 91A	M 304 314 364				Signal Name		TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS		TO MAIN HARNESS - (WITHOUT CLIMATE CONTROLLED SEAT)	TO MAIN HARNESS - (WITH CLIMATE CONTROLLED SEAT)	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS	TO MAIN HARNESS		TO MAIN HARNESS
		WIRE TO WIRE	TH80MDG)	GRAY				45	\$ 8	MI MI	A 20A 19A 18A 17A	30A 29A 28A 27A	A 40A 39A 38A 37A	50A 49A 48A 47A	A 60A 59A 58A 57A	Undundundund	904 794 784 774 904 894 884 874		95A 94	NS MOOI				Š		101	TO	101	TOF	101	TO MAIN H.	TO MAIN CLIMATE	TO	TO	TON	TOT TO	2 2	TO	TON	TO	TO N	TO	TO	TO	2	-	TON
B69	ງ ⊢ •			-			-11				i'i		4		ò	L	ão				H			or of		- 1	- 1	- 1	- 1	- 1			1	1	- 1	- 1	1	1	1	1	1	- 1	1			-1	e

Revision: April 2016 **DLN-25** 2016 QX60

AWD SYSTEM CONNECTORS - WITH AUTOMATIC DRIVE POSITIONER

Connector No.	E34	Connector No. E119	E119	Connector No.	M3
Connector Name WIRE TO WIRE	WIRE TO WIRE	Connector Name	Connector Name   IPDM E/R (INTELLIGENT	Connector Name	Connector Name   FUSE BLOCK (J/B)
Connector Type	TH24FW-NH		POWER DISTRIBUTION	Connector Type CS06FW-M2	CS06FW-M2
MUITE WILL			MODULE ENGINE ROOM)	John Connection	THI W
COLLINECTOL COLOR	WILL	Connector Time TH30EM NIH	THEODEW NIL	collinector color	WILL
		collifector type	11021 W-WI		
		Connector Color WHITE	WHITE		
		ą.		•	
SH				S	3N 2N 1N
43	11 10 0 8 7 6 6 4 3 2 1				
24	23 22 21 20 19 18 17 16 15 14 13	SH			8N 7N 6N 5N 4N
		10 00 01	24 25 25 26 26 26 26 27 26 27 20 20 20 20 20 20 20		

Ξ	ヹ	ဗ	∣≥			·-		_	1	$\vdash$		ł
									_	Color of	Wire	
Connector No.	Connector Name	Connector Type	Connector Color	Q.		H.S.				Terminal	No.	
								19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34	35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50			
			T					33	84		Γ	
	L	- ŝ	2					31	47 4			
	IPDM E/R (INTELLIGENT	POWER DISTRIBUTION	MODULE ENGINE ROOM)					8	46			
	ĭ	∑¦	<u>.</u>				H	23	45			
	臣	뿚	5				W	7 28	4			
	₹	달		Ŧ			1	26 2	42 4			
	Ä	문	4	՝			$\parallel \setminus$	55	14			
6	Σ	₹ 7	3	TH32FW-NH	WHITE		h	24	40			
E119	집	<u> </u>	[≧	Ĕ	₹			23	33		-	
=			+	_	Ë			22	33			٠
	me			e	<u>5</u>			20 2	98			•
2	Na			₹	8			9	32			(
nnector No.	nnector Name			unnector Type	nnector Color			•				
ချ	Jec.			ခင	) je		$\boldsymbol{\sigma}$	1				٠
ᅙ	Ē			፸	Ē	AG.	Æ.	1				

Signal Name

IGNITION
BATTERY
IGNITION
BATTERY
BATTERY
BATTERY
IGNITION

BB

Signal Name	SUB ECU	=	MSNDI WDB	HORN RLY	WS NAOH	-	-	-
Color of Wire	SB	-	SB	×	PI	-	-	-
Terminal No.	19	20	21	22	23	24	25	56

No.	Wire	Signal Name
19	SB	SUB ECU
20	-	1
21	SB	BCM IGNSW
22	W	HORN RLY
23	FG	HORN SW
24		ı
25	-	-
56	-	1
27	В	MOTOR FAN RLY MID
28	۵	CAN-L
29	٦	CAN-H
30	-	1
31	BG	DETENT SW
32	-	1
33	œ	START CONT
34	GR	WIPER AUTOSTOP
35	BR	ABS ECU
36	W	START IG-E/R
37	W	CLUTCH I/L SW
38	Ь	PUSH START SW
39	-	-
40	1	1
41	В	GND (SIGNAL)
42	1	1
43	٦	IGN SIGNAL
44	_	_
45	LG	PD SENS SIG-E/R
46	-	_
47	٨	PD SENS PWR-E/R
48	۸	PD SENS GND-E/R
49	-	1
50	,	1

	Tem	z				2 2		2 2	~	ຶ	<u> </u>	ຶ				ຶ		ຶ	ຶ	4	4	4	4	4	4	4	4
										_		_										_	_		_		
Signal Name	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS - (EXCEPT FOR MEXICO)	TO BODY HARNESS - (FOR MEXICO)	TO BODY HARNESS - (EXCEPT FOR MEXICO)	TO BODY HARNESS - (FOR MEXICO)	TO BODY HARNESS - (EXCEPT FOR MEXICO)	TO BODY HARNESS - (FOR MEXICO)	TO BODY HARNESS																		
Color of Wire	>	_	œ	*	FG	σ	*	BG	SHIELD	×	g	œ	ш	B/G	P/L	BG	۵	æ	G	>	_	œ	97	SB	G	LG	PI
Terminal No.	-	2	8	ε	4	4	9	2	9	7	8	6	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24

ABDIA1975GB

[TRANSFER: TY21C]

[TRANSFER: TY21C]

Α

В

С

DLN

Е

F

G

Н

J

K

M

Ν

0

ON software	Q N	0.14	24A	8	TO BODY HARNESS	75A	9	TO BODY HARNESS
Connector	ON :	M40	25A	SHIELD	TO BODY HARNESS	76A	×	TO BODY HARNESS
Connector Name	. Name	WIRE TO WIRE	26A	В	TO BODY HARNESS	A77	-	TO BODY HARNESS
Connector Type	. Type	TH80FDGY-CS16-TM4	27A	8	TO BODY HARNESS	78A	>	TO BODY HARNESS
Connector Color	. Color	GRAY	28A	SHIELD	TO BODY HARNESS	79A	9	TO BODY HARNESS
Œ			29A	œ	TO BODY HARNESS	80A	>	TO BODY HARNESS
ATL THE			30A	8	TO BODY HARNESS	81A	_	TO BODY HARNESS
SH			31A	æ	TO BODY HARNESS	82A	BG	TO BODY HARNESS
			32A	Y/R	TO BODY HARNESS	83A	>	TO BODY HARNESS
		1A 2A 3A 4A 3A	33A	W	TO BODY HARNESS	84A	PI	TO BODY HARNESS
		A 34 34 104	34A	8	TO BODY HARNESS	85A	SHIELD	TO BODY HARNESS
		11A 12A 13A 14A 15A 16A 17A 18A 19A 20A 21A	35A	SHIELD	TO BODY HARNESS	86A	>	TO BODY HARNESS
		22A 23A 24A 25A 26A 27A 28A 29A 30A	36A	Š	TO BODY HARNESS	87A	9	TO BODY HARNESS
	1	318 378 378 358 358 358 358 308 408 418	37A	97	TO BODY HARNESS	88A	BB	TO BODY HARNESS
		42A 43A 44A 45A 46A 47A 48A 48A 50A	38A	^	TO BODY HARNESS	89A	٦	TO BODY HARNESS
		000	39A	SB	TO BODY HARNESS	90A	۵	TO BODY HARNESS
	_ ][	51A 52A 53A 53A 53A 55A 55A 57A 58A 59A 59A 51A	40A	BB	TO BODY HARNESS	91A	_	TO BODY HARNESS
			41A	>	TO BODY HARNESS	92A	_	TO BODY HARNESS
		71A 72A 73A 74A 75A 76A 77A 78A 79A 80A 81A	42A	g	TO BODY HARNESS	93A	а	TO BODY HARNESS
		82A 83A 84A 85A 88A 87A 88A 88A 88A 90A	43A	-	TO BODY HARNESS	94A	W	TO BODY HARNESS
		918 928 938 948 958	44A	W	TO BODY HARNESS	95A	M	TO BODY HARNESS
		96A 97A 98A 99A 100A	45A	В	TO BODY HARNESS	96A	-	TO BODY HARNESS
			46A	BG	TO BODY HARNESS	97A	SB	TO BODY HARNESS
			47A	PT	TO BODY HARNESS	98A	>	TO BODY HARNESS - (WITH
			48A	ч	TO BODY HARNESS			AUTOMATIC DRIVE POSITION
			49A	۵	TO BODY HARNESS	98V	_	TO BODY HARNESS - (WIT AUTOMATIC DRIVE POSITION
Terminal	Color of	f Signal Name	50A	*	TO BODY HARNESS	966		TO BODY HARNESS
No	Wire		51A	7	TO BODY HARNESS	100A	-	TO BODY HARNESS
14	g	TO BODY HABNESS	402		TO BODY LABRIESE			

TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY LABNESS	TO BODY HABNESS	TO DODY LABNIESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS - (WITH CLIMATE CONTROLLED SEAT)	TO BODY HARNESS - (WITHOUT CLIMATE CONTROLLED SEAT)	TO BODY HARNESS														
В	SHIELD	В	a	SHIELD	œ	m	æ Ş	2/1	: a	2 100	SHIELD	. g	>	SB	BR	>	g	1 3	s a	BG	PI	В	А	*	، د		5 ≥	BG	BB	۵	٦	G	SB	٦	σ ¦	# 8	<u> </u>	Μ	BG	>	97	ж	۵	BB	SB SB	BB BG
24A	25A	26A	27A	28A	29A	30A	31A	92A	248	V 100	A26 26∆	37A	38A	39A	40A	41A	42A	43A	44A	46A	47A	48A	49A	50A	51A	52A	54A	55A	56A	57A	57A	58A	59A	60A	61A	62A	64A	65A	66A	67A	68A	69A	70A	71A	72A	74A
M40	WIRE TO WIRE	TUBOEDOV CO16 TM4	11801-0180-150108-11814	GRAY				1A 2A 3A 4A 5A	6A 7A 8A 9A 10A		224 234 244 254 254 274 284 304 204 204 204 204 204 204 204 204 204 2	100 100 100 100 100 100 100 100 100 100	31A 32A 33A 34A 33A 36A 37A 38A 39A 40A 41A 42A 43A 44A 45A 46A 47A 48A 49A 50A		51A 32A 33A 34A 33A 33A 33A 33A 33A 33A 33A 33	2 72 72 72 74 75 75 75 72 72 72 8 70 810	82A 83A 84A 85A 86A 87A 88A 89A 90A		91A 92A 93A 94A 95A	TOS.				Signal Name	COLING IN COLOR	TO BODY HABNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS	TO BODY HARNESS - (WITHOUT CLIMATE CONTROLLED SEAT)	TO BODY HARNESS - (WITH CLIMATE CONTROLLED SEAT)	TO BODY HARNESS														
	9	+	Ť	Connector Color (							=						=							Color of	Wire	5 8	£ >	>	R/	_	g	>	×	-	<u>.</u> ا	r 8	0	LG	œ	9	В	В	SHIELD	В	SHIELD	>
Connector No.	ļ	2   3	5	흕	_		7A					L											Ī	Terminal		T	T								T										21A	23A

Revision: April 2016

TO CAN SYSTEM XA

# WITHOUT AUTOMATIC DRIVE POSITIONER

(XA): WITHOUT AUTOMATIC DRIVE POSITIONER

AWD SYSTEM - WITHOUT AUTOMATIC DRIVE POSITIONER

BATTERY

GNITION SWITCH

ON OR START

ON OR

ABDWA0979GB

# [TRANSFER: TY21C]

Α

В

С

DLN

Е

F

G

Н

J

K

 $\mathbb{N}$ 

Ν

0

Р


# AWD SYSTEM CONNECTORS - WITHOUT AUTOMATIC DRIVE POSITIONER

	01	>	TO ENGINE ROOM HARNESS
	F		TO ENGINE ROOM HARNESS
TO WIRE	12	,	TO ENGINE ROOM HARNESS
FB-RS2	13	_	TO ENGINE ROOM HARNESS
×	14	۵	TO ENGINE ROOM HARNESS
	15	BB	TO ENGINE ROOM HARNESS
	16	>	TO ENGINE ROOM HARNESS
	17	#	TO ENGINE ROOM HARNESS
3 2	18	>	TO ENGINE ROOM HARNESS
9 9	19	១	TO ENGINE ROOM HARNESS
6 01 11 71	20	SB	TO ENGINE ROOM HARNESS
	21	*	TO ENGINE ROOM HARNESS
	22	8	TO ENGINE ROOM HARNESS
Signal Name	23	W	TO ENGINE ROOM HARNESS
	24	1	TO ENGINE ROOM HARNESS
TO CHASSIS HARNESS			

24	,	TO ENGINE ROOM HARNESS
Connector No.		B67
Connector Name		AWD CONTROL UNIT

Color of Wire

Terminal No.



2

		-	_	
			Terminal	Š.
TO CHASSIS HARNESS	TO CHASSIS HARNESS	TO CHASSIS HARNESS		
TO CHAS	TO CHAS	TO CHAS		

AWD SOLENOID (+)
AWD SOLENOID (-) Signal Name

P

r No.   B40	r Name WIRE TO WIRE	r Type TH24MW-NH	r Color WHITE			1 2 3 4 5 6 7 8 9 10 11 12	40 40 40 40 40 40 40 40 40 40 40 40 40 4
Connector No.	Connector Name	Connector Type	Connector Color	F	SH		

	-	C)
	=	23
	9	13 14 15 16 17 18 19 20 21 22 23
	0	21
	œ	23
	7	19
	9	9
	3	1
	4	16
	60	15
	2	4
	-	5
<u>v</u>	1	
		6 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0

	9	22	
	드	2	
	တ	51	
	œ	20	
	7	19	
- 11	9	18	
- 111	2	17	
	4	16	
	က	15	
	2	14	
	-	13	
			J
V.	1		
- T			

BATTERY (AWD SOLENOID)
GROUND
GROUND

IGNITION SWITCH CAN-H

Signal Name	TO ENGINE ROOM HARNESS								
Color of Wire	9	>	н	5	W	SHIELD	В	5	В
Terminal No.	F	2	3	4	9	9	7	8	6
					ΑE	BDIA	119	770	В

B13	WIRE TO WIRE	RH12FB-RS2	BLACK	13 6 7 7 8 9 8 4 9 9 7 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9
Connector No.	Connector Name	Connector Type	Connector Color	原列 H.S.

	8 4 3 2 1	8 7 6 5	12 11 10 9
BLACK	£		7
Connector Color	6		


Revision: April 2016	DLN-29	2016 QX60

# [TRANSFER: TY21C]

# AWD SYSTEM CONNECTORS - WITHOUT AUTOMATIC DRIVE POSITIONER

B SHIELD

m m m

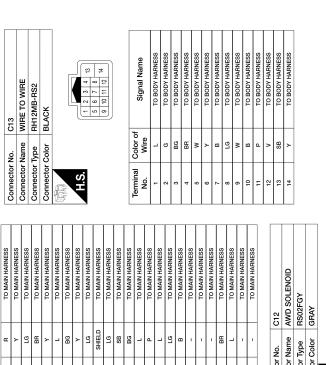

| TO MAIN HARNESS |
|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|
| œ               | >               | 97              | BB              | >               | _               | BG              | >               | FG              | SHIELD          | FG              | SB              | BG              | _               | Ь               | ٦               | P               | В               | -               | -               | -               | BR              | 7               | -               | ,               |
| 76A             | A77             | 78A             | 79A             | 80A             | 81A             | 82A             | 83A             | 84A             | 85A             | 86A             | 87A             | 88A             | 89A             | 90A             | 91A             | 92A             | 93A             | 94A             | 95A             | 96A             | 97A             | 98A             | 99A             | 100A            |
|                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |
|                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |                 |

_				10	1 3	5 1 2	۲l	<u>ॼ</u> ∣									_	_											
۰	-	1		Г	t	D L	$\top$								Color of	Wire	SB	>											
98A	99A	100A		Connector No.	Connector Name	Collinacion	Connector lype	Connector Color	E		5				Terminal	N	-	2											
TO MAIN HARNESS - (WITHOUT CLIMATE CONTROLLED SEAT)	TO MAIN HARNESS - (WITH CLIMATE CONTROLLED SEAT)	TO MAIN HARNESS																											
_	SB	5	W	-	-	н	SB	9	¥	SB	۸	BB	BB	7	٨	-	Ь	н	SB	7	FG	Ь	Μ	9	BB	-	Υ	Ь	^

Signal Name

SOL+

B69	WIRE TO WIRE	TH80MDGY-CS16-TM4	GRAY			56 48 38 38 38	9A 8A 7A	214 204 184 184 174 184 184 184 184 184 184 184 334 284 284 284 284 284 284 284 284 284 28	41A 40A 38A 38A 37A 38A 38A 38A 33A 32A 31A 50A 49A 48A 47A 48A 48A 48A 48A 48A 43A 42A	61A 60A 58A 58A 57A 58A 55A 54A 53A 52A 51A 70A 68A 68A 67A 68A 65A 68A 63A 62A	81A 80A 738A 778 788 758 74A 73A 72A 71A 90A 89A 88A 87A 88A 85A 85A 84A 83A 82A	8	100A 58A 93A 92A 57A	
Connector No.	Connector Name	Connector Type	Connector Color	F	SH									

SHIELD 2

> 8 8 >

	Connector Name V	WIRE TO WIRE	26A
Connector Type		TH80MDGY-CS16-TM4	28A
Connector Color		GRAY	29A
F			30A
(			32A
į			33A
		\$ 8	34A
	120	201 100 180 170 170 170 170 170 170 170 170 170 17	35A
	-	30a 23a 28a 27a 28a 25a 24a 23a 22a	36A
	417	41A 40A 38A 38A 37A 38A 35A 34A 33A 32A 31A	38A
		50A 49A 48A 47A 46A 45A 44A 43A 42A	39A
_	917	61A 60A 59A 58A 57A 56A 55A 54A 53A 52A 51A	40A
_		70A 69A 68A 67A 66A 65A 64A 63A 62A	41A
		81A 80A 78A 78A 77A 76A 75A 74A 73A 72A 71A	42A
		90A 88A 88A 87A 86A 85A 84A 83A 82A	43A
		95A 94A 93A 92A 91A	44A
		100A 99A 98A 97A 96A	45A
			46A
			47A
			48A
To the same	1		49A
No	Wire	Signal Name	50A
1 4		TO MAIN HABNESS	51A
2 6	>	TO MAIN INDIVISIO	52A
45 KA	>	TO MAIN HABNESS	53A
5 4	- 0	TO MAIN HABNESS	54A
<b>\$</b> :	5	TO MAIN HARNESS	95A
AC :	. !	I O MAIN HARINESS	26A
¥9	9 1	TO MAIN HARNESS - (WITHOUT CLIMATE CONTROLLED SEAT)	97A
6A	В	TO MAIN HARNESS - (WITH CLIMATE CONTROLLED SEAT)	57A
7A	BB	TO MAIN HARNESS	000
8A	g	TO MAIN HARNESS	V05
9A	Ь	TO MAIN HARNESS	465
10A	-	TO MAIN HARNESS	459
11A	W	TO MAIN HARNESS	400
12A	G	TO MAIN HARNESS	A20
13A		TO MAIN HARNESS	444
14A	œ	TO MAIN HARNESS	449
15A	g	TO MAIN HARNESS	¥60
16A	M	TO MAIN HARNESS	P P P
17A	8	TO MAIN HARNESS	6/A
18A	В	TO MAIN HARNESS	P89
19A	SHIELD	TO MAIN HARNESS	Age
20A	Μ	TO MAIN HARNESS	YOY Y
21A	SHIELD	TO MAIN HARNESS	A I
22A		TO MAIN HARNESS	427 427
23A	W	TO MAIN HARNESS	16/

ļ 4 N [TRANSFER: TY21C]

Α

В

C

DLN

Е

F

Н

J

K

L


M

Ν

0

Р

# AWD SYSTEM CONNECTORS - WITHOUT AUTOMATIC DRIVE POSITIONER

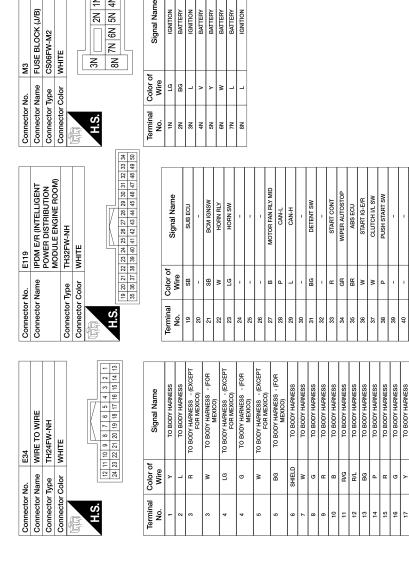

ABDIA1979GB

PD SENS PWR-E/R PD SENS GND-E/R

> 48 69 69

PD SENS SIG-E/R

2

GND (SIGNAL)

IGN SIGNAL

43 42 4 4 5

TO BODY HARNESS TO BODY HARNESS TO BODY HARNESS

2

[TRANSFER: TY21C]

TO BODY HARNESS

그 5 % %

58A 60A 61A 62A 63A 64A

TO BODY HARNESS

47 8 8 40 A11 A11 A

TO BODY HARNESS TO BODY HARNESS TO BODY HARNESS

BG

12A 13A 2

TO BODY HARNESS TO BODY HARNESS

BG

TO BODY HARNESS

65A 67A 67A 69A 69A 70A 71A 72A 73A

14A 115A 117A 118A 118A 119A 20A 22A 22A 23A

51 R R R R R R R

# AWD SYSTEM CONNECTORS - WITHOUT AUTOMATIC DRIVE POSITIONER

ľ		24A	8	TO BODY HARNESS	75A	97	TO BC	TO BODY HARNESS	
	M40	25A	SHIELD	TO BODY HARNESS	76A	A	TO BC	TO BODY HARNESS	
0	WIRE TO WIRE	26A	В	TO BODY HARNESS	A77	7	TO BC	TO BODY HARNESS	
	TH80FDGY-CS16-TM4	27A	В	TO BODY HARNESS	78A	>	TO BC	TO BODY HARNESS	
_	GRAY	28A	SHIELD	TO BODY HARNESS	V67	97 PP	TO BC	TO BODY HARNESS	
		29A	œ	TO BODY HARNESS	80A	> 1	TO BC	TO BODY HARNESS	
		30A	8	TO BODY HARNESS	81A		TO BC	TO BODY HARNESS	
		31A	œ	TO BODY HARNESS	82A	PBG PG		TO BODY HARNESS	
		32A	Y/R	TO BODY HARNESS	83A	> -	TO BC	TO BODY HARNESS	
	1A 2A 3A 4A UN	33A	×	TO BODY HARNESS	84A	P 10		TO BODY HARNESS	
	ow 'vy ow av 1DA	34A	8	TO BODY HARNESS	85A	A SHIELD		TO BODY HARNESS	
Œ	11A 12A 13A 14A 15A 16A 17A 18A 19A 20A 21A	35A	SHIELD	TO BODY HARNESS	86A	> -	TO BC	TO BODY HARNESS	
J	22A 23A 24A 25A 26A 27A 28A 29A 30A	36A	Ś	TO BODY HARNESS	87A	97 FG		TO BODY HARNESS	
[2	41 40 A 40 8 42 43 43 43 44 45 45 45 45 45 45 45 45 45 45 45 45	37A	97	TO BODY HARNESS	88A	A BR		TO BODY HARNESS	
>	42A 43A 44A 45A 46A 47A 48A 49A 50A	38A	>	TO BODY HARNESS	89A	-	TO BC	TO BODY HARNESS	
E		39A	SB	TO BODY HARNESS	90A	4	TO BC	TO BODY HARNESS	
o.	51A 52A 53A 54A 55A 56A 57A 58A 59A 60A 61A 67A 674 674 66A 66A 674 684 60A 70A	40A	BB	TO BODY HARNESS	91A		TO BC	TO BODY HARNESS	
-		41A	>	TO BODY HARNESS	92A	- T	TO BC	TO BODY HARNESS	
61	71A72A73A74A75A76A77A78A79A80A81A	42A	g	TO BODY HARNESS	93A	B	TO BC	TO BODY HARNESS	
	82A 83A 84A 85A 96A 87A 88A 88A 90A	43A	'	TO BODY HARNESS	94A	A	TO BC	TO BODY HARNESS	
	91A 024 024 068	44A	×	TO BODY HARNESS	95A	A	TO BC	TO BODY HARNESS	
	964 97A 98A 99A100A	45A	œ	TO BODY HARNESS	96A	-	TO BC	TO BODY HARNESS	
		46A	BG	TO BODY HARNESS	97A	4 SB		TO BODY HARNESS	
		47A	EG.	TO BODY HARNESS	98A	<b>&gt;</b>	TO BODY H	TO BODY HARNESS - (WITHOUT	
		48A	œ	TO BODY HARNESS			AUTOMATIC	DRIVE POSITIONER)	
		49A	۵	TO BODY HARNESS	98A		TO BODY AUTOMATIC	TO BODY HARNESS - (WITH AUTOMATIC DRIVE POSITIONER)	
or of	Signal Name	50A	W	TO BODY HARNESS	A66	'	TO BC	TO BODY HARNESS	
<u>e</u>		51A	7	TO BODY HARNESS	100A	\ \ \ \	TOBC	TO BODY HABNESS	
œ	TO BODY HARNESS	52A	Ь	TO BODY HARNESS					
В	TO BODY HARNESS	53A	g	TO BODY HARNESS					
L	TO BODY HARNESS	54A	Α	TO BODY HARNESS					
_	TO BODY HARNESS	55A	BG	TO BODY HARNESS					
<sub>@</sub>	TO BODY HARNESS	56A	BB	TO BODY HARNESS					
	TO BODY HARNESS - (WITHOUT CLIMATE CONTROLLED SEAT)	57A	۵	TO BODY HARNESS - (WITH CLIMATE CONTROLLED SEAT)					
(5	TO BODY HARNESS - (WITH CLIMATE CONTROLLED SEAT)	57A	_	TO BODY HARNESS - (WITHOUT CLIMATE CONTROLLED SEAT)					
	COLING OF LAND CT		,	00111011111100000					

Connector Type Connector Color

Connector Name

Connector No.

Color of

Wire

ģ

4 4 A

Α

### DIAGNOSIS AND REPAIR WORK FLOW

[TRANSFER: TY21C] < BASIC INSPECTION >

# **BASIC INSPECTION**

### DIAGNOSIS AND REPAIR WORK FLOW

Work Flow INFOID:0000000012856459

### DETAILED FLOW

### 1.INTERVIEW FROM THE CUSTOMER

Clarify customer complaints before inspection. First of all, perform an interview utilizing DLN-34, "Diagnostic Work Sheet" and reproduce symptoms as well as fully understand it. Ask customer about his/her complaints carefully. Check symptoms by driving vehicle with customer, if necessary.

### CAUTION:

Customers are not professional. Never guess easily like "maybe the customer means that...," or "maybe the customer mentions this symptom".

>> GO TO 2.

### 2.CHECK SYMPTOM

Reproduce the symptom that is indicated by the customer, based on the information from the customer obtained by interview. Also check that the symptom is not caused by protection function. Refer to DLN-21, "Protection Function".

### **CAUTION:**

When the symptom is caused by normal operation, fully inspect each portion and obtain the understanding of customer that the symptom is not caused by a malfunction.

>> GO TO 3.

# 3.PERFORM SELF-DIAGNOSIS

### (P)With CONSULT

Perform self-diagnosis for "ALL MODE AWD/4WD".

### Is any DTC detected?

YES >> Record or print self-diagnosis results. GO TO 4.

NO >> GO TO 6.

### f 4.RECHECK SYMPTOM

### (P)With CONSULT

- 1. Erase self-diagnostic results for "ALL MODE AWD/4WD".
- 2. Perform DTC confirmation procedures for the error detected system.

### NOTE:

NO

If some DTCs are detected at the same time, determine the order for performing the diagnosis based on LAN-28, "Trouble Diagnosis Flow Chart".

### Is any DTC detected?

YES >> GO TO 5.

> >> Check harness and connectors based on the information obtained by interview. Refer to GI-50, "Intermittent Incident".

# 5. REPAIR OR REPLACE ERROR-DETECTED PARTS

- Repair or replace error-detected parts.
- Reconnect part or connector after repairing or replacing.
- When DTC is detected, erase self-diagnostic results for "ALL MODE AWD/4WD".

>> GO TO 7.

# O.IDENTIFY ERROR-DETECTED SYSTEM BY SYMPTOM DIAGNOSIS

Estimate error-detected system based on symptom diagnosis and perform inspection.

Can the error-detected system be identified?

**DLN-33** Revision: April 2016 2016 QX60 DLN

Α

Е

F

Н

Ν

Р

### **DIAGNOSIS AND REPAIR WORK FLOW**

< BASIC INSPECTION > [TRANSFER: TY21C]

YES >> GO TO 7.

NO >> Check harness and connectors based on the information obtained by interview. Refer to <u>GI-50</u>, "Intermittent Incident".

# 7. FINAL CHECK

### (P)With CONSULT

- 1. Check the reference value for AWD control unit.
- Recheck the symptom and check that symptom is not reproduced on the same conditions.

### Is the symptom reproduced?

YES >> GO TO 3.

NO >> INSPECTION END

### Diagnostic Work Sheet

INFOID:0000000012856460

### Description

- In general, customers have their own criteria for a problem. Therefore, it is important to understand the symptom and status well enough by asking the customer about his/her concerns carefully. To systemize all the information for the diagnosis, prepare the interview sheet referring to the interview points.
- In some cases, multiple conditions that appear simultaneously may cause a DTC to be detected.

### Interview sheet sample

			nterview sheet				
Customer	MR/MS	Registration number			Initial year registration		
name		Vehicle type			VIN		
Storage date		Engine			Mileage		km (Mile)
		□Vehicle does not enter AWD mode.					
		□AWD warning icon/display is displayed.					
Symptom	m	□Heavy tight-corner braking symptom occurs					
-,		□Noise □Vibration					
			□Others (				
First occurrence		□Recently □Others ( )					
Frequency of occurrence		□Always □Under a certain conditions of □Sometimes (time(s)/day)					
		□Irrelevant					
Climate con-	Weather	□Fine □C	loud □Rain	□Snow	□Others (		)
ditions	Temperature	□Hot □W	arm □Cool	□Cold	□Temperature (Approx.		°C)
	Relative humidity	□High □N	loderate □Low	<i>I</i>			
Road conditions		□Urban area □Suburb area □High way □Mounting road (uphill or down hill) □Rough road					
Operation con	ditions, etc.	□During drivir	/hen engine starts □During idling				

# **DIAGNOSIS AND REPAIR WORK FLOW**

		Interview sheet		
Customer	MR/MS	Registration number	Initial year registration	
name		Vehicle type	VIN	
Storage date		Engine	Mileage	km (Mile)
Other conditions				
Memo				
				·

**DLN-35** Revision: April 2016 2016 QX60

### ADDITIONAL SERVICE WHEN REPLACING AWD CONTROL UNIT

< BASIC INSPECTION > [TRANSFER: TY21C]

# ADDITIONAL SERVICE WHEN REPLACING AWD CONTROL UNIT

Description INFOID:000000012856461

When replacing AWD control unit, unit characteristics writing is required.

Work Procedure

1. PERFORM WRITING UNIT CHARACTERISTICS

Perform writing unit characteristics of electric controlled coupling.

>> Refer to DLN-37, "Work Procedure".

### **UNIT CHARACTERISTICS WRITING**

< BASIC INSPECTION > [TRANSFER: TY21C]

### UNIT CHARACTERISTICS WRITING

Description INFOID:000000012856463

When replacing AWD control unit, rear final drive assembly and/or electric controlled coupling, unit characteristics of electric controlled coupling writing is required.

Work Procedure

## 1. UNIT CHARACTERISTICS WRITING


### (II) With CONSULT

1. Confirm the unit characteristics (A) of electric controlled coupling.

#### NOTE:

Unit characteristics is 12-digit alphanumeric.

- Turn the ignition switch OFF to ON.
- 3. Select "UNIT CHARACTERISTICS WRITE" in "WORK SUP-PORT" for "ALL MODE AWD/4WD".
- 4. Input unit characteristics.
- Select "Start".
- Check that "UNIT CHARACTERISTICS WRITE COMPLETED" is displayed.

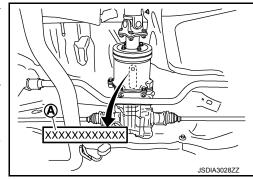

>> WORK END

DLN

Α

В

C

Е

F

G

Н

Κ

L

M

Ν

0

### **C1201 AWD CONTROL UNIT**

< DTC/CIRCUIT DIAGNOSIS >

## DTC/CIRCUIT DIAGNOSIS

### C1201 AWD CONTROL UNIT

DTC Logic

#### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1201	CONTROLLER FAILURE	Malfunction has occurred inside AWD control unit.	Internal malfunction of AWD control unit

#### DTC CONFIRMATION PROCEDURE

### 1.PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

### 2. PERFORM DTC CONFIRMATION

#### (II) With CONSULT

- 1. Turn the ignition switch OFF to ON.
- Perform self-diagnosis for "ALL MODE AWD/4WD".

#### Is DTC "C1201" detected?

YES >> Proceed to <u>DLN-38</u>, "<u>Diagnosis Procedure</u>".

NO >> INSPECTION END

## Diagnosis Procedure

INFOID:0000000012856466

[TRANSFER: TY21C]

## 1.PERFORM SELF-DIAGNOSIS

### (II) With CONSULT

- 1. Erase self-diagnostic results for "ALL MODE AWD/4WD".
- 2. Turn the ignition switch OFF, and then wait 10 seconds or more.
- Perform self-diagnosis for "ALL MODE AWD/4WD".

### Is DTC "C1201" detected?

YES >> Replace AWD control unit. Refer to <u>DLN-62</u>, "Removal and Installation".

NO >> Check AWD control unit pin terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace error-detected parts.

### C1203 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< DTC/CIRCUIT DIAGNOSIS >

## C1203 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

DTC Logic INFOID:0000000012856467

#### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1203	ABS SYSTEM	Malfunction related to wheel sensor has been detected by ABS actuator and electric unit (control unit).	ABS malfunction  • Vehicle speed signal error

#### DTC CONFIRMATION PROCEDURE

### 1.PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

### 2.PERFORM DTC CONFIRMATION

## (P) With CONSULT

- Start the engine and drive at 30 km/h (19 MPH) or more for approximately 1 minute.
- 2. Perform self-diagnosis for "ALL MODE AWD/4WD".

#### Is DTC "C1203" detected?

YES >> Proceed to <u>DLN-39</u>, "<u>Diagnosis Procedure</u>".

NO >> INSPECTION END

### Diagnosis Procedure

 ${f 1}$  .PERFORM ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF-DIAGNOSIS

#### (P)With CONSULT

Perform self-diagnosis for "ABS".

#### Is any DTC detected?

YES >> Check the DTC. Refer to BRC-47, "DTC Index".

NO >> GO TO 2.

## 2.CHECK TERMINALS AND HARNESS CONNECTORS

Check AWD control unit pin terminals for damage or loose connection with harness connector.

#### Is inspection result normal?

YES >> After turning the ignition switch OFF, perform DTC confirmation procedure again. If DTC "C1203" is detected, Replace AWD control unit. Refer to DLN-62, "Removal and Installation".

NO >> Repair or replace error-detected parts. DLN

F

Н

K

INFOID:0000000012856468

Α

В

[TRANSFER: TY21C]

Ν

[TRANSFER: TY21C]

INFOID:0000000012856470

### C1204 AWD SOLENOID

DTC Logic

#### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1204	4WD SOLENOID	Malfunction related to AWD solenoid has been detected.	Internal malfunction of electronic controlled coupling     Malfunction of AWD solenoid power supply circuit (open or short)     Malfunction of AWD solenoid command current

#### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

### 2.PERFORM DTC CONFIRMATION

#### (P) With CONSULT

- Turn the ignition switch OFF to ON.
- 2. Perform self-diagnosis for "ALL MODE AWD/4WD".

#### Is DTC "C1204" detected?

YES >> Proceed to <u>DLN-40</u>, "<u>Diagnosis Procedure</u>".

NO >> INSPECTION END

### Diagnosis Procedure

Regarding Wiring Diagram information, refer to DLN-23, "Wiring Diagram".

## 1. CHECK AWD SOLENOID POWER SUPPLY (1)

- Turn the ignition switch OFF.
- 2. Disconnect AWD control unit harness connector.
- 3. Check the voltage between AWD control unit harness connector and ground.

AWD co	ntrol unit		Voltage	
Connector	Connector Terminal		voltage	
B67	9	Ground	Battery voltage	

4. Turn the ignition switch ON.

#### **CAUTION:**

### Never start the engine.

5. Check the voltage between AWD control unit harness connector and ground.

AWD co	ntrol unit	_	Voltage
Connector Terminal			voltage
B67	9	Ground	Battery voltage

#### Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

#### C1204 AWD SOLENOID

#### < DTC/CIRCUIT DIAGNOSIS >

# 2.CHECK AWD SOLENOID POWER SUPPLY (2)

- Turn the ignition switch OFF.
- 2. Check the 10A fuse (#62)
- 3. Check the harness for open or short between AWD control unit harness connector No.9 terminal and 10A fuse (#62).

### Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit. Refer to <u>PG-17, "Wiring Diagram - BAT-TERY POWER SUPPLY -"</u>.

NO >> Repair or replace error-detected parts.

## 3.CHECK AWD SOLENOID GROUND

Check the continuity between AWD control unit harness connector and ground.

AWD co	ntrol unit		Continuity	
Connector	Terminal	_	Continuity	
B67	10	Ground	Existed	
507	11	Ground	LXISIEU	

#### Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

### 4. CHECK AWD SOLENOID CIRCUIT (1)

Check the resistance between AWD control unit harness connector.

	Resistance (Approx.)		
Connector	Terr	Resistance (Approx.)	
B67	1	2	2.45 Ω

#### Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 5.

## CHECK AWD SOLENOID CIRCUIT (2)

- Remove AWD solenoid harness connector.
- 2. Check the continuity between AWD control unit harness connector and AWD solenoid harness connector.

AWD control unit		AWD solenoid		Continuity
Connector	Terminal	Connector Terminal		Continuity
B67	1	C12	1	Existed
	2	012	2	LAISIEU

Check the continuity between AWD control unit harness connector and the ground.

AWD co	ntrol unit	_	Continuity	
Connector Terminal		_	Continuity	
B67	1	Ground	Not existed	
507	2	Ground	NOT EXISTED	

#### Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace error-detected parts.

#### **O.**CHECK AWD SOLENOID

Check AWD solenoid. Refer to DLN-42, "Component Inspection".

DLN

Α

В

[TRANSFER: TY21C]

Е

1

J

K

L

M

Ν

0

### C1204 AWD SOLENOID

#### < DTC/CIRCUIT DIAGNOSIS >

#### Is the inspection result normal?

YES >> GO TO 7.

NO >> AWD solenoid is malfunctioning. Replace electric controlled coupling. Refer to <u>DLN-110</u>, "Removal and Installation".

### 7.CHECK TERMINALS AND HARNESS CONNECTORS

- Check AWD control unit pin terminals for damage or loose connection with harness connector.
- Check AWD solenoid pin terminals for damage or loose connection with harness connector.

#### Is the inspection result normal?

YES >> Replace AWD control unit. Refer to <u>DLN-62</u>, "Removal and Installation".

NO >> Repair or replace error-detected parts.

### Component Inspection

INFOID:0000000012856471

[TRANSFER: TY21C]

## 1. CHECK AWD SOLENOID

- Turn the ignition switch OFF.
- 2. Disconnect AWD solenoid harness connector.
- Check the resistance between AWD solenoid harness connector terminals.

AWD s	olenoid	Resistance (Approx.)	
Terr	ninal	resistance (Approx.)	
1 2		2.45 Ω	

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> AWD solenoid is malfunctioning. Replace electric controlled coupling. Refer to <u>DLN-110</u>. "Removal and Installation".

#### C1205 AWD ACTUATOR RELAY

< DTC/CIRCUIT DIAGNOSIS >

### C1205 AWD ACTUATOR RELAY

**DTC Logic** INFOID:0000000012856472

#### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1205	4WD ACTUATOR RLY	Malfunction has been detected from AWD actuator relay integrated with AWD control unit, or malfunction related to AWD solenoid has been detected.	Internal malfunction of AWD control unit     Malfunction of AWD solenoid power supply circuit (ground short)

### DTC CONFIRMATION PROCEDURE

### 1.PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

### 2.PERFORM DTC CONFIRMATION

#### (P) With CONSULT

- Turn the ignition switch OFF to ON.
- 2. Perform self-diagnosis for "ALL MODE AWD/4WD".

#### Is DTC "C1205" detected?

YES >> Proceed to <u>DLN-43</u>, "<u>Diagnosis Procedure</u>".

>> INSPECTION END NO

### Diagnosis Procedure

Regarding Wiring Diagram information, refer to DLN-23, "Wiring Diagram".

## 1. CHECK AWD SOLENOID CIRCUIT (1)

- Turn the ignition switch OFF.
- Disconnect AWD control unit harness connector.
- Check the continuity between AWD control unit harness connector and the ground.

AWD co	ntrol unit		Continuity	
Connector	Terminal	_		
B67	1	Ground	Not existed	
Бот	2	Ground	Not existed	

#### Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 2.

## 2.CHECK AWD SOLENOID

- Disconnect AWD solenoid harness connector.
- Check the continuity between AWD solenoid connector and the ground.

AWD solenoid	_	Continuity	
Terminal		Continuity	
1	Ground	Not existed	
2	Giodila	Not existed	

Revision: April 2016 2016 QX60 DLN

Α

[TRANSFER: TY21C]

Е

F

Н

INFOID:0000000012856473

K

**DLN-43** 

### **C1205 AWD ACTUATOR RELAY**

[TRANSFER: TY21C]

#### < DTC/CIRCUIT DIAGNOSIS >

#### Is the inspection result normal?

YES >> GO TO 3.

NO >> AWD solenoid is malfunctioning. Replace electric controlled coupling. Refer to <u>DLN-110</u>, <u>"Removal and Installation"</u>.

## 3.CHECK AWD SOLENOID CIRCUIT (2)

Check the continuity between AWD control unit harness connector and the ground.

AWD control unit			Continuity
Connector	Terminal	_	Continuity
B67	1 2	Ground	Not existed

#### Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace damaged parts.

### 4. CHECK TERMINALS AND HARNESS CONNECTORS

- 1. Check AWD control unit pin terminals for damage or loose connection with harness connector.
- 2. Check AWD solenoid pin terminals for damage or loose connection with harness connector.

#### Is the inspection result normal?

- YES >> After connecting each harness connector, perform DTC confirmation procedure again. When DTC "C1205" is detected, replace AWD control unit. Refer to <u>DLN-62</u>, "Removal and Installation".
- NO >> Repair or replace damaged parts.

#### C1210 ECM

#### < DTC/CIRCUIT DIAGNOSIS >

### C1210 ECM

**DTC Logic** INFOID:0000000012856474

#### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1210	ENGINE SIGNAL 1	Malfunction related to engine signal has been detected.	Malfunction of engine control system

#### DTC CONFIRMATION PROCEDURE

### 1.PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

### 2.PERFORM DTC CONFIRMATION

## (P) With CONSULT

- Start the engine and drive at 30 km/h (19 MPH) or more for approximately 1 minute.
- Perform self-diagnosis for "ALL MODE AWD/4WD".

#### Is DTC "C1210" detected?

YFS >> Proceed to diagnosis procedure. Refer to <u>DLN-45, "Diagnosis Procedure"</u>.

>> INSPECTION END NO

## Diagnosis Procedure

1.PERFORM ECM SELF-DIAGNOSIS

### (P)With CONSULT

Perform self-diagnosis for "ENGINE".

#### Is any DTC detected?

YES >> Check the DTC. Refer to EC-112, "DTC Index" (except for Mexico) or EC-654, "DTC Index" (for Mexico).

NO >> GO TO 2.

### 2.CHECK TERMINALS AND HARNESS CONNECTORS

Check AWD control unit pin terminals for damage or loose connection with harness connector.

#### Is inspection result normal?

YES >> After turning the ignition switch OFF, perform DTC confirmation procedure again. If DTC "C1210" is detected, Replace AWD control unit. Refer to DLN-62, "Removal and Installation".

NO >> Repair or replace error-detected parts. DLN

Е

F

Н

INFOID:0000000012856475

Α

[TRANSFER: TY21C]

Ν

M

### P1804 AWD CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

### P1804 AWD CONTROL UNIT

DTC Logic

#### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
P1804	CONTROL UNIT 3	Malfunction is detected in the memory (EEPROM) system of AWD control unit.	Internal malfunction of AWD control unit.

#### DTC CONFIRMATION PROCEDURE

### 1.PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

### 2.PERFORM DTC CONFIRMATION

#### (P)With CONSULT

- 1. Turn the ignition switch OFF to ON.
- Perform self-diagnosis for "ALL MODE AWD/4WD".

#### Is DTC "P1804" detected?

YES >> Proceed to <u>DLN-46</u>, "<u>Diagnosis Procedure</u>".

NO >> INSPECTION END

# Diagnosis Procedure

INFOID:0000000012856477

[TRANSFER: TY21C]

### 1.PERFORM SELF-DIAGNOSIS AGAIN

#### (P) With CONSULT

Perform "DTC CONFIRMATION PROCEDURE" (self-diagnosis) again. Refer to DLN-46, "DTC Logic".

### Is DTC "P1804" detected?

YES >> Replace AWD control unit. Refer to <a href="DLN-62">DLN-62</a>, "Removal and Installation".

NO >> Check AWD control unit pin terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace error-detected parts.

### P181F INCOMPLETE CALIBRATION

< DTC/CIRCUIT DIAGNOSIS >

### P181F INCOMPLETE CALIBRATION

DTC Logic INFOID:0000000012856478

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
P181F	INCOMP CALIBRATION	When incomplete writing unit characteristics of rear final drive is detected.	Writing unit characteristics is incomplete.

#### DTC CONFIRMATION PROCEDURE

### 1.PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

### 2.PERFORM DTC CONFIRMATION

### (P) With CONSULT

- Turn the ignition switch OFF to ON.
- Perform self-diagnosis for "ALL MODE AWD/4WD".

#### Is DTC "P181F" detected?

YFS >> Proceed to <u>DLN-47</u>, "<u>Diagnosis Procedure</u>".

>> INSPECTION END NO

### Diagnosis Procedure

### ${f 1}$ .PERFORM WRITING UNIT CHARACTERISTICS

- Erase self-diagnostic result for "ALL MODE AWD/4WD".
- Perform writing unit characteristics. Refer to <u>DLN-37</u>, "Work Procedure". 2.
- Turn the ignition switch OFF to ON.
- Perform self-diagnosis for "ALL MODE AWD/4WD".

#### Is any DTC except "P181F" detected?

YFS >> Perform trouble diagnosis for detected DTC. Refer to <a href="DLN-22">DLN-22</a>, "DTC Index".

NO >> GO TO 2.

## 2.perform self-diagnosis again

#### (P) With CONSULT

Perform "DTC CONFIRMATION PROCEDURE" (self-diagnosis) again. Refer to DLN-22, "DTC Index".

### Is DTC "P181F" detected?

YES >> Replace AWD control unit. Refer to <u>DLN-62</u>, "Removal and Installation".

>> Check AWD control unit pin terminals for damage or loose connection with harness connector. If NO any items are damaged, repair or replace error-detected parts.

DLN

Е

F

Н

INFOID:0000000012856479

Α

В

[TRANSFER: TY21C]

0

L

#### **U1000 CAN COMM CIRCUIT**

< DTC/CIRCUIT DIAGNOSIS >

### U1000 CAN COMM CIRCUIT

Description INFOID:000000012856480

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit communicate data but selectively reads required data only.

DTC Logic

#### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
U1000	CAN COMM CIRCUIT	AWD control unit is not transmitting/receiving CAN communication signal for 2 seconds or more.	CAN communication error     Malfunction of AWD control unit

#### DTC CONFIRMATION PROCEDURE

### 1.PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

### 2.PERFORM DTC CONFIRMATION

### (I) With CONSULT

- 1. Turn the ignition switch OFF to ON.
- 2. Perform self-diagnosis for "ALL MODE AWD/4WD".

#### Is DTC "U1000" detected?

YES >> Proceed to <u>DLN-48</u>, "<u>Diagnosis Procedure</u>".

NO >> INSPECTION END

### Diagnosis Procedure

Proceed to LAN-28, "Trouble Diagnosis Flow Chart".

INFOID:0000000012856482

[TRANSFER: TY21C]

### **U1010 CONTROL UNIT (CAN)**

< DTC/CIRCUIT DIAGNOSIS >

### U1010 CONTROL UNIT (CAN)

Description INFOID:000000012856483

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit communicate data but selectively reads required data only.

DTC Logic INFOID:0000000012856484 DLN

#### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
U1010	CONTROL UNIT (CAN)	Detecting error during the initial diagnosis of CAN controller of AWD control unit.	Malfunction of AWD control unit

#### DTC CONFIRMATION PROCEDURE

### 1.PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

### 2.PERFORM DTC CONFIRMATION

#### (II) With CONSULT

- 1. Turn the ignition switch OFF to ON.
- 2. Perform self-diagnosis for "ALL MODE AWD/4WD".

#### Is DTC "U1010" detected?

YES >> Proceed to DLN-49, "Diagnosis Procedure".

NO >> INSPECTION END

### Diagnosis Procedure

### 1. CHECK AWD CONTROL UNIT

Check AWD control unit harness connector for disconnection and deformation.

#### Is the inspection result normal?

YES >> Replace AWD control unit. Refer to <u>DLN-62</u>, "Removal and Installation".

NO >> Repair or replace error-detected parts.

F

Е

Α

[TRANSFER: TY21C]

G

Н

K

L

N

Р

INFOID:0000000012856485

Revision: April 2016 **DLN-49** 2016 QX60

#### POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

### POWER SUPPLY AND GROUND CIRCUIT

### Diagnosis Procedure

INFOID:0000000012856486

[TRANSFER: TY21C]

Regarding Wiring Diagram information, refer to <a href="DLN-23">DLN-23</a>, "Wiring Diagram".

## 1. CHECK AWD CONTROL UNIT POWER SUPPLY (1)

- 1. Turn the ignition switch OFF.
- Disconnect AWD control unit harness connector.
- 3. Check the voltage between AWD control unit harness connector and ground.

AWD control unit			Voltage (Approx.)
Connector	Terminal		voltage (Approx.)
B67	7	Ground	0 V

4. Turn the ignition switch ON.

#### **CAUTION:**

#### Never start the engine.

5. Check the voltage between AWD control unit harness connector and ground.

AWD co	AWD control unit		Voltage
Connector	Terminal	_	vollage
B67	7	Ground	Battery voltage

#### Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

## 2.CHECK AWD CONTROL UNIT POWER SUPPLY (2)

- 1. Turn the ignition switch OFF.
- Check the 10A fuse (#49).
- 3. Disconnect IPDM E/R harness connector.
- 4. Check the continuity between AWD control unit harness connector and IPDM E/R harness connector.

AWD co	AWD control unit		IPDM E/R	
Connector	Terminal	Connector	Terminal	Continuity
B67	7	E119	19	Existed

5. Check the continuity between AWD control unit harness connector and the ground.

AWD control unit			Continuity
Connector	Terminal		Continuity
B67	7	Ground	Not existed

#### Is the inspection result normal?

YES >> Perform the trouble diagnosis for ignition power supply circuit. Refer to <u>PG-56, "Wiring Diagram - IGNITION POWER SUPPLY -"</u>.

NO >> Repair or replace error-detected parts.

## 3.CHECK AWD CONTROL UNIT POWER SUPPLY (3)

- Turn the ignition switch OFF.
- 2. Check the voltage between AWD control unit harness connector and ground.

#### POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

AWD control unit		_	Voltage	
Connector	Terminal	_	voltage	
B67	15	Ground	Battery voltage	

[TRANSFER: TY21C]

Turn the ignition switch ON.

#### **CAUTION:**

#### Never start the engine.

4. Check the voltage between AWD control unit harness connector and ground.

AWD co	ntrol unit		Voltage
Connector	Terminal	_	voltage
B67	15	Ground	Battery voltage

#### Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

### 4. CHECK AWD CONTROL UNIT POWER SUPPLY (4)

- Turn the ignition switch OFF.
- 2. Check the 10A fuse (#25).
- 3. Disconnect fuse block (J/B) harness connector.
- 4. Check the continuity between AWD control unit harness connector and fuse block (J/B) harness connector.

AWD co	AWD control unit		Fuse block (J/B)	
Connector	Terminal	Connector Terminal		Continuity
B67	15	M3	2N	Existed

Check the continuity between AWD control unit harness connector and the ground.

AWD control unit			Continuity	
Connector	Terminal		Continuity	
B67	15	Ground	Not existed	

#### Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit. Refer to PG-17, "Wiring Diagram - BAT-TERY POWER SUPPLY -".

NO >> Repair or replace error-detected parts.

## 5. CHECK AWD SOLENOID POWER SUPPLY (1)

- Turn the ignition switch OFF.
- Disconnect AWD solenoid harness connector. 2.
- Check the voltage between AWD control unit harness connector and ground.

AWD co	AWD control unit		Voltage	
Connector	Terminal	_	Voltage	
B67	9	Ground	Battery voltage	

Turn the ignition switch ON.

#### **CAUTION:**

#### Never start the engine.

Check the voltage between AWD control unit harness connector and ground.

AWD co	ntrol unit		Voltage	
Connector	Terminal	_	voltage	
B67	9	Ground	Battery voltage	

**DLN-51** Revision: April 2016 2016 QX60 DLN

Е

F

Н

K

M

Ν

Р

Α

В

### POWER SUPPLY AND GROUND CIRCUIT

[TRANSFER: TY21C]

#### < DTC/CIRCUIT DIAGNOSIS >

#### Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 6.

## 6. CHECK AWD SOLENOID POWER SUPPLY (2)

- 1. Turn the ignition switch OFF.
- 2. Check the 10A fuse (#62)
- 3. Check the harness for open or short between AWD control unit harness connector No.9 terminal and 10A fuse (#62).

#### Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit. Refer to <u>PG-17, "Wiring Diagram - BAT-TERY POWER SUPPLY -"</u>.

NO >> Repair or replace error-detected parts.

## 7.check awd control unit ground

- 1. Turn the ignition switch OFF.
- 2. Check the continuity between AWD control unit harness connector and ground.

AWD control unit			Continuity	
Connector	Terminal	_	Continuity	
B67	10	Ground	Existed	
507	11	Ground	LAISIGU	

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair or replace error-detected parts.

AWD WARNING ICON/DISPLAY
< DTC/CIRCUIT DIAGNOSIS > [TRANSFER: TY21C]
AWD WARNING ICON/DISPLAY
Diagnosis Procedure
1. CHECK POWER SUPPLY AND GROUND CIRCUIT
Perform the trouble diagnosis for power supply and ground circuit. Refer to <u>DLN-50</u> , " <u>Diagnosis Procedure</u> ".
Is the inspection result normal?
YES >> GO TO 2.
NO >> Repair or replace the error-detected parts.
2.PERFORM SELF-DIAGNOSIS (AWD CONTROL UNIT)
With CONSULT Perform self-diagnosis for "ALL MODE AWD/4WD".
ls any detected?
YES >> Check the DTC. Refer to <u>DLN-22, "DTC Index"</u> .
NO >> GO TO 3. 3. PERFORM SELF-DIAGNOSIS (COMBINATION METER)
With CONSULT     Perform self-diagnosis for "METER/M&A".
s any detected?
YES >> Check the DTC. Refer to MWI-26, "DTC Index".
NO >> Perform the trouble diagnosis for combination meter power supply circuit. Refer to <a href="MWI-74"><u>MWI-74</u></a> , <a <="" a="" href="COMBINATION METER: Diagnosis Procedure">.</a>

### AWD ERROR IS DISPLAYED ON INFORMATION DISPLAY

< SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS

### AWD ERROR IS DISPLAYED ON INFORMATION DISPLAY

Description INFOID:000000012856488

AWD warning icon/display (AWD Error: See Owner's Manual) is displayed on information display after the engine started.

### Diagnosis Procedure

INFOID:0000000012856489

[TRANSFER: TY21C]

## 1.PERFORM SELF-DIAGNOSIS

#### (A) With CONSULT

Perform self-diagnosis for "ALL MODE AWD/4WD".

### Is any DTC detected?

YES >> Check the DTC. Refer to <u>DLN-22</u>, "<u>DTC Index</u>".

NO >> GO TO 2.

### 2.CHECK AWD WARNING ICON/DISPLAY

Perform the trouble diagnosis of the AWD warning icon/display. Refer to <u>DLN-53</u>, <u>"Diagnosis Procedure"</u>. <u>Is the inspection result normal?</u>

YES >> Check each harness connector pin terminal for malfunction or disconnection.

NO >> Repair or replace the error-detected parts.

### **HEAVY TIGHT-CORNER BRAKING SYMPTOM OCCURS**

[TRANSFER: TY21C] < SYMPTOM DIAGNOSIS >

### HEAVY TIGHT-CORNER BRAKING SYMPTOM OCCURS

Description INFOID:0000000012856490

Heavy tight-corner braking symptom occurs when the vehicle is driven and the steering wheel is turned fully to either side after the engine is started.

#### NOTE:

Light tight-corner braking symptom may occur depending on driving conditions. This is not malfunction.

### Diagnosis Procedure

INFOID:0000000012856491

### 1.PERFORM ECM SELF-DIAGNOSIS

#### With CONSULT

Perform self-diagnosis for "ENGINE".

#### Is any DTC detected?

YES >> Check the DTC. Refer to EC-654, "DTC Index" (except for Mexico) or EC-112, "DTC Index" (for Mexico).

NO >> GO TO 2.

## 2.perform self-diagnosis

#### (P)With CONSULT

Perform self-diagnosis for "ALL MODE AWD/4WD".

#### Is DTC "U1000" detected?

>> Proceed to LAN-28, "Trouble Diagnosis Flow Chart". YES

NO >> GO TO 3.

## 3.CHECK AWD SOLENOID

Perform the trouble diagnosis of the AWD solenoid. Refer to DLN-40, "Diagnosis Procedure".

#### Is the inspection result normal?

>> GO TO 4. YES

NO >> Repair or replace the error-detected parts.

### 4. CHECK ELECTRIC CONTROLLED COUPLING

- Turn the ignition switch OFF.
- Set the transaxle to neutral. Release the parking brake. 2.
- 3. Lift up the vehicle.
- Rotate the propeller shaft by hand.
- Hold rear wheel of right and left lightly.

#### Does rear wheel rotate?

YES >> Replace electric controlled coupling for mechanical malfunction (clutch sticking etc.). Refer to DLN-110, "Removal and Installation".

NO >> Check each harness connector pin terminal for disconnection. DLN

Α

В

Е

F

Н

M

Ν

### **VEHICLE DOES NOT ENTER AWD MODE**

< SYMPTOM DIAGNOSIS >

### VEHICLE DOES NOT ENTER AWD MODE

Description INFOID:000000012856492

Vehicle does not enter 4-wheel drive mode even though AWD warning icon/display is not displayed.

### Diagnosis Procedure

INFOID:0000000012856493

[TRANSFER: TY21C]

## 1. CHECK AWD WARNING ICON/DISPLAY

Perform the trouble diagnosis of the AWD warning icon/display. Refer to <u>DLN-53</u>, <u>"Diagnosis Procedure"</u>. <u>Is the inspection result normal?</u>

YES >> GO TO 2.

NO >> Repair or replace the error-detected parts.

2.CHECK PARKING BRAKE SWITCH SIGNAL

#### (P)With CONSULT

Check "P BRAKE SW" of CONSULT "DATA MONITOR" for "ALL MODE AWD/4WD".

Monitor Item	Condition	Status
P BRAKE SW	When the parking brake pedal is operation.	On
I BIVARE OW	When the parking brake pedal is not operation.	Off

#### Is the inspection result normal?

YES >> GO TO 3.

NO >> Proceed to <u>BRC-157</u>, "<u>Diagnosis Procedure</u>".

### 3. CRUISE TEST

Drive the vehicle for a period of time.

#### Does any symptom occur?

YES >> Replace electric controlled coupling for mechanical malfunction (mechanical engagement of clutch is not possible). Refer to <a href="https://doi.org/10.1101/journal.org/">DLN-110. "Removal and Installation"</a>.

NO >> Check each harness connector pin terminal for disconnection.

### AWD HIGH TEMP IS DISPLAYED ON INFORMATION DISPLAY

< SYMPTOM DIAGNOSIS >

### AWD HIGH TEMP IS DISPLAYED ON INFORMATION DISPLAY

Description INFOID:000000012856494

While driving, AWD warning icon/display (AWD High Temp. Stop vehicle) is displayed on information display and it turns OFF after 1 minute.

- This symptom protects drivetrain parts when a heavy load is applied to the electric controlled coupling and multiple disc clutch temperature increases. Also, optional distribution of torque sometimes becomes rigid before icon/display is displayed. Both cases are not malfunction. Refer to <u>DLN-21</u>, "<u>Protection Function</u>".
- When this symptom occurs, stop vehicle and allow it to idle for some times. Displays will stop and system will be restored.

DLN

Α

[TRANSFER: TY21C]

Е

F

G

Н

Κ

L

M

Ν

0

### TIRE SIZE INCORRECT IS DISPLAYED ON INFORMATION DISPLAY

< SYMPTOM DIAGNOSIS >

### TIRE SIZE INCORRECT IS DISPLAYED ON INFORMATION DISPLAY

Description INFOID:000000012856495

While driving, AWD warning icon/display (Tire Size Incorrect: See Owner's Manual) is displayed on information display.

### Diagnosis Procedure

INFOID:0000000012856496

[TRANSFER: TY21C]

### 1. CHECK TIRE

Check the following.

- · Tire pressure
- Wear condition
- Front and rear tire size (There is no difference between front and rear tires.)

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace error-detected parts. And then, drive the vehicle at speed of 20 km/h (12 MPH) or more for 5 seconds or more. Improper size information is initialized accordingly.

### 2.CHECK INPUT SIGNAL OF TIRE DIAMETER

#### (P) With CONSULT

- 1. Start the engine.
- 2. Drive at 20 km/h (12 MPH) or more for approximately 4 minutes continually.
- Check "DIS-TIRE MONI" of CONSULT "DATA MONITOR" for "ALL MODE AWD/4WD".

#### Does the item on "DATA MONITOR" indicate "0 - 4 mm"?

YES >> INSPECTION END

NO >> GO TO 3.

## 3.TERMINAL INSPECTION

Check AWD control unit harness connector for disconnection.

#### Is the inspection result normal?

YES >> Replace AWD control unit. Refer to DLN-62, "Removal and Installation".

NO >> Repair or replace the error-detected parts.

### NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

< SYMPTOM DIAGNOSIS >

## NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

## **NVH Troubleshooting Chart**

INFOID:0000000012856497

[TRANSFER: TY21C]

Use the chart below to find the cause of the symptom. The numbers indicate the order of the inspection. If necessary, repair or replace these parts.

Reference		DLN-60, "Inspection"		ſ	DLN-66, "Exploded View"	DLN-66, "Exploded View"	DLN-73, "Inspection", DLN-82, "Inspection"	DLN-73, "Inspection", DLN-82, "Inspection".	
SUSPECTED Properties (Possible cause)		TRANSFER OIL (Level low)	TRANSFER OIL (Wrong)	TRANSFER OIL (Level too high)	LIQUID GASKET (Damaged)	O-RING (Worn or damaged)	OIL SEAL (Worn or damaged)	GEAR (Wom or damaged)	BEARING (Worn or damaged)
Symptom	Noise	1	2				3	3	3
Symptom	Transfer oil leakage		3	1	2	2	2		

F

Е

Α

В

С

DLN

Н

ı

L

M

Ν

0

## PERIODIC MAINTENANCE

### TRANSFER OIL

Inspection INFOID:000000012856498

#### TRANSFER OIL LEAKS

Check that transfer oil is not leaking from transfer assembly or around it.


#### TRANSFER OIL LEVEL

#### **CAUTION:**

Do not start engine while checking transfer oil level.

- 1. Remove filler plug (1) and gasket.
  - <□ : Front
- Transfer oil level (A) should be level with bottom of filler plug hole. Add transfer oil if necessary. Refer to MA-16, "FOR USA AND CANADA: Fluids and Lubricants" (USA and CANADA) or MA-17, "FOR MEXICO: Fluids and Lubricants" (MEXICO).
- Set a new gasket onto filler plug, and install it in the transfer and tighten to specified torque. Refer to <u>DLN-83</u>, "<u>Exploded View</u>". <u>CAUTION</u>:

Do not reuse gasket.

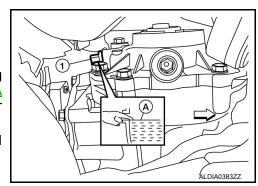

[TRANSFER: TY21C]

Draining INFOID:000000012856499

#### **CAUTION:**


Do not start engine while working.

- 1. Run the vehicle to warm up the transfer unit sufficiently.
- 2. Stop the engine and remove drain plug (1) and gasket and drain the transfer oil.

<□ : Front

 Set a new gasket onto filler plug, and install it in the transfer and tighten to specified torque. Refer to <u>DLN-83</u>. "Exploded View". CAUTION:

Do not reuse gasket.

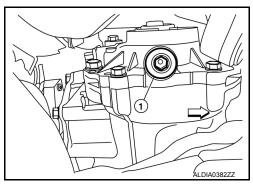


Refilling

#### **CAUTION:**

Do not start engine while checking transfer oil level.

- 1. Remove filler plug (1).
- Fill with new transfer oil to the specified level near the filler plug hole.

<□ : Front

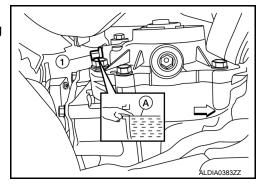

### TRANSFER OIL

<pre>&lt; PERIODIC MAINTENANCE &gt;</pre>	

Transfer oil grade and : Refer to MA-16, "FOR USA viscosity

AND CANADA: Fluids and Letter to MA-16, "FOR USA and Letter to MA-16," FOR USA and Letter to MA-16, "FOR USA and Letter to MA-16," For USA and Letter to MA-16, "FOR USA and Letter to MA-16," For USA and Letter to MA-16, "FOR USA and Letter to MA-16," For USA and Letter to MA-16, "FOR USA and Letter to MA-16," For USA and Letter to MA

AND CANADA: Fluids and Lubricants" (USA and CANADA)

or MA-17, "FOR MEXICO: Fluids and Lubricants" (MEXICO).

Transfer oil capacity : Refer to <u>DLN-87</u>, "General

Specifications".

3. Set a new gasket onto filler plug, and install it in the transfer and tighten to specified torque. Refer to <u>DLN-83</u>, "Exploded View".

**CAUTION:** 

Do not reuse gasket.

DLN

Α

В

С

[TRANSFER: TY21C]

Е

F

G

Н

J

Κ

L

M

Ν

0

#### **AWD CONTROL UNIT**

< REMOVAL AND INSTALLATION >

## REMOVAL AND INSTALLATION

### AWD CONTROL UNIT

#### Removal and Installation

#### INFOID:0000000012856501


[TRANSFER: TY21C]

#### **REMOVAL**

- Disconnect the negative battery terminal. Refer to <u>PG-147, "Exploded View"</u>.
- 2. Remove storage box. Refer to INT-33, "STORAGE BOX: Removal and Installation".

<□ : Front

- 3. Remove AWD control unit bolts (←).
- 4. Disconnect AWD control unit harness connector.
- 5. Remove AWD control unit (1).

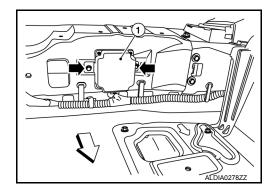

#### INSTALLATION

Installation is in the reverse order of removal.

• Tighten AWD control unit bolts to specified torque.

AWD control unit bolts : 10.1 N·m (1.0 kg-m, 7 ft-lb)

#### **CAUTION:**

- Do not drop or shock AWD control unit.
- When replacing AWD control unit perform, "ADDITIONAL SERVICE WHEN REPLACING AWD CONTROL UNIT". Refer to <a href="DLN-36">DLN-36</a>, "Description".

### **TRANSFER COVER**

#### < REMOVAL AND INSTALLATION >

### TRANSFER COVER

### Removal and Installation

#### INFOID:0000000012856502

[TRANSFER: TY21C]

#### NOTE:

- Replacement on vehicle may cause damage to transfer cover, and may cause a transfer oil leak.
- If transfer cover oil seal requires replacement, remove the transfer assembly from the vehicle before replacing transfer cover oil seal. Refer to <a href="DLN-84">DLN-84</a>, "Disassembly".

DLN

Α

В

С

Ε

F

G

Н

Κ

L

M


Ν

0

## UNIT REMOVAL AND INSTALLATION

### TRANSFER ASSEMBLY

Exploded View

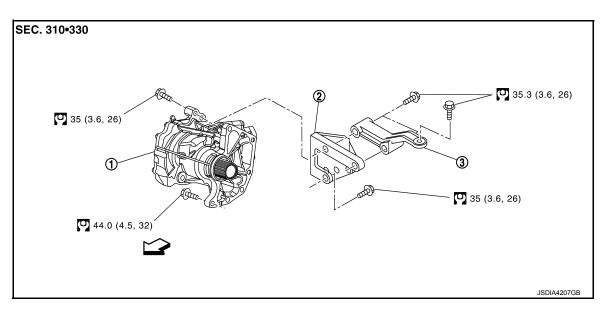

- 1. Transfer assembly
- 2. Transfer gusset

3. Rear gusset

∀ : Vehicle front

: N·m (kg-m, ft-lb)

#### Removal and Installation

INFOID:0000000012856504

[TRANSFER: TY21C]

#### NOTE:

When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.

#### REMOVAL

- 1. Drain the transfer oil. Refer to <u>DLN-60</u>, "<u>Draining</u>".
- Remove exhaust manifold (RH). Refer to <u>EM-33, "Removal and Installation (bank 1)"</u>. CAUTION:

#### Handle carefully to avoid any shock to three way catalyst.


- 3. Support transaxle with a suitable jack.
- 4. Remove the steering gear. Refer to <u>ST-63, "Removal and Installation FWD"</u> (FWD) or <u>ST-65, "Removal and Installation AWD"</u> (AWD).
- 5. Remove rear gusset and transfer gusset.
- 6. Remove transaxle assembly to transfer assembly bolts.

#### **CAUTION:**

Be careful not to damage gear ring oil seal inside of CVT.

Bolt No.	(A)	(B)
Quantity	4	2
Bolt length " $\ell$ " mm (in)	40 (1.57)	40 (1.57)

- Remove transfer assembly from the vehicle. CAUTION:
  - · Do not damage air breather hose.

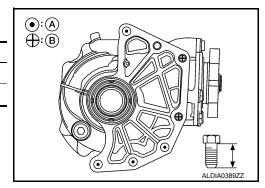

### TRANSFER ASSEMBLY

#### < UNIT REMOVAL AND INSTALLATION >

• After removing transfer from transaxle, always replace differential side oil seal of the transaxle side with new one. Refer to TM-219, "Removal and Installation".

#### INSTALLATION


Installation is in the reverse order of removal.

 When installing the transfer to the transaxle, install the bolts following the standard below.

Bolt No.	(A)	(B)
Quantity	4	2
Bolt length " $\ell$ " mm (in)	40 (1.57)	40 (1.57)

#### **CAUTION:**

- When installing transfer to transaxle, be careful not to damage oil seal of transaxle.
- Do not reuse differential side oil seal.
- Check transfer oil level and check for transfer oil leaks after installation. Refer to <u>DLN-60</u>, "<u>Refilling</u>".

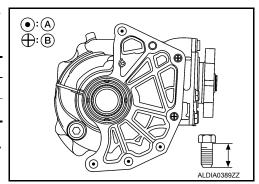

[TRANSFER: TY21C]

С

Α

В

DLN

Е

F

G

Н

1

K

L

M

Ν


0

[TRANSFER: TY21C]

## **UNIT DISASSEMBLY AND ASSEMBLY**

### TRANSFER COVER

Exploded View

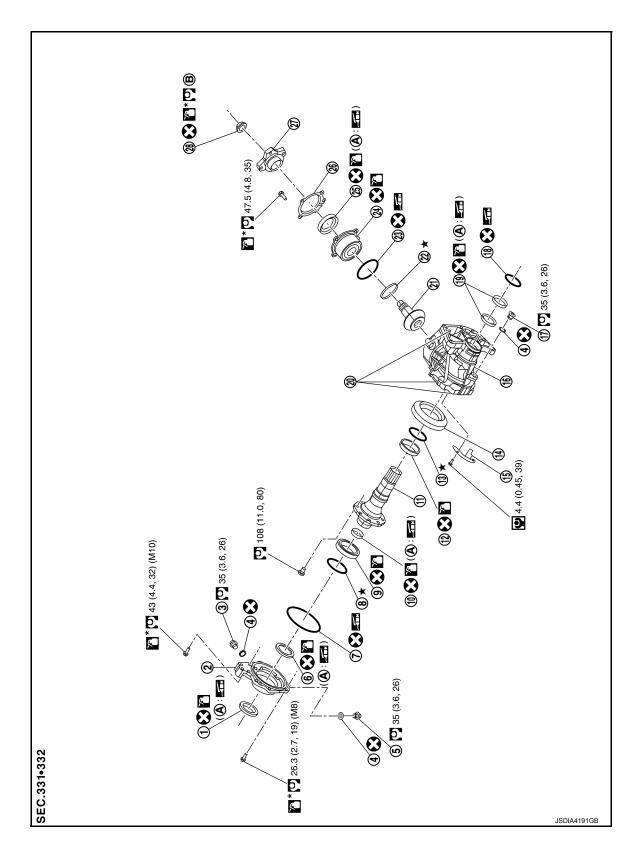

### TRANSFER COVER

#### < UNIT DISASSEMBLY AND ASSEMBLY >

Oil seal

4. Gasket

7. O-ring

10. Drive shaft oil seal

13. Ring gear bearing adjusting shim (transfer case side)

16. Transfer case

19. Oil seal

22. Drive pinion adjusting shim

25. Oil seal

28. Pinion lock nut

A. Oil seal lip

2. Transfer cover

5. Drain plug

8. Ring gear bearing adjusting shim (transfer cover side)

11. Ring gear shaft

14. Ring gear

17. Plug

20. Dowel pin

23. O-ring

26. Dust cover

B. Comply with the assembly procedure when tightening. Refer to <u>DLN-77</u>, "Assembly".

: N·m (kg-m, ft-lb)

: N·m (kg-m, in-lb)

: Always replace after every disassembly.

: Apply gear oil.

\*: Apply anti-corrosive oil.

: Apply multi-purpose grease.

★: Select with proper thickness.

Disassembly

Remove transfer cover mounting bolts (

g bolts (**←**).

- Lightly tap transfer cover (1) with a plastic hammer to remove transfer cover.
- 3. Remove O-ring from transfer cover.

**CAUTION:** 

- Never use a tool.
- · Never damage transfer cover.

3. Filler plug

6. Oil seal

P. Ring gear bearing (transfer cover

[TRANSFER: TY21C]

side)

12. Ring gear bearing (transfer case

side)

15. Baffle plate

18. O-ring

21. Drive pinion

24. Pinion bearing assembly

27. Companion flange

DLN

Α

В

F

Е

Н

INFOID:0000000012856506

JSDIA3949ZZ

JSDIA3950ZZ

K


M

Ν

#### < UNIT DISASSEMBLY AND ASSEMBLY >


Lightly tap the metal part of oil seals (1) with punch from back side of transfer cover to remove oil seals.

When removing, never damage the transfer cover by scooping it out with a tool.

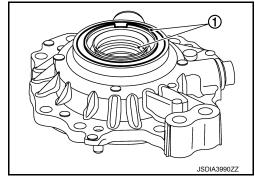

[TRANSFER: TY21C]

- Remove the ring gear bearing adjusting shim (transfer cover side) (1) and ring gear bearing outer race (transfer cover side) (2) using drift (commercial service tool).
- Remove drain plug and gasket.
- 7. Remove filler plug and gasket.
- 8. Perform inspection after disassembly. Refer to <u>DLN-69</u>, "Inspection".

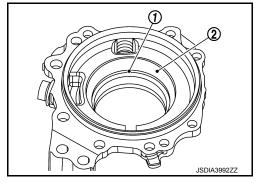

Assembly


INFOID:0000000012856507

- Select the ring gear bearing adjusting shim (transfer cover side). Refer to <u>DLN-78</u>, "Adjustment".
- 2. Install the selected ring gear bearing adjusting shim (transfer cover side) (1) and ring gear bearing outer race (transfer cover side) (2) using drift (commercial service tool).

#### **CAUTION:**

- · Never reuse ring gear bearing.
- Apply gear oil to the ring gear bearing.
- 3. Install gasket onto drain plug and install them to transfer cover. **CAUTION:**

Never reuse gasket.

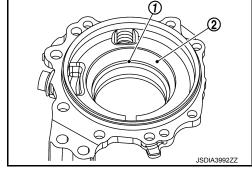


Install the transfer cover to the transfer case, and apply anti-corrosive oil onto thread and seats on the mounting bolts. Then tighten mounting bolts to the specified torque.

> Α : M10 bolt В : M8 bolt

#### NOTE:

At this timing, O-ring installing to transfer cover is not necessary. Install O-ring after tooth contact is checked.

5. Check backlash, tooth contact, total preload and companion flange runout. Refer to <u>DLN-78</u>, "Adjustment".

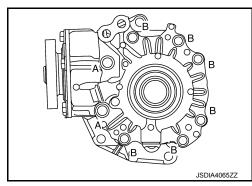

#### **CAUTION:**

Measure the total preload without oil seals of transfer cover and transfer case.


- 6. Remove transfer cover to install O-ring.
- 7. Apply multi-purpose grease lightly and evenly onto an O-ring, and install it to the transfer cover. **CAUTION:** 
  - · Never reuse O-ring.
  - When installing O-ring, never use a tool.
  - Never damage O-ring.

### TRANSFER COVER

#### < UNIT DISASSEMBLY AND ASSEMBLY >

Install the transfer cover to the transfer case, and apply anti-corrosive oil onto thread and seats on the mounting bolts. Then tighten mounting bolts to the specified torque.

Α : M10 bolt В : M8 bolt

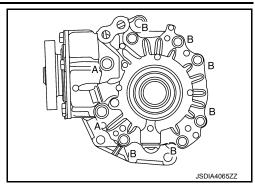

[TRANSFER: TY21C]

Using drift (commercial service tool), drive the transfer cover oil seals.

> : 10.3 +0.6/-0 mm (0.406 +0.024/-0 in) Α

В : 0 +0.6/-0 mm (0 +0.024/-0 in)

#### **CAUTION:**

- · When checking the total preload torque, measure it without the oil seal, then install the oil seal.
- · Never reuse the oil seal.
- When installing, never incline oil seal.
- · Apply multi-purpose grease onto oil seal lips, and gear oil onto the circumference of the oil seal.
- 10. Install gasket onto filler plug and install them to transfer cover.

#### **CAUTION:**

- Never reuse gasket.
- · Install filler plug after oil is filled.


Inspection INFOID:0000000012856508

### INSPECTION AFTER DISASSEMBLY

Check items below. If necessary, replace them with new ones.

Transfer cover

Check the bearing mounting surface for wear, cracks and damages.

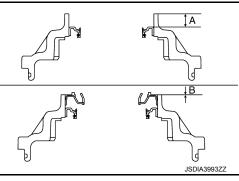

Α

В

DLN

Е

F

Н

K

M


L

Ν

[TRANSFER: TY21C]

### **RING GEAR SHAFT**

Exploded View

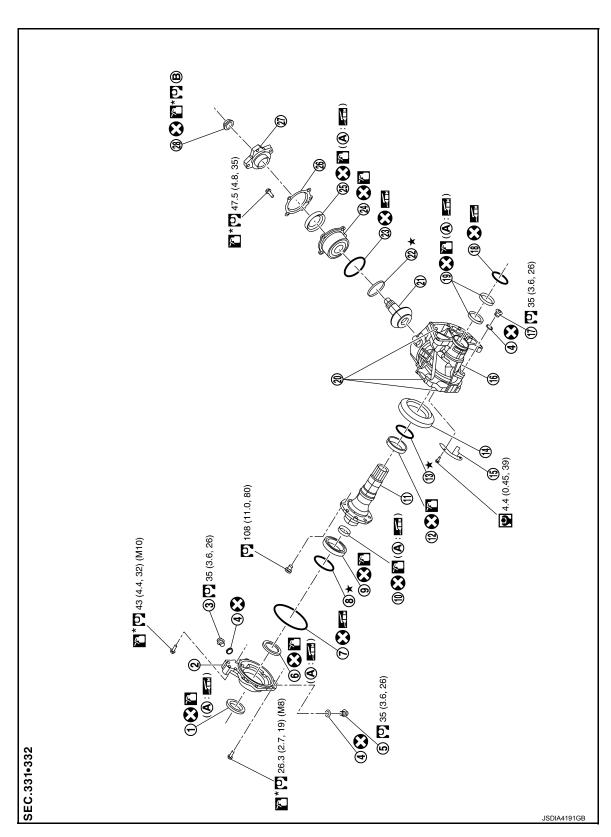

- 1. Oil seal
- 4. Gasket

- 2. Transfer cover
- 5. Drain plug

- Filler plug
- 6. Oil seal

#### RING GEAR SHAFT

#### < UNIT DISASSEMBLY AND ASSEMBLY >

[TRANSFER: TY21C] O-ring Ring gear bearing adjusting shim Ring gear bearing (transfer cover (transfer cover side) side) 12. Ring gear bearing (transfer case 10. Drive shaft oil seal 11. Ring gear shaft side)

15. Baffle plate 13. Ring gear bearing adjusting shim 14. Ring gear (transfer case side)

16. Transfer case 17. Plug 18. O-ring 19. Oil seal 20. Dowel pin 21. Drive pinion

22. Drive pinion adjusting shim 23. O-ring 24. Pinion bearing assembly 25. Oil seal 26. Dust cover 27. Companion flange

28. Pinion lock nut Oil seal lip B. Comply with the assembly proce-

> dure when tightening. Refer to DLN-77, "Assembly".

: N·m (kg-m, ft-lb)

: N·m (kg-m, in-lb) : Always replace after every disassembly.

: Apply gear oil.

\*: Apply anti-corrosive oil.

Apply multi-purpose grease.

★: Select with proper thickness.

Disassembly INFOID:0000000012856510


Remove transfer cover assembly. Refer to <u>DLN-67, "Disassembly"</u>.

2. Remove ring gear bearing outer race (transfer cover side) and ring gear bearing adjusting shim (transfer cover side) from the transfer cover. Refer to <u>DLN-67</u>, "<u>Disassembly</u>".

3. Remove ring gear shaft assembly from the transfer case.


Remove ring gear bearing outer race (transfer case side) and ring gear bearing adjusting shim (transfer case side) from the transfer case. Refer to <u>DLN-84</u>, "<u>Disassembly</u>"

Remove ring gear bearing inner race (transfer cover side) from ring gear shaft with drift (A) (commercial service tool) and replacer (commercial service tool).

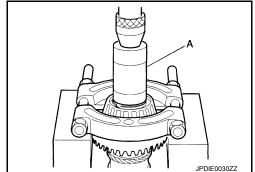

6. Remove ring gear bearing inner race (transfer case side) from ring gear shaft with the drift (A) [SST: ST33061000 (J-8107-2)] and puller (commercial service tool).

Remove the ring gear mounting bolts.

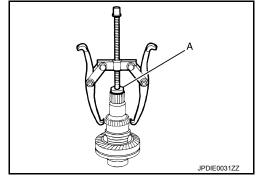

DLN

Α

В

Е

Н

K

J

M

Ν


Р

**DLN-71** Revision: April 2016 2016 QX60

#### RING GEAR SHAFT


#### < UNIT DISASSEMBLY AND ASSEMBLY >

Lightly tap ring gear with a plastic hammer to remove ring gear from the ring gear shaft.

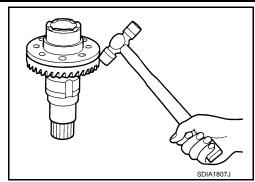

[TRANSFER: TY21C]

- 9. Remove drive shaft oil seal from the ring gear shaft with the puller (A) [SST: KV381054S0 (J-34286)].
- Perform inspection after disassembly. Refer to <u>DLN-73</u>, "<u>Inspection</u>".

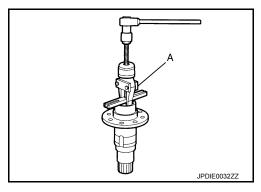


Assembly

1. Using drift (A) (commercial service tool), install drive shaft oil seal (1) within the dimension (L) shown as follows.

L : 2.0 +0.6/-0 mm (0.079 +0.024/-0 in)

#### **CAUTION:**

- Never reuse the oil seal.
- When installing, never incline oil seal.
- Apply multi-purpose grease onto oil seal lips, and gear oil onto the circumference of the oil seal.
- 2. Select ring gear bearing adjusting shim (transfer case side) and ring gear bearing adjusting shim (transfer cover side). Refer to <a href="DLN-78">DLN-78</a>, "Adjustment".

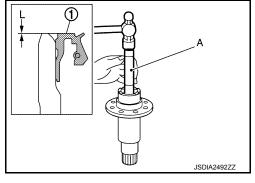

- Assemble the selected ring gear bearing adjusting shim (transfer case side) and ring gear bearing outer race (transfer case side) to transfer case. Refer to <u>DLN-85, "Assembly"</u>.
   CAUTION:
  - · Never reuse ring gear bearing.
  - Apply gear oil to the ring gear bearing.
- Assemble the selected ring gear bearing adjusting shim (transfer cover side) and ring gear bearing outer race (transfer cover side) to transfer cover. Refer to <u>DLN-68</u>, "<u>Assembly</u>".
   CAUTION:
  - · Never reuse ring gear bearing.
  - Apply gear oil to the ring gear bearing.
- 5. Install the ring gear to ring gear shaft, and tighten mounting bolts to the specified torque.


# RING GEAR SHAFT

### < UNIT DISASSEMBLY AND ASSEMBLY >

Install ring gear bearing inner race (transfer cover side) with drift (A) (commercial service tool).

### **CAUTION:**

- Never reuse ring gear bearing.
- Apply gear oil to the ring gear bearing.

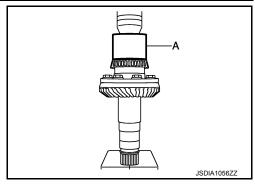


[TRANSFER: TY21C]


7. Install the ring gear bearing inner race (transfer case side) to ring gear shaft with drift (A) (commercial service tool). **CAUTION:** 

- · Never reuse ring gear bearing.
- Apply gear oil to the ring gear bearing.
- 8. Install the ring gear shaft assembly to the transfer case. CAUTION:

Protect transfer case oil seals beforehand from being damaged by the spline of ring gear shaft below method follow-

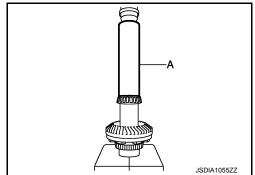

Apply multi-purpose grease to spline part indicated in the figure.

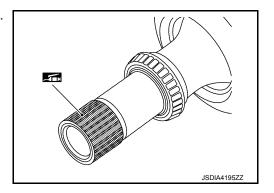

b. Wrap piece of vinyl to spline part only indicated in the figure. [(A): limit line]

#### CAUTION:


Never wrap sliding surfaces on oil seal.

9. Install transfer cover to check and adjust each part. Refer to DLN-68, "Assembly".

#### NOTE:

At this timing, O-ring installing to transfer cover is not necessary. Install O-ring after backlash and tooth contact are checked.

10. Check backlash, tooth contact, total preload and companion flange runout. Refer to <u>DLN-78</u>, "Adjustment". CAUTION:

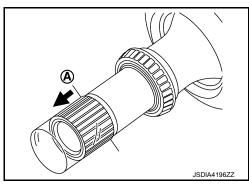

Measure the total preload without oil seals of transfer cover and transfer case.

- Reinstall transfer cover for installing O-ring. Refer to <u>DLN-68</u>, "Assembly".
- 12. After installing transfer case oil seals, remove wrapped vinyl from the spline of ring gear shaft.

Inspection INFOID:0000000012856512

## INSPECTION AFTER DISASSEMBLY

Check items below. If necessary, replace them with new ones.

### Gear and Shaft

Check gear face and shaft for wear, cracks, damage, and seizure.

**DLN-73** 2016 QX60 Revision: April 2016

Α

В

DLN

Е

Н

M

Ν

0

# **RING GEAR SHAFT**

[TRANSFER: TY21C]

# < UNIT DISASSEMBLY AND ASSEMBLY >

### **CAUTION:**

If malfunction is detected on the ring gear or drive pinion, replace the ring gear and drive pinion as a set.

Bearing

Check for seizure, peeling, wear, corrosion, sticking, unusual noise, roughness in hand turning, and other damage.

### **CAUTION:**

When replacing the bearing, always replace the inner race and outer race as a pair.

Shim

Check for seizure, damage, and unusual wear.

Exploded View

INFOID:000000012856513

Α

В

С

DLN

Е

F

G

Н

K

L


M

Ν

0

Р

[TRANSFER: TY21C]

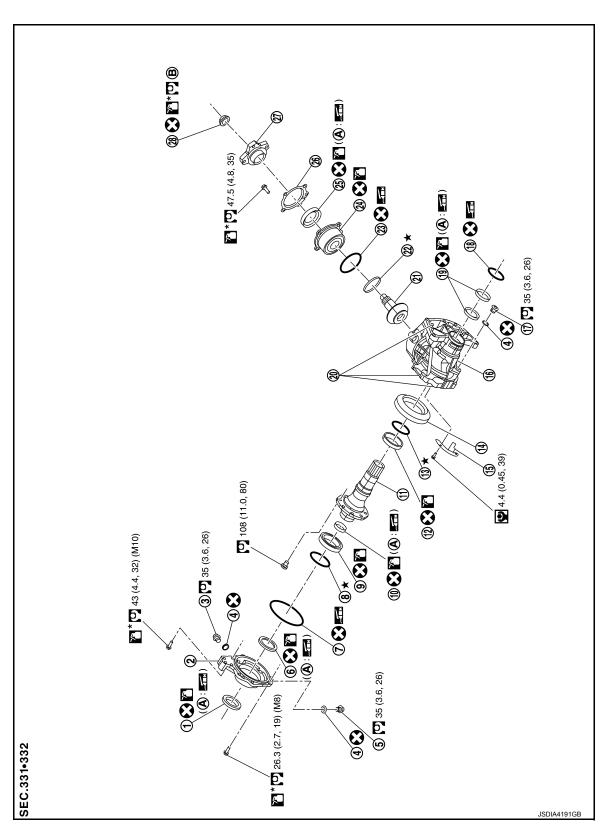

- 1. Oil seal
- 4. Gasket

- 2. Transfer cover
- 5. Drain plug

- 3. Filler plug
- 6. Oil seal

Comply with the assembly proce-

### < UNIT DISASSEMBLY AND ASSEMBLY >

- O-ring Ring gear bearing adjusting shim (transfer cover side)
- 10. Drive shaft oil seal
- 13. Ring gear bearing adjusting shim (transfer case side)
- 16. Transfer case
- 19. Oil seal
- 22. Drive pinion adjusting shim
- 25. Oil seal
- 28. Pinion lock nut
- Oil seal lip

- 11. Ring gear shaft
- 14. Ring gear
- 17. Plug
- 20. Dowel pin
- 23. O-ring
- 26. Dust cover

Ring gear bearing (transfer cover 9.

[TRANSFER: TY21C]


- 12. Ring gear bearing (transfer case side)
- 15. Baffle plate
- 18. O-ring
- 21. Drive pinion
- 24. Pinion bearing assembly
- 27. Companion flange

dure when tightening. Refer to DLN-77, "Assembly".

- : N·m (kg-m, ft-lb)
- : N·m (kg-m, in-lb)
- : Always replace after every disassembly.
- : Apply gear oil.
- \*: Apply anti-corrosive oil.
- Apply multi-purpose grease.
- ★: Select with proper thickness.


Disassembly

Remove pinion bearing assembly mounting bolts.

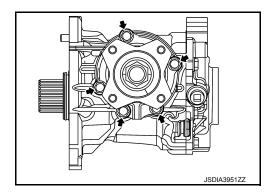


INFOID:0000000012856514

- Lightly tap companion flange with a plastic hammer to remove 2. drive pinion assembly (1).
- 3. Remove the O-ring from pinion bearing.
- Remove the pinion lock nut. 4.

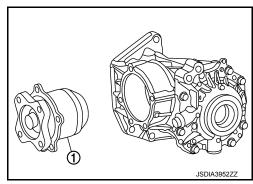

# < UNIT DISASSEMBLY AND ASSEMBLY >

- Remove drive pinion from pinion bearing assembly with drift (A) (commercial service tool) and replacer (B) (commercial service tool).
- Remove adjusting shim.
- Remove companion flange.
- 8. Remove the dust cover.
- 9. Remove the oil seal.
- Perform inspection after disassembly. Refer to <u>DLN-82</u>, "<u>Inspection</u>".

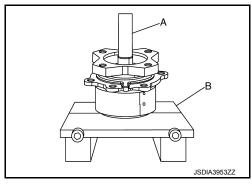

[TRANSFER: TY21C]

INFOID:0000000012856515

Α

DLN

Е

F

Н

Assembly


- Select drive pinion adjusting shim. Refer to <u>DLN-78</u>, "Adjustment".
- Assemble the selected drive pinion adjusting shim to drive pinion.
- 3. Install the drive pinion to pinion bearing assembly with drift (commercial service tool). **CAUTION:** 
  - Never reuse pinion bearing assembly.
  - Apply gear oil to pinion bearing part.
- 4. Install oil seal to pinion bearing assembly with drift (A) (commercial service tool).

#### **CAUTION:**

- Never reuse the oil seal.
- When installing, never incline oil seal.
- Apply multi-purpose grease onto oil seal lips, and gear oil onto the circumference of the oil seal.
- 5. Install dust cover.

### NOTE:

Tighten dust cover together with pinion bearing assembly.

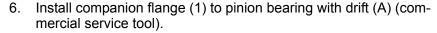

- Apply anti-corrosive oil to the thread and seat of the lock nut, and adjust the pinion lock nut tightening torque and pinion bearing preload torque, using a preload gauge.
- a. Install pinion lock nut, and then tighten to the specified torque.


Pinion lock nut : 90±9 N⋅m (9.2±0.92kg-m, 66±7 ft-lb) tightening torque


#### **CAUTION:**

- Never reuse pinion lock nut.
- · Check that pinion lock nut is seated on the companion flange.
- b. After tightening pinion lock nut to the specified torque, retighten the pinion lock nut by 25 degrees.
- c. Measure the pinion bearing preload.

### Pinion bearing preload : Refer to <a href="DLN-87">DLN-87</a>, "Preload Torque".

- 8. Apply multi-purpose grease lightly and evenly onto an O-ring, and install it to the pinion bearing assembly. **CAUTION:** 
  - Never reuse O-ring.
  - When installing O-ring, never use a tool.
  - Never damage O-ring.

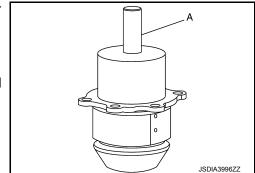

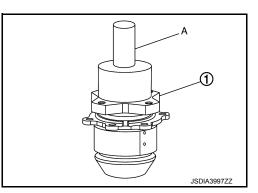

M

Ν

0

Revision: April 2016 **DLN-77** 2016 QX60

# < UNIT DISASSEMBLY AND ASSEMBLY >


Install drive pinion assembly, and apply anti-corrosive oil onto thread and seats on the mounting bolts. Tighten to the specified torque.

# NOTE:

Tighten dust cover together with pinion bearing assembly.

10. Check backlash, tooth contact, total preload and companion flange runout. Refer to <u>DLN-78</u>, "Adjustment". **CAUTION:** 

Measure the total preload without oil seals of transfer cover and transfer case.

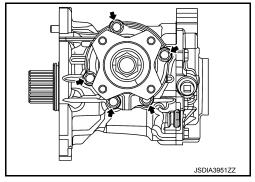


[TRANSFER: TY21C]

Adjustment INFOID:0000000012856516

# ADJUSTING SHIM SELECTION

# Measurement point

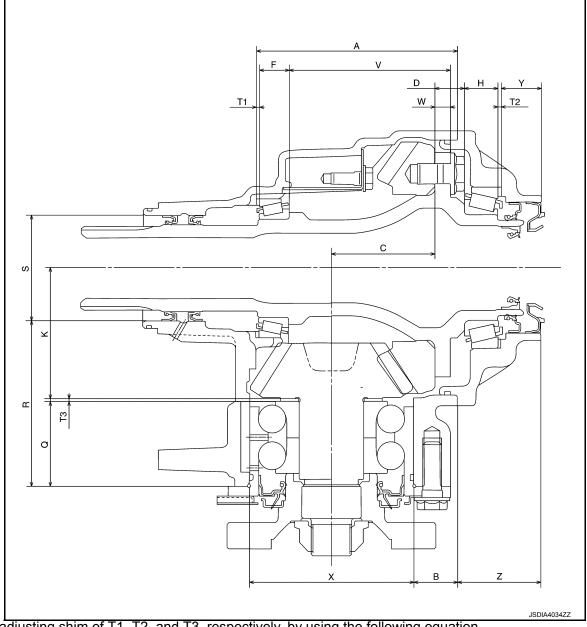

Select adjusting shim of T1, T2, and T3, respectively, by using the following equation.

**DLN-78** Revision: April 2016 2016 QX60

T1 [Ring gear bearing adjusting shim (transfer case side)]
• T1 = A -(B +X/2) +C +W -V -F -(M/100) +0.071 mm (0.0028 in)

#### < UNIT DISASSEMBLY AND ASSEMBLY >


T2 [Ring gear bearing adjusting shim (transfer cover side)]

• T2 = -Y + Z + (B + X/2) - C - D - H + (M/100) + 0.071 mm (0.0028 in)

T3 (Drive pinion adjusting shim)

- T3 = -Q + (R + S/2) K + (O/100)
- Check dimension (M) on the ring gear side face.


Dimension "M" indicates the difference between the optimum engagement and standard dimensions in increments of 0.01 mm (0.0004 in) written on the ring gear side face.

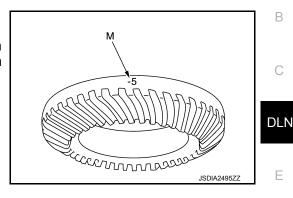

[TRANSFER: TY21C]

 Check dimension (O) on the gear end of drive pinion. NOTE:

Dimension "O" indicates the difference between the optimum engagement and the standard dimensions in increments of 0.01 mm (0.0004 in) written on the gear end of drive pinion.

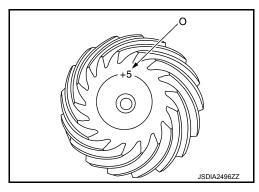

#### PINION BEARING PRELOAD

#### **CAUTION:**

When measuring preload, the rotating speed must be set to 30 rpm.


- Remove ring gear shaft assembly from the transfer case. Refer to DLN-71, "Disassembly".
- Rotate the companion flange back and forth from 2 to 3 times to check for unusual noise, binding, sticking, and so on.
- Rotate the companion flange at least 20 times to check for smooth operation of the bearing.
- Measure the pinion bearing preload with the preload gauge (A) [SST: ST3127S000 (J-25765-A)].

Pinion bearing preload : Refer to DLN-87, "Preload Torque".

## **CAUTION:**

Each rotational part should rotate smoothly with the specified gear oil.

 If outside the standard, disassemble the drive pinion assembly to check and adjust each part.

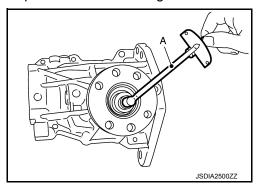

#### TOTAL PRELOAD

#### **CAUTION:**

When measuring preload, the rotating speed must be set to 30 rpm.

Measure pinion bearing preload.

# CAUTION:

Check that the pinion bearing preload is within the standard.

- Assemble the ring gear shaft assembly to the transfer case. Refer to <u>DLN-72</u>. "Assembly"
- Install transfer cover to check and adjust each part. Refer to <u>DLN-68</u>, "Assembly".
- Rotate the companion flange at least 20 times to check for smooth operation of the bearing.

Α

Е

Н

K

L

M

Ν

0

Р

**DLN-79** Revision: April 2016 2016 QX60

### < UNIT DISASSEMBLY AND ASSEMBLY >


Measure the total preload with the preload gauge (A) [SST: ST3127S000 (J-25765-A)].

Total preload : Refer to <u>DLN-87, "Preload</u> Torque".

#### **CAUTION:**

Each rotational part should rotate smoothly with the specified gear oil.

 If outside the standard, disassemble the transfer assembly to check and adjust each part. Measure it with the transfer case oil seal and transfer cover oil seal removed when measuring total preload after disassembly. Then install transfer case oil seals and transfer cover oil seal.

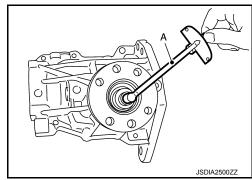


[TRANSFER: TY21C]

#### **BACKLASH**

- 1. Install the bolt to the companion flange.
- 2. Fit a dial indicator onto the bolt (A).
- 3. Measure the circumference backlash of the companion flange.

#### Backlash : Refer to <u>DLN-87</u>, "Backlash".

• If outside the standard, disassemble the transfer assembly to check and adjust each part.

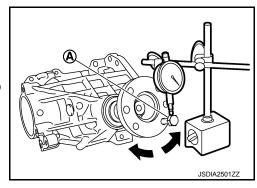

#### TOOTH CONTACT

- Remove transfer cover. Refer to DLN-67. "Disassembly".
- 2. Remove ring gear shaft assembly from transfer case. Refer to <a href="DLN-71">DLN-71</a>, "Disassembly".
- 3. Apply red lead onto the ring gear. **CAUTION:**


# Apply red lead to both faces of 3 to 4 gears at 4 locations evenly spaced on the ring gear.

- 4. Assemble the ring gear shaft assembly to the transfer case. Refer to DLN-72, "Assembly".
- 5. Install transfer cover to check and adjust each part. Refer to <u>DLN-68, "Assembly"</u>.

#### NOTE:

At this timing, O-ring installing to transfer cover is not necessary. Install O-ring after backlash and tooth contact are checked.

- 6. Remove the plug from the transfer case.
- 7. Rotate the companion flange back and forth several times, and check the drive pinion gear to ring gear tooth contact by viewing from the plug hole.

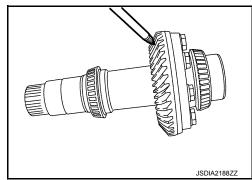

# [TRANSFER: TY21C]


# Tooth Contact Judgment Guide

Drive pinio	n adjusting n value mm(in)	Tooth conta	Need for adjustment	
SIIIII Selectio		Drive side Heel side Toe side	Toe side Heel side	aujustinent
<b></b>	-0.09 (-0.0035)			YES
	-0.06 (-0.0024)			
Thinner	-0.03 (-0.0012)			
	- 0			NO
Thicker	+0.03 (+0.0012)			
	+0.06 (+0.0024)			YES
<b>+</b>	+0.09 (+0.0035)			120

8. Follow the procedure below to adjust pinion height (dimension X) if tooth contact is improper. For selecting adjusting shim, refer to the latest parts information.

### **CAUTION:**

If no adjusting shim with the calculated value is available, select the thicker and closest one.

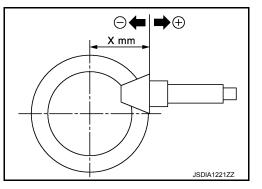


JSDIA4035GB

Thicken the drive pinion adjusting shim to move the drive pinion closer to the ring gear in case of face contact or heel contact.

## **CAUTION:**

Only one adjusting shim can be selected.

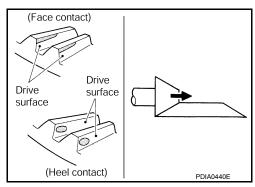

Α

В

C

DLN

F

Е

G

Н

K

M

Ν


0

### < UNIT DISASSEMBLY AND ASSEMBLY >

 Thin the drive pinion adjusting shim to move the drive pinion farther from the ring gear in case of flank contact or toe contact.

#### **CAUTION:**

Only one adjusting shim can be selected.

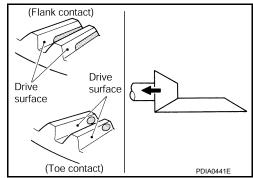

[TRANSFER: TY21C]

#### COMPANION FLANGE RUNOUT


- Fit a dial indicator onto the companion flange face (inner side of the propeller shaft mounting bolt holes).
- Rotate the companion flange to check for runout.

# Companion flange runout : Refer to <u>DLN-87, "Companion Flange Runout"</u>.

- 3. Fit a test indicator to the inner side of the companion flange (socket diameter).
- 4. Rotate the companion flange to check for runout.

# Companion flange runout : Refer to <u>DLN-87, "Companion Flange Runout"</u>.

- 5. Follow the procedure below to adjust if runout value is outside the repair limit.
- a. Check for runout while changing the phase between companion flange and drive pinion in 90° steps. Then search for the minimum point.
- b. Replace companion flange if runout value is still outside the limit after the phase has been changed.
- Adjust assembly status of the pinion bearing and drive pinion, or replace pinion bearing assembly if runout is outside the standard after the companion flange is replaced.

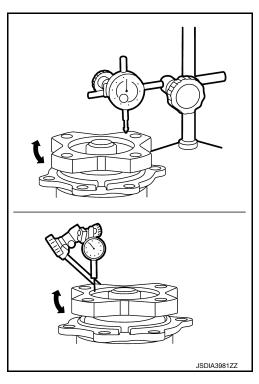

Inspection INFOID:000000012856517

#### INSPECTION AFTER DISASSEMBLY

Check items below. If necessary, replace them with new ones.

Gear and Shaft

Check gear face and shaft for wear, cracks, damage, and seizure.

# **CAUTION:**

Replace ring gear and drive pinion as a set (hypoid gear set) if any malfunction is detected on the ring gear or drive pinion.


Bearing

Check for seizure, peeling, wear, corrosion, sticking, unusual noise, roughness in hand turning, and other damage.

Shim

Check for seizure, damage, and unusual wear.

**Exploded View** INFOID:0000000012856518

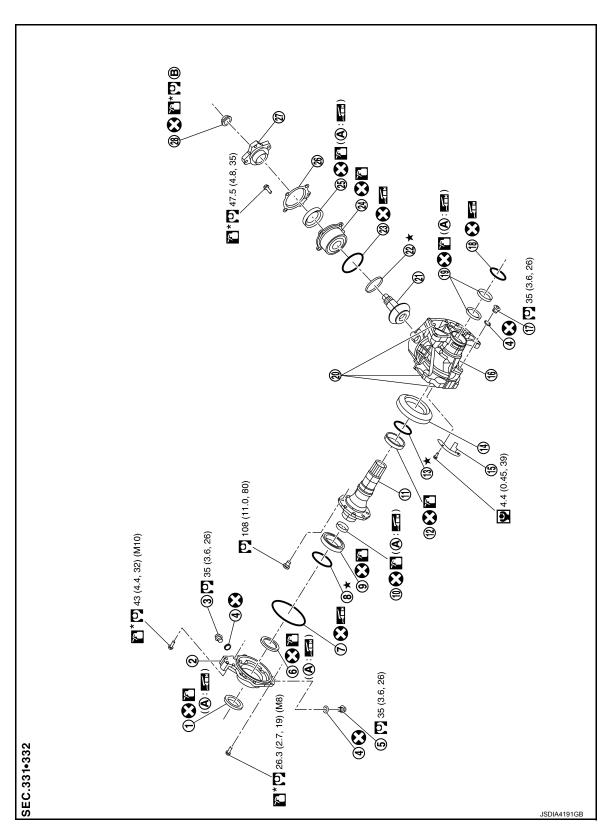

- Oil seal 1.
- Gasket

- 2. Transfer cover
- 5. Drain plug

- Filler plug 3.
- 6. Oil seal

В

Α

[TRANSFER: TY21C]

С

DLN

Е

F

G

Н

K

L

M

Ν

0

**DLN-83** 2016 QX60 Revision: April 2016

Comply with the assembly procedure when tightening. Refer to <u>DLN-</u>

# < UNIT DISASSEMBLY AND ASSEMBLY >

- O-ring 8. Ring gear bearing adjusting shim 9. Ring gear bearing shim 9. Ring
- Drive shaft oil seal
   Ring gear shaft
- 13. Ring gear bearing adjusting shim (transfer case side)
- 16. Transfer case
- 19. Oil seal
- io. Oil ocal
- 22. Drive pinion adjusting shim
- 25. Oil seal
- 28. Pinion lock nutA. Oil seal lip

- Ring gear
- 17. Plug
- ir. i lug
- 20. Dowel pin23. O-ring
- 26. Dust cover
- 20. 200.00101

77, "Assembly".

Ring gear bearing (transfer cover side)

[TRANSFER: TY21C]

- 12. Ring gear bearing (transfer case side)
- 15. Baffle plate
- 18. O-ring
- 21. Drive pinion
- 24. Pinion bearing assembly
- 27. Companion flange

: N·m (kg-m, ft-lb)

: N·m (kg-m, in-lb)

: Always replace after every disassembly.

: Apply gear oil.

\*: Apply anti-corrosive oil.

Apply multi-purpose grease.

★: Select with proper thickness.

Disassembly

INFOID:0000000012856519


- 1. Remove transfer cover. Refer to <a href="DLN-67">DLN-67</a>, "Disassembly".
- 2. Remove ring gear shaft assembly. Refer to <a href="DLN-71">DLN-71</a>, "Disassembly".
- Remove drive pinion assembly. Refer to <u>DLN-76, "Disassembly"</u>.
- 4. Remove O-ring from transfer case.

#### **CAUTION:**


- Never use a tool.
- Never damage transfer case.
- 5. Remove oil seals (1).

#### **CAUTION:**

Never damage transfer case.

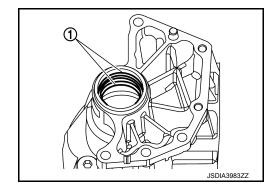

Remove baffle plate (1).

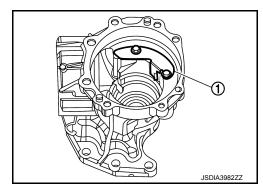


# < UNIT DISASSEMBLY AND ASSEMBLY >

Remove the ring gear bearing adjusting shim (transfer case side) (1) and ring gear bearing outer race (transfer case side) (2) by tapping from the 2 cutouts ( on the transfer case.
 CAUTION:

Never damage transfer case.

- 8. Remove plug and gasket.
- Perform inspection after disassembly. Refer to <u>DLN-86, "Inspection"</u>.

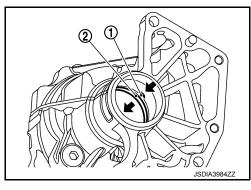

[TRANSFER: TY21C]

INFOID:0000000012856520

Α

В

DLN

Е


Н

Assembly

- Select the ring gear bearing adjusting shim (transfer case side). Refer to <u>DLN-78</u>, "Adjustment".
- 2. Install the selected ring gear bearing adjusting shim (transfer case side) and ring gear bearing outer race (transfer case side) using drift (A) (commercial service tool).

#### **CAUTION:**

- Never reuse ring gear bearing.
- Apply gear oil to the ring gear bearing.

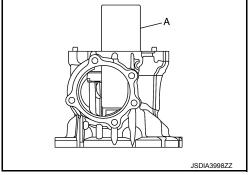

- Install baffle plate (1).
- Install ring gear shaft assembly. Refer to <u>DLN-72, "Assembly"</u>.
   CAUTION:

Protect transfer case oil seals beforehand from being damaged by the spline of ring gear shaft.

- Install drive pinion assembly. Refer to DLN-77, "Assembly".
- Install transfer cover to check and adjust each part. Refer to <u>DLN-68, "Assembly"</u>.

#### NOTE:

At this timing, O-ring installing to transfer cover is not necessary. Install O-ring after backlash and tooth contact are checked.

Check backlash, tooth contact, total preload and companion flange runout. Refer to <u>DLN-78, "Adjust-ment"</u>.

#### **CAUTION:**

Measure the total preload without oil seals of transfer cover and transfer case.

- Reinstall transfer cover for installing O-ring. Refer to <u>DLN-68, "Assembly"</u>.
- Install oil seals with drift (commercial service tool).

A : 24.8 mm (0.976 in) B : 10.3 mm (0.406 in)

#### **CAUTION:**

- When checking the total preload torque, measure it without the oil seal, then install the oil seal.
- · Never reuse the oil seal.
- · When installing, never incline oil seal.
- Apply multi-purpose grease onto oil seal lips, and gear oil onto the circumference of the oil seal.
- Never damage oil seals by spline of ring gear shaft.
- After installing oil seals to transfer case, remove wrapped vinyl from the spline of ring gear shaft.
- 11. Apply multi-purpose grease lightly and evenly onto an O-ring, and install it to the transfer case.

B I

N

M

0

Р

Revision: April 2016 **DLN-85** 2016 QX60

[TRANSFER: TY21C]

# < UNIT DISASSEMBLY AND ASSEMBLY >

# **CAUTION:**

- Never reuse O-ring.
- When installing O-ring, never use a tool.
- Never damage O-ring.

Inspection INFOID:000000012856521

# INSPECTION AFTER DISASSEMBLY

Check items below. If necessary, replace them with new ones.

Case

Check the bearing mounting surface for wear, cracks and damages.

# **SERVICE DATA AND SPECIFICATIONS (SDS)**

< SERVICE DATA AND SPECIFICATIONS (SDS)

# SERVICE DATA AND SPECIFICATIONS (SDS)

# SERVICE DATA AND SPECIFICATIONS (SDS)

# **General Specifications**

INFOID:0000000012856522

Α

В

DLN

Е

Н

[TRANSFER: TY21C]

 $\ell$  (US pt, Imp pt)

Applied model		VQ35DE
Applied Model		CVT
Transfer model		TY21C
Oil Type		MA-16 (United States and Canada) or MA-17 (Mexico)
Oil capacity (Approx.)		0.31(5/8 pt, 1/2 pt)
Gear ratio		0.404
Number of teeth	Ring gear	42
	Drive pinion	17

# **Preload Torque**

INFOID:0000000012856523

Unit: N·m (kg-m, in-lb)

	Item	Standard				
Pinion bearing preload		0.25 – 1.15 (0.03 – 0.11, 3.0 – 10.0)				
	With all oil seals	P1 + 0.7 – 1.0 (0.08 – 0.1, 7.0 – 8.0)				
Total preload	Without oil seals (for transfer cover and transfer case)	P1 + 0.5 – 0.8 (0.06 – 0.08, 5.0 – 7.0)				

# Backlash

Unit: mm (in)

INFOID:0000000012856524

Item	Standard
Ring gear to drive pinion	0.16 - 0.21 (0.0063 - 0.0083)

# Companion Flange Runout

INFOID:0000000012856525

Unit: mm (in)

Item	Limit
Companion flange face (inner side of the propeller shaft mounting bolt holes)	0.15 (0.0059)
Inside of companion flange (socket diameter)	0.1 (0.004)

Ν

0

# **PRECAUTIONS**

< PRECAUTION >

[REAR PROPELLER SHAFT: 3FCJ-CVJ]

# **PRECAUTION**

# **PRECAUTIONS**

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes dual stage front air bag modules. The SRS system may only deploy one front air bag, depending on the severity of a collision and whether the front passenger seat is occupied. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, it is recommended that all maintenance and repair be performed by an authorized NISSAN/INFINITI dealer.
- Improper repair, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### WARNING:

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery or batteries, and wait at least three minutes before performing any service.

# **PREPARATION**

< PREPARATION >

[REAR PROPELLER SHAFT: 3FCJ-CVJ]

# **PREPARATION**

# **PREPARATION**

**Commercial Service Tool** 

Tool name	Description
Power tool	Loosening nuts, screws and bolts

PIIB1407E

DLN

Α

В

INFOID:0000000012856527

Е

F

G

Н

J

K

L

M

Ν

0

# NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING [REAR PROPELLER SHAFT: 3FCJ-CVJ]

# SYMPTOM DIAGNOSIS

# NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

# **NVH Troubleshooting Chart**

INFOID:0000000012856528

Use the chart below to find the ca	use of the symptom. I	neces	ssary, ı	epair	or repl	ace th	ese pa	ırts.							
Reference		DLN-91, "Inspection"	DLN-94, "Inspection"	I	DLN-94, "Inspection"	I	DLN-94, "Inspection"	DLN-91, "Inspection"	NVH of REAR FINAL DRIVE in this section	NVH in FAX, RAX, FSU and RSU section	NVH in WT section	NVH in WT section	NVH in FAX and RAX section	NVH in BR section	NVH in ST section
Possible cause and SUSPECT	ED PARTS	Uneven rotating torque	Center bearing improper installation	Excessive center bearing axial end play	Center bearing mounting (insulator) cracks, damage or deterioration	Excessive joint angle	Rotation imbalance	Excessive runout	DIFFERENTIAL	AXLE AND SUSPENSION	TIRE	ROAD WHEEL	DRIVE SHAFT	BRAKE	STEERING
	Noise	×	×	×	×	×	×	×	×	×	×	×	×	×	×
Symptom	Shake		×			×				×	×	×	×	×	×
v: Applicable	Vibration	×	×	×	×	×	×	×		×	×		×		×

x: Applicable

# PROPELLER SHAFT ASSEMBLY

< BASIC INSPECTION >

[REAR PROPELLER SHAFT: 3FCJ-CVJ]

# **BASIC INSPECTION**

# PROPELLER SHAFT ASSEMBLY

Inspection B

### APPEARANCE AND NOISE INSPECTION

- Inspect the propeller shaft tube for dents or cracks. If damaged, replace the propeller shaft assembly.
- · Check bearings for noise or damage. If damaged, replace as necessary.


#### PROPELLER SHAFT VIBRATION

#### NOTE:

If vibration is present at high speed, check propeller shaft runout first, then check mounting between propeller shaft and companion flange.

 Measure the runout of the propeller shaft tube at several points by rotating the final drive companion flange with your hands.


> Propeller shaft runout : Refer to <u>DLN-96</u>, "<u>Propel-</u> ler Shaft Runout".

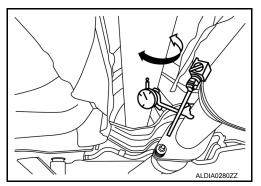

• Propeller shaft runout measuring point (Point "△").

Dimension (A) : 612.0 mm (24.09 in) Dimension (B) : 474.5 mm (18.68 in)

← : Front

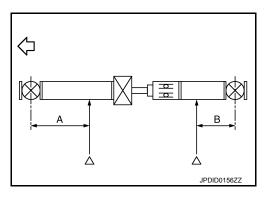

- 2. If the runout still exceeds specifications, disconnect the propeller shaft at the final drive companion flange; then rotate the companion flange 90°, 180°, 270° and reconnect propeller shaft.
- 3. Check the runout again. If the runout still exceeds specifications, replace the propeller shaft assembly.
- 4. After installation, check for vibration by driving the vehicle.

DLN

Α

Е

F

G

Н

1

Κ

M


Ν

0

# REMOVAL AND INSTALLATION

# REAR PROPELLER SHAFT

Exploded View

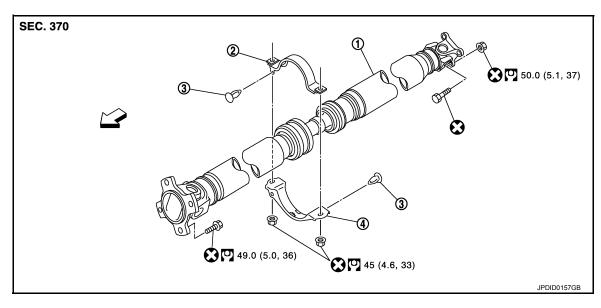

- 1. Propeller shaft assembly
- 2. Center bearing mounting bracket (upper)
- 3. Clip

- 4. Center bearing mounting bracket (lower)
- ∀
   : Vehicle front
- : Always replace after every disassembly.
- N·m (kg-m, ft-lb)

# Removal and Installation


INFOID:0000000012856531

# **REMOVAL**

- 1. Move the shift selector to the neutral position, and then release the parking brake.
- 2. Put matching marks onto propeller shaft flange yokes, final drive torsional damper, and transfer companion flange.

#### CAUTION

For matching marks, use paint. Do not damage propeller shaft flange yokes, final drive torsional damper or transfer companion flange.

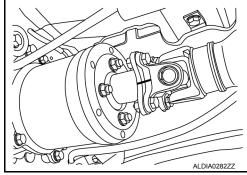

Remove front heat insulator.

# **REAR PROPELLER SHAFT**

# < REMOVAL AND INSTALLATION >


[REAR PROPELLER SHAFT: 3FCJ-CVJ]

4. Loosen nuts of center bearing mounting brackets (upper/lower).

<□ : Front

#### **CAUTION:**

Tighten nuts temporarily.

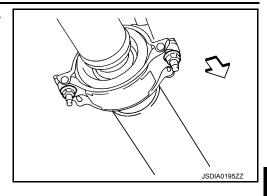

5. Remove propeller shaft assembly nuts and bolts.Refer to <a href="DLN-92">DLN-92</a>, "Exploded View".

6. Remove center bearing mounting bracket nuts.

7. Remove propeller shaft assembly.

### **CAUTION:**


If constant velocity joint was bent during propeller shaft assembly removal, installation, or transportation, its boot may be damaged. Wrap boot with shop cloth or rubber to protect boot from damage.

- 8. Remove clips in center bearing mounting bracket (upper/lower).
- 9. Perform inspection after removal. Refer to <u>DLN-94</u>, "Inspection".

# **INSTALLATION**


Installation is in the reverse order of removal.

- Install center bearing mounting bracket [upper (1)] with its arrow mark (A) facing forward.
- Adjust position of center bearing mounting bracket (upper), center bearing mounting bracket [lower (2)] sliding back and forth to prevent play in thrust direction of center bearing insulator (3). Install center bearing mounting bracket (upper/lower) to vehicle.
- Align matching marks to install propeller shaft assembly to final drive and transfer companion flanges.
- Perform inspection after installation. Refer to <u>DLN-94, "Inspection"</u>.

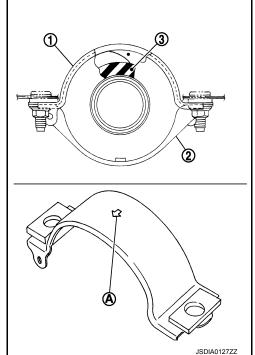

• After tightening the bolts and nuts to the specified torque, check that the bolts (3) on the flange side are tightened as shown.

- Final drive assembly (1)
- Propeller shaft assembly (2)

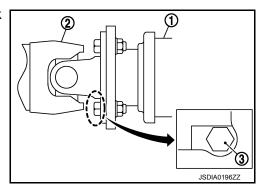

Α

В

C

DLN

Е

Н

K

L

M

Ν


0

Р

Revision: April 2016 **DLN-93** 2016 QX60

# [REAR PROPELLER SHAFT: 3FCJ-CVJ]

- If propeller shaft assembly or final drive assembly has been replaced, connect them as follows:
- Install propeller shaft (1) while aligning its matching mark (A) with the matching mark (B) of the final drive (2) on the joint as close as possible.
- Tighten bolts and nuts of propeller shaft and final drive to the specified torque.

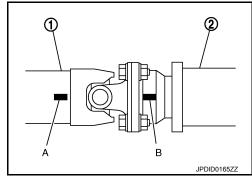

Inspection Infoid:000000012856532

## INSPECTION AFTER REMOVAL


#### **Appearance**

Check propeller shaft for bend and damage. If damage is detected, replace propeller shaft assembly.

# Propeller Shaft Runout

Check propeller shaft runout at measuring points with a dial indicator. If runout exceeds specifications, replace propeller shaft assembly.


Propeller shaft runout : Refer to <u>DLN-96, "Propeller Shaft Runout".</u>

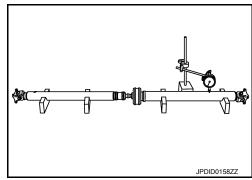

Propeller shaft runout measuring point (Point "△").

⟨
□ : Front

Dimension (A) : 612.0 mm (24.09 in) Dimension (B) : 474.5 mm (18.68 in)

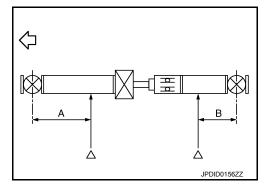


#### Journal Axial Play

As shown, while fixing yoke on one side, check axial play of joint. If it is outside the standard, replace propeller shaft assembly.

Journal axial play : Refer to <u>DLN-96, "Journal Axial Play"</u>.

#### **CAUTION:**

Do not disassemble joints.

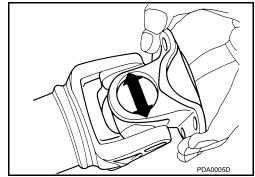

Center Bearing

Check center bearing for noise and damage. If noise or damage is detected, replace propeller shaft assembly.

# **REAR PROPELLER SHAFT**

< REMOVAL AND INSTALLATION >

[REAR PROPELLER SHAFT: 3FCJ-CVJ]

# **CAUTION:**

Do not disassemble center bearing.

**INSPECTION AFTER INSTALLATION** 

After assembly, perform a driving test to check propeller shaft vibration. If vibration occurs refer to <u>DLN-91</u>, <u>"Inspection"</u>.

С

Α

В

DLN

Е

F

G

Н

J

K

L

M

Ν

0

# **SERVICE DATA AND SPECIFICATIONS (SDS)**

< SERVICE DATA AND SPECIFICATIONS (SDS)

[REAR PROPELLER SHAFT: 3FCJ-CVJ]

0(0)

# SERVICE DATA AND SPECIFICATIONS (SDS)

# SERVICE DATA AND SPECIFICATIONS (SDS)

# **General Specifications**

Journal axial play

INFOID:0000000012856533

	Item	Standard	Office frame (iii)			
Journal Axial Play	/		INFOID:00000000128565:			
Propeller shaft runout		0.8 (0.031)				
	Item	Limit				
			Unit: mm (in			
Propeller Shaft R	unout		INFOID:000000001285653			
Chair Gater diameter	2nd	70 mm (2.76 in)				
Shaft outer diameter	1st	80 mm (3.15 in)				
Shaft length	2nd (EDJ joint center to spider)	946 mm (37.24 in)				
1st (Spider to EDJ joint center)		1,332 mm (52.44 in)				
Coupling method with rear	final drive	Flange type				
Coupling method with tran	sfer	Flange type				
(	3rd joint	Shell type				
Type of journal bearings (Non-disassembly type)	2nd joint	CVJ type				
1st joint		Shell type				
Number of joints		3				
Propeller shaft model		3FCJ-CVJ				
		CVT				
Applied model		VQ35DE				
		AWD				

# **PRECAUTIONS**

< PRECAUTION >

[REAR FINAL DRIVE: R145K1]

# **PRECAUTION**

# **PRECAUTIONS**

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes dual stage front air bag modules. The SRS system may only deploy one front air bag, depending on the severity of a collision and whether the front passenger seat is occupied. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, it is recommended that all maintenance and repair be performed by an authorized NISSAN/INFINITI dealer.
- Improper repair, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery or batteries, and wait at least three minutes before performing any service.

# Service Notice or Precautions for Rear Final Drive

- Check for the correct installation status prior to removal or disassembly. If matching marks are required, be certain they never interfere with the function of the parts when applied.
- Overhaul should be done in a clean work area, it is preferable to work in dustproof area.
- Before disassembly, using steam or white gasoline, completely remove sand and mud from the exterior of the unit, preventing them from entering into the unit during disassembly or assembly.
- Check appearance of the disassembled parts for damage, deformation, and unusual wear. Replace them with a new one if necessary.
- Seals should be replaced any time when the unit is disassembled.
- In principle, tighten bolts or nuts gradually in several steps working diagonally from inside to outside. If tightening sequence is specified, observe it.
- Clean and flush the parts sufficiently and blow-dry them.
- Be careful not to damage sliding surfaces and mating surfaces.
- When applying sealant, remove the old sealant from the mounting surface; then remove any moisture, oil, and foreign materials from the application and mounting surfaces.
- Always use shop paper for cleaning the inside of components.
- Avoid using cotton gloves or shop rags to prevent entering of lint.
- During assembly, observe the specified tightening torque, and apply new gear oil, petroleum jelly, or multipurpose grease as specified for each vehicle, if necessary.

Revision: April 2016 **DLN-97** 2016 QX60

DLN

Α

В

G

Н

1 1

ı

ı

J

INFOID:0000000012856537

K

L

M

N

N

0

[REAR FINAL DRIVE: R145K1]

# **PREPARATION**

# **PREPARATION**

# **Special Service Tools**

INFOID:0000000012856538

he actual shape of the tools may differ	r from those illustrated here.	
Tool number		Description
(TechMate No.)		
Tool name		
ST30720000		Installing front oil seal
(J-25405)		
Drift		
a: 77 mm (3.03 in) dia.		
b: 55 mm (2.185 in) dia.		
	ZZA0811D	
KV40105740		Installing side oil seal (cover side)
( – )	} <b>←</b> a <b>→</b>	
Drift	- b -+	
a: 57 mm (2.24 in) dia.		
b: 48 mm (1.89 in) dia.		
	ZZA0832D	
KV31103000		Installing side oil seal (carrier side)
(J-38982)		,
Drift	a	
a: 70 mm (2.76 in) dia.	b	
b: 59 mm (2.32 in) dia.		
c: 49 mm (1.93 in) dia.		
	S-NT107	
ST35325000		Installing side oil seal (carrier side)
( — )		,
Drift bar		
	C THE CONTRACT OF THE CONTRACT	
	S-NT090	
	2.11000	

**Commercial Service Tools** 

INFOID:0000000012856539

# **PREPARATION**

# < PREPARATION >

# [REAR FINAL DRIVE: R145K1]

	Description	
	Removing and installing torsional damper mounting nut	_
N1771		
	Loosening nuts, screws and bolts	I
PIIB1407E		
		Removing and installing torsional damper mounting nut  Loosening nuts, screws and bolts

F

G

Н

J

Κ

L

M


Ν

0

# SYSTEM DESCRIPTION

# STRUCTURE AND OPERATION

Sectional View

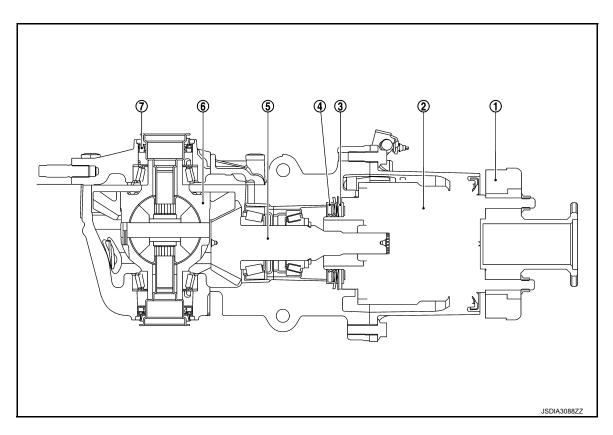

- 1. Torsional damper
- 4. Front oil seal
- 7. Side oil seal

- 2. Electric controlled coupling
- 5. Drive pinion

- 3. Wave washer
- Differential case

# **Electric Controlled Coupling**

INFOID:0000000012856541

The electric controlled coupling operates as the AWD system. For the operation, refer to <u>DLN-12</u>, "<u>Operation Description"</u>.

# ADDITIONAL SERVICE WHEN REPLACING REAR FINAL DRIVE ASSEMBLY < BASIC INSPECTION > [REAR FINAL DRIVE: R145K1]

# **BASIC INSPECTION**

# ADDITIONAL SERVICE WHEN REPLACING REAR FINAL DRIVE ASSEMBLY

Description INFOID:000000012856542

When replacing rear final drive assembly, unit characteristics writing is required.

Work Procedure

# 1. PERFORM WRITING UNIT CHARACTERISTICS

Perform writing unit characteristics of electric controlled coupling.

>> Refer to <u>DLN-37</u>, "Work Procedure".

DLN

Α

В

C

Е

F

Н

J

Κ

L

Ν

M

0

# ADDITIONAL SERVICE WHEN REPLACING ELECTRIC CONTROLLED COUPLING

< BASIC INSPECTION >

[REAR FINAL DRIVE: R145K1]

# ADDITIONAL SERVICE WHEN REPLACING ELECTRIC CONTROLLED COUPLING

Description INFOID:000000012856544

When replacing electric controlled coupling, unit characteristics writing is required.

Work Procedure

1. PERFORM WRITING UNIT CHARACTERISTICS

Perform writing unit characteristics of electric controlled coupling.

>> Refer to <u>DLN-37</u>, "Work Procedure".

# NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

[REAR FINAL DRIVE: R145K1]

Α

В

С

DLN

Е

F

Н

K

M

Ν

0

Р

INFOID:0000000012856546

< SYMPTOM DIAGNOSIS >

# SYMPTOM DIAGNOSIS

# NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

# **NVH Troubleshooting Chart**

Use the chart below to find the cause of the symptom. If necessary, repair or replace these parts.

Reference		ı	ı	ı	1	DLN-123, "Adjustment"	DLN-104, "Inspection"	NVH of REAR PROPELLER SHAFT in this section	NVH in FAX, RAX, FSU and RSU sections	NVH in WT section	NVH in WT section	NVH in FAX and RAX section	NVH in BR section	NVH in ST section
Possible cause and SUSPECTED	) PARTS	Gear tooth rough	Gear contact improper	Tooth surfaces worn	Backlash incorrect	Companion flange excessive runout	Gear oil improper	PROPELLER SHAFT	AXLE AND SUSPENSION	TIRE	ROAD WHEEL	DRIVE SHAFT	BRAKE	STEERING
Symptom	Noise	×	×	×	×	×	×	×	×	×	×	×	×	×

 $<sup>\</sup>times$ : Applicable

Revision: April 2016 **DLN-103** 2016 QX60

[REAR FINAL DRIVE: R145K1]

# PERIODIC MAINTENANCE

# REAR DIFFERENTIAL GEAR OIL

Inspection INFOID:000000012856547

#### REAR DIFFERENTIAL GEAR OIL LEAKS

Check that rear differential gear oil is not leaking from final drive assembly or around it.

### REAR DIFFERENTIAL GEAR OIL LEVEL

#### **CAUTION:**

Do not start engine while checking rear differential gear oil level.


1. Remove and discard filler plug (1).

**CAUTION:** 

Do not reuse filler plug.



- Rear differential gear oil level should be level with the bottom of filler plug hole. Add rear differential gear oil if necessary. Refer to MA-16, "FOR USA AND CANADA: Fluids and Lubricants" (USA and CANADA) or MA-17, "FOR MEXICO: Fluids and Lubricants" (MEXICO).
- 3. Install filler plug (1) and tighten to specified torque. Refer to DLN-120, "Exploded View".

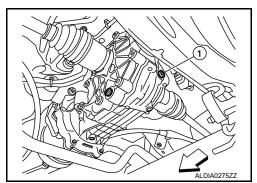

Draining INFOID:000000012856548

#### **CAUTION:**

Do not start engine while checking rear differential gear oil level.


1. Remove and discard drain plug (1), and drain rear differential gear oil.

#### **CAUTION:**

Do not reuse drain plug.



2. Install drain plug (1) and tighten to specified torque. Refer to <u>DLN-120, "Exploded View"</u>.

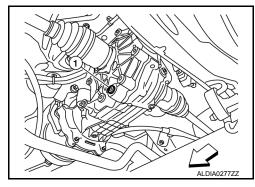

Refilling INFOID:000000012856549

#### **CAUTION:**

Do not start engine while checking rear differential gear oil level.


1. Remove and discard filler plug (1).

#### **CAUTION:**

Do not reuse filler plug.

<□ : Front

Fill with new rear differential gear oil to the specified level near the filler plug hole.

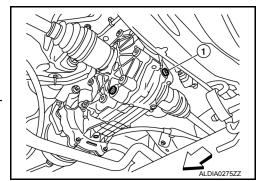

# **REAR DIFFERENTIAL GEAR OIL**

<	PERIO	א אוכ	1ΔΙΝΙ	ΓΕΝΔΝ	CF >

[REAR FINAL DRIVE: R145K1]

	Rear differential gear oil	: Refer to MA-16, "FOR		Α
	grade and viscosity	USA AND CANADA : Flu-		
		ids and Lubricants" (USA		
		and CANADA) or <u>MA-17,</u>		В
		"FOR MEXICO: Fluids and		
		<u>Lubricants"</u> (MEXICO).		
	Rear differential gear oil	: Refer to DLN-125, "Gen-		С
	capacity	eral Specification".		
2	Install filler plug (1) and tighten	to appointed torque Defer to DLN 420 "Exploded View"	Ī	

3. Install filler plug (1) and tighten to specified torque. Refer to <a href="DLN-120">DLN-120</a>, "Exploded View".

DLN

Е

F

G

Н

K

L

M

Ν


0

[REAR FINAL DRIVE: R145K1]

# REMOVAL AND INSTALLATION

# TORSIONAL DAMPER

Exploded View

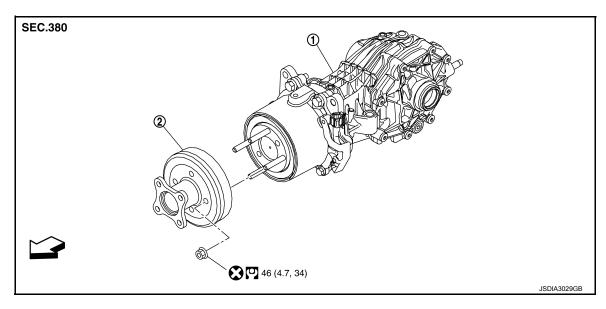

- 1. Final drive assembly
- 2. Torsional damper

- : Vehicle front
- : Always replace after every disassembly.
- : N·m (kg-m, ft-lb)


# Removal and Installation

INFOID:0000000012856551

### **REMOVAL**

- Remove rear propeller shaft from the torsional damper, and support the end of the propeller shaft. Refer to DLN-92, "Exploded View".
- 2. Remove torsional damper lock nuts ( ), using suitable tool.

<□ : Front

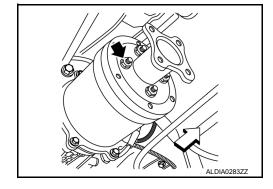

3. Remove torsional damper.

# **INSTALLATION**

Install torsional damper. (When torsional damper has been reused.)
 CAUTION:

Clean the mounting surface.

2. Install torsional damper. (When torsional damper has been replaced.)

Degrease the mounting surface of electric controlled coupling, according to the following instruction.


### TORSIONAL DAMPER

#### < REMOVAL AND INSTALLATION >

[REAR FINAL DRIVE: R145K1]

 Spray alcohol on a cotton cloth four times per part. CAUTION:


Always use a new cotton cloth.

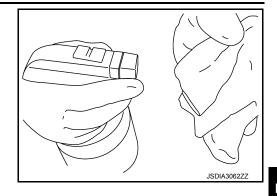

2. Wipe the mounting surface of electric controlled coupling five times.

**CAUTION:** 


Complete the work within 180 seconds to prevent alcohol from evaporating.

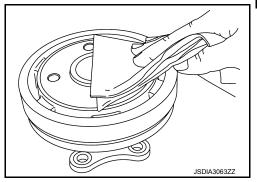

Install torsional damper lock nuts, using suitable tool, and tighten to the specified torque.

**CAUTION:** 


Do not reuse torsional damper lock nuts.

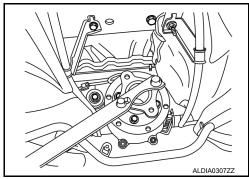


- Check torsional damper runout as follows:
  - Rotate torsional damper and check for runout on the torsional damper face (inner side of the bolt holes) using a suitable tool (1). Also check for runout on the inner side of the torsional damper using a suitable tool (2).

Torsional damper runout : Refer to <u>DLN-125, "Companion Flange Runout"</u>.

- If the runout value is outside the runout limit, follow the procedure below to adjust.
- Check for runout while changing the phase between the torsional damper and electric controlled coupling by 90° step, and search for the position where the runout value is the minimum.

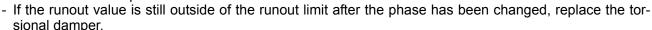

- If the runout value is still outside of the runout limit after torsional damper has been replaced, possible cause will be a damaged electric controlled coupling. Repair as necessary. Refer to <u>DLN-106</u>. "Removal and Installation".
- Install rear propeller shaft. Refer to <u>DLN-92, "Exploded View"</u>.

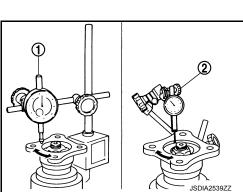

Α

В

DLN

Ε

H

Н

J

K

L

M


N

IN

0

# SIDE OIL SEAL

Exploded View

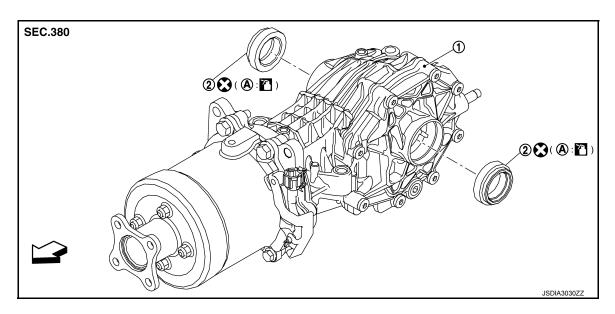

- 1. Final drive assembly
- 2. Side oil seal

- A. Oil seal lip
- ⟨□: Vehicle front
- : Always replace after every disassembly.
- : Apply gear oil.

# Removal and Installation


INFOID:0000000012856553

### **REMOVAL**

- 1. Remove rear drive shaft (LH) or (RH) as necessary. Refer to RAX-9, "Removal and Installation".
- Remove side oil seal (1), using suitable tool.

Be careful not to damage gear carrier and side cover.

⟨⇒ : Front

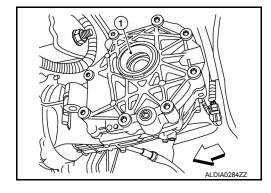

### **INSTALLATION**

## SIDE OIL SEAL

## < REMOVAL AND INSTALLATION >


[REAR FINAL DRIVE: R145K1]

1. Install side oil seal (cover side) until it becomes flush with the carrier end, using Tool (A).

Tool number (A) : KV40105740 ( — )

#### **CAUTION:**

- · Do not reuse side oil seal.
- When installing, do not incline side oil seals.
- · Apply rear differential gear oil onto side oil seal lip.

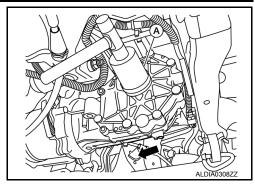


2. Install side oil seal (carrier side) until it becomes flush with the carrier end, using Tool (A) and Tool (B).

Tool number (A) : ST35325000 ( — )
Tool number (B) : KV31103000 (J-38982)

#### **CAUTION:**

- · Do not reuse side oil seal.
- · When installing, do not incline side oil seals.
- Apply rear differential gear oil onto side oil seal lip.

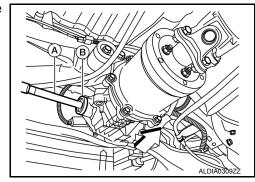

- 3. Install rear drive shaft (LH) or (RH) as necessary. Refer to RAX-9, "Removal and Installation".
- 4. Check rear differential gear oil level and check for rear differential gear oil leaks. Refer to <u>DLN-104.</u> "Inspection".

Α

В

U

DLN

Е

F

G

Н

K

L

N/I


Ν

0

[REAR FINAL DRIVE: R145K1]

## **ELECTRIC CONTROLLED COUPLING**

Exploded View

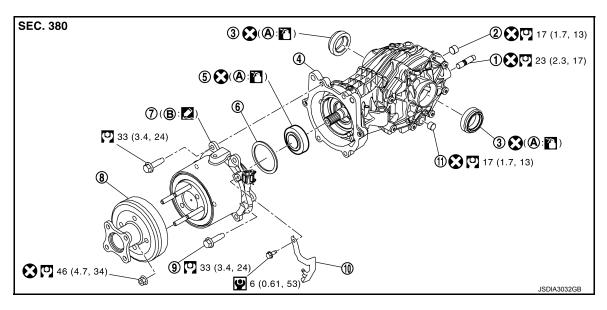

- 1. Stud bolt
- 4. Final drive assembly
- 7. Electric controlled coupling
- 10. Harness bracket
- B. Final drive mounting face
- 2. Filler plug
- Front oil seal
- 8. Torsional damper
- 11. Drain plug

- 3. Side oil seal
- 6. Wave washer
- Reamer bolt
- A. Oil seal lip

## Removal and Installation

NOTE:

When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.

#### **CAUTION:**


When replacing rear final drive assembly, perform writing unit characteristics. Refer to <u>DLN-37</u>, <u>"Description"</u>.

#### **REMOVAL**

- 1. Move the shift selector to the neutral position, and then release the parking brake.
- 2. Drain rear differential gear oil. Refer to DLN-104, "Draining".
- 3. Remove rear propeller shaft from the torsional damper, and support the end of the propeller shaft. Refer to <a href="DLN-92">DLN-92</a>, "Exploded View".

#### **CAUTION:**

For matching marks, use paint. Do not damage propeller shaft flange yokes, final drive torsional damper or transfer companion flange.

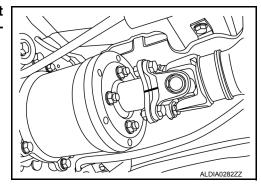


INFOID:0000000012856555

## **ELECTRIC CONTROLLED COUPLING**

#### < REMOVAL AND INSTALLATION >

[REAR FINAL DRIVE: R145K1]

4. Remove the electric controlled coupling breather hose (1).

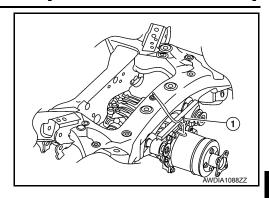

- Disconnect the electric controlled coupling harness connector and unclip harness from harness bracket.
- 6. Remove the 6 bolts from the electric controlled coupling.
- 7. Remove the electric controlled coupling.

#### **CAUTION:**

Be careful that the wave washer does not fall out or get damaged when removing the electric controlled coupling.


#### **INSTALLATION**

Installation is in the reverse order of removal.


#### **CAUTION:**

- Do not reuse hose clamp and breather connector.
- Make sure there are no pinched or restricted areas on the breather hose caused by bending or winding when installing it.
- Install the hose clamp at the final drive side, with the tab facing to the vehicle front.
- Install the hose clamp at the suspension member side, with the tab facing downward.
- Use Genuine Silicone RTV or an equivalent. Refer to GI-22, "Recommended Chemical Products and Sealants".
- Apply liquid gasket (1) to mating surface of coupling cover.
   Use Genuine Silicone RTV or equivalent. Refer to GI-22, "Recommended Chemical Products and Sealants".
  - **CAUTION:**

• The width of sealant bend is approximately 3 mm (0.012 in).

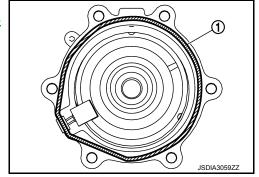

- Install electric controlled coupling to spline of drive pinion inside final drive assembly.
   CAUTION:
  - Align the pin (A) on electric controlled coupling with the groove (B) of final drive assembly.
  - · Be careful not to damage center oil seal.

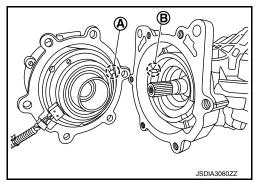

С

Α

В

DLN

Е

F

Н

. J

K

L

/

Ν

0


## **ELECTRIC CONTROLLED COUPLING**

#### < REMOVAL AND INSTALLATION >


[REAR FINAL DRIVE: R145K1]

Press the electric controlled coupling pin to check that it is positioned in the groove of the final drive assembly as shown.
 NOTE:

If the pin is properly positioned in the groove, then the electric controlled coupling can be pressed into position by the same amount of flection of the wave washer.

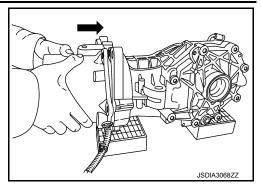

- Temporarily tighten reamer bolts (1) to the positions shown.
   CAUTION:
  - Do not use tools. Always tighten by hand.
  - If reamer bolts cannot be tightened all the way by hand, the electric controlled coupling pin may not be positioned in the groove of the final drive assembly. In this case, remove electric controlled coupling and reinstall it.



- Install electric controlled coupling breather hose at the coupling side to the metal connector (3) of the coupling (2) all the way to the point shown by the solid arrow (←).

<□ : Front


- Install electric controlled coupling breather hose at the suspension member side until dimension (A) as shown.


(A) : 15 mm (0.59 in)

- If resin connector of the electric controlled coupling (1) and metal connector (2) are removed, install them as shown.
- Install the resin connector at the insertion side to the suspension member, facing to the vehicle front.
- Install the metal connector to the coupling cover, facing to the vehicle front.

#### **CAUTION:**

Do not reuse breather connector and hose clip.

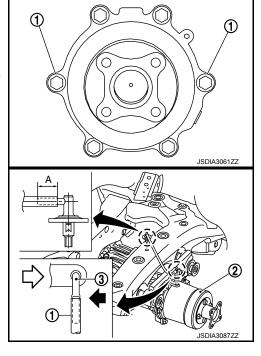

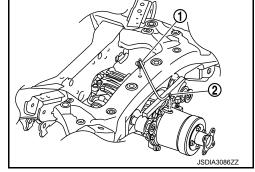


• Remove the old sealant from mating surfaces using a suitable tool before installing.

## [REAR FINAL DRIVE: R145K1]

## FRONT OIL SEAL

Exploded View

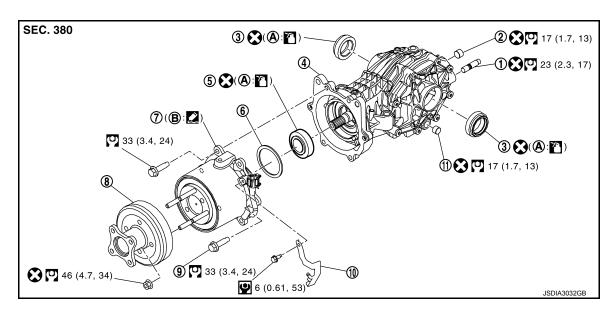


- 1. Stud bolt
- 4. Final drive assembly
- 7. Electric controlled coupling
- 10. Harness bracket
- B. Final drive mounting face
- 2. Filler plug
- Front oil seal
- 8. Torsional damper
- 11. Drain plug

- 3. Side oil seal
- 6. Wave washer
- 9. Reamer bolt
- A. Oil seal lip

## Removal and Installation

**REMOVAL** 

- 1. Drain rear differential gear oil. Refer to <a href="DLN-104">DLN-104</a>, "Draining".
- 2. Remove the rear propeller shaft from the rear final drive and support the rear propeller shaft with suitable wire. Refer to DLN-92, "Removal and Installation".
- 3. Remove torsional damper nuts using suitable tool (A) and remove torsional damper (if necessary).

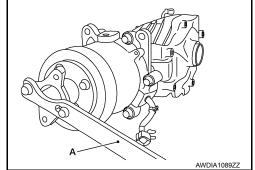

- 4. Remove the electric controlled coupling. Refer to <u>DLN-110</u>, "Removal and Installation".
- 5. Remove wave washer.

В

Α

DLN

Е

F

G

Н

INFOID:0000000012856557

N

M

K


L

#### [REAR FINAL DRIVE: R145K1]

Remove front oil seal (1) from final drive assembly, using a suitable tool.

#### **CAUTION:**

Do not damage final drive assembly.

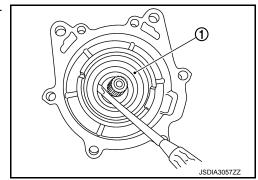

#### INSTALLATION

Install drain plug.

#### **CAUTION:**


Do not reuse drain plug.

2. Using a Tool (A) install front oil seal (1) as shown.

Tool number : ST30720000 (J-25405)

#### **CAUTION:**

- · Do not reuse front oil seal.
- When installing, do not incline front oil seal.
- Apply rear differential gear oil onto front oil seal lip.
- 3. Install wave washer to electric controlled coupling.

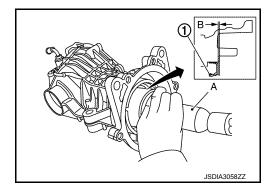


4. Apply liquid gasket (1) to mating surface of coupling cover.


Use Genuine Silicone RTV or equivalent. Refer to GI-22, "Recommended Chemical Products and Sealants".

#### **CAUTION:**

- Remove old gasket adhering to the surfaces. Also remove any moisture, rear differential gear oil, or foreign material adhering to the surfaces.
- The width of sealant bend is approximately 3 mm (0.012 in).

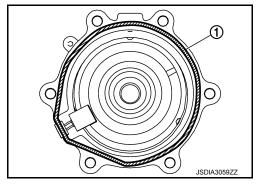

- Install electric controlled coupling to spline of drive pinion inside final drive assembly. CAUTION:
  - Align the pin (A) on electric controlled coupling with the groove (B) of final drive assembly.
  - Be careful not to damage front oil seal.

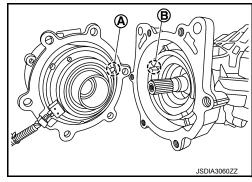


## FRONT OIL SEAL

#### < REMOVAL AND INSTALLATION >

#### [REAR FINAL DRIVE: R145K1]

Press the electric controlled coupling pin to check that it is positioned in the groove of the final drive assembly as shown.NOTE:

If the pin is properly positioned in the groove, then the electric controlled coupling can be pressed into position by the same amount of flection of the wave washer.

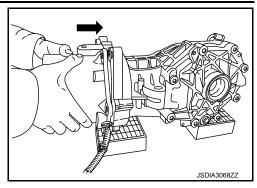


①

- Temporarily tighten reamer bolts (1) to the positions shown.CAUTION:
  - · Do not use tools. Always tighten by hand.
  - If reamer bolts cannot be tightened all the way by hand, the electric controlled coupling pin may not be positioned in the groove of the final drive assembly. In this case, remove electric controlled coupling and reinstall it.
- 8. Tighten reamer bolts and coupling cover bolts to the specified torque.
- 9. Install harness bracket, and tighten bolts to the specified torque.
- 10. Install torsional damper. (When torsional damper has been replaced.)

Degrease the surface of electric controlled coupling, according to the following instruction.


1. Spray alcohol on a cotton cloth four times per part.

Always use a new cotton cloth.

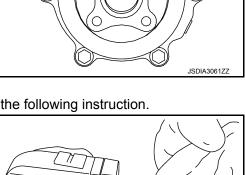

2. Wipe the surface of electric controlled coupling five times. **CAUTION:** 

Complete the work within 180 seconds to prevent alcohol from evaporating.

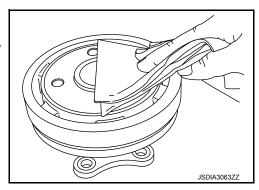

Α

В

DLN

Е

1

F

G

Н

J

K

JSDIA3062ZZ

L

M

Ν

 $\cup$ 

Ρ

## FRONT OIL SEAL


## < REMOVAL AND INSTALLATION >

[REAR FINAL DRIVE: R145K1]

 Install torsional damper nut, using suitable tool (1) and tighten to the specified torque.
 CAUTION:

## Do not reuse torsional damper nut.

- 11. Check companion flange runout. Refer to <u>DLN-125, "Companion Flange Runout"</u>.
- 12. When replacing electric controlled coupling, perform writing unit characteristics after installing final drive assembly to the vehicle. Refer to <u>DLN-102</u>, "<u>Description</u>".

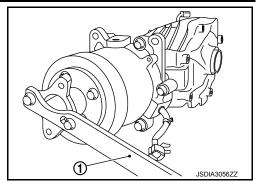

Α

DLN

Е

Н

K

Ν

0


Р

INFOID:0000000012856559

# UNIT REMOVAL AND INSTALLATION

## REAR FINAL DRIVE ASSEMBLY

Exploded View

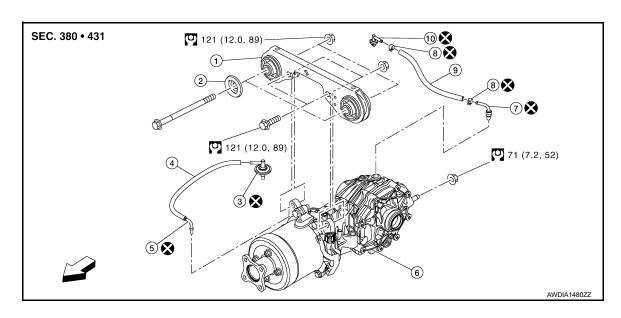

- 1. Final drive mounting bracket
- 4. Breather hose
- 7. Breather tube
- 10. Breather

- 2. Washer
- 5. Breather tube
- 3. Hose clamp

- B. Breather
- 6. Final drive assembly
- 9. Breather hose

- ∀
   : Vehicle front
- : Always replace after every disassembly.
- : N·m (kg-m, ft-lb)

## Removal and Installation

NOTE:


When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.

REMOVAL

- 1. Drain rear differential gear oil. Refer to <a href="DLN-104">DLN-104</a>, "Draining".
- 2. Remove the rear propeller shaft from the final drive assembly and support the rear propeller shaft with suitable wire. Refer to <u>DLN-92</u>, "<u>Removal and Installation</u>".
- 3. Remove the vehicle spare tire.
- 4. Remove the rear drive shafts. Refer to <a href="RAX-9">RAX-9</a>, "Removal and Installation".
- 5. Remove rear stabilizer bar. Refer to RSU-15, "Removal and Installation".
- Remove AWD harness bracket.
- Disconnect AWD harness connector and unclip harness from the final drive mounting bracket.
- 8. Remove breather hose and electric controlled coupling breather hose.
- 9. Support final drive assembly with a suitable jack.

Revision: April 2016 **DLN-117** 2016 QX60

10. Remove final drive bolts (←).

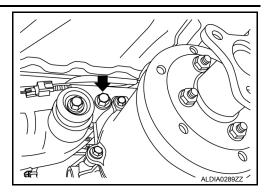


11. Remove rear final drive nut (←) at rear suspension member, and remove final drive from vehicle.

#### NOTE:

If it is necessary to remove the final drive mounting bracket, the fuel tank must be removed first. Refer to <u>FL-13</u>, "Removal and <u>Installation"</u>.

#### **CAUTION:**

Secure final drive assembly to a suitable jack while removing it.

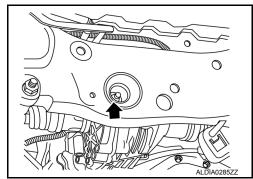

#### INSTALLATION

Installation is in the reverse order of removal.

• Install the breather hose (1) to breather connector until dimension (A) shown as follows.


(A) : 20 mm (0.79 in) Final drive side

: 20.7 mm (0.815 in) Suspension member side

#### **CAUTION:**

- Do not reuse hose clamp and breather connector.
- Make sure there are no pinched or restricted areas on the breather hose caused by bending or winding when installing it.
- Install the hose clamp at the final drive side, with the tab facing to the vehicle front.
- Install the hose clamp at the suspension member side, with the tab facing downward.
- If remove resin connector (2) and metal connector (3), install breather hose (1), resin connector and metal connector as shown.
- For installation, insert resin connector into the square hole of rear suspension. Install metal connector to rear cover with aiming painted mark (A) to the front of vehicle.



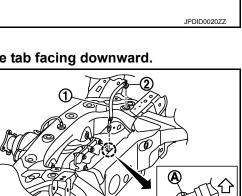

JPDID015977

## < UNIT REMOVAL AND INSTALLATION >

## [REAR FINAL DRIVE: R145K1]

- Install the electric controlled coupling breather hose (1) as shown in the figure.
- Install electric controlled coupling breather hose at the coupling side to the metal connector (3) of the coupling (2) all the way to the point shown by the solid arrow (←).




- Install electric controlled coupling breather hose at the suspension member side until dimension (A) shown as follows.

## (A) : 15 mm (0.59 in)

- If remove resin connector of the electric controlled coupling (1) and metal connector (2), install them as shown.
- Install the resin connector at the insertion side to the suspension member, facing to the vehicle front.
- Install the metal connector to the coupling cover, facing to the vehicle front.

#### **CAUTION:**

Do not reuse breather connector and hose clip.

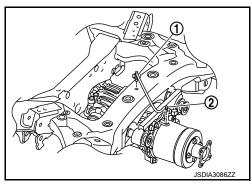


If remove plug (1) and (2), install them as shown.

⟨⇒ : Front

#### **CAUTION:**

#### Do not reuse breather connector and hose clip.

- When oil leaks while removing final drive assembly, check oil level after the installation. Refer to <u>DLN-104</u>, "Inspection".
- When replacing rear final drive assembly, perform writing unit characteristics. Refer to <u>DLN-101</u>, "<u>Description</u>".

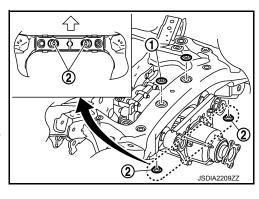

Α

В

C

DLN

Е

Г

Н

J

L

M


Ν

0

# **UNIT DISASSEMBLY AND ASSEMBLY**

## REAR FINAL DRIVE ASSEMBLY

Exploded View

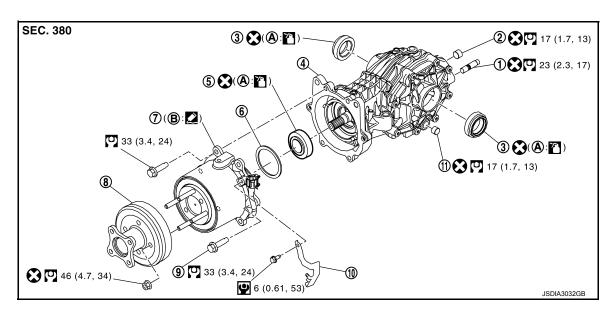


- 1. Stud bolt
- 4. Final drive assembly
- 7. Electric controlled coupling
- 10. Harness bracket
- A. Oil seal lip

- 2. Filler plug
- 5. Front oil seal
- 8. Torsional damper
- 11. Drain plug
- B. Final drive mounting face
- Side oil seal
- 6. Wave washer
- Reamer bolt

- : Always replace after every disassembly.
- : N·m (kg-m, ft-lb)
- : N·m (kg-m, in-lb)
- T: Apply gear oil.
- Apply Genuine Silicone RTV or equivalent. Refer to GI-22, "Recommended Chemical Products and Sealants".

Disassembly

- 1. Remove torsional damper mounting nut, using a flange wrench (1) (commercial service tool).
- 2. Remove torsional damper.
- 3. Remove harness bracket.
- 4. Remove electric controlled coupling.
- 5. Remove wave washer.

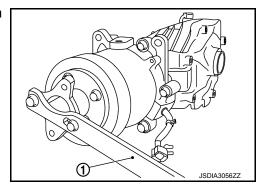

INFOID:0000000012856561

## < UNIT DISASSEMBLY AND ASSEMBLY >

#### [REAR FINAL DRIVE: R145K1]

Α

В

DLN

Е

F

Н

M

Ν

0

Р


JSDIA3067ZZ

Remove front oil seal (1) from final drive assembly, using a oil seal remover.

#### **CAUTION:**

Never damage final drive assembly.


Remove drain plug and filler plug, if necessary.

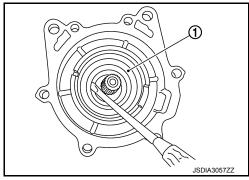

8. Remove side oil seal (1), using a oil seal remover. CAUTION:

Never damage final drive assembly and side cover.

9. Remove stud bolt from side cover, if necessary.

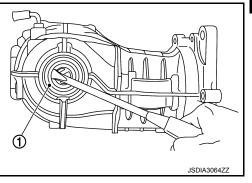


Assembly INFOID:0000000012856562

Install stud bolt to side cover.

#### **CAUTION:**

Never reuse stud bolt.

- 2. Install side oil seal (cover side) until it becomes flush with the carrier end, using the drift (A) [SST: KV40105740 ( **CAUTION:** 
  - Never reuse oil seal.
  - · When installing, do not incline oil seals.
  - · Apply gear oil onto side oil seal lip.

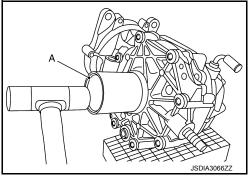

3. Install side oil seal (carrier side) until it becomes flush with the carrier end, using the drift (A) and drift bar (B).

A : Drift [SST: KV31103000 (J-38982)]

B : Drift bar [SST: ST35325000 (

#### **CAUTION:**

- · Never reuse oil seal.
- · When installing, do not incline oil seals.
- · Apply gear oil onto side oil seal lip.
- 4. Install drain plug.


#### **CAUTION:**

Never reuse drain plug.

Install filler plug.

#### **CAUTION:**

Never reuse filler plug.

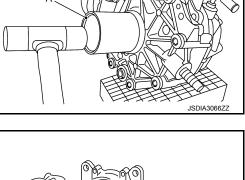

**DLN-121** Revision: April 2016 2016 QX60

## < UNIT DISASSEMBLY AND ASSEMBLY >


#### [REAR FINAL DRIVE: R145K1]

6. Using the drift (A) [SST: ST30720000 (J-25405)], install front oil seal (1) as shown in the figure.

B : 0.5 - 1.2 mm (0.020 - 0.047 in)

#### **CAUTION:**


- Never reuse oil seal.
- When installing, never incline oil seal.
- Apply gear oil onto side oil seal lip.
- 7. Install wave washer to electric controlled coupling.

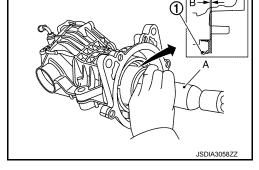


8. Apply liquid gasket (1) to mating surface of coupling cover.
Use Genuine Silicone RTV or equivalent. Refer to GI-22, "Recommended Chemical Products and Sealants".

#### **CAUTION:**

- Remove old gasket adhering to the mounting surfaces.
   Also remove any moisture, oil, or foreign material adhering to the mounting surfaces.
- The width of sealant bend is approximately 3 mm (0.012 in).

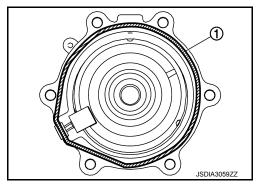


- Install electric controlled coupling to spline of drive pinion inside final drive assembly.
  CAUTION:
  - Align the pin (A) on electric controlled coupling with the groove (B) of final drive assembly.
  - Be careful not to damage center oil seal.

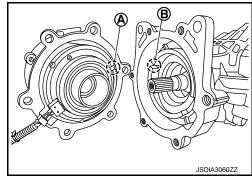

Press the electric controlled coupling pin to check that it is positioned in the groove of the final drive assembly as shown in the figure.

#### NOTE:

If the pin is properly positioned in the groove, then the electric controlled coupling can be pressed by the same amount of flection of the wave washer.

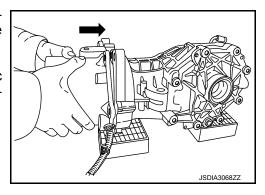

## < UNIT DISASSEMBLY AND ASSEMBLY >

#### [REAR FINAL DRIVE: R145K1]

①

11. Temporarily tighten reamer bolts (1) to the positions shown in the figure.

## **CAUTION:**

- Never use tools. Always tighten by hand.
- If reamer bolts cannot be tightened all the way by hand, the electric controlled coupling pin may not be positioned in the groove of the final drive assembly. In this case, remove electric controlled coupling and reinstall it.
- 12. Tighten reamer bolts and coupling cover mounting bolts to the specified torque.
- 13. Install harness bracket, and tighten bolts to the specified torque.
- 14. Install torsional damper. (When torsional damper has been reused.)

#### **CAUTION:**

Clean the mounting surface.

Install torsional damper. (When torsional damper has been replaced.)
 Degrease the mounting surface of electric controlled coupling, according to the following instruction.

 Spray alcohol on a cotton cloth four times per part. CAUTION:


Always use a new cotton cloth.



2. Wipe the mounting surface of electric controlled coupling five times.

#### **CAUTION:**


Complete the work within 180 seconds to prevent alcohol from evaporating.

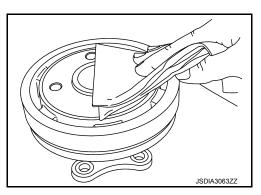

16. Install torsional damper mounting nut, using flange wrench (1) (commercial service tool) and tighten to the specified torque.
CAUTION:

#### Never reuse torsional damper mounting nut.

- Check companion flange runout. Refer to <u>DLN-123, "Adjust-ment"</u>.
- 18. When oil leaks while removing, check oil level after installation. Refer to <u>DLN-104</u>, "Inspection".
- 19. When replacing electric controlled coupling, perform writing unit characteristics after installing final drive assembly to the vehicle. Refer to <u>DLN-102</u>, "<u>Description</u>".

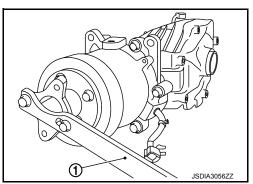

Adjustment INFOID:000000012856563

COMPANION FLANGE RUNOUT

Α

1

JSDIA3061ZZ

В

DLN

Е

F

G

Н

K

L

M

Ν

0

Р

Revision: April 2016 **DLN-123** 2016 QX60

#### < UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R145K1]

Check for companion flange runout as follows:

- For companion flange face, fit a dial indicator (1) onto the companion flange face (inner side of the propeller shaft mounting bolt holes). For inner side of the companion flange, fit a test indicator (2) to the inner side of companion flange (socket diameter).
- · Rotate companion flange to check for runout.

# Companion flange runout : Refer to <u>DLN-125, "Companion Flange Runout".</u>

- If the runout value is outside the runout limit, follow the procedure below to adjust.
- Check for runout while changing the phase between companion flange and drive pinion by 90° step, and search for the position where the runout is the minimum.
- If the runout value is still outside of the limit after the phase has been changed, replace companion flange.
- If the runout value is still outside of the limit after companion flange has been replaced, possible cause will be an electric controlled coupling.


Inspection INFOID:0000000128565664

## **OIL SEAL**

- · Whenever disassembled, replace.
- If wear, deterioration of adherence (sealing force lips), or damage is detected on the lips, replace them.

## **COMPANION FLANGE**

- · Clean up the disassembled parts.
- If any chipped mark [about 0.1 mm, (0.004 in)] or other damage on the contact sides of the lips of the companion flange is found, replace.

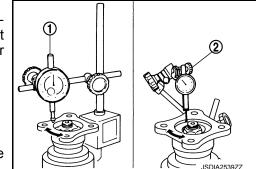

## **SERVICE DATA AND SPECIFICATIONS (SDS)**

< SERVICE DATA AND SPECIFICATIONS (SDS)

[REAR FINAL DRIVE: R145K1]

# SERVICE DATA AND SPECIFICATIONS (SDS)

# SERVICE DATA AND SPECIFICATIONS (SDS)

# **General Specification**

		AWD
Applied model		VQ35DE
		CVT
Final drive model		R145K1
Gear ratio		2.466
Number of teeth (Drive gear/Drive pinion)		37/15
Oil capacity (Approx.)	$\ell$ (US pt, Imp pt)	0.5 (1, 7/8)
Number of pinion gears		2

# Companion Flange Runout

INFOID:0000000012856566		
Unit: mm (in)		

INFOID:0000000012856565

Item	Limit
Companion flange face	0.12 (0.0047)
Inner side of the companion flange	0.27 (0.0106)

Revision: April 2016 **DLN-125** 2016 QX60

Н

Α

В

C

DLN

Е

K

L

Ν

M

0