

A
B
C

SECTION **WW**

WIPER & WASHER

CONTENTS

<p>PRECAUTION 4</p> <p>PRECAUTIONS 4</p> <p style="padding-left: 20px;">Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"4</p> <p style="padding-left: 20px;">Precaution for Procedure without Cowl Top Cover.....4</p> <p style="padding-left: 20px;">Precaution for Work4</p> <p>PREPARATION 6</p> <p>PREPARATION 6</p> <p style="padding-left: 20px;">Special Service Tools6</p> <p>SYSTEM DESCRIPTION 7</p> <p>COMPONENT PARTS 7</p> <p>FRONT WIPER AND WASHER SYSTEM (WITHOUT RAIN SENSOR)7</p> <p style="padding-left: 20px;">FRONT WIPER AND WASHER SYSTEM (WITHOUT RAIN SENSOR) : Component Parts Location7</p> <p style="padding-left: 20px;">FRONT WIPER AND WASHER SYSTEM (WITHOUT RAIN SENSOR) : Component Description7</p> <p>FRONT WIPER AND WASHER SYSTEM (WITH RAIN SENSOR)8</p> <p style="padding-left: 20px;">FRONT WIPER AND WASHER SYSTEM (WITH RAIN SENSOR) : Component Parts Location8</p> <p style="padding-left: 20px;">FRONT WIPER AND WASHER SYSTEM (WITH RAIN SENSOR) : Component Description9</p> <p>REAR WIPER AND WASHER SYSTEM9</p> <p style="padding-left: 20px;">REAR WIPER AND WASHER SYSTEM : Component Parts Location 10</p> <p style="padding-left: 20px;">REAR WIPER AND WASHER SYSTEM : Component Description 10</p> <p>SYSTEM11</p> <p>FRONT WIPER AND WASHER SYSTEM (WITHOUT RAIN SENSOR)11</p>	<p style="text-align: right;">D E F G H I J K L M N O P</p> <p style="padding-left: 20px;">FRONT WIPER AND WASHER SYSTEM (WITHOUT RAIN SENSOR) : System Diagram11</p> <p style="padding-left: 20px;">FRONT WIPER AND WASHER SYSTEM (WITHOUT RAIN SENSOR) : System Description11</p> <p style="padding-left: 20px;">FRONT WIPER AND WASHER SYSTEM (WITHOUT RAIN SENSOR) : Fail-Safe13</p> <p>FRONT WIPER AND WASHER SYSTEM (WITH RAIN SENSOR)13</p> <p style="padding-left: 20px;">FRONT WIPER AND WASHER SYSTEM (WITH RAIN SENSOR) : System Diagram14</p> <p style="padding-left: 20px;">FRONT WIPER AND WASHER SYSTEM (WITH RAIN SENSOR) : System Description14</p> <p style="padding-left: 20px;">FRONT WIPER AND WASHER SYSTEM (WITH RAIN SENSOR) : Fail-Safe16</p> <p>REAR WIPER AND WASHER SYSTEM16</p> <p style="padding-left: 20px;">REAR WIPER AND WASHER SYSTEM : System Diagram17</p> <p style="padding-left: 20px;">REAR WIPER AND WASHER SYSTEM : System Description17</p> <p style="padding-left: 20px;">REAR WIPER AND WASHER SYSTEM : Fail-Safe18</p> <p>DIAGNOSIS SYSTEM (BCM)19</p> <p>COMMON ITEM19</p> <p style="padding-left: 20px;">COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)19</p> <p>WIPER20</p> <p style="padding-left: 20px;">WIPER : CONSULT Function (BCM - WIPER)20</p> <p>DIAGNOSIS SYSTEM (IPDM E/R)21</p> <p style="padding-left: 20px;">Diagnosis Description21</p> <p style="padding-left: 20px;">CONSULT Function (IPDM E/R)22</p> <p>ECU DIAGNOSIS INFORMATION25</p> <p>BCM, IPDM E/R25</p> <p style="padding-left: 20px;">List of ECU Reference25</p> <p>WIRING DIAGRAM26</p>
--	---



FRONT WIPER AND WASHER SYSTEM	26	Description	60
Wiring Diagram	26	Diagnosis Procedure	60
REAR WIPER AND WASHER SYSTEM	35	REMOVAL AND INSTALLATION	62
Wiring Diagram	35	WASHER TANK	62
BASIC INSPECTION	41	Exploded View	62
DIAGNOSIS AND REPAIR WORKFLOW	41	Removal and Installation	62
Work Flow	41	WASHER PUMP	64
DTC/CIRCUIT DIAGNOSIS	43	Removal and Installation	64
WIPER AND WASHER FUSE	43	WASHER LEVEL SWITCH	65
Description	43	Removal and Installation	65
Diagnosis Procedure	43	FRONT WASHER NOZZLE AND TUBE	66
FRONT WIPER MOTOR LO CIRCUIT	44	Exploded View	66
Component Function Check	44	Removal and Installation - Front Washer Nozzle ...	66
Diagnosis Procedure	44	Washer Tube Layout	67
FRONT WIPER MOTOR HI CIRCUIT	45	Removal and Installation - Front Washer Tube	67
Component Function Check	45	Adjustment	67
Diagnosis Procedure	45	FRONT WIPER ARM	70
FRONT WIPER STOP POSITION SIGNAL CIRCUIT	46	Exploded View	70
Component Function Check	46	Removal and Installation	70
Diagnosis Procedure	46	Adjustment	71
FRONT WIPER MOTOR GROUND CIRCUIT ...	47	FRONT WIPER BLADE	72
Diagnosis Procedure	47	Exploded View	72
WASHER MOTOR CIRCUIT	48	Removal and Installation	72
Diagnosis Procedure	48	FRONT WIPER DRIVE ASSEMBLY	73
RAIN SENSOR	49	Exploded View	73
Component Function Check	49	Removal and Installation	73
Diagnosis Procedure	49	RAIN SENSOR	74
WASHER SWITCH	51	Exploded View	74
Description	51	Removal and Installation	74
Component Inspection	51	WIPER AND WASHER SWITCH	75
REAR WIPER MOTOR CIRCUIT	53	Removal and Installation	75
Component Function Check	53	REAR WIPER ARM	76
Diagnosis Procedure	53	Exploded View	76
REAR WIPER STOP POSITION SIGNAL CIRCUIT	55	Removal and Installation	76
Component Function Check	55	Adjustment	77
Diagnosis Procedure	55	REAR WIPER MOTOR	78
SYMPTOM DIAGNOSIS	56	Exploded View	78
WIPER AND WASHER SYSTEM SYMPTOMS	56	Removal and Installation	78
Symptom Table	56	REAR WASHER NOZZLE AND TUBE	79
NORMAL OPERATING CONDITION	59	Washer Tube Layout	79
Description	59	Removal and Installation - Rear Washer Tube	79
FRONT WIPER DOES NOT OPERATE	60	Removal and Installation - Rear Washer Nozzle ...	80
		Inspection	80
		SERVICE DATA AND SPECIFICATIONS (SDS)	81
		SERVICE DATA AND SPECIFICATIONS (SDS)	81

A

B

C

D

E

F

G

H

I

J

K

WW

M

N

O

P

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000009729272

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes dual stage front air bag modules. The SRS system may only deploy one front air bag, depending on the severity of a collision and whether the front passenger seat is occupied. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS


WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

Precaution for Procedure without Cowl Top Cover

INFOID:000000009132044

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

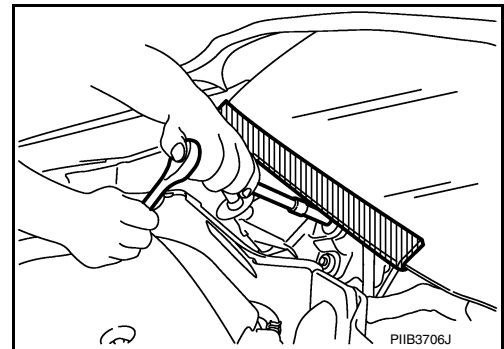

Precaution for Work

INFOID:000000009757464

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and prevent them from being dropped.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with a new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After installation is complete, be sure to check that each part works properly.
- Follow the steps below to clean components.
 - Water soluble dirt:
- Dip a soft cloth into lukewarm water, wring the water out of the cloth and wipe the dirty area.

PRECAUTIONS

< PRECAUTION >

- Then rub with a soft, dry cloth.
- Oily dirt:
 - Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%) and wipe the dirty area.
 - Then dip a cloth into fresh water, wring the water out of the cloth and wipe the detergent off.
 - Then rub with a soft, dry cloth.
- Do not use organic solvent such as thinner, benzene, alcohol or gasoline.
- For genuine leather seats, use a genuine leather seat cleaner.

A

B

C

D

E

F

G

H

I

J

K

WW

M

N

O

P

PREPARATION

< PREPARATION >


PREPARATION

PREPARATION

Special Service Tools

INFOID:000000009757465

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

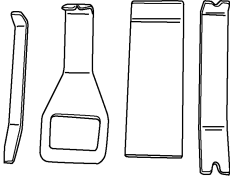Tool number (Kent-Moore No.) Tool name	Description
<p>— (J-46534) Trim tool set</p>  <p>AWJIA0483ZZ</p>	Removing trim components

COMPONENT PARTS

< SYSTEM DESCRIPTION >


SYSTEM DESCRIPTION

COMPONENT PARTS

FRONT WIPER AND WASHER SYSTEM (WITHOUT RAIN SENSOR)

FRONT WIPER AND WASHER SYSTEM (WITHOUT RAIN SENSOR) : Component Parts Location

INFOID:000000009132045

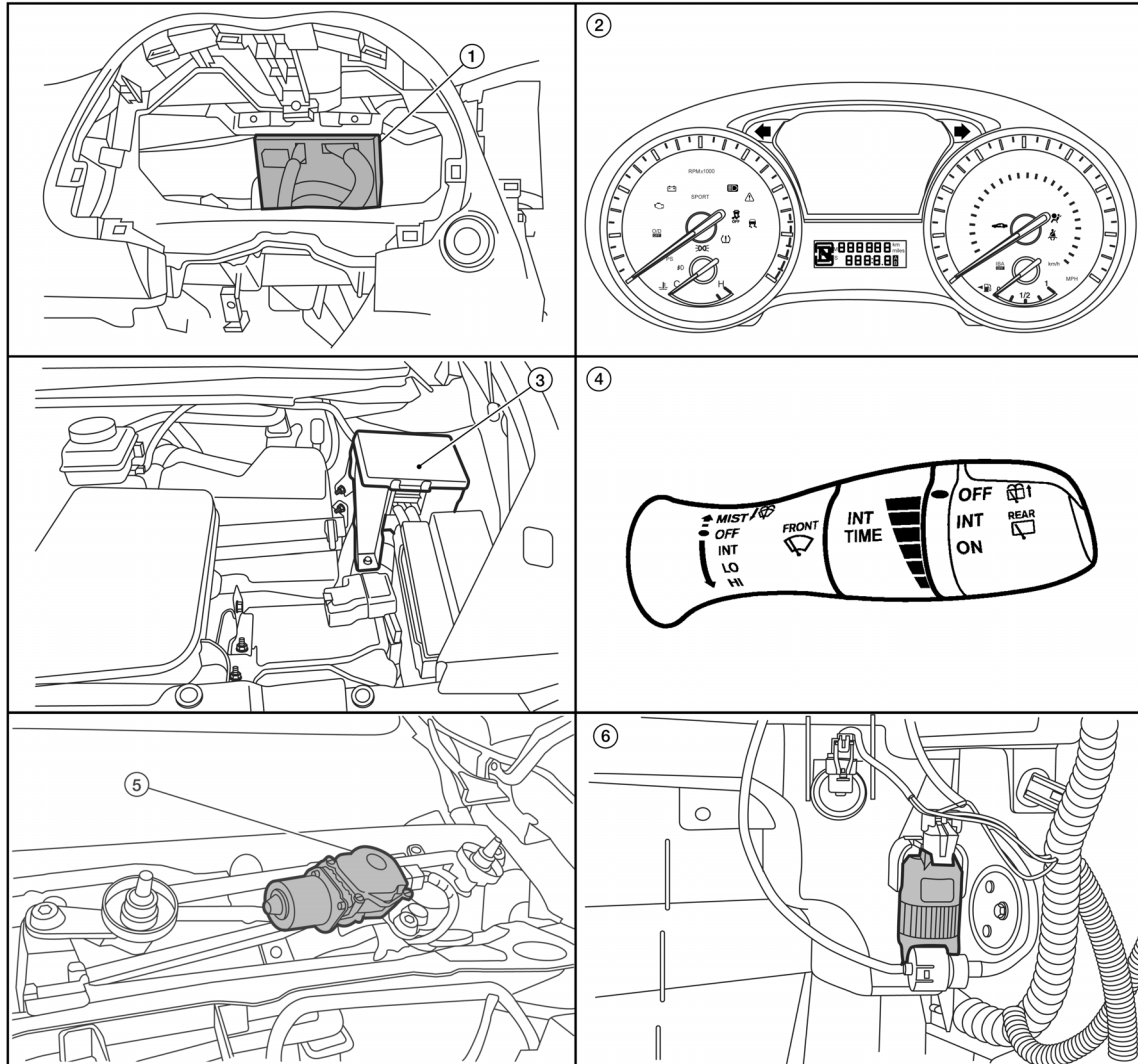

AWLIA1933ZZ

- | | | |
|--|---|--------------------------------|
| 1. BCM (with the combination meter re-
moved) | 2. Combination meter | 3. IPDM E/R |
| 4. Combination switch | 5. Front wiper motor (with the wiper
cowl removed) | 6. Front and rear washer motor |

FRONT WIPER AND WASHER SYSTEM (WITHOUT RAIN SENSOR) : Component

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WW

COMPONENT PARTS

< SYSTEM DESCRIPTION >

Description


INFOID:000000009132046

Part	Description
BCM	<ul style="list-style-type: none"> Judges each switch status by the combination switch reading function. Requests (via CAN communication) the front wiper relay and the front wiper high relay ON to IPDM E/R.
IPDM E/R	<ul style="list-style-type: none"> Controls the integrated relay according to the request (via CAN communication) from BCM. Performs the auto stop control of the front wiper.
Combination meter	Transmits vehicle speed signal to the BCM with CAN communication.
Combination switch (Wiper & Washer switch)	<ul style="list-style-type: none"> Provides input for wiper and washer control to the BCM. Refer to BCS-7, "COMBINATION SWITCH READING SYSTEM : System Description".
Front and rear washer motor	<ul style="list-style-type: none"> Washer fluid is sprayed according to washer switch states. Combination switch operates front washer or rear washer by changing voltage polarity to be supplied to washer pump.
Front wiper motor	<ul style="list-style-type: none"> IPDM E/R controls front wiper operation. Front wiper stop position signal is transmitted to IPDM E/R.

FRONT WIPER AND WASHER SYSTEM (WITH RAIN SENSOR)

FRONT WIPER AND WASHER SYSTEM (WITH RAIN SENSOR) : Component Parts Location

INFOID:000000009132047

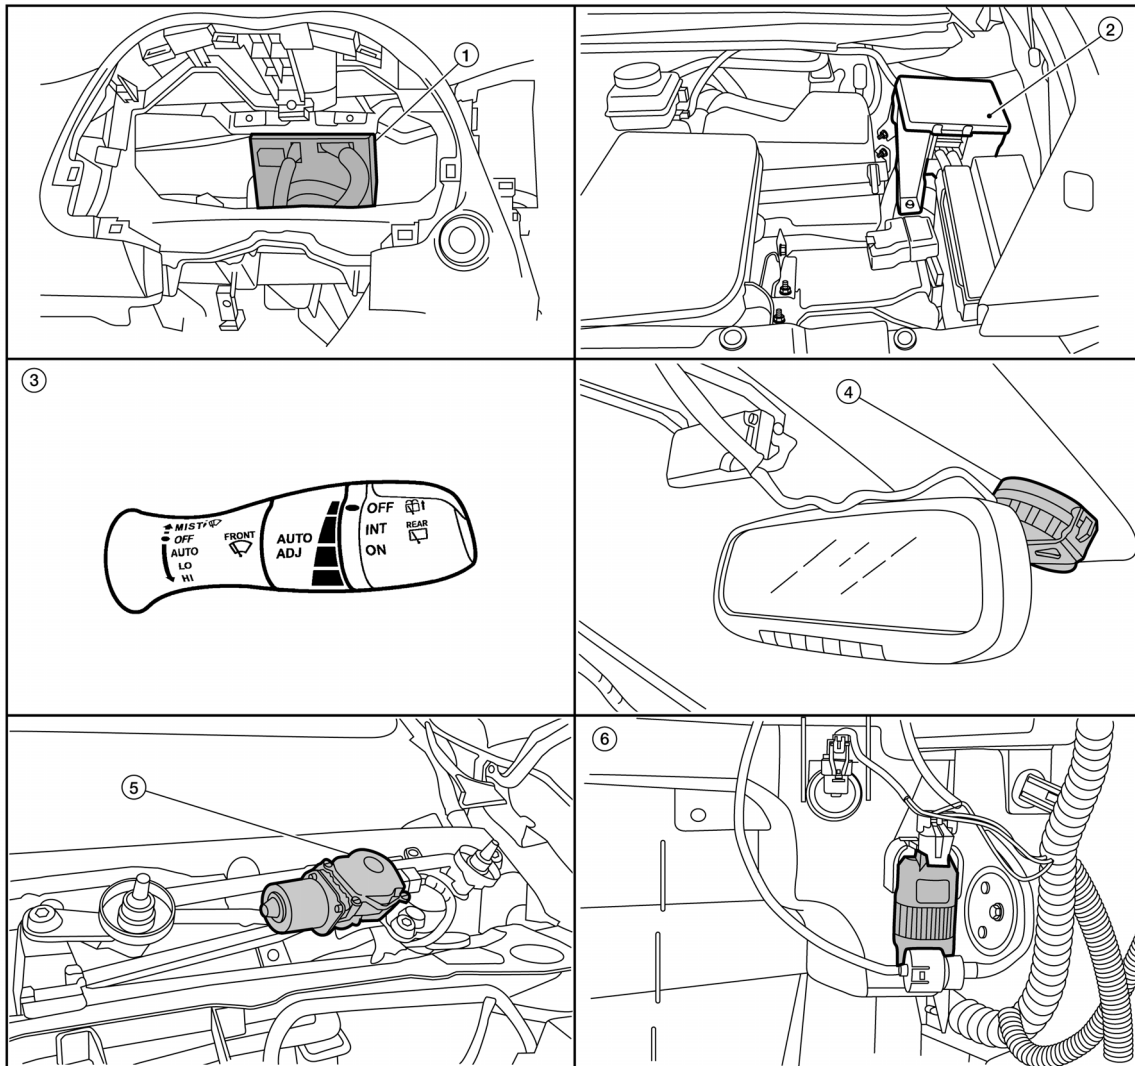

AWLIA1937ZZ

COMPONENT PARTS

< SYSTEM DESCRIPTION >

- | | | |
|---|--|--|
| 1. BCM (with the combination meter removed) | 2. IPDM E/R | 3. Combination switch |
| 4. Rain sensor (with the headliner and rain sensor cover removed) | 5. Front wiper motor (with the wiper cowl and the support bracket removed) | 6. Front and rear washer motor (with front bumper removed) |

A
B
C

FRONT WIPER AND WASHER SYSTEM (WITH RAIN SENSOR) : Component Description

INFOID:000000009132048

D

Part	Description
BCM	<ul style="list-style-type: none"> Judges each switch status by the combination switch reading function. Requests (via CAN communication) the front wiper relay and the front wiper high relay ON to IPDM E/R.
IPDM E/R	<ul style="list-style-type: none"> Controls the integrated relay according to the request (via CAN communication) from BCM. Performs the auto stop control of the front wiper.
Rain sensor	Detects water droplets on the windshield with infrared rays, and transmits the rain sensor signal to BCM via the rain sensor serial link.
Combination switch (Wiper & Washer switch)	<ul style="list-style-type: none"> Provides input for wiper and washer control to the BCM. Refer to BCS-7, "COMBINATION SWITCH READING SYSTEM : System Description".
Front and rear washer motor	<ul style="list-style-type: none"> Washer fluid is sprayed according to washer switch states. Combination switch operates front washer or rear washer by changing voltage polarity to be supplied to washer pump.
Front wiper motor	<ul style="list-style-type: none"> IPDM E/R controls front wiper operation. Front wiper stop position signal is transmitted to IPDM E/R.

E
F
G
H
I

REAR WIPER AND WASHER SYSTEM

J
K

WW


M
N
O
P

COMPONENT PARTS

< SYSTEM DESCRIPTION >

REAR WIPER AND WASHER SYSTEM : Component Parts Location

INFOID:000000009132049

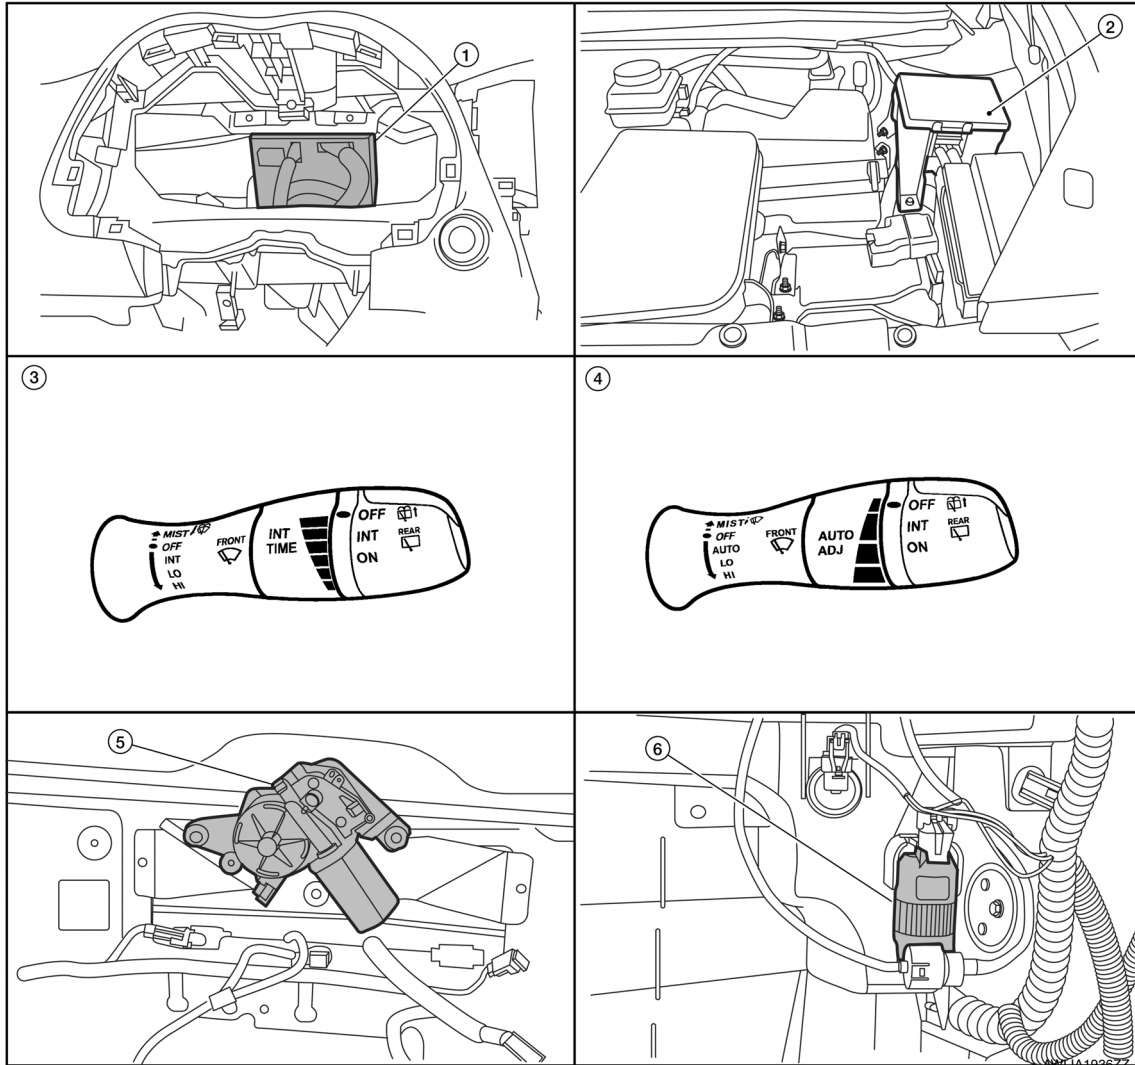

- | | | |
|--|---|--|
| 1. BCM (with the combination meter removed) | 2. IPDM E/R | 3. Combination switch (without rain sensing wipers) |
| 4. Combination switch (with rain sensing wipers) | 5. Rear wiper motor (with rear hatch cover removed and motor unplugged) | 6. Front and rear washer motor (with the front bumper removed) |

REAR WIPER AND WASHER SYSTEM : Component Description

INFOID:000000009132050

Part	Description
BCM	<ul style="list-style-type: none"> Judges each switch status by the combination switch reading function. Supplies power to the rear wiper motor. Performs the auto stop control of the rear wiper.
IPDM E/R	<ul style="list-style-type: none"> Controls the integrated relay according to the request (via CAN communication) from BCM. Performs the auto stop control of the front wiper.
Combination switch (Wiper & Washer switch)	<ul style="list-style-type: none"> Provides input for wiper and washer control to the BCM. Refer to BCS-7. "COMBINATION SWITCH READING SYSTEM : System Description".
Front and rear washer motor	<ul style="list-style-type: none"> Washer fluid is sprayed according to washer switch states. Combination switch operates front washer or rear washer by changing voltage polarity to be supplied to washer pump.
Rear wiper motor	<ul style="list-style-type: none"> BCM controls rear wiper operation. Rear wiper stop position signal is transmitted to BCM.


SYSTEM

< SYSTEM DESCRIPTION >

SYSTEM

FRONT WIPER AND WASHER SYSTEM (WITHOUT RAIN SENSOR)

FRONT WIPER AND WASHER SYSTEM (WITHOUT RAIN SENSOR) : System Diagram

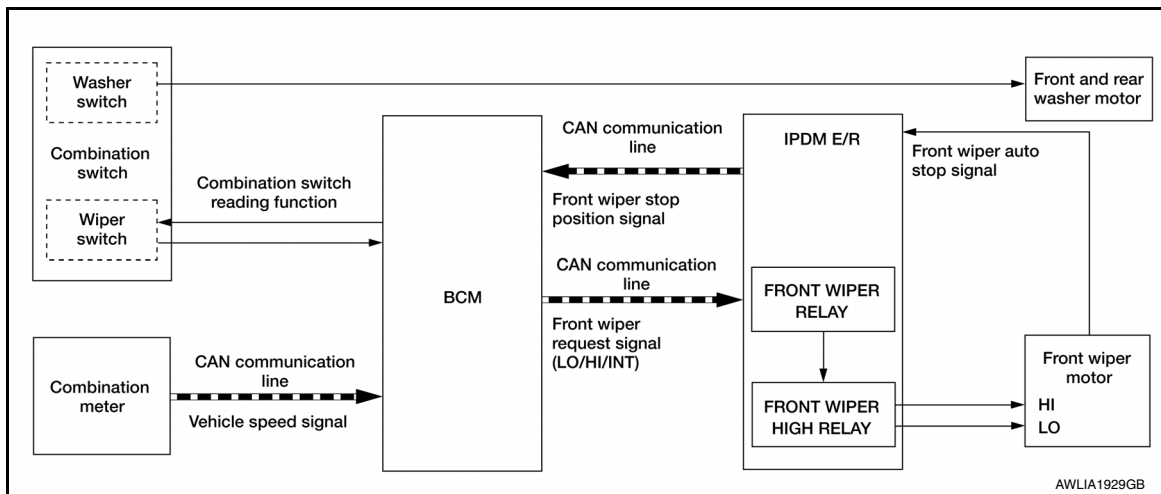

FRONT WIPER AND WASHER SYSTEM (WITHOUT RAIN SENSOR) : System Description

INFOID:000000009132052

OUTLINE

The front wiper is controlled by each function of BCM and IPDM E/R.

Control by BCM

- Combination switch reading function
- Front wiper control function

Control by IPDM E/R

- Front wiper control function
- Relay control function

Combination meter indicates low washer fluid warning judged with the signal from the washer level switch. For details of low washer fluid warning, refer to [MWI-9, "METER SYSTEM : System Description"](#).

FRONT WIPER BASIC OPERATION

- BCM detects the combination switch condition by the combination switch reading function.
- BCM transmits the front wiper request signal to IPDM E/R with CAN communication depending on each operating condition of the front wiper.
- IPDM E/R turns ON/OFF the integrated front wiper relay and the front wiper high relay according to the front wiper request signal. IPDM E/R provides the power supply to operate the front wiper HI/LO operation.

FRONT WIPER LO OPERATION

- BCM transmits the front wiper request signal (LO) to IPDM E/R with CAN communication according to the front wiper LO operating condition.

Front wiper LO operating condition

- Ignition switch ON
- Front wiper switch LO or front wiper switch MIST (while pressing)
- IPDM E/R turns ON the integrated front wiper relay according to the front wiper request signal (LO).

FRONT WIPER HI OPERATION

- BCM transmits the front wiper request signal (HI) to IPDM E/R with CAN communication according to the front wiper HI operating condition.

Front wiper HI operating condition

- Ignition switch ON
- Front wiper switch HI

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

SYSTEM

< SYSTEM DESCRIPTION >


- IPDM E/R turns ON the integrated front wiper relay and the front wiper high relay according to the front wiper request signal (HI).

FRONT WIPER INT OPERATION

- BCM transmits the front wiper request signal (INT) to IPDM E/R with CAN communication depending on the front wiper INT operating condition and intermittent operation delay interval according to the wiper intermittent dial position.

Front wiper INT operating condition

- Ignition switch ON
- Front wiper switch INT
- IPDM E/R turns ON the integrated front wiper relay so that the front wiper is operated only once according to the front wiper request signal (INT).
- BCM detects stop position/except stop position of the front wiper motor according to the front wiper stop position signal received from IPDM E/R with CAN communication.
- BCM transmits the front wiper request signal (INT) again after the intermittent operation delay interval.

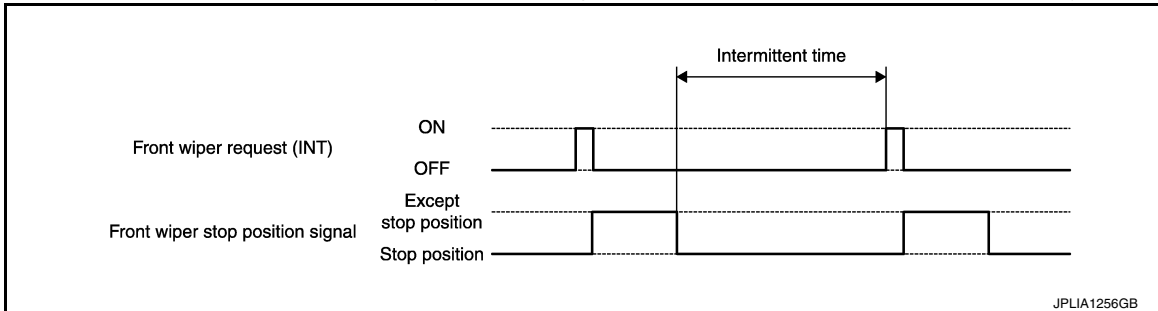

NOTE:

Factory setting of the front wiper intermittent operation is the operation without vehicle speed. Front wiper intermittent operation can be set in the comfort settings on the color display.

Front wiper intermittent operation with vehicle speed

- BCM calculates the intermittent operation delay interval from the following:
 - Vehicle speed signal (received from the combination meter with CAN communication)
 - Wiper intermittent dial position

Wiper intermittent dial position	Intermittent operation interval	Intermittent operation delay Interval (s)			
		Vehicle speed			
		0 – 5 km/h (0 – 3.1 MPH)	5 – 35 km/h (3.1 – 21.7 MPH)	35 – 65 km/h* (21.7 – 40 MPH)	65 km/h (40.4 MPH) or more
1	Short ↑	0.8	0.6	0.4	0.24
2		4	3	2	1.2
3		10	7.5	5	3
4		16	12	8	4.8
5		24	18	12	7.2
6	Long ↓	32	24	16	9.6
7		42	31.5	21	12.6

*: When without vehicle speed setting


FRONT WIPER AUTO STOP OPERATION

- BCM stops transmitting the front wiper request signal when the front wiper switch is turned OFF.
- IPDM E/R detects the front wiper stop position signal from the front wiper motor and detects the front wiper motor position (stop position/except stop position).

SYSTEM

< SYSTEM DESCRIPTION >

- When the front wiper request signal is stopped, IPDM E/R turns ON the front wiper relay until the front wiper motor returns to the stop position.

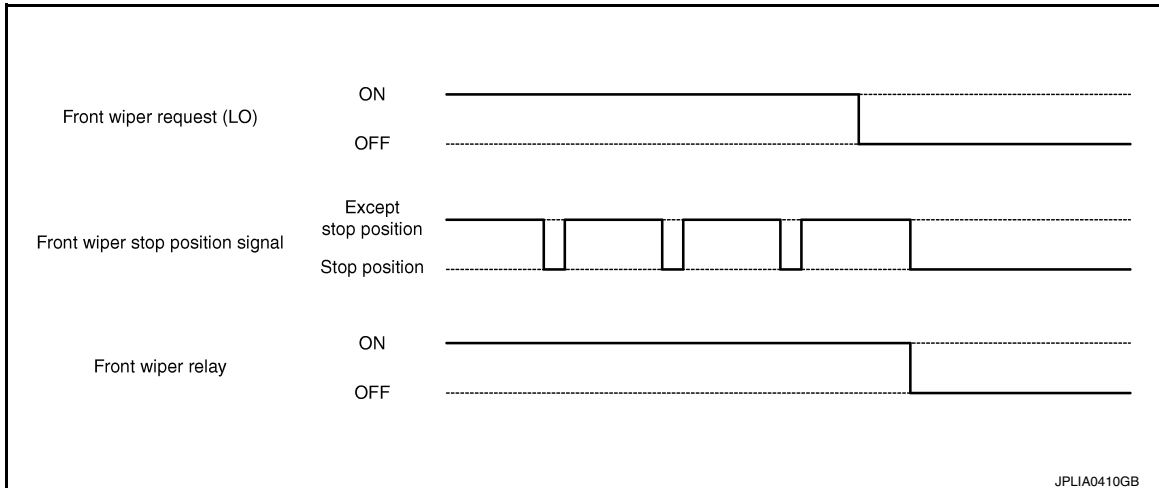

NOTE:

- BCM stops the transmitting of the front wiper request signal when the ignition switch is OFF.
- IPDM E/R turns the front wiper relay OFF when the ignition switch is OFF.

FRONT WIPER OPERATION LINKED WITH WASHER

- BCM transmits the front wiper request signal (LO) to IPDM E/R with CAN communication according to the washer linked operating condition of the front wiper.
- BCM transmits the front wiper request signal (LO) so that the front wiper operates approximately 2 times when the front washer switch OFF is detected.

Washer linked operating condition of front wiper

- Ignition switch ON
- Front washer switch ON (0.4 seconds or more)
- IPDM E/R turns ON the integrated front wiper relay according to the front wiper request signal (LO).
- The washer pump is grounded through the combination switch with the front washer switch ON.

FRONT WIPER FAIL-SAFE OPERATION

IPDM E/R performs the fail-safe function when the front wiper stop position circuit is malfunctioning.

FRONT WIPER AND WASHER SYSTEM (WITHOUT RAIN SENSOR) : Fail-Safe

INFOID:000000009132053

FAIL-SAFE OPERATION

IPDM E/R performs the fail-safe function when the front wiper auto stop circuit is malfunctioning. Refer to [PCS-19. "Fail Safe"](#).

FRONT WIPER AND WASHER SYSTEM (WITH RAIN SENSOR)

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P


WW

SYSTEM

< SYSTEM DESCRIPTION >

FRONT WIPER AND WASHER SYSTEM (WITH RAIN SENSOR) : System Diagram

INFOID:000000009132054

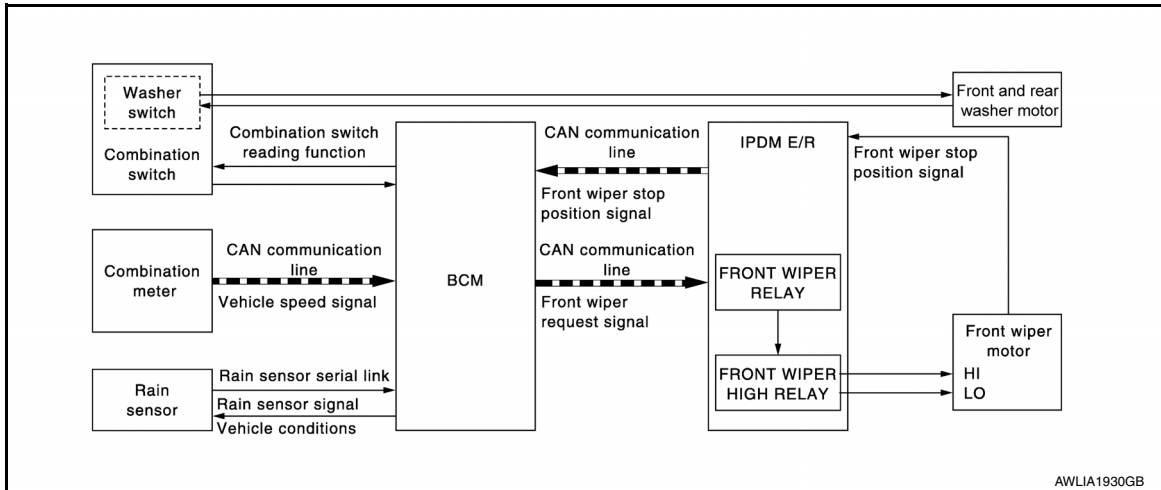

FRONT WIPER AND WASHER SYSTEM (WITH RAIN SENSOR) : System Description

INFOID:000000009132055

OUTLINE

The front wiper is controlled by each function of BCM and IPDM E/R.

Controlled by BCM

- Combination switch reading function
- Front wiper control function

Controlled by IPDM E/R

- Front wiper control function
- Relay control function

Combination meter indicates low washer fluid warning judged by the signal from the washer level switch. For details of low washer fluid warning, refer to [BCS-78, "Symptom Table"](#).

FRONT WIPER BASIC OPERATION

- BCM detects the combination switch condition by the combination switch reading function.
- BCM transmits the front wiper request signal to IPDM E/R via CAN communication depending on each operating condition of the front wiper.
- IPDM E/R turns ON/OFF the integrated front wiper relay and the front wiper high relay according to the front wiper request signal. IPDM E/R provides the power supply to operate the front wiper HI/LO operation.

FRONT WIPER LO OPERATION

- BCM transmits the front wiper request signal (LO) to IPDM E/R via CAN communication according to the front wiper LO operating condition.

Front wiper LO operating condition

- Ignition switch ON
- Front wiper switch LO or front wiper switch MIST (while pressing)
- IPDM E/R turns ON the integrated front wiper relay according to the front wiper request signal (LO).

FRONT WIPER HI OPERATION

- BCM transmits the front wiper request signal (HI) to IPDM E/R via CAN communication according to the front wiper HI operating condition.

Front wiper HI operating condition

- Ignition switch ON
- Front wiper switch HI
- IPDM E/R turns ON the integrated front wiper relay and the front wiper high relay according to the front wiper request signal (HI).

FRONT WIPER AUTO OPERATION

SYSTEM

< SYSTEM DESCRIPTION >

Rain Detection

Rain level and sensor conditions are detected by rain sensor.

- BCM transmits the vehicle conditions (vehicle speed, front wiper condition, rain sensor sensitivity setting, etc.) to the rain sensor via the rain sensor serial link.
- Rain sensor judges a wiping speed for front wiper by rain condition and the vehicle conditions. It transmits the wiping speed request signal to the BCM via the rain sensor serial link.

Auto Wiping Operation

- BCM receives the wiping speed request signal from the rain sensor via the rain sensor serial link.
- BCM controls front wiper operation according to the wiping speed request signals. It transmits the front wiper request signals (LO or HI) to the IPDM E/R via CAN communication line.

Front wiper AUTO operating condition

- Ignition switch ON
- Front wiper switch AUTO

NOTE:

- When the front wiper switch is turned to AUTO position, the front wiper operates once regardless of rainy conditions.
- Factory setting of the front wiper AUTO operation is operation linked with rain sensor. Front wiper AUTO operation can be set to operation linked or not linked with rain sensor using CONSULT. Refer to [BCS-18, "WIPER : CONSULT Function \(BCM - WIPER\)"](#).

Rain Sensor Sensitivity Setting

BCM determines rain sensor sensitivity according to wiper volume dial position.

Wiper volume dial position	Sensitivity
1	High sensitivity
2	
3	Medium-high sensitivity
4	
5	Low-medium sensitivity
6	
7	Low sensitivity

NOTE:

When the wiper volume dial position is turned up by 1 level under front wiper AUTO operating condition, the front wiper operates once.

Splash mode operation

The front wiper is operated at HI regardless of the wiper volume adjustment position when water drops are instantaneously sprayed over the windshield glass due to water splash from oncoming vehicles or other causes. After that, AUTO operation is performed depending on the amount of water drops.

SPLASH MODE OPERATION CONDITIONS

- Front wiper switch AUTO
- Ignition switch ON

NOTE:

Splash mode is not operated and auto wiping operation is performed while the vehicle is stopped.

FRONT WIPER AUTO STOP OPERATION

- BCM stops transmitting the front wiper request signal when the front wiper switch is turned OFF.
- IPDM E/R detects the front wiper stop position signal from the front wiper motor and detects the front wiper motor position (stop position/except stop position).


A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

SYSTEM

< SYSTEM DESCRIPTION >

- When the front wiper request signal is stopped, IPDM E/R turns ON the front wiper relay until the front wiper motor returns to the stop position.

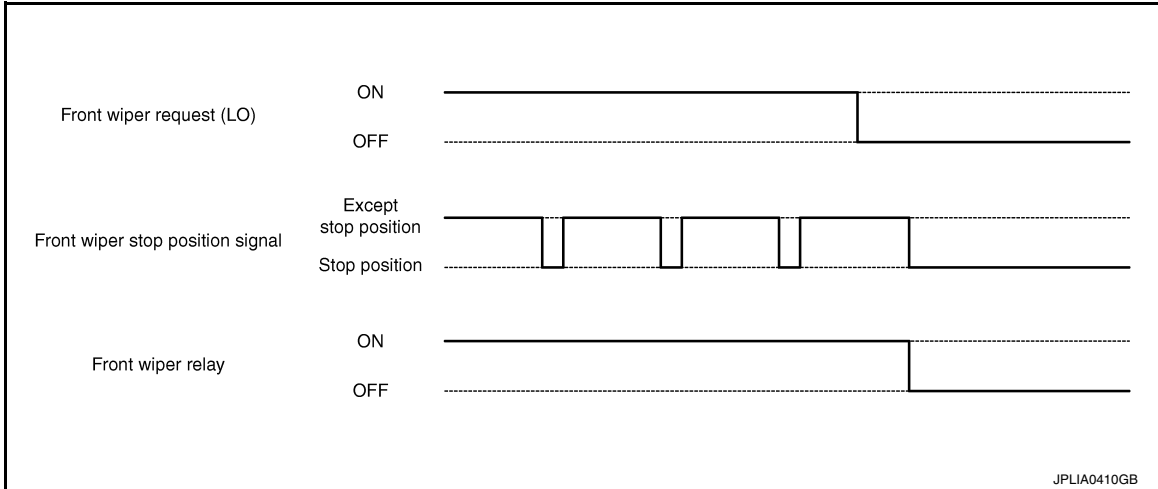

NOTE:

- BCM stops the transmitting of the front wiper request signal when the ignition switch is OFF.
- IPDM E/R turns the front wiper relay OFF when the ignition switch is OFF.

FRONT WIPER OPERATION LINKED WITH WASHER

- BCM transmits the front wiper request signal (LO) to IPDM E/R via CAN communication according to the washer linked operating condition of the front wiper.
- BCM transmits the front wiper request signal (LO) so that the front wiper operates approximately 2 times when the front washer switch OFF is detected.

Washer linked operating condition of front wiper

- Ignition switch ON
- Front washer switch ON (0.4 seconds or more)
- IPDM E/R turns ON the integrated front wiper relay according to the front wiper request signal (LO).
- The washer pump is grounded through the combination switch with the front washer switch ON.

FRONT WIPER DROP WIPE OPERATION

- BCM controls the front wiper to operate once according to the conditions of the front wiper drop wipe operation.

Front wiper drop wipe operating condition

- Ignition switch ON
- Front wiper switch OFF
- Front washer switch OFF
- BCM transmits the front wiper request signal (LO) to IPDM E/R with CAN communication so that the front wiper operates once three seconds after the front wiper operation is linked with the washer.
- IPDM E/R turns ON the integrated front wiper relay according to the front wiper request signal (LO).

NOTE:

Factory setting of the front wiper drop wipe operation is ON. Front wiper drop wipe operation can be set to ON or OFF using CONSULT. Refer to [BCS-18, "WIPER : CONSULT Function \(BCM - WIPER\)"](#).

WIPER LINKED AUTO LIGHTING FUNCTION

When the light switch is in the AUTO position, the front wiper operates and then headlamp illuminates. Refer to [EXL-10, "DAYTIME RUNNING LIGHT SYSTEM : System Description"](#).

FRONT WIPER AND WASHER SYSTEM (WITH RAIN SENSOR) : Fail-Safe

INFOID:000000009132056

FAIL-SAFE OPERATION

IPDM E/R performs the fail-safe function when the front wiper auto stop circuit is malfunctioning. Refer to [PCS-19, "Fail Safe"](#).


REAR WIPER AND WASHER SYSTEM

SYSTEM

< SYSTEM DESCRIPTION >

REAR WIPER AND WASHER SYSTEM : System Diagram

INFOID:000000009132057

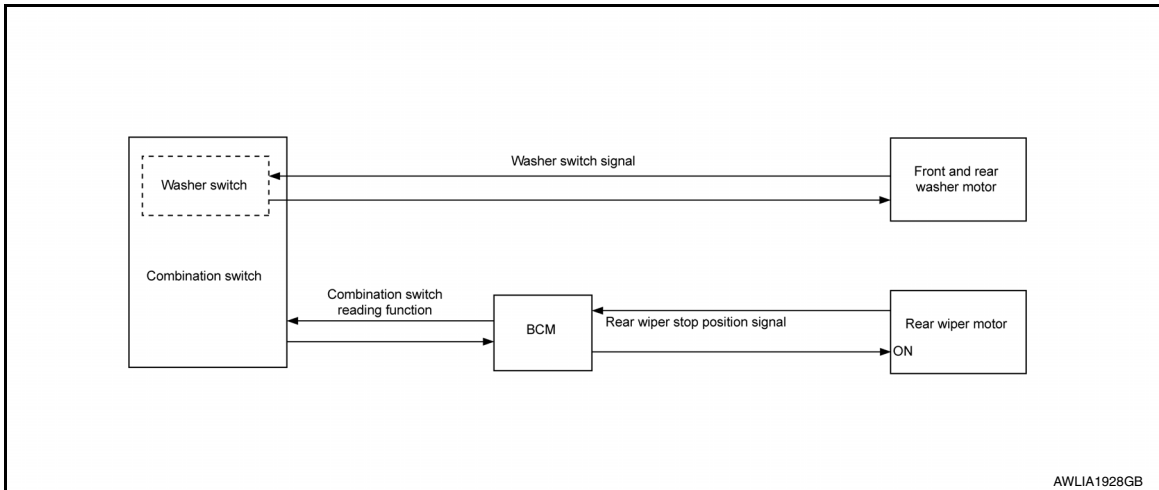

REAR WIPER AND WASHER SYSTEM : System Description

INFOID:000000009132058

OUTLINE

The rear wiper is controlled by each function of BCM.

Control by BCM

- Combination switch reading function
- Rear wiper control function

REAR WIPER BASIC OPERATION

- BCM detects the combination switch condition by the combination switch reading function.
- BCM controls the rear wiper to start or stop.

REAR WIPER ON OPERATION

- BCM supplies power to the rear wiper motor according to the rear wiper ON operating condition.

Rear wiper ON operating condition


- Ignition switch ON
- Rear wiper switch ON

REAR WIPER INT OPERATION

- BCM supplies power to the rear wiper motor according to the INT operating condition.

Rear wiper INT operating condition

- Ignition switch ON
- Rear wiper switch INT
- BCM controls the rear wiper to operate once.
- BCM detects the rear wiper motor stop position.
- BCM supplies power to the rear wiper motor after an intermittent from the stop of the rear wiper motor.

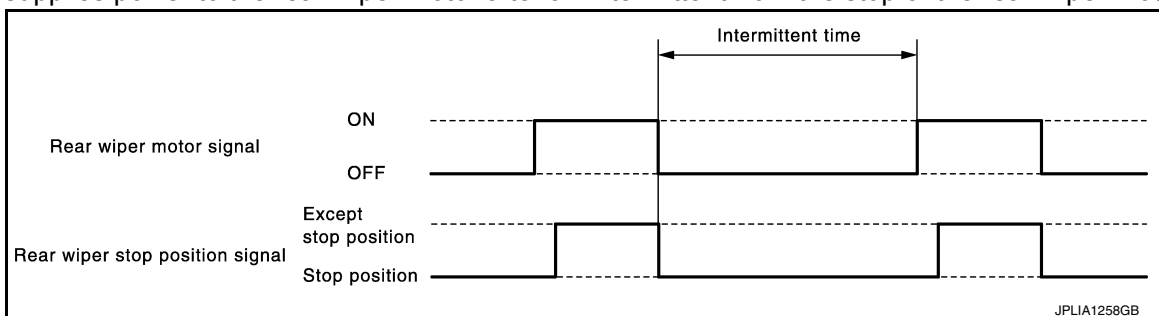


REAR WIPER AUTO STOP OPERATION

- BCM stops supplying power to the rear wiper motor when the rear wiper switch is turned OFF.
- BCM reads a rear wiper stop position signal from the rear wiper motor to detect a rear wiper motor position.

SYSTEM

< SYSTEM DESCRIPTION >

- When the rear wiper motor is at other than the stop position, BCM continues to supply power to the rear wiper motor until it returns to the stop position.

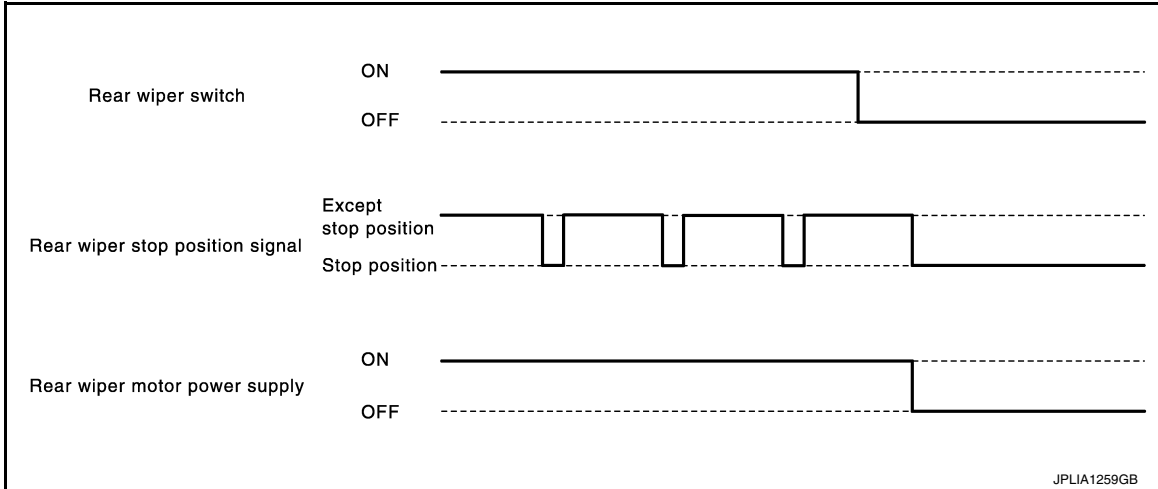

NOTE:

BCM stops supplying power to the rear wiper motor when the ignition switch is turned OFF.

REAR WIPER OPERATION LINKED WITH WASHER

- BCM supplies power to the rear wiper motor according to the washer linked operating condition of rear wiper. When the rear washer switch is turned OFF, BCM controls the rear wiper to operate approximately 3 times.

Washer linked operating condition of the rear wiper

- Ignition switch ON
- Rear washer switch ON (0.4 seconds or more)
- The washer pump is grounded through the combination switch with the rear washer switch ON.

REAR WIPER DROP WIPE OPERATION

- BCM controls the rear wiper to operate once according to the rear wiper drop wipe operating condition.

Rear wiper drop wipe operating condition

- Ignition switch ON
- Rear wiper switch OFF
- Rear washer switch OFF
- BCM controls the rear wiper so that it operates once approximately three seconds later after the washer interlocking operation of the rear wiper.

NOTE:

Factory setting of the rear wiper drop wipe operation is OFF. Rear wiper drop wipe operation can be set to ON or OFF using CONSULT. Refer to [BCS-18, "WIPER : CONSULT Function \(BCM - WIPER\)".](#)

REAR WIPER AND WASHER SYSTEM : Fail-Safe

INFOID:000000009132059

FAIL-SAFE OPERATION

IPDM E/R performs the fail-safe function when the front wiper auto stop circuit is malfunctioning. Refer to [PCS-19, "Fail Safe".](#)

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000009725700

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and no-start condition.

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Direct Diagnostic Mode	Description
Ecu Identification	The BCM part number is displayed.
Self Diagnostic Result	The BCM self diagnostic results are displayed.
Data Monitor	The BCM input/output data is displayed in real time.
Active Test	The BCM activates outputs to test components.
Work support	The settings for BCM functions can be changed.
Configuration	<ul style="list-style-type: none"> The vehicle specification can be read and saved. The vehicle specification can be written when replacing BCM.
CAN Diag Support Mntr	The result of transmit/receive diagnosis of CAN communication is displayed.

SYSTEM APPLICATION

BCM can perform the following functions.

System	Sub System	Direct Diagnostic Mode						
		Ecu Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN Diag Support Mntr
Door lock	DOOR LOCK		×	×	×	×		
Rear window defogger	REAR DEFOGGER			×	×	×		
Warning chime	BUZZER			×	×			
Interior room lamp timer	INT LAMP			×	×	×		
Exterior lamp	HEADLAMP			×	×	×		
Wiper and washer	WIPER			×	×	×		
Turn signal and hazard warning lamps	FLASHER			×	×			
Air conditioner	AIR CONDITIONER			×				
Intelligent Key system	INTELLIGENT KEY		×	×	×	×		
Combination switch	COMB SW			×				
BCM	BCM	×	×			×	×	×
Immobilizer	IMMU		×	×	×			
Interior room lamp battery saver	BATTERY SAVER			×	×			
Back door open	TRUNK			×				
Vehicle security system	THEFT ALM			×	×	×		
RAP system	RETAINED PWR			×				

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

System	Sub System	Direct Diagnostic Mode						
		Ecu Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN Diag Support Mntr
Signal buffer system	SIGNAL BUFFER			×				
TPMS	AIR PRESSURE MONITOR		×	×	×	×		

WIPER

WIPER : CONSULT Function (BCM - WIPER)

INFOID:000000009725701

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and no-start condition.

DATA MONITOR

Monitor Item [Unit]	Description
PUSH SW [On/Off]	Indicates condition of push-button ignition switch.
VEH SPEED 1 [km/h]	Indicates vehicle speed signal received from ABS on CAN communication line.
FR WIPER HI [On/Off]	Indicates condition of wiper operation of combination switch.
FR WIPER LOW [On/Off]	
FR WASHER SW [On/Off]	
FR WIPER INT [On/Off]	
FR WIPER STOP [On/Off]	Indicates front wiper auto stop signal received from IPDM E/R on CAN communication line.
INT VOLUME [1 - 7]	Indicates condition of intermittent wiper operation of combination switch.
RR WIPER ON [On/Off]	Indicates condition of rear wiper operation of combination switch.
RR WIPER INT [On/Off]	
RR WASHER SW [On/Off]	
RR WIPER STOP [On/Off]	Indicates rear wiper motor auto stop input from rear wiper motor.
RAIN SENSOR [On/Off]	Indicates condition of rain sensor.

ACTIVE TEST

Test Item	Description
FR WIPER	This test is able to check front wiper operation [Hi/Lo/INT/Off].
RR WIPER	This test is able to check rear wiper operation [On/Off].

WORK SUPPORT

Support Item	Setting	Description
WIPER SPEED SETTING	On	Front wiper intermittent time linked with vehicle speed and wiper dial position.
	Off*	Front wiper intermittent time linked with wiper dial position.

* : Initial setting

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (IPDM E/R)

Diagnosis Description

INFOID:000000009725702

AUTO ACTIVE TEST

Description

In auto active test mode, the IPDM E/R sends a drive signal to the following systems to check their operation.

- Front wiper (LO, HI)
- Front fog lamps
- Parking lamps
- Side marker lamps
- Tail lamps
- License plate lamps
- Daytime running lamps
- Headlamps (LO, HI)
- A/C compressor
- Cooling fans (LO, HI)

Operation Procedure

CAUTION:

Do not start the engine.

NOTE:

When auto active test is performed with hood opened, sprinkle water on windshield before hand.

NOTE:

- If auto active test mode cannot be actuated, check door switch system. Refer to [DLK-170, "Component Function Check"](#).
 - When auto active test mode has to be cancelled halfway through test, turn ignition switch OFF.
1. Close the hood and lift the wiper arms from the windshield. (Prevent windshield damage due to wiper operation)
 2. Turn ignition switch OFF.
 3. Turn the ignition switch ON, and within 20 seconds, press the front door switch LH 10 times. Then turn the ignition switch OFF.
 4. Turn the ignition switch ON within 10 seconds. After that the horn sounds once, and the auto active test starts.
 5. After a series of the following operations is repeated 3 times, auto active test is completed.

Inspection in Auto Active Test Mode

When auto active test mode is actuated, the following operation sequence is repeated 3 times.


Operation sequence	Inspection Location	Operation
1	Front wiper	LO for 3 seconds → HI for 3 seconds
2	<ul style="list-style-type: none"> • Front fog lamps • Parking lamps • Side marker lamps • Tail lamps • License plate lamps 	10 seconds
3	Daytime running lamps	10 seconds
4	Headlamps	LO ⇔ HI 5 times
5	A/C compressor	ON ⇔ OFF 5 times
6*	Cooling fans	LO for 5 seconds → HI for 5 seconds

*: Outputs duty ratio of 50% for 5 seconds → duty ratio of 100% for 5 seconds on the cooling fan control module.

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

Concept of auto active test

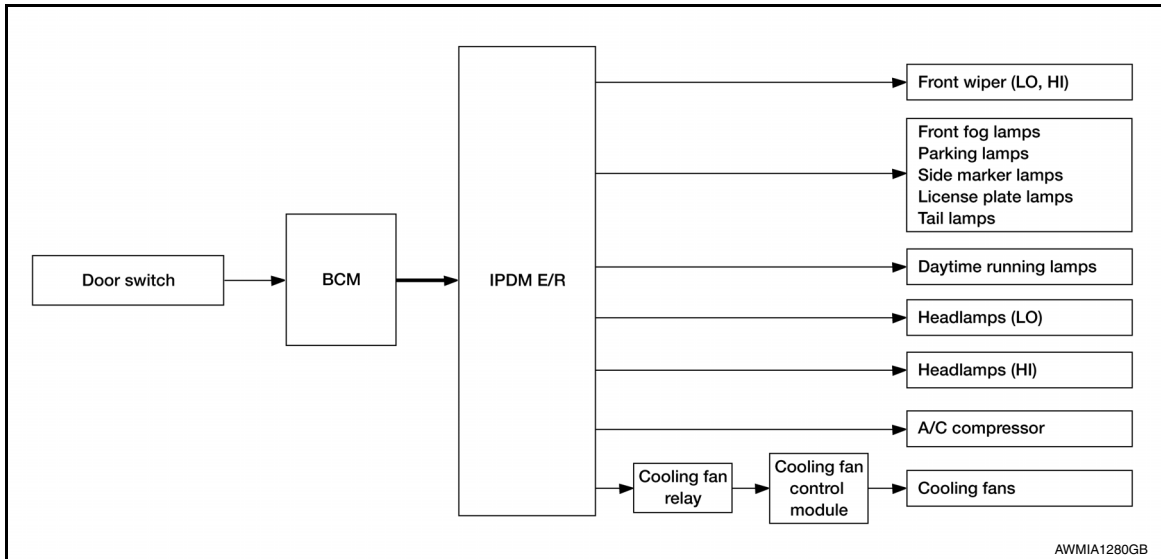

- IPDM E/R starts the auto active test with the door switch signals transmitted by BCM via CAN communication. Therefore, the CAN communication line between IPDM E/R and BCM is considered normal if the auto active test starts successfully.
- The auto active test facilitates troubleshooting if any systems controlled by IPDM E/R cannot be operated.

Diagnosis chart in auto active test mode

Symptom	Inspection contents	Possible cause
Any of the following components do not operate <ul style="list-style-type: none"> • Front fog lamps • Parking lamps • Side marker lamps • License plate lamps • Tail lamps • Daytime running lamps • Headlamp (HI, LO) • Front wiper 	Perform auto active test. Does the applicable system operate?	YES BCM signal input circuit
		NO • Lamp or motor • Lamp or motor ground circuit • Harness or connector between IPDM E/R and applicable system • IPDM E/R
Cooling fans do not operate	Perform auto active test. Do the cooling fans operate?	YES • ECM signal input circuit • CAN communication signal between ECM and IPDM E/R
		NO • Cooling fans • Harness or connectors between cooling fans and cooling fan control module • Cooling fan control module • Harness or connectors between cooling fan relay and cooling fan control module • Cooling fan relay • Harness or connectors between IPDM E/R and cooling fan relay • IPDM E/R

CONSULT Function (IPDM E/R)

INFOID:000000009725703

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with IPDM E/R.

Direct Diagnostic Mode	Description
Ecu Identification	The IPDM E/R part number is displayed.
Self Diagnostic Result	The IPDM E/R self diagnostic results are displayed.
Data Monitor	The IPDM E/R input/output data is displayed in real time.
Active Test	The IPDM E/R activates outputs to test components.
CAN Diag Support Mntr	The result of transmit/receive diagnosis of CAN communication is displayed.

ECU IDENTIFICATION

The IPDM E/R part number is displayed.

SELF DIAGNOSTIC RESULT

Refer to [PCS-20, "DTC Index"](#).

DATA MONITOR

Monitor Item [Unit]	Main Signals	Description
RAD FAN REQ [%]	×	Indicates cooling fan speed signal received from ECM on CAN communication line
AC COMP REQ [On/Off]	×	Indicates A/C compressor request signal received from ECM on CAN communication line
TAIL&CLR REQ [On/Off]	×	Indicates position light request signal received from BCM on CAN communication line
HL LO REQ [On/Off]	×	Indicates low beam request signal received from BCM on CAN communication line
HL HI REQ [On/Off]	×	Indicates high beam request signal received from BCM on CAN communication line
FR FOG REQ [On/Off]	×	Indicates front fog light request signal received from BCM on CAN communication line
FR WIP REQ [Stop/1LOW/Low/Hi]	×	Indicates front wiper request signal received from BCM on CAN communication line
WIP AUTO STOP [STOP P/ACT P]	×	Indicates condition of front wiper auto stop signal
WIP PROT [Off/BLOCK]	×	Indicates condition of front wiper fail-safe operation
IGN RLY1 -REQ [On/Off]		Indicates ignition switch ON signal received from BCM on CAN communication line
IGN RLY [On/Off]	×	Indicates condition of ignition relay
PUSH SW [On/Off]		Indicates condition of push-button ignition switch
INTER/NP SW [On/Off]		Indicates condition of CVT shift position
ST RLY CONT [On/Off]		Indicates starter relay status signal received from BCM on CAN communication line
IHBT RLY -REQ [On/Off]		Indicates starter control relay signal received from BCM on CAN communication line
ST/INHI RLY [Off/ ST /INHI]		Indicates condition of starter relay and starter control relay
DETENT SW [On/Off]		Indicates condition of CVT shift selector (park position switch)
DTRL REQ [Off]		Indicates daytime light request signal received from BCM on CAN communication line
HOOD SW [On/Off]		Indicates condition of hood switch
THFT HRN REQ [On/Off]		Indicates theft warning horn request signal received from BCM on CAN communication line

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

Monitor Item [Unit]	Main Signals	Description
HORN CHIRP [On/Off]		Indicates horn reminder signal received from BCM on CAN communication line
HOOD SW 2 [On/Off]		Indicates condition of hood switch 2

ACTIVE TEST

Test item	Description
HORN	This test is able to check horn operation [On].
FRONT WIPER	This test is able to check wiper motor operation [Hi/Lo/Off].
MOTOR FAN	This test is able to check cooling fan operation [4/3/2/1].
EXTERNAL LAMPS	This test is able to check external lamp operation [Fog/Hi/Lo/Tail/Off].

CAN DIAG SUPPORT MNTR

Refer to [LAN-23, "CAN Diagnostic Support Monitor"](#).

BCM, IPDM E/R

< ECU DIAGNOSIS INFORMATION >

ECU DIAGNOSIS INFORMATION

BCM, IPDM E/R

List of ECU Reference

INFOID:000000009132064

ECU	Reference
BCM	BCS-29. "Reference Value"
	BCS-49. "Fail Safe"
	BCS-49. "DTC Inspection Priority Chart"
	BCS-51. "DTC Index"
IPDM E/R	PCS-12. "Reference Value"
	PCS-19. "Fail Safe"
	PCS-20. "DTC Index"

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

FRONT WIPER AND WASHER SYSTEM


< WIRING DIAGRAM >

WIRING DIAGRAM

FRONT WIPER AND WASHER SYSTEM

Wiring Diagram

INFOID:000000009132065


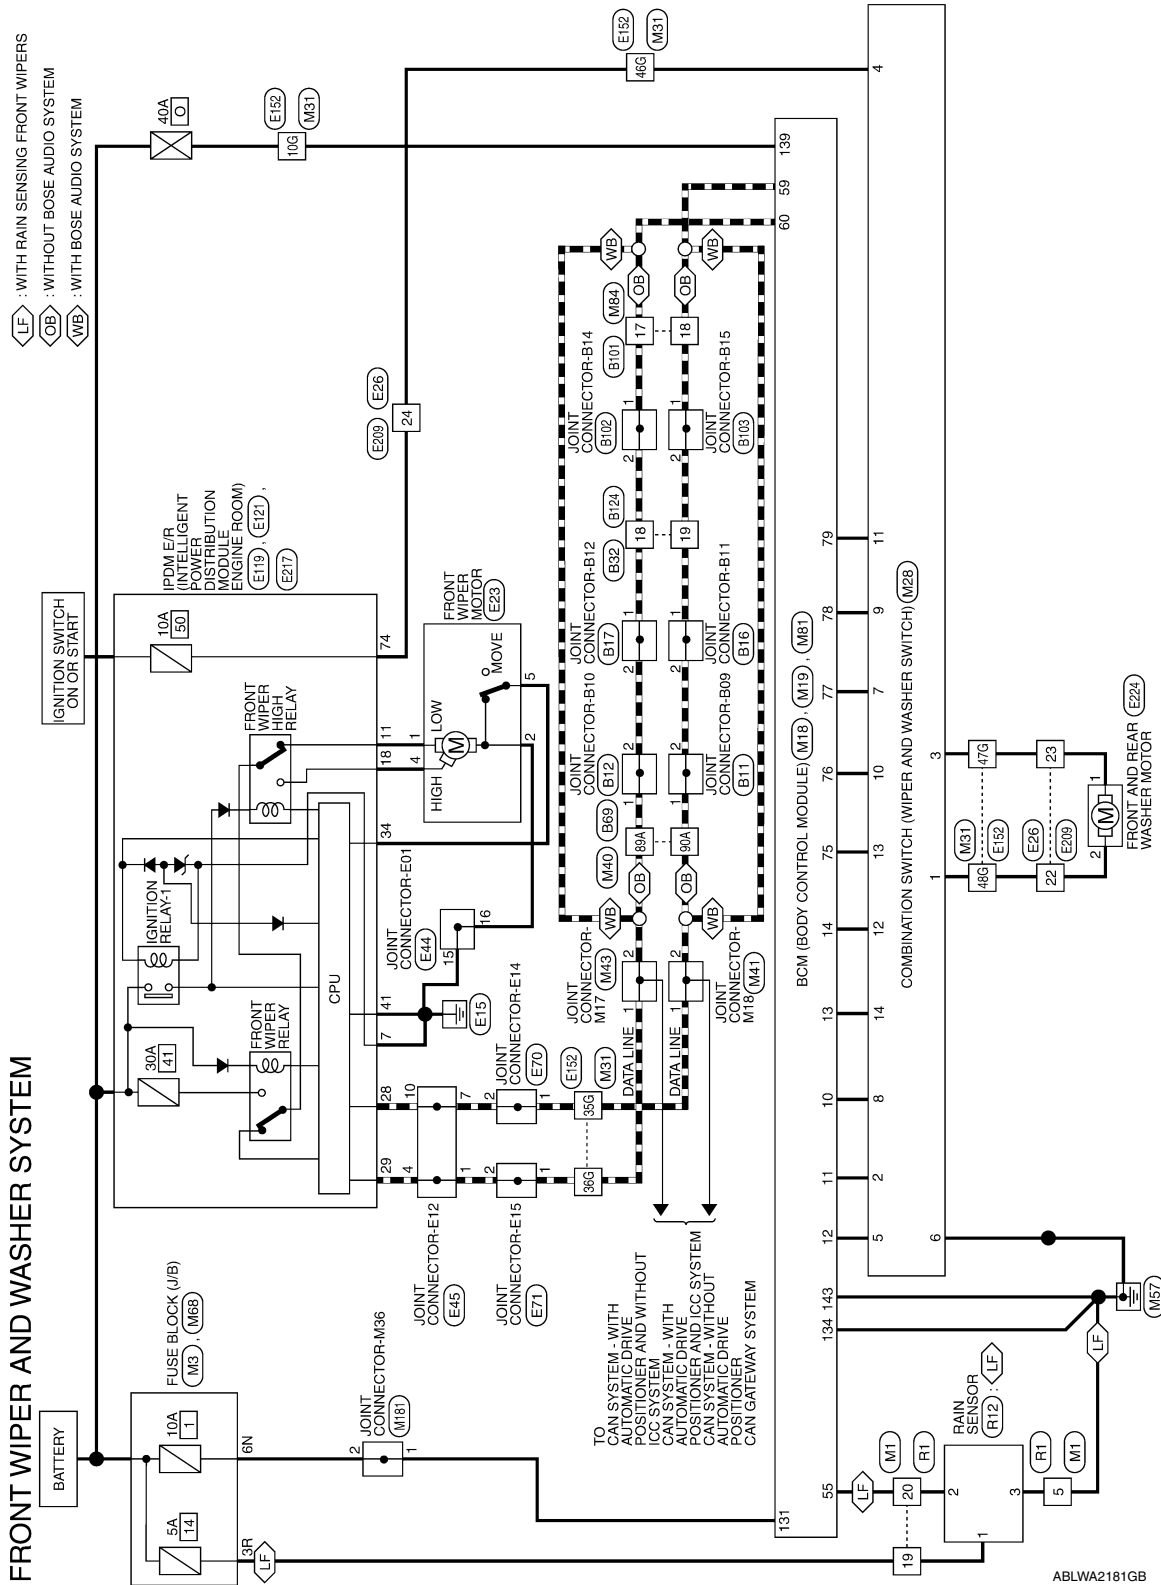


FRONT WIPER AND WASHER SYSTEM


< WIRING DIAGRAM >

FRONT WIPER AND WASHER SYSTEM CONNECTORS

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN

Terminal No.	Color of Wire	Signal Name
5	GR	-
19	G	-
20	BR	-

Terminal No.	Color of Wire	Signal Name
6N	W	-

Terminal No.	Color of Wire	Signal Name
10	P	COMBI SW IN 5
11	P	COMBI SW IN 4
12	V	COMBI SW IN 3
13	W	COMBI SW IN 2
14	P	COMBI SW IN 1

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK

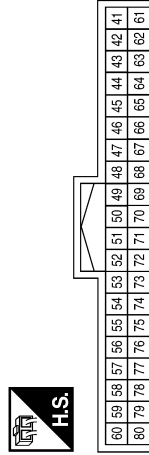

Terminal No.	Color of Wire	Signal Name
55	BR	R SENSOR K-LINE
59	P	CAN-L
60	L	CAN-H
75	BG	COMBI SW OUT 5

Terminal No.	Color of Wire	Signal Name
76	P	COMBI SW OUT 4
77	P	COMBI SW OUT 3
78	W	COMBI SW OUT 2
79	W	COMBI SW OUT 1

ABLIA4620GB


A B C D E F G H I J K L M N O P

WW

FRONT WIPER AND WASHER SYSTEM


< WIRING DIAGRAM >

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	LG	-
2	P	-
3	Y	-
4	Y	-
5	V	-
6	GR	-
7	P	-
8	P	-
9	W	-
10	P	-
11	W	-
12	P	-
13	BG	-
14	W	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

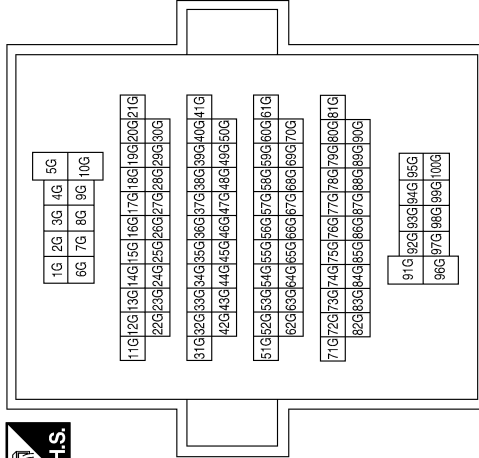

Terminal No.	Color of Wire	Signal Name
10G	W	-
35G	P	-
36G	L	-
46G	Y	-
47G	Y	-
48G	LG	-

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	GRAY

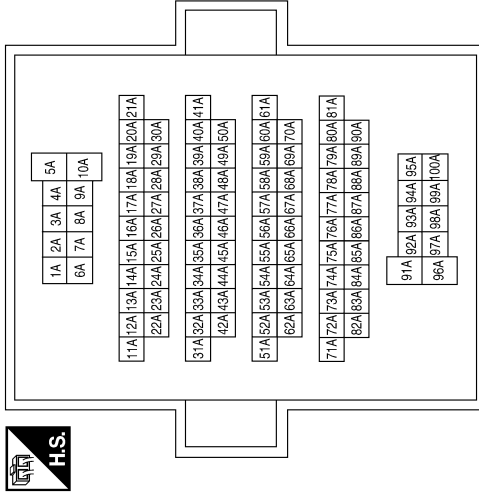

Terminal No.	Color of Wire	Signal Name
89A	L	-
90A	P	-

ABLIA4912GB

FRONT WIPER AND WASHER SYSTEM

< WIRING DIAGRAM >

Connector No.	M68
Connector Name	FUSE BLOCK (J/B)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
3R	G	-

Connector No.	M43
Connector Name	JOINT CONNECTOR-M17
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

Connector No.	M41
Connector Name	JOINT CONNECTOR-M18
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

Connector No.	M181
Connector Name	JOINT CONNECTOR-M36
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	W	-
2	W	-

Connector No.	M84
Connector Name	WIRE TO WIRE
Connector Color	WHITE

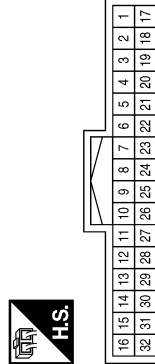

Terminal No.	Color of Wire	Signal Name
17	L	-
18	P	-

Connector No.	M81
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
131	W	BAT BCM FUSE
134	B	GND 2
139	W	BAT POWER F/L
143	B	GND 1

ABLIA4913GB


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WW

FRONT WIPER AND WASHER SYSTEM


< WIRING DIAGRAM >

Connector No.	E44
Connector Name	JOINT CONNECTOR-E01
Connector Color	WHITE

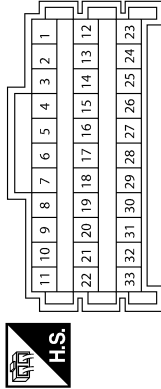

Terminal No.	Color of Wire	Signal Name
15	GR	-
16	B	-

Connector No.	E26
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
22	BR	-
23	V	-
24	SB	-

Connector No.	E23
Connector Name	FRONT WIPER MOTOR
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	B	-
3	-	-
4	L	-
5	GR	-

Connector No.	E71
Connector Name	JOINT CONNECTOR-E15
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

Connector No.	E70
Connector Name	JOINT CONNECTOR-E14
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

Connector No.	E45
Connector Name	JOINT CONNECTOR-E12
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
1	L	-
4	L	-
7	P	-
10	P	-

ABLIA4914GB

FRONT WIPER AND WASHER SYSTEM


< WIRING DIAGRAM >

Connector No.	E121
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
7	B	GND (POWER)
11	Y	FR WIPER LO
18	L	FR WIPER HI

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

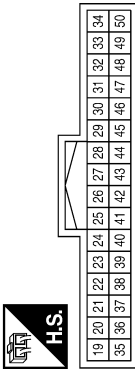

Terminal No.	Color of Wire	Signal Name
28	P	CAN-L
29	L	CAN-H
34	GR	WIPER AUTOSTOP
41	B	GND (SIGNAL)


Connector No.	E209
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
22	L	-
23	G	-
24	R	-

Terminal No.	Color of Wire	Signal Name
10G	P	-
35G	P	-
36G	L	-
46G	SB	-
47G	V	-
48G	BR	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

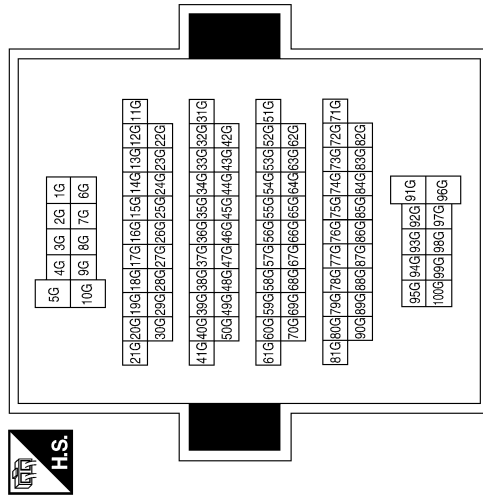

ABLIA4915GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WW

FRONT WIPER AND WASHER SYSTEM


< WIRING DIAGRAM >

Connector No.	B11
Connector Name	JOINT CONNECTOR-B09
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

Connector No.	E224
Connector Name	FRONT AND REAR WASHER MOTOR
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	G	-
2	L	-

Connector No.	E217
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
74	R	WASH MTR

Connector No.	B17
Connector Name	JOINT CONNECTOR-B12
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

Connector No.	B16
Connector Name	JOINT CONNECTOR-B11
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

Connector No.	B12
Connector Name	JOINT CONNECTOR-B10
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

ABLIA3490GB

FRONT WIPER AND WASHER SYSTEM

< WIRING DIAGRAM >


Connector No.	B101
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32

Terminal No.	Color of Wire	Signal Name
17	L	-
18	P	-

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	GRAY

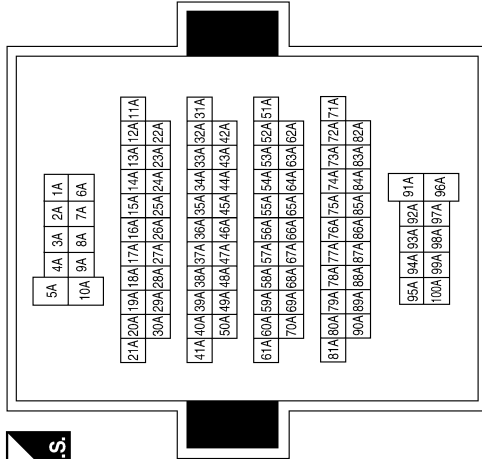

Terminal No.	Color of Wire	Signal Name
89A	L	-
90A	P	-

Connector No.	B103
Connector Name	JOINT CONNECTOR-B15
Connector Color	WHITE



1	2	3	4
---	---	---	---

Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

Connector No.	B32
Connector Name	WIRE TO WIRE
Connector Color	WHITE



16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17

Terminal No.	Color of Wire	Signal Name
18	L	-
19	P	-

Connector No.	B102
Connector Name	JOINT CONNECTOR-B14
Connector Color	WHITE



1	2	3	4
---	---	---	---

Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

ABLIA4916GB

A B C D E F G H I J K M N O P

WW

FRONT WIPER AND WASHER SYSTEM


< WIRING DIAGRAM >

Connector No.	R12
Connector Name	RAIN SENSOR
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	V	-
2	W	-
3	B	-

Connector No.	R1
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
5	B	-
19	V	-
20	W	-

Connector No.	B124
Connector Name	WIRE TO WIRE
Connector Color	WHITE

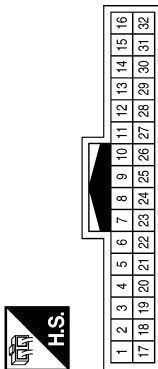

Terminal No.	Color of Wire	Signal Name
18	L	-
19	P	-

ABLIA4917GB


REAR WIPER AND WASHER SYSTEM

< WIRING DIAGRAM >

REAR WIPER AND WASHER SYSTEM

Wiring Diagram

INFOID:000000009132066

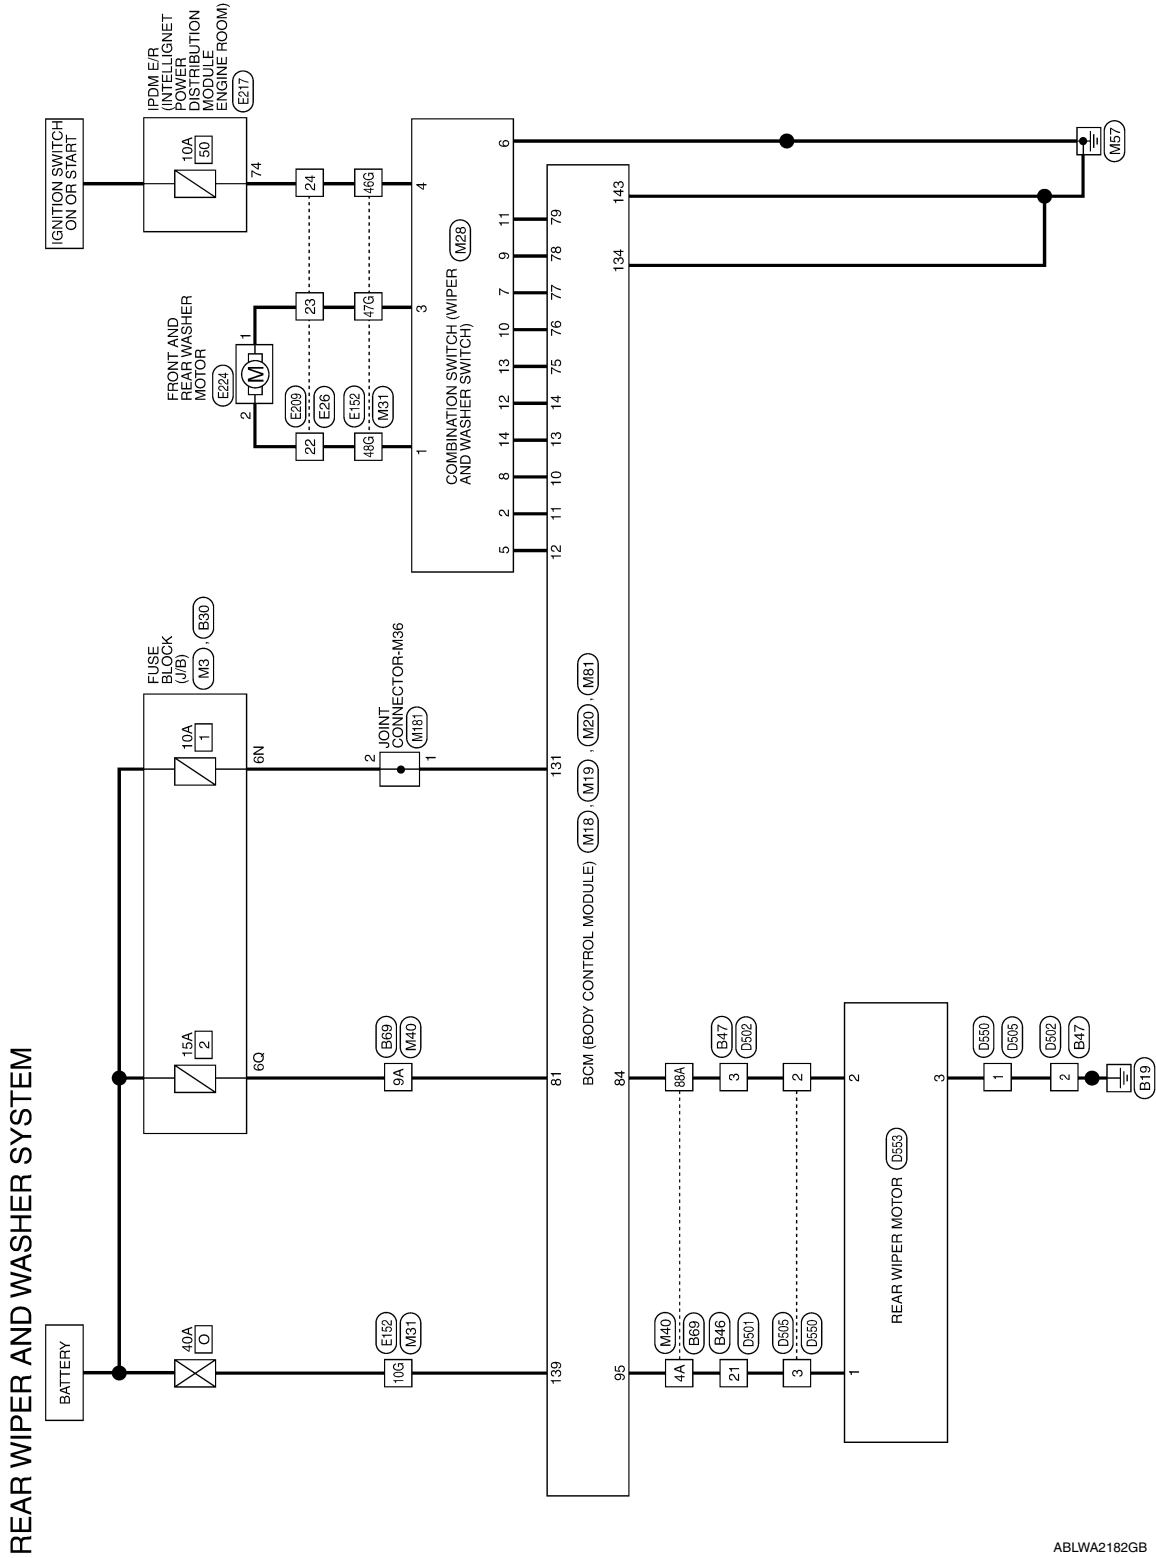

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


WW

REAR WIPER AND WASHER SYSTEM

< WIRING DIAGRAM >


REAR WIPER AND WASHER SYSTEM CONNECTORS

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
6N	W	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN




Terminal No.	Color of Wire	Signal Name
10	P	COMBI SW IN 5
11	P	COMBI SW IN 4
12	V	COMBI SW IN 3
13	W	COMBI SW IN 2
14	P	COMBI SW IN 1

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
75	BG	COMBI SW OUT 5
76	P	COMBI SW OUT 4
77	P	COMBI SW OUT 3
78	W	COMBI SW OUT 2
79	W	COMBI SW OUT 1

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
81	L	BAT REAR WIPER FUSE
84	BR	R WIPER AUTOSTOP SW
95	V	REAR WIPER OUT

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	LG	-
2	P	-
3	Y	-
4	Y	-

Terminal No.	Color of Wire	Signal Name
5	V	-
6	GR	-
7	P	-
8	P	-
9	W	-
10	P	-
11	W	-
12	P	-
13	BG	-
14	W	-

REAR WIPER AND WASHER SYSTEM


< WIRING DIAGRAM >

Connector No.	M81
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
131	W	BAT BCM FUSE
134	B	GND 2
139	W	BAT POWER F/L
143	B	GND 1

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	GRAY

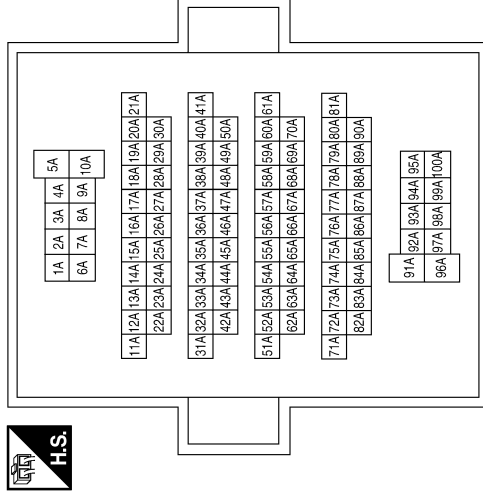

Terminal No.	Color of Wire	Signal Name
4A	V	-
9A	L	-
88A	BR	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

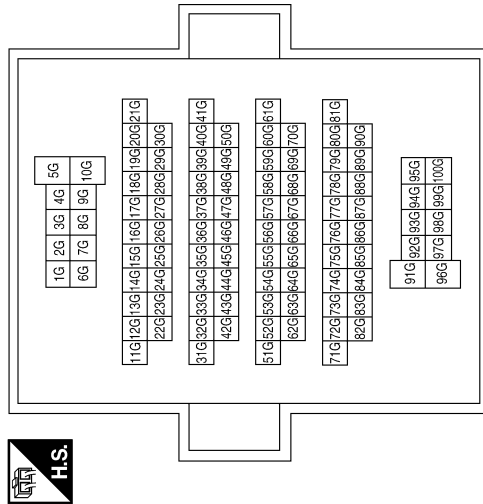

Terminal No.	Color of Wire	Signal Name
10G	W	-
46G	Y	-
47G	Y	-
48G	LG	-

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

ABLIA4918GB

REAR WIPER AND WASHER SYSTEM


< WIRING DIAGRAM >

Connector No.	M181
Connector Name	JOINT CONNECTOR-M36
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	W	-
2	W	-

Connector No.	E26
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
22	BR	-
23	V	-
24	SB	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

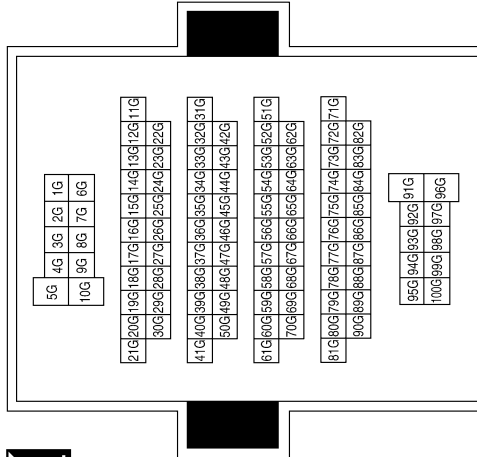

Terminal No.	Color of Wire	Signal Name
10G	P	-
46G	SB	-
47G	V	-
48G	BR	-

Connector No.	E209
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
22	L	-
23	G	-
24	R	-

REAR WIPER AND WASHER SYSTEM

< WIRING DIAGRAM >

Connector No.	B30
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
6Q	P	-

Connector No.	E224
Connector Name	FRONT AND REAR WASHER MOTOR
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	G	-
2	L	-

Connector No.	E217
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
74	R	WASH MTR

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	GRAY

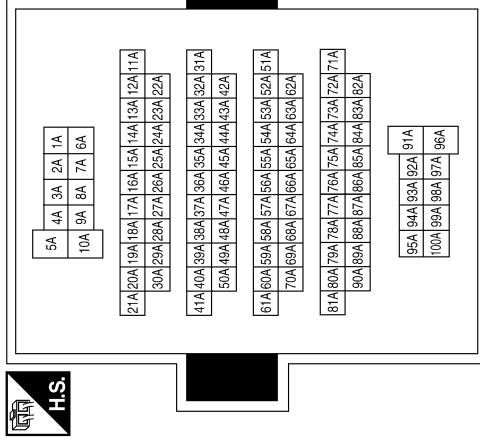


Terminal No.	Color of Wire	Signal Name
4A	G	-
9A	P	-
88A	BG	-

Connector No.	B47
Connector Name	WIRE TO WIRE
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
2	B	-
3	BG	-

Connector No.	B46
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
21	G	-

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WW

ABLIA4919GB

REAR WIPER AND WASHER SYSTEM


< WIRING DIAGRAM >

Connector No.	D505
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	B	-
2	LG	-
3	W	-

Connector No.	D502
Connector Name	WIRE TO WIRE
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
2	B	-
3	LG	-

Connector No.	D501
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
21	W	-

Connector No.	D553
Connector Name	REAR WIPER MOTOR
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W	-
2	LG	-
3	B	-

Connector No.	D550
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B	-
2	LG	-
3	W	-

ABLIA3497GB

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000009132067

OVERALL SEQUENCE

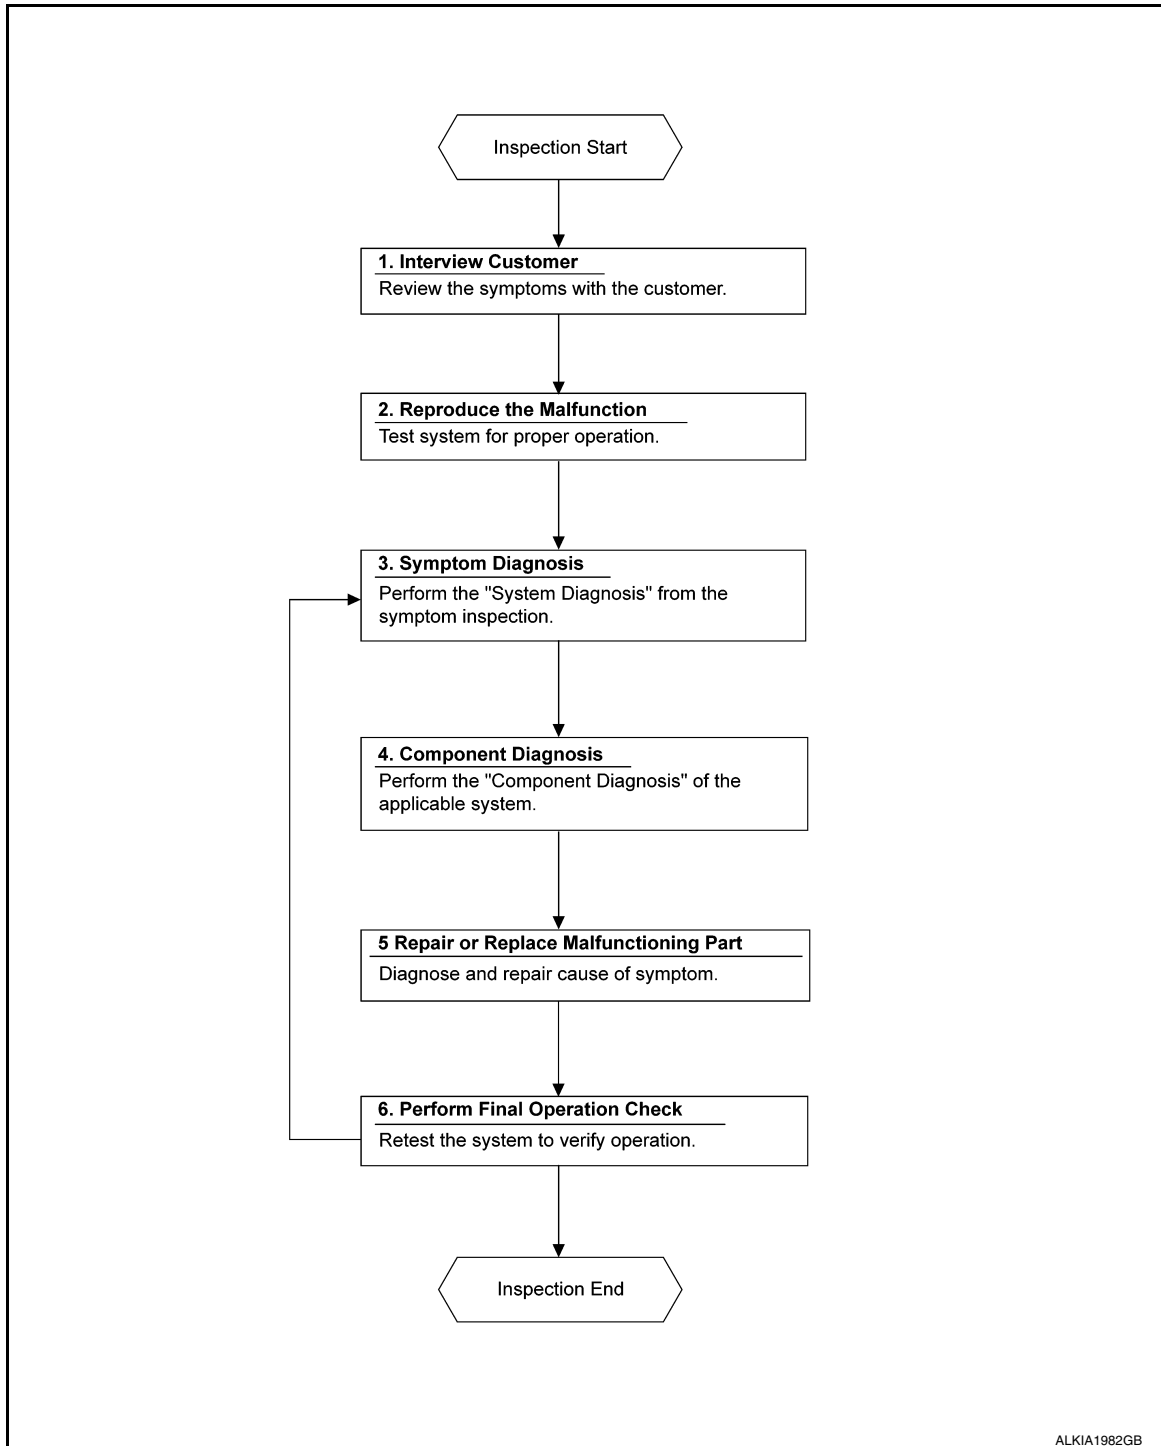

DETAILED FLOW

1. OBTAIN INFORMATION ABOUT SYMPTOM

Interview the customer to obtain as much information as possible about the conditions and environment under which the malfunction occurred.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WW

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

>> GO TO 2.

2. CONFIRM THE SYMPTOM

Check the malfunction on the vehicle that the customer describes.
Inspect the relation of the symptoms and the condition when the symptoms occur.

>> GO TO 3.

3. IDENTIFY THE MALFUNCTIONING SYSTEM WITH SYMPTOM DIAGNOSIS

Use Symptom diagnosis from the symptom inspection result in step 2 and then identify where to start performing the diagnosis based on possible causes and symptoms. Refer to [WW-56. "Symptom Table"](#).

>> GO TO 4.

4. PERFORM THE COMPONENT DIAGNOSIS OF THE OF THE APPLICABLE SYSTEM

Perform the diagnosis with Component diagnosis of the applicable system.

>> GO TO 5.

5. REPAIR OR REPLACE THE MALFUNCTIONING PARTS

Repair or replace the specified malfunctioning parts.

>> GO TO 6.

6. FINAL CHECK

Check that malfunctions are not reproduced when obtaining the malfunction information from the customer, referring to the symptom inspection result in step 2.

Are the malfunctions corrected?

YES >> Inspection End.

NO >> GO TO 3.

WIPER AND WASHER FUSE

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

WIPER AND WASHER FUSE

Description

INFOID:000000009132068

Component	Capacity	Fuse No.	Location
Front wiper motor	30 A	41	IPDM E/R
Front and rear washer motor	10 A	1	Fuse block (J/B)

Diagnosis Procedure

INFOID:000000009132069

1. CHECK FUSES

Check that the following fuses are not blown.

Component	Capacity	Fuse No.	Location
Front wiper motor	30 A	41	IPDM E/R
Front and rear washer motor	10 A	1	Fuse block (J/B)

Is the fuse blown?

- YES >> Replace the fuse after repairing the affected circuit.
- NO >> Inspection End.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

FRONT WIPER MOTOR LO CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

FRONT WIPER MOTOR LO CIRCUIT

Component Function Check

INFOID:000000009132070

1. CHECK FRONT WIPER LO OPERATION

1. Select FRONT WIPER of IPDM E/R active test item.
2. With operating the test item, check front wiper operation.

Lo : Front wiper (LO) operation

Off : Stop the front wiper.

Is front wiper (LO) operation normal?

- YES >> Front wiper motor LO circuit is normal.
 NO >> Refer to [WW-44. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009132071

Regarding Wiring Diagram information, refer to [WW-26. "Wiring Diagram"](#).

1. CHECK FRONT WIPER MOTOR (LO) OUTPUT VOLTAGE

1. Turn ignition switch OFF.
2. Disconnect front wiper motor connector.
3. Turn ignition switch ON.
4. Select FRONT WIPER of IPDM E/R active test item.
5. With operating the test item, check voltage between front wiper motor harness connector and ground.

(+)		(-)	Condition	Voltage (Approx.)
Connector	Terminal			
E23	1	Ground	FRONT WIPER	Battery voltage
				0 V

Is the inspection result normal?

- YES >> Replace front wiper motor. Refer to [WW-73. "Removal and Installation"](#).
 NO >> GO TO 2.

2. CHECK FRONT WIPER MOTOR (LO) CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front wiper motor harness connector.

IPDM E/R		Front wiper motor		Continuity
Connector	Terminal	Connector	Terminal	
E121	11	E23	1	Yes

4. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E121	11		No

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-32. "Removal and Installation"](#).
 NO >> Repair or replace harness.

FRONT WIPER MOTOR HI CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

FRONT WIPER MOTOR HI CIRCUIT

Component Function Check

INFOID:000000009132072

1. CHECK FRONT WIPER HI OPERATION

1. Select FRONT WIPER of IPDM E/R active test item.
2. With operating the test item, check the front wiper operation.

Hi : Front wiper (HI) operation

Off : Stop the front wiper.

Is the inspection result normal?

- YES >> Front wiper motor HI circuit is normal.
NO >> Refer to [WW-45. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009132073

Regarding Wiring Diagram information, refer to [WW-26. "Wiring Diagram"](#).

1. CHECK FRONT WIPER MOTOR (HI) OUTPUT VOLTAGE

1. Turn ignition switch OFF.
2. Disconnect front wiper motor connector.
3. Turn ignition switch ON.
4. Select FRONT WIPER of IPDM E/R active test item.
5. With operating the test item, check voltage between front wiper motor harness connector and ground.

(+)		(-)	Condition		Voltage (Approx.)
Connector	Terminal				
E23	4	Ground	FRONT WIPER	Hi	Battery voltage
				Off	0 V

Is the inspection result normal?

- YES >> Replace front wiper motor. Refer to [WW-73. "Removal and Installation"](#).
NO >> GO TO 2.

2. CHECK FRONT WIPER MOTOR (HI) CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front wiper motor harness connector.

IPDM E/R		Front wiper motor		Continuity
Connector	Terminal	Connector	Terminal	
E121	18	E23	4	Yes

4. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E121	18		No

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer [PCS-32. "Removal and Installation"](#).
NO >> Repair or replace harness.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

FRONT WIPER STOP POSITION SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

FRONT WIPER STOP POSITION SIGNAL CIRCUIT

Component Function Check

INFOID:000000009132074

1. CHECK FRONT WIPER STOP POSITION SIGNAL

1. Select WIP AUTO STOP of IPDM E/R data monitor item.
2. Operate the front wiper.
3. With the front wiper operation, check the monitor status.

Monitor item	Condition		Monitor status
WIP AUTO STOP	Front wiper motor	Stop position	STOP P
		Except stop position	ACT P

Is the inspection result normal?

- YES >> Front wiper stop position signal circuit is normal.
NO >> Refer to [WW-46, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009132075

Regarding Wiring Diagram information, refer to [WW-26, "Wiring Diagram"](#).

1. CHECK IPDM E/R OUTPUT VOLTAGE

1. Turn ignition switch OFF.
2. Disconnect front wiper motor connector.
3. Turn ignition switch ON.
4. Check voltage between front wiper motor harness connector and ground.

(+)		(-)	Voltage (Approx.)
Front wiper motor			
Connector	Terminal	Ground	12 V
E23	5		

Is the inspection result normal?

- YES >> Replace front wiper motor. Refer to [WW-73, "Removal and Installation"](#).
NO >> GO TO 2.

2. CHECK FRONT WIPER STOP POSITION SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front wiper motor harness connector.

IPDM E/R		Front wiper motor		Continuity
Connector	Terminal	Connector	Terminal	
E119	34	E23	5	Yes

4. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E119	34		No

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-32, "Removal and Installation"](#).
NO >> Repair or replace harness.

FRONT WIPER MOTOR GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

FRONT WIPER MOTOR GROUND CIRCUIT

Diagnosis Procedure

INFOID:000000009132076

Regarding Wiring Diagram information, refer to [WW-26. "Wiring Diagram"](#).

1. CHECK FRONT WIPER MOTOR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect front wiper motor connector.
3. Check continuity between front wiper motor harness connector and ground.

Front wiper motor		Ground	Continuity
Connector	Terminal		Yes
E23	2		Yes

Is the inspection result normal?

- YES >> Inspection End.
NO >> Repair or replace harness.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

WASHER MOTOR CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

WASHER MOTOR CIRCUIT

Diagnosis Procedure

INFOID:000000009132077

Regarding Wiring Diagram information, refer to [WW-26. "Wiring Diagram"](#).

1. CHECK FRONT WASHER MOTOR FUSE

1. Turn the ignition switch OFF.
2. Check the following fuse is not blown.

Component	Capacity	Fuse No.	Location
Front washer motor	10A	1	Fuse block (J/B)

Is the fuse blown?

- YES >> Replace the fuse after repairing the affected circuit.
NO >> GO TO 2.

2. CHECK FRONT AND REAR WASHER MOTOR POWER SUPPLY

1. Disconnect the front and rear washer motor.
2. Turn ignition switch ON.
3. Check voltage between front washer motor harness connector and ground.

Terminals		Washer switch	Voltage (Approx.)
(+)	(-)		
Front and rear washer motor		ON	Battery voltage
Connector	Terminal		
E224	1		
		OFF	0 V

Front washer operation

Terminals		Washer switch	Voltage (Approx.)
(+)	(-)		
Front and rear washer motor		ON	Battery voltage
Connector	Terminal		
E224	2		
		OFF	0 V

Rear washer operation

Is the inspection result normal?

- YES >> Inspection End.
NO >> GO TO 3.

3. CHECK WASHER SWITCH

Check washer switch. Refer to [WW-51. "Component Inspection"](#).

Is the inspection result normal?

- YES >> Repair harness between fuse and the front and rear washer motor.
NO >> Replace washer switch. Refer to [WW-75. "Removal and Installation"](#).

RAIN SENSOR

< DTC/CIRCUIT DIAGNOSIS >

RAIN SENSOR

Component Function Check

INFOID:000000009132078

1. CHECK FRONT WIPER AUTO OPERATION

1. Clean rain sensor detection area of windshield fully.
2. When the front wiper switch is turned to AUTO position, front wiper operates once regardless of a rainy condition.

Is the inspection result normal?

- YES >> Rain sensor circuit is normal.
NO >> Refer to [WW-49, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009132079

Regarding Wiring Diagram information, refer to [WW-26, "Wiring Diagram"](#).

1. CHECK RAIN SENSOR FUSE

1. Turn ignition switch OFF.
2. Check the following fuse.

Unit	Location	No.	Amps
Rain sensor	Fuse block (J/B)	14	5 A

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace the fuse after repairing the applicable circuit.

2. CHECK RAIN SENSOR POWER SUPPLY

1. Disconnect rain sensor connector.
2. Check voltage between rain sensor harness connector and ground.

(+)		(-)	Voltage (Approx.)
Rain sensor			
Connector	Terminal	Ground	Battery voltage
R12	1		

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace harness.

3. CHECK RAIN SENSOR GROUND CIRCUIT

Check continuity between rain sensor harness connector and ground.

Rain sensor		Ground	Continuity
Connector	Terminal		
R12	3		Yes

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair or replace harness.

4. CHECK RAIN SENSOR SIGNAL


1. Connect rain sensor connector.
2. Turn ignition switch ON.
3. Check signal between BCM harness connector and ground with oscilloscope.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WW

RAIN SENSOR

< DTC/CIRCUIT DIAGNOSIS >

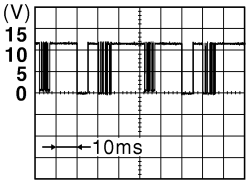(+)		(-)	Condition	Signal (Reference value)
BCM				
Connector	Terminal			
M19	55	Ground	Ignition switch ON	 <p>JPMIA0156GB Approx. 8.7V</p>

Is the inspection result normal?

- YES >> Replace rain sensor. Refer to [WW-74, "Removal and Installation"](#).
 NO >> GO TO 5.

5.CHECK RAIN SENSOR SIGNAL CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect BCM connector and rain sensor connector.
3. Check continuity between BCM harness connector and rain sensor harness connector.

BCM		Rain sensor		Continuity
Connector	Terminal	Connector	Terminal	
M19	55	R12	2	Yes

Is the inspection result normal?

- YES >> GO TO 6.
 NO >> Repair or replace harness.

6.CHECK RAIN SENSOR SIGNAL CIRCUIT FOR SHORT

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M19	55		No

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-79, "Removal and Installation"](#).
 NO >> Repair or replace harness.

WASHER SWITCH


< DTC/CIRCUIT DIAGNOSIS >

WASHER SWITCH

Description

INFOID:000000009132080

- Washer switch is integrated with the combination switch.
- Combination switch (wiper and washer switch) switches polarity between front washer operating and rear washer operating to supply power and ground to the front and rear washer motor.

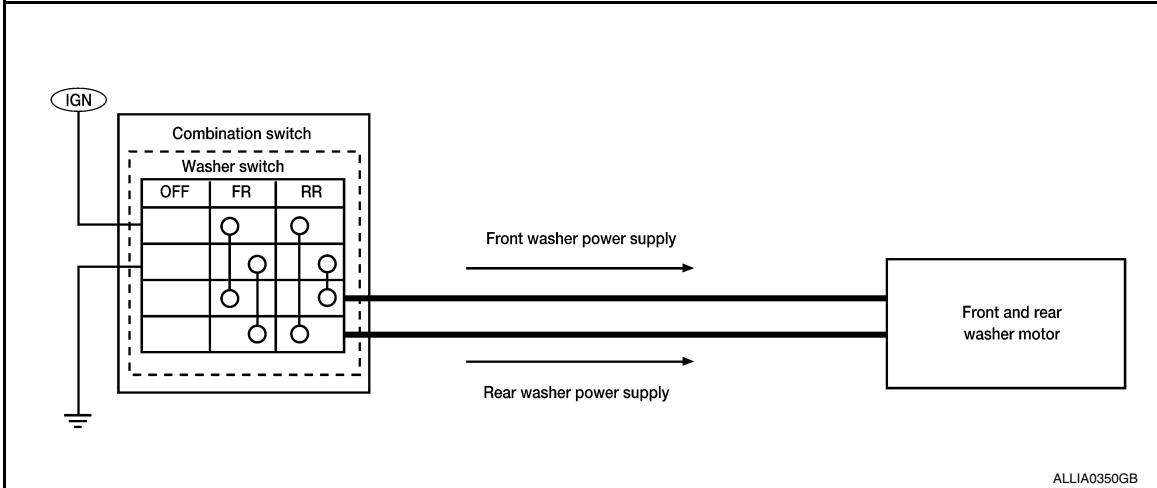

Component Inspection

INFOID:000000009132081

1. CHECK FRONT WASHER SWITCH


1. Turn the ignition switch OFF.
2. Disconnect combination switch (wiper and washer switch).
3. Check continuity between the combination switch (wiper and washer switch) terminals.

A: Terminal 4

B: Terminal 6

C: Terminal 3

D: Terminal 1

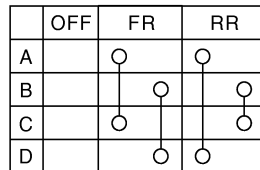

JPLIA0164GB

A
B
C
D
E
F
G
H
I
J
K

WW

M
N
O
P

Combination switch (wiper and washer switch)		Condition	Continuity
Terminal			
1	6	Front washer switch ON	Yes
3	4		

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace combination switch (wiper and washer switch). Refer to [WW-75, "Removal and Installation"](#).


2. CHECK REAR WASHER SWITCH

1. Check continuity between the combination switch (wiper and washer switch) terminals.

WASHER SWITCH

< DTC/CIRCUIT DIAGNOSIS >

- A: Terminal 4
- B: Terminal 6
- C: Terminal 3
- D: Terminal 1

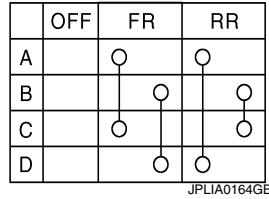

Combination switch (wiper and washer switch)		Condition	Continuity
Terminal			
1	4	Rear washer switch ON	Yes
6	3		

Is the inspection result normal?

- YES >> Wiper and washer switch is normal.
- NO >> Replace combination switch (wiper and washer switch). Refer to [WW-75, "Removal and Installation"](#).

REAR WIPER MOTOR CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

REAR WIPER MOTOR CIRCUIT

Component Function Check

INFOID:000000009132082

1. CHECK REAR WIPER ON OPERATION

1. Select RR WIPER of BCM active test item.
2. With operating the test item, check rear wiper operation.

On : Rear wiper ON operation

Off : Stop the rear wiper.

Is the inspection result normal?

- YES >> Rear wiper motor circuit is normal.
NO >> Refer to [WW-53. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009132083

Regarding Wiring Diagram information, refer to [WW-35. "Wiring Diagram"](#).

1. CHECK REAR WIPER MOTOR OUTPUT VOLTAGE

1. Turn ignition switch OFF.
2. Disconnect rear wiper motor connector.
3. Turn ignition switch ON.
4. Select RR WIPER of BCM active test item.
5. With operating the test item, check voltage between rear wiper motor harness connector and ground.

(+)		(-)	Condition	Voltage (Approx.)	
Connector	Terminal				
D553	1	Ground	REAR WIPER	On	12 V
			Off	0 V	

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK REAR WIPER MOTOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between BCM harness connector and rear wiper motor harness connector.

BCM		Rear wiper motor		Continuity
Connector	Terminal	Connector	Terminal	
M20	95	D553	1	Yes

4. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M20	95		No

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-79. "Removal and Installation"](#).
NO >> Repair or replace harness.

3. CHECK REAR WIPER MOTOR GROUND OPEN CIRCUIT

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

REAR WIPER MOTOR CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Check continuity between rear wiper motor harness connector and ground.

Rear wiper motor		Ground	Continuity
Connector	Terminal		
D553	3		Yes

Is the inspection result normal?

- YES >> Replace rear wiper motor. Refer to [WW-78, "Removal and Installation"](#).
NO >> Repair or replace harness.

REAR WIPER STOP POSITION SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

REAR WIPER STOP POSITION SIGNAL CIRCUIT

Component Function Check

INFOID:000000009132084

1. CHECK REAR WIPER STOP POSITION SIGNAL

1. Select WIPER of BCM data monitor item.
2. Operate the rear wiper.
3. Check that RR WIPER STOP changes to On and Off linked with the wiper operation.

Monitor item	Condition		Monitor status
RR WIPER STOP	Rear wiper motor	Stop position	On
		Except stop position	Off

Is the inspection result normal?

- YES >> Rear wiper stop position signal circuit is normal.
NO >> Refer to [WW-55, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009132085

Regarding Wiring Diagram information, refer to [WW-35, "Wiring Diagram"](#).

1. CHECK BCM OUTPUT VOLTAGE

1. Turn ignition switch OFF.
2. Disconnect rear wiper motor connector.
3. Turn ignition switch ON.
4. Check voltage between rear wiper motor harness connector and ground.

(+)		(-)	Voltage (Approx.)
Rear wiper motor			
Connector	Terminal	Ground	12 V
D553	2		

Is the inspection result normal?

- YES >> Replace rear wiper motor.
NO >> GO TO 2.

2. CHECK REAR WIPER STOP POSITION SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between BCM harness connector and rear wiper motor harness connector.

BCM		Rear wiper motor		Continuity
Connector	Terminal	Connector	Terminal	
M20	84	D553	2	Yes

4. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M20	84		No

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-79, "Removal and Installation"](#).
NO >> Repair or replace harness.

WIPER AND WASHER SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

WIPER AND WASHER SYSTEM SYMPTOMS

Symptom Table

INFOID:000000009132086

Symptom	Probable malfunction location	Inspection item	
Front wiper does not operate in . . .	HI only	<ul style="list-style-type: none"> Combination switch (wiper and washer switch) Harness between combination switch and BCM BCM 	Combination switch (wiper and washer switch) Refer to BCS-78, "Symptom Table"
		<ul style="list-style-type: none"> IPDM E/R Harness between IPDM E/R and front wiper motor Front wiper motor 	Front wiper motor (HI) circuit Refer to WW-45, "Component Function Check"
		Front wiper request signal <ul style="list-style-type: none"> BCM IPDM E/R 	BCM DATA MONITOR "FR WIPER HI" Refer to WW-20, "WIPER : CONSULT Function (BCM - WIPER)" .
	LO only	<ul style="list-style-type: none"> Combination switch Harness between combination switch and BCM BCM 	Combination switch (wiper and washer switch) Refer to BCS-78, "Symptom Table"
		<ul style="list-style-type: none"> IPDM E/R Harness between IPDM E/R and front wiper motor Front wiper motor 	Front wiper motor (LO) circuit Refer to WW-44, "Component Function Check"
		Front wiper request signal <ul style="list-style-type: none"> BCM IPDM E/R 	BCM DATA MONITOR "FR WIPER LOW" Refer to WW-20, "WIPER : CONSULT Function (BCM - WIPER)" .
	AUTO only	<ul style="list-style-type: none"> Combination switch Harness between combination switch and BCM BCM 	Combination switch (wiper and washer switch) Refer to BCS-78, "Symptom Table"
		<ul style="list-style-type: none"> Rain sensor Harness between rain sensor and BCM BCM 	Rain sensor Refer to WW-49, "Component Function Check"
	HI, LO and AUTO	SYMPTOM DIAGNOSIS "FRONT WIPER DOES NOT OPERATE" Refer to WW-60, "Diagnosis Procedure"	

WIPER AND WASHER SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

Symptom	Probable malfunction location	Inspection item	
Front wiper does not stop in . . .	HI only	<ul style="list-style-type: none"> • Combination switch • BCM 	Combination switch (wiper and washer switch) Refer to BCS-78, "Symptom Table"
		Front wiper request signal <ul style="list-style-type: none"> • BCM • IPDM E/R 	BCM DATA MONITOR "FR WIPER HI" Refer to WW-20, "WIPER : CONSULT Function (BCM - WIPER)" .
		IPDM E/R	—
	LO only	<ul style="list-style-type: none"> • Combination switch • BCM 	Combination switch (wiper and washer switch) Refer to BCS-78, "Symptom Table"
		Front wiper request signal <ul style="list-style-type: none"> • BCM • IPDM E/R 	BCM DATA MONITOR "FR WIPER LOW" Refer to WW-20, "WIPER : CONSULT Function (BCM - WIPER)" .
		IPDM E/R	—
	AUTO only	<ul style="list-style-type: none"> • Combination switch • BCM 	Combination switch (wiper and washer switch) Refer to BCS-78, "Symptom Table"
		<ul style="list-style-type: none"> • Rain sensor • Harness between rain sensor and BCM • BCM 	Rain sensor Refer to WW-49, "Component Function Check"
	Front wiper does not operate normally in . . .	Sensitivity adjustment cannot be performed.	<ul style="list-style-type: none"> • Combination switch • Harness between combination switch and BCM • BCM
BCM			—
Auto wiping operation does not operate		Check that the wiper setting is auto wiping operation Refer to BCS-18, "WIPER : CONSULT Function (BCM - WIPER)"	
Wiper is not linked to the washer operation.		<ul style="list-style-type: none"> • Combination switch • Harness between combination switch and BCM • BCM 	Combination switch (wiper and washer switch) Refer to BCS-78, "Symptom Table"
		BCM	—
Does not return to stop position. [Repeatedly operates for 10 seconds and then stops for 20 seconds. (Fail-safe)]	<ul style="list-style-type: none"> • IPDM E/R • Harness between IPDM E/R and front wiper motor • Front wiper motor 	Front wiper stop position signal circuit Refer to WW-46, "Component Function Check"	

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

WIPER AND WASHER SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

Symptom		Probable malfunction location	Inspection item
Rear wiper does not operate in. . .	ON only	<ul style="list-style-type: none"> • Combination switch • Harness between combination switch and BCM • BCM 	Combination switch (wiper and washer switch) Refer to BCS-78, "Symptom Table"
	INT only	<ul style="list-style-type: none"> • Combination switch • Harness between combination switch and BCM • BCM 	Combination switch (wiper and washer switch) Refer to BCS-78, "Symptom Table"
	ON and INT	<ul style="list-style-type: none"> • Combination switch • Harness between combination switch and BCM • BCM 	Combination switch (wiper and washer switch) Refer to BCS-78, "Symptom Table"
		<ul style="list-style-type: none"> • BCM • Harness between rear wiper motor and BCM • Harness between rear wiper motor and ground • Rear wiper motor 	Rear wiper motor circuit Refer to WW-53, "Component Function Check"
Rear wiper does not stop in. . .	ON only	<ul style="list-style-type: none"> • Combination switch • BCM 	Combination switch (wiper and washer switch) Refer to BCS-78, "Symptom Table"
	INT only	<ul style="list-style-type: none"> • Combination switch • BCM 	Combination switch (wiper and washer switch) Refer to BCS-78, "Symptom Table"
Rear wiper does not operate normally in. . .	Wiper is not linked to the washer operation.	<ul style="list-style-type: none"> • Combination switch • Harness between rear wiper motor and BCM • BCM 	Combination switch (wiper and washer switch) Refer to BCS-78, "Symptom Table"
		BCM	—
	Rear wiper does not return to the stop position. [Stops after a five-second operation. (Fail-safe)]	<ul style="list-style-type: none"> • BCM • Harness between rear wiper motor and BCM • Rear wiper motor 	Rear wiper stop position signal circuit Refer to WW-55, "Component Function Check"
Washer motor does not operate.	Washer motor does not operate when washing the windshield.	<ul style="list-style-type: none"> • Combination switch (wiper and washer switch) • Harness between combination switch (wiper and washer switch) and BCM • BCM 	Combination switch (wiper and washer switch) Refer to BCS-78, "Symptom Table"
		<ul style="list-style-type: none"> • Harness between combination switch (wiper and washer switch) and washer motor • Washer motor 	Washer motor circuit Refer to WW-48, "Diagnosis Procedure"

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

NORMAL OPERATING CONDITION

Description

INFOID:000000009132087

FRONT WIPER MOTOR PROTECTION FUNCTION

- IPDM E/R may stop the front wiper to protect the front wiper motor if any obstruction (operation resistance) such as a large amount of snow is detected during the front wiper operation.
- At that time turn OFF the front wiper and remove the foreign object. Then wait for approximately 20 seconds or more and reactivate the front wiper. The wiper will operate normally.

REAR WIPER MOTOR PROTECTION FUNCTION

- BCM may stop the rear wiper to protect the rear wiper motor when the rear wiper is stopped for 5 seconds or more due to a snowfall.
- The rear wiper operates normally one minute after the obstacles are removed with the rear wiper OFF.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

FRONT WIPER DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

FRONT WIPER DOES NOT OPERATE

Description

INFOID:000000009132088

The front wiper does not operate under any operation conditions.

Diagnosis Procedure

INFOID:000000009132089

1. CHECK WIPER RELAY OPERATION

CONSULT ACTIVE TEST

1. Select "FRONT WIPER" of IPDM E/R active test item.
2. When operating the test item, check front wiper operation.

Lo : Front wiper LO operation

Hi : Front wiper HI operation

Off : Stop the front wiper.

Is front wiper operating normally?

YES >> GO TO 5.

NO >> GO TO 2.

2. CHECK FRONT WIPER MOTOR FUSE

1. Turn ignition switch OFF.
2. Check the following fuse.

Unit	Location	No.	Capacity
Front wiper motor	IPDM E/R	41	30 A

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the fuse after repairing the applicable circuit.

3. CHECK FRONT WIPER MOTOR GROUND CIRCUIT

Check front wiper motor ground circuit. Refer to [WW-47, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

4. CHECK FRONT WIPER MOTOR INPUT VOLTAGE

CONSULT ACTIVE TEST

1. Turn ignition switch OFF.
2. Disconnect front wiper motor connector.
3. Turn ignition switch ON.
4. Select "FRONT WIPER" of IPDM E/R active test item.
5. With operating the test item, check voltage between front wiper motor harness connector and ground.

(+)		(-)	Condition	Voltage (Approx.)	
Connector	Terminal				
E23	1	Ground	FRONT WIPER	Lo	Battery voltage
			FRONT WIPER	Off	0 V
	4		FRONT WIPER	Hi	Battery voltage
			FRONT WIPER	Off	0 V

Is the inspection result normal?

YES >> Replace front wiper motor.

NO >> Replace IPDM E/R.

FRONT WIPER DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

5. CHECK FRONT WIPER REQUEST SIGNAL INPUT

CONSULT DATA MONITOR

1. Select "FR WIP REQ" of IPDM E/R data monitor item.
2. Switch the front wiper switch to HI and LO.
3. With operating the front wiper switch, check the status of "FR WIP REQ".

Monitor item	Condition		Monitor status
FR WIP REQ	Front wiper switch HI	On	Hi
		Off	Stop
	Front wiper switch LO	On	Low
		Off	Stop

Is the inspection result normal?

YES >> Replace IPDM E/R.

NO >> GO TO 6.

6. CHECK COMBINATION SWITCH

Perform the inspection of the combination switch. Refer to [BCS-78. "Symptom Table"](#).

Is combination switch normal?

YES >> Replace BCM. Refer to [BCS-79. "Removal and Installation"](#).

NO >> Repair or replace the applicable parts.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

WASHER TANK


< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION

WASHER TANK

Exploded View

INFOID:000000009132090

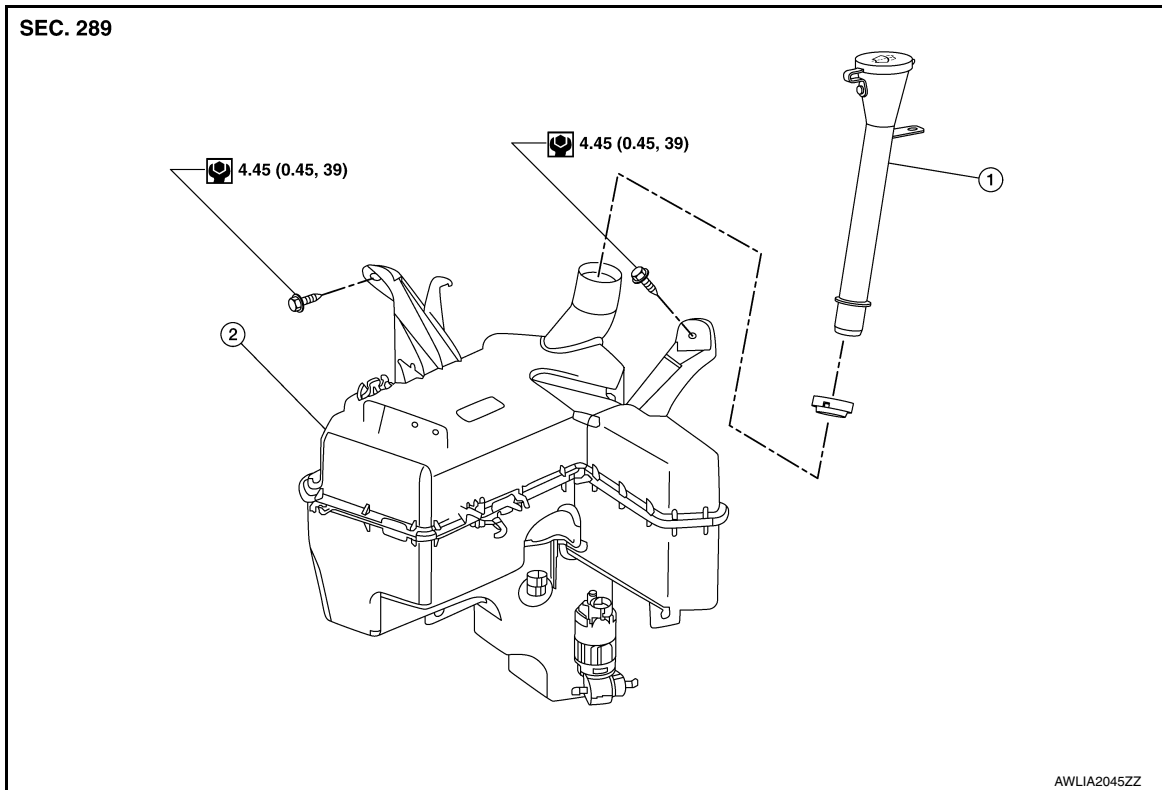

1. Washer tank inlet


2. Washer tank

Removal and Installation

INFOID:000000009132091

REMOVAL

1. Fully open the hood.
2. Remove the washer tank inlet clip (A) from the coolant reservoir and pull the washer tank inlet tube (1) from the washer tank.

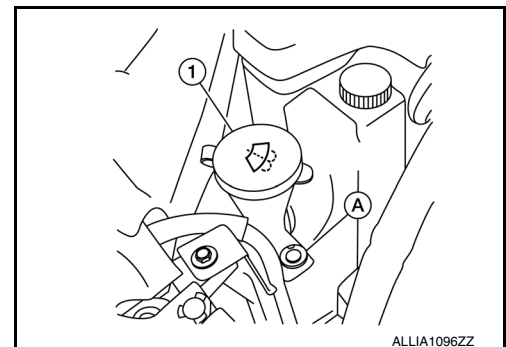

3. Remove the front fender protector (RH). Refer to [EXT-28. "FENDER PROTECTOR : Removal and Installation"](#).
4. Disconnect the harness connector from the washer pump.
5. Disconnect the harness connector from the washer level switch.
6. Disconnect the front washer tube and rear washer tube.
7. Remove the washer tank bolts.
8. Remove the washer tank.

WASHER TANK

< REMOVAL AND INSTALLATION >

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

Add water to the top of washer tank inlet after installing. Check that no leaks exist.

A

B

C

D

E

F

G

H

I

J

K

WW

M

N

O

P

WASHER PUMP

< REMOVAL AND INSTALLATION >

WASHER PUMP

Removal and Installation

INFOID:000000009132092

The washer pump is serviced as an assembly with the washer tank. Refer to [WW-62. "Removal and Installation"](#).

WASHER LEVEL SWITCH

< REMOVAL AND INSTALLATION >

WASHER LEVEL SWITCH

Removal and Installation

INFOID:000000009132093

The washer level switch is serviced as an assembly with the washer tank. Refer to [WW-62. "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW


FRONT WASHER NOZZLE AND TUBE

< REMOVAL AND INSTALLATION >

FRONT WASHER NOZZLE AND TUBE

Exploded View

INFOID:000000009132094

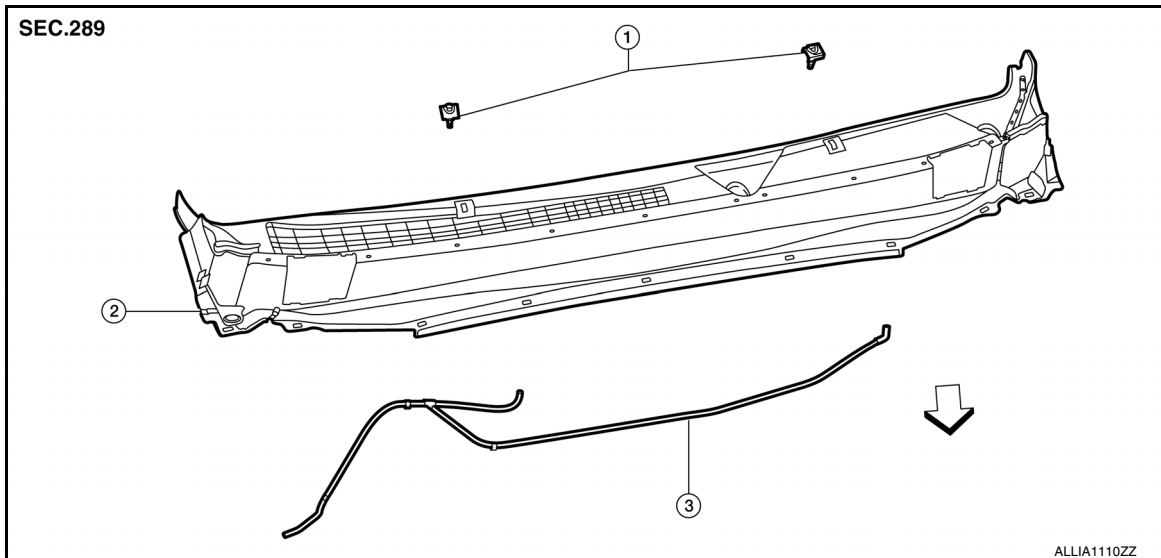

1. Front washer nozzle

2. Cowl top cover

3. Front washer tube

⇐ Front


Removal and Installation - Front Washer Nozzle

INFOID:000000009132095

REMOVAL

1. Remove the cowl top cover. Refer to [EXT-25, "Removal and Installation"](#).
2. Disconnect the front washer tube from the front washer nozzle.
3. While releasing the pawls on the sides of the front washer nozzle (1), remove front washer nozzle from cowl top cover.

○: Pawl

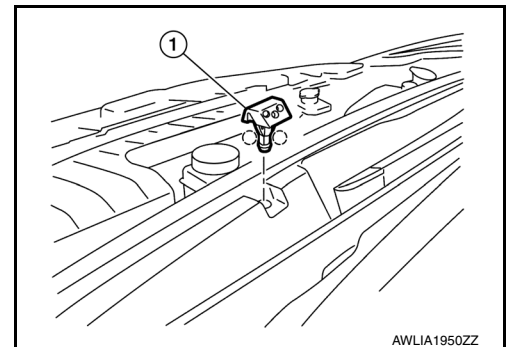

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:


Adjust the nozzles to their proper position. Refer to [WW-67, "Adjustment"](#).

FRONT WASHER NOZZLE AND TUBE

< REMOVAL AND INSTALLATION >

Washer Tube Layout

INFOID:000000009132096

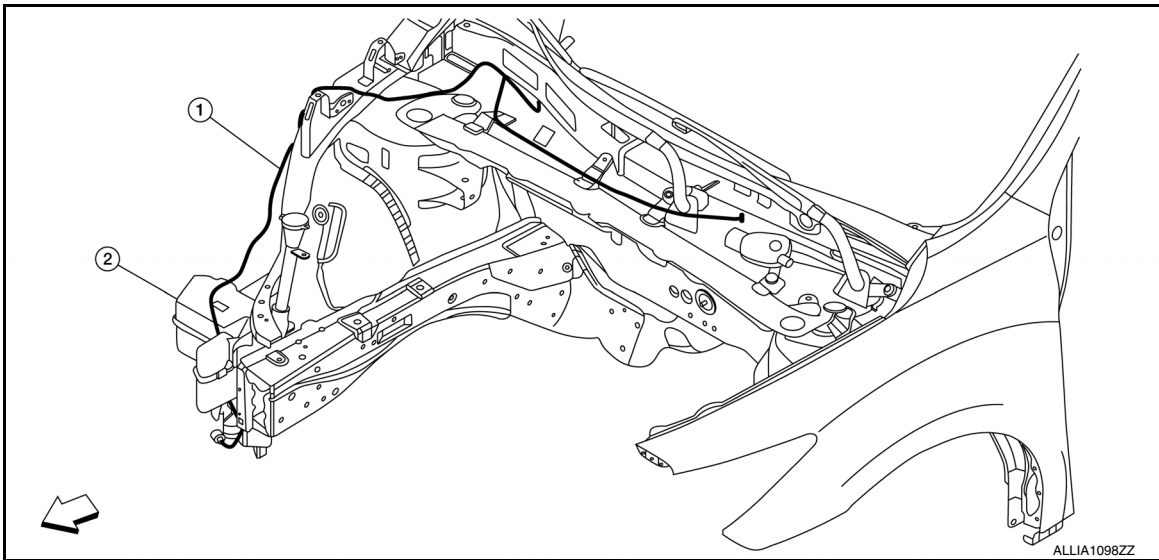

1. Front washer tube

2. Washer tank

← Front

Removal and Installation - Front Washer Tube

INFOID:000000009132097

REMOVAL

1. Remove the cowl top cover. Refer to [EXT-25. "Removal and Installation"](#).
2. Remove the fender protector (RH). Refer to [EXT-28. "FENDER PROTECTOR : Removal and Installation"](#).
3. Disconnect the front washer tube from the washer tank.
4. Remove the front washer tube.

INSTALLATION

Installation is in the reverse order of removal.

Adjustment

INFOID:000000009132098


WASHER NOZZLE SPRAY PATTERN

A
B
C
D
E
F
G
H
I
J
K

WW


FRONT WASHER NOZZLE AND TUBE

< REMOVAL AND INSTALLATION >

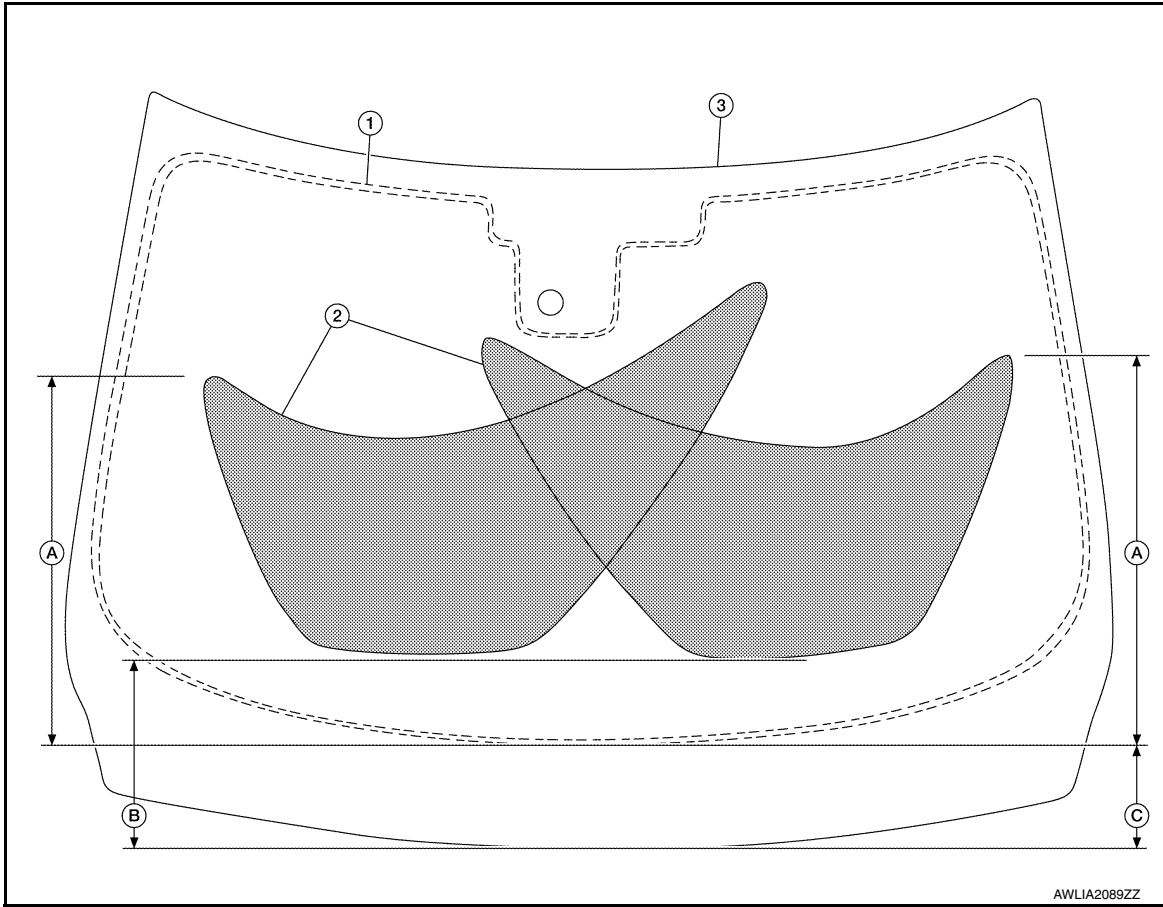

- | | | |
|-----------------------|-------------------------------|---------------------|
| 1. Black print area | 2. Washer fluid spray pattern | 3. Windshield glass |
| A. 445.0 mm (17.5 in) | B. 274 mm (10.8 in) | C. 148 mm (5.8 in) |

WASHER NOZZLE ADJUSTMENT

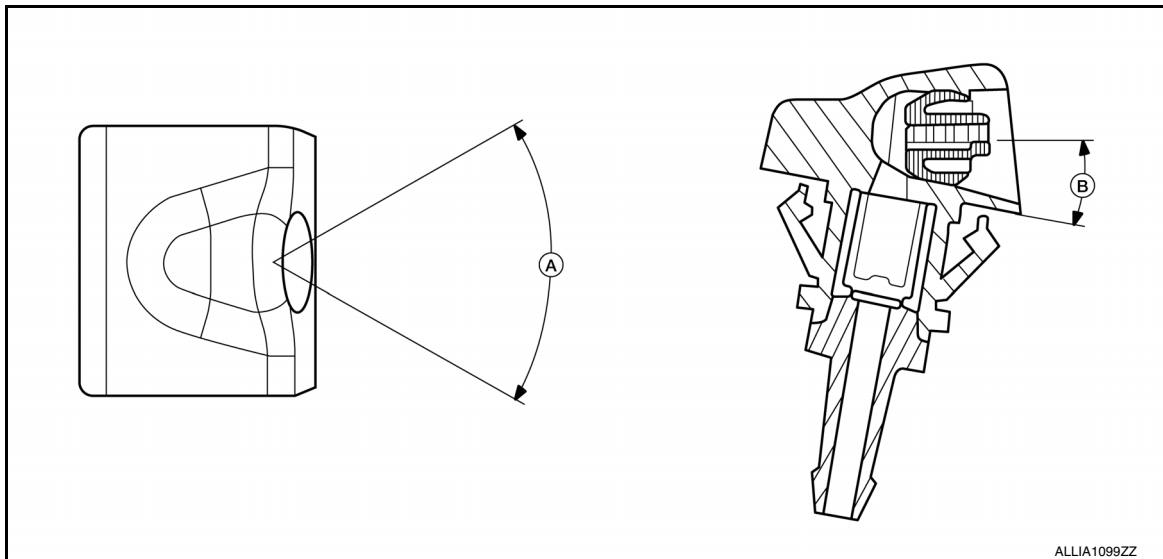

A. $60^{\circ} \pm 7.5^{\circ}$

B. $11.0^{\circ} \pm 1.0^{\circ}$


FRONT WASHER NOZZLE AND TUBE

< REMOVAL AND INSTALLATION >

1. Insert a suitable tool (A) into the spray opening (1) and move up/down and left/right to adjust the spray position.

NOTE:

If wax or dust gets into the nozzle, remove wax or dust with a suitable tool (A).

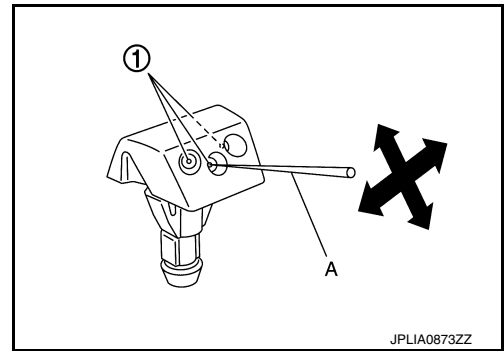

A

B

C

D

E

F

G

H

I

J

K

WW

M

N

O

P


FRONT WIPER ARM

< REMOVAL AND INSTALLATION >

FRONT WIPER ARM

Exploded View

INFOID:000000009132099

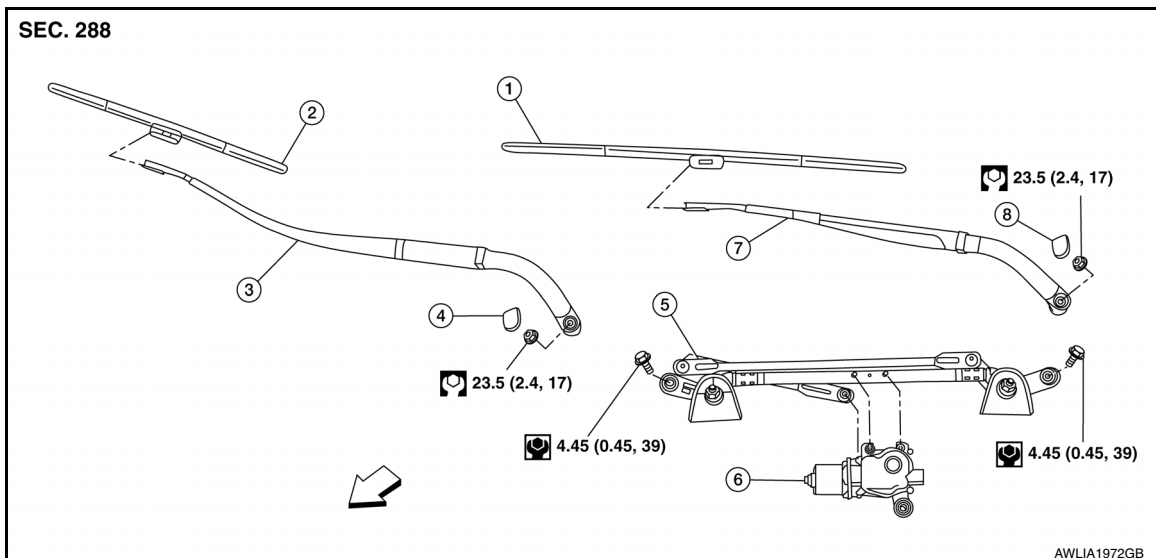

- | | | |
|-----------------------------|-------------------------------|-------------------------|
| 1. Front wiper blade (LH) | 2. Front wiper blade (RH) | 3. Front wiper arm (RH) |
| 4. Front wiper arm cap (RH) | 5. Front wiper drive assembly | 6. Front wiper motor |
| 7. Front wiper arm (LH) | 8. Front wiper arm cap (LH) | ⇐ Front |

Removal and Installation


INFOID:000000009132100

REMOVAL

1. Operate the front wiper to move it to the auto stop position.
2. Open the hood.
3. Remove the front wiper arm cap (LH/RH).
4. Remove the front wiper arm nut (LH/RH).
5. Raise the front wiper arm, then remove the front wiper arm (LH/RH).

INSTALLATION

1. Clean the front wiper arm mount as shown. This will reduce the possibility of wiper arm looseness.

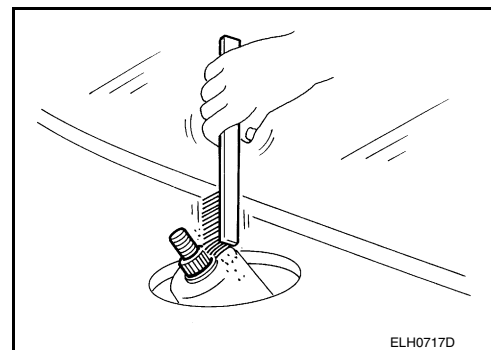

2. Operate front wiper motor to move the front wiper to the auto stop position.
3. Adjust the front wiper blade position. Refer to [WW-71, "Adjustment"](#).
4. Install the front wiper arm (LH/RH) and the front wiper arm nut (LH/RH).
5. Install the front wiper arm cap (LH/RH).
6. Check that the wiper blades stop at the specified position. Refer to [WW-71, "Adjustment"](#).

FRONT WIPER ARM


< REMOVAL AND INSTALLATION >

Adjustment

INFOID:000000009132101

WIPER BLADE POSITION ADJUSTMENT

Clearance between the end of cowl top cover/ front fender cover and the top of front wiper blade center.

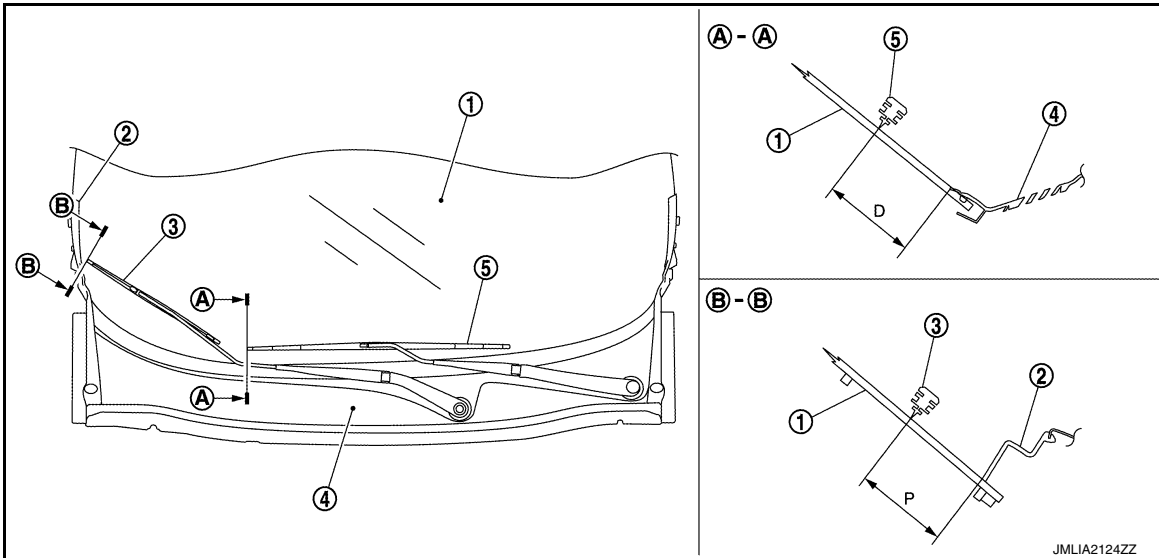

- | | | |
|---------------------|---------------------------|---------------------------|
| 1. Windshield glass | 2. Front fender cover | 3. Front wiper blade (RH) |
| 4. Cowl top cover | 5. Front wiper blade (LH) | |

Standard clearance

D : 72.0 ± 7.5 mm (2.05 ± 0.30 in)

P : 52.0 ± 7.5 mm (2.83 ± 0.30 in)

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WW


FRONT WIPER BLADE

< REMOVAL AND INSTALLATION >

FRONT WIPER BLADE

Exploded View

INFOID:000000009132102

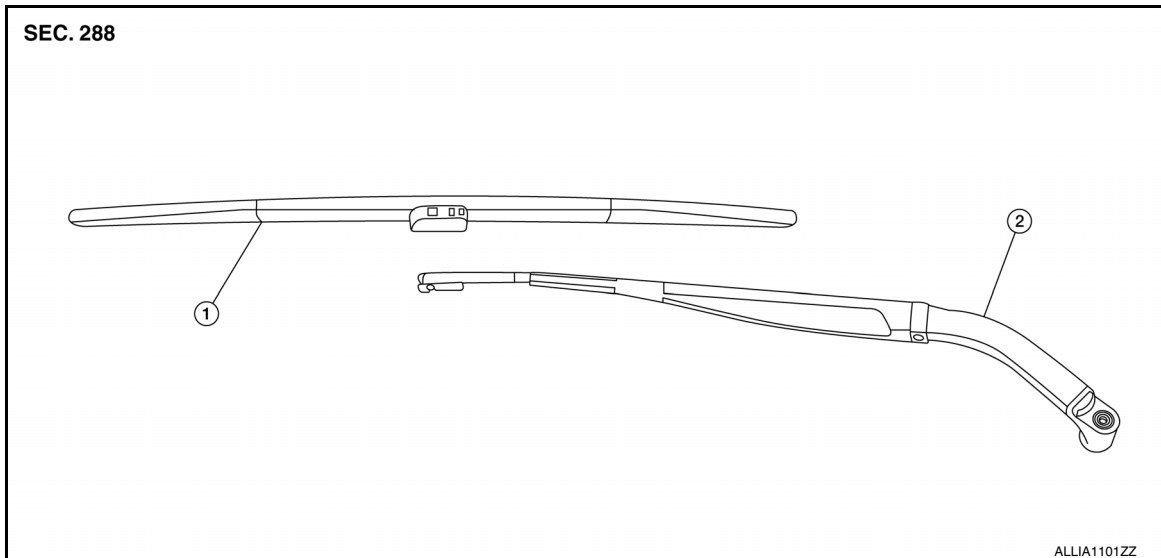

1. Front wiper blade

2. Front wiper arm

Removal and Installation


INFOID:000000009132103

REMOVAL

1. Lift the front wiper arm and blade assembly away from the windshield glass.
2. Push the release tab (A) of the front wiper blade (1), then move the front wiper blade down the front wiper arm (2) to remove.

CAUTION:

Be careful not to drop the wiper blade onto the windshield glass.

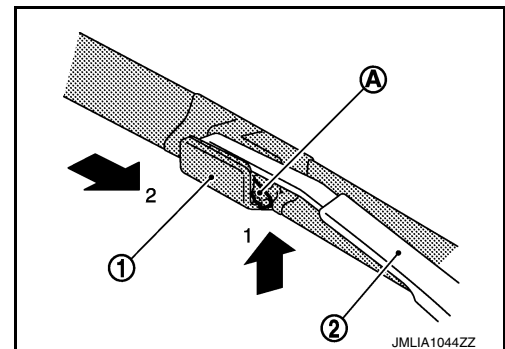

INSTALLATION

1. Insert the front wiper blade onto the front wiper arm until it clicks into place.
2. Rotate wiper blade so the dimple is in the groove.


FRONT WIPER DRIVE ASSEMBLY

< REMOVAL AND INSTALLATION >

FRONT WIPER DRIVE ASSEMBLY

Exploded View

INFOID:000000009729274

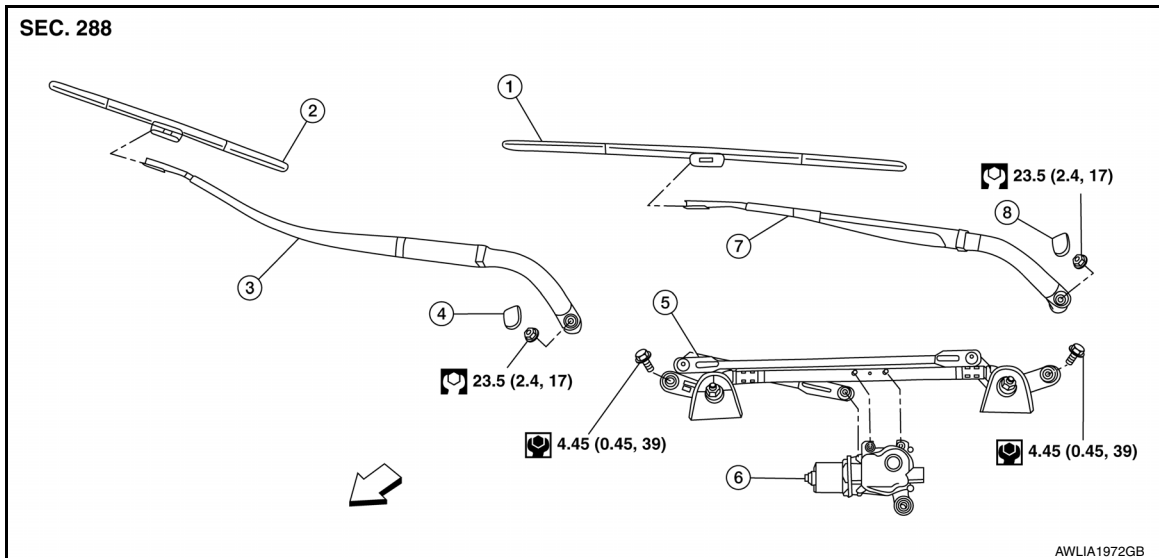

- | | | |
|-----------------------------|-------------------------------|-------------------------|
| 1. Front wiper blade (LH) | 2. Front wiper blade (RH) | 3. Front wiper arm (RH) |
| 4. Front wiper arm cap (RH) | 5. Front wiper drive assembly | 6. Front wiper motor |
| 7. Front wiper arm (LH) | 8. Front wiper arm cap (LH) | ⇐ Front |

Removal and Installation

INFOID:000000009132105

REMOVAL

1. Remove the cowl top cover. Refer to [EXT-25, "Removal and Installation"](#).
2. Disconnect the harness connector from the front wiper motor.
3. Remove the bolts from the front wiper drive assembly.
4. Remove the front wiper drive assembly.

INSTALLATION

1. Install the front wiper drive assembly and retain with the front wiper drive assembly bolts.
2. Connect the harness connector to the front wiper motor.
3. Operate the front wiper to move it to the auto stop position.
4. Install the cowl top cover. Refer to [EXT-25, "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW


RAIN SENSOR

< REMOVAL AND INSTALLATION >

RAIN SENSOR

Exploded View

INFOID:000000009132106

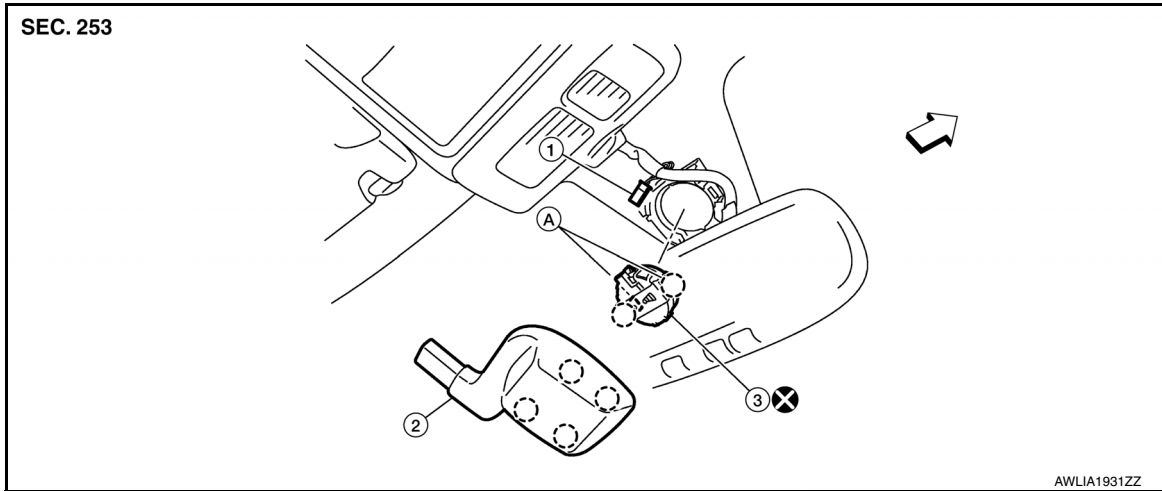

1. Harness connector

2. Rain sensor finisher

3. Rain sensor

A. Metal spring clip

○ Pawl

← Front

Removal and Installation

INFOID:000000009132107

CAUTION:

When the rain sensor is removed from the windshield, the rain sensor cannot be reused.

REMOVAL

1. Release the rain sensor finishers pawls using a suitable tool, then remove the rain sensor finisher.
2. Disconnect the harness connector from the rain sensor.
3. Release the metal spring clips, then remove the rain sensor from the windshield glass.

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- The surface of the windshield should be cleaned.
- Do not touch gel/adhesive of the new part.
- Be sure the metal spring clips are locked so the rain sensor is installed securely.

WIPER AND WASHER SWITCH

< REMOVAL AND INSTALLATION >

WIPER AND WASHER SWITCH

Removal and Installation

INFOID:000000009132108

The wiper and washer switch are serviced as part of the combination switch assembly. Refer to [BCS-80](#), "[Removal and Installation](#)".

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW


REAR WIPER ARM

< REMOVAL AND INSTALLATION >

REAR WIPER ARM

Exploded View

INFOID:000000009132109

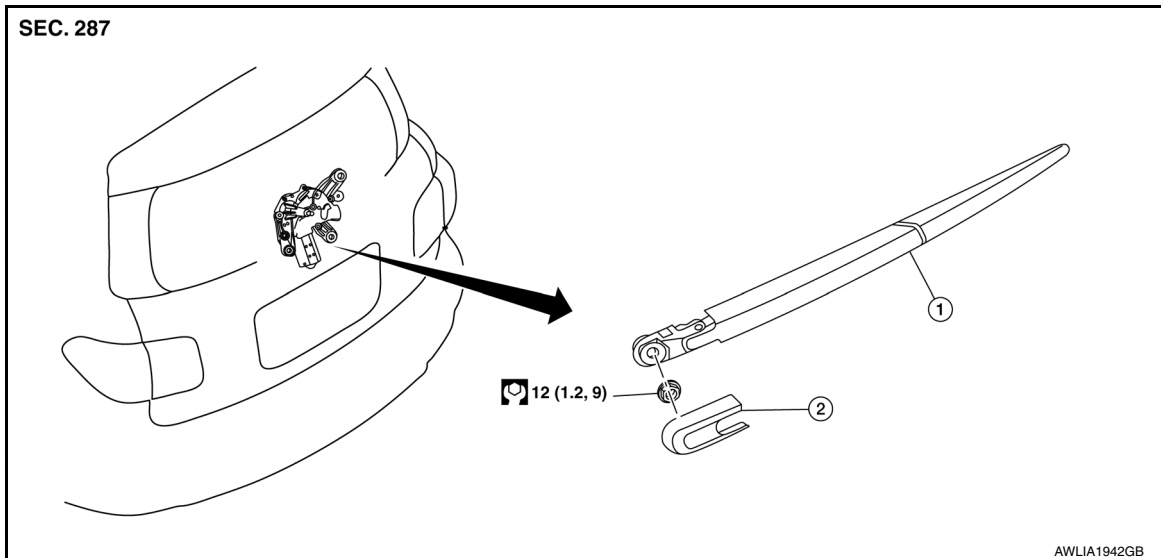

1. Rear wiper arm

2. Rear wiper arm cover

Removal and Installation


INFOID:000000009132110

REMOVAL

1. Operate the rear wiper to move it to the auto stop position.
2. Remove the rear wiper arm cover.
3. Remove the rear wiper arm nut.
4. Remove the rear wiper arm.

INSTALLATION

1. Clean the rear wiper arm mount as shown. This will reduce the possibility of wiper arm looseness.

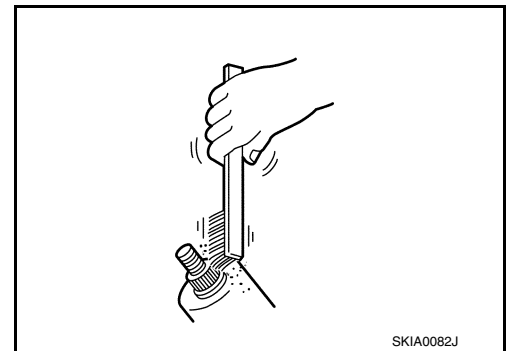


2. Operate the rear wiper motor to move it to the auto stop position.
3. Adjust the rear wiper blade position. Refer to [WW-77. "Adjustment"](#).
4. Install the rear wiper arm and the rear wiper nut.
5. Install the rear wiper arm cover.
6. Check that the rear wiper blade stops at the specified position.

REAR WIPER ARM

< REMOVAL AND INSTALLATION >

Adjustment

INFOID:000000009132111

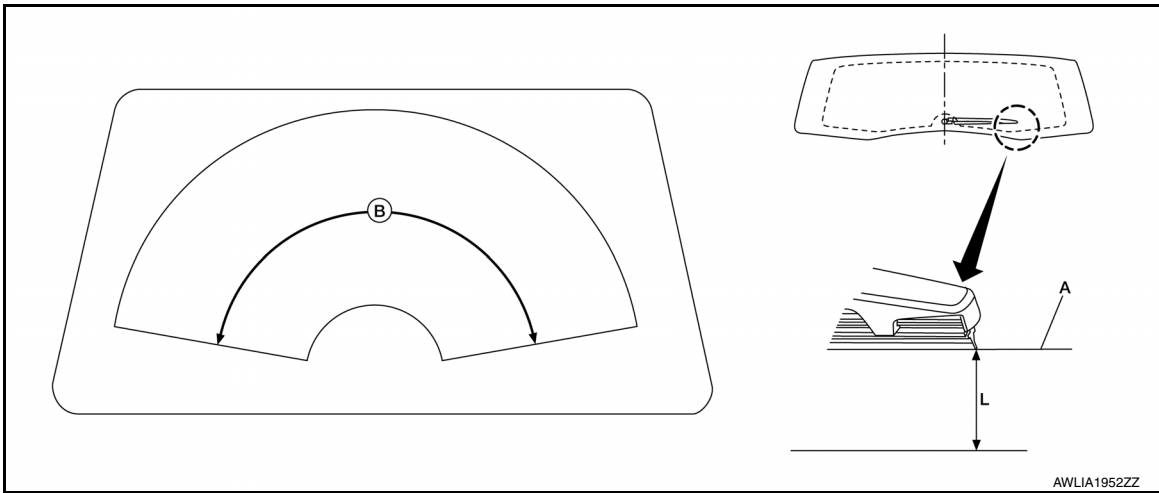

A. Defrosting wire

B. $163^{\circ} \pm 3^{\circ}$

Position the wiper blade on top of the defrosting wire (A).

L: $50 \pm 7.5 \text{ mm (1.968} \pm 0.295 \text{ in)}$

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WW


REAR WIPER MOTOR

< REMOVAL AND INSTALLATION >

REAR WIPER MOTOR

Exploded View

INFOID:000000009132112

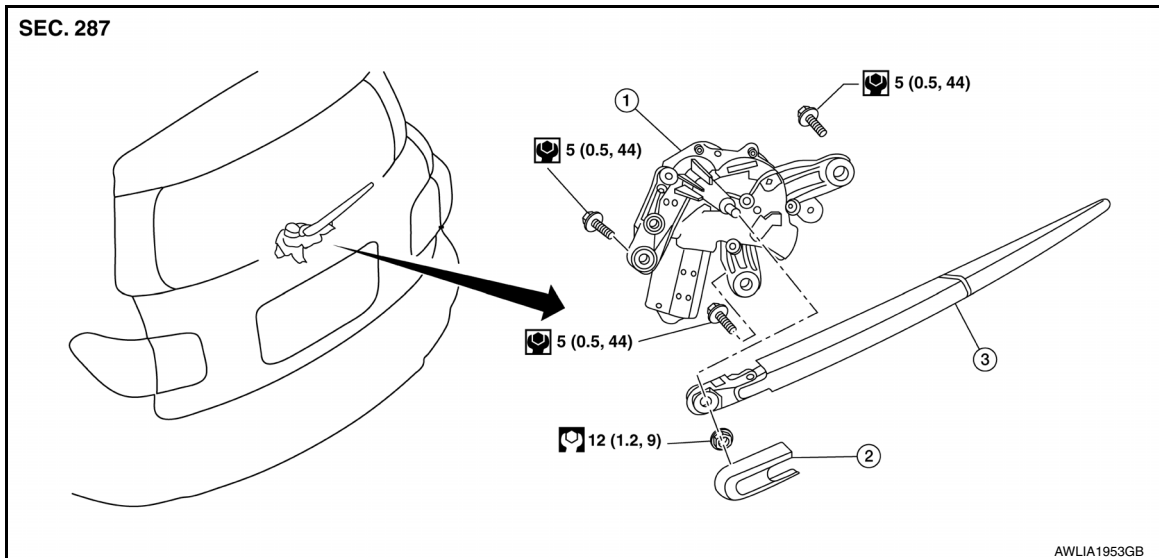

1. Rear wiper motor

2. Rear wiper arm cover

3. Rear wiper arm

Removal and Installation

INFOID:000000009132113

REMOVAL

1. Remove the rear wiper arm. Refer to [WW-76. "Removal and Installation"](#).
2. Remove the back door finisher. Refer to [INT-35. "BACK DOOR LOWER FINISHER : Removal and Installation"](#).
3. Disconnect the harness connector from the rear wiper motor.
4. Remove the rear wiper motor bolts.
5. Remove the rear wiper motor.

INSTALLATION

Installation is in the reverse order of removal.


REAR WASHER NOZZLE AND TUBE

< REMOVAL AND INSTALLATION >

REAR WASHER NOZZLE AND TUBE

Washer Tube Layout

INFOID:000000009132114

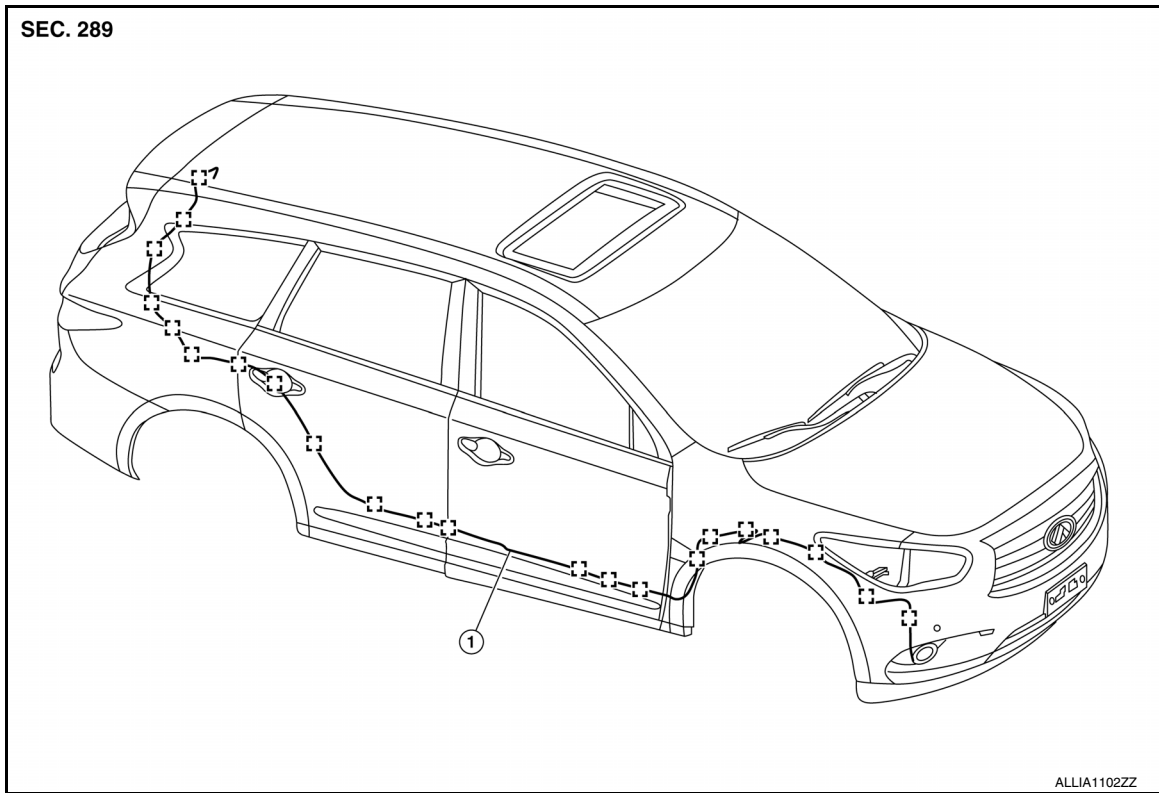

1. Rear washer tube

Removal and Installation - Rear Washer Tube

INFOID:000000009132115

REMOVAL

1. Remove the luggage side lower finisher (RH only). Refer to [INT-31, "LUGGAGE SIDE LOWER FINISHER : Removal and Installation"](#).
2. Remove the storage box side finisher (LH/RH). Refer to [INT-33, "STORAGE BOX SIDE FINISHER : Removal and Installation"](#).
3. Remove the back door kicking plate. Refer to [INT-36, "BACK DOOR KICKING PLATE : Removal and Installation"](#).
4. Remove the fender protector (RH only). Refer to [EXT-28, "FENDER PROTECTOR : Removal and Installation"](#).
5. Remove the front kicking plate (RH only). Refer to [INT-22, "KICKING PLATE : Removal and Installation - Front Kicking Plate"](#).
6. Remove the rear kicking plate (RH only). Refer to [INT-22, "KICKING PLATE : Removal and Installation - Rear Kicking Plate"](#).
7. Remove the third row seat. Refer to [SE-135, "Removal and Installation"](#).
8. Remove the back pillar finisher (RH only). Refer to [INT-32, "BACK PILLAR FINISHER : Removal and Installation"](#).
CAUTION:
Do not reuse back pillar finisher.
9. Remove the high-mounted stop lamp. Refer to [EXL-170, "Removal and Installation"](#).
10. Disconnect the rear washer tube from the rear washer nozzle.
11. Remove the rear washer tube.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

REAR WASHER NOZZLE AND TUBE

< REMOVAL AND INSTALLATION >

INSTALLATION

Installation is in the reverse order of removal.

Removal and Installation - Rear Washer Nozzle

INFOID:000000009132116

REMOVAL

1. Remove the high-mounted stop lamp. Refer to [EXL-170, "Removal and Installation"](#).
2. Remove the rear washer nozzle from the rear spoiler.

INSTALLATION


Installation is in the reverse order of removal.

Inspection


INFOID:000000009132117

INSPECTION

With the rear washer nozzle assembly removed, check that air can not pass backwards through the nozzle and check valve by blowing into the nozzle. Check that air can pass through the nozzle and check valve by blowing into the hose.

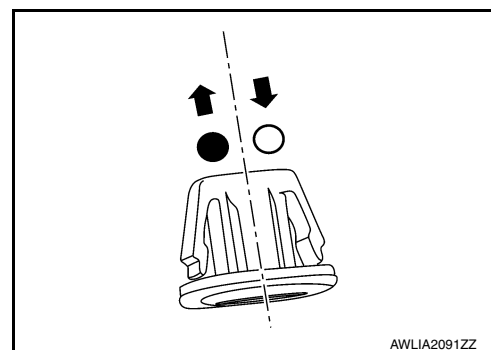

If operating properly, spray positions should match the positions shown. If spray positions do not match, confirm the rear washer nozzle is properly seated and working properly. If the spray positions still do not match as shown, then replace the rear washer nozzle. Refer to [WW-80, "Removal and Installation - Rear Washer Nozzle"](#).

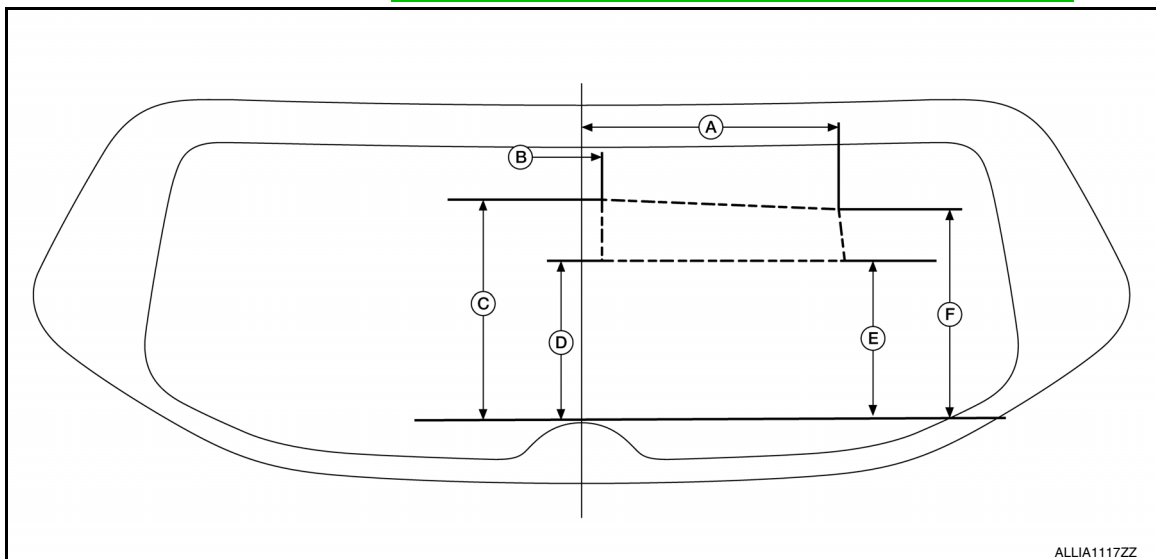

A. 328 mm (12.9 in)

B. 88 mm (3.5 in)

C. 301 mm (11.9 in)

D. 228 mm (9.0 in)

E. 236 mm (9.3 in)

F. 290 mm (11.4 in)

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Specifications

INFOID:000000009132118

WINDSHIELD WASHER FLUID

Windshield washer fluid capacity	4.6 ℓ (4 7/8 US qt, 4 Imp qt)
Windshield washer fluid specification	Refer to MA-15, "FOR USA AND CANADA : Fluids and Lubricants" (for US/CAN) Refer to MA-16, "FOR MEXICO : Fluids and Lubricants" (for MEX)

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW