

 D

Ε

F

Н

J

K

PCS

0

Р

CONTENTS

IPDM E/R	Description
SYSTEM DESCRIPTION4	DTC Logic18 Diagnosis Procedure18
RELAY CONTROL SYSTEM 4 System Diagram 4 System Description 4 Component Parts Location 5	POWER SUPPLY AND GROUND CIRCUIT20 Diagnosis Procedure
POWER CONTROL SYSTEM 6 System Diagram 6 System Description 6 Component Parts Location 6 SIGNAL BUFFER SYSTEM 7	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) 21 Reference Value 21 Wiring Diagram - IPDM E/R - 28 Fail-safe 31 DTC Index 33
System Diagram	PRECAUTION34 PRECAUTIONS34
POWER CONSUMPTION CONTROL SYS- TEM	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER"
DIAGNOSIS SYSTEM (IPDM E/R)	REMOVAL AND INSTALLATION36 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)36
DTC/CIRCUIT DIAGNOSIS15	Exploded View36
U1000 CAN COMM CIRCUIT	Removal and Installation
B2098 IGNITION RELAY ON STUCK16	DIAGNOSIS AND REPAIR WORK FLOW38 Work Flow38
Description 16 DTC Logic 16 Diagnosis Procedure 16	SYSTEM DESCRIPTION41
B2099 IGNITION RELAY OFF STUCK18	POWER DISTRIBUTION SYSTEM41 System Description41

Component Parts Location		DTC Logic	
Component Description	43	Diagnosis Procedure	63
DIAGNOSIS SYSTEM (BCM)	44	B261A PUSH-BUTTON IGNITION SWITCH	64
COMMONITEM		Description	
COMMON ITEM : CONSULT Function (BCM -	44	DTC Logic	64
COMMON ITEM : CONSOLT FUNCTION (BCM -	11	Diagnosis Procedure	64
,		POWER SUPPLY AND GROUND CIRCUIT	66
INTELLIGENT KEY			
INTELLIGENT KEY: CONSULT Function (BCM		BCM	
INTELLIGENT KEY)	45	BCM : Diagnosis Procedure	66
DTC/CIRCUIT DIAGNOSIS	50	PUSH-BUTTON IGNITION SWITCH	
U1000 CAN COMM CIRCUIT	50	Description	67
O TOOU OAN OOMMI ON OOM	50	Component Function Check	
BCM	50	Diagnosis Procedure	
BCM : Description		Component Inspection	69
BCM : DTC Logic		PUSH-BUTTON IGNITION SWITCH POSI-	
BCM : Diagnosis Procedure	50	TION INDICATOR	70
IPDM E/R	50	Description	
IPDM E/R : Description		Component Function Check	
IPDM E/R : DTC Logic		Diagnosis Procedure	
IPDM E/R : Diagnosis Procedure		-	
_		POWER DISTRIBUTION SYSTEM	
U1010 CONTROL UNIT (CAN)	52	Wiring Diagram - PDS (POWER DISTRIBUTION SYSTEM)	
BCM	52	3131EW)	12
BCM : DTC Logic		ECU DIAGNOSIS INFORMATION	81
BCM : Diagnosis Procedure			
-		BCM (BODY CONTROL MODULE)	81
B2553 IGNITION RELAY		Reference Value	
Description		Wiring Diagram - BCM	
DTC Logic		Fail-safe	
Diagnosis Procedure	53	DTC Inspection Priority Chart DTC Index	
B260A IGNITION RELAY	55	DTC Index	. 120
Description		IPDM E/R (INTELLIGENT POWER DISTRI-	
DTC Logic	55	BUTION MODULE ENGINE ROOM)	122
Diagnosis Procedure	55	Reference Value	
B2614 ACC RELAY		Wiring Diagram - IPDM E/R	
		Fail-safe	
Description DTC Logic		DTC Index	. 134
Diagnosis Procedure		PRECAUTION	135
Component Inspection		TRECACTION	133
·		PRECAUTIONS	135
B2615 BLOWER RELAY CIRCUIT	59	Precaution for Supplemental Restraint System	
Description		(SRS) "AIR BAG" and "SEAT BELT PRE-TEN-	
DTC Logic		SIONER"	
Diagnosis Procedure		Precautions for Removing Battery Terminal	
Component Inspection	60	Precaution for Procedure without Cowl Top Cover	r. 136
B2616 IGNITION RELAY CIRCUIT		SYMPTOM DIAGNOSIS	137
Description		DUCH DUTTON ICHITION SWITCH DODS	
DTC Logic		PUSH-BUTTON IGNITION SWITCH DOES	40-
Diagnosis Procedure		NOT OPERATE	
Component Inspection	७∠	Description Diagnosis Procedure	
B2618 BCM	63	Diagnosis Frocedule	. 13/
Description			

PUSH-BUTTON IGNITION SWITCH POSI-	REMOVAL AND INSTALLATION139		
TION INDICATOR DOES NOT ILLUMINATE138 Diagnosis Procedure	PUSH BUTTON IGNITION SWITCH139 Removal and Installation139		

PCS


N

(

SYSTEM DESCRIPTION

RELAY CONTROL SYSTEM

System Diagram

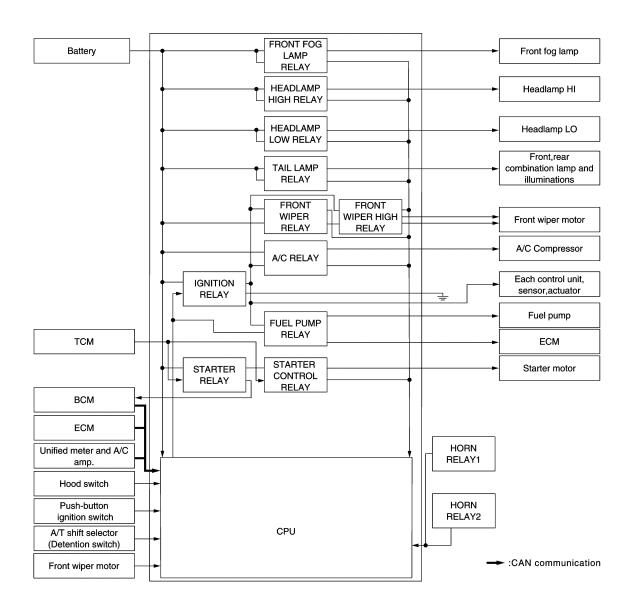

JMMIA0969GB

System Description

INFOID:0000000010581740

IPDM E/R activates the internal control circuit to perform the relay ON-OFF control according to the input signals from various sensors and the request signals received from control units via CAN communication.

CAUTION:

IPDM E/R integrated relays cannot be removed.

RELAY CONTROL SYSTEM

< SYSTEM DESCRIPTION >

[IPDM E/R]

Control relay	Input/output	Transmit unit	Control part	Reference page
Headlamp low relayHeadlamp high relay	Low beam request signal High beam request signal	BCM (CAN)	Headlamp lowHeadlamp high	EXL-9
Front fog lamp relay	Front fog light request signal	BCM (CAN)	Front fog lamp	EXL-23
Tail lamp relay	Position light request signal	BCM (CAN)	Parking lamp Side marker lamp License plate lamp Tail lamp	EXL-28
			Illuminations	INL-16
	Front wiper request signal	BCM (CAN)		• <u>WW-6</u>
Front wiper relay Front wiper high relay Front wiper stop position signal Front wiper motor		(With rain sensor) • WW-10 (Without rain sensor)		
Horn relay 1 Horn relay 2	Theft warning horn request signal Horn reminder signal	BCM (CAN)	Horn (low) Horn (high)	SEC-19
Starter relay ^{NOTE}	Starter control relay signal	BCM (CAN)	Starter motor	<u>SEC-83</u> ,
Starter control relay	Starter relay control signal	TCM	- Starter motor	<u>SEC-86</u>
A/C relay	A/C compressor request signal	ECM (CAN)	A/C compressor (magnet clutch)	HAC-57
	Ignition switch ON signal	BCM (CAN)		
Ignition relay	Vehicle speed signal	Unified meter and A/C amp. (CAN)	Ignition relay	PCS-16
	Push-button ignition switch signal	Push-button ignition switch		

NOTE:

BCM controls the starter relay.

Component Parts Location

A JPMIA1089ZZ

- 1. IPDM E/R
- A. Engine room dash panel (RH)

Κ

INFOID:0000000010581741

L


PCS

Ν

0

POWER CONTROL SYSTEM

System Diagram

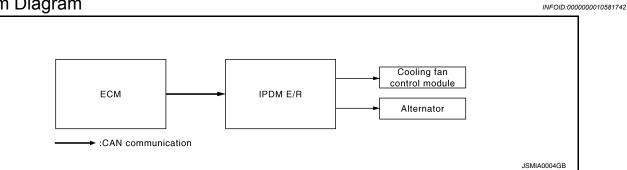

System Description

INFOID:0000000010581743

COOLING FAN CONTROL


IPDM E/R outputs pulse duty signal (PWM signal) to the cooling fan control module according to the status of the cooling fan speed request signal received from ECM via CAN communication. Refer to EC-100, "System Diagram".

ALTERNATOR CONTROL

IPDM E/R outputs power generation command signal (PWM signal) to the alternator according to the status of the power generation command value signal received from ECM via CAN communication. Refer to CHG-12, <a href=""System Diagram".

Component Parts Location

INFOID:0000000010581744

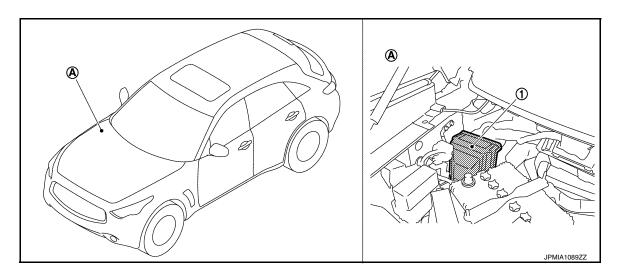

- 1. IPDM E/R
- A. Engine room dash panel (RH)

[IPDM E/R]


Α

В

D

SIGNAL BUFFER SYSTEM

System Diagram

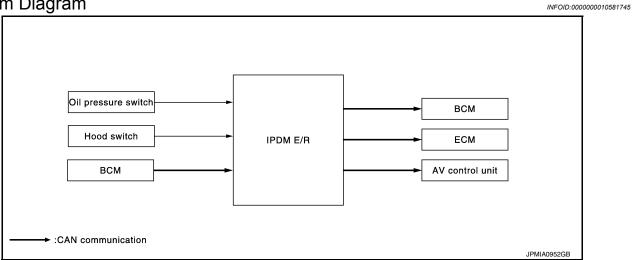


System Description

INFOID:0000000010581746

- IPDM E/R reads the status of the oil pressure switch and transmits the oil pressure switch signal to BCM via CAN communication. Refer to <a href="https://mww.mwiscontrol.org/mwiscontrol.or
- IPDM E/R reads the status of the hood switch and transmits the hood switch signal to BCM via CAN communication. Refer to SEC-96, "Description".
- IPDM E/R receives the rear window defogger control signal from BCM via CAN communication and transmits it to ECM and AV control unit via CAN communication. Refer to DEF-4, "System Diagram".

Component Parts Location

INFOID:0000000010581747

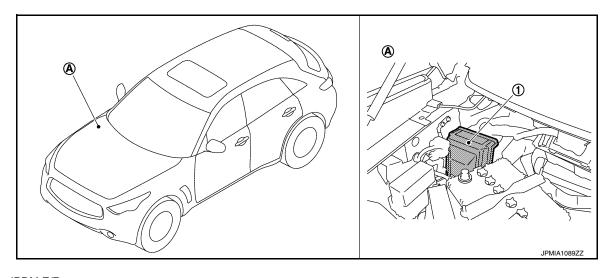

- 1. IPDM E/R
- A. Engine room dash panel (RH)

PCS

Ν


0

[IPDM E/R]

POWER CONSUMPTION CONTROL SYSTEM

System Diagram

INFOID:0000000010581748

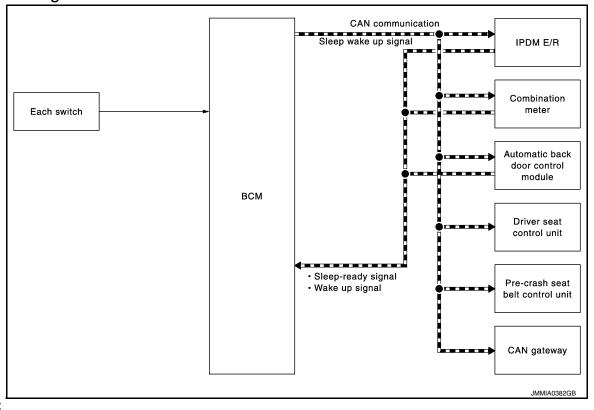

NOTE:

Combination meter is received via unified meter and A/C amp.

System Description

INFOID:0000000010581749

OUTLINE

- IPDM E/R incorporates a power consumption control function that reduces the power consumption according to the vehicle status.
- IPDM E/R changes its status (control mode) with the sleep wake up signal received from BCM via CAN communication.

Normal mode (wake-up)

- CAN communication is normally performed with other control units.
- Individual unit control by IPDM E/R is normally performed.

Low power consumption mode (sleep)

- Low power consumption control is active.
- CAN transmission is stopped.

SLEEP MODE ACTIVATION

- IPDM E/R judges that the sleep-ready conditions are fulfilled when the ignition switch is OFF and none of the conditions below are present. Then it transmits a sleep-ready signal (ready) to BCM via CAN communication.
- Outputting signals to actuators
- Switches or relays operating
- Hood switch status is kept 50 ms or less.
- Output requests are being received from control units via CAN communication.
- IPDM E/R stops CAN communication and enters the low power consumption mode when it receives a sleep wake up signal (sleep) from BCM and the sleep-ready conditions are fulfilled.

WAKE-UP OPERATION

POWER CONSUMPTION CONTROL SYSTEM

< SYSTEM DESCRIPTION >

[IPDM E/R]

- IPDM E/R changes from the low power consumption mode to the normal mode when it receives a sleep wake-up signal (wake up) from BCM or any of the following conditions is fulfilled. In addition, it transmits a sleep-ready signal (not-ready) to BCM via CAN communication to report the CAN communication start.
- Ignition switch ON
- The hood switch status changes.
- An output request is received from a control unit via CAN communication.

Component Parts Location

INFOID:0000000010581750


В

D

Е

F

Н

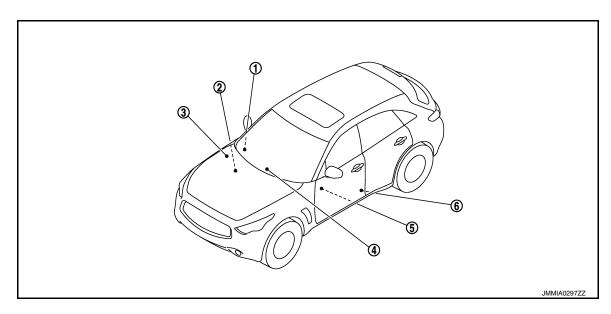

- CAN gateway
 Refer to <u>LAN-118</u>, "Component
 Parts Location".
- 4. Unified meter and A/C amp.

 Refer to MWI-10, "METER SYSTEM
 : Component Parts Location".
- BCM
 Refer to BCS-10, "Component Parts
 Location".
- 5. Driver seat control unit
 Refer to ADP-15, "AUTOMATIC
 DRIVE POSITIONER SYSTEM:
 Component Parts Location".
- IPDM E/R
 Refer to PCS-5, "Component Parts
 Location".
- Pre-crash seat belt control unit Refer to <u>SBC-9</u>, "Component Parts Location".

PCS

K

Ν

0

[IPDM E/R]

DIAGNOSIS SYSTEM (IPDM E/R)

Diagnosis Description

INFOID:0000000010581751

AUTO ACTIVE TEST

Description

In auto active test mode, the IPDM E/R sends a drive signal to the following systems to check their operation.

- Oil pressure warning lamp
- Front wiper (LO, HI)
- Parking lamps
- · License plate lamps
- Side marker lamps
- Tail lamps
- Front fog lamps
- Headlamps (LO, HI)
- A/C compressor (magnet clutch)
- Cooling fan (cooling fan control module)

Operation Procedure

1. Close the hood and lift the wiper arms from the windshield. (Prevent windshield damage due to wiper operation)

NOTE:

When auto active test is performed with hood opened, sprinkle water on windshield beforehand.

- 2. Turn the ignition switch OFF.
- 3. Turn the ignition switch ON, and within 20 seconds, press the driver door switch 10 times. Then turn the ignition switch OFF.

CAUTION:

Close passenger door.

- Turn the ignition switch ON within 10 seconds. After that the horn sounds once and the auto active test starts.
- The oil pressure warning lamp starts blinking when the auto active test starts.
- 6. After a series of the following operations is repeated 3 times, auto active test is completed.

NOTE:

When auto active test mode has to be cancelled halfway through test, turn ignition switch OFF. **CAUTION**:

• If auto active test mode cannot be actuated, check door switch system. Refer to <u>DLK-107</u>, "Component Function Check".

Do not start the engine.

Inspection in Auto Active Test Mode

When auto active test mode is actuated, the following 5 steps are repeated 3 times.

Operation sequence	Inspection location	Operation	
A	Oil pressure warning lamp	Blinks continuously during operation of auto active test	
1	Front wiper	LO for 5 seconds → HI for 5 seconds	
2	Parking lampsLicense plate lampsSide marker lampsTail lampsFront fog lamps	10 seconds	
3	Headlamps	LO 10 seconds HI ON ⇔ OFF 5 times	
4	A/C compressor (magnet clutch)	ON ⇔ OFF 5 times	
5 [*]	Cooling fan	MID for 5 seconds → HI for 5 seconds	

^{*:} Outputs duty ratio of 50% for 5 seconds \rightarrow duty ratio of 100% for 5 seconds on the cooling fan control module.


Α

В

D

Е

Concept of auto active test

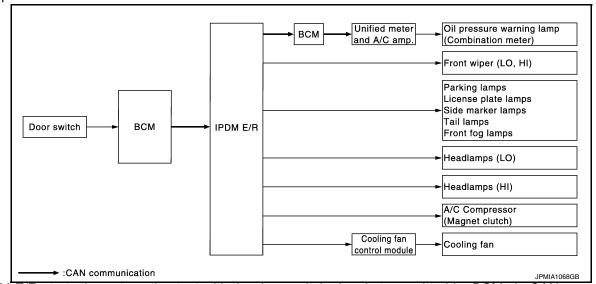

- IPDM E/R starts the auto active test with the door switch signals transmitted by BCM via CAN communication. Therefore, the CAN communication line between IPDM E/R and BCM is considered normal if the auto active test starts successfully.
- The auto active test facilitates troubleshooting if any systems controlled by IPDM E/R cannot be operated.

Diagnosis chart in auto active test mode

Symptom	Inspection contents		Possible cause
Any of the following components do not operate		YES	BCM signal input circuit
 Parking lamps License plate lamps Side marker lamps Tail lamps Front fog lamps Headlamp (HI, LO) Front wiper 	Perform auto active test. Does the applicable system operate?	NO	Lamp or motor Lamp or motor ground circuit Harness or connector between IPDM E/R and applicable system IPDM E/R
A/C compressor does not operate	Perform auto active test. Does the magnet clutch operate?	YES	 Unified meter and A/C amp. signal input circuit CAN communication signal between unified meter and A/C amp. and ECM CAN communication signal between ECM and IPDM E/R
		NO	Magnet clutch Harness or connector between IPDM E/R and magnet clutch IPDM E/R
Oil pressure warning lamp does not operate	Perform auto active test.	YES	Harness or connector between IPDM E/R and oil pressure switch Oil pressure switch IPDM E/R
	Does the oil pressure warning lamp blink?	NO	 CAN communication signal between IPDM E/R and BCM CAN communication signal between BCM and unified meter and A/C amp. Combination meter

Revision: 2015 February PCS-11 2015 QX70

Н

_

PCS

Ν

0

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[IPDM E/R]

Symptom	Inspection contents		Possible cause
		YES	ECM signal input circuit CAN communication signal between ECM and IPDM E/R
Cooling fan does not operate	Perform auto active test. Does the cooling fan operate?	NO	Cooling fan Harness or connector between cooling fan and cooling fan control module Cooling fan control module Harness or connector between IPDM E/R and cooling fan control module Cooling fan relay Harness or connector between IPDM E/R and cooling fan relay IPDM E/R

CONSULT Function (IPDM E/R)

INFOID:0000000010581752

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with IPDM E/R.

Diagnosis mode	Description
Ecu Identification	Allows confirmation of IPDM E/R part number.
Self Diagnostic Result	Displays the diagnosis results judged by IPDM E/R.
Data Monitor	Displays the real-time input/output data from IPDM E/R input/output data.
Active Test	IPDM E/R can provide a drive signal to electronic components to check their operations.
CAN Diag Support Monitor	The results of transmit/receive diagnosis of CAN communication can be read.

SELF DIAGNOSTIC RESULT

Refer to PCS-33, "DTC Index".

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item [Unit]	MAIN SIG- NALS	Description
RAD FAN REQ [%]	×	Displays the value of the cooling fan speed signal received from ECM via CAN communication.
AC COMP REQ [Off/On]	×	Displays the status of the A/C compressor request signal received from ECM via CAN communication.
TAIL&CLR REQ [Off/On]	×	Displays the status of the position light request signal received from BCM via CAN communication.
HL LO REQ [Off/On]	×	Displays the status of the low beam request signal received from BCM via CAN communication.
HL HI REQ [Off/On]	×	Displays the status of the high beam request signal received from BCM via CAN communication.
FR FOG REQ [Off/On]	×	Displays the status of the front fog light request signal received from BCM via CAN communication.
FR WIP REQ [Stop/1LOW/Low/Hi]	×	Displays the status of the front wiper request signal received from BCM via CAN communication.
WIP AUTO STOP [STOP P/ACT P]	×	Displays the status of the front wiper stop position signal judged by IPDM E/R.

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[IPDM E/R]

Α

В

С

 D

Е

F

G

Н

Monitor Item [Unit]	MAIN SIG- NALS	Description
WIP PROT [Off/BLOCK]	×	Displays the status of the front wiper fail-safe operation judged by IPDM E/R.
IGN RLY1 -REQ [Off/On]		Displays the status of the ignition switch ON signal received from BCM via CAN communication.
IGN RLY [Off/On]	×	Displays the status of the ignition relay judged by IPDM E/R.
PUSH SW [Off/On]		Displays the status of the push-button ignition switch judged by IPDM E/R.
INTER/NP SW [Off/On]		Displays the status of the shift position judged by IPDM E/R.
ST RLY CONT [Off/On]		Displays the status of the starter relay status signal received from BCM via CAN communication.
IHBT RLY -REQ [Off/On]		Displays the status of the starter control relay signal received from BCM via CAN communication.
ST/INHI RLY [Off/ ST /INHI/UNKWN]		Displays the status of the starter relay and starter control relay judged by IPDM E/R.
DETENT SW [Off/On]		Displays the status of the A/T shift selector (detention switch) judged by IPDM E/R.
S/L RLY -REQ [Off/On]		NOTE: The item is indicated, but not monitored.
S/L STATE [LOCK/UNLOCK/UNKWN]		NOTE: The item is indicated, but not monitored.
DTRL REQ [Off]		NOTE: The item is indicated, but not monitored.
OIL P SW [Open/Close]		Displays the status of the oil pressure switch judged by IPDM E/R.
HOOD SW [Off/On]		Displays the status of the hood switch judged by IPDM E/R.
HL WASHER REQ [Off]		NOTE: The item is indicated, but not monitored.
THFT HRN REQ [Off/On]		Displays the status of the theft warning horn request signal received from BCM via CAN communication.
HORN CHIRP [Off/On]		Displays the status of the horn reminder signal received from BCM via CAN communication.
CRNRNG LMP REQ [Off]		NOTE: The item is indicated, but not monitored.

ACTIVE TEST

Test item

Test item	Operation	Description
	Off	
CORNERING LAMP	LH	NOTE: The item is indicated, but cannot be tested.
	RH	
HORN	On	Operates horn relay 1 and horn relay 2 for 20 ms.
	Off	OFF
FRONT WIPER	Lo	Operates the front wiper relay.
	Hi	Operates the front wiper relay and front wiper high relay.

Revision: 2015 February PCS-13 2015 QX70

PCS

Κ

L

Ν

0

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[IPDM E/R]

Test item	Operation	Description
	1	OFF
MOTOR FAN	2	Outputs 50% pulse duty signal (PWM signal) to the cooling fan control module.
MOTOR FAIN	3	Outputs 80% pulse duty signal (PWM signal) to the cooling fan control module.
	4	Outputs 100% pulse duty signal (PWM signal) to the cooling fan control module.
HEAD LAMP WASHER	On	NOTE: The item is indicated, but cannot be tested.
	Off	OFF
	TAIL	Operates the tail lamp relay.
EXTERNAL LAMPS	Lo	Operates the headlamp low relay.
	Hi	Operates the headlamp low relay and ON/OFF the headlamp high relay at 1 second intervals.
	Fog	Operates the front fog lamp relay.

U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[IPDM E/R]

Α

В

D

Е

Н

DTC/CIRCUIT DIAGNOSIS

U1000 CAN COMM CIRCUIT

Description INFOID:000000010581753

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only. CAN Communication Signal Chart. Refer to LAN-35, "CAN Communication Signal Chart".

DTC Logic

DTC DETECTION LOGIC

	DTC	CONSULT display de- scription	DTC Detection Condition	Possible cause	
-	U1000	CAN COMM CIRCUIT	When IPDM E/R cannot communicate CAN communication signal continuously for 2 seconds or more	CAN communication system	(

Diagnosis Procedure

INFOID:0000000010581755

1.PERFORM SELF DIAGNOSTIC

- 1. Turn the ignition switch ON and wait for 2 seconds or more.
- Check "Self Diagnostic Result" of IPDM E/R.

Is "CAN COMM CIRCUIT" displayed?

YES >> Refer to LAN-25, "Trouble Diagnosis Flow Chart".

NO >> Refer to GI-47, "Intermittent Incident".

PCS

Ν

Р

Revision: 2015 February PCS-15 2015 QX70

K

B2098 IGNITION RELAY ON STUCK

Description INFOID.000000010581756

• IPDM E/R operates the ignition relay when it receives an ignition switch ON signal from BCM via CAN communication.

- Turn the ignition relay OFF by pressing the push-button ignition switch once when the vehicle speed is 4 km/h (2.5 MPH) or less.
- Turn the ignition relay OFF with the following operation when the vehicle speed is more than 4 km/h (2.5 MPH) or when an abnormal condition occurs in CAN communication from the unified meter and A/C amp.(Emergency OFF)
- Press and hold the push-button ignition switch for 2 seconds or more.
- Press the push-button ignition switch 3 times within 1.5 seconds.

NOTE

The ignition relay does not turn ON for 3 seconds after emergency OFF even if the push-button ignition switch is pressed.

DTC Logic

DTC DETECTION LOGIC

DTC	CONSULT display description	DTC Detection Condition	Possible causes
B2098	IGN RELAY ON CIRC	The ignition relay ON is detected for 1 second at ignition switch OFF (CPU monitors the status at the contact and excitation coil circuits of the ignition relay inside it)	

DTC CONFIRMATION PROCEDURE

1.PERFORM SELF DIAGNOSIS

- Turn the ignition switch ON.
- 2. Turn ignition switch OFF and wait 1 second or more.
- 3. Check DTC in "Self Diagnostic Result" mode of "IPDM E/R" using CONSULT.

Is DTC detected?

YES >> Refer to PCS-16, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000010581758

1. CHECK SELF DIAGNOSTIC RESULT

Check DTC using CONSULT.

What is the display history of DTC "B2098"?

"CRNT">> GO TO 2.

"PAST" >> GO TO 5.

2.CHECK IGNITION RELAY CONTROL CIRCUIT VOLTAGE 1

- 1. Turn ignition switch ON
- Check voltage between IPDM E/R harness connector and ground.

(+) IPDM E/R Connector Terminal		(–)	Voltage (Approx.)	
			(Αρριολ.)	
E5	27	Ground	0 V	

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3. CHECK IGNITION RELAY CONTROL CIRCUIT VOLTAGE 2

B2098 IGNITION RELAY ON STUCK

< DTC/CIRCUIT DIAGNOSIS >

[IPDM E/R]

- 1. Disconnect IPDM E/R connector.
- 2. Turn ignition switch ON
- 3. Check voltage between IPDM E/R harness connector and ground.

(IPDI	(+) Voltage (Approx.)		(+) IPDM E/R	
Connector Terminal			(/ (ppiox.)	
E5	27	Ground	0 V	

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to PCS-36, "Removal and Installation".

NO >> Check the harness of the ignition relay control circuit for a short to power.

4. CHECK IGNITION RELAY CONTROL CIRCUIT

- 1. Disconnect IPDM E/R connector.
- 2. Check continuity between IPDM E/R harness connector and ground.

IPDM E/F	₹		Continuity
Connector Terminal		Ground	Continuity
E5	27		Not existed

Is the inspection result normal?

YES >> Perform the diagnosis procedure for DTC B260A. Refer to PCS-55, "DTC Logic".

NO >> Repair or replace harness.

5. CHECK INTERMITTENT INCIDENT

Refer to GI-47, "Intermittent Incident".

>> INSPECTION END

PCS

Ν

Р

Revision: 2015 February PCS-17 2015 QX70

F

Α

В

D

Е

Н

K

000

[IPDM E/R]

B2099 IGNITION RELAY OFF STUCK

Description INFOID.000000010581759

 IPDM E/R operates the ignition relay when it receives an ignition switch ON signal from BCM via CAN communication

- Turn the ignition relay OFF by pressing the push-button ignition switch once when the vehicle speed is 4 km/h (2.5 MPH) or less.
- Turn the ignition relay OFF with the following operation when the vehicle speed is more than 4 km/h (2.5 MPH) or when an abnormal condition occurs in CAN communication from the unified meter and A/C amp.(Emergency OFF)
- Press and hold the push-button ignition switch for 2 seconds or more.
- Press the push-button ignition switch 3 times within 1.5 seconds.

NOTE

The ignition relay does not turn ON for 3 seconds after emergency OFF even if the push-button ignition switch is pressed.

DTC Logic

DTC DETECTION LOGIC

DTC	CONSULT display description	DTC Detection Condition	Possible causes
B2099	IGN RELAY OFF CIRC	The ignition relay OFF is detected for 1 second at ignition switch ON (CPU monitors the status at the contact and excitation coil circuits of the ignition relay inside it)	Ignition relay malfunction

NOTE:

When IPDM E/R power supply voltage is low (Approx. 7 - 8 V for about 1 second), the "DTC: B2099" may be detected.

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

- Turn ignition switch ON.
- Turn ignition switch OFF and wait 1 second or more.
- Check DTC in "Self Diagnostic Result" mode of "IPDM E/R" using CONSULT.

Is DTC detected?

YES >> Refer to PCS-18, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000010581761

1.CHECK FUSE

Check that all of the fuses installed on the downstream of the contact point side circuit of the ignition relay in IPDM E/R are not blown.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the blown fuse after replacing the affected circuit if a fuse is blown.

2.CHECK IGNITION RELAY CONTROL CIRCUIT VOLTAGE

- 1. Turn ignition switch ON
- Check voltage between IPDM E/R harness connector and ground.

(+)		Malla a a
IPDM E/R Connector Terminal		(–)	Voltage (Approx)
E5 27		Ground	0 V

Is the inspection result normal?

B2099 IGNITION RELAY OFF STUCK	
< DTC/CIRCUIT DIAGNOSIS >	[IPDM E/R]
YES >> Replace IPDM E/R. Refer to <u>PCS-36, "Removal and Installation"</u> . NO >> GO TO 3.	
3.CHECK BATTERY VOLTAGE	
Check battery voltage.	
Which is the measurement result?	
More than 12.4 V>>GO TO 4. Less than 12.4 V>>Perform battery inspection. Refer to PG-3, "How to Handle Battery".	
4. CHECK INTERMITTENT INCIDENT	
Refer to GI-47, "Intermittent Incident".	
INODESTICAL END	
>> INSPECTION END	

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[IPDM E/R]

POWER SUPPLY AND GROUND CIRCUIT

Diagnosis Procedure

INFOID:0000000010581762

1. CHECK FUSES AND FUSIBLE LINK

Check that the following IPDM E/R fuses or fusible links are not blown.

Signal name	Fuses and fusible link No.
	D
Battery power supply	50
	51

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

- 1. Turn the ignition switch OFF.
- 2. Disconnect IPDM E/R connector.
- 3. Check voltage between IPDM E/R harness connector and ground.

	Terminals		
(+)		Voltage
IPDM E/R		(-)	(Approx.)
Connector Terminal		Ground	
E4	1	Ground	Battery voltage

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3.CHECK GROUND CIRCUIT

Check continuity between IPDM E/R harness connectors and ground.

IPDM E/R			Continuity
Connector	Terminal	Cround	Continuity
E5	12	Ground	Existed
E6	41		Existed

Does continuity exist?

YES >> INSPECTION END

NO >> Repair harness or connector.

< ECU DIAGNOSIS INFORMATION >

ECU DIAGNOSIS INFORMATION

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Reference Value INFOID:0000000010581763

VALUES ON THE DIAGNOSIS TOOL

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item		Condition	Value/Status	
RAD FAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.	0 – 100 %	
		A/C switch OFF	Off	
AC COMP REQ	Engine running	A/C switch ON (Compressor is operating)	On	
TAIL OOLD DEO	Lighting switch OFF		Off	
TAIL&CLR REQ	Lighting switch 1ST, 2ND, HI or	AUTO (light is illuminated)	On	
LII LO DEO	Lighting switch OFF		Off	
HL LO REQ	Lighting switch 2ND HI or AUTO) (light is illuminated)	On	
LII LII DEO	Lighting switch OFF		Off	
HL HI REQ	Lighting switch HI		On	
		Front fog lamp switch OFF	Off	
FR FOG REQ	E REQ Lighting switch 2ND or AUTO (light is illuminated)	 Front fog lamp switch ON Daytime running light activated (Only for Canada) 	On	
		Front wiper switch OFF	Stop	
R WIP REQ	Ignition switch ON	Front wiper switch INT	1LOW	
		Front wiper switch LO	Low	
		Front wiper switch HI	Hi	
		Front wiper stop position	STOP P	
WIP AUTO STOP	Ignition switch ON	Any position other than front wiper stop position	ACT P	
		Front wiper operates normally	Off	
WIP PROT	Ignition switch ON	Front wiper stops at fail-safe operation	BLOCK	
ION DIVA DEO	Ignition switch OFF or ACC	OFF or ACC		
IGN RLY1 -REQ	Ignition switch ON		On	
ICN DLV	Ignition switch OFF or ACC		Off	
IGN RLY	Ignition switch ON		On	
DUCU CW	Release the push-button ignition	n switch	Off	
PUSH SW	Press the push-button ignition s	witch	On	
INTER/NP SW	Ignition switch ON	Selector lever in any position other than P or N	Off	
		Selector lever in P or N position	On	

PCS-21 Revision: 2015 February 2015 QX70

PCS

Α

В

C

 D

Е

F

Н

J

K

L

Ν


0

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Cor	Value/Status			
CT DLV CONT	Ignition switch ON		Off		
ST RLY CONT	At engine cranking	At engine cranking			
IHBT RLY -REQ	Ignition switch ON		Off		
INDI KLI -KEQ	At engine cranking		On		
	Ignition switch ON		Off		
	At engine cranking		$INHI \to ST$		
ST/INHI RLY		control relay cannot be recognized by when the starter relay is ON and the	UNKWN		
DETENT SW	Ignition switch ON	 Press the selector button with selector lever in P position Selector lever in any position other than P 	Off		
	Release the selector button with se	lector lever in P position	On		
S/L RLY -REQ	NOTE: The item is indicated, but not monit	Off			
S/L STATE	NOTE: The item is indicated, but not monit	UNLOCK			
DTRL REQ	NOTE: The item is indicated, but not monit	Off			
OIL D CW	Ignition switch OFF, ACC or engine	Open			
OIL P SW	Ignition switch ON		Close		
HOOD SW	Close the hood		Off		
HOOD SW	Open the hood		On		
HL WASHER REQ	NOTE: The item is indicated, but not monit	Off			
	Not operation	Off			
THFT HRN REQ	 Panic alarm is activated Horn is activated with VEHICLE \$ TEM 	On			
LIODN CHIED	Not operating	Off			
HORN CHIRP	Door locking with Intelligent Key (he	orn chirp mode)	On		
CRNRNG LMP REQ	NOTE: The item is indicated, but not monit	ored.	Off		

< ECU DIAGNOSIS INFORMATION >

TERMINAL LAYOUT

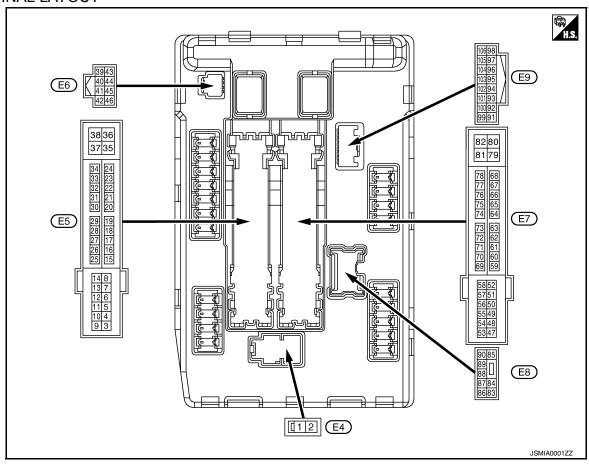

PHYSICAL VALUES

	inal No.	Description				Value	
+ (VVire	e color)	Signal name	Input/ Output		Condition	(Approx.)	
1 (W)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage	
2 (L)	Ground	Battery power supply	Input	Ignition swi	tch OFF	Battery voltage	
4	Ground	Front wiper LO	Output	Ignition	Front wiper switch OFF	0 V	
(V)	Ground	Front wiper LO	Output	Output switch ON	Front wiper switch LO	Battery voltage	
5	5 Ground Front wiper HI	Output	Output Ignition	Front wiper switch OFF	0 V		
(L)	Ground	Tront wiper til	Output	switch ON	Front wiper switch HI	Battery voltage	
7	Ground	Tail, license plate lamps &	Output	Output Ignition	Lighting switch OFF	0 V	
(R)	Ground	interior lamps	Output	switch ON	Lighting switch 1ST	Battery voltage	
10 ^{*1}				Ignition switch OFF (More than a few seconds after turning ignition switch OFF) • Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF)		0 V	
(SB)	Ground	ECM relay power supply	Output			Battery voltage	
12 (B)	Ground	Ground	1	Ignition switch ON		0 V	

PCS-23 2015 QX70 **Revision: 2015 February**

Α

В

C

D

Е

F

G

Н

J

L

K

PCS

Ν

0

< ECU DIAGNOSIS INFORMATION >

	inal No. e color)	Description				Value
+	-	Signal name	Input/ Output		Condition	(Approx.)
13				turning the	tely 1 second or more after ignition switch ON	0 V
(Y)	(-round Fuel numn now	Fuel pump power supply	Output		nately 1 second after turning on switch ON unning	Battery voltage
16				Ignition	Front wiper stop position	0 V
(LG)	Ground	Front wiper stop position	Input	switch ON	Any position other than front wiper stop position	Battery voltage
19	Ground	Ignition relay power supply	Output	Ignition sw	tch OFF	0 V
(W)	Cround	ignition roley power supply	Catput	Ignition sw	itch ON	Battery voltage
25	Ground	Ignition relay power supply	Output	Ignition sw		0 V
(G)	Cround	ignition roley power supply	Catput	Ignition sw	itch ON	Battery voltage
26 ^{*2}	Ground	Ignition relay power supply	Output	Ignition sw	tch OFF	0 V
(R)		.g		Ignition sw	tch ON	Battery voltage
27	Ground	Ignition relay monitor	Input	Ignition sw	tch OFF or ACC	Battery voltage
(Y)	Cround	ignition roley monitor	mpat	Ignition sw	itch ON	0 V
28	Ground	Push-button ignition	Input	Press the p	oush-button ignition switch	0 V
(BG)	(BG) Switch	switch		Release th	e push-button ignition switch	Battery voltage
30 (GR)	Ground	Starter relay control	Input	Ignition switch ON	Selector lever in any position other than P or N	0 V
(011)	(GR)			SWILCH OIL	Selector lever P or N	Battery voltage
36 (G)	Ground	Battery power supply	Input	Ignition sw	itch OFF	Battery voltage
39 (P)	_	CAN-L	Input/ Output		_	_
40 (L)	_	CAN-H	Input/ Output	_		_
41 (B)	Ground	Ground	_	Ignition sw	itch ON	0 V
42	Ground	Cooling fan relay control	Input	Ignition sw	tch OFF or ACC	0 V
(Y)	Cround	Gooling lan rolay control	mpat	Ignition sw	tch ON	0.7 V
43 (SB)	Ground	A/T shift selector (Detention switch)	Input	Ignition switch ON	Press the selector button (Selector lever P) Selector lever in any position other than P	Battery voltage
					Release the selector but- ton (selector lever P)	0 V
44	Ground	Horn relay control	Input	The horn is	deactivated	Battery voltage
(W)	Ground	Hom relay control	iriput	The horn is	activated	0 V
45	Ground	Anti theft horn relay control	Input	The horn is	deactivated	Battery voltage
(G)	Cround	7 and their Hellay Contion	put	The horn is	activated	0 V
46 (BR)	Ground	Starter relay control	Input	Ignition switch ON	Selector lever in any position other than P or N	0 V
(511)				S.I.I.O.I OIV	Selector lever P or N	Battery voltage
<u> </u>					A/C switch OFF	0 V
48 (L)	Ground	A/C relay power supply	Output	Engine running	A/C switch ON (A/C compressor is operating)	Battery voltage

PCS-24 2015 QX70 **Revision: 2015 February**

Α

В

С

 D

Е

F

G

Н

J

Κ

L

PCS

Ν

0

Р

< ECU DIAGNOSIS INFORMATION >

	inal No.	Description			Value						
	e color)	Signal name	Input/	Condition	(Approx.)						
49	_	J. Company	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V						
(W)*1 (SB)*3	Ground	ECM relay power supply	Output	Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF)	Battery voltage						
51	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V						
(G)	Ground	ignition relay power supply	Output	Ignition switch ON	Battery voltage						
52	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V						
(W)	Ground	ignition relay power supply	Output	Ignition switch ON	Battery voltage						
53				Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V						
(W)	Ground	ECM relay power supply	Output	Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF)	Battery voltage						
		Throttle control motor re- lay power supply								Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V
54 (R)				Chitchit	Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF)	Battery voltage					
55 (BR)	Ground	ECM power supply	Output	Ignition switch OFF	Battery voltage						
56				Ignition switch OFF	0 V						
(BG) ^{*1} (V) ^{*3}	Ground	Ignition relay power supply	Output	Ignition switch ON	Battery voltage						
57	Ground	lanition roley newer euroby	Output	Ignition switch OFF	0 V						
(LG)	Ground	Ignition relay power supply	Output	Ignition switch ON	Battery voltage						
58	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V						
(Y)	Ground	ignition relay power supply	Output	Ignition switch ON	Battery voltage						
69				Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	Battery voltage						
(W)	Ground	ECM relay control	Output	Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF)	0 – 1.5 V						
					0 – 1.0 V						
70 (BG)	Ground	Throttle control motor re- lay control	Output	Ignition switch ON → OFF	↓ Battery voltage ↓ 0 V						
				Ignition switch ON	0 – 1.0 V						
74				Ignition switch OFF	0 V						
(G)	Ground	Ignition relay power supply	Output	Ignition switch ON	Battery voltage						
75	_			Ignition Engine stopped	0 V						
(Y)	Ground	Oil pressure switch	Input	switch ON Engine running	Battery voltage						

PCS-25 Revision: 2015 February 2015 QX70

< ECU DIAGNOSIS INFORMATION >

Terminal No. Description					Value	
	e color)	Signal name	Input/		Condition	Value (Approx.)
+	_		Output			
				Ignition swi	tch ON	(V) 6 4 2 0 2ms JPMIA0001GB 6.3 V
76 (P)*1 (V)*3	Ground	Power generation com- mand signal	Output		on "ACTIVE TEST", "AL- R DUTY" of "ENGINE"	(V) 6 4 2 0 2 2 ms JPMIA0002GB 3.8 V
			80% is set on "ACTIVE TEST", "AL- TERNATOR DUTY" of "ENGINE"		(V) 6 4 2 0 2ms JPMIA0003GB 1.4 V	
77 (B) ^{*1} (L) ^{*3}	Ground	Fuel pump relay control	Output	Approximately 1 second after turning the ignition switch ON Engine running Approximately 1 second or more after		0 – 1.0 V Battery voltage
80 (W)	Ground	Starter motor	Output	turning the ignition switch ON At engine cranking		Battery voltage
83				Ignition	Lighting switch OFF	0 V
(R)	Ground	Headlamp LO (RH)	Output	switch ON	Lighting switch 2ND	Battery voltage
84	_		_	Ignition	Lighting switch OFF	0 V
(P)	Ground	Headlamp LO (LH)	Output	switch ON	Lighting switch 2ND	Battery voltage
86 (W)	Ground	Front fog lamp	Output	Lighting switch 2ND	 Front fog lamp switch ON Daytime running light activated (Only for Canada) 	Battery voltage
					Front fog lamp switch OFF	0 V
88 (G)	Ground	Washer pump power supply	Output	Ignition switch ON		Battery voltage
89 (BR)	Ground	Headlamp HI (RH)	Output	Ignition switch ON	Lighting switch HI Lighting switch PASS	Battery voltage
					Lighting switch OFF	0 V
90 (Y)	Ground	Headlamp HI (LH)	Output	Ignition switch ON	Lighting switch HI Lighting switch PASS	Battery voltage
. ,					Lighting switch OFF	0 V

< ECU DIAGNOSIS INFORMATION >

	inal No.	Description				Value
+ (VVire	e color)	Signal name	Input/ Output	Condition		(Approx.)
91	91 (P) Ground Parking lamp	Dadia a la ser	Output	tput Ignition switch ON	Lighting switch 1ST	Battery voltage
(P)		Parking lamp			Lighting switch OFF	0 V
97 (V)	Ground	Cooling fan control	Output	Engine idling		0 – 5 V
104	Ground	Llood quitab	Innut	Close the hood		Battery voltage
(LG)	Ground	Hood switch Input		Open the hood		0 V

^{*1:} VK engine models

 D

С

Α

В

Е

F

G

Н

J

K

L

PCS


Ν

0


^{*2:} Only for the models with ICC system


^{*3:} VQ engine models

< ECU DIAGNOSIS INFORMATION >

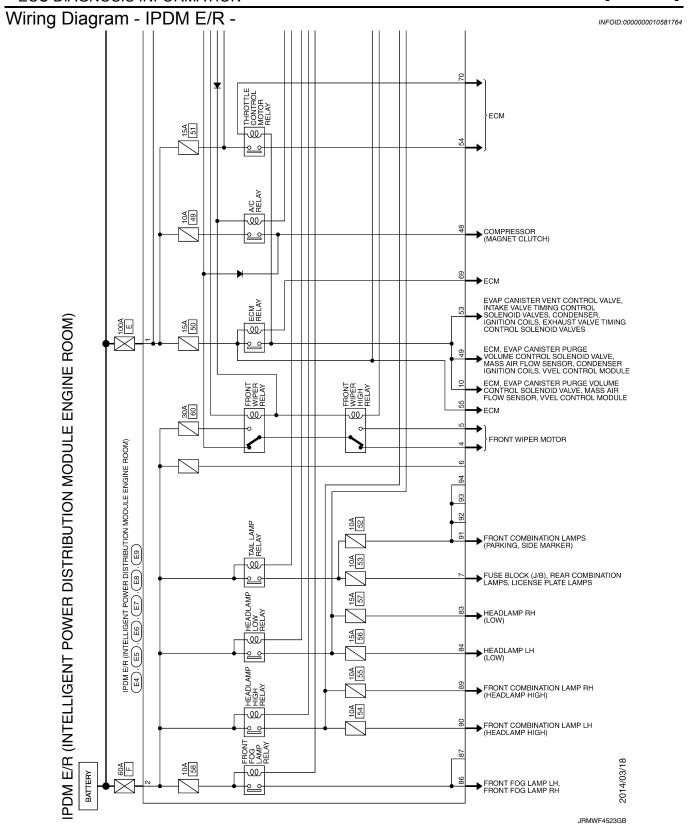


< ECU DIAGNOSIS INFORMATION >

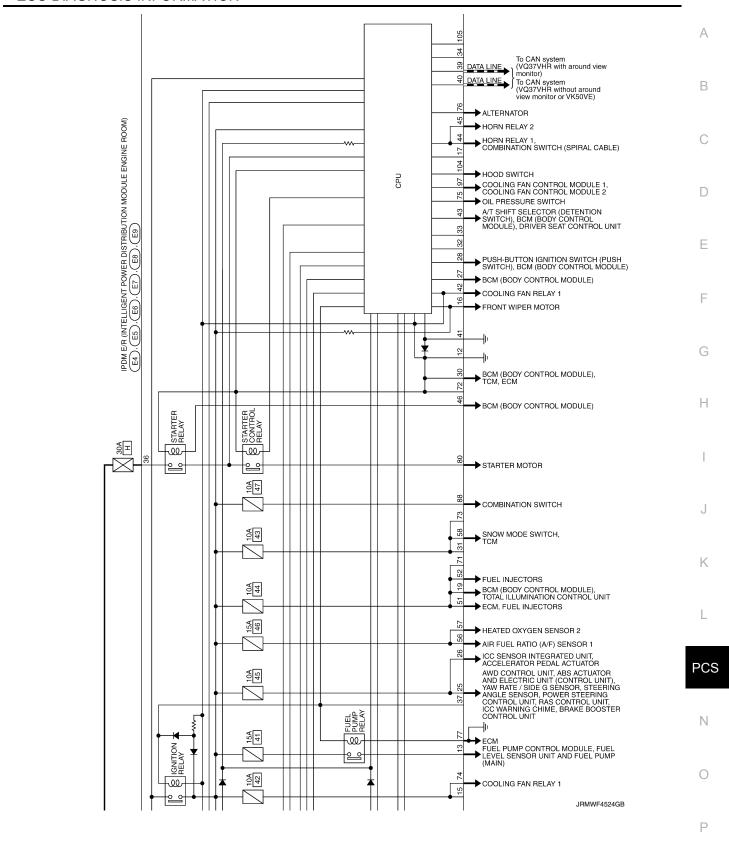

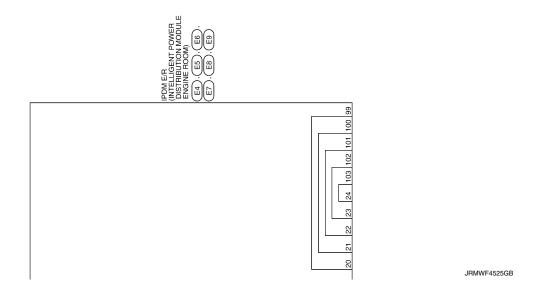

< ECU DIAGNOSIS INFORMATION >

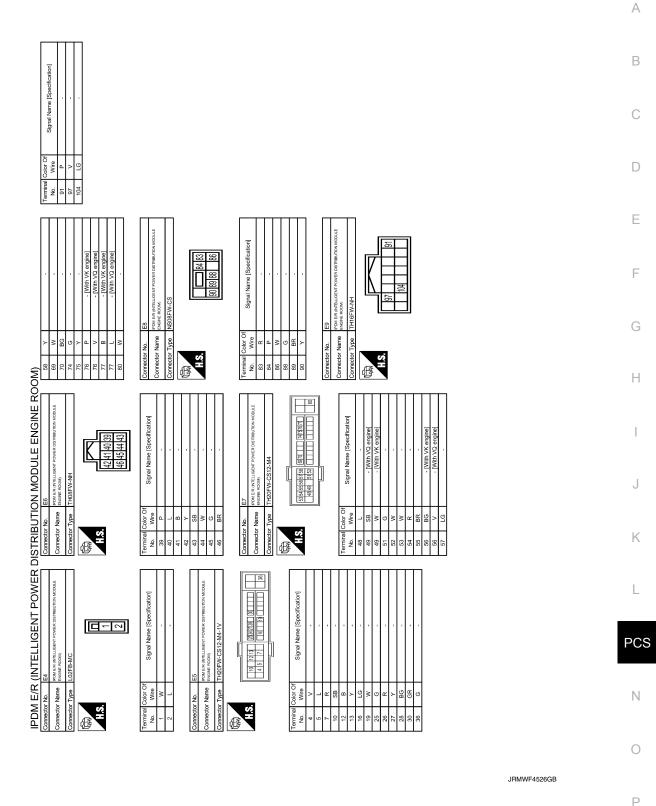

Fail-safe INFOID:0000000010581765

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

PCS-31 Revision: 2015 February 2015 QX70

< ECU DIAGNOSIS INFORMATION >

Control part	Fail-safe operation
Cooling fan	 Outputs the pulse duty signal (PWM signal) 100% when the ignition switch is turned ON Outputs the pulse duty signal (PWM signal) 0% when the ignition switch is turned OFF
A/C compressor	A/C relay OFF
Alternator	Outputs the power generation command signal (PWM signal) 0%

If No CAN Communication Is Available With BCM

Control part	Fail-safe operation
Headlamp	Turns ON the headlamp low relay when the ignition switch is turned ON Turns OFF the headlamp low relay when the ignition switch is turned OFF Headlamp high relay OFF
Parking lampsLicense plate lampsSide marker lampsIlluminationsTail lamps	 Turns ON the tail lamp relay when the ignition switch is turned ON Turns OFF the tail lamp relay when the ignition switch is turned OFF
Front wiper	 The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed. The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.
Front fog lamps	Front fog lamp relay OFF
Horn	Horn OFF
Ignition relay	The status just before activation of fail-safe is maintained.
Starter motor	Starter control relay OFF

IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

Voltage	Voltage judgment			
Ignition relay contact side	Ignition relay excitation coil side	IPDM E/R judgment	Operation	
ON	ON	Ignition relay ON normal	_	
OFF	OFF	Ignition relay OFF normal	_	
ON	OFF	Ignition relay ON stuck	Detects DTC "B2098: IGN RELAY ON" Turns ON the tail lamp relay for 10 minutes	
OFF	ON	Ignition relay OFF stuck	Detects DTC "B2099: IGN RELAY OFF"	

FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper stop position signal.

When a front wiper stop position signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop five times.

Ignition switch	Front wiper switch	Front wiper stop position signal
ON	OFF	The front wiper stop position signal (stop position) cannot be input for 10 seconds.
	ON	The front wiper stop position signal does not change for 10 seconds.

< ECU DIAGNOSIS INFORMATION >

NOTE:

This operation status can be confirmed on the IPDM E/R "Data Monitor" that displays "BLOCK" for the item "WIP PROT" while the wiper is stopped.

STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

DTC Index INFOID:0000000010581766

NOTE:

- The details of time display are as follows.
- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.
- IGN counter is displayed on FFD (Freeze Frame data).
- The number is 0 when is detected now.
- The number increases like 1 \rightarrow 2 \cdots 38 \rightarrow 39 after returning to the normal condition whenever IGN OFF \rightarrow ON.
- The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

CONSULT display	Fail-safe	Reference
No DTC is detected. further testing may be required.	_	_
U1000: CAN COMM CIRCUIT	×	PCS-15
B2098: IGN RELAY ON CIRC	×	PCS-16
B2099: IGN RELAY OFF CIRC		PCS-18
B210B: STR CONT RLY ON CIRC		<u>SEC-83</u>
B210C: STR CONT RLY OFF CIRC	-	<u>SEC-84</u>
B210D: STARTER RLY ON CIRC	-	SEC-86
B210E: STARTER RLY OFF CIRC		<u>SEC-88</u>
B210F: INTRLCK/PNP SW ON		<u>SEC-90</u>
B2110: INTRLCK/PNP SW OFF	_	SEC-92

PCS

K

В

D

Н

v. Applicable

Ν

0

Р

PCS-33 Revision: 2015 February 2015 QX70 < PRECAUTION > [IPDM E/R]

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the
 ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with
 a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing
 serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precautions for Removing Battery Terminal


 When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

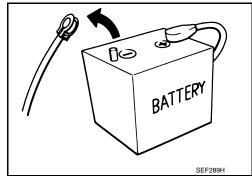

INFOID:0000000011008499

After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.
 NOTE:


The removal of 12V battery may cause a DTC detection error.

PRECAUTIONS

< PRECAUTION > [IPDM E/R]

Precaution for Procedure without Cowl Top Cover

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

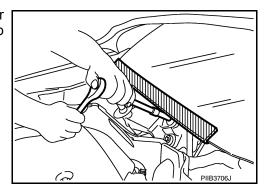

В

Α

INFOID:0000000010581768

D

Е

F

G

Н

ı

J

K

L

PCS

Ν

0


< REMOVAL AND INSTALLATION >

[IPDM E/R]

REMOVAL AND INSTALLATION

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Exploded View

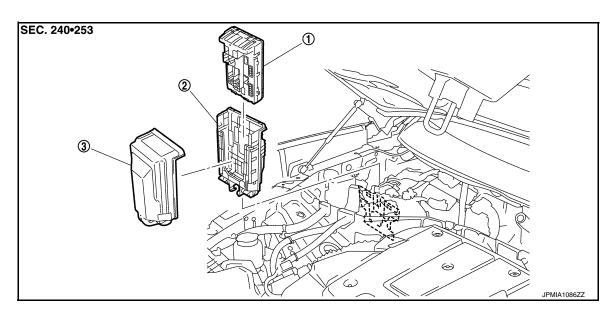

1. IPDM E/R

2. IPDM E/R cover B

3. IPDM E/R cover A

Removal and Installation


INFOID:0000000010581770

CAUTION:

IPDM E/R integrated relays are not serviceable parts, and must not be removed from the unit.

REMOVAL


- 1. Disconnect the battery cable from the negative terminal.
- 2. Remove the cowl top cover (RH). Refer to EXT-22, "Exploded View".
- 3. Pull up the IPDM E/R assembly while pressing the pawls (A) on the back of the IPDM E/R cover B (1).

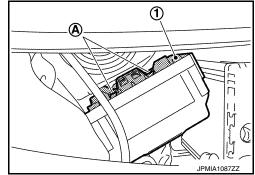

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) [IPDM E/R]

< REMOVAL AND INSTALLATION >

- Remove the IPDM E/R cover A (1) while pressing the pawls (A) at the lower end of the IPDM E/R cover A.
- 5. Disconnect the harness connector and remove the IPDM E/R (2).
- 6. Remove the IPDM E/R cover B.

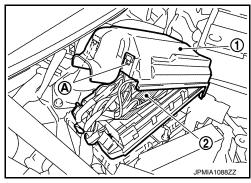

INSTALLATION

Install in the reverse order of removal.

Е

D

Α

В

F

Н

K

PCS

Ν


0

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

OVERALL SEQUENCE

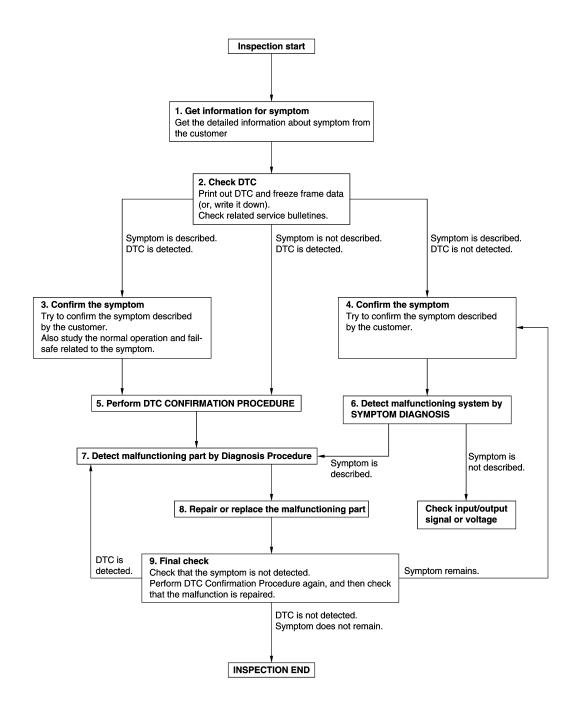

JMKIA8652GB

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[POWER DISTRIBUTION SYSTEM]

1.GET INFORMATION FOR SYMPTOM

- 1. Get detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurs).
- Check operation condition of the function that is malfunctioning.

>> GO TO 2.

2.CHECK DTC

- 1. Check DTC.
- 2. Perform the following procedure if DTC is detected.
- Record DTC and freeze frame data (Print them out using CONSULT.)
- Erase DTC.
- Study the relationship between the cause detected by DTC and the symptom described by the customer.
- Check related service bulletins for information.

Are any symptoms described and any DTC detected?

Symptom is described, DTC is detected>>GO TO 3.

Symptom is described, DTC is not detected>>GO TO 4.

Symptom is not described, DTC is detected>>GO TO 5.

CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Also study the normal operation and fail-safe related to the symptom.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5.

4. CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6.

5. PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC CONFIRMATION PROCEDURE for the detected DTC, and then check that DTC is detected again. At this time, always connect CONSULT to the vehicle, and check self diagnostic results in real time. If two or more DTCs are detected, refer to BCS-87, "DTC Inspection Priority Chart", and determine trouble diagnosis order.

NOTE:

- Freeze frame data is useful if the DTC is not detected.
- Perform Component Function Check if DTC CONFIRMATION PROCEDURE is not included on Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check.

If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC CONFIR-MATION PROCEDURE.

Is DTC detected?

YES >> GO TO 7.

NO >> Check according to GI-47, "Intermittent Incident".

6.DETECT MALFUNCTIONING SYSTEM BY SYMPTOM DIAGNOSIS

Detect malfunctioning system according to SYMPTOM DIAGNOSIS based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

Is the symptom described?

YES >> GO TO 7.

NO >> Monitor input data from related sensors or check voltage of related module terminals using CON-SULT.

7. DETECT MALFUNCTIONING PART BY DIAGNOSTIC PROCEDURE

В

Α

Е

D

Н

J

PCS

N

0

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[POWER DISTRIBUTION SYSTEM]

Inspect according to Diagnostic Procedure of the system.

Is malfunctioning part detected?

YES >> GO TO 8.

NO >> Check according to GI-47, "Intermittent Incident".

8.REPAIR OR REPLACE THE MALFUNCTIONING PART

- 1. Repair or replace the malfunctioning part.
- Reconnect parts or connectors disconnected during Diagnostic Procedure again after repair and replacement.
- 3. Check DTC. If DTC is detected, erase it.

>> GO TO 9.

9. FINAL CHECK

When DTC is detected in step 2, perform DTC CONFIRMATION PROCEDURE again, and then check that the malfunction is repaired securely.

When symptom is described by the customer, refer to confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Is DTC detected and does symptom remain?

YES-1 >> DTC is detected: GO TO 7.

YES-2 >> Symptom remains: GO TO 4.

NO >> Before returning the vehicle to the customer, always erase DTC.

POWER DISTRIBUTION SYSTEM

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

SYSTEM DESCRIPTION

POWER DISTRIBUTION SYSTEM

System Description

• PDS (POWER DISTRIBUTION SYSTEM) is the system that BCM controls with the operation of the pushbutton ignition switch and performs the power distribution to each power circuit. This system is used instead of the mechanical power supply changing mechanism with the operation of the conventional key cylinder.

• The push-button ignition switch can be operated when Intelligent Key is in the following condition. Refer to Engine Start Function for details.

- Intelligent Key is in the detection area of the inside key antenna
- Insert Intelligent Key into the key slot
- The push-button ignition switch operation is input to BCM as a signal. BCM changes the power supply position according to the status and operates the following relays to supply power to each power circuit.
- Ignition relay (built into IPDM E/R)
- Ignition relay (inserted into fuse block)
- ACC relay
- Blower relay
- The power supply position changes due to the conditions of push-button ignition switch operation, brake pedal, clutch pedal, selector lever and vehicle speed.

NOTE:

• The power supply position can be confirmed with the lighting of the indicators near the push-button ignition switch.

BATTERY SAVER SYSTEM

When all of the following conditions are met for 60 minutes, the battery saver system will cut off the power supply to prevent battery discharge.

- The ignition switch is in the ACC position
- All doors are closed
- Selector lever is in the P position

Reset Condition of Battery Saver System

If any of the following conditions are met the battery saver system is released and the steering will change automatically to the LOCK position from the OFF position.

- Opening any door
- Operating with door key cylinder on door lock
- Operating with request switch on door lock
- Operating with Intelligent Key on door lock

Press push-button ignition switch and ignition switch will change to the ACC position from the OFF position.

PUSH-BUTTON IGNITION SWITCH OPERATION PROCEDURE

The power supply position changing operation can be performed with the following operations.

Operation Enable Condition

- When an Intelligent Key is within the detection area of inside key antenna or when it is inserted into the key slot, the operation is as per the following.
- When starting the engine, the BCM monitors the following engine start conditions,
- Brake pedal operating condition
- Selector lever position
- Vehicle speed
- Unless each start condition is fulfilled, the engine will not respond regardless of how many times the engine switch is pressed. At that time, illumination repeats the position in the order of LOCK→ACC→ON→OFF.

Operation Condition

Power supply position	Engine start/	Push-button ignition switch op-	
i ower supply position	Brake pedal	Selector lever position	eration frequency
LOCK → ACC	Not depressed	Any position	1
$LOCK \to ACC \to ON$	Not depressed	Any position	2

PCS

K

Α

D

Е

INFOID:0000000010581772

Ν

0


[POWER DISTRIBUTION SYSTEM]

Power supply position	Engine start/	Push-button ignition switch op-	
rower supply position	Brake pedal	Selector lever position	eration frequency
$\begin{array}{c} LOCK \to ACC \to ON \to \\ OFF \end{array}$	Not depressed	Any position	3
LOCK → START ACC → START ON → START (Engine start)	Depressed	P or N position (*1)	I [If the switch is pressed once, the engine starts from any pow- er supply position (LOCK, ACC and ON)]
Engine is running → OFF (Engine stop)	_	P position	1
Engine is running → ACC (Engine stop)	_	Any position other than P (*2)	1
Engine stall return operation while driving	_	N position	1

- *1: When the selector lever position is in the N position, the engine start condition is different according to the vehicle speed.
- At a vehicle speed of less than 4 km/h (2.5 MPH), the engine can start only when the brake pedal is depressed.
- At a vehicle speed of 4 km/h (2.5 MPH) or more, the engine can start even if the brake pedal is not depressed. (It is the same as "Engine stall return operation while driving".)
- *2: When the selector lever position is in any position other than the P position and when the vehicle speed is 5 km/h (3.1 MPH) or more, the engine stop condition is different.
- Press and hold the push-button ignition switch for 2 seconds or more. (When the push-button ignition switch is pressed for too short a time, the operation may be invalid, so properly press and hold to prevent an incorrect operation.)
- · Press the push-button ignition switch 3 times or more within 1.5 seconds. (Emergency stop operation)

Component Parts Location

INFOID:0000000010581773

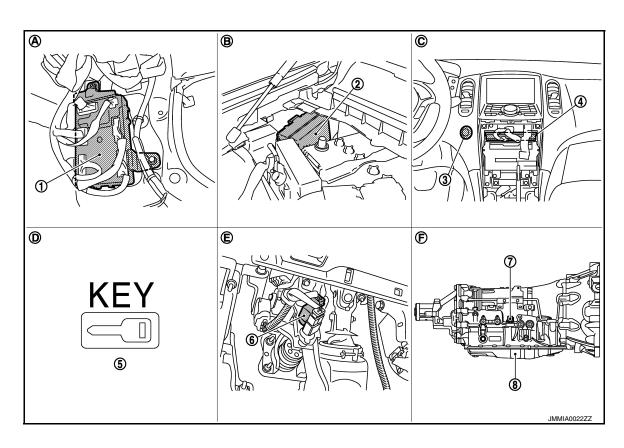

POWER DISTRIBUTION SYSTEM

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

1.	BCM M118, M119, M121, M122, M123	2.	IPDM E/R E5, E6, F7	3.	Push button ignition switch M50	Α
4.	Unified meter and A/C amp. M66, M67	5.	Key warning lamp (Combination meter M53)	6.	Stop lamp switch E110	

7. A/T assembly connector F51
 8. TCM (built in A/T assembly) F151
 A. Dash side lower (passenger side)
 B. Engine room dash panel (RH)
 C. View with the cluster lid C removed

D. Located on the combination meter E. Behind the instrument assist lower F. A/T assembly

panel

Component Description

INFOID:0000000010581774

Component	Reference
IPDM E/R	PCS-4
Ignition relay (built into IPDM E/R)	PCS-53
Ignition relay (inserted into fuse block)	PCS-53
Accessory relay	PCS-57
Blower relay	PCS-59
Stop lamp switch	<u>SEC-55</u>
Transmission range switch	<u>SEC-69</u>
Push-button ignition switch	PCS-67

Н

В

D

Е

F

G

ı

<

PCS

Ν

COMMON ITEM

COMMON ITEM: CONSULT Function (BCM - COMMON ITEM)

INFOID:0000000011008502

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	 Read and save the vehicle specification. Write the vehicle specification when replacing BCM.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

x: Applicable item

Cuatam	Sub system selection item	Diagnosis mode			
System	Sub system selection item	Work Support	Data Monitor	Active Test	
Door lock	DOOR LOCK	×	×	×	
Rear window defogger	REAR DEFOGGER		×	×	
Warning chime	BUZZER		×	×	
Interior room lamp timer	INT LAMP	×	×	×	
Exterior lamp	HEAD LAMP	×	×	×	
Wiper and washer	WIPER	×	×	×	
Turn signal and hazard warning lamps	FLASHER	×	×	×	
_	AIR CONDITONER*				
Intelligent Key system Engine start system	INTELLIGENT KEY	×	×	×	
Combination switch	COMB SW		×		
Body control system	BCM	×			
IVIS - NATS	IMMU		×	×	
Interior room lamp battery saver	BATTERY SAVER	×	×	×	
Back door open	TRUNK		×	×	
Vehicle security system	THEFT ALM	×	×	×	
RAP system	RETAINED PWR		×		
Signal buffer system	SIGNAL BUFFER		×	×	

NOTE:

FREEZE FRAME DATA (FFD)

The BCM records the following vehicle condition at the time a particular DTC is detected, and displays on CONSULT.

^{*:} This item is displayed, but is not used.

[POWER DISTRIBUTION SYSTEM]

CONSULT screen item	Indication/Unit	Description		
Vehicle Speed	km/h	Vehicle speed of the moment a particular DTC is detected		
Odo/Trip Meter	km	Total mileage (Odometer value) of the moment a particular DTC is detected		
	SLEEP>LOCK		While turning BCM status from low power consumption mode to	
	OLLLI FLOOR		normal mode (Power supply position is "LOCK"*)	
	SLEEP>OFF		While turning BCM status from low power consumption mode to normal mode (Power supply position is "OFF".)	
	LOCK>ACC		While turning power supply position from "LOCK"* to "ACC"	
	ACC>ON		While turning power supply position from "ACC" to "IGN"	
	RUN>ACC		While turning power supply position from "RUN" to "ACC" (Vehicle is stopping and selector lever is except P position.)	
	CRANK>RUN		While turning power supply position from "CRANKING" to "RUN" (From cranking up the engine to run it)	
	RUN>URGENT	Power position status of the moment a particular DTC is detected*	While turning power supply position from "RUN" to "ACC" (Emergency stop operation)	
	ACC>OFF		While turning power supply position from "ACC" to "OFF"	
	OFF>LOCK		While turning power supply position from "OFF" to "LOCK"*	
Vehicle Condition	OFF>ACC		While turning power supply position from "OFF" to "ACC"	
	ON>CRANK		While turning power supply position from "IGN" to "CRANKING"	
	OFF>SLEEP		While turning BCM status from normal mode (Power supply position is "OFF".) to low power consumption mode	
	LOCK>SLEEP		While turning BCM status from normal mode (Power supply position is "LOCK"*.) to low power consumption mode	
	LOCK		Power supply position is "LOCK"*	
	OFF		Power supply position is "OFF" (Ignition switch OFF)	
	ACC		Power supply position is "ACC" (Ignition switch ACC)	
	ON		Power supply position is "IGN" (Ignition switch ON with engine stopped)	
	ENGINE RUN		Power supply position is "RUN" (Ignition switch ON with engine running)	
	CRANKING		Power supply position is "CRANKING" (At engine cranking)	
IGN Counter	0 - 39	 The number of times that ignition switch is turned ON after DTC is detected The number is 0 when a malfunction is detected now. The number increases like 1 → 2 → 338 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The number is fixed to 39 until the self-diagnosis results are erased if it is over 39. 		

NOTE:

- *: Power supply position shifts to "LOCK" from "OFF", when ignition switch is in the OFF position, selector lever is in the P position, and any of the following conditions are met.
- · Closing door
- Opening door
- Door is locked using door request switch
- Door is locked using Intelligent Key

The power supply position shifts to "ACC" when the push-button ignition switch (push switch) is pushed at "LOCK".

INTELLIGENT KEY

INTELLIGENT KEY: CONSULT Function (BCM - INTELLIGENT KEY)

INFOID:0000000011008509

0

Р

WORK SUPPORT

< SYSTEM DESCRIPTION >

Monitor item	Description
REMO CONT ID CONFIR	It can be checked whether Intelligent Key ID code is registered or not in this mode.
AUTO LOCK SET	Auto door lock time can be changed in this mode. • MODE 1: 1 min. • MODE 2: 5 min. • MODE 3: 30 sec. • MODE 4: 2 min.
WELCOME LIGHT OP SET	Welcome light function mode can be changed to operate (WITH) or not operate (WITHOUT) in this mode.
LOCK/UNLOCK BY I-KEY	Door lock/unlock function by door request switch (driver side, passenger side and back door) mode can be changed to operate (WITH) or not operate (WITHOUT) in this mode.
ENGINE START BY I-KEY	Engine start function mode can be changed to operate (WITH) or not operate (WITHOUT) in this mode.
TRUNK/GLASS HATCH OPEN	Buzzer reminder function mode by back door request switch can be changed to operate (ON) or not operate (OFF) in this mode.
PANIC ALARM SET	Panic alarm button pressing time on Intelligent Key remote control button can be selected from the following in this mode. • MODE 1: 0.5 sec. • MODE 2: Non-operational • MODE 3: 1.5 sec.
PW DOWN SET	Unlock button pressing time on Intelligent Key button can be selected from the following in this mode. • MODE 1: 3 sec. • MODE 2: Non-operational • MODE 3: 5 sec.
TRUNK OPEN DELAY	NOTE: This item is displayed, but cannot be supported.
LO- BATT OF KEY FOB WARN	Intelligent Key low battery warning mode can be changed to operate (WITH) or not operate (WITHOUT) with this mode.
ANTI KEY LOCK IN FUNCTI	Key reminder function mode can be changed to operate (WITH) or not operate (WITHOUT) with this mode.
HAZARD ANSWER BACK	Hazard reminder function mode can be selected from the following in this mode. • LOCK ONLY: Door lock operation only • UNLOCK ONLY: Door unlock operation only • LOCK/UNLOCK: Lock/unlock operation • OFF: Non-operational
ANS BACK I-KEY LOCK	Buzzer reminder function (lock operation) mode by door request switch (driver side and passenger side) can be selected from the following in this mode. • Horn chirp: Sound horn • Buzzer: Sound Intelligent Key warning buzzer • OFF: Non-operational
ANS BACK I-KEY UNLOCK	Buzzer reminder function (unlock operation) mode by door request switch can be changed to operate (ON) or not operate (OFF) in this mode.
SHORT CRANKING OUTPUT	Starter motor can operate during the times below. • 70 msec. • 100 msec. • 200 msec.
INSIDE ANT DIAGNOSIS	This function allows inside key antenna self-diagnosis.
HORN WITH KEYLESS LOCK	Horn reminder function mode by Intelligent Key button can be changed to operate (ON) or not operate (OFF) in this mode.
WELCOME LIGHT SELECT	Welcome light function mode can be selected from the following in this mode. • Puddle Lamp (ON/OFF) • Room Lamp (ON/OFF) • Head and Tail Lamps (This item is displayed, but cannot be supported.) • Outside Handle (This item is displayed, but cannot be supported.)

[POWER DISTRIBUTION SYSTEM]

Α

В

C

 D

Е

F

Н

K

PCS

Ν

0

Р

< SYSTEM DESCRIPTION >

Refer to BCS-88, "DTC Index".

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item	Condition	
REQ SW -DR	Indicates [ON/OFF] condition of door request switch (driver side).	
REQ SW -AS	Indicates [ON/OFF] condition of door request switch (passenger side).	
REQ SW -BD/TR	Indicates [ON/OFF] condition of back door request switch.	
PUSH SW	Indicates [ON/OFF] condition of push-button ignition switch.	
IGN RLY2 -F/B	Indicates [ON/OFF] condition of ignition relay 2.	
CLUCH SW	NOTE: This item is displayed, but cannot be monitored.	
BRAKE SW 1	Indicates [ON/OFF] condition of brake switch.	
DETE/CANCL SW	Indicates [ON/OFF] condition of the P position.	
SFT PN/N SW	Indicates [ON/OFF] condition of the P or N position.	
S/L -LOCK	NOTE: This item is displayed, but cannot be monitored.	
S/L -UNLOCK	NOTE: This item is displayed, but cannot be monitored.	
S/L RELAY -F/B	NOTE: This item is displayed, but cannot be monitored.	
UNLK SEN -DR	Indicates [ON/OFF] condition of driver door UNLOCK status.	
PUSH SW -IPDM	Indicates [ON/OFF] condition of push-button ignition switch.	
IGN RLY1 -F/B	Indicates [ON/OFF] condition of ignition relay 1.	
DETE SW -IPDM	Indicates [ON/OFF] condition of the P position.	
SFT PN -IPDM	Indicates [ON/OFF] condition of the P or N position.	
SFT P -MET	Indicates [ON/OFF] condition of the P position.	
SFT N -MET	Indicates [ON/OFF] condition of the N position.	
ENGINE STATE	Indicates [STOP/START/CRANK/RUN] condition of engine states.	
S/L LOCK-IPDM	NOTE: This item is displayed, but cannot be monitored.	
S/L UNLK-IPDM	NOTE: This item is displayed, but cannot be monitored.	
S/L RELAY-REQ	NOTE: This item is displayed, but cannot be monitored.	
VEH SPEED 1	Displays the vehicle speed signal received from unified meter and A/C amp. by numerical value [Km/h].	
VEH SPEED 2	Displays the vehicle speed signal received from ABS or VDC or CVT by numerical value [Km/h].	
DOOR STAT-DR	Indicates [LOCK/READY/UNLOCK] condition of driver side door status.	
DOOR STAT-AS	Indicates [LOCK/READY/UNLOCK] condition of passenger side door status.	
ID OK FLAG	Indicates [SET/RESET] condition of key ID.	
PRMT ENG STRT	Indicates [SET/RESET] condition of engine start possibility.	
PRMT RKE STRT	NOTE: This item is displayed, but cannot be monitored.	
KEY SW -SLOT	Indicates [ON/OFF] condition of key slot.	
TRNK/HAT MNTR	NOTE: This item is displayed, but cannot be monitored.	

PCS-47 Revision: 2015 February 2015 QX70

[POWER DISTRIBUTION SYSTEM]

Monitor Item	Condition
RKE-LOCK	Indicates [ON/OFF] condition of LOCK signal from Intelligent Key.
RKE-UNLOCK	Indicates [ON/OFF] condition of UNLOCK signal from Intelligent Key.
RKE-TR/BD	NOTE: This item is displayed, but cannot be monitored.
RKE-PANIC	Indicates [ON/OFF] condition of PANIC button of Intelligent Key.
RKE-P/W OPEN	Indicates [ON/OFF] condition of P/W DOWN signal from Intelligent Key.
RKE-MODE CHG	Indicates [ON/OFF] condition of MODE CHANGE signal from Intelligent Key.
RKE OPE COUN1	When remote keyless entry receiver receives the signal transmitted while operating on Intelligent Key, the numerical values starts changing.
RKE OPE COUN2	NOTE: This item is displayed, but cannot be monitored.

ACTIVE TEST

Test item	Description
BATTERY SAVER	This test is able to check interior room lamp operation. The interior room lamp is activated when "ON" on CONSULT screen is touched.
PW REMOTO DOWN SET	This test is able to check power window down operation. The power window down is activated when "ON" on CONSULT screen is touched.
OUTSIDE BUZZER	This test is able to check Intelligent Key warning buzzer operation. The Intelligent Key warning buzzer is activated when "ON" on CONSULT screen is touched.
INSIDE BUZZER	This test is able to check warning chime in combination meter operation. Takes away warning chime sounds when "TAKE OUT" on CONSULT screen is touched. Key warning chime sounds when "KEY" on CONSULT screen is touched. The P position warning chime sounds when "KNOB" on CONSULT screen is touched.
INDICATOR	This test is able to check warning lamp operation. • "KEY" Warning lamp illuminates when "RED ON" on CONSULT screen is touched. • The "KEY" Warning lamp blinks when "RED IND" on CONSULT screen is touched.
INT LAMP	This test is able to check interior room lamp operation. The interior room lamp is activated when "ON" on CONSULT screen is touched.
LCD	This test is able to check meter display information Engine start information displays when "BP N" on CONSULT screen is touched. Engine start information displays when "BP I" on CONSULT screen is touched. Key ID warning displays when "ID NG" on CONSULT screen is touched. ROTAT: This item is displayed, but cannot be tasted. The P position warning displays when "SFT P" on CONSULT screen is touched. Intelligent Key insert information displays when "INSRT" on CONSULT screen is touched. Intelligent Key low battery warning displays when "BATT" on CONSULT screen is touched. Take away through window warning displays when "NO KY" on CONSULT screen is touched. Take away warning displays when "OUTKY" on CONSULT screen is touched. The OFF position warning displays when "LK WN" on CONSULT screen is touched.
TRUNK/GLASS HATCH	NOTE: This item is displayed, but cannot be used.
FLASHER	This test is able to check security hazard lamp operation. The hazard lamps is activated when "LH" or "RH" on CONSULT screen is touched.
HORN	This test is able to check horn operation. The horn will be activated when "ON" on CONSULT screen is touched.
P RANGE	This test is able to check A/T shift selector power supply A/T shift selector power is supplied when "ON" on CONSULT screen is touched.
ENGINE SW ILLUMI	This test is able to check push-ignition switch illumination operation. Push-ignition switch illumination illuminates when "ON" on CONSULT screen is touched.
LOCK INDICATOR	This test is able to check indicator in push-ignition switch operation. Indicator in push-ignition switch (LOCK) illuminates when "ON" on CONSULT screen is touched.
ACC INDICATOR	This test is able to check indicator in push-ignition switch operation. Indicator in push-ignition switch (ACC) illuminates when "ON" on CONSULT screen is touched.

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

Test item	Description
IGNITION ON IND	This test is able to check indicator in push-ignition switch operation. Indicator in push-ignition switch (ON) illuminates when "ON" on CONSULT screen is touched.
KEY SLOT ILLUMI	This test is able to check key slot illumination operation. Key slot illumination blinks when "ON" on CONSULT screen is touched.

Α

В

7

D

Е

F

G

Н

J

Κ

ı

PCS

Ν

0

DTC/CIRCUIT DIAGNOSIS

U1000 CAN COMM CIRCUIT

BCM

BCM: Description

INFOID:0000000010581777

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H-line, CAN L-line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only. CAN Communication Signal Chart. Refer to LAN-34, "CAN System Specification Chart".

BCM: DTC Logic

DTC DETECTION LOGIC

DTC	CONSULT display de- scription	DTC Detection Condition	Possible cause
U1000	CAN COMM	When BCM cannot communicate CAN communication signal continuously for 2 seconds or more.	CAN communication system

BCM: Diagnosis Procedure

INFOID:0000000010581779

1.PERFORM SELF DIAGNOSTIC

- 1. Turn ignition switch ON and wait for 2 seconds or more.
- 2. Check "Self Diagnostic Result".

Is DTC "U1000" displayed?

YES >> Refer to LAN-25, "Trouble Diagnosis Flow Chart".

NO >> Refer to GI-47, "Intermittent Incident".

IPDM E/R

IPDM E/R : Description

INFOID:0000000010581780

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only. CAN Communication Signal Chart. Refer to LAN-34, "CAN System Specification Chart".

IPDM E/R : DTC Logic

INFOID:0000000010581781

DTC DETECTION LOGIC

DTC	CONSULT display de- scription	DTC Detection Condition	Possible cause
U1000	CAN COMM CIRCUIT	When IPDM E/R cannot communicate CAN communication signal continuously for 2 seconds or more	CAN communication system

IPDM E/R : Diagnosis Procedure

INFOID:0000000010581782

1. PERFORM SELF DIAGNOSTIC

U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

- 1. Turn the ignition switch ON and wait for 2 seconds or more.
- 2. Check "Self Diagnostic Result" of IPDM E/R.

Is "CAN COMM CIRCUIT" displayed?

- YES >> Refer to LAN-25, "Trouble Diagnosis Flow Chart".
- NO >> Refer to <u>GI-47</u>, "Intermittent Incident".

Α

В

C

D

Е

F

G

Н

J

Κ

L

PCS

Ν

0

U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

U1010 CONTROL UNIT (CAN)

BCM

BCM: DTC Logic

DTC DETECTION LOGIC

DTC	CONSULT display de- scription	DTC Detection Condition	Possible cause
U1010	CONTROL UNIT(CAN)	BCM detected internal CAN communication circuit malfunction.	BCM

BCM : Diagnosis Procedure

INFOID:0000000010581784

1.REPLACE BCM

When DTC "U1010" is detected, replace BCM.

>> Replace BCM. Refer to BCS-93, "Exploded View".

B2553 IGNITION RELAY

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

B2553 IGNITION RELAY

Description INFOID:0000000010581785

BCM turns ON the following relays to ignition power supply to each ECU when the ignition switch is turned ON.

- Ignition relay (located in fuse block)
- Ignition relay (built into IPDM E/R)
- Blower relay

BCM checks any ignition relay ON request for consistency with the actual ignition relay operation status.

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2553	IGN POWER CIRCUIT	BCM detects a difference of signal for 2 seconds or more between the following information. • Ignition relay (fuse block) ON/OFF operation • Ignition relay (fuse block) feedback.	Harness or connectors (Ignition relay feedback circuit is open or short) Fuse Ignition relay IPDM E/R

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON under the following conditions (start the engine), and wait for at least 2 seconds.
- Selector lever is in the P or N position.
- Do not depress brake pedal.
- 2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

YES >> Go to PCS-53, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1.CHECK DTC WITH IPDM E/R

Check "Self diagnostic result" with CONSULT. Refer to PCS-33, "DTC Index".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace malfunctioning parts.

2.check fuse

Check that the following fuse is not blown.

Signal name	Connection position	Fuse No.	Capacity
Ignition power supply	IPDM E/R	44	10A

Is the fuse blown?

YES >> Replace the blown fuse after repairing the affected circuit if a fuse is blown.

NO >> GO TO 3.

3.CHECK IGNITION RELAY FEEDBACK INPUT

- Turn ignition switch OFF.
- Disconnect BCM connector.
- 3. Check voltage between BCM harness connector and ground.

PCS

INFOID:0000000010581787

Α

D

Е

Ν

 \circ

(

B2553 IGNITION RELAY

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

(+) BCM		(–)	Condition		Voltage (V) (Approx.)
Connector	Terminal				(1 1 /
M123	123	Ground	Ignition switch	OFF	0
IVI 123	123	Giouna	Ignition switch	ON	Battery voltage

Is the inspection result normal?

YES >> GO TO 5. NO >> GO TO 4.

4. CHECK IGNITION RELAY FEEDBACK CIRCUIT

- 1. Disconnect IPDM E/R connector.
- 2. Check continuity between BCM harness connector and IPDM E/R harness connector.

В	CM	IPDI	Continuity	
Connector	Terminal	Connector Terminal		
M123	123	E5	19	Existed

3. Check continuity between BCM harness connector and ground.

В	CM		Continuity
Connector Terminal		Ground	Continuity
M123	123		Not existed

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to PCS-36, "Removal and Installation".

NO >> Repair or replace harness.

5. CHECK INTERMITTENT INCIDENT

Refer to GI-47, "Intermittent Incident".

>> INSPECTION END

[POWER DISTRIBUTION SYSTEM]

Α

D

Е

Н

PCS

Ν

Р

INFOID:0000000010581790

B260A IGNITION RELAY

Description INFOID:000000010581788

When the ignition switch is turned ON, the BCM activates the following relays to provide power supply to each ECU.

- Ignition relay (located in fuse block)
- Ignition relay (built into IPDM E/R)
- · Blower relay

BCM checks any ignition relay ON request for consistency with the actual ignition relay operation status.

DTC Logic

DTC DETECTION LOGIC

NOTE:

- If DTC B260A is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to PCS-50, "BCM: DTC Logic".
- If DTC B260A is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to <u>PCS-52, "BCM : DTC Logic"</u>.
- If DTC B260A is displayed with DTC B261A, first perform the trouble diagnosis for DTC B261A. Refer to PCS-64, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B260A	IGNITION RELAY	BCM detects a difference of signal for 2 seconds or more between the following information. Ignition relay (IPDM E/R) operation request Ignition relay feedback from IPDM E/R (CAN).	Harness or connectors (Ignition relay operation circuit is open or shorted.) IPDM E/R

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON under the following conditions, and wait for at least 2 seconds.
- Selector lever is in the P or N position.
- Do not depress brake pedal.
- Check "Self diagnostic result" with CONSULT.

Is DTC detected?

YES >> Go to PCS-55, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1.CHECK DTC WITH IPDM E/R

Check "Self diagnostic result" with CONSULT. Refer to PCS-33, "DTC_Index".

Is DTC detected?

YES >> Repair or replace the malfunctioning parts.

NO >> GO TO 2.

2. CHECK IGNITION RELAY INPUT SIGNAL

- Turn ignition switch OFF.
- 2. Disconnect BCM connector.
- 3. Check voltage between BCM harness connector and ground.

(+) CM	(–)	Voltage (V) (Approx.)
Connector	Terminal		()
M121	47	Ground	Battery voltage

Is the inspection result normal?

Revision: 2015 February PCS-55 2015 QX70

B260A IGNITION RELAY

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

YES >> GO TO 4. NO >> GO TO 3.

3.CHECK IGNITION RELAY (IPDM E/R) CIRCUIT

- Disconnect IPDM E/R connector.
- 2. Check continuity between IPDM E/R harness connector and BCM harness connector.

IPDM E/R			CM	Continuity
Connector	Terminal	Connector Terminal		Continuity
E5	27	M121	47	Existed

3. Check continuity between IPDM E/R harness connector and ground.

IPDI	M E/R		Continuity
Connector Terminal		Ground	Continuity
E5	27		Not existed

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to PCS-36, "Removal and Installation".

NO >> Repair or replace harness.

4. CHECK INTERMITTENT INCIDENT

Refer to GI-47, "Intermittent Incident".

>> INSPECTION END

[POWER DISTRIBUTION SYSTEM]

B2614 ACC RELAY

Description INFOID:0000000010581791

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.

BCM checks the power supply position internally.

DTC Logic INFOID:0000000010581792

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2614	ACC RELAY CIRC	An immediate operation of ACC relay is requested by BCM, but there is no response for more than 1 second.	Harness or connectors (ACC relay circuit is open or shorted) ACC relay

DTC CONFIRMATION PROCEDURE

1 . PERFORM DTC CONFIRMATION PROCEDURE

- Turn the power supply position to ACC under the following conditions, and wait for at least 1 second.
- Selector lever is in the P or N position.
- Do not depress brake pedal.
- Check "Self diagnostic result" with CONSULT.

Is DTC detected?

YES >> Go to PCS-57, "Diagnosis Procedure".

>> INSPECTION END NO

Diagnosis Procedure

1. CHECK ACCESSORY RELAY POWER SUPPLY

- Turn ignition switch OFF.
- 2. Disconnect accessory relay.
- Check voltage between accessory relay harness connector and ground.

(+) Accessory relay Terminal	(–)	Condition		Voltage (V) (Approx.)
1	Ground	lanition quitab	OFF	0
ı	Ground	Ignition switch	ACC	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK ACCESSORY RELAY POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect BCM connector.
- Check continuity between accessory relay harness connector and BCM harness connector.

Accessory relay	В	CM	Continuity
Terminal	Terminal Connector Terminal		Continuity
1	M122	95	Existed

Check continuity between accessory relay harness connector and ground.

PCS-57 Revision: 2015 February 2015 QX70

Α

D

Е

Н

INFOID:0000000010581793

PCS

Ν

B2614 ACC RELAY

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

Accessory relay		Continuity	
Terminal	Ground	Continuity	
1		Not existed	

Is the inspection result normal?

YES >> Replace BCM. Refer to BCS-93, "Removal and Installation".

NO >> Repair or replace harness.

3.CHECK ACCESSORY RELAY GROUND CIRCUIT

Check continuity between accessory relay harness connector and ground.

Accessory relay		Continuity	
Terminal	Ground	Continuity	
2		Existed	

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair accessory relay ground circuit.

4. CHECK ACCESSORY RELAY

Refer to PCS-58, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace accessory relay.

5. CHECK INTERMITTENT INCIDENT

Refer to GI-47, "Intermittent Incident".

>> INSPECTION END

Component Inspection


- 1. CHECK ACCESSORY RELAY
- 1. Turn ignition switch OFF.
- 2. Remove accessory relay.
- 3. Check the continuity between accessory relay terminals.

Terminals	Condition	Continuity
3 and 5	12 V direct current supply between terminals 1 and 2	Existed
J and J	No current supply	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace accessory relay.

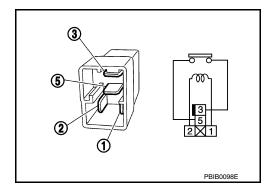

INFOID:0000000010581794

B2615 BLOWER RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

B2615 BLOWER RELAY CIRCUIT

Description INFOID:0000000010581795

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.

BCM checks the power supply position internally.

DTC Logic INFOID:0000000010581796

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2615	BLOWER RELAY CIRC	BCM detects a difference of signal for 1 second or more between the following information. • Blower relay ON/OFF request • Blower relay feedback	Harness or connectors (Blower relay circuit is open or shorted) Blower relay

DTC CONFIRMATION PROCEDURE

1 . PERFORM DTC CONFIRMATION PROCEDURE

- Turn ignition switch ON under the following conditions, and wait for at least 1 second.
- Selector lever is in the P or N position
- Do not depress brake pedal
- Check "Self diagnostic result" with CONSULT.

Is DTC detected?

YES >> Go to PCS-59, "Diagnosis Procedure".

>> INSPECTION END NO

1. CHECK BLOWER RELAY POWER SUPPLY

Turn ignition switch OFF.

Diagnosis Procedure

- 2. Disconnect blower relay.
- Check voltage between blower relay harness connector and ground.

(+) Blower relay Terminal	(–)	Condition		Voltage (V) (Approx.)
1	Ground	lanition switch	OFF or ACC	0
ı	Ground	Ignition switch	ON	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK BLOWER RELAY POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect BCM connector.
- Check continuity between blower relay harness connector and BCM harness connector.

Blower relay	В	CM	Continuity
Terminal	Terminal Connector Terminal		Continuity
1	M122	102	Existed

Check continuity between blower relay harness connector and ground.

PCS-59 Revision: 2015 February 2015 QX70

Α

D

Е

Н

INFOID:0000000010581797

PCS

Ν

B2615 BLOWER RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

Blower relay		Continuity	
Terminal	Ground	Continuity	
1		Not existed	

Is the inspection result normal?

YES >> Replace BCM. Refer to BCS-93, "Removal and Installation".

NO >> Repair or replace harness.

${f 3}.$ CHECK BLOWER RELAY GROUND CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Check continuity between blower relay harness connector and ground.

Blower relay		Continuity	
Terminal	Ground	Continuity	
2		Existed	

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair blower relay ground circuit.

4. CHECK BLOWER RELAY

Refer to PCS-60, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace blower relay.

5. CHECK INTERMITTENT INCIDENT

Refer to GI-47, "Intermittent Incident".

>> INSPECTION END

Component Inspection


1. CHECK BLOWER RELAY

- 1. Turn ignition switch OFF.
- 2. Remove blower relay.
- 3. Check the continuity between blower relay terminals.

Terminals	Condition	Continuity
3 and 5	12 V direct current supply between terminals 1 and 2	Existed
3 and 3	No current supply	Not existed

Is the inspection result normal?

YES >> INSPECTION END NO >> Replace blower relay

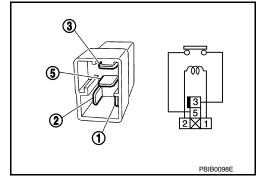

INFOID:0000000010581798

B2616 IGNITION RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

B2616 IGNITION RELAY CIRCUIT

Description INFOID:0000000010581799

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.

BCM checks the power supply position internally.

DTC Logic INFOID:0000000010581800

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2616	IGN RELAY CIRC	An immediate operation of ignition relay (fuse block) is requested by BCM, but there is no response for more than 1 second	Harness or connectors (Ignition relay circuit is open or shorted) Ignition relay (Fuse block)

DTC CONFIRMATION PROCEDURE

1 . PERFORM DTC CONFIRMATION PROCEDURE

- Turn ignition switch ON under the following conditions, and wait for at least 1 second.
- Selector lever is in the P or N position.
- Do not depress brake pedal.
- Check "Self diagnostic result" with CONSULT.

Is DTC detected?

YES >> Go to PCS-61, "Diagnosis Procedure".

>> INSPECTION END NO

Diagnosis Procedure

1. CHECK IGNITION RELAY POWER SUPPLY

- Turn ignition switch OFF.
- 2. Disconnect ignition relay.
- Check voltage between ignition relay harness connector and ground.

(+) Ignition relay	(–)	Con	dition	Voltage (V) (Approx.)	
Terminal					
1	Ground	Ignition switch	OFF or ACC	0	
ı	Giouria	ignition switch	ON	Battery voltage	

Is the inspection result normal?

YES >> GO TO 3.

>> GO TO 2. NO

2.CHECK IGNITION RELAY POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect BCM connector.
- Check continuity between ignition relay harness connector and BCM harness connector.

Ignition relay	В	BCM		
Terminal	Connector	Continuity		
1	M122	82	Existed	

Check continuity between ignition relay harness connector and ground.

PCS-61 Revision: 2015 February 2015 QX70 **PCS**

Α

D

Е

Н

INFOID:0000000010581801

Ν

B2616 IGNITION RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

Ignition relay		Continuity
Terminal	Ground	Continuity
1		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to BCS-93, "Removal and Installation".

NO >> Repair or replace harness.

3.CHECK IGNITION RELAY GROUND CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Check continuity between ignition relay harness connector and ground.

Ignition relay		Continuity
Terminal	Ground	Continuity
2		Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair ignition relay ground circuit.

4. CHECK IGNITION RELAY

Refer to PCS-62, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace ignition relay.

5. CHECK INTERMITTENT INCIDENT

Refer to GI-47, "Intermittent Incident".

>> INSPECTION END

Component Inspection


1. CHECK IGNITION RELAY

- Turn ignition switch OFF.
- 2. Remove ignition relay.
- 3. Check the continuity between ignition relay terminals.

Terminals	Condition	Continuity
3 and 5	12 V direct current supply between terminals 1 and 2	Existed
J and J	No current supply	Not existed

Is the inspection result normal?

YES >> INSPECTION END NO >> Replace Ignition relay.

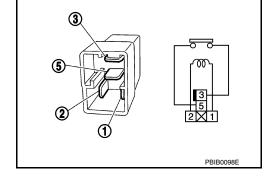

INFOID:0000000010581802

[POWER DISTRIBUTION SYSTEM]

B2618 BCM

Description INFOID:000000010581803

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.

BCM checks the power supply position internally.

DTC Logic

DTC DETECTION LOGIC

NOTE:

- If DTC B2618 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to PCS-50, "BCM: DTC Logic".
- If DTC B2618 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to PCS-50, "IPDM E/R: DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2618	ВСМ	An immediate operation of ignition relay (IPDM E/R) is requested by BCM, but there is no response for more than 1 second	ВСМ

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON under the following conditions, and wait for at least 1 second.
- Selector lever is in the P or N position.
- Do not depress brake pedal.
- Check "Self diagnostic result" with CONSULT.

Is DTC detected?

YES >> Go to PCS-63, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1. INSPECTION START

- 1. Turn ignition switch ON.
- Select "Self diagnostic result" mode with CONSULT.
- Touch "ERASE".
- 4. Perform DTC Confirmation Procedure.

See PCS-63, "DTC Logic".

Is the 1st trip DTC B2618 displayed again?

YES >> Replace BCM. Refer to BCS-93, "Removal and Installation"

NO >> INSPECTION END

PCS

Α

D

Е

Н

INFOID:0000000010581805

Ν

Р

Revision: 2015 February PCS-63 2015 QX70

B261A PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

B261A PUSH-BUTTON IGNITION SWITCH

Description INFOID:000000010581806

BCM transmits the change in the power supply position with the push-button ignition switch to IPDM E/R via the CAN communication line. IPDM E/R transmits the power supply position status via CAN communication line to BCM.

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B261A	PUSH-BTN IGNI SW	BCM detects a difference of signal for 1 second or more between the following information. Power supply position by push-button ignition switch Power supply position from IPDM E/R (CAN)	Harness or connectors (Push-button ignition switch circuit is open or shorted.)

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Press the push-button ignition switch under the following conditions, and wait for at least 1 second.
- Selector lever is in the P or N position.
- Do not depress brake pedal.
- 2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

YES >> Go to PCS-64, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000010581808

1. CHECK PUSH-BUTTON IGNITION SWITCH OPERATION

Press push-button ignition switch and check if it turns ON.

Does ignition switch turn ON?

YES >> GO TO 2. NO >> GO TO 4.

2.CHECK IGNITION SWITCH OUTPUT SIGNAL (IPDM E/R)

- 1. Disconnect push-button ignition switch connector and BCM connector.
- 2. Check voltage between IPDM E/R harness connector and ground.

(IPDI	+) M E/R	(–)	Voltage (V) (Approx.)	
Connector	Connector Terminal		(/ (pp.ox.)	
E5	28	Ground	Battery voltage	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace IPDM E/R. Refer to PCS-36, "Removal and Installation".

3.CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT (IPDM E/R)

- 1. Disconnect IPDM E/R connector.
- Check continuity between IPDM E/R harness connector and push-button ignition switch harness connector.

B261A PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

IPDI	IPDM E/R		Push-button igniti	on switch	Continuity	
Connector	Terminal	Conn	ector	Terminal	Continuity	
E5	28	M	50	4	Existed	
Check continuity be	etween IPDM E/R ha	rness conn	ector and gro	und.		
	IPDM E/R				Continuity	
Connector	Termin	nal	Ground			
E5	28		No		Not existed	
Connect BCM conr	eplace harness. SWITCH OUTPUT SI					
	(+)					
	BCM		(-)	Voltage (V)	
Connector	Termin	nal	,	,	(Approx.)	
			Ground			
YES >> GO TO 5. NO >> Replace B0	CM. Refer to <u>BCS-93</u>		and Installation		Battery voltage	
yes >> GO TO 5. NO >> Replace BO CHECK PUSH-BUT Disconnect BCM co Check continuity bo	normal? CM. Refer to BCS-93 TON IGNITION SWITH Connector and IPDM Entween BCM harness	TCH CIRCL E/R connect	and Installation	on".	Battery voltage tch harness connector	
yes >> GO TO 5. NO >> Replace BO CHECK PUSH-BUT Disconnect BCM co. Check continuity bo	normal? CM. Refer to BCS-93 TON IGNITION SWITTON SWITTON AND ENTRY ENT	TCH CIRCL E/R connect s connector	and Installation JIT (BCM) Tor. and push-but Push-button igniti	on". ton ignition swi	tch harness connecto	
yes >> GO TO 5. NO >> Replace BO CHECK PUSH-BUT Disconnect BCM co. Check continuity bo Connector	normal? CM. Refer to BCS-93 TON IGNITION SWITTON SWITTON AND ENTRY BETWEEN BCM Harness CM Terminal	TCH CIRCUE/R connector	and Installation JIT (BCM) cor. and push-but Push-button ignitic	on". ton ignition swi on switch Terminal	tch harness connecto	
yes the inspection result yes >> GO TO 5. NO >> Replace BO CHECK PUSH-BUT Disconnect BCM co Check continuity bo Connector M122	normal? CM. Refer to BCS-93 TON IGNITION SWITTON SWITTON AND TON	TCH CIRCL E/R connector s connector Conn Ms	and Installation JIT (BCM) For. and push-but Push-button ignitic	on". ton ignition swi	tch harness connecto	
yes the inspection result yes >> GO TO 5. NO >> Replace BO CHECK PUSH-BUT Disconnect BCM co Check continuity bo Connector M122	normal? CM. Refer to BCS-93 TON IGNITION SWITTON SWITTON AND ENTRY BETWEEN BCM Harness CM Terminal	TCH CIRCL E/R connector s connector Conn Ms	and Installation JIT (BCM) For. and push-but Push-button ignitic	on". ton ignition swi on switch Terminal	tch harness connecto	
yes the inspection result yes >> GO TO 5. NO >> Replace BO CHECK PUSH-BUT Disconnect BCM co Check continuity bo Connector M122	normal? CM. Refer to BCS-93 TON IGNITION SWITTON SWITTON AND TON	TCH CIRCL E/R connector s connector Conn Ms	and Installation JIT (BCM) For. and push-but Push-button ignitic	on". ton ignition swi on switch Terminal	tch harness connector Continuity Existed	
yes the inspection result yes >> GO TO 5. NO >> Replace BO CHECK PUSH-BUT Disconnect BCM co Check continuity bo Connector M122	normal? CM. Refer to BCS-93 TON IGNITION SWITH TON IGNITION Entween BCM harness CM Terminal 89 etween BCM harness	TCH CIRCLE/R connector For Connector Mess connector	and Installation JIT (BCM) For. and push-but Push-button ignitic	ton ignition swi on switch Terminal	tch harness connecto	
the inspection result YES >> GO TO 5. NO >> Replace BO CHECK PUSH-BUT Disconnect BCM co Check continuity bo Connector M122 Check continuity bo Check continuity bo Connector	normal? CM. Refer to BCS-93 TON IGNITION SWITTON SWITTON BONNECTOR and IPDM Extween BCM harness CM Terminal 89 etween BCM harness BCM BCM	TCH CIRCLE/R connector For Connector Mess connector	and Installation JIT (BCM) Tor. and push-but Push-button ignition ector 50 and ground.	ton ignition swi on switch Terminal	tch harness connector Continuity Existed	
the inspection result YES >> GO TO 5. NO >> Replace BO CHECK PUSH-BUT Disconnect BCM co Check continuity bo Connector M122 Sthe inspection result YES >> GO TO 6. NO >> Repair or result	CM. Refer to BCS-93 TON IGNITION SWITTON IGNITION SWITTON IGNITION SWITTON IGNITION SWITTON IN ITEM IN	TCH CIRCLE/R connector For Connector Mess connector	and Installation JIT (BCM) Tor. and push-but Push-button ignition ector 50 and ground.	ton ignition swi on switch Terminal	tch harness connector Continuity Existed Continuity	
the inspection result YES >> GO TO 5. NO >> Replace BO CHECK PUSH-BUT Disconnect BCM co Check continuity bo Connector M122 Sthe inspection result YES >> GO TO 6.	Terminal BCM Terminal	TCH CIRCLE/R connector For Connector Mess connector	and Installation JIT (BCM) Tor. and push-but Push-button ignition ector 50 and ground.	ton ignition swi on switch Terminal	tch harness connector Continuity Existed Continuity	

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

POWER SUPPLY AND GROUND CIRCUIT

BCM

BCM: Diagnosis Procedure

INFOID:0000000010581809

1. CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

Signal name	Fuse and fusible link No.
Battery power supply	L
battery power suppry	10

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is

NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect BCM connectors.
- 3. Check voltage between BCM harness connector and ground.

(+)	(-)	Voltage	
В	СМ		(Approx.)	
Connector	Terminal	Ground		
M118	1	Glound	Pottoni voltogo	
M119	11		Battery voltage	

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3.CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

ВСМ			Continuity
Connector Terminal		Ground	Continuity
M119	13		Existed

Does continuity exist?

YES >> INSPECTION END

NO >> Repair harness or connector.

PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

PUSH-BUTTON IGNITION SWITCH

Description INFOID:000000010581810

BCM transmits the change in the power supply position with the push-button ignition switch to IPDM E/R via the CAN communication line. IPDM E/R transmits the power supply position status via CAN communication line to BCM.

Component Function Check

1. CHECK FUNCTION

- 1. Select "PUSH SW" in "Data Monitor" mode with CONSULT.
- 2. Check the push-button ignition switch signal under the following condition.

Test item	Condition	Status
PUSH SW	Push-button ignition switch is pressed	ON
F 0311 3W	Push-button ignition switch is not pressed	OFF

Is the indication normal?

YES >> INSPECTION END

NO >> Go to PCS-67, "Diagnosis Procedure"

Diagnosis Procedure

1. CHECK PUSH-BUTTON IGNITION SWITCH OPERATION

Press push-button ignition switch and check if it turns ON.

Does ignition switch turn ON?

YES >> GO TO 2.

NO >> GO TO 4.

2. CHECK IGNITION SWITCH OUTPUT SIGNAL (IPDM E/R)

- 1. Disconnect push-button ignition switch connector and BCM connector.
- Check voltage between IPDM E/R harness connector and ground.

(+) IPDM E/R		(–)	Voltage (V) (Approx.)
Connector			
E5	28	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace IPDM E/R. Refer to PCS-36, "Removal and Installation".

3.check push-button ignition switch circuit (IPDM E/R)

- 1. Disconnect IPDM E/R connector.
- Check continuity between IPDM E/R harness connector and push-button ignition switch harness connector.

IPDI	M E/R	Push-button	ignition switch	Continuity
Connector	Terminal	Connector	Terminal	Continuity
E5	28	M50	4	Existed

3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R			Continuity
Connector	Terminal	Ground	Continuity
E5	28		Not existed

Revision: 2015 February PCS-67 2015 QX70

PCS

Α

D

Е

INFOID:0000000010581811

INFOID:0000000010581812

VI.

ΙV

0

PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace harness.

4. CHECK IGNITION SWITCH OUTPUT SIGNAL (BCM)

- 1. Disconnect push-button ignition switch connector and IPDM E/R connector.
- Check voltage between BCM harness connector and ground.

(+) BCM		(-)	Voltage (V) (Approx.)
Connector	Connector Terminal		, , ,
M121	60	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace BCM. Refer to BCS-93, "Removal and Installation".

5. CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT (BCM)

- 1. Disconnect BCM connector.
- 2. Check continuity between BCM harness connector and push-button ignition switch harness connector.

ВСМ		Push-button ignition switch		Continuity
Connector	Terminal	Connector	Terminal	Continuity
M121	60	M50	4	Existed

3. Check continuity between BCM harness connector and ground.

ВСМ			Continuity	
Connector	Terminal	Ground	Continuity	
M121	60		Not existed	

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace harness.

6. CHECK PUSH-BUTTON IGNITION SWITCH

Refer to GI-47, "Intermittent Incident".

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace push-button ignition switch. Refer to PCS-139. "Removal and Installation".

7 .CHECK PUSH-BUTTON IGNITION SWITCH GROUND CIRCUIT

Check continuity between push-button ignition switch and ground.

Push-button ignition switch			Continuity
Connector	Connector Terminal		Continuity
M50	1		Existed

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair or replace harness.

8.CHECK INTERMITTENT INCIDENT

Refer to GI-47, "Intermittent Incident".

>> INSPECTION END

PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

Component Inspection

INFOID:0000000010581813

$1.\mathsf{CHECK}$ PUSH-BUTTON IGNITION SWITCH

- 1. Turn ignition switch OFF.
- 2. Disconnect push-button ignition switch connector.
- 3. Check continuity between push-button ignition switch terminals.

Push-button ignition switch		Condition		Continuity	
Ten	minal	Con	uition	Continuity	
1	1 4		Pressed	Existed	
· ·	7	switch	Not pressed	Not existed	

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace push-button ignition switch. Refer to PCS-139, "Removal and Installation".

F

D

Е

Α

В

G

Н

J

Κ

L

PCS

Ν

0

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR

Description INFOID:000000010581814

The switch that changes the power supply position.

BCM maintains the power supply position status.

BCM changes the power supply position with the operation of the push-button ignition switch.

Component Function Check

INFOID:0000000010581815

1.CHECK FUNCTION

Check push-button ignition switch ("LOCK INDICATOR", "ACC INDICATOR" and "IGNITION ON IND") in Active Test Mode with CONSULT.

Test item		Description	
LOCK INDICATOR ON		-	Illuminates
ACC INDICATOR IGNITION ON IND OFF	Position indicator	Does not illuminate	

Is the inspection result normal?

YES >> INSPECTION END

NO >> Refer to PCS-70, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000010581816

1. CHECK PUSH-BUTTON IGNITION SWITCH INPUT SIGNAL

- Turn ignition switch OFF.
- 2. Disconnect push-button ignition switch connector.
- 3. Check voltage between push-button ignition switch harness connector and ground.

(+) Push-button ignition switch		(–)	Voltage (V) (Approx.)	
Connector	Terminal		(FF - 7	
M50	8	Ground	Battery voltage	

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check the following.

- 10A fuse [No. 6, located in fuse block (J/B)]
- Harness for open or short between push-button ignition switch and fuse
- · If NG, repair or replace fuse or harness

2.check push-button ignition switch circuit

- Disconnect BCM connector.
- 2. Check continuity between BCM harness connector and push-button ignition switch harness connector.

Indicator	ВСМ		Push-button ignition switch		Continuity
	Connector	Terminal	Connector	Terminal	Continuity
LOCK	M123	134	M50	5	Existed
ACC	M119	15		6	
ON	M122	93		7	

3. Check continuity between BCM harness connector and ground.

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

Indicator	В	CM		Continuity
mulcator	Connector	Terminal		
LOCK	M123	134	Ground	
ACC	M119	15		Not existed
ON	M122	93		

Α

В

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

3. CHECK INTERMITTENT INCIDENT

Refer to GI-47, "Intermittent Incident".

>> INSPECTION END

Е

 D

F

G

Н

ľ

K


L


PCS

Ν

0

POWER DISTRIBUTION SYSTEM

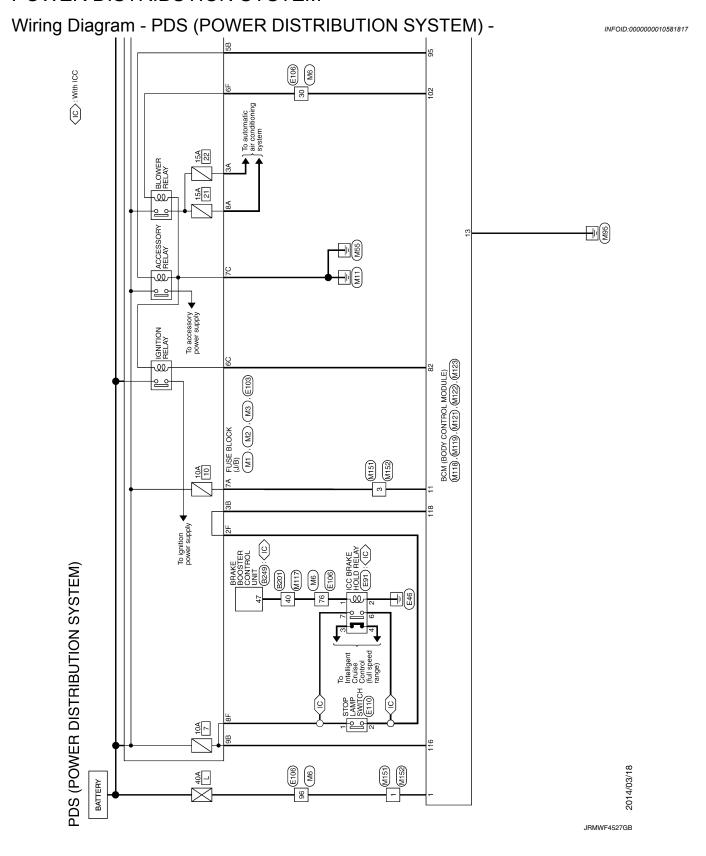

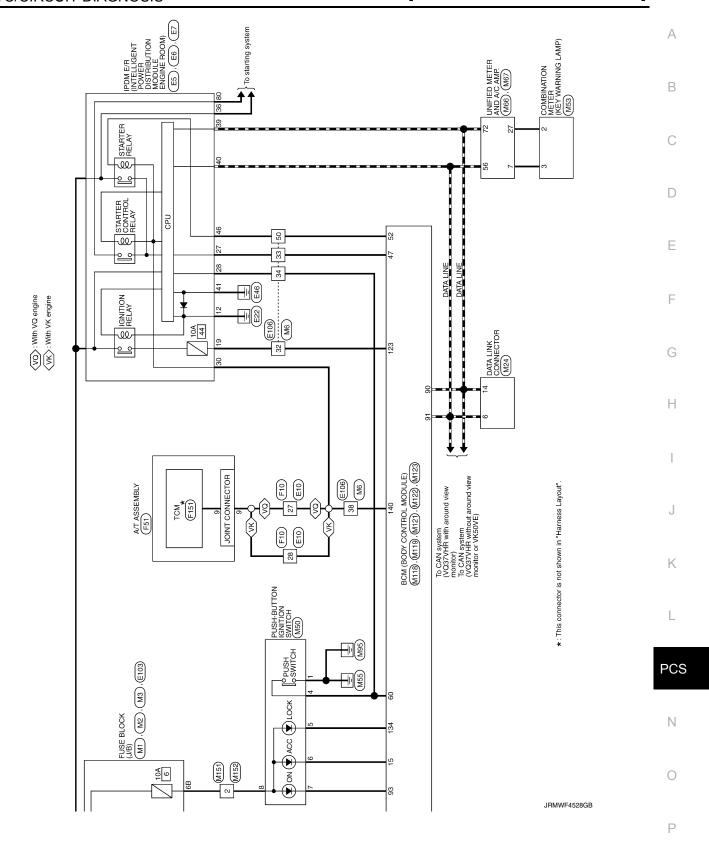

PDS	(PO)	PDS (POWER DISTRIBUTION SYSTEM)	TEM)		-	l					
Connector No.	tor No.	B201	46	8		Con	Connector No.	B249	Connector No.	E6	
Connect	tor Name	Connector Name WIRE TO WIRE	9 1	SHIELD		Conn	Connector Name	BRAKE BOOSTER CONTROL UNIT	Connector Name	PDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE PENGINE ROOM)	
		Т	4/	n.	- [Without ICC]		,	7 C L 7 C L		т	
Connect	Connector Type	I HBUFW-CST6-I M4	/4	، د	- [with ICC]	5	Connector 1ype	IK24FGY	Connector Type	I HUST W-NH	
qĮ			æ 9	1	- [with ICC]	qĮ			4		
季			84	٠	- [Without ICC]	争	_		季	<u>K</u>	
SI	Œ	8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8	9	্চ ≩	- [with ICC]	7	S	33	\ -	<u></u>	
	3	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	9 6	> [1			42 41 40 39	
			200	SHIELD	. a			40 47		20 20 20	
			5	\$ 0				1 46 47		40 43 44 42	
			25 25	¥ (
F			3 :	٠		F					
2	Wire	Signal Name [Specification]	n k	- 8		2	Wire	Signal Name [Specification]	No Wire	Signal Name [Specification]	
-	ď		8 8	9		8	t	NOILING	t		
٥	0		2	-		8 8	H	IBA OFF SW	╀		
1 6	: 8		8	9		2 2	+	NOIFING	41 5		
4	ď		8	۵		48	╀	GROUND	+		
۷.	8 8		8 8	. G		2 4	Ŧ	BPAKE HOLD BLY DRIVE SIGNAL	Ŧ		
^	9		8	i G			┨		+		
. 0	5 3		99	3 >					+		
• \$	\$ 0		3 8	- }		Š		L	+		
2	ָּם נו		/9	× (5	Connector No.	ED	46 BK		
= ;	SHED.	,	9	9 ;		Conn	Connector Name	IPDM EIR (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE BOOM)			
20	1	-	Ε.	SB	-						
21	۵.		22	>		Con	actor Type	Connector Type TH20FW-CS12-M4-1V	Connector No.	E7	
55	S.		73	_S		Q			Connector Name	PDM E/R (INTELLISENT POWER DISTRIBUTION MODULE	
23	9		74	≥		F	-				
24	≥		75	æ		_	e		Connector Type	TH20FW-CS12-M4	
52	>		92	>		1	ė	12 13 28262728 30 1	4		
26	g		22	LG				4 5 7 16 19 36	B		
27	>	-	80	BG	-				Ę		
28	SHIELD	. ·	82	Ф					į	53.54 55 56 57 58 68 70 7475 78 71	
31	≯		83	>	-					4849 5152 80	
32	GR		84	œ	-	Term	la I	Signal Namo [Specification]			
33	SB		82	SB		Š	Wire	orginal realite [opeomoation]			
36	٦	•	98	GR	•	4	>	•			
37	а		87	7	•	2	7		Terminal Color Of	Of	
38	_		91	^	-	7	~		No. Wire		
98	۵		95	>		10	Ľ		48 L		
40	19	- [With ICC]	93	œ		12	\vdash		49 SB	- [With VQ engine]	
40	>	- IWith	8	_		13	F		╁		
4	ď		, S	G.		4	. <u>.</u>		╀		
ź	}		98	3		9	╀		+		
÷ 6	- >	- DWINDON ICO	96	<u>:</u>	+	25	+		25 W		
Į,		[Soli inwi]	à	2		á là	+		+		
42	>	- [Without ICC]	86	g		56	¥		+		
43	<u>-</u>	- [With	8	_		27	+		+		
43	æ	- [With ICC]				28	\dashv		_		
44	۳					30	4		26 V	- [With VQ engine]	
45	ŋ	-				36	g	-	57 LG	-	

JRMWF4529GB

			_											_			_		_		_		l						1									_					П		_				П	_
	E103	Connector Name FIISE BLOCK (1/B)	OSE BEOOK (SIB)	NS16FW-CS				45	48 46 40				Signal Name [Coordination]	orgital Ivallie [opecification]	•		-			-	-	•			E106	adiw OT adiwi	WIRE TO WIRE	TH80FW-CS16-TM4			2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	2 / 8 / 8 / 8 / 8 / 8 / 8 / 8 / 8 / 8 /		\$ CE BERT SE			Signal Name [Coordination]	orginal realine [opeomognori]		•										
		ameN a	i valie	r Type									Color Of	Wire	٦	SB	Α	Y	9	BG	٦	æ				o Morno	r Name	r Type	,			_					Color Of	Wire	9	98	as	97	Y	W	9	۸	ĸ	BR	8	9
	Connector No.	Connect	100	Connector Type	4		Ę	Ş					Terminal	Ö.	10F	1F	2F	Ж.	4F	9F	8F	9F			Connector No.	Journal	Correct	Connector Type			ŧ	? =					Terminal	ō N	1	2	3	4	2	9	7	80	6	10	11	12
	•	•	- [With VK engine]	- [With VQ engine]	- [With VK engine]	- [With VQ engine]	- [With VQ engine]	- [With VK engine]	- [With VQ engine]	- [With VK engine]	- [With VQ engine]	- [With VK engine]	- [With VK engine]	- [With VQ engine]	•			E91	ICC BRAKE HOLD BELAY	ומס הואיר ווסכם וירבעו	Connector Type M06FGY-R-US			<u></u>	7 3	C / O	<u> </u>]		Company of Special Powers	olgilal ivalle [opecilication]					•														
	G	L	G	SHIELD	В	W	BR	R	g	L	В	g	В	SB	R				Connector Name	Marino	r Type									Color Of	Wire	٦	В	G	G	W	L													
	44	45	46	46	47	47	48	48	49	49	90	20	51	51	52			Connector No.	Connecto		Connecto			ŧ	Ş					Terminal Color Of	ò	1	2	3	4	9	7													
	- [With VK engine]		- [With VK engine]	- [With VQ engine]	- [With VQ engine]	- [With VK engine]		-			- [With VK engine]	- [With VQ engine]	- [With VQ engine]	- [With VK engine]	- [With VQ engine]	- [With VK engine]	- [With VQ engine]	- [With VK engine]					- [With VK engine]	- [With VQ engine]		- [With VQ engine]	- [With VK engine]	- [With VK engine]	- [With VQ engine]	- [With VK engine]	- [With VQ engine]		- [With VQ engine]					- [With VK engine]	- [With VQ engine]	D - [With VK engine]	- [With VQ engine]	- [With VK engine]	- [With VQ engine]		- [With VQ engine]	- [With VK engine]	•		- [With VQ engine]	- [With VK engine]
	œ	re	BG	BR	>	Α	d.	Α	Μ	æ	SB	٨	g	≥	æ	>	O	>	PC	ΓG	9	GR	GR	>	Ь	٦	Χ	9	*	٦	^	BG	Μ	BG	ď	SHIELD	SHIELD	>	٦	SHIELD	Ь	*	ď	SHIELD	Α	Υ	Pl	SHIELD	9	W
EM)	13	14	15	15	16	16	17	18	19	50	21	21	22	22	23	23	54	24	25	56	27	27	28	28	29	30	30	31	31	32	32	33	33	34	35	36	37	37	38	38	39	38	40	40	14	41	42	42	43	43
PDS (POWER DISTRIBUTION SYST	•	,	,	•		- [With VK engine]	- [With VQ engine]	- [With VK engine]	- [With VQ engine]				E10	WIRE TO WIRE	WII.E. 10 WII.E.	SAA36MB-RS8-SHZ8		1 2 9 10 11 12		1788167	6	3538373	(S 1/48/48/48/48/48/48/48/48/48/48/48/48/48/		Signal Name [Secontification]	olgilal Name [opecimation]	- [With VQ engine]	- [With VK engine]	- [With VK engine]	- [With VQ engine]	- [With VQ engine]	- [With VK engine]	- [With VK engine]	- [With VQ engine]	- [With VQ engine]	- [With VK engine]	- [With VK engine]	- [With VQ engine]	- [With VQ engine]	- [With VK engine]	- [With VK engine]	- [With VQ engine]		- [With VQ engine]	- [With VK engine]	- [With VQ engine]	- [With VK engine]	- [With VQ engine]	- [With VK engine]	- [With VQ engine]
(POV	>	Μ	BG	9	٨	Д	^	В	٦	Α					0		-								Color Of	Wire	9	SHIELD	_	SHIELD	BR	9	BR	SHIELD	BR	G	BR	ď	9	W	SHIELD	۸	W	9	W	ď	Μ	BR	Μ	_
PDS	28	69	70	74	75	9/	92	77	77	80			Connector No.	Connector Name	000000	Connector Type		修	É	2					lal	ġ.	1	-	2	2	3	3	4	4	2	2	9	9	7	7	8	8	6	10	10	11	11	12	12	13
	_	_	_	_	_	_	_	_	_	_						_	_		_	_						_	_					_			_	_	_	_	_	_	_	_	_	_	_	_		_	_	_

PCS

Α

В

 D

Е

F

G

Н

Ν

0

JRMWF4530GB

	T	I												J					Ш			Į	J	J	١			J		-					l													ı	ı
2000 000000	- [with viv. engine]	 [With VQ engine] 	- [With VK engine]	- [With VQ engine]	- [With VQ engine]	- [With VK engine]			- [With VQ engine]	- [With VK engine]	- [With VQ engine]	- [With VK engine]	- [With VQ engine]	- [With VK engine]	- [With VK engine]	- [With VQ engine]	 [With VK engine] 	- [With VQ engine]	- [With VK engine]	- [With VQ engine]	- [With VK engine]	- [With VQ engine]				- [With VQ engine]	- [With VK engine]	- [With VK engine]	- [With VQ engine]	- [With VK engine]	- [with VQ engine]	- [With VK engine]	- [With VQ engine]	- [With VK engine]	- [With VQ engine]	- [With VK engine]	- [With VQ engine]	- [With VK engine]	=		- [With VK engine]	- [With VQ engine]	- [With VK engine]	- [With VQ engine]	- IWith VO engine	- [With VK engine]	- [With VQ engine]	- [With VK engine]	41.0
	n	တ	P	>	P	>	>	0	GR	SB	BR	LG	٦	۵	GR	ĸ	BR	Ь	9	w	٦	SB	0	Ь	SHIELD	SHIELD	\	SHIELD	>	s :	- 0	SHELD	8	· >-	GR	SHIELD	В	W	PT	٦	9	SHIELD	а	*	<u>e</u>	2 0	ن د ن	-	
3	77	22	23	23	24	54	22	56	27	27	28	28	59	59	30	30	31	31	32	32	33	33	¥	32	36	37	37	38	38	8	80 08	40	41	41	42	42	43	43	44	45	46	46	47	47	48	64 48	49	49	í
		WIRE TO WIRE	WINE IO WINE	SAA36FB-RS8-SHZ8		12 11 10 9	16 15 14 13	2 2 2 2	3433433134324328	434241403938373938	20		Sinnal Name [Specification]	oili iai i tai ia lobcoii canori	- [With VQ engine]	- [With VK engine]	- [With VQ engine]	- [With VK engine]	- [With VQ engine]	- [With VK engine]	- [With VK engine]	- [With VQ engine]	- [With VK engine]	- [With VQ engine]	- [With VQ engine]	- [With VK engine]	- [With VQ engine]	- [With VK engine]	- [With VK engine]	- [With VQ engine]		- [With VO engine]	- [With VK engine]	- [With VQ engine]	- [With VK engine]	- [With VQ engine]	- [With VK engine]	- [With VK engine]	- [With VQ engine]	- [With VK engine]	- [With VQ engine]	- [With VK engine]	- [With VQ engine]					- [With VK engine]	
	Ι	Connector Name		Connector Type	1			<i>7</i> 7)	Wire	g	SHIELD	SHIELD	Υ	BR	9	BR	SHIELD	<u>_</u>	æ	œ	Α	O	œ	SHELD	3	≥ (2	>	۵.	>	٦	Ь	7	PI	0	œ	œ	>	æ	ď	9 0	o ee	>	
	Connector No.	Connec	500	Connect		Œ	Į	1					Terminal	ġ	-	-	2	2	3	3	4	4	2	2	9	9	7	۲	89	» (D 5	= =	÷	12	12	13	13	14	14	15	15	16	16	17	18	0 5	50	5	ŀ
																																										•							_
di mari			9		- BR	,	. ·	· ·	SB .				GR .				BG .		BR .	GR .	BR .	SB -				SHELD .	۲ .		Ī	No. E110	Name STOP LAMP SWITCH	Type M04FW-LC				3.4	C	1 7			Solor Of State of Sta	Wire ognal warne [opecification]				2 8			_
EM)	1	+	72 G .	73 R	H	┝	H	- × 82		81 L -	82 W -	83 LG .	Н	\dashv		w			90 BR -			4	>-			98 SHIELD -	100 Y -		Ī	Connector No. E110	Connector Name STOP LAMP SWITCH	Connector Type M04FW-LC				3.4	C	7 1.			Terminal Color Of					2 8	-		
	1	+		H	H	┝	H		SB	81 L	H		Н	\dashv		w		Pl	Н	GR	BR	4	>-				100 Y		Ī	Τ		Connector Type M04FW-LC				3.4	•	71.]		Color Of	Wire	,	*	· ·	2 8	-	<u></u>	Ī
IBUTION SYSTEM)	1	- 74	- 72	- 73	H	┝	H		SB		82		- 84	85	98	nout ICC] 87 W	- [With ICC] 88	- 89 FG	Н	GR	BR	4	>-				- 100 Y -		Ī	Τ		Connector Type M04FW-LC				3 4		711]		Color Of	Wire		*	· ·	2 8	-		
OWER DISTRIBUTION SYSTEM)	ov i	- 74	D - 72	- 73	- 74	9/	H	- [With ICC] 78	- [Without ICC] 80 SB		82	- [Without ICC] 83	- 84	- [With ICC] 85	98	- [Without ICC] 87 W	- [With ICC] 88	D 88 FG		- 91 GR	BR	- 83	>-	96	- 97	88				Connector No.	Connector Name	W Connector Type M04FW-LC				THE	9	7 1	BG		- Terminal Color Of	No. Wire		2 W		2 8		BG	

JRMWF4531GB

POWER DISTRIBUTION SYSTEM

[POWER DISTRIBUTION SYSTEM]

	7 6	- M	d.	10 BR	H	╀	+	╀	ď:	Т	⊦	- 18 P	╀	20 GR - [Without ICC]	20 W - [With ICC]	21 BR - [With ICC]	21 R - [Without ICC]	-	22 R - [With ICC]	9	- T	Ь	w	25 Y - [With ICC]	S	28 GR -	29 V -	30 BG -	32 W -	33 Y .		+	+	39 G -	+	+	+	+	4	46 W -	47 L .	Н	\dashv	20 FG -	51 SB -	52 Y -	Н	Н	55 SB -	H
	5B BG -	· × 89	78 1		88			Connector No M3		Connector Name FUSE BLOCK (J/B)	Connector Type NS12FW-CS	1				120 110 100 DC	50 6			nal Color Of Signal Name [Specification]	Wire	٠ - ١	LG .	12C R -	٠.	7C B .	9C BG .			Connector No. M6	Connector Name WIRE TO WIRE		Connector Type TH80MW-CS16-TM4		F	*	10 10 10 10 10 10 10 10	8 8	\$ 30	S C C C C C C C C C C C C C C C C C C C		nal Color Of Signal Name [Specification]	figure and company			3 LG - [Without Auto aircon seat]	3 SB - [With Auto aircon seat]	4 LG .	5 GR -	
	4 O K-LINE	5 G GROUND	GR	7 L BACK-UP LAMP RELAY	8 BR CANL	Y	W/B		1	Connector No. M1		Connector Name FUSE BLOCK (J/B)	Connector Type NS06FW-M2			1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	LIS.	2A 7A 6A 5A 4A]		D E		1A BG -	2A G .	3A L -	4A R -	5A V -	· · · · ·		8A L O	<u> </u>		Connector No. M2	Connector Name FUSE BLOCK (J/B)		Connector Type NS10FW-CS	ģ			1	T 68 88 78 68 58				Terminal Color Of Signal Many (Specification)	Wire	18 LG .	3B P	
PDS (POWER DISTRIBUTION SYSTEM)	50 G - [With VK engine]	B - [With VK	W With VO	ď	ł		Connector No E51		Connector Name A/T ASSEMBLY	Connector Type RK10FG-DGY	1	✓	W ALT	Sit I		/9 2 8 9 8 7 8			ā	No. Wire ognering openingen i	1 Y IGNITION POWER SUPPLY	2 R BATTERY POWER SUPPLY (MEMORY BACK-UP)	3 L CAN-H	4 V K-LINE	5 B GROUND	6 Y IGNITION POWER SUPPLY	7 R BACK-UP LAMP RELAY	8 P CAN-L	9 GR STARTER RELAY [With VQ engine]	STARTER RELAY	10 B GROUND		-1	Connector No. F151	Connector Name TCM		Connector Type SP10FG	q	■		10 3 4 5	ŧΤ	01681219			la]	No. Wire Signari Manie [Specification]		2 B BATTERY POWER SUPPLY (MEMORY BACK-UP)	,

PCS

K

Α

В

 D

Е

F


G

Н

Ν

0

JRMWF4532GB

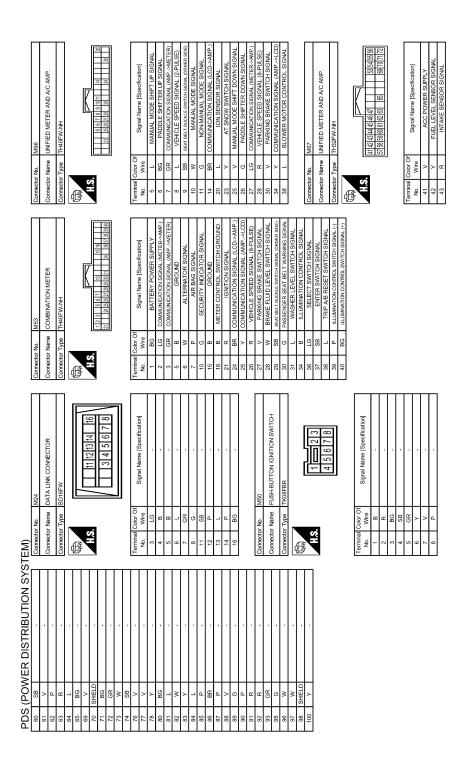

JRMWF4533GB

Name Name	R R R R R R R R R R	LG - Connector No. M119	- Noncolan Monto	Y Connector Name BCM (BODY CONTROL MODULE)	BG Connector Type NS16FW-CS		多 88	8		11	9	- BB	V Terminal Color Of Signal Name (Specification)	No. Wire	- 4 P	L 5 V PASSENGER DOOR UNLOCK OUTPUT	· 7	8 V ALL DOOR, FUEL LID LOCK OUTPUT	9 G DRIV	M118 10 BR REAR DC	BCM (BODY CONTROL MODULE)	13 B	M03FB-LC	1/ W IUKN SIGNAL KH (FKONI)	S SS	3		2 Connector No. M121	Connector Name BCM (BODY CONTROL MODULE)		Signal Name [Specification] Connector Type TH4UFGY-NH	Willer Control of the	DALI (F/L)	\top		(9) (8) (9) (9) (9) (9) (9) (9) (9) (9) (9) (9			nal	Wire	SB	35 V LUGGAGE ROOM ANT	38 B BACK DOOR ANT.	0	ω ≽	NS NS
	VER DISTRIBUTION SYSTEM)		Γ				_ 	<u> </u>	l	<u> </u>	Ι										_ <u></u>	<u> </u>	º T	T	<u></u>	Ī				T	- T	<u> </u>	T	T	J T	Τ				П				٦	П	П
	VER DISTRIBUTION SYSTEM) INVEHICLE SERSOR SIGNAL 26 AMBIENT SERSOR SIGNAL 27 GAS SERSOR SIGNAL 27 GAS SERSOR SIGNAL 27 GAS SERSOR SIGNAL 27 GANH 32 FIEL LEVEL SERSOR SIGNAL 33 MATTERY DEVER SUPPLY 33 GANH 36 FIEL LEVEL SERSOR GROUND 41 INVEHICLE SERSOR GROUND 41 GROUND 41 GROUND 41 GROUND 42 AMITT 43 GROUND 42 MITT 43 GROUND 42 MITT 46 MITT 46 MITT <td< td=""><td></td><td></td><td>1</td><td></td><td></td><td>T.</td><td>٠</td><td></td><td></td><td></td><td></td><td>- [With ICC]</td><td>- [Without ICC]</td><td>- [With ICC]</td><td>- [Without ICC]</td><td>- [Without ICC]</td><td>- [With ICC]</td><td></td><td>- [Without ICC]</td><td>- [With ICC]</td><td>- [With ICC]</td><td>- [Without ICC]</td><td>- [Without ICC]</td><td>- With ICCI</td><td>- [Without ICC]</td><td>- [With ICC]</td><td>- [Without ICC]</td><td></td><td>1</td><td></td><td></td><td></td><td></td><td></td><td>·</td><td></td><td>-</td><td></td><td>-</td><td>-</td><td></td><td></td><td></td><td></td><td></td></td<>			1			T.	٠					- [With ICC]	- [Without ICC]	- [With ICC]	- [Without ICC]	- [Without ICC]	- [With ICC]		- [Without ICC]	- [With ICC]	- [With ICC]	- [Without ICC]	- [Without ICC]	- With ICCI	- [Without ICC]	- [With ICC]	- [Without ICC]		1						·		-		-	-					
	VER DISTRIBUTION SYSTEM INVENCIACE SENSORS SIGNAL SUMOND SENSOR SIGNAL GAN SENSOR SIGNAL GAN SENSOR SIGNAL GAN TION POWER SUPPLY GROUND INVENCIE SENSOR GROUND I	ď	a.	٦	SHIELD	Α	>	88 -	1 9	_	۵	>	SB	٨	^	Μ	В	Ь	ď	ŋ	_	BG	SHELD	n –		. ~	ŋ	W	SHIELD	BG	¥ ,	. e	ے د	<u> </u>	~	SB	>	×	BR	BG	W	9	6	0	9 >	9 > >
	LGOOT OF SIGNAL RAMEIN SENSOR SIGNAL AMBIENT SENSOR SIGNAL G AMBIENT SENSOR SIGNAL G GAS SENSOR SIGNAL E GACHUND G BATTERY POWER SUPPLY B GROUND G BATTERY POWER SUPPLY G BATTERY POWER	25	26	27	28	31	32	33	37	38	39	40	41	41	42	42	43	43	44	45	45	1	T	47	48	48	49	49	20	51	25	23	ŧ L	8 8	61	62	63	64	92	99	- 67	69	7.4		72	72
R R R R R R R R R R	P P P P P P P P P P	NSOR SIGNAL	BIENT SENSOR SIGNAL	SUNLOAD SENSOR SIGNAL	GAS SENSOR SIGNAL	IGNITION POWER SUPPLY	BATTERY POWER SUPPLY	GROUND	BRAKE FLUID LEVEL SWITCH SIGNAL	FUEL LEVEL SENSOR GROUND	INTAKE SENSOR GROUND	IN-VEHICLE SENSOR GROUND	AMBIENT SENSOR GROUND	SUNLOAD SENSOR GROUND	ION MODE SIGNAL	ECV SIGNAL	A/C LAN SIGNAL	EACH DOOR MOTOR POWER SUPPLY	GROUND	CAN-L			M117	WIRE TO WIRE	TH80MW-CS16-TM4		(M) 10 (M	15 BH S	2 3	불타	36 M			Signal Name [Specification]												
NER DISTRIBUTION SYSTEM INVARIOUS SIGNAL 25		IN-VEHICLE SE	AM			Ш	_	_	_	_	_	ь.	ш	_	_					_						1									$\overline{}$	Γ	_	1	_		_		7	7	<u> </u>	<u> </u>

PCS

Α

В

 D

Е

F

G

Н

N

0

JRMWF4534GB

Corrector No. M151 Corrector Name WIRETO WIRE Corrector Type M03FW.LC	Hs. 32	Terminal Color Of Signal Name [Specification] No. Wire	Corrector Type Mi03MW+LC Corrector Type Mi03MW+LC Terminal Color Of Signal Name (Specification) 1 Wre 2 Y 3 R	
Connector Na. M123 Connector Name BOM (BODY CONTROL MODULE) Connector Type TH40FG-NH			1.05 PASSENGER DOOR SW	
MER DISTRIBUTION SYSTE HERW WARN BUZZER (ENG ROOM) FEAR, WHOPER STOP POSITION BACK DOOR SW FEAR RH DOOR SW REAR RH DOOR SW RAAR HH DOOR SW	CONTROL MODULE)	Ferminal Ferminal	123 PASSENGER DOOR ANT 134 PASSENGER DOOR ANT 134 PASSENGER DOOR ANT 134 DRIVER DOOR ANT 134 DRIVER DOOR ANT 134 DRIVER DOOR ANT 134 ROOM ANT 141 NATS ANT	COMBI SW INPUT 2 HAZARD SW
PDS (PO	Connector No.	S. H.S. C.	No. Wire	Н

JRMWF4535GB

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Α

В

 D

Е

F

Н

J

K

PCS

Ν

0

Р

ECU DIAGNOSIS INFORMATION

BCM (BODY CONTROL MODULE)

Reference Value

VALUES ON THE DIAGNOSIS TOOL

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item	Condition	Value/Status
FR WIPER HI	Other than front wiper switch HI	Off
IX WIF LIX I II	Front wiper switch HI	On
R WIPER LOW	Other than front wiper switch LO	Off
-K WIPER LOW	Front wiper switch LO	On
FR WASHER SW	Front washer switch OFF	Off
-K WASHER SW	Front washer switch ON	On
R WIPER INT	Other than front wiper switch INT/AUTO	Off
-K WIFEK IIVI	Front wiper switch INT/AUTO	On
R WIPER STOP	Front wiper is not in STOP position	Off
-K WIFEK STOP	Front wiper is in STOP position	On
NT VOLUME	Wiper volume dial is in a dial position 1 - 7	Wiper volume dial position
RR WIPER ON	Other than rear wiper switch ON	Off
KK WIFEK ON	Rear wiper switch ON	On
RR WIPER INT	Other than rear wiper switch INT	Off
KK WIPEK INT	Rear wiper switch INT	On
RR WASHER SW	Rear washer switch OFF	Off
RR WASHER SW	Rear washer switch ON	On
RR WIPER STOP	Rear wiper is in STOP position	Off
KK WIFEK STOP	Rear wiper is not in STOP position	On
TURN SIGNAL R	Other than turn signal switch RH	Off
IURN SIGNAL R	Turn signal switch RH	On
ΓURN SIGNAL L	Other than turn signal switch LH	Off
IURN SIGNAL L	Turn signal switch LH	On
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	Off
TAIL LAWIF SVV	Lighting switch 1ST or 2ND	On
HI BEAM SW	Other than lighting switch HI	Off
TI BEAW 3W	Lighting switch HI	On
JEAD LAMD SW 1	Other than lighting switch 2ND	Off
HEAD LAMP SW 1	Lighting switch 2ND	On
JEAD LAMB CW 2	Other than lighting switch 2ND	Off
HEAD LAMP SW 2	Lighting switch 2ND	On
DA COINIC CVA	Other than lighting switch PASS	Off
PASSING SW	Lighting switch PASS	On
ALITO LIGHT OW	Other than lighting switch AUTO	Off
AUTO LIGHT SW	Lighting switch AUTO	On

Revision: 2015 February PCS-81 2015 QX70

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
FR FOG SW	Front fog lamp switch OFF	Off
FR FUG SW	Front fog lamp switch ON	On
RR FOG SW	NOTE: The item is indicated, but not monitored.	Off
DOOR SW-DR	Driver door closed	Off
DOOK SW-DK	Driver door opened	On
DOOR SW-AS	Passenger door closed	Off
DOOR SW-AS	Passenger door opened	On
OOD CW DD	Rear RH door closed	Off
OOOR SW-RR	Rear RH door opened	On
OOD CW DI	Rear LH door closed	Off
OOR SW-RL	Rear LH door opened	On
2000 014/ 014	Back door closed	Off
OOR SW-BK	Back door opened	On
	Other than power door lock switch LOCK	Off
DL LOCK SW	Power door lock switch LOCK	On
	Other than power door lock switch UNLOCK	Off
CDL UNLOCK SW	Power door lock switch UNLOCK	On
	Other than driver door key cylinder LOCK position	Off
(EY CYL LK-SW	Driver door key cylinder LOCK position	On
	Other than driver door key cylinder UNLOCK position	Off
(EY CYL UN-SW	Driver door key cylinder UNLOCK position	On
KEY CYL SW-TR	NOTE: The item is indicated, but not monitored.	Off
	Hazard switch is OFF	Off
HAZARD SW	Hazard switch is ON	On
REAR DEF SW	NOTE: The item is indicated, but not monitored.	Off
FR CANCEL SW	NOTE: The item is indicated, but not monitored.	Off
	Back door opener switch OFF	Off
R/BD OPEN SW	While the back door opener switch is turned ON	On
FRNK/HAT MNTR	NOTE: The item is indicated, but not monitored.	Off
REVERSE SW	NOTE: The item is indicated, but not monitored.	Off
OKE LOOK	LOCK button of the Intelligent Key is not pressed	Off
RKE-LOCK	LOCK button of the Intelligent Key is pressed	On
NE LINI CON	UNLOCK button of the Intelligent Key is not pressed	Off
RKE-UNLOCK	UNLOCK button of the Intelligent Key is pressed	On
RKE-TR/BD	NOTE: The item is indicated, but not monitored.	Off
DIVE DANIO	PANIC button of the Intelligent Key is not pressed	Off
RKE-PANIC	PANIC button of the Intelligent Key is pressed	On
	UNLOCK button of the Intelligent Key is not pressed	Off
RKE-P/W OPEN	UNLOCK button of the Intelligent Key is pressed and held	On

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Monitor Item	Condition	Value/Status
RKE-MODE CHG	LOCK/UNLOCK button of the Intelligent Key is not pressed and held simultaneously	Off
	LOCK/UNLOCK button of the Intelligent Key is pressed and held simultaneously	On
OPTICAL SENSOR	Bright outside of the vehicle	Close to 5 V
OPTICAL SENSOR	Dark outside of the vehicle	Close to 0 V
DEO OM DD	Driver door request switch is not pressed	Off
REQ SW -DR	Driver door request switch is pressed	On
REQ SW -AS	Passenger door request switch is not pressed	Off
REQ 3W -A3	Passenger door request switch is pressed	On
REQ SW -RR	NOTE: The item is indicated, but not monitored.	Off
REQ SW -RL	NOTE: The item is indicated, but not monitored.	Off
REQ SW -BD/TR	Back door request switch is not pressed	Off
REQ 5W -BD/TR	Back door request switch is pressed	On
PUSH SW	Push-button ignition switch (push switch) is not pressed	Off
PUSH 3W	Push-button ignition switch (push switch) is pressed	On
IGN RLY2 -F/B	NOTE: The item is indicated, but not monitored.	Off
ACC RLY -F/B	NOTE: The item is indicated, but not monitored.	Off
CLUCH SW	NOTE: The item is indicated, but not monitored.	Off
BRAKE SW 1	The brake pedal is depressed when No. 7 fuse is blown	Off
BRAKE SW I	The brake pedal is not depressed when No. 7 fuse is blown, or No. 7 fuse is normal	On
BRAKE SW 2	The brake pedal is not depressed	Off
DIVARL SW 2	The brake pedal is depressed	On
DETE/CANCL SW	Selector lever in P position	Off
DETE/O/MOE OVV	Selector lever in any position other than P	On
SFT PN/N SW	Selector lever in any position other than P and N	Off
OF FEMALES	Selector lever in P or N position	On
S/L -LOCK	NOTE: The item is indicated but not monitored.	Off
S/L -UNLOCK	NOTE: The item is indicated but not monitored.	Off
S/L RELAY-F/B	NOTE: The item is indicated but not monitored.	Off
UNLK SEN -DR	Driver door is unlocked	Off
OINLIX OLIN -DIX	Driver door is locked	On
PUSH SW -IPDM	Push-button ignition switch (push-switch) is not pressed	Off
. JOH OW -II DIVI	Push-button ignition switch (push-switch) is pressed	On
IGN RLY1 -F/B	Ignition switch in OFF or ACC position	Off
OH KELL-17D	Ignition switch in ON position	On
DETE SW -IPDM	Selector lever in any position other than P	Off
	Selector lever in P position	On
SFT PN -IPDM	Selector lever in any position other than P and N	Off
	Selector lever in P or N position	On

Revision: 2015 February PCS-83 2015 QX70

В

Α

С

D

Е

F

G

Н

1

Κ

PCS

Ν

0

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
OCT D MCT	Selector lever in any position other than P	Off
SFT P -MET	Selector lever in P position	On
OFT N. MET	Selector lever in any position other than N	Off
SFT N -MET	Selector lever in N position	On
	Engine stopped	Stop
THOINE OTATE	While the engine stalls	Stall
ENGINE STATE	At engine cranking	Crank
	Engine running	Run
S/L LOCK-IPDM	NOTE: The item is indicated but not monitored.	Off
S/L UNLK-IPDM	NOTE: The item is indicated but not monitored.	Off
S/L RELAY-REQ	NOTE: The item is indicated but not monitored.	Off
/EH SPEED 1	While driving	Equivalent to speed- ometer reading
VEH SPEED 2	While driving	Equivalent to speed- ometer reading
	Driver door is locked	LOCK
DOOR STAT-DR	Wait with selective UNLOCK operation (5 seconds)	READY
	Driver door is unlocked	UNLOCK
	Passenger door is locked	LOCK
DOOR STAT-AS	Wait with selective UNLOCK operation (5 seconds)	READY
	Passenger door is unlocked	UNLOCK
D OK FLAG	Driver side door is open after ignition switch is turned OFF (Selector lever is in the P position)	Reset
	Ignition switch ON	Set
PRMT ENG STRT	The engine start is prohibited	Reset
RWI ENG STRT	The engine start is permitted	Set
PRMT RKE STRT	NOTE: The item is indicated, but not monitored.	Reset
ZEV SW. SLOT	The Intelligent Key is not inserted into key slot	Off
(EY SW -SLOT	The Intelligent Key is inserted into key slot	On
RKE OPE COUN1	During the operation of the Intelligent Key	Operation frequency of the Intelligent Key
RKE OPE COUN2	NOTE: The item is indicated, but not monitored.	_
CONFRM ID ALL	The key ID that the key slot receives is not recognized by any key ID registered to BCM.	Yet
	The key ID that the key slot receives accords with any key ID registered to BCM.	Done
CONFIRM ID4	The key ID that the key slot receives is not recognized by the fourth key ID registered to BCM.	Yet
JONFIKIVI IU4	The key ID that the key slot receives is recognized by the fourth key ID registered to BCM.	Done
	The key ID that the key slot receives is not recognized by the third key ID registered to BCM.	Yet
CONFIRM ID3	The key ID that the key slot receives is recognized by the third key ID registered to BCM.	Done

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Monitor Item	Condition	Value/Status
CONFIRM ID2	The key ID that the key slot receives is not recognized by the second key ID registered to BCM.	Yet
CONTINUID2	The key ID that the key slot receives is recognized by the second key ID registered to BCM.	Done
CONFIRM ID1	The key ID that the key slot receives is not recognized by the first key ID registered to BCM.	Yet
COM IKWIDI	The key ID that the key slot receives is recognized by the first key ID registered to BCM.	Done
TP 4	The ID of fourth Intelligent Key is not registered to BCM	Yet
164	The ID of fourth Intelligent Key is registered to BCM	Done
TP 3	The ID of third Intelligent Key is not registered to BCM	Yet
IF 3	The ID of third Intelligent Key is registered to BCM	Done
TP 2	The ID of second Intelligent Key is not registered to BCM	Yet
172	The ID of second Intelligent Key is registered to BCM	Done
TP 1	The ID of first Intelligent Key is not registered to BCM	Yet
IF I	The ID of first Intelligent Key is registered to BCM	Done

G

Α

В

 D

Е

F

Н

-

J

Κ


1

PCS

Ν

0

TERMINAL LAYOUT

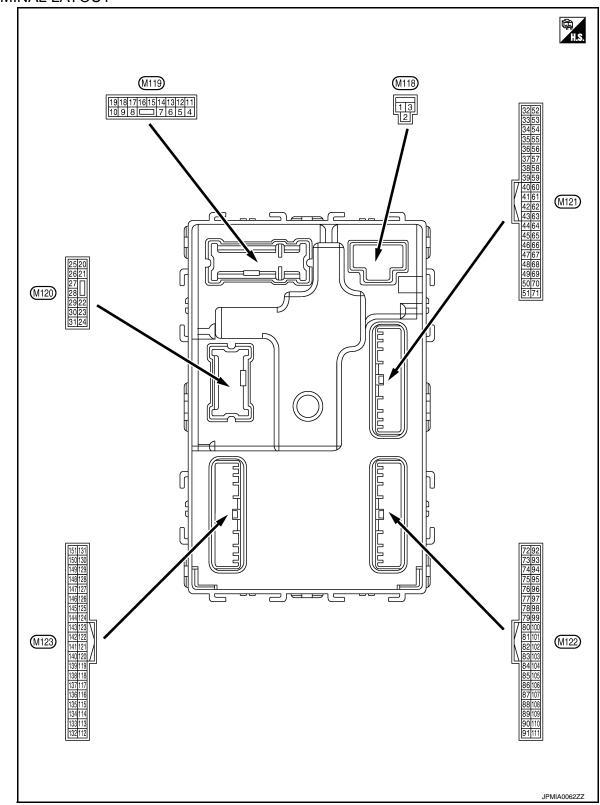

PHYSICAL VALUES

< ECU DIAGNOSIS INFORMATION >

	nal No.	Description				Value
(Wire	color)	Signal name	Input/ Output		Condition	(Approx.)
1 (W)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (Y)	Ground	P/W power supply (BAT)	Output	Ignition switch OF	·F	12 V
3 (BG)	Ground	P/W power supply (IGN)	Output	Ignition switch ON	ı	12 V
					b battery saver is activated. room lamp power supply)	0 V
4 (P)	Ground	Interior room lamp power supply	Output	ed.	battery saver is not activat- ior room lamp power sup-	12 V
5	0	Passenger door UN-	0 1 1	D	UNLOCK (Actuator is activated)	12 V
(V)	Ground	LOCK	Output Passer	Passenger door	Other than UNLOCK (Actuator is not activated)	0 V
7	O	Otan lawar anatusi	0.44	01	ON	0 V
(Y)	Ground	Step lamp control	Output	Step lamp	OFF	12 V
8	(-round)	Output	All doors, fuel lid	LOCK (Actuator is activated)	12 V	
(V)		Output	All doors, fuel lid	Other than LOCK (Actuator is not activated)	0 V	
9	Driver door, fuel lid	Output	Driver door, fuel	UNLOCK (Actuator is activated)	12 V	
(G)	Ground	UNLOCK	Output	lid	Other than UNLOCK (Actuator is not activated)	0 V
10	Ground	Rear RH door and rear LH door UN-	Output	Rear RH door	UNLOCK (Actuator is activated)	12 V
(BR)	Ground	LOCK	Output	and rear LH door	Other than UNLOCK (Actuator is not activated)	0 V
11 (R)	Ground	Battery power supply	Input	Ignition switch OF	F	Battery voltage
13 (B)	Ground	Ground	_	Ignition switch ON	1	0 V
15	Ground	ACC indicator lamp	Output	Ignition switch	OFF (LOCK indicator is not illuminated)	Battery voltage
(Y)				_	ACC or ON	0 V
					Turn signal switch OFF	0 V
17 (W)	Ground	Turn signal RH (Front)	Output	Ignition switch ON	Turn signal switch RH	(V) 15 10 5 0
						PKID0926E 6.5 V

	nal No.	Description				Value
+ (Wire	color)	Signal name	Input/ Output		Condition	(Approx.)
					Turn signal switch OFF	0 V
18 (BG)	Ground	Turn signal LH (Front)	Output	Ignition switch ON	Turn signal switch LH	15 10 5 0 1 s PKID0926E
				Other than under	condition	6.5 V 5.0 V
19 (SB)	Ground	Interior room lamp control	Output	Interior room la (Door is unlock)	mp timer is activated.	0 V
					Turn signal switch OFF	0 V
20 (V)	Ground	Turn signal RH (Rear)	Output	Ignition switch ON	Turn signal switch RH	(V) 15 10 5 0 1 s PKID0926E 6.5 V
					Turn signal switch OFF	0 V
25 (G)	Ground	Turn signal LH (Rear)	Output	Ignition switch ON	Turn signal switch LH	(V) 15 10 5 0 1 s PKID0926E 6.5 V
26	Ground	Rear wiper	Output	Rear wiper	OFF (Stopped)	0 V
(P)	2.34.14		- Carput		ON (Operated)	12 V
34	Ground	Luggage room anten-	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	(V) 15 10 5 0 JMKIA0062GB
(SB)		na (–)			When Intelligent Key is not in the passenger compartment	(V) 15 10 5 11 1 s JMKIA0063GB

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Terminal No. (Wire color)		Description	I		0 1111	Value	
+	- COIOI)	Signal name	Input/ Output		Condition	(Approx.)	
35	Canada	Luggage room anten-	Output	Ignition switch	When Intelligent Key is in the passenger compart- ment	(V) 15 10 5 0 1 s JMKIA0062GB	
(V)	Ground	na (+)	Output	OFF	When Intelligent Key is not in the passenger compartment	(V) 15 10 5 0 JMKIA0063GB	
38	Constant	und Back door antenna (–)	Output	When the back door opener re- quest switch is operated with ig- nition switch OFF	When Intelligent Key is in the antenna detection area	(V) 15 10 5 0 1 s JMKIA0062GB	
38 (B) Grou	Glound				When Intelligent Key is not in the antenna detection area	(V) 15 10 5 0 1 s JMKIA0063GB	
39	Crownid	Back door antenna	Outside	When the back door opener re-	When Intelligent Key is in the antenna detection area	(V) 15 10 5 0 JMKIA0062GB	
(W)	Ground	(+)	Output	quest switch is operated with ig- nition switch OFF	When Intelligent Key is not in the antenna detection area	(V) 15 10 5 0 1 s JMKIA0063GB	
47 (Y)	Ground	Ignition relay (IPDM E/R) control	Output	Ignition switch	OFF or ACC	12 V 0 V	

	inal No. e color)	Description			O and distant	Value
+	-	Signal name	Input/ Output		Condition	(Approx.)
52	Ground	Starter relay control	Output	Ignition switch	When selector lever is in P or N position	12 V
(LG)	Glound	Starter relay control	Output	ON	When selector lever is not in P or N position	0 V
60		Push-button ignition	_	J	Pressed	0 V
(SB)	Ground	switch (Push switch)	Input	nition switch (Push switch)	Not pressed	12 V
					ON (Pressed)	0 V
61 (W)	Ground	Back door opener request switch	Input	Back door request switch	OFF (Not pressed)	(V) 15 10 5 0 10 ms JPMIA0016GB 1.0 V
64		Intelligent Key warn-		Intelligent Key	Sounding	0 V
(L)	Ground	ing buzzer (Engine room)	Output	warning buzzer (Engine room)	Not sounding	12 V
65 (BG)	Ground	Rear wiper stop position	Input	Rear wiper	In stop position	(V) 15 10 10 10 ms JPMIA0016GB 1.0 V
					Not in stop position	0 V
66	Ground	Back door switch	Input	Back door switch	OFF (Door close)	12 V
(LG)	Ground	Back door Switch	прис	Back door switch	ON (Door open)	0 V
					Pressed	0 V
67 (P)	Ground	Back door opener switch	Input	Back door opener switch	Not pressed	(V) ₁₅ 10 5 0 → 10ms JPMIA0594GB 8.5 - 9.0 V
68 (BR)	Ground	Rear RH door switch	Input	Rear RH door switch	OFF (Door close)	(V) ₁₅ 10 5 0 → 10ms JPMIA0594GB 8.5 - 9.0 V
					ON (Door open)	0 V

< ECU DIAGNOSIS INFORMATION >

		Description	Description			Value	
(Wire	e color)	Signal name	Input/ Output		Condition	(Approx.)	
69 (R)	Ground	Rear LH door switch	Input	Rear LH door switch	OFF (Door close)	(V) 15 10 5 0 JPMIA0594GB	
					ON (Door open)	8.5 - 9.0 V 0 V	
74	Ground	Passenger door an-	Output	When the passenger door request switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area	(V) 15 10 5 0 1 s JMKIA0062GB	
(SB) Gr	Glound	tenna (-)	Cutput		When Intelligent Key is not in the antenna detection area	(V) 15 10 5 0 1 s JMKIA0063GB	
75 (BR) Ground	Ground	Ground Passenger door antenna (+) Outpu	Output	When the passenger door re-	When Intelligent Key is in the antenna detection area	(V) 15 10 5 0 1 s JMKIA0062GB	
	Ground		Cutput	quest switch is operated with ig- nition switch OFF	When Intelligent Key is not in the antenna detection area	(V) 15 10 5 0 1 s JMKIA0063GB	

	nal No.	Description				Value
+	color)	Signal name	Input/ Output		Condition	(Approx.)
76	Ground	Driver door antenna		When the driver door request	When Intelligent Key is in the antenna detection area	(V) 15 10 5 0 1 s JMKIA0062GB
(V)	Glouliu	(-)	Output	ed with ignition switch OFF	When Intelligent Key is not in the antenna detection area	(V) 15 10 5 0 JMKIA0063GB
77	Ground	Driver door antenna	er door antenna Output	When the driver door request switch is operat- ed with ignition switch OFF	When Intelligent Key is in the antenna detection area	(V) 15 10 5 0 1 s JMKIA0062GB
(LG)	Ground	(+)			When Intelligent Key is not in the antenna detection area	(V) 15 10 5 0 JMKIA0063GB
78	Ground	Room antenna (–) (Instrument panel)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	(V) 15 10 5 0 JMKIA0062GB
(Y)	Ground				When Intelligent Key is not in the passenger compartment	(V) 15 10 5 0 1 s JMKIA0063GB

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

	inal No. e color)	Description				Value
+	-	Signal name	Input/ Output		Condition	(Approx.)
79	Ground	Room antenna (+)	Output	Ignition switch	When Intelligent Key is in the passenger compart- ment	(V) 15 10 5 0 1 s JMKIA0062GB
(BR)		(Instrument panel)		OFF	When Intelligent Key is not in the passenger compartment	(V) 15 10 5 0 1 s JMKIA0063GB
80 (GR)	Ground	NATS antenna amp.	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelligent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
81 (W)	Ground	NATS antenna amp.	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelligent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
82 (P)	Ground	Ignition relay [Fuse block (J/B)] control	Output	Ignition switch	OFF or ACC	0 V 12 V
83	Ground	Remote keyless entry receiver communication	Input/ Output	During waiting		(V) 15 10 5 0 1 ms JMKIA0064GB
(GR)	Ground			When operating egent Key	either button on the Intelli-	(V) 15 10 5 0 1 ms JMKIA0065GB

PCS

Α

В

 D

Е

F

G

Ν

0

< ECU DIAGNOSIS INFORMATION >

	nal No.	Description				Value
+	color)	Signal name	Input/ Output	Condition		(Approx.)
		Combination switch INPUT 5	Input	Combination switch	All switches OFF (Wiper volume dial 4)	(V) 15 10 5 0 JPMIA0041GB 1.4 V
87	Ground				Front fog lamp switch ON (Wiper volume dial 4)	(V) 15 10 5 0 2 ms JPMIA0037GB
(BR)					Rear wiper switch ON (Wiper volume dial 4)	(V) 15 10 5 0 2 ms JPMIA0039GB 1.3 V
					Any of the conditions below with all switches OFF Wiper volume dial 1 Wiper volume dial 2 Wiper volume dial 6 Wiper volume dial 7	(V) 15 10 5 0 2 ms JPMIA0040GB 1.3 V

< ECU DIAGNOSIS INFORMATION >

Terminal No. Description (Wire color)				Value		
+	e color)	Signal name	Input/ Output		Condition	(Approx.)
					All switches OFF (Wiper volume dial 4)	(V) 15 10 5 0 2 ms JPMIA0041GB
					Lighting switch HI (Wiper volume dial 4)	(V) 15 10 5 0 2 ms JPMIA0036GB 1.3 V
88 (V)	Ground	Combination switch INPUT 3	Input	Combination switch	Lighting switch 2ND (Wiper volume dial 4)	(V) 15 10 5 0 1.3 V
					Rear washer switch ON (Wiper volume dial 4)	(V) 15 10 5 0 2 ms JPMIA0039GB 1.3 V
					Any of the conditions below with all switches OFF Wiper volume dial 1 Wiper volume dial 2 Wiper volume dial 3	(V) 15 10 5 0 2 ms JPMIA0040GB 1.3 V
90 (P)	Ground	CAN-L	Input/ Output			_
91 (L)	Ground	CAN-H	Input/ Output		_	_

< ECU DIAGNOSIS INFORMATION >

	nal No.	Description				Value
(Wire	e color)	Signal name	Input/ Output		Condition	(Approx.)
					OFF	12 V
92 (LG)	Ground	Key slot illumination	Output	Key slot illumina- tion	Blinking	(V) 15 10 5 0 JPMIA0015GB 6.5 V
					ON	0 V
93 (V)	Ground	ON indicator lamp	Output	Ignition switch	OFF (LOCK indicator is not illuminated)	Battery voltage
					ON or ACC	0 V
95	Ground	ACC relay control	Output	Ignition switch	OFF	0 V
(BG)			•		ACC or ON	12 V
96 (GR)	Ground	A/T shift selector (Detention switch) power supply	Output		_	12 V
99	Ground	Selector lever P posi-	Input	Selector lever	P position	0 V
(R)	Ground	tion switch		Selector level	Any position other than P	12 V
					ON (Pressed)	0 V
100 (G)	Ground	Passenger door request switch	Input	Passenger door request switch	OFF (Not pressed)	(V) 15 10 5 10 ms JPMIA0016GB 1.0 V
					ON (Pressed)	0 V
101 (SB)	Ground	Driver door request switch	Input	Driver door request switch	OFF (Not pressed)	(V) 15 10 5 0 10 ms JPMIA0016GB 1.0 V
102	Ground	Blower fan motor re-	Output	Ignition switch	OFF or ACC	0 V
(BG)	Cround	lay control	Cutput	- Summon Switten	ON	12 V
103 (BR)	Ground	Remote keyless entry receiver power supply	Output	Ignition switch OF	F	12 V

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Terminal No. Description (Wire color)		Description				Value	
+ (vvire co	olor)	Signal name	Input/ Output		Condition	(Approx.)	
					All switches OFF	(V) 15 10 5 0 2 ms JPMIA0041GB 1.4 V	
					Turn signal switch LH	(V) 15 10 5 0 2 ms JPMIA0037GB	
107 (LG)	Ground	Combination switch INPUT 1	Input	Combination switch (Wiper volume dial 4)	Turn signal switch RH	(V) 15 10 5 0 2 ms JPMIA0036GB	
					Front wiper switch LO	(V) 15 10 5 0 JPMIA0038GB 1.3 V	
					Front washer switch ON	(V) 15 10 5 0 2 ms JPMIA0039GB 1.3 V	

Revision: 2015 February PCS-97 2015 QX70

	nal No.	Description			Value		
(Wire	color)	Signal name	Input/ Output		Condition	Value (Approx.)	
					All switches OFF (Wiper volume dial 4)	(V) 15 10 5 0 2 ms JPMIA0041GB 1.4 V	
					Lighting switch AUTO (Wiper volume dial 4)	(V) 15 10 2 ms JPMIA0038GB 1.3 V	
108 (R)	Ground	Combination switch INPUT 4	Input	Combination switch	Lighting switch 1ST (Wiper volume dial 4)	(V) 15 10 5 0 2 ms JPMIA0036GB	
					Rear wiper switch INT (Wiper volume dial 4)	(V) 15 10 5 0 2 ms JPMIA0040GB	
					Any of the conditions below with all switches OFF Wiper volume dial 1 Wiper volume dial 5 Wiper volume dial 6	(V) 15 10 5 0 2 ms JPMIA0039GB 1.3 V	

< ECU DIAGNOSIS INFORMATION >

Terminal No.		Description				Value	Λ
(Wire	e color)	Signal name	Input/ Output		Condition	(Approx.)	А
					All switches OFF	(V) 15 10 5 0 2 ms JPMIA0041GB 1.4 V	B C D
					Lighting switch PASS	(V) 15 10 5 0 2 ms JPMIA0037GB	E F
109 (Y)	Ground	Combination switch INPUT 2	Input	Combination switch (Wiper volume dial 4)	Lighting switch 2ND	(V) 15 10 5 0 2 ms JPMIA0036GB 1.3 V	G H I
					Front wiper switch INT/ AUTO	(V) 15 10 5 2 ms JPMIA0038GB 1.3 V	J K L
					Front wiper switch HI	(V) 15 10 5 0 2 ms JPMIA0040GB 1.3 V	PCS N
					ON	0 V	0
110 (G)	Ground	Hazard switch	Input	Hazard switch	OFF	(V) 15 10 10 ms JPMIA0012GB	Р


Terminal No.		Description				Value	
(Wire	e color)	Signal name	Input/ Output		Condition	(Approx.)	
112 (GR)	Ground	Rain sensor serial link	Input/ Output	Ignition switch ON		(V) 15 10 5 0 	
113	Ground	Optical sensor	Input	Ignition switch ON	When bright outside of the vehicle	Close to 5 V	
(P)					When dark outside of the vehicle	Close to 0 V	
116 (BR)	Ground	Stop lamp switch 1	Input		_	Battery voltage	
	Ground	Stop lamp switch 2 (Without ICC) Stop lamp switch 2 (With ICC)		Stop lamp switch	OFF (Brake pedal is not depressed)	0 V	
118			_ Input		ON (Brake pedal is depressed)	Battery voltage	
(P)				Stop lamp switch OFF (Brake pedal is not depressed) and ICC brake hold relay OFF		0 V	
				Stop lamp switch ON (Brake pedal is depressed) or ICC brake hold relay ON		Battery voltage	
119 (SB)	Ground	Front door lock assembly driver side (Unlock sensor)	Input	Driver door	LOCK status (Unlock sensor switch OFF)	(V) ₁₅ 10 5 0 ++10ms JPMIA0594GB 8.5 - 9.0 V	
					UNLOCK status (Unlock switch sensor ON)	0 V	
121	Ground	Key slot switch	Input	When the Intelligent Key is inserted into key slot		12 V	
(BR)				When the Intelligent Key is not inserted into key slot		0 V	
123 (W)	Ground	IGN feedback	Input	Ignition switch	OFF or ACC	0 V	
					ON	Battery voltage	
124 (LG)	Ground	Passenger door switch	Input	Passenger door switch	OFF (Door close)	(V) ₁₅ 10 5 0 **10ms JPMIA0594GB	
					ON (Door open)	8.5 - 9.0 V 0 V	
			1	l .			


< ECU DIAGNOSIS INFORMATION >


Terminal No. (Wire color)		Description				Value	
+		Signal name	Input/ Output	Condition		(Approx.)	
132 (BG)	Ground	Power window switch communication	Input/ Output	Ignition switch ON		(V) 15 10 5 0 10 ms JPMIA0013GB 10.2 V	
				Ignition switch Of	FF or ACC	12 V	
134		10014: 1: 4 1		LOCK indicator	OFF	Battery voltage	
(GR)	Ground	LOCK indicator lamp	Output	lamp	ON	0 V	
137 (B)	Ground	Receiver and sensor ground	Input	Ignition switch Of	N	0 V	
138	Ground	Sensor power supply	Output	Ignition switch	OFF	0 V	
(Y)	Ground				ACC or ON	5.0 V	
140	Ground	Selector lever P/N	Input	Selector lever	P or N position	12 V	
(R)	Cround	position	input	SCICCIOI IGVEI	Except P and N positions	0 V	
-		Security indicator lamp	Output	Security indicator lamp	ON	0 V	
141 (G)	Ground				Blinking	(V) 15 10 5 0 1 s JPMIA0014GB	
					OFF	12 V	
					All switches OFF	0 V	
		Combination switch OUTPUT 5	Output	Combination switch (Wiper volume dial 4)	Lighting switch 1ST		
					Lighting switch HI	(V) 15	
142	Ground				Lighting switch 2ND	10	
(BG)	2.333				Turn signal switch RH	0	
					All switches OFF	0 V	
					(Wiper volume dial 4)		
					Front wiper switch HI (Wiper volume dial 4)		
143 (P)	Ground	Combination switch OUTPUT 1	Output	Combination switch	Rear wiper switch INT (Wiper volume dial 4) Any of the conditions below with all switches OFF Wiper volume dial 1 Wiper volume dial 2 Wiper volume dial 3 Wiper volume dial 6	(V) 15 10 5 0 2 ms JPMIA0032GB	


< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		0 1111		Value	
+	-	Signal name	Input/ Output	Condition		(Approx.)	
	Ground	Combination switch OUTPUT 2	Output	Combination switch	All switches OFF (Wiper volume dial 4)	0 V	
					Front washer switch ON (Wiper volume dial 4)		
144					Rear wiper switch ON (Wiper volume dial 4)	(V) 15 10	
(G)					Rear washer switch ON (Wiper volume dial 4)	0	
					Any of the conditions below with all switches OFF • Wiper volume dial 1 • Wiper volume dial 5 • Wiper volume dial 6	2 ms JPMIA0033GB	
					All switches OFF	0 V	
		Combination switch OUTPUT 3	Output	Combination switch (Wiper volume dial 4)	Front wiper switch INT/ AUTO		
	Ground				Front wiper switch LO	(V) 15	
145 (L)					Lighting switch AUTO	10 5 0 2 ms JPMIA0034GB	
-						10.7 V	
	Ground	Combination switch OUTPUT 4	Output	Combination switch (Wiper volume dial 4)	All switches OFF	0 V	
					Front fog lamp switch ON	(V)	
					Lighting switch 2ND	15 10	
146 (SB)					Lighting switch PASS	5	
(02)					Turn signal switch LH	2 ms JPMIA0035GB	
150 (GR)	Ground	Driver door switch	Input	Driver door switch	OFF (Door close)	(V) ₁₅ 10 5 0 → 10ms JPMIA0594GB 8.5 - 9.0 V	
					ON (Door open)	0 V	
151	Ground	Rear window defog- ger relay control	Output	Rear window de- fogger	Active	0 V	
(G)					Not activated	Battery voltage	

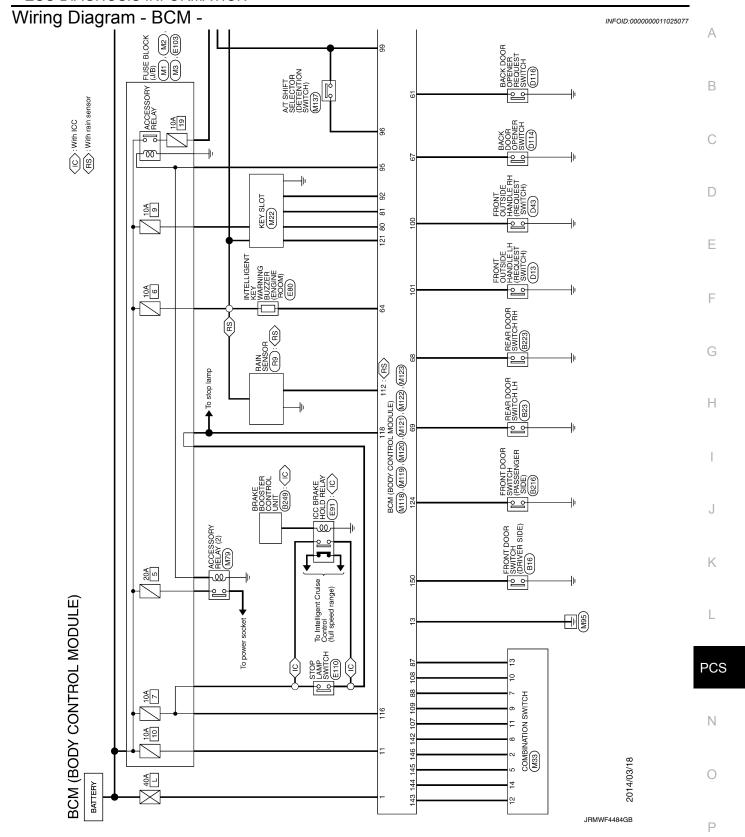

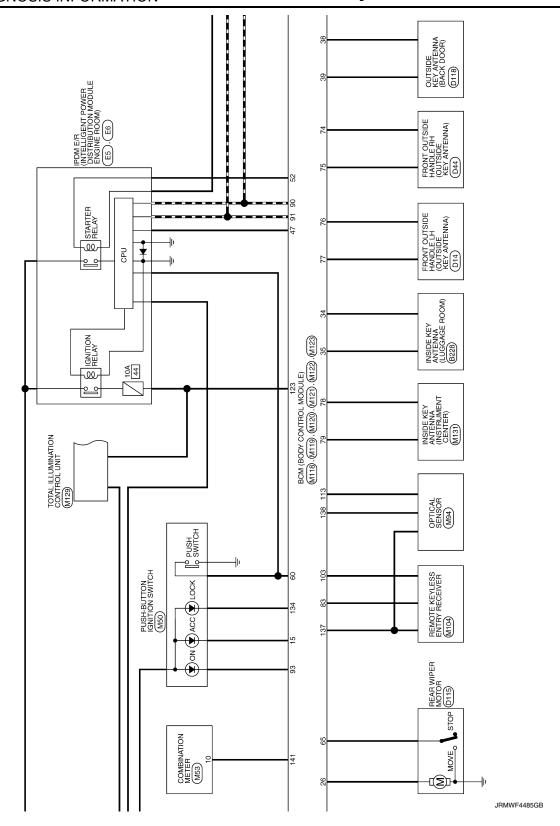

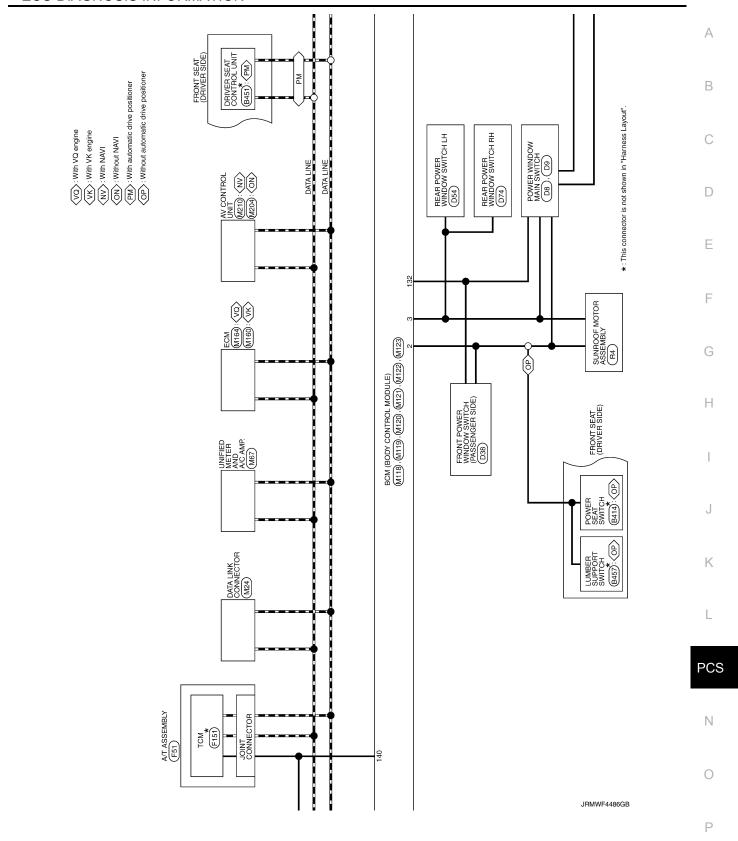


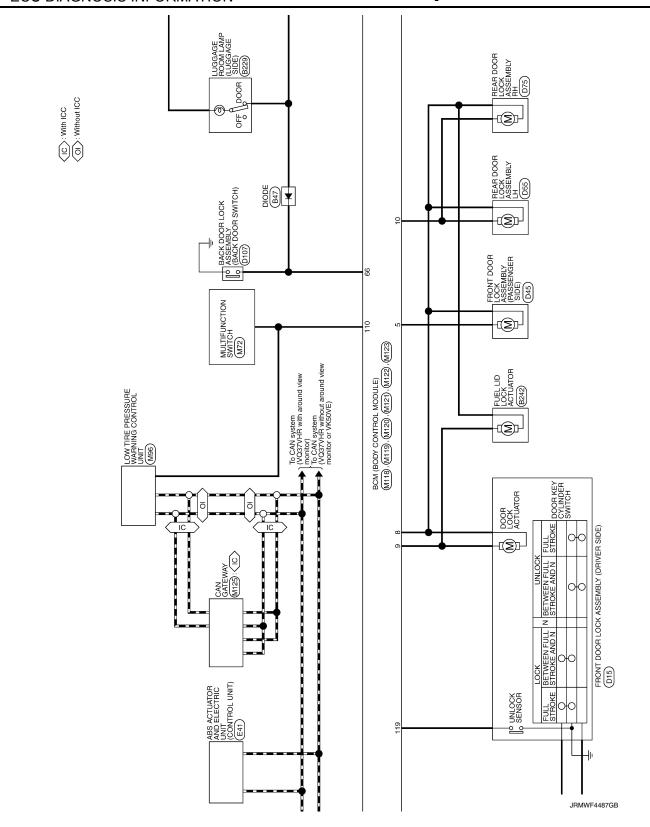


Α

В

C

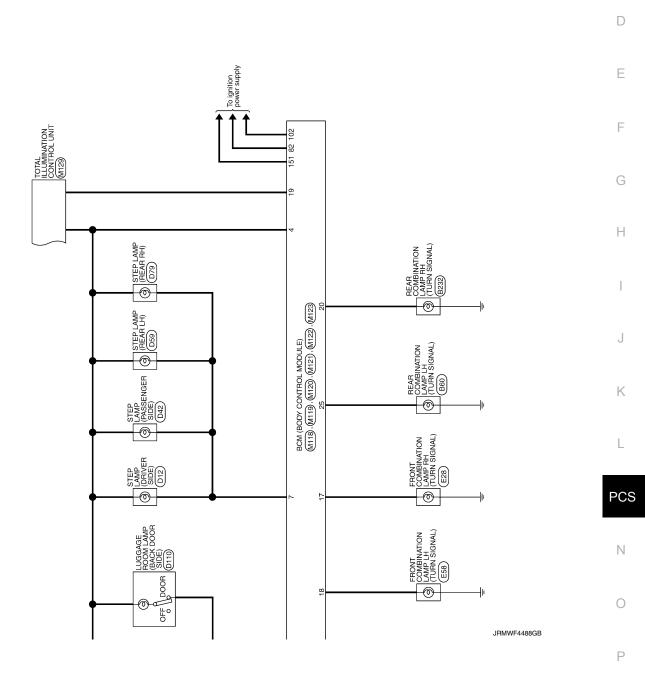

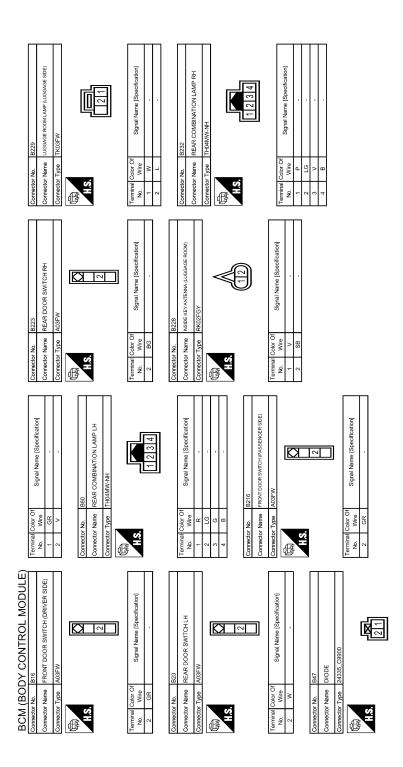

JRMWF4489GB

5	Cornector No. D9 Cornector No. D9 Cornector No. D9 Cornector No. D12 D12 D132 D
19 V CANL	Corrector Name LuksAR SupPORT SWITCH
Corrector No. B414 Connector Name POWER SEAT SWITCH Connector Type NST0FW.CS 48 3 6 5 10 9	Signal Name Specification Signal Name Specification
BCM (BODY CONTROL MODULE) Cornector No. B242 Cornector Name FUEL LID LOCK ACTUATOR Cornector Type MO4FW4.C	Terminal Color Of Signal Name (Specification) 1

PCS

Κ

Α

В

 D

Е

F

G


Н

Ν

0

JRMWF4490GB

Ρ

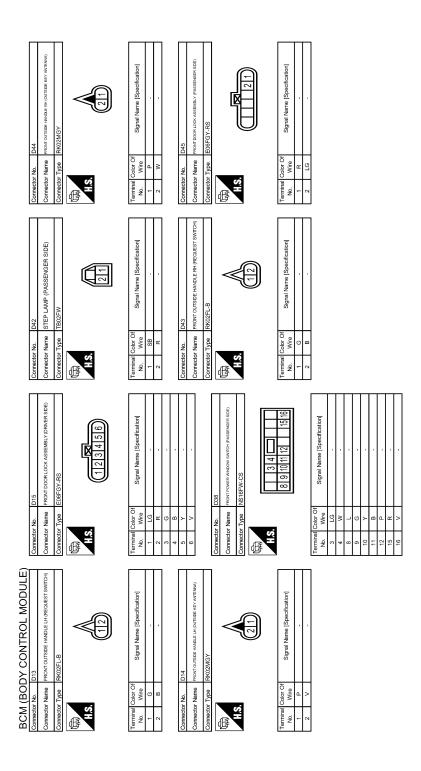

JRMWF4491GB

Corrector No. D107 Corrector Name BACK DOOR LOCK ASSEMBLY Corrector Type NSGRFW.CS TI	Terminal Color Of Signal Name [Specification] No. Wire Signal Name [Specification] No. Wire Signal Name [Specification] No. No.	
Corrector No. D75 Corrector Name REAR DOOR LOCK ASSEMBLY RH Corrector Type EDGFGY-RS H.S.	Terminal Color Of Signal Name [Specification] 1	
Corrector No. D59 Connector Name STEP LAMP (REAR LH) Connector Type TB02FW H.S.	Terminal Color Of Signal Name Specification No. Wine L. Comector Name REAR POWER WINDOW SWITCH RH	
BCM (BODY CONTROL MODULE) Corrector Ne. D54 Corrector Name REAR POWER WINDOW SWITCH LH Corrector Type NSGRFW.CS (A)	Terminal Color Of Signal Name (Specification) No. Wive	

PCS

Κ

Α

В

С

 D

Е

F

G

Н

Ν

0

JRMWF4492GB

Р

V 34	46 BR .		Corrector No. E28 Corrector Name FRONT COMBINATION LAMP RH Corrector Type RSQMFB.PR	H.S.	4)	Terminal Color Of Signal Name [Specification]		Н		L		Connector No. E41	Connector Name ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)	Connector Type BAA42FB-AHZ4-LH	E	(2) (2) (3) (3) (3) (3) (3) (4) (5) (4			Terminal Color Of Signal Name [Specification] No. Wire	1 B GROUND	9	3 R UBVR	B :	> 2	7 BR DP.RR		W	7	ط !	15 SHIELD AGND
Commontes No	e e	Connector Type TH20FW-CS12-M4-1V	H.S. (4.5) (1.6) (Terminal Color Of Signal Name [Specification] No. Wire	5 L	7 R -	+	Н	16 LG .	+	Н	+	28 BG	Н	Connector No. E6	Connector Name ENGINTELLIGENT POWER DISTRIBUTION MODILE ENGINE ROOM)	Connector Type TH08FW-NH		H.S.	42 41 40 39	46 45 44 43		0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	Signal Name [Specification]	+	H	41 B -	+	+	44 W -
Commonder No.	пе	Connector Type TK02MBR-P	H.S.		Terminal Color Of Signal Name [Specification] No.	2 B		Connector No. D118	Connector Name OUTSIDE KEY ANTENNA (BACK DOOR)		Collector Type Intozeror	₹				Terminal Color Of	No. Wire signal Name [specification]	2 R .													
BCM (BODY CONTROL MODULE)	Connector Name BACK DOOR OPENER SWITCH	Connector Type TK02MBR-P	EST STATE		Terminal Color Of Signal Name [Specification]	1 W -		Connector No. D115	Connector Name REAR WIPER MOTOR	Connector Tune C IMEM 1V				77	4 3	Terminal Color Of	No. Wire Signal Name [Specification]	Н	4 B -												

JRMWF4493GB

				<	*		4101211	ر 4	(6 2 8 3 10)			Signal Name [Specification]	IGNITION POWER SUPPLY	BATTERY POWER SUPPLY (MEMORY BACK-UP)	CAN-H	K-LINE	GROUND	IGNITION POWER SUPPLY	BACK-UP LAMP RELAY	CAN-L	STARTER RELAY	GROUND			FUSE BLOCK (J/B)	28.		\prod	3A	84 7A 6A 5A 4A				Signal Name [Specification]			•		,			
Connector No. F151	9		Connector Type SP10FG	ą	图	٤	ė.				Torminal Color Of	Wire	×	2 В ВАТТЕВ	8	0	0	6 GR IO	7 L	8 BR	6	10 W/B		Connector No. M1	Connector Name FUSE BL	Connector Type NS06FW-M2	<u>4</u>	ALT.	E.S.				-	nal Color Of		1A BG	2A G	3A L	4A R	4	6A Y	+
for No.	9	TO I WALL OF LOUIS CAN I	Connector Type M04FW-LC				3.4	\ \ \	7]	Tourinal Color Of	Wire Signal Name [Specification]	1		9	BR			tor No. F51	> dw1000 + +	CONTRECTOR NATIVE AND AND ENTER 1	Connector Type RK10FG-DGY	≪		54321	10 0 8 7 8]	Terminal Color Of		Y IGNITION POWER SUPPLY	R BATTERY POWER SUPPLY (MEMORY BACK-UP)	L CAN-H		B GROUND	9	R BACK-UP LAMP RELAY	Ц	GR STARTER RELAY [With VQ engine]	STARTER R	B GROUND		
E91 Connector No.	CC BBAKE HOLD BELAY		M06FGY-R-US	{ {			673	2	<u>L</u>]		Signal Name [Specification]		B 2	6	4			Connector No.		E103	(dir.)/00 id L01ii	-			6F 4F	10 9 8 8	Termina	ÖZ	· Of Signal Name (Specification)					9	7	8	6	6	10		
AODULE)	Connector Name	1000	Connector Type	ą	图	3	^ V				Carley Indiana	2	-	2	8	4 G	9	1 2			Connector No.		pecification] Connector Type		10000000000000000000000000000000000000	H.S.			OF THE PROPERTY OF THE PROPERT	Terminal	No. Wire	+	+	2F W	3F	4F G	/ 6F BG	8F L	9F R	fication		ALL.)
BCM (BODY CONTROL MODULE)	Y BUS-L						R VDC OFF SW	CANH	H-SNB BNS-H		031	200	Connector Name FRONT COMBINATION LAMP LH	r Type RS04FB-PR	Į.	[Į	"		477)		Terminal Color Of Signal Name [Speci		. 9	BG		r No. E80	1	Name of the state	Connector Type RK03FBR		<	«	$\{$	(1 3)				Terminal Color Of Signal Name [Specification]	Wire Wire	BUZZER
BCM	25	26	27	28	29	30	31	35	45		On softon No	100	Connecto	Connector Type			1	\ \ \					Terminal No.	-	2	υ 4		Connector No.	1) Online	Connecto	q	至) III	4					Terminal	ġ.	- «

PCS

Α

В

 D

Е

F

G

Н

Ν

C

Р

JRMWF4494GB

Revision: 2015 February PCS-113 2015 QX70

M33	COMBINATION SWITCH 8 P	Corrector No. Miss Corrector No. Miss Corrector No. Miss Corrector Name COMBINATION METER	Name [Specification]	R (+)	IGN No. Wire Caracter Commenced In No. OITPLITS 1 RG RATTERY POWER SLIPPLY	2 LG	INPUT 3 3 GR COMMUNICATION SIGNAL (AMP>METER) OITTPLITS 5 R GROLIND	AL AL	+	15 B G	16 B METER CON	OUTPUT 2 21 R IGNITION SIGNAL	<u></u>	œ	PUSH-BUTTON IGNITION SWITCH 27 V PARKING BRAKE SWITCH SIGNAL 28 W BRAKE FILID LEVEL SWITCH SIGNAL	SB	G PA	+	1 ILLUMINATION CONTROL SIGNAL	30 LG	18 68	۵ د	- E		Signal Name [Specification]			
Connector No.	e ue		erminal Color Of No. Wire	BG SB	υ -	<u>a</u>	> 2	>	œ <u>:</u>	2 a	æ	Ö		Connector No.	Connector Name F	Connector Type T			ς,	3				erminal Color Of	Wire	В	œ	
Connec	Connec	HS.	Termina No.	3 2	4 r.	9	- α	6	9 ;	12	13	4		Connec	Connec	Connec	ģ	F	S					Terming	2	-	2	
Connector No. M22	e ne	H.S. 123 5 6	nal Color Of Signal Na Wire R	W GR	5 Y ILL BAT	В	11 BR KEY SWITCH SIGNAL		Connector No. M24	Connector Name DATA LINK CONNECTOR	Connector Type BD16FW		2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	H.S.	3 4 5 6 7 8			Terminal Color Of Signal Name [Specification]	+	$^{+}$	+	+	7 GR	Ś (C	F	12 P	13	1
BCM (BODY CONTROL MODULE) Connector No. M2			[Specification]																[Specification]									

JRMWF4495GB

OF W FDTIMED/CAND	- d 51	В	Connector No. M104 Connector Name REMOTE KEYLESS ENTRY RECEIVER Connector Type JABU4FB	H.S.	Terminal Color Of Signal Name (Specification) No. Wire Signal Name (Specification) 1 B GROWL OUTPUT 2 GR SIGNAL OUTPUT 4 BR BATTERY	Cornector No. M118 Cornector Name BCM (BODY CONTROL MODULE) Cornector Type M03FB-LC	H.S.	Terminal Codo Or Signal Name (Specification)	
Commonder No.	Je .	Connector Type TK03FW	#S.	Terminal Color Of Signal Name (Specification) No. Wire Wire POWER 1	Corrector No. M96 Corrector Name Low THE PRESSURE WARNAG CONTROL LINIT CORRECT Type THQ2PW.NH	H.S. (12.3.4 5.6.7 8.9 10.0 13.0 1	Terminal Color Of Signal Name (Specification) No. Wire Signal Name (Specification) 1	5	
Cassacoles No. MZO	Connector Name MuLTIFUNCTION SWITCH	Connector Type TH16FW-NH	H.S. 1 4 6 8 9 14 16 1 3 5 9 9 14 16 1 1 3 5 1 9 9 1 14 16 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	nal Color Of Signal N Wire B B V V R	5 R ILLCOMT 6 SB AV COMM (L) 8 LG AV COMM (L) 9 BR SW GND 14 SB DISK ELECT SIGNAL 16 G HAZARD ON	Cornector No. M79 Connector Name ACCESSORY RELAY (2) Connector Type MS02FL/M2-LC	H.S.	Terminal Coor Of Signal Name Specification	
BCM (BODY CONTROL MODULE)	Connector Name UNIFIED METER AND A/C AMP.	Connector Type TH32FW-NH	(1) (1) (1) (1) (1) (1) (1) (1) (1) (1)	al Color Of Wire V Y R	2	BR/	88 S B B C L L EA		

PCS

Κ

Α

В

 D

Е

F

G

Н

Ν

 \cap

JRMWF4496GB

Р

ည်) (B)	BCM (BODY CONTROL MODULE)							ŀ	-	Γ
Connector No.	or No.	M119	Connec	Connector No.	M121	8	g R	NATS ANT AMP.	4	SEC	T
Connec	Connector Name	BCM (BODY CONTROL MODULE)	Connec	Connector Name	BCM (BODY CONTROL MODULE)	6 S	s (NATS ANT AMP.	+	1	1
Į		00 1910	Į		- III XOLOSI II	8 8	7 5	IGN KELAY (F/B) CONI	+		Τ
Connec	Connector Type	П.	Connector	ctor Iype	LH40FGY-NH	3 5	5 6	KEYLESS ENIRY RECEIVER SIGNAL	+	COMBISM OUIFULZ	T
qĮ.			Ą			8	¥ ;	COMBI SW INPUT 5	+	COMBI SW OUI PUL 3	Τ
手			手	_		8 8	> (COMBI SW INPUL 3	+	SB COMBI SW OUI PUL 4	T
SH	72	4 5 7 7 8 9 10	Ę	Œ.		8 3		CAN-L	+	+	Ţ
	9)] - -		5	#E 98 08 02 127	6	4	CAN-H	151	G REAR WINDOW DEFOGGER RELAY CONT	FN.
		11 13 15 17 18 19			69 68 67 66 65 64 61 60 61	92	9 >	KEY SLOT ILL			
						CG CG	> 2	DNIINO E 100 CO 110 CO 1		Γ	Γ
						£ 8	2 6	ACC RELAY CON	Connector No.	MTZ5	Τ
Termin	Terminal Color Of		Tormina	Color		8 8	5 0	ALI SHIFT SELECTOR POWER SUPPLY	Connector Na	Connector Name CAN GATEWAY	
2	Wire	Signal Name [Specification]	ė.		Signal Name [Specification]	100	ź (5)	PASSENGER DOOR REQUEST SW	Connector Type	Connector Type TH12FW-NH	Τ
4	۵	INT ROOM LAMP PWR SUPPLY (BAT SAVE)	8	SB	LUGGAGE ROOM ANT-	101	SB	DRIVER DOOR REQUEST SW	֓֟֝֟֜֜֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓]
2	^	PASSENGER DOOR UNLOCK OUTPUT	32	۸	LUGGAGE ROOM ANT+	102	BG	BLOWER FAN MOTOR RELAY CONT	F		
7	>	STEP LAMP OUTPUT	38	В	BACK DOOR ANT-	103	BR	KEYLESS ENTRY RECEIVER POWER SUPPLY	É	/ \ \	
80	>	ALL DOOR, FUEL LID LOCK OUTPUT	38	≥	BACK DOOR ANT+	107	PC	COMBI SW INPUT 1	Ş	1 3 1 5 6	
6	g	DRI	47	>	IGN RELAY (IPDM E/R) CONT	108	œ	COMBI SW INPUT 4		> +	
10	æ	REAR DO	25	₉	STARTER RELAY CONT	109	>	COMBI SW INPUT 2		7 9 10 11 12	
=	ď	BAT (FUSE)	9	SB	ENG_START_SW	110	O	HAZARD SW			
13	В	GROUND	61	Μ	TRUNK_REQUEST_SW						1
15	Υ	ACC IND	64	٦	I-KEY WARN BUZZER (ENG ROOM)				nal C	or Of Signal Name (Specification)	
17	Μ		99	BG	REAR WIPER STOP POSITION	Connector No.		M123	No.	Wire Signal Name [Specification]	
18	BG	TURNSIGN	99	9T	BACK DOOR SW	formo	Connector Name	(BILIDOM IOBINOS AUGRAMOR	1	L CAN-H	
19	SB	ROOM LAMP TIMER	49	Д	BACK DOOR OPENER SW			DOM (BOD) COMINGE MODOLL)	3	GR BATTERY	
			99	BR	REAR RH DOOR SW	Connect	Connector Type	TH40FG-NH	4	L CAN-H	
			69	œ	REAR LH DOOR SW	4			5	B GROUND	
Connector No.	for No.	M120				F	_		9	L CAN-H	
Connec	Connector Name	BCM (BODY CONTROL MODILLE)) I	,	K	\dashv		7
			Connec	Connector No.	M122	Ë	7	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	\exists	LG IGNITION	
Connec	Connector Type	NS12FW-CS	Connec	Connector Name	BCM (BODY CONTROL MODILLE)			(3) (3) (3) (3) (3) (3) (3) (3) (3) (3)	10	P CAN-L	1
4	•		2				_		=	Ŭ	1
厚	_		Connec	Connector Type	TH40FB-NH				12	P CAN-L	
) II (7		ą								
	9]-	手	_		Terminal	<u> </u>	Signal Name [Specification]			
		[25]26		v.		2 5	a d	Sixt - Middle deciral of Mixed			
				1	91 90 88 67 83 82 81 80 79 78 77 78 78 74	445	5 0	RAIN SENSOR SERIAL LINK			
					110 113 108 108 100 100 100 100 100 100 100 100	116	L &	STOP I AMP SW 1			
Termin	Terminal Color Of	L				118	۵	STOP LAMP SW 2			
§.	Wire	Signal Name [Specification]				119	SB	DR DOOR UNLOCK SENSOR			
20	>	TURN SIGNAL RH (REAR)	Terminal	0	ff Sound Name Consideration	121	H	KEY SLOT SW			
25	Э		N	Wire		123	W	IGN F/B			
56	۵	REAR WIPER OUTPUT	74	SB	PASSENGER DOOR ANT-	124	re	PASSENGER DOOR SW			
			75	æ	PASSENGER DOOR ANT+	132	BG	POWER WINDOW SW COMM			
			92	>	DRIVER DOOR ANT-	134	GR	LOCK IND			
			4	9	DRIVER DOOR ANT+	137	В	RECEIVER/SENSOR GND			
			28	4	ROOM ANT1-	138	>	SENSOR POWER SUPPLY			
			79	æ	ROOM ANT1+	140	œ	SHIFT NP			

JRMWF4497GB

BCM (B	BCM (BODY CONTROL MODULE)										
Connector No.	M129	Connector No.	r No.	M131	Connector No.		M160	Connector No.	or No.	M164	
Connector Na	Connector Name TOTAL ILLUMINATION CONTROL UNIT	Connector Name	r Name	NSIDE KEY ANTENNA (INSTRUMENT CENTER)	Connector Name		ECM	Connect	Connector Name	ECM	
Connector Type	pe TH40FW-NH	Connector Type	r Type	RK02MGY	Connector Type	П	RH24FGY-RZ8-R-LH-Z	Connect	Connector Type	RH24FGY-RZ8-R-LH-Z	
Œ		Œ		<	(F			Œ			
H.S.		HS	. •	\triangleleft	H.S.		128 120 116 112 108 104 100 123 118 115 111 99	Ĕ		128 124 112 108 104 100 127 123 110 100 89	
	1			(12)			7.05 1.02 1.07 1.08 1.01 8.7 1.08 1.01 1.08 1.01 8.7			126 122 114 110 1109 110 93 125 121 117 113 1109 118 110 97	
Terminal Color O	color Of Signal Name [Specification]	Terminal	Color Of	Signal Name [Specification]	Terminal	Color Of	Signal Name [Specification]	Termina	Ferminal Color Of	Signal Name [Specification]	
+		<u>-</u>	8	,	97	2	ENGINE SPEED SIGNAL OUTPUT	97	2	ACCELERATOR PEDAL POSITION SENSOR 1	
4	L TAIL LAMP SIGNAL	2	>		66	ტ	SENSOR POWER SUPPLY	86	Ь	ACCELERATOR PEDAL POSMON SENSOR 2 [Without NAVI]	
2	V ACC SIGNAL				100	٦	SENSOR POWER SUPPLY	86	Ь	ACCELERATOR PEDAL POSITION SENSOR 2 [With NAVI]	
9	P BAT SAVER SIGNAL				101	a.	CAN COMMUNICATION LINE	66	9	SENSOR POWER SUPPLY [With NAVI]	
\dashv		Connector No.	ır No.	M137	102	SB	ASCD/ICC STEERING SWITCH	66	٦	SENSOR POWER SUPPLY [Without NAVI]	
8		hanno	Connector Name	A/T SHIFT SEI ECTOR	104	œ	ACCELERATOR PEDAL POSITION SENSOR 1	100	Μ	SENSOR GROUND	
9 8	+				105	_	CAN COMMUNICATION LINE	101	SB	ASCD/ICC STEERING SWITCH	
10 S	SB MOOD LAMP (FR ARMREST RH)	Connector Type	r Type	TH12FW-NH	106	٦	IGNITON SWITCH	102	LG	EVAP CONTROL SYSTEM PRESSURE SENSOR	
11	Y MOOD LAMP (RR ARMREST RH)	4			108	a.	ACCELERATOR PEDAL POSITION SENSOR 2	103	g	SENSOR POWER SUPPLY [Without NAVI]	
12 F	P MAP LAMP (AS)	B			110	۵	STOP LAMP SWITCH	103	٦	SENSOR POWER SUPPLY [With NAVI]	
13 (G PERSONAL LAMP (LH)	ť		<u>-</u>	111	۸	SENSOR GROUND	104	BR	SENSOR GROUND [With NAVI]	
14 F	R PERSONAL LAMP (RH)	2		1 2 3 1 5	112	P	FUEL PUMP CONTROL MODULE (FPCM) CHECK	104	GR	SENSOR GROUND [Without NAVI]	
16 G	GR FOOT LAMP (RH)				114	GR	DATA LINK CONNECTOR	105	٦	REFRIGERANT PRESSURE SENSOR	
17 L	LG HSPL ILLUMINATIONS			7 8 9 10 11	115	GR	SENSOR GROUND	106	Μ	FUEL TANK TEMPERATURE SENSOR	
18	L MAP LAMP (DR)				116	9	TRANSMISSION RANGE SWITCH	107	BG	SENSOR POWER SUPPLY	
19 F	R PUSH ENG START SW LED				117	BR	ASCD/ICC BRAKE SWITCH	108	^	SENSOR GROUND	
20	Y AMBIENCE LAMP	Terminal	O	Constitution (Constitution)	118	œ	POWER SUPPLY FOR ECM (BACK-UP)	109	g	PNP SIGNAL	
21 F	R BAT POWER SUPPLY	No.	Wire	orginal realite [opecification]	119	W	SENSOR GROUND	110	ч	ENGINE SPEED OUTPUT SIGNAL	
23 E	B GROUND	1	>	•	120	Α	FUEL TANK TEMPERATURE SENSOR	112	>	SENSOR GROUND (WITH EVAP CONTROL SYSTEM PRESSURE SENSOR)	
		2	>		121	GR	POWER SUPPLY FOR ECM	112	Μ	SENSOR GROUND (Without BVAP CONTROL, SYSTBAPMESSURE SENSOR)	
25 B	BR DOOR SW (RR)	3	٦		123	В	ECM GROUND	113	Ь	CAN COMMUNICATION LINE	
26 B	BR MAP LAMP SW (DOOR)	4	В	,	125	Я	FUEL PUMP CONTROL MODULE (FPCM)	114	L	CAN COMMUNICATION LINE	
27 F	W	5	9		128	В	ECM GROUND	117	GR	DATA LINK CONNECTOR	
28 S		7	BG					121	97	EVAP CANISTER VENT CONTROL VALVE	
29 G	GR DOOR SW (DR)	8	SB					122	Ь	STOP LAMP SWITCH	
30 F	LG MOOD LAMP (FR ARMREST LH)	6	В					123	В	ECM GROUND	
31 B	BG MOOD LAMP (RR ARMREST LH)	10	GR					124	В	ECM GROUND	
33 ^	W HSPL POWER SUPPLY 3	11	ď					125	GR	POWER SUPPLY FOR ECM	
34 F	R HSPL POWER SUPPLY 2							126	BR	ASCD/ICC BRAKE SWITCH	
35	V HSPL POWER SUPPLY 1							127	В	ECM GROUND	
36	L FOOT LAMP (LH)							128	В	ECM GROUND	
39	B PUDDLE LAMP (RH)										
┝	BG PUDDLE LAMP (LH)										

PCS

Α

В

 D

Е

F

G


Н

Ν

0

JRMWF4498GB

Р

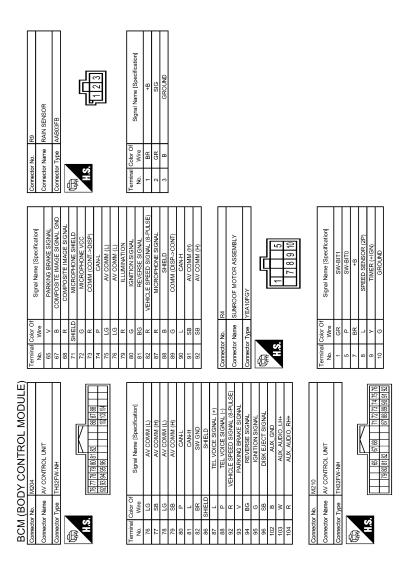

JRMWF4499GB

Fail-safe

FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC are detected.

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Display contents of CONSULT	Fail-safe	Cancellation
B2190: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2195: ANTI SCANNING	Inhibit engine cranking	Ignition switch $ON \rightarrow OFF$
B2560: STARTER CONT RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent • Starter control relay signal • Starter relay status signal
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent Starter relay control signal Starter relay status signal (CAN)
B260A: IGNITION RELAY	Inhibit engine cranking	 500 ms after the following conditions are fulfilled IGN relay (IPDM E/R) control signal: OFF (Battery voltage) Ignition ON signal (CAN to IPDM E/R): OFF (Request signal) Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal)
B260F: ENG STATE SIG LOST	Maintains the power supply position attained at the time of DTC detection	When any of the following conditions are fulfilled Power position changes to ACC Receives engine status signal (CAN)
B2617: STARTER RELAY CIRC	Inhibit engine cranking	1 second after the starter relay control inside BCM becomes normal
B2618: BCM	Inhibit engine cranking	1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal
B261E: VEHICLE TYPE	Inhibit engine cranking	BCM initialization

FAIL-SAFE CONTROL BY RAIN SENSOR MALFUNCTION

- BCM judges the rain sensor serial link error by the rain sensor serial link condition and detects the rain sensor malfunction by rain sensor malfunction signal.
- When BCM detects the rain sensor serial link error or the rain sensor malfunction while front wiper AUTO operation, BCM operates a fail-safe control.

NOTE:

If rain sensor malfunction is detected when ignition switch is turned OFF \Rightarrow ON and front wiper switch is INT position, BCM operates a fail-safe control.

REAR WIPER MOTOR PROTECTION

BCM detects the rear wiper stopping position according to the rear wiper stop position signal.

When the rear wiper stop position signal does not change for more than 5 seconds while driving the rear wiper, BCM stops power supply to protect the rear wiper motor.

Condition of cancellation

- 1. More than 1 minute is passed after the rear wiper stops.
- Turn rear wiper switch OFF.
- 3. Operate the rear wiper switch or rear washer switch.

DTC Inspection Priority Chart

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	B2562: LOW VOLTAGE
2	U1000: CAN COMM U1010: CONTROL UNIT(CAN)

PCS

L

Α

В

D

Е

Н

Ν

Р

INFOID:0000000011025079

Revision: 2015 February PCS-119 2015 QX70

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Priority	DTC
3	 B2190: NATS ANTENNA AMP B2191: DIFFERENCE OF KEY B2192: ID DISCORD BCM-ECM B2193: CHAIN OF BCM-ECM B2195: ANTI SCANNING
4	 B2553: IGNITION RELAY B2555: STOP LAMP B2556: PUSH-BTN IGN SW B2557: VEHICLE SPEED B2600: STARTER CONT RELAY B2601: SHIFT POSITION B2602: SHIFT POSITION B2603: SHIFT POSI STATUS B2604: PNP/CLUTCH SW B2605: PNP/CLUTCH SW B2605: PNP/CLUTCH SW B2608: STARTER RELAY B2608: STARTER RELAY B2607: ENG STATE SIG LOST B2614: BCM B2615: BCM B2616: BCM B2617: BCM B2618: BCM B2618: BCM B2618: WHICLE TYPE B26EA: KEY REGISTRATION U0415: VEHICLE SPEED SIG
5	B2621: INSIDE ANTENNA B2623: INSIDE ANTENNA
6	B26E7: TPMS CAN COMM

DTC Index

NOTE:

The details of time display are as follows.

- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.

IGN counter is displayed on Freeze Frame Data. For details of Freeze Frame Data, refer to <u>BCS-20, "COM-MON ITEM"</u>.

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warn- ing lamp ON	Reference
No DTC is detected. Further testing may be required.	_	_	_	_
U1000: CAN COMM	_	_	_	BCS-39
U1010: CONTROL UNIT(CAN)	_	_	_	BCS-40
U0415: VEHICLE SPEED SIG	_	_	_	BCS-41
B2190: NATS ANTENNA AMP	×	_	_	SEC-47
B2191: DIFFERENCE OF KEY	×	_	_	SEC-50
B2192: ID DISCORD BCM-ECM	×	_	_	<u>SEC-51</u>
B2193: CHAIN OF BCM-ECM	×	_	_	<u>SEC-53</u>
B2195: ANTI SCANNING	×	_	_	<u>SEC-54</u>
B2553: IGNITION RELAY	_	×	_	PCS-53
B2555: STOP LAMP	_	×	_	<u>SEC-55</u>

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warn- ing lamp ON	Reference	Α
B2556: PUSH-BTN IGN SW	_	×	×	<u>SEC-57</u>	В
B2557: VEHICLE SPEED	×	×	×	<u>SEC-59</u>	•
B2560: STARTER CONT RELAY	×	×	×	<u>SEC-60</u>	
B2562: LOW VOLTAGE	_	×	_	BCS-42	С
B2601: SHIFT POSITION	×	×	×	<u>SEC-61</u>	•
B2602: SHIFT POSITION	×	×	×	<u>SEC-64</u>	D
B2603: SHIFT POSI STATUS	×	×	×	<u>SEC-66</u>	•
B2604: PNP/CLUTCH SW	×	×	×	<u>SEC-69</u>	•
B2605: PNP/CLUTCH SW	×	×	×	<u>SEC-71</u>	Е
B2608: STARTER RELAY	×	×	×	<u>SEC-73</u>	•
B260A: IGNITION RELAY	×	×	×	PCS-55	F
B260F: ENG STATE SIG LOST	×	×	×	<u>SEC-75</u>	
B2614: BCM	_	×	×	PCS-57	•
B2615: BCM	_	×	×	PCS-59	G
B2616: BCM	_	×	×	PCS-61	•
B2617: BCM	×	×	×	<u>SEC-77</u>	- H
B2618: BCM	×	×	×	PCS-63	. !!
B261A: PUSH-BTN IGN SW	_	×	×	<u>SEC-79</u>	•
B261E: VEHICLE TYPE	×	×	× (Turn ON for 15 seconds)	SEC-82	1
B2621: INSIDE ANTENNA	_	×	_	DLK-101	-
B2623: INSIDE ANTENNA	_	×	_	DLK-103	J
B26E7: TPMS CAN COMM	_	_	_	BCS-43	-
B26EA: KEY REGISTRATION	_	×	× (Turn ON for 15 seconds)	SEC-76	K

PCS

L

Ν

0

Р

< ECU DIAGNOSIS INFORMATION >

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Reference Value INFOID:0000000011025081

VALUES ON THE DIAGNOSIS TOOL

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item		Condition	Value/Status
RAD FAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.	0 – 100 %
		A/C switch OFF	Off
AC COMP REQ	Engine running	A/C switch ON (Compressor is operating)	On
TAIL&CLR REQ	Lighting switch OFF		Off
TAIL&CLR REQ	Lighting switch 1ST, 2ND, HI or	AUTO (light is illuminated)	On
LIL LO DEO	Lighting switch OFF		Off
HL LO REQ	Lighting switch 2ND HI or AUTO) (light is illuminated)	On
LII LII DEO	Lighting switch OFF		Off
HL HI REQ	Lighting switch HI		On
		Front fog lamp switch OFF	Off
FR FOG REQ	Lighting switch 2ND or AUTO (light is illuminated)	 Front fog lamp switch ON Daytime running light activated (Only for Canada) 	On
	Ignition switch ON	Front wiper switch OFF	Stop
ED WID DEO		Front wiper switch INT	1LOW
FR WIP REQ		Front wiper switch LO	Low
		Front wiper switch HI	Hi
		Front wiper stop position	
WIP AUTO STOP	Ignition switch ON	Any position other than front wiper stop position	ACT P
		Front wiper operates normally	Off
WIP PROT	Ignition switch ON	Front wiper stops at fail-safe operation	BLOCK
ION DIVI DEO	Ignition switch OFF or ACC		Off
IGN RLY1 -REQ	Ignition switch ON		On
ICN DI V	Ignition switch OFF or ACC		Off
IGN RLY	Ignition switch ON		On
PUSH SW	Release the push-button ignition switch		Off
FUSH SW	Press the push-button ignition switch		On
INTER/NP SW	Ignition switch ON	Selector lever in any position other than P or N	Off
		Selector lever in P or N position	On
ST RLY CONT	Ignition switch ON		Off
OT INET OOM	At engine cranking		On

< ECU DIAGNOSIS INFORMATION >

Monitor Item	C	Value/Status	
ILIDT DLV. DEO	Ignition switch ON	Off	
IHBT RLY -REQ	At engine cranking		On
	Ignition switch ON		Off
	At engine cranking		$INHI \rightarrow ST$
ST/INHI RLY		er control relay cannot be recognized by tc. when the starter relay is ON and the	UNKWN
DETENT SW	Ignition switch ON	Press the selector button with selector lever in P position Selector lever in any position other than P	Off
	Release the selector button with	selector lever in P position	On
S/L RLY -REQ	NOTE: The item is indicated, but not mo	Off	
S/L STATE	NOTE: The item is indicated, but not mo	UNLOCK	
DTRL REQ	NOTE: The item is indicated, but not mo	Off	
OIL P SW	Ignition switch OFF, ACC or engine running		Open
OIL P 3W	Ignition switch ON		Close
HOOD SW	Close the hood		Off
HOOD 3W	Open the hood		On
HL WASHER REQ	NOTE: The item is indicated, but not mo	Off	
	Not operation	Off	
THFT HRN REQ	Panic alarm is activated Horn is activated with VEHICLI TEM	On	
HODN CHIDD	Not operating	Off	
HORN CHIRP	Door locking with Intelligent Key	(horn chirp mode)	On
CRNRNG LMP REQ	NOTE: The item is indicated, but not mo	Off	

PCS

Ν


0

Р

PCS-123 2015 QX70 **Revision: 2015 February**

< ECU DIAGNOSIS INFORMATION >

TERMINAL LAYOUT

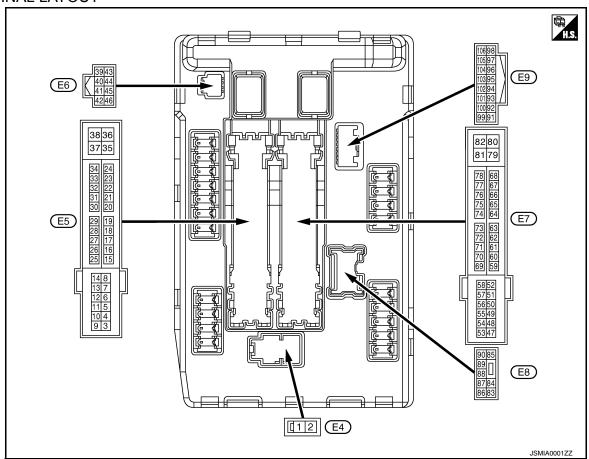

PHYSICAL VALUES

	inal No.	Description				Value	
+ (Wire	e color)	Signal name	Input/ Output	Condition		(Approx.)	
1 (W)	Ground	Battery power supply	Input	Ignition swi	tch OFF	Battery voltage	
2 (L)	Ground	Battery power supply	Input	Ignition swi	tch OFF	Battery voltage	
4	Ground	Front winer LO	Output	Ignition	Front wiper switch OFF	0 V	
(V)	Ground	Front wiper LO	Output	switch ON	Front wiper switch LO	Battery voltage	
5	Ground	Front wiper HI	Output	Ignition	Front wiper switch OFF	0 V	
(L)	Ground	1 Tont wiper th	switch	switch ON	Front wiper switch HI	Battery voltage	
7	Ground	Tail, license plate lamps &	Output	Ignition	Lighting switch OFF	0 V	
(R)	Ground	interior lamps	Output	switch ON	Lighting switch 1ST	Battery voltage	
10 ^{*1}				Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		0 V	
(SB)	Ground	ECM relay power supply	Output	Ignition switch ON Ignition switch OFF (For a few seconds after tion switch OFF)		Battery voltage	
12 (B)	Ground	Ground	_	Ignition swi	tch ON	0 V	

Α

В

С

 D

Е

F

G

Н

Κ

PCS

Ν

0

Р

< ECU DIAGNOSIS INFORMATION >

(VVire	e color)	Description			Condition	Value
+	-	Signal name	Input/ Output		Condition	(Approx.)
13			_		tely 1 second or more after ignition switch ON	0 V
(Y)	Ground	Fuel pump power supply	Output		nately 1 second after turning on switch ON unning	Battery voltage
16				Ignition	Front wiper stop position	0 V
(LG)	Ground	Front wiper stop position	Input	switch ON	Any position other than front wiper stop position	Battery voltage
19	Ground	Ignition relay power supply	Output	Ignition swi	tch OFF	0 V
(W)	Giodila	ignition relay power supply	Output	Ignition swi	tch ON	Battery voltage
25	0	120	0 1 1	Ignition swi	tch OFF	0 V
(G)	Ground	Ignition relay power supply	Output	Ignition swi	tch ON	Battery voltage
26 ^{*2}			<u> </u>	Ignition swi	tch OFF	0 V
(R)	Ground	Ignition relay power supply	Output	Ignition swi	tch ON	Battery voltage
27				Ignition swi	tch OFF or ACC	Battery voltage
(Y)	Ground	Ignition relay monitor	Input	Ignition swi	tch ON	0 V
28	_	Push-button ignition		Press the p	oush-button ignition switch	0 V
(BG)	Ground	switch	Input		e push-button ignition switch	Battery voltage
30	Ground	Starter relay control	Input	Ignition	Selector lever in any position other than P or N	0 V
(GR)	R) Cleana Clarter relay sention		switch ON Selector lever P or N		Battery voltage	
36 (G)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
39 (P)	_	CAN-L	Input/ Output		_	_
40 (L)	_	CAN-H	Input/ Output		_	_
41 (B)	Ground	Ground	_	Ignition swi	tch ON	0 V
42	Ground	Cooling fan relay control	Input	Ignition swi	tch OFF or ACC	0 V
(Y)	Ground	Cooming fair relay Control	mput	Ignition swi	tch ON	0.7 V
43 (SB)	Ground	A/T shift selector (Detention switch)	Input	Ignition switch ON	Press the selector button (Selector lever P) Selector lever in any position other than P	Battery voltage
					Release the selector but- ton (selector lever P)	0 V
44	Ground	Horn relay control	Innut	The horn is	deactivated	Battery voltage
(W)	Giodila	Hom relay Control	Input	The horn is	activated	0 V
45	Cround	Anti thoff harm roles control	Inn: 4	The horn is	deactivated	Battery voltage
(G)	Ground	Anti theft horn relay control	Input	The horn is	activated	0 V
46 (BR)	Ground	Starter relay control	Input	Ignition switch ON	Selector lever in any position other than P or N	0 V
(טוע)				SWILCH ON	Selector lever P or N	Battery voltage
					A/C switch OFF	0 V
48 (L)	Ground	A/C relay power supply	Output	Engine running	A/C switch ON (A/C compressor is operating)	Battery voltage

PCS-125 Revision: 2015 February 2015 QX70

< ECU DIAGNOSIS INFORMATION >

Terminal No. Description (Wire color)		Description			On a little	Value					
+	-	Signal name	Input/ Output		Condition	(Approx.)					
49				Ignition switc (More than a ignition switch	few seconds after turning	0 V					
(W)*1 (SB)*3	Ground	ECM relay power supply	Output	Ignition swIgnition sw(For a few tion switch	itch OFF seconds after turning igni-	Battery voltage					
51 (G)	Ground	Ignition relay power supply	Output	Ignition switc		0 V Battery voltage					
				Ignition switc		0 V					
52 (W)	Ground	Ignition relay power supply	Output	Ignition switc		Battery voltage					
50				Ignition switc (More than a ignition switch	few seconds after turning	0 V					
53 (W)	Ground	ECM relay power supply	Output	Ignition sw Ignition sw (For a few tion switch)	itch OFF seconds after turning igni-	Battery voltage					
54		Throttle control motor re-		Ignition switc (More than a ignition switch	few seconds after turning	0 V					
(R)	Ground		lay power supply					Output	Ignition swIgnition sw(For a few tion switch	itch OFF seconds after turning igni-	Battery voltage
55 (BR)	Ground	ECM power supply	Output	Ignition switc	h OFF	Battery voltage					
56 (BG) ^{*1}	Ground	Ignition relay power supply	Output	Ignition switc	h OFF	0 V					
(V)*3	Cround	iginuon relay power supply	Output	Ignition switc	h ON	Battery voltage					
57	Ground	Ignition relay power supply	Output	Ignition switc	h OFF	0 V					
(LG)	Oround	ignition relay power supply	Output	Ignition switc	h ON	Battery voltage					
58	Ground	Ignition relay power supply	Output	Ignition switc	h OFF	0 V					
(Y)	Oround	ignition relay power supply	Output	Ignition switc	h ON	Battery voltage					
69				Ignition switc (More than a ignition switch	few seconds after turning	Battery voltage					
(W)	Ground	ECM relay control	Output	Ignition sw Ignition sw (For a few tion switch)	itch OFF seconds after turning igni-	0 – 1.5 V					
70				Ignition switch ON → OFF		0 – 1.0 V ↓ Battery voltage					
(BG)	(-round)	Output	j i		0 V						
				Ignition switc	h ON	0 – 1.0 V					
74	Ground	Ignition relay power supply	Output	Ignition switc	h OFF	0 V					
(G)	Giound	ignition relay power supply	Output	Ignition switc	h ON	Battery voltage					
75	Ground	Oil pressure switch	Input	191111011	Engine stopped	0 V					
(Y)	Ciound	On procedure awiton	πραι	switch ON I	Engine running	Battery voltage					

PCS-126 2015 QX70 **Revision: 2015 February**

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color) Description					Value	
(Wire	e color)	Signal name	Input/ Output		Condition	(Approx.)
				Ignition swi	tch ON	(V) 6 4 2 0 *********************************
76 (P) ^{*1} (V) ^{*3}	Ground	Power generation command signal	Output		on "ACTIVE TEST", "AL- R DUTY" of "ENGINE"	(V) 6 4 2 0 → 2ms JPMIA0002GB 3.8 V
				80% is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"		(V) 6 4 2 0 → 2ms JPMIA0003GB 1.4 V
77 [B) ^{*1} (L) ^{*3}	Ground	Fuel pump relay control	Output	Approximately 1 second after turning the ignition switch ON Engine running Approximately 1 second or more after		0 – 1.0 V Battery voltage
80 (W)	Ground	Starter motor	Output	At engine of	ignition switch ON cranking	Battery voltage
83 (R)	Ground	Headlamp LO (RH)	Output	Ignition switch ON	Lighting switch OFF Lighting switch 2ND	0 V Battery voltage
84 (P)	Ground	Headlamp LO (LH)	Output	Ignition switch ON	Lighting switch OFF Lighting switch 2ND	0 V Battery voltage
86 W)	Ground	Front fog lamp	Output	Lighting switch 2ND	 Front fog lamp switch ON Daytime running light activated (Only for Canada) 	Battery voltage
88		Washer pump power sup-			Front fog lamp switch OFF	0 V
(G)	Ground	ply	Output	Ignition swi		Battery voltage
89 [BR)	Ground	Headlamp HI (RH)	Output	Ignition switch ON	Lighting switch HI Lighting switch PASS Lighting switch OFF	Battery voltage
90 (Y)	Ground	Headlamp HI (LH)	Output	Ignition switch ON	Lighting switch HI Lighting switch PASS	Battery voltage
(')				S.MOI OIV	Lighting switch OFF	0 V

< ECU DIAGNOSIS INFORMATION >


	inal No.	Description				Value
+ (Wire	e color)	Signal name	Input/ Output	Condition		(Approx.)
91	Ground	Parking lamp	Output	Ignition	Lighting switch 1ST	Battery voltage
(P)	Giodila	Faiking lamp	Output	switch ON	Lighting switch OFF	0 V
97 (V)	Ground	Cooling fan control	Output	Engine idling		0 – 5 V
104	Ground	Hood switch	Innut	Close the h	nood	Battery voltage
(LG)	(LG) Ground Hood switch	Input	Open the hood		0 V	


^{*1:} VK engine models

^{*2:} Only for the models with ICC system

^{*3:} VQ engine models

< ECU DIAGNOSIS INFORMATION >

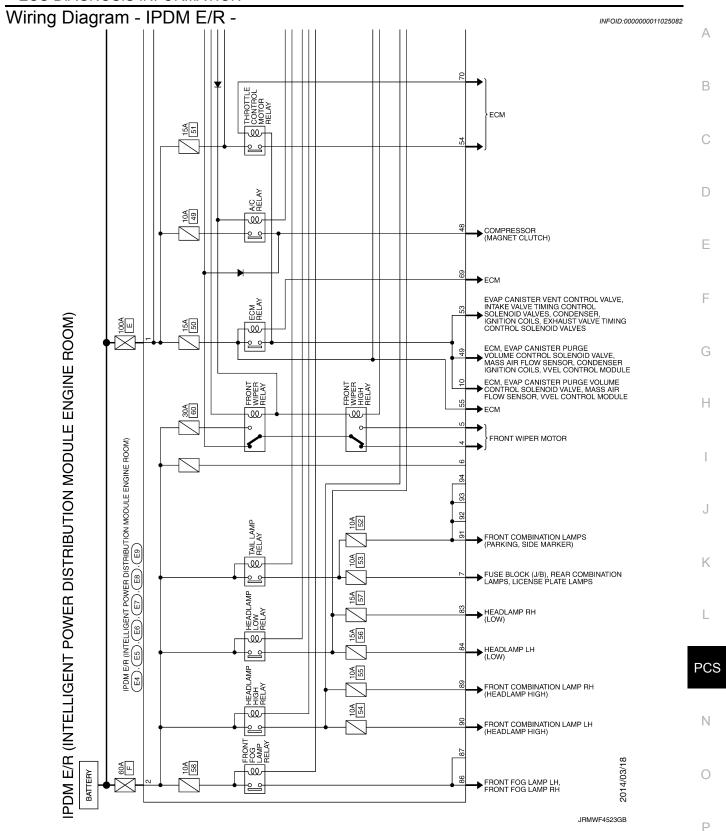


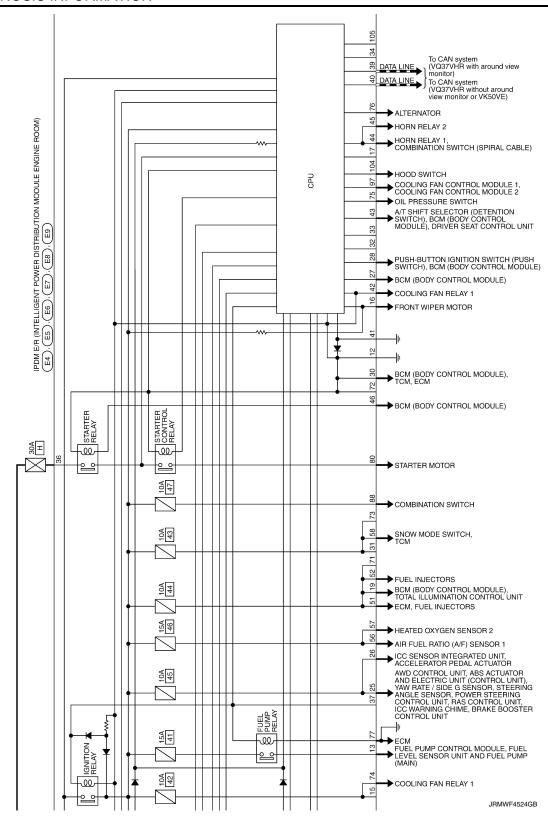

< ECU DIAGNOSIS INFORMATION >

Α В C D Е F G Н Κ **PCS** Ν 0 JRMWF4525GB Р

PCS-131 2015 QX70 **Revision: 2015 February**

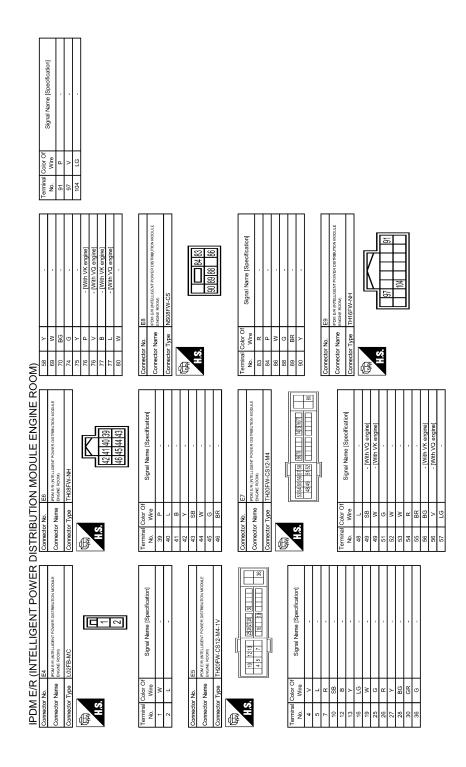

JRMWF4526GB

Fail-safe INFOID:0000000011025083

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

PCS-132 Revision: 2015 February 2015 QX70

< ECU DIAGNOSIS INFORMATION >

Control part	Fail-safe operation
Cooling fan	Outputs the pulse duty signal (PWM signal) 100% when the ignition switch is turned ON Outputs the pulse duty signal (PWM signal) 0% when the ignition switch is turned OFF
A/C compressor	A/C relay OFF
Alternator	Outputs the power generation command signal (PWM signal) 0%

If No CAN Communication Is Available With BCM

Control part	Fail-safe operation
Headlamp	Turns ON the headlamp low relay when the ignition switch is turned ON Turns OFF the headlamp low relay when the ignition switch is turned OFF Headlamp high relay OFF
Parking lampsLicense plate lampsSide marker lampsIlluminationsTail lamps	Turns ON the tail lamp relay when the ignition switch is turned ON Turns OFF the tail lamp relay when the ignition switch is turned OFF
Front wiper	 The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed. The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.
Front fog lamps	Front fog lamp relay OFF
Horn	Horn OFF
Ignition relay	The status just before activation of fail-safe is maintained.
Starter motor	Starter control relay OFF

IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- · If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

Voltage	Voltage judgment			
Ignition relay contact side	Ignition relay contact side Ignition relay excitation coil side		Operation	
ON	ON	Ignition relay ON normal	_	
OFF	OFF	Ignition relay OFF normal	-	
ON	OFF	Ignition relay ON stuck	Detects DTC "B2098: IGN RELAY ON" Turns ON the tail lamp relay for 10 minutes	
OFF	ON	Ignition relay OFF stuck	Detects DTC "B2099: IGN RELAY OFF"	

FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper stop position signal.

When a front wiper stop position signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop five times.

Ignition switch	Front wiper switch	Front wiper stop position signal
ON	OFF	The front wiper stop position signal (stop position) cannot be input for 10 seconds.
ON	ON	The front wiper stop position signal does not change for 10 seconds.

PCS-133 Revision: 2015 February 2015 QX70

Α

D

Е

PCS

Р

< ECU DIAGNOSIS INFORMATION >

NOTE:

This operation status can be confirmed on the IPDM E/R "Data Monitor" that displays "BLOCK" for the item "WIP PROT" while the wiper is stopped.

STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

DTC Index INFOID:0000000011025084

NOTE:

- The details of time display are as follows.
- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.
- IGN counter is displayed on FFD (Freeze Frame data).
- The number is 0 when is detected now.
- The number increases like 1 \rightarrow 2 \cdots 38 \rightarrow 39 after returning to the normal condition whenever IGN OFF \rightarrow
- The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

x: Applicable

	х. Арріїсавіє	
CONSULT display	Fail-safe	Reference
No DTC is detected. further testing may be required.	_	_
U1000: CAN COMM CIRCUIT	×	PCS-15
B2098: IGN RELAY ON CIRC	×	PCS-16
B2099: IGN RELAY OFF CIRC	_	PCS-18
B210B: STR CONT RLY ON CIRC	_	<u>SEC-83</u>
B210C: STR CONT RLY OFF CIRC	_	<u>SEC-84</u>
B210D: STARTER RLY ON CIRC	_	<u>SEC-86</u>
B210E: STARTER RLY OFF CIRC	_	<u>SEC-88</u>
B210F: INTRLCK/PNP SW ON	_	<u>SEC-90</u>
B2110: INTRLCK/PNP SW OFF	_	<u>SEC-92</u>

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precautions for Removing Battery Terminal

 When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

NOTE:


ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.
 NOTE:

The removal of 12V battery may cause a DTC detection error.

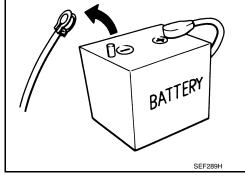

PCS

K

L

INFOID:0000000011008500

Α

В

D

Е

Н

Ν


D

Revision: 2015 February PCS-135 2015 QX70

Precaution for Procedure without Cowl Top Cover

INFOID:0000000010581828

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

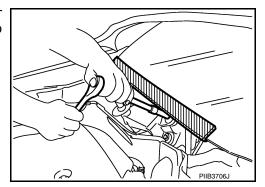

PUSH-BUTTON IGNITION SWITCH DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

Is the inspection normal?

>> GO TO 1.

YFS

NO

[POWER DISTRIBUTION SYSTEM]

Р

SYMPTOM DIAGNOSIS Α PUSH-BUTTON IGNITION SWITCH DOES NOT OPERATE Description INFOID:0000000010581829 Check that vehicle is under the condition shown in "Conditions of vehicle" before starting diagnosis, and check each symptom. NOTE: The engine start function, door lock function, power distribution system and NATS-IVIS/NVIS in the Intelligent Key system are closely related to each other regarding control. The vehicle security function can operate only when the door lock and power distribution system are operating normally. D Conditions of Vehicle (Operating Conditions) "ENGINE START BY I-KEY" in "WORK SUPPORT" is ON when setting on CONSULT. · Intelligent Key is not inserted in key slot. Е • One or more of Intelligent Keys with registered Intelligent Key ID is in the vehicle. Diagnosis Procedure INFOID:0000000010581830 CHECK DOOR LOCK FUNCTION Lock/unlock door with door request switch. Refer to DLK-23, "DOOR LOCK FUNCTION: System Description". Is the operation normal? YES >> GO TO 2. Н NO >> Check door lock function. Refer to DLK-256, "DRIVER SIDE: Diagnosis Procedure". 2.PERFORM WORK SUPPORT Perform "INSIDE ANT DIAGNOSIS" on "Work Support" of "INTELIGENT KEY". Refer to DLK-61, "INTELLIGENT KEY: CONSULT Function (BCM - INTELLIGENT KEY)". >> GO TO 3. 3.PERFORM SELF DIAGNOSTIC RESULT Perform Self Diagnostic result of "INTELIGENT KEY". K Refer to DLK-61, "INTELLIGENT KEY: CONSULT Function (BCM - INTELLIGENT KEY)". Is DTC detected? YES >> Refer to DLK-101, "DTC Logic" (instrument center), refer to DLK-103, "DTC Logic" (luggage room). NO >> GO TO 4. 4. CHECK PUSH-BUTTON IGNITION SWITCH **PCS** Check push-button ignition switch. Refer to PCS-67, "Component Function Check". Ν Is the inspection normal? YES >> GO TO 5. NO >> Repair or replace malfunctioning parts. $\mathbf{5}_{ ext{-}}$ CONFIRM THE OPERATION Confirm the operation again.

>> Check intermittent incident. Refer to GI-47, "Intermittent Incident".

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR DOES NOT ILLUMI-NATE

< SYMPTOM DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR DOES NOT IL-LUMINATE

Diagnosis Procedure

INFOID:0000000010581831

1. CHECK PUSH-BUTTON IGNITION SWITCH OPERATION

Check push-button ignition switch operation.

Refer to PCS-41, "System Description".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Refer to PCS-67, "Component Function Check".

$2.\mathsf{CHECK}$ PUSH-BUTTON IGNITION SWITCH INDICATOR

Check push-button ignition switch indicator.

Refer to PCS-70, "Component Function Check".

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3. CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to GI-47, "Intermittent Incident".

NO >> GO TO 1.

PUSH BUTTON IGNITION SWITCH

< REMOVAL AND INSTALLATION >

[POWER DISTRIBUTION SYSTEM]


REMOVAL AND INSTALLATION

PUSH BUTTON IGNITION SWITCH

Removal and Installation

REMOVAL

Remove the push-button ignition switch fixing pawl using a remover tool (A), and then remove push-button ignition switch (1).

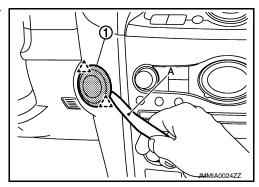

INSTALLATION

Install in the reverse order of removal.

G

Α

В

C

D

Е

INFOID:0000000010581832

Н

Κ

ï

PCS

Ν

0

Р