

SECTION ADP

AUTOMATIC DRIVE POSITIONER

CONTENTS

| | | | |
|--|----|---|----|
| PRECAUTION | 5 | INTELLIGENT KEY INTERLOCK FUNCTION | 19 |
| PRECAUTIONS | 5 | INTELLIGENT KEY INTERLOCK FUNCTION : | |
| Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" | 5 | System Diagram | 20 |
| Precautions for Removing Battery Terminal | 5 | INTELLIGENT KEY INTERLOCK FUNCTION : | |
| PREPARATION | 6 | System Description | 20 |
| PREPARATION | 6 | Fail Safe | 21 |
| Commercial Service Tools | 6 | DIAGNOSIS SYSTEM (DRIVER SEAT CONTROL UNIT) | 22 |
| SYSTEM DESCRIPTION | 7 | CONSULT Function | 22 |
| COMPONENT PARTS | 7 | ECU DIAGNOSIS INFORMATION | 25 |
| Component Parts Location | 7 | DRIVER SEAT CONTROL UNIT | 25 |
| Component Description | 8 | Reference Value | 25 |
| SYSTEM | 11 | Fail Safe | 30 |
| AUTOMATIC DRIVE POSITIONER SYSTEM | 11 | DTC Index | 31 |
| AUTOMATIC DRIVE POSITIONER SYSTEM : | | AUTOMATIC DRIVE POSITIONER CONTROL UNIT | 32 |
| System Diagram | 11 | Reference Value | 32 |
| AUTOMATIC DRIVE POSITIONER SYSTEM : | | BCM (BODY CONTROL MODULE) | 35 |
| System Description | 11 | List of ECU Reference | 35 |
| MANUAL FUNCTION | 12 | WIRING DIAGRAM | 36 |
| MANUAL FUNCTION : System Diagram | 13 | AUTOMATIC DRIVE POSITIONER SYSTEM ... | 36 |
| MANUAL FUNCTION : System Description | 13 | Wiring Diagram | 36 |
| MEMORY FUNCTION | 14 | BASIC INSPECTION | 48 |
| MEMORY FUNCTION : System Diagram | 15 | DIAGNOSIS AND REPAIR WORK FLOW | 48 |
| MEMORY FUNCTION : System Description | 15 | Work Flow | 48 |
| EXIT ASSIST FUNCTION | 16 | INSPECTION AND ADJUSTMENT | 51 |
| EXIT ASSIST FUNCTION : System Diagram | 17 | ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL | 51 |
| EXIT ASSIST FUNCTION : System Description | 17 | ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Description | 51 |
| ENTRY ASSIST FUNCTION | 18 | | |
| ENTRY ASSIST FUNCTION : System Diagram | 18 | | |
| ENTRY ASSIST FUNCTION : System Description | 18 | | |

A
B
C
D
E
F
G
H
I
ADP
K
L
M
N
O
P

| | | | |
|---|-----------|---|-----------|
| ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Special Re- pair Requirement | 51 | DTC Logic | 66 |
| ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT | 51 | Diagnosis Procedure | 66 |
| ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description | 51 | POWER SUPPLY AND GROUND CIRCUIT | 67 |
| ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement | 52 | DRIVER SEAT CONTROL UNIT | 67 |
| SYSTEM INITIALIZATION | 52 | DRIVER SEAT CONTROL UNIT : Diagnosis Procedure | 67 |
| SYSTEM INITIALIZATION : Description | 52 | DRIVER SEAT CONTROL UNIT : Special Repair Requirement | 67 |
| SYSTEM INITIALIZATION : Special Repair Re- quirement | 52 | AUTOMATIC DRIVE POSITIONER CONTROL UNIT | 67 |
| MEMORY STORING | 53 | AUTOMATIC DRIVE POSITIONER CONTROL UNIT : Diagnosis Procedure | 67 |
| MEMORY STORING : Description | 53 | AUTOMATIC DRIVE POSITIONER CONTROL UNIT : Special Repair Requirement | 68 |
| MEMORY STORING : Special Repair Require- ment | 53 | SLIDING SWITCH | 69 |
| INTELLIGENT KEY INTERLOCK STORING | 53 | Component Function Check | 69 |
| INTELLIGENT KEY INTERLOCK STORING : De- scription | 54 | Diagnosis Procedure | 69 |
| INTELLIGENT KEY INTERLOCK STORING : Special Repair Requirement | 54 | Component Inspection | 70 |
| SYSTEM SETTING | 54 | RECLINING SWITCH | 71 |
| SYSTEM SETTING : Description | 54 | Component Function Check | 71 |
| SYSTEM SETTING : Special Repair Requirement | 55 | Diagnosis Procedure | 71 |
| DTC/CIRCUIT DIAGNOSIS | 56 | Component Inspection | 72 |
| U1000 CAN COMM CIRCUIT | 56 | LIFTING SWITCH (FRONT) | 73 |
| Description | 56 | Component Function Check | 73 |
| DTC Logic | 56 | Diagnosis Procedure | 73 |
| Diagnosis Procedure | 56 | Component Inspection | 74 |
| Special Repair Requirement | 56 | LIFTING SWITCH (REAR) | 75 |
| U1010 CONTROL UNIT (CAN) | 57 | Component Function Check | 75 |
| DTC Logic | 57 | Diagnosis Procedure | 75 |
| Diagnosis Procedure | 57 | Component Inspection | 76 |
| B2112 SLIDING MOTOR | 58 | TILT SWITCH | 77 |
| DTC Logic | 58 | Component Function Check | 77 |
| Diagnosis Procedure | 58 | Diagnosis Procedure | 77 |
| B2113 RECLINING MOTOR | 60 | Component Inspection | 78 |
| DTC Logic | 60 | TELESCOPIC SWITCH | 79 |
| Diagnosis Procedure | 60 | Component Function Check | 79 |
| B2116 TILT MOTOR | 62 | Diagnosis Procedure | 79 |
| DTC Logic | 62 | Component Inspection | 80 |
| Diagnosis Procedure | 62 | SEAT MEMORY SWITCH | 81 |
| B2128 UART COMMUNICATION LINE | 64 | Component Function Check | 81 |
| Description | 64 | Diagnosis Procedure | 81 |
| DTC Logic | 64 | Component Inspection | 82 |
| Diagnosis Procedure | 64 | DOOR MIRROR REMOTE CONTROL SWITCH | 83 |
| B2130 EEPROM | 66 | CHANGEOVER SWITCH | 83 |
| | | CHANGEOVER SWITCH : Component Function Check | 83 |
| | | CHANGEOVER SWITCH : Diagnosis Procedure ... | 83 |
| | | CHANGEOVER SWITCH : Component Inspec- tion | 84 |

| | | | | |
|--|------------|--|------------|-----|
| MIRROR SWITCH | 84 | TILT MOTOR | 114 | |
| MIRROR SWITCH : Component Function Check... | 84 | Component Function Check | 114 | A |
| MIRROR SWITCH : Diagnosis Procedure | 85 | Diagnosis Procedure | 114 | |
| MIRROR SWITCH : Component Inspection | 86 | | | |
| POWER SEAT SWITCH GROUND CIRCUIT | 87 | TELESCOPIC MOTOR | 116 | B |
| Diagnosis Procedure | 87 | Component Function Check | 116 | |
| | | Diagnosis Procedure | 116 | |
| TILT & TELESCOPIC SWITCH GROUND CIRCUIT | 88 | DOOR MIRROR MOTOR | 118 | C |
| Diagnosis Procedure | 88 | Component Function Check | 118 | |
| | | Diagnosis Procedure | 118 | |
| | | Component Inspection | 119 | D |
| SLIDING SENSOR | 89 | SEAT MEMORY INDICATOR | 120 | |
| Component Function Check | 89 | Component Function Check | 120 | E |
| Diagnosis Procedure | 89 | Diagnosis Procedure | 120 | |
| RECLINING SENSOR | 91 | SYMPTOM DIAGNOSIS | 122 | |
| Component Function Check | 91 | | | |
| Diagnosis Procedure | 91 | MANUAL FUNCTION DOES NOT OPERATE. | 122 | F |
| LIFTING SENSOR (FRONT) | 93 | ALL COMPONENT | 122 | |
| Component Function Check | 93 | ALL COMPONENT : Diagnosis Procedure | 122 | G |
| Diagnosis Procedure | 93 | | | |
| LIFTING SENSOR (REAR) | 95 | POWER SEAT | 122 | |
| Component Function Check | 95 | POWER SEAT : Diagnosis Procedure | 122 | H |
| Diagnosis Procedure | 95 | | | |
| TILT SENSOR | 97 | TILT & TELESCOPIC | 122 | |
| Component Function Check | 97 | TILT & TELESCOPIC : Diagnosis Procedure | 122 | I |
| Diagnosis Procedure | 97 | | | |
| TELESCOPIC SENSOR | 99 | SEAT SLIDING | 123 | |
| Component Function Check | 99 | SEAT SLIDING : Diagnosis Procedure | 123 | |
| Diagnosis Procedure | 99 | | | |
| MIRROR SENSOR | 102 | SEAT RECLINING | 123 | ADP |
| | | SEAT RECLINING : Diagnosis Procedure | 123 | |
| DRIVER SIDE | 102 | SEAT LIFTING (FRONT) | 124 | |
| DRIVER SIDE : Component Function Check | 102 | SEAT LIFTING (FRONT) : Diagnosis Procedure | 124 | K |
| DRIVER SIDE : Diagnosis Procedure | 102 | | | |
| PASSENGER SIDE | 103 | SEAT LIFTING (REAR) | 124 | |
| PASSENGER SIDE : | | SEAT LIFTING (REAR) : Diagnosis Procedure | 124 | L |
| Component Function Check | 103 | | | |
| PASSENGER SIDE : Diagnosis Procedure | 104 | STEERING TILT | 125 | |
| | | STEERING TILT : Diagnosis Procedure | 125 | |
| SLIDING MOTOR | 106 | STEERING TELESCOPIC | 125 | M |
| Component Function Check | 106 | STEERING TELESCOPIC : Diagnosis Procedure | 125 | |
| Diagnosis Procedure | 106 | | | |
| RECLINING MOTOR | 108 | DOOR MIRROR | 126 | N |
| Component Function Check | 108 | DOOR MIRROR : Diagnosis Procedure | 126 | |
| Diagnosis Procedure | 108 | | | |
| LIFTING MOTOR (FRONT) | 110 | MEMORY FUNCTION DOES NOT OPERATE. | 127 | |
| Component Function Check | 110 | ALL COMPONENT | 127 | O |
| Diagnosis Procedure | 110 | ALL COMPONENT : Diagnosis Procedure | 127 | |
| LIFTING MOTOR (REAR) | 112 | SEAT SLIDING | 127 | P |
| Component Function Check | 112 | SEAT SLIDING : Diagnosis Procedure | 127 | |
| Diagnosis Procedure | 112 | SEAT RECLINING | 128 | |
| | | SEAT RECLINING : Diagnosis Procedure | 128 | |
| | | SEAT LIFTING (FRONT) | 128 | |
| | | SEAT LIFTING (FRONT) : Diagnosis Procedure | 128 | |

| | | | |
|---|------------|---|------------|
| SEAT LIFTING (REAR) | 128 | NORMAL OPERATING CONDITION | 134 |
| SEAT LIFTING (REAR) : Diagnosis Procedure | 128 | Description | 134 |
| STEERING TILT | 129 | REMOVAL AND INSTALLATION | 135 |
| STEERING TILT : Diagnosis Procedure | 129 | DRIVER SEAT CONTROL UNIT | 135 |
| STEERING TELESCOPIC | 129 | Removal and Installation | 135 |
| STEERING TELESCOPIC : Diagnosis Procedure | 129 | AUTOMATIC DRIVE POSITIONER CON- | |
| DOOR MIRROR | 130 | TROL UNIT | 136 |
| DOOR MIRROR : Diagnosis Procedure | 130 | Removal and Installation | 136 |
| ENTRY/EXIT ASSIST FUNCTION DOES NOT | | SEAT MEMORY SWITCH | 137 |
| OPERATE | 131 | Removal and Installation | 137 |
| Diagnosis Procedure | 131 | POWER SEAT SWITCH | 138 |
| INTELLIGENT KEY INTERLOCK FUNCTION | | Removal and Installation | 138 |
| DOES NOT OPERATE | 132 | TILT&TELESCOPIC SWITCH | 139 |
| Diagnosis Procedure | 132 | Removal and Installation | 139 |
| MEMORY INDICATE DOES NOT OPERATE. | 133 | | |
| Diagnosis Procedure | 133 | | |

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000010259475

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precautions for Removing Battery Terminal

INFOID:0000000011514700

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

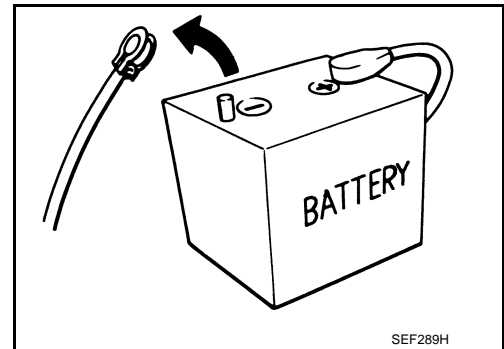

A
B
C
D
E
F
G
H
I
ADP
K
L
M
N
O
P

PREPARATION


< PREPARATION >

PREPARATION

PREPARATION

Commercial Service Tools

INFOID:0000000010259476
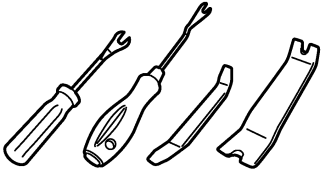
| Tool name | Description |
|---|---|
| <div>Remover tools</div> <div> JMKIA3050ZZ</div> | <div>Removes the clips, pawls and metal clips</div> |

COMPONENT PARTS


< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:0000000010259477

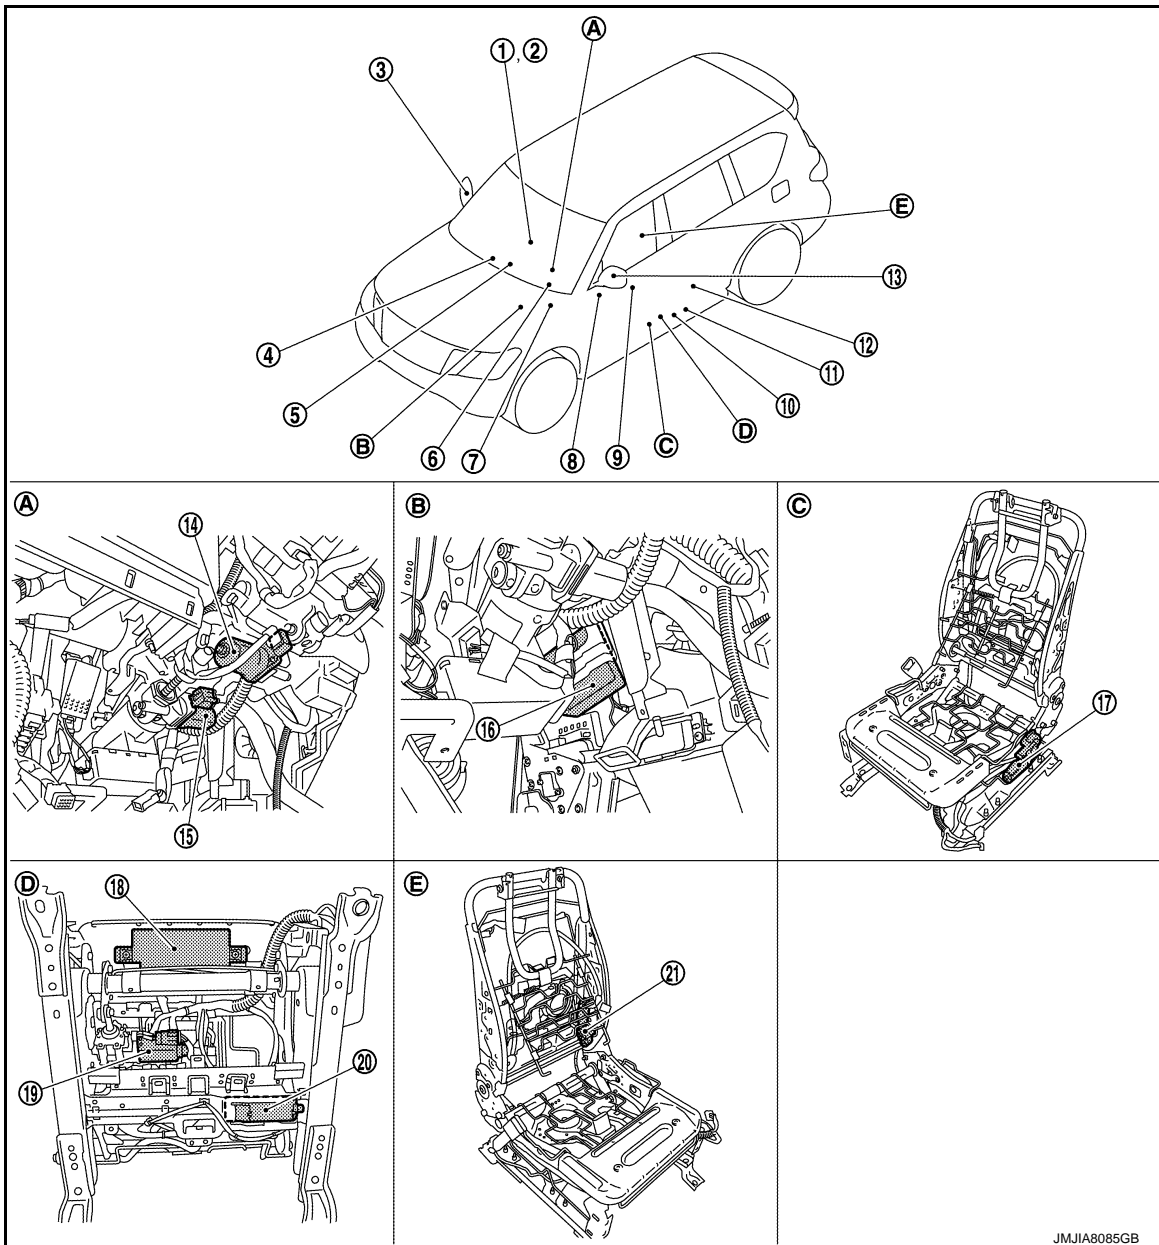

- | | | |
|---|--|---|
| 1. A/T shift selector (detention switch) Refer to TM-11, "A/T CONTROL SYSTEM : Component Parts Location" . | 2. TCM Refer to TM-11, "A/T CONTROL SYSTEM : Component Parts Location" . | 3. Door mirror (passenger side) |
| 4. Combination meter Refer to MWI-6, "METER SYSTEM : Component Parts Location" . | 5. BCM Refer to BCS-4, "BODY CONTROL SYSTEM : Component Parts Location" . | 6. Tilt & telescopic switch |
| 7. ABS actuator and electric unit (control unit) Refer to BRC-9, "Component Parts Location" . | 8. Seat memory switch | 9. Power window main switch (Door mirror remote control switch) |
| 10. Sliding, lifting switch | 11. Reclining switch | 12. Driver side door switch |
| 13. Door mirror (driver side) | 14. Tilt motor | 15. Telescopic motor |

COMPONENT PARTS

< SYSTEM DESCRIPTION >

- | | | |
|--|---|---|
| 16. Automatic drive positioner control unit | 17. Lifting motor (rear) | 18. Driver seat control unit |
| 19. Lifting motor (front) | 20. Sliding motor | 21. Reclining motor |
| A. View with steering column cover lower removed | B. View with instrument lower panel LH removed | C. View with seat cushion pad and seat back pad removed |
| D. Backside of seat cushion | E. View with seat cushion pad and seat back pad removed | |

Component Description

INFOID:0000000010259478

| Component parts | Description |
|---|--|
| Driver seat control unit | <ul style="list-style-type: none"> Main units of automatic drive positioner system. It is connected to the CAN. It communicates with automatic drive positioner control unit via UART communication. It perform memory function after receiving the door unlock signal from BCM. The address of each part is recorded. Operates each motor of seat to the registered position. Requests the operation of steering column and door mirror to automatic drive positioner control unit Operates the specific seat motor with the signal from power seat switch. Transmits the ignition switch signal (ACC/ON) via UART communication to automatic drive positioner control unit. |
| Automatic drive positioner control unit | <ul style="list-style-type: none"> It communicates with driver seat control unit via UART communication. Perform various controls with the instructions of driver seat control unit. Perform the controls of tilt & telescopic, door mirror and seat memory switch. Operates steering column and door mirror with the signal from the driver seat control unit |
| BCM | <p>Recognizes the following status and transmits it to driver seat control unit via CAN communication.</p> <ul style="list-style-type: none"> Handle position: LHD Driver door: OPEN/CLOSE Ignition switch position: ACC/ON Door lock: UNLOCK (with Intelligent key or driver side door request switch operation) Key ID Starter: CRANKING/OTHER |
| IPDM E/R | ON/OFF signal of A/T shift selector (detention switch) is transmitted to driver seat control unit via CAN communication. |
| TCM | <p>The following signals are transmitted to driver seat control unit via CAN communication.</p> <ul style="list-style-type: none"> Shift position signal (P range) Identification of transmission: A/T |
| Combination meter | Transmit the vehicle speed signal to driver seat control unit via CAN communication. |
| ABS actuator and electric unit (control unit) | Transmit the vehicle speed signal to driver seat control unit via CAN communication. |
| A/T shift selector (Detention switch) | <ul style="list-style-type: none"> Detention switch is installed on A/T shift selector. It is turned OFF when A/T shift selector is in P position. IPDM E/R judges that A/T shift selector is in P position if continuity does not exist in this circuit. |

COMPONENT PARTS

< SYSTEM DESCRIPTION >

| Component parts | | Description |
|--|------------------------|---|
| Power window main switch (Door mirror remote control switch) | Mirror switch | <ul style="list-style-type: none"> Mirror switch is integrated in door mirror remote control switch. It operates angle of door mirror face. It transmits mirror face adjust operation to automatic drive positioner control unit. |
| | Changeover switch | <ul style="list-style-type: none"> Changeover switch is integrated in door mirror remote control switch. Changeover switch has three positions (L, N and R). It changes operating door mirror motor by transmitting control signal to automatic drive positioner control unit. |
| | Open/close switch | <ul style="list-style-type: none"> Open/close switch is integrated in door mirror remote control switch. Power is supplied to folding mirror from door mirror remote control switch when operating switch. |
| Tilt & telescopic switch | Tilt switch | <ul style="list-style-type: none"> Tilt switch is equipped to steering column. The operation signal is input to automatic drive positioner control unit when tilt switch is operated. |
| | Telescopic switch | <ul style="list-style-type: none"> Telescopic switch is equipped to steering column. The operation signal is input to automatic drive positioner control unit when telescopic switch is operated. |
| Seat memory switch | Set switch | It is used for registration and setting change of driving position and Intelligent Key interlock function. |
| | Seat memory switch | <ul style="list-style-type: none"> The maximum 2 driving positions can be registered by memory switch 1 to 2. Driving position is set to the registered driving position when memory switch is pressed while operation conditions are satisfied. |
| | Seat memory indicator | Memory indicator indicates the status of auto driving position system by turning ON or blinking. |
| Power seat switch | Sliding switch | <ul style="list-style-type: none"> Sliding switch is equipped to power seat switch on seat cushion side surface. The operation signal is input to driver seat control unit when sliding switch is operated. |
| | Reclining switch | <ul style="list-style-type: none"> The operation signal is input to driver seat control unit when reclining switch is operated. The operation signal is input to driver seat control unit when reclining switch is operated. |
| | Lifting switch (front) | <ul style="list-style-type: none"> Lifting switch (front) is equipped to power seat switch on seat cushion side surface. The operation signal is input to driver seat control unit when lifting switch (front) is operated. |
| | Lifting switch (rear) | <ul style="list-style-type: none"> Lifting switch (rear) is equipped to power seat switch on seat cushion side surface. The operation signal is input to driver seat control unit when lifting switch (rear) is operated. |
| Door mirror (driver side/passenger side) | Door mirror motor | It makes mirror face operate from side to side and up and down with the electric power that automatic drive positioner control unit supplies. |
| | Mirror sensor | <ul style="list-style-type: none"> Mirror sensor is installed to door mirror. The resistance of 2 sensors (horizontal and vertical) is changed when door mirror is operated. Automatic drive positioner control unit calculates door mirror position according to the change of the voltage of 2 sensor input terminals. |

A
B
C
D
E
F
G
H
I
ADP
K
L
M
N
O
P

COMPONENT PARTS

< SYSTEM DESCRIPTION >

| Component parts | | Description |
|-----------------------|------------------------|---|
| Tilt motor | Tilt motor | <ul style="list-style-type: none"> Tilt motor is installed to steering column assembly. Tilt motor is activated with automatic drive positioner control unit. Steering column is tilted upward/downward by changing the rotation direction of tilt motor. |
| | Tilt sensor | <ul style="list-style-type: none"> Tilt sensor is integrated in tilt motor. The resistance of tilt sensor is changed according to the up/down position of steering column. The terminal voltage of automatic drive positioner control unit will be changed according to a change of tilt sensor resistance. Automatic drive positioner control unit calculates the tilt position from the voltage. |
| Telescopic motor | Telescopic motor | <ul style="list-style-type: none"> Telescopic motor is installed to steering column assembly. Telescopic motor is activated with automatic drive positioner control unit. Compresses steering column by changing the rotation direction of telescopic motor. |
| | Telescopic sensor | <ul style="list-style-type: none"> Telescopic sensor is integrated in telescopic motor. The resistance of telescopic sensor is changed according to the forward/backward position of steering column. The terminal voltage of automatic drive positioner control unit will be changed according to a change of telescopic sensor resistance. Automatic drive positioner control unit calculates the telescopic position from the voltage. |
| Sliding motor | Sliding motor | <ul style="list-style-type: none"> Seat sliding motor is installed to the seat cushion frame. Seat sliding motor is activated with driver seat control unit. Slides the seat frontward/ rearward by changing the rotation direction of sliding motor. |
| | Sliding sensor | <ul style="list-style-type: none"> Sliding sensor is integrated in sliding motor. The pulse signal is input to driver seat control unit when sliding is performed. Driver seat control unit counts the pulse and calculates the sliding amount of the seat. |
| Reclining motor | Reclining motor | <ul style="list-style-type: none"> Seat reclining motor is installed to seat back frame. Seat reclining motor is activated with driver seat control unit. Seatback is reclined frontward/rearward by changing the rotation direction of reclining motor. |
| | Reclining sensor | <ul style="list-style-type: none"> Reclining sensor is integrated in reclining motor. The pulse signal is input to driver seat control unit when the reclining is operated. Driver seat control unit counts the pulse and calculates the reclining amount of the seat. |
| Lifting motor (front) | Lifting motor (front) | <ul style="list-style-type: none"> Lifting motor (front) is installed to seat side cushion frame. Lifting motor is activated with driver seat control unit. Seat lifter (front) is moved upward/downward by changing the rotation direction of lifting motor (front). |
| | Lifting sensor (front) | <ul style="list-style-type: none"> Lifting sensor (front) is installed in lifting motor (rear). When lifting motor (rear) operates, pulse signal is transmitted to driver seat control unit from lifting sensor. Driver seat control unit counts the pulse and calculates the lift position (rear) of the seat. |
| Lifting motor (rear) | Lifting motor (rear) | <ul style="list-style-type: none"> Lifting motor (rear) is installed to seat slide cushion frame. Lifting motor (rear) is activated with driver seat control unit. Seat lifter (rear) is moved upward/downward by changing the rotation direction of lifting motor (rear). |
| | Lifting sensor (rear) | <ul style="list-style-type: none"> Lifting sensor (rear) is installed to seat side cushion frame. The pulse signal is input to driver seat control unit when lifting (rear) is operated. Driver seat control unit counts the pulse and calculates the lifting (rear) amount of the seat. |

SYSTEM


< SYSTEM DESCRIPTION >

SYSTEM

AUTOMATIC DRIVE POSITIONER SYSTEM

AUTOMATIC DRIVE POSITIONER SYSTEM : System Diagram

INFOID:0000000010259479

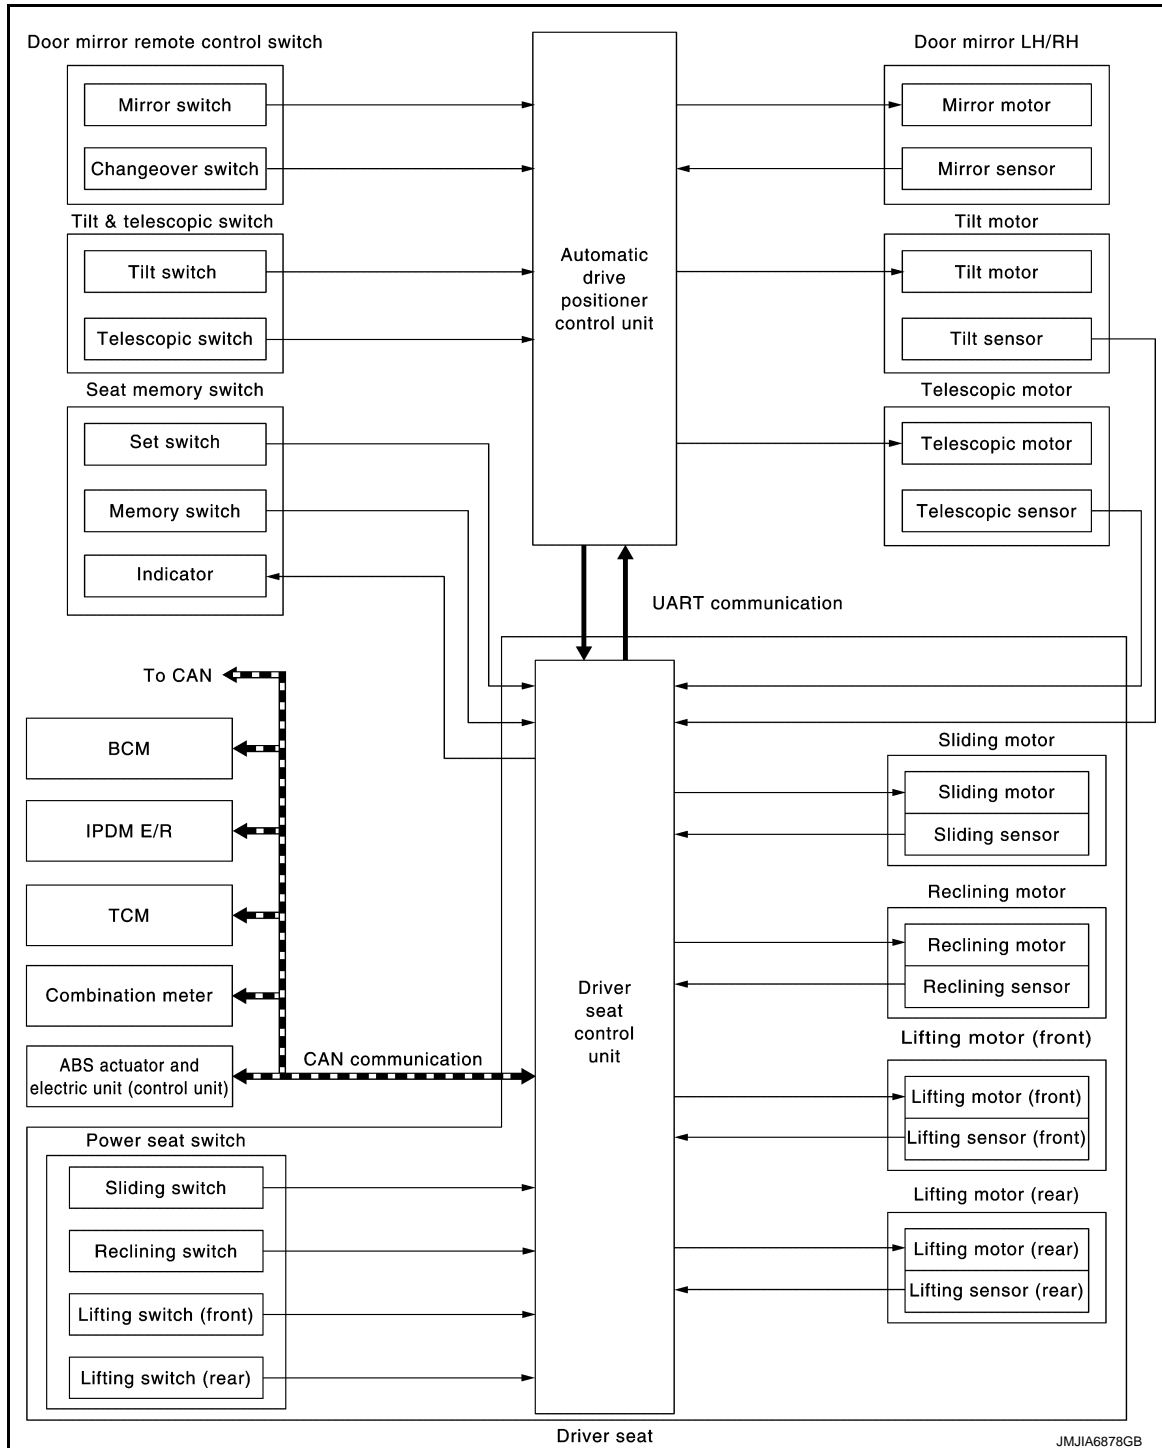

AUTOMATIC DRIVE POSITIONER SYSTEM : System Description

INFOID:0000000010259480

The system automatically moves the driver seat, steering column and door mirror position by the driver seat control unit and the automatic drive positioner control unit. The driver seat control unit corresponds with the automatic drive positioner control unit by UART communication.

SYSTEM

< SYSTEM DESCRIPTION >

| Function | | Description |
|------------------------------------|-------|--|
| Manual function | | The driving position (seat, steering column and door mirror position) can be adjusted by using the power seat switch, tilt & telescopic switch or door mirror remote control switch. |
| Memory function | | The seat, steering column and door mirror move to the stored driving position by pressing seat memory switch (1 or 2). |
| Entry/Exit assist function | Exit | On exit, the seat moves backward and the steering column moves upward. |
| | Entry | On entry, the seat and steering column returns from exiting position to the previous driving position. |
| Intelligent Key interlock function | | Perform memory operation, exiting operation and entry operation by Intelligent Key unlock operation or driver side door request switch unlock operation. |

NOTE:

The lumbar support system are controlled independently with no link to the automatic drive positioner system. Refer to [SE-16. "LUMBAR SUPPORT SYSTEM : System Description"](#).

Sleep control

Driver seat control unit equips sleep control for reducing power consumption.

The system switches to sleep control when all of the following conditions are satisfied.

- Ignition switch is OFF.
- All devices of auto driving position system are not operating.
- 45 seconds timer of driver seat control unit is not operating.
- Set switch and memory switch (1 and 2) are OFF.

Wake-up control

Sleep control releases when detecting status change in either of the following item.

- CAN communication
- Power seat switch
- Set switch and seat memory switch (1 and 2)
- Tilt & telescopic switch


MANUAL FUNCTION

SYSTEM

< SYSTEM DESCRIPTION >

MANUAL FUNCTION : System Diagram

INFOID:0000000010259481

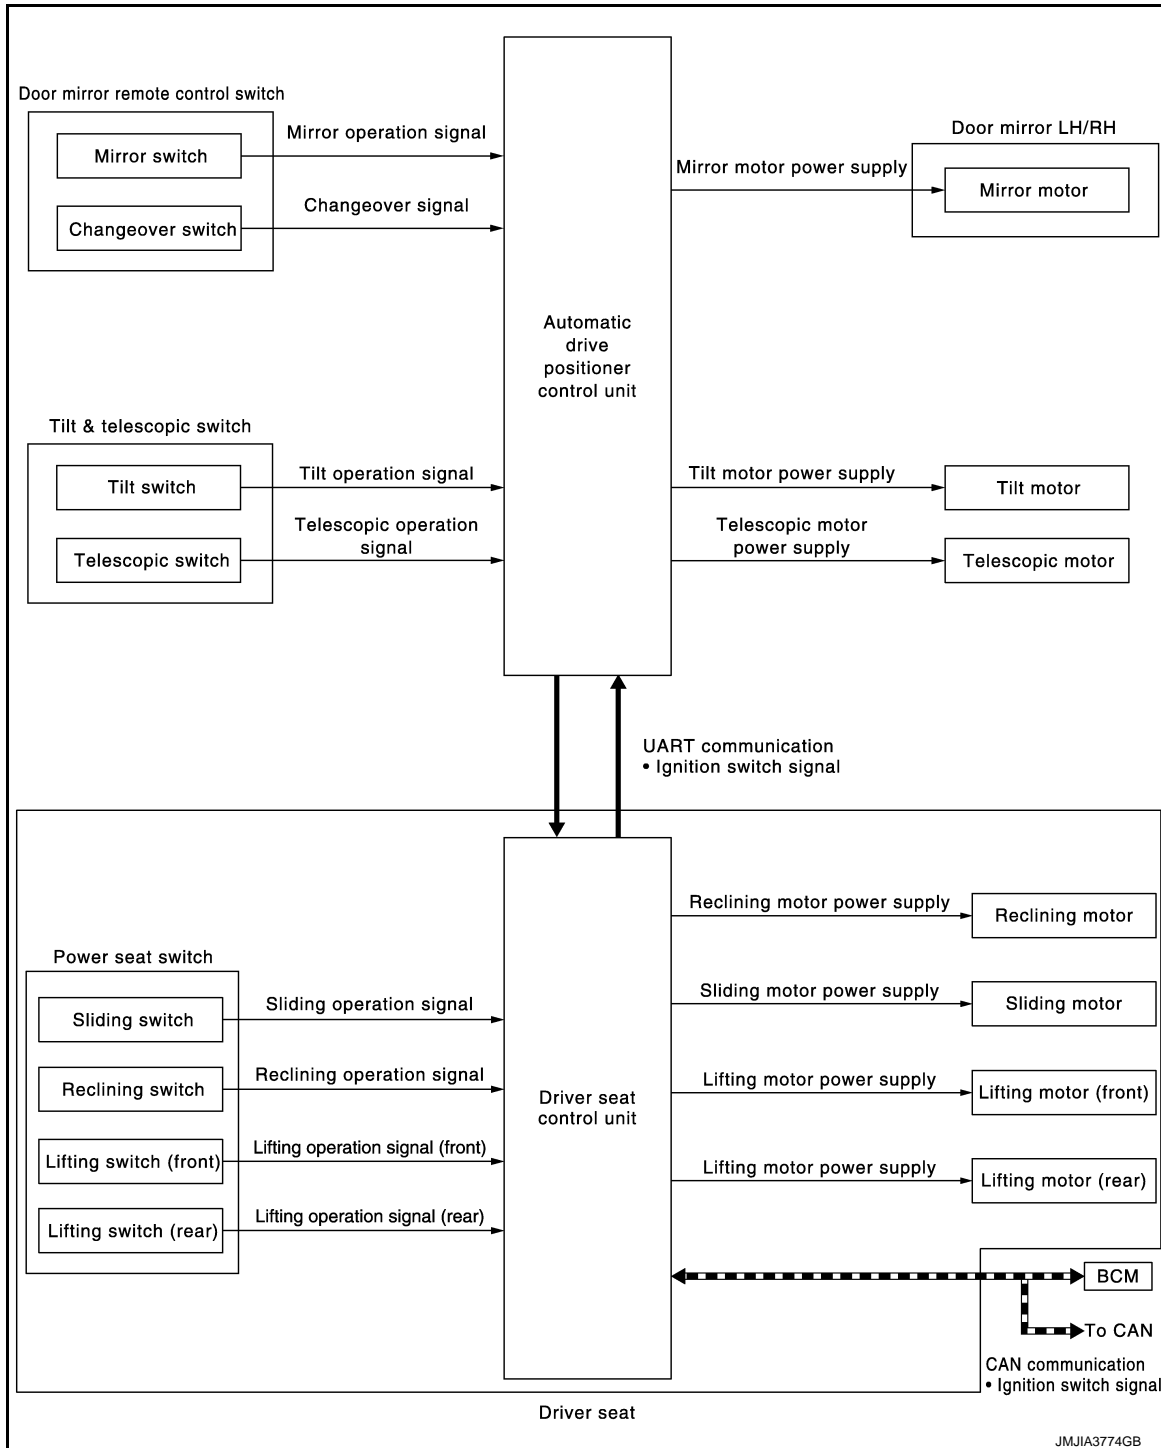

MANUAL FUNCTION : System Description

INFOID:0000000010259482

The driving position (seat, steering column and door mirror position) can be adjusted manually with power seat switch, tilt & telescopic switch and door mirror remote control switch.

OPERATION PROCEDURE

1. Turn ignition switch ON.
2. Operate power seat switch, tilt & telescopic switch or door mirror remote control switch.
3. The driver seat, steering column or door mirror operates according to the operation of each switch.

NOTE:

Seat operates only up to two places at the same time.

SYSTEM

< SYSTEM DESCRIPTION >

DETAIL FLOW

Seat

| Order | Input | Output | Control unit condition |
|-------|---|--------------------------------------|--|
| 1 | Power seat switch (sliding, lifting, reclining) | — | The power seat switch signal is inputted to the driver seat control unit when the power seat switch is operated. |
| 2 | — | Motors (sliding, lifting, reclining) | The driver seat control unit outputs signals to each motor according to the power seat switch input signal. |

NOTE:

The power seat can be operated manually regardless of the ignition switch position.

Tilt & Telescopic

| Order | Input | Output | Control unit condition |
|-------|--------------------------|---------------------------|---|
| 1 | Tilt & telescopic switch | — | The tilt & telescopic switch signal is inputted to the automatic drive positioner control unit when the tilt & telescopic switch is operated. |
| 2 | — | Motors (Tilt, telescopic) | The automatic drive positioner control unit actuates each motor according to the operation of the tilt & telescopic switch. |

Door Mirror

| Order | Input | Output | Control unit condition |
|-------|-----------------------------------|----------------------------|---|
| 1 | Door mirror remote control switch | — | The door mirror remote control switch signal is inputted to the automatic drive positioner control unit when the door mirror remote control switch is operated. |
| 2 | — | Motors (Door mirror motor) | The automatic drive positioner control unit actuates each motor according to the operation of the door mirror remote control switch. |

NOTE:

The door mirrors can be operated manually when ignition switch is in either ACC or ON position.

MEMORY FUNCTION

SYSTEM

< SYSTEM DESCRIPTION >

3. Push desired memory switch.
4. Driver seat, steering and door mirror will move to the memorized position.

OPERATION CONDITION

Satisfy all of the following items. The memory function is not performed if these items are not satisfied.

| Item | Request status |
|--|-----------------------|
| Ignition position | ON* |
| Switch inputs <ul style="list-style-type: none"> • Power seat switch • Tilt & telescopic switch • Door mirror control switch • Set switch • Memory switch | OFF (Not operated) |
| A/T shift selector | P position |
| Memory function | Registered |
| Vehicle speed | 0 Km/h (0 MPH) |
| CONSULT | Not connected |

* : When timer function does not operate.

DETAIL FLOW

| Order | Input | Output | Control unit condition |
|-------|---|---|---|
| 1 | Memory switch | — | The memory switch signal is inputted to the driver seat control unit when memory switch 1 or 2 is operated. |
| 2 | — | Motors (Seat, Steering, door mirror) | Driver seat control unit operates each motor of seat when it recognizes the memory switch pressed for 0.5 second or more and requests each motor operation to automatic drive positioner control unit via UART communication. The automatic drive positioner control unit operates each motor. |
| | | Memory switch Indicator | Driver seat control unit requests the flashing of memory indicator while either of the motors is operating. The driver seat control unit illuminates the memory indicator. |
| 3 | Sensors (Seat, steering column, door mirror) | — | Driver seat control unit judges the operating seat position with each seat sensor input. The positions of the steering column and outside mirror are monitored with each sensor signal. Driver seat control unit stops the operation of each motor when each part reaches the recorded address. |
| 4 | — | Memory switch Indicator | Driver seat control unit requests the illumination of memory indicator after all motors stop. The driver seat control unit illuminates the memory indicator for 5 seconds. |

TIMER FUNCTION

- The memory function can be performed for 45 seconds after opening the driver door even if the ignition switch position is in OFF position.
- Satisfy all of the following items. The timer function is not performed if these items are not satisfied.

| Item | Request status |
|--------------------------|----------------|
| Ignition position | OFF |
| Set switch/memory switch | OFF |
| Memory function | Registered |
| A/T shift selector | P position |
| Driver side door switch | OFF |
| CONSULT | Not connected |


EXIT ASSIST FUNCTION

SYSTEM

< SYSTEM DESCRIPTION >

EXIT ASSIST FUNCTION : System Diagram

INFOID:0000000010259485

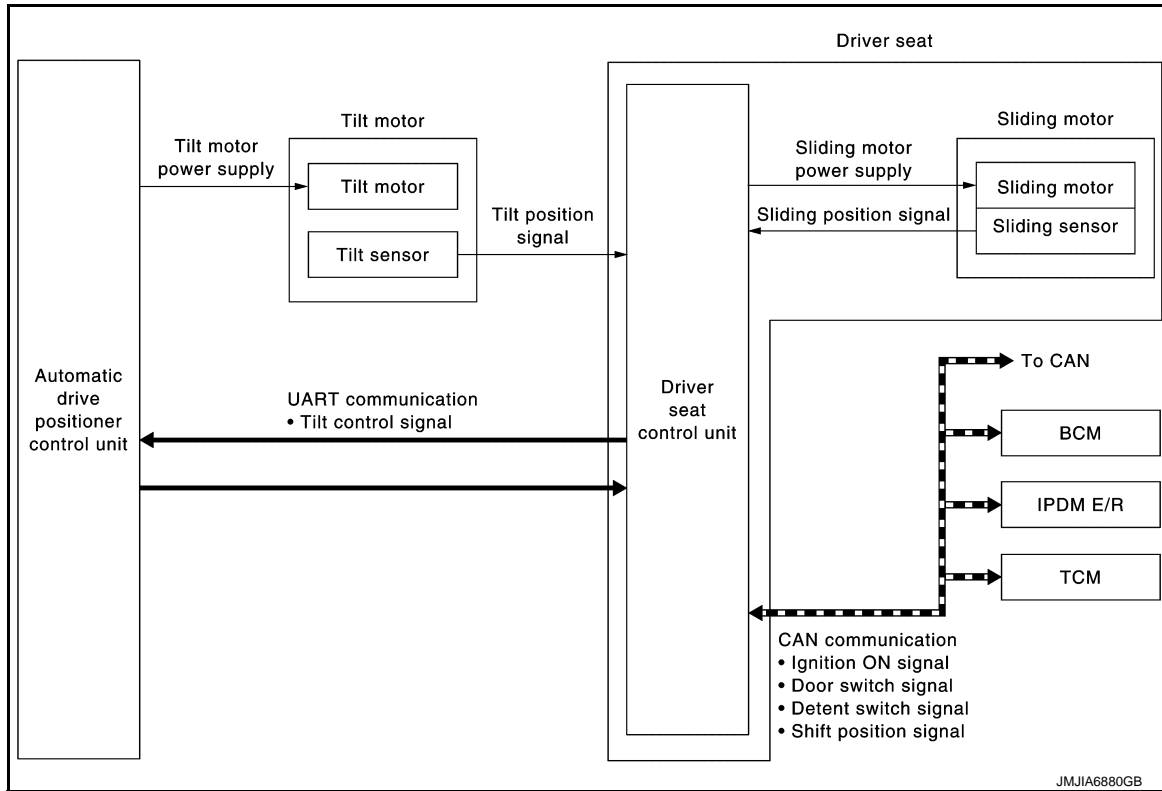

EXIT ASSIST FUNCTION : System Description

INFOID:0000000010259486

- When exiting, the condition is satisfied, the seat is moved backward 40 mm (1.57 in) from normal sitting position and the steering is moved to the most upper position.
- The seat slide amount and the steering operation at entry/exit operation can be changed.

NOTE:

- This function is set to ON before delivery (initial setting).
- Further information for the system setting procedure. Refer to [ADP-54. "SYSTEM SETTING : Description"](#).

OPERATION PROCEDURE

- Shift position P position.
- Open the driver door with ignition switch in OFF position.
- Driver seat and steering column will move to the exiting position.

OPERATION CONDITION

Satisfy all of the following items. The exit assist function is not performed if these items are not satisfied.

| Item | Request status |
|---|-----------------------|
| Ignition position | OFF |
| System setting [Entry/exit assist function (seat/steering)] | ON |
| Initialization | Done |
| Switch inputs <ul style="list-style-type: none"> Power seat switch Tilt & telescopic switch Door mirror remote control switch Set switch Memory switch | OFF (Not operated) |
| A/T shift selector | P position |
| Handle position | LHD |

SYSTEM

< SYSTEM DESCRIPTION >

| Item | Request status |
|--------------|----------------|
| Transmission | A/T |
| CONSULT | Not connected |


DETAIL FLOW

| Order | Input | Output | Control unit condition |
|-------|---------------------------|------------------------|---|
| 1 | Door switch (Driver side) | — | Driver seat control unit receives door switch signal (driver side/open) from BCM via CAN communication. |
| 2 | — | Motors (Sliding, tilt) | Driver seat control unit operates the seat sliding motor, which recognizes that the driver side door is opened with ignition switch OFF. Driver seat control unit then requests the operations of tilt motor to auto drive positioner control unit via UART communication. The automatic drive positioner control unit operates each motor for a constant amount. |
| 3 | Sensor (Sliding, tilt) | — | Each sensor monitors the operating positions of seat and steering, and then stops the operation of each motor when each part reaches the recorded address. |

ENTRY ASSIST FUNCTION

ENTRY ASSIST FUNCTION : System Diagram

INFOID:0000000010259487

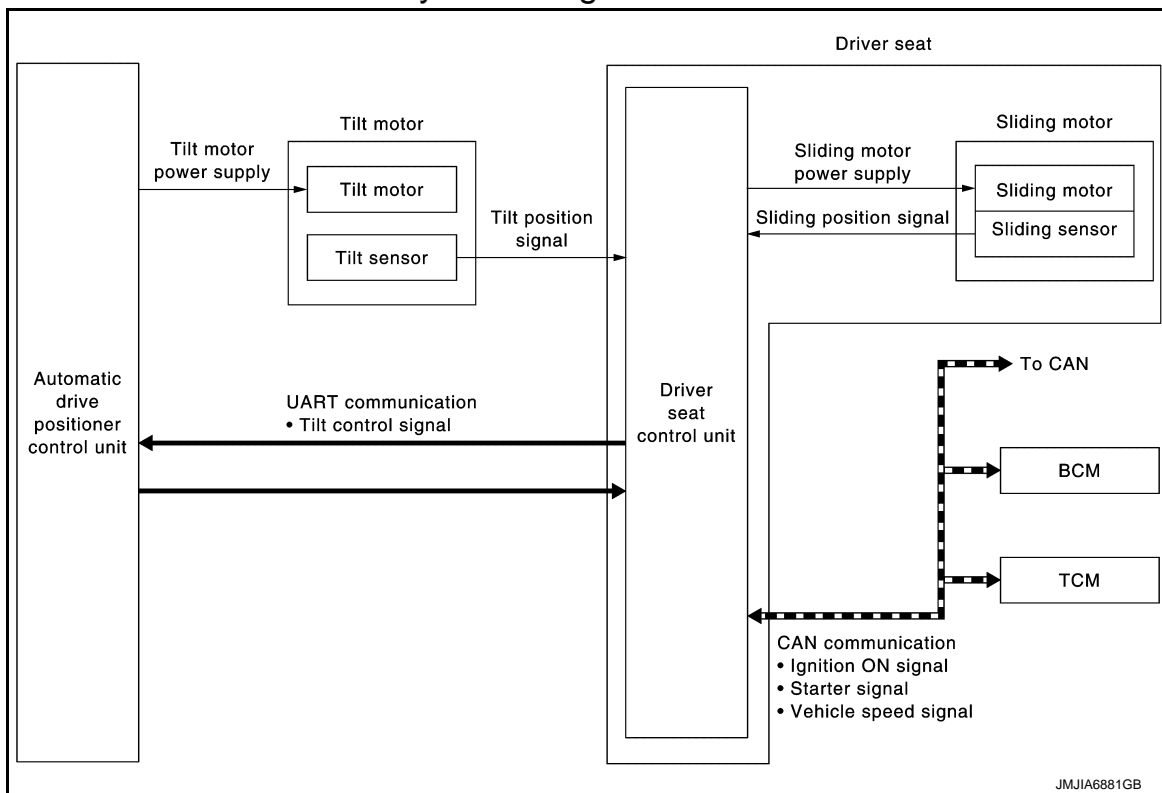

ENTRY ASSIST FUNCTION : System Description

INFOID:0000000010259488

The seat is in the exiting position when following condition is satisfied, the seat returns from exiting position to the previous driving position.

NOTE:

- This function is set to ON before delivery (initial setting).
- Further information for the system setting procedure. Refer to [ADP-54. "SYSTEM SETTING : Description"](#).

OPERATION PROCEDURE

1. Turn ignition switch ACC.

SYSTEM

< SYSTEM DESCRIPTION >

2. Driver seat and steering column will return from the exiting position to entry position.

OPERATION CONDITION

Satisfy all of the following items. The entry assist function is not performed if these items are not satisfied.

| Item | Request status |
|--|---|
| Seat, steering column | The vehicle is not moved after performing the exit assist function. |
| Switch inputs <ul style="list-style-type: none">• Power seat switch• Tilt & telescopic switch• Door mirror control switch• Set switch• Memory switch | OFF (Not operated) |
| Vehicle speed | 0 Km/h (0 MPH) |
| Starter | OFF |
| Transmission | A/T |
| CONSULT | Not connected |

DETAIL FLOW

| Order | Input | Output | Control unit condition |
|-------|----------------------------|---------------------------|--|
| 1 | Ignition switch | — | Driver seat control unit receives the signals of [ignition switch signal] from BCM via CAN communication. |
| 2 | — | Motors (Sliding, tilt) | Driver side control unit operates the sliding motor when the operating conditions are satisfied and requests the operations of tilt motor to automatic drive positioner control unit via UART communication. The automatic drive positioner operates each motor. |
| 3 | Sensors (Sliding, tilt) | — | Each sensor monitors the operating positions of seat and steering, and then stops the operation of each motor when each part reaches the recorded address. |


INTELLIGENT KEY INTERLOCK FUNCTION

SYSTEM

< SYSTEM DESCRIPTION >

INTELLIGENT KEY INTERLOCK FUNCTION : System Diagram

INFOID:000000010259489

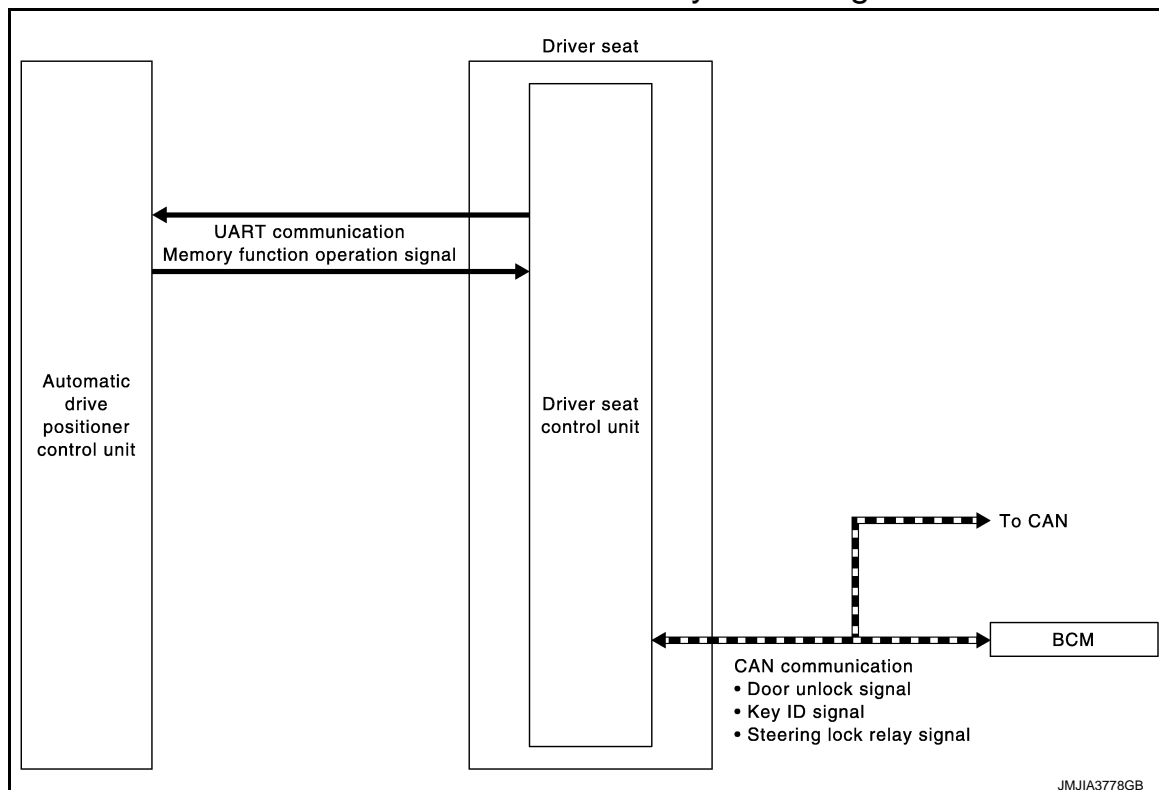

INTELLIGENT KEY INTERLOCK FUNCTION : System Description

INFOID:000000010259490

- By associating Intelligent Key and automatic drive positioner system, the unlock operation of Intelligent Key or driver side door request switch performs memory function and entry/exit assist function.
- Registration of Intelligent Key interlock function can register a different key ID to the driver seat control unit, one by one, for memory switch 1 and 2. A total of 2 key IDs can be registered.
- When ignition switch is OFF, and door unlock operation is performed using Intelligent Key or driver side door request switch, driver seat automatically adjusts to a driving position other than seat sliding. Seat sliding and steering column tilt perform return operation and are set to standby status.
- In standby status, when ignition switch is operated from OFF to ACC, return operation sets seat sliding and steering column tilt to a registered position.

NOTE:

- When another key ID is newly registered to a key switch to which a key ID is already registered, the previously registered key ID is overwritten and becomes unusable.
- When starter signal turns ON during return operation, the operation is interrupted, starter signal turns from ON to OFF, and operation restarts.

OPERATION PROCEDURE

1. Unlock driver door by Intelligent Key or driver side door request switch.
2. Operation other than memory function of seat sliding is performed. Seat sliding and steering column tilt perform exit assist operation.
3. Turn ignition switch ACC.
4. Driver seat and steering column will return from the exiting position to entry position.

NOTE:

Further information for Intelligent Key interlock function. Refer to [ADP-54, "INTELLIGENT KEY INTERLOCK STORING : Description"](#).

OPERATION CONDITION

Satisfy all of the following items. The Intelligent Key interlock function is not performed if these items are not satisfied.

SYSTEM

< SYSTEM DESCRIPTION >

| Item | Request status |
|--|-----------------------|
| Ignition position | OFF |
| Intelligent key interlock function | Registered |
| Switch inputs <ul style="list-style-type: none"> Power seat switch Tilt & telescopic switch Door mirror control switch Set switch Memory switch | OFF (Not operated) |
| A/T shift selector | P position |

DETAIL FLOW

| Order | Input | Output | Control unit condition |
|-------|---|--------|--|
| 1 | <ul style="list-style-type: none"> Door unlock signal (CAN) Key ID signal (CAN) | — | Driver seat control unit receives unlock signal and key ID signal from BCM, when driver seat control unit is unlocked by Intelligent Key or driver side door request switch. |
| 2 | — | — | Driver seat control unit performs the seat slide and steering tilt move directly to the exit assist function. Other loads move to the exit assist function after performing memory function. |
| 3 | — | — | Driver seat control unit performs the entry assist function. |

Fail Safe

INFOID:0000000010259491

The fail-safe mode may be activated if the following symptoms are observed.

| Operating in fail-safe mode | Malfunction Item | Related DTC | Diagnosis |
|---|-----------------------------|-------------|------------------------|
| Only manual functions operate normally. | CAN communication | U1000 | ADP-56 |
| | CONTROL UNIT | U1010 | ADP-57 |
| | EEPROM | B2130 | ADP-66 |
| Only manual functions, except door mirror, operate normally. | UART communication | B2128 | ADP-64 |
| Only manual functions, except seat sliding, operate normally. | Seat sliding output | B2112 | ADP-58 |
| Only manual functions, except seat reclining, operate normally. | Seat reclining output | B2113 | ADP-60 |
| Only manual functions, except steering tilt, operate normally. | Steering column tilt output | B2116 | ADP-62 |

ADP

DIAGNOSIS SYSTEM (DRIVER SEAT CONTROL UNIT)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (DRIVER SEAT CONTROL UNIT)

CONSULT Function

INFOID:000000010259492

The automatic drive positioner system can be checked and diagnosed for component operation using CONSULT.

APPLICATION ITEMS

| Diagnostic mode | Description |
|------------------------|--|
| Ecu Identification | Displays part numbers of driver seat control unit. |
| Self Diagnostic Result | Performs self-diagnosis for the auto drive positioner system and displays the results. |
| Data Monitor | Displays input signals transmitted from various switches and sensors to driver seat control unit in real time. |
| Active Test | Drives each output unit. |
| Work support | Changes the setting for each system function. |

SELF-DIAGNOSIS RESULTS

Refer to [ADP-31. "DTC Index"](#).

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

| Monitor Item | Unit | Main Signals | Selection From Menu | Contents |
|-----------------|---------------|--------------|---------------------|--|
| STARTER SW | "ON/OFF" | × | × | Ignition key switch ON (START, ON) /OFF (ACC, OFF) status judged from the ignition switch signal. |
| SET SW | "ON/OFF" | × | × | ON/OFF status judged from the setting switch signal. |
| MEMORY SW 1 | "ON/OFF" | × | × | ON/OFF status judged from the seat memory switch 1 signal. |
| MEMORY SW 2 | "ON/OFF" | × | × | ON/OFF status judged from the seat memory switch 2 signal. |
| DETENT SW | "ON/OFF" | × | × | The A/T shift selector position "OFF (P position) / ON (other than P position)" judged from the detention switch signal. |
| STEERING STATUS | "LOCK/UNLOCK" | × | × | NOTE: This item is displayed, but cannot be monitored. |
| SLIDE SW-FR | "ON/OFF" | × | × | ON/OFF status judged from the sliding switch (forward) signal. |
| SLIDE SW-RR | "ON/OFF" | × | × | ON/OFF status judged from the sliding switch (backward) signal. |
| RECLN SW-FR | "ON/OFF" | × | × | ON/OFF status judged from the reclining switch (forward) signal. |
| RECLN SW-RR | "ON/OFF" | × | × | ON/OFF status judged from the reclining switch (backward) signal. |
| LIFT FR SW-UP | "ON/OFF" | × | × | ON/OFF status judged from the lifting switch front (up) signal. |
| LIFT FR SW-DN | "ON/OFF" | × | × | ON/OFF status judged from the lifting switch front (down) signal. |
| LIFT RR SW-UP | "ON/OFF" | × | × | ON/OFF status judged from the lifting switch rear (up) signal. |
| LIFT RR SW-DN | "ON/OFF" | × | × | ON/OFF status judged from the lifting switch rear (down) signal. |
| TILT SW-UP | "ON/OFF" | × | × | ON/OFF status judged from the tilt switch (up) signal. |

DIAGNOSIS SYSTEM (DRIVER SEAT CONTROL UNIT)

< SYSTEM DESCRIPTION >

| Monitor Item | Unit | Main Signals | Selection From Menu | Contents |
|------------------|----------------|--------------|---------------------|---|
| TILT SW-DOWN | "ON/OFF" | × | × | ON/OFF status judged from the tilt switch (down) signal. |
| TELESCO SW-FR | "ON/OFF" | × | × | ON/OFF status judged from the telescoping switch (forward) signal. |
| TELESCO SW-RR | "ON/OFF" | × | × | ON/OFF status judged from the telescoping switch (backward) signal. |
| MIR CON SW-UP | "ON/OFF" | × | × | ON/OFF status judged from the mirror switch (up) signal. |
| MIR CON SW-DN | "ON/OFF" | × | × | ON/OFF status judged from the mirror switch (down) signal. |
| MIR CON SW-RH | "ON/OFF" | × | × | ON/OFF status judged from the door mirror remote control switch (passenger side) signal. |
| MIR CON SW-LH | "ON/OFF" | × | × | ON/OFF status judged from the door mirror remote control switch (driver side) signal. |
| MIR CHNG SW-R | "ON/OFF" | × | × | ON/OFF status judged from the door mirror remote control switch (switching to right) signal. |
| MIR CHNG SW-L | "ON/OFF" | × | × | ON/OFF status judged from the door mirror remote control switch (switching to left) signal. |
| VEHICLE SPEED | — | × | × | Display the vehicle speed signal received from combination meter by numerical value [km/h]. |
| P RANG SW CAN | "ON/OFF" | × | × | ON/OFF status judged from the P range switch signal. |
| R RANGE (CAN) | "ON/OFF" | × | × | ON/OFF status judged from the R range switch signal. |
| DOOR SW-FL | "ON/OFF" | × | × | ON/OFF status judged from the door switch (front driver side) signal. |
| DOOR SW-FR | "ON/OFF" | × | × | ON/OFF status judged from the door switch (front passenger side) signal. |
| IGN ON SW | "ON/OFF" | × | × | ON/OFF status judged from the ignition switch signal. |
| ACC ON SW | "ON/OFF" | × | × | ON/OFF status judged from the ACC switch signal. |
| KEY ON SW | "ON/OFF" | × | × | ON/OFF status judged from the key on switch signal. |
| KEYLESS ID | — | × | × | Key ID status judged from the key ID signal. |
| KYLS DR UNLK | "ON/OFF" | × | × | ON/OFF status judged from the driver side door unlock actuator output switch signal. |
| VHCL SPEED (ABS) | "ON/OFF" | × | × | ON/OFF status judged from vehicle speed signal. |
| HANDLE | "RHD/LHD" | × | × | RHD/LHD status judged from handle position signal. |
| TRANSMISSION | "AT or CVT/MT" | × | × | AT or CVT/MT status judged from transmission. |
| SLIDE PULSE | — | — | × | Value (32768) when battery connections are standard. If it moves backward, the value increases. If it moves forward, the value decreases. |
| RECLN PULSE | — | — | × | Value (32768) when battery connections are standard. If it moves backward, the value increases. If it moves forward, the value decreases. |
| LIFT FR PULSE | — | — | × | Value (32768) when battery connections are standard. If it moves DOWN, the value increases. If it moves UP, the value decreases. |
| LIFT RR PULSE | — | — | × | Value (32768) when battery connections are standard. If it moves DOWN, the value increases. If it moves UP, the value decreases. |
| MIR/SEN RH U-D | "V" | — | × | Voltage input from door mirror sensor (passenger side) up/down is displayed. |
| MIR/SEN RH R-L | "V" | — | × | Voltage input from door mirror sensor (passenger side) left/right is displayed. |

A

B

C

D

E

F

G

H

I

ADP

K

L

M

N

O

P

DIAGNOSIS SYSTEM (DRIVER SEAT CONTROL UNIT)

< SYSTEM DESCRIPTION >

| Monitor Item | Unit | Main Signals | Selection From Menu | Contents |
|----------------|------|--------------|---------------------|---|
| MIR/SEN LH U-D | "V" | — | × | Voltage input from door mirror sensor (driver side) up/down is displayed. |
| MIR/SEN LH R-L | "V" | — | × | Voltage input from door mirror sensor (driver side) left/right is displayed. |
| TILT PULSE | — | — | × | Value (32768) when battery connections are standard. If it moves DOWN, the value increases. If it moves UP, the value decreases. |
| TELESCO PULSE | — | — | × | Value (32768) when battery connections are standard. If it moves backward, the value increases. If it moves forward, the value decreases. |

ACTIVE TEST

CAUTION:

When driving vehicle, do not perform active test.

| Test item | Description |
|------------------|--|
| SEAT SLIDE | Activates/deactivates the sliding motor. |
| SEAT RECLINING | Activates/deactivates the reclining motor. |
| SEAT LIFTER FR | Activates/deactivates the lifting motor (front). |
| SEAT LIFTER RR | Activates/deactivates the lifting motor (rear). |
| TILT MOTOR | Activates/deactivates the tilt motor. |
| TELESCO MOTOR | Activates/deactivates the telescopic motor. |
| MIRROR MOTOR RH | Activates/deactivates the mirror motor (passenger side). |
| MIRROR MOTOR LH | Activates/deactivates the mirror motor (driver side). |
| MEMORY SW INDCTR | Turns ON/OFF the memory indicator. |

WORK SUPPORT

| Work item | Content | Item |
|-------------------------|--|--------|
| SEAT SLIDE VOLUME SET | The amount of seat sliding for entry/exit assist can be selected from 3 items. | 40 mm |
| | | 80 mm |
| | | 150 mm |
| EXIT TILT SETTING | Entry/exit assist (steering column) can be selected: ON (operated) – OFF (not operated) | ON |
| | | OFF |
| EXIT SEAT SLIDE SETTING | Entry/exit assist (seat) can be selected: ON (operated) – OFF (not operated) | ON |
| | | OFF |

DRIVER SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

ECU DIAGNOSIS INFORMATION

DRIVER SEAT CONTROL UNIT

Reference Value

INFOID:0000000010259493

VALUES ON THE DIAGNOSIS TOOL

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

CONSULT MONITOR ITEM

| Monitor Item | Condition | | Value/Status |
|---------------|-----------------------------|----------------------|--------------|
| SET SW | Set switch | Push | ON |
| | | Release | OFF |
| MEMORY SW1 | Memory switch 1 | Push | ON |
| | | Release | OFF |
| MEMORY SW2 | Memory switch 2 | Push | ON |
| | | Release | OFF |
| SLIDE SW-FR | Sliding switch (forward) | Operate | ON |
| | | Release | OFF |
| SLIDE SW-RR | Sliding switch (backward) | Operate | ON |
| | | Release | OFF |
| RECLN SW-FR | Reclining switch (forward) | Operate | ON |
| | | Release | OFF |
| RECLN SW-RR | Reclining switch (backward) | Operate | ON |
| | | Release | OFF |
| LIFT FR SW-UP | Lifting switch front (up) | Operate | ON |
| | | Release | OFF |
| LIFT FR SW-DN | Lifting switch front (down) | Operate | ON |
| | | Release | OFF |
| LIFT RR SW-UP | Lifting switch rear (up) | Operate | ON |
| | | Release | OFF |
| LIFT RR SW-DN | Lifting switch rear (down) | Operate | ON |
| | | Release | OFF |
| MIR CON SW-UP | Mirror switch | Up | ON |
| | | Other than the above | OFF |
| MIR CON SW-DN | Mirror switch | Down | ON |
| | | Other than the above | OFF |
| MIR CON SW-RH | Mirror switch | Right | ON |
| | | Other than the above | OFF |
| MIR CON SW-LH | Mirror switch | Left | ON |
| | | Other than the above | OFF |
| MIR CHNG SW-R | Changeover switch | Right | ON |
| | | Other than the above | OFF |
| MIR CHNG SW-L | Changeover switch | Left | ON |
| | | Other than the above | OFF |

DRIVER SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

| Monitor Item | Condition | | Value/Status |
|-----------------|---|----------------------|--|
| TILT SW-UP | Tilt switch | Upward | ON |
| | | Other than the above | OFF |
| TILT SW-DOWN | Tilt switch | Downward | ON |
| | | Other than the above | OFF |
| TELESCO SW-FR | Telescopic switch | Forward | ON |
| | | Other than the above | OFF |
| TELESCO SW-RR | Telescopic switch | Backward | ON |
| | | Other than the above | OFF |
| DETENT SW | A/T shift selector | P position | OFF |
| | | Other than the above | ON |
| STARTER SW | Ignition position | Cranking | ON |
| | | Other than the above | OFF |
| SLIDE PULSE | Seat sliding | Forward | The numeral value decreases * |
| | | Backward | The numeral value increases* |
| | | Other than the above | No change to numeral value* |
| RECLN PULSE | Seat reclining | Forward | The numeral value decreases* |
| | | Backward | The numeral value increases * |
| | | Other than the above | No change to numeral value* |
| LIFT FR PULSE | Seat lifter (front) | Up | The numeral value decreases * |
| | | Down | The numeral value increases * |
| | | Other than the above | No change to numeral value* |
| LIFT RR PULSE | Seat lifter (rear) | Up | The numeral value decreases * |
| | | Down | The numeral value increases * |
| | | Other than the above | No change to numeral value* |
| MIR/SEN RH U-D | Door mirror (passenger side) | | Change between 3.4 (close to peak) 0.6 (close to valley) |
| MIR/SEN RH R-L | Door mirror (passenger side) | | Change between 3.4 (close to left edge) 0.6 (close to right edge) |
| MIR/SEN LH U-D | Door mirror (driver side) | | Change between 3.4 (close to peak) 0.6 (close to valley) |
| MIR/SEN LH R-L | Door mirror (driver side) | | Change between 0.6 (close to left edge) 3.4 (close to right edge) |
| TILT PULSE | Tilt position | Upward | The numeral value decreases * |
| | | Downward | The numeral value increases * |
| | | Other than the above | No change to numeral value* |
| TELESCO PULSE | Telescopic position | Forward | The numeral value decreases * |
| | | Backward | The numeral value increases * |
| | | Other than the above | No change to numeral value* |
| STEERING STATUS | NOTE: This item is displayed, but cannot monitored. | | |
| VEHICLE SPEED | The condition of vehicle speed is displayed | | km/h |
| P RANG SW CAN | A/T shift selector | P position | ON |
| | | Other than the above | OFF |


DRIVER SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

| Monitor Item | Condition | | Value/Status |
|------------------|--|--------------------------|-----------------|
| R RANGE (CAN) | A/T shift selector | R position | ON |
| | | Other than the above | OFF |
| DOOR SW-FL | Driver door | Open | ON |
| | | Close | OFF |
| DOOR SW-FR | Passenger door | Open | ON |
| | | Close | OFF |
| IGN ON SW | Ignition switch | ON position | ON |
| | | Other than the above | OFF |
| ACC ON SW | Ignition switch | ACC or ON position | ON |
| | | Other than the above | OFF |
| KEY ON SW | Intelligent Key | Inserted is key slot | ON |
| | | Inserted is not key slot | OFF |
| KEYLESS ID | UNLOCK button of Intelligent Key is pressed | | 1, 2, 3, 4 or 5 |
| KYLS DR UNLK | Intelligent Key or driver side door request switch | ON | ON |
| | | OFF | OFF |
| VHCL SPEED (ABS) | Can signal from ABS | Received | ON |
| | | Not received | OFF |
| HANDLE | The BCM for handle position is displayed | | LHD |
| | | | RHD |
| TRANSMISSION | Transmission type is displayed | | AT or CVT |
| | | | MT |

*: The value at the position attained when the battery is connected is regarded as 32768.

TERMINAL LAYOUT



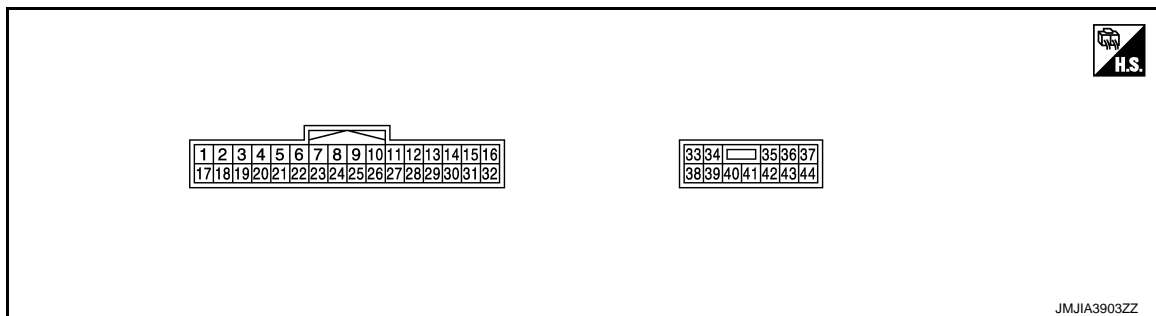


PHYSICAL VALUES

| Terminal No. (Wire color) | | Description | | Condition | Voltage (V) (Approx.) |
|------------------------------|--------|-------------------------------|------------------|--------------------|--------------------------|
| + | - | Signal name | Input/ output | | |
| 1 (R/Y) | — | CAN-H | — | — | — |
| 2 (R) | Ground | UART communication (TX/RX) | Input | Ignition switch ON | |




DRIVER SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >
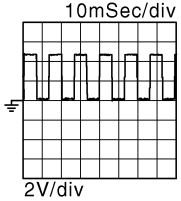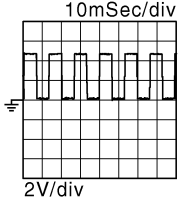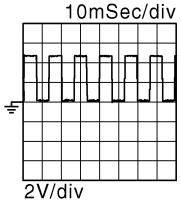
| | | | | | | |
|-------------|--------|------------------------------------|--------|------------------------|----------------------|---|
| 4 (R/L) | Ground | Reclining sensor signal | Input | Seat reclining | Operate |  <small>10mSec/div</small> <small>2V/div</small> |
| | | | | | Other than the above | 0 or 5 |
| 5 (R/B) | Ground | Telescopic sensor signal | Input | Steering telescopic | Operate |  <small>10mSec/div</small> <small>2V/div</small> |
| | | | | | Other than the above | 0 or 5 |
| 6 (R/W) | Ground | Memory switch 2 signal | Input | Memory switch 2 | Press | 0 |
| | | | | | Other than the above | 5 |
| 7 (R/G) | Ground | Memory indicator 2 signal | Output | Memory indicator 2 | Illuminate | 1 |
| | | | | | Other than the above | 12 |
| 8 (SB) | Ground | Sliding switch backward signal | Input | Sliding switch | Operate (backward) | 0 |
| | | | | | Other than the above | 12 |
| 9 (L) | Ground | Reclining switch backward signal | Input | Reclining switch | Operate (backward) | 0 |
| | | | | | Other than the above | 12 |
| 10 (L/B) | Ground | Lifting switch (front) down signal | Input | Lifting switch (front) | Operate (down) | 0 |
| | | | | | Other than the above | 12 |
| 11 (L/W) | Ground | Lifting switch (rear) down signal | Input | Lifting switch (rear) | Operate (down) | 0 |
| | | | | | Other than the above | 12 |
| 12 (L/R) | Ground | Sensor power supply | Output | — | — | 12 |
| 17 (V) | — | CAN-L | — | — | — | — |
| 18 (B/W) | Ground | Sliding sensor signal | Input | Seat sliding | Operate |  <small>10mSec/div</small> <small>2V/div</small> |
| | | | | | Other than the above | 0 or 5 |

DRIVER SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >
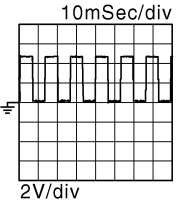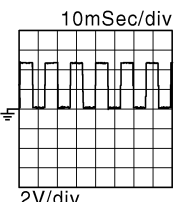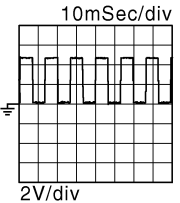
| | | | | | | |
|-------------|--------|----------------------------------|--------|------------------------|----------------------|--|
| 19 (B/R) | Ground | Lifting sensor (front) signal | Input | Seat lifting (front) | Operate |  2V/div JMJA0119ZZ |
| | | | | | Other than the above | 0 or 5 |
| 20 (B/L) | Ground | Lifting sensor (rear) signal | Input | Seat lifting (rear) | Operate |  2V/div JMJA0119ZZ |
| | | | | | Other than the above | 0 or 5 |
| 21 (W/B) | Ground | Tilt sensor signal | Input | Steering tilt | Operate |  2V/div JMJA0119ZZ |
| | | | | | Other than the above | 0 or 5 |
| 22 (W/L) | Ground | Memory switch 1 signal | Input | Memory switch 1 | Press | 0 |
| | | | | | Other than the above | 5 |
| 23 (W/R) | Ground | Memory indicator 1 signal | Output | Memory indicator 1 | Illuminate | 1 |
| | | | | | Other than the above | 12 |
| 24 (V/W) | Ground | Sliding switch forward signal | Input | Sliding switch | Operate (forward) | 0 |
| | | | | | Other than the above | 12 |
| 25 (Y/B) | Ground | Reclining switch forward signal | Input | Reclining switch | Operate (forward) | 0 |
| | | | | | Other than the above | 12 |
| 26 (Y/R) | Ground | Lifting switch (front) up signal | Input | Lifting switch (front) | Operate (up) | 0 |
| | | | | | Other than the above | 12 |
| 27 (Y/L) | Ground | Lifting switch (rear) up signal | Input | Lifting switch (rear) | Operate (up) | 0 |
| | | | | | Other than the above | 12 |
| 28 (G) | Ground | Set switch signal | Input | Set switch | Press | 0 |
| | | | | | Other than the above | 5 |

A

B

C

D

E

F

G

H

I

ADP

K

L

M

N

O

P

DRIVER SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

| | | | | | | |
|-------------|--------|--|--------|----------------------|----------------------|-----------------|
| 33 (R) | Ground | Battery power supply | Input | — | | Battery voltage |
| 34 (B) | Ground | Sliding motor backward output signal | Output | Seat sliding | Operate (backward) | 12 |
| | | | | | Other than the above | 0 |
| 35 (G) | Ground | Reclining motor forward output signal | Output | Seat reclining | Operate (forward) | 12 |
| | | | | | Other than the above | 0 |
| 36 (L) | Ground | Lifting motor (front) down output signal | Output | Seat lifting (front) | Operate (down) | 12 |
| | | | | | Other than the above | 0 |
| 38 (GR) | Ground | Sliding motor forward output signal | Output | Seat sliding | Operate (forward) | 12 |
| | | | | | Other than the above | 0 |
| 39 (Y) | Ground | Reclining motor backward output signal | Output | Seat reclining | Operate (backward) | 12 |
| | | | | | Other than the above | 0 |
| 40 (W) | Ground | Lifting motor (front) up output signal | Output | Seat lifting (front) | Operate (up) | 12 |
| | | | | | Other than the above | 0 |
| 41 (V) | Ground | Lifting motor (rear) up output signal | Output | Seat lifting (rear) | Operate (up) | 12 |
| | | | | | Other than the above | 0 |
| 42 (P/B) | Ground | Lifting motor (rear) down output signal | Output | Seat lifting (rear) | Operate (down) | 12 |
| | | | | | Other than the above | 0 |
| 43 (LG) | Ground | Ground | — | — | | 0 |

Fail Safe

INFOID:000000010259494

The fail-safe mode may be activated if the following symptoms are observed.

| Operating in fail-safe mode | Malfunction Item | Related DTC | Diagnosis |
|---|-----------------------------|-------------|------------------------|
| Only manual functions operate normally. | CAN communication | U1000 | ADP-56 |
| | CONTROL UNIT | U1010 | ADP-57 |
| | EEPROM | B2130 | ADP-66 |
| Only manual functions, except door mirror, operate normally. | UART communication | B2128 | ADP-64 |
| Only manual functions, except seat sliding, operate normally. | Seat sliding output | B2112 | ADP-58 |
| Only manual functions, except seat reclining, operate normally. | Seat reclining output | B2113 | ADP-60 |
| Only manual functions, except steering tilt, operate normally. | Steering column tilt output | B2116 | ADP-62 |

DRIVER SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

DTC Index

INFOID:0000000010259495

| CONSULT display | Timing*1 | | Item | Reference page |
|-----------------------------|--------------------------|---------------------------|-----------------------------|------------------------|
| | Current mal- function | Previous mal- function | | |
| CAN COMM CIRCUIT [U1000] | 0 | 1-39 | CAN communication | ADP-56 |
| CONTROL UNIT [U1010] | 0 | 1-39 | Control unit | ADP-57 |
| SEAT SLIDE [B2112] | 0 | 1-39 | Seat slide motor output | ADP-58 |
| SEAT RECLINING [B2113] | 0 | 1-39 | Seat reclining motor output | ADP-60 |
| STEERING TILT [B2116] | 0 | 1-39 | Tilt motor output | ADP-62 |
| UART COMM [B2128] | 0 | 1-39 | UART communication | ADP-64 |
| EEPROM [B2130] | 0 | 1-39 | EEPROM | ADP-66 |

*1.

- 0: Current malfunction is present
- 1-39: Displayed if any previous malfunction is present when current condition is normal. The numeral value increases by one at each IGN ON to OFF cycle from 1 to 39. The counter remains at 39 even if the number of cycles exceeds it. However, the counter is reset to 1 if any malfunction is detected again, the normal operation is resumed and the ignition switch is turned from OFF to ON.

ADP

AUTOMATIC DRIVE POSITIONER CONTROL UNIT


< ECU DIAGNOSIS INFORMATION >

AUTOMATIC DRIVE POSITIONER CONTROL UNIT

Reference Value

INFOID:000000010259496

TERMINAL LAYOUT

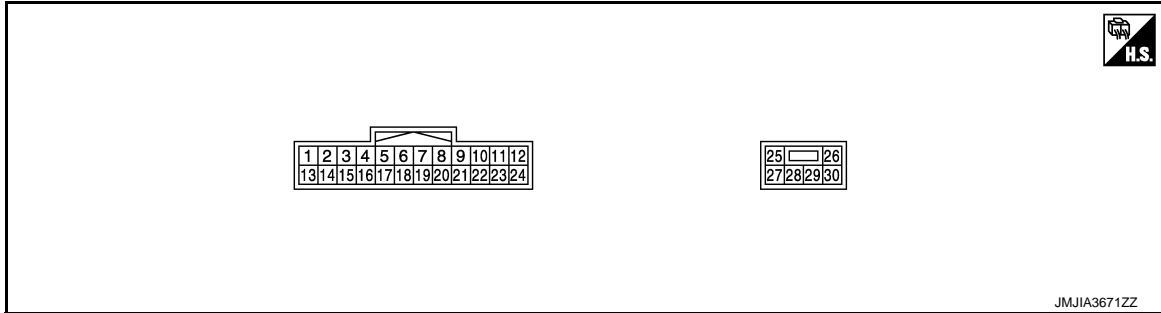

PHYSICAL VALUES

| Terminal No. (wire color) | | Description | | Condition | | Voltage (V) (Approx.) |
|------------------------------|--------|--|------------------|-------------------------------|-------------------------|---|
| + | - | Signal name | Input/ Output | | | |
| 1 (Y) | Ground | Tilt switch up signal | Input | Tilt switch | Operate (up) | 0 |
| | | | | | Other than the above | 5 |
| 2 (GR/B) | Ground | Changeover switch RH signal | Input | Changeover switch position | RH | 0 |
| | | | | | Neutral or LH | 5 |
| 3 (Y/G) | Ground | Mirror switch up signal | Input | Mirror switch | Operated (up) | 0 |
| | | | | | Other than the above | 5 |
| 4 (GR/R) | Ground | Mirror switch left signal | Input | Mirror switch | Operated (left) | 0 |
| | | | | | Other than the above | 5 |
| 5 (R/B) | Ground | Door mirror sensor (pas- senger side) up/down signal | Input | Door mirror RH position | | Change between 3.4 (close to peak) 0.6 (close to valley) |
| 6 (L/Y) | Ground | Door mirror sensor (driv- er side) up/down signal | Input | Door mirror LH position | | Change between 3.4 (close to peak) 0.6 (close to valley) |
| 7 (P) | Ground | Telescopic switch for- ward signal | Input | Telescopic switch | Operate (forward) | 0 |
| | | | | | Other than the above | 5 |
| 8 (LG/R) | Ground | UART communication (TX/RX) | Output | Ignition switch ON | | |

AUTOMATIC DRIVE POSITIONER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

| Terminal No. (wire color) | | Description | | Condition | | Voltage (V) (Approx.) |
|------------------------------|--------|---|------------------|----------------------------|----------------------|---|
| + | - | Signal name | Input/ Output | | | |
| 10 (L/O) | Ground | Door mirror motor (passenger side) up output signal | Output | Door mirror RH | Operate (up) | 12 |
| | | | | | Other than the above | 0 |
| 11 (Y/B) | Ground | Door mirror motor (passenger side) left output signal | Output | Door mirror RH | Operate (left) | 12 |
| | | | | | Other than the above | 0 |
| 12 (SB) | Ground | Door mirror motor (driver side) down/right output signal | Output | Door mirror (LH) | Operate (down/right) | 12 |
| | | | | | Other than the above | 0 |
| 13 (LG) | Ground | Tilt switch down signal | Input | Tilt switch | Operate (down) | 0 |
| | | | | | Other than the above | 5 |
| 14 (BR) | Ground | Changeover switch LH signal | Input | Changeover switch position | LH | 0 |
| | | | | | Neutral or RH | 5 |
| 15 (O/L) | Ground | Mirror switch down signal | Input | Mirror switch | Operate (down) | 0 |
| | | | | | Other than the above | 5 |
| 16 (V/W) | Ground | Mirror switch right signal | Input | Mirror switch | Operate (right) | 0 |
| | | | | | Other than the above | 5 |
| 17 (L/R) | Ground | Door mirror sensor (passenger side) left/right signal | Input | Door mirror RH position | | Change between 3.4 (close to left edge) 0.6 (close to right edge) |
| 18 (G/W) | Ground | Door mirror sensor (driver side) left/right signal | Input | Door mirror LH position | | Change between 0.6 (close to left edge) 3.4 (close to right edge) |
| 19 (G) | Ground | Telescopic switch backward signal | Input | Telescopic switch | Operate (backward) | 0 |
| | | | | | Other than the above | 5 |
| 20 (Y) | Ground | Sensor ground | — | — | | 0 |
| 21 (W/L) | Ground | Door mirror motor sensor power supply | Input | — | | 5 |
| 22 (V) | Ground | Door mirror motor (passenger side) down/right output signal | Output | Door mirror (RH) | Operate (down/right) | 12 |
| | | | | | Other than the above | 0 |
| 23 (L/W) | Ground | Door mirror motor (driver side) up output signal | Output | Door mirror (LH) | Operate (up) | 12 |
| | | | | | Other than the above | 0 |

A

B

C

D

E

F

G

H

I

ADP

K

L

M

N

O

P

AUTOMATIC DRIVE POSITIONER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

| Terminal No. (wire color) | | Description | | Condition | | Voltage (V) (Approx.) | |
|------------------------------|--------|--|------------------|--------------------------|----------------------|--------------------------|--|
| + | - | Signal name | Input/ Output | | | | |
| 24 (BR/Y) | Ground | Door mirror motor (driver side) left output signal | Output | Door mirror (LH) | Operate (left) | 12 | |
| | | | | | Other than the above | 0 | |
| 25 (W/R) | Ground | Battery power supply | Input | — | | Battery voltage | |
| 26 (L) | Ground | Telescopic motor back-ward output signal | Output | Steering tele- scopic | Operate (backward) | 12 | |
| | | | | | Other than the above | 0 | |
| 27 (P) | Ground | Tilt & telescopic sensor power supply | Output | — | | 12 | |
| 28 (G) | Ground | Tilt motor down output signal | Output | Steering tilt | Operate (down) | 12 | |
| | | | | | Other than the above | 0 | |
| 29 (W/B) | Ground | Tilt motor up output sig- nal | Output | Steering tilt | Operate (up) | 12 | |
| | | | | | Other than the above | 0 | |
| | | Telescopic motor for- ward output signal | | Steering tele- scopic | Operate (forward) | 12 | |
| | | | | | Other than the above | 0 | |
| 30 (B) | Ground | Ground | — | — | | 0 | |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)

List of ECU Reference

INFOID:0000000010259497

| ECU | Reference |
|-----|---|
| BCM | BCS-35. "Reference Value" |
| | BCS-56. "Fail-safe" |
| | BCS-57. "DTC Inspection Priority Chart" |
| | BCS-58. "DTC Index" |

A
B
C
D
E
F
G
H
I
ADP
K
L
M
N
O
P


< WIRING DIAGRAM >

WIRING DIAGRAM

AUTOMATIC DRIVE POSITIONER SYSTEM

Wiring Diagram

INFOID:0000000010259498

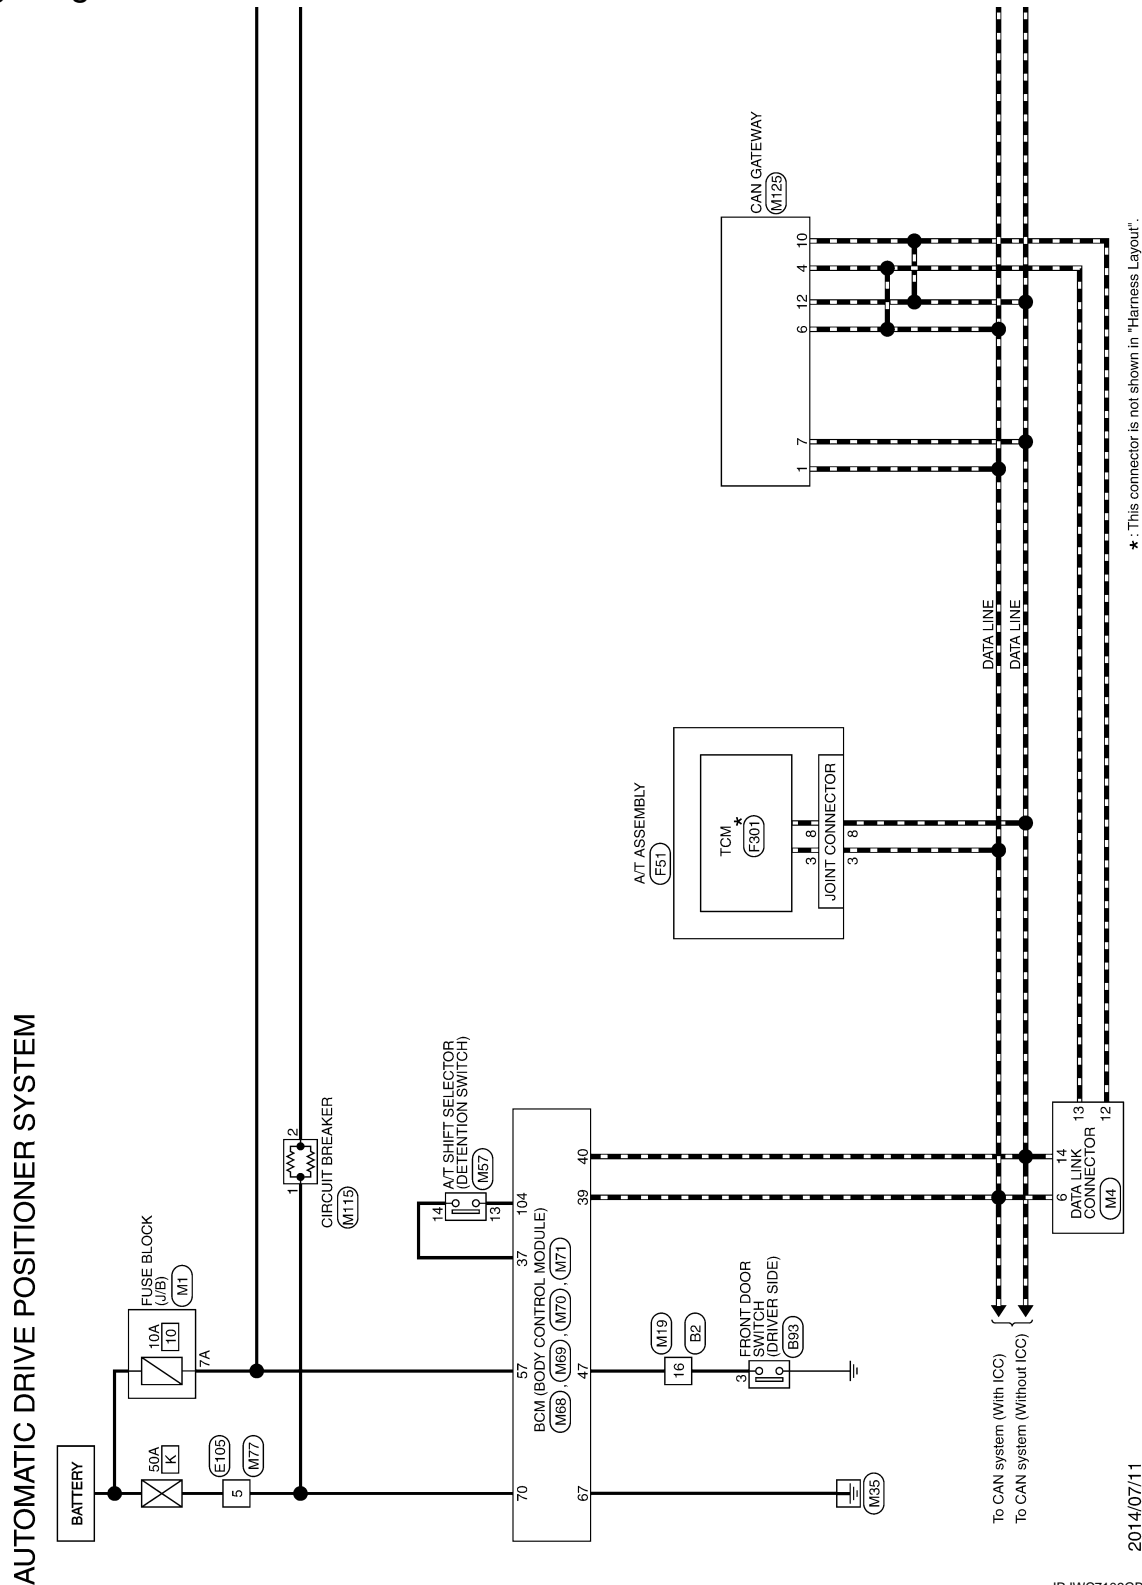


2014/07/11

JRJWC7109GB

AUTOMATIC DRIVE POSITIONER SYSTEM


< WIRING DIAGRAM >

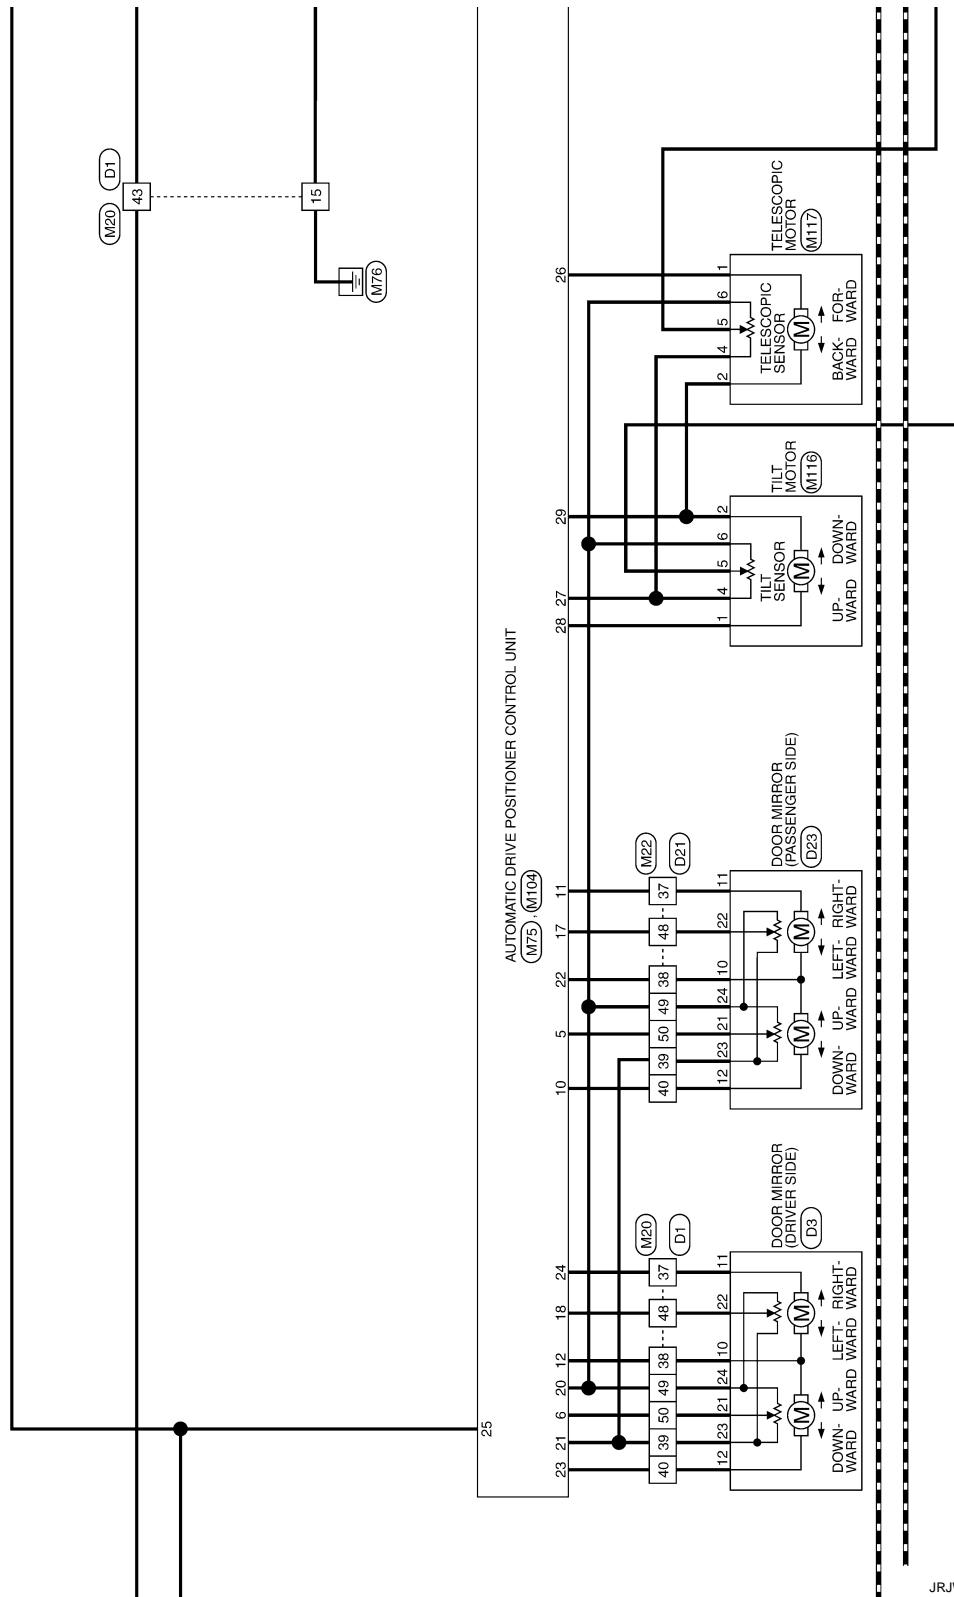

JRJWC7110GB


A
B
C
D
E
F
G
H
I
ADP
K
L
M
N
O
P

< WIRING DIAGRAM >

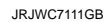

AUTOMATIC DRIVE POSITIONER SYSTEM

< WIRING DIAGRAM >

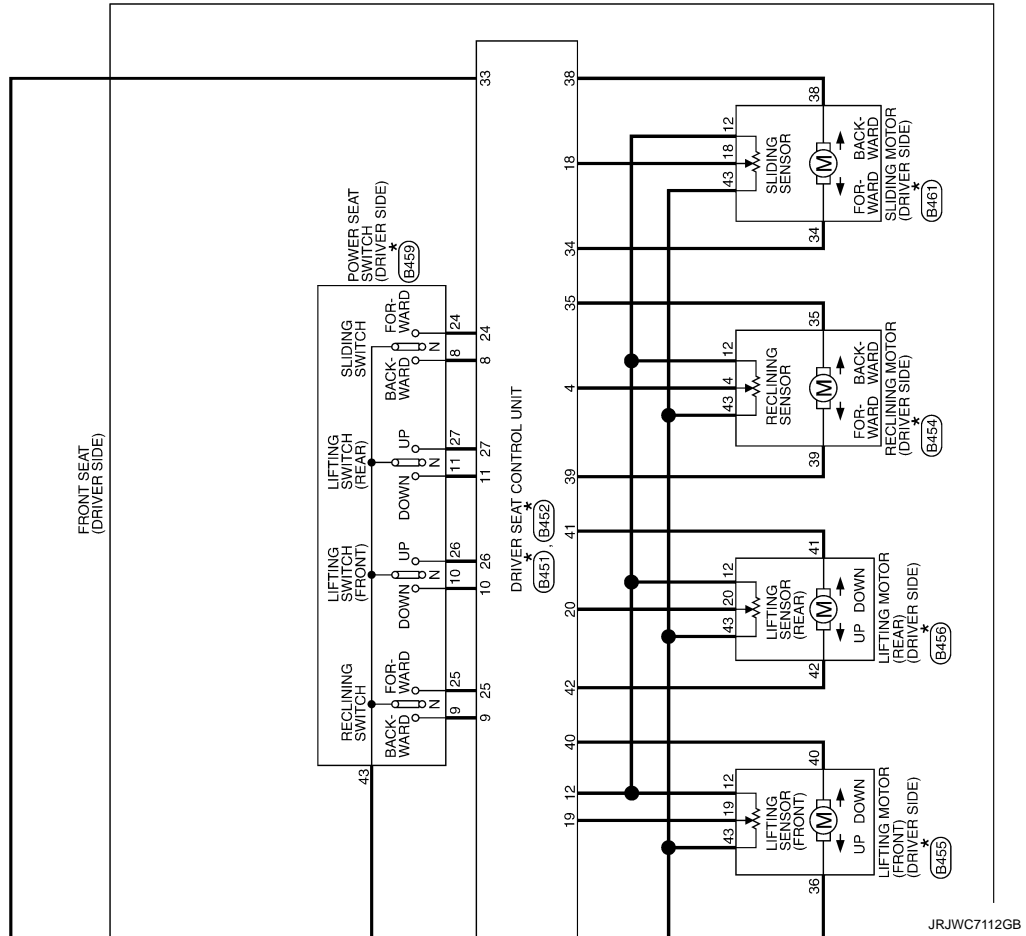


A
B
C
D
E
F
G
H
I
ADP
K
L
M
N
O
P

AUTOMATIC DRIVE POSITIONER SYSTEM

< WIRING DIAGRAM >


AUTOMATIC DRIVE POSITIONER SYSTEM

| | |
|----------------|-----------------|
| Connector No. | B2 |
| Connector Name | WIRE TO WIRE |
| Connector Type | TH80MW-CS16-TM4 |

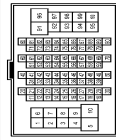

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 2 | L | - |
| 3 | BR | - |
| 5 | R/W | - |
| 6 | L | - |
| 7 | V | - |
| 9 | G | - |
| 11 | W/B | - |
| 12 | BR | - |
| 13 | G/R | - |
| 14 | B/Y | - |
| 15 | W/R | - |
| 16 | GR/R | - |
| 18 | G/W | - |
| 19 | V | - |
| 20 | W/G | - |
| 21 | B/W | - |
| 22 | V | - |
| 24 | G | - |
| 25 | O | - |
| 26 | Y | - |
| 27 | L/O | - |
| 28 | Y/R | - |
| 29 | L | - |
| 30 | R | - |
| 31 | G/Y | - |
| 32 | B/SB | - |
| 33 | LG/R | - |
| 34 | BR/W | - |
| 35 | GR/R | - |
| 36 | SB | - |
| 37 | LG | - |
| 38 | L | - |
| 39 | P | - |
| 40 | W/G | - |
| 41 | O | - |

| | |
|----------------|--------------|
| Connector No. | B24 |
| Connector Name | WIRE TO WIRE |
| Connector Type | NS16FW-CS |

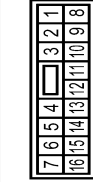


| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | W/R | - |
| 2 | Y/G | - |
| 3 | P/L | - |
| 4 | GR/R | - |
| 5 | LG/B | - |
| 7 | B | - |
| 8 | G/O | - |
| 9 | L | - |
| 10 | R/B | - |
| 11 | LG/R | - |
| 12 | P | - |
| 13 | L | - |
| 14 | V/W | - |
| 15 | BR | - |

| | |
|----------------|---------------------------------|
| Connector No. | B93 |
| Connector Name | FRONT DOOR SWITCH (DRIVER SIDE) |
| Connector Type | TH04FW-NH |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 3 | GR/R | DOOR SW DR |

| | |
|----------------|--------------------------|
| Connector No. | B451 |
| Connector Name | DRIVER SEAT CONTROL UNIT |
| Connector Type | TH32FW-NH |

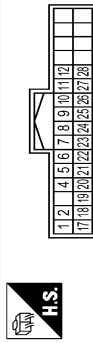

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | R/Y | CAN-H |
| 2 | R | UART (TX/RX) |
| 4 | R/L | PULSE RECLINER |
| 5 | R/B | TELESCOPIC SENSOR |
| 6 | R/W | ADDRESS 2 |
| 7 | R/G | IND-2 |
| 8 | SB | SLIDE SW (BACKWARD) |
| 9 | L | RECLINER SW (BACKWARD) |
| 10 | L/B | FRONT LIFTER SW (DOWNWARD) |
| 11 | L/W | REAR LIFTER SW (DOWNWARD) |
| 12 | L/R | SENSOR POWER SUPPLY |
| 17 | V | CAN-L |
| 18 | B/W | PULSE (SLIDE) |
| 19 | B/R | PULSE (FRONT LIFTER) |
| 20 | B/L | PULSE (REAR LIFTER) |
| 21 | W/B | TLT SENSOR |
| 22 | W/L | ADDRESS 1 |
| 23 | W/R | IND-1 |
| 24 | V/W | SLIDE SW (FORWARD) |
| 25 | Y/B | RECLINER SW (FORWARD) |
| 26 | Y/R | FRONT LIFTER SW (UPWARD) |
| 27 | Y/L | REAR LIFTER SW (UPWARD) |
| 28 | G | SET SW |

JRJWC7113GB

AUTOMATIC DRIVE POSITIONER SYSTEM

< WIRING DIAGRAM >

AUTOMATIC DRIVE POSITIONER SYSTEM

| | |
|----------------|--------------------------|
| Connector No. | B452 |
| Connector Name | DRIVER SEAT CONTROL UNIT |
| Connector Type | NS12FW-CS |



| | | | |
|----|----|----|----|
| 33 | 34 | 35 | 36 |
| 38 | 39 | 40 | 41 |
| 42 | 43 | | |

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-------------------------------|
| 33 | R | BAT |
| 34 | B | SLIDE MOTOR (BACKWARD) |
| 35 | G | RECLINER MOTOR (FORWARD) |
| 36 | L | FRONT LIFTER MOTOR (DOWNWARD) |
| 38 | GR | SLIDE MOTOR (FORWARD) |
| 39 | Y | RECLINER MOTOR (BACKWARD) |
| 40 | W | FRONT LIFTER MOTOR (UPWARD) |
| 41 | V | REAR LIFTER MOTOR (UPWARD) |
| 42 | P/B | REAR LIFTER MOTOR (DOWNWARD) |
| 43 | LG | GND |

| | |
|----------------|-------------------------------|
| Connector No. | B454 |
| Connector Name | RECLINING MOTOR (DRIVER SIDE) |
| Connector Type | 1438992-1 |



| | | | | |
|----|----|----|---|----|
| 35 | 12 | 43 | 4 | 39 |
|----|----|----|---|----|

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 4 | R/L | - |
| 12 | L/R | - |
| 35 | G | - |
| 39 | Y | - |
| 43 | LG | - |

| | |
|----------------|-------------------------------------|
| Connector No. | B455 |
| Connector Name | LIFTING MOTOR (FRONT) (DRIVER SIDE) |
| Connector Type | 6098-0344 |



| | | | | |
|----|----|----|----|----|
| 36 | 40 | 12 | 43 | 19 |
|----|----|----|----|----|

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 12 | L/R | - |
| 19 | B/R | - |
| 36 | L | - |
| 40 | W | - |
| 43 | LG | - |

| | |
|----------------|------------------------------------|
| Connector No. | B456 |
| Connector Name | LIFTING MOTOR (REAR) (DRIVER SIDE) |
| Connector Type | 7283-1060 |



| | | | |
|----|----|----|----|
| 42 | 12 | 43 | 41 |
|----|----|----|----|

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 12 | L/R | - |
| 20 | B/L | - |
| 41 | V | - |
| 42 | P/B | - |
| 43 | LG | - |

| | |
|----------------|---------------------------------|
| Connector No. | B459 |
| Connector Name | POWER SEAT SWITCH (DRIVER SIDE) |
| Connector Type | NS10FW-CS |



| | | |
|----|----|----|
| 26 | 10 | 43 |
| 25 | 11 | 24 |
| 8 | 27 | 9 |

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 8 | SB | - |
| 9 | L | - |
| 10 | L/B | - |
| 11 | L/W | - |
| 24 | V/W | - |
| 25 | Y/B | - |
| 26 | Y/R | - |
| 27 | Y/L | - |
| 43 | LG | - |

| | |
|----------------|--------------|
| Connector No. | B460 |
| Connector Name | WIRE TO WIRE |
| Connector Type | NS16MW-CS |



| | | | | | | |
|----|----|----|----|----|----|----|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 |
| 8 | 9 | 10 | 11 | 12 | 13 | 14 |
| 15 | 16 | | | | | |

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | R | - |
| 2 | R/G | - |
| 3 | R/W | - |
| 4 | R/B | - |
| 5 | W/L | - |
| 7 | LG | - |
| 8 | W/B | - |
| 9 | - | - |
| 10 | R/B | - |
| 11 | R | - |
| 12 | V | - |

| | | |
|----|-----|---|
| 13 | R/Y | - |
| 14 | G | - |
| 15 | - | - |

| | |
|----------------|-----------------------------|
| Connector No. | B461 |
| Connector Name | SLIDING MOTOR (DRIVER SIDE) |
| Connector Type | 6098-0344 |



| | | | | |
|----|----|----|----|----|
| 34 | 12 | 43 | 18 | 38 |
|----|----|----|----|----|

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 12 | L/R | - |
| 18 | B/W | - |
| 34 | B | - |
| 38 | GR | - |
| 43 | LG | - |

| | |
|----------------|--------------|
| Connector No. | D1 |
| Connector Name | WIRE TO WIRE |
| Connector Type | TH40FW-CS13 |



| | | | | | | | | | | | | | |
|----|----|----|----|----|----|----|---|---|---|---|---|---|---|
| 13 | 4 | 5 | 14 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 |
| 16 | 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 |

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | V | - |
| 2 | W | - |
| 3 | V | - |
| 4 | Y | - |
| 5 | LG/R | - |
| 6 | BR/W | - |
| 8 | V | - |
| 9 | G | - |
| 10 | L | - |
| 12 | B/Y | - |

JRJWC7114GB

A
B
C
D
E
F
G
H
I
ADP
K
L
M
N
O
P

AUTOMATIC DRIVE POSITIONER SYSTEM

< WIRING DIAGRAM >

AUTOMATIC DRIVE POSITIONER SYSTEM

| | | |
|----|--------|---|
| 13 | Y | - |
| 14 | R | - |
| 15 | B | - |
| 16 | GR/R | - |
| 17 | R/W | - |
| 18 | B | - |
| 19 | R | - |
| 20 | P | - |
| 21 | SHIELD | - |
| 22 | V | - |
| 23 | Y/G | - |
| 24 | L/O | - |
| 25 | BR/W | - |
| 26 | W/R | - |
| 27 | V | - |
| 28 | W/G | - |
| 29 | Y/G | - |
| 30 | O/L | - |
| 31 | GR/B | - |
| 32 | BR | - |
| 33 | V/W | - |
| 34 | R | - |
| 35 | W | - |
| 36 | G/O | - |
| 37 | BR/Y | - |
| 38 | SB | - |
| 39 | W/L | - |
| 40 | L/W | - |
| 41 | Y/G | - |
| 42 | P/L | - |
| 43 | LG | - |
| 44 | GR/L | - |
| 45 | SHIELD | - |
| 46 | W | - |
| 47 | LG | - |
| 48 | G/W | - |
| 49 | Y | - |
| 50 | L/Y | - |
| 51 | GR/B | - |
| 52 | LG/B | - |
| 53 | G | - |
| 54 | B | - |
| 55 | R | - |

| | |
|----------------|---------------------------|
| Connector No. | D3 |
| Connector Name | DOOR MIRROR (DRIVER SIDE) |
| Connector Type | TH24MW-NH |



| | | | | | | | | | | |
|----|----|----|----|----|----|----|----|----|----|----|
| 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 3 | 2 | |
| 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 | 15 | 14 |

| | |
|----------------|--------------------------|
| Connector No. | D5 |
| Connector Name | POWER WINDOW MAIN SWITCH |
| Connector Type | NS 16FW-CS |



| | | | | | | |
|--|---|----|-------------|----|----|-------|
| | 3 | 4 | <div></div> | 5 | 6 | 7 |
| | 9 | 10 | 11 | 12 | 13 | 15 16 |

| | |
|----------------|--------------|
| Connector No. | D21 |
| Connector Name | WIPE TO WIPE |
| Connector Type | TH40FW-CS15 |



| | | | | | | | | | | | | | | |
|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 |
| 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 | 15 | 14 | 13 | 12 | 11 |

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 2 | BR/W | - |
| 3 | W | - |
| 5 | G | SIDE CAMERA LH COMM |
| 6 | R | SIDE CAMERA LH POWER SUPPLY |
| 7 | L | - |
| 8 | O | - |
| 9 | W/B | - |
| 10 | SB | - |
| 11 | BR/Y | - |
| 12 | L/W | - |
| 14 | P | - |
| 15 | B/Y | - |
| 16 | GR/L | - |
| 17 | SHIELD | - |
| 18 | B | SIDE CAMERA LH GND |
| 19 | B | - |
| 20 | G | - |
| 21 | L/Y | - |
| 22 | G/W | - |
| 23 | W/L | - |
| 24 | Y | - |

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 3 | G/R | - |
| 4 | W | - |
| 5 | G | - |
| 6 | L | - |
| 7 | B | - |
| 9 | Y | - |
| 10 | W/B | - |
| 11 | G/Y | - |
| 12 | G/W | - |
| 13 | V | - |
| 15 | R | - |
| 16 | W | - |

| | |
|----------------|--------------------|
| Connector No. | D13 |
| Connector Name | SEAT MEMORY SWITCH |
| Connector Type | A08FW |



| | | | | | | |
|---|---|---|---|---|---|---|
| 3 | 5 | 6 | 7 | 2 | 1 | 4 |
|---|---|---|---|---|---|---|

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | G | - |
| 2 | W | - |
| 3 | V | - |
| 5 | P/L | - |
| 6 | L/R | - |
| 8 | L/W | - |
| 9 | G/Y | - |
| 10 | L | - |
| 12 | B/Y | - |
| 13 | L | - |
| 14 | R | - |
| 15 | B | - |
| 16 | Y/G | - |
| 17 | Y/L | - |
| 18 | B/W | - |
| 19 | R | - |
| 20 | P | - |
| 22 | Y/R | - |
| 23 | LG/B | - |
| 24 | L/O | - |
| 25 | R/W | - |
| 26 | W/R | - |
| 27 | SHIELD | - |
| 36 | G/O | - |
| 37 | Y/B | - |
| 38 | V | - |
| 39 | W/L | - |
| 40 | L/O | - |
| 44 | GR/L | - |
| 45 | G | - |
| 46 | W | - |
| 47 | LG | - |
| 48 | L/R | - |
| 49 | Y | - |
| 50 | R/B | - |
| 53 | SHIELD | - |

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | LG/B | - |
| 2 | P/L | - |
| 3 | V/W | - |
| 4 | B | - |
| 5 | LG | - |
| 6 | GR/R | - |
| 7 | Y/G | - |

JRJWC7115GB


AUTOMATIC DRIVE POSITIONER SYSTEM

< WIRING DIAGRAM >


AUTOMATIC DRIVE POSITIONER SYSTEM

| | | | |
|----|---|---|---|
| 54 | B | R | - |
| 55 | R | - | - |

| | |
|----------------|------------------------------|
| Connector No. | D23 |
| Connector Name | DOOR MIRROR (PASSENGER SIDE) |
| Connector Type | TH24MW-NH |

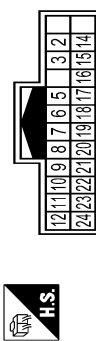


| | |
|----------------|--------------------------|
| Connector No. | D30 |
| Connector Name | POWER WINDOW MAIN SWITCH |
| Connector Type | TH12FW-NH |

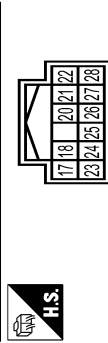

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 17 | W/B | - |
| 18 | G/O | - |
| 20 | O | - |
| 21 | LG | - |
| 22 | V | - |
| 23 | BR | - |
| 24 | GR/R | - |
| 25 | O/L | - |
| 26 | Y/G | - |
| 27 | R/W | - |
| 28 | GR/B | - |


| | |
|----------------|-----------------|
| Connector No. | E105 |
| Connector Name | WIRE TO WIRE |
| Connector Type | TH80MW-GS16-TM4 |

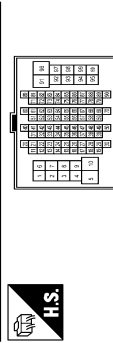

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | L | - |
| 2 | L/W | - |
| 3 | R/B | - |
| 4 | L | - |
| 5 | Y | - |
| 7 | W/G | - |
| 8 | P/B | - |
| 9 | W/B | - |
| 10 | G | - |

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 11 | L | - |
| 12 | P | - |
| 13 | P/B | - |
| 14 | BR | - |
| 15 | L/B | - |
| 16 | SB | - |
| 18 | BR | - |
| 19 | Y/G | - |
| 20 | BR/Y | - |
| 21 | Y/V | - |
| 22 | L | - |
| 23 | L/W | - |
| 24 | O | - |
| 29 | R/W | - |
| 30 | L/B | - |
| 31 | Y | - |
| 32 | GR/R | - |
| 34 | Y | - |
| 35 | B | - |
| 36 | B/R | - |
| 37 | G/Y | - |
| 38 | G | - |
| 40 | SB | - |
| 41 | W/R | - |
| 42 | R | - |
| 43 | GR/L | - |
| 54 | BR | - |
| 91 | L/W | - |
| 92 | Y/B | - |
| 95 | G/R | - |
| 97 | R | - |
| 98 | G/B | - |
| 100 | W/R | - |

| | |
|----------------|--------------|
| Connector No. | F51 |
| Connector Name | A/T ASSEMBLY |
| Connector Type | RK10FG |

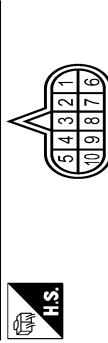

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | V | IGNITION POWER SUPPLY |
| 2 | P | BATTERY POWER SUPPLY |
| 3 | L | CAN-H |
| 4 | SB | K-LINE |
| 5 | B | GROUND |
| 6 | V | IGNITION POWER SUPPLY |
| 7 | R | BACK-UP LAMP RELAY |
| 8 | P | CAN-L |
| 9 | BR | STARTER RELAY |
| 10 | B | GROUND |

| | |
|----------------|--------|
| Connector No. | F301 |
| Connector Name | TCM |
| Connector Type | SP10FG |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | - | IGNITION POWER SUPPLY |
| 2 | - | BATTERY POWER SUPPLY |
| 3 | - | CAN-H |
| 4 | - | K-LINE |
| 5 | - | GROUND |
| 6 | - | IGNITION POWER SUPPLY |
| 7 | - | BACK-UP LAMP RELAY |
| 8 | - | CAN-L |
| 9 | - | STARTER RELAY |
| 10 | - | GROUND |


JRJWC7116GB

AUTOMATIC DRIVE POSITIONER SYSTEM

< WIRING DIAGRAM >


AUTOMATIC DRIVE POSITIONER SYSTEM

| | |
|----------------|------------------|
| Connector No. | M1 |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Type | NS08FW-M2 |

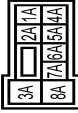


| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1A | Y | - |
| 2A | GR | - |
| 3A | W | - |
| 4A | Y/G | - |
| 5A | V | - |
| 6A | L/W | - |
| 7A | LG | - |
| 8A | W | - |

| | |
|----------------|---------------------|
| Connector No. | M4 |
| Connector Name | DATA LINK CONNECTOR |
| Connector Type | BD18FW |

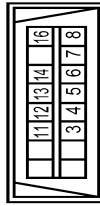

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 3 | LG | - |
| 4 | B | - |
| 5 | B | - |
| 6 | L | - |
| 7 | SB | - |
| 8 | GR | - |
| 11 | SB | - |
| 12 | R | - |
| 13 | L | - |
| 14 | P | - |
| 16 | Y | - |


| | |
|----------------|-----------------|
| Connector No. | M19 |
| Connector Name | WIRE TO WIRE |
| Connector Type | TH80FW-CS16-TM4 |

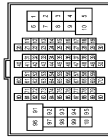

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 2 | L | - |
| 3 | BR | - |
| 5 | R/W | - |
| 6 | L | - |
| 7 | V | - |
| 9 | G | - |
| 11 | W/B | - |
| 12 | BR | - |
| 13 | G/R | - |
| 14 | B/Y | - |
| 15 | W/R | - |
| 16 | GR/R | - |
| 18 | G/W | - |
| 19 | V | - |
| 20 | W/G | - |
| 21 | B/W | - |
| 22 | V | - |
| 24 | G | - |
| 25 | O | - |
| 26 | Y | - |
| 27 | L | - |
| 28 | Y | - |
| 29 | L | - |
| 30 | R | - |
| 31 | C/Y | - |
| 32 | B/SB | - |
| 33 | LG/R | - |
| 34 | BR/W | - |
| 35 | GR/R | - |
| 36 | SB | - |
| 37 | LG | - |
| 38 | L | - |
| 39 | P | - |
| 40 | W/G | - |
| 41 | O | - |
| 43 | V/W | - |

| | | |
|-----|--------|---|
| 44 | LG/B | - |
| 46 | B | - |
| 47 | BR/W | - |
| 49 | GR | - |
| 50 | R/B | - |
| 51 | W/R | - |
| 52 | BR/Y | - |
| 53 | O/B | - |
| 54 | G/O | - |
| 55 | R/B | - |
| 56 | LG/R | - |
| 57 | GR/R | - |
| 58 | V/G | - |
| 59 | V/W | - |
| 60 | R | - |
| 63 | B | - |
| 64 | R | - |
| 65 | W | - |
| 66 | G | - |
| 67 | SHIELD | - |
| 69 | LG/B | - |
| 70 | P/L | - |
| 71 | L | - |
| 72 | R | - |
| 77 | Y/B | - |
| 78 | Y/L | - |
| 79 | Y | - |
| 80 | W/R | - |
| 81 | Y/L | - |
| 84 | L/O | - |
| 85 | O | - |
| 86 | W/R | - |
| 87 | W/R | - |
| 88 | O | - |
| 89 | W/L | - |
| 90 | GR/L | - |
| 91 | W | - |
| 92 | G | - |
| 94 | W/R | - |
| 96 | L/W | - |
| 97 | R | - |
| 98 | V | - |
| 99 | L/W | - |
| 100 | P/B | - |

| | |
|----------------|--------------|
| Connector No. | M20 |
| Connector Name | WIRE TO WIRE |
| Connector Type | TH40MW-CS15 |

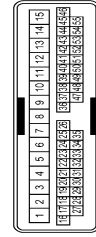

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | V | - |
| 2 | W | - |
| 3 | V | - |
| 4 | Y | - |
| 5 | LG/R | - |
| 6 | BR/W | - |
| 8 | V | - |
| 9 | G | - |
| 10 | L | - |
| 12 | B/Y | - |
| 13 | Y | - |
| 14 | R | - |
| 15 | B | - |
| 16 | GR/R | - |
| 17 | V/W | - |
| 18 | B | - |
| 19 | R | - |
| 20 | P | - |
| 21 | SHIELD | - |
| 22 | V | - |
| 23 | P/B | - |
| 24 | L/O | - |
| 25 | BR/W | - |
| 26 | W/R | - |
| 27 | V | - |
| 28 | W/G | - |
| 29 | Y/G | - |
| 30 | O/L | - |
| 31 | GR/B | - |
| 32 | BR | - |
| 33 | V/W | - |
| 34 | R | - |
| 35 | W | - |
| 36 | G/O | - |
| 37 | BR/Y | - |
| 38 | SB | - |

AUTOMATIC DRIVE POSITIONER SYSTEM

< WIRING DIAGRAM >

AUTOMATIC DRIVE POSITIONER SYSTEM

| | | |
|----|--------|---|
| 39 | W/L | - |
| 40 | L/W | - |
| 41 | Y/G | - |
| 42 | P/L | - |
| 43 | L/G | - |
| 44 | GR | - |
| 45 | SHIELD | - |
| 46 | W | - |
| 47 | L/G | - |
| 48 | G/W | - |
| 49 | Y | - |
| 50 | L/Y | - |
| 51 | GR/R | - |
| 52 | L/G/B | - |
| 53 | G | - |
| 54 | B | - |
| 55 | R | - |

| | |
|----------------|--------------|
| Connector No. | M22 |
| Connector Name | WIRE TO WIRE |
| Connector Type | TH40MW-CS15 |

| | | | | | | | | | | | | | | |
|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 |
| 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 |
| 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 | 41 | 42 | 43 | 44 | 45 |
| 46 | 47 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 | 56 | 57 | 58 | 59 | 60 |



| | | |
|----|--------|---|
| 22 | Y/R | - |
| 23 | L/G/B | - |
| 24 | L/W | - |
| 25 | W/R | - |
| 26 | W/R | - |
| 27 | SHIELD | - |
| 28 | C/O | - |
| 29 | Y/B | - |
| 30 | Y | - |
| 31 | W/L | - |
| 32 | L/O | - |
| 33 | GR | - |
| 34 | G | - |
| 35 | W | - |
| 36 | L/G | - |
| 37 | L/R | - |
| 38 | R/B | - |
| 39 | SHIELD | - |
| 40 | B | - |
| 41 | R | - |

| | |
|----------------|--------------------|
| Connector No. | M57 |
| Connector Name | A/T SHIFT SELECTOR |
| Connector Type | TH16FW-NH |

| | | | | |
|----|----|----|----|----|
| 1 | 2 | 3 | 4 | 5 |
| 6 | 7 | 8 | 9 | 10 |
| 11 | 12 | 13 | 14 | 15 |
| 16 | 17 | 18 | 19 | 20 |
| 21 | 22 | 23 | 24 | 25 |
| 26 | 27 | 28 | 29 | 30 |



| | | |
|--------------|---------------|-----------------------------|
| Terminal No. | Color Of Wire | Signal Name [Specification] |
| 1 | G/W | - |
| 2 | L/W | - |
| 3 | Y/B | - |
| 4 | B/SB | - |
| 5 | R/Y | - |
| 6 | L/W | - |
| 7 | B | - |
| 8 | L/R | - |
| 9 | Y/G | - |
| 10 | B | - |
| 11 | L/R | - |
| 12 | B | - |
| 13 | R/B | - |
| 14 | G/Y | - |

| | |
|----------------|---------------------------|
| Connector No. | M68 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | TH40FB-NH |

| | | | | | | | | | | | | | | | | | | | |
|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |
| 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 |
| 41 | 42 | 43 | 44 | 45 | 46 | 47 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 | 56 | 57 | 58 | 59 | 60 |
| 61 | 62 | 63 | 64 | 65 | 66 | 67 | 68 | 69 | 70 | 71 | 72 | 73 | 74 | 75 | 76 | 77 | 78 | 79 | 80 |



| | | |
|--------------|---------------|--------------------------------|
| Terminal No. | Color Of Wire | Signal Name [Specification] |
| 2 | BR/Y | COMBI SW INPUT 5 |
| 3 | GR | COMBI SW INPUT 4 |
| 4 | L | COMBI SW INPUT 3 |
| 5 | G | COMBI SW INPUT 2 |
| 6 | V | COMBI SW INPUT 1 |
| 8 | V | POWER WINDOW SW COMM |
| 9 | R | STOP LAMP SW 1 |
| 11 | R | RAIN SENSOR SERIAL LINK |
| 14 | P/B | OPTICAL SENSOR |
| 16 | L/O | DIMMER SIGNAL |
| 17 | Y/G | SENSOR PWR SP/LY |
| 18 | B/Y | RECEIVER/SENSOR GND |
| 19 | G/Y | TURN SIG RH OUTPUT (FRONT) |
| 20 | G | TURN SIG LH OUTPUT (FRONT) |
| 21 | P | NATS ANT AMP |
| 22 | W/B | KYLS ENT RECEIVER RSSI |
| 23 | GR/R | SECURITY IND CONT |
| 24 | SE | DONGLE LINK |
| 25 | LG/R | NATS ANT AMP |
| 26 | O | INTELLIGENT KEY IDENTIFICATION |
| 29 | W | HAZARD SW |
| 30 | W/L | BK DOOR ORPR SW |
| 31 | W/G | DR DOOR UNLOCK SENSOR |
| 32 | LG | COMBI SW OUTPUT 5 |
| 33 | W | COMBI SW OUTPUT 4 |
| 34 | W | COMBI SW OUTPUT 3 |
| 35 | R/W | COMBI SW OUTPUT 2 |
| 36 | SB | COMBI SW OUTPUT 1 |
| 37 | G/Y | SHIFT P |
| 39 | L | CAN-H |
| 40 | P | CAN-L |

| | |
|----------------|---------------------------|
| Connector No. | M69 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | FEA08FB-FH46-SA |

| | | | | | | | | | | | | | | | | | | | |
|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |
| 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 |
| 41 | 42 | 43 | 44 | 45 | 46 | 47 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 | 56 | 57 | 58 | 59 | 60 |
| 61 | 62 | 63 | 64 | 65 | 66 | 67 | 68 | 69 | 70 | 71 | 72 | 73 | 74 | 75 | 76 | 77 | 78 | 79 | 80 |



| | | |
|--------------|---------------|-----------------------------|
| Terminal No. | Color Of Wire | Signal Name [Specification] |
| 43 | Y/L | BK DOOR SW |
| 44 | G/W | REAR WIPER STOP POSITION |
| 45 | W | PASSENGER DOOR SW |
| 46 | GR | REAR RH DOOR SW |
| 47 | GR/R | DRIVER DOOR SW |
| 48 | O | REAR LH DOOR SW |
| 49 | BR/Y | LUGGAGE ROOM LAMP CONT |
| 50 | B/Y | REMOTE ENGINE START |
| 51 | W/R | BACK DOOR REQ SW |
| 54 | L | REAR WIPER OUTPUT |
| 55 | G | REAR DOOR UNLK OUTPUT |

| | |
|----------------|---------------------------|
| Connector No. | M70 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | FEA08FW-FH46-SA |

| | | | | | | | | | | | | | | | | | | | |
|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |
| 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 |
| 41 | 42 | 43 | 44 | 45 | 46 | 47 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 | 56 | 57 | 58 | 59 | 60 |
| 61 | 62 | 63 | 64 | 65 | 66 | 67 | 68 | 69 | 70 | 71 | 72 | 73 | 74 | 75 | 76 | 77 | 78 | 79 | 80 |



| | | |
|--------------|---------------|--------------------------------|
| Terminal No. | Color Of Wire | Signal Name [Specification] |
| 56 | W/R | INT ROOM LAMP PWR SP/LY |
| 57 | LG | BAT (FUSE) |
| 58 | R/W | SHOCK DETECT SENS |
| 59 | G | PASSENGER DOOR UNLK OUTPUT |
| 60 | G | TURN SIG LH OUTPUT (SIDE REAR) |
| 61 | G/Y | TURN SIG RH OUTPUT (SIDE REAR) |
| 62 | R | STEP LAMP CONT |
| 63 | BR | ROOM LAMP TIMER CONT |
| 64 | GR/R | CRANKING REQUEST |

A
B
C
D
E
F
G
H
I
ADP
K
L
M
N
O
P

AUTOMATIC DRIVE POSITIONER SYSTEM

< WIRING DIAGRAM >

AUTOMATIC DRIVE POSITIONER SYSTEM

| | | |
|----|---|------------------------------|
| 65 | R | ALL DOOR LOCK OUTPUT |
| 66 | V | DR DOOR FUEL LID UNLK OUTPUT |
| 67 | B | GND |
| 68 | Y | PWR PWR SPLY (IGN) |
| 69 | W | PWR PWR SPLY (BAT) |
| 70 | Y | BAT (F/L) |

| | |
|----------------|---------------------------|
| Connector No. | M71 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | TH40FW-NH |



| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|-----|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 | 41 | 42 | 43 | 44 | 45 | 46 | 47 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 | 56 | 57 | 58 | 59 | 60 | 61 | 62 | 63 | 64 | 65 | 66 | 67 | 68 | 69 | 70 | 71 | 72 | 73 | 74 | 75 | 76 | 77 | 78 | 79 | 80 | 81 | 82 | 83 | 84 | 85 | 86 | 87 | 88 | 89 | 90 | 91 | 92 | 93 | 94 | 95 | 96 | 97 | 98 | 99 | 100 |
|---|---|---|---|---|---|---|---|---|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|-----|

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 71 | G/R | KYLS ENT RECEIVER COMM |
| 72 | P | PUDDLE LAMP CONT |
| 73 | W | ON IND |
| 74 | Y/B | TRAILER TURN SIG RH CONT |
| 75 | LG/R | DRIVER DOOR REQUEST SW |
| 76 | SB | PUSH SW |
| 77 | O/L | TRAILER TURN SIG LH CONT |
| 78 | P/B | DRIVER DOOR ANT+ |
| 79 | V | DRIVER DOOR ANT- |
| 80 | LG/B | PASSENGER DOOR ANT+ |
| 81 | Y/R | PASSENGER DOOR ANT- |
| 82 | W/G | BACK DOOR ANT+ |
| 83 | B/W | BACK DOOR ANT- |
| 84 | BR | ROOM ANT1+ |
| 85 | Y | ROOM ANT1- |
| 86 | W | ROOM ANT2+ |
| 87 | B | ROOM ANT2- |
| 88 | V | LADGGE ROOM ANT+ |
| 89 | G | LADGGE ROOM ANT- |
| 90 | Y | PUSH-BTN IGN SW ILL PWR |
| 91 | O | LOCK IND |
| 92 | L | LOW SIDE PUSH LED |
| 93 | GR/R | F-KEY WARN BUZZER |
| 96 | BR | ACC RELAY CONT |
| 97 | R/W | STARTER RELAY CONT |
| 98 | O | IGN RELAY (PDM E/R) CONT |
| 99 | R | IGN RELAY (F/B) CONT |
| 100 | P/L | PASSENGER DOOR REQUEST SW |

| | | |
|-----|-----|---------------------------|
| 101 | W/B | IGN PWR SPLY 2 |
| 102 | BR | SHIFT N/P |
| 104 | R/B | A/T SHIFT SELECT PWR SPLY |
| 105 | O/L | STOP LAMP SW 2 |
| 106 | Y/G | BLWR FAN MTR RELAY CONT |
| 109 | L/W | ACC IND |
| 110 | BR | RECEIVER PWR SPLY |

| | |
|----------------|---|
| Connector No. | M75 |
| Connector Name | AUTOMATIC DRIVE POSITIONER CONTROL UNIT |
| Connector Type | TH24FW-NH |



| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|-----|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 | 41 | 42 | 43 | 44 | 45 | 46 | 47 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 | 56 | 57 | 58 | 59 | 60 | 61 | 62 | 63 | 64 | 65 | 66 | 67 | 68 | 69 | 70 | 71 | 72 | 73 | 74 | 75 | 76 | 77 | 78 | 79 | 80 | 81 | 82 | 83 | 84 | 85 | 86 | 87 | 88 | 89 | 90 | 91 | 92 | 93 | 94 | 95 | 96 | 97 | 98 | 99 | 100 |
|---|---|---|---|---|---|---|---|---|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|-----|

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | Y | UPWARD |
| 2 | GR/B | SELECT RH |
| 3 | Y/G | UPWARD |
| 4 | GR/R | LEFTWARD |
| 5 | R/B | MIR SENS UP DOWN (RH) |
| 6 | L/Y | MIR SENS UP DOWN (LH) |
| 7 | P | FORWARD |
| 8 | LG/R | RX/TX |
| 10 | L/O | MIR MTR UP (RH) |
| 11 | Y/B | MIR MTR LEFT (RH) |
| 12 | SB | MIR MTR DOWN RIGHT (LH) |
| 13 | LG | DOWNWARD |
| 14 | BR | SELECT LH |
| 15 | O/L | DOWNWARD |
| 16 | V/W | RIGHTWARD |
| 17 | L/R | MIR SENS LEFT/RIGHT (RH) |
| 18 | G/W | MIR SENS LEFT/RIGHT (LH) |
| 19 | G | BACKWARD |
| 20 | Y | SENS GND |
| 21 | W/L | SENS POWER |
| 22 | V | MIR MTR DOWN RIGHT (RH) |
| 23 | L/W | MIR MTR UP (LH) |
| 24 | BR/Y | MIR MTR LEFT (LH) |

| | |
|----------------|-----------------|
| Connector No. | M77 |
| Connector Name | WIRE TO WIRE |
| Connector Type | TH80FW-CS16-TM4 |



| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|-----|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 | 41 | 42 | 43 | 44 | 45 | 46 | 47 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 | 56 | 57 | 58 | 59 | 60 | 61 | 62 | 63 | 64 | 65 | 66 | 67 | 68 | 69 | 70 | 71 | 72 | 73 | 74 | 75 | 76 | 77 | 78 | 79 | 80 | 81 | 82 | 83 | 84 | 85 | 86 | 87 | 88 | 89 | 90 | 91 | 92 | 93 | 94 | 95 | 96 | 97 | 98 | 99 | 100 |
|---|---|---|---|---|---|---|---|---|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|-----|

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | W | - |
| 2 | L/W | - |
| 3 | R/B | - |
| 4 | L | - |
| 5 | Y | - |
| 7 | W/G | - |
| 8 | P/B | - |
| 9 | W/B | - |
| 10 | G | - |
| 11 | L | - |
| 12 | P | - |
| 13 | P/B | - |
| 14 | BR | - |
| 15 | O/L | - |
| 16 | SB | - |
| 18 | Y/G | - |
| 19 | BR/Y | - |
| 20 | V | - |
| 21 | L | - |
| 22 | Y | - |
| 23 | L/W | - |
| 24 | O | - |
| 28 | R/W | - |
| 29 | O/L | - |
| 30 | Y | - |
| 31 | GR/R | - |
| 32 | Y | - |
| 34 | R | - |
| 35 | B/O | - |
| 36 | G/Y | - |
| 37 | SB | - |
| 38 | W/R | - |
| 40 | R | - |
| 41 | V | - |

| | | |
|-----|------|---|
| 54 | GR/L | - |
| 91 | BR | - |
| 92 | L/W | - |
| 94 | Y/B | - |
| 95 | L/R | - |
| 97 | R | - |
| 98 | O/L | - |
| 100 | W/B | - |

| | |
|----------------|--------------------------|
| Connector No. | M102 |
| Connector Name | TILT & TELESCOPIC SWITCH |
| Connector Type | TK08FGY |



| | | | | |
|---|---|---|---|---|
| 3 | 4 | 1 | 5 | 2 |
|---|---|---|---|---|

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | B | - |
| 2 | Y | - |
| 3 | LG | - |
| 4 | G | - |
| 5 | P | - |

| | |
|----------------|---|
| Connector No. | M104 |
| Connector Name | AUTOMATIC DRIVE POSITIONER CONTROL UNIT |
| Connector Type | NS06FW-CS |



| | | | | | |
|----|----|----|----|----|----|
| 25 | 26 | 27 | 28 | 29 | 30 |
|----|----|----|----|----|----|

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 25 | W/R | UPWARD |
| 26 | L | BACKWARD |
| 27 | P | STRG SENS VCC |
| 28 | G | DOWNWARD |
| 29 | W/B | UPWARD/FORWARD |

AUTOMATIC DRIVE POSITIONER SYSTEM

< WIRING DIAGRAM >

AUTOMATIC DRIVE POSITIONER SYSTEM

| | | |
|----|---|-----|
| 30 | B | GND |
|----|---|-----|

| | |
|----------------|-----------------|
| Connector No. | M115 |
| Connector Name | CIRCUIT BREAKER |
| Connector Type | M02FW-P-LG |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | Y | - |
| 2 | W/R | - |

| | |
|----------------|------------|
| Connector No. | M116 |
| Connector Name | TILT MOTOR |
| Connector Type | NS06FW-CS |




| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | G | - |
| 2 | W/B | - |
| 4 | P | - |
| 5 | G/O | - |
| 6 | Y | - |

| | |
|----------------|------------------|
| Connector No. | M117 |
| Connector Name | TELESCOPIC MOTOR |
| Connector Type | NS06FW-CS |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | L | - |
| 2 | W/B | - |
| 4 | P | - |
| 5 | R/B | - |
| 6 | Y | - |

| | |
|----------------|-------------|
| Connector No. | M125 |
| Connector Name | CAN GATEWAY |
| Connector Type | TH12FW-NH |

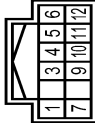

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | L | CAN-H |
| 2 | Y | BATTERY |
| 4 | L | CAN-H |
| 5 | B | GND |
| 6 | L | CAN-H |
| 7 | P | CAN-L |
| 9 | GR | IGNITION |
| 10 | R | CAN-L |
| 11 | B | GND |
| 12 | R | CAN-L |

JRJWC7120GB

ADP

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:0000000010259499

OVERALL SEQUENCE

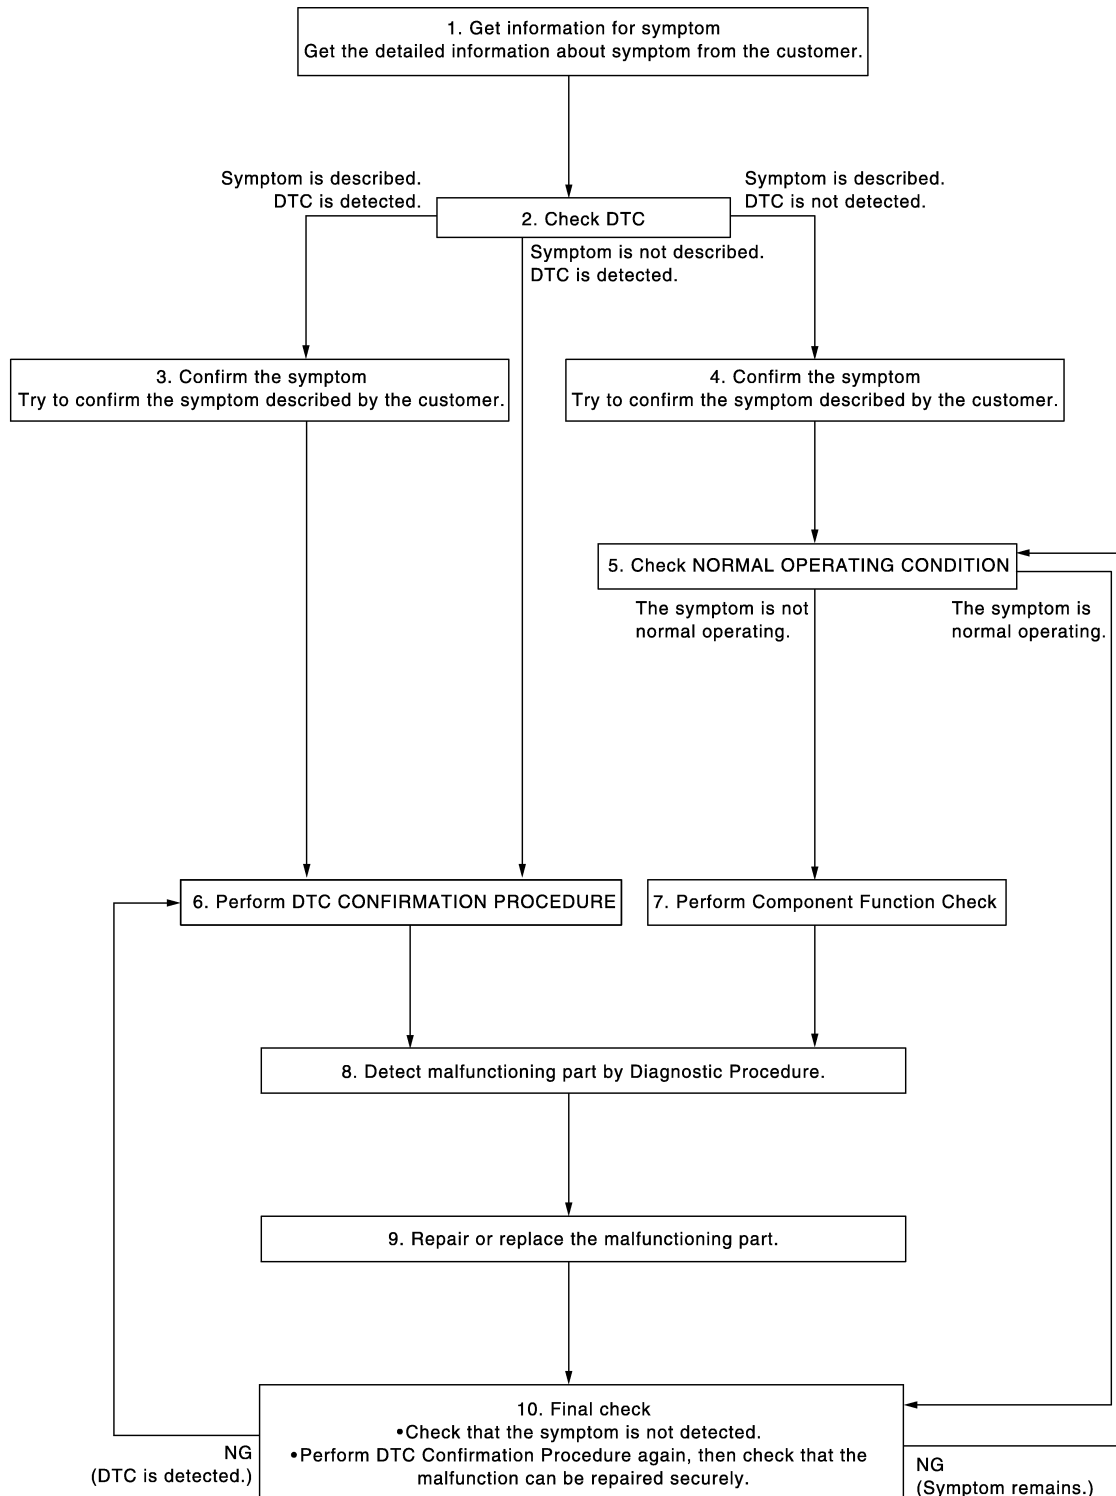

JMJIA1702GB

DETAILED FLOW

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

1.GET INFORMATION FOR SYMPTOM

Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred).

>> GO TO 2.

2.CHECK DTC WITH AUTOMATIC DRIVE POSITIONER SYSTEM

Check "Self Diagnostic Result" using CONSULT. Refer to [ADP-31, "DTC Index"](#)

Is any symptom described and any DTC is displayed?

Symptom is described, DTC is displayed.>>GO TO 3.

Symptom is not described, DTC is displayed.>>GO TO 6.

Symptom is described, DTC is not displayed.>>GO TO 4.

3.CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

>> GO TO 6.

4.CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

>> GO TO 5.

5.CHECK NORMAL OPERATING CONDITION

Check normal operating condition. Refer to [ADP-134, "Description"](#).

Is the incident normal operation?

YES >> INSPECTION END

NO >> GO TO 7.

6.PERFORM DTC CONFIRMATION PROCEDURE

Perform the confirmation procedure for the detected DTC.

Is the DTC displayed?

YES >> GO TO 8.

NO >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

7.PERFORM COMPONENT FUNCTION CHECK

Perform the component function check for the isolated malfunctioning point.

>> GO TO 8.

8.DETECT MALFUNCTIONING PART BY DIAGNOSTIC PROCEDURE

Isolate the malfunctioning point by performing the diagnosis procedure relevant to the symptom during the component diagnosis.

>> GO TO 9.

9.REPARE OR REPLACE THE MALFUNCTIONING PARTS

Repair or replace the malfunctioning part.

>> GO TO 10.

10.FINAL CHECK

Perform the DTC confirmation procedure (if DTC is detected) or component function check (if no DTC is detected) again, and then check that the malfunction can be repaired securely.

Are all malfunctions corrected?

A

B

C

D

E

F

G

H

I

ADP

K

L

M

N

O

P

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

YES >> INSPECTION END
Symptom is detected.>> GO TO 5.
DTC is detected.>> GO TO 6.

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

INSPECTION AND ADJUSTMENT

ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL

ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Description

INFOID:0000000010259500

Each function is reset to the following condition when the battery terminal is disconnected.

| Function | Condition | Procedure |
|---------------------------------|-----------|--------------------------------|
| Memory (Seat, steering, mirror) | Erased | Perform storing |
| Entry/exit assist | ON | Perform initialization |
| | | Set slide amount ^{*1} |
| Intelligent Key interlock | Erased | Perform initialization |
| | | Perform storing |

^{*1}: Default value is 40 mm.

NOTE:

Notice that disconnecting the battery when detected DTC are present will erase the DTC memory.

ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Special Repair Requirement

INFOID:0000000010259501

1.SYSTEM INITIALIZATION

Perform system initialization. Refer to [ADP-52, "SYSTEM INITIALIZATION : Special Repair Requirement"](#).

>> GO TO 2.

2.MEMORY STORAGE

Perform memory storage. Refer to [ADP-53, "MEMORY STORING : Special Repair Requirement"](#).

>> GO TO 3.

3.INTELLIGENT KEY INTERLOCK STORAGE

Perform Intelligent Key interlock storage. Refer to [ADP-54, "INTELLIGENT KEY INTERLOCK STORING : Special Repair Requirement"](#).

>> GO TO 4.

4.SYSTEM SETTING

Perform system setting. Refer to [ADP-55, "SYSTEM SETTING : Special Repair Requirement"](#).

>> END

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description

INFOID:0000000010259502

Each function is reset to the following condition when the driver seat control unit is replaced.

| Function | Condition | Procedure |
|---------------------------------|-----------|--------------------------------|
| Memory (Seat, steering, mirror) | Erased | Perform storing |
| Entry/exit assist | ON | Perform initialization |
| | | Set slide amount ^{*1} |

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

| Function | Condition | Procedure |
|---------------------------|-----------|------------------------|
| Intelligent Key interlock | Erased | Perform initialization |
| | | Perform storing |

*1: Default value is 40 mm.

NOTE:

Notice that disconnecting the battery when detected DTC are present will erase the DTC memory.

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement

INFOID:0000000010259503

1.SYSTEM INITIALIZATION

Perform system initialization. Refer to [ADP-52, "SYSTEM INITIALIZATION : Special Repair Requirement"](#).

>> GO TO 2.

2.MEMORY STORAGE

Perform memory storage. Refer to [ADP-53, "MEMORY STORING : Special Repair Requirement"](#).

>> GO TO 3.

3.INTELLIGENT KEY INTERLOCK STORAGE

Perform Intelligent Key interlock storage. Refer to [ADP-54, "INTELLIGENT KEY INTERLOCK STORING : Special Repair Requirement"](#).

>> GO TO 4.

4.SYSTEM SETTING

Perform system setting. Refer to [ADP-55, "SYSTEM SETTING : Special Repair Requirement"](#).

>> END

SYSTEM INITIALIZATION

SYSTEM INITIALIZATION : Description

INFOID:0000000010259504

Always perform the initialization when the battery terminal is disconnected or the driver seat control unit is replaced.

The entry/exit assist function will not operate normally if no initialization is performed.

SYSTEM INITIALIZATION : Special Repair Requirement

INFOID:0000000010259505

INITIALIZATION PROCEDURE

1. CHOOSE METHOD

There are two initialization methods.

Which method do you use?

With door switch>>GO TO 2.

With vehicle speed>>GO TO 4.

2. STEP A-1

Turn ignition switch from ACC to OFF position.

>> GO TO 3.

3. STEP A-2

Driver door switch is ON (open) → OFF (close) → ON (open).

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

>> END

4. STEP B-1

Drive the vehicle at more than 25 km/h (16 MPH).

>> END

MEMORY STORING

MEMORY STORING : Description

INFOID:0000000010259506

Always perform the memory storage when the battery terminal is disconnected or the driver seat control unit is replaced. The memory function will not operate normally if no memory storage is performed.

MEMORY STORING : Special Repair Requirement

INFOID:0000000010259507

Memory Storage Procedure

Two positions for the driver seat, steering column and outside mirror can be stored for memory operation by following procedure.

1. STEP 1

Check the following conditions.

- Ignition switch: ON
- A/T shift selector: P position

>> GO TO 2.

2. STEP 2

Adjust driver seat, steering column and outside mirror position manually.

>> GO TO 3.

3. STEP 3

1. Push set switch.

NOTE:

- Memory indicator for which driver seat position is already retained in memory is illuminated for 5 seconds.
- Memory indicator for which driver seat position is not retained in memory is illuminated for 0.5 second.

2. Push the memory switch (1 or 2) for at least 1 second within 5 seconds after pushing the set switch.

NOTE:

- To enter driver seat positions into blank memory, memory indicator will be turned on for 5 seconds.
- To modify driver seat positions, memory indicator will be turned OFF for 0.5 second, then turned ON for 5 seconds.

NOTE:

If memory is stored in the same memory switch, the previous memory will be deleted.

>> GO TO 4.

4. STEP 4

Confirm the operation of each part with memory operation.

>> END

INTELLIGENT KEY INTERLOCK STORING

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

INTELLIGENT KEY INTERLOCK STORING : Description

INFOID:0000000010259508

Always perform the Intelligent Key interlock function storage when the battery terminal is disconnected or the driver seat control unit is replaced. The Intelligent Key interlock function will not operate normally if no memory storage is performed.

INTELLIGENT KEY INTERLOCK STORING : Special Repair Requirement

INFOID:0000000010259509

Intelligent Key Interlock Storage Procedure

Performing the following operation associates the registered driving position with Intelligent Key. When driver door unlock operation is performed by Intelligent Key or driver door request switch, display of the registered driving position and turnout operation can be performed.

1.STEP 1

Check the following conditions.

- Ignition switch: OFF
- Initialization: done
- Driving position: registered

>> GO TO 2.

2.STEP 2

1. Push set switch.

NOTE:

Memory indicator for which driver seat position is already retained in memory is illuminated for 5 seconds.

2. Push the Intelligent Key unlock button within 5 seconds after pushing memory switch (while the memory indicator is turned ON).

NOTE:

From the time registration is performed, the applicable memory indicator blinks for 5 seconds.

>> GO TO 3.

3.STEP 3

Confirm the operation of each part with memory operation and Intelligent Key interlock operation.

>> END

SYSTEM SETTING

SYSTEM SETTING : Description

INFOID:0000000010259510

The settings of the automatic driving positioner system can be changed, using CONSULT, the display unit in the center of the instrument panel and the set switch. Always check the settings before and after disconnecting the battery terminal or replacing driver seat control unit.

Setting Change

x: Applicable

| Item | Content | CONSULT | Set switch | Factory setting |
|--|--|---------|------------|-----------------|
| Amount of seat sliding for entry/exit assist | The amount of seat sliding for entry/exit assist can be selected from 3 items. [40 mm/80 mm/150 mm] | x | — | 40 mm |
| Entry/exit assist (seat) | Entry/exit assist (seat) can be selected: ON (operated) – OFF (not operated) | x | x | ON |
| Entry/exit assist (steering column) | Entry/exit assist (steering column) can be selected: ON (operated) – OFF (not operated) | x | | ON |

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

SYSTEM SETTING : Special Repair Requirement

INFOID:0000000010259511

1. CHOOSE METHOD

There are three way of setting method.

Which method do you choose?

With CONSULT>>GO TO 2.

With set switch>>GO TO 4.

2. WITH CONSULT - STEP 1

Select "Work support".

>> GO TO 3.

3. WITH CONSULT - STEP 2

1. Select "EXIT SEAT SLIDE SETTING", or "EXIT TILT SETTING" then touch display to change between ON and OFF.
 - EXIT SEAT SLIDE SETTING: Entry/exit assist (seat)
 - EXIT TILT SETTING: Entry/exit assist (steering column)
2. Select "SEAT SLIDE VOLUME SET" and touch either of "40 mm", "80 mm", or "150 mm".
3. Then touch "OK".

>> END

4. WITH SET SWITCH - STEP 1

Turn ignition switch OFF.

>> GO TO 5.

5. WITH SET SWITCH - STEP 2

Push set switch and hold for more than 10 seconds, then confirm blinking of the memory switch indicator.

- Entry/exit assist (seat/steering column) are ON: Memory switch indicator blink two times.
- Entry/exit assist (seat/steering column) are OFF: Memory switch indicator blink once.

>> END

A

B

C

D

E

F

G

H

I

ADP

K

L

M

N

O

P

U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

U1000 CAN COMM CIRCUIT

Description

INFOID:0000000010259512

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H-line, CAN L-line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

INFOID:0000000010259513

DTC DETECTION LOGIC

| DTC No. | CONSULT display description | DTC detecting condition | Possible cause |
|---------|-----------------------------|---|--------------------------|
| U1000 | CAN COMM CIRCUIT | <ul style="list-style-type: none">Driver seat control unit cannot communicate to other control units.When driver seat control unit cannot communicate CAN communication signal continuously for 2 seconds or more. | CAN communication system |

DTC CONFIRMATION PROCEDURE

1.STEP 1

Turn ignition switch ON and wait at least 3 seconds.

>> GO TO 2.

2.STEP 2

Check "Self diagnostic result" using CONSULT.

Is the DTC detected?

- YES >> Perform diagnosis procedure. Refer to [ADP-56, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000010259514

Refer to [LAN-21, "Trouble Diagnosis Flow Chart"](#).

Special Repair Requirement

INFOID:0000000010259515

Refer to [ADP-52, "SYSTEM INITIALIZATION : Description"](#).

U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

U1010 CONTROL UNIT (CAN)

DTC Logic

INFOID:0000000010259516

DTC DETECTION LOGIC

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------|------------------------|--|--------------------------|
| U1010 | CONTROL UNIT (CAN) | When detecting error during the initial diagnosis of CAN controller of driver seat control unit. | Driver seat control unit |

Diagnosis Procedure

INFOID:0000000010259517

1. REPLACE DRIVER SEAT CONTROL UNIT

When DTC [U1010] is detected, replace driver seat control unit.

>> Replace driver seat control unit.

ADP

B2112 SLIDING MOTOR

< DTC/CIRCUIT DIAGNOSIS >

B2112 SLIDING MOTOR

DTC Logic

INFOID:0000000010259518

DTC DETECTION LOGIC

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------|------------------------|--|---|
| B2112 | SEAT SLIDE | The driver seat control unit detects the output of sliding motor output terminal for 0.1 second or more even if the sliding switch is not input. | <ul style="list-style-type: none">• Driver seat control unit• Slide motor harness is shorted |

DTC CONFIRMATION PROCEDURE

1.STEP 1

Turn ignition switch ON.

>> GO TO 2.

2.STEP 2

Check "Self diagnostic result" using CONSULT.

Is the DTC detected?

- YES >> Perform diagnosis procedure. Refer to [ADP-58, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000010259519

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check "Self diagnostic result" using CONSULT.
3. Erase the DTC.
4. Perform DTC confirmation procedure. Refer to [ADP-58, "DTC Logic"](#).

Is the DTC displayed again?

- YES >> GO TO 2.
NO >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

2.CHECK SLIDING MOTOR CIRCUIT (POWER SHORT)

1. Turn ignition switch OFF.
2. Disconnect sliding motor and driver seat control unit connector.
3. Check voltage between sliding motor harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|---------------|-----------|--------|--------------------------|
| Sliding motor | | | |
| Connector | Terminals | | |
| B461 | 34 | Ground | 0 |
| | 38 | | |

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace harness or connector.

3.CHECK DRIVER SEAT CONTROL UNIT OUTPUT SIGNAL

1. Connect driver seat control unit connector.
2. Check voltage between driver seat control unit harness connector and ground.

B2112 SLIDING MOTOR

< DTC/CIRCUIT DIAGNOSIS >

| (+) | | (-) | Voltage (V) (Approx.) |
|--------------------------|-----------|--------|--------------------------|
| Driver seat control unit | | | |
| Connector | Terminals | | |
| B452 | 34 | Ground | 0 |
| | 38 | | |

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace driver seat control unit.

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

B2113 RECLINING MOTOR

< DTC/CIRCUIT DIAGNOSIS >

B2113 RECLINING MOTOR

DTC Logic

INFOID:0000000010259520

DTC DETECTION LOGIC

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------|------------------------|--|---|
| B2113 | SEAT RECLINING | The driver seat control unit detects the output of reclining motor output terminal for 0.1 second or more even if the reclining switch is not input. | <ul style="list-style-type: none">Driver seat control unitReclining motor harness is shorted |

DTC CONFIRMATION PROCEDURE

1.STEP 1

Turn ignition switch ON.

>> GO TO 2.

2.STEP 2

Check "Self diagnostic result" using CONSULT.

Is the DTC detected?

- YES >> Perform diagnosis procedure. Refer to [ADP-60, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000010259521

1.PERFORM DTC CONFIRMATION PROCEDURE

- Turn ignition switch ON.
- Check "Self diagnostic result" using CONSULT.
- Erase the DTC.
- Perform DTC confirmation procedure. Refer to [ADP-60, "DTC Logic"](#).

Is the DTC displayed again?

- YES >> GO TO 2.
NO >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

2.CHECK RECLINING MOTOR CIRCUIT (POWER SHORT)

- Turn ignition switch OFF.
- Disconnect reclining motor and driver seat control unit connector.
- Check voltage between reclining motor harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|-----------------|-----------|--------|--------------------------|
| Reclining motor | | | |
| Connector | Terminals | | |
| B454 | 35 | Ground | 0 |
| | 39 | | |

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace harness or connector.

3.CHECK DRIVER SEAT CONTROL UNIT OUTPUT SIGNAL

- Connect driver seat control unit connector.
- Check voltage between driver seat control unit harness connector and ground.

B2113 RECLINING MOTOR

< DTC/CIRCUIT DIAGNOSIS >

| (+) | | (-) | Voltage (V) (Approx.) |
|--------------------------|-----------|--------|--------------------------|
| Driver seat control unit | | | |
| Connector | Terminals | | |
| B452 | 35 | Ground | 0 |
| | 39 | | |

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace driver seat control unit.

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

B2116 TILT MOTOR

< DTC/CIRCUIT DIAGNOSIS >

B2116 TILT MOTOR

DTC Logic

INFOID:0000000010259522

DTC DETECTION LOGIC

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------|------------------------|---|---|
| B2116 | STEERING TILT | The automatic drive positioner control unit detects the output of tilt motor output terminal for 0.1 second or more even if the tilt switch is not input. | <ul style="list-style-type: none">Automatic drive positioner control unitTilt motor harness is shorted |

DTC CONFIRMATION PROCEDURE

1.STEP 1

Turn ignition switch ON.

>> GO TO 2.

2.STEP 2

Check "Self diagnostic result" using CONSULT.

Is the DTC detected?

- YES >> Perform diagnosis procedure. Refer to [ADP-62. "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000010259523

1.PERFORM DTC CONFIRMATION PROCEDURE

- Turn ignition switch ON.
- Check "Self diagnostic result" using CONSULT.
- Erase the DTC.
- Perform DTC confirmation procedure. Refer to [ADP-62. "DTC Logic"](#).

Is the DTC displayed again?

- YES >> GO TO 2.
NO >> Check intermittent incident. Refer to [GI-43. "Intermittent Incident"](#).

2.CHECK TILT MOTOR CIRCUIT (POWER SHORT)

- Turn ignition switch OFF.
- Disconnect automatic drive positioner control unit and tilt motor connector.
- Check voltage between tilt motor harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|------------|-----------|--------|--------------------------|
| Tilt motor | | | |
| Connector | Terminals | | |
| M116 | 1 | Ground | 0 |
| | 2 | | |

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace harness or connector.

3.CHECK AUTOMATIC DRIVER POSITIONER CONROL UNIT OUTPUT SIGNAL

- Connect automatic drive positioner control unit connector.
- Check voltage between automatic drive positioner control unit harness connector and ground.

B2116 TILT MOTOR

< DTC/CIRCUIT DIAGNOSIS >

| (+) | | (-) | Voltage (V) (Approx.) |
|---|-----------|--------|--------------------------|
| Automatic drive positioner control unit | | | |
| Connector | Terminals | | |
| M104 | 28 | Ground | 0 |
| | 29 | | |

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace automatic drive positioner control unit.

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-43. "Intermittent Incident"](#).

>> INSPECTION END

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

B2128 UART COMMUNICATION LINE

< DTC/CIRCUIT DIAGNOSIS >

B2128 UART COMMUNICATION LINE

Description

INFOID:0000000010259524

Driver seat control unit performs UART communication with the automatic drive positioner control unit using 1 communication lines. Driver seat control unit receives the operation signals of tilt & telescopic switch, door mirror remote control switch, and the position signals of door mirror sensor from the automatic drive positioner control unit and transmits the operation request signal.

DTC Logic

INFOID:0000000010259525

DTC DETECTION LOGIC

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------|------------------------|--|---|
| B2128 | UART COMM | The communication between driver seat control unit and auto drive positioner control unit is interrupted for a period of time. | <ul style="list-style-type: none">• UART communication line (UART communication line is open or shorted)• Driver seat control unit• Automatic drive positioner control unit |

DTC CONFIRMATION PROCEDURE

1.STEP 1

Turn ignition switch ON.

>> GO TO 2.

2.PROCEDURE

Check "Self diagnostic result" using CONSULT.

Is the DTC detected?

YES >> Perform diagnosis procedure. Refer to [ADP-64. "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000010259526

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check "Self diagnostic result" using CONSULT.
3. Erase the DTC.
4. Perform DTC confirmation procedure. Refer to [ADP-62. "DTC Logic"](#).

Is the DTC displayed again?

YES >> GO TO 2.
NO >> Check intermittent incident. Refer to [GI-43. "Intermittent Incident"](#).

2.CHECK UART COMMUNICATION LINE CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit and automatic drive positioner control unit connector.
3. Check continuity between driver seat control unit harness connector and automatic drive positioner control unit harness connector.

| Driver seat control unit | | Automatic drive positioner control unit | | Continuity |
|--------------------------|----------|---|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| B451 | 2 | M75 | 8 | Existed |

4. Check continuity between driver seat control unit harness connector and ground.

B2128 UART COMMUNICATION LINE

< DTC/CIRCUIT DIAGNOSIS >

| Driver seat control unit | | Ground | Continuity |
|--------------------------|----------|--------|-------------|
| Connector | Terminal | | |
| B451 | 2 | | Not existed |

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

NO >> Repair or replace harness or connector.

A

B

C

D

E

F

G

H

I

ADP

K

L

M

N

O

P

B2130 EEPROM

< DTC/CIRCUIT DIAGNOSIS >

B2130 EEPROM

DTC Logic

INFOID:000000010259527

DTC DETECTION LOGIC

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------|------------------------|--|--------------------------|
| B2130 | EEPROM | Driver seat control unit detected CPU malfunction. | Driver seat control unit |

DTC CONFIRMATION PROCEDURE

1.STEP 1

Turn ignition switch ON.

>> GO TO 2.

2.STEP 2

Check "Self diagnostic result" using CONSULT.

Is the DTC detected?

YES >> Perform diagnosis procedure. Refer to [ADP-66, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000010259528

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check "Self diagnostic result" using CONSULT.
3. Erase the DTC.
4. Perform DTC confirmation procedure. Refer to [ADP-66, "DTC Logic"](#).

Is the DTC displayed again?

YES >> GO TO 2.
NO >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

2.REPLACE DRIVER SEAT CONTROL UNIT

Replace driver seat control unit.

>> INSPECTION END

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

POWER SUPPLY AND GROUND CIRCUIT DRIVER SEAT CONTROL UNIT

DRIVER SEAT CONTROL UNIT : Diagnosis Procedure

INFOID:0000000010259529

1.CHECK FUSE

Check that the following fuse and fusible link are not fusing.

| Signal name | Fuse No. |
|----------------------|----------|
| Battery power supply | K (50 A) |

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the blown fuse after repairing the affected circuit.

2.CHECK DRIVER SEAT CONTROL UNIT POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector.
3. Check voltage between driver seat control unit harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|--------------------------|-----------|--------|--------------------------|
| Driver seat control unit | | | |
| Connector | Terminals | | |
| B452 | 33 | Ground | Battery voltage |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

3.CHECK DRIVER SEAT CONTROL UNIT GROUND CIRCUIT

Check continuity between the driver seat control unit harness connector and ground.

| Driver seat control unit | | Ground | Continuity |
|--------------------------|----------|--------|------------|
| Connector | Terminal | | |
| B452 | 43 | | Existed |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair or replace harness.

DRIVER SEAT CONTROL UNIT : Special Repair Requirement

INFOID:0000000010259530

1.PERFORM ADDITIONAL SERVICE

Perform additional service when removing battery negative terminal.

>> Refer to [ADP-51, "ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Description"](#).

AUTOMATIC DRIVE POSITIONER CONTROL UNIT

AUTOMATIC DRIVE POSITIONER CONTROL UNIT : Diagnosis Procedure

INFOID:0000000010259531

NOTE:

Do not disconnect the battery negative terminal and the driver seat control unit connector until DTC is confirmed using CONSULT.

1.CHECK FUSE

Check that the following fuse and fusible link are not fusing.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

| Signal name | Fuse No. |
|----------------------|----------|
| Battery power supply | K (50 A) |

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the blown fuse after repairing the affected circuit.

2.CHECK AUTOMATIC DRIVE POSITIONER CONTROL UNIT POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit connector.
3. Check voltage between automatic drive positioner control unit harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|---|-----------|--------|--------------------------|
| Automatic drive positioner control unit | | | |
| Connector | Terminals | | |
| M104 | 25 | Ground | Battery voltage |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

3.CHECK AUTOMATIC DRIVE POSITIONER CONTROL UNIT GROUND CIRCUIT

Check continuity between the automatic drive positioner control unit harness connector and ground.

| Automatic drive positioner control unit | | Ground | Continuity |
|---|----------|--------|------------|
| Connector | Terminal | | |
| M104 | 30 | | Existed |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair or replace harness.

AUTOMATIC DRIVE POSITIONER CONTROL UNIT : Special Repair Requirement

INFOID:0000000010259532

1.PERFORM ADDITIONAL SERVICE

Perform additional service when removing battery negative terminal.

>> Refer to [ADP-51, "ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Description"](#).

SLIDING SWITCH

< DTC/CIRCUIT DIAGNOSIS >

SLIDING SWITCH

Component Function Check

INFOID:0000000010259533

1.CHECK FUNCTION

1. Select "SLIDE SW-FR", "SLIDE SW-RR" in "Data monitor" mode using CONSULT.
2. Check sliding switch signal under the following conditions.

| Monitor item | Condition | | Status |
|--------------|---------------------------|---------|--------|
| SLIDE SW-FR | Sliding switch (forward) | Operate | ON |
| | | Release | OFF |
| SLIDE SW-RR | Sliding switch (backward) | Operate | ON |
| | | Release | OFF |

Is the indication normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-69. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000010259534

1.CHECK SLIDING SWITCH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect power seat switch connector.
3. Turn ignition switch ON.
4. Check voltage between power seat switch harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|-------------------|-----------|--------|--------------------------|
| Power seat switch | | | |
| Connector | Terminals | | |
| B459 | 8 | Ground | 12 |
| | 24 | | |

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK SLIDING SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector.
3. Check continuity between driver seat control unit harness connector and power seat switch harness connector.

| Driver seat control unit | | Power seat switch | | Continuity |
|--------------------------|----------|-------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| B451 | 8 | B459 | 8 | Existed |
| | 24 | | 24 | |

4. Check continuity between driver seat control unit harness connector and ground.

| Driver seat control unit | | Ground | Continuity |
|--------------------------|----------|--------|-------------|
| Connector | Terminal | | |
| B451 | 8 | | Not existed |
| | 24 | | |

Is the inspection result normal?

YES >> Replace driver seat control unit.

SLIDING SWITCH

< DTC/CIRCUIT DIAGNOSIS >

NO >> Repair or replace harness or connector.

3.CHECK SLIDING SWITCH

Refer to [ADP-70, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace power seat switch.

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:0000000010259535

1.CHECK SLIDING SWITCH

1. Turn ignition switch OFF.
2. Disconnect power seat switch (sliding switch) connector.
3. Check continuity between power seat switch (sliding switch) terminals.

| Power seat switch (Sliding switch) | | Condition | | Continuity |
|------------------------------------|----|---------------------------|---------|-------------|
| Terminal | | | | |
| 8 | 43 | Sliding switch (backward) | Operate | Existed |
| | | | Release | Not existed |
| 24 | | Sliding switch (forward) | Operate | Existed |
| | | | Release | Not existed |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace power seat switch.

RECLINING SWITCH

< DTC/CIRCUIT DIAGNOSIS >

RECLINING SWITCH

Component Function Check

INFOID:0000000010259536

1.CHECK FUNCTION

1. Select "RECLN SW-FR", "RECLN SW-RR" in "Data monitor" mode using CONSULT.
2. Check reclining switch signal under the following conditions.

| Monitor item | Condition | | Status |
|---------------|-----------------------------|---------|--------|
| RECLINE SW-FR | Reclining switch (forward) | Operate | ON |
| | | Release | OFF |
| RECLINE SW-RR | Reclining switch (backward) | Operate | ON |
| | | Release | OFF |

Is the indication normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-71, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000010259537

1.CHECK RECLINING SWITCH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect power seat switch connector.
3. Turn ignition switch ON.
4. Check voltage between power seat switch harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|-------------------|-----------|--------|--------------------------|
| Power seat switch | | | |
| Connector | Terminals | | |
| B459 | 9 | Ground | 12 |
| | 25 | | |

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK RECLINING SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector.
3. Check continuity between driver seat control unit harness connector and power seat switch harness connector.

| Driver seat control unit | | Power seat switch | | Continuity |
|--------------------------|----------|-------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| B451 | 9 | B459 | 9 | Existed |
| | 25 | | 25 | |

4. Check continuity between driver seat control unit harness connector and ground.

| Driver seat control unit | | Ground | Continuity |
|--------------------------|----------|--------|-------------|
| Connector | Terminal | | |
| B451 | 9 | | Not existed |
| | 25 | | |

Is the inspection result normal?

YES >> Replace driver seat control unit.

RECLINING SWITCH

< DTC/CIRCUIT DIAGNOSIS >

NO >> Repair or replace harness or connector.

3.CHECK RECLINING SWITCH

Refer to [ADP-72, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace power seat switch.

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:0000000010259538

1.CHECK RECLINING SWITCH

1. Turn ignition switch OFF.
2. Disconnect power seat switch (reclining switch) connector.
3. Check continuity between power seat switch (reclining switch) terminals.

| Power seat switch (Reclining switch) | | Condition | | Continuity |
|--------------------------------------|----|-----------------------------|-------------|-------------|
| Terminal | | | | |
| 9 | 43 | Reclining switch (backward) | Operate | Existed |
| | | | Release | Not existed |
| Reclining switch (forward) | | Operate | Existed | |
| | | Release | Not existed | |
| 25 | | | | |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace power seat switch.

LIFTING SWITCH (FRONT)

< DTC/CIRCUIT DIAGNOSIS >

LIFTING SWITCH (FRONT)

Component Function Check

INFOID:0000000010259539

1.CHECK FUNCTION

1. Select "LIFT FR SW-UP", "LIFT FR SW-DN" in "Data monitor" mode using CONSULT.
2. Check lifting switch (front) signal under the following conditions.

| Monitor item | Condition | | Status |
|---------------|-----------------------------|---------|--------|
| LIFT FR SW-UP | Lifting switch front (up) | Operate | ON |
| | | Release | OFF |
| LIFT FR SW-DN | Lifting switch front (down) | Operate | ON |
| | | Release | OFF |

Is the indication normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-73. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000010259540

1.CHECK LIFTING SWITCH (FRONT) INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect power seat switch connector.
3. Turn ignition switch ON.
4. Check voltage between power seat switch harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|-------------------|-----------|--------|--------------------------|
| Power seat switch | | | |
| Connector | Terminals | | |
| B459 | 10 | Ground | 12 |
| | 26 | | |

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK LIFTING SWITCH (FRONT) CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector.
3. Check continuity between driver seat control unit harness connector and power seat switch harness connector.

| Driver seat control unit | | Power seat switch | | Continuity |
|--------------------------|----------|-------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| B451 | 10 | B459 | 10 | Existed |
| | 26 | | 26 | |

4. Check continuity between driver seat control unit harness connector and ground.

| Driver seat control unit | | Ground | Continuity |
|--------------------------|----------|--------|-------------|
| Connector | Terminal | | |
| B451 | 10 | | Not existed |
| | 26 | | |

Is the inspection result normal?

YES >> Replace driver seat control unit.

LIFTING SWITCH (FRONT)

< DTC/CIRCUIT DIAGNOSIS >

NO >> Repair or replace harness or connector.

3.CHECK LIFTING SWITCH (FRONT)

Refer to [ADP-74, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace power seat switch.

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:000000010259541

1.CHECK LIFTING SWITCH (FRONT)

1. Turn ignition switch OFF.
2. Disconnect power seat switch (lifting switch front) connector.
3. Check continuity between power seat switch (lifting switch front) terminals.

| Power seat switch (lifting switch front) | | Condition | | Continuity |
|--|----|-----------------------------|---------|-------------|
| Terminal | | | | |
| 10 | 43 | Lifting switch front (down) | Operate | Existed |
| | | | Release | Not existed |
| 26 | | Lifting switch front (up) | Operate | Existed |
| | | | Release | Not existed |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace power seat switch.

LIFTING SWITCH (REAR)

< DTC/CIRCUIT DIAGNOSIS >

LIFTING SWITCH (REAR)

Component Function Check

INFOID:0000000010259542

1.CHECK FUNCTION

1. Select "LIFT RR SW-UP", "LIFT RR SW-DN" in "Data monitor" mode using CONSULT.
2. Check lifting switch (rear) signal under the following conditions.

| Monitor item | Condition | | Status |
|---------------|----------------------------|---------|--------|
| LIFT RR SW-UP | Lifting switch rear (up) | Operate | ON |
| | | Release | OFF |
| LIFT RR SW-DN | Lifting switch rear (down) | Operate | ON |
| | | Release | OFF |

Is the indication normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-75. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000010259543

1.CHECK LIFTING SWITCH (REAR) INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect power seat switch connector.
3. Turn ignition switch ON.
4. Check voltage between power seat switch harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|-------------------|-----------|--------|--------------------------|
| Power seat switch | | | |
| Connector | Terminals | | |
| B459 | 11 | Ground | 12 |
| | 27 | | |

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK LIFTING SWITCH (REAR) CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector.
3. Check continuity between driver seat control unit harness connector and power seat switch harness connector.

| Driver seat control unit | | Power seat switch | | Continuity |
|--------------------------|----------|-------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| B451 | 11 | B459 | 11 | Existed |
| | 27 | | 27 | |

4. Check continuity between driver seat control unit harness connector and ground.

| Driver seat control unit | | Ground | Continuity |
|--------------------------|----------|--------|-------------|
| Connector | Terminal | | |
| B451 | 11 | | Not existed |
| | 27 | | |

Is the inspection result normal?

YES >> Replace driver seat control unit.

LIFTING SWITCH (REAR)

< DTC/CIRCUIT DIAGNOSIS >

NO >> Repair or replace harness or connector.

3.CHECK LIFTING SWITCH (REAR)

Refer to [ADP-76, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace power seat switch.

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:0000000010259544

1.CHECK LIFTING SWITCH (REAR)

1. Turn ignition switch OFF.
2. Disconnect power seat switch (lifting switch rear) connector.
3. Check continuity between power seat switch (lifting switch rear) terminals.

| Power seat switch (lifting switch rear) | | Condition | | Continuity |
|---|----|----------------------------|---------|-------------|
| Terminal | | | | |
| 11 | 43 | Lifting switch rear (down) | Operate | Existed |
| | | | Release | Not existed |
| 27 | | Lifting switch rear (up) | Operate | Existed |
| | | | Release | Not existed |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace power seat switch.

TILT SWITCH

< DTC/CIRCUIT DIAGNOSIS >

TILT SWITCH

Component Function Check

INFOID:0000000010259545

1.CHECK FUNCTION

1. Select "TILT SW-UP", "TILT SW-DOWN" in "Data monitor" mode using CONSULT.
2. Check tilt switch signal under the following conditions.

| Monitor item | Condition | | Status |
|--------------|--------------------|---------|--------|
| TILT SW-UP | Tilt switch (up) | Operate | ON |
| | | Release | OFF |
| TILT SW-DOWN | Tilt switch (down) | Operate | ON |
| | | Release | OFF |

Is the indication normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-77. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000010259546

1.CHECK TILT SWITCH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect tilt & telescopic switch connector.
3. Turn ignition switch ON.
4. Check voltage between tilt & telescopic switch harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|--------------------------|-----------|--------|--------------------------|
| Tilt & telescopic switch | | | |
| Connector | Terminals | | |
| M102 | 2 | Ground | 5 |
| | 3 | | |

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK TILT SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit connector.
3. Check continuity between automatic drive positioner control unit harness connector and tilt & telescopic switch harness connector.

| Automatic drive positioner control unit | | Tilt & telescopic switch | | Continuity |
|---|----------|--------------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M75 | 1 | M102 | 2 | Existed |
| | 13 | | 3 | |

4. Check continuity between automatic drive positioner control unit harness connector and ground.

| Automatic drive positioner control unit | | Ground | Continuity |
|---|----------|--------|-------------|
| Connector | Terminal | | |
| M75 | 1 | | Not existed |
| | 13 | | |

Is the inspection result normal?

YES >> Replace automatic drive positioner control unit.

TILT SWITCH

< DTC/CIRCUIT DIAGNOSIS >

NO >> Repair or replace harness or connector.

3.CHECK TILT SWITCH

Refer to [ADP-78, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace tilt & telescopic switch.

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:0000000010259547

1.CHECK TILT SWITCH

1. Turn ignition switch OFF.
2. Disconnect tilt & telescopic switch connector.
3. Check continuity between tilt & telescopic switch terminals.

| Tilt switch | | Condition | | Continuity |
|-------------|---|------------------------|---------|-------------|
| Terminal | | | | |
| 2 | 1 | Tilt switch (upward) | Operate | Existed |
| | | | Release | Not existed |
| 3 | | Tilt switch (downward) | Operate | Existed |
| | | | Release | Not existed |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace tilt & telescopic switch.

TELESCOPIC SWITCH

< DTC/CIRCUIT DIAGNOSIS >

TELESCOPIC SWITCH

Component Function Check

INFOID:0000000010259548

1.CHECK FUNCTION

1. Select "TELESCO SW-FR", "TELESCO SW-RR" in "Data monitor" mode using CONSULT.
2. Check telescopic switch signal under the following conditions.

| Monitor item | Condition | | Status |
|---------------|------------------------------|---------|--------|
| TELESCO SW-FR | Telescopic switch (forward) | Operate | ON |
| | | Release | OFF |
| TELESCO SW-RR | Telescopic switch (backward) | Operate | ON |
| | | Release | OFF |

Is the indication normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-79. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000010259549

1.CHECK TELESCOPIC SWITCH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect tilt & telescopic switch connector.
3. Turn ignition switch ON.
4. Check voltage between tilt & telescopic switch harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|--------------------------|-----------|--------|--------------------------|
| Tilt & telescopic switch | | | |
| Connector | Terminals | | |
| M102 | 5 | Ground | 5 |
| | 4 | | |

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK TELESCOPIC SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit connector.
3. Check continuity between automatic drive positioner control unit harness connector and tilt & telescopic switch harness connector.

| Automatic drive positioner control unit | | Tilt & telescopic switch | | Continuity |
|---|----------|--------------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M75 | 7 | M102 | 5 | Existed |
| | 19 | | 4 | |

4. Check continuity between automatic drive positioner control unit harness connector and ground.

| Automatic drive positioner control unit | | Ground | Continuity |
|---|----------|--------|-------------|
| Connector | Terminal | | |
| M75 | 7 | | Not existed |
| | 19 | | |

Is the inspection result normal?

YES >> Replace automatic drive positioner control unit.

TELESCOPIC SWITCH

< DTC/CIRCUIT DIAGNOSIS >

NO >> Repair or replace harness or connector.

3.CHECK TELESCOPIC SWITCH

Refer to [ADP-80, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace tilt & telescopic switch.

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:0000000010259550

1.CHECK TELESCOPIC SWITCH

1. Turn ignition switch OFF.
2. Disconnect tilt & telescopic switch connector.
3. Check continuity between tilt & telescopic switch terminals.

| Telescopic switch | | Condition | | Continuity |
|-------------------|---|------------------------------|---------|-------------|
| Terminal | | | | |
| 5 | 1 | Telescopic switch (forward) | Operate | Existed |
| | | | Release | Not existed |
| 4 | | Telescopic switch (backward) | Operate | Existed |
| | | | Release | Not existed |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace tilt & telescopic switch.

SEAT MEMORY SWITCH

< DTC/CIRCUIT DIAGNOSIS >

SEAT MEMORY SWITCH

Component Function Check

INFOID:0000000010259551

1.CHECK FUNCTION

1. Select "MEMORY SW 1", "MEMORY SW 2", "SET SW" in "Data monitor" mode using CONSULT.
2. Check seat memory switch signal under the following conditions.

| Monitor item | Condition | | Status |
|--------------|-----------------|---------|--------|
| MEMORY SW 1 | Memory switch 1 | Push | ON |
| | | Release | OFF |
| MEMORY SW 2 | Memory switch 2 | Push | ON |
| | | Release | OFF |
| SET SW | Set switch | Push | ON |
| | | Release | OFF |

Is the indication normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-81, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000010259552

1.CHECK SEAT MEMORY SWITCH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect seat memory switch connector.
3. Turn ignition switch ON.
4. Check voltage between seat memory switch harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|--------------------|-----------|--------|--------------------------|
| Seat memory switch | | | |
| Connector | Terminals | | |
| D13 | 1 | Ground | 5 |
| | 2 | | |
| | 3 | | |

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK SEAT MEMORY SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector.
3. Check continuity between driver seat control unit harness connector and seat memory switch harness connector.

| Driver seat control unit | | Seat memory switch | | Continuity |
|--------------------------|----------|--------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| B451 | 6 | D13 | 2 | Existed |
| | 22 | | 1 | |
| | 28 | | 3 | |

4. Check continuity between driver seat control unit harness connector and ground.

SEAT MEMORY SWITCH

< DTC/CIRCUIT DIAGNOSIS >

| Driver seat control unit | | Ground | Continuity |
|--------------------------|----------|--------|-------------|
| Connector | Terminal | | |
| B451 | 6 | | Not existed |
| | 22 | | |
| | 28 | | |

Is the inspection result normal?

YES >> Replace driver seat control unit.

NO >> Repair or replace harness or connector.

3.CHECK SEAT MEMORY SWITCH GROUND CIRCUIT

Check continuity between seat memory switch harness connector and ground.

| Seat memory switch | | Ground | Continuity |
|--------------------|----------|--------|------------|
| Connector | Terminal | | |
| D13 | 4 | | Existed |

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness or connector.

4.CHECK SEAT MEMORY SWITCH

Refer to [ADP-82. "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace seat memory switch.

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-43. "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:0000000010259553

1.CHECK SEAT MEMORY SWITCH

1. Turn ignition switch OFF.
2. Disconnect seat memory switch connector.
3. Check continuity between seat memory switch terminals.

| Seat memory switch | | Condition | | Continuity |
|--------------------|---|-----------------|-------------|-------------|
| Terminal | | | | |
| 1 | 4 | Memory switch 1 | Push | Existed |
| | | | Release | Not existed |
| Memory switch 2 | | Push | Existed | |
| | | Release | Not existed | |
| 3 | | Set switch | Push | Existed |
| | | | Release | Not existed |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace seat memory switch.

DOOR MIRROR REMOTE CONTROL SWITCH

< DTC/CIRCUIT DIAGNOSIS >

DOOR MIRROR REMOTE CONTROL SWITCH CHANGEOVER SWITCH

CHANGEOVER SWITCH : Component Function Check

INFOID:0000000010259554

1.CHECK CHANGEOVER SWITCH FUNCTION

Check the operation on "MIR CHNG SW-R" or "MIR CHNG SW-L" in "DATA MONITOR" mode using CONSULT.

| Monitor item | Condition |
|-----------------|---|
| MIR CHNG SW-R/L | When operating the changeover toward the right or left side. : ON |
| | Other than the above. : OFF |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Refer to [ADP-83, "CHANGEOVER SWITCH : Diagnosis Procedure"](#).

CHANGEOVER SWITCH : Diagnosis Procedure

INFOID:0000000010259555

1.CHECK CHANGEOVER SWITCH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect power window main switch (door mirror remote control switch) connector.
3. Turn ignition switch ON.
4. Check voltage between power window main switch (door mirror remote control switch) harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|---|----------|--------|--------------------------|
| Power window main switch (door mirror remote control switch) | | | |
| Connector | Terminal | | |
| D80 | 23 | Ground | 5 |
| | 28 | | |

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK CHANGEOVER SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit connector.
3. Check continuity between automatic drive positioner control unit harness connector and power window main switch (door mirror remote control switch) harness connector.

| Automatic drive positioner control unit | | Power window main switch (door mirror remote control switch) | | Continuity |
|---|----------|---|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M75 | 2 | D80 | 28 | Existed |
| | 14 | | 23 | |

4. Check continuity between automatic drive positioner control unit harness connector and ground.

| Automatic drive positioner control unit | | Ground | Continuity |
|---|----------|--------|-------------|
| Connector | Terminal | | |
| M75 | 2 | | Not existed |
| | 14 | | |

Is the inspection result normal?

DOOR MIRROR REMOTE CONTROL SWITCH

< DTC/CIRCUIT DIAGNOSIS >

- YES >> Replace automatic drive positioner control unit.
NO >> Repair or replace harness.

3.CHECK DOOR MIRROR REMOTE CONTROL SWITCH GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between power window main switch (door mirror remote control switch) harness connector and ground.

| Power window main switch (door mirror remote control switch) | | Ground | Continuity |
|---|----------|--------|------------|
| Connector | Terminal | | Existed |
| D5 | 7 | | |

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair or replace harness.

4.CHECK CHANGEOVER SWITCH

Check door mirror remote control switch (changeover switch).

Refer to [ADP-84. "CHANGEOVER SWITCH : Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Replace power window main switch (door mirror remote control switch).

5.CHECK INTERMITTENT INCIDENT

Check intermittent incident.

Refer to [GI-43. "Intermittent Incident"](#).

>> INSPECTION END

CHANGEOVER SWITCH : Component Inspection

INFOID:0000000010259556

1.CHECK CHANGEOVER SWITCH

1. Turn ignition switch OFF.
2. Disconnect power window main switch (door mirror remote control switch) connector.
3. Check continuity between power window main switch (door mirror remote control switch) terminals.

| Power window main switch (door mirror remote control switch) | | Condition | | Continuity |
|---|---|-------------------|----------------------|-------------|
| Terminal | | | | |
| 23 | 7 | Changeover switch | LEFT | Existed |
| | | | Other than the above | Not existed |
| 28 | | | RIGHT | Existed |
| | | | Other than the above | Not existed |

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Replace power window main switch (door mirror remote control switch).

MIRROR SWITCH

MIRROR SWITCH : Component Function Check

INFOID:0000000010259557

1.CHECK MIRROR SWITCH FUNCTION

Check the operation on "MIR CON SW-UP/DN" and "MIR CON SW-RH/LH" in "DATA MONITOR" mode using CONSULT.

DOOR MIRROR REMOTE CONTROL SWITCH

< DTC/CIRCUIT DIAGNOSIS >

| Monitor item | Condition | |
|------------------|---|-------|
| MIR CON SW-UP/DN | When operating the mirror switch toward the up or down side. | : ON |
| | Other than the above. | : OFF |
| MIR CON SW-RH/LH | When operating the mirror switch toward the right or left side. | : ON |
| | Other than the above. | : OFF |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Refer to [ADP-85. "MIRROR SWITCH : Diagnosis Procedure"](#).

MIRROR SWITCH : Diagnosis Procedure

INFOID:0000000010259558

1.CHECK MIRROR SWITCH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect power window main switch (door mirror remote control switch) connector.
3. Turn ignition switch ON.
4. Check voltage between power window main switch (door mirror remote control switch) harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|---|----------|--------|--------------------------|
| Power window main switch (door mirror remote control switch) | | | |
| Connector | Terminal | | |
| D80 | 27 | Ground | 5 |
| | 24 | | |
| | 26 | | |
| | 25 | | |

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK MIRROR SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit connector.
3. Check continuity between automatic drive positioner control unit harness connector and power window main switch (door mirror remote control switch) harness connector.

| Automatic drive positioner control unit | | Power window main switch (door mirror remote control switch) | | Continuity |
|---|----------|---|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M75 | 3 | D80 | 26 | Existed |
| | 4 | | 24 | |
| | 15 | | 25 | |
| | 16 | | 27 | |

4. Check continuity between automatic drive positioner control unit harness connector and ground.

| Automatic drive positioner control unit | | Ground | Continuity |
|---|----------|--------|-------------|
| Connector | Terminal | | |
| M75 | 3 | Ground | Not existed |
| | 4 | | |
| | 15 | | |
| | 16 | | |

DOOR MIRROR REMOTE CONTROL SWITCH

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> Replace automatic drive positioner control unit.

NO >> Repair or replace harness.

3.CHECK DOOR MIRROR REMOTE CONTROL SWITCH GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between power window main switch (door mirror remote control switch) harness connector and ground.

| Power window main switch (door mirror remote control switch) | | Ground | Continuity |
|---|----------|--------|------------|
| Connector | Terminal | | |
| D5 | 7 | | Existed |

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

4.CHECK MIRROR SWITCH

Check door mirror remote control switch (mirror switch).

Refer to [ADP-86, "MIRROR SWITCH : Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace power window main switch (door mirror remote control switch).

5.CHECK INTERMITTENT INCIDENT

Check intermittent incident.

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

MIRROR SWITCH : Component Inspection

INFOID:0000000010259559

1.CHECK MIRROR SWITCH

1. Turn ignition switch OFF.
2. Disconnect power window main switch (door mirror remote control switch) connector.
3. Check continuity between power window main switch (door mirror remote control switch) terminals.

| Power window main switch (door mirror remote control switch) | | Condition | | Continuity |
|---|---|---------------|----------------------|-------------|
| Terminal | | | | |
| 27 | 7 | Mirror switch | RIGHT | Existed |
| | | | Other than the above | Not existed |
| 24 | | | LEFT | Existed |
| | | | Other than the above | Not existed |
| 26 | | | UP | Existed |
| | | | Other than the above | Not existed |
| 25 | | | DOWN | Existed |
| | | | Other than the above | Not existed |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace power window main switch (door mirror remote control switch).

POWER SEAT SWITCH GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

POWER SEAT SWITCH GROUND CIRCUIT

Diagnosis Procedure

INFOID:0000000010259560

1.CHECK POWER SEAT SWITCH GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect power seat switch connector.
3. Check continuity between power seat switch harness connector and ground.

| Power seat switch | | Ground | Continuity |
|-------------------|----------|--------|------------|
| Connector | Terminal | | |
| B459 | 43 | | Existed |

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).
NO >> Repair or replace harness or connector.

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

TILT & TELESCOPIC SWITCH GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

TILT & TELESCOPIC SWITCH GROUND CIRCUIT

Diagnosis Procedure

INFOID:0000000010259561

1. CHECK TILT & TELESCOPIC SWITCH GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect tilt & telescopic switch connector.
3. Check continuity between tilt & telescopic switch harness connector and ground.

| Tilt & telescopic switch | | Ground | Continuity |
|--------------------------|----------|--------|------------|
| Connector | Terminal | | |
| M102 | 1 | | Existed |

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).
- NO >> Repair or replace harness.

SLIDING SENSOR

< DTC/CIRCUIT DIAGNOSIS >

SLIDING SENSOR

Component Function Check

INFOID:0000000010259562

1.CHECK FUNCTION

1. Select "SLIDE PULSE" in "Data monitor" mode using CONSULT.
2. Check sliding sensor signal under the following conditions.

| Monitor item | Condition | | Value |
|--------------|--------------|--------------------|---------------------------------|
| SLIDE PULSE | Seat sliding | Operate (forward) | Change (increase)* ¹ |
| | | Operate (backward) | Change (decrease)* ¹ |
| | | Release | No change* ¹ |

*¹: The value at the seat position attained when the battery is connected is considered to be 32768.

Is the indication normal?

YES >> INSPECTION END


NO >> Perform diagnosis procedure. Refer to [ADP-89, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000010259563

1.CHECK SLIDING SENSOR SIGNAL

1. Turn ignition switch ON.
2. Read voltage signal between driver seat control unit harness connector and ground with oscilloscope.
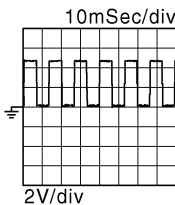
| (+) | | (-) | Condition | | Signal (Reference value) |
|--------------------------|-----------|--------|--------------|----------------------|---|
| Driver seat control unit | | | | | |
| Connector | Terminals | | | | |
| B451 | 18 | Ground | Seat sliding | Operate |  |
| | | | | Other than the above | 0 or 5 |

Is the inspection result normal?

YES >> Replace driver seat control unit.

NO >> GO TO 2.

2.CHECK SLIDING SENSOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit and sliding sensor connector.
3. Check continuity between driver seat control unit harness connector and sliding sensor harness connector.

| Driver seat control unit | | Sliding motor | | Continuity |
|--------------------------|----------|---------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| B451 | 18 | B461 | 18 | Existed |

4. Check continuity between driver seat control unit harness connector and ground.

SLIDING SENSOR

< DTC/CIRCUIT DIAGNOSIS >

| Driver seat control unit | | Ground | Continuity |
|--------------------------|----------|--------|-------------|
| Connector | Terminal | | |
| B451 | 18 | | Not existed |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness or connector.

3.CHECK SLIDING SENSOR POWER SUPPLY

1. Connect driver seat control unit connector.
2. Turn ignition switch ON.
3. Check voltage between sliding motor harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|---------------|-----------|--------|--------------------------|
| Sliding motor | | | |
| Connector | Terminals | | |
| B461 | 12 | Ground | 12 |

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4.CHECK SLIDING SENSOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector.
3. Check continuity between driver seat control unit harness connector and sliding motor harness connector.

| Driver seat control unit | | Sliding motor | | Continuity |
|--------------------------|----------|---------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| B451 | 12 | B461 | 12 | Existed |

4. Check continuity between driver seat control unit harness connector and ground.

| Driver seat control unit | | Ground | Continuity |
|--------------------------|----------|--------|-------------|
| Connector | Terminal | | |
| B451 | 12 | | Not existed |

Is the inspection result normal?

YES >> Replace driver seat control unit.

NO >> Repair or replace harness or connector.

5.CHECK SLIDING SENSOR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between sliding sensor harness connector and ground.

| Sliding motor | | Ground | Continuity |
|---------------|----------|--------|------------|
| Connector | Terminal | | |
| B461 | 43 | | Existed |

Is the inspection result normal?

YES >> Replace sliding motor.

NO >> Repair or replace harness or connector.

RECLINING SENSOR

< DTC/CIRCUIT DIAGNOSIS >

RECLINING SENSOR

Component Function Check

INFOID:0000000010259564

1.CHECK FUNCTION

1. Select "RECLN PULSE" in "Data monitor" mode using CONSULT.
2. Check reclining sensor signal under the following conditions.

| Monitor item | Condition | | Value |
|--------------|----------------|--------------------|---------------------------------|
| RECLN PULSE | Seat reclining | Operate (forward) | Change (increase)* ¹ |
| | | Operate (backward) | Change (decrease)* ¹ |
| | | Release | No change* ¹ |

*¹: The value at the seat position attained when the battery is connected is considered to be 32768.

Is the indication normal?

YES >> INSPECTION END


NO >> Perform diagnosis procedure. Refer to [ADP-91, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000010259565

1.CHECK RECLINING SENSOR SIGNAL

1. Turn ignition switch ON.
2. Read voltage signal between driver seat control unit harness connector and ground with oscilloscope.
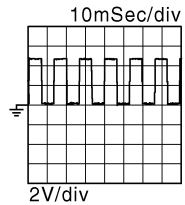
| (+) Driver seat control unit | | (-) | Condition | | Signal (Reference value) |
|------------------------------|-----------|--------|----------------|----------------------|---|
| Connector | Terminals | | | | |
| B451 | 4 | Ground | Seat reclining | Operate |  |
| | | | | Other than the above | 0 or 5 |

Is the inspection result normal?

YES >> Replace driver seat control unit.

NO >> GO TO 2.

2.CHECK RECLINING SENSOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit and reclining motor connector.
3. Check continuity between driver seat control unit harness connector and reclining motor harness connector.

| Driver seat control unit | | Reclining motor | | Continuity |
|--------------------------|----------|-----------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| B451 | 4 | B454 | 4 | Existed |

4. Check continuity between driver seat control unit harness connector and ground.

RECLINING SENSOR

< DTC/CIRCUIT DIAGNOSIS >

| Driver seat control unit | | Ground | Continuity |
|--------------------------|----------|--------|-------------|
| Connector | Terminal | | |
| B451 | 4 | | Not existed |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness or connector.

3.CHECK RECLINING SENSOR POWER SUPPLY

1. Connect driver seat control unit connector.
2. Turn ignition switch ON.
3. Check voltage between reclining motor harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|-----------------|-----------|--------|--------------------------|
| Reclining motor | | | |
| Connector | Terminals | | |
| B454 | 12 | Ground | 12 |

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4.CHECK RECLINING SENSOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector.
3. Check continuity between driver seat control unit harness connector and reclining motor harness connector.

| Driver seat control unit | | Reclining motor | | Continuity |
|--------------------------|----------|-----------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| B451 | 12 | B454 | 12 | Existed |

4. Check continuity between driver seat control unit harness connector and ground.

| Driver seat control unit | | Ground | Continuity |
|--------------------------|----------|--------|-------------|
| Connector | Terminal | | |
| B451 | 12 | | Not existed |

Is the inspection result normal?

YES >> Replace driver seat control unit.

NO >> Repair or replace harness or connector.

5.CHECK RECLINING SENSOR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between reclining motor harness connector and ground.

| Reclining motor | | Ground | Continuity |
|-----------------|----------|--------|------------|
| Connector | Terminal | | |
| B454 | 43 | | Existed |

Is the inspection result normal?

YES >> Replace reclining motor.

NO >> Repair or replace harness or connector.

LIFTING SENSOR (FRONT)

< DTC/CIRCUIT DIAGNOSIS >

LIFTING SENSOR (FRONT)

Component Function Check

INFOID:0000000010259566

1.CHECK FUNCTION

1. Select "LIFT FR PULSE" in "Data monitor" mode using CONSULT.
2. Check the lifting sensor (front) signal under the following conditions.

| Monitor item | Condition | | Value |
|---------------|----------------------|----------------|---------------------|
| LIFT FR PULSE | Seat lifting (front) | Operate (up) | Change (increase)*1 |
| | | Operate (down) | Change (decrease)*1 |
| | | Release | No change*1 |

*1: The value at the seat position attained when the battery is connected is considered to be 32768.

Is the indication normal?

YES >> INSPECTION END


NO >> Perform diagnosis procedure. Refer to [ADP-93, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000010259567

1.CHECK LIFTING SENSOR (FRONT) SIGNAL

1. Turn ignition switch ON.
2. Read the voltage signal driver seat control unit harness connector and ground with an oscilloscope.
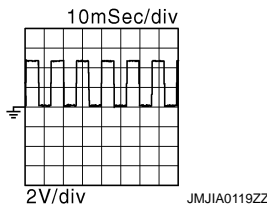
| (+) | | (-) | Condition | | Voltage (V) (Approx.) |
|--------------------------|-----------|--------|-------------------------|-------------------------|---|
| Driver seat control unit | | | | | |
| Connector | Terminals | | | | |
| B451 | 19 | Ground | Seat Lifting (front) | Operate |  |
| | | | | Other than the above | 0 or 5 |

Is the inspection result normal?

YES >> Replace driver seat control unit.

NO >> GO TO 2.

2.CHECK LIFTING SENSOR (FRONT) CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit and lifting motor (front) connector.
3. Check continuity between driver seat control unit harness connector and lifting motor (front) harness connector.

| Driver seat control unit | | Lifting motor (front) | | Continuity |
|--------------------------|----------|-----------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| B451 | 19 | B455 | 19 | Existed |

4. Check continuity between driver seat control unit harness connector and ground.

LIFTING SENSOR (FRONT)

< DTC/CIRCUIT DIAGNOSIS >

| Driver seat control unit | | Ground | Continuity |
|--------------------------|----------|--------|-------------|
| Connector | Terminal | | |
| B451 | 19 | | Not existed |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness or connector.

3.CHECK LIFTING SENSOR (FRONT) POWER SUPPLY

1. Connect driver seat control unit connector.
2. Turn ignition switch ON.
3. Check voltage between lifting motor (front) harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|-----------------------|-----------|--------|--------------------------|
| Lifting motor (front) | | | |
| Connector | Terminals | | |
| B455 | 12 | Ground | 12 |

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4.CHECK LIFTING SENSOR (FRONT) POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector.
3. Check continuity between driver seat control unit harness connector and lifting motor (front) harness connector.

| Driver seat control unit | | Lifting motor (front) | | Continuity |
|--------------------------|----------|-----------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| B451 | 12 | B455 | 12 | Existed |

4. Check continuity between driver seat control unit harness connector and ground.

| Driver seat control unit | | Ground | Continuity |
|--------------------------|----------|--------|-------------|
| Connector | Terminal | | |
| B451 | 12 | | Not existed |

Is the inspection result normal?

YES >> Replace driver seat control unit.

NO >> Repair or replace harness or connector.

5.CHECK LIFTING SENSOR (FRONT) GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between lifting motor (front) harness connector and ground.

| Lifting motor (front) | | Ground | Continuity |
|-----------------------|----------|--------|------------|
| Connector | Terminal | | |
| B455 | 43 | | Existed |

Is the inspection result normal?

YES >> Replace lifting motor (front).

NO >> Repair or replace harness or connector.

LIFTING SENSOR (REAR)

< DTC/CIRCUIT DIAGNOSIS >

LIFTING SENSOR (REAR)

Component Function Check

INFOID:0000000010259568

1.CHECK FUNCTION

1. Select "LIFT RR PULSE" in "Data monitor" mode using CONSULT.
2. Check lifting sensor (rear) signal under the following conditions.

| Monitor item | Condition | | Value |
|---------------|---------------------|----------------|---------------------|
| LIFT RR PULSE | Seat lifting (rear) | Operate (up) | Change (increase)*1 |
| | | Operate (down) | Change (decrease)*1 |
| | | Release | No change*1 |

*1: The value at the seat position attained when the battery is connected is considered to be 32768.

Is the indication normal?

YES >> INSPECTION END


NO >> Perform diagnosis procedure. Refer to [ADP-95, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000010259569

1.CHECK LIFTING SENSOR (REAR) SIGNAL

1. Turn ignition switch ON.
2. Read voltage signal between driver seat control unit harness connector and ground with oscilloscope.
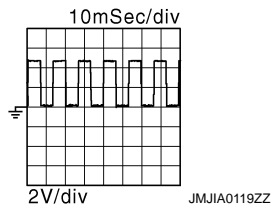
| (+) Driver seat control unit | | (-) | Condition | | Voltage (V) (Approx.) |
|------------------------------|-----------|--------|------------------------|-------------------------|---|
| Connector | Terminals | | | | |
| B451 | 20 | Ground | Seat Lifting (rear) | Operate |  |
| | | | | Other than the above | 0 or 5 |

Is the inspection result normal?

YES >> Replace driver seat control unit.

NO >> GO TO 2.

2.CHECK LIFTING SENSOR (REAR) CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit and lifting motor (rear) connector.
3. Check the continuity between driver seat control unit harness connector and lifting motor (rear) harness connector.

| Driver seat control unit | | Lifting motor (rear) | | Continuity |
|--------------------------|----------|----------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| B451 | 20 | B456 | 20 | Existed |

4. Check the continuity between driver seat control unit harness connector and ground.

LIFTING SENSOR (REAR)

< DTC/CIRCUIT DIAGNOSIS >

| Driver seat control unit | | Ground | Continuity |
|--------------------------|----------|--------|-------------|
| Connector | Terminal | | |
| B451 | 20 | | Not existed |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness or connector.

3.CHECK LIFTING SENSOR (REAR) POWER SUPPLY

1. Connect driver seat control unit connector.
2. Turn ignition switch ON.
3. Check the voltage between lifting motor (rear) harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|----------------------|-----------|--------|--------------------------|
| Lifting motor (rear) | | | |
| Connector | Terminals | | |
| B456 | 12 | Ground | 12 |

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4.CHECK LIFTING SENSOR (REAR) POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector.
3. Check the continuity between driver seat control unit harness connector and lifting motor (rear) harness connector.

| Driver seat control unit | | Lifting motor (rear) | | Continuity |
|--------------------------|----------|----------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| B451 | 12 | B456 | 12 | Existed |

4. Check the continuity between driver seat control unit harness connector and ground.

| Driver seat control unit | | Ground | Continuity |
|--------------------------|----------|--------|-------------|
| Connector | Terminal | | |
| B451 | 12 | | Not existed |

Is the inspection result normal?

YES >> Replace driver seat control unit.

NO >> Repair or replace harness or connector.

5.CHECK LIFTING SENSOR (REAR) GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check the continuity between lifting motor (rear) harness connector and ground.

| Lifting motor (rear) | | Ground | Continuity |
|----------------------|----------|--------|------------|
| Connector | Terminal | | |
| B456 | 43 | | Existed |

Is the inspection result normal?

YES >> Replace lifting motor (rear).

NO >> Repair or replace harness or connector.

TILT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

TILT SENSOR

Component Function Check

INFOID:0000000010259570

1.CHECK FUNCTION

1. Select "TILT PULSE" in "Data monitor" mode using CONSULT.
2. Check tilt sensor signal under the following conditions.

| Monitor item | Condition | | Value |
|--------------|-----------------|----------------|---------------------|
| TILT PULSE | Steering column | Operate (up) | Change (increase)*1 |
| | | Operate (down) | Change (decrease)*1 |
| | | Release | No change*1 |

*1: The value at the seat position attained when the battery is connected is considered to be 32768.

Is the indication normal?

YES >> INSPECTION END


NO >> Perform diagnosis procedure. Refer to [ADP-97, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000010259571

1.CHECK TILT SENSOR SIGNAL

1. Turn ignition switch ON.
2. Check voltage signal between driver seat control unit connector and ground with oscilloscope.
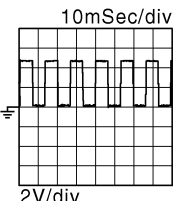
| (+) Driver seat control unit | | (-) | Condition | | Voltage (V) (Approx.) |
|------------------------------|-----------|--------|-----------------|----------------------|---|
| Connector | Terminals | | | | |
| B451 | 21 | Ground | Steering column | Operate |  |
| | | | | Other than the above | 0 or 5 |

Is the inspection result normal?

YES >> Replace driver seat control unit.

NO >> GO TO 2.

2.CHECK TILT SENSOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector and tilt motor connector.
3. Check continuity between driver seat control unit harness connector and tilt motor harness connector.

| Driver seat control unit | | Tilt motor | | Continuity |
|--------------------------|----------|------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| B451 | 21 | M116 | 5 | Existed |

4. Check continuity between driver seat control unit harness connector and ground.

| Driver seat control unit | | Ground | Continuity |
|--------------------------|----------|--------|-------------|
| Connector | Terminal | | |
| B451 | 21 | | Not existed |

TILT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness or connector.

3.CHECK TILT SENSOR POWER SUPPLY

1. Turn ignition switch ON.
2. Check voltage between tilt motor harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|------------|-----------|--------|--------------------------|
| Tilt motor | | | |
| Connector | Terminals | | |
| M116 | 4 | Ground | 12 |

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4.CHECK TILT SENSOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit connector.
3. Check continuity between automatic drive positioner control unit harness connector and tilt motor harness connector.

| Automatic drive positioner control unit | | Tilt motor | | Continuity |
|---|----------|------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M104 | 27 | M116 | 4 | Existed |

4. Check continuity between automatic drive positioner control unit harness connector and ground.

| Automatic drive positioner control unit | | Ground | Continuity |
|---|----------|--------|-------------|
| Connector | Terminal | | |
| M104 | 27 | | Not existed |

Is the inspection result normal?

YES >> Replace automatic drive positioner control unit.

NO >> Repair or replace harness or connector.

5.CHECK TILT SENSOR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit connector.
3. Check continuity between automatic drive positioner control unit harness connector and tilt motor harness connector.

| Automatic drive positioner control unit | | Tilt motor | | Continuity |
|---|----------|------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M75 | 20 | M116 | 6 | Existed |

4. Check continuity between automatic drive positioner control unit harness connector and ground.

| Automatic drive positioner control unit | | Ground | Continuity |
|---|----------|--------|-------------|
| Connector | Terminal | | |
| M75 | 20 | | Not existed |

Is the inspection result normal?

YES >> Replace tilt motor.

NO >> Repair or replace harness or connector.

TELESCOPIC SENSOR

< DTC/CIRCUIT DIAGNOSIS >

TELESCOPIC SENSOR

Component Function Check

INFOID:0000000010259572

1.CHECK FUNCTION

1. Select "TELESCO PULSE" in "Data monitor" mode using CONSULT.
2. Check telescopic sensor signal under the following conditions.

| Monitor item | Condition | | Value |
|---------------|-----------------|--------------------|---------------------------------|
| TELESCO PULSE | Steering column | Operate (forward) | Change (increase)* ¹ |
| | | Operate (backward) | Change (decrease)* ¹ |
| | | Release | No change* ¹ |

*¹: The value at the seat position attained when the battery is connected is considered to be 32768.

Is the indication normal?

YES >> INSPECTION END


NO >> Perform diagnosis procedure. Refer to [ADP-99, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000010259573

1.CHECK TELESCOPIC SENSOR SIGNAL

1. Turn ignition switch ON.
2. Check voltage signal between driver seat control unit connector and ground with oscilloscope.
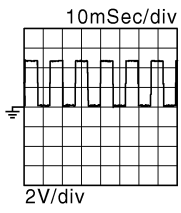
| (+) Driver seat control unit | | (-) | Condition | | Voltage (V) (Approx.) |
|------------------------------|-----------|--------|-----------------|----------------------|---|
| Connector | Terminals | | | | |
| B451 | 5 | Ground | Steering column | Operate |  |
| | | | | Other than the above | 0 or 5 |

Is the inspection result normal?

YES >> Replace driver seat control unit.

NO >> GO TO 2.

2.CHECK TELESCOPIC SENSOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector and telescopic motor connector.
3. Check continuity between driver seat control unit harness connector and telescopic motor harness connector.

| Driver seat control unit | | Telescopic motor | | Continuity |
|--------------------------|----------|------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| B451 | 5 | M117 | 5 | Existed |

4. Check continuity between driver seat control unit harness connector and ground.

TELESCOPIC SENSOR

< DTC/CIRCUIT DIAGNOSIS >

| Driver seat control unit | | Ground | Continuity |
|--------------------------|----------|--------|-------------|
| Connector | Terminal | | |
| B451 | 5 | | Not existed |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness or connector.

3.CHECK TELESCOPIC SENSOR POWER SUPPLY

1. Turn ignition switch ON.
2. Check voltage between telescopic motor harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|------------------|-----------|--------|--------------------------|
| Telescopic motor | | | |
| Connector | Terminals | | |
| M117 | 4 | Ground | 12 |

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4.CHECK TELESCOPIC SENSOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit connector.
3. Check continuity between automatic drive positioner control unit harness connector and telescopic motor harness connector.

| Automatic drive positioner control unit | | Telescopic motor | | Continuity |
|---|----------|------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M104 | 27 | M117 | 4 | Existed |

4. Check continuity between automatic drive positioner control unit harness connector and ground.

| Automatic drive positioner control unit | | Ground | Continuity |
|---|----------|--------|-------------|
| Connector | Terminal | | |
| M104 | 27 | | Not existed |

Is the inspection result normal?

YES >> Replace automatic drive positioner control unit.

NO >> Repair or replace harness or connector.

5.CHECK TELESCOPIC SENSOR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit connector.
3. Check continuity between automatic drive positioner control unit harness connector and telescopic motor harness connector.

| Automatic drive positioner control unit | | Telescopic motor | | Continuity |
|---|----------|------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M75 | 20 | M117 | 6 | Existed |

4. Check continuity between automatic drive positioner control unit harness connector and ground.

| Automatic drive positioner control unit | | Ground | Continuity |
|---|----------|--------|-------------|
| Connector | Terminal | | |
| M75 | 20 | | Not existed |

Is the inspection result normal?

TELESCOPIC SENSOR

< DTC/CIRCUIT DIAGNOSIS >

YES >> Replace telescopic motor.
NO >> Repair or replace harness or connector.

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

MIRROR SENSOR

< DTC/CIRCUIT DIAGNOSIS >

MIRROR SENSOR

DRIVER SIDE

DRIVER SIDE : Component Function Check

INFOID:0000000010259574

1.CHECK FUNCTION

1. Select "MIR/SEN LH U-D", "MIR/SEN LH R-L" in "Data monitor" using CONSULT.
2. Check mirror sensor (driver side) signal under the following condition.

| Monitor item | Condition | Value |
|----------------|---------------------------|---|
| MIR/SEN LH U-D | Door mirror (driver side) | Change between 3.4 [V] (close to peak) 0.6 [V] (close to valley) |
| MIR/SEN LH R-L | | Change between 0.6 [V] (close to left edge) 3.4 [V] (close to right edge) |

Is the indication normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-102, "DRIVER SIDE : Diagnosis Procedure"](#).

DRIVER SIDE : Diagnosis Procedure

INFOID:0000000010259575

1.CHECK DOOR MIRROR (DRIVER SIDE) SENSOR POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect door mirror (driver side) connector.
3. Turn ignition switch ON.
4. Check voltage between door mirror (driver side) harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|---------------------------|-----------|--------|--------------------------|
| Door mirror (driver side) | | | |
| Connector | Terminals | | |
| D3 | 23 | Ground | 5 |

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK DOOR MIRROR (DRIVER SIDE) SENSOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit connector.
3. Check continuity between automatic drive positioner control unit harness connector and door mirror (driver side) harness connector.

| Automatic drive positioner control unit | | Door mirror (driver side) | | Continuity |
|---|----------|---------------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M75 | 21 | D3 | 23 | Existed |

4. Check continuity between automatic drive positioner control unit harness connector and ground.

| Automatic drive positioner control unit | | Ground | Continuity |
|---|----------|--------|-------------|
| Connector | Terminal | | |
| M75 | 21 | | Not existed |

Is the inspection result normal?

YES >> Replace automatic drive positioner control unit.

NO >> Repair or replace harness or connector.

MIRROR SENSOR

< DTC/CIRCUIT DIAGNOSIS >

3.CHECK DOOR MIRROR (DRIVER SIDE) SENSOR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit connector.
3. Check continuity between automatic drive positioner control unit harness connector and door mirror (driver side) harness connector.

| Automatic drive positioner control unit | | Door mirror (driver side) | | Continuity |
|---|----------|---------------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M75 | 20 | D3 | 24 | Existed |

4. Check continuity between automatic drive positioner control unit harness connector and ground.

| Automatic drive positioner control unit | | Ground | Continuity |
|---|----------|--------|-------------|
| Connector | Terminal | | |
| M75 | 20 | | Not existed |

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness or connector.

4.CHECK DOOR MIRROR (DRIVER SIDE) SENSOR CIRCUIT

1. Check continuity between automatic drive positioner control unit harness connector and door mirror (driver side) harness connector.

| Automatic drive positioner control unit | | Door mirror (driver side) | | Continuity |
|---|----------|---------------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M75 | 6 | D3 | 21 | Existed |
| | 18 | | 22 | |

2. Check continuity between automatic drive positioner control unit harness connector and ground.

| Automatic drive positioner control unit | | Ground | Continuity |
|---|----------|--------|-------------|
| Connector | Terminal | | |
| M75 | 6 | | Not existed |
| | 18 | | |

Is the inspection result normal?

YES >> Replace door mirror sensor (built in driver side door mirror).

NO >> Repair or replace harness or connector.

PASSENGER SIDE

PASSENGER SIDE : Component Function Check

INFOID:0000000010259576

1.CHECK FUNCTION

1. Select "MIR/SEN RH U-D", "MIR/SEN RH R-L" in "Data monitor" using CONSULT.
2. Check the mirror sensor (passenger side) signal under the following conditions.

| Monitor item | Condition | Value |
|----------------|------------------------------|---|
| MIR/SEN RH U-D | Door mirror (passenger side) | Change between 3.4 [V] (close to peak) 0.6 [V] (close to valley) |
| MIR/SEN RH R-L | | Change between 3.4 [V] (close to left edge) 0.6 [V] (close to right edge) |

Is the indication normal?

YES >> INSPECTION END

MIRROR SENSOR

< DTC/CIRCUIT DIAGNOSIS >

NO >> Perform diagnosis procedure. Refer to [ADP-104. "PASSENGER SIDE : Diagnosis Procedure"](#).

PASSENGER SIDE : Diagnosis Procedure

INFOID:000000010259577

1.CHECK DOOR MIRROR SENSOR (PASSENGER SIDE) POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect door mirror (passenger side) connector.
3. Turn ignition switch ON.
4. Check voltage between door mirror (passenger side) harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|------------------------------|-----------|--------|--------------------------|
| Door mirror (passenger side) | | | |
| Connector | Terminals | | |
| D23 | 23 | Ground | 5 |

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK DOOR MIRROR (PASSENGER SIDE) SENSOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit connector.
3. Check continuity between automatic drive positioner control unit harness connector and door mirror (passenger side) harness connector.

| Automatic drive positioner control unit | | Door mirror (passenger side) | | Continuity |
|---|----------|------------------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M75 | 21 | D23 | 23 | Existed |

4. Check continuity between automatic drive positioner control unit harness connector and ground.

| Automatic drive positioner control unit | | Ground | Continuity |
|---|----------|--------|-------------|
| Connector | Terminal | | |
| M75 | 21 | | Not existed |

Is the inspection result normal?

YES >> Replace automatic drive positioner control unit.

NO >> Repair or replace harness or connector.

3.CHECK DOOR MIRROR (PASSENGER SIDE) SENSOR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit connector.
3. Check continuity between automatic drive positioner control unit harness connector and door mirror (passenger side) connector.

| Automatic drive positioner control unit | | Door mirror (passenger side) | | Continuity |
|---|----------|------------------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M75 | 20 | D23 | 24 | Existed |

4. Check continuity between automatic drive positioner control unit harness connector and ground.

| Automatic drive positioner control unit | | Ground | Continuity |
|---|----------|--------|-------------|
| Connector | Terminal | | |
| M75 | 20 | | Not existed |

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness or connector.

MIRROR SENSOR

< DTC/CIRCUIT DIAGNOSIS >

4.CHECK DOOR MIRROR (PASSENGER SIDE) SENSOR CIRCUIT

1. Check continuity between automatic drive positioner control unit harness connector and door mirror (passenger side) harness connector.

| Automatic drive positioner control unit | | Door mirror (passenger side) | | Continuity |
|---|----------|------------------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M75 | 5 | D23 | 21 | Existed |
| | 17 | | 22 | |

2. Check continuity between automatic drive positioner control unit harness connector and ground.

| Automatic drive positioner control unit | | Ground | Continuity |
|---|----------|--------|-------------|
| Connector | Terminal | | |
| M75 | 5 | | Not existed |
| | 17 | | |

Is the inspection result normal?

- YES >> Replace door mirror sensor (built in passenger side door mirror).
NO >> Repair or replace harness or connector.

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

SLIDING MOTOR

< DTC/CIRCUIT DIAGNOSIS >

SLIDING MOTOR

Component Function Check

INFOID:000000010259578

1.CHECK FUNCTION

1. Select "SEAT SLIDE" in "Active test" mode using CONSULT.
2. Check the sliding motor operation.

| Test item | | Description | |
|------------|-----|--------------|----------|
| SEAT SLIDE | OFF | Seat sliding | Stop |
| | FR | | Forward |
| | RR | | Backward |

Is the operation of relevant parts normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-106. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000010259579

1.CHECK SLIDING MOTOR INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect sliding motor connector.
3. Turn ignition switch ON.
4. Perform "Active test" ("SEAT SLIDE") using CONSULT.
5. Check voltage between sliding motor harness connector and ground.

| (+) | | (-) | Condition | | Voltage (V) (Approx.) |
|---------------|-----------|--------|------------|---------------|--------------------------|
| Sliding motor | | | | | |
| Connector | Terminals | | | | |
| B461 | 38 | Ground | SEAT SLIDE | OFF | 0 |
| | | | | FR (forward) | 12 |
| | | | | RR (backward) | 0 |
| | 34 | | | OFF | 0 |
| | | | | FR (forward) | 0 |
| | | | | RR (backward) | 12 |

Is the inspection result normal?

YES >> Replace sliding motor (built in seat slide cushion frame).

NO >> GO TO 2.

2.CHECK SLIDING MOTOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector.
3. Check continuity between driver seat control unit harness connector and sliding motor harness connector.

| Driver seat control unit | | Sliding motor | | Continuity |
|--------------------------|----------|---------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| B452 | 34 | B461 | 34 | Existed |
| | 38 | | 38 | |

4. Check continuity between driver seat control unit harness connector and ground.

SLIDING MOTOR

< DTC/CIRCUIT DIAGNOSIS >

| Driver seat control unit | | Ground | Continuity |
|--------------------------|----------|--------|-------------|
| Connector | Terminal | | |
| B452 | 34 | | Not existed |
| | 38 | | |

Is the inspection result normal?

YES >> Replace driver seat control unit.
NO >> Repair or replace harness or connector.

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

RECLINING MOTOR

< DTC/CIRCUIT DIAGNOSIS >

RECLINING MOTOR

Component Function Check

INFOID:0000000010259580

1.CHECK FUNCTION

1. Select "SEAT RECLINING" in "Active test" mode using CONSULT.
2. Check the reclining motor operation.

| Test item | | Description | |
|----------------|-----|----------------|----------|
| SEAT RECLINING | OFF | Seat reclining | Stop |
| | FR | | Forward |
| | RR | | Backward |

Is the operation of relevant parts normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-108. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000010259581

1.CHECK RECLINING MOTOR INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect reclining motor connector.
3. Turn ignition switch ON.
4. Perform "Active test" ("SEAT RECLINING") using CONSULT.
5. Check voltage between reclining motor harness connector and ground.

| (+) | | (-) | Condition | | Voltage (V) (Approx.) |
|-----------------|-----------|--------|----------------|---------------|--------------------------|
| Reclining motor | | | | | |
| Connector | Terminals | | | | |
| B454 | 35 | Ground | SEAT RECLINING | OFF | 0 |
| | | | | FR (forward) | 12 |
| | | | | RR (backward) | 0 |
| | 39 | | | OFF | 0 |
| | | | | FR (forward) | 0 |
| | | | | RR (backward) | 12 |

Is the inspection result normal?

YES >> Replace reclining motor (built in seat back frame).

NO >> GO TO 2.

2.CHECK RECLINING MOTOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector.
3. Check continuity between driver seat control unit harness connector and reclining motor harness connector.

| Driver seat control unit | | Reclining motor | | Continuity |
|--------------------------|----------|-----------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| B452 | 35 | B454 | 35 | Existed |
| | 39 | | 39 | |

4. Check continuity between driver seat control unit harness connector and ground.

RECLINING MOTOR

< DTC/CIRCUIT DIAGNOSIS >

| Driver seat control unit | | Ground | Continuity |
|--------------------------|----------|--------|-------------|
| Connector | Terminal | | |
| B452 | 35 | | Not existed |
| | 39 | | |

Is the inspection result normal?

- YES >> Replace driver seat control unit.
NO >> Repair or replace harness or connector.

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

LIFTING MOTOR (FRONT)

< DTC/CIRCUIT DIAGNOSIS >

LIFTING MOTOR (FRONT)

Component Function Check

INFOID:000000010259582

1.CHECK FUNCTION

1. Select "SEAT LIFTER FR" in "Active test" mode using CONSULT.
2. Check the lifting motor (front) operation.

| Test item | | Description | |
|----------------|-----|----------------------|----------|
| SEAT LIFTER FR | OFF | Seat lifting (front) | Stop |
| | UP | | Upward |
| | DWN | | Downward |

Is the operation of relevant parts normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-110. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000010259583

1.CHECK LIFTING MOTOR (FRONT) INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect lifting motor (front) connector.
3. Turn ignition switch ON.
4. Perform "Active test" ("SEAT LIFTER FR") using CONSULT.
5. Check voltage between lifting motor (front) harness connector and ground.

| (+) | | (-) | Condition | | Voltage (V) (Approx.) |
|-----------------------|-----------|--------|----------------|------------|--------------------------|
| Lifting motor (front) | | | | | |
| Connector | Terminals | | | | |
| B455 | 36 | Ground | SEAT LIFTER FR | OFF | 0 |
| | | | | UP | 0 |
| | | | | DWN (down) | 12 |
| | 40 | | | OFF | 0 |
| | | | | UP | 12 |
| | | | | DWN (down) | 0 |

Is the inspection result normal?

YES >> Replace lifting motor (front) (built in seat cushion frame).

NO >> GO TO 2.

2.CHECK LIFTING MOTOR (FRONT) CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector.
3. Check continuity between driver seat control unit harness connector and lifting motor (front) harness connector.

| Driver seat control unit | | Lifting motor (front) | | Continuity |
|--------------------------|----------|-----------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| B452 | 36 | B455 | 36 | Existed |
| | 40 | | 40 | |

4. Check continuity between driver seat control unit harness connector and ground.

LIFTING MOTOR (FRONT)

< DTC/CIRCUIT DIAGNOSIS >

| Driver seat control unit | | Ground | Continuity |
|--------------------------|----------|--------|-------------|
| Connector | Terminal | | |
| B452 | 36 | | Not existed |
| | 40 | | |

Is the inspection result normal?

- YES >> Replace driver seat control unit.
- NO >> Repair or replace harness or connector.

A

B

C

D

E

F

G

H

I

K

L

M

N

O

P

ADP

LIFTING MOTOR (REAR)

< DTC/CIRCUIT DIAGNOSIS >

LIFTING MOTOR (REAR)

Component Function Check

INFOID:0000000010259584

1.CHECK FUNCTION

1. Select "SEAT LIFTER RR" in "Active test" mode using CONSULT.
2. Check the lifting motor (rear) operation.

| Test item | | Description | |
|----------------|-----|---------------------|----------|
| SEAT LIFTER RR | OFF | Seat lifting (rear) | Stop |
| | UP | | Upward |
| | DWN | | Downward |

Is the operation of relevant parts normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-112. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000010259585

1.CHECK LIFTING MOTOR (REAR) INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect lifting motor (rear) connector.
3. Turn ignition switch ON.
4. Perform "Active test" ("SEAT LIFTER RR") using CONSULT.
5. Check voltage between lifting motor (rear) harness connector and ground.

| (+) | | (-) | Condition | | Voltage (V) (Approx.) |
|----------------------|-----------|--------|----------------|------------|--------------------------|
| Lifting motor (rear) | | | | | |
| Connector | Terminals | | | | |
| B456 | 41 | Ground | SEAT LIFTER RR | OFF | 0 |
| | | | | UP | 12 |
| | | | | DWN (DOWN) | 0 |
| | 42 | | | OFF | 0 |
| | | | | UP | 0 |
| | | | | DWN (DOWN) | 12 |

Is the inspection result normal?

YES >> Replace lifting motor (rear) (built in seat cushion frame).

NO >> GO TO 2.

2.CHECK LIFTING MOTOR (REAR) CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit connector.
3. Check continuity between driver seat control unit harness connector and lifting motor (rear) harness connector.

| Driver seat control unit | | Lifting motor (rear) | | Continuity |
|--------------------------|----------|----------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| B452 | 41 | B456 | 41 | Existed |
| | 42 | | 42 | |

4. Check continuity between driver seat control unit harness connector and ground.

LIFTING MOTOR (REAR)

< DTC/CIRCUIT DIAGNOSIS >

| Driver seat control unit | | Ground | Continuity |
|--------------------------|----------|--------|-------------|
| Connector | Terminal | | |
| B452 | 41 | | Not existed |
| | 42 | | |

Is the inspection result normal?

- YES >> Replace driver seat control unit.
- NO >> Repair or replace harness or connector.

A

B

C

D

E

F

G

H

I

K

L

M

N

O

P

ADP

TILT MOTOR

< DTC/CIRCUIT DIAGNOSIS >

TILT MOTOR

Component Function Check

INFOID:000000010259586

1.CHECK FUNCTION

1. Select "TILT MOTOR" in "Active test" mode using CONSULT.
2. Check the tilt motor operation.

| Test item | | Description | |
|------------|-----|---------------|----------|
| TILT MOTOR | OFF | Steering tilt | Stop |
| | UP | | Upward |
| | DWN | | Downward |

Is the operation of relevant parts normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-114. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000010259587

1.CHECK TILT MOTOR INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect tilt motor connector.
3. Turn ignition switch ON.
4. Perform "Active test" ("TILT MOTOR") using CONSULT.
5. Check voltage between tilt motor harness connector and ground.

| (+) | | (-) | Condition | | Voltage (V) (Approx.) |
|------------|-----------|--------|------------|------------|--------------------------|
| Tilt motor | | | | | |
| Connector | Terminals | | | | |
| M116 | 1 | Ground | TILT MOTOR | OFF | 0 |
| | | | | UP | 0 |
| | | | | DWN (down) | 12 |
| | 2 | | | OFF | 0 |
| | | | | UP | 12 |
| | | | | DWN (down) | 0 |

Is the inspection result normal?

YES >> Replace tilt motor (built in steering column assembly).

NO >> GO TO 2.

2.CHECK TILT MOTOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit.
3. Check continuity between automatic drive positioner control unit harness connector and tilt motor harness connector.

| Automatic drive positioner control unit | | Tilt motor | | Continuity |
|---|----------|------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M104 | 28 | M116 | 1 | Existed |
| | 29 | | 2 | |

4. Check continuity between automatic drive positioner control unit harness connector and ground.

TILT MOTOR

< DTC/CIRCUIT DIAGNOSIS >

| Automatic drive positioner control unit | | Ground | Continuity |
|---|----------|--------|-------------|
| Connector | Terminal | | |
| M104 | 28 | | Not existed |
| | 29 | | |

Is the inspection result normal?

- YES >> Replace automatic drive positioner control unit.
- NO >> Repair or replace harness or connector.

ADP

TELESCOPIC MOTOR

< DTC/CIRCUIT DIAGNOSIS >

TELESCOPIC MOTOR

Component Function Check

INFOID:0000000010259588

1.CHECK FUNCTION

1. Select "TELESCO MOTOR" in "Active test" mode using CONSULT.
2. Check the telescopic motor operation.

| Test item | | Description | |
|---------------|-----|---------------------|----------|
| TELESCO MOTOR | OFF | Steering telescopic | Stop |
| | FR | | Forward |
| | RR | | Backward |

Is the operation of relevant parts normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-116. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000010259589

1.CHECK TELESCOPIC MOTOR INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect telescopic motor connector.
3. Turn ignition switch ON.
4. Perform "Active test" ("TELESCO MOTOR") using CONSULT.
5. Check voltage between telescopic motor harness connector and ground.

| (+) | | (-) | Condition | | Voltage (V) (Approx.) |
|------------------|-----------|--------|-----------------------|---------------|--------------------------|
| Telescopic motor | | | | | |
| Connector | Terminals | | | | |
| M117 | 1 | Ground | TELESCOPIC MO- TOR | OFF | 0 |
| | | | | FR (forward) | 0 |
| | | | | RR (backward) | 12 |
| | 2 | | | OFF | 0 |
| | | | | FR (forward) | 12 |
| | | | | RR (backward) | 0 |

Is the inspection result normal?

YES >> Replace telescopic motor (built in steering column assembly).

NO >> GO TO 2.

2.CHECK TELESCOPIC MOTOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit.
3. Check continuity between automatic drive positioner control unit harness connector and telescopic motor harness connector.

| Automatic drive positioner control unit | | Telescopic motor | | Continuity |
|---|----------|------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M104 | 26 | M117 | 1 | Existed |
| | 29 | | 2 | |

4. Check continuity between automatic drive positioner control unit harness connector and ground.

TELESCOPIC MOTOR

< DTC/CIRCUIT DIAGNOSIS >

| Automatic drive positioner control unit | | Ground | Continuity |
|---|----------|--------|-------------|
| Connector | Terminal | | |
| M104 | 26 | | Not existed |
| | 29 | | |

Is the inspection result normal?

YES >> Replace automatic drive positioner control unit.
NO >> Repair or replace harness or connector.

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

DOOR MIRROR MOTOR

< DTC/CIRCUIT DIAGNOSIS >

DOOR MIRROR MOTOR

Component Function Check

INFOID:000000010259590

1.CHECK DOOR MIRROR MOTOR FUNCTION

Check the operation with "MIRROR MOTOR RH" and "MIRROR MOTOR LH" in "ACTIVE TEST" mode using CONSULT.

Refer to [ADP-22. "CONSULT Function"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Refer to [ADP-118. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000010259591

1.CHECK DOOR MIRROR MOTOR INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect door mirror connector.
3. Turn ignition switch ON.
4. Check voltage between door mirror harness connector and ground.

| (+) | | (-) | Condition | | Voltage (V) (Approx.) |
|--|-----------|--------|--------------------------------------|----------------------|--------------------------|
| Door mirror | | | | | |
| Connector | Terminals | | | | |
| D3 (Driver side) D23 (Passenger side) | 12 | Ground | Door mirror remote control switch | UP | 12 |
| | | | | Other than the above | 0 |
| | 11 | | | LEFT | 12 |
| | | | | Other than the above | 0 |
| | 10 | | | DOWN / RIGHT | 12 |
| | | | | Other than the above | 0 |

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK DOOR MIRROR MOTOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect automatic drive positioner control unit connector.
3. Check continuity between automatic drive positioner control unit harness connector and door mirror harness connector.

[driver side]

| Automatic drive positioner control unit | | Door mirror (driver side) | | Continuity |
|---|----------|---------------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M75 | 12 | D3 | 10 | Existed |
| | 23 | | 12 | |
| | 24 | | 11 | |

[passenger side]

| Automatic drive positioner control unit | | Door mirror (passenger side) | | Continuity |
|---|----------|------------------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M75 | 22 | D23 | 10 | Existed |
| | 10 | | 12 | |
| | 11 | | 11 | |

4. Check continuity between automatic drive positioner control unit harness connector and ground.

DOOR MIRROR MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[driver side]

| Automatic drive positioner control unit | | Ground | Continuity |
|---|----------|--------|-------------|
| Connector | Terminal | | Not existed |
| M75 | 12 | | |
| | 23 | | |
| | 24 | | |

[passenger side]

| Automatic drive positioner control unit | | Ground | Continuity |
|---|----------|--------|-------------|
| Connector | Terminal | | Not existed |
| M75 | 22 | | |
| | 10 | | |
| | 11 | | |

Is the inspection result normal?

YES >> Replace automatic drive positioner control unit.

NO >> Repair or replace harness or connector.

3.CHECK DOOR MIRROR MOTOR

Check door mirror motor.

Refer to [ADP-119, "Component Inspection"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

NO >> Replace door mirror.

Component Inspection

INFOID:0000000010259592

1.CHECK DOOR MIRROR MOTOR 1

Check that door mirror motor does not trap foreign objects and does not have any damage.

Refer to [MIR-35, "Exploded View"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace door mirror.

2.CHECK DOOR MIRROR MOTOR 2

1. Turn ignition switch OFF.
2. Disconnect door mirror connector.
3. Apply 12 V to each power supply terminal of door mirror motor.

| Door mirror | | | Operational direction |
|--|----------|-----|-----------------------|
| Connector | Terminal | | |
| | (+) | (-) | |
| D3 (Driver side) D23 (Passenger side) | 10 | 11 | RIGHT |
| | 11 | 10 | LEFT |
| | 12 | 10 | UP |
| | 10 | 12 | DOWN |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace door mirror.

SEAT MEMORY INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

SEAT MEMORY INDICATOR

Component Function Check

INFOID:0000000010259593

1.CHECK FUNCTION

1. Select "MEMORY SW INDCTR" in "Active test" mode using CONSULT.
2. Check the memory indicator operation.

| Test item | | Description | |
|------------------|------|-------------------------|-----------------|
| MEMORY SW INDCTR | OFF | Memory switch indicator | OFF |
| | ON-1 | | Indicator 1: ON |
| | ON-2 | | Indicator 2: ON |

Is the operation of relevant parts normal?

YES >> INSPECTION END

NO >> Perform diagnosis procedure. Refer to [ADP-120, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000010259594

1.CHECK SEAT MEMORY SWITCH INDICATOR OPERATION

Check seat memory switch indicator operation.

Which is the malfunctioning indicator?

All indicators are NG>>GO TO 2.

An indicator is NG>>GO TO 4.

2.CHECK FUSE

1. Turn ignition switch OFF.
2. Check that the blown fuse after repairing the affected circuit if a fuse is blown.

| Signal name | Fuse No. |
|----------------------|-----------|
| Battery power supply | 10 (10 A) |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the blown fuse after repairing the affected circuit if a fuse is blown.

3.CHECK SEAT MEMORY SWITCH INDICATOR POWER SUPPLY

Check voltage between seat memory switch harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|--------------------|-----------|--------|--------------------------|
| Seat memory switch | | | |
| Connector | Terminals | | |
| D13 | 5 | Ground | Battery voltage |

Is the inspection result normal?

YES >> Replace seat memory switch.

NO >> Repair or replace harness or connector.

4.CHECK SEAT MEMORY SWITCH INDICATOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver seat control unit and seat memory switch connector.
3. Check continuity between driver seat control unit harness connector and seat memory switch harness connector.

SEAT MEMORY INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

| Driver seat control unit | | Seat memory switch | | Continuity |
|--------------------------|----------|--------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| B451 | 23 | D13 | 6 | Existed |
| | 7 | | 7 | |

4. Check continuity between driver seat control unit harness connector and ground.

| Driver seat control unit | | Ground | Continuity |
|--------------------------|----------|--------|-------------|
| Connector | Terminal | | |
| B451 | 23 | | Not existed |
| | 7 | | |

Is the inspection result normal?

- YES >> Replace driver seat control unit.
- NO >> Repair or replace harness or connector.

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

MANUAL FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

MANUAL FUNCTION DOES NOT OPERATE

ALL COMPONENT

ALL COMPONENT : Diagnosis Procedure

INFOID:0000000010259595

1.CHECK DRIVER SEAT CONTROL UNIT POWER SUPPLY AND GROUND CIRCUIT

Check driver seat control unit power supply and ground circuit.

Refer to [ADP-67. "DRIVER SEAT CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunction parts.

2.CHECK AUTOMATIC DRIVE POSITIONER CONTROL UNIT POWER SUPPLY AND GROUND CIRCUIT

Check automatic drive positioner control unit power supply and ground circuit.

Refer to [ADP-67. "AUTOMATIC DRIVE POSITIONER CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunction parts.

3.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-43. "Intermittent Incident"](#).

NO >> GO TO 1.

POWER SEAT

POWER SEAT : Diagnosis Procedure

INFOID:0000000010259596

1.CHECK POWER SEAT SWITCH GROUND CIRCUIT

Check power seat switch ground circuit.

Refer to [ADP-87. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace harness or connector.

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-43. "Intermittent Incident"](#).

NO >> GO TO 1.

TILT & TELESCOPIC

TILT & TELESCOPIC : Diagnosis Procedure

INFOID:0000000010259597

1.CHECK TILT & TELESCOPIC SWITCH GROUND CIRCUIT

Check tilt & telescopic switch ground circuit.

Refer to [ADP-88. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace harness or connector.

2.CONFIRM THE OPERATION

Confirm the operation again.

MANUAL FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

NO >> GO TO 1.

SEAT SLIDING

SEAT SLIDING : Diagnosis Procedure

INFOID:0000000010259598

1.CHECK SLIDING MECHANISM

Check for the following.

- Mechanism deformation or pinched foreign materials.
- Interference with other parts because of poor installation.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunction parts.

2.CHECK SLIDING SWITCH

Check sliding switch.

Refer to [ADP-69, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunction parts.

3.CHECK SLIDING MOTOR

Check sliding motor.

Refer to [ADP-106, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunction parts.

4.CONFIRM THE OPERATION

Check the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

NO >> GO TO 1.

SEAT RECLINING

SEAT RECLINING : Diagnosis Procedure

INFOID:0000000010259599

1.CHECK RECLINING MECHANISM

Check for the following.

- Mechanism deformation or pinched foreign materials.
- Interference with other parts because of poor installation.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunction parts.

2.CHECK RECLINING SWITCH

Check reclining switch.

Refer to [ADP-71, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunction parts.

3.CHECK RECLINING MOTOR

Check reclining motor.

Refer to [ADP-108, "Component Function Check"](#).

A

B

C

D

E

F

G

H

I

ADP

K

L

M

N

O

P

MANUAL FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunction parts.

4.CONFIRM THE OPERATION

Check the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-43. "Intermittent Incident"](#).

NO >> GO TO 1.

SEAT LIFTING (FRONT)

SEAT LIFTING (FRONT) : Diagnosis Procedure

INFOID:0000000010259600

1.CHECK LIFTING (FRONT) MECHANISM

Check for the following.

- Mechanism deformation or pinched foreign materials.
- Interference with other parts because of poor installation.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunction parts.

2.CHECK LIFTING SWITCH (FRONT)

Check lifting switch (front).

Refer to [ADP-73. "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunction parts.

3.CHECK LIFTING MOTOR (FRONT)

Check lifting motor (front).

Refer to [ADP-110. "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunction parts.

4.CONFIRM THE OPERATION

Check the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-43. "Intermittent Incident"](#).

NO >> GO TO 1.

SEAT LIFTING (REAR)

SEAT LIFTING (REAR) : Diagnosis Procedure

INFOID:0000000010259601

1.CHECK LIFTING (REAR) MECHANISM

Check for the following.

- Mechanism deformation or pinched foreign materials.
- Interference with other parts because of poor installation.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunction parts.

2.CHECK LIFTING SWITCH (REAR)

Check lifting switch (rear).

Refer to [ADP-75. "Component Function Check"](#).

Is the inspection result normal?

MANUAL FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

- YES >> GO TO 3.
NO >> Repair or replace the malfunction parts.

3.CHECK LIFTING MOTOR (REAR)

Check lifting motor (rear).
Refer to [ADP-112. "Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair or replace the malfunction parts.

4.CONFIRM THE OPERATION

Check the operation again.

Is the result normal?

- YES >> Check intermittent incident. Refer to [GI-43. "Intermittent Incident"](#).
NO >> GO TO 1.

STEERING TILT

STEERING TILT : Diagnosis Procedure

INFOID:0000000010259602

1.CHECK STEERING TILT MECHANISM

Check for the following.
• Mechanism deformation or pinched foreign materials.
• Interference with other parts because of poor installation.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace the malfunction parts.

2.CHECK TILT SWITCH

Check tilt switch.
Refer to [ADP-77. "Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace the malfunction parts.

3.CHECK TILT MOTOR

Check tilt motor.
Refer to [ADP-114. "Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair or replace the malfunction parts.

4.CONFIRM THE OPERATION

Check the operation again.

Is the result normal?

- YES >> Check intermittent incident. Refer to [GI-43. "Intermittent Incident"](#).
NO >> GO TO 1.

STEERING TELESCOPIC

STEERING TELESCOPIC : Diagnosis Procedure

INFOID:0000000010259603

1.CHECK STEERING TELESCOPIC MECHANISM

Check for the following.
• Mechanism deformation or pinched foreign materials.
• Interference with other parts because of poor installation.

Is the inspection result normal?

- YES >> GO TO 2.

MANUAL FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

NO >> Repair or replace the malfunction parts.

2.CHECK TELESCOPIC SWITCH

Check telescopic switch.

Refer to [ADP-79. "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunction parts.

3.CHECK TELESCOPIC MOTOR

Check telescopic motor.

Refer to [ADP-116. "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunction parts.

4.CONFIRM THE OPERATION

Check the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-43. "Intermittent Incident"](#).

NO >> GO TO 1.

DOOR MIRROR

DOOR MIRROR : Diagnosis Procedure

INFOID:000000010259604

1.CHECK DOOR MIRROR MECHANISM

Check for the following.

- Mechanism deformation or pinched foreign materials.
- Interference with other parts because of poor installation.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunction parts.

2.CHECK DOOR MIRROR REMOTE CONTROL SWITCH

Check door mirror remote control switch. Refer to following.

- Mirror switch: Refer to [ADP-84. "MIRROR SWITCH : Component Function Check"](#).
- Changeover switch: Refer to [ADP-83. "CHANGEOVER SWITCH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunction parts.

3.CHECK DOOR MIRROR MOTOR

Check door mirror motor.

Refer to [ADP-118. "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunction parts.

4.CONFIRM THE OPERATION

Check the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-43. "Intermittent Incident"](#).

NO >> GO TO 1.

MEMORY FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

MEMORY FUNCTION DOES NOT OPERATE

ALL COMPONENT

ALL COMPONENT : Diagnosis Procedure

INFOID:0000000010259605

1.CHECK MANUAL OPERATION

Check manual operation.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunction parts.

2.PERFORM INITIALIZATION AND MEMORY STORING PROCEDURE

1. Perform initialization procedure.

Refer to [ADP-52, "SYSTEM INITIALIZATION : Special Repair Requirement"](#).

2. Perform memory storing procedure.

Refer to [ADP-53, "MEMORY STORING : Special Repair Requirement"](#).

3. Check memory function.

Refer to [ADP-15, "MEMORY FUNCTION : System Description"](#).

Is the inspection result normal?

YES >> Memory function is normal.

NO >> GO TO 3.

3.CHECK SEAT MEMORY SWITCH

Check seat memory switch.

Refer to [ADP-81, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace seat memory switch.

4.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

NO >> GO TO 1.

SEAT SLIDING

SEAT SLIDING : Diagnosis Procedure

INFOID:0000000010259606

1.CHECK MANUAL OPERATION

Check manual operation.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Refer to [ADP-123, "SEAT SLIDING : Diagnosis Procedure"](#)

2.CHECK SLIDING SENSOR

Check sliding sensor.

Refer to [ADP-89, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunction parts.

3.CONFIRM THE OPERATION

Check the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

MEMORY FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

NO >> GO TO 1.
SEAT RECLINING

SEAT RECLINING : Diagnosis Procedure

INFOID:0000000010259607

1.CHECK MANUAL OPERATION

Check manual operation.

Is the inspection result normal?

YES >> GO TO 2.
NO >> Refer to [ADP-123, "SEAT RECLINING : Diagnosis Procedure"](#)

2.CHECK RECLINING SENSOR

Check reclining sensor.

Refer to [ADP-91, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.
NO >> Repair or replace the malfunction parts.

3.CONFIRM THE OPERATION

Check the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).
NO >> GO TO 1.

SEAT LIFTING (FRONT)

SEAT LIFTING (FRONT) : Diagnosis Procedure

INFOID:0000000010259608

1.CHECK MANUAL OPERATION

Check manual operation.

Is the inspection result normal?

YES >> GO TO 2.
NO >> Refer to [ADP-124, "SEAT LIFTING \(FRONT\) : Diagnosis Procedure"](#)

2.CHECK LIFTING SENSOR (FRONT)

Check lifting sensor (front).

Refer to [ADP-93, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.
NO >> Repair or replace the malfunction parts.

3.CONFIRM THE OPERATION

Check the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).
NO >> GO TO 1.

SEAT LIFTING (REAR)

SEAT LIFTING (REAR) : Diagnosis Procedure

INFOID:0000000010259609

1.CHECK MANUAL OPERATION

Check manual operation.

Is the inspection result normal?

YES >> GO TO 2.
NO >> Refer to [ADP-124, "SEAT LIFTING \(REAR\) : Diagnosis Procedure"](#)

MEMORY FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

2.CHECK LIFTING SENSOR (REAR)

Check lifting sensor (rear).

Refer to [ADP-95, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunction parts.

3.CONFIRM THE OPERATION

Check the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

NO >> GO TO 1.

STEERING TILT

STEERING TILT : Diagnosis Procedure

INFOID:0000000010259610

1.CHECK MANUAL OPERATION

Check manual operation.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Refer to [ADP-125, "STEERING TILT : Diagnosis Procedure"](#)

2.CHECK TILT SENSOR

Check steering tilt sensor.

Refer to [ADP-97, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunction parts.

3.CONFIRM THE OPERATION

Check the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

NO >> GO TO 1.

STEERING TELESCOPIC

STEERING TELESCOPIC : Diagnosis Procedure

INFOID:0000000010259611

1.CHECK MANUAL OPERATION

Check manual operation.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Refer to [ADP-125, "STEERING TELESCOPIC : Diagnosis Procedure"](#)

2.CHECK TELESCOPIC SENSOR

Check steering telescopic sensor.

Refer to [ADP-99, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunction parts.

3.CONFIRM THE OPERATION

Check the operation again.

Is the result normal?

A

B

C

D

E

F

G

H

I

ADP

K

L

M

N

O

P

MEMORY FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).
NO >> GO TO 1.

DOOR MIRROR

DOOR MIRROR : Diagnosis Procedure

INFOID:0000000010259612

1.CHECK MANUAL OPERATION

Check manual operation.

Is the inspection result normal?

YES >> GO TO 2.
NO >> Refer to [ADP-126, "DOOR MIRROR : Diagnosis Procedure"](#)

2.CHECK MIRROR SENSOR

Check mirror sensor. Refer to following.

- Driver side: [ADP-102, "DRIVER SIDE : Component Function Check"](#).
- Passenger side: [ADP-103, "PASSENGER SIDE : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.
NO >> Repair or replace the malfunction parts.

3.CONFIRM THE OPERATION

Check the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).
NO >> GO TO 1.

ENTRY/EXIT ASSIST FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

ENTRY/EXIT ASSIST FUNCTION DOES NOT OPERATE

Diagnosis Procedure

INFOID:0000000010259613

1.CHECK SYSTEM SETTING

1. Check system setting.
Refer to [ADP-55, "SYSTEM SETTING : Special Repair Requirement"](#).

2. Check the operation.

Is the inspection result normal?

YES >> Entry/Exit function is normal.

NO >> GO TO 2.

2.PERFORM SYSTEM INITIALIZATION

1. Perform system initialization.
Refer to [ADP-52, "SYSTEM INITIALIZATION : Special Repair Requirement"](#).

2. Check the operation.

Is the inspection result normal?

YES >> Entry/Exit function is normal.

NO >> GO TO 3.

3.CHECK FRONT DOOR SWITCH (DRIVER SIDE)

Check front door switch (driver side).

Refer to [DLK-121, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunction parts.

4.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

NO >> GO TO 1.

A

B

C

D

E

F

G

H

I

ADP

K

L

M

N

O

P

INTELLIGENT KEY INTERLOCK FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

INTELLIGENT KEY INTERLOCK FUNCTION DOES NOT OPERATE

Diagnosis Procedure

INFOID:000000010259614

1.PERFORM INTELLIGENT KEY INTERLOCK STORING PROCEDURE

1. Perform Intelligent Key interlock storing procedure.
Refer to [ADP-54, "INTELLIGENT KEY INTERLOCK STORING : Special Repair Requirement"](#).
2. Check the operation.

Is the inspection result normal?

- YES >> Intelligent Key interlock function is normal.
NO >> GO TO 2.

2.CHECK DOOR LOCK FUNCTION

Check door lock function.

Refer to [DLK-81, "Work Flow"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace the malfunction parts.

3.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

- YES >> Check the intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).
NO >> GO TO 1.

MEMORY INDICATE DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

MEMORY INDICATE DOES NOT OPERATE

Diagnosis Procedure

INFOID:0000000010259615

1.CHECK SEAT MEMORY SWITCH INDICATOR

Check seat memory switch indicator.

Refer to [ADP-120, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunction parts.

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

NO >> GO TO 1.

A

B

C

D

E

F

G

H

I

ADP

K

L

M

N

O

P

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

NORMAL OPERATING CONDITION

Description

INFOID:000000010259616

The following symptoms are normal operations, and they do not indicate a malfunction.

| Symptom | Cause | Action to take | Reference page |
|--|---|------------------------------------|---|
| Entry/exit assist function do not operate. | No initialization has been performed. | Perform initialization. | ADP-52. "SYSTEM INITIALIZATION : Description" |
| | Entry/exit assist function is disabled. NOTE: Entry/exit assist function is set to ON before delivery (initial setting). | Change the settings. | ADP-54. "SYSTEM SETTING : Description" |
| Entry assist function does not operate. | Manual operation with power seat switch was performed after exit assist function execution. | Perform the entry assist function. | ADP-18. "ENTRY ASSIST FUNCTION : System Description" |
| Lumbar support does not perform memory operation. | The lumbar support system are controlled independently with no link to the automatic drive positioner system. | — | SE-16. "LUMBAR SUPPORT SYSTEM : System Description" |
| Memory function, entry/exit assist function, or Intelligent Key interlock function does not operate. | The operating conditions are not fulfilled. | Fulfill the operation conditions. | Memory function: ADP-15. "MEMORY FUNCTION : System Description" |
| | | | Entry assist function: ADP-18. "ENTRY ASSIST FUNCTION : System Description" |
| | | | Exit assist function: ADP-17. "EXIT ASSIST FUNCTION : System Description" |
| | | | Intelligent Key interlock function: ADP-20. "INTELLIGENT KEY INTERLOCK FUNCTION : System Description" |

DRIVER SEAT CONTROL UNIT

< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION

DRIVER SEAT CONTROL UNIT

Removal and Installation


INFOID:0000000010259617

REMOVAL

CAUTION:

When removing and installing, use shop cloths to protect parts from damage.

1. Remove driver seat (1). Refer to [SE-111, "Removal and Installation"](#).
2. Remove screws (A).
3. Remove driver seat control unit (2).

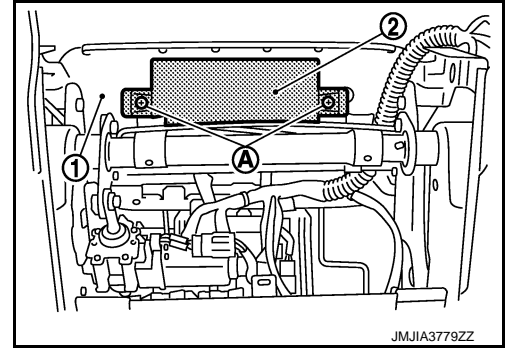

INSTALLATION

Install in the reverse order of removal.

CAUTION:

Be sure to clump the harness to the right place.

NOTE:

After installing the driver seat, perform additional service when replacing control unit. Refer to [ADP-51, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description"](#).

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

AUTOMATIC DRIVE POSITIONER CONTROL UNIT

< REMOVAL AND INSTALLATION >

AUTOMATIC DRIVE POSITIONER CONTROL UNIT

Removal and Installation


INFOID:000000010259618

REMOVAL

CAUTION:

When removing and installing, use shop cloths to protect parts from damage.

1. Remove instrument lower panel LH. Refer to [JP-14, "Removal and Installation"](#).
2. Remove screws (A).
3. Remove automatic drive positioner control unit (1).

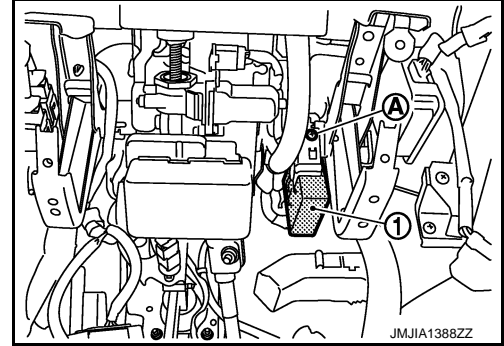

INSTALLATION

Install in the reverse order of removal.

CAUTION:

Be sure to clump the harness to the right place.

NOTE:

After installing the driver seat, perform additional service when replacing control unit. Refer to [ADP-51, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description"](#).

SEAT MEMORY SWITCH

< REMOVAL AND INSTALLATION >

SEAT MEMORY SWITCH

Removal and Installation


INFOID:0000000010259619


REMOVAL

CAUTION:

When removing and installing, use shop cloths to protect parts from damage.

1. Remove front door garnish (1). Refer to [INT-14. "Removal and Installation"](#).
2. Press pawls and remove seat memory switch (2) from front door garnish (1), with remover tool (A).

 : Pawl

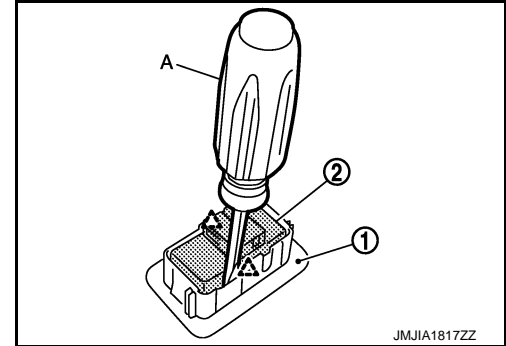

INSTALLATION

Install in the reverse order of removal.

CAUTION:

Be sure to clump the harness to the right place.

NOTE:

After installing the driver seat, perform additional service when removing battery negative terminal. Refer to [ADP-51. "ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Description"](#).

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP

POWER SEAT SWITCH

< REMOVAL AND INSTALLATION >

POWER SEAT SWITCH

Removal and Installation


INFOID:000000010259620

REMOVAL

CAUTION:

When removing and installing, use shop cloths to protect parts from damage.

1. Remove seat cushion outer finisher (1). Refer to [SE-115, "SEAT CUSHION : Disassembly and Assembly"](#).
2. Remove screws (A).
3. Remove power seat switch (2) from seat cushion outer finisher (1).

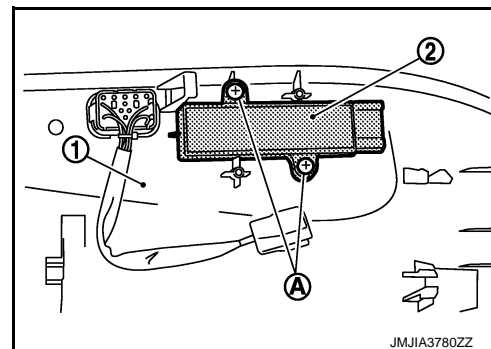

INSTALLATION

Install in the reverse order of removal.

CAUTION:

Be sure to clump the harness to the right place.

NOTE:

After installing the driver seat, perform additional service when removing battery negative terminal. Refer to [ADP-51, "ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Description"](#).

TILT&TELESCOPIC SWITCH

< REMOVAL AND INSTALLATION >

TILT&TELESCOPIC SWITCH

Removal and Installation


INFOID:0000000010259621


REMOVAL

CAUTION:

When removing and installing, use shop cloths to protect parts from damage.

1. Remove steering column lower cover (1). Refer to [IP-14, "Removal and Installation"](#).
2. Press pawls and remove tilt & telescopic switch (2) from the steering column lower cover (1).

 : Pawl

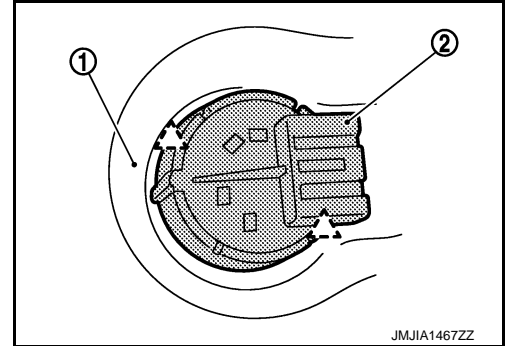

INSTALLATION

Install in the reverse order of removal.

CAUTION:

Be sure to clump the harness to the right place.

NOTE:

After installing the driver seat, perform additional service when removing battery negative terminal. Refer to [ADP-51, "ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Description"](#).

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

ADP