

# SECTION G

## GENERAL INFORMATION

### CONTENTS

<b>HOW TO USE THIS MANUAL .....</b>	<b>3</b>	<b>PRECAUTION .....</b>	<b>28</b>
<b>HOW TO USE THIS MANUAL .....</b>	<b>3</b>	<b>PRECAUTIONS .....</b>	<b>28</b>
Description .....	3	Description .....	28
Terms .....	3	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER" .....	28
Units .....	3	Precaution for Procedure without Cowl Top Cover...28	
Contents .....	3	Precautions for Removing Battery Terminal .....	29
Relation between Illustrations and Descriptions .....	4	General Precautions .....	29
Components .....	4	Three Way Catalyst .....	30
<b>HOW TO FOLLOW TROUBLE DIAGNOSES.....</b>	<b>6</b>	Multiport Fuel Injection System or Engine Control System .....	31
Description .....	6	Hoses .....	31
How to Follow Test Groups in Trouble Diagnosis.....	6	Engine Oils .....	32
Key to Symbols Signifying Measurements or Pro- cedures .....	7	Air Conditioning .....	32
<b>HOW TO READ WIRING DIAGRAMS .....</b>	<b>9</b>	Fuel .....	32
Connector Symbols .....	9	<b>LIFTING POINT .....</b>	<b>34</b>
Sample/Wiring Diagram -Example- .....	10	Pantograph Jack .....	34
Connector Information .....	12	Garage Jack and Safety Stand .....	34
<b>ABBREVIATIONS .....</b>	<b>14</b>	2-Pole Lift .....	35
Abbreviation List .....	14	<b>TOW TRUCK TOWING .....</b>	<b>36</b>
<b>TIGHTENING TORQUE OF STANDARD BOLTS .....</b>	<b>19</b>	Tow Truck Towing .....	36
Description .....	19	Vehicle Recovery (Freeing a Stuck Vehicle) .....	37
Tightening Torque Table (New Standard Includ- ed) .....	19	<b>BASIC INSPECTION .....</b>	<b>39</b>
<b>RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS .....</b>	<b>22</b>	<b>SERVICE INFORMATION FOR ELECTRICAL INCIDENT .....</b>	<b>39</b>
Recommended Chemical Products and Sealants...22		Work Flow .....	39
<b>VEHICLE INFORMATION .....</b>	<b>23</b>	Control Units and Electrical Parts .....	39
<b>IDENTIFICATION INFORMATION .....</b>	<b>23</b>	How to Check Terminal .....	40
Model Variation .....	23	Intermittent Incident .....	43
Information About Identification or Model Code .....	23	Circuit Inspection .....	46
Dimensions .....	27	<b>CONSULT/GST CHECKING SYSTEM .....</b>	<b>51</b>
Wheels & Tires .....	27	Description .....	51
		CONSULT Function and System Application*1 .....	51
		CONSULT/GST Data Link Connector (DLC) Cir- cuit .....	52

---

Wiring Diagram - CONSULT/GST CHECKING SYSTEM - .....	54	ADDITIONAL SERVICE WHEN REMOVING BAT- TERY NEGATIVE TERMINAL ..... 72
<b>INSPECTION AND ADJUSTMENT .....</b>	<b>72</b>	ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Required Procedure After Battery Disconnection ..... 72

# HOW TO USE THIS MANUAL

< HOW TO USE THIS MANUAL >

## HOW TO USE THIS MANUAL

### HOW TO USE THIS MANUAL

#### Description

INFOID:0000000010262071

This volume explains "Removal, Disassembly, Installation, Inspection and Adjustment" and "Trouble Diagnoses".

#### Terms

INFOID:0000000010262072

- The captions **WARNING** and **CAUTION** warn you of steps that must be followed to prevent personal injury and/or damage to some part of the vehicle.

**WARNING** indicates the possibility of personal injury if instructions are not followed.

**CAUTION** indicates the possibility of component damage if instructions are not followed.

**BOLD TYPED STATEMENTS** except **WARNING** and **CAUTION** give you helpful information.

Standard value: Tolerance at inspection and adjustment.

Limit value: The maximum or minimum limit value that should not be exceeded at inspection and adjustment.

#### Units

INFOID:0000000010262073

- The **UNITS** given in this manual are primarily expressed as the SI UNIT (International System of Unit), and alternatively expressed in the metric system and in the yard/pound system.

Also with regard to tightening torque of bolts and nuts, there are descriptions both about range and about the standard tightening torque.

#### "Example"

##### Range

**Outer Socket Lock Nut : 59 - 78 N·m (6.0 - 8.0 kg·m, 43 - 58 ft-lb)**

##### Standard

**Drive Shaft Installation Bolt : 44.3 N·m (4.5 kg·m, 33 ft-lb)**

#### Contents

INFOID:0000000010262074

- A QUICK REFERENCE INDEX**, a black tab (e.g. **BR**) is provided on the first page. You can quickly find the first page of each section by matching it to the section's black tab.
- THE CONTENTS** are listed on the first page of each section.
- THE TITLE** is indicated on the upper portion of each page and shows the part or system.
- THE PAGE NUMBER** of each section consists of two or three letters which designate the particular section and a number (e.g. "BR-5").
- THE SMALL ILLUSTRATIONS** show the important steps such as inspection, use of special tools, knacks of work and hidden or tricky steps which are not shown in the previous large illustrations.  
Assembly, inspection and adjustment procedures for the complicated units such as the automatic transaxle or transmission, etc. are presented in a step-by-step format where necessary.

# HOW TO USE THIS MANUAL

< HOW TO USE THIS MANUAL >

## Relation between Illustrations and Descriptions


INFOID:0000000010262075

The following sample explains the relationship between the part description in an illustration, the part name in the text and the service procedures.

< Example 1 >

1. Remove return spring (1) from parking pawl (2).


The identifier number of the part name in the text is consistent with the identifier part number in the illustration.

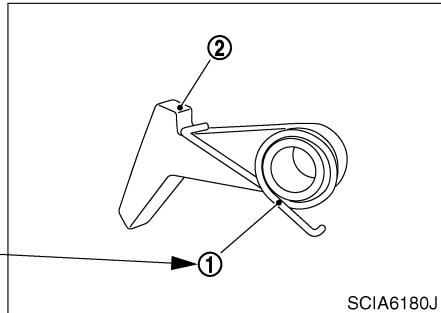

< Example 2 >

- : Vehicle front
- Tighten rear member mounting bolts following the numerical order shown in the illustration.
- Note : View upward

The numbers in the illustration are consistent with the service operation instructions.

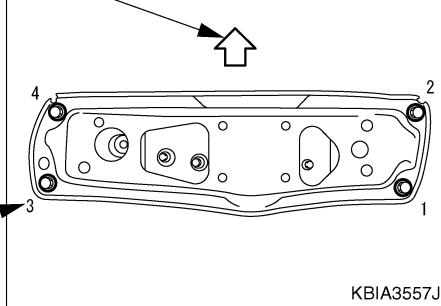

SAIA0519E

## Components

INFOID:0000000010262076

- **THE LARGE ILLUSTRATIONS** are exploded views (see the following) and contain tightening torques, lubrication points, section number of the **PARTS CATALOG** (e.g. SEC. 440) and other information necessary to perform repairs.

The illustrations should be used in reference to service matters only. When ordering parts, refer to the appropriate **PARTS CATALOG**.

Components shown in an illustration may be identified by a circled number. When this style of illustration is used, the text description of the components will follow the illustration.

# HOW TO USE THIS MANUAL

< HOW TO USE THIS MANUAL >

GI

B

C

D

E

F

G

H

I

J

K


L

M

N

O

P

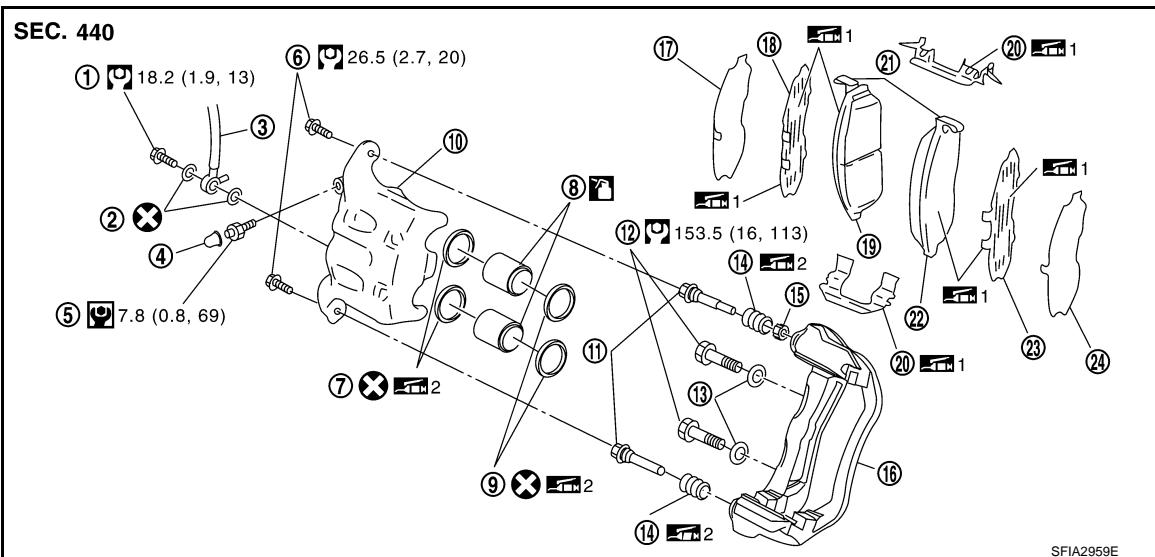

- |                   |                      |                                 |
|-------------------|----------------------|---------------------------------|
| 1. Union bolt     | 2. Copper washer     | 3. Brake hose                   |
| 4. Cap            | 5. Bleed valve       | 6. Sliding pin bolt             |
| 7. Piston seal    | 8. Piston            | 9. Piston boot                  |
| 10. Cylinder body | 11. Sliding pin      | 12. Torque member mounting bolt |
| 13. Washer        | 14. Sliding pin boot | 15. Bushing                     |
| 16. Torque member | 17. Inner shim cover | 18. Inner shim                  |
| 19. Inner pad     | 20. Pad retainer     | 21. Pad wear sensor             |
| 22. Outer pad     | 23. Outer shim       | 24. Outer shim cover            |
- 1: PBC (Poly Butyl Cuprysil) grease    2: Rubber grease or silicone-based grease
- : Brake fluid

Refer to GI section for additional symbol definitions.

## SYMBOLS

SYMBOL	DESCRIPTION		SYMBOL	DESCRIPTION
	Tightening torque The tightening torque specifications of bolts and nuts may be presented as either a range or a standard tightening torque.	: N·m (kg-m, ft-lb)		Always replace after every disassembly.
		: N·m (kg-m, in-lb)		Apply petroleum jelly.
	Should be lubricated with grease. Unless otherwise indicated, use recommended multi-purpose grease.			Apply molybdenum added petroleum jelly.
	Should be lubricated with oil.			Apply ATF.
	Sealing point			Select with proper thickness.
	Sealing point with locking sealant.			Adjustment is required.
	Checking point			

SAIA0749E

# HOW TO FOLLOW TROUBLE DIAGNOSES

< HOW TO USE THIS MANUAL >

## HOW TO FOLLOW TROUBLE DIAGNOSES

### Description

INFOID:0000000010262077


#### NOTICE:

Trouble diagnoses indicate work procedures required to diagnose problems effectively. Observe the following instructions before diagnosing.

- Before performing trouble diagnoses, read the "Work Flow" in each section.
  - After repairs, re-check that the problem has been completely eliminated.
  - Refer to Component Parts and Harness Connector Location for the Systems described in each section for identification/location of components and harness connectors.
  - When checking circuit continuity, ignition switch should be OFF.
  - Refer to the Circuit Diagram for quick pinpoint check.
- If you need to check circuit continuity between harness connectors in more detail, such as when a sub-harness is used, refer to Wiring Diagram in each individual section and Harness Layout in PG section for identification of harness connectors.
- Before checking voltage at connectors, check battery voltage.
  - After accomplishing the Diagnosis Procedures and Electrical Components Inspection, check that all harness connectors are reconnected as they were.

### How to Follow Test Groups in Trouble Diagnosis

INFOID:0000000010262078

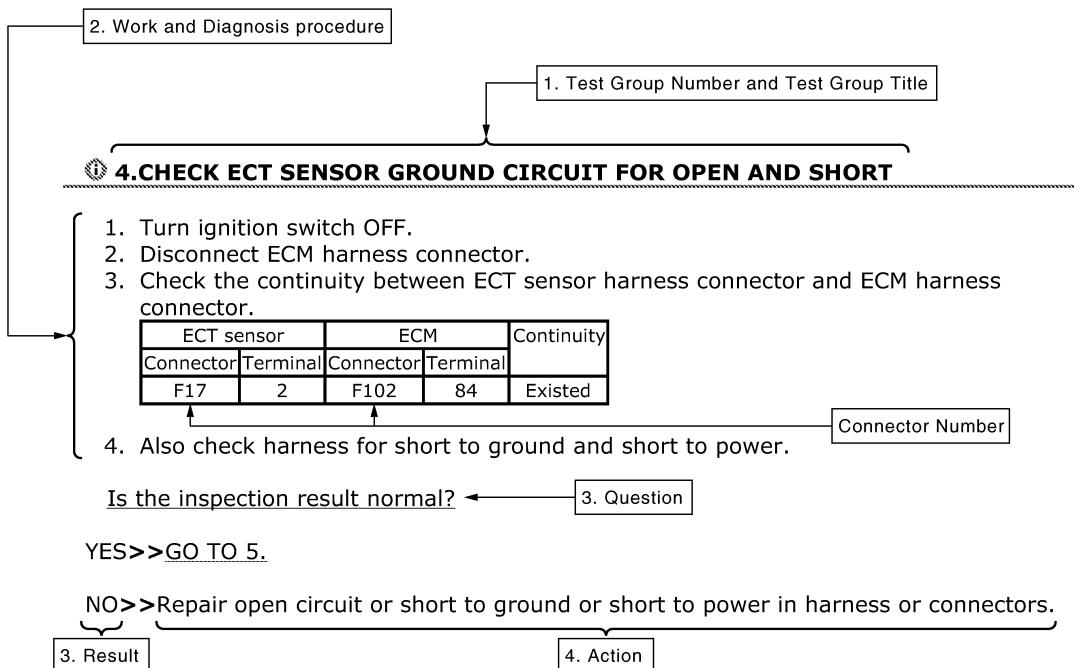

JPAIA0021GB


1. Test group number and test group title
  - Test group number and test group title are shown in the upper portion of each test group.
2. Work and diagnosis procedure
  - Start to diagnose a problem using procedures indicated in enclosed test groups.
3. Questions and results
  - Questions and required results are indicated in test group.
4. Action
  - Next action for each test group is indicated based on result of each question.

# HOW TO FOLLOW TROUBLE DIAGNOSES

< HOW TO USE THIS MANUAL >

## Key to Symbols Signifying Measurements or Procedures

INFOID:000000010262079

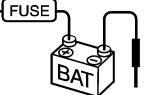SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION
	Check after disconnecting the connector to be measured.		Procedure with Generic Scan Tool. (GST, OBD-II scan tool)
	Check after connecting the connector to be measured.		Procedure without CONSULT or GST
	Insert key into ignition switch.		A/C switch is "OFF".
	Remove key from ignition switch.		A/C switch is "ON".
	Insert and remove key repeatedly.		REC switch is "ON".
	Turn ignition switch to "OFF" position.		REC switch is "OFF".
	Turn ignition switch to "ACC" position.		Fan switch is "ON". (At any position except for "OFF" position)
	Turn ignition switch to "ON" position.		Fan switch is "OFF".
	Turn ignition switch to "START" position.		Apply fuse.
	Turn ignition switch from "OFF" to "ACC" position.		Apply positive voltage from battery with fuse directly to components.
	Turn ignition switch from "ACC" to "ON" position.		
	Turn ignition switch from "ACC" to "OFF" position.		

JPAIA0982GB

GI

B

C

D

E

F

G

H

I

J

K

L

M

N

O

P

# HOW TO FOLLOW TROUBLE DIAGNOSES

< HOW TO USE THIS MANUAL >

SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION
	Turn ignition switch from "OFF" to "ON" position.		Drive vehicle.
	Turn ignition switch from "ON" to "OFF" position.		
	Do not start engine, or check with engine stopped.		Disconnect battery negative cable.
	Start engine, or check with engine running.		Depress brake pedal.
	Apply parking brake.		Release brake pedal.
	Release parking brake.		Depress accelerator pedal.
	Check after engine is warmed up sufficiently.		Release accelerator pedal.
	Voltage should be measured with a voltmeter.	  8 	Pin terminal check for SMJ type ECM or TCM connectors. <b>For details regarding the terminal arrangement, refer to the "ELECTRICAL UNITS" electrical reference page at the end of the manual.</b>
	Circuit resistance should be measured with an ohmmeter.		
	Current should be measured with an ammeter.		
	Pulse signal should be checked with an oscilloscope.		
	Procedure with CONSULT		
	Procedure without CONSULT		
	Place selector lever in "P" position.		
	Place selector lever in "N" position.		
	Jack up front portion.		
	Jack up rear portion.		
	Inspect under engine room.		
	Inspect under floor.		
	Inspect rear under floor.		

JSAIA1461GB

# HOW TO READ WIRING DIAGRAMS


< HOW TO USE THIS MANUAL >

## HOW TO READ WIRING DIAGRAMS

### Connector Symbols


Most of connector symbols in wiring diagrams are shown from the terminal side.

- Connector symbols shown from the terminal side are enclosed by a single line and followed by the direction mark.
- Connector symbols shown from the harness side are enclosed by a double line and followed by the direction mark.
- Certain systems and components, especially those related to OBD, may use a new style slide-locking type harness connector. For description and how to disconnect, refer to PG section, "Description", "HARNESS CONNECTOR".

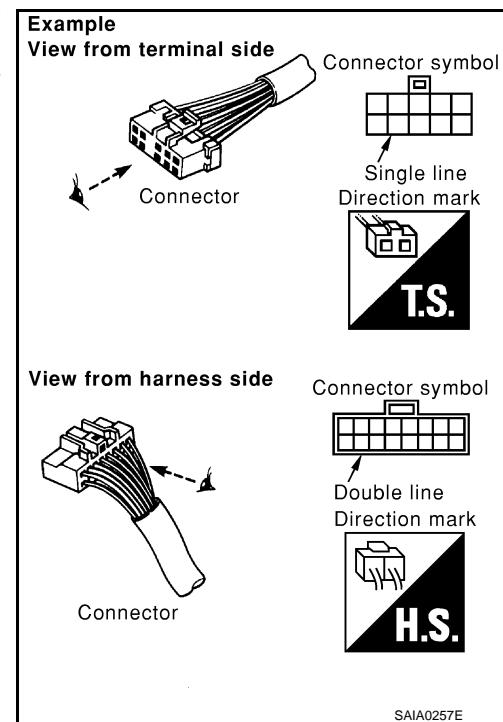

- Male and female terminals

Connector guides for male terminals are shown in black and female terminals in white in wiring diagrams.

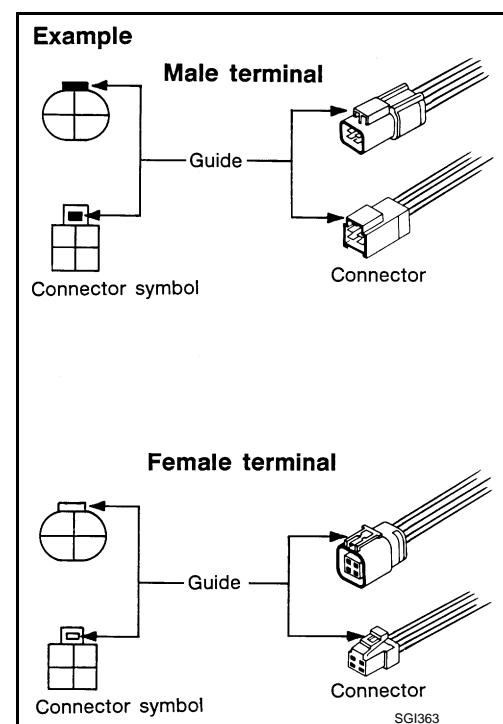


# HOW TO READ WIRING DIAGRAMS

## < HOW TO USE THIS MANUAL >

## Sample/Wiring Diagram -Example-

INFOID:0000000010262081

Each section includes wiring diagrams.

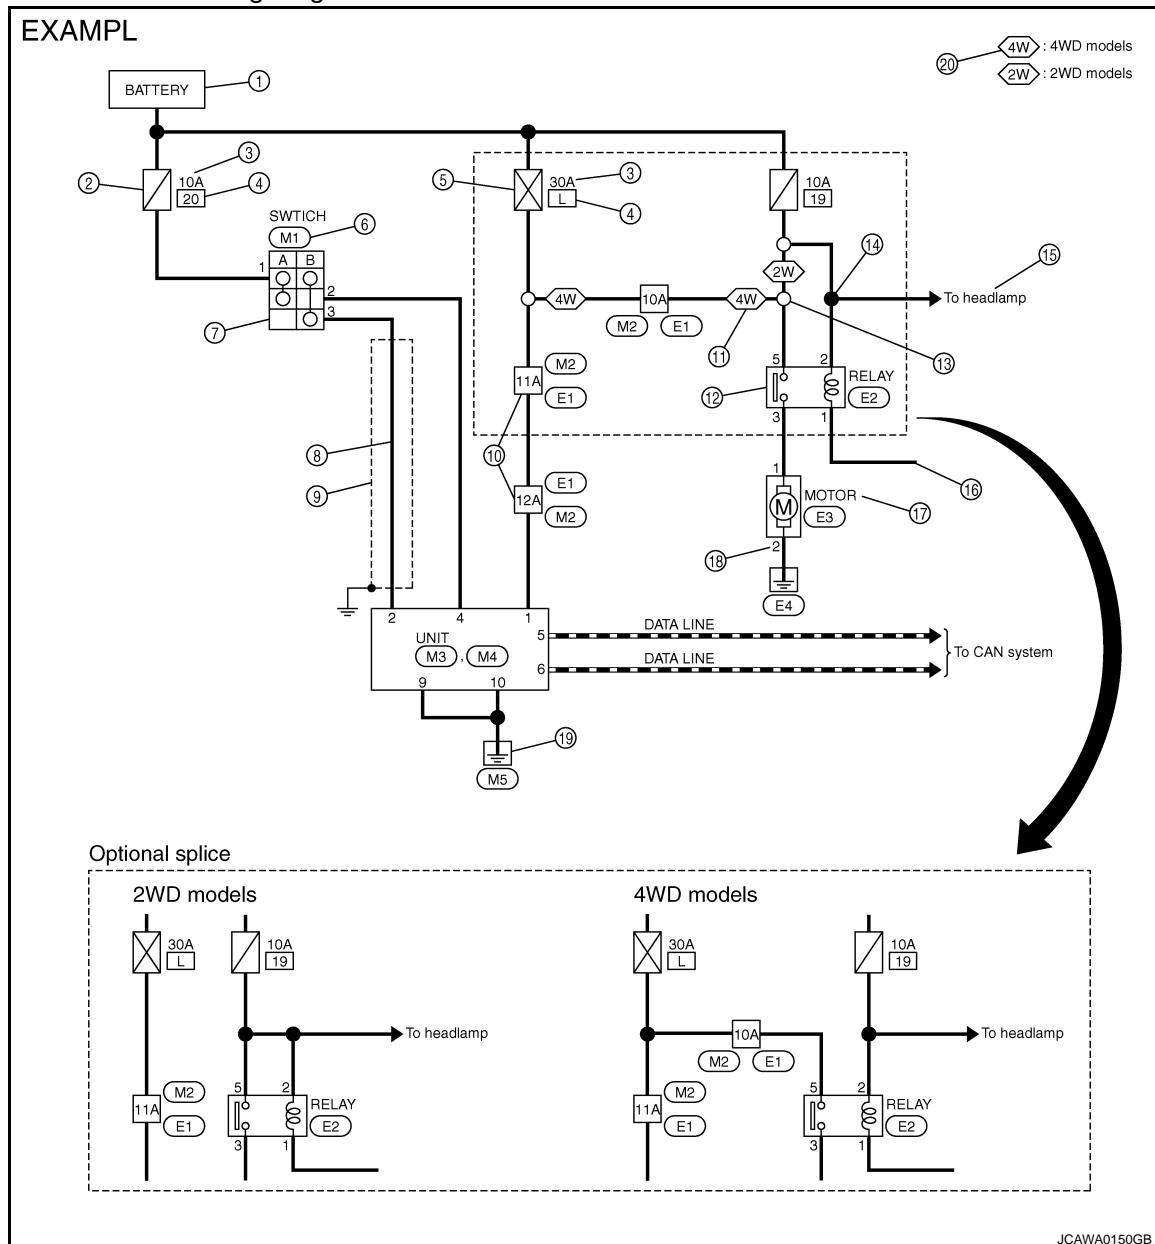

### Description

Number	Item	Description
1	Power supply	<ul style="list-style-type: none"><li>• This means the power supply of fusible link or fuse.</li></ul>
2	Fuse	<ul style="list-style-type: none"><li>• "/" means the fuse.</li></ul>
3	Current rating of fusible link/fuse	<ul style="list-style-type: none"><li>• This means the current rating of the fusible link or fuse.</li></ul>
4	Number of fusible link/fuse	<ul style="list-style-type: none"><li>• This means the number of fusible link or fuse location.</li></ul>
5	Fusible link	<ul style="list-style-type: none"><li>• "X" means the fusible link.</li></ul>
6	Connector number	<ul style="list-style-type: none"><li>• Alphabetic characters show to which harness the connector is placed.</li><li>• Numeric characters show the identification number of connectors.</li></ul>
7	Switch	<ul style="list-style-type: none"><li>• This shows that continuity exists between terminals 1 and 2 when the switch is in the A position. Continuity exists between terminals 1 and 3 when the switch is in the B position.</li></ul>
8	Circuit (Wiring)	<ul style="list-style-type: none"><li>• This means the wiring.</li></ul>

# HOW TO READ WIRING DIAGRAMS

< HOW TO USE THIS MANUAL >

Number	Item	Description
9	Shielded line	• The line enclosed by broken line circle shows shield wire.
10	Connectors	• This means that a transmission line bypasses two connectors or more.
11	Option abbreviation	• This means the vehicle specifications which layouts the circuit between "O".
12	Relay	• This shows an internal representation of the relay.
13	Optional splice	• The open circle shows that the splice is optional depending on vehicle application.
14	Splice	• The shaded circle "●" means the splice.
15	System branch	• This shows that the circuit is branched to other systems.
16	Page crossing	• This circuit continues to an adjacent page.
17	Component name	• This shows the name of a component.
18	Terminal number	• This means the terminal number of a connector.
19	Ground (GND)	• This shows the ground connection.
20	Explation of option de- scription	• This shows a description of the option abbreviation used on the page.

GI

B

C

D

E

F

G

H

I

J

K

L

M

N

O


P

## SWITCH POSITIONS

Switches are shown in wiring diagrams as if the vehicle is in the "normal" condition.

A vehicle is in the "normal" condition when:

- ignition switch is "OFF"
- doors, hood and trunk lid/back door are closed
- pedals are not depressed
- parking brake is released

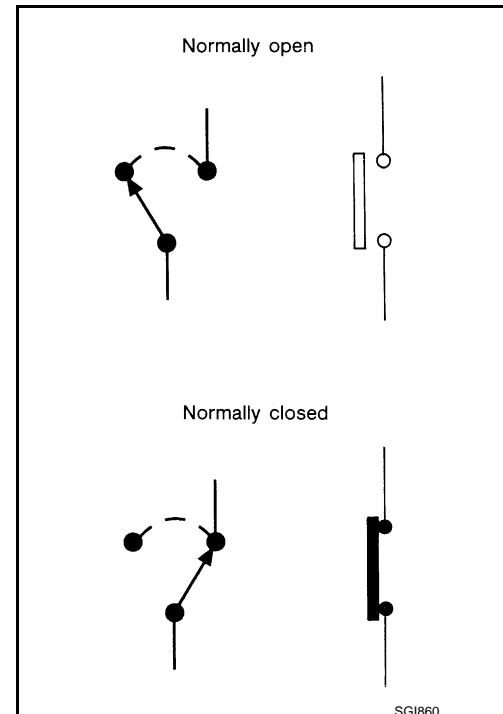

## MULTIPLE SWITCH

The continuity of multiple switch is described in two ways as shown below.

- The switch chart is used in schematic diagrams.

# HOW TO READ WIRING DIAGRAMS

## < HOW TO USE THIS MANUAL >


- The switch diagram is used in wiring diagrams.

### Example

(SWITCH CHART)

	OFF	INT	LO	HI	WASH
1					
2					
3	○	○	○		
4	○	○			
5		○			
6	○	○	○		

(SWITCH DIAGRAM)

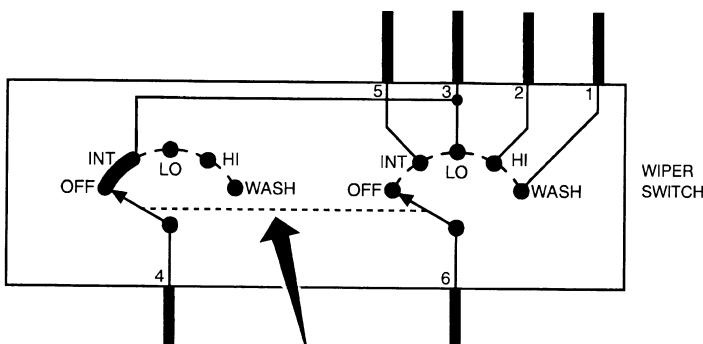

Both switches are turned in combination.

Continuity circuit of wiper switch


SWITCH POSITION	CONTINUITY CIRCUIT
OFF	3 - 4
INT	3 - 4, 5 - 6
LO	3 - 6
HI	2 - 6
WASH	1 - 6

JSAIA0017GB

## Connector Information

INFOID:0000000010262082

## HOW TO USE CONNECTOR INFORMATION

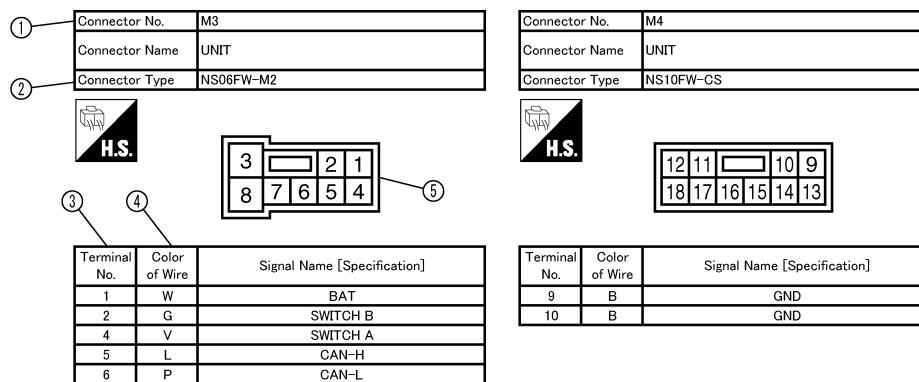

JCAWA0152GB

# HOW TO READ WIRING DIAGRAMS

< HOW TO USE THIS MANUAL >

Description																					
Number	Item	Description																			
1	Connector number	<ul style="list-style-type: none"> <li>Alphabetic characters show to which harness the connector is placed.</li> <li>Numeric characters show the identification number of connectors.</li> </ul>	GI																		
2	Connector type	<p>1: Connector model      2: Cavity      3: Male (M) and female (F) terminals      4: Connector color      5: Special type</p> <p>Example:</p> <p>JPMIA0113GB</p>	B C D E																		
3	Terminal number	<ul style="list-style-type: none"> <li>This means the terminal number of a connector.</li> </ul>	F																		
4	Wire color	<table> <tbody> <tr> <td>B = Black</td> <td>BR = Brown</td> </tr> <tr> <td>W = White</td> <td>OR or O = Orange</td> </tr> <tr> <td>R = Red</td> <td>P = Pink</td> </tr> <tr> <td>G = Green</td> <td>PU or V (Violet) = Purple</td> </tr> <tr> <td>L = Blue</td> <td>GY or GR = Gray</td> </tr> <tr> <td>Y = Yellow</td> <td>SB = Sky Blue</td> </tr> <tr> <td>LG = Light Green</td> <td>CH = Dark Brown</td> </tr> <tr> <td>BG or BE = Beige</td> <td>DG = Dark Green</td> </tr> <tr> <td>LA = Lavender</td> <td></td> </tr> </tbody> </table> <ul style="list-style-type: none"> <li>When the wire color is striped, the base color is given first, followed by the stripe color as shown below:          Example: L/W = Blue with White Stripe</li> </ul>	B = Black	BR = Brown	W = White	OR or O = Orange	R = Red	P = Pink	G = Green	PU or V (Violet) = Purple	L = Blue	GY or GR = Gray	Y = Yellow	SB = Sky Blue	LG = Light Green	CH = Dark Brown	BG or BE = Beige	DG = Dark Green	LA = Lavender		G H I
B = Black	BR = Brown																				
W = White	OR or O = Orange																				
R = Red	P = Pink																				
G = Green	PU or V (Violet) = Purple																				
L = Blue	GY or GR = Gray																				
Y = Yellow	SB = Sky Blue																				
LG = Light Green	CH = Dark Brown																				
BG or BE = Beige	DG = Dark Green																				
LA = Lavender																					
5	Connector	<ul style="list-style-type: none"> <li>This means the connector information.</li> <li>This unit-side is described by the connector symbols.</li> </ul>	J K L M N O P																		

# ABBREVIATIONS

< HOW TO USE THIS MANUAL >

## ABBREVIATIONS

### Abbreviation List

INFOID:0000000010262083

The following **ABBREVIATIONS** are used:

A

ABBREVIATION	DESCRIPTION
A/C	Air conditioner
A/C	Air conditioning
A/F sensor	Air fuel ratio sensor
A/T	Automatic transaxle/transmission
ABS	Anti-lock braking system
ACCS	Advance climate control system
ACL	Air cleaner
AP	Accelerator pedal
APP	Accelerator pedal position
ATF	Automatic transmission fluid
AV	Audio visual
AWD	All wheel drive

B

ABBREVIATION	DESCRIPTION
BARO	Barometric pressure
BCI	Back-up collision intervention
BCM	Body control module
BLSD	Brake limited slip differential
BPP	Brake pedal position
BSW	Blind spot warning

C

ABBREVIATION	DESCRIPTION
CKP	Crankshaft position
CL	Closed loop
CMP	Camshaft position
CPP	Clutch pedal position
CTP	Closed throttle position
CVT	Continuously variable transaxle/transmission

D

ABBREVIATION	DESCRIPTION
D1	Drive range first gear
D2	Drive range second gear
D3	Drive range third gear
D4	Drive range fourth gear
DCA	Distance control assist
DDS	Downhill drive support
DFI	Direct fuel injection system
DLC	Data link connector
DTC	Diagnostic trouble code

# ABBREVIATIONS

< HOW TO USE THIS MANUAL >

ABBREVIATION		DESCRIPTION	
E/T	Exhaust temperature		GI
EBD	Electric brake force distribution		B
EC	Engine control		C
ECL	Engine coolant level		D
ECM	Engine control module		E
ECT	Engine coolant temperature		F
ECV	Electrical control valve		G
EEPROM	Electrically erasable programmable read only memory		H
EFT	Engine fuel temperature		I
EGR	Exhaust gas recirculation		J
EGRT	Exhaust gas recirculation temperature		K
EGT	Exhaust gas temperature		L
EOP	Engine oil pressure		M
EP	Exhaust pressure		N
EPR	Exhaust pressure regulator		O
EPS	Electronically controlled power steering		P
ESP	Electronic stability program system		
EVAP canister	Evaporative emission canister		
EVSE	Electric vehicle supply equipment		
EXC	Exhaust control		
F			
ABBREVIATION		DESCRIPTION	
FC	Fan control		
FCW	Forward collision warning		
FEB	Forward emergency braking		
FIC	Fuel injector control		
FP	Fuel pump		
FR	Front		
FRP	Fuel rail pressure		
FRT	Fuel rail temperature		
FTP	Fuel tank pressure		
FTT	Fuel tank temperature		
G			
ABBREVIATION		DESCRIPTION	
GND	Ground		
GPS	Global positioning system		
GST	Generic scan tool		
H			
ABBREVIATION		DESCRIPTION	
HBMC	Hydraulic body-motion control system		
HDD	Hard disk drive		
HO2S	Heated oxygen sensor		
HOC	Heated oxidation catalyst		
HPCM	Hybrid power train control module		

## ABBREVIATIONS

< HOW TO USE THIS MANUAL >

ABBREVIATION	DESCRIPTION
I/M	Inspection and maintenance
IA	Intake air
IAC	Idle air control
IAT	Intake air temperature
IBA	Intelligent brake assist
IC	Ignition control
ICC	Intelligent cruise control
ICM	Ignition control module
IPDM E/R	Intelligent power distribution module engine room
ISC	Idle speed control
ISS	Input shaft speed
K	
ABBREVIATION	DESCRIPTION
KS	Knock sensor
L	
ABBREVIATION	DESCRIPTION
LBC	Li-ion battery controller
LCD	Liquid crystal display
LCU	Local control unit
LDP	Lane departure prevention
LDW	Lane departure warning
LED	Light emitting diode
LH	Left-hand
LIN	Local interconnect network
M	
ABBREVIATION	DESCRIPTION
M/T	Manual transaxle/transmission
MAF	Mass airflow
MAP	Manifold absolute pressure
MDU	Multi display unit
MI	Malfunction indicator
MIL	Malfunction indicator lamp
N	
ABBREVIATION	DESCRIPTION
NOX	Nitrogen oxides
O	
ABBREVIATION	DESCRIPTION
O2	Oxygen
O2S	Oxygen sensor
OBD	On board diagnostic
OC	Oxidation catalytic converter
OD	Overdrive
OL	Open loop
OSS	Output shaft speed

# ABBREVIATIONS

< HOW TO USE THIS MANUAL >

P	ABBREVIATION	DESCRIPTION	GI
	P/S	Power steering	B
	PBR	Potentio balance resistor	C
	PCV	Positive crankcase ventilation	D
	PFCW	Predictive forward collision warning	E
	PNP	Park/Neutral position	F
	PSP	Power steering pressure	G
	PTC	Positive temperature coefficient	H
	PTO	Power takeoff	I
	PWM	Pulse width modulation	J
R	ABBREVIATION	DESCRIPTION	K
	RAM	Random access memory	L
	RAS	Rear active steer	M
	RH	Right-hand	N
	ROM	Read only memory	O
	RPM	Engine speed	P
	RR	Rear	
S	ABBREVIATION	DESCRIPTION	
	SAE	Society of Automotive Engineers, Inc.	
	SCK	Serial clock	
	SDS	Service Data and Specifications	
	SRT	System readiness test	
	SST	Special Service Tools	
T	ABBREVIATION	DESCRIPTION	
	TC	Turbocharger	
	TCM	Transmission control module	
	TCS	Traction control system	
	TCU	Telematics communication unit	
	TP	Throttle position	
	TPMS	Tire pressure monitoring system	
	TSS	Turbine shaft speed	
	TWC	Three way catalytic converter	
U	ABBREVIATION	DESCRIPTION	
	USS	Uphill start support	
V	ABBREVIATION	DESCRIPTION	
	VCM	Vehicle control module	
	VDC	Vehicle dynamics control system	
	VIN	Vehicle identification number	
	VSS	Vehicle speed sensor	

## ABBREVIATIONS

< HOW TO USE THIS MANUAL >

W

ABBREVIATION	DESCRIPTION
WOT	Wide open throttle

1

ABBREVIATION	DESCRIPTION
11	1st range first gear
12	1st range second gear
1GR	First gear

2

ABBREVIATION	DESCRIPTION
21	2nd range first gear
22	2nd range second gear
2GR	Second gear
2WD	2-wheel drive

3

ABBREVIATION	DESCRIPTION
3GR	Third gear

4

ABBREVIATION	DESCRIPTION
4GR	Fourth gear
4WAS	Four wheel active steer
4WD	Four wheel drive

5

ABBREVIATION	DESCRIPTION
5GR	Fifth gear

6

ABBREVIATION	DESCRIPTION
6GR	Sixth gear

7

ABBREVIATION	DESCRIPTION
7GR	Seventh gear

# TIGHTENING TORQUE OF STANDARD BOLTS

< HOW TO USE THIS MANUAL >

## TIGHTENING TORQUE OF STANDARD BOLTS

GI

### Description

INFOID:0000000010262084

This vehicle has both new standard based on ISO\* and previous standard bolts/nuts. There are some differences between these two types of bolts/ nuts; shape of the head, grade of strength, hexagonal width across flats and the standard tightening torque.

- For guidance in discriminating, refer to [GI-19, "Tightening Torque Table \(New Standard Included\)".](#)
- The new standard machine screws and tapping screws have a head of ISO standard torx recess.
- If the tightening torque is not described in the description or figure, refer to [GI-19, "Tightening Torque Table \(New Standard Included\)".](#)

\*ISO: International Organization for Standardization

### Tightening Torque Table (New Standard Included)

INFOID:0000000010262085

#### CAUTION:

- The special parts are excluded.
- The bolts/nuts in these tables have a strength (discrimination) number/symbol assigned to the head or the like. As to the relation between the strength grade in these tables and the strength (discrimination) number/symbol, refer to "DISCRIMINATION OF BOLTS AND NUTS".

### PREVIOUS STANDARD

Grade (Strength grade)	Bolt size	Bolt di- ameter mm	Hexagonal width across flats mm	Pitch mm	Tightening torque (Without lubricant)							
					Hexagon head bolt				Hexagon flange bolt			
					N·m	kg·m	ft-lb	in-lb	N·m	kg·m	ft-lb	in-lb
4T	M6	6.0	10	1.0	5.5	0.56	4	49	7	0.71	5	62
	M8	8.0	12	1.25	13.5	1.4	10	—	17	1.7	13	—
				1.0	13.5	1.4	10	—	17	1.7	13	—
	M10	10.0	14	1.5	28	2.9	21	—	35	3.6	26	—
				1.25	28	2.9	21	—	35	3.6	26	—
	M12	12.0	17	1.75	45	4.6	33	—	55	5.6	41	—
				1.25	45	4.6	33	—	65	6.6	48	—
	M14	14.0	19	1.5	80	8.2	59	—	100	10	74	—
	7T	M6	6.0	10	1.0	9	0.92	7	80	11	1.1	8
		M8	8.0	12	1.25	22	2.2	16	—	28	2.9	21
					1.0	22	2.2	16	—	28	2.9	21
		M10	10.0	14	1.5	45	4.6	33	—	55	5.6	41
					1.25	45	4.6	33	—	55	5.6	41
		M12	12.0	17	1.75	80	8.2	59	—	100	10	74
					1.25	80	8.2	59	—	100	10	74
		M14	14.0	19	1.5	130	13	96	—	170	17	125
		9T	M6	6.0	10	1.0	11	1.1	8	—	13.5	1.4
			M8	8.0	12	1.25	28	2.9	21	—	35	3.6
						1.0	28	2.9	21	—	35	3.6
			M10	10.0	14	1.5	55	5.6	41	—	80	8.2
						1.25	55	5.6	41	—	80	8.2
			M12	12.0	17	1.75	100	10	74	—	130	13
						1.25	100	10	74	—	130	13
			M14	14.0	19	1.5	170	17	125	—	210	21

#### CAUTION:

# TIGHTENING TORQUE OF STANDARD BOLTS

< HOW TO USE THIS MANUAL >

**The parts with aluminum or the cast iron washer surface/thread surface are excluded.**

**NEW STANDARD BASED ON ISO**

Grade (Strength grade)	Bolt size	Bolt di- ameter mm	Hexagonal width across flats mm	Pitch mm	Tightening torque							
					Hexagon head bolt				Hexagon flange bolt			
					N·m	kg-m	ft-lb	in-lb	N·m	kg-m	ft-lb	in-lb
4.8 (Without lubricant)	M6	6.0	10	1.0	5.5	0.56	4	49	7	0.71	5	62
	M8	8.0	13	1.25	13.5	1.4	10	—	17	1.7	13	—
				1.0	13.5	1.4	10	—	17	1.7	13	—
	M10	10.0	16	1.5	28	2.9	21	—	35	3.6	26	—
				1.25	28	2.9	21	—	35	3.6	26	—
	M12	12.0	18	1.75	45	4.6	33	—	55	5.6	41	—
				1.25	45	4.6	33	—	65	6.6	48	—
	M14	14.0	21	1.5	80	8.2	59	—	100	10	74	—
4.8 (With lu- bricant)	M6	6.0	10	1.0	4	0.41	3	35	5.5	0.56	4	49
	M8	8.0	13	1.25	11	1.1	8	—	13.5	1.4	10	—
				1.0	11	1.1	8	—	13.5	1.4	10	—
	M10	10.0	16	1.5	22	2.2	16	—	28	2.9	21	—
				1.25	22	2.2	16	—	28	2.9	21	—
	M12	12.0	18	1.75	35	3.6	26	—	45	4.6	33	—
				1.25	35	3.6	26	—	45	4.6	33	—
	M14	14.0	21	1.5	65	6.6	48	—	80	8.2	59	—
8.8 (With lu- bricant)	M6	6.0	10	1.0	8	0.82	6	71	10	1.0	7	89
	M8	8.0	13	1.25	21	2.1	15	—	25	2.6	18	—
				1.0	21	2.1	15	—	25	2.6	18	—
	M10	10.0	16	1.5	40	4.1	30	—	50	5.1	37	—
				1.25	40	4.1	30	—	50	5.1	37	—
	M12	12.0	18	1.75	70	7.1	52	—	85	8.7	63	—
				1.25	70	7.1	52	—	85	8.7	63	—
	M14	14.0	21	1.5	120	12	89	—	140	14	103	—
10.9 (With lu- bricant)	M6	6.0	10	1.0	10	1.0	7	89	12	1.2	9	106
	M8	8.0	13	1.25	27	2.8	20	—	32	3.3	24	—
				1.0	27	2.8	20	—	32	3.3	24	—
	M10	10.0	16	1.5	55	5.6	41	—	65	6.6	48	—
				1.25	55	5.6	41	—	65	6.6	48	—
	M12	12.0	18	1.75	95	9.7	70	—	110	11	81	—
				1.25	95	9.7	70	—	110	11	81	—
	M14	14.0	21	1.5	160	16	118	—	180	18	133	—

**CAUTION:**

1. Use tightening torque with lubricant for the new standard bolts/nuts in principle. Friction coefficient stabilizer is applied to the new standard bolts/nuts.
2. However, use tightening torque without lubricant for the following cases. Friction coefficient stabilizer is not applied to the following bolts/nuts.
  - Grade 4.8, M6 size bolt, Conical spring washer installed
  - Paint removing nut (Size M6 and M8) for fixing with weld bolt

# TIGHTENING TORQUE OF STANDARD BOLTS

< HOW TO USE THIS MANUAL >

## DISCRIMINATION OF BOLTS AND NUTS

GI

### BOLTS


	Grade (Strength)	Discrimination	
Previous standard	4T (392N/mm <sup>2</sup> )		
	7T (686N/mm <sup>2</sup> )		
	9T (883N/mm <sup>2</sup> )		
New Standard	4.8 (420N/mm <sup>2</sup> )		
	8.8 (800N/mm <sup>2</sup> )		
	10.9 (1040N/mm <sup>2</sup> )		

### NUTS

	Grade (Proof load stress)	Discrimination		
Previous standard	7N (686N/mm <sup>2</sup> )			
	9N (883N/mm <sup>2</sup> )			
New Standard	8 (800N/mm <sup>2</sup> )			
	10 (1040N/mm <sup>2</sup> )			

#### NOTICE:

- A number is assigned on the side of the nuts in some cases.
- A number or symbol is assigned on the upper surface of the flange for the nut with flange.

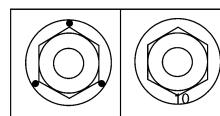

### MACHINE SCREWS AND TAPPING SCREWS

Shape of the head :

Cross recess for the previous standard

Torx recess for the new standard

Screw size	Screw diameter	Torx size
M4	4.0	T20
M5	5.0	T20
M6	6.0	T30

#### NOTICE:

Use torx size T20 (united with M4 screw) for M5 screw although ISO standard specifies T25.

B

C

D

E

F

G

H

I

J

K

L

M

N

O

P

SAIA0453E

# RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS

< HOW TO USE THIS MANUAL >

## RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS

### Recommended Chemical Products and Sealants

INFOID:0000000010262086

Refer to the following chart for help in selecting the appropriate chemical product or sealant.

	Product Description	Purpose	Nissan North America Part No. (USA)	Nissan Canada Part No. (Canada)	Aftermarket Cross-reference Part Nos.
1	Rear View Mirror Adhesive	Used to permanently re-mount rear view mirrors to windows.	999MP-AM000P	99998-50505	Permatex 81844
2	Anaerobic Liquid Gasket	For metal-to-metal flange sealing. Can fill a 0.38 mm (0.015 inch) gap and provide instant sealing for most powertrain applications.	999MP-AM001P	99998-50503	Permatex 51813 and 51817
3	High Performance Thread Sealant	Provides instant sealing on any threaded straight or parallel threaded fitting. (Thread sealant only, no locking ability.) • Do not use on plastic.	999MP-AM002P	999MP-AM002P	Permatex 56521
4	Silicone RTV	Gasket Maker	999MP-AM003P (Ultra Grey)	99998-50506 (Ultra Grey)	Permatex Ultra Grey 82194; Three Bond 1207, 1215, 1216, 1217F, 1217G and 1217H Nissan RTV Part No. 999MP-A7007
		Gasket Maker for Maxima/Quest 5-speed automatic transmission (RE5F22A)	–	–	Three Bond 1281B or exact equivalent in its quality
5	High Temperature, High Strength Thread Locking Sealant (Red)	Threadlocker	999MP-AM004P	999MP-AM004P	Permatex 27200; Three Bond 1360, 1360N, 1305 N&P, 1307N, 1335, 1335B, 1363B, 1377C, 1386B, D&E and 1388 Loctite 648
6	Medium Strength Thread Locking Sealant (Blue)	Threadlocker (service tool removable)	999MP-AM005P	999MP-AM005P	Permatex 24200, 24206, 24240, 24283 and 09178; Three Bond 1322, 1322N, 1324 D&N, 1333D, 1361C, 1364D, 1370C and 1374

## IDENTIFICATION INFORMATION

< VEHICLE INFORMATION >

# VEHICLE INFORMATION

## IDENTIFICATION INFORMATION

GI


### Model Variation

INFOID:0000000010262087

B

Destination	Body	Engine	Axle	Handle	Transmission	Grade	Model				
USA	Wagon	VK56VD	4WD	LHD	7A/T	High	JPKNLHL-EU7				
						Premium	JPKNLJL-EU7				
						High	JPKNLHL-EU8				
						Premium	JPKNLJL-EU8				
			2WD			High	JPKALHL-EU7				
	Canada			LHD		Premium	JPKALJL-EU7				
						High	JPKALHL-EU8				
						Premium	JPKALJL-EU8				
	Mexico		4WD			High	JPKNLHL-EN7				
						Premium	JPKNLHL-EN8				
						Premium	JPKNLJL-EJ7				
						Premium	JPKNLJL-EJ8				

Model variation code (Prefix and suffix designations)

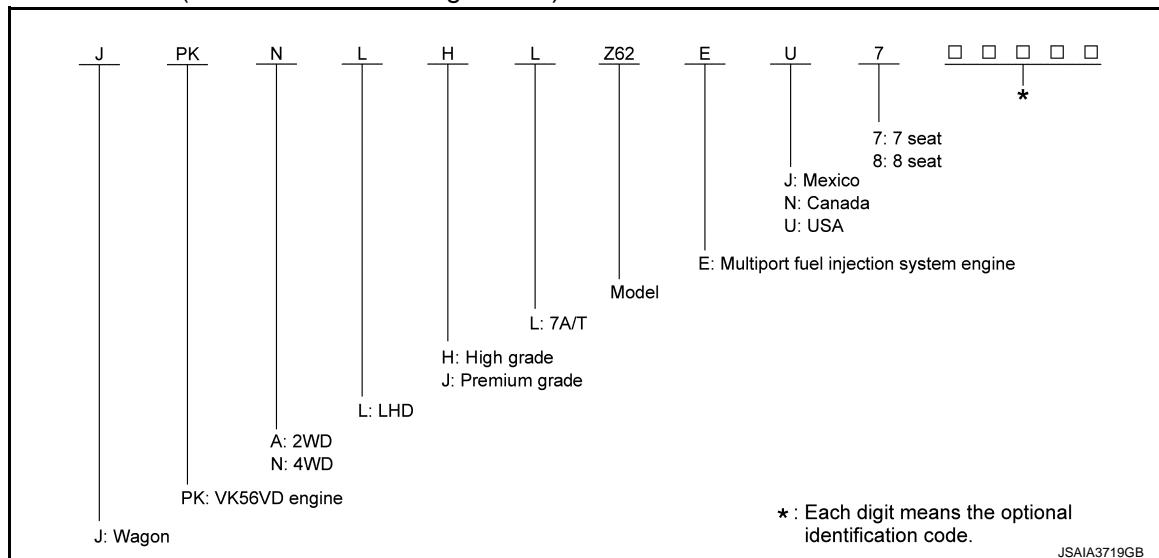

### Information About Identification or Model Code

INFOID:0000000010262088

N


### IDENTIFICATION NUMBER

O

P

# IDENTIFICATION INFORMATION


## < VEHICLE INFORMATION >

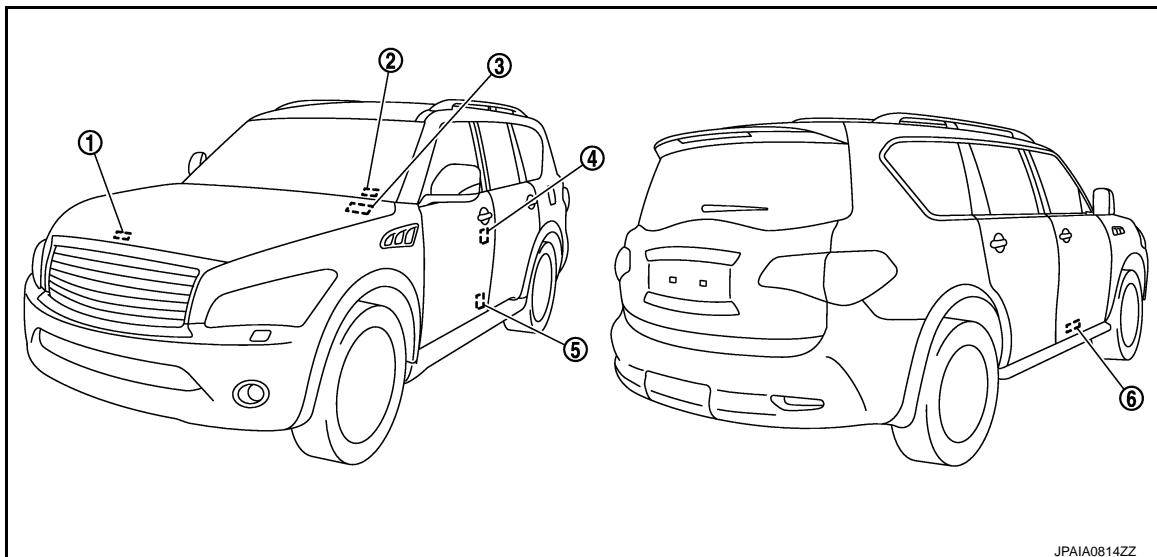

- |   |  |   |
|---|--|---|
| 1. Air conditioner specification label  | 2. Vehicle identification number plate   | 3. Emission control information label<br>(For USA and Canada) |
| 4. Tire and loading information label<br>(For USA and Canada)<br>Tire placard<br>(For Mexico) | 5. FMVSS certification label<br>(For USA)<br>CMVSS certification label<br>(For Canada)<br>Vehicle identification label<br>(For Mexico) | 6. Vehicle identification number<br>(Chassis number)          |

## VEHICLE IDENTIFICATION NUMBER ARRANGEMENT

For USA and Canada

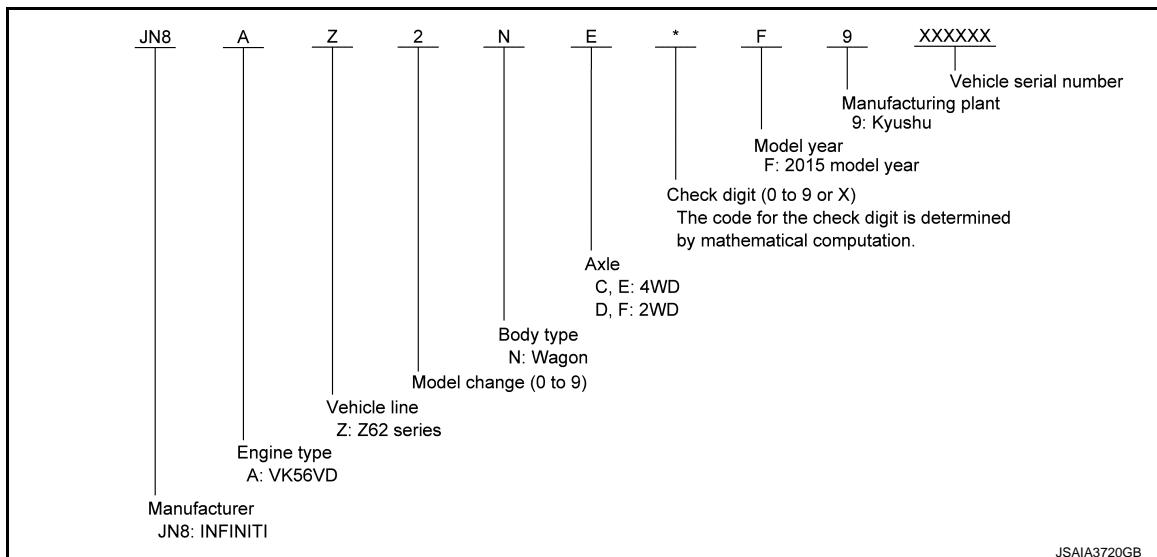

# IDENTIFICATION INFORMATION

## < VEHICLE INFORMATION >

For Mexico

JN1	A	Z	2	8	C	*	F	9	XXXXXX
									Vehicle serial number
									Manufacturing plant 9: Kyushu
									Model year F: 2015 model year
									Check digit (0 to 9 or X) The code for the check digit is determined by mathematical computation.
									Axle C: 4WD
									Body type 8: Wagon
									Model change (0 to 9)
									Vehicle line Z: Z62 series
									Engine type A: VK56VD
									Manufacturer JN1: INFINITI

JSAIA3721GB

G

B

C

D

E

F

G

H

I

J

K

L

M

N

O

P

## CERTIFICATION LABEL

FMVSS certification label

MFD. BY NISSAN MOTOR CO., LTD.	
DATE <b>①</b> GWR/PNBV <b>②</b> LBS. GAWR/PNBE FR. <b>③</b> LBS. WITH <b>④</b> TIRES, <b>⑤</b> RIMS AT <b>⑥</b> PSI COLD SINGLE. GAWR/PNBE RR. <b>⑦</b> LBS. WITH <b>⑧</b> TIRES, <b>⑨</b> RIMS AT <b>⑩</b> PSI COLD SINGLE.	
THIS VEHICLE CONFORMS TO ALL APPLICABLE FED- ERAL MOTOR VEHICLE SA- FETY AND THEFT PREVEN- TION STANDARDS IN EFF- EKT ON THE DATE OF MA- NUFACTURE SHOWN ABOVE.	
VIN: <b>⑪</b>	
TYPE: <b>⑫</b>	
COLOR <b>⑬</b> TRIM <b>⑭</b> TRANS <b>⑮</b>	
<b>⑯</b>	<b>⑰</b>


JSAIA2499ZZ

- 1. MFR Month / Year
- 2. Gross vehicle weight rating
- 3. Gross axle weight rating (Front)
- 4. Tire size
- 5. Wheel size
- 6. Tire inflation pressure
- 7. Gross axle weight rating (Rear)
- 8. Vehicle identification number
- 9. Verification model code
- 10. Body color number
- 11. Trim color number
- 12. Transmission type
- 13. Axle type
- 14. Engine type
- 15. Engine displacement
- 16. VIN bar code

CMVSS certification label

# IDENTIFICATION INFORMATION


## < VEHICLE INFORMATION >

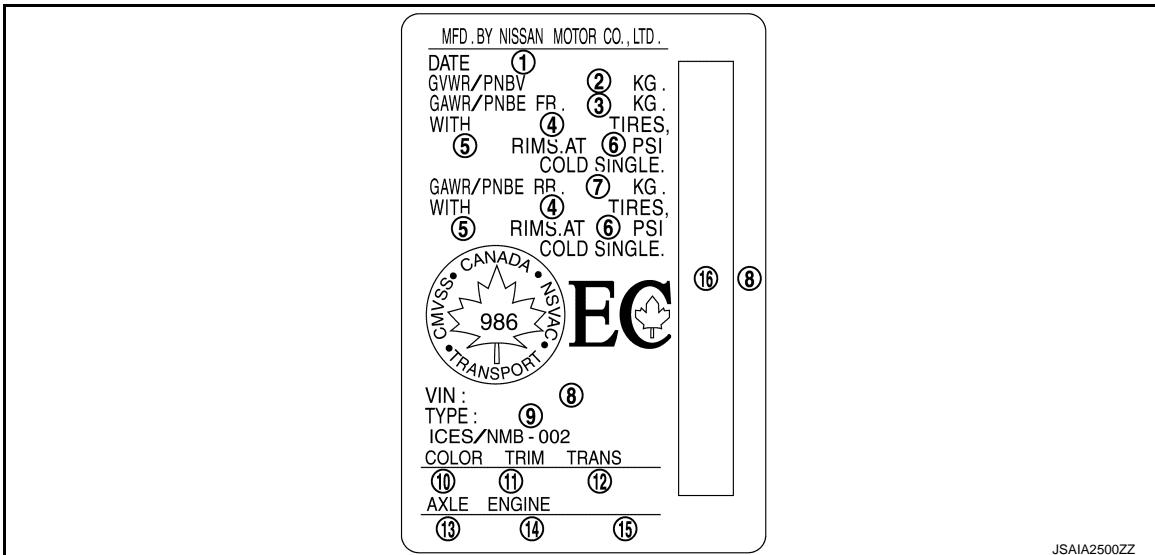

JSAIA2500ZZ

- |                                    |                                  |                                     |
|------------------------------------|----------------------------------|-------------------------------------|
| 1. MFR Month / Year                | 2. Gross vehicle weight rating   | 3. Gross axle weight rating (Front) |
| 4. Tire size                       | 5. Wheel size                    | 6. Tire inflation pressure          |
| 7. Gross axle weight rating (Rear) | 8. Vehicle identification number | 9. Verification model code          |
| 10. Body color number              | 11. Trim color number            | 12. Transmission type               |
| 13. Axle type                      | 14. Engine type                  | 15. Engine displacement             |
| 16. VIN bar code                   |                                  |                                     |

## IDENTIFICATION LABEL

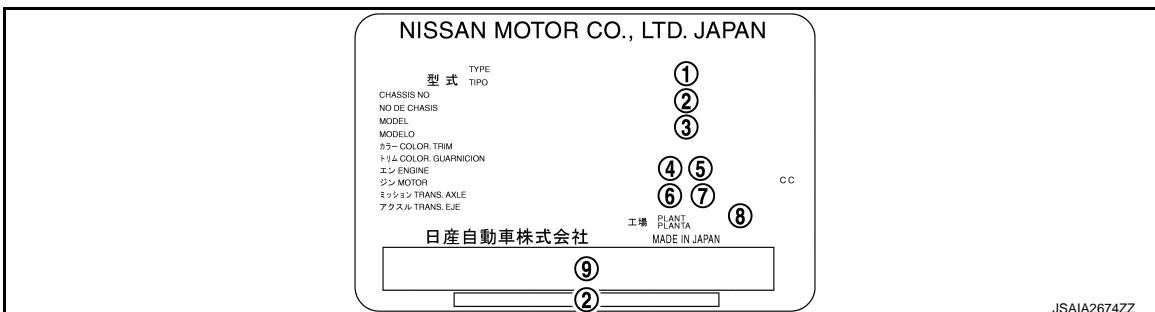


JSAIA2674ZZ

- |                 |   |                         |
|-----------------|---|-------------------------|
| 1. Type         | 2. Vehicle identification number (Chassis number) | 3. Model variation code |
| 4. Engine model | 5. Engine displacement                            | 6. Transmission model   |
| 7. Axle model   | 8. Manufacturing plant                            | 9. VIN bar code         |

## ENGINE SERIAL NUMBER

◀ : Vehicle front

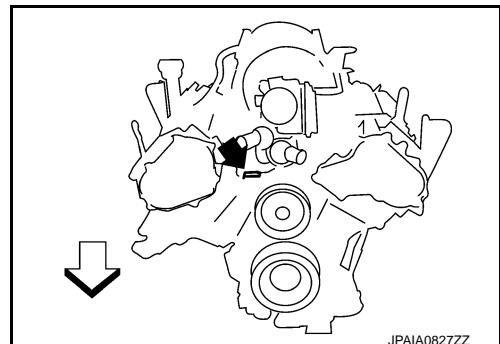


JPAIA0827ZZ

## AUTOMATIC TRANSMISSION NUMBER

# IDENTIFICATION INFORMATION

## < VEHICLE INFORMATION >

 : Vehicle front

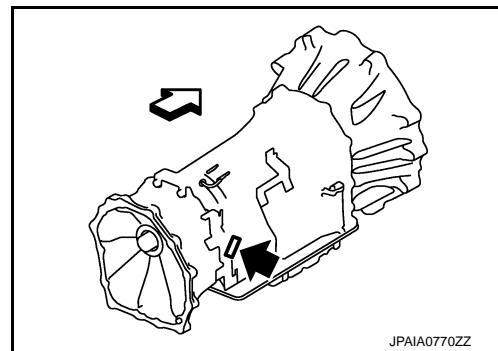

GI

B

C

D

E

F

G

H

I

J

K

L

M

N

O

P

## Dimensions

INFOID:0000000010262089

Unit: mm (in)

Overall length	5,290 (208.3)
Overall width	2,030 (79.9)
Overall height	1,925 (75.8)
Front tread	1,715 (67.5)
Rear tread	1,725 (67.9)
Wheelbase	3,075 (121.1)

## Wheels & Tires

INFOID:0000000010262090

Conventional	20 inch	Tire	P275/60R20 114H	
		Road wheel (Aluminum)	Size	20 × 8J
			Inset	30 mm (1.18 in)
	22 inch	Tire	P275/50R22 111H	
		Road wheel (Aluminum)	Size	22 × 8J
			Inset	30 mm (1.18 in)
Spare	20 inch	Tire	P275/60R20 114H 275/60R20 115M	
		Road wheel (Aluminum)	Size	20 × 8J
			Inset	30 mm (1.18 in)
	22 inch	Tire	P275/50R22 111H	
		Road wheel (Aluminum)	Size	22 × 8J
			Inset	30 mm (1.18 in)

## PRECAUTIONS

< PRECAUTION >

# PRECAUTION

## PRECAUTIONS

### Description

INFOID:0000000010262091

Observe the following precautions to ensure safe and proper servicing. These precautions are not described in each individual section.

### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000010262092

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

#### **WARNING:**

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**


Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

### Precaution for Procedure without Cowl Top Cover

INFOID:0000000010262094

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

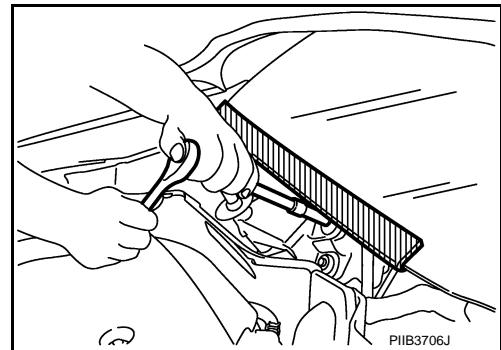

# PRECAUTIONS

< PRECAUTION >

## Precautions for Removing Battery Terminal

INFOID:0000000010262096

GI

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

**NOTE:**

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


**NOTE:**

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

**NOTE:**

The removal of 12V battery may cause a DTC detection error.

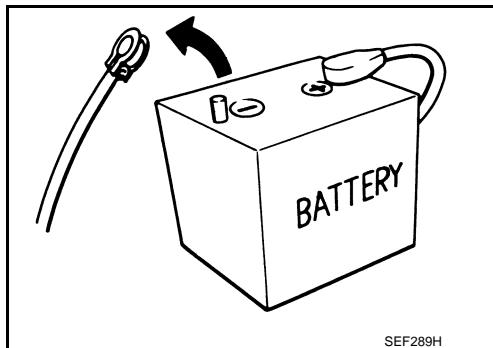

SEF289H

## General Precautions

INFOID:0000000010262097

F

G

H

I

J

K

L

M

N


O

P

- Do not operate the engine for an extended period of time without proper exhaust ventilation.

Keep the work area well ventilated and free of any inflammable materials. Special care should be taken when handling any inflammable or poisonous materials, such as gasoline, refrigerant gas, etc. When working in a pit or other enclosed area, be sure to properly ventilate the area before working with hazardous materials.

Do not smoke while working on the vehicle.

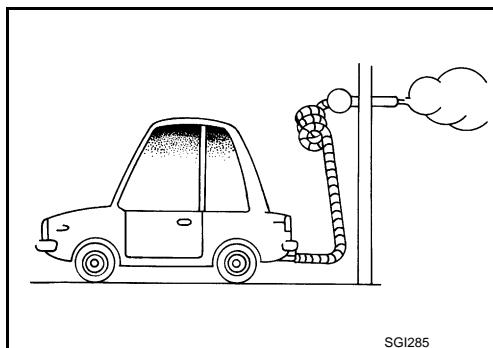


SGI285

- Before jacking up the vehicle, apply wheel chocks or other tire blocks to the wheels to prevent the vehicle from moving. After jacking up the vehicle, support the vehicle weight with safety stands at the points designated for proper lifting before working on the vehicle.

These operations should be done on a level surface.

- When removing a heavy component such as the engine or transaxle/transmission, be careful not to lose your balance and drop them. Also, do not allow them to strike adjacent parts, especially the brake tubes and master cylinder.

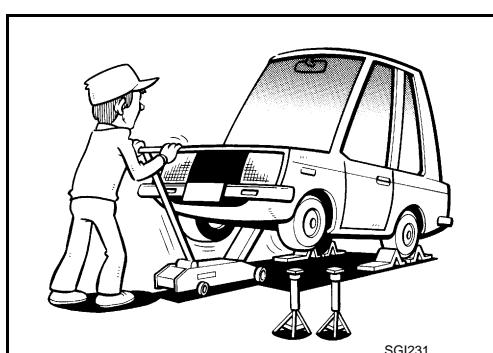


SGI231

- Before starting repairs which do not require battery power:  
Turn off ignition switch.

Disconnect the negative battery terminal.

- If the battery terminals are disconnected, recorded memory of radio and each control unit is erased.

- For vehicles with two batteries, be sure to remove both batteries when instructed to remove 12V battery in the service manual. If specified as main battery or sub battery, then do as instructed.

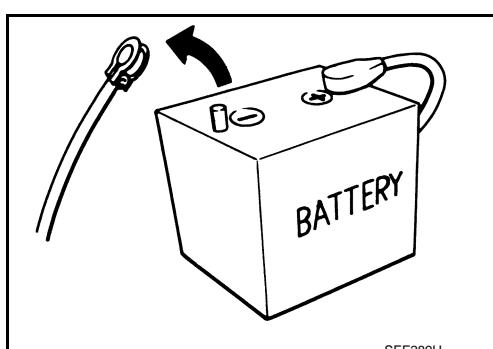


SEF289H


## PRECAUTIONS

### < PRECAUTION >

- To prevent serious burns:  
Avoid contact with hot metal parts.  
Do not remove the radiator cap when the engine is hot.
- Dispose of drained oil or the solvent used for cleaning parts in an appropriate manner.
- Do not attempt to top off the fuel tank after the fuel pump nozzle shuts off automatically.  
Continued refueling may cause fuel overflow, resulting in fuel spray and possibly a fire.
- Clean all disassembled parts in the designated liquid or solvent prior to inspection or assembly.
- Replace oil seals, gaskets, packings, O-rings, locking washers, cotter pins, self-locking nuts, etc. with new ones.
- Replace inner and outer races of tapered roller bearings and needle bearings as a set.
- Arrange the disassembled parts in accordance with their assembled locations and sequence.
- Do not touch the terminals of electrical components which use microcomputers (such as ECM).  
Static electricity may damage internal electronic components.
- After disconnecting vacuum or air hoses, attach a tag to indicate the proper connection.
- Use only the fluids and lubricants specified in this manual.
- Use approved bonding agent, sealants or their equivalents when required.
- Use hand tools, power tools (disassembly only) and recommended special tools where specified for safe and efficient service repairs.
- When repairing the fuel, oil, water, vacuum or exhaust systems, check all affected lines for leakage.

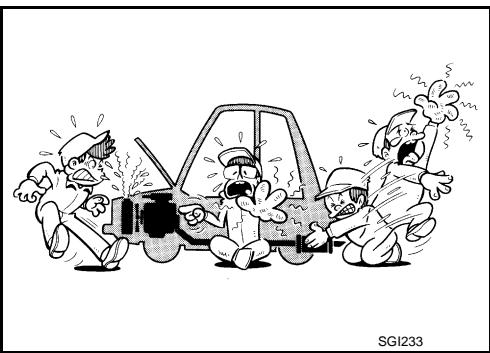


SGI233

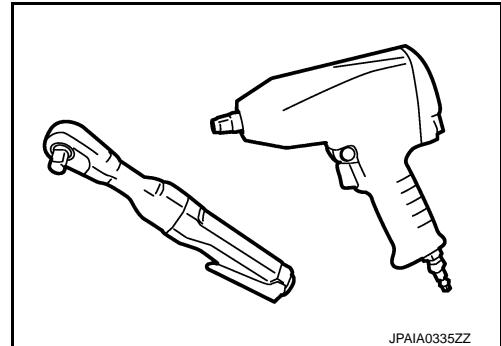

JPAIA0335ZZ

- Before servicing the vehicle:  
Protect fenders, upholstery and carpeting with appropriate covers.  
Take caution that keys, buckles or buttons do not scratch paint.

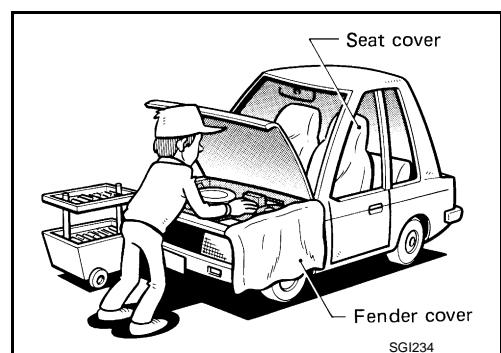

SGI234

### **WARNING:**

To prevent ECM from storing the diagnostic trouble codes, never carelessly disconnect the harness connectors which are related to the engine control system and TCM (transmission control module) system. The connectors should be disconnected only when working according to the WORK FLOW of TROUBLE DIAGNOSES in EC and TM sections.

### Three Way Catalyst

INFOID:0000000010262098

If a large amount of unburned fuel flows into the catalyst, the catalyst temperature will be excessively high. To prevent this, follow the instructions.

- Use unleaded gasoline only. Leaded gasoline will seriously damage the three way catalyst.
- When checking for ignition spark or measuring engine compression, make tests quickly and only when necessary.
- Do not run engine when the fuel tank level is low, otherwise the engine may misfire, causing damage to the catalyst.

# PRECAUTIONS

## < PRECAUTION >

Do not place the vehicle on flammable material. Keep flammable material off the exhaust pipe and the three way catalyst.

GI

## Multiport Fuel Injection System or Engine Control System

INFOID:000000010262099

- Before connecting or disconnecting any harness connector for the multiport fuel injection system or ECM:  
Turn ignition switch to "OFF" position.  
Disconnect negative battery terminal.  
Otherwise, there may be damage to ECM.
- Before disconnecting pressurized fuel line from fuel pump to injectors, be sure to release fuel pressure.
- Be careful not to jar components such as ECM and mass air flow sensor.




SGI787

INFOID:000000010262100

## Hoses


### HOSE REMOVAL AND INSTALLATION

- To prevent damage to rubber hose, do not pry off rubber hose with tapered tool or screwdriver.

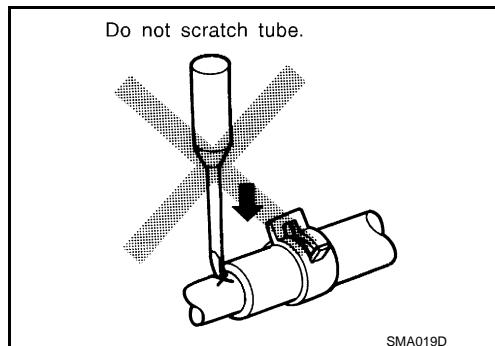

SMA019D


- To reinstall the rubber hose securely, check that hose insertion length and orientation is correct. (If tube is equipped with hose stopper, insert rubber hose into tube until it butts up against hose stopper.)

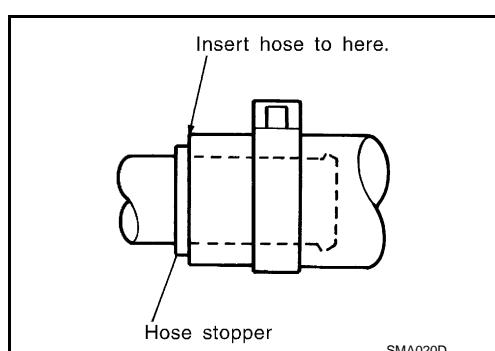

SMA020D

### HOSE CLAMPING

- If old rubber hose is re-used, install hose clamp in its original position (at the indentation where the old clamp was). If there is a trace of tube bulging left on the old rubber hose, align rubber hose at that position.
- Discard old clamps; replace with new ones.

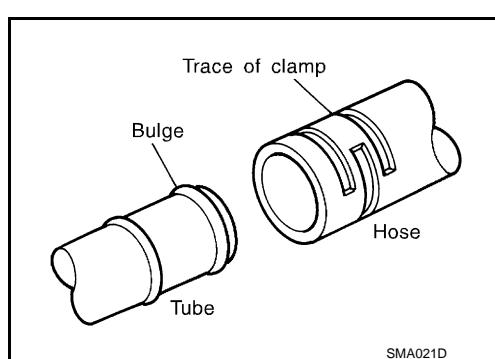


SMA021D

# PRECAUTIONS

## < PRECAUTION >

- After installing plate clamps, apply force to them in the direction of the arrow, tightening rubber hose equally all around.

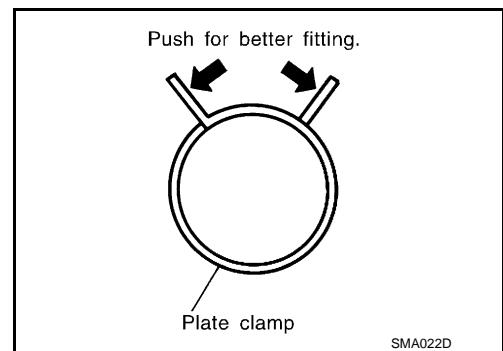

## Engine Oils

INFOID:0000000010262101

Prolonged and repeated contact with used engine oil may cause skin cancer. Try to avoid direct skin contact with used oil.

If skin contact is made, wash thoroughly with soap or hand cleaner as soon as possible.

## HEALTH PROTECTION PRECAUTIONS

- Avoid prolonged and repeated contact with oils, particularly used engine oils.
- Wear protective clothing, including impervious gloves where practicable.
- Do not put oily rags in pockets.
- Avoid contaminating clothes, particularly underpants, with oil.
- Heavily soiled clothing and oil-impregnated footwear should not be worn. Overalls must be cleaned regularly.
- First aid treatment should be obtained immediately for open cuts and wounds.
- Use barrier creams, applying them before each work period, to help the removal of oil from the skin.
- Wash with soap and water to ensure all oil is removed (skin cleansers and nail brushes will help). Preparations containing lanolin replace the natural skin oils which have been removed.
- Do not use gasoline, kerosene, diesel fuel, gas oil, thinners or solvents for cleaning skin.
- If skin disorders develop, obtain medical advice without delay.
- Where practical, degrease components prior to handling.
- Where there is a risk of eye contact, eye protection should be worn, for example, chemical goggles or face shields; in addition an eye wash facility should be provided.

## ENVIRONMENTAL PROTECTION PRECAUTIONS

Dispose of used oil and used oil filters through authorized waste disposal contractors to licensed waste disposal sites, or to the waste oil reclamation trade. If in doubt, contact the local authority for advice on disposal facilities.

It is illegal to pour used oil on to the ground, down sewers or drains, or into water sources.

The regulations concerning pollution vary between regions.

## Air Conditioning

INFOID:0000000010262102

Use an approved refrigerant recovery unit any time the air conditioning system must be discharged. Refer to HA section "REFRIGERANT" for specific instructions.

## Fuel

INFOID:0000000010262103

### FOR USA AND CANADA

INFINITI recommends the use of unleaded premium gasoline with an octane rating of at least 91 AKI (Anti-Knock Index) number (Research octane number 96).

If unleaded premium gasoline is not available, may use unleaded regular gasoline with an octane rating of at least 87 AKI number (Research octane number 91), can be used. In such case, engine performance may be decrease.

#### CAUTION:

- Using a fuel other than that specified could adversely affect the emission control system, and may also affect warranty coverage.
- Under no circumstances should a leaded gasoline be used, because this will damage the three-way catalyst.

## PRECAUTIONS

### < PRECAUTION >

- Do not use E-15 or E-85 fuel in the vehicle. The vehicle is not designed to run on E-15 or E-85 fuel. Using E-15 or E-85 fuel in a vehicle not specifically designed for E-15 or E-85 fuel can adversely affect the emission control devices and systems of the vehicle. Damage caused by such fuel is not covered by the INFINITI new vehicle limited warranty.
- U.S government regulations require ethanol dispensing pumps to be identified by a small, square, orange and black label with the common abbreviation or the appropriate percentage for that region.

FOR MEXICO

**CAUTION:**

**Do not use leaded gasoline. Using leaded gasoline will damage the three-way catalyst.**

Use unleaded premium gasoline with an octane rating of at least 91 AKI (Anti-knock index) number (Research octane number 96).

If unleaded premium gasoline is not used, unleaded regular gasoline with an octane rating of at least 87 AKI (Anti-knock Index) number (Research octane number 91) may be used at slightly reduced performance. However, for maximum vehicle performance and the best driveability, the use of unleaded premium gasoline is recommended.

## LIFTING POINT

< PRECAUTION >


### LIFTING POINT

#### Pantograph Jack

INFOID:0000000010262104

##### **WARNING:**

- Never get under the vehicle while it is supported only by the jack. Always use safety stands to support the frame when you have to get under the vehicle.
- Place wheel chocks at both front and back of the wheels on the ground.

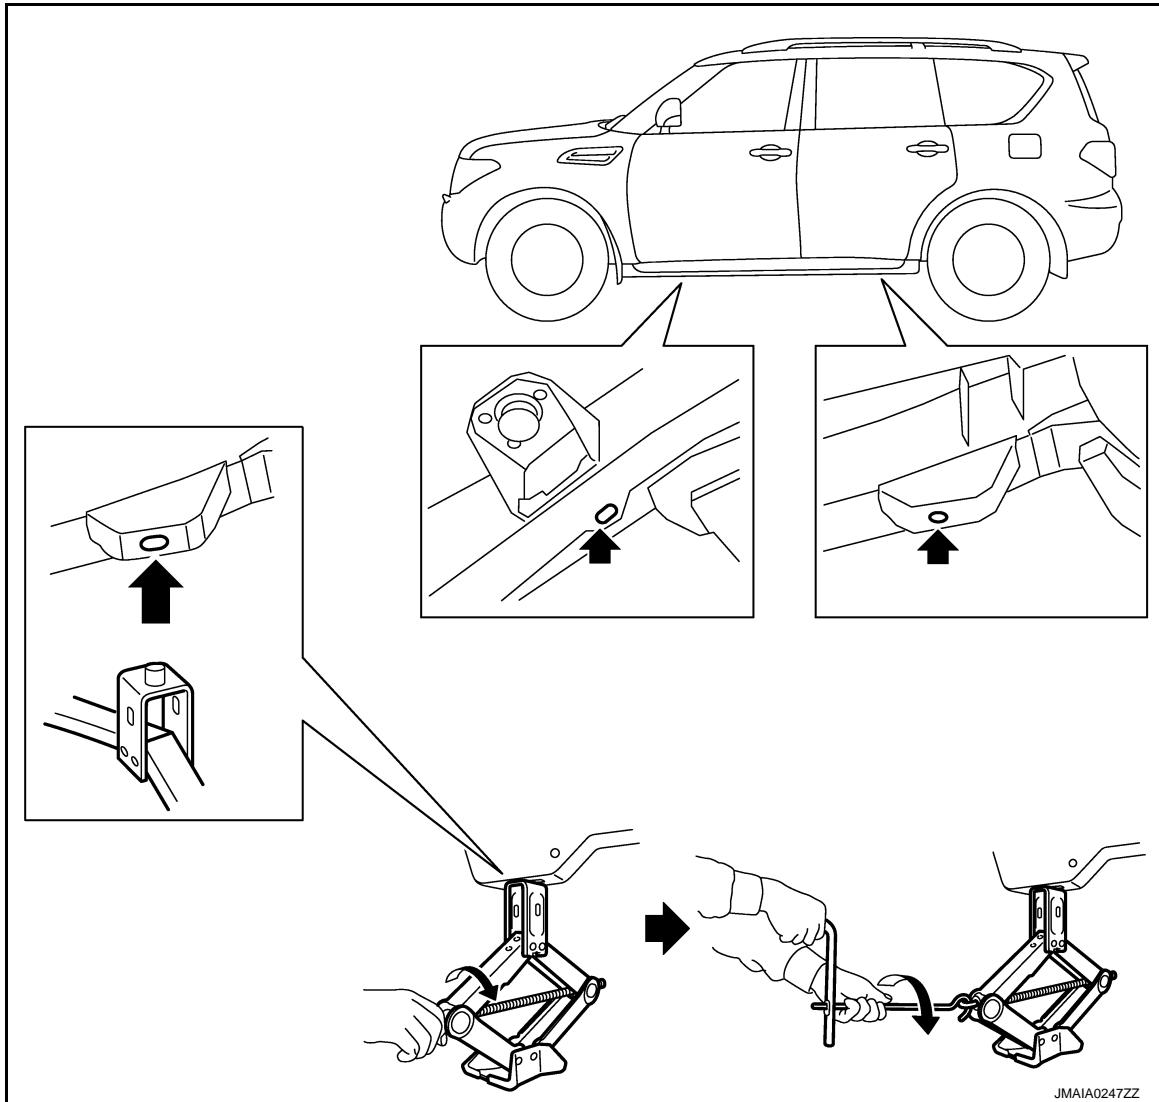

JMAIA0247ZZ

#### Garage Jack and Safety Stand

INFOID:0000000010262105

##### **CAUTION:**

- Place a wooden or rubber block between safety stand and vehicle body when the supporting body is flat.
- Remove engine under cover before jacking up the front side of the vehicle with garage jack. Refer to [BRM-38, "Rear Fender"](#).

## LIFTING POINT

< PRECAUTION >

GI

B

C

D

E

F

G

H

J

K


L

M

N

O

P

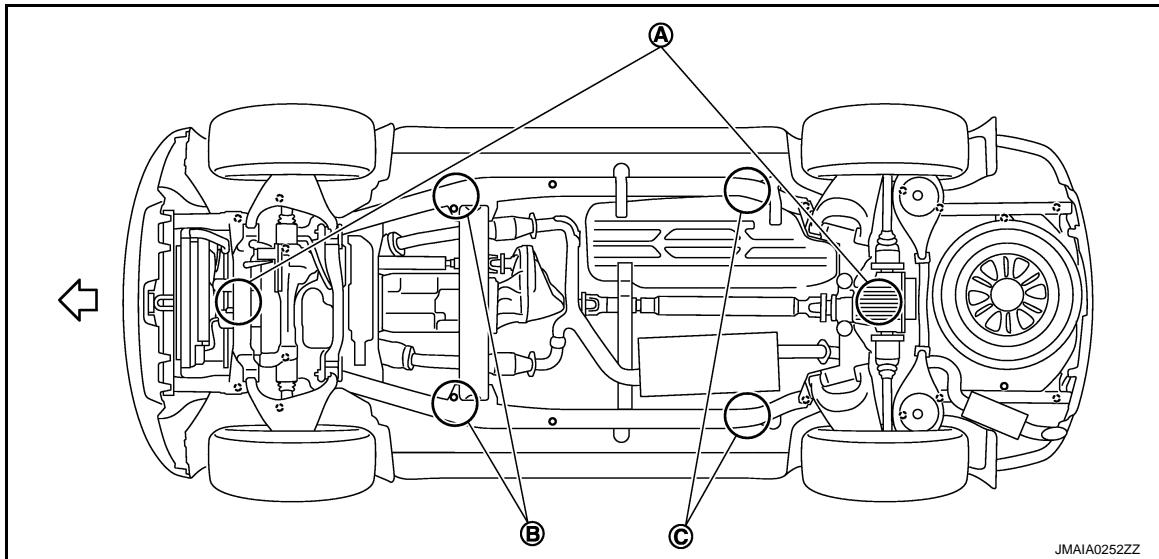

JMAIA0252ZZ


A : Garage jack point

B : Safety stand point

↖ : Vehicle front

INFOID:0000000010262106

### 2-Pole Lift

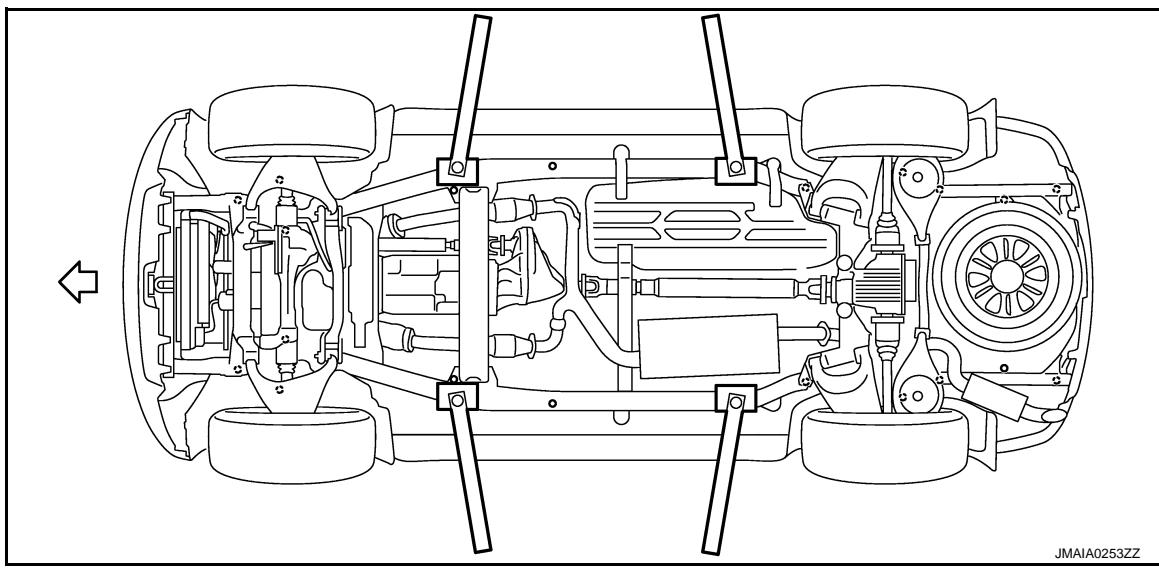

JMAIA0253ZZ

↖ : Vehicle front

# TOW TRUCK TOWING

< PRECAUTION >

## TOW TRUCK TOWING


### Tow Truck Towing

INFOID:0000000010262107

#### CAUTION:

- All applicable state or Provincial (in Canada) laws and local laws regarding the towing operation must be obeyed.
- It is necessary to use proper towing equipment to avoid possible damage to the vehicle during towing operation. Towing is in accordance with Towing Procedure Manual at dealer.
- Always attach safety chains before towing.
- When towing, check that the transmission, steering system and powertrain are in good order. If any unit is damaged, dollies must be used.
- Never tow automatic transmission model from the rear (that is backward) with four wheels on the ground. This may cause serious and expensive damage to the transmission.

#### 2WD MODELS

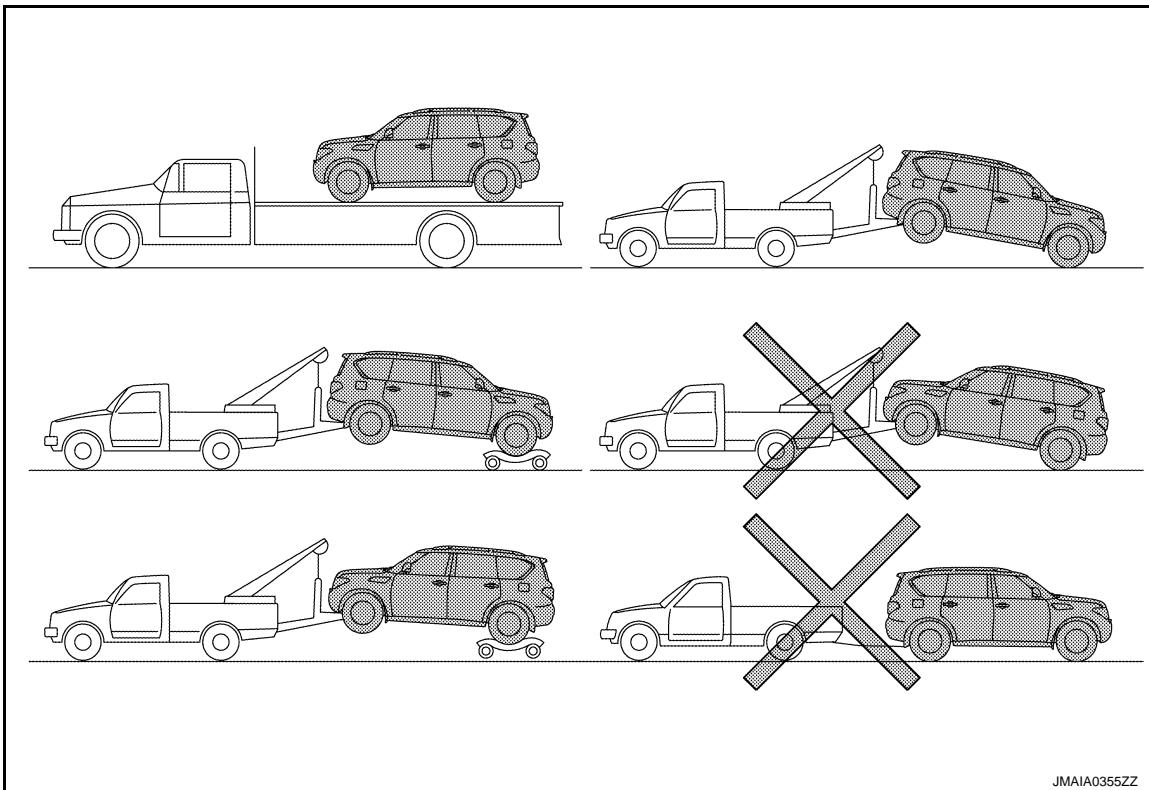

JMAIA0355ZZ

INFINITI recommends that vehicle be towed with the driving (rear) wheels off the ground or that a dolly be used as illustrated.

#### CAUTION:


- Never tow automatic transmission models with the rear wheels on the ground or four wheels on the ground (forward or backward), as this may cause serious and expensive damage to the transmission.  
If it is necessary to tow the vehicle with the front wheels raised, always use towing dollies under the rear wheels.
- When towing rear wheel drive models with the front wheels on the ground or on towing dollies:
  - Turn the ignition switch to the OFF position, and secure the steering wheel in a straight ahead position with a rope or similar device. Never secure the steering wheel by turning the ignition switch to the LOCK position. This may damage the steering lock mechanism.
  - Move the selector lever to the N (Neutral) position.
- When the battery of vehicle equipped with the Intelligent Key system is discharged, your vehicle should be towed with the front wheels on towing dollies or place the vehicle on a flat bed truck.

If the speed or distance must necessarily be greater, remove the propeller shaft before towing to prevent damage to the transmission.

# TOW TRUCK TOWING

< PRECAUTION >

4WD MODELS

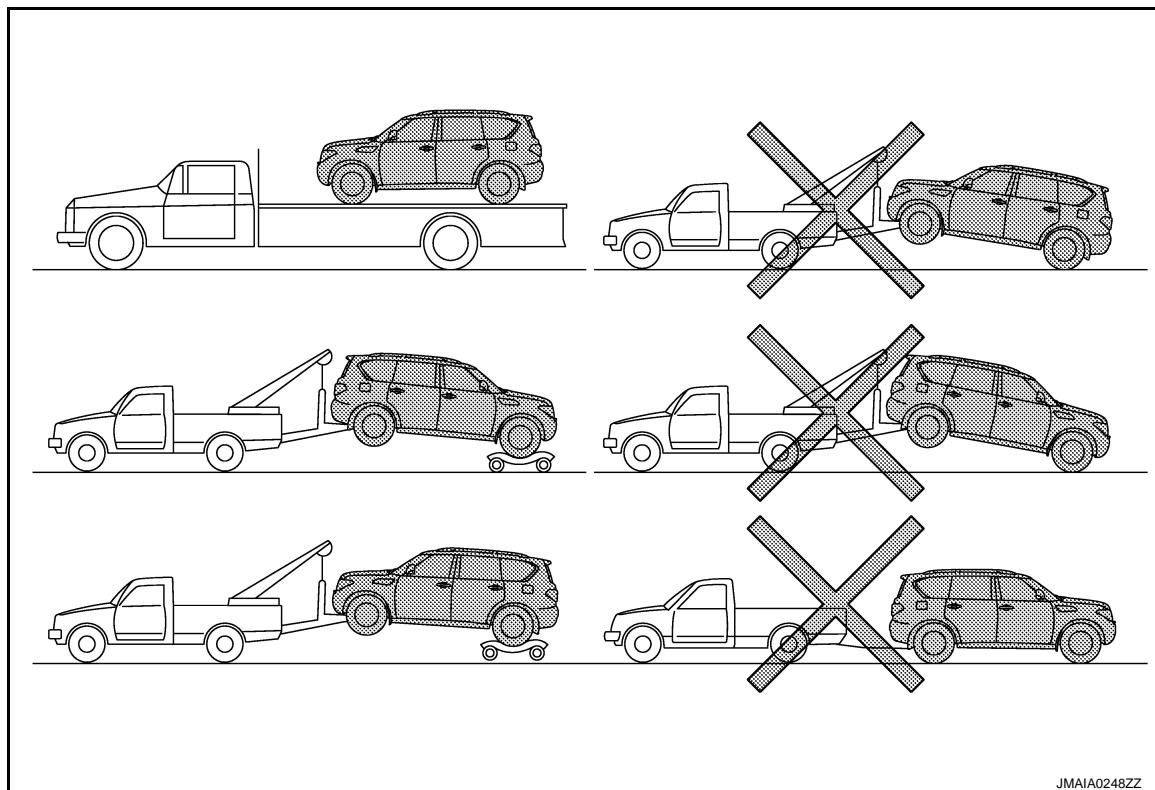

INFINITI recommends that a dolly be used as illustrated when towing 4WD models.

**CAUTION:**

Never tow 4WD models with any of the wheels on the ground as this may cause serious and expensive damage to the powertrain.

## Vehicle Recovery (Freeing a Stuck Vehicle)

INFOID:0000000010262108

### FREEING TRAPPED VEHICLE

**WARNING:**

- Stand clear of a stuck vehicle.
- Never allow anyone to stand near the towing line during the pulling operation.
- Never spin your tires at high speed. This could cause them to explode and result in serious injury. Parts of your vehicle could also overheat and be damaged.


**CAUTION:**

- Tow chains or cables must be attached only to the vehicle recovery hooks or main structural members of the vehicle. Otherwise, the vehicle body will be damaged.
- Never use the vehicle tie downs to free a vehicle stuck in sand, snow, mud, etc. Never tow the vehicle using the vehicle tie downs or recovery hooks.
- Always pull the cable straight out from the front of the vehicle. Never pull on the hook at an angle.
- Pulling devices should be routed so they do not touch any part of the suspension, steering, brake or cooling systems.
- Pulling devices such as ropes or canvas straps are not recommended for use in vehicle towing or recovery.
- In order to not break the towing line, tension it slowly.

## TOW TRUCK TOWING


### < PRECAUTION >

FRONT

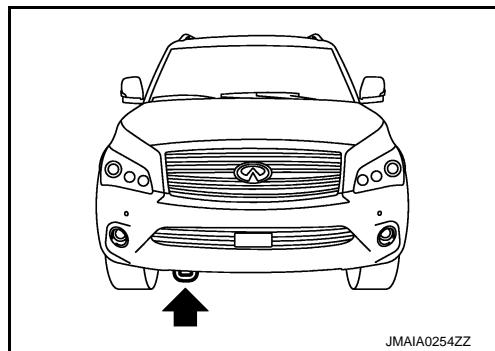

JMAIA0254ZZ

REAR

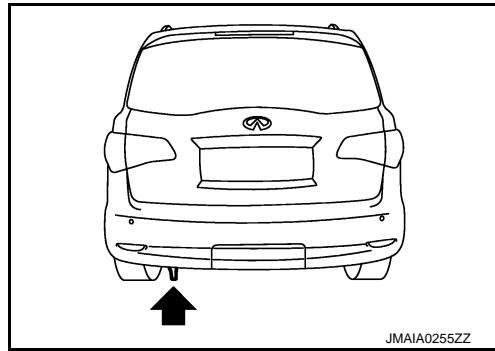

JMAIA0255ZZ

### AUTOMATIC TRANSMISSION

To tow a vehicle equipped with an automatic transmission, an appropriate vehicle dolly **MUST** be placed under the towed vehicle's drive wheels. **Always** follow the dolly manufacturer's recommendations when using their product.

If the vehicle is stuck in sand, snow, mud, etc., use the following procedure:

1. Turn off the Vehicle Dynamic Control System. (if equipped)
2. Check the area in front and behind the vehicle is clear of obstructions.
3. Turn the steering wheel right and left to clear an area around the front tires.
4. Slowly rock the vehicle forward and backward.  
Shift back and forth between R (reverse) and D (drive).  
Apply the accelerator as little as possible to maintain the rocking motion.  
Release the accelerator pedal before shifting between R and D.  
Do not spin the tires above 35 mph (55 km/h).
5. If the vehicle can not be freed after a few tries, contact a professional towing service to remove the vehicle.

# SERVICE INFORMATION FOR ELECTRICAL INCIDENT

< BASIC INSPECTION >

## BASIC INSPECTION

### SERVICE INFORMATION FOR ELECTRICAL INCIDENT

GI

#### Work Flow

INFOID:0000000010262109

B

#### WORK FLOW

C


D

E

F

G

H

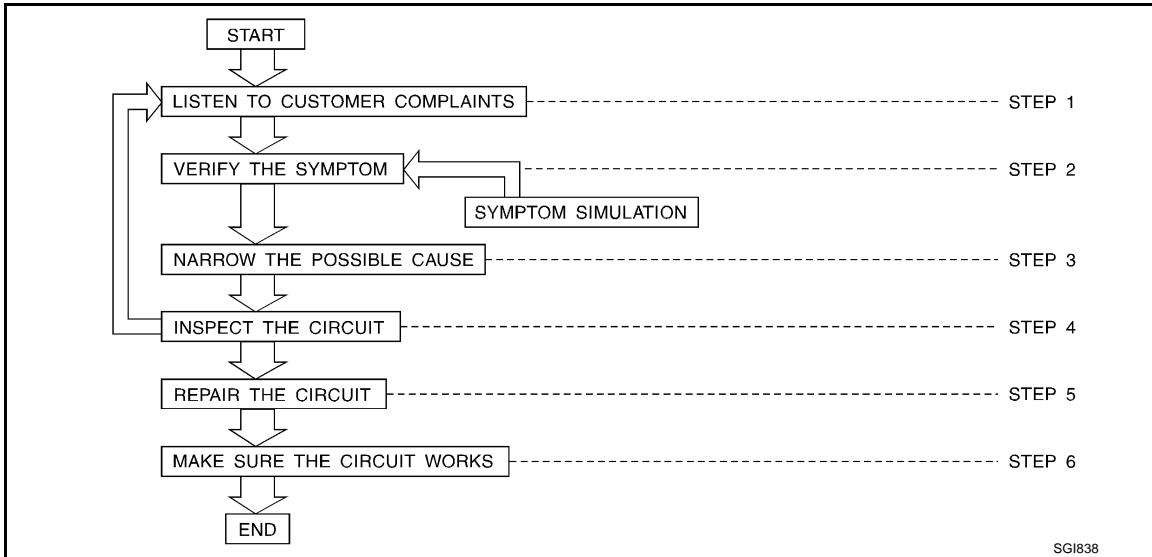

I

J

K

L

M

N

O

P

STEP	DESCRIPTION	
STEP 1	Get detailed information about the conditions and the environment when the incident occurred. The following are key pieces of information required to make a good analysis:  <b>WHAT</b> Vehicle Model, Engine, Transmission/Transaxle and the System (i.e. Radio). <b>WHEN</b> Date, Time of Day, Weather Conditions, Frequency. <b>WHERE</b> Road Conditions, Altitude and Traffic Situation. <b>HOW</b> System Symptoms, Operating Conditions (Other Components Interaction). Service History and if any After Market Accessories have been installed.	
STEP 2	Operate the system, road test if necessary. Verify the parameter of the incident. If the problem cannot be duplicated, refer to "Incident Simulation Tests".	
STEP 3	Get the proper diagnosis materials together including: <ul style="list-style-type: none"><li>• Power Supply Routing</li><li>• System Operation Descriptions</li><li>• Applicable Service Manual Sections</li><li>• Check for any Service Bulletins</li></ul> Identify where to begin diagnosis based upon your knowledge of the system operation and the customer comments.	
STEP 4	Inspect the system for mechanical binding, loose connectors or wiring damage. Determine which circuits and components are involved and diagnose using the Power Supply Routing and Harness Layouts.	
STEP 5	Repair or replace the incident circuit or component.	
STEP 6	Operate the system in all modes. Verify the system works properly under all conditions. check you have not inadvertently created a new incident during your diagnosis or repair steps.	

#### Control Units and Electrical Parts

INFOID:0000000010262110

P

#### PRECAUTIONS

- Never reverse polarity of battery terminals.
- Install only parts specified for a vehicle.
- Before replacing the control unit, check the input and output and functions of the component parts.
- Do not apply excessive force when disconnecting a connector.

# SERVICE INFORMATION FOR ELECTRICAL INCIDENT


## < BASIC INSPECTION >

- Do not apply excessive shock to the control unit by dropping or hitting it.
- Be careful to prevent condensation in the control unit due to rapid temperature changes and do not let water or rain get on it. If water is found in the control unit, dry it fully and then install it in the vehicle.
- Be careful not to let oil to get on the control unit connector.
- Avoid cleaning the control unit with volatile oil.
- Do not disassemble the control unit, and do not remove the upper and lower covers.



SAIA0255E

- When using a DMM, be careful not to let test probes get close to each other to prevent the power transistor in the control unit from damaging battery voltage because of short circuiting.
- When checking input and output signals of the control unit, use the specified check adapter.

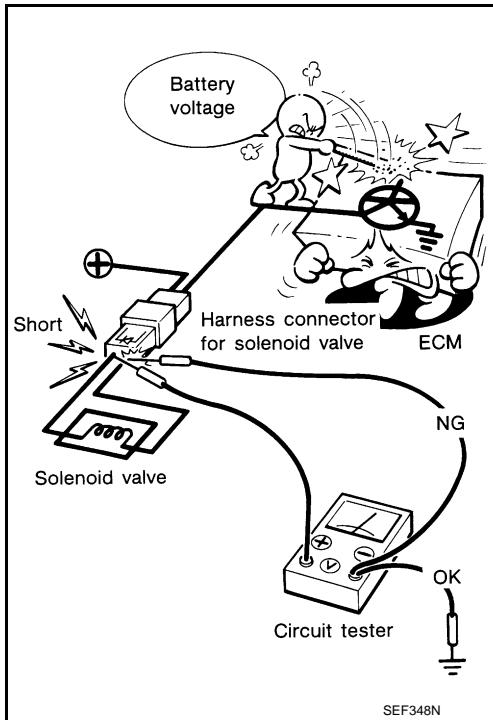

SEF348N

## How to Check Terminal





INFOID:0000000010262111

### CONNECTOR AND TERMINAL PIN KIT

- Use the connector and terminal pin kits listed below when replacing connectors or terminals.
- The connector and terminal pin kits contain some of the most commonly used NISSAN/INFINITI connectors and terminals. For detailed connector and terminal pin replacement procedures, refer to the latest NISSAN/INFINITI CONNECTOR AND TERMINAL PIN SERVICE MANUAL.

# SERVICE INFORMATION FOR ELECTRICAL INCIDENT

## < BASIC INSPECTION >

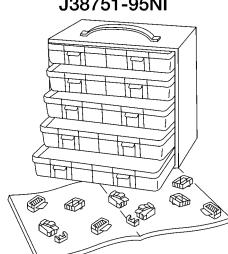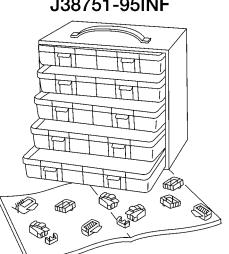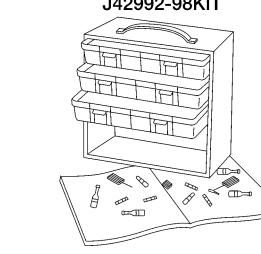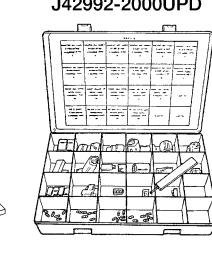Tool number (TechMate No.) Tool name	Description	GI
- (J38751-95NI) Connector and terminal pin kit (NISSAN)		B
- (J38751-95INF) Connector and terminal pin kit (INFINITI)		C
- (J42992-98KIT) OBD and terminal repair kit		D
- (J42992-2000UPD) OBD-II Connector Kit Up- date		E
	WAIA0004E	F
	WAIA0005E	G


### HOW TO PROBE CONNECTORS

- Connector damage and an intermittent connection can result from improperly probing of the connector during circuit checks.
- The probe of a digital multimeter (DMM) may not correctly fit the connector cavity. To correctly probe the connector, follow the procedures below using a "T" pin. For the best contact grasp the "T" pin using an alligator clip.

#### Probing from Harness Side

Standard type (not waterproof type) connector should be probed from harness side with "T" pin.


- If the connector has a rear cover such as a ECM connector, remove the rear cover before probing the terminal.
- Do not probe waterproof connector from harness side. Damage to the seal between wire and connector may result.

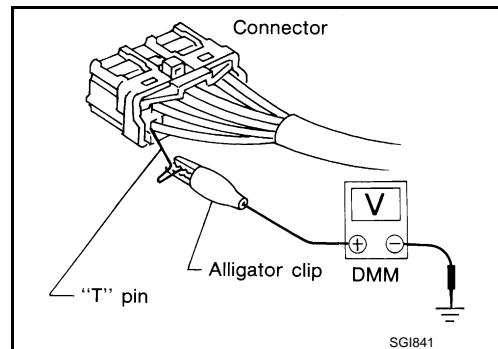

#### Probing from Terminal Side

##### FEMALE TERMINAL


- There is a small notch above each female terminal. Probe each terminal with the "T" pin through the notch.  
Do not insert any object other than the same type male terminal into female terminal.

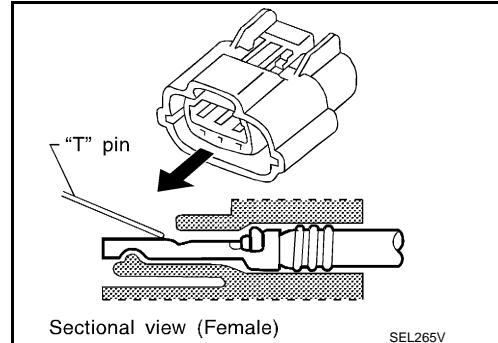

# SERVICE INFORMATION FOR ELECTRICAL INCIDENT

## < BASIC INSPECTION >

- Some connectors do not have a notch above each terminal. To probe each terminal, remove the connector retainer to make contact space for probing.

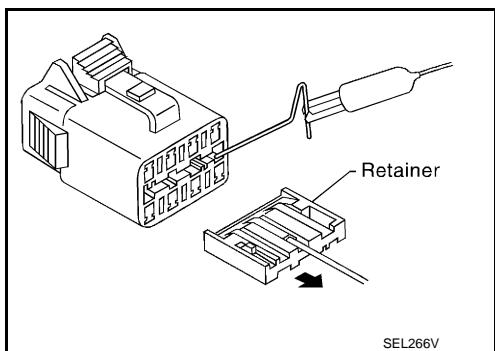


SEL266V

### MALE TERMINAL

- Carefully probe the contact surface of each terminal using a "T" pin.

#### CAUTION:

**Never bend terminal.**

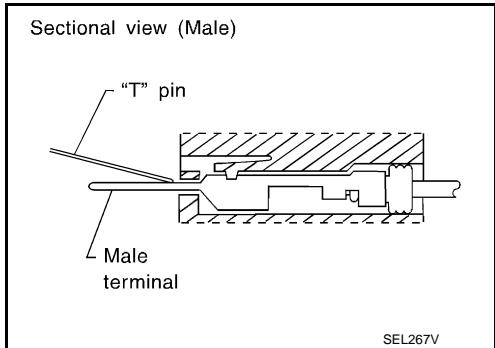

SEL267V

### How to Check Enlarged Contact Spring of Terminal


- An enlarged contact spring of a terminal may create intermittent signals in the circuit.
- If the intermittent open circuit occurs, follow the procedure below to inspect for open wires and enlarged contact spring of female terminal.

- Assemble a male terminal and approx. 10 cm (3.9 in) of wire.

**NOTE:**

**Use a male terminal which matches the female terminal.**

- Disconnect the suspected faulty connector and hold it terminal side up.

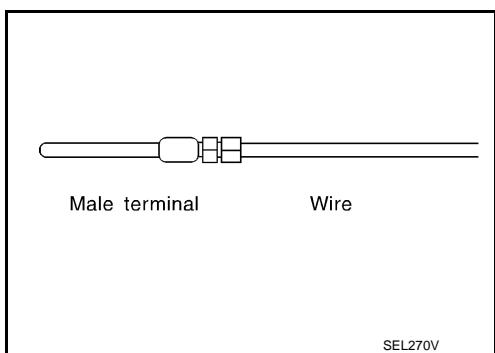


SEL270V

- While holding the wire of the male terminal, try to insert the male terminal into the female terminal.

**CAUTION:**

**Never force the male terminal into the female terminal with your hands.**

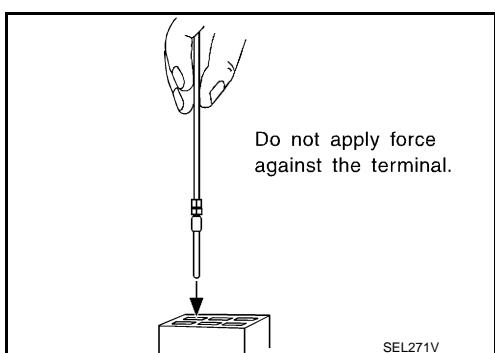


SEL271V

# SERVICE INFORMATION FOR ELECTRICAL INCIDENT


## < BASIC INSPECTION >

4. While moving the connector, check whether the male terminal can be easily inserted or not.

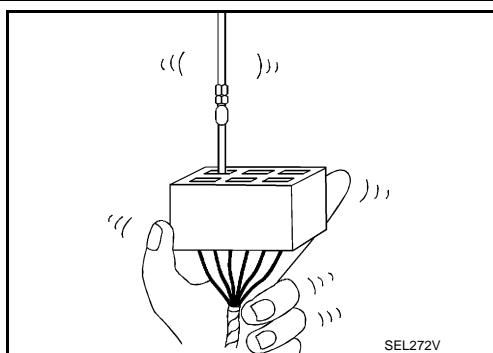

GI

- If the male terminal can be easily inserted into the female terminal, replace the female terminal.

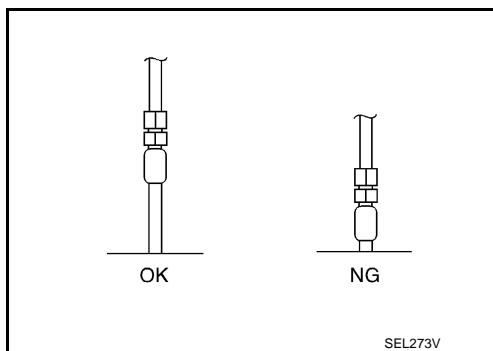

B

C

D

E

F

G

H

I

J

K

L

M

N

O


P

## Waterproof Connector Inspection

If water enters the connector, it can short interior circuits. This may lead to intermittent problems. Check the following items to maintain the original waterproof characteristics.

### RUBBER SEAL INSPECTION

- Most waterproof connectors are provided with a rubber seal between the male and female connectors. If the seal is missing, the waterproof performance may not meet specifications.
- The rubber seal may come off when connectors are disconnected. Whenever connectors are reconnected, check the rubber seal is properly installed on either side of male or female connector.

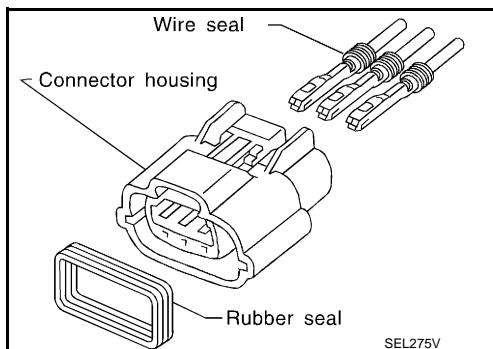


I

### WIRE SEAL INSPECTION

- The wire seal must be installed on the wire insertion area of a waterproof connector. Be sure that the seal is installed properly.

## Terminal Lock Inspection

Check for unlocked terminals by pulling wire at the end of connector. An unlocked terminal may create intermittent signals in the circuit.

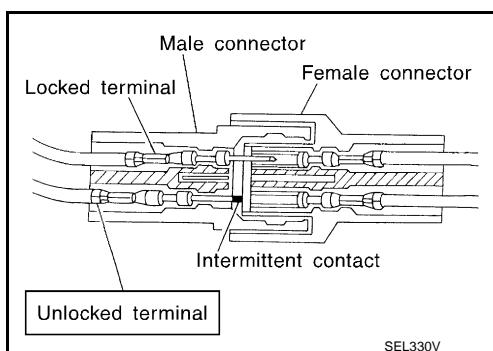

M

N

O

P

## Intermittent Incident

INFOID:000000010262112

### DESCRIPTION

Sometimes the symptom is not present when the vehicle is brought in for service. If possible, re-create the conditions present at the time of the incident. Doing so may help avoid a No Trouble Found Diagnosis. The fol-

# SERVICE INFORMATION FOR ELECTRICAL INCIDENT

## < BASIC INSPECTION >

l owing section illustrates ways to simulate the conditions/environment under which the owner experiences an electrical incident.

The section is broken into the six following topics:

- Vehicle vibration
- Heat sensitive
- Freezing
- Water intrusion
- Electrical load
- Cold or hot start up

Get a thorough description of the incident from the customer. It is important for simulating the conditions of the problem.

### VEHICLE VIBRATION

The problem may occur or become worse while driving on a rough road or when engine is vibrating (idle with A/C on). In such a case, you will want to check for a vibration related condition. Refer to the following illustration.

#### Connector & Harness


Determine which connectors and wiring harness would affect the electrical system you are inspecting. Gently shake each connector and harness while monitoring the system for the incident you are trying to duplicate. This test may indicate a loose or poor electrical connection.

#### Hint

Connectors can be exposed to moisture. It is possible to get a thin film of corrosion on the connector terminals. A visual inspection may not reveal this without disconnecting the connector. If the problem occurs intermittently, perhaps the problem is caused by corrosion. It is a good idea to disconnect, inspect and clean the terminals on related connectors in the system.

#### Sensor & Relay

Gently apply a slight vibration to sensors and relays in the system you are inspecting. This test may indicate a loose or poorly mounted sensor or relay.

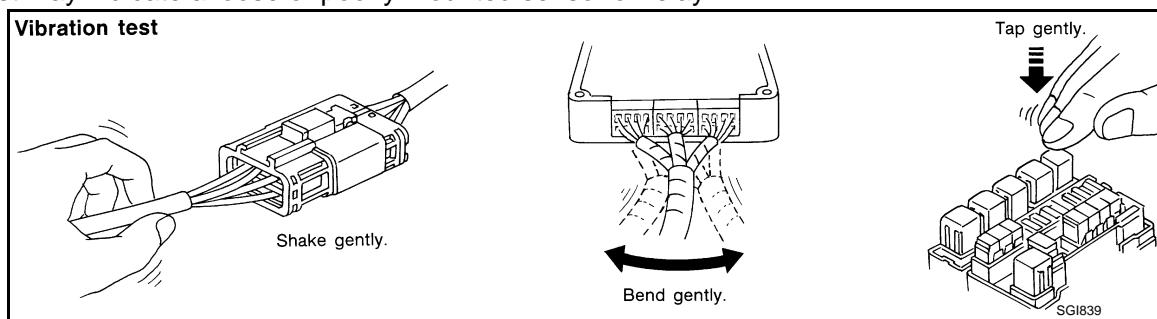

#### Engine Compartment

There are several reasons a vehicle or engine vibration could cause an electrical complaint. Some of the things to check for are:

- Connectors not fully seated.
- Wiring harness not long enough and is being stressed due to engine vibrations or rocking.
- Wires laying across brackets or moving components.
- Loose, dirty or corroded ground wires.
- Wires routed too close to hot components.

To inspect components under the hood, start by verifying the integrity of ground connections. (Refer to Ground Inspection described later.) First check that the system is properly grounded. Then check for loose connection by gently shaking the wiring or components as previously explained. Using the wiring diagrams inspect the wiring for continuity.

#### Behind the Instrument Panel

An improperly routed or improperly clamped harness can become pinched during accessory installation. Vehicle vibration can aggravate a harness which is routed along a bracket or near a screw.

#### Under Seating Areas

# SERVICE INFORMATION FOR ELECTRICAL INCIDENT

## < BASIC INSPECTION >

An unclamped or loose harness can cause wiring to be pinched by seat components (such as slide guides) during vehicle vibration. If the wiring runs under seating areas, inspect wire routing for possible damage or pinching.

GI


### HEAT SENSITIVE

- The customer's concern may occur during hot weather or after car has sat for a short time. In such cases you will want to check for a heat sensitive condition.
- To determine if an electrical component is heat sensitive, heat the component with a heat gun or equivalent.

#### CAUTION:


**Never heat components above 60°C (140°F).**

- If incident occurs while heating the unit, either replace or properly insulate the component.

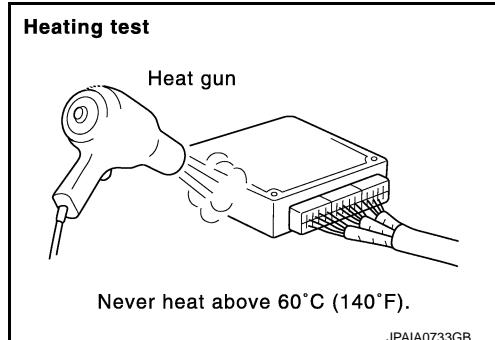

### FREEZING

- The customer may indicate the incident goes away after the car warms up (winter time). The cause could be related to water freezing somewhere in the wiring/electrical system.
- There are two methods to check for this. The first is to arrange for the owner to leave his car overnight. Check it will get cold enough to demonstrate his complaint. Leave the car parked outside overnight. In the morning, do a quick and thorough diagnosis of those electrical components which could be affected.
- The second method is to put the suspect component into a freezer long enough for any water to freeze. Reinstall the part into the car and check for the reoccurrence of the incident. If it occurs, repair or replace the component.

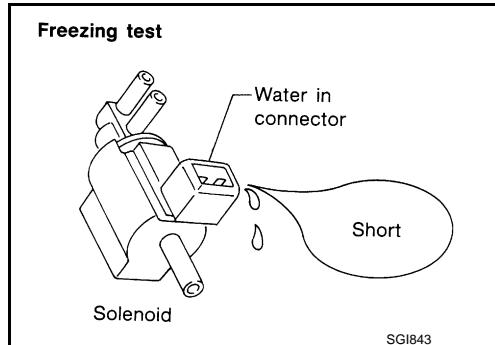


### WATER INTRUSION

The incident may occur only during high humidity or in rainy/snowy weather. In such cases the incident could be caused by water intrusion on an electrical part. This can be simulated by soaking the car or running it through a car wash.


#### CAUTION:

**Never spray water directly on any electrical components.**

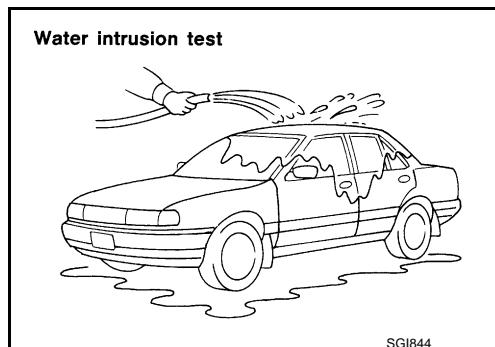

### ELECTRICAL LOAD

The incident may be electrical load sensitive. Perform diagnosis with all accessories (including A/C, rear window defogger, radio, fog lamps) turned on.

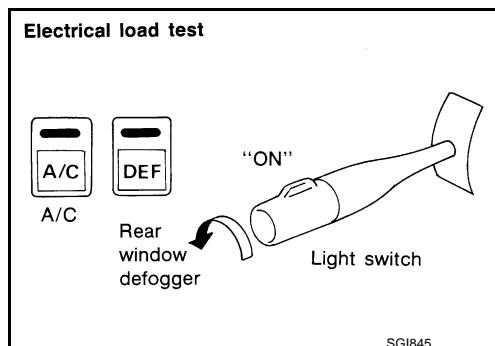

### COLD OR HOT START UP

On some occasions an electrical incident may occur only when the car is started cold, or it may occur when the car is restarted hot shortly after being turned off. In these cases you may have to keep the car overnight to make a proper diagnosis.

# SERVICE INFORMATION FOR ELECTRICAL INCIDENT

< BASIC INSPECTION >

## Circuit Inspection

INFOID:000000010262113

### DESCRIPTION

- In general, testing electrical circuits is an easy task if it is approached in a logical and organized method. Before beginning it is important to have all available information on the system to be tested. Also, get a thorough understanding of system operation. Then you will be able to use the appropriate equipment and follow the correct test procedure.
- You may have to simulate vehicle vibrations while testing electrical components. Gently shake the wiring harness or electrical component to do this.


OPEN	A circuit is open when there is no continuity through a section of the circuit.
	There are two types of shorts.
SHORT	• SHORT CIRCUIT When a circuit contacts another circuit and causes the normal resistance to change.
	• SHORT TO GROUND When a circuit contacts a ground source and grounds the circuit.

### NOTE:

Refer to [GI-40, "How to Check Terminal"](#) to probe or check terminal.

### TESTING FOR "OPENS" IN THE CIRCUIT

Before you begin to diagnose and test the system, you should rough sketch a schematic of the system. This will help you to logically walk through the diagnosis process. Drawing the sketch will also reinforce your working knowledge of the system.

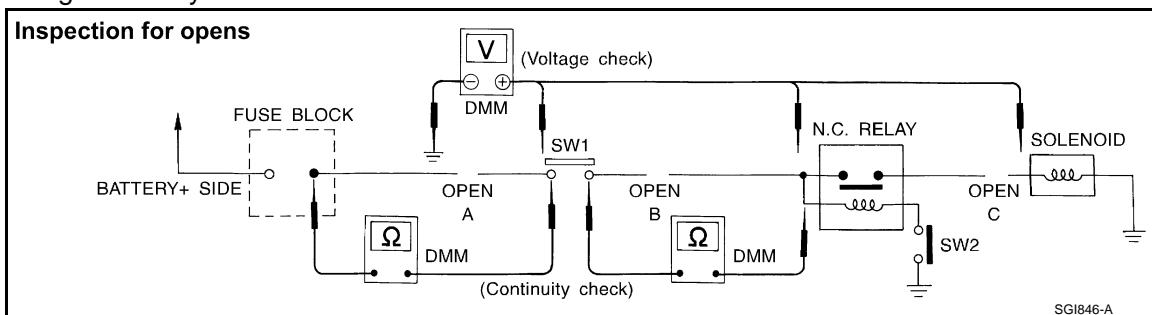

### Continuity Check Method

The continuity check is used to find an open in the circuit. The digital multimeter (DMM) set on the resistance function will indicate an open circuit as over limit (no beep tone or no ohms symbol). Check to always start with the DMM at the highest resistance level.

To help in understanding the diagnosis of open circuits, please refer to the previous schematic.

- Disconnect the battery negative cable.
- Start at one end of the circuit and work your way to the other end. (At the fuse block in this example)
- Connect one probe of the DMM to the fuse block terminal on the load side.
- Connect the other probe to the fuse block (power) side of SW1. Little or no resistance will indicate that portion of the circuit has good continuity. If there were an open in the circuit, the DMM would indicate an over limit or infinite resistance condition. (point A)
- Connect the probes between SW1 and the relay. Little or no resistance will indicate that portion of the circuit has good continuity. If there were an open in the circuit, the DMM would indicate an over limit or infinite resistance condition. (point B)
- Connect the probes between the relay and the solenoid. Little or no resistance will indicate that portion of the circuit has good continuity. If there were an open in the circuit, the DMM would indicate an over limit or infinite resistance condition. (point C)

Any circuit can be diagnosed using the approach in the previous example.

### Voltage Check Method

To help in understanding the diagnosis of open circuits please refer to the previous schematic.

In any powered circuit, an open can be found by methodically checking the system for the presence of voltage. This is done by switching the DMM to the voltage function.

- Connect one probe of the DMM to a known good ground.
- Begin probing at one end of the circuit and work your way to the other end.
- With SW1 open, probe at SW1 to check for voltage.  
voltage: open is further down the circuit than SW1.

# SERVICE INFORMATION FOR ELECTRICAL INCIDENT

## < BASIC INSPECTION >

no voltage: open is between fuse block and SW1 (point A).

- Close SW1 and probe at relay.

GI

B

C

D

E

F

G

H

I

J

K

L

M

N

O

P

voltage: open is further down the circuit than the relay.

no voltage: open is between SW1 and relay (point B).

- Close the relay and probe at the solenoid.

B

C

D

E

F

G

H

I

J

K

L

M

N

O

P

voltage: open is further down the circuit than the solenoid.

B


no voltage: open is between relay and solenoid (point C).

B

Any powered circuit can be diagnosed using the approach in the previous example.

## TESTING FOR "SHORTS" IN THE CIRCUIT

To simplify the discussion of shorts in the system, please refer to the following schematic.

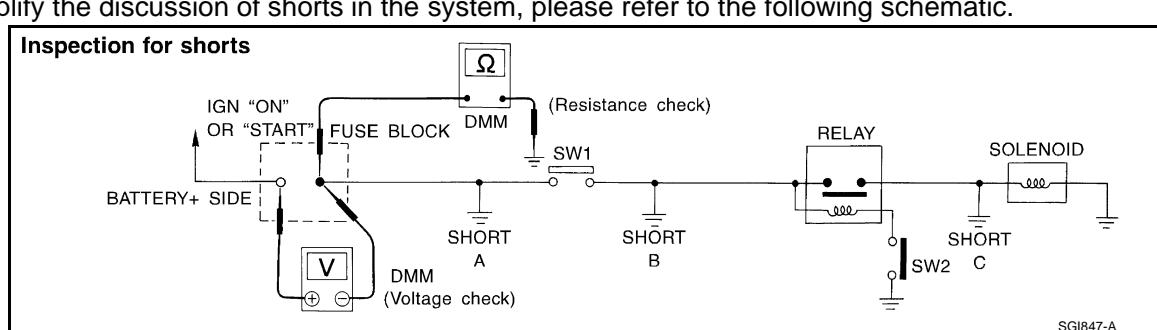

### Resistance Check Method

- Disconnect the battery negative cable and remove the blown fuse.
- Disconnect all loads (SW1 open, relay disconnected and solenoid disconnected) powered through the fuse.
- Connect one probe of the DMM to the load side of the fuse terminal. Connect the other probe to a known good ground.
- With SW1 open, check for continuity.
  - continuity: short is between fuse terminal and SW1 (point A).
  - no continuity: short is further down the circuit than SW1.
- Close SW1 and disconnect the relay. Put probes at the load side of fuse terminal and a known good ground. Then, check for continuity.
  - continuity: short is between SW1 and the relay (point B).
  - no continuity: short is further down the circuit than the relay.
- Close SW1 and jump the relay contacts with jumper wire. Put probes at the load side of fuse terminal and a known good ground. Then, check for continuity.
  - continuity: short is between relay and solenoid (point C).
  - no continuity: check solenoid, retrace steps.

### Voltage Check Method

- Remove the blown fuse and disconnect all loads (i.e. SW1 open, relay disconnected and solenoid disconnected) powered through the fuse.
- Turn the ignition switch to the ON or START position. Verify battery voltage at the battery + side of the fuse terminal (one lead on the battery + terminal side of the fuse block and one lead on a known good ground).
- With SW1 open and the DMM leads across both fuse terminals, check for voltage.
  - voltage: short is between fuse block and SW1 (point A).
  - no voltage: short is further down the circuit than SW1.
- With SW1 closed, relay and solenoid disconnected and the DMM leads across both fuse terminals, check for voltage.
  - voltage: short is between SW1 and the relay (point B).
  - no voltage: short is further down the circuit than the relay.
- With SW1 closed, relay contacts jumped with fused jumper wire check for voltage.
  - voltage: short is down the circuit of the relay or between the relay and the disconnected solenoid (point C).
  - no voltage: retrace steps and check power to fuse block.


## GROUND INSPECTION

- Ground connections are very important to the proper operation of electrical and electronic circuits. Ground connections are often exposed to moisture, dirt and other corrosive elements. The corrosion (rust) can become an unwanted resistance. This unwanted resistance can change the way a circuit works.
- Electronically controlled circuits are very sensitive to proper grounding. A loose or corroded ground can drastically affect an electronically controlled circuit. A poor or corroded ground can easily affect the circuit. Even when the ground connection looks clean, there can be a thin film of rust on the surface.

# SERVICE INFORMATION FOR ELECTRICAL INCIDENT

## < BASIC INSPECTION >

- When inspecting a ground connection follow these rules:
  - Remove the ground bolt or screw.
  - Inspect all mating surfaces for tarnish, dirt, rust, etc.
  - Clean as required to assure good contact.
  - Reinstall bolt or screw securely.
  - Inspect for "add-on" accessories which may be interfering with the ground circuit.
  - If several wires are crimped into one ground eyelet terminal, check for proper crimps. Check all of the wires are clean, securely fastened and providing a good ground path. If multiple wires are cased in one eyelet check no ground wires have excess wire insulation.
- For detailed ground distribution information, refer to "Ground Distribution" in PG section.

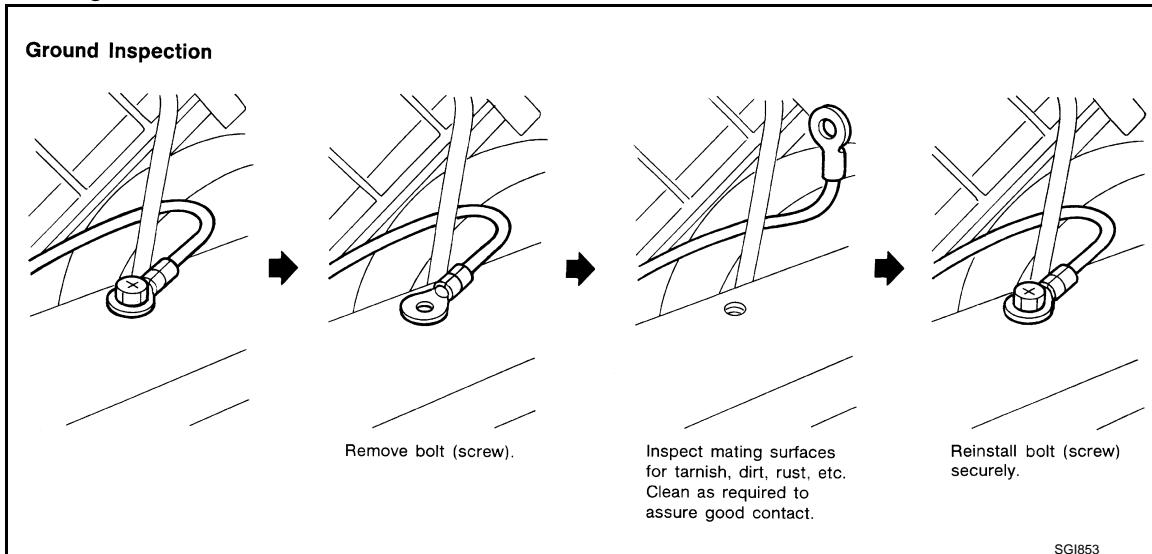

SGI853

## VOLTAGE DROP TESTS

- Voltage drop tests are often used to find components or circuits which have excessive resistance. A voltage drop in a circuit is caused by a resistance when the circuit is in operation.
- Check the wire in the illustration. When measuring resistance with DMM, contact by a single strand of wire will give reading of 0 ohms. This would indicate a good circuit. When the circuit operates, this single strand of wire is not able to carry the current. The single strand will have a high resistance to the current. This will be picked up as a slight voltage drop.
- Unwanted resistance can be caused by many situations as follows:
  - Undersized wiring (single strand example)
  - Corrosion on switch contacts
  - Loose wire connections or splices.
- If repairs are needed always use wire that is of the same or larger gauge.

### Measuring Voltage Drop — Accumulated Method

- Connect the DMM across the connector or part of the circuit you want to check. The positive lead of the DMM should be closer to power and the negative lead closer to ground.
- Operate the circuit.
- The DMM will indicate how many volts are being used to "push" current through that part of the circuit.

# SERVICE INFORMATION FOR ELECTRICAL INCIDENT

## < BASIC INSPECTION >

Note in the illustration that there is an excessive 4.1 volt drop between the battery and the bulb.

GI

B

C

D

E

F

G

H

I

J

K

L

M


N

O

P

### Symptom: Dim bulb or no operation


0 (zero) ohm  
resistance  
between switch  
and bulb

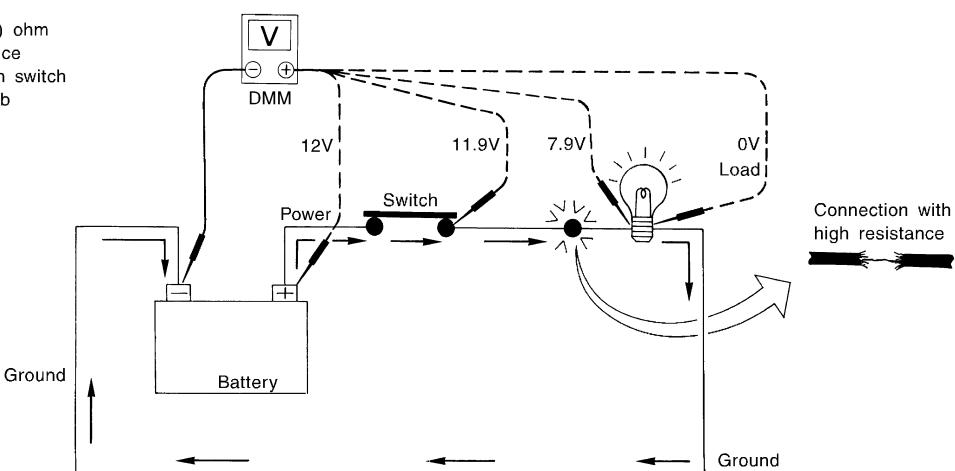

SGI974

### Measuring Voltage Drop — Step-by-Step

- The step-by-step method is most useful for isolating excessive drops in low voltage systems (such as those in "Computer Controlled Systems").
- Circuits in the "Computer Controlled System" operate on very low amperage.
- The (Computer Controlled) system operations can be adversely affected by any variation in resistance in the system. Such resistance variation may be caused by poor connection, improper installation, improper wire gauge or corrosion.
- The step by step voltage drop test can identify a component or wire with too much resistance.

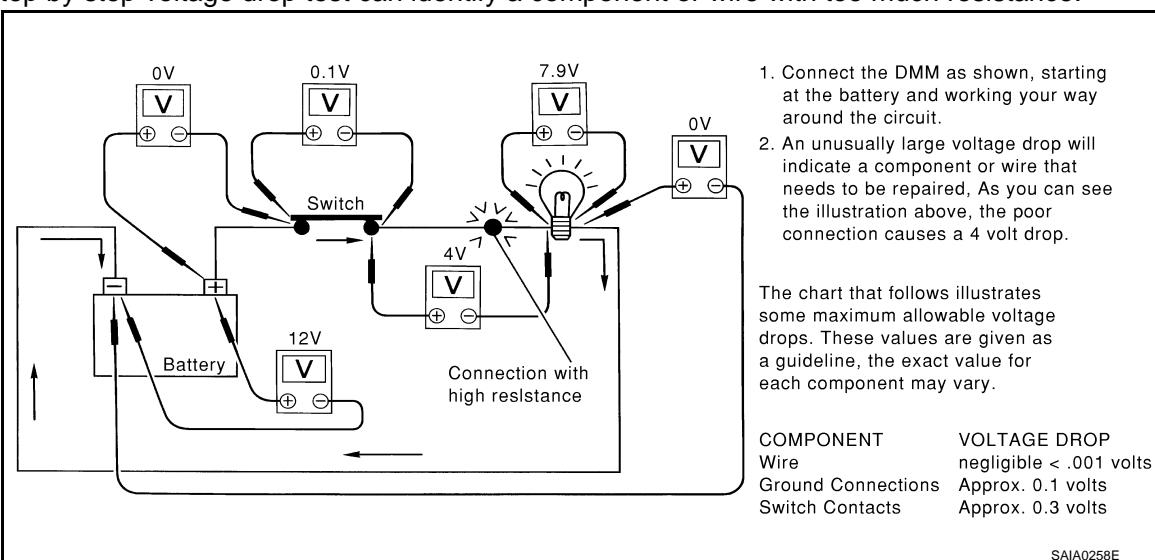


SAIA0258E

## CONTROL UNIT CIRCUIT TEST

### System Description

- When the switch is ON, the control unit lights up the lamp.

### CASE 1

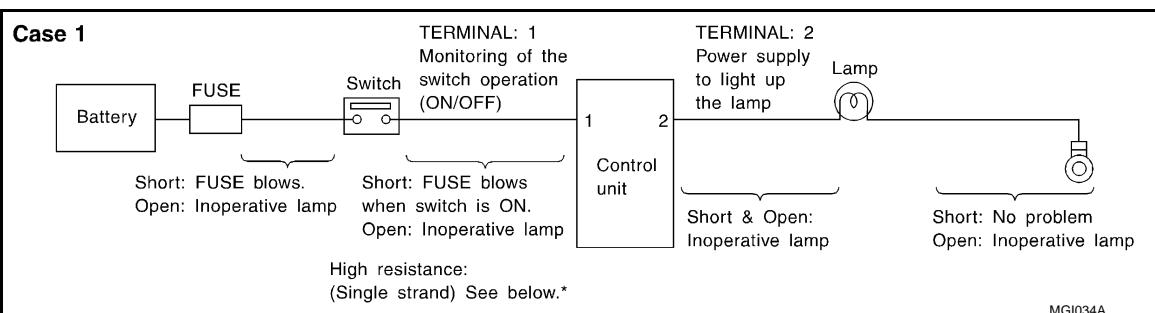

MGI034A

# SERVICE INFORMATION FOR ELECTRICAL INCIDENT


## < BASIC INSPECTION >

### INPUT-OUTPUT VOLTAGE CHART

Terminal No.		Description		Condition	Value (Approx.)	In case of high resistance such as single strand (V) *
+	-	Signal name	Input/Output			
1	Body ground	Switch	Input	Switch ON	Battery voltage	Lower than battery voltage Approx. 8 (Example)
				Switch OFF	0 V	Approx. 0
2	Body ground	Lamp	Output	Switch ON	Battery voltage	Approx. 0 (Inoperative lamp)
				Switch OFF	0 V	Approx. 0

- The voltage value is based on the body ground.
- \*: If high resistance exists in the switch side circuit (caused by a single strand), terminal 1 does not detect battery voltage. Control unit does not detect the switch is ON even if the switch does not turn ON. Therefore, the control unit does not supply power to light up the lamp.

### CASE 2

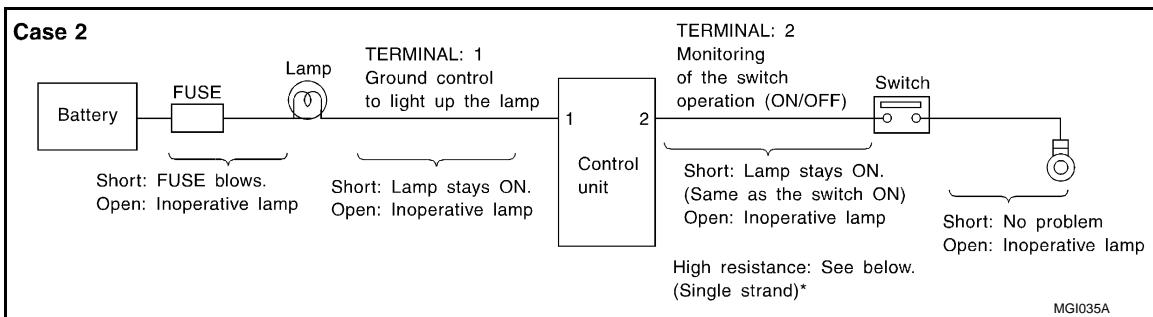

### INPUT-OUTPUT VOLTAGE CHART

Terminal No.		Description		Condition	Value (Approx.)	In case of high resistance such as single strand (V) *
+	-	Signal name	Input/Output			
1	Body ground	Lamp	Output	Switch ON	0 V	Battery voltage (Inoperative lamp)
				Switch OFF	Battery voltage	Battery voltage
2	Body ground	Switch	Input	Switch ON	0 V	Higher than 0 Approx. 4 (Example)
				Switch OFF	5 V	Approx. 5

- The voltage value is based on the body ground.
- \*: If high resistance exists in the switch side circuit (caused by a single strand), terminal 2 does not detect approx. 0 V. Control unit does not detect the switch is ON even if the switch does not turn ON. Therefore, the control unit does not control ground to light up the lamp.

# CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

## CONSULT/GST CHECKING SYSTEM

### Description


INFOID:0000000010262114

GI

- When CONSULT/GST is connected with a data link connector (A) equipped on the vehicle side, it will communicate with the control unit equipped in the vehicle and then enable various kinds of diagnostic tests.

1 : Instrument lower panel LH

- Refer to "CONSULT Software Operation Manual" for more information.

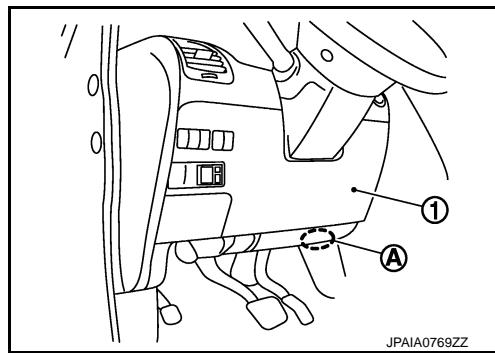

INFOID:0000000010262115

## CONSULT Function and System Application\*1

F

### FUNCTION

Mode	Function
All DTC Reading	Display all DTCs or diagnostic items that all ECUs are recording and judging.
Work Support	This mode enables a technician to adjust some devices faster and more accurately.
Self Diagnostic Results	Retrieve DTC from ECU and display diagnostic items.
Data Monitor	Monitor the input/output signal of the control unit in real time.
CAN Diagnosis	This mode displays a network diagnosis result about CAN by diagram.
CAN Diagnosis Support Monitor	It monitors the status of CAN communication.
Active Test	Send the drive signal from CONSULT to the actuator. The operation check can be performed.
ECU Identification	Display the ECU identification number (part number etc.) of the selected system.
Configuration	Function to READ/WRITE vehicle configuration.
SRT&P-DTC Confirmation	The state of System Readiness Test (SRT) items, the presence or absence of permanent DTC*, and driving conditions can be checked.
DTC work support	DTC reproduction procedure can be performed speedily and precisely.
Others	Other results or histories, etc. that are recorded in ECU are displayed.

\*: Permanent DTC is not applied for regions where it is not mandated.

G

## SYSTEM APPLICATION\*1

H

System	All DTC Reading	Work Support	Self Diagnostic Results	Data Monitor	CAN Diagnosis	CAN Diagnosis Support Monitor	Active Test	ECU Identification	Configuration	SRT&P-DTC Confirmation	DTC work support	Others
ENGINE	x	x	x	x	x	x	x	x	-	x <sup>*2</sup>	x	-
TRANSMISSION	x	x	x	x	x	x	-	x	x	-	x	• CALIB DATA
AIR BAG	x	-	x	-	x	-	-	x	-	-	-	• TROUBLE DIAG RECORD • SELF-DIAG RESULT [CAN] • Cause of Warning Lamp

I

J

K

L

M

N

O

P

# CONSULT/GST CHECKING SYSTEM

**< BASIC INSPECTION >**

System	All DTC Reading	Work Support	Self Diagnostic Results			CAN Diagnosis	CAN Diagnosis Support Monitor	Active Test	ECU Identification	Configuration	SRT&P-DTC Confirmation	DTC work support	Others
			Data Monitor	CAN Diagnosis	CAN Diagnosis Support Monitor								
METER / M&A	X	-	X	X	X	X	X	-	-	-	-	-	• Warning History
AUTO BACK DOOR	X	-	X	X	X	X	X	-	X	-	-	-	-
BCM	X	X	X	X	X	X	X	X	X	X	-	-	-
AUTO DRIVE POS.	X	X	X	X	X	X	X	X	X	-	-	-	-
ABS	X	X	X	X	X	X	X	X	X	-	-	-	-
IPDM E/R	X	-	X	X	X	X	X	X	X	-	-	-	-
ALL MODE AWD/4WD	X	X	X	X	X	X	X	-	X	-	-	-	-
MULTI AV	-	X	X	X	X	X	X	-	X	X	-	-	-
ICC/ADAS	X	X	X	X	X	X	X	X	X	X	-	-	-
AVM	X	X	X	X	X	X	X	-	X	X	-	-	-
SONAR	X	X	X	X	X	X	X	X	X	X	-	-	-
AIR PRESSURE MONITOR	X	X	X	X	X	X	X	X	X	-	-	-	-
ADAPTIVE LIGHT	X	X	X	X	X	X	X	X	X	X	-	-	-
HIGH BEAM ASSIST	X	-	X	X	X	X	X	X	X	X	-	-	-
PRECRASH SEAT BELT	X	X	X	X	X	X	X	-	X	-	-	-	-
LAS/RADAR	X	X	X	X	X	X	X	-	X	-	-	-	-
BSW/BUZZER	X	-	X	X	X	X	X	X	-	-	-	-	-
HVAC	-	X	X	X	X	X	X	X	X	-	-	-	-
LANE CAMERA	X	X	X	X	X	X	X	-	X	-	-	-	-
ACCELE PEDAL ACT	X	-	X	X	X	X	X	X	X	-	-	-	-
E-SUS	X	X	X	X	X	X	X	X	X	-	-	-	-
SIDE RADAR LEFT	X	-	X	X	X	X	X	X	X	-	-	-	-
SIDE RADAR RIGHT	X	-	X	X	X	X	X	X	X	-	-	-	-
CAN GATEWAY	X	-	X	-	X	X	-	X	X	-	-	-	-
TCU	X	X	X	X	X	-	X	X	-	-	-	-	-

x: Applicable

\*1: If GST application is equipped, functions in accordance with SAE J1979 and ISO 15031-5 can be used.

\*2: Permanent DTC is not applied for regions where it is not mandated.

## CONSULT/GST Data Link Connector (DLC) Circuit

INFOID:000000010262116

### INSPECTION PROCEDURE

If the CONSULT/GST cannot diagnose the system properly, check the following items.

# CONSULT/GST CHECKING SYSTEM

## < BASIC INSPECTION >

Symptom	Check item	
CONSULT/GST cannot access any system.	<ul style="list-style-type: none"><li>CONSULT/GST DLC power supply circuit (Terminal 8 and 16) and ground circuit (Terminal 4 and 5)</li></ul>	GI
CONSULT cannot access individual system. (Other systems can be accessed.)	<ul style="list-style-type: none"><li>Power supply and ground circuit for the control unit of the system (For detailed circuit, refer to wiring diagram for each system.)</li><li>Open or short circuit between the system and CONSULT DLC (For detailed circuit, refer to wiring diagram for each system.)</li><li>Open or short circuit CAN communication line. Refer to <a href="#">LAN-21, "Trouble Diagnosis Flow Chart"</a>.</li></ul>	B C D E F G H I J K L M N O P

### NOTE:

The DDL1 and DDL2 circuits from DLC pins 12, 13, 14 and 15 may be connected to more than one system. A short in a DDL circuit connected to a control unit in one system may affect CONSULT access to other systems. If the GST cannot operate properly, check the circuit based on the information of SAE J1962 and ISO 15031-3.

# CONSULT/GST CHECKING SYSTEM


< BASIC INSPECTION >

## Wiring Diagram - CONSULT/GST CHECKING SYSTEM -

INFOID:000000010262117

WITH ICC

### CONSULT CHECKING SYSTEM (WITH ICC)

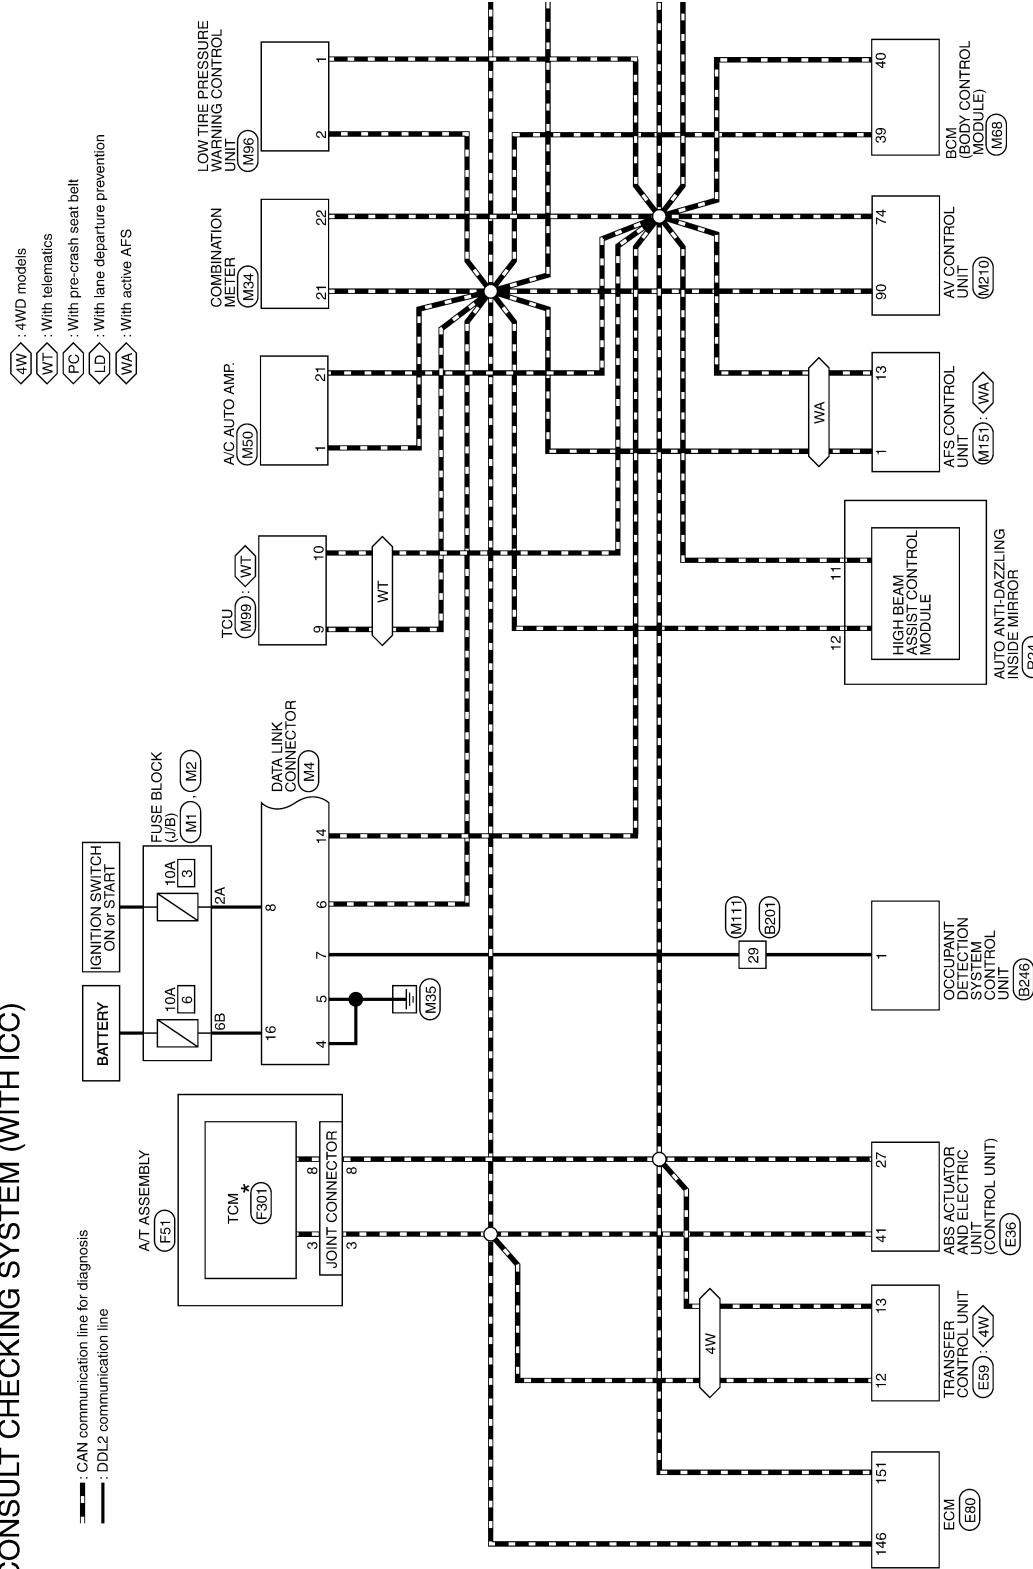


\* : This connector is not shown in "Harness Layout".

2014/07/11

JRAWC1634GB

# CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

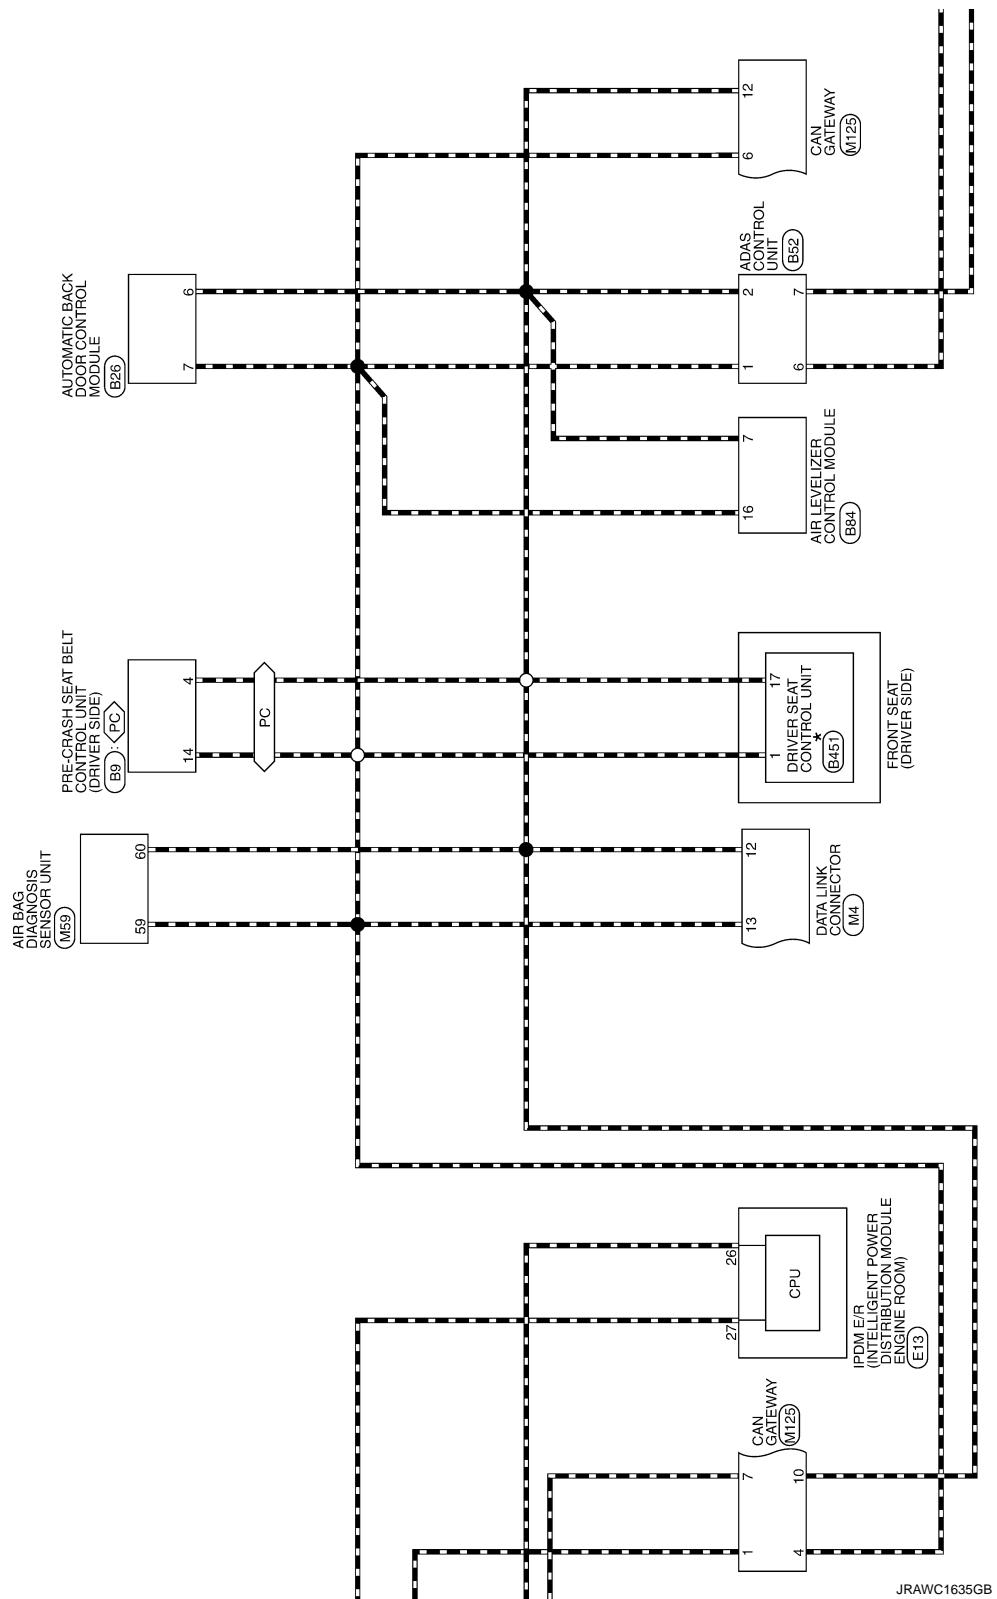

JRAWC1635GB

GI

B

C

D

E

F

G

H

I

K

L

M


N

O

P

# CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

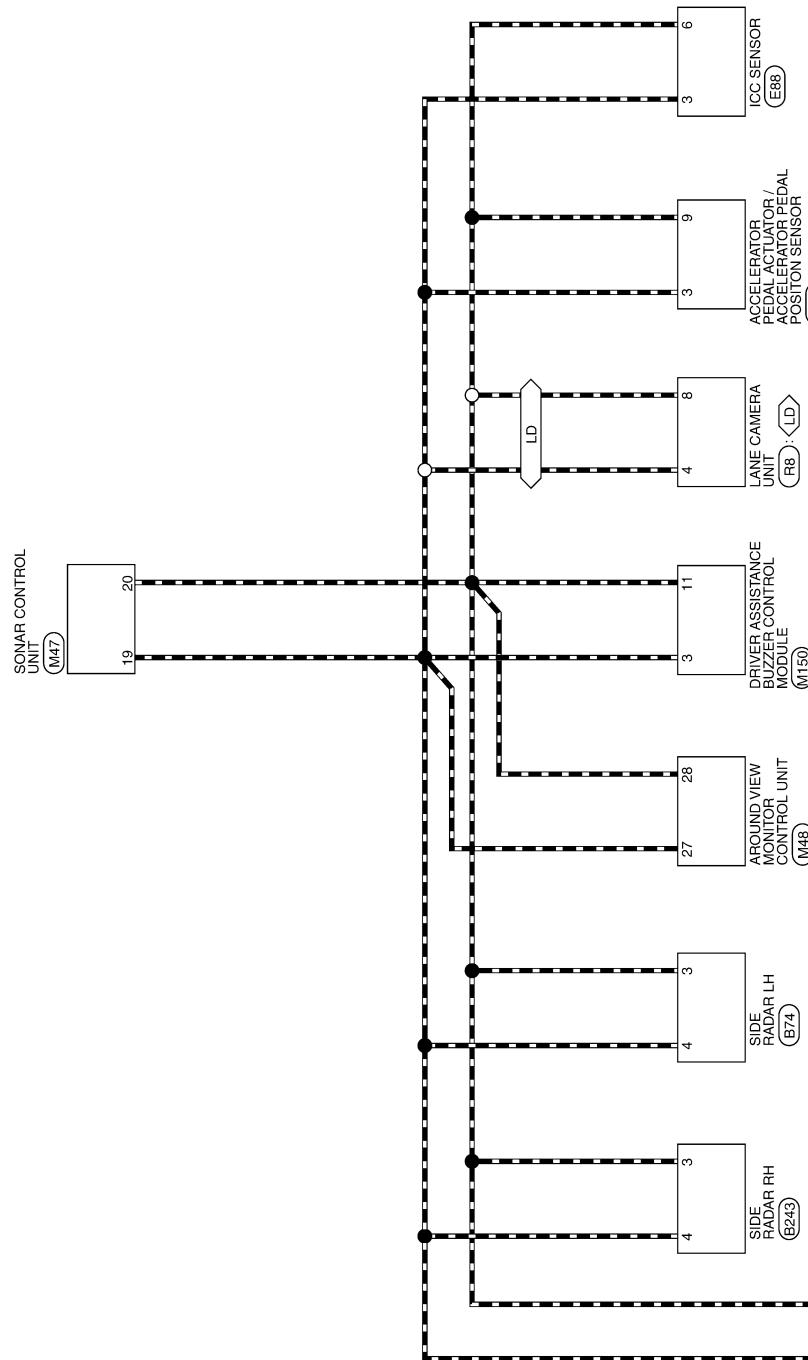

JRAWC1636GB

# CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

## CONSULT CHECKING SYSTEM (WITH ICC)

Connector No.	BB	Terminal No.	Color Of Wire	Signal Name [Specification]	Connector No.	BB21	Terminal No.	Color Of Wire	Signal Name [Specification]
Connector Name	PRE-CRASH SENSORS FOR CONTROL UNIT (DRIVER SIDE)	8	L/W	HALF LATCH SW	Connector No.	B74			
Connector Type	TH18FW-CSZ	9	GR/L	IGN	Connector Name	SIDE RADAR LH			
		10	Y	BAT	Connector Type	AAC05FB-WP-SP			
		11	R	CLOSURE MTR CLOSE					
		12	V	CLOSURE MTR OPEN					
		13	G/W	TOUCH SENS LH					
		14	L/R	TOUCH SENS RH					
		15	LG	MAIN SW					
		16	LG	CLOSE SW					
		17	O	OPEN SW					
		18	LY	TOUCH SENS GRID					
		19	Q/Y	IGN					
		20	Q/Y	BAT					
		21	B	GND					
		22	B	MAIN SW					
		23	R/W	CLOSE SW					
		24	B	OPEN SW					
		25	R/W	TOUCH SENS GRID					
		26	B	IGN					
		27	R/W	BAT					
		28	R/W	GND					
		29	B	MAIN SW					
		30	R/W	CLOSE SW					
		31	B	OPEN SW					
		32	R/W	TOUCH SENS GRID					
		33	B	IGN					
		34	R/W	BAT					
		35	B	GND					
		36	R/W	MAIN SW					
		37	B	CLOSE SW					
		38	R/W	OPEN SW					
		39	P/B	TOUCH SENS GRID					
		40	W/R	IGN					
		41	R	BAT					
		42	L	GND					
		43	B/W	MAIN SW					
		44	L	CLOSE SW					
		45	P	OPEN SW					

JRAWC1637GB

# CONSULT/GST CHECKING SYSTEM

**< BASIC INSPECTION >**

## CONSULT CHECKING SYSTEM (WITH ICC)

Terminal Color Of No.	Wire Color	Signal Name [Specification]	Terminal Color Of No.	Wire Color	Signal Name [Specification]
46	-	-	1	R/Y	RIGHT/LEFT SWITCHING SIGNAL
47	R	-	2	B	GROUND
48	W	-	3	Y	ITS COMM_L
49	SHIELD	-	4	Y	ITS COMM_R
50	V	-	5	W/G	TELESCOPIC SENSOR
51	L/B	-	6	W/G	ADDRESS 2
52	L/R	-	7	W/G	IND_2
53	SB	-	8	SB	SIDE SW (BACKWARD)
54	V/W	-	9	L	RECLINER SW (BACKWARD)
55	L	-	10	L/B	FRONT LIFTER SW (DOWNWARD)
60	GR	-	11	L/W	REAR LIFTER SW (DOWNWARD)
61	P/L	-	12	L/R	SENSOR POWER SUPPLY
62	B/SB	-	17	V	CAN-L
63	R/Y	RIGHT/LEFT SWITCHING SIGNAL	18	B/W	PULSE (SLIDE)
64	BR	-	19	B/R	PULSE (FRONT LIFTER)
70	O	-	20	B/L	PULSE (REAR LIFTER)
71	W	-	21	W/B	TILT SENSOR
72	SHIELD	-	22	W/L	ADDRESS 1
73	B	-	23	W/R	IND_1
74	R	-	24	W/N	SIDE SW (FORWARD)
75	G	-	25	Y/B	RECLINER SW (FORWARD)
76	Y	-	26	Y/R	FRONT LIFTER SW (UPWARD)
77	SB	-	27	Y/L	REAR LIFTER SW (UPWARD)
78	LG	-	28	G	SET SW
79	R/B	-			
90	W/B	-			
93	Y	-			
94	L	-			
95	L/R	-			
96	R	-			
97	W	-			
98	V	-			
99	L/W	-			
100	W	-			

Terminal Color Of No.	Wire Color	Signal Name [Specification]	Terminal Color Of No.	Wire Color	Signal Name [Specification]
1	G	POWER INTELLIGENT POWER DISTRIBUTION MODULE ENGINE	13	GR	TELESCOPIC SENSOR
2	B	-	14	W	MOTOR SUPPLY
3	R/L	-	15	GR	YAW RATE / SIDE / REBEL SENSOR COMMUNICATION_H
4	R/L	-	16	GR	YAW RATE / SIDE / REBEL SENSOR COMMUNICATION_L
5	34	TH32FB-NH	17	L/R	BRAKE FLUID LEVEL SW
6	33	TH32FB-NH	18	W/B	STP2
7	32	TH32FB-NH	19	O	IGN
8	30	TH32FB-NH		DS FR	DS FR

JRAWC1638GB

# **CONSULT/GST CHECKING SYSTEM**

## < BASIC INSPECTION >



CONSULT CHECKING SYSTEM (WITH ICC)

INTERNAL SPEED SEN/PWR SUPPLY			
	39	R/W	
20	SB	DS FL	
21	R/O	DS RR	
22	V	DF RL	
27	P	CAN-L	Connector No.
33	LG	DF FR	Connector Name
34	G	DS FL	ECM
35	BR	DF RR	Connector Type
36	P	DS RL	MAB55FB-MEB-10-LH
37	R	STP	
39	L/W	VDC OFF SW	
41	L	CAN-H	



-	
165	GR. R
166	W
167	ENG COMMUNICATION LINE
168	G/B
169	POWER SIGNAL OUTPUT
170	POWER SUPPLY FOR ECD
171	POWER SUPPLY FOR ECD
172	W
173	O
174	THROTTLE CONTROL MOTOR POWER SUPPLY
175	O
176	ECD
177	ECU
178	ECU

ECM GROUND



		GROUND
7	B	ITS COMM-L
9	Y	SENSOR POWER SUPPLY
10	L/W	SENSOR GROUND
11	P/L	ACCELERATOR PEDAL POSITION SENSOR 2
12	O	ACCELERATOR PEDAL POSITION SENSOR 2



Connector No.	F31	A/T ASSEMBLY
---------------	-----	--------------



7	B	GROUND
9	Y	JTS COMM-L
10	L/W	SENSOR POWER SUPPLY
11	P/L	SENSOR GROUND
12	O	ACCELERATOR PEDAL POSITION SENSOR 2
Connector No.	F51	
Connector Name	A/T ASSEMBLY	
Connector Type	RK10FG	
		
		
Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	IGNITION POWER SUPPLY
2	P	BATTERY POWER SUPPLY
3	L	CAN-H
4	SB	K-LINE
5	B	GROUND
6	V	IGNITION POWER SUPPLY
7	R	BACK-UP LAMP RELAY
8	P	CAN-L
9	BR	STARTER RELAY
10	B	GROUND
Connector No.	F501	
Connector Name	TOM	
Connector Type	SPI10FG	
		
		
Terminal No.	Color Of Wire	Signal Name [Specification]
1	-	IGNITION POWER SUPPLY
2	-	BATTERY POWER SUPPLY
3	-	CAN-L
4	-	CAN-H
5	-	K-LINE
6	-	GROUND
7	-	IGNITION POWER SUPPLY
8	-	BATTERY POWER SUPPLY
9	-	CAN-H
10	-	CAN-L

Terminal No.	Color Of Wire	Signal Name [Specification]
1	-	IGNITION POWER SUPPLY
2	-	BATTERY POWER SUPPLY

31	L/O	INTERNAL SPEED SEN DIR	151	P	CAN COMMUNICATION LINE
32	R/H/R	IGN SW	151	L	POWER SUPPLY FUSE (BACK-UP)
35	R/H	IGN SW	158	W/B	STOP/LAMP SWITCH
36	L/R	TRANSFER FLUID TEMP SEN GND	161	R/W	ENG COMMUNICATION LINE
	C/G	L/CV DODGE/SEN CONN		I/G	CONDENSER FAN CUT-OFF

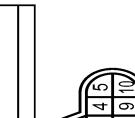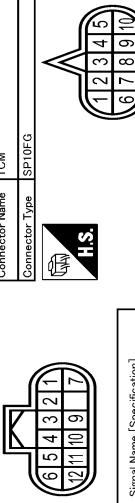


JRAWC1639GB

# **CONSULT/GST CHECKING SYSTEM**

## < BASIC INSPECTION >

CONSULT CHECKING SYSTEM (WITH ICC)

4	-	K-LINE	B	-	ILL. GND.	B	ILL CONTROL OUTPUT	B	Signal Name [Specification]
5	-	GROUND	BR	-	6	GR	LED HEAD LAMP (LH) WARNING SIGNAL	WIRE	No.
6	-	IGNITION POWER SUPPLY	Y	-	7	R	TOW MODE SIGNAL	WIRE	3
7	-	BACK-UP LAMP RELAY	L/O	-	8	P/L	CORNER SENSOR FRONT LH	WIRE	4
8	-	CAN-L	-	-	9	O	CORNER SENSOR REAR LH	WIRE	5
9	-	STARTER RELAY	-	-	10	LED HEAD LAMP (LH) WARNING SIGNAL	CORNER SENSOR REAR RH	WIRE	6
11	-	STEERING COLUMN GND	-	-	12	ON/OFF SIGNAL	CORNER SENSOR FRONT RH	WIRE	7
13	-	STEERING COLUMN GND	-	-	14	ON/OFF SIGNAL	CORNER SENSOR REAR LH	WIRE	8
15	-	STEERING COLUMN GND	-	-	16	ON/OFF SIGNAL	CORNER SENSOR REAR RH	WIRE	9

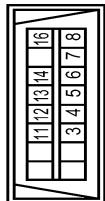

Connector Name DATA LINK CONNECTOR


Terminal No.	Color Of Wire	Signal Name [Specification]	Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	-	1A	Y	-
4	B	-	2A	GR	-
5	B	-	3A	W	-
6	L	-	4A	Y/G	-
7	SB	-	5A	V	-
8	GR	-	6A	L/W	-
9	SB	-	14	P	-
11	SB	-	16	V	-
12	R	-	17	W	-
13	L	-	18	W	-
24	V	FUEL LEVEL SENSOR GROUND	25	O/L	ALTERNATOR SIGNAL
26	W	PARKING BRAKE SWITCH SIGNAL	28	GR/R	WASHER LEVEL SIGNAL
29	BR	WASHER LEVEL SWITCH SIGNAL	30	SB	VEHICLE SPEED SIGNAL (2-PULSE)
31	BR/W	VEHICLE SPEED SIGNAL (8-PULSE)	33	W	SNOW MODE SIGNAL
34	BR/Y	FUEL LEVEL SENSOR SIGNAL	35	O/B	SEAT BELT BUCKLE SWITCH SIGNAL(DRIVER SIDE)
36	Q/Y	PASSENGER SEAT BELT WARNING SIGNAL	37	R/Y	NON-MANUAL MODE SIGNAL
38	L/W	-	39	L/W	MANUAL MODE SHIFT DOWN SIGNAL
40	Y	-	41	Y/R	MANUAL MODE SHIFT UP SIGNAL

Terminal No.	Color Of Wire	Signal Name [Specification]	Terminal No.	Color Of Wire	Signal Name [Specification]
1	3	CAN-H	2	4	CAN-L
2	3	CAN-L (Without ADAS)	3	2	CAN-H (With ADAS)
3	1	GND	4	1	GND

Terminal No.	Color Of Wire	Signal Name [Specification]	Terminal No.	Color Of Wire	Signal Name [Specification]
10	Y	CENTER SENSOR FRONT RH	11	Y	CENTER SENSOR FRONT CL
12	GR/L	IGN	13	GR/L	SENSE GND
19	L	CAN-H	20	R	CAN-L (Without ADAS)
20	R	ITS CAN-L (With ADAS)	21	L	CAN-H
22	P	CAN-L	23	B	GROUND
24	B	CAN-L	25	P	GROUND



Connector No. M2

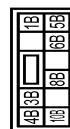Terminal No.	Color Of Wire	Signal Name [Specification]	Signal Name [Specification]
10B	W/B	-	BATTERY POWER SUPPLY
1B	R	-	IGNITION SIGNAL
3B	R	-	GROUND

Terminal Color Of Wire No.	Signal Name [Specification]
1 Y	IGNITION SIGNAL
2 GR	BATTERY POWER SUPPLY
3 B	GROUND

Connector No.	Connector Name	COMBINATOR METER
M47	Connector Type	TH40FW-NH

Connector No.	Connector Name	SONAR CONTROL UNIT
19	Connector Type	TH24FW-NH

Terminal No.	Color Of Wire	Signal Name [Specification]
4	V	IGNITION SIGNAL
19	SB	ACQ POWER SUPPLY
20	LG	AV COMM (H)
25	P	AV COMM (L)
27	L	REVERSE
28	R	CAN-L [Without ADAS]
30	LG	CAN-H [Without ADAS]
32	G/O	RETRACT MOTOR OPERATION SIGNAL (OPEN)






100

3	GR/L	IGNITION SIGNAL
4	V	ACCS POWER SIGNAL
19	SB	AV COMM (H)
20	LG	AV COMM (L)
25	P	REVERSE
27	L	CAN-H
28	R	CAN-L [Without ADAS]
28	Y	CAN-L [With ADAS]
30	LG	REFRACT/MOTOR OPERATION SIGNAL (OPEN)
32	G/O	REFRACT/MOTOR OPERATION SIGNAL (CLOSE)



Connector No.	W146
Connector Name	AROUND VIEW MONITOR CONTROL UNIT
Connector Type	TH40FW-NH

Terminal No.	Color Of Wire	Signal Name [Specification]
3	W	CORNER SENSOR FRONT LH
4	W	CORNER SENSOR FRONT RH
5	W	CORNER SENSOR REAR LH
6	R	CORNER SENSOR REAR RH
7	G	CENTER SENSOR REAR LH
8	Y	CENTER SENSOR REAR RH
9	G	CENTER SENSOR FRONT LH
10	Y	CENTER SENSOR FRONT RH
12	B	SENSOR GRID
13	GR/L	IGN
19	L	CAN-H
20	R	CAN-L (Without ADAS)
20	B	ITS-CAN-L (With ADAS)
24	QND	QND



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GND
2	V/G	BATTERY POWER SUPPLY
3	GR/L	IGNITION SIGNAL
4	V	ACC POWER SUPPLY
19	SB	AV COMM (H)
20	LG	AV COMM (L)
25	P	REVERSE
27	L	CAN-H
28	R	CAN-L (Without ADAS)
28	Y	CAN-L (With ADAS)
30	LG	FE (FACT) MOTOR OPERATION SIGNAL (OPEN)
32	G/O	REFRACTION MOTOR OPERATION SIGNAL (CLOSE)

Revision: 2014 October

# CONSULT/GST CHECKING SYSTEM

**< BASIC INSPECTION >**

## CONSULT CHECKING SYSTEM (WITH ICC)

Connector No.	Connector Name	Connector No.	Connector Name
M50	A/C AUTO AMP.	M59	AIR BAG DIAGNOSIS SENSOR UNIT
Connector Type	SAE0FW	Connector Type	Ni280FX-EX



Terminal Color Of Wire No.	Signal Name [Specification]	Terminal Color Of Wire No.	Signal Name [Specification]
1 L	CAN_H	1 R/L	IGN
2 B	GROUND	2 GND	DRL (+)
3 Y/G	BATTERY POWER SUPPLY	3 Y	DRL (-) DR2 (-)
4 V	ACC POWER SUPPLY	4 Y/R	AS1 (+)
5 W	IONIZER CONTROL SIGNAL	6 Y/L	AS1 (-)
6 V/W	A/C AUTO AMP CONNECTION RECOGNITION SIGNAL	7 Y/B	AS 2 (+)
7 W/R	AMBIENT SENSOR SIGNAL	8 Y	AS 2 (-)
8 GR/L	R/R IN-VEHICLE SENSOR SIGNAL	9 Y	EC2S (+)
9 BR	SUNLOAD SENSOR DRS SIGNAL	10 O	EC2S (-)
10 V/W	EXT/INT OUTSIDE DOOR DEFECTING SENSOR SIGNAL	11 W	QND
11 W	COMM/A/C AUTO AMP / R/R A/C CONT.	12 SHELL	AIRBAG W/L
14 O/L	FR BLOWER MOTOR CONTROL SIGNAL	23 R/W	SEATBELT TWL
16 R/G	EACH DOOR MOTOR CONTROL SIGNAL	24 G/Y	GUARD TELL TALE
17 L/Y	EACH DOOR MOTOR POWER SUPPLY	25 R	SIDE SES2 RH+
21 P	CAN-L	51 Y/G	SIDE SES2 LH-
22 B	GROUND	52 Y/L	SIDE SENS2 RH+
23 GR/L	IGNITION POWER SUPPLY	53 W	SIDE SENS2 LH-
25 R	-	54 R	DEPLOYMENT INFORMATION
26 B	SENSOR GROUND	57 R/W	CAN-H
27 GR	F/R IN-VEHICLE SENSOR SIGNAL	59 L	CAN LO
28 R	INTAKE SENSOR SIGNAL	60 R	
29 O	SUNLOAD SENSOR (PASS) SIGNAL		
31 O/L	COMM/F/R A/C CONT-A/O AUTO AMP		
34 L/O	R/R BLOWER MOTOR CONTROL SIGNAL		
37 B	GROUND		
38 G/W	R/R A/C RELAY CONTROL SIGNAL		



Connector No.	Connector Name	Connector No.	Connector Name
M66	LOW TIRE PRESSURE WARNING CONTROL UNIT	M68	BOM (BODY CONTROL MODULE)
Connector Type	TH325FW-NHH	Connector Type	TH40FB-NHH



Terminal Color Of Wire No.	Signal Name [Specification]	Terminal Color Of Wire No.	Signal Name [Specification]
2 BR/Y	COMBI SW INPUT 5	1 P	CAN-L
3 QR	COMBI SW INPUT 4	2 L	CAN-H
4 L	COMBI SW INPUT 3	3 O/V	RR/TIRE PRESSURE RECEIVER SIGNAL
5 G	COMBI SW INPUT 2	4 L	RL/TIRE PRESSURE RECEIVER SIGNAL
6 V	COMBI SW INPUT 1	5 R/L	FR/TIRE PRESSURE RECEIVER SIGNAL
8 V	POWER WINDOW SW COMM	6 W/G	FL/TIRE PRESSURE RECEIVER SIGNAL
9 R	STOP LAMP SW 1	7 R	BR/TIRE PRESSURE RECEIVER POWER SUPPLY
11 R	RAIN SENSOR SERIAL LINK	8 GR	RL/TIRE PRESSURE RECEIVER POWER SUPPLY
14 P/B	OPTICAL SENSOR DIMMER SIGNAL	9 R/W	FR/TIRE PRESSURE RECEIVER POWER SUPPLY
16 L/O	EC2S (-)	10 LG	FL/TIRE PRESSURE RECEIVER POWER SUPPLY
17 Y/G	SENSOR PWR SP/Y	15 GR	IGN
18 B/Y	RECEIVER SENSOR GND	18 B/Y	RL/TIRE PRESSURE RECEIVER SIGNAL (SENSITIVITY)
19 Q/Y	TURN SIGNAL OUTPUT (FRONT)	19 L/R	RL/TIRE PRESSURE RECEIVER SIGNAL (SENSITIVITY)
20 G	TURN SIGNAL OUTPUT (FRONT)	20 P	FL/TIRE PRESSURE RECEIVER SIGNAL (SENSITIVITY)
21 G/R	NATS ANT AMP.	21 G/R	FR/TIRE PRESSURE RECEIVER SIGNAL (SENSITIVITY)
22 B/Y	HAZARD SW	22 BR/Y	FL/TIRE PRESSURE RECEIVER SIGNAL (SENSITIVITY)
23 GR/R	KYL ENT RECEIVER ISSI	23 V/W	FR/TIRE PRESSURE RECEIVER GND
24 SB	SECURITY IND. CONT	24 R/B	RL/TIRE PRESSURE RECEIVER GND
25 W/L	DOOR IND. LINK	25 B	FL/TIRE PRESSURE RECEIVER GND
26 W/L	NATS ANT AMP.	26 BR/W	FL/TIRE PRESSURE RECEIVER GND
28 B	INTELLIGENT KEY IDENTIFICATION	32 B	CAN-L
30 W/L	BK DOOR OPRN SW		
31 W/G	DR/DOOR UNLOCK SENSOR		
32 LG	COMBI SW OUTPUT 5		
33 Y	COMBI SW OUTPUT 4		
34 W	COMBI SW OUTPUT 3		
35 R/W	COMBI SW OUTPUT 2		
36 SB	COMBI SW OUTPUT 1		
37 G/Y	SHEET P		
39 L	CAN-H		
40 P	CAN-L		



# CONSULT/GST CHECKING SYSTEM

**< BASIC INSPECTION >**

## CONSULT CHECKING SYSTEM (WITH ICC)

Connector No.	Signal Name [Specification]	Terminal No.	Color Of Wire	Signal Name [Specification]	Terminal No.	Color Of Wire	Signal Name [Specification]
M111	WIRE TO WIRE	49	SHEILD	-	5	B	-
TH80FW-OS16-TM4	-	48	W	-	6	L	CAN-H
-	-	47	R	-	7	P	CAN-L
-	-	46	SHEILD	-	9	GR	IGNITION
-	-	45	P	-	10	R	CAN-L
-	SOS CALL SWITCH SIGNAL	44	L	-	11	B	GND
-	SOS SWITCH LED SIGNAL	43	B/W	-	12	R	CAN-L
-	-	35	O	-	60	GR	-
-	-	-	-	-	61	P/L	-
-	-	-	-	-	62	BY/SB	-
-	-	-	-	-	63	R/Y	-
-	-	-	-	-	64	BR	-
-	-	-	-	-	70	O	-
-	-	-	-	-	71	W	-
-	-	-	-	-	72	SHEILD	-

Connector No.	Signal Name [Specification]	Terminal No.	Color Of Wire	Signal Name [Specification]
M111	WIRE TO WIRE	49	SHEILD	-
TH80FW-OS16-TM4	-	48	W	-
-	-	47	R	-
-	-	46	SHEILD	-
-	-	45	P	-
-	SOS CALL SWITCH SIGNAL	44	L	-
-	SOS SWITCH LED SIGNAL	43	B/W	-
-	-	35	O	-
-	-	-	-	-

Connector No.	Signal Name [Specification]	Terminal No.	Color Of Wire	Signal Name [Specification]
M111	WIRE TO WIRE	49	SHEILD	-
TH80FW-OS16-TM4	-	48	W	-
-	-	47	R	-
-	-	46	SHEILD	-
-	-	45	P	-
-	SOS CALL SWITCH SIGNAL	44	L	-
-	SOS SWITCH LED SIGNAL	43	B/W	-
-	-	35	O	-
-	-	-	-	-

Connector No.	Signal Name [Specification]	Terminal No.	Color Of Wire	Signal Name [Specification]
M111	WIRE TO WIRE	49	SHEILD	-
TH80FW-OS16-TM4	-	48	W	-
-	-	47	R	-
-	-	46	SHEILD	-
-	-	45	P	-
-	SOS CALL SWITCH SIGNAL	44	L	-
-	SOS SWITCH LED SIGNAL	43	B/W	-
-	-	35	O	-
-	-	-	-	-

JRAWC1642GB

# CONSULT/GST CHECKING SYSTEM

**< BASIC INSPECTION >**

GI

B

C

D

E

F

G

H

I

K

M

O

P


## CONSULT CHECKING SYSTEM (WITH ICC)

Connector No.	M210	Connector No.	R8
Connector Name	AV CONTROL UNIT	Connector Name	LANE CAMERA UNIT
Connector Type	TH322FW-NH	Connector Type	TH38FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]
65	W	PARKING BRAKE SIGNAL	1	GROUND
67	W	COMPOSITE IMAGE SIGNAL-2ND	4	ITS COMM-H
68	R	COMPOSITE IMAGE SIGNAL	5	GND
69	O	INTELLIGENT KEY IDENTIFICATION SIGNAL	7	W/G
70	BR	-	8	Y
71	SHIELD	MICROPHONE SHIELD		ITS COMM-L
72	Y	MICROPHONE VOC (With DCM)		
72	Y/G	MICROPHONE VOC (Without DCM)		
73	Y/G	COMM (CONT-DISP)		
74	P	CAN-L		
75	LG	AV COMM (L)		
76	LG	AV COMM (L)		
79	L/O	DIMMER SIGNAL		
80	GR/L	IGNITION SIGNAL		
81	R/Y	REVERSE SIGNAL		
82	BR/W	VEHICLE SPEED SIGNAL (8-PULSE)		
83	SHIELD	SHIELD		
84	W/B	COMPOSITE IMAGE SYNC SIGNAL		
87	BR	MICROPHONE SIGNAL (With DCM)		
87	Y/L	MICROPHONE SIGNAL (Without DCM)		
88	SHIELD	SHIELD		
89	Y/L	COMM (DISP-CONT)		
90	L	CAN-H	3	GROUND
91	SB	AV COMM (H)	4	B/R
92	SB	AV COMM (H)	6	B/R
			9	AUTO ANTI-DAZZLING OUTSIDE MIRROR CONTROL SIGNAL
			10	IGNITION POWER SUPPLY
			11	B/Y
			12	AUTO ANTI-DAZZLING OUTSIDE MIRROR GROUND
				BATTERY POWER SUPPLY
				CAN-L
				CAN-H

Connector No.	R24	Connector No.	R24
Connector Name	AUTO ANTI-DAZZLING INSIDE MIRROR	Connector Name	AUTO ANTI-DAZZLING INSIDE MIRROR
Connector Type	TH12FW-NH-B	Connector Type	TH12FW-NH-B

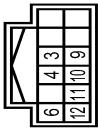

Terminal No.	Color Of Wire	Signal Name [Specification]	Terminal No.	Color Of Wire	Signal Name [Specification]
12	1	12	1	1	GROUND
12	1	12	2	2	GROUND
12	1	12	3	3	GROUND
12	1	12	4	4	GROUND
12	1	12	5	5	GROUND
12	1	12	6	6	GROUND
12	1	12	7	7	GROUND
12	1	12	8	8	GROUND
12	1	12	9	9	GROUND
12	1	12	10	10	GROUND
12	1	12	11	11	GROUND
12	1	12	12	12	GROUND


JRAWC1643GB

**WITHOUT ICC**

# CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

## CONSULT CHECKING SYSTEM (WITHOUT ICC)

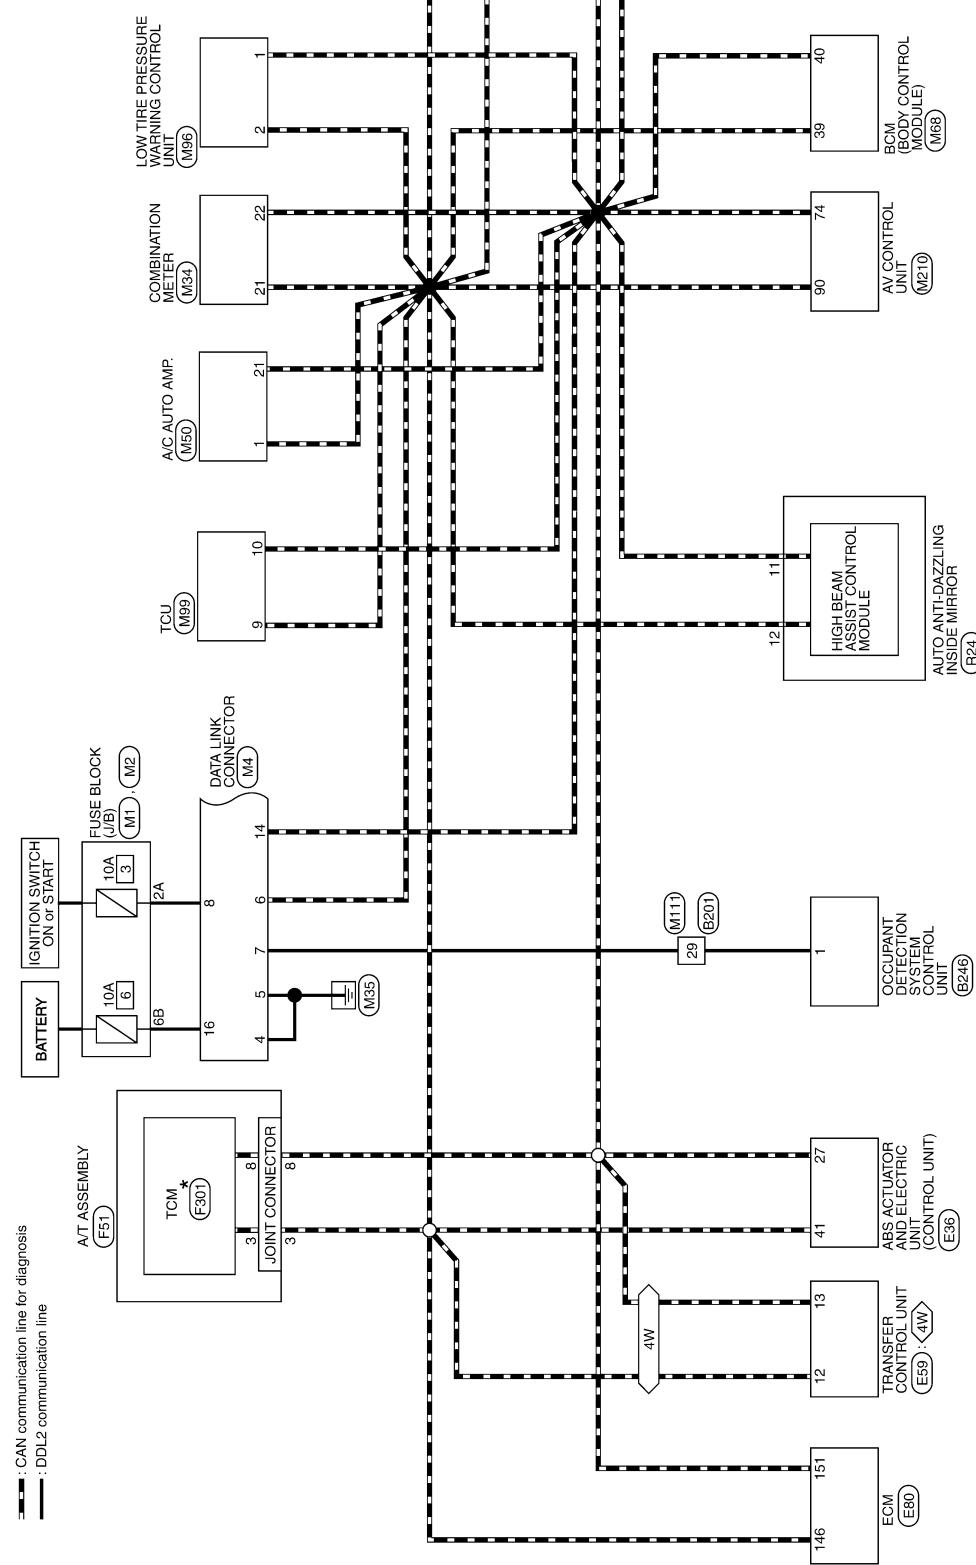


\* : This connector is not shown in "Harness Layout".

2014/07/11

JRAWC1644GB

# CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

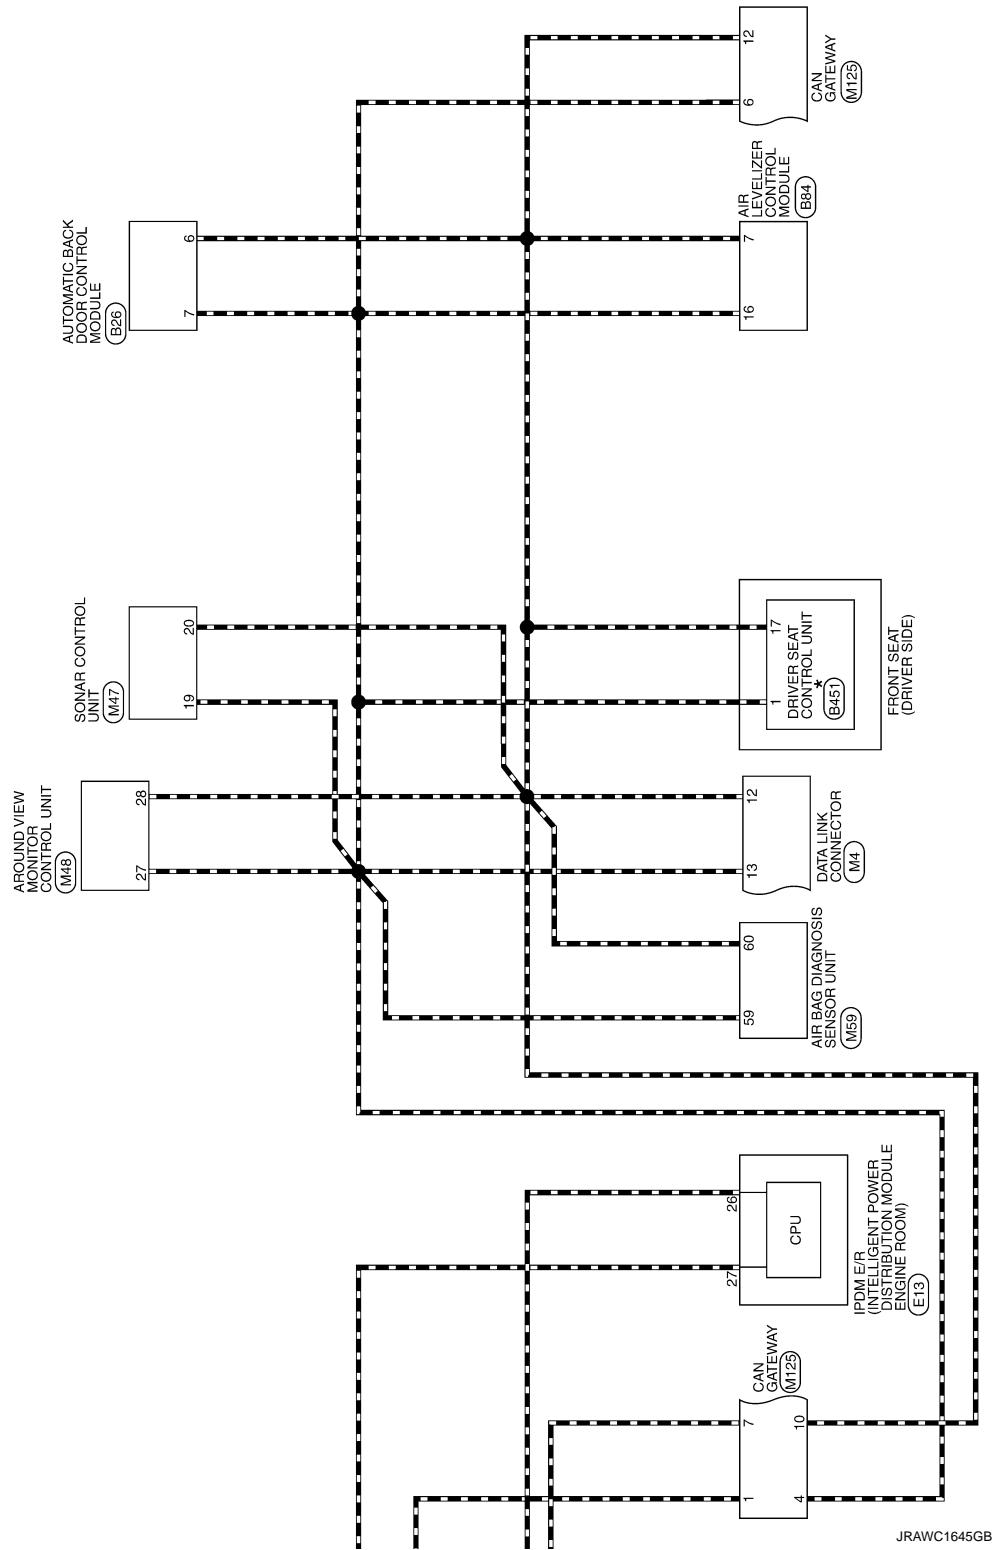

JRAWC1645GB


GI B C D E F G H I J K L M N O P

# CONSULT/GST CHECKING SYSTEM

**< BASIC INSPECTION >**

## CONSULT CHECKING SYSTEM (WITHOUT ICC)

Connector No.	B26	Connector No.	B84
Connector Name	AUTOMATIC BACK DOOR CONTROL MODULE	Connector Name	AIR LEVELIZER CONTROL MODULE
Connector Type	TH20FW-TB6	Connector Type	TH16FW-NH

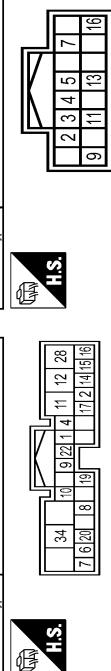

Terminal No.	Color Of Wire	Signal Name [Specification]	Signal Name [Specification]
1	L	BUZZER	GND
2	V/B	ABZ SW	V
4	GR	ABZ CLOSE SW	AB COMPRESSOR RELAY
6	P	CAN-L	VEHICLE HEIGHT SENSOR SIGNAL
7	L	CAN-H	VEHICLE HEIGHT SENSOR SIGNAL
8	L/W	HALF LATCH SW	CAN-L
9	GND/L	IGN	P/B
10	Y	BAT	W/R
11	R	CLOSURE MTR CLOSE	R
12	V	CLOSURE MTR OPEN	L
14	G/W	TOUCH SENS LH	CAN-H
15	L/R	TOUCH SENS GND	P
16	LG	TOUCH SENS RH	SHIELD
17	O	MAIN SW	R
19	L/Y	CLOSE SW	W
20	G/Y	OPEN SW	SHIELD
22	B	GND	V
28	R/W	BAT	L/R
34	B	GND	SB



Terminal Color Of Wire No.	Signal Name [Specification]	Terminal Color Of Wire No.	Signal Name [Specification]
2	BUZZER	3	V
4	ABZ SW	5	AB COMPRESSOR RELAY
6	ABZ CLOSE SW	7	VEHICLE HEIGHT SENSOR SIGNAL
7	CAN-L	8	VEHICLE HEIGHT SENSOR SIGNAL
8	CAN-H	9	P/B
9	HALF LATCH SW	10	IGN
10	IGN	11	V/W
11	BAT	12	EXHAUST SOLENOID
12	V	13	VEHICLE HEIGHT SENSOR POWER SUPPLY
13	R	14	CLOSURE MTR CLOSE
14	L	15	CLOSURE MTR OPEN
15	G/W	16	TOUCH SENS LH
16	L/R	17	TOUCH SENS GND
17	LG	18	TOUCH SENS RH
18	O	19	MAIN SW
19	L/Y	20	CLOSE SW
20	G/Y	22	OPEN SW
22	B	28	GND
28	R/W	34	BAT
34	B		GND



Terminal Color Of Wire No.	Signal Name [Specification]	Terminal Color Of Wire No.	Signal Name [Specification]
13	Y	16	L/O
16	L	17	GR/L
18	R/G	19	L/Y
19	G/Y	20	GR/Y
21	R	22	GR
22	V	23	L/W
23	W	24	W
24	W	25	R/L
25	R	26	Y/L
26	Y	27	W/R
27	R/W	28	W
28	W	29	W
29	W	30	R/L
30	R	31	Y/L
31	Y	32	R/L
32	R	33	W/G
33	W/G	34	L/R
34	L/R	35	G
35	V	37	V
37	V	38	SHIELD
38	SHIELD	39	P/B
39	P/B	40	W/R
40	W/R	41	R
41	R	42	L
42	L	43	B/W
43	B/W	44	L
44	L	45	P
45	P	46	SHIELD
46	SHIELD	47	R
47	R	48	W
48	W	49	SHIELD
49	SHIELD	50	V
50	V	51	L/R
51	L/R	52	SB
52	SB	53	SHIELD
53	SHIELD	54	V/W
54	V/W	55	L
55	L	56	GR
56	GR	57	P/L
57	P/L	58	B/SB
58	B/SB	59	R/Y
59	R/Y	60	BR
60	BR	61	G
61	G	62	Y
62	Y	63	R/Y
63	R/Y	64	BR
64	BR	65	O
65	O	66	W
66	W	67	SHIELD
67	SHIELD	68	B
68	B	69	R
69	R	70	G
70	G	71	Y
71	Y	72	SB
72	SB	73	LG
73	LG	74	R
74	R	75	G
75	G	76	Y
76	Y	77	SB
77	SB	78	LG
78	LG		



JRAWC1646GB

# CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

## CONSULT CHECKING SYSTEM (WITHOUT ICC)

Connector No.	Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]
E16	TELESCOPIC SENSOR ADDRESS 2	R/W	HI-LO POSITION SEN 1	BR	FUEL INJECTOR DRIVER POWER SUPPLY
5	R/G	IND-2	TRANSFER FLUID TEMP SEN PWM SUPPLY	BR	FUEL INJECTOR DRIVER POWER SUPPLY
7	SB	SIDE SW (BACKWARD)	INTERNAL SPEED SEN GND	BR	-
8	L	RECINER SW (BACKWARD)	INTERNAL SPEED SEN IMP	Y	ECM GROUND
9	L/B	FRONT LIFTER SW (DOWNWARD)	4L SW	Y	ECM GROUND
10	L/W	REAR LIFTER SW (DOWNWARD)	CAN-H	Y	EVAP CANISTER VENT CONTROL VALVE
11	L/R	SENSOR POWER SUPPLY	CAN-L	W/N	THROTTLE CONTROL MOTOR RELAY
12	V	CAN-L	AUTO SW	BR	FUEL PUMP CONTROL MODULE (FPCM)
17	B/W	PULSE (SIDE)	P/B	GR	ACCELERATOR PEDAL POSITION SENSOR 2
18	B/R	PULSE (FRONT LIFTER)	ROTARY POSITION SEN GND	O	ASCD/ICC STEERING SWITCH
19	W/L	ADDRESS 1	LG	Y	SENOR GROUND
20	B/L	W/B	GND	BR/Y	ROTARY POSITION SEN PWM SUPPLY
21	W/R	TIKI SENSOR	DS RR	W/L	LOCK POSITION SEN PWM SUPPLY
22	W/L	IND-1	DS RR	BR/Y	ROTARY POSITION SEN PWM SUPPLY
23	W/R	SLIDE SW (FORWARD)	DP RL	GR	TRANSFER CUP PWM SUPPLY
24	V/W	RECINER SW (FORWARD)	DP RL	GR	HI-LO POSITION SEN 3
25	Y/B	FRONT LIFTER SW (UPWARD)	P/L	W	MOTOR TEMP SEN PWM SUPPLY
26	Y/R	REAR LIFTER SW (UPWARD)	DF FR	LG	ROTARY POSITION SEN 2
27	Y/L	SE SW	DS FL	LG	LOCK POSITION SEN 2
28	G	SE SW	DS FR	R/B	LOCK POSITION SEN 2
			DS RL	LG	INTERNAL SPEED SEN DIR
			STP	Y	BATTERY CURRENT SENSOR
			VDC OFF SW	IGN	BATTERY TEMPERATURE SENSOR
			CAN-H	IGN	IGNITION SWITCH
			R	IGN	IGNITION SWITCH
			STOP LAMP SW ON	G/O	INTERNAL SPEED SEN SIGNAL
				R/W	INTERNAL SPEED SEN PWM SUPPLY
				R/W	FUEL PUMP CONTROL MODULE (FPCM) CHECK
				Y	EVAP CONTROL SYSTEM PRESSURE SENSOR
				OB	REFRIGERANT PRESSURE SENSOR
				L	CAN COMMUNICATION LINE
				Y/Y	ASCD/ICC BRAKE SWITCH
				Y	SENOR GROUND
				Y	CAN COMMUNICATION LINE
				P	POWER SUPPLY FOR ECM BACK-UP
				W/B	STOP LAMP SWITCH
				R/W	CAN COMMUNICATION LINE
				L/G	ENG RELAY (SELF SHUT-OFF)
				GR/R	-
				W	ENG COMMUNICATION LINE
				OB	ENGINE SPEED SIGNAL OUTPUT

JRAWC1647GB

# CONSULT/GST CHECKING SYSTEM


**< BASIC INSPECTION >**

## CONSULT CHECKING SYSTEM (WITHOUT ICC)


Terminal No.	Color Of Wire	Signal Name [Specification]
171	W	POWER SUPPLY FOR COM
172	W	POWER CONTROL MOTOR POWER SUPPLY
173	Q	THROTTLE POSITION SENSOR
174	B	ECM GROUND
175	B	ECM GROUND
Connector No.	F51	A/T ASSEMBLY
Connector Name		RK10FG
Connector Type		



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	IGNITION POWER SUPPLY
2	P	BATTERY POWER SUPPLY
3	L	CAN-H
4	SB	K-LINE
5	B	GROUND
6	V	IGNITION POWER SUPPLY
7	R	BACK-UP LAMP RELAY
8	P	CAN-L
9	BR	STARTER RELAY
10	B	GROUND

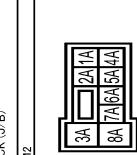

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	POWER SUPPLY FOR COM
2	W	POWER CONTROL MOTOR POWER SUPPLY
3	Q	THROTTLE POSITION SENSOR
4	B	ECM GROUND
5	B	ECM GROUND
6		
7		
8		
9		
10		

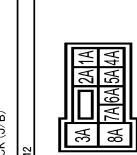

Terminal No.	Color Of Wire	Signal Name [Specification]
4B	B	K-LINE
5B	BR	GROUND
6B	Y	IGNITION POWER SUPPLY
8B	L/O	BACK-UP LAMP RELAY
9		CAN-L
10		STARTER RELAY
		GROUND
12	O	ENTER SWITCH SIGNAL
13	W/R	SELECT SWITCH SIGNAL (+)
14	R	ILLUMINATION CONTROL SWITCH SIGNAL (-)
15	R/W	AIR BAG SIGNAL
18	W/R	AMBIENT SENSOR SIGNAL
19	V/W	A/C AUTO MODE CONNECTION RECOGNITION SIGNAL
20	B	AMBIENT SENSOR GROUND
21	L	CAN-H
22	P	CAN-L
23	B	GROUND
24	V	FUEL LEVEL SENSOR GROUND
25	O/L	ALTERNATOR SIGNAL
26	W	PARKING BRAKE SWITCH SIGNAL
28	BR	SECURITY SIGNAL
29	BR	WASHER LEVEL SWITCH SIGNAL
30	SB	VEHICLE SPEED SIGNAL (2-PULSE)
31	BR/W	VEHICLE SPEED SIGNAL (6-PULSE)
33	W	SNOW MODE SIGNAL
34	BR/Y	FUEL LEVEL SENSOR SIGNAL
35	O/B	FUEL BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
36	GY	PASSENGER SEAT BELT WARNING SIGNAL
37	R/Y	NON-MANUAL MODE SIGNAL
38	L/W	MANUAL MODE SHIFT DOWN SIGNAL
39	Y/B	MANUAL MODE SHIFT UP SIGNAL
40	Q/W	MANUAL MODE SIGNAL

Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	IGNITION POWER SUPPLY
2	W	BATTERY POWER SUPPLY
3	R	CAN-H
4	W	SELECT SWITCH SIGNAL (+)
5	GR	ENTER SWITCH SIGNAL
6	Y	ILLUMINATION CONTROL SWITCH SIGNAL (-)
7	GR	AIR BAG SIGNAL
8	W	AMBIENT SENSOR SIGNAL
9	GR	A/C AUTO MODE CONNECTION RECOGNITION SIGNAL
10	W	AMBIENT SENSOR GROUND
11	GR	CAN-H
12	GR	CAN-L
13	GR	FUEL LEVEL SENSOR GROUND
14	GR	PARKING BRAKE SWITCH SIGNAL
15	GR	SECURITY SIGNAL
16	GR	WASHER LEVEL SWITCH SIGNAL
17	GR	VEHICLE SPEED SIGNAL (2-PULSE)
18	GR	VEHICLE SPEED SIGNAL (6-PULSE)
19	GR	SNOW MODE SIGNAL
20	GR	FUEL LEVEL SENSOR SIGNAL
21	GR	FUEL BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
22	GR	PASSENGER SEAT BELT WARNING SIGNAL
23	GR	NON-MANUAL MODE SIGNAL
24	GR	MANUAL MODE SHIFT DOWN SIGNAL
25	GR	MANUAL MODE SHIFT UP SIGNAL
26	GR	MANUAL MODE SIGNAL

Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	BATTERY POWER SUPPLY
2	GR	IGNITION SIGNAL
3	B	GROUND

JRAWC1648GB

# CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

## CONSULT CHECKING SYSTEM (WITHOUT ICC)

Terminal No.	Color Of Wire	Signal Name [Specification]	Connector No.	Connector Name	Connector No.	Signal Name [Specification]	Connector No.	Connector Name	Connector Type
3	W	CORNER SENSOR FRONT LH	M50	A/C AUTO AMP.	M59	AIR BAG DIAGNOSIS SENSOR UNIT	M68	BCM(BODY CONTROL MODULE)	
4	R	CORNER SENSOR FRONT RH	SAB40FW	N/A					Connector Type
5	W	CORNER SENSOR REAR LH							TH40FV-NH
6	R	CORNER SENSOR REAR RH							
7	G	CENTER SENSOR REAR LH							
8	Y	CENTER SENSOR REAR RH							
9	G	CENTER SENSOR FRONT LH							
10	Y	CENTER SENSOR FRONT RH							
12	B	SENDER GND							
13	GR/L	IGN							
19	L	CAN-H							
20	R	CAN-L (Without ADAS)							
24	B	GND							
1	L	CAN-H							
2	S	GROUND							
3	Y/G	BATTERY POWER SUPPLY							
4	Y	ACCO POWER SUPPLY							
5	W	IONIZER CONTROL SIGNAL							
6	V/W	A/C AUTO AMP CONNECTION SIGNAL							
7	W/R	AMBIENT SENSOR SIGNAL							
8	GR/L	REIN-VEHICLE SENSOR SIGNAL							
9	ER	SUNLOAD SENSOR (DR) SIGNAL							
10	V/W	EX GAS : OUTSIDE DOOR DETECTING SENSOR SIGNAL							
11	W	COMM (A/C AUTO AMP-RR / C/C CONT)							
14	O/L	FR BLOWER MOTOR CONTROL SIGNAL							
16	R/G	EACH DOOR MOTOR LIN SIGNAL							
17	L/Y	EACH DOOR MOTOR POWER SUPPLY							
21	P	CAN-L							
22	B	GROUND							
23	GR/L	IGNITION POWER SUPPLY							
25	R	-							
26	B	SENDER GROUND							
27	GR	F/F IN-VEHICLE SENSOR SIGNAL							
28	R	INTAKE SENSOR SIGNAL							
4	V	ACCO POWER SUPPLY							
19	SB	AV COMM (H)							
20	LG	AV COMM (L)							
25	P	REVERSE							
27	L	CAN-H							
28	R	CAN-L (Without ADAS)							
30	LG	RETRACT MOTOR OPERATION SIGNAL (OPEN)							
32	G/O	RETRACT MOTOR OPERATION SIGNAL (CLOSE)							
39	L	CAN-H							
40	P	CAN-L							


JRAWC1649GB

# CONSULT/GST CHECKING SYSTEM

**< BASIC INSPECTION >**

## CONSULT CHECKING SYSTEM (WITHOUT ICC)


Connector No.	M16	Connector No.	M59
Connector Name	LOW TIRE PRESSURE WARNING CONTROL UNIT	Connector Name	TOU
Connector Type	TH32FW-NH	Connector Type	TH40FW-NH

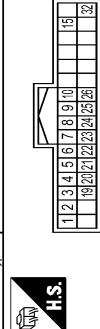

Terminal No.	Color Of Wire	Signal Name [Specification]	Terminal Color Of Wire	Signal Name [Specification]
1	P	CAN-L	1	Y/R
2	L	CAN-H	2	ER
3	O/L	RR TIRE PRESSURE RECEIVER SIGNAL	3	ER
4	L	RL TIRE PRESSURE RECEIVER SIGNAL	4	GR/L
5	R/L	FR TIRE PRESSURE RECEIVER SIGNAL	5	V
6	W/G	FL TIRE PRESSURE RECEIVER SIGNAL	6	ER
7	SB	RR TIRE PRESSURE RECEIVER POWER SUPPLY	7	B
8	GR	RL TIRE PRESSURE RECEIVER POWER SUPPLY	8	L
9	R/W	FL TIRE PRESSURE RECEIVER POWER SUPPLY	9	L
10	LG	FL TIRE PRESSURE RECEIVER POWER SUPPLY (INN)	10	B
11	GR	RR TIRE PRESSURE RECEIVER SIGNAL(SENSITIVITY)	11	Y/G
12	L/R	RR TIRE PRESSURE RECEIVER SIGNAL(SENSITIVITY)	12	Y/L
13	P	RL TIRE PRESSURE RECEIVER SIGNAL(SENSITIVITY)	13	Y
14	GR	FL TIRE PRESSURE RECEIVER SIGNAL(SENSITIVITY)	14	ER
15	B/H/Y	FL TIRE PRESSURE RECEIVER SIGNAL(SENSITIVITY)	15	ER
16	V/W	RR TIRE PRESSURE RECEIVER GND	16	SOS CALL SWITCH SIGNAL
17	R/B	RL TIRE PRESSURE RECEIVER GND	17	SOS SWITCH LED SIGNAL
18	W/L	FR TIRE PRESSURE RECEIVER GND	18	W
19	BR/W	FL TIRE PRESSURE RECEIVER GND	19	W
20	B	OND	20	W



Terminal No.	Color Of Wire	Signal Name [Specification]	Terminal No.	Color Of Wire	Signal Name [Specification]
5	W/B	-	5	W/B	-
6	L/Y	-	6	L/Y	-
7	R	-	7	R	-
8	G/R	-	8	G/R	-
9	GR/R	-	9	GR/R	-
11	W	-	11	W	-
12	V	-	12	V	-
13	Y	-	13	Y	-
16	L/O	-	16	L/O	-
17	GR/L	-	17	GR/L	-
18	R/G	-	18	R/G	-
19	L/Y	-	19	L/Y	-
20	G/Y	-	20	G/Y	-
21	R	-	21	R	-
22	GR	-	22	GR	-
27	L/O	-	27	L/O	-
29	SB	-	29	SB	-
30	R/L	-	30	R/L	-
31	Y/L	-	31	Y/L	-
32	W/R	-	32	W/R	-
33	W/G	-	33	W/G	-
34	L/R	-	34	L/R	-
36	G	-	36	G	-
37	V	-	37	V	-
38	SHIELD	-	38	SHIELD	-
39	P/B	-	39	P/B	-
40	W/R	-	40	W/R	-
41	R	-	41	R	-
42	L/W	-	42	L/W	-
43	B/W	-	43	B/W	-
44	L	-	44	L	-
45	P	-	45	P	-
46	SHIELD	-	46	SHIELD	-
47	R	-	47	R	-
48	W	-	48	W	-
49	SHIELD	-	49	SHIELD	-
50	V	-	50	V	-
51	O/I	-	51	O/I	-
52	L/R	-	52	L/R	-
53	SB	-	53	SB	-
54	V/W	-	54	V/W	-
59	L	-	59	L	-
60	GR	-	60	GR	-
61	P/L	-	61	P/L	-
62	Bi/SB	-	62	Bi/SB	-
63	R/Y	-	63	R/Y	-
64	BR	-	64	BR	-
70	O	-	70	O	-
71	W	-	71	W	-
72	SHIELD	-	72	SHIELD	-

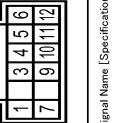

Terminal No.	Color Of Wire	Signal Name [Specification]	Terminal No.	Color Of Wire	Signal Name [Specification]
1	R/B	-	1	R/B	-
2	G	-	2	G	-
3	W/R	-	3	W/R	-

JRAWC1650GB

# CONSULT/GST CHECKING SYSTEM

**< BASIC INSPECTION >**

GI

B

C

D

E

F

G

H

I

J

K

M

N

O

P

## CONSULT CHECKING SYSTEM (WITHOUT ICC)

Connector No.	M210	Connector No.	R24
Connector Name	AV CONTROL UNIT	Connector Name	AUTO ANTI-DAZZLING INSIDE MIRROR
Connector Type	TH322FW-NH	Connector Type	TH12FW-NH-B



Terminal No.	Color Of Wire	Signal Name [Specification]	Terminal No.	Color Of Wire	Signal Name [Specification]
65	W	PARKING BRAKE SIGNAL	3	B	GROUND
67	W	COMPOSITE IMAGE SIGNAL GND	4	B/R	AUTO ANTI-DAZZLING OUTSIDE MIRROR GND
68	R	COMPOSITE IMAGE SIGNAL	6	B/R	AUTO ANTI-DAZZLING OUTSIDE MIRROR POWER SUPPLY
69	O	INTELLIGENT KEY IDENTIFICATION SIGNAL	9	B/Y	AUTO ANTI-DAZZLING OUTSIDE MIRROR GROUND
70	BR	-	10	B/Y	BATTERY POWER SUPPLY
71	SHIELD	MICROPHONE SHIELD	11	B	CAN-L
72	Y	MICROPHONE VOC (With DCM)	12	B/SB	CAN-H
73	Y/G	MICROPHONE VOC (Without DCM)			
74	P	COMM (CONT-DISP)			
75	LG	CAN-L			
76	LG	AV COMM (L)			
79	L/O	AV COMM (L)			
80	GR/L	DIMMER SIGNAL			
81	R/Y	IGNITION SIGNAL			
82	BR/W	REVERSE SIGNAL			
83	SHIELD	VEHICLE SPEED SIGNAL (8-PULSE)			
84	W/B	SHIELD			
87	BR	COMPOSITE IMAGE SYNC SIGNAL			
87	Y/L	MICROPHONE SIGNAL (With DCM)			
88	SHIELD	MICROPHONE SIGNAL (Without DCM)			
89	Y/L	SHIELD			
90	L	COMM (DISP-CONT)			
91	SB	CAN-H			
92	SB	AV COMM (H)			
		AV COMM (H)			

# INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

## INSPECTION AND ADJUSTMENT

### ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL

### ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Required Procedure After Battery Disconnection

INFOID:000000010262118

SYSTEM	ITEM	REFERENCE
Front automatic air conditioning system	Temperature setting trimmer (Front)	<a href="#">HAC-74, "FRONT AUTOMATIC AIR CONDITIONING SYSTEM : Temperature Setting Trimmer (Front)"</a>
	Foot position setting trimmer	<a href="#">HAC-74, "FRONT AUTOMATIC AIR CONDITIONING SYSTEM : Foot Position Setting Trimmer"</a>
	Inlet port memory function*	—
	Inlet port memory function (FRE)	<a href="#">HAC-75, "FRONT AUTOMATIC AIR CONDITIONING SYSTEM : Inlet Port Memory Function (FRE)"</a>
	Inlet port memory function (REC)	<a href="#">HAC-75, "FRONT AUTOMATIC AIR CONDITIONING SYSTEM : Inlet Port Memory Function (REC)"</a>
ACCS (Advanced Climate Control System)	Exhaust gas / outside odor detecting sensor sensitivity adjustment function	<a href="#">HAC-76, "ACCS (ADVANCED CLIMATE CONTROL SYSTEM) : Exhaust Gas / Outside Odor Detecting Sensor Sensitivity Adjustment Function"</a>
	Auto intake switch interlocking movement change function	<a href="#">HAC-76, "ACCS (ADVANCED CLIMATE CONTROL SYSTEM) : Auto Intake Switch Interlocking Movement Change Function"</a>
	Clean switch interlocking movement change function*	—
Rear automatic air conditioning system	Temperature setting trimmer (Rear)	<a href="#">HAC-75, "REAR AUTOMATIC AIR CONDITIONING SYSTEM : Temperature Setting Trimmer (Rear)"</a>
Automatic drive positioner	Automatic drive positioner system	<a href="#">ADP-51, "ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Description"</a>
Power window control	Power window control system	<a href="#">PWC-31, "Description"</a>
Sunroof system	Sunroof system	—
Sunshade system	Sunshade system	—
Rear view monitor*	Rear view monitor predictive course line center position adjustment	—
Around view monitor	Predictive course line center position adjustment	—
Automatic back door system	Automatic back door system	<a href="#">DLK-84, "ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Description"</a>
Engine oil level read*	Engine oil level read	—

\*: Not equipped.