

SECTION **EXL**

EXTERIOR LIGHTING SYSTEM

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

CONTENTS

<p style="text-align: center;">XENON TYPE</p> <p>PRECAUTION 6</p> <p>PRECAUTIONS 6</p> <p style="padding-left: 20px;">Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"6</p> <p style="padding-left: 20px;">Precautions For Xenon Headlamp Service6</p> <p style="padding-left: 20px;">Precautions for Removing Battery Terminal7</p> <p>SYSTEM DESCRIPTION 8</p> <p>COMPONENT PARTS 8</p> <p style="padding-left: 20px;">Component Parts Location8</p> <p style="padding-left: 20px;">Optical Sensor9</p> <p style="padding-left: 20px;">Daytime Running Light Relay9</p> <p style="padding-left: 20px;">Xenon Headlamp9</p> <p style="padding-left: 20px;">Hazard Switch10</p> <p style="padding-left: 20px;">Headlamp Aiming Switch10</p> <p style="padding-left: 20px;">HID control unit10</p> <p style="padding-left: 20px;">Headlamp Aiming Motor10</p> <p style="padding-left: 20px;">Bulb Specifications11</p> <p>SYSTEM12</p> <p>HEADLAMP SYSTEM 12</p> <p style="padding-left: 20px;">HEADLAMP SYSTEM : System Description 12</p> <p style="padding-left: 20px;">HEADLAMP SYSTEM : Circuit Diagram 13</p> <p style="padding-left: 20px;">HEADLAMP SYSTEM : Fail-safe 13</p> <p>AUTO LIGHT SYSTEM (EXCEPT FOR CANADA)... 14</p> <p style="padding-left: 20px;">AUTO LIGHT SYSTEM (EXCEPT FOR CANADA) : System Description 14</p> <p style="padding-left: 20px;">AUTO LIGHT SYSTEM (EXCEPT FOR CANADA) : Circuit Diagram 16</p> <p>AUTO LIGHT SYSTEM (FOR CANADA) 16</p> <p style="padding-left: 20px;">AUTO LIGHT SYSTEM (FOR CANADA) : System Description 17</p> <p style="padding-left: 20px;">AUTO LIGHT SYSTEM (FOR CANADA) : Circuit Diagram 19</p>	<p>DAYTIME RUNNING LIGHT SYSTEM19</p> <p style="padding-left: 20px;">DAYTIME RUNNING LIGHT SYSTEM : System Description20</p> <p style="padding-left: 20px;">DAYTIME RUNNING LIGHT SYSTEM : Circuit Diagram21</p> <p>HEADLAMP AIMING CONTROL (MANUAL)21</p> <p style="padding-left: 20px;">HEADLAMP AIMING CONTROL (MANUAL) : System Description21</p> <p>TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM21</p> <p style="padding-left: 20px;">TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM : System Description22</p> <p style="padding-left: 20px;">TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM : Circuit Diagram23</p> <p>PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMP SYSTEM23</p> <p style="padding-left: 20px;">PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMP SYSTEM : System Description....23</p> <p style="padding-left: 20px;">PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMP SYSTEM : Circuit Diagram24</p> <p style="padding-left: 20px;">PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMP SYSTEM : Fail-safe25</p> <p>FRONT FOG LAMP SYSTEM26</p> <p style="padding-left: 20px;">FRONT FOG LAMP SYSTEM : System Description26</p> <p style="padding-left: 20px;">FRONT FOG LAMP SYSTEM : Circuit Diagram27</p> <p style="padding-left: 20px;">FRONT FOG LAMP SYSTEM : Fail-safe27</p> <p>EXTERIOR LAMP BATTERY SAVER SYSTEM28</p> <p style="padding-left: 20px;">EXTERIOR LAMP BATTERY SAVER SYSTEM : System Description28</p> <p style="padding-left: 20px;">EXTERIOR LAMP BATTERY SAVER SYSTEM : Circuit Diagram29</p> <p>DIAGNOSIS SYSTEM (BCM)30</p> <p>COMMON ITEM30</p> <p style="padding-left: 20px;">COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)30</p>
---	---

EXL

HEADLAMP	31	FRONT SIDE MARKER LAMP CIRCUIT	74
HEADLAMP : CONSULT Function (BCM - HEAD- LAMP) (Xenon Type Headlamp)	32	Component Function Check	74
FLASHER	34	Diagnosis Procedure	74
FLASHER : CONSULT Function (BCM - FLASH- ER) (Xenon Type Headlamp)	34	TAIL LAMP CIRCUIT	75
DIAGNOSIS SYSTEM (IPDM E/R)	36	Component Function Check	75
Diagnosis Description	36	Diagnosis Procedure	75
CONSULT Function (IPDM E/R)	38	LICENSE PLATE LAMP CIRCUIT	77
ECU DIAGNOSIS INFORMATION	41	Component Function Check	77
BCM, IPDM E/R	41	Diagnosis Procedure	77
List of ECU Reference	41	TURN SIGNAL LAMP CIRCUIT	78
WIRING DIAGRAM	42	Component Function Check	78
EXTERIOR LIGHTING SYSTEM	42	Diagnosis Procedure	78
Wiring Diagram	42	FRONT FOG LAMP CIRCUIT	81
BASIC INSPECTION	59	Component Function Check	81
DIAGNOSIS AND REPAIR WORK FLOW	59	Diagnosis Procedure	81
Work Flow	59	OPTICAL SENSOR	83
DTC/CIRCUIT DIAGNOSIS	62	Component Function Check	83
HEADLAMP (HI) CIRCUIT	62	Diagnosis Procedure	83
WITHOUT DAYTIME RUNNING LIGHT SYSTEM ...	62	HAZARD SWITCH	86
WITHOUT DAYTIME RUNNING LIGHT SYSTEM		Component Function Check	86
: Component Function Check	62	Diagnosis Procedure	86
WITHOUT DAYTIME RUNNING LIGHT SYSTEM		SYMPTOM DIAGNOSIS	88
: Diagnosis Procedure	62	EXTERIOR LIGHTING SYSTEM SYMPTOMS..	88
WITH DAYTIME RUNNING LIGHT SYSTEM	63	WITHOUT DAYTIME RUNNING LIGHT SYSTEM ...	88
WITH DAYTIME RUNNING LIGHT SYSTEM :		WITHOUT DAYTIME RUNNING LIGHT SYSTEM	
Component Function Check	63	: Symptom Table	88
WITH DAYTIME RUNNING LIGHT SYSTEM : Di- agnosis Procedure	64	WITH DAYTIME RUNNING LIGHT SYSTEM	89
HEADLAMP (LO) CIRCUIT	66	WITH DAYTIME RUNNING LIGHT SYSTEM :	
Component Function Check	66	Symptom Table	90
Diagnosis Procedure	66	NORMAL OPERATING CONDITION	93
DAYTIME RUNNING LIGHT RELAY CIRCUIT		Description	93
.....	68	BOTH SIDE HEADLAMPS (HI) ARE NOT	
Component Function Check	68	TURNED ON	94
Diagnosis Procedure	68	WITH DAYTIME RUNNING LIGHT SYSTEM	94
Component Inspection	69	WITH DAYTIME RUNNING LIGHT SYSTEM : De- scription	94
XENON HEADLAMP	70	WITH DAYTIME RUNNING LIGHT SYSTEM : Di- agnosis Procedure	94
Diagnosis Procedure	70	WITHOUT DAYTIME RUNNING LIGHT SYSTEM ...	94
HEADLAMP AIMING SYSTEM (MANUAL)	71	WITHOUT DAYTIME RUNNING LIGHT SYSTEM	
Component Inspection	71	: Description	94
PARKING LAMP CIRCUIT	72	WITHOUT DAYTIME RUNNING LIGHT SYSTEM	
Component Function Check	72	: Diagnosis Procedure	94
Diagnosis Procedure	72	BOTH SIDE HEADLAMPS (LO) ARE NOT	
		TURNED ON	96
		Description	96
		Diagnosis Procedure	96

PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS ARE NOT TURNED ON97	HIGH-MOUNTED STOP LAMP 117	
Description 97	Exploded View117	A
Diagnosis Procedure97	Removal and Installation117	
BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON98	LICENSE PLATE LAMP 118	B
Description 98	Exploded View118	
Diagnosis Procedure98	Removal and Installation118	C
PERIODIC MAINTENANCE99	Replacement118	
HEADLAMP AIMING ADJUSTMENT99	REFLEX REFLECTOR 119	D
Description 99	Exploded View119	
Aiming Adjustment Procedure 100	Removal and Installation119	
FRONT FOG LAMP AIMING ADJUSTMENT .. 101	SERVICE DATA AND SPECIFICATIONS (SDS) 120	E
Description 101	SERVICE DATA AND SPECIFICATIONS (SDS) 120	F
Aiming Adjustment Procedure 101	Bulb Specifications120	
REMOVAL AND INSTALLATION 103	HALOGEN TYPE	
FRONT COMBINATION LAMP 103	PRECAUTION 121	G
Exploded View 103	PRECAUTIONS 121	
Removal and Installation 104	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" 121	H
Replacement 104	Precautions for Removing Battery Terminal 121	
Disassembly and Assembly 104	SYSTEM DESCRIPTION 122	I
Inspection After Installation (HID Control Unit) 105	COMPONENT PARTS 122	J
FRONT FOG LAMP 106	Component Parts Location 122	
Exploded View 106	Optical Sensor 123	K
Removal and Installation 106	Daytime Running Light Relay 123	
Replacement 106	Hazard Switch 123	
OPTICAL SENSOR 108	Bulb Specifications 123	
Exploded View 108	SYSTEM 124	EXL
Removal and Installation 108	HEADLAMP SYSTEM 124	
LIGHTING & TURN SIGNAL SWITCH 109	HEADLAMP SYSTEM : System Description 124	M
Exploded View 109	HEADLAMP SYSTEM : Circuit Diagram 125	
HAZARD SWITCH 110	HEADLAMP SYSTEM : Fail-safe 125	
Exploded View 110	AUTO LIGHT SYSTEM (EXCEPT FOR CANADA) .. 126	N
Removal and Installation 110	AUTO LIGHT SYSTEM (EXCEPT FOR CANADA) : System Description 126	
HEADLAMP AIMING SWITCH 111	AUTO LIGHT SYSTEM (EXCEPT FOR CANADA) : Circuit Diagram 128	O
Exploded View 111	AUTO LIGHT SYSTEM (FOR CANADA) 128	
Removal and Installation 111	AUTO LIGHT SYSTEM (FOR CANADA) : System Description 129	P
SIDE TURN SIGNAL LAMP 112	AUTO LIGHT SYSTEM (FOR CANADA) : Circuit Diagram 131	
Exploded View 112	DAYTIME RUNNING LIGHT SYSTEM 131	
REAR COMBINATION LAMP 113	DAYTIME RUNNING LIGHT SYSTEM : System Description 132	
Exploded View 113	DAYTIME RUNNING LIGHT SYSTEM : Circuit Diagram 133	
Removal and Installation 113		
Replacement 114		
BACK-UP LAMP 115		
Exploded View 115		
Removal and Installation 115		
Replacement 116		

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM	133	HEADLAMP (HI) CIRCUIT	174
TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM : System Description	134	WITHOUT DAYTIME RUNNING LIGHT SYSTEM .	174
TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM : Circuit Diagram	135	WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Component Function Check	174
PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMP SYSTEM	135	WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Diagnosis Procedure	174
PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMP SYSTEM : System Description ..	135	WITH DAYTIME RUNNING LIGHT SYSTEM	175
PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMP SYSTEM : Circuit Diagram	136	WITH DAYTIME RUNNING LIGHT SYSTEM : Component Function Check	175
PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMP SYSTEM : Fail-safe	137	WITH DAYTIME RUNNING LIGHT SYSTEM : Diagnosis Procedure	176
FRONT FOG LAMP SYSTEM	138	HEADLAMP (LO) CIRCUIT	178
FRONT FOG LAMP SYSTEM : System Description	138	Component Function Check	178
FRONT FOG LAMP SYSTEM : Circuit Diagram ..	139	Diagnosis Procedure	178
FRONT FOG LAMP SYSTEM : Fail-safe	139	DAYTIME RUNNING LIGHT RELAY CIRCUIT ..	180
EXTERIOR LAMP BATTERY SAVER SYSTEM	140	Component Function Check	180
EXTERIOR LAMP BATTERY SAVER SYSTEM : System Description	140	Diagnosis Procedure	180
EXTERIOR LAMP BATTERY SAVER SYSTEM : Circuit Diagram	141	Component Inspection	181
DIAGNOSIS SYSTEM (BCM)	142	PARKING LAMP CIRCUIT	182
COMMON ITEM	142	Component Function Check	182
COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)	142	Diagnosis Procedure	182
HEADLAMP	143	FRONT SIDE MARKER LAMP CIRCUIT	184
HEADLAMP : CONSULT Function (BCM - HEADLAMP) (Halogen Type Headlamp)	144	Component Function Check	184
FLASHER	146	Diagnosis Procedure	184
FLASHER : CONSULT Function (BCM - FLASHER) (Halogen Type Headlamp)	146	TAIL LAMP CIRCUIT	185
DIAGNOSIS SYSTEM (IPDM E/R)	148	Component Function Check	185
Diagnosis Description	148	Diagnosis Procedure	185
CONSULT Function (IPDM E/R)	150	LICENSE PLATE LAMP CIRCUIT	187
ECU DIAGNOSIS INFORMATION	153	Component Function Check	187
BCM, IPDM E/R	153	Diagnosis Procedure	187
List of ECU Reference	153	TURN SIGNAL LAMP CIRCUIT	188
WIRING DIAGRAM	154	Component Function Check	188
EXTERIOR LIGHTING SYSTEM	154	Diagnosis Procedure	188
Wiring Diagram	154	FRONT FOG LAMP CIRCUIT	191
BASIC INSPECTION	171	Component Function Check	191
DIAGNOSIS AND REPAIR WORK FLOW	171	Diagnosis Procedure	191
Work Flow	171	OPTICAL SENSOR	193
DTC/CIRCUIT DIAGNOSIS	174	Component Function Check	193
		Diagnosis Procedure	193
		HAZARD SWITCH	196
		Component Function Check	196
		Diagnosis Procedure	196
		SYMPTOM DIAGNOSIS	198
		EXTERIOR LIGHTING SYSTEM SYMPTOMS ..	198
		WITHOUT DAYTIME RUNNING LIGHT SYSTEM .	198

WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Symptom Table	198	Removal and Installation	214	A
		Replacement	214	
		Disassembly and Assembly	214	
WITH DAYTIME RUNNING LIGHT SYSTEM	199	FRONT FOG LAMP	216	B
WITH DAYTIME RUNNING LIGHT SYSTEM : Symptom Table	200	Exploded View	216	
NORMAL OPERATING CONDITION	203	Removal and Installation	216	
Description	203	Replacement	216	C
BOTH SIDE HEADLAMPS (HI) ARE NOT TURNED ON	204	OPTICAL SENSOR	218	D
		Exploded View	218	
		Removal and Installation	218	
WITH DAYTIME RUNNING LIGHT SYSTEM	204	LIGHTING & TURN SIGNAL SWITCH	219	E
WITH DAYTIME RUNNING LIGHT SYSTEM : De- scription	204	Exploded View	219	
WITH DAYTIME RUNNING LIGHT SYSTEM : Di- agnosis Procedure	204	HAZARD SWITCH	220	F
WITHOUT DAYTIME RUNNING LIGHT SYSTEM ..	204	Exploded View	220	
WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Description	204	Removal and Installation	220	
WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Diagnosis Procedure	204	SIDE TURN SIGNAL LAMP	221	G
BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON	206	Exploded View	221	
Description	206	REAR COMBINATION LAMP	222	H
Diagnosis Procedure	206	Exploded View	222	
PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS ARE NOT TURNED ON ...	207	Removal and Installation	222	
Description	207	Replacement	223	I
Diagnosis Procedure	207	BACK-UP LAMP	224	J
BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON	208	Exploded View	224	
Description	208	Removal and Installation	224	
Diagnosis Procedure	208	Replacement	225	K
PERIODIC MAINTENANCE	209	HIGH-MOUNTED STOP LAMP	226	L
HEADLAMP AIMING ADJUSTMENT	209	Exploded View	226	
Description	209	Removal and Installation	226	
Aiming Adjustment Procedure	210	LICENSE PLATE LAMP	227	EXL
FRONT FOG LAMP AIMING ADJUSTMENT ..	211	Exploded View	227	
Description	211	Removal and Installation	227	
Aiming Adjustment Procedure	211	Replacement	227	
REMOVAL AND INSTALLATION	213	REFLEX REFLECTOR	228	M
FRONT COMBINATION LAMP	213	Exploded View	228	
Exploded View	213	Removal and Installation	228	
		SERVICE DATA AND SPECIFICATIONS (SDS)	229	N
		SERVICE DATA AND SPECIFICATIONS (SDS)	229	O
		Bulb Specifications	229	P

PRECAUTION**PRECAUTIONS****Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"**

INFOID:000000009653003

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS**WARNING:**

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precautions For Xenon Headlamp Service

INFOID:000000009653004

WARNING:

Comply with the following warnings to prevent any serious accident.

- Disconnect the battery cable (negative terminal) or the power supply fuse before installing, removing, or touching the xenon headlamp (bulb included). The xenon headlamp contains high-voltage generated parts.
- Never work with wet hands.
- Check the xenon headlamp ON-OFF status after assembling it to the vehicle. Never turn the xenon headlamp ON in other conditions. Connect the power supply to the vehicle-side connector. (Turning it ON outside the lamp case may cause fire or visual impairments.)
- Never touch the bulb glass immediately after turning it OFF. It is extremely hot.

CAUTION:

Comply with the following cautions to prevent any error and malfunction.

- Install the xenon bulb securely. (Insufficient bulb socket installation may melt the bulb, the connector, the housing, etc. by high-voltage leakage or corona discharge.)
- Never perform HID circuit inspection with a tester.
- Never touch the xenon bulb glass with hands. Never put oil and grease on it.
- Dispose of the used xenon bulb after packing it in thick vinyl without breaking it.
- Never wipe out dirt and contamination with organic solvent (thinner, gasoline, etc.).

PRECAUTIONS

< PRECAUTION >

[XENON TYPE]

Precautions for Removing Battery Terminal

INFOID:000000009980278

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

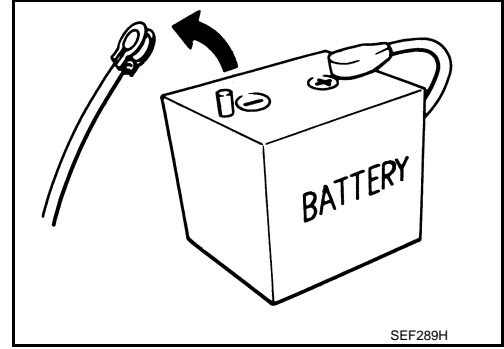


A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:000000009653005

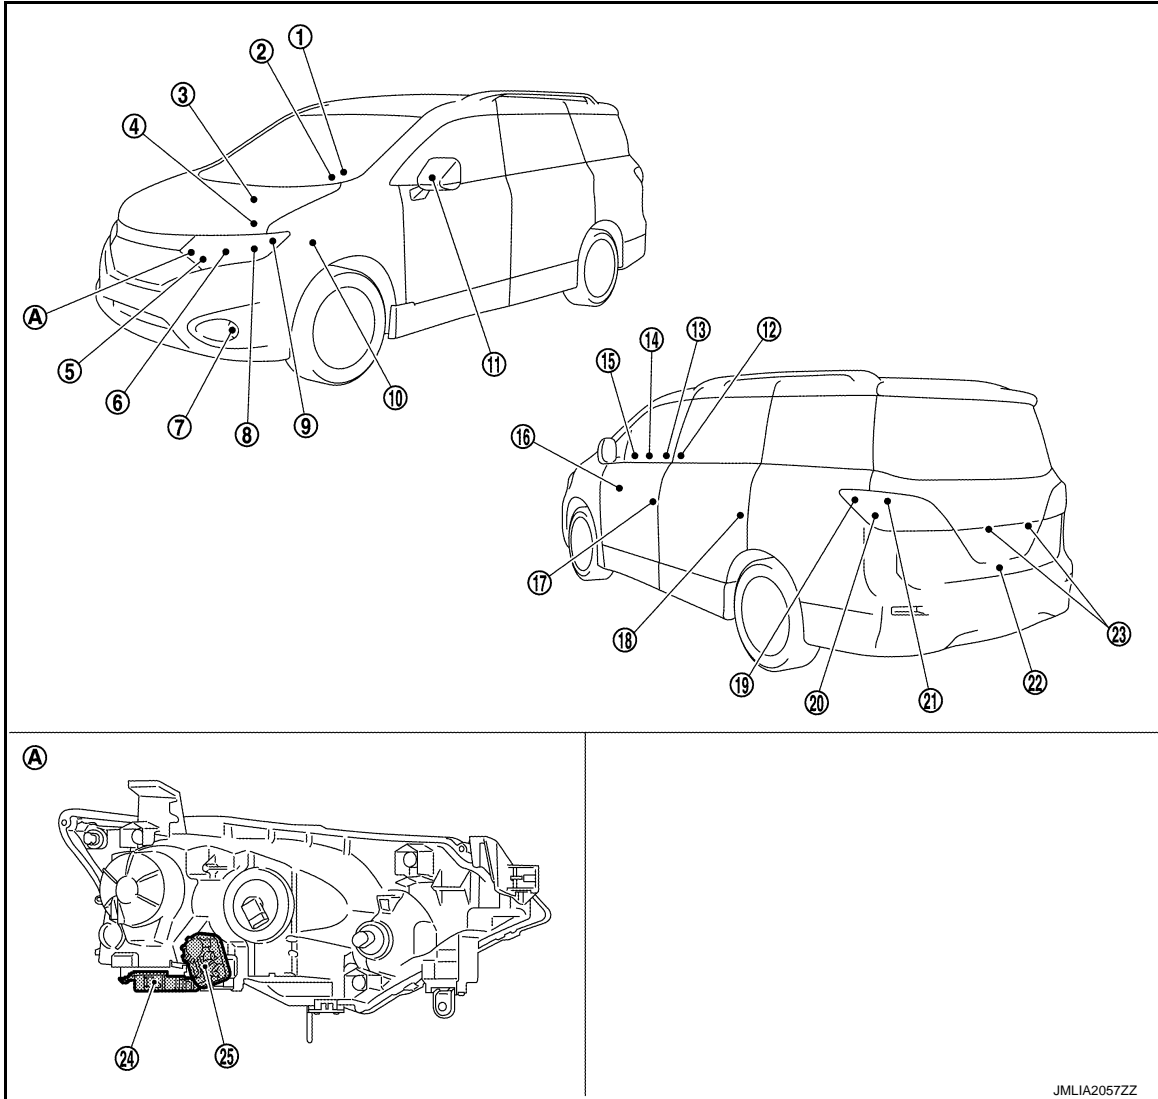

A. Front combination lamp (back)

No.	Part	Function
1.	Optical sensor	Refer to EXL-9, "Optical Sensor" .
2.	BCM	<ul style="list-style-type: none"> • Detects each switch condition by the combination switch reading function • Judges that the exterior lamps are turned ON according to the vehicle condition • Requests the headlamp relay (High/Low), tail lamp relay and front fog lamp relay ON to IPDM E/R (via CAN communication) • Requests the high beam indicator lamp and tail lamp indicator lamp ON to the combination meter (via CAN communication) • Judges the outside brightness from the optical sensor signal. • Judges the ON/OFF timing according to the vehicle condition. • Judges the ON/OFF status of the exterior lamp according to the outside brightness and the vehicle condition. • Refer to BCS-4, "BODY CONTROL SYSTEM : Component Parts Location" for detailed installation location.

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[XENON TYPE]

No.	Part	Function
3.	Daytime running light relay*	Refer to EXL-9, "Daytime Running Light Relay" .
4.	IPDM E/R	<ul style="list-style-type: none"> Controls the integrated relay, and supplies voltage to the load according to the request from BCM (via CAN communication). Refer to PCS-4, "IPDM E/R : Component Parts Location" for detailed installation location.
5.	Front turn signal lamp/Parking lamp	Refer to EXL-11, "Bulb Specifications" .
6.	Headlamp HI	Refer to EXL-11, "Bulb Specifications" .
7.	Front fog lamp	Refer to EXL-11, "Bulb Specifications" .
8.	Headlamp LO (Xenon headlamp)	Refer to EXL-9, "Xenon Headlamp" .
9.	Front side marker lamp	Refer to EXL-11, "Bulb Specifications" .
10.	Air bag diagnosis sensor unit	Transmits air bag signal to BCM. Refer to SRC-8, "Component Parts Location" for detailed installation location.
11.	Side turn signal lamp	Refer to EXL-11, "Bulb Specifications" .
12.	Hazard switch	Refer to EXL-10, "Hazard Switch" .
13.	Push-button ignition switch	Refer to DLK-18, "DOOR LOCK SYSTEM : Component Parts Location" .
14.	Combination meter	<ul style="list-style-type: none"> Blinks the turn signal indicator lamp and outputs the turn signal operating sound with integrated buzzer according to the request from BCM (via CAN communication). Turns the high beam indicator lamp and tail lamp indicator lamp ON according to the request from BCM (via CAN communication).
15.	Combination switch (Lighting & turn signal switch)	Refer to BCS-8, "COMBINATION SWITCH READING SYSTEM : System Description" .
16.	Headlamp aiming switch	Refer to EXL-10, "Headlamp Aiming Switch" .
17.	Front door switch (driver side)	Refer to DLK-18, "DOOR LOCK SYSTEM : Component Parts Location" .
18.	Slide door switch (LH)	Refer to DLK-18, "DOOR LOCK SYSTEM : Component Parts Location" .
19.	Rear side marker lamp	Refer to EXL-11, "Bulb Specifications" .
20.	Rear turn signal lamp	Refer to EXL-11, "Bulb Specifications" .
21.	Tail lamp	Refer to EXL-11, "Bulb Specifications" .
22.	Back door switch	Refer to DLK-18, "DOOR LOCK SYSTEM : Component Parts Location" .
23.	License plate lamp	Refer to EXL-11, "Bulb Specifications" .
24.	HID control unit	Refer to EXL-10, "HID control unit" .
25.	Headlamp aiming motor	Refer to EXL-10, "Headlamp Aiming Motor" .

*: With daytime running light system

Optical Sensor

INFOID:000000009653006

Optical sensor converts the outside brightness (lux) to voltage and transmits the optical sensor signal to BCM.

Daytime Running Light Relay

INFOID:000000009653007

Headlamp HI ground circuit is switched according to request from IPDM E/R.

Xenon Headlamp

INFOID:000000009653008

OUTLINE

- The lamp light source is by the arch discharge by applying high voltage into the xenon gas-filled bulb instead of the halogen bulb filament.
- Sight becomes more natural and brighter because the amount of light are gained adequately and the color of light is sunshine-like white.
- The xenon bulb drops the amount of light, repeats blinking, and illuminates in red if the bulb reaches the service life.

ILLUMINATION PRINCIPLE

COMPONENT PARTS


< SYSTEM DESCRIPTION >

[XENON TYPE]

1. Discharging starts in high voltage pulse between bulb electrodes.
2. Xenon gas is activated by current between electrodes. Pale light is emitted.
3. The luminous tube (bulb) temperature elevates. Evaporated halide is activated by discharge. The color of light changes into white.

NOTE:

- Brightness and the color of light may change slightly immediately after the headlamp turned ON until the xenon bulb becomes stable. This is not malfunction.
- Illumination time lag may occur between right and left. This is not malfunction.

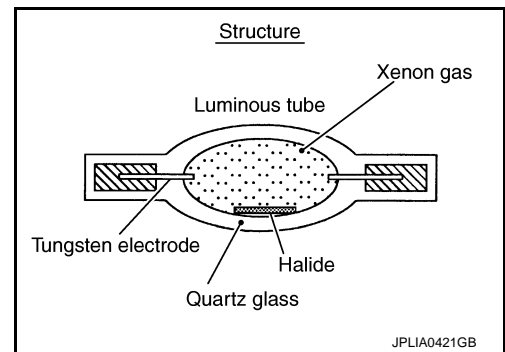

PRECAUTIONS FOR TROUBLE DIAGNOSIS

Representative malfunction examples are; "Light does not turn ON", "Light blinks", and "Brightness is inadequate." The cause often be the xenon bulb. Such malfunctions, however, are occurred occasionally by HID control unit malfunction or lamp case malfunction. Specify the malfunctioning part with diagnosis procedure.

WARNING:

- **Never touch the harness, HID control unit, the inside and metal part of lamp when turning the headlamp ON or operating the lighting switch.**
- **Never work with wet hands.**

CAUTION:

- **Never perform HID control unit circuit diagnosis with a circuit tester or an equivalent, for preventing electrical shock.**
- **Temporarily install the headlamps on the vehicle. Connect the battery to the connector (vehicle side) when checking ON/OFF status, for preventing electrical shock.**
- **Disconnect the battery negative terminal before disconnecting the lamp socket connector or the harness connector.**
- **Check for fusing of the fusible link(s), open around connector, short, disconnection if the symptom is caused by electric error.**

NOTE:

- Turn the switch OFF once before turning ON, if the ON/OFF is inoperative.
- The xenon bulb drops the amount of light, repeats blinking, and illuminates in red if the bulb reaches the service life.

Hazard Switch

INFOID:000000009653009

Inputs the hazard switch ON/OFF signal to BCM.

Headlamp Aiming Switch

INFOID:000000009653010

Adjusts height of headlamp aiming.

HID control unit

INFOID:000000009653011

Headlamp (LO) circuit is connected to HID control unit integrated in the headlamp. Headlamp (LO) circuit turns xenon headlamp ON.

For the details of HID control unit and the xenon headlamp, refer to [EXL-9, "Xenon Headlamp"](#).

Headlamp Aiming Motor

INFOID:000000009653012

The headlamp levelizer adjusts the headlamp light axis upward and downward with the headlamp aiming motor integrated in the front combination lamp.

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[XENON TYPE]

Bulb Specifications

INFOID:000000009653013

Item	Type	Wattage (W)
Front combination lamp	Headlamp (HI)	HB3 (Halogen) 60
	Headlamp (LO)	D2S (Xenon) 35
	Front turn signal lamp/ Parking lamp	S25 (Amber) 27/8
	Front side marker lamp	W5W 5
Front fog lamp	H8	35
Side turn signal lamp (integrated into the door mirror)	LED	—
Rear combination lamp	Stop lamp/ Tail lamp (side marker)	W21/5W 21/5
	Rear turn signal lamp	WY21W (Amber) 21
Back-up lamp	W16W	16
License plate lamp	W5W	5
High-mounted stop lamp	LED	—

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

EXL


SYSTEM

HEADLAMP SYSTEM

HEADLAMP SYSTEM : System Description

INFOID:000000009653014

SYSTEM DIAGRAM

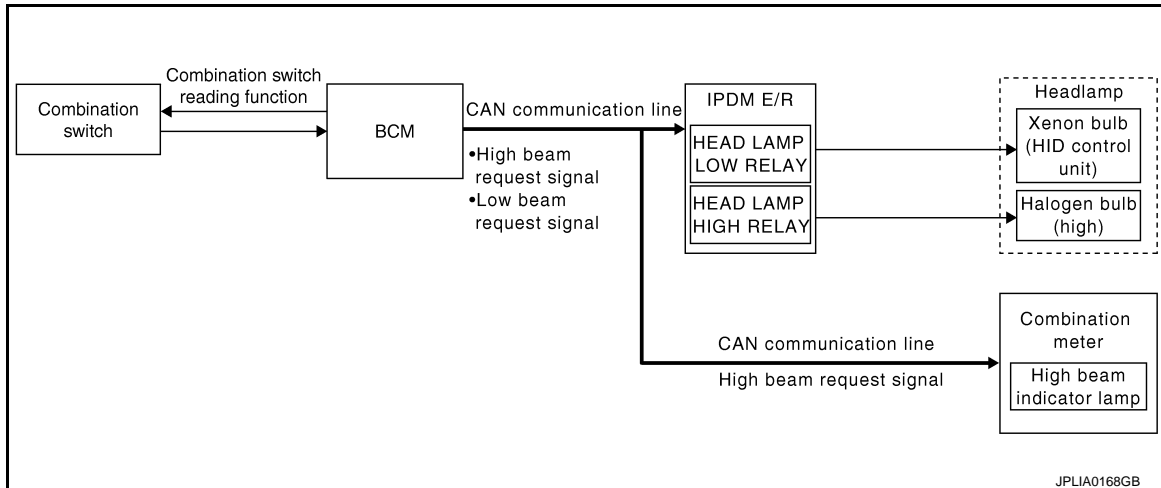

OUTLINE

Headlamp is controlled by combination switch reading function and headlamp control function of BCM, and relay control function of IPDM E/R.

HEADLAMP (LO) OPERATION

- BCM detects the combination switch condition with the combination switch reading function.
- BCM transmits the low beam request signal to IPDM E/R with CAN communication according to the headlamp (LO) ON condition.

Headlamp (LO) ON condition

- Lighting switch 2ND
- Lighting switch AUTO (auto light function ON judgment)
- Lighting switch PASS

- IPDM E/R turns the integrated headlamp low relay ON, and turns the headlamp ON according to the low beam request signal.

HEADLAMP (HI) OPERATION

- BCM transmits the high beam request signal to IPDM E/R and the combination meter with CAN communication according to the headlamp (HI) ON condition.

Headlamp (HI) ON condition

- Lighting switch HI with the lighting switch 2ND or AUTO (auto light function ON judgment)
- Lighting switch PASS

- Combination meter turns the high beam indicator lamp ON according to the high beam request signal.
- IPDM E/R turns the integrated headlamp high relay ON, and turns the headlamp ON according to the high beam request signal.


SYSTEM

< SYSTEM DESCRIPTION >

[XENON TYPE]

HEADLAMP SYSTEM : Circuit Diagram

INFOID:000000009653015

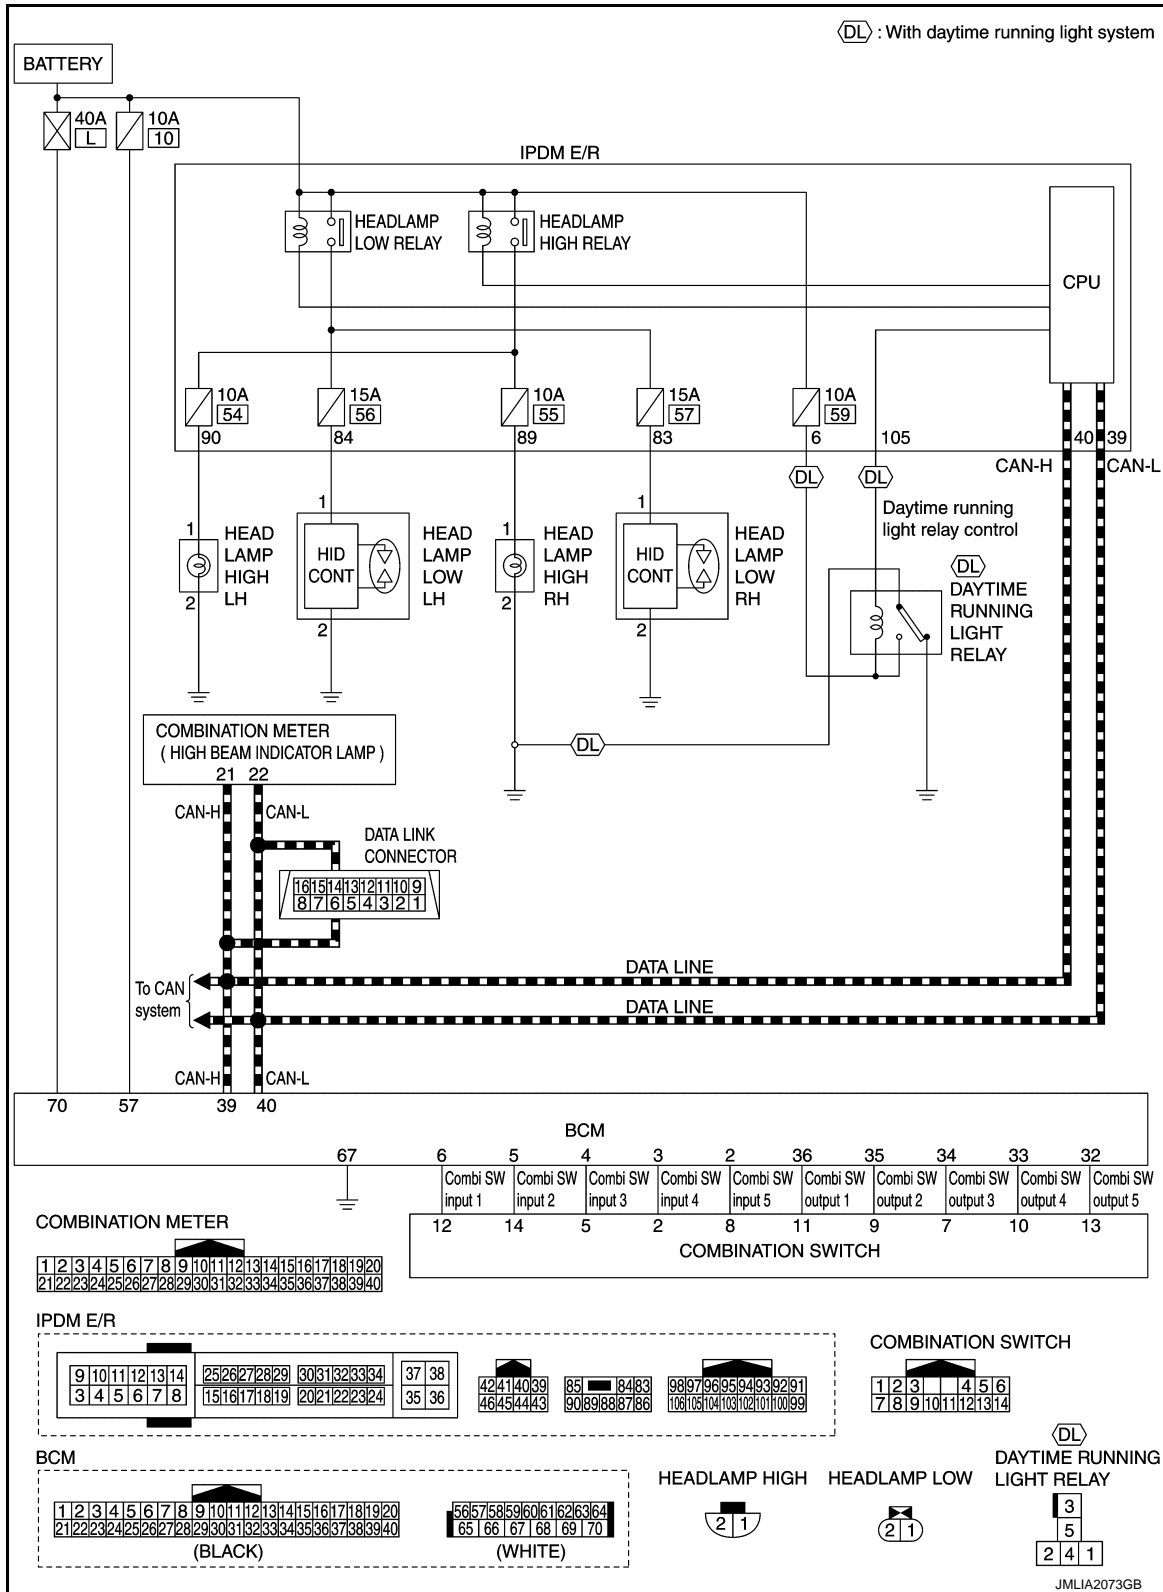

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

HEADLAMP SYSTEM : Fail-safe

INFOID:000000009653016

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With BCM

SYSTEM

< SYSTEM DESCRIPTION >

[XENON TYPE]


Control part	Fail-safe operation
Headlamp	<ul style="list-style-type: none"> • Turns ON the headlamp low relay when the ignition switch is turned ON • Turns OFF the headlamp low relay when the ignition switch is turned OFF • Headlamp high relay OFF

AUTO LIGHT SYSTEM (EXCEPT FOR CANADA)

AUTO LIGHT SYSTEM (EXCEPT FOR CANADA) : System Description

INFOID:000000009653017

SYSTEM DIAGRAM

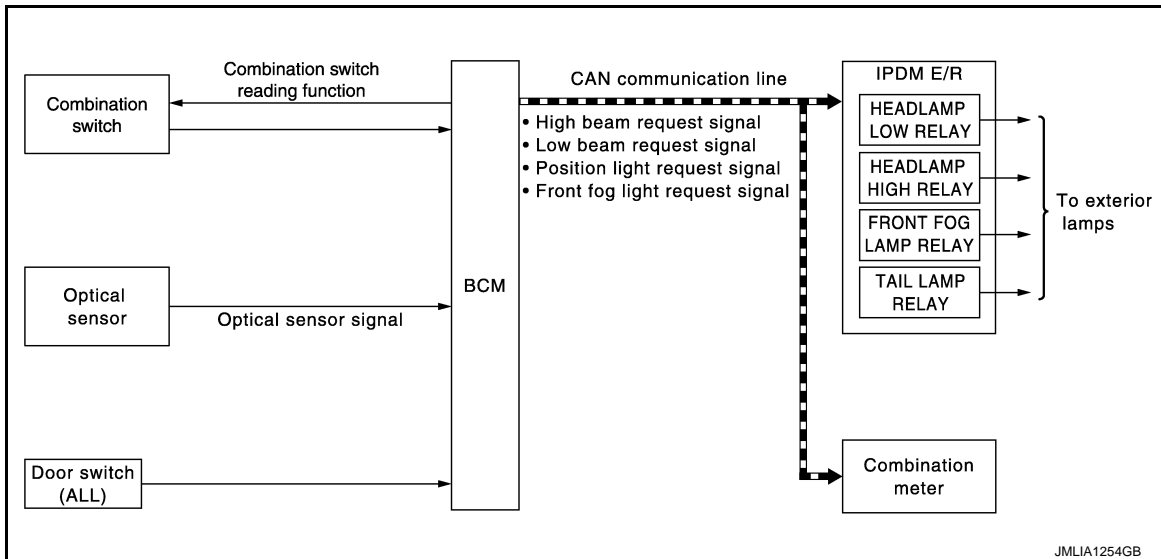

OUTLINE

- Auto light system is controlled by each function of BCM and IPDM E/R.

Control by BCM

- Combination switch reading function
- Headlamp control function
- Auto light function
- Delay timer function
- Wiper linked auto lighting function
- Auto light adjustment system

Control by IPDM E/R

- Relay control function
- Auto light system has the auto light function (with twilight lighting function), wiper linked auto lighting function and delay timer function.
- Auto light function automatically turns ON/OFF the exterior lamps* and each illumination automatically, depending on the outside brightness.
- Wiper linked auto lighting function automatically turns ON/OFF the exterior lamps* and each illumination when the light switch is in the AUTO position, according to a front wiper operation.
- When auto light system turns the exterior lamps ON with the ignition switch OFF, delay timer function turns the exterior lamps OFF, depending on the vehicle condition with the auto light function after a certain period of time.

*: Headlamp (LO/HI), parking lamp, side marker lamp, tail lamp and front fog lamp (Headlamp HI and front fog lamp depend on the combination switch condition.)

NOTE:

The settings of the twilight lighting function and the wiper linked auto lighting function can be changed with CONSULT. Refer to [EXL-32, "HEADLAMP : CONSULT Function \(BCM - HEADLAMP\) \(Xenon Type Headlamp\)"](#).

AUTO LIGHT FUNCTION (WITH TWILIGHT LIGHTING FUNCTION)

Description

- BCM detects the combination switch condition with the combination switch reading function.

SYSTEM

< SYSTEM DESCRIPTION >

[XENON TYPE]

- BCM supplies voltage to the optical sensor when the ignition switch is turned ON or ACC.
- Optical sensor converts outside brightness (lux) to voltage and transmits the optical sensor signal to BCM.
- When ignition switch is turned ON, BCM detects outside brightness from the optical sensor signal and judges ON/OFF condition of the exterior lamp and each illumination, depending on the outside brightness condition (standard or twilight).
- BCM transmits each request signal to IPDM E/R and combination meter via CAN communication, according to ON/OFF condition by the auto light function.

NOTE:

As to ON/OFF timing, the sensitivity depends on settings. The settings can be changed with CONSULT. Refer to [EXL-32, "HEADLAMP : CONSULT Function \(BCM - HEADLAMP\) \(Xenon Type Headlamp\)"](#).

WIPER LINKED AUTO LIGHTING FUNCTION

BCM turns the exterior lamp ON when detecting 4 operations of the front wiper work the light switch in AUTO position.

NOTE:

BCM turns OFF the headlamps 3 seconds after the front wiper switch is turned from HI⇒OFF.

AUTO LIGHT ADJUSTMENT SYSTEM

The auto light adjustment system automatically, dims/brightens the display and combination meter, according to brightness outside the vehicle, when lighting switch 1ST, lighting switch 2ND or lighting switch AUTO is operated. Refer to [INL-17, "AUTO LIGHT ADJUSTMENT SYSTEM : System Description"](#).

DELAY TIMER FUNCTION

BCM turns the exterior lamp OFF depending on the vehicle condition with the auto light function when the ignition switch is turned OFF.

- Turns the exterior lamp OFF 5 minutes after detecting that any door opens. (Door switch ON).
- Turns the exterior lamp OFF a certain period of time* after closing all doors. (Door switch ON→OFF).
- Turns the exterior lamp OFF with the ignition switch ACC or the light switch OFF.

*: The preset time is 45 seconds. The timer operating time can be set by CONSULT. Refer to [EXL-32, "HEADLAMP : CONSULT Function \(BCM - HEADLAMP\) \(Xenon Type Headlamp\)"](#).

NOTE:

When any position other than the light switch AUTO is set, the auto light system function switches to the exterior lamp battery saver function.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL


SYSTEM

< SYSTEM DESCRIPTION >

[XENON TYPE]

AUTO LIGHT SYSTEM (EXCEPT FOR CANADA) : Circuit Diagram

INFOID:00000009653018

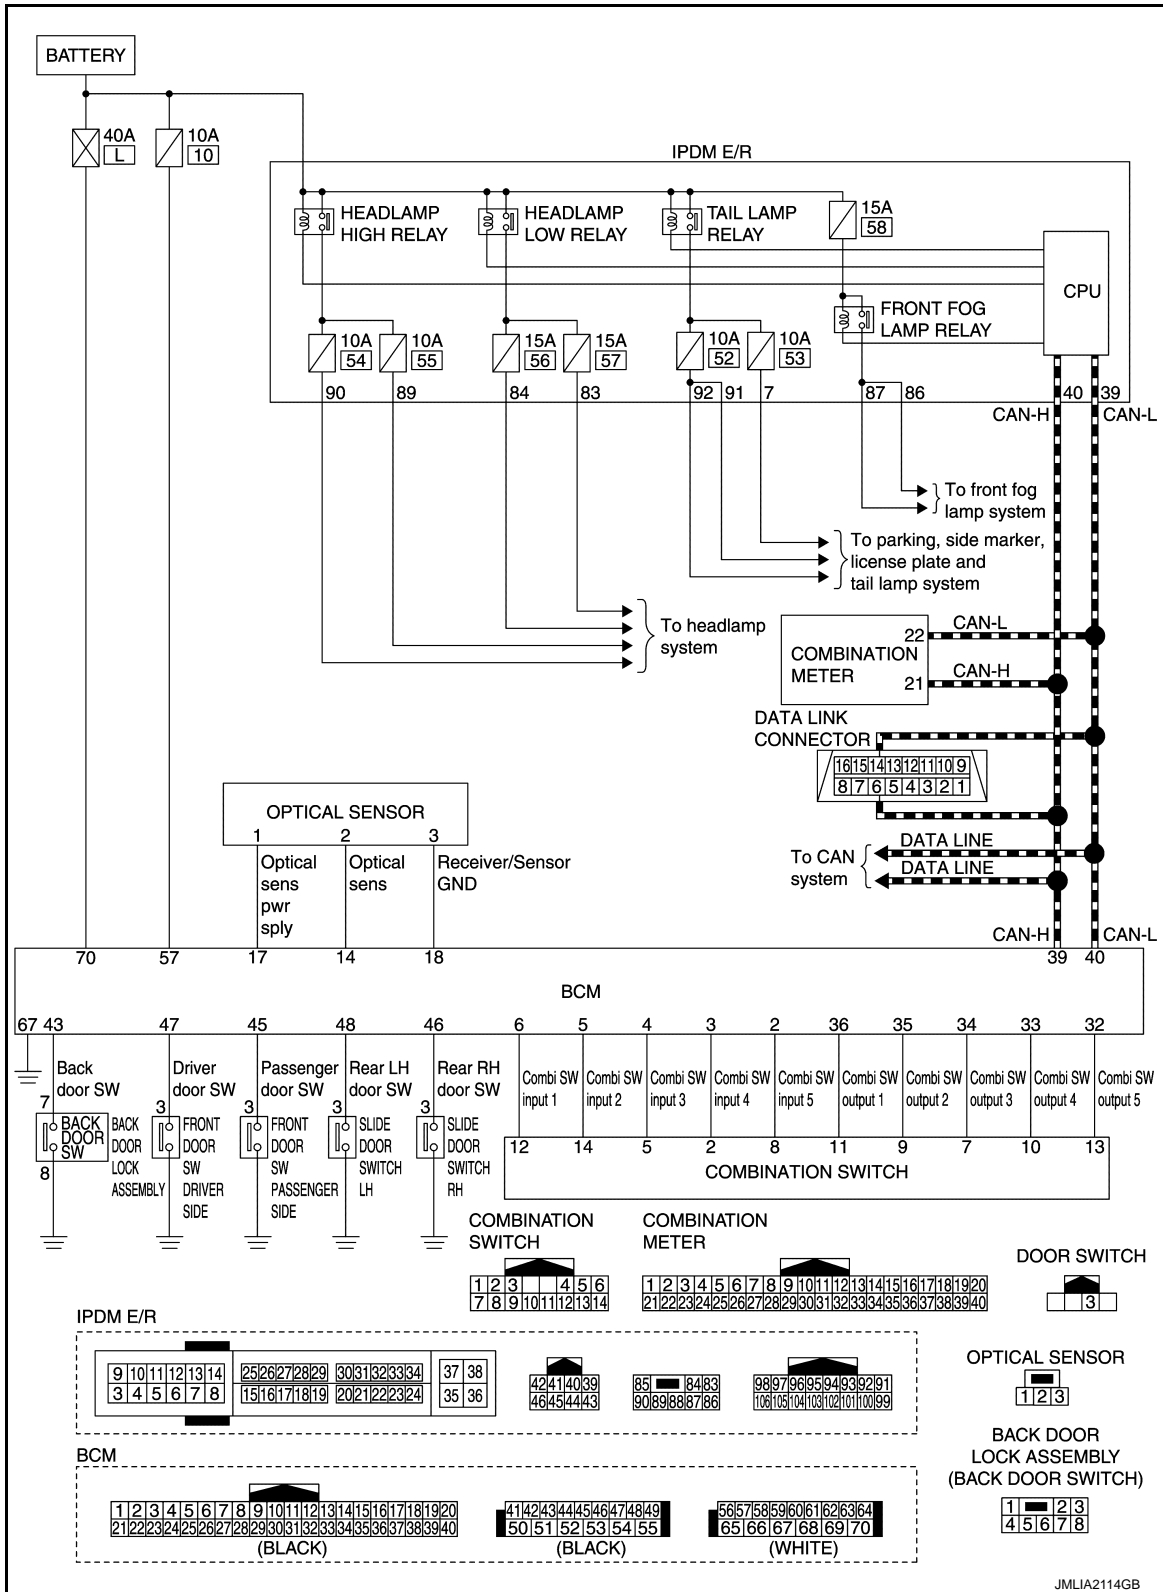


AUTO LIGHT SYSTEM (FOR CANADA)

AUTO LIGHT SYSTEM (FOR CANADA) : System Description

INFOID:000000009653019

SYSTEM DIAGRAM

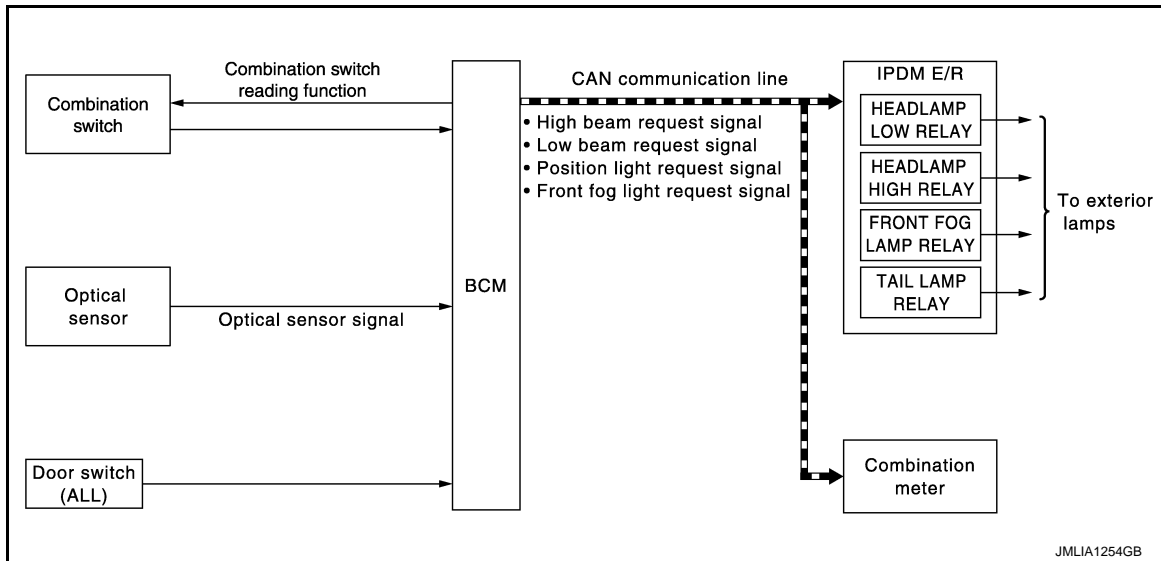

OUTLINE

- Auto light system is controlled by each function of BCM and IPDM E/R.

Control by BCM

- Combination switch reading function
- Headlamp control function
- Auto light function
- Delay timer function
- Auto light adjustment system

Control by IPDM E/R

- Relay control function
- Auto light system has the auto light function and delay timer function.
- Auto light function automatically turns ON/OFF the exterior lamps* and each illumination automatically, depending on the outside brightness.
- When auto light system turns the exterior lamps ON with the ignition switch OFF, delay timer function turns the exterior lamps OFF, depending on the vehicle condition with the auto light function after a certain period of time.

*: Headlamp (LO/HI), parking lamp, side marker lamp, tail lamp and front fog lamp (Headlamp HI and front fog lamp depend on the combination switch condition.)

AUTO LIGHT FUNCTION

- BCM detects the combination switch condition with the combination switch reading function.
- BCM supplies voltage to optical sensor when the ignition switch is turned ON or ACC.
- Optical sensor converts outside brightness (lux) to voltage and transmits the optical sensor signal to BCM.
- BCM judges outside brightness from the optical sensor signal and judges ON/OFF condition of the exterior lamp and each illumination according to the outside brightness.
- BCM transmits each request signal to IPDM E/R and combination meter via CAN communication according to ON/OFF condition by the auto light function.

NOTE:

ON/OFF timing differs based on the sensitivity from the setting. The setting can be set by CONSULT. Refer to [EXL-32, "HEADLAMP : CONSULT Function \(BCM - HEADLAMP\) \(Xenon Type Headlamp\)"](#).

AUTO LIGHT ADJUSTMENT SYSTEM

The auto light adjustment system automatically, dims/brightens the display, according to brightness outside the vehicle, when lighting switch 1ST, lighting switch 2ND or lighting switch AUTO is operated. Refer to [INL-17, "AUTO LIGHT ADJUSTMENT SYSTEM : System Description"](#).

DELAY TIMER FUNCTION

SYSTEM

< SYSTEM DESCRIPTION >

[XENON TYPE]

BCM turns the exterior lamp OFF depending on the vehicle condition with the auto light function when the ignition switch is turned OFF.

- Turns the exterior lamp OFF 5 minutes after detecting that any door opens. (Door switch ON).
- Turns the exterior lamp OFF a certain period of time* after closing all doors. (Door switch ON→OFF).
- Turns the exterior lamp OFF with the ignition switch ACC or the light switch OFF.

*: The preset time is 45 seconds. The timer operating time can be set by CONSULT. Refer to [EXL-32, "HEADLAMP : CONSULT Function \(BCM - HEADLAMP\) \(Xenon Type Headlamp\)"](#).

NOTE:

When any position other than the light switch AUTO is set, the auto light system function switches to the exterior lamp battery saver function.


SYSTEM

< SYSTEM DESCRIPTION >

[XENON TYPE]

AUTO LIGHT SYSTEM (FOR CANADA) : Circuit Diagram

INFOID:000000009653020

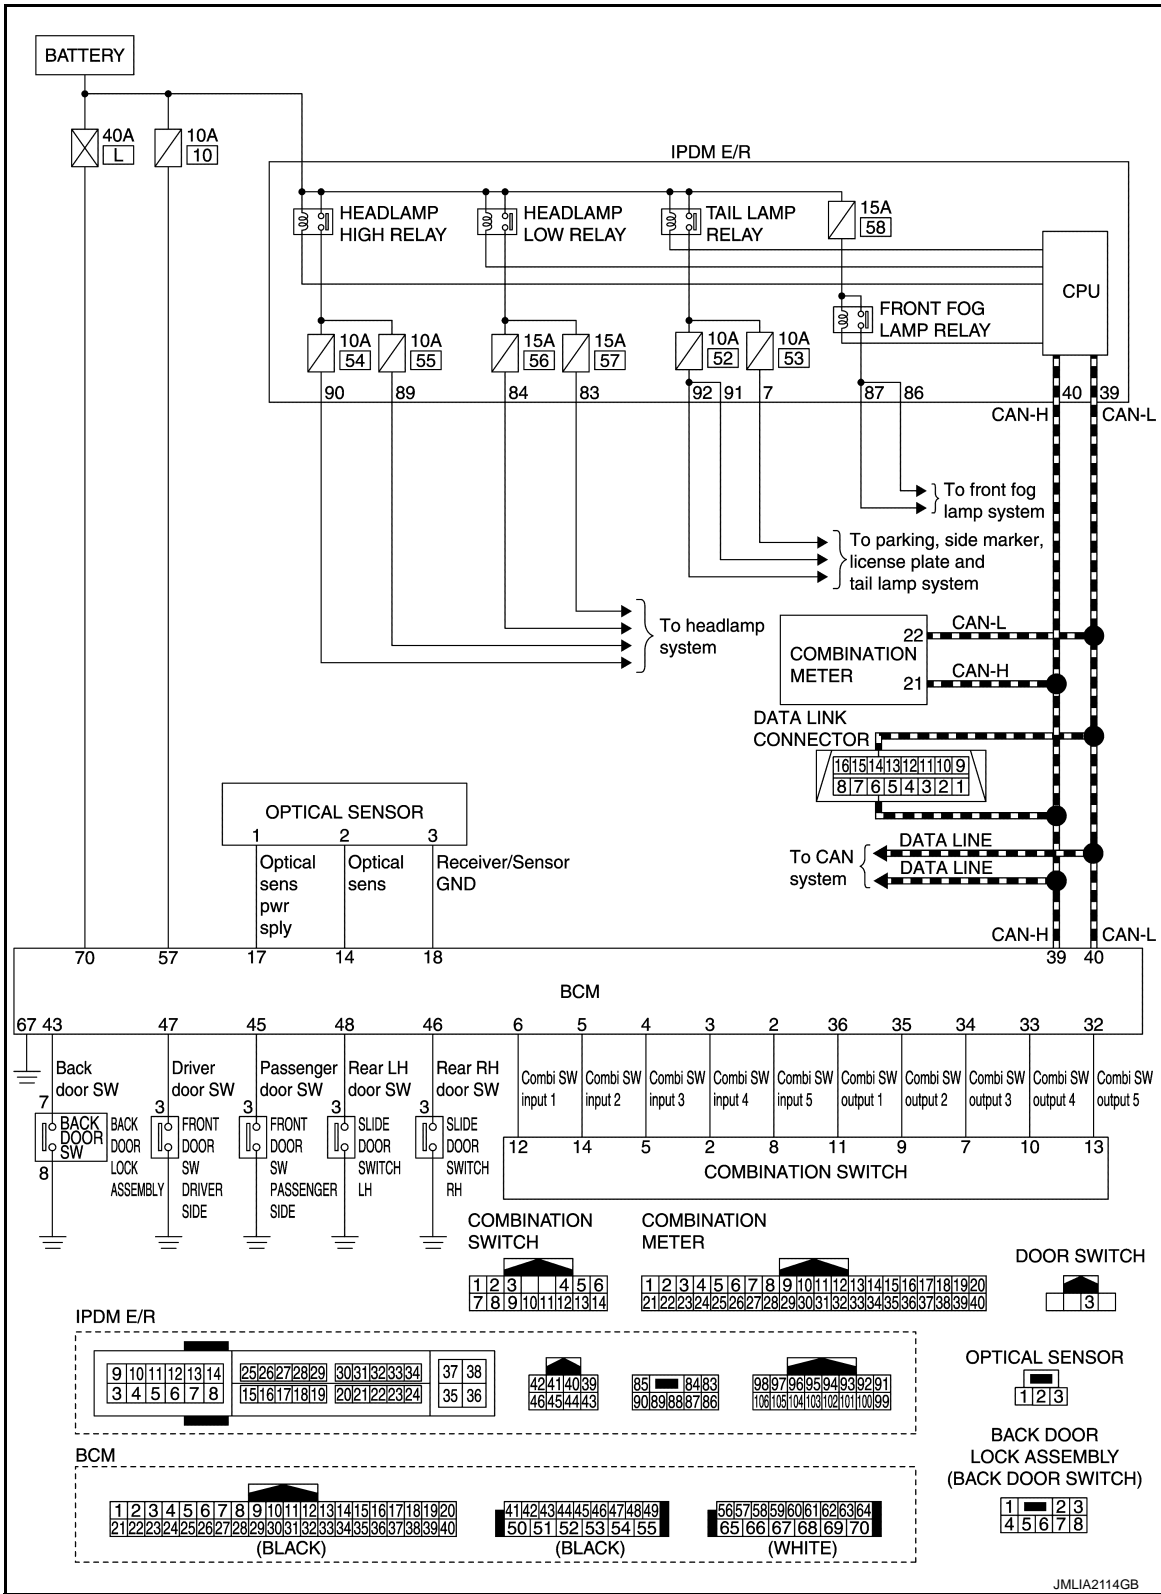


DAYTIME RUNNING LIGHT SYSTEM

DAYTIME RUNNING LIGHT SYSTEM : System Description

INFOID:000000009653021

SYSTEM DIAGRAM

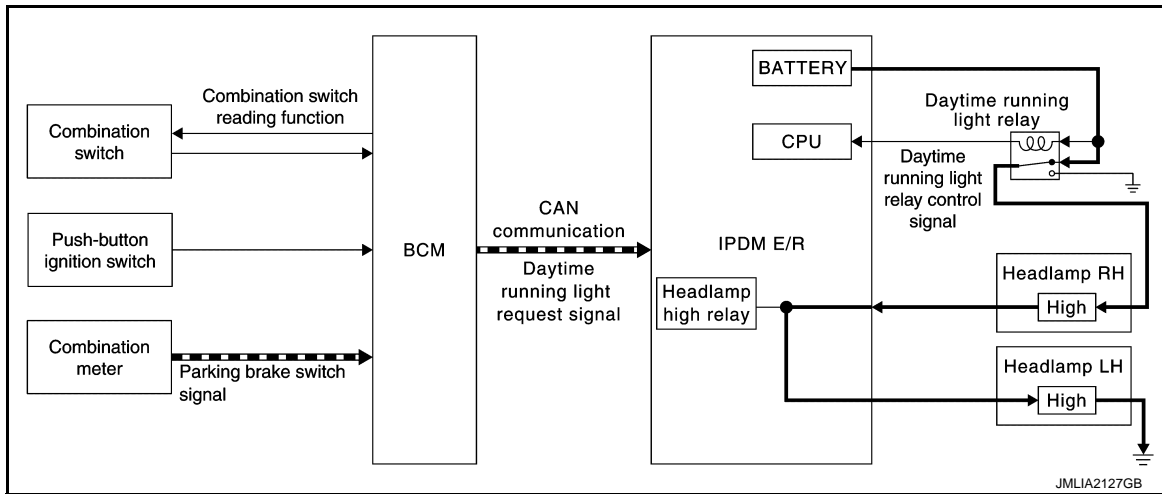

OUTLINE

- Turns the headlamp high ON (high beam at approximately half illumination) as the daytime running light.
- Daytime running light is controlled by daytime running light control function and combination switch reading function of BCM, and relay control function of IPDM E/R.

DAYTIME RUNNING LIGHT OPERATION

- BCM detects the combination switch condition by the combination switch reading function.
- BCM detects the engine condition according to push-button ignition switch
- BCM detects the parking brake condition by the parking brake switch signal received from combination meter using CAN communication.
- BCM transmits the daytime running light request signal to IPDM E/R using CAN communication according to the daytime running light ON condition.

Daytime running light ON condition

- Engine running
- Lighting switch OFF or 1ST
- Lighting switch AUTO, and the auto light function OFF judgment
- Parking brake switch OFF
- IPDM E/R controls the daytime running light relay (ground-side) to turn ON according to the daytime running light request signal.
- Power is supplied from the daytime running light relay through headlamp high RH and IPDM E/R to headlamp high LH. And high beam headlamps are illuminated (approximately half illumination) as the daytime running light.


SYSTEM

< SYSTEM DESCRIPTION >

[XENON TYPE]

DAYTIME RUNNING LIGHT SYSTEM : Circuit Diagram

INFOID:000000009653022

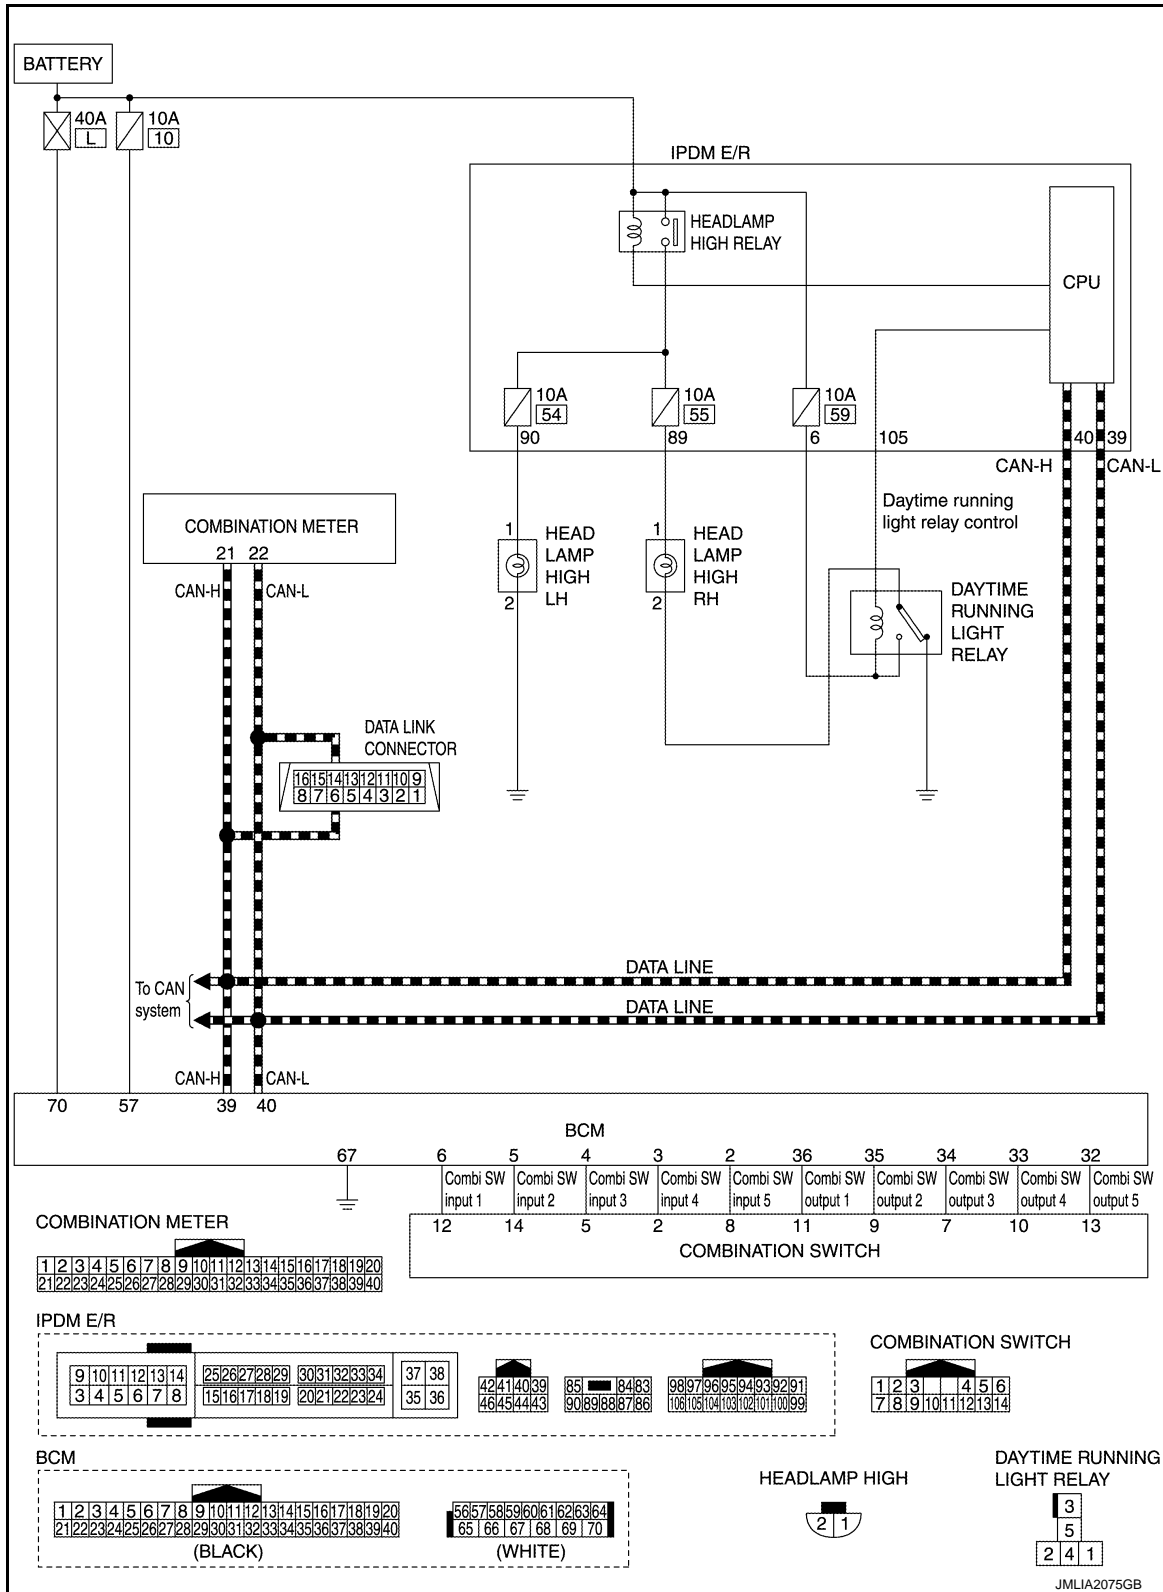

HEADLAMP AIMING CONTROL (MANUAL)

HEADLAMP AIMING CONTROL (MANUAL) : System Description

INFOID:000000009653023


The headlamp levelizer adjusts the headlamp light axis upward and downward with the aiming motor integrated in the front combination lamp.

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM : System Description

INFOID:000000009653024

SYSTEM DIAGRAM

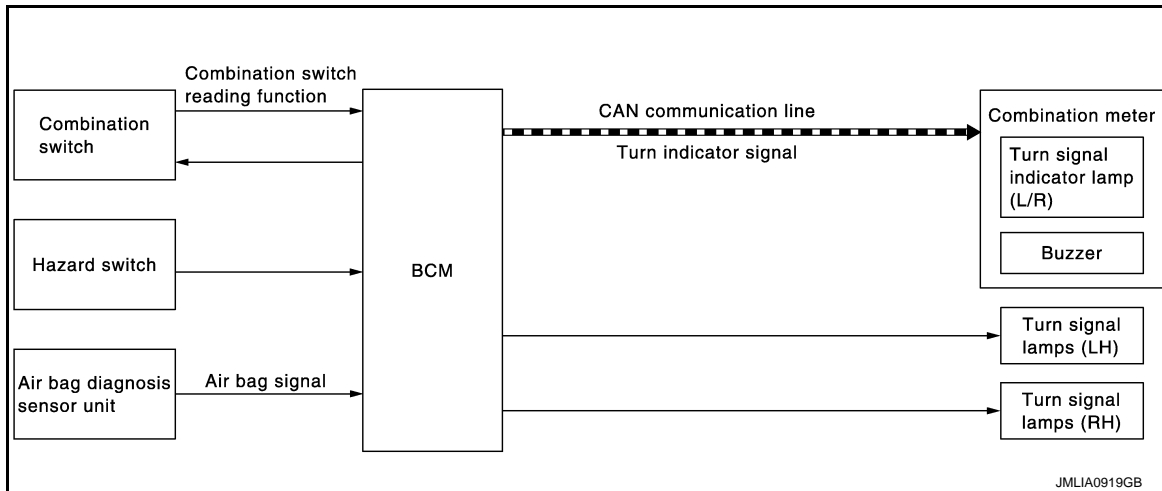

OUTLINE

Turn signal and the hazard warning lamp is controlled by combination switch reading function, flasher control function and auto hazard function of BCM.

TURN SIGNAL LAMP OPERATION

- BCM detects the combination switch condition by the combination switch reading function.
- BCM supplies voltage to the right (left) turn signal lamp circuit when the ignition switch is turned ON and the turn signal switch is in the right (left) position. BCM blinks the turn signal lamp.

HAZARD WARNING LAMP OPERATION

BCM supplies voltage to both turn signal lamp circuit when the hazard switch is turned ON. BCM blinks the hazard warning lamp.

TURN SIGNAL INDICATOR LAMP AND TURN SIGNAL SOUND OPERATION

- BCM transmits the turn indicator signal to the combination meter via CAN communication while the turn signal lamp and the hazard warning lamp operating.
- Combination meter outputs the turn signal sound with the integrated buzzer while blinking the turn signal indicator lamp according to the turn indicator signal.

AUTO HAZARD FUNCTION

- Air bag diagnosis sensor unit transmits air bag signal to BCM, when air bag diagnosis sensor unit detects strong impact to the vehicle body while ignition switch is ON.
- When air bag signal from air bag diagnosis sensor unit is detected, BCM supplies voltage to each turn signal lamp system and hazard lamp blinks.

NOTE:

Auto hazard function may not be operated depending on status of collision.

3-TIME FLASHER FUNCTION

- By a short touch of the turn signal lever, BCM blinks the turn signal lamps 3 times in the selected direction.
- Cancels the operation when short touch of the turn signal lever in the reverse direction during the 3-time flasher function operation.

HIGH FLASHER OPERATION

- BCM detects the turn signal lamp circuit status from the current value.
- BCM increases the turn signal lamp blinking speed if the bulb or harness open is detected with the turn signal lamp operating.

NOTE:

The blinking speed is normal while operating the hazard warning lamp.


SYSTEM

< SYSTEM DESCRIPTION >

[XENON TYPE]

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM : Circuit Diagram

INFOID:000000009653025

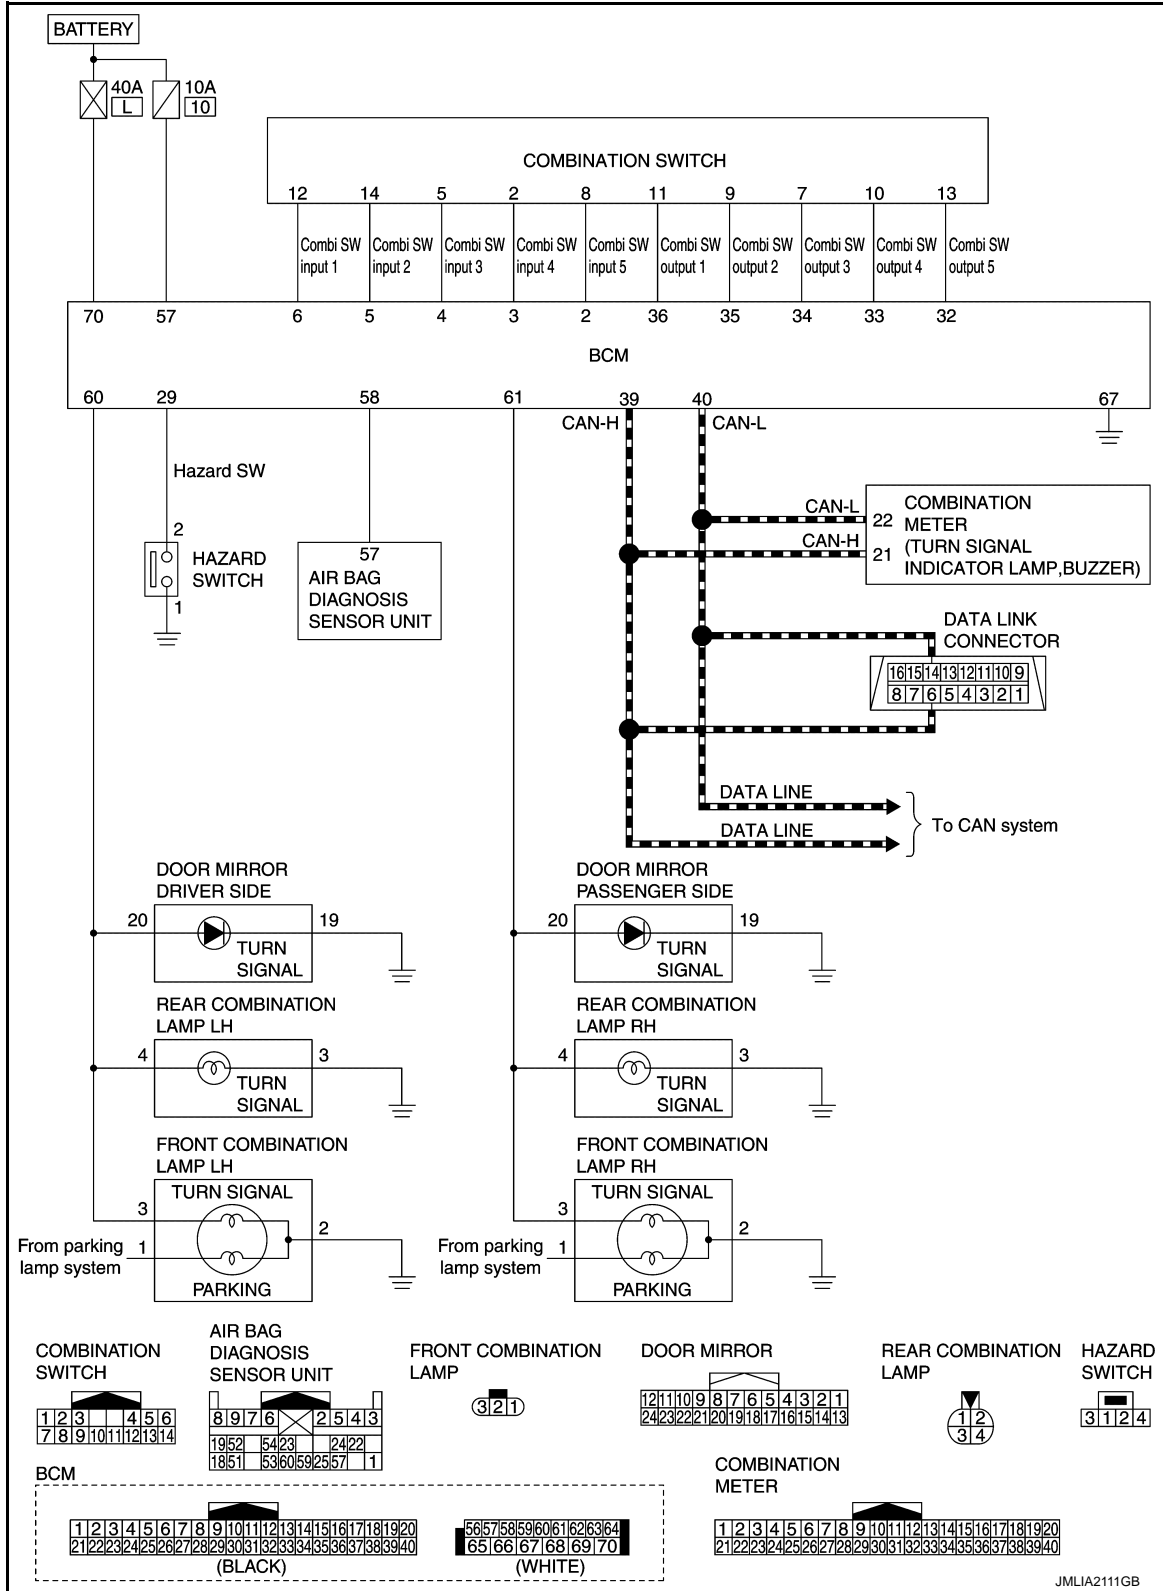


PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMP SYSTEM

PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMP SYSTEM : System De-

scription

INFOID:00000009653026

SYSTEM DIAGRAM

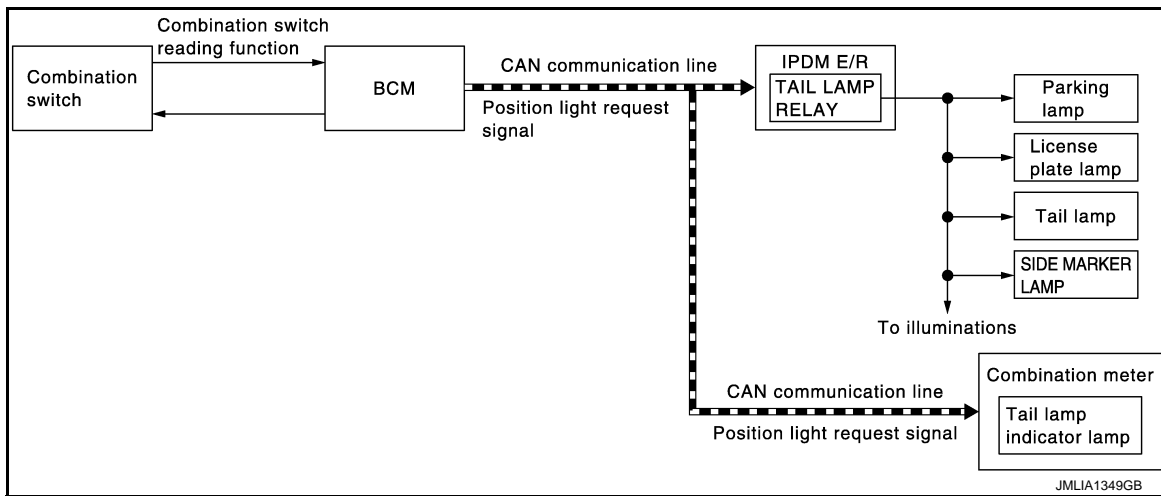

OUTLINE

Parking, license plate, side marker and tail lamps are controlled by combination switch reading function and headlamp control function of BCM, and relay control function of IPDM E/R.

PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS OPERATION

- BCM detects the combination switch condition by the combination switch reading function.
- BCM transmits the position light request signal to IPDM E/R and the combination meter via CAN communication according to the ON/OFF condition of the parking, license plate, side marker and tail lamps.


Parking, license plate, side marker and tail lamps ON condition

- Lighting switch 1ST
- Lighting switch 2ND
- Lighting switch AUTO, and the auto light function ON judgment.
- IPDM E/R turns the integrated tail lamp relay ON and turns the parking, license plate, side marker and tail lamps ON according to the position light request signal.
- Combination meter turns the tail lamp indicator lamp ON according to the position light request signal.

PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMP SYSTEM : Circuit Dia-

gram

INFOID:000000009653027

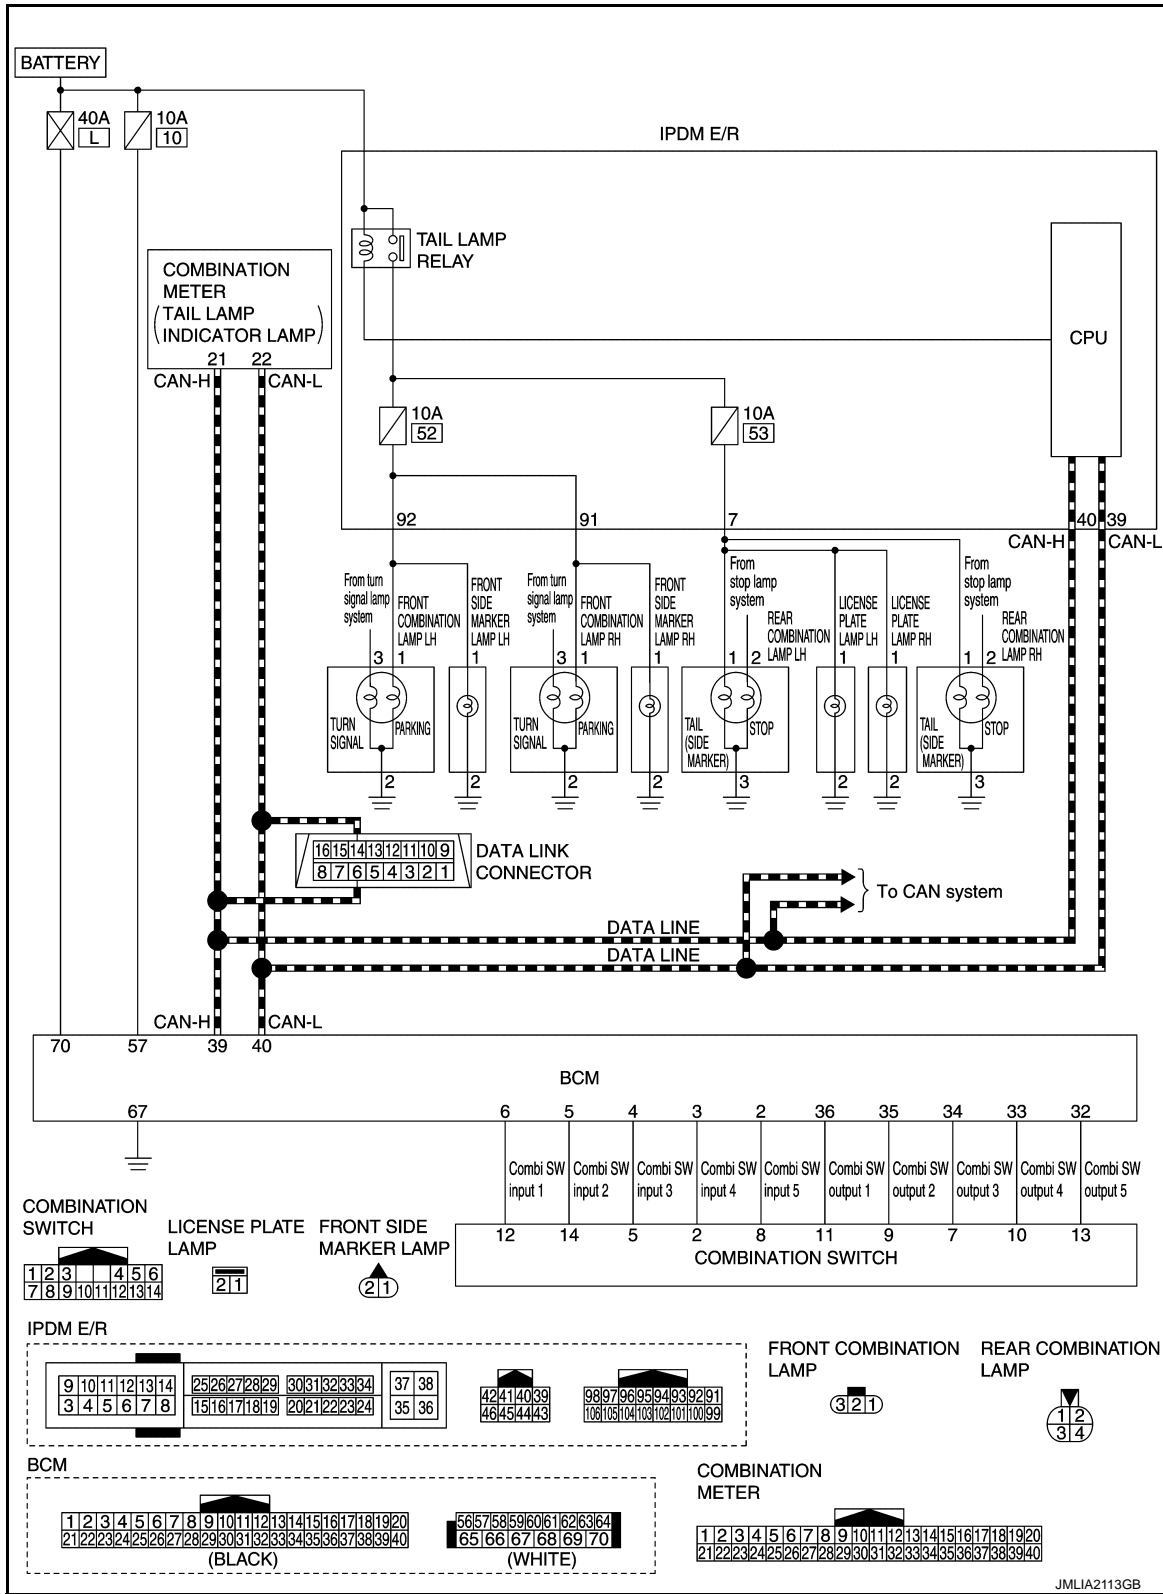

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMP SYSTEM : Fail-safe

INFOID:000000009653028

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

SYSTEM

< SYSTEM DESCRIPTION >

[XENON TYPE]

If No CAN Communication Is Available With BCM


Control part	Fail-safe operation
<ul style="list-style-type: none">• Parking lamp• License plate lamp• Illumination• Tail lamp• Side marker lamp	<ul style="list-style-type: none">• Turns ON the tail lamp relay when the ignition switch is turned ON• Turns OFF the tail lamp relay when the ignition switch is turned OFF

FRONT FOG LAMP SYSTEM

FRONT FOG LAMP SYSTEM : System Description

INFOID:000000009653029

SYSTEM DIAGRAM

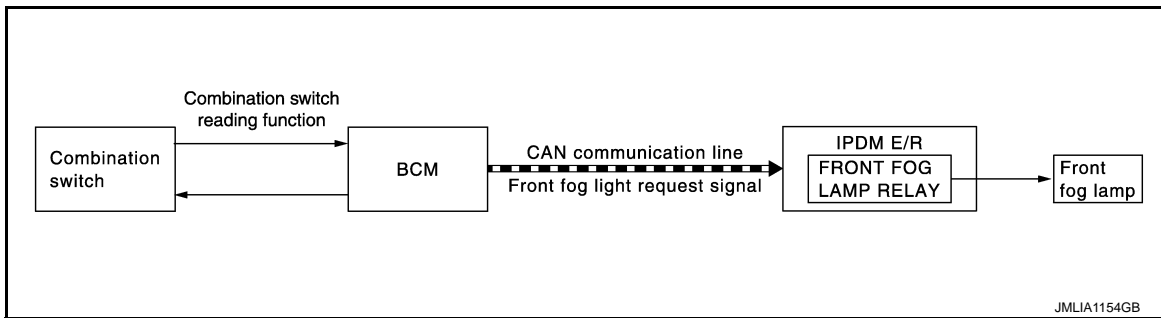

OUTLINE

Front fog lamp is controlled by combination switch reading function, front fog lamp control function of BCM, and relay control function of IPDM E/R.

FRONT FOG LAMP OPERATION

- BCM detects the combination switch condition by the combination switch reading function.
- BCM transmits the front fog light request signal to IPDM E/R via CAN communication according to the front fog lamp ON condition.

Front fog lamp ON condition

- Front fog lamp switch ON, and any of the following condition is satisfied. (except for the high beam ON)

- Lighting switch 2ND
- Lighting switch AUTO (auto light function ON judgment)

IPDM E/R turns the integrated front fog lamp relay ON, and turns the front fog lamp ON according to the front fog light request signal.


SYSTEM

< SYSTEM DESCRIPTION >

[XENON TYPE]

FRONT FOG LAMP SYSTEM : Circuit Diagram

INFOID:000000009653030

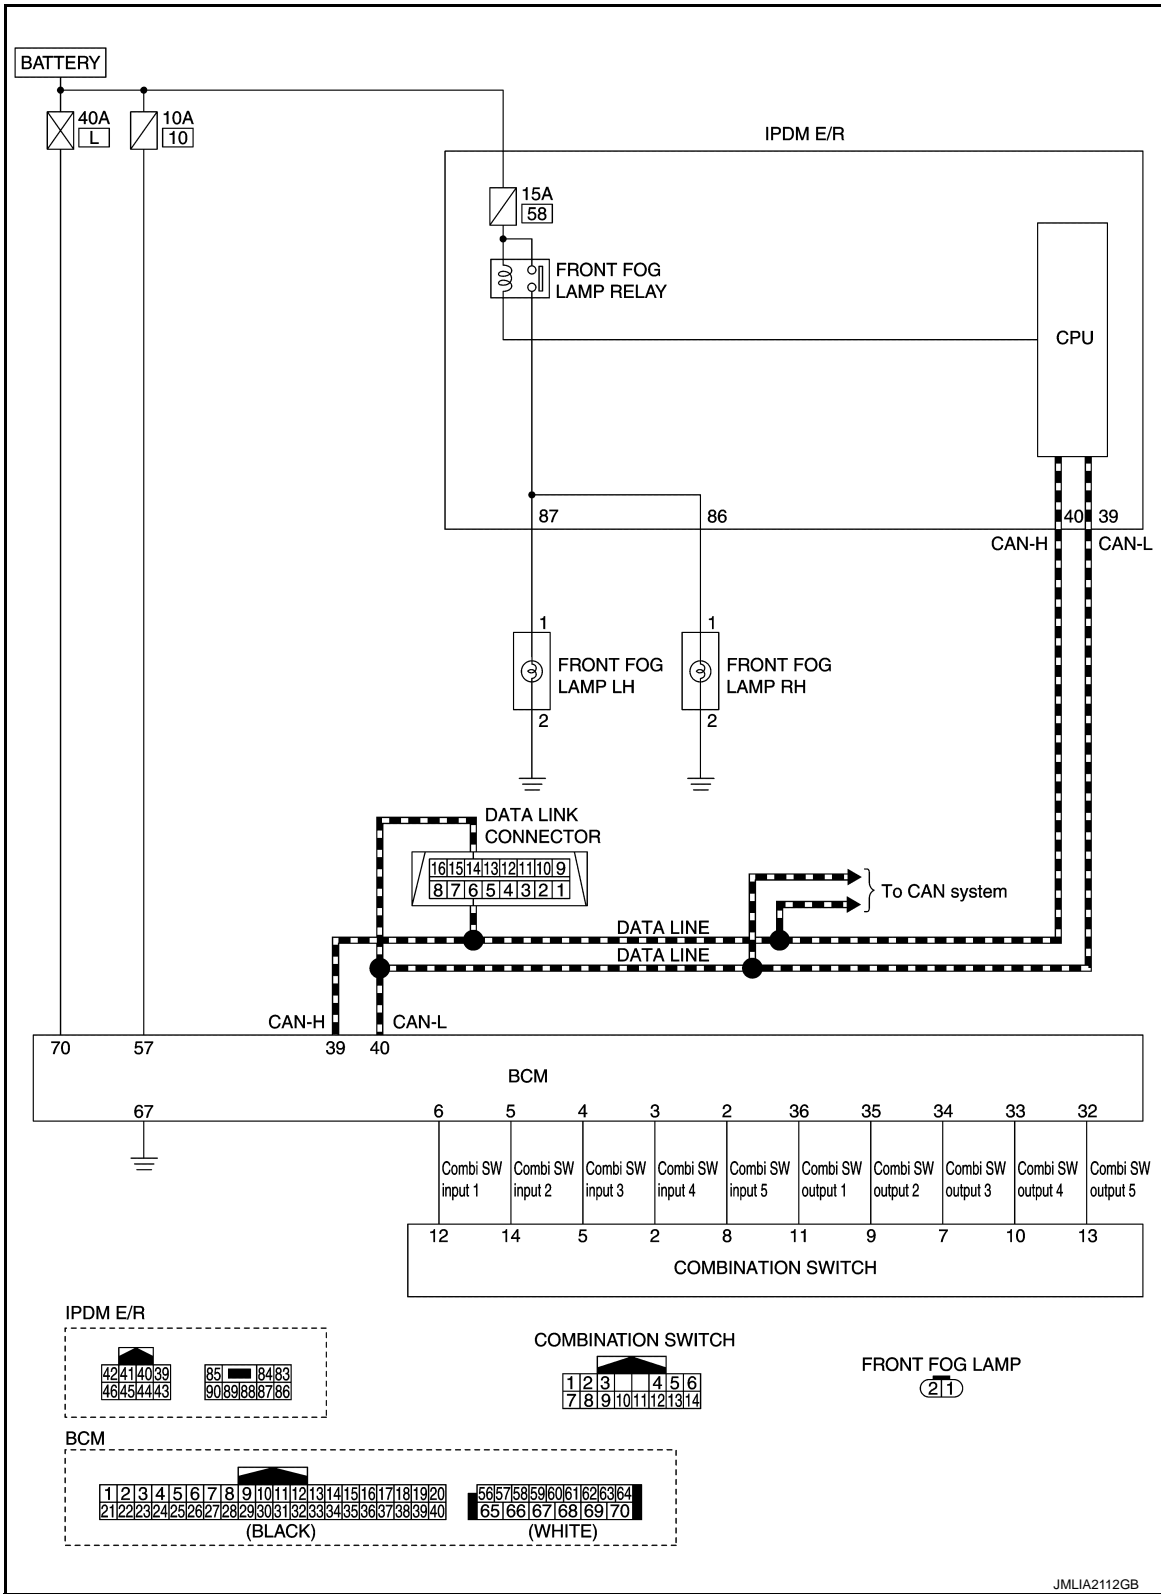

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

FRONT FOG LAMP SYSTEM : Fail-safe

INFOID:000000009653031

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With BCM

SYSTEM

< SYSTEM DESCRIPTION >

[XENON TYPE]


Control part	Fail-safe operation
Front fog lamp	Front fog lamp relay OFF

EXTERIOR LAMP BATTERY SAVER SYSTEM

EXTERIOR LAMP BATTERY SAVER SYSTEM : System Description

INFOID:000000009653032

SYSTEM DIAGRAM

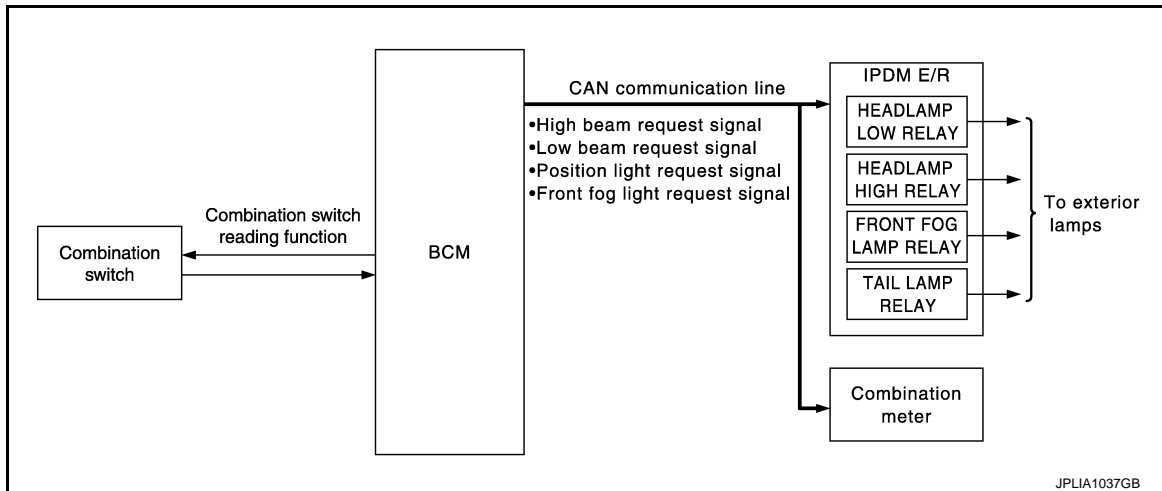

OUTLINE

- Exterior lamp battery saver system is controlled by each function of BCM and IPDM E/R.

Control by BCM

- Combination switch reading function
- Headlamp control function
- Exterior lamp battery saver function

Control by IPDM E/R

- Relay control function
 - BCM turns the exterior lamps* OFF after a period of time to prevent the battery from over-discharge when the ignition switch is turned OFF with the exterior lamps ON.
- *: Headlamp (LO/Hi), parking lamp, tail lamp, side marker lamp, license plate lamp and front fog lamp

EXTERIOR LAMP BATTERY SAVER ACTIVATION

BCM activates the timer and turns the exterior lamp OFF 45 seconds after the ignition switch is turned from ON → OFF with the exterior lamps ON.

NOTE:

- Headlamp control function turns the exterior lamps ON normally when the ignition switch is turned ACC or ON (both before and after the exterior lamp battery saver is turned OFF).
- The timer starts at the time that the lighting switch is turned from OFF → 1ST or 2ND with the exterior lamps OFF.


SYSTEM

< SYSTEM DESCRIPTION >

[XENON TYPE]

EXTERIOR LAMP BATTERY SAVER SYSTEM : Circuit Diagram

INFOID:000000009653033

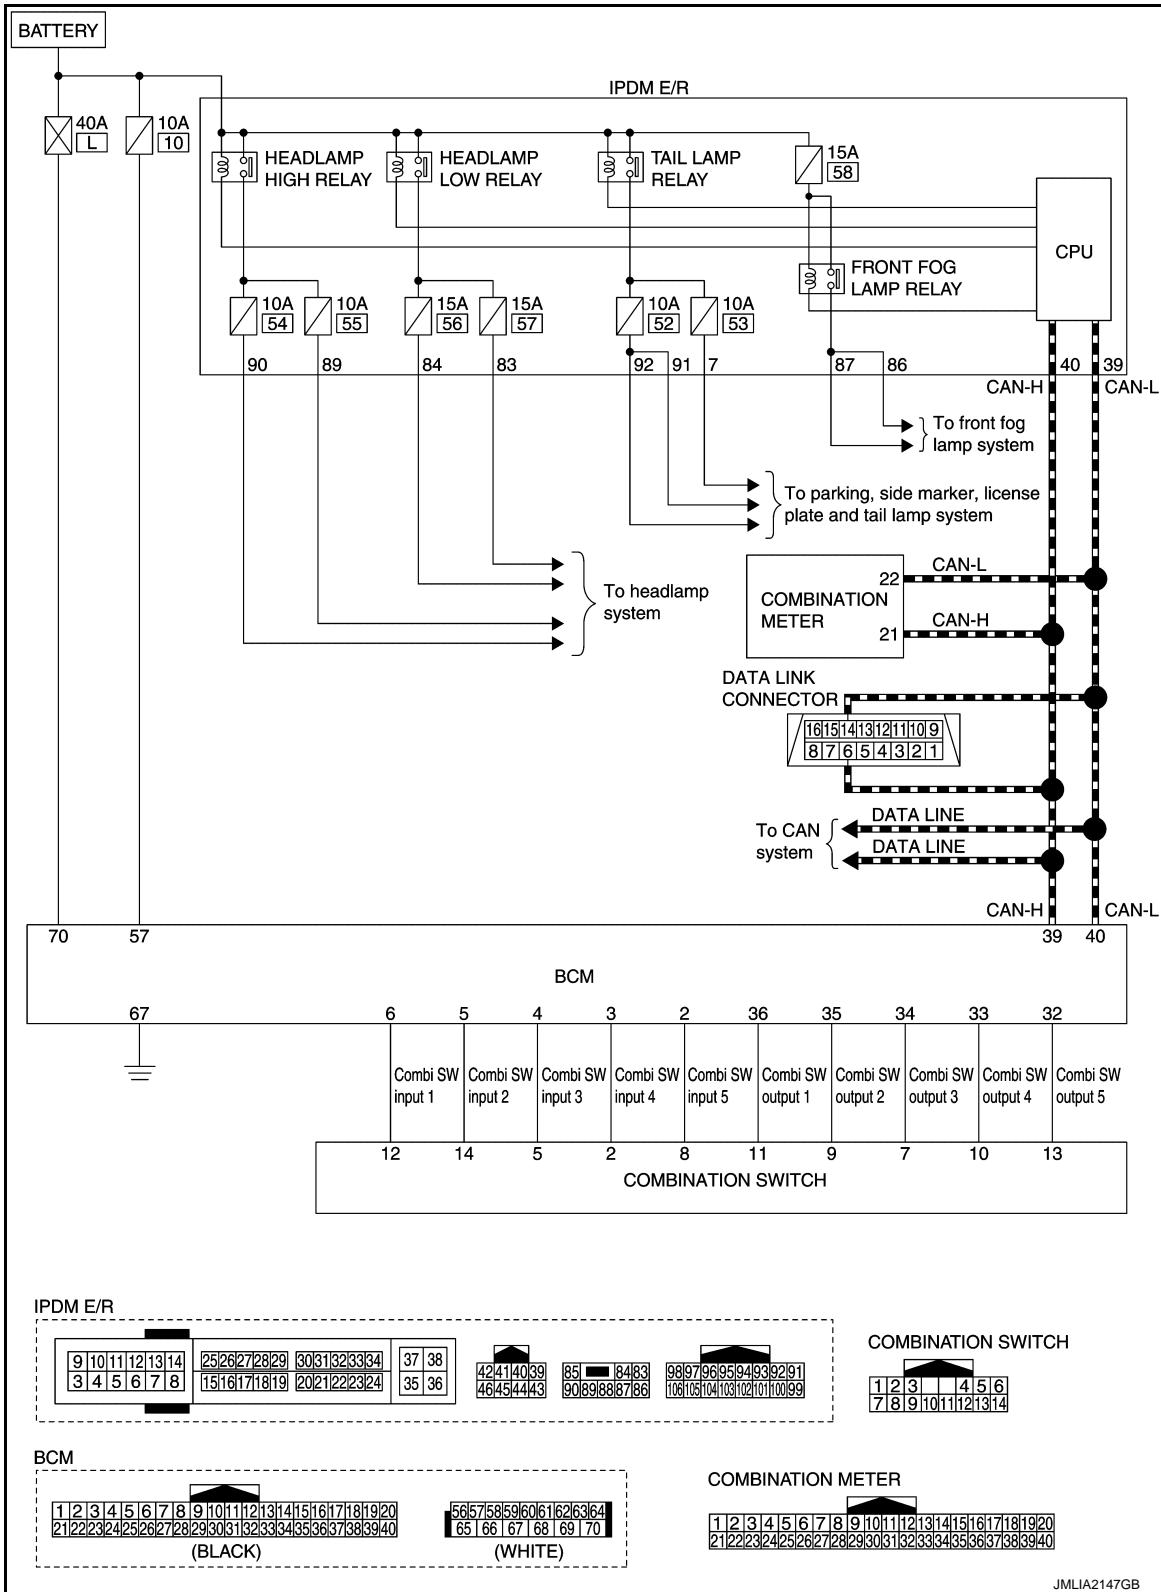

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[XENON TYPE]

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000009984869

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	<ul style="list-style-type: none"> Read and save the vehicle specification. Write the vehicle specification when replacing BCM.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

×: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp control system	INT LAMP	×	×	×
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER	×	×	×
Air conditioning control system	AIR CONDITONER		×	×*
<ul style="list-style-type: none"> Intelligent Key system Engine start system 	INTELLIGENT KEY	×	×	×
Combination switch	COMB SW		×	
Body control system	BCM	×		
NVIS	IMMU	×	×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
Back door open	TRUNK		×	
Vehicle security system	THEFT ALM	×	×	×
RAP system	RETAINED PWR		×	
Signal buffer system	SIGNAL BUFFER		×	×
TPMS	AIR PRESSURE MONITOR	×	×	×

NOTE:

*: For models with automatic air conditioning control system, this diagnosis mode is not used.

FREEZE FRAME DATA (FFD)

The BCM records the following vehicle condition at the time a particular DTC is detected, and displays on CONSULT.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[XENON TYPE]

CONSULT screen item	Indication/Unit	Description	
Vehicle Speed	km/h	Vehicle speed of the moment a particular DTC is detected	A
Odo/Trip Meter	km	Total mileage (Odometer value) of the moment a particular DTC is detected	B
Vehicle Condition	SLEEP>LOCK	Power position status of the moment a particular DTC is detected*	B
	SLEEP>OFF		C
	LOCK>ACC		D
	ACC>ON		D
	RUN>ACC		E
	CRANK>RUN		E
	RUN>URGENT		F
	ACC>OFF		F
	OFF>LOCK		G
	OFF>ACC		G
	ON>CRANK		H
	OFF>SLEEP		H
	LOCK>SLEEP		I
	LOCK		I
	OFF		J
	ACC		J
	ON		K
ENGINE RUN	K		
CRANKING	K		
IGN Counter	0 - 39	The number of times that ignition switch is turned ON after DTC is detected <ul style="list-style-type: none"> The number is 0 when a malfunction is detected now. The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The number is fixed to 39 until the self-diagnosis results are erased if it is over 39. 	EXL

NOTE:

*: Refer to the following for details of the power supply position.

- OFF (OFF, LOCK): Ignition switch OFF
- ACC: Ignition switch ACC
- IGN: Ignition switch ON with engine stopped
- RUN: Ignition switch ON with engine running
- CRANK: At engine cranking

Power supply position shifts to "OFF (LOCK)" from "OFF (OFF)", when ignition switch is in the OFF position, shift position is in the P position, and any of the following conditions are met.

- Closing door
- Opening door
- Door is locked using door request switch
- Door is locked using Intelligent Key

The power supply position shifts to "ACC" when the push-button ignition switch (push switch) is pushed at "OFF (LOCK)".

HEADLAMP

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[XENON TYPE]

HEADLAMP : CONSULT Function (BCM - HEADLAMP) (Xenon Type Headlamp)

INFOID:000000009653035

WORK SUPPORT

Service item	Setting item	Setting
CUSTOM A/LIGHT SETTING*1	MODE 1*3	Normal
	MODE 2	More sensitive setting than normal setting (Turns ON earlier than normal operation)
	MODE 3	More sensitive setting than MODE 2 (Turns ON earlier than MODE 2)
	MODE 4	Less sensitive setting than normal setting (Turns ON later than normal operation.)
BATTERY SAVER SET	On*3	With the exterior lamp battery saver function
	Off	Without the exterior lamp battery saver function
ILL DELAY SET*1	MODE 1*3	45 sec.
	MODE 2	Without the function
	MODE 3	30 sec.
	MODE 4	60 sec.
	MODE 5	90 sec.
	MODE 6	120 sec.
	MODE 7	150 sec.
	MODE 8	180 sec.
		Sets delay timer function timer operation time. (All doors closed)
AUTO LIGHT LOGIC SET*2	MODE 1*3	With twilight ON custom & with wiper INT, LO and HI
	MODE 2	With twilight ON custom & with wiper LO and HI
	MODE 3	With twilight ON custom & without
	MODE 4	Without twilight ON custom & with wiper INT, LO and HI
	MODE 5	Without twilight ON custom & with wiper LO and HI
	MODE 6	Without twilight ON custom & without

*1: For models without auto light system, this item is displayed but is not operated.

*2: For models without auto light system and all models for Canada, this item is displayed but is not operated.

*3: Factory setting

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor item [Unit]	Description
PUSH SW [On/Off]	The switch status input from push-button ignition switch
ENGINE STATE [Stop/Stall/Crank/Run]	The engine status received from ECM with CAN communication
VEH SPEED 1 [km/h]	The value of the vehicle speed received from combination meter via CAN communication

DIAGNOSIS SYSTEM (BCM)

[XENON TYPE]

< SYSTEM DESCRIPTION >

Monitor item [Unit]	Description
TURN SIGNAL R [On/Off]	Each switch status that BCM judges from the combination switch reading function
TURN SIGNAL L [On/Off]	
TAIL LAMP SW [On/Off]	
HI BEAM SW [On/Off]	
HEAD LAMP SW1 [On/Off]	
HEAD LAMP SW2 [On/Off]	
PASSING SW [On/Off]	
AUTO LIGHT SW*1 [On/Off]	
FR FOG SW*2 [On/Off]	
DOOR SW-DR [On/Off]	The switch status input from front door switch (driver side)
DOOR SW-AS [On/Off]	The switch status input from front door switch (passenger side)
DOOR SW-RR [On/Off]	The switch status input from sliding door switch RH
DOOR SW- RL [On/Off]	The switch status input from sliding door switch LH
DOOR SW-BK [On/Off]	The switch status input from back door switch
OPTICAL SENSOR [On/Off/NG]	NOTE: This item is indicated, but can not monitored
OPTI SEN (DTCT)*1 [V]	The value of outside brightness voltage input from the optical sensor
OPTI SEN (FILT)*1 [V]	The value of outside brightness voltage filtered by BCM

*1: For models without auto light system, this item is not displayed.

*2: For models without front fog lamp, this item is displayed but is not monitored.

ACTIVE TEST

Test item	Operation	Description
TAIL LAMP	On	Transmits the position light request signal to IPDM E/R via CAN communication to turn the tail lamp ON
	Off	Stops the tail lamp request signal transmission
HEAD LAMP	Hi	Transmits the high beam request signal via CAN communication to turn the headlamp (HI)
	Lo	Transmits the low beam request signal via CAN communication to turn the headlamp (LO)
	Off	Stops the high & low beam request signal transmission
FR FOG LAMP*1	On	Transmits the front fog light request signal to IPDM E/R via CAN communication to turn the front fog lamp ON
	Off	Stops the front light request signal transmission

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[XENON TYPE]

Test item	Operation	Description
DAYTIME RUNNING LIGHT*2	On	Transmits the daytime running light request signal via CAN communication to IPDM E/R
	Off	Stop the daytime running light request signal transmission
ILL DIM SIGNAL	On	<ul style="list-style-type: none"> • Transmits the dimmer signal to combination meter via CAN communication and dims combination meter*3 • Transmits the dimmer signal to AV control unit and dims display
	Off	Stops the dimmer signal transmission

*1: For models without front fog lamp, this item is displayed but is not tested.

*2: For models without daytime running light system, this item is not displayed.

*3: Except for CANADA

FLASHER

FLASHER : CONSULT Function (BCM - FLASHER) (Xenon Type Headlamp)

INFOID:000000009653036

WORK SUPPORT

Service item	Setting item	Setting	
HAZARD ANSWER BACK	Lock Only	With locking only	Sets the hazard warning lamp answer back function when the door is lock/unlock with the request switch or the key fob.
	Unlk Only	With unlocking only	
	Lock&Unlk*	With locking/unlocking	
	Off	Without the function	

*: Factory setting

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor item [Unit]	Description
REQ SW-DR [On/Off]	The switch status input from the request switch (driver side)
REQ SW-AS [On/Off]	The switch status input from the request switch (passenger side)
PUSH SW [On/Off]	The switch status input from the push-button ignition switch
TURN SIGNAL R [On/Off]	Each switch status that BCM detects from the combination switch reading function
TURN SIGNAL L [On/Off]	
HAZARD SW [On/Off]	The switch status input from the hazard switch
RKE-LOCK [On/Off]	Lock signal status received from the remote keyless entry receiver
RKE-UNLOCK [On/Off]	Unlock signal status received from the remote keyless entry receiver
RKE-PANIC [On/Off]	Panic alarm signal status received from the remote keyless entry receiver

ACTIVE TEST

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[XENON TYPE]

Test item	Operation	Description
FLASHER	RH	Outputs the voltage to turn on the right side turn signal lamps.
	LH	Outputs the voltage to turn on the left side turn signal lamps.
	Off	Stops the voltage to turn the turn signal lamps OFF.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

DIAGNOSIS SYSTEM (IPDM E/R)

Diagnosis Description

INFOID:000000009984870

AUTO ACTIVE TEST

Description

In auto active test, the IPDM E/R sends a drive signal to the following systems to check their operation.

- Oil pressure warning lamp
- Front wiper (LO, HI)
- Parking lamp
- License plate lamp
- Tail lamp
- Side marker lamp
- Front fog lamp
- Headlamp (LO, HI)
- A/C compressor (magnet clutch)
- Cooling fan

Operation Procedure

NOTE:

Never perform auto active test in the following condition.

- Passenger door is open.
 - CONSULT is connected.
1. Close the hood and lift the wiper arms from the windshield. (Prevent windshield damage due to wiper operation)

NOTE:

When auto active test is performed with hood opened, sprinkle water on windshield beforehand.

2. Turn the ignition switch OFF.
3. Turn the ignition switch ON, and within 20 seconds, press the front door switch (driver side) 10 times. Then turn the ignition switch OFF.
4. Turn the ignition switch ON within 10 seconds. After that the horn sounds once and the auto active test starts.

NOTE:

Engine starts when ignition switch is turned ON while brake pedal is depressed.

5. The oil pressure warning lamp starts blinking when the auto active test starts.
6. After a series of the following operations is repeated 3 times, auto active test is completed.

NOTE:

- When auto active test has to be cancelled halfway through test, turn the ignition switch OFF.
- When auto active test is not activated, door switch may be the cause. Check door switch. Refer to [DLK-241](#), "[Component Function Check](#)".

Inspection in Auto Active Test

When auto active test is actuated, the following 6 steps are repeated 3 times.


Operation sequence	Inspection location	Operation
1	Oil pressure warning lamp	Blinks continuously during operation of auto active test
2	Front wiper motor	LO for 5 seconds → HI for 5 seconds
3	<ul style="list-style-type: none"> • Parking lamp • License plate lamp • Tail lamp • Side marker lamp • Front fog lamp 	10 seconds
4	Headlamp	<ul style="list-style-type: none"> • LO 10 seconds • HI ON ⇔ OFF 5 times
5	A/C compressor (magnet clutch)	ON ⇔ OFF 5 times
6	Cooling fan	LO for 5 seconds → MID for 3 seconds → HI for 2 seconds

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[XENON TYPE]

Concept of auto active test

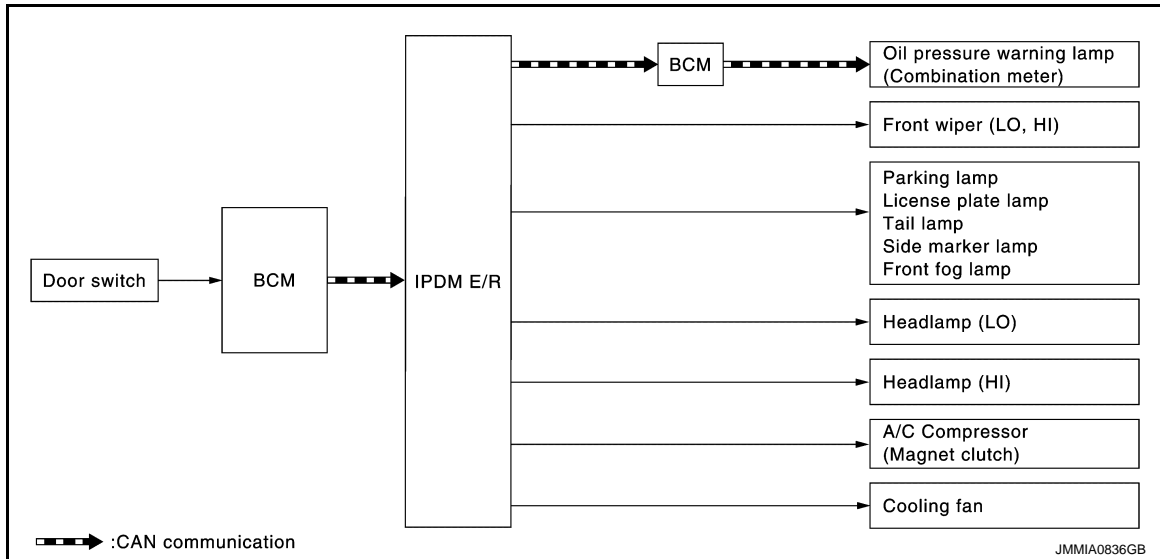

- IPDM E/R starts the auto active test with the door switch signals transmitted by BCM via CAN communication. Therefore, the CAN communication line between IPDM E/R and BCM is considered normal if the auto active test starts successfully.
- The auto active test facilitates troubleshooting if any systems controlled by IPDM E/R cannot be operated.

Diagnosis chart in auto active test

Symptom	Inspection contents	Possible cause
Any of the following components do not operate • Parking lamp • License plate lamp • Tail lamp • Side marker lamp • Front fog lamp • Headlamp (HI, LO) • Front wiper motor	Perform auto active test. Does the applicable system operate?	YES BCM signal input circuit
		NO • Lamp or motor • Lamp or motor ground circuit • Harness or connector between IPDM E/R and applicable system • IPDM E/R
A/C compressor does not operate	Perform auto active test. Does the magnet clutch operate?	YES • Combination meter signal input circuit • CAN communication signal between Combination meter and ECM • CAN communication signal between ECM and IPDM E/R
		NO • Magnet clutch • Harness or connector between IPDM E/R and magnet clutch • IPDM E/R
Oil pressure warning lamp does not operate	Perform auto active test. Does the oil pressure warning lamp blink?	YES • Harness or connector between IPDM E/R and oil pressure switch • Oil pressure switch • IPDM E/R
		NO • CAN communication signal between IPDM E/R and BCM • CAN communication signal between BCM and Combination meter • Combination meter

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[XENON TYPE]

Symptom	Inspection contents	Possible cause	
Cooling fan does not operate	Perform auto active test. Does the cooling fan operate?	YES	<ul style="list-style-type: none"> • ECM signal input circuit • CAN communication signal between ECM and IPDM E/R
		NO	<ul style="list-style-type: none"> • Cooling fan • Harness or connector between cooling fan and cooling fan relay • Harness or connector between IPDM E/R and cooling fan relay • Cooling fan relay • IPDM E/R

CONSULT Function (IPDM E/R)

INFOID:000000009984871

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with IPDM E/R.

Diagnosis mode	Description
Ecu Identification	Allows confirmation of IPDM E/R part number.
Self Diagnostic Result	Displays the diagnosis results judged by IPDM E/R.
Data Monitor	Displays the real-time input/output data from IPDM E/R input/output data.
Active Test	IPDM E/R can provide a drive signal to electronic components to check their operations.
CAN Diag Support Monitor	The results of transmit/receive diagnosis of CAN communication can be read.

SELF DIAGNOSTIC RESULT

Refer to [PCS-24. "DTC Index"](#).

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item [Unit]	MAIN SIG- NALS	Description
MOTOR FAN REQ [1/2/3/4]	×	Displays the value of the cooling fan speed signal received from ECM via CAN communication.
AC COMP REQ [Off/On]	×	Displays the status of the A/C compressor request signal received from ECM via CAN communication.
TAIL&CLR REQ [Off/On]	×	Displays the status of the position light request signal received from BCM via CAN communication.
HL LO REQ [Off/On]	×	Displays the status of the low beam request signal received from BCM via CAN communication.
HL HI REQ [Off/On]	×	Displays the status of the high beam request signal received from BCM via CAN communication.
FR FOG REQ [Off/On]	×	Displays the status of the front fog light request signal received from BCM via CAN communication.
FR WIP REQ [Stop/1LOW/Low/Hi]	×	Displays the status of the front wiper request signal received from BCM via CAN communication.
WIP AUTO STOP [STOP P/ACT P]	×	Displays the status of the front wiper stop position signal judged by IPDM E/R.
WIP PROT [Off/BLOCK]	×	Displays the status of the front wiper fail-safe operation judged by IPDM E/R.
IGN RLY1 -REQ [Off/On]		Displays the status of the ignition switch ON signal received from BCM via CAN communication.
IGN RLY [Off/On]	×	Displays the status of the ignition relay judged by IPDM E/R.

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[XENON TYPE]

Monitor Item [Unit]	MAIN SIG- NALS	Description	
PUSH SW [Off/On]		Displays the status of the push-button ignition switch judged by IPDM E/R.	A
INTER/NP SW [Off/On]		Displays the status of the shift position judged by IPDM E/R.	B
ST RLY CONT [Off/On]		Displays the status of the starter relay status signal received from BCM via CAN communication.	C
IHBT RLY -REQ [Off/On]		Displays the status of the starter control relay signal received from BCM via CAN communication.	D
ST/INHI RLY [Off/ ST /INHI/UNKWN]		Displays the status of the starter relay and starter control relay judged by IPDM E/R.	D
DETTENT SW [Off/On]		Displays the status of the CVT shift selector (detention switch) judged by IPDM E/R.	E
S/L RLY -REQ [Off/On]		NOTE: The item is indicated, but not monitored.	F
S/L STATE [LOCK/UNLK/UNKWN]		NOTE: The item is indicated, but not monitored.	F
DTRL REQ [Off/On]		Displays the status of the daytime running light request signal received from BCM via CAN communication. NOTE: This item is monitored only on the vehicle with daytime running light system.	G
OIL P SW [Open/Close]		Displays the status of the oil pressure switch judged by IPDM E/R.	H
HOOD SW [Off/On]		NOTE: The item is indicated, but not monitored.	I
HL WASHER REQ [Off/On]		NOTE: The item is indicated, but not monitored.	I
THFT HRN REQ [Off/On]		Displays the status of the theft warning horn request signal received from BCM via CAN communication.	J
HORN CHIRP [Off/On]		Displays the status of the horn reminder signal received from BCM via CAN communication.	J
CRNRNG LMP REQ [Off/On]		NOTE: The item is indicated, but not monitored.	K

ACTIVE TEST

Test item

EXL

Test item	Operation	Description	
CORNERING LAMP	Off	NOTE: The item is indicated, but cannot be tested.	M
	LH		N
	RH		N
HORN	On	Operates horn relay for 20 ms.	O
FRONT WIPER	Off	OFF	O
	Lo	Operates the front wiper relay.	P
	Hi	Operates the front wiper relay and front wiper high relay.	P
MOTOR FAN	1	OFF	P
	2	Operates the cooling fan relay-1.	P
	3	Operates the cooling fan relay-2.	P
	4	Operates the cooling fan relay-2 and cooling fan relay-3.	P
HEAD LAMP WASHER	On	NOTE: The item is indicated, but cannot be tested.	P

DIAGNOSIS SYSTEM (IPDM E/R)

[XENON TYPE]

< SYSTEM DESCRIPTION >

Test item	Operation	Description
EXTERNAL LAMPS	Off	OFF
	TAIL	Operates the tail lamp relay and the daytime running light relay.
	Lo	Operates the headlamp low relay.
	Hi	Operates the headlamp low relay and ON/OFF the headlamp high relay at 1 second intervals.
	Fog	Operates the front fog lamp relay.

ECU DIAGNOSIS INFORMATION

BCM, IPDM E/R

List of ECU Reference

INFOID:000000009653039

ECU	Reference
BCM	BCS-40, "Reference Value"
	BCS-62, "Fail-safe"
	BCS-62, "DTC Inspection Priority Chart"
	BCS-63, "DTC Index"
IPDM E/R	PCS-16, "Reference Value"
	PCS-23, "Fail-safe"
	PCS-24, "DTC Index"

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

EXL

EXTERIOR LIGHTING SYSTEM

< WIRING DIAGRAM >


[XENON TYPE]

WIRING DIAGRAM

EXTERIOR LIGHTING SYSTEM

Wiring Diagram

INFOID:000000009653040

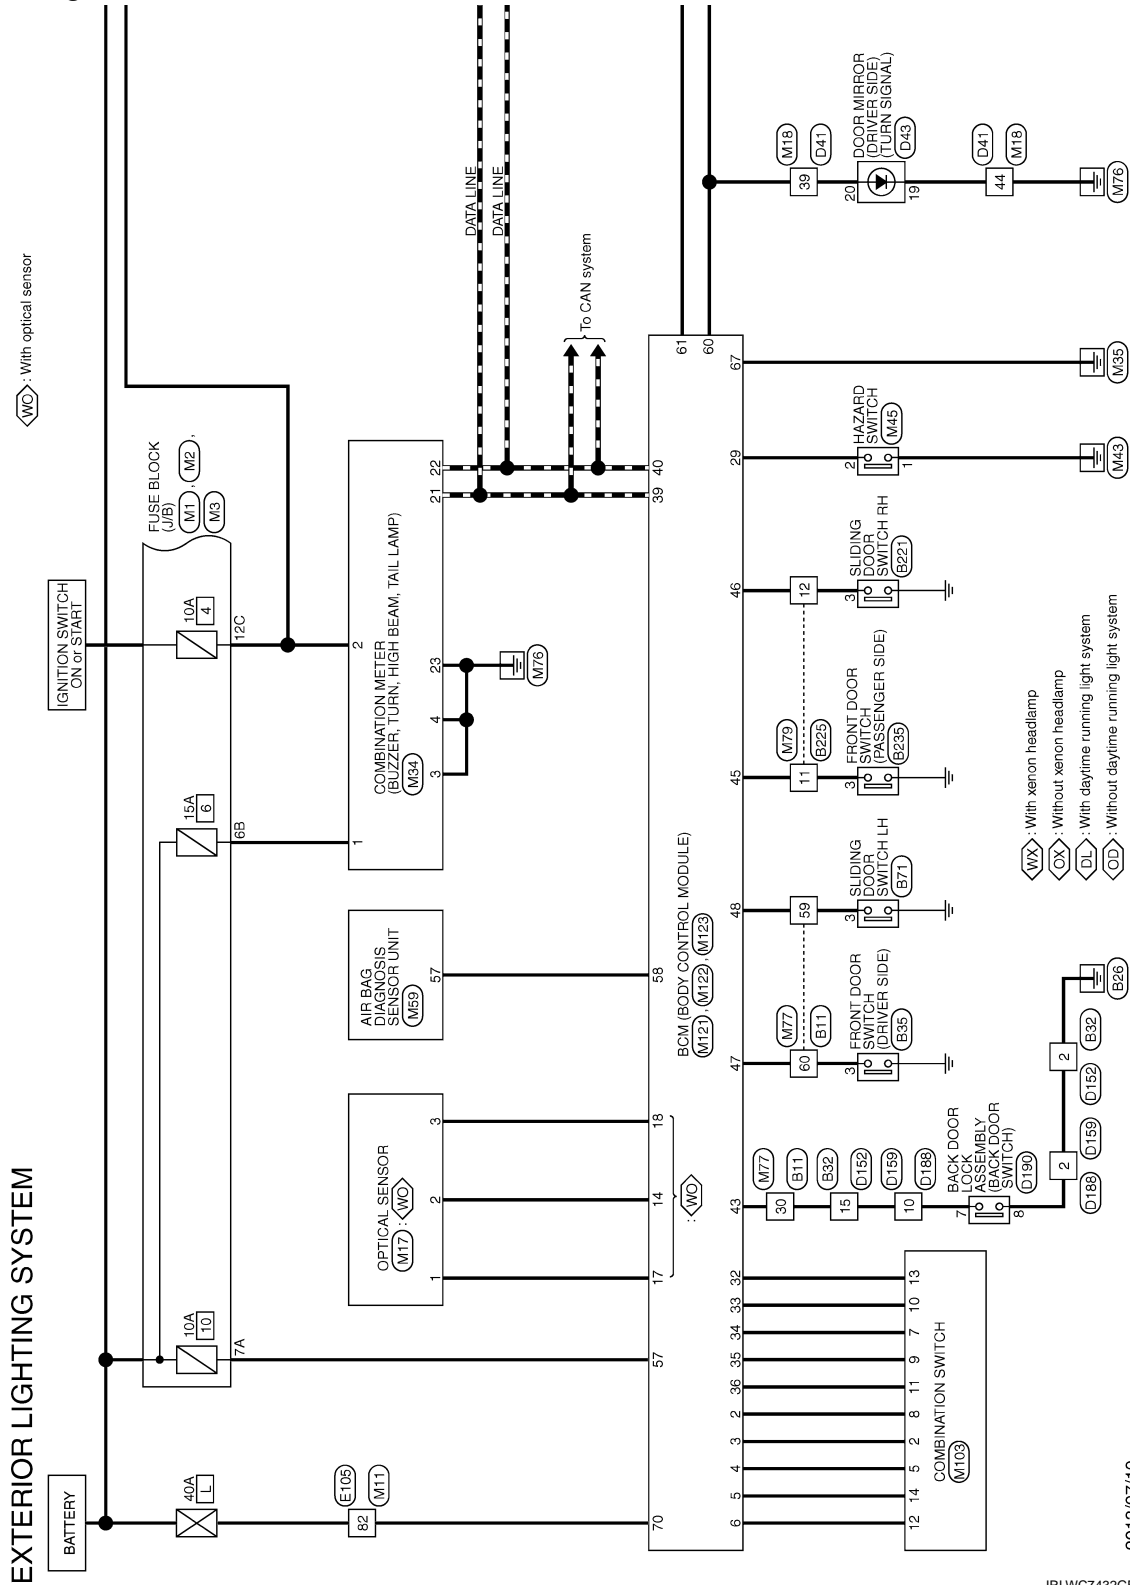


2013/07/10

JRLWC7432GB

EXTERIOR LIGHTING SYSTEM

< WIRING DIAGRAM >

[XENON TYPE]

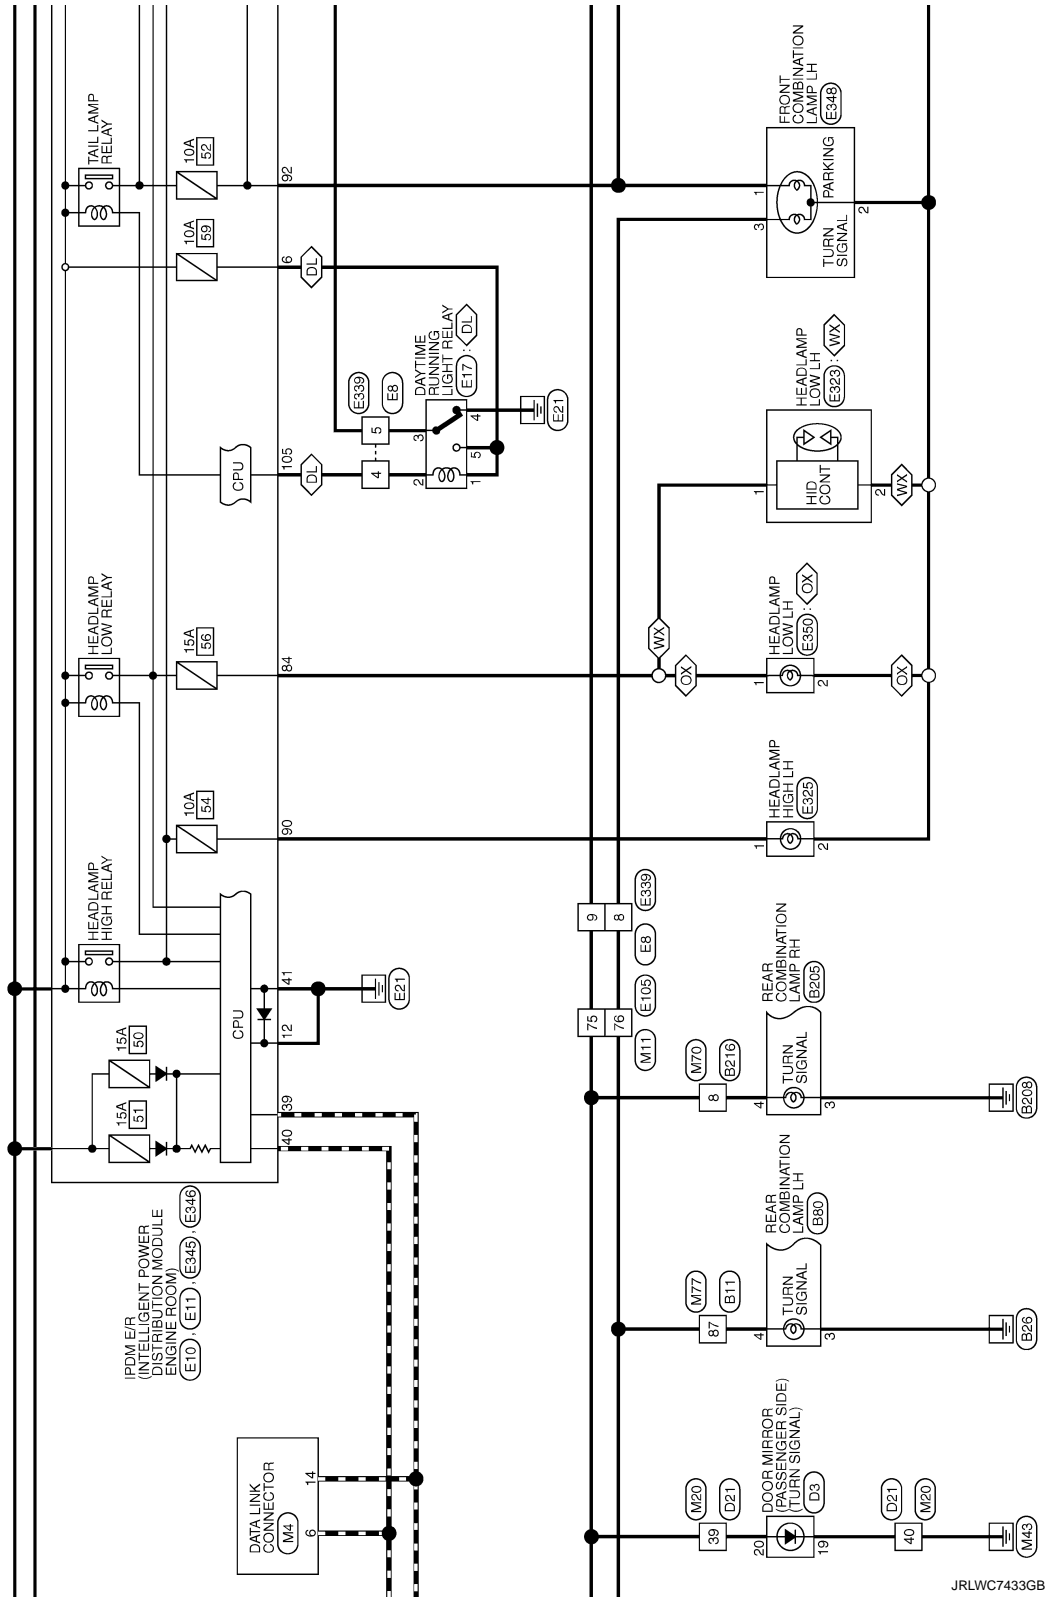


JRLWC7433GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

EXTERIOR LIGHTING SYSTEM

< WIRING DIAGRAM >

[XENON TYPE]

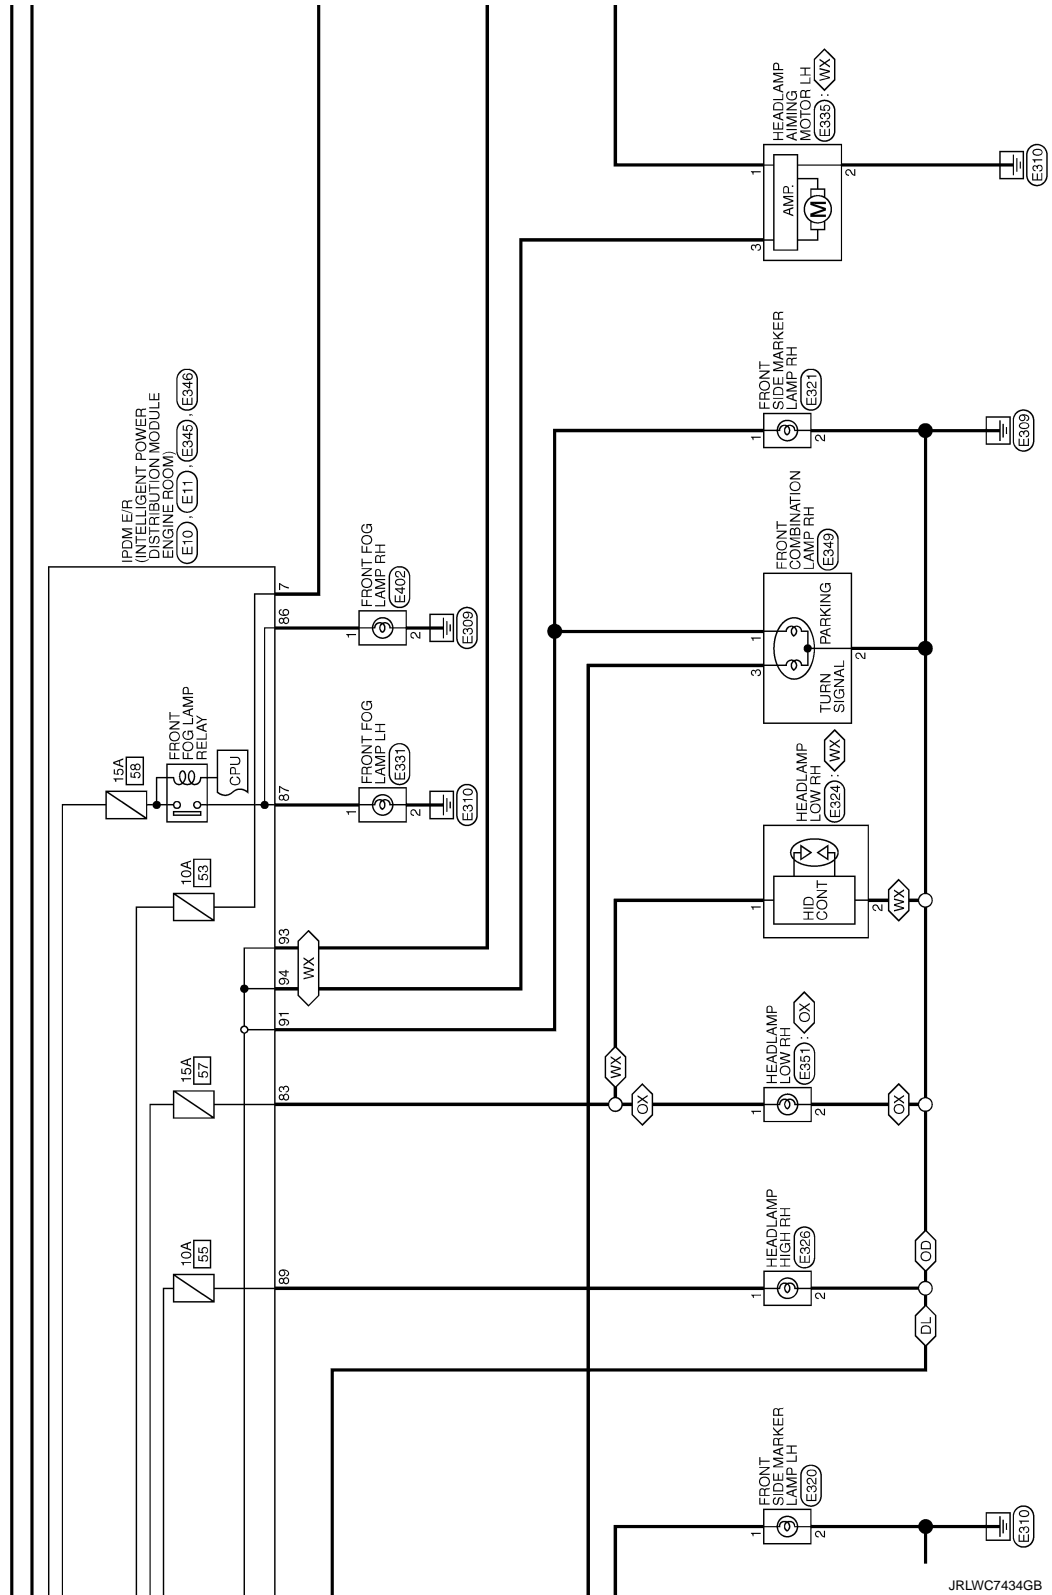


JRLWC7434GB

EXTERIOR LIGHTING SYSTEM

< WIRING DIAGRAM >

[XENON TYPE]

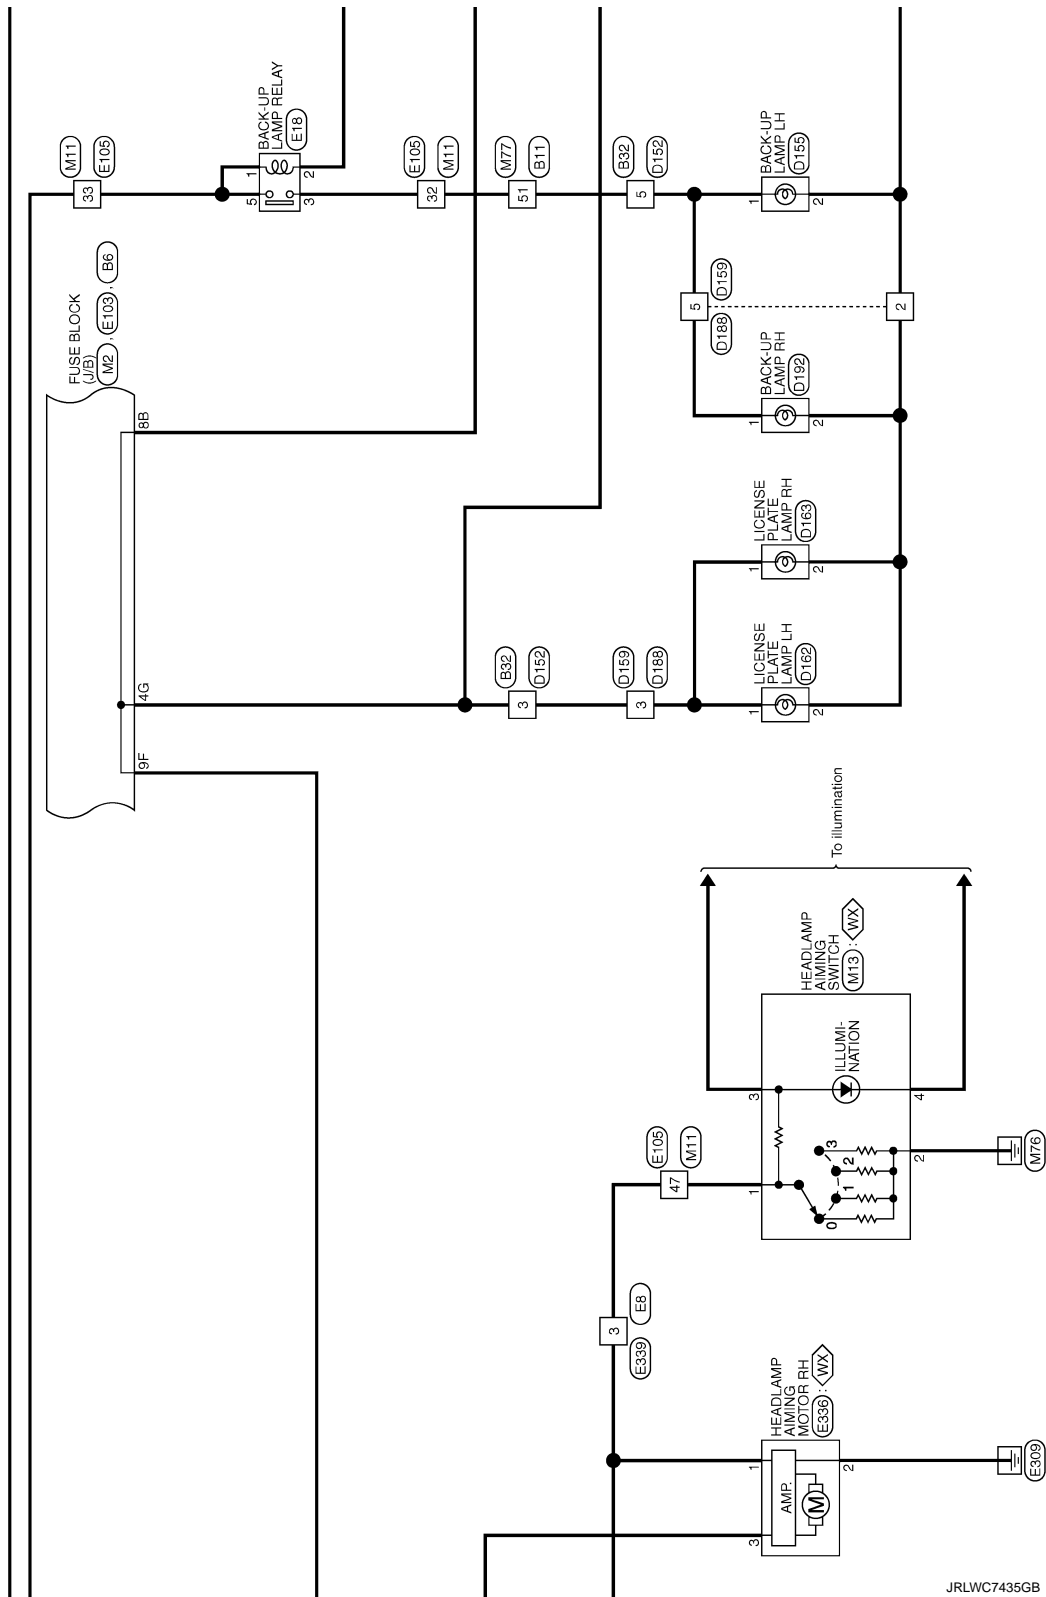


JRLWC7435GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

EXTERIOR LIGHTING SYSTEM

< WIRING DIAGRAM >

[XENON TYPE]

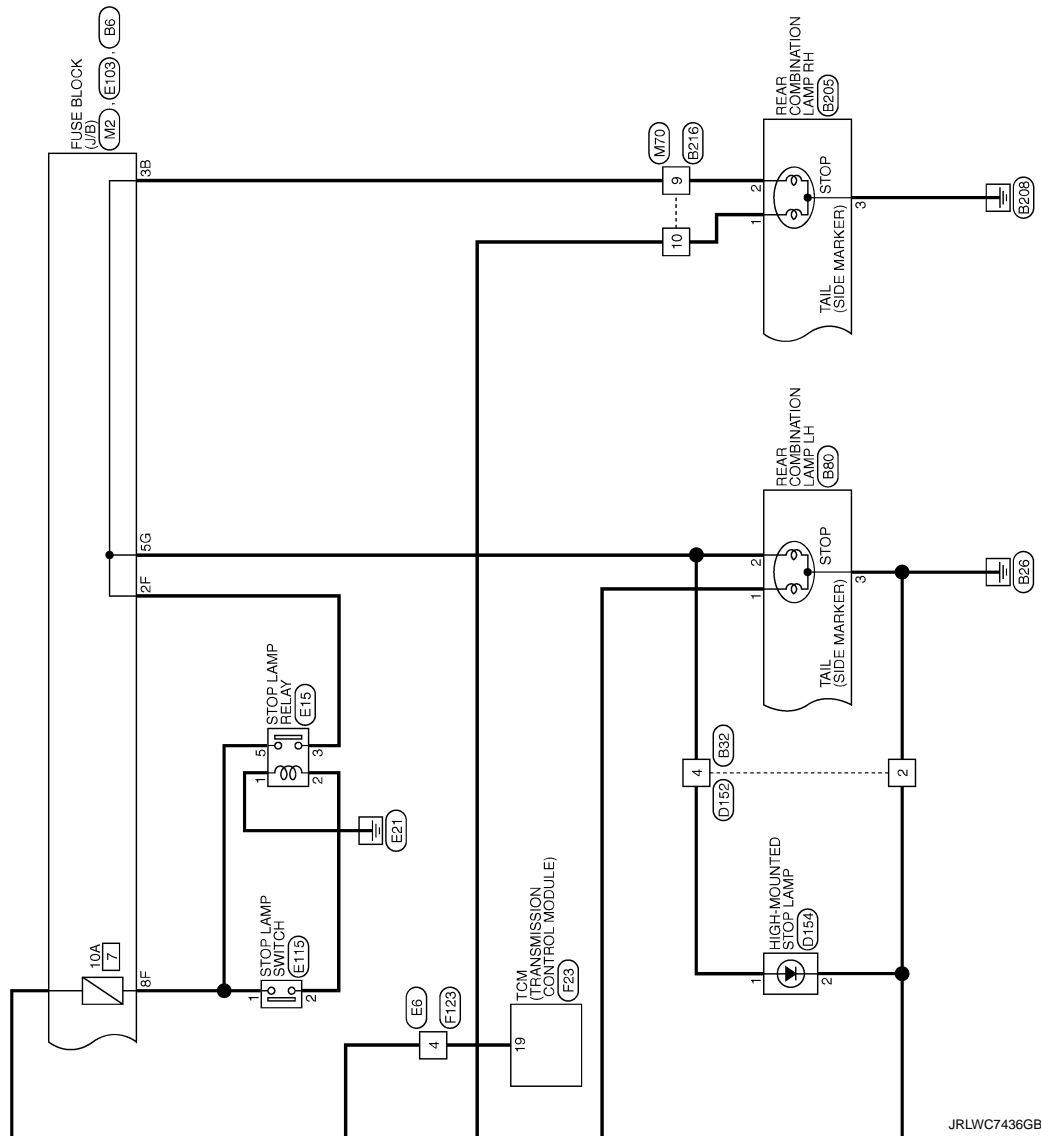

JRLWC7436GB


EXTERIOR LIGHTING SYSTEM

< WIRING DIAGRAM >

[XENON TYPE]


EXTERIOR LIGHTING SYSTEM

Connector No.	B56
Connector Name	FUSE BLOCK (J/B)
Connector Type	MS3212FR-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
10G	Y	-
12	O	-
26	W	-
46	SB	-
56	L	-


Connector No.	B11
Connector Name	WIRE TO WIFE
Connector Type	TH80MM-CS19



Terminal No.	Color Of Wire	Signal Name [Specification]
10	LG	-
12	Y	-
13	P	-
15	L	-
29	GR	-
30	W	-
31	BR	-
37	SHIELD	-
38	FL	-
39	BF	-
40	B/W	-
51	O	-
52	B/P	-
53	V	-

54	P	-
57	Y	-
58	L	-
59	V	-
60	O	-
61	B	-
62	W	-
63	Y	-
64	W	-
65	R	-
66	SHIELD	-
67	B	-
68	W	-
69	SHIELD	-
70	GR	-
71	BR	-
72	P	-
74	BR	-
75	SB	-
77	V	-
78	LG	-
79	W	-
80	R	-
81	SB	-
82	V	-
87	BR	-
88	P	-
89	BR	-
90	R	-
91	O	-
92	LG	-

Connector No.	B32
Connector Name	WIRE TO WIFE
Connector Type	TH24MM-BH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	SB	-
3	FL	-
4	FL	-
5	O	-
6	SB	-
9	SHIELD	-
10	R/L	-
11	B	-
12	R/W	-
13	GR	-
14	O	-
15	W	-
16	G	-
17	R	-
18	BZ	-
19	BZ	-
20	P	-
21	LG	-
22	BR	-
23	V	-
24	P	-

Connector No.	B55
Connector Name	FRONT DOOR SWITCH (DRIVER SIDE)
Connector Type	TH84FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
3	O	-

Connector No.	B71
Connector Name	SLIDING DOOR SWITCH LH
Connector Type	TH84FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
3	V	-

Connector No.	B80
Connector Name	REAR COMBINATION LAMP LH
Connector Type	RS94EGY-FR



JRLWC7437GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

EXTERIOR LIGHTING SYSTEM

< WIRING DIAGRAM >

[XENON TYPE]

EXTERIOR LIGHTING SYSTEM


Terminal No.	Color Of Wire	Signal Name [Specification]
1	SB	-
2	L	-
3	B	-
4	BR	-

Connector No.	B205
Connector Name	REAR COMBINATION LAMP RH
Connector Type	RS04FGY-PR



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	P	-
3	B	-
4	V	-

Connector No.	B216
Connector Name	WIRE TO WIRE
Connector Type	NS16MBR-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	O	-
3	BR	-
4	Y	-
5	V	-
8	P	-
9	V	-
10	L	-
11	LG	-


Terminal No.	Color Of Wire	Signal Name [Specification]
13	G	-
14	SB	-
15	Y	-

Connector No.	B221
Connector Name	SLIDING DOOR SWITCH RH
Connector Type	TH04FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
3	W	-

Connector No.	B225
Connector Name	WIRE TO WIRE
Connector Type	TH16MW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
2	W	-
3	B	-
4	P	-
5	BR	-
9	L	-
10	LG	-
11	SB	-
12	O	-
13	Y	-
14	GR	-
15	LG	-
16	O	-

Connector No.	B235
Connector Name	FRONT DOOR SWITCH (PASSENGER SIDE)
Connector Type	TH04FW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
3	SB	-

Connector No.	D3
Connector Name	DOOR MIRROR (PASSENGER SIDE)
Connector Type	TH24MW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
5	W	-
6	R	-
7	LG	-
10	BR	-
11	SB	-
12	V	-
13	G	-
17	SHIELD	-
18	B	-
19	B	-
20	O	-
21	Y	-
22	P	-
23	W	-
24	Y	-

Connector No.	D21
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-CS15



Terminal No.	Color Of Wire	Signal Name [Specification]
7	W	-
8	R	-
9	V	-
8	BR	-
9	L	-
10	LG	-
11	LG	-
12	R	-
14	B	-
15	W	-
16	P	-
17	Y	-
18	R	-
19	W	-
21	R	-
22	W	-
23	W	-
24	SHIELD	-
25	G	-
26	L	-
36	LG	-
37	Y	-
38	L	-
39	O	-
40	B	-
41	W	-
42	R	-
43	P	-
44	G	-
46	GR	-
48	BR	-
51	V	-
52	SB	-
53	SHIELD	-
54	G	-
55	R	-


EXTERIOR LIGHTING SYSTEM

< WIRING DIAGRAM >

[XENON TYPE]

EXTERIOR LIGHTING SYSTEM

Connector No.	D41
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-CS15



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	--
2	B	--
3	SB	--
4	G	--
5	BR	--
6	BR	--
7	GR	--
8	V	--
9	BR	-- [With front power window anti-pinch system]
9	SB	-- [Without passenger power window anti-pinch system]
10	LG	--
11	V	--
12	G	--
13	G	--
14	B	--
15	W	--
16	W	--
17	R	--
18	L	--
19	LG	--
20	GR	--
21	Y	--
22	BR	--
23	R	--
24	B	--
25	W	--
26	SHIELD	--
27	SB	--
28	G	--
29	V	--
30	W	--
31	W	--
32	LG	--
33	V	--
34	BR	--
35	P	--

EXTERIOR LIGHTING SYSTEM

38	SB	--
39	GR	--
40	V	--
41	BR	--
42	V	--
43	Y	--
44	B	--
45	P	-- [Without automatic drive positioner]
46	GR	-- [With automatic drive positioner]
47	W	-- [Without automatic drive positioner]
48	B	-- [With automatic drive positioner]
49	SB	-- [Without automatic drive positioner]
50	W	-- [With automatic drive positioner]
51	R	--
52	LG	--
53	SHIELD	--
54	G	--
55	R	--


Connector No.	D43
Connector Name	DOOR MIRROR (DRIVER SIDE)
Connector Type	TH24MW-H4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	--
5	W	--
6	R	--
10	SB	--
11	V	--
12	BR	--
13	B	--
17	SHIELD	--
18	B	--
19	B	--

50	V	--
51	LG	--
52	B	--
53	GR	--
54	GR	--
55	L	--

Connector No.	D152
Connector Name	WIRE TO WIRE
Connector Type	TH54FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	SB	--
2	B	--
3	P	--
4	V	--
5	Y	--
6	LG	--
9	SHIELD	--
10	W	--
11	B	--
12	R	--
13	B	--
14	G	--
15	P	--
16	O	--
17	L	--
18	GR	--
19	BR	--
20	O	--
21	LG	--
22	V	--
23	W	--
24	V	--

Connector No.	D154
Connector Name	HIGH-MOUNTED STOP LAMP
Connector Type	RH02FB



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	--
2	B	--

Connector No.	D155
Connector Name	BACK-UP LAMP LH
Connector Type	HS02FG



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	--
2	B	--

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

EXL


EXTERIOR LIGHTING SYSTEM

< WIRING DIAGRAM >

[XENON TYPE]

EXTERIOR LIGHTING SYSTEM

Connector No.	D139
Connector Name	WIRE TO WIRE
Connector Type	TH18EW-RH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	B	-
3	P	-
4	V	-
5	Y	-
9	R	-
10	P	-
11	C	-
12	L	-
13	GR	-
14	O	-
15	LG	-
18	V	-

Connector No.	D182
Connector Name	LICENSE PLATE LAMP LH
Connector Type	TK02FBR



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	B	-

Connector No.	D183
Connector Name	LICENSE PLATE LAMP RH
Connector Type	TK02FBR




Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	B	-

Connector No.	D188
Connector Name	WIRE TO WIRE
Connector Type	TH18EW-RH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	SR	-
2	B	-
3	Y	-
4	BR	-
5	BR	-
9	R	-
10	P	-
11	O	-
12	L	-
13	GR	-
15	LG	-
18	V	-

Connector No.	D190
Connector Name	BACK DOOR LOCK ASSEMBLY
Connector Type	NS08FW-GS




Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	V	-
4	O	-
5	L	-
6	GR	-
7	P	-
8	B	-

Connector No.	D192
Connector Name	BACK-UP LAMP RH
Connector Type	HS2ZEG



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	B	-

Connector No.	EB
Connector Name	WIRE TO WIRE
Connector Type	TK18MGV-TV



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	V	-
3	L	-
4	LG	-
5	GR	-
6	V	-
7	G	-
8	P	-
10	W	-
11	G	-
12	BR	-
13	SB	-
14	B	-

Connector No.	EB
Connector Name	WIRE TO WIRE
Connector Type	NS12MBR-GS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	W	-
3	V	-
4	BR	-
5	LG	-
6	O	-
7	G	-
8	Y	-

JRLWC7440GB

EXTERIOR LIGHTING SYSTEM

< WIRING DIAGRAM >

[XENON TYPE]

EXTERIOR LIGHTING SYSTEM

Connector No.	E10
Connector Name	IPM-FOR-INTELLIGENT-POWER-DISTRIBUTION-MODULE-ENGINE ROOM
Connector Type	1H20EW-C5L12-AM-1V

Terminal No.	Color Of Wire	Signal Name [Specification]
4	LG	-
5	Y	-
6	G	-
7	BR	-
10	P	-
12	B	-
13	G	-
15	L	-
16	P	-
18	V	-
20	W	-
22	SB	-
23	GR	-
24	G	-
25	GR	-
27	BR	-
28	G	-
30	LG	-
34	O	-
35	P	-
36	G	-
38	GR	-



Connector No.	E11
Connector Name	IPM-FOR-INTELLIGENT-POWER-DISTRIBUTION-MODULE-ENGINE ROOM
Connector Type	1H08EW-4H4

Terminal No.	Color Of Wire	Signal Name [Specification]
38	P	-
41	B	-
42	SB	-
43	LG	-
44	W	-
45	Y	-
46	O	-



Connector No.	E17
Connector Name	DAYTIME RUNNING LIGHT RELAY
Connector Type	MS02FL-M2-LG

Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	EG	-
3	LG	-
4	B/W	-
5	G	-



Connector No.	E18
Connector Name	BACK-UP LAMP RELAY
Connector Type	MS02FL-M2-LG

Terminal No.	Color Of Wire	Signal Name [Specification]
1	O	-
2	LG	-
3	R	-
5	Y	-



Connector No.	E103
Connector Name	FUSE BLOCK (J.B)
Connector Type	MS19FW-C5

Terminal No.	Color Of Wire	Signal Name [Specification]
1F	G	-
2F	V	-
3F	SB	-
4F	R	-
6F	LG	-
8F	P	-
9F	BR	-

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	1H12MM-C5U-M3

Terminal No.	Color Of Wire	Signal Name [Specification]
1	SHIELD	-
2	W	-
3	B	-
4	R	-
5	G	-
6	GR	-
8	SB	-
10	BR	-
11	Y	-
12	O	-
13	W	-

A B C D E F G H I J K M N O P

EXL

EXTERIOR LIGHTING SYSTEM

< WIRING DIAGRAM >

[XENON TYPE]

EXTERIOR LIGHTING SYSTEM

14	L	-
15	P	-
31	GR	-
32	B	-
33	W	-
37	BR	-
38	G	-
39	V	-
40	P	-
41	L	-
42	LG	-
43	O	-
45	GR	-
46	SB	-
47	Y	-
48	L	-
51	BR	-
52	G	-
53	B	-
54	O	-
55	Y	-
56	SHIELD	-
61	P	-
62	G	-
63	W/L	-
64	W/R	-
66	W	-
67	W	-
68	SB	-
70	LG	-
71	R	-
72	L	-
73	GR	-
74	Y	-
75	SB	-
76	Y	-
77	G	-
78	O	-
80	R	-
81	L	-
82	LG	-
83	R	-

Connector No.	E115
Connector Name	STOP LAMP SWITCH
Connector Type	IM04FW-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	LG	-
3	O	-
4	W	-

Connector No.	E320
Connector Name	FRONT SIDE MARKER LAMP LH
Connector Type	RK02FGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	B	-

Connector No.	E321
Connector Name	FRONT SIDE MARKER LAMP RH
Connector Type	RK02FGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	B	-

Connector No.	E323
Connector Name	HEADLAMP LOW LH
Connector Type	E02FGY-RS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	B	-

Connector No.	E324
Connector Name	HEADLAMP LOW RH
Connector Type	E02FGY-RS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	B	-

Connector No.	E325
Connector Name	HEADLAMP HIGH LH
Connector Type	NJ02FEB



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	B	-

JRLWC7442GB

EXTERIOR LIGHTING SYSTEM

< WIRING DIAGRAM >

[XENON TYPE]

EXTERIOR LIGHTING SYSTEM

Connector No.	E328
Connector Name	HEADLAMP HIGH RH
Connector Type	MUZFEB



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	B	- [Without daytime light system] - [With daytime light system]
3	E	-

Connector No.	E331
Connector Name	FRONT FOG LAMP LH
Connector Type	FHZQ2FB



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	B/Y	-

Connector No.	E335
Connector Name	HEADLAMP AIMING MOTOR LH
Connector Type	HSQ3FGY




Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	B	-
3	G	-

Connector No.	E336
Connector Name	HEADLAMP AIMING MOTOR RH
Connector Type	HSQ3FGY




Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	B	-
3	W	-

Connector No.	E339
Connector Name	WIRE TO WIRE
Connector Type	NS2ZFB-C5




Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	V	-
3	W	-
4	R	-
5	L	-
6	BR	-
7	P	-
8	Y	-
9	SB	-
10	GR	-
11	Y	-
12	G	-

Connector No.	E345
Connector Name	WIRE TO WIRE
Connector Type	NSQ3FW-C5



Terminal No.	Color Of Wire	Signal Name [Specification]
5	R	-
4	SB	-
3	Y	-
2	BR	-
1	V	-
30	G	-

Connector No.	E346
Connector Name	WIRE TO WIRE
Connector Type	111HFV-4H



Terminal No.	Color Of Wire	Signal Name [Specification]
91	CG	-
92	W	-
93	O	-
94	Y	-
101	O	-
102	G	-
103	BR	-
105	R	-

Connector No.	E348
Connector Name	FRONT COMBINATION LAMP LH
Connector Type	ZQ3FB



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	B	-
3	Y	-

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

EXTERIOR LIGHTING SYSTEM

< WIRING DIAGRAM >

[XENON TYPE]

EXTERIOR LIGHTING SYSTEM

Connector No.	E349
Connector Name	FRONT COMBINATION LAMP RH
Connector Type	Z03EBR



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	B	-
3	SB	-

Connector No.	E350
Connector Name	HEADLAMP LOW LH
Connector Type	FH202FB



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	B	-

Connector No.	E351
Connector Name	HEADLAMP LOW RH
Connector Type	FH202FB




Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	B	-

Connector No.	E402
Connector Name	FRONT FOG LAMP RH
Connector Type	FH202FB



Terminal No.	Color Of Wire	Signal Name [Specification]
1	SB	-
2	B	-

Connector No.	F23
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Type	RH40FB-R2Z-L-RH




Terminal No.	Color Of Wire	Signal Name [Specification]
1	R/B	TRANSMISSION RANGE SWITCH 2
2	P/B	TRANSMISSION RANGE SWITCH 2
3	G/O	TRANSMISSION RANGE SWITCH 4
4	GR	TRANSMISSION RANGE SWITCH 3 (MONITOR)
5	B	GROUND
7	W	SENSOR GROUND
8	G/W	ROM ASSY (SEL 2)
9	L/R	ROM ASSY (SEL 1)
10	BR/R	ROM ASSY (SEL 3)
11	BR/W	TRANSMISSION RANGE SWITCH 1
13	V	CVT FLUID TEMPERATURE SENSOR
14	R/W	PRIMARY PRESSURE SENSOR
15	V/W	SECONDARY PRESSURE SENSOR
19	G/B	BACK-UP LAMP RELAY
20	GR	SENSOR GROUND
25	W/R	SENSOR GROUND
26	L/O	SENSOR POWER
27	R/G	STEP MOTOR D
28	R	STEP MOTOR C
29	O/B	STEP MOTOR B
30	G/P	STEP MOTOR A
31	P	CAN-L
32	L	CAN-H
33	LG	PRIMARY SPEED SENSOR
34	LG/R	SECONDARY SPEED SENSOR
37	V/R	LOCK-UP SELECT SOLENOID VALVE
38	L/W	TORQUE CONVERTER CLUTCH SOLENOID VALVE
39	W/B	SECONDARY PRESSURE SOLENOID VALVE
40	R/B	LINE PRESSURE SOLENOID VALVE
42	B	COMMON
46	Y	IGNITION POWER SUPPLY
47	L/R	BATTERY POWER SUPPLY (MEMORY BLOCK-UP)
48	Y	IGNITION POWER SUPPLY

Connector No.	F123
Connector Name	WIRE TO WIRE
Connector Type	TK1BE5C-IV



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	G/B	-
3	G/B	-
4	G/B	-
5	R	-
6	L/R	-
7	P	-
8	P	-
10	Y/B	-
11	BR/W	-
12	BR	-
13	G	-
14	B	-

Connector No.	M1
Connector Name	FUSE BLOCK (L/B)
Connector Type	NS9FEW-M2



Terminal No.	Color Of Wire	Signal Name [Specification]
1A	P	-
2A	G	-
3A	L	-
4A	GR	-
5A	V	-
6A	F	-
7A	GR	-
8A	L	-


EXTERIOR LIGHTING SYSTEM

< WIRING DIAGRAM >

[XENON TYPE]


EXTERIOR LIGHTING SYSTEM

Connector No.	M2
Connector Name	FUSE BLOCK (J/B)
Connector Type	INSJZFV-CS




Terminal No.	Color Of Wire	Signal Name [Specification]
10B	F	-
9B	V	-
8B	W	-
5B	BR	-
6B	G	-
8B	R/L	-
9B	GR	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	INSJZFV-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
10C	LG	-
11C	V	-
12C	Y	-
6C	GR	-
7C	B/R	-
8C	G	-
9C	P	-

Connector No.	M4
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW



Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	-
4	V	-
5	B/R	-
6	GR	-
7	R	-
8	G	-
11	SB	-
14	P	-
15	O	-

Connector No.	M11
Connector Name	WIRE TO WIRE
Connector Type	THJDFW-CS(U-M3)



Terminal No.	Color Of Wire	Signal Name [Specification]
1	SHIELD	-
2	W	-
3	B	-
4	R	-
7	G	-
8	C	-
9	B	-
10	R	-
11	W	-
12	LG	-

13	Y	-
14	P	-
15	P	-
31	R	-
32	V	-
33	Y	-
37	BR	-
38	BR	-
39	Y	-
40	P	-
41	L	-
42	G	-
43	W	-
45	LG	-
46	V	-
47	LG	-
48	G	-
51	SB	-
52	GR	-
53	B	-
54	R	-
55	L	-
61	BR	-
62	LG	-
63	W/L	-
64	W/R	-
65	O	-
67	SB	-
68	P	-
69	P	-
71	R	-
72	L	-
73	R	-
74	Y	-
75	G	-
76	V	-
77	P	-
78	W	-
80	Y	-
81	W	-
82	L	-
83	R	-

Connector No.	M13
Connector Name	HEADLAMP AIMING SWITCH
Connector Type	AK03FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	G	-
3	B/L	-
4	B/R	-

Connector No.	M17
Connector Name	OPTICAL SENSOR
Connector Type	TK03FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	O	POWER
2	L	OUTPUT
3	R	GROUND

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL


EXTERIOR LIGHTING SYSTEM

< WIRING DIAGRAM >

[XENON TYPE]

EXTERIOR LIGHTING SYSTEM


Connector No.	M18
Connector Name	WIRE TO WIRE
Connector Type	TH40MW-CS15



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	SELECT SWITCH SIGNAL
2	W	ILLUMINATION CONTROL SWITCH SIGNAL (L)
3	W	ILLUMINATION CONTROL SWITCH SIGNAL (R)
4	Y	AIR BAG SIGNAL
5	SB	ENGINE COOLANT TEMPERATURE SIGNAL
6	BR	AMBIENT SENSOR SIGNAL
7	LG	A/C AUTO AMP CONNECTION RECOGNITION SIGNAL
8	L	AMBIENT SENSOR GROUND
9	GR	CAN-H
10	P	CAN-L
11	V	GROUND
12	G	FUEL LEVEL SENSOR GROUND
13	G	ALTERNATOR SIGNAL
14	BR	PARKING BRAKE SWITCH SIGNAL
15	G	WASHER FLUID LEVEL SWITCH SIGNAL
16	Y	WASHER FLUID LEVEL SWITCH SIGNAL
17	SB	VEHICLE SPEED SIGNAL (G-FULL SET)
18	P	OVERDRIVE CONTROL SWITCH SIGNAL
19	V	FUEL LEVEL SENSOR SIGNAL
20	Y	ALTERNATOR SIGNAL
21	W	PARKING BRAKE SWITCH SIGNAL
22	G	WASHER FLUID LEVEL SWITCH SIGNAL
23	R	WASHER FLUID LEVEL SWITCH SIGNAL
24	B	GROUND
25	W	GROUND
26	SHIELD	GROUND
27	GR	ILLUMINATION CONTROL SIGNAL
28	G	BATTERY POWER SUPPLY
29	G	IGNITION SIGNAL
30	LG	GROUND
31	R	GROUND
32	G	ILLUMINATION CONTROL SIGNAL
33	Y	TRIP RESET SWITCH SIGNAL
34	R/W	METER CONTROL SWITCH GROUND
35	GR	ENTER SWITCH SIGNAL

Terminal No.	Color Of Wire	Signal Name [Specification]
36	LG	W
37	P	W
38	W	W
39	V	W
40	BR	W
41	P	W
42	V	W
43	SB	W
44	B	W
45	W/L	W - [With automatic drive positioner]
46	Y	W - [Without automatic drive positioner]
47	GR/V	W - [Without automatic drive positioner]
48	W	W
49	P	W
50	R	W
51	V	W
52	LG	W
53	W	W
54	L/R	W - [With automatic drive positioner]
55	L/G	W - [Without automatic drive positioner]


Connector No.	M20
Connector Name	WIRE TO WIRE
Connector Type	TH40MW-CS15



Terminal No.	Color Of Wire	Signal Name [Specification]
7	B/W	W
8	L	W - [Without passenger power window anti-pinch system]
9	R	W - [With front power window anti-pinch system]
10	GR	W - [Without passenger power window anti-pinch system]
11	SB	W - [With front power window anti-pinch system]
12	V	W
14	B	W
15	W	W
16	BR	W

Terminal No.	Color Of Wire	Signal Name [Specification]
17	P	W
18	R	W
19	Y	W
20	R	W
21	B	W
22	B	W
23	W	W
24	SHIELD	W
25	W/L	W - [With automatic drive positioner]
26	W/R	W - [Without automatic drive positioner]
27	LG	W
28	P	W
29	G	W
30	B	W
31	R	W
32	GR	W
33	GR	W
34	V	W
35	BR	W
36	GR	W
37	W	W
38	SHIELD	W
39	B/Y	W
40	LG	W

Connector No.	M34
Connector Name	COMBINATION METER
Connector Type	TH40FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	BATTERY POWER SUPPLY
2	V	IGNITION SIGNAL
3	B	GROUND
4	B	GROUND
5	B/P	ILLUMINATION CONTROL SIGNAL
8	SB	TRIP RESET SWITCH SIGNAL
10	P	METER CONTROL SWITCH GROUND
11	G	ENTER SWITCH SIGNAL

Terminal No.	Color Of Wire	Signal Name [Specification]
12	BR	SELECT SWITCH SIGNAL
13	Y	ILLUMINATION CONTROL SWITCH SIGNAL (L)
14	V	ILLUMINATION CONTROL SWITCH SIGNAL (R)
15	BR	AIR BAG SIGNAL
16	L	ENGINE COOLANT TEMPERATURE SIGNAL
18	LG	AMBIENT SENSOR SIGNAL
19	R	A/C AUTO AMP CONNECTION RECOGNITION SIGNAL
20	Y	AMBIENT SENSOR GROUND
21	L	CAN-H
22	P	CAN-L
23	B	GROUND
24	B	FUEL LEVEL SENSOR GROUND
25	BR	ALTERNATOR SIGNAL
26	BR	PARKING BRAKE SWITCH SIGNAL
27	Y	WASHER FLUID LEVEL SWITCH SIGNAL
28	V	WASHER FLUID LEVEL SWITCH SIGNAL
29	G	VEHICLE SPEED SIGNAL (G-FULL SET)
31	SB	OVERDRIVE CONTROL SWITCH SIGNAL
32	P	OVERDRIVE CONTROL SWITCH SIGNAL
34	O	FUEL LEVEL SENSOR SIGNAL
35	P	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
36	BR	PASSENGER SEAT BELT WARNING SIGNAL

Connector No.	M45
Connector Name	HAZARD SWITCH
Connector Type	TR60FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B/W	W
2	P	W
3	R	W
4	B	W

JRLWC7446GB


EXTERIOR LIGHTING SYSTEM

< WIRING DIAGRAM >

[XENON TYPE]


EXTERIOR LIGHTING SYSTEM

Connector No.	M59
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT
Connector Type	M128FY-EX




Terminal No.	Color Of Wire	Signal Name [Specification]
1	IGN	IGN
2	GR	GR
3	BR	BR
4	G	DRY (S)
5	Y	DRY (S)
6	V	DRY (S)
7	SB	AS1 (+)
8	BR	AS1 (-)
9	G	AS2 (+)
10	R/L	AS2 (-)
11	SB	AS2 (+)
12	R	AS2 (-)
13	Y	AS2 (+)
14	P	AS2 (-)
15	W/R	EC2S (+)
16	W/R	EC2S (-)
17	GR	GROUND
18	GR	GROUND
19	GR	GROUND
20	GR	GROUND
21	GR	GROUND
22	GR	GROUND
23	BR	AIRBAG W/L
24	BR	SEATBELT W/L
25	LG	GUTTERBELT TALE
26	LG	GUTTERBELT TALE
27	LG	GUTTERBELT TALE
28	LG	GUTTERBELT TALE
29	LG	GUTTERBELT TALE
30	LG	GUTTERBELT TALE
31	LG	GUTTERBELT TALE
32	LG	GUTTERBELT TALE
33	LG	GUTTERBELT TALE
34	LG	GUTTERBELT TALE
35	LG	GUTTERBELT TALE
36	LG	GUTTERBELT TALE
37	LG	GUTTERBELT TALE
38	LG	GUTTERBELT TALE
39	LG	GUTTERBELT TALE
40	LG	GUTTERBELT TALE
41	LG	GUTTERBELT TALE
42	LG	GUTTERBELT TALE
43	LG	GUTTERBELT TALE
44	LG	GUTTERBELT TALE
45	LG	GUTTERBELT TALE
46	LG	GUTTERBELT TALE
47	LG	GUTTERBELT TALE
48	LG	GUTTERBELT TALE
49	LG	GUTTERBELT TALE
50	LG	GUTTERBELT TALE
51	LG	GUTTERBELT TALE
52	LG	GUTTERBELT TALE
53	LG	GUTTERBELT TALE
54	LG	GUTTERBELT TALE
55	LG	GUTTERBELT TALE
56	LG	GUTTERBELT TALE
57	O	DEPLOYMENT INFORMATION OUTPUT
58	L	CAN-H
59	L	CAN-H
60	P	CAN-L

Connector No.	M70
Connector Name	WIRE TO WIRE
Connector Type	MS16FB-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	W/L
2	V	W/L
3	V	W/L
4	P	SHIELD
5	L	SHIELD
6	L	SHIELD
7	G	SHIELD
8	G	SHIELD
9	V	W/L
10	R/L	W/L
11	SB	SHIELD
12	R	SHIELD
13	Y	W/L
14	P	W/R
15	W	W/R

Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Type	TH88FW-CS19



Terminal No.	Color Of Wire	Signal Name [Specification]
10	GR	GR
12	V	W/L
13	V	W/L
15	Y	W/L
28	L	SHIELD
30	P	SHIELD
31	BR	SHIELD
37	SHIELD	SHIELD
38	B	SHIELD

Connector No.	M79
Connector Name	WIRE TO WIRE
Connector Type	TH18FW-4H



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	W
2	W	W
3	B	B
4	B	B
5	BR	BR
6	BR	BR
7	L	L
8	L	L
9	P	P
10	P	P
11	SB	SB
12	R	R
13	V	V
14	L	L
15	G	G
16	GR	GR

Connector No.	M103
Connector Name	COMBINATION SWITCH
Connector Type	TH18FW-4H



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	RR [With automatic drive positioner]
2	G	RR [Without automatic drive positioner]
3	X	OUTPUT 4
4	BS	FR [With automatic drive positioner]
5	P	FR [Without automatic drive positioner]
6	W	IGN
7	O	OUTPUT 3
8	B	GROUND [With automatic drive positioner]

Terminal No.	Color Of Wire	Signal Name [Specification]
58	W	W
59	W	W
60	W	W
61	R	R
62	V	V
63	B	B
64	O	O
65	P	P
66	L	L
67	L	L
68	Y	Y
69	Y	Y
70	Y	Y
71	W/R	W/R
72	LG	LG
73	LG	LG
74	GR	GR
75	G	G
76	G	G
77	O	O
78	LG	LG
79	C	C
80	C	C
81	L	L
82	W	W
83	V	V
84	R	R
85	R	R
86	Y	Y
87	P	P
88	R	R
89	R	R
90	P	P
91	R	R
92	SB	SB
93	P	P

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

EXL

EXTERIOR LIGHTING SYSTEM


< WIRING DIAGRAM >

[XENON TYPE]

EXTERIOR LIGHTING SYSTEM


0	GR	GROUND (Without driver position)
1	BY	OUTPUT 1
2	BY	OUTPUT 2
3	LG	OUTPUT 3
4	SB	OUTPUT 4
5	SB	OUTPUT 5
6	W	INPUT 1
7	W	INPUT 2
8	W	INPUT 3
9	W	INPUT 4
10	W	INPUT 5
11	F	OUTPUT 1
12	L	OUTPUT 2
13	Y	INPUT 1
14	G	OUTPUT 2

Connector No.	IM121
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH46FB-NH




31	O	DR DOOR UNLK SENS
32	Y	COMBI SW OUTPUT 1
33	W	COMBI SW OUTPUT 2
34	GR	COMBI SW OUTPUT 3
35	SB	COMBI SW OUTPUT 4
36	R	COMBI SW OUTPUT 5
37	G	DETENT SW
38	SB	RECEIVER COMM
39	L	CAN-H
40	P	CAN-L

Connector No.	IM122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEA8BFB-FH46-SA



Connector No.	IM123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEA8BFB-FH46-SA



Terminal No.	Color Of Wire	Signal Name [Specification]
57	GR	INT ROOM LAMP PWR SPLY
58	O	BAT
59	O	AIR BAG
60	SB	PASS DOOR UNLK OUTPUT
61	V	TURN SIG LH OUTPUT
62	G	TURN SIG RH OUTPUT
63	W	STEP LAMP CONT
64	R	INT ROOM LAMP CONT
65	LG	CRANK REQ
66	V	ALL DOOR LOCK OUTPUT
67	G	DR DOOR UNLK OUTPUT
68	B	GROUND
69	L	PW PWR SPLY (IGN)
70	P	PW PWR SPLY (BAT)

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	REAR WINDOW DEF RELAY CONT
2	LG	COMBI SW INPUT 5
3	Y	COMBI SW INPUT 4
4	O	COMBI SW INPUT 3
5	G	COMBI SW INPUT 2
6	L	COMBI SW INPUT 1
7	W	KEY CYL UNLK SW
8	GR	PW SW COMM (With automatic sliding door)
9	Y	KEY CYL LOCK SW (Without automatic sliding door)
10	V	STOP LAMP SW 1
11	GR	DOOR LK & UNLK SW LOCK
12	GR	DOOR LK & UNLK SW UNLOCK
13	BR	OPTICAL SENS
14	L	REAR WINDOW DEF SW
15	W	DIMMER
16	Y	SENS PWR SPLY
17	G	RECEIV SENS GND
18	R	SECURITY GND
19	V	SECURITY GND CONT
20	W	LONGLE UNLK
21	B	NATS ANT AMP
22	W	A/G ON
23	G	BLOWER FAN ON
24	BR	HAZARD SW
25	P	HAZARD SW
26	L	BK DOOR OPNR SW

Terminal No.	Color Of Wire	Signal Name [Specification]
43	P	BK DOOR SW
44	L	REAR WIPER STOP POSITION
45	SB	SL DOOR SW
46	SB	SL DOOR SW
47	G	DR DOOR SW
48	O	SL DOOR LH SW
49	B	LUGGAGE LAMP CONT
50	V	SELECT UNLK RELAY CONT
51	LG	BACK DOOR REC SW
52	BR	BK DOOR OPEN
53	R	REAR WIPER OUTPUT
54	G	SL DOOR LH UNLK CONT
55	G	SL DOOR LH UNLK CONT

JRLWC7448GB

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[XENON TYPE]


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:000000009653041

OVERALL SEQUENCE

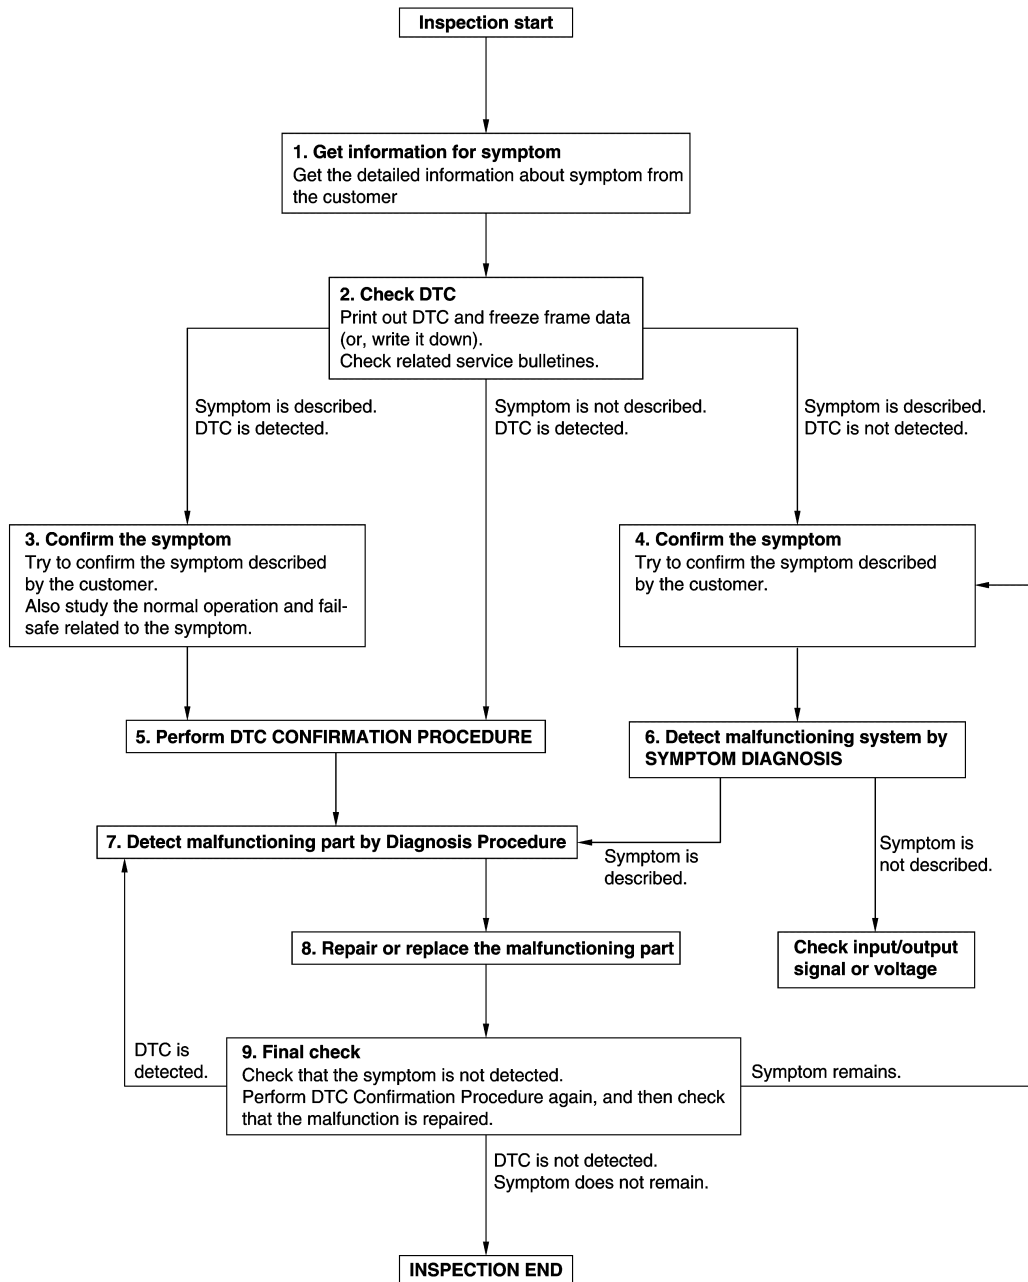

DETAILED FLOW

JMKIA8652GB

DIAGNOSIS AND REPAIR WORK FLOW

[XENON TYPE]

< BASIC INSPECTION >

1. GET INFORMATION FOR SYMPTOM

1. Get detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurs).
2. Check operation condition of the function that is malfunctioning.

>> GO TO 2.

2. CHECK DTC

1. Check DTC.
2. Perform the following procedure if DTC is detected.
 - Record DTC and freeze frame data (Print them out using CONSULT.)
 - Erase DTC.
 - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

Are any symptoms described and any DTC detected?

Symptom is described, DTC is detected>>GO TO 3.

Symptom is described, DTC is not detected>>GO TO 4.

Symptom is not described, DTC is detected>>GO TO 5.

3. CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Also study the normal operation and fail-safe related to the symptom.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5.

4. CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6.

5. PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC CONFIRMATION PROCEDURE for the detected DTC, and then check that DTC is detected again. At this time, always connect CONSULT to the vehicle, and check self diagnostic results in real time. If two or more DTCs are detected, refer to DTC INSPECTION PRIORITY CHART, and determine trouble diagnosis order.

NOTE:

- Freeze frame data is useful if the DTC is not detected.
- Perform Component Function Check if DTC CONFIRMATION PROCEDURE is not included on Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check.
If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC CONFIRMATION PROCEDURE.

Is DTC detected?

YES >> GO TO 7.

NO >> Check according to [GI-42. "Intermittent Incident"](#).

6. DETECT MALFUNCTIONING SYSTEM BY SYMPTOM DIAGNOSIS

Detect malfunctioning system according to SYMPTOM DIAGNOSIS based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

Is the symptom described?

YES >> GO TO 7.

NO >> Monitor input data from related sensors or check voltage of related module terminals using CONSULT.

7. DETECT MALFUNCTIONING PART BY DIAGNOSIS PROCEDURE

DIAGNOSIS AND REPAIR WORK FLOW

[XENON TYPE]

< BASIC INSPECTION >

Inspect according to Diagnosis Procedure of the system.

Is malfunctioning part detected?

YES >> GO TO 8.

NO >> Check according to [GI-42. "Intermittent Incident"](#).

8. REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnosis Procedure again after repair and replacement.
3. Check DTC. If DTC is detected, erase it.

>> GO TO 9.

9. FINAL CHECK

When DTC is detected in step 2, perform DTC CONFIRMATION PROCEDURE again, and then check that the malfunction is repaired securely.

When symptom is described by the customer, refer to confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Is DTC detected and does symptom remain?

YES-1 >> DTC is detected: GO TO 7.

YES-2 >> Symptom remains: GO TO 4.

NO >> Before returning the vehicle to the customer, always erase DTC.

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

HEADLAMP (HI) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

DTC/CIRCUIT DIAGNOSIS

HEADLAMP (HI) CIRCUIT

WITHOUT DAYTIME RUNNING LIGHT SYSTEM

WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Component Function Check

INFOID:000000009653042

1. CHECK HEADLAMP (HI) OPERATION

CONSULT ACTIVE TEST

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the test items, check that the headlamp (HI) is turned ON.

Hi : Headlamp (HI) ON
Off : Headlamp (HI) OFF

NOTE:

ON/OFF is repeated 1 second each.

Is the inspection result normal?

YES >> Headlamp (HI) circuit is normal.

NO >> Refer to [EXL-62, "WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Diagnosis Procedure"](#).

WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Diagnosis Procedure

INFOID:000000009653043

1. CHECK HEADLAMP (HI) OUTPUT VOLTAGE

CONSULT ACTIVE TEST

1. Turn ignition switch OFF.
2. Disconnect headlamp high connector.
3. Turn ignition switch ON.
4. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
5. With operating the test items, check voltage between IPDM E/R harness connector and ground.

(+)			(-)	Test item	Voltage (Approx.)	
IPDM E/R						
Connector		Terminal				
RH	E345	89	Ground	EXTERNAL LAMPS	Hi	Battery voltage
					Off	0 V
LH		90			Hi	Battery voltage
					Off	0 V

Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 3.

2. CHECK HEADLAMP (HI) OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and headlamp high harness connector.

IPDM E/R			Headlamp high		Continuity
Connector		Terminal	Connector	Terminal	
RH	E345	89	E326	1	Existed
LH		90	E325		

Is the inspection result normal?

YES >> GO TO 5.

HEADLAMP (HI) CIRCUIT

[XENON TYPE]

< DTC/CIRCUIT DIAGNOSIS >

NO >> Repair or replace harness.

3.CHECK HEADLAMP (HI) FUSE

1. Turn ignition switch OFF.
2. Check that the following fuses are not fusing.

Unit	Location	Fuse No.	Capacity
Headlamp HI (RH)	IPDM E/R	#55	10 A
Headlamp HI (LH)		#54	

Is the inspection result normal?

YES >> Replace IPDM E/R.
NO >> GO TO 4.

4.CHECK HEADLAMP (HI) SHORT CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
RH	E345	89	Not existed
LH		90	

Is the inspection result normal?

YES >> Replace fuse. (Replace IPDM E/R if the fuse is fusing again.)
NO >> Repair or replace harness. And then replace the fuse.

5.CHECK HEADLAMP (HI) GROUND OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect headlamp high connector.
3. Check continuity between headlamp high harness connector and ground.

Headlamp high		Ground	Continuity
Connector	Terminal		
RH	E326	2	Existed
LH	E325		

Is the inspection result normal?

YES >> Replace headlamp (HI) bulb. (Bulb socket is abnormal.)
NO >> Repair or replace harness.

WITH DAYTIME RUNNING LIGHT SYSTEM

WITH DAYTIME RUNNING LIGHT SYSTEM : Component Function Check INFOID:000000009653044

1.CHECK HEADLAMP (HI) OPERATION

ⓂCONSULT ACTIVE TEST

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the test items, check that the headlamp (HI) is turned ON.

Hi : Headlamp (HI) ON
Off : Headlamp (HI) OFF

NOTE:

ON/OFF is repeated 1 second each.

Is the inspection result normal?

YES >> Headlamp (HI) circuit is normal.
NO >> Refer to [EXL-64, "WITH DAYTIME RUNNING LIGHT SYSTEM : Diagnosis Procedure"](#).

HEADLAMP (HI) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

WITH DAYTIME RUNNING LIGHT SYSTEM : Diagnosis Procedure

INFOID:00000009653045

1. CHECK HEADLAMP (HI) OUTPUT VOLTAGE

CONSULT ACTIVE TEST

1. Turn ignition switch OFF.
2. Disconnect headlamp high connector.
3. Turn ignition switch ON.
4. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
5. With operating the test items, check voltage between IPDM E/R harness connector and ground.

(+)		Terminal	(-)	Test item	Voltage (Approx.)
IPDM E/R					
Connector					
RH	E345	89	Ground	Hi	Battery voltage
					Off
LH		90		Hi	Battery voltage
				Off	0 V

Is the inspection result normal?

- YES >> GO TO 2.
NO >> GO TO 3.

2. CHECK HEADLAMP (HI) OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and headlamp high harness connector.

IPDM E/R		Headlamp high		Continuity
Connector	Terminal	Connector	Terminal	
RH	E345	E326	1	Existed
LH		90		

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Repair or replace harness.

3. CHECK HEADLAMP (HI) FUSE

1. Turn ignition switch OFF.
2. Check that the following fuses are not fusing.

Unit	Location	Fuse No.	Capacity
Headlamp HI (RH)	IPDM E/R	#55	10 A
Headlamp HI (LH)		#54	

Is the inspection result normal?

- YES >> Replace IPDM E/R.
NO >> GO TO 4.

4. CHECK HEADLAMP (HI) SHORT CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Terminal	Ground	Continuity
Connector				
RH	E345	89		Not existed
LH		90		

HEADLAMP (HI) CIRCUIT

[XENON TYPE]

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> Replace fuse. (Replace IPDM E/R if the fuse is fusing again.)

NO >> Repair or replace harness. And then replace the fuse.

5.CHECK ILLUMINATION STATUS OF HEADLAMPS

Check illumination status of headlamps.

Which headlamp does not turn ON?

RH >> GO TO 6.

LH >> GO TO 8.

6.CHECK HEADLAMP HI (RH) GROUND OPEN CIRCUIT-1

1. Remove daytime running light relay.

2. Check continuity between daytime running light relay harness connector and headlamp high RH harness connector.

Daytime running light relay		Headlamp high RH		Continuity
Connector	Terminal	Connector	Terminal	
E17	3	E326	2	Existed

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace harness.

7.CHECK HEADLAMP HI (RH) GROUND OPEN CIRCUIT-2

Check continuity between daytime running light relay harness connector and ground.

Daytime running light relay		Ground	Continuity
Connector	Terminal		
E17	4		Existed

Is the inspection result normal?

YES >> Replace headlamp (HI) bulb. (Bulb socket is abnormal.)

NO >> Repair or replace harness.

8.CHECK HEADLAMP HI (LH) GROUND OPEN CIRCUIT

Check continuity between headlamp high LH harness connector and ground.

Headlamp high LH		Ground	Continuity
Connector	Terminal		
E325	2		Existed

Is the inspection result normal?

YES >> Replace headlamp (HI) bulb. (Bulb socket is abnormal.)

NO >> Repair or replace harness.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

EXL

HEADLAMP (LO) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

HEADLAMP (LO) CIRCUIT

Component Function Check

INFOID:000000009653046

1. CHECK HEADLAMP (LO) OPERATION

CONSULT ACTIVE TEST

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the test items, check that the headlamp (LO) is turned ON.

Lo : Headlamp (LO) ON

Off : Headlamp (LO) OFF

Is the inspection result normal?

- YES >> Headlamp (LO) is normal.
NO >> Refer to [EXL-66, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009653047

1. CHECK HEADLAMP (LO) OUTPUT VOLTAGE

CONSULT ACTIVE TEST

1. Turn ignition switch OFF.
2. Disconnect headlamp low connector.
3. Turn ignition switch ON.
4. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
5. With operating the test items, check voltage between IPDM E/R harness connector and ground.

(+)			(-)	Test item	Voltage (Approx.)		
IPDM E/R							
Connector		Terminal	Ground	EXTERNAL LAMPS			
RH	E345	83				Lo	Battery voltage
		Off				0 V	
LH	E345	84				Lo	Battery voltage
		Off	0 V				

Is the inspection result normal?

- YES >> GO TO 2.
NO >> GO TO 3.

2. CHECK HEADLAMP (LO) OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and headlamp low harness connector.

IPDM E/R			Headlamp low		Continuity
Connector		Terminal	Connector	Terminal	
RH	E345	83	E324	1	Existed
LH		84	E323		

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Repair or replace harness.

3. CHECK HEADLAMP (LO) FUSE

1. Turn ignition switch OFF.
2. Check that the following fuses are not fusing.

HEADLAMP (LO) CIRCUIT

[XENON TYPE]

< DTC/CIRCUIT DIAGNOSIS >

Unit	Lotion	Fuse No.	Capacity
Headlamp LO (RH)	IPDM E/R	#57	15 A
Headlamp LO (LH)		#56	

Is the inspection result normal?

YES >> Replace IPDM E/R.

NO >> GO TO 4.

4.CHECK HEADLAMP (LO) SHORT CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R			Ground	Continuity
Connector	Terminal			
RH	E345	83		Not existed
LH		84		

Is the inspection result normal?

YES >> Replace fuse. (Replace IPDM E/R if the fuse is fusing again.)

NO >> Repair or replace harness. And then replace the fuse.

5.CHECK HEADLAMP (LO) GROUND OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect headlamp low connector.
3. Check continuity between headlamp low harness connector and ground.

Headlamp low			Ground	Continuity
Connector	Terminal			
RH	E324	2		Existed
LH	E323			

Is the inspection result normal?

YES >> Perform the xenon headlamp diagnosis. Refer to [EXL-70, "Diagnosis Procedure"](#).

NO >> Repair or replace harness.

EXL

DAYTIME RUNNING LIGHT RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

DAYTIME RUNNING LIGHT RELAY CIRCUIT

Component Function Check

INFOID:000000009653048

1. CHECK DAYTIME RUNNING LIGHT OPERATION

CONSULT ACTIVE TEST

1. Select "DAYTIME RUNNING LIGHT" of BCM (HEADLAMP) active test item.
2. With operating the test items, check that daytime running light operation.

On : Daytime running light ON

Off : Daytime running light OFF

Is the inspection result normal?

- YES >> Daytime running light relay circuit is normal.
NO >> Refer to [EXL-68. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009653049

1. CHECK DAYTIME RUNNING LIGHT RELAY FUSE

1. Turn ignition switch OFF.
2. Check that the following fuse is not fusing.

Unit	Fuse No.	Capacity
Daytime running light relay	#59	10 A

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace the fuse after repairing the applicable circuit.

2. CHECK DAYTIME RUNNING LIGHT RELAY POWER SUPPLY

1. Remove daytime running light relay.
2. Check voltage between daytime running light relay harness connector and ground.

(+)		(-)	Voltage (Approx.)
Daytime running light relay			
Connector	Terminal	Ground	Battery voltage
E17	1		
	5		

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace harness.

3. CHECK DAYTIME RUNNING LIGHT RELAY

Check daytime running light relay. Refer to [EXL-69. "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Replace daytime running light relay.

4. CHECK DAYTIME RUNNING LIGHT RELAY CONTROL SIGNAL OUTPUT

CONSULT ACTIVE TEST

1. Install daytime running light relay.
2. Turn ignition switch ON.
3. Select "DAYTIME RUNNING LIGHT" of BCM (HEADLAMP) active test item.
4. With operating the test item, check voltage between IPDM E/R harness connector and ground.

DAYTIME RUNNING LIGHT RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

(+)		(-)	Test item	Voltage (Approx.)	
IPDM E/R					
Connector	Terminal				
E346	105	Ground	DAYTIME RUNNING LIGHT	On	0 V
			Off	Battery voltage	

Is the inspection result normal?

- YES >> Daytime running light relay circuit is OK.
- NO-1 (Fixed at 0 V)>>GO TO 5.
- NO-2 (Fixed at battery voltage) >>Replace IPDM E/R.

5.CHECK DAYTIME RUNNING LIGHT RELAY CONTROL SIGNAL OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Remove daytime running light relay.
3. Disconnect IPDM E/R harness connector.
4. Check continuity between IPDM E/R harness connector and daytime running light relay harness connector.

IPDM E/R		Daytime running light relay		Continuity
Connector	Terminal	Connector	Terminal	
E346	105	E17	2	Existed

Is the inspection result normal?

- YES >> GO TO 6.
- NO >> Repair or replace harness.

6.CHECK DAYTIME RUNNING LIGHT RELAY CONTROL SIGNAL SHORT CIRCUIT

Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E346	105		Not existed

Is the inspection result normal?

- YES >> Replace IPDM E/R.
- NO >> Repair or replace harness.

Component Inspection

INFOID:000000009653050

EXL

1.CHECK DAYTIME RUNNING LIGHT RELAY

1. Turn the ignition switch OFF.
2. Remove daytime running light relay.
3. Apply battery voltage to daytime running light relay- between terminals 1 and 2.
4. Check continuity between daytime running light relay terminals.

Daytime running light relay			Condition	Continuity
Terminal				
E17	5	3	Apply	Existed
			Not Apply	Not existed
	4		Apply	Not existed
			Not Apply	Existed

Is the inspection result normal?

- YES >> Daytime running light relay is normal.
- NO >> Replace daytime running light relay.

XENON HEADLAMP

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

XENON HEADLAMP

Diagnosis Procedure

INFOID:000000009653051

1.CHECK XENON BULB

Install the normal bulb to the applicable headlamp. Check that the lighting switch is turned ON.

Is the headlamp turned ON?

- YES >> Replace xenon bulb.
- NO >> GO TO 2.

2.CHECK HID CONTROL UNIT

Install the normal HID control unit to the applicable headlamp. Check that the lighting switch is turned ON.

Is the headlamp turned ON?

- YES >> Replace HID control unit.
- NO >> Xenon headlamp is normal. Check headlamp control system.

HEADLAMP AIMING SYSTEM (MANUAL)

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

HEADLAMP AIMING SYSTEM (MANUAL)


Component Inspection

INFOID:000000009653052

1. CHECK HEADLAMP AIMING SWITCH

1. Turn ignition switch OFF.
2. Remove headlamp aiming switch.
3. Check resistance among each headlamp aiming switch terminal.

Headlamp aiming switch		Condition	Resistance (Approx.)
Terminal		Switch position	
1	2	0	A: 1000 Ω
		1	B: 750 Ω
		2	C: 365 Ω
		3	D: 221 Ω
	3	—	E: 390 Ω

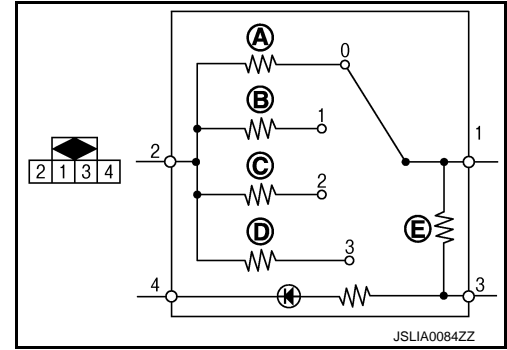

Is the inspection result normal?

- YES >> Headlamp aiming switch is normal.
 NO >> Replace the headlamp aiming switch.

A
B
C
D
E
F
G
H
I
J
K

EXL

M
N
O
P

PARKING LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

PARKING LAMP CIRCUIT

Component Function Check

INFOID:000000009653053

1.CHECK PARKING LAMP OPERATION

CONSULT ACTIVE TEST

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the test items, check that the parking lamp is turned ON.

TAIL : Parking lamp ON
Off : Parking lamp OFF

Is the inspection result normal?

- YES >> Parking lamp circuit is normal.
NO >> Refer to [EXL-72. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009653054

1.CHECK PARKING LAMP FUSE

1. Turn ignition switch OFF.
2. Check that the following fuse is not fusing.

Unit	Location	Fuse No.	Capacity
<ul style="list-style-type: none">• Parking lamp• Front side marker lamp	IPDM E/R	#52	10 A

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.

2.CHECK PARKING LAMP SHORT CIRCUIT

1. Disconnect the following connectors.
 - IPDM E/R
 - Front combination lamp
 - Front side marker lamp
 - Headlamp aiming motor
2. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E346	91		Not existed
	92		
	93		
	94		

Is the inspection result normal?

- YES >> Replace fuse. (Replace IPDM E/R if fusing is found again.)
NO >> Repair or replace harness. And then replace the fuse.

3.CHECK PARKING LAMP BULB

Check applicable lamp bulb.

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Replace bulb.

4.CHECK PARKING LAMP OUTPUT VOLTAGE

CONSULT ACTIVE TEST

PARKING LAMP CIRCUIT

[XENON TYPE]

< DTC/CIRCUIT DIAGNOSIS >

1. Disconnect front combination lamp connector.
2. Turn ignition switch ON.
3. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
4. With operating the test items, check voltage between IPDM E/R harness connector and ground.

(+)		(-)	Test item	Voltage (Approx.)	
IPDM E/R					
Connector	Terminal				
RH	E346	91	EXTERNAL LAMPS	TAIL	Battery voltage
				Off	0 V
LH	92	TAIL		Battery voltage	
		Off		0 V	

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace IPDM E/R.

5. CHECK PARKING LAMP OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front combination lamp harness connector.

IPDM E/R		Front combination lamp		Continuity
Connector	Terminal	Connector	Terminal	
RH	E346	91	E349	Existed
LH		92	E348	

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace harness.

6. CHECK PARKING LAMP GROUND OPEN CIRCUIT

Check continuity between front combination lamp harness connector and ground.

Front combination lamp		Ground	Continuity
Connector	Terminal		
RH	E349	2	Existed
LH	E348		

Is the inspection result normal?

YES >> Check corresponding bulb socket and harness. Repair or replace if necessary.

NO >> Repair or replace harness.

FRONT SIDE MARKER LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

FRONT SIDE MARKER LAMP CIRCUIT

Component Function Check

INFOID:000000009653055

1. CHECK PARKING LAMP OPERATION

Check that the parking lamp is turned ON.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check parking lamp circuit. Refer to [EXL-72, "Component Function Check"](#).

2. CHECK FRONT SIDE MARKER LAMP OPERATION

ⓐ CONSULT ACTIVE TEST

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.

2. With operating the test items, check that the front side marker lamp is turned ON.

TAIL : Front side marker lamp ON

Off : Front side marker lamp OFF

Is the inspection result normal?

YES >> Front side marker lamp circuit is normal.

NO >> Refer to [EXL-74, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009653056

1. CHECK FRONT SIDE MARKER LAMP BULB

Check applicable lamp bulb.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace bulb.

2. CHECK FRONT SIDE MARKER LAMP OPEN CIRCUIT

1. Turn ignition switch OFF.

2. Disconnect IPDM E/R connector and front side marker lamp connector.

3. Check continuity between IPDM E/R harness connector and front side marker lamp harness connector.

IPDM E/R		Front side marker lamp		Continuity
Connector	Terminal	Connector	Terminal	
RH	E346		E321	Existed
LH			E320	
			1	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

3. CHECK FRONT SIDE MARKER LAMP GROUND OPEN CIRCUIT

Check continuity between front side marker lamp harness connector and ground.

Front side marker lamp		Ground	Continuity
Connector	Terminal		
RH	E321	2	Existed
LH	E320		

Is the inspection result normal?

YES >> Check corresponding bulb socket and harness. Repair or replace if necessary.

NO >> Repair or replace harness.

TAIL LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

TAIL LAMP CIRCUIT

Component Function Check

INFOID:000000009653057

1.CHECK TAIL LAMP OPERATION

CONSULT ACTIVE TEST

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the test items, check that the tail lamp is turned ON.

TAIL : Tail Lamp ON
Off : Tail lamp OFF

Is the inspection result normal?

- YES >> Tail lamp circuit is normal.
NO >> Refer to [EXL-75, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009653058

1.CHECK TAIL LAMP FUSE

1. Turn ignition switch OFF.
2. Check that the following fuse is not fusing.

Unit	Location	Fuse No.	Capacity
<ul style="list-style-type: none">• Tail lamp• license plate lamp	IPDM E/R	#53	10 A

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.

2.CHECK TAIL LAMP SHORT CIRCUIT

1. Disconnect IPDM E/R connector, licence plate lamp connector and rear combination lamp connector.
2. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E10	7		Not existed

Is the inspection result normal?

- YES >> Replace fuse. (Replace IPDM E/R if fusing is found again.)
NO >> Repair or replace harness. And then replace the fuse.

3.CHECK TAIL LAMP BULB

Check applicable lamp bulb.

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Replace bulb.

4.CHECK TAIL LAMP OUTPUT VOLTAGE

CONSULT ACTIVE TEST

1. Disconnect rear combination lamp connector.
2. Turn ignition switch ON.
3. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
4. With operating the test items, check voltage between IPDM E/R harness connector and ground.

TAIL LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

(+)		(-)	Test item		Voltage (Approx.)
IPDM E/R					
Connector	Terminal				
E10	7	Ground	EXTERNAL LAMPS	TAIL	Battery voltage
				Off	0 V

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace IPDM E/R.

5. CHECK TAIL LAMP OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and rear combination lamp harness connector.

IPDM E/R		Rear combination lamp		Continuity
Connector	Terminal	Connector	Terminal	
RH	E10	7	B205	Existed
LH			B80	
			1	

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace harness.

6. CHECK TAIL LAMP GROUND OPEN CIRCUIT

Check continuity between rear combination lamp harness connector and ground.

Rear combination lamp		Ground	Continuity
Connector	Terminal		
RH	B205	3	Existed
LH	B80		

Is the inspection result normal?

YES >> Check corresponding bulb socket and harness. Repair or replace if necessary.

NO >> Repair or replace harness.

LICENSE PLATE LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

LICENSE PLATE LAMP CIRCUIT

Component Function Check

INFOID:000000009653059

1. CHECK TAIL LAMP OPERATION

Check that the tail lamp is turned ON.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check tail lamp circuit. Refer to [EXL-75, "Component Function Check"](#).

2. CHECK LICENSE PLATE LAMP OPERATION

Ⓜ CONSULT ACTIVE TEST

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.

2. With operating the lighting switch, check that the license plate lamp is turned ON.

TAIL : License plate lamp ON

Off : License plate lamp OFF

Is the inspection result normal?

YES >> License plate lamp circuit is normal.

NO >> Refer to [EXL-77, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009653060

1. CHECK LICENSE PLATE LAMP BULB

Check the applicable lamp bulb.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace bulb.

2. CHECK LICENSE PLATE LAMP OPEN CIRCUIT

1. Turn ignition switch OFF.

2. Disconnect IPDM E/R connector and license plate lamp connector.

3. Check continuity between IPDM E/R harness connector and license plate lamp harness connector.

IPDM E/R		License plate lamp		Continuity
Connector	Terminal	Connector	Terminal	
RH	E10	7	D163	Existed
LH			D162	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

3. CHECK LICENSE PLATE LAMP GROUND OPEN CIRCUIT

Check continuity between license plate lamp harness connector and ground.

License plate lamp		Ground	Continuity
Connector	Terminal		
RH	D163	2	Existed
LH	D162		

Is the inspection result normal?

YES >> Check corresponding bulb socket and harness. Repair or replace if necessary.

NO >> Repair or replace harness.

TURN SIGNAL LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

TURN SIGNAL LAMP CIRCUIT

Component Function Check

INFOID:000000009653061

1.CHECK TURN SIGNAL LAMP

ⓅCONSULT ACTIVE TEST

1. Select "FLASHER" of BCM (FLASHER) active test item.
2. With operating the test items, check that the turn signal lamps is turned ON.

LH : Turn signal lamps (LH) ON

RH : Turn signal lamps (RH) ON

Off : Turn signal lamps OFF

Is the inspection result normal?

YES >> Turn signal lamp circuit is normal.

NO >> Refer to [EXL-78, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009653062

1.CHECK TURN SIGNAL LAMP

ⓅCONSULT ACTIVE TEST

1. Select "FLASHER" of BCM (FLASHER) active test item.
2. With operating the test items, check that the turn signal lamps is turned ON.

LH : Turn signal lamps (LH) ON

RH : Turn signal lamps (RH) ON

Off : Turn signal lamps OFF

Which turn signal lamp does not turn ON?

Side turn signal lamp>>GO TO 3.

Other than side turn signal lamp>>GO TO 2.

2.CHECK TURN SIGNAL LAMP BULB

Check the applicable lamp bulb.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace bulb.

3.CHECK TURN SIGNAL LAMP OUTPUT VOLTAGE

1. Turn ignition switch OFF.
2. Disconnect front combination lamp connector, side turn signal lamp connector and rear combination lamp connector.
3. Turn ignition switch ON.
4. With operating the turn signal switch, check voltage between BCM harness connector and ground.

TURN SIGNAL LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

(+)		(-)	Condition	Voltage (Approx.)	
BCM					
Connector	Terminal				
LH	M123	Ground	Turn signal switch	LH	
				60	OFF
RH	61			RH	
				OFF	0 V

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> GO TO 5.

4. CHECK TURN SIGNAL LAMP OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between BCM harness connector and front combination lamp, door mirror or rear combination lamp harness connector.

Front turn signal lamp

BCM		Front combination lamp		Continuity
Connector	Terminal	Connector	Terminal	
RH	M123	E349	3	Existed
LH		E348		

Side turn signal lamp

BCM		Door mirror		Continuity
Connector	Terminal	Connector	Terminal	
Passenger side	M123	D3	20	Existed
Driver side		D43		

Rear turn signal lamp

BCM		Rear combination lamp		Continuity
Connector	Terminal	Connector	Terminal	
RH	M123	B205	4	Existed
LH		B80		

Is the inspection result normal?

- YES >> GO TO 6.
- NO >> Repair or replace harness.

5. CHECK TURN SIGNAL LAMP SHORT CIRCUIT

Check continuity between BCM harness connector and ground.

TURN SIGNAL LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

BCM			Ground	Continuity
Connector		Terminal		Not existed
RH	M123	61		
LH		60		

Is the inspection result normal?

YES-1 >> (When side turn signal lamp does not turn ON) Replace BCM. Refer to [BCS-98. "Removal and Installation"](#).

YES-2 >> (When lamp other than side turn signal lamp does not turn ON) Check each bulb socket for internal short circuit, and if check result is normal, replace BCM. Refer to [BCS-98. "Removal and Installation"](#).

NO >> Repair or replace harness.

6. CHECK TURN SIGNAL LAMP GROUND OPEN CIRCUIT

Check continuity between BCM harness connector and front combination lamp, door mirror or rear combination lamp and ground.

Front turn signal lamp

Front combination lamp			Ground	Continuity
Connector		Terminal		Existed
RH	E349	2		
LH	E348			

Side turn signal lamp

Door mirror			Ground	Continuity
Connector		Terminal		Existed
Passenger side	D3	19		
Driver side	D43			

Rear turn signal lamp

Rear combination lamp			Ground	Continuity
Connector		Terminal		Existed
RH	B205	3		
LH	B80			

Is the inspection result normal?

YES-1 >> (When side turn signal lamp does not turn ON) Replace door mirror assembly.

YES-2 >> (When lamp other than side turn signal lamp does not turn ON) Check corresponding bulb socket and harness. Repair or replace if necessary.

NO >> Repair or replace harness.

FRONT FOG LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

FRONT FOG LAMP CIRCUIT

Component Function Check

INFOID:000000009653063

1.CHECK FRONT FOG LAMP OPERATION

CONSULT ACTIVE TEST

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the test items, check that the front fog lamp is turned ON.

Fog : Front fog lamp ON
Off : Front fog lamp OFF

Is the measurement normal?

- YES >> Front fog lamp circuit is normal.
 NO >> Refer to [EXL-81, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009653064

1.CHECK FRONT FOG LAMP BULB

Check the applicable lamp bulb.

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Replace bulb.

2.CHECK FRONT FOG LAMP OUTPUT VOLTAGE

CONSULT ACTIVE TEST

1. Turn ignition switch OFF.
2. Disconnect front fog lamp connector.
3. Turn ignition switch ON.
4. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
5. With operating the test items, check the voltage between IPDM E/R harness connector and ground.

(+)			(-)	Test item	Voltage (Approx.)	
IPDM E/R						
Connector	Terminal					
RH	E345	86	Ground	EXTERNAL LAMPS	Fog	Battery voltage
					Off	0 V
LH		87			Fog	Battery voltage
					Off	0 V

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> Replace IPDM E/R.

3.CHECK FRONT FOG LAMP OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front fog lamp harness connector.

IPDM E/R			Front fog lamp		Continuity
Connector	Terminal		Connector	Terminal	
RH	E345	86	E402	1	Existed
LH			87		

Is the inspection result normal?

- YES >> GO TO 4.

FRONT FOG LAMP CIRCUIT

[XENON TYPE]

< DTC/CIRCUIT DIAGNOSIS >

NO >> Repair or replace harness.

4. CHECK FRONT FOG LAMP GROUND CIRCUIT OPEN CIRCUIT

Check continuity between front fog lamp harness connector and ground.

Front fog lamp		Ground	Continuity
Connector	Terminal		
RH	E402	2	Existed
LH	E331		

Is the inspection result normal?

YES >> Refer to [GI-42, "Intermittent Incident"](#).

NO >> Repair or replace harness.

OPTICAL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

OPTICAL SENSOR

Component Function Check

INFOID:000000009653065

1.CHECK OPTICAL SENSOR SIGNAL BY CONSULT

CONSULT DATA MONITOR

1. Turn ignition switch ON.
2. Select "OPTISEN (DTCT)" of BCM (HEADLAMP) data monitor item.
3. Turn lighting switch AUTO.
4. With the optical sensor illuminating, check the monitor status.

Monitor item	Condition		Voltage (Approx.)
OPTISEN (DTCT)	Optical sensor	When illuminating	3.1 V or more *
		When shutting off light	0.6 V or less

*: Illuminates the optical sensor. The value may be less than the standard value if brightness is weak.

Is the inspection result normal?

- YES >> Optical sensor is normal.
 NO >> Refer to [EXL-83, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009653066

1.CHECK OPTICAL SENSOR POWER SUPPLY INPUT

1. Turn ignition switch ON.
2. Turn lighting switch AUTO.
3. Check voltage between optical sensor harness connector and ground.

(+)		(-)	Voltage (Approx.)
Optical sensor			
Connector	Terminal	Ground	5 V
M17	1		

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> GO TO 4.

2.CHECK OPTICAL SENSOR GROUND INPUT

Check voltage between optical sensor harness connector and ground.

(+)		(-)	Voltage (Approx.)
Optical sensor			
Connector	Terminal	Ground	0 V
M17	3		

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> GO TO 6.

3.CHECK OPTICAL SENSOR SIGNAL OUTPUT

With illuminating the optical sensor, check voltage between optical sensor harness connector and ground.

OPTICAL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

(+)		(-)	Condition	Voltage (Approx.)
Optical sensor				
Connector	Terminal			
M17	2	Ground	Optical sensor	When illuminating 3.1 V or more *
				When shutting off light 0.6 V or less

*: Illuminate the optical sensor. The value may be less than the standard if brightness is weak.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace the optical sensor.

4. CHECK OPTICAL SENSOR OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect optical sensor connector and BCM connector.
3. Check continuity between optical sensor harness connector and BCM harness connector.

Optical sensor		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M17	1	M121	17	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace harness.

5. CHECK OPTICAL SENSOR SHORT CIRCUIT

Check continuity between optical sensor harness connector and ground.

Optical sensor		Ground	Continuity
Connector	Terminal		
M17	1		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-98, "Removal and Installation"](#).

NO >> Repair or replace harness.

6. CHECK OPTICAL SENSOR GROUND OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect optical sensor connector and BCM connector.
3. Check continuity between optical sensor harness connector and BCM harness connector.

Optical sensor		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M17	3	M121	18	Existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-98, "Removal and Installation"](#).

NO >> Repair or replace harness.

7. CHECK OPTICAL SENSOR SIGNAL OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect optical sensor connector and BCM connector.
3. Check continuity between optical sensor harness connector and BCM harness connector.

OPTICAL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

Optical sensor		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M17	2	M121	14	Existed

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair or replace harness.

8. CHECK OPTICAL SENSOR SHORT CIRCUIT

Check continuity between optical sensor harness connector and ground.

Optical sensor		Ground	Continuity
Connector	Terminal		
M17	2		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-98, "Removal and Installation"](#).

NO >> Repair or replace harness.

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

HAZARD SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

HAZARD SWITCH

Component Function Check

INFOID:000000009653067

1.CHECK HAZARD SWITCH SIGNAL BY CONSULT

CONSULT DATA MONITOR

1. Turn ignition switch ON.
2. Select "HAZARD SW" of BCM (FLASHER) data monitor item.
3. With operating the hazard switch, check the monitor status.

Monitor item	Condition		Monitor status
HAZARD SW	Hazard switch	ON	On
		OFF	Off

Is the inspection result normal?

- YES >> Hazard switch circuit is normal.
 NO >> Refer to [EXL-86, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009653068

1.CHECK HAZARD SWITCH SIGNAL INPUT

1. Turn ignition switch OFF.
2. Disconnect hazard switch connector.
3. Check voltage between hazard switch connector and ground.

(+)		(-)	Voltage (Approx.)
Hazard switch			
Connector	Terminal	Ground	12 V
M45	2		

Is the inspection result normal?

- YES >> GO TO 4.
 NO >> GO TO 2.

2.CHECK HAZARD SWITCH SIGNAL OPEN CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between hazard switch harness connector and BCM harness connector.

Hazard switch		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M45	2	M121	29	Existed

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> Repair or replace harness.

3.CHECK HAZARD SWITCH SIGNAL SHORT CIRCUIT

Check continuity between hazard switch harness connector and ground.

Hazard switch		Ground	Continuity
Connector	Terminal		
M45	2		Not existed

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-98, "Removal and Installation"](#).
 NO >> Repair or replace harness.

HAZARD SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

4.CHECK HAZARD SWITCH GROUND OPEN CIRCUIT

Check continuity between hazard switch harness connector and ground.

Hazard switch		Ground	Continuity
Connector	Terminal		Existed
M45	1		

Is the inspection result normal?

- YES >> Replace hazard switch.
- NO >> Repair or replace harness.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

EXL

EXTERIOR LIGHTING SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[XENON TYPE]

SYMPTOM DIAGNOSIS

EXTERIOR LIGHTING SYSTEM SYMPTOMS WITHOUT DAYTIME RUNNING LIGHT SYSTEM

WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Symptom Table

INFOID:000000009653069

CAUTION:

Perform the self-diagnosis with CONSULT before the symptom diagnosis. Perform the trouble diagnosis if any DTC is detected.

Symptom		Possible cause	Inspection item
Headlamp (HI) is not turned ON.	One side	<ul style="list-style-type: none"> • Fuse • Halogen bulb (HI) • Harness between IPDM E/R and headlamp (HI) • Harness between headlamp (HI) and ground • IPDM E/R 	Headlamp (HI) circuit Refer to EXL-62, "WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Component Function Check" .
	Both sides	Symptom diagnosis "BOTH SIDE HEADLAMPS (HI) ARE NOT TURNED ON" Refer to EXL-94, "WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Diagnosis Procedure" .	
High beam indicator lamp is not turned ON. [Headlamp (HI) is turned ON.]		Combination meter	<ul style="list-style-type: none"> • Combination meter • Data monitor "HI-BEAM IND" • BCM (HEAD LAMP) • Active test "HEADLAMP"
Headlamp (LO) is not turned ON.	One side	<ul style="list-style-type: none"> • Fuse • Xenon bulb (LO) • Harness between IPDM E/R and headlamp lamp (LO) • Harness between headlamp (LO) and ground • IPDM E/R 	Headlamp (LO) circuit Refer to EXL-66, "Component Function Check" .
	Both sides	Symptom diagnosis "BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON" Refer to EXL-96, "Diagnosis Procedure" .	
Each lamp is not turned ON/OFF with lighting switch AUTO.		<ul style="list-style-type: none"> • Combination switch • Harness between combination switch and BCM • BCM 	Combination switch Refer to BCS-96, "Symptom Table" .
		<ul style="list-style-type: none"> • Optical sensor • Harness between optical sensor and BCM • BCM 	Optical sensor Refer to EXL-83, "Component Function Check" .
Parking lamp is not turned ON.		<ul style="list-style-type: none"> • Fuse • Parking lamp bulb • Harness between IPDM E/R and front combination lamp • Harness between front combination lamp and ground • IPDM E/R 	Parking lamp circuit Refer to EXL-72, "Component Function Check" .
Front side marker lamp is not turned ON.		<ul style="list-style-type: none"> • Front side marker lamp bulb • Harness between IPDM E/R and front side marker lamp • Harness between front side marker lamp and ground 	Front side marker lamp circuit Refer to EXL-74, "Component Function Check" .

EXTERIOR LIGHTING SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[XENON TYPE]

Symptom	Possible cause	Inspection item	
Tail lamp (Rear side marker lamp) is not turned ON.	<ul style="list-style-type: none"> • Fuse • Tail lamp bulb • Harness between IPDM E/R and rear combination lamp • Harness between rear combination lamp and ground • IPDM E/R 	Tail lamp circuit Refer to EXL-75, "Component Function Check" .	
License plate lamp is not turned ON.	<ul style="list-style-type: none"> • License plate lamp bulb • Harness between IPDM E/R and license plate lamp • Harness between license plate lamp and ground 	License plate lamp circuit Refer to EXL-77, "Component Function Check" .	
Parking lamp, side marker lamp, tail lamp and license plate lamp are not turned ON.	Symptom diagnosis "PARKING, SIDE MARKER, LICENSE PLATE AND TAIL LAMPS ARE NOT TURNED ON" Refer to EXL-97, "Diagnosis Procedure" .		
Tail lamp indicator is not turned ON. (Exterior lamps are turned ON.)	Combination meter	<ul style="list-style-type: none"> • Combination meter • Data monitor "LIGHT IND" • BCM (HEADLAMP) • Active test "TAIL LAMP" 	
Turn signal lamp does not blink.	Indicator lamp is normal. (Applicable side performs high flasher activation.)	<ul style="list-style-type: none"> • Turn signal lamp bulb • Door mirror • Harness between BCM and each turn signal lamp • Harness between each turn signal lamp and ground 	Turn signal lamp circuit Refer to EXL-78, "Component Function Check" .
	Indicator lamp is included.	<ul style="list-style-type: none"> • Combination switch • Harness between combination switch and BCM • BCM 	Combination switch Refer to BCS-96, "Symptom Table" .
Turn signal indicator lamp does not blink. (Turn signal lamp is normal.)	One side	Combination meter	—
	Both sides (Always)	<ul style="list-style-type: none"> • Turn signal indicator lamp signal • BCM • Combination meter 	<ul style="list-style-type: none"> • Combination meter • Data monitor "TURN IND" • BCM (FLASHER) • Active test "FLASHER"
	Both sides (Only when activating hazard warning lamp with ignition switch OFF)	<ul style="list-style-type: none"> • Combination meter power supply and ground circuit • Combination meter 	Combination meter Power supply and ground circuit Refer to MWI-72, "COMBINATION METER : Diagnosis Procedure" .
<ul style="list-style-type: none"> • Hazard warning lamp does not activate. • Hazard warning lamp continues activating. (Turn signal is normal.) 	<ul style="list-style-type: none"> • Hazard switch • Harness between hazard switch and BCM • Harness between hazard switch and ground • BCM 	Hazard switch circuit Refer to EXL-86, "Component Function Check" .	
Front fog lamp is not turned ON.	One side	<ul style="list-style-type: none"> • Front fog lamp bulb • Harness between IPDM E/R and front fog lamp • Harness between front fog lamp and ground • IPDM E/R 	Front fog lamp circuit Refer to EXL-81, "Component Function Check" .
	Both sides	Symptom diagnosis "BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON" Refer to EXL-98, "Diagnosis Procedure" .	

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

WITH DAYTIME RUNNING LIGHT SYSTEM

EXTERIOR LIGHTING SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[XENON TYPE]

WITH DAYTIME RUNNING LIGHT SYSTEM : Symptom Table

INFOID:00000009653070

CAUTION:

Perform the self-diagnosis with CONSULT before the symptom diagnosis. Perform the trouble diagnosis if any DTC is detected.

Symptom	Possible cause	Inspection item
Headlamp (HI) is not turned ON.	<ul style="list-style-type: none"> • Fuse • Halogen bulb (HI) • Harness between IPDM E/R and headlamp (HI) • Harness between headlamp (HI) and ground • IPDM E/R 	Headlamp (HI) circuit Refer to EXL-63, "WITH DAYTIME RUNNING LIGHT SYSTEM : Component Function Check" .
		<ul style="list-style-type: none"> • Harness between IPDM E/R and daytime running light relay • Daytime running light relay • IPDM E/R
	Both sides	Symptom diagnosis "BOTH SIDE HEADLAMPS (HI) ARE NOT TURNED ON" Refer to EXL-94, "WITH DAYTIME RUNNING LIGHT SYSTEM : Diagnosis Procedure" .
High beam indicator lamp is not turned ON. [Headlamp (HI) is turned ON.]	Combination meter	<ul style="list-style-type: none"> • Combination meter • Data monitor "HI-BEAM IND" • BCM (HEAD LAMP) • Active test "HEADLAMP"
Headlamp (LO) is not turned ON.	<ul style="list-style-type: none"> • Fuse • Xenon bulb (LO) • Harness between IPDM E/R and headlamp lamp (LO) • Harness between headlamp (LO) and ground • IPDM E/R 	Headlamp (LO) circuit Refer to EXL-66, "Component Function Check" .
		Both sides
Each lamp is not turned ON/OFF with lighting switch AUTO.	<ul style="list-style-type: none"> • Combination switch • Harness between combination switch and BCM • BCM 	Combination switch Refer to BCS-96, "Symptom Table" .
	<ul style="list-style-type: none"> • Optical sensor • Harness between optical sensor and BCM • BCM 	Optical sensor Refer to EXL-83, "Component Function Check" .
Daytime running light is not turned ON. [Headlamp (HI) is turned ON.]	<ul style="list-style-type: none"> • Fuse • Harness between IPDM E/R and daytime running light relay • Daytime running light relay • IPDM E/R • BCM • ECM • Combination meter 	<ul style="list-style-type: none"> • Daytime running light relay circuit Refer to EXL-68, "Component Function Check". • BCM (HEADLAMP) • Data monitor "ENGINE STATE" • Combination meter • Data monitor "PKB SW" • BCM (HEADLAMP) • Active test "DAYTIME RUNNING LIGHT"
Parking lamp is not turned ON.	<ul style="list-style-type: none"> • Fuse • Parking lamp bulb • Harness between IPDM E/R and front combination lamp • IPDM E/R 	Parking lamp circuit Refer to EXL-97, "Diagnosis Procedure" .

EXTERIOR LIGHTING SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[XENON TYPE]

Symptom	Possible cause	Inspection item	
Front side marker lamp is not turned ON.	<ul style="list-style-type: none"> • Front side marker lamp bulb • Harness between IPDM E/R and front side marker lamp • Harness between front side marker lamp and ground • IPDM E/R 	Front side marker lamp circuit Refer to EXL-74, "Component Function Check" .	
Tail lamp (Rear side marker lamp) is not turned ON.	<ul style="list-style-type: none"> • Fuse • Tail lamp bulb • Harness between IPDM E/R and rear combination lamp • Harness between and rear combination lamp and ground 	Tail lamp circuit Refer to EXL-75, "Component Function Check" .	
License plate lamp is not turned ON.	<ul style="list-style-type: none"> • License plate lamp bulb • Harness between IPDM E/R and license plate lamp • Harness between license plate lamp and ground 	License plate lamp circuit Refer to EXL-77, "Component Function Check" .	
Parking lamp, side marker lamp, tail lamp and license plate lamp are not turned ON.	Symptom diagnosis "PARKING, SIDE MARKER, LICENSE PLATE AND TAIL LAMPS ARE NOT TURNED ON" Refer to EXL-97, "Diagnosis Procedure" .		
Tail lamp indicator is not turned ON. (Exterior lamps are turned ON.)	Combination meter	<ul style="list-style-type: none"> • Combination meter Data monitor "LIGHT IND" • BCM (HEADLAMP) Active test "TAIL LAMP" 	
Turn signal lamp does not blink.	Indicator lamp is normal. (Applicable side performs high flasher activation.)	<ul style="list-style-type: none"> • Turn signal lamp bulb • Door mirror • Harness between BCM and each turn signal lamp • Harness between each turn signal lamp and ground 	Turn signal lamp circuit Refer to EXL-78, "Component Function Check" .
	Indicator lamp is included.	<ul style="list-style-type: none"> • Combination switch • Harness between combination switch and BCM • BCM 	Combination switch Refer to BCS-96, "Symptom Table" .
Turn signal indicator lamp does not blink. (Turn signal lamp is normal.)	One side	Combination meter	—
	Both sides (Always)	<ul style="list-style-type: none"> • Turn signal indicator lamp signal • BCM • Combination meter 	<ul style="list-style-type: none"> • Combination meter Data monitor "TURN IND" • BCM (FLASHER) Active test "FLASHER"
	Both sides (Only when activating hazard warning lamp with ignition switch OFF)	<ul style="list-style-type: none"> • Combination meter power supply and ground circuit • Combination meter 	Combination meter Power supply and ground circuit Refer to MWI-72, "COMBINATION METER : Diagnosis Procedure" .
<ul style="list-style-type: none"> • Hazard warning lamp does not activate. • Hazard warning lamp continues activating. (Turn signal is normal.) 	<ul style="list-style-type: none"> • Hazard switch • Harness between hazard switch and BCM • Harness between hazard switch and ground • BCM 	Hazard switch circuit Refer to EXL-86, "Component Function Check" .	

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

EXL

EXTERIOR LIGHTING SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[XENON TYPE]

Symptom		Possible cause	Inspection item
Front fog lamp is not turned ON.	One side	<ul style="list-style-type: none"> • Front fog lamp bulb • Harness between IPDM E/R and front fog lamp • Harness between front fog lamp and ground • IPDM E/R 	Front fog lamp circuit Refer to EXL-81, "Component Function Check" .
	Both sides	Symptom diagnosis "BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON" Refer to EXL-98, "Diagnosis Procedure" .	

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[XENON TYPE]

NORMAL OPERATING CONDITION

Description

INFOID:000000009653071

XENON HEADLAMP

- Brightness and the color of light may change slightly immediately after turning the headlamp ON until the xenon bulb becomes stable. This is normal.
- Illumination time lag may occur between right and left. This is normal.

AUTO LIGHT SYSTEM

The headlamp may not be turned ON/OFF immediately after passing dark area or bright area (short tunnel, sky bridge, shadowed area etc.) while using the auto light system. This causes for the control difference. This is normal.

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

EXL

BOTH SIDE HEADLAMPS (HI) ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

[XENON TYPE]

BOTH SIDE HEADLAMPS (HI) ARE NOT TURNED ON WITH DAYTIME RUNNING LIGHT SYSTEM

WITH DAYTIME RUNNING LIGHT SYSTEM : Description

INFOID:000000009653072

Both side headlamps (HI) are not turned ON when setting to the lighting switch HI or PASS.

WITH DAYTIME RUNNING LIGHT SYSTEM : Diagnosis Procedure

INFOID:000000009653073

1.COMBINATION SWITCH INSPECTION

Check combination switch. Refer to [BCS-96. "Symptom Table"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning part.

2.CHECK HEADLAMP (HI) REQUEST SIGNAL INPUT

ⓂCONSULT DATA MONITOR

1. Select "HL HI REQ" of IPDM E/R data monitor item.
2. With operating the lighting switch, check the monitor status.

Monitor item	Condition	Monitor status
HL HI REQ	Lighting switch (2ND) HI or PASS	On
	LO	Off

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace BCM. Refer to [BCS-98. "Removal and Installation"](#).

3.HEADLAMP (HI) CIRCUIT INSPECTION

Check headlamp (HI) circuit. Refer to [EXL-63. "WITH DAYTIME RUNNING LIGHT SYSTEM : Component Function Check"](#).

Is the inspection result normal?

YES >> Refer to [GI-42. "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning part.

WITHOUT DAYTIME RUNNING LIGHT SYSTEM

WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Description

INFOID:000000009653074

Both side headlamps (HI) are not turned ON when setting to the lighting switch HI or PASS.

WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Diagnosis Procedure

INFOID:000000009653075

1.COMBINATION SWITCH INSPECTION

Check combination switch. Refer to [BCS-96. "Symptom Table"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning part.

2.CHECK HEADLAMP (HI) REQUEST SIGNAL INPUT

ⓂCONSULT DATA MONITOR

1. Select "HL HI REQ" of IPDM E/R data monitor item.
2. With operating the lighting switch, check the monitor status.

Monitor item	Condition	Monitor status
HL HI REQ	Lighting switch (2ND) HI or PASS	On
	LO	Off

BOTH SIDE HEADLAMPS (HI) ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

[XENON TYPE]

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace BCM. Refer to [BCS-98, "Removal and Installation"](#).

3. HEADLAMP (HI) CIRCUIT INSPECTION

Check headlamp (HI) circuit. Refer to [EXL-62, "WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Component Function Check"](#).

Is the inspection result normal?

YES >> Refer to [GI-42, "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning part.

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

[XENON TYPE]

BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON

Description

INFOID:000000009653076

Both side headlamps (LO) are not turned ON in any condition.

Diagnosis Procedure

INFOID:000000009653077

1. CHECK COMBINATION SWITCH

Check combination switch. Refer to [BCS-96. "Symptom Table"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning part.

2. CHECK HEADLAMP (LO) REQUEST SIGNAL INPUT

ⓑ CONSULT DATA MONITOR

1. Select "HL LO REQ" of IPDM E/R data monitor item.
2. With operating the lighting switch, check the monitor status.

Monitor item	Condition	Monitor status
HL LO REQ	Lighting switch	2ND
		OFF
		On
		Off

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace BCM. Refer to [BCS-98. "Removal and Installation"](#).

3. HEADLAMP (LO) CIRCUIT INSPECTION

Check headlamp (LO) circuit. Refer to [EXL-66. "Component Function Check"](#).

Is the inspection result normal?

YES >> Refer to [GI-42. "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning part.

PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

[XENON TYPE]

PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS ARE NOT TURNED ON

Description

INFOID:000000009653078

The parking, license plate, side marker, tail lamps and each illumination are not turned ON in any condition.

Diagnosis Procedure

INFOID:000000009653079

1.COMBINATION SWITCH INSPECTION

Check combination switch. Refer to [BCS-96. "Symptom Table"](#).

Is the combination switch normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning part.

2.CHECK TAIL LAMP RELAY REQUEST SIGNAL INPUT

CONSULT DATA MONITOR

1. Select "TAIL & CLR REQ" of IPDM E/R data monitor item.
2. With operating the lighting switch, check the monitor status.

Monitor item	Condition		Monitor status
TAIL & CLR REQ	Lighting switch	1ST	On
		OFF	Off

Is the inspection result normal?

YES >> Replace IPDM E/R.

NO >> Replace BCM. Refer to [BCS-98. "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

[XENON TYPE]

BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON

Description

INFOID:000000009653080

The front fog lamps are not turned ON in any condition.

Diagnosis Procedure

INFOID:000000009653081

1. CHECK FRONT FOG LAMP FUSE

1. Turn ignition switch OFF.
2. Check that the following fuse is not fusing.

Unit	Location	Fuse No.	Capacity
Front fog lamp	IPDM E/R	#58	15 A

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK FRONT FOG LAMP SHORT CIRCUIT

1. Disconnect front fog connector and IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
RH	E345	86	Not existed
LH		87	

Is the inspection result normal?

- YES >> Replace fuse. (Replace IPDM E/R if the fuse is fusing again.)
NO >> Repair or replace harness. And then replace the fuse.

3. COMBINATION SWITCH INSPECTION

Check combination switch. Refer to [BCS-96, "Symptom Table"](#).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair or replace the malfunctioning part.

4. CHECK FRONT FOG LAMP REQUEST SIGNAL INPUT

CONSULT DATA MONITOR

1. Select "FR FOG REQ" of IPDM E/R data monitor item.
2. With operating the front fog lamp switch, check the monitor status.

Monitor item	Condition	Monitor status
FR FOG REQ	Front fog lamp switch (With lighting switch 2ND)	ON
		OFF

Is the item status normal?

- YES >> GO TO 5.
NO >> Replace BCM. Refer to [BCS-98, "Removal and Installation"](#).

5. FRONT FOG LAMP CIRCUIT INSPECTION

Check the front fog lamp circuit. Refer to [EXL-81, "Component Function Check"](#).

Is the inspection result normal?

- YES >> Refer to [GI-42, "Intermittent Incident"](#).
NO >> Repair or replace the malfunctioning part.

HEADLAMP AIMING ADJUSTMENT

< PERIODIC MAINTENANCE >

[XENON TYPE]

PERIODIC MAINTENANCE

HEADLAMP AIMING ADJUSTMENT

Description

INFOID:000000009653082

preparation before adjusting

NOTE:

- for details, refer to the regulations in your own country.
- perform aiming if the vehicle front body has been repaired and/or the headlamp assembly has been replaced.

before performing aiming adjustment, check the following.

- adjust the tire pressure to the specification.
- fill with fuel, engine coolant and each oil.
- maintain the unloaded vehicle condition. (remove luggage from the passenger compartment and the luggage room.)

NOTE:

do not remove the temporary tire, jack and on-vehicle tool.


- wipe out dirt on the headlamp.

CAUTION:

never use organic solvent (thinner, gasoline etc.)

- ride alone on the driver seat.

aiming adjustment screw

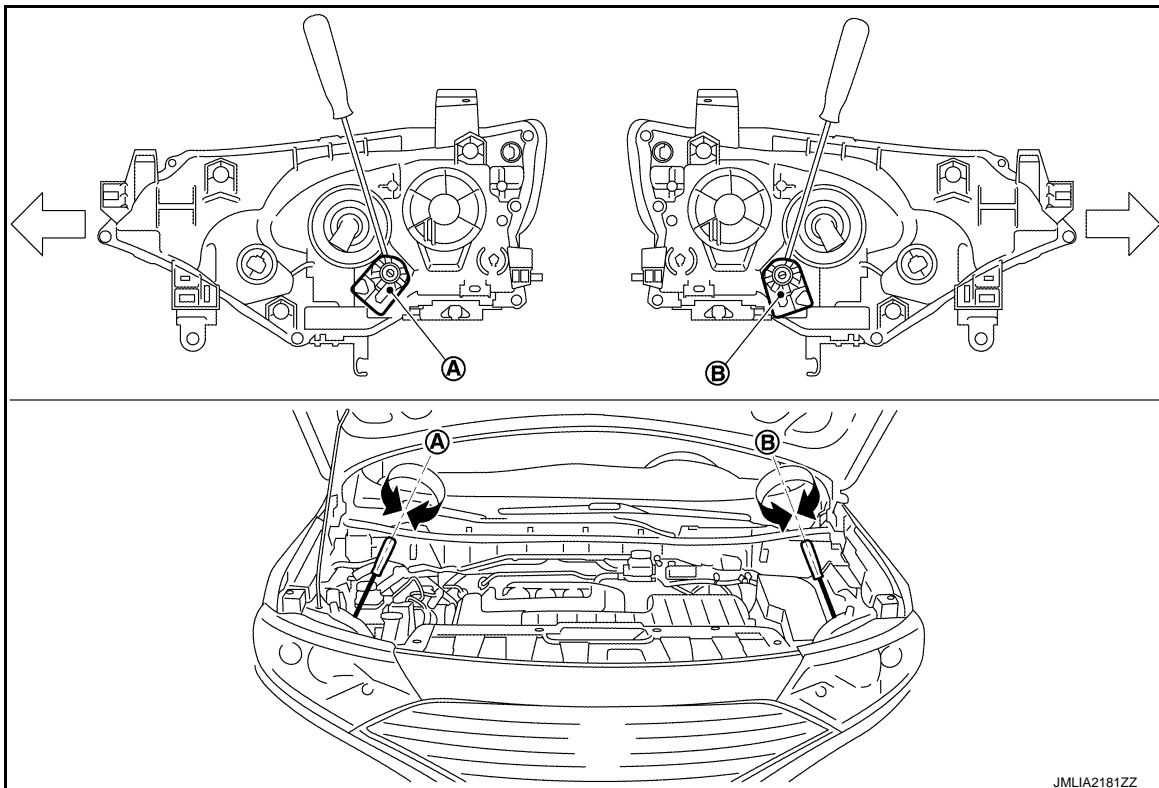

A. Headlamp RH HI/LO (UP/DOWN) adjustment screw

B. Headlamp LH HI/LO (UP/DOWN) adjustment screw

↔: Vehicle center

HEADLAMP AIMING ADJUSTMENT

< PERIODIC MAINTENANCE >

[XENON TYPE]

	Adjustment screw	Screw driver rotation	Facing direction
A	Headlamp RH HI/LO (UP/DOWN)	Clockwise	UP
		Counterclockwise	DOWN
B	Headlamp LH HI/LO (UP/DOWN)	Clockwise	UP
		Counterclockwise	DOWN


Aiming Adjustment Procedure

INFOID:000000009653083

1. Place the screen.
 - NOTE:**
 - Stop the vehicle facing the wall.
 - Place the board on a plain road vertically.
2. Face the vehicle with the screen. Maintain 10 m (32.8 ft) between the headlamp center and the screen.
3. Start the engine. Turn the headlamp (LO) ON.
 - NOTE:**
 - Shut off the headlamp light with the board to prevent from illuminating the adjustment screen.
 - CAUTION:**
 - Never cover the lens surface with a tape etc. The lens is made of resin.**
4. Measure the distance (X) between the horizontal center line of headlamp (H) and the cutoff line (A) within the light axis measurement range (R) from the vertical center line ahead of headlamp (V).

Light axis measurement range (R) : 350 ± 175 mm (13.78 ± 6.89 in)

Low beam distribution on the screen

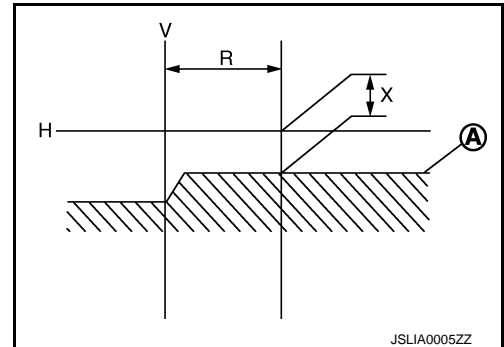


5. Adjust the cutoff line height (X) with the aiming adjustment screw so as to enter in the adjustment range (M–N) according to the horizontal center line of headlamp (H).

unit: mm (in)

Horizontal center line of headlamp (H)	Highest cutoff line height (M)	Lowest cutoff line height (N)
700 (27.56) or less	4 (0.16)	30 (1.18)
701(27.60) – 800 (31.50)	4 (0.16)	30 (1.18)
801 (31.54) or more	17 (0.67)	44 (1.73)

Side view

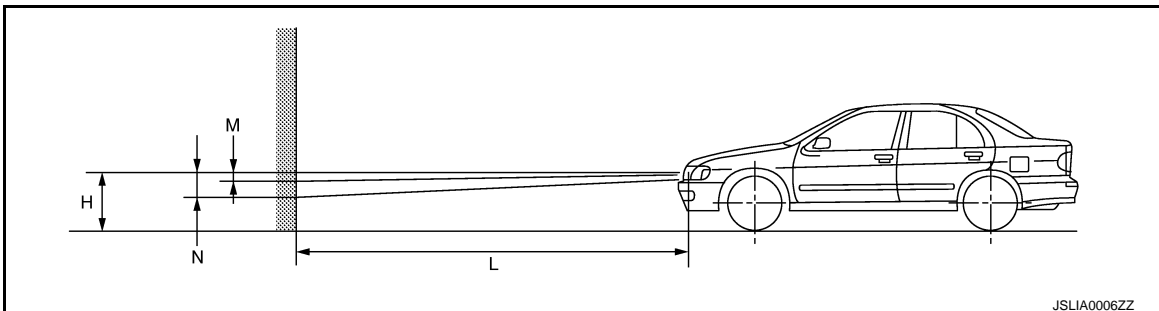

Distance between the headlamp center and the screen (L) : 10 m (32.8 ft)

FRONT FOG LAMP AIMING ADJUSTMENT

< PERIODIC MAINTENANCE >

[XENON TYPE]

FRONT FOG LAMP AIMING ADJUSTMENT

Description

INFOID:000000009653084

PREPARATION BEFORE ADJUSTING

NOTE:

- For details, refer to the regulations in your own country.
- Perform aiming if the vehicle front body has been repaired and/or the front fog lamp assembly has been replaced.

Before performing aiming adjustment, check the following.

- Adjust the tire pressure to the specification.
- Fill with fuel, engine coolant and each oil.
- Maintain the unloaded vehicle condition. (Remove luggage from the passenger compartment and the trunk room.)

NOTE:

Do not remove the temporary tire, jack and on-vehicle tool.

- Wipe out dirt on the front fog lamp.

CAUTION:

Never use organic solvent (thinner, gasoline etc.)

- Ride alone on the driver seat.

AIMING ADJUSTMENT SCREW

- Turn the aiming adjusting screw for adjustment.


A: UP

B: DOWN

- For the position and direction of the adjusting screw, refer to the figure.

NOTE:

A screwdriver or hexagonal wrench [6 mm (0.24 in)] can be used for adjustment.

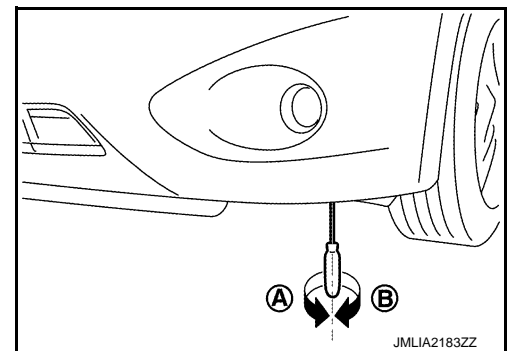

INFOID:000000009653085

Aiming Adjustment Procedure

1. Place the screen.

NOTE:

- Stop the vehicle facing the wall.
- Place the board on a plain road vertically.

2. Face the vehicle with the screen. Maintain 7.63 m (25 ft) between the front fog lamp center and the screen.

3. Start the engine. Turn the front fog lamp ON.

NOTE:

Shut off the headlamp light with the board to prevent from illuminating the adjustment screen.

CAUTION:

Never cover the lens surface with a tape etc. The lens is made of resin.

4. Adjust the cutoff line height (A) with the aiming adjustment screw so that the distance (X) between the horizontal center line of front fog lamp (H) and (A) becomes 100 mm (3.94 in).


A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

FRONT FOG LAMP AIMING ADJUSTMENT

< PERIODIC MAINTENANCE >

[XENON TYPE]

Front fog lamp light distribution on the screen

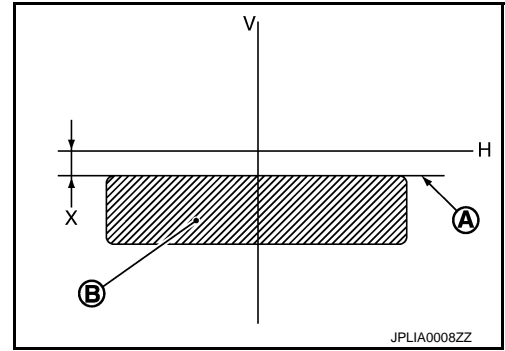

- A : Cutoff line
- B : High illuminance area
- H : Horizontal center line of front fog lamp
- V : Vertical center line of front fog lamp
- X : Cutoff line height

FRONT COMBINATION LAMP

< REMOVAL AND INSTALLATION >

[XENON TYPE]


REMOVAL AND INSTALLATION

FRONT COMBINATION LAMP

Exploded View

INFOID:000000009653086


REMOVAL

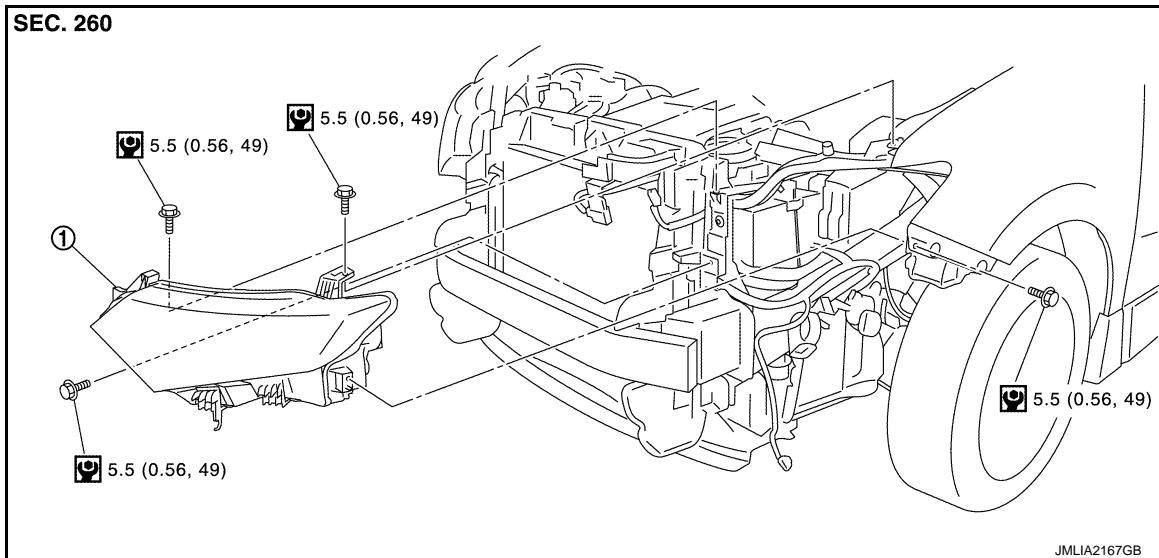

1. Front combination lamp

: N·m (kg·m, in·lb)

DISASSEMBLY

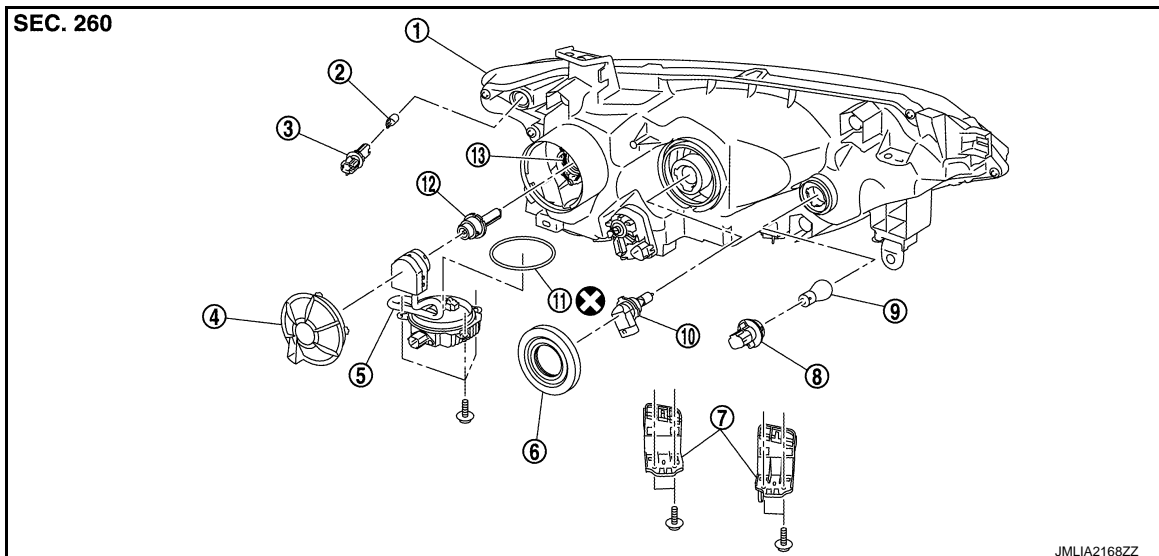

1. Front combination lamp housing assembly

2. Front side marker lamp bulb

3. Front side marker lamp bulb socket

4. Resin cap

5. HID control unit assembly

6. Back cover

7. Bumper bracket

8. Front turn signal lamp/parking lamp bulb socket

9. Front turn signal lamp/parking lamp bulb

10. Halogen bulb (HI)

11. Seal packing


12. Xenon bulb (LO)

FRONT COMBINATION LAMP

< REMOVAL AND INSTALLATION >

[XENON TYPE]

13. Retaining spring

 : Always replace after every disassembly.

Removal and Installation

INFOID:000000009653087

CAUTION:

Disconnect the battery negative terminal or the fuse.

REMOVAL

1. Remove front bumper fascia. Refer to [EXT-12, "Removal and Installation"](#).
2. Remove front combination lamp mounting bolts.
3. Pull out the front combination lamp forward the vehicle, and then disconnect the connector.
4. Remove front combination lamp.

INSTALLATION

Note the following items, and then install in the reverse order of removal.

CAUTION:

- After installation, perform aiming adjustment. Refer to [EXL-99, "Description"](#)
- After installation, check that headlamp lighting. Refer to [EXL-105, "Inspection After Installation \(HID Control Unit\)"](#).

Replacement

INFOID:000000009653088

CAUTION:

- Disconnect the battery negative terminal or the fuse.
- After installing the bulb, install the resin cap and the bulb socket securely for watertightness.
- Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it.
- Never touch bulb by hand while it is lit or right after being turned off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.

HEADLAMP BULB (HI)

1. Disconnect the halogen bulb connector.
2. Rotate the halogen bulb socket counterclockwise and unlock it.
3. Remove halogen bulb socket from the front combination lamp housing assembly.

HEADLAMP BULB (LO)

1. Rotate the resin cap counterclockwise and unlock it.
2. Rotate the xenon bulb counterclockwise and unlock it.
3. Remove retaining spring lock, and then remove xenon bulb from the front combination lamp housing assembly.

CAUTION:

Never break the xenon bulb ceramic tube when replacing the bulb.

FRONT TURN SIGNAL LAMP/PARKING LAMP BULB

1. Rotate the bulb socket counterclockwise and unlock it.
2. Remove the bulb from the bulb socket.

FRONT SIDE MARKER LAMP BULB

1. Rotate the bulb socket counterclockwise and unlock it.
2. Remove the bulb from the bulb socket.

Disassembly and Assembly

INFOID:000000009653089

DISASSEMBLY

1. Rotate the resin cap counterclockwise and unlock it.
2. Rotate the xenon bulb socket counterclockwise and unlock it.
3. Remove the retaining spring lock, and then remove the xenon bulb.

FRONT COMBINATION LAMP

< REMOVAL AND INSTALLATION >

[XENON TYPE]

4. Rotate the halogen bulb socket counterclockwise and unlock it.
5. Remove halogen bulb socket from the front combination lamp assembly.
6. Rotate the front turn signal lamp/parking lamp bulb socket counterclockwise and unlock it.
7. Remove front turn signal lamp/parking lamp bulb.
8. Rotate the front side marker lamp bulb socket counterclockwise and unlock it.
9. Remove the bulb from the front side marker lamp bulb socket.

ASSEMBLY

Assemble in the reverse order of disassembly.

CAUTION:

After installing the bulb, install the resin cap, back cover and the bulb socket securely for watertightness.

Inspection After Installation (HID Control Unit)

INFOID:000000009653090

CAUTION:

Temporarily install the headlamp on the vehicle. Connect the battery to the connector (vehicle side) when checking ON/OFF status.

XENON HEADLAMP LIGHTING CHECK

When recycled HID Control Unit, check the following, when there is abnormality replace the HID Control Unit.

1. Xenon bulb is cold condition (turn OFF more than 10 minutes), and repetition does headlamp turned ON/OFF, check that a headlamp illuminated it surely.
2. Headlamp is turn ON until the xenon bulb becomes stable condition (for about 5 minutes) from cold condition, check that there are not on and off light, abnormality such as blinking.
3. Xenon bulb is warm condition (turn ON more than 15 minutes and turn OFF for 1 minute), and repetition does headlamp turned ON/OFF, check that a headlamp illuminated it surely.
4. Headlamp is turn ON for about 30 minutes, check that there are not on and off light, abnormality such as blinking whether brightness of right and left does not have a difference.

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

FRONT FOG LAMP


< REMOVAL AND INSTALLATION >

[XENON TYPE]

FRONT FOG LAMP

Exploded View


INFOID:000000009653091

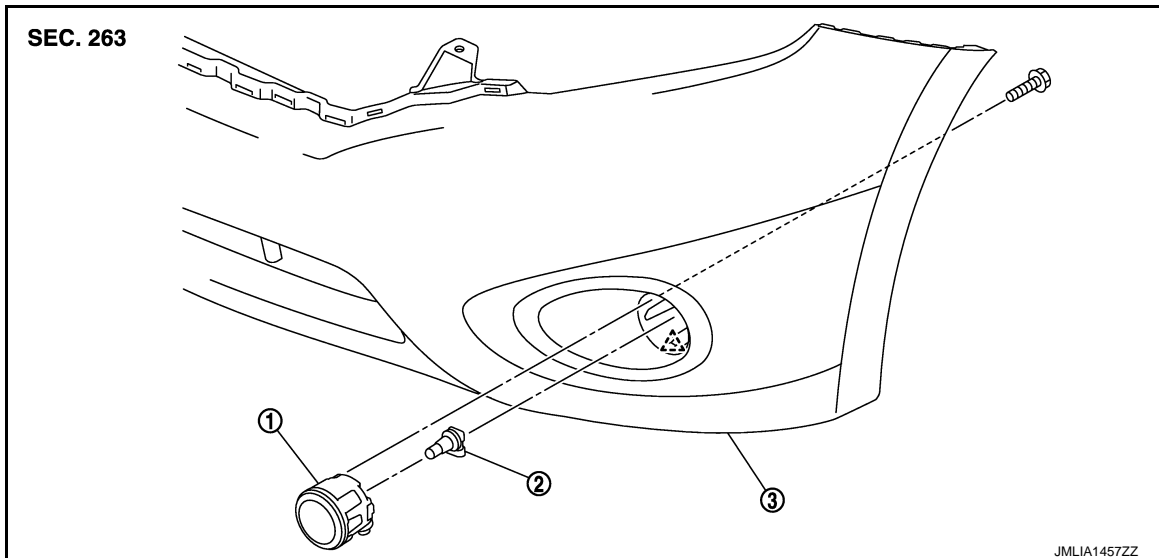

1. Front fog lamp

2. Halogen bulb

3. Front bumper fascia

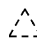 : Pawl

Removal and Installation

INFOID:000000009653092

CAUTION:

Disconnect the battery negative terminal or the fuse.

REMOVAL

1. Remove front fender protector (front) fixing screws and clips, and then keep a service area. Refer to [EXT-23. "Removal and Installation"](#).
2. Disconnect front fog lamp connector.
3. Remove front fog lamp mounting bolt.
4. Disengage fixing pawl, and then remove front fog lamp.

INSTALLATION

Note the following item, and then install in the reverse order of removal.

CAUTION:

After installation, perform aiming adjustment. Refer to [EXL-101. "Description"](#).

Replacement

INFOID:000000009653093

CAUTION:

- Disconnect the battery negative terminal or the fuse.
- Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it.
- Never touch bulb by hand while it is lit or right after being turned off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.

FRONT FOG LAMP BULB


1. Remove front fender protector (front) fixing screws and clips, and then keep a service area. Refer to [EXT-23. "Removal and Installation"](#).

FRONT FOG LAMP

< REMOVAL AND INSTALLATION >

[XENON TYPE]

2. Disconnect front fog lamp bulb connector (1).
3. Rotate the bulb (2) counterclockwise and unlock it.

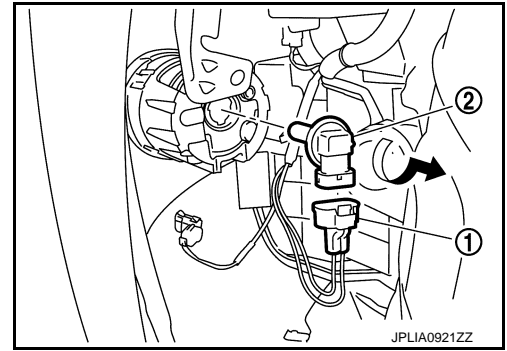

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

OPTICAL SENSOR


< REMOVAL AND INSTALLATION >

[XENON TYPE]

OPTICAL SENSOR

Exploded View


INFOID:000000009653094

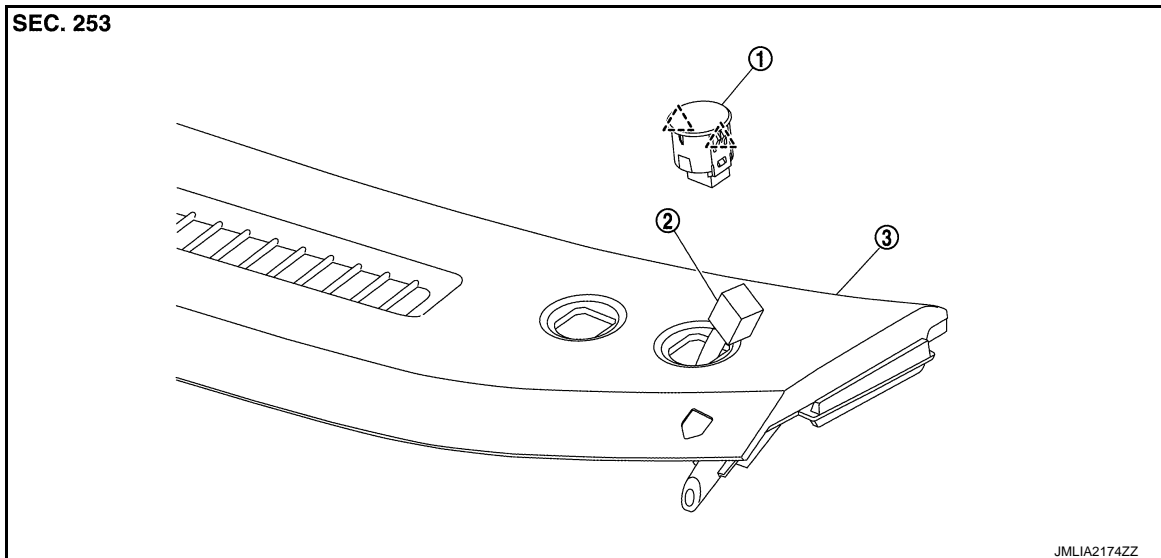

1. Optical sensor

2. Harness connector

3. Instrument upper garnish

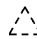 : Pawl

Removal and Installation

INFOID:000000009653095

REMOVAL

1. Insert an appropriate tool between the optical sensor and the instrument upper garnish. Pull out the optical sensor upward.
2. Disconnect the optical sensor connector, and then remove optical sensor.

INSTALLATION

Install in the reverse order of removal.

LIGHTING & TURN SIGNAL SWITCH

< REMOVAL AND INSTALLATION >

[XENON TYPE]

LIGHTING & TURN SIGNAL SWITCH

Exploded View

INFOID:000000009653096

The lighting & turn signal switch is integrated in the combination switch. Refer to [BCS-99, "Exploded View"](#).

- A
- B
- C
- D
- E
- F
- G
- H
- I
- J
- K
- EXL
- M
- N
- O
- P

HAZARD SWITCH


< REMOVAL AND INSTALLATION >

[XENON TYPE]

HAZARD SWITCH


Exploded View

INFOID:000000009653097

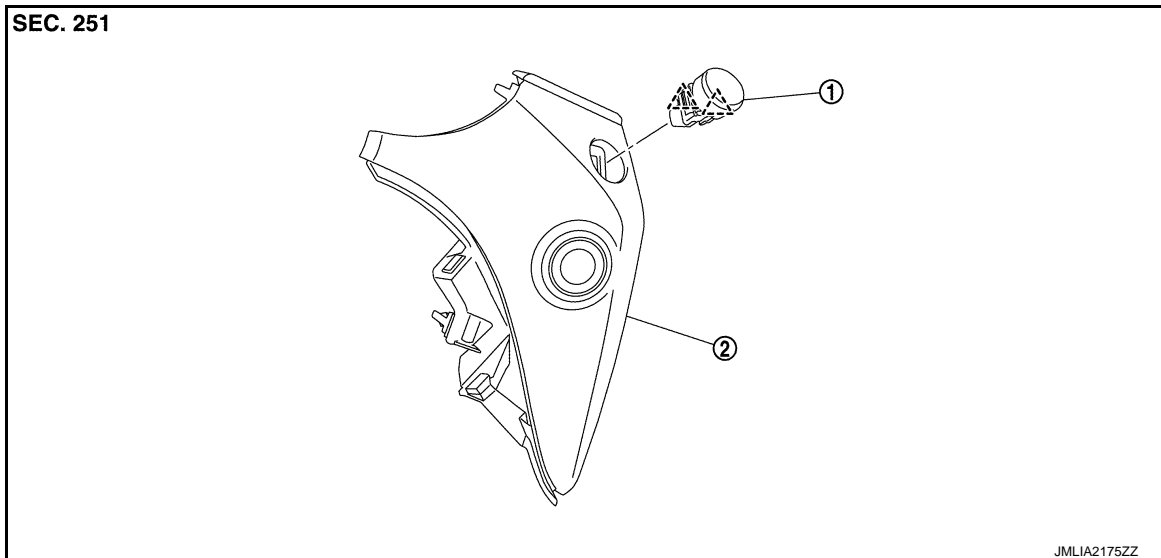

1. Hazard switch

2. Instrument finisher A

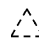 : Pawl

Removal and Installation

INFOID:000000009653098

REMOVAL

1. Remove instrument finisher A. Refer to [IP-14, "Removal and Installation"](#).
2. Disengage fixing pawls, and then remove hazard switch from instrument finisher A.

INSTALLATION

Install in the reverse order of removal.

HEADLAMP AIMING SWITCH


< REMOVAL AND INSTALLATION >

[XENON TYPE]

HEADLAMP AIMING SWITCH

Exploded View


INFOID:000000009653099

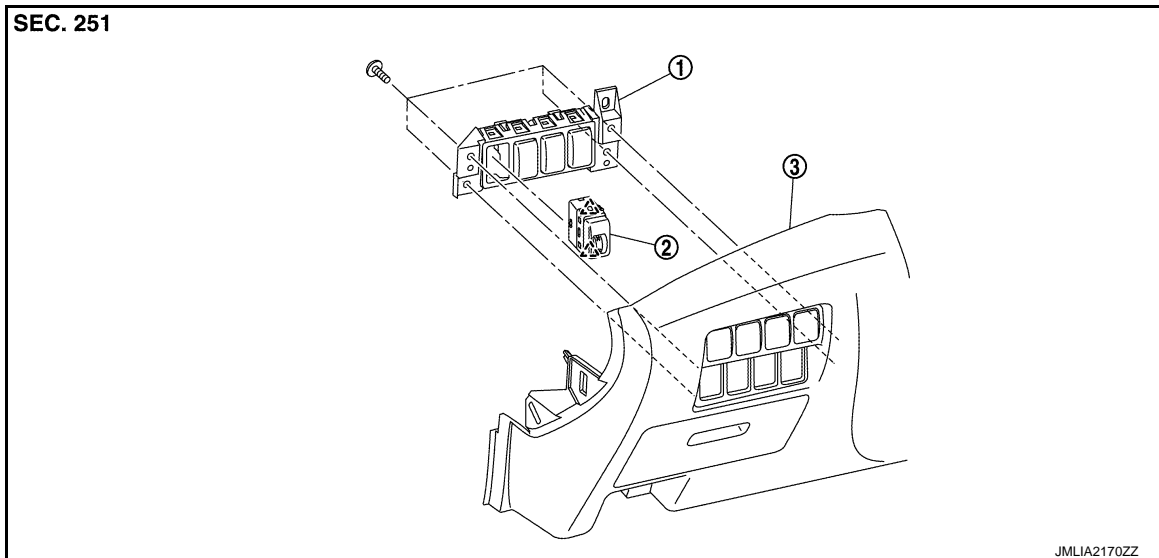

1. Switch bracket B

2. Headlamp aiming switch

3. Instrument lower panel LH

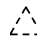 : Pawl

Removal and Installation

INFOID:000000009653100

REMOVAL

1. Remove instrument lower panel LH. Refer to [IP-14, "Removal and Installation"](#).
2. Remove switch bracket B.
3. Remove headlamp aiming switch fixing clips, and then remove headlamp aiming switch from switch bracket B.

INSTALLATION

Install in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

SIDE TURN SIGNAL LAMP

< REMOVAL AND INSTALLATION >

[XENON TYPE]

SIDE TURN SIGNAL LAMP

Exploded View

INFOID:000000009653101

Side turn signal lamp is integrated in the door mirror. Refer to [MIR-31. "Exploded View"](#).

REAR COMBINATION LAMP

[XENON TYPE]

< REMOVAL AND INSTALLATION >

1. Fully open back door.
2. Remove rear combination lamp assembly mounting bolts.
3. Pull the rear combination lamp assembly toward rear of the vehicle, and then remove rear combination lamp assembly.
4. Disconnect the rear combination lamp connector.

INSTALLATION

Install in the reverse order of removal.

Replacement

INFOID:000000009653104

CAUTION:

- **Disconnect the battery negative terminal or the fuse.**
- **Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it.**
- **Never touch bulb by hand while it is lit or right after being turned off.**
- **Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.**

REAR TURN SIGNAL LAMP BULB

1. Remove rear combination lamp assembly. Refer to [EXL-113, "Removal and Installation"](#).
2. Rotate rear turn signal lamp bulb socket counterclockwise, and then remove rear turn signal lamp bulb socket.
3. Remove rear turn signal lamp bulb from rear turn signal lamp bulb socket.

TAIL LAMP/STOP LAMP BULB

1. Remove rear combination lamp assembly. Refer to [EXL-113, "Removal and Installation"](#).
2. Rotate tail lamp/stop lamp bulb socket counterclockwise, and then remove tail lamp/stop lamp bulb socket.
3. Remove tail lamp/stop lamp bulb from tail lamp/stop lamp bulb socket.

BACK-UP LAMP

< REMOVAL AND INSTALLATION >


[XENON TYPE]

BACK-UP LAMP

Exploded View

INFOID:000000009653105


REMOVAL

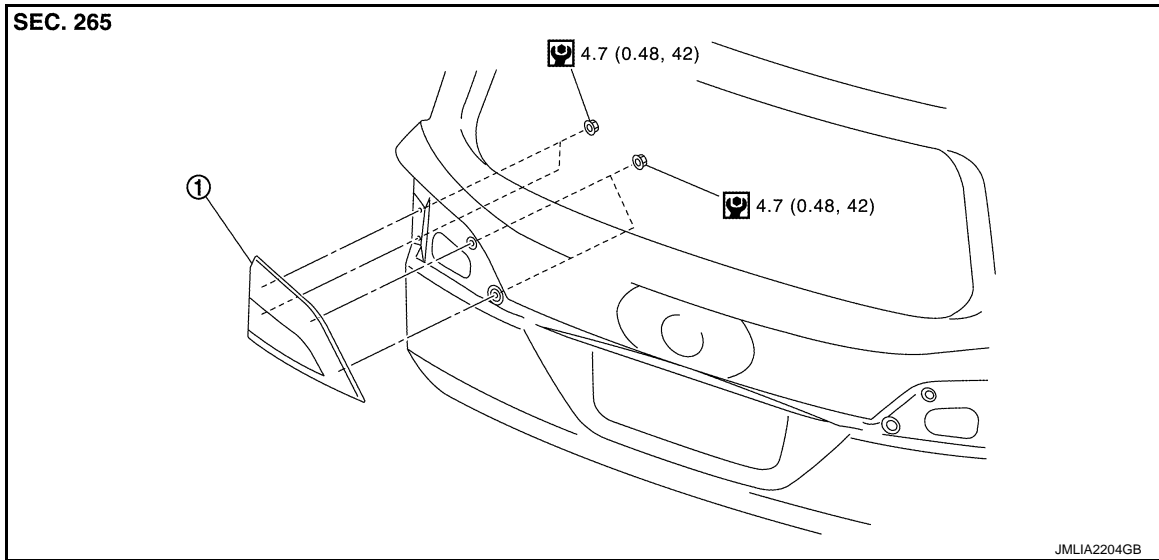

1. Back-up lamp assembly

N·m (kg-m, in-lb)

DISASSEMBLY

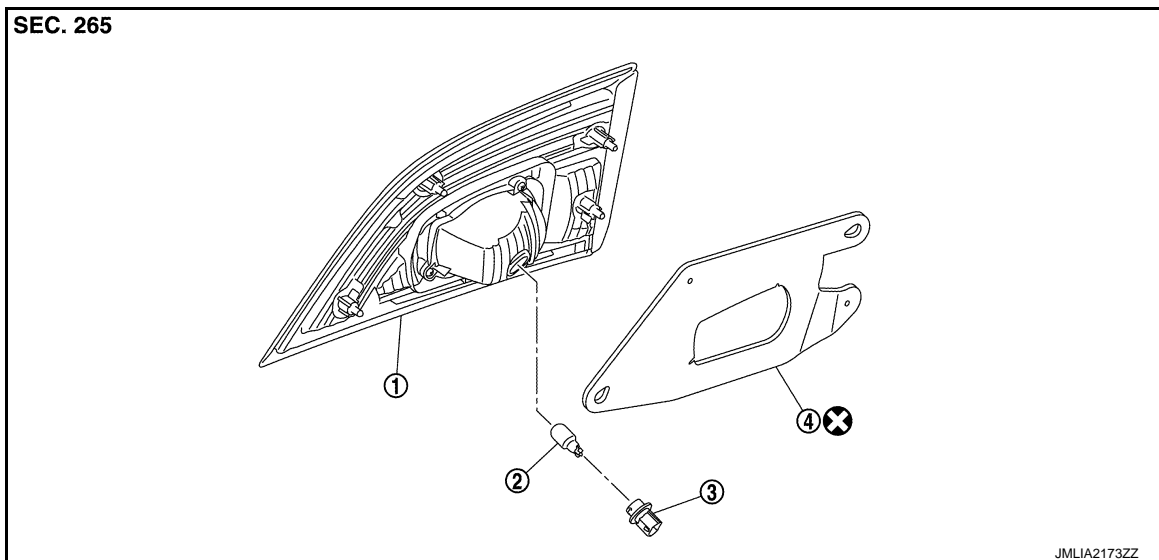

1. Back-up lamp housing assembly

2. Back-up lamp bulb

3. Back-up lamp bulb socket

4. Seal packing

: Always replace after every disassembly.

Removal and Installation

INFOID:000000009653106

CAUTION:
Disconnect the battery negative terminal or the fuse.

REMOVAL

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

BACK-UP LAMP

[XENON TYPE]

< REMOVAL AND INSTALLATION >

1. Remove touch sensor.(with automatic back door) Refer to [DLK-477. "TOUCH SENSOR : Removal and Installation"](#).
2. Remove back door lower finisher. Refer to [INT-48. "BACK DOOR LOWER FINISHER : Removal and Installation"](#).
3. Disconnect back-up lamp connector.
4. Remove back-up lamp mounting nuts, and then remove back-up lamp.
5. Remove seal packing

INSTALLATION

Note the following item, and then install in the reverse order of removal.

CAUTION:

Seal packing cannot be reused.

Replacement

INFOID:000000009653107

CAUTION:

- Disconnect the battery negative terminal or the fuse.
- Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it.
- Never touch bulb by hand while it is lit or right after being turned off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.

BACK-UP LAMP BULB

1. Remove back door lower finisher. Refer to [INT-48. "BACK DOOR LOWER FINISHER : Removal and Installation"](#).
2. Rotate back-up lamp bulb socket counterclockwise, and then remove back-up lamp bulb socket.
3. Remove back-up lamp bulb from back-up lamp bulb socket.

HIGH-MOUNTED STOP LAMP


< REMOVAL AND INSTALLATION >

[XENON TYPE]

HIGH-MOUNTED STOP LAMP

Exploded View

INFOID:000000009653108

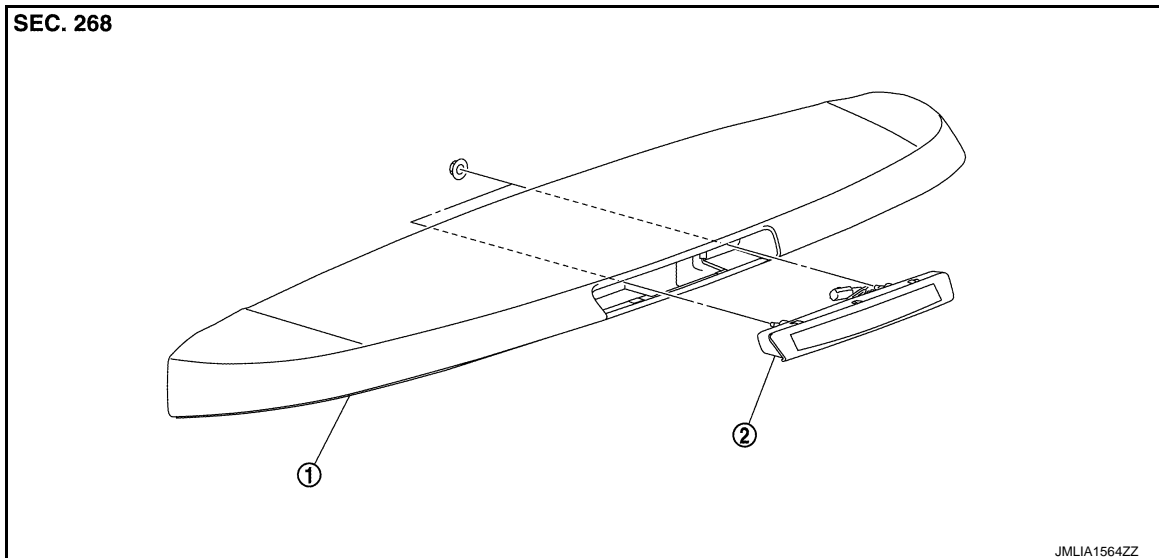

1. Rear spoiler
2. High-mounted stop lamp

Removal and Installation

INFOID:000000009653109

REMOVAL

1. Remove rear spoiler. Refer to [EXT-45, "Removal and Installation"](#).
2. Remove high-mounted stop lamp mounting nuts.
3. Remove high-mounted stop lamp from rear spoiler.

INSTALLATION

Install in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

LICENSE PLATE LAMP


< REMOVAL AND INSTALLATION >

[XENON TYPE]

LICENSE PLATE LAMP

Exploded View

INFOID:000000009653110

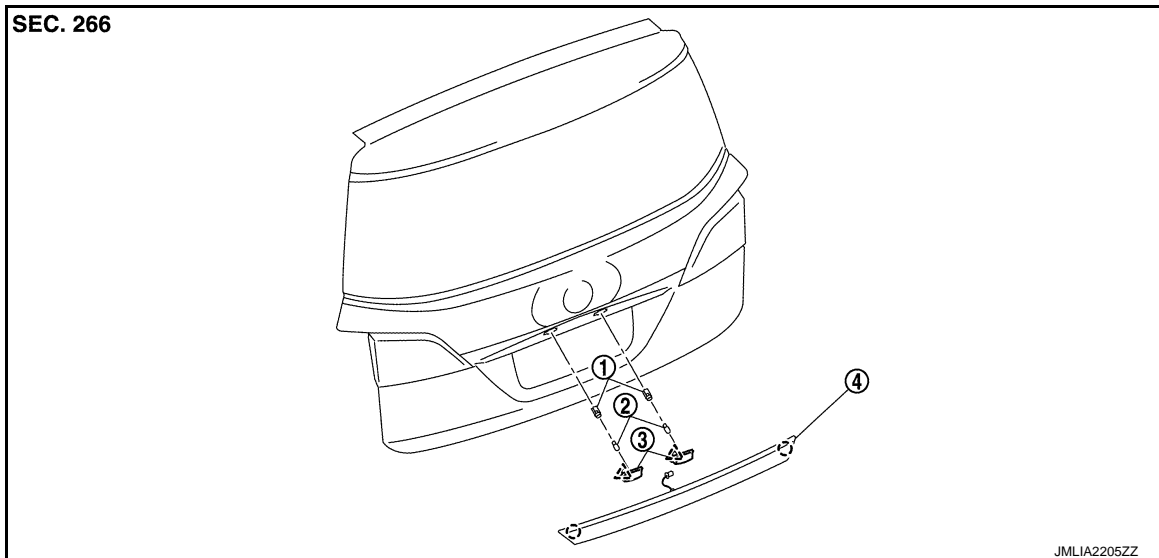

1. License plate lamp bulb socket
2. License plate lamp bulb
3. License plate lamp housing
4. Back door finisher

○ : Clip

△ : Pawl

Removal and Installation

INFOID:000000009653111

CAUTION:

Disconnect the battery negative terminal or the fuse.

REMOVAL

1. Remove back door lower finisher. Refer to [EXT-47. "Removal and Installation"](#).
2. Disconnect license plate lamp connector.
3. Remove license plate lamp while pushing a resin clip, and then remove license plate lamp.

INSTALLATION

Install in the reverse order of removal.

Replacement

INFOID:000000009653112

CAUTION:

- Disconnect the battery negative terminal or the fuse.
- Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it.
- Never touch bulb by hand while it is lit or right after being turned off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.

LICENSE PLATE LAMP BULB

1. Remove back door lower finisher. Refer to [EXT-47. "Removal and Installation"](#).
2. Disconnect license plate lamp connector.
3. Rotate license plate lamp bulb socket counterclockwise and unlock it.
4. Remove license plate lamp bulb from license plate lamp bulb socket.

REFLEX REFLECTOR


< REMOVAL AND INSTALLATION >

[XENON TYPE]


REFLEX REFLECTOR

Exploded View

INFOID:000000009653113

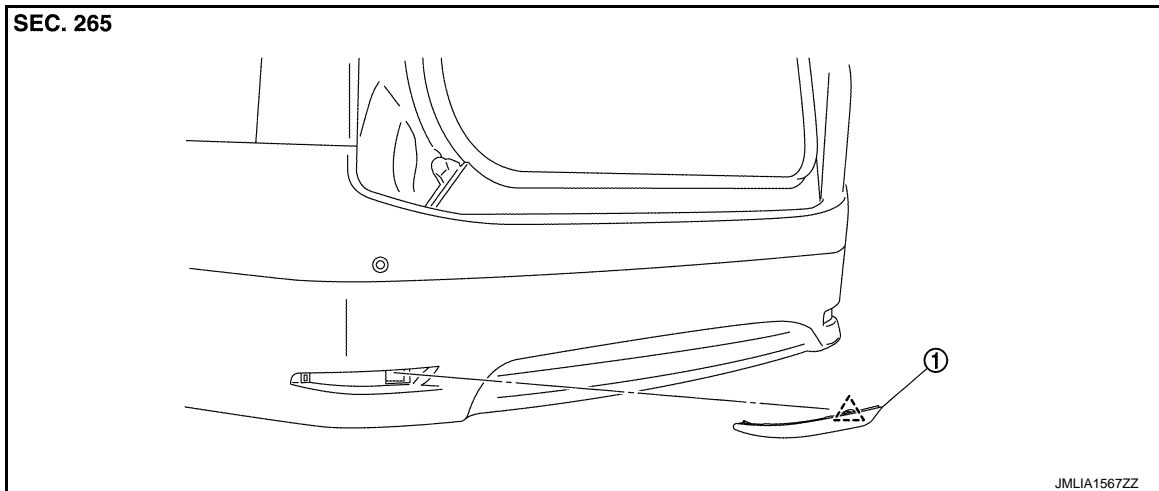

1. Reflex reflector

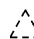
 : Pawl

Removal and Installation

INFOID:000000009653114

REMOVAL

1. Remove rear bumper fascia assembly. Refer to [EXT-16. "REAR BUMPER : Removal and Installation"](#).
2. Remove reflex reflector (1) fixing screws (A) (LH and RH), and then remove reflex reflector (LH and RH).

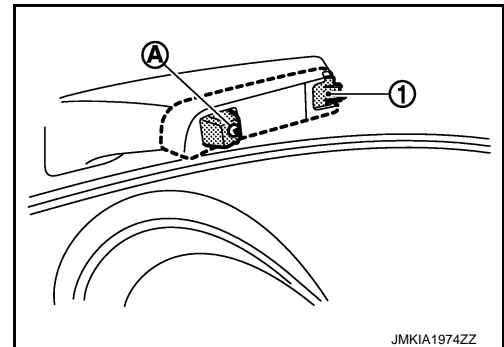

INSTALLATION

Install in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[XENON TYPE]

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Bulb Specifications

INFOID:000000009653115

Item		Type	Wattage (W)
Front combination lamp	Headlamp (HI)	HB3 (Halogen)	60
	Headlamp (LO)	D2S (Xenon)	35
	Front turn signal lamp/ Parking lamp	S25 (Amber)	27/8
	Front side marker lamp	W5W	5
Front fog lamp		H8	35
Side turn signal lamp (integrated into the door mirror)		LED	—
Rear combination lamp	Stop lamp/ Tail lamp (side marker)	W21/5W	21/5
	Rear turn signal lamp	WY21W (Amber)	21
Back-up lamp		W16W	16
License plate lamp		W5W	5
High-mounted stop lamp		LED	—

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000009653116

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precautions for Removing Battery Terminal

INFOID:000000009980279

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

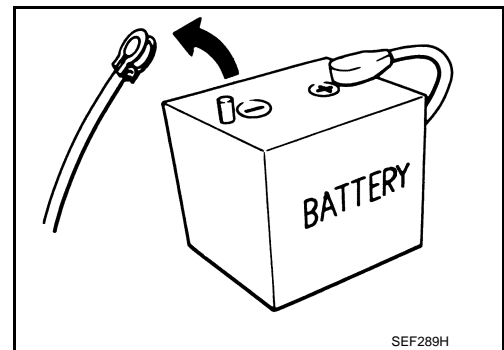

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P


< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:000000009653117

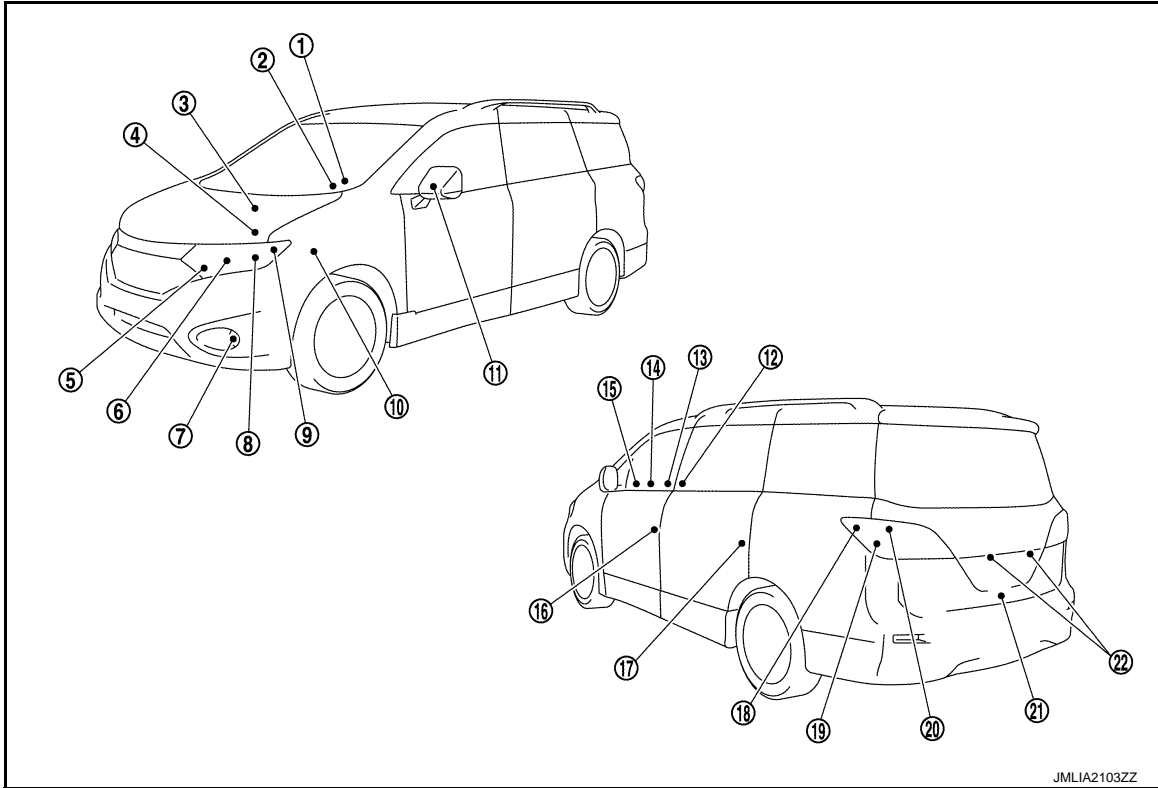

No.	Part	Function
1.	Optical sensor	Refer to EXL-123, "Optical Sensor" .
2.	BCM	<ul style="list-style-type: none"> • Detects each switch condition by the combination switch reading function • Judges that the exterior lamps are turned ON according to the vehicle condition • Requests the headlamp relay (High/Low), tail lamp relay and front fog lamp relay ON to IPDM E/R (via CAN communication) • Requests the high beam indicator lamp and tail lamp indicator lamp ON to the combination meter (via CAN communication) • Judges the outside brightness from the optical sensor signal. • Judges the ON/OFF timing according to the vehicle condition. • Judges the ON/OFF status of the exterior lamp according to the outside brightness and the vehicle condition. • Refer to BCS-4, "BODY CONTROL SYSTEM : Component Parts Location" for detailed installation location.
3.	Daytime running light relay*	Refer to EXL-123, "Daytime Running Light Relay" .
4.	IPDM E/R	<ul style="list-style-type: none"> • Controls the integrated relay, and supplies voltage to the load according to the request from BCM (via CAN communication). • Refer to PCS-4, "IPDM E/R : Component Parts Location" for detailed installation location.
5.	Front turn signal lamp/Parking lamp	Refer to EXL-123, "Bulb Specifications" .
6.	Headlamp HI	Refer to EXL-123, "Bulb Specifications" .
7.	Front fog lamp	Refer to EXL-123, "Bulb Specifications" .
8.	Headlamp LO	Refer to EXL-123, "Bulb Specifications" .
9.	Front side marker lamp	Refer to EXL-123, "Bulb Specifications" .

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[HALOGEN TYPE]

No.	Part	Function
10.	Air bag diagnosis sensor unit	Transmits air bag signal to BCM. Refer to SRC-8, "Component Parts Location" for detailed installation location.
11.	Side turn signal lamp	Refer to EXL-123, "Bulb Specifications" .
12.	Hazard switch	Refer to EXL-123, "Hazard Switch" .
13.	Push-button ignition switch	Refer to DLK-18, "DOOR LOCK SYSTEM : Component Parts Location" .
14.	Combination meter	<ul style="list-style-type: none"> Blinks the turn signal indicator lamp and outputs the turn signal operating sound with integrated buzzer according to the request from BCM (via CAN communication). Turns the high beam indicator lamp and tail lamp indicator lamp ON according to the request from BCM (via CAN communication).
15.	Combination switch (Lighting & turn signal switch)	Refer to BCS-8, "COMBINATION SWITCH READING SYSTEM : System Description" .
16.	Front door switch (driver side)	Refer to DLK-18, "DOOR LOCK SYSTEM : Component Parts Location" .
17.	Slide door switch (LH)	Refer to DLK-18, "DOOR LOCK SYSTEM : Component Parts Location" .
18.	Rear side marker lamp	Refer to EXL-123, "Bulb Specifications" .
19.	Rear turn signal lamp	Refer to EXL-123, "Bulb Specifications" .
20.	Tail lamp	Refer to EXL-123, "Bulb Specifications" .
21.	Back door switch	Refer to DLK-18, "DOOR LOCK SYSTEM : Component Parts Location" .
22.	License plate lamp	Refer to EXL-123, "Bulb Specifications" .

* : With daytime running light system

Optical Sensor

INFOID:000000009653118

Optical sensor converts the outside brightness (lux) to voltage and transmits the optical sensor signal to BCM.

Daytime Running Light Relay

INFOID:000000009653119

Headlamp HI ground circuit is switched according to request from IPDM E/R.

Hazard Switch

INFOID:000000009653120

Inputs the hazard switch ON/OFF signal to BCM.

Bulb Specifications

INFOID:000000009653121

Item	Type	Wattage (W)
Front combination lamp	Headlamp (HI)	HB3 (Halogen) 60
	Headlamp (LO)	H11 (Halogen) 55
	Front turn signal lamp/ Parking lamp	S25 27/8
	Front side marker lamp.	W5W 5
Front fog lamp	H8	35
Side turn signal lamp (integrated into the door mirror)	LED	—
Rear combination lamp	Stop lamp/ Tail lamp (side marker lamp)	W21/5W 21/5
	Rear turn signal lamp	WY21W (Amber) 21
Back-up lamp	W16W	16
License plate lamp	W5W	5
High-mounted stop lamp	LED	—

A
B
C
D
E
F
G
H
I
J
K

EXL

M
N
O
P


SYSTEM

HEADLAMP SYSTEM

HEADLAMP SYSTEM : System Description

INFOID:000000009653122

SYSTEM DIAGRAM

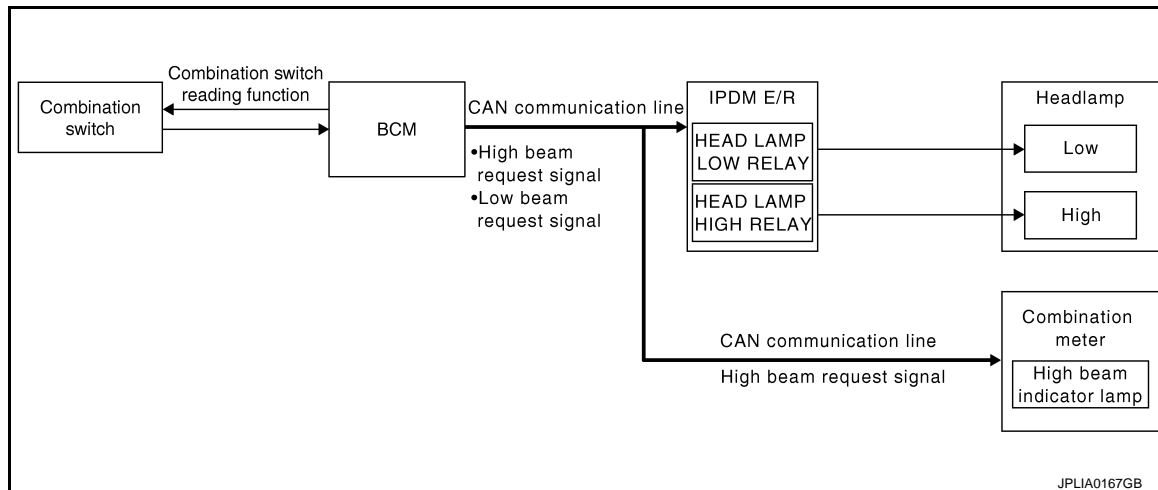

OUTLINE

Headlamp is controlled by combination switch reading function and headlamp control function of BCM, and relay control function of IPDM E/R.

HEADLAMP (LO) OPERATION

- BCM detects the combination switch condition with the combination switch reading function.
- BCM transmits the low beam request signal to IPDM E/R with CAN communication according to the headlamp (LO) ON condition.

Headlamp (LO) ON condition

- Lighting switch 2ND
- Lighting switch AUTO (auto light function ON judgment)
- Lighting switch PASS

- IPDM E/R turns the integrated headlamp low relay ON, and turns the headlamp ON according to the low beam request signal.

HEADLAMP (HI) OPERATION

- BCM transmits the high beam request signal to IPDM E/R and the combination meter with CAN communication according to the headlamp (HI) ON condition.

Headlamp (HI) ON condition

- Lighting switch HI with the lighting switch 2ND or AUTO (auto light function ON judgment)
- Lighting switch PASS

- Combination meter turns the high beam indicator lamp ON according to the high beam request signal.
- IPDM E/R turns the integrated headlamp high relay ON, and turns the headlamp ON according to the high beam request signal.


SYSTEM

< SYSTEM DESCRIPTION >

[HALOGEN TYPE]

HEADLAMP SYSTEM : Circuit Diagram

INFOID:000000009653123

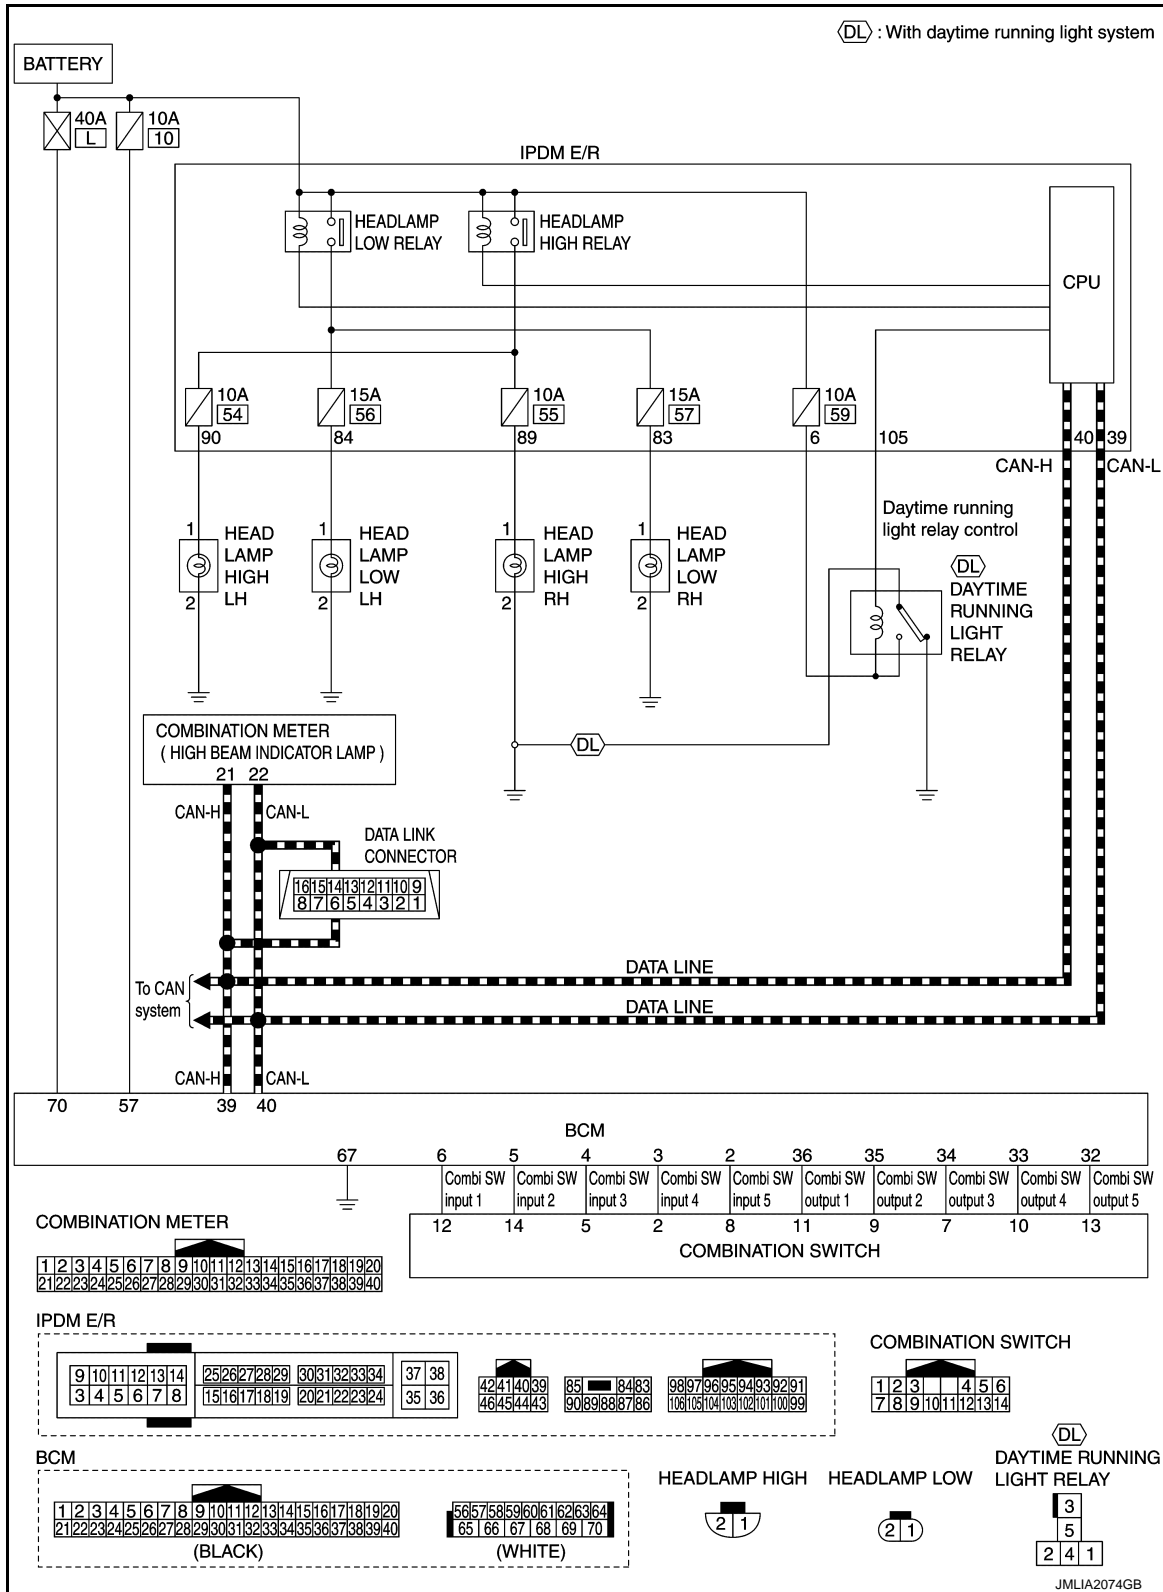

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

HEADLAMP SYSTEM : Fail-safe

INFOID:000000009653124

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With BCM

SYSTEM

< SYSTEM DESCRIPTION >

[HALOGEN TYPE]


Control part	Fail-safe operation
Headlamp	<ul style="list-style-type: none"> • Turns ON the headlamp low relay when the ignition switch is turned ON • Turns OFF the headlamp low relay when the ignition switch is turned OFF • Headlamp high relay OFF

AUTO LIGHT SYSTEM (EXCEPT FOR CANADA)

AUTO LIGHT SYSTEM (EXCEPT FOR CANADA) : System Description

INFOID:000000009653125

SYSTEM DIAGRAM

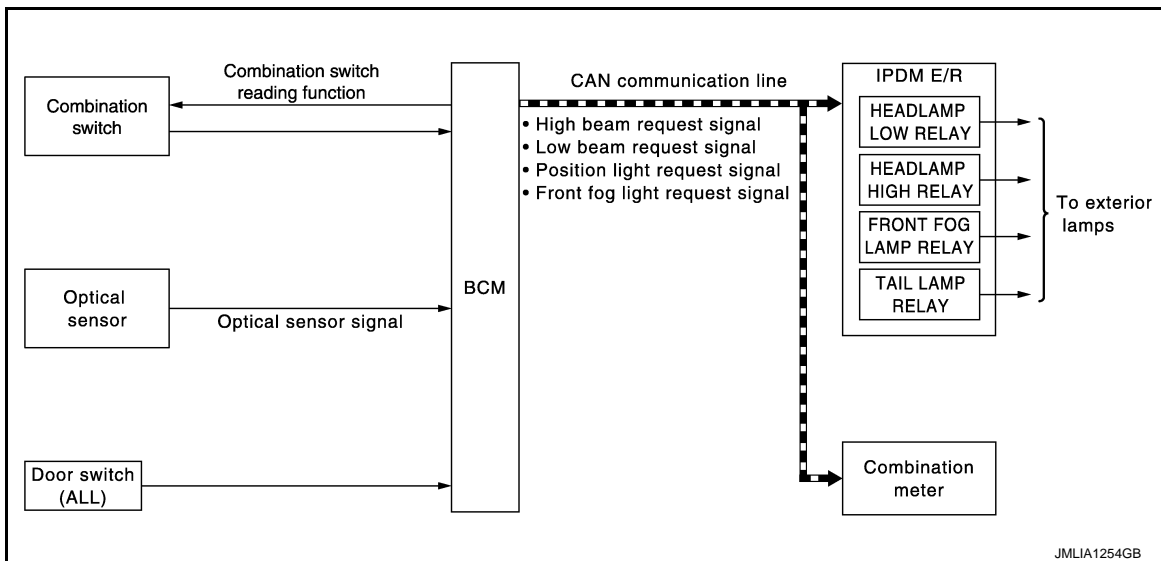

OUTLINE

- Auto light system is controlled by each function of BCM and IPDM E/R.

Control by BCM

- Combination switch reading function
- Headlamp control function
- Auto light function
- Delay timer function
- Wiper linked auto lighting function
- Auto light adjustment system

Control by IPDM E/R

- Relay control function
- Auto light system has the auto light function (with twilight lighting function), wiper linked auto lighting function and delay timer function.
- Auto light function automatically turns ON/OFF the exterior lamps* and each illumination automatically, depending on the outside brightness.
- Wiper linked auto lighting function automatically turns ON/OFF the exterior lamps* and each illumination when the light switch is in the AUTO position, according to a front wiper operation.
- When auto light system turns the exterior lamps ON with the ignition switch OFF, delay timer function turns the exterior lamps OFF, depending on the vehicle condition with the auto light function after a certain period of time.

*: Headlamp (LO/HI), parking lamp, side marker lamp, tail lamp and front fog lamp (Headlamp HI and front fog lamp depend on the combination switch condition.)

NOTE:

The settings of the twilight lighting function and the wiper linked auto lighting function can be changed with CONSULT. Refer to [EXL-144, "HEADLAMP : CONSULT Function \(BCM - HEADLAMP\) \(Halogen Type Headlamp\)"](#).

AUTO LIGHT FUNCTION (WITH TWILIGHT LIGHTING FUNCTION)

Description

- BCM detects the combination switch condition with the combination switch reading function.

SYSTEM

[HALOGEN TYPE]

< SYSTEM DESCRIPTION >

- BCM supplies voltage to the optical sensor when the ignition switch is turned ON or ACC.
- Optical sensor converts outside brightness (lux) to voltage and transmits the optical sensor signal to BCM.
- When ignition switch is turned ON, BCM detects outside brightness from the optical sensor signal and judges ON/OFF condition of the exterior lamp and each illumination, depending on the outside brightness condition (standard or twilight).
- BCM transmits each request signal to IPDM E/R and combination meter via CAN communication, according to ON/OFF condition by the auto light function.

NOTE:

As to ON/OFF timing, the sensitivity depends on settings. The settings can be changed with CONSULT. Refer to [EXL-144, "HEADLAMP : CONSULT Function \(BCM - HEADLAMP\) \(Halogen Type Headlamp\)"](#).

WIPER LINKED AUTO LIGHTING FUNCTION

BCM turns the exterior lamp ON when detecting 4 operations of the front wiper work the light switch in AUTO position.

NOTE:

BCM turns OFF the headlamps 3 seconds after the front wiper switch is turned from HI⇒OFF.

AUTO LIGHT ADJUSTMENT SYSTEM

The auto light adjustment system automatically, dims/brightens the display and combination meter, according to brightness outside the vehicle, when lighting switch 1ST, lighting switch 2ND or lighting switch AUTO is operated. Refer to [INL-17, "AUTO LIGHT ADJUSTMENT SYSTEM : System Description"](#).

DELAY TIMER FUNCTION

BCM turns the exterior lamp OFF depending on the vehicle condition with the auto light function when the ignition switch is turned OFF.

- Turns the exterior lamp OFF 5 minutes after detecting that any door opens. (Door switch ON).
- Turns the exterior lamp OFF a certain period of time* after closing all doors. (Door switch ON→OFF).
- Turns the exterior lamp OFF with the ignition switch ACC or the light switch OFF.

*: The preset time is 45 seconds. The timer operating time can be set by CONSULT. Refer to [EXL-144, "HEADLAMP : CONSULT Function \(BCM - HEADLAMP\) \(Halogen Type Headlamp\)"](#).

NOTE:

When any position other than the light switch AUTO is set, the auto light system function switches to the exterior lamp battery saver function.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL


SYSTEM

< SYSTEM DESCRIPTION >

[HALOGEN TYPE]

AUTO LIGHT SYSTEM (EXCEPT FOR CANADA) : Circuit Diagram

INFOID:00000009653126

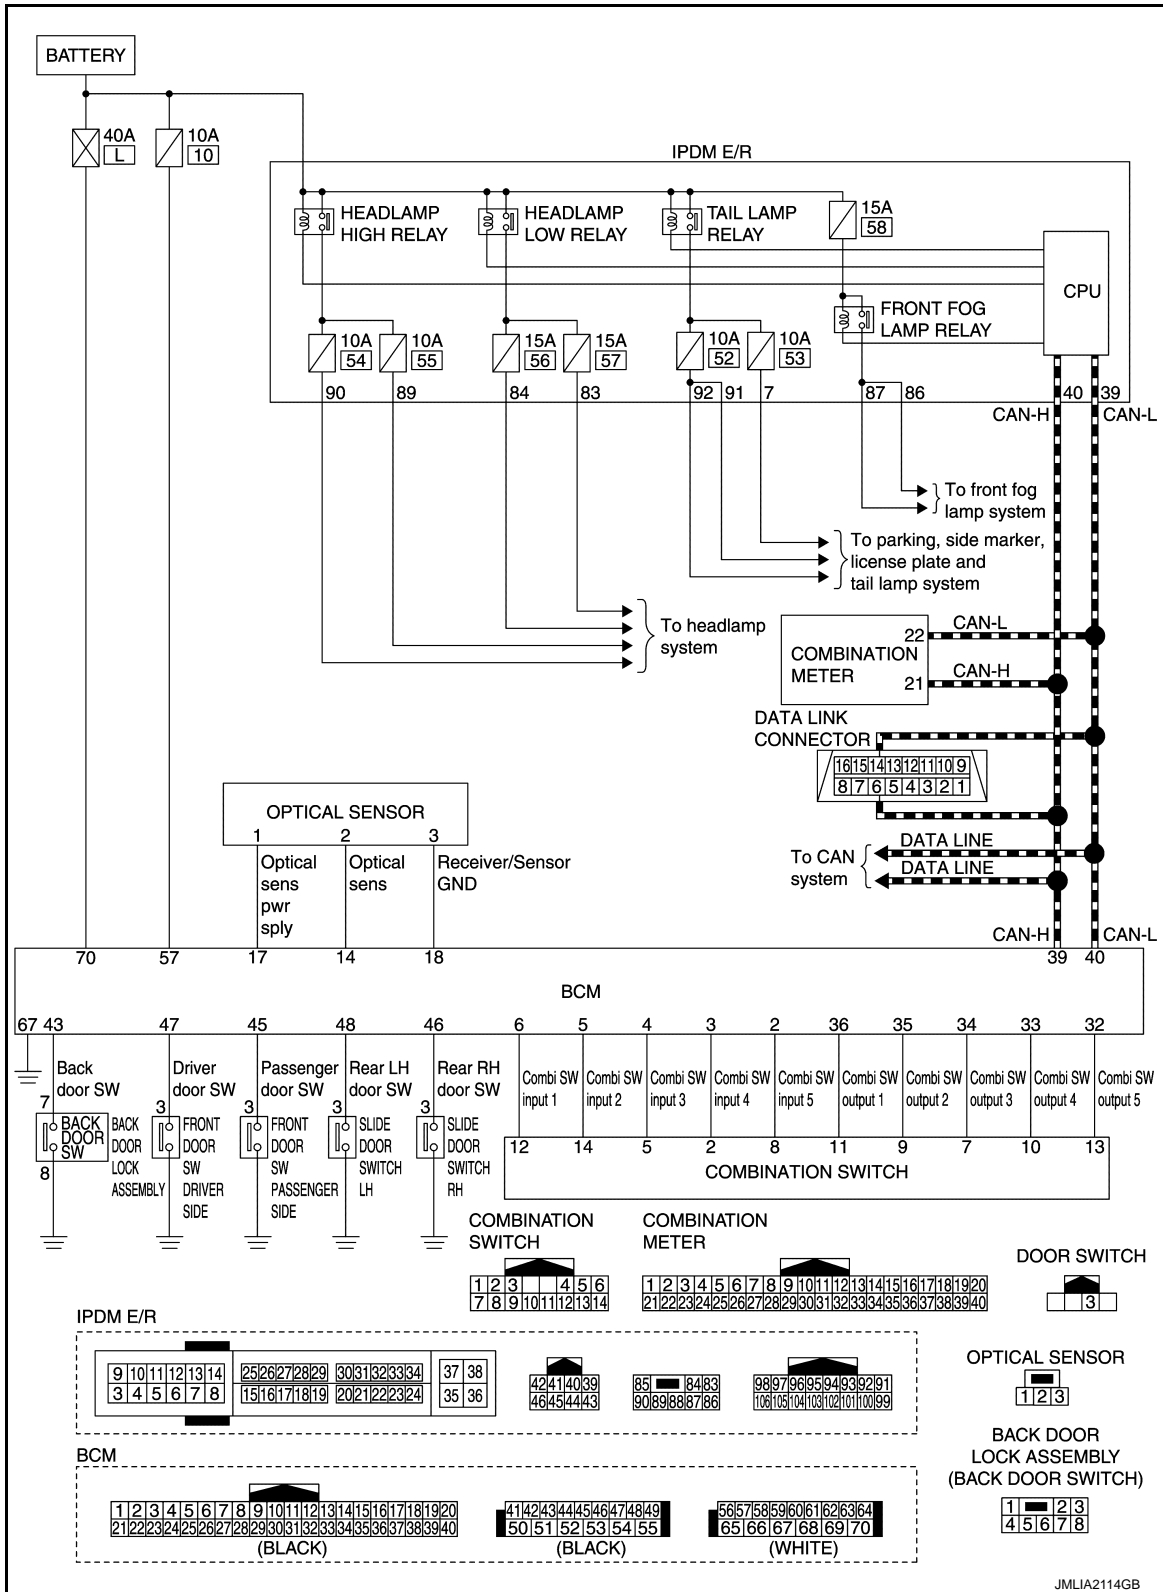


AUTO LIGHT SYSTEM (FOR CANADA)

AUTO LIGHT SYSTEM (FOR CANADA) : System Description

INFOID:000000009653127

SYSTEM DIAGRAM

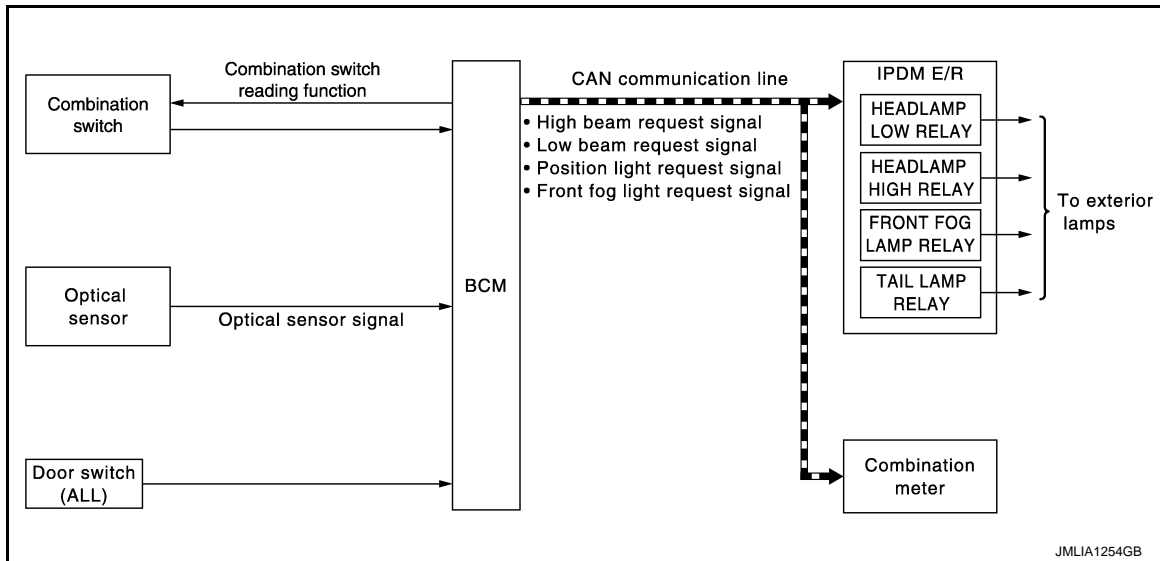

OUTLINE

- Auto light system is controlled by each function of BCM and IPDM E/R.

Control by BCM

- Combination switch reading function
- Headlamp control function
- Auto light function
- Delay timer function
- Auto light adjustment system

Control by IPDM E/R

- Relay control function
- Auto light system has the auto light function and delay timer function.
- Auto light function automatically turns ON/OFF the exterior lamps* and each illumination automatically, depending on the outside brightness.
- When auto light system turns the exterior lamps ON with the ignition switch OFF, delay timer function turns the exterior lamps OFF, depending on the vehicle condition with the auto light function after a certain period of time.

*: Headlamp (LO/HI), parking lamp, side marker lamp, tail lamp and front fog lamp (Headlamp HI and front fog lamp depend on the combination switch condition.)

AUTO LIGHT FUNCTION

- BCM detects the combination switch condition with the combination switch reading function.
- BCM supplies voltage to optical sensor when the ignition switch is turned ON or ACC.
- Optical sensor converts outside brightness (lux) to voltage and transmits the optical sensor signal to BCM.
- BCM judges outside brightness from the optical sensor signal and judges ON/OFF condition of the exterior lamp and each illumination according to the outside brightness.
- BCM transmits each request signal to IPDM E/R and combination meter via CAN communication according to ON/OFF condition by the auto light function.

NOTE:

ON/OFF timing differs based on the sensitivity from the setting. The setting can be set by CONSULT. Refer to [EXL-144, "HEADLAMP : CONSULT Function \(BCM - HEADLAMP\) \(Halogen Type Headlamp\)"](#).

AUTO LIGHT ADJUSTMENT SYSTEM

The auto light adjustment system automatically, dims/brightens the display, according to brightness outside the vehicle, when lighting switch 1ST, lighting switch 2ND or lighting switch AUTO is operated. Refer to [INL-17, "AUTO LIGHT ADJUSTMENT SYSTEM : System Description"](#).

DELAY TIMER FUNCTION

SYSTEM

< SYSTEM DESCRIPTION >

[HALOGEN TYPE]

BCM turns the exterior lamp OFF depending on the vehicle condition with the auto light function when the ignition switch is turned OFF.

- Turns the exterior lamp OFF 5 minutes after detecting that any door opens. (Door switch ON).
- Turns the exterior lamp OFF a certain period of time* after closing all doors. (Door switch ON→OFF).
- Turns the exterior lamp OFF with the ignition switch ACC or the light switch OFF.

*: The preset time is 45 seconds. The timer operating time can be set by CONSULT. Refer to [EXL-144, "HEADLAMP : CONSULT Function \(BCM - HEADLAMP\) \(Halogen Type Headlamp\)"](#).

NOTE:

When any position other than the light switch AUTO is set, the auto light system function switches to the exterior lamp battery saver function.


SYSTEM

< SYSTEM DESCRIPTION >

[HALOGEN TYPE]

AUTO LIGHT SYSTEM (FOR CANADA) : Circuit Diagram

INFOID:000000009653128

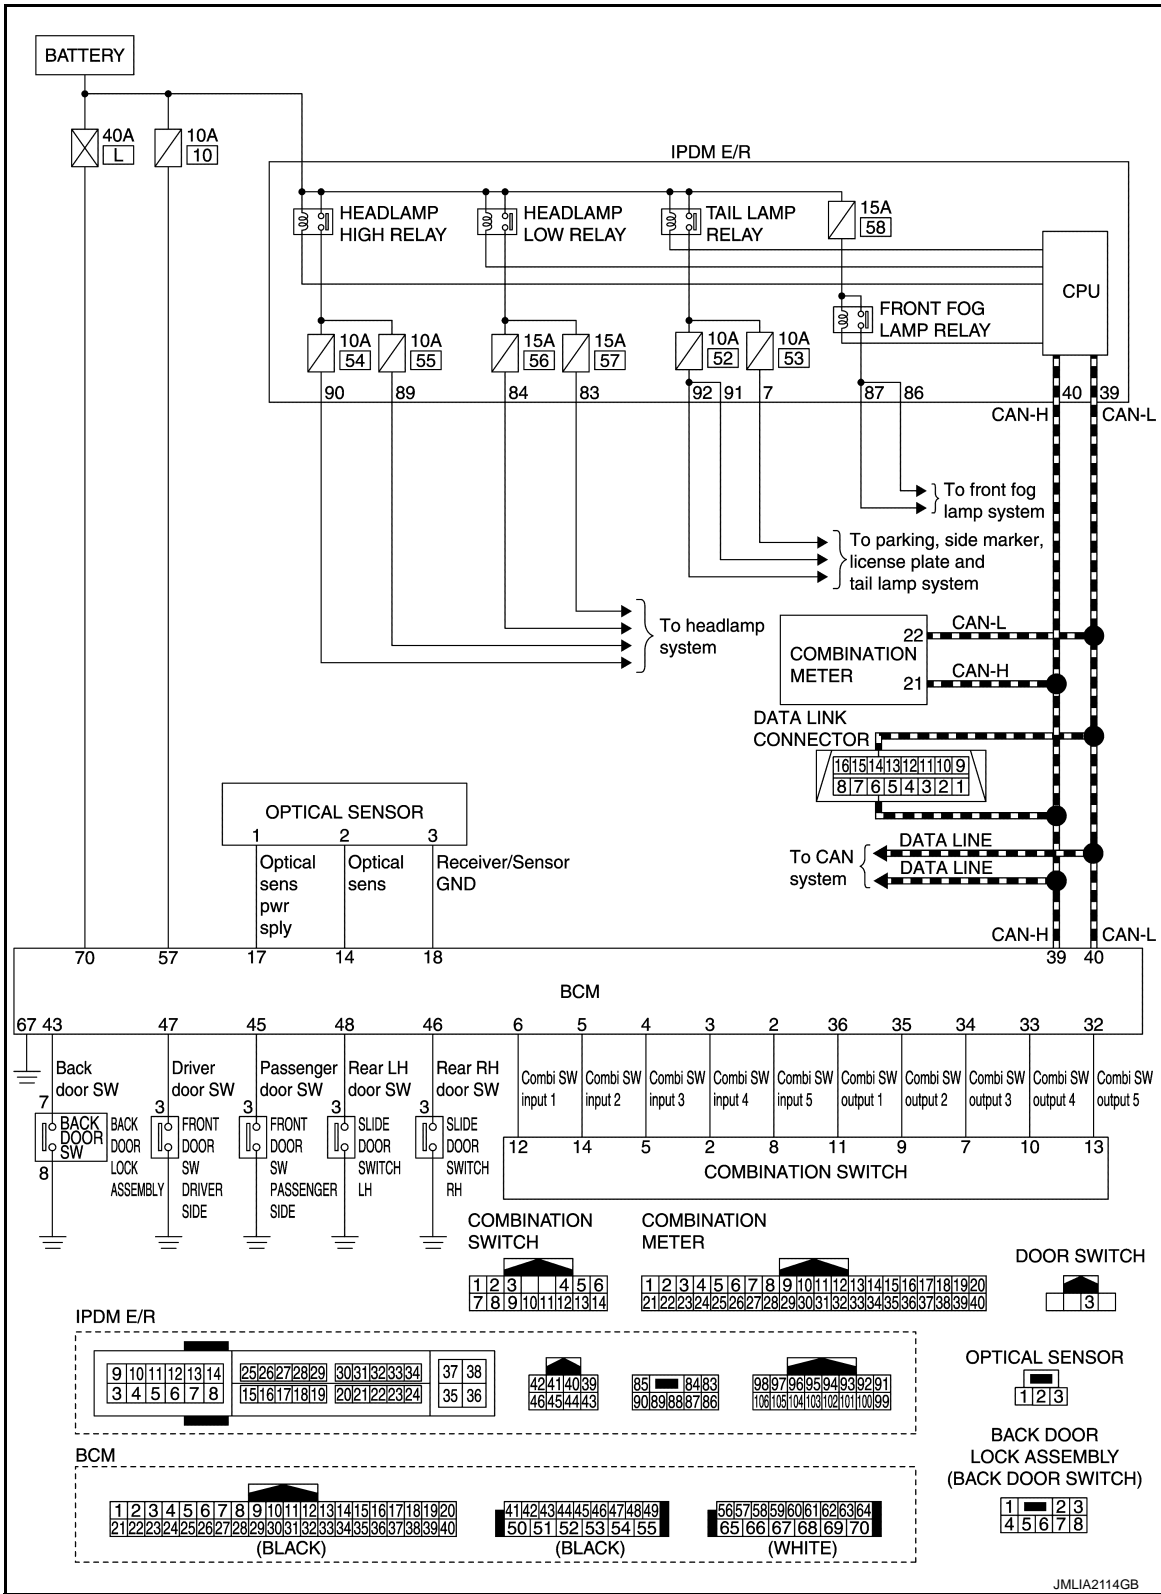

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


EXL

DAYTIME RUNNING LIGHT SYSTEM

DAYTIME RUNNING LIGHT SYSTEM : System Description

INFOID:000000009653129

SYSTEM DIAGRAM

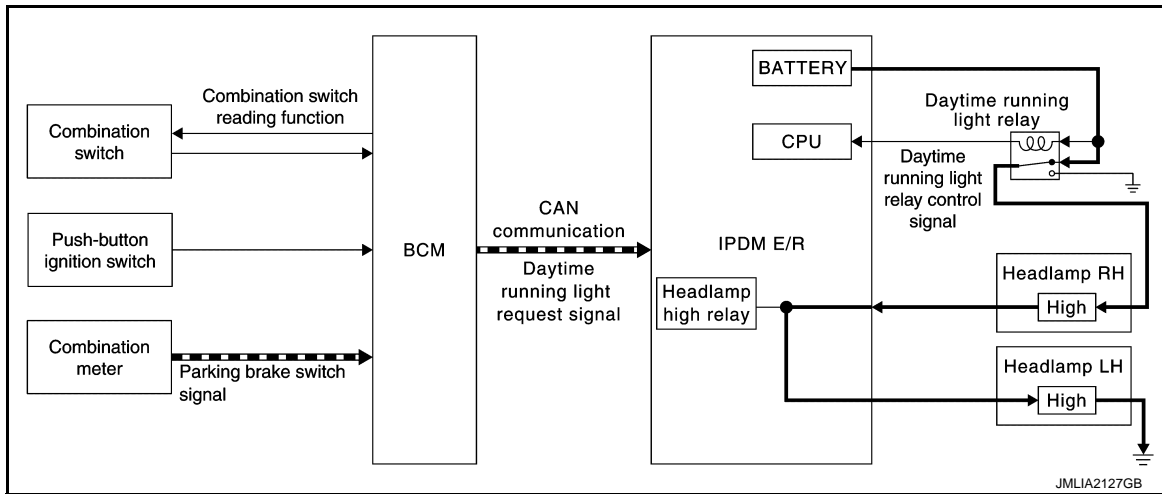

OUTLINE

- Turns the headlamp high ON (high beam at approximately half illumination) as the daytime running light.
- Daytime running light is controlled by daytime running light control function and combination switch reading function of BCM, and relay control function of IPDM E/R.

DAYTIME RUNNING LIGHT OPERATION

- BCM detects the combination switch condition by the combination switch reading function.
- BCM detects the engine condition according to push-button ignition switch
- BCM detects the parking brake condition by the parking brake switch signal received from combination meter using CAN communication.
- BCM transmits the daytime running light request signal to IPDM E/R using CAN communication according to the daytime running light ON condition.

Daytime running light ON condition

- Engine running
- Lighting switch OFF or 1ST
- Lighting switch AUTO, and the auto light function OFF judgment
- Parking brake switch OFF
- IPDM E/R controls the daytime running light relay (ground-side) to turn ON according to the daytime running light request signal.
- Power is supplied from the daytime running light relay through headlamp high RH and IPDM E/R to headlamp high LH. And high beam headlamps are illuminated (approximately half illumination) as the daytime running light.


SYSTEM

< SYSTEM DESCRIPTION >

[HALOGEN TYPE]

DAYTIME RUNNING LIGHT SYSTEM : Circuit Diagram

INFOID:000000009653130

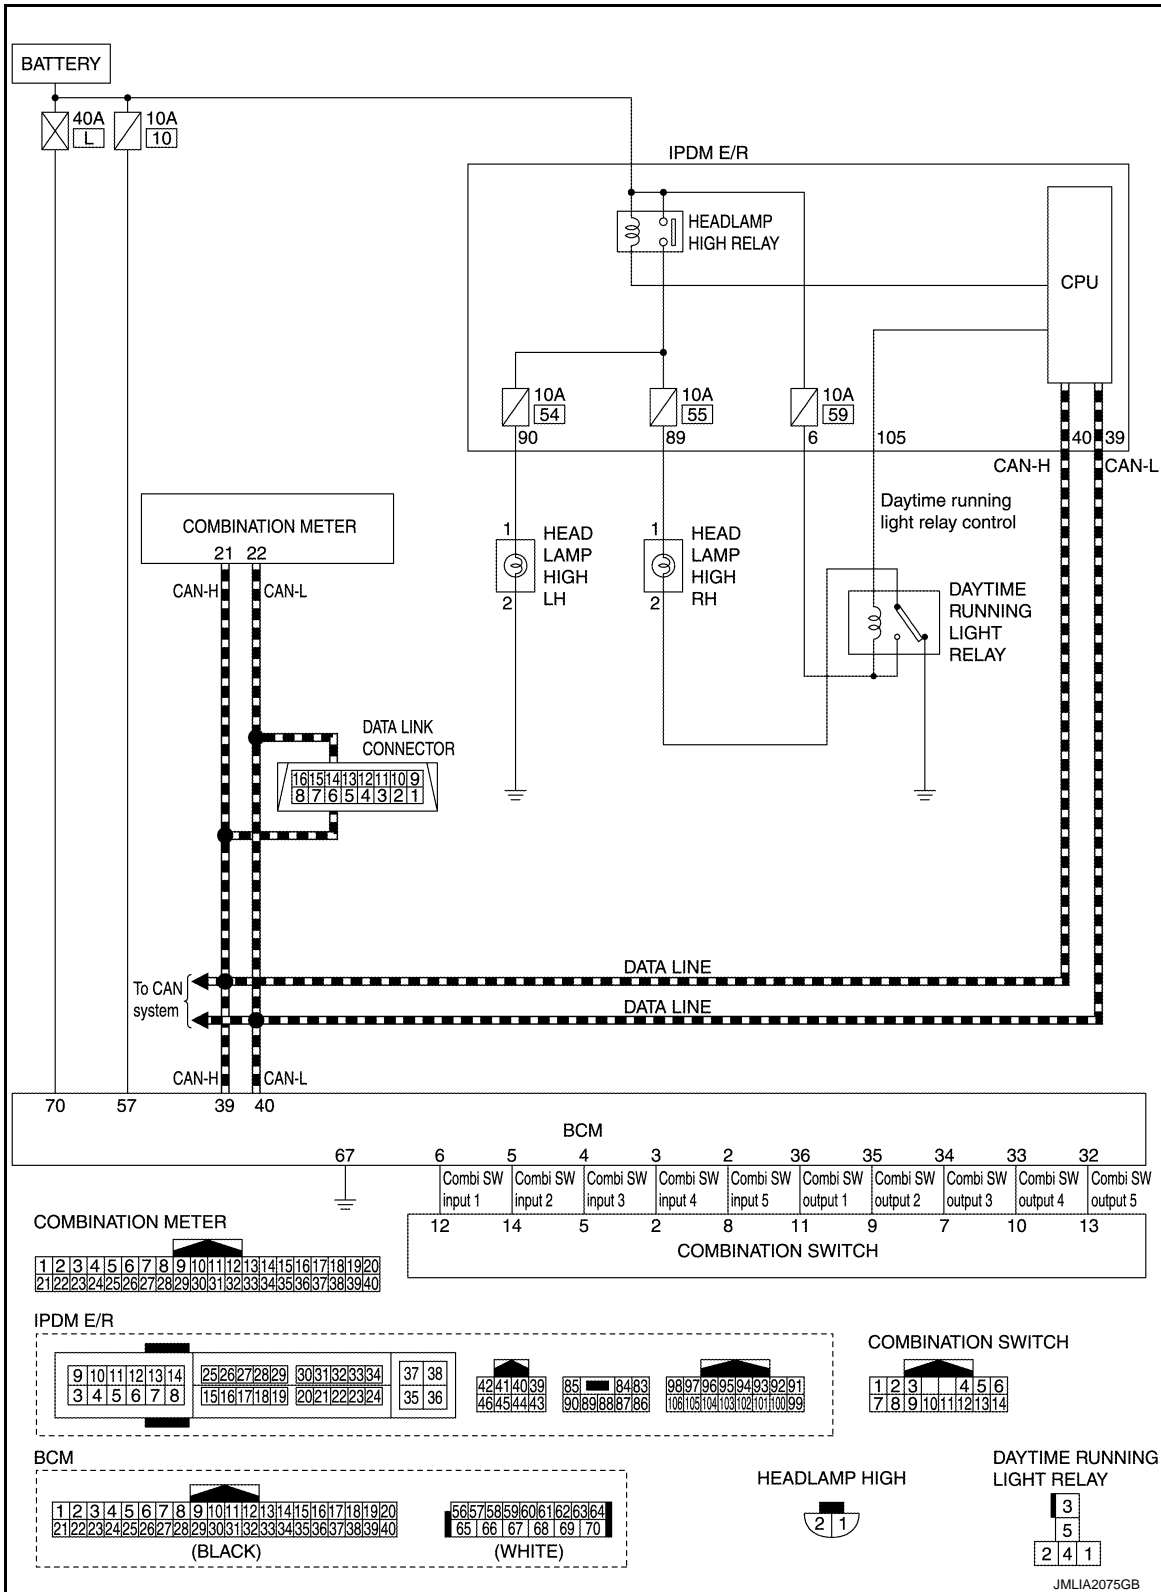

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


EXL

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM : System Description

INFOID:000000009653131

SYSTEM DIAGRAM

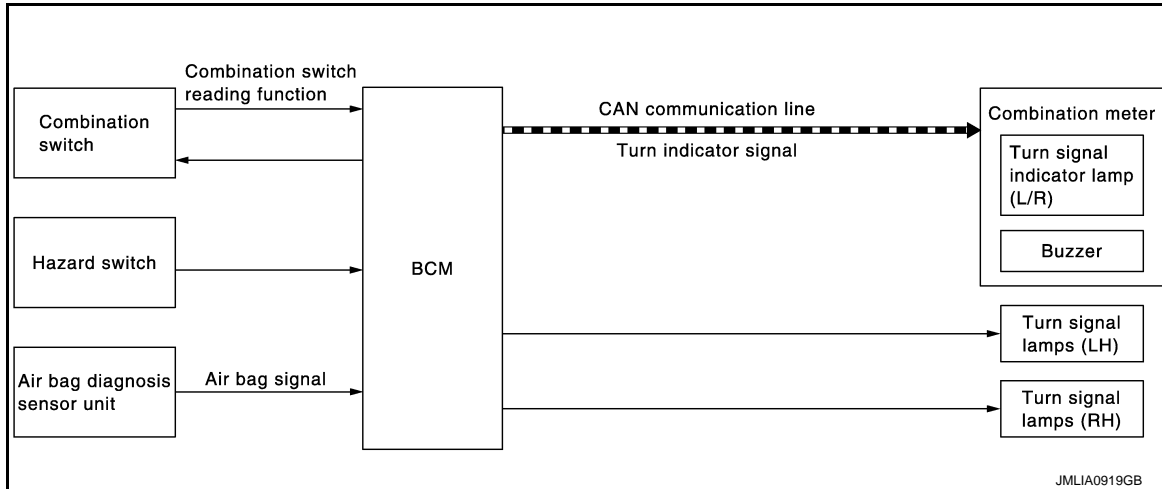

OUTLINE

Turn signal and the hazard warning lamp is controlled by combination switch reading function, flasher control function and auto hazard function of BCM.

TURN SIGNAL LAMP OPERATION

- BCM detects the combination switch condition by the combination switch reading function.
- BCM supplies voltage to the right (left) turn signal lamp circuit when the ignition switch is turned ON and the turn signal switch is in the right (left) position. BCM blinks the turn signal lamp.

HAZARD WARNING LAMP OPERATION

BCM supplies voltage to both turn signal lamp circuit when the hazard switch is turned ON. BCM blinks the hazard warning lamp.

TURN SIGNAL INDICATOR LAMP AND TURN SIGNAL SOUND OPERATION

- BCM transmits the turn indicator signal to the combination meter via CAN communication while the turn signal lamp and the hazard warning lamp operating.
- Combination meter outputs the turn signal sound with the integrated buzzer while blinking the turn signal indicator lamp according to the turn indicator signal.

AUTO HAZARD FUNCTION

- Air bag diagnosis sensor unit transmits air bag signal to BCM, when air bag diagnosis sensor unit detects strong impact to the vehicle body while ignition switch is ON.
- When air bag signal from air bag diagnosis sensor unit is detected, BCM supplies voltage to each turn signal lamp system and hazard lamp blinks.

NOTE:

Auto hazard function may not be operated depending on status of collision.

3-TIME FLASHER FUNCTION

- By a short touch of the turn signal lever, BCM blinks the turn signal lamps 3 times in the selected direction.
- Cancels the operation when short touch of the turn signal lever in the reverse direction during the 3-time flasher function operation.

HIGH FLASHER OPERATION

- BCM detects the turn signal lamp circuit status from the current value.
- BCM increases the turn signal lamp blinking speed if the bulb or harness open is detected with the turn signal lamp operating.

NOTE:

The blinking speed is normal while operating the hazard warning lamp.


SYSTEM

< SYSTEM DESCRIPTION >

[HALOGEN TYPE]

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM : Circuit Diagram

INFOID:000000009653132

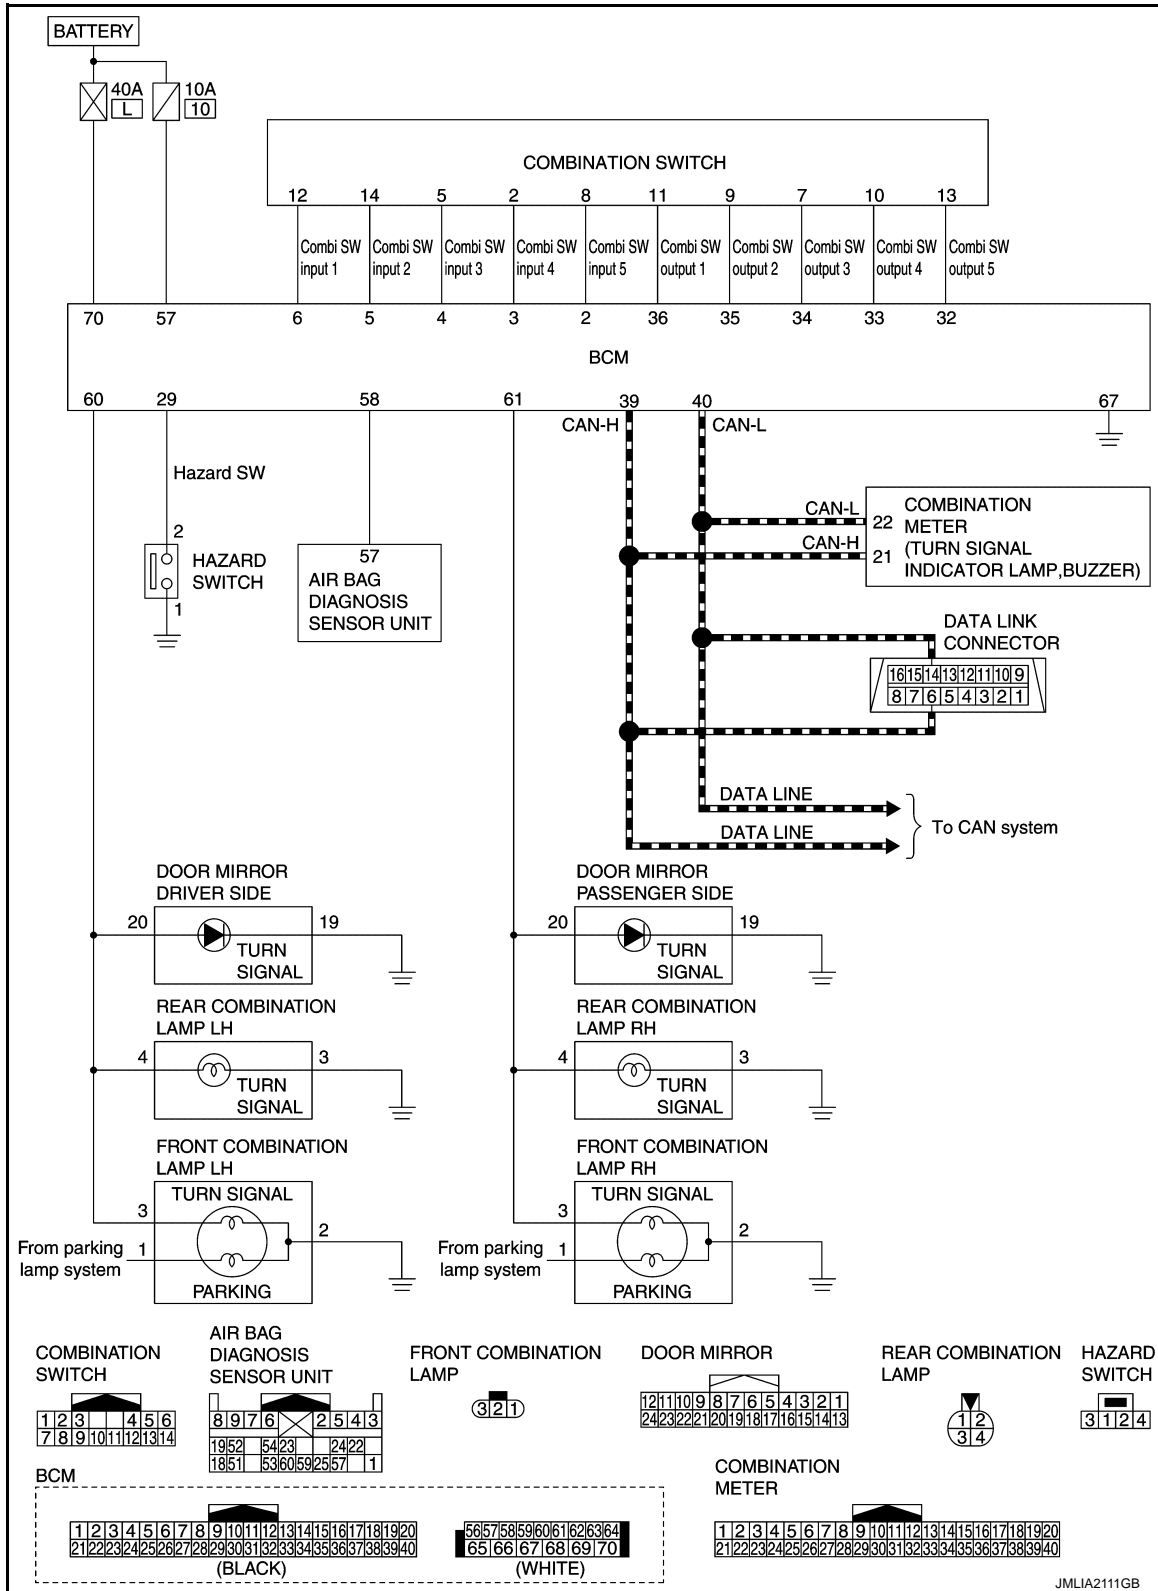


PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMP SYSTEM

PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMP SYSTEM : System De-

scription

INFOID:000000009653133

SYSTEM DIAGRAM

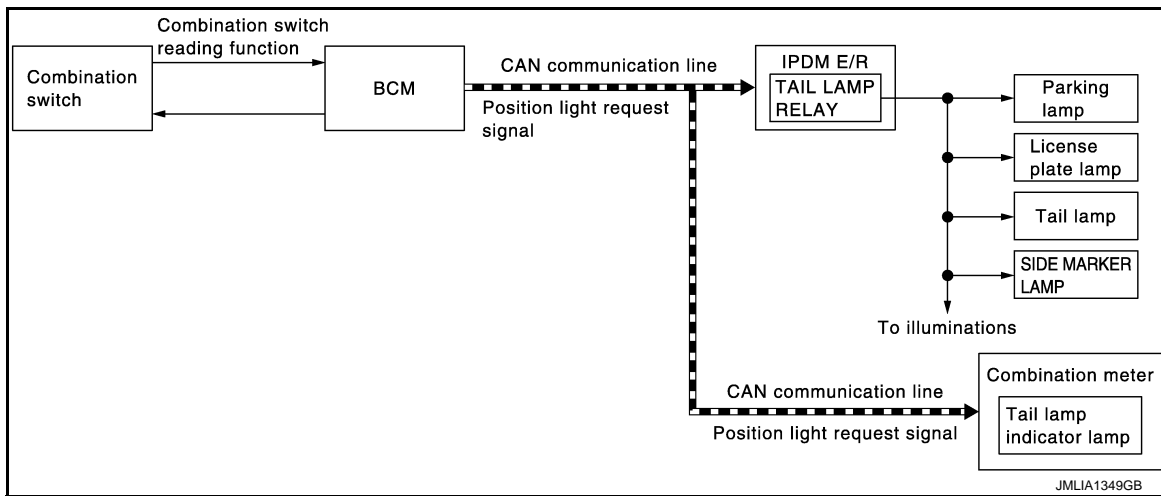

OUTLINE

Parking, license plate, side marker and tail lamps are controlled by combination switch reading function and headlamp control function of BCM, and relay control function of IPDM E/R.

PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS OPERATION

- BCM detects the combination switch condition by the combination switch reading function.
- BCM transmits the position light request signal to IPDM E/R and the combination meter via CAN communication according to the ON/OFF condition of the parking, license plate, side marker and tail lamps.


Parking, license plate, side marker and tail lamps ON condition

- Lighting switch 1ST
- Lighting switch 2ND
- Lighting switch AUTO, and the auto light function ON judgment.
- IPDM E/R turns the integrated tail lamp relay ON and turns the parking, license plate, side marker and tail lamps ON according to the position light request signal.
- Combination meter turns the tail lamp indicator lamp ON according to the position light request signal.

PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMP SYSTEM : Circuit Dia-

gram

INFOID:000000009653134

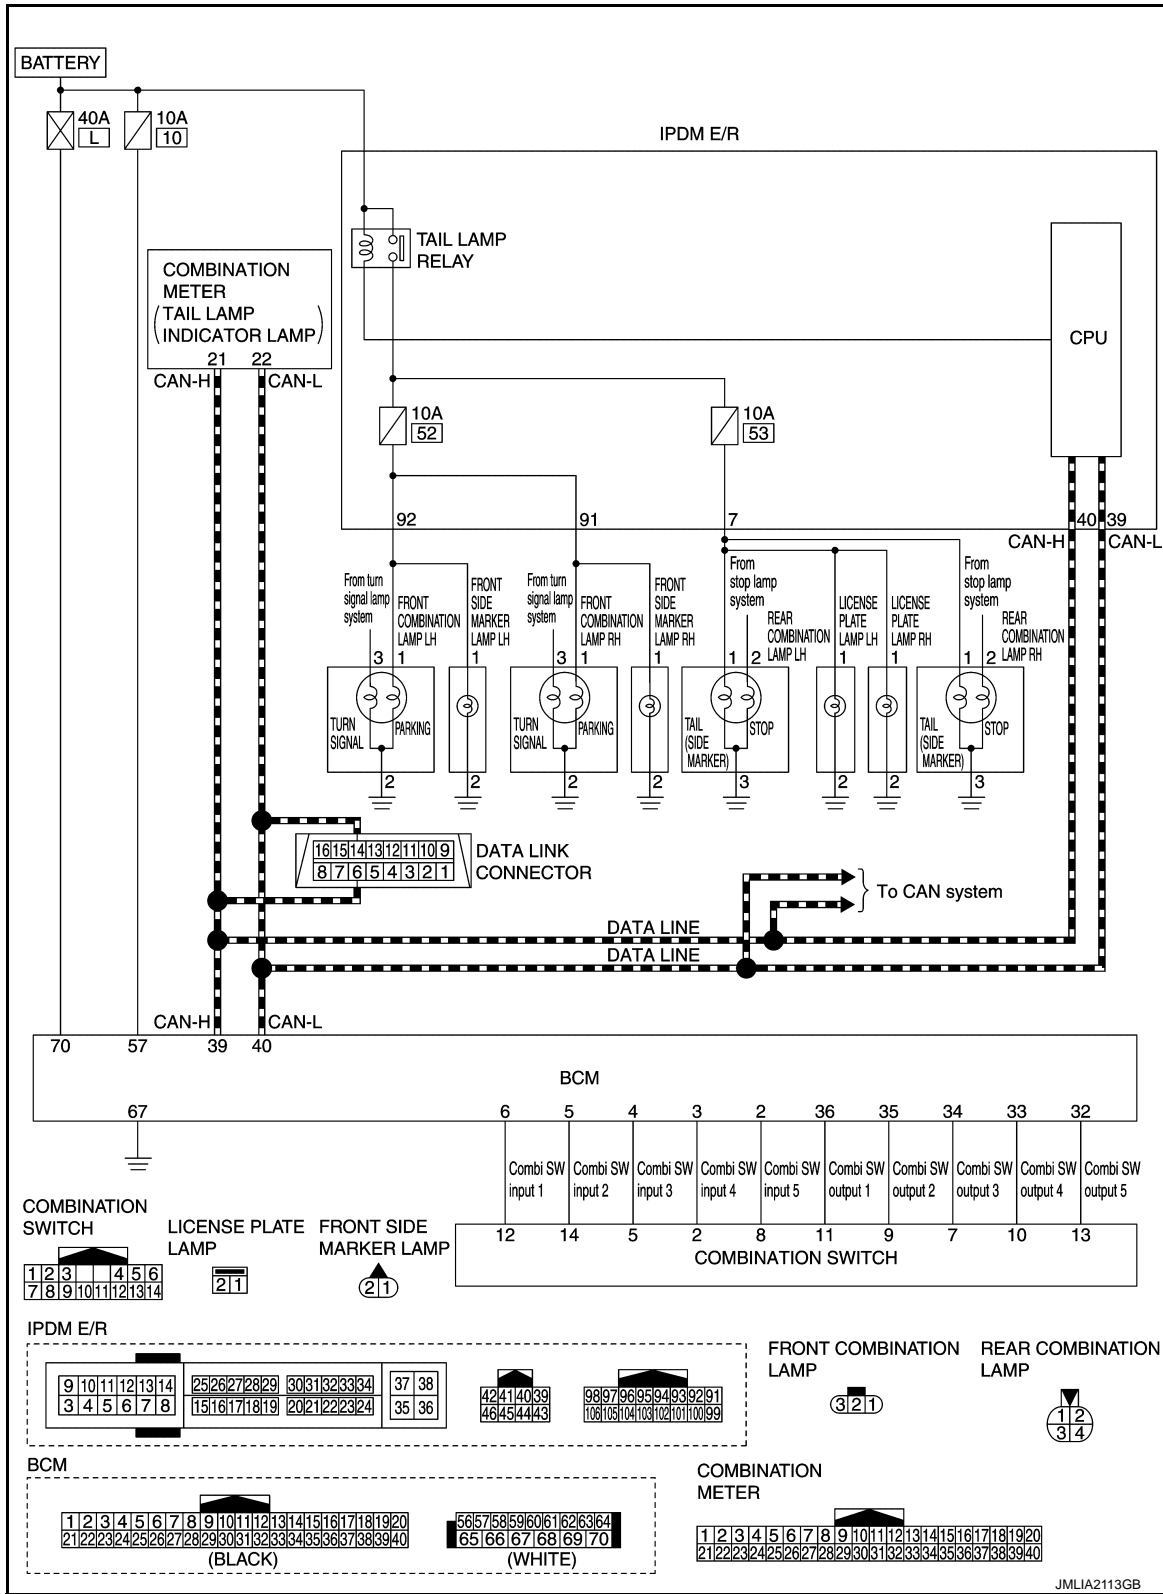

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMP SYSTEM : Fail-safe

INFOID:000000009653135

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

SYSTEM

< SYSTEM DESCRIPTION >

[HALOGEN TYPE]

If No CAN Communication Is Available With BCM


Control part	Fail-safe operation
<ul style="list-style-type: none"> • Parking lamp • License plate lamp • Illumination • Tail lamp • Side marker lamp 	<ul style="list-style-type: none"> • Turns ON the tail lamp relay when the ignition switch is turned ON • Turns OFF the tail lamp relay when the ignition switch is turned OFF

FRONT FOG LAMP SYSTEM

FRONT FOG LAMP SYSTEM : System Description

INFOID:000000009653136

SYSTEM DIAGRAM

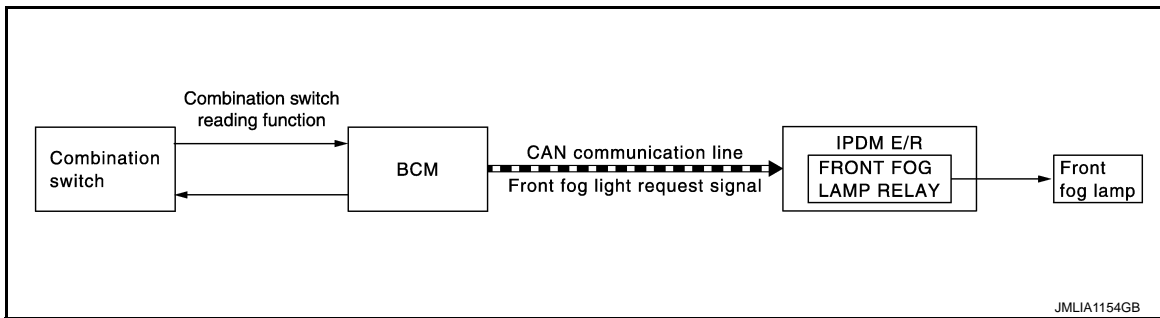

OUTLINE

Front fog lamp is controlled by combination switch reading function, front fog lamp control function of BCM, and relay control function of IPDM E/R.

FRONT FOG LAMP OPERATION

- BCM detects the combination switch condition by the combination switch reading function.
- BCM transmits the front fog light request signal to IPDM E/R via CAN communication according to the front fog lamp ON condition.

Front fog lamp ON condition

- Front fog lamp switch ON, and any of the following condition is satisfied. (except for the high beam ON)

- Lighting switch 2ND
- Lighting switch AUTO (auto light function ON judgment)

IPDM E/R turns the integrated front fog lamp relay ON, and turns the front fog lamp ON according to the front fog light request signal.


SYSTEM

< SYSTEM DESCRIPTION >

[HALOGEN TYPE]

FRONT FOG LAMP SYSTEM : Circuit Diagram

INFOID:000000009653137

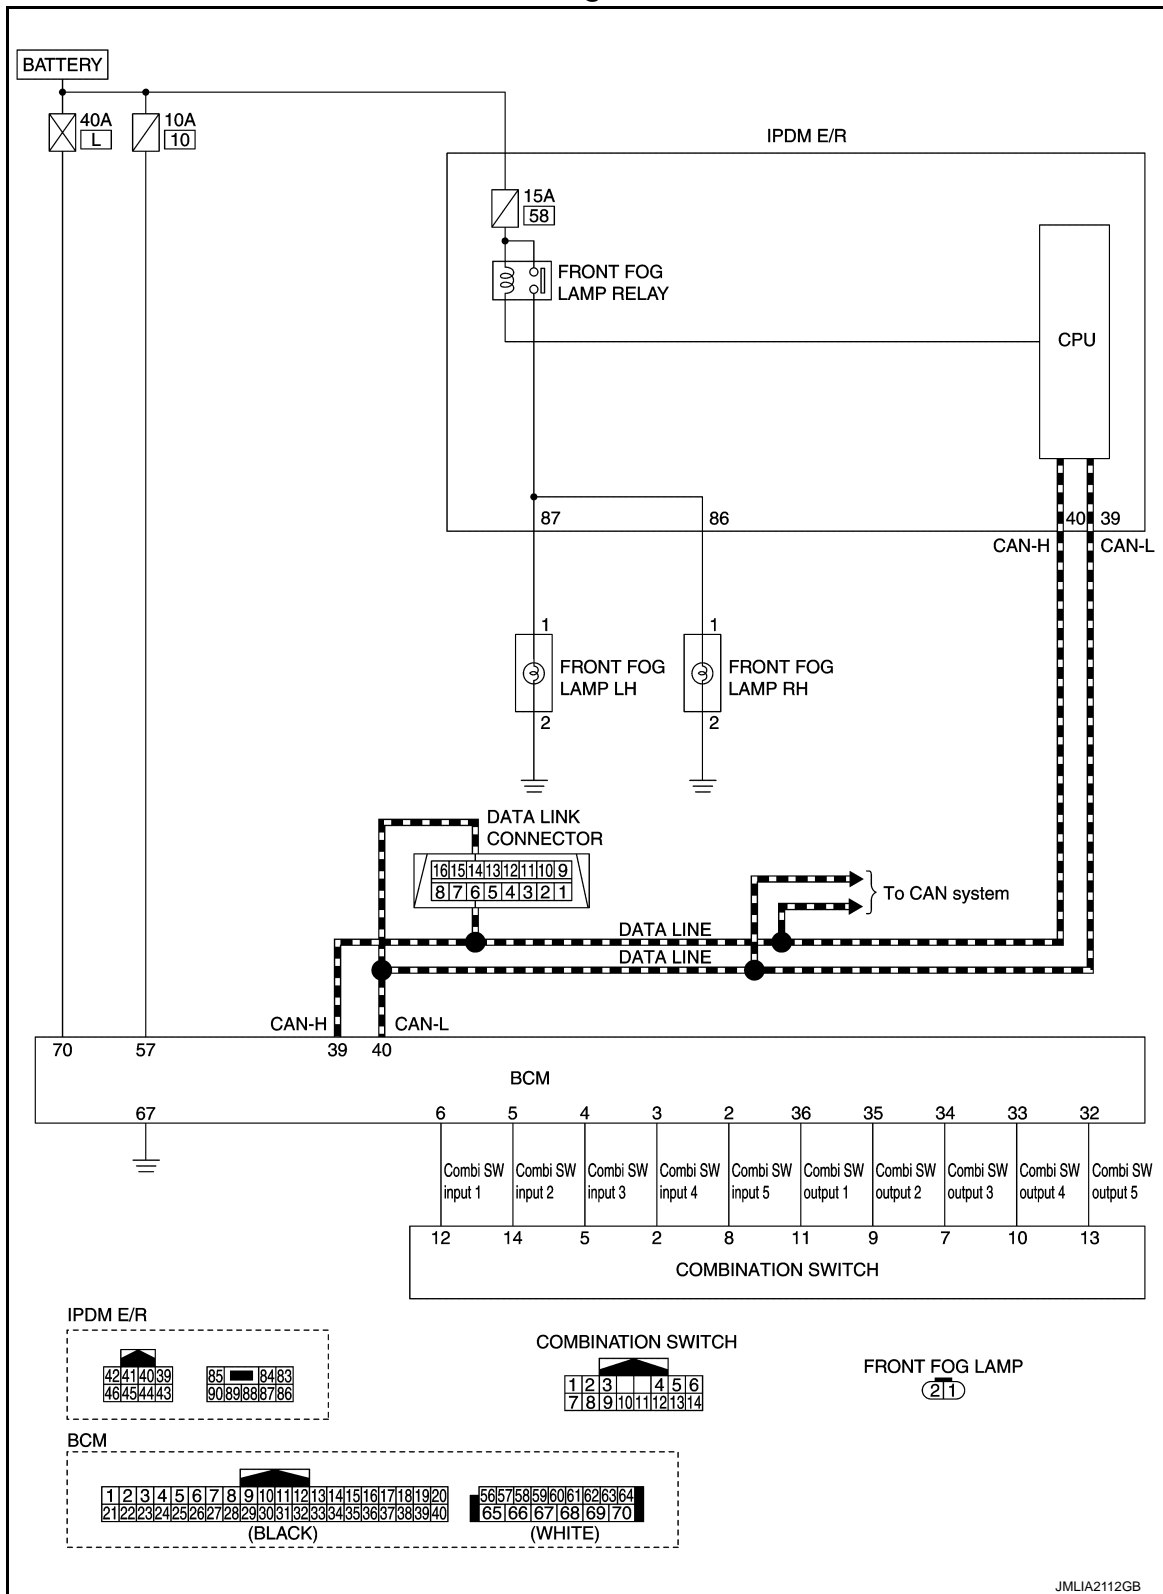

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

FRONT FOG LAMP SYSTEM : Fail-safe

INFOID:000000009653138

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With BCM

SYSTEM

< SYSTEM DESCRIPTION >

[HALOGEN TYPE]


Control part	Fail-safe operation
Front fog lamp	Front fog lamp relay OFF

EXTERIOR LAMP BATTERY SAVER SYSTEM

EXTERIOR LAMP BATTERY SAVER SYSTEM : System Description

INFOID:000000009653139

SYSTEM DIAGRAM

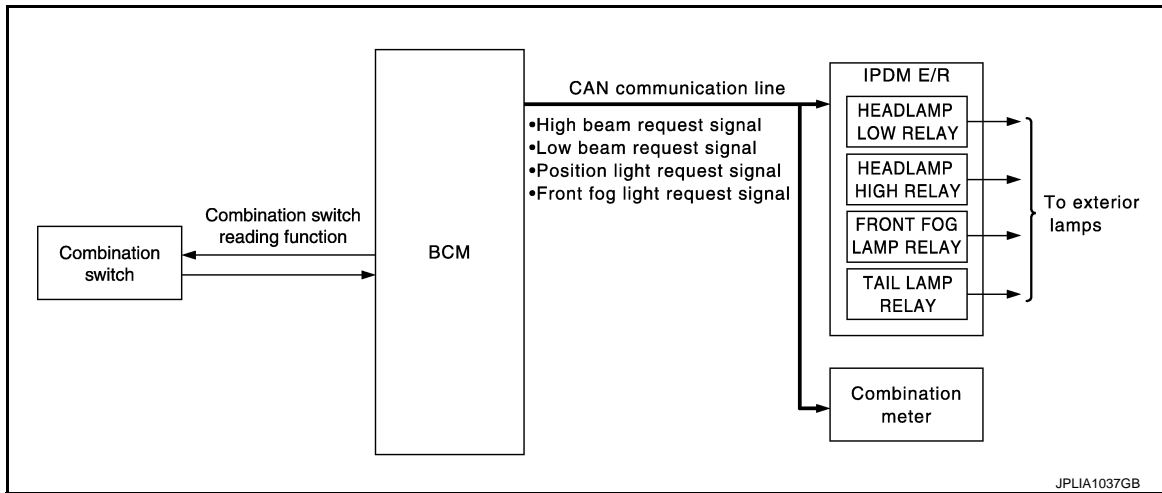

OUTLINE

- Exterior lamp battery saver system is controlled by each function of BCM and IPDM E/R.

Control by BCM

- Combination switch reading function
- Headlamp control function
- Exterior lamp battery saver function

Control by IPDM E/R

- Relay control function
 - BCM turns the exterior lamps* OFF after a period of time to prevent the battery from over-discharge when the ignition switch is turned OFF with the exterior lamps ON.
- *: Headlamp (LO/HI), parking lamp, tail lamp, side marker lamp, license plate lamp and front fog lamp

EXTERIOR LAMP BATTERY SAVER ACTIVATION

BCM activates the timer and turns the exterior lamp OFF 45 seconds after the ignition switch is turned from ON → OFF with the exterior lamps ON.

NOTE:

- Headlamp control function turns the exterior lamps ON normally when the ignition switch is turned ACC or ON (both before and after the exterior lamp battery saver is turned OFF).
- The timer starts at the time that the lighting switch is turned from OFF → 1ST or 2ND with the exterior lamps OFF.


SYSTEM

< SYSTEM DESCRIPTION >

[HALOGEN TYPE]

EXTERIOR LAMP BATTERY SAVER SYSTEM : Circuit Diagram

INFOID:000000009653140

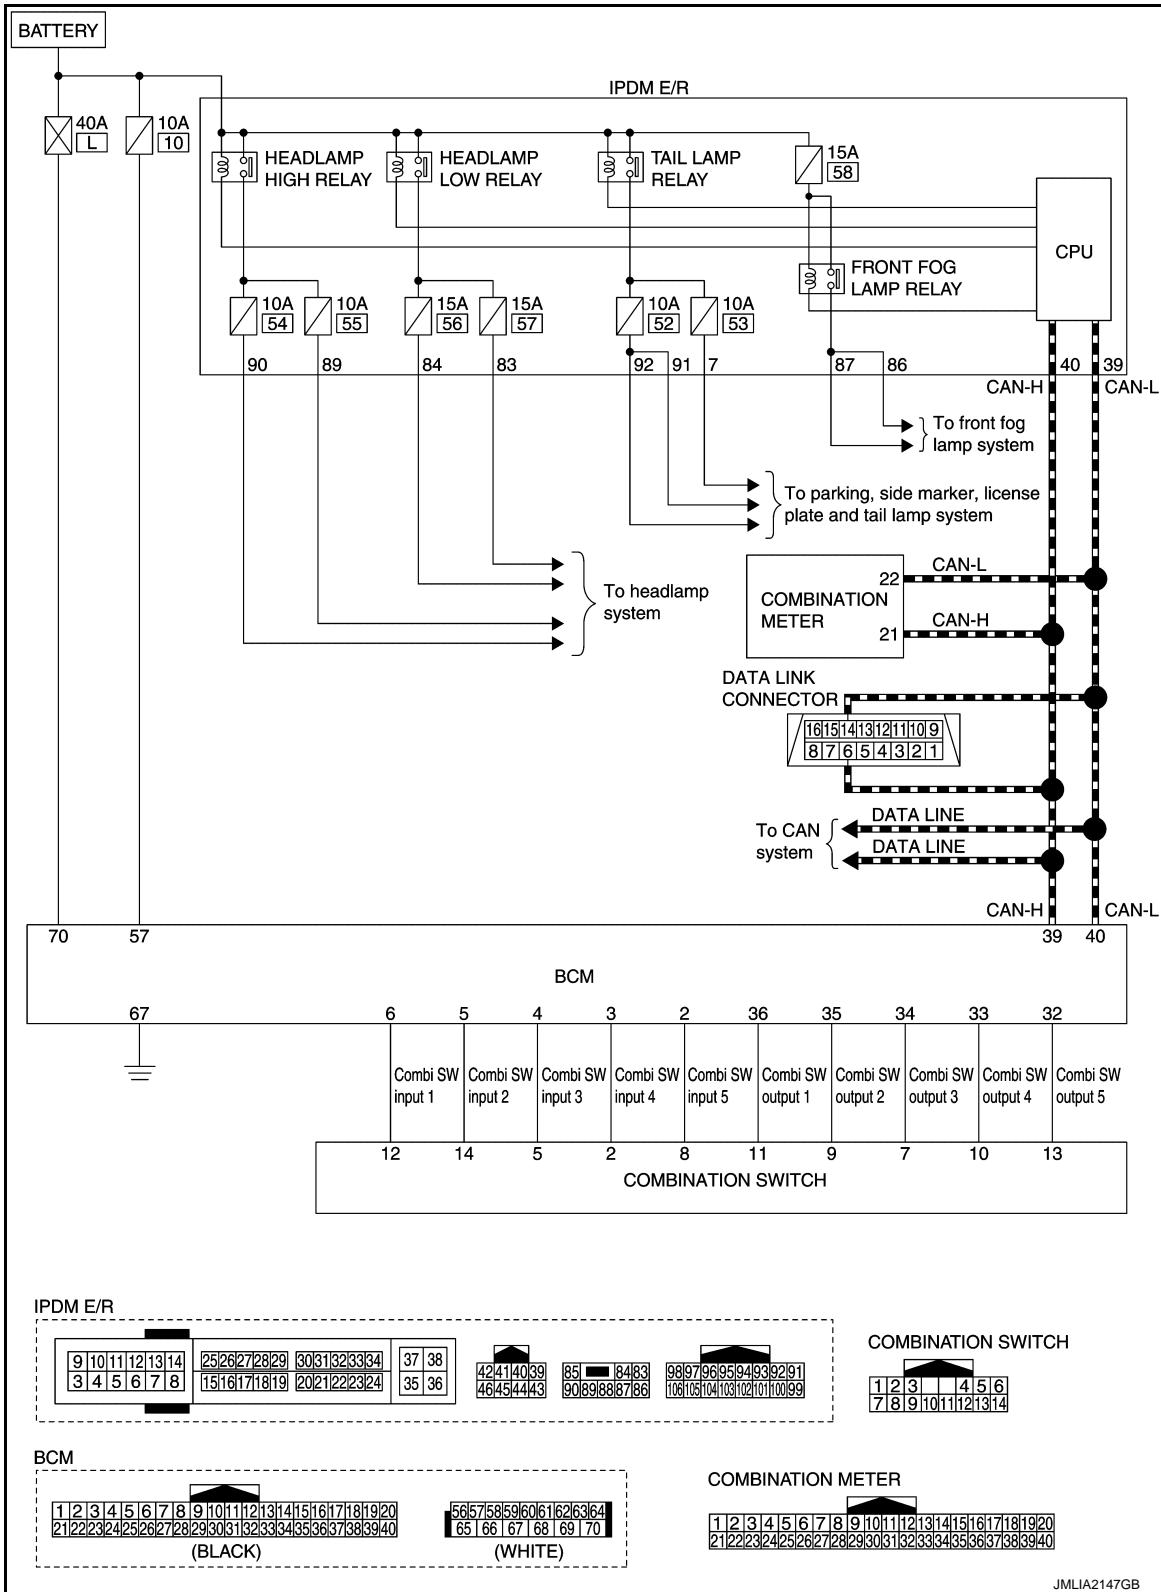

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

DIAGNOSIS SYSTEM (BCM)

[HALOGEN TYPE]

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000009984872

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	<ul style="list-style-type: none"> Read and save the vehicle specification. Write the vehicle specification when replacing BCM.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

×: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp control system	INT LAMP	×	×	×
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER	×	×	×
Air conditioning control system	AIR CONDITONER		×	×*
<ul style="list-style-type: none"> Intelligent Key system Engine start system 	INTELLIGENT KEY	×	×	×
Combination switch	COMB SW		×	
Body control system	BCM	×		
NVIS	IMMU	×	×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
Back door open	TRUNK		×	
Vehicle security system	THEFT ALM	×	×	×
RAP system	RETAINED PWR		×	
Signal buffer system	SIGNAL BUFFER		×	×
TPMS	AIR PRESSURE MONITOR	×	×	×

NOTE:

*: For models with automatic air conditioning control system, this diagnosis mode is not used.

FREEZE FRAME DATA (FFD)

The BCM records the following vehicle condition at the time a particular DTC is detected, and displays on CONSULT.

DIAGNOSIS SYSTEM (BCM)

[HALOGEN TYPE]

< SYSTEM DESCRIPTION >

CONSULT screen item	Indication/Unit	Description
Vehicle Speed	km/h	Vehicle speed of the moment a particular DTC is detected
Odo/Trip Meter	km	Total mileage (Odometer value) of the moment a particular DTC is detected
Vehicle Condition	SLEEP>LOCK	While turning BCM status from low power consumption mode to normal mode [Power supply position is OFF (LOCK)]
	SLEEP>OFF	While turning BCM status from low power consumption mode to normal mode [Power supply position is OFF (OFF)]
	LOCK>ACC	While turning power supply position from OFF (LOCK) to ACC
	ACC>ON	While turning power supply position from ACC to ON
	RUN>ACC	While turning power supply position from RUN to ACC (Except emergency stop operation)
	CRANK>RUN	While turning power supply position from CRANK to RUN
	RUN>URGENT	While turning power supply position from RUN to ACC (Emergency stop operation)
	ACC>OFF	While turning power supply position from ACC to OFF (OFF)
	OFF>LOCK	While turning power supply position from OFF (OFF) to OFF (LOCK)
	OFF>ACC	While turning power supply position from OFF (OFF) to ACC
	ON>CRANK	While turning power supply position from ON to CRANK
	OFF>SLEEP	While turning BCM status from normal mode [Power supply position is OFF (OFF)] to low power consumption mode
	LOCK>SLEEP	While turning BCM status from normal mode [Power supply position is OFF (LOCK)] to low power consumption mode
	LOCK	Power supply position is OFF (LOCK)
	OFF	Power supply position is OFF (OFF)
	ACC	Power supply position is ACC
	ON	Power supply position is ON
ENGINE RUN	Power supply position is RUN	
CRANKING	Power supply position is CRANK	
IGN Counter	0 - 39	The number of times that ignition switch is turned ON after DTC is detected <ul style="list-style-type: none"> • The number is 0 when a malfunction is detected now. • The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. • The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

NOTE:

*: Refer to the following for details of the power supply position.

- OFF (OFF, LOCK): Ignition switch OFF
- ACC: Ignition switch ACC
- IGN: Ignition switch ON with engine stopped
- RUN: Ignition switch ON with engine running
- CRANK: At engine cranking

Power supply position shifts to "OFF (LOCK)" from "OFF (OFF)", when ignition switch is in the OFF position, shift position is in the P position, and any of the following conditions are met.

- Closing door
- Opening door
- Door is locked using door request switch
- Door is locked using Intelligent Key

The power supply position shifts to "ACC" when the push-button ignition switch (push switch) is pushed at "OFF (LOCK)".

HEADLAMP

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[HALOGEN TYPE]

HEADLAMP : CONSULT Function (BCM - HEADLAMP) (Halogen Type Headlamp)

INFOID:000000009653142

WORK SUPPORT

Service item	Setting item	Setting
CUSTOM A/LIGHT SETTING*1	MODE 1*3	Normal
	MODE 2	More sensitive setting than normal setting (Turns ON earlier than normal operation)
	MODE 3	More sensitive setting than MODE 2 (Turns ON earlier than MODE 2)
	MODE 4	Less sensitive setting than normal setting (Turns ON later than normal operation.)
BATTERY SAVER SET	On*3	With the exterior lamp battery saver function
	Off	Without the exterior lamp battery saver function
ILL DELAY SET*1	MODE 1*3	45 sec.
	MODE 2	Without the function
	MODE 3	30 sec.
	MODE 4	60 sec.
	MODE 5	90 sec.
	MODE 6	120 sec.
	MODE 7	150 sec.
	MODE 8	180 sec.
		Sets delay timer function timer operation time. (All doors closed)
AUTO LIGHT LOGIC SET*2	MODE 1*3	With twilight ON custom & with wiper INT, LO and HI
	MODE 2	With twilight ON custom & with wiper LO and HI
	MODE 3	With twilight ON custom & without
	MODE 4	Without twilight ON custom & with wiper INT, LO and HI
	MODE 5	Without twilight ON custom & with wiper LO and HI
	MODE 6	Without twilight ON custom & without

*1: For models without auto light system, this item is displayed but is not operated.

*2: For models without auto light system and all models for Canada, this item is displayed but is not operated.

*3: Factory setting

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor item [Unit]	Description
PUSH SW [On/Off]	The switch status input from push-button ignition switch
ENGINE STATE [Stop/Stall/Crank/Run]	The engine status received from ECM with CAN communication
VEH SPEED 1 [km/h]	The value of the vehicle speed received from combination meter via CAN communication

DIAGNOSIS SYSTEM (BCM)

[HALOGEN TYPE]

< SYSTEM DESCRIPTION >

Monitor item [Unit]	Description	
TURN SIGNAL R [On/Off]	Each switch status that BCM judges from the combination switch reading function	A
TURN SIGNAL L [On/Off]		B
TAIL LAMP SW [On/Off]		C
HI BEAM SW [On/Off]		D
HEAD LAMP SW1 [On/Off]		E
HEAD LAMP SW2 [On/Off]		F
PASSING SW [On/Off]		G
AUTO LIGHT SW*1 [On/Off]		H
FR FOG SW*2 [On/Off]		I
DOOR SW-DR [On/Off]	The switch status input from front door switch (driver side)	J
DOOR SW-AS [On/Off]	The switch status input from front door switch (passenger side)	K
DOOR SW-RR [On/Off]	The switch status input from sliding door switch RH	L
DOOR SW- RL [On/Off]	The switch status input from sliding door switch LH	M
DOOR SW-BK [On/Off]	The switch status input from back door switch	N
OPTICAL SENSOR [On/Off/NG]	NOTE: This item is indicated, but can not monitored	O
OPTI SEN (DTCT)*1 [V]	The value of outside brightness voltage input from the optical sensor	P
OPTI SEN (FILT)*1 [V]	The value of outside brightness voltage filtered by BCM	EXL

*1: For models without auto light system, this item is not displayed.

*2: For models without front fog lamp, this item is displayed but is not monitored.

ACTIVE TEST

Test item	Operation	Description	
TAIL LAMP	On	Transmits the position light request signal to IPDM E/R via CAN communication to turn the tail lamp ON	O
	Off	Stops the tail lamp request signal transmission	P
HEAD LAMP	Hi	Transmits the high beam request signal via CAN communication to turn the headlamp (HI)	P
	Lo	Transmits the low beam request signal via CAN communication to turn the headlamp (LO)	
	Off	Stops the high & low beam request signal transmission	
FR FOG LAMP*1	On	Transmits the front fog light request signal to IPDM E/R via CAN communication to turn the front fog lamp ON	
	Off	Stops the front light request signal transmission	

DIAGNOSIS SYSTEM (BCM)

[HALOGEN TYPE]

< SYSTEM DESCRIPTION >

Test item	Operation	Description
DAYTIME RUNNING LIGHT*2	On	Transmits the daytime running light request signal via CAN communication to IPDM E/R
	Off	Stop the daytime running light request signal transmission
ILL DIM SIGNAL	On	<ul style="list-style-type: none"> • Transmits the dimmer signal to combination meter via CAN communication and dims combination meter*3 • Transmits the dimmer signal to AV control unit and dims display
	Off	Stops the dimmer signal transmission

*1: For models without front fog lamp, this item is displayed but is not tested.

*2: For models without daytime running light system, this item is not displayed.

*3: Except for CANADA

FLASHER

FLASHER : CONSULT Function (BCM - FLASHER) (Halagen Type Headlamp)

INFOID:000000009653143

WORK SUPPORT

Service item	Setting item	Setting	
HAZARD ANSWER BACK	Lock Only	With locking only	Sets the hazard warning lamp answer back function when the door is lock/unlock with the request switch or the key fob.
	Unlk Only	With unlocking only	
	Lock&Unlk*	With locking/unlocking	
	Off	Without the function	

*: Factory setting

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor item [Unit]	Description
REQ SW-DR [On/Off]	The switch status input from the request switch (driver side)
REQ SW-AS [On/Off]	The switch status input from the request switch (passenger side)
PUSH SW [On/Off]	The switch status input from the push-button ignition switch
TURN SIGNAL R [On/Off]	Each switch status that BCM detects from the combination switch reading function
TURN SIGNAL L [On/Off]	
HAZARD SW [On/Off]	The switch status input from the hazard switch
RKE-LOCK [On/Off]	Lock signal status received from the remote keyless entry receiver
RKE-UNLOCK [On/Off]	Unlock signal status received from the remote keyless entry receiver
RKE-PANIC [On/Off]	Panic alarm signal status received from the remote keyless entry receiver

ACTIVE TEST

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[HALOGEN TYPE]

Test item	Operation	Description
FLASHER	RH	Outputs the voltage to turn on the right side turn signal lamps.
	LH	Outputs the voltage to blink turn on left side turn signal lamps.
	Off	Stops the voltage to turn the turn signal lamps OFF.

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

DIAGNOSIS SYSTEM (IPDM E/R)

Diagnosis Description

INFOID:000000009984873

AUTO ACTIVE TEST

Description

In auto active test, the IPDM E/R sends a drive signal to the following systems to check their operation.

- Oil pressure warning lamp
- Front wiper (LO, HI)
- Parking lamp
- License plate lamp
- Tail lamp
- Side marker lamp
- Front fog lamp
- Headlamp (LO, HI)
- A/C compressor (magnet clutch)
- Cooling fan

Operation Procedure

NOTE:

Never perform auto active test in the following condition.

- Passenger door is open.
 - CONSULT is connected.
1. Close the hood and lift the wiper arms from the windshield. (Prevent windshield damage due to wiper operation)
NOTE:
 When auto active test is performed with hood opened, sprinkle water on windshield beforehand.
 2. Turn the ignition switch OFF.
 3. Turn the ignition switch ON, and within 20 seconds, press the front door switch (driver side) 10 times. Then turn the ignition switch OFF.
 4. Turn the ignition switch ON within 10 seconds. After that the horn sounds once and the auto active test starts.
NOTE:
 Engine starts when ignition switch is turned ON while brake pedal is depressed.
 5. The oil pressure warning lamp starts blinking when the auto active test starts.
 6. After a series of the following operations is repeated 3 times, auto active test is completed.

NOTE:

- When auto active test has to be cancelled halfway through test, turn the ignition switch OFF.
- When auto active test is not activated, door switch may be the cause. Check door switch. Refer to [DLK-241](#), "[Component Function Check](#)".

Inspection in Auto Active Test

When auto active test is actuated, the following 6 steps are repeated 3 times.


Operation sequence	Inspection location	Operation
1	Oil pressure warning lamp	Blinks continuously during operation of auto active test
2	Front wiper motor	LO for 5 seconds → HI for 5 seconds
3	<ul style="list-style-type: none"> • Parking lamp • License plate lamp • Tail lamp • Side marker lamp • Front fog lamp 	10 seconds
4	Headlamp	<ul style="list-style-type: none"> • LO 10 seconds • HI ON ⇔ OFF 5 times
5	A/C compressor (magnet clutch)	ON ⇔ OFF 5 times
6	Cooling fan	LO for 5 seconds → MID for 3 seconds → HI for 2 seconds

DIAGNOSIS SYSTEM (IPDM E/R)

[HALOGEN TYPE]

< SYSTEM DESCRIPTION >

Concept of auto active test

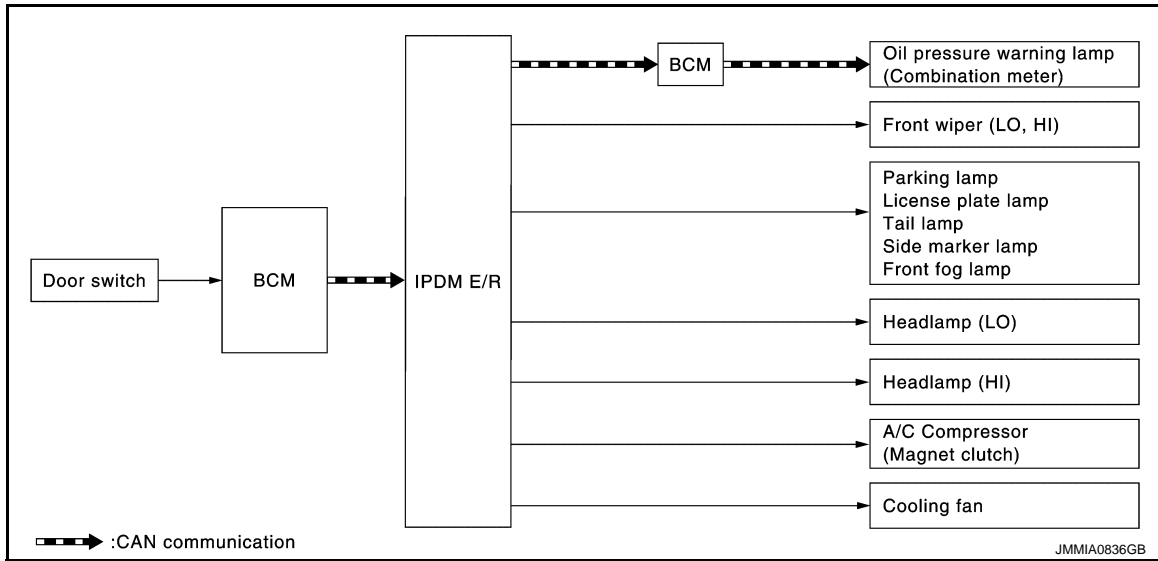

- IPDM E/R starts the auto active test with the door switch signals transmitted by BCM via CAN communication. Therefore, the CAN communication line between IPDM E/R and BCM is considered normal if the auto active test starts successfully.
- The auto active test facilitates troubleshooting if any systems controlled by IPDM E/R cannot be operated.

Diagnosis chart in auto active test

Symptom	Inspection contents	Possible cause
Any of the following components do not operate • Parking lamp • License plate lamp • Tail lamp • Side marker lamp • Front fog lamp • Headlamp (HI, LO) • Front wiper motor	Perform auto active test. Does the applicable system operate?	YES BCM signal input circuit
		NO • Lamp or motor • Lamp or motor ground circuit • Harness or connector between IPDM E/R and applicable system • IPDM E/R
A/C compressor does not operate	Perform auto active test. Does the magnet clutch operate?	YES • Combination meter signal input circuit • CAN communication signal between Combination meter and ECM • CAN communication signal between ECM and IPDM E/R
		NO • Magnet clutch • Harness or connector between IPDM E/R and magnet clutch • IPDM E/R
Oil pressure warning lamp does not operate	Perform auto active test. Does the oil pressure warning lamp blink?	YES • Harness or connector between IPDM E/R and oil pressure switch • Oil pressure switch • IPDM E/R
		NO • CAN communication signal between IPDM E/R and BCM • CAN communication signal between BCM and Combination meter • Combination meter

DIAGNOSIS SYSTEM (IPDM E/R)

[HALOGEN TYPE]

< SYSTEM DESCRIPTION >

Symptom	Inspection contents	Possible cause
Cooling fan does not operate	Perform auto active test. Does the cooling fan operate?	YES <ul style="list-style-type: none"> ECM signal input circuit CAN communication signal between ECM and IPDM E/R
		NO <ul style="list-style-type: none"> Cooling fan Harness or connector between cooling fan and cooling fan relay Harness or connector between IPDM E/R and cooling fan relay Cooling fan relay IPDM E/R

CONSULT Function (IPDM E/R)

INFOID:000000009984874

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with IPDM E/R.

Diagnosis mode	Description
Ecu Identification	Allows confirmation of IPDM E/R part number.
Self Diagnostic Result	Displays the diagnosis results judged by IPDM E/R.
Data Monitor	Displays the real-time input/output data from IPDM E/R input/output data.
Active Test	IPDM E/R can provide a drive signal to electronic components to check their operations.
CAN Diag Support Monitor	The results of transmit/receive diagnosis of CAN communication can be read.

SELF DIAGNOSTIC RESULT

Refer to [PCS-24. "DTC Index"](#).

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item [Unit]	MAIN SIG- NALS	Description
MOTOR FAN REQ [1/2/3/4]	×	Displays the value of the cooling fan speed signal received from ECM via CAN communication.
AC COMP REQ [Off/On]	×	Displays the status of the A/C compressor request signal received from ECM via CAN communication.
TAIL&CLR REQ [Off/On]	×	Displays the status of the position light request signal received from BCM via CAN communication.
HL LO REQ [Off/On]	×	Displays the status of the low beam request signal received from BCM via CAN communication.
HL HI REQ [Off/On]	×	Displays the status of the high beam request signal received from BCM via CAN communication.
FR FOG REQ [Off/On]	×	Displays the status of the front fog light request signal received from BCM via CAN communication.
FR WIP REQ [Stop/1LOW/Low/Hi]	×	Displays the status of the front wiper request signal received from BCM via CAN communication.
WIP AUTO STOP [STOP P/ACT P]	×	Displays the status of the front wiper stop position signal judged by IPDM E/R.
WIP PROT [Off/BLOCK]	×	Displays the status of the front wiper fail-safe operation judged by IPDM E/R.
IGN RLY1 -REQ [Off/On]		Displays the status of the ignition switch ON signal received from BCM via CAN communication.
IGN RLY [Off/On]	×	Displays the status of the ignition relay judged by IPDM E/R.

DIAGNOSIS SYSTEM (IPDM E/R)

[HALOGEN TYPE]

< SYSTEM DESCRIPTION >

Monitor Item [Unit]	MAIN SIG- NALS	Description	
PUSH SW [Off/On]		Displays the status of the push-button ignition switch judged by IPDM E/R.	A
INTER/NP SW [Off/On]		Displays the status of the shift position judged by IPDM E/R.	B
ST RLY CONT [Off/On]		Displays the status of the starter relay status signal received from BCM via CAN communication.	C
IHBT RLY -REQ [Off/On]		Displays the status of the starter control relay signal received from BCM via CAN communication.	D
ST/INH RLY [Off/ ST /INH/UNKWN]		Displays the status of the starter relay and starter control relay judged by IPDM E/R.	D
DETTENT SW [Off/On]		Displays the status of the CVT shift selector (detention switch) judged by IPDM E/R.	E
S/L RLY -REQ [Off/On]		NOTE: The item is indicated, but not monitored.	F
S/L STATE [LOCK/UNLK/UNKWN]		NOTE: The item is indicated, but not monitored.	F
DTRL REQ [Off/On]		Displays the status of the daytime running light request signal received from BCM via CAN communication. NOTE: This item is monitored only on the vehicle with daytime running light system.	G
OIL P SW [Open/Close]		Displays the status of the oil pressure switch judged by IPDM E/R.	H
HOOD SW [Off/On]		NOTE: The item is indicated, but not monitored.	I
HL WASHER REQ [Off/On]		NOTE: The item is indicated, but not monitored.	I
THFT HRN REQ [Off/On]		Displays the status of the theft warning horn request signal received from BCM via CAN communication.	J
HORN CHIRP [Off/On]		Displays the status of the horn reminder signal received from BCM via CAN communication.	J
CRNRNG LMP REQ [Off/On]		NOTE: The item is indicated, but not monitored.	K

ACTIVE TEST

Test item

EXL

Test item	Operation	Description	
CORNERING LAMP	Off	NOTE: The item is indicated, but cannot be tested.	M
	LH		N
	RH		N
HORN	On	Operates horn relay for 20 ms.	O
FRONT WIPER	Off	OFF	O
	Lo	Operates the front wiper relay.	P
	Hi	Operates the front wiper relay and front wiper high relay.	P
MOTOR FAN	1	OFF	P
	2	Operates the cooling fan relay-1.	
	3	Operates the cooling fan relay-2.	
	4	Operates the cooling fan relay-2 and cooling fan relay-3.	
HEAD LAMP WASHER	On	NOTE: The item is indicated, but cannot be tested.	

DIAGNOSIS SYSTEM (IPDM E/R)

[HALOGEN TYPE]

< SYSTEM DESCRIPTION >

Test item	Operation	Description
EXTERNAL LAMPS	Off	OFF
	TAIL	Operates the tail lamp relay and the daytime running light relay.
	Lo	Operates the headlamp low relay.
	Hi	Operates the headlamp low relay and ON/OFF the headlamp high relay at 1 second intervals.
	Fog	Operates the front fog lamp relay.

ECU DIAGNOSIS INFORMATION

BCM, IPDM E/R

List of ECU Reference

INFOID:000000009653146

ECU	Reference
BCM	BCS-40, "Reference Value"
	BCS-62, "Fail-safe"
	BCS-62, "DTC Inspection Priority Chart"
	BCS-63, "DTC Index"
IPDM E/R	PCS-16, "Reference Value"
	PCS-23, "Fail-safe"
	PCS-24, "DTC Index"

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL


< WIRING DIAGRAM >

WIRING DIAGRAM

EXTERIOR LIGHTING SYSTEM

Wiring Diagram

INFOID:000000009984770

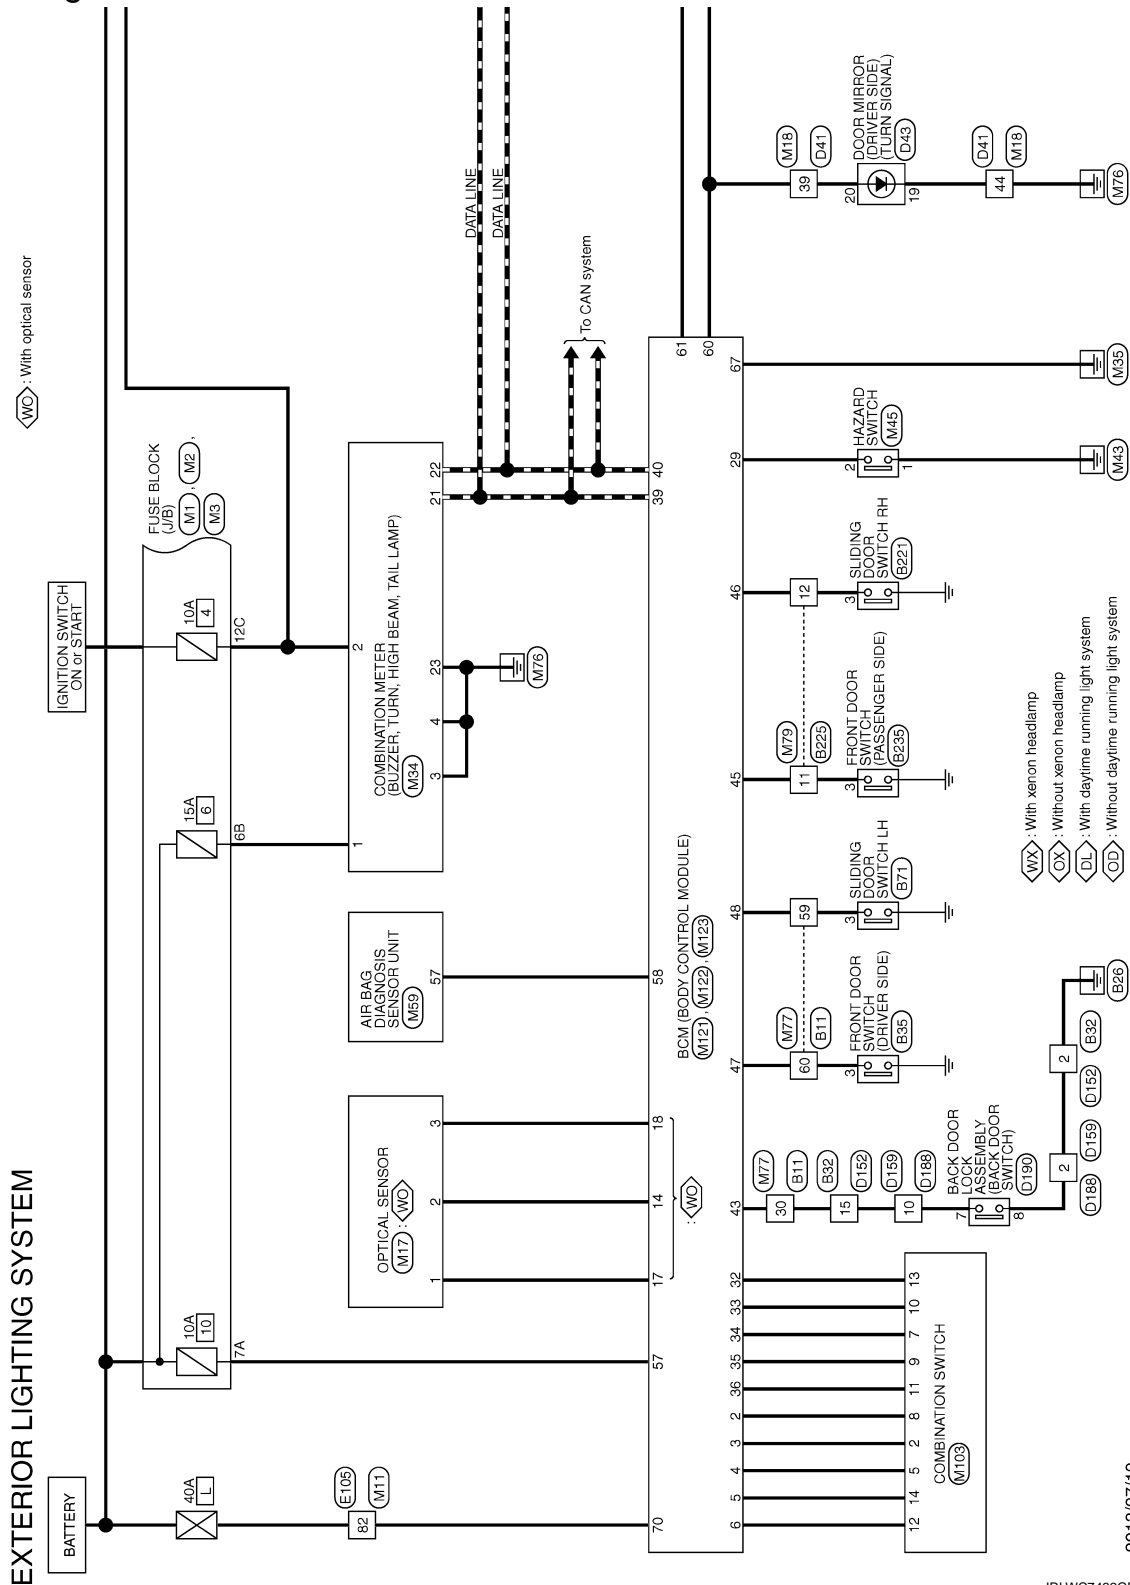


2013/07/10

JRLWC7432GB

EXTERIOR LIGHTING SYSTEM

< WIRING DIAGRAM >

[HALOGEN TYPE]

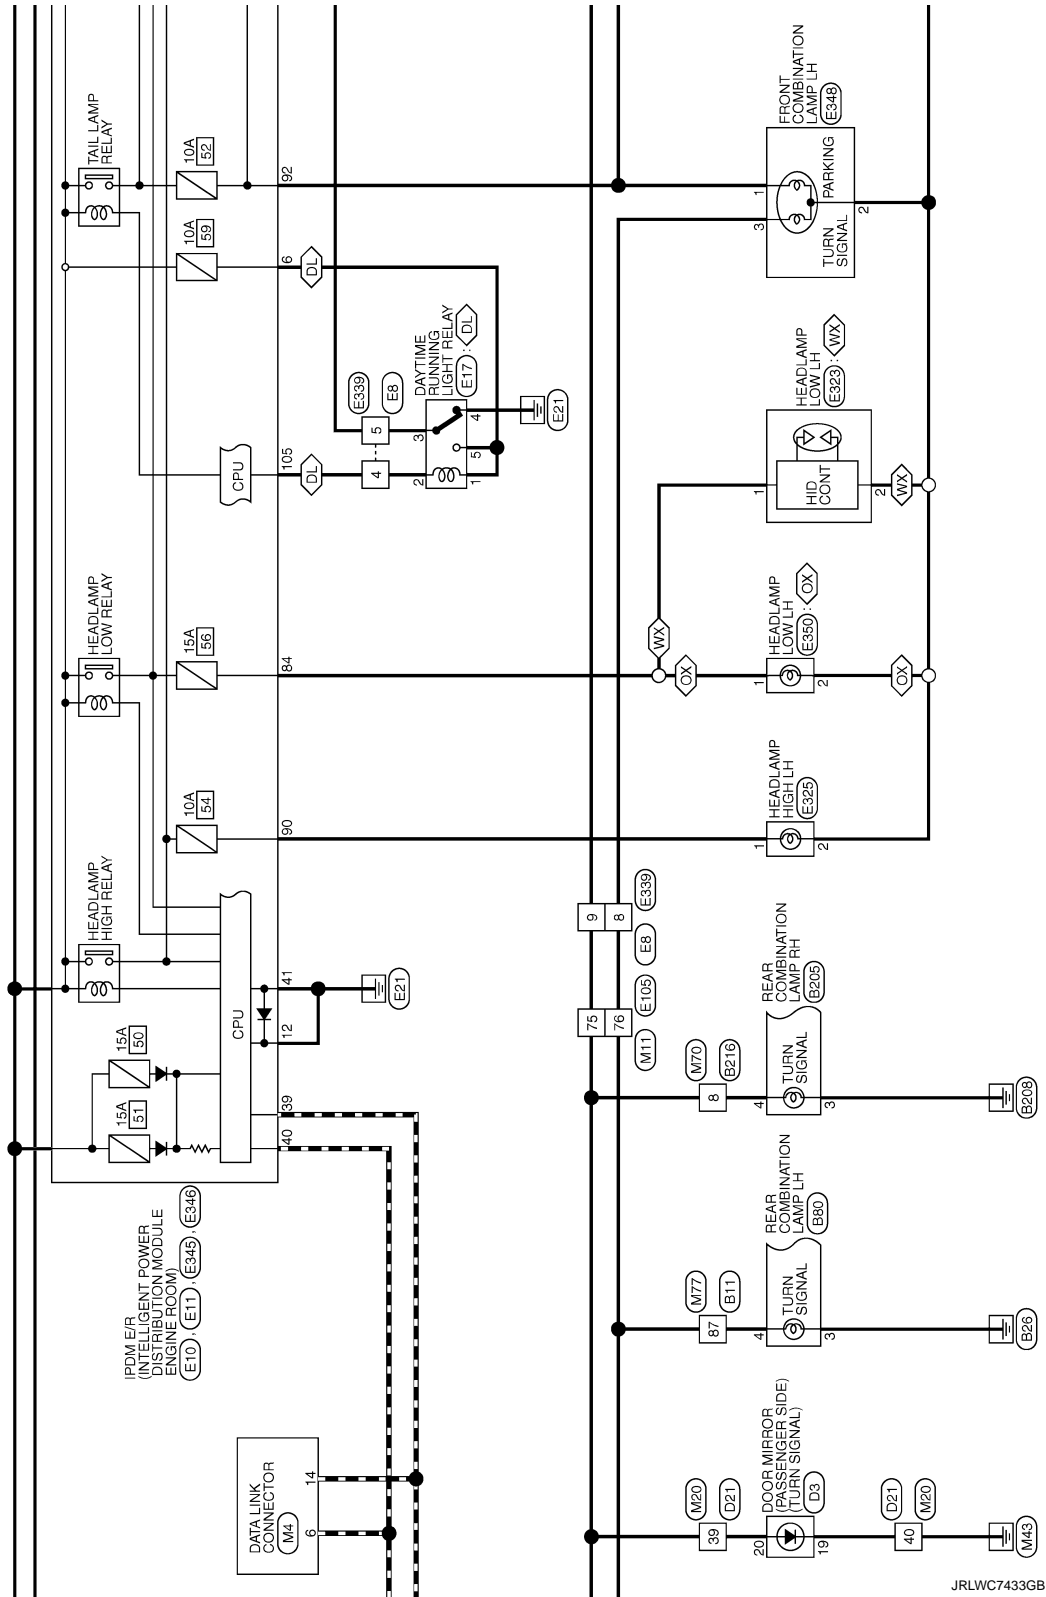


A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

JRLWC7433GB

EXTERIOR LIGHTING SYSTEM

[HALOGEN TYPE]


< WIRING DIAGRAM >

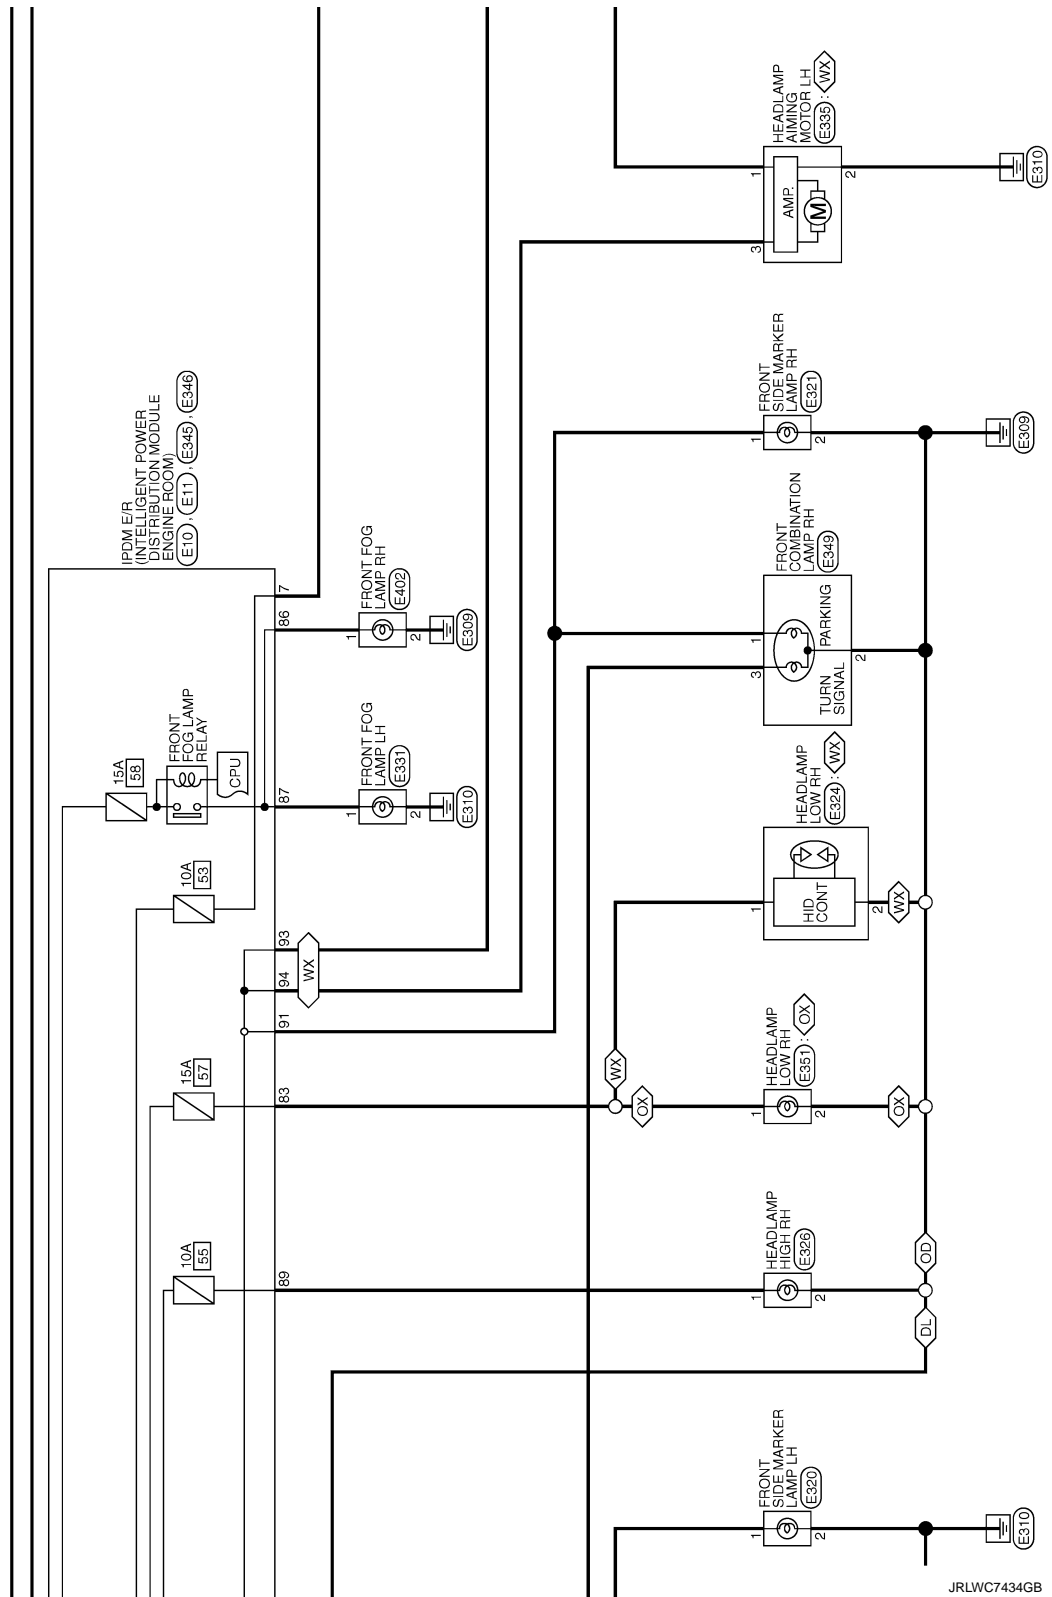

EXTERIOR LIGHTING SYSTEM

[HALOGEN TYPE]

< WIRING DIAGRAM >

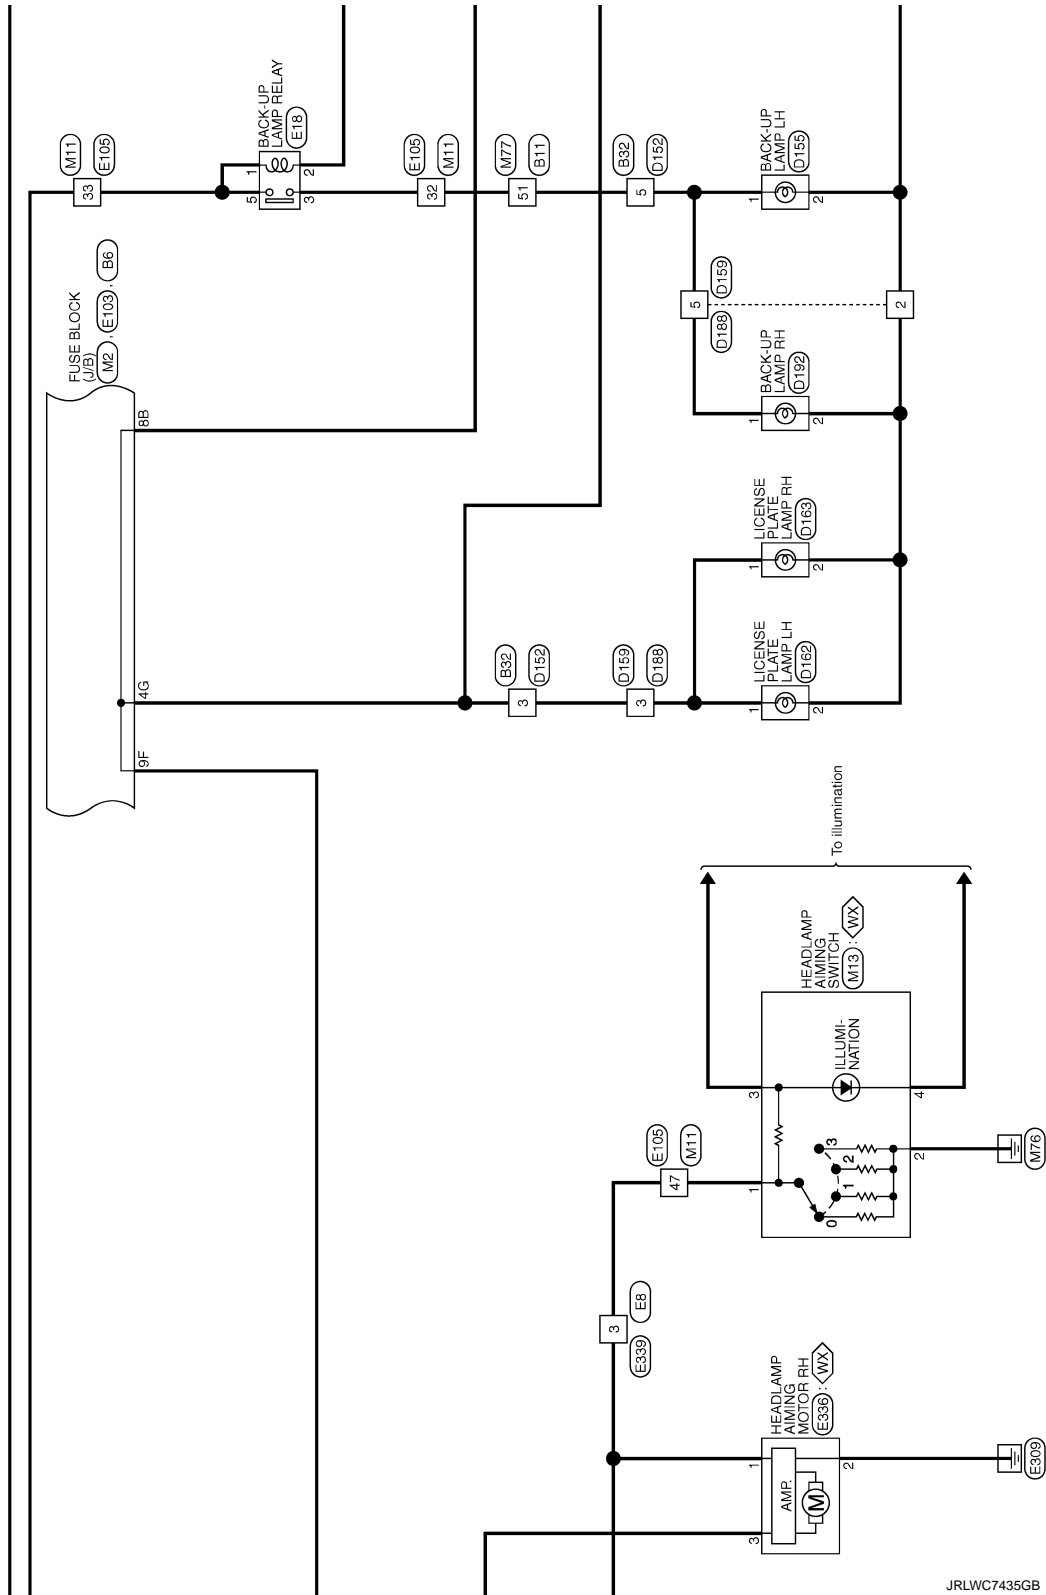


JRLWC7435GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

EXTERIOR LIGHTING SYSTEM

< WIRING DIAGRAM >

[HALOGEN TYPE]

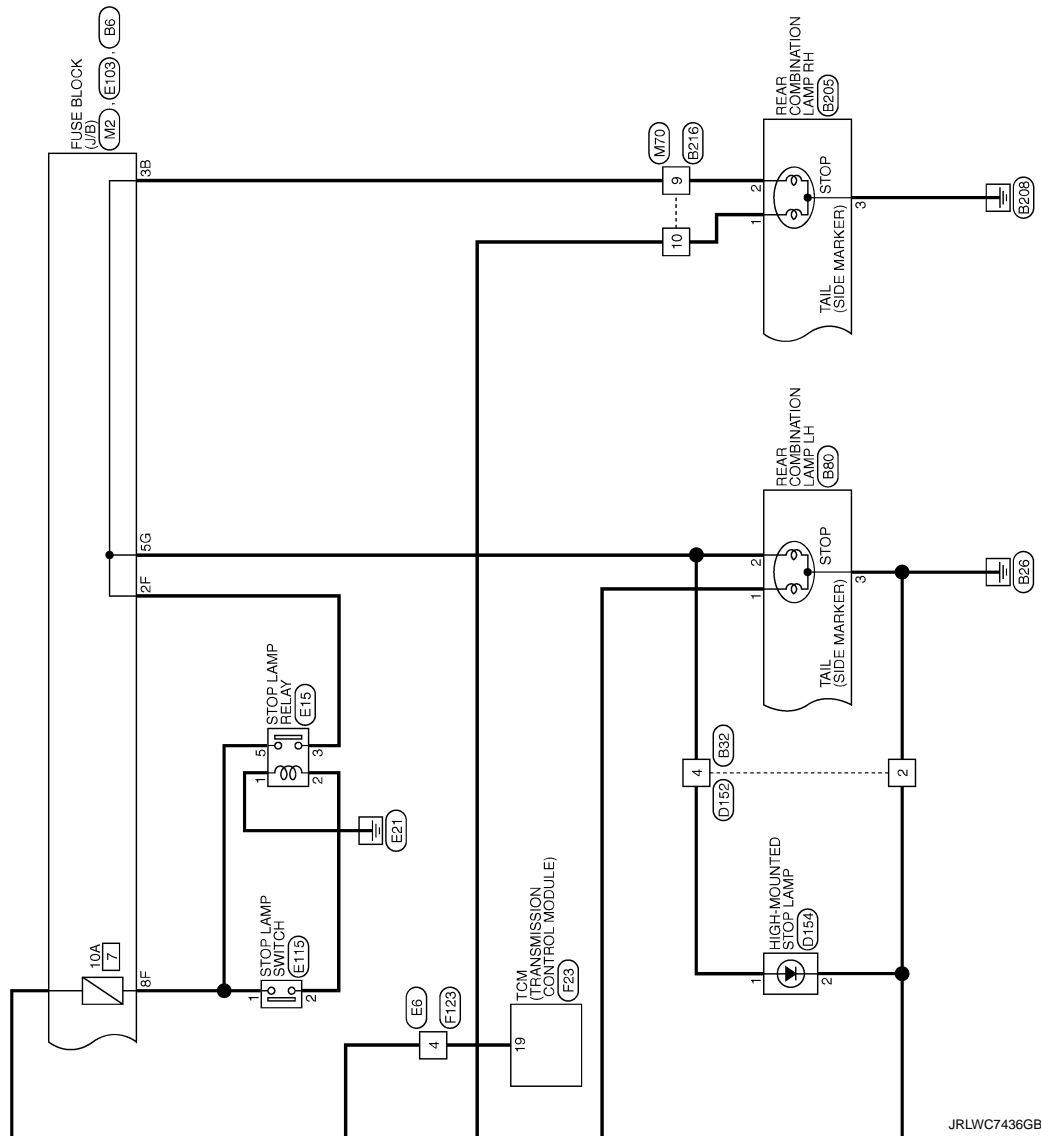

JRLWC7436GB


EXTERIOR LIGHTING SYSTEM

< WIRING DIAGRAM >

[HALOGEN TYPE]


EXTERIOR LIGHTING SYSTEM

Connector No.	B56
Connector Name	FUSE BLOCK (J/B)
Connector Type	MS3212FR-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
10	LG	-
12	Y	-
13	G	-
15	W	-
26	SB	-
46	SB	-
56	L	-


Connector No.	B11
Connector Name	WIRE TO WIFE
Connector Type	TH80MM-CS19



Terminal No.	Color Of Wire	Signal Name [Specification]
10	LG	-
12	Y	-
13	P	-
15	L	-
29	GR	-
30	W	-
31	BR	-
37	SHIELD	-
38	FL	-
39	FL	-
40	B/W	-
51	G	-
52	B/P	-
53	V	-

54	P	-
57	Y	-
58	L	-
59	V	-
60	O	-
61	B	-
62	W	-
63	Y	-
64	W	-
65	R	-
66	SHIELD	-
67	B	-
68	W	-
69	SHIELD	-
70	R	-
71	GR	-
72	P	-
74	BR	-
75	SB	-
77	V	-
78	LG	-
79	W	-
80	R	-
81	SB	-
82	V	-
87	BR	-
88	P	-
89	BR	-
90	R	-
91	P	-
92	G	-

Connector No.	B32
Connector Name	WIRE TO WIFE
Connector Type	TH24MM-BH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	SB	-
3	SB	-
4	L	-
5	O	-
6	SB	-
9	SHIELD	-
10	R/L	-
11	B	-
12	R/W	-
13	GR	-
14	O	-
15	W	-
16	G	-
17	R	-
18	BR	-
19	SB	-
20	P	-
21	LG	-
22	BR	-
23	V	-
24	P	-

Connector No.	B55
Connector Name	FRONT DOOR SWITCH (DRIVER SIDE)
Connector Type	TH84FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
3	O	-

Connector No.	B71
Connector Name	SLIDING DOOR SWITCH LH
Connector Type	TH84FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
3	V	-

Connector No.	B80
Connector Name	REAR COMBINATION LAMP LH
Connector Type	RS94EGY-FR



JRLWC7437GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

EXTERIOR LIGHTING SYSTEM

< WIRING DIAGRAM >

[HALOGEN TYPE]

EXTERIOR LIGHTING SYSTEM


Terminal No.	Color Of Wire	Signal Name [Specification]
1	SB	-
2	L	-
3	B	-
4	BR	-

Connector No.	B205
Connector Name	REAR COMBINATION LAMP RH
Connector Type	RS04FGY-PR



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	P	-
3	B	-
4	V	-

Connector No.	B216
Connector Name	WIRE TO WIRE
Connector Type	NS16MBR-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	SB	-
3	Y	-


Terminal No.	Color Of Wire	Signal Name [Specification]
13	G	-
14	SB	-
15	Y	-

Connector No.	B221
Connector Name	SLIDING DOOR SWITCH RH
Connector Type	TH04FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
3	W	-

Connector No.	B225
Connector Name	WIRE TO WIRE
Connector Type	TH16MW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
2	W	-
3	B	-
4	P	-
5	BR	-
9	L	-
10	LG	-
11	SB	-
12	Y	-
13	O	-
14	GR	-
15	LG	-
16	O	-

Connector No.	B225
Connector Name	FRONT DOOR SWITCH (PASSENGER SIDE)
Connector Type	TH04FW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
3	SB	-

Connector No.	D03
Connector Name	DOOR MIRROR (PASSENGER SIDE)
Connector Type	TH24MW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
5	W	-
6	R	-
7	LG	-
10	BR	-
11	SB	-
12	V	-
13	G	-
17	SHIELD	-
19	B	-
20	LG	-
21	O	-
22	P	-
23	W	-
24	Y	-

Connector No.	D21
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-CS15



Terminal No.	Color Of Wire	Signal Name [Specification]
7	W	-
8	R	-
9	V	-
8	BR	-
9	L	-
10	LG	-
11	LG	-
12	R	-
14	B	-
15	W	-
16	P	-
17	Y	-
18	R	-
19	W	-
21	R	-
23	W	-
24	SHIELD	-
25	G	-
26	L	-
36	LG	-
37	Y	-
38	L	-
39	O	-
40	B	-
41	W	-
42	R	-
43	P	-
44	G	-
46	GR	-
48	BR	-
51	V	-
52	SB	-
53	SHIELD	-
54	G	-
55	R	-


EXTERIOR LIGHTING SYSTEM

< WIRING DIAGRAM >

[HALOGEN TYPE]

EXTERIOR LIGHTING SYSTEM

Connector No.	D11
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-CS15



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	
2	SB	
3	SB	
4	G	
5	BR	
6	BR	
7	GR	
8	V	
9	BR	[With front power window anti-pinch system]
9	SB	[Without passenger power window anti-pinch system]
10	LG	
11	V	
12	G	
13	G	
14	B	
15	W	
16	W	
17	R	
18	L	
19	LG	
20	GR	
21	Y	
22	BR	
23	R	
24	B	
25	W	
26	SHIELD	
27	SB	
28	G	
29	V	
30	W	
31	W	
32	LG	
33	V	
34	BR	
35	P	


EXTERIOR LIGHTING SYSTEM

38	SB	--
39	GR	--
40	V	--
41	BR	--
42	V	--
43	Y	--
44	B	--
45	P	[Without automatic drive positioner]
45	P	[With automatic drive positioner]
46	GR	--
46	W	[With automatic drive positioner]
47	P	--
48	B	--
49	SB	[Without automatic drive positioner]
49	SB	[With automatic drive positioner]
50	W	--
51	R	--
52	LG	--
53	SHIELD	--
54	G	--
55	R	--




Terminal No.	Color Of Wire	Signal Name [Specification]
1	SB	
2	B	
3	P	
4	V	
5	Y	
6	LG	
6	SHIELD	
9	SHIELD	
10	W	
11	B	
12	R	
13	G	
14	P	
15	O	
16	L	
17	L	
18	GR	
19	BR	
20	O	
21	LG	
22	V	
23	W	
24	W	
25	IR	
26	SB	
27	L	
28	BR	
29	B	
30	B	
31	B	
32	SHIELD	
33	B	
34	B	
35	B	

Connector No.	D43
Connector Name	DOOR MIRROR (DRIVER SIDE)
Connector Type	TH24MW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	
5	W	
6	IR	
6	SB	
10	L	
11	Y	
12	BR	
13	B	
17	SHIELD	
18	B	
19	B	

20	V	--
21	LG	--
22	B	--
23	GR	--
24	L	--



Connector No.	D152
Connector Name	WIRE TO WIRE
Connector Type	TH54FW-NH

Terminal No.	Color Of Wire	Signal Name [Specification]
1	SB	
2	B	
3	P	
4	V	
5	Y	
6	LG	
6	SHIELD	
9	SHIELD	
10	W	
11	B	
12	R	
13	G	
14	P	
15	O	
16	L	
17	L	
18	GR	
19	BR	
20	O	
21	LG	
22	V	
23	W	
24	V	

Connector No.	D155
Connector Name	BACK-UP LAMP LH
Connector Type	HS02FG




Terminal No.	Color Of Wire	Signal Name [Specification]
1	SB	
2	B	
3	P	
4	V	
5	Y	
6	LG	
6	SHIELD	
9	SHIELD	
10	W	
11	B	
12	R	
13	G	
14	P	
15	O	
16	L	
17	L	
18	GR	
19	BR	
20	O	
21	LG	
22	V	
23	W	
24	V	

Connector No.	D154
Connector Name	HIGH-MOUNTED STOP LAMP
Connector Type	RH02FE



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	
2	--	

Connector No.	D155
Connector Name	BACK-UP LAMP LH
Connector Type	HS02FG



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	
2	B	

JRLWC7439GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL


EXTERIOR LIGHTING SYSTEM

< WIRING DIAGRAM >

[HALOGEN TYPE]

EXTERIOR LIGHTING SYSTEM

Connector No.	D139
Connector Name	WIRE TO WIRE
Connector Type	TH18EW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	B	-
3	P	-
4	V	-
5	Y	-
9	R	-
10	P	-
11	C	-
12	L	-
13	GR	-
14	O	-
15	LG	-
18	V	-

Connector No.	D182
Connector Name	LICENSE PLATE LAMP LH
Connector Type	TK02FBR



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	B	-

Connector No.	D183
Connector Name	LICENSE PLATE LAMP RH
Connector Type	TK02FBR




Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	B	-

Connector No.	D188
Connector Name	WIRE TO WIRE
Connector Type	TH18EW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	SR	-
2	B	-
3	Y	-
4	BR	-
5	BR	-
9	R	-
10	P	-
11	O	-
12	L	-
13	GR	-
15	LG	-
18	V	-

Connector No.	D190
Connector Name	BACK DOOR LOCK ASSEMBLY
Connector Type	NS08FW-GS




Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	Y	-
4	O	-
5	L	-
6	GR	-
7	P	-
8	B	-

Connector No.	D192
Connector Name	BACK-UP LAMP RH
Connector Type	HS2ZEG



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	B	-

Connector No.	EB
Connector Name	WIRE TO WIRE
Connector Type	TK18MGV-TV



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	Y	-
3	Y	-
4	LG	-
5	GR	-
6	V	-
7	G	-
8	P	-
10	W	-
11	G	-
12	BR	-
13	SB	-
14	B	-

Connector No.	EB
Connector Name	WIRE TO WIRE
Connector Type	NS12MBR-GS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	W	-
3	V	-
4	BR	-
5	LG	-
6	O	-
7	G	-
8	Y	-

JRLWC7440GB

EXTERIOR LIGHTING SYSTEM

< WIRING DIAGRAM >

[HALOGEN TYPE]

EXTERIOR LIGHTING SYSTEM

Connector No.	E10
Connector Name	IPM-FOR-INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	TH20EW-C5L12-AM-1V

Terminal No.	Color Of Wire	Signal Name [Specification]
4	LG	-
5	Y	-
6	G	-
7	BR	-
10	P	-
12	B	-
13	G	-
15	L	-
16	P	-
18	V	-
20	W	-
22	SB	-
23	GR	-
24	G	-
25	GR	-
27	BR	-
28	G	-
30	LG	-
34	O	-
35	P	-
38	G	-
39	GR	-



Connector No.	E11
Connector Name	IPM-FOR-INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	TH08EW-04

Terminal No.	Color Of Wire	Signal Name [Specification]
38	P	-
41	B	-
42	SB	-
43	LG	-
44	W	-
45	Y	-
46	O	-



Connector No.	E17
Connector Name	DAYTIME RUNNING LIGHT RELAY
Connector Type	MS02FL-M2-LG

Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	EG	-
3	LG	-
4	B/W	-
5	G	-



Connector No.	E18
Connector Name	BACK-UP LAMP RELAY
Connector Type	MS02FL-M2-LG

Terminal No.	Color Of Wire	Signal Name [Specification]
1	O	-
2	LG	-
3	R	-
5	Y	-



Connector No.	E103
Connector Name	FUSE BLOCK (J.B)
Connector Type	MS10FW-C5

Terminal No.	Color Of Wire	Signal Name [Specification]
1F	G	-
2F	V	-
3F	SB	-
4F	R	-
6F	LG	-
8F	P	-
9F	BR	-

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH10MM-C5U-M3

Terminal No.	Color Of Wire	Signal Name [Specification]
1	SHIELD	-
2	W	-
3	B	-
4	R	-
9	G	-
8	GR	-
6	SB	-
10	BR	-
11	Y	-
12	O	-
13	W	-

A B C D E F G H I J K M N O P

EXL

EXTERIOR LIGHTING SYSTEM


< WIRING DIAGRAM >

[HALOGEN TYPE]

EXTERIOR LIGHTING SYSTEM


14	L	-
15	P	-
31	GR	-
32	B	-
33	W	-
37	BR	-
38	G	-
39	V	-
40	P	-
41	L	-
42	LG	-
43	O	-
45	GR	-
46	SB	-
47	Y	-
48	L	-
51	BR	-
52	G	-
53	B	-
54	O	-
55	Y	-
56	SHIELD	-
61	P	-
62	G	-
63	W/L	-
64	W/R	-
66	W	-
67	W	-
68	SB	-
70	LG	-
71	R	-
72	L	-
73	GR	-
74	Y	-
75	SB	-
76	Y	-
77	G	-
78	O	-
80	R	-
81	L	-
82	LG	-
83	R	-

Connector No.	E115
Connector Name	STOP LAMP SWITCH
Connector Type	IM04FW-LC




Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	LG	-
3	O	-
4	W	-

Connector No.	E320
Connector Name	FRONT SIDE MARKER LAMP LH
Connector Type	RK02FGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	B	-

Connector No.	E321
Connector Name	FRONT SIDE MARKER LAMP RH
Connector Type	RK02FGY




Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	B	-

Connector No.	E323
Connector Name	HEADLAMP LOW LH
Connector Type	E02FGY-RS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	B	-

Connector No.	E324
Connector Name	HEADLAMP LOW RH
Connector Type	E02FGY-RS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	B	-

Connector No.	E325
Connector Name	HEADLAMP HIGH LH
Connector Type	NJ02FEB



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	B	-

JRLWC7442GB

EXTERIOR LIGHTING SYSTEM

< WIRING DIAGRAM >

[HALOGEN TYPE]

EXTERIOR LIGHTING SYSTEM

Connector No.	E326
Connector Name	HEADLAMP HIGH RH
Connector Type	MUZFEB



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	B	- [Without daytime light system] - [With daytime light system]
3	E	-

Connector No.	E331
Connector Name	FRONT FOG LAMP LH
Connector Type	FHZQ2FB



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	B/Y	-

Connector No.	E335
Connector Name	HEADLAMP AIMING MOTOR LH
Connector Type	HSQ3FGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	B	-
3	G	-

Connector No.	E336
Connector Name	HEADLAMP AIMING MOTOR RH
Connector Type	HSQ3FGY




Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	B	-
3	W	-

Connector No.	E339
Connector Name	WIRE TO WIRE
Connector Type	NS2ZFB-C5




Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	V	-
3	W	-
4	R	-
5	L	-
6	BR	-
7	P	-
8	Y	-
9	SB	-
10	GR	-
11	Y	-
12	G	-

Connector No.	E345
Connector Name	WIRE TO WIRE
Connector Type	NSQ3FW-C5



Terminal No.	Color Of Wire	Signal Name [Specification]
5	R	-
4	SB	-
3	Y	-
2	BR	-
1	V	-
30	G	-

Connector No.	E346
Connector Name	WIRE TO WIRE
Connector Type	TH1HFV-MH



Terminal No.	Color Of Wire	Signal Name [Specification]
91	CG	-
92	W	-
93	O	-
94	Y	-
98	V	-
99	Y	-
101	O	-
102	G	-
103	BR	-
105	R	-

Connector No.	E348
Connector Name	FRONT COMBINATION LAMP LH
Connector Type	ZQ3FBR



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	B	-
3	Y	-

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

EXTERIOR LIGHTING SYSTEM

< WIRING DIAGRAM >

[HALOGEN TYPE]

EXTERIOR LIGHTING SYSTEM

Connector No.	E349
Connector Name	FRONT COMBINATION LAMP RH
Connector Type	Z03EBR



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	B	-
3	SB	-

Connector No.	E350
Connector Name	HEADLAMP LOW LH
Connector Type	FHZ02FB



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	B	-

Connector No.	E551
Connector Name	HEADLAMP LOW RH
Connector Type	FHZ02FB



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	B	-

Connector No.	E402
Connector Name	FRONT FOG LAMP RH
Connector Type	FHZ02FB



Terminal No.	Color Of Wire	Signal Name [Specification]
1	SB	-
2	B	-

Connector No.	F23
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Type	RH40FR-R2Z-L-RH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R/B	TRANSMISSION RANGE SWITCH 2
2	P/B	TRANSMISSION RANGE SWITCH 2
3	G/O	TRANSMISSION RANGE SWITCH 4
4	GR	TRANSMISSION RANGE SWITCH 3 (MONITOR)
5	B	GROUND
7	W	SENSOR GROUND
8	G/W	ROM ASSY (SEL 2)
9	L/R	ROM ASSY (SEL 1)
10	BR/R	ROM ASSY (SEL 3)
11	BR/W	TRANSMISSION RANGE SWITCH 1
13	V	CVT FLUID TEMPERATURE SENSOR
14	R/W	PRIMARY PRESSURE SENSOR
15	V/W	SECONDARY PRESSURE SENSOR
19	G/B	BACK-UP LAMP RELAY
20	GR	SENSOR GROUND
25	W/R	SENSOR POWER
26	L/O	SENSOR GROUND
27	R/G	STEP MOTOR D
28	R	STEP MOTOR C
29	O/B	STEP MOTOR B
30	G/P	STEP MOTOR A
31	P	CAN-L
32	L	CAN-H
33	LG	PRIMARY SPEED SENSOR
34	LG/R	SECONDARY SPEED SENSOR
37	V/R	LOCK-UP SELECT SOLENOID VALVE
38	L/W	TORQUE CONVERTER CLUTCH SOLENOID VALVE
39	W/B	SECONDARY PRESSURE SOLENOID VALVE
40	R/B	LINE PRESSURE SOLENOID VALVE
42	B	COMMON
46	Y	IGNITION POWER SUPPLY
47	L/R	BATTERY POWER SUPPLY (MEMORY BLOCK-UP)
48	Y	IGNITION POWER SUPPLY

Connector No.	F123
Connector Name	WIRE TO WIRE
Connector Type	TK1BE5C-IV



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G/B	-
2	G/B	-
3	G/B	-
4	G/B	-
5	R	-
6	L/R	-
7	P	-
8	P	-
10	Y/B	-
11	BR/W	-
12	BR	-
13	G	-
14	B	-

Connector No.	M1
Connector Name	FUSE BLOCK (U/B)
Connector Type	NS9FEW-M2



Terminal No.	Color Of Wire	Signal Name [Specification]
1A	P	-
2A	G	-
3A	L	-
4A	GR	-
5A	V	-
6A	F	-
7A	GR	-
8A	L	-


EXTERIOR LIGHTING SYSTEM

< WIRING DIAGRAM >

[HALOGEN TYPE]


EXTERIOR LIGHTING SYSTEM

Connector No.	M2
Connector Name	FUSE BLOCK (J/B)
Connector Type	INSJZFV-CS




Terminal No.	Color Of Wire	Signal Name [Specification]
10B	F	-
9B	V	-
8B	W	-
5B	BR	-
6B	G	-
8B	R/L	-
9B	GR	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	INSJZFV-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
10C	LG	-
11C	V	-
12C	Y	-
6C	GR	-
7C	B/R	-
8C	G	-
9C	F	-

Connector No.	M4
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW



Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	-
4	V	-
5	B/R	-
6	G	-
7	L	-
8	R	-
9	G	-
11	SB	-
14	P	-
15	O	-

Connector No.	M11
Connector Name	WIRE TO WIRE
Connector Type	TH3DFW-CS (J-M3)



Terminal No.	Color Of Wire	Signal Name [Specification]
1	SHIELD	-
2	W	-
3	B	-
4	R	-
7	G	-
8	C	-
9	B	-
10	R	-
11	W	-
12	LG	-

Terminal No.	Color Of Wire	Signal Name [Specification]
13	Y	-
14	P	-
15	P	-
31	R	-
32	V	-
33	Y	-
37	BR	-
38	BR	-
39	Y	-
40	P	-
41	L	-
42	G	-
43	W	-
45	LG	-
46	V	-
47	LG	-
48	G	-
51	SB	-
52	GR	-
53	B	-
54	R	-
55	L	-
61	BR	-
62	LG	-
63	W/L	-
64	W/R	-
65	O	-
67	SB	-
68	P	-
69	R	-
71	R	-
72	L	-
73	R	-
74	Y	-
75	G	-
76	V	-
77	P	-
78	W	-
80	Y	-
81	W	-
82	L	-
83	R	-

Connector No.	M13
Connector Name	HEADLAMP AIMING SWITCH
Connector Type	AK03FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	G	-
3	B/L	-
4	B/R	-

Connector No.	M17
Connector Name	OPTICAL SENSOR
Connector Type	TK03FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	O	POWER
2	L	OUTPUT
3	R	GROUND

JRLWC7445GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL


EXTERIOR LIGHTING SYSTEM

< WIRING DIAGRAM >

[HALOGEN TYPE]

EXTERIOR LIGHTING SYSTEM


Connector No.	IM18
Connector Name	WIRE TO WIRE
Connector Type	TH40MW-CS15



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R/W	-
2	R	-
3	W	-
4	Y	-
5	SB	-
6	BR	-
7	LG	-
8	L	-
9	GR	-
10	P	-
11	V	-
12	G	-
13	G	-
14	BR	- [With BOSE system]
15	G	- [Without BOSE system]
16	Y	-
17	SB	-
18	P	-
19	V	-
20	Y	-
21	W	-
22	G	-
23	R	-
24	B	-
25	W	-
26	SHIELD	-
27	GR	-
28	G	-
29	G	-
30	LG	-
31	R	-
32	G	-
33	Y	-
34	R/W	-
35	GR	-

36	LG	-
37	W	-
38	P	-
39	V	-
40	BR	-
41	P	-
42	V	-
43	SB	-
44	B	-
45	W/L	- [With automatic drive positioner]
46	Y	- [Without automatic drive positioner]
47	GR/V	- [With automatic drive positioner]
48	W	- [Without automatic drive positioner]
49	P	-
50	R	- [With automatic drive positioner]
51	V	- [Without automatic drive positioner]
52	W	-
53	SHIELD	-
54	L/R	-
55	L/G	-

Connector No.	M20
Connector Name	WIRE TO WIRE
Connector Type	TH40MW-CS15



Terminal No.	Color Of Wire	Signal Name [Specification]
7	B/W	-
8	L	- [Without passenger power window anti-pinch system]
9	BR	- [With front power window anti-pinch system]
10	GR	- [Without passenger power window anti-pinch system]
11	SB	- [With front power window anti-pinch system]
12	V	-
14	B	-
15	W	-
16	BR	-

17	P	-
18	R	-
19	Y	-
20	R	-
21	B	-
22	B	-
23	W	-
24	SHIELD	-
25	W/L	-
26	W/R	-
27	LG	-
28	P	-
29	G	-
30	R	-
31	GR	-
32	GR	-
33	G	-
34	B	-
35	LG	-
36	W	-
37	W	-
38	P	-
39	G	-
40	B	-
41	R	-
42	R	-
43	GR	-
44	BR	-
45	GR	-
46	GR	-
47	V	-
48	W	-
49	BR	-
50	V	-
51	BR	-
52	LG	-
53	SHIELD	-
54	B/Y	-
55	LG	-

Connector No.	IM54
Connector Name	COMBINATION METER
Connector Type	TH40FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	BATTERY POWER SUPPLY
2	V	IGNITION SIGNAL
3	B	GROUND
4	B	GROUND
5	B/P	ILLUMINATION CONTROL SIGNAL
8	SB	TRIP RESET SWITCH SIGNAL
10	P	METER CONTROL SWITCH GROUND
11	G	ENTER SWITCH SIGNAL

12	BR	SELECT SWITCH SIGNAL
13	Y	ILLUMINATION CONTROL SWITCH SIGNAL (L)
14	V	ILLUMINATION CONTROL SWITCH SIGNAL (R)
15	BR	AIR BAG SIGNAL
16	L	ENGINE COOLANT TEMPERATURE SIGNAL
18	LG	AMBIENT SENSOR SIGNAL
19	R	A/C AUTO AMP CONNECTION RECOGNITION SIGNAL
20	Y	AMBIENT SENSOR GROUND
21	L	CAN-H
22	P	GROUND
23	B	FUEL LEVEL SENSOR GROUND
24	B	FUEL LEVEL SENSOR SIGNAL
25	BR	ALTERNATOR SIGNAL
26	BR	PARKING BRAKE SWITCH SIGNAL
27	Y	BRAKE TIGHTENING SWITCH SIGNAL
28	V	SECURITY SIGNAL
29	G	WASHER LEVEL SWITCH SIGNAL
31	SB	VEHICLE SPEED SIGNAL (G-FULL SET)
32	P	OVERDRIVE CONTROL SWITCH SIGNAL
34	O	FUEL LEVEL SENSOR SIGNAL
35	P	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
36	BR	PASSENGER SEAT BELT WARNING SIGNAL

Connector No.	IM45
Connector Name	HAZARD SWITCH
Connector Type	TR60FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B/W	-
2	P	-
3	R	-
4	B	-


EXTERIOR LIGHTING SYSTEM

< WIRING DIAGRAM >

[HALOGEN TYPE]


EXTERIOR LIGHTING SYSTEM

Connector No.	M59
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT
Connector Type	M128FY-EX




Terminal No.	Color Of Wire	Signal Name [Specification]
1	IGN	IGN
2	GR	GR
3	BR	GR/UB
4	G	DR/US
5	V	DR1(-)DR2(+)
6	SB	DR2(+)
7	BR	AS1(-)
8	G	AS1(+)
9	R	AS2(-)
18	W/L	EC2S(+)
19	W/R	EC2S(-)
22	GR	GROUND
23	BR	AIRBAG W/L
24	BR	SEATBELT W/L
25	LG	GOODPULL TALE
26	GR	SEATBELT TALE
32	BC	SIDE SENS RH/2
33	L/R	SIDE SENS LH/2
54	L/G	SIDE SENS LH/2
57	O	DEPLOYMENT INFORMATION OUTPUT
59	L	CAN-H
60	P	CAN-L

Connector No.	M70
Connector Name	WIRE TO WIRE
Connector Type	MS16FB-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	P	-
3	GR	-
4	P	-
5	L	-
6	G	-
8	G	-
9	V	-
10	R/L	-
11	SB	-
13	Y	-
14	P	-
15	W	-

Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Type	TH88FW-CS19



Terminal No.	Color Of Wire	Signal Name [Specification]
10	GR	-
12	V	-
13	Y	-
15	Y	-
28	L	-
30	P	-
31	BR	-
37	SHIELD	-
38	B	- [Without automatic drive positioner]

58	W	- [With automatic drive positioner]
59	W	- [With automatic drive positioner]
32	W	- [Without automatic drive positioner]
40	R	-
81	V	-
52	B	-
53	O	-
54	P	-
55	L	-
57	Y	-
58	L	-
59	O	-
60	G	-
61	LG	-
62	V	-
63	SB	-
64	R	-
65	G	-
66	SHIELD	-
67	W/L	-
68	GR/V	-
69	SHIELD	-
70	W/L	-
71	W/R	-
72	LG	-
74	GR	-
75	G	-
77	O	-
78	LG	-
80	C	-
81	L	-
82	W	-
87	V	-
88	R	-
89	Y	-
90	P	- [Without automatic drive positioner]
90	R	- [With automatic drive positioner]
91	SB	-
92	P	-

Connector No.	M79
Connector Name	WIRE TO WIRE
Connector Type	TH18FW-4H



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	W	-
3	B	-
4	B	-
5	BR	-
8	L	-
10	P	-
11	SB	-
12	R	-
13	V	-
14	L	-
15	G	-
16	GR	-

Connector No.	M103
Connector Name	COMBINATION SWITCH
Connector Type	TH18FW-4H



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	RR [With automatic drive positioner]
1	G	RR [Without automatic drive positioner]
2	X	OUTPUT 4
3	BS	FR [With automatic drive positioner]
3	P	FR [Without automatic drive positioner]
4	W	IGN
5	O	OUTPUT 3
6	B	GROUND [With automatic drive positioner]

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

EXL

EXTERIOR LIGHTING SYSTEM


[HALOGEN TYPE]

< WIRING DIAGRAM >

EXTERIOR LIGHTING SYSTEM


0	GR	GROUND (through driver position)
1	BR	REAR WINDOW DEF RELAY CONT
2	LG	COMBI SW INPUT 5
3	LG	COMBI SW INPUT 4
4	SB	COMBI SW INPUT 3
5	SB	COMBI SW INPUT 2
6	SB	COMBI SW INPUT 1
7	W	STOP LAMP SW 1
8	W	STOP LAMP SW 2
9	W	STOP LAMP SW 3
10	W	STOP LAMP SW 4
11	F	DETENT SW
12	L	RECEIVER COMM
13	Y	CAN-H
14	G	CAN-L

Connector No. IM121
 Connector Name BCM (BODY CONTROL MODULE)
 Connector Type TH46FB-NH




31	O	DR DOOR UNLK SENS
32	Y	COMBI SW OUTPUT 4
33	W	COMBI SW OUTPUT 3
34	GR	COMBI SW OUTPUT 2
35	SB	COMBI SW OUTPUT 1
36	R	DETENT SW
37	G	RECEIVER COMM
38	SB	CAN-H
39	L	CAN-L
40	P	

Connector No. IM122
 Connector Name BCM (BODY CONTROL MODULE)
 Connector Type FE48BFB-FH48-SA



41	O	SL DOOR LH SW
42	B	LUGGAGE LAMP CONT
43	P	SELECT UNLK RELAY CONT
44	V	BACK DOOR REC SW
45	LG	BK DOOR OPEN
46	BR	REAR WIPER OUTPUT
47	R	SL DOOR LH UNLK CONT
48	O	
49	B	
50	V	
51	LG	
52	BR	
53	R	
54	R	
55	G	

Connector No. IM123
 Connector Name BCM (BODY CONTROL MODULE)
 Connector Type FE48BFW-FH48-SA



56	O	INT ROOM LAMP PWR SPLY
57	GR	INT ROOM LAMP
58	O	EXIT
59	O	AIR BAG
60	SB	PASS DOOR UNLK OUTPUT
61	V	TURN SIG LH OUTPUT
62	G	TURN SIG RH OUTPUT
63	W	STEP LAMP CONT
64	R	INT ROOM LAMP CONT
65	LG	CRANK REQ
66	V	ALL DOOR LOCK OUTPUT
67	G	DR DOOR UNLK OUTPUT
68	B	GROUND
69	L	PW PWR SPLY (IGN)
70	P	PW PWR SPLY (BAT)

JRLWC7448GB

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[HALOGEN TYPE]


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:000000009653148

OVERALL SEQUENCE

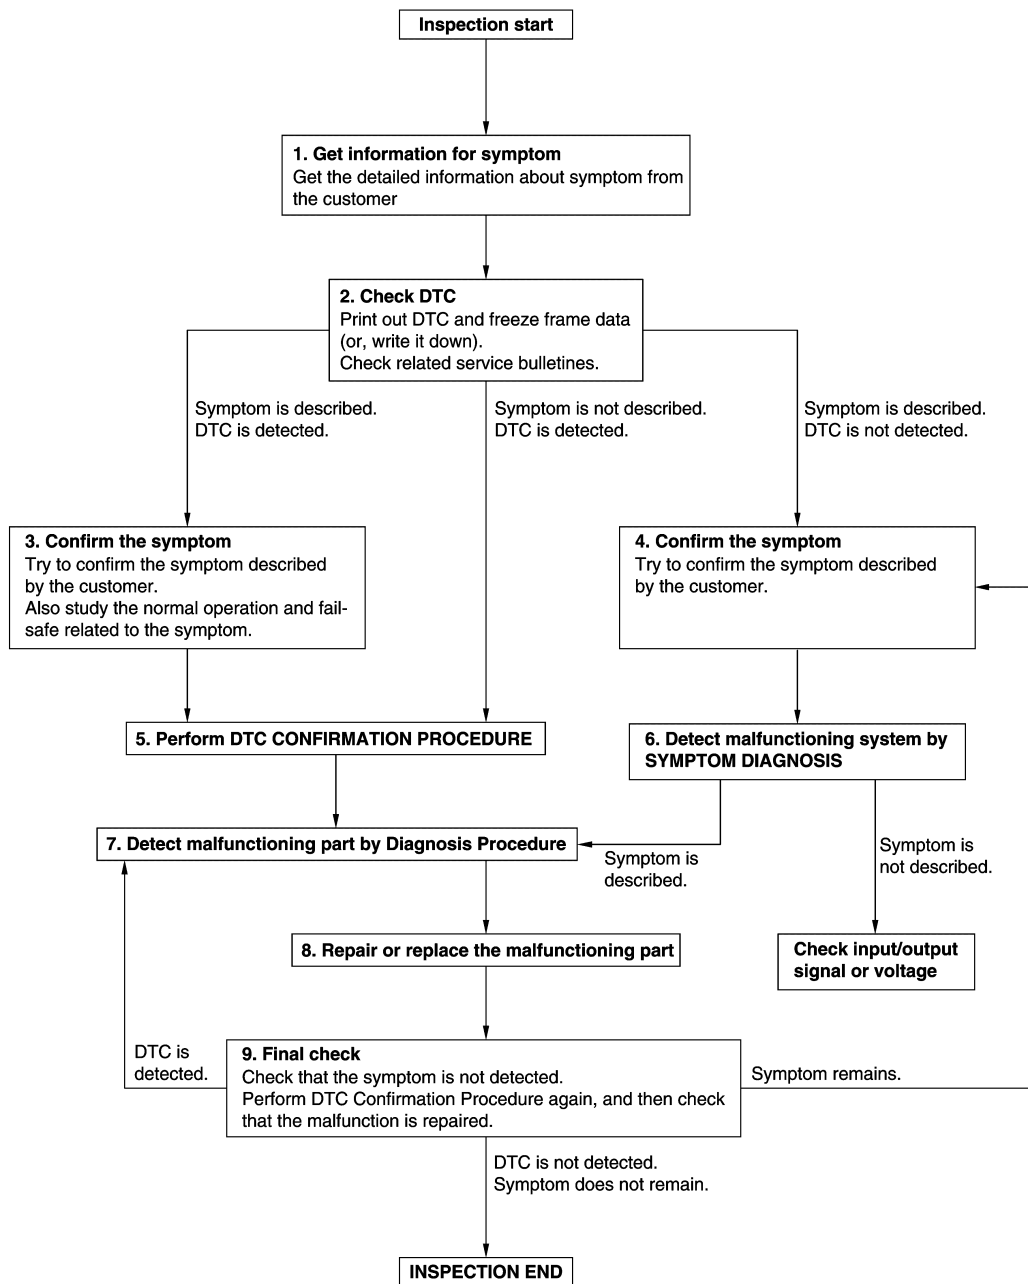

DETAILED FLOW

JMKIA8652GB

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[HALOGEN TYPE]

1. GET INFORMATION FOR SYMPTOM

1. Get detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurs).
2. Check operation condition of the function that is malfunctioning.

>> GO TO 2.

2. CHECK DTC

1. Check DTC.
2. Perform the following procedure if DTC is detected.
 - Record DTC and freeze frame data (Print them out using CONSULT.)
 - Erase DTC.
 - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

Are any symptoms described and any DTC detected?

Symptom is described, DTC is detected>>GO TO 3.

Symptom is described, DTC is not detected>>GO TO 4.

Symptom is not described, DTC is detected>>GO TO 5.

3. CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Also study the normal operation and fail-safe related to the symptom.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5.

4. CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6.

5. PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC CONFIRMATION PROCEDURE for the detected DTC, and then check that DTC is detected again. At this time, always connect CONSULT to the vehicle, and check self diagnostic results in real time. If two or more DTCs are detected, refer to DTC INSPECTION PRIORITY CHART, and determine trouble diagnosis order.

NOTE:

- Freeze frame data is useful if the DTC is not detected.
- Perform Component Function Check if DTC CONFIRMATION PROCEDURE is not included on Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check.
If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC CONFIRMATION PROCEDURE.

Is DTC detected?

YES >> GO TO 7.

NO >> Check according to [GI-42. "Intermittent Incident"](#).

6. DETECT MALFUNCTIONING SYSTEM BY SYMPTOM DIAGNOSIS

Detect malfunctioning system according to SYMPTOM DIAGNOSIS based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

Is the symptom described?

YES >> GO TO 7.

NO >> Monitor input data from related sensors or check voltage of related module terminals using CONSULT.

7. DETECT MALFUNCTIONING PART BY DIAGNOSIS PROCEDURE

DIAGNOSIS AND REPAIR WORK FLOW

[HALOGEN TYPE]

< BASIC INSPECTION >

Inspect according to Diagnosis Procedure of the system.

Is malfunctioning part detected?

YES >> GO TO 8.

NO >> Check according to [GI-42. "Intermittent Incident"](#).

8. REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnosis Procedure again after repair and replacement.
3. Check DTC. If DTC is detected, erase it.

>> GO TO 9.

9. FINAL CHECK

When DTC is detected in step 2, perform DTC CONFIRMATION PROCEDURE again, and then check that the malfunction is repaired securely.

When symptom is described by the customer, refer to confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Is DTC detected and does symptom remain?

YES-1 >> DTC is detected: GO TO 7.

YES-2 >> Symptom remains: GO TO 4.

NO >> Before returning the vehicle to the customer, always erase DTC.

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

HEADLAMP (HI) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[HALOGEN TYPE]

DTC/CIRCUIT DIAGNOSIS

HEADLAMP (HI) CIRCUIT

WITHOUT DAYTIME RUNNING LIGHT SYSTEM

WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Component Function Check

INFOID:000000009653149

1.CHECK HEADLAMP (HI) OPERATION

CONSULT ACTIVE TEST

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the test items, check that the headlamp (HI) is turned ON.

Hi : Headlamp (HI) ON
Off : Headlamp (HI) OFF

NOTE:

ON/OFF is repeated 1 second each.

Is the inspection result normal?

YES >> Headlamp (HI) circuit is normal.

NO >> Refer to [EXL-174, "WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Diagnosis Procedure"](#).

WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Diagnosis Procedure

INFOID:000000009653150

1.CHECK HEADLAMP (HI) OUTPUT VOLTAGE

CONSULT ACTIVE TEST

1. Turn ignition switch OFF.
2. Disconnect headlamp high connector.
3. Turn ignition switch ON.
4. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
5. With operating the test items, check voltage between IPDM E/R harness connector and ground.

(+)			(-)	Test item	Voltage (Approx.)		
IPDM E/R							
Connector	Terminal		Ground	EXTERNAL LAMPS			
RH	E345	89				Hi	Battery voltage
		Off				0 V	
LH		90				Hi	Battery voltage
		Off	0 V				

Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 3.

2.CHECK HEADLAMP (HI) OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and headlamp high harness connector.

IPDM E/R			Headlamp high		Continuity
Connector	Terminal		Connector	Terminal	
RH	E345	89	E326	1	Existed
LH		90	E325		

Is the inspection result normal?

YES >> GO TO 5.

HEADLAMP (HI) CIRCUIT

[HALOGEN TYPE]

< DTC/CIRCUIT DIAGNOSIS >

NO >> Repair or replace harness.

3.CHECK HEADLAMP (HI) FUSE

1. Turn ignition switch OFF.
2. Check that the following fuses are not fusing.

Unit	Location	Fuse No.	Capacity
Headlamp HI (RH)	IPDM E/R	#55	10 A
Headlamp HI (LH)		#54	

Is the inspection result normal?

YES >> Replace IPDM E/R.
NO >> GO TO 4.

4.CHECK HEADLAMP (HI) SHORT CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
RH	E345	89	Not existed
LH		90	

Is the inspection result normal?

YES >> Replace fuse. (Replace IPDM E/R if the fuse is fusing again.)
NO >> Repair or replace harness. And then replace the fuse.

5.CHECK HEADLAMP (HI) GROUND OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect headlamp high connector.
3. Check continuity between headlamp high harness connector and ground.

Headlamp high		Ground	Continuity
Connector	Terminal		
RH	E326	2	Existed
LH			

Is the inspection result normal?

YES >> Replace headlamp (HI) bulb. (Bulb socket is abnormal.)
NO >> Repair or replace harness.

WITH DAYTIME RUNNING LIGHT SYSTEM

WITH DAYTIME RUNNING LIGHT SYSTEM : Component Function Check INFOID:000000009653151

1.CHECK HEADLAMP (HI) OPERATION

ⓂCONSULT ACTIVE TEST

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the test items, check that the headlamp (HI) is turned ON.

Hi : Headlamp (HI) ON
Off : Headlamp (HI) OFF

NOTE:

ON/OFF is repeated 1 second each.

Is the inspection result normal?

YES >> Headlamp (HI) circuit is normal.
NO >> Refer to [EXL-176, "WITH DAYTIME RUNNING LIGHT SYSTEM : Diagnosis Procedure"](#).

HEADLAMP (HI) CIRCUIT

[HALOGEN TYPE]

< DTC/CIRCUIT DIAGNOSIS >

WITH DAYTIME RUNNING LIGHT SYSTEM : Diagnosis Procedure

INFOID:00000009653152

1. CHECK HEADLAMP (HI) OUTPUT VOLTAGE

CONSULT ACTIVE TEST

1. Turn ignition switch OFF.
2. Disconnect headlamp high connector.
3. Turn ignition switch ON.
4. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
5. With operating the test items, check voltage between IPDM E/R harness connector and ground.

(+)		Terminal	(-)	Test item	Voltage (Approx.)
IPDM E/R					
Connector					
RH	E345	89	Ground	Hi	Battery voltage
					Off
LH		90		Hi	Battery voltage
				Off	0 V

Is the inspection result normal?

- YES >> GO TO 2.
NO >> GO TO 3.

2. CHECK HEADLAMP (HI) OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and headlamp high harness connector.

IPDM E/R		Headlamp high		Continuity
Connector	Terminal	Connector	Terminal	
RH	E345	E326	1	Existed
LH		90		

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Repair or replace harness.

3. CHECK HEADLAMP (HI) FUSE

1. Turn ignition switch OFF.
2. Check that the following fuses are not fusing.

Unit	Location	Fuse No.	Capacity
Headlamp HI (RH)	IPDM E/R	#55	10 A
Headlamp HI (LH)		#54	

Is the inspection result normal?

- YES >> Replace IPDM E/R.
NO >> GO TO 4.

4. CHECK HEADLAMP (HI) SHORT CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Terminal	Ground	Continuity
Connector				
RH	E345	89		Not existed
LH		90		

HEADLAMP (HI) CIRCUIT

[HALOGEN TYPE]

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> Replace fuse. (Replace IPDM E/R if the fuse is fusing again.)

NO >> Repair or replace harness. And then replace the fuse.

5.CHECK ILLUMINATION STATUS OF HEADLAMPS

Check illumination status of headlamps.

Which headlamp does not turn ON?

RH >> GO TO 6.

LH >> GO TO 8.

6.CHECK HEADLAMP HI (RH) GROUND OPEN CIRCUIT-1

1. Remove daytime running light relay.

2. Check continuity between daytime running light relay harness connector and headlamp high RH harness connector.

Daytime running light relay		Headlamp high RH		Continuity
Connector	Terminal	Connector	Terminal	
E17	3	E326	2	Existed

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace harness.

7.CHECK HEADLAMP HI (RH) GROUND OPEN CIRCUIT-2

Check continuity between daytime running light relay harness connector and ground.

Daytime running light relay		Ground	Continuity
Connector	Terminal		
E17	4		Existed

Is the inspection result normal?

YES >> Replace headlamp (HI) bulb. (Bulb socket is abnormal.)

NO >> Repair or replace harness.

8.CHECK HEADLAMP HI (LH) GROUND OPEN CIRCUIT

Check continuity between headlamp high LH harness connector and ground.

Headlamp high LH		Ground	Continuity
Connector	Terminal		
E325	2		Existed

Is the inspection result normal?

YES >> Replace headlamp (HI) bulb. (Bulb socket is abnormal.)

NO >> Repair or replace harness.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

EXL

HEADLAMP (LO) CIRCUIT

[HALOGEN TYPE]

< DTC/CIRCUIT DIAGNOSIS >

HEADLAMP (LO) CIRCUIT

Component Function Check

INFOID:000000009653153

1.CHECK HEADLAMP (LO) OPERATION

CONSULT ACTIVE TEST

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the test items, check that the headlamp (LO) is turned ON.

Lo : Headlamp (LO) ON

Off : Headlamp (LO) OFF

Is the inspection result normal?

YES >> Headlamp (LO) is normal.

NO >> Refer to [EXL-178. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009653154

1.CHECK HEADLAMP (LO) OUTPUT VOLTAGE

CONSULT ACTIVE TEST

1. Turn ignition switch OFF.
2. Disconnect headlamp low connector.
3. Turn ignition switch ON.
4. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
5. With operating the test items, check voltage between IPDM E/R harness connector and ground.

(+)			(-)	Test item	Voltage (Approx.)				
IPDM E/R									
Connector		Terminal	Ground	EXTERNAL LAMPS					
RH	E345	83				Ground	EXTERNAL LAMPS	Lo	Battery voltage
		LH						84	Off
Lo									Battery voltage
Off		0 V							

Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 3.

2.CHECK HEADLAMP (LO) OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and headlamp low harness connector.

IPDM E/R			Headlamp low		Continuity
Connector		Terminal	Connector	Terminal	
RH	E345	83	E351	1	Existed
LH		84	E350		

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace harness.

3.CHECK HEADLAMP (LO) FUSE

1. Turn ignition switch OFF.
2. Check that the following fuses are not fusing.

HEADLAMP (LO) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[HALOGEN TYPE]

Unit	Lotion	Fuse No.	Capacity
Headlamp LO (RH)	IPDM E/R	#57	15 A
Headlamp LO (LH)		#56	

Is the inspection result normal?

YES >> Replace IPDM E/R.

NO >> GO TO 4.

4.CHECK HEADLAMP (LO) SHORT CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R			Ground	Continuity
Connector		Terminal		
RH	E345	83	Ground	Not existed
LH		84		

Is the inspection result normal?

YES >> Replace fuse. (Replace IPDM E/R if the fuse is fusing again.)

NO >> Repair or replace harness. And then replace the fuse.

5.CHECK HEADLAMP (LO) GROUND OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect headlamp low connector.
3. Check continuity between headlamp low harness connector and ground.

Headlamp low			Ground	Continuity
Connector		Terminal		
RH	E351	2	Ground	Existed
LH	E350			

Is the inspection result normal?

YES >> Replace headlamp (LO) bulb. (Bulb socket is abnormal.)

NO >> Repair or replace harness.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

EXL

DAYTIME RUNNING LIGHT RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[HALOGEN TYPE]

DAYTIME RUNNING LIGHT RELAY CIRCUIT

Component Function Check

INFOID:000000009653155

1. CHECK DAYTIME RUNNING LIGHT OPERATION

CONSULT ACTIVE TEST

1. Select "DAYTIME RUNNING LIGHT" of BCM (HEADLAMP) active test item.
2. With operating the test items, check that daytime running light operation.

On : Daytime running light ON

Off : Daytime running light OFF

Is the inspection result normal?

- YES >> Daytime running light relay circuit is normal.
NO >> Refer to [EXL-180, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009653156

1. CHECK DAYTIME RUNNING LIGHT RELAY FUSE

1. Turn ignition switch OFF.
2. Check that the following fuse is not fusing.

Unit	Fuse No.	Capacity
Daytime running light relay	#59	10 A

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace the fuse after repairing the applicable circuit.

2. CHECK DAYTIME RUNNING LIGHT RELAY POWER SUPPLY

1. Remove daytime running light relay.
2. Check voltage between daytime running light relay harness connector and ground.

(+)		(-)	Voltage (Approx.)
Daytime running light relay			
Connector	Terminal	Ground	Battery voltage
E17	1		
	5		

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace harness.

3. CHECK DAYTIME RUNNING LIGHT RELAY

Check daytime running light relay. Refer to [EXL-181, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Replace daytime running light relay.

4. CHECK DAYTIME RUNNING LIGHT RELAY CONTROL SIGNAL OUTPUT

CONSULT ACTIVE TEST

1. Install daytime running light relay.
2. Turn ignition switch ON.
3. Select "DAYTIME RUNNING LIGHT" of BCM (HEADLAMP) active test item.
4. With operating the test item, check voltage between IPDM E/R harness connector and ground.

DAYTIME RUNNING LIGHT RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[HALOGEN TYPE]

(+)		(-)	Test item	Voltage (Approx.)	
IPDM E/R					
Connector	Terminal				
E346	105	Ground	DAYTIME RUNNING LIGHT	On	0 V
			Off	Battery voltage	

Is the inspection result normal?

- YES >> Daytime running light relay circuit is OK.
- NO-1 (Fixed at 0 V)>>GO TO 5.
- NO-2 (Fixed at battery voltage) >>Replace IPDM E/R.

5.CHECK DAYTIME RUNNING LIGHT RELAY CONTROL SIGNAL OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Remove daytime running light relay.
3. Disconnect IPDM E/R harness connector.
4. Check continuity between IPDM E/R harness connector and daytime running light relay harness connector.

IPDM E/R		Daytime running light relay		Continuity
Connector	Terminal	Connector	Terminal	
E346	105	E17	2	Existed

Is the inspection result normal?

- YES >> GO TO 6.
- NO >> Repair or replace harness.

6.CHECK DAYTIME RUNNING LIGHT RELAY CONTROL SIGNAL SHORT CIRCUIT

Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E346	105		Not existed

Is the inspection result normal?

- YES >> Replace IPDM E/R.
- NO >> Repair or replace harness.

Component Inspection

INFOID:000000009653157

EXL

1.CHECK DAYTIME RUNNING LIGHT RELAY

1. Turn the ignition switch OFF.
2. Remove daytime running light relay.
3. Apply battery voltage to daytime running light relay- between terminals 1 and 2.
4. Check continuity between daytime running light relay terminals.

Daytime running light relay			Condition	Continuity
Terminal				
E17	5	3	Apply	Existed
			Not Apply	Not existed
	4		Apply	Not existed
			Not Apply	Existed

Is the inspection result normal?

- YES >> Daytime running light relay is normal.
- NO >> Replace daytime running light relay.

PARKING LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[HALOGEN TYPE]

PARKING LAMP CIRCUIT

Component Function Check

INFOID:000000009653158

1. CHECK PARKING LAMP OPERATION

CONSULT ACTIVE TEST

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the test items, check that the parking lamp is turned ON.

TAIL : Parking lamp ON
Off : Parking lamp OFF

Is the inspection result normal?

- YES >> Parking lamp circuit is normal.
NO >> Refer to [EXL-182. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009653159

1. CHECK PARKING LAMP FUSE

1. Turn ignition switch OFF.
2. Check that the following fuse is not fusing.

Unit	Location	Fuse No.	Capacity
<ul style="list-style-type: none">• Parking lamp• Front side marker lamp	IPDM E/R	#52	10 A

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK PARKING LAMP SHORT CIRCUIT

1. Disconnect the following connectors.
 - IPDM E/R
 - Front combination lamp
 - Front side marker lamp
2. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E346	91		Not existed
	92		

Is the inspection result normal?

- YES >> Replace fuse. (Replace IPDM E/R if fusing is found again.)
NO >> Repair or replace harness. And then replace the fuse.

3. CHECK PARKING LAMP BULB

Check applicable lamp bulb.

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Replace bulb.

4. CHECK PARKING LAMP OUTPUT VOLTAGE

CONSULT ACTIVE TEST

1. Disconnect front combination lamp connector.
2. Turn ignition switch ON.
3. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
4. With operating the test items, check voltage between IPDM E/R harness connector and ground.

PARKING LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[HALOGEN TYPE]

(+)		(-)	Test item	Voltage (Approx.)		
IPDM E/R						
Connector	Terminal					
RH	E346	Ground	EXTERNAL LAMPS	TAIL	Battery voltage	
				91	Off	0 V
LH				92	TAIL	Battery voltage
					Off	0 V

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace IPDM E/R.

5. CHECK PARKING LAMP OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front combination lamp harness connector.

IPDM E/R		Front combination lamp		Continuity
Connector	Terminal	Connector	Terminal	
RH	E346	E349	1	Existed
LH		E348		

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace harness.

6. CHECK PARKING LAMP GROUND OPEN CIRCUIT

Check continuity between front combination lamp harness connector and ground.

Front combination lamp		Ground	Continuity
Connector	Terminal		
RH	E349		2
LH	E348		

Is the inspection result normal?

YES >> Check corresponding bulb socket and harness. Repair or replace if necessary.

NO >> Repair or replace harness.

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

FRONT SIDE MARKER LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[HALOGEN TYPE]

FRONT SIDE MARKER LAMP CIRCUIT

Component Function Check

INFOID:000000009653160

1. CHECK PARKING LAMP OPERATION

Check that the parking lamp is turned ON.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check parking lamp circuit. Refer to [EXL-182, "Component Function Check"](#).

2. CHECK FRONT SIDE MARKER LAMP OPERATION

ⓐ CONSULT ACTIVE TEST

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.

2. With operating the test items, check that the front side marker lamp is turned ON.

TAIL : Front side marker lamp ON

Off : Front side marker lamp OFF

Is the inspection result normal?

YES >> Front side marker lamp circuit is normal.

NO >> Refer to [EXL-184, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009653161

1. CHECK FRONT SIDE MARKER LAMP BULB

Check applicable lamp bulb.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace bulb.

2. CHECK FRONT SIDE MARKER LAMP OPEN CIRCUIT

1. Turn ignition switch OFF.

2. Disconnect IPDM E/R connector and front side marker lamp connector.

3. Check continuity between IPDM E/R harness connector and front side marker lamp harness connector.

IPDM E/R		Front side marker lamp		Continuity
Connector	Terminal	Connector	Terminal	
RH	E346		E321	Existed
LH			E320	
			1	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

3. CHECK FRONT SIDE MARKER LAMP GROUND OPEN CIRCUIT

Check continuity between front side marker lamp harness connector and ground.

Front side marker lamp		Ground	Continuity
Connector	Terminal		
RH	E321	2	Existed
LH	E320		

Is the inspection result normal?

YES >> Check corresponding bulb socket and harness. Repair or replace if necessary.

NO >> Repair or replace harness.

TAIL LAMP CIRCUIT

[HALOGEN TYPE]

< DTC/CIRCUIT DIAGNOSIS >

TAIL LAMP CIRCUIT

Component Function Check

INFOID:000000009653162

1.CHECK TAIL LAMP OPERATION

CONSULT ACTIVE TEST

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the test items, check that the tail lamp is turned ON.

TAIL : Tail Lamp ON
Off : Tail lamp OFF

Is the inspection result normal?

- YES >> Tail lamp circuit is normal.
NO >> Refer to [EXL-185, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009653163

1.CHECK TAIL LAMP FUSE

1. Turn ignition switch OFF.
2. Check that the following fuse is not fusing.

Unit	Location	Fuse No.	Capacity
<ul style="list-style-type: none">• Tail lamp• license plate lamp	IPDM E/R	#53	10 A

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.

2.CHECK TAIL LAMP SHORT CIRCUIT

1. Disconnect IPDM E/R connector, licence plate lamp connector and rear combination lamp connector.
2. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E10	7		Not existed

Is the inspection result normal?

- YES >> Replace fuse. (Replace IPDM E/R if fusing is found again.)
NO >> Repair or replace harness. And then replace the fuse.

3.CHECK TAIL LAMP BULB

Check applicable lamp bulb.

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Replace bulb.

4.CHECK TAIL LAMP OUTPUT VOLTAGE

CONSULT ACTIVE TEST

1. Disconnect rear combination lamp connector.
2. Turn ignition switch ON.
3. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
4. With operating the test items, check voltage between IPDM E/R harness connector and ground.

TAIL LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[HALOGEN TYPE]

(+)		(-)	Test item		Voltage (Approx.)
IPDM E/R					
Connector	Terminal				
E10	7	Ground	EXTERNAL LAMPS	TAIL	Battery voltage
				Off	0 V

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace IPDM E/R.

5. CHECK TAIL LAMP OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and rear combination lamp harness connector.

IPDM E/R		Rear combination lamp		Continuity
Connector	Terminal	Connector	Terminal	
RH	E10	7	B205	Existed
LH			B80	

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace harness.

6. CHECK TAIL LAMP GROUND OPEN CIRCUIT

Check continuity between rear combination lamp harness connector and ground.

Rear combination lamp		Ground	Continuity
Connector	Terminal		
RH	B205	3	Existed
LH	B80		

Is the inspection result normal?

YES >> Check corresponding bulb socket and harness. Repair or replace if necessary.

NO >> Repair or replace harness.

LICENSE PLATE LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[HALOGEN TYPE]

LICENSE PLATE LAMP CIRCUIT

Component Function Check

INFOID:000000009653164

1. CHECK TAIL LAMP OPERATION

Check that the tail lamp is turned ON.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check tail lamp circuit. Refer to [EXL-185, "Component Function Check"](#).

2. CHECK LICENSE PLATE LAMP OPERATION

Ⓜ CONSULT ACTIVE TEST

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.

2. With operating the lighting switch, check that the license plate lamp is turned ON.

TAIL : License plate lamp ON

Off : License plate lamp OFF

Is the inspection result normal?

YES >> License plate lamp circuit is normal.

NO >> Refer to [EXL-187, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009653165

1. CHECK LICENSE PLATE LAMP BULB

Check the applicable lamp bulb.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace bulb.

2. CHECK LICENSE PLATE LAMP OPEN CIRCUIT

1. Turn ignition switch OFF.

2. Disconnect IPDM E/R connector and license plate lamp connector.

3. Check continuity between IPDM E/R harness connector and license plate lamp harness connector.

IPDM E/R		License plate lamp		Continuity
Connector	Terminal	Connector	Terminal	
RH	E10	7	D163	Existed
LH			D162	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

3. CHECK LICENSE PLATE LAMP GROUND OPEN CIRCUIT

Check continuity between license plate lamp harness connector and ground.

License plate lamp		Ground	Continuity
Connector	Terminal		
RH	D163	2	Existed
LH	D162		

Is the inspection result normal?

YES >> Check corresponding bulb socket and harness. Repair or replace if necessary.

NO >> Repair or replace harness.

TURN SIGNAL LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[HALOGEN TYPE]

TURN SIGNAL LAMP CIRCUIT

Component Function Check

INFOID:000000009653166

1.CHECK TURN SIGNAL LAMP

ⓅCONSULT ACTIVE TEST

1. Select "FLASHER" of BCM (FLASHER) active test item.
2. With operating the test items, check that the turn signal lamps is turned ON.

LH : Turn signal lamps (LH) ON

RH : Turn signal lamps (RH) ON

Off : Turn signal lamps OFF

Is the inspection result normal?

YES >> Turn signal lamp circuit is normal.

NO >> Refer to [EXL-188, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009653167

1.CHECK TURN SIGNAL LAMP

ⓅCONSULT ACTIVE TEST

1. Select "FLASHER" of BCM (FLASHER) active test item.
2. With operating the test items, check that the turn signal lamps is turned ON.

LH : Turn signal lamps (LH) ON

RH : Turn signal lamps (RH) ON

Off : Turn signal lamps OFF

Which turn signal lamp does not turn ON?

Side turn signal lamp>>GO TO 3.

Other than side turn signal lamp>>GO TO 2.

2.CHECK TURN SIGNAL LAMP BULB

Check the applicable lamp bulb.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace bulb.

3.CHECK TURN SIGNAL LAMP OUTPUT VOLTAGE

1. Turn ignition switch OFF.
2. Disconnect front combination lamp connector, side turn signal lamp connector and rear combination lamp connector.
3. Turn ignition switch ON.
4. With operating the turn signal switch, check voltage between BCM harness connector and ground.

TURN SIGNAL LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[HALOGEN TYPE]

(+)		(-)	Condition	Voltage (Approx.)	
BCM					
Connector	Terminal				
LH	M123	Ground	Turn signal switch	LH	
				OFF	0 V
RH	M123	Ground	Turn signal switch	RH	
				OFF	0 V

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> GO TO 5.

4. CHECK TURN SIGNAL LAMP OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between BCM harness connector and front combination lamp, door mirror or rear combination lamp harness connector.

Front turn signal lamp

BCM		Front combination lamp		Continuity
Connector	Terminal	Connector	Terminal	
RH	M123	E349	3	Existed
LH		E348		

Side turn signal lamp

BCM		Door mirror		Continuity
Connector	Terminal	Connector	Terminal	
Passenger side	M123	D3	20	Existed
Driver side		D43		

Rear turn signal lamp

BCM		Rear combination lamp		Continuity
Connector	Terminal	Connector	Terminal	
RH	M123	B205	4	Existed
LH		B80		

Is the inspection result normal?

- YES >> GO TO 6.
- NO >> Repair or replace harness.

5. CHECK TURN SIGNAL LAMP SHORT CIRCUIT

Check continuity between BCM harness connector and ground.

TURN SIGNAL LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[HALOGEN TYPE]

BCM			Ground	Continuity
Connector		Terminal		
RH	M123	61		Ground
LH		60	Not existed	

Is the inspection result normal?

YES-1 >> (When side turn signal lamp does not turn ON) Replace BCM. Refer to [BCS-98. "Removal and Installation"](#).

YES-2 >> (When lamp other than side turn signal lamp does not turn ON) Check each bulb socket for internal short circuit, and if check result is normal, replace BCM. Refer to [BCS-98. "Removal and Installation"](#).

NO >> Repair or replace harness.

6. CHECK TURN SIGNAL LAMP GROUND OPEN CIRCUIT

Check continuity between BCM harness connector and front combination lamp, door mirror or rear combination lamp and ground.

Front turn signal lamp

Front combination lamp			Ground	Continuity
Connector		Terminal		
RH	E349	2		Ground
LH	E348		Existed	

Side turn signal lamp

Door mirror			Ground	Continuity
Connector		Terminal		
Passenger side	D3	19		Ground
Driver side	D43		Existed	

Rear turn signal lamp

Rear combination lamp			Ground	Continuity
Connector		Terminal		
RH	B205	3		Ground
LH	B80		Existed	

Is the inspection result normal?

YES-1 >> (When side turn signal lamp does not turn ON) Replace door mirror assembly.

YES-2 >> (When lamp other than side turn signal lamp does not turn ON) Check corresponding bulb socket and harness. Repair or replace if necessary.

NO >> Repair or replace harness.

FRONT FOG LAMP CIRCUIT

[HALOGEN TYPE]

< DTC/CIRCUIT DIAGNOSIS >

FRONT FOG LAMP CIRCUIT

Component Function Check

INFOID:000000009653168

1. CHECK FRONT FOG LAMP OPERATION

CONSULT ACTIVE TEST

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the test items, check that the front fog lamp is turned ON.

Fog : Front fog lamp ON
Off : Front fog lamp OFF

Is the measurement normal?

- YES >> Front fog lamp circuit is normal.
 NO >> Refer to [EXL-191, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009653169

1. CHECK FRONT FOG LAMP BULB

Check the applicable lamp bulb.

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Replace bulb.

2. CHECK FRONT FOG LAMP OUTPUT VOLTAGE

CONSULT ACTIVE TEST

1. Turn ignition switch OFF.
2. Disconnect front fog lamp connector.
3. Turn ignition switch ON.
4. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
5. With operating the test items, check the voltage between IPDM E/R harness connector and ground.

(+)			(-)	Test item	Voltage (Approx.)	
IPDM E/R						
Connector	Terminal					
RH	E345	86	Ground	EXTERNAL LAMPS	Fog	Battery voltage
					Off	0 V
LH		87			Fog	Battery voltage
					Off	0 V

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> Replace IPDM E/R.

3. CHECK FRONT FOG LAMP OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front fog lamp harness connector.

IPDM E/R			Front fog lamp		Continuity
Connector	Terminal		Connector	Terminal	
RH	E345	86	E402	1	Existed
LH			87		

Is the inspection result normal?

- YES >> GO TO 4.

FRONT FOG LAMP CIRCUIT

[HALOGEN TYPE]

< DTC/CIRCUIT DIAGNOSIS >

NO >> Repair or replace harness.

4. CHECK FRONT FOG LAMP GROUND CIRCUIT OPEN CIRCUIT

Check continuity between front fog lamp harness connector and ground.

Front fog lamp		Ground	Continuity
Connector	Terminal		
RH	E402	2	Existed
LH	E331		

Is the inspection result normal?

YES >> Refer to [GI-42, "Intermittent Incident"](#).

NO >> Repair or replace harness.

OPTICAL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[HALOGEN TYPE]

OPTICAL SENSOR

Component Function Check

INFOID:000000009653170

1.CHECK OPTICAL SENSOR SIGNAL BY CONSULT

CONSULT DATA MONITOR

1. Turn ignition switch ON.
2. Select "OPTISEN (DTCT)" of BCM (HEADLAMP) data monitor item.
3. Turn lighting switch AUTO.
4. With the optical sensor illuminating, check the monitor status.

Monitor item	Condition		Voltage (Approx.)
OPTISEN (DTCT)	Optical sensor	When illuminating	3.1 V or more *
		When shutting off light	0.6 V or less

*: Illuminates the optical sensor. The value may be less than the standard value if brightness is weak.

Is the inspection result normal?

- YES >> Optical sensor is normal.
 NO >> Refer to [EXL-193, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009653171

1.CHECK OPTICAL SENSOR POWER SUPPLY INPUT

1. Turn ignition switch ON.
2. Turn lighting switch AUTO.
3. Check voltage between optical sensor harness connector and ground.

(+)		(-)	Voltage (Approx.)
Optical sensor			
Connector	Terminal	Ground	5 V
M17	1		

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> GO TO 4.

2.CHECK OPTICAL SENSOR GROUND INPUT

Check voltage between optical sensor harness connector and ground.

(+)		(-)	Voltage (Approx.)
Optical sensor			
Connector	Terminal	Ground	0 V
M17	3		

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> GO TO 6.

3.CHECK OPTICAL SENSOR SIGNAL OUTPUT

With illuminating the optical sensor, check voltage between optical sensor harness connector and ground.

OPTICAL SENSOR

[HALOGEN TYPE]

< DTC/CIRCUIT DIAGNOSIS >

(+)		(-)	Condition	Voltage (Approx.)
Optical sensor				
Connector	Terminal			
M17	2	Ground	Optical sensor	When illuminating 3.1 V or more *
				When shutting off light 0.6 V or less

*: Illuminate the optical sensor. The value may be less than the standard if brightness is weak.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace the optical sensor.

4. CHECK OPTICAL SENSOR OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect optical sensor connector and BCM connector.
3. Check continuity between optical sensor harness connector and BCM harness connector.

Optical sensor		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M17	1	M121	17	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace harness.

5. CHECK OPTICAL SENSOR SHORT CIRCUIT

Check continuity between optical sensor harness connector and ground.

Optical sensor		Ground	Continuity
Connector	Terminal		
M17	1		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-98, "Removal and Installation"](#).

NO >> Repair or replace harness.

6. CHECK OPTICAL SENSOR GROUND OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect optical sensor connector and BCM connector.
3. Check continuity between optical sensor harness connector and BCM harness connector.

Optical sensor		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M17	3	M121	18	Existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-98, "Removal and Installation"](#).

NO >> Repair or replace harness.

7. CHECK OPTICAL SENSOR SIGNAL OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect optical sensor connector and BCM connector.
3. Check continuity between optical sensor harness connector and BCM harness connector.

OPTICAL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[HALOGEN TYPE]

Optical sensor		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M17	2	M121	14	Existed

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair or replace harness.

8.CHECK OPTICAL SENSOR SHORT CIRCUIT

Check continuity between optical sensor harness connector and ground.

Optical sensor		Ground	Continuity
Connector	Terminal		
M17	2		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-98, "Removal and Installation"](#).

NO >> Repair or replace harness.

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

HAZARD SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[HALOGEN TYPE]

HAZARD SWITCH

Component Function Check

INFOID:000000009653172

1. CHECK HAZARD SWITCH SIGNAL BY CONSULT

CONSULT DATA MONITOR

1. Turn ignition switch ON.
2. Select "HAZARD SW" of BCM (FLASHER) data monitor item.
3. With operating the hazard switch, check the monitor status.

Monitor item	Condition		Monitor status
HAZARD SW	Hazard switch	ON	On
		OFF	Off

Is the inspection result normal?

- YES >> Hazard switch circuit is normal.
NO >> Refer to [EXL-196. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009653173

1. CHECK HAZARD SWITCH SIGNAL INPUT

1. Turn ignition switch OFF.
2. Disconnect hazard switch connector.
3. Check voltage between hazard switch connector and ground.

(+)		(-)	Voltage (Approx.)
Hazard switch			
Connector	Terminal	Ground	12 V
M45	2		

Is the inspection result normal?

- YES >> GO TO 4.
NO >> GO TO 2.

2. CHECK HAZARD SWITCH SIGNAL OPEN CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between hazard switch harness connector and BCM harness connector.

Hazard switch		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M45	2	M121	29	Existed

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace harness.

3. CHECK HAZARD SWITCH SIGNAL SHORT CIRCUIT

Check continuity between hazard switch harness connector and ground.

Hazard switch		Ground	Continuity
Connector	Terminal		
M45	2		Not existed

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-98. "Removal and Installation"](#).
NO >> Repair or replace harness.

HAZARD SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[HALOGEN TYPE]

4. CHECK HAZARD SWITCH GROUND OPEN CIRCUIT

Check continuity between hazard switch harness connector and ground.

Hazard switch		Ground	Continuity
Connector	Terminal		Existed
M45	1		

Is the inspection result normal?

- YES >> Replace hazard switch.
- NO >> Repair or replace harness.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

EXL

EXTERIOR LIGHTING SYSTEM SYMPTOMS

[HALOGEN TYPE]

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

EXTERIOR LIGHTING SYSTEM SYMPTOMS WITHOUT DAYTIME RUNNING LIGHT SYSTEM

WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Symptom Table

INFOID:000000009653174

CAUTION:

Perform the self-diagnosis with CONSULT before the symptom diagnosis. Perform the trouble diagnosis if any DTC is detected.

Symptom		Possible cause	Inspection item
Headlamp (HI) is not turned ON.	One side	<ul style="list-style-type: none"> • Fuse • Halogen bulb (HI) • Harness between IPDM E/R and headlamp (HI) • Harness between headlamp (HI) and ground • IPDM E/R 	Headlamp (HI) circuit Refer to EXL-174, "WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Component Function Check" .
	Both sides	Symptom diagnosis "BOTH SIDE HEADLAMPS (HI) ARE NOT TURNED ON" Refer to EXL-204, "WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Diagnosis Procedure" .	
High beam indicator lamp is not turned ON. [Headlamp (HI) is turned ON.]		Combination meter	<ul style="list-style-type: none"> • Combination meter • Data monitor "HI-BEAM IND" • BCM (HEAD LAMP) • Active test "HEADLAMP"
Headlamp (LO) is not turned ON.	One side	<ul style="list-style-type: none"> • Fuse • Halogen bulb (LO) • Harness between IPDM E/R and headlamp lamp (LO) • Harness between headlamp (LO) and ground • IPDM E/R 	Headlamp (LO) circuit Refer to EXL-178, "Component Function Check" .
	Both sides	Symptom diagnosis "BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON" Refer to EXL-206, "Diagnosis Procedure" .	
Each lamp is not turned ON/OFF with lighting switch AUTO.		<ul style="list-style-type: none"> • Combination switch • Harness between combination switch and BCM • BCM 	Combination switch Refer to BCS-96, "Symptom Table" .
		<ul style="list-style-type: none"> • Optical sensor • Harness between optical sensor and BCM • BCM 	Optical sensor Refer to EXL-193, "Component Function Check" .
Parking lamp is not turned ON.		<ul style="list-style-type: none"> • Fuse • Parking lamp bulb • Harness between IPDM E/R and front combination lamp • Harness between front combination lamp and ground • IPDM E/R 	Parking lamp circuit Refer to EXL-182, "Component Function Check" .
Front side marker lamp is not turned ON.		<ul style="list-style-type: none"> • Front side marker lamp bulb • Harness between IPDM E/R and front side marker lamp • Harness between front side marker lamp and ground 	Front side marker lamp circuit Refer to EXL-184, "Component Function Check" .

EXTERIOR LIGHTING SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[HALOGEN TYPE]

Symptom	Possible cause	Inspection item	
Tail lamp (Rear side marker lamp) is not turned ON.	<ul style="list-style-type: none"> • Fuse • Tail lamp bulb • Harness between IPDM E/R and rear combination lamp • Harness between rear combination lamp and ground • IPDM E/R 	Tail lamp circuit Refer to EXL-185, "Component Function Check" .	
License plate lamp is not turned ON.	<ul style="list-style-type: none"> • License plate lamp bulb • Harness between IPDM E/R and license plate lamp • Harness between license plate lamp and ground 	License plate lamp circuit Refer to EXL-187, "Component Function Check" .	
Parking lamp, side marker lamp, tail lamp and license plate lamp are not turned ON.	Symptom diagnosis "PARKING, SIDE MARKER, LICENSE PLATE AND TAIL LAMPS ARE NOT TURNED ON" Refer to EXL-207, "Diagnosis Procedure" .		
Tail lamp indicator is not turned ON. (Exterior lamps are turned ON.)	Combination meter	<ul style="list-style-type: none"> • Combination meter Data monitor "LIGHT IND" • BCM (HEADLAMP) Active test "TAIL LAMP" 	
Turn signal lamp does not blink.	Indicator lamp is normal. (Applicable side performs high flasher activation.)	<ul style="list-style-type: none"> • Turn signal lamp bulb • Door mirror • Harness between BCM and each turn signal lamp • Harness between each turn signal lamp and ground 	Turn signal lamp circuit Refer to EXL-188, "Component Function Check" .
	Indicator lamp is included.	<ul style="list-style-type: none"> • Combination switch • Harness between combination switch and BCM • BCM 	Combination switch Refer to BCS-96, "Symptom Table" .
Turn signal indicator lamp does not blink. (Turn signal lamp is normal.)	One side	Combination meter	—
	Both sides (Always)	<ul style="list-style-type: none"> • Turn signal indicator lamp signal • BCM • Combination meter 	<ul style="list-style-type: none"> • Combination meter Data monitor "TURN IND" • BCM (FLASHER) Active test "FLASHER"
	Both sides (Only when activating hazard warning lamp with ignition switch OFF)	<ul style="list-style-type: none"> • Combination meter power supply and ground circuit • Combination meter 	Combination meter Power supply and ground circuit Refer to MWI-72, "COMBINATION METER : Diagnosis Procedure" .
<ul style="list-style-type: none"> • Hazard warning lamp does not activate. • Hazard warning lamp continues activating. (Turn signal is normal.) 	<ul style="list-style-type: none"> • Hazard switch • Harness between hazard switch and BCM • Harness between hazard switch and ground • BCM 	Hazard switch circuit Refer to EXL-196, "Component Function Check" .	
Front fog lamp is not turned ON.	One side	<ul style="list-style-type: none"> • Front fog lamp bulb • Harness between IPDM E/R and front fog lamp • Harness between front fog lamp and ground • IPDM E/R 	Front fog lamp circuit Refer to EXL-191, "Component Function Check" .
	Both sides	Symptom diagnosis "BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON" Refer to EXL-208, "Description" .	

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

WITH DAYTIME RUNNING LIGHT SYSTEM

EXTERIOR LIGHTING SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[HALOGEN TYPE]

WITH DAYTIME RUNNING LIGHT SYSTEM : Symptom Table

INFOID:000000009653175

CAUTION:

Perform the self-diagnosis with CONSULT before the symptom diagnosis. Perform the trouble diagnosis if any DTC is detected.

Symptom		Possible cause	Inspection item
Headlamp (HI) is not turned ON.	One side	<ul style="list-style-type: none"> • Fuse • Halogen bulb (HI) • Harness between IPDM E/R and headlamp (HI) • Harness between headlamp (HI) and ground • IPDM E/R 	Headlamp (HI) circuit Refer to EXL-175, "WITH DAYTIME RUNNING LIGHT SYSTEM : Component Function Check" .
		<ul style="list-style-type: none"> • Harness between IPDM E/R and daytime running light relay • Daytime running light relay • IPDM E/R 	Daytime running light relay circuit Refer to EXL-180, "Component Function Check" .
	Both sides	Symptom diagnosis "BOTH SIDE HEADLAMPS (HI) ARE NOT TURNED ON" Refer to EXL-204, "WITH DAYTIME RUNNING LIGHT SYSTEM : Diagnosis Procedure" .	
High beam indicator lamp is not turned ON. [Headlamp (HI) is turned ON.]		Combination meter	<ul style="list-style-type: none"> • Combination meter • Data monitor "HI-BEAM IND" • BCM (HEAD LAMP) • Active test "HEADLAMP"
Headlamp (LO) is not turned ON.	One side	<ul style="list-style-type: none"> • Fuse • Halogen bulb (LO) • Harness between IPDM E/R and headlamp lamp (LO) • Harness between headlamp (LO) and ground • IPDM E/R 	Headlamp (LO) circuit Refer to EXL-180, "Component Function Check" .
	Both sides	Symptom diagnosis "BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON" Refer to EXL-206, "Diagnosis Procedure" .	
Each lamp is not turned ON/OFF with lighting switch AUTO.		<ul style="list-style-type: none"> • Combination switch • Harness between combination switch and BCM • BCM 	Combination switch Refer to BCS-96, "Symptom Table" .
		<ul style="list-style-type: none"> • Optical sensor • Harness between optical sensor and BCM • BCM 	Optical sensor Refer to EXL-193, "Component Function Check" .
Daytime running light is not turned ON. [Headlamp (HI) is turned ON.]		<ul style="list-style-type: none"> • Fuse • Harness between IPDM E/R and daytime running light relay • Daytime running light relay • IPDM E/R • BCM • ECM • Combination meter 	<ul style="list-style-type: none"> • Daytime running light relay circuit Refer to EXL-180, "Component Function Check". • BCM (HEADLAMP) • Data monitor "ENGINE STATE" • Combination meter • Data monitor "PKB SW" • BCM (HEADLAMP) • Active test "DAYTIME RUNNING LIGHT"
Parking lamp is not turned ON.		<ul style="list-style-type: none"> • Fuse • Parking lamp bulb • Harness between IPDM E/R and front combination lamp • IPDM E/R 	Parking lamp circuit Refer to EXL-182, "Component Function Check" .

EXTERIOR LIGHTING SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[HALOGEN TYPE]

Symptom	Possible cause	Inspection item	
Front side marker lamp is not turned ON.	<ul style="list-style-type: none"> • Front side marker lamp bulb • Harness between IPDM E/R and front side marker lamp • Harness between front side marker lamp and ground • IPDM E/R 	Front side marker lamp circuit Refer to EXL-184, "Component Function Check" .	
Tail lamp (Rear side marker lamp) is not turned ON.	<ul style="list-style-type: none"> • Fuse • Tail lamp bulb • Harness between IPDM E/R and rear combination lamp • Harness between and rear combination lamp and ground 	Tail lamp circuit Refer to EXL-185, "Component Function Check" .	
License plate lamp is not turned ON.	<ul style="list-style-type: none"> • License plate lamp bulb • Harness between IPDM E/R and license plate lamp • Harness between license plate lamp and ground 	License plate lamp circuit Refer to EXL-187, "Component Function Check" .	
Parking lamp, side marker lamp, tail lamp and license plate lamp are not turned ON.	Symptom diagnosis "PARKING, SIDE MARKER, LICENSE PLATE AND TAIL LAMPS ARE NOT TURNED ON" Refer to EXL-207, "Diagnosis Procedure" .		
Tail lamp indicator is not turned ON. (Exterior lamps are turned ON.)	Combination meter	<ul style="list-style-type: none"> • Combination meter Data monitor "LIGHT IND" • BCM (HEADLAMP) Active test "TAIL LAMP" 	
Turn signal lamp does not blink.	Indicator lamp is normal. (Applicable side performs high flasher activation.)	<ul style="list-style-type: none"> • Turn signal lamp bulb • Door mirror • Harness between BCM and each turn signal lamp • Harness between each turn signal lamp and ground 	Turn signal lamp circuit Refer to EXL-188, "Component Function Check" .
	Indicator lamp is included.	<ul style="list-style-type: none"> • Combination switch • Harness between combination switch and BCM • BCM 	Combination switch Refer to BCS-96, "Symptom Table" .
Turn signal indicator lamp does not blink. (Turn signal lamp is normal.)	One side	Combination meter	—
	Both sides (Always)	<ul style="list-style-type: none"> • Turn signal indicator lamp signal • BCM • Combination meter 	<ul style="list-style-type: none"> • Combination meter Data monitor "TURN IND" • BCM (FLASHER) Active test "FLASHER"
	Both sides (Only when activating hazard warning lamp with ignition switch OFF)	<ul style="list-style-type: none"> • Combination meter power supply and ground circuit • Combination meter 	Combination meter Power supply and ground circuit Refer to MWI-72, "COMBINATION METER : Diagnosis Procedure" .
<ul style="list-style-type: none"> • Hazard warning lamp does not activate. • Hazard warning lamp continues activating. (Turn signal is normal.) 	<ul style="list-style-type: none"> • Hazard switch • Harness between hazard switch and BCM • Harness between hazard switch and ground • BCM 	Hazard switch circuit Refer to EXL-196, "Component Function Check" .	

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

EXTERIOR LIGHTING SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[HALOGEN TYPE]

Symptom		Possible cause	Inspection item
Front fog lamp is not turned ON.	One side	<ul style="list-style-type: none"> • Front fog lamp bulb • Harness between IPDM E/R and front fog lamp • Harness between front fog lamp and ground • IPDM E/R 	Front fog lamp circuit Refer to EXL-191 , " Component Function Check ".
	Both sides	Symptom diagnosis "BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON" Refer to EXL-208 , " Diagnosis Procedure ".	

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[HALOGEN TYPE]

NORMAL OPERATING CONDITION

Description

INFOID:000000009653176

AUTO LIGHT SYSTEM

The headlamp may not be turned ON/OFF immediately after passing dark area or bright area (short tunnel, sky bridge, shadowed area etc.) while using the auto light system. This causes for the control difference. This is normal.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

BOTH SIDE HEADLAMPS (HI) ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

[HALOGEN TYPE]

BOTH SIDE HEADLAMPS (HI) ARE NOT TURNED ON WITH DAYTIME RUNNING LIGHT SYSTEM

WITH DAYTIME RUNNING LIGHT SYSTEM : Description

INFOID:000000009653177

Both side headlamps (HI) are not turned ON when setting to the lighting switch HI or PASS.

WITH DAYTIME RUNNING LIGHT SYSTEM : Diagnosis Procedure

INFOID:000000009653178

1.COMBINATION SWITCH INSPECTION

Check combination switch. Refer to [BCS-96. "Symptom Table"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning part.

2.CHECK HEADLAMP (HI) REQUEST SIGNAL INPUT

CONSULT DATA MONITOR

1. Select "HL HI REQ" of IPDM E/R data monitor item.
2. With operating the lighting switch, check the monitor status.

Monitor item	Condition	Monitor status
HL HI REQ	Lighting switch (2ND) HI or PASS	On
	LO	Off

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace BCM. Refer to [BCS-98. "Removal and Installation"](#).

3.HEADLAMP (HI) CIRCUIT INSPECTION

Check headlamp (HI) circuit. Refer to [EXL-175. "WITH DAYTIME RUNNING LIGHT SYSTEM : Component Function Check"](#).

Is the inspection result normal?

YES >> Refer to [GI-42. "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning part.

WITHOUT DAYTIME RUNNING LIGHT SYSTEM

WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Description

INFOID:000000009653179

Both side headlamps (HI) are not turned ON when setting to the lighting switch HI or PASS.

WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Diagnosis Procedure

INFOID:000000009653180

1.COMBINATION SWITCH INSPECTION

Check combination switch. Refer to [BCS-96. "Symptom Table"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning part.

2.CHECK HEADLAMP (HI) REQUEST SIGNAL INPUT

CONSULT DATA MONITOR

1. Select "HL HI REQ" of IPDM E/R data monitor item.
2. With operating the lighting switch, check the monitor status.

Monitor item	Condition	Monitor status
HL HI REQ	Lighting switch (2ND) HI or PASS	On
	LO	Off

BOTH SIDE HEADLAMPS (HI) ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

[HALOGEN TYPE]

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace BCM. Refer to [BCS-98. "Removal and Installation"](#).

3. HEADLAMP (HI) CIRCUIT INSPECTION

Check headlamp (HI) circuit. Refer to [EXL-174. "WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Component Function Check"](#).

Is the inspection result normal?

YES >> Refer to [GI-42. "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning part.

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

[HALOGEN TYPE]

BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON

Description

INFOID:000000009653181

Both side headlamps (LO) are not turned ON in any condition.

Diagnosis Procedure

INFOID:000000009653182

1. CHECK COMBINATION SWITCH

Check combination switch. Refer to [BCS-96. "Symptom Table"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning part.

2. CHECK HEADLAMP (LO) REQUEST SIGNAL INPUT

ⓑ CONSULT DATA MONITOR

1. Select "HL LO REQ" of IPDM E/R data monitor item.
2. With operating the lighting switch, check the monitor status.

Monitor item	Condition	Monitor status	
HL LO REQ	Lighting switch	2ND	On
		OFF	Off

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace BCM. Refer to [BCS-98. "Removal and Installation"](#).

3. HEADLAMP (LO) CIRCUIT INSPECTION

Check headlamp (LO) circuit. Refer to [EXL-178. "Component Function Check"](#).

Is the inspection result normal?

YES >> Refer to [GI-42. "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning part.

PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

[HALOGEN TYPE]

PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS ARE NOT TURNED ON

Description

INFOID:000000009653183

The parking, license plate, side marker, tail lamps and each illumination are not turned ON in any condition.

Diagnosis Procedure

INFOID:000000009653184

1.COMBINATION SWITCH INSPECTION

Check combination switch. Refer to [BCS-96. "Symptom Table"](#).

Is the combination switch normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning part.

2.CHECK TAIL LAMP RELAY REQUEST SIGNAL INPUT

CONSULT DATA MONITOR

1. Select "TAIL & CLR REQ" of IPDM E/R data monitor item.
2. With operating the lighting switch, check the monitor status.

Monitor item	Condition		Monitor status
TAIL & CLR REQ	Lighting switch	1ST	On
		OFF	Off

Is the inspection result normal?

YES >> Replace IPDM E/R.

NO >> Replace BCM. Refer to [BCS-98. "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

[HALOGEN TYPE]

BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON

Description

INFOID:000000009653185

The front fog lamps are not turned ON in any condition.

Diagnosis Procedure

INFOID:000000009653186

1. CHECK FRONT FOG LAMP FUSE

1. Turn ignition switch OFF.
2. Check that the following fuse is not fusing.

Unit	Location	Fuse No.	Capacity
Front fog lamp	IPDM E/R	#58	15 A

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK FRONT FOG LAMP SHORT CIRCUIT

1. Disconnect front fog connector and IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
RH	E345	86	Not existed
LH		87	

Is the inspection result normal?

- YES >> Replace fuse. (Replace IPDM E/R if the fuse is fusing again.)
NO >> Repair or replace harness. And then replace the fuse.

3. COMBINATION SWITCH INSPECTION

Check combination switch. Refer to [BCS-96, "Symptom Table"](#).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair or replace the malfunctioning part.

4. CHECK FRONT FOG LAMP REQUEST SIGNAL INPUT

CONSULT DATA MONITOR

1. Select "FR FOG REQ" of IPDM E/R data monitor item.
2. With operating the front fog lamp switch, check the monitor status.

Monitor item	Condition	Monitor status
FR FOG REQ	Front fog lamp switch (With lighting switch 2ND)	ON
		OFF

Is the item status normal?

- YES >> GO TO 5.
NO >> Replace BCM. Refer to [BCS-98, "Removal and Installation"](#).

5. FRONT FOG LAMP CIRCUIT INSPECTION

Check the front fog lamp circuit. Refer to [EXL-191, "Component Function Check"](#).

Is the inspection result normal?

- YES >> Refer to [GI-42, "Intermittent Incident"](#).
NO >> Repair or replace the malfunctioning part.

HEADLAMP AIMING ADJUSTMENT

< PERIODIC MAINTENANCE >

[HALOGEN TYPE]

PERIODIC MAINTENANCE

HEADLAMP AIMING ADJUSTMENT

Description

INFOID:000000009653187

PREPARATION BEFORE ADJUSTING

NOTE:

- For details, refer to the regulations in your own country.
- Perform aiming if the vehicle front body has been repaired and/or the front combination lamp assembly has been replaced.

Before performing aiming adjustment, check the following.

- Adjust the tire pressure to the specification.
- Fill with fuel, engine coolant and each oil.
- Maintain the unloaded vehicle condition. (Remove luggage from the passenger compartment and the luggage room.)

NOTE:

Do not remove the temporary tire, jack and on-vehicle tool.


- Wipe out dirt on the headlamp.

CAUTION:

Never use organic solvent (thinner, gasoline etc.)

- Ride alone on the driver seat.

AIMING ADJUSTMENT SCREW

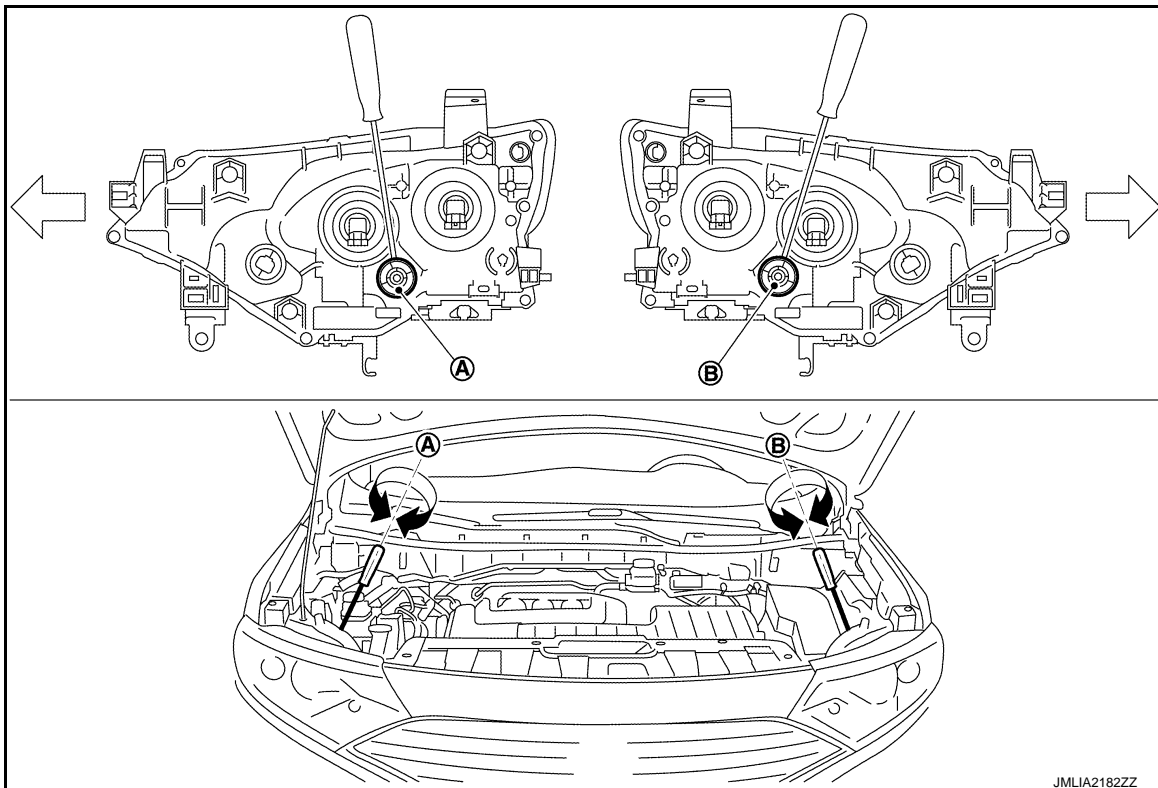

A. Headlamp RH (UP/DOWN) adjustment screw B. Headlamp LH (UP/DOWN) adjustment screw

←: Vehicle center

Adjustment screw	Screw driver rotation	Facing direction
A Headlamp RH (UP/DOWN)	Clockwise	UP
	Counterclockwise	DOWN

HEADLAMP AIMING ADJUSTMENT

< PERIODIC MAINTENANCE >

[HALOGEN TYPE]

	Adjustment screw	Screw driver rotation	Facing direction
B	Headlamp LH (UP/DOWN)	Clockwise	UP
		Counterclockwise	DOWN


Aiming Adjustment Procedure

INFOID:000000009653188

1. Place the screen.
 - NOTE:**
 - Stop the vehicle facing the wall.
 - Place the board on a plain road vertically.
2. Face the vehicle with the screen. Maintain 10 m (32.8 ft) between the headlamp bulb center and the screen.
3. Start the engine. Turn the headlamp (LO) ON.
 - NOTE:**
 - Shut off the headlamp light with the board to prevent from illuminating the adjustment screen.
 - CAUTION:**
 - Never cover the lens surface with a tape etc. The lens is made of resin.**
4. Measure the distance (X) between the horizontal center line of headlamp (H) and the cutoff line (A) within the light axis measurement range (R) from the vertical center line ahead of headlamp (V).

Light axis measurement range (R) : 350 ± 175 mm (13.78 ± 6.89 in)

Low beam distribution on the screen

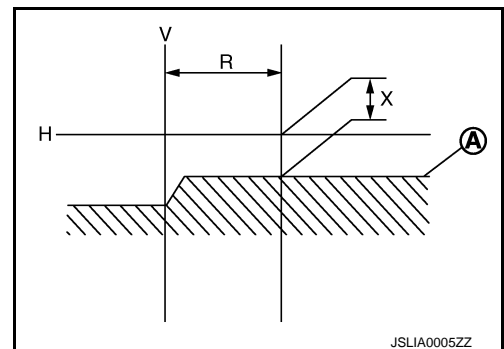


5. Adjust the cutoff line height (X) with the aiming adjustment screw so as to enter in the adjustment range (M–N) according to the horizontal center line of headlamp (H).

unit: mm (in)

Horizontal center line of headlamp (H)	Highest cutoff line height (M)	Lowest cutoff line height (N)
700 (27.56) or less	4 (0.16)	30 (1.18)
701(27.60) – 800 (31.50)	4 (0.16)	30 (1.18)
801 (31.54) or more	17 (0.67)	44 (1.73)

Side view

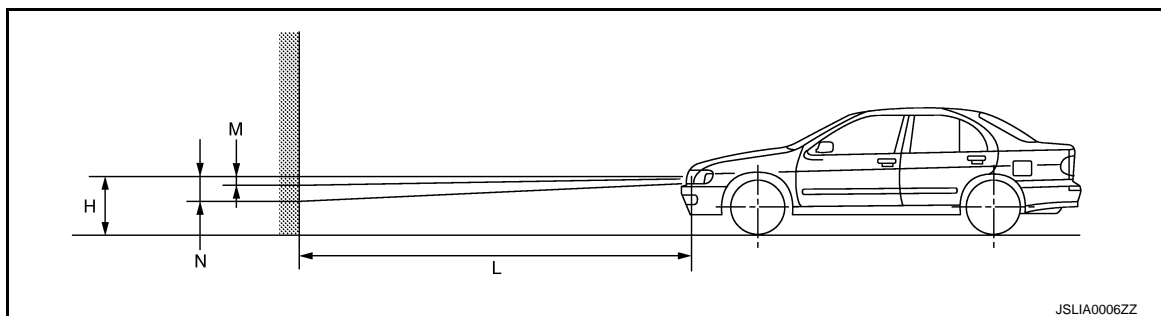

Distance between the headlamp center and the screen (L) : 10 m (32.8 ft)

FRONT FOG LAMP AIMING ADJUSTMENT

< PERIODIC MAINTENANCE >

[HALOGEN TYPE]

FRONT FOG LAMP AIMING ADJUSTMENT

Description

INFOID:000000009653189

PREPARATION BEFORE ADJUSTING

NOTE:

- For details, refer to the regulations in your own country.
- Perform aiming if the vehicle front body has been repaired and/or the front fog lamp assembly has been replaced.

Before performing aiming adjustment, check the following.

- Adjust the tire pressure to the specification.
- Fill with fuel, engine coolant and each oil.
- Maintain the unloaded vehicle condition. (Remove luggage from the passenger compartment and the luggage room.)

NOTE:

Do not remove the temporary tire, jack and on-vehicle tool.

- Wipe out dirt on the front fog lamp.

CAUTION:

Never use organic solvent (thinner, gasoline etc.)

- Ride alone on the driver seat.

AIMING ADJUSTMENT SCREW

- Turn the aiming adjusting screw for adjustment.


A: UP

B: DOWN

- For the position and direction of the adjusting screw, refer to the figure.

NOTE:

A screwdriver or hexagonal wrench [6 mm (0.24 in)] can be used for adjustment.

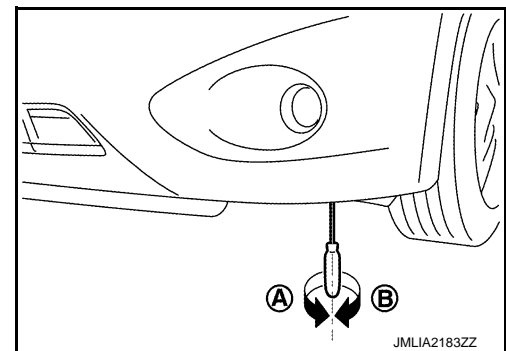

INFOID:000000009653190

Aiming Adjustment Procedure

1. Place the screen.

NOTE:

- Stop the vehicle facing the wall.
- Place the board on a plain road vertically.

2. Face the vehicle with the screen. Maintain 7.62 m (25 ft) between the front fog lamp center and the screen.

3. Start the engine. Illuminate the front fog lamp.

CAUTION:

Never cover the lens surface with a tape etc. The lens is made of resin.

NOTE:

Shut off the headlamp light with the board to prevent from illuminating the adjustment screen.

4. Adjust the cutoff line height (A) with the aiming adjustment screw so that the distance (X) between the horizontal center line of front fog lamp (H) and (A) becomes 100 mm (3.94 in).


A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

FRONT FOG LAMP AIMING ADJUSTMENT

< PERIODIC MAINTENANCE >

[HALOGEN TYPE]

Front fog lamp light distribution on the screen

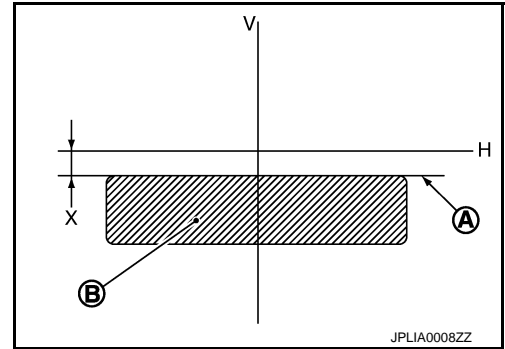

- A : Cutoff line
- B : High illuminance area
- H : Horizontal center line of front fog lamp
- V : Vertical center line of front fog lamp
- X : Cutoff line height

FRONT COMBINATION LAMP

< REMOVAL AND INSTALLATION >

[HALOGEN TYPE]


REMOVAL AND INSTALLATION

FRONT COMBINATION LAMP

Exploded View

INFOID:000000009653191


REMOVAL

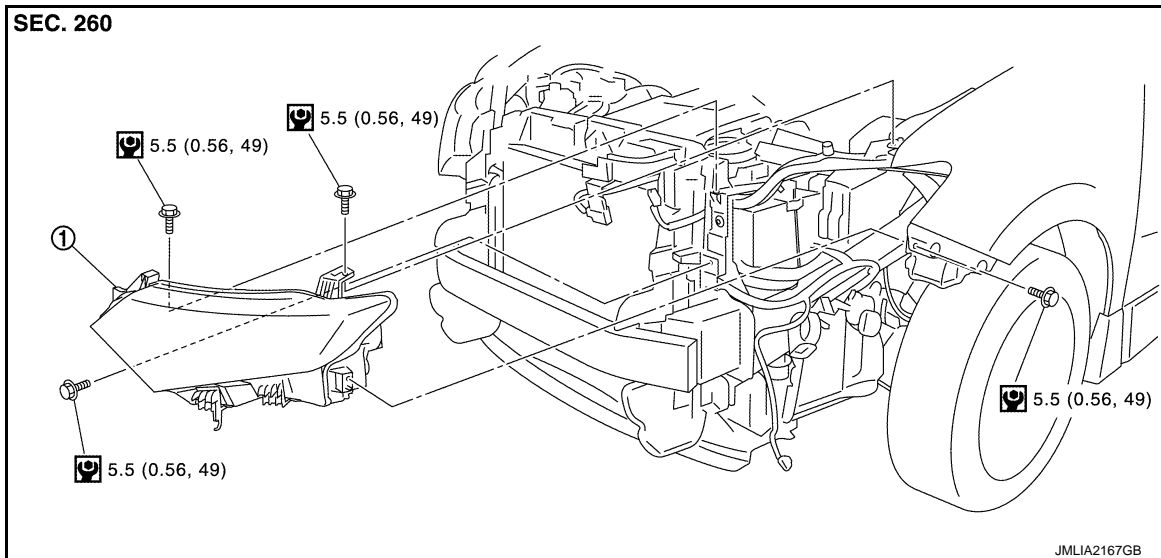

1. Front combination lamp

: N·m (kg-m, in-lb)

DISASSEMBLY

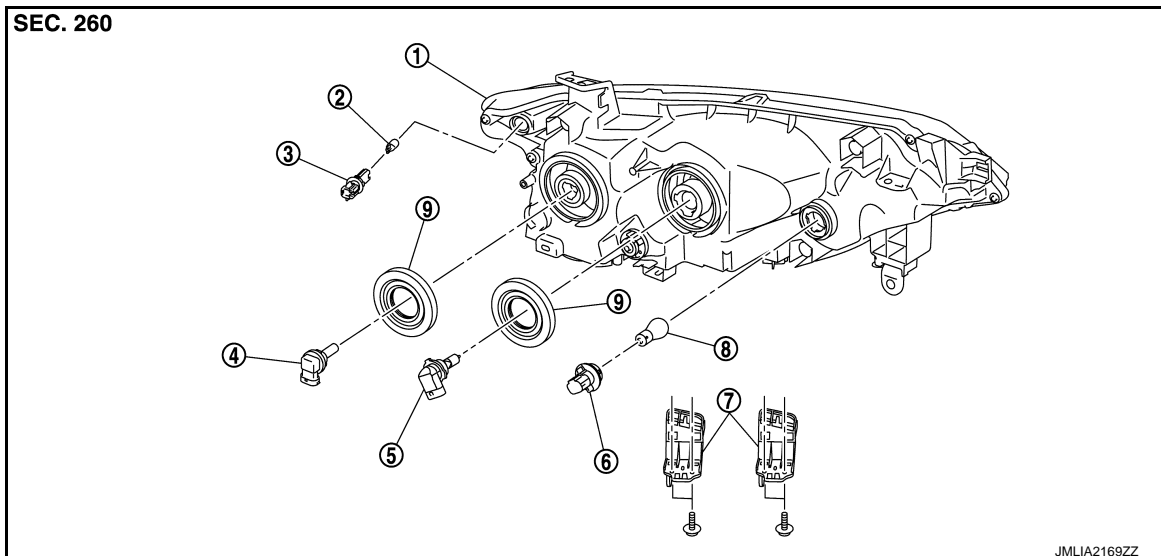

- | | | |
|--|---|--|
| 1. Front combination lamp housing assembly | 2. Front side marker lamp bulb | 3. Front side marker lamp bulb socket |
| 4. Halogen bulb (LO) | 5. Halogen bulb (HI) | 6. Front turn signal lamp/parking lamp bulb socket |
| 7. Bumper bracket | 8. Front turn signal lamp/parking lamp bulb | 9. Back cover |

FRONT COMBINATION LAMP

< REMOVAL AND INSTALLATION >

[HALOGEN TYPE]

Removal and Installation

INFOID:000000009653192

CAUTION:

Disconnect the battery negative terminal or the fuse.

REMOVAL

1. Remove front bumper fascia. Refer to [EXT-12, "Removal and Installation"](#).
2. Remove front combination lamp mounting bolts.
3. Pull out the front combination lamp forward the vehicle, and then disconnect the connector.
4. Remove front combination lamp.

INSTALLATION

Note the following item, and then install in the reverse order of removal.

CAUTION:

After installation, perform aiming adjustment. Refer to [EXL-209, "Description"](#).

Replacement

INFOID:000000009653193

CAUTION:

- **Disconnect the battery negative terminal or the fuse.**
- **After installing the bulb, install the resin cap and the bulb socket securely for watertightness.**
- **Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it.**
- **Never touch bulb by hand while it is lit or right after being turned off.**
- **Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.**

HEADLAMP BULB (HI)

1. Disconnect the halogen bulb connector.
2. Rotate the halogen bulb socket counterclockwise and unlock it.
3. Remove halogen bulb socket from the front combination lamp housing assembly.

HEADLAMP BULB (LO)

1. Disconnect the halogen bulb connector.
2. Rotate the halogen bulb socket counterclockwise and unlock it.
3. Remove halogen bulb socket from the front combination lamp housing assembly.

FRONT TURN SIGNAL LAMP/PARKING LAMP BULB

1. Rotate the bulb socket counterclockwise and unlock it.
2. Remove the bulb from the bulb socket.

FRONT SIDE MARKER LAMP BULB

1. Rotate the bulb socket counterclockwise and unlock it.
2. Remove the bulb from the bulb socket.

Disassembly and Assembly

INFOID:000000009653194

DISASSEMBLY

1. Rotate the halogen bulb (LO) socket counterclockwise and unlock it.
2. Remove halogen bulb (LO) socket from the front combination lamp assembly.
3. Rotate the halogen bulb (HI) socket counterclockwise and unlock it.
4. Remove halogen bulb (HI) socket from the front combination lamp assembly.
5. Rotate the front turn signal lamp/parking lamp bulb socket counterclockwise and unlock it.
6. Remove front turn signal lamp/parking lamp bulb.
7. Rotate the front side marker lamp bulb socket counterclockwise and unlock it.
8. Remove the bulb from the front side marker lamp bulb socket.

ASSEMBLY

Note the following item, and then assemble in the reverse order of disassembly.

FRONT COMBINATION LAMP

< REMOVAL AND INSTALLATION >

[HALOGEN TYPE]

CAUTION:

After installing the bulb, install the back cover and the bulb socket securely for watertightness.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

FRONT FOG LAMP


< REMOVAL AND INSTALLATION >

[HALOGEN TYPE]

FRONT FOG LAMP

Exploded View

INFOID:000000009653195

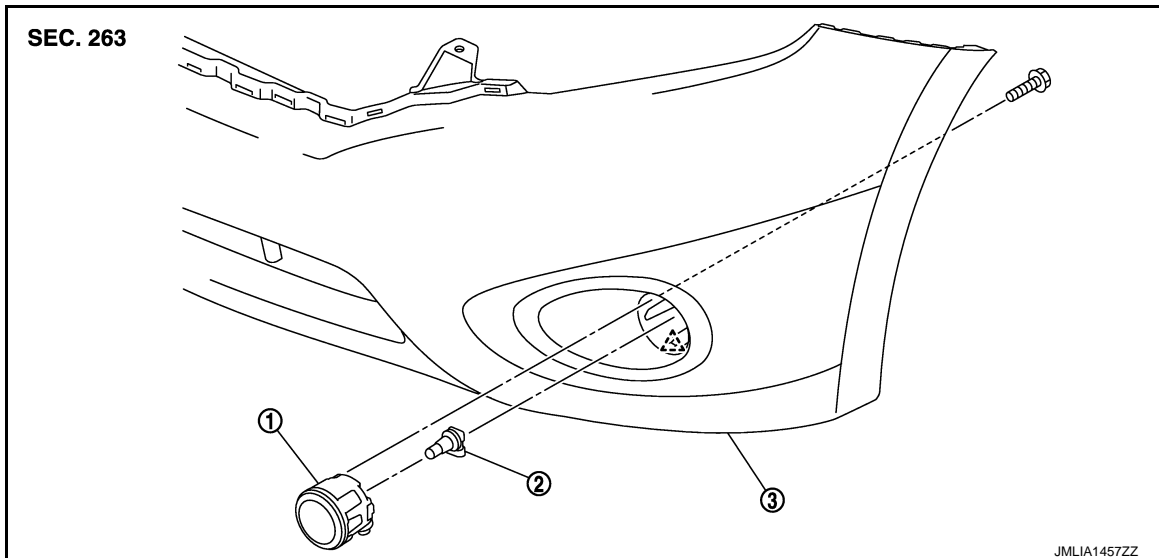

1. Front fog lamp

2. Halogen bulb

3. Front bumper fascia

△ : Pawl

Removal and Installation

INFOID:000000009653196

CAUTION:

Disconnect the battery negative terminal or the fuse.

REMOVAL

1. Remove front fender protector (front) fixing screws and clips, and then keep a service area. Refer to [EXT-23. "Removal and Installation"](#).
2. Disconnect front fog lamp connector.
3. Remove front fog lamp mounting bolt.
4. Disengage fixing pawl, and then remove front fog lamp.

INSTALLATION

Note the following item, and then install in the reverse order of removal.

CAUTION:

After installation, perform aiming adjustment. Refer to [EXL-211. "Description"](#).

Replacement

INFOID:000000009653197

CAUTION:

- Disconnect the battery negative terminal or the fuse.
- Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it.
- Never touch bulb by hand while it is lit or right after being turned off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.

FRONT FOG LAMP BULB


1. Remove front fender protector (front) fixing screws and clips, and then keep a service area. Refer to [EXT-23. "Removal and Installation"](#).

FRONT FOG LAMP

< REMOVAL AND INSTALLATION >

[HALOGEN TYPE]

2. Disconnect front fog lamp bulb connector (1).
3. Rotate the bulb (2) counterclockwise and unlock it.

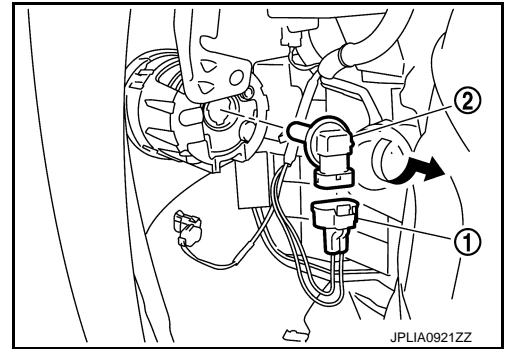

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

OPTICAL SENSOR


< REMOVAL AND INSTALLATION >

[HALOGEN TYPE]

OPTICAL SENSOR

Exploded View


INFOID:000000009653198

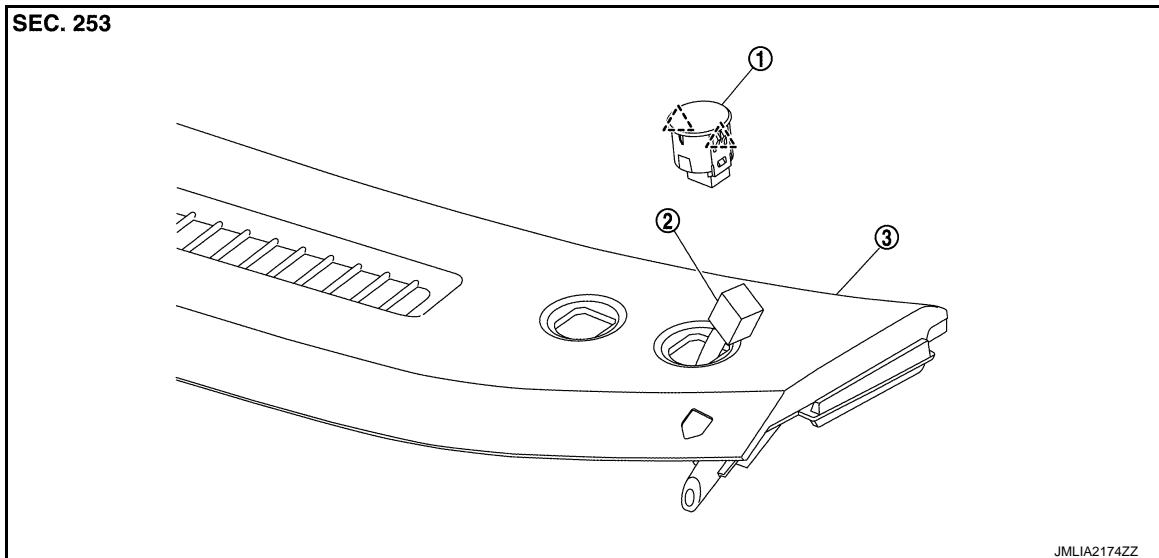

1. Optical sensor

2. Harness connector

3. Instrument upper garnish

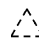 : Pawl

Removal and Installation

INFOID:000000009653199

REMOVAL

1. Insert an appropriate tool between the optical sensor and the instrument upper garnish. Pull out the optical sensor upward.
2. Disconnect the optical sensor connector, and then remove optical sensor.

INSTALLATION

Install in the reverse order of removal.

LIGHTING & TURN SIGNAL SWITCH

< REMOVAL AND INSTALLATION >

[HALOGEN TYPE]

LIGHTING & TURN SIGNAL SWITCH

Exploded View

INFOID:000000009653200

The lighting & turn signal switch is integrated in the combination switch. Refer to [BCS-99, "Exploded View"](#).

- A
- B
- C
- D
- E
- F
- G
- H
- I
- J
- K
- EXL
- M
- N
- O
- P

HAZARD SWITCH


< REMOVAL AND INSTALLATION >

[HALOGEN TYPE]

HAZARD SWITCH


Exploded View

INFOID:000000009653201

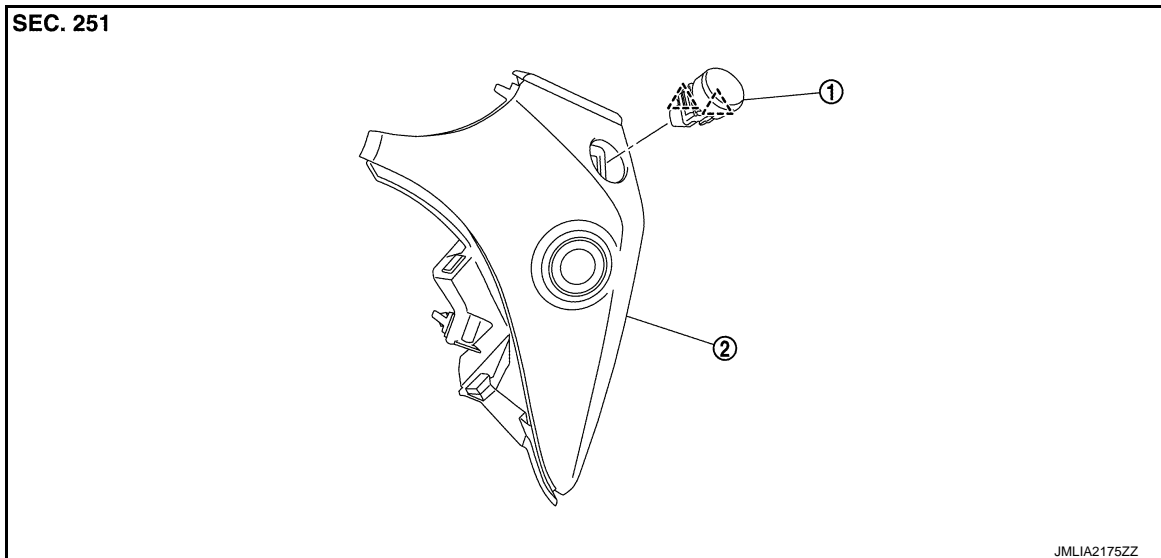

1. Hazard switch

2. Instrument finisher A

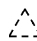 : Pawl

Removal and Installation

INFOID:000000009653202

REMOVAL

1. Remove instrument finisher A. Refer to [IP-14, "Removal and Installation"](#).
2. Disengage fixing pawls, and then remove hazard switch from instrument finisher A.

INSTALLATION

Install in the reverse order of removal.

SIDE TURN SIGNAL LAMP

< REMOVAL AND INSTALLATION >

[HALOGEN TYPE]

SIDE TURN SIGNAL LAMP

Exploded View

INFOID:000000009653203

Side turn signal lamp is integrated in the door mirror. Refer to [MIR-31. "Exploded View"](#).

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

REAR COMBINATION LAMP

< REMOVAL AND INSTALLATION >


[HALOGEN TYPE]

REAR COMBINATION LAMP

Exploded View

INFOID:000000009653204

REMOVAL

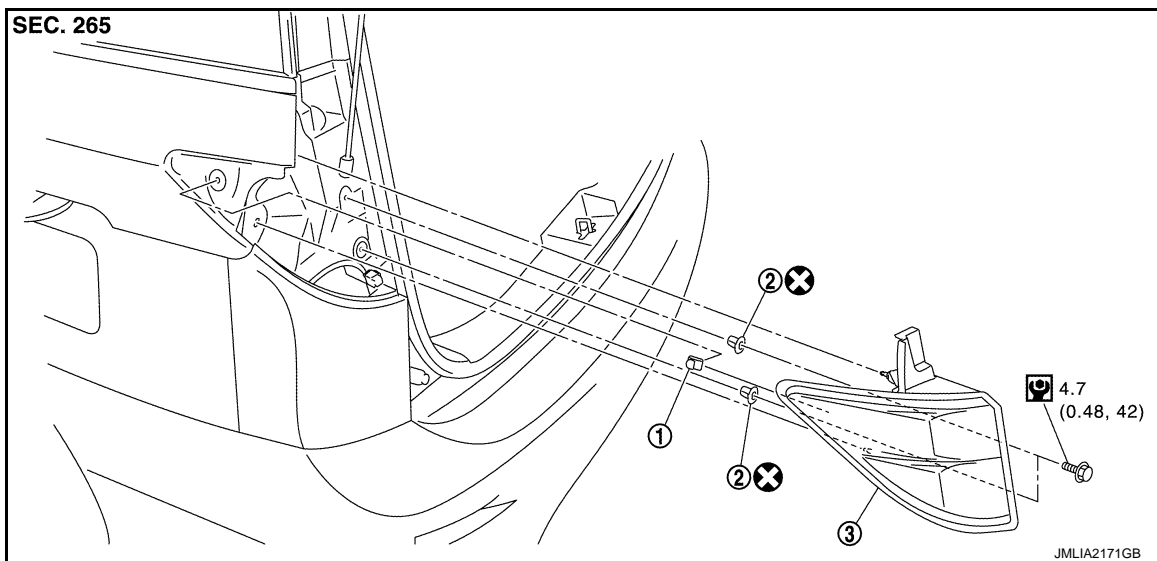

1. Clip

2. Grommet

3. Rear combination lamp assembly




: Always replace after every disassembly.



: N·m (kg-m, in-lb)

DISASSEMBLY

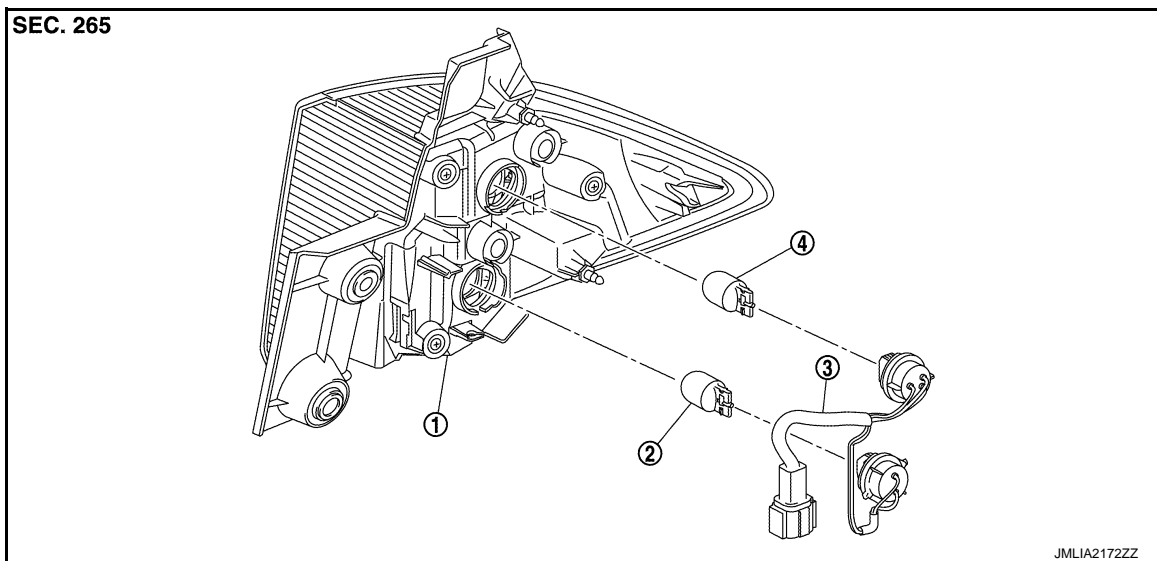

1. Rear combination lamp housing assembly

2. Rear turn signal lamp bulb

3. Bulb socket assembly

4. Tail lamp/stop lamp bulb

Removal and Installation

INFOID:000000009653205

CAUTION:

Disconnect the battery negative terminal or the fuse.

REMOVAL

REAR COMBINATION LAMP

[HALOGEN TYPE]

< REMOVAL AND INSTALLATION >

1. Fully open back door. A
2. Remove rear combination lamp assembly mounting bolts. A
3. Pull the rear combination lamp assembly toward rear of the vehicle, and then remove rear combination lamp assembly. B
4. Disconnect the rear combination lamp connector. B

INSTALLATION

Install in the reverse order of removal. C

Replacement

INFOID:000000009653206

CAUTION:

- Disconnect the battery negative terminal or the fuse. D
- Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it. E
- Never touch bulb by hand while it is lit or right after being turned off. E
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one. E

REAR TURN SIGNAL LAMP BULB

1. Remove rear combination lamp assembly. Refer to [EXL-222. "Removal and Installation"](#). F
2. Rotate rear turn signal lamp bulb socket counterclockwise, and then remove rear turn signal lamp bulb socket. G
3. Remove rear turn signal lamp bulb from rear turn signal lamp bulb socket. G

TAIL LAMP/STOP LAMP BULB

1. Remove rear combination lamp assembly. Refer to [EXL-222. "Removal and Installation"](#). H
2. Rotate tail lamp/stop lamp bulb socket counterclockwise, and then remove tail lamp/stop lamp bulb socket. I
3. Remove tail lamp/stop lamp bulb from tail lamp/stop lamp bulb socket. I

EXL

M

N

O

P

BACK-UP LAMP

< REMOVAL AND INSTALLATION >


[HALOGEN TYPE]

BACK-UP LAMP

Exploded View

INFOID:000000009653207


REMOVAL

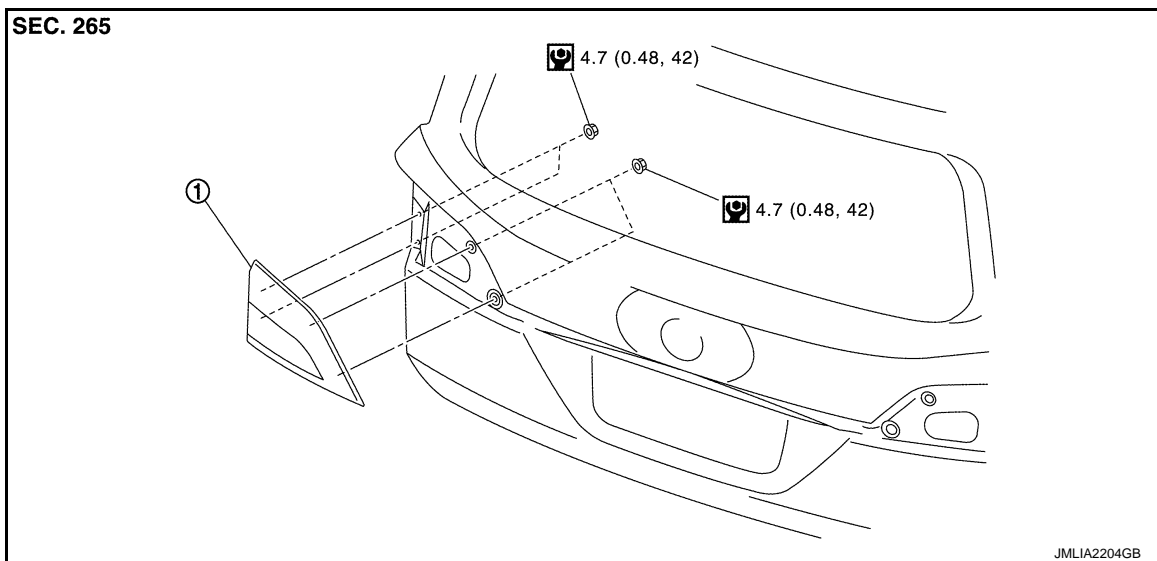

1. Back-up lamp assembly

N·m (kg-m, in-lb)

DISASSEMBLY

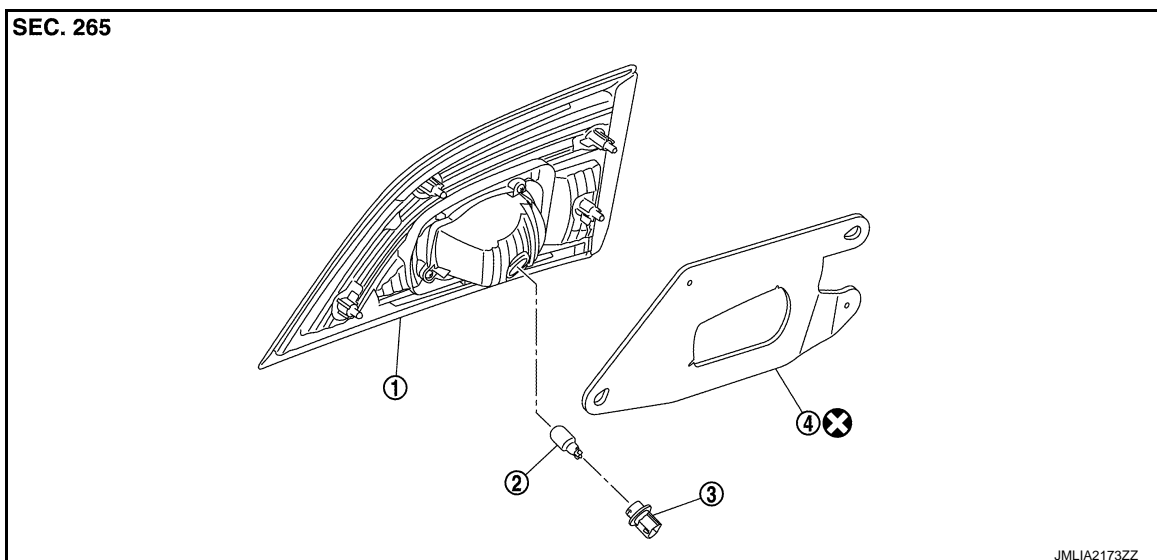

1. Back-up lamp housing assembly

2. Back-up lamp bulb

3. Back-up lamp bulb socket

4. Seal packing

: Always replace after every disassembly.

Removal and Installation

INFOID:000000009653208

CAUTION:
Disconnect the battery negative terminal or the fuse.

REMOVAL

BACK-UP LAMP

[HALOGEN TYPE]

< REMOVAL AND INSTALLATION >

1. Remove touch sensor.(with automatic back door) Refer to [DLK-477. "TOUCH SENSOR : Removal and Installation"](#).
2. Remove back door lower finisher. Refer to [INT-48. "BACK DOOR LOWER FINISHER : Removal and Installation"](#).
3. Disconnect back-up lamp connector.
4. Remove back-up lamp mounting nuts, and then remove back-up lamp.
5. Remove seal packing

INSTALLATION

Note the following item, and then install in the reverse order of removal.

CAUTION:

Seal packing cannot be reused.

Replacement

INFOID:000000009653209

CAUTION:

- Disconnect the battery negative terminal or the fuse.
- Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it.
- Never touch bulb by hand while it is lit or right after being turned off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.

BACK-UP LAMP BULB

1. Remove back door lower finisher. Refer to [INT-48. "BACK DOOR LOWER FINISHER : Removal and Installation"](#).
2. Rotate back-up lamp bulb socket counterclockwise, and then remove back-up lamp bulb socket.
3. Remove back-up lamp bulb from back-up lamp bulb socket.

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

HIGH-MOUNTED STOP LAMP


< REMOVAL AND INSTALLATION >

[HALOGEN TYPE]

HIGH-MOUNTED STOP LAMP

Exploded View

INFOID:000000009653210

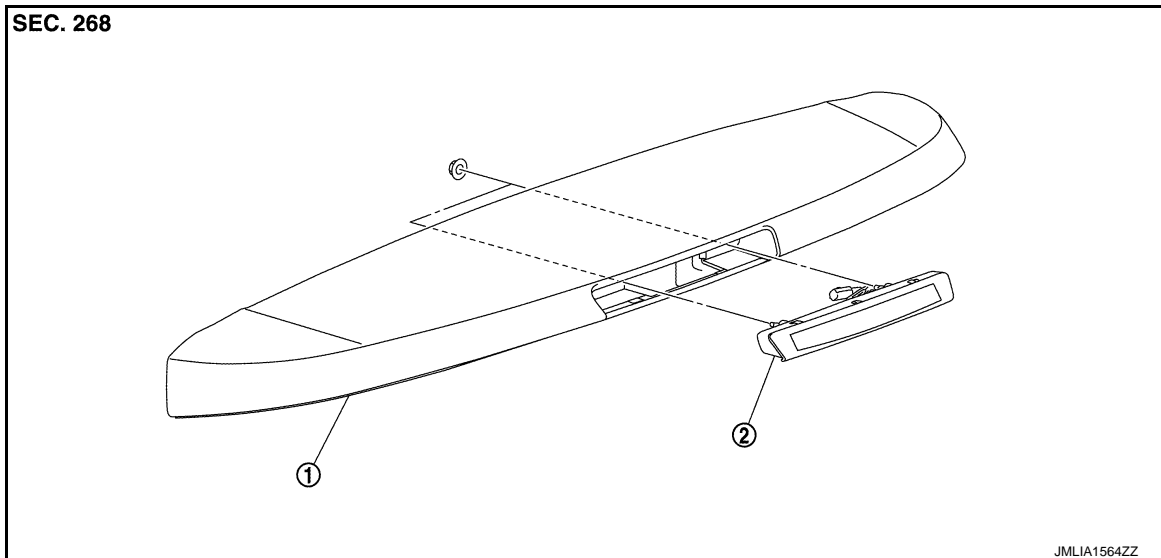

1. Rear spoiler

2. High-mounted stop lamp

Removal and Installation

INFOID:000000009653211

REMOVAL

1. Remove rear spoiler. Refer to [EXT-45, "Removal and Installation"](#).
2. Remove high-mounted stop lamp mounting nuts.
3. Remove high-mounted stop lamp from rear spoiler.

INSTALLATION

Install in the reverse order of removal.

LICENSE PLATE LAMP


< REMOVAL AND INSTALLATION >

[HALOGEN TYPE]


LICENSE PLATE LAMP


Exploded View

INFOID:000000009653212

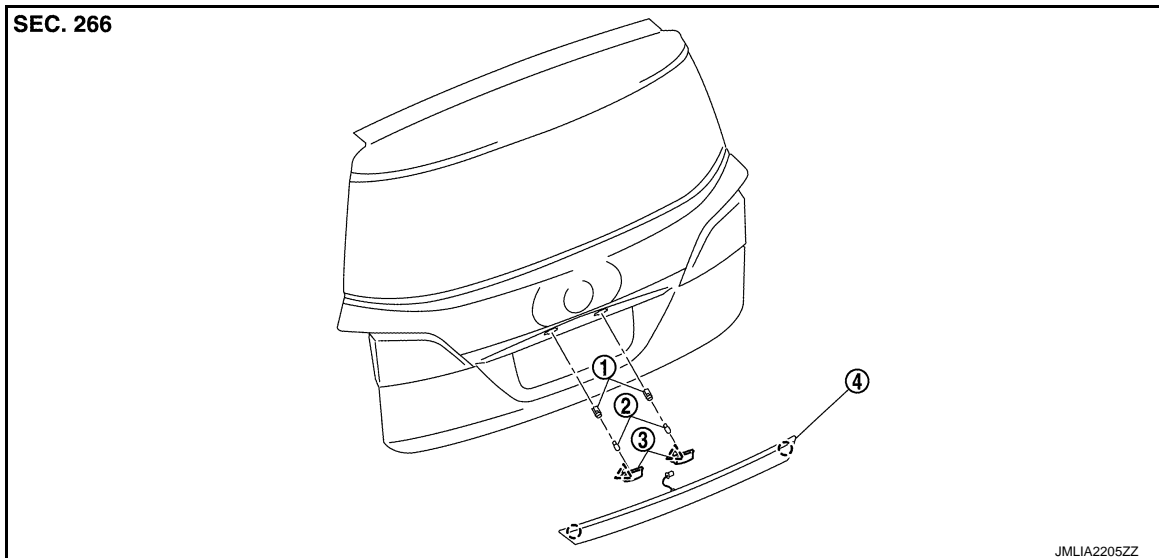

1. License plate lamp bulb socket
2. License plate lamp bulb
3. License plate lamp housing
4. Back door finisher

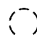 : Clip

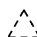 : Pawl

Removal and Installation

INFOID:000000009653213

CAUTION:
Disconnect the battery negative terminal or the fuse.

REMOVAL

1. Remove back door lower finisher. Refer to [EXT-47. "Removal and Installation"](#).
2. Disconnect license plate lamp connector.
3. Remove license plate lamp while pushing a resin clip, and then remove license plate lamp.

INSTALLATION

Install in the reverse order of removal.

Replacement

INFOID:000000009653214

CAUTION:

- Disconnect the battery negative terminal or the fuse.
- Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it.
- Never touch bulb by hand while it is lit or right after being turned off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.

LICENSE PLATE LAMP BULB

1. Remove back door lower finisher. Refer to [EXT-47. "Removal and Installation"](#).
2. Disconnect license plate lamp connector.
3. Rotate license plate lamp bulb socket counterclockwise and unlock it.
4. Remove license plate lamp bulb from license plate lamp bulb socket.

REFLEX REFLECTOR


< REMOVAL AND INSTALLATION >

[HALOGEN TYPE]


REFLEX REFLECTOR

Exploded View

INFOID:000000009653215

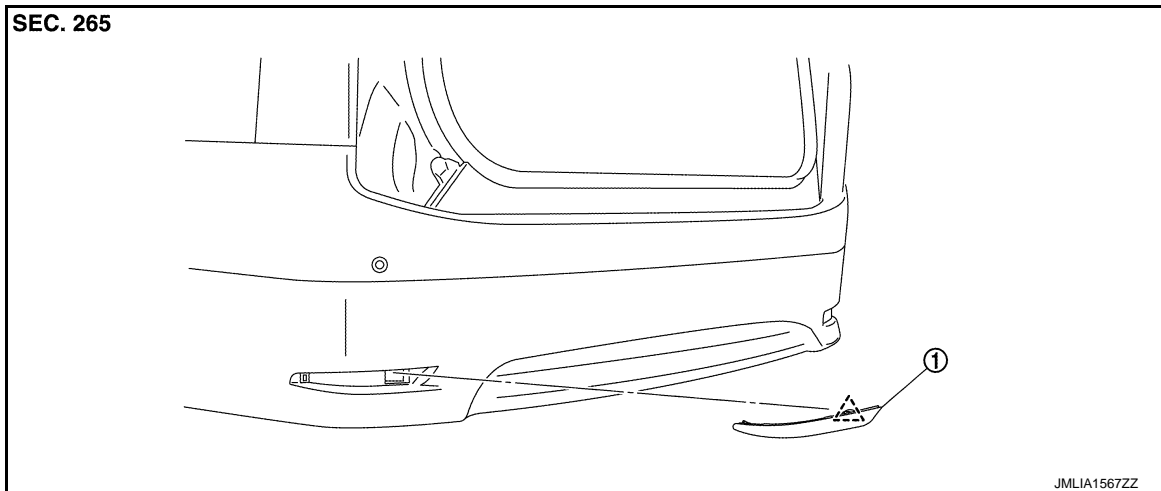

1. Reflex reflector

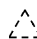
 : Pawl

Removal and Installation

INFOID:000000009653216

REMOVAL

1. Remove rear bumper fascia assembly. Refer to [EXT-16. "REAR BUMPER : Removal and Installation"](#).
2. Remove reflex reflector (1) fixing screws (A) (LH and RH), and then remove reflex reflector (LH and RH).

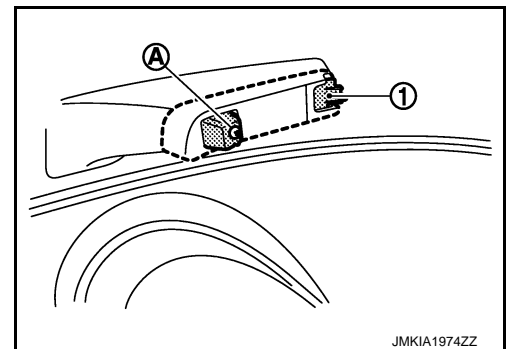

INSTALLATION

Install in the reverse order of removal.

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[HALOGEN TYPE]

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Bulb Specifications

INFOID:000000009653217

Item		Type	Wattage (W)
Front combination lamp	Headlamp (HI)	HB3 (Halogen)	60
	Headlamp (LO)	H11 (Halogen)	55
	Front turn signal lamp/ Parking lamp	S25	27/8
	Front side marker lamp.	W5W	5
Front fog lamp		H8	35
Side turn signal lamp (integrated into the door mirror)		LED	—
Rear combination lamp	Stop lamp/ Tail lamp (side marker lamp)	W21/5W	21/5
	Rear turn signal lamp	WY21W (Amber)	21
Back-up lamp		W16W	16
License plate lamp		W5W	5
High-mounted stop lamp		LED	—

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL