

A

SECTION STR

STR

STARTING SYSTEM

C

CONTENTS

D

E

PRECAUTION	2	Work Flow (Without GR8-1200 NI)	12	F
PRECAUTIONS	2	DTC/CIRCUIT DIAGNOSIS	14	
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	2	B TERMINAL CIRCUIT	14	G
Precautions for Removing Battery Terminal	2	Description	14	
PREPARATION	3	Diagnosis Procedure	14	H
PREPARATION	3	S CONNECTOR CIRCUIT	15	
Special Service Tools	3	Description	15	I
Commercial Service Tools	3	Diagnosis Procedure	15	
SYSTEM DESCRIPTION	4	SYMPTOM DIAGNOSIS	16	J
COMPONENT PARTS	4	STARTING SYSTEM	16	
Component Parts Location	4	Symptom Table	16	K
SYSTEM	5	REMOVAL AND INSTALLATION	17	L
System Description	5	STARTER MOTOR	17	
WIRING DIAGRAM	6	Exploded View	17	M
STARTING SYSTEM	6	Removal and Installation	18	
Wiring Diagram	6	SERVICE DATA AND SPECIFICATIONS (SDS)	20	N
BASIC INSPECTION	9	SERVICE DATA AND SPECIFICATIONS (SDS)	20	O
DIAGNOSIS AND REPAIR WORK FLOW	9	Starter Motor	20	P
Work Flow (With GR8-1200 NI)	9			

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000009650597

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precautions for Removing Battery Terminal

INFOID:000000009956681

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

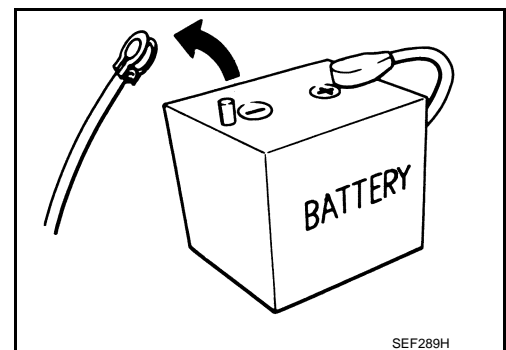

PREPARATION

< PREPARATION >

PREPARATION


PREPARATION

Special Service Tools

INFOID:000000009650598

A

STR

Tool number (Kent-Moore No.) Tool name	Description
<p>— (—) Model GR8-1200 NI Multitasking battery and electrical diagnostic station</p>  <p style="text-align: right;">AWI1A1239ZZ</p>	<p>Tests batteries, starting and charging systems and charges batteries. For operating instructions, refer to diagnostic station instruction manual.</p>


C

D

E

Commercial Service Tools

INFOID:000000009650599

Tool name	Description
<p>Power tool</p>  <p style="text-align: right;">PIIB1407E</p>	<p>Loosening bolts, nuts and screws</p>

F

G

H

I

J

K

L

M

N

O

P

COMPONENT PARTS


< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:000000009650600

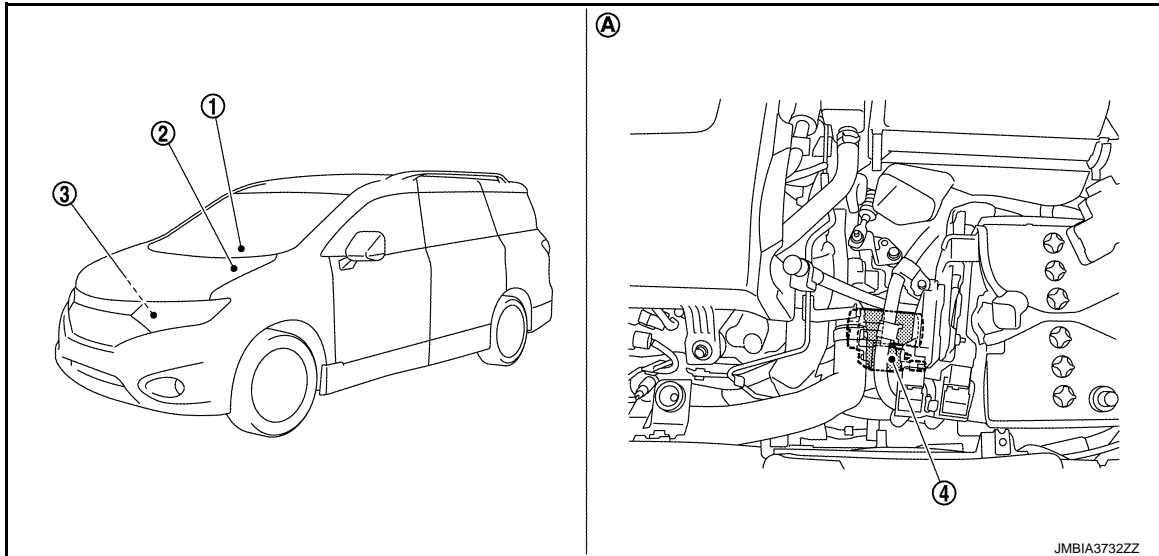

A. Engine room LH

No.	Component part	Description
1.	BCM	BCM controls the starter relay. Refer to BCS-4. "BODY CONTROL SYSTEM : Component Parts Location" .
2.	IPDM E/R	CPU inside IPDM E/R controls the starter control relay. Refer to PCS-4. "IPDM E/R : Component Parts Location" .
3.	TCM	TCM supplies power to the starter relay and starter control relay inside IPDM E/R when the selector lever is shifted to the P or N position. Refer to TM-10. "CVT CONTROL SYSTEM : Component Parts Location" .
4.	Starter motor	The starter motor plunger closes and the motor is supplied with battery power, which in turn cranks the engine, when the "S" terminal is supplied with electric power.

SYSTEM


< SYSTEM DESCRIPTION >

SYSTEM

System Description

INFOID:000000009650601

SYSTEM DIAGRAM

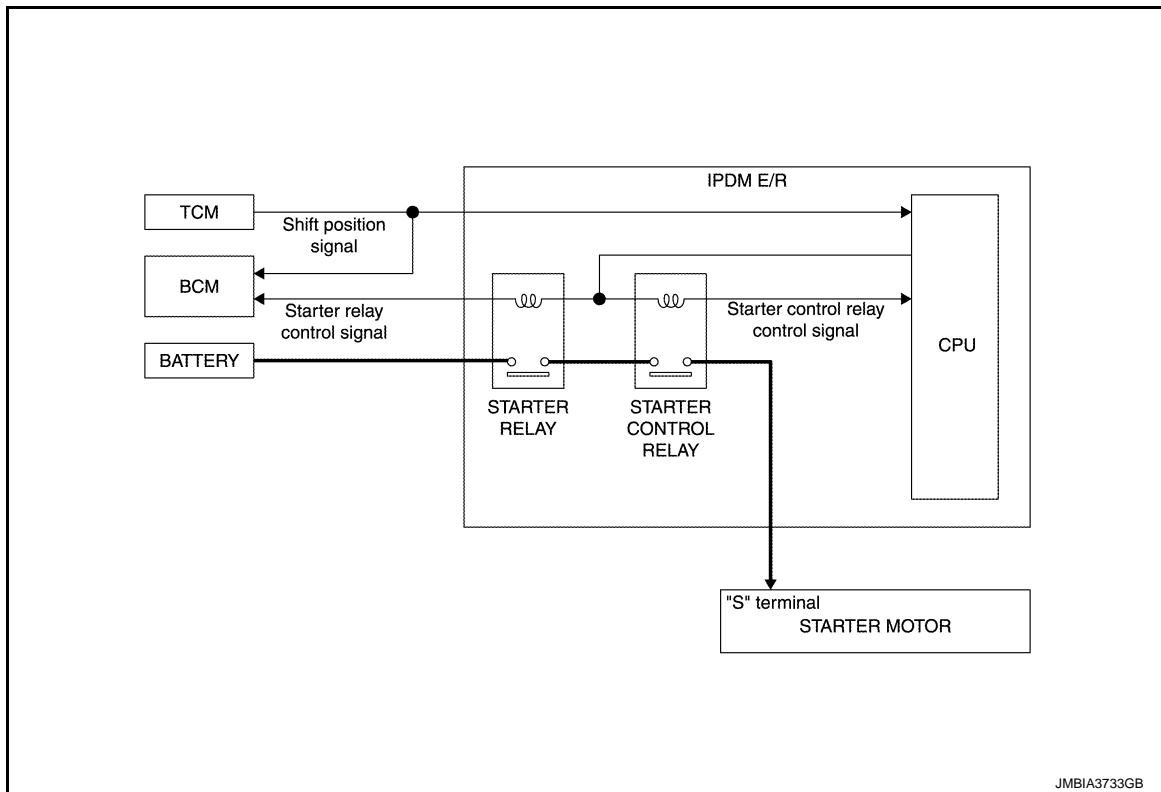

OUTLINE

- TCM transmits shift position signal to BCM and IPDM E/R, when selector lever is in the P or N position.
- IPDM E/R supplies power supply to starter relay and starter control relay, when shift position signal is received.
- When starter operating condition is satisfied, IPDM E/R turns starter control relay ON by starter control relay control signal.
- When engine cranking condition is satisfied, BCM turns starter relay ON by starter relay control signal.
- Then battery power is supplied to starter motor ("S" terminal) through starter control relay and starter relay.

STARTING SYSTEM

< WIRING DIAGRAM >


WIRING DIAGRAM

STARTING SYSTEM

Wiring Diagram

INFOID:000000009650602

STARTING SYSTEM

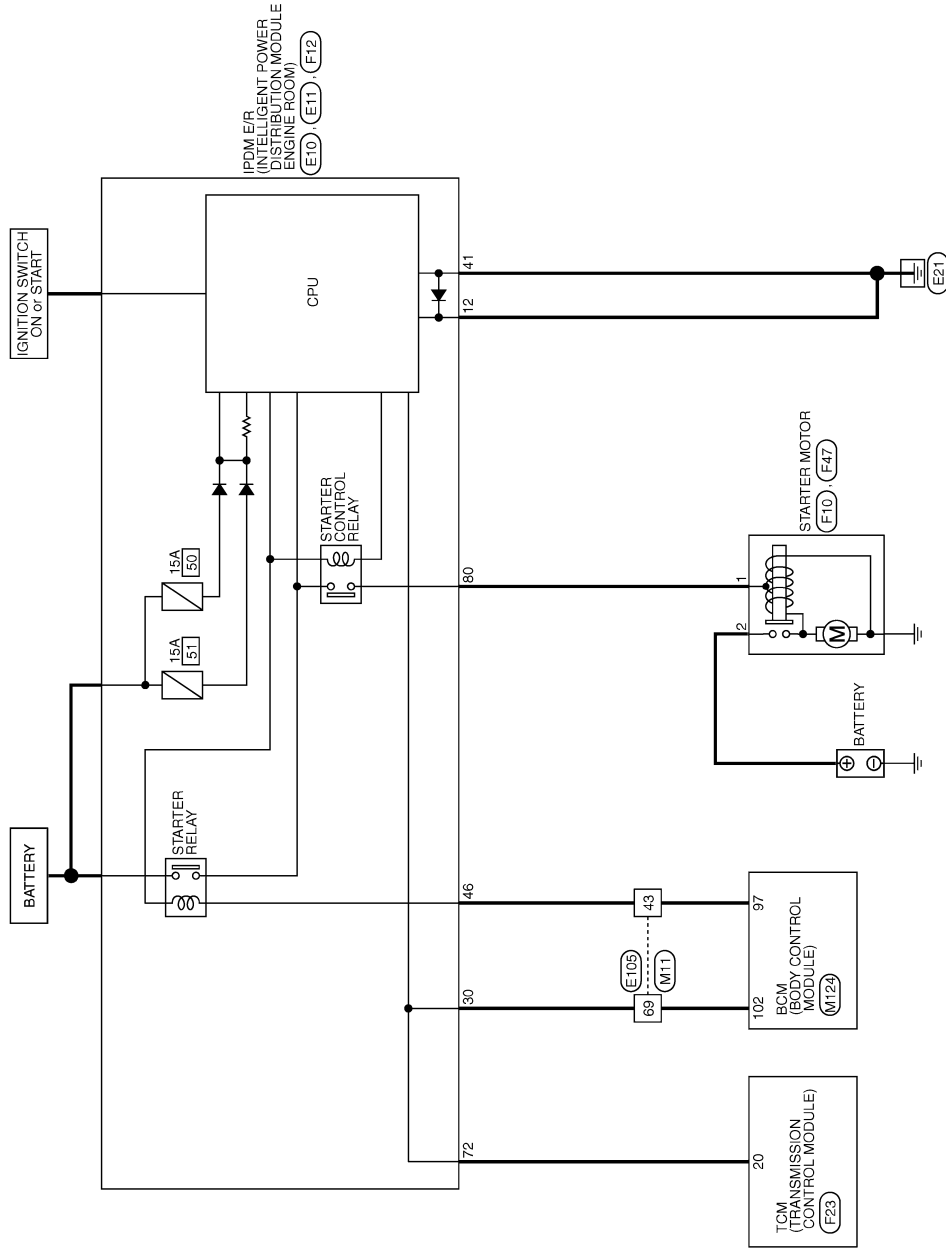

2010/12/13

JCBWA2061GB

STARTING SYSTEM

< WIRING DIAGRAM >

STARTING SYSTEM

Connector No.	E10
Connector Name	WIRE TO WIRE POWER DISTRIBUTION MODULE ENGINE
Connector Type	TH2DFW-CS12-1M-1V



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	
2	G	
3	B	
4	W	
5	Y	
6	O	
7	SHIELD	
8	P	
9	R	
10	L	
11	R	
12	R	
13	G	
14	W	
15	L	
16	R	
17	P	
18	V	
19	W	
20	W	
21	O	
22	SB	
23	GR	
24	GR	
25	LG	
26	GR	
27	BR	
28	G	
29	LG	
30	LG	
31	O	
32	P	
33	G	
34	P	
35	P	
36	G	
37	GR	

Connector No.	E11
Connector Name	WIRE TO WIRE POWER DISTRIBUTION MODULE ENGINE
Connector Type	TH3DFW-WH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	
2	P	
3	B	
4	W	
5	SB	
6	BR	
7	BR	
8	LG	
9	LG	
10	W	
11	Y	
12	O	
13	O	
14	SHIELD	
15	P	
16	G	
17	W/L	
18	W/R	
19	W	
20	SB	
21	LG	
22	L	
23	L	
24	GR	
25	Y	
26	SB	
27	G	
28	O	
29	SHIELD	
30	P	
31	G	
32	W/L	
33	W/R	
34	W	
35	SB	
36	LG	
37	L	
38	L	
39	GR	
40	Y	
41	SB	
42	O	
43	SHIELD	
44	P	
45	G	
46	W/L	
47	W/R	
48	W	
49	SB	
50	LG	
51	L	
52	L	
53	GR	
54	Y	
55	SB	
56	G	
57	Y	
58	SB	
59	G	
60	LG	
61	L	
62	L	
63	GR	
64	Y	
65	SB	
66	G	
67	O	
68	SHIELD	
69	P	
70	G	
71	W/L	
72	W/R	
73	W	
74	SB	
75	LG	
76	L	
77	L	
78	O	
79	O	
80	R	
81	L	
82	LG	
83	R	

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH70MW-CS10-M3




Terminal No.	Color Of Wire	Signal Name [Specification]
1	SHIELD	
2	W	
3	B	
4	R	
5	L	
6	LG	
7	GR	
8	SB	
9	SB	
10	BR	
11	Y	
12	O	

Connector No.	F10
Connector Name	STARTER MOTOR
Connector Type	TH440-JA06A



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	
2	G	

Connector No.	F12
Connector Name	WIRE TO WIRE POWER DISTRIBUTION MODULE ENGINE
Connector Type	TH2DFW-CS12-AM



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	
2	P	
3	GR	
4	R	
5	W	
6	BR	
7	BR	
8	G	
9	V	
10	P	
11	L	
12	LG	
13	O	
14	GR	
15	SB	
16	Y	
17	BR	
18	G	
19	B	
20	O	
21	Y	
22	SHIELD	
23	P	
24	G	
25	W/L	
26	W/R	
27	W	
28	SB	
29	LG	
30	L	
31	L	
32	GR	
33	Y	
34	SB	
35	Y	
36	G	
37	G	
38	R	
39	O	
40	R	
41	L	
42	LG	
43	O	
44	W	
45	R/B	
46	W	
47	LG	
48	R/B	
49	W	
50	Y/G	
51	LG	
52	Y/G	
53	R/W	
54	G/W	
55	W/L	
56	R/Y	
57	O	
58	Y	
59	W/B	
60	O	
61	O	
62	R/B	
63	LG	
64	LG	
65	GR	
66	GR	
67	B	
68	B	


A
STR
C
D
E
F
G
H
I
J
K
L
M
N
O
P

STARTING SYSTEM

< WIRING DIAGRAM >

STARTING SYSTEM

Connector No.	F23
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Type	TH46FW-R23-L-RH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P/B	TRANSMISSION RANGE SWITCH 2
2	P/L	TRANSMISSION RANGE SWITCH 3
3	G/O	TRANSMISSION RANGE SWITCH 4
4	GR	TRANSMISSION RANGE SWITCH 3 (MONITOR)
5	B	GROUND
7	W	SENSOR GROUND
8	G/W	ROM ASSY (SEL 2)
9	L/R	ROM ASSY (SEL 1)
10	BR/R	ROM ASSY (SEL 3)
11	BR/W	TRANSMISSION RANGE SWITCH 1
13	V	CVT FLUID TEMPERATURE SENSOR
14	R/W	PRIMARY PRESSURE SENSOR
15	V/W	SECONDARY PRESSURE SENSOR
19	G/B	BACK-UP LAMP RELAY
20	R/B	STARTER RELAY
28	W/R	SENSOR GROUND
29	R/O	SENSOR GROUND
27	R/O	SENSOR GROUND
23	R/O	STEP MOTOR C
26	O/B	STEP MOTOR B
30	G/R	STEP MOTOR A
31	P	CAN-L
32	L	CAN-H
33	LG	PRIMARY SPEED SENSOR
34	LG/R	SECONDARY SPEED SENSOR
37	V/R	LOCK-UP SELECT SOLENOID VALVE
38	L/W	TORQUE CONVERTER CLUTCH SOLENOID VALVE
39	W/B	SECONDARY PRESSURE SOLENOID VALVE
40	R/Y	LINE PRESSURE SOLENOID VALVE
42	B	GROUND
46	Y	IGNITION POWER SUPPLY
47	L/R	BATTERY POWER SUPPLY (MEMORY BACK-UP)
48	Y	IGNITION POWER SUPPLY

Connector No.	F47
Connector Name	STARTER MOTOR
Connector Type	X301FCY




Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	WIRE TO WIRE

Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	WIRE TO WIRE
2	SHIELD	
3	W	
4	R	
6	O	
7	G	
8	G	
9	B	
10	R	
11	W	
12	LG	
13	Y	
14	L	
15	P	
31	R	
32	V	
33	Y	
37	BR	
38	BR	

Terminal No.	Color Of Wire	Signal Name [Specification]
39	Y	
40	P	
41	L	
42	L	
43	W	
44	W	
45	LG	
46	V	
47	LG	
49	G	
51	SB	
52	GR	
53	B	
54	R	
55	L	
56	SHIELD	
61	BR	
62	LG	
63	W/L	
64	W/R	
66	O	
67	SB	
69	Y	
70	R	
71	R	
72	L	
73	R	
74	Y	
75	G	
76	V	
77	V	
78	W	
79	W	
80	R	
81	L	
82	G	
83	R	
84	Y	
85	BR	
86	LG	
87	V	
88	W	
89	B	
90	B	
91	SB	
92	G	
93	B	
96	BR	
97	W	
98	LG	
99	GR	
100	GR	
101	BR	
102	Y	
104	L	
105	GR	
106	O	
108	GR	

Connector No.	M24
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH46FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
73	Y	ON IND
75	SB	DR DOOR REQ SW
76	V	PUSH SW
78	P	DR DOOR ANT+
79	V	DR DOOR ANT-
80	R	PASS DOOR ANT+
81	L	PASS DOOR ANT-
82	G	REAR BLMFR ANT+
83	R	REAR BLMFR ANT-
84	Y	ROOM ANT+
85	BR	ROOM ANT-
86	LG	ROOM ANT2+
87	V	ROOM ANT2-
88	W	LAGGAGE ROOM ANT+
89	B	LAGGAGE ROOM ANT-
90	B	PUSH-BTN IGN SHIELD PWR SPLY
91	SB	LOCK SW L/L GND
92	G	PUSH-BTN IGN SHIELD PWR SPLY
93	B	BL-KEY WARN BUZZER
96	BR	ACC RELAY CONT OUTPUT
97	W	STARTER RELAY CONT
98	LG	IGN RELAY (F/B) CONT
99	GR	IGN RELAY (F/B) CONT OUTPUT
100	GR	PASS DOOR REQ SW
101	BR	IGN PWR SPLY 2
102	Y	P/N POSITION
104	L	CVT SHIFT SELECT PWR SPLY
105	GR	STOP LAMP SW 2
106	O	BLWR RELAY CONT OUTPUT
108	GR	ACC IND

JRBWC3948GB

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow (With GR8-1200 NI)

INFOID:0000000009650603

A

STR

STARTING SYSTEM DIAGNOSIS WITH GR8-1200 NI

To test the starting system, use the following special service tool:

- GR8-1200 NI Multitasking battery and electrical diagnostic station

NOTE:

Refer to the diagnostic station Instruction Manual for proper starting system diagnosis procedures.

C

D

E

F

G

H

I

J

K

L

M

N


O

P

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

OVERALL SEQUENCE

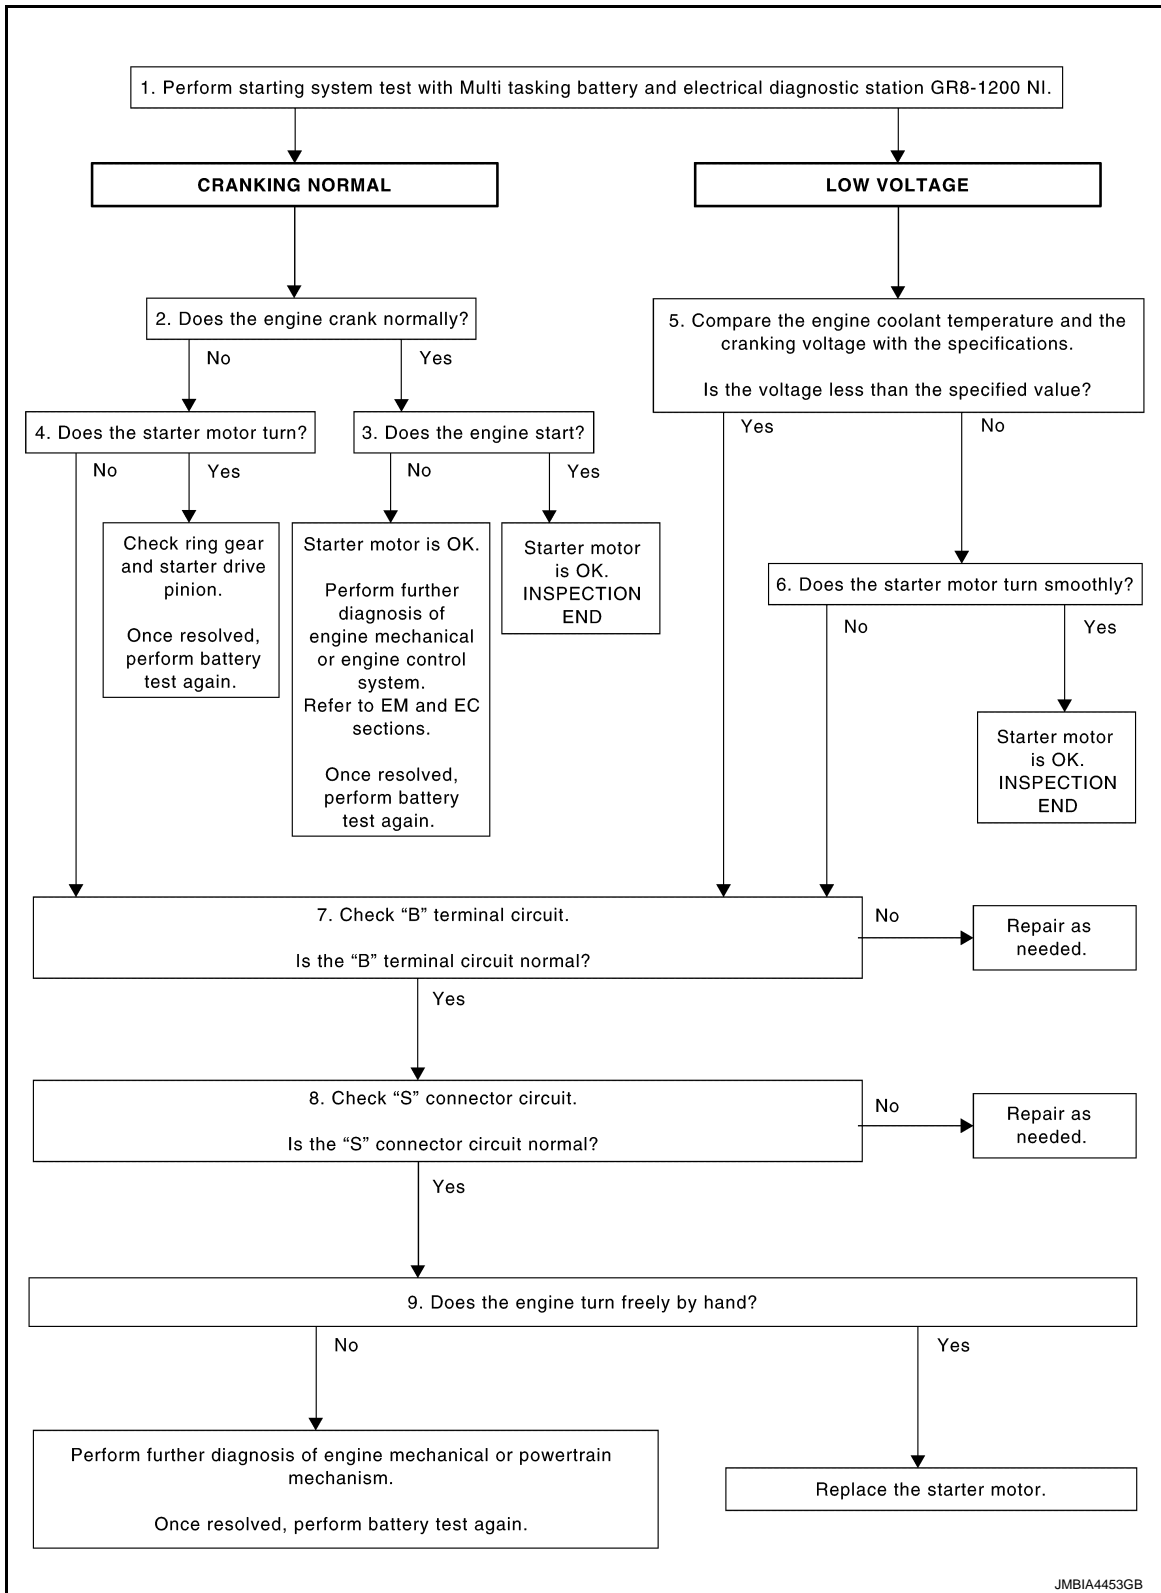

DETAILED FLOW

NOTE:

To ensure a complete and thorough diagnosis, the battery, starter motor and alternator test segments must be done as a set from start to finish.

1. DIAGNOSIS WITH MULTITASKING BATTERY AND ELECTRICAL DIAGNOSTIC STATION GR8-1200 NI

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

Perform the starting system test with Multitasking battery and electrical diagnostic station GR8-1200 NI. For details and operating instructions, refer to diagnostic station Instruction Manual.

Test result

CRANKING NORMAL>>GO TO 2.

LOW VOLTAGE>>GO TO 5.

CHARGE BATTERY>>Perform the slow battery charging procedure. (Initial rate of charge is 10A for 12 hours.) Perform battery test again. Refer to diagnostic station instruction manual.

REPLACE BATTERY>>Before replacing battery, clean the battery cable clamps and battery posts. Perform battery test again. Refer to diagnostic station instruction manual. If second test result is "REPLACE BATTERY", then do so. Perform battery test again to confirm repair.

2. CRANKING CHECK

Check that the starter motor operates correctly.

Does the engine crank normally?

YES >> GO TO 3.

NO >> GO TO 4.

3. ENGINE START CHECK

Check that the engine starts.

Does the engine start?

YES >> Starter motor is OK. INSPECTION END

NO >> Perform further diagnosis of engine mechanical or engine control system. Refer EM and EC sections. Once resolved, perform battery test again.

4. STARTER MOTOR ACTIVATION

Check that the starter motor operates.

Does the starter motor turn?

YES >> Check ring gear and starter motor drive pinion. Once resolved, perform battery test again.

NO >> GO TO 7.

5. COMPARISON BETWEEN ENGINE COOLANT AND CRANKING VOLTAGE

Compare the engine coolant temperature and the cranking voltage with the specifications.

Minimum Specification of Cranking Voltage Referencing Coolant Temperature

Engine coolant temperature [°C (°F)]	Voltage [V]
-30 to -20 (-22 to -4)	8.6
-19 to -10 (-2 to 14)	9.1
-9 to 0 (16 to 32)	9.5
More than 1 (More than 34)	9.9

Is the voltage less than the specified value?

YES >> GO TO 7.

NO >> GO TO 6.

6. STARTER OPERATION

Check the starter operation status.

Does the starter motor turn smoothly?

YES >> Starter motor is OK. INSPECTION END

NO >> GO TO 7.

7. "B" TERMINAL CIRCUIT INSPECTION

Check "B" terminal circuit. Refer to [STR-14, "Diagnosis Procedure"](#).

Is "B" terminal circuit normal?

YES >> GO TO 8.

NO >> Repair as needed.

8. "S" CONNECTOR CIRCUIT INSPECTION

Check "S" connector circuit. Refer to [STR-15, "Diagnosis Procedure"](#).

A

STR

C

D

E

F

G

H

I

J

K

L

M

N

O

P

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

Is "S" connector circuit normal?

- YES >> GO TO 9.
- NO >> Repair as needed.

9. ENGINE ROTATION STATUS

Check that the engine can be rotated by hand.


Does the engine turn freely by hand?

- YES >> Replace starter motor. Refer to [STR-18. "Removal and Installation"](#).
- NO >> Perform further diagnosis of engine mechanical or powertrain mechanism. Once resolved, perform battery test again using Multitasking battery and electrical diagnostic station GR8-1200 NI. Refer to the diagnostic station Instruction Manual for proper testing procedures.

Work Flow (Without GR8-1200 NI)

INFOID:000000009650604

OVERALL SEQUENCE

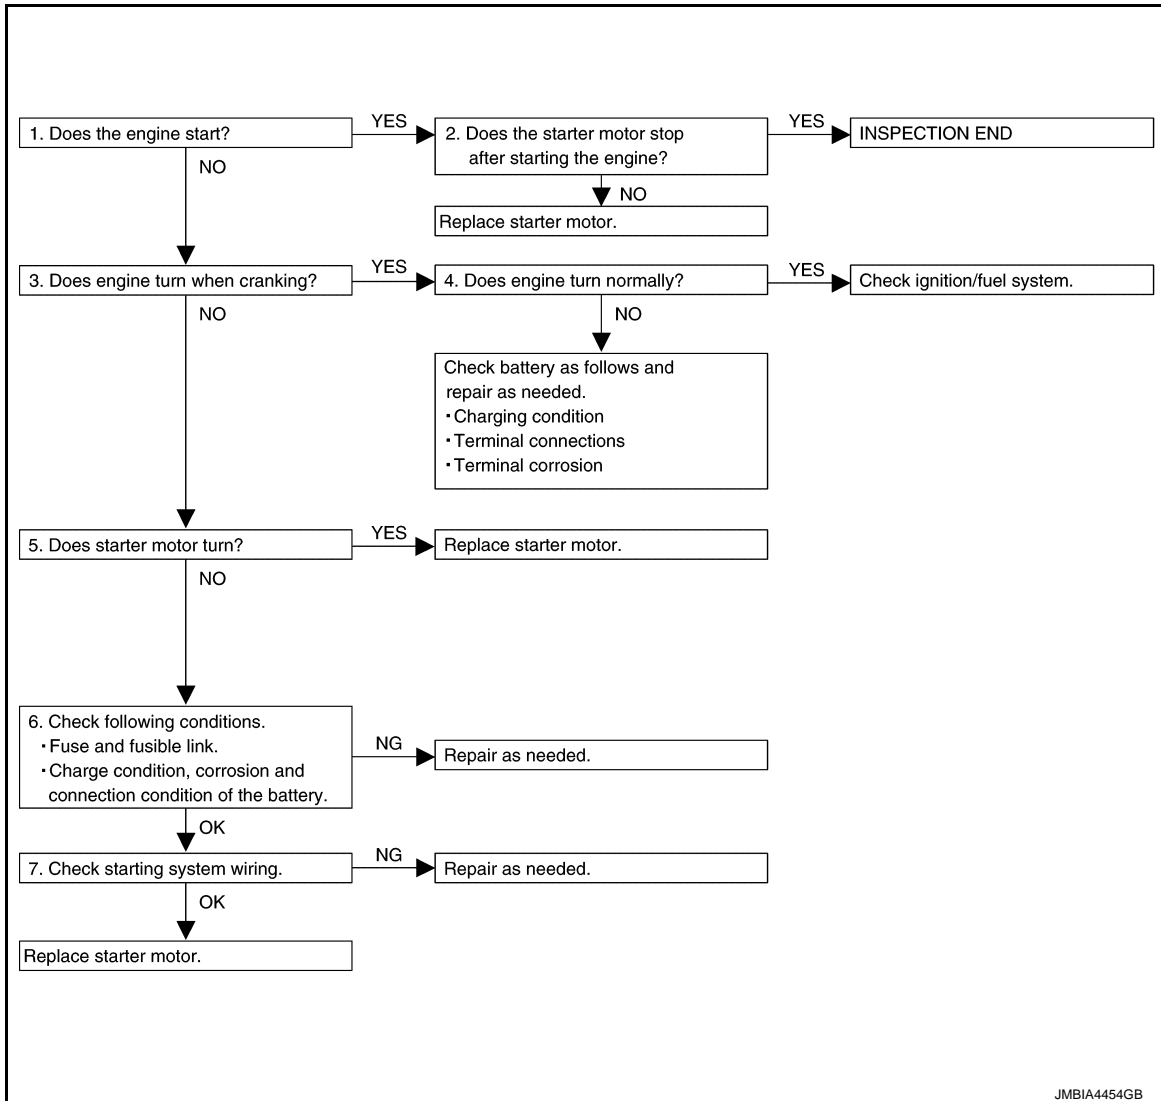

DETAILED FLOW

NOTE:

If any malfunction is found, immediately disconnect the battery cable from the negative terminal.

1. CHECK ENGINE START

Crank the engine and check that the engine starts.

Does the engine start?

- YES >> GO TO 2.

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

NO >> GO TO 3.

2.CHECK THAT THE STARTER MOTOR STOPS

Check that the starter motor stops after starting the engine.

Does the starter motor stop?

YES >> INSPECTION END

NO >> Replace starter motor. Refer to [STR-18. "Removal and Installation"](#).

3.CHECK THAT THE ENGINE TURNS WHEN CRANKING

Check that the engine turns when cranking.

Does engine turn when cranking?

YES >> GO TO 4.

NO >> GO TO 5.

4.CHECK THE ENGINE SPEED WHEN CRANKING

Check that the engine speed is not low when cranking.

Does engine turn normally?

YES >> Check ignition/fuel system.

NO >> Check charge condition, corrosion and connection condition of the battery. Refer to [PG-97. "Work Flow"](#).

5.CHECK STARTER MOTOR ACTIVATION

Check that the starter motor runs at cranking.

Does starter motor turn?

YES >> Replace starter motor. Refer to [STR-18. "Removal and Installation"](#).

NO >> GO TO 6.

6.CHECK POWER SUPPLY CIRCUIT

Check the following conditions.

- Fuse and fusible link
- Charge condition, corrosion and connection condition of the battery. Refer to [PG-97. "Work Flow"](#).

Are these inspection results normal?

YES >> GO TO 7.

NO >> Repair as needed.

7.CHECK STARTING SYSTEM WIRING

Check the following.

- "B" terminal circuit. Refer to [STR-14. "Diagnosis Procedure"](#).
- "S" connector circuit. Refer to [STR-15. "Diagnosis Procedure"](#).

Are these inspection results normal?

YES >> Replace starter motor. Refer to [STR-18. "Removal and Installation"](#).

NO >> Repair as needed.

A

STR

C

D

E

F

G

H

I

J

K

L

M

N

O

P

B TERMINAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

B TERMINAL CIRCUIT

Description

INFOID:000000009650605

The "B" terminal is constantly supplied with battery power.

Diagnosis Procedure

INFOID:000000009650606

CAUTION:

Perform diagnosis under the condition that engine cannot start by the following procedure.

1. Remove fuel pump fuse.
2. Crank or start the engine (where possible) until the fuel pressure is released.

1. CHECK "B" TERMINAL CIRCUIT

1. Turn ignition switch OFF.
2. Check that starter motor "B" terminal connection is clean and tight.
3. Check voltage between starter motor "B" terminal and ground.

Terminals			Voltage (Approx.)
(+)	(-)		
Starter motor "B" terminal	Terminal		Battery voltage
F10	2		
		Ground	

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check harness between battery and starter motor for open circuit.

2. CHECK BATTERY CABLE CONNECTION STATUS (VOLTAGE DROP TEST)

1. Shift selector lever to "P" or "N" position.
2. Check voltage between battery positive terminal and starter motor "B" terminal.

Terminals			Condition	Voltage (Approx.)
(+)	(-)			
	Starter motor "B" terminal	Terminal	When the ignition switch is in START position	Less than 0.5 V
Battery positive terminal	F10	2		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check harness between the battery and the starter motor for poor continuity.

3. CHECK GROUND CIRCUIT STATUS (VOLTAGE DROP TEST)

1. Shift selector lever to "P" or "N" position.
2. Check voltage between starter motor case and battery negative terminal.

Terminals		Condition	Voltage (Approx.)
(+)	(-)		
Starter motor case	Battery negative terminal	When the ignition switch is in START position	Less than 0.2 V

Is the inspection result normal?

YES >> "B" terminal circuit is OK. Further inspection is necessary. Refer to [STR-9, "Work Flow \(With GR8-1200 NI\)"](#) or [STR-12, "Work Flow \(Without GR8-1200 NI\)"](#).

NO >> Check the starter motor case and ground for poor continuity.

S CONNECTOR CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

S CONNECTOR CIRCUIT

Description

INFOID:000000009650607

The starter motor magnetic switch is supplied with power when the ignition switch is turned to the START position while the selector lever is in the P or N position.

STR

Diagnosis Procedure

INFOID:000000009650608

CAUTION:

Perform diagnosis under the condition that engine cannot start by the following procedure.

1. Remove fuel pump fuse.
2. Crank or start the engine (where possible) until the fuel pressure is released.

1. CHECK "S" CONNECTOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect starter motor connector.
3. Shift selector lever to "P" or "N" position.
4. Check voltage between starter motor harness connector and ground.

terminals		(-)	Condition	Voltage (Approx.)
(+)	Terminal			
Starter motor harness connector				
F47	1	Ground	When the ignition switch is in START position	Battery voltage

Is the inspection result normal?

YES >> "S" connector circuit is OK. Further inspection is necessary. Refer to [STR-9. "Work Flow \(With GR8-1200 NI\)"](#) or [STR-12. "Work Flow \(Without GR8-1200 NI\)"](#).

NO >> GO TO 2.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect IPDM E/R connector.
2. Check continuity between starter motor harness connector and IPDM E/R harness connector.

Starter motor harness connector		IPDM E/R harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
F47	1	F12	80	Existed

Is the inspection result normal?

YES >> Further inspection is necessary. Refer to [STR-9. "Work Flow \(With GR8-1200 NI\)"](#) or [STR-12. "Work Flow \(Without GR8-1200 NI\)"](#).

NO >> Repair the harness.

STARTING SYSTEM

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

STARTING SYSTEM

Symptom Table

INFOID:000000009650609

Symptom	Reference
No normal cranking	Refer to STR-9, "Work Flow (With GR8-1200 NI)" or STR-12, "Work Flow (Without GR8-1200 NI)" .
Starter motor does not rotate	

STARTER MOTOR

< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION

STARTER MOTOR


Exploded View

INFOID:000000009650610

A

STR

REMOVAL

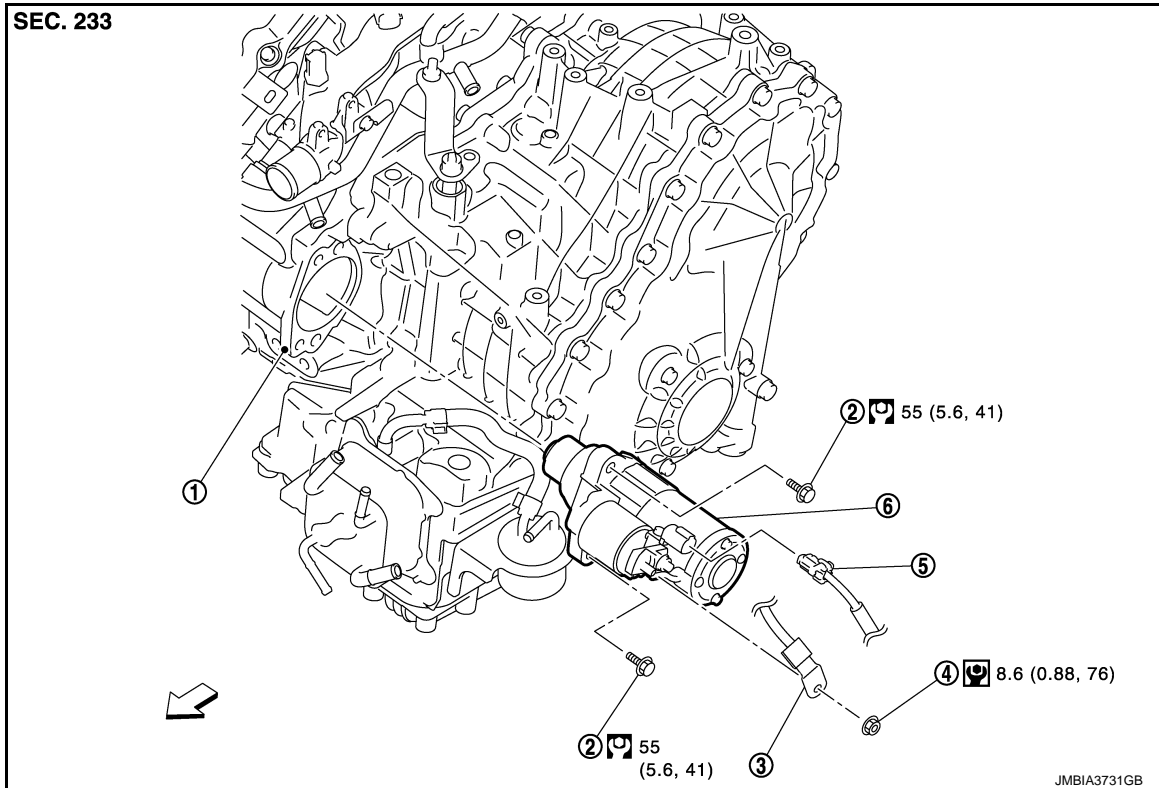

- | | | |
|-----------------------------|-----------------------------------|-------------------------|
| 1. Converter housing | 2. Starter motor mounting bolt | 3. "B" terminal harness |
| 4. "B" terminal harness nut | 5. "S" terminal harness connector | 6. Starter motor |

← : Vehicle front

: N·m (kg·m, in·lb)

: N·m (kg·m, ft·lb)

DISASSEMBLY

C

D

E

F

G

H

I

J

K

L

M

N


O

P


STARTER MOTOR

< REMOVAL AND INSTALLATION >

Type: M000TA0073

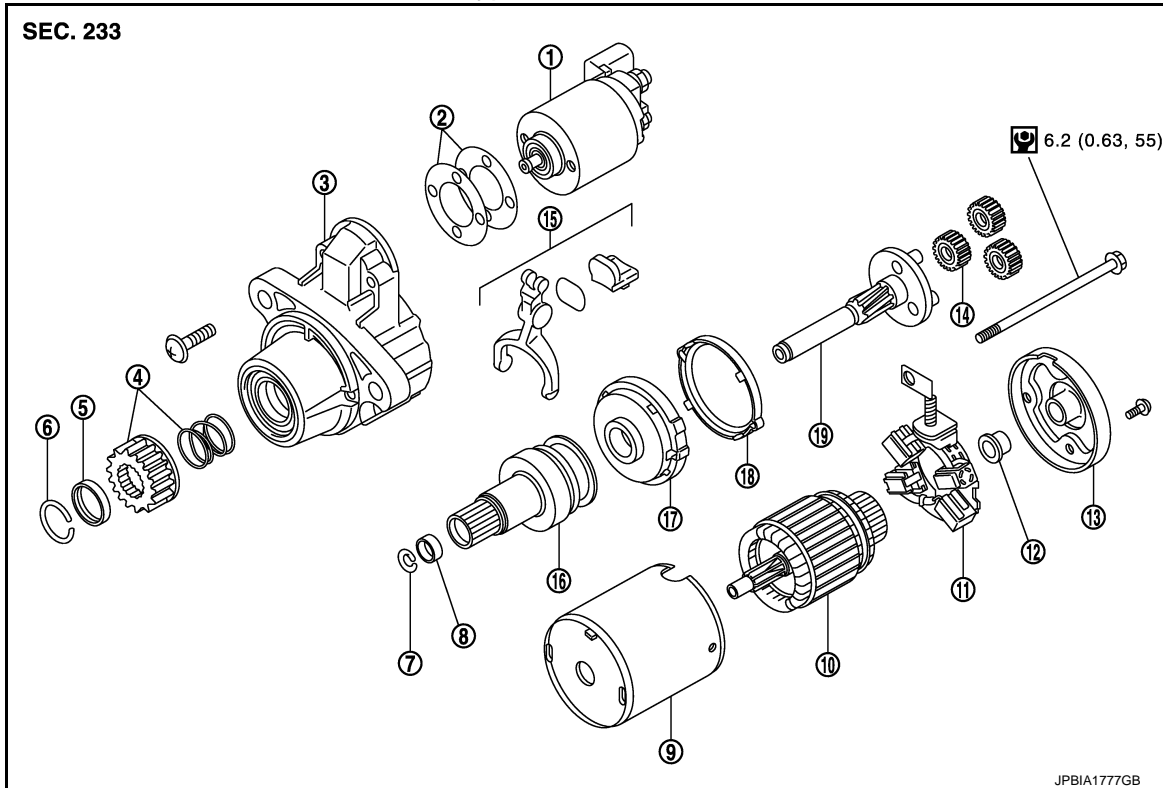

- | | | |
|-----------------------------|---------------------------|-----------------------|
| 1. Magnetic switch assembly | 2. Dust cover kit | 3. Gear case assembly |
| 4. Pinion assembly | 5. Stopper | 6. Ring |
| 7. Ring | 8. Stopper | 9. Yoke assembly |
| 10. Armature assembly | 11. Brush holder assembly | 12. Metal |
| 13. Rear cover | 14. Gear assembly | 15. Shift lever set |
| 16. Clutch gear assembly | 17. Center bracket | 18. Packing |
| 19. Gear shaft | | |

 : N·m (kg-m, in-lb)

NOTE:

Apply high-temperature grease to lubricate the bearing, gears and frictional surface when assembling the starter.


Removal and Installation

INFOID:000000009650611

REMOVAL

1. Remove battery. Refer to [PG-105, "Removal and Installation"](#).
2. Remove air duct (inlet) and air cleaner assembly. Refer to [EM-26, "Removal and Installation"](#).
3. Disconnect TCM harness connector (1) and ECM harness connectors (2).

 : Vehicle front

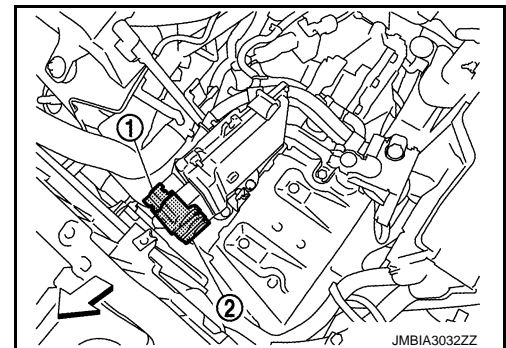


STARTER MOTOR

< REMOVAL AND INSTALLATION >


4. Remove harness fixing clips (A) and harness mounting bolt (B).

↩ : Vehicle front

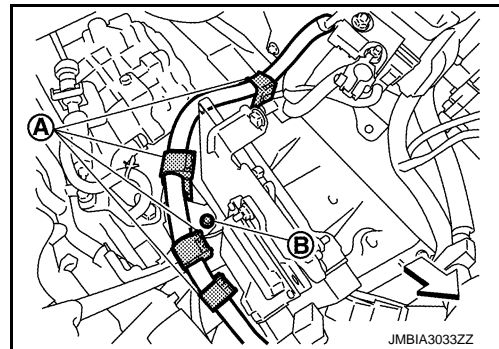


5. Remove ECM bracket mounting bolts (A), and then remove ECM bracket (1).

↩ : Vehicle front

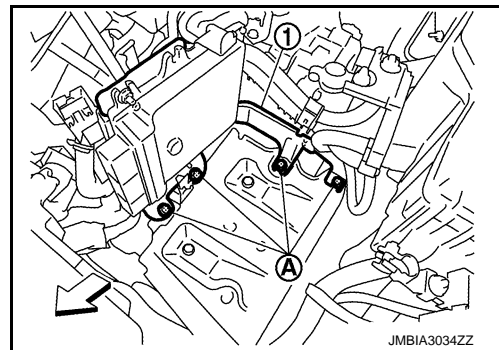

6. Remove battery tray mounting bolts (A), and then remove battery tray (1).

↩ : Vehicle front

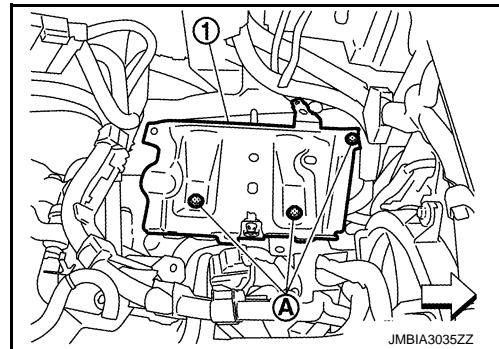

7. Disconnect "S" terminal harness connector
8. Remove "B" terminal harness nut, and then disconnect "B" terminal harness.
9. Remove splash guard LH. Refer to [EXT-23, "Removal and Installation"](#).
10. Remove starter motor mounting bolts from the left side of the vehicle and the engine room.
11. Remove starter motor from the vehicle

INSTALLATION

Note the following items, and install in the reverse order of removal.

CAUTION:

- Be careful to tighten "B" terminal nut to the specified torque.
- To prevent damage to the parts, connect the battery cable to the positive terminal first.
- To prevent damage to the vehicle, after connecting battery cables, ensure that they are tightly clamped to battery terminals for good contact.
- To prevent damage to the parts, check battery terminal for poor connection caused by corrosion.

NOTE:

Reset electronic systems as necessary. Refer to [GI-58, "ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Required Procedure After Battery Disconnection"](#).

A

STR

C

D

E

F

G

H

I

J

K

L

M

N

O

P

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Starter Motor

INFOID:000000009650612

Type		M000TA0073
		MITSUBISHI make
		Reduction gear type
System voltage		[V] 12
No-load	Terminal voltage	[V] 11
	Current	[A] Less than 90
	Revolution	[rpm] More than 2,400