

SECTION **WCS**

WARNING CHIME SYSTEM

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

CONTENTS

<p>PRECAUTION 3</p> <p>PRECAUTIONS 3</p> <p style="padding-left: 20px;">Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"3</p> <p style="padding-left: 20px;">Precautions for Removing Battery Terminal3</p> <p>SYSTEM DESCRIPTION 4</p> <p>COMPONENT PARTS 4</p> <p style="padding-left: 20px;">Component Parts Location4</p> <p style="padding-left: 20px;">Combination Meter4</p> <p>SYSTEM 5</p> <p>WARNING CHIME SYSTEM5</p> <p style="padding-left: 20px;">WARNING CHIME SYSTEM : System Description5</p> <p style="padding-left: 20px;">WARNING CHIME SYSTEM : Circuit Diagram7</p> <p style="padding-left: 20px;">WARNING CHIME SYSTEM : Fail-Safe7</p> <p>LIGHT REMINDER WARNING CHIME8</p> <p style="padding-left: 20px;">LIGHT REMINDER WARNING CHIME : System Description8</p> <p>FRONT FOG LIGHT REMINDER WARNING CHIME9</p> <p style="padding-left: 20px;">FRONT FOG LIGHT REMINDER WARNING CHIME : System Description9</p> <p>SEAT BELT WARNING CHIME10</p> <p style="padding-left: 20px;">SEAT BELT WARNING CHIME : System Description10</p> <p>PARKING BRAKE RELEASE WARNING CHIME.....11</p> <p style="padding-left: 20px;">PARKING BRAKE RELEASE WARNING CHIME : System Description11</p> <p>DIAGNOSIS SYSTEM (COMBINATION METER)14</p> <p style="padding-left: 20px;">CONSULT Function14</p>	<p>DIAGNOSIS SYSTEM (BCM)18</p> <p>COMMON ITEM18</p> <p style="padding-left: 20px;">COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)18</p> <p>BUZZER19</p> <p style="padding-left: 20px;">BUZZER : CONSULT Function (BCM - BUZZER)...20</p> <p>ECU DIAGNOSIS INFORMATION21</p> <p>COMBINATION METER21</p> <p style="padding-left: 20px;">Reference Value21</p> <p style="padding-left: 20px;">Fail-Safe28</p> <p style="padding-left: 20px;">DTC Index29</p> <p>BCM30</p> <p style="padding-left: 20px;">List of ECU Reference30</p> <p>WIRING DIAGRAM31</p> <p>WARNING CHIME SYSTEM31</p> <p style="padding-left: 20px;">Wiring Diagram31</p> <p>BASIC INSPECTION37</p> <p>DIAGNOSIS AND REPAIR WORKFLOW37</p> <p style="padding-left: 20px;">Work Flow37</p> <p>DTC/CIRCUIT DIAGNOSIS39</p> <p>POWER SUPPLY AND GROUND CIRCUIT39</p> <p>COMBINATION METER39</p> <p style="padding-left: 20px;">COMBINATION METER : Diagnosis Procedure39</p> <p>METER BUZZER CIRCUIT40</p> <p style="padding-left: 20px;">Component Function Check40</p> <p style="padding-left: 20px;">Diagnosis Procedure40</p> <p>SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT41</p> <p style="padding-left: 20px;">Component Function Check41</p> <p style="padding-left: 20px;">Diagnosis Procedure41</p>
--	---

WCS

Component Inspection	42	THE PARKING BRAKE RELEASE WARNING CONTINUES SOUNDING, OR DOES NOT SOUND	45
PARKING BRAKE SWITCH SIGNAL CIRCUIT	43	Description	45
Diagnosis Procedure	43	Diagnosis Procedure	45
Component Inspection	43	THE SEAT BELT WARNING CONTINUES SOUNDING, OR DOES NOT SOUND	46
SYMPTOM DIAGNOSIS	44	Description	46
THE LIGHT REMINDER WARNING DOES NOT SOUND	44	Diagnosis Procedure	46
Description	44		
Diagnosis Procedure	44		

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000009650439

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precautions for Removing Battery Terminal

INFOID:000000009864180

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

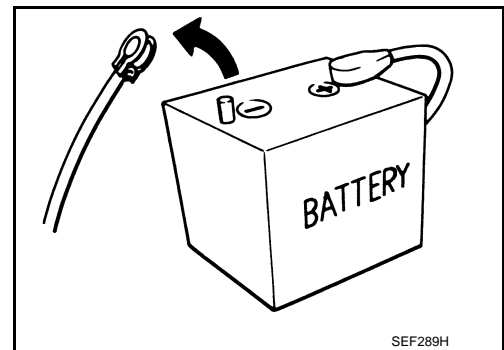

A
B
C
D
E
F
G
H
I
J
K
L
M
WCS
O
P

COMPONENT PARTS


< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:000000009650440

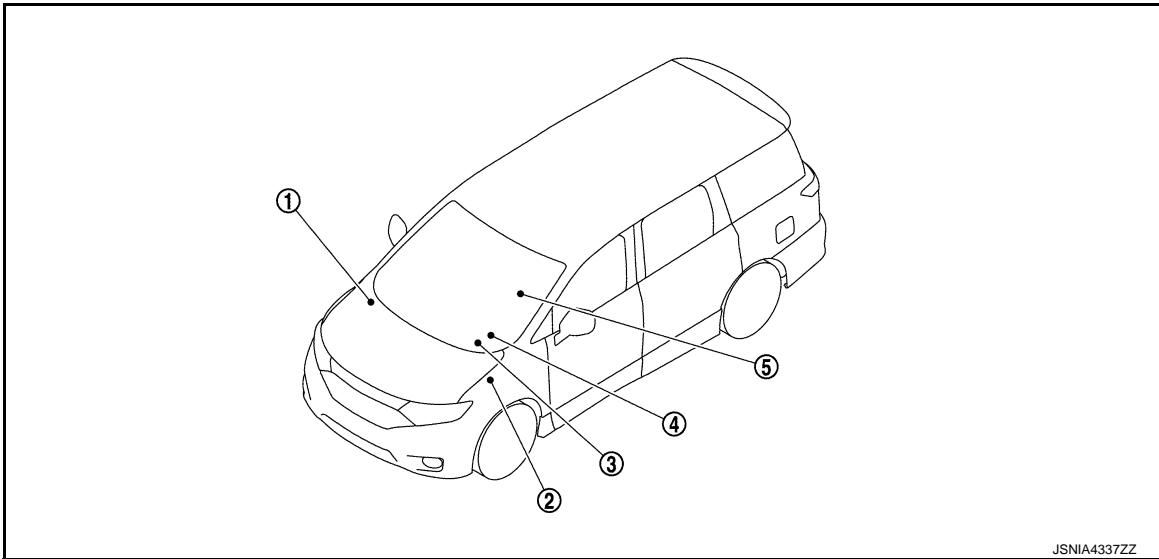


JSNIA4337ZZ

	Component	Function
1.	ABS actuator and electric unit (control unit)	Transmits the vehicle speed signal to the combination meter via CAN communication. Refer to BRC-9, "Component Parts Location" for detailed installation location.
2.	Parking brake switch	Transmits the parking brake switch signal to the combination meter.
3.	BCM	Based on the signals received from various units and switches, transmits the buzzer output signal to the combination meter via CAN communication. Refer to BCS-4, "BODY CONTROL SYSTEM : Component Parts Location" for detailed installation location.
4.	Combination meter	<ul style="list-style-type: none"> Receives a buzzer output signal from the BCM with CAN communication line and sounds the buzzer. Judges whether the parking brake is released from the vehicle speed signal received from the ABS actuator and electric unit (control unit) with CAN communication line and the parking brake switch signal from the parking brake switch, and sounds the buzzer if necessary.
5.	Seat belt buckle switch (driver side)	Transmits the seat belt buckle switch signal (driver side) to the combination meter.

Combination Meter

INFOID:000000009650441

The buzzer (1) for the warning chime system is integrated in the combination meter.

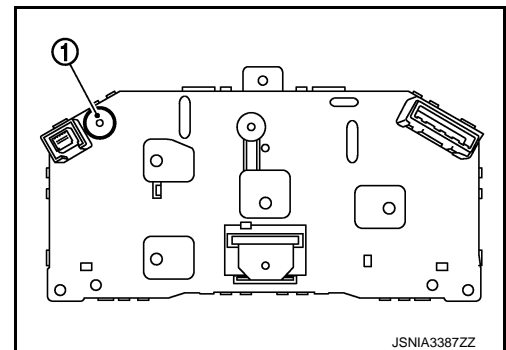

JSNIA3387ZZ

SYSTEM

< SYSTEM DESCRIPTION >


SYSTEM

WARNING CHIME SYSTEM

WARNING CHIME SYSTEM : System Description

INFOID:000000009650442

SYSTEM DIAGRAM

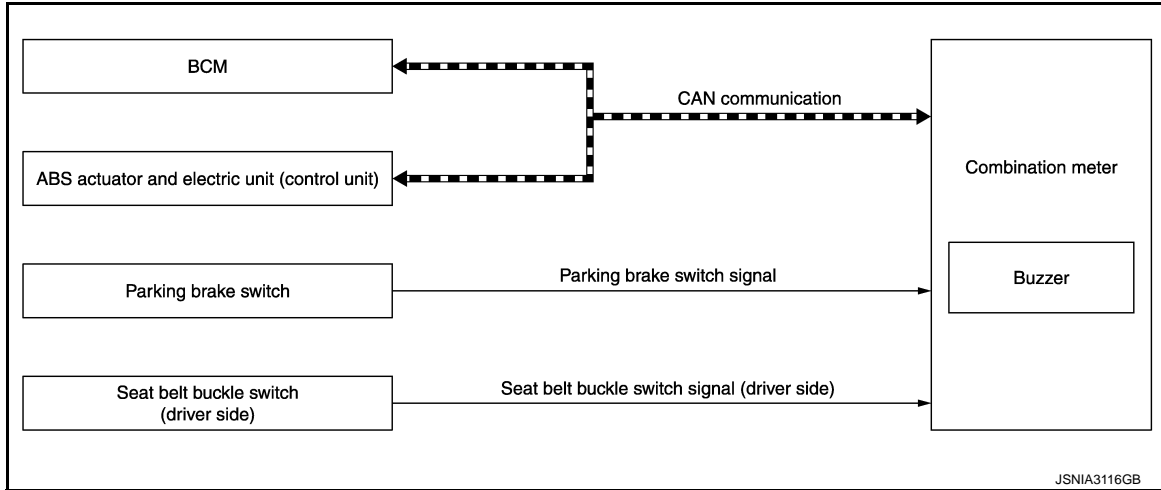

COMBINATION METER INPUT/OUTPUT SIGNAL (CAN COMMUNICATION SIGNAL)

Input signal

Signal name	Transmit unit
Vehicle speed signal	ABS actuator and electric unit (control unit)
Buzzer output signal	BCM

Output signal

Signal name	Reception unit
Vehicle speed signal	BCM

BCM INPUT/OUTPUT SIGNAL (CAN COMMUNICATION SIGNAL)

Input signal

Signal name	Transmit unit
Vehicle speed signal	Combination meter

Output signal

Signal name	Reception unit
Buzzer output signal	Combination meter

COMBINATION METER

The combination meter sounds the alarm buzzer installed in the combination meter when receiving the buzzer output signal transmitted from each unit.

BCM

BCM receives signals from various units and transmits a buzzer output signal to the combination meter via CAN communication if it judges that the warning buzzer should be activated.

WARNING CHIME FUNCTION LIST

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

WCS

SYSTEM

< SYSTEM DESCRIPTION >


Warning functions	Out line	Warning judgment unit	Refer to
Light reminder warning chime	The warning chime sounds when the ignition switch is in OFF or ACC position with the combination switch (lighting switch) in the 1st or 2nd position and the driver side door open.	BCM	WCS-8. "LIGHT RE-MINDER WARNING CHIME : System Description"
Front fog light reminder warning chime	The warning chime sounds when the ignition switch is turned to LOCK, OFF or ACC position from ON position, with combination switch (lighting switch) is in AUTO position and the front fog lamp switch in ON position.	BCM	WCS-9. "FRONT FOG LIGHT RE-MINDER WARNING CHIME : System Description"
Seat belt warning chime	The warning chime sounds when the driver seat belt is unfastened with the ignition switch in ON position.	BCM	WCS-10. "SEAT BELT WARNING CHIME : System Description"
Parking brake release warning chime	The warning chime sounds when the ignition switch is in ON position with the parking brake in operation and the vehicle speed 7 km/h (4.3 MPH) or more.	Combination meter	WCS-11. "PARKING BRAKE RELEASE WARNING CHIME : System Description"

SYSTEM

< SYSTEM DESCRIPTION >

WARNING CHIME SYSTEM : Circuit Diagram

INFOID:000000009650443

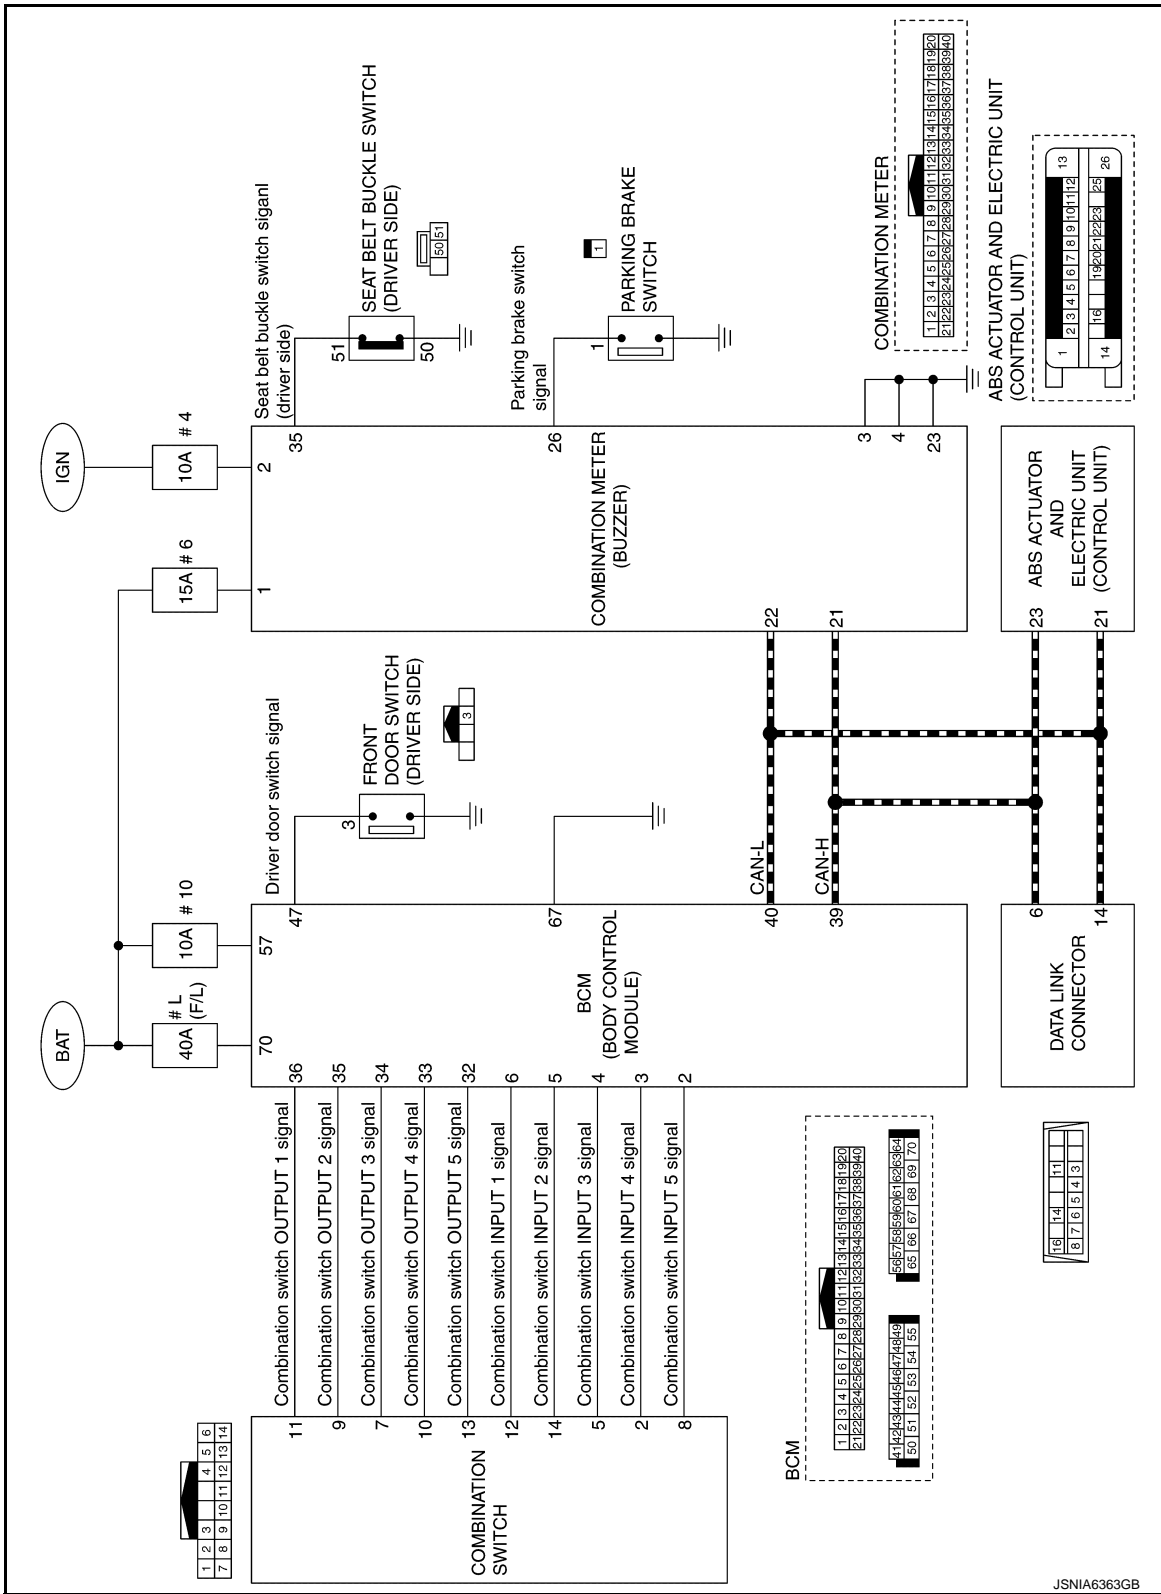

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

WCS

WARNING CHIME SYSTEM : Fail-Safe

INFOID:000000009650444

The combination meter activates the fail-safe control if CAN communication with each unit is malfunctioning.

Function	Specifications
Buzzer	The buzzer turns OFF by suspending communication.

SYSTEM


< SYSTEM DESCRIPTION >

LIGHT REMINDER WARNING CHIME

LIGHT REMINDER WARNING CHIME : System Description

INFOID:000000009650445

SYSTEM DIAGRAM

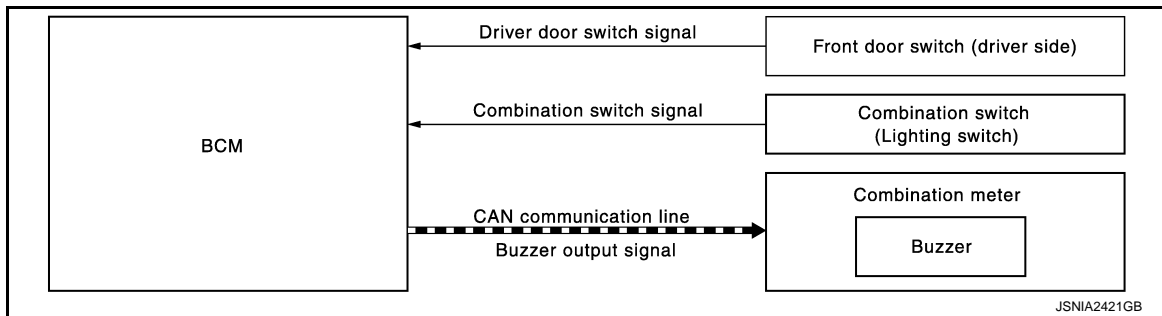

WARNING CHIME OPERATION CONDITIONS

If all of the following conditions are fulfilled.

Operation conditions	
Ignition switch	OFF or ACC position
Combination switch (Lighting switch)	1st or 2nd position
Driver side door	Open [front door switch (driver side) ON]

WARNING CHIME CANCEL CONDITIONS

Warning is canceled if any of the following conditions is fulfilled.


Operation conditions	
Ignition switch	ON
Combination switch (Lighting switch)	OFF or AUTO position
Driver side door	Close [front door switch (driver side) OFF]

SIGNAL PATH

1. BCM requires warning chime output to combination meter when it judges light reminder warning chime is necessary from signals below.

Signal name	Signal source
Ignition switch signal	—
Combination switch signal	Combination switch (Lighting switch) → BCM
Driver door switch signal	Front door switch (driver side) → BCM


2. Combination meter sounds integrated buzzer, following the warning chime output requirement (below signal) from BCM.

Signal name	Signal source
Buzzer output signal	BCM  Combination meter

SYSTEM

< SYSTEM DESCRIPTION >


TIMING CHART

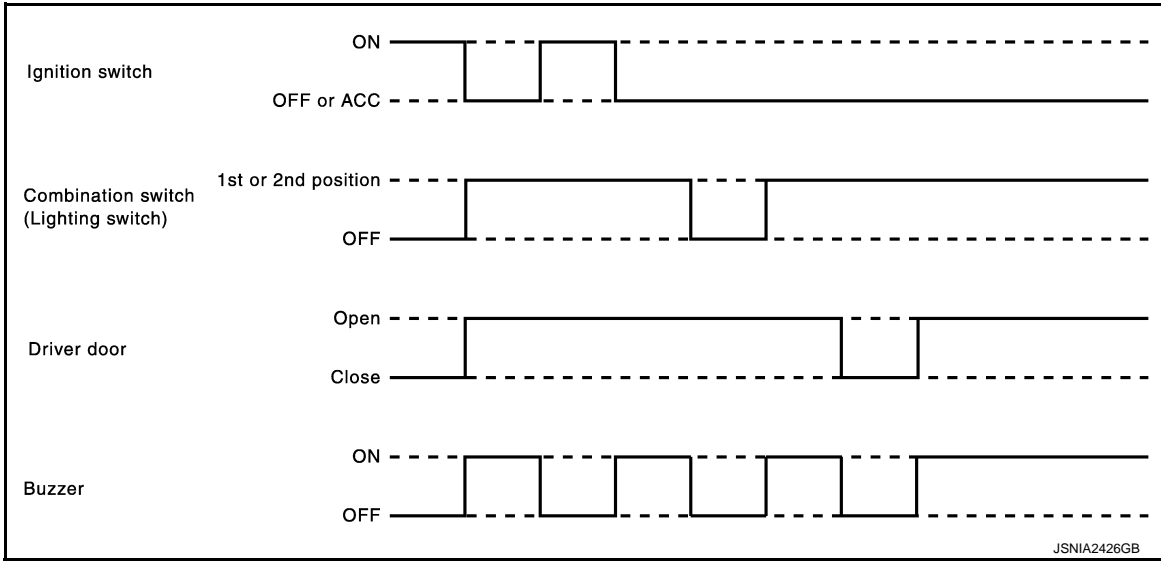

FRONT FOG LIGHT REMINDER WARNING CHIME

FRONT FOG LIGHT REMINDER WARNING CHIME : System Description INFOID:000000009650446

SYSTEM DIAGRAM

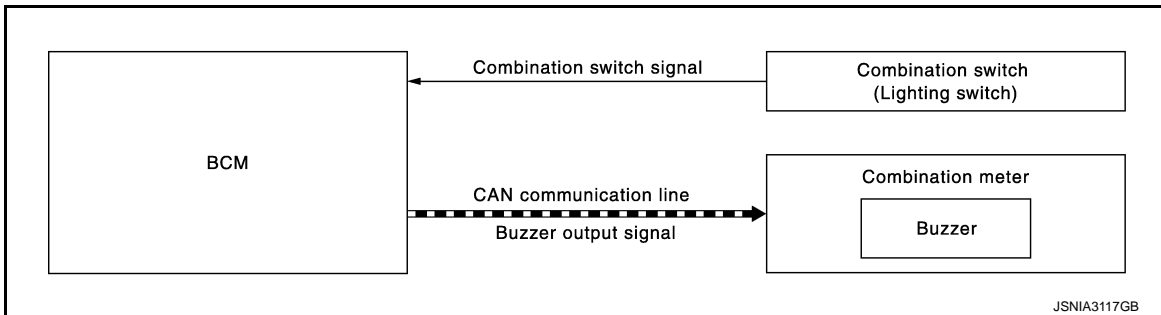

WARNING CHIME OPERATION CONDITIONS

Warning chime sounds during 2 seconds when the ignition switch is in LOCK, OFF or ACC position, if all of below operation conditions is met.

Operation conditions	
Ignition switch	ON position
Combination switch (Lighting switch)	AUTO position and front fog lamp switch ON position

SIGNAL PATH

1. BCM requires warning chime output to combination meter when it judges front fog light reminder warning chime is necessary from signals below.

Signal name	Signal source
Ignition switch signal	—
Combination switch signal	Combination switch (Lighting switch) → BCM


2. Combination meter sounds integrated buzzer, following the warning chime output requirement (below signal) from BCM.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P


WCS

SYSTEM

< SYSTEM DESCRIPTION >

Signal name	Signal source
Buzzer output signal	BCM  Combination meter

TIMING CHART

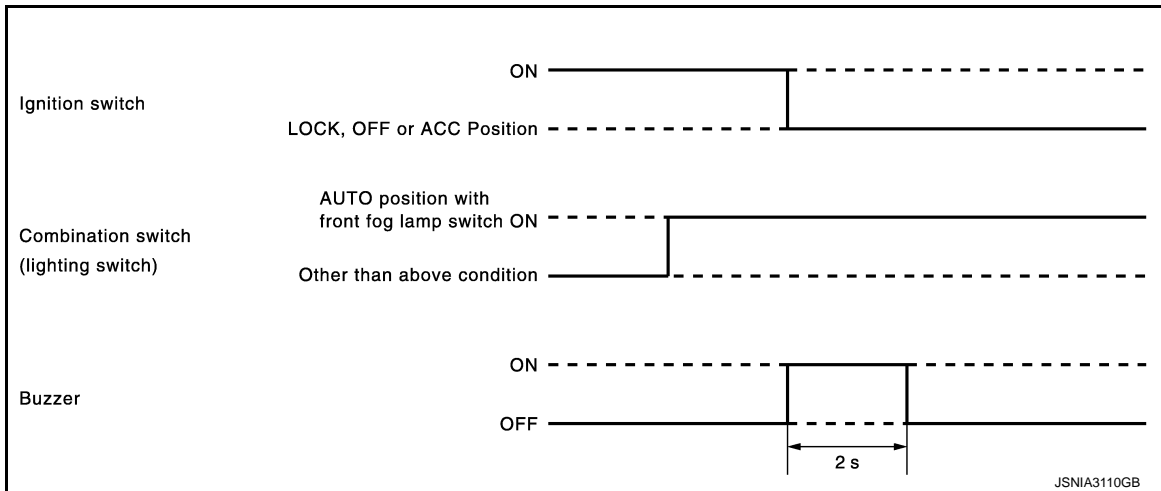


SEAT BELT WARNING CHIME

SEAT BELT WARNING CHIME : System Description

INFOID:000000009650447

SYSTEM DIAGRAM

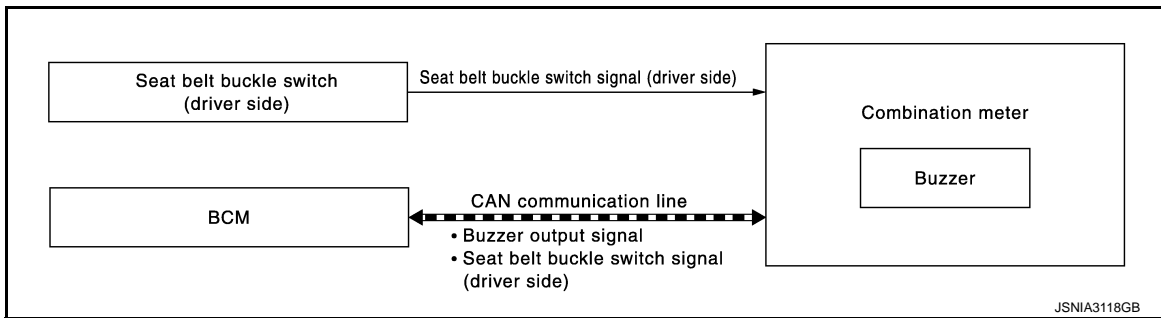

WARNING OPERATION CONDITIONS

If all of the following conditions are fulfilled.

Operation conditions	
Ignition switch	ON
Driver seat belt	Unfastened [seat belt buckle switch (driver side) ON]

WARNING CANCEL CONDITIONS

Warning is canceled if any of the following conditions is fulfilled.

Operation conditions	
Ignition switch	OFF
Seat belt (driver side)	Fastened (driver side seat belt buckle switch OFF)
6 seconds after the start of warning sound	

SIGNAL PATH

1. BCM requires warning chime output to combination meter when it judges seat belt warning chime is necessary from signals below.

SYSTEM


< SYSTEM DESCRIPTION >

Signal name	Signal source
Ignition switch signal	—
Seat belt buckle switch signal (driver side)	Seat belt buckle switch (driver side) → Combination meter CAN → BCM


2. Combination meter sounds integrated buzzer, following the warning chime output requirement (below signal) from BCM.

Signal name	Signal source
Buzzer output signal	BCM → CAN → Combination meter

TIMING CHART

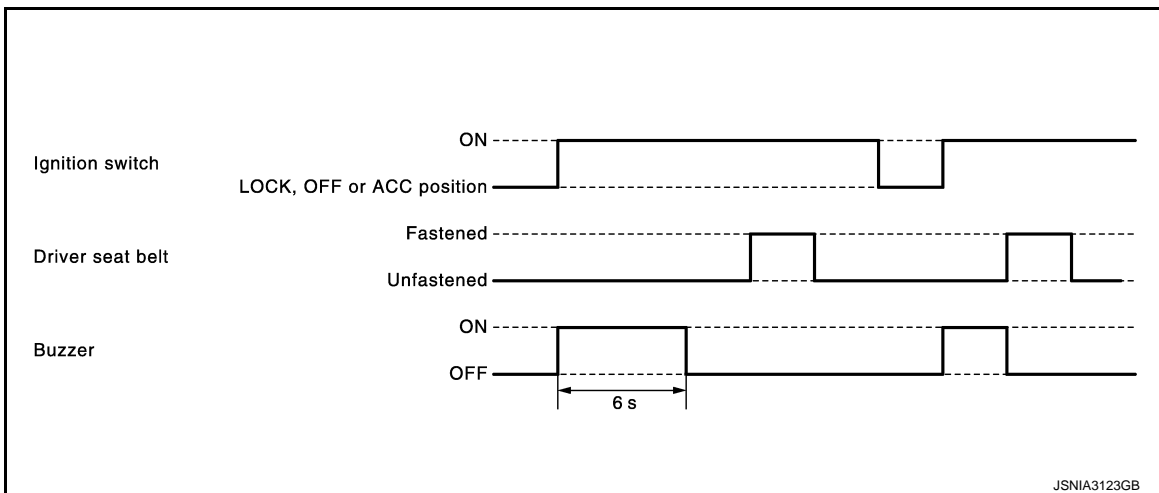

SOUND SPECIFICATION

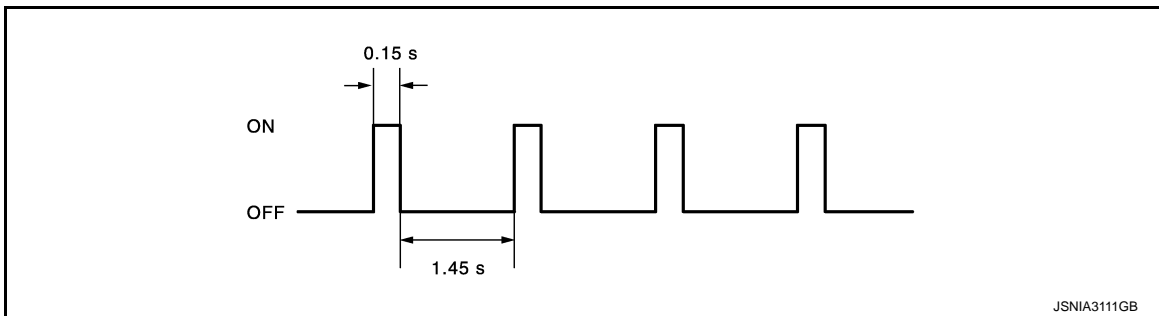


PARKING BRAKE RELEASE WARNING CHIME

PARKING BRAKE RELEASE WARNING CHIME : System Description

INFOID:000000009650448

SYSTEM DIAGRAM

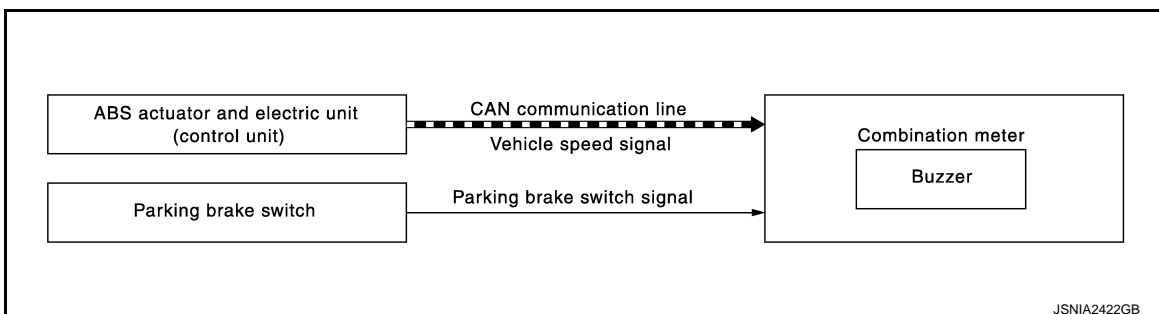

SYSTEM

< SYSTEM DESCRIPTION >

WARNING OPERATION CONDITIONS

If all of the following conditions are fulfilled.

Operation conditions	
Ignition switch	ON
Parking brake	During the operation (parking brake switch ON)
Vehicle speed	Approximately 7 km/h (4.3 MPH) or more


WARNING CANCEL CONDITIONS

Warning is canceled if any of the following conditions are fulfilled.


Operation conditions	
Ignition switch	OFF
Parking brake	Release condition (parking brake switch OFF)
Vehicle speed	Approximately 3 km/h (1.9 MPH) or less

SIGNAL PATH

Combination meter sounds integrated buzzer when it judges that parking brake release warning chime is necessary from signals below.

Signal name	Signal source
Ignition switch signal	—
Parking brake switch signal	Parking brake switch → Combination meter
Vehicle speed signal	ABS actuator and electric unit (control unit)  → Combination meter


TIMING CHART

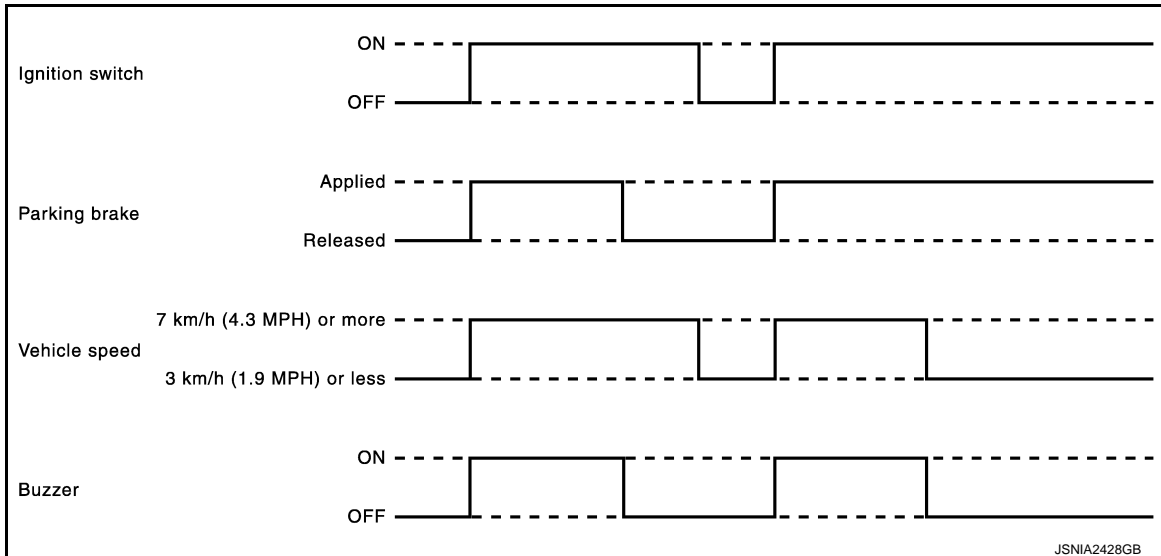

SYSTEM

< SYSTEM DESCRIPTION >

SOUND SPECIFICATION

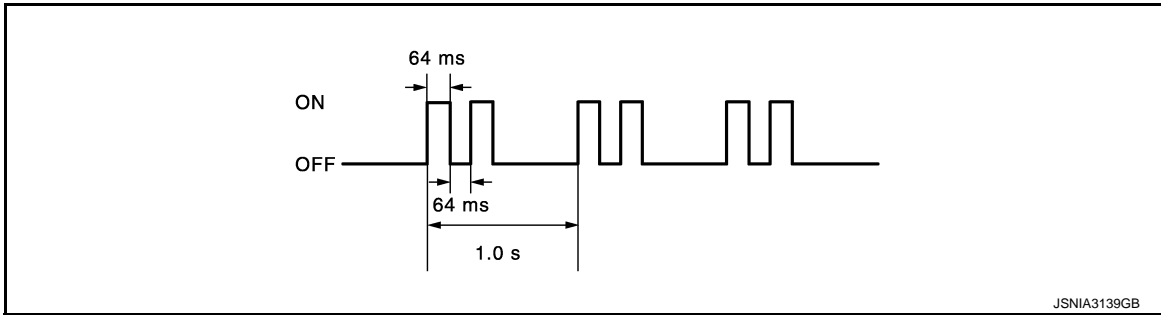

A

B

C

D

E

F

G

H

I

J

K

L

M

WCS

O

P

DIAGNOSIS SYSTEM (COMBINATION METER)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (COMBINATION METER)

CONSULT Function

INFOID:000000009864204

CONSULT APPLICATION ITEMS

CONSULT can perform the following diagnosis modes via CAN communication and the combination meter.

System	Diagnosis mode	Description
METER/M&A	Self Diagnostic Result	The combination meter checks the conditions and displays memorized errors.
	Data Monitor	Displays the combination meter input/output data in real time.
	Warning history	Lighting history of the warning lamp and indicator lamp can be checked.

SELF DIAG RESULT

Refer to [WCS-29. "DTC Index"](#).

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Display Item List

X: Applicable

Display item [Unit]	MAIN SIGNALS	Description
SPEED METER [km/h]	X	Value of vehicle speed signal received from ABS actuator and electric unit (control unit) via CAN communication. NOTE: 655.35 is displayed when the malfunction signal is received.
SPEED OUTPUT [km/h]	X	Vehicle speed signal value transmitted to other units via CAN communication. NOTE: 655.35 is displayed when the malfunction signal is received.
ODO OUTPUT [km/h or mph]		Odometer signal value transmitted to other units via CAN communication.
TACHO METER [rpm]	X	Value of the engine speed signal received from ECM via CAN communication. NOTE: 8191.875 is displayed when the malfunction signal is received.
FUEL METER [L]	X	Fuel level indicated on combination meter.
W TEMP METER [°C]	X	Value of engine coolant temperature signal is received from ECM via CAN communication. NOTE: 215 is displayed when the malfunction signal is input.
ABS W/L [On/Off]		Status of ABS warning lamp detected from ABS warning lamp signal is received from ABS actuator and electric unit (control unit) via CAN communication.
VDC/TCS IND [On/Off]		Status of VDC OFF indicator lamp detected from VDC OFF indicator lamp signal is received from ABS actuator and electric unit (control unit) via CAN communication.
SLIP IND [On/Off]		Status of VDC warning lamp detected from VDC warning lamp signal received from ABS actuator and electric unit (control unit) via CAN communication.
BRAKE W/L [On/Off]		Status of brake warning lamp detected from brake warning lamp signal is received from ABS actuator and electric unit (control unit) via CAN communication. NOTE: Displays "Off" if the brake warning lamp is illuminated when the valve check starts, the parking brake switch is turned ON or the brake fluid level switch is turned ON.
DOOR W/L [On/Off]		Status of door open warning detected from door switch signal received from BCM via CAN communication.
HI-BEAM IND [On/Off]		Status of high beam indicator lamp detected from high beam request signal is received from BCM via CAN communication.



DIAGNOSIS SYSTEM (COMBINATION METER)

< SYSTEM DESCRIPTION >

Display item [Unit]	MAIN SIGNALS	Description	A
TURN IND [On/Off]		Status of turn indicator lamp detected from turn indicator signal is received from BCM via CAN communication.	A
LIGHT IND [On/Off]		<ul style="list-style-type: none"> • Status of position lamp indicator lamp detected from dimmer signal is received from BCM via CAN communication. (For U.S.A) • Status of position lamp indicator lamp detected from position light request signal is received from BCM via CAN communication. (For Canada) 	B
OIL W/L [On/Off]		Status of oil pressure warning lamp detected from oil pressure switch signal is received from BCM via CAN communication.	C
MIL [On/Off]		Status of malfunction indicator lamp detected from malfunctioning indicator lamp signal is received from ECM via CAN communication.	D
CRUISE IND [On/Off]		Status of CRUISE indicator detected from ASCD status signal is received from ECM via CAN communication.	E
SET IND [Off]		This item is displayed, but cannot be monitored.	F
CRUISE W/L [Off]		This item is displayed, but cannot be monitored.	G
BA W/L [Off]		This item is displayed, but cannot be monitored.	H
O/D OFF IND [On/Off]		Status of O/D OFF indicator detected from O/D OFF indicator signal is received from CVT shift selector.	I
4WD W/L [Off]		This item is displayed, but cannot be monitored.	J
4WD LOCK IND [Off]		This item is displayed, but cannot be monitored.	K
FUEL W/L [On/Off]		Low fuel warning status detected by the identified fuel level.	L
WASHER W/L [On/Off]		Status of low washer fluid warning judged from washer level switch input to combination meter.	M
AIR PRES W/L [On/Off]		Status of low tire pressure warning lamp judged from TPMS malfunction warning lamp signal received from BCM with CAN communication line.	WCS
KEY G/Y W/L [On/Off]		Status of Intelligent Key system malfunction detected from Intelligent Key warning display signal is received from BCM via CAN communication.	O
EPS W/L [On/Off]		Status of EPS warning lamp judged from EPS warning lamp signal received from EPS control unit with CAN communication line.	P
AFS OFF IND [Off]		This item is displayed, but cannot be monitored.	
ECO MODE IND [Off]		This item is displayed, but cannot be monitored.	
LCD [B&P N, B&P I, ID NG, ROTAT, SFT P, INSRT, BATT, NO KY, OUTKY, LK WN, KY>PSW, Off]		Displays status of Intelligent Key system warning judged from meter display signal received from BCM with CAN communication line.	WCS
ACC TARGET [Off]		This item is displayed, but cannot be monitored.	
ACC DISTANCE [Off]		This item is displayed, but cannot be monitored.	
ACC OWN VHL [Off]		This item is displayed, but cannot be monitored.	
ACC SET SPEED [Off]		This item is displayed, but cannot be monitored.	
ACC UNIT [Off]		This item is displayed, but cannot be monitored.	

DIAGNOSIS SYSTEM (COMBINATION METER)

< SYSTEM DESCRIPTION >

Display item [Unit]	MAIN SIGNALS	Description
SHIFT IND [P, R, N, D, L]		Status of shift position indicator judged from shift position signal received from TCM with CAN communication line.
BSW IND [Off]		This item is displayed, but cannot be monitored.
BSW W/L [On/Off]		Status of BSW warning lamp judged from BSW warning lamp signal received from camera control unit via CAN communication.
FUEL CAP W/L [On/Off]		Status of fuel filler cap warning detected from fuel filler cap warning display signal is received from ECM via CAN communication.
O/D OFF SW [On/Off]		Status of overdrive control switch.
M RANGE SW [Off]		This item is displayed, but cannot be monitored.
NM RANGE SW [Off]		This item is displayed, but cannot be monitored.
AT SFT UP SW [Off]		This item is displayed, but cannot be monitored.
AT SFT DWN SW [Off]		This item is displayed, but cannot be monitored.
COMP F/B SIG [On/Off]		A/C compressor activation condition that ECM judges according to the water temperature and the acceleration degree.
PKB SW [On/Off]		Status of parking brake switch.
BUCKLE SW [On/Off]		Status of seat belt buckle switch (driver side).
BRAKE OIL SW [On/Off]		Status of brake fluid level switch.
A/C AMP CONN [On/Off]		Status of A/C auto amp. connection recognition signal.
ENTER SW [On/Off]		Status of  (ENTER) switch.
SELECT SW [On/Off]		Status of  (SELECT) switch.
ECO MODE SW [Off]		This item is displayed, but cannot be monitored.
DISTANCE [km]		Value of distance to empty calculated by combination meter.
OUTSIDE TEMP [°C or °F]		Ambient temperature value converted from ambient sensor signal received from ambient sensor. NOTE: This may not match with the temperature value indicated on the information display. (Because the information display value is a corrected value from the ambient sensor input value.)
FUEL LOW SIG [On/Off]		Status of fuel level low warning signal to output to AV control unit via CAN communication.
BUZZER [On/Off]	X	Buzzer status (in the combination meter) is detected from the buzzer output signal received from each unit via CAN communication and the warning output condition of the combination meter.
TPMS PRESS L [On/Off]		Status of low tire pressure warning judged from low tire pressure warning lamp signal received from BCM with CAN communication line.
4WD AUTO IND [Off]		This item is displayed, but cannot be monitored.

NOTE:

Some items are not available according to vehicle specification.

DIAGNOSIS SYSTEM (COMBINATION METER)

< SYSTEM DESCRIPTION >

Warning History

- Stores histories when warning/indicator lamp is turned on.
- “Warning History” indicates the “TIME” when the warning/indicator lamp is turned on.
- The “TIME” above is:
 - 0: The condition that the warning/indicator lamp has been turned on 1 or more times after starting the engine and waiting for 30 seconds.
 - 1 - 39: The number of times the engine was restarted after the 0 condition.
 - NO Warning History: Stores NO (0) turning on history of warning/indicator lamp.

NOTE:

- Warning History is not stored for approximately 30 seconds after the engine starts.
- Brake warning lamp does not store any history when the parking brake is applied or the brake fluid level gets low.

Display Item

Display item	Description
ABS W/L	Lighting history of ABS warning lamp.
VDC/TCS IND	Lighting history of VDC OFF indicator lamp.
SLIP IND	Lighting history of VDC warning lamp.
BRAKE W/L	Lighting history of brake warning lamp.
DOOR W/L	Lighting history of door open warning.
OIL W/L	Lighting history of oil pressure warning lamp.
C-ENG W/L	Lighting history of malfunction indicator lamp.
CRUISE IND	Lighting history of CRUISE indicator.
O/D OFF IND	Lighting history of O/D OFF indicator lamp.
FUEL W/L	Lighting history of low fuel level warning.
WASHER W/L	Lighting history of low washer fluid warning.
AIR PRES W/L	Lighting history of low tire pressure warning lamp.
KEY G/Y W/L	Lighting history of Intelligent Key system malfunction.
EPS W/L	Lighting history of EPS warning lamp.
BSW W/L	Lighting history of BSW warning lamp.

NOTE:

In items displayed on the CONSULT screen, only those listed in the above table are used.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

WCS

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:00000000996903

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	<ul style="list-style-type: none"> • Read and save the vehicle specification. • Write the vehicle specification when replacing BCM.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

×: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp control system	INT LAMP	×	×	×
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER	×	×	×
Air conditioning control system	AIR CONDITONER		×	×*
<ul style="list-style-type: none"> • Intelligent Key system • Engine start system 	INTELLIGENT KEY	×	×	×
Combination switch	COMB SW		×	
Body control system	BCM	×		
NVIS	IMMU	×	×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
Back door open	TRUNK		×	
Vehicle security system	THEFT ALM	×	×	×
RAP system	RETAINED PWR		×	
Signal buffer system	SIGNAL BUFFER		×	×
TPMS	AIR PRESSURE MONITOR	×	×	×

NOTE:

*: For models with automatic air conditioning control system, this diagnosis mode is not used.

FREEZE FRAME DATA (FFD)

The BCM records the following vehicle condition at the time a particular DTC is detected, and displays on CONSULT.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

CONSULT screen item	Indication/Unit	Description		
Vehicle Speed	km/h	Vehicle speed of the moment a particular DTC is detected		A
Odo/Trip Meter	km	Total mileage (Odometer value) of the moment a particular DTC is detected		
Vehicle Condition	SLEEP>LOCK	Power position status of the moment a particular DTC is detected*	While turning BCM status from low power consumption mode to normal mode [Power supply position is OFF (LOCK)]	B
	SLEEP>OFF		While turning BCM status from low power consumption mode to normal mode [Power supply position is OFF (OFF)]	C
	LOCK>ACC		While turning power supply position from OFF (LOCK) to ACC	
	ACC>ON		While turning power supply position from ACC to ON	D
	RUN>ACC		While turning power supply position from RUN to ACC (Except emergency stop operation)	
	CRANK>RUN		While turning power supply position from CRANK to RUN	E
	RUN>URGENT		While turning power supply position from RUN to ACC (Emergency stop operation)	
	ACC>OFF		While turning power supply position from ACC to OFF (OFF)	F
	OFF>LOCK		While turning power supply position from OFF (OFF) to OFF (LOCK)	
	OFF>ACC		While turning power supply position from OFF (OFF) to ACC	G
	ON>CRANK		While turning power supply position from ON to CRANK	
	OFF>SLEEP		While turning BCM status from normal mode [Power supply position is OFF (OFF)] to low power consumption mode	H
	LOCK>SLEEP		While turning BCM status from normal mode [Power supply position is OFF (LOCK)] to low power consumption mode	
	LOCK		Power supply position is OFF (LOCK)	I
	OFF		Power supply position is OFF (OFF)	
	ACC		Power supply position is ACC	J
	ON		Power supply position is ON	
ENGINE RUN	Power supply position is RUN	K		
CRANKING	Power supply position is CRANK			
IGN Counter	0 - 39	The number of times that ignition switch is turned ON after DTC is detected <ul style="list-style-type: none"> • The number is 0 when a malfunction is detected now. • The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. • The number is fixed to 39 until the self-diagnosis results are erased if it is over 39. 		L

NOTE:

*: Refer to the following for details of the power supply position.

- OFF (OFF, LOCK): Ignition switch OFF
- ACC: Ignition switch ACC
- IGN: Ignition switch ON with engine stopped
- RUN: Ignition switch ON with engine running
- CRANK: At engine cranking

Power supply position shifts to "OFF (LOCK)" from "OFF (OFF)", when ignition switch is in the OFF position, shift position is in the P position, and any of the following conditions are met.

- Closing door
- Opening door
- Door is locked using door request switch
- Door is locked using Intelligent Key

The power supply position shifts to "ACC" when the push-button ignition switch (push switch) is pushed at "OFF (LOCK)".

BUZZER

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

WCS

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

BUZZER : CONSULT Function (BCM - BUZZER)

INFOID:000000009650451

CONSULT APPLICATION ITEMS

Test item	Diagnosis mode	Description
BUZZER	Data Monitor	Displays BCM input data in real time.
	Active Test	Operation of electrical loads can be checked by sending driving signal to them.

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Display item [Unit]	Description
PUSH SW [On/Off]	Status of push-button ignition switch judged by BCM.
UNLK SEN-DR [On/Off]	Status of unlock sensor judged by BCM.
VEH SPEED 1 [km/h]	Value of vehicle speed signal received from combination meter with CAN communication line.
TAIL LAMP SW [On/Off]	Status of lighting switch judged by BCM using the combination switch readout function.
FR FOG SW [On/Off]	Status of front fog lamp switch judged by BCM using the combination switch readout function.
DOOR SW-DR [On/Off]	Status of driver side door switch judged by BCM.
CDL LOCK SW [On/Off]	Status of door lock unlock switch judged by BCM.

ACTIVE TEST

Display item [Unit]	Description
SEAT BELT WARN TEST	The seat belt warning chime operation can be checked by operating the relevant function (On/Off).
ID REGIST WARNING	The ID regist warning chime operation can be checked by operating the relevant function (On/Off).
LIGHT WARN ALM	The light warning chime operation can be checked by operating the relevant function (On/Off).

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

ECU DIAGNOSIS INFORMATION

COMBINATION METER

Reference Value

INFOID:000000009864205

VALUES ON THE DIAGNOSIS TOOL

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item	Condition		Value/Status
SPEED METER [km/h]	Ignition switch ON	While driving	Input value of vehicle speed signal (CAN communication signal) NOTE: 655.35 is displayed when the malfunction signal is received
SPEED OUTPUT [km/h]	Ignition switch ON	While driving	Output value of vehicle speed signal (CAN communication signal) NOTE: 655.35 is displayed when the malfunction signal is received
ODO OUTPUT [km/h or mph]	Ignition switch ON	—	Output value of odometer signal (CAN communication signal)
TACHO METER [rpm]	Ignition switch ON	Engine running	Input value of engine speed signal (CAN communication signal) NOTE: 8191.875 is displayed when the malfunction signal is received
FUEL METER [L]	Ignition switch ON	—	Input value of fuel level sensor signal
W TEMP METER [°C]	Ignition switch ON	—	Input value of engine coolant temperature signal (CAN communication signal) NOTE: 215 is displayed when the malfunction signal is input
ABS W/L	Ignition switch ON	ABS warning lamp ON	On
		ABS warning lamp OFF	Off
VDC/TCS IND	Ignition switch ON	VDC OFF indicator lamp ON	On
		VDC OFF indicator lamp OFF	Off
SLIP IND	Ignition switch ON	VDC warning lamp ON	On
		VDC warning lamp OFF	Off
BRAKE W/L	Ignition switch ON	Brake warning lamp ON	On
		Brake warning lamp OFF	Off
DOOR W/L	Ignition switch ON	Door open warning ON	On
		Door open warning OFF	Off
HI-BEAM IND	Ignition switch ON	High-beam indicator lamp ON	On
		High-beam indicator lamp OFF	Off
TURN IND	Ignition switch ON	Turn signal indicator lamp ON	On
		Turn signal indicator lamp OFF	Off
LIGHT IND	Ignition switch ON	Position lamp indicator lamp ON	On
		Position lamp indicator lamp OFF	Off

A

B

C

D

E

F

G

H

I

J

K

L

M

WCS

O

P

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition		Value/Status
OIL W/L	Ignition switch ON	Oil pressure warning lamp ON	On
		Oil pressure warning lamp OFF	Off
MIL	Ignition switch ON	Malfunction indicator lamp ON	On
		Malfunction indicator lamp OFF	Off
CRUISE IND	Ignition switch ON	CRUISE indicator ON	On
		CRUISE indicator OFF	Off
SET IND	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
CRUISE W/L	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
BA W/L	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
O/D OFF IND	Ignition switch ON	O/D OFF indicator lamp ON	On
		O/D OFF indicator lamp OFF	Off
4WD W/L	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
4WD LOCK IND	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
FUEL W/L	Ignition switch ON	During low fuel warning indication	On
		Other than the above	Off
WASHER W/L	Ignition switch ON	During low washer fluid warning indication	On
		Other than the above	Off
AIR PRES W/L	Ignition switch ON	Low tire pressure warning lamp ON	On
		Low tire pressure warning lamp OFF	Off
KEY G/Y W/L	Ignition switch ON	During Intelligent Key system malfunction indication	On
		Other than the above	Off
EPS W/L	Ignition switch ON	EPS warning lamp ON	On
		EPS warning lamp OFF	Off
AFS OFF IND	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
ECO MODE IND	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off



COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition		Value/Status	
LCD	Ignition switch ON	During engine start information indication	B&P I	A
	Ignition switch ACC	During engine start information indication	B&P N	B
	Ignition switch LOCK	During key ID warning indication	ID NG	
	Ignition switch LOCK	During steering lock information indication	ROTAT	C
	Ignition switch LOCK	During P position warning indication	SFT P	D
	Ignition switch LOCK	During Intelligent Key insert information indication	INSRT	
	Ignition switch LOCK	During Intelligent Key low battery warning indication	BATT	E
	Ignition switch ON	During take away warning indication	NO KY	F
	Ignition switch LOCK	During key warning indication	OUTKY	
	Ignition switch ON	During ACC warning indication	LK WN	G
	Ignition switch LOCK	During Key ID verification information indication	KY>PSW	H
	Ignition switch ON	Other than above	Off	
ACC TARGET	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off	I
ACC DISTANCE	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off	J
ACC OWN VHL	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off	K
ACC SET SPEED	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off	L
ACC UNIT	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off	M
SHIFT IND	Ignition switch ON	During the indication of "P" by shift position indicator	P	WCS
		During the indication of "R" by shift position indicator	R	
		During the indication of "N" by shift position indicator	N	O
		During the indication of "D" by shift position indicator	D	
		During the indication of "L" by shift position indicator	L	P
BSW IND	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off	
BSW W/L	Ignition switch ON	BSW warning lamp ON	On	
		BSW warning lamp OFF	Off	

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition		Value/Status
FUEL CAP W/L	Ignition switch ON	During fuel filler cap warning display indication	On
		Other than above	Off
O/D OFF SW	Ignition switch ON	Overdrive control switch ON	On
		Overdrive control switch OFF	Off
M RANGE SW	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
NM RANGE SW	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
AT SFT UP SW	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
AT SFT DWN SW	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
COMP F/B SIG	Ignition switch ON	A/C compressor activation condition	On
		A/C compressor deactivation condition	Off
PKB SW	Ignition switch ON	Parking brake switch ON	On
		Parking brake switch OFF	Off
BUCKLE SW	Ignition switch ON	Driver seat belt not fastened	On
		Driver seat belt fastened	Off
BRAKE OIL SW	Ignition switch ON	Brake fluid level switch ON	On
		Brake fluid level switch OFF	Off
A/C AMP CONN	Ignition switch ON	Other than the following	On
		Receives ambient sensor power signal	Off
ENTER SW	Ignition switch ON	When  switch (enter switch) is pressed	On
		Other than above	Off
SELECT SW	Ignition switch ON	When  switch (select switch) is pressed	On
		Other than above	Off
ECO MODE SW	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
DISTANCE [km]	Ignition switch ON	—	Distance to empty calculated by combination meter
OUTSIDE TEMP [°C or °F]	Ignition switch ON	—	Input value of ambient sensor signal (CAN communication signal) NOTE: This may not match the indicated value on the information display.
FUEL LOW SIG	Ignition switch ON	During low fuel warning indication	On
		Other than above	Off
BUZZER	Ignition switch ON	Buzzer ON	On
		Buzzer OFF	Off

COMBINATION METER


< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition		Value/Status
TPMS PRESS L	Ignition switch ON	During low tire pressure warning indication	On
		Other than above	Off
4WD AUTO IND	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off

NOTE:

Some items are not available according to vehicle specification.

TERMINAL LAYOUT

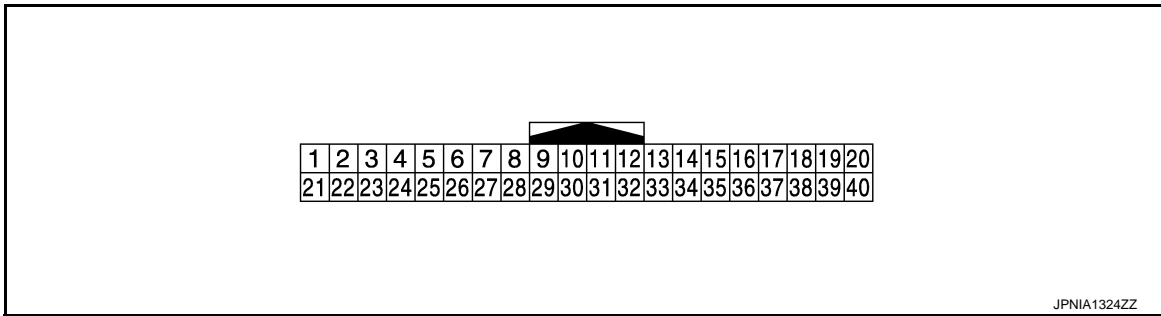







PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
1 (O)	Ground	Battery power supply	Input	Ignition switch OFF	—	Battery voltage
2 (Y)	Ground	Ignition signal	Input	Ignition switch ON	—	Battery voltage
3 (B)	Ground	Ground	—	Ignition switch ON	—	0 V
4 (B)	Ground	Ground	—	Ignition switch ON	—	0 V

WCS

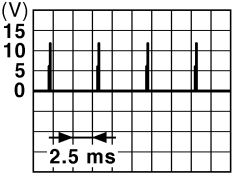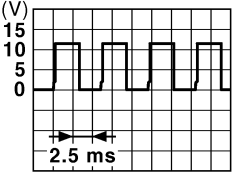COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
5 (B/P)	Ground	Illumination control signal	Output	Ignition switch ON	<ul style="list-style-type: none"> Lighting switch 1ST position When meter illumination is maximum 	
					<ul style="list-style-type: none"> Lighting switch 1ST position When meter illumination is step 11 	
					<ul style="list-style-type: none"> Lighting switch 1ST position When meter illumination is minimum 	12 V
8 (SB)	10 (P)	Trip reset switch signal	Input	Ignition switch ON	When trip reset switch is pressed	0 V
					Other than the above	5 V
10 (P)	Ground	Meter control switch ground	—	Ignition switch ON	—	0 V
11 (G)	10 (P)	Enter switch signal	Input	Ignition switch ON	When  switch (enter switch) is pressed	0 V
					Other than the above	5 V
12 (BR)	10 (P)	Select switch signal	Input	Ignition switch ON	When  switch (select switch) is pressed	0 V
					Other than the above	5 V
13 (Y)	10 (P)	Illumination control switch signal (+)	Input	Ignition switch ON	When  switch [illumination control switch (+)] is pressed	0 V
					Other than the above	5 V
14 (V)	10 (P)	Illumination control switch signal (-)	Input	Ignition switch ON	When  switch [illumination control switch (-)] is pressed	0 V
					Other than the above	5 V
15 (BR)	—	Air bag signal	Input	—	—	—

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >


Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
16 (L)	Ground	Engine coolant temperature signal	Output	Ignition switch ON	At idle [after warming up, approx. 20°C (68°F)]	<p style="text-align: right; font-size: small;">JSNIA3528ZZ</p>
					At idle [after warming up, approx. 80°C (176°F)]	<p style="text-align: right; font-size: small;">JSNIA3530ZZ</p>
18 (LG)	Ground	Ambient sensor signal	Input	Ignition switch ON	—	<p style="text-align: right; font-size: small;">JSNIA0014GB</p>
19 (R)	Ground	A/C auto amp. connection recognition signal	Input	Ignition switch ON	—	5 V
20 (Y)	Ground	Ambient sensor ground	—	Ignition switch ON	—	0 V
21 (L)	—	CAN-H	—	—	—	—
22 (P)	—	CAN-L	—	—	—	—
23 (B)	Ground	Ground	—	Ignition switch ON	—	0 V
24 (B)	Ground	Fuel level sensor ground	—	Ignition switch ON	—	0 V
25 (BR)	Ground	Alternator signal	Input	Ignition switch ON	Charge warning lamp ON	12 V
					Charge warning lamp OFF	0 V
26 (BR)	Ground	Parking brake switch signal	Input	Ignition switch ON	Parking brake applied.	0 V
					Parking brake released.	12 V
27 (Y)	Ground	Brake fluid level switch signal	Input	Ignition switch ON	Brake fluid level is normal	12 V
					Brake fluid level is less than LOW level	0 V
28 (V)	Ground	Security signal	Input	Ignition switch ON	Security indicator lamp ON	0 V
					Security indicator lamp OFF	12 V

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

WCS

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

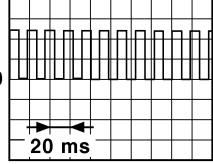Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
29 (G)	Ground	Washer level switch signal	Input	Ignition switch ON	Washer level switch ON	0 V
					Washer level switch OFF	5 V
31 (SB)	Ground	Vehicle speed signal (8-pulse)	Output	Ignition switch ON	Speedometer operated [When vehicle speed is ap- prox. 40 km/h (25 MPH)]	NOTE: The maximum voltage varies de- pending on the specification (destination unit).  <small>JSNIA0012GB</small>
32 (P)	Ground	Overdrive control switch signal	Input	Ignition switch ON	When overdrive control switch is pressed	0 V
					Other than the above	5 V
34 (O)	24 (B)	Fuel level sensor signal	Input	Ignition switch ON	—	MWI-78. "Component Inspec- tion"
35 (P)	Ground	Seat belt buckle switch sig- nal (driver side)	Input	Ignition switch ON	When driver seat belt is fas- tened	5 V
					When driver seat belt is un- fastened	0 V
36 (BR)	—	Passenger seat belt warn- ing signal	Input	—	—	—

Fail-Safe

INFOID:000000009864206

FAIL-SAFE

The combination meter activates the fail-safe control if CAN communication with each unit is malfunctioning.

Function	Specifications
Speedometer	Reset to zero by suspending communication.
Tachometer	
Engine coolant temperature gauge	
Illumination control	When suspending communication, changes to nighttime mode.

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

Function		Specifications		
Information display	Odo/trip meter	An indicated value is maintained at communications blackout.	A	
	Shift position indicator	The display turns OFF by suspending communication.		
	Interrupt indication	Door open warning	The display turns OFF by suspending communication.	B
		Fuel filler cap warning		
		Low tire pressure warning		C
	Trip computer	Current fuel consumption	<ul style="list-style-type: none"> When reception time of an abnormal signal is 2 seconds or less, the last received datum is used for calculation to indicate the result. When reception time of an abnormal signal is more than two seconds, the last calculation results are indicated. 	D
		Average fuel consumption		
		Distance to empty		E
Average vehicle speed				
Travel distance				
Buzzer		The buzzer turns OFF by suspending communication.	F	
Warning lamp/indicator lamp	ABS warning lamp	The lamp turns ON by suspending communication.	G	
	VDC warning lamp			
	Brake warning lamp			
	EPS warning lamp			
	Malfunction indicator lamp			
	Low tire pressure warning lamp	The lamp blinking caused by suspending communication.	H	
	High beam indicator lamp	The lamp turns OFF by suspending communication.	I	
	Turn signal indicator lamp			
	VDC OFF indicator lamp			
	O/D OFF indicator lamp			
	Position lamp indicator lamp			
	CRUISE indicator lamp			
	Oil pressure warning lamp			
	BSW warning lamp			
Key warning lamp				

DTC Index

INFOID:000000009864207

Display contents of CONSULT	Diagnostic item is detected when...	Refer to	
CAN COMM CIRCUIT [U1000]	When combination meter is not transmitting or receiving CAN communication signal for 2 seconds or more.	MWI-67. "Diagnosis Procedure"	WCS
CONTROL UNIT (CAN) [U1010]	When detecting error during the initial diagnosis of the CAN controller of combination meter.	MWI-68. "Diagnosis Procedure"	O
VEHICLE SPEED [B2205]	The abnormal vehicle speed signal is input from the ABS actuator and electric unit (control unit) for 2 seconds or more.	MWI-69. "Diagnosis Procedure"	P
ENGINE SPEED [B2267]	If ECM continuously transmits abnormal engine speed signals for 2 seconds or more.	MWI-70. "Diagnosis Procedure"	
WATER TEMP [B2268]	If ECM continuously transmits abnormal engine coolant temperature signals for 60 seconds or more.	MWI-71. "Diagnosis Procedure"	

BCM

< ECU DIAGNOSIS INFORMATION >

BCM

List of ECU Reference

INFOID:000000009650455

ECU	Reference
BCM	BCS-40, "Reference Value"
	BCS-62, "Fail-safe"
	BCS-62, "DTC Inspection Priority Chart"
	BCS-63, "DTC Index"

WARNING CHIME SYSTEM


< WIRING DIAGRAM >

WIRING DIAGRAM

WARNING CHIME SYSTEM

Wiring Diagram

INFOID:000000009650456

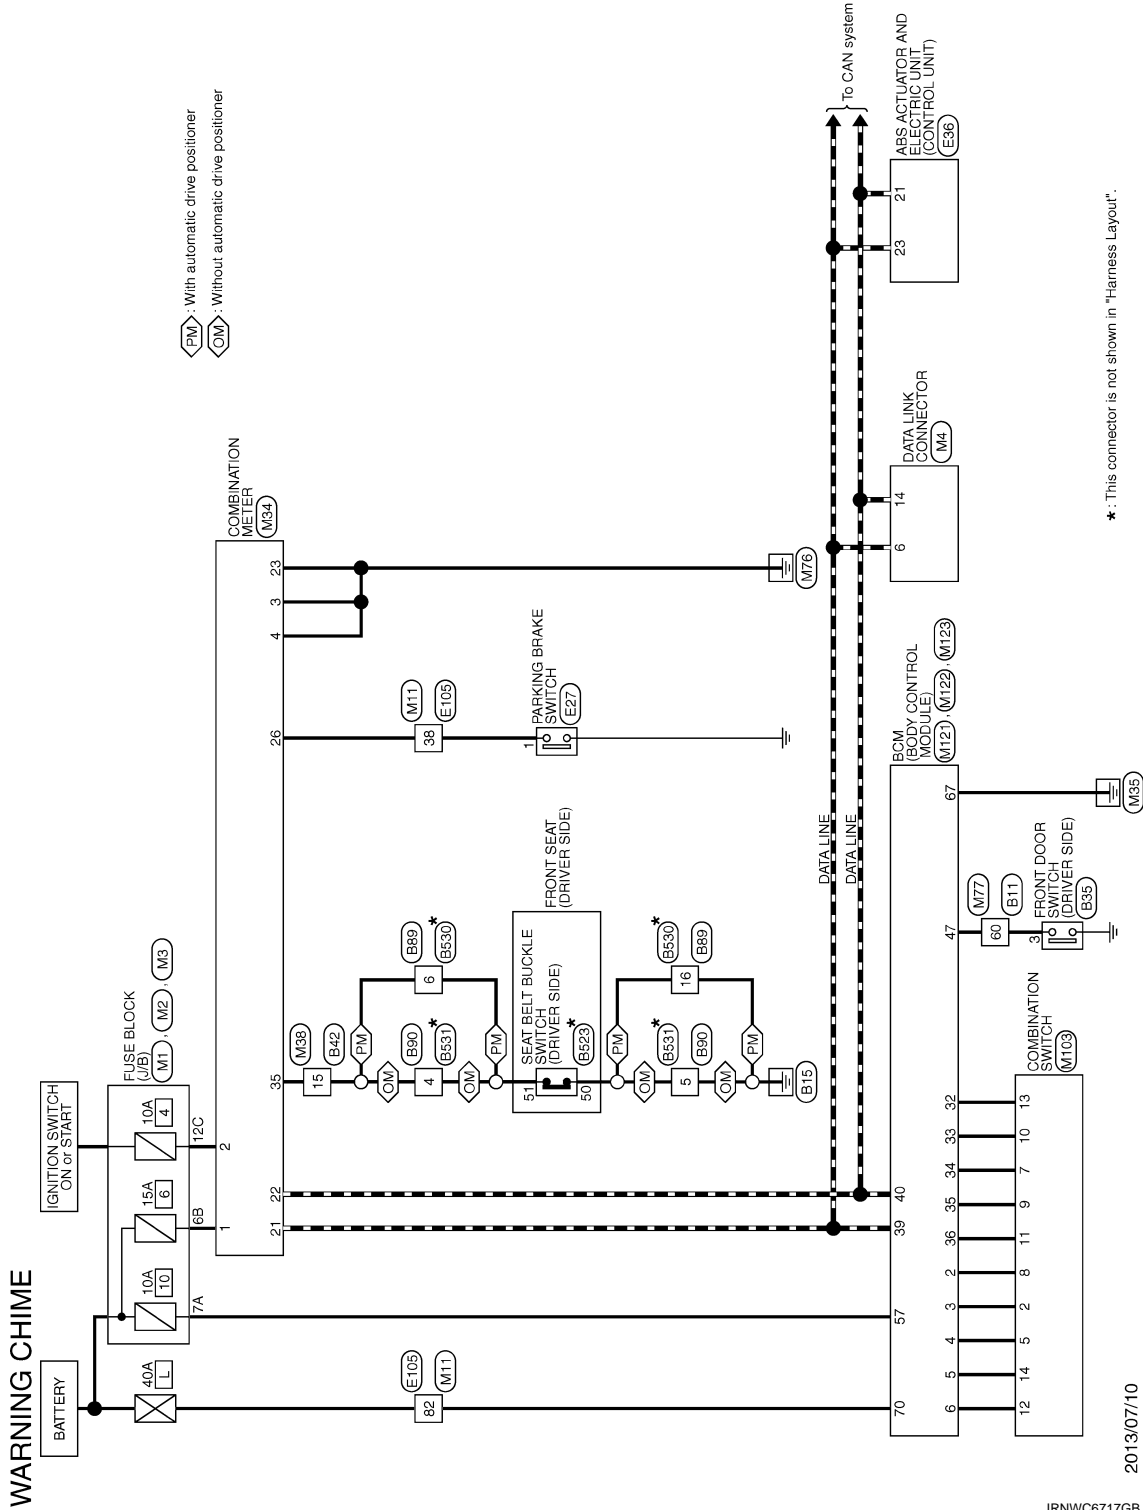

2013/07/10


JRNWC6717GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WCS

WARNING CHIME SYSTEM

< WIRING DIAGRAM >

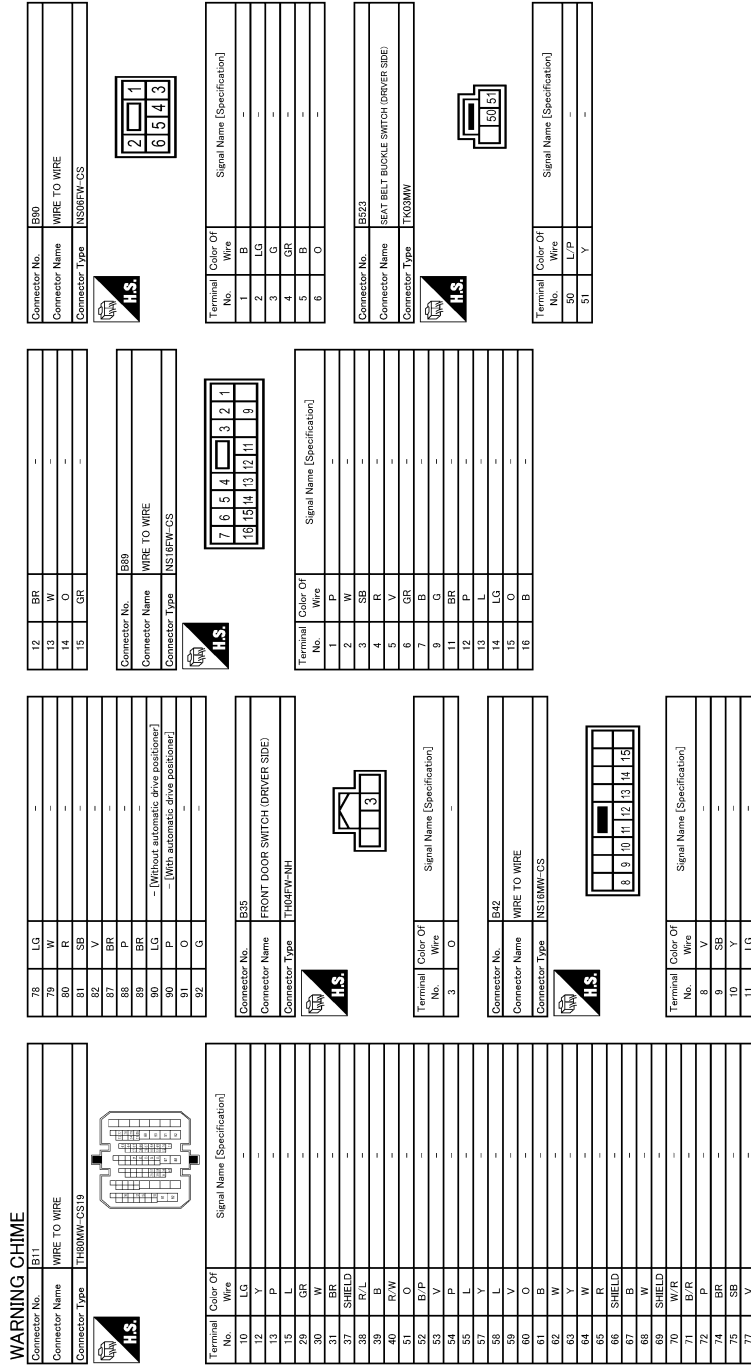

JRNWC6718GB

WARNING CHIME SYSTEM

< WIRING DIAGRAM >

WARNING CHIME

Connector No.	BS30
Wire To Wire	
Connector Name	WIRE TO WIRE
Connector Type	NS56MW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	RG	
2	RY	
3	RY	
4	W/R	
5	W/L	
6	Y	
7	LG	
9	P	
11	R	
12	V	
13	R/Y	
14	G	
15	P	
18	L/P	

Connector No.	BS31
Wire To Wire	
Connector Name	WIRE TO WIRE
Connector Type	NS56MW-CS




Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	
2	L	
3	BR/W	
4	Y	
5	L/P	
6	P	

Connector No.	E27
Connector Name	PARKING BRAKE SWITCH
Connector Type	PO1EF-A



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	

Connector No.	E36
Connector Name	RES-ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	AE22ZF-AJ24-LH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	VALVE BATTERY
2	Y	RR LH WHEEL SENSOR SIGNAL
3	L	RR LH WHEEL SENSOR POWER SUPPLY
4	G	G SENSOR POWER SUPPLY
5	B	FR RH WHEEL SENSOR POWER SUPPLY
6	W	FR RH WHEEL SENSOR SIGNAL
7	R	BRAKE FLUID LEVEL SWITCH SIGNAL
8	LG	FR LH WHEEL SENSOR SIGNAL
9	L	FR LH WHEEL SENSOR POWER SUPPLY
10	B	G SENSOR GND
11	V	RR RH WHEEL SENSOR POWER SUPPLY
12	P	FR RH WHEEL SENSOR SIGNAL
13	G	STOP LAMP BATTERY
14	G	MOTOR BATTERY
18	SR	STOP LAMP SWITCH SIGNAL
19	Y	G SENSOR SIGNAL (+)
20	GR	IGN
21	P	CAN-L
22	BR	VDC OFF SWITCH SIGNAL

53	L	G/NCH
53	B	G SENSOR SIGNAL (-)
29	B	GROUND

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH70MM-CS10-M3



Terminal No.	Color Of Wire	Signal Name [Specification]
1	SHIELD	
2	W	
3	B	
4	R	
6	LG	
7	R	
8	GR	
9	SB	
10	BR	
11	Y	
12	W	
14	L	
15	P	
31	GR	
32	R	
33	W	
37	BR	
38	G	
39	V	
40	P	
41	L	
42	LG	
43	G	
44	SB	
46	SR	
47	V	
49	L	
51	BR	
52	G	
53	B	

54	O	
55	Y	
56	SHIELD	
57	F	
62	G	
63	W/L	
64	W/R	
66	W	
67	Y	
69	SB	
70	LG	
71	R	
72	L	
73	GR	
74	SB	
75	Y	
76	G	
78	O	
80	R	
81	L	
82	LG	
83	R	

Connector No.	M1
Connector Name	FUSE BLOCK (A/B)
Connector Type	NS56PW-M2



Terminal No.	Color Of Wire	Signal Name [Specification]
1A	Y	
2A	G	
3A	L	
4A	GR	
5A	P	
6A	B	
7A	GR	
8A	L	


A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

WARNING CHIME SYSTEM

< WIRING DIAGRAM >

WARNING CHIME

Connector No.	M2
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FW-CS




Terminal No.	Color Of Wire	Signal Name [Specification]
10B	R	
11B	Y	
12B	W	
13B	W	
14B	BR	
15B	BR	
16B	O	
17B	R/L	
18B	GR	

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
10C	LG	
11C	V	
12C	Y	
13C	GR	
14C	B/R	
15C	O	
16C	Y	

Connector No.	M4
Connector Name	DATA LINK CONNECTOR
Connector Type	BD18FW




Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	
2	GR	
3	GR	
4	GR	
5	B/R	
6	L	
7	R	
8	G	
9	G	
10	SB	
11	P	
12	O	

Connector No.	M11
Connector Name	WIRE TO WIRE
Connector Type	TH3DFW-SS10-M3



Terminal No.	Color Of Wire	Signal Name [Specification]
1	SHIELD	
2	W	
3	B	
4	O	
5	O	
6	O	
7	LG	
8	B	
9	B	
10	R	
11	W	
12	LG	

Connector No.	M34
Connector Name	COMBINATION METER
Connector Type	TH4DFW-MH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	O	BATTERY POWER SUPPLY
2	Y	IGNITION SIGNAL
3	B	GROUND
4	B	GROUND
5	B/P	ILLUMINATION CONTROL SIGNAL
6	SB	TRIP RESET SWITCH SIGNAL
7	P	METER CONTROL SWITCH GROUND
8	G	ENTER SWITCH SIGNAL
9	L	SELECT SWITCH SIGNAL
10	Y	ILLUMINATION CONTROL SWITCH SIGNAL (4)
11	V	ILLUMINATION CONTROL SWITCH SIGNAL (2)
12	BR	ILLUMINATION CONTROL SWITCH SIGNAL (4)
13	Y	ILLUMINATION CONTROL SWITCH SIGNAL (4)
14	V	ILLUMINATION CONTROL SWITCH SIGNAL (2)
15	BR	AIR BAG SIGNAL
16	L	ENGINE COOLANT TEMPERATURE SIGNAL
17	LG	AMBIENT SENSOR SIGNAL
18	R	A/C AUTO CLIMATE CONTROL SIGNAL
19	Y	AMBIENT SENSOR GROUND
20	Y	CAN-H
21	L	CAN-L
22	P	GROUND
23	B	FUEL LEVEL SENSOR GROUND
24	B	FUEL LEVEL SENSOR SIGNAL
25	BR	ALTERNATOR SIGNAL
26	BR	PARKING BRAKE SWITCH SIGNAL
27	Y	BRAKE FLUID LEVEL SWITCH SIGNAL
28	V	SECURITY SIGNAL
29	G	WASHER LEVEL SWITCH SIGNAL
30	P	VEHICLE SPEED SIGNAL (R-PULSE)
31	SB	OVERDRIVE CONTROL SWITCH SIGNAL
32	P	FUEL LEVEL SENSOR SIGNAL
33	O	FUEL LEVEL SENSOR SIGNAL
34	O	SEAT BELT SIGNAL
35	SB	PASSENGER SEAT BELT WARNING SIGNAL
36	BR	PASSENGER SEAT BELT WARNING SIGNAL

13	Y		
14	L		
15	P		
31	R		
32	V		
33	Y		
37	BR		
38	BR		
39	Y		
40	P		
41	L		
42	G		
43	W		
44	LG		
45	LG		
46	LG		
47	LG		
48	G		
49	G		
50	G		
51	SB		
52	GR		
53	B		
54	R		
55	L		
56	SHIELD		
61	BR		
62	LG		
63	W/L		
64	W/R		
65	O		
66	SB		
67	SB		
70	R		
71	R		
72	L		
73	R		
74	Y		
75	G		
76	V		
77	P		
78	W		
80	Y		
81	W		
82	L		
83	R		

WARNING CHIME SYSTEM

< WIRING DIAGRAM >


WARNING CHIME

Connector No.	M38
Connector Name	WIRE TO WIRE
Connector Type	MS18FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
8	P	-
9	B	-
10	B	-
11	Y	-
12	SB	-
13	G	- [Without automatic slide door]
14	V	- [With automatic slide door]
15	P	-


Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Type	TH88FW-CS19



Terminal No.	Color Of Wire	Signal Name [Specification]
10	GR	-
12	V	-
13	W	-
14	W	-
15	Y	-
16	L	-
17	P	-
18	BR	-
19	SHIELD	-
36	B	- [Without automatic drive positioner]
38	W	- [With automatic drive positioner]
39	B	- [With automatic drive positioner]


38	W	- [Without automatic drive positioner]
40	L	-
51	Y	-
52	B	-
53	O	-
54	P	-
55	L	-
57	Y	-
58	L	-
59	O	-
60	G	-
61	LG	-
62	V	-
63	SB	-
64	R	-
65	R	-
66	SHIELD	-
67	W/L	-
68	GR/V	-
69	SHIELD	-
70	W/L	-
71	W/R	-
72	LG	-
74	GR	-
75	G	-
77	O	-
78	LG	-
79	R	-
80	G	-
81	L	-
82	W	-
83	V	-
87	R	-
88	Y	-
89	P	- [Without automatic drive positioner]
90	R	- [With automatic drive positioner]
91	SB	-
92	P	-

Connector No.	M103
Connector Name	COMBINATION SWITCH
Connector Type	TH18FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	RR [With automatic drive positioner]
2	Y	RR [Without automatic drive positioner]
3	B/G	FR [With automatic drive positioner]
4	P	FR [Without automatic drive positioner]
5	O	IGN
6	B	GROUND [With automatic drive positioner]
6	B/Y	GROUND [Without automatic drive positioner]
7	GR	INPUT 3
8	LG	OUTPUT 5
9	SB	INPUT 2
10	W	INPUT 4
11	R	INPUT 1
12	L	OUTPUT 1
13	G	OUTPUT 2
14	G	OUTPUT 2


Connector No.	M121
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FR-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	REAR WINDOW DEF RELAY CONT
2	LG	COMBI SW INPUT 5
3	Y	COMBI SW INPUT 4

4	O	COMBI SW INPUT 3
5	G	COMBI SW INPUT 2
6	L	COMBI SW INPUT 1
7	W	KEY CYL UNLOCK SW
8	GR	FW SW COMBI [With automatic sliding door]
8	Y	KEY CYL LOCK SW [Without automatic sliding door]
9	V	STOP LAMP SW 1
12	GR	DOOR LK & UNLK SW LOCK
13	BR	DOOR LK & UNLK SW UNLOCK
14	L	OPTICAL SENS
15	W	REAR WINDOW DEF SW
16	Y	DIMMER
17	O	SENS PWR SPLY
18	R	RECEIV/SENS GND
21	R	MATS ANT AMP
22	V	SENDER ANT AMP
23	B	DOOR LK SW
25	W	MATS ANT AMP
27	O	A.C ON
28	BR	BLOWER FAN ON
29	P	HAZARD SW
30	L	BK DOOR OPNR SW
31	O	DR DOOR UNLK SENS
32	Y	COMBI SW OUTPUT 5
33	W	COMBI SW OUTPUT 4
34	GR	COMBI SW OUTPUT 3
35	SB	COMBI SW OUTPUT 2
36	R	COMBI SW OUTPUT 1
37	G	RELEAS SW
38	SB	RELEAS SW
39	E	CAN-L
40	P	CAN-L

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEA98FB-FHAE-SA



JRNWC6721GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WARNING CHIME SYSTEM

< WIRING DIAGRAM >

WARNING CHIME

Terminal No.	Color of Wire	Signal Name [Specification]
43	P	BK DOOR SW
44	Y	REAR WIPER STOP POSITION
45	SB	PASS DOOR SW
46	F	SL DOOR RH SW
47	G	DR DOOR SW
48	C	SL DOOR LH SW
49	B	LUGGAGE LAMP CONT
50	V	SELECT UNLK RELAY CONT
51	LG	BACK DOOR REG SW
53	BR	BK DOOR OPEN
54	R	REAR WIPER OUTPUT
55	G	SL DOOR LH UNLK CONT

Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEA08FY-FHAF-SA



58	57	56	55	54	53	52	51	50	49	48	47	46	45	44	43
65	66	67	68	69	70										

Terminal No.	Color of Wire	Signal Name [Specification]
56	P	INT ROOM LAMP PWR SPLY
57	GR	BAT
58	O	AIR BAG
59	SB	PASS DOOR UNLK OUTPUT
60	V	TURN SIG LH OUTPUT
61	G	TURN SIG RH OUTPUT
62	W	STEP LAMP CONT
63	R	INT ROOM LAMP CONT
64	LG	CRANK REG
65	V	ALL DOOR LOCK OUTPUT
66	G	DR DOOR UNLK OUTPUT
67	B	GROUND
68	L	PWR PWR SPLY (GSN)
69	P	PWR PWR SPLY (BAT)
70	L	BAT

JRNWC6722GB

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000009650457

OVERALL SEQUENCE

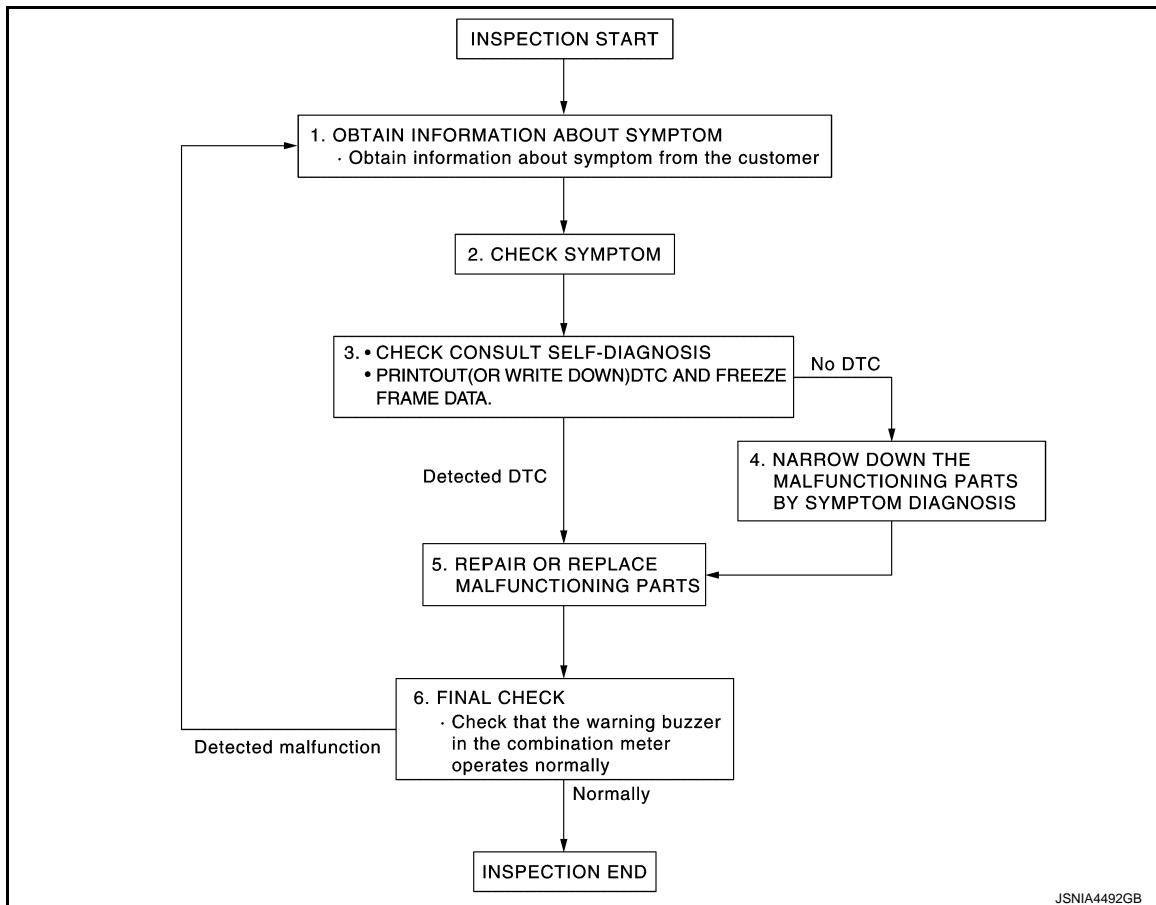

DETAILED FLOW

1.OBTAIN INFORMATION ABOUT SYMPTOM

Interview the customer to obtain as much information as possible about the conditions and environment under which the malfunction occurred.

>> GO TO 2.

2.CHECK SYMPTOM

- Check the symptom based on the information obtained from the customer.
- Check if any other malfunctions are present.

>> GO TO 3.

3.CHECK CONSULT SELF-DIAGNOSIS RESULTS

1. Connect CONSULT and perform self-diagnosis. Refer to [MWI-48, "DTC Index"](#).
2. When DTC is detected, follow the instructions below:
 - Record DTC and Freeze Frame Data.

Are self-diagnosis results normal?

- YES >> GO TO 4.
- NO >> GO TO 5.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

4. NARROW DOWN MALFUNCTIONING PARTS BY SYMPTOM DIAGNOSIS

Perform symptom diagnosis and narrow down the malfunctioning parts.

>> GO TO 5.

5. REPAIR OR REPLACE MALFUNCTIONING PARTS

Repair or replace malfunctioning parts.

NOTE:

If DTC is displayed, erase DTC after repairing or replacing malfunctioning parts.

>> GO TO 6.

6. FINAL CHECK

Check that the warning buzzer in the combination meter operates normally.

Does it operate normally?

YES >> INSPECTION END

NO >> GO TO 1.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

POWER SUPPLY AND GROUND CIRCUIT COMBINATION METER

COMBINATION METER : Diagnosis Procedure

INFOID:000000009864208

1. CHECK FUSE

Check for blown fuses.

Power source	Fuse No.
Battery	6
Ignition switch ON or START	4

Is the inspection result normal?

YES >> GO TO 2.

NO >> Be sure to eliminate cause of malfunction before installing new fuse.

2. CHECK POWER SUPPLY CIRCUIT

Check voltage between combination meter harness connector and ground.

Terminals		Ignition switch position	Voltage (Approx.)
(+)	(-)		
Combination meter		OFF	Battery voltage
Connector	Terminal		
M34	1		
	2		
Ground		ON	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check harness between combination meter and fuse.

3. CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector.
3. Check continuity between combination meter harness connector and ground.

Combination meter		Ground	Continuity
Connector	Terminal		
M34	3	Ground	Existed
	4		
	23		

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair harness or connector.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

WCS

METER BUZZER CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

METER BUZZER CIRCUIT

Component Function Check

INFOID:000000009650459

1. CHECK OPERATION OF METER BUZZER

1. Select "BUZZER" of "BCM" on CONSULT.
2. Perform "LIGHT WARN ALM" of "Active Test".

Does meter buzzer beep?

- YES >> INSPECTION END
NO >> GO TO 2.

2. CHECK COMBINATION METER INPUT SIGNAL

Select the "Data Monitor" for the "METER/M&A" and check the "BUZZER" monitor value.

BUZZER

Under the condition of buzzer input : On

Except above : Off

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-93. "Removal and Installation"](#).
NO >> Replace BCM. Refer to [BCS-98. "Removal and Installation"](#).

Diagnosis Procedure

INFOID:000000009650460

1. CHECK POWER SUPPLY OF COMBINATION METER

Check power supply of combination meter. Refer to [MWI-72. "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Repair power supply circuit of combination meter.

SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT

Component Function Check

INFOID:000000009650461

1.CHECK COMBINATION METER INPUT SIGNAL

Select the "Data Monitor" for the "METER/M&A" and check the "BUCKLE SW" monitor value.

BUCKLE SW
When seat belt is fastened : Off
When seat belt is unfastened : On

>> INSPECTION END

Diagnosis Procedure

INFOID:000000009650462

1.CHECK COMBINATION METER INPUT SIGNAL

1. Turn ignition switch ON.
2. Check voltage between combination meter harness connector and ground.

Terminals		Condition	Voltage (Approx.)
(+)	(-)		
Combination meter			
Connector	Terminal	When driver seat belt is fastened	12 V
M34	35		
		When driver seat belt is unfastened	0 V

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-93. "Removal and Installation"](#).
NO >> GO TO 2.

2.CHECK SEAT BELT BUCKLE SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector and seat belt buckle switch (driver side) connector.
3. Check continuity between combination meter harness connector and seat belt buckle switch (driver side) harness connector.

Combination meter		Seat belt buckle switch (driver side)		Continuity
Connector	Terminal	Connector	Terminal	
M34	35	B523	51	Existed

4. Check harness continuity between combination meter harness connector and ground.

Combination meter		Ground	Continuity
Connector	Terminal		
M34	35		Not existed

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair harness or connector.

3.CHECK SEAT BELT BUCKLE SWITCH GROUND CIRCUIT

Check harness continuity between seat belt buckle switch (driver side) harness connector and ground.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

WCS

SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Seat belt buckle switch (driver side)		Ground	Continuity
Connector	Terminal		
B523	50		Existed

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Repair harness or connector.

Component Inspection

INFOID:000000009650463

1. CHECK SEAT BELT BUCKLE SWITCH (DRIVER SIDE)

1. Turn ignition switch OFF.
2. Disconnect the seat belt buckle switch (driver side) connector.
3. Check continuity between terminals.

Terminal		Condition	Continuity
51	50	When seat belt is fastened	Not existed
		When seat belt is unfastened	Existed

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Replace seat belt buckle (driver side). Refer to [SB-8, "SEAT BELT BUCKLE : Removal and Installation"](#).

PARKING BRAKE SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

PARKING BRAKE SWITCH SIGNAL CIRCUIT

Diagnosis Procedure

INFOID:000000009650464

1. CHECK COMBINATION METER INPUT SIGNAL

1. Turn ignition switch ON.
2. Check the voltage between combination meter harness connector and ground.

(+)		(-)	Condition	Voltage (Approx.)	
Combination meter		Ground			
Connector	Terminal				
M34	26		Ground	Ignition switch ON	When parking brake is applied
		When parking brake is released		12 V	

Is the inspection result normal?

- YES >> INSPECTION END
NO >> GO TO 2.

2. CHECK PARKING BRAKE SWITCH SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector and parking brake switch connector.
3. Check continuity between combination meter harness connector and parking brake switch harness connector.

Terminals				Continuity
Combination meter		Parking brake switch		
Connector	Terminal	Connector	Terminal	
M34	26	E27	1	Existed

4. Check continuity between combination meter harness connector and ground.

Terminals			Continuity
Combination meter		Ground	
Connector	Terminal		
M34	26		Not existed

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Repair harness or connector.

Component Inspection

INFOID:000000009650465

1. CHECK PARKING BRAKE SWITCH

Check parking brake switch. Refer to [BRC-104, "Component Inspection"](#).

Is the inspection result normal?

- YES >> INSPECTION END.
NO >> Replace parking brake switch. Refer to [PB-6, "Exploded View"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

WCS

THE LIGHT REMINDER WARNING DOES NOT SOUND

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

THE LIGHT REMINDER WARNING DOES NOT SOUND

Description

INFOID:000000009650466

Light reminder warning chime does not sound even though headlamp is illuminated.

Diagnosis Procedure

INFOID:000000009650467

1. CHECK COMBINATION SWITCH (LIGHTING SWITCH) OPERATION

Check that the headlamps operate normally by operating the combination switch (lighting switch).

Do they operate normally?

YES >> GO TO 2.

NO >> Refer to [EXL-88, "WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Symptom Table"](#) [XENON TYPE (without daytime running light system)], [EXL-90, "WITH DAYTIME RUNNING LIGHT SYSTEM : Symptom Table"](#) [XENON TYPE (with daytime running light system)], [EXL-198, "WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Symptom Table"](#) [HALOGEN TYPE (without daytime running light system)], or [EXL-200, "WITH DAYTIME RUNNING LIGHT SYSTEM : Symptom Table"](#) [HALOGEN TYPE (with daytime running light system)].

2. CHECK DRIVER SIDE DOOR SWITCH SIGNAL CIRCUIT

Perform the check for the driver side door switch signal circuit. Refer to [DLK-241, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3. CHECK DRIVER SIDE DOOR SWITCH

Perform a unit check for the driver side door switch. Refer to [DLK-242, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-98, "Removal and Installation"](#).

NO >> Replace driver side door switch. Refer to [DLK-486, "Removal and Installation"](#).

THE PARKING BRAKE RELEASE WARNING CONTINUES SOUNDING, OR DOES NOT SOUND

< SYMPTOM DIAGNOSIS >

THE PARKING BRAKE RELEASE WARNING CONTINUES SOUNDING, OR DOES NOT SOUND

Description

INFOID:000000009650468

- The parking brake warning buzzer sounds continuously during vehicle travel though the parking brake is released.
- The parking brake warning buzzer does not sound at all even though driving the vehicle with the parking brake applied.

Diagnosis Procedure

INFOID:000000009650469

1. CHECK PARKING BRAKE WARNING LAMP

1. Start the engine.
2. Check the operation of the brake warning lamp by operating the parking brake.

When parking brake is applied : ON

When parking brake is released : OFF

Is the inspection result normal?

YES >> Replace combination meter. Refer to [MWI-93, "Removal and Installation"](#)

NO >> GO TO 2.

2. CHECK PARKING BRAKE SWITCH SIGNAL CIRCUIT

Perform check for the parking brake switch signal circuit. Refer to [BRC-104, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3. CHECK PARKING BRAKE SWITCH

Perform a unit check for the parking brake switch. Refer to [BRC-104, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace combination meter. Refer to [MWI-93, "Removal and Installation"](#)

NO >> Replace parking brake switch. Refer to [PB-6, "Exploded View"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

WCS

THE SEAT BELT WARNING CONTINUES SOUNDING, OR DOES NOT SOUND

< SYMPTOM DIAGNOSIS >

THE SEAT BELT WARNING CONTINUES SOUNDING, OR DOES NOT SOUND

Description

INFOID:000000009650470

- Seat belt warning chime does not sound.
- Seat belt warning chime sounds continuously.

Diagnosis Procedure

INFOID:000000009650471

1. CHECK SEAT BELT WARNING LAMP

1. Turn ignition switch ON.
2. Check the operation of the seat belt warning lamp in the combination meter.

Seat belt fastened	: OFF
Seat belt not fastened	: ON

Is the inspection result normal?

- YES >> GO TO 2.
- NO >> GO TO 4.

2. CHECK BCM OUTPUT SIGNAL

Check if the seat belt warning chime is activated by performing BCM active test. Refer to [WCS-20, "BUZZER : CONSULT Function \(BCM - BUZZER\)"](#).

Is the inspection result normal?

- YES >> INSPECTION END
- NO >> GO TO 3.

3. CHECK COMBINATION METER INPUT SIGNAL

Check if buzzer switches to proper condition (On/Off) on data monitor of combination meter. Refer to [MWI-35, "CONSULT Function"](#).

Buzzer active condition	: On
Buzzer non-active condition	: Off

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-93, "Removal and Installation"](#).
- NO >> Replace BCM. Refer to [BCS-98, "Removal and Installation"](#).

4. CHECK SEAT BELT BUCKLE SWITCH (DRIVER SIDE) CIRCUIT

Perform the check for the seat belt buckle switch (driver side) circuit. Refer to [WCS-41, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Repair harness or connector.

5. CHECK SEAT BELT BUCKLE SWITCH (DRIVER SIDE)

Perform a unit check for the seat belt buckle switch (driver side). Refer to [WCS-42, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-93, "Removal and Installation"](#).
- NO >> Replace seat belt buckle (driver side). Refer to [SB-8, "SEAT BELT BUCKLE : Removal and Installation"](#).