

SECTION **DAS**

DRIVER ASSISTANCE SYSTEM

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

CONTENTS

DRIVER ASSISTANCE SYSTEM	
PRECAUTION	8
PRECAUTIONS	8
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	8
Precaution for Work	8
Precautions For Harness Repair	8
Precautions for Driver Assistance Systems	9
PREPARATION	10
PREPARATION	10
Special Service Tool	10
SYSTEM DESCRIPTION	11
COMPONENT PARTS	11
Component Parts Location	11
Distance Sensor	12
Steering Switches	13
Around View Monitor Control Unit	13
Rear View Camera Air Pump Motor	13
Combination Meter	13
Rear View Camera	13
Rear View Camera Washer Control Unit	14
Warning System Buzzer	14
Rear View Camera Washer Motor	14
Blind Spot Warning Indicator LH/RH	14
Warning System Switch	14
SYSTEM	15
LDW	15
LDW : System Description	15
BSW	18
BSW : System Description	19
MOD	24
MOD : System Description	25
FCW	27
FCW : System Description	28
OPERATION	30
BSW	30
BSW : Switch Name and Function	30
BSW : System Display and Warning	30
LDW	31
LDW : Switch Name and Function	31
LDW : System Display and Warning	32
MOD	32
MOD : System Display and Warning	32
FCW	33
FCW : Switch Name and Function	33
FCW : System Display and Warning	33
HANDLING PRECAUTION	35
Precautions for Forward Collision Warning	35
Precautions for Lane Departure Warning	35
Precautions for Blind Spot Warning	36
Precautions for Moving Objects Detection	37
DIAGNOSIS SYSTEM (AROUND VIEW MONITOR CONTROL UNIT)	38
CONSULT Function	38
DIAGNOSIS SYSTEM (DISTANCE SENSOR) ...	41
CONSULT Function (LASER/RADAR)	41
ECU DIAGNOSIS INFORMATION	43
AROUND VIEW MONITOR CONTROL UNIT ...	43
Reference Value	43
DTC Index	46
DISTANCE SENSOR	47
Reference Value	47
Fail-safe (Distance Sensor)	48
DTC Inspection Priority Chart	48



DTC Index	48	ADDITIONAL SERVICE WHEN REPLACING AROUND VIEW MONITOR CONTROL UNIT ...	85
REAR VIEW CAMERA WASHER CONTROL UNIT	50	Description	85
Reference Value	50	Work Procedure	85
WIRING DIAGRAM	52	CONFIGURATION (AROUND VIEW MONI- TOR CONTROL UNIT)	86
DRIVER ASSISTANCE SYSTEMS	52	Description	86
Wiring Diagram	52	Work Procedure	86
BASIC INSPECTION	64	Configuration List	87
DIAGNOSIS AND REPAIR WORK FLOW	64	PREDICTIVE COURSE LINE CENTER POSI- TION ADJUSTMENT	88
Work Flow	64	Description	88
PRE-INSPECTION FOR DIAGNOSIS	67	Work Procedure	88
Inspection Procedure	67	CALIBRATING CAMERA IMAGE (AROUND VIEW MONITOR)	89
REAR VIEW CAMERA WASHER/AIR BLOW- ER FUNCTION INSPECTION	68	Description	89
Inspection Procedure	68	Work Procedure	89
ADDITIONAL SERVICE WHEN REPLACING DISTANCE SENSOR	69	REAR VIEW CAMERA CALIBRATION	95
Description	69	Description	95
Work Procedure	69	Work Procedure (Preparation)	95
DISTANCE SENSOR INITIAL VERTICAL ALIGNMENT	70	Work Procedure (Target Setting)	96
Description	70	Work Procedure (Rear View Camera Calibration)...	97
Required Tools	70	DTC/CIRCUIT DIAGNOSIS	99
Preparation	70	U0121 VDC CAN 2	99
Distance Sensor Initial Vertical Alignment	71	DTC Logic	99
DISTANCE SENSOR ALIGNMENT	72	Diagnosis Procedure	99
Description	72	U0122 VDC P-RUN DIAG	100
Required Tools	72	DTC Logic	100
Preparation	73	Diagnosis Procedure	100
Vehicle Set Up	74	U0126 STRG SEN CAN 1	101
Setting The Distance Sensor Target Board	76	DTC Logic	101
Distance Sensor Adjustment	77	Diagnosis Procedure	101
ACTION TEST	79	U0401 ECM CAN 1	102
LDW	79	DTC Logic	102
LDW : Description	79	Diagnosis Procedure	102
LDW : Inspection Procedure	79	U0415 VDC CAN 1	103
BSW	80	DTC Logic	103
BSW : Description	80	Diagnosis Procedure	103
BSW : Inspection Procedure	80	U0416 VDC CHECKSUM DIAG	104
MOD	81	DTC Logic	104
MOD : Description	81	Diagnosis Procedure	104
MOD : Inspection Procedure	82	U0428 STEERING ANGLE SENSOR	105
FCW	82	AROUND VIEW MONITOR CONTROL UNIT	105
FCW : Description	82	AROUND VIEW MONITOR CONTROL UNIT :	
FCW : Inspection Procedure	83	DTC Logic	105
		AROUND VIEW MONITOR CONTROL UNIT : Di- agnosis Procedure	105
		DISTANCE SENSOR	105

DISTANCE SENSOR : DTC Logic	105	Diagnosis Procedure	131
DISTANCE SENSOR : Diagnosis Procedure	105		
U1000 CAN COMM CIRCUIT	106	U1308 CAMERA CONFIG	132
AROUND VIEW MONITOR CONTROL UNIT	106	DTC Logic	132
AROUND VIEW MONITOR CONTROL UNIT :		Diagnosis Procedure	132
DTC Logic	106	U1309 PUMP UNIT CURRENT	133
AROUND VIEW MONITOR CONTROL UNIT : Di-		DTC Logic	133
agnosis Procedure	106	Diagnosis Procedure	133
DISTANCE SENSOR	106	U130A PUMP CONTROL UNIT	135
DISTANCE SENSOR : DTC Logic	106	DTC Logic	135
DISTANCE SENSOR : Diagnosis Procedure	106	Diagnosis Procedure	135
U1010 CONTROL UNIT (CAN)	107	U130B REAR CAMERA COMM ERROR	136
AROUND VIEW MONITOR CONTROL UNIT	107	DTC Logic	136
AROUND VIEW MONITOR CONTROL UNIT :		Diagnosis Procedure	136
DTC Logic	107	C10B7 YAW RATE SENSOR	137
DISTANCE SENSOR	107	DTC Logic	137
DISTANCE SENSOR : DTC Logic	107	Diagnosis Procedure	137
U111A REAR CAMERA IMAGE SIGNAL CIR-		C1A01 POWER SUPPLY CIRCUIT 1, C1A02	
CUIT	108	POWER SUPPLY CIRCUIT 2	138
DTC Logic	108	DTC Logic	138
Diagnosis Procedure	108	Diagnosis Procedure	138
U111B SIDE CAMERA RH IMAGE SIGNAL		C1A03 VEHICLE SPEED SENSOR	139
CIRCUIT	112	AROUND VIEW MONITOR CONTROL UNIT	139
DTC Logic	112	AROUND VIEW MONITOR CONTROL UNIT :	
Diagnosis Procedure	112	DTC Logic	139
U111C FRONT CAMERA IMAGE SIGNAL		AROUND VIEW MONITOR CONTROL UNIT : Di-	
CIRCUIT	116	agnosis Procedure	139
DTC Logic	116	DISTANCE SENSOR	139
Diagnosis Procedure	116	DISTANCE SENSOR : DTC Logic	139
U111D SIDE CAMERA LH IMAGE SIGNAL		DISTANCE SENSOR : Diagnosis Procedure	139
CIRCUIT	120	C1A04 ABS/TCS/VDC SYSTEM	140
DTC Logic	120	AROUND VIEW MONITOR CONTROL UNIT	140
Diagnosis Procedure	120	AROUND VIEW MONITOR CONTROL UNIT :	
U1232 STEERING ANGLE SENSOR	124	DTC Logic	140
DTC Logic	124	AROUND VIEW MONITOR CONTROL UNIT : Di-	
Diagnosis Procedure	124	agnosis Procedure	140
U1302 CAMERA POWER VOLT	125	DISTANCE SENSOR	140
DTC Logic	125	DISTANCE SENSOR : DTC Logic	140
Diagnosis Procedure	125	DISTANCE SENSOR : Diagnosis Procedure	140
U1303 LED POWER SUPPLY VOLT	129	C1A05 BRAKE SW/STOP LAMP SW	141
DTC Logic	129	DTC Logic	141
Diagnosis Procedure	129	Diagnosis Procedure	141
U1304 CAMERA IMAGE CALIBRATION	130	C1A12 LASER BEAM OFF CENTER	142
DTC Logic	130	DTC Logic	142
Diagnosis Procedure	130	Diagnosis Procedure	142
U1305 CONFIG UNFINISH	131	C1A14 ECM	143
DTC Logic	131	DTC Logic	143
		Diagnosis Procedure	143

A
B
C
D
E
F
G
H
I
J
K
L
M
N

DAS

P

C1A15 GEAR POSITION	144	DRIVER ASSISTANCE SYSTEM SYMPTOMS	162
DTC Logic	144	Symptom Table	162
Diagnosis Procedure	144	SYSTEM SETTINGS CANNOT BE TURNED ON/OFF IN VEHICLE INFORMATION DISPLAY	165
C1A16 RADAR BLOCKED OR STAINED	145	Description	165
DTC Logic	145	Diagnosis Procedure	165
Diagnosis Procedure	145	SWITCH DOES NOT TURN ON / SWITCH DOES NOT TURN OFF	166
C1A17 DISTANCE SENSOR	147	Description	166
DTC Logic	147	Diagnosis Procedure	166
Diagnosis Procedure	147	NORMAL OPERATING CONDITION	167
C1A18 RADAR AIMING INCMP	148	Description	167
DTC Logic	148	REMOVAL AND INSTALLATION	169
Diagnosis Procedure	148	FRONT CAMERA	169
C1A21 UNIT HIGH TEMP	149	Exploded View	169
DTC Logic	149	Removal and Installation	169
C1A24 NP RANGE	150	DISTANCE SENSOR	170
DTC Logic	150	Exploded View	170
Diagnosis Procedure	150	Removal and Installation	170
C1A39 STEERING ANGLE SENSOR	151	SIDE CAMERA	171
AROUND VIEW MONITOR CONTROL UNIT	151	Removal and Installation	171
AROUND VIEW MONITOR CONTROL UNIT :		BSW INDICATOR	172
DTC Logic	151	Removal and Installation	172
AROUND VIEW MONITOR CONTROL UNIT : Di-		AROUND VIEW MONITOR CONTROL UNIT ..	173
agnosis Procedure	151	Exploded View	173
DISTANCE SENSOR	151	Removal and Installation	173
DISTANCE SENSOR : DTC Logic	151	WARNING SYSTEMS SWITCH	174
DISTANCE SENSOR : Diagnosis Procedure	151	Exploded View	174
POWER SUPPLY AND GROUND CIRCUIT ..	152	Removal and Installation	174
AROUND VIEW MONITOR CONTROL UNIT	152	WARNING SYSTEMS BUZZER	175
AROUND VIEW MONITOR CONTROL UNIT : Di-		Exploded View	175
agnosis Procedure	152	Removal and Installation	175
DISTANCE SENSOR	153	REAR VIEW CAMERA	176
DISTANCE SENSOR : Diagnosis Procedure	153	Removal and Installation	176
WARNING SYSTEMS SWITCH CIRCUIT	155	REAR VIEW CAMERA WASHER MOTOR	177
Diagnosis Procedure	155	Exploded View	177
Component Inspection	156	Removal and Installation	177
WARNING SYSTEMS ON INDICATOR CIRCUIT	157	REAR VIEW CAMERA AIR PUMP MOTOR ...	178
Diagnosis Procedure	157	Exploded View	178
Component Inspection	158	Removal and Installation	178
WARNING BUZZER CIRCUIT	159	REAR VIEW CAMERA WASHER CONTROL UNIT	179
Component Function Check	159	Exploded View	179
Diagnosis Procedure	159	Removal and Installation	179
REAR VIEW CAMERA WASHER MOTOR CIRCUIT	161	CHASSIS CONTROL	
Component Function Check	161		
Diagnosis Procedure	161		
SYMPTOM DIAGNOSIS	162		

PRECAUTION	180	Description	214	
PRECAUTIONS	180	CONFIGURATION (CHASSIS CONTROL MODULE)	215	A
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	180	Work Procedure	215	B
Precaution for Work	180	DTC/CIRCUIT DIAGNOSIS	217	
Precautions for Harness Repair	181	C1B92-00 BRAKE CONTROL SYSTEM	217	C
Precautions for Chassis control	181	DTC Description	217	
PREPARATION	182	Diagnosis Procedure	217	
PREPARATION	182	C1B93-00 ENGINE/HEV SYSTEM	219	D
Special Service Tool	182	DTC Description	219	
SYSTEM DESCRIPTION	183	Diagnosis Procedure	219	E
COMPONENT PARTS	183	C1B94-00 TRANSMISSION SYSTEM	221	
Component Parts Location	183	DTC Description	221	F
Chassis Control Module	184	Diagnosis Procedure	221	
SYSTEM	185	C1B95-00 CONTROL MODULE	223	G
System Description - Chassis Control	185	DTC Description	223	
System Description - Active Engine Brake	185	Diagnosis Procedure	223	
System Description - Active Ride Control	186	C1B99-00 CONTROL MODULE	224	H
System Description - Active Trace Control	186	DTC Description	224	
Fail-Safe (Chassis Control Module)	187	Diagnosis Procedure	224	
INFORMATION DISPLAY (COMBINATION METER)	189	C1BA0-00 ADAS/CHASSIS CONTROL BRAKE SYSTEM	225	I
INFORMATION DISPLAY (COMBINATION METER) : Chassis Control Display	189	DTC Description	225	
HANDLING PRECAUTION	191	Diagnosis Procedure	225	
Precautions for Chassis Control (Engine Brake, Active Ride, and Active Trace)	191	C1BA2-00 STEERING ANGLE SENSOR	227	J
DIAGNOSIS SYSTEM (CHASSIS CONTROL MODULE)	192	DTC Description	227	
CONSULT Function	192	Diagnosis Procedure	227	
ECU DIAGNOSIS INFORMATION	197	C1BA5-00 ADAS/CHASSIS CONTROL ENGINE SYSTEM	229	K
CHASSIS CONTROL MODULE	197	DTC Description	229	
Reference Value	197	Diagnosis Procedure	229	L
Fail-Safe (Chassis Control Module)	201	C1BAB-00 STOP LAMP SWITCH	230	
DTC Inspection Priority Chart	202	DTC Description	230	M
DTC Index	203	Diagnosis Procedure	230	
WIRING DIAGRAM	205	C1BB2-00 CONTROL MODULE	232	N
CHASSIS CONTROL	205	DTC Description	232	
Wiring Diagram	205	Diagnosis Procedure	232	
BASIC INSPECTION	211	C1BB3-00 CONTROL MODULE	233	
DIAGNOSIS AND REPAIR WORK FLOW	211	DTC Description	233	DAS
Work Flow	211	Diagnosis Procedure	233	
Diagnostic Work Sheet	212	C1BB4-00 CONTROL MODULE	234	P
ADDITIONAL SERVICE WHEN REPLACING CHASSIS CONTROL MODULE	214	DTC Description	234	
		Diagnosis Procedure	234	
		C1BB5-00 IGNITION POWER SUPPLY	235	
		DTC Description	235	
		Diagnosis Procedure	235	

C1BB6-00 IGNITION POWER SUPPLY	237	Diagnosis Procedure	260
DTC Description	237		
Diagnosis Procedure	237		
C1BB7-00 CONTROL MODULE	239	U1A34-00 BRAKE CONTROL COMMUNICA-	261
DTC Description	239	DTC Description	261
Diagnosis Procedure	239	Diagnosis Procedure	261
C1BB8-00 CONTROL MODULE	240	U1A35-00 BRAKE CONTROL COMMUNICA-	263
DTC Description	240	DTC Description	263
Diagnosis Procedure	240	Diagnosis Procedure	263
C1BB9-00 CONTROL MODULE	241	U1A36-00 BCM/IPDM COMMUNICATION	265
DTC Description	241	DTC Description	265
Diagnosis Procedure	241	Diagnosis Procedure	265
C1BBA-00 CONTROL MODULE	242	U1A39-00 COMBINATION METER COMMU-	267
DTC Description	242	DTC Description	267
Diagnosis Procedure	242	Diagnosis Procedure	267
C1BBB-00 CONTROL MODULE	243	U1A3B-00 TCM COMMUNICATION	269
DTC Description	243	DTC Description	269
Diagnosis Procedure	243	Diagnosis Procedure	269
C1BBC-00 CONTROL MODULE	244	U1A42-00 STEERING ANGLE SENSOR	271
DTC Description	244	DTC Description	271
Diagnosis Procedure	244	Diagnosis Procedure	271
C1BBD-00 VARIANT CODING	245	U1A43-00 STEERING ANGLE SENSOR	273
DTC Description	245	DTC Description	273
Diagnosis Procedure	245	Diagnosis Procedure	273
C1BC0-00 FRONT RIGHT WHEEL SENSOR	246	U1A48-00 ECM/HPCM COMMUNICATION	275
DTC Description	246	DTC Description	275
Diagnosis Procedure	246	Diagnosis Procedure	275
C1BC1-00 FRONT LEFT WHEEL SENSOR ..	248	U1A4A-00 CONTROL MODULE (CAN)	277
DTC Description	248	DTC Description	277
Diagnosis Procedure	248	Diagnosis Procedure	277
C1BC2-00 REAR RIGHT WHEEL SENSOR ..	250	U1A4B-00 CONTROL MODULE (CAN)	278
DTC Description	250	DTC Description	278
Diagnosis Procedure	250	Diagnosis Procedure	278
C1BC3-00 REAR LEFT WHEEL SENSOR	252	U1A4E-00 ECM/HPCM COMMUNICATION ...	279
DTC Description	252	DTC Description	279
Diagnosis Procedure	252	Diagnosis Procedure	279
C1BC4-00 DECEL G SENSOR	254	POWER SUPPLY AND GROUND CIRCUIT ...	281
DTC Description	254	Diagnosis Procedure	281
Diagnosis Procedure	254	SYMPTOM DIAGNOSIS	282
C1BC5-00 SIDE G SENSOR	256	CHASSIS CONTROL	282
DTC Description	256	Active Engine Brake	282
Diagnosis Procedure	256	Active Ride Control	282
C1BC6-00 PRESSURE SENSOR	258	Active Trace Control	283
DTC Description	258	NORMAL OPERATING CONDITION	285
Diagnosis Procedure	258		
U1000-00 CAN COMM CIRCUIT	260		
DTC Logic	260		

Description	285	CHASSIS CONTROL MODULE	286	
REMOVAL AND INSTALLATION	286	Exploded View	286	A
		Removal and Installation	286	B

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000011277159

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

Precaution for Work

INFOID:000000011277160

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and prevent them from being dropped.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with a new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After installation is complete, be sure to check that each part works properly.
- Follow the steps below to clean components:
 - Water soluble dirt:
 - Dip a soft cloth into lukewarm water, wring the water out of the cloth and wipe the dirty area.
 - Then rub with a soft, dry cloth.
 - Oily dirt:
 - Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%) and wipe the dirty area.
 - Then dip a cloth into fresh water, wring the water out of the cloth and wipe the detergent off.
 - Then rub with a soft, dry cloth.
 - Do not use organic solvent such as thinner, benzene, alcohol or gasoline.
 - For genuine leather seats, use a genuine leather seat cleaner.

Precautions For Harness Repair

INFOID:000000011277161

ITS communication uses a twisted pair line. Be careful when repairing it.

PRECAUTIONS


[DRIVER ASSISTANCE SYSTEM]

< PRECAUTION >

- Solder the repaired area and wrap tape around the soldered area.

NOTE:


A fray of twisted lines must be within 110 mm (4.33 in).

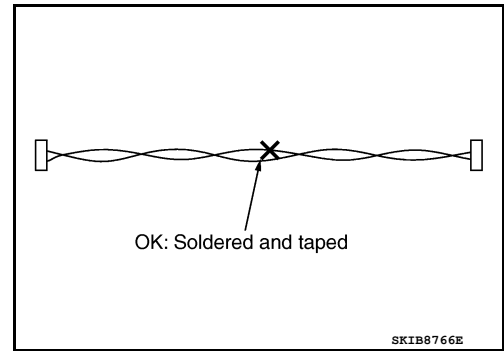

- Bypass connection is never allowed at the repaired area.

NOTE:

Bypass connection may cause ITS communication error. The spliced wire becomes separated and the characteristics of twisted line are lost.

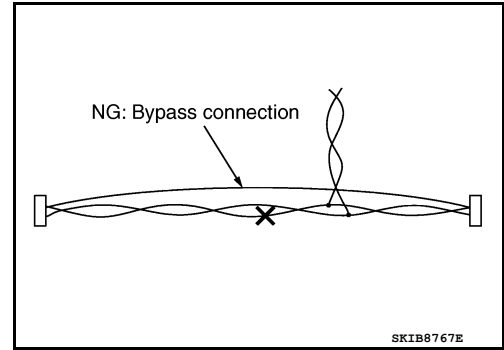

Precautions for Driver Assistance Systems

INFOID:000000011277162

CAUTION:

- Do not use or disassemble the distance sensor removed from the vehicle.
- Erase DTC when replacing parts of FCW system, then check the operation of FCW system after alignment, if necessary.

WARNING:

Be cautious of traffic conditions and other vehicles when performing a road test.

CAUTION:

- Do not use the DAS system when driving with free rollers or on a chassis dynamometer.
- Do not disassemble or alter the rear view camera.
- Do not disable the DAS system without the consent of the customer.

OBSERVE THE FOLLOWING ITEMS IN ORDER TO KEEP THE DAS SYSTEM OPERATING PROPERLY:

Rear view Camera Maintenance

The rear view camera for the DAS system is located in the back door. To keep the DAS system operating properly and prevent a malfunction, be sure to observe the following:

- Always keep the camera lens area clean.
- Do not attach bumper stickers (including transparent materials) or install an accessory near the rear view-camera.
- Do not strike or damage the areas around the rear view camera.
- Do not touch the camera lens (except for cleaning) or remove the rear view camera.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

PREPARATION

< PREPARATION >

[DRIVER ASSISTANCE SYSTEM]




PREPARATION

PREPARATION

Special Service Tool

INFOID:000000011277163

The actual shape of the tools may differ from those illustrated here.

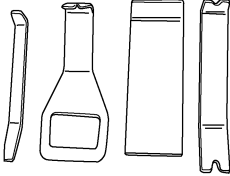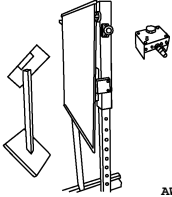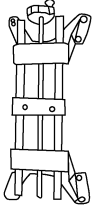Tool number (TechMate No.) Tool name	Description
— (J-46534) Trim Tool Set  AWJIA0483ZZ	Removing trim components
— (1-20-2851-1) Distance Sensor Alignment Kit  AWOIA0016ZZ	Adjusting distance sensor
— (1-20-2722-1-IF) Wheel Adapter  AWOIA0017ZZ	Adjusting distance sensor

COMPONENT PARTS

< SYSTEM DESCRIPTION >


[DRIVER ASSISTANCE SYSTEM]

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:0000000011277164

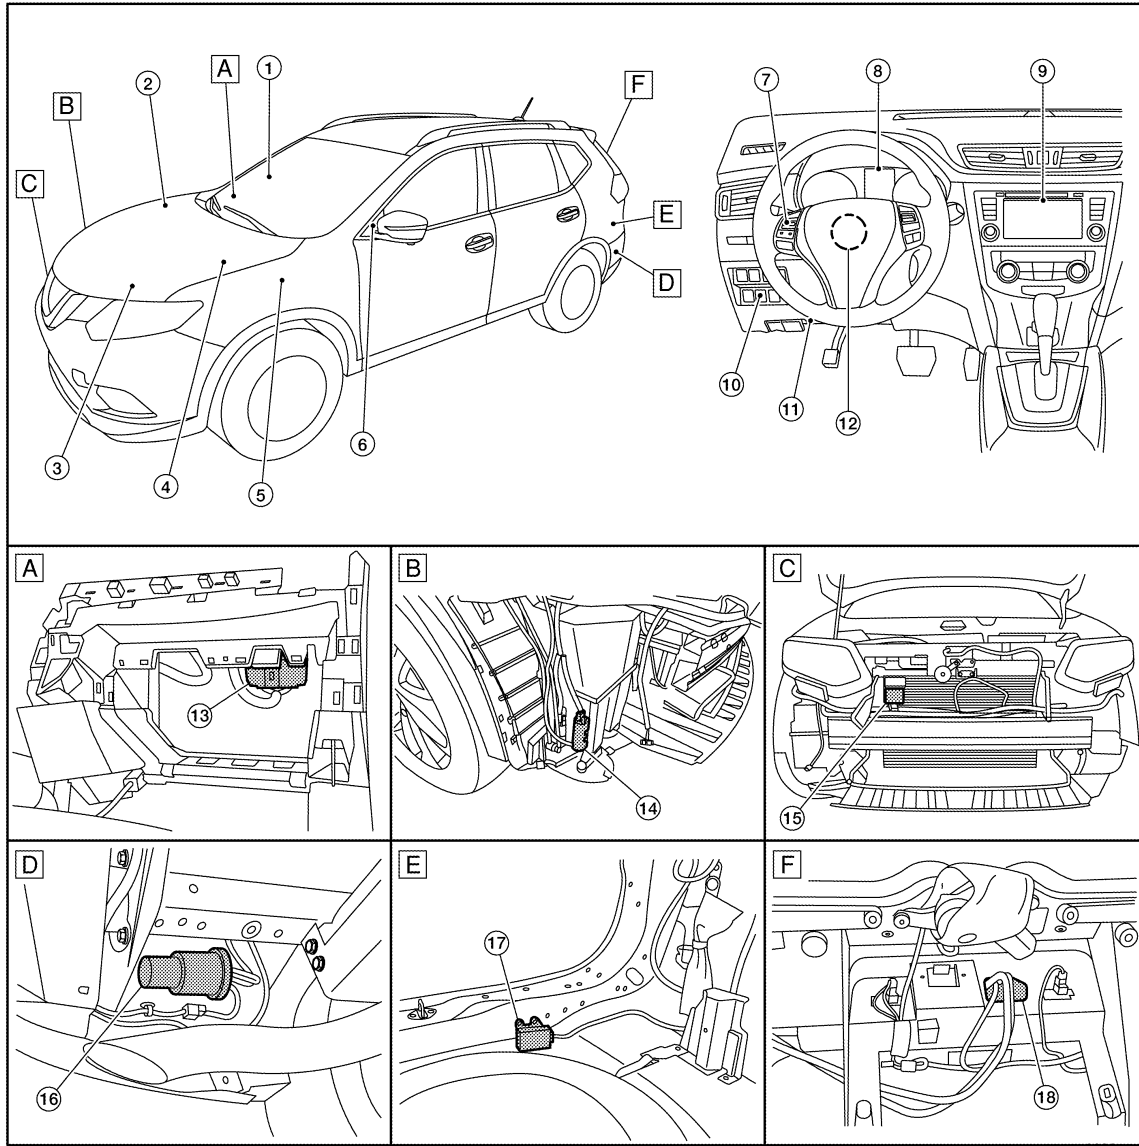

- A. View with glove box assembly removed B. View with front bumper fascia removed C. View with front bumper fascia removed
 D. Rear under body LH E. View with luggage rear plate removed F. View with back door finisher removed

No.	Component	Function
1.	Blind spot warning indicator RH	Refer to DAS-14, "Blind Spot Warning Indicator LH/RH" .
2.	ABS actuator and electric unit (control unit)	Transmits the vehicle speed signal (wheel speed) to around view monitor via CAN communication. Refer to BRC-7, "Component Parts Location" for detailed installation location.
3.	ECM	<ul style="list-style-type: none"> Transmits engine speed signal to around view monitor control unit via CAN communication. Refer to EC-14, "Component Parts Location" for detailed installation location.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

COMPONENT PARTS

< SYSTEM DESCRIPTION >


[DRIVER ASSISTANCE SYSTEM]

No.	Component	Function
4.	TCM	Refer to TM-12, "CVT CONTROL SYSTEM : Component Parts Location" for detailed installation location.
5.	BCM	Transmits the turn indicator signal, dimmer signal, and back door switch signal to around view monitor via CAN communication. Refer to the following for detailed installation location: <ul style="list-style-type: none"> • With Intelligent Key system: BCS-7, "BODY CONTROL SYSTEM : Component Parts Location". • Without Intelligent Key system: BCS-79, "BODY CONTROL SYSTEM : Component Parts Location".
6.	Blind spot warning indicator LH	Refer to DAS-14, "Blind Spot Warning Indicator LH/RH" .
7.	Steering switches	Refer to DAS-13, "Steering Switches" .
8.	Combination meter	<ul style="list-style-type: none"> • Description: DAS-13, "Combination Meter". • Refer to MWI-6, "METER SYSTEM : Component Parts Location" for detailed installation location.
9.	AV control unit	Receives the various systems and camera signals via CAN communication and routes them to the AV control unit display. Refer to AV-80, "Component Parts Location" for detailed installation location.
10.	Warning system switch	Refer to DAS-14, "Warning System Switch" .
11.	Warning system buzzer	Refer to DAS-14, "Warning System Buzzer" .
12.	Steering angle sensor	Transmits the steering angle sensor signal to around view monitor via CAN communication. Refer to BRC-7, "Component Parts Location" for detailed installation location.
13.	Around View [®] Monitor control unit	Refer to DAS-13, "Around View Monitor Control Unit" .
14.	Rear view camera washer motor	Refer to DAS-14, "Rear View Camera Washer Motor" .
15.	Distance sensor	Refer to DAS-12, "Distance Sensor" .
16.	Rear view camera air pump motor	Refer to DAS-13, "Rear View Camera Air Pump Motor" .
17.	Rear view camera washer control unit	Refer to DAS-14, "Rear View Camera Washer Control Unit" .
18.	Rear view camera	Refer to DAS-13, "Rear View Camera" .

Distance Sensor

INFOID:000000011277165


- Distance sensor is installed to the back of the front bumper and detects a vehicle ahead by using millimeter waves.
- Distance sensor detects radar reflected from a vehicle ahead by irradiating radar forward and calculates a distance from the vehicle ahead and relative speed, based on the detected signal.
- Distance sensor transmits the presence/absence of vehicle ahead and the distance from the vehicle to around view monitor control unit via CAN communication.

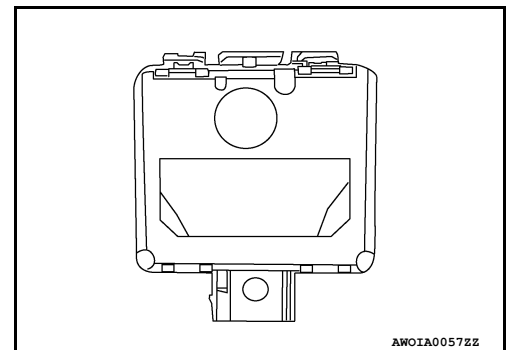

Steering Switches

INFOID:0000000011277166


- Steering switches are installed in the steering wheel.
- Settings for driver assistance systems are possible.
- Switch is connected to the combination meter and signals are transmitted to the around view monitor via CAN communication.

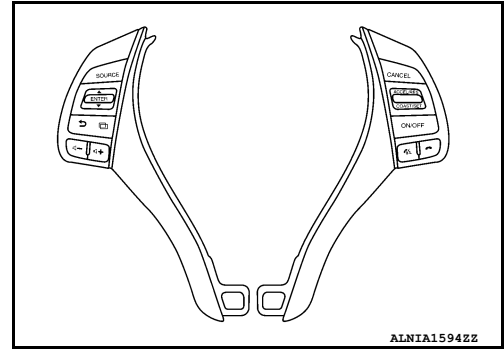

Around View Monitor Control Unit

INFOID:0000000011277167


- The around view monitor control unit is installed behind the glove box.
- Vehicle width guide lines, predicted course line, vehicle front guiding line and vehicle side line, and vehicle icon are displayed and combined with camera images.

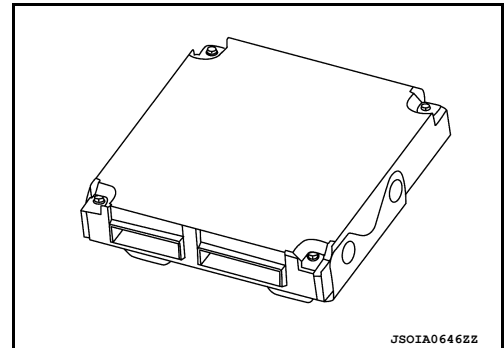

Rear View Camera Air Pump Motor

INFOID:0000000011277168

- Rear view camera air pump motor is installed to the rear left underbody.
- Air pump is activated and generates compressed air when power is supplied from the rear view camera washer control unit.
- Compressed air jets out from the air nozzle of rear view camera via air tube.

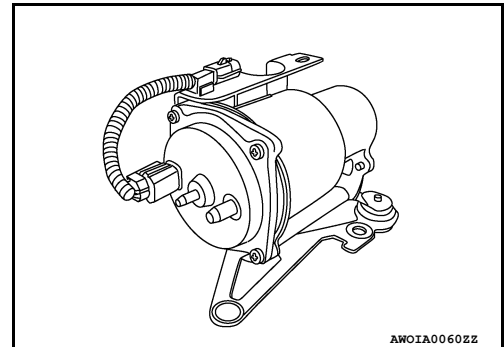

Combination Meter


INFOID:0000000011277169

- Displays the system status according to a signal received.
- Operates the buzzer according to the signal from the distance sensor.

Rear View Camera

INFOID:0000000011277170

- The rear view camera is installed in the back door finisher.
- With the mirror processing function, a mirror image is sent as if it is viewed by a rear view mirror.
- Power for the camera is supplied from the around view monitor control unit, and the image at the rear of the vehicle is sent to the around view monitor control unit.
- The rear view camera is equipped with a washer nozzle and air nozzle for cleaning camera. A check valve is installed to the tube connected to the washer nozzle.

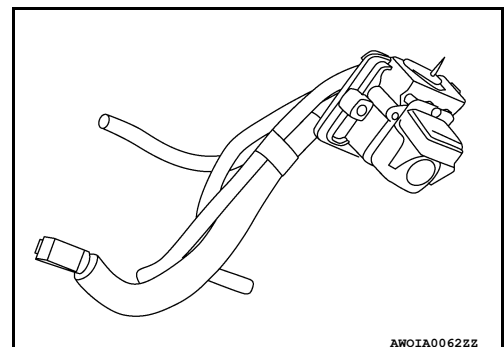

A
B
C
D
E
F
G
H
I
J
K
L
M
N

DAS

P

COMPONENT PARTS


< SYSTEM DESCRIPTION >

[DRIVER ASSISTANCE SYSTEM]

Rear View Camera Washer Control Unit

INFOID:000000011277171


- Rear view camera washer control unit is installed under the luggage rear plate.
- Communicates with around view monitor control unit via serial communication line.
- Activates air pump and washer pump according to the signal from around view monitor control unit.

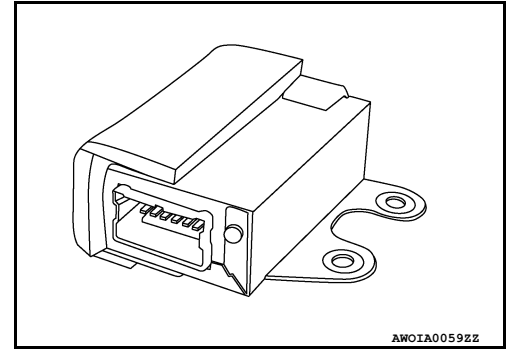

Warning System Buzzer

INFOID:000000011277172


- Warning system buzzer is installed to the back of the instrument lower panel LH.
- When a warning buzzer signal is received from the around view monitor, the buzzer sounds.

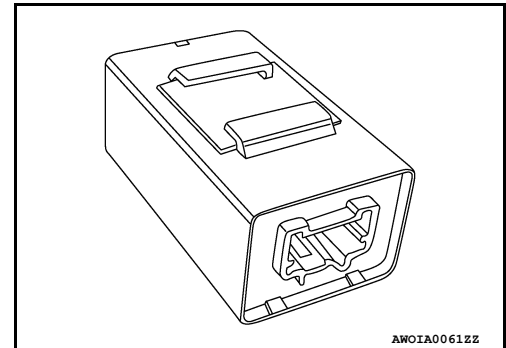

Rear View Camera Washer Motor

INFOID:000000011277173

Washer fluid is sprayed when the rear view camera washer control unit activates the washer motor.

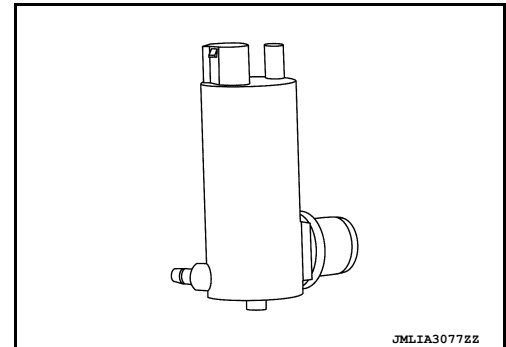

Blind Spot Warning Indicator LH/RH

INFOID:000000011277174

- Installed on the front door corner finisher, the blind spot warning indicator warns the driver by lighting/blinking.
- Receives a blind spot warning indicator operation signal from the around view monitor control unit.

Warning System Switch

INFOID:000000011277175

- Installed to the back of the instrument lower panel LH, the warning system switch is used to activate/deactivate the driver assistance system.
- Transmits a warning system switch signal to the around view monitor control unit.

SYSTEM

[DRIVER ASSISTANCE SYSTEM]

< SYSTEM DESCRIPTION >


SYSTEM

LDW

LDW : System Description

INFOID:000000011277176

SYSTEM DIAGRAM

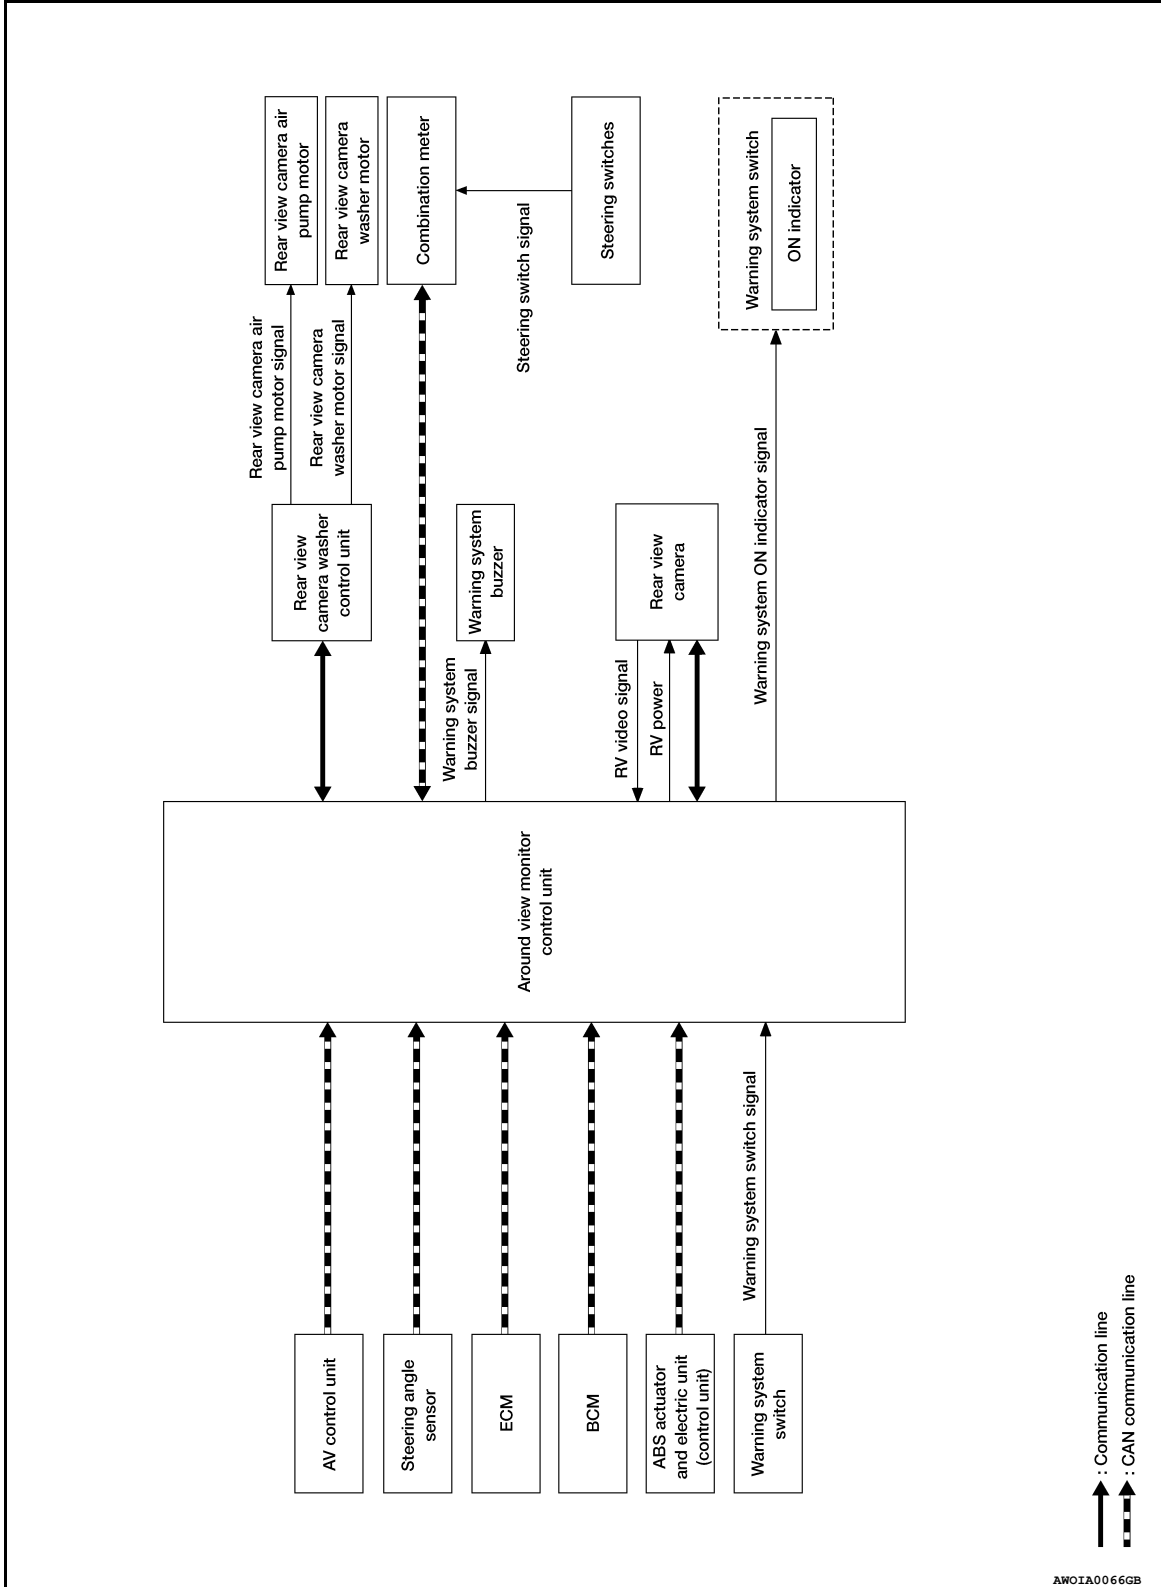

AROUND VIEW MONITOR CONTROL UNIT INPUT/OUTPUT SIGNAL ITEM

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

SYSTEM

< SYSTEM DESCRIPTION >

[DRIVER ASSISTANCE SYSTEM]

Input Signal Item

Transmit unit	Signal name		Description
BCM	CAN communication	Turn indicator signal	Receives an operational state of the turn signal lamp and the hazard lamp.
Combination meter	CAN communication	System selection signal	Receives a selection state of each item in "Driver assistance" selected with the information display.
Steering angle sensor	CAN communication	Steering angle sensor signal	Receives the number of revolutions, turning direction of the steering wheel.
ECM	CAN communication	Engine status signal	Receives the engine status.
Rear view camera	Communication line	Detected lane condition signal	Receives detection results of lane marker.
Warning system switch	Warning system switch signal		Receives an ON/OFF state of the warning system switch.


Output Signal Item

Reception unit	Signal name		Description	
Combination meter	CAN communication	Meter display signal	LDW warning signal	Transmits a meter display signal to turn ON the LDW warning.
			LDW ON indicator signal	Transmits a meter display signal to turn ON the LDW ON indicator.
		Buzzer output signal		Transmits a buzzer output signal to activates the warning buzzer.
Rear view camera washer control unit	Communication line	Rear view camera washer signal		Transmits a rear view camera washer signal to activate the washer motor.
		Rear view camera air blow signal		Transmits a rear view camera air blow signal to activate the air pump.
Warning buzzer	Warning buzzer signal		Activates the warning buzzer.	
Warning system ON indicator	Warning systems ON indicator signal		Turns ON the warning systems ON indicator.	

FUNCTION DESCRIPTION

- Lane Departure Warning (LDW) system provides a lane departure warning function when the vehicle is driven at speeds of approximately 45 MPH (70 km/h) or more.
- When the vehicle approaches either the left or the right side of the traveling lane, a warning will sound and the lane departure warning lamp (orange) on the combination meter will blink to alert the driver.
- The warning does not occur during turn signal operation (Lane change side).
- The warning function will stop when the vehicle returns inside of the lane markers.

EXAMPLE

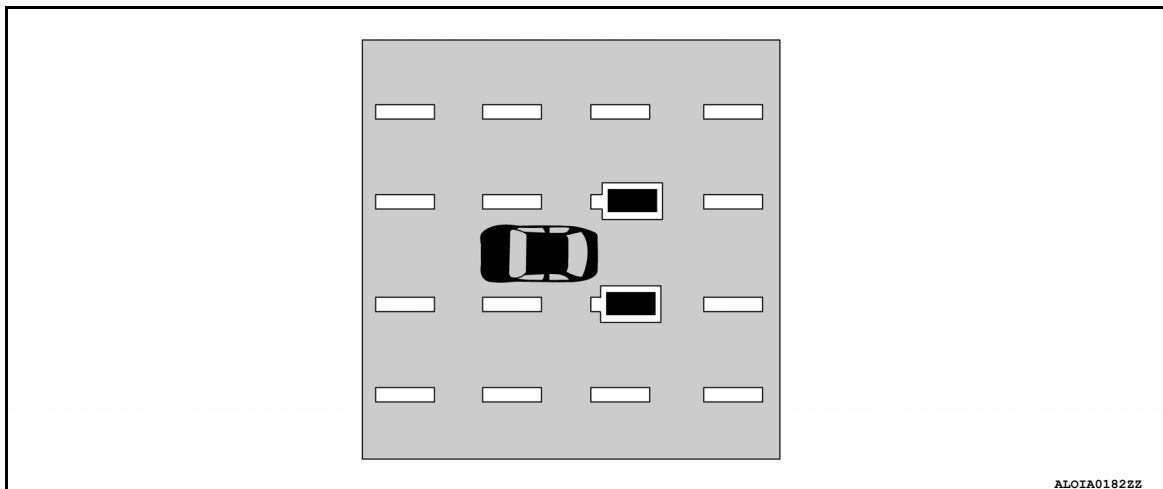

When the vehicle approaches the right lane marker, the driver is alerted by the buzzer and the blinking of lane departure warning lamp (orange).

OPERATION DESCRIPTION

SYSTEM

[DRIVER ASSISTANCE SYSTEM]

< SYSTEM DESCRIPTION >

- The around view monitor control unit enables LDW system.
- When the system is turned ON, the around view monitor control unit transmits a LDW system display signal to combination meter via CAN communication.
- Rear view camera monitors the traveling lane. It transmits the camera image signal to around view monitor control unit.
- When judging from a camera image signal that the vehicle is approaching the lane marker, the around view monitor control unit controls the following item to alert the driver.
 - Activates the warning system buzzer.
 - Around view monitor control unit transmits a LDW system signal to combination meter via CAN communication and blinks the LDW system indicator (“icon”).


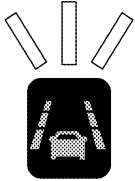
Operating Condition

- LDW indicator: ON
- Warning systems indicator: ON
- Vehicle speed: approximately 45 MPH (70 km/h) or more.
- Turn indicator signal: After 2 seconds or more from turned OFF.
- Back door: Close
- Low washer fluid warning: OFF

NOTE:

- When the LDW system setting on the combination meter is ON.
- LDW system ON/OFF can be set on the combination meter.
- After the operating conditions of warning are satisfied, the warning continues until the vehicle speed reaches approximately 40 MPH (60 km/h).
- The LDW system may not function properly, depending on the situation. Refer to [DAS-35. "Precautions for Lane Departure Warning"](#).

Fail-safe Indication

Vehicle condition/Driver's operation	Warning systems ON indicator	Indication on the combination meter.
When DTC is detected (Except "U1308").	ON	
Camera calibration is not completed ("U1308" is detected). NOTE: This is detected while driving the vehicle and the indication remains ON until the ignition switch is turned OFF.	ON	 JSOIA0736ZZ
When lane markers cannot be detected due to dirt on the camera.	ON	 JSOIA0737ZZ
		<div style="border: 1px solid black; padding: 5px; text-align: center;"> Unavailable: Clean Rear Camera </div> JSOIA0738ZZ




A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

SYSTEM

< SYSTEM DESCRIPTION >

[DRIVER ASSISTANCE SYSTEM]

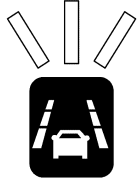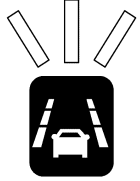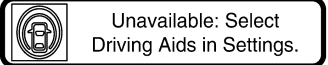Vehicle condition/Driver's operation	Warning systems ON indicator	Indication on the combination meter.
When the washer fluid level is low (Low washer fluid warning ON).	ON	Blinks at intervals of two seconds.  <small>JSOIA0739ZZ</small>
When the back door is open (Back door open warning ON).	ON	Blinks at intervals of two seconds.  <small>JSOIA0739ZZ</small>
Blinks when the setting of LDW and BSW are "OFF" and the warning systems switch is pressed.	OFF	 <small>JSOIA0780ZZ</small>

REAR VIEW CAMERA WASHER OPERATION

- When judging that the rear view camera has water droplets, the around view monitor control unit transmits a rear view camera washer activation signal or rear view camera air blow signal to the rear view camera washer control unit via serial communication.
- When receiving a rear view camera washer signal, the rear view camera washer control unit simultaneously activates the rear view camera washer motor to clean the rear view camera by spraying washer fluid from the nozzle installed to the rear view camera bracket.
- When receiving a rear view camera air blow signal, the rear view camera washer control unit activates the rear view camera air pump motor to clean the rear view camera by blowing air from the nozzle installed to the rear view camera bracket.

OPERATION CONDITION


- Approximately 20 MPH (30 km/h) or more.
- When the around view monitor control unit judges that the rear view camera has water droplets.
- When the low washer fluid warning is OFF.

NOTE:

The camera is cleaned intermittently by spraying washer fluid and blowing air. When the around view monitor control unit judges that dirt on the camera cannot be removed even after approximately 5 minutes from the first detection of dirt, the activation of LDW is canceled.

BSW

SYSTEM DIAGRAM

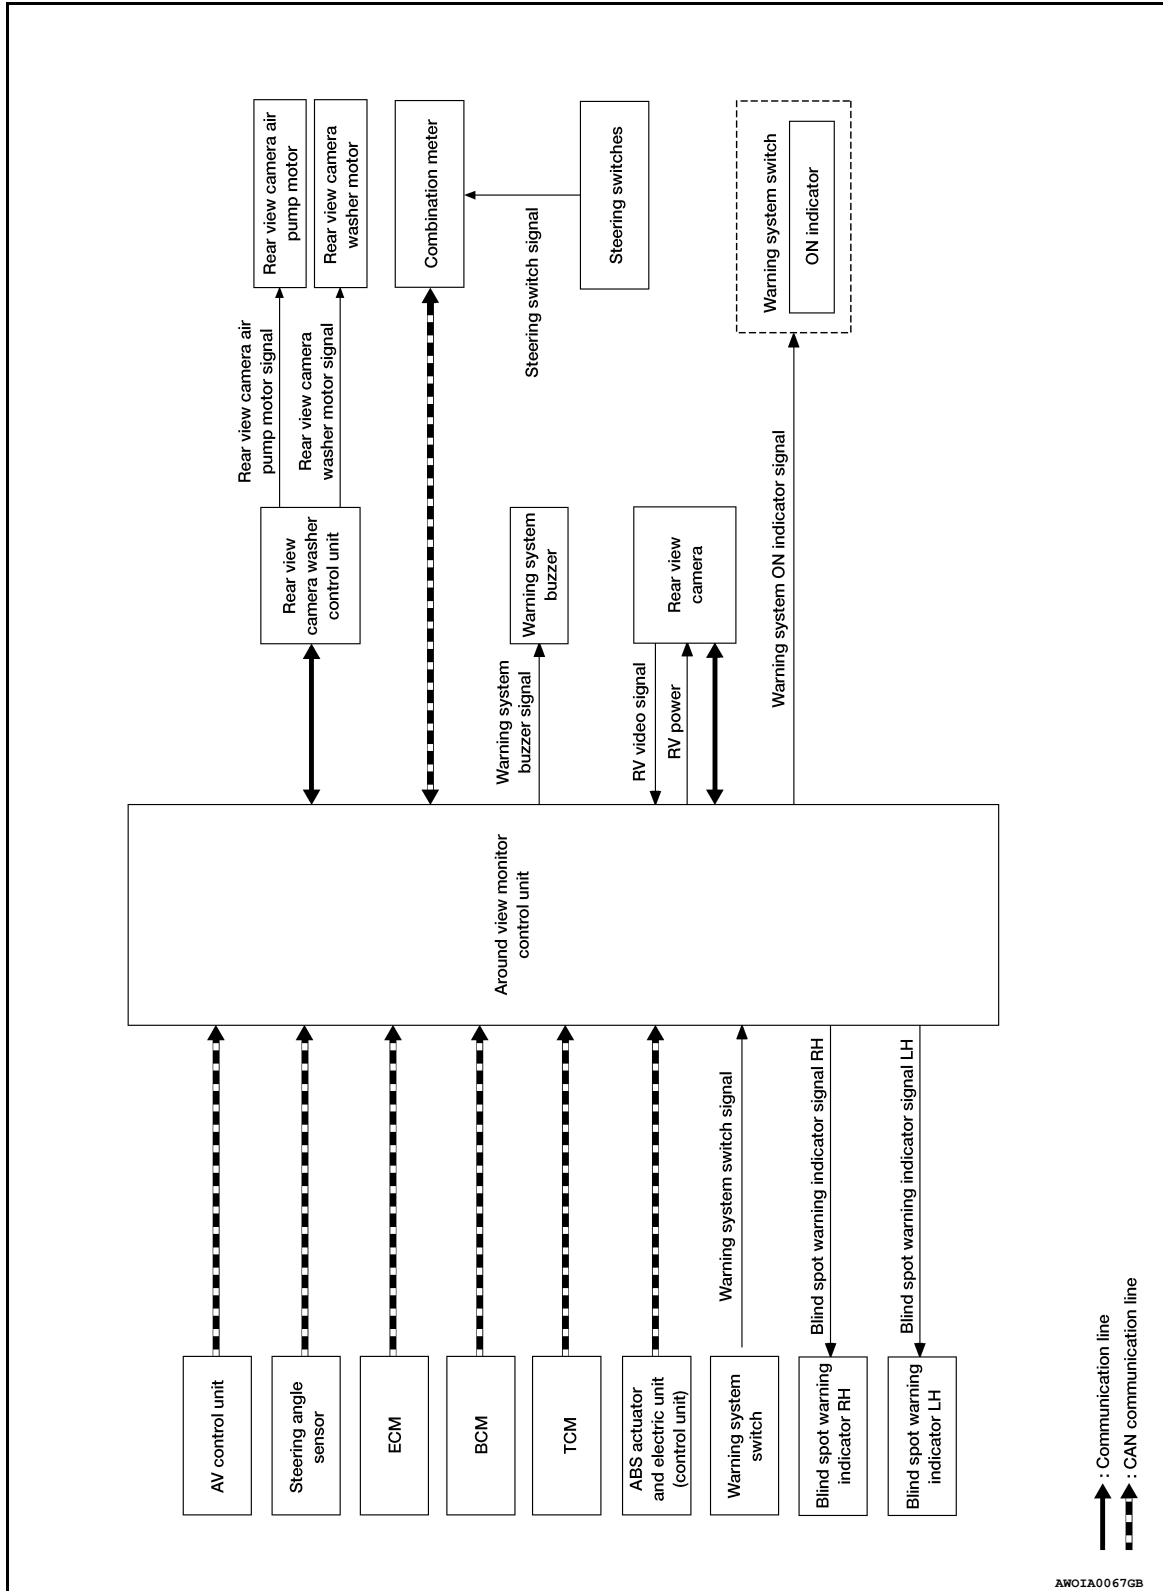

CONTROL UNIT INPUT/OUTPUT SIGNAL ITEM

Control unit receives signals via CAN communication. It also detects vehicle conditions that are necessary for BSW control.

Input Signal Item

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

SYSTEM

< SYSTEM DESCRIPTION >

[DRIVER ASSISTANCE SYSTEM]

Transmit unit	Signal name		Description
BCM	CAN communication	Turn indicator signal	Receives an operational state of the turn signal lamp and the hazard lamp.
		Back door switch signal	Receives a state of the back door switch.
Combination meter	CAN communication	System selection signal	Receives a selection state of each item in "Driver assistance" selected with the combination meter.
Steering angle sensor	CAN communication	Steering angle sensor signal	Receives the number of revolutions, turning direction of the steering wheel.
ECM	CAN communication	Engine status signal	Receives the engine status.
ABS actuator and electric unit (control unit)	CAN communication	Wheel speed signal	Receives wheel speed.
Rear view camera	Communication line	Camera image signal	Receives the camera image signal.
Warning system switch	Warning system switch signal		Receives an ON/OFF state of the warning system switch.

Output Signal Item

Reception unit	Signal name		Description	
Combination meter	CAN communication	Meter display signal	BSW warning signal	Transmits a meter display signal to turn ON the BSW warning.
			BSW ON indicator signal	Transmits a meter display signal to turn ON the BSW ON indicator.
		Buzzer output signal		Transmits a buzzer output signal to activate the warning buzzer.
Rear view camera washer control unit	Communication line	Rear view camera washer signal	Transmits a rear view camera washer motor signal to activate the rear view camera washer motor.	
		Rear view camera air blow signal	Transmits a rear view camera air blow signal to activate the air pump.	
Warning system ON indicator	Warning systems ON indicator signal		Turns ON the warning system ON indicator.	
Warning buzzer	Warning buzzer operation signal		Activates the warning buzzer.	
BSW indicator LH, RH	Indicator operation signal		Turns ON the BSW indicator LH, RH.	

FUNCTION DESCRIPTION


- The BSW system can help alert the driver of other vehicles in adjacent lanes when changing lanes.
- The BSW system uses rear view camera near the rear bumper to detect vehicles in an adjacent lane.
- The rear view camera can detect vehicles on either side of vehicle within the detection zone shown as illustrated.
- This detection zone starts from the back of the vehicle and extends approximately 10 ft. (3.0 m) behind the rear bumper, and approximately 10 ft. (3.0 m) sideways.
- The BSW system operates above approximately 20 MPH (32 km/h).

SYSTEM

< SYSTEM DESCRIPTION >

[DRIVER ASSISTANCE SYSTEM]


- If the rear view camera detects vehicles in the detection zone, the blind spot warning indicator illuminates.

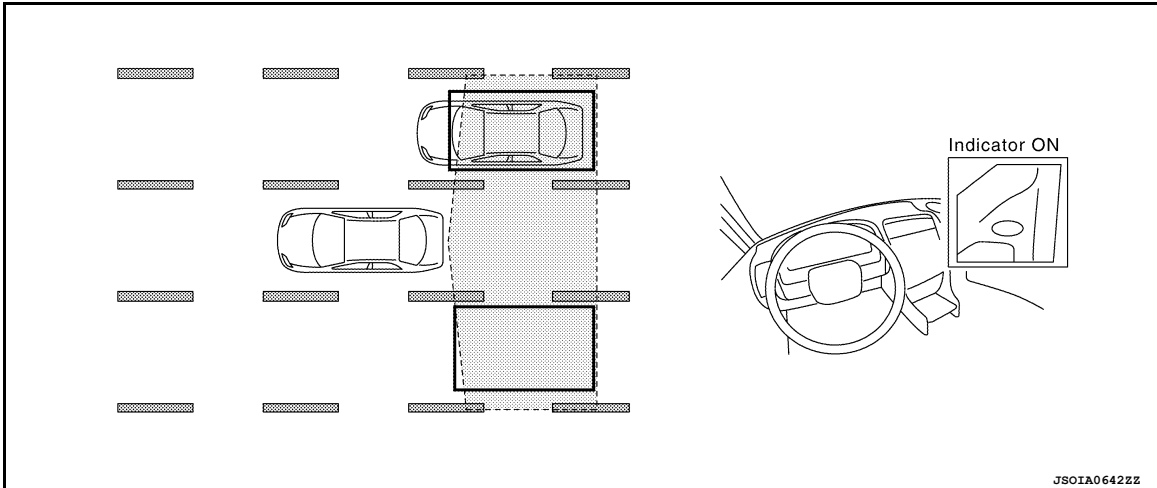

- If the driver then activates the turn signal, a buzzer will sound twice and the blind spot warning indicator will blink.

NOTE:

A buzzer sounds if the rear view camera has already detected vehicles when the driver activates the turn signal. If a vehicle comes into the detection zone after the driver activates the turn signal, then only the blind spot warning indicator blinks and no buzzer sounds.

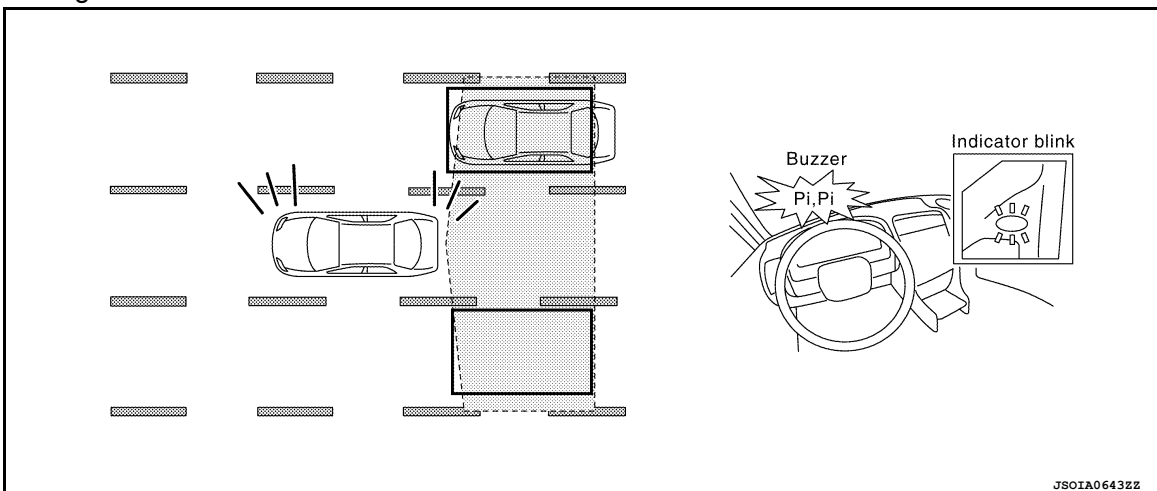

OPERATION DESCRIPTION

- Around view monitor control unit enables BSW system.
- The around view monitor control unit turns on the BSW system when the turned ON by combination meter.
- Rear view camera detects a vehicle in the adjacent lane, and transmits the vehicle detection signal to the around view monitor control unit.
- Around view monitor control unit starts the control as follows, based on a vehicle detection signal and turn signal transmitted from BCM via CAN communication:
 - Buzzer signal transmission to warning buzzer.
 - Around view monitor transmits an indicator operation signal to the BSW indicator.

Operation Condition

- BSW system indicator: ON.
- When the vehicle drives at 20 MPH (32 km/h) or more in the forward direction.

NOTE:

BSW system ON/OFF can be set on the combination meter.

- After the operating conditions of warning are satisfied, the warning continues until the vehicle speed is reduced below approximately 18 MPH (29 km/h).
- The BSW system may not function properly, depending on the situation. Refer to [DAS-36. "Precautions for Blind Spot Warning"](#).

BULB CHECK ACTION AND FAIL-SAFE INDICATION

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS


SYSTEM

< SYSTEM DESCRIPTION >

[DRIVER ASSISTANCE SYSTEM]

Vehicle condition/Driver's operation	Blind Spot Warning/ Blind Spot Intervention indicator	Warning systems ON indicator	Indication on the combination meter.
When DTC is detected.	OFF	ON	OFF → Orange <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: auto;"> <div style="display: flex; justify-content: space-between; align-items: center;"> BSW <div style="text-align: center;"> <p>Malfunction</p> <p>See Owner's Manual</p> </div> </div> <p style="font-size: 8px; margin-top: 5px; text-align: right;">AL01A0172GB</p> </div>
Temporary disabled status.	OFF	ON	BSW light (white) will blink.
When rear view camera needs cleaning.	OFF	ON	Unavailable: Clean Rear Camera.
When the warning system switch is pressed. (When the settings of LDW system and BSW system on the combination meter information screen are "OFF").	OFF	Blink	—

*: Blinking cycle when there is a rear view camera blockage condition or lane camera unit high temperature condition.

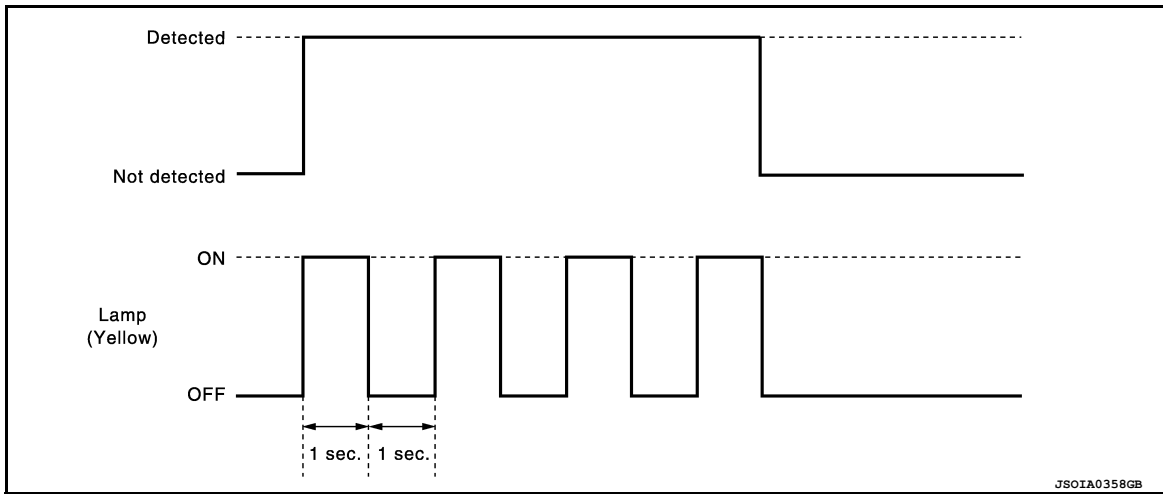






NOTE:
Time shown in the figure is approximate.

FAIL-SAFE INDICATION

SYSTEM

< SYSTEM DESCRIPTION >

[DRIVER ASSISTANCE SYSTEM]

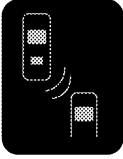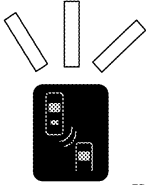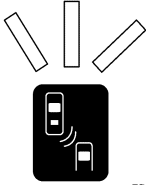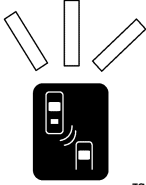Vehicle condition/Driver's operation	BSW indicator	Warning systems ON indicator	Indication on the combination meter.
When DTC is detected.	OFF	ON	 <small>J50IA0749ZZ</small>
When vehicles cannot be detected due to dirt on the rear view camera.	OFF	ON	 <small>J50IA0750ZZ</small>
			<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: auto;"> Unavailable: Clean Rear Camera </div> <small>J50IA0738ZZ</small>
When the washer fluid level is low (Low washer warning ON).	OFF	ON	Blinks at intervals of two seconds.  <small>J50IA0751ZZ</small>
When the back door is open (Back door open warning ON).	OFF	ON	Blinks at intervals of two seconds.  <small>J50IA0751ZZ</small>
Blinks when the setting of LDW and BSW are "OFF" and the warning systems switch is pressed.	OFF	OFF	<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: auto;">  Unavailable: Select Driving Aids in Settings. </div> <small>J50IA0780ZZ</small>

REAR VIEW CAMERA WASHER OPERATION

- When judging that the rear view camera has water droplets, the around view monitor control unit transmits a rear view camera washer activation signal or rear view camera air blow signal to the rear view camera washer control unit via serial communication.
- When receiving a rear view camera washer signal, the rear view camera washer control unit simultaneously activates the rear view camera washer motor to clean the rear view camera by spraying washer fluid from the nozzle installed to the rear view camera bracket.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

SYSTEM

< SYSTEM DESCRIPTION >

[DRIVER ASSISTANCE SYSTEM]

- When receiving a rear view camera air blow signal, the rear view camera washer control unit activates the rear view camera air pump motor to clean the rear view camera by blowing air from the nozzle installed to the rear view camera bracket.

OPERATION CONDITION

- Approximately 20 MPH (30 km/h) or more.
- When the around view monitor control unit judges that the rear view camera has water droplets.
- When the low washer fluid warning is OFF.

NOTE:

The camera is cleaned intermittently by spraying washer fluid and blowing air. When the around view monitor control unit judges that dirt on the camera cannot be removed even after approximately 5 minutes from the first detection of dirt, the activation of BSW is canceled.

MOD

SYSTEM


[DRIVER ASSISTANCE SYSTEM]

< SYSTEM DESCRIPTION >

MOD : System Description

INFOID:000000011277178

SYSTEM DIAGRAM

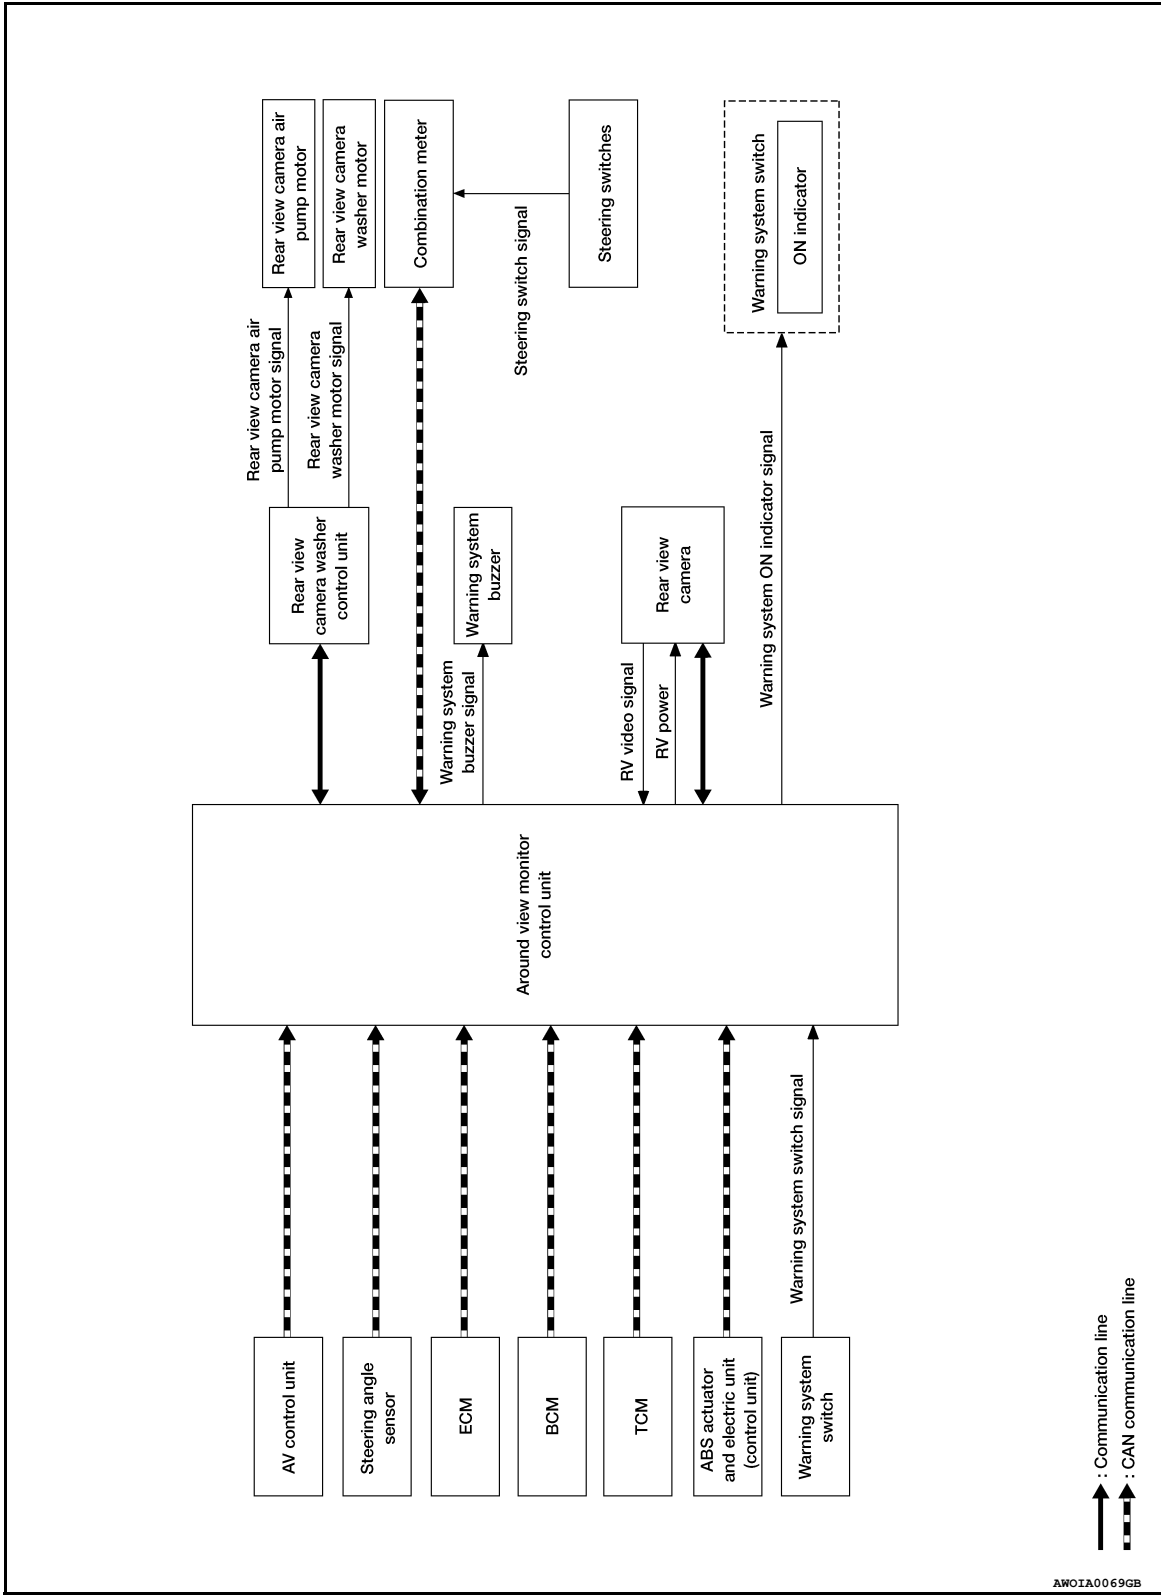

AROUND VIEW MONITOR CONTROL UNIT INPUT/OUTPUT SIGNAL ITEM

Input Signal Item

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

SYSTEM

< SYSTEM DESCRIPTION >

[DRIVER ASSISTANCE SYSTEM]


Transmit unit	Signal name		Description
ECM	CAN communication	Engine speed signal	Receives engine status.
BCM	CAN communication	Back door open status signal	Receives back door open status.
		Light status signal	Receives light status.
		Turn signal	Receives turn signal status.
ABS actuator and electric unit (control unit)	CAN communication	Wheel speed signal	Receives wheel speed.
TCM	CAN communication	Shift selector position signal	Receives shift selector position.
Combination meter	CAN communication	Moving Object Detection ON/OFF signal	Receives the ON/OFF status for Moving Object Detection function.
Rear view camera	Communication line	Video signal	Receives the Rear View Camera image from camera for Moving Object Detection function in around view monitor control unit.

Output Signal Item


Reception unit	Signal name		Description
Warning system buzzer	Warning buzzer signal		Activates the warning buzzer.
AV control unit display	CAN communication	Visual signal request	Transmits a visual signal request from the around view monitor control unit to display Rear View while the shift selector is in R (reverse).

FUNCTION DESCRIPTION

- The Moving Object Detection (MOD) system can help alert the driver of approaching vehicles or objects when the driver is backing out of a parking space.
- The MOD system comprises of the rear view camera as the main detection system, which is located on the back door as illustrated.
- The MOD system operates at speeds below 5 MPH (8 km/h) whenever the vehicle is in R (reverse).

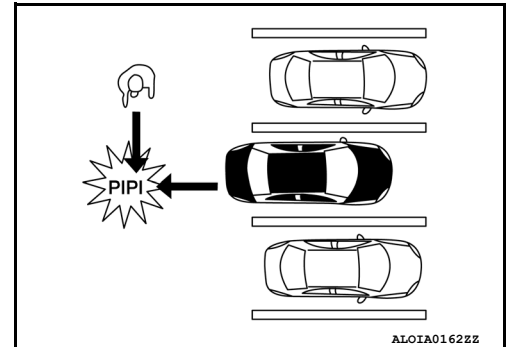

- The MOD system uses the rear view camera to detect approaching objects from either side.

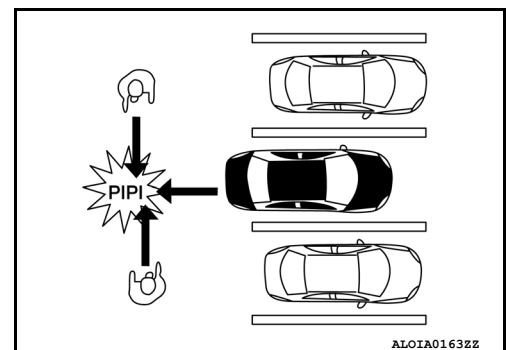


SYSTEM

< SYSTEM DESCRIPTION >

[DRIVER ASSISTANCE SYSTEM]

- The MOD system can detect moving objects on either side out approximately 10 feet (3 m).

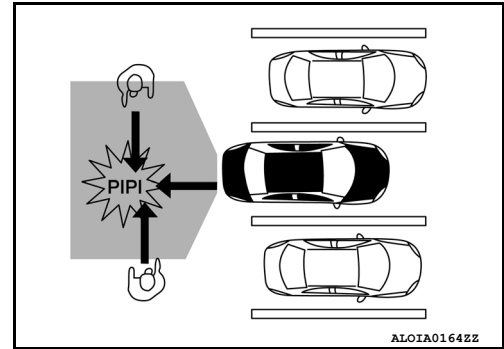

OPERATION DESCRIPTION

- Around view monitor control unit enables Moving Object Detection system.
- AV control unit turns ON the Moving Object Detection (MOD) indicator on the AV control unit display.
- Around view monitor control unit starts the control as follows, based on a moving object detection signal.

Operation Condition

- MOD indicator: ON
- Warning systems indicator: ON
- When the vehicle is moving in R (reverse) at 5 MPH (8 km/h) or less.
- When the MOD system setting on the combination meter is ON.

NOTE:

MOD system ON/OFF can be set on the combination meter.


- Moving Object Detection braking will not operate or will stop operating and only a warning chime will sound under the following conditions:
 - When driving with a tire that is not within normal tire conditions (pressure, wear, chain, spare, etc).
 - When the vehicle is equipped with non-original brake parts or suspension parts.
- Do not use the MOD system when towing a trailer.
- Excessive noise such as the audio system will interfere with the chime sound, and it may not be heard.

FCW

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

SYSTEM DIAGRAM

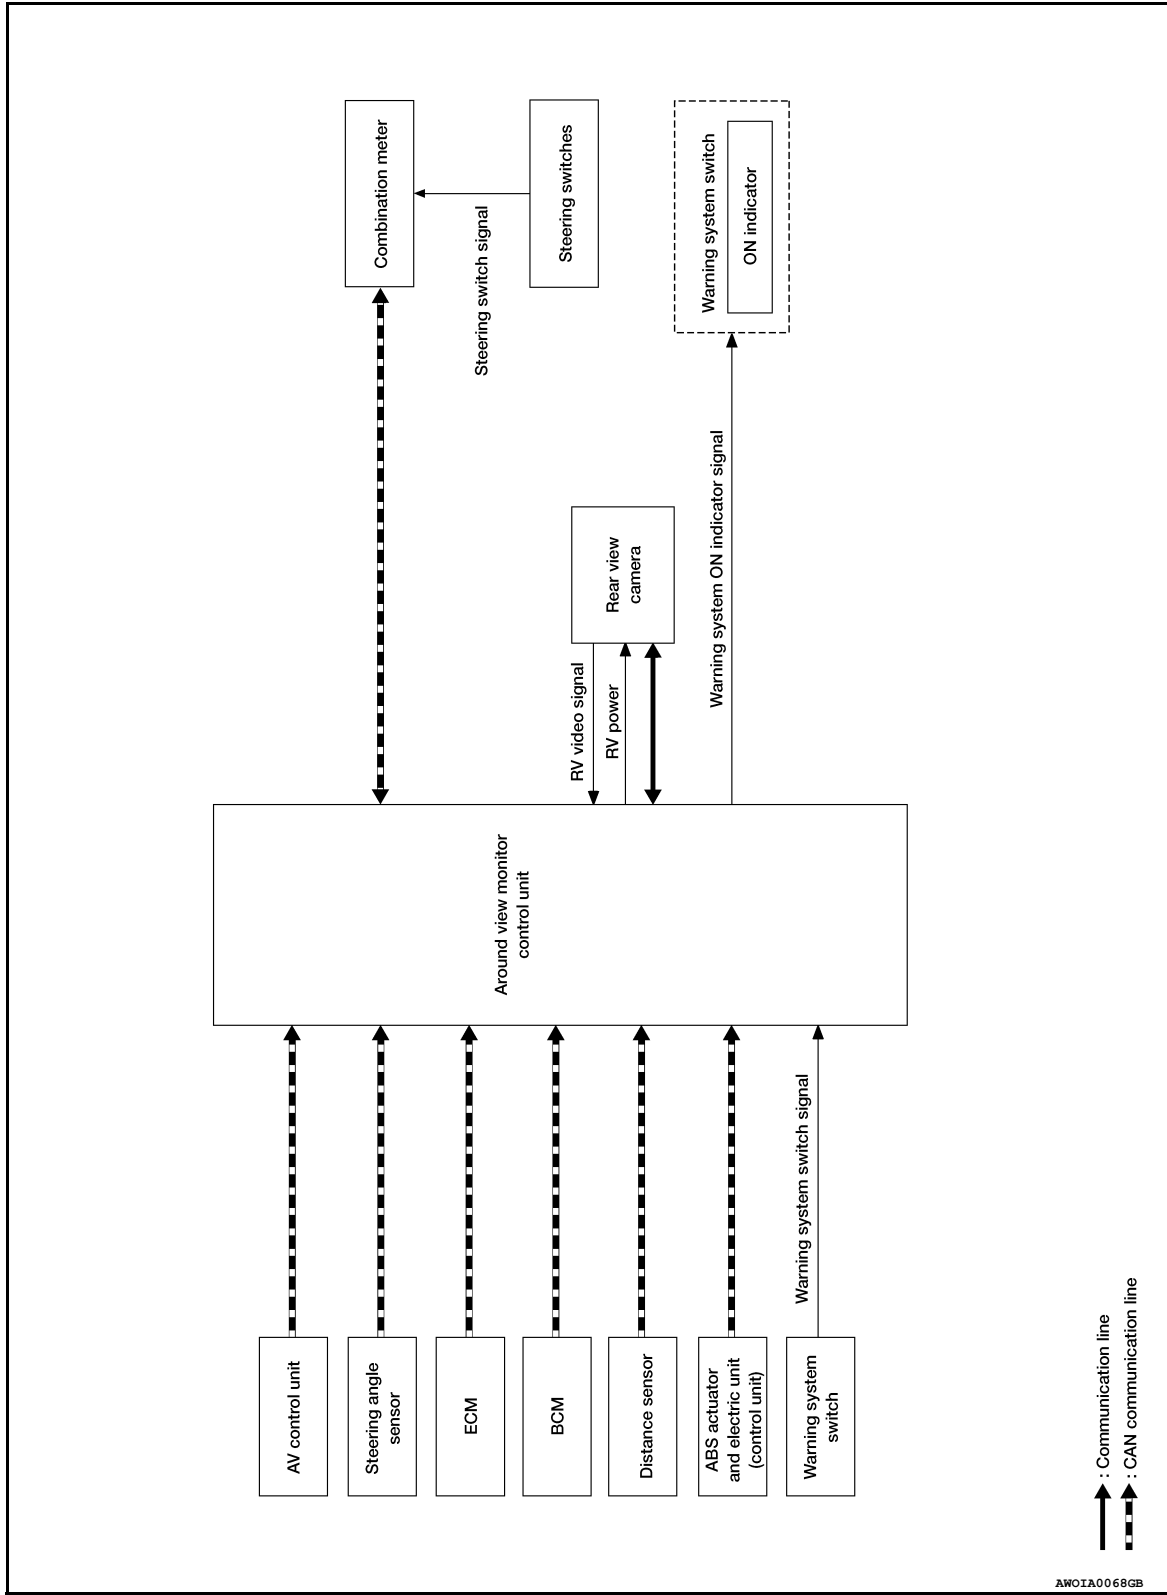

AROUND VIEW MONITOR CONTROL UNIT INPUT/OUTPUT SIGNAL ITEM

Input Signal Item

SYSTEM

< SYSTEM DESCRIPTION >

[DRIVER ASSISTANCE SYSTEM]

Transmit unit	Signal name		Description
ABS actuator and electric unit (control unit)	CAN communication	Wheel speed signal	Receives wheel speed.
Combination meter	CAN communication	System selection signal	Receives a selection state each item in "Driver Aids" selected with the steering switch.
Distance sensor	CAN communication	Distance sensor signal	Receives detection results, such as the presence or absence of a leading vehicle and distance from the vehicle.
Warning system switch	Warning system switch signal		Receives an ON/OFF state of the warning system switch.

Output Signal Item

Reception unit	Signal name		Description
Combination meter	CAN communication	Meter display signal	Transmits a signal to display a state of the system on the information display.
		Buzzer signal	
Distance sensor	CAN communication	Vehicle speed signal	Transmits a vehicle speed calculated by the distance sensor.

DESCRIPTION

- The Forward Collision Warning (FCW) System alerts the driver by a warning lamp (vehicle ahead detection indicator) and chime when own vehicle is getting close to the vehicle ahead in the traveling lane.
- The FCW system will function when own vehicle is driven at speeds of approximately 10 MPH (15 km/h) and above.

FUNCTION DESCRIPTION

The distance from the vehicle ahead and a relative speed are calculated by using the distance sensor signal transmitted to the combination meter via CAN communication. When judging the necessity of warning from the received distance sensor signal, the distance sensor transmits a buzzer signal and warning signal to the combination meter via CAN communication.

FCW Operating Condition

- Warning system switch: ON
- Vehicle speed: Approximately 10 MPH (15 km/h) and above.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS


< SYSTEM DESCRIPTION >

OPERATION

BSW

BSW : Switch Name and Function

INFOID:000000011277180

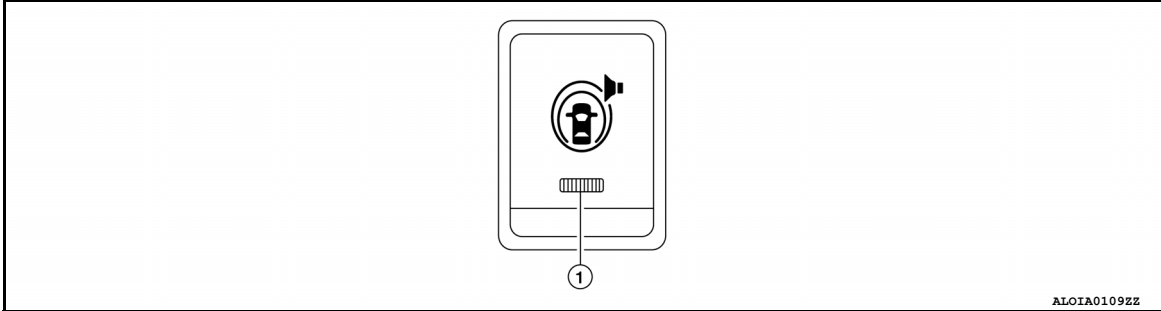


No.	Name	Function
1.	Warning systems switch	Turns BSW system ON/OFF (when the BSW system is enabled on the combination meter information display).

BSW : System Display and Warning

INFOID:000000011277181

INDICATOR AND WARNING LAMP

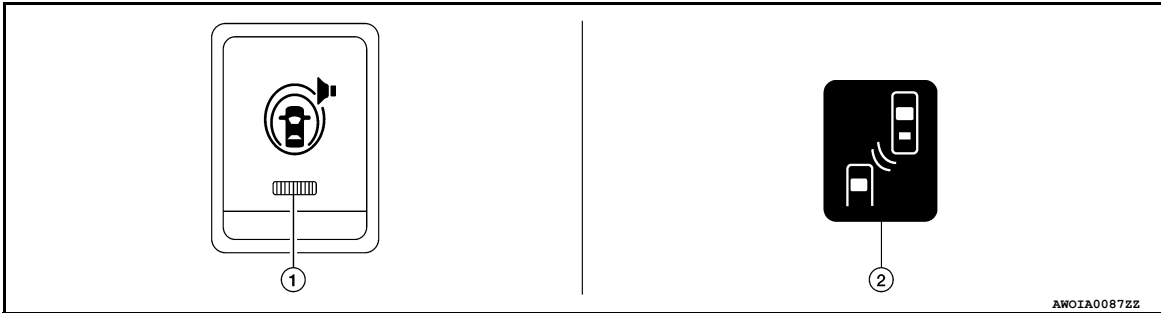

No.	Name	Description
1.	Warning systems ON indicator	Indicates that the LDW system is ON.
2.	Blind Spot Warning lamp (orange)	<ul style="list-style-type: none"> • Turns ON when Blind Spot Warning system is malfunctioning. • Blinks during the following conditions: <ul style="list-style-type: none"> - DTC is detected or system is temporarily disabled. - When rear view camera blockage is detected.

DISPLAY AND WARNING OPERATION




Vehicle condition/Driver's operation				Action	
Warning systems ON indicator	Vehicle speed (Approx.) [km/h (MPH)]	Turn signal condition	Status of vehicle detection within detection area	Indication on the Blind Spot Warning indicator	Buzzer
OFF	—	—	—	OFF	OFF

OPERATION

< SYSTEM DESCRIPTION >

[DRIVER ASSISTANCE SYSTEM]

Vehicle condition/Driver's operation				Action	
Warning systems ON indicator	Vehicle speed (Approx.) [km/h (MPH)]	Turn signal condition	Status of vehicle detection within detection area	Indication on the Blind Spot Warning indicator	Buzzer
ON	Less than approx. 29km/h (18MPH)	—	—	OFF	OFF
	Approx. 32 km/h (20 MPH) or more	—	Vehicle is absent	OFF	OFF
		OFF	Vehicle is detected	ON	OFF
		ON (vehicle detected direction)	Before turn signal operates Vehicle is detected	Blink	Short continuous beep
	Vehicle is detected after turn signal operates		Blink	OFF	

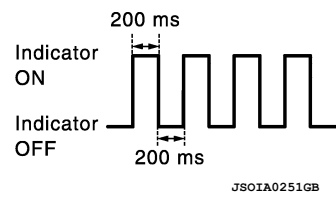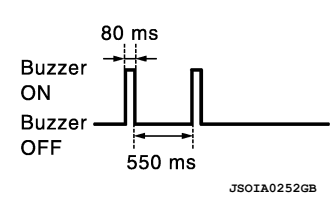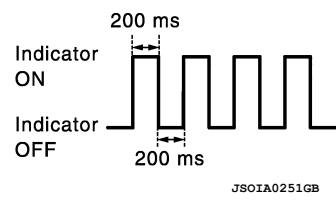


NOTE:

- If vehicle speed exceeds approximately 32 km/h (20 MPH), BSW function operates until the vehicle speed becomes lower than approximately 29 km/h (18 MPH).
- Time shown in the figure is approximate.
- Whenever Blind Spot Warning system is turned off, the warning systems ON indicator remains OFF.

LDW

LDW : Switch Name and Function

INFOID:000000011277182

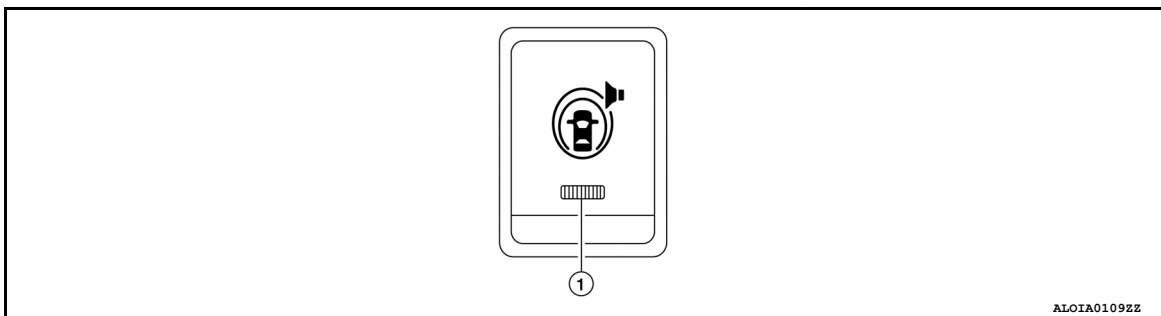

No.	Switch name	Description
1.	Warning systems switch	Turns LDW system ON/OFF (when the LDW system is enabled on the combination meter information display).

OPERATION


< SYSTEM DESCRIPTION >

[DRIVER ASSISTANCE SYSTEM]

LDW : System Display and Warning


INFOID:000000011277183

INDICATOR LAMP AND WARNING LAMP

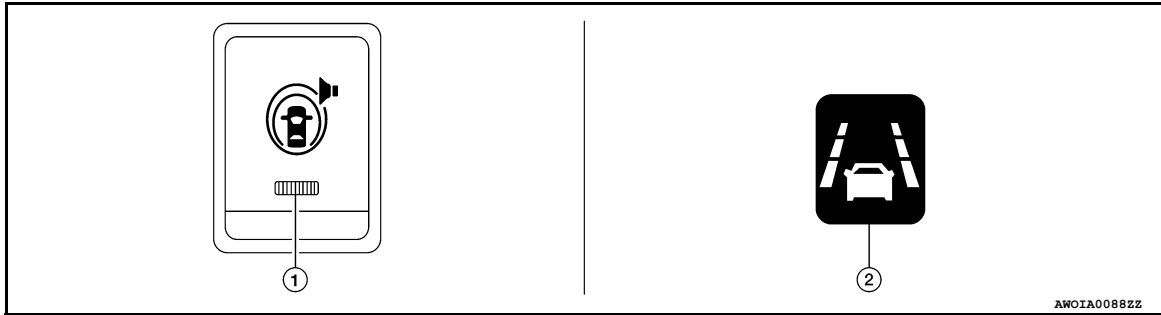

No.	Display item	Description
1.	Warning systems ON indicator	Indicates that the LDW system is ON.
2.	Lane departure warning lamp	<ul style="list-style-type: none"> Blinks when LDW system is activated. Turns ON when LDW system has a malfunction. Blinks when DTC is detected or system is temporarily disabled. Blinks when rear view camera blockage is detected.

DISPLAY AND WARNING

Vehicle condition/Driver's operation	Action	Warning systems ON indicator	Indication on the combination meter	Buzzer
Less than Approx. 60 km/h (40 MPH)	Close to lane marker	No action	White	—
Approx. 70 km/h (45 MPH) or more	Close to lane marker	Warning <ul style="list-style-type: none"> Buzzer sounds Warning lamp blinks (orange) 	OFF (orange) Blink 	Short continuous beeps
	<ul style="list-style-type: none"> Close to lane marker Turn signal ON (Deviate side) 	No action	White	—

NOTE:

After the operating conditions of warning are satisfied, the warning continues until the vehicle speed reaches approximately 60 km/h (40 MPH). Refer to [DAS-15, "LDW : System Description"](#).

MOD

MOD : System Display and Warning

INFOID:000000011277184

INDICATOR AND WARNING LAMP

The MOD system can be turned ON or OFF for the current ignition cycle using the warning system switch. When toggled between ON and OFF, the indicator will appear on the right side of the rear view camera screen.

OPERATION

< SYSTEM DESCRIPTION >

[DRIVER ASSISTANCE SYSTEM]

No.	Name	Description
1.	MOD indicator (blue)	<ul style="list-style-type: none"> • Turns ON while MOD system is ON. • Under the following conditions, the MOD indicator (blue) will blink. <ul style="list-style-type: none"> - When the VDC system (except TCS function) or ABS operates. - When the VDC system is turned off.
	MOD warning lamp (orange)	<ul style="list-style-type: none"> • Turns ON when MOD system is malfunctioning. • Blinks under the following conditions: <ul style="list-style-type: none"> - When the component temperature reaches high level. - When rear view camera blockage is detected.


DISPLAY AND WARNING OPERATION

Vehicle condition/Driver's operation				
Moving Object Detection ON indicator	Vehicle speed (Approx.) [km/h (MPH)]	Status of vehicle detection within detection area.	Indication on the Moving Object Detection indicator.	Buzzer
OFF	—	—	OFF	OFF
Blue	Less than approx. 8 km/h (5 MPH)	Vehicle is detected.	ON	ON
		Vehicle is absent.	ON	OFF
	Approx. 8 km/h (5 MPH) or more	Vehicle is detected.	ON	OFF
		Vehicle is not detected.	ON	OFF

FCW

FCW : Switch Name and Function

INFOID:0000000011277185

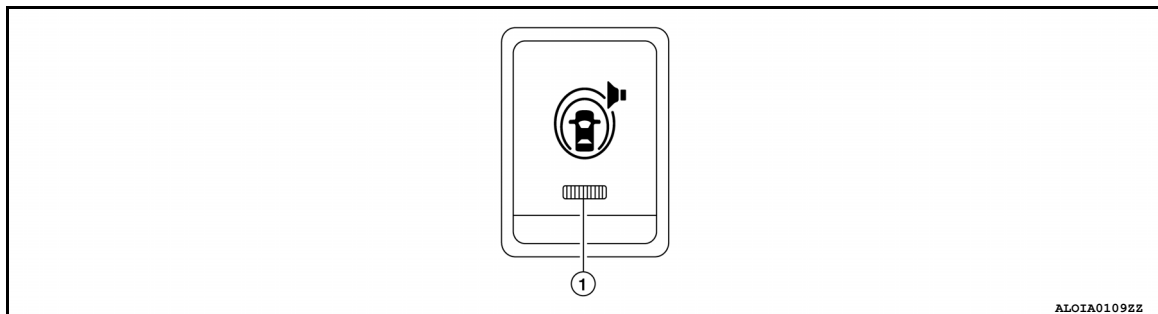


No.	Switch name	Description
1.	Warning systems switch	Turns FCW system ON/OFF (when the FCW system is enabled on the combination meter information display).

FCW : System Display and Warning

INFOID:0000000011277186

INDICATOR LAMP AND WARNING LAMP

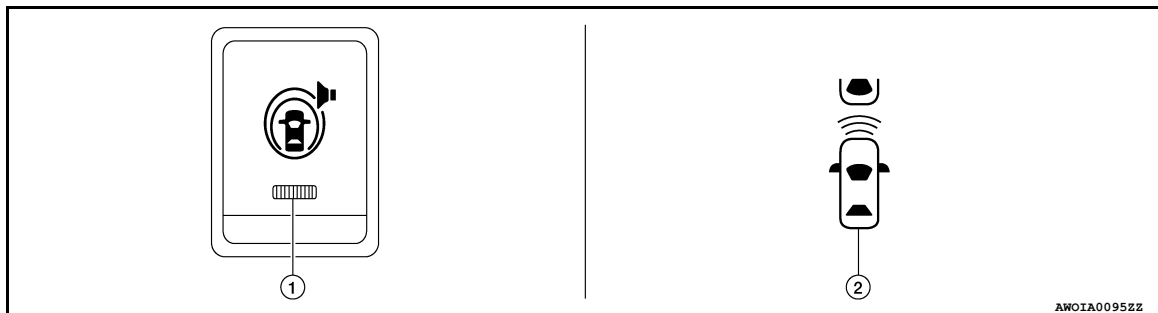

DAS

P



OPERATION

< SYSTEM DESCRIPTION >

[DRIVER ASSISTANCE SYSTEM]

No.	Display item	Description
1.	Warning systems ON indicator	Indicates that the FCW system is ON.
2.	FCW indicator	<ul style="list-style-type: none"> • Indicates that the FCW system is ON (white). • Blinks (white) when the FCW system is activated. • Turns ON (orange) when the FCW system has a malfunction.

DISPLAY

Vehicle condition/Driver's operation		Action	Warning systems ON indicator	Indication on the combination meter	Buzzer
Less than Approx. 10 MPH (15 km/h)	Close to vehicle ahead	No action	ON	FCW indicator (white) ON steady  <small>AWOIA0096ZZ</small>	—
Approx. 10 MPH (15 km/h) or more.	When own vehicle comes close to the vehicle ahead and it is judged that the distance between the vehicles is not sufficient.	<ul style="list-style-type: none"> • Warning buzzer sounds • FCW indicator blinks (white) 	ON	FCW indicator (white) Blinks  <small>AWOIA0096ZZ</small>	Short continuous beeps

HANDLING PRECAUTION

Precautions for Forward Collision Warning

INFOID:0000000011277187

- The forward collision warning system is designed to warn the driver before a collision but will not avoid a collision. It is the driver's responsibility to stay alert, drive safely and be in control of the vehicle at all times.
- The distance sensor does not detect the following objects:
 - Pedestrians, animals, or obstacles in the roadway.
 - Oncoming vehicles.
 - Crossing vehicles.
- The forward collision warning system does not function when a vehicle ahead is a narrow vehicle, such as a motorcycle.
- The distance sensor may not detect a vehicle ahead in the following conditions:
 - Snow or heavy rain.
 - Dirt, ice, snow or other material covering the distance sensor.
 - Contamination or foreign materials adhere to the distance sensor area of the front bumper.
 - The distance sensor area of the front bumper is temporarily fogged.
 - Interference by other radar sources.
 - Snow or road spray from traveling vehicles is splashed.
 - Driving in a tunnel
- When the distance to the vehicle ahead is too close, the beam of the distance sensor is obstructed.
- The distance sensor may not detect a second vehicle when driving on a steep downhill slope or on roads with sharp curves.
- Excessive noise will interfere with the warning tone sound, and it may not be heard.

Precautions for Lane Departure Warning


INFOID:0000000011277188

REAR VIEW CAMERA HANDLING

The rear camera unit "1" for the LDW/BSW systems is located above the rear license plate.

To keep the proper operation of the LDW systems and prevent a system malfunction, be sure to observe the following:

- Always keep the camera lens clean. Be careful not to damage the nozzle of the automatic washer and blower.
- Do not attach "license plate accessories" that reflect light.
- Do not strike or damage the areas around the camera unit.

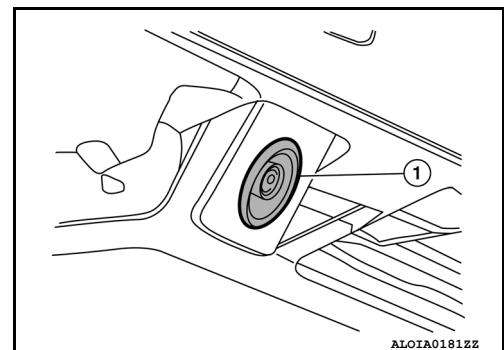

LANE DEPARTURE WARNING (LDW)

- LDW system is only a warning device to inform the driver of a potential unintended lane departure. It will not steer the vehicle or prevent loss of control. It is the driver's responsibility to stay alert, drive safely, keep the vehicle in the traveling lane, and be in control of the vehicle at all times.
- The camera unit may not detect properly under the following conditions:
 - When towing a trailer.
 - When strong light enters the camera unit. (For example, direct sunlight or headlight from the rear.)
 - When ambient light changes instantly. (For example, when the vehicle enters or exits a tunnel or passes under a bridge.)
- Automatic washer and blower may not be able to secure detection capability when excessive dirt adheres on the camera lens.
- Excessive noise (e.g. audio system volume, open vehicle window) will interfere with the chime sound, and it may not be heard.
- The camera unit may not be able to detect properly under the following conditions:

A
B
C
D
E
F
G
H
I
J
K
L
M
N

P

HANDLING PRECAUTION

[DRIVER ASSISTANCE SYSTEM]

< SYSTEM DESCRIPTION >

- On roads where there are multiple parallel lane markers; lane markers that are faded or not painted clearly; yellow painted lane markers; non-standard lane markers; or lane markers covered with water, dirt or snow, etc.
- On roads where the discontinued lane markers are still detectable.
- On roads where there are sharp curves.
- On roads where there are sharply contrasting objects, such as shadows, snow, water, wheel ruts, seams or lines remaining after road repairs. (The LDW system could detect these items as lane markers.)
- On roads where the traveling lane merges or separates.
- When the vehicle's traveling direction does not align with the lane marker.
- When the road surface is very dark due to scarce ambient light or impaired tail lamp.
- When driving on a curved road, warning will be late on the outside of the curve due to the nature of the system.

Precautions for Blind Spot Warning


INFOID:000000011277189

REAR VIEW CAMERA HANDLING

The rear camera unit (1) for the LDW/BSW systems is located above the rear license plate.

To keep the proper operation of the LDW systems and prevent a system malfunction, be sure to observe the following:

- Always keep the camera lens clean. Be careful not to damage the nozzle of the automatic washer and blower.
- Do not attach "license plate accessories" that reflect light.
- Do not strike or damage the areas around the camera unit.

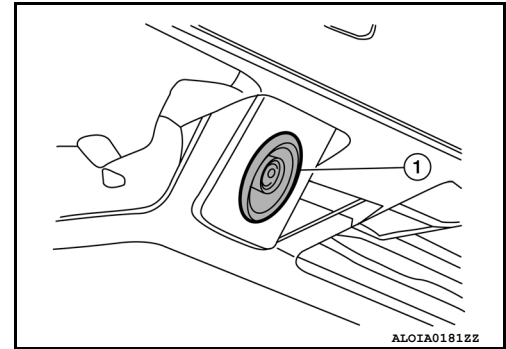

BLIND SPOT WARNING (BSW)

- BSW system is not a replacement for proper driving procedure and is not designed to prevent contact with vehicles or objects. When changing lanes, always use the side and rear mirrors and turn and look in the direction you will move to ensure it is safe to change lanes. Never rely solely on the BSW system.
- The camera unit may not detect properly under the following conditions:
 - When towing a trailer.
 - When strong light enters the camera unit. (For example, direct sunlight or headlight from the rear.)
 - When ambient light changes instantly. (For example, when the vehicle enters or exits a tunnel or passes under a bridge.)
- Automatic washer and blower may not be able to secure detection capability when excessive dirt adheres on the camera lens.
- Excessive noise (e.g. audio system volume, open vehicle window) will interfere with the chime sound, and it may not be heard.
- The camera unit may not be able to detect when certain objects are present such as:
 - Pedestrians, bicycles, animals.
 - Several types of vehicles such as motorcycles.
 - Oncoming vehicles.
 - A vehicle approaching rapidly from behind
 - A vehicle which your vehicle overtakes rapidly.
- The camera unit may not be able to detect properly when your vehicle travels beside the middle section of a vehicle with a long wheelbase (e.g., trailer truck, semi-trailer, tractor).
- The camera unit is designed to ignore most stationary objects, however objects such as guardrails, walls, foliage and parked vehicles may occasionally be detected. This is a normal operating condition.
- The camera unit may detect reflection image of vehicles or roadside objects that are not actually in the detection zone, especially when the road is wet.

HANDLING PRECAUTION

< SYSTEM DESCRIPTION >

[DRIVER ASSISTANCE SYSTEM]

Precautions for Moving Objects Detection

INFOID:000000011277190

REAR VIEW CAMERA HANDLING

- The rear view camera is located on the back door.
- Always keep the rear view camera lens clean.
- Do not attach a sticker (including transparent material), install an accessory or paint work over the camera lens.
- Do not strike or scratch the lens causing physical damage to the camera or the surrounding area.

MOVING OBJECT DETECTION

- The Moving Object Detection system is not a replacement for proper driving procedure and is not designed to prevent contact with vehicles or objects. When backing up, always look in the direction driver will move to ensure it is safe to proceed. Never rely solely on the Moving Object Detection system.
- Using the Moving Object Detection system under some road or weather conditions could lead to improper system operation. Always rely on driver's own steering and braking operation to avoid accidents.
- The Moving Object Detection system may not provide a warning for vehicles that pass through the detection zone quickly.
- Do not use the Moving Object Detection system when towing a trailer.
- Excessive noise (e.g., audio system volume, open vehicle window) will interfere with the chime sound, and it may not be heard.
- The rear view camera may not be able to detect and activate Moving Object Detection when certain objects are present such as:
 - Pedestrians, bicycles, animals.
 - A vehicle passing at a speed greater than approximately 15 MPH (24km/h).
 - Severe weather or road spray conditions may reduce the ability of the radar to detect other vehicles.
- Do not use the MOD system under the following conditions because the system may not function properly:
 - When driving with a tire that is not within normal tire condition (example: tire wear, low pressure, spare tire, chain, non-standard wheels).
 - When the vehicle is equipped with non-original brake parts or suspension parts.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

DIAGNOSIS SYSTEM (AROUND VIEW MONITOR CONTROL UNIT)

< SYSTEM DESCRIPTION >

[DRIVER ASSISTANCE SYSTEM]

DIAGNOSIS SYSTEM (AROUND VIEW MONITOR CONTROL UNIT)

CONSULT Function

INFOID:000000011444766

CONSULT FUNCTIONS

CONSULT performs the following functions via communication with the around view monitor control unit:

Direct Diagnostic Mode	Description
Ecu Identification	The around view monitor control unit part number is displayed.
Self Diagnostic Result	The around view monitor control unit self diagnostic results are displayed.
Data Monitor	The around view monitor control unit input/output data is displayed in real time.
Work support	The settings for around view monitor control unit functions can be changed.
Configuration	<ul style="list-style-type: none">The vehicle specification can be read and saved.The vehicle specification can be written when replacing around view monitor control unit.
CAN Diag Support Mntr	The result of transmit/receive diagnosis of CAN communication is displayed.

ECU IDENTIFICATION

The part number of around view monitor control unit is displayed.

SELF DIAGNOSTIC RESULT

Refer to [DAS-46. "DTC Index"](#).

DATA MONITOR

Monitor Item	Description
ST ANGLE SENSOR SIGNAL [On/Off]	Indicates condition of steering angle sensor signal.
REVERSE SIGNAL [On/Off]	Indicates selector lever position.
VEHICLE SPEED SIGNAL [mph/km/h]	Indicates condition of vehicle speed signal.
CAMERA SWITCH SIGNAL [On/Off]	Indicates condition of camera switch signal.
CAMERA OFF SIGNAL [On/Off]	Indicates condition of camera OFF signal.
ST ANGLE SENSOR TYPE [Absolute]	Indicates steering angle sensor type.
ST GEAR RATIO TYPE [Type O]	Indicates steering gear ratio type.
STEERING POSITION [LHD/RHD]	Indicates LH or RH drive type.
REAR CAMERA IMAGE SIGNAL [OK/NG]	Indicates condition of camera image signal.
WASH SW [On/Off]	Indicates state of wash switch indicator output.
R-CAMERA COMM STATUS [OK/Not]	Indicates status of rear camera communication.
R-CAMERA COMM LINE [OK/Not]	Indicates condition of rear camera communication line.
F-CAMERA IMAGE SIGNAL [OK/NG]	Indicates condition of camera image signal.
DR-SIDE CAMERA IMAGE SIG [OK/NG]	Indicates condition of camera image signal.
PA-SIDE CAMERA IMAGE SIG [OK/NG]	Indicates condition of camera image signal.
PUMP COMM STATUS [OK/Not]	Indicates state of communication signal from pump control unit.
ILL [On/Off]	Indicates status of illumination signal.
ITS SW 1 [On/Off]	Indicates state of warning system switch.
ITS SW 1 IND [On/Off]	Indicates state of warning system switch indicator output.
TURN SIGNAL [Left/N/Right]	Indicates status of turn signal output.
ITS SW 2 [ON/OFF/No setting]	Indicates state of warning system secondary switch.
ITS SW 2 IND [ON/OFF/No setting]	Indicates state of warning system secondary switch indicator output.

ACTIVE TEST

DIAGNOSIS SYSTEM (AROUND VIEW MONITOR CONTROL UNIT)

< SYSTEM DESCRIPTION >

[DRIVER ASSISTANCE SYSTEM]

Test item	Description
LED RH INDICATOR	This test is able to check RH LED indicator operation [LED Off/LED On].
LED LH INDICATOR	This test is able to check LH LED indicator operation [LED Off/LED On].
WASH ACTIVE	This test is able to check rear camera wash operation [WASH Off/WASH On].
AIR ACTIVE	This test is able to check rear camera air operation [AIR Off/AIR On].
AIR & WASH ACTIVE	This test is able to check rear camera air and wash operation [Off/On].
AVM BUZZER CONTROL	This test is able to check AVM buzzer operation [Off/On].

WORK SUPPORT

Support Item	Setting	Description
REAR CAMERA ITS	—	Displays and sets camera image calibration values.
CAUSE OF LDW CANCEL	—	Displays the information about reason of LDW cancellation.
CAUSE OF BSW CANCEL	—	Displays the information about reason of BSW cancellation.
CALIBRATING CAMERA IMAGE (FRONT CAMERA)	STATUS	Performs calibration of front camera.
	AXIS X	
	AXIS Y	
	ROTATE	
CALIBRATING CAMERA IMAGE (PASS-SIDE CAMERA)	STATUS	Performs calibration of passenger side camera.
	AXIS X	
	AXIS Y	
	ROTATE	
CALIBRATING CAMERA IMAGE (DR-SIDE CAMERA)	STATUS	Performs calibration of driver side camera.
	AXIS X	
	AXIS Y	
	ROTATE	
CALIBRATING CAMERA IMAGE (REAR CAMERA)	STATUS	Performs calibration of rear camera.
	AXIS X	
	AXIS Y	
	ROTATE	
FINE TUNING OF BIRDS-EYE VIEW	STATUS	Confirmation and adjustment of difference between each camera can be performed.
	SELECT	
	AXIS X	
	AXIS Y	
	ROTATE	
REAR WIDE-VIEW FIXED GUIDE LINE CORRECTION	STATUS	Adjusts position of fixed guide line on rear wide view
	AXIS X	
	AXIS Y	
	Pattern	
FRONT WIDE-VIEW FIXED GUIDE LINE CORRECTION	STATUS	Adjusts position of fixed guide line on front wide view
	AXIS X	
	AXIS Y	
	Pattern	
NON-VIEWABLE AREA REMINDER	ON	ON/OFF setting of non-viewable area can be performed.
	OFF	

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

DIAGNOSIS SYSTEM (AROUND VIEW MONITOR CONTROL UNIT)

< SYSTEM DESCRIPTION >

[DRIVER ASSISTANCE SYSTEM]

Support Item	Setting	Description
PREDICTIVE COURSE LINE DISPLAY	ON	ON/OFF setting of predictive course line display can be performed.
	OFF	
INITIALIZE CAMERA IMAGE CALIBRATION	—	Factory image calibration restoration can be performed.
STEERING ANGLE SENSOR ADJUSTMENT	—	Steering angle sensor neutral position adjustment can be performed.

CONFIGURATION

Refer to [AV-280. "CONFIGURATION \(AV CONTROL UNIT\) : Description"](#).

CAN DIAG SUPPORT MNTR

Refer to [LAN-14. "CAN Diagnostic Support Monitor"](#).

DIAGNOSIS SYSTEM (DISTANCE SENSOR)

< SYSTEM DESCRIPTION >

[DRIVER ASSISTANCE SYSTEM]

DIAGNOSIS SYSTEM (DISTANCE SENSOR)

CONSULT Function (LASER/RADAR)

INFOID:0000000011277192

APPLICATION ITEMS

CONSULT performs the following functions via CAN communication with Distance sensor.

Diagnosis mode	Description
Self Diagnostic Result	Displays malfunctioning system memorized in Distance sensor.
Data Monitor	Displays real-time input/output data of Distance sensor.
Active Test	Distance sensor activates outputs to components.
Work support	It can monitor the adjustment direction indication in order to perform the radar alignment operation smoothly.
ECU Identification	Displays Distance sensor part number.
CAN Diag Support Monitor	Monitor the reception status of CAN communication viewed from Distance sensor.

SELF DIAGNOSTIC RESULT

Refer to [DAS-48, "DTC Index"](#).

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitored item [Unit]	Description
VHCL SPEED SE [mph] or [km/h]	Vehicle speed signal received from ABS actuator and electric unit (control unit) via CAN communication.
YAW RATE [deg/s]	Yaw rate signal received from ABS actuator and electric unit (control unit) via CAN communication.
PWR SUP MONI [V]	Indicates IGN voltage input by Distance sensor.
DISTANCE [feet]	Indicates the distance from the vehicle ahead.
RELATIVE SPD [fps]	Indicates the relative speed of the vehicle ahead.
LASER OFFSET [deg]	NOTE: The item is indicated, but not used.
LASER HEIGHT [deg]	NOTE: The item is indicated, but not used.
STEERING ANGLE [deg]	The steering angle is displayed.
STRG ANGLE SPEED [deg/s]	The steering angle speed is displayed.
L/R ADJUST [deg]	Indicates a horizontal correction value of the radar.
U/D ADJUST [deg]	Indicates a vertical correction value of the radar.

WORK SUPPORT

Work support items	Description
MILLIWAVE RADAR ADJUST	Outputs millimeter waves, calculates dislocation of the millimeter waves, and indicates adjustment direction.

Distance sensor alignment

DIAGNOSIS SYSTEM (DISTANCE SENSOR)

[DRIVER ASSISTANCE SYSTEM]

< SYSTEM DESCRIPTION >

Refer to [DAS-72. "Description"](#).

ACTIVE TEST

Test item	Description
ICC BUZZER	This test is able to check FCW warning chime operation [On/Off] in the combination meter.
METER LAMP	This test is able to check FCW warning indicator operation [On/Off] in the combination meter information display.

AROUND VIEW MONITOR CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

[DRIVER ASSISTANCE SYSTEM]

ECU DIAGNOSIS INFORMATION

AROUND VIEW MONITOR CONTROL UNIT

Reference Value

INFOID:0000000011444767

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition	Value/Status
CAMERA OFF SIGNAL	CAMERA switch ON.	Off
	CAMERA switch OFF.	On
CAMERA SWITCH SIGNAL	CAMERA switch OFF.	Off
	CAMERA switch ON.	On
DR-SIDE CAMERA IMAGE SIG	Side camera LH inoperative.	NG
	Side camera LH operative.	OK
ILL	Illumination is ON	On
	Illumination is OFF	Off
ITS SW 1	ITS switch is pressed	On
	ITS switch is not pressed	Off
ITS SW 1 IND	Indicator of ITS switch 1 is lighting	On
	Indicator of ITS switch 1 is not lighting	Off
ITS SW 2	For this vehicle, the displaying is fixed	No SET
ITS SW 2 IND	For this vehicle, the displaying is fixed	No SET
F-CAMERA IMAGE SIG	Front camera inoperative.	NG
	Front camera operative.	OK
PA-SIDE CAMERA IMAGE SIG	Side camera RH inoperative.	NG
	Side camera RH operative.	OK
PUMP COMM STATUS	Pump communication signal is received	On
	Pump communication signal is not received	Off
R-CAMERA COMM STATUS	Rear camera serial status is OK	OK
	Rear camera serial status is not OK	NG
R-CAMERA COMM LINE	Rear camera serial communication signal is received	OK
	Rear camera serial communication signal is not received	NG
REAR CAMERA IMAGE SIGNAL	Rear camera LH inoperative.	NG
	Rear camera LH operative.	OK
REVERSE SIGNAL	When selector lever is in any position other than R (reverse).	Off
	When selector lever in R (reverse).	On
ST ANGLE SENSOR SIGNAL	Around view monitor control unit is not receiving steering angle sensor signal.	Off
	Around view monitor control unit is receiving steering angle sensor signal.	On
ST ANGLE SENSOR TYPE	Steering angle sensor type.	Absolute
ST GEAR RATIO TYPE	Steering gear ratio type.	Type O
STEERING POSITION	Left hand drive vehicle.	LHD
	Right hand drive vehicle.	RHD
TURN SIGNAL	Turn signal left is received	Left
	Turn signal neutral is received	N
	Turn signal right is received	Right

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS


AROUND VIEW MONITOR CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

[DRIVER ASSISTANCE SYSTEM]

Monitor Item	Condition	Value/Status
VEHICLE SPEED SIGNAL	While driving, equivalent to speedometer reading	mph, km/h
WASH SW	Wash switch signal is pressed	On
	Wash switch signal is not pressed	Off

TERMINAL LAYOUT

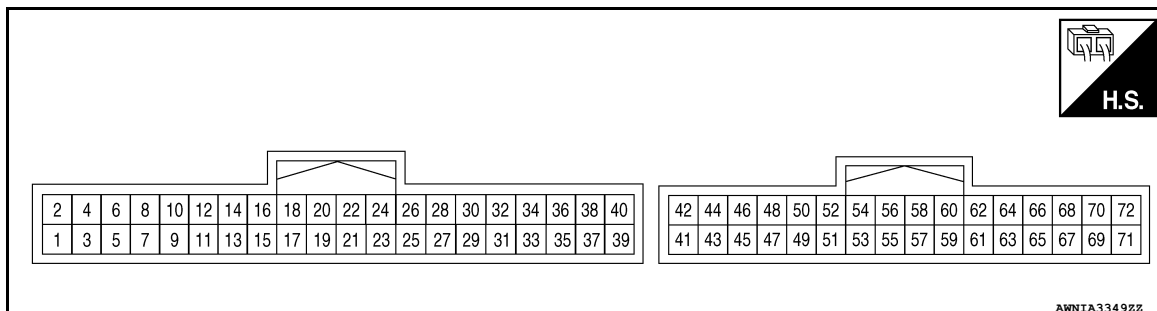





PHYSICAL VALUES

Terminal (Wire color)		Description	Input/Output	Condition		Reference value (Approx.)
+	-			Ignition switch	Operation	
1 (B)	Ground	Ground	—	ON	—	0 V
2 (Y)	Ground	Battery power supply	Input	OFF	—	Battery voltage
3 (SB)	Ground	Ignition signal	Input	ON	—	Battery voltage
7 (R)	Ground	SOW LED signal L	Output	—	LDW/BSW detected (while driving)	12 V
					LDW/BSW is not detected (while driving)	0 V
8 (G)	Ground	SOW LED signal R	Output	—	LDW/BSW detected (while driving)	12 V
					LDW/BSW is not detected (while driving)	0 V
15 (BR)	Ground	ITS sw indicator	Output	ON	Warning system is ON	12 V
					Warning system is OFF	0 V
16 (Y)	Ground	Warning buzzer control	Output	—	—	—
17 (W)	Ground	ITS OFF sw	Input	ON	Cancel switch pressed	0 V
					Cancel switch released	12 V
27 (L)	—	CAN (H)	Input/Output	—	—	—
28 (R)	—	CAN (L)	Input/Output	—	—	—
36 (Y)	Ground	Washer signal AVM to pump	Output	ON	Rear view camera washer motor operated	5 V
37 (V)	Ground	Pump signal ground	Input	ON	—	0 V
38 (SB)	Ground	Washer signal pump to AVM	Input	ON	Rear view camera washer motor operated	5 V

AROUND VIEW MONITOR CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

[DRIVER ASSISTANCE SYSTEM]

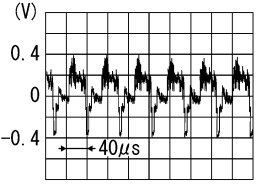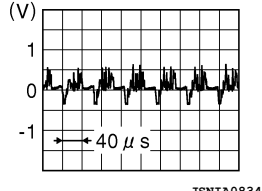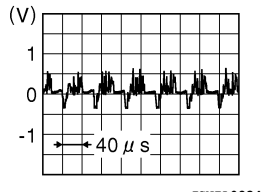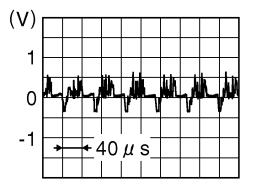Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output	Ignition switch	Operation	
47 (G)	Ground	Camera image signal	Output	ON	When camera image display	 <p style="text-align: right; font-size: small;">SKIB2251J</p>
48 (Shield)	—	Camera image signal shield	—	—	—	—
49 (LG)	—	Rear view serial signal	Input/ Output	—	—	—
50 (R)	Ground	Rear camera power supply	Output	ON	CAMERA selected or Shift selector in R (reverse) position.	6.0 V
52 (B)	Ground	Rear camera ground	—	ON	—	0 V
53 (W)	54 (Shield)	Rear camera image signal	Input	ON	CAMERA selected or Shift selector in R (reverse) position.	 <p style="text-align: right; font-size: small;">JSNIA0834GB</p>
56 (L)	Ground	Side camera LH power supply	Output	ON	CAMERA selected or Shift selector in R (reverse) position.	6.0 V
58 (Y)	Ground	Side camera LH ground	—	ON	—	0 V
59 (G)	60 (Shield)	Side camera LH image signal	Input	ON	CAMERA selected or Shift selector in R (reverse) position.	 <p style="text-align: right; font-size: small;">JSNIA0834GB</p>
62 (B)	Ground	Side camera RH power supply	Output	ON	CAMERA selected or Shift selector in R (reverse) position.	6.0 V
64 (L)	Ground	Side camera RH ground	—	ON	—	0 V
65 (Y)	66 (Shield)	Side camera RH image signal	Input	ON	CAMERA selected or Shift selector in R (reverse) position.	 <p style="text-align: right; font-size: small;">JSNIA0834GB</p>


A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

AROUND VIEW MONITOR CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

[DRIVER ASSISTANCE SYSTEM]

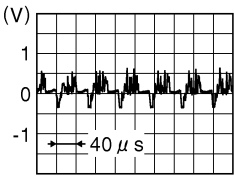Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output	Ignition switch	Operation	
68 (L)	Ground	Front camera power supply	Output	ON	CAMERA selected or Shift selector in R (reverse) position.	6.0 V
70 (V)	Ground	Front camera ground	—	ON	—	0 V
71 (LG)	72 (Shield)	Front camera image signal	Input	ON	CAMERA selected or Shift selector in R (reverse) position.	 <p style="text-align: right; font-size: small;">JSNIA0834GB</p>

DTC Index

INFOID:000000011444768

CONSULT Display	Reference Page
U0428: ST ANG SEN CALIB	AV-141, "DTC Logic"
U1000: CAN COMM CIRCUIT	AV-142, "AROUND VIEW MONITOR CONTROL UNIT : DTC Logic"
U1010: CONTROL UNIT (CAN)	AV-143, "AROUND VIEW MONITOR CONTROL UNIT : DTC Logic"
U111A: Rear display output signal diagnosis (Harness disconnection)	AV-144, "DTC Logic"
U111B: Right side display output signal diagnosis (Harness disconnection)	AV-146, "DTC Logic"
U111C: Front display output signal diagnosis (Harness disconnection)	AV-148, "DTC Logic"
U111D: Left side display output signal diagnosis (Harness disconnection)	AV-150, "DTC Logic"
U1232: ST ANG SEN CALIB	AV-155, "DTC Logic"
U1302: Camera supply power supply voltage abnormality	DAS-125, "DTC Logic"
U1303: LED supply power supply voltage abnormality	DAS-129, "DTC Logic"
U1304: Non-completion of the calibration	AV-169, "DTC Logic"
U1305: Non-completion of the configuration	AV-170, "DTC Logic"
U1308: Rear camera judgment	DAS-132, "DTC Logic"
U1309 PUMP UNIT CURRENT	DAS-133, "DTC Logic"
U130A: PUMP ECU JUDGE	DAS-135, "DTC Logic"
U0122: VDC CAN CIR1 (LDP)	DAS-100, "DTC Logic"
U0416: VDC CAN CIR2 (LDP)	DAS-104, "DTC Logic"
C1A03: VHCL SPEED SE CIRC	DAS-139, "AROUND VIEW MONITOR CONTROL UNIT : DTC Logic"
C1A39: STRG SEN CIR	DAS-151, "AROUND VIEW MONITOR CONTROL UNIT : DTC Logic"
C1A04: ABS/TCS/VDC CIRC	DAS-140, "AROUND VIEW MONITOR CONTROL UNIT : DTC Logic"
U130B: Rear camera serial communication err	DAS-136, "DTC Logic"

DISTANCE SENSOR

< ECU DIAGNOSIS INFORMATION >

[DRIVER ASSISTANCE SYSTEM]

DISTANCE SENSOR

Reference Value

INFOID:0000000011277195


VALUES ON THE DIAGNOSIS TOOL

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor item	Condition		Value/Status
VHCL SPEED SE	While driving		Value of vehicle speed signal (wheel speed).
YAW RATE	While driving	Vehicle stopped.	0.0
		Vehicle turning right.	Positive value
		Vehicle turning left.	Negative value
PWR SUP MONI	Ignition switch ON		Power supply voltage value of Distance sensor.
DISTANCE	Drive the vehicle and activate the vehicle-to-vehicle distance control mode.	When a vehicle ahead is detected.	Displays the distance from the preceding vehicle.
		When a vehicle ahead is not detected.	0.0
RELATIVE SPD	Drive the vehicle and activate the vehicle-to-vehicle distance control mode.	When a vehicle ahead is detected.	Displays the relative speed.
		When a vehicle ahead is not detected.	0.0
RADAR OFFSET	NOTE: The item is indicated, but not used.		—
RADAR HEIGHT	NOTE: The item is indicated, but not used.		—
STEERING ANGLE	Ignition switch ON	When setting the steering wheel in straight-ahead position.	0.0
		When turning the steering wheel 90° rightward.	+90
		When turning the steering wheel 90° leftward.	-90
STRG ANGLE SPEED	Ignition switch ON	At the time of turning the steering wheel.	Steering wheel turning speed is displayed.
L/R ADJUST	Ignition switch ON	At the completion of radar alignment adjustment.	Horizontal correction value is displayed.
U/D ADJUST	Ignition switch ON	At the completion of radar alignment adjustment.	Vertical correction value is displayed.

TERMINAL LAYOUT

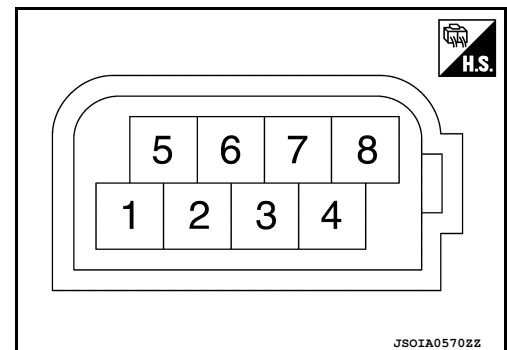

PHYSICAL VALUES

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

DISTANCE SENSOR

< ECU DIAGNOSIS INFORMATION >

[DRIVER ASSISTANCE SYSTEM]

Terminal No. (Wire color)		Description		Condition	Standard value	Reference value
+	-	Signal name	Input/ Output			
1 (P)	Ground	Ignition power supply	Input	Ignition switch ON	10 - 16 V	Battery voltage
6 (R)		CAN communication low	—	—	—	—
7 (L)		CAN communication high	—	—	—	—
8 (B)		Ground	—	—	Ignition switch ON	0 - 0.1 V

Fail-safe (Distance Sensor)

INFOID:0000000011277196

If a malfunction occurs in the distance sensor, around view monitor control unit cancels control, sounds a beep, and turns ON the FCW system warning in the information display.

DTC Inspection Priority Chart

INFOID:0000000011277197

If multiple DTCs are detected simultaneously, check them one by one depending on the following DTC inspection priority chart.

Priority	Detected items (DTC)
1	<ul style="list-style-type: none"> • U1000: CAN COMM CIRCUIT • U1010: CONTROL UNIT (CAN)
2	<ul style="list-style-type: none"> • C1A50: ADAS MALFUNCTION
3	<ul style="list-style-type: none"> • C1A01: POWER SUPPLY CIR • C1A02: POWER SUPPLY CIR 2 • C1A12: RADAR OFF-CENTER • C1A16: RADAR BLOCKED • C1A21: UNIT HIGH TEMP • C1A23: UNIT LOW TEMP • C1A39: STRG SEN CIR • U0104: ADAS CAN CIR1 • U0121: VDC CAN CIR2 • U0126: STRG SEN CAN CIR1 • U0405: ADAS CAN CIR2 • U0415: VDC CAN CIR1 • U0428: STRG SEN CAN CIR2
4	<ul style="list-style-type: none"> • C1A00: CONTROL UNIT

DTC Index

INFOID:0000000011277198

×: Applicable

DTC	CONSULT display	Reference
C1A01	POWER SUPPLY CIR	DAS-138
C1A02	POWER SUPPLY CIR2	DAS-138
C1A12	RADAR OFF-CENTER	DAS-142
C1A16	RADAR BLOCKED	DAS-145
C1A18	RADAR ALIGNMENT INCMPT	DAS-148
C1A21	UNIT HIGH TEMP	DAS-149
C1A39	STRG SEN CIR	DAS-151
U1000	CAN COMM CIRCUIT	DAS-106
U1010	CONTROL UNIT (CAN)	DAS-107

DISTANCE SENSOR

< ECU DIAGNOSIS INFORMATION >

[DRIVER ASSISTANCE SYSTEM]

DTC	CONSULT display	Reference
CONSULT		
U0121	VDC CAN CIR2	DAS-99
U0126	STRG MSG COUNTER	DAS-101
U0415	VDC CAN CIR1	DAS-103
U0428	STRG SEN CAN CIR2	DAS-105
U0401	ECM MSG COUNTER	DAS-102
C1A03	VHCL SPEED SE CIRC	DAS-139
C1A04	ABS/TCS/VDC CIRC	DAS-140
C1A05	BRAKE SW/STOP L SW	DAS-141
C10B7	YAW RATE SENSOR	DAS-137
C1A14	ECM CIRCUIT	DAS-143
C1A15	GEAR POSITION	DAS-144
C1A24	NP RANGE	DAS-150
C1A17	RADAR SENSOR FAIL	DAS-150

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

REAR VIEW CAMERA WASHER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >


[DRIVER ASSISTANCE SYSTEM]

REAR VIEW CAMERA WASHER CONTROL UNIT

Reference Value

INFOID:000000011277199

TERMINAL LAYOUT

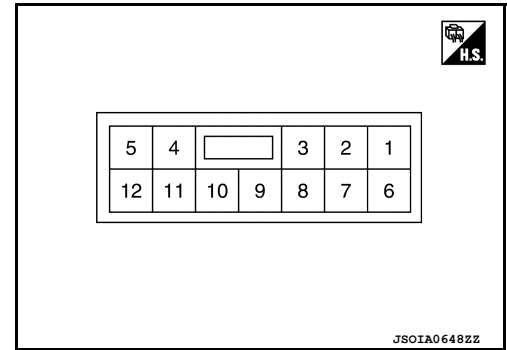

PHYSICAL VALUES

REAR VIEW CAMERA WASHER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

[DRIVER ASSISTANCE SYSTEM]

Terminal (Wire color)		Description		Condition		Standard value	Reference value (Approx.)
+	-	Signal name	Input/ Output				
1 (SB)		Air pump power supply	Output	Ignition switch ON	Air pump operated.	9.5 - 16 V	Battery voltage
					Air pump not operated.	0 - 0.1 V	0 V
2 (LG)		Air pump ground	—	Ignition switch ON	—	0 - 0.1 V	0 V
3 (GR)		Washer motor power supply	Output	Ignition switch ON	Rear view camera washer motor operated.	0 - 0.1 V	0 V
					Rear view camera washer motor not operated.	9.5 - 16 V	Battery voltage
4 (Y)		Washer motor ground	—	—	—	0 - 0.1 V	0 V
5 (B)		Ground	—	Ignition switch ON	—	0 - 0.1 V	0 V
6 (V)		Communication line ground	—	Ignition switch ON	—	0 - 0.1 V	0 V
7 (L)	Ground	Communication line (PUMP → CAMERA)	Output	Ignition switch ON	—	Input the waveform synchronized with the communication status.	
8 (BR)		Communication line (CAMERA → PUMP)	Input	Ignition switch ON	—	Input the waveform synchronized with the communication status.	
12 (LG)		Ignition power supply	Input	Ignition switch ON	—	9.5 - 16 V	Battery voltage


A
B
C
D
E
F
G
H
I
J
K
L
M
N

DAS

P


DRIVER ASSISTANCE SYSTEM CONNECTORS

Connector No.	M9
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	W	-
4	B	-
12	SB	-
13	BR	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GRAY

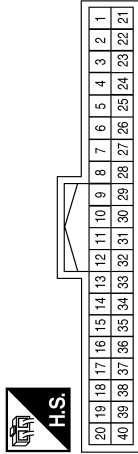


Terminal No.	Color of Wire	Signal Name
5	R	CAN-L
6	L	CAN-H
8	L	CAN-L
9	R	CAN-H

Connector No.	M27
Connector Name	JOINT CONNECTOR-M13
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	SB	-
3	SB	-
5	P	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

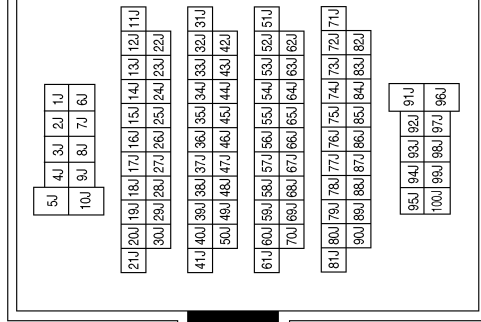

Terminal No.	Color of Wire	Signal Name
22J	SHIELD	-
23J	LG	-
24J	V	-
25J	L	-
33J	R	-
34J	L	-
44J	B	-
45J	P	-

Connector No.	M44
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
7P	Y	-
9P	L	-


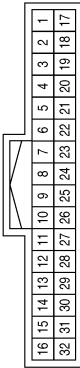
AA01A0198GB

DRIVER ASSISTANCE SYSTEMS

[DRIVER ASSISTANCE SYSTEM]



< WIRING DIAGRAM >

Connector No.	M69
Connector Name	WIRE TO WIRE
Connector Color	WHITE


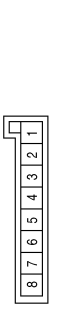
Terminal No.	Color of Wire	Signal Name
13	LG	-
14	V	-
15	SB	-
16	Y	-
29	SHIELD	-
30	W	-
31	B	-
32	R	-

Connector No.	M68
Connector Name	FUSE BLOCK (J/B)
Connector Color	BROWN


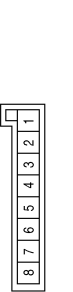
Terminal No.	Color of Wire	Signal Name
3R	V	-

Connector No.	M65
Connector Name	JOINT CONNECTOR-M26
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B	-
8	B	-

Connector No.	M97
Connector Name	JOINT CONNECTOR-M24
Connector Color	WHITE


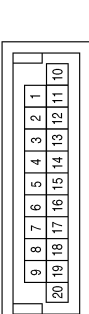
Terminal No.	Color of Wire	Signal Name
1	B	-
4	B	-
5	B	-
6	B	-

Connector No.	M91
Connector Name	WIRE TO WIRE
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
3	GR	-
7	B	-
8	L	-
9	Y	-
10	SHIELD	-
11	G	-

Connector No.	M71
Connector Name	JOINT CONNECTOR-M03
Connector Color	BLUE

Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-
3	L	-
5	L	-
7	L	-
11	R	-
12	R	-
13	R	-
15	R	-
17	R	-

AAOIA0199GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P


DAS

DRIVER ASSISTANCE SYSTEMS

[DRIVER ASSISTANCE SYSTEM]


< WIRING DIAGRAM >

Connector No.	M108
Connector Name	AV CONTROL UNIT (WITH BOSE AUDIO SYSTEM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
8	L	CAN-H
17	R	CAN-L

Connector No.	M102
Connector Name	AV CONTROL UNIT (WITHOUT BOSE AUDIO SYSTEM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
41	G	CAMERA+
42	SHIELD	CAMERA-(SHIELD)

Connector No.	M101
Connector Name	AV CONTROL UNIT (WITHOUT BOSE AUDIO SYSTEM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
8	L	CAN-H
17	R	CAN-L

Connector No.	M109
Connector Name	AV CONTROL UNIT (WITH BOSE AUDIO SYSTEM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
41	G	CAMERA+
42	SHIELD	CAMERA-(SHIELD)

AA0IA0200GB

DRIVER ASSISTANCE SYSTEMS

[DRIVER ASSISTANCE SYSTEM]

< WIRING DIAGRAM >

Connector No.	M113
Connector Name	AROUND VIEW MONITOR CONTROL UNIT (WITH DRIVER ASSISTANCE SYSTEM)
Connector Color	WHITE



2	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36	38	40
1	3	5	7	9	11	13	15	17	19	21	23	25	27	29	31	33	35	37	39

Terminal No.	Color of Wire	Signal Name
1	B	GND
2	Y	+B
3	SB	IGN
4	-	-
5	-	-
6	-	-
7	R	INDICATOR L

Terminal No.	Color of Wire	Signal Name
8	G	INDICATOR R
9	-	-
10	-	-
11	-	-
12	-	-
13	-	-
14	-	-
15	BR	ITS SW INDICATOR
16	Y	BUZZER CONT
17	W	ITS SW
18	-	-
19	-	-
20	-	-
21	-	-
22	-	-
23	-	-
24	-	-

Terminal No.	Color of Wire	Signal Name
25	-	-
26	-	-
27	L	CAN-H
28	R	CAN-L
29	-	-
30	-	-
31	-	-
32	-	-
33	-	-
34	-	-
35	-	-
36	Y	FROM C/U TO PUMP
37	V	SIGNAL GND
38	SB	FROM PUMP TO C/U
39	-	-
40	-	-

Connector No.	M114
Connector Name	AROUND VIEW MONITOR CONTROL UNIT (WITH DRIVER ASSISTANCE SYSTEM)
Connector Color	WHITE



42	44	46	48	50	52	54	56	58	60	62	64	66	68	70	72
41	43	45	47	49	51	53	55	57	59	61	63	65	67	69	71

Terminal No.	Color of Wire	Signal Name
41	-	-
42	-	-
43	-	-
44	-	-

Terminal No.	Color of Wire	Signal Name
45	-	-
46	-	-
47	G	VIDEO OUTPUT SIGNAL
48	SHIELD	VIDEO OUTPUT GND
49	LG	RV SERIAL SIGNAL
50	R	RV POWER 6.2V
51	-	-
52	B	RV POWER GND
53	W	RV VIDEO SIGNAL
54	SHIELD	RV VIDEO GND
55	-	-
56	L	SV2 POWER 6.2V
57	-	-
58	Y	SV2 POWER GND

Terminal No.	Color of Wire	Signal Name
59	G	SV2 VIDEO SIGNAL
60	SHIELD	SV2 VIDEO GND
61	-	-
62	B	SV1 POWER 6.2V
63	-	-
64	L	SV1 POWER GND
65	Y	SV1 VIDEO SIGNAL
66	SHIELD	SV1 VIDEO GND
67	-	-
68	L	FV POWER 6.2V
69	-	-
70	V	FV POWER GND
71	LG	FV VIDEO SIGNAL
72	SHIELD	FV VIDEO GND

AAOIA0201GB


A B C D E F G H I J K L M N P

DRIVER ASSISTANCE SYSTEMS

[DRIVER ASSISTANCE SYSTEM]


< WIRING DIAGRAM >

Connector No.	M168
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
7	L	-
8	Y	-
9	G	-
10	SHIELD	-
11	R	-

Connector No.	M167
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
5	B	-

Connector No.	M120
Connector Name	WARNING SYSTEM BUZZER
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
1	SB	-
2	Y	-
3	B	-

Connector No.	E21
Connector Name	DISTANCE SENSOR
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	P	IGN
6	R	CAN-L
7	L	CAN-H
8	B	GND

Connector No.	M253
Connector Name	WARNING SYSTEM SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	BR	-
5	BG	-
6	W	-
8	B	-

Connector No.	M251
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	W	-
4	B	-
12	BG	-
13	BR	-


AA0IA0202GB

DRIVER ASSISTANCE SYSTEMS

[DRIVER ASSISTANCE SYSTEM]

< WIRING DIAGRAM >

Connector No.	E28
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
10M	L	-

Connector No.	E26
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	V	-
2	L	-
13	SHIELD	-
14	LG	-


Connector No.	E55
Connector Name	REAR VIEW CAMERA WASHER MOTOR
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	GR	-
2	R	-

Terminal No.	Color of Wire	Signal Name
6A	L	-
7A	R	-
8A	GR	-

Connector No.	E34
Connector Name	WIRE TO WIRE
Connector Color	GRAY

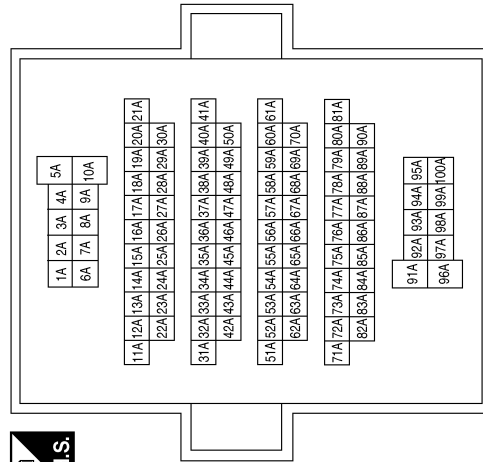

AAOIA2003GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P


DAS

DRIVER ASSISTANCE SYSTEMS

< WIRING DIAGRAM >


[DRIVER ASSISTANCE SYSTEM]

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

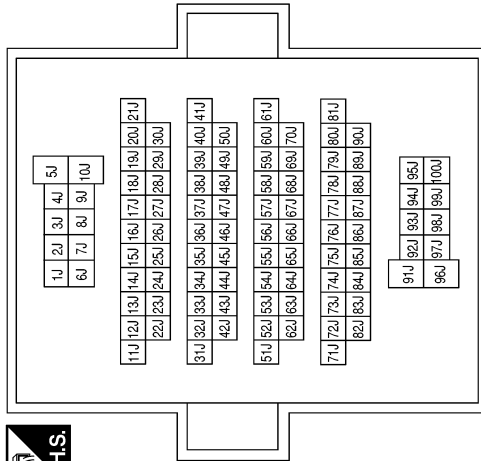

Terminal No.	Color of Wire	Signal Name
22J	SHIELD	-
23J	LG	-
24J	V	-
25J	L	-
33J	R	-
34J	L	-
44J	B	-
45J	P	-

Connector No.	E209
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	V	-
2	L	-
13	SHIELD	-
14	LG	-

Connector No.	E226
Connector Name	FRONT CAMERA
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	V	-
2	L	-
4	LG	-
5	SHIELD	-

Connector No.	B16
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
60	L	CAN-H
80	P	CAN-L

DRIVER ASSISTANCE SYSTEMS


[DRIVER ASSISTANCE SYSTEM]

< WIRING DIAGRAM >

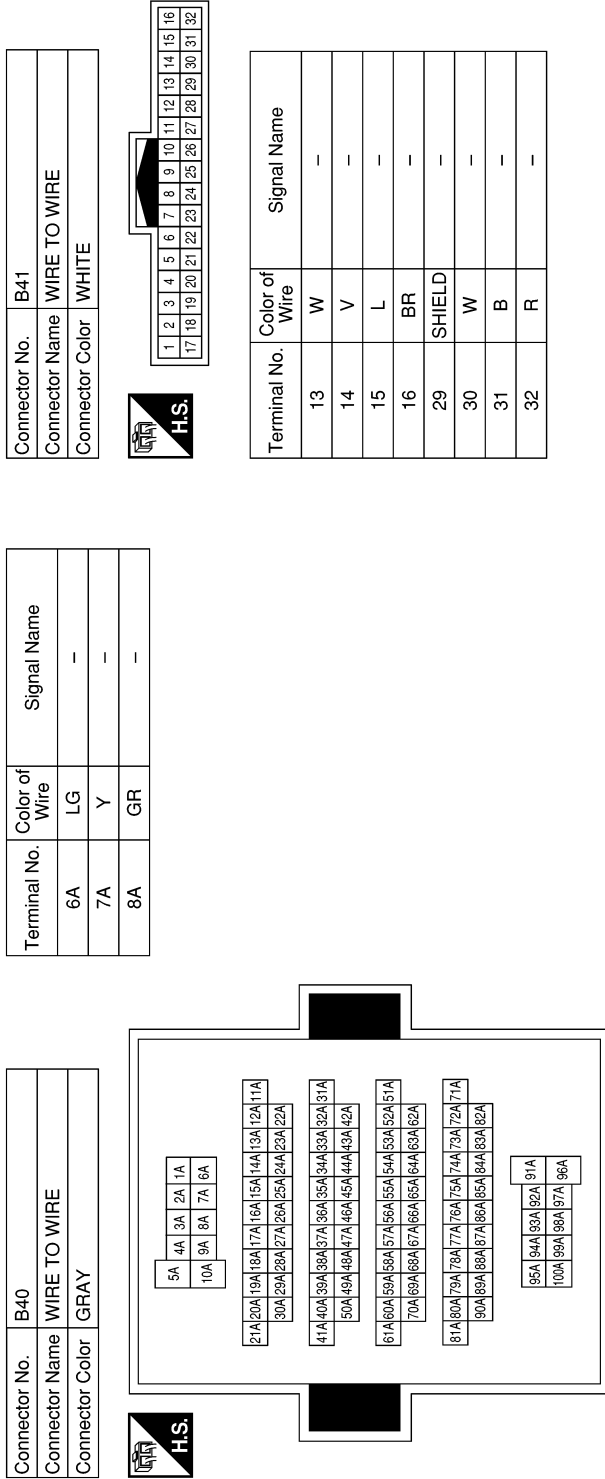

Terminal No.	Color of Wire	Signal Name
4	Y	CAMERA WASHER -
5	B	GND
6	V	SIGNAL GND
7	L	FROM PUMP TO CAMERA C/U
8	BR	FRONT CAMERA C/U TO PUMP
12	LG	IGN

Terminal No.	Color of Wire	Signal Name
6A	LG	-
7A	Y	-
8A	GR	-

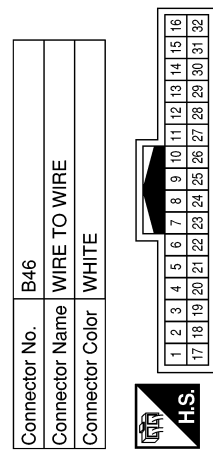

Terminal No.	Color of Wire	Signal Name
1	SB	PUMP MOTOR +
2	LG	PUMP MOTOR -
3	GR	CAMERA WASHER +

Terminal No.	Color of Wire	Signal Name
4	W	-
5	R	-
6	B	-
7	W	-
8	SHIELD	-

AAOIA02056B

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P




DRIVER ASSISTANCE SYSTEMS

[DRIVER ASSISTANCE SYSTEM]


< WIRING DIAGRAM >

Connector No.	D3
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
7	GR	-
8	G	-
9	Y	-
10	B	-
11	R	-

Connector No.	D2
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
5	B	-

Connector No.	B72
Connector Name	REAR VIEW CAMERA AIR PUMP MOTOR
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	SB	-
2	LG	-

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	B	-
7	L	-
8	V	-
9	Y	-
10	B	-
11	G	-

Connector No.	D14
Connector Name	DOOR MIRROR LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
7	GR	-
8	G	-
15	B	-
16	Y	-

Connector No.	D5
Connector Name	BLIND SPOT WARNING INDICATOR LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R	-
4	B	-


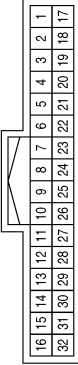
AA0IA0206GB

DRIVER ASSISTANCE SYSTEMS

[DRIVER ASSISTANCE SYSTEM]



< WIRING DIAGRAM >

Connector No.	D501
Connector Name	WIRE TO WIRE
Connector Color	WHITE


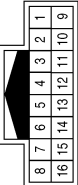
Terminal No.	Color of Wire	Signal Name
4	L	-
5	R	-
6	B	-
7	W	-
8	V	-

Connector No.	D108
Connector Name	BLIND SPOT WARNING INDICATOR RH
Connector Color	WHITE


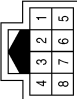
Terminal No.	Color of Wire	Signal Name
1	G	-
4	B	-

Connector No.	D107
Connector Name	DOOR MIRROR RH
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
7	L	-
8	V	-
15	B	-
16	Y	-

Connector No.	D514
Connector Name	REAR VIEW CAMERA
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
1	V	-
4	L	-
5	W	-
7	B	-
8	R	-

AAOIA0215GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[DRIVER ASSISTANCE SYSTEM]


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:0000000011277201

OVERALL SEQUENCE

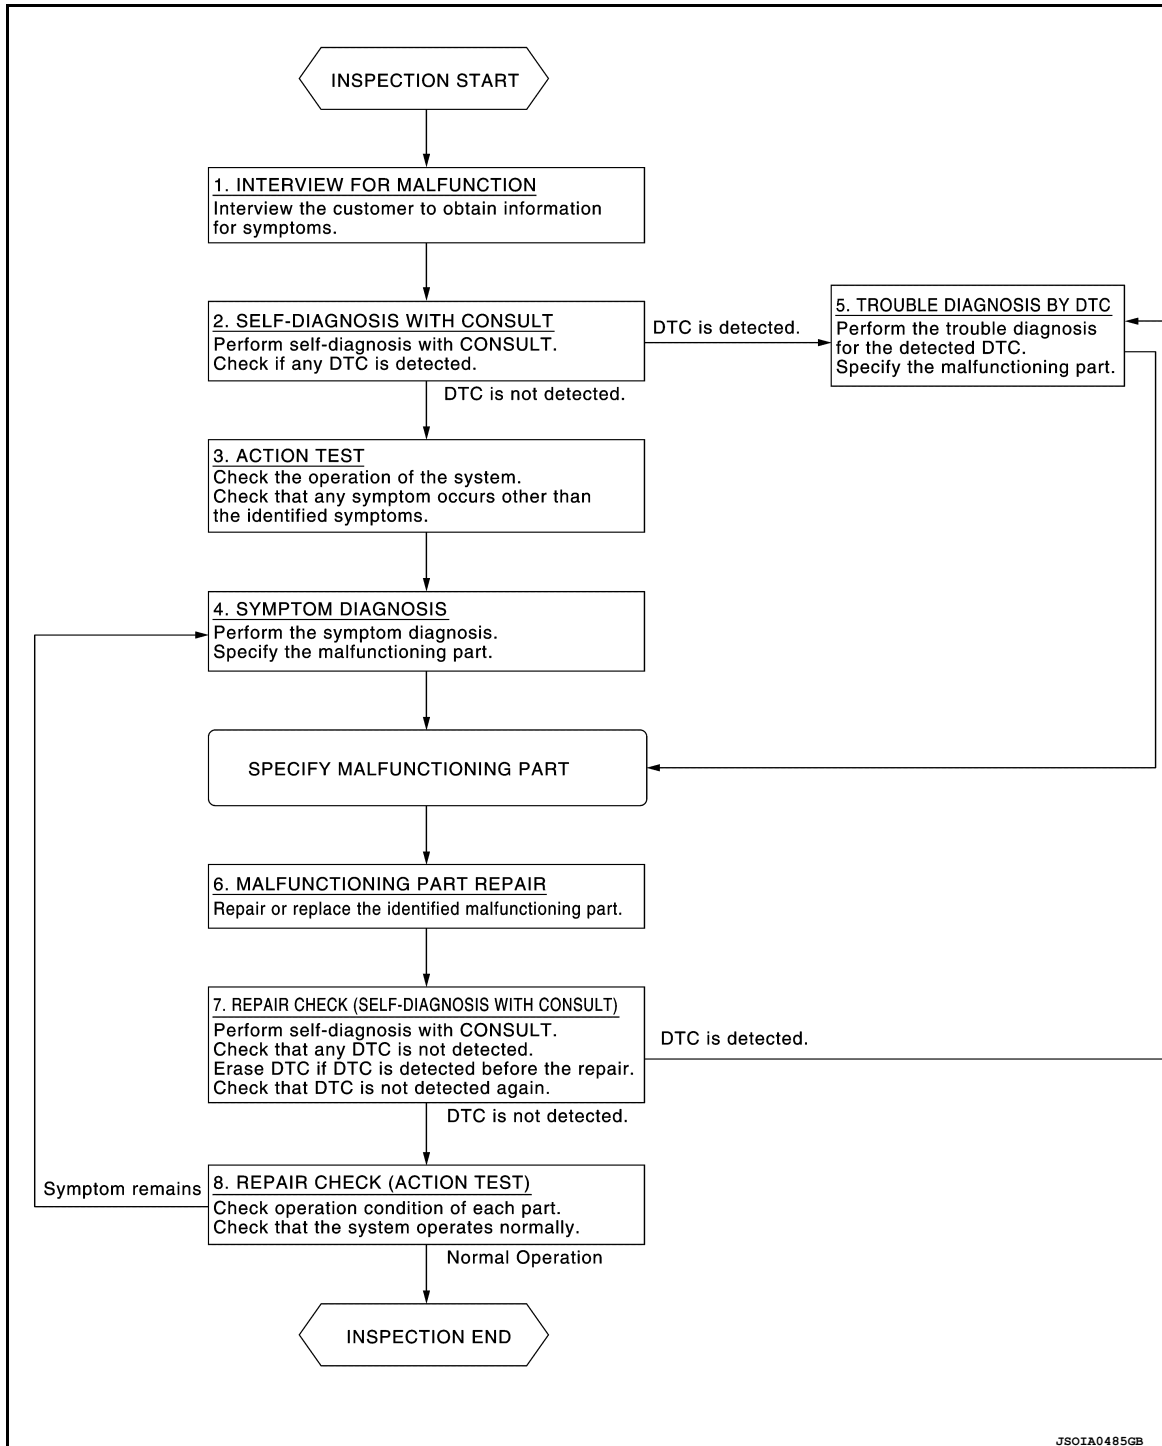

DETAILED FLOW

1. INTERVIEW FOR MALFUNCTION

It is also important to clarify the customer concerns before starting the inspection. Interview the customer about the concerns carefully and understand the symptoms fully.

DIAGNOSIS AND REPAIR WORK FLOW

[DRIVER ASSISTANCE SYSTEM]

< BASIC INSPECTION >

NOTE:

The customers are not professionals. Never assume that “maybe the customer means…” or “maybe the customer mentioned this symptom”.

>> GO TO 2.

2. SELF-DIAGNOSIS WITH CONSULT

1. Perform “All DTC Reading”.
2. Check for DTC detected in “Self Diagnostic Result” of the following:
 - “DISTANCE SENSOR”
 - “AROUND VIEW MONITOR”

Is any DTC detected?

- YES >> GO TO 5.
NO >> GO TO 3.

3. ACTION TEST

Perform the following system action test to check the system operation:

- LDW refer to [DAS-79. "LDW : Description"](#).
- BSW refer to [DAS-80. "BSW : Description"](#).
- MOD refer to [DAS-81. "MOD : Description"](#).

Check if any other malfunctions occur.

>> GO TO 4.

4. SYMPTOM DIAGNOSIS

Perform the applicable diagnosis according to the diagnosis chart by symptom. Refer to [DAS-162. "Symptom Table"](#).

>> GO TO 6.

5. TROUBLE DIAGNOSIS BY DTC

Perform trouble diagnosis for detected DTC of the following:

- “DISTANCE SENSOR”: Refer to [DAS-48. "DTC Index"](#).
- “AROUND VIEW MONITOR”: Refer to [AV-252. "WITH DRIVER ASSISTANCE SYSTEM : DTC Index"](#).

>> GO TO 6.

6. MALFUNCTIONING PART REPAIR

Repair or replace the identified malfunctioning parts.

>> GO TO 7.

7. REPAIR CHECK (SELF-DIAGNOSIS WITH CONSULT)

1. Erase “Self Diagnostic Result”.
2. Perform “All DTC Reading” again after repairing or replacing the specific items.
3. Check if any DTC is detected in “Self Diagnostic Result” of the following:
 - “DISTANCE SENSOR”
 - “AROUND VIEW MONITOR”

Is any DTC detected?

- YES >> GO TO 5.
NO >> GO TO 8.

8. REPAIR CHECK (ACTION TEST)

Perform the following system action test. Check that the malfunction symptom is solved or no other symptoms occur.

Is there a malfunction symptom?

- YES >> GO TO 4.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[DRIVER ASSISTANCE SYSTEM]

NO >> Inspection End.

PRE-INSPECTION FOR DIAGNOSIS

[DRIVER ASSISTANCE SYSTEM]

< BASIC INSPECTION >

PRE-INSPECTION FOR DIAGNOSIS

Inspection Procedure

INFOID:0000000011277202

1. CHECK REAR VIEW CAMERA LENS

Is the rear view camera lens contaminated with foreign materials?

YES >> Clean rear view camera lens.

NO >> GO TO 2.

2. CHECK REAR VIEW CAMERA INSTALLATION CONDITION

Check rear view camera installation condition (e.g. position, looseness, bent in back door).

Is it properly installed?

YES >> Inspection End.

NO >> Install rear view camera properly, and perform rear view camera calibration. Refer to [DAS-95](#), "[Description](#)".

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

REAR VIEW CAMERA WASHER/AIR BLOWER FUNCTION INSPECTION

< BASIC INSPECTION >

[DRIVER ASSISTANCE SYSTEM]

REAR VIEW CAMERA WASHER/AIR BLOWER FUNCTION INSPECTION

Inspection Procedure

INFOID:000000011277203

1. CHECK REAR VIEW CAMERA WASHER/AIR BLOWER FUNCTION

1. Start the engine.
2. Select the "Active Test" item "AIR&WASH ACTIVE" of "AVM" using CONSULT.

NOTE:

Before function check, perform the following items:

- Fill with washer fluid.
- Perform "Active Test" item "WASH ACTIVE" of "AVM" using CONSULT for 4 seconds.

3. While operating the test item, check the operation.

Is it properly operated?

Washer fluid ejects 4 - 6 times. (Normal function)>>Inspection End.

Washer fluid ejects 7 times or more.>>Properly install or replace air tube.

Washer fluid ejects only once>> Properly install or replace air tube.

Washer fluid does not eject>>Properly install washer tube or replace washer tube and check valve.

ADDITIONAL SERVICE WHEN REPLACING DISTANCE SENSOR

< BASIC INSPECTION >

[DRIVER ASSISTANCE SYSTEM]

ADDITIONAL SERVICE WHEN REPLACING DISTANCE SENSOR

Description

INFOID:000000011277204

Always perform the following after removing and installing or replacing the Distance sensor:

- Distance sensor initial vertical alignment
- Distance sensor alignment

• **CAUTION:**

The system does not operate normally unless the Distance sensor is aligned properly.

Work Procedure

INFOID:000000011277205

1. DISTANCE SENSOR INITIAL VERTICAL ALIGNMENT

Perform the distance sensor initial vertical alignment. Refer to [DAS-70, "Description"](#).

>> GO TO 2.

2. DISTANCE SENSOR ALIGNMENT

Perform the distance sensor alignment. Refer to [DAS-72, "Description"](#).

>> Work End.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

DISTANCE SENSOR INITIAL VERTICAL ALIGNMENT

< BASIC INSPECTION >

[DRIVER ASSISTANCE SYSTEM]

DISTANCE SENSOR INITIAL VERTICAL ALIGNMENT

Description

INFOID:000000011277206

WARNING:

Radio waves could adversely affect electric medical equipment. Those who use a pacemaker should contact the electric medical equipment manufacturer for the possible influences before use.

OUTLINE OF DISTANCE SENSOR INITIAL ALIGNMENT PROCEDURE

- Always perform the Distance sensor initial vertical alignment after removing and installing or replacing the Distance sensor.

CAUTION:

The system does not operate normally unless the Distance sensor is aligned properly.

1. Required tools, refer to [DAS-70, "Required Tools"](#).
2. Preparation, refer to [DAS-70, "Preparation"](#).
3. Distance sensor initial vertical alignment, refer to [DAS-71, "Distance Sensor Initial Vertical Alignment"](#).

CAUTIONARY POINT FOR DISTANCE SENSOR ALIGNMENT PROCEDURE

CAUTION:

- For Distance sensor alignment procedure, choose a level location with a few feet of working space in front and surrounding the vehicle.
- Vehicle must be stationary and unoccupied during the whole alignment procedure.
- Never enter the vehicle during distance sensor alignment.
- For proper system operation and adjustment, all vehicle wheels must be the original factory size.


The Distance sensor requires alignment whenever the Distance sensor is removed and reinstalled and whenever front end structural repairs are performed. Distance sensor alignment consists of performing the mechanical vertical alignment (Distance sensor initial vertical alignment) described in the following procedure, followed by the electronic horizontal alignment (Distance sensor alignment) that is performed using CONSULT and the appropriate special service tools.

Required Tools

INFOID:000000011277207

The following tool is necessary to perform the Distance sensor initial vertical alignment:

- Carpenters level.

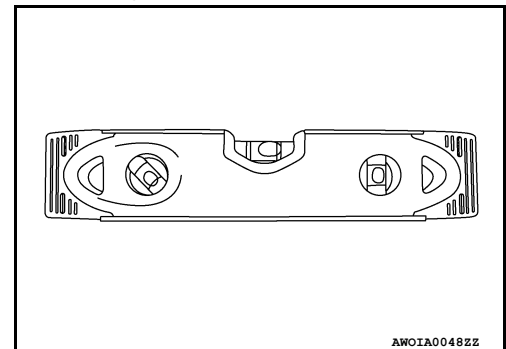

Preparation

INFOID:000000011277208

1. PREPARATION FOR DISTANCE SENSOR INITIAL VERTICAL ALIGNMENT PROCEDURE

1. Verify correct vehicle suspension height. Refer to [WT-73, "Wheel"](#).
2. Repair or replace any damaged body components.
3. Verify proper tire inflation pressures. Refer to [WT-73, "Tire Air Pressure"](#).
4. Remove any accumulations of mud, snow or ice from the vehicle underbody.
5. Verify that there is no load in the vehicle (cargo or passenger).
6. Place the vehicle on a known level horizontal surface such as a wheel or frame alignment rack to achieve satisfactory sensor vertical alignment results.
7. Remove front fascia. Refer to [EXT-17, "Removal and Installation"](#).

DISTANCE SENSOR INITIAL VERTICAL ALIGNMENT

< BASIC INSPECTION >

[DRIVER ASSISTANCE SYSTEM]

>> Refer to [DAS-71, "Distance Sensor Initial Vertical Alignment"](#).


Distance Sensor Initial Vertical Alignment

INFOID:000000011277209


NOTE:

The Distance sensor initial vertical alignment procedure must be performed anytime the Distance sensor is removed and reinstalled.


1. The Distance sensor (1) is located near the right front head lamp behind the front bumper fascia.

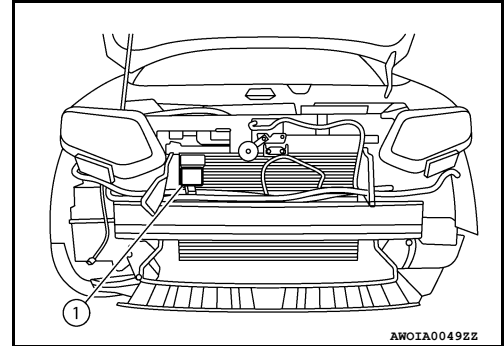

2. Place the carpenter's level (2) against the face of the Distance sensor (1).

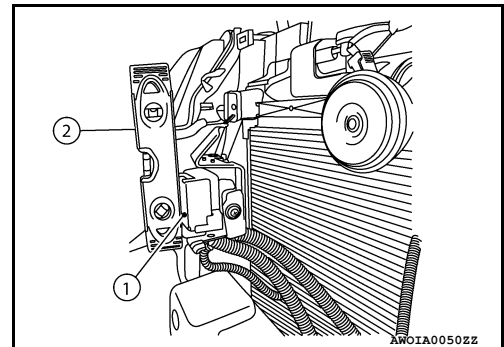

3. Turn the Distance sensor adjustment screw (3) to level the sensor.

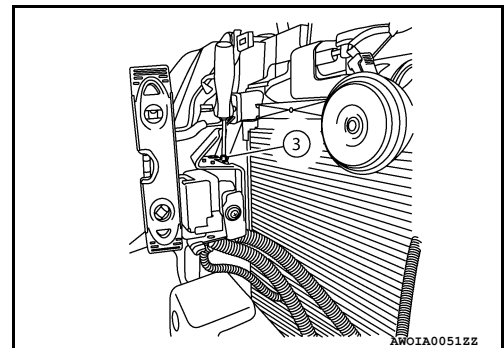

4. Ensure the Distance sensor electrical connector located on the bottom of the sensor is connected.
5. Reinstall the front bumper fascia.
6. Perform the Distance sensor alignment procedure. Refer to [DAS-72, "Description"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

DISTANCE SENSOR ALIGNMENT

Description

INFOID:000000011277210

WARNING:

Radio waves could adversely affect electric medical equipment. Those who use a pacemaker should contact the electric medical equipment manufacturer for the possible influences before use.

OUTLINE OF RADAR ALIGNMENT PROCEDURE

- A 4-wheel vehicle alignment must be performed before proceeding with radar alignment procedure.
- Always perform the radar alignment after removing and installing or replacing the Distance sensor.
- If the Distance sensor was removed and installed or replaced, first perform Distance Sensor Initial Vertical Alignment, refer to [DAS-70. "Description"](#).

CAUTION:

The system does not operate normally unless the Distance sensor is aligned properly.

1. Required tools, refer to [DAS-72. "Required Tools"](#).
2. Preparation, refer to [DAS-73. "Preparation"](#).
3. Vehicle set up, refer to [DAS-74. "Vehicle Set Up"](#).
4. Setting the Distance sensor target board, refer to [DAS-76. "Setting The Distance Sensor Target Board"](#).
5. Distance sensor adjustment, refer to [DAS-77. "Distance Sensor Adjustment"](#).

CAUTIONARY POINT FOR RADAR ALIGNMENT PROCEDURE

CAUTION:

- For radar alignment procedure, choose a level location with a few feet of working space in front and surrounding the vehicle.
- Vehicle must be stationary and unoccupied during the whole alignment procedure.
- Any slight vibration during the alignment procedure can cause the test to fail. If this happens, you will have to restart the alignment process.
- The ignition switch must be in the ON position.
- The battery voltage must not fall below 12 volts during the whole alignment procedure. Failure to maintain adequate battery voltage will cause the test to fail. If this happens, you will have to restart the alignment process.
- The Distance sensor target board must be set in front of the vehicle facing the sensor.
- Adjust the radar alignment with CONSULT. (The radar alignment procedure cannot be adjusted without CONSULT.)
- Never enter the vehicle during radar alignment.
- Never block the area between the radar and the Distance sensor target board at any time during the alignment process.
- Never break the laser beam between the laser assembly and front Distance sensor target board or rear reflector at any time during alignment.
- Accurate steering wheel setting is crucial. Once set, do not disturb the steering wheel for the remainder of the alignment procedure.
- To avoid physical damage, the Distance sensor adjustment screw must not be forced to either clockwise or counter-clockwise limit. For proper adjustment procedure, follow the directions of the CONSULT exactly as instructed.
- For proper system operation and adjustment, all vehicle wheels must be of the same size.

Required Tools

INFOID:000000011277211

- Distance sensor alignment kit 1-20-2851-1 in addition to one of the following:
 - a) Hunter self-centering wheel adapter (Hunter wheel alignment tool)
 - b) Special Service Tool kit 1-20-2722-1 (kit SCA W/Tire Clamp-ICC Aiming)


The following Distance sensor alignment kit (1-20-2851-1) is necessary to perform the Distance sensor alignment:

DISTANCE SENSOR ALIGNMENT

[DRIVER ASSISTANCE SYSTEM]

< BASIC INSPECTION >


- Distance sensor target board (1).

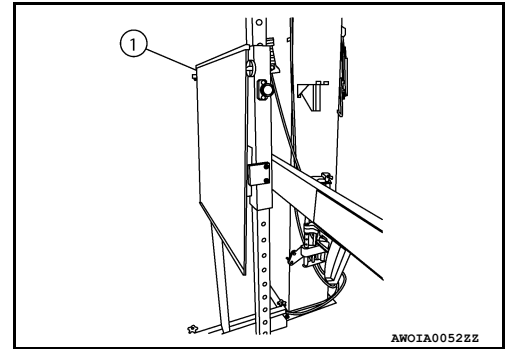

- Hunter self-centering wheel adapter (1) [shown with laser assembly (2) installed] (Hunter alignment rack head may be substituted).


NOTE:

Dealers that are not equipped with a Hunter self-centering wheel adapter will require the following kit:
Part No. 1-20-2722-1-IF (kit SCA W/Tire Clamp-Distance Sensor Aiming)

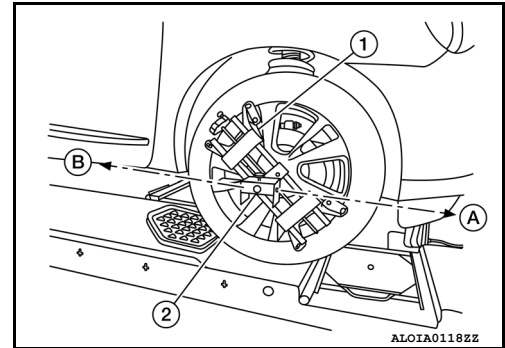


- Laser assembly (with bi-directional laser beam) as shown in the illustration.

- Tightening knob (1)
- Power ON/OFF button (2)
- Front laser beam opening (3)
- Rear laser beam opening (4)
- Attaching shaft (5)

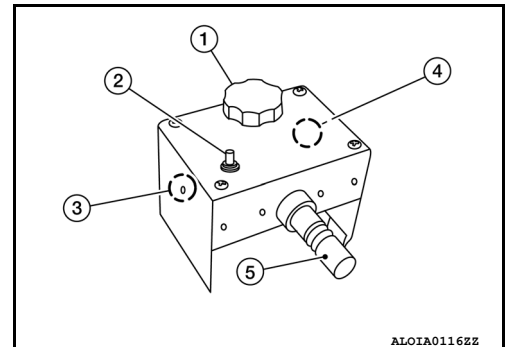

- Stationary target as shown in the illustration.

- Stationary target (1)
- Laser signal reception plate (2)

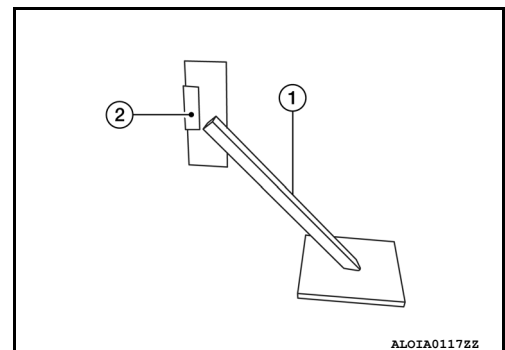

- Distance chain (not shown).

Preparation

INFOID:0000000011277212

1. ADVANCE PREPARATION FOR RADAR ALIGNMENT PROCEDURE

- Adjust all tire pressures to the specified value.
- Empty the vehicle. (Remove any luggage from the passenger compartment, luggage room, etc.)
- Shift the selector lever to "P" position, and release the parking brake.
- Fully fill the fuel tank, and then check that the coolant and oils are filled up to correct level.
- Clean off the right front side of the fascia in front of the Distance sensor.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

DISTANCE SENSOR ALIGNMENT

[DRIVER ASSISTANCE SYSTEM]


< BASIC INSPECTION >

NOTE:

The Distance sensor is located behind the fascia and it is not exposed to the elements. Therefore it should not require any cleaning.

1 : Distance sensor

>> Refer to [DAS-74. "Vehicle Set Up"](#).

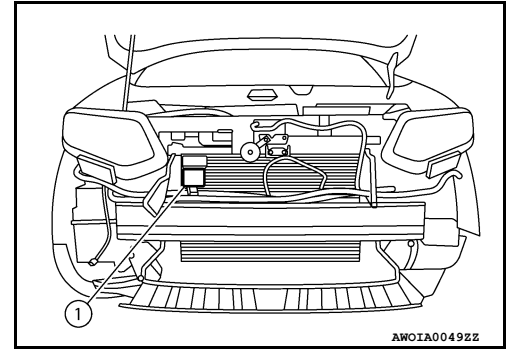

INFOID:000000011277213

Vehicle Set Up

DESCRIPTION

Accurate adjustment of the radar alignment requires that the Distance sensor target board, wheel adapter, laser assembly, and stationary target be properly positioned.

CAUTION:


If the radar alignment is adjusted with the Distance sensor target board, wheel adapter, laser assembly, or stationary target in the incorrect position, the Distance system will not function properly or the alignment procedure may not be completed successfully.

1. PREPOSITION TARGET BOARD


NOTE:

- The center of the distance sensor (A).

B : Up-down direction adjusting screw

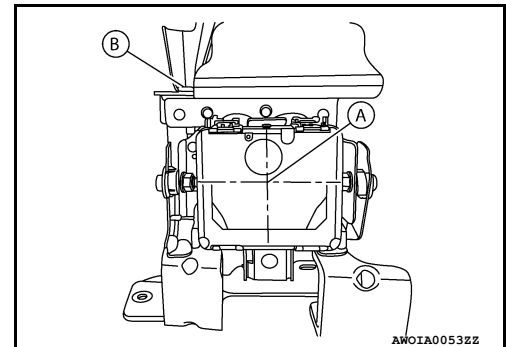

- To locate the center of the distance sensor (A) easily, on a flat level surface measure 27 in (685 mm) (H) up from the floor, and 7 in (178 mm) (W) to the right from the point of the right front head lamp (1) when viewed from the front of the vehicle.

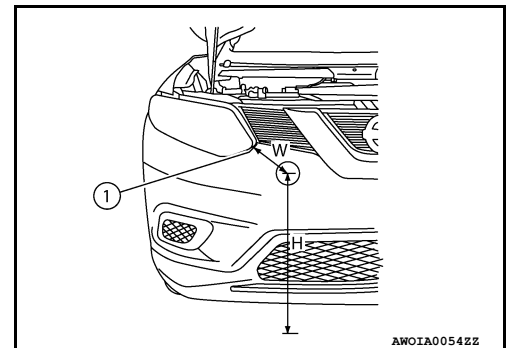



- Initial distance sensor target board setting must be in the center position.

DISTANCE SENSOR ALIGNMENT

[DRIVER ASSISTANCE SYSTEM]

< BASIC INSPECTION >

1. Position the distance sensor target board in front facing the right front side of the vehicle:
 - Using the full length of the supplied chain for distance, place the marked center of the distance sensor target board (1) 1375 mm (54.1 in.) \pm 625 mm(24.6 in) facing the distance sensor.
 - Adjust the height of the distance sensor target board using the adjustable nut (2) to achieve the proper height. The up/down tolerance is \pm 80 mm (3.15 in).
 - Adjust the distance sensor target board lateral position aligning the marked center of the board horizontally with the center of the distance sensor front. The right/left tolerance is \pm 80 mm (3.15 in).
2. Extend the machined arm of the distance sensor target board exposing the reflective surface (3) to the right front side of the vehicle.
3. Place one side of the laser assembly (2) flush against the center of the distance sensor target board (1) to assist in the positioning.

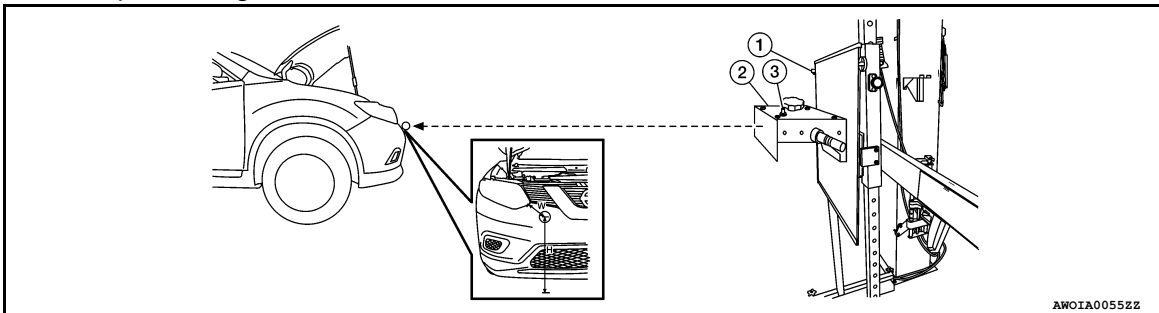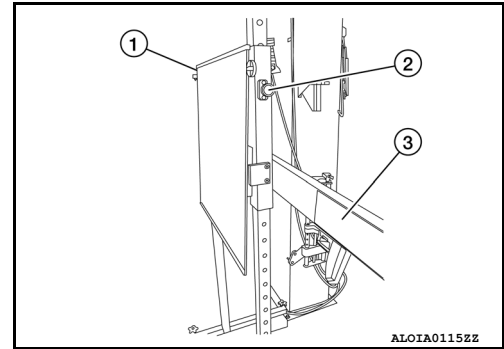

4. Turn the laser assembly ON (3) allowing the laser beam to emit through the opening of the laser assembly toward the center of the distance sensor.
5. Move the distance sensor target board (1) as necessary so that center of distance sensor target board aligns with center of distance sensor.
6. Turn the laser assembly OFF when done.

Are you using Hunter alignment equipment?

- YES >> Refer to Hunter's equipment instructions for complete vehicle set up and distance sensor target board setting. Then, refer to [DAS-77, "Distance Sensor Adjustment"](#).
- NO >> GO TO 2.

2. INSTALLING LASER ASSEMBLY

NOTE:


- Insure the steering wheel is positioned in the center straight forward position.
- Insure all 4 vehicle wheels do not contain any physical damage.

1. Install the wheel adapter (1) on the right front wheel.
2. Mount the laser assembly (2) to the wheel adapter (1) as shown in the figure.

NOTE:

When the power switch is turned ON, the front laser signal (A) will be emitted toward the front distance sensor target board, and the rear laser signal (B) will be emitted toward the rear of the vehicle.

>> GO TO 3.

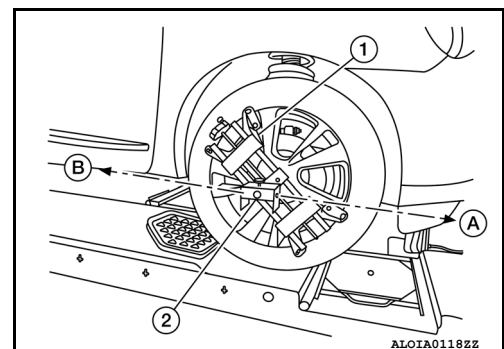


3. SETTING UP STATIONARY TARGET

DISTANCE SENSOR ALIGNMENT


[DRIVER ASSISTANCE SYSTEM]

< BASIC INSPECTION >

1. Place the stationary target next to the right rear tire as shown in the figure.
2. Turn the laser assembly ON allowing the laser beam to be emitted through the front and rear laser assembly openings.
3. Measure and record the distance (D_r) between the edge of the right rear wheel and the laser beam (1) on the stationary target (horizontal line).
4. Measure and record the height (H_r) between the laser beam (1) on the stationary target and ground level (vertical line).

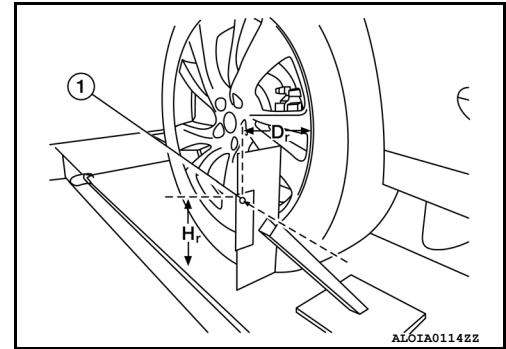

5. Measure and record the distance (D_f) between the edge of the right front wheel and the laser beam signal/opening (1) on the laser assembly (horizontal line).
6. Measure and record the height (H_f) between the laser beam signal/opening (1) on the laser assembly and ground level (vertical line).

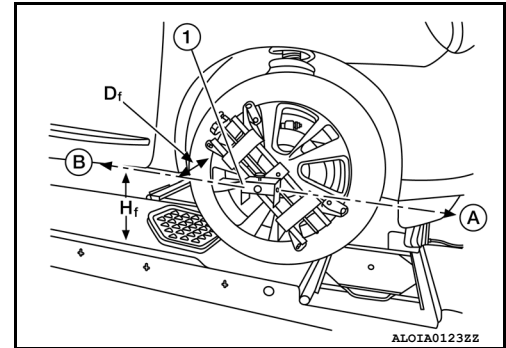

NOTE:

- Horizontal adjustment [front distance (D_f) and rear distance (D_r)] is accomplished by slowly turning the steering wheel until the 2 distances are the same.
 - Vertical adjustment [front height (H_f) and rear height (H_r)] is accomplished by rotating the laser assembly around its axis until the two heights are the same.
 - Directional arrows (A) and (B) are shown to illustrate the direction of the laser assembly beams.
7. Adjust laser beam as necessary until the two distances match and the two heights match.

NOTE:

You will have to verify both horizontal and vertical adjustments anytime one adjustment is made.

>> Refer to [DAS-76. "Setting The Distance Sensor Target Board"](#).

Setting The Distance Sensor Target Board

INFOID:000000011277214

DESCRIPTION

Accurate adjustment of the radar alignment requires that the distance sensor target board be accurately positioned.

CAUTION:

If the radar alignment is adjusted with the distance sensor target board in the incorrect position, the distance system will not function properly or the alignment procedure may not be completed successfully.


1. DISTANCE SENSOR TARGET BOARD FINAL SETTING

1. With the distance sensor target board arm extended, the laser beam (1) emitted by the laser assembly (A) will be reflected back (B) toward the laser assembly.

NOTE:

When adjusted properly, reflected laser beam (B) must align with emitted laser beam (A) and the two laser beams will be seen as one.

2. Rotate the distance sensor target board to achieve the necessary horizontal adjustment.
3. Adjust the distance sensor target board leveling screws to achieve the necessary vertical adjustment.

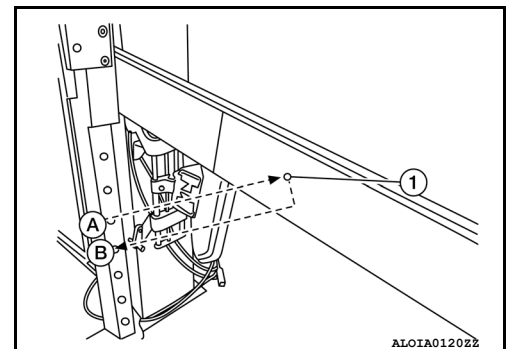


DISTANCE SENSOR ALIGNMENT

[DRIVER ASSISTANCE SYSTEM]

< BASIC INSPECTION >


- The figure shown illustrates the laser beam (A) emitted by the laser assembly (1) and its reflection (B) off of the distance sensor target board arm.

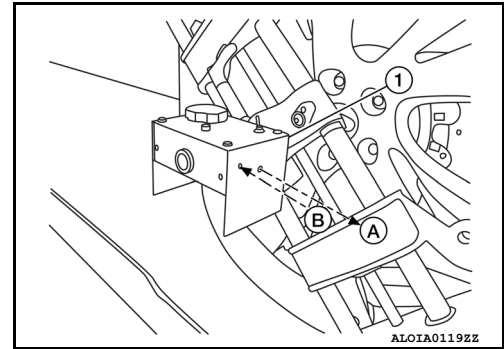

>> GO TO 2.

2. CHECK THE POSITION OF THE DISTANCE SENSOR TARGET BOARD

Do not place anything other than the distance sensor target board in the space shown in front of the vehicle (view from top).

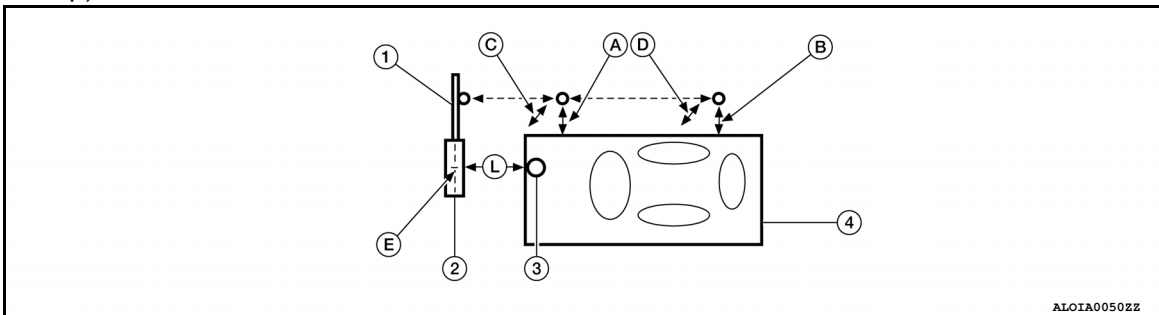

- | | | |
|---|--|--|
| 1. Distance sensor target board arm | 2. Distance sensor target board | 3. Distance sensor |
| 4. Vehicle | A. Distance between front wheel and laser beam (D_f) | B. Distance between rear wheel and laser beam (D_r) |
| C. Height between front laser beam and ground (H_f) | D. Height between rear laser beam and ground (H_r) | E. Distance sensor target board center position (Position 2) |
| L. 1 - 1.5 m (39.3 - 59 in.) | | |

>> Refer to [DAS-77. "Distance Sensor Adjustment"](#).

Distance Sensor Adjustment

INFOID:000000011277215

DESCRIPTION

The radar alignment is performed automatically with CONSULT.

CAUTION:

Perform all necessary work for radar alignment until the adjustment completes as shown in the procedure. If the procedure does not complete, the FCW system is inoperable.

1. PERFORM RADAR ALIGNMENT

- Start the engine.
- Connect CONSULT and select "Work support" of "LASER/RADAR".
- Select "MILLIWAVE RADAR ADJUST" after the "Work support" screen is displayed.

NOTE:

- Confirm the following items;
- The target should be accurately placed.
 - The vehicle should be stopped.

- Select "Start" after the "MILLIWAVE RADAR ADJUST" screen is displayed.

CAUTION:

Never select "Start" when the target is not accurately placed.

- Select "Start" after the preparation information is displayed.
- Select "Next" after the "Starting alignment." screen is displayed.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

DISTANCE SENSOR ALIGNMENT

< BASIC INSPECTION >

[DRIVER ASSISTANCE SYSTEM]

NOTE:

If the radar is in alignment at this time, "Alignment in progress" is displayed. It may take several 10s of seconds until the result is displayed.

7. Confirm the displayed item.
 - "Alignment completed.": Go to 8.
 - Except "Alignment completed.": Perform the following services.

Displayed item	Possible cause	Service procedure
Alignment condition is not ready.	<ul style="list-style-type: none"> DTC is detected (Except C1A12). The position of the Distance sensor target board is not correct. Vehicle is moving. 	Check the vehicle condition and perform radar alignment again.
Alignment condition is not ready. (Stop the vehicle.)	Vehicle is moving.	Stop the vehicle and perform radar alignment again.
Target is not detected.	<ul style="list-style-type: none"> A target is not-yet-placed. (The Distance sensor cannot detect target) The position of the Distance sensor target board is not correct. The position of the Distance sensor is not correct. 	Check the target board condition and perform radar alignment again.
Sensor malfunction.	Distance sensor malfunction.	Check the vehicle condition and perform radar alignment again.

NOTE:

Replace Distance sensor if "Sensor malfunction." is repeatedly indicated.

8. Confirm displayed value.

Displayed item	Monitor item	Reference value
Alignment completed.	FACTORY AIM L/R	Less than 3.00 deg
	FACTORY AIM U/D	Less than 3.00 deg
	AIMING VALUE L/R	Less than 3.00 deg
	AIMING VALUE U/D	Less than 3.00 deg

- Within reference value: Go to 9.
- Outside of reference value: Check the target board condition and perform radar alignment again.

NOTE:

- Check the condition of the Distance sensor installation.
- Check the vehicle for damage.
- Replace Distance sensor if it is outside the reference value, even when Distance sensor installation is installed normally and the vehicle is not damaged.

9. Select "OK" after the "No error detected." is displayed.
10. Select "OK" after the "End of alignment." is displayed.

CAUTION:

Once "MILLIWAVE RADAR ADJUST" is started with CONSULT, always continue the work until the horizontal radar alignment is completed successfully. If the job is stopped midway, the radar alignment is not adjusted and the FCW system cannot operate.

>> RADAR ALIGNMENT END

ACTION TEST

LDW

LDW : Description

INFOID:000000011277216

- Perform action test to verify the customer's concern.
- Perform action test and check the system operation after system diagnosis.

WARNING:

Be careful of traffic conditions and safety around the vehicle when performing road test.

CAUTION:

- Fully understand the following items well before the road test;
 - Precautions: Refer to [DAS-9, "Precautions for Driver Assistance Systems"](#).
 - System description for LDW: Refer to [DAS-15, "LDW : System Description"](#).
 - System description for BSW: Refer to [DAS-19, "BSW : System Description"](#).
 - System description for MOD: Refer to [DAS-25, "MOD : System Description"](#).
 - Handling precaution: Refer to [DAS-35, "Precautions for Lane Departure Warning"](#).

LDW : Inspection Procedure

INFOID:000000011277217

WARNING:

Be careful of traffic conditions and safety around the vehicle when performing road test.

CAUTION:

- Fully understand the following items well before the road test;
 - Precautions: Refer to [DAS-9, "Precautions for Driver Assistance Systems"](#).
 - System description for LDW: Refer to [DAS-15, "LDW : System Description"](#).
 - System description for BSW: Refer to [DAS-19, "BSW : System Description"](#).
 - System description for MOD: Refer to [DAS-25, "MOD : System Description"](#).
 - Handling precaution: Refer to [DAS-35, "Precautions for Lane Departure Warning"](#).

1. CHECK LDW SYSTEM SETTING

1. Start the engine.
2. Check that the LDW system setting can be enabled/disabled on the vehicle information display.
3. Turn OFF the ignition switch and wait for 30 seconds or more.
4. Check that the previous setting is saved when the engine starts again.

>> GO TO 2.

2. ACTION TEST FOR LDW

1. Enable the setting of the LDW system on the vehicle information display.
2. Turn warning systems switch ON (warning systems ON indicator is ON).
3. Check the LDW operation according to the following table.


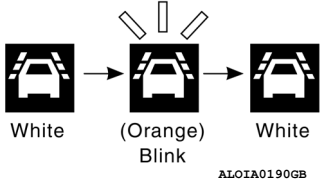

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

ACTION TEST

< BASIC INSPECTION >

[DRIVER ASSISTANCE SYSTEM]

Vehicle condition/ Driver's operation		Action	Warning systems ON indicator	Indication on the combination meter	Buzzer
Less than Approx. 60 km/h (40 MPH)	Close to lane marker	No action	ON	 White <small>ALOIA0191GB</small>	—
Approx. 70 km/h (45 MPH) or more	Close to lane marker	Warning <ul style="list-style-type: none"> • Buzzer sounds • Warning lamp blinks 	ON	 White (Orange) Blink <small>ALOIA0190GB</small>	Short continuous beeps
	<ul style="list-style-type: none"> • Close to lane marker • Turn signal ON (Deviate side) 	No action	ON	 White <small>ALOIA0191GB</small>	—

NOTE:

After the operating conditions of warning are satisfied, the warning continues until the vehicle speed reaches approximately 60 km/h (40 MPH). Refer to [DAS-15, "LDW : System Description"](#).

>> Inspection End.

BSW

BSW : Description

INFOID:000000011277218

- Perform action test to verify the customer's concern.
- Perform action test and check the system operation after system diagnosis.

WARNING:

Be careful of traffic conditions and safety around the vehicle when performing road test.

CAUTION:

- Fully understand the following items well before the road test;
 - Precautions: Refer to [DAS-9, "Precautions for Driver Assistance Systems"](#).
 - System description for LDW: Refer to [DAS-15, "LDW : System Description"](#).
 - System description for BSW: Refer to [DAS-19, "BSW : System Description"](#).
 - System description for MOD: Refer to [DAS-25, "MOD : System Description"](#).
 - Handling precaution: Refer to [DAS-36, "Precautions for Blind Spot Warning"](#).

BSW : Inspection Procedure

INFOID:000000011277219

WARNING:

Be careful of traffic conditions and safety around the vehicle when performing road test.

CAUTION:

- Fully understand the following items well before the road test;
 - Precautions: Refer to [DAS-9, "Precautions for Driver Assistance Systems"](#).
 - System description for LDW: Refer to [DAS-15, "LDW : System Description"](#).
 - System description for BSW: Refer to [DAS-19, "BSW : System Description"](#).
 - System description for MOD: Refer to [DAS-25, "MOD : System Description"](#).

ACTION TEST

< BASIC INSPECTION >

[DRIVER ASSISTANCE SYSTEM]

- Handling precaution: Refer to [DAS-36. "Precautions for Blind Spot Warning"](#).

1. CHECK BSW SYSTEM SETTING

1. Start the engine.
2. Check that the BSW system setting can be enabled/disabled on the vehicle information display.
3. Turn OFF the ignition switch and wait for 30 seconds or more.
4. Check that the previous setting is saved when the engine starts again.

>> GO TO 2.

2. ACTION TEST FOR BSW

1. Enable the setting of the BSW system on the vehicle information display.
2. Turn warning systems switch ON (warning systems ON indicator is ON).
3. Check the BSW operation according to the following table.

Vehicle condition/Driver's operation

Warning systems ON indicator	Vehicle speed (Approx.) [km/h (MPH)]	Turn signal condition	Status of vehicle detection within detection area	Indication on the combination meter	Buzzer
ON	Less than Approx. 29 km/h (18 MPH)	—	—	OFF	OFF
	Approx. 32 km/h (20 MPH) or more	—	Vehicle is absent	OFF	OFF
		OFF	Vehicle is detected	ON	OFF
		ON (vehicle detected direction)	Before turn signal operates vehicle is detected	Blink	Short continuous beeps
			Vehicle is detected after turn signal operates	Blink	OFF

Indicator ON
Indicator OFF
200 ms
200 ms
JSOIA0251GB

Buzzer ON
Buzzer OFF
80 ms
550 ms
JSOIA0252GB

NOTE:

After the operating conditions of warning are satisfied, the warning continues until the vehicle speed reaches approximately 60 km/h (40 MPH). Refer to [DAS-19. "BSW : System Description"](#).

>> Inspection End.

MOD

MOD : Description

INFOID:000000011277220

- Perform action test to verify the customer's concern.
- Perform action test and check the system operation after system diagnosis.

WARNING:

Be careful of traffic conditions and safety around the vehicle when performing road test.

CAUTION:



P

ACTION TEST

< BASIC INSPECTION >

[DRIVER ASSISTANCE SYSTEM]

- Fully understand the following items well before the road test;
- Precautions: Refer to [DAS-9, "Precautions for Driver Assistance Systems"](#).
- System description for LDW: Refer to [DAS-15, "LDW : System Description"](#).
- System description for BSW: Refer to [DAS-19, "BSW : System Description"](#).
- System description for MOD: Refer to [DAS-25, "MOD : System Description"](#).
- Handling precaution: Refer to [DAS-37, "Precautions for Moving Objects Detection"](#).

MOD : Inspection Procedure

INFOID:000000011277221

WARNING:

Be careful of traffic conditions and safety around the vehicle when performing road test.

CAUTION:

- Fully understand the following items well before the road test;
- Precautions: Refer to [DAS-9, "Precautions for Driver Assistance Systems"](#).
- System description for LDW: Refer to [DAS-15, "LDW : System Description"](#).
- System description for BSW: Refer to [DAS-19, "BSW : System Description"](#).
- System description for MOD: Refer to [DAS-25, "MOD : System Description"](#).
- Handling precaution: Refer to [DAS-37, "Precautions for Moving Objects Detection"](#).

1. CHECK MOD SYSTEM SETTING

1. Start the engine.
2. Check that the MOD system setting can be enabled/disabled on the vehicle information display.
3. Turn OFF the ignition switch and wait for 30 seconds or more.
4. Check that the previous setting is saved when the engine starts again.

>> GO TO 2.

2. ACTION TEST FOR MOD

1. Enable the setting of the MOD system on the vehicle information display.
2. Turn warning systems switch ON (warning systems ON indicator is ON).
3. Check the MOD operation according to the following table.

Vehicle condition/ Driver's operation			Vehicle response	
Moving Object De- tection ON indicator	Vehicle speed (Approx.) [km/h (MPH)]	Status of vehicle detection within detection area	Indication on the Moving Object Detection indicator	Buzzer
OFF	—	—	OFF	OFF
Blue	Less than approx. 8 km/h (5 MPH)	Vehicle is detected	ON	ON
		Vehicle is absent	ON	OFF
	Approx. 8 km/h (5 MPH) or more	Vehicle is detected	ON	OFF
Vehicle is not detected		ON	OFF	

NOTE:

After the operating conditions of warning are satisfied, the warning continues until the vehicle reaches a higher speed. Refer to [DAS-25, "MOD : System Description"](#).

>> Inspection End.

FCW

FCW : Description

INFOID:000000011505728

- Perform action test to verify the customer's concern.
- Perform action test and check the system operation after system diagnosis.

WARNING:

Be careful of traffic conditions and safety around the vehicle when performing road test.

CAUTION:

- Fully understand the following items well before the road test;
- Precautions: Refer to [DAS-9, "Precautions for Driver Assistance Systems"](#).

ACTION TEST

[DRIVER ASSISTANCE SYSTEM]

< BASIC INSPECTION >

- System description for LDW: Refer to [DAS-15, "LDW : System Description"](#).
- System description for BSW: Refer to [DAS-19, "BSW : System Description"](#).
- System description for MOD: Refer to [DAS-25, "MOD : System Description"](#).
- System description for FCW: Refer to [DAS-28, "FCW : System Description"](#).
- Handling precaution: Refer to [DAS-35, "Precautions for Forward Collision Warning"](#).

FCW : Inspection Procedure

INFOID:0000000011505729

WARNING:

Be careful of traffic conditions and safety around the vehicle when performing road test.

CAUTION:

- Fully understand the following items well before the road test;
- Precautions: Refer to [DAS-9, "Precautions for Driver Assistance Systems"](#).
- System description for LDW: Refer to [DAS-15, "LDW : System Description"](#).
- System description for BSW: Refer to [DAS-19, "BSW : System Description"](#).
- System description for MOD: Refer to [DAS-25, "MOD : System Description"](#).
- System description for FCW: Refer to [DAS-28, "FCW : System Description"](#).
- Handling precaution: Refer to [DAS-35, "Precautions for Forward Collision Warning"](#).




1. CHECK FCW SYSTEM SETTING

1. Start the engine.
2. Check that the FCW system setting can be enabled/disabled on the vehicle information display.
3. Turn OFF the ignition switch and wait for 30 seconds or more.
4. Check that the previous setting is saved when the engine starts again.

>> GO TO 2.

2. ACTION TEST FOR FCW

1. Enable the setting of the FCW system on the vehicle information display.
2. Turn warning systems switch ON (warning systems ON indicator is ON).
3. Check the FCW operation according to the following table:

Vehicle condition/ Driver's operation	Action	Warning systems ON indicator	Indication on the combination meter	Buzzer
Less than Approx. 10 MPH (15 km/h)	—	ON	FCW indicator (white) ON steady  <small>AWOIA0096ZZ</small>	—
Approx. 10 MPH (15 km/h) or more	Vehicle is not detected	ON	FCW indicator (white) ON steady  <small>AWOIA0096ZZ</small>	OFF
	Vehicle is detected	• Warning buzzer sounds • Warning lamp blinks	ON  <small>AWOIA0096ZZ</small>	Short continuous beeps

NOTE:

DAS

ACTION TEST

< BASIC INSPECTION >

[DRIVER ASSISTANCE SYSTEM]

If the vehicle speed exceeds approximately 10 MPH (15 km/h), FCW function operates until the vehicle speed becomes lower than approximately 10 MPH (15 km/h).

>> Inspection End.

ADDITIONAL SERVICE WHEN REPLACING AROUND VIEW MONITOR CONTROL UNIT

< BASIC INSPECTION >

[DRIVER ASSISTANCE SYSTEM]

ADDITIONAL SERVICE WHEN REPLACING AROUND VIEW MONITOR CONTROL UNIT

Description

INFOID:000000011444769

BEFORE REPLACEMENT

When replacing around view monitor control unit, save or print current vehicle specification with CONSULT configuration before replacement.

NOTE:

If "Before Replace ECU" cannot be used, use the "After Replace ECU" or "Manual Configuration" after replacing around view monitor control unit.

AFTER REPLACEMENT

CAUTION:

When replacing around view monitor control unit, you must perform "After Replace ECU" with CONSULT.

- Complete the procedure of "After Replace ECU" in order.
- If you set incorrect "After Replace ECU", incidents might occur.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.

Work Procedure

INFOID:000000011444770

1. SAVING VEHICLE SPECIFICATION

CONSULT

Enter "Re/Programming, Configuration" and perform "Before Replace ECU" to save or print current vehicle specification.

NOTE:

If "Before Replace ECU" cannot be used, use the "After Replace ECU" or "Manual Configuration" after replacing around view monitor control unit.

>> GO TO 2.

2. REPLACE AROUND VIEW MONITOR CONTROL UNIT

Replace around view monitor control unit. Refer to [AV-380, "Removal and Installation"](#).

>> GO TO 3.

3. WRITING VEHICLE SPECIFICATION

CONSULT

1. Enter "Re/Programming, Configuration".
2. If "Before Replace ECU" operation was performed, automatically an "Operation Log Selection" screen will be displayed. Select the applicable file from the "Saved Data List" and press "Confirm" to write vehicle specification. Refer to [DAS-86, "Work Procedure"](#).
3. If "Before Replace ECU" operation was not performed, select "After Replace ECU" or "Manual Configuration" to write vehicle specification. Refer to [DAS-86, "Work Procedure"](#).

>> GO TO 4.

4. OPERATION CHECK

Check that the operation of the around view monitor control unit and camera images (fixed guide lines and predictive course lines) are normal.

>> Work End.

CONFIGURATION (AROUND VIEW MONITOR CONTROL UNIT)

< BASIC INSPECTION >

[DRIVER ASSISTANCE SYSTEM]

CONFIGURATION (AROUND VIEW MONITOR CONTROL UNIT)

Description

INFOID:000000011444771

Vehicle specification needs to be written with CONSULT because it is not written after replacing around view monitor control unit.

Configuration has three functions as follows:

Function	Description
"Before Replace ECU"	<ul style="list-style-type: none">• Reads the vehicle configuration of current around view monitor control unit.• Saves the read vehicle configuration.
"After Replace ECU"	Writes the vehicle configuration with manual selection.
"Select Saved Data List"	Writes the vehicle configuration with saved data.

CAUTION:

- When replacing around view monitor control unit, you must perform "Select Saved Data List" or "After Replace ECU" with CONSULT.
- Complete the procedure of "Select Saved Data List" or "After Replace ECU" in order.
- If you set incorrect "Select Saved Data List" or "After Replace ECU", incidents might occur.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.
- Never perform "Select Saved Data List" or "After Replace ECU" except for new around view monitor control unit.

Work Procedure

INFOID:000000011444772

1. WRITING MODE SELECTION

CONSULT

Select "Reprogramming, Configuration" of around view monitor control unit.

When writing saved data>>GO TO 2.

When writing manually>>GO TO 3.

2. PERFORM "SAVED DATA LIST"

CONSULT

Automatically "Operation Log Selection" window will display if "Before Replace ECU" was performed. Select applicable file from the "Save Data List" and press "Confirm".

>> Work End.

3. PERFORM "AFTER REPLACE ECU" OR "MANUAL CONFIGURATION"

CONSULT

1. Select "After Replace ECU" or "Manual Configuration".
2. Identify the correct model and configuration list. Refer to [DAS-87. "Configuration List"](#).
3. Confirm and/or change setting value for each item.

CAUTION:

Thoroughly read and understand the vehicle specification. ECU control may not operate normally if the setting is not correct.

4. Select "Next".

CAUTION:

Make sure to select "Next", confirm each setting value and press "OK" even if the indicated configuration of brand new around view monitor control unit is same as the desirable configuration. If not, configuration which is set automatically by selecting vehicle model can not be memorized.

5. When "Completed", select "End".

>> GO TO 4.

4. OPERATION CHECK

CONFIGURATION (AROUND VIEW MONITOR CONTROL UNIT)

< BASIC INSPECTION >

[DRIVER ASSISTANCE SYSTEM]

Confirm that each function controlled by around view monitor control unit operates normally.

>> Work End.

Configuration List

INFOID:0000000011444773

CAUTION:

Thoroughly read and understand the vehicle specification. Incorrect settings may result in abnormal control of ECU.

MANUAL SETTING ITEM	
Items	Setting value
BCI FUNCTION	WITH ⇔ WITHOUT

⇔: Items which confirm vehicle specifications

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

PREDICTIVE COURSE LINE CENTER POSITION ADJUSTMENT

< BASIC INSPECTION >

[DRIVER ASSISTANCE SYSTEM]

PREDICTIVE COURSE LINE CENTER POSITION ADJUSTMENT

Description

INFOID:000000011444774

Adjust the center position of the predictive course line of the rear view monitor if it is shifted.

Work Procedure

INFOID:000000011444775

1.DRIVING

Drive the vehicle straight ahead 100 m (328.1 ft) or more at a speed of 30 km/h (18.6 MPH) or more.

>> End.

CALIBRATING CAMERA IMAGE (AROUND VIEW MONITOR)

< BASIC INSPECTION >

[DRIVER ASSISTANCE SYSTEM]

CALIBRATING CAMERA IMAGE (AROUND VIEW MONITOR)

Description

INFOID:000000011444776


- Calibration must be performed after removing/replacing the cameras, removing parts (e.g. front grille, door mirror, and others) mounted on the cameras, or replacing the Around view monitor control unit.
- The use of CONSULT is required to perform calibration or writing of calibration results to the Around view monitor control unit.
- Align the white lines on the road near the vehicle at the boundary of each camera image by this camera calibration. The white lines far from the vehicle may not be aligned at the boundary of each camera image. The farther the line, the greater the difference is.

Work Procedure

INFOID:000000011444777


CALIBRATION FLOWCHART

Following the flowchart shown in the figure, perform the calibration.

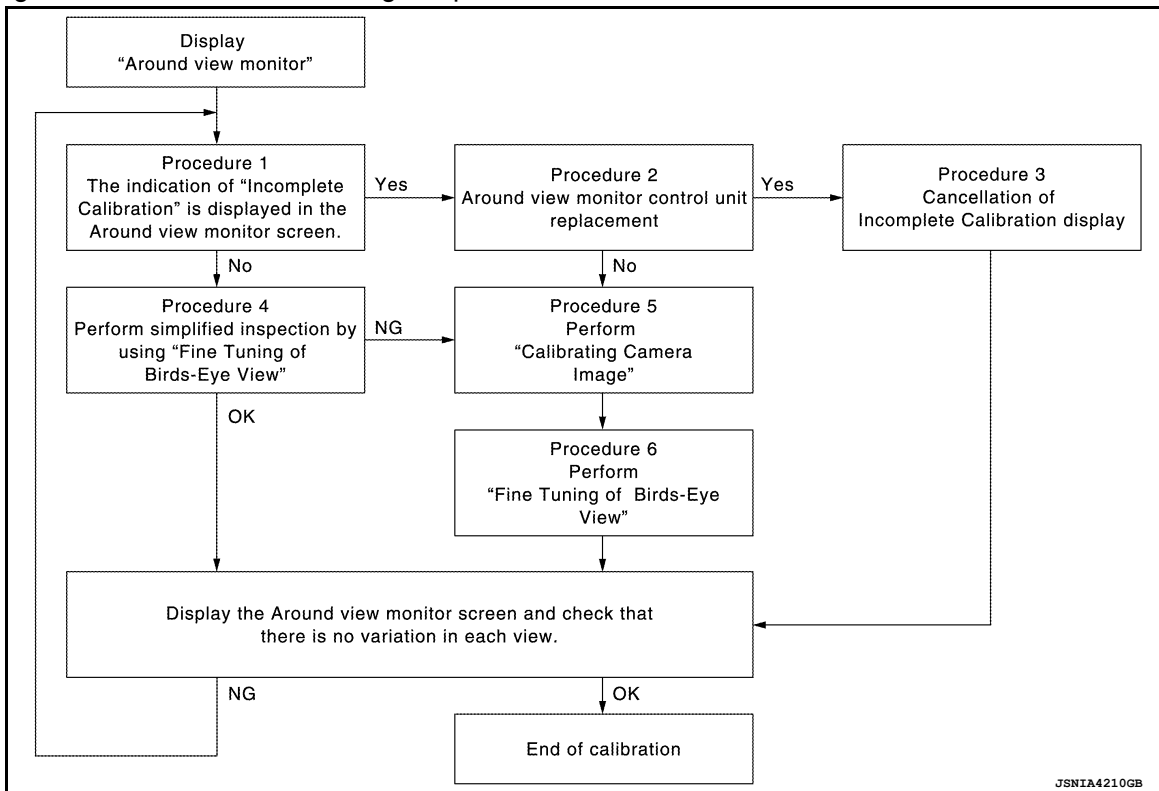

NOTE:

View in the incomplete calibration state is indicated by "⊠" on the around view monitor.

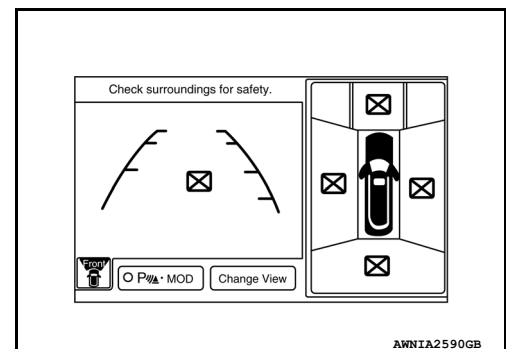

CALIBRATION PROCEDURE

1. AROUND VIEW MONITOR SCREEN CONFIRMATION

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

CALIBRATING CAMERA IMAGE (AROUND VIEW MONITOR)


< BASIC INSPECTION >

[DRIVER ASSISTANCE SYSTEM]

Check that there is no indication of "Incomplete calibration".

Is the "Incomplete calibration" display visible?

- YES >> GO TO 2.
- NO >> GO TO 4.

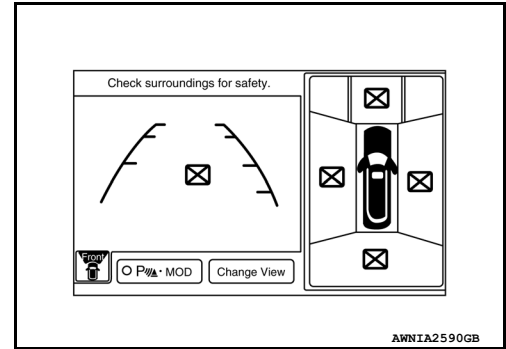

2. CHECK THAT AROUND VIEW MONITOR CONTROL UNIT IS REPLACED

Check that the around view monitor control unit is replaced.

Is the around view monitor control unit replaced?

- YES >> GO TO 3.
- NO >> GO TO 5.

3. CANCEL THE INDICATION OF INCOMPLETE CALIBRATION (PERFORM THIS ONLY AFTER REPLACING AROUND VIEW MONITOR CONTROL UNIT.)

Ⓟ CONSULT work support

1. On the CONSULT screen, touch "CALIBRATING CAMERA IMAGE (FRONT CAMERA)", "CALIBRATING CAMERA IMAGE (PASS-SIDE CAMERA)", "CALIBRATING CAMERA IMAGE (DR-SIDE CAMERA)", or "CALIBRATING CAMERA IMAGE (REAR CAMERA)" to accept the selection.

NOTE:

To cancel the indication of Incomplete calibration, select items based on the target camera.

2. On the adjustment screen of each camera, touch "APPLY" button. After this, touch "OK" button.


CAUTION:

- Never perform operations other than those mentioned above.
- Never perform "Initialize Camera Image Calibration".

3. Display the around view monitor screen to check that there is no errors, such as deviations among the camera images.

Is there a malfunction?

- YES >> Calibration End.
- NO >> GO TO 1.

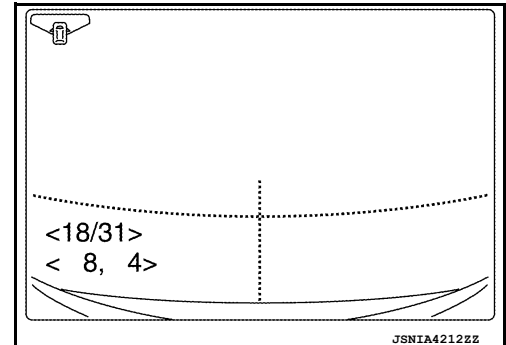

4. PERFORM SIMPLIFIED CONFIRMATION/ADJUSTMENT BY "FINE TUNING OF BIRDS-EYE VIEW"


1. Put target line 1 on the ground beside each axle using packing tape, etc.
2. Put target lines 2 equal to the vehicle total length + approximately 1.0 m (39.3 in) from the vehicle side (right and left) at approximately 30 cm (11.8 in) away from the vehicle (make the line as parallel with the vehicle as possible).

CALIBRATING CAMERA IMAGE (AROUND VIEW MONITOR)

< BASIC INSPECTION >

[DRIVER ASSISTANCE SYSTEM]

Preparation of simplified target line

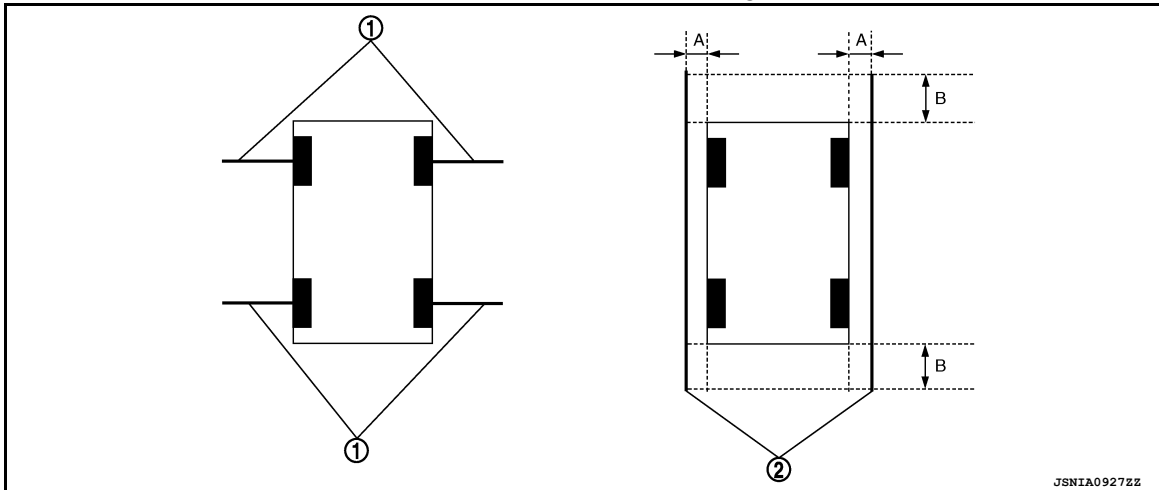


1. Target lines 1
2. Target lines 2
- A. Approx. 30 cm (11.8 in)
- B. Approx. 1.0 m (39.3 in)

3. CONSULT work support
Touch "FINE TUNING OF BIRDS-EYE VIEW" on the CONSULT screen.
4. On the CONSULT screen, touch "SELECT" button to select right or left camera and perform camera calibration as instructed below:
 - If the marker on the screen deviates from Target line 1, touch "AXIS X" button and "AXIS Y" button to adjust so that the marker is placed on the Target line 1.
 - If Target line 2 is misaligned among the cameras, adjust each camera image to bring Target line 2 into a straight line.

CAUTION:

Never adjust the front camera and rear camera. Only adjust the right and left cameras.

Simplified target line adjustment method

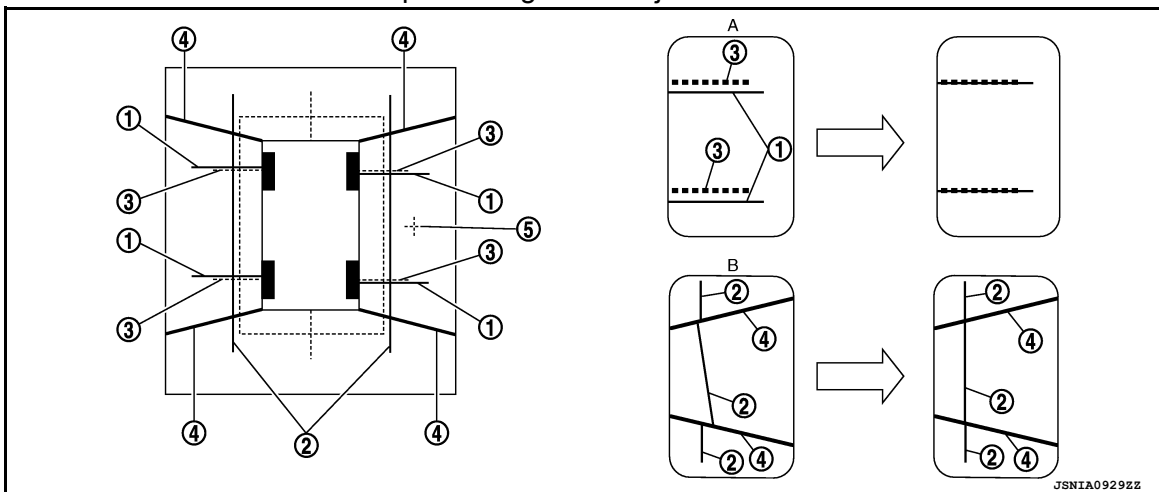

1. Target lines 1
2. Target lines 2
3. Marker for target line 1
4. Boundary between cameras
5. Crosshairs cursor (mark indicated the selected camera)
- A. Adjustment method for target lines 1 (right)
- B. Adjustment method for target lines 2 (right)

5. Adjust right and left cameras. Touch "APPLY" on the CONSULT screen to display adjustment results.
6. After adjusting right and left cameras, check that the marker is properly placed on the screen and there is no deviation in Target line 1.

NOTE:

- It can be initialized to the NISSAN factory default condition with "Initialize Camera Image Calibration".
- The adjustment value is cancelled on this mode by performing "Initialize Camera Image Calibration".

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

CALIBRATING CAMERA IMAGE (AROUND VIEW MONITOR)

< BASIC INSPECTION >

[DRIVER ASSISTANCE SYSTEM]

Is the difference corrected?

YES >> On the CONSULT screen, touch "OK" button to complete writing to the around view monitor control unit.


NO >> GO TO 5.

5.PERFORM "CALIBRATING CAMERA IMAGE"

Preparation of target line

1. Hang a string with a weight as shown in the figure. Put the points FM0, RM0 (mark) on the ground at the center of the vehicle front end and rear end with white packing tape or a pen.
2. Route the vinyl string under the vehicle, and then pull and fix it on the point approximately 1.0 m (39.9 in) to the front and rear of the vehicle through the points FM0 and RM0 using packing tape.


Target line preparation procedure 1

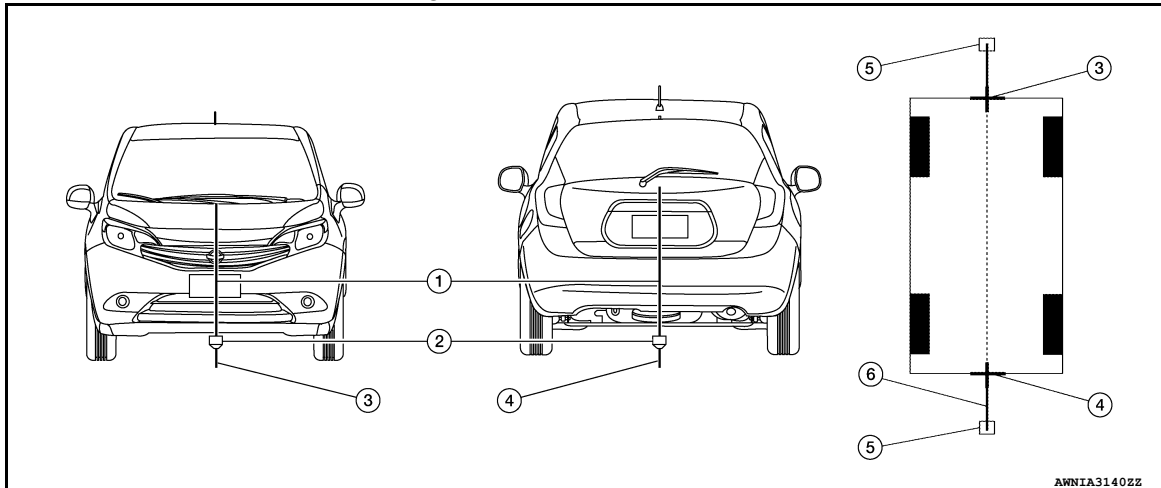

- | | | |
|---------------------|---|---------------------|
| 1. Thread | 2. Weight | 3. Point FM0 (mark) |
| 4. Point RM0 (mark) | 5. Packing tape (to fix the vinyl string) | 6. Vinyl string |

3. Put the points FM and RM (mark) 75 cm (29.5 in) from the points FM0 and RM0 individually.
4. Route the vinyl string through the points FM and RM using a triangle scale, and then fix it at approximately 1.5 m (59 in) on both sides with packing tape.
5. Put the points FL, FR, RL, and RR (mark) to both right and left [vehicle width / 2 + 30 cm (11.8 in)] from the points FM and RM.

Target line preparation procedure 2

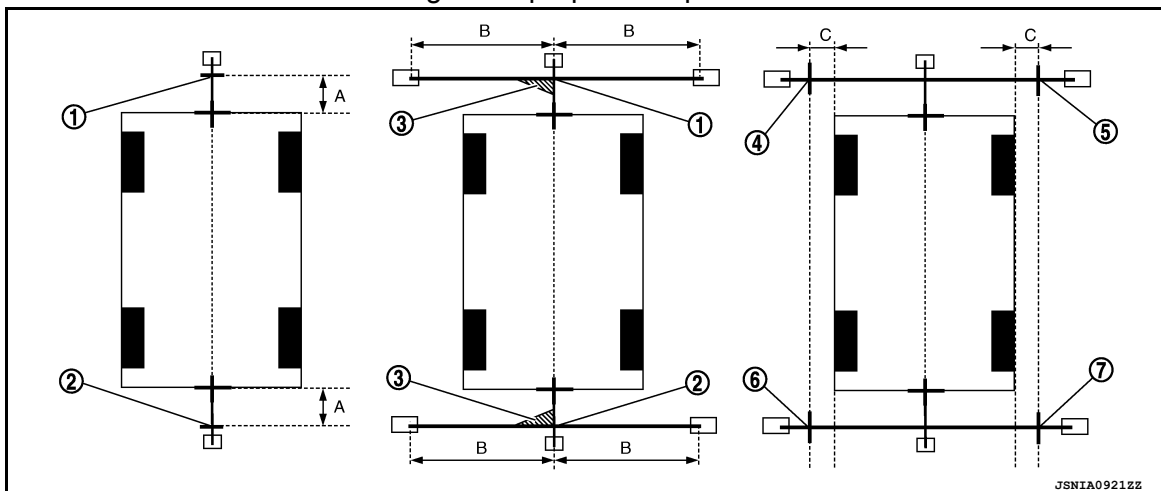

- | | | |
|--------------------|--------------------|--------------------|
| 1. Point FM | 2. Point RM | 3. Triangle scale |
| 4. Point FL (mark) | 5. Point FR (mark) | 6. Point RL (mark) |
| | | 7. Point RR (mark) |

CALIBRATING CAMERA IMAGE (AROUND VIEW MONITOR)

< BASIC INSPECTION >

[DRIVER ASSISTANCE SYSTEM]

7. Point RR (mark)

A. 75 cm (29.5 in)

B. Approx. 1.5 m (59 in)


30 cm (11.8 in)

C. [Vehicle width/ 2 + 30 cm (11.8 in) from the points FM and RM]

6. Draw the lines of the points FL – RL and FR – RR with vinyl string, and fix it with packing tape.

7. Put a mark on the center of each axle, draw vertical lines to the lines of the points FL – RL and FR – RR from the marks on the center of the axle using a triangle scale, and then fix the lines using packing tape.

Target line preparation procedure 3

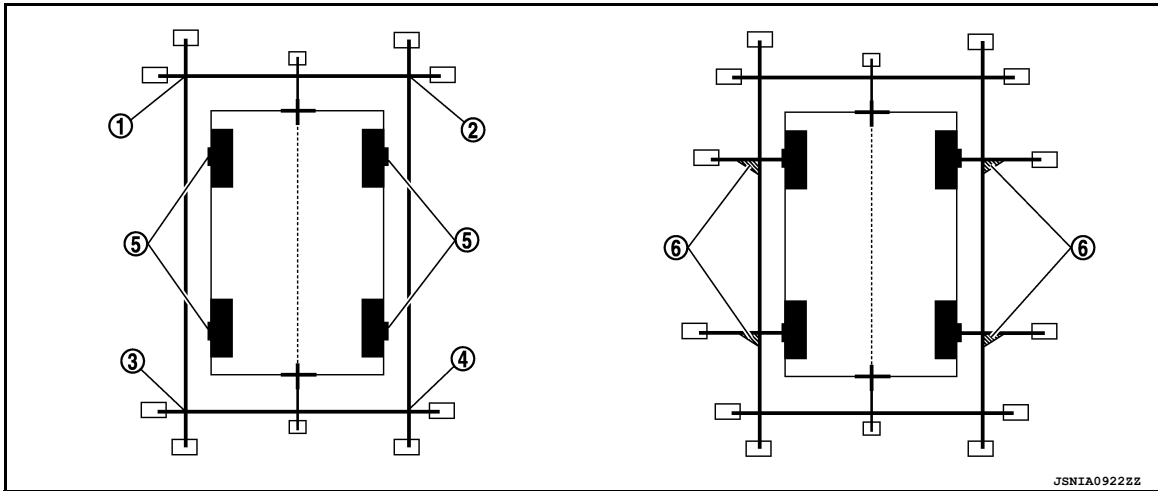

1. Point FL

2. Point FR

3. Point RL

4. Point RR

5. Center position of axle

6. Triangle scale

Perform “Calibrating Camera Image”

CONSULT work support

1. On the CONSULT screen, touch “CALIBRATING CAMERA IMAGE (FRONT CAMERA)”, “CALIBRATING CAMERA IMAGE (PASS-SIDE CAMERA)”, “CALIBRATING CAMERA IMAGE (DR-SIDE CAMERA)”, or “CALIBRATING CAMERA IMAGE (REAR CAMERA)” to accept the selection.

NOTE:

To cancel the indication of Incomplete calibration, select items based on the target camera.


2. On the adjustment screen of each camera, adjust the parameter by touching the “AXIS X” button, “AXIS Y” button, and “ROTATE” button to place the calibration marker shown on the camera screen on the target line drawn on the ground.

Adjustment range

Rotation direction (Center dial) : 31 patterns (16 on the center)

Upper/lower direction (upper/lower switch) : -22 – 22

Left/right direction (left/right switch) : -22 – 22

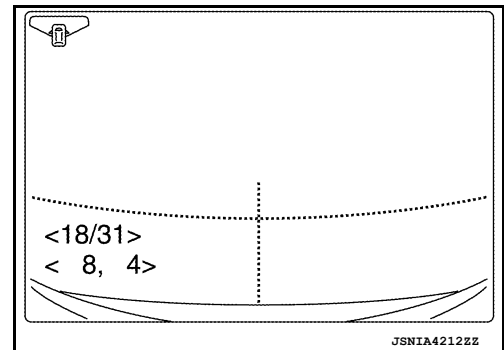

3. Touch “APPLY” button on the CONSULT screen. “PRCSNG” is displayed and adjustment results are shown on the camera screen.

CAUTION:

Check that “PRCSNG” is displayed. Never perform other operations while “PRCSNG” is displayed.

4. Touch “OK” button on the CONSULT screen. “PRCSNG” is displayed and adjustment results are written to the around view monitor control unit.

CAUTION:

Check that “PRCSNG” is displayed. Never perform other operations while “PRCSNG” is displayed.

>> GO TO 6.

6. PERFORM “FINE TUNING OF BIRDS-EYE VIEW”

CALIBRATING CAMERA IMAGE (AROUND VIEW MONITOR)

< BASIC INSPECTION >

[DRIVER ASSISTANCE SYSTEM]

This mode is designed to align the boundary between each camera image that could not be aligned in the "Calibrating Camera Image" mode.

CONSULT work support

1. Select "FINE TUNING OF BIRDS-EYE VIEW" by touching CONSULT screen.
2. On the adjustment screen of each camera, adjust the parameter by touching the "AXIS X" button, "AXIS Y" button", and "ROTATE" button to place the calibration marker shown on the camera screen on the target line drawn on the ground.

NOTE:

Touch "SELECT" button on the CONSULT screen to select the target camera.

3. Touch "APPLY" button on the CONSULT screen. "PRCSNG" is displayed and adjustment results are shown on the camera screen.

CAUTION:

Check that "PRCSNG" is displayed. Never perform other operations while "PRCSNG" is displayed.

4. Touch "OK" button on the CONSULT screen. "PRCSNG" is displayed and adjustment results are written to the around view monitor control unit.


CAUTION:

• **Check that "PRCSNG" is displayed. Never perform other operations while "PRCSNG" is displayed.**

• **After pressing the "OK" button, never press buttons other than the "BACK" button.**

NOTE:

- It can be initialized to the NISSAN factory default condition with "Initialize Camera Image Calibration".
- The adjustment value is cancelled in this mode by performing "Initialize Camera Image Calibration".

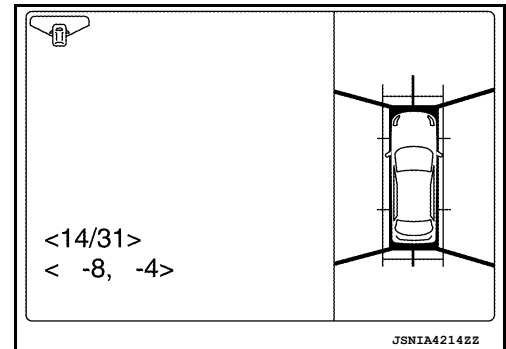

>> Calibration End.

REAR VIEW CAMERA CALIBRATION

< BASIC INSPECTION >

[DRIVER ASSISTANCE SYSTEM]

REAR VIEW CAMERA CALIBRATION

Description

INFOID:0000000011277229

Always perform the calibration after removing and installing or replacing the rear view camera:

- AVM control unit
- Rear view camera

CAUTION:

- Place the vehicle on level ground when the calibration is performed.
- Follow the CONSULT when performing the calibration. (Rear view camera calibration cannot be operated without CONSULT).

Work Procedure (Preparation)

INFOID:0000000011445122

1.PERFORM SELF-DIAGNOSIS

Perform "Self Diagnostic Result" of "AVM" using CONSULT.

Is any DTC detected?

Except "U1308">> Perform diagnosis on the detected DTC and repair or replace the applicable item. Refer to [DAS-48, "DTC Index"](#).

"U1308" or no DTC>> GO TO 2.

2.PREPARATION BEFORE REAR VIEW CAMERA CALIBRATION

NOTE:


Select the "AVM" to diagnose the AVM control unit using CONSULT.

1. Perform pre-inspection for diagnosis.
2. Adjust the tire pressure to the specified pressure value.
3. Maintain no-load in vehicle.
4. Check if coolant and engine oil are filled up to correct level and fuel tank is full.
5. Situate vehicle where the camera is exposed at an atmosphere temperature between 0°C (32°F) and 30°C (86°F).
6. Move the shift selector to P (Park) and release the parking brake.
7. Clean the rear view camera.

>> GO TO 3.

3.PREPARATION OF CALIBRATION TARGET MARK

Prepare the calibration target mark according to the following figure:

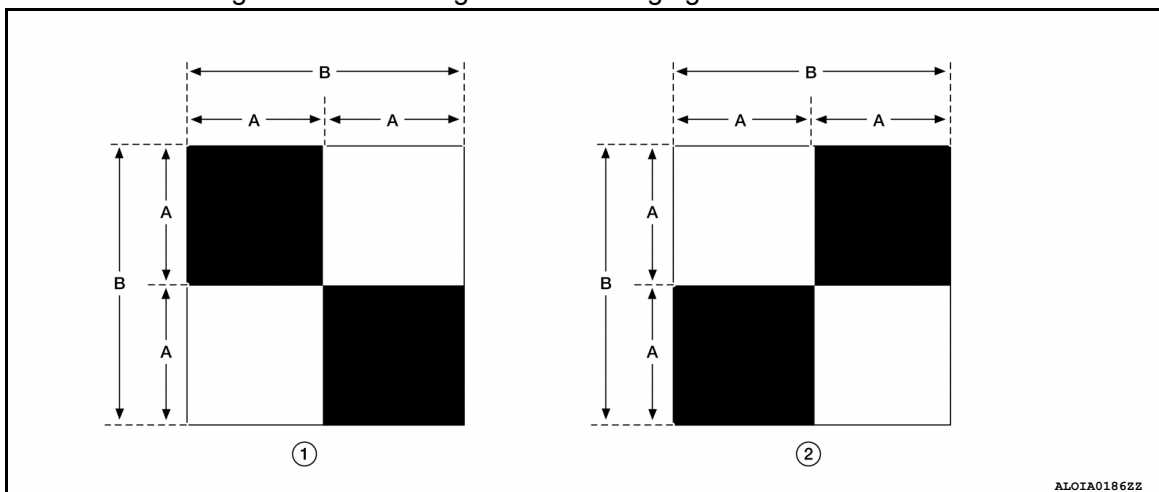

(1) : Left and right targets

(2) : Center target

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

REAR VIEW CAMERA CALIBRATION

< BASIC INSPECTION >

[DRIVER ASSISTANCE SYSTEM]

(A) : Side of the black or white area = 200 mm (7.87 in)

(B) : Side of the square target = 400 mm (15.75 in)

>> Refer to [DAS-96, "Work Procedure \(Target Setting\)"](#).


Work Procedure (Target Setting)

INFOID:000000011445123

CAUTION:

- Perform this operation in a horizontal position where there is a clear view for 3 m (9.84 ft) backward and 4 m (13.12 ft) wide.
- Place the target in a well-lighted location. (Poor lighting may make it hard to adjust.)
- The target may not be detected when it shines by the reflected light of the sun or lighting.
- The target may not be detected when there is the same pattern of black and white as the target when the pattern is within 0.5 m (1.64 ft) from either side and upward/downward position from the target. (It is desirable that the vehicle is positioned on a single-color floor.)

1. TARGET SETTING

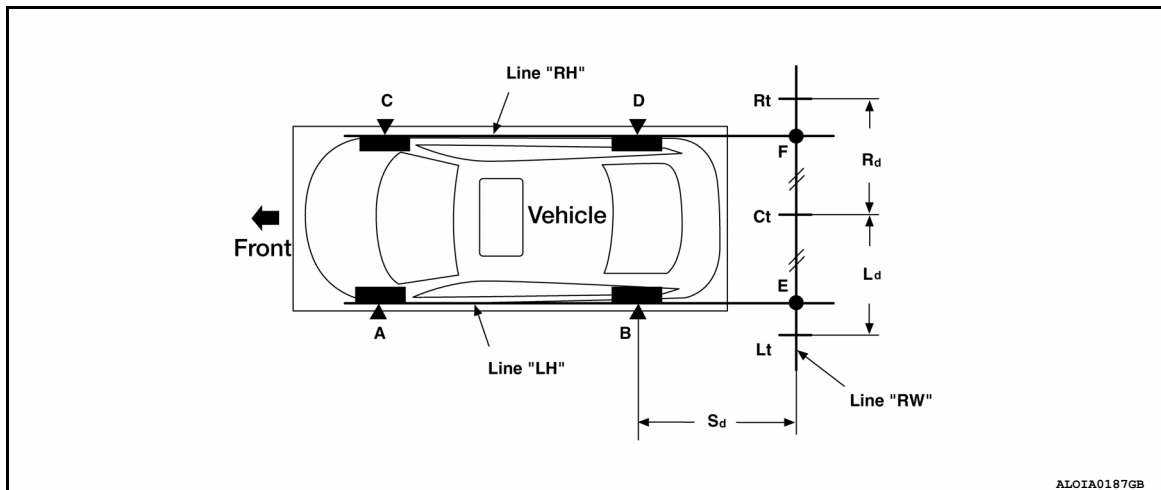

Side distance (Sd): "B" – "E" ("D" – "F") = 2194 mm (86.38 in)

:

Left distance (Ld): "Ct" – "Lt" = 1500 mm (59.06 in)

Right distance (Rd): "Ct" – "Rt" = 1500 mm (59.06 in)

1. Mark points "A", "B", "C" and "D" at the center of the lateral surface of each wheel.

NOTE:

Hang a string with a cone from the fender so as to pass through the center of wheel, and then mark a point at the center of the lateral surface of the wheel.

2. Draw line "LH" passing through points "A" and "B" on the left side of vehicle.

NOTE:

Approximately 2.2 m (7.22 ft) or more at the rear from the rear axle.

3. Mark point "E" on the line "LH" at the positions 2125 mm (83.66 in) from point "B".

4. Draw line "RH" passing through points "C" and "D" on the right side of vehicle in the same way as step 2.


5. Mark point "F" on the line "RH" at the positions 2125 mm (83.66 in) from point "D".

6. Draw line "RW" passing through the points "E" and "F" on the rear of the vehicle.

NOTE:

Approximately 1.8 m (5.91 ft) or more at both left and right sides from vehicle center.

7. Mark point "Ct" at the center of point "E" and "F" on the line "RW".

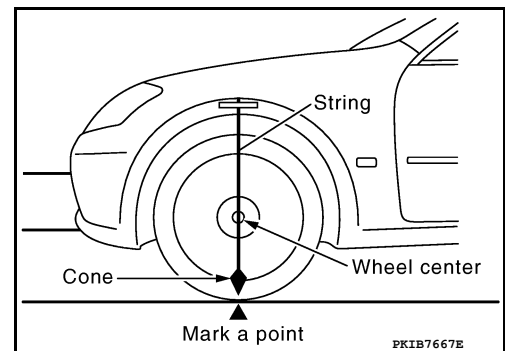

REAR VIEW CAMERA CALIBRATION


[DRIVER ASSISTANCE SYSTEM]

< BASIC INSPECTION >

CAUTION:

Make sure that “E” to “Ct” is equal to “F” to “Ct”.

8. Mark point “Lt” and “Rt” on the line “RW” at the positions 1500 mm (59.06 in) from point “Ct”.
9. Position the center of the target mark to point of “Ct”.

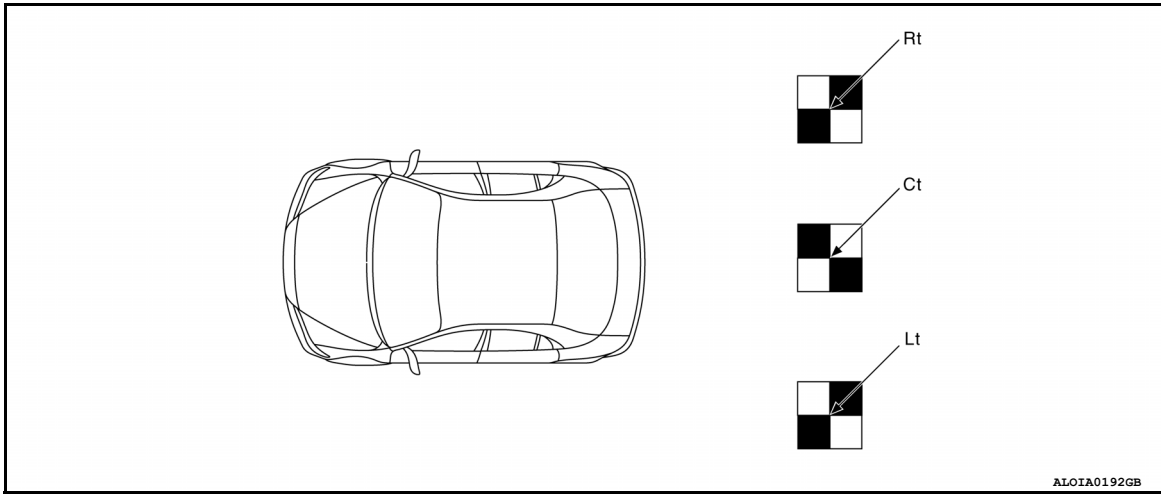

CAUTION:

Make sure that the black/white pattern of the center target is rotated as compared with the left and right targets.

>> Go to [DAS-97. "Work Procedure \(Rear View Camera Calibration\)".](#)

Work Procedure (Rear View Camera Calibration)

INFOID:000000011445124


CAUTION:

Perform the calibration under the specified vehicle condition (fuel full, no-load, specified tire pressure, etc.). Refer to [DAS-95. "Work Procedure \(Preparation\)".](#)

1. CHECK REAR VIEW CAMERA HEIGHT

Measure the rear view camera height “H”.

>> GO TO 2.

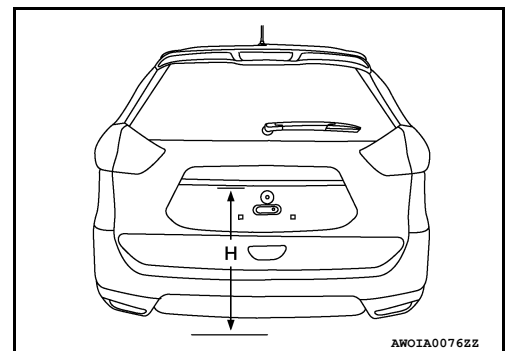

2. REAR VIEW CAMERA CALIBRATION

1. Select “AVM” using CONSULT.
2. Select “REAR CAMERA ITS” in “Work support”.
3. Select “OK”.

CAUTION:

- Perform the calibration after the ignition or engine has been kept on for at least 10 minutes to stabilize camera.
 - Operate CONSULT outside the vehicle, and close all doors to retain appropriate vehicle attitude.
4. Input the rear view camera height “H”, and then touch “APPLY”.
 5. Confirm that the same value is displayed on the center display.
 6. Confirm the following items:
 - The target should be accurately placed.
 - The vehicle should be stopped.
 - The vehicle should be under the specified vehicle condition.

A
B
C
D
E
F
G
H
I
J
K
L
M
N

DAS

P

REAR VIEW CAMERA CALIBRATION

< BASIC INSPECTION >

[DRIVER ASSISTANCE SYSTEM]

7. Select "Start" to perform calibration.
8. Confirm the displayed item.
 - "Completed": Select "Completion".
 - Otherwise, perform the following services:

Displayed item		Possible cause	Service procedure
SUSPENSION	—	Temporary malfunction in internal processing of the rear view camera.	Go back to Step 1
	00H Routine not activated	Rear view camera unit malfunction.	Position the target appropriately again. Perform the aiming again. Refer to DAS-96. "Work Procedure (Target Setting)" .
	10H Writing error	<ul style="list-style-type: none"> Temporary malfunction in internal processing of the rear view camera. Rear view camera malfunction. 	
X AIMING NG Y (X: 0 - 7, Y: 1 - 8)	—	<ul style="list-style-type: none"> A target is not-yet-placed. (The rear view camera cannot detect a target.) The position of the rear view camera is not correct. 	Position the target appropriately again. Perform the aiming again. Refer to DAS-95. "Work Procedure (Preparation)" .
ABNORMALLY COMPLETED	—	<ul style="list-style-type: none"> Inappropriate work environment. Inappropriate vehicle condition. 	

NOTE:

Replace camera unit if "00H Routine not activated" or "10H Writing error" are repeatedly indicated during the above two services are performed.

9. Confirm that "Completed" is displayed and then select "End" to close the calibration procedure.

>> GO TO 3.

3. PERFORM SELF-DIAGNOSIS

Perform "Self Diagnostic Result" of "AVM" using CONSULT.

Is any DTC detected?

YES >> Perform diagnosis on the detected DTC and repair or replace the applicable item. Refer to [DAS-48. "DTC Index"](#).

NO >> GO TO 4.

4. ACTION TEST

Test the system operation by action test. Refer to [AV-280. "CONFIGURATION \(AV CONTROL UNIT\) : Description"](#).

>> Work End.

DTC/CIRCUIT DIAGNOSIS

U0121 VDC CAN 2

DTC Logic

INFOID:0000000011277235

DTC DETECTION LOGIC

NOTE:

If DTC U0121 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [DAS-106, "DISTANCE SENSOR : DTC Logic"](#).

CONSULT Display	DTC Detection Condition	Possible Cause
VDC CAN CIR1 [U0121]	Distance sensor receives an error signal from ABS actuator and electric unit (control unit) via CAN communication.	<ul style="list-style-type: none"> • ABS actuator and electric unit (control unit). • Distance sensor.

DTC CONFIRMATION PROCEDURE

1. PERFORM SELF DIAGNOSTIC RESULT

1. Start the engine.
2. Perform "Self Diagnostic Result" of "LASER/RADAR" using CONSULT.

Is display history of DTC U0121 CRNT?

- YES >> Refer to [DAS-99, "Diagnosis Procedure"](#).
 NO >> Refer to [GI-44, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000011277236

1. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF DIAGNOSTIC RESULT

Perform "Self Diagnostic Result" of "ABS" using CONSULT.

Are any DTCs detected?

- YES >> Refer to [BRC-53, "DTC Index"](#).
 NO >> Replace the distance sensor. Refer to [DAS-170, "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P



U0122 VDC P-RUN DIAG

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

U0122 VDC P-RUN DIAG

DTC Logic

INFOID:000000011277237

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
VDC CAN CIR1(LDP) [U0122]	Around view monitor control unit receives incorrect signal (P-RUN) from ABS actuator and electric unit (control Unit) via CAN communication.	<ul style="list-style-type: none">• ABS actuator and electric unit (control unit).• Around view monitor control unit.

DTC CONFIRMATION PROCEDURE

1. PERFORM SELF DIAGNOSTIC RESULT

1. Turn ignition ON.
2. Perform "Self Diagnostic Result" of "AVM" using CONSULT.

Is DTC detected?

- YES >> Refer to [DAS-100, "Diagnosis Procedure"](#).
NO >> Refer to [GI-44, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:000000011277238

1. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF DIAGNOSTIC RESULT

Perform "Self Diagnostic Result" of "ABS" using CONSULT.

Are any DTCs detected?

- YES >> Refer to [BRC-53, "DTC Index"](#).
NO >> Replace the around view monitor control unit. Refer to [DAS-173, "Removal and Installation"](#).

U0126 STRG SEN CAN 1

DTC Logic

INFOID:000000011277239

DTC DETECTION LOGIC

NOTE:

If DTC U0126 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [DAS-106, "DISTANCE SENSOR : DTC Logic"](#).

CONSULT Display	DTC Detection Condition	Possible Cause
ST ANG SEN SIG [U0126]	Distance sensor receives an error signal from steering angle sensor via CAN communication.	<ul style="list-style-type: none"> Steering angle sensor. Distance sensor.

DTC CONFIRMATION PROCEDURE

1.PERFORM SELF DIAGNOSTIC RESULT

1. Start the engine.
2. Perform "Self Diagnostic Result" of "LASER/RADAR" using CONSULT.

Is DTC detected?

- YES >> Refer to [DAS-101, "Diagnosis Procedure"](#).
- NO >> Refer to [GI-44, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:000000011277240

1.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF DIAGNOSTIC RESULT

Perform "Self Diagnostic Result" of "ABS" using CONSULT.

Are any DTCs detected?

- YES >> Refer to [BRC-53, "DTC Index"](#).
- NO >> Replace the distance sensor. Refer to [DAS-170, "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

U0401 ECM CAN 1

DTC Logic

INFOID:000000011277241

DTC DETECTION LOGIC

NOTE:

If DTC U0401 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [DAS-106, "DISTANCE SENSOR : DTC Logic"](#).

CONSULT Display	DTC Detection Condition	Possible Cause
ECM CAN CIR2 [U0401]	Distance sensor receives an error signal from ECM via CAN communication.	<ul style="list-style-type: none"> • ECM. • Distance sensor.

DTC CONFIRMATION PROCEDURE

1.PERFORM SELF DIAGNOSTIC RESULT

1. Start the engine.
2. Perform "Self Diagnostic Result" of "LASER/RADAR" using CONSULT.

Is DTC detected?

- YES >> Refer to [DAS-102, "Diagnosis Procedure"](#).
 NO >> Refer to [GI-44, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:000000011277242

1.CHECK ECM SELF DIAGNOSTIC RESULT

Perform "Self Diagnostic Result" of "ENGINE" using CONSULT.

Are any DTCs detected?

- YES >> Refer to [EC-96, "DTC Index"](#).
 NO >> Replace the distance sensor. Refer to [DAS-170, "Removal and Installation"](#).

U0415 VDC CAN 1

DTC Logic

INFOID:0000000011277243

DTC DETECTION LOGIC

NOTE:

If DTC U0415 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [DAS-106, "DISTANCE SENSOR : DTC Logic"](#).

CONSULT Display	DTC Detection Condition	Possible Cause
VDC CAN CIR2 [U0415]	Distance sensor receives an error signal from ABS actuator and electric unit (control unit) via CAN communication.	<ul style="list-style-type: none"> • ABS actuator and electric unit (control unit). • Distance sensor.

DTC CONFIRMATION PROCEDURE

1.PERFORM SELF DIAGNOSTIC RESULT

1. Start the engine.
2. Perform "Self Diagnostic Result" of "LASER/RADAR" using CONSULT.

Is display history of DTC U0415 CRNT?

- YES >> Refer to [DAS-103, "Diagnosis Procedure"](#).
 NO >> Refer to [GI-44, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000011277244

1.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF DIAGNOSTIC RESULT

Perform "Self Diagnostic Result" of "ABS" using CONSULT.

Are any DTCs detected?

- YES >> Refer to [BRC-53, "DTC Index"](#).
 NO >> Replace the distance sensor. Refer to [DAS-170, "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

U0416 VDC CHECKSUM DIAG

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

U0416 VDC CHECKSUM DIAG

DTC Logic

INFOID:000000011277245

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
VDC CAN CIR2(LDP) [U0416]	Around view monitor control unit receives incorrect signal (P-RUN) from ABS actuator and electric unit (control unit) via CAN communication.	<ul style="list-style-type: none">• ABS actuator and electric unit (control unit).• Around view monitor control unit.

DTC CONFIRMATION PROCEDURE

1. PERFORM SELF DIAGNOSTIC RESULT

1. Turn ignition ON.
2. Perform "Self Diagnostic Result" of "AVM" using CONSULT.

Are any DTCs displayed?

- YES >> Refer to [DAS-104, "Diagnosis Procedure"](#).
NO >> Refer to [GI-44, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:000000011277246

1. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF DIAGNOSTIC RESULT

Perform "Self Diagnostic Result" of "ABS" using CONSULT.

Are any DTCs detected?

- YES >> Refer to [BRC-53, "DTC Index"](#).
NO >> Replace the around view monitor control unit. Refer to [DAS-173, "Removal and Installation"](#).

U0428 STEERING ANGLE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

U0428 STEERING ANGLE SENSOR AROUND VIEW MONITOR CONTROL UNIT

AROUND VIEW MONITOR CONTROL UNIT : DTC Logic

INFOID:0000000011419751

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
ST ANG SEN CALIB [U0428]	Predictive course line center position adjustment of steering angle sensor is incomplete.	Adjust predictive course line center position adjustment of steering angle sensor.

AROUND VIEW MONITOR CONTROL UNIT : Diagnosis Procedure

INFOID:0000000011419752

1. ADJUST PREDICTIVE COURSE LINE CENTER POSITION ADJUSTMENT OF STEERING ANGLE SENSOR

When U0428 is detected, the predictive course line center position of steering angle sensor needs to be adjusted.

>> Adjust the predictive course line center position of steering angle sensor. Refer to [AV-284, "PREDICTED COURSE LINE CENTER POSITION ADJUSTMENT : Work Procedure"](#).

DISTANCE SENSOR

DISTANCE SENSOR : DTC Logic

INFOID:0000000011277249

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
ST ANG SEN CALIB [U0428]	Predictive course line center position adjustment of steering angle sensor is incomplete.	Adjust predictive course line center position adjustment of steering angle sensor.

DISTANCE SENSOR : Diagnosis Procedure

INFOID:0000000011277250

1. ADJUST PREDICTIVE COURSE LINE CENTER POSITION ADJUSTMENT OF STEERING ANGLE SENSOR

When U0428 is detected, the predictive course line center position of steering angle sensor needs to be adjusted.

>> Adjust the predictive course line center position of steering angle sensor. Refer to [AV-284, "PREDICTED COURSE LINE CENTER POSITION ADJUSTMENT : Work Procedure"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

U1000 CAN COMM CIRCUIT AROUND VIEW MONITOR CONTROL UNIT AROUND VIEW MONITOR CONTROL UNIT : DTC Logic

INFOID:000000011419753

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
CAN COMM CIRCUIT [U1000]	Around view monitor control unit is not transmitting or receiving CAN communication signal for 2 seconds or more.	CAN communication system.

AROUND VIEW MONITOR CONTROL UNIT : Diagnosis Procedure

INFOID:000000011419754

1.PERFORM SELF DIAGNOSTIC RESULT

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Perform "Self Diagnostic Result" for "AVM".

Is CAN COMM CIRCUIT displayed?

YES >> Refer to [LAN-17, "Trouble Diagnosis Flow Chart"](#).

NO >> Refer to [GI-44, "Intermittent Incident"](#).

DISTANCE SENSOR

DISTANCE SENSOR : DTC Logic

INFOID:000000011277253

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
CAN COMM CIRCUIT [U1000]	Distance sensor is not transmitting or receiving CAN communication signal for 2 seconds or more.	CAN communication system.

DISTANCE SENSOR : Diagnosis Procedure

INFOID:000000011277254

1.PERFORM SELF DIAGNOSTIC RESULT

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Perform "Self Diagnostic Result" of "LASER/RADAR"

Is CAN COMM CIRCUIT displayed?

YES >> Refer to [LAN-17, "Trouble Diagnosis Flow Chart"](#).

NO >> Refer to [GI-44, "Intermittent Incident"](#).

U1010 CONTROL UNIT (CAN)

[DRIVER ASSISTANCE SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

U1010 CONTROL UNIT (CAN) AROUND VIEW MONITOR CONTROL UNIT

AROUND VIEW MONITOR CONTROL UNIT : DTC Logic

INFOID:0000000011419755

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
CONTROL UNIT (CAN) [U1010]	Error during CAN controller hardware initialization (VCAN).	Replace the Around view monitor control unit if the malfunction occurs constantly. Refer to AV-380 . "Removal and Installation".

DISTANCE SENSOR

DISTANCE SENSOR : DTC Logic

INFOID:0000000011277256

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
CONTROL UNIT (CAN) [U1010]	Error during CAN controller hardware initialization (VCAN).	Replace the distance sensor if the malfunction occurs constantly. Refer to DAS-170 . "Removal and Installation".

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

U111A REAR CAMERA IMAGE SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

U111A REAR CAMERA IMAGE SIGNAL CIRCUIT

DTC Logic

INFOID:000000011419756

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
Rear display output signal diagnosis (Harness disconnection) [U111A]	Rear view camera image signal circuit open or short.	Check rear view camera image signal circuit.

Diagnosis Procedure

INFOID:000000011459687

Regarding Wiring Diagram information, refer to [AV-253, "Wiring Diagram"](#).

WITHOUT DRIVER ASSISTANCE SYSTEM

1. CHECK REAR VIEW CAMERA POWER SUPPLY AND GROUND CIRCUIT CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect around view monitor control unit and rear view camera connectors.
3. Check continuity between around view monitor control unit connector M103 and rear view camera connector D504.

Around view monitor control unit		Rear view camera		Continuity
Connector	Terminals	Connector	Terminals	
M103	26	D504	2	Yes
	25		1	

4. Check continuity between around view monitor control unit connector M103 and ground.

Around view monitor control unit		Ground	Continuity
Connector	Terminal		
M103	26		No

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace harness or connectors.

2. CHECK REAR VIEW CAMERA POWER SUPPLY VOLTAGE

1. Connect around view monitor control unit and rear view camera connectors.
2. Turn ignition switch ON.
3. Check voltage between around view monitor control unit connector M103 and ground.

Around view monitor control unit		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
M103	26	—	CAMERA switch is ON or selector lever in R (reverse).	6.0 V

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace around view monitor control unit. Refer to [AV-380, "Removal and Installation"](#).

3. CHECK REAR VIEW CAMERA IMAGE SIGNAL AND IMAGE SIGNAL GROUND CIRCUIT CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect around view monitor control unit and rear view camera connectors.

U111A REAR CAMERA IMAGE SIGNAL CIRCUIT

[DRIVER ASSISTANCE SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

- Check continuity between around view monitor control unit connector M103 and rear view camera connector D504.

Around view monitor control unit		Rear view camera		Continuity
Connector	Terminals	Connector	Terminals	
M103	28	D504	4	Yes
	27		5	

- Check continuity between around view monitor control unit connector M103 and ground.


Around view monitor control unit		Ground	Continuity
Connector	Terminal		
M103	28		No

Is the inspection result normal?

- YES >> GO TO 4.
 NO >> Repair or replace harness or connectors.

4.CHECK REAR VIEW CAMERA IMAGE SIGNAL

- Connect around view monitor control unit and rear view camera connectors.
- Turn ignition switch ON.
- Check signal between the terminals of around view monitor control unit connector M103.

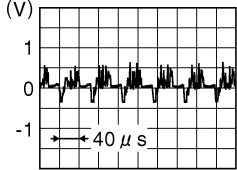Around view monitor control unit connector M103		Condition	Reference value
(+) Terminal	(-) Terminal		
28	27	CAMERA switch is ON or selector lever in R (reverse).	 <p style="text-align: right; font-size: small;">JSN1A0834GB</p>

Is the inspection result normal?

- YES >> Replace around view monitor control unit. Refer to [AV-380, "Removal and Installation"](#).
 NO >> Replace rear view camera. Refer to [AV-383, "Removal and Installation"](#).

WITH DRIVER ASSISTANCE SYSTEM

1.CHECK REAR VIEW CAMERA POWER SUPPLY AND GROUND CIRCUIT CONTINUITY

- Turn ignition switch OFF.
- Disconnect around view monitor control unit and rear view camera connectors.
- Check continuity between around view monitor control unit connector M114 and rear view camera connector D514.

Around view monitor control unit		Rear view camera		Continuity
Connector	Terminals	Connector	Terminals	
M114	50	D514	8	Yes
	52		7	

- Check continuity between around view monitor control unit connector M114 and ground.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

U111A REAR CAMERA IMAGE SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

Around view monitor control unit		Ground	Continuity
Connector	Terminal		
M114	50		No

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace harness or connectors.

2. CHECK REAR VIEW CAMERA POWER SUPPLY VOLTAGE

1. Connect around view monitor control unit and rear view camera connectors.
2. Turn ignition switch ON.
3. Check voltage between around view monitor control unit connector M114 and ground.

Around view monitor control unit		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
M114	50	—	CAMERA switch is ON or selector lever in R (reverse).	6.0 V

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace around view monitor control unit. Refer to [AV-380, "Removal and Installation"](#).

3. CHECK REAR VIEW CAMERA IMAGE SIGNAL AND IMAGE SIGNAL GROUND CIRCUIT CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect around view monitor control unit and rear view camera connectors.
3. Check continuity between around view monitor control unit connector M114 and rear view camera connector D514.

Around view monitor control unit		Rear view camera		Continuity
Connector	Terminals	Connector	Terminals	
M114	53	D514	5	Yes
	54		1	

4. Check continuity between around view monitor control unit connector M114 and ground.

Around view monitor control unit		Ground	Continuity
Connector	Terminal		
M114	53		No

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness or connectors.


4. CHECK REAR VIEW CAMERA IMAGE SIGNAL

1. Connect around view monitor control unit and rear view camera connectors.
2. Turn ignition switch ON.
3. Check signal between the terminals of around view monitor control unit connector M114.

U111A REAR CAMERA IMAGE SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

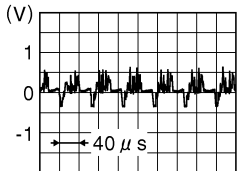Around view monitor control unit connector M114		Condition	Reference value
(+)	(-)		
Terminal	Terminal		
53	54	CAMERA switch is ON or selector lever in R (reverse).	 <p style="text-align: right; font-size: small;">JSNIA0834GB</p>

Is the inspection result normal?

- YES >> Replace around view monitor control unit. Refer to [AV-380, "Removal and Installation"](#).
- NO >> Replace rear view camera. Refer to [AV-383, "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

U111B SIDE CAMERA RH IMAGE SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

U111B SIDE CAMERA RH IMAGE SIGNAL CIRCUIT

DTC Logic

INFOID:000000011419757

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
Right side display output signal diagnosis (Harness disconnection) [U111B]	Right side camera image signal circuit open or short.	Check right side camera image signal circuit.

Diagnosis Procedure

INFOID:000000011459688

Regarding Wiring Diagram information, refer to [AV-253, "Wiring Diagram"](#).

WITHOUT DRIVER ASSISTANCE SYSTEM

1. CHECK RH SIDE CAMERA POWER SUPPLY AND GROUND CIRCUIT CONTINUITY

- Turn ignition switch OFF.
- Disconnect around view monitor control unit and RH side camera connectors.
- Check continuity between around view monitor control unit connector M103 and RH side camera connector D107.

Around view monitor control unit		RH side camera		Continuity
Connector	Terminals	Connector	Terminals	
M103	34	D107	7	Yes
	33		8	

- Check continuity between around view monitor control unit connector M103 and ground.

Around view monitor control unit		Ground	Continuity
Connector	Terminal		
M103	34		No

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace harness or connectors.

2. CHECK RH SIDE CAMERA POWER SUPPLY VOLTAGE

- Connect around view monitor control unit and RH side camera connectors.
- Turn ignition switch ON.
- Check voltage between around view monitor control unit connector M103 and ground.

Around view monitor control unit		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
M103	34	—	CAMERA switch is ON or selector lever in R (reverse).	6.0 V

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace around view monitor control unit. Refer to [AV-380, "Removal and Installation"](#).

3. CHECK RH SIDE CAMERA IMAGE SIGNAL AND IMAGE SIGNAL GROUND CIRCUIT CONTINUITY

- Turn ignition switch OFF.

U111B SIDE CAMERA RH IMAGE SIGNAL CIRCUIT

[DRIVER ASSISTANCE SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

2. Disconnect around view monitor control unit and RH side camera connectors.
3. Check continuity between around view monitor control unit connector M103 and RH side camera connector D107.

Around view monitor control unit		RH side camera		Continuity
Connector	Terminals	Connector	Terminals	
M103	36	D107	16	Yes
	35		15	

4. Check continuity between around view monitor control unit connector M103 and ground.


Around view monitor control unit		Ground	Continuity
Connector	Terminal		
M103	36		No

Is the inspection result normal?

- YES >> GO TO 4.
 NO >> Repair or replace harness or connectors.

4.CHECK RH SIDE CAMERA IMAGE SIGNAL

1. Connect around view monitor control unit and RH side camera connectors.
2. Turn ignition switch ON.
3. Check signal between the terminals of around view monitor control unit connector M103.

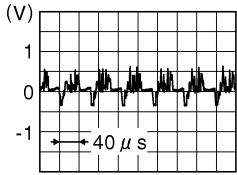Around view monitor control unit connector M103		Condition	Reference value
(+) Terminal	(-) Terminal		
36	35	CAMERA switch is ON or selector lever in R (reverse).	

Is the inspection result normal?

- YES >> Replace around view monitor control unit. Refer to [AV-380, "Removal and Installation"](#).
 NO >> Replace RH side camera. Refer to [AV-382, "Removal and Installation"](#).

WITH DRIVER ASSISTANCE SYSTEM

1.CHECK RH SIDE CAMERA POWER SUPPLY AND GROUND CIRCUIT CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect around view monitor control unit and RH side camera connectors.
3. Check continuity between around view monitor control unit connector M114 and RH side camera connector D107.

Around view monitor control unit		RH side camera		Continuity
Connector	Terminals	Connector	Terminals	
M114	62	D107	7	Yes
	64		8	

4. Check continuity between around view monitor control unit connector M114 and ground.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

U111B SIDE CAMERA RH IMAGE SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

Around view monitor control unit		Ground	Continuity
Connector	Terminal		
M114	62		No

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace harness or connectors.

2. CHECK RH SIDE CAMERA POWER SUPPLY VOLTAGE

1. Connect around view monitor control unit and RH side camera connectors.
2. Turn ignition switch ON.
3. Check voltage between around view monitor control unit connector M114 and ground.

Around view monitor control unit		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
M114	62	—	CAMERA switch is ON or selector lever in R (reverse).	6.0 V

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace around view monitor control unit. Refer to [AV-380, "Removal and Installation"](#).

3. CHECK RH SIDE CAMERA IMAGE SIGNAL AND IMAGE SIGNAL GROUND CIRCUIT CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect around view monitor control unit and RH side camera connectors.
3. Check continuity between around view monitor control unit connector M114 and RH side camera connector D107.

Around view monitor control unit		RH side camera		Continuity
Connector	Terminals	Connector	Terminals	
M114	65	D107	16	Yes
	66		15	

4. Check continuity between around view monitor control unit connector M114 and ground.

Around view monitor control unit		Ground	Continuity
Connector	Terminal		
M114	65		No

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness or connectors.


4. CHECK RH SIDE CAMERA IMAGE SIGNAL

1. Connect around view monitor control unit and RH side camera connectors.
2. Turn ignition switch ON.
3. Check signal between the terminals of around view monitor control unit connector M114.

U111B SIDE CAMERA RH IMAGE SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

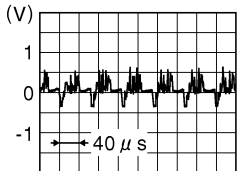Around view monitor control unit connector M114		Condition	Reference value
(+)	(-)		
Terminal	Terminal		
65	66	CAMERA switch is ON or selector lever in R (reverse).	 <p style="text-align: right; font-size: small;">JSNIA0834GB</p>

Is the inspection result normal?

- YES >> Replace around view monitor control unit. Refer to [AV-380, "Removal and Installation"](#).
- NO >> Replace RH side camera. Refer to [AV-382, "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

U111C FRONT CAMERA IMAGE SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

U111C FRONT CAMERA IMAGE SIGNAL CIRCUIT

DTC Logic

INFOID:000000011419758

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
Front display output signal diagnosis (Harness disconnection) [U111C]	Front camera image signal circuit open or short.	Check front camera image signal circuit.

Diagnosis Procedure

INFOID:000000011459689

Regarding Wiring Diagram information, refer to [AV-253, "Wiring Diagram"](#).

WITHOUT DRIVER ASSISTANCE SYSTEM

1. CHECK FRONT CAMERA POWER SUPPLY AND GROUND CIRCUIT CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect around view monitor control unit and front camera connectors.
3. Check continuity between around view monitor control unit connector M103 and front camera connector E226.

Around view monitor control unit		Front camera		Continuity
Connector	Terminals	Connector	Terminals	
M103	38	E226	2	Yes
	37		1	

4. Check continuity between around view monitor control unit connector M103 and ground.

Around view monitor control unit		Ground	Continuity
Connector	Terminal		
M103	38		No

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace harness or connectors.

2. CHECK FRONT CAMERA POWER SUPPLY VOLTAGE

1. Connect around view monitor control unit and front camera connectors.
2. Turn ignition switch ON.
3. Check voltage between around view monitor control unit connector M103 and ground.

Around view monitor control unit		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
M103	38	—	CAMERA switch is ON or selector lever in R (reverse).	6.0 V

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace around view monitor control unit. Refer to [AV-380, "Removal and Installation"](#).

3. CHECK FRONT CAMERA IMAGE SIGNAL AND IMAGE SIGNAL GROUND CIRCUIT CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect around view monitor control unit and front camera connectors.

U111C FRONT CAMERA IMAGE SIGNAL CIRCUIT

[DRIVER ASSISTANCE SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

3. Check continuity between around view monitor control unit connector M103 and front camera connector E226.

Around view monitor control unit		Front camera		Continuity
Connector	Terminals	Connector	Terminals	
M103	40	E226	4	Yes
	39		5	

4. Check continuity between around view monitor control unit connector M103 and ground.

Around view monitor control unit		Ground	Continuity
Connector	Terminal		
M103	40		No


Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness or connectors.

4.CHECK FRONT CAMERA IMAGE SIGNAL

1. Connect around view monitor control unit and front camera connectors.
2. Turn ignition switch ON.
3. Check signal between the terminals of around view monitor control unit connector M103.

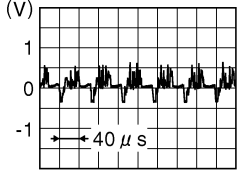Around view monitor control unit connector M103		Condition	Reference value
(+) Terminal	(-) Terminal		
40	39	CAMERA switch is ON or selector lever in R (reverse).	 <p style="text-align: right; font-size: small;">JSN1A0834GB</p>

Is the inspection result normal?

YES >> Replace around view monitor control unit. Refer to [AV-380, "Removal and Installation"](#).

NO >> Replace front camera. Refer to [AV-381, "Removal and Installation"](#).

WITH DRIVER ASSISTANCE SYSTEM

1.CHECK FRONT CAMERA POWER SUPPLY AND GROUND CIRCUIT CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect around view monitor control unit and front camera connectors.
3. Check continuity between around view monitor control unit connector M114 and front camera connector E226.

Around view monitor control unit		Front camera		Continuity
Connector	Terminals	Connector	Terminals	
M114	68	E226	2	Yes
	70		1	

4. Check continuity between around view monitor control unit connector M114 and ground.

U111C FRONT CAMERA IMAGE SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

Around view monitor control unit		Ground	Continuity
Connector	Terminal		
M114	68		No

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace harness or connectors.

2. CHECK FRONT CAMERA POWER SUPPLY VOLTAGE

1. Connect around view monitor control unit and front camera connectors.
2. Turn ignition switch ON.
3. Check voltage between around view monitor control unit connector M114 and ground.

Around view monitor control unit		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
M114	68	—	CAMERA switch is ON or selector lever in R (reverse).	6.0 V

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace around view monitor control unit. Refer to [AV-380, "Removal and Installation"](#).

3. CHECK FRONT CAMERA IMAGE SIGNAL AND IMAGE SIGNAL GROUND CIRCUIT CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect around view monitor control unit and front camera connectors.
3. Check continuity between around view monitor control unit connector M114 and front camera connector E226.

Around view monitor control unit		Front camera		Continuity
Connector	Terminals	Connector	Terminals	
M114	71	E226	4	Yes
	72		5	

4. Check continuity between around view monitor control unit connector M114 and ground.

Around view monitor control unit		Ground	Continuity
Connector	Terminal		
M114	71		No

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness or connectors.


4. CHECK FRONT CAMERA IMAGE SIGNAL

1. Connect around view monitor control unit and front camera connectors.
2. Turn ignition switch ON.
3. Check signal between the terminals of around view monitor control unit connector M114.

U111C FRONT CAMERA IMAGE SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

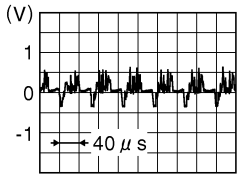Around view monitor control unit connector M114		Condition	Reference value
(+)	(-)		
Terminal	Terminal		
71	72	CAMERA switch is ON or selector lever in R (reverse).	 <p style="text-align: right; font-size: small;">JSNIA0834GB</p>

Is the inspection result normal?

- YES >> Replace around view monitor control unit. Refer to [AV-380, "Removal and Installation"](#).
- NO >> Replace front camera. Refer to [AV-381, "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

U111D SIDE CAMERA LH IMAGE SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

U111D SIDE CAMERA LH IMAGE SIGNAL CIRCUIT

DTC Logic

INFOID:000000011419759

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
Left side display output signal diagnosis (Harness disconnection) [U111D]	Left side camera image signal circuit open or short.	Check left side camera image signal circuit.

Diagnosis Procedure

INFOID:000000011459690

Regarding Wiring Diagram information, refer to [AV-253, "Wiring Diagram"](#).

WITHOUT DRIVER ASSISTANCE SYSTEM

1. CHECK LH SIDE CAMERA POWER SUPPLY AND GROUND CIRCUIT CONTINUITY

- Turn ignition switch OFF.
- Disconnect around view monitor control unit and LH side camera connectors.
- Check continuity between around view monitor control unit connector M103 and LH side camera connector D14.

Around view monitor control unit		LH side camera		Continuity
Connector	Terminals	Connector	Terminals	
M103	30	D14	7	Yes
	29		8	

- Check continuity between around view monitor control unit connector M103 and ground.

Around view monitor control unit		Ground	Continuity
Connector	Terminal		
M103	30		No

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair or replace harness or connectors.

2. CHECK LH SIDE CAMERA POWER SUPPLY VOLTAGE

- Connect around view monitor control unit and LH side camera connectors.
- Turn ignition switch ON.
- Check voltage between around view monitor control unit connector M103 and ground.

Around view monitor control unit		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
M103	30	—	CAMERA switch is ON or selector lever in R (reverse).	6.0 V

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> Replace around view monitor control unit. Refer to [AV-380, "Removal and Installation"](#).

3. CHECK LH SIDE CAMERA IMAGE SIGNAL AND IMAGE SIGNAL GROUND CIRCUIT CONTINUITY

- Turn ignition switch OFF.

U111D SIDE CAMERA LH IMAGE SIGNAL CIRCUIT

[DRIVER ASSISTANCE SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

2. Disconnect around view monitor control unit and LH side camera connectors.
3. Check continuity between around view monitor control unit connector M103 and LH side camera connector D14.

Around view monitor control unit		LH side camera		Continuity
Connector	Terminals	Connector	Terminals	
M103	32	D14	16	Yes
	31		15	

4. Check continuity between around view monitor control unit connector M103 and ground.


Around view monitor control unit		Ground	Continuity
Connector	Terminal		
M103	32		No

Is the inspection result normal?

- YES >> GO TO 4.
 NO >> Repair or replace harness or connectors.

4.CHECK LH SIDE CAMERA IMAGE SIGNAL

1. Connect around view monitor control unit and LH side camera connectors.
2. Turn ignition switch ON.
3. Check signal between the terminals of around view monitor control unit connector M103.

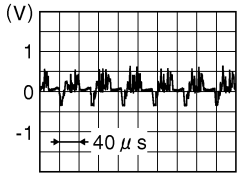Around view monitor control unit connector M103		Condition	Reference value
(+) Terminal	(-) Terminal		
32	31	CAMERA switch is ON or selector lever in R (reverse).	 <p style="text-align: right; font-size: small;">JSN1A0834GB</p>

Is the inspection result normal?

- YES >> Replace around view monitor control unit. Refer to [AV-380, "Removal and Installation"](#).
 NO >> Replace LH side camera. Refer to [AV-382, "Removal and Installation"](#).

WITH DRIVER ASSISTANCE SYSTEM

1.CHECK LH SIDE CAMERA POWER SUPPLY AND GROUND CIRCUIT CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect around view monitor control unit and LH side camera connectors.
3. Check continuity between around view monitor control unit connector M114 and LH side camera connector D14.

Around view monitor control unit		LH side camera		Continuity
Connector	Terminals	Connector	Terminals	
M114	56	D14	7	Yes
	58		8	

4. Check continuity between around view monitor control unit connector M114 and ground.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

U111D SIDE CAMERA LH IMAGE SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

Around view monitor control unit		Ground	Continuity
Connector	Terminal		
M114	56		No

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace harness or connectors.

2. CHECK LH SIDE CAMERA POWER SUPPLY VOLTAGE

1. Connect around view monitor control unit and LH side camera connectors.
2. Turn ignition switch ON.
3. Check voltage between around view monitor control unit connector M114 and ground.

Around view monitor control unit		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
M114	56	—	CAMERA switch is ON or selector lever in R (reverse).	6.0 V

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace around view monitor control unit. Refer to [AV-380, "Removal and Installation"](#).

3. CHECK LH SIDE CAMERA IMAGE SIGNAL AND IMAGE SIGNAL GROUND CIRCUIT CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect around view monitor control unit and LH side camera connectors.
3. Check continuity between around view monitor control unit connector M114 and LH side camera connector D14.

Around view monitor control unit		LH side camera		Continuity
Connector	Terminals	Connector	Terminals	
M114	59	D14	16	Yes
	60		15	

4. Check continuity between around view monitor control unit connector M114 and ground.

Around view monitor control unit		Ground	Continuity
Connector	Terminal		
M114	59		No

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness or connectors.


4. CHECK LH SIDE CAMERA IMAGE SIGNAL

1. Connect around view monitor control unit and LH side camera connectors.
2. Turn ignition switch ON.
3. Check signal between the terminals of around view monitor control unit connector M114.

U111D SIDE CAMERA LH IMAGE SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

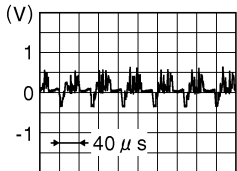Around view monitor control unit connector M114		Condition	Reference value
(+)	(-)		
Terminal	Terminal		
59	60	CAMERA switch is ON or selector lever in R (reverse).	 <p style="text-align: right; font-size: small;">JSNIA0834GB</p>

Is the inspection result normal?

- YES >> Replace around view monitor control unit. Refer to [AV-380. "Removal and Installation"](#).
- NO >> Replace LH side camera. Refer to [AV-382. "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

U1232 STEERING ANGLE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

U1232 STEERING ANGLE SENSOR

DTC Logic

INFOID:000000011419760

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
ST ANG SEN CALIB [U1232]	Predictive course line center position adjustment of steering angle sensor is incomplete.	Adjust predictive course line center position adjustment of steering angle sensor.

Diagnosis Procedure

INFOID:000000011419761

1. ADJUST PREDICTIVE COURSE LINE CENTER POSITION ADJUSTMENT OF STEERING ANGLE SENSOR

When U1232 is detected, the predictive course line center position of steering angle sensor needs to be adjusted.

>> Adjust the predictive course line center position of steering angle sensor. Refer to [AV-284, "PREDICTED COURSE LINE CENTER POSITION ADJUSTMENT : Work Procedure"](#).

U1302 CAMERA POWER VOLT

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

U1302 CAMERA POWER VOLT

DTC Logic

INFOID:0000000011277267

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
Camera supply power supply voltage abnormality [U1302]	Short in camera power supply circuit.	<ul style="list-style-type: none">• Harness or connectors.• Camera.• Around view monitor control unit.

Diagnosis Procedure

INFOID:0000000011277268

Regarding Wiring Diagram information, refer to [DAS-52. "Wiring Diagram"](#).

1. CHECK AVM CAMERA DATA MONITOR ITEMS

Check "F-CAMERA IMAGE SIGNAL", "REAR CAMERA IMAGE SIGNAL", "DR-SIDE CAMERA IMAGE SIG" and "PA-SIDE CAMERA IMAGE SIG" in "Data Monitor" of "AVM" using CONSULT.

Is "OK" displayed for all cameras?

YES >> Refer to [GI-44. "Intermittent Incident"](#).

NO-1 (Front camera)>>GO TO 2.

NO-2 (Rear camera)>>GO TO 5.

NO-3 (LH side camera)>>GO TO 8.

NO-4 (RH side camera)>>GO TO 11.

2. CHECK FRONT CAMERA POWER SUPPLY (CAMERA)

1. Turn ignition switch ON.
2. Check voltage between front camera connector E226 and ground.

Front camera		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
E226	2	—	CAMERA switch is ON.	6.0 V

Is the inspection result normal?

YES >> Replace front camera. Refer to [DAS-169. "Removal and Installation"](#).

NO >> GO TO 3.

3. CHECK FRONT CAMERA POWER SUPPLY (AROUND VIEW MONITOR CONTROL UNIT)

Check voltage between around view monitor control unit connector M114 and ground.

Around view monitor control unit		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
M114	68	—	CAMERA switch is ON.	6.0 V

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace around view monitor control unit. Refer to [DAS-173. "Removal and Installation"](#).

4. CHECK FRONT CAMERA POWER SUPPLY CIRCUIT CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect around view monitor control unit connector M114 and front camera connector.
3. Check continuity between around view monitor control unit connector M114 and front camera connector E226.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

U1302 CAMERA POWER VOLT

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

Around view monitor control unit		Front camera		Continuity
Connector	Terminal	Connector	Terminal	
M114	68	E226	2	Yes

4. Check continuity between around view monitor control unit connector M114 and ground.

Around view monitor control unit		Ground	Continuity
Connector	Terminal		
M114	68	—	No

Is the inspection result normal?

YES >> Replace front camera. Refer to [DAS-169. "Removal and Installation"](#).

NO >> Repair or replace harness or connectors.

5. CHECK REAR CAMERA POWER SUPPLY (CAMERA)

1. Turn ignition switch ON.
2. Check voltage between rear camera connector D514 and ground.

Rear camera		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
D514	8	—	CAMERA switch is ON.	6.0 V

Is the inspection result normal?

YES >> Replace rear camera. Refer to [DAS-176. "Removal and Installation"](#).

NO >> GO TO 6.

6. CHECK REAR CAMERA POWER SUPPLY (AROUND VIEW MONITOR CONTROL UNIT)

Check voltage between around view monitor control unit connector M114 and ground.

Around view monitor control unit		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
M114	50	—	CAMERA switch is ON.	6.0 V

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace around view monitor control unit. Refer to [DAS-173. "Removal and Installation"](#).

7. CHECK REAR CAMERA POWER SUPPLY CIRCUIT CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect around view monitor control unit connector M114 and rear camera connector.
3. Check continuity between around view monitor control unit connector M114 and rear camera connector D514.

Around view monitor control unit		Rear camera		Continuity
Connector	Terminal	Connector	Terminal	
M114	50	D514	8	Yes

4. Check continuity between around view monitor control unit connector M114 and ground.

Around view monitor control unit		Ground	Continuity
Connector	Terminal		
M114	50	—	No

Is the inspection result normal?

YES >> Replace rear camera. Refer to [DAS-176. "Removal and Installation"](#).

NO >> Repair or replace harness or connectors.

U1302 CAMERA POWER VOLT

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

8. CHECK SIDE CAMERA LH POWER SUPPLY (CAMERA)

1. Turn ignition switch ON.
2. Check voltage between side camera LH connector D14 and ground.

Side camera LH		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
D14	7	—	CAMERA switch is ON.	6.0 V

Is the inspection result normal?

- YES >> Replace side camera LH. Refer to [DAS-171, "Removal and Installation"](#).
NO >> GO TO 9.

9. CHECK SIDE CAMERA LH POWER SUPPLY (AROUND VIEW MONITOR CONTROL UNIT)

Check voltage between around view monitor control unit connector M114 and ground.

Around view monitor control unit		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
M114	56	—	CAMERA switch is ON.	6.0 V

Is the inspection result normal?

- YES >> GO TO 10.
NO >> Replace around view monitor control unit. Refer to [DAS-173, "Removal and Installation"](#).

10. CHECK SIDE CAMERA LH POWER SUPPLY CIRCUIT CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect around view monitor control unit connector M114 and side camera LH connector.
3. Check continuity between around view monitor control unit connector M114 and side camera LH connector D14.

Around view monitor control unit		Side camera LH		Continuity
Connector	Terminal	Connector	Terminal	
M114	56	D14	7	Yes

4. Check continuity between around view monitor control unit connector M114 and ground.

Around view monitor control unit		Ground	Continuity
Connector	Terminal		
M114	56	—	No

Is the inspection result normal?

- YES >> Replace side camera LH. Refer to [DAS-171, "Removal and Installation"](#).
NO >> Repair or replace harness or connectors.

11. CHECK SIDE CAMERA RH POWER SUPPLY (CAMERA)

1. Turn ignition switch ON.
2. Check voltage between side camera RH connector D107 and ground.

Side camera RH		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
D107	7	—	CAMERA switch is ON.	6.0 V

Is the inspection result normal?

- YES >> Replace side camera RH. Refer to [DAS-171, "Removal and Installation"](#).
NO >> GO TO 12.

12. CHECK SIDE CAMERA RH POWER SUPPLY (AROUND VIEW MONITOR CONTROL UNIT)

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

U1302 CAMERA POWER VOLT

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

Check voltage between around view monitor control unit connector M114 and ground.

Around view monitor control unit		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
M114	62	—	CAMERA switch is ON.	6.0 V

Is the inspection result normal?

YES >> GO TO 13.

NO >> Replace around view monitor control unit. Refer to [DAS-173. "Removal and Installation"](#).

13. CHECK SIDE CAMERA RH POWER SUPPLY CIRCUIT CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect around view monitor control unit connector M114 and side camera RH connector.
3. Check continuity between around view monitor control unit connector M114 and side camera RH connector D107.

Around view monitor control unit		Side camera RH		Continuity
Connector	Terminal	Connector	Terminal	
M114	62	D107	7	Yes

4. Check continuity between around view monitor control unit connector M114 and ground.

Around view monitor control unit		Ground	Continuity
Connector	Terminal		
M114	62	—	No

Is the inspection result normal?

YES >> Replace side camera RH. Refer to [DAS-171. "Removal and Installation"](#).

NO >> Repair or replace harness or connectors.

U1303 LED POWER SUPPLY VOLT

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

U1303 LED POWER SUPPLY VOLT

DTC Logic

INFOID:0000000011277269

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
LED supply power supply voltage abnormality [U1303]	Open or short in blind spot warning indicator power supply circuit.	<ul style="list-style-type: none">• Harness or connectors.• Around view monitor control unit.

Diagnosis Procedure

INFOID:0000000011277270

Regarding Wiring Diagram information, refer to [DAS-52. "Wiring Diagram"](#).

1. CHECK BLIND SPOT WARNING POWER SUPPLY CIRCUIT CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect around view monitor control unit connector M113 and blind spot warning indicators connectors.
3. Check continuity between around view monitor control unit connector M113 and blind spot warning indicators connectors D5 LH, D108 RH.

Around view monitor control unit		Blind spot warning indicator		Continuity
Connector	Terminal	Connector	Terminal	
M113	7	D5 LH	1	Yes
	8	D108 RH	1	

4. Check continuity between around view monitor control unit connector M113 and ground.

Around view monitor control unit		Ground	Continuity
Connector	Terminal		
M113	7	—	No
	8		

Is the inspection result normal?

- YES >> Replace around view monitor control unit. Refer to [DAS-173. "Removal and Installation"](#).
NO >> Repair or replace harness or connectors.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

U1304 CAMERA IMAGE CALIBRATION

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

U1304 CAMERA IMAGE CALIBRATION

DTC Logic

INFOID:000000011419762

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
Non-completion of the calibration [U1304]	Camera image calibration is incomplete.	Perform calibration of camera image.

Diagnosis Procedure

INFOID:000000011419763

1.PERFORM CALIBRATION

When U1304 is detected, perform calibration of camera image.

>> Refer to [AV-284, "CALIBRATING CAMERA IMAGE \(AROUND VIEW MONITOR\) : Work Procedure"](#).

U1305 CONFIG UNFINISH

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

U1305 CONFIG UNFINISH

DTC Logic

INFOID:0000000011419764

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
Non-completion of the configuration [U1305]	Configuration of around view monitor control unit is incomplete.	Perform configuration of around view monitor control unit.

Diagnosis Procedure

INFOID:0000000011419765

1.PERFORM CONFIGURATION

When U1305 is detected, perform configuration of around view monitor control unit.

>> Refer to [AV-281, "CONFIGURATION \(AROUND VIEW MONITOR CONTROL UNIT\) : Work Procedure"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

U1308 CAMERA CONFIG

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

U1308 CAMERA CONFIG

DTC Logic

INFOID:000000011277275

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
Rear camera judgement [U1308]	Around view monitor control unit camera calibration is incomplete.	Perform Around view monitor control unit camera calibration.

Diagnosis Procedure

INFOID:000000011277276

1. PERFORM AROUND VIEW MONITOR CAMERA CALIBRATION

When U1308 is detected, the rear view camera needs to be calibrated.

>> Calibrate the rear view camera. Refer to [DAS-95. "Description"](#).

U1309 PUMP UNIT CURRENT

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

U1309 PUMP UNIT CURRENT

DTC Logic

INFOID:0000000011277277

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
PUMP UNIT CURRENT [U1309]	Around view monitor control unit detects incorrect pump current from rear view camera washer control unit.	<ul style="list-style-type: none"> • Harness • Rear view camera washer control unit • Around view monitor control unit

DTC CONFIRMATION PROCEDURE

1. PERFORM SELF DIAGNOSTIC RESULT

1. Turn ignition switch ON.
2. Perform "Self Diagnostic Result" of "AVM" using CONSULT.

Is DTC detected?

- YES >> Refer to [DAS-133, "Diagnosis Procedure"](#).
- NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011277278

Regarding Wiring Diagram information, refer to [DAS-52, "Wiring Diagram"](#).

1. CHECK REAR VIEW CAMERA WASHER CONTROL UNIT POWER SUPPLY CIRCUIT

1. Turn ignition switch ON.
2. Check voltage between rear view camera washer control unit connector B67 and ground.

Rear view camera washer control unit		Ground	Voltage
Connector	Terminal		
B67	12	—	Battery voltage

Is inspection result normal?

- YES >> GO TO 2.
- NO >> Repair or replace harness or connectors.

2. CHECK REAR VIEW CAMERA WASHER CONTROL UNIT GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect rear view camera washer control unit connector.
3. Check continuity between rear view camera washer control unit connector B67 and ground.

Rear view camera washer control unit		Ground	Continuity
Connector	Terminal		
B67	5	—	Yes

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair or replace harness or connectors.

3. CHECK REAR VIEW CAMERA WASHER CONTROL UNIT CIRCUITS CONTINUITY

1. Disconnect around view monitor control unit connector M113.
2. Check continuity between around view monitor control unit connector M113 and rear view camera washer control unit connector B67.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

U1309 PUMP UNIT CURRENT

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

Around view monitor control unit		Rear view camera washer control unit		Continuity
Connector	Terminal	Connector	Terminal	
M113	36	B67	8	Yes
	37		6	
	38		7	

3. Check continuity between around view monitor control unit connector M113 and ground.

Around view monitor control unit		Ground	Continuity
Connector	Terminal		
M113	36	—	No
	38		

Is inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness or connectors.

4. CHECK CONTINUITY REAR VIEW CAMERA WASHER CONTROL UNIT TO PUMP

1. Disconnect rear view camera air pump motor connector.
2. Check continuity between rear view camera washer control unit connector B67 and rear view camera air pump motor connector B72.

Rear view camera washer control unit		Rear view camera air pump motor		Continuity
Connector	Terminal	Connector	Terminal	
B67	1	B72	1	Yes
	2		2	

3. Check for continuity between rear view camera washer control unit connector B67 and ground.

Rear view camera washer control unit		Ground	Continuity
Connector	Terminal		
B67	1	—	No
	2		

Is inspection result normal?

YES >> Replace the rear view camera air pump motor. Refer to [DAS-178, "Removal and Installation"](#).

NO >> Repair or replace harness or connectors.

U130A PUMP CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

U130A PUMP CONTROL UNIT

DTC Logic

INFOID:000000011277279

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
PUMP ECU JUDGE [U130A]	Rear view camera washer control unit malfunction.	Rear view camera washer control unit.

DTC CONFIRMATION PROCEDURE

1.PERFORM SELF DIAGNOSTIC RESULT

1. Start the engine.
2. Perform "Self Diagnostic Result" of "AVM" using CONSULT.

Is DTC detected?

- YES >> Refer to [DAS-135, "Diagnosis Procedure"](#).
 NO >> Inspection End.

Diagnosis Procedure

INFOID:000000011277280

1.CHECK REAR VIEW CAMERA WASHER CONTROL UNIT POWER SUPPLY CIRCUIT

1. Turn ignition switch ON.
2. Check voltage between rear view camera washer control unit connector B67 and ground.

Rear view camera washer control unit		Ground	Voltage
Connector	Terminal		
B67	12	—	Battery voltage

Is inspection result normal?

- YES >> GO TO 2.
 NO >> Repair or replace harness or connectors.

2.CHECK REAR VIEW CAMERA WASHER CONTROL UNIT GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect rear view camera washer control unit connector.
3. Check continuity between rear view camera washer control unit connector B67 and ground.

Rear view camera washer control unit		Ground	Continuity
Connector	Terminal		
B67	5	—	Yes

Is the inspection result normal?

- YES >> Replace rear view camera washer control unit. Refer to [DAS-179, "Removal and Installation"](#).
 NO >> Repair or replace harness or connectors.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

U130B REAR CAMERA COMM ERROR

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

U130B REAR CAMERA COMM ERROR

DTC Logic

INFOID:000000011277281

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
Rear Camera Serial Communication [U130B]	Around view monitor control unit receives incorrect communication signal from rear view camera.	<ul style="list-style-type: none">• Rear view camera.• Harness.• Around view monitor control unit.

DTC CONFIRMATION PROCEDURE

1. PERFORM SELF DIAGNOSTIC RESULT

1. Turn ignition switch ON.
2. Perform "Self Diagnostic Result" of "AVM" using CONSULT.

Is DTC detected?

- YES >> Refer to [DAS-136, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000011277282

Regarding Wiring Diagram information, refer to [DAS-52, "Wiring Diagram"](#).

1. CHECK REAR VIEW CAMERA SERIAL SIGNAL CIRCUIT CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect around view monitor control unit connector M114 and rear camera connector.
3. Check continuity between around view monitor control unit connector M114 and rear camera connector D514.

Around view monitor control unit		Rear camera		Continuity
Connector	Terminal	Connector	Terminal	
M114	49	D514	4	Yes

4. Check continuity between around view monitor control unit connector M114 and ground.

Around view monitor control unit		Ground	Continuity
Connector	Terminal		
M114	49	—	No

Is the inspection result normal?

- YES >> Replace around view monitor control unit. Refer to [DAS-173, "Removal and Installation"](#).
NO >> Repair or replace harness or connectors.

C10B7 YAW RATE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

C10B7 YAW RATE SENSOR

DTC Logic

INFOID:0000000011277283

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
YAW RATE SENSOR [C10B7]	Yaw rate/side/decel G sensor calibration incor- rect.	<ul style="list-style-type: none">• Calibration of yaw rate/side/decel G sensor not performed.• Interruption in yaw rate/side/decel G sensor calibration.

DTC CONFIRMATION PROCEDURE

1.PERFORM SELF DIAGNOSTIC RESULT

1. Start the engine.
2. Perform "Self Diagnostic Result" of "LASER/RADAR" using CONSULT.

Is DTC detected?

- YES >> Refer to [DAS-137, "Diagnosis Procedure"](#).
- NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011277284

1.PERFORM YAW RATE/SIDE/DECEL G SENSOR CALIBRATION

1. Perform calibration of yaw rate/side/decel G sensor. Refer to [BRC-70, "Work Procedure"](#).
2. Erase DTCs using CONSULT.
3. Perform "Self Diagnostic Result" of "LASER/RADAR" using CONSULT.

Is DTC detected?

- YES >> Replace the distance sensor. Refer to [DAS-170, "Removal and Installation"](#).
- NO >> Inspection End.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

C1A01 POWER SUPPLY CIRCUIT 1, C1A02 POWER SUPPLY CIRCUIT 2

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

C1A01 POWER SUPPLY CIRCUIT 1, C1A02 POWER SUPPLY CIRCUIT 2

DTC Logic

INFOID:000000011277285

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
POWER SUPPLY CIR [C1A01]	Distance sensor battery voltage is less than 7.9 V for 5 seconds.	<ul style="list-style-type: none">• Harness• Distance sensor
POWER SUPPLY CIR 2 [C1A02]	Distance sensor battery voltage is greater than 19.3 V for 5 seconds.	

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Perform "Self Diagnostic Result" of "LASER/RADAR" using CONSULT.

Is DTC detected?

- YES >> Refer to [DAS-138, "Diagnosis Procedure"](#).
NO >> Refer to [GI-44, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:000000011277286

1. CHECK DISTANCE SENSOR POWER SUPPLY AND GROUND CIRCUIT

Check power supply and ground circuit of distance sensor. Refer to [DAS-153, "DISTANCE SENSOR : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> Replace the distance sensor. Refer to [DAS-170, "Removal and Installation"](#).
NO >> Repair or replace harness or connectors.

C1A03 VEHICLE SPEED SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

C1A03 VEHICLE SPEED SENSOR AROUND VIEW MONITOR CONTROL UNIT

AROUND VIEW MONITOR CONTROL UNIT : DTC Logic

INFOID:0000000011277287

DTC DETECTION LOGIC

CONSULT Display	DTC detecting condition	Possible causes
VHCL SPEED SE CIRC [C1A03]	Around view monitor control unit detects a velocity calculation error.	<ul style="list-style-type: none">• ABS actuator and electric unit (control unit).• Around view monitor control unit.

DTC CONFIRMATION PROCEDURE

1. PERFORM SELF DIAGNOSTIC RESULT

1. Turn ignition ON.
2. Perform "Self Diagnostic Result" of "AVM" using CONSULT.

Is DTC detected?

- YES >> Refer to [DAS-139, "AROUND VIEW MONITOR CONTROL UNIT : Diagnosis Procedure"](#).
NO >> Refer to [GI-44, "Intermittent Incident"](#).

AROUND VIEW MONITOR CONTROL UNIT : Diagnosis Procedure

INFOID:0000000011277288

1. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF DIAGNOSTIC RESULT

Perform "Self Diagnostic Result" of "ABS" using CONSULT.

Are any DTCs detected?

- YES >> Refer to [BRC-53, "DTC Index"](#).
NO >> Replace around view monitor control unit. Refer to [DAS-173, "Removal and Installation"](#).

DISTANCE SENSOR

DISTANCE SENSOR : DTC Logic

INFOID:0000000011277289

DTC DETECTION LOGIC

CONSULT Display	DTC detecting condition	Possible causes
VHCL SPEED SE CIRC [C1A03]	Distance sensor detects a velocity calculation error.	<ul style="list-style-type: none">• ABS actuator and electric unit (control unit).• Distance sensor.

DTC CONFIRMATION PROCEDURE

1. PERFORM SELF DIAGNOSTIC RESULT

1. Turn ignition ON.
2. Perform "Self Diagnostic Result" of "LASER/RADAR" using CONSULT.

Is DTC detected?

- YES >> Refer to [DAS-139, "DISTANCE SENSOR : Diagnosis Procedure"](#).
NO >> Refer to [GI-44, "Intermittent Incident"](#).

DISTANCE SENSOR : Diagnosis Procedure

INFOID:0000000011277290

1. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF DIAGNOSTIC RESULT

Perform "Self Diagnostic Result" of "ABS" using CONSULT.

Are any DTCs detected?

- YES >> Refer to [BRC-53, "DTC Index"](#).
NO >> Replace distance sensor. Refer to [DAS-170, "Removal and Installation"](#).

C1A04 ABS/TCS/VDC SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

C1A04 ABS/TCS/VDC SYSTEM

AROUND VIEW MONITOR CONTROL UNIT

AROUND VIEW MONITOR CONTROL UNIT : DTC Logic

INFOID:0000000011277291

DTC DETECTION LOGIC

CONSULT Display	DTC detecting condition	Possible causes
ABS/TCS/VDC CIRC [C1A04]	Around view monitor control unit receives VDC failed message from ABS actuator and electric unit (control unit).	<ul style="list-style-type: none">• ABS actuator and electric unit (control unit).• Around view monitor control unit.

DTC CONFIRMATION PROCEDURE

1. PERFORM SELF DIAGNOSTIC RESULT

1. Turn ignition ON.
2. Perform "Self Diagnostic Result" of "AVM" using CONSULT.

Is DTC detected?

- YES >> Refer to [DAS-140, "AROUND VIEW MONITOR CONTROL UNIT : Diagnosis Procedure"](#).
NO >> Inspection End.

AROUND VIEW MONITOR CONTROL UNIT : Diagnosis Procedure

INFOID:0000000011277292

1. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF DIAGNOSTIC RESULT

Perform "Self Diagnostic Result" of "ABS" using CONSULT.

Are any DTCs detected?

- YES >> Refer to [BRC-53, "DTC Index"](#).
NO >> Replace around view monitor control unit. Refer to [DAS-173, "Removal and Installation"](#).

DISTANCE SENSOR

DISTANCE SENSOR : DTC Logic

INFOID:0000000011277293

DTC DETECTION LOGIC

CONSULT Display	DTC detecting condition	Possible causes
ABS/TCS/VDC CIRC [C1A04]	Distance sensor receives VDC failed message from ABS actuator and electric unit (control unit).	<ul style="list-style-type: none">• ABS actuator and electric unit (control unit).• Distance sensor.

DTC CONFIRMATION PROCEDURE

1. PERFORM SELF DIAGNOSTIC RESULT

1. Turn ignition ON.
2. Perform "Self Diagnostic Result" of "LASER/RADAR" using CONSULT.

Is DTC detected?

- YES >> Refer to [DAS-140, "DISTANCE SENSOR : Diagnosis Procedure"](#).
NO >> Inspection End.

DISTANCE SENSOR : Diagnosis Procedure

INFOID:0000000011277294

1. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF DIAGNOSTIC RESULT

Perform "Self Diagnostic Result" of "ABS" using CONSULT.

Are any DTCs detected?

- YES >> Refer to [BRC-53, "DTC Index"](#).
NO >> Replace distance sensor. Refer to [DAS-170, "Removal and Installation"](#).

C1A05 BRAKE SW/STOP LAMP SW

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

C1A05 BRAKE SW/STOP LAMP SW

DTC Logic

INFOID:000000011277295

DTC DETECTION LOGIC

NOTE:

If DTC C1A05 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [DAS-106, "DISTANCE SENSOR : DTC Logic"](#).

CONSULT Display	DTC Detection Condition	Possible Cause
BRAKE SW/STOP L SW [C1A05]	Mismatch between stop lamp switch signal and brake pedal position switch signal received from ECM and stop lamp switch signal received from ABS actuator and electric unit (control unit) that continues for 10 seconds or more with vehicle speeds at approximately 40 km/h or more.	<ul style="list-style-type: none">• ECM.• ABS actuator and electric unit (control unit).• Distance sensor.

Diagnosis Procedure

INFOID:000000011277296

1. CHECK SELF DIAGNOSTIC RESULT OF ECM

1. Perform "Self Diagnostic Result" of "ENGINE" using CONSULT.

Are any DTCs detected?

YES >> Refer to [EC-96, "DTC Index"](#).

NO >> GO TO 2.

2. CHECK SELF DIAGNOSTIC RESULT OF ABS

1. Perform "Self Diagnostic Result" of "ABS" using CONSULT.

Are any DTCs detected?

YES >> Refer to [BRC-53, "DTC Index"](#).

NO >> Replace distance sensor. Refer to [DAS-170, "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

C1A12 LASER BEAM OFF CENTER

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

C1A12 LASER BEAM OFF CENTER

DTC Logic

INFOID:000000011277297

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
LASER BEAM OFFCNTR [C1A12]	Distance sensor is off the aiming point.	Distance sensor is off the aiming point.

Diagnosis Procedure

INFOID:000000011277298

1. PERFORM DISTANCE SENSOR SELF DIAGNOSTIC RESULT

Perform "Self Diagnostic Result" of "LASER/RADAR" using CONSULT.

Is DTC "C1A12" detected?

- YES >> GO TO 2.
- NO >> Inspection End.

2. VISUAL INSPECTION

1. Remove the front bumper. Refer to [EXT-17, "Removal and Installation"](#).
2. Check distance sensor and distance sensor bracket for damage or looseness.

Does damage or looseness exist?

- YES >>
 1. Repair or replace effected components. Refer to [DAS-170, "Removal and Installation"](#).
 2. Perform distance sensor alignment. Refer to [DAS-72, "Description"](#).
 3. Perform action test. Refer to [DAS-82, "FCW : Description"](#).
- NO >> Replace distance sensor. Refer to [DAS-170, "Removal and Installation"](#).

C1A14 ECM

DTC Logic

INFOID:0000000011277299

DTC DETECTION LOGIC

NOTE:

If DTC C1A14 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [DAS-106, "DISTANCE SENSOR : DTC Logic"](#).

CONSULT Display	DTC detecting condition	Possible causes
ECM CIRCUIT [C1A14]	ECM is malfunctioning.	<ul style="list-style-type: none"> • Accelerator pedal position sensor. • ECM. • Distance sensor.

1.PERFORM SELF DIAGNOSTIC RESULT

1. Start the engine.
2. Drive the vehicle.
3. Stop the vehicle.
4. Perform "Self Diagnostic Result" of "LASER/RADAR" using CONSULT.

Is DTC detected?

- YES >> Refer to [DAS-143, "Diagnosis Procedure"](#).
- NO >> Refer to [GI-44, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:0000000011277300

1.PERFORM SELF DIAGNOSTIC RESULT OF ECM

Perform "Self Diagnostic Result" of "ENGINE" using CONSULT.

Are any DTCs detected?

- YES >> Refer to [EC-96, "DTC Index"](#).
- NO >> Replace distance sensor. Refer to [DAS-170, "Removal and Installation"](#).



C1A15 GEAR POSITION

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

C1A15 GEAR POSITION

DTC Logic

INFOID:000000011277301

DTC DETECTION LOGIC

NOTE:

If DTC C1A15 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [DAS-106, "DISTANCE SENSOR : DTC Logic"](#).

If DTC C1A15 is displayed with DTC C1A03, first perform the trouble diagnosis for DTC U1000. Refer to [DAS-139, "DISTANCE SENSOR : DTC Logic"](#).

If DTC C1A15 is displayed with DTC C1A04, first perform the trouble diagnosis for DTC U1000. Refer to [DAS-140, "DISTANCE SENSOR : DTC Logic"](#).

CONSULT Display	DTC detecting condition	Possible causes
GEAR POSITION [C1A15]	A mismatch between current gear position signal transmitted from TCM via CAN communication and gear position calculated by distance sensor continues for approximately 11 minutes or more.	<ul style="list-style-type: none">• Input speed sensor.• Vehicle speed sensor CVT (output speed sensor).• TCM.

DTC CONFIRMATION PROCEDURE

1. PERFORM SELF DIAGNOSTIC RESULT

1. Start the engine.
2. Drive the vehicle at 10 km/h (6 MPH) or faster for approximately 15 minutes or more.
3. Stop the vehicle.
4. Perform "Self Diagnostic Result" of "LASER/RADAR" using CONSULT.

Is DTC detected?

YES >> Refer to [DAS-144, "Diagnosis Procedure"](#).

NO >> Refer to [GI-44, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:000000011277302

1. CHECK SELF DIAGNOSTIC RESULT OF TCM

Perform "Self Diagnostic Result" of "TRANSMISSION" using CONSULT.

Are any DTCs detected?

YES >> Refer to [TM-63, "DTC Index"](#).

NO >> Replace distance sensor. Refer to [DAS-170, "Removal and Installation"](#).

C1A16 RADAR BLOCKED OR STAINED

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

C1A16 RADAR BLOCKED OR STAINED

DTC Logic

INFOID:0000000011277303

DTC DETECTION LOGIC

CONSULT Display	DTC detecting condition	Possible causes
RADAR BLOCKED [C1A16]	If any stain occurs to distance sensor body window.	<ul style="list-style-type: none">• Stain or foreign materials deposited.• Cracks or scratches exist.

NOTE:

DTC "C1A16" may be detected under the following conditions. (Explain to the customer about the difference between the contamination detection function and the indication when the malfunction is detected and tell them "This is not a malfunction").

- When contamination or foreign materials adhere to the distance sensor area of the front bumper.
- When driving while it is snowing or when frost forms on the distance sensor area of the front bumper.
- When distance sensor area of the front bumper is temporarily fogged.

Diagnosis Procedure

INFOID:0000000011277304

NOTE:

After distance sensor alignment is performed, the vehicle must be driven at a speed of 4.5 MPH (7.2 km/h) or higher for a minimum of 2 minutes before DTC C1A16 can be cleared.

1.VISUAL CHECK 1

Check for contamination and foreign matter on the distance sensor area of the front bumper.

Does contamination or foreign material exist?

- YES >> Clean the contamination and foreign material on the distance sensor area of the front bumper.
- NO >> GO TO 2.

2.VISUAL CHECK 2

1. Remove the front bumper. Refer to [EXT-17, "Removal and Installation"](#).
2. Check distance sensor for contamination and foreign materials.

Does contamination or foreign material exist?

- YES >> Clean the contamination and foreign material from the distance sensor.
- NO >> GO TO 3.

3.VISUAL CHECK 3

1. Remove the front bumper. Refer to [EXT-17, "Removal and Installation"](#).
2. Check distance sensor and distance sensor bracket for damage or looseness.

Does damage or looseness exist?

- YES >> 1. Repair or replace effected components. Refer to [DAS-170, "Removal and Installation"](#).
- 2. Perform distance sensor alignment. Refer to [DAS-72, "Description"](#).
- 3. Perform action test. Refer to [DAS-82, "FCW : Description"](#).
- NO >> GO TO 4.

4.INTERVIEW

1. Ask if there is any trace of contamination or foreign materials adhering to the distance sensor area of the front bumper.
2. Ask if the distance sensor area of the front bumper was frosted during driving or if vehicle was driven in snow.
3. Ask if distance sensor area of the front bumper was temporarily fogged. (Windshield glass may also tend to fog, etc.)

Are any of the above conditions seen?

- YES >> Explain to the customer about the difference between the contamination detection function and an actual malfunction. Inform them "this is not a malfunction".
- NO >> 1. Perform distance sensor alignment. Refer to [DAS-72, "Description"](#).
- 2. Perform action test. Refer to [DAS-82, "FCW : Description"](#).
- 3. GO TO 5.

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

C1A16 RADAR BLOCKED OR STAINED

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

5. CHECK DISTANCE SENSOR SELF-DIAGNOSIS RESULTS

Check if "C1A16" is detected as the current malfunction in "Self Diagnostic Result" of "LASER/RADAR".

Is "C1A16" detected?

- YES >> Replace distance sensor. Refer to [DAS-170. "Removal and Installation"](#).
- NO >> Inspection End.

C1A17 DISTANCE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

C1A17 DISTANCE SENSOR

DTC Logic

INFOID:000000011277305

DTC DETECTION LOGIC

NOTE:

If DTC C1A17 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [DAS-106, "DISTANCE SENSOR : DTC Logic"](#).

CONSULT Display	DTC detecting condition	Possible causes
LASER SENSOR FAIL [C1A17]	Distance sensor is malfunctioning.	Distance sensor.

Diagnosis Procedure

INFOID:000000011277306

1. REPLACE DISTANCE SENSOR

>> Replace distance sensor. Refer to [DAS-170, "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

C1A18 RADAR AIMING INCOMP

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

C1A18 RADAR AIMING INCOMP

DTC Logic

INFOID:000000011277307

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
LASER AIMING INCOMP [C1A18]	Distance sensor not adjusted.	<ul style="list-style-type: none">Distance sensor aiming adjustment not performed.Distance sensor aiming adjustment interrupted.

DTC CONFIRMATION PROCEDURE

1.PERFORM SELF DIAGNOSTIC RESULT

1. Start the engine.
2. Perform "Self Diagnostic Result" of "LASER/RADAR" using CONSULT.

Is DTC detected?

- YES >> Refer to [DAS-148, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000011277308

1.ADJUST DISTANCE SENSOR

Perform Distance Sensor Initial Vertical Alignment and Distance Sensor Alignment.

>> Refer to [DAS-70, "Description"](#) and [DAS-72, "Description"](#).

C1A21 UNIT HIGH TEMP

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

C1A21 UNIT HIGH TEMP

DTC Logic

INFOID:0000000011277309

DTC DETECTION LOGIC

CONSULT Display	DTC detecting condition	Possible causes
UNIT HIGH TEMP [C1A21]	Distance sensor judges high temperature abnormality.	Temperature around distance sensor high.

1. PERFORM SELF DIAGNOSTIC RESULT

1. Turn ignition switch OFF.
2. Wait for 10 minutes or more to cool the distance sensor.
3. Start the engine.
4. Perform "Self Diagnostic Result" of "LASER/RADAR" using CONSULT.

Is DTC detected?

- YES >> Replace distance sensor. Refer to [DAS-170, "Removal and Installation"](#).
NO >> Refer to [GI-44, "Intermittent Incident"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

C1A24 NP RANGE

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

C1A24 NP RANGE

DTC Logic

INFOID:000000011277310

DTC DETECTION LOGIC

NOTE:

If DTC C1A24 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [DAS-106, "DISTANCE SENSOR : DTC Logic"](#).

CONSULT Display	DTC Detection Condition	Possible Cause
NP RANGE [C1A24]	A mismatch between shift position signal and a current gear position signal transmitted from TCM via CAN communication that continues for 60 seconds or more.	<ul style="list-style-type: none">• TCM.• Transmission range switch.

DTC CONFIRMATION PROCEDURE

1. CHECK SELF DIAGNOSTIC RESULT (1)

1. Start the engine.
2. Shift selector lever to P position and wait for approximately 5 minutes or more.
3. Perform "Self Diagnostic Result" of "LASER/RADAR" using CONSULT.

Is DTC detected?

- YES >> Refer to [DAS-150, "Diagnosis Procedure"](#).
NO >> GO TO 2.

2. CHECK SELF DIAGNOSTIC RESULT (2)

1. Shift selector lever to N position and wait for approximately 5 minutes or more.
2. Perform "Self Diagnostic Result" of "LASER/RADAR" using CONSULT.

Is DTC detected?

- YES >> Refer to [DAS-150, "Diagnosis Procedure"](#).
NO >> Refer to [GI-44, "Intermittent Incident"](#).

Diagnosis Procedure

INFOID:000000011277311

1. CHECK SELF DIAGNOSTIC RESULT OF TCM

Perform "Self Diagnostic Result" of "TRANSMISSION" using CONSULT.

Are any DTCs detected?

- YES >> Refer to [TM-63, "DTC Index"](#).
NO >> Replace distance sensor. Refer to [DAS-170, "Removal and Installation"](#).

C1A39 STEERING ANGLE SENSOR

[DRIVER ASSISTANCE SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

C1A39 STEERING ANGLE SENSOR AROUND VIEW MONITOR CONTROL UNIT

AROUND VIEW MONITOR CONTROL UNIT : DTC Logic

INFOID:0000000011277312

DTC DETECTION LOGIC

CONSULT Display	DTC detecting condition	Possible causes
STRG SEN CIR [C1A39]	control unit receives steering angle sensor failed message from steering angle sensor.	<ul style="list-style-type: none">Steering angle sensor.Around view monitor control unit.

DTC CONFIRMATION PROCEDURE

1. PERFORM SELF DIAGNOSTIC RESULT

- Turn ignition ON.
- Perform "Self Diagnostic Result" of "AVM" using CONSULT.

Is DTC detected?

- YES >> Refer to [DAS-151, "AROUND VIEW MONITOR CONTROL UNIT : Diagnosis Procedure"](#).
NO >> Refer to [GI-44, "Intermittent Incident"](#).

AROUND VIEW MONITOR CONTROL UNIT : Diagnosis Procedure

INFOID:0000000011277313

1. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF DIAGNOSTIC RESULT

Perform "Self Diagnostic Result" of "ABS" using CONSULT.

Are any DTCs detected?

- YES >> Refer to [BRC-53, "DTC Index"](#).
NO >> Replace around view monitor control unit. Refer to [DAS-173, "Removal and Installation"](#).

DISTANCE SENSOR

DISTANCE SENSOR : DTC Logic

INFOID:0000000011277314

DTC DETECTION LOGIC

CONSULT Display	DTC detecting condition	Possible causes
STRG SEN CIR [C1A39]	Distance sensor receives steering angle sensor failed message from steering angle sensor.	<ul style="list-style-type: none">Steering angle sensor.Distance sensor.

DTC CONFIRMATION PROCEDURE

1. PERFORM SELF DIAGNOSTIC RESULT

- Turn ignition ON.
- Perform "Self Diagnostic Result" of "LASER/RADAR" using CONSULT.

Is DTC detected?

- YES >> Refer to [DAS-151, "DISTANCE SENSOR : Diagnosis Procedure"](#).
NO >> Refer to [GI-44, "Intermittent Incident"](#).

DISTANCE SENSOR : Diagnosis Procedure

INFOID:0000000011277315

1. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF DIAGNOSTIC RESULT

Perform "Self Diagnostic Result" of "ABS" using CONSULT.

Are any DTCs detected?

- YES >> Refer to [BRC-53, "DTC Index"](#).
NO >> Replace distance sensor. Refer to [DAS-170, "Removal and Installation"](#).

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

POWER SUPPLY AND GROUND CIRCUIT AROUND VIEW MONITOR CONTROL UNIT

AROUND VIEW MONITOR CONTROL UNIT : Diagnosis Procedure

INFOID:000000011444778

Regarding Wiring Diagram information, refer to [AV-253, "Wiring Diagram"](#).

WITHOUT DRIVER ASSISTANCE SYSTEM

1.CHECK FUSE

Check that the following fuses are not blown:

Terminal No.	Signal name	Fuse No.
2	Battery power supply	15 (20A)

Are the fuses blown?

YES >> Replace the blown fuse after repairing the affected circuit.

NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect around view monitor control unit connector M103.
3. Check voltage between around view monitor control unit connector M103 and ground.

Around view monitor control unit		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
M103	2	—	Ignition switch: OFF	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness or connectors.

3.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between around view monitor control unit connector M103 and ground.

Around view monitor control unit		Ground	Continuity
Connector	Terminal		
M103	1	—	Yes

Is the inspection result normal?

YES >> Inspection End.

NO >> Repair or replace harness or connectors.

WITH DRIVER ASSISTANCE SYSTEM

1.CHECK FUSE

Check that the following fuses are not blown:

Terminal No.	Signal name	Fuse No.
2	Battery power supply	15 (20A)

Are the fuses blown?

YES >> Replace the blown fuse after repairing the affected circuit.

NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

POWER SUPPLY AND GROUND CIRCUIT

[DRIVER ASSISTANCE SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect around view monitor control unit connector M113.
3. Check voltage between around view monitor control unit connector M113 and ground.

Around view monitor control unit		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
M113	2	—	Ignition switch: OFF	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace harness or connectors.

3.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between around view monitor control unit connector M113 and ground.

Around view monitor control unit		Ground	Continuity
Connector	Terminal		
M113	1	—	Yes

Is the inspection result normal?

- YES >> Inspection End.
NO >> Repair or replace harness or connectors.

DISTANCE SENSOR

DISTANCE SENSOR : Diagnosis Procedure

INFOID:000000011277317

Regarding Wiring Diagram information, refer to [DAS-52, "Wiring Diagram"](#).

1.CHECK FUSE

Check that the following fuse is not blown.

Terminal No.	Signal name	Fuse No.
1	Ignition power supply	30 (10A)

Is the fuse blown?

- YES >> Replace the blown fuse after repairing the affected circuit.
NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect distance sensor connector E21.
3. Check voltage between distance sensor connector E21 and ground.

Distance sensor		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
E21	1	—	Ignition switch: ON	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace harness or connectors.

3.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between distance sensor connector E21 and ground.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

Distance sensor		Ground	Continuity
Connector	Terminal		
E21	8	—	Yes

Is the inspection result normal?

YES >> Inspection End.

NO >> Repair or replace harness or connectors.

WARNING SYSTEMS SWITCH CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

WARNING SYSTEMS SWITCH CIRCUIT

Diagnosis Procedure

INFOID:0000000011277318

Regarding Wiring Diagram information, refer to [DAS-52. "Wiring Diagram"](#).

1. CHECK WARNING SYSTEMS SWITCH SIGNAL INPUT

1. Turn the ignition switch ON.
2. Check voltage between around view monitor control unit harness connector M113 terminal 17 and ground.

Terminals		Condition	Voltage (Approx.)
(+)	(-)		
AVM control unit		Warning systems switch	0 V
Connector	Terminal		
M113	17		
		Pressed	0 V
		Released	Battery voltage

Is the inspection result normal?

YES >> Replace the around view monitor control unit. Refer to [DAS-173. "Removal and Installation"](#).

NO >> GO TO 2.

2. CHECK WARNING SYSTEMS SWITCH

1. Turn ignition switch OFF.
2. Remove warning system switch.
3. Check warning system switch. Refer to [DAS-156. "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the warning system switch. Refer to [DAS-174. "Removal and Installation"](#).

3. CHECK WARNING SYSTEM SWITCH GROUND CIRCUIT

Check continuity between warning system switch harness connector M253 terminal 8 and ground.

Warning system switch		Ground	Continuity
Connector	Terminal		
M253	8		Yes

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair harness or connector.

4. CHECK WARNING SYSTEM SWITCH SIGNAL INPUT CIRCUIT FOR OPEN

1. Disconnect the around view monitor control unit control unit connector.
2. Check continuity between the around view monitor control unit harness connector M113 terminal 17 and warning system switch harness connector M253 terminal 6.

Around view monitor control unit		Warning system switch		Continuity
Connector	Terminal	Connector	Terminal	
M113	17	M253	6	Yes

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the harnesses or connectors.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

WARNING SYSTEMS SWITCH CIRCUIT

[DRIVER ASSISTANCE SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

5. CHECK WARNING SYSTEM SWITCH SIGNAL INPUT CIRCUIT FOR SHORT

Check continuity between the around view monitor control unit harness connector M113 terminal 17 and ground.

Around view monitor control unit		Ground	Continuity
Connector	Terminal		
M113	17		No

Is the inspection result normal?

YES >> Replace the around view monitor control unit. Refer to [DAS-173. "Removal and Installation"](#).

NO >> Repair the harnesses or connectors.

Component Inspection

INFOID:000000011277319

1. CHECK WARNING SYSTEMS SWITCH

Check continuity of warning system switch.

Warning system switch			Continuity
Terminal		Condition	
6	8	When warning system switch is pressed	Yes
		When warning system switch is released	No

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace the warning system switch. Refer to [DAS-174. "Removal and Installation"](#).

WARNING SYSTEMS ON INDICATOR CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

WARNING SYSTEMS ON INDICATOR CIRCUIT

Diagnosis Procedure

INFOID:0000000011277320

Regarding Wiring Diagram information, refer to [DAS-52, "Wiring Diagram"](#).

1. CHECK WARNING SYSTEM ON INDICATOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect warning system switch connector M253.
3. Turn ignition switch ON.
4. Check voltage between warning system switch harness connector M253 terminal 5 and ground.

Warning system switch		Ground	Voltage (Approx.)
Connector	Terminal		
M253	5		Battery voltage

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the harness or connector.

2. CHECK WARNING SYSTEMS ON INDICATOR SIGNAL FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect the around view monitor control unit harness connector M113.
3. Check continuity between the around view monitor control unit harness connector M113 terminal 15 and warning system switch harness connector M253 terminal 3.

Around view monitor control unit		Warning system switch		Continuity
Connector	Terminal	Connector	Terminal	
M113	15	M253	3	Yes

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair the harnesses or connectors.

3. CHECK WARNING SYSTEMS ON INDICATOR SIGNAL CIRCUIT FOR SHORT

Check continuity between the around view monitor control unit harness connector M113 terminal 15 and ground.

Around view monitor control unit		Ground	Continuity
Connector	Terminal		
M113	15		No

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair the harnesses or connectors.

4. CHECK WARNING SYSTEMS ON INDICATOR

Check the warning systems ON indicator. Refer to [DAS-158, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace the around view monitor control unit. Refer to [DAS-173, "Removal and Installation"](#).
NO >> Replace warning systems switch. [DAS-174, "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

WARNING SYSTEMS ON INDICATOR CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

Component Inspection

INFOID:000000011277321

1. CHECK WARNING SYSTEMS ON INDICATOR

Apply battery voltage to warning system switch terminals 3 and 5, and then check if the warning systems ON indicator illuminates.

Warning system switch			
Terminals		Condition	Warning system switch ON indicator
(+)	(-)		
5	3	When the battery voltage is applied	On
		When the battery voltage is not applied	Off

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace the warning systems switch. Refer to [DAS-174, "Removal and Installation"](#).

WARNING BUZZER CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

WARNING BUZZER CIRCUIT

Component Function Check

INFOID:0000000011277322

1. CHECK WARNING BUZZER

1. Turn the ignition switch ON.
2. Select "EXTERNAL BUZZER" in "Active Test" of "AVM" using CONSULT.
3. Check the warning system buzzer operation.

Does the warning system buzzer sound?

- YES >> Inspection End.
 NO >> Refer to [DAS-159, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000011277323

Regarding Wiring Diagram information, refer to [DAS-52, "Wiring Diagram"](#).

1. CHECK WARNING SYSTEM BUZZER POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect warning system buzzer connector.
3. Turn ignition switch ON.
4. Check voltage between warning system buzzer harness connector M120 terminal 1 and ground.

Terminals		Voltage (Approx.)
(+)	(-)	
Warning system buzzer		Battery voltage
Connector	Terminal	
M120	1	

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the harness or connector.

2. CHECK WARNING SYSTEM BUZZER CONTROL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect the around view monitor control unit harness connector M113.
3. Check continuity between the around view monitor control unit harness connector M113 terminal 16 and warning system buzzer harness connector M120 terminal 2.

Around view monitor control unit		Warning system buzzer		Continuity
Connector	Terminal	Connector	Terminal	
M113	16	M120	2	Yes

4. Check continuity between the around view monitor control unit harness connector M113 terminal 16 and ground.

Around view monitor control unit		Ground	Continuity
Connector	Terminal		
M113	16		No

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> Repair or replace harness or connector.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P



WARNING BUZZER CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

3. CHECK WARNING SYSTEM BUZZER GROUND CIRCUIT

Check continuity between warning system buzzer harness connector M120 terminal 3 and ground.

Warning system buzzer		Ground	Continuity
Connector	Terminal		
M120	3	—	Yes

Is the inspection result normal?

- YES >> Replace warning systems buzzer switch. Refer to [DAS-175, "Removal and Installation"](#).
- NO >> Repair the harness or connector.

REAR VIEW CAMERA WASHER MOTOR CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

REAR VIEW CAMERA WASHER MOTOR CIRCUIT

Component Function Check

INFOID:000000011277324

1. CHECK REAR VIEW CAMERA WASHER MOTOR CIRCUIT

1. Turn ignition switch ON.
2. Perform "WASH ACTIVE" in "Active Test" of "AVM" using CONSULT.
3. Check operation of the rear view camera washer motor.

Test item		Description	
WASH ACTIVE	ON	Rear view camera washer motor	ON
	OFF		OFF

Is the inspection result normal?

- YES >> Rear view camera washer motor circuit is normal.
 NO >> Refer to [DAS-161, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000011458247

1. CHECK REAR VIEW CAMERA WASHER MOTOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect rear view camera washer motor connector.
3. Turn ignition switch ON.
4. Select "WASH ACTIVE" in "Active Test" of "AVM" using CONSULT.
5. Check voltage between rear view camera washer motor connector E55 and ground.

Rear view camera washer motor		Ground	Voltage
Connector	Terminal		
E55	1	—	Battery voltage

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair or replace harness or connector.

2. CHECK REAR VIEW CAMERA WASHER MOTOR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect rear view camera washer control unit connector.
3. Check continuity between rear view camera washer motor connector E55 and rear view camera washer control unit connector B67.

Rear view camera washer motor		Rear view camera washer control unit		Continuity
Connector	Terminal	Connector	Terminal	
E55	2	B67	4	Yes

Is the inspection result normal?

- YES >> Replace rear view camera washer motor. Refer to [DAS-177, "Removal and Installation"](#).
 NO >> Repair or replace harness or connector.

DAS

DRIVER ASSISTANCE SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

SYMPTOM DIAGNOSIS

DRIVER ASSISTANCE SYSTEM SYMPTOMS

Symptom Table

INFOID:000000011277326

LANE DEPARTURE WARNING SYSTEM SYMPTOMS

NOTE:

Refer to the following the operation condition of the Lane Departure Warning system.

- Lane Departure Warning system: [DAS-15, "LDW : System Description"](#).

Symptom	Possible cause	Inspection item/Reference page
Indicator/warning lamps do not illuminate when ignition switch OFF ⇒ ON	LDW warning does not illuminate.	<ul style="list-style-type: none"> • Combination meter • Around view monitor control unit Combination meter. Refer to MWI-21, "CONSULT Function (METER/M&A)" . Around view monitor control unit.
	LDW ON indicator does not illuminate.	<ul style="list-style-type: none"> • Combination meter • Around view monitor control unit Refer to AV-236, "WITH DRIVER ASSISTANCE SYSTEM : CONSULT Function" .
	Warning systems ON indicator does not illuminate.	<ul style="list-style-type: none"> • Harness between around view monitor control unit and warning systems switch • Warning systems switch • Around view monitor control unit Warning systems ON indicator circuit. Refer to DAS-158, "Component Inspection" .
	LDW warning or LDW ON indicator does not illuminate.	<ul style="list-style-type: none"> • Combination meter Combination meter. Refer to MWI-19, "Description" .
	All of indicator/warning lamps does not illuminate; <ul style="list-style-type: none"> • LDW warning • LDW ON indicator • Warning systems ON indicator 	<ul style="list-style-type: none"> • Power supply and ground circuit of around view monitor control unit • Around view monitor control unit Power supply and ground circuit of around view monitor control unit. Refer to DAS-152, "AROUND VIEW MONITOR CONTROL UNIT : Diagnosis Procedure" .
LDW system is not activated. (Indicator/warning lamps illuminate when ignition switch OFF ⇒ ON)	LDW ON indicator is not turned ON ⇔ OFF when operating warning systems switch	<ul style="list-style-type: none"> • Harness between around view monitor control unit and warning systems switch • Harness between warning systems switch and ground • Warning systems switch • Around view monitor control unit <ul style="list-style-type: none"> • Warning systems switch circuit. Refer to DAS-155, "Diagnosis Procedure". • LDW system setting can not be turned ON/OFF on the information display. Refer to DAS-165, "Diagnosis Procedure".
	Warning buzzer is not sounding.	<ul style="list-style-type: none"> • Harness between around view monitor control unit and warning system buzzer • Around view monitor control unit • Warning system buzzer Warning buzzer circuit. Refer to DAS-159, "Component Function Check" .
Warning functions are not timely (Example) <ul style="list-style-type: none"> • Does not function when driving on lane markers • Functions when driving in a lane • Functions in a different position from the actual position 	<ul style="list-style-type: none"> • Camera calibration • Rear camera • Around view monitor control unit 	Camera calibration. Refer to DAS-95, "Description" .

DRIVER ASSISTANCE SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

Symptom	Possible cause	Inspection item/Reference page
Rear view camera washer is not activated	Rear view camera washer motor	Rear view camera washer motor circuit. Refer to DAS-161, "Diagnosis Procedure" .
Rear view camera wash is insufficient	<ul style="list-style-type: none"> • Washer tube (include check valve) • Air tube • Washer/Air nozzle (Rear view camera) 	Rear view camera washer/air blower function. Refer to DAS-68, "Inspection Procedure" .

BLIND SPOT WARNING SYSTEM SYMPTOMS

NOTE:

Refer to the following the operation condition of the Blind Spot Warning system.

- Blind Spot Warning system: [DAS-19, "BSW : System Description"](#).

Symptom	Possible cause	Inspection item/Reference page
Indicator/warning lamps do not illuminate when ignition switch OFF ⇒ ON.	<ul style="list-style-type: none"> • Combination meter • Around view monitor control unit 	Combination meter. Refer to MWI-21, "CONSULT Function (METER/M&A)" .
	<ul style="list-style-type: none"> • Combination meter • Around view monitor control unit 	Around view monitor control unit. Refer to AV-236, "WITH DRIVER ASSISTANCE SYSTEM : CONSULT Function" .
	<ul style="list-style-type: none"> • Harness between around view monitor control unit and warning systems switch • Warning systems switch • Around view monitor control unit 	Warning systems ON indicator circuit. Refer to DAS-157, "Diagnosis Procedure" .
	<ul style="list-style-type: none"> • Combination meter • Around view monitor control unit 	Combination meter. Refer to MWI-19, "Description" .
	<ul style="list-style-type: none"> • Power supply and ground circuit of around view monitor control unit • Around view monitor control unit • Combination meter 	Power supply and ground circuit of around view monitor control unit. Refer to DAS-152, "AROUND VIEW MONITOR CONTROL UNIT : Diagnosis Procedure" .
	<ul style="list-style-type: none"> • Harness between around view monitor control unit and BSW indicator • Around view monitor control unit • BSW indicator 	Around view monitor control unit. Refer to AV-236, "WITH DRIVER ASSISTANCE SYSTEM : CONSULT Function" .
BSW system is not activated. (Indicator/warning lamps illuminate when ignition switch OFF ⇒ ON.)	<ul style="list-style-type: none"> • Harness between around view monitor control unit and warning systems switch • Harness between warning systems switch and ground • Around view monitor control unit • Warning systems switch 	<ul style="list-style-type: none"> • Warning systems switch circuit. Refer to DAS-155, "Diagnosis Procedure". • BSW system setting cannot be turned ON/OFF on the information display. Refer to DAS-165, "Diagnosis Procedure".
	<ul style="list-style-type: none"> • Harness between around view monitor control unit and warning system buzzer • Around view monitor control unit • Warning system buzzer 	Warning buzzer circuit. Refer to DAS-159, "Component Function Check" .

DRIVER ASSISTANCE SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

Symptom	Possible cause	Inspection item/Reference page
BSW functions are not are not timely (Example) • Does not function when approaching a adjacent vehicle while BSW ON indicator lamp is illuminated	<ul style="list-style-type: none"> • Rear camera calibration • Rear camera • Around view monitor control unit 	Rear camera calibration. Refer to DAS-95, "Description" .
Rear view camera washer is not activated	Rear view camera washer motor	Rear view camera washer motor circuit. Refer to DAS-161, "Component Function Check" .
Rear camera wash is insufficient	<ul style="list-style-type: none"> • Washer tube (include check valve) • Air tube • Washer/Air nozzle (Rear camera) 	Rear view camera washer/air blower function. Refer to DAS-68, "Inspection Procedure" .

MOVING OBJECT DETECTION SYSTEM SYMPTOMS

NOTE:

Refer to the following the operation condition of the Moving Object Detection system.

- Moving Object Detection system: [DAS-25, "MOD : System Description"](#).

Symptom	Possible cause	Inspection item/Reference page
Indicator/warning lamps do not illuminate when ignition switch OFF ⇒ ON.	All of indicator/warning lamps do not illuminate; <ul style="list-style-type: none"> • Moving Object Detection warning lamp • Moving Object Detection ON indicator • Warning systems ON indicator 	<ul style="list-style-type: none"> • Power supply and ground circuit of around view monitor control unit • Around view monitor control unit • Combination meter Power supply and ground circuit of around view monitor control unit. Refer to DAS-152, "AROUND VIEW MONITOR CONTROL UNIT : Diagnosis Procedure" .
	Warning buzzer is not sounding.	<ul style="list-style-type: none"> • Harness between around view monitor control unit and warning system buzzer • Around view monitor control unit • Warning system buzzer

FORWARD COLLISION WARNING SYSTEM SYMPTOMS

NOTE:

Refer to the following the operation condition of the Forward Collision Warning system.

- Forward Collision Warning system: [DAS-28, "FCW : System Description"](#).

Symptom	Possible cause	Inspection item/Reference page
Operation	FCW system is not activated	Warning system switch. Refer to DAS-155, "Diagnosis Procedure" .
	FCW system setting cannot be turned ON/OFF on the information display	Steering switch. Refer to DAS-165, "Description" .
Warning buzzer is not sounding	Combination meter (buzzer)	Meter buzzer circuit. Refer to WCS-42, "Component Function Check" .

SYSTEM SETTINGS CANNOT BE TURNED ON/OFF IN VEHICLE INFORMATION DISPLAY

< SYMPTOM DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

SYSTEM SETTINGS CANNOT BE TURNED ON/OFF IN VEHICLE INFORMATION DISPLAY

Description

INFOID:0000000011277327

The system setting cannot be turned ON/OFF in the combination meter information display using the steering switch.

Diagnosis Procedure

INFOID:0000000011277328

1. CHECK DRIVER ASSISTANCE SYSTEM SETTING

1. Ignition On.
2. Check that the driver assistance system setting can be turned ON/OFF in the combination meter information display using the steering switch.

Is the inspection result normal?

- YES >> Inspection End.
- NO >> GO TO 2.

2. CHECK STEERING SWITCH CIRCUIT

Check the steering switch. Refer to [MWI-71. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair or replace harness or connector.

3. CHECK STEERING SWITCH RESISTANCE

Check the steering switch resistance. Refer to [MWI-71. "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-84. "Removal and Installation"](#).
- NO >> Replace steering switch. Refer to [AV-202. "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

SWITCH DOES NOT TURN ON / SWITCH DOES NOT TURN OFF

< SYMPTOM DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

SWITCH DOES NOT TURN ON / SWITCH DOES NOT TURN OFF

Description

INFOID:000000011277329

The switch does not turn ON

- The driver assistance system does not turn On when the warning system switch is pressed.

The switch does not turn OFF

- The driver assistance system does not turn Off when the warning system switch is pressed.

Diagnosis Procedure

INFOID:000000011277330

1. CHECK WARNING SYSTEM SWITCH CIRCUIT

Check the warning system switch circuit. Refer to [DAS-155, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace harness or connector.

2. CHECK WARNING SYSTEM SWITCH

Check the warning system switch. Refer to [DAS-156, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace the around view monitor control unit. Refer to [DAS-173, "Removal and Installation"](#).

NO >> Replace the warning system switch. Refer to [DAS-174, "Removal and Installation"](#).

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[DRIVER ASSISTANCE SYSTEM]

NORMAL OPERATING CONDITION

Description

INFOID:0000000011277331

PRECAUTIONS FOR FORWARD COLLISION WARNING (FCW)

- The forward collision warning system is designed to warn driver before a collision but will not avoid a collision. It is the driver's responsibility to stay alert, drive safely and be in control of the vehicle at all times.
- The radar sensor does not detect the following objects:
 - Pedestrians, animals, or obstacles in the roadway.
 - Oncoming vehicles
 - Crossing vehicles
- The forward collision warning system does not function when a vehicle ahead is a narrow vehicle, such as a motorcycle.
- The radar sensor may not detect a vehicle ahead in the following conditions:
 - Snow or heavy rain
 - Dirt, ice, snow or other material covering the radar sensor
 - Interference by other radar sources
 - Snow or road spray from traveling vehicles is splashed
 - Driving in a tunnel
- The radar sensor may not detect a vehicle when the vehicle ahead is being towed.
- When the distance to the vehicle ahead is too close, the beam of the radar sensor is obstructed.
- The radar sensor may not detect a vehicle when driving on a steep downhill slope or on roads with sharp curves.
- Excessive noise will interfere with the warning tone sound, and it may not be heard.

PRECAUTIONS FOR LANE DEPARTURE WARNING (LDW)

- The LDW system is only a warning device to inform the driver of a potential unintended lane departure. It will not steer the vehicle or prevent loss of control. It is the driver's responsibility to stay alert, drive safely, keep the vehicle in the traveling lane, and be in control of the vehicle at all times.
- The rear view camera may not detect properly under the following conditions:
 - When towing a trailer.
 - When strong light enters the rear view camera. (For example, direct sunlight or headlight from the rear)
 - When ambient brightness changes instantly. (For example, when the vehicle enters or exits a tunnel or passes under a bridge.)
- Automatic washer and blower may not be able to secure detection capability when excessive dirt adheres on the camera lens.
- LDW system may not function properly under the following conditions:
 - Excessive noise (e.g. audio system volume, open vehicle window) will interfere with the chime sound, and it may not be heard.
 - The rear view camera may not be able to detect properly under the following conditions:
 - On roads where there are multiple parallel lane markers; lane markers that are faded or not painted clearly; yellow painted lane markers; non-standard lane markers; or lane markers covered with water, dirt, snow, etc.
 - On roads where the discontinued lane markers are still detectable.
 - On roads where there are sharply contrasting objects, such as shadows, snow, water, wheel ruts, seams or lines remaining after road repairs. (The LDW system could detect these items as lane markers.)
 - On roads where the traveling lane merges or separates.
 - When the vehicle's traveling direction does not align with the lane marker.
 - When the road surface is very dark due to scarce ambient light or impaired tail lamp.
- When driving on curved road, warning will be late on the outside of the curve due to the nature of the system.

PRECAUTIONS FOR BLIND SPOT WARNING (BSW)

- The BSW system is not a replacement for proper driving procedure and is not designed to prevent contact with vehicles or objects. When changing lanes, always use the side and rear mirrors and turn and look in the direction you will move to ensure it is safe to change lanes. Never rely solely on the BSW system.
- The rear camera may not detect properly under the following conditions:
 - When towing a trailer.
 - When strong light enters the rear camera. (For example, direct sunlight or headlight from the rear)
 - When ambient brightness changes instantly. (For example, when the vehicle enters or exits a tunnel or passes under a bridge.)

A
B
C
D
E
F
G
H
I
J
K
L
M
N

DAS

P

NORMAL OPERATING CONDITION

[DRIVER ASSISTANCE SYSTEM]

< SYMPTOM DIAGNOSIS >

- Automatic washer and blower may not be able to secure detection capability when excessive dirt adheres on the camera lens.
- The camera unit may not be able to detect when certain objects are present such as:
 - Pedestrians, bicycles, animals
 - Several types of vehicles such as motorcycles
 - Oncoming vehicles
 - A vehicle approaching rapidly from behind.
 - A vehicle which your vehicle overtakes rapidly.
- The rear camera may not be able to detect properly when your vehicle travels beside the middle section of a vehicle with long wheelbase(e.g. trailer truck, semi-trailer, tractor).
- The rear camera detection zone is designed based on a standard lane width. When driving in a wider lane, the camera unit may not detect vehicles in an adjacent lane. When driving in a narrow lane, the camera unit may detect vehicles driving two lanes away.
- The rear camera is designed to ignore most stationary objects, however objects such as guardrails, walls, foliage and parked vehicles may occasionally be detected. This is a normal operating condition.
- The rear camera may detect reflection image of vehicles or roadside objects that are not actually in the detection zone, especially when the road is wet.

MOVING OBJECT DETECTION


- The Moving Object Detection system is not a replacement for proper driving procedure and is not designed to prevent contact with vehicles or objects. When backing up, always look in the direction the driver will move to ensure it is safe to proceed. Never rely solely on the Moving Object Detection system.
- Using the Moving Object Detection system under some road or weather condition could lead to improper system operation. Always rely on driver's own steering and braking operation to avoid accidents.
- The Moving Object Detection system may not provide a warning for vehicles that pass through the detection zone quickly.
- Do not use the Moving Object Detection system when towing a trailer.
- Excessive noise (e.g., audio system volume, open vehicle window) will interfere with the chime sound, and it may not be heard.
- A rear view camera may not detect approaching vehicles in certain situations:
 - When a vehicle parked alongside obstructs the beam of the rear view camera.
 - When the vehicle is parked in an angled parking space.
 - When the vehicle is parked on an incline.
 - When a vehicle turns into your vehicle's aisle.
 - When the angle formed by your vehicle and approaching vehicle is small.
- Severe weather or road spray conditions may reduce the ability of the radar to detect other vehicles.
- The rear view camera system may not detect:
 - Small or moving object.
 - Wedge-shaped objects.
 - Object closer to the bumper than 30 cm (10 inch).
 - Thin objects such as rope, wire, chain, etc.
- Do not use the MOD system under the following conditions because the system may not function properly:
 - When driving with a tire that is not the within normal tire condition (example: tire wear, low pressure, spare tire, chain, non-standard wheels).
 - When the vehicle is equipped with non-original brake parts or suspension parts.

REMOVAL AND INSTALLATION

FRONT CAMERA

Exploded View

INFOID:000000011277332

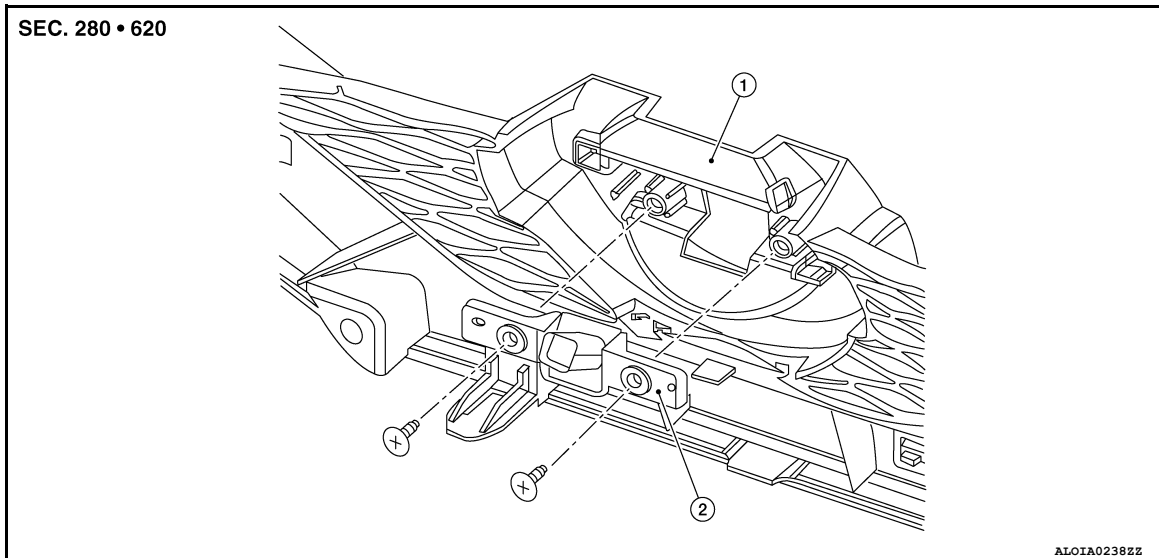

1. Front grille

2. Front camera

Removal and Installation

INFOID:000000011277333

REMOVAL

1. Remove the front grille. Refer to [EXT-23, "Removal and Installation"](#).
2. Remove screws and front camera.

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

Perform camera image calibration. Refer to [DAS-89, "Work Procedure"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

DISTANCE SENSOR


< REMOVAL AND INSTALLATION >

[DRIVER ASSISTANCE SYSTEM]

DISTANCE SENSOR

Exploded View

INFOID:000000011277334

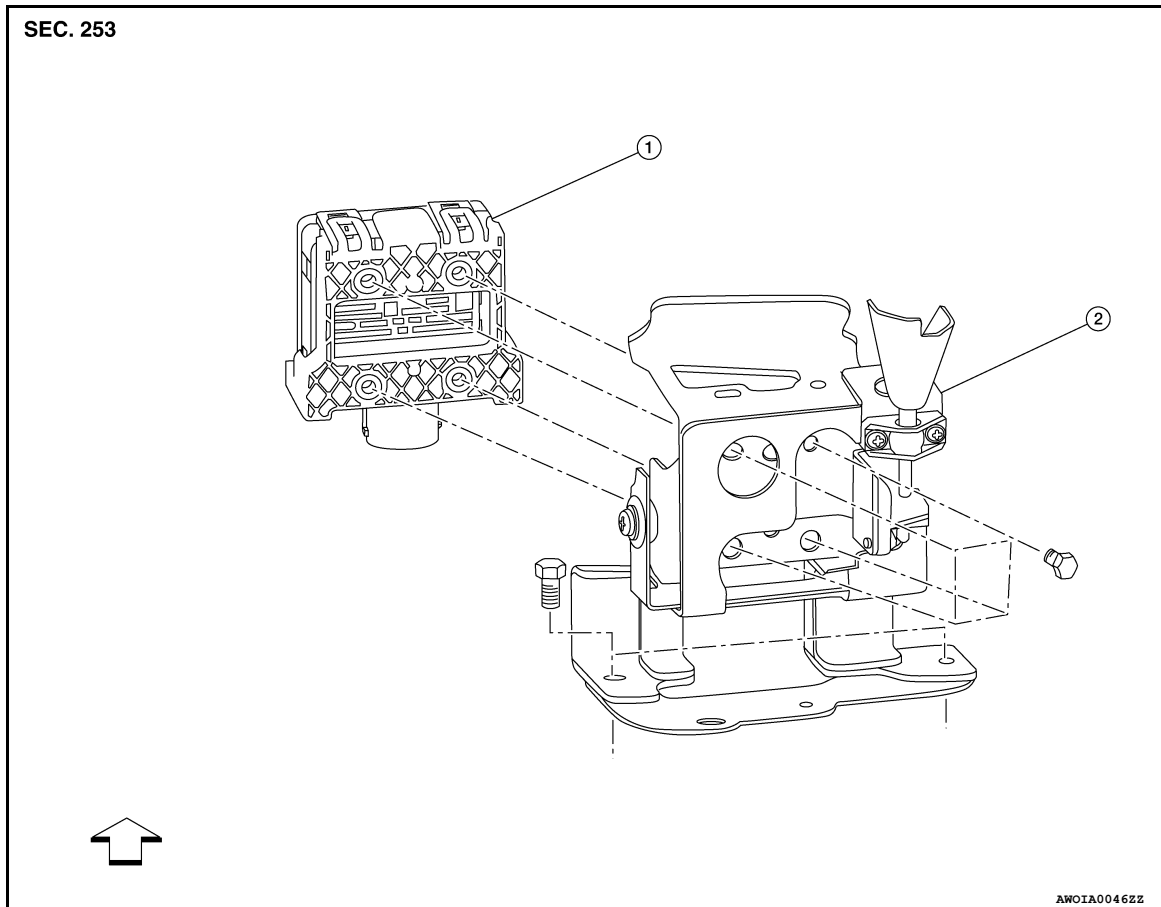

1. Distance sensor

2. Bracket

← Front

Removal and Installation

INFOID:000000011277335

REMOVAL

1. Remove the front bumper fascia. Refer to [EXT-20, "Removal and Installation"](#).
2. Remove distance sensor bolts and the distance sensor.
CAUTION:
Do not drop or shock distance sensor.
3. Remove bolts and distance sensor bracket (if necessary).

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

Perform additional service when replacing distance sensor. Refer to [DAS-69, "Work Procedure"](#).


SIDE CAMERA

Removal and Installation

INFOID:000000011277336

REMOVAL

1. Remove door mirror rear finisher. Refer to [MIR-26. "Removal and Installation"](#).
2. Remove screws (A) and side camera (1) from door mirror finisher (2).

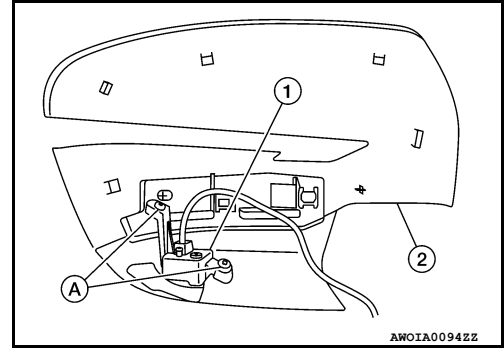

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

Perform camera image calibration (if equipped with around view camera). Refer to [DAS-89. "Work Procedure"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS


BSW INDICATOR

Removal and Installation

INFOID:000000011277337

REMOVAL

1. Remove the front door finisher. Refer to [INT-15, "Removal and Installation"](#).
2. Release the door mirror corner finisher using a suitable tool. Refer to [MIR-22, "Exploded View"](#).
3. Disconnect the harness connector (A), release the harness clip and remove the door mirror corner finisher (1).
4. Remove screws and blind spot warning indicator (2).

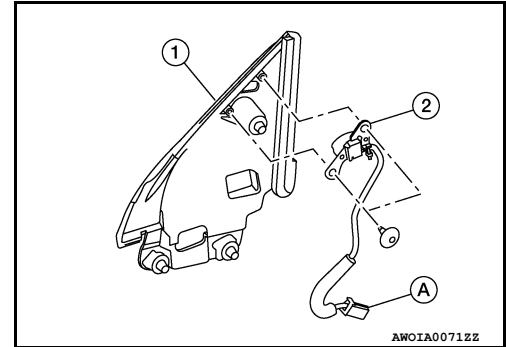

INSTALLATION

Installation is in the reverse order of removal.

AROUND VIEW MONITOR CONTROL UNIT


< REMOVAL AND INSTALLATION >

[DRIVER ASSISTANCE SYSTEM]

AROUND VIEW MONITOR CONTROL UNIT

Exploded View

INFOID:000000011277338

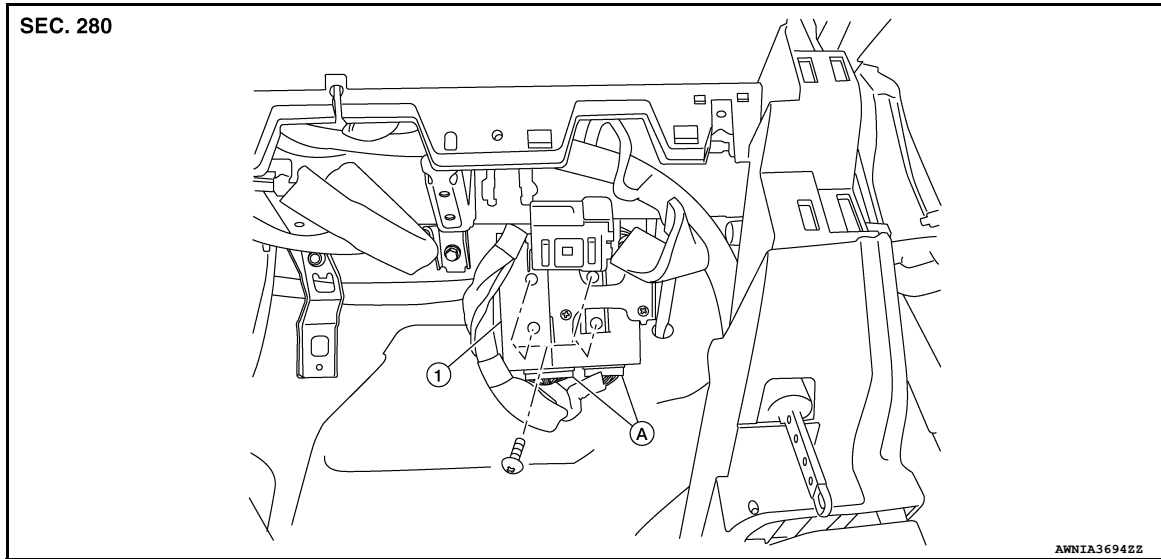

1. Around view monitor control unit A. Harness connector

Removal and Installation

INFOID:000000011277339

REMOVAL

CAUTION:

Before replacing around view monitor control unit, save or print current vehicle specification with CONSULT configuration before replacement. Refer to [DAS-86, "Work Procedure"](#).

1. Remove glove box assembly. Refer to [IP-24, "Removal and Installation"](#).
2. Remove around view monitor control unit screws.
3. Disconnect the harness connector from the around view monitor control unit and remove.

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- Replace the around view monitor control unit if it has been dropped or sustained an impact.
- When replacing around view monitor control unit, you must perform "After Replace ECU" with CONSULT. Refer to [DAS-86, "Work Procedure"](#).
- Perform camera image calibration. Refer to [DAS-89, "Work Procedure"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

WARNING SYSTEMS SWITCH


< REMOVAL AND INSTALLATION >

[DRIVER ASSISTANCE SYSTEM]

WARNING SYSTEMS SWITCH

Exploded View

INFOID:000000011485227

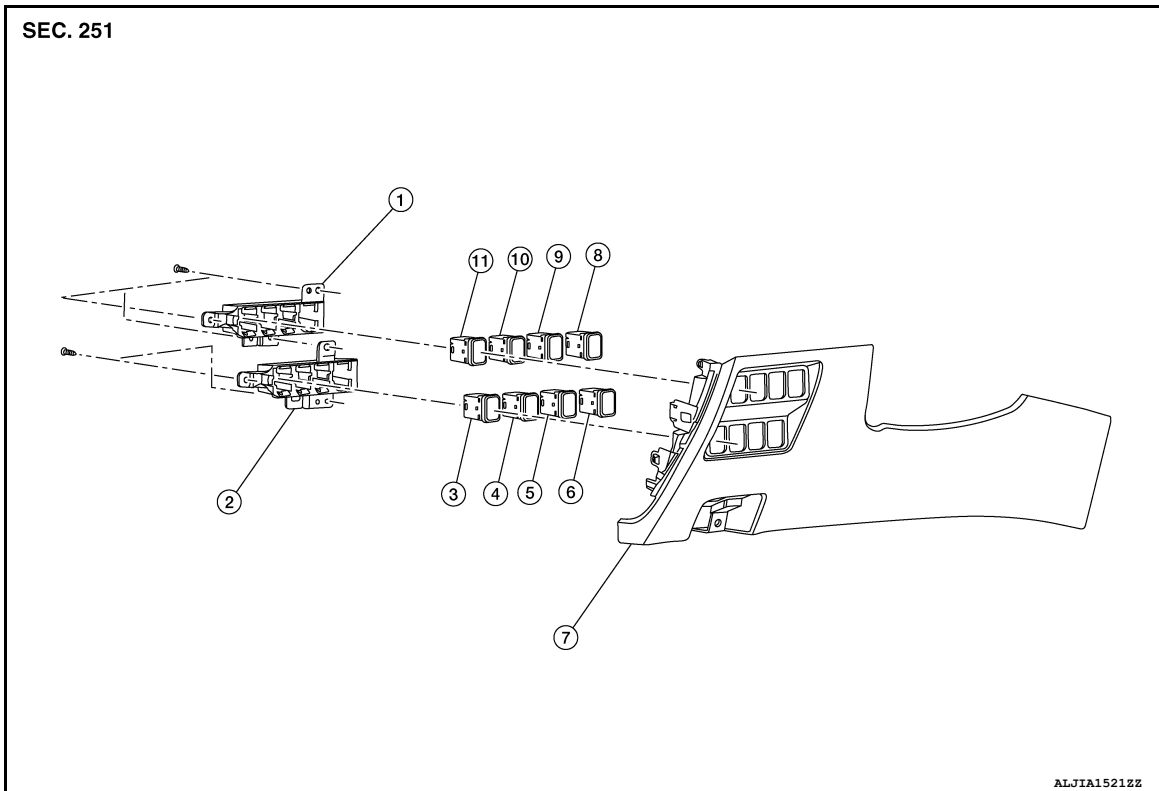

- | | | |
|------------------------------|------------------------------------|-------------------------------|
| 1. Upper switch carrier | 2. Lower switch carrier | 3. blank |
| 4. Warning systems switch | 5. AWD lock switch | 6. Hill decent control switch |
| 7. Instrument lower panel LH | 8. Automatic back door main switch | 9. Automatic back door switch |
| 10. Sport mode switch | 11. VDC OFF switch | |


Removal and Installation

INFOID:000000011277340

REMOVAL

1. Remove instrument lower panel LH. Refer to [IP-23. "Removal and Installation"](#).
2. Remove screws and upper switch carrier, then remove screws and lower switch carrier.
3. Release pawls using suitable tool, then remove warning systems switch from the lower switch carrier.

○: Pawl

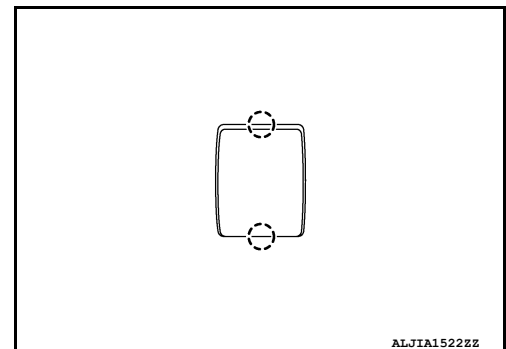

INSTALLATION

Installation is in the reverse order of removal.

WARNING SYSTEMS BUZZER


< REMOVAL AND INSTALLATION >

[DRIVER ASSISTANCE SYSTEM]

WARNING SYSTEMS BUZZER

Exploded View

INFOID:000000011277341

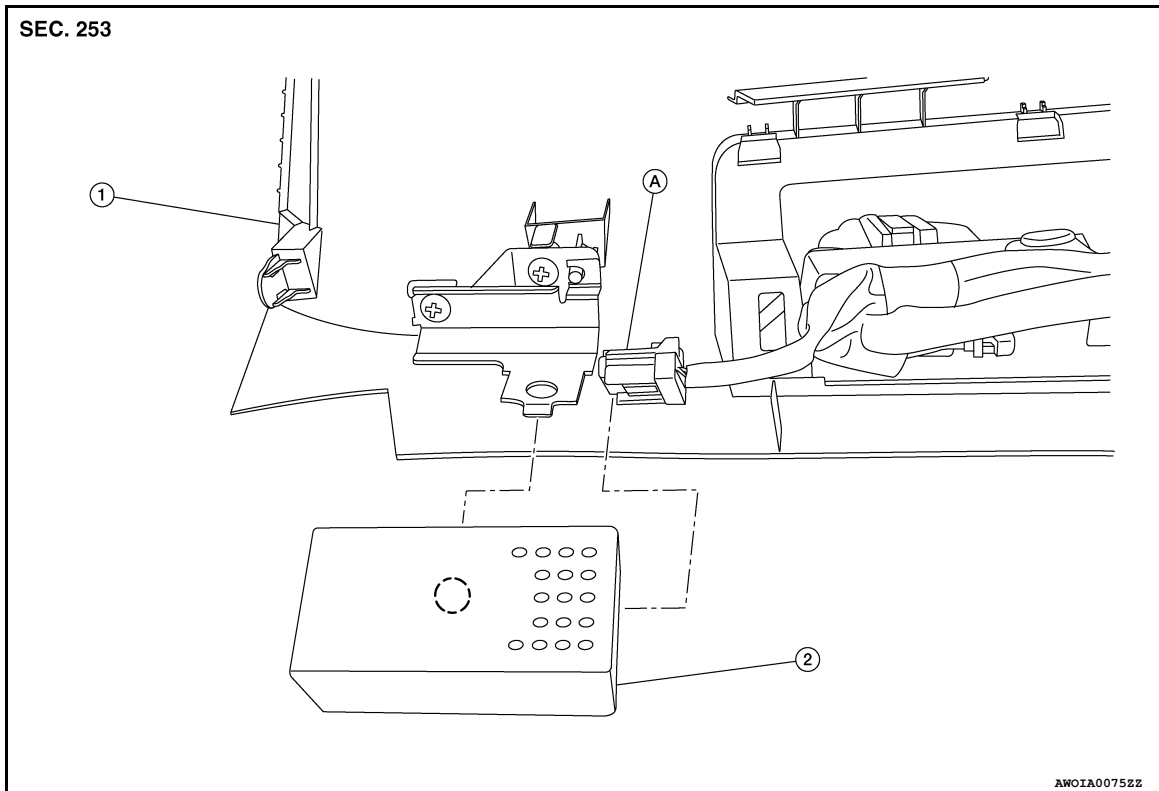

1. Instrument lower panel LH

2. Warning systems buzzer

A. Harness connector

○ Pawl

Removal and Installation

INFOID:000000011277342

REMOVAL

1. Remove instrument lower panel LH. Refer to [IP-14, "Exploded View"](#).
2. Remove warning systems buzzer from bracket on the back of the instrument lower panel LH.

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS


REAR VIEW CAMERA

Removal and Installation

INFOID:000000011277343

REMOVAL

1. Remove the back door outer finisher. Refer to [EXT-51, "Removal and Installation"](#).
2. Disconnect washer tubes (1,3) and air tube (2) (if equipped).
3. Release pawl (B), disconnect harness connector (A) from rear view camera and remove.

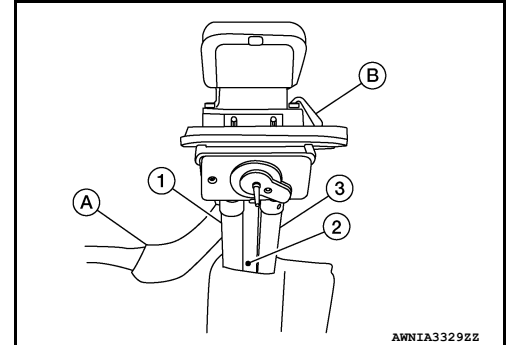

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

Perform rear view camera calibration. Refer to [DAS-95, "Description"](#).

REAR VIEW CAMERA WASHER MOTOR


< REMOVAL AND INSTALLATION >

[DRIVER ASSISTANCE SYSTEM]

REAR VIEW CAMERA WASHER MOTOR

Exploded View

INFOID:000000011277344

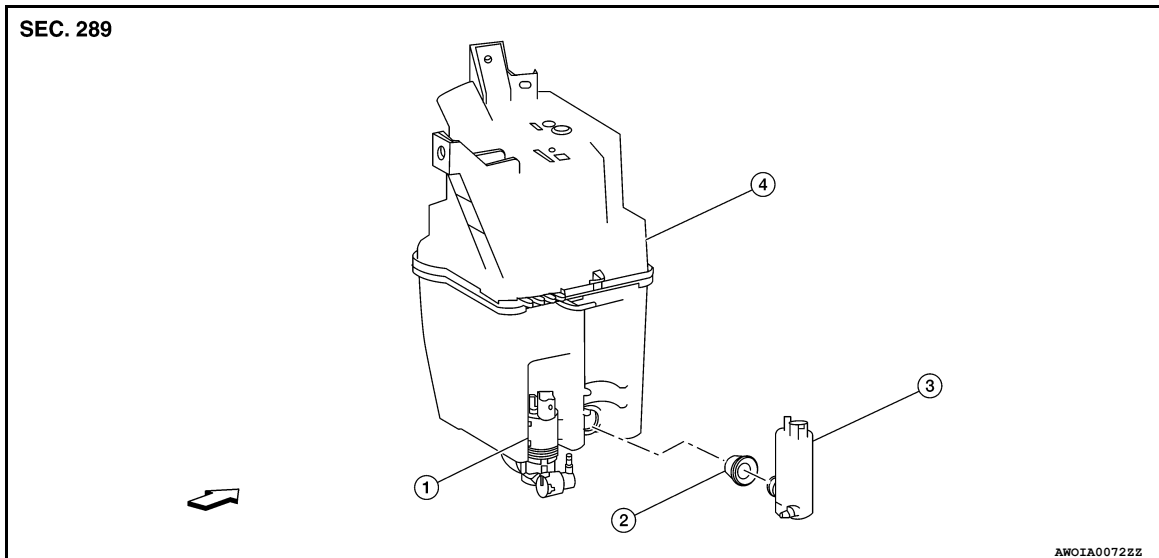

1. Front and rear wiper motor

2. Seal

3. Rear view camera
washer motor

4. Washer tank

← Front

Removal and Installation

INFOID:000000011277345

REMOVAL

1. Drain washer fluid.
2. Remove front over fender (RH). Refer to [EXT-30, "FRONT OVER FENDER : Removal and Installation"](#).
3. Remove wind deflector (RH). Refer to [EXT-28, "FENDER PROTECTOR : Exploded View"](#).
4. Remove engine side cover (RH). Refer to [EXT-28, "FENDER PROTECTOR : Exploded View"](#).
5. Partially remove front fender protector (RH). Refer to [EXT-28, "FENDER PROTECTOR : Exploded View"](#).
6. Disconnect the harness connector from the rear view camera washer motor.
7. Disconnect the washer tube from the rear view camera washer motor.
8. Remove the rear view camera washer motor.
9. Remove the washer tank seal (if necessary).

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- Add water up to the top of washer tank inlet after installing. Check that no leaks exist.
- Fill washer tank with specified amount of fluid. Refer to [WW-78, "Specifications"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

REAR VIEW CAMERA AIR PUMP MOTOR


< REMOVAL AND INSTALLATION >

[DRIVER ASSISTANCE SYSTEM]

REAR VIEW CAMERA AIR PUMP MOTOR

Exploded View

INFOID:000000011277346

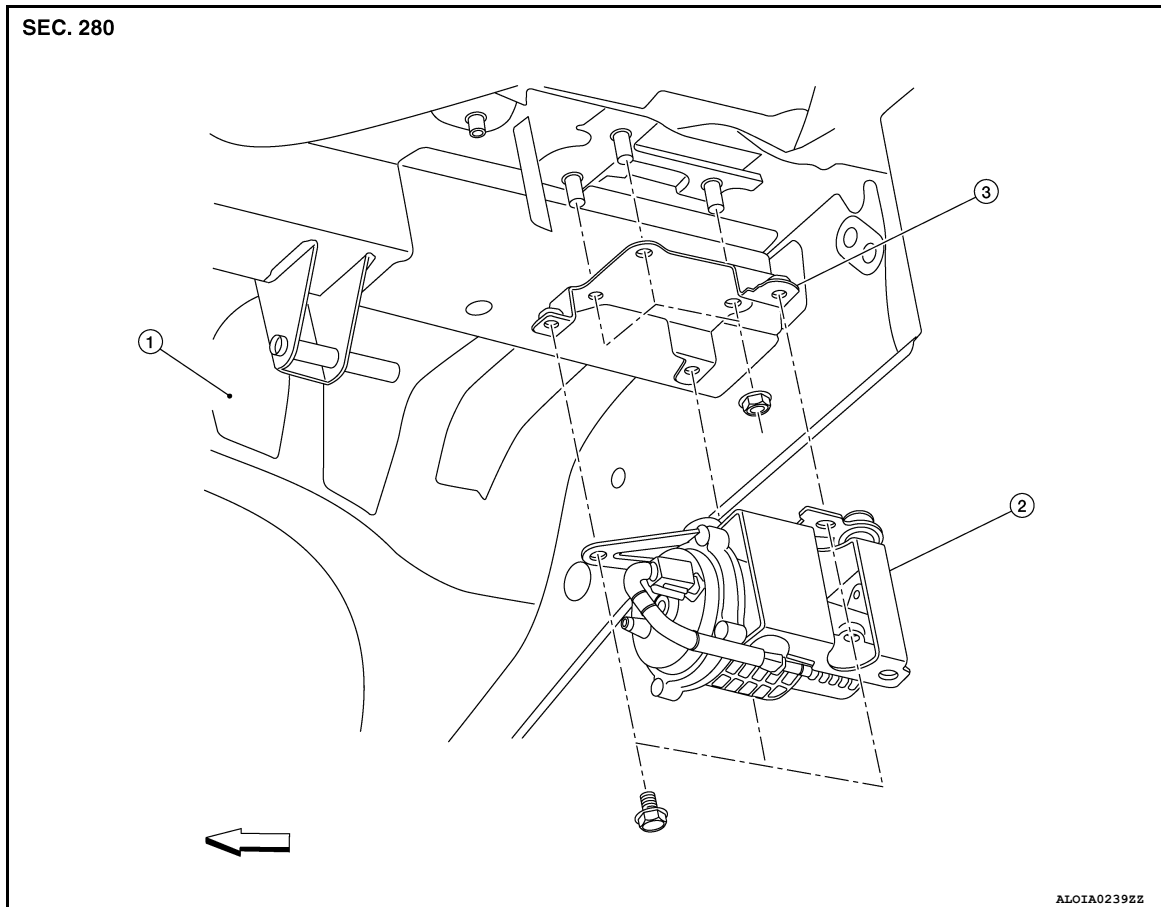

1. Rear floor

2. Rear view camera air pump motor

3. Bracket

← Front

Removal and Installation

INFOID:000000011277347

REMOVAL

1. Remove the rear bumper fascia under cover (LH). Refer to [EXT-20. "Exploded View"](#).
2. Disconnect the air tubes from the rear view camera air pump motor.
3. Disconnect the harness connector from the rear view camera air pump motor.
4. Remove bolts and rear view camera air pump motor.
5. Remove nuts and remove bracket (if necessary).

INSTALLATION

Installation is in the reverse order of removal.

REAR VIEW CAMERA WASHER CONTROL UNIT


< REMOVAL AND INSTALLATION >

[DRIVER ASSISTANCE SYSTEM]

REAR VIEW CAMERA WASHER CONTROL UNIT

Exploded View

INFOID:000000011277348

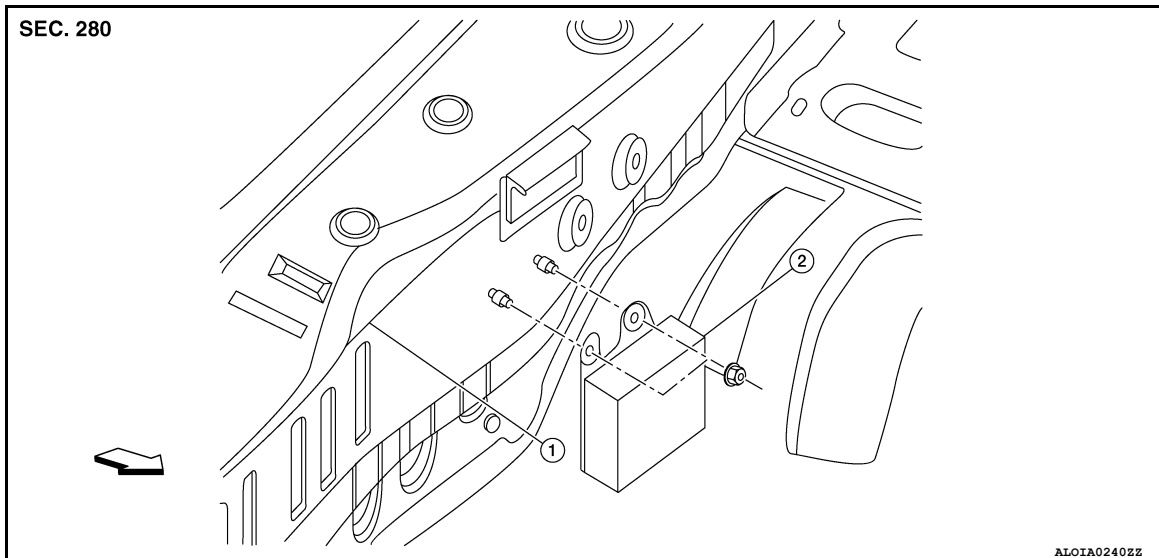

1. Body panel

2. Rear view camera washer control unit

Removal and Installation

INFOID:000000011277349

REMOVAL

1. Remove the luggage rear plate. Refer to [INT-37, "LUGGAGE REAR PLATE : Removal and Installation"](#).
2. Disconnect the harness connector from the rear view camera washer control unit.
3. Remove the rear view camera washer control unit nuts.
4. Remove the rear view camera washer control unit.

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000011277350

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

Precaution for Work

INFOID:000000011277351

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and prevent them from being dropped.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with a new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After installation is complete, be sure to check that each part works properly.
- Follow the steps below to clean components:
 - Water soluble dirt:
 - Dip a soft cloth into lukewarm water, wring the water out of the cloth and wipe the dirty area.
 - Then rub with a soft, dry cloth.
 - Oily dirt:
 - Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%) and wipe the dirty area.
 - Then dip a cloth into fresh water, wring the water out of the cloth and wipe the detergent off.
 - Then rub with a soft, dry cloth.
 - Do not use organic solvent such as thinner, benzene, alcohol or gasoline.
 - For genuine leather seats, use a genuine leather seat cleaner.

PRECAUTIONS


< PRECAUTION >

[CHASSIS CONTROL]


Precautions for Harness Repair

INFOID:000000011277352

- Solder the repaired area and wrap tape around the soldered area.
NOTE:
A fray of twisted lines must be within 110 mm (4.33 in).

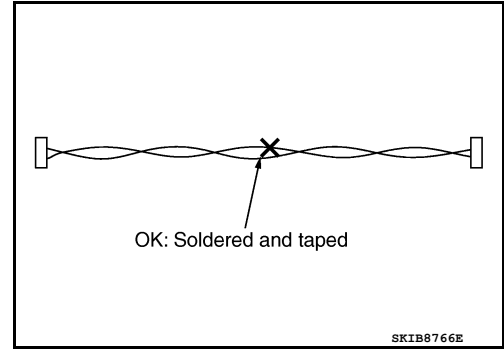

- Bypass connection is never allowed at the repaired area.
NOTE:
Bypass connection may cause CAN communication error. The spliced wire becomes separated and the characteristics of twisted line are lost.

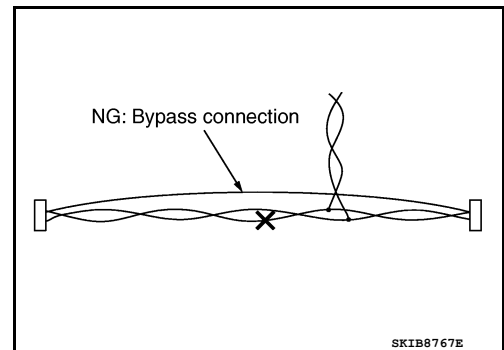

- Replace the applicable harness as an assembly if error is detected on the shield lines of CAN communication line.

Precautions for Chassis control

INFOID:000000011277353

- Do not disassemble the chassis control module.
- Do not reuse if the chassis control module has been dropped.
- Do not perform ACTIVE TEST while driving the vehicle.
- Slight vibrations are felt on the brake pedal and the operation noises occur, when Active Trace Control and Active Ride Control function operates. This is not a malfunction because it is caused by the functions that are normally operated.
- Tachometer will rise and engine noise may be noticeable during Active Engine Brake function operation. This is not a malfunction because it is caused by the function that is normally operated.
- Active Trace Control, Active Ride Control and Active Engine Brake are not always activated in any driving conditions.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

< PREPARATION >

PREPARATION


PREPARATION

Special Service Tool

INFOID:000000011277354

The actual shape of the tools may differ from those illustrated here.

Tool number (TechMate No.) Tool name	Description
— (J-46534) Trim Tool Set	Removing trim components

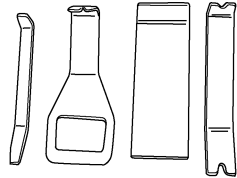

AWJIA0483ZZ

COMPONENT PARTS

< SYSTEM DESCRIPTION >



[CHASSIS CONTROL]

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:0000000011277355

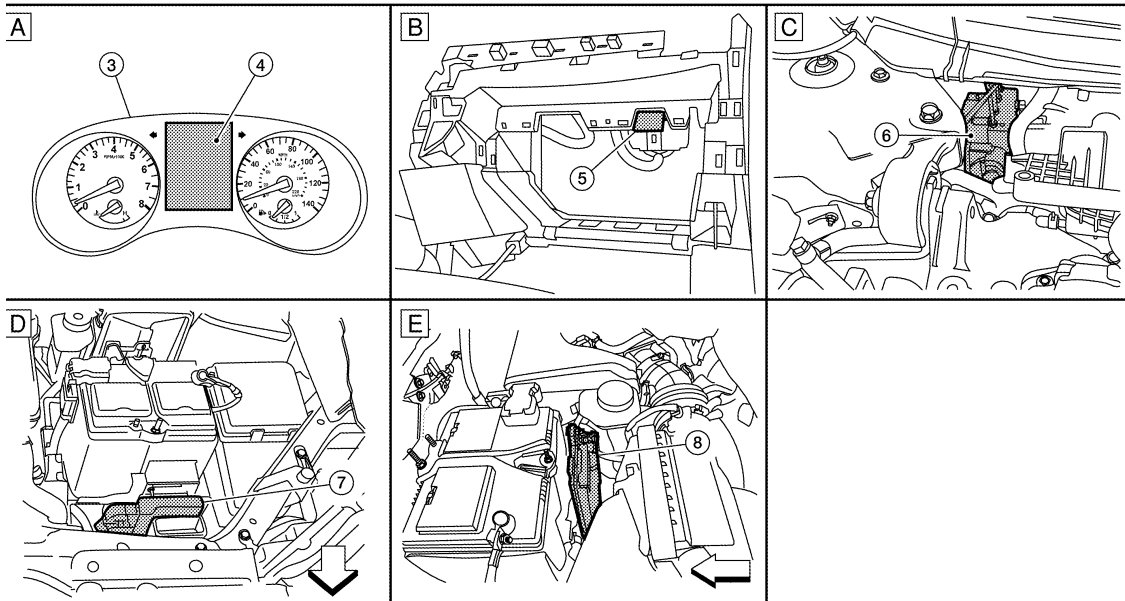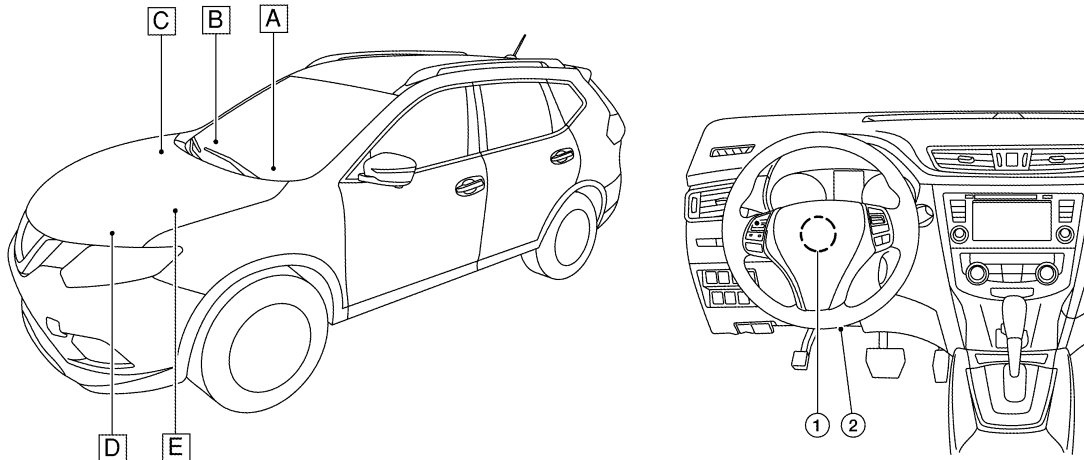

ALOIA0234ZZ

↶ Front of vehicle

A Instrument panel LH

B View with glove box assembly removed

C Rear of engine compartment RH

D Front of engine compartment LH

E Rear of battery

No.	Component parts	Function
1.	Steering angle sensor	BRC-12. "System Description"
2.	Data link connector	LAN-26. "CAN COMMUNICATION SYSTEM : System Description"
3.	Combination meter	MWI-8. "METER SYSTEM : System Description"

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[CHASSIS CONTROL]


No.	Component parts	Function
4.	Vehicle information display	MWI-15, "INFORMATION DISPLAY : System Description"
5.	Chassis control module	DAS-184, "Chassis Control Module"
6.	ABS actuator and electric unit (control unit)	BRC-12, "System Description"
7.	Engine control module	EC-31, "ENGINE CONTROL SYSTEM : System Description"
8.	Transmission control module	TM-31, "CVT CONTROL SYSTEM : System Description"

Chassis Control Module

INFOID:00000001127356

Chassis control module controls the following systems based on the signals from each sensor, switch, and control unit:

- Active engine brake
- Active ride control
- Active trace control

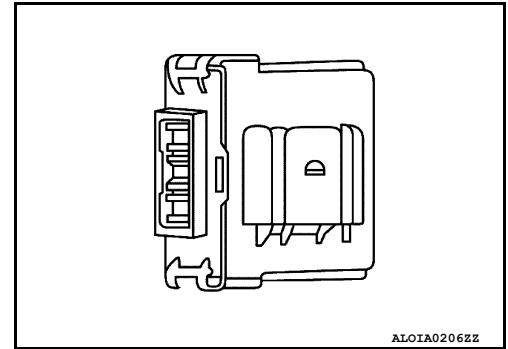

SYSTEM


System Description - Chassis Control

INFOID:000000011277357

- Chassis control to integrally control the driving system was adopted.
- Chassis control module inputs the necessary information for control from CAN communication and each switch and integrally controls each system. Refer to the following table for systems controlled and input/output signals.

System	Reference page
Active Engine Brake	DAS-185. "System Description - Active Engine Brake"
Active Ride Control	DAS-186. "System Description - Active Ride Control"
Active Trace Control	DAS-186. "System Description - Active Trace Control"

SYSTEM DIAGRAM

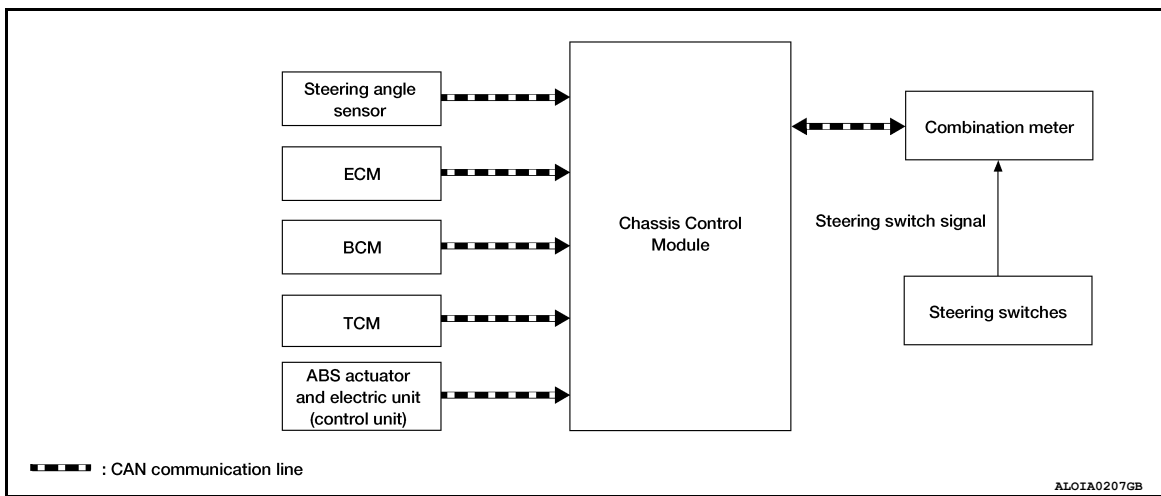


System Description - Active Engine Brake

INFOID:000000011277358

Active Engine Brake function can be switched ON/OFF through the "Chassis Control" settings on the vehicle information display.

- Assist at corners - to lessen the workload of adjusting speed with brake pedal operations at corners. Active Engine Brake function adds small amount of deceleration by controlling the CVT gear ratio depending on the steering input and various sensors. This benefits to easier traceability at corners.

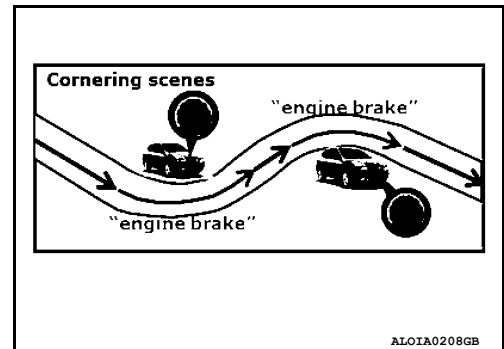

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P


DAS

SYSTEM

< SYSTEM DESCRIPTION >

[CHASSIS CONTROL]

- Assist at breaking - To enhance braking feel, Active Engine Brake adds deceleration by shifting the CVT gear ratio to lower side depending on the driver's brake pedal operation.

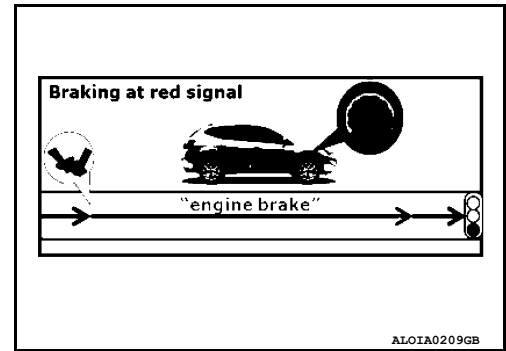


System Description - Active Ride Control


INFOID:000000011277359

The Active Ride Control function can be turned ON/OFF by turning the VDC OFF switch ON/OFF.


- Engine control - Enhances ride comfort by adding/subtracting engine torque in an effort to control the front and rear wheel load balance.

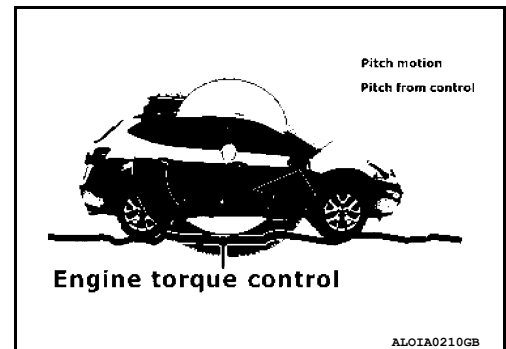

- Engine control - Enhances handling by adding/subtracting engine torque in an effort to control the front and rear wheel load balance.

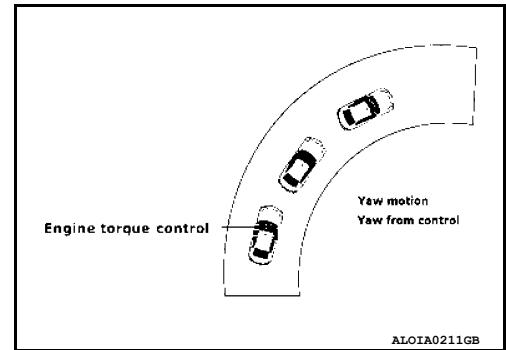

- Brake control - Enhances ride comfort by restraining upper body movement with small amount of brake control when driving on bumpy roads.

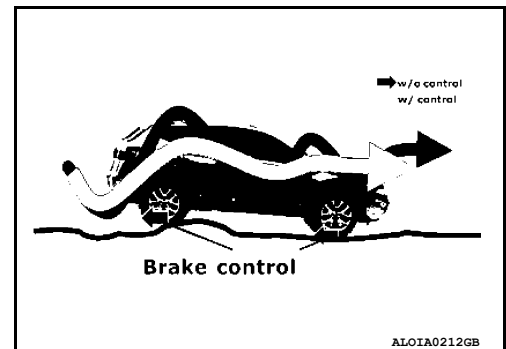

System Description - Active Trace Control

INFOID:000000011277360

Active Trace Control function controls the braking utilizing the ABS actuator and electric unit (control unit), depending on cornering condition calculated from driver's steering input and plural sensors. Active Trace Control function is aimed to enhance traceability at corners and smooth the vehicle movement to provide confident driving.

SYSTEM


[CHASSIS CONTROL]

< SYSTEM DESCRIPTION >


Active Trace Control function can be switched ON/OFF through the "Chassis Control" settings on the vehicle information display. When the Active Trace Control is selected OFF, some functions will be kept ON to assist driver (for example, avoidance condition).

When the VDC OFF switch is used to turn OFF the VDC system, the Active Trace Control system is also completely turned OFF.


- Steady cornering - The change of forward and lateral acceleration is smoothed by applying the necessary amount of brake pressure.

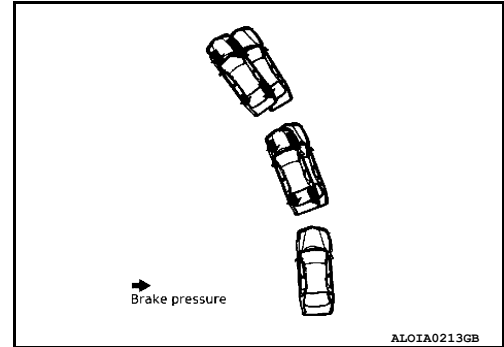


- Transient steering input - Reduces lag of yaw rate against steering operation.

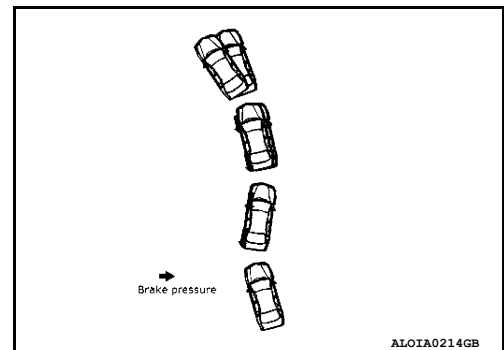

- Acceleration at corners - Restrains understeer by applying the necessary amount of brake pressure to the inner wheels.

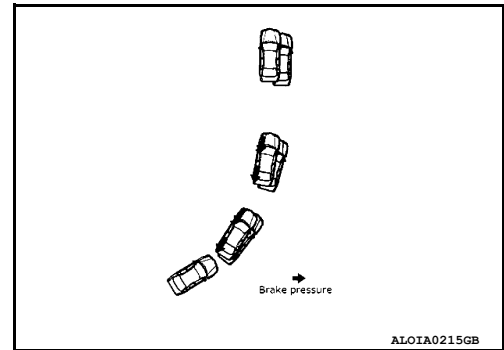

- Quick lane change - achieves stable vehicle behavior at quick steering operation by applying the necessary amount of brake pressure to the appropriate wheels.

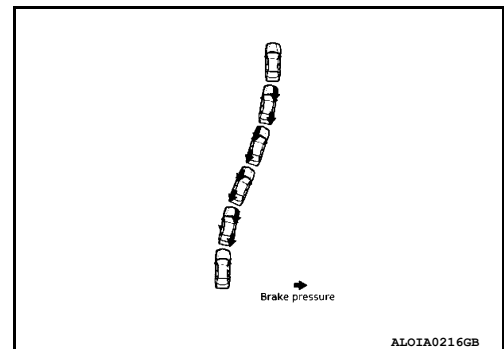

Fail-Safe (Chassis Control Module)

INFOID:000000011277361

- When chassis control module detects an error in the chassis control system architecture (including other system components), the master warning lamp turns ON and an interrupt is displayed on the information display of the combination meter. Please check the DTCs and investigate the cause of error.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

SYSTEM

< SYSTEM DESCRIPTION >

[CHASSIS CONTROL]

DTC	Vehicle condition
C1B92-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control • Active Engine Brake
C1B93-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control (engine) • Active Engine Brake
C1B94-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control (engine)
C1B95-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control (brake)
C1B99-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control • Active Engine Brake
C1BA0-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control (brake)
C1BA2-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control (engine)
C1BA5-00	Normal control
C1BAB-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control (engine)
C1BB2-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control • Active Engine Brake
C1BB3-00	
C1BB4-00	
C1BB5-00	
C1BB6-00	Normal control
C1BB7-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control • Active Engine Brake
C1BB8-00	
C1BB9-00	
C1BBA-00	
C1BBB-00	Normal control
C1BBC-00	
C1BBD-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control • Active Engine Brake
C1BC0-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control
C1BC1-00	
C1BC2-00	
C1BC3-00	
C1BC4-00	The following function is suspended: <ul style="list-style-type: none"> • Active Ride Control (brake)
C1BC5-00	The following function is suspended: <ul style="list-style-type: none"> • Active Trace Control

SYSTEM

< SYSTEM DESCRIPTION >

[CHASSIS CONTROL]

DTC	Vehicle condition
C1BC6-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control (brake)
U1A34-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control • Active Engine Brake
U1A35-00	
U1A36-00	
U1A39-00	Normal control
U1A3B-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control (brake) • Active Engine Brake
U1A42-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control (engine)
U1A43-00	
U1A48-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control • Active Engine Brake
U1A4A-00	
U1A4B-00	
U1A4E-00	The following function is suspended: <ul style="list-style-type: none"> • Active Ride Control

INFORMATION DISPLAY (COMBINATION METER)

INFORMATION DISPLAY (COMBINATION METER) : Chassis Control Display

INFOID:0000000011277362



DESIGN/PURPOSE

- The warning message is displayed on the vehicle information display when chassis control module detects an error in the chassis control system architecture. Please check the DTCs and investigate the cause of error.
- Each chassis control system information is displayed on the vehicle information display.

Warning Message

Design	Warning Message
—	Chassis Control System Error See Owner's Manual

System Information

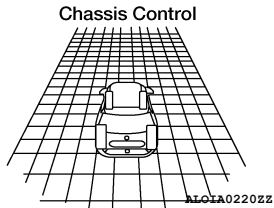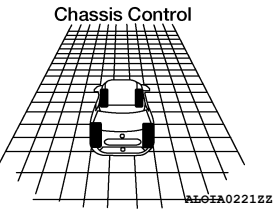Design	Description
	Active Engine Brake inactive. Active Ride Control inactive. Active Trace Control inactive.
	Active Engine Brake (assist at corners). Active Trace Control is active. (Steering angle is less than the specified angle).




A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

SYSTEM

< SYSTEM DESCRIPTION >

[CHASSIS CONTROL]

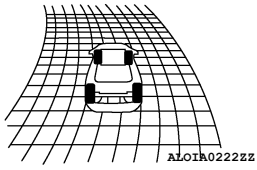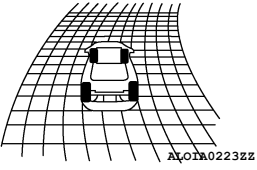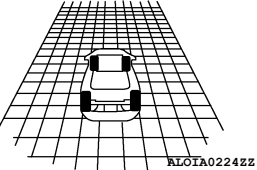Design	Description
<p>Chassis Control</p> 	<p>Active Engine Brake (assist at corner). Active Trace Control assist is active. (Steering angle is the specified angle or more in the leftward direction).</p>
<p>Chassis Control</p> 	<p>Active Engine Brake (assist at corner). Active Trace Control assist is active. (Steering angle is the specified angle or more in the rightward direction).</p>
<p>Chassis Control</p> 	<p>Active Ride Control is active (assist).</p>

Indicator operating

- Active Engine Brake: Refer to [DAS-185, "System Description - Active Engine Brake"](#).
- Active Ride Control: Refer to [DAS-186, "System Description - Active Ride Control"](#).
- Active Trace Control: Refer to [DAS-186, "System Description - Active Trace Control"](#).

HANDLING PRECAUTION

Precautions for Chassis Control (Engine Brake, Active Ride, and Active Trace)

INFOID:000000011277363

CHASSIS CONTROL

- Chassis Control will not provide all the necessary controls to replace driver intervention. It is not designed to prevent loss of control. It is the driver's responsibility to stay alert, drive safely, keep the vehicle in the traveling lane, and be in control of vehicle at all times.
- Chassis Control is primarily intended for use on well-developed freeways or highways. It may not perform satisfactorily in certain roads, weather or driving conditions.
- Using Chassis Control under some conditions of road, corner or severe weather could lead to an unexpected system operation. In such conditions, driver needs to correct the vehicle's direction with driver's steering operation to avoid accidents.
- When Chassis Control is operating, avoid excessive or sudden steering maneuvers. Otherwise, you could lose control of the vehicle.
- Engine Brake Control is designed to enhance braking feel and traceability at corners.
- Active Ride Control is designed to enhance handling and drive comfort.
- Active Trace Control is designed to enhance traceability at corners and smooth vehicle movement for more confident driving.
- Chassis Control may not function properly under the following conditions:
 - During bad weather (rain, fog, snow, wind, etc.).
 - When driving on slippery roads, such as on ice or snow, etc.
 - When driving on winding or uneven roads.
 - When driving with a tire that is not within normal tire conditions (for example, tire wear, low tire pressure, installation of spare tire, tire chains, non-standard wheels).
 - When the vehicle is equipped with non-original steering parts or suspension parts.
- The functions of Chassis Control may or may not operate properly under the following conditions:
 - On roads covered with water, dirt or snow, etc.
 - On roads where there are sharp curves.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

DIAGNOSIS SYSTEM (CHASSIS CONTROL MODULE)

[CHASSIS CONTROL]

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (CHASSIS CONTROL MODULE)

CONSULT Function

INFOID:000000011277364

APPLICATION ITEM

CONSULT can display each diagnostic item using the diagnostic test modes as follows.

Mode	Function description
ECU identification	Parts number of chassis control module can be read.
Self Diagnostic Result	Self-diagnostic results and freeze frame data can be read and erased quickly.*1
Data Monitor	Input/Output data in chassis control module can be read.
Active Test	Send the drive signal from CONSULT to the actuator. The operation check can be performed.
Re/programming, Configuration	<ul style="list-style-type: none">• Read and save the vehicle specification (TYPE ID).• Write the vehicle specification (TYPE ID) when replacing Chassis Control Module.

*1: The following diagnosis information is erased by erasing.

- DTC
- Freeze frame data (FFD)

ECU IDENTIFICATION

Chassis control module part number can be read.

SELF DIAGNOSTIC RESULT

Refer to [DAS-203, "DTC Index"](#).

When "CRNT" is displayed on "self-diagnosis result"

- The system is presently malfunctioning.

When "PAST" is displayed on "self-diagnosis result"

- System malfunction in the past is detected, but the system is presently normal.

Freeze frame data (FFD)

When DTC is detected, a vehicle state shown below is recorded and displayed on CONSULT.

Item name	Indication/Unit	Display item
Odometer/Trip meter	km	Total mileage (Odometer value) of the moment a particular.
DTC LOCAL CODE	—	DTC code is displayed but not used.
CAN DIAG PERMIS CONDITION	Off / On	Displays CAN network diagnosis status.
BRAKE SWITCH 1	Off / On	Displays brake switch operating status (Off: close / On: open).
BRAKE SWITCH 2	Off / On	Displays brake switch operating status (Off: open / On: close).
ABS	NORMAL / ABNOR	Displays ABS function status.
TCS	NORMAL / ABNOR	Displays TCS function status.
VDC	NORMAL / ABNOR	Displays VDC function status.
VEHICLE SPEED	km	Displays the vehicle speed.
FR WHEEL SPEED	rpm	Displays the rotational speed of front RH tire.
FL WHEEL SPEED	rpm	Displays the rotational speed of front LH tire.
RR WHEEL SPEED	rpm	Displays the rotational speed of rear RH tire.
RL WHEEL SPEED	rpm	Displays the rotational speed of rear LH tire.
STEERING ANG SENSOR	deg	Displays the steering angle from the steering angle sensor.
SIDE G SENSOR	G	Displays the side G.
DECEL G SENSOR	G	Displays the decel G.
YAW RATE SENSOR	deg/s	Displays the yaw rate.
THRTL OPENING	%	Displays the electric throttle position.

DIAGNOSIS SYSTEM (CHASSIS CONTROL MODULE)

< SYSTEM DESCRIPTION >

[CHASSIS CONTROL]

Item name	Indication/Unit	Display item
SHIFT POSITION	Off / P / R / N / D (A) / S / L / B / 1 – 6 / M 1 – M 8 / A 1 – A 6	Displayed but not used.
PRESS SENSOR	bar	Displays the brake fluid pressure.

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Item	Item [Unit]	Description
IGN VOLT	[V]	Displays the ignition power supply voltage.
CONTROL MODULE MALF	[Off / On]	Displays chassis control module malfunction.
CAN DIAG STATUS	[Off / On]	Displays CAN network diagnosis status.
VEHICLE SPEED	[km/m]	Displays the vehicle speed.
FR WHEEL SPEED	[rpm]	Displays the rotational speed of front RH tire.
FL WHEEL SPEED	[rpm]	Displays the rotational speed of front LH tire.
RR WHEEL SPEED	[rpm]	Displays the rotational speed of rear RH tire.
RL WHEEL SPEED	[rpm]	Displays the rotational speed of rear LH tire.
STEERING ANG SENSOR	[deg]	Displays the steering angle from the steering angle sensor.
DECEL G SENSOR	[G]	Displays the decel G.
SIDE G SENSOR	[G]	Displays the side G.
YAW RATE SENSOR	[deg/s]	Displays the yaw rate.
ACCELE PEDAL POSITION	[%]	Displays the accelerator pedal position.
THROTTLE CONTROL	[NORMAL / INCORR / PREV / IN-POSSI]	Displays the electric throttle status.
SHIFT POSITION	[Off / P / R / N / D (A) / S / L / B / 1 – 6 / M 1 – M 8 / A 1 – A 6]	Displayed but not used.
BRAKE SWITCH 2	[Off / On]	Displays brake switch operating status (Off: close / On: open).
BRAKE SWITCH 1	[Off / On]	Displays brake switch operating status (Off: open / On: close).
PRESS SENSOR	[bar]	Displays the brake fluid pressure.
ABS	[NORMAL / ABNOR]	Displays ABS function status.
ABS MALF	[NORMAL / ABNOR]	Displays ABS function status.
EBD	[NORMAL / ABNOR]	Displays EBD function status.
ACCELE PEDAL MALF	[NORMAL / ABNOR]	Displays the accelerator pedal status.
TCS	[NORMAL / ABNOR]	Displays TCS function status.
TCS MALF	[NORMAL / ABNOR]	Displays TCS function status.
VDC	[NORMAL / ABNOR]	Displays VDC function status.
VDC MALF	[NORMAL / ABNOR]	Displays VDC function status.
VDC OFF SWITCH	[Off / On]	Displays VDC OFF switch status.
PARKING BRAKE	[Off / On]	Displayed but not used.
DRV TRQ CTRL MODE	[INITIAL / NORMAL / STOP 1 / STOP 2 / LIMIT 1 / PROHIBI]	Displays the status of correction to slightly increase/decrease the drive torque.
DRV TRQ CTRL PERMIS 1	[NO PER / PERMIS]	Displays the permission status (basic requirement) of correction to slightly increase/decrease drive torque.
DRV TRQ CTRL PERMIS 2	[NO PER / PERMIS]	Displays the permission status (system requirement) of correction to slightly increase/decrease drive torque.

DIAGNOSIS SYSTEM (CHASSIS CONTROL MODULE)

< SYSTEM DESCRIPTION >

[CHASSIS CONTROL]

Item [Unit]	Description
DRV TRQ CTRL STOP [REQ / NO REQ]	Displays the stop request status of correction to slightly increase/decrease drive torque.
DRV TRQ CTRL PROHIBIT [REQ / NO REQ]	Displays the prohibition request status of correction to slightly increase/decrease drive torque.
AEB [Off / On]	Displays the Active Engine Brake (corner) function operating status
ATC 1 [Off / On]	Displays active trace control function operating status.
ATC 2 [Off / On]	Displays active trace control function operating status.
ATC 3 [Off / On]	Displays active trace control function operating status.
ATC 4 [Off / On]	Displays active trace control function operating status.
ATC 5 [Off / On]	Displays active trace control function operating status.
BRAKE HOLD [INACT / ACT / RELEA]	Displays the status of Hill Start Assist function.
ARC BRAKE [Off / On]	Displays the brake control effect of Active Trace Control function on the information display in the combination meter.
FL TIRE DISP [DEF / 1]	Displays tire status.
FR TIRE DISP [DEF / 1]	Displays tire status.
RL TIRE DISP [DEF / 1]	Displays tire status.
RR TIRE DISP [DEF / 1]	Displays tire status.
VEHICLE DISP [Off / On]	Displays Active Ride Control (brake) activation status.
INTERRUPT DISP [NOREQ / HOLD1 / HOLD2 / HDC]	Displays the interruption status.
TURN DISP [NSTEER / LEFT / RIGHT]	Displays the turn status.
ALC LEVEL [0]	Displayed but not used.
ALC STATUS [ACTIVE / INACT]	Displayed but not used.
BRAKE HOLD DISP [INACT / ACT / RELEA]	Displays the brake hold status.
ATC DISP [Off / On]	Displays Active Trace Control status.
ARC BRAKE DISP [Off / On]	Displays the status of Active Ride Control (brake).
HDC DISP [Off / On]	Displays the Hill Descent Control.
CVT ENABLE [Off / On]	Displays the CVT authorized state for Active Engine Brake.
ADA SW [Off / On]	Displays the Active Engine Brake status.
COMMAND(REL) [0.0000]	Displays the relative command value of Active Engine Brake.
COMMAND(ABS) [0.0000]	Displays absolute command value of Active Engine Brake.
SLIP RATE [%]	Displays slip ratio of Active Engine Brake.
ASA CHARACTERISTIC [Off / On]	Displays Active Trace Control state on METER.
ADA CHARACTERISTIC [Off / On]	Displays Active Engine Brake state on METER.

ACTIVE TEST

The active test is used to determine and identify details of a malfunction, based on self-diagnosis test results and data obtained in the DATA MONITOR. In response to instructions from CONSULT, instead of those from chassis control module on the vehicle, a drive signal is sent to the actuator to check its operation.

CAUTION:

- **Never perform ACTIVE TEST while driving the vehicle.**
- **Always bleed air from brake system before active test.**
- **Never perform active test when system is malfunctioning.**

NOTE:

- When active test is performed while depressing the brake pedal, the brake pedal depressing stroke may change. This is not a malfunction.
- During an active test, sometimes a chassis control warning is displayed and the master warning lamp illuminates on the information display in the combination meter; however, this is not a malfunction.

DIAGNOSIS SYSTEM (CHASSIS CONTROL MODULE)

< SYSTEM DESCRIPTION >

[CHASSIS CONTROL]

Test item	Operation	Description
BRAKE ACTUATOR 1 MODE 1	Start	Controls brake fluid pressure.
BRAKE ACTUATOR 1 MODE 2	Start	Controls brake fluid pressure.
BRAKE ACTUATOR 1 MODE 3	Start	Controls brake fluid pressure.
BRAKE ACTUATOR 2 MODE 1	Start	Controls brake fluid pressure.
BRAKE ACTUATOR 2 MODE 2	Start	Controls brake fluid pressure.
BRAKE ACTUATOR 2 MODE 3	Start	Controls brake fluid pressure.
BRAKE ACTUATOR 3 MODE 1	Start	Controls brake fluid pressure.
BRAKE ACTUATOR 3 MODE 2	Start	Controls brake fluid pressure.
BRAKE ACTUATOR 3 MODE 3	Start	Controls brake fluid pressure.
MASTER WARNING ACTIVE	On	If touching "On" with the master warning lamp not illuminated, the master warning lamp illuminates. Stops in approximately 1 minute.
	Off	The master warning lamp turns OFF. (vehicle in normal state)
FL TIRE DISP	On	Displays the front LH tire on the information display in the combination meter.
	Off	Does not display the front LH tire on the information display in the combination meter.
FR TIRE DISP	On	Displays the front RH tire on the information display in the combination meter.
	Off	Does not display the front RH tire on the information display in the combination meter.
RL TIRE DISP	On	Displays the rear LH tire on the information display in the combination meter.
	Off	Does not display the rear LH tire on the information display in the combination meter.
RR TIRE DISP	On	Displays the rear RH tire on the information display in the combination meter.
	Off	Does not display the rear RH tire on the information display in the combination meter.
TURN DISP	NO DISP	Does not display the turning status on the information display in the combination meter.
	LH	Displays the LH turning status on the information display in the combination meter.
	RH	Displays the RH turning status on the information display in the combination meter.
	ROUND	Displayed but not used.
ATC 1 DISP	On	Displays active trace control function active status on the information display in the combination meter.
	Off	Displays active trace control function inactive status on the information display in the combination meter.
ATC 2 DISP	On	Displays active trace control function active status on the information display in the combination meter.
	Off	Displays active trace control function inactive status on the information display in the combination meter.
HDC DISP	On	Displays Hill Descent Control active status on the information display on the combination meter.
	Off	Displays Hill Descent Control inactive status on the information display on the combination meter.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

DIAGNOSIS SYSTEM (CHASSIS CONTROL MODULE)

< SYSTEM DESCRIPTION >

[CHASSIS CONTROL]

Test item	Operation	Description
BRAKE HOLD DISP	INACT	Displays inactive status of controls on the information display on the combination meter.
	READY	Displays ready status of Hill Start Assist on the information display on the combination meter.
	ACTIVE	Displays active status of Hill Start Assist on the information display on the combination meter.
	ERROR	Displays inactive status of controls on the information display on the combination meter.
AEB DISP	On	Displays Active Engine Brake (corner) active status on the information display in the combination meter.
	Off	Displays Active Engine Brake (corner) inactive status on the information display in the combination meter.
VEHICLE DISP	On	Displays Active Ride Control (brake) active status on the information display in the combination meter.
	Off	Displays Active Ride Control (brake) inactive status on the information display in the combination meter.
INTERRUPT DISP	NO REQ	Displays inactive status of controls on the information display in the combination meter.
	READY	Displays ready status of Hill Start Assist on the information display in the combination meter.
	ACTIVE	Displays active status of Hill Start Assist on the information display in the combination meter.
	HDC	Displays Hill Descent Control active status on the information display in the combination meter.
ATC 3 DISP	On	Displays active trace control function active status on the information display in the combination meter.
	Off	Displays active trace control function inactive status on the information display in the combination meter.

RE/PROGRAMMING, CONFIGURATION

Configuration includes the following functions.

Function		Description
Read/Write Configuration	Before replacing ECU	Allows the reading of vehicle specification (Type ID) written in Chassis Control Module to store the specification in CONSULT.
	After replacing ECU	Allows the writing of vehicle information (Type ID) stored in CONSULT into the Chassis Control Module.
Manual Configuration		Allows the writing of vehicle specification (Type ID) into the Chassis Control Module by hand.

CAUTION:

Use “Manual Configuration” only when “TYPE ID” of Chassis Control Module cannot be read.

CHASSIS CONTROL MODULE

< ECU DIAGNOSIS INFORMATION >

[CHASSIS CONTROL]

ECU DIAGNOSIS INFORMATION

CHASSIS CONTROL MODULE

Reference Value

INFOID:0000000011277365

CONSULT DATA MONITOR STANDARD VALUE

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor item	Condition	Reference values in normal operation
IGN VOLT	Ignition switch ON.	10 – 16 V
CONTROL MODULE MALF	When chassis control module is normal.	Off
	When chassis control module malfunction is detected.	On
CAN DIAG STATUS	When diagnosis of CAN communication malfunction is detected.	Off
	When diagnosis of CAN communication is normal.	On
STP LAMP OFF RELAY 1	Displayed but not used.	—
STP LAMP OFF RELAY 2	Displayed but not used.	—
ESS RELAY	Displayed but not used.	—
VEHICLE SPEED	Vehicle Stopped.	0 km/h (0 MPH)
	Driving*	Almost same reading as speedometer (within $\pm 10\%$).
FR WHEEL SPEED	Vehicle stopped.	0 rpm
	Driving*	Increases according to vehicle speed.
FL WHEEL SPEED	Vehicle stopped.	0 rpm
	Driving*	Increases according to vehicle speed.
RR WHEEL SPEED	Vehicle stopped.	0 rpm
	Driving*	Increases according to vehicle speed.
RL WHEEL SPEED	Vehicle stopped.	0 rpm
	Driving*	Increases according to vehicle speed.
STEERING ANG SENSOR	When driving straight.	0 \pm 3.5 deg.
	When steering wheel is steered to RH by 90°.	Approx. +90 deg.
	When steering wheel is steered to LH by 90°.	Approx. -90 deg.
DECEL G SENSOR	Vehicle stopped.	Approx. 0 G.
	When during acceleration.	Positive value.
	When during deceleration.	Negative value.
SIDE G SENSOR	Vehicle stopped.	Approx. 0 G.
	When right turn.	Negative value.
	When left turn.	Positive value.
YAW RATE SENSOR	Vehicle stopped.	Approx. 0 deg/s.
	When right turn.	Negative value.
	When left turn.	Positive value.
ACCELE PEDAL POSITION	When accelerator pedal is released.	0%
	When accelerator pedal is depressed.	0 – 100%

CHASSIS CONTROL MODULE

< ECU DIAGNOSIS INFORMATION >

[CHASSIS CONTROL]

Monitor item	Condition	Reference values in normal operation
THROTTLE CONTROL	When electric throttle control actuator is normal.	NORMAL
	When the electric throttle control actuator does not achieve the requirement (measured value is inaccurate).	INCORR
	When the electric throttle control actuator does not achieve the requirement (temporary prevention).	PREV
	When the electric throttle control actuator does not achieve the requirement (impossible).	IMPOSSI
SHIFT POSITION	Selector lever in any position.	Displayed but not used.
BRAKE SWITCH 2	When brake pedal is not depressed.	Off
	When brake pedal is depressed.	On
BRAKE SWITCH 1	When brake pedal is depressed.	Off
	When brake pedal is not depressed.	On
PRESS SENSOR	When brake pedal is not depressed.	Approx. 0 bar
	when brake pedal is depressed.	0 – 255 bar
ABS	When ABS function is normal.	NORMAL
	When ABS function malfunction is detected.	ABNOR
ABS MALF	When ABS function is normal.	NORMAL
	When ABS function malfunction is detected.	ABNOR
EBD	When EBD function is normal.	NORMAL
	When EBD function malfunction is detected.	ABNOR
ACCELE PEDAL MALF	When accelerator pedal is normal.	NORMAL
	When accelerator pedal malfunction is detected.	ABNOR
TCS	When TCS function is normal.	NORMAL
	When TCS function malfunction is detected.	ABNOR
TCS MALF	When TCS function is normal.	NORMAL
	When TCS function malfunction is detected.	ABNOR
VDC	When VDC function is normal.	NORMAL
	When VDC function malfunction is detected.	ABNOR
VDC MALF	When VDC function is normal.	NORMAL
	When VDC function malfunction is detected.	ABNOR
VDC OFF SWITCH	When VDC OFF switch is OFF.	Off
	When VDC OFF switch is ON.	On
PARKING BRAKE	When parking brake is inactive.	Displayed but not used.
	When parking brake is active.	Displayed but not used.
DRV TRQ CTRL MODE	When correction coefficients are initialized.	INITIAL
	When correction is executed.	NORMAL
	When correction is stopped (computing is impossible).	STOP 1
	When correction is stopped (computing is possible).	STOP 2
	When correction is limited.	LIMIT 1
	When correction is prohibited.	PROHIBI
DRV TRQ CTRL PERMIS 1	When correction is permitted (basic requirement).	PERMIS
	When correction is not permitted (basic requirement).	NO PER
DRV TRQ CTRL PERMIS 2	When correction is permitted (system requirement).	PERMIS
	When correction is not permitted (system requirement).	NO PER

CHASSIS CONTROL MODULE

< ECU DIAGNOSIS INFORMATION >

[CHASSIS CONTROL]

Monitor item	Condition	Reference values in normal operation	
DRV TRQ CTRL STOP	When correction is requested to stop.	REQ	A
	When correction is not requested to stop.	NO REQ	
DRV TRQ CTRL PROHIBIT	When prohibition of correction is requested.	REQ	B
	When prohibition of correction is not requested.	NO REQ	
AEB	When Active Engine Brake (corner) function is active.	On	C
	When Active Engine Brake (corner) function is inactive.	Off	
ATC 1	When active trace control function is inactive.	Off	D
	When active trace control function is active.	On	
ATC 2	When active trace control function is inactive.	Off	E
	When active trace control function is active.	On	
ATC 3	When active trace control function is inactive.	Off	F
	When active trace control function is active.	On	
ATC 4	When active trace control function is inactive.	Off	G
	When active trace control function is active.	On	
ATC 5	When active trace control function is inactive.	Off	H
	When active trace control function is active.	On	
BRAKE HOLD	When Hill Start Assist function is inactive.	INACT	I
	When Hill Start Assist function is ready.	ACT	
	When Hill Start Assist function is active.	RELEA	J
FL TIRE DISP	When the front LH tire is not displayed on the information display in the combination meter.	DEF	K
	When the front LH tire is displayed on the information display in the combination meter.	1	L
FR TIRE DISP	When the front RH tire is not displayed on the information display in the combination meter.	DEF	M
	When the front RH tire is displayed on the information display in the combination meter.	1	N
RL TIRE DISP	When the rear LH tire is not displayed on the information display in the combination meter.	DEF	
	When the rear LH tire is displayed on the information display in the combination meter.	1	
RR TIRE DISP	When the rear RH tire is not displayed on the information display in the combination meter.	DEF	
	When the rear RH tire is displayed on the information display in the combination meter.	1	
VEHICLE DISP	When active ride control (brake) effect is not displayed on the information display in the combination meter.	Off	
	When active ride control (brake) effect is displayed on the information display in the combination meter.	On	
INTERRUPT DISP	When interrupt display is not displayed on the information display in the combination meter.	NOREQ	DAS
	When Hill Start Assist function (ready) is displayed on the information display in the combination meter.	HOLD1	P
	When Hill Start Assist function (active) is displayed on the information display in the combination meter.	HOLD2	
	When Hill Descent Control function is displayed on the information display in the combination meter.	HDC	

CHASSIS CONTROL MODULE


< ECU DIAGNOSIS INFORMATION >

[CHASSIS CONTROL]

Monitor item	Condition	Reference values in normal operation
TURN DISP	When the straight-ahead status is displayed on the information display in the combination meter.	N STEER
	When the left turning status is displayed on the information display in the combination meter.	LEFT
	When the right turning status is displayed on the information display in the combination meter.	RIGHT
ALC LEVEL	When Active Lane Control is turned ON.	Displayed but not used.
	When Active Lane Control is operational or is operating.	Displayed but not used.
ALC STATUS	When Active Lane Control is OFF.	Displayed but not used.
	When Active Lane Control is ON.	Displayed but not used.
BRAKE HOLD DISP	When Hill Start Assist function is not displayed on the information display in the combination meter.	INACT
	When Hill Start Assist function (ready) is displayed on the information display in the combination meter.	ACT
	When Hill Start Assist function (active) is displayed on the information display in the combination meter.	RELEA
ATC DISP	When the activation of Active Trace Control is not displayed on the information display on the combination meter.	Off
	When the activation of Active Trace Control is displayed on the information display on the combination meter.	On
ARC BRAKE DISP	When Active Ride Control (Brake) function is not displayed on the information display in the combination meter.	Off
	When Active Ride Control (Brake) function is displayed on the information display in the combination meter.	On
HDC DISP	When Hill Descent Control function is not displayed on the information display in the combination meter.	Off
	When Hill Descent Control function is displayed on the information display in the combination meter.	On

*: Check tire pressure under normal conditions.

TERMINAL LAYOUT

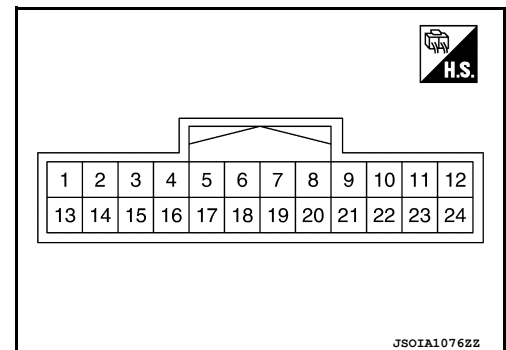

PHYSICAL VALUES

CHASSIS CONTROL MODULE

< ECU DIAGNOSIS INFORMATION >

[CHASSIS CONTROL]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/Output			
3 (P)	Ground	CAN low	—	—	—	—
4 (L)		CAN high	—	—	—	—
10 (SB)		IGN	Input	Ignition switch ON		6.4 – 16 V
12 (B)		Ground	—	Ignition switch ON		0 V

Fail-Safe (Chassis Control Module)

INFOID:000000011277366

When a malfunction occurs in the chassis control module, the master warning lamp turns ON and an interrupt is displayed on the information display of the combination meter.

DTC	Vehicle condition
C1B92-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control • Active Engine Brake
C1B93-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control (engine) • Active Engine Brake
C1B94-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control (engine)
C1B95-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control (brake)
C1B99-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control • Active Engine Brake
C1BA0-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control (brake)
C1BA2-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control (engine)
C1BA5-00	Normal control
C1BAB-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control (engine)
C1BB2-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control • Active Engine Brake
C1BB3-00	
C1BB4-00	
C1BB5-00	
C1BB6-00	Normal control

CHASSIS CONTROL MODULE

< ECU DIAGNOSIS INFORMATION >

[CHASSIS CONTROL]

DTC	Vehicle condition
C1BB7-00	
C1BB8-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control • Active Engine Brake
C1BB9-00	
C1BBA-00	
C1BBB-00	
C1BBC-00	Normal control
C1BBD-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control • Active Engine Brake
C1BC0-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control
C1BC1-00	
C1BC2-00	
C1BC3-00	
C1BC4-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Ride Control (brake)
C1BC5-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control
C1BC6-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control (brake)
U1A34-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control • Active Engine Brake
U1A35-00	
U1A36-00	
U1A39-00	Normal control
U1A3B-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control (brake) • Active Engine Brake
U1A42-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control (engine)
U1A43-00	
U1A48-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Trace Control • Active Ride Control • Active Engine Brake
U1A4A-00	
U1A4B-00	
U1A4E-00	The following functions are suspended: <ul style="list-style-type: none"> • Active Ride Control

DTC Inspection Priority Chart

INFOID:000000011277367

When multiple DTCs are displayed simultaneously, check them one by one according to the following priority list.

CHASSIS CONTROL MODULE

< ECU DIAGNOSIS INFORMATION >

[CHASSIS CONTROL]

Priority	Detected item (DTC)	
1	<ul style="list-style-type: none"> • U1000-00 CAN COMM CIRCUIT 	A
2	<ul style="list-style-type: none"> • U1A34-00 BRAKE CONTROL COMM • U1A35-00 BRAKE CONTROL COMM • U1A36-00 BCM/IPDM COMM • U1A39-00 COMBINATION METER COMM • U1A3B-00 TCM COMM • U1A3F-00 AV COMM • U1A42-00 STEERING ANGLE SENSOR COMM • U1A43-00 STEERING ANGLE SENSOR COMM • U1A48-00 ECM/HPCM COMM • U1A4A-00 CONTROL MODULE (CAN) • U1A4B-00 CONTROL MODULE (CAN) • U1A4E-00 ECM/HPCM COMM 	B C D
3	<ul style="list-style-type: none"> • C1BBD-00 VARIANT CODING 	E
4	<ul style="list-style-type: none"> • C1B92-00 BRAKE CONTROL SYSTEM • C1B93-00 ENGINE/HEV SYSTEM • C1B94-00 TM SYSTEM • C1BA0-00 ADAS/CHASSIS CTRL BRAKE SYS • C1BA2-00 STEERING ANGLE SENSOR • C1BA5-00 ADAS/CHASSIS CTRL ENGINE SYS • C1BAB-00 STOP LAMP SW • C1BC0-00 FR WHEEL SENSOR • C1BC1-00 FL WHEEL SENSOR • C1BC2-00 RR WHEEL SENSOR • C1BC3-00 RL WHEEL SENSOR • C1BC4-00 DECEL G SENSOR • C1BC5-00 SIDE G SENSOR • C1BC6-00 PRESSURE SENSOR 	F G H
5	<ul style="list-style-type: none"> • C1BB5-00 IGN POWER SUPPLY • C1BB6-00 IGN POWER SUPPLY 	I
6	<ul style="list-style-type: none"> • C1B95-00 CONTROL MODULE • C1B99-00 CONTROL MODULE • C1BB2-00 CONTROL MODULE • C1BB3-00 CONTROL MODULE • C1BB4-00 CONTROL MODULE • C1BB7-00 CONTROL MODULE • C1BB8-00 CONTROL MODULE • C1BB9-00 CONTROL MODULE • C1BBA-00 CONTROL MODULE • C1BBB-00 CONTROL MODULE • C1BBC-00 CONTROL MODULE 	J K L

DTC Index

INFOID:0000000011277368

DTC	Display item	Refer to
C1B92-00	BRAKE CONTROL SYSTEM	DAS-217, "DTC Description"
C1B93-00	ENGINE/HEV SYSTEM	DAS-219, "DTC Description"
C1B94-00	TM SYSTEM	DAS-221, "DTC Description"
C1B95-00	CONTROL MODULE	DAS-223, "DTC Description"
C1B99-00	CONTROL NODULE	DAS-224, "DTC Description"
C1BA0-00	ADAS/CHASSIS CTRL BRAKE SYS	DAS-225, "DTC Description"
C1BA2-00	STEERING ANGLE SENSOR	DAS-227, "DTC Description"
C1BA5-00	ADAS/CHASSIS CTRL ENGINE SYS	DAS-229, "DTC Description"
C1BAB-00	STOP LAMP SW	DAS-230, "DTC Description"
C1BB2-00	CONTROL MODULE	DAS-232, "DTC Description"

CHASSIS CONTROL MODULE

< ECU DIAGNOSIS INFORMATION >

[CHASSIS CONTROL]

DTC	Display item	Refer to
C1BB3-00	CONTROL MODULE	DAS-233, "DTC Description"
C1BB4-00	CONTROL MODULE	DAS-234, "DTC Description"
C1BB5-00	IGN POWER SUPPLY	DAS-235, "DTC Description"
C1BB6-00	IGN POWER SUPPLY	DAS-237, "DTC Description"
C1BB7-00	CONTROL MODULE	DAS-239, "DTC Description"
C1BB8-00	CONTROL MODULE	DAS-240, "DTC Description"
C1BB9-00	CONTROL MODULE	DAS-241, "DTC Description"
C1BBA-00	CONTROL MODULE	DAS-242, "DTC Description"
C1BBB-00	CONTROL MODULE	DAS-243, "DTC Description"
C1BBC-00	CONTROL MODULE	DAS-244, "DTC Description"
C1BBD-00	VARIANT CODING	DAS-245, "DTC Description"
C1BC0-00	FR WHEEL SENSOR	DAS-246, "DTC Description"
C1BC1-00	FL WHEEL SENSOR	DAS-248, "DTC Description"
C1BC2-00	RR WHEEL SENSOR	DAS-250, "DTC Description"
C1BC3-00	RL WHEEL SENSOR	DAS-252, "DTC Description"
C1BC4-00	DECEL G SENSOR	DAS-254, "DTC Description"
C1BC5-00	SIDE G SENSOR	DAS-256, "DTC Description"
C1BC6-00	PRESSURE SENSOR	DAS-258, "DTC Description"
U1000-00	CAN COMMUNICATION	DAS-261, "DTC Description"
U1A34-00	BRAKE CONTROL COMM	DAS-261, "DTC Description"
U1A35-00	BRAKE CONTROL COMM	DAS-263, "DTC Description"
U1A36-00	BCM/IPDM COMM	DAS-265, "DTC Description"
U1A39-00	COMBINATION METER COMM	DAS-267, "DTC Description"
U1A3B-00	TCM COMM	DAS-269, "DTC Description"
U1A42-00	STEERING ANGLE SENSOR COMM	DAS-271, "DTC Description"
U1A43-00	STEERING ANGLE SENSOR COMM	DAS-273, "DTC Description"
U1A48-00	ECM/HPCM COMM	DAS-275, "DTC Description"
U1A4A-00	CONTROL MODULE (CAN)	DAS-277, "DTC Description"
U1A4B-00	CONTROL MODULE (CAN)	DAS-278, "DTC Description"
U1A4E-00	ECM/HPCM COMM	DAS-279, "DTC Description"


< WIRING DIAGRAM >

WIRING DIAGRAM

CHASSIS CONTROL

Wiring Diagram

INFOID:0000000011277369

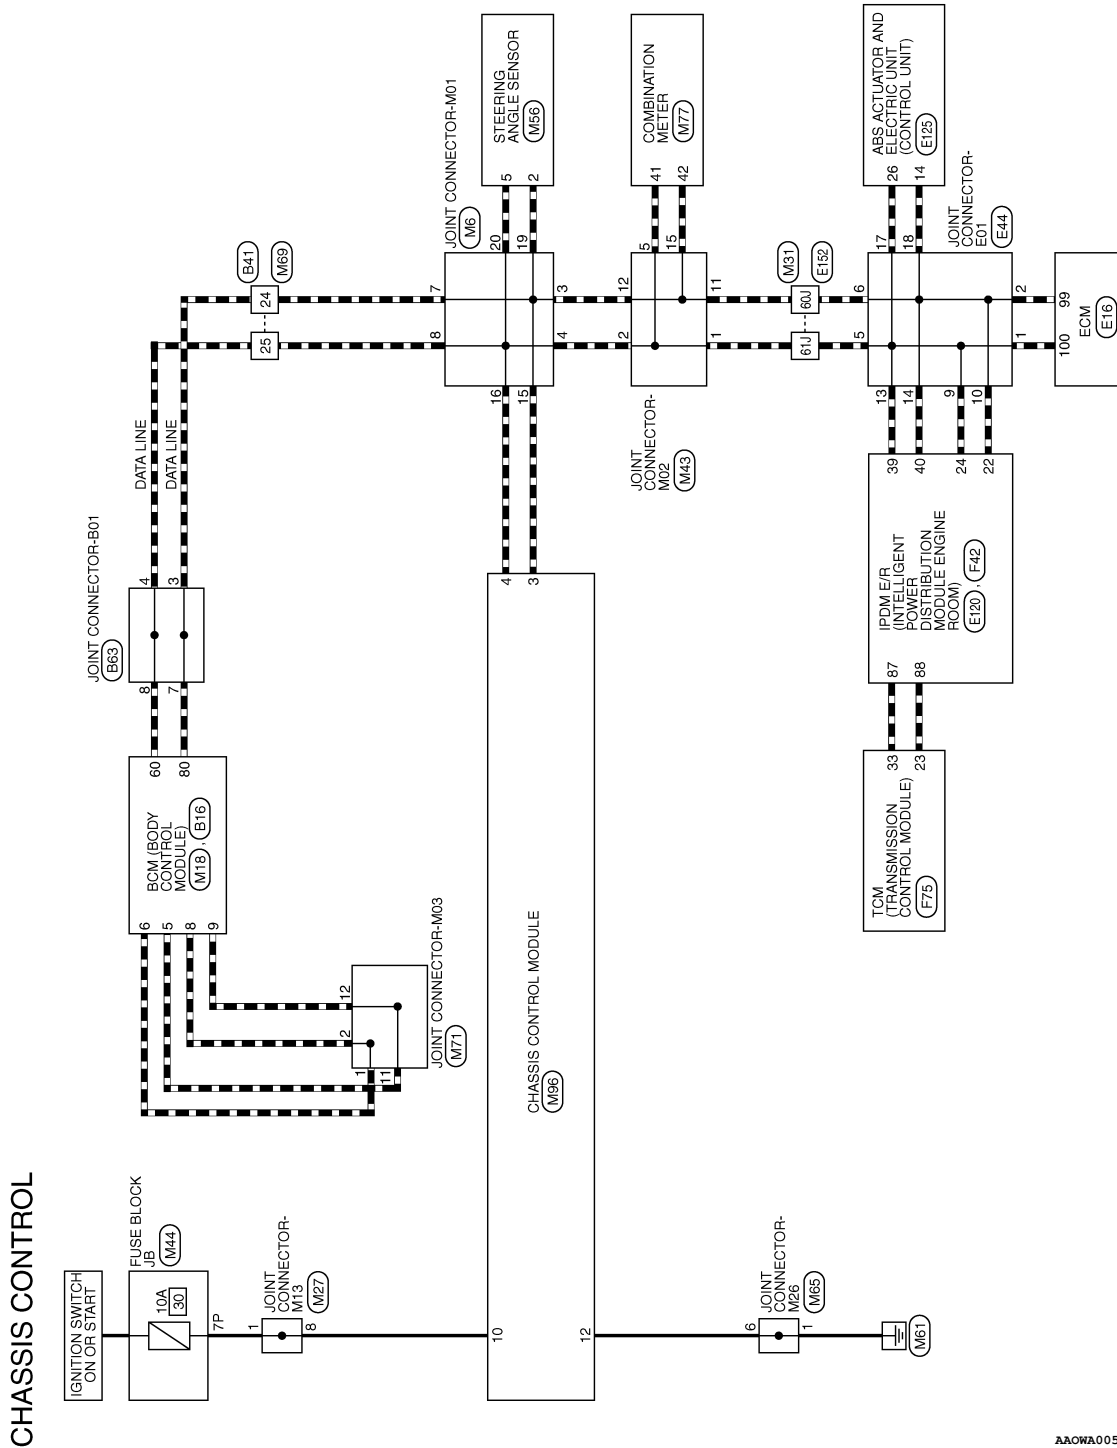

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS


CHASSIS CONTROL

< WIRING DIAGRAM >

[CHASSIS CONTROL]

CHASSIS CONTROL CONNECTORS


Connector No.	M6
Connector Name	JOINT CONNECTOR-M01
Connector Color	GRAY

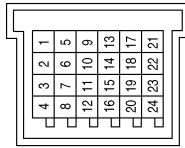

Terminal No.	Color of Wire	Signal Name
3	P	-
4	L	-
7	P	-
8	L	-




Connector No.	M27
Connector Name	JOINT CONNECTOR-M13
Connector Color	WHITE

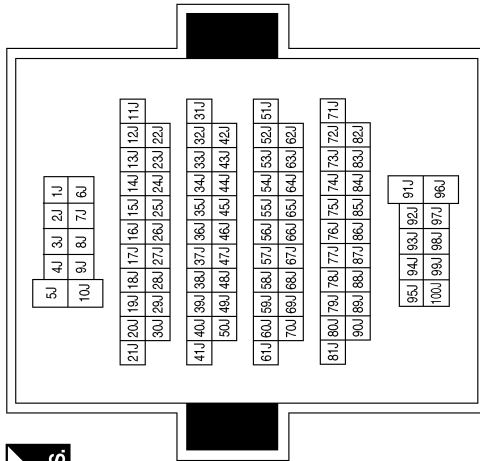

Terminal No.	Color of Wire	Signal Name
1	SB	-
8	SB	-

Terminal No.	Color of Wire	Signal Name
15	P	-
16	L	-
19	P	-
20	L	-



Terminal No.	Color of Wire	Signal Name
5	R	CAN-L
6	L	CAN-H
8	L	CAN-H
9	R	CAN-L

Terminal No.	Color of Wire	Signal Name
60J	P	-
61J	L	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE


AA0IA0207GB

CHASSIS CONTROL

< WIRING DIAGRAM >

[CHASSIS CONTROL]

Connector No.	M56
Connector Name	STEERING ANGLE SENSOR
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
2	P	-
5	L	-

Connector No.	M44
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
7P	Y	-

Connector No.	M43
Connector Name	JOINT CONNECTOR-M02
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-
5	L	-
11	P	-
12	P	-
15	P	-

Connector No.	M71
Connector Name	JOINT CONNECTOR-M03
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-
11	R	-
12	R	-

Connector No.	M69
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
24	P	-
25	L	-

Connector No.	M65
Connector Name	JOINT CONNECTOR-M26
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B	-
6	B	-

AA0IA0208GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P




CHASSIS CONTROL

< WIRING DIAGRAM >


[CHASSIS CONTROL]

Connector No.	E16
Connector Name	ECM
Connector Color	BLACK

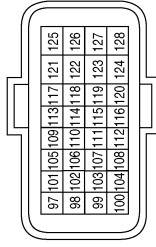


Terminal No.	Color of Wire	Signal Name
99	P	CAN-L
100	L	CAN-H

Connector No.	M96
Connector Name	CHASSIS CONTROL MODULE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
3	P	CAN-L
4	L	CAN-H
10	SB	IGN
12	B	GND

Connector No.	M77
Connector Name	COMBINATION METER
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
41	L	CAN-H
42	P	CAN-L


Connector No.	E120
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
22	P	CAN-L
24	L	CAN-H
39	L	CAN-H
40	P	CAN-L

Terminal No.	Color of Wire	Signal Name
1	L	-
2	P	-
5	L	-
6	P	-
9	L	-
10	P	-
13	L	-
14	P	-
17	L	-
18	P	-

Connector No.	E44
Connector Name	JOINT CONNECTOR-E01
Connector Color	WHITE

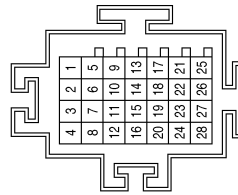

AA0IA0209GB


CHASSIS CONTROL

< WIRING DIAGRAM >


[CHASSIS CONTROL]

Terminal No.	Color of Wire	Signal Name
60J	P	-
61J	L	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

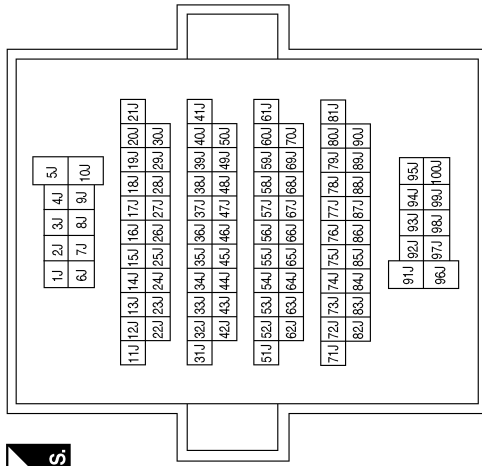

Connector No.	E125
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Color	BLACK

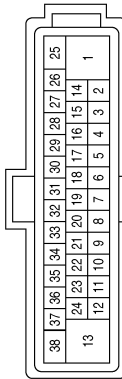


Terminal No.	Color of Wire	Signal Name
14	P	CAN-L
26	L	CAN-H

Connector No.	B16
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN



Terminal No.	Color of Wire	Signal Name
60	L	CAN-H
80	P	CAN-L

Connector No.	F75
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Color	BLACK

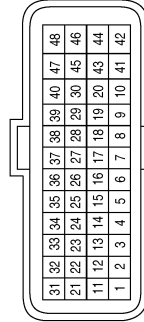

Terminal No.	Color of Wire	Signal Name
23	P	CAN-L
33	L	CAN-H

Connector No.	F42
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
87	L	CAN-H
88	P	CAN-L

AAOIA02106B

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P


DAS

CHASSIS CONTROL

< WIRING DIAGRAM >


[CHASSIS CONTROL]

Connector No.	B63
Connector Name	JOINT CONNECTOR-B01
Connector Color	GRAY

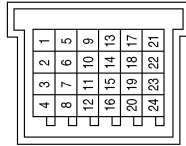

Terminal No.	Color of Wire	Signal Name
3	P	-
4	L	-
7	P	-
8	L	-

Connector No.	B41
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
24	P	-
25	L	-

AAOIA0211GB

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:0000000011277370

DETAILED FLOW

1. INTERVIEW FROM THE CUSTOMER

Clarify customer complaints before inspection. First of all, perform an interview utilizing [DAS-212. "Diagnostic Work Sheet"](#) and reproduce the symptom as well as fully understand it. Ask customer about his/her complaints carefully. Check symptoms by driving vehicle with customer, if necessary.

CAUTION:

Customers are not professional. Never guess easily like "maybe the customer means that..." or "maybe the customer mentions this symptom".

>> GO TO 2.

2. CHECK SYMPTOM

Reproduce the symptom that is indicated by the customer, based on the information from the customer obtained by the interview. Also check that the symptom is not caused by fail-safe mode. Refer to [DAS-201. "Fail-Safe \(Chassis Control Module\)"](#).

CAUTION:

When the symptom is caused by normal operation, fully inspect each portion and obtain the understanding of customer that the symptom is not caused by a malfunction.

>> GO TO 3.

3. PERFORM SELF-DIAGNOSIS

Ⓜ With CONSULT

1. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC detected?

YES >> Record or print "Self Diagnostic Result" and freeze frame data (FFD). GO TO 4.

NO >> Inspection End.

4. RECHECK THE SYMPTOM

Ⓜ With CONSULT

Perform DTC confirmation procedures for the malfunctioning system.

NOTE:

If some DTCs are detected at the same time, determine the order for performing the diagnosis based on [DAS-202. "DTC Inspection Priority Chart"](#).

Is DTC detected?

YES >> GO TO 5.

NO >> Check harness and connectors based on the information obtained by the interview. Refer to [DAS-181. "Precautions for Harness Repair"](#).

5. REPAIR OR REPLACE MALFUNCTIONING PARTS

1. Repair or replace malfunctioning parts.
2. Reconnect part or connector after repairing or replacing.
3. When DTC is detected, erase "Self Diagnostic Result" of "CHASSIS CONTROL".

>> GO TO 6.

6. FINAL CHECK

Ⓜ With CONSULT

1. Check the reference value of "CHASSIS CONTROL".
2. Recheck the symptom and check that the symptom is not reproduced on the same conditions.

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[CHASSIS CONTROL]

Is the symptom reproduced?

- YES >> GO TO 3.
- NO >> Inspection End.

Diagnostic Work Sheet

INFOID:00000001127371

Description

- In general, customers have their own criteria for a symptom. Therefore, it is important to understand the symptom and status well enough by interviewing the customer about the symptom carefully. To systemize all the information for the diagnosis, prepare the interview sheet referring to the interview points.
- In some cases, multiple conditions that appear simultaneously may cause a DTC to be detected.

INTERVIEW SHEET SAMPLE

Interview sheet					
Customer name	MR/MS	Registration number		Initial year registration	
		Vehicle type		VIN	
Storage date		Engine, Traction motor		Mileage	km (Mile)
Symptom	<input type="checkbox"/> Does not operate () function				
	<input type="checkbox"/> Warning lamp for () turns ON.				
	<input type="checkbox"/> Noise <input type="checkbox"/> Vibration				
	<input type="checkbox"/> Other ()				
First occurrence	<input type="checkbox"/> Recently <input type="checkbox"/> Other ()				
Frequency of occurrence	<input type="checkbox"/> Always <input type="checkbox"/> Under a certain conditions of <input type="checkbox"/> Sometimes (time(s)/day)				
Climate conditions	<input type="checkbox"/> Irrelevant				
	Weather	<input type="checkbox"/> Fine <input type="checkbox"/> Cloud <input type="checkbox"/> Rain <input type="checkbox"/> Snow <input type="checkbox"/> Others ()			
	Temperature	<input type="checkbox"/> Hot <input type="checkbox"/> Warm <input type="checkbox"/> Cool <input type="checkbox"/> Cold <input type="checkbox"/> Temperature [Approx. °C (°F)]			
	Relative humidity	<input type="checkbox"/> High <input type="checkbox"/> Moderate <input type="checkbox"/> Low			
Road conditions	<input type="checkbox"/> Urban area <input type="checkbox"/> Suburb area <input type="checkbox"/> Highway <input type="checkbox"/> Mountainous road (uphill or downhill) <input type="checkbox"/> Rough road				
Operating condition, etc.	<input type="checkbox"/> Irrelevant <input type="checkbox"/> When traction motor starts <input type="checkbox"/> During idling <input type="checkbox"/> During driving <input type="checkbox"/> During acceleration <input type="checkbox"/> At constant speed driving <input type="checkbox"/> During deceleration <input type="checkbox"/> During cornering (right curve or left curve) <input type="checkbox"/> When steering wheel is steered (to right or to left)				
Other conditions					

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[CHASSIS CONTROL]

Interview sheet

Customer name	MR/MS	Registration number		Initial year registration	
		Vehicle type		VIN	
Storage date		Engine, Traction motor		Mileage	km (Mile)

Vehicle equipment

Memo

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

ADDITIONAL SERVICE WHEN REPLACING CHASSIS CONTROL MODULE

< BASIC INSPECTION >

[CHASSIS CONTROL]

ADDITIONAL SERVICE WHEN REPLACING CHASSIS CONTROL MODULE

Description

INFOID:000000011277372

When replaced the chassis control module, configuration of the chassis control module is required. Refer to [DAS-215. "Work Procedure"](#).

CONFIGURATION (CHASSIS CONTROL MODULE)

< BASIC INSPECTION >

[CHASSIS CONTROL]

CONFIGURATION (CHASSIS CONTROL MODULE)

Work Procedure

INFOID:000000011277373

CAUTION:

- Use “Manual Configuration” only when “TYPE ID” of the chassis control module cannot be read.
- After configuration, turn the ignition switch from OFF to ON and check that the chassis control warning to information display of combination meter displays OFF after staying illuminated for approximately two seconds.
- If an error occurs during configuration, start over from the beginning.

1. CHECKING TYPE ID (1)

Use FAST (service parts catalogue) to search the chassis control module of the applicable vehicle and find “Type ID”.

Is “Type ID” displayed?

YES >> Print out “Type ID” and GO TO 2.

NO >> “Configuration” is not required for the chassis control module. Replace in the usual manner. Refer to [DAS-286, "Removal and Installation"](#).

2. CHECKING TYPE ID (2)

ⓂCONSULT Configuration

1. Select “Before Replace ECU” of “Read/Write Configuration”.
2. Check that “Type ID” is displayed on the CONSULT screen.

Is “Type ID” displayed?

YES >> GO TO 3.

NO >> GO TO 7.

3. VERIFYING TYPE ID (1)

ⓂCONSULT Configuration

Compare a “Type ID” displayed on the CONSULT screen with the one searched by using FAST (service parts catalogue) to check that these “Type ID” agree with each other.

NOTE:

For the “Type ID” searched by using FAST (service parts catalog), use the last five digits of the “Type ID”.

>> GO TO 4.

4. SAVING TYPE ID

ⓂCONSULT Configuration

Save “Type ID” on CONSULT.

>> GO TO 5.

5. REPLACING CHASSIS CONTROL MODULE (1)

Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).

>> GO TO 6.

6. WRITING (AUTOMATIC WRITING)

ⓂCONSULT Configuration

1. Select “After Replace ECU” of “Re/programming, Configuration” or that of “Read / Write Configuration”.
2. Select the “Type ID” agreeing with the one stored on CONSULT and the one searched by using FAST (service parts catalogue) to write the “Type ID” into the chassis control module.

NOTE:

For the “Type ID” searched by using FAST (service parts catalog), use the last five digits of the “Type ID”.

>> GO TO 9.

7. REPLACING CHASSIS CONTROL MODULE (2)

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

CONFIGURATION (CHASSIS CONTROL MODULE)

< BASIC INSPECTION >

[CHASSIS CONTROL]

Replace the chassis control module. Refer to [DAS-286. "Removal and Installation"](#).

>> GO TO 8.

8. WRITING (MANUAL WRITING)

Ⓜ CONSULT Configuration

1. Select "Manual Configuration".
2. Select the "Type ID" searched by using FAST (service parts catalogue) to write the "Type ID" into the chassis control module.

NOTE:

For the "Type ID" searched by using FAST (service parts catalog), use the last five digits of the "Type ID".

>> GO TO 9.

9. VERIFYING TYPE ID (2)

Compare "Type ID" written into the chassis control module with the one searched by using FAST (service parts catalogue) to check that these "Type ID" agree with each other.

NOTE:

For the "Type ID" searched by using FAST (service parts catalog), use the last five digits of the "Type ID".

>> GO TO 10.

10. CHECKING CHASSIS CONTROL WARNING

1. Turn the ignition switch OFF.
2. Turn the ignition switch ON and check that the chassis control warning to information display of combination meter displays OFF after staying illuminated for approximately two seconds.

CAUTION:

Never start the engine.

Is the inspection result normal?

YES >> GO TO 11.

NO >> Perform the "Self Diagnostic Result" of "CHASSIS CONTROL". Refer to [DAS-192. "CONSULT Function"](#).

11. PERFORMING SUPPLEMENTARY WORK

1. Perform "Self Diagnostic Result" of all systems.
2. Erase "Self Diagnostic Result".

>> End of work.

C1B92-00 BRAKE CONTROL SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

DTC/CIRCUIT DIAGNOSIS

C1B92-00 BRAKE CONTROL SYSTEM

DTC Description

INFOID:0000000011277374

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1B92-00	BRAKE CONTROL SYSTEM (Brake control system)	When a malfunction is detected in ABS actuator and electric unit (control unit) system.

POSSIBLE CAUSE

- ABS actuator and electric unit (control unit) system
- Chassis control module

FAIL-SAFE

The following functions are suspended:

- Active Ride Control function
- Active Trace Control function
- Active Engine Brake function

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

 With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1B92-01" detected?

YES >> Proceed to [DAS-217, "Diagnosis Procedure"](#).

NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:0000000011277375

1. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

 With CONSULT


Perform "Self Diagnostic Result" of "ABS".

Is DTC detected?

YES >> Check the DTC. Refer to [BRC-53, "DTC Index"](#).

NO >> GO TO 2.

2. PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
2. Turn the ignition switch OFF and wait for 10 seconds or more.
3. Turn the ignition switch ON.
4. Perform "All DTC Reading".

Is DTC "C1B92", "U1000" or other DTC detected?

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

C1B92-00 BRAKE CONTROL SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

YES ("C1B92-00")>>Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).

YES ("U1000-00")>>Refer to [DAS-260, "Diagnosis Procedure"](#).

YES (other DTC)>>Check the DTC.

NO >> Inspection End.

C1B93-00 ENGINE/HEV SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

C1B93-00 ENGINE/HEV SYSTEM

DTC Description

INFOID:000000011277376

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1B93-00	ENGINE/HEV SYSTEM (Engine/HEV system)	When a malfunction is detected in ECM system.

POSSIBLE CAUSE

- Engine system
- ECM
- Chassis control module

FAIL-SAFE

The following functions are suspended:

- Active Ride Control (engine) function
- Active Trace Control function
- Active Engine Brake function


DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

 With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1B93-00" detected?

YES >> Proceed to [DAS-219. "Diagnosis Procedure"](#).

NO-1 >> To check malfunction symptom before repair: Refer to [GI-44. "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:000000011277377

1. CHECK ECM SYSTEM

 With CONSULT

Perform "Self Diagnostic Result" of "ENGINE".

Is DTC detected?

YES >> Check the DTC. Refer to [EC-96. "DTC Index"](#).

NO >> GO TO 2.

2. PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
2. Turn the ignition switch OFF and wait for 10 seconds or more.
3. Turn the ignition switch ON.
4. Perform "All DTC Reading".

Is DTC "C1B93", "U1000" or other DTC detected?

YES ("C1B93-00")>>Replace the chassis control module. Refer to [DAS-286. "Removal and Installation"](#).

C1B93-00 ENGINE/HEV SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

YES ("U1000-00")>>Refer to [DAS-260. "Diagnosis Procedure"](#).

YES (other DTC)>>Check the DTC.

NO >> Inspection End.

C1B94-00 TRANSMISSION SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

C1B94-00 TRANSMISSION SYSTEM

DTC Description

INFOID:000000011277378

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1B94-00	TM SYSTEM (Transmission system)	When a malfunction is detected in transmission system.

POSSIBLE CAUSE

- Transmission system
- TCM
- Chassis control module

FAIL-SAFE

The following functions are suspended:

- Active Ride Control (engine) function
- Active Trace Control function

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

 With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1B94-00" detected?

YES >> Proceed to [DAS-221, "Diagnosis Procedure"](#).

NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:000000011277379

1. CHECK TRANSMISSION SYSTEM

 With CONSULT

Perform "Self Diagnostic Result" of "TRANSMISSION".

Is DTC detected?

YES >> Check the DTC. Refer to [TM-63, "DTC Index"](#).

NO >> GO TO 2.

2. PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
2. Turn the ignition switch OFF and wait for 10 seconds or more.
3. Turn the ignition switch ON.
4. Perform "All DTC Reading".

Is DTC "C1B94-00", "U1000-00" or other DTC detected?

YES ("C1B94-00")>>Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).

YES ("U1000-00")>>Refer to [DAS-260, "Diagnosis Procedure"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

C1B94-00 TRANSMISSION SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

YES (other DTC)>>Check the DTC.

NO >> Inspection End.

C1B95-00 CONTROL MODULE

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

C1B95-00 CONTROL MODULE

DTC Description

INFOID:000000011277380

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1B95-00	CONTROL MODULE (Control module)	When a malfunction is detected in chassis control module.

POSSIBLE CAUSE

- Chassis control module

FAIL-SAFE

The following functions are suspended:

- Active Trace Control function
- Active Ride Control (brake) function

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

 With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1B95-00" detected?

YES >> Proceed to [DAS-223, "Diagnosis Procedure"](#).

NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:000000011277381

1. PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
2. Turn the ignition switch OFF and wait for 10 seconds or more.
3. Turn the ignition switch ON.
4. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1B95" detected?

YES >> Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).

NO >> Inspection End.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

C1B99-00 CONTROL MODULE

DTC Description

INFOID:000000011277382

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1B99-00	CONTROL MODULE (Control module)	When a malfunction is detected in chassis control module.

POSSIBLE CAUSE

- Chassis control module

FAIL-SAFE

The following functions are suspended:

- Active Ride Control function
- Active Trace Control function
- Active Engine Brake function

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1B99-00" detected?

- YES >> Proceed to [DAS-224, "Diagnosis Procedure"](#).
- NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).
- NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:000000011277383

1. PERFORM SELF-DIAGNOSIS

With CONSULT

1. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
2. Turn the ignition switch OFF and wait for 10 seconds or more.
3. Turn the ignition switch ON.
4. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1B99" detected?

- YES >> Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).
- NO >> Inspection End.

C1BA0-00 ADAS/CHASSIS CONTROL BRAKE SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

C1BA0-00 ADAS/CHASSIS CONTROL BRAKE SYSTEM

DTC Description

INFOID:000000011277384

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1BA0-00	ADAS/CHASSIS CTRL BRAKE SYS (ADAS/Chassis Control brake system)	<ul style="list-style-type: none">When receiving from ABS actuator and electric unit (control unit) that the value of the brake system signal transmitted from the chassis control module to ABS actuator and electric unit (control unit) is malfunctioning.

POSSIBLE CAUSE

- ABS actuator and electric unit (control unit)
- Chassis control module

FAIL-SAFE

The following functions are suspended:

- Active Trace Control function
- Active Ride Control (brake) function

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

 With CONSULT

- Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

- Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1BA0-00" and/or "C1BA7-00" detected?

YES ("C1BA0-00")>>Proceed to [DAS-225, "Diagnosis Procedure"](#).

YES ("C1BA0-00" and "C1BA7-00")>>Perform "Self Diagnostic Result" of "ICC/ADAS".

NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:000000011277385

1. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SYSTEM

 With CONSULT

Perform "Self Diagnostic Result" of "ABS".

Is DTC detected?

YES >> Check the DTC. Refer to [BRC-53, "DTC Index"](#).

NO >> GO TO 2.

2. PERFORM SELF-DIAGNOSIS

 With CONSULT

- Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
- Turn the ignition switch OFF and wait for 10 seconds or more.
- Turn the ignition switch ON.
- Perform "All DTC Reading".

Is DTC "C1BA0-00", "U1000-00" or other DTC detected?

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

C1BA0-00 ADAS/CHASSIS CONTROL BRAKE SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

YES ("C1BA0-00")>>Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).

YES ("U1000-00")>>Refer to [DAS-260, "Diagnosis Procedure"](#).

YES (other DTC)>>Check the DTC.

NO >> Inspection End.

C1BA2-00 STEERING ANGLE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

C1BA2-00 STEERING ANGLE SENSOR

DTC Description

INFOID:0000000011277386

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1BA2-00	STEERING ANGLE SENSOR (Steering angle sensor)	When a malfunction is detected in steering angle sensor system.

POSSIBLE CAUSE

- Steering angle sensor
- Chassis control module

FAIL-SAFE

The following functions are suspended:

- Active Ride Control (engine) function
- Active Trace Control function

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

④ With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1BA2-00" detected?

YES >> Proceed to [DAS-227, "Diagnosis Procedure"](#).

NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:0000000011277387

1. CHECK STEERING ANGLE SENSOR SYSTEM

④ With CONSULT

Perform "Self Diagnostic Result" of "ABS".

Is DTC detected?

YES >> Check the DTC. Refer to [BRC-53, "DTC Index"](#).

NO >> GO TO 2.

2. PERFORM SELF-DIAGNOSIS

④ With CONSULT

1. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
2. Turn the ignition switch OFF and wait for 10 seconds or more.
3. Turn the ignition switch ON.
4. Perform "All DTC Reading".

Is DTC "C1BA2-00", "U1000-00" or other DTC detected?

YES ("C1BA2-00")>>Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).

YES ("U1000-00")>>Refer to [DAS-260, "Diagnosis Procedure"](#).

YES (other DTC)>>Check the DTC.

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

C1BA2-00 STEERING ANGLE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

NO >> Inspection End.

C1BA5-00 ADAS/CHASSIS CONTROL ENGINE SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

C1BA5-00 ADAS/CHASSIS CONTROL ENGINE SYSTEM

DTC Description

INFOID:000000011277388

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1BA5-00	ADAS/CHASSIS CTRL ENGINE SYS (ADAS/Chassis control engine system)	• When receiving from ECM that the value of the engine system signal transmitted from the chassis control module to ECM is malfunctioning.

POSSIBLE CAUSE

- Chassis Control Module

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

④ With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1BA5-00" detected?

- YES >> Proceed to [DAS-229, "Diagnosis Procedure"](#).
- NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).
- NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:000000011277389

1. CHECK ADAS CONTROL UNIT SYSTEM

④ With CONSULT

Perform "Self Diagnostic Result" of "ECM".

Is DTC detected?

- YES >> Check the DTC. Refer to [EC-96, "DTC Index"](#).
- NO >> GO TO 2.

2. PERFORM SELF-DIAGNOSIS

④ With CONSULT

1. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
2. Turn the ignition switch OFF and wait for 10 seconds or more.
3. Turn the ignition switch ON.
4. Perform "All DTC Reading".

Is DTC "C1BA5-00", "U1000-00" or other DTC detected?

- YES ("C1BA5-00")>>Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).
- YES ("U1000-00")>>Refer to [DAS-260, "Diagnosis Procedure"](#).
- YES (other DTC)>>Check the DTC.
- NO >> Inspection End.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

C1BAB-00 STOP LAMP SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

C1BAB-00 STOP LAMP SWITCH

DTC Description

INFOID:000000011277390

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1BAB-00	STOP LAMP SW (Stop lamp switch)	When a malfunction is detected in stop lamp switch system.

POSSIBLE CAUSE

- Stop lamp switch
- BCM
- Chassis Control Module

FAIL-SAFE

The following functions are suspended:

- Active Ride Control (engine) function
- Active Trace Control function

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

 With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1BAB-00" detected?

YES >> Proceed to [DAS-230, "Diagnosis Procedure"](#).

NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:000000011277391

1. CHECK STOP LAMP SWITCH SYSTEM

 With CONSULT

Perform "Self Diagnostic Result" of "BCM".

Is DTC detected?

YES >> Check the DTC. Refer to [BCS-47, "DTC Index"](#) (with Intelligent Key) or [BCS-108, "DTC Index"](#) (without Intelligent Key).

NO >> GO TO 2.

2. PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
2. Turn the ignition switch OFF and wait for 10 seconds or more.
3. Turn the ignition switch ON.
4. Perform "All DTC Reading".

Is DTC "C1BAB", "U1000-00" or other DTC detected?

YES ("C1BAB-00")>>Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).

C1BAB-00 STOP LAMP SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

YES ("U1000-00")>>Refer to [DAS-260, "Diagnosis Procedure"](#).

YES (other DTC)>>Check the DTC.

NO >> Inspection End.

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

C1BB2-00 CONTROL MODULE

DTC Description

INFOID:000000011277392

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1BB2-00	CONTROL MODULE (Control module)	When a malfunction is detected in chassis control module.

POSSIBLE CAUSE

- Chassis control module

FAIL-SAFE

The following functions are suspended:

- Active Trace Control function
- Active Ride Control function
- Active Engine Brake function

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1BB2-00" detected?

YES >> Proceed to [DAS-232, "Diagnosis Procedure"](#).

NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:000000011277393

1. PERFORM SELF-DIAGNOSIS

With CONSULT

1. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
2. Turn the ignition switch OFF and wait for 10 seconds or more.
3. Turn the ignition switch ON.
4. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1BB2-00" detected?

YES >> Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).

NO >> Inspection End.

C1BB3-00 CONTROL MODULE

DTC Description

INFOID:000000011277394

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1BB3-00	CONTROL MODULE (Control module)	When a malfunction is detected in chassis control module.

POSSIBLE CAUSE

- Chassis control module

FAIL-SAFE

The following functions are suspended:

- Active Trace Control function
- Active Ride Control function
- Active Engine Brake function

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

 With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1BB3-00" detected?

YES >> Proceed to [DAS-233, "Diagnosis Procedure"](#).

NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:000000011277395

1. PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
2. Turn the ignition switch OFF and wait for 10 seconds or more.
3. Turn the ignition switch ON.
4. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1BB3-00" detected?

YES >> Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).

NO >> Inspection End.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

C1BB4-00 CONTROL MODULE

DTC Description

INFOID:000000011277396

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1BB4-00	CONTROL MODULE (Control module)	When a malfunction is detected in chassis control module.

POSSIBLE CAUSE

- Chassis control module

FAIL-SAFE

The following functions are suspended:

- Active Trace Control function
- Active Ride Control function
- Active Engine Brake function

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If “DTC CONFIRMATION PROCEDURE” has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform “Self Diagnostic Result” of “CHASSIS CONTROL”.

Is DTC “C1BB4-00” detected?

YES >> Proceed to [DAS-234, "Diagnosis Procedure"](#).

NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:000000011277397

1. PERFORM SELF-DIAGNOSIS

With CONSULT

1. Erase “Self Diagnostic Result” of “CHASSIS CONTROL”.
2. Turn the ignition switch OFF and wait for 10 seconds or more.
3. Turn the ignition switch ON.
4. Perform “Self Diagnostic Result” of “CHASSIS CONTROL”.

Is DTC “C1BB4-00” detected?

YES >> Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).

NO >> Inspection End.

C1BB5-00 IGNITION POWER SUPPLY

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

C1BB5-00 IGNITION POWER SUPPLY

DTC Description

INFOID:000000011277398

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1BB5-00	IGN POWER SUPPLY (Ignition power supply)	Ignition power supply voltage of chassis control module is as shown below. • Ignition power supply voltage: $6.4\text{ V} \geq$ Ignition power supply voltage.

POSSIBLE CAUSE

- Harness or connector
- Fuse
- Ignition power supply system
- Battery
- Chassis control module

FAIL-SAFE

The following functions are suspended:

- Active Trace Control function
- Active Ride Control function
- Active Engine Brake function

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

Ⓜ With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1BB5-00" detected?

YES >> Proceed to [DAS-235, "Diagnosis Procedure"](#).

NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:000000011277399

Regarding Wiring Diagram information, refer to [DAS-205, "Wiring Diagram"](#).

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect chassis control module harness connector M96.
3. Check the connector for disconnection or looseness.
4. Check the pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace error-detected parts, securely lock the harness connector, and GO TO 2.

2. PERFORM SELF-DIAGNOSIS (1)

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

C1BB5-00 IGNITION POWER SUPPLY

[CHASSIS CONTROL]

< DTC/CIRCUIT DIAGNOSIS >

1. Connect chassis control module harness connector M96.
2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1BB5-00" detected?

- YES >> GO TO 3.
NO >> Inspection End.

3.CHECK FUSE

Check that the following fuse is not blown.

Terminal No.	Signal name	Fuse No.
7P	Ignition power supply	30 (10A)

Is the fuse blown?

- YES >> Replace the blown fuse after repairing the affected circuit.
NO >> GO TO 2.

4.CHECK POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect chassis control module harness connector M96.
3. Check the voltage between chassis control module harness connector M96 terminal 10 and ground.

Chassis control module		—	Voltage
Connector	Terminal		
M96	10	Ground	Approx. 0 V

4. Turn the ignition switch ON

CAUTION:

Never start the engine.

5. Check the voltage between chassis control module harness connector M96 terminal 10 and ground.

Chassis control module		—	Voltage
Connector	Terminal		
M96	10	Ground	6.4 – 16 V

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace harness or connector

5.CHECK CHASSIS CONTROL MODULE GROUND CIRCUIT

Check the continuity between chassis control module harness connector M96 terminal 12 and ground.

Chassis control module		—	Continuity
Connector	Terminal		
M96	12	Ground	Yes

Is the inspection result normal?

- YES >> Inspection End.
NO >> Repair or replace harness or connector.

C1BB6-00 IGNITION POWER SUPPLY

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

C1BB6-00 IGNITION POWER SUPPLY

DTC Description

INFOID:0000000011277400

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1BB6-00	IGNITION POWER SUPPLY (ignition power supply)	Ignition power supply voltage of chassis control module is as shown below. • Ignition power supply voltage: $16\text{ V} \leq \text{Ignition power supply voltage}$

POSSIBLE CAUSE

- Harness or connector
- Fuse
- Ignition power supply system
- Battery
- Chassis control module

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

Ⓜ With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1BB6-00" detected?

YES >> Proceed to [DAS-237, "Diagnosis Procedure"](#).

NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:0000000011277401

Regarding Wiring Diagram information, refer to [DAS-205, "Wiring Diagram"](#).

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect chassis control module harness connector M96.
3. Check the connector for disconnection or looseness.
4. Check the pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace error-detected parts, securely lock the harness connector, and GO TO 2.

2. PERFORM SELF-DIAGNOSIS (1)

1. Connect chassis control module harness connector M96.
2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1BB5-00" detected?

YES >> GO TO 3.

NO >> Inspection End.

3. CHECK FUSE

C1BB6-00 IGNITION POWER SUPPLY

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

Check that the following fuse is not blown.

Terminal No.	Signal name	Fuse No.
7P	Ignition power supply	30 (10A)

Is the fuse blown?

YES >> Replace the blown fuse after repairing the affected circuit.

NO >> GO TO 2.

4.CHECK POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect chassis control module harness connector M96.
3. Check the voltage between chassis control module harness connector M96 terminal 10 and ground.

Chassis control module		—	Voltage
Connector	Terminal		
M96	10	Ground	Approx. 0 V

4. Turn the ignition switch ON

CAUTION:

Never start the engine.

5. Check the voltage between chassis control module harness connector M96 terminal 10 and ground.

Chassis control module		—	Voltage
Connector	Terminal		
M96	10	Ground	6.4 – 16 V

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness or connector

5.CHECK CHASSIS CONTROL MODULE GROUND CIRCUIT

Check the continuity between chassis control module harness connector M96 terminal 12 and ground.

Chassis control module		—	Continuity
Connector	Terminal		
M96	12	Ground	Yes

Is the inspection result normal?

YES >> Inspection End.

NO >> Repair or replace harness or connector.

C1BB7-00 CONTROL MODULE

DTC Description

INFOID:000000011277402

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1BB7-00	CONTROL MODULE (Control module)	When a malfunction is detected in chassis control module.

POSSIBLE CAUSE

- Chassis control module

FAIL-SAFE

The following functions are suspended:

- Active Trace Control function
- Active Ride Control function
- Active Engine Brake function

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

 With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1BB7-00" detected?

YES >> Proceed to [DAS-239, "Diagnosis Procedure"](#).

NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:000000011277403

1. PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
2. Turn the ignition switch OFF and wait for 10 seconds or more.
3. Turn the ignition switch ON.
4. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1BB7-00" detected?

YES >> Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).

NO >> Inspection End.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

C1BB8-00 CONTROL MODULE

DTC Description

INFOID:000000011277404

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1BB8-00	CONTROL MODULE (Control module)	When a malfunction is detected in chassis control module.

POSSIBLE CAUSE

- Chassis control module

FAIL-SAFE

The following functions are suspended:

- Active Trace Control function
- Active Ride Control function
- Active Engine Brake function

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

 With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1BB8-00" detected?

- YES >> Proceed to [DAS-240, "Diagnosis Procedure"](#).
- NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).
- NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:000000011277405

1. PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
2. Turn the ignition switch OFF and wait for 10 seconds or more.
3. Turn the ignition switch ON.
4. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1BB8-00" detected?

- YES >> Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).
- NO >> Inspection End.

C1BB9-00 CONTROL MODULE

DTC Description

INFOID:000000011277406

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1BB9-00	CONTROL MODULE (Control module)	When a malfunction is detected in chassis control module.

POSSIBLE CAUSE

- Chassis control module

FAIL-SAFE

The following functions are suspended:

- Active Trace Control function
- Active Ride Control function
- Active Engine Brake function

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1BB9-00" detected?

YES >> Proceed to [DAS-241, "Diagnosis Procedure"](#).

NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:000000011277407

1. PERFORM SELF-DIAGNOSIS

With CONSULT

1. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
2. Turn the ignition switch OFF and wait for 10 seconds or more.
3. Turn the ignition switch ON.
4. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1BB9-00" detected?

YES >> Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).

NO >> Inspection End.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

C1BBA-00 CONTROL MODULE

DTC Description

INFOID:000000011277408

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1BBA-00	CONTROL MODULE (Control module)	When a malfunction is detected in chassis control module.

POSSIBLE CAUSE

- Chassis control module

FAIL-SAFE

The following functions are suspended:

- Active Trace Control function
- Active Ride Control function
- Active Engine Brake function

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If “DTC CONFIRMATION PROCEDURE” has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform “Self Diagnostic Result” of “CHASSIS CONTROL”.

Is DTC “C1BBA-00” detected?

YES >> Proceed to [DAS-242, "Diagnosis Procedure"](#).

NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:000000011277409

1. PERFORM SELF-DIAGNOSIS

With CONSULT

1. Erase “Self Diagnostic Result” of “CHASSIS CONTROL”.
2. Turn the ignition switch OFF and wait for 10 seconds or more.
3. Turn the ignition switch ON.
4. Perform “Self Diagnostic Result” of “CHASSIS CONTROL”.

Is DTC “C1BBA-00” detected?

YES >> Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).

NO >> Inspection End.

C1BBB-00 CONTROL MODULE

DTC Description

INFOID:000000011277410

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1BBB-00	CONTROL MODULE (Control module)	When a malfunction is detected in chassis control module.

POSSIBLE CAUSE

- Chassis control module

FAIL-SAFE

The following functions are suspended:

- Active Trace Control function
- Active Ride Control function
- Active Engine Brake function

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

 With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1BBB-00" detected?

YES >> Proceed to [DAS-243, "Diagnosis Procedure"](#).

NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:000000011277411

1. PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
2. Turn the ignition switch OFF and wait for 10 seconds or more.
3. Turn the ignition switch ON.
4. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1BBB-00" detected?

YES >> Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).

NO >> Inspection End.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

C1BBC-00 CONTROL MODULE

DTC Description

INFOID:000000011277412

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1BBC-00	CONTROL MODULE (Control module)	When a malfunction is detected in chassis control module.

POSSIBLE CAUSE

- Chassis control module

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1BBC-00" detected?

- YES >> Proceed to [DAS-244, "Diagnosis Procedure"](#).
- NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).
- NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:000000011277413

1. PERFORM SELF-DIAGNOSIS

With CONSULT

1. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
2. Turn the ignition switch OFF and wait for 10 seconds or more.
3. Turn the ignition switch ON.
4. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1BBC-00" detected?

- YES >> Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).
- NO >> Inspection End.

C1BBD-00 VARIANT CODING

DTC Description

INFOID:0000000011277414

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1BBD-00	VARIANT CODING (Variant coding)	When variant coding is incomplete.

POSSIBLE CAUSE

- Chassis control module

FAIL-SAFE

The following functions are suspended:

- Active Trace Control function
- Active Ride Control function
- Active Engine Brake function

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1BBD-00" detected?

YES >> Proceed to [DAS-245, "Diagnosis Procedure"](#).

NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:0000000011277415

1. PERFORM SELF-DIAGNOSIS

With CONSULT

1. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
2. Turn the ignition switch OFF and wait for 10 seconds or more.
3. Turn the ignition switch ON.
4. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1BBD-00" detected?

YES >> Perform configuration. Refer to [DAS-215, "Work Procedure"](#).

NO >> Inspection End.

DAS

C1BC0-00 FRONT RIGHT WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

C1BC0-00 FRONT RIGHT WHEEL SENSOR

DTC Description

INFOID:0000000011277416

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1BC0-00	FR WHEEL SENSOR (Front right wheel sensor)	When a malfunction is detected in front right wheel sensor system.

POSSIBLE CAUSE

- Front right wheel sensor
- Front right sensor rotor
- ABS actuator and electric unit (control unit)
- Chassis control module

FAIL-SAFE

The following functions are suspended:

- Active Trace Control function
- Active Ride Control function


DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

 With CONSULT

1. Start the engine.
2. Drive the vehicle at approx. 30 km/h (19 MPH) or more for approx. 1 minute.
3. Stop the vehicle.
4. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

5. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1BC0-00" detected?

- YES >> Proceed to [DAS-246, "Diagnosis Procedure"](#).
NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).
NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:0000000011277417

1. CHECK FRONT RH WHEEL SENSOR SYSTEM

 With CONSULT

Perform "Self Diagnostic Result" of "ABS".

Is DTC detected?

- YES >> Check the DTC. Refer to [BRC-53, "DTC Index"](#).
NO >> GO TO 2.

2. PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
2. Turn the ignition switch OFF and wait for 10 seconds or more.
3. Turn the ignition switch ON.

C1BC0-00 FRONT RIGHT WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

4. Perform "All DTC Reading".

Is DTC "C1BC0-00", "U1000-00" or other DTC detected?

YES ("C1BC0-00")>>Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).

YES ("U1000-00")>>Refer to [DAS-260, "Diagnosis Procedure"](#).

YES (other DTC)>>Check the DTC.

NO >> Inspection End.

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

C1BC1-00 FRONT LEFT WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

C1BC1-00 FRONT LEFT WHEEL SENSOR

DTC Description

INFOID:0000000011277418

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1BC1-00	FL WHEEL SENSOR (Front left wheel sensor)	When a malfunction is detected in front left wheel sensor system.

POSSIBLE CAUSE

- Front left wheel sensor
- Front left sensor rotor
- ABS actuator and electric unit (control unit)
- Chassis control module

FAIL-SAFE

The following functions are suspended:

- Active Trace Control function
- Active Ride Control function


DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

 With CONSULT

1. Start the engine.
2. Drive the vehicle at approx. 30 km/h (19 MPH) or more for approx. 1 minute.
3. Stop the vehicle.
4. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

5. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1BC1-00" detected?

- YES >> Proceed to [DAS-248, "Diagnosis Procedure"](#).
NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).
NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:0000000011277419

1. CHECK FRONT LH WHEEL SENSOR SYSTEM

 With CONSULT

Perform "Self Diagnostic Result" of "ABS".

Is DTC detected?

- YES >> Check the DTC. Refer to [BRC-53, "DTC Index"](#).
NO >> GO TO 2.

2. PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
2. Turn the ignition switch OFF and wait for 10 seconds or more.
3. Turn the ignition switch ON.

C1BC1-00 FRONT LEFT WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

4. Perform "All DTC Reading".

Is DTC "C1BC1-00", "U1000-00" or other DTC detected?

YES ("C1BC1-00")>>Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).

YES ("U1000-00")>>Refer to [DAS-260, "Diagnosis Procedure"](#).

YES (other DTC)>>Check the DTC.

NO >> Inspection End.

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

C1BC2-00 REAR RIGHT WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

C1BC2-00 REAR RIGHT WHEEL SENSOR

DTC Description

INFOID:000000011277420

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1BC2-00	RR WHEEL SENSOR (Rear right wheel sensor)	When a malfunction is detected in rear right wheel sensor system.

POSSIBLE CAUSE

- Rear right wheel sensor
- Rear right sensor rotor
- ABS actuator and electric unit (control unit)
- Chassis control module

FAIL-SAFE

The following functions are suspended:

- Active Trace Control function
- Active Ride Control function


DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

 With CONSULT

1. Start the engine.
2. Drive the vehicle at approx. 30 km/h (19 MPH) or more for approx. 1 minute.
3. Stop the vehicle.
4. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

5. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1BC2-00" detected?

YES >> Proceed to [DAS-250, "Diagnosis Procedure"](#).

NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:000000011277421

1. CHECK REAR RH WHEEL SENSOR SYSTEM

 With CONSULT

Perform "Self Diagnostic Result" of "ABS".

Is DTC detected?

YES >> Check the DTC. Refer to [BRC-53, "DTC Index"](#).

NO >> GO TO 2.

2. PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
2. Turn the ignition switch OFF and wait for 10 seconds or more.
3. Turn the ignition switch ON.

C1BC2-00 REAR RIGHT WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

4. Perform "All DTC Reading".

Is DTC "C1BC2-00", "U1000-00" or other DTC detected?

YES ("C1BC2-00")>>Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).

YES ("U1000-00")>>Refer to [DAS-260, "Diagnosis Procedure"](#).

YES (other DTC)>>Check the DTC.

NO >> Inspection End.

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

C1BC3-00 REAR LEFT WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

C1BC3-00 REAR LEFT WHEEL SENSOR

DTC Description

INFOID:000000011277422

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1BC3-00	RL WHEEL SENSOR (Rear left wheel sensor)	When a malfunction is detected in rear left wheel sensor system.

POSSIBLE CAUSE

- Rear left wheel sensor
- Rear left sensor rotor
- ABS actuator and electric unit (control unit)
- Chassis control module

FAIL-SAFE

The following functions are suspended:

- Active Trace Control function
- Active Ride Control function


DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

 With CONSULT

1. Start the engine.
2. Drive the vehicle at approx. 30 km/h (19 MPH) or more for approx. 1 minute.
3. Stop the vehicle.
4. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

5. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1BC3-00" detected?

- YES >> Proceed to [DAS-252, "Diagnosis Procedure"](#).
NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).
NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:000000011277423

1. CHECK REAR LH WHEEL SENSOR SYSTEM

 With CONSULT

Perform "Self Diagnostic Result" of "ABS".

Is DTC detected?

- YES >> Check the DTC. Refer to [BRC-53, "DTC Index"](#).
NO >> GO TO 2.

2. PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
2. Turn the ignition switch OFF and wait for 10 seconds or more.
3. Turn the ignition switch ON.

C1BC3-00 REAR LEFT WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

4. Perform "All DTC Reading".

Is DTC "C1BC3-00", "U1000-00" or other DTC detected?

YES ("C1BC3-00")>>Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).

YES ("U1000-00")>>Refer to [DAS-260, "Diagnosis Procedure"](#).

YES (other DTC)>>Check the DTC.

NO >> Inspection End.

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

C1BC4-00 DECEL G SENSOR

DTC Description

INFOID:000000011277424

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1BC4-00	DECEL G SENSOR (Decel G sensor)	When a malfunction is detected in decel G sensor system.

POSSIBLE CAUSE

- Yaw rate/side/decel G sensor [integrated in ABS actuator and electric unit (control unit)]
- ABS actuator and electric unit (control unit)
- Chassis control module

FAIL-SAFE

The following functions are suspended:

- Active Ride Control (brake) function


DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

 With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1BC4-00" detected?

YES >> Proceed to [DAS-254, "Diagnosis Procedure"](#).

NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:000000011277425

1. CHECK DECEL G SENSOR SYSTEM

 With CONSULT

Perform "Self Diagnostic Result" of "ABS".

Is DTC detected?

YES >> Check the DTC. Refer to [BRC-53, "DTC Index"](#).

NO >> GO TO 2.

2. PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
2. Turn the ignition switch OFF and wait for 10 seconds or more.
3. Turn the ignition switch ON.
4. Perform "All DTC Reading".

Is DTC "C1BC4-00", "U1000-00" or other DTC detected?

YES ("C1BC4-00")>>Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).

YES ("U1000-00")>>Refer to [DAS-260, "Diagnosis Procedure"](#).

YES (other DTC)>>Check the DTC.

C1BC4-00 DECEL G SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

NO >> Inspection End.

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

C1BC5-00 SIDE G SENSOR

DTC Description

INFOID:000000011277426

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1BC5-00	SIDE G SENSOR (Side G sensor)	When a malfunction is detected in side G sensor system.

POSSIBLE CAUSE

- Yaw rate/side/decel G sensor [integrated in ABS actuator and electric unit (control unit)]
- ABS actuator and electric unit (control unit)
- Chassis control module

FAIL-SAFE

The following functions are suspended:

- Active Trace Control function

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

 With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "C1BC5-00" detected?

- YES >> Proceed to [DAS-256, "Diagnosis Procedure"](#).
- NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).
- NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:000000011277427

1. CHECK SIDE G SENSOR SYSTEM

 With CONSULT

Perform "Self Diagnostic Result" of "ABS".

Is DTC detected?

- YES >> Check the DTC. Refer to [BRC-53, "DTC Index"](#).
- NO >> GO TO 2.

2. PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
2. Turn the ignition switch OFF and wait for 10 seconds or more.
3. Turn the ignition switch ON.
4. Perform "All DTC Reading".

Is DTC "C1BC5-00", "U1000-00" or other DTC detected?

- YES ("C1BC5-00")>>Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).
- YES ("U1000-00")>>Refer to [DAS-260, "Diagnosis Procedure"](#).
- YES (other DTC)>>Check the DTC.

C1BC5-00 SIDE G SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

NO >> Inspection End.

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

C1BC6-00 PRESSURE SENSOR

DTC Description

INFOID:000000011277428

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1BC6-00	PRESSURE SENSOR (Pressure sensor)	When a malfunction is detected in brake fluid pressure system.

POSSIBLE CAUSE

- ABS actuator and electric unit (control unit)
- Chassis control module

FAIL-SAFE

The following functions are suspended:

- Active Trace Control function
- Active Ride Control (brake) function

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

 With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".


Is DTC "C1BC6-00" detected?

- YES >> Proceed to [DAS-258, "Diagnosis Procedure"](#).
 NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).
 NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:000000011277429

1. CHECK BRAKE FLUID PRESSURE SYSTEM

 With CONSULT

Perform "Self Diagnostic Result" of "ABS".

Is DTC detected?

- YES >> Check the DTC. Refer to [BRC-53, "DTC Index"](#).
 NO >> GO TO 2.

2. PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
2. Turn the ignition switch OFF and wait for 10 seconds or more.
3. Turn the ignition switch ON.
4. Perform "All DTC Reading".

Is DTC "C1BC6-00", "U1000-00" or other DTC detected?

- YES ("C1BC6-00")>>Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).
 YES ("U1000-00")>>Refer to [DAS-260, "Diagnosis Procedure"](#).
 YES (other DTC)>>Check the DTC.

C1BC6-00 PRESSURE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

NO >> Inspection End.

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

U1000-00 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

U1000-00 CAN COMM CIRCUIT

DTC Logic

INFOID:000000011277430

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
CAN COMM CIRCUIT [U1000-00]	Chassis Control module is not transmitting or receiving CAN communication signal for 2 seconds or more.	CAN communication system.

Diagnosis Procedure

INFOID:000000011277431

1. PERFORM SELF DIAGNOSTIC RESULT

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Perform "Self Diagnostic Result" of CHASSIS CONTROL.

Is CAN COMM CIRCUIT displayed?

- YES >> Refer to [LAN-17, "Trouble Diagnosis Flow Chart"](#).
NO >> Refer to [GI-44, "Intermittent Incident"](#).

U1A34-00 BRAKE CONTROL COMMUNICATION

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

U1A34-00 BRAKE CONTROL COMMUNICATION

DTC Description

INFOID:000000011277432

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
U1A34-00	BRAKE CONTROL COMM (Brake control communication)	When chassis control module is not receiving CAN communication signal [between chassis control module and ABS actuator and electric unit (control unit)] for 2 seconds or more.

POSSIBLE CAUSE

- ABS actuator and electric unit (control unit)
- Chassis control module
- CAN communication line

FAIL-SAFE

The following functions are suspended:

- Active Trace Control Function
- Active Ride Control Function
- Active Engine Brake Function

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

 With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "U1A34-00" detected?

- YES >> Proceed to [DAS-261, "Diagnosis Procedure"](#).
- NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).
- NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:000000011277433

Regarding Wiring Diagram information, refer to [DAS-205, "Wiring Diagram"](#).

1. CHECK CAN DIAGNOSIS SUPPORT MONITOR

 With CONSULT

1. Select "CAN Diagnosis Support Monitor" of "CHASSIS CONTROL".
2. Check malfunction between each control unit connected to chassis control module.

Check the result of "PRESENT"?

- Refer to >> [LAN-9, "CAN Communication Control Circuit"](#).
- "TRANSMIT DIAG" is other than "OK" >> GO TO 2.
- "ABS" other than "OK" >> GO TO 3.

2. CHECK TRANSMITTING SIDE UNIT

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

U1A34-00 BRAKE CONTROL COMMUNICATION

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

1. Turn the ignition switch OFF.
2. Disconnect chassis control module harness connector.
3. Check the chassis control module harness connector terminals No. 3 and 4 for damage or loose connection.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Recheck terminals for damage or loose connection. Refer to [LAN-7, "Precautions for Harness Repair"](#), and GO TO 5.

3. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Check ABS actuator and electric unit (control unit) harness connector terminals (CAN communication line) or damage or loose connection.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Recheck terminals for damage or loose connection. Refer to [LAN-7, "Precautions for Harness Repair"](#), and GO TO 4.

4. PERFORM SELF-DIAGNOSIS [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

 With CONSULT

1. Connect ABS actuator and electric unit (control unit) harness connector.
2. Erase "Self Diagnostic Result" of "ABS".
3. Turn the ignition switch OFF and wait for 10 seconds or more.
4. Turn the ignition switch ON.
5. Perform "Self Diagnostic Result" of "ABS".

Is DTC detected?

YES >> Check the DTC. Refer to [BRC-53, "DTC Index"](#).

NO >> GO TO 5.

5. PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Connect chassis control module harness connector.
2. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
3. Turn the ignition switch OFF and wait for 10 seconds or more.
4. Turn the ignition switch ON.
5. Perform "All DTC Reading".

Is DTC "U1000-00", "U1A34-00" or other DTC detected?

YES ("U1000-00")>>Refer to [DAS-260, "Diagnosis Procedure"](#).

YES ("U1A34-00")>>Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).

YES (other DTC)>>Check the DTC.

NO >> Inspection End.

U1A35-00 BRAKE CONTROL COMMUNICATION

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

U1A35-00 BRAKE CONTROL COMMUNICATION

DTC Description

INFOID:000000011277434

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
U1A35-00	BRAKE CONTROL COMM (Brake control communication)	A calculated signal value differs between a signal transmitted from the ABS actuator and electric unit (control unit) and a signal received from chassis control module via CAN communication.

POSSIBLE CAUSE

- ABS actuator and electric unit (control unit)
- Chassis control module
- CAN communication line

FAIL-SAFE

The following functions are suspended:

- Active Trace Control function
- Active Ride Control function
- Active Engine Brake function

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

 With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "U1A35-00" detected?

YES >> Proceed to [DAS-263, "Diagnosis Procedure"](#).

NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:000000011277435

Regarding Wiring Diagram information, refer to [DAS-205, "Wiring Diagram"](#).

1. CHECK CAN DIAGNOSIS SUPPORT MONITOR

 With CONSULT

1. Select "CAN Diagnosis Support Monitor" of "CHASSIS CONTROL".
2. Check malfunction between each control unit connected to chassis control module.

Check the result of "PRESENT"?

>> Refer to [LAN-9, "CAN Communication Control Circuit"](#).

"TRANSMIT DIAG" is other than "OK">>GO TO 2.

"ABS" other than "OK">>GO TO 3.

2. CHECK TRANSMITTING SIDE UNIT

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

U1A35-00 BRAKE CONTROL COMMUNICATION

[CHASSIS CONTROL]

< DTC/CIRCUIT DIAGNOSIS >

1. Turn the ignition switch OFF.
2. Disconnect chassis control module harness connector.
3. Check the chassis control module harness connector terminals No. 3 and 4 for damage or loose connection.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Recheck terminals for damage or loose connection. Refer to [DAS-181. "Precautions for Harness Repair"](#), and GO TO 5.

3. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Check ABS actuator and electric unit (control unit) harness connector terminals (CAN communication line) or damage or loose connection.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Recheck terminals for damage or loose connection. Refer to [DAS-181. "Precautions for Harness Repair"](#), and GO TO 4.

4. PERFORM SELF-DIAGNOSIS [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

 With CONSULT

1. Connect ABS actuator and electric unit (control unit) harness connector.
2. Erase "Self Diagnostic Result" of "ABS".
3. Turn the ignition switch OFF and wait for 10 seconds or more.
4. Turn the ignition switch ON.
5. Perform "Self Diagnostic Result" of "ABS".

Is DTC detected?

YES >> Check the DTC. Refer to [BRC-53. "DTC Index"](#).

NO >> GO TO 5.

5. PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Connect chassis control module harness connector.
2. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
3. Turn the ignition switch OFF and wait for 10 seconds or more.
4. Turn the ignition switch ON.
5. Perform "All DTC Reading".

Is DTC "U1000-00", "U1A35-00" or other DTC detected?

YES ("U1000-00")>>Refer to [DAS-260. "Diagnosis Procedure"](#).

YES ("U1A35-00")>>Replace the chassis control module. Refer to [DAS-286. "Removal and Installation"](#).

YES (other DTC)>>Check the DTC.

NO >> Inspection End.

U1A36-00 BCM/IPDM COMMUNICATION

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

U1A36-00 BCM/IPDM COMMUNICATION

DTC Description

INFOID:0000000011277436

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
U1A36-00	BCM/IPDM COMM (BCM/IPDM communication)	When chassis control module is not receiving CAN communication signal (between chassis control module and BCM) for 2 seconds or more.

POSSIBLE CAUSE

- BCM
- Chassis control module
- CAN communication line

FAIL-SAFE

The following functions are suspended:

- Active Trace Control function
- Active Ride Control function
- Active Engine Brake function


DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

 With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "U1A36-00" detected?

YES >> Proceed to [DAS-265, "Diagnosis Procedure"](#).

NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:0000000011277437

Regarding Wiring Diagram information, refer to [DAS-205, "Wiring Diagram"](#).

1. CHECK CAN DIAGNOSIS SUPPORT MONITOR

 With CONSULT

1. Select "CAN Diagnosis Support Monitor" of "CHASSIS CONTROL".
2. Check malfunction between each control unit connected to chassis control module.

Check the result of "PRESENT"?

>> Refer to [LAN-9, "CAN Communication Control Circuit"](#).

"TRANSMIT DIAG" is other than "OK">>GO TO 2.

"BCM" other than "OK">>GO TO 3.

2. CHECK TRANSMITTING SIDE UNIT

1. Turn the ignition switch OFF.

A
B
C
D
E
F
G
H
I
J
K
L
M
N

DAS

P

U1A36-00 BCM/IPDM COMMUNICATION

[CHASSIS CONTROL]

< DTC/CIRCUIT DIAGNOSIS >

2. Disconnect chassis control module harness connector.
3. Check the chassis control module harness connector terminals No. 3 and 4 for damage or loose connection.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Recheck terminals for damage or loose connection. Refer to [LAN-7, "Precautions for Harness Repair"](#), and GO TO 5.

3. CHECK BCM

1. Turn the ignition switch OFF.
2. Disconnect BCM harness connector.
3. Check BCM harness connector terminals (CAN communication line) or damage or loose connection.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Recheck terminals for damage or loose connection. Refer to [LAN-7, "Precautions for Harness Repair"](#), and GO TO 4.

4. PERFORM SELF-DIAGNOSIS (BCM)

 With CONSULT

1. Connect BCM harness connector.
2. Erase "Self Diagnostic Result" of "BCM".
3. Turn the ignition switch OFF and wait for 10 seconds or more.
4. Turn the ignition switch ON.
5. Perform "Self Diagnostic Result" of "BCM".

Is DTC detected?

YES >> Check the DTC. Refer to [BCS-108, "DTC Index"](#).

NO >> GO TO 5.

5. PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Connect chassis control module harness connector.
2. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
3. Turn the ignition switch OFF and wait for 10 seconds or more.
4. Turn the ignition switch ON.
5. Perform "All DTC Reading".

Is DTC "U1000-00", "U1A36-00" or other DTC detected?

YES ("U1000-00")>>Refer to [DAS-260, "Diagnosis Procedure"](#).

YES ("U1A36-00")>>Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).

YES (other DTC)>>Check the DTC.

NO >> Inspection End.

U1A39-00 COMBINATION METER COMMUNICATION

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

U1A39-00 COMBINATION METER COMMUNICATION

DTC Description

INFOID:0000000011277438

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
U1A39-00	COMBINATION METER COMM (Combination meter communication)	When chassis control module is not receiving CAN communication signal (between chassis control module and combination meter) for 2 seconds or more.

POSSIBLE CAUSE

- Combination meter
- Chassis control module
- CAN communication line


DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

 With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "U1A39-00" detected?

YES >> Proceed to [DAS-267, "Diagnosis Procedure"](#).

NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:0000000011277439

Regarding Wiring Diagram information, refer to [DAS-205, "Wiring Diagram"](#).

1. CHECK CAN DIAGNOSIS SUPPORT MONITOR

 With CONSULT

1. Select "CAN Diagnosis Support Monitor" of "CHASSIS CONTROL".
2. Check malfunction between each control unit connected to chassis control module.

Check the result of "PRESENT"?

>> Refer to [LAN-9, "CAN Communication Control Circuit"](#).

"TRANSMIT DIAG" is other than "OK" >> GO TO 2.

"METER/M&A" other than "OK" >> GO TO 3.

2. CHECK TRANSMITTING SIDE UNIT

1. Turn the ignition switch OFF.
2. Disconnect chassis control module harness connector.
3. Check the chassis control module harness connector terminals No. 3 and 4 for damage or loose connection.

Is the inspection result normal?

YES >> GO TO 5.

U1A39-00 COMBINATION METER COMMUNICATION

[CHASSIS CONTROL]

< DTC/CIRCUIT DIAGNOSIS >

NO >> Recheck terminals for damage or loose connection. Refer to [LAN-7, "Precautions for Harness Repair"](#), and GO TO 5.

3. CHECK COMBINATION METER

1. Turn the ignition switch OFF.
2. Disconnect combination meter harness connector.
3. Check combination meter harness connector terminals (CAN communication line) or damage or loose connection.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Recheck terminals for damage or loose connection. Refer to [LAN-7, "Precautions for Harness Repair"](#), and GO TO 4.

4. PFEFORM SELF-DIAGNOSIS (COMBINATION METER)

 With CONSULT

1. Connect combination meter harness connector.
2. Erase "Self Diagnostic Result" of "METER/M&A".
3. Turn the ignition switch OFF and wait for 10 seconds or more.
4. Turn the ignition switch ON.
5. Perform "Self Diagnostic Result" of "METER/M&A".

Is DTC detected?

YES >> Check the DTC. Refer to [MWI-31, "DTC Index"](#).

NO >> GO TO 5.

5. PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Connect chassis control module harness connector.
2. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
3. Turn the ignition switch OFF and wait for 10 seconds or more.
4. Turn the ignition switch ON.
5. Perform "All DTC Reading".

Is DTC "U1000-00", "U1A39-00" or other DTC detected?

YES ("U1000-00")>>Refer to [DAS-260, "Diagnosis Procedure"](#).

YES ("U1A39-00")>>Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).

YES (other DTC)>>Check the DTC.

NO >> Inspection End.

U1A3B-00 TCM COMMUNICATION

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

U1A3B-00 TCM COMMUNICATION

DTC Description

INFOID:0000000011277440

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
U1A3B-00	TCM COMM (TCM communication)	When chassis control module is not receiving CAN communication signal (between chassis control module and TCM) for 2 seconds or more.

POSSIBLE CAUSE

- TCM
- Chassis control module
- CAN communication line

FAIL-SAFE

The following functions are suspended:

- Active Trace Control function
- Active Ride Control (engine) function
- Active Engine Brake


DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

 With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "U1A3B-00" detected?

YES >> Proceed to [DAS-269, "Diagnosis Procedure"](#).

NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:0000000011277441

Regarding Wiring Diagram information, refer to [DAS-205, "Wiring Diagram"](#).

1. CHECK CAN DIAGNOSIS SUPPORT MONITOR

 With CONSULT

1. Select "CAN Diagnosis Support Monitor" of "CHASSIS CONTROL".
2. Check malfunction between each control unit connected to chassis control module.

Check the result of "PRESENT"?

>> Refer to [LAN-9, "CAN Communication Control Circuit"](#).

"TRANSMIT DIAG" is other than "OK">>GO TO 2.

"TRANSMISSION" other than "OK">>GO TO 3.

2. CHECK TRANSMITTING SIDE UNIT

1. Turn the ignition switch OFF.

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

U1A3B-00 TCM COMMUNICATION

[CHASSIS CONTROL]

< DTC/CIRCUIT DIAGNOSIS >

2. Disconnect chassis control module harness connector.
3. Check the chassis control module harness connector terminals No. 3 and 4 for damage or loose connection.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Recheck terminals for damage or loose connection. Refer to [LAN-7. "Precautions for Harness Repair"](#), and GO TO 5.

3. CHECK TCM


1. Turn the ignition switch OFF.
2. Disconnect TCM harness connector.
3. Check TCM harness connector terminals (CAN communication line) or damage or loose connection.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Recheck terminals for damage or loose connection. Refer to [LAN-7. "Precautions for Harness Repair"](#), and GO TO 4.

4. PERFORM SELF-DIAGNOSIS (TCM)

 With CONSULT

1. Connect TCM harness connector.
2. Erase "Self Diagnostic Result" of "TRANSMISSION".
3. Turn the ignition switch OFF and wait for 10 seconds or more.
4. Turn the ignition switch ON.
5. Perform "Self Diagnostic Result" of "TRANSMISSION".

Is DTC detected?

YES >> Check the DTC. Refer to [TM-63. "DTC Index"](#).

NO >> GO TO 5.

5. PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Connect chassis control module harness connector.
2. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
3. Turn the ignition switch OFF and wait for 10 seconds or more.
4. Turn the ignition switch ON.
5. Perform "All DTC Reading".

Is DTC "U1000-00", "U1A3B-00" or other DTC detected?

YES ("U1000-00")>>Refer to [DAS-260. "Diagnosis Procedure"](#).

YES ("U1A3B-00")>>Replace the chassis control module. Refer to [DAS-286. "Removal and Installation"](#).

YES (other DTC)>>Check the DTC.

NO >> Inspection End.

U1A42-00 STEERING ANGLE SENSOR COMMUNICATION

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

U1A42-00 STEERING ANGLE SENSOR COMMUNICATION

DTC Description

INFOID:000000011277442

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
U1A42-00	STEERING ANGLE SENSOR COMM (Steering angle sensor communication)	When chassis control module is not receiving CAN communication signal (between chassis control module and steering angle sensor) for 2 seconds or more.

POSSIBLE CAUSE

- Steering angle sensor
- Chassis control module
- CAN communication line

FAIL-SAFE

The following functions are suspended:

- Active Trace Control function
- Active Ride Control (engine) function

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

Ⓜ With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "U1A42-00" detected?

YES >> Proceed to [DAS-271. "Diagnosis Procedure"](#).

NO-1 >> To check malfunction symptom before repair: Refer to [GI-44. "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:000000011277443

Regarding Wiring Diagram information, refer to [DAS-205. "Wiring Diagram"](#).

1. CHECK CAN DIAGNOSIS SUPPORT MONITOR

Ⓜ With CONSULT

1. Select "CAN Diagnosis Support Monitor" of "CHASSIS CONTROL".
2. Check malfunction between each control unit connected to chassis control module.

Check the result of "PRESENT"?

>> Refer to [LAN-9. "CAN Communication Control Circuit"](#).

"TRANSMIT DIAG" is other than "OK">>GO TO 2.

"STRG" other than "OK">>GO TO 3.

2. CHECK TRANSMITTING SIDE UNIT

A
B
C
D
E
F
G
H
I
J
K
L
M
N

DAS

P

U1A42-00 STEERING ANGLE SENSOR COMMUNICATION

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

1. Turn the ignition switch OFF.
2. Disconnect chassis control module harness connector.
3. Check the chassis control module harness connector terminals No. 3 and 4 for damage or loose connection.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Recheck terminals for damage or loose connection. Refer to [LAN-7, "Precautions for Harness Repair"](#), and GO TO 5.

3. CHECK STEERING ANGLE SENSOR

1. Turn the ignition switch OFF.
2. Disconnect steering angle sensor harness connector.
3. Check steering angle sensor harness connector terminals (CAN communication line) or damage or loose connection.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Recheck terminals for damage or loose connection. Refer to [LAN-7, "Precautions for Harness Repair"](#), and GO TO 4.

4. PFEFORM SELF-DIAGNOSIS [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

 With CONSULT

1. Connect steering angle sensor harness connector.
2. Erase "Self Diagnostic Result" of "ABS".
3. Turn the ignition switch OFF and wait for 10 seconds or more.
4. Turn the ignition switch ON.
5. Perform "Self Diagnostic Result" of "ABS".

Is DTC detected?

YES >> Check the DTC. Refer to [BRC-53, "DTC Index"](#).

NO >> GO TO 5.

5. PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Connect chassis control module harness connector.
2. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
3. Turn the ignition switch OFF and wait for 10 seconds or more.
4. Turn the ignition switch ON.
5. Perform "All DTC Reading".

Is DTC "U1000-00", "U1A42-00" other DTC detected?

YES ("U1000-00")>>Refer to [DAS-260, "Diagnosis Procedure"](#).

YES ("U1A42-00")>>Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).

YES (other DTC)>>Check the DTC.

NO >> Inspection End.

U1A43-00 STEERING ANGLE SENSOR COMMUNICATION

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

U1A43-00 STEERING ANGLE SENSOR COMMUNICATION

DTC Description

INFOID:000000011277444

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
U1A43-00	STEERING ANGLE SENSOR COMM (Steering angle sensor communication)	A calculated signal value differs between a signal transmitted from the steering angle sensor and a signal received from chassis control module via CAN communication.

POSSIBLE CAUSE

- Steering angle sensor
- Chassis control module
- CAN communication line

FAIL-SAFE

The following functions are suspended:

- Active Trace Control function
- Active Ride Control (engine) function


DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

 With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "U1A43-00" detected?

YES >> Proceed to [DAS-273. "Diagnosis Procedure"](#).

NO-1 >> To check malfunction symptom before repair: Refer to [GI-44. "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:000000011277445

Regarding Wiring Diagram information, refer to [DAS-205. "Wiring Diagram"](#).

1. CHECK CAN DIAGNOSIS SUPPORT MONITOR

 With CONSULT

1. Select "CAN Diagnosis Support Monitor" of "CHASSIS CONTROL".
2. Check malfunction between each control unit connected to chassis control module.

Check the result of "PRESENT"?

>> Refer to [LAN-9. "CAN Communication Control Circuit"](#).

"TRANSMIT DIAG" is other than "OK">>GO TO 2.

"STRG" other than "OK">>GO TO 3.

2. CHECK TRANSMITTING SIDE UNIT

U1A43-00 STEERING ANGLE SENSOR COMMUNICATION

[CHASSIS CONTROL]

< DTC/CIRCUIT DIAGNOSIS >

1. Turn the ignition switch OFF.
2. Disconnect chassis control module harness connector.
3. Check the chassis control module harness connector terminals No. 3 and 4 for damage or loose connection.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Recheck terminals for damage or loose connection. Refer to [LAN-7, "Precautions for Harness Repair"](#), and GO TO 5.

3. CHECK STEERING ANGLE SENSOR

1. Turn the ignition switch OFF.
2. Disconnect steering angle sensor harness connector.
3. Check steering angle sensor harness connector terminals (CAN communication line) or damage or loose connection.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Recheck terminals for damage or loose connection. Refer to [LAN-7, "Precautions for Harness Repair"](#), and GO TO 4.

4. PFEFORM SELF-DIAGNOSIS [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

 With CONSULT

1. Connect steering angle sensor harness connector.
2. Erase "Self Diagnostic Result" of "ABS".
3. Turn the ignition switch OFF and wait for 10 seconds or more.
4. Turn the ignition switch ON.
5. Perform "Self Diagnostic Result" of "ABS".

Is DTC detected?

YES >> Check the DTC. Refer to [BRC-53, "DTC Index"](#).

NO >> GO TO 5.

5. PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Connect chassis control module harness connector.
2. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
3. Turn the ignition switch OFF and wait for 10 seconds or more.
4. Turn the ignition switch ON.
5. Perform "All DTC Reading".

Is DTC "U1000-00", "U1A43-00" or other DTC detected?

YES ("U1000-00")>>Refer to [DAS-260, "Diagnosis Procedure"](#).

YES ("U1A43-00")>>Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).

YES (other DTC)>>Check the DTC.

NO >> Inspection End.

U1A48-00 ECM/HPCM COMMUNICATION

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

U1A48-00 ECM/HPCM COMMUNICATION

DTC Description

INFOID:0000000011277446

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
U1A48-00	ECM/HPCM COMM (ECM/HPCM communication)	When chassis control module is not receiving CAN communication signal (between chassis control module and ECM) for 2 seconds or more.

POSSIBLE CAUSE

- ECM
- Chassis control module
- CAN communication line

FAIL-SAFE

The following functions are suspended:

- Active Trace Control function
- Active Ride Control function
- Active Engine Brake function

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2.CHECK DTC DETECTION

 With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "U1A48-00" detected?

YES >> Proceed to [DAS-275, "Diagnosis Procedure"](#).

NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:0000000011277447

Regarding Wiring Diagram information, refer to [DAS-205, "Wiring Diagram"](#).

1.CHECK CAN DIAGNOSIS SUPPORT MONITOR

 With CONSULT

1. Select and "CAN Diagnosis Support Monitor" of "CHASSIS CONTROL".
2. Check malfunction between each control unit connected to chassis control module.

Check the result of "PRESENT"?

>> Refer to [LAN-9, "CAN Communication Control Circuit"](#).

"TRANSMIT DIAG" is other than "OK">>GO TO 2.

"ENGINE" other than "OK">>GO TO 3.

2.CHECK TRANSMITTING SIDE UNIT

1. Turn the ignition switch OFF.

A

B

C

D

E

F

G

H

I

J

K

L

M

N

DAS

P

U1A48-00 ECM/HPCM COMMUNICATION

[CHASSIS CONTROL]

< DTC/CIRCUIT DIAGNOSIS >

2. Disconnect chassis control module harness connector.
3. Check the chassis control module harness connector terminals No. 3 and 4 for damage or loose connection.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Recheck terminals for damage or loose connection. Refer to [LAN-7, "Precautions for Harness Repair"](#), and GO TO 5.

3. CHECK ECM

1. Turn the ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check ECM harness connector terminals (CAN communication line) or damage or loose connection.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Recheck terminals for damage or loose connection. Refer to [LAN-7, "Precautions for Harness Repair"](#), and GO TO 4.

4. PERFORM SELF-DIAGNOSIS (ECM)

 With CONSULT

1. Connect ECM harness connector.
2. Erase "Self Diagnostic Result" of "ENGINE".
3. Turn the ignition switch OFF and wait for 10 seconds or more.
4. Turn the ignition switch ON.
5. Perform "Self Diagnostic Result" of "ENGINE".

Is DTC detected?

YES >> Check the DTC. Refer to [EC-96, "DTC Index"](#).

NO >> GO TO 5.

5. PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Connect chassis control module harness connector.
2. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
3. Turn the ignition switch OFF and wait for 10 seconds or more.
4. Turn the ignition switch ON.
5. Perform "All DTC Reading".

Is DTC "U1000-00", "U1A48-00" or other DTC detected?

YES ("U1000-00")>>Refer to [DAS-260, "Diagnosis Procedure"](#).

YES ("U1A48-00")>>Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).

YES (other DTC)>>Check the DTC.

NO >> Inspection End.

U1A4A-00 CONTROL MODULE (CAN)

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

U1A4A-00 CONTROL MODULE (CAN)

DTC Description

INFOID:0000000011277448

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
U1A4A-00	CONTROL MODULE (CAN) [Control module (CAN)]	• When a malfunction is detected in chassis control module (transmission via CAN communication is impossible)

POSSIBLE CAUSE

- Chassis control module

FAIL-SAFE

The following functions are suspended:

- Active Trace Control function
- Active Ride Control function
- Active Engine Brake function

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

 With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "U1A4A-00" detected?

YES >> Proceed to [DAS-277, "Diagnosis Procedure"](#).

NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:0000000011277449

1. PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
2. Turn the ignition switch OFF and wait for 10 seconds or more.
3. Turn the ignition switch ON.
4. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "U1A4A-00" detected?

YES >> Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).

NO >> Inspection End.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

U1A4B-00 CONTROL MODULE (CAN)

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

U1A4B-00 CONTROL MODULE (CAN)

DTC Description

INFOID:000000011277450

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
U1A4B-00	CONTROL MODULE (CAN) [Control module (CAN)]	When a malfunction is detected in chassis control module.

POSSIBLE CAUSE

- Chassis control module

FAIL-SAFE

The following functions are suspended:

- Active Trace Control function
- Active Ride Control function
- Active Engine Brake function

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

 With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "U1A4B-00" detected?

- YES >> Proceed to [DAS-278, "Diagnosis Procedure"](#).
NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).
NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:000000011277451

1. PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
2. Turn the ignition switch OFF and wait for 10 seconds or more.
3. Turn the ignition switch ON.
4. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "U1A4B-00" detected?

- YES >> Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).
NO >> Inspection End.

U1A4E-00 ECM/HPCM COMMUNICATION

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

U1A4E-00 ECM/HPCM COMMUNICATION

DTC Description

INFOID:0000000011277452

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
U1A4E-00	ECM/HPCM COMM (ECM/HPCM communication)	A calculated signal value differs between a signal transmitted from the ECM and a signal received from chassis control module via CAN communication.

POSSIBLE CAUSE

- ECM
- Chassis control module
- CAN communication line

FAIL-SAFE

The following functions are suspended:

- Active Ride Control (engine) function

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

 With CONSULT

1. Turn the ignition switch OFF to ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform "Self Diagnostic Result" of "CHASSIS CONTROL".

Is DTC "U1A4E-00" detected?

YES >> Proceed to [DAS-279, "Diagnosis Procedure"](#).

NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:0000000011277453

Regarding Wiring Diagram information, refer to [DAS-205, "Wiring Diagram"](#).

1. CHECK CAN DIAGNOSIS SUPPORT MONITOR

 With CONSULT

1. Select "CAN Diagnosis Support Monitor" of "CHASSIS CONTROL".
2. Check malfunction history between each control unit connected to chassis control module.

Check the result of "PAST"?

All items are "OK">>Refer to [GI-44, "Intermittent Incident"](#).

"TRANSMIT DIAG" is other than "OK">>GO TO 2.

"ENGINE" other than "OK">>GO TO 3.

2. CHECK TRANSMITTING SIDE UNIT

1. Turn the ignition switch OFF.
2. Disconnect chassis control module harness connector.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

U1A4E-00 ECM/HPCM COMMUNICATION

[CHASSIS CONTROL]

< DTC/CIRCUIT DIAGNOSIS >

3. Check the chassis control module harness connector terminals No. 3 and 4 for damage or loose connection.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Recheck terminals for damage or loose connection. Refer to [LAN-7, "Precautions for Harness Repair"](#), and GO TO 5.

3.CHECK ECM


1. Turn the ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check ECM harness connector terminals (CAN communication line) or damage or loose connection.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Recheck terminals for damage or loose connection. Refer to [LAN-7, "Precautions for Harness Repair"](#), and GO TO 4.

4.PERFORM SELF-DIAGNOSIS (ECM)

 With CONSULT

1. Connect ECM harness connector.
2. Erase "Self Diagnostic Result" of "ENGINE".
3. Turn the ignition switch OFF and wait for 10 seconds or more.
4. Turn the ignition switch ON.
5. Perform "Self Diagnostic Result" of "ENGINE".

Is DTC detected?

YES >> Check the DTC. Refer to [EC-96, "DTC Index"](#).

NO >> GO TO 5.

5.PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Connect chassis control module harness connector.
2. Erase "Self Diagnostic Result" of "CHASSIS CONTROL".
3. Turn the ignition switch OFF and wait for 10 seconds or more.
4. Turn the ignition switch ON.
5. Perform "All DTC Reading".

Is DTC "U1000-00", "U1A4E-00" or other DTC detected?

YES ("U1000-00")>>Refer to [DAS-260, "Diagnosis Procedure"](#).

YES ("U1A4E-00")>>Replace the chassis control module. Refer to [DAS-286, "Removal and Installation"](#).

YES (other DTC)>>Check the DTC.

NO >> Inspection End.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CHASSIS CONTROL]

POWER SUPPLY AND GROUND CIRCUIT

Diagnosis Procedure

INFOID:000000011277454

Regarding Wiring Diagram information, refer to [DAS-205. "Wiring Diagram"](#).

1.CHECK FUSE

Check that the following fuse is not blown.

Terminal No.	Signal name	Fuse No.
7P	Ignition power supply	30 (10A)

Is the fuse blown?

- YES >> Replace the blown fuse after repairing the affected circuit.
NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect chassis control module harness connector M96.
3. Check the voltage between chassis control module harness connector M96 terminal 10 and ground.

Chassis control module		—	Voltage
Connector	Terminal		
M96	10	Ground	Approx. 0 V

4. Turn the ignition switch ON
CAUTION:
Never start the engine.
5. Check the voltage between chassis control module harness connector M96 terminal 10 and ground.

Chassis control module		—	Voltage
Connector	Terminal		
M96	10	Ground	6.4 – 16 V

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace harness or connector

3.CHECK CHASSIS CONTROL MODULE GROUND CIRCUIT

Check the continuity between chassis control module harness connector M96 terminal 12 and ground.

Chassis control module		—	Continuity
Connector	Terminal		
M96	12	Ground	Yes

Is the inspection result normal?

- YES >> Inspection End.
NO >> Repair or replace harness or connector.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P

DAS

SYMPTOM DIAGNOSIS

CHASSIS CONTROL

Active Engine Brake

INFOID:000000011277455

NOTE:

- For the operational conditions of Active Engine Brake, refer to [DAS-185, "System Description - Active Engine Brake"](#).
- Perform the "Self Diagnostic Result" using CONSULT before the symptom diagnosis. Perform the trouble diagnosis if any DTC is detected.

Symptom		Possible cause	Inspection item	
Active Engine Brake inoperative/ineffective.	No CVT gear ratio assist.	Active Engine Brake selected OFF in the vehicle information display.	Change Active Engine Brake selection in the vehicle information display to ON.	
		Certain roads, inclement weather or driving conditions.	System is functioning normally. Confirm the condition with the customer. Refer to DAS-191, "Precautions for Chassis Control (Engine Brake, Active Ride, and Active Trace)" .	
		<ul style="list-style-type: none"> • Road wheel tire condition is abnormal • Road wheel tire size is abnormal. 	Check the road wheel tire.	
	Lower CVT gear ratio not achieved.	Continuously	Active Engine Brake selected OFF in the vehicle information display.	Change Active Engine Brake selection in the vehicle information display to ON.
		At cornering.	<ul style="list-style-type: none"> • Wheel alignment • Steering malfunction 	Refer to "STEERING WHEEL TURNING FORCE IS HEAVY OR LIGHT" STC-31, "Description" .
		While coming to a complete stop.	Certain roads, inclement weather or driving conditions.	System is functioning normally. Confirm the condition with the customer. Refer to DAS-191, "Precautions for Chassis Control (Engine Brake, Active Ride, and Active Trace)" .

Active Ride Control

INFOID:000000011277456

NOTE:

- For the operational conditions of Active Ride Control, refer to [DAS-186, "System Description - Active Ride Control"](#).
- Perform the "Self Diagnostic Result" using CONSULT before the symptom diagnosis. Perform the trouble diagnosis if any DTC is detected.

CHASSIS CONTROL

< SYMPTOM DIAGNOSIS >

[CHASSIS CONTROL]

Symptom		Possible cause	Inspection item	
Active Ride Control inoperative/ineffective.	No Active Ride Control assist.	VDC OFF switch is engaged.	Turn VDC OFF switch to the OFF position.	
		Engine or transmission DTCs present.	Refer to EC DTCs EC-96 , " DTC Index ", or TM DTCs TM-63 , " DTC Index " as necessary.	
	Bumpy ride on bumpy road.	Certain roads, inclement weather or driving conditions.	System is functioning normally. Confirm the condition with the customer. Refer to DAS-191 , " Precautions for Chassis Control (Engine Brake, Active Ride, and Active Trace) ".	
		<ul style="list-style-type: none"> Road wheel tire condition is abnormal. Road wheel tire size is abnormal. 	Check the road wheel tire.	
	High vehicle pitch on bumps.	Ineffective pitch control.	<ul style="list-style-type: none"> Wheel alignment. Steering malfunction. 	Change Active Engine Brake selection in the vehicle information display to ON.
		No pitch control.	Brake system malfunction.	Refer to BRC-52 , " DTC Inspection Priority Chart ".
		No engine torque control on curves.	Certain roads, inclement weather or driving conditions.	System is functioning normally. Confirm the condition with the customer. Refer to DAS-191 , " Precautions for Chassis Control (Engine Brake, Active Ride, and Active Trace) ".

Active Trace Control

INFOID:000000011277457

NOTE:

- For the operational conditions of Active Trace Control, refer to [DAS-186](#), "[System Description - Active Trace Control](#)".
- Perform the "Self Diagnostic Result" using CONSULT before the symptom diagnosis. Perform the trouble diagnosis if any DTC is detected.

DAS

CHASSIS CONTROL

< SYMPTOM DIAGNOSIS >

[CHASSIS CONTROL]

Symptom		Possible cause	Inspection item	
Active Trace Control inoperative/ineffective.	No Active Trace Control assist.	Active Trace Control selected OFF in the vehicle information display.	Change Active Trace Control selection in the vehicle information display to ON.	
		VDC OFF switch is engaged.	Turn VDC OFF switch to the OFF position.	
		Certain roads, inclement weather or driving conditions.	System is functioning normally. Confirm the condition with the customer. Refer to DAS-191, "Precautions for Chassis Control (Engine Brake, Active Ride, and Active Trace)" .	
		<ul style="list-style-type: none"> • Road wheel tire condition is abnormal. • Road wheel tire size is abnormal. 	Check the road wheel tire.	
	Excessive lag on turns.	On turns	Wheel alignment	Repair alignment malfunction.
		While zigzagging.	Steering malfunction.	"STEERING WHEEL TURNING FORCE IS HEAVY OR LIGHT" STC-31, "Description" .
With quick lane change.		Certain roads, inclement weather or driving conditions.	System is functioning normally. Confirm the condition with the customer. Refer to DAS-191, "Precautions for Chassis Control (Engine Brake, Active Ride, and Active Trace)" .	

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[CHASSIS CONTROL]

NORMAL OPERATING CONDITION

Description

INFOID:000000011277458

CHASSIS CONTROL

- Chassis Control will not provide all the necessary controls to replace driver intervention. It is not designed to prevent loss of control. It is the driver's responsibility to stay alert, drive safely, keep the vehicle in the traveling lane, and be in control of vehicle at all times.
- Chassis Control is primarily intended for use on well-developed freeways or highways. It may not perform satisfactorily in certain roads, weather or driving conditions.
- Using Chassis Control under some conditions of road, corner or severe weather could lead to an unexpected system operation. In such conditions, driver needs to correct the vehicle's direction with driver's steering operation to avoid accidents.
- When Chassis Control is operating, avoid excessive or sudden steering maneuvers. Otherwise, you could lose control of the vehicle.
- Engine Brake Control is designed to enhance braking feel and traceability at corners.
- Active Ride Control is designed to enhance handling and drive comfort.
- Active Trace Control is designed to enhance traceability at corners and smooth vehicle movement for more confident driving.
- Chassis Control may not function properly under the following conditions:
 - During bad weather (rain, fog, snow, wind, etc.).
 - When driving on slippery roads, such as on ice or snow, etc.
 - When driving on winding or uneven roads.
 - When driving with a tire that is not within normal tire conditions (for example, tire wear, low tire pressure, installation of spare tire, tire chains, non-standard wheels).
 - When the vehicle is equipped with non-original steering parts or suspension parts.
- The functions of Chassis Control may or may not operate properly under the following conditions:
 - On roads covered with water, dirt or snow, etc.
 - On roads where there are sharp curves.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
P


DAS

REMOVAL AND INSTALLATION

CHASSIS CONTROL MODULE

Exploded View

INFOID:000000011277459

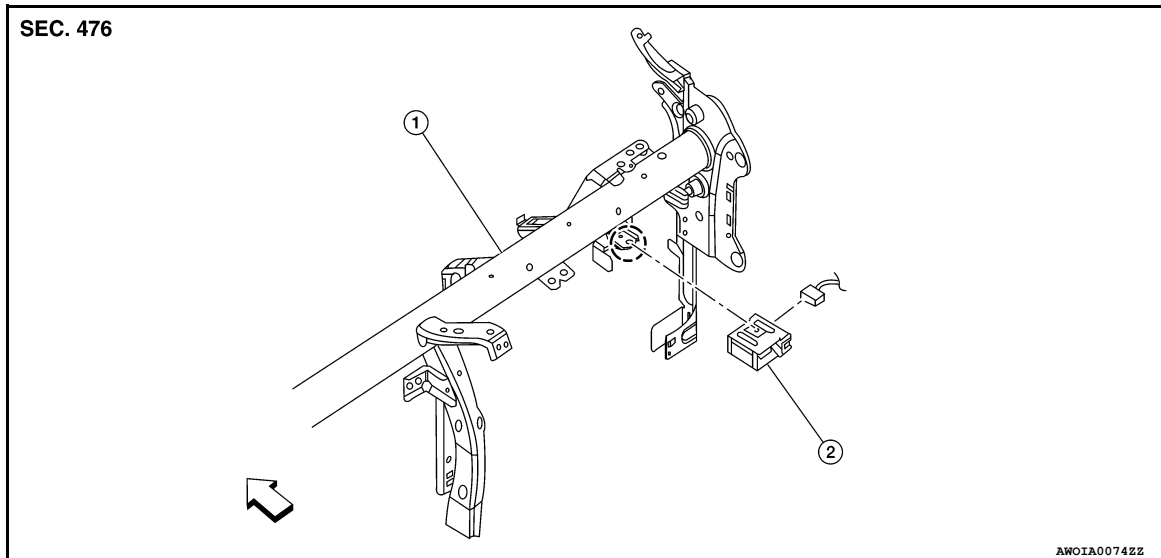

1. Steering member

2. Chassis control module

← Front

Removal and Installation

INFOID:000000011277460

REMOVAL

NOTE:

If the chassis control module is replaced, user registration information is erased, and all setting items for Nissan InTuition related parts are erased.

1. Remove the glove box assembly. Refer to [IP-24, "Removal and Installation"](#).
2. Release the pawl and remove the chassis control module.

CAUTION:

Do not drop the chassis control module.

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

When replacing the chassis control module, perform the configuration of chassis control module. Refer to [DAS-215, "Work Procedure"](#).