

ITS Communication Circuit	45	Diagnosis Procedure	66
MAIN LINE BETWEEN IPDM-E AND DLC CIRCUIT	47	CAN COMMUNICATION CIRCUIT	67
Diagnosis Procedure	47	Diagnosis Procedure	67
MAIN LINE BETWEEN DLC AND M&A CIR- CUIT	48	ITS COMMUNICATION CIRCUIT	69
Diagnosis Procedure	48	Diagnosis Procedure	69
MAIN LINE BETWEEN RDR-L AND LASER CIRCUIT	49	CAN SYSTEM (TYPE 1)	
Diagnosis Procedure	49	DTC/CIRCUIT DIAGNOSIS	71
ECM BRANCH LINE CIRCUIT	50	MAIN LINE BETWEEN IPDM-E AND DLC CIRCUIT	71
Diagnosis Procedure	50	Diagnosis Procedure	71
ABS BRANCH LINE CIRCUIT	51	MAIN LINE BETWEEN DLC AND M&A CIR- CUIT	72
Diagnosis Procedure	51	Diagnosis Procedure	72
IPDM-E BRANCH LINE CIRCUIT	52	ECM BRANCH LINE CIRCUIT	73
Diagnosis Procedure	52	Diagnosis Procedure	73
TCM BRANCH LINE CIRCUIT	53	ABS BRANCH LINE CIRCUIT	74
Diagnosis Procedure	53	Diagnosis Procedure	74
A-BAG BRANCH LINE CIRCUIT	54	IPDM-E BRANCH LINE CIRCUIT	75
Diagnosis Procedure	54	Diagnosis Procedure	75
DLC BRANCH LINE CIRCUIT	55	A-BAG BRANCH LINE CIRCUIT	76
Diagnosis Procedure	55	Diagnosis Procedure	76
EPS BRANCH LINE CIRCUIT	56	DLC BRANCH LINE CIRCUIT	77
Diagnosis Procedure	56	Diagnosis Procedure	77
ICC BRANCH LINE CIRCUIT	57	EPS BRANCH LINE CIRCUIT	78
Diagnosis Procedure	57	Diagnosis Procedure	78
STRG BRANCH LINE CIRCUIT	58	STRG BRANCH LINE CIRCUIT	79
Diagnosis Procedure	58	Diagnosis Procedure	79
TCU BRANCH LINE CIRCUIT	59	M&A BRANCH LINE CIRCUIT	80
Diagnosis Procedure	59	Diagnosis Procedure	80
AV BRANCH LINE CIRCUIT	60	BCM BRANCH LINE CIRCUIT	81
Diagnosis Procedure	60	Diagnosis Procedure	81
HVAC BRANCH LINE CIRCUIT	61	CAN COMMUNICATION CIRCUIT	82
Diagnosis Procedure	61	Diagnosis Procedure	82
M&A BRANCH LINE CIRCUIT	62	CAN SYSTEM (TYPE 2)	
Diagnosis Procedure	62	DTC/CIRCUIT DIAGNOSIS	84
BCM BRANCH LINE CIRCUIT	63	MAIN LINE BETWEEN IPDM-E AND DLC CIRCUIT	84
Diagnosis Procedure	63	Diagnosis Procedure	84
RDR-L BRANCH LINE CIRCUIT	64	MAIN LINE BETWEEN DLC AND M&A CIR- CUIT	85
Diagnosis Procedure	64	Diagnosis Procedure	85
RDR-R BRANCH LINE CIRCUIT	65	ECM BRANCH LINE CIRCUIT	86
Diagnosis Procedure	65	Diagnosis Procedure	86
LASER BRANCH LINE CIRCUIT	66		

ICC BRANCH LINE CIRCUIT	128	ICC BRANCH LINE CIRCUIT	149
Diagnosis Procedure	128	Diagnosis Procedure	149
STRG BRANCH LINE CIRCUIT	129	STRG BRANCH LINE CIRCUIT	150
Diagnosis Procedure	129	Diagnosis Procedure	150
AV BRANCH LINE CIRCUIT	130	AV BRANCH LINE CIRCUIT	151
Diagnosis Procedure	130	Diagnosis Procedure	151
M&A BRANCH LINE CIRCUIT	131	HVAC BRANCH LINE CIRCUIT	152
Diagnosis Procedure	131	Diagnosis Procedure	152
BCM BRANCH LINE CIRCUIT	132	M&A BRANCH LINE CIRCUIT	153
Diagnosis Procedure	132	Diagnosis Procedure	153
RDR-L BRANCH LINE CIRCUIT	133	BCM BRANCH LINE CIRCUIT	154
Diagnosis Procedure	133	Diagnosis Procedure	154
RDR-R BRANCH LINE CIRCUIT	134	RDR-L BRANCH LINE CIRCUIT	155
Diagnosis Procedure	134	Diagnosis Procedure	155
CAN COMMUNICATION CIRCUIT	135	RDR-R BRANCH LINE CIRCUIT	156
Diagnosis Procedure	135	Diagnosis Procedure	156
ITS COMMUNICATION CIRCUIT	137	CAN COMMUNICATION CIRCUIT	157
Diagnosis Procedure	137	Diagnosis Procedure	157
CAN SYSTEM (TYPE 5)		ITS COMMUNICATION CIRCUIT	159
DTC/CIRCUIT DIAGNOSIS	139	Diagnosis Procedure	159
MAIN LINE BETWEEN IPDM-E AND DLC		CAN SYSTEM (TYPE 6)	
CIRCUIT	139	DTC/CIRCUIT DIAGNOSIS	161
Diagnosis Procedure	139	MAIN LINE BETWEEN IPDM-E AND DLC	
MAIN LINE BETWEEN DLC AND M&A CIR-		CIRCUIT	161
CUIT	140	Diagnosis Procedure	161
Diagnosis Procedure	140	MAIN LINE BETWEEN DLC AND M&A CIR-	
MAIN LINE BETWEEN RDR-L AND LASER		CUIT	162
CIRCUIT	141	Diagnosis Procedure	162
Diagnosis Procedure	141	MAIN LINE BETWEEN RDR-L AND LASER	
ECM BRANCH LINE CIRCUIT	142	CIRCUIT	163
Diagnosis Procedure	142	Diagnosis Procedure	163
ABS BRANCH LINE CIRCUIT	143	ECM BRANCH LINE CIRCUIT	164
Diagnosis Procedure	143	Diagnosis Procedure	164
IPDM-E BRANCH LINE CIRCUIT	144	ABS BRANCH LINE CIRCUIT	165
Diagnosis Procedure	144	Diagnosis Procedure	165
TCM BRANCH LINE CIRCUIT	145	IPDM-E BRANCH LINE CIRCUIT	166
Diagnosis Procedure	145	Diagnosis Procedure	166
A-BAG BRANCH LINE CIRCUIT	146	TCM BRANCH LINE CIRCUIT	167
Diagnosis Procedure	146	Diagnosis Procedure	167
DLC BRANCH LINE CIRCUIT	147	A-BAG BRANCH LINE CIRCUIT	168
Diagnosis Procedure	147	Diagnosis Procedure	168
EPS BRANCH LINE CIRCUIT	148	DLC BRANCH LINE CIRCUIT	169
Diagnosis Procedure	148	Diagnosis Procedure	169

EPS BRANCH LINE CIRCUIT	170	ABS BRANCH LINE CIRCUIT	188	A
Diagnosis Procedure	170	Diagnosis Procedure	188	
ICC BRANCH LINE CIRCUIT	171	IPDM-E BRANCH LINE CIRCUIT	189	B
Diagnosis Procedure	171	Diagnosis Procedure	189	
STRG BRANCH LINE CIRCUIT	172	TCM BRANCH LINE CIRCUIT	190	C
Diagnosis Procedure	172	Diagnosis Procedure	190	
TCU BRANCH LINE CIRCUIT	173	A-BAG BRANCH LINE CIRCUIT	191	D
Diagnosis Procedure	173	Diagnosis Procedure	191	
AV BRANCH LINE CIRCUIT	174	DLC BRANCH LINE CIRCUIT	192	E
Diagnosis Procedure	174	Diagnosis Procedure	192	
M&A BRANCH LINE CIRCUIT	175	EPS BRANCH LINE CIRCUIT	193	F
Diagnosis Procedure	175	Diagnosis Procedure	193	
BCM BRANCH LINE CIRCUIT	176	ICC BRANCH LINE CIRCUIT	194	G
Diagnosis Procedure	176	Diagnosis Procedure	194	
RDR-L BRANCH LINE CIRCUIT	177	STRG BRANCH LINE CIRCUIT	195	H
Diagnosis Procedure	177	Diagnosis Procedure	195	
RDR-R BRANCH LINE CIRCUIT	178	TCU BRANCH LINE CIRCUIT	196	I
Diagnosis Procedure	178	Diagnosis Procedure	196	
LASER BRANCH LINE CIRCUIT	179	AV BRANCH LINE CIRCUIT	197	J
Diagnosis Procedure	179	Diagnosis Procedure	197	
CAN COMMUNICATION CIRCUIT	180	HVAC BRANCH LINE CIRCUIT	198	K
Diagnosis Procedure	180	Diagnosis Procedure	198	
ITS COMMUNICATION CIRCUIT	182	M&A BRANCH LINE CIRCUIT	199	L
Diagnosis Procedure	182	Diagnosis Procedure	199	
CAN SYSTEM (TYPE 7)				
DTC/CIRCUIT DIAGNOSIS	184	BCM BRANCH LINE CIRCUIT	200	
		Diagnosis Procedure	200	
MAIN LINE BETWEEN IPDM-E AND DLC CIRCUIT	184	RDR-L BRANCH LINE CIRCUIT	201	
Diagnosis Procedure	184	Diagnosis Procedure	201	
MAIN LINE BETWEEN DLC AND M&A CIRCUIT	185	RDR-R BRANCH LINE CIRCUIT	202	
Diagnosis Procedure	185	Diagnosis Procedure	202	
MAIN LINE BETWEEN RDR-L AND LASER CIRCUIT	186	LASER BRANCH LINE CIRCUIT	203	LAN
Diagnosis Procedure	186	Diagnosis Procedure	203	
ECM BRANCH LINE CIRCUIT	187	CAN COMMUNICATION CIRCUIT	204	N
Diagnosis Procedure	187	Diagnosis Procedure	204	
		ITS COMMUNICATION CIRCUIT	206	O
		Diagnosis Procedure	206	
				P

HOW TO USE THIS MANUAL

HOW TO USE THIS SECTION

Information

INFOID:0000000012782523

- “CAN FUNDAMENTAL” of LAN Section describes the basic knowledge of the CAN communication system and the method of trouble diagnosis.
- For information peculiar to a vehicle and inspection procedure, refer to “CAN”.

PRECAUTION

PRECAUTIONS

Precautions for Trouble Diagnosis

INFOID:000000012782524

CAUTION:

Follow the instructions listed below. Failure to do this may cause damage to parts:

- Never apply 7.0 V or more to the measurement terminal.
- Use a tester with open terminal voltage of 7.0 V or less.
- Turn the ignition switch OFF and disconnect the battery cable from the negative terminal when checking the harness.


Precautions for Harness Repair

INFOID:000000012782525

- Solder the repaired area and wrap tape around the soldered area.

NOTE:


A fray of twisted lines must be within 110 mm (4.33 in).

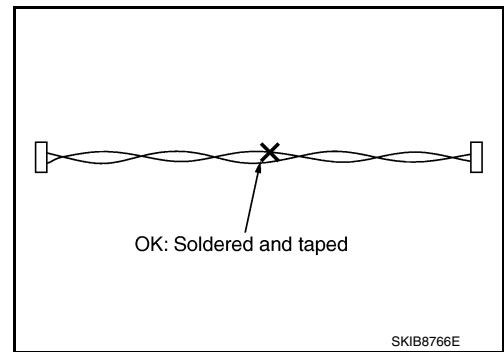

- Bypass connection is never allowed at the repaired area.

NOTE:

Bypass connection may cause CAN communication error. The spliced wire becomes separated and the characteristics of twisted line are lost.

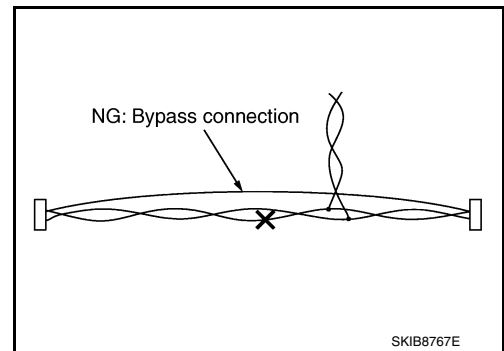

- Replace the applicable harness as an assembly if error is detected on the shield lines of CAN communication line.

LAN

SYSTEM DESCRIPTION

SYSTEM

CAN COMMUNICATION SYSTEM

CAN COMMUNICATION SYSTEM : System Description

INFOID:000000012782526


CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DIAG ON CAN

DIAG ON CAN : System Description

INFOID:000000012782527

SYSTEM DIAGRAM

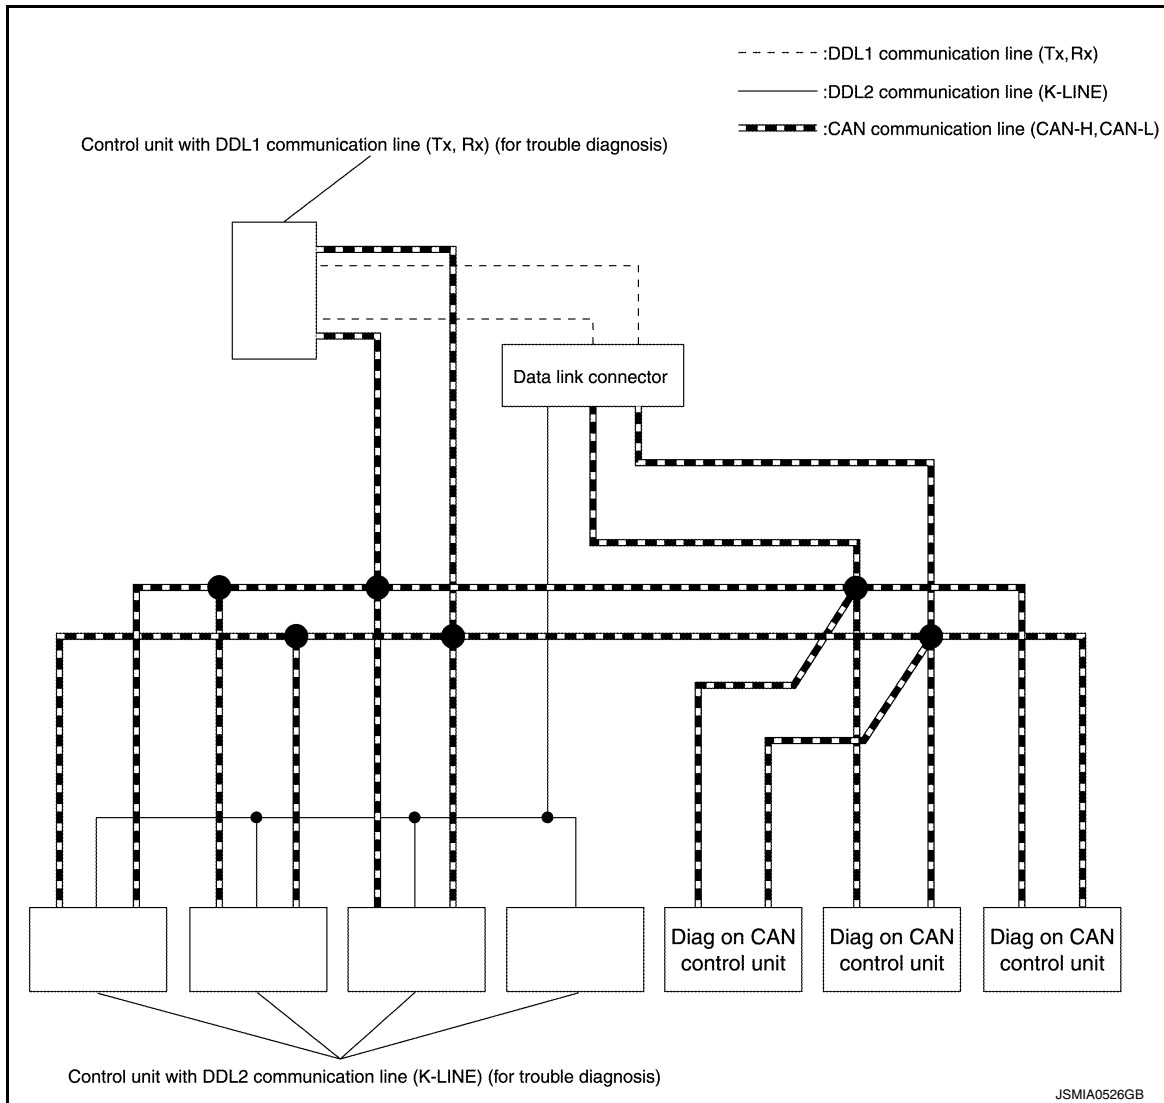

SYSTEM

< SYSTEM DESCRIPTION >

[CAN FUNDAMENTAL]

Name	Harness	Description
DDL1	Tx Rx	For communications with the diagnostic tool. (CAN-H and CAN-L are used for controlling)
DDL2	K-LINE	For communications with the diagnostic tool. (CAN-H and CAN-L are used for controlling)
Diag on CAN	CAN-H CAN-L	For communications with the diagnostic tool. (CAN-H and CAN-L are also used for control and diagnoses.)

DESCRIPTION

“Diag on CAN” is a diagnosis method which uses the CAN communication line for the communication between the control unit and the diagnostic tool.

A
B
C
D
E
F
G
H
I
J
K
L


LAN

N
O
P

TROUBLE DIAGNOSIS

Component Description

INFOID:000000012782528

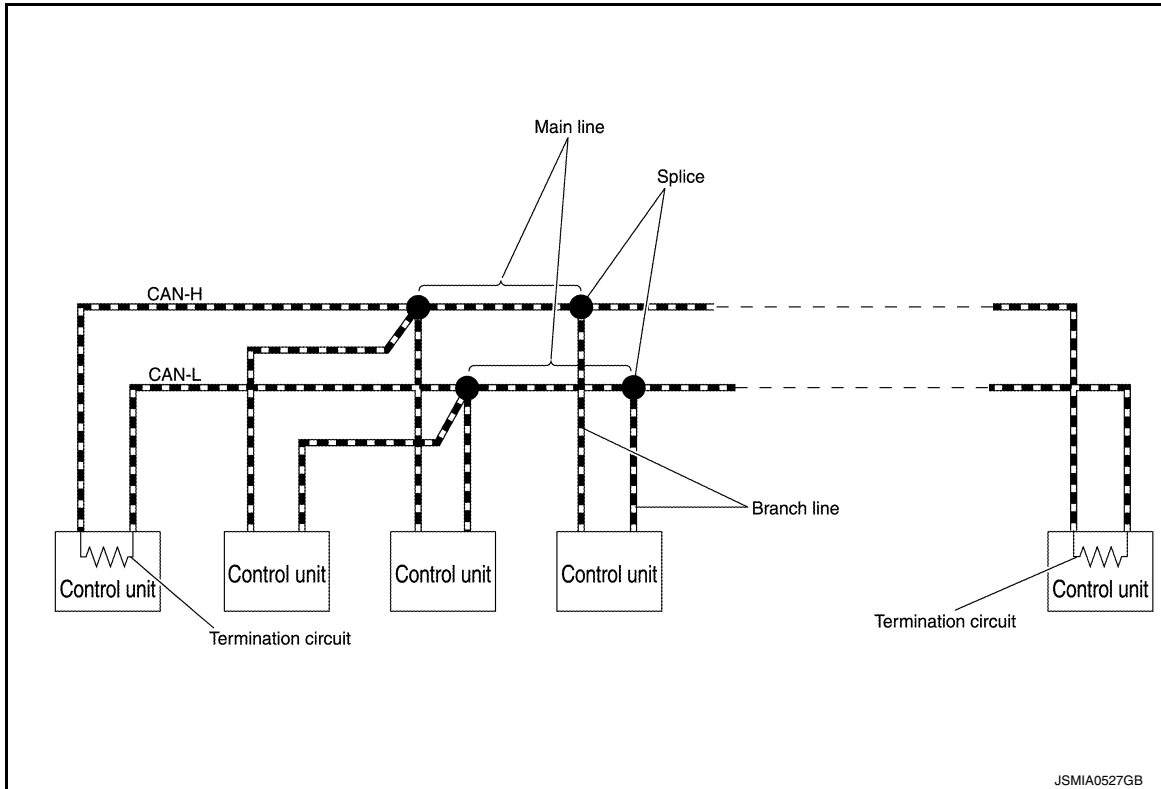

Component	Description
Main line	CAN communication line between splices
Branch line	CAN communication line between splice and a control unit
Splice	A point connecting a branch line with a main line
Termination circuit	Circuit connected across the CAN communication system. (Resistor)

Condition of Error Detection

INFOID:000000012782529

DTC (e.g. U1000 and U1001) of CAN communication is indicated on SELF-DIAG RESULTS on CONSULT if a CAN communication signal is not transmitted or received between units for 2 seconds or more.

CAN COMMUNICATION SYSTEM ERROR

- CAN communication line open (CAN-H, CAN-L, or both)
- CAN communication line short (ground, between CAN communication lines, other harnesses)
- Error of CAN communication control circuit of the unit connected to CAN communication line

WHEN DTC OF CAN COMMUNICATION IS INDICATED EVEN THOUGH CAN COMMUNICATION SYSTEM IS NORMAL

- Removal/installation of parts: Error may be detected when removing and installing CAN communication unit and related parts while turning the ignition switch ON. (A DTC except for CAN communication may be detected.)
- Fuse blown out (removed): CAN communication of the unit may cease.
- Voltage drop: Error may be detected if voltage drops due to discharged battery when turning the ignition switch ON (Depending on the control unit which carries out CAN communication).
- Error may be detected if the power supply circuit of the control unit, which carries out CAN communication, malfunctions (Depending on the control unit which carries out CAN communication).
- Error may be detected if reprogramming is not completed normally.

NOTE:

CAN communication system is normal if DTC of CAN communication is indicated on SELF-DIAG RESULTS of CONSULT under the above conditions. Erase the memory of the self-diagnosis of each control unit.

TROUBLE DIAGNOSIS

< SYSTEM DESCRIPTION >

[CAN FUNDAMENTAL]

Symptom When Error Occurs in CAN Communication System

INFOID:000000012782530


In CAN communication system, multiple control units mutually transmit and receive signals. Each control unit cannot transmit and receive signals if any error occurs on CAN communication line. Under this condition, multiple control units related to the root cause malfunction or go into fail-safe mode.

ERROR EXAMPLE

NOTE:

Each vehicle differs in symptom of each control unit under fail-safe mode and CAN communication line wiring.

Example: Main Line Between Data Link Connector and ABS Actuator and Electric Unit (Control Unit) Open Circuit

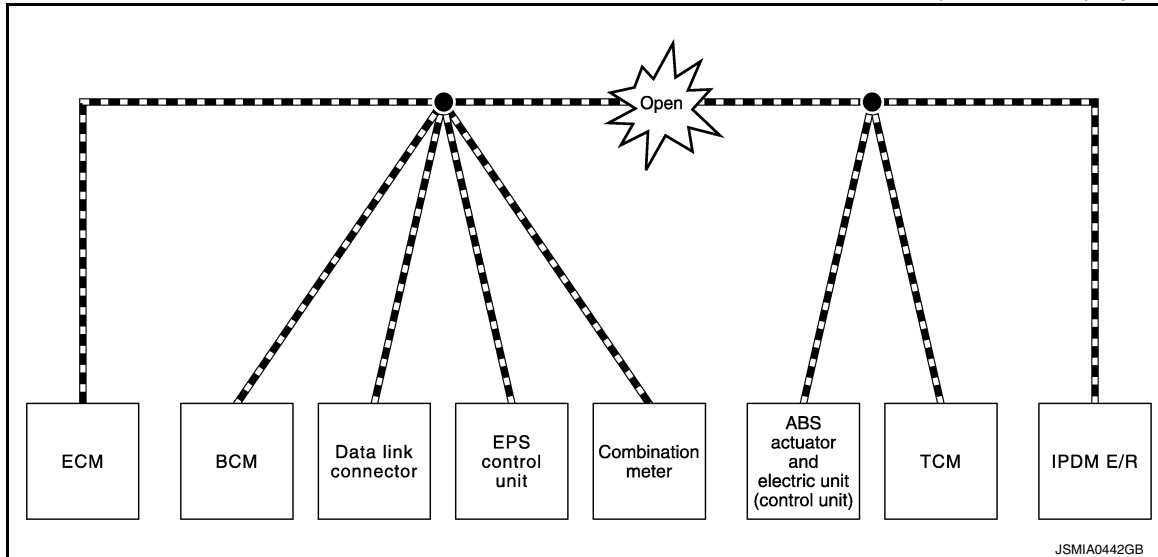

Unit name	Major symptom
ECM	Engine torque limiting is affected, and shift harshness increases.
BCM	<ul style="list-style-type: none"> • Reverse warning buzzer does not sound. • The front wiper moves under continuous operation mode even though the front wiper switch being in the intermittent position.
EPS control unit	The steering effort increases.
Combination meter	<ul style="list-style-type: none"> • The shift position indicator and OD OFF indicator turn OFF. • The speedometer is inoperative. • The odo/trip meter stops.
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	When the ignition switch is ON, <ul style="list-style-type: none"> • The headlamps (Lo) turn ON. • The cooling fan continues to rotate.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P


LAN

TROUBLE DIAGNOSIS

[CAN FUNDAMENTAL]

< SYSTEM DESCRIPTION >

Example: TCM Branch Line Open Circuit

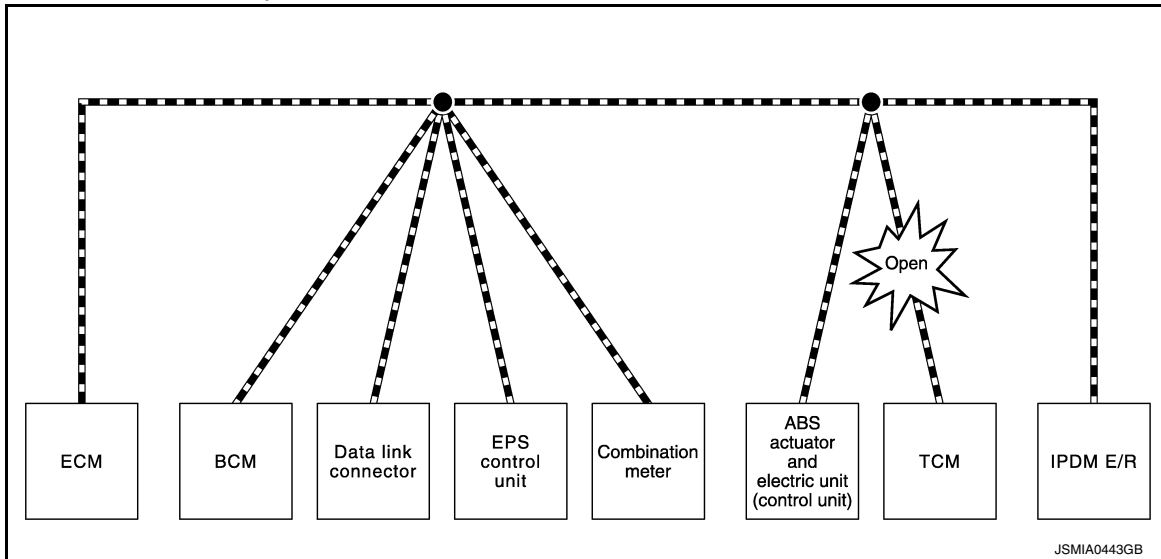


Unit name	Major symptom
ECM	Engine torque limiting is affected, and shift harshness increases.
BCM	Reverse warning buzzer does not sound.
EPS control unit	Normal operation.
Combination meter	<ul style="list-style-type: none"> Shift position indicator and O/D OFF indicator turn OFF. Warning lamps turn ON.
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	Normal operation.

NOTE:

The model (all control units on CAN communication system are Diag on CAN) cannot perform CAN diagnosis with CONSULT if the following error occurs. The error is judged by the symptom.

Error	Difference of symptom
Data link connector branch line open circuit	Normal operation.
CAN-H, CAN-L harness short-circuit	Most of the control units which are connected to the CAN communication system enter fail-safe mode or are deactivated.

Example: Data Link Connector Branch Line Open Circuit

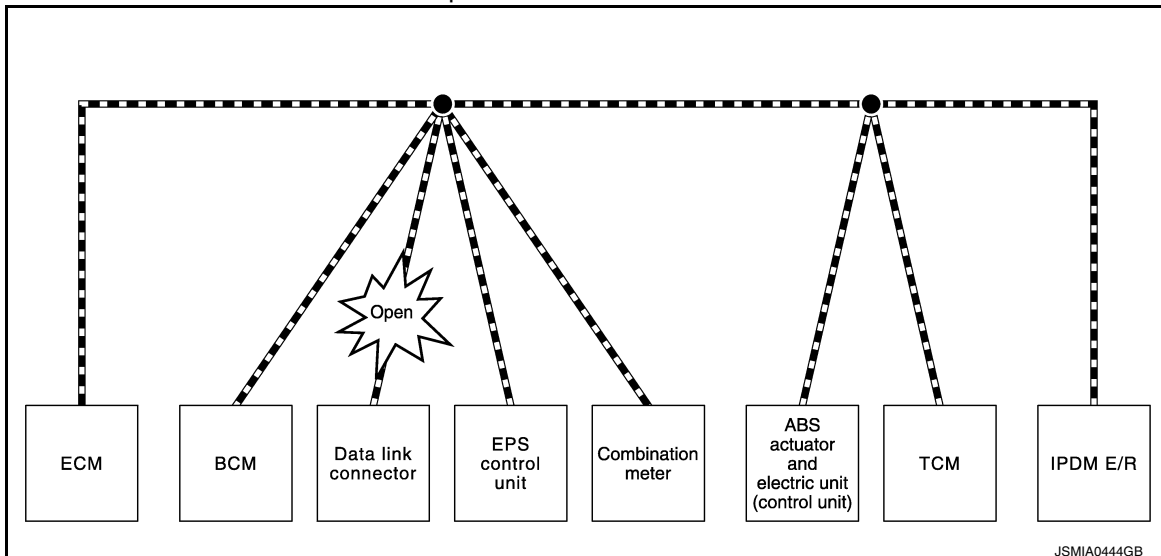

TROUBLE DIAGNOSIS

< SYSTEM DESCRIPTION >


[CAN FUNDAMENTAL]

Unit name	Major symptom
ECM	Normal operation.
BCM	
EPS control unit	
Combination meter	
ABS actuator and electric unit (control unit)	
TCM	
IPDM E/R	

NOTE:

When data link connector branch line is open, transmission and reception of CAN communication signals are not affected. Therefore, no symptoms occur. However, be sure to repair malfunctioning circuit.

Example: CAN-H, CAN-L Harness Short Circuit

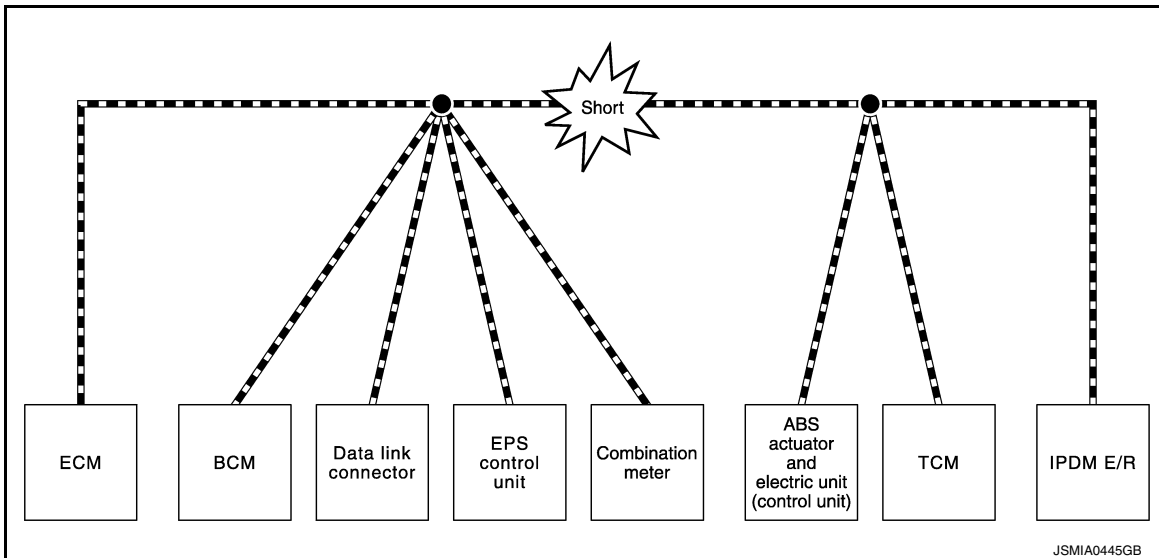

Unit name	Major symptom
ECM	<ul style="list-style-type: none"> • Engine torque limiting is affected, and shift harshness increases. • Engine speed drops.
BCM	<ul style="list-style-type: none"> • Reverse warning buzzer does not sound. • The front wiper moves under continuous operation mode even though the front wiper switch being in the intermittent position. • The room lamp does not turn ON. • The engine does not start (if an error or malfunction occurs while turning the ignition switch OFF.) • The steering lock does not release (if an error or malfunction occurs while turning the ignition switch OFF.)
EPS control unit	The steering effort increases.
Combination meter	<ul style="list-style-type: none"> • The tachometer and the speedometer do not move. • Warning lamps turn ON. • Indicator lamps do not turn ON.
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	When the ignition switch is ON, <ul style="list-style-type: none"> • The headlamps (Lo) turn ON. • The cooling fan continues to rotate.

CAN Diagnosis with CONSULT

INFOID:000000012782531

CAN diagnosis on CONSULT extracts the root cause by receiving the following information.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

TROUBLE DIAGNOSIS

[CAN FUNDAMENTAL]

< SYSTEM DESCRIPTION >

- Response to the system call
- Control unit diagnosis information
- Self-diagnosis
- CAN diagnostic support monitor

Self-Diagnosis

INFOID:0000000012782532

If communication signals cannot be transmitted or received among control units communicating via CAN communication line, CAN communication-related DTC is displayed on the CONSULT “Self Diagnostic Result” screen.

NOTE:

The following table shows examples of CAN communication-related DTC. For other DTC, refer to the applicable sections.

DTC	Self-diagnosis item (CONSULT indication)	DTC detection condition		Inspection/Action
U1000	CAN COMM CIRCUIT	ECM	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) for 2 seconds or more.	Start the inspection. Refer to the applicable section of the indicated control unit.
		Except for ECM	When a control unit (except for ECM) is not transmitting or receiving CAN communication signal for 2 seconds or more.	
U1001	CAN COMM CIRCUIT	When ECM is not transmitting or receiving CAN communication signal other than OBD (emission-related diagnosis) for 2 seconds or more.		
U1002	SYSTEM COMM	When a control unit is not transmitting or receiving CAN communication signal for 2 seconds or less.		
U1010	CONTROL UNIT(CAN)	When an error is detected during the initial diagnosis for CAN controller of each control unit.		

CAN Diagnostic Support Monitor

INFOID:0000000012782533

MONITOR ITEM (CONSULT)

Example: CAN DIAG SUPPORT MNTR indication

Without PAST				With PAST			
BCM				ENGINE			
MONITOR ITEM	PRESENT	PAST		MONITOR ITEM	PRESENT	PAST	
INITIAL DIAG	OK	-		TRANSMIT DIAG	OK	OK	
TRANSMIT DIAG	OK	-		VDC/TCS/ABS	OK	5	
ECM	OK	-		METER/M&A	Not diagnosed	-	
METER/M&A	OK	-		BCM/SEC	OK	OK	
TCM	OK	-		ICC	Not diagnosed	-	
IPDM E/R	OK	-		HVAC	Not diagnosed	-	
I-KEY	OK	-		TCM	OK	OK	
				EPS	OK	OK	
				IPDM E/R	OK	5	
				e4WD	Not diagnosed	-	
				AWD/4WD	Not diagnosed	-	

JSMIA0964GB

Without PAST

Item	PRESENT	Description
Initial diagnosis	OK	Normal at present
	NG	Control unit error (Except for some control units)

TROUBLE DIAGNOSIS

< SYSTEM DESCRIPTION >

[CAN FUNDAMENTAL]

Item	PRESENT	Description
Transmission diagnosis	OK	Normal at present
	UNKWN	Unable to transmit signals for 2 seconds or more.
		Diagnosis not performed
Control unit name (Reception diagnosis)	OK	Normal at present
	UNKWN	Unable to receive signals for 2 seconds or more.
		Diagnosis not performed
	No control unit for receiving signals. (No applicable optional parts)	

With PAST

Item	PRESENT	PAST	Description
Transmission diagnosis	OK	OK	Normal at present and in the past
		1 – 39	Normal at present, but unable to transmit signals for 2 seconds or more in the past. (The number indicates the number of ignition switch cycles from OFF to ON.)
	UNKWN	0	Unable to transmit signals for 2 seconds or more at present.
Control unit name (Reception diagnosis)	OK	OK	Normal at present and in the past
		1 – 39	Normal at present, but unable to receive signals for 2 seconds or more in the past. (The number indicates the number of ignition switch cycles from OFF to ON.)
	UNKWN	0	Unable to receive signals for 2 seconds or more at present.
	Not diagnosed	-	Diagnosis not performed.
No control unit for receiving signals. (No applicable optional parts)			

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

TROUBLE DIAGNOSIS

< SYSTEM DESCRIPTION >

[CAN FUNDAMENTAL]

How to Use CAN Communication Signal Chart


INFOID:000000012782534

The CAN communication signal chart lists the signals transmitted/received among control units. It is useful for detecting the root cause by finding a signal related to the symptom, and by checking transmission and reception unit.

Example: Tachometer does not move even though the engine rotates.

T: Transmit R: Receive


Signal name/Connecting unit	ECM	BCM	M&A	STRG	ABS	IPDM-E
A/C compressor feedback signal	T		R			
A/C compressor request signal	T					R
Accelerator pedal position signal	T				R	
Cooling fan motor operation signal	T					R
Engine coolant temperature signal	T		R			
Engine speed signal	T		R		R	
Fuel consumption monitor signal	T		R			
Malfunction indicator lamp signal	T		R			
A/C switch signal	R	T				
Ignition switch signal		T				R
Sleep/wake up signal		T	R			R

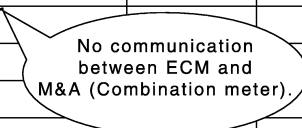

No communication between ECM and M&A (Combination meter).

↓

It indicates that an error occurs between ECM and Combination meter (Shaded area).

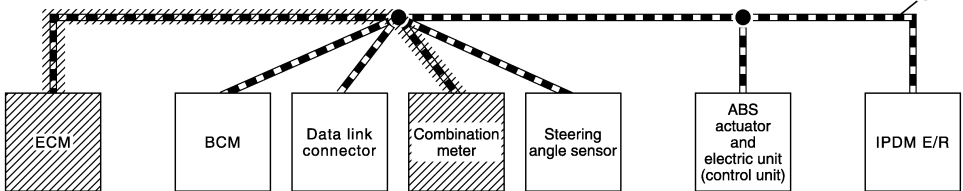

JSMIA0446GB


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Trouble Diagnosis Flow Chart

INFOID:0000000012782535

DESCRIPTION

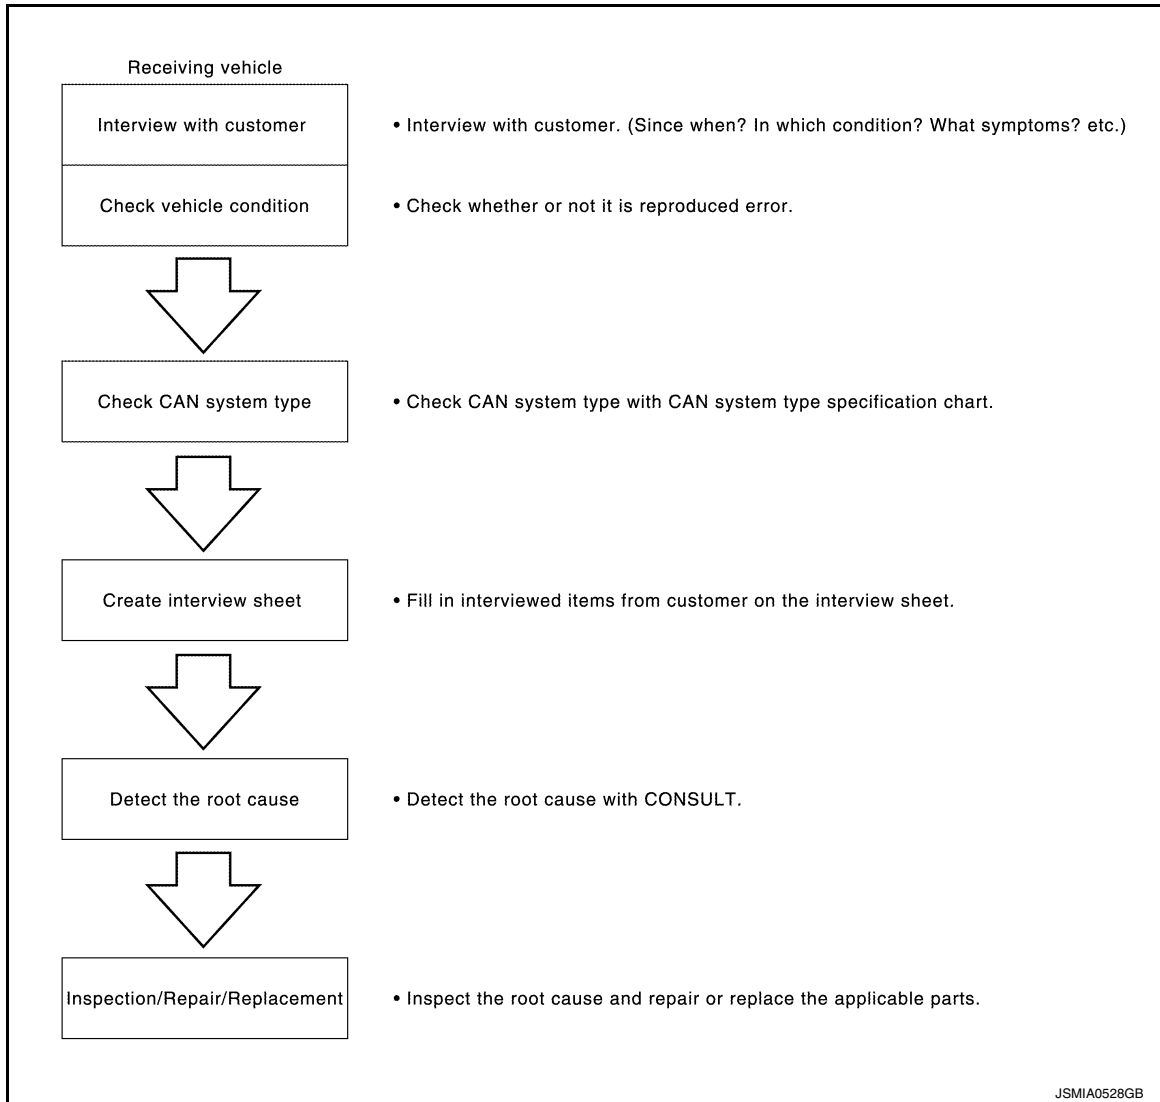

DETAIL OF TROUBLE DIAGNOSIS FLOW CHART

1. INTERVIEW WITH CUSTOMER

Interview with the customer is important to detect the root cause of CAN communication system errors and to understand vehicle condition and symptoms for proper trouble diagnosis.

Points in interview

- What: Parts name, system name
- When: Date, Frequency
- Where: Road condition, Place
- In what condition: Driving condition/environment
- Result: Symptom

Notes for checking error symptoms:

- Check normal units as well as error symptoms.
- Example: Circuit between ECM and the combination meter is judged normal if the customer indicates tachometer functions normally.

A
B
C
D
E
F
G
H
I
J
K
L

LAN


N
O
P

DIAGNOSIS AND REPAIR WORKFLOW

[CAN FUNDAMENTAL]

< BASIC INSPECTION >

- When a CAN communication system error is present, multiple control units may malfunction or go into fail-safe mode.
- Indication of the combination meter is important to detect the root cause because it is the most obvious to the customer, and it performs CAN communication with many units.

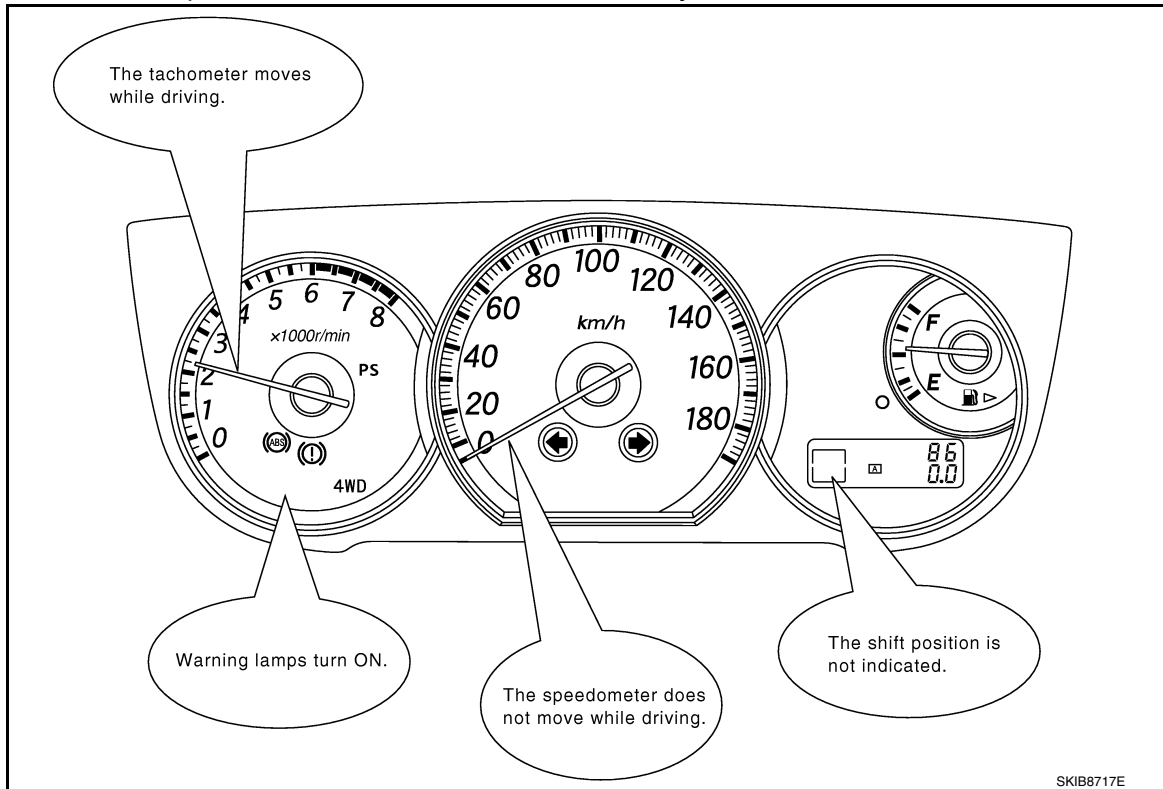

>> GO TO 2.

2. INSPECTION OF VEHICLE CONDITION

Check whether the symptom is reproduced or not.

NOTE:

Do not turn the ignition switch OFF or disconnect the 12V battery cable while reproducing the error. The error may temporarily correct itself, making it difficult to determine the root cause.

>> GO TO 3.

3. CHECK OF CAN SYSTEM TYPE (HOW TO USE CAN SYSTEM TYPE SPECIFICATION CHART)

Determine CAN system type based on vehicle equipment.

NOTE:

- This chart is used if CONSULT does not automatically recognize CAN system type.
- There are two styles for CAN system type specification charts. Depending on the number of available system types, either style A or style B may be used.
- CAN System Type Specification Chart (Style A)

NOTE:

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

CAN system type is easily checked with the vehicle equipment identification information shown in the chart.


Example:
Vehicle is equipped as follows: Wagon, AWD, VQ35DE, CVT, VDC, and Intelligent Key system. (○ shows an example of CAN system type.)

CAN System Specification Chart
Determine CAN system type from the following specification chart.


Body type	Wagon					
Axle	2WD			AWD		
Engine	QR25DE		VQ35DE			
Transmission	A/T		CVT			
Brake control	ABS				VDC	
Intelligent Key system		×		×		×
CAN system type	1	2	3	4	5	6
CAN communication control unit						
ECM	×	×	×	×	×	×
AWD control unit					×	×
Air bag diagnosis sensor unit	×	×	×	×	×	×
BCM	×	×	×	×	×	×
Intelligent Key unit		×		×		×
Steering angle sensor					×	×
EPS control unit	×	×	×	×	×	×
Combination meter	×	×	×	×	×	×
ABS actuator and electric unit (control unit)	×	×	×	×	×	×
TCM	×	×	×	×	×	×
IPDM E/R	×	×	×	×	×	×

× : Applicable

VEHICLE EQUIPMENT IDENTIFICATION INFORMATION
NOTE:
Check CAN system type from the vehicle shape and equipment.

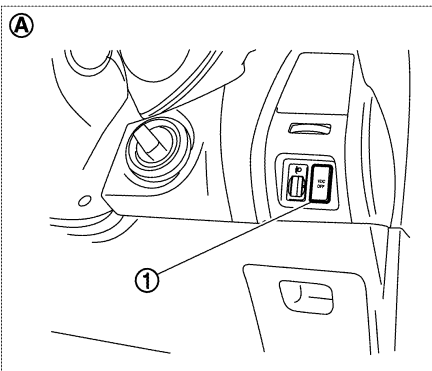

1. VDC OFF switch
A. With VDC

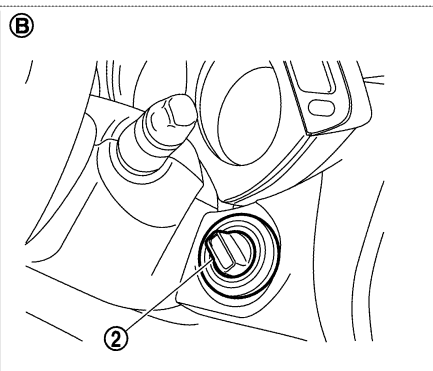

2. Ignition knob
B. With Intelligent Key system

For the above case, CAN system type is "6".

JSMIA0529GB

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

• CAN System Type Specification Chart (Style B)

NOTE:

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

CAN system type is easily checked with the vehicle equipment identification information shown in the chart.

Example:
Vehicle is equipped as follows: Sedan, 2WD, MR20DE, CVT, ABS, Active AFS, Intelligent Key system, Navigation system and Automatic drive positioner. (○ shows an example of CAN system type.)

CAN System Specification Chart
Refer to the specification as shown in the chart.

Body type	Sedan		
Axle	2WD		AWD
Engine	HR15DE	MR20DE	HR15DE
Transmission	A/T	CVT	A/T
Brake control	ABS		
Specification chart	XX.XX... SPECIFICATION CHART A.	XX.XX... SPECIFICATION CHART B.	XX.XX... SPECIFICATION CHART C.

×: Applicable

} Check the vehicle equipment with the vehicle identification number plate.
} Check the vehicle equipment.
} Select the applicable vehicle equipment. Refer to the specification chart.

SPECIFICATION CHART B
Determine CAN system type from the following specification chart.

Body type	Sedan											
Axle	2WD											
Engine	MR20DE											
Transmission	CVT											
Brake control	ABS											
Active AFS		×			×	×		×	×	×		
Intelligent Key system			×		×		×	×	×	×		
Navigation system				×		×		×		×		
Automatic drive positioner								×	×	×		
CAN system type	9	10	11	12	13	14	15	16	17	18	19	20
CAN communication control unit												
ECM	×	×	×	×	×	×	×	×	×	×	×	×
AFS control unit		×			×	×			×	×		×
BCM	×	×	×	×	×	×	×	×	×	×	×	×
IPDM E/R	×	×	×	×	×	×	×	×	×	×	×	×

×: Applicable

} Check the vehicle equipment.
} ← The number indicates the CAN system type of the vehicle.

VEHICLE EQUIPMENT IDENTIFICATION INFORMATION
NOTE:
Check CAN system type from the vehicle shape and equipment.

In the above example,

- Checking Xenon bulb and bending lamp lead to judge whether or not Active AFS is equipped.
- Checking the ignition knob leads to judge whether or not Intelligent Key system is equipped.
- Checking display and multifunction switch lead to judge whether or not Navigation system is equipped.
- Checking seat memory switch leads to judge whether or not Automatic drive positioner is equipped.

1. Bending lamp
4. Display
A. With active AFS
D. With automatic drive positioner

2. Xenon bulb
5. Multifunction switch
B. With Intelligent Key system

3. Ignition knob
6. Seat memory switch
C. With navigation system

For the above case, CAN system type is "20".

JSMIA0530GB

>> GO TO 4.

4. CREATE INTERVIEW SHEET

Fill out the symptom described by the customer, vehicle condition, and CAN system type on the interview sheet.

NOTE:

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

Interview Sheet (Example)

CAN Communication System Diagnosis Interview Sheet	
Date received:	3, Feb. 2006
Type: DBA-KG11	VIN No.: KG11-005040
Model: BDRARGZG11EDA-E-J-	
First registration: 10, Jan. 2001	Mileage: 62,140
CAN system type:	Type 19
Symptom (Results from interview with customer)	
<ul style="list-style-type: none">• Headlamps suddenly turn ON while driving the vehicle.• The engine does not restart after stopping the vehicle and turning the ignition switch OFF.• The cooling fan continues rotating while turning the ignition switch ON.	
Condition at inspection	
Error Symptom: <u>Present</u> / Past	
<p>The engine does not start. While turning the ignition switch ON,</p> <ul style="list-style-type: none">• The headlamps (Lo) turn ON, and the cooling fan continues rotating.• The interior lamp does not turn ON.	

JSMIA0531GB

>> GO TO 5.

5. DETECT THE ROOT CAUSE

CAN diagnosis function of CONSULT detects a root cause.

>> GO TO 6.

6. REPAIR OR REPLACE MALFUNCTIONING PART

Repair or replace malfunctioning parts identified by CAN diagnosis function of CONSULT.

CAN communication circuit>>Refer to [LAN-45, "CAN Communication Circuit"](#).
ITS communication circuit>>Refer to [LAN-45, "ITS Communication Circuit"](#).

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

HOW TO USE THIS SECTION

< HOW TO USE THIS MANUAL >

[CAN]

HOW TO USE THIS MANUAL

HOW TO USE THIS SECTION

Information

INFOID:0000000012782536

- “CAN” of LAN Section describes information peculiar to a vehicle and inspection procedures.
- For trouble diagnosis procedure, refer to [LAN-17. "Trouble Diagnosis Flow Chart"](#) of “CAN FUNDAMENTAL”.

Abbreviation List

INFOID:0000000012782537

Unit name abbreviations in CONSULT CAN diagnosis and in this section are as per the following list.

Abbreviation	Unit name
A-BAG	Air bag diagnosis sensor unit
ABS	ABS actuator and electric unit (control unit)
AV	AV control unit
BCM	BCM
DLC	Data link connector
ECM	ECM
EPS	EPS control unit
HVAC	A/C auto amp.
ICC	ADAS control unit
IPDM-E	IPDM E/R
LASER	ICC sensor
M&A	Combination meter
RDR-L	Side reader LH
RDR-R	Side reader RH
STRG	Steering angle sensor
TCM	TCM
TCU	TCU

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000012782538

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, it is recommended that all maintenance and repair be performed by an authorized NISSAN/INFINITI dealer.
- Improper repair, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery or batteries, and wait at least three minutes before performing any service.

Precautions for Trouble Diagnosis

INFOID:000000012782539

CAUTION:

Follow the instructions listed below. Failure to do this may cause damage to parts:

- Never apply 7.0 V or more to the measurement terminal.
- Use a tester with open terminal voltage of 7.0 V or less.
- Turn the ignition switch OFF and disconnect the battery cable from the negative terminal when checking the harness.


Precautions for Harness Repair

INFOID:000000012782540

- Solder the repaired area and wrap tape around the soldered area.

NOTE:

A fray of twisted lines must be within 110 mm (4.33 in).

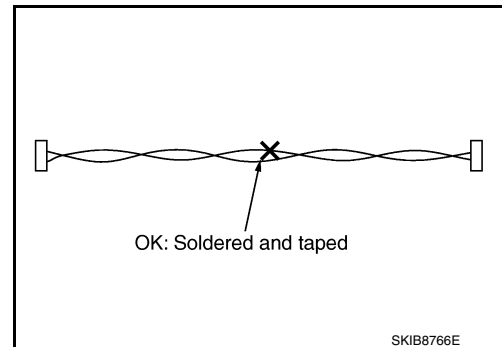

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

PRECAUTIONS


[CAN]

< PRECAUTION >

- Bypass connection is never allowed at the repaired area.

NOTE:

Bypass connection may cause CAN communication error. The spliced wire becomes separated and the characteristics of twisted line are lost.

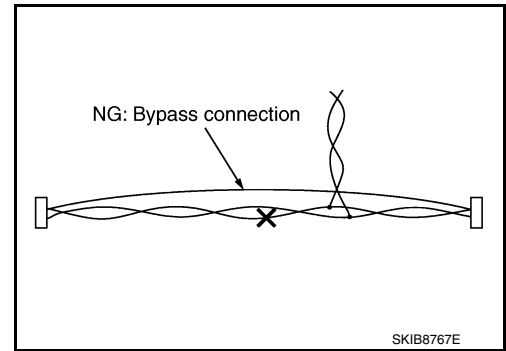

- Replace the applicable harness as an assembly if error is detected on the shield lines of CAN communication line.

COMPONENT PARTS

< SYSTEM DESCRIPTION >


[CAN]

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:0000000012782541

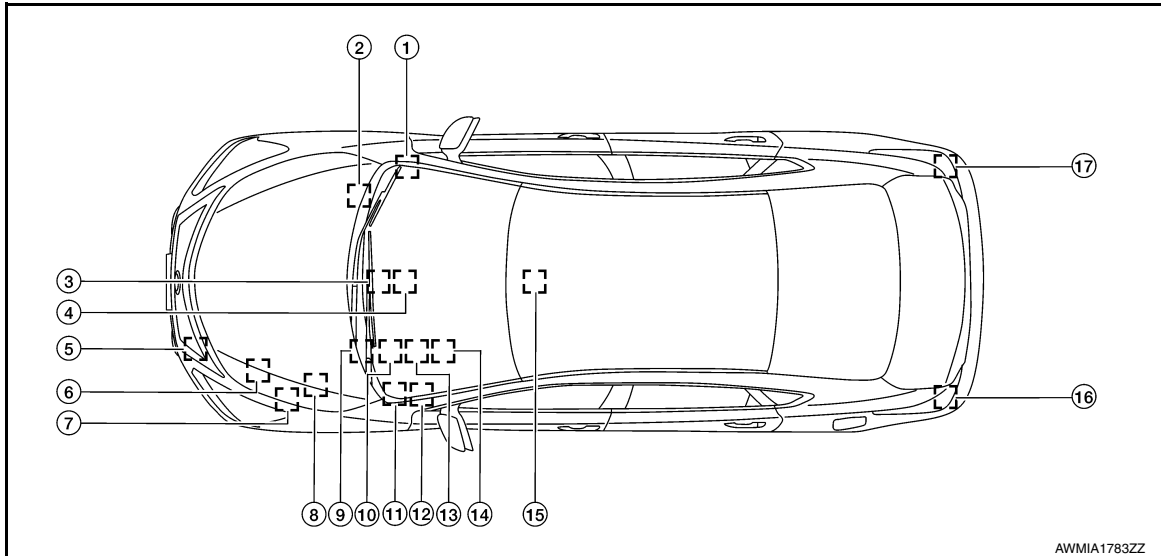

- | | | |
|-----------------------|--|-----------------------------------|
| 1. TCU | 2. ABS actuator and electric unit (control unit) | 3. AV control uni |
| 4. A/C auto amp. | 5. ICC sensor | 6. ECM |
| 7. IPDM E/R | 8. TCM | 9. Data link connector |
| 10. EPS control unit | 11. ADAS control unit | 12. BCM |
| 13. Combination meter | 14. Steering angle sensor | 15. Air bag diagnosis sensor unit |
| 16. Side rader LH | 17. Side rader RH | |

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

< SYSTEM DESCRIPTION >

SYSTEM


CAN COMMUNICATION SYSTEM

CAN COMMUNICATION SYSTEM : System Description

INFOID:000000013390195


SYSTEM DIAGRAM

Without FEB OR BSW

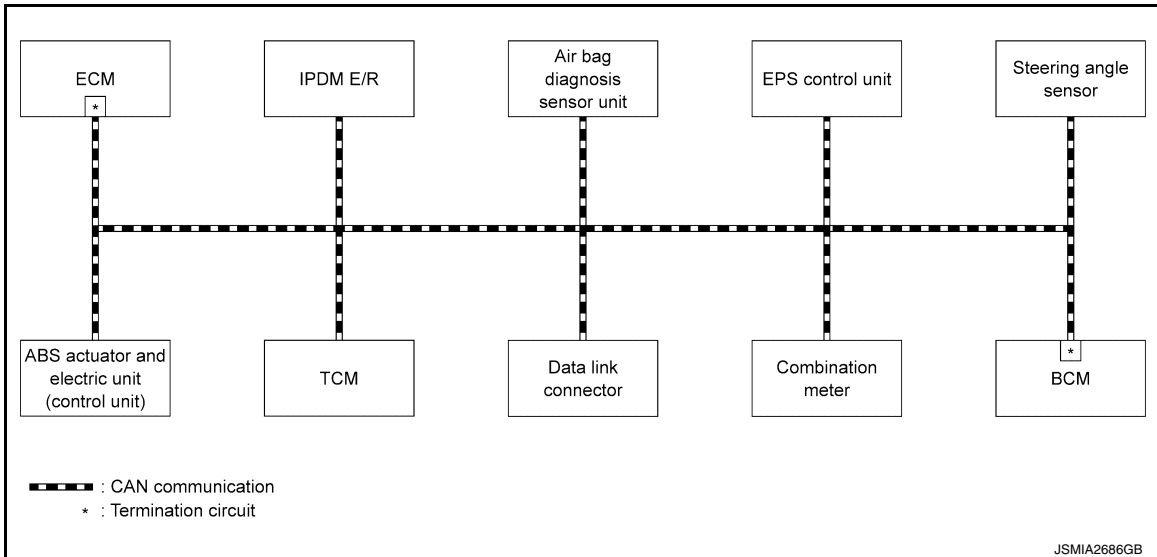

SYSTEM DIAGRAM

With FEB OR BSW

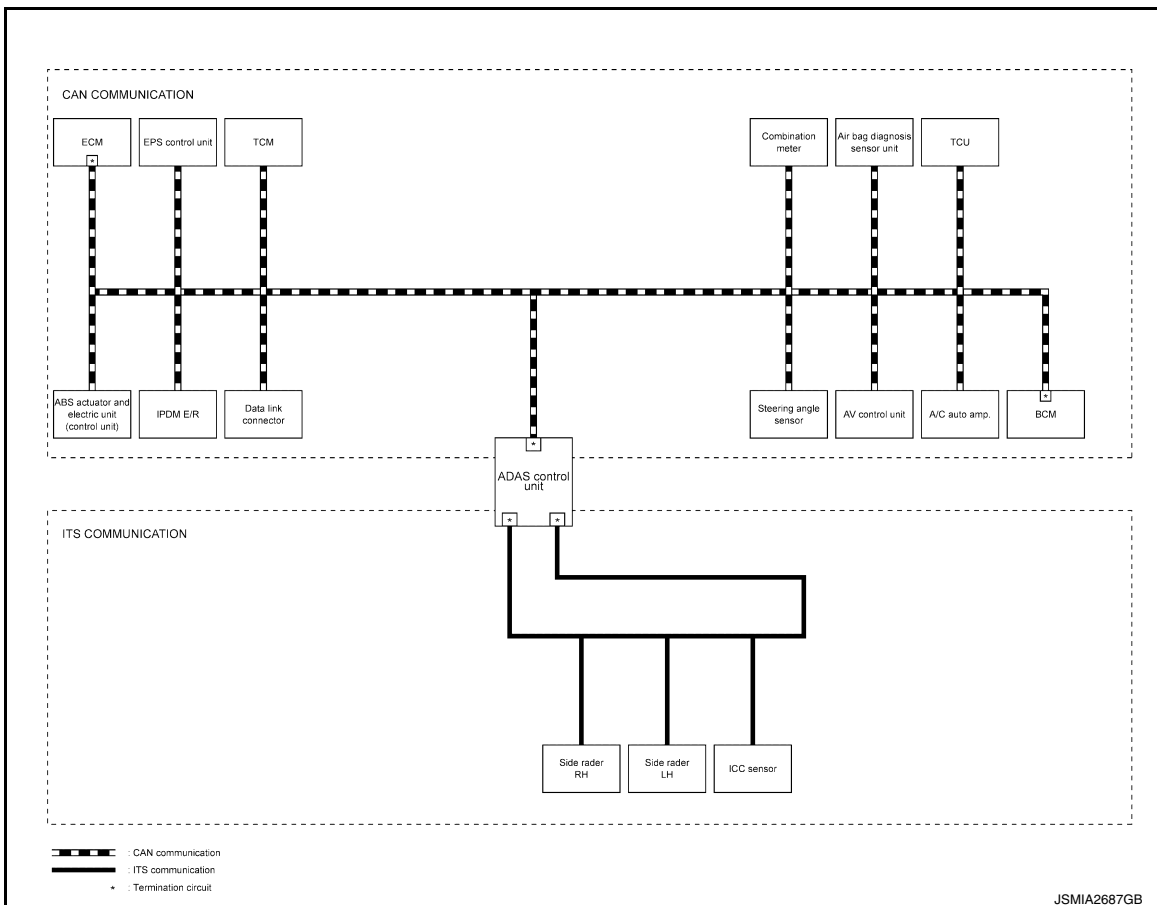

DESCRIPTION

SYSTEM


[CAN]

< SYSTEM DESCRIPTION >

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN COMMUNICATION SIGNAL GENERATION


- Termination circuits (resistors) are connected across the CAN communication system. When transmitting a CAN communication signal, each control unit passes a current to the CAN-H line and the current returns to the CAN-L line.

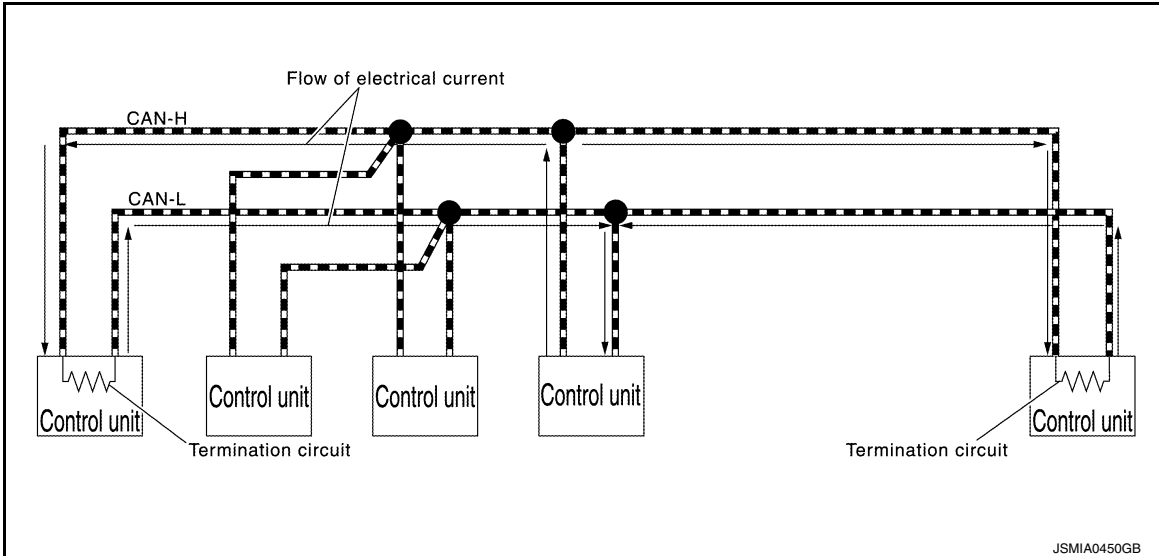


- The current flows separately into the termination circuits connected across the CAN communication system and the termination circuits drop voltage to generate a potential difference between the CAN-H line and the CAN-L line.

NOTE:

A signal with no current passage is called "Recessive" and one with current passage is called "Dominant".

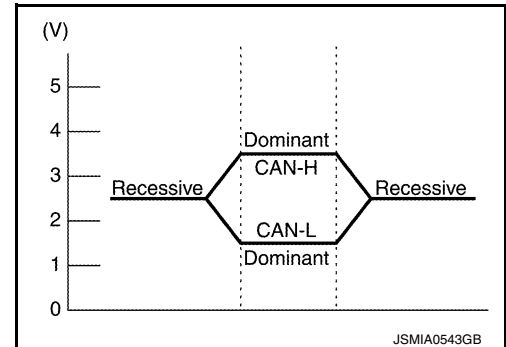

- The system produces digital signals for signal communications, by using the potential difference.

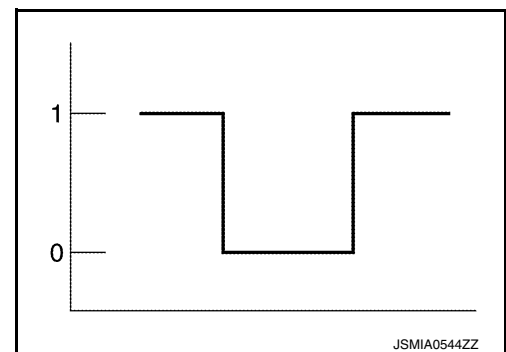

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P


LAN

SYSTEM

[CAN]

< SYSTEM DESCRIPTION >


THE CONSTRUCTION OF CAN COMMUNICATION SIGNAL (MESSAGE)

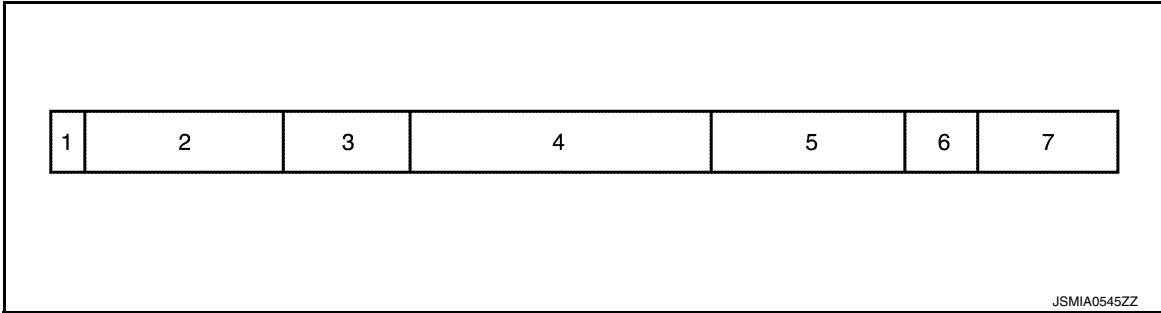

No.	Message name	Description
1	Start of frame (1 bit)	Start of message.
2	Arbitration of field (11 bit)	Priorities of message-sending are shown when there is a possibility that multiple messages are sent at the same time.
3	Control field (6 bit)	Signal quantity in data field is shown.
4	Data field (0-64 bit)	Actual signal is shown.
5	CRC field (16 bit)	<ul style="list-style-type: none"> The transmitting control unit calculates sending data in advance and writes the calculated value in a message. The receiving control unit calculates received data and judges that the data reception is normal when the calculated value is the same as the value written in the sent data.
6	ACK field (2 bit)	The completion of normal reception is sent to the transmitting unit.
7	End of frame (7 bit)	End of message.

CAN Communication Line


The CAN communication line is a twisted pair wire consisting of strands of CAN-H ① and CAN-L ② and has noise immunity.

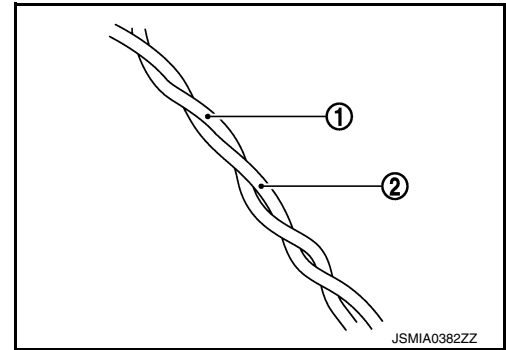

NOTE:

The CAN communication system has the characteristics of noise-resistant because this system produces digital signals by using the potential difference between the CAN-H line and the CAN-L line and has the twisted pair wire structure.

Since the CAN-H line and the CAN-L line are always adjacent to each other, the same degree of noise occurs, respectively, when a noise ① occurs. Although the noise changes the voltage, the potential difference ② between the CAN-H line and the CAN-L line is insensitive to noise. Therefore, noise-resistant signals can be obtained.

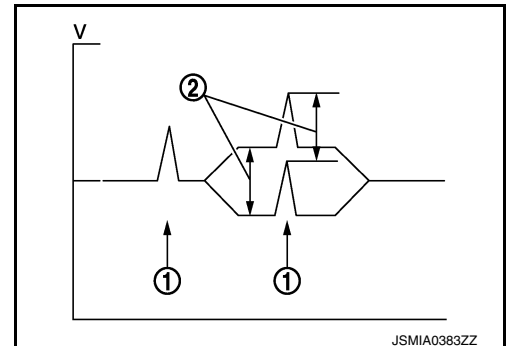

CAN Signal Communications


SYSTEM

[CAN]


< SYSTEM DESCRIPTION >

Each control unit of the CAN communication system transmits signals through the CAN communication control circuit included in the control unit and receives only necessary signals from each control unit to perform various kinds of control.

- Example: Transmitted signals

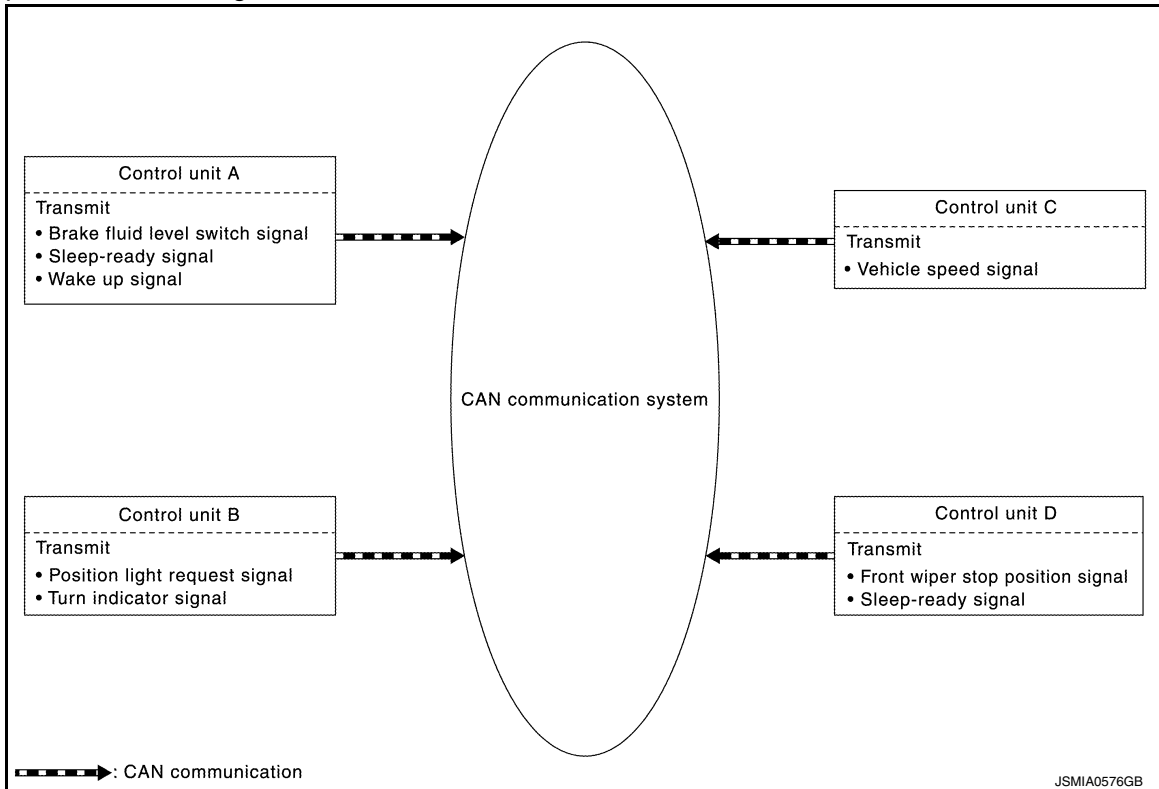

- Example: Received signals

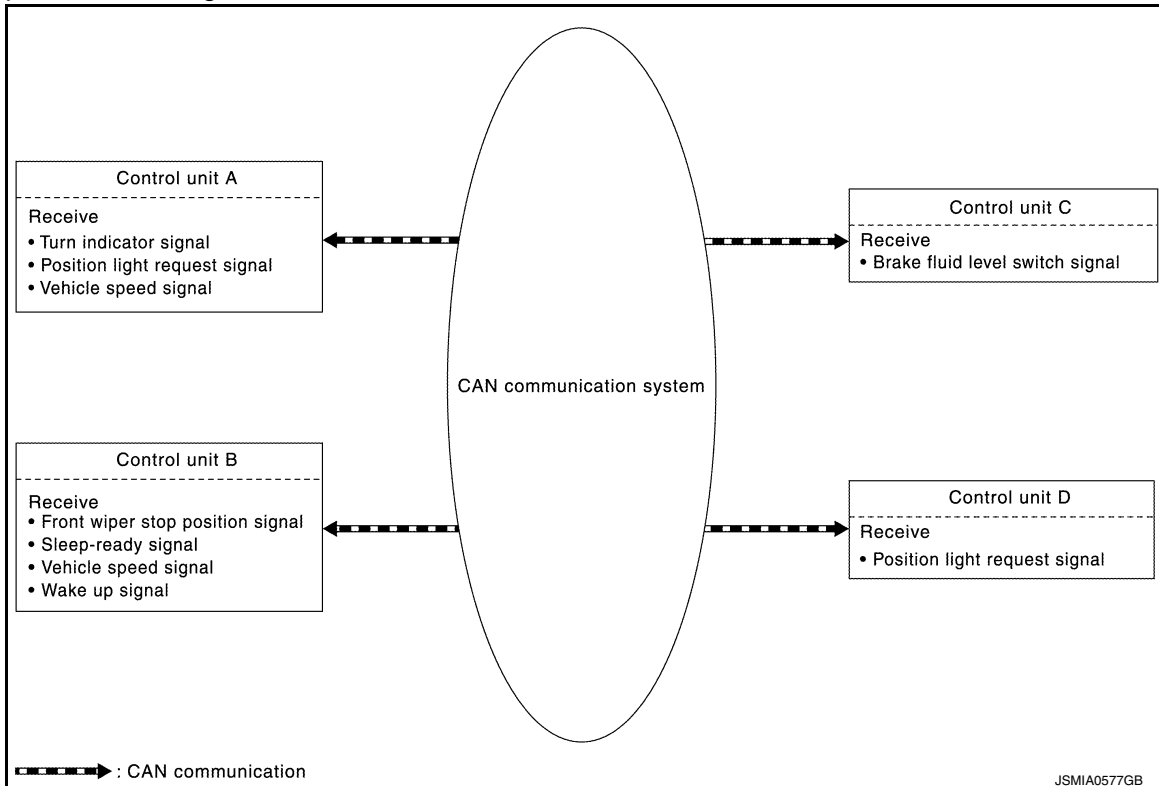

NOTE:

The above signal names and signal communications are provided for reference purposes. For CAN communications signals of this vehicle, refer to [LAN-32, "CAN COMMUNICATION SYSTEM : CAN Communication Signal Chart"](#).

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

SYSTEM


< SYSTEM DESCRIPTION >

[CAN]

CAN COMMUNICATION SYSTEM : CAN Communication Control Circuit

INFOID:000000012782543

CAN communication control circuit is incorporated into the control unit and transmits/receives CAN communication signals.

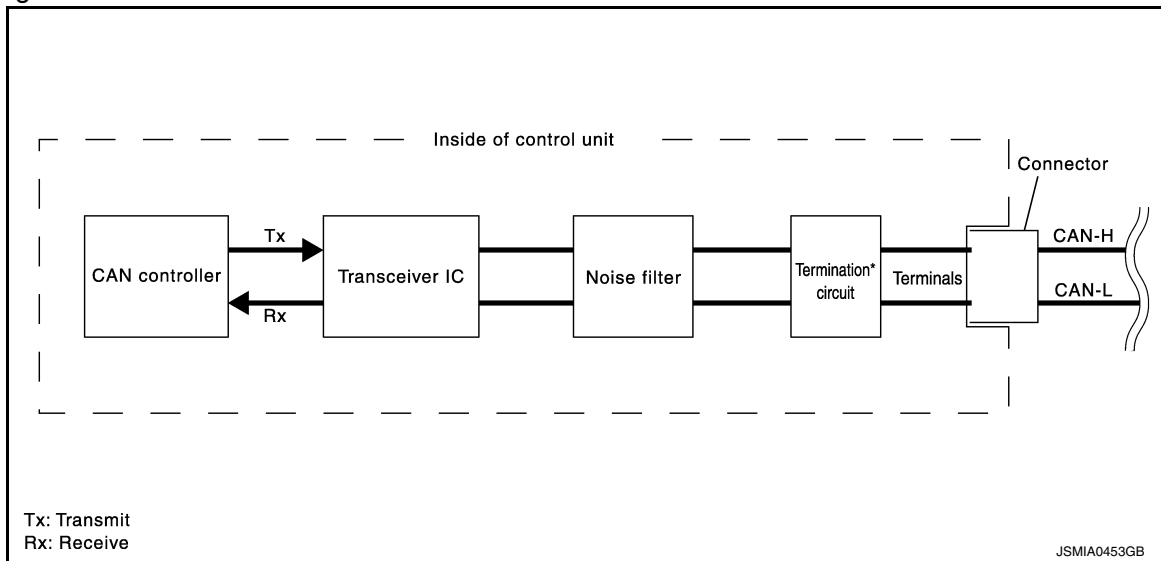

Component	System description
CAN controller	It controls CAN communication signal transmission and reception, error detection, etc.
Transceiver IC	It converts digital signal into CAN communication signal, and CAN communication signal into digital signal.
Noise filter	It eliminates noise of CAN communication signal.
Termination circuit* (Resistance of approx. 120 Ω)	Generates a potential difference between CAN-H and CAN-L.

*: These are the only control units wired with both ends of CAN communication system.

CAN COMMUNICATION SYSTEM : CAN System Specification Chart

INFOID:000000012782544

Determine CAN system type from the following specification chart.

NOTE:

Refer to [LAN-17, "Trouble Diagnosis Flow Chart"](#) for how to use CAN system specification chart.

Body type	Sedan						
Axle	FWD						
Engine	MRA8DE						
Transmission	M/T						CVT
Brake control	VDC						
Navigation system				x	x	x	x
Automatic air conditioner					x		x
Telematics system			x			x	x
CAN system type	1	2	3	4	5	6	7
CAN communication unit							
ECM	x	x	x	x	x	x	x
ABS actuator and electric unit (control unit)	x	x	x	x	x	x	x
IPDM E/R	x	x	x	x	x	x	x
TCM		x	x	x	x	x	x
Air bag diagnosis sensor unit	x	x	x	x	x	x	x

SYSTEM

< SYSTEM DESCRIPTION >

[CAN]

Body type	Sedan						
Axle	FWD						
Engine	MRA8DE						
Transmission	M/T	CVT					
Brake control	VDC						
Navigation system				×	×	×	×
Automatic air conditioner					×		×
Telematics system			×			×	×
CAN system type	1	2	3	4	5	6	7
CAN communication unit							
Data link connector	×	×	×	×	×	×	×
EPS control unit	×	×	×	×	×	×	×
ADAS control unit			×	×	×	×	×
Steering angle sensor	×	×	×	×	×	×	×
TCU			×			×	×
AV control unit				×	×	×	×
A/C auto amp.					×		×
Combination meter	×	×	×	×	×	×	×
BCM	×	×	×	×	×	×	×
ITS communication circuit							
ADAS control unit			×	×	×	×	×
Side radar LH				×	×	×	×
Side radar RH				×	×	×	×
ICC sensor			×			×	×

×: Applicable

VEHICLE EQUIPMENT IDENTIFICATION INFORMATION

NOTE:

Check CAN system type from the vehicle shape and equipment.

A
B
C
D
E
F
G
H
I
J
K
L


LAN

N
O
P

SYSTEM

< SYSTEM DESCRIPTION >

[CAN]

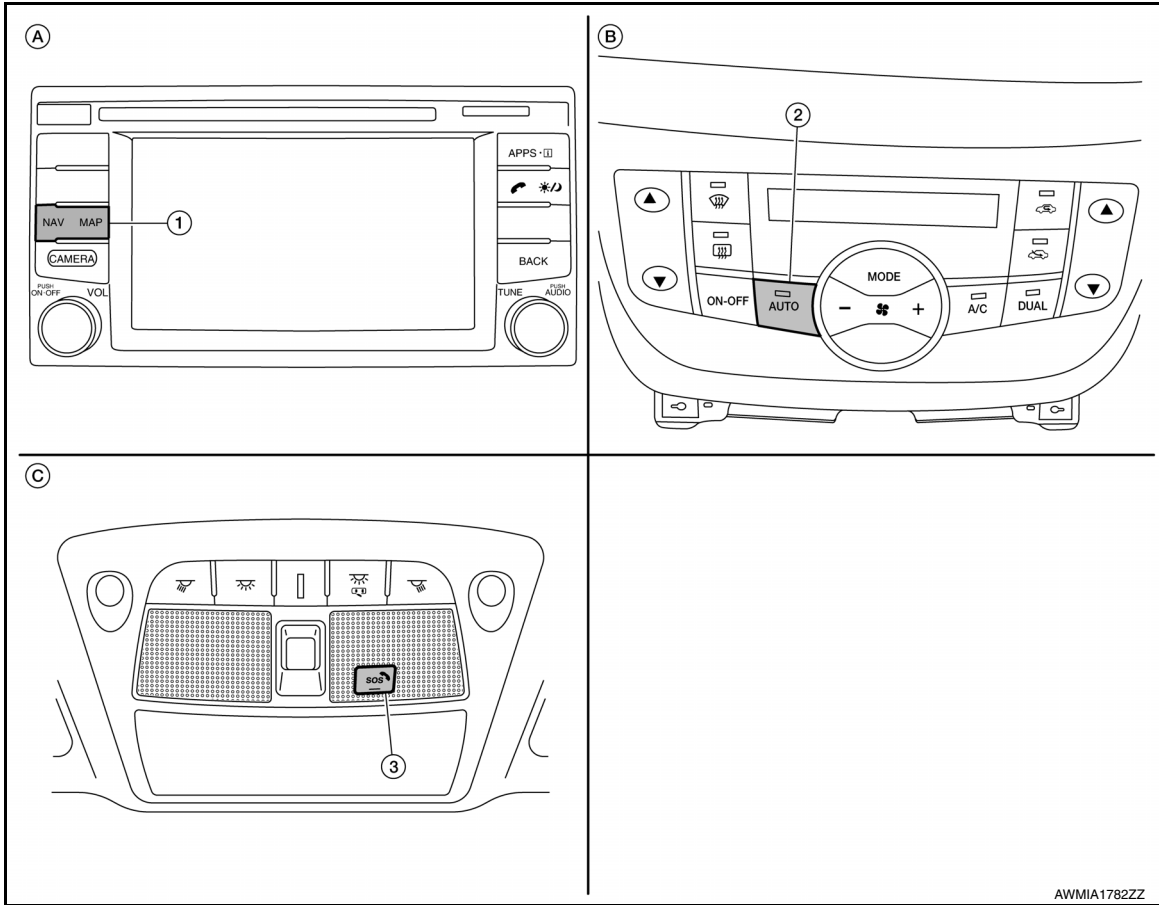

AWMIA1782ZZ

- | | | |
|---------------------------|---|---------------------------|
| 1. NAVI switch | 2. Automatic temperature control switch | 3. Telematics switch |
| A. With navigation system | B. With automatic air conditioner | c. With telematics system |

CAN COMMUNICATION SYSTEM : CAN Communication Signal Chart

INFOID:000000012782545

Refer to [LAN-16. "How to Use CAN Communication Signal Chart"](#) for how to use CAN communication signal chart.

NOTE:

- Refer to [LAN-22. "Abbreviation List"](#) for the abbreviations of the connecting units.
- CAN data of the air bag diagnosis sensor unit is not used by usual service work, thus it is omitted.
- The AV control unit uses CAN communication only for communicating with the diagnostic tool (not with other connected control units).

T: Transmit R: Receive

Signal name	ECM	ABS	IPDM-E	TCM	EPS	M&A	STRG	HVAC	BCM	ICC	TCU	A-BAG
A/C compressor request signal	T		R					R				
Accelerator pedal position signal	T			R						R		
ASCD status signal	T					R						
Closed throttle position signal	T			R								
Cooling fan speed request signal	T		R									
ECO mode indicator signal	T					R		R				
ECO pedal guide signal	T					R						
Engine and CVT integrated control signal	T			R								
	R			T								

SYSTEM

< SYSTEM DESCRIPTION >

[CAN]

Signal name	ECM	ABS	IPDM-E	TCM	EPS	M&A	STRG	HVAC	BCM	ICC	TCU	A-BAG	
Engine coolant temperature signal	T					R		R					A
Engine speed signal	T			R		R				R			B
Engine status signal	T	R			R	R			R		R		
Fuel consumption monitor signal	T					R							C
Fuel filler cap warning display signal	T					R							
Gear shift indicator signal	T					R							
Malfunctioning indicator lamp signal	T					R					R		D
	R			T									
Power generation command value signal ^{*1}	T		R										E
SPORT mode indicator signal	T					R							
ABS malfunction signal		T		R						R			
ABS operation signal		T		R									F
ABS warning lamp signal		T				R					R		
Brake warning lamp signal		T				R					R		
Vehicle speed signal (ABS)		T		R	R	R			R	R			G
VDC malfunction signal		T								R			
VDC OFF indicator lamp signal		T									R		H
Detention switch signal			T						R				
Front wiper stop position signal			T						R				
High beam status signal	R		T										I
Ignition switch ON signal			T						R				
			R						T				J
Low beam status signal	R		T										
Oil pressure switch signal			T						R				
						R			T				K
Push-button ignition switch status signal			T						R				
Rear window defogger control signal			R						T				
	R		T										L
Sleep-ready signal						T			R				
			T						R				LAN
Starter control relay signal			T						R				
			R						T				N
Starter relay status signal			T						R				
			R						T				
Current gear position signal				T						R			O
ECO mode signal	R			T									
Input shaft revolution signal	R			T									
N idle instruction signal	R			T									
	T			R									P
Output shaft revolution signal	R			T									
OD OFF indicator signal		R		T		R							
Shift position signal				T		R			R	R			
Shift selector signal				T						R			

SYSTEM

< SYSTEM DESCRIPTION >

[CAN]

Signal name	ECM	ABS	IPDM-E	TCM	EPS	M&A	STRG	HVAC	BCM	ICC	TCU	A-BAG
SPORT mode signal	R			T								
EPS operation signal	R				T							
EPS warning lamp signal					T	R						
ECO mode switch signal	R*2			R		T						
Fuel filler cap warning reset signal	R					T						
Odometer signal						T			R			
Overdrive control switch signal				R		T						
System selection signal						T				R		
SPORT mode switch signal	R*2			R		T						
Vehicle speed signal (Meter)	R		R		R	T		R	R			
Wake up signal						T			R			
Steering angle sensor signal		R					T					
Steering calibration signal		R					T					
A/C ON signal	R								T			
Blower fan ON signal	R								T			
Buzzer output signal						R			T			
Dimmer signal						R			T	R		
Door switch signal			R			R			T		R	
Engine start operation indicator lamp signal						R			T			
Front fog light request signal			R			R			T			
Front wiper request signal			R						T			
High beam request signal			R			R			T			
Key warning lamp signal						R			T			
Low beam request signal			R			R			T			
Position light request signal			R			R			T			
Shift P warning lamp signal						R			T			
Sleep wake up signal			R			R			T		R	
Stop lamp switch signal				R					T			
Theft warning horn request signal			R						T			
Turn indicator signal				R		R			T	R		
BSW indicator signal						R				T		
Crash information signal											R	T

*1: With battery current sensor (with battery temperature sensor)

*2: M/T models


< WIRING DIAGRAM >

WIRING DIAGRAM

CAN SYSTEM

Wiring Diagram

INFOID:000000012782546

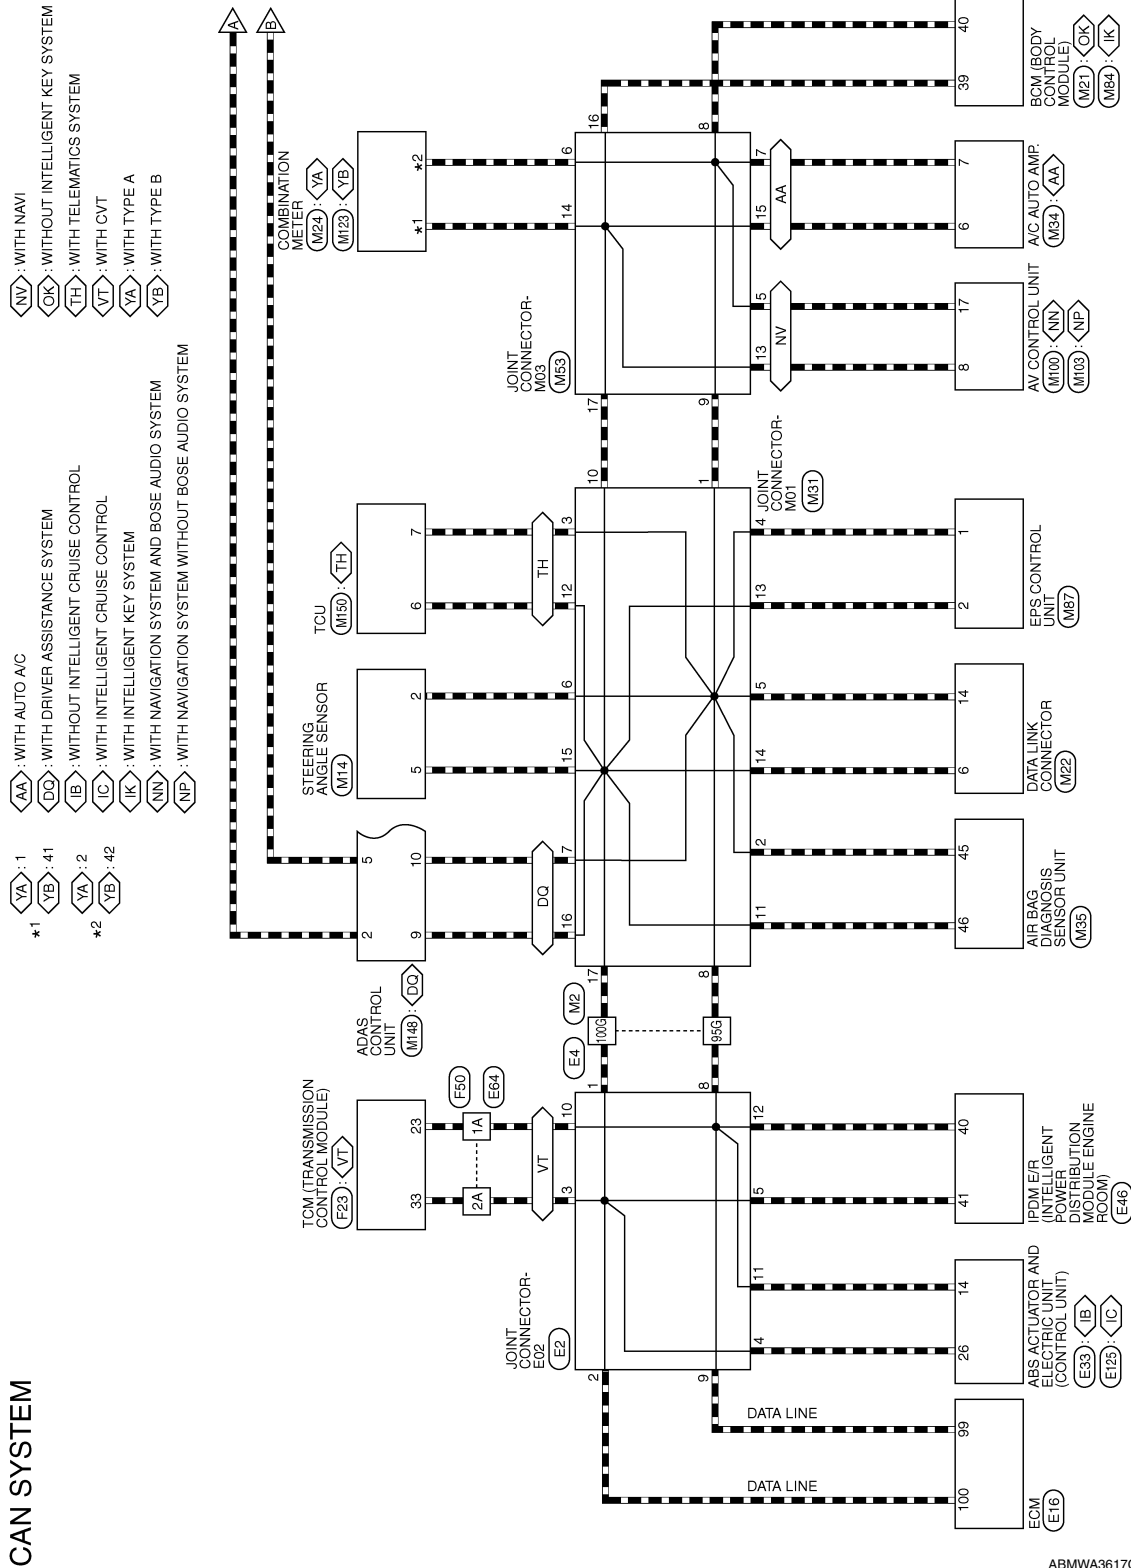

ABMWA3617GB

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P


LAN

CAN SYSTEM

< WIRING DIAGRAM >

[CAN]


DG : WITH DRIVER ASSISTANCE SYSTEM
IC : WITH INTELLIGENT CRUISE CONTROL

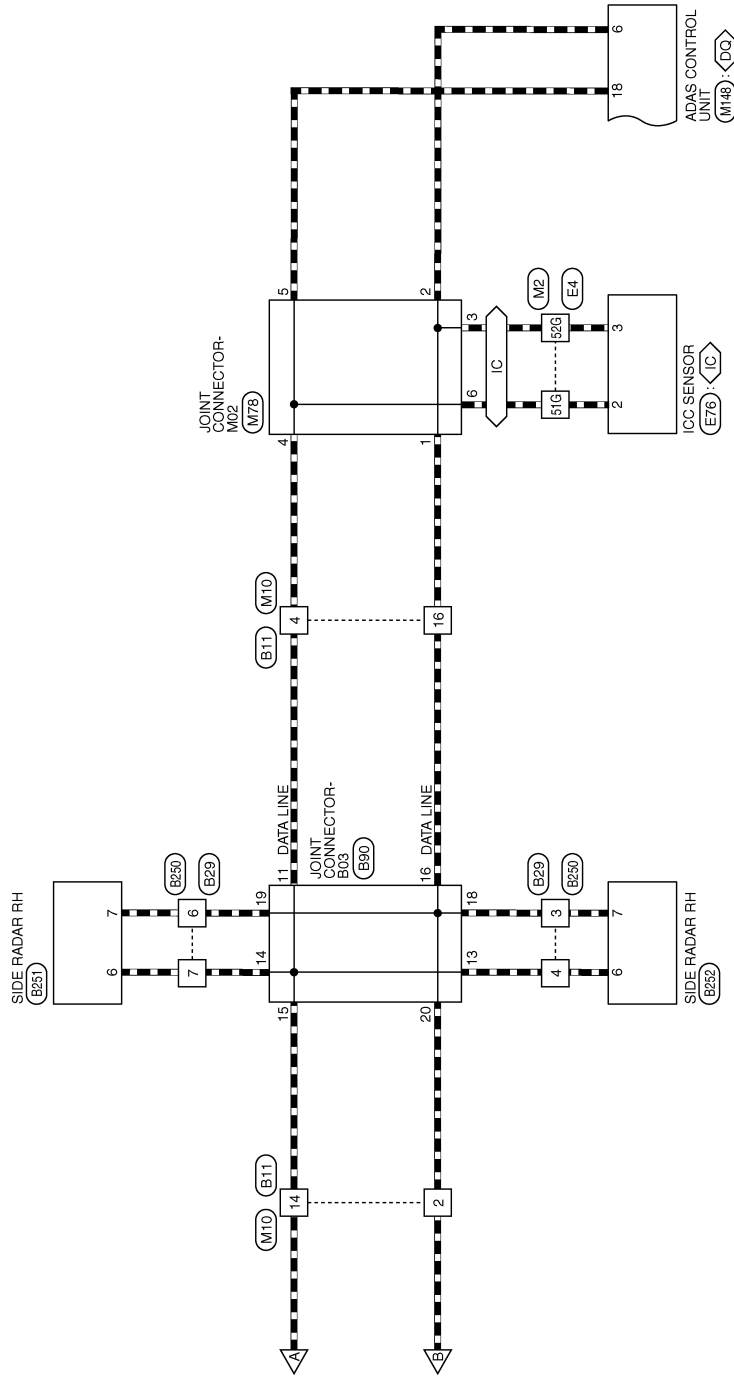

ABMWA3618GB


CAN SYSTEM CONNECTORS

Connector No.	M2
Connector Name	WIRE TO WIRE
Connector Color	WHITE

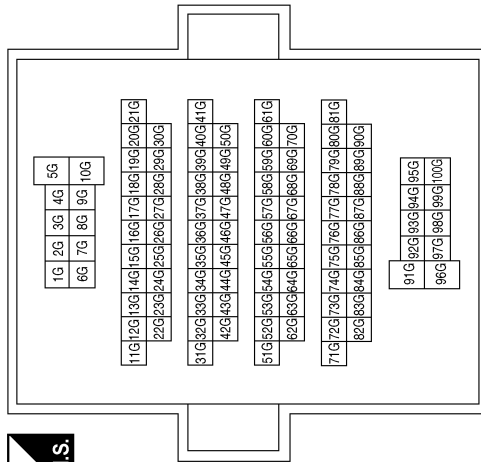


Terminal No.	Color of Wire	Signal Name
51G	L	-
52G	Y	-
95G	P	-
100G	L	-

Connector No.	M10
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	Y	-
4	L	-
14	L	-
16	Y	-

Connector No.	M14
Connector Name	STEERING ANGLE SENSOR
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	P	CAN-L
5	L	CAN-H

Connector No.	M21
Connector Name	BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY SYSTEM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
39	L	CAN-H
40	P	CAN-L

Connector No.	M22
Connector Name	DATA LINK CONNECTOR
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
6	L	-
14	P	-

ABMIA8183GB

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN


CAN SYSTEM

< WIRING DIAGRAM >

[CAN]


Terminal No.	Color of Wire	Signal Name
7	P	-
8	P	-
10	L	-
11	L	-
12	L	-
13	L	-
14	L	-
15	L	-
16	L	-
17	L	-

Connector No.	M31
Connector Name	JOINT CONNECTOR-M01
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-
3	P	-
4	P	-
5	P	-
6	P	-

Connector No.	M24
Connector Name	COMBINATION METER (WITH TYPE A)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	L	CAN-H
2	P	CAN-L

Connector No.	M53
Connector Name	JOINT CONNECTOR-M03
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
5	P	-
6	P	-
7	P	-
8	P	-
9	P	-
13	L	-
14	L	-
15	L	-
16	L	-
17	L	-

Connector No.	M35
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT
Connector Color	YELLOW

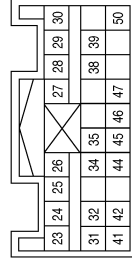

Terminal No.	Color of Wire	Signal Name
45	P	CAN-L
46	L	CAN-H

Connector No.	M34
Connector Name	A/C AUTO AMP. (WITH AUTO A/C)
Connector Color	WHITE

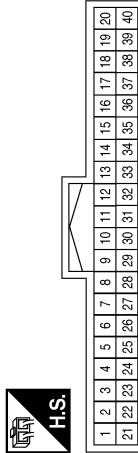

Terminal No.	Color of Wire	Signal Name
6	L	CAN-H
7	P	CAN-L


ABMIA8184GB

CAN SYSTEM

< WIRING DIAGRAM >


[CAN]

Connector No.	M87
Connector Name	EPS CONTROL UNIT
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	P	CAN-L
2	L	CAN-H

Connector No.	M84
Connector Name	BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY SYSTEM)
Connector Color	BLACK

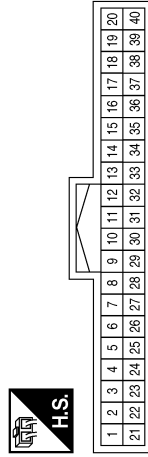


Terminal No.	Color of Wire	Signal Name
39	L	CAN-H
40	P	CAN-L

Connector No.	M78
Connector Name	JOINT CONNECTOR-M02
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	Y	-
2	Y	-
3	Y	-
4	L	-
5	L	-
6	L	-

Connector No.	M123
Connector Name	COMBINATION METER (WITH TYPE B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
41	L	CAN-H
42	P	CAN-L

Connector No.	M103
Connector Name	AV CONTROL UNIT (WITH NAVIGATION SYSTEM WITHOUT BOSE AUDIO SYSTEM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
8	L	CAN-H
17	P	CAN-L

Connector No.	M100
Connector Name	AV CONTROL UNIT (WITH NAVIGATION SYSTEM WITH BOSE AUDIO SYSTEM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
8	L	CAN-H
17	P	CAN-L

ABMIA8185GB

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P


LAN

CAN SYSTEM

< WIRING DIAGRAM >


[CAN]

Connector No.	E2
Connector Name	JOINT CONNECTOR-E02
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-
3	L	-
4	L	-
5	L	-
8	P	-
9	P	-
10	P	-
11	P	-
12	P	-

Connector No.	M150
Connector Name	TCU
Connector Color	BLACK

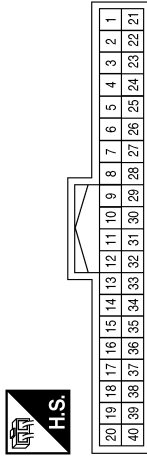

Terminal No.	Color of Wire	Signal Name
6	L	CAN-H
7	P	CAN-L

Connector No.	M148
Connector Name	ADAS CONTROL UNIT
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	L	ITS CAN HIGH
5	Y	ITS CAN LOW
6	Y	3RD CAN LOW
9	L	CAN-H
10	P	CAN-L
18	L	3RD CAN HIGH


ABMIA8186GB

CAN SYSTEM

< WIRING DIAGRAM >

[CAN]


Connector No.	E16
Connector Name	ECM
Connector Color	GRAY

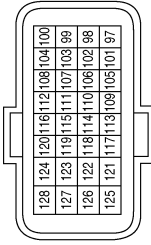


Terminal No.	Color of Wire	Signal Name
99	P	CAN-L
100	L	CAN-H

Terminal No.	Color of Wire	Signal Name
51G	L	-
52G	Y	-
95G	P	-
100G	L	-

Connector No.	E4
Connector Name	WIRE TO WIRE
Connector Color	WHITE

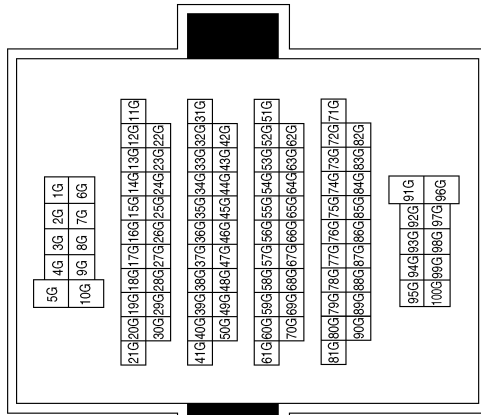


Connector No.	E46
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
40	P	CAN-L
41	L	CAN-H

Connector No.	E33
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) (WITHOUT INTELLIGENT CRUISE CONTROL)
Connector Color	BLACK

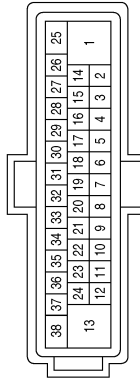

Terminal No.	Color of Wire	Signal Name
14	P	CAN-L
26	L	CAN-H

ABMIA8187GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


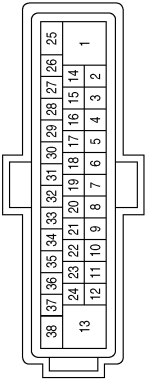
LAN

CAN SYSTEM

< WIRING DIAGRAM >


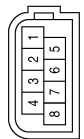
[CAN]

Connector No.	E125
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) (WITH INTELLIGENT CRUISE CONTROL)
Connector Color	BLACK


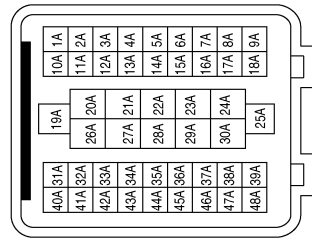
Terminal No.	Color of Wire	Signal Name
14	P	CAN-L
26	L	CAN-H

Connector No.	E76
Connector Name	ICC SENSOR
Connector Color	BLACK

Terminal No.	Color of Wire	Signal Name
2	L	CAN-H
3	Y	CAN-L


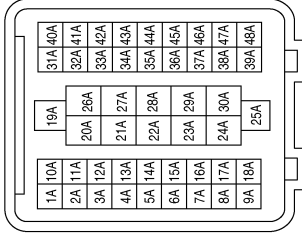
Connector No.	E64
Connector Name	WIRE TO WIRE
Connector Color	BLACK


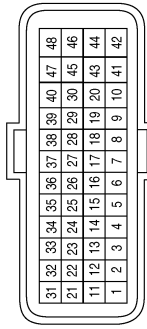
Terminal No.	Color of Wire	Signal Name
1A	P	-
2A	L	-

Terminal No.	Color of Wire	Signal Name
1A	P	-
2A	L	-

Connector No.	F50
Connector Name	WIRE TO WIRE
Connector Color	BLACK

Connector No.	F23
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Color	BLACK

Terminal No.	Color of Wire	Signal Name
23	P	CAN-L
33	L	CAN-H

Terminal No.	Color of Wire	Signal Name
23	P	CAN-L
33	L	CAN-H


ABMIA8188GB

CAN SYSTEM

< WIRING DIAGRAM >


[CAN]

Connector No.	B90
Connector Name	JOINT CONNECTOR-B03
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
11	L	-
13	L	-
14	L	-
15	L	-
16	Y	-
18	P	-
19	P	-
20	Y	-

Connector No.	B29
Connector Name	WIRE TO WIRE
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
3	P	-
4	L	-
6	P	-
7	L	-

Connector No.	B11
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	Y	-
4	L	-
14	L	-
16	Y	-

Connector No.	B252
Connector Name	SIDE RADOR RH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
6	L	ITS CAN H
7	Y	ITS CAN L

Connector No.	B251
Connector Name	SIDE RADOR LH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
6	L	ITS CAN H
7	Y	ITS CAN L

Connector No.	B250
Connector Name	WIRE TO WIRE
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
3	Y	-
4	L	-
6	Y	-
7	L	-

ABMIA8189GB

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Interview Sheet

INFOID:000000012782547

NOTE:

Refer to [LAN-17, "Trouble Diagnosis Flow Chart"](#) for how to use interview sheet.

CAN Communication System Diagnosis Interview Sheet	
Date received: <input type="text"/>	
Type: <input type="text"/>	VIN No.: <input type="text"/>
Model: <input type="text"/>	
First registration: <input type="text"/>	Mileage: <input type="text"/>
CAN system type: <input type="text"/>	
Symptom (Results from interview with customer)	
<input type="text"/>	
Condition at inspection	
Error symptom : Present / Past <input type="text"/>	

SKIB8898E

MALFUNCTION AREA CHART

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

DTC/CIRCUIT DIAGNOSIS

MALFUNCTION AREA CHART

CAN Communication Circuit

INFOID:0000000013389739

MAIN LINE

Malfunction area	Reference
Main line between IPDM E/R and data link connector	LAN-47, "Diagnosis Procedure"
Main line between data link connector and combination meter	LAN-48, "Diagnosis Procedure"

BRANCH LINE

Malfunction area	Reference
ECM branch line circuit	LAN-50, "Diagnosis Procedure"
ABS actuator and electric unit (control unit) branch line circuit	LAN-51, "Diagnosis Procedure"
IPDM E/R branch line circuit	LAN-52, "Diagnosis Procedure"
TCM branch line circuit	LAN-53, "Diagnosis Procedure"
Air bag diagnosis sensor unit branch line circuit	LAN-54, "Diagnosis Procedure"
Data link connector branch line circuit	LAN-55, "Diagnosis Procedure"
EPS control module branch line circuit	LAN-56, "Diagnosis Procedure"
ADAS control unit branch line circuit	LAN-57, "Diagnosis Procedure"
Steering angle sensor branch line circuit	LAN-58, "Diagnosis Procedure"
TCU branch line circuit	LAN-59, "Diagnosis Procedure"
AV control unit branch line circuit	LAN-60, "Diagnosis Procedure"
A/C auto amp. branch line circuit (with auto A/C)	LAN-61, "Diagnosis Procedure"
Combination meter branch line circuit	LAN-62, "Diagnosis Procedure"
BCM branch line circuit	LAN-63, "Diagnosis Procedure"

SHORT CIRCUIT

Malfunction area	Reference
CAN communication circuit	LAN-67, "Diagnosis Procedure"

ITS Communication Circuit

INFOID:0000000013389740

MAIN LINE

Malfunction area	Reference
Main line between side radar LH and ICC sensor	LAN-49, "Diagnosis Procedure"

BRANCH LINE

Malfunction area	Reference
Side radar LH branch line circuit	LAN-64, "Diagnosis Procedure"
Side radar RH branch line circuit	LAN-65, "Diagnosis Procedure"
ICC sensor branch line circuit	LAN-66, "Diagnosis Procedure"

SHORT CIRCUIT OR OPEN CIRCUIT

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

MALFUNCTION AREA CHART

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

Malfunction area	Reference
ITS communication circuit	LAN-69. "Diagnosis Procedure"

MAIN LINE BETWEEN IPDM-E AND DLC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN IPDM-E AND DLC CIRCUIT

Diagnosis Procedure

INFOID:000000012782551

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector E4
 - Harness connector M2

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - IPDM E/R
 - Harness connectors E4 and M2
2. Check the continuity between the IPDM E/R harness connector and the harness connector.

IPDM E/R harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E46	41	E4	100G	Existed
	40		95G	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the IPDM E/R and the harness connector E4.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector and the data link connector.

Harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M2	100G	M22	6	Existed
	95G		14	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the IPDM E/R and the data link connector.

NO >> Repair the main line between the harness connector M2 and the data link connector.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN DLC AND M&A CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN DLC AND M&A CIRCUIT

Diagnosis Procedure

INFOID:000000013389742

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Combination meter
4. Check the continuity between the data link connector and the combination meter harness connector.
 - With type A

Data link connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M22	6	M24	1	Existed
	14		2	Existed

- With type B

Data link connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M22	6	M123	41	Existed
	14		42	Existed

NOTE:

Check the vehicle type confirm the service information. Refer to [MWI-5, "Information"](#).

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the combination meter.

NO >> Repair the main line between the data link connector and the combination meter.

MAIN LINE BETWEEN RDR-L AND LASER CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN RDR-L AND LASER CIRCUIT

Diagnosis Procedure

INFOID:000000013389741

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B11
 - Harness connector M10

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector B11 and M10.
2. Check the continuity between the harness connector terminals.

Harness connector		Continuity	
Connector No.	Terminal No.		
B11	14	4	Existed
	2	16	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the harness connector B11.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M2 and E4.
2. Check the continuity between the harness connector.

Harness connector		ICC sensor harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M10	4	M2	51G	Existed
	16		52G	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the side radar LH and the ICC sensor.

NO >> Repair the main line between the harness connector M10 and M2.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012782554

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ECM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E16	100	99	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ECM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to [EC-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ECM. Refer to [EC-501, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ECM branch line.
NO >> Repair the power supply and the ground circuit.

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012782555

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.
 - Without Intelligent cruise control

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E33	26	14	Approx. 54 – 66

- With Intelligent cruise control

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E125	26	14	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-323, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-350, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012782556

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E46	41	40	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the IPDM E/R branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to the following.

- With Intelligent Key system: [BCS-71, "Diagnosis Procedure"](#)
- Without Intelligent Key system: [BCS-128, "Diagnosis Procedure"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the IPDM E/R. Refer to the following.
- With Intelligent Key system: [BCS-78, "Removal and Installation"](#)
 - Without Intelligent Key system: [BCS-135, "Removal and Installation"](#)
- YES (Past error)>>Error was detected in the IPDM E/R branch line.
NO >> Repair the power supply and the ground circuit.

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012782557

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - TCM
 - Harness connector F50
 - Harness connector E64

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of TCM.
2. Check the resistance between the TCM harness connector terminals.

TCM harness connector		Resistance (Ω)
Connector No.	Terminal No.	
F23	33 23	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the TCM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-238, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the TCM. Refer to the [TM-266, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the TCM branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012782558

WARNING:

Always observe the following items for preventing accidental activation.

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace the main harness.

2.CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-38. "Work Flow"](#).

Is the inspection result normal?

- YES >> Replace the main harness.
NO >> Replace parts whose air bag system has a malfunction.

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012782559

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M22	6	14	Approx. 54 – 66

Is the measurement value within the specification?

- YES (Present error)>>Check CAN system type decision again.
YES (Past error)>>Error was detected in the data link connector branch line circuit.
NO >> Repair the data link connector branch line.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

EPS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

EPS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012782560

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the EPS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of EPS control unit.
2. Check the resistance between the EPS control unit harness connector terminals.

EPS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M87	2	1	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the EPS control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the EPS control unit. Refer to [STC-23, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the EPS control unit. Refer to [STC-40, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the EPS control unit branch line.
NO >> Repair the power supply and the ground circuit.

ICC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

ICC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389743

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ADAS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ADAS control unit.
2. Check the continuity between the ADAS control unit harness connector terminals.

ADAS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M148	9	10	Approx. 54 – 66

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair the ADAS control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ADAS control unit. Refer to [DAS-66, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ADAS control unit. Refer to [DAS-67, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ADAS control unit branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012782562

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M14	5	2	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the steering angle sensor branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to the following.

- Without ICC: [BRC-51, "Wiring Diagram"](#)
- With ICC: [BRC-225, "Wiring Diagram"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-353, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the steering angle sensor branch line.
NO >> Repair the power supply and the ground circuit.

TCU BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

TCU BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389744

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the TCU for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of TCU.
2. Check the resistance between the TCU harness connector terminals.

TCU harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M150	6	7	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the TCU branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCU. Refer to [AV-386, "TCU : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the TCU. Refer to [AV-390, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the TCU branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012782563

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the AV control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
 2. Check the resistance between the AV control unit harness connector terminals.
- With navigation system without BOSE audio system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M103	8	17	Approx. 54 – 66

- With navigation system and BOSE audio system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M100	8	17	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the AV control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to the following.

- With navigation system without BOSE audio system: [AV-182, "AV CONTROL UNIT : Diagnosis Procedure"](#)
- With navigation system and BOSE audio system: [AV-285, "AV CONTROL UNIT : Diagnosis Procedure"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the AV control unit. Refer to the following.
- With navigation system without BOSE audio system: [AV-210, "Removal and Installation"](#)
 - With navigation system and BOSE audio system: [AV-321, "Removal and Installation"](#)

YES (Past error)>>Error was detected in the AV control unit branch line.

- NO >> Repair the power supply and the ground circuit.

HVAC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012782564

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the A/C auto amp. for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/C auto amp.
2. Check the resistance between the A/C auto amp. harness connector terminals.

A/C auto amp. harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M34	6	7	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the A/C auto amp. branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the A/C auto amp. Refer to [HAC-83, "A/C AUTO AMP. : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the A/C auto amp. Refer to [HAC-105, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the A/C auto amp. branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012782561

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
 2. Check the resistance between the combination meter harness connector terminals.
- With type A

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M24	1	2	Approx. 54 – 66

- With type B

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M123	41	42	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the combination meter branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to the following.

- With type A: [MWI-51, "COMBINATION METER : Diagnosis Procedure"](#)
- With type B: [MWI-126, "COMBINATION METER : Diagnosis Procedure"](#)

NOTE:

Check the vehicle type confirm the service information. Refer to [MWI-5, "Information"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the combination meter. Refer to [MWI-74, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the combination meter branch line.
NO >> Repair the power supply and the ground circuit.

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000012782565

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
 2. Check the resistance between the BCM harness connector terminals.
- Without Intelligent Key system

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M21	39	40	Approx. 108 – 132

- With Intelligent Key system

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M84	39	40	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the BCM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to the following.

- With Intelligent Key system: [BCS-71, "Diagnosis Procedure"](#)
- Without Intelligent Key system: [BCS-128, "Diagnosis Procedure"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to the following.
- With Intelligent Key system: [BCS-78, "Removal and Installation"](#)
 - Without Intelligent Key system: [BCS-135, "Removal and Installation"](#)

YES (Past error)>>Error was detected in the BCM branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

RDR-L BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

RDR-L BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389746

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Side radar LH
 - ADAS control unit
 - Harness connector B250
 - Harness connector B29

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ADAS control unit.
2. Check the continuity between the ADAS control unit harness connector.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
M148	2	18	Existed
	5	6	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (ITS communication circuit side).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of ADAS control unit.
2. Disconnect the connector of side radar LH.
3. Check the resistance between the side radar LH harness connector terminals.

Side radar LH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B251	6	7	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the side radar LH branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar LH. Refer to [DAS-142, "SIDE RADAR LH: Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the side radar LH. Refer to [DAS-157, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the side radar LH branch line.

NO >> Repair the power supply and the ground circuit.

RDR-R BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

RDR-R BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389745

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Side radar RH
 - ADAS control unit
 - Harness connector B250
 - Harness connector B29

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ADAS control unit.
2. Check the continuity between the ADAS control unit harness connector.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
M148	2	18	Existed
	5	6	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (ITS communication circuit side).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of ADAS control unit.
2. Disconnect the connector of side radar RH.
3. Check the resistance between the side radar RH harness connector terminals.

Side radar RH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B252	6	7	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the side radar RH branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar RH. Refer to [DAS-142, "SIDE RADAR LH : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the side radar RH. Refer to [DAS-157, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the side radar RH branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

LASER BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

LASER BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389747

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ICC sensor
 - ADAS control unit
 - Harness connector E4
 - Harness connector M2

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ADAS control unit.
2. Check the continuity between the ADAS control unit harness connector terminals.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
M148	2	18	Existed
	5	6	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (ITS communication circuit side).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of ADAS control unit.
2. Disconnect the connector of ICC sensor.
3. Check the resistance between the ICC sensor harness connector terminals.

ICC sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E76	2	3	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the ICC sensor branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ICC sensor. Refer to [DAS-143, "ICC SENSOR : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the ICC sensor. Refer to [DAS-154, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the ICC sensor branch line.

NO >> Repair the power supply and the ground circuit.

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000012782566

1. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication system.
4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M22	6 14	Not existed

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Check the harness and repair the root cause.

3. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M22	6		Not existed
	14		Not existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Check the harness and repair the root cause.

4. CHECK ECM AND BCM TERMINATION CIRCUIT

1. Remove the ECM and the BCM.
2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		
100	99	Approx. 108 – 132

3. Check the resistance between the BCM terminals.

BCM		Resistance (Ω)
Terminal No.		
39	40	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 5.
NO >> Replace the ECM and/or the BCM.

5. CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication system.

NOTE:

ECM and BCM have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

ITS COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

ITS COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000013389748

1. CHECK CAN DIAGNOSIS

Check the CAN diagnosis results from CONSULT to see that the CAN communication circuit 1 have no malfunction.

Are the CAN communication 1 circuits normal?

YES >> GO TO 2.

NO >> Check and repair CAN communication circuit 1.

2. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ADAS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the terminal and connector.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the ADAS control unit harness connectors.
2. Check the continuity between the ADAS control unit harness connector.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
M148	2	18	Existed
	5	6	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the ADAS control unit branch line. (ITS communication circuit side).

4. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar RH
 - Side radar LH
 - ICC sensor
2. Check the continuity between the ADAS control unit harness connector terminals.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
M148	2	5	Not existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Check the harness and repair the root cause.

5. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the ADAS control unit harness connector and the ground.

ADAS control unit harness connector		Ground	Continuity
Connector No.	Terminal No.		
M148	2		Not existed
	5		Not existed

Is the inspection result normal?

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

ITS COMMUNICATION CIRCUIT

[CAN]

< DTC/CIRCUIT DIAGNOSIS >

- YES >> GO TO 6.
NO >> Check the harness and repair the root cause.

6.CHECK TERMINATION CIRCUIT

1. Remove the ADAS control unit.
2. Check the resistance between the ADAS control unit terminals.

ADAS control unit		Resistance (Ω)
Terminal No.		
2	5	Approx. 108 – 132
18	6	

Is the inspection result normal?

- YES >> GO TO 7.
NO >> Replace the ADAS control unit.

7.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

Inspection result

- Reproduced>>GO TO 8.
Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

8.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of ITS communication circuit.
NOTE:
ADAS control unit has two terminations circuit. Check other units first.
4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

- Reproduced>>Connect the connector. Check other units as per the above procedure.
Non-reproduced>>Replace the unit whose connector was disconnected.

MAIN LINE BETWEEN IPDM-E AND DLC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN IPDM-E AND DLC CIRCUIT

Diagnosis Procedure

INFOID:0000000013389916

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector E4
 - Harness connector M2

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - IPDM E/R
 - Harness connectors E4 and M2
2. Check the continuity between the IPDM E/R harness connector and the harness connector.

IPDM E/R harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E46	41	E4	100G	Existed
	40		95G	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the IPDM E/R and the harness connector E4.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector and the data link connector.

Harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M2	100G	M22	6	Existed
	95G		14	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the IPDM E/R and the data link connector.

NO >> Repair the main line between the harness connector M2 and the data link connector.

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

MAIN LINE BETWEEN DLC AND M&A CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

MAIN LINE BETWEEN DLC AND M&A CIRCUIT

Diagnosis Procedure

INFOID:000000013389917

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Combination meter
4. Check the continuity between the data link connector and the combination meter harness connector.
 - With type A

Data link connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M22	6	M24	1	Existed
	14		2	Existed

- With type B

Data link connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M22	6	M123	41	Existed
	14		42	Existed

NOTE:

Check the vehicle type confirm the service information. Refer to [MWI-5, "Information"](#).

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the combination meter.

NO >> Repair the main line between the data link connector and the combination meter.

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389921

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ECM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E16	100	99	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ECM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to [EC-168. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ECM. Refer to [EC-501. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ECM branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389922

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
 2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.
- Without Intelligent cruise control

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E33	26	14	Approx. 54 – 66

- With Intelligent cruise control

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E125	26	14	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-323, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-350, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.
NO >> Repair the power supply and the ground circuit.

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389923

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E46	41	40	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the IPDM E/R branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to the following.

- With Intelligent Key system: [BCS-71, "Diagnosis Procedure"](#)
- Without Intelligent Key system: [BCS-128, "Diagnosis Procedure"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the IPDM E/R. Refer to the following.
- With Intelligent Key system: [BCS-78, "Removal and Installation"](#)
 - Without Intelligent Key system: [BCS-135, "Removal and Installation"](#)

YES (Past error)>>Error was detected in the IPDM E/R branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389925

WARNING:

Always observe the following items for preventing accidental activation.

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace the main harness.

2.CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-38. "Work Flow"](#).

Is the inspection result normal?

- YES >> Replace the main harness.
NO >> Replace parts whose air bag system has a malfunction.

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389926

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M22	6	14	Approx. 54 – 66

Is the measurement value within the specification?

- YES (Present error)>>Check CAN system type decision again.
YES (Past error)>>Error was detected in the data link connector branch line circuit.
NO >> Repair the data link connector branch line.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

EPS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

EPS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389927

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the EPS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of EPS control unit.
2. Check the resistance between the EPS control unit harness connector terminals.

EPS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M87	2	1	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the EPS control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the EPS control unit. Refer to [STC-23, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the EPS control unit. Refer to [STC-40, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the EPS control unit branch line.
NO >> Repair the power supply and the ground circuit.

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389929

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M14	5	2	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the steering angle sensor branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to the following.

- Without ICC: [BRC-51, "Wiring Diagram"](#)
- With ICC: [BRC-225, "Wiring Diagram"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-353, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the steering angle sensor branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389933

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
 2. Check the resistance between the combination meter harness connector terminals.
- With type A

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M24	1	2	Approx. 54 – 66

- With type B

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M123	41	42	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the combination meter branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to the following.

- With type A: [MWI-51, "COMBINATION METER : Diagnosis Procedure"](#)
- With type B: [MWI-126, "COMBINATION METER : Diagnosis Procedure"](#)

NOTE:

Check the vehicle type confirm the service information. Refer to [MWI-5, "Information"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the combination meter. Refer to [MWI-74, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the combination meter branch line.
NO >> Repair the power supply and the ground circuit.

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389934

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
 2. Check the resistance between the BCM harness connector terminals.
- Without Intelligent Key system

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M21	39	40	Approx. 108 – 132

- With Intelligent Key system

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M84	39	40	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the BCM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to the following.

- With Intelligent Key system: [BCS-71, "Diagnosis Procedure"](#)
- Without Intelligent Key system: [BCS-128, "Diagnosis Procedure"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to the following.
- With Intelligent Key system: [BCS-78, "Removal and Installation"](#)
 - Without Intelligent Key system: [BCS-135, "Removal and Installation"](#)

YES (Past error)>>Error was detected in the BCM branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000013389938

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication system.
4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		
M22	6	14	Not existed

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Check the harness and repair the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M22	6		Not existed
	14		Not existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Check the harness and repair the root cause.

4.CHECK ECM AND BCM TERMINATION CIRCUIT

1. Remove the ECM and the BCM.
2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		
100	99	Approx. 108 – 132

3. Check the resistance between the BCM terminals.

BCM		Resistance (Ω)
Terminal No.		
39	40	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 5.
NO >> Replace the ECM and/or the BCM.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication system.

NOTE:

ECM and BCM have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN IPDM-E AND DLC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN IPDM-E AND DLC CIRCUIT

Diagnosis Procedure

INFOID:000000013389953

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector E4
 - Harness connector M2

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - IPDM E/R
 - Harness connectors E4 and M2
2. Check the continuity between the IPDM E/R harness connector and the harness connector.

IPDM E/R harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E46	41	E4	100G	Existed
	40		95G	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the IPDM E/R and the harness connector E4.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector and the data link connector.

Harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M2	100G	M22	6	Existed
	95G		14	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the IPDM E/R and the data link connector.

NO >> Repair the main line between the harness connector M2 and the data link connector.

MAIN LINE BETWEEN DLC AND M&A CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

MAIN LINE BETWEEN DLC AND M&A CIRCUIT

Diagnosis Procedure

INFOID:000000013389954

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Combination meter
4. Check the continuity between the data link connector and the combination meter harness connector.
 - With type A

Data link connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M22	6	M24	1	Existed
	14		2	Existed

- With type B

Data link connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M22	6	M123	41	Existed
	14		42	Existed

NOTE:

Check the vehicle type confirm the service information. Refer to [MWI-5, "Information"](#).

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the combination meter.

NO >> Repair the main line between the data link connector and the combination meter.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389958

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ECM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E16	100	99	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ECM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to [EC-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ECM. Refer to [EC-501, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ECM branch line.
NO >> Repair the power supply and the ground circuit.

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389959

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.
 - Without Intelligent cruise control

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E33	26	14	Approx. 54 – 66

- With Intelligent cruise control

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E125	26	14	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-323, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-350, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389960

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E46	41	40	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the IPDM E/R branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to the following.

- With Intelligent Key system: [BCS-71, "Diagnosis Procedure"](#)
- Without Intelligent Key system: [BCS-128, "Diagnosis Procedure"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the IPDM E/R. Refer to the following.
- With Intelligent Key system: [BCS-78, "Removal and Installation"](#)
 - Without Intelligent Key system: [BCS-135, "Removal and Installation"](#)

YES (Past error)>>Error was detected in the IPDM E/R branch line.

- NO >> Repair the power supply and the ground circuit.

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389961

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - TCM
 - Harness connector F50
 - Harness connector E64

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of TCM.
2. Check the resistance between the TCM harness connector terminals.

TCM harness connector		Resistance (Ω)
Connector No.	Terminal No.	
F23	33 23	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the TCM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-238, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the TCM. Refer to the [TM-266, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the TCM branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389962

WARNING:

Always observe the following items for preventing accidental activation.

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace the main harness.

2.CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-38. "Work Flow"](#).

Is the inspection result normal?

- YES >> Replace the main harness.
NO >> Replace parts whose air bag system has a malfunction.

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389963

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M22	6	14	Approx. 54 – 66

Is the measurement value within the specification?

- YES (Present error)>>Check CAN system type decision again.
YES (Past error)>>Error was detected in the data link connector branch line circuit.
NO >> Repair the data link connector branch line.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

EPS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

EPS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389964

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the EPS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of EPS control unit.
2. Check the resistance between the EPS control unit harness connector terminals.

EPS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M87	2	1	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the EPS control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the EPS control unit. Refer to [STC-23, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the EPS control unit. Refer to [STC-40, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the EPS control unit branch line.
NO >> Repair the power supply and the ground circuit.

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389966

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M14	5	2	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the steering angle sensor branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to the following.

- Without ICC: [BRC-51, "Wiring Diagram"](#)
- With ICC: [BRC-225, "Wiring Diagram"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-353, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the steering angle sensor branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389970

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
 2. Check the resistance between the combination meter harness connector terminals.
- With type A

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M24	1	2	Approx. 54 – 66

- With type B

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M123	41	42	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the combination meter branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to the following.

- With type A: [MWI-51, "COMBINATION METER : Diagnosis Procedure"](#)
- With type B: [MWI-126, "COMBINATION METER : Diagnosis Procedure"](#)

NOTE:

Check the vehicle type confirm the service information. Refer to [MWI-5, "Information"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the combination meter. Refer to [MWI-74, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the combination meter branch line.
NO >> Repair the power supply and the ground circuit.

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389971

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
 2. Check the resistance between the BCM harness connector terminals.
- Without Intelligent Key system

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M21	39	40	Approx. 108 – 132

- With Intelligent Key system

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M84	39	40	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the BCM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to the following.

- With Intelligent Key system: [BCS-71, "Diagnosis Procedure"](#)
- Without Intelligent Key system: [BCS-128, "Diagnosis Procedure"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to the following.
- With Intelligent Key system: [BCS-78, "Removal and Installation"](#)
 - Without Intelligent Key system: [BCS-135, "Removal and Installation"](#)

YES (Past error)>>Error was detected in the BCM branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000013389975

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication system.
4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		
M22	6	14	Not existed

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Check the harness and repair the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M22	6		Not existed
	14		Not existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Check the harness and repair the root cause.

4.CHECK ECM AND BCM TERMINATION CIRCUIT

1. Remove the ECM and the BCM.
2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		
100	99	Approx. 108 – 132

3. Check the resistance between the BCM terminals.

BCM		Resistance (Ω)
Terminal No.		
39	40	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 5.
NO >> Replace the ECM and/or the BCM.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication system.

NOTE:

ECM and BCM have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

MAIN LINE BETWEEN IPDM-E AND DLC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN IPDM-E AND DLC CIRCUIT

Diagnosis Procedure

INFOID:000000013389987

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector E4
 - Harness connector M2

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - IPDM E/R
 - Harness connectors E4 and M2
2. Check the continuity between the IPDM E/R harness connector and the harness connector.

IPDM E/R harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E46	41	E4	100G	Existed
	40		95G	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the IPDM E/R and the harness connector E4.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector and the data link connector.

Harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M2	100G	M22	6	Existed
	95G		14	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the IPDM E/R and the data link connector.

NO >> Repair the main line between the harness connector M2 and the data link connector.

MAIN LINE BETWEEN DLC AND M&A CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

MAIN LINE BETWEEN DLC AND M&A CIRCUIT

Diagnosis Procedure

INFOID:000000013389988

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Combination meter
4. Check the continuity between the data link connector and the combination meter harness connector.
 - With type A

Data link connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M22	6	M24	1	Existed
	14		2	Existed

- With type B

Data link connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M22	6	M123	41	Existed
	14		42	Existed

NOTE:

Check the vehicle type confirm the service information. Refer to [MWI-5, "Information"](#).

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the combination meter.

NO >> Repair the main line between the data link connector and the combination meter.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN RDR-L AND LASER CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

MAIN LINE BETWEEN RDR-L AND LASER CIRCUIT

Diagnosis Procedure

INFOID:000000013389991

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B11
 - Harness connector M10

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector B11 and M10.
2. Check the continuity between the harness connector terminals.

Harness connector		Continuity	
Connector No.	Terminal No.		
B11	14	4	Existed
	2	16	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the harness connector B11.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M2 and E4.
2. Check the continuity between the harness connector.

Harness connector		ICC sensor harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M10	4	M2	51G	Existed
	16		52G	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the side radar LH and the ICC sensor.

NO >> Repair the main line between the harness connector M10 and M2.

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389992

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ECM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E16	100	99	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ECM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to [EC-168. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ECM. Refer to [EC-501. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ECM branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389993

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.
 - Without Intelligent cruise control

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E33	26	14	Approx. 54 – 66

- With Intelligent cruise control

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E125	26	14	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-323, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-350, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.
NO >> Repair the power supply and the ground circuit.

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389994

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E46	41	40	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the IPDM E/R branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to the following.

- With Intelligent Key system: [BCS-71, "Diagnosis Procedure"](#)
- Without Intelligent Key system: [BCS-128, "Diagnosis Procedure"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the IPDM E/R. Refer to the following.
- With Intelligent Key system: [BCS-78, "Removal and Installation"](#)
 - Without Intelligent Key system: [BCS-135, "Removal and Installation"](#)

YES (Past error)>>Error was detected in the IPDM E/R branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389995

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - TCM
 - Harness connector F50
 - Harness connector E64

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of TCM.
2. Check the resistance between the TCM harness connector terminals.

TCM harness connector		Resistance (Ω)
Connector No.	Terminal No.	
F23	33 23	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the TCM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-238, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the TCM. Refer to the [TM-266, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the TCM branch line.

NO >> Repair the power supply and the ground circuit.

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389996

WARNING:

Always observe the following items for preventing accidental activation.

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
- NO >> Replace the main harness.

2. CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-38. "Work Flow"](#).

Is the inspection result normal?

- YES >> Replace the main harness.
- NO >> Replace parts whose air bag system has a malfunction.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389997

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M22	6	14	Approx. 54 – 66

Is the measurement value within the specification?

- YES (Present error)>>Check CAN system type decision again.
YES (Past error)>>Error was detected in the data link connector branch line circuit.
NO >> Repair the data link connector branch line.

EPS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

EPS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389998

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the EPS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of EPS control unit.
2. Check the resistance between the EPS control unit harness connector terminals.

EPS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M87	2	1	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the EPS control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the EPS control unit. Refer to [STC-23, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the EPS control unit. Refer to [STC-40, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the EPS control unit branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

ICC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013389999

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ADAS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ADAS control unit.
2. Check the continuity between the ADAS control unit harness connector terminals.

ADAS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M148	9	10	Approx. 54 – 66

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> Repair the ADAS control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ADAS control unit. Refer to [DAS-66, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ADAS control unit. Refer to [DAS-67, "Removal and Installation"](#).
 YES (Past error)>>Error was detected in the ADAS control unit branch line.
 NO >> Repair the power supply and the ground circuit.

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390000

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M14	5	2	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the steering angle sensor branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to the following.

- Without ICC: [BRC-51, "Wiring Diagram"](#)
- With ICC: [BRC-225, "Wiring Diagram"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-353, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the steering angle sensor branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

TCU BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

TCU BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390001

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the TCU for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of TCU.
2. Check the resistance between the TCU harness connector terminals.

TCU harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M150	6	7	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the TCU branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCU. Refer to [AV-386, "TCU : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the TCU. Refer to [AV-390, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the TCU branch line.
NO >> Repair the power supply and the ground circuit.

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390004

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
 2. Check the resistance between the combination meter harness connector terminals.
- With type A

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M24	1	2	Approx. 54 – 66

- With type B

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M123	41	42	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the combination meter branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to the following.

- With type A: [MWI-51, "COMBINATION METER : Diagnosis Procedure"](#)
- With type B: [MWI-126, "COMBINATION METER : Diagnosis Procedure"](#)

NOTE:

Check the vehicle type confirm the service information. Refer to [MWI-5, "Information"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the combination meter. Refer to [MWI-74, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the combination meter branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390005

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
 2. Check the resistance between the BCM harness connector terminals.
- Without Intelligent Key system

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M21	39	40	Approx. 108 – 132

- With Intelligent Key system

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M84	39	40	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the BCM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to the following.

- With Intelligent Key system: [BCS-71, "Diagnosis Procedure"](#)
- Without Intelligent Key system: [BCS-128, "Diagnosis Procedure"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to the following.
- With Intelligent Key system: [BCS-78, "Removal and Installation"](#)
 - Without Intelligent Key system: [BCS-135, "Removal and Installation"](#)
- YES (Past error)>>Error was detected in the BCM branch line.
NO >> Repair the power supply and the ground circuit.

LASER BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

LASER BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390008

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ICC sensor
 - ADAS control unit
 - Harness connector E4
 - Harness connector M2

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ADAS control unit.
2. Check the continuity between the ADAS control unit harness connector terminals.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
M148	2	18	Existed
	5	6	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (ITS communication circuit side).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of ADAS control unit.
2. Disconnect the connector of ICC sensor.
3. Check the resistance between the ICC sensor harness connector terminals.

ICC sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E76	2	3	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the ICC sensor branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ICC sensor. Refer to [DAS-143, "ICC SENSOR : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the ICC sensor. Refer to [DAS-154, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the ICC sensor branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000013390009

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication system.
4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		
M22	6	14	Not existed

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Check the harness and repair the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M22	6		Not existed
	14		Not existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Check the harness and repair the root cause.

4.CHECK ECM AND BCM TERMINATION CIRCUIT

1. Remove the ECM and the BCM.
2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		
100	99	Approx. 108 – 132

3. Check the resistance between the BCM terminals.

BCM		Resistance (Ω)
Terminal No.		
39	40	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 5.
NO >> Replace the ECM and/or the BCM.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication system.

NOTE:

ECM and BCM have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

ITS COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

ITS COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000013390010

1. CHECK CAN DIAGNOSIS

Check the CAN diagnosis results from CONSULT to see that the CAN communication circuit 1 have no mal-function.

Are the CAN communication 1 circuits normal?

YES >> GO TO 2.

NO >> Check and repair CAN communication circuit 1.

2. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ADAS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the terminal and connector.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the ADAS control unit harness connectors.
2. Check the continuity between the ADAS control unit harness connector.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
M148	2	18	Existed
	5	6	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the ADAS control unit branch line. (ITS communication circuit side).

4. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar RH
 - Side radar LH
 - ICC sensor
2. Check the continuity between the ADAS control unit harness connector terminals.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
M148	2	5	Not existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Check the harness and repair the root cause.

5. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the ADAS control unit harness connector and the ground.

ADAS control unit harness connector		Ground	Continuity
Connector No.	Terminal No.		
M148	2		Not existed
	5		Not existed

Is the inspection result normal?

ITS COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 3)]

- YES >> GO TO 6.
- NO >> Check the harness and repair the root cause.

6. CHECK TERMINATION CIRCUIT

1. Remove the ADAS control unit.
2. Check the resistance between the ADAS control unit terminals.

ADAS control unit		Resistance (Ω)
Terminal No.		
2	5	Approx. 108 – 132
18	6	

Is the inspection result normal?

- YES >> GO TO 7.
- NO >> Replace the ADAS control unit.

7. CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

Inspection result

- Reproduced >> GO TO 8.
- Non-reproduced >> Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

8. CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of ITS communication circuit.
NOTE:
ADAS control unit has two terminations circuit. Check other units first.
4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

- Reproduced >> Connect the connector. Check other units as per the above procedure.
- Non-reproduced >> Replace the unit whose connector was disconnected.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN IPDM-E AND DLC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN IPDM-E AND DLC CIRCUIT

Diagnosis Procedure

INFOID:000000013390020

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector E4
 - Harness connector M2

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - IPDM E/R
 - Harness connectors E4 and M2
2. Check the continuity between the IPDM E/R harness connector and the harness connector.

IPDM E/R harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E46	41	E4	100G	Existed
	40		95G	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the IPDM E/R and the harness connector E4.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector and the data link connector.

Harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M2	100G	M22	6	Existed
	95G		14	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the IPDM E/R and the data link connector.

NO >> Repair the main line between the harness connector M2 and the data link connector.

MAIN LINE BETWEEN DLC AND M&A CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

MAIN LINE BETWEEN DLC AND M&A CIRCUIT

Diagnosis Procedure

INFOID:000000013390021

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Combination meter
4. Check the continuity between the data link connector and the combination meter harness connector.
 - With type A

Data link connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M22	6	M24	1	Existed
	14		2	Existed

- With type B

Data link connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M22	6	M123	41	Existed
	14		42	Existed

NOTE:

Check the vehicle type confirm the service information. Refer to [MWI-5, "Information"](#).

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the combination meter.

NO >> Repair the main line between the data link connector and the combination meter.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN RDR-L AND LASER CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

MAIN LINE BETWEEN RDR-L AND LASER CIRCUIT

Diagnosis Procedure

INFOID:000000013390024

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B11
 - Harness connector M10

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector B11 and M10.
2. Check the continuity between the harness connector terminals.

Harness connector		Continuity	
Connector No.	Terminal No.		
B11	14	4	Existed
	2	16	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the harness connector B11.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M2 and E4.
2. Check the continuity between the harness connector.

Harness connector		ICC sensor harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M10	4	M2	51G	Existed
	16		52G	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the side radar LH and the ICC sensor.

NO >> Repair the main line between the harness connector M10 and M2.

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390025

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ECM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E16	100	99	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ECM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to [EC-168. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ECM. Refer to [EC-501. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ECM branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390026

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
 2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.
- Without Intelligent cruise control

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E33	26	14	Approx. 54 – 66

- With Intelligent cruise control

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E125	26	14	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-323, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-350, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.
NO >> Repair the power supply and the ground circuit.

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390027

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E46	41	40	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the IPDM E/R branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to the following.

- With Intelligent Key system: [BCS-71, "Diagnosis Procedure"](#)
- Without Intelligent Key system: [BCS-128, "Diagnosis Procedure"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the IPDM E/R. Refer to the following.
- With Intelligent Key system: [BCS-78, "Removal and Installation"](#)
 - Without Intelligent Key system: [BCS-135, "Removal and Installation"](#)

YES (Past error)>>Error was detected in the IPDM E/R branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390028

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - TCM
 - Harness connector F50
 - Harness connector E64

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of TCM.
2. Check the resistance between the TCM harness connector terminals.

TCM harness connector		Resistance (Ω)
Connector No.	Terminal No.	
F23	33 23	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the TCM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-238, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the TCM. Refer to the [TM-266, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the TCM branch line.

NO >> Repair the power supply and the ground circuit.

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390029

WARNING:

Always observe the following items for preventing accidental activation.

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
- NO >> Replace the main harness.

2. CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-38. "Work Flow"](#).

Is the inspection result normal?

- YES >> Replace the main harness.
- NO >> Replace parts whose air bag system has a malfunction.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390030

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M22	6	14	Approx. 54 – 66

Is the measurement value within the specification?

- YES (Present error)>>Check CAN system type decision again.
YES (Past error)>>Error was detected in the data link connector branch line circuit.
NO >> Repair the data link connector branch line.

EPS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

EPS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390031

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the EPS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of EPS control unit.
2. Check the resistance between the EPS control unit harness connector terminals.

EPS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M87	2	1	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the EPS control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the EPS control unit. Refer to [STC-23, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the EPS control unit. Refer to [STC-40, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the EPS control unit branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

ICC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390032

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ADAS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ADAS control unit.
2. Check the continuity between the ADAS control unit harness connector terminals.

ADAS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M148	9	10	Approx. 54 – 66

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> Repair the ADAS control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ADAS control unit. Refer to [DAS-66, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ADAS control unit. Refer to [DAS-67, "Removal and Installation"](#).
 YES (Past error)>>Error was detected in the ADAS control unit branch line.
 NO >> Repair the power supply and the ground circuit.

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390033

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M14	5	2	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the steering angle sensor branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to the following.

- Without ICC: [BRC-51, "Wiring Diagram"](#)
- With ICC: [BRC-225, "Wiring Diagram"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-353, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the steering angle sensor branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390035

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the AV control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
 2. Check the resistance between the AV control unit harness connector terminals.
- With navigation system without BOSE audio system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M103	8	17	Approx. 54 – 66

- With navigation system and BOSE audio system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M100	8	17	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the AV control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to the following.

- With navigation system without BOSE audio system: [AV-182, "AV CONTROL UNIT : Diagnosis Procedure"](#)
- With navigation system and BOSE audio system: [AV-285, "AV CONTROL UNIT : Diagnosis Procedure"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the AV control unit. Refer to the following.
- With navigation system without BOSE audio system: [AV-210, "Removal and Installation"](#)
 - With navigation system and BOSE audio system: [AV-321, "Removal and Installation"](#)

YES (Past error)>>Error was detected in the AV control unit branch line.

- NO >> Repair the power supply and the ground circuit.

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390037

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
 2. Check the resistance between the combination meter harness connector terminals.
- With type A

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M24	1	2	Approx. 54 – 66

- With type B

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M123	41	42	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the combination meter branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to the following.

- With type A: [MWI-51, "COMBINATION METER : Diagnosis Procedure"](#)
- With type B: [MWI-126, "COMBINATION METER : Diagnosis Procedure"](#)

NOTE:

Check the vehicle type confirm the service information. Refer to [MWI-5, "Information"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the combination meter. Refer to [MWI-74, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the combination meter branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390038

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
 2. Check the resistance between the BCM harness connector terminals.
- Without Intelligent Key system

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M21	39	40	Approx. 108 – 132

- With Intelligent Key system

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M84	39	40	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> Repair the BCM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to the following.

- With Intelligent Key system: [BCS-71, "Diagnosis Procedure"](#)
- Without Intelligent Key system: [BCS-128, "Diagnosis Procedure"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to the following.
- With Intelligent Key system: [BCS-78, "Removal and Installation"](#)
 - Without Intelligent Key system: [BCS-135, "Removal and Installation"](#)
- YES (Past error)>>Error was detected in the BCM branch line.
 NO >> Repair the power supply and the ground circuit.

RDR-L BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

RDR-L BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390039

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Side radar LH
 - ADAS control unit
 - Harness connector B250
 - Harness connector B29

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ADAS control unit.
2. Check the continuity between the ADAS control unit harness connector.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
M148	2	18	Existed
	5	6	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (ITS communication circuit side).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of ADAS control unit.
2. Disconnect the connector of side radar LH.
3. Check the resistance between the side radar LH harness connector terminals.

Side radar LH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B251	6	7	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the side radar LH branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar LH. Refer to [DAS-142, "SIDE RADAR LH: Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the side radar LH. Refer to [DAS-157, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the side radar LH branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

RDR-R BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

RDR-R BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390040

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Side radar RH
 - ADAS control unit
 - Harness connector B250
 - Harness connector B29

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ADAS control unit.
2. Check the continuity between the ADAS control unit harness connector.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
M148	2	18	Existed
	5	6	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (ITS communication circuit side).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of ADAS control unit.
2. Disconnect the connector of side radar RH.
3. Check the resistance between the side radar RH harness connector terminals.

Side radar RH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B252	6	7	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the side radar RH branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar RH. Refer to [DAS-142, "SIDE RADAR LH: Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the side radar RH. Refer to [DAS-157, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the side radar RH branch line.

NO >> Repair the power supply and the ground circuit.

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000013390042

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication system.
4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		
M22	6	14	Not existed

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Check the harness and repair the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M22	6		Not existed
	14		Not existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Check the harness and repair the root cause.

4.CHECK ECM AND BCM TERMINATION CIRCUIT

1. Remove the ECM and the BCM.
2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		
100	99	Approx. 108 – 132

3. Check the resistance between the BCM terminals.

BCM		Resistance (Ω)
Terminal No.		
39	40	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 5.
NO >> Replace the ECM and/or the BCM.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication system.

NOTE:

ECM and BCM have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

ITS COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 4)]

ITS COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000013390043

1. CHECK CAN DIAGNOSIS

Check the CAN diagnosis results from CONSULT to see that the CAN communication circuit 1 have no malfunction.

Are the CAN communication 1 circuits normal?

YES >> GO TO 2.

NO >> Check and repair CAN communication circuit 1.

2. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ADAS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the terminal and connector.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the ADAS control unit harness connectors.
2. Check the continuity between the ADAS control unit harness connector.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
M148	2	18	Existed
	5	6	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the ADAS control unit branch line. (ITS communication circuit side).

4. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar RH
 - Side radar LH
 - ICC sensor
2. Check the continuity between the ADAS control unit harness connector terminals.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
M148	2	5	Not existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Check the harness and repair the root cause.

5. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the ADAS control unit harness connector and the ground.

ADAS control unit harness connector		Ground	Continuity
Connector No.	Terminal No.		
M148	2		Not existed
	5		Not existed

Is the inspection result normal?

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

ITS COMMUNICATION CIRCUIT

[CAN SYSTEM (TYPE 4)]

< DTC/CIRCUIT DIAGNOSIS >

- YES >> GO TO 6.
NO >> Check the harness and repair the root cause.

6.CHECK TERMINATION CIRCUIT

1. Remove the ADAS control unit.
2. Check the resistance between the ADAS control unit terminals.

ADAS control unit		Resistance (Ω)
Terminal No.		
2	5	Approx. 108 – 132
18	6	

Is the inspection result normal?

- YES >> GO TO 7.
NO >> Replace the ADAS control unit.

7.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

Inspection result

- Reproduced>>GO TO 8.
Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

8.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of ITS communication circuit.
NOTE:
ADAS control unit has two terminations circuit. Check other units first.
4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

- Reproduced>>Connect the connector. Check other units as per the above procedure.
Non-reproduced>>Replace the unit whose connector was disconnected.

MAIN LINE BETWEEN IPDM-E AND DLC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN IPDM-E AND DLC CIRCUIT

Diagnosis Procedure

INFOID:0000000013390051

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector E4
 - Harness connector M2

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - IPDM E/R
 - Harness connectors E4 and M2
2. Check the continuity between the IPDM E/R harness connector and the harness connector.

IPDM E/R harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E46	41	E4	100G	Existed
	40		95G	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the IPDM E/R and the harness connector E4.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector and the data link connector.

Harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M2	100G	M22	6	Existed
	95G		14	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the IPDM E/R and the data link connector.

NO >> Repair the main line between the harness connector M2 and the data link connector.

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

MAIN LINE BETWEEN DLC AND M&A CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

MAIN LINE BETWEEN DLC AND M&A CIRCUIT

Diagnosis Procedure

INFOID:000000013390052

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Combination meter
4. Check the continuity between the data link connector and the combination meter harness connector.
 - With type A

Data link connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M22	6	M24	1	Existed
	14		2	Existed

- With type B

Data link connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M22	6	M123	41	Existed
	14		42	Existed

NOTE:

Check the vehicle type confirm the service information. Refer to [MWI-5, "Information"](#).

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the combination meter.

NO >> Repair the main line between the data link connector and the combination meter.

MAIN LINE BETWEEN RDR-L AND LASER CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

MAIN LINE BETWEEN RDR-L AND LASER CIRCUIT

Diagnosis Procedure

INFOID:000000013390055

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B11
 - Harness connector M10

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector B11 and M10.
2. Check the continuity between the harness connector terminals.

Harness connector		Continuity	
Connector No.	Terminal No.		
B11	14	4	Existed
	2	16	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the harness connector B11.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M2 and E4.
2. Check the continuity between the harness connector.

Harness connector		ICC sensor harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M10	4	M2	51G	Existed
	16		52G	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the side radar LH and the ICC sensor.

NO >> Repair the main line between the harness connector M10 and M2.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390056

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ECM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E16	100	99	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ECM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to [EC-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ECM. Refer to [EC-501, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ECM branch line.
NO >> Repair the power supply and the ground circuit.

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390057

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.
 - Without Intelligent cruise control

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E33	26	14	Approx. 54 – 66

- With Intelligent cruise control

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E125	26	14	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-323, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-350, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390058

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E46	41	40	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the IPDM E/R branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to the following.

- With Intelligent Key system: [BCS-71, "Diagnosis Procedure"](#)
- Without Intelligent Key system: [BCS-128, "Diagnosis Procedure"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the IPDM E/R. Refer to the following.
- With Intelligent Key system: [BCS-78, "Removal and Installation"](#)
 - Without Intelligent Key system: [BCS-135, "Removal and Installation"](#)

YES (Past error)>>Error was detected in the IPDM E/R branch line.

- NO >> Repair the power supply and the ground circuit.

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390059

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - TCM
 - Harness connector F50
 - Harness connector E64

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of TCM.
2. Check the resistance between the TCM harness connector terminals.

TCM harness connector		Resistance (Ω)
Connector No.	Terminal No.	
F23	33 23	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the TCM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-238, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the TCM. Refer to the [TM-266, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the TCM branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390060

WARNING:

Always observe the following items for preventing accidental activation.

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace the main harness.

2.CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-38. "Work Flow"](#).

Is the inspection result normal?

- YES >> Replace the main harness.
NO >> Replace parts whose air bag system has a malfunction.

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390061

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M22	6	14	Approx. 54 – 66

Is the measurement value within the specification?

- YES (Present error)>>Check CAN system type decision again.
YES (Past error)>>Error was detected in the data link connector branch line circuit.
NO >> Repair the data link connector branch line.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

EPS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390062

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the EPS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of EPS control unit.
2. Check the resistance between the EPS control unit harness connector terminals.

EPS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M87	2	1	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> Repair the EPS control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the EPS control unit. Refer to [STC-23, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the EPS control unit. Refer to [STC-40, "Removal and Installation"](#).
 YES (Past error)>>Error was detected in the EPS control unit branch line.
 NO >> Repair the power supply and the ground circuit.

ICC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390063

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ADAS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ADAS control unit.
2. Check the continuity between the ADAS control unit harness connector terminals.

ADAS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M148	9	10	Approx. 54 – 66

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> Repair the ADAS control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ADAS control unit. Refer to [DAS-66, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ADAS control unit. Refer to [DAS-67, "Removal and Installation"](#).
 YES (Past error)>>Error was detected in the ADAS control unit branch line.
 NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390064

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M14	5	2	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the steering angle sensor branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to the following.

- Without ICC: [BRC-51, "Wiring Diagram"](#)
- With ICC: [BRC-225, "Wiring Diagram"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-353, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the steering angle sensor branch line.
NO >> Repair the power supply and the ground circuit.

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390066

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the AV control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
 2. Check the resistance between the AV control unit harness connector terminals.
- With navigation system without BOSE audio system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M103	8	17	Approx. 54 – 66

- With navigation system and BOSE audio system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M100	8	17	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the AV control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to the following.

- With navigation system without BOSE audio system: [AV-182, "AV CONTROL UNIT : Diagnosis Procedure"](#)
- With navigation system and BOSE audio system: [AV-285, "AV CONTROL UNIT : Diagnosis Procedure"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the AV control unit. Refer to the following.
- With navigation system without BOSE audio system: [AV-210, "Removal and Installation"](#)
 - With navigation system and BOSE audio system: [AV-321, "Removal and Installation"](#)

YES (Past error)>>Error was detected in the AV control unit branch line.

- NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

HVAC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390067

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the A/C auto amp. for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/C auto amp.
2. Check the resistance between the A/C auto amp. harness connector terminals.

A/C auto amp. harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M34	6	7	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the A/C auto amp. branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the A/C auto amp. Refer to [HAC-83, "A/C AUTO AMP. : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the A/C auto amp. Refer to [HAC-105, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the A/C auto amp. branch line.
NO >> Repair the power supply and the ground circuit.

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390068

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
 2. Check the resistance between the combination meter harness connector terminals.
- With type A

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M24	1	2	Approx. 54 – 66

- With type B

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M123	41	42	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the combination meter branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to the following.

- With type A: [MWI-51, "COMBINATION METER : Diagnosis Procedure"](#)
- With type B: [MWI-126, "COMBINATION METER : Diagnosis Procedure"](#)

NOTE:

Check the vehicle type confirm the service information. Refer to [MWI-5, "Information"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the combination meter. Refer to [MWI-74, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the combination meter branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390069

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
 2. Check the resistance between the BCM harness connector terminals.
- Without Intelligent Key system

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M21	39	40	Approx. 108 – 132

- With Intelligent Key system

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M84	39	40	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> Repair the BCM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to the following.

- With Intelligent Key system: [BCS-71, "Diagnosis Procedure"](#)
- Without Intelligent Key system: [BCS-128, "Diagnosis Procedure"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to the following.
- With Intelligent Key system: [BCS-78, "Removal and Installation"](#)
 - Without Intelligent Key system: [BCS-135, "Removal and Installation"](#)
- YES (Past error)>>Error was detected in the BCM branch line.
 NO >> Repair the power supply and the ground circuit.

RDR-L BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

RDR-L BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390070

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Side radar LH
 - ADAS control unit
 - Harness connector B250
 - Harness connector B29

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ADAS control unit.
2. Check the continuity between the ADAS control unit harness connector.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
M148	2	18	Existed
	5	6	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (ITS communication circuit side).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of ADAS control unit.
2. Disconnect the connector of side radar LH.
3. Check the resistance between the side radar LH harness connector terminals.

Side radar LH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B251	6	7	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the side radar LH branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar LH. Refer to [DAS-142, "SIDE RADAR LH: Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the side radar LH. Refer to [DAS-157, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the side radar LH branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

RDR-R BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

RDR-R BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390071

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Side radar RH
 - ADAS control unit
 - Harness connector B250
 - Harness connector B29

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ADAS control unit.
2. Check the continuity between the ADAS control unit harness connector.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
M148	2	18	Existed
	5	6	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (ITS communication circuit side).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of ADAS control unit.
2. Disconnect the connector of side radar RH.
3. Check the resistance between the side radar RH harness connector terminals.

Side radar RH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B252	6	7	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the side radar RH branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar RH. Refer to [DAS-142, "SIDE RADAR LH: Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the side radar RH. Refer to [DAS-157, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the side radar RH branch line.

NO >> Repair the power supply and the ground circuit.

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000013390073

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication system.
4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M22	6 14	Not existed

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Check the harness and repair the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M22	6		Not existed
	14		Not existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Check the harness and repair the root cause.

4.CHECK ECM AND BCM TERMINATION CIRCUIT

1. Remove the ECM and the BCM.
2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		
100	99	Approx. 108 – 132

3. Check the resistance between the BCM terminals.

BCM		Resistance (Ω)
Terminal No.		
39	40	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 5.
NO >> Replace the ECM and/or the BCM.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication system.

NOTE:

ECM and BCM have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

ITS COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 5)]

ITS COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000013390074

1. CHECK CAN DIAGNOSIS

Check the CAN diagnosis results from CONSULT to see that the CAN communication circuit 1 have no malfunction.

Are the CAN communication 1 circuits normal?

YES >> GO TO 2.

NO >> Check and repair CAN communication circuit 1.

2. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ADAS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the terminal and connector.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the ADAS control unit harness connectors.
2. Check the continuity between the ADAS control unit harness connector.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
M148	2	18	Existed
	5	6	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the ADAS control unit branch line. (ITS communication circuit side).

4. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar RH
 - Side radar LH
 - ICC sensor
2. Check the continuity between the ADAS control unit harness connector terminals.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
M148	2	5	Not existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Check the harness and repair the root cause.

5. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the ADAS control unit harness connector and the ground.

ADAS control unit harness connector		Ground	Continuity
Connector No.	Terminal No.		
M148	2		Not existed
	5		Not existed

Is the inspection result normal?

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

ITS COMMUNICATION CIRCUIT

[CAN SYSTEM (TYPE 5)]

< DTC/CIRCUIT DIAGNOSIS >

- YES >> GO TO 6.
NO >> Check the harness and repair the root cause.

6.CHECK TERMINATION CIRCUIT

1. Remove the ADAS control unit.
2. Check the resistance between the ADAS control unit terminals.

ADAS control unit		Resistance (Ω)
Terminal No.		
2	5	Approx. 108 – 132
18	6	

Is the inspection result normal?

- YES >> GO TO 7.
NO >> Replace the ADAS control unit.

7.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

Inspection result

- Reproduced>>GO TO 8.
Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

8.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of ITS communication circuit.
NOTE:
ADAS control unit has two terminations circuit. Check other units first.
4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

- Reproduced>>Connect the connector. Check other units as per the above procedure.
Non-reproduced>>Replace the unit whose connector was disconnected.

MAIN LINE BETWEEN IPDM-E AND DLC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN IPDM-E AND DLC CIRCUIT

Diagnosis Procedure

INFOID:0000000013390084

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector E4
 - Harness connector M2

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - IPDM E/R
 - Harness connectors E4 and M2
2. Check the continuity between the IPDM E/R harness connector and the harness connector.

IPDM E/R harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E46	41	E4	100G	Existed
	40		95G	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the IPDM E/R and the harness connector E4.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector and the data link connector.

Harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M2	100G	M22	6	Existed
	95G		14	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the IPDM E/R and the data link connector.

NO >> Repair the main line between the harness connector M2 and the data link connector.

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

MAIN LINE BETWEEN DLC AND M&A CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

MAIN LINE BETWEEN DLC AND M&A CIRCUIT

Diagnosis Procedure

INFOID:000000013390085

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Combination meter
4. Check the continuity between the data link connector and the combination meter harness connector.
 - With type A

Data link connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M22	6	M24	1	Existed
	14		2	Existed

- With type B

Data link connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M22	6	M123	41	Existed
	14		42	Existed

NOTE:

Check the vehicle type confirm the service information. Refer to [MWI-5, "Information"](#).

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the combination meter.

NO >> Repair the main line between the data link connector and the combination meter.

MAIN LINE BETWEEN RDR-L AND LASER CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

MAIN LINE BETWEEN RDR-L AND LASER CIRCUIT

Diagnosis Procedure

INFOID:000000013390088

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B11
 - Harness connector M10

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector B11 and M10.
2. Check the continuity between the harness connector terminals.

Harness connector		Continuity	
Connector No.	Terminal No.		
B11	14	4	Existed
	2	16	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the harness connector B11.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M2 and E4.
2. Check the continuity between the harness connector.

Harness connector		ICC sensor harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M10	4	M2	51G	Existed
	16		52G	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the side radar LH and the ICC sensor.

NO >> Repair the main line between the harness connector M10 and M2.

LAN

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390089

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ECM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E16	100	99	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ECM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to [EC-168, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ECM. Refer to [EC-501, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ECM branch line.
NO >> Repair the power supply and the ground circuit.

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390090

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.
 - Without Intelligent cruise control

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E33	26	14	Approx. 54 – 66

- With Intelligent cruise control

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E125	26	14	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-323, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-350, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390091

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E46	41	40	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the IPDM E/R branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to the following.

- With Intelligent Key system: [BCS-71, "Diagnosis Procedure"](#)
- Without Intelligent Key system: [BCS-128, "Diagnosis Procedure"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the IPDM E/R. Refer to the following.
- With Intelligent Key system: [BCS-78, "Removal and Installation"](#)
 - Without Intelligent Key system: [BCS-135, "Removal and Installation"](#)
- YES (Past error)>>Error was detected in the IPDM E/R branch line.
NO >> Repair the power supply and the ground circuit.

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390092

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - TCM
 - Harness connector F50
 - Harness connector E64

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of TCM.
2. Check the resistance between the TCM harness connector terminals.

TCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
F23	33	23	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the TCM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-238, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the TCM. Refer to the [TM-266, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the TCM branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390093

WARNING:

Always observe the following items for preventing accidental activation.

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace the main harness.

2.CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-38. "Work Flow"](#).

Is the inspection result normal?

- YES >> Replace the main harness.
NO >> Replace parts whose air bag system has a malfunction.

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390094

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M22	6	14	Approx. 54 – 66

Is the measurement value within the specification?

- YES (Present error)>>Check CAN system type decision again.
YES (Past error)>>Error was detected in the data link connector branch line circuit.
NO >> Repair the data link connector branch line.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

EPS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390095

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the EPS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of EPS control unit.
2. Check the resistance between the EPS control unit harness connector terminals.

EPS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M87	2	1	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> Repair the EPS control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the EPS control unit. Refer to [STC-23, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the EPS control unit. Refer to [STC-40, "Removal and Installation"](#).
 YES (Past error)>>Error was detected in the EPS control unit branch line.
 NO >> Repair the power supply and the ground circuit.

ICC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

ICC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390096

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ADAS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ADAS control unit.
2. Check the continuity between the ADAS control unit harness connector terminals.

ADAS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M148	9	10	Approx. 54 – 66

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair the ADAS control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ADAS control unit. Refer to [DAS-66, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ADAS control unit. Refer to [DAS-67, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ADAS control unit branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390097

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M14	5	2	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the steering angle sensor branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to the following.

- Without ICC: [BRC-51, "Wiring Diagram"](#)
- With ICC: [BRC-225, "Wiring Diagram"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-353, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the steering angle sensor branch line.
NO >> Repair the power supply and the ground circuit.

TCU BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

TCU BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390098

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the TCU for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of TCU.
2. Check the resistance between the TCU harness connector terminals.

TCU harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M150	6	7	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the TCU branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCU. Refer to [AV-386, "TCU : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the TCU. Refer to [AV-390, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the TCU branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390099

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the AV control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
 2. Check the resistance between the AV control unit harness connector terminals.
- With navigation system without BOSE audio system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M103	8	17	Approx. 54 – 66

- With navigation system and BOSE audio system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M100	8	17	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the AV control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to the following.

- With navigation system without BOSE audio system: [AV-182, "AV CONTROL UNIT : Diagnosis Procedure"](#)
- With navigation system and BOSE audio system: [AV-285, "AV CONTROL UNIT : Diagnosis Procedure"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the AV control unit. Refer to the following.
- With navigation system without BOSE audio system: [AV-210, "Removal and Installation"](#)
 - With navigation system and BOSE audio system: [AV-321, "Removal and Installation"](#)

YES (Past error)>>Error was detected in the AV control unit branch line.

- NO >> Repair the power supply and the ground circuit.

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390101

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
 2. Check the resistance between the combination meter harness connector terminals.
- With type A

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M24	1	2	Approx. 54 – 66

- With type B

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M123	41	42	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the combination meter branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to the following.

- With type A: [MWI-51, "COMBINATION METER : Diagnosis Procedure"](#)
- With type B: [MWI-126, "COMBINATION METER : Diagnosis Procedure"](#)

NOTE:

Check the vehicle type confirm the service information. Refer to [MWI-5, "Information"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the combination meter. Refer to [MWI-74, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the combination meter branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390102

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
 2. Check the resistance between the BCM harness connector terminals.
- Without Intelligent Key system

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M21	39	40	Approx. 108 – 132

- With Intelligent Key system

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M84	39	40	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the BCM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to the following.

- With Intelligent Key system: [BCS-71, "Diagnosis Procedure"](#)
- Without Intelligent Key system: [BCS-128, "Diagnosis Procedure"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to the following.
- With Intelligent Key system: [BCS-78, "Removal and Installation"](#)
 - Without Intelligent Key system: [BCS-135, "Removal and Installation"](#)
- YES (Past error)>>Error was detected in the BCM branch line.
NO >> Repair the power supply and the ground circuit.

RDR-L BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

RDR-L BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390103

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Side radar LH
 - ADAS control unit
 - Harness connector B250
 - Harness connector B29

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ADAS control unit.
2. Check the continuity between the ADAS control unit harness connector.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
M148	2	18	Existed
	5	6	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (ITS communication circuit side).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of ADAS control unit.
2. Disconnect the connector of side radar LH.
3. Check the resistance between the side radar LH harness connector terminals.

Side radar LH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B251	6	7	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the side radar LH branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar LH. Refer to [DAS-142, "SIDE RADAR LH : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the side radar LH. Refer to [DAS-157, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the side radar LH branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

RDR-R BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

RDR-R BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390104

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Side radar RH
 - ADAS control unit
 - Harness connector B250
 - Harness connector B29

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ADAS control unit.
2. Check the continuity between the ADAS control unit harness connector.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
M148	2	18	Existed
	5	6	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (ITS communication circuit side).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of ADAS control unit.
2. Disconnect the connector of side radar RH.
3. Check the resistance between the side radar RH harness connector terminals.

Side radar RH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B252	6	7	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the side radar RH branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar RH. Refer to [DAS-142, "SIDE RADAR LH: Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the side radar RH. Refer to [DAS-157, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the side radar RH branch line.

NO >> Repair the power supply and the ground circuit.

LASER BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

LASER BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390105

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ICC sensor
 - ADAS control unit
 - Harness connector E4
 - Harness connector M2

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ADAS control unit.
2. Check the continuity between the ADAS control unit harness connector terminals.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
M148	2	18	Existed
	5	6	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (ITS communication circuit side).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of ADAS control unit.
2. Disconnect the connector of ICC sensor.
3. Check the resistance between the ICC sensor harness connector terminals.

ICC sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E76	2	3	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the ICC sensor branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ICC sensor. Refer to [DAS-143, "ICC SENSOR : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the ICC sensor. Refer to [DAS-154, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the ICC sensor branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000013390106

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication system.
4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		
M22	6	14	Not existed

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Check the harness and repair the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M22	6		Not existed
	14		Not existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Check the harness and repair the root cause.

4.CHECK ECM AND BCM TERMINATION CIRCUIT

1. Remove the ECM and the BCM.
2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		
100	99	Approx. 108 – 132

3. Check the resistance between the BCM terminals.

BCM		Resistance (Ω)
Terminal No.		
39	40	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 5.
NO >> Replace the ECM and/or the BCM.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication system.

NOTE:

ECM and BCM have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

ITS COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

ITS COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000013390107

1.CHECK CAN DIAGNOSIS

Check the CAN diagnosis results from CONSULT to see that the CAN communication circuit 1 have no mal-function.

Are the CAN communication 1 circuits normal?

YES >> GO TO 2.

NO >> Check and repair CAN communication circuit 1.

2.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ADAS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the terminal and connector.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the ADAS control unit harness connectors.
2. Check the continuity between the ADAS control unit harness connector.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
M148	2	18	Existed
	5	6	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the ADAS control unit branch line. (ITS communication circuit side).

4.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar RH
 - Side radar LH
 - ICC sensor
2. Check the continuity between the ADAS control unit harness connector terminals.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
M148	2	5	Not existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Check the harness and repair the root cause.

5.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the ADAS control unit harness connector and the ground.

ADAS control unit harness connector		Ground	Continuity
Connector No.	Terminal No.		
M148	2		Not existed
	5		Not existed

Is the inspection result normal?

ITS COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 6)]

- YES >> GO TO 6.
- NO >> Check the harness and repair the root cause.

6. CHECK TERMINATION CIRCUIT

1. Remove the ADAS control unit.
2. Check the resistance between the ADAS control unit terminals.

ADAS control unit		Resistance (Ω)
Terminal No.		
2	5	Approx. 108 – 132
18	6	

Is the inspection result normal?

- YES >> GO TO 7.
- NO >> Replace the ADAS control unit.

7. CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

Inspection result

- Reproduced>>GO TO 8.
- Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

8. CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of ITS communication circuit.
NOTE:
ADAS control unit has two terminations circuit. Check other units first.
4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

- Reproduced>>Connect the connector. Check other units as per the above procedure.
- Non-reproduced>>Replace the unit whose connector was disconnected.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN IPDM-E AND DLC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN IPDM-E AND DLC CIRCUIT

Diagnosis Procedure

INFOID:000000013390113

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector E4
 - Harness connector M2

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - IPDM E/R
 - Harness connectors E4 and M2
2. Check the continuity between the IPDM E/R harness connector and the harness connector.

IPDM E/R harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E46	41	E4	100G	Existed
	40		95G	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the IPDM E/R and the harness connector E4.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector and the data link connector.

Harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M2	100G	M22	6	Existed
	95G		14	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the IPDM E/R and the data link connector.

NO >> Repair the main line between the harness connector M2 and the data link connector.

MAIN LINE BETWEEN DLC AND M&A CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

MAIN LINE BETWEEN DLC AND M&A CIRCUIT

Diagnosis Procedure

INFOID:0000000013390114

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Combination meter
4. Check the continuity between the data link connector and the combination meter harness connector.
 - With type A

Data link connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M22	6	M24	1	Existed
	14		2	Existed

- With type B

Data link connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M22	6	M123	41	Existed
	14		42	Existed

NOTE:

Check the vehicle type confirm the service information. Refer to [MWI-5, "Information"](#).

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the combination meter.

NO >> Repair the main line between the data link connector and the combination meter.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN RDR-L AND LASER CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

MAIN LINE BETWEEN RDR-L AND LASER CIRCUIT

Diagnosis Procedure

INFOID:000000013390117

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B11
 - Harness connector M10

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector B11 and M10.
2. Check the continuity between the harness connector terminals.

Harness connector		Continuity	
Connector No.	Terminal No.		
B11	14	4	Existed
	2	16	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the harness connector B11.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connector M2 and E4.
2. Check the continuity between the harness connector.

Harness connector		ICC sensor harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M10	4	M2	51G	Existed
	16		52G	Existed

Is the inspection result normal?

YES (Present error)>>>Check CAN system type decision again.

YES (Past error)>>>Error was detected in the main line between the side radar LH and the ICC sensor.

NO >> Repair the main line between the harness connector M10 and M2.

ECM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000013390118

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ECM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E16	100	99	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ECM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to [EC-168. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ECM. Refer to [EC-501. "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ECM branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390119

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
 2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.
- Without Intelligent cruise control

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E33	26	14	Approx. 54 – 66

- With Intelligent cruise control

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E125	26	14	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-323, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-350, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.
NO >> Repair the power supply and the ground circuit.

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390120

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E46	41	40	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the IPDM E/R branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to the following.

- With Intelligent Key system: [BCS-71, "Diagnosis Procedure"](#)
- Without Intelligent Key system: [BCS-128, "Diagnosis Procedure"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the IPDM E/R. Refer to the following.
- With Intelligent Key system: [BCS-78, "Removal and Installation"](#)
 - Without Intelligent Key system: [BCS-135, "Removal and Installation"](#)

YES (Past error)>>Error was detected in the IPDM E/R branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

TCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

TCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390121

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - TCM
 - Harness connector F50
 - Harness connector E64

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of TCM.
2. Check the resistance between the TCM harness connector terminals.

TCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
F23	33	23	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the TCM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCM. Refer to [TM-238, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the TCM. Refer to the [TM-266, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the TCM branch line.
NO >> Repair the power supply and the ground circuit.

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390122

WARNING:

Always observe the following items for preventing accidental activation.

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace the main harness.

2. CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-38. "Work Flow"](#).

Is the inspection result normal?

- YES >> Replace the main harness.
NO >> Replace parts whose air bag system has a malfunction.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

DLC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390123

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M22	6	14	Approx. 54 – 66

Is the measurement value within the specification?

- YES (Present error)>>Check CAN system type decision again.
YES (Past error)>>Error was detected in the data link connector branch line circuit.
NO >> Repair the data link connector branch line.

EPS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

EPS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390124

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the EPS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of EPS control unit.
2. Check the resistance between the EPS control unit harness connector terminals.

EPS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M87	2	1	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the EPS control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the EPS control unit. Refer to [STC-23, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the EPS control unit. Refer to [STC-40, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the EPS control unit branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

ICC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390125

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ADAS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ADAS control unit.
2. Check the continuity between the ADAS control unit harness connector terminals.

ADAS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M148	9	10	Approx. 54 – 66

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> Repair the ADAS control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ADAS control unit. Refer to [DAS-66, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ADAS control unit. Refer to [DAS-67, "Removal and Installation"](#).
 YES (Past error)>>Error was detected in the ADAS control unit branch line.
 NO >> Repair the power supply and the ground circuit.

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390126

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M14	5	2	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the steering angle sensor branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to the following.

- Without ICC: [BRC-51, "Wiring Diagram"](#)
- With ICC: [BRC-225, "Wiring Diagram"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-353, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the steering angle sensor branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

TCU BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

TCU BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390127

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the TCU for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of TCU.
2. Check the resistance between the TCU harness connector terminals.

TCU harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M150	6	7	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the TCU branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCU. Refer to [AV-386, "TCU : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the TCU. Refer to [AV-390, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the TCU branch line.
NO >> Repair the power supply and the ground circuit.

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390128

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the AV control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
 2. Check the resistance between the AV control unit harness connector terminals.
- With navigation system without BOSE audio system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M103	8	17	Approx. 54 – 66

- With navigation system and BOSE audio system

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M100	8	17	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the AV control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to the following.

- With navigation system without BOSE audio system: [AV-182, "AV CONTROL UNIT : Diagnosis Procedure"](#)
- With navigation system and BOSE audio system: [AV-285, "AV CONTROL UNIT : Diagnosis Procedure"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the AV control unit. Refer to the following.
- With navigation system without BOSE audio system: [AV-210, "Removal and Installation"](#)
 - With navigation system and BOSE audio system: [AV-321, "Removal and Installation"](#)

YES (Past error)>>Error was detected in the AV control unit branch line.

- NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

HVAC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390129

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the A/C auto amp. for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/C auto amp.
2. Check the resistance between the A/C auto amp. harness connector terminals.

A/C auto amp. harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M34	6	7	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the A/C auto amp. branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the A/C auto amp. Refer to [HAC-83, "A/C AUTO AMP. : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the A/C auto amp. Refer to [HAC-105, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the A/C auto amp. branch line.
NO >> Repair the power supply and the ground circuit.

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:0000000113390130

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.
 - With type A

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M24	1	2	Approx. 54 – 66

- With type B

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M123	41	42	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> Repair the combination meter branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to the following.

- With type A: [MWI-51, "COMBINATION METER : Diagnosis Procedure"](#)
- With type B: [MWI-126, "COMBINATION METER : Diagnosis Procedure"](#)

NOTE:

Check the vehicle type confirm the service information. Refer to [MWI-5, "Information"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the combination meter. Refer to [MWI-74, "Removal and Installation"](#).
 YES (Past error)>>Error was detected in the combination meter branch line.
 NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390131

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
 2. Check the resistance between the BCM harness connector terminals.
- Without Intelligent Key system

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M21	39	40	Approx. 108 – 132

- With Intelligent Key system

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M84	39	40	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the BCM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to the following.

- With Intelligent Key system: [BCS-71, "Diagnosis Procedure"](#)
- Without Intelligent Key system: [BCS-128, "Diagnosis Procedure"](#)

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to the following.
- With Intelligent Key system: [BCS-78, "Removal and Installation"](#)
 - Without Intelligent Key system: [BCS-135, "Removal and Installation"](#)
- YES (Past error)>>Error was detected in the BCM branch line.
NO >> Repair the power supply and the ground circuit.

RDR-L BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

RDR-L BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390132

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Side radar LH
 - ADAS control unit
 - Harness connector B250
 - Harness connector B29

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ADAS control unit.
2. Check the continuity between the ADAS control unit harness connector.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
M148	2	18	Existed
	5	6	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (ITS communication circuit side).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of ADAS control unit.
2. Disconnect the connector of side radar LH.
3. Check the resistance between the side radar LH harness connector terminals.

Side radar LH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B251	6	7	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the side radar LH branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar LH. Refer to [DAS-142, "SIDE RADAR LH: Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the side radar LH. Refer to [DAS-157, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the side radar LH branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

RDR-R BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

RDR-R BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390133

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Side radar RH
 - ADAS control unit
 - Harness connector B250
 - Harness connector B29

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ADAS control unit.
2. Check the continuity between the ADAS control unit harness connector.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
M148	2	18	Existed
	5	6	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (ITS communication circuit side).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of ADAS control unit.
2. Disconnect the connector of side radar RH.
3. Check the resistance between the side radar RH harness connector terminals.

Side radar RH harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B252	6	7	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the side radar RH branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the side radar RH. Refer to [DAS-142, "SIDE RADAR LH: Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the side radar RH. Refer to [DAS-157, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the side radar RH branch line.

NO >> Repair the power supply and the ground circuit.

LASER BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

LASER BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000013390134

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ICC sensor
 - ADAS control unit
 - Harness connector E4
 - Harness connector M2

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ADAS control unit.
2. Check the continuity between the ADAS control unit harness connector terminals.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
M148	2	18	Existed
	5	6	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause (ITS communication circuit side).

3. CHECK HARNESS FOR OPEN CIRCUIT

1. Connect the connector of ADAS control unit.
2. Disconnect the connector of ICC sensor.
3. Check the resistance between the ICC sensor harness connector terminals.

ICC sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E76	2	3	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the ICC sensor branch line.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ICC sensor. Refer to [DAS-143, "ICC SENSOR : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the ICC sensor. Refer to [DAS-154, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the ICC sensor branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000013390135

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication system.
4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		
M22	6	14	Not existed

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Check the harness and repair the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M22	6		Not existed
	14		Not existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Check the harness and repair the root cause.

4.CHECK ECM AND BCM TERMINATION CIRCUIT

1. Remove the ECM and the BCM.
2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		
100	99	Approx. 108 – 132

3. Check the resistance between the BCM terminals.

BCM		Resistance (Ω)
Terminal No.		
39	40	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 5.
NO >> Replace the ECM and/or the BCM.

5.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication system.

NOTE:

ECM and BCM have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

ITS COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

ITS COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000013390136

1. CHECK CAN DIAGNOSIS

Check the CAN diagnosis results from CONSULT to see that the CAN communication circuit 1 have no mal-function.

Are the CAN communication 1 circuits normal?

YES >> GO TO 2.

NO >> Check and repair CAN communication circuit 1.

2. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ADAS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the terminal and connector.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the ADAS control unit harness connectors.
2. Check the continuity between the ADAS control unit harness connector.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
M148	2	18	Existed
	5	6	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the ADAS control unit branch line. (ITS communication circuit side).

4. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

1. Disconnect the following harness connectors.
 - Side radar RH
 - Side radar LH
 - ICC sensor
2. Check the continuity between the ADAS control unit harness connector terminals.

ADAS control unit harness connector			Continuity
Connector No.	Terminal No.		
M148	2	5	Not existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Check the harness and repair the root cause.

5. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the ADAS control unit harness connector and the ground.

ADAS control unit harness connector		Ground	Continuity
Connector No.	Terminal No.		
M148	2		Not existed
	5		Not existed

Is the inspection result normal?

ITS COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 7)]

- YES >> GO TO 6.
- NO >> Check the harness and repair the root cause.

6. CHECK TERMINATION CIRCUIT

1. Remove the ADAS control unit.
2. Check the resistance between the ADAS control unit terminals.

ADAS control unit		Resistance (Ω)
Terminal No.		
2	5	Approx. 108 – 132
18	6	

Is the inspection result normal?

- YES >> GO TO 7.
- NO >> Replace the ADAS control unit.

7. CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

Inspection result

- Reproduced>>GO TO 8.
- Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

8. CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of ITS communication circuit.
NOTE:
ADAS control unit has two terminations circuit. Check other units first.
4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

- Reproduced>>Connect the connector. Check other units as per the above procedure.
- Non-reproduced>>Replace the unit whose connector was disconnected.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P