

SECTION **EXL**

EXTERIOR LIGHTING SYSTEM

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

CONTENTS

BASIC INSPECTION	4	Component Parts Location	16
DIAGNOSIS AND REPAIR WORKFLOW	4	Component Description	17
Work Flow	4	COMBINATION SWITCH READING SYSTEM	...18
FUNCTION DIAGNOSIS	7	System Diagram	18
HEADLAMP	7	System Description	18
System Diagram	7	Component Parts Location	21
System Description	7	TRAILER TOW	23
Component Parts Location	7	System Diagram	23
Component Description	7	System Description	23
AUTO LIGHT SYSTEM	9	Component Parts Location	24
System Diagram	9	Component Description	24
System Description	9	DIAGNOSIS SYSTEM (BCM)	26
Component Parts Location	10	COMMON ITEM	26
Component Description	10	COMMON ITEM : CONSULT-III Function (BCM -	
DAYTIME RUNNING LIGHT SYSTEM	11	COMMON ITEM)	26
System Diagram	11	HEADLAMP	26
System Description	11	HEADLAMP : CONSULT-III Function (BCM -	
Component Parts Location	12	HEAD LAMP)	26
Component Description	12	FLASHER	28
FRONT FOG LAMP	13	FLASHER : CONSULT-III Function (BCM -	
System Diagram	13	FLASHER)	28
System Description	13	COMB SW	28
Component Parts Location	13	COMB SW : CONSULT-III Function (BCM -	
Component Description	13	COMB SW)	28
TURN SIGNAL AND HAZARD WARNING		DIAGNOSIS SYSTEM (IPDM E/R)	30
LAMPS	14	Diagnosis Description	30
System Diagram	14	CONSULT - III Function (IPDM E/R)	32
System Description	14	COMPONENT DIAGNOSIS	34
Component Parts Location	14	POWER SUPPLY AND GROUND CIRCUIT	34
Component Description	15	BCM (BODY CONTROL MODULE)	34
PARKING, LICENSE PLATE AND TAIL			
LAMPS	16		
System Diagram	16		
System Description	16		

BCM (BODY CONTROL MODULE) : Diagnosis Procedure	34	Wiring Diagram	74
IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	35	TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM	78
IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) : Diagnosis Procedure	35	Wiring Diagram	78
HEADLAMP (HI) CIRCUIT	36	PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM	84
Description	36	Wiring Diagram	84
Component Function Check	36	STOP LAMP	88
Diagnosis Procedure - Without Daytime Light System	36	Wiring Diagram	88
Diagnosis Procedure - With Daytime Light System	37	BACK-UP LAMP	92
HEADLAMP (LO) CIRCUIT	39	Wiring Diagram	92
Description	39	TRAILER TOW	96
Component Function Check	39	Wiring Diagram	96
Diagnosis Procedure - Without Daytime Light System	39	ECU DIAGNOSIS	104
Diagnosis Procedure - With Daytime Light System	40	BCM (BODY CONTROL MODULE)	104
FRONT FOG LAMP CIRCUIT	42	Reference Value	104
Description	42	Terminal Layout	106
Component Function Check	42	Physical Values	106
Diagnosis Procedure	42	Wiring Diagram	112
PARKING LAMP CIRCUIT	44	Fail Safe	116
Description	44	DTC Inspection Priority Chart	117
Component Function Check	44	DTC Index	117
Diagnosis Procedure - Without Daytime Light System	44	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	119
Diagnosis Procedure - With Daytime Light System	47	Reference Value	119
TURN SIGNAL LAMP CIRCUIT	50	Terminal Layout	120
Description	50	Physical Values	121
Component Function Check	50	Wiring Diagram	125
Diagnosis Procedure - Without Daytime Light System	50	Fail Safe	128
Diagnosis Procedure - With Daytime Light System	52	DTC Index	129
OPTICAL SENSOR	56	SYMPTOM DIAGNOSIS	131
Description	56	EXTERIOR LIGHTING SYSTEM SYMPTOMS	131
Component Function Check	56	Symptom Table	131
Diagnosis Procedure	56	NORMAL OPERATING CONDITION	133
HEADLAMP	58	Description	133
Wiring Diagram	58	BOTH SIDE HEADLAMPS DO NOT SWITCH TO HIGH BEAM	134
AUTO LIGHT SYSTEM	62	Description	134
Wiring Diagram	62	Diagnosis Procedure	134
DAYTIME LIGHT SYSTEM	68	BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON	135
Wiring Diagram	68	Description	135
FRONT FOG LAMP SYSTEM	74	Diagnosis Procedure	135
		PARKING, LICENSE PLATE AND TAIL LAMPS ARE NOT TURNED ON	136
		Description	136
		Diagnosis Procedure	136

BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON	137	Bulb Replacement	145	
Description	137	Removal and Installation	145	A
Diagnosis Procedure	137	LIGHTING & TURN SIGNAL SWITCH	146	
PRECAUTION	138	Removal and Installation	146	B
PRECAUTIONS	138	HAZARD SWITCH	147	
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	138	Removal and Installation	147	C
ON-VEHICLE REPAIR	139	HIGH-MOUNTED STOP LAMP	148	
HEADLAMP	139	Bulb Replacement	148	D
Aiming Adjustment	139	Removal and Installation	148	
Bulb Replacement	140	REAR COMBINATION LAMP	149	
Removal and Installation	141	Bulb Replacement	149	E
Disassembly and Assembly	142	Removal and Installation	149	
AUTO LIGHT SYSTEM	143	SERVICE DATA AND SPECIFICATIONS (SDS)	150	F
Removal and Installation	143	SERVICE DATA AND SPECIFICATIONS (SDS)	150	
FRONT FOG LAMP	144	Headlamp	150	G
Aiming Adjustment	144	Exterior Lamp	150	

EXL

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000005387236

OVERALL SEQUENCE

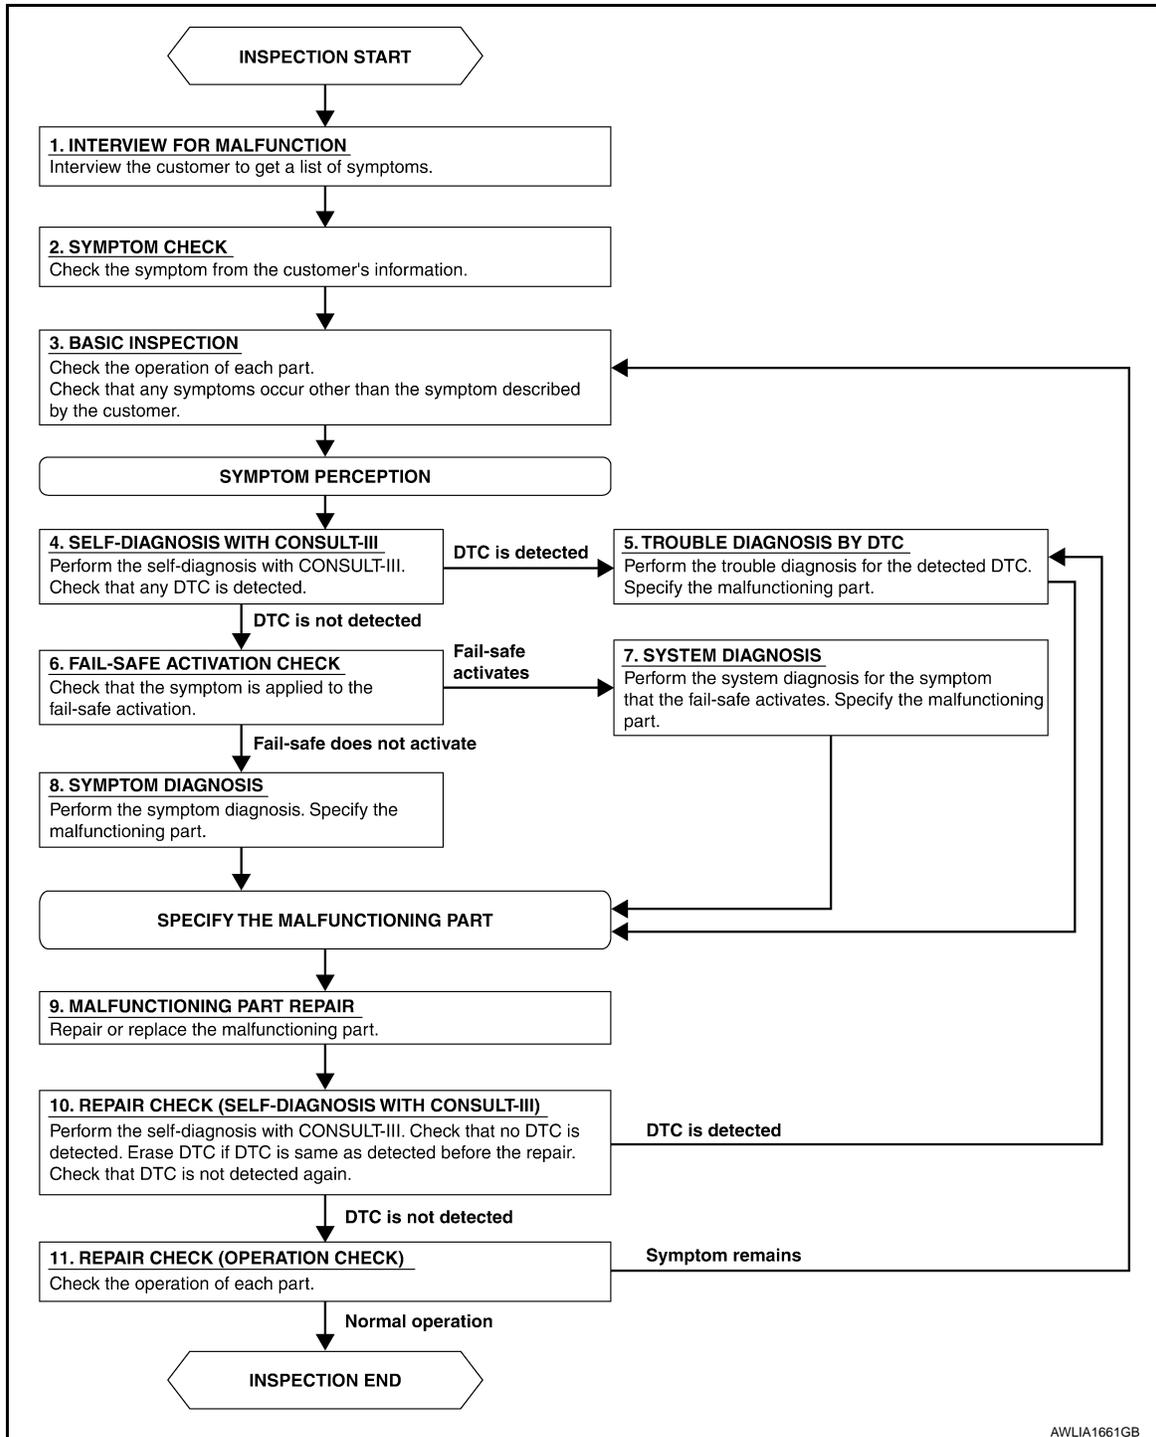

AWLIA1661GB

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

DETAILED FLOW

1. INTERVIEW FOR MALFUNCTION

Find out what the customer's concerns are.

>> GO TO 2.

2. SYMPTOM CHECK

Verify the symptom from the customer's information.

>> GO TO 3.

3. BASIC INSPECTION

Check the operation of each part. Check that any concerns occur other than those mentioned in the customer interview.

>> GO TO 4.

4. SELF-DIAGNOSIS WITH CONSULT-III

Perform the self diagnosis with CONSULT-III. Check that any DTC is detected.

Is any DTC detected?

YES >> GO TO 5.

NO >> GO TO 6.

5. TROUBLE DIAGNOSIS BY DTC

Perform the trouble diagnosis for the detected DTC. Specify the malfunctioning part.

>> GO TO 9.

6. FAIL-SAFE ACTIVATION CHECK

Determine if the customer's concern is related to fail-safe activation.

Does the fail-safe activate?

YES >> GO TO 7.

NO >> GO TO 8.

7. SYSTEM DIAGNOSIS

Perform the system diagnosis for the system in which the fail-safe activates. Specify the malfunctioning part.

>> GO TO 9.

8. SYMPTOM DIAGNOSIS

Perform the symptom diagnosis. Specify the malfunctioning part.

>> GO TO 9.

9. MALFUNCTION PART REPAIR

Repair or replace the malfunctioning part.

>> GO TO 10.

10. REPAIR CHECK (SELF-DIAGNOSIS WITH CONSULT-III)

Perform the self diagnosis with CONSULT-III. Verified that no DTCs are detected. Erase all DTCs detected prior to the repair. Verify that DTC is not detected again.

Is any DTC detected?

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

YES >> GO TO 5.

NO >> GO TO 11.

11.REPAIR CHECK (OPERATION CHECK)

Check the operation of each part.

Does it operate normally?

YES >> Inspection End.

NO >> GO TO 3.


HEADLAMP

< FUNCTION DIAGNOSIS >

FUNCTION DIAGNOSIS

HEADLAMP

System Diagram

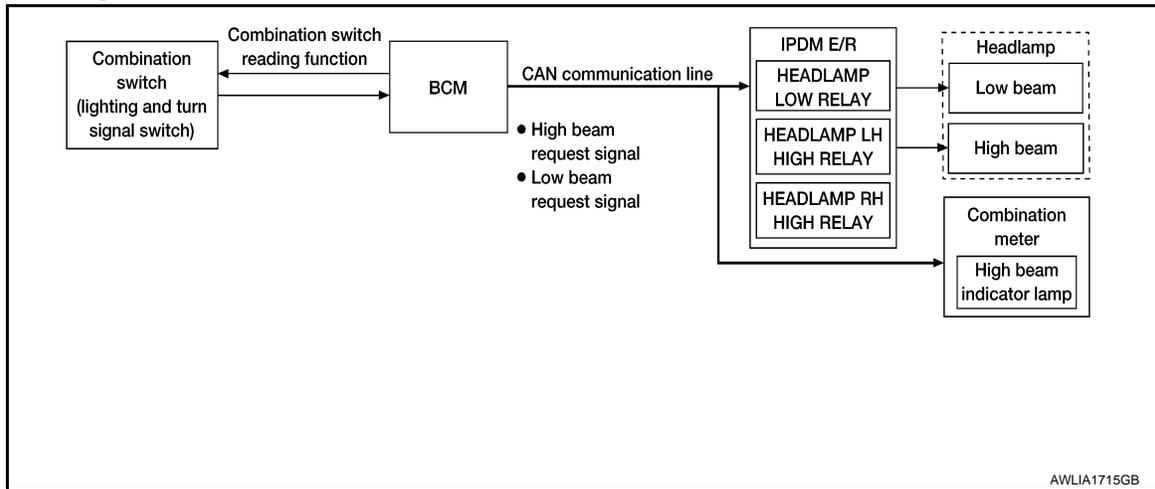


System Description

INFOID:0000000005688681

Control of the headlamp system operation is dependent upon the position of the combination switch (lighting and turn signal switch). When the combination switch (lighting and turn signal switch) is placed in the 2nd position, the BCM (body control module) receives input requesting the headlamps and park lamps to illuminate. This input is communicated to the IPDM E/R (intelligent power distribution module engine room) via the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the headlamp LH high, headlamp RH high and headlamp low relay coils. When energized, these relays direct power to the respective headlamps, which then illuminate.

Component Parts Location

INFOID:0000000005688682

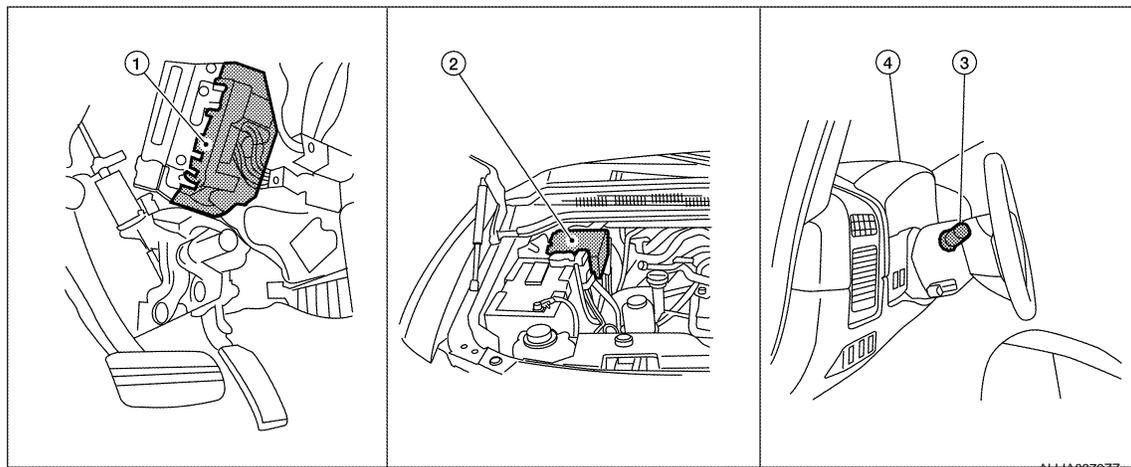

1. BCM M18, M20 (view with instrument panel removed)
2. IPDM E/R E122, E123, E124
3. Combination switch (lighting and turn-signal switch) M28
4. Combination meter M24

Component Description

INFOID:0000000005688683

LOW BEAM OPERATION

HEADLAMP

< FUNCTION DIAGNOSIS >

When the combination switch (lighting and turn signal switch) is in 2ND position, the BCM receives input requesting the headlamps to illuminate. This input is communicated to the IPDM E/R via the CAN communication lines. The CPU of the IPDM E/R controls the headlamp low relay coil which supplies power to the low beam headlamps.

HIGH BEAM OPERATION/FLASH-TO-PASS OPERATION

With the combination switch (lighting and turn signal switch) in the 2ND position and placed in HIGH position, the BCM receives input requesting the headlamp high beams to illuminate. The flash to pass feature can be used any time and also sends a signal to the BCM. This input is communicated to the IPDM E/R via the CAN communication lines. The CPU of the combination meter controls the ON/OFF status of the HIGH BEAM indicator. The CPU of the IPDM E/R controls the headlamp LH high relay coil and RH high relay coil which supply power to the high beam headlamps.

The combination meter receives a high beam request signal (ON) via the CAN communication lines and turns the high beam indicator lamp ON.

EXTERIOR LAMP BATTERY SAVER CONTROL

With the lighting switch (combination switch) in the 2nd position and the ignition switch is turned from ON or ACC to OFF, the battery saver feature is activated.

Under this condition, the headlamps remain illuminated for 5 minutes unless the lighting switch position is changed. If the lighting switch position is changed, then the headlamps are turned off.


This setting can be changed by CONSULT-III. Refer to [EXL-26, "HEADLAMP : CONSULT-III Function \(BCM - HEAD LAMP\)"](#).

AUTO LIGHT SYSTEM

< FUNCTION DIAGNOSIS >

AUTO LIGHT SYSTEM

System Diagram

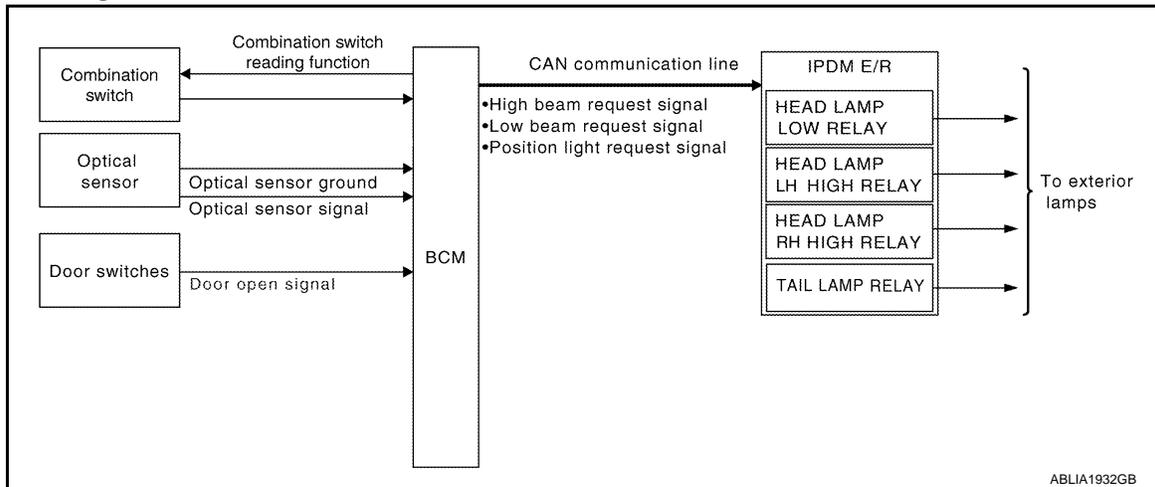

System Description

INFOID:000000005688709

- BCM (Body Control Module) controls auto light operation according to signals from optical sensor, combination switch (lighting and turn signal switch) and ignition switch.
- IPDM E/R (Intelligent Power Distribution Module Engine Room) operates parking, license plate, tail and headlamps according to CAN communication signals from BCM.
- Optical sensor detects ambient brightness of 800 to 2,500 lux. And optical sensor converts light (lux) to voltage, then sends the optical sensor signal to BCM.

OUTLINE

The auto light control system has an optical sensor that detects outside brightness.

When the combination switch (lighting and turn signal switch) is in AUTO position, it automatically turns ON/OFF the parking, license plate, tail and headlamps in accordance with the ambient light. Sensitivity can be adjusted in four steps. For the details of the setting, Refer to [EXL-26, "HEADLAMP : CONSULT-III Function \(BCM - HEAD LAMP\)"](#).


A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

AUTO LIGHT SYSTEM

< FUNCTION DIAGNOSIS >

Component Parts Location

INFOID:000000005387243

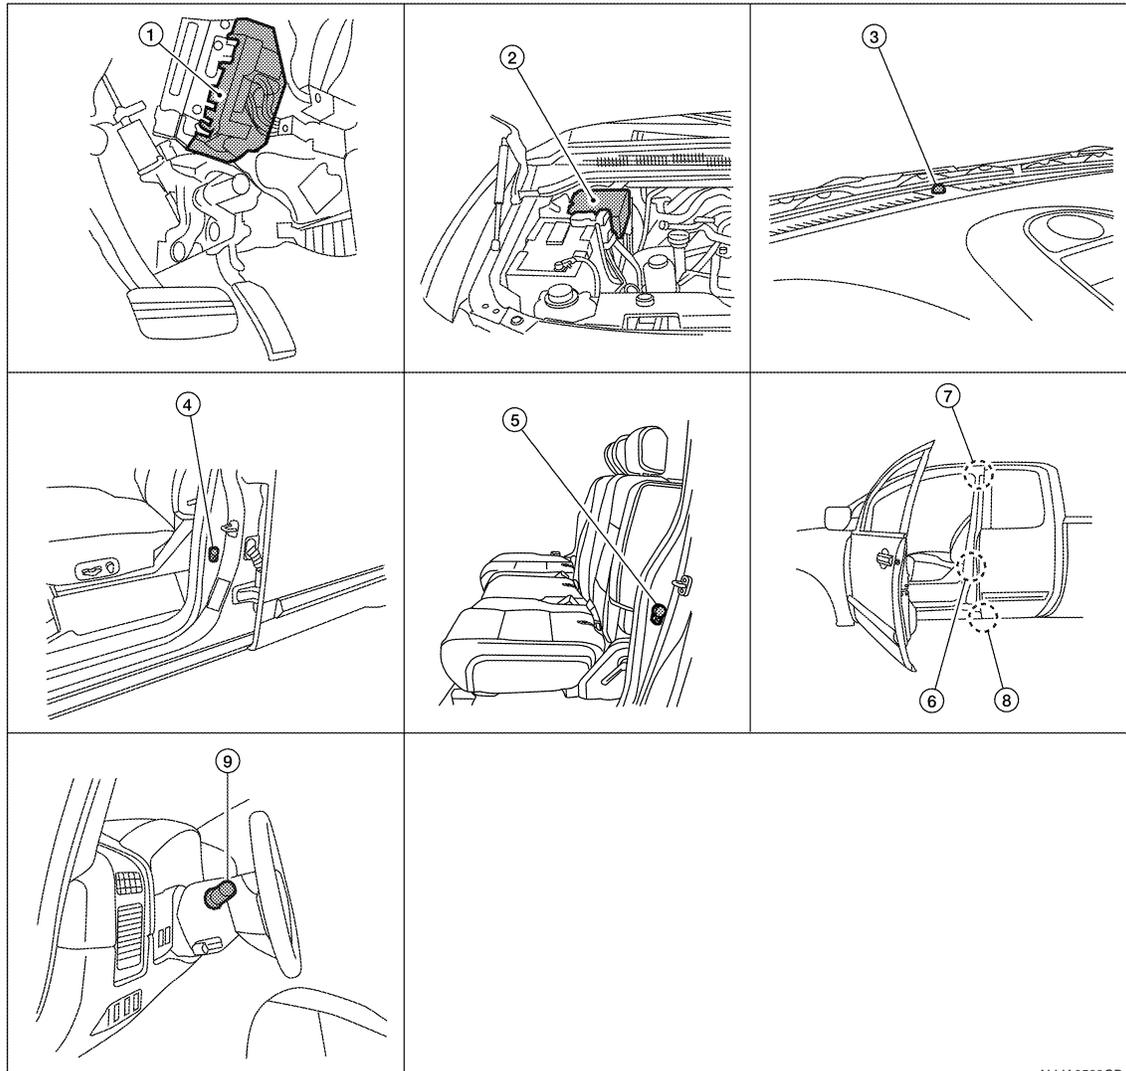

ALLIA0563GB

- | | | |
|---|---|---|
| 1. BCM M18, M19, M20 (view with instrument panel removed) | 2. IPDM E/R E122, E123, E124 | 3. Optical sensor M302 |
| 4. Front door switch (crew cab)
LH B8
RH B108 | 5. Rear door switch (crew cab)
LH B18
RH B116 | 6. Front door switch (king cab)
LH B8
RH B108 |
| 7. Rear door switch upper (king cab)
LH B73
RH B156 | 8. Rear door switch upper (king cab)
LH B74
RH B157 | 9. Combination switch (lighting and turn signal switch) M28 |

Component Description

INFOID:0000000005688710

AUTO LIGHT OPERATION

The auto light system operates the low beam and high beam headlamps, parking lamps, tail lamps and license plate lamps. The BCM monitors the combination switch (lighting and turn signal switch) position as a part of the BCM combination switch reading function. When the combination switch (lighting and turn signal switch) is in the AUTO position, the BCM automatically turns the lamps ON/OFF according to ambient light brightness.

NOTE:


Timing for when lamps turn ON/OFF can be changed by the function setting of CONSULT-III. Refer to [EXL-26, "HEADLAMP : CONSULT-III Function \(BCM - HEAD LAMP\)"](#).

DAYTIME RUNNING LIGHT SYSTEM

< FUNCTION DIAGNOSIS >

DAYTIME RUNNING LIGHT SYSTEM

System Diagram

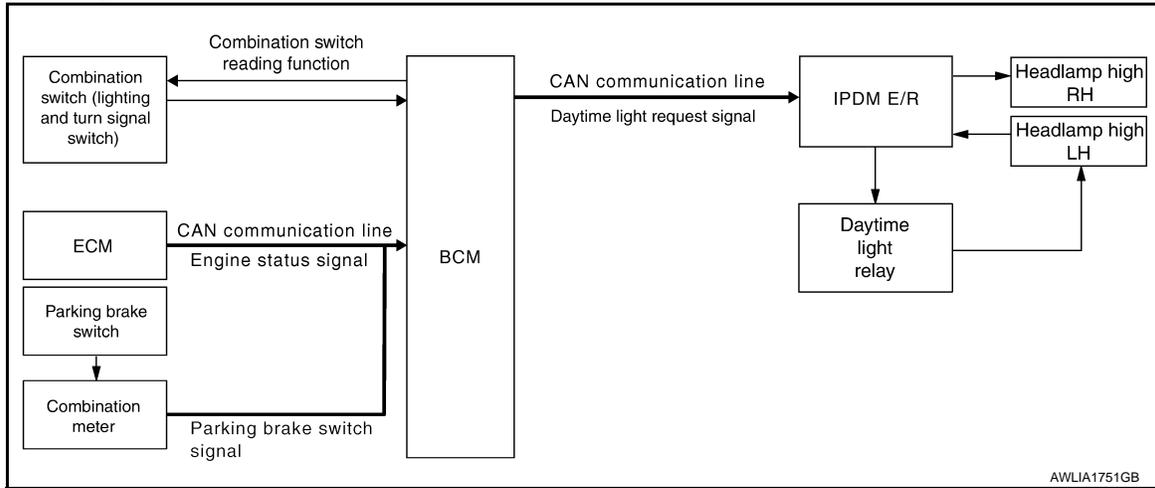

System Description

INFOID:000000005688689

- BCM (Body Control Module) controls auto light operation according to signals from optical sensor, combination switch (lighting and turn signal switch) and ignition switch.
- IPDM E/R (Intelligent Power Distribution Module Engine Room) operates parking, license plate, tail and headlamps according to CAN communication signals from BCM.
- Optical sensor detects ambient brightness of 800 to 2,500 lux. And optical sensor converts light (lux) to voltage, then sends the optical sensor signal to BCM.

OUTLINE

The auto light control system has an optical sensor that detects outside brightness.

When the combination switch (lighting and turn signal switch) is in AUTO position, it automatically turns ON/OFF the parking, license plate, tail and headlamps in accordance with the ambient light. Sensitivity can be adjusted in four steps. For the details of the setting, Refer to [EXL-26, "HEADLAMP : CONSULT-III Function \(BCM - HEAD LAMP\)".](#)


A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

DAYTIME RUNNING LIGHT SYSTEM

< FUNCTION DIAGNOSIS >

Component Parts Location

INFOID:000000005688686

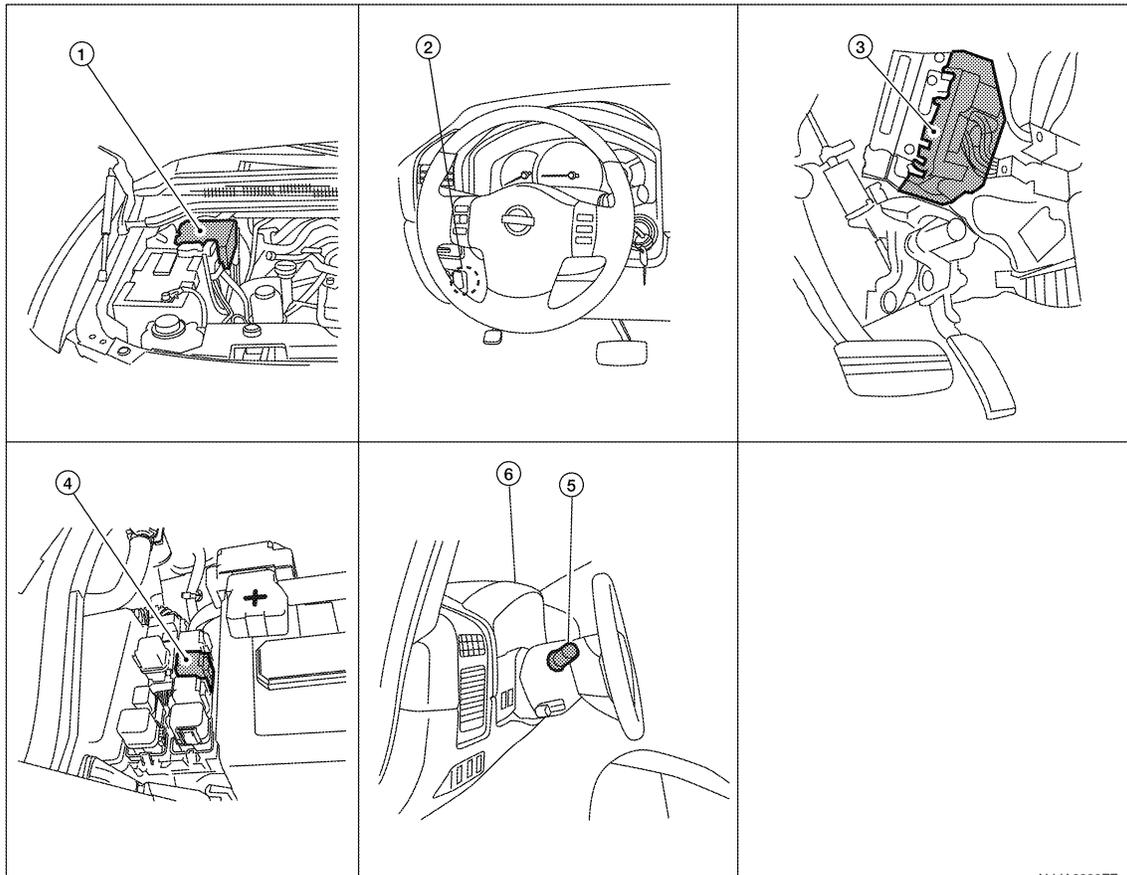

ALLIA0380ZZ

- | | | |
|-------------------------------------|---|--|
| 1. IPDM E/R E119, E122, E123, E124 | 2. Parking brake switch M11 | 3. BCM M18, M20 (view with instrument panel removed) |
| 4. Daytime running light relay E103 | 5. Combination switch (lighting and turn signal switch) M28 | 6. Combination meter M24 |

Component Description

INFOID:000000005688688

AUTO LIGHT OPERATION

The auto light system operates the low beam and high beam headlamps, parking lamps, tail lamps and license plate lamps. The BCM monitors the combination switch (lighting and turn signal switch) position as a part of the BCM combination switch reading function. When the combination switch (lighting and turn signal switch) is in the AUTO position, the BCM automatically turns the lamps ON/OFF according to ambient light brightness.

NOTE:

Timing for when lamps turn ON/OFF can be changed by the function setting of CONSULT-III. Refer to [EXL-26](#), "[HEADLAMP : CONSULT-III Function \(BCM - HEAD LAMP\)](#)".


FRONT FOG LAMP

< FUNCTION DIAGNOSIS >

FRONT FOG LAMP

System Diagram

INFOID:000000005688697

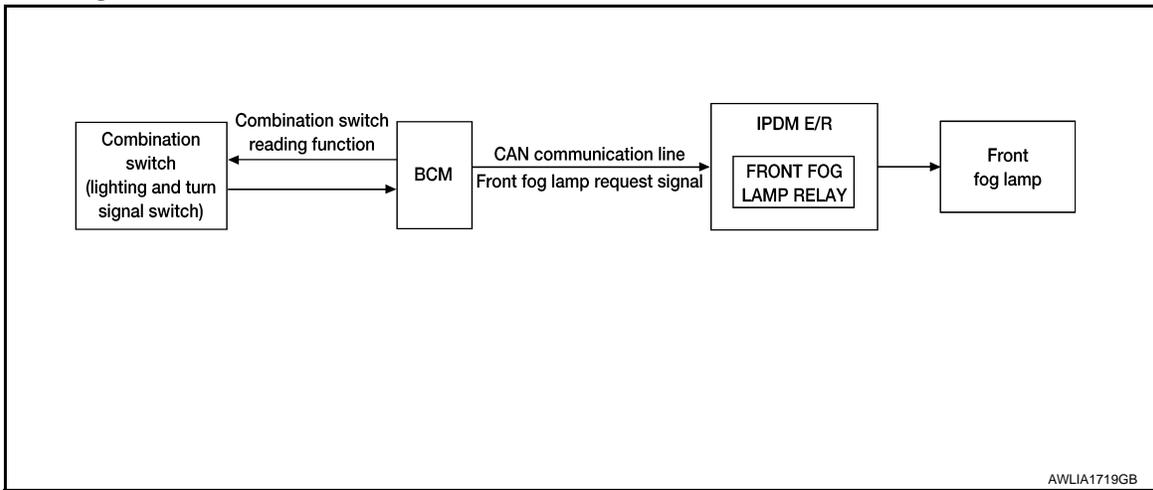

AWLIA1719GB


System Description

INFOID:000000005688698

The front fog lamps are activated with the combination switch (lighting and turn signal switch). The combination switch (lighting and turn signal switch) signal to the BCM is monitored with the BCM combination switch reading function. When the fog lamps are turned ON with the combination switch (lighting and turn signal switch), the BCM sends a front fog lamp request signal via CAN communication lines to the IPDM E/R. The IPDM E/R grounds the front fog lamp relay coil to activate the front fog lamps.

Component Parts Location

INFOID:000000005688699

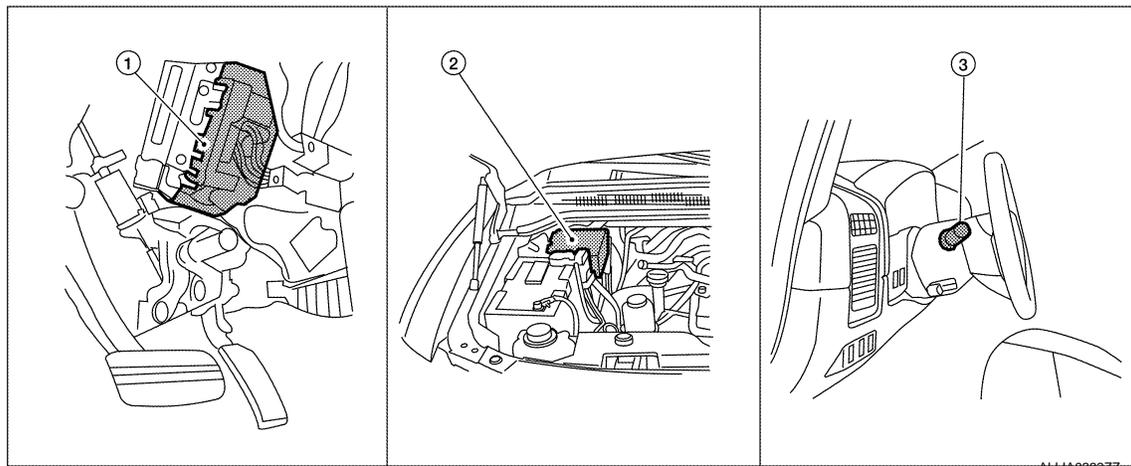

ALLIA0383ZZ

1. BCM M18, M20 (view with instrument panel removed)
2. IPDM E/R E122, E123, E124
3. Combination switch (lighting and turn signal switch) M28

Component Description

INFOID:000000005688700

FRONT FOG LAMP OPERATION


When the combination switch (lighting and turn signal switch) is in front fog lamp ON position and also in 1ST or 2ND position or AUTO position (headlamp is ON), the BCM detects FR FOG ON and the HEAD LAMP1, 2 ON or the AUTO LIGHT ON. The BCM sends a front fog lamp request ON signal via the CAN communication lines to the IPDM E/R. The IPDM E/R then turns ON the front fog lamp relay sending power to the front fog lamps.

TURN SIGNAL AND HAZARD WARNING LAMPS

< FUNCTION DIAGNOSIS >

TURN SIGNAL AND HAZARD WARNING LAMPS

System Diagram

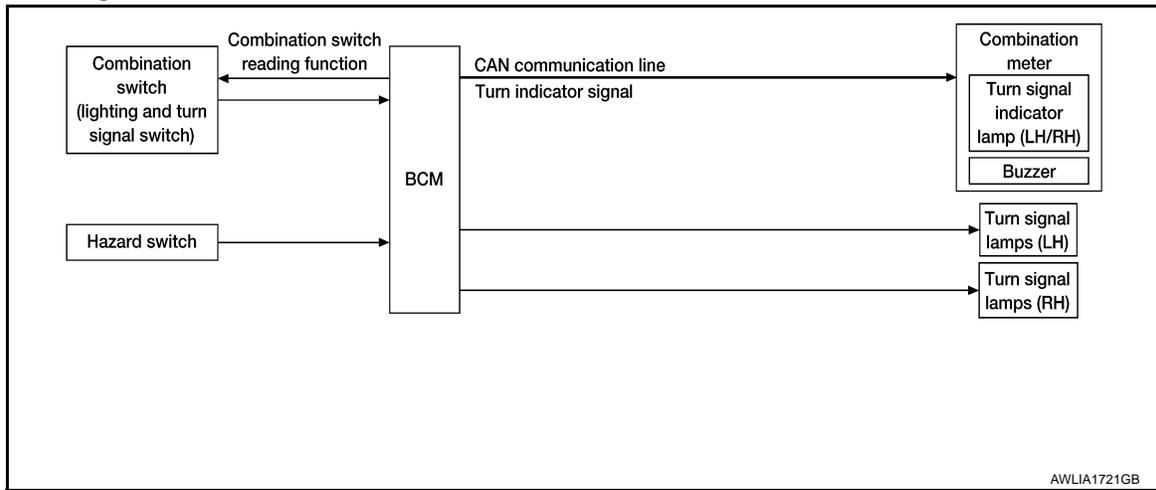

System Description

INFOID:000000005688702

TURN SIGNAL OPERATION

When the combination switch (lighting and turn signal switch) is in LH or RH position with the ignition switch in ON position, the BCM detects the TURN RH or TURN LH ON request. The BCM outputs the flasher signal to the respective turn signal lamp. The BCM also sends a turn indicator signal ON request via the CAN communication lines to the combination meter. The combination meter then activates the appropriate turn signal indicator and audible buzzer.

HAZARD LAMP OPERATION

When the hazard switch is in ON position, the BCM detects the hazard switch signal ON. The BCM outputs the flasher signal (right and left). The BCM sends a hazard indicator signal ON request via the CAN communication lines to the combination meter. The combination meter then activates the hazard indicator and audible buzzer.


REMOTE KEYLESS ENTRY OPERATION

The remote keyless entry receiver transmits a hazard request signal to the BCM, then BCM controls hazard lamps.

Refer to [DLK-14. "REMOTE KEYLESS ENTRY : System Diagram"](#).

Component Parts Location

INFOID:000000005387255

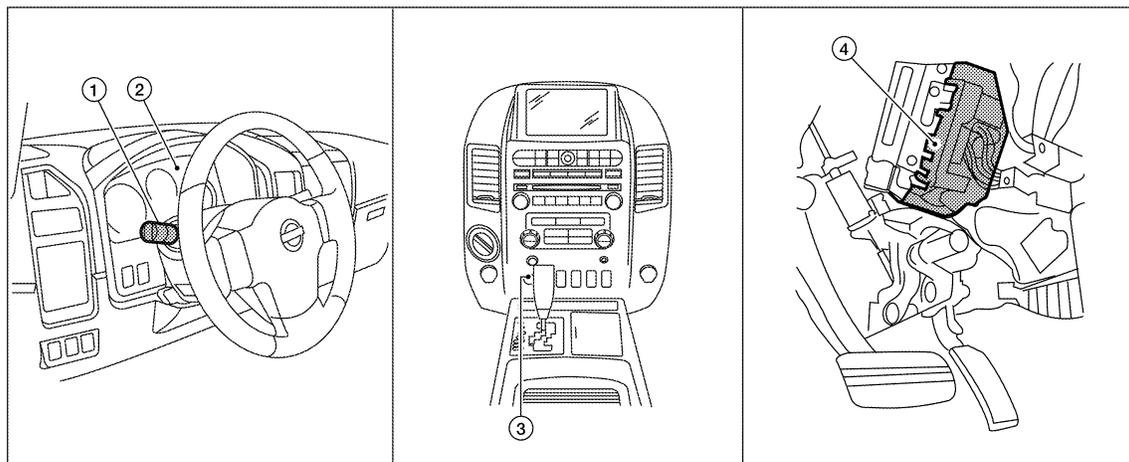

TURN SIGNAL AND HAZARD WARNING LAMPS

< FUNCTION DIAGNOSIS >

1. Combination switch (lighting and turn signal switch) M28
2. Combination meter M24, M25
3. Hazard switch
M55 (3 control dial system w/o auto A/C)
M47 (2 control dial system or auto A/C)
4. BCM M18, M20 (view with instrument panel removed)

Component Description

INFOID:000000005688696

Part name	Description
BCM	Controls turn signal and hazard flasher operation.
Combination switch (lighting and turn signal switch)	Lighting and turn signal switch requests are output to the BCM.
Hazard switch	Hazard flasher request signal is output to the BCM.
Combination meter	Outputs turn and hazard indicator as requested by the BCM.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL


PARKING, LICENSE PLATE AND TAIL LAMPS

< FUNCTION DIAGNOSIS >

PARKING, LICENSE PLATE AND TAIL LAMPS

System Diagram

INFOID:000000005688703

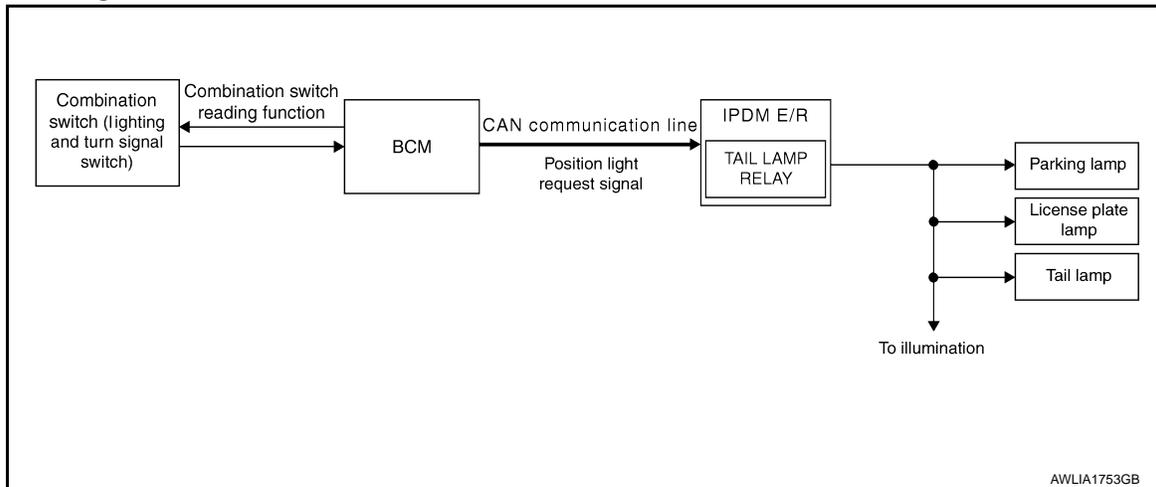

System Description

INFOID:000000005688704

PARKING, LICENCE PLATE AND TAIL LAMPS OPERATION

When the combination switch (lighting and turn signal switch) is in 1ST position, BCM detects the LIGHTING SWITCH 1ST POSITION ON. The BCM sends a parking light ON request via the CAN communication lines to the IPDM E/R. The IPDM E/R then activates the tail lamp relay which sends power to the parking and instrument illumination circuits.

EXTERIOR LAMP BATTERY SAVER CONTROL


With the combination switch (lighting and turn signal switch) in the 2nd position and the ignition switch is turned from ON or ACC to OFF, the battery saver feature is activated.

Under this condition, the headlamps remain illuminated for 5 minutes unless the combination switch (lighting and turn signal switch) position is changed. If the combination switch (lighting and turn signal switch) position is changed, then the headlamps are turned off.

This setting can be changed by CONSULT-III. Refer to [BCS-24. "BATTERY SAVER : CONSULT-III Function \(BCM - BATTERY SAVER\)"](#).

Component Parts Location

INFOID:000000005688705

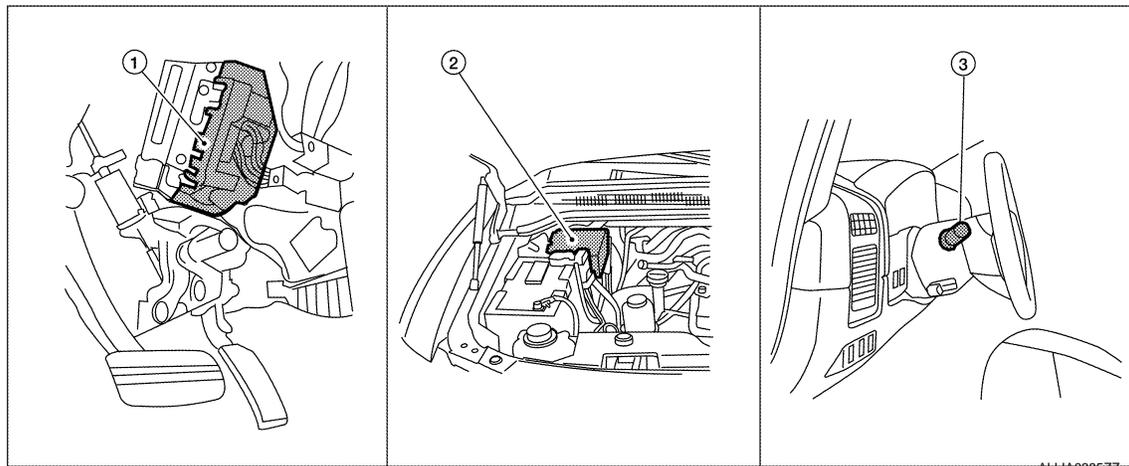

1. BCM M18, M20 (view with instrument panel removed)
2. IPDM E/R E122, E124

3. Combination switch (lighting and turn signal switch) M28

PARKING, LICENSE PLATE AND TAIL LAMPS

< FUNCTION DIAGNOSIS >

Component Description

INFOID:000000005688706

Part name	Description
BCM	<ul style="list-style-type: none">• Receives lighting switch requests via BCM combination switch reading function.• Sends parking light request signal to the IPDM E/R.
IPDM E/R	Activates the tail lamp relay upon request of the BCM.
Combination switch (lighting and turn signal switch)	Outputs lighting requests to the BCM.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P


COMBINATION SWITCH READING SYSTEM

< FUNCTION DIAGNOSIS >

COMBINATION SWITCH READING SYSTEM

System Diagram

INFOID:000000005683137

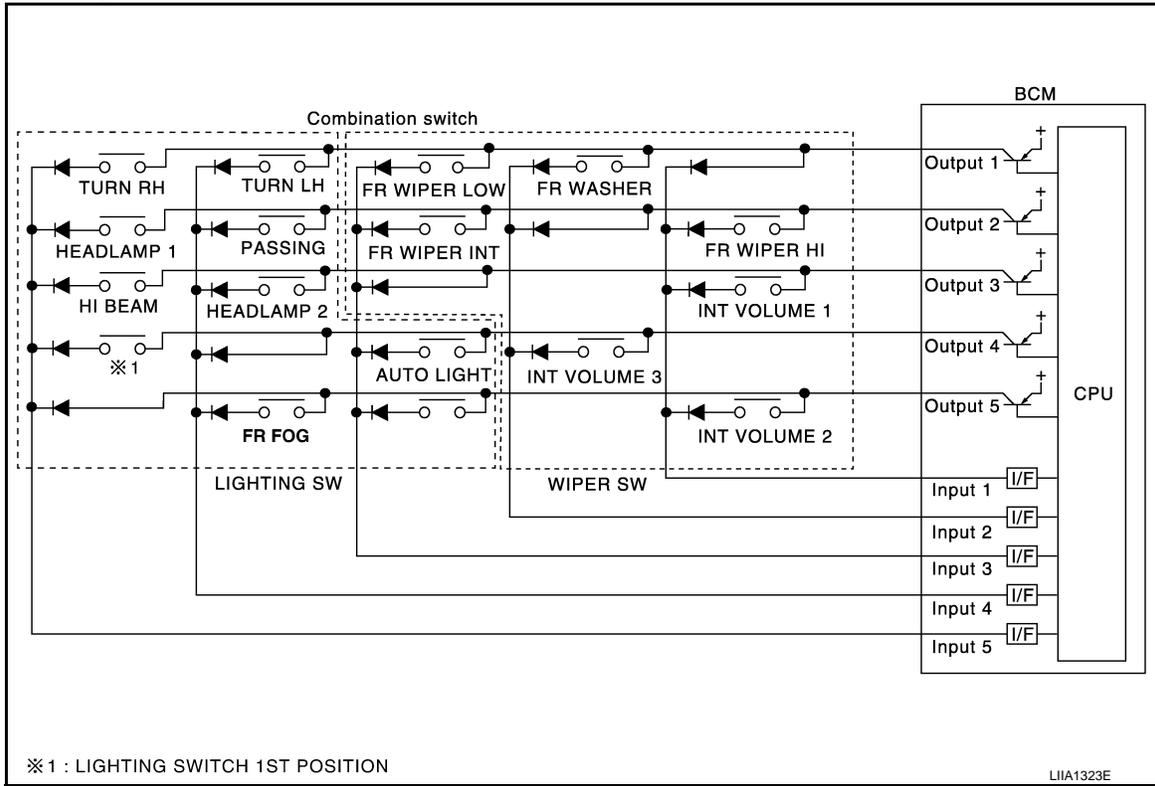

System Description

INFOID:000000005683138

OUTLINE


- BCM reads the status of the combination switch (light, turn signal, wiper and washer) and recognizes the status of each switch.
- BCM is a combination of 5 output terminals (OUTPUT 1 - 5) and 5 input terminals (INPUT 1 - 5). It reads a maximum of 20 switch status.

COMBINATION SWITCH MATRIX

COMBINATION SWITCH READING SYSTEM

< FUNCTION DIAGNOSIS >

Combination switch circuit

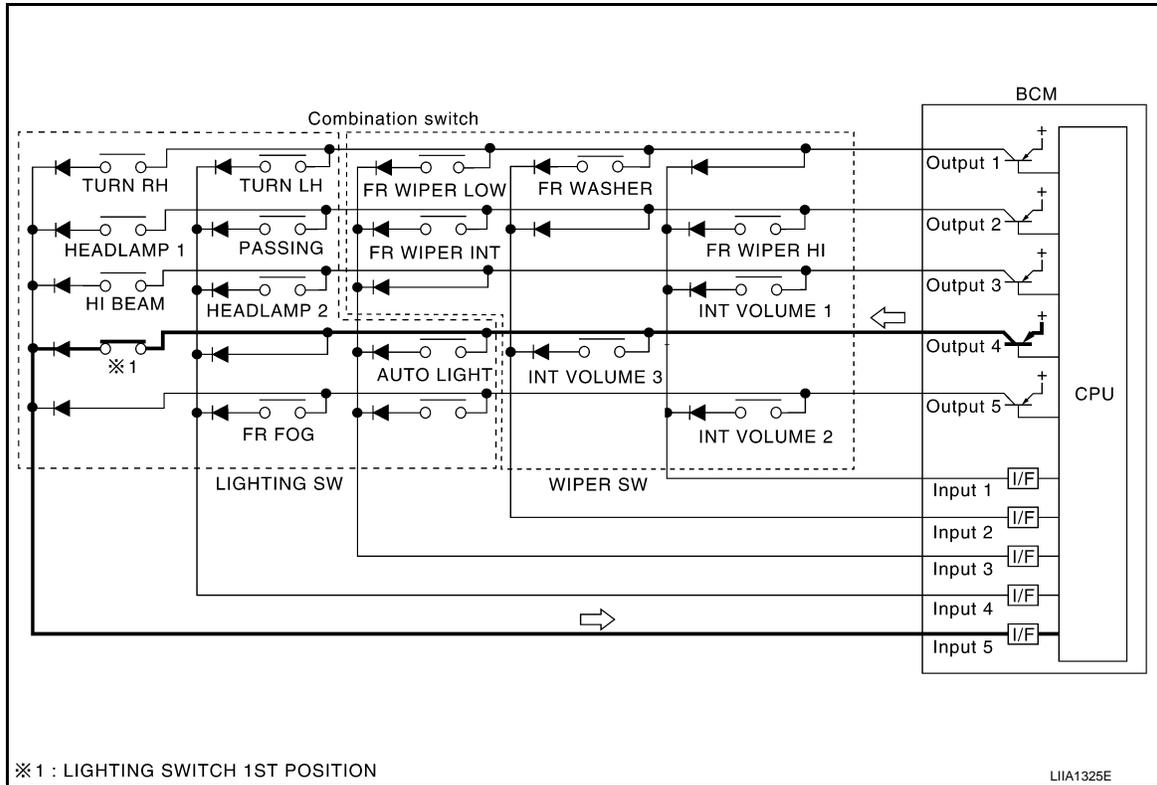

Combination switch INPUT-OUTPUT system list

System	OUTPUT 1	OUTPUT 2	OUTPUT 3	OUTPUT 4	OUTPUT 5
INPUT 1	—	FR WASHER	FR WIPER LOW	TURN LH	TURN RH
INPUT 2	FR WIPER HI	—	FR WIPER INT	PASSING	HEADLAMP 1
INPUT 3	INT VOLUME 1	—	—	HEADLAMP 2	HI BEAM
INPUT 4	—	INT VOLUME 3	AUTO LIGHT	—	TAIL LAMP
INPUT 5	INT VOLUME 2	—	—	FR FOG	—


NOTE:

Headlamp has a dual system switch.

COMBINATION SWITCH READING FUNCTION

Description

- BCM reads the status of the combination switch at 10 ms interval normally.

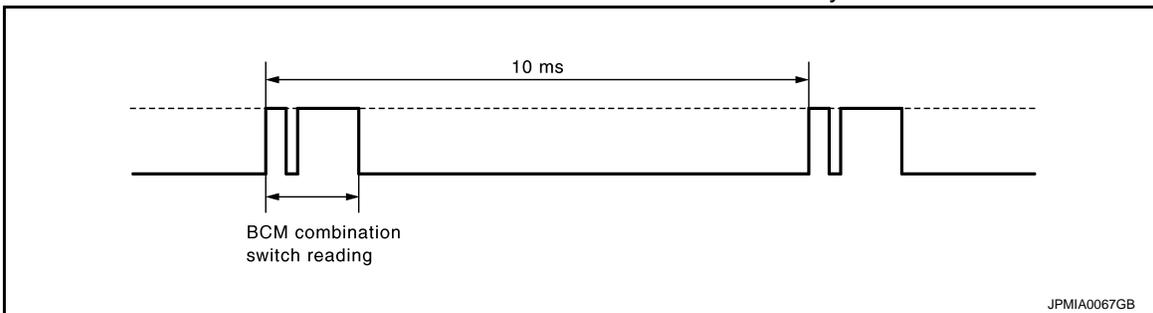

NOTE:

BCM reads the status of the combination switch at 20 ms interval when BCM is controlled at low power consumption control mode.

- BCM operates as follows and judges the status of the combination switch.
 - INPUT 1 - 5 outputs the voltage waveforms of 5 systems simultaneously.
 - It operates the transistor on OUTPUT side in the following order: OUTPUT 5 → 4 → 3 → 2 → 1.


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

COMBINATION SWITCH READING SYSTEM

< FUNCTION DIAGNOSIS >

- The voltage waveform of INPUT corresponding to the formed circuit changes according to the operation of the transistor on OUTPUT side if any (1 or more) switches are ON.
- It reads this change of the voltage as the status signal of the combination switch.

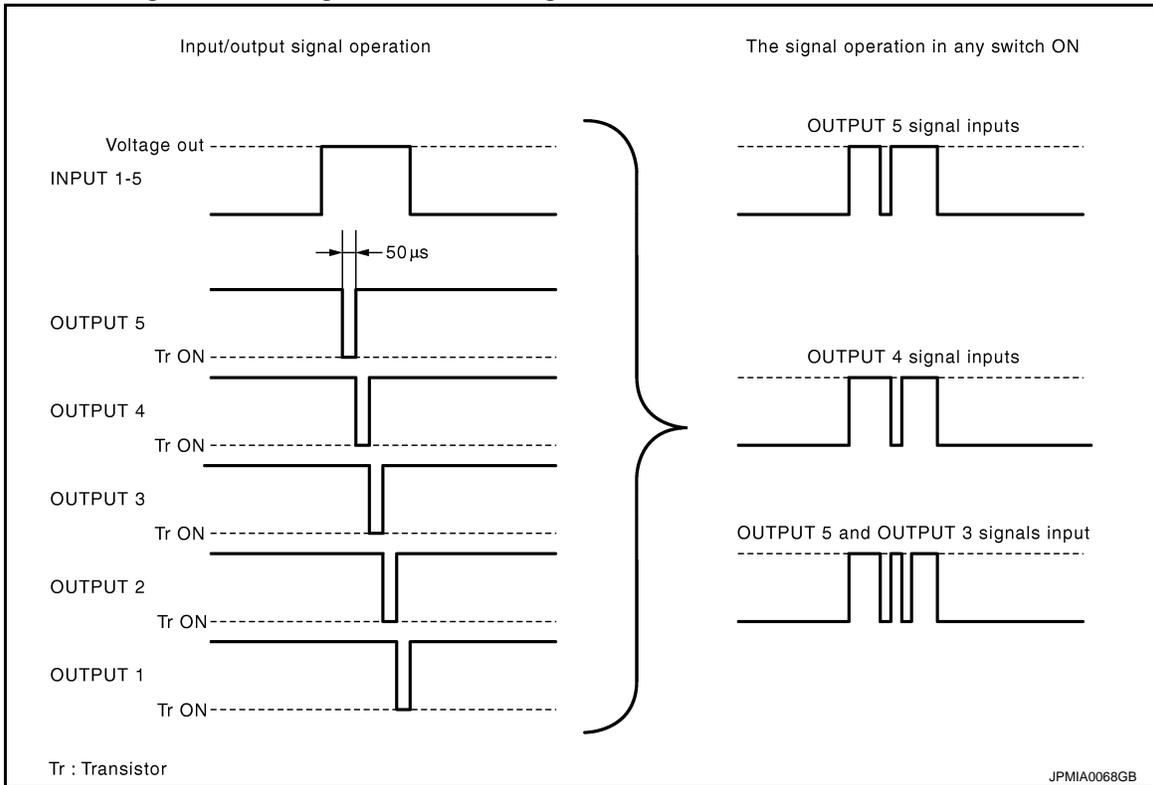


Operation Example

In the following operation example, the combination of the status signals of the combination switch is replaced as follows: INPUT 1 - 5 to "1 - 5" and OUTPUT 1 - 5 to "A - E".

Example 1: When a switch (TURN RH switch) is turned ON

- The circuit between INPUT 1 and OUTPUT 5 is formed when the TURN RH switch is turned ON.

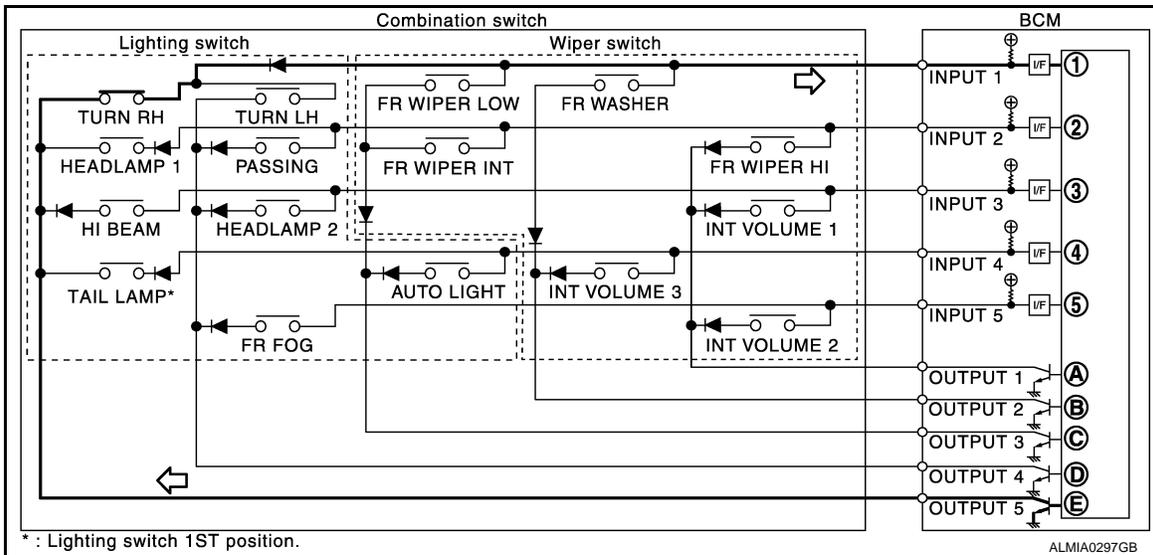


- BCM detects the combination switch status signal "1E" when the signal of OUTPUT 5 is input to INPUT 1.
- BCM judges that the TURN RH switch is ON when the signal "1E" is detected.

Example 2: When some switches (turn RH switch, front wiper LO switch) are turned ON

COMBINATION SWITCH READING SYSTEM

< FUNCTION DIAGNOSIS >

- The circuits between INPUT 1 and OUTPUT 5 and between INPUT 1 and OUTPUT 3 are formed when the TURN RH switch and FR WIPER LOW switch are turned ON.

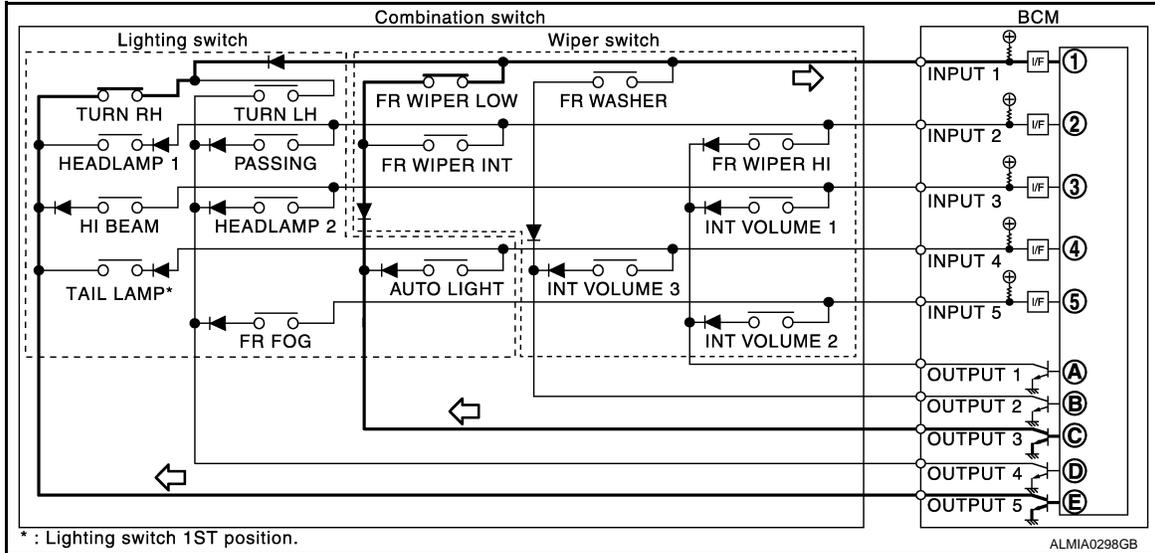

- BCM detects the combination switch status signal "1CE" when the signals of OUTPUT 3 and OUTPUT 5 are input to INPUT 1.
- BCM judges that the TURN RH switch and FR WIPER LOW switch are ON when the signal "1CE" is detected.


WIPER INTERMITTENT DIAL POSITION SETTING (FRONT WIPER INTERMITTENT OPERATION)

BCM judges the wiper intermittent dial 1 - 7 by the status of INT VOLUME 1, 2 and 3 switches.

Wiper intermittent dial position	Intermittent operation delay interval	INT VOLUME switch ON/OFF status		
		INT VOLUME 1 switch	INT VOLUME 2 switch	INT VOLUME 3 switch
1	Short ↑	ON	ON	ON
2		ON	ON	OFF
3		ON	OFF	OFF
4		OFF	OFF	OFF
5	↓ Long	OFF	OFF	ON
6		OFF	ON	ON
7		OFF	ON	OFF

Component Parts Location

INFOID:000000005683139

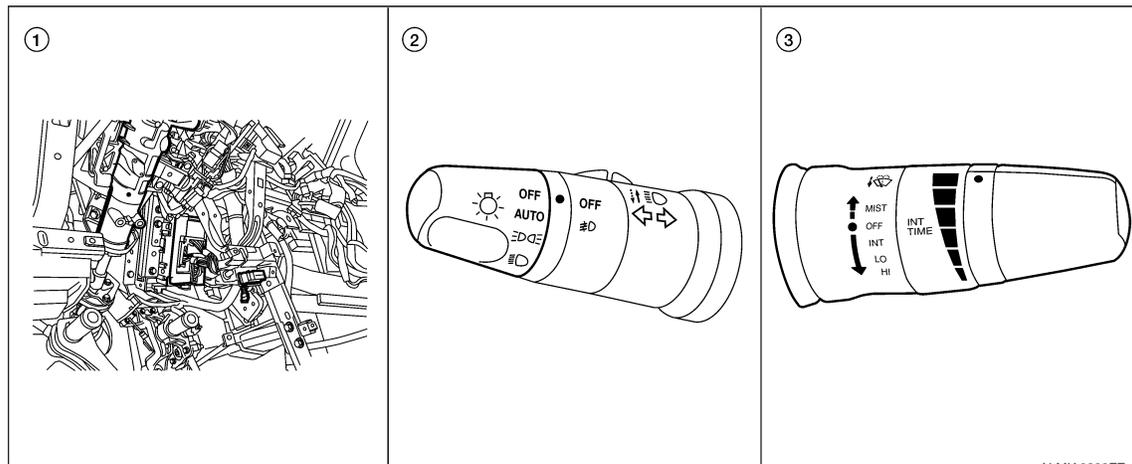

COMBINATION SWITCH READING SYSTEM

< FUNCTION DIAGNOSIS >


1. BCM M18, M19, M20 (view with instrument panel removed)
2. Combination switch (lighting and turn signal switch) M28
3. Combination switch (wiper and washer switch) M28

TRAILER TOW

< FUNCTION DIAGNOSIS >

TRAILER TOW

System Diagram

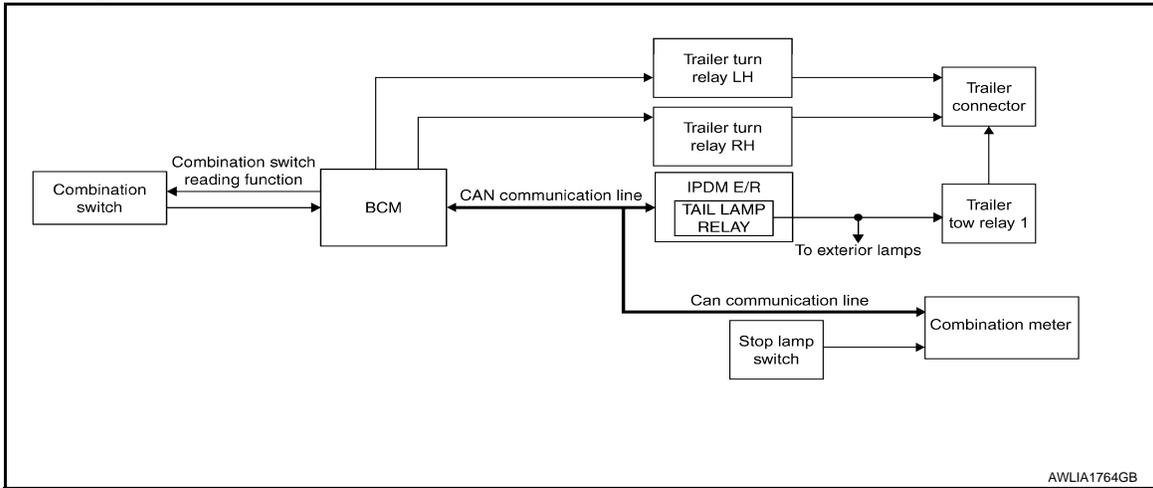

System Description

INFOID:000000005716063

TRAILER TAIL LAMP OPERATION

The trailer tail lamps are controlled by the trailer tow relay 1 located in the IPDM E/R. With the combination switch in the 1st position, the BCM detects the LIGHTING SWITCH 1ST POSITION ON. The BCM sends a parking light ON request via the CAN communication lines to the IPDM E/R. The IPDM E/R then activates the tail lamp relay which activates the trailer tow relay 1 and sends power to the trailer connector.

TRAILER TURN SIGNAL LAMP OPERATION

The trailer turn signal lamps are controlled by the BCM. When the turn signal switch is in the LH or RH position with the ignition switch ON, the combination switch sends a signal to the BCM. The BCM detects the TURN RH or TURN LH ON request. The BCM sends a control signal to the respective trailer turn relay which sends power to the trailer connector.

TRAILER HAZARD LAMP OPERATION

The trailer hazard lamps are controlled by the BCM. When the hazard switch is pressed, the BCM detects the the hazard ON request. The BCM then sends a control signal to both trailer turn relays which sends power to the trailer connector.

TRAILER BRAKE LAMP OPERATION


The trailer brake lamps are controlled by the BCM. When the brake pedal is depressed, the combination meter receives a stop lamp switch signal from the stop lamp switch. The combination meter then sends the brake signal to the BCM via the CAN communication lines. The BCM then sends a control signal to both trailer turn relays which sends power to the trailer connector.

TRAILER TOW

< FUNCTION DIAGNOSIS >

Component Parts Location

INFOID:000000005716064

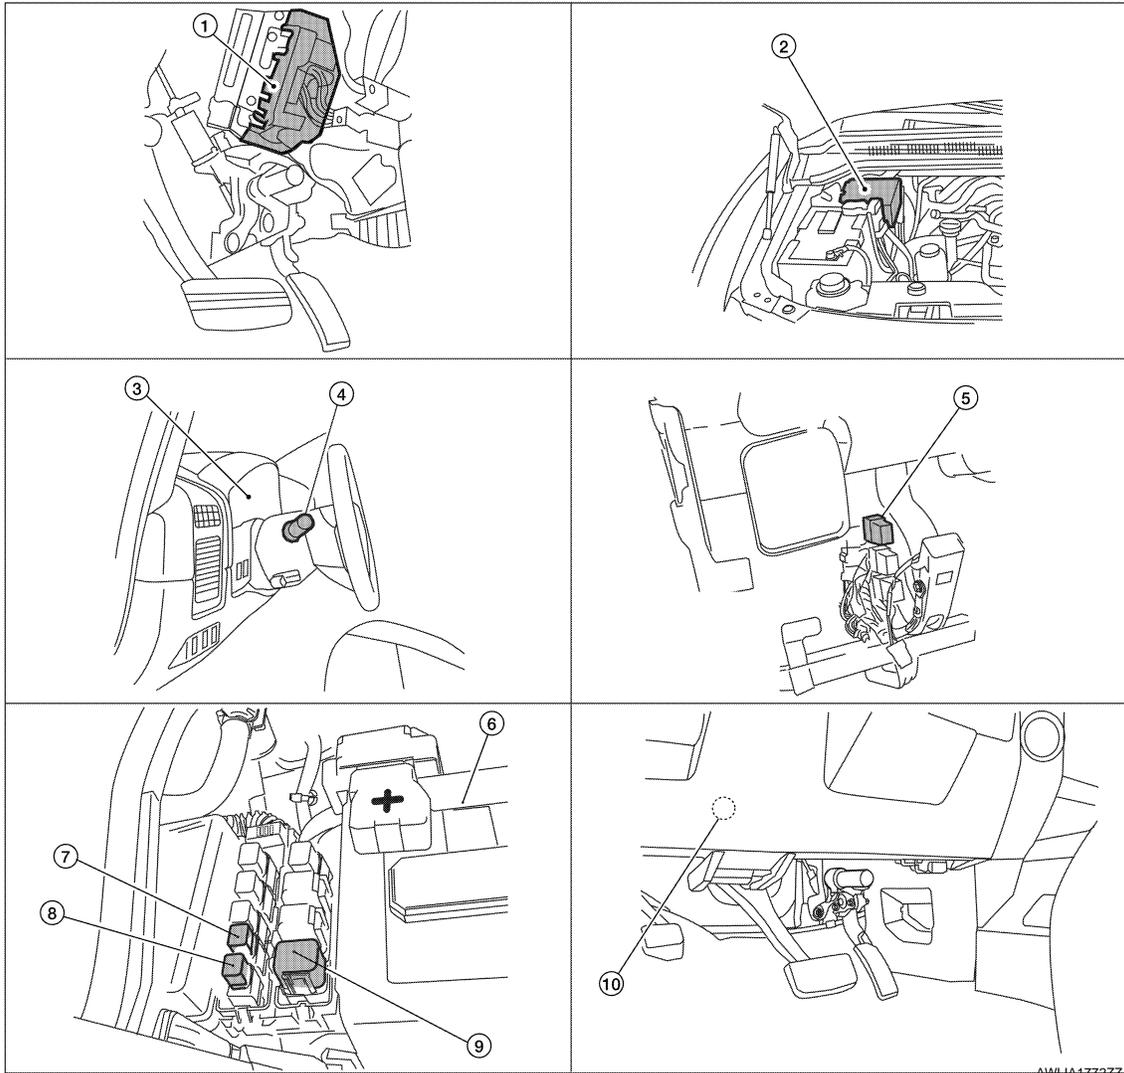

- | | | |
|---|--|-------------------------------|
| 1. BCM M18, M19, M20 (view with instrument panel removed) | 2. IPDM E/R E119, E122, E123, E124 | 3. Combination meter M24, M25 |
| 4. Combination switch (lighting and turn signal switch) M28 | 5. Trailer tow relay 1 M51 (view with steering member removed) | 6. Battery |
| 7. Trailer turn relay LH E158 | 8. Trailer turn relay RH E159 | 9. Trailer tow relay 2 E140 |
| 10. Stop lamp switch E38 (column shift), E42 (floor shift) | | |

Component Description

INFOID:000000005716065

Part name	Description
BCM	<ul style="list-style-type: none"> Receives lighting and turn signal requests from combination switch. Receives stop lamp signal requests from combination meter via CAN communication. Sends lighting signal request to the IPDM E/R to control the tail lamp relay via CAN communication. Sends turn/hazard/brake control signal to the trailer turn relays.
IPDM E/R	Activates the tail lamp relay upon request from the BCM via CAN communication.

TRAILER TOW

< FUNCTION DIAGNOSIS >

Combination meter	<ul style="list-style-type: none">• Receives stop lamp switch signal from stop lamp switch.• Sends stop lamp signal request to the BCM via CAN communication.
Combination switch (lighting and turn signal switch)	Outputs lighting and turn signal requests to the BCM.

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)

INFOID:000000005683140

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
WORK SUPPORT	Changes the setting for each system function.
SELF DIAGNOSTIC RESULT	Displays the diagnosis results judged by BCM. Refer to BCS-49, "DTC Index" .
CAN DIAG SUPPORT MNTR	Monitors the reception status of CAN communication viewed from BCM.
DATA MONITOR	The BCM input/output signals are displayed.
ACTIVE TEST	The signals used to activate each device are forcibly supplied from BCM.
ECU IDENTIFICATION	The BCM part number is displayed.
CONFIGURATION	<ul style="list-style-type: none"> Enables to read and save the vehicle specification. Enables to write the vehicle specification when replacing BCM.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

System	Sub system selection item	Diagnosis mode		
		WORK SUPPORT	DATA MONITOR	ACTIVE TEST
BCM	BCM	×		
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP	×	×	×
Remote keyless entry system	MULTI REMOTE ENT	×	×	×
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER		×	×
Air conditioner	AIR CONDITONER		×	
Combination switch	COMB SW		×	
Immobilizer	IMMU		×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
RAP (retained accessory power)	RETAINED PWR	×	×	×
Signal buffer system	SIGNAL BUFFER		×	×
TPMS (tire pressure monitoring system)	AIR PRESSURE MONITOR	×	×	×
Vehicle security system	THEFT ALM	×	×	×

HEADLAMP

HEADLAMP : CONSULT-III Function (BCM - HEAD LAMP)

INFOID:000000005683147

WORK SUPPORT

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

Work Item	Setting item	Setting	
BATTERY SAVER SET	ON*	With the exterior lamp battery saver function	
	OFF	Without the exterior lamp battery saver function	
CUSTOM A/LIGHT SETTING	MODE1*	Normal	
	MODE2	More sensitive setting than normal setting (Turns ON earlier than normal operation.)	
	MODE3	More sensitive setting than MODE 2 (Turns ON earlier than MODE 2.)	
	MODE4	Less sensitive setting than normal setting (Turns ON later than normal operation.)	
ILL DELAY SET	MODE1*	45 sec.	Sets delay timer function timer operation time (All doors closed)
	MODE2	Without the function	
	MODE3	30 sec.	
	MODE4	60 sec.	
	MODE5	90 sec.	
	MODE6	120 sec.	
	MODE7	150 sec.	
	MODE8	180 sec.	

*: Initial setting

DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [ON/OFF]	Ignition switch (ON) status judged from IGN signal (ignition power supply)
ACC ON SW [ON/OFF]	Ignition switch (ACC) status judged from ACC signal (accessory power supply)
HI BEAM SW [ON/OFF]	Each switch status that BCM judges from the combination switch reading function
HEAD LAMP SW 1 [ON/OFF]	
HEAD LAMP SW 2 [ON/OFF]	
LIGHT SW 1ST [ON/OFF]	
AUTO LIGHT SW [ON/OFF]	
PASSING SW [ON/OFF]	
FR FOG SW [ON/OFF]	
TURN SIGNAL R [ON/OFF]	
TURN SIGNAL L [ON/OFF]	
DOOR SW-DR [ON/OFF]	
DOOR SW-AS [ON/OFF]	The switch status input from front door switch RH
DOOR SW-RR [ON/OFF]	The switch status input from rear door switch RH
DOOR SW-RL [ON/OFF]	The switch status input from rear door switch LH
CARGO LAMP SW [ON/OFF]	Cargo lamp status that BCM judges from the vehicle condition
OPTICAL SENSOR [ON/OFF]	The value of exterior brightness voltage input from the optical sensor

ACTIVE TEST

Test Item	Operation	Description
TAIL LAMP	ON	Transmits the position light request signal to IPDM E/R with CAN communication to turn the tail lamp ON.
	OFF	Stops the tail lamp request signal transmission.

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

Test Item	Operation	Description
HEAD LAMP	HI	Transmits the high beam request signal with CAN communication to turn the headlamp (HI).
	LO	Transmits the low beam request signal with CAN communication to turn the headlamp (LO).
	OFF	Stops the high & low beam request signal transmission.
FR FOG LAMP	ON	Transmits the front fog lights request signal to IPDM E/R with CAN communication to turn the front fog lamp ON.
	OFF	Stops the front fog lights request signal transmission.
CARGO LAMP	ON	Transmits the cargo lamp request signal to IPDM E/R with CAN communication to turn the each lamp ON.
	OFF	Stops the cargo lamp request signal transmission.

FLASHER

FLASHER : CONSULT-III Function (BCM - FLASHER)

INFOID:000000005683149

DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [ON/OFF]	Ignition switch (ON) status judged from IGN signal (ignition power supply)
HAZARD SW [ON/OFF]	The switch status input from the hazard switch
TURN SIGNAL R [ON/OFF]	Each switch condition that BCM judges from the combination switch reading function
TURN SIGNAL L [ON/OFF]	
BRAKE SW [ON/OFF]	The switch status input from the brake switch

ACTIVE TEST

Test Item	Operation	Description
FLASHER	RH	Outputs the voltage to turn the right side turn signal lamps ON.
	LH	Outputs the voltage to turn the left side turn signal lamps ON.
	OFF	Stops the voltage to turn the turn signal lamps OFF.

COMB SW

COMB SW : CONSULT-III Function (BCM - COMB SW)

INFOID:000000005683151

DATA MONITOR

Monitor Item [Unit]	Description
TURN SIGNAL R [OFF/ON]	Displays the status of the TURN RH switch in combination switch judged by BCM with the combination switch reading function
TURN SIGNAL L [OFF/ON]	Displays the status of the TURN LH switch in combination switch judged by BCM with the combination switch reading function
HI BEAM SW [OFF/ON]	Displays the status of the HI BEAM switch in combination switch judged by BCM with the combination switch reading function
HEAD LAMP SW 1 [OFF/ON]	Displays the status of the HEADLAMP switch in combination switch judged by BCM with the combination switch reading function
HEAD LAMP SW 2 [OFF/ON]	Displays the status of the HEADLAMP switch in combination switch judged by BCM with the combination switch reading function
LIGHT SW 1ST [OFF/ON]	Displays the status of the HEADLAMP switch in combination switch judged by BCM with the combination switch reading function

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

Monitor Item [Unit]	Description	A
PASSING SW [OFF/ON]	Displays the status of the PASSING switch in combination switch judged by BCM with the combination switch reading function	A
AUTO LIGHT SW [OFF/ON]	Displays the status of the AUTO LIGHT switch in combination switch judged by BCM with the combination switch reading function	B
FR FOG SW [OFF/ON]	Displays the status of the FR FOG switch in combination switch judged by BCM with the combination switch reading function	C
FR WIPER HI [OFF/ON]	Displays the status of the FR WIPER HI switch in combination switch judged by BCM with the combination switch reading function	D
FR WIPER LOW [OFF/ON]	Displays the status of the FR WIPER LOW switch in combination switch judged by BCM with the combination switch reading function	D
FR WIPER INT [OFF/ON]	Displays the status of the FR WIPER INT switch in combination switch judged by BCM with the combination switch reading function	E
FR WASHER SW [OFF/ON]	Displays the status of the FR WASHER switch in combination switch judged by BCM with the combination switch reading function	E
INT VOLUME [1 - 7]	Displays the status of wiper intermittent dial position judged by BCM with the combination switch reading function	F
		G
		H
		I
		J
		K
		EXL
		M
		N
		O
		P

DIAGNOSIS SYSTEM (IPDM E/R)

< FUNCTION DIAGNOSIS >

DIAGNOSIS SYSTEM (IPDM E/R)

Diagnosis Description

INFOID:000000005683159

AUTO ACTIVE TEST

Description

In auto active test mode, the IPDM E/R sends a drive signal to the following systems to check their operation.

- Oil pressure low/coolant pressure high warning indicator
- Oil pressure gauge
- Rear window defogger
- Front wipers
- Tail, license and parking lamps
- Front fog lamps
- Headlamps (Hi, Lo)
- A/C compressor (magnetic clutch)

Operation Procedure

1. Close the hood and front door RH, and lift the wiper arms from the windshield (to prevent windshield damage due to wiper operation).
NOTE:
When auto active test is performed with hood opened, sprinkle water on windshield before hand.
2. Turn ignition switch OFF.
3. Turn the ignition switch ON and, within 20 seconds, press the front door switch LH 10 times. Then turn the ignition switch OFF.
4. Turn the ignition switch ON within 10 seconds. After that the horn sounds once and the auto active test starts.
5. After a series of the following operations is repeated 3 times, auto active test is completed.

NOTE:


When auto active test mode has to be cancelled halfway through test, turn ignition switch OFF.

CAUTION:

- If auto active test mode cannot be actuated, check door switch system. Refer to [DLK-26, "KING CAB : Description"](#) (King Cab) or [DLK-27, "CREW CAB : Description"](#) (Crew Cab).
- Do not start the engine.

Inspection in Auto Active Test Mode

When auto active test mode is actuated, the following 6 steps are repeated 3 times.

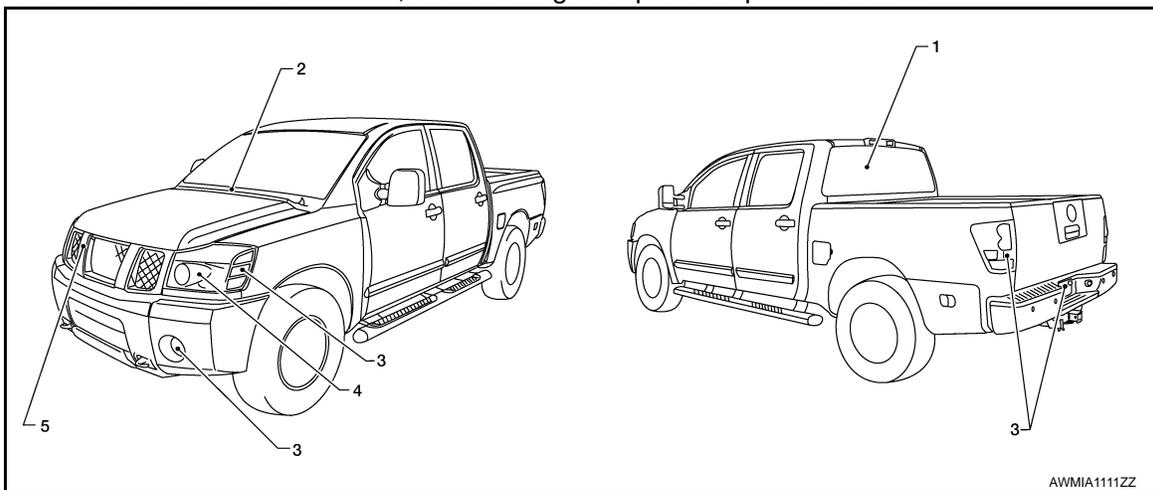

AWMIA1111ZZ


Operation sequence	Inspection Location	Operation
1	Rear window defogger (Crew Cab only)	10 seconds
2	Front wipers	LO for 5 seconds → HI for 5 seconds

DIAGNOSIS SYSTEM (IPDM E/R)

< FUNCTION DIAGNOSIS >

Operation sequence	Inspection Location	Operation
3	Tail, license, parking lamps and front fog lamps (if equipped)	10 seconds
4	Headlamps	LO for 10 seconds → HI on-off for 5 seconds
5	A/C compressor (magnetic clutch)	ON ⇔ OFF 5 times

Concept of auto active test

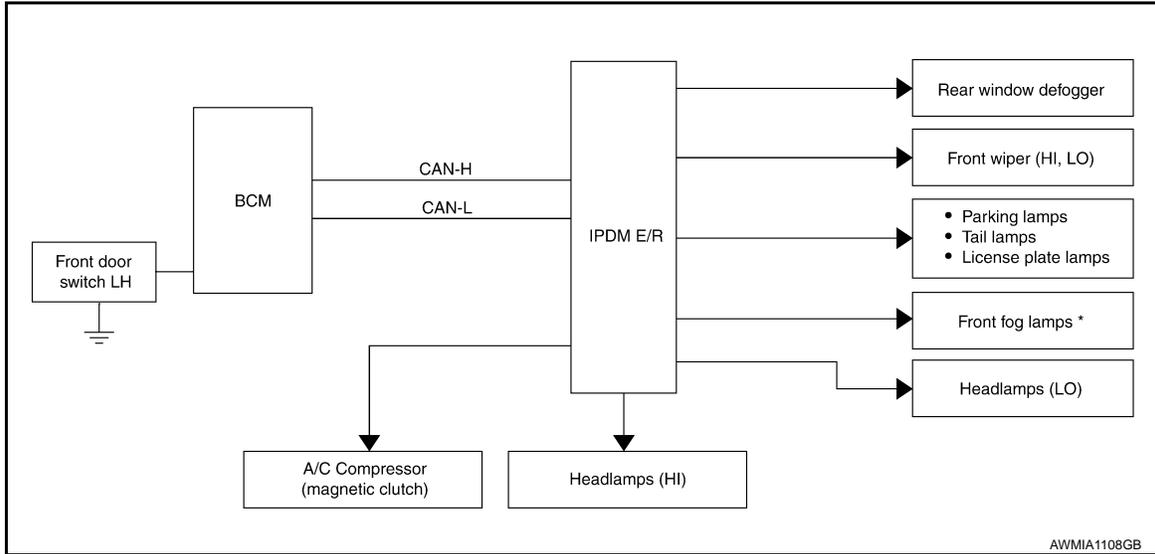

*: If equipped

- IPDM E/R starts the auto active test with the door switch signals transmitted by BCM via CAN communication. Therefore, the CAN communication line between IPDM E/R and BCM is considered normal if the auto active test starts successfully.
- The auto active test facilitates troubleshooting if any systems controlled by IPDM E/R cannot be operated.

Diagnosis chart in auto active test mode

Symptom	Inspection contents	Possible cause
Oil pressure low/coolant temperature high warning indicator does not operate	Perform auto active test. Does the oil pressure low/coolant temperature high warning indicator operate?	YES • IPDM E/R signal input circuit • ECM signal input circuit • CAN communication signal between ECM and combination meter
		NO CAN communication signal between IPDM E/R, BCM and combination meter
Oil pressure gauge does not operate	Perform auto active test. Does the oil pressure gauge operate?	YES IPDM E/R signal input circuit
		NO CAN communication signal between IPDM E/R, BCM and combination meter
Rear window defogger does not operate	Perform auto active test. Does the rear window defogger operate?	YES BCM signal input circuit
		NO CAN communication signal between BCM and IPDM E/R

DIAGNOSIS SYSTEM (IPDM E/R)

< FUNCTION DIAGNOSIS >

Symptom	Inspection contents	Possible cause	
Any of the following components do not operate <ul style="list-style-type: none"> • Front wipers • Tail lamps • License plate lamps • Parking lamps • Front fog lamps • Headlamps (HI, LO) 	Perform auto active test. Does the applicable system operate?	YES	BCM signal input system
		NO	<ul style="list-style-type: none"> • Lamp or front wiper motor malfunction • Lamp or front wiper motor ground circuit • Harness or connector between IPDM E/R and applicable system • IPDM E/R (integrated relay malfunction)
A/C compressor does not operate	Perform auto active test. Does the A/C compressor operate?	YES	<ul style="list-style-type: none"> • BCM signal input circuit • CAN communication signal between BCM and ECM • CAN communication signal between ECM and IPDM E/R
		NO	<ul style="list-style-type: none"> • Magnetic clutch malfunction • Harness or connector between IPDM E/R and magnetic clutch • IPDM E/R (integrated relay malfunction)

CONSULT - III Function (IPDM E/R)

INFOID:000000005683160

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with IPDM E/R.

Diagnosis mode	Description
Self Diagnostic Result	Displays the diagnosis results judged by IPDM E/R.
Data Monitor	Displays the real-time input/output data from IPDM E/R input/output data.
Active Test	IPDM E/R can provide a drive signal to electronic components to check their operations.
CAN Diag Support Monitor	The results of transmit/receive diagnosis of CAN communication can be read.

SELF DIAGNOSTIC

Refer to [PCS-27, "DTC Index"](#).

DATA MONITOR

Monitor item

Monitor Item [Unit]	MAIN SIG- NALS	Description
A/C COMP REQ [OFF/ON]	×	Displays the status of the A/C request signal.
TAIL&CLR REQ [OFF/ON]	×	Displays the status of the position light request signal received from BCM via CAN communication.
HL LO REQ [OFF/ON]	×	Displays the status of the low beam request signal received from BCM via CAN communication.
HL HI REQ [OFF/ON]	×	Displays the status of the high beam request signal received from BCM via CAN communication.
FR FOG REQ* [OFF/ON]	×	Displays the status of the front fog lamp request signal received from BCM via CAN communication.
FR WIP REQ [STOP/1LOW/LOW/HI]	×	Displays the status of the front wiper request signal received from BCM via CAN communication.
WIP AUTO STOP [STOP P/ACT P]	×	Displays the status of the front wiper auto stop signal judged by IPDM E/R.
WIP PROT [OFF/Block]	×	Displays the status of the front wiper fail-safe operation judged by IPDM E/R.

DIAGNOSIS SYSTEM (IPDM E/R)

< FUNCTION DIAGNOSIS >

Monitor Item [Unit]	MAIN SIG- NALS	Description
ST RLY REQ [OFF/ON]		Displays the status of the starter request signal received from ECM via CAN communication.
IGN RLY [OFF/ON]	×	Displays the status of the ignition relay judged by IPDM E/R.
RR DEF REQ* [OFF/ON]	×	Displays the status of the rear defogger request signal.
OIL P SW [OPEN/CLOSE]		Displays the status of the oil pressure switch judged by IPDM E/R.
DTRL REQ* [OFF]		Displays the status of the daytime light request signal received from BCM via CAN communication.
THFT HRN REQ [OFF/ON]		Displays the status of the theft warning horn request signal received from BCM via CAN communication.
HORN CHIRP [OFF/ON]		Displays the status of the horn reminder signal received from BCM via CAN communication.

*: If equipped

ACTIVE TEST

Test item

Test item	Operation	Description
REAR DEFOGGER*	OFF	OFF
	ON	Operates rear window defogger relay.
FRONT WIPER	OFF	OFF
	LO	Operates the front wiper relay.
	HI	Operates the front wiper relay and front wiper high relay.
EXTERNAL LAMPS	OFF	OFF
	TAIL	Operates the tail lamp relay.
	LO	Operates the headlamp low relay.
	HI	Operates the headlamp low relay and the headlamp high LH/RH relays at 1 second intervals.
	FOG	Operates the front fog lamp relay*
HORN	ON	Operates horn relay for 20 ms.

*: If equipped

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

COMPONENT DIAGNOSIS

POWER SUPPLY AND GROUND CIRCUIT

BCM (BODY CONTROL MODULE)

BCM (BODY CONTROL MODULE) : Diagnosis Procedure

INFOID:000000005683161

1. CHECK FUSES AND FUSIBLE LINK

Check that the following fuses and fusible link are not blown.

Terminal No.	Signal name	Fuses and fusible link No.
57	Battery power supply	22 (15A)
70		F (50A)
11	Ignition ACC or ON	4 (10A)
38	Ignition ON or START	59 (10A)

Is the fuse blown?


YES >> Replace the blown fuse or fusible link after repairing the affected circuit.

NO >> GO TO 2

2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM.
3. Check voltage between BCM harness connector and ground.

Connector	Terminals		Power source	Condition	Voltage (V) (Approx.)
	(+)	(-)			
M18	11	Ground	ACC power supply	Ignition switch ACC or ON	Battery voltage
	38	Ground	Ignition power supply	Ignition switch ON or START	Battery voltage
M20	57	Ground	Battery power supply	Ignition switch OFF	Battery voltage
	70	Ground	Battery power supply	Ignition switch OFF	Battery voltage

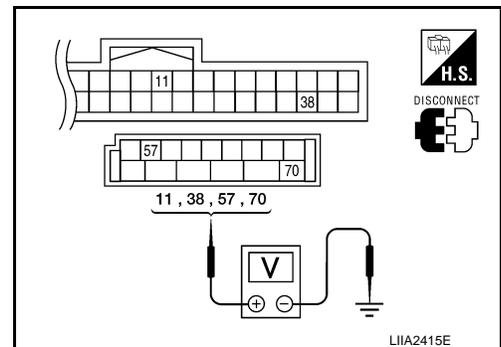

Is the measurement value normal?

YES >> GO TO 3

NO >> Repair or replace harness.

3. CHECK GROUND CIRCUIT


Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M20	67		Yes

Does continuity exist?

YES >> Inspection End.

NO >> Repair or replace harness.

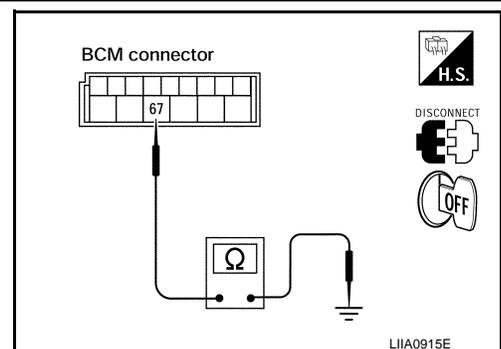

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) : Diagnosis Procedure

INFOID:000000005683162

Regarding Wiring Diagram information, refer to [PCS-23. "Wiring Diagram"](#).

1. CHECK FUSES AND FUSIBLE LINK

Check that the following IPDM E/R fuses or fusible link are not blown.

Terminal No.	Signal name	Fuses and fusible link No.
1	Battery	A (140A), D (80A)
2	Battery	C (80A)
12	Ignition switch ON or START	59 (10A)

Is the fuse blown?


YES >> Replace the blown fuse or fusible link after repairing the affected circuit.

NO >> GO TO 2

2. CHECK BATTERY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R.
3. Check voltage between IPDM E/R harness connectors and ground.

Terminals		(-)	Ignition switch position		
(+)	Connector		Terminal	OFF	ON
E118 (A)	1	Ground	Battery voltage	Battery voltage	Battery voltage
			2	Battery voltage	Battery voltage
E119 (B)	12		0V	Battery voltage	Battery voltage

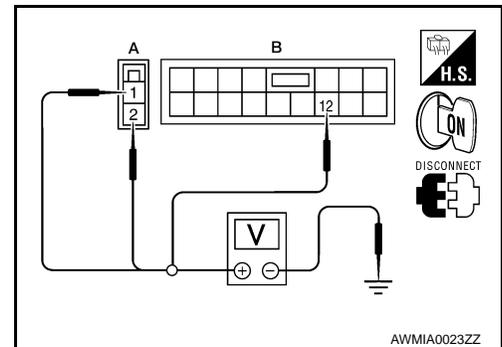

Is the measurement value normal?

YES >> GO TO 3

NO >> Repair or replace harness.

3. CHECK GROUND CIRCUIT


1. Turn ignition switch OFF.
2. Check continuity between IPDM E/R harness connectors and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E122 (A)	38	Ground	Yes
E124 (B)	59		

Does continuity exist?

YES >> Inspection End.

NO >> Repair or replace harness.

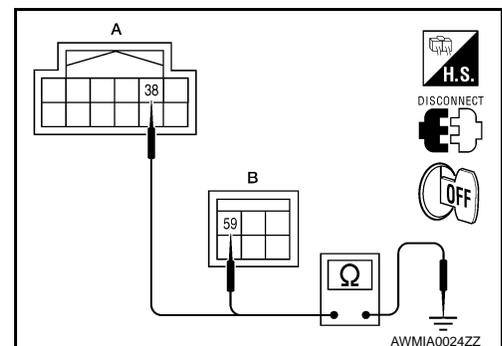

HEADLAMP (HI) CIRCUIT

< COMPONENT DIAGNOSIS >

HEADLAMP (HI) CIRCUIT

Description

INFOID:000000005387272

The IPDM E/R (intelligent power distribution module engine room) controls the headlamp LH high and headlamp RH high relays based on inputs from the BCM via the CAN communication lines. When the headlamp LH high and headlamp RH high relays are energized, power flows through fuses 34 and 35, located in the IPDM E/R. Power then flows to the front combination lamps to the headlamp high beam.

Component Function Check

INFOID:000000005387273

1. CHECK HEADLAMP (HI) OPERATION

⊗ WITHOUT CONSULT-III

1. Start IPDM E/R auto active test. Refer to [PCS-11, "Diagnosis Description"](#).
2. Check that the headlamp switches to the high beam.

NOTE:

HI/LO is repeated 1 second each when using the IPDM E/R auto active test.

ⓑ CONSULT-III

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With the test item operating, check that the headlamp switches to high beam.

HI : Headlamp switches to the high beam.

OFF : Headlamp OFF

Does the headlamp switch to high beam?

YES >> Headlamp (HI) circuit is normal.

NO >> Refer to [EXL-36, "Diagnosis Procedure - Without Daytime Light System"](#), [EXL-37, "Diagnosis Procedure - With Daytime Light System"](#).

Diagnosis Procedure - Without Daytime Light System

INFOID:000000005387274

Regarding Wiring Diagram information, refer to [EXL-58, "Wiring Diagram"](#).

1. CHECK HEADLAMP (HI) FUSES

1. Turn the ignition switch OFF.
2. Check that the following fuses are not open.

Unit	Location	Fuse No.	Capacity
Headlamp HI (LH)	IPDM E/R	35	10A
Headlamp HI (RH)	IPDM E/R	34	10A

Is the fuse open?

YES >> Repair the harness and replace the fuse.

NO >> GO TO 2.

2. CHECK HEADLAMP (HI) OUTPUT VOLTAGE

HEADLAMP (HI) CIRCUIT

< COMPONENT DIAGNOSIS >

1. Turn the ignition switch OFF.
2. Disconnect the front combination lamp connector E11 or E107.
3. Turn the ignition switch ON.
4. Turn the high beam headlamps ON.
5. With the high beam headlamps ON, check the voltage between the combination lamp connector and ground.

		(+)		(-)	Voltage
	Connector		Terminal		
LH	E11		2	Ground	Battery voltage
RH	E107		2		

Are the voltage readings as specified?

- YES >> GO TO 4.
NO >> GO TO 3.

3. CHECK HEADLAMP (HI) CIRCUIT FOR OPEN

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector E123.
3. Check continuity between the IPDM E/R harness connector (A) and the front combination lamp harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
LH	E123	E11	2	Yes
RH			56	

Does continuity exist?

- YES >> GO TO 4.
NO >> Repair the harnesses or connectors.

4. CHECK FRONT COMBINATION LAMP (HI) GROUND CIRCUIT

Check continuity between the front combination lamp harness connector terminal and ground.

Connector	Terminal	—	Continuity
LH	E11	Ground	Yes
RH	E107		

Does continuity exist?

- YES >> Inspect the headlamp bulb.
NO >> Repair the harness.




Diagnosis Procedure - With Daytime Light System

INFOID:000000005387275

Regarding Wiring Diagram information, refer to [EXL-68. "Wiring Diagram"](#).

1. CHECK HEADLAMP (HI) FUSES

1. Turn the ignition switch OFF.
2. Check that the following fuses are not open.

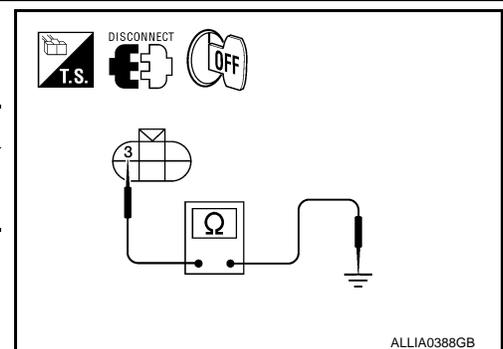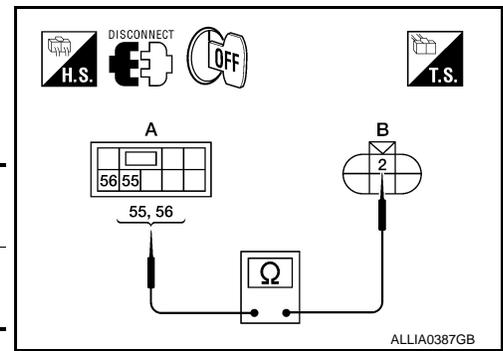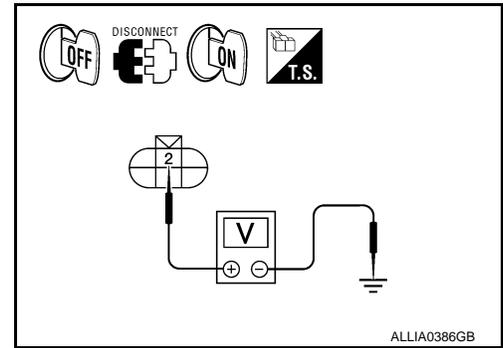

HEADLAMP (HI) CIRCUIT

< COMPONENT DIAGNOSIS >


Unit	Location	Fuse No.	Capacity
Headlamp HI (LH)	IPDM E/R	35	10A
Headlamp HI (RH)	IPDM E/R	34	10A

Is the fuse open?

- YES >> Repair the harness and replace the fuse.
 NO >> GO TO 2.

2.CHECK HEADLAMP (HI) OUTPUT VOLTAGE

- Turn the ignition switch OFF.
- Disconnect the front combination lamp connector E6 or E107.
- Turn the ignition switch ON.
- Turn the high beam headlamps ON.
- With the high beam headlamps ON, check the voltage between the combination lamp connector and ground.

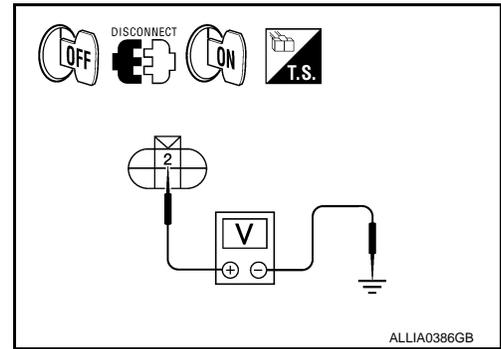


(+)		Terminal	(-)	Voltage
Connector				
LH	E6	2	Ground	Battery voltage
RH	E107	2		

Are the voltage readings as specified?

- YES >> GO TO 4.
 NO >> GO TO 3.

3.CHECK HEADLAMP (HI) CIRCUIT FOR OPEN

- Turn the ignition switch OFF.
- Disconnect IPDM E/R connector E123.
- Check continuity between the IPDM E/R harness connector (A) and the front combination lamp harness connector (B).

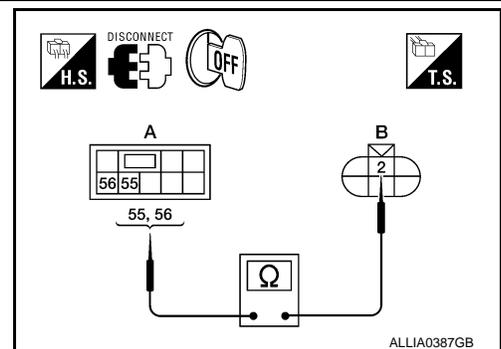

A		B		Continuity	
Connector	Terminal	Connector	Terminal		
LH	E123	E6	55	2	Yes
RH			56	E107	

Does continuity exist?

- YES >> GO TO 4.
 NO >> Repair the harnesses or connectors.


4.CHECK FRONT COMBINATION LAMP (HI) GROUND CIRCUIT

Check continuity between the front combination lamp harness connector terminal and ground.

Connector	Terminal	—	Continuity
LH	E6	Ground	Yes
RH	E107		

Does continuity exist?

- YES >> Inspect the headlamp bulb.
 NO >> Repair the daytime light relay (if left high beam inop) or harness.

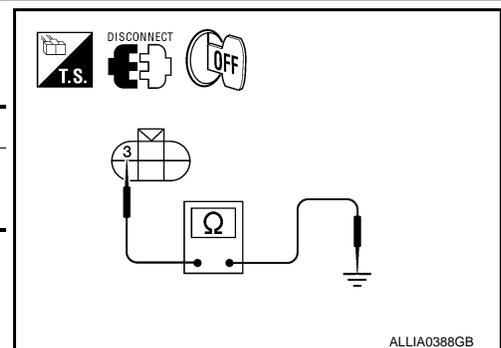

HEADLAMP (LO) CIRCUIT

< COMPONENT DIAGNOSIS >

HEADLAMP (LO) CIRCUIT

Description

INFOID:000000005387276

The IPDM E/R (intelligent power distribution module engine room) controls the headlamp low relay based on inputs from the BCM via the CAN communication lines. When the headlamp low relay is energized, power flows through fuses 40 and 41, located in the IPDM E/R. Power then flows to the front combination lamps to the headlamp low beam.

Component Function Check

INFOID:000000005387277

1. CHECK HEADLAMP (LO) OPERATION

WITHOUT CONSULT-III

1. Start IPDM E/R auto active test. Refer to [PCS-11, "Diagnosis Description"](#).
2. Check that the headlamp is turned ON.

NOTE:

HI/LO is repeated 1 second each when using the IPDM E/R auto active test.

CONSULT-III

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With the test items operating, check that the headlamp is turned ON.

LO : Headlamp ON

OFF : Headlamp OFF

Is the headlamp turned ON?

YES >> Headlamp (LO) is normal.

NO >> Refer to [EXL-39, "Diagnosis Procedure - Without Daytime Light System"](#), [EXL-40, "Diagnosis Procedure - With Daytime Light System"](#).

Diagnosis Procedure - Without Daytime Light System

INFOID:000000005387278

Regarding Wiring Diagram information, refer to [EXL-58, "Wiring Diagram"](#).

1. CHECK HEADLAMP (LO) FUSES

1. Turn the ignition switch OFF.
2. Check that the following fuses are not open.

Unit	Location	Fuse No.	Capacity
Headlamp LO (LH)	IPDM E/R	40	15A
Headlamp LO (RH)	IPDM E/R	41	15A

Is the fuse open?

YES >> Repair the harness and replace the fuse.

NO >> GO TO 2.

2. CHECK HEADLAMP (LO) OUTPUT VOLTAGE

HEADLAMP (LO) CIRCUIT

< COMPONENT DIAGNOSIS >

1. Turn the ignition switch OFF.
2. Disconnect the front combination lamp connector.
3. Turn the ignition switch ON.
4. Turn the low beam headlamps ON.
5. With the low beam headlamps ON, check the voltage between the combination lamp connector and ground.

(+)		Terminal	(-)	Voltage
Connector				
LH	E11	1	Ground	Battery voltage
RH	E107	1		

Is voltage reading as specified?

- YES >> GO TO 4.
 NO >> GO TO 3.

3. CHECK HEADLAMP (LO) CIRCUIT FOR OPEN

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between the IPDM E/R harness connector and the front combination lamp harness connector.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
LH	E123	E11	52	Yes
RH			54	

Does continuity exist?

- YES >> GO TO 4.
 NO >> Repair the harnesses or connectors.




4. CHECK FRONT COMBINATION LAMP (LO) GROUND CIRCUIT

Check continuity between the front combination lamp harness connector terminal and ground.

Connector	Terminal	—	Continuity
LH	E11	Ground	Yes
RH	E107		

Does continuity exist?

- YES >> Inspect the headlamp bulb.
 NO >> Repair the harness.

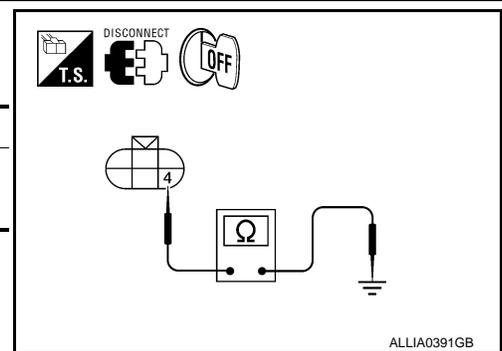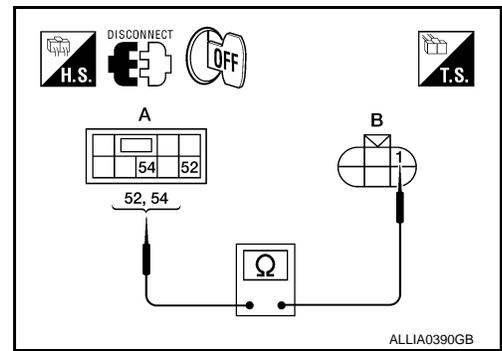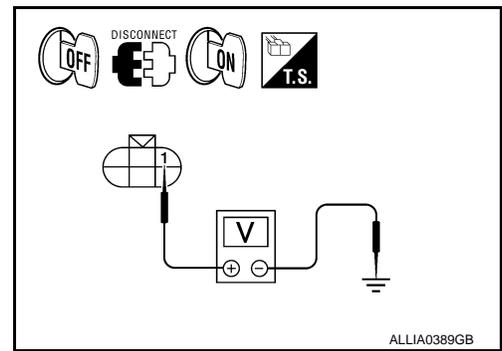

Diagnosis Procedure - With Daytime Light System

INFOID:000000005387279

Regarding Wiring Diagram information, refer to [EXL-68. "Wiring Diagram"](#).

1. CHECK HEADLAMP (LO) FUSES

1. Turn the ignition switch OFF.
2. Check that the following fuses are not open.

HEADLAMP (LO) CIRCUIT

< COMPONENT DIAGNOSIS >


Unit	Location	Fuse No.	Capacity
Headlamp LO (LH)	IPDM E/R	40	15A
Headlamp LO (RH)	IPDM E/R	41	15A

Is the fuse open?

- YES >> Repair the harness and replace the fuse.
 NO >> GO TO 2.

2.CHECK HEADLAMP (LO) OUTPUT VOLTAGE

- Turn the ignition switch OFF.
- Disconnect the front combination lamp connector.
- Turn the ignition switch ON.
- Turn the low beam headlamps ON.
- With the low beam headlamps ON, check the voltage between the combination lamp connector and ground.

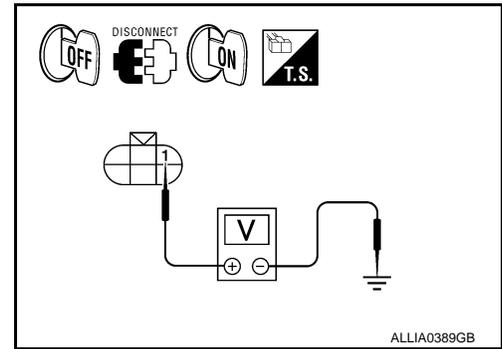


(+)		Terminal	(-)	Voltage
Connector				
LH	E6	1	Ground	Battery voltage
RH	E107	1		

Is voltage reading as specified?

- YES >> GO TO 4.
 NO >> GO TO 3.

3.CHECK HEADLAMP (LO) CIRCUIT FOR OPEN

- Turn the ignition switch OFF.
- Disconnect IPDM E/R connector.
- Check continuity between the IPDM E/R harness connector and the front combination lamp harness connector.

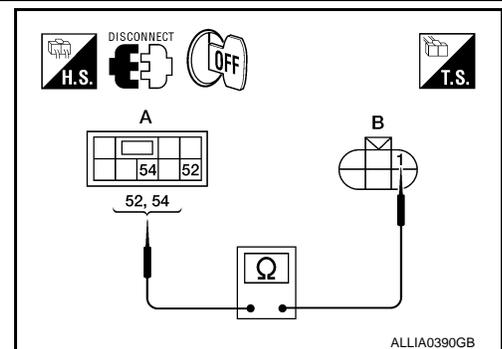

A		B		Continuity	
Connector	Terminal	Connector	Terminal		
LH	E123	E6	52	1	Yes
RH			54		

Does continuity exist?

- YES >> GO TO 4.
 NO >> Repair the harnesses or connectors.


4.CHECK FRONT COMBINATION LAMP (LO) GROUND CIRCUIT

Check continuity between the front combination lamp harness connector terminal and ground.

Connector	Terminal	—	Continuity
LH	E6	Ground	Yes
RH	E107		

Does continuity exist?

- YES >> Inspect the headlamp bulb.
 NO >> Repair the harness.

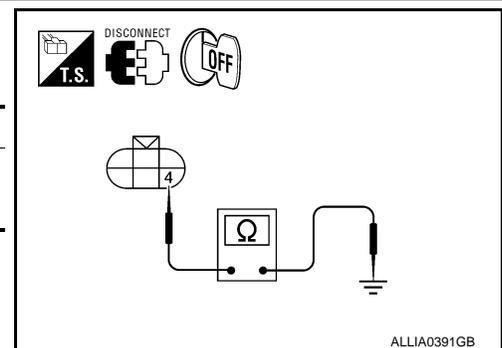

FRONT FOG LAMP CIRCUIT

< COMPONENT DIAGNOSIS >

FRONT FOG LAMP CIRCUIT

Description

INFOID:000000005387280

The IPDM E/R (intelligent power distribution module engine room) controls the front fog lamp relay based on inputs from the BCM via the CAN communication lines. When the front fog lamp relay is energized, power flows from the front fog lamp relay in the IPDM E/R to the front fog lamps.

Component Function Check

INFOID:000000005387281

1. CHECK FRONT FOG LAMP OPERATION

⊗ WITHOUT CONSULT-III

1. Activate IPDM E/R auto active test. Refer to [PCS-11, "Diagnosis Description"](#).
2. Check that the front fog lamp is turned ON.

Ⓟ CONSULT-III

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the test items, Check that the front fog lamp is turned ON.

FOG : Front fog lamp ON

OFF : Front fog lamp OFF

Is the front fog lamp turned ON?

- YES >> Front fog lamp circuit is normal.
 NO >> Refer to [EXL-42, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000005387282

Regarding Wiring Diagram information, refer to [EXL-74, "Wiring Diagram"](#).

1. CHECK FRONT FOG LAMP FUSE

1. Turn the ignition switch OFF.
2. Check that the following fuses are not open.

Unit	Location	Fuse No.	Capacity
Front fog lamp	IPDM E/R	56	20A

Is the fuse open?

- YES >> Repair the harness and replace the fuse.
 NO >> GO TO 2.


2. CHECK FRONT FOG LAMP OUTPUT VOLTAGE

1. Turn the ignition switch OFF.
2. Disconnect the front fog lamp connector.
3. Turn the ignition switch ON.
4. Turn the front fog lamps ON.
5. Check the voltage between the fog lamp connector and ground.

(+)		Terminal	(-)	Voltage
Connector				
LH	E101	1	Ground	Battery voltage
RH	E102	1		

Are the voltage readings as specified?

- YES >> GO TO 4.
 NO >> GO TO 3.

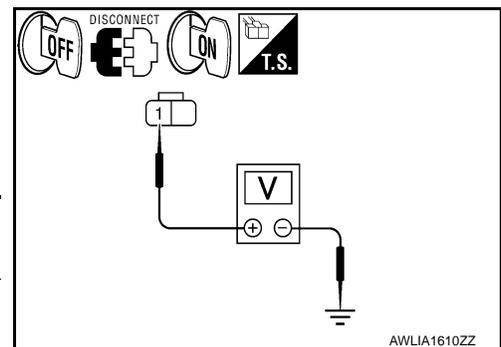

FRONT FOG LAMP CIRCUIT

< COMPONENT DIAGNOSIS >

3. CHECK FRONT FOG LAMP OPEN CIRCUIT


1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between the IPDM E/R harness connector and the front fog lamp harness connector.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
LH	E123	50	E101	Yes
RH		51	E102	

Does continuity exist?

YES >> GO TO 4.

NO >> Repair the harnesses or connectors.

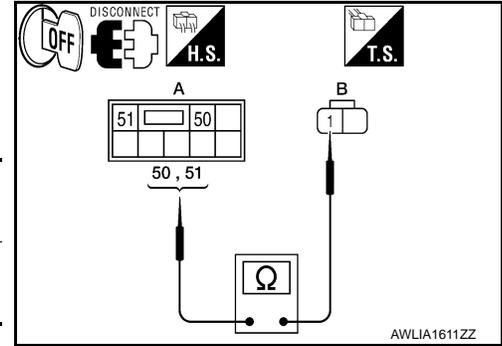

4. CHECK FRONT FOG LAMP GROUND CIRCUIT


1. Disconnect the front fog lamp connector.
2. Check continuity between the front fog lamp harness connector terminal and ground.

Connector	Terminal	—	Continuity
LH	E101	Ground	Yes
RH	E102		

Does continuity exist?

YES >> Inspect the fog lamp bulb.

NO >> Repair the harness.

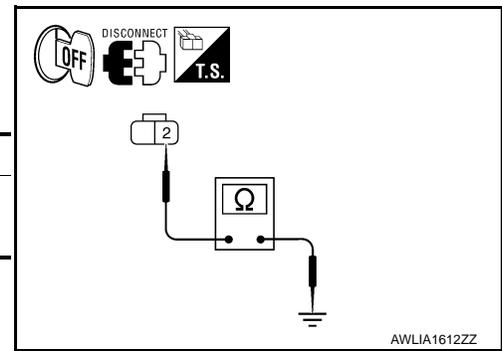

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

PARKING LAMP CIRCUIT

< COMPONENT DIAGNOSIS >

PARKING LAMP CIRCUIT

Description

INFOID:000000005387283

The IPDM E/R (intelligent power distribution module engine room) controls the tail lamp relay based on inputs from the BCM via the CAN communication lines. When the tail lamp relay is energized, power flows through fuse 37, located in the IPDM E/R. Power then flows to the front and rear combination lamps.

Component Function Check

INFOID:000000005387284

1. CHECK PARKING LAMP OPERATION

WITHOUT CONSULT-III

1. Activate IPDM E/R auto active test. Refer to [PCS-11, "Diagnosis Description"](#).
2. Check that the parking lamp is turned ON.

CONSULT-III

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. While operating the test item, check that the parking lamp is turned ON.

TAIL : Parking lamp ON

OFF : Parking lamp OFF

Is the parking lamp turned ON?

YES >> Parking lamp circuit is normal.

NO >> Refer to [EXL-44, "Diagnosis Procedure - Without Daytime Light System"](#), [EXL-47, "Diagnosis Procedure - With Daytime Light System"](#).

Diagnosis Procedure - Without Daytime Light System

INFOID:000000005387285

Regarding Wiring Diagram information, refer to [EXL-84, "Wiring Diagram"](#).

1. CHECK PARKING LAMP FUSES

1. Turn the ignition switch OFF.
2. Check that the following fuses are not open.

Unit	Location	Fuse No.	Capacity
Parking lamps	IPDM E/R	37	10A

Is the fuse open?

YES >> Repair the harness and replace the fuse.

NO >> GO TO 2.

2. CHECK TAIL LAMP RELAY OUTPUT (VOLTAGE)


1. Turn the ignition switch OFF.
2. Disconnect the front combination lamp connector, rear combination lamp connector and license plate lamp connector.
3. Turn the ignition switch ON.
4. Turn the parking lamps ON.

PARKING LAMP CIRCUIT

< COMPONENT DIAGNOSIS >


5. With the parking lamps ON, check voltage between the front combination lamp connectors and ground.

(+)		Terminal	(-)	Voltage
Connector				
LH	E11	6	Ground	Battery voltage
RH	E107			

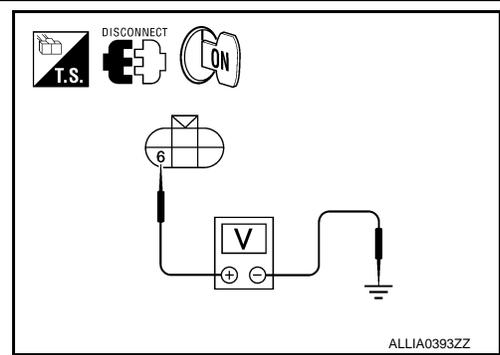


6. With the parking lamps ON, check voltage between the rear combination lamp connectors and ground.

(+)		Terminal	(-)	Voltage
Connector				
LH	C13	6	Ground	Battery voltage
RH	C14			

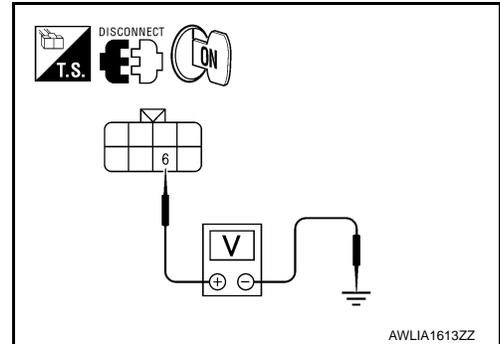

7. With the parking lamps ON, check voltage between the license plate lamp connector and ground.

(+)		Terminal	(-)	Voltage
Connector				
	C12	1	Ground	Battery voltage

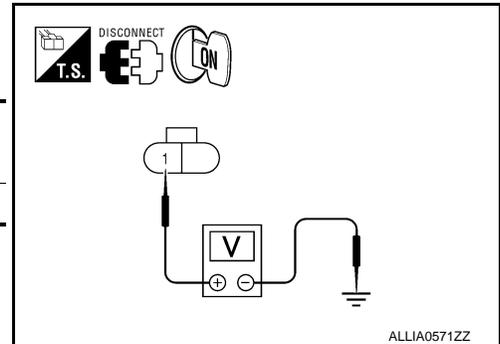


Are voltage readings as specified?

- YES >> GO TO 4.
NO >> GO TO 3.

3. CHECK PARKING, LICENSE PLATE AND TAIL LAMP CIRCUIT (OPEN)

- Turn the ignition switch OFF.
- Disconnect IPDM E/R connector.
- Check continuity between the IPDM E/R harness connector (A) and the front combination lamp harness connector (B).

A			B		Continuity
Connector	Terminal	Connector	Terminal		
LH	E124	E11	6	Yes	
RH		57			

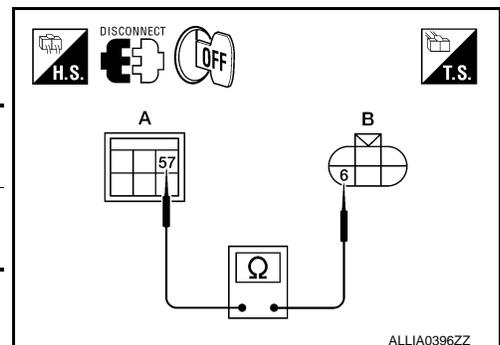


A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

PARKING LAMP CIRCUIT

< COMPONENT DIAGNOSIS >


4. Check continuity between the IPDM E/R harness connector (A) and the rear combination lamp harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
LH	E124	57	C13	Yes
RH			C14	

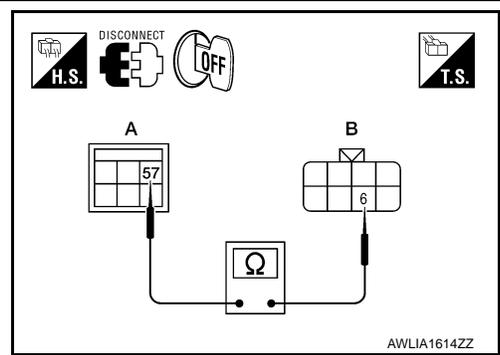

5. Check continuity between the IPDM E/R harness connector (A) and license plate lamp connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
E124	57	C12	1	Yes

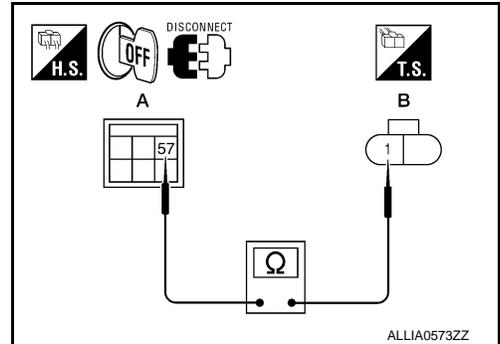

Are continuity test results as specified?


YES >> GO TO 4.

NO >> Repair the harnesses or connectors.

4. CHECK PARKING, LICENSE AND TAIL LAMP GROUND CIRCUITS


1. Check continuity between the front combination lamp harness connectors E11 and E107 terminal 4 and ground.

Connector		Terminal	—	Continuity
LH	E11	4	Ground	Yes
RH	E107			

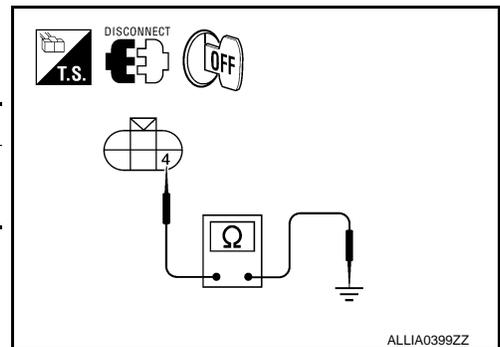

2. Check continuity between the rear combination lamp harness connectors and ground.

Connector		Terminal	—	Continuity
LH	C13	1	Ground	Yes
RH	C14			

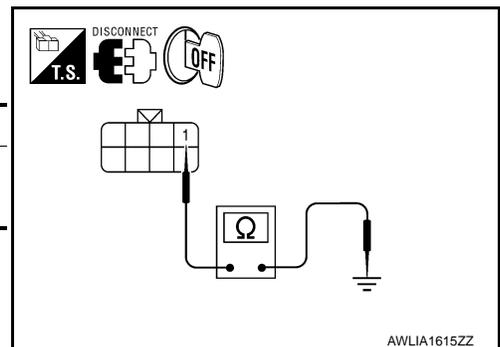

PARKING LAMP CIRCUIT


< COMPONENT DIAGNOSIS >

- Check continuity between the license plate lamp harness connector and ground.

Connector	Terminal	—	Continuity
C12	2	Ground	Yes

Does continuity exist?

- YES >> Inspect the parking lamp bulb.
 NO >> Repair the harness.

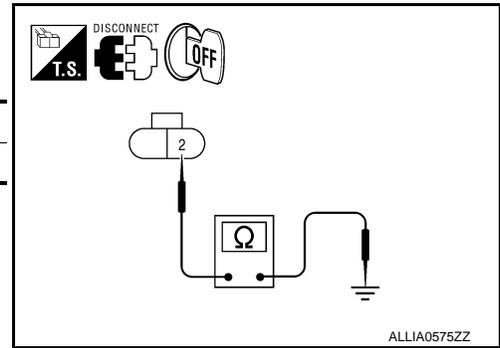

Diagnosis Procedure - With Daytime Light System

INFOID:000000005387286

Regarding Wiring Diagram information, refer to [EXL-84. "Wiring Diagram"](#).

1. CHECK PARKING LAMP FUSES

- Turn the ignition switch OFF.
- Check that the following fuses are not open.

Unit	Location	Fuse No.	Capacity
Parking lamps	IPDM E/R	37	10A


Is the fuse open?

- YES >> Repair the harness and replace the fuse.
 NO >> GO TO 2.

2. CHECK TAIL LAMP RELAY OUTPUT (VOLTAGE)


- Turn the ignition switch OFF.
- Disconnect the front combination lamp connector, rear combination lamp connector and license plate lamp connector.
- Turn the ignition switch ON.
- Turn the parking lamps ON.
- With the parking lamps ON, check voltage between the front combination lamp connectors and ground.

(+)		Terminal	(-)	Voltage
Connector				
LH	E6	6	Ground	Battery voltage
RH	E107			

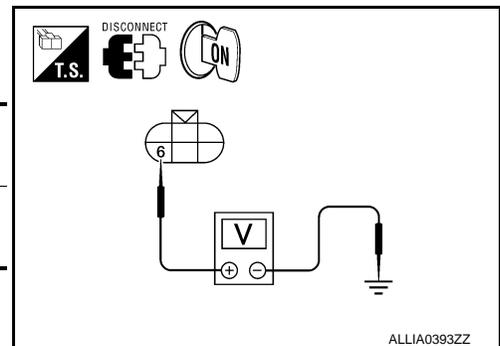

- With the parking lamps ON, check voltage between the rear combination lamp connectors and ground.

(+)		Terminal	(-)	Voltage
Connector				
LH	C13	6	Ground	Battery voltage
RH	C14			

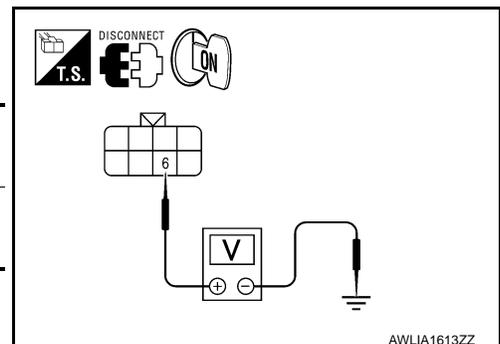

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

PARKING LAMP CIRCUIT


< COMPONENT DIAGNOSIS >

7. With the parking lamps ON, check voltage between the license plate lamp connector and ground

(+)		(-)	Voltage
Connector	Terminal		
C12	1	Ground	Battery voltage

Are voltage readings as specified?

- YES >> GO TO 4.
NO >> GO TO 3.

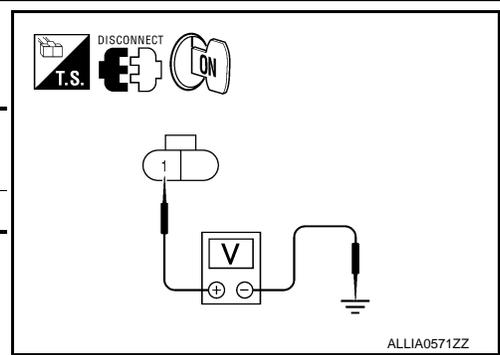


ALLIA0571ZZ

3. CHECK PARKING, LICENSE PLATE AND TAIL LAMP CIRCUIT (OPEN)

- Turn the ignition switch OFF.
- Disconnect IPDM E/R connector.
- Check continuity between the IPDM E/R harness connector (A) and the front combination lamp harness connector (B).


A			B		Continuity
Connector	Terminal	Connector	Terminal		
LH	E124	57	E6	6	Yes
RH			E107		

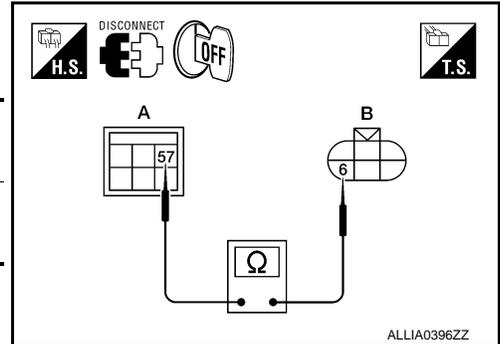

ALLIA0396ZZ

- Check continuity between the IPDM E/R harness connector (A) and the rear combination lamp harness connector (B).

A			B		Continuity
Connector	Terminal	Connector	Terminal		
LH	E124	57	C13	6	Yes
RH			C14		

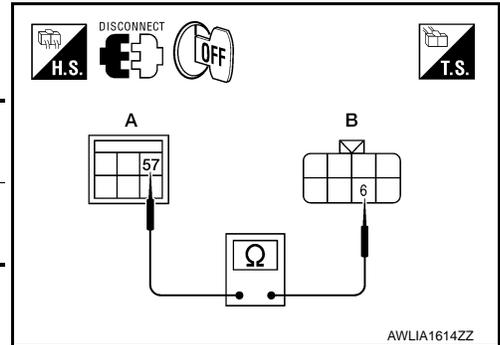


AWLIA1614ZZ

- Check continuity between the IPDM E/R harness connector (A) and license plate lamp connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
E124	57	C12	1	Yes

Are continuity test results as specified?

- YES >> GO TO 4.
NO >> Repair the harnesses or connectors.

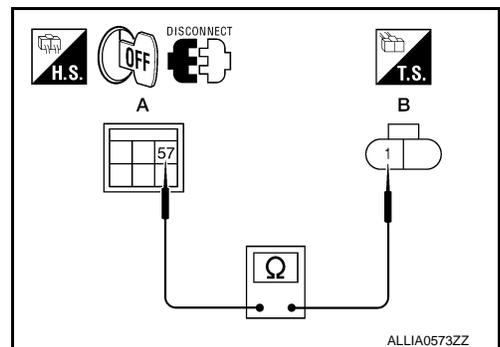

ALLIA0573ZZ


4. CHECK PARKING, LICENSE AND TAIL LAMP GROUND CIRCUITS

PARKING LAMP CIRCUIT

< COMPONENT DIAGNOSIS >


1. Check continuity between the front combination lamp harness connectors E6 and E107 terminal 4 and ground.

Connector		Terminal	—	Continuity
LH	E6	4	Ground	Yes
RH	E107			

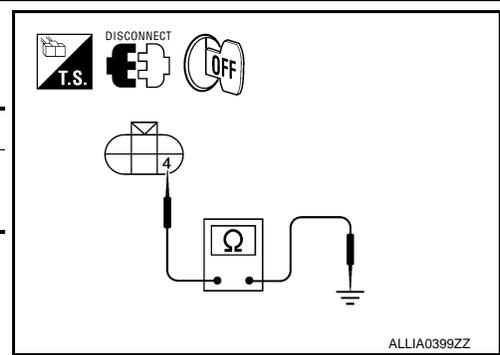

2. Check continuity between the rear combination lamp harness connectors and ground.

Connector		Terminal	—	Continuity
LH	C13	1	Ground	Yes
RH	C14			

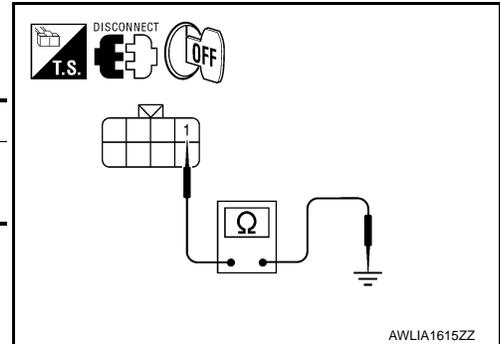


3. Check continuity between the license plate lamp harness connector and ground.

Connector		Terminal	—	Continuity
C12		2	Ground	Yes

Does continuity exist?

- YES >> Inspect the parking lamp bulb.
 NO >> Repair the harness.

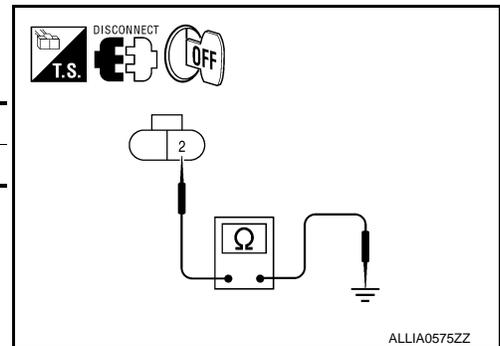

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

EXL

TURN SIGNAL LAMP CIRCUIT

< COMPONENT DIAGNOSIS >

TURN SIGNAL LAMP CIRCUIT

Description

INFOID:000000005387287

The BCM monitors inputs from the combination switch (lighting and turn signal switch) to determine when to activate the turn signals. The BCM outputs voltage direction to the left and right turn signals during turn signal operation or both during hazard warning operation. The BCM sends a turn signal indicator request to the combination meter via the CAN communication lines.

The BCM performs the fast flasher operation (fail-safe) if any bulb or harness of the turn signal lamp circuit is open.

NOTE:

Turn signal lamp blinks at normal speed when using the hazard warning lamp.

Component Function Check

INFOID:000000005387288

1. CHECK TURN SIGNAL LAMP

CONSULT-III

1. Select "FLASHER" of BCM (FLASHER) active test item.
2. With operating the test items, check that the turn signal lamp blinks.

LH : Turn signal lamp LH blinking

RH : Turn signal lamp RH blinking

OFF : The turn signal lamp OFF

Does the turn signal lamp blink?

YES >> Turn signal lamp circuit is normal.

NO >> Refer to [EXL-50, "Diagnosis Procedure - Without Daytime Light System"](#), [EXL-52, "Diagnosis Procedure - With Daytime Light System"](#).

Diagnosis Procedure - Without Daytime Light System

INFOID:000000005387289

Regarding Wiring Diagram information, refer to [EXL-78, "Wiring Diagram"](#).

1. CHECK TURN SIGNAL LAMP BULB

Check the applicable lamp bulb to be sure the proper bulb standard is in use and the bulb is not open.

Is the bulb OK?


YES >> GO TO 2.

NO >> Replace the bulb.

2. CHECK TURN SIGNAL LAMP OUTPUT VOLTAGE

1. Turn the ignition switch OFF.
2. Disconnect the front combination lamp connector or the rear combination lamp connector.
3. Turn the ignition switch ON.
4. With turn signal switch operating, check the voltage between the BCM harness connector M20 and ground.


(+)		(-)	Voltage
Connector	Terminal		

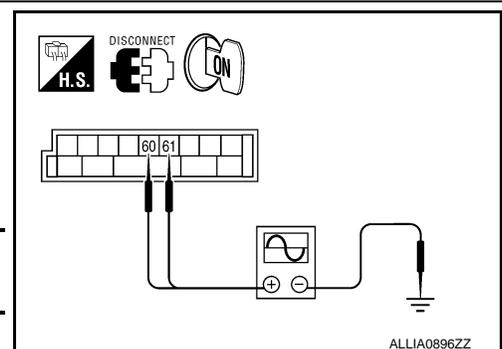

TURN SIGNAL LAMP CIRCUIT

< COMPONENT DIAGNOSIS >

M20	LH	60	Ground
	RH	61	

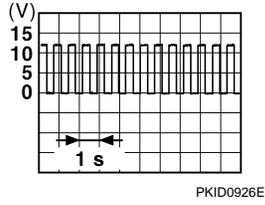

Is voltage reading as specified?


YES >> GO TO 3.

NO >> Replace BCM. Refer to [BCS-53. "Removal and Installation"](#).

3. CHECK TURN SIGNAL LAMP CIRCUIT FOR OPEN


1. Turn the ignition switch OFF.
2. Disconnect BCM connector M20.
3. Check continuity between the BCM harness connector M20 and the front combination lamps.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
Front LH	M20	60	E11	Yes
Front RH		61	E107	

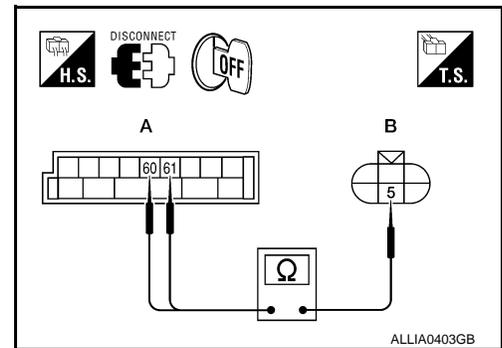


4. Check continuity between the BCM harness connector M20 and the rear combination lamp connectors.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
Rear LH	M20	60	C13	Yes
Rear RH		61	C14	

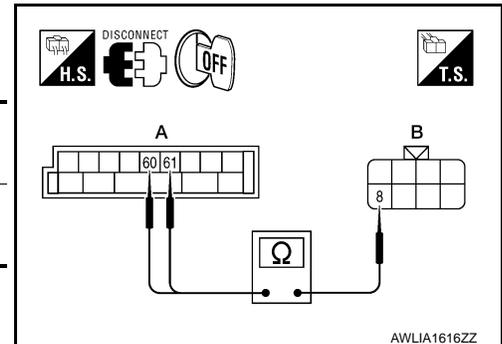

5. Check continuity between the BCM harness connector M20 and the door mirror connectors (if equipped with turn signals in the mirrors).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
Door mirror LH	M20	60	D4	Yes
Door mirror RH		61	D107	

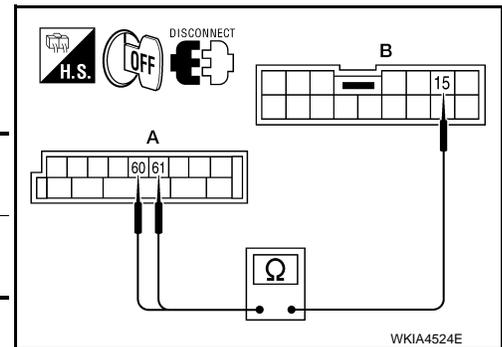

Are continuity test results as specified?

YES >> GO TO 4.

NO >> Repair the harnesses or connectors.

4. CHECK TURN SIGNAL LAMP SHORT CIRCUIT

TURN SIGNAL LAMP CIRCUIT


< COMPONENT DIAGNOSIS >

Check continuity between the BCM harness connector M20 and ground.

Connector		Terminal	—	Continuity
LH	M20	60	Ground	No
RH		61		

Does continuity exist?


- YES >> Repair the harnesses or connectors.
 NO >> GO TO 5.

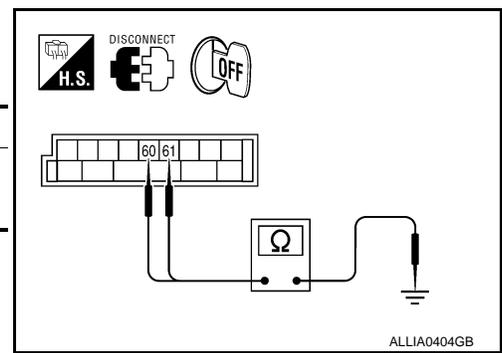

5. CHECK TURN SIGNAL LAMP GROUND CIRCUIT


1. Check continuity between the front combination lamp harness connectors and ground.

Connector		Terminal	—	Continuity
Front LH	E11	4	Ground	Yes
Front RH	E107			

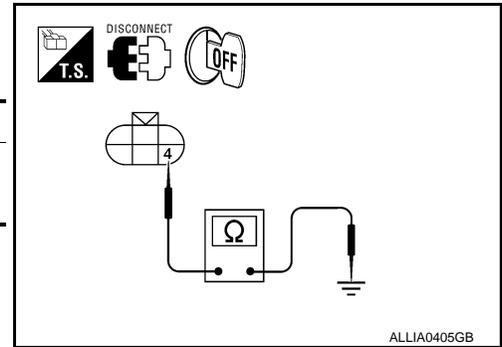

2. Check continuity between the rear combination lamp harness connectors and ground.

Connector		Terminal	—	Continuity
Rear LH	C13	1	Ground	Yes
Rear RH	C14			

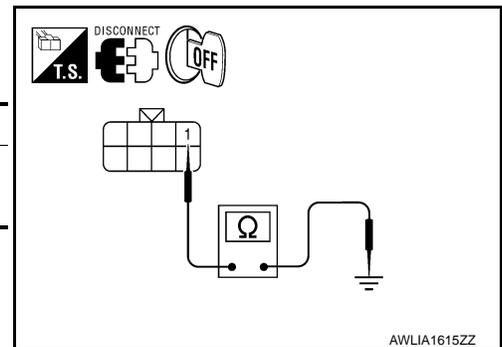


3. Check continuity between the door mirrors and ground (if equipped with turn signals in the mirrors).

Connector		Terminal	—	Continuity
Door mirror RH	D107	11	Ground	Yes
Door mirror LH	D4			

Are continuity test results as specified?

- YES >> Replace the malfunctioning lamp.
 NO >> Repair the harnesses or connectors.

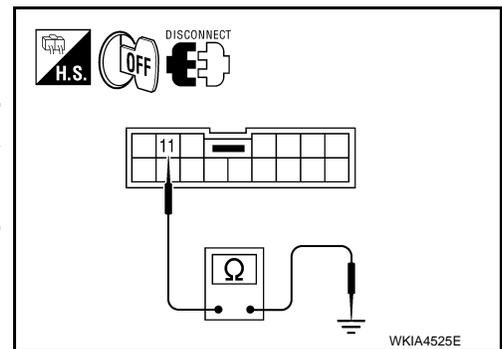

Diagnosis Procedure - With Daytime Light System

INFOID:000000005387290

Regarding Wiring Diagram information, refer to [EXL-68, "Wiring Diagram"](#).

1. CHECK TURN SIGNAL LAMP BULB

Check the applicable lamp bulb to be sure the proper bulb standard is in use and the bulb is not open.

Is the bulb OK?


TURN SIGNAL LAMP CIRCUIT

< COMPONENT DIAGNOSIS >

- YES >> GO TO 2.
 NO >> Replace the bulb.

2. CHECK TURN SIGNAL LAMP OUTPUT VOLTAGE

1. Turn the ignition switch OFF.
2. Disconnect the front combination lamp connector or the rear combination lamp connector.
3. Turn the ignition switch ON.
4. With turn signal switch operating, check the voltage between the BCM harness connector M20 and ground.

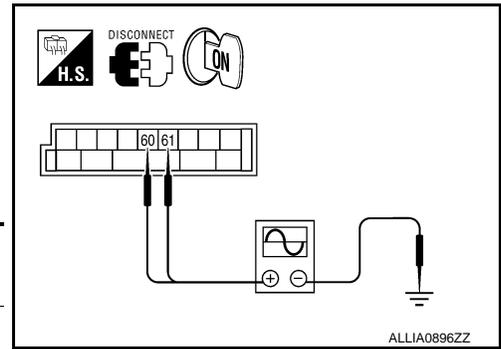

(+)		(-)	Voltage
Connector	Terminal		
M20	LH	60	Ground
	RH	61	

PKID0926E


Is voltage reading as specified?

- YES >> GO TO 3.
 NO >> Replace BCM. Refer to [BCS-53. "Removal and Installation"](#).

3. CHECK TURN SIGNAL LAMP CIRCUIT FOR OPEN


1. Turn the ignition switch OFF.
2. Disconnect BCM connector M20.
3. Check continuity between the BCM harness connector M20 and the front combination lamps.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
Front LH	M20	60	E6	Yes
Front RH		61	E107	

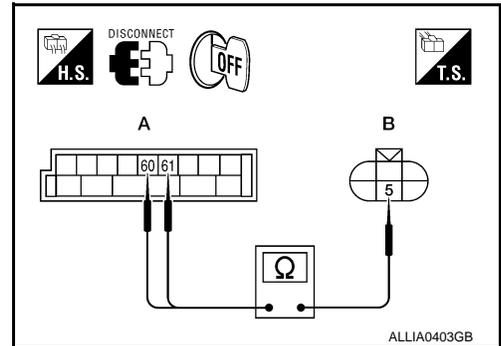

4. Check continuity between the BCM harness connector M20 and the rear combination lamp connectors.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
Rear LH	M20	60	C13	Yes
Rear RH		61	C14	

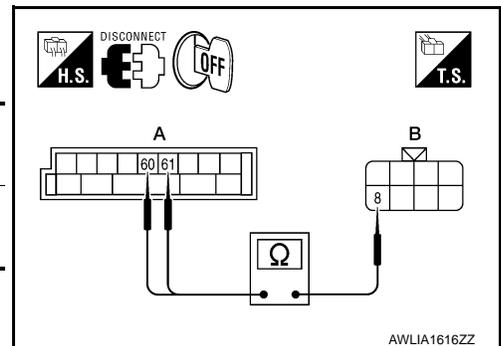

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

TURN SIGNAL LAMP CIRCUIT

< COMPONENT DIAGNOSIS >

5. Check continuity between the BCM harness connector M20 and the door mirror connectors (if equipped with turn signals in the mirrors).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
Door mirror LH	M20	60	D4	Yes
Door mirror RH		61	D107	

Are continuity test results as specified?

YES >> GO TO 4.

NO >> Repair the harnesses or connectors.

4. CHECK TURN SIGNAL LAMP SHORT CIRCUIT

Check continuity between the BCM harness connector M20 and ground.

Connector	Terminal	—	Continuity
LH	M20	60	No
RH		61	

Does continuity exist?

YES >> Repair the harnesses or connectors.

NO >> GO TO 5.





5. CHECK TURN SIGNAL LAMP GROUND CIRCUIT

1. Check continuity between the front combination lamp harness connectors and ground.

Connector	Terminal	—	Continuity
Front LH	E6	4	Yes
Front RH			

2. Check continuity between the rear combination lamp harness connectors and ground.

Connector	Terminal	—	Continuity
Rear LH	C13	1	Yes
Rear RH			

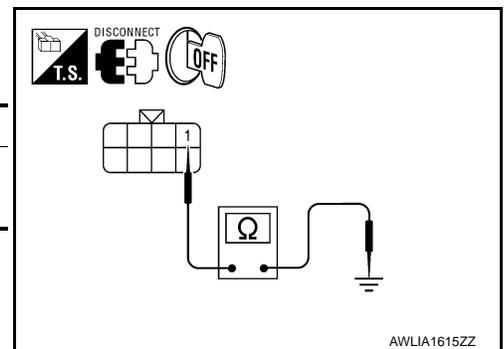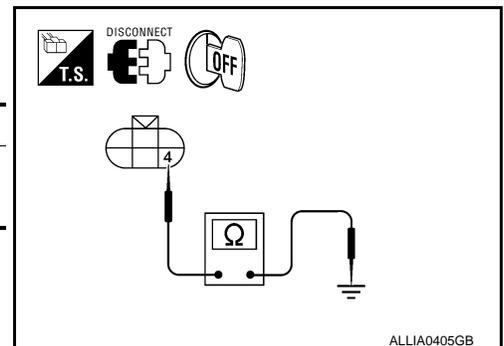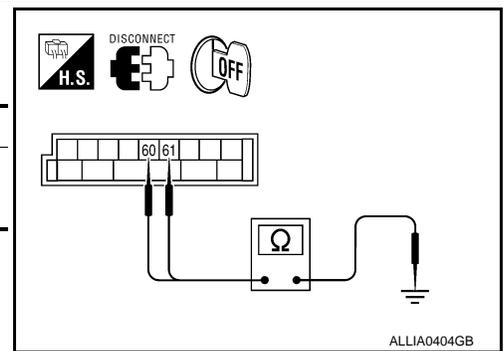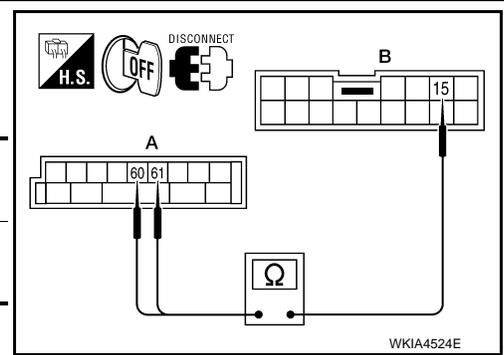

TURN SIGNAL LAMP CIRCUIT


< COMPONENT DIAGNOSIS >

3. Check continuity between the door mirrors and ground (if equipped with turn signals in the mirrors).

Connector		Terminal	—	Continuity
Door mirror RH	D107	11	Ground	Yes
Door mirror LH	D4			

Are continuity test results as specified?

- YES >> Replace the malfunctioning lamp.
 NO >> Repair the harnesses or connectors.

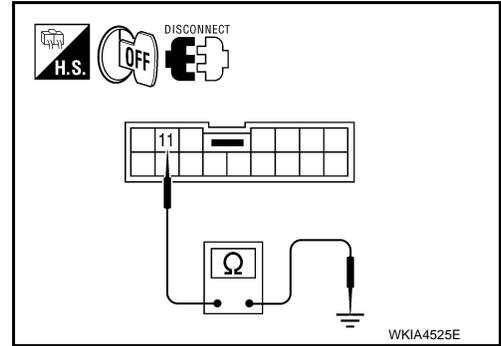

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

OPTICAL SENSOR

< COMPONENT DIAGNOSIS >

OPTICAL SENSOR

Description

INFOID:000000005387291

The optical sensor converts the outside brightness (lux) to voltage and transmits the optical sensor signal to the BCM.

Component Function Check

INFOID:000000005387292

1.CHECK OPTICAL SENSOR SIGNAL BY CONSULT-III

CONSULT-III

1. Turn the ignition switch ON.
2. Select "OPTICAL SENSOR" of BCM (HEAD LAMP) DATA MONITOR item.
3. Turn the lighting switch to AUTO.
4. With the optical sensor illuminating, check the monitor status.

Monitor item	Condition	Voltage
OPTICAL SENSOR	When illuminating	3.1V or more *
	When shutting off light	0.6V or less

*: Illuminates the optical sensor. The value may be less than the standard value if brightness is weak.

Is the item status normal?

- YES >> Optical sensor is normal.
 NO >> Refer to [EXL-56. "Diagnosis Procedure"](#).

Diagnosis Procedure


INFOID:000000005387293

Regarding Wiring Diagram information, refer to [EXL-62. "Wiring Diagram"](#).

1.CHECK OPTICAL SENSOR GROUND CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect BCM connector M18 and optical sensor connector M302.
3. Check continuity between BCM harness connector M18 (A) terminal 18 and optical sensor harness connector M302 (B) terminal 3.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M18	18	M302	3	Yes

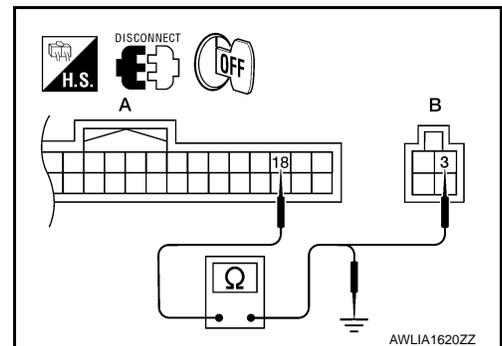

4. Check continuity between BCM harness connector M18 (A) terminal 18 and ground.

A		—	Continuity
Connector	Terminal		
M18	18	Ground	No

Are continuity test results as specified?

- YES >> GO TO 2.
 NO >> Repair harness or connector.

2.CHECK OPTICAL SENSOR SIGNAL CIRCUIT

OPTICAL SENSOR

< COMPONENT DIAGNOSIS >

1. Check continuity between BCM harness connector M20 (A) terminal 58 and optical sensor harness connector M302 (B) terminal 4.


A		B		Continuity
Connector	Terminal	Connector	Terminal	
M20	58	M302	4	Yes

2. Check continuity between BCM harness connector M20 (A) terminal 58 and ground.

A		—	Continuity
Connector	Terminal		
M20	58	Ground	No

Are the continuity test results as specified?

- YES >> Replace the optical sensor. Refer to [EXL-143, "Removal and Installation"](#).
 NO >> Repair harness or connector.

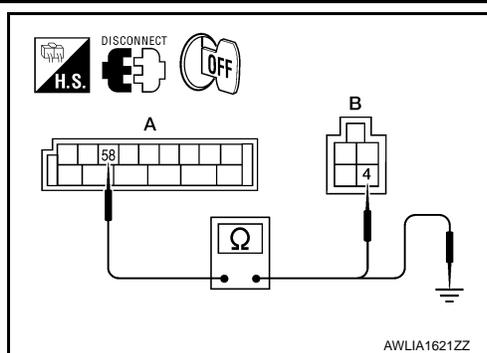

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P


HEADLAMP

< COMPONENT DIAGNOSIS >

HEADLAMP

Wiring Diagram

INFOID:000000005387294

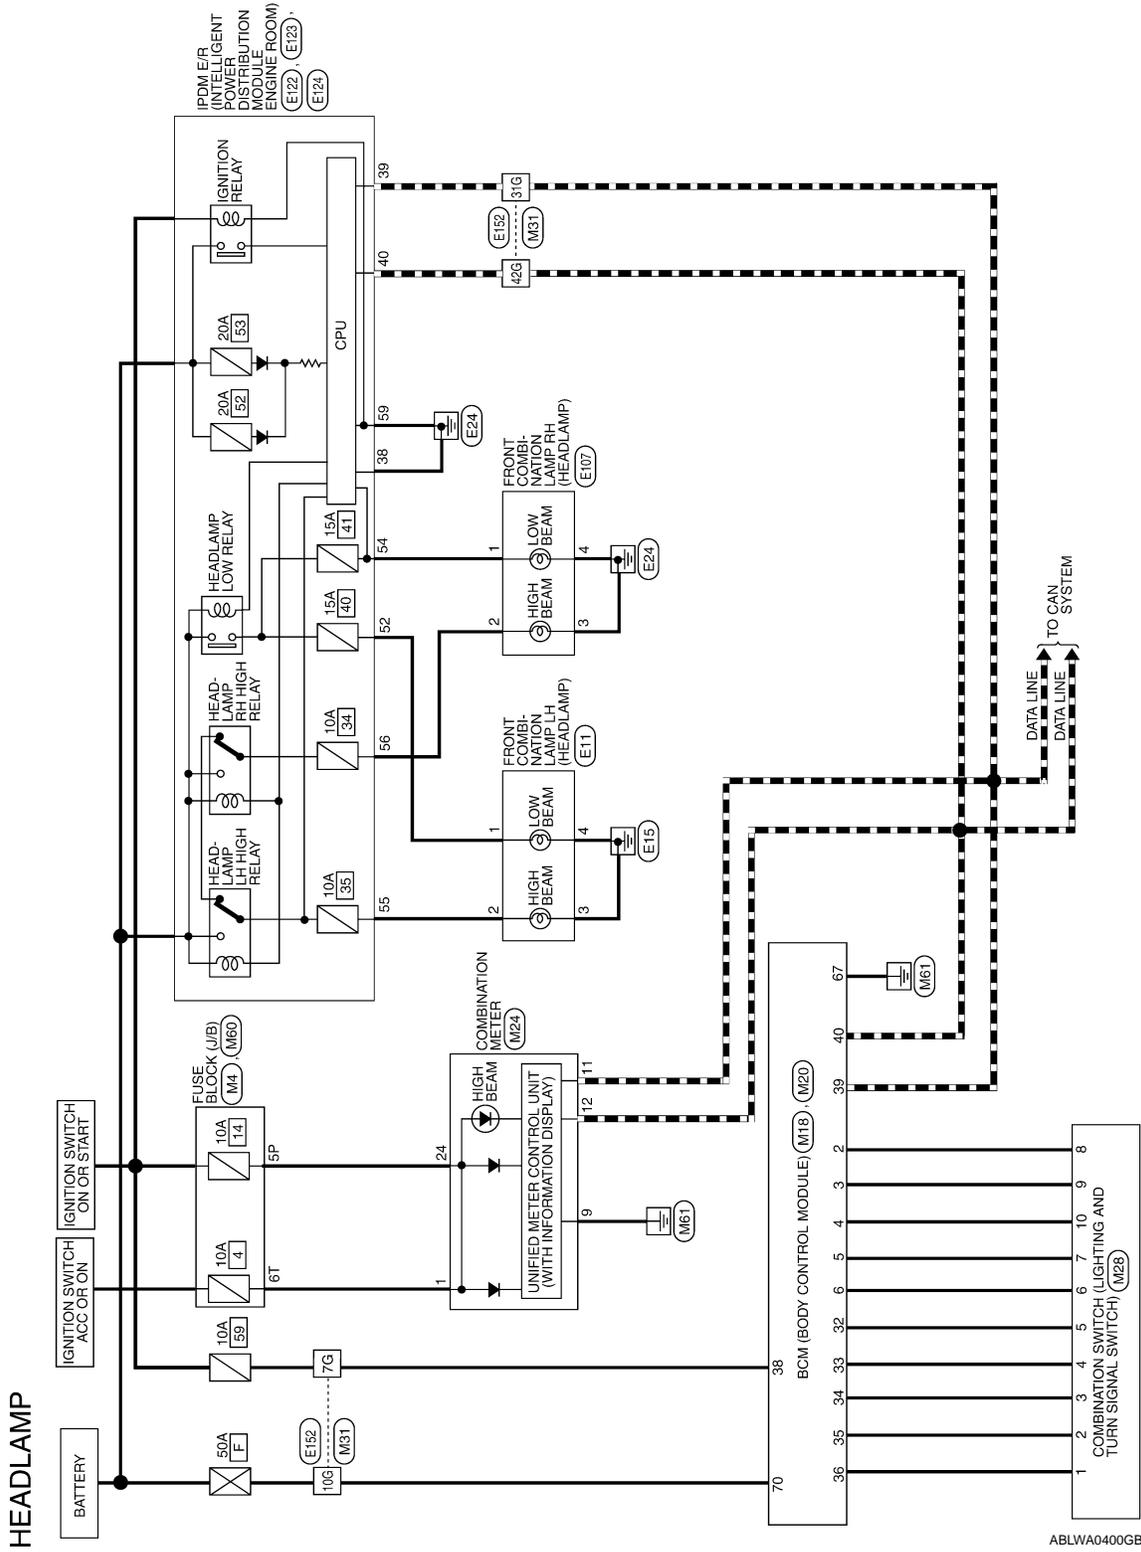

ABLWA0400GB

HEADLAMP

< COMPONENT DIAGNOSIS >


HEADLAMP CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
5P	O/L	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	SB	INPUT 5
3	G/Y	INPUT 4
4	Y	INPUT 3
5	G/B	INPUT 2
6	V	INPUT 1
32	R/G	OUTPUT 5
33	R/Y	OUTPUT 4
34	L	OUTPUT 3
35	O/B	OUTPUT 2
36	R/W	OUTPUT 1
38	W/L	IGN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
67	B	GND (POWER)
70	W/B	BAT (F/L)

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE



Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R/W	INPUT 1
2	O/B	INPUT 2
3	L	INPUT 3
4	R/Y	INPUT 4
5	R/G	INPUT 5
6	V	OUTPUT 1
7	G/B	OUTPUT 2
8	SB	OUTPUT 5
9	G/Y	OUTPUT 4
10	Y	OUTPUT 3

ABLIA1338GB


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

HEADLAMP

< COMPONENT DIAGNOSIS >


Connector No.	M60
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	6T	Color of Wire	O	Signal Name	-
--------------	----	---------------	---	-------------	---

Terminal No.	Color of Wire	Signal Name
7G	W/L	-
10G	W/B	-
31G	L	-
42G	P	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

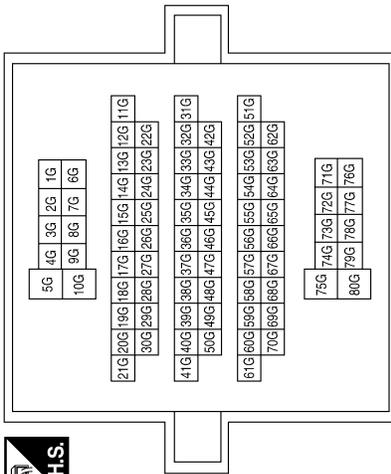


Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE




Terminal No.	38	Color of Wire	B	Signal Name	GND (SIGNAL)
39	L	L	CAN-H		
40	P	P	CAN-L		

Connector No.	E107
Connector Name	FRONT COMBINATION LAMP RH
Connector Color	BLACK



Terminal No.	1	Color of Wire	R/Y	Signal Name	-
2	L/W	L/W	-		
3	B	B	-		
4	B	B	-		

Connector No.	E11
Connector Name	FRONT COMBINATION LAMP LH (WITHOUT DAYTIME LIGHT SYSTEM)
Connector Color	BLACK






Terminal No.	1	Color of Wire	L	Signal Name	-
2	G	G	-		
3	B	B	-		
4	B	B	-		

ABLIA1437GB

HEADLAMP

< COMPONENT DIAGNOSIS >

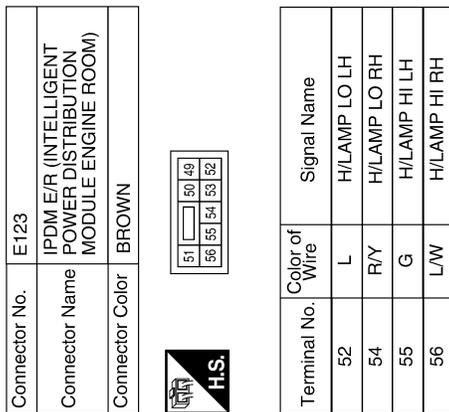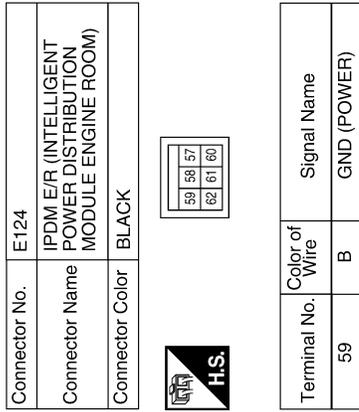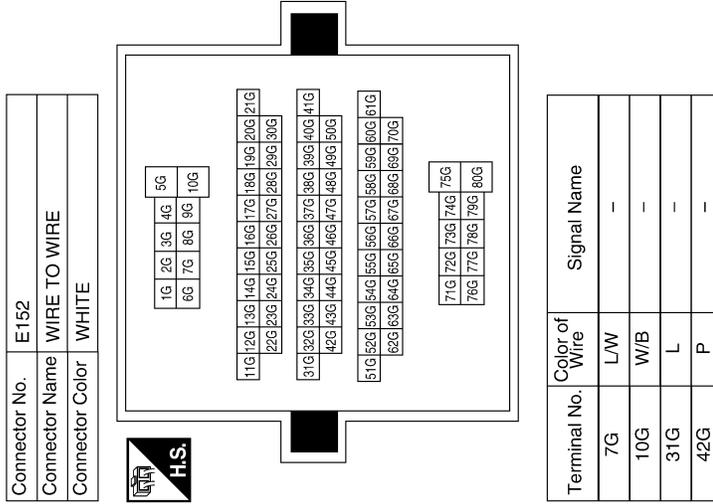

ABLIA0117GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P


AUTO LIGHT SYSTEM

< COMPONENT DIAGNOSIS >

AUTO LIGHT SYSTEM

Wiring Diagram

INFOID:000000005387295

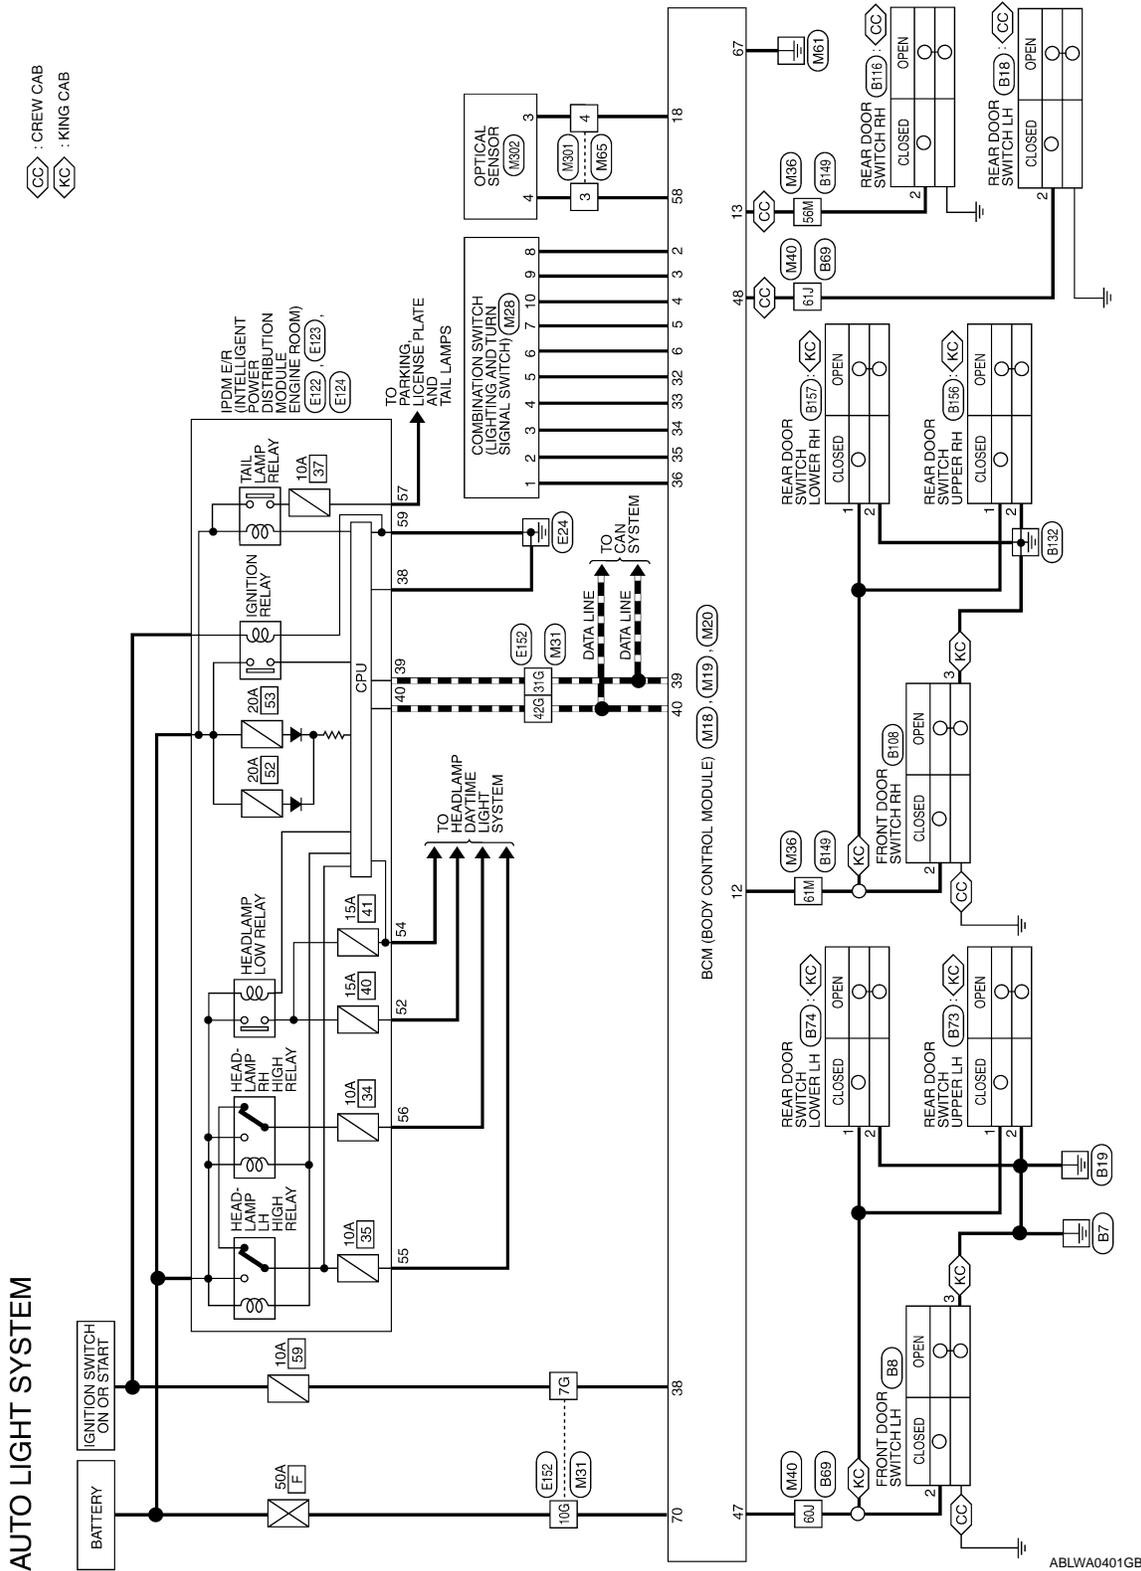


AUTO LIGHT SYSTEM

< COMPONENT DIAGNOSIS >


AUTO LIGHT SYSTEM CONNECTORS

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	SB	INPUT 5
3	G/Y	INPUT 4
4	Y	INPUT 3
5	G/B	INPUT 2
6	V	INPUT 1
12	R/L	DOOR SW (AS)
13	GR	DOOR SW (RR)
18	P	KEYLESS AND AUTO LIGHT SENSOR GND
32	R/G	OUTPUT 5
33	R/Y	OUTPUT 4
34	L	OUTPUT 3
35	O/B	OUTPUT 2
36	R/W	OUTPUT 1
38	W/L	IGN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
47	SB	DOOR SW (DR)
48	R/Y	DOOR SW (RL)

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
58	W/R	AUTO LIGHT SENSOR INPUT 2
67	B	GND (POWER)
70	W/B	BAT (F/L)

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	R/W	INPUT 1
2	O/B	INPUT 2
3	L	INPUT 3
4	R/Y	INPUT 4
5	R/G	INPUT 5
6	V	OUTPUT 1
7	G/B	OUTPUT 2
8	SB	OUTPUT 5
9	G/Y	OUTPUT 4
10	Y	OUTPUT 3

ABLIA1339GB

A B C D E F G H I J K EXL M N O P

AUTO LIGHT SYSTEM

< COMPONENT DIAGNOSIS >

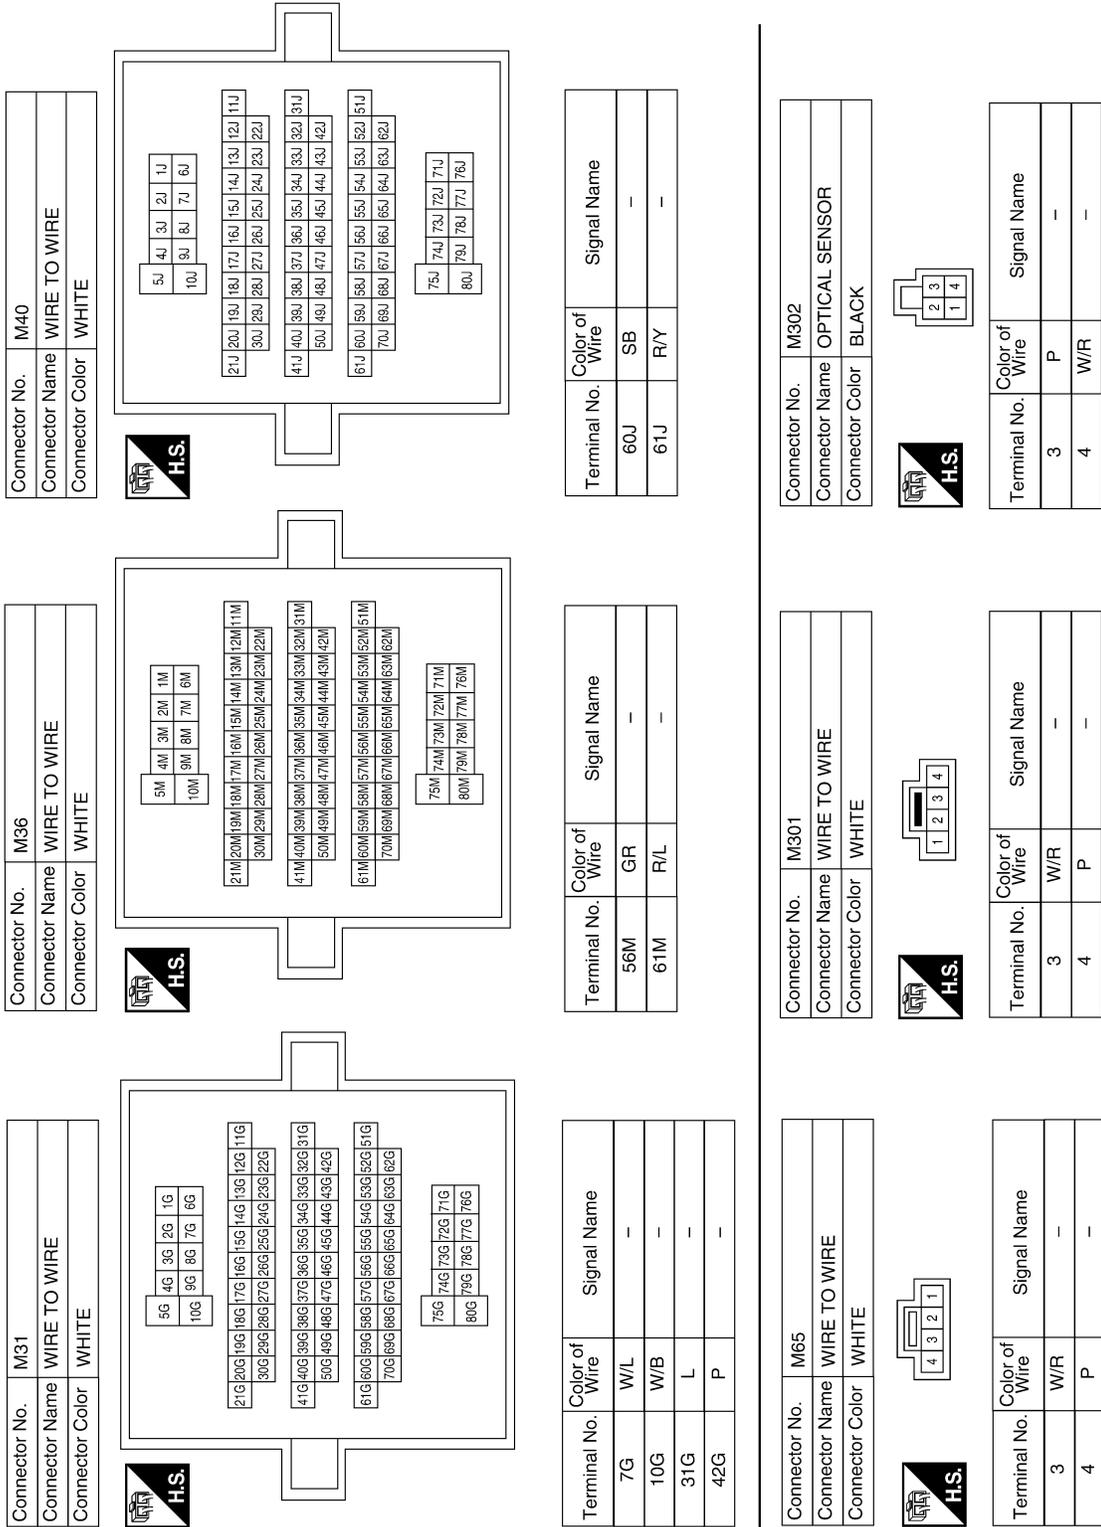

AUTO LIGHT SYSTEM

< COMPONENT DIAGNOSIS >

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



59	58	57
52	61	60

Terminal No.	Color of Wire	Signal Name
57	R/L	TAIL LAMP
59	B	GND (POWER)

Connector No.	E123
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN



51	50	49
56	55	54
53	52	

Terminal No.	Color of Wire	Signal Name
52	L	H/LAMP LO LH
54	R/Y	H/LAMP LO RH
55	G	H/LAMP HI LH
56	L/W	H/LAMP HI RH

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



42	41	40	39	38	37
48	47	46	45	44	43

Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L

Connector No.	B8
Connector Name	FRONT DOOR SWITCH LH
Connector Color	WHITE




1	2	3
---	---	---

Terminal No.	Color of Wire	Signal Name
2	SB	-
3	B	-

Terminal No.	Color of Wire	Signal Name
7G	L/W	-
10G	W/B	-
31G	L	-
42G	P	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

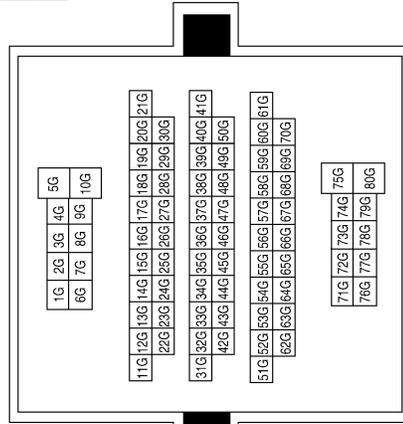

AALIA0057GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


EXL

AUTO LIGHT SYSTEM


< COMPONENT DIAGNOSIS >

Terminal No.	Color of Wire	Signal Name
60J	SB	-
61J	R/Y	-

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

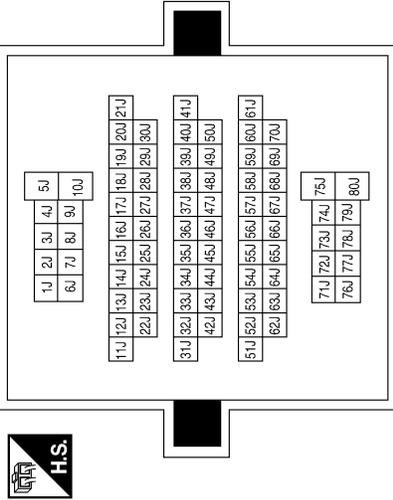


Connector No.	B18
Connector Name	REAR DOOR SWITCH LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	R/Y	-

Connector No.	B108
Connector Name	FRONT DOOR SWITCH RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	R/L	-
3	B	-

Connector No.	B74
Connector Name	REAR DOOR SWITCH LOWER LH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	SB	-
2	B	-

Connector No.	B73
Connector Name	REAR DOOR SWITCH UPPER LH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	SB	-
2	B	-


AALIA0058GB

AUTO LIGHT SYSTEM


< COMPONENT DIAGNOSIS >

Terminal No.	Color of Wire	Signal Name
56M	GR	-
61M	R/L	-

Connector No.	B149
Connector Name	WIRE TO WIRE
Connector Color	WHITE

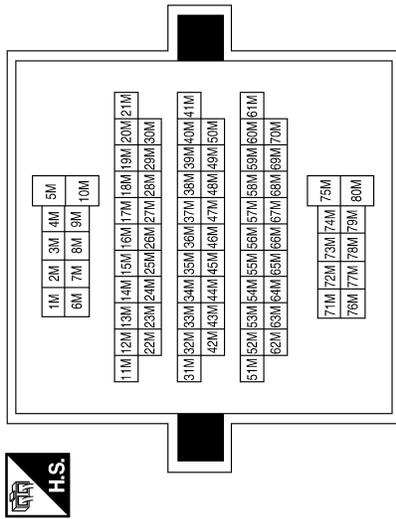

Connector No.	B116
Connector Name	REAR DOOR SWITCH RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	GR	-

Connector No.	B157
Connector Name	REAR DOOR SWITCH LOWER RH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	R/L	-
2	B	-

Connector No.	B156
Connector Name	REAR DOOR SWITCH UPPER RH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	R/L	-
2	B	-

AALIA0059GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P


DAYTIME LIGHT SYSTEM

< COMPONENT DIAGNOSIS >

DAYTIME LIGHT SYSTEM

Wiring Diagram

INFOID:000000005387296

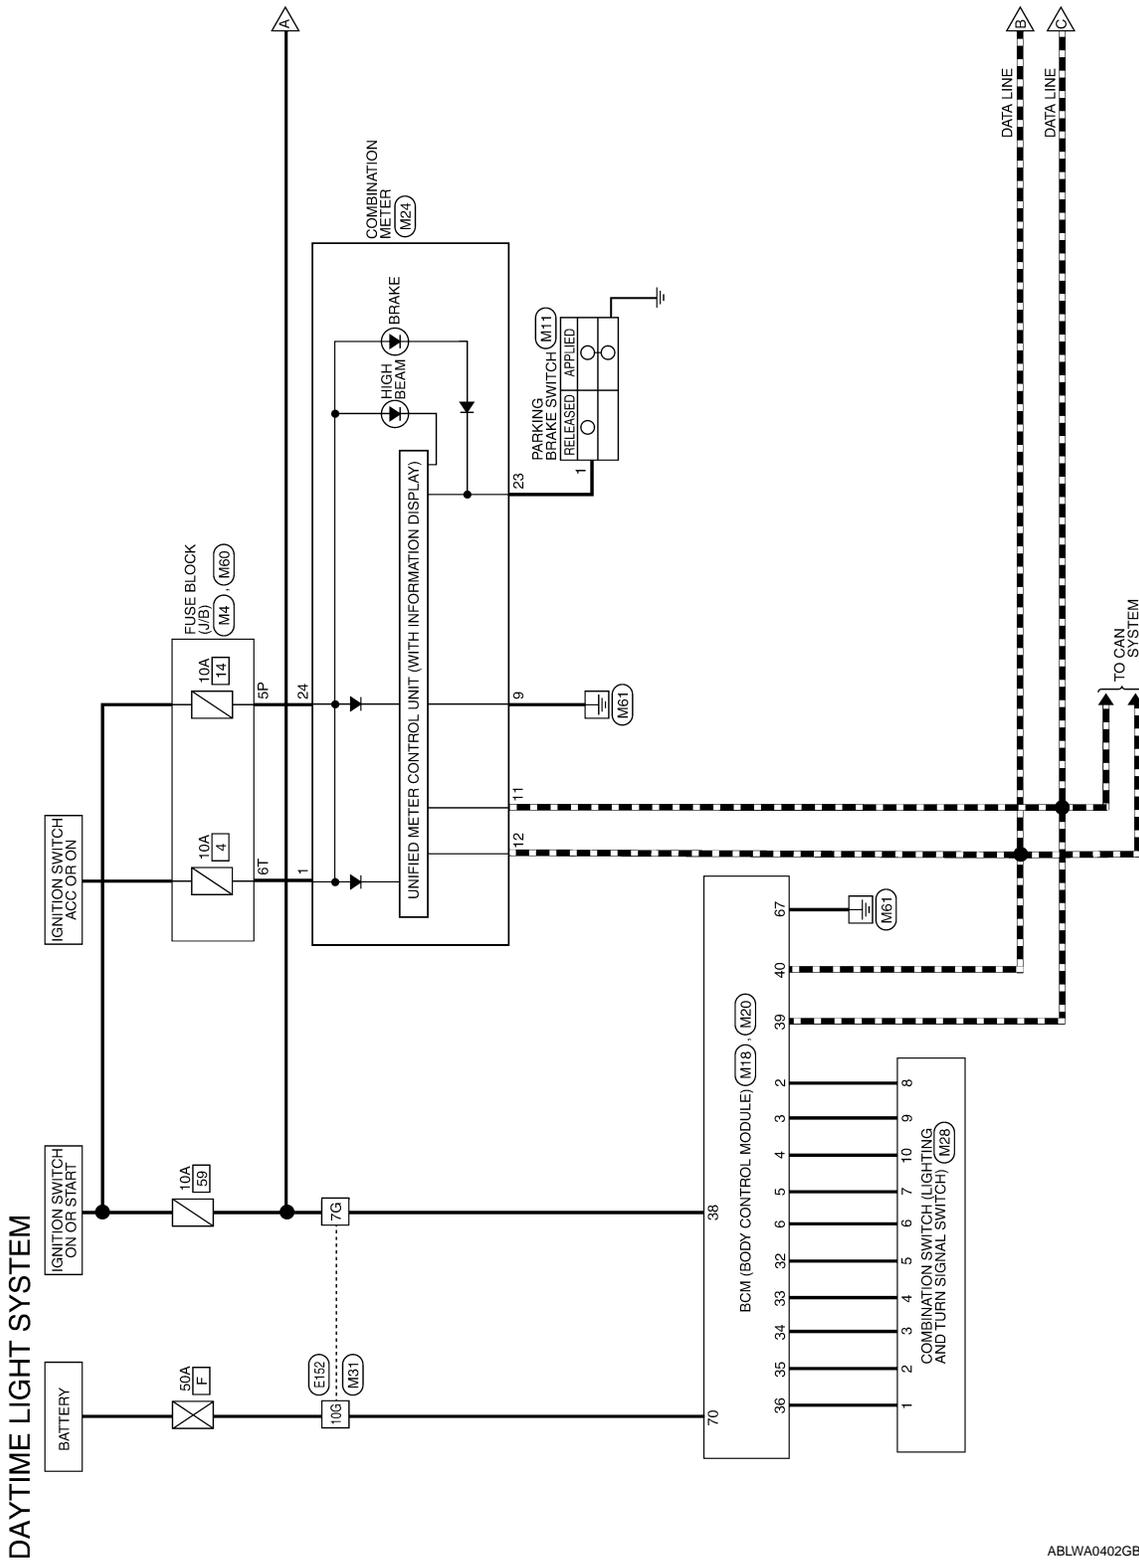

ABLWA0402GB

DAYTIME LIGHT SYSTEM

< COMPONENT DIAGNOSIS >

DAYTIME LIGHT SYSTEM CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



7P	6P	5P	4P	3P	2P	1P		
16P	15P	14P	13P	12P	11P	10P	9P	8P



1

Connector No.	M11
Connector Name	PARKING BRAKE SWITCH
Connector Color	BLACK

Terminal No.	Color of Wire	Signal Name
5P	O/L	-

Terminal No.	Color of Wire	Signal Name
1	G	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name
2	SB	INPUT 5
3	G/Y	INPUT 4
4	Y	INPUT 3
5	G/B	INPUT 2
6	V	INPUT 1
32	R/G	OUTPUT 5
33	R/Y	OUTPUT 4
34	L	OUTPUT 3
35	O/B	OUTPUT 2
36	R/W	OUTPUT 1
38	W/L	IGN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK




56	57	58	59	60	61	62	63	64
65	66	67	68	69	70			

Terminal No.	Color of Wire	Signal Name
67	B	GND (POWER)
70	W/B	BAT (F/L)

DAYTIME LIGHT SYSTEM


< COMPONENT DIAGNOSIS >

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R/W	INPUT 1
2	O/B	INPUT 2
3	L	INPUT 3
4	R/Y	INPUT 4
5	R/G	INPUT 5
6	V	OUTPUT 1
7	G/B	OUTPUT 2
8	SB	OUTPUT 5
9	G/Y	OUTPUT 4
10	Y	OUTPUT 3


Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE

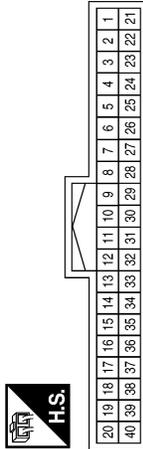

Terminal No.	Color of Wire	Signal Name
1	O	ACCESSORY
9	B	GND
11	L	CAN-H
12	P	CAN-L
23	G	PARK BRAKE
24	O/L	RUN START

Terminal No.	Color of Wire	Signal Name
7G	W/L	-
10G	W/B	-
31G	L	-
42G	P	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

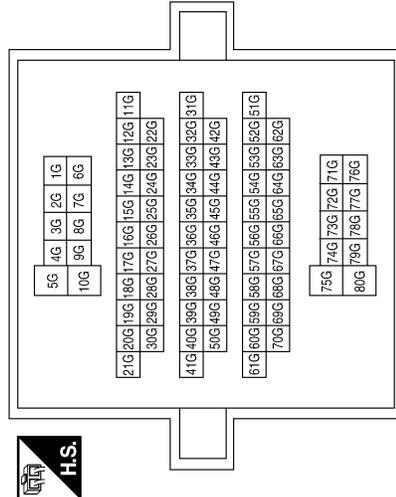

ABLIA1438GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

DAYTIME LIGHT SYSTEM


< COMPONENT DIAGNOSIS >

Connector No.	E103
Connector Name	DAYTIME LIGHT RELAY
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	BR	-
2	G	-
3	B	-
4	B	-
5	G	-

Connector No.	E6
Connector Name	FRONT COMBINATION LAMP LH (WITH DAYTIME LIGHT SYSTEM)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	L	-
2	G	-
3	B	-
4	Y/G	-

Connector No.	M60
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
6T	O	-

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L
44	BR	DTRL RLY CONT

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
10	G	DTRL RLY SUPPLY

Connector No.	E107
Connector Name	FRONT COMBINATION LAMP RH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	R/Y	-
2	Y	-
3	B	-
4	B	-

ABLIA1439GB

DAYTIME LIGHT SYSTEM


< COMPONENT DIAGNOSIS >

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
59	B	GND (POWER)


Connector No.	E123
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
52	L	H/LAMP LO LH
54	R/Y	H/LAMP LO RH
55	G	H/LAMP HI LH
56	Y	H/LAMP HI RH

Terminal No.	Color of Wire	Signal Name
7G	L/W	-
10G	W/B	-
31G	L	-
42G	P	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

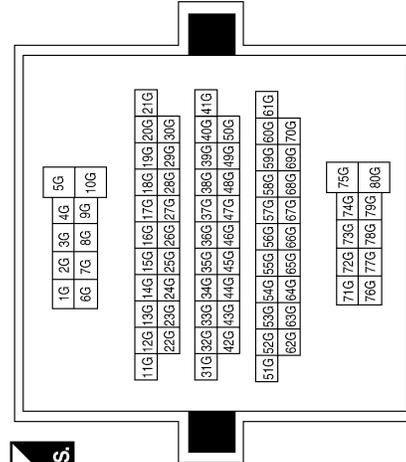

ABLIA1341GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

FRONT FOG LAMP SYSTEM


< COMPONENT DIAGNOSIS >

FRONT FOG LAMP SYSTEM

Wiring Diagram

INFOID:000000005387297

FRONT FOG LAMP

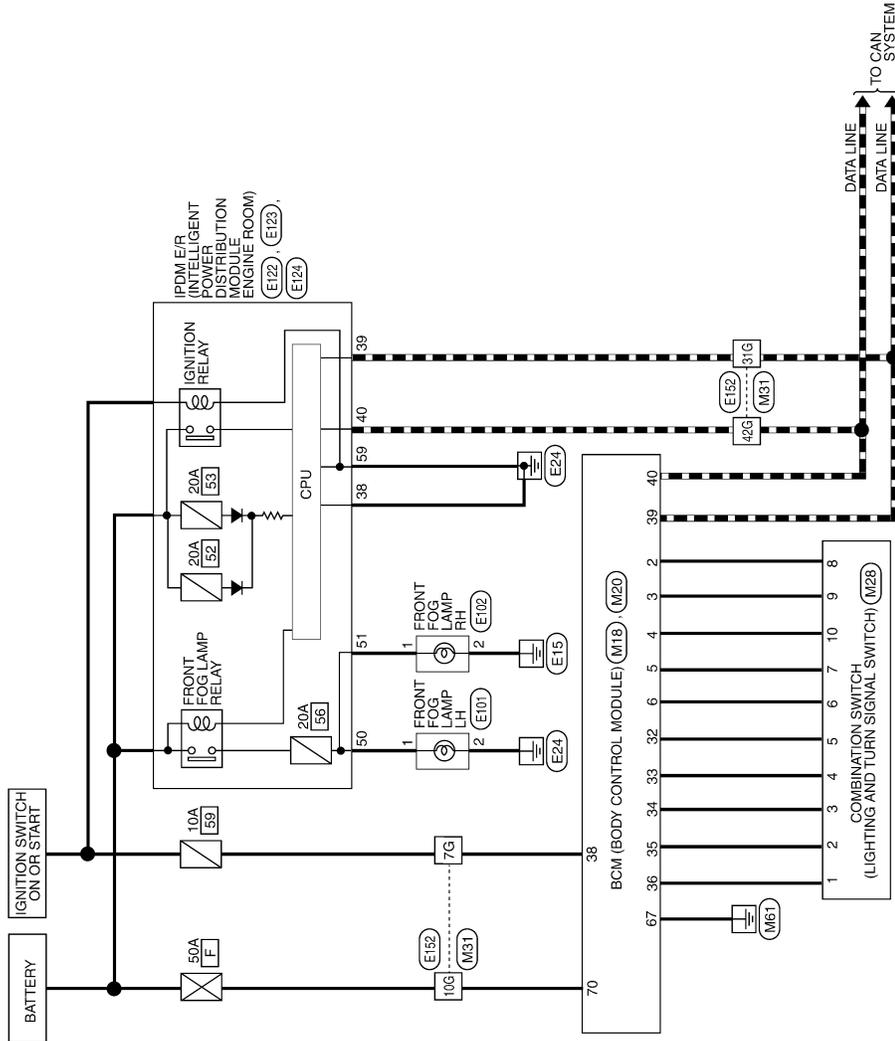


ABLWA0404GB

FRONT FOG LAMP SYSTEM

< COMPONENT DIAGNOSIS >


FRONT FOG LAMP CONNECTORS

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	SB	INPUT 5
3	G/Y	INPUT 4
4	Y	INPUT 3
5	G/B	INPUT 2
6	V	INPUT 1
32	R/G	OUTPUT 5
33	R/Y	OUTPUT 4
34	L	OUTPUT 3
35	O/B	OUTPUT 2
36	R/W	OUTPUT 1
38	W/L	IGN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
67	B	GND (POWER)
70	W/B	BAT (F/L)

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R/W	INPUT 1
2	O/B	INPUT 2
3	L	INPUT 3
4	R/Y	INPUT 4
5	R/G	INPUT 5
6	V	OUTPUT 1
7	G/B	OUTPUT 2
8	SB	OUTPUT 5
9	G/Y	OUTPUT 4
10	Y	OUTPUT 3

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

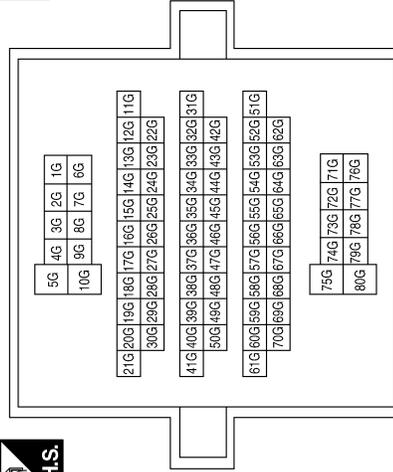

Terminal No.	Color of Wire	Signal Name
7G	W/L	-
10G	W/B	-
31G	L	-
42G	P	-


ABLIA1342GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

FRONT FOG LAMP SYSTEM

< COMPONENT DIAGNOSIS >

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L

Connector No.	E102
Connector Name	FRONT FOG LAMP RH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	W/R	-
2	B	-

Connector No.	E101
Connector Name	FRONT FOG LAMP LH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	W/R	-
2	B	-

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
59	B	GND (POWER)

Connector No.	E123
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
50	W/R	FR FOG LAMP LH
51	W/R	FR FOG LAMP RH

ABLIA1343GB

FRONT FOG LAMP SYSTEM

< COMPONENT DIAGNOSIS >

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

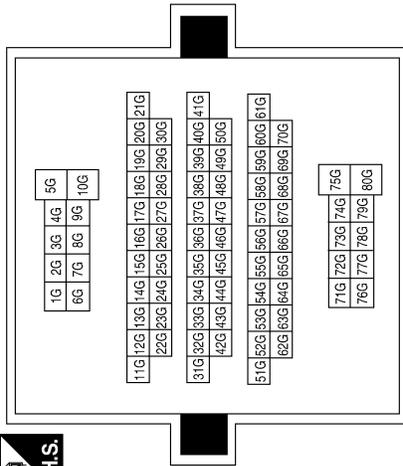

Terminal No.	Color of Wire	Signal Name
7G	L/W	-
10G	W/B	-
31G	L	-
42G	P	-

AALIA0065GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P


TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM

< COMPONENT DIAGNOSIS >

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM

Wiring Diagram

INFOID:000000005387298

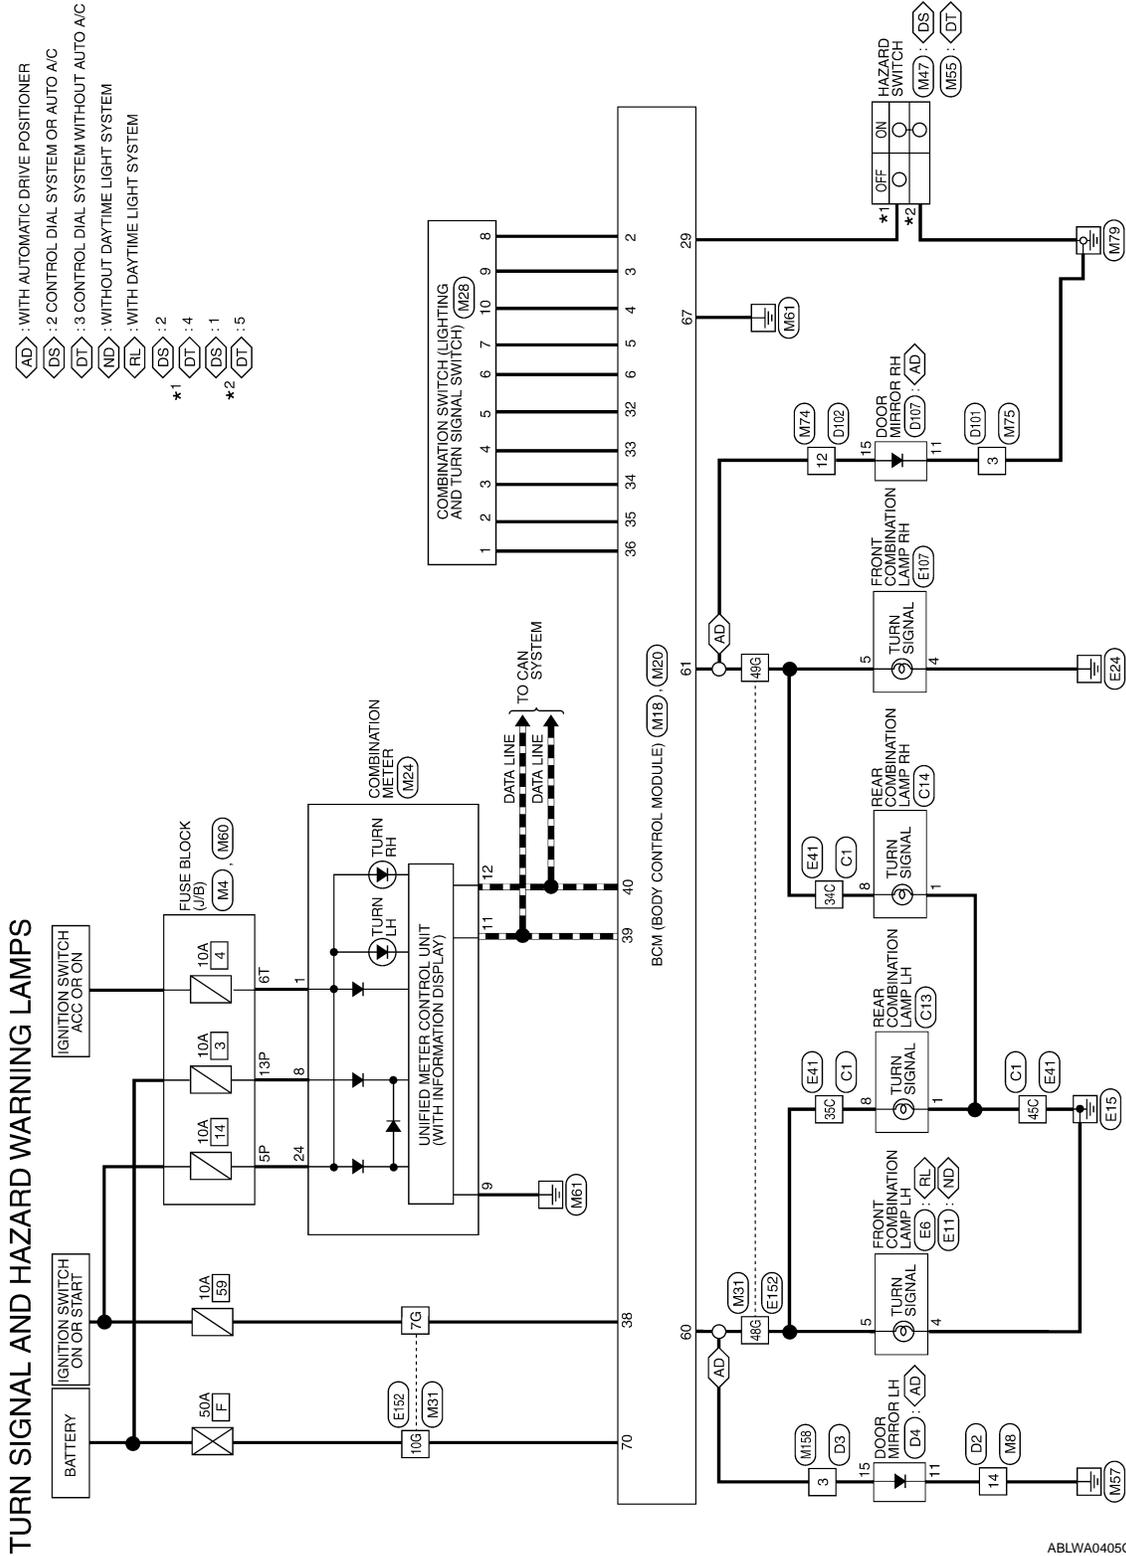

ABLWA0405GB

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM

< COMPONENT DIAGNOSIS >


TURN SIGNAL AND HAZARD WARNING LAMPS CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
5P	O/L	-
13P	P	-

Connector No.	M8
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
14	B	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	SB	INPUT 5
3	G/Y	INPUT 4
4	Y	INPUT 3
5	G/B	INPUT 2
6	V	INPUT 1
29	W/B	HAZARD SW
32	R/G	OUTPUT 5
33	R/Y	OUTPUT 4
34	L	OUTPUT 3
35	O/B	OUTPUT 2
36	R/W	OUTPUT 1
38	W/L	IGN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
60	G/B	FLASHER OUTPUT (LEFT)
61	G/Y	FLASHER OUTPUT (RIGHT)
67	B	GND (POWER)
70	W/B	BAT (F/L)


ABLIA1344GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM


< COMPONENT DIAGNOSIS >

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	O	ACCESSORY
8	P	BATTERY
9	B	GND (POWER)
11	L	CAN-H
12	P	CAN-L
24	O/L	RUN/START

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	R/W	INPUT 1
2	O/B	INPUT 2
3	L	INPUT 3
4	R/Y	INPUT 4
5	R/G	INPUT 5
6	V	OUTPUT 1
7	G/B	OUTPUT 2
8	SB	OUTPUT 5
9	G/Y	OUTPUT 4
10	Y	OUTPUT 3

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

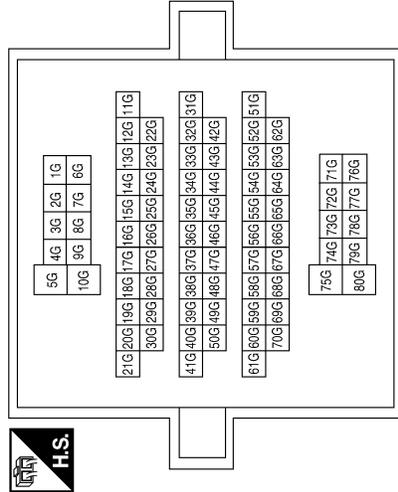


Terminal No.	Color of Wire	Signal Name
7G	W/L	-
10G	W/B	-
48G	G/B	-
49G	G/Y	-

Connector No.	M47
Connector Name	HAZARD SWITCH (WITH 2 CONTROL DIAL SYSTEM OR AUTO A/C)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B	-
2	W/B	-

Connector No.	M55
Connector Name	HAZARD SWITCH (WITH 3 CONTROL DIAL SYSTEM WITHOUT AUTO A/C)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
4	W/B	-
5	B	-

Connector No.	M60
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
6T	O	-

ABLIA1440GB

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM


< COMPONENT DIAGNOSIS >

Connector No.	M74
Connector Name	WIRE TO WIRE
Connector Color	BROWN




Terminal No.	12	Color of Wire	G/Y	Signal Name	-
--------------	----	---------------	-----	-------------	---

Connector No.	M75
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	3	Color of Wire	B	Signal Name	-
--------------	---	---------------	---	-------------	---

Connector No.	M158
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	3	Color of Wire	G/B	Signal Name	-
--------------	---	---------------	-----	-------------	---

Connector No.	E6
Connector Name	FRONT COMBINATION LAMP LH (WITH DAYTIME LIGHT SYSTEM)
Connector Color	BLACK




Terminal No.	4	Color of Wire	B	Signal Name	-
Terminal No.	5	Color of Wire	G/B	Signal Name	-

Connector No.	E11
Connector Name	FRONT COMBINATION LAMP LH (WITHOUT DAYTIME LIGHT SYSTEM)
Connector Color	BLACK



Terminal No.	4	Color of Wire	B	Signal Name	-
Terminal No.	5	Color of Wire	G/B	Signal Name	-

Connector No.	E41
Connector Name	WIRE TO WIRE
Connector Color	GRAY

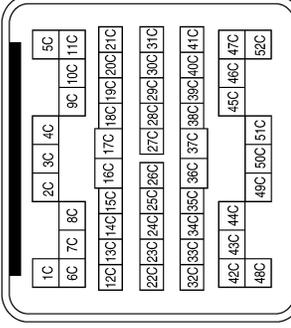

Terminal No.	34C	Color of Wire	G/Y	Signal Name	-
Terminal No.	35C	Color of Wire	G/B	Signal Name	-
Terminal No.	45C	Color of Wire	B	Signal Name	-

ABLIA0124GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM


< COMPONENT DIAGNOSIS >

Connector No.	E107
Connector Name	FRONT COMBINATION LAMP RH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
4	B	-
5	G/Y	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

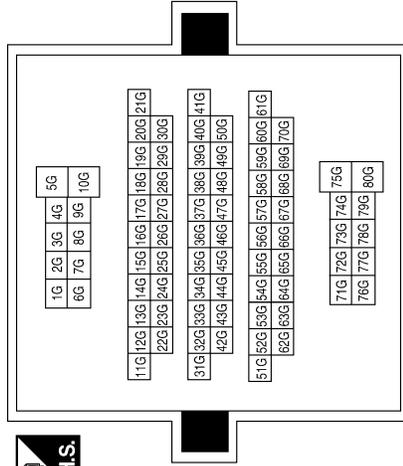


Terminal No.	Color of Wire	Signal Name
7G	L/W	-
10G	W/B	-
48G	G/B	-
49G	G/Y	-

Connector No.	C1
Connector Name	WIRE TO WIRE
Connector Color	GRAY

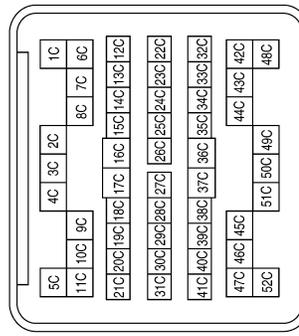


Terminal No.	Color of Wire	Signal Name
34C	G/Y	-
35C	G/B	-
45C	B	-

Connector No.	C13
Connector Name	REAR COMBINATION LAMP LH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	B	-
8	G/B	-

Connector No.	C14
Connector Name	REAR COMBINATION LAMP RH
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
1	B	-
8	G/Y	-

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM


< COMPONENT DIAGNOSIS >

Connector No.	D4
Connector Name	DOOR MIRROR LH (WITH AUTOMATIC DRIVE POSITIONER)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
11	B	-
15	G/B	-

Connector No.	D3
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
3	G/B	-

Connector No.	D2
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
14	B	-

Connector No.	D107
Connector Name	DOOR MIRROR RH (WITH AUTOMATIC DRIVE POSITIONER)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
11	B	-
15	G/Y	-

Connector No.	D102
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
12	G/Y	-

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	B	-

ABLIA1346GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P


PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM

< COMPONENT DIAGNOSIS >

PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM

Wiring Diagram

INFOID:000000005387299

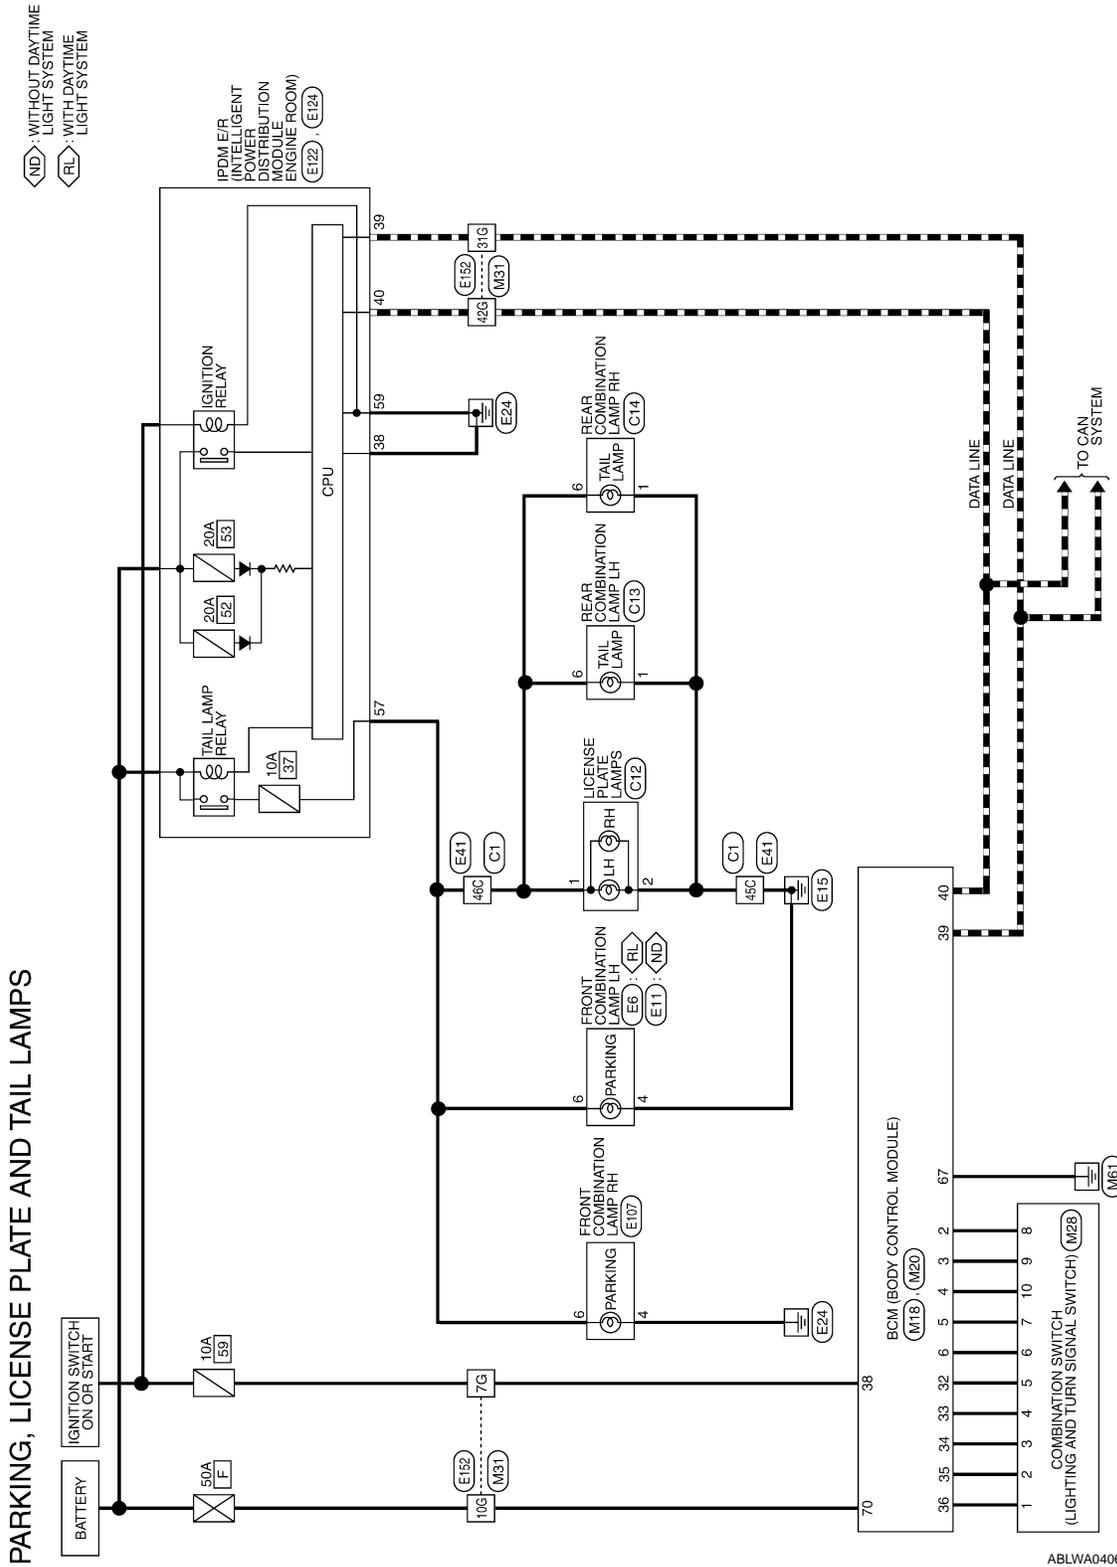

PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM

< COMPONENT DIAGNOSIS >

PARKING, LICENSE PLATE AND TAIL LAMPS CONNECTORS

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name
2	SB	INPUT 5
3	G/Y	INPUT 4
4	Y	INPUT 3
5	G/B	INPUT 2
6	V	INPUT 1
32	R/G	OUTPUT 5
33	R/Y	OUTPUT 4
34	L	OUTPUT 3
35	O/B	OUTPUT 2
36	R/W	OUTPUT 1
38	W/L	IGN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



56	57	58	59	60	61	62	63	64
65	66	67	68	69	70			


Terminal No.	Color of Wire	Signal Name
67	B	GND (POWER)
70	W/B	BAT (F/L)

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE



12	13	10	9	8	7		
14	11	1	2	3	4	5	6

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

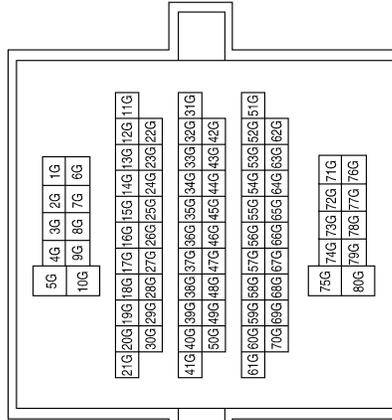

Terminal No.	Color of Wire	Signal Name
1	R/W	INPUT 1
2	O/B	INPUT 2
3	L	INPUT 3
4	R/Y	INPUT 4
5	R/G	INPUT 5
6	V	OUTPUT 1
7	G/B	OUTPUT 2
8	SB	OUTPUT 5
9	G/Y	OUTPUT 4
10	Y	OUTPUT 3

Terminal No.	Color of Wire	Signal Name
7G	W/L	-
10G	W/B	-
31G	L	-
42G	P	-

ABLI1347GB


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM


< COMPONENT DIAGNOSIS >

Connector No.	E41
Connector Name	WIRE TO WIRE
Connector Color	GRAY

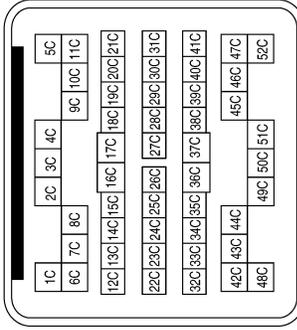


Terminal No.	Color of Wire	Signal Name
45C	B	-
46C	R/L	-

Connector No.	E11
Connector Name	FRONT COMBINATION LAMP LH (WITHOUT DAYTIME LIGHT SYSTEM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
4	B	-
6	R/L	-

Connector No.	E6
Connector Name	FRONT COMBINATION LAMP LH (WITH DAYTIME LIGHT SYSTEM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
4	B	-
6	R/L	-

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
57	R/L	TAIL LAMP
59	B	GND (POWER)

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L

Connector No.	E107
Connector Name	FRONT COMBINATION LAMP RH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
4	B	-
6	R/L	-

ABLIA1348GB

PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM


< COMPONENT DIAGNOSIS >

Connector No.	C1
Connector Name	WIRE TO WIRE
Connector Color	GRAY

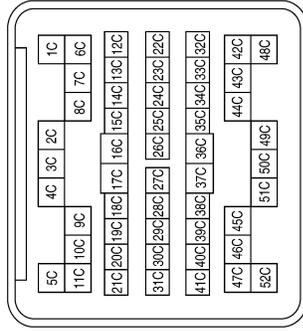


Terminal No.	Color of Wire	Signal Name
45C	B	-
46C	R/L	-

Terminal No.	Color of Wire	Signal Name
7G	L/W	-
10G	W/B	-
31G	L	-
42G	P	-

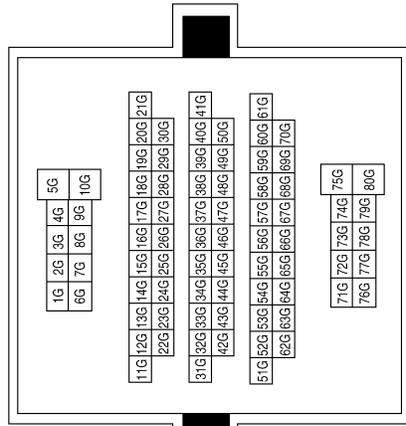


Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

Connector No.	C14
Connector Name	REAR COMBINATION LAMP RH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	B	-
6	R/L	-

Connector No.	C13
Connector Name	REAR COMBINATION LAMP LH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	B	-
6	R/L	-

Connector No.	C12
Connector Name	LICENSE PLATE LAMPS
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R/L	-
2	B	-

ABLIA1349GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

STOP LAMP

< COMPONENT DIAGNOSIS >


STOP LAMP

Wiring Diagram

INFOID:000000005387300

STOP LAMP

CS : COLUMN SHIFT
 FS : FLOOR SHIFT
 T7 : TRAILER TOW 7 PIN

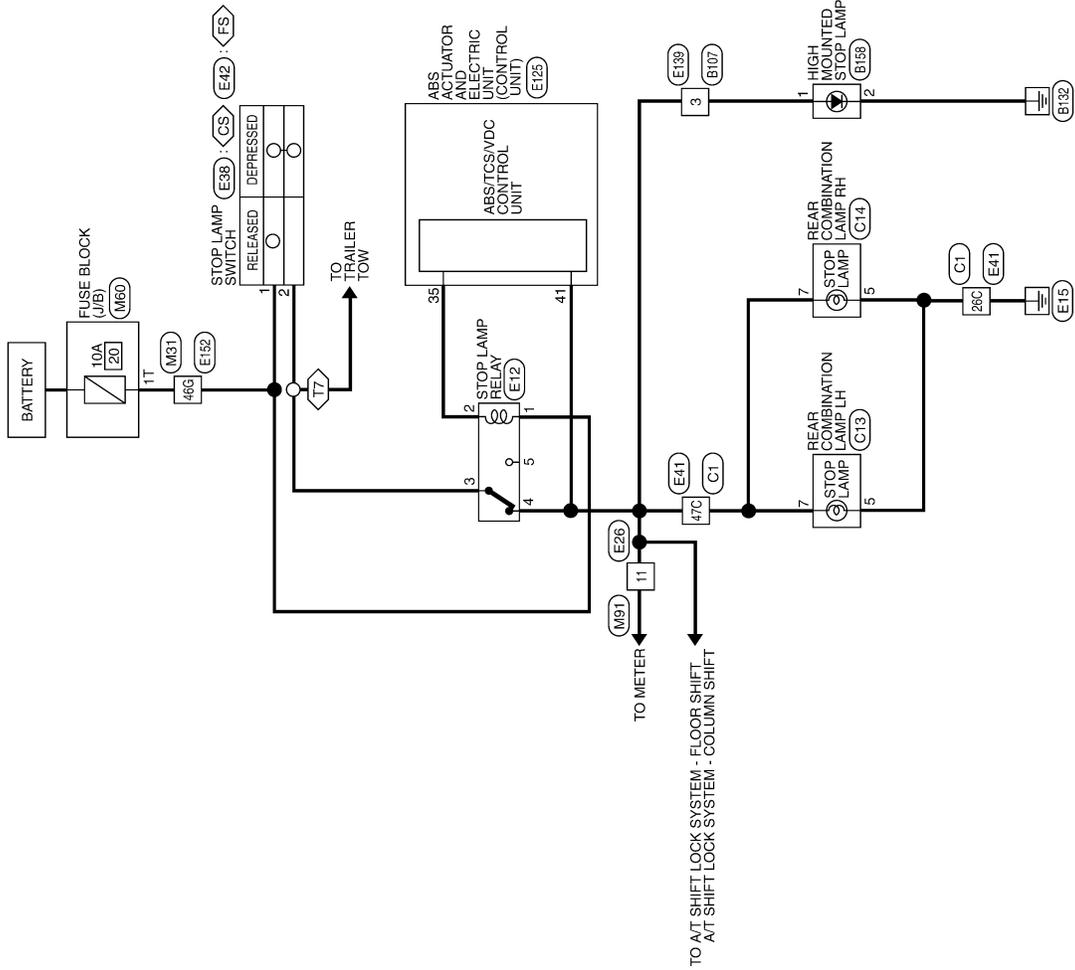


ABLWA0407GB

STOP LAMP

< COMPONENT DIAGNOSIS >


STOP LAMP CONNECTORS

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

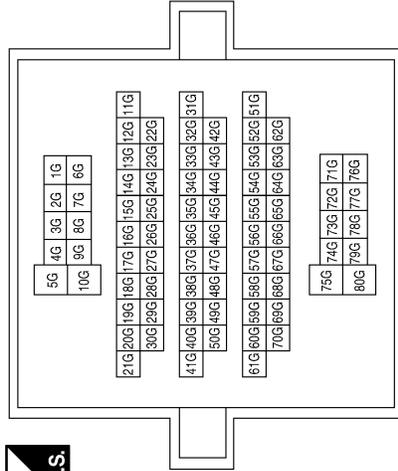


Terminal No.	46G	Color of Wire	R/Y	Signal Name	-
--------------	-----	---------------	-----	-------------	---

Connector No.	M60
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	1T	Color of Wire	R/Y	Signal Name	-
--------------	----	---------------	-----	-------------	---

Connector No.	M91
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Connector No.	E12	Connector Name	STOP LAMP RELAY	Connector Color	BLACK
---------------	-----	----------------	-----------------	-----------------	-------



Terminal No.	11	Color of Wire	R/G	Signal Name	-
--------------	----	---------------	-----	-------------	---

Connector No.	E26	Connector Name	WIRE TO WIRE	Connector Color	WHITE
---------------	-----	----------------	--------------	-----------------	-------



Terminal No.	11	Color of Wire	R/G	Signal Name	-
--------------	----	---------------	-----	-------------	---

Terminal No.	1	Color of Wire	R/Y	Signal Name	-
2	L/W	-	-	-	
3	R/G	-	-	-	
4	R/B	-	-	-	
5	-	-	-	-	

AALIA0079GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

STOP LAMP


< COMPONENT DIAGNOSIS >

Connector No.	E38
Connector Name	STOP LAMP SWITCH (COLUMN SHIFT)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R/Y	-
2	R/G	-

Connector No.	E41
Connector Name	WIRE TO WIRE
Connector Color	GRAY

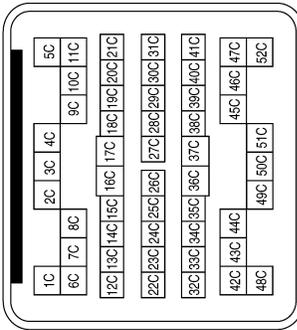


Terminal No.	Color of Wire	Signal Name
26C	B	-
47C	R/B	-

Connector No.	E42
Connector Name	STOP LAMP SWITCH (FLOOR SHIFT)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	R/Y	-
2	R/G	-

Connector No.	E125
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
35	L/W	BRL OUT
41	R/B	BLS

Connector No.	E139
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
3	R/B	-

STOP LAMP


< COMPONENT DIAGNOSIS >

Connector No.	C13
Connector Name	REAR COMBINATION LAMP LH
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
5	B	-
7	R/B	-

Connector No.	C1
Connector Name	WIRE TO WIRE
Connector Color	GRAY

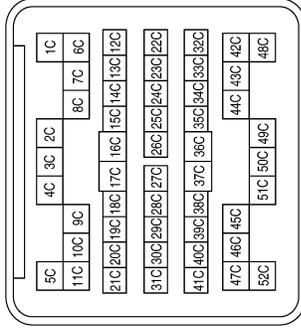


Terminal No.	Color of Wire	Signal Name
26C	B	-
47C	R/B	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

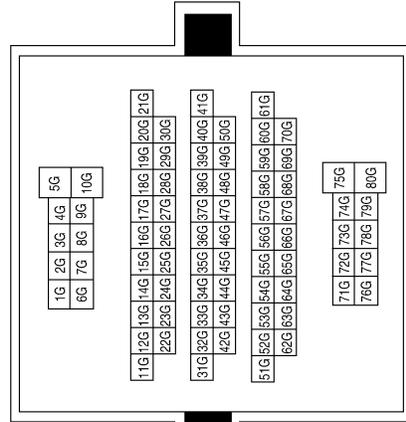

Terminal No.	Color of Wire	Signal Name
46G	R/Y	-

Connector No.	B158
Connector Name	HIGH MOUNTED STOP LAMP
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	R/B	-
2	B	-

Connector No.	B107
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	R/B	-

Connector No.	C14
Connector Name	REAR COMBINATION LAMP RH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
5	B	-
7	R/B	-

AALIA0081GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

BACK-UP LAMP

< COMPONENT DIAGNOSIS >


BACK-UP LAMP

Wiring Diagram

INFOID:000000005387301

- ◁ AI ▷ : WITH AUTO ANTI-DAZZLING INSIDE MIRROR
- ◁ CS ▷ : COLUMN SHIFT
- ◁ FS ▷ : FLOOR SHIFT
- ◁ NV ▷ : WITH NAVI
- ◁ T ▷ : TRAILER TOW 7 PIN

BACK-UP LAMP

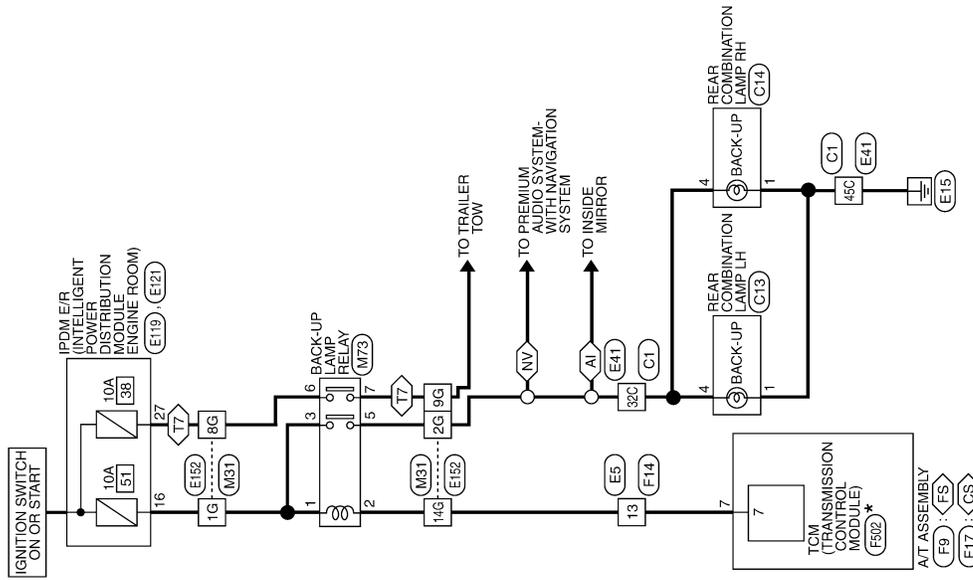

* : THIS CONNECTOR IS NOT SHOWN IN "HARNES LAYOUT" OF PG SECTION.


ABLWA0450GB

BACK-UP LAMP

< COMPONENT DIAGNOSIS >

BACK-UP LAMP CONNECTORS

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

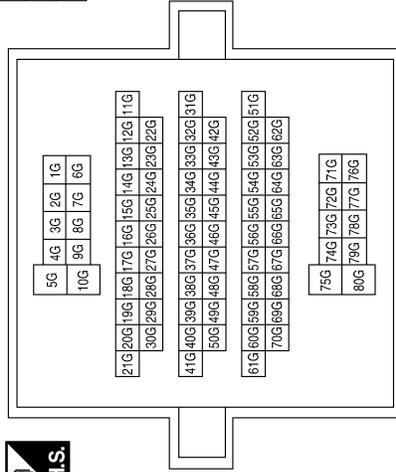


Terminal No.	Color of Wire	Signal Name
1G	G	-
2G	G/W	-
8G	W/B	-
9G	Y/R	-
14G	R	-

Connector No.	M73
Connector Name	BACK-UP LAMP RELAY
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
1	G	-
2	R	-
3	G	-
5	G/W	-
6	W/B	-
7	Y/R	-

Connector No.	E5
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
13	R	-

Connector No.	E41
Connector Name	WIRE TO WIRE
Connector Color	GRAY

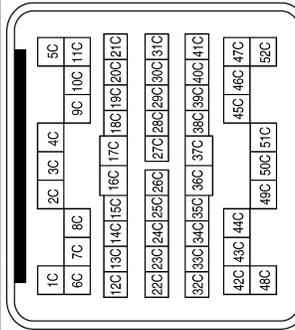

Terminal No.	Color of Wire	Signal Name
32C	G/W	-
45C	B	-

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
16	G	REVERSE LAMP

AALIA0073GB


A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

BACK-UP LAMP


< COMPONENT DIAGNOSIS >

Terminal No.	Color of Wire	Signal Name
1G	G	-
2G	G/W	-
8G	W/B	-
9G	Y/R	-
14G	R	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

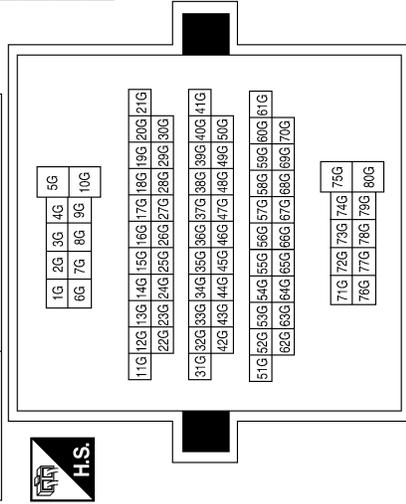


Connector No.	E121
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
27	W/B	T TOW REV LAMP


Connector No.	F17
Connector Name	A/T ASSEMBLY (COLUMN SHIFT)
Connector Color	GREEN



Connector No.	F14
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Connector No.	F9
Connector Name	A/T ASSEMBLY (FLOOR SHIFT)
Connector Color	GREEN



Terminal No.	Color of Wire	Signal Name
7	R	-

Terminal No.	Color of Wire	Signal Name
13	R	-

Terminal No.	Color of Wire	Signal Name
7	R	-


AALIA0074GB

BACK-UP LAMP


< COMPONENT DIAGNOSIS >

Terminal No.	Color of Wire	Signal Name
32C	G/W	-
45C	B	-

Connector No.	C1
Connector Name	WIRE TO WIRE
Connector Color	GRAY

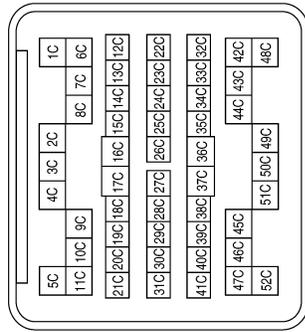


Connector No.	F502
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
7	O	REV LAMP RLY

Connector No.	C14
Connector Name	REAR COMBINATION LAMP RH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	B	-
4	G/W	-

Connector No.	C13
Connector Name	REAR COMBINATION LAMP LH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	B	-
4	G/W	-

AALIA0075GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P


TRAILER TOW

< COMPONENT DIAGNOSIS >

TRAILER TOW

Wiring Diagram


INFOID:000000005387302

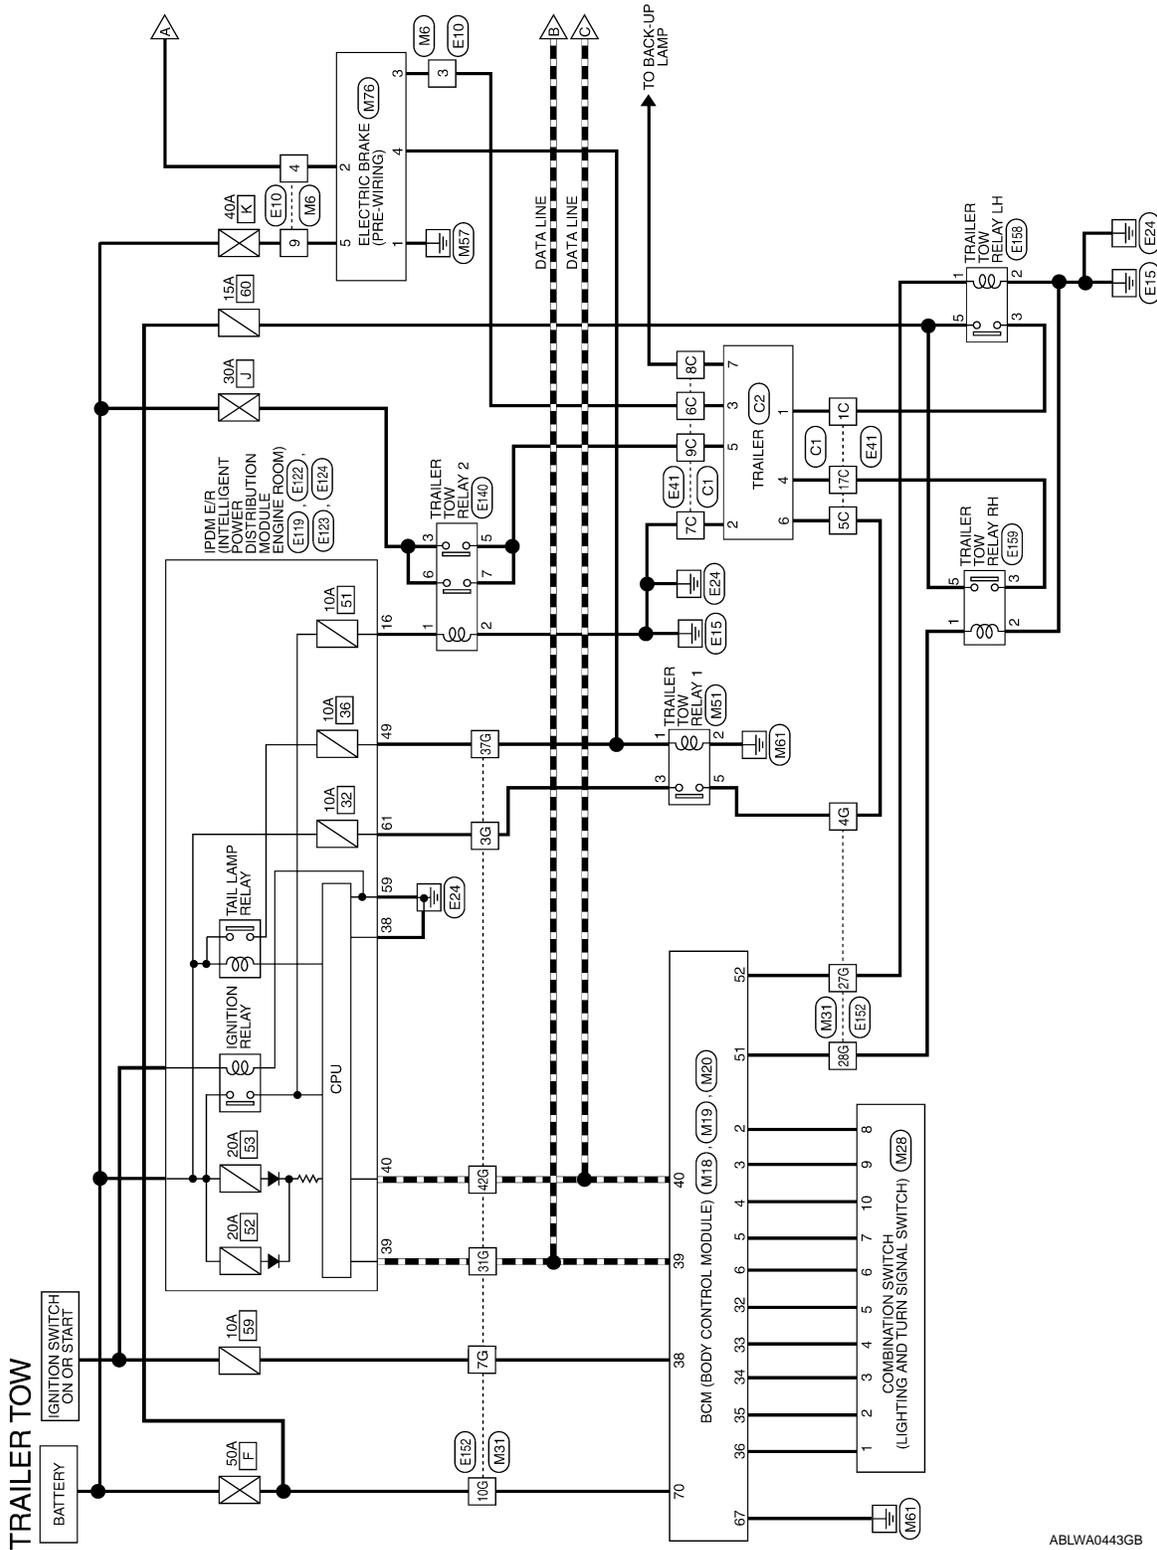

ABLWA0443GB

TRAILER TOW

< COMPONENT DIAGNOSIS >

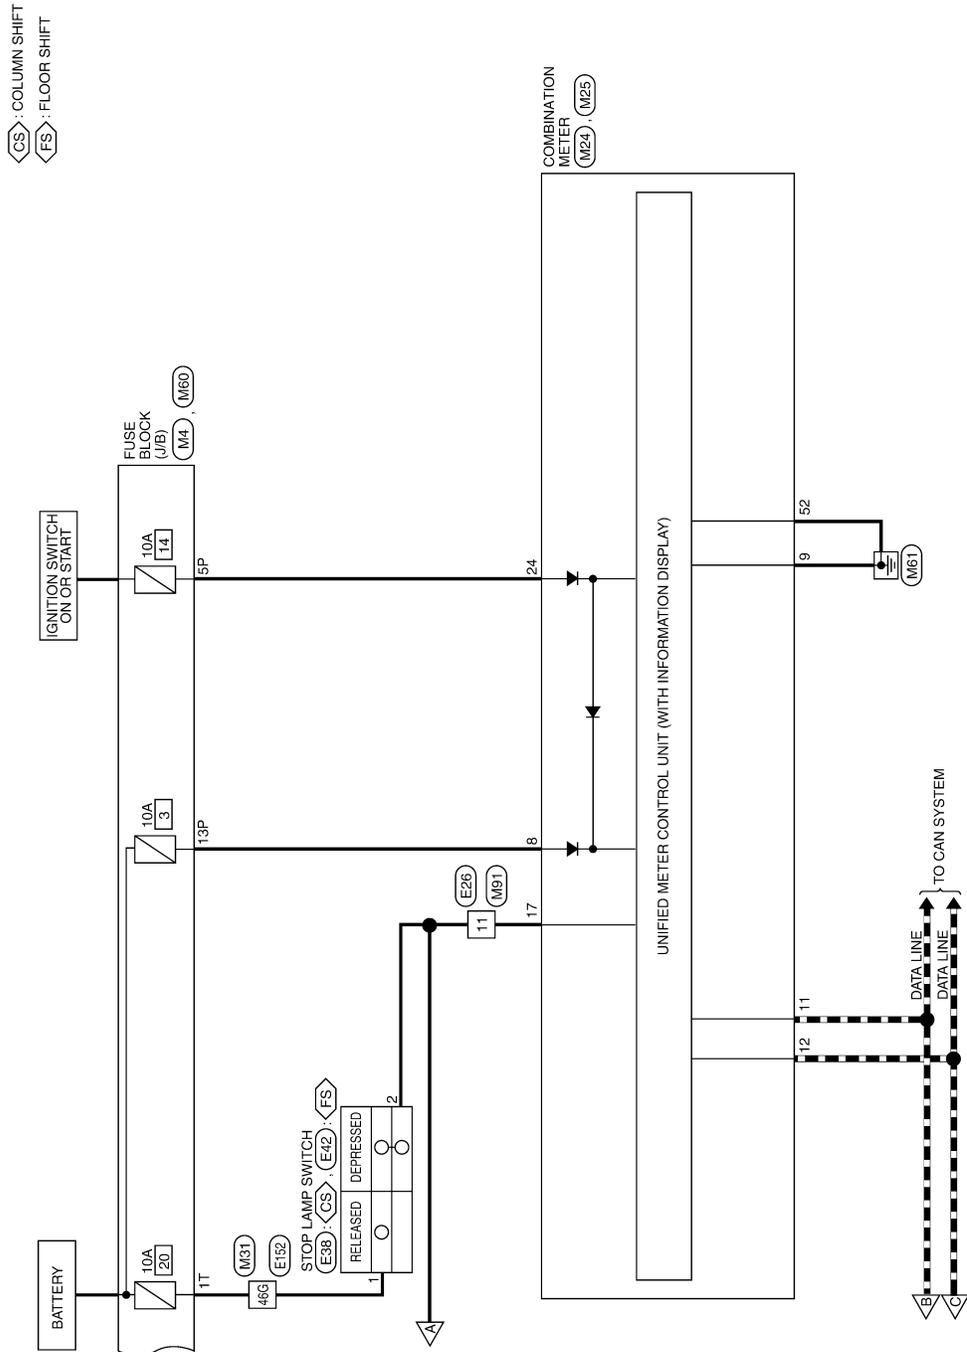

ABLWA0685GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P


TRAILER TOW CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
5P	O/L	-
13P	P	-

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
3	BR/W	-
4	R/G	-
9	R	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	SB	INPUT 5
3	G/Y	INPUT 4
4	Y	INPUT 3
5	G/B	INPUT 2
6	V	INPUT 1
32	R/G	OUTPUT 5
33	R/Y	OUTPUT 4
34	L	OUTPUT 3
35	O/B	OUTPUT 2
36	R/W	OUTPUT 1
38	W/L	IGN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
51	G/Y	TRAILER FLASHER OUTPUT (RIGHT)
52	G/B	TRAILER FLASHER OUTPUT (LEFT)

TRAILER TOW


< COMPONENT DIAGNOSIS >

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
67	B	GND (POWER)
70	W/B	BAT (F/L)

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
8	P	BATTERY
9	B	GND
11	L	CAN+H
12	P	CAN-L
17	R/G	BRAKE PEDAL
24	O/L	RUN/START

Connector No.	M25
Connector Name	COMBINATION METER
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
52	B	ILL_GND

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R/W	INPUT 1
2	O/B	INPUT 2
3	L	INPUT 3
4	R/Y	INPUT 4
5	R/G	INPUT 5
6	V	OUTPUT 1
7	G/B	OUTPUT 2
8	SB	OUTPUT 5
9	G/Y	OUTPUT 4
10	Y	OUTPUT 3

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

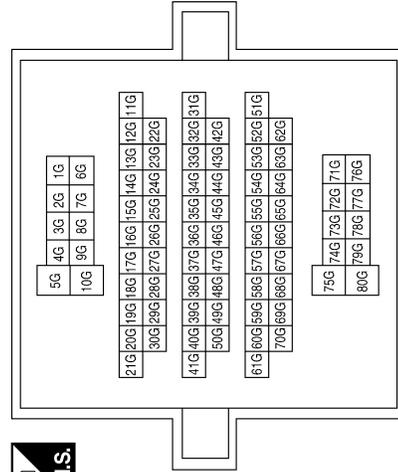


Terminal No.	Color of Wire	Signal Name
3G	BR	-
4G	R	-
7G	W/L	-
10G	W/B	-
27G	G/B	-
28G	G/Y	-
31G	L	-
37G	R/L	-
42G	P	-
46G	R/Y	-

ABLIA1460GB

TRAILER TOW

< COMPONENT DIAGNOSIS >

Connector No.	M76
Connector Name	ELECTRIC BRAKE (PRE-WIRING)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B	GND
2	R/G	STOP
3	BR/W	-
4	R/L	ILL (TAIL)
5	R	B+

Connector No.	M60
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1T	R/Y	-

Connector No.	M51
Connector Name	TRAILER TOW RELAY 1
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
1	R/L	-
2	B	-
3	BR	-
5	R	-

Connector No.	E26
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
11	R/G	-

Connector No.	E10
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	BR/W	-
4	R/G	-
9	R	-

Connector No.	M91
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
11	R/G	-

ABLIA1916GB

TRAILER TOW


< COMPONENT DIAGNOSIS >

Connector No.	E38
Connector Name	STOP LAMP SWITCH (COLUMN SHIFT)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R/Y	-
2	R/G	-

Connector No.	E41
Connector Name	WIRE TO WIRE
Connector Color	GRAY

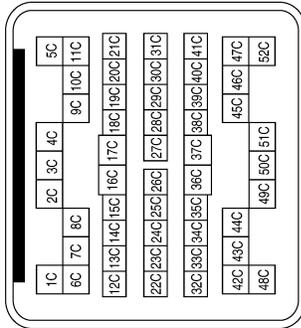

Terminal No.	Color of Wire	Signal Name
1C	G/B	-
5C	R	-
6C	BR/W	-
7C	B	-
8C	Y/R	-
9C	W/L	-
17C	Y/B	-

Connector No.	E42
Connector Name	STOP LAMP SWITCH (FLOOR SHIFT)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	R/Y	-
2	R/G	-

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
16	G	REVERSE LAMP

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L

ABL1A1442GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

TRAILER TOW

< COMPONENT DIAGNOSIS >

Connector No.	E140
Connector Name	TRAILER TOW RELAY2
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
1	G	-
2	B	-
3	Y	-
5	W/L	-
6	Y	-
7	W/L	-

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
59	B	GND (POWER)
61	BR	TRAIL RLY SUPPLY

Connector No.	E123
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
49	R/L	ILLUMINATION


Connector No.	E158
Connector Name	TRAILER TOW RELAY LH
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	G/B	-
2	B	-
3	G/B	-
5	L	-

Terminal No.	Color of Wire	Signal Name
3G	BR	-
4G	R	-
7G	L/W	-
10G	W/B	-
27G	G/B	-
28G	Y/B	-
31G	L	-
37G	R/L	-
42G	P	-
46G	R/Y	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

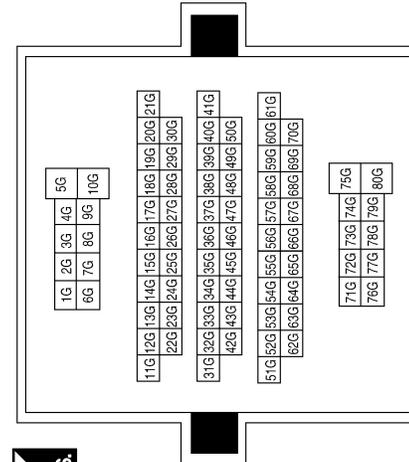

ABLIA1917GB

TRAILER TOW


< COMPONENT DIAGNOSIS >

Connector No.	C2
Connector Name	TRAILER
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	G/B	-
2	B	-
3	BR/W	-
4	Y/B	-
5	W/L	-
6	R	-
7	Y/R	-

Connector No.	C1
Connector Name	WIRE TO WIRE
Connector Color	GRAY

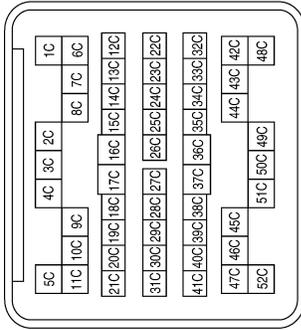

Terminal No.	Color of Wire	Signal Name
1C	G/B	-
5C	R	-
6C	BR/W	-
7C	B	-
8C	Y/R	-
9C	W/L	-
17C	Y/B	-

Connector No.	E159
Connector Name	TRAILER TOW RELAY RH
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	Y/B	-
2	B	-
3	Y/B	-
5	L	-

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

ECU DIAGNOSIS

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:000000005683117

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition	Value/Status
AIR COND SW	A/C switch OFF	OFF
	A/C switch ON	ON
AUT LIGHT SYS	Outside of the room is dark	OFF
	Outside of the room is bright	ON
AUTO LIGHT SW	Lighting switch OFF	OFF
	Lighting switch AUTO	ON
CDL LOCK SW	Door lock/unlock switch does not operate	OFF
	Press door lock/unlock switch to the LOCK side	ON
CDL UNLOCK SW	Door lock/unlock switch does not operate	OFF
	Press door lock/unlock switch to the UNLOCK side	ON
DOOR SW-AS	Front door RH closed	OFF
	Front door RH opened	ON
DOOR SW-DR	Front door LH closed	OFF
	Front door LH opened	ON
DOOR SW-RL	Rear door LH closed	OFF
	Rear door LH opened	ON
DOOR SW-RR	Rear door RH closed	OFF
	Rear door RH opened	ON
ENGINE RUN	Engine stopped	OFF
	Engine running	ON
FR FOG SW	Front fog lamp switch OFF	OFF
	Front fog lamp switch ON	ON
FR WASHER SW	Front washer switch OFF	OFF
	Front washer switch ON	ON
FR WIPER LOW	Front wiper switch OFF	OFF
	Front wiper switch LO	ON
FR WIPER HI	Front wiper switch OFF	OFF
	Front wiper switch HI	ON
FR WIPER INT	Front wiper switch OFF	OFF
	Front wiper switch INT	ON
FR WIPER STOP	Any position other than front wiper stop position	OFF
	Front wiper stop position	ON
HAZARD SW	When hazard switch is not pressed	OFF
	When hazard switch is pressed	ON
LIGHT SW 1ST	Lighting switch OFF	OFF
	Lighting switch 1st	ON
HEAD LAMP SW 1	Headlamp switch OFF	OFF
	Headlamp switch 1st	ON

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >


Monitor Item	Condition	Value/Status	
HEAD LAMP SW 2	Headlamp switch OFF	OFF	A
	Headlamp switch 1st	ON	
HI BEAM SW	High beam switch OFF	OFF	B
	High beam switch HI	ON	
IGN ON SW	Ignition switch OFF or ACC	OFF	C
	Ignition switch ON	ON	
IGN SW CAN	Ignition switch OFF or ACC	OFF	D
	Ignition switch ON	ON	
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	1 - 7	
KEY ON SW	Key is removed from key cylinder	OFF	E
	Key is inserted to key cylinder	ON	
KEYLESS LOCK	LOCK button of key fob is not pressed	OFF	F
	LOCK button of key fob is pressed	ON	
KEYLESS UNLOCK	UNLOCK button of key fob is not pressed	OFF	G
	UNLOCK button of key fob is pressed	ON	
OIL PRESS SW	<ul style="list-style-type: none"> • Ignition switch OFF or ACC • Engine running 	OFF	H
	Ignition switch ON	ON	
PASSING SW	Other than lighting switch PASS	OFF	I
	Lighting switch PASS	ON	
REAR DEF SW	Rear window defogger switch OFF	OFF	J
	Rear window defogger switch ON	ON	
TAIL LAMP SW	Lighting switch OFF	OFF	K
	Lighting switch 1ST	ON	
TURN SIGNAL L	Turn signal switch OFF	OFF	
	Turn signal switch LH	ON	
TURN SIGNAL R	Turn signal switch OFF	OFF	
	Turn signal switch RH	ON	
VEHICLE SPEED	While driving	Equivalent to speedometer reading	EXL

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal Layout

INFOID:000000005683118

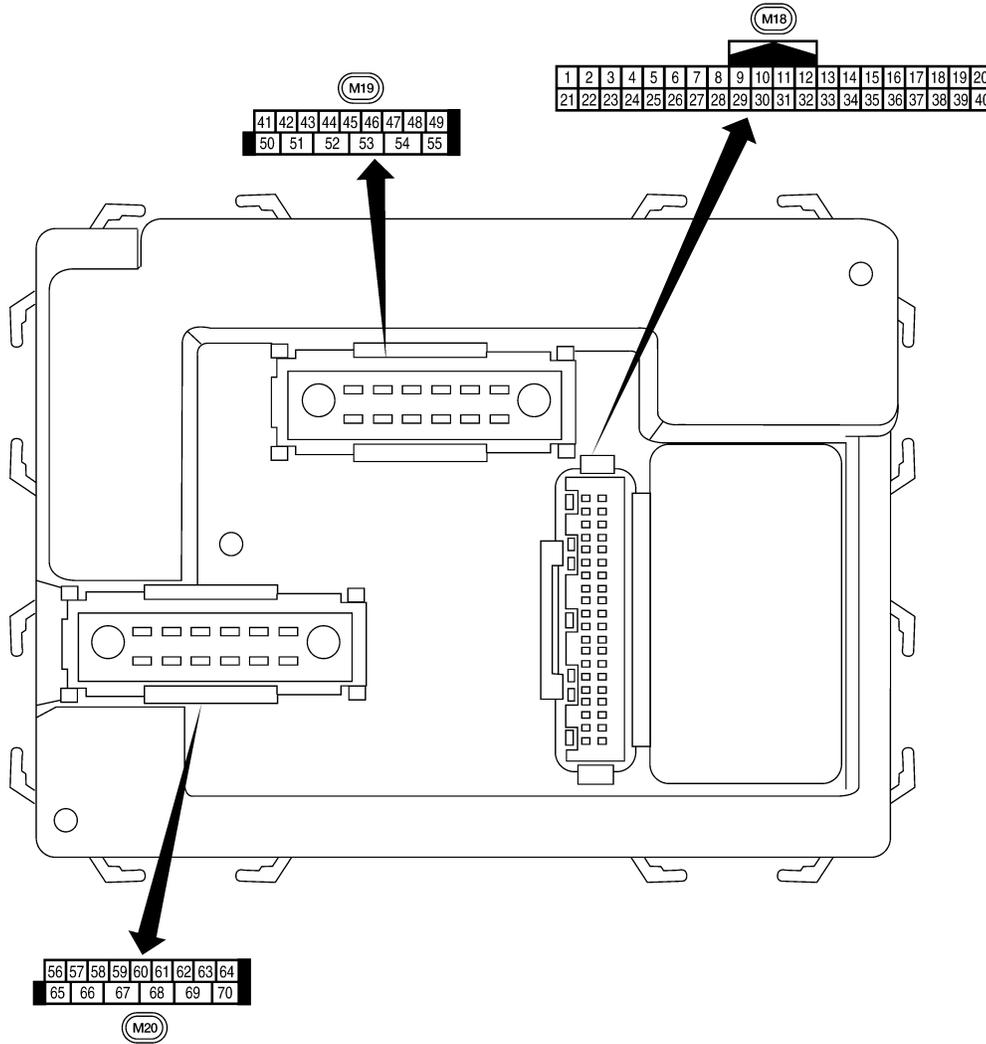



LIA2443E

Physical Values

INFOID:000000005683119

BCM (BODY CONTROL MODULE)





< ECU DIAGNOSIS >

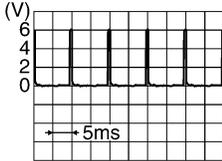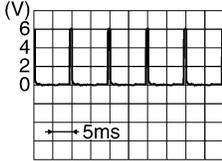Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
1	BR/W	Ignition keyhole illumination	Output	OFF	Door is locked (SW OFF)	Battery voltage
					Door is unlocked (SW OFF)	0V
2	SB	Combination switch input 5	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
3	G/Y	Combination switch input 4	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
4	Y	Combination switch input 3	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
5	G/B	Combination switch input 2	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
6	V	Combination switch input 1				
9	Y/B	Rear window defogger switch (Crew Cab)	Input	ON	Rear window defogger switch ON	0V
					Rear window defogger switch OFF	5V
11	O	Ignition switch (ACC or ON)	Input	ACC or ON	Ignition switch ACC or ON	Battery voltage
12	R/L	Front door switch RH (All)	Input	OFF	ON (open)	0V
		Rear door switch lower RH (King Cab)			OFF (closed)	Battery voltage
		Rear door switch upper RH (King Cab)				
13	GR	Rear door switch RH (Crew Cab)	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
15	L/W	Tire pressure warning check connector	Input	OFF	—	5V

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

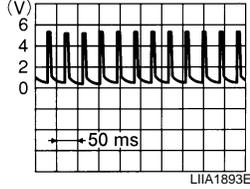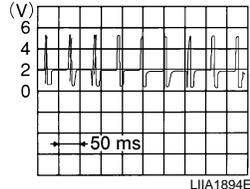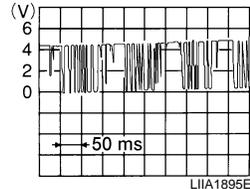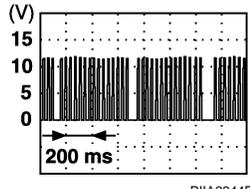Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
18	P	Remote keyless entry receiver and optical sensor (ground)	Output	OFF	—	0V
19	V/W	Remote keyless entry receiver (power supply)	Output	OFF	Ignition switch OFF	 LIIA1893E
20	G/W	Remote keyless entry receiver (signal)	Input	OFF	Stand-by (keyfob buttons released)	 LIIA1894E
					When remote keyless entry receiver receives signal from keyfob (keyfob buttons pressed)	 LIIA1895E
21	G	NATS antenna amp.	Input	OFF → ON	Ignition switch (OFF → ON)	Just after turning ignition switch ON: Pointer of tester should move for approx. 1 second, then return to battery voltage.
22	G	BUS	—	—	Ignition switch ON or power window timer operates	 PIIA2344E
23	G/O	Security indicator lamp	Output	OFF	Goes OFF → illuminates (Every 2.4 seconds)	Battery voltage → 0V
25	BR	NATS antenna amp.	Input	OFF → ON	Ignition switch (OFF → ON)	Just after turning ignition switch ON: Pointer of tester should move for approx. 1 second, then return to battery voltage.
27	W/R	Compressor ON signal	Input	ON	A/C switch OFF	5V
					A/C switch ON	0V
28	L/R	Front blower monitor	Input	ON	Front blower motor OFF	Battery voltage
					Front blower motor ON	0V
29	W/B	Hazard switch	Input	OFF	ON	0V
					OFF	5V
31	P/L	Cargo lamp switch	Input	OFF	Cargo lamp switch ON	0
					Cargo lamp switch OFF	Battery voltage

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
32	R/G	Combination switch output 5	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	<p style="text-align: right; font-size: small;">SKIA5291E</p>
33	R/Y	Combination switch output 4	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	<p style="text-align: right; font-size: small;">SKIA5292E</p>
34	L	Combination switch output 3	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	<p style="text-align: right; font-size: small;">SKIA5291E</p>
35	O/B	Combination switch output 2	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	<p style="text-align: right; font-size: small;">SKIA5292E</p>
36	R/W	Combination switch output 1				
37	B/R	Key switch and key lock solenoid	Input	OFF	Key inserted	Battery voltage
					Key inserted	0V
38	W/L	Ignition switch (ON)	Input	ON	—	Battery voltage
39	L	CAN-H	—	—	—	—
40	P	CAN-L	—	—	—	—
47	SB	Front door switch LH (All)	Input	OFF	ON (open)	0V
		Rear door switch lower LH (King Cab)			OFF (closed)	Battery voltage
48	R/Y	Rear door switch LH (Crew Cab)	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
50	R/Y	Cargo bed lamp control	Output	OFF	Cargo lamp switch (ON)	0V
					Cargo lamp switch (OFF)	Battery voltage

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
51	G/Y	Trailer turn signal (right)	Output	ON	Turn right ON	 SKIA3009J
52	G/B	Trailer turn signal (left)	Output	ON	Turn left ON	 SKIA3009J
56	R/G	Battery saver output	Output	OFF	30 minutes after ignition switch is turned OFF	0V
				ON	—	Battery voltage
57	Y/R	Battery power supply	Input	OFF	—	Battery voltage
58	W/R	Optical sensor	Input	ON	When optical sensor is illuminated	3.1V or more
					When optical sensor is not illuminated	0.6V or less
59	G	Front door lock assembly LH actuator (unlock)	Output	OFF	OFF (neutral)	0V
					ON (unlock)	Battery voltage
60	G/B	Turn signal (left)	Output	ON	Turn left ON	 SKIA3009J
61	G/Y	Turn signal (right)	Output	ON	Turn right ON	 SKIA3009J
62	R/W	Step lamp LH and RH	Output	OFF	ON (any door open)	0V
					OFF (all doors closed)	Battery voltage
63	L	Interior room/map lamp	Output	OFF	Any door switch ON (open)	0V
					OFF (closed)	Battery voltage
65	V	All door lock actuators (lock)	Output	OFF	OFF (neutral)	0V
					ON (lock)	Battery voltage
66	G/Y	Front door lock actuator RH and rear door lock actuators LH/RH (unlock)	Output	OFF	OFF (neutral)	0V
					ON (unlock)	Battery voltage

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
67	B	Ground	Input	ON	—	0V
68	W/L	Power window power supply (RAP)	Output	—	Ignition switch ON	Battery voltage
					Within 45 seconds after ignition switch OFF	Battery voltage
					More than 45 seconds after ignition switch OFF	0V
					When front door LH or RH is open or power window timer operates	0V
69	W/R	Power window power supply	Output	—	—	Battery voltage
70	W/B	Battery power supply	Input	OFF	—	Battery voltage


A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Wiring Diagram

INFOID:000000005683120

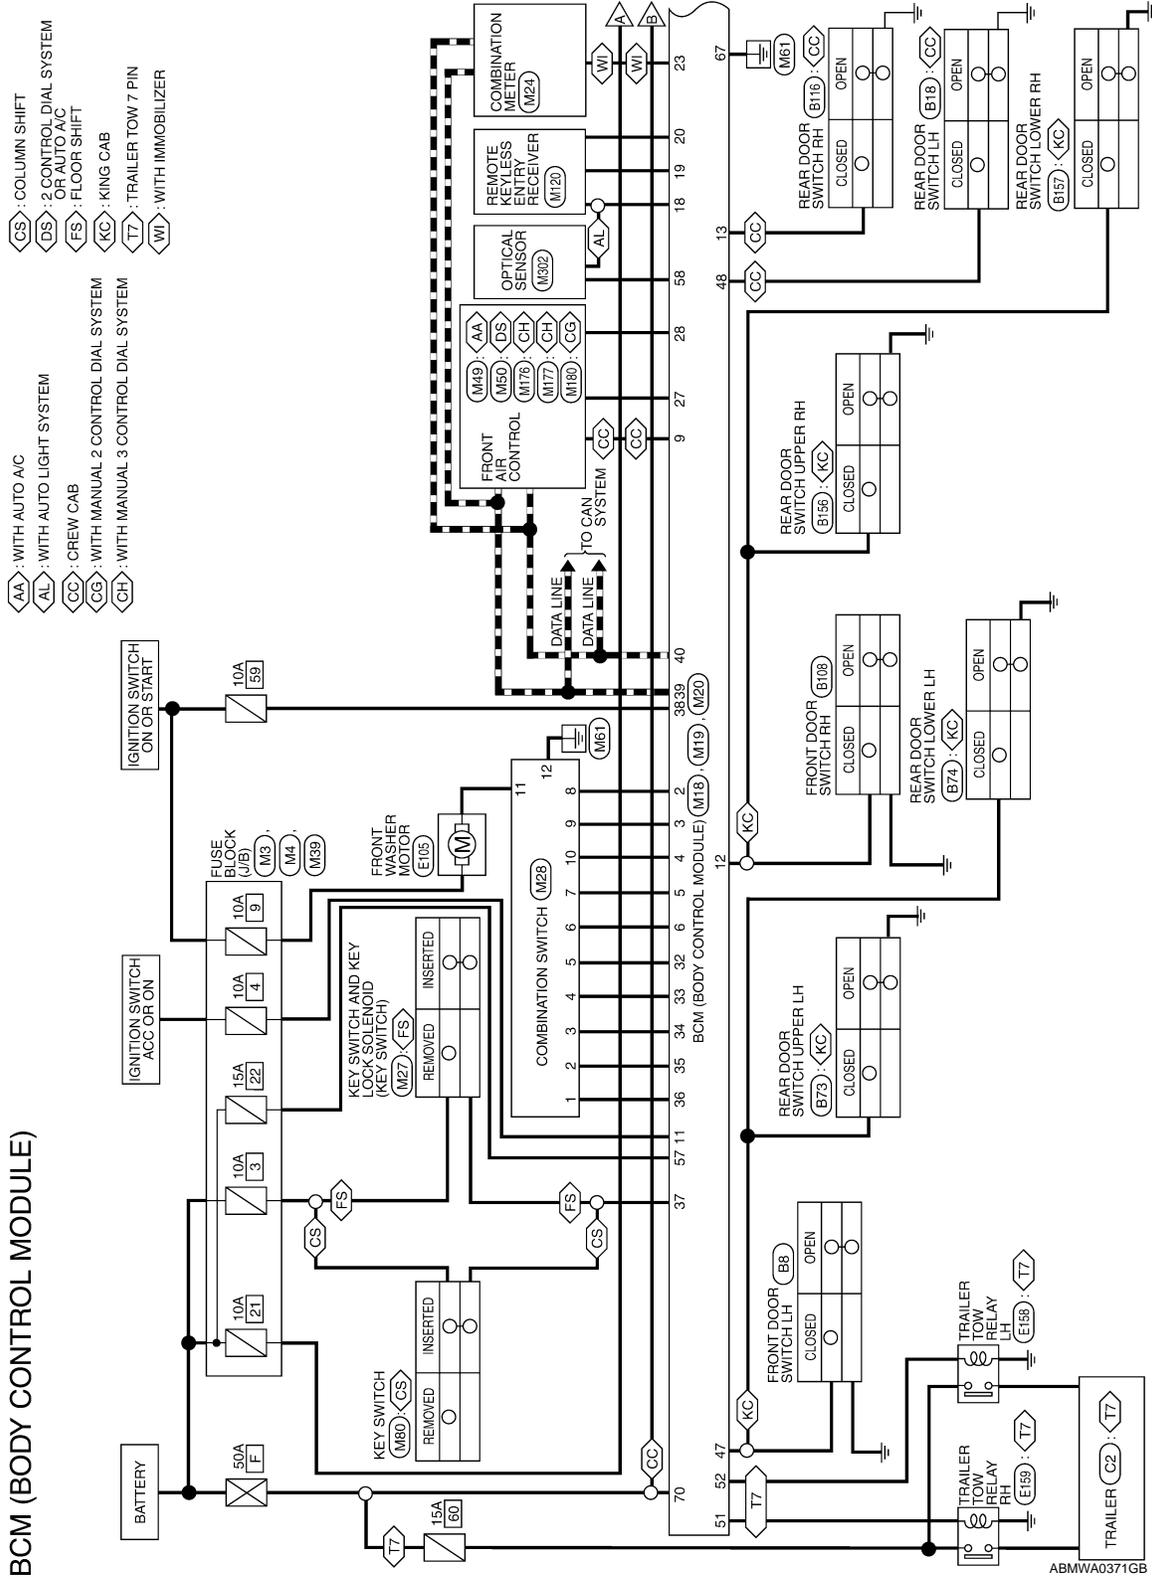


BCM (BODY CONTROL MODULE)

ABMWA0371GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

CC : CREW CAB
 PS : WITH POWER SEAT
 XP : WITHOUT POWER SEAT

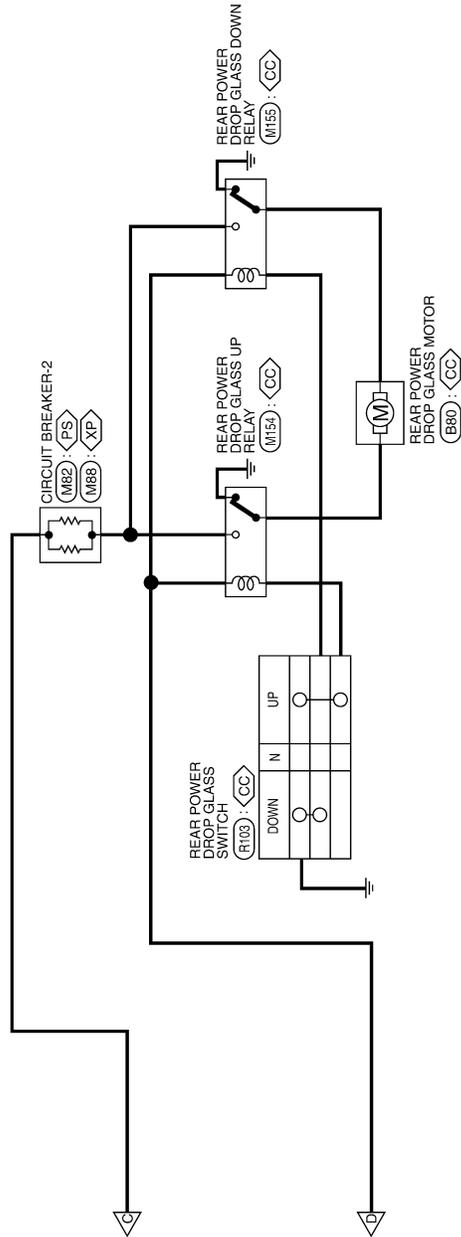

ABMWA0373GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

BCM (BODY CONTROL MODULE) CONNECTORS

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name
1	BR/W	KEY RING OUTPUT
2	SB	INPUT 5
3	G/Y	INPUT 4
4	Y	INPUT 3
5	G/B	INPUT 2
6	V	INPUT 1
7	-	-
8	-	-
9	Y/B	REAR DEFOGGER SW
10	-	-
11	O	ACC SW
12	R/L	DOOR SW (AS)
13	GR	DOOR SW (RR)
14	-	-
15	L/W	TPMS MODE TRIGGER SW

Terminal No.	Color of Wire	Signal Name
16	-	-
17	-	-
18	P	KEYLESS AND AUTO LIGHT SENSOR GND
19	V/W	KEYLESS TUNER POWER SUPPLY OUTPUT
20	G/W	KEYLESS TUNER SIGNAL
21	G	IMMOBILIZER ANTENNA SIGNAL (CLOCK)
22	G	ANTI-PINCH SERIAL LINK (RX, TX)
23	G/O	SECURITY INDICATOR OUTPUT
24	-	-
25	BR	IMMOBILIZER ANTENNA SIGNAL (RX, TX)
26	-	-
27	W/R	AIRCON SW
28	L/R	BLOWER FAN SW
29	W/B	HAZARD SW
30	-	-
31	P/L	CARGO LAMP SW
32	R/G	OUTPUT 5
33	R/Y	OUTPUT 4
34	L	OUTPUT 3
35	O/B	OUTPUT 2
36	R/W	OUTPUT 1
37	B/R	KEY SW
38	W/L	IGN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



41	42	43	44	45	46	47	48	49	50	51	52	53	54	55
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color of Wire	Signal Name
41	-	-
42	-	-
43	-	-
44	-	-
45	-	-
46	-	-
47	SB	DOOR SW (DR)
48	R/Y	DOOR SW (RL)
49	-	-
50	R/Y	CARGO LAMP OUTPUT
51	G/Y	TRAILER FLASHER OUTPUT (RIGHT)
52	G/B	TRAILER FLASHER OUTPUT (LEFT)
53	-	-
54	-	-
55	-	-


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS >

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R/W	INPUT 1
2	O/B	INPUT 2
3	L	INPUT 3
4	R/Y	INPUT 4
5	R/G	INPUT 5
6	V	OUTPUT 1
7	G/B	OUTPUT 2
8	SB	OUTPUT 5
9	G/Y	OUTPUT 4
10	Y	OUTPUT 3
11	V/W	WASHER MOTOR
12	B	GND
13	-	-
14	-	-

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
56	R/G	BATTERY SAVER OUTPUT
57	Y/R	BAT (FUSE)
58	W/R	AUTO LIGHT SENSOR INPUT 2
59	G	DOOR UNLOCK OUTPUT (DR)
60	G/B	FLASHER OUTPUT (LEFT)
61	G/Y	FLASHER OUTPUT (RIGHT)
62	R/W	STEP LAMP OUTPUT
63	L	ROOM LAMP OUTPUT
64	-	-
65	V	DOOR LOCK OUTPUT (ALL)
66	G/Y	DOOR UNLOCK OUTPUT (OTHER)
67	B	GND (POWER)
68	W/L	POWER WINDOW POWER SUPPLY (LINKED TO RAP)
69	W/R	POWER WINDOW POWER SUPPLY (BAT)
70	W/B	BAT (F/L)

Fail Safe

Fail-safe index

BCM performs fail-safe control when any DTC listed below is detected.

ABMIA1058GB

INFOID:000000005683121

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Display contents of CONSULT	Fail-safe	Cancellation
U1000: CAN COMM CIRCUIT	Inhibit engine cranking	When the BCM re-establishes communication with the other modules.

DTC Inspection Priority Chart

INFOID:000000005683122

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	<ul style="list-style-type: none"> U1000: CAN COMM CIRCUIT
2	<ul style="list-style-type: none"> B2190: NATS ANTENNA AMP B2191: DIFFERENCE OF KEY B2192: ID DISCORD BCM-ECM B2193: CHAIN OF BCM-ECM
3	<ul style="list-style-type: none"> C1729: VHCL SPEED SIG ERR C1735: IGNITION SIGNAL
4	<ul style="list-style-type: none"> C1704: LOW PRESSURE FL C1705: LOW PRESSURE FR C1706: LOW PRESSURE RR C1707: LOW PRESSURE RL C1708: [NO DATA] FL C1709: [NO DATA] FR C1710: [NO DATA] RR C1711: [NO DATA] RL C1712: [CHECKSUM ERR] FL C1713: [CHECKSUM ERR] FR C1714: [CHECKSUM ERR] RR C1715: [CHECKSUM ERR] RL C1716: [PRESSDATA ERR] FL C1717: [PRESSDATA ERR] FR C1718: [PRESSDATA ERR] RR C1719: [PRESSDATA ERR] RL C1720: [CODE ERR] FL C1721: [CODE ERR] FR C1722: [CODE ERR] RR C1723: [CODE ERR] RL C1724: [BATT VOLT LOW] FL C1725: [BATT VOLT LOW] FR C1726: [BATT VOLT LOW] RR C1727: [BATT VOLT LOW] RL

DTC Index

INFOID:000000005683123

NOTE:

- Details of time display
- CRNT: Displays when there is a malfunction now or after returning to the normal condition until turning ignition switch OFF → ON again.
- 1 - 39: Displayed if any previous malfunction is present when current condition is normal. It increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The counter remains at 39 even if the number of cycles exceeds it. It is counted from 1 again when turning ignition switch OFF → ON after returning to the normal condition if the malfunction is detected again.

CONSULT display	Fail-safe	Tire pressure monitor warning lamp ON	Reference page
No DTC is detected. further testing may be required.	—	—	—
U1000: CAN COMM CIRCUIT	—	—	BCS-29

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

CONSULT display	Fail-safe	Tire pressure monitor warning lamp ON	Reference page
B2190: NATS ANTENA AMP	—	—	SEC-18
B2191: DIFFERENCE OF KEY	—	—	SEC-21
B2192: ID DISCORD BCM-ECM	—	—	SEC-22
B2193: CHAIN OF BCM-ECM	—	—	SEC-24
C1708: [NO DATA] FL	—	—	WT-14
C1709: [NO DATA] FR	—	—	WT-14
C1710: [NO DATA] RR	—	—	WT-14
C1711: [NO DATA] RL	—	—	WT-14
C1712: [CHECKSUM ERR] FL	—	—	WT-16
C1713: [CHECKSUM ERR] FR	—	—	WT-16
C1714: [CHECKSUM ERR] RR	—	—	WT-16
C1715: [CHECKSUM ERR] RL	—	—	WT-16
C1716: [PRESSDATA ERR] FL	—	—	WT-18
C1717: [PRESSDATA ERR] FR	—	—	WT-18
C1718: [PRESSDATA ERR] RR	—	—	WT-18
C1719: [PRESSDATA ERR] RL	—	—	WT-18
C1720: [CODE ERR] FL	—	—	WT-16
C1721: [CODE ERR] FR	—	—	WT-16
C1722: [CODE ERR] RR	—	—	WT-16
C1723: [CODE ERR] RL	—	—	WT-16
C1724: [BATT VOLT LOW] FL	—	—	WT-16
C1725: [BATT VOLT LOW] FR	—	—	WT-16
C1726: [BATT VOLT LOW] RR	—	—	WT-16
C1727: [BATT VOLT LOW] RL	—	—	WT-16
C1729: VHCL SPEED SIG ERR	—	—	WT-19
C1735: IGNITION SIGNAL	—	—	WT-20

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Reference Value

INFOID:000000005683124

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition		Value/Status
A/C COMP REQ	A/C switch OFF		OFF
	A/C switch ON		ON
TAIL&CLR REQ	Lighting switch OFF		OFF
	Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated)		ON
HL LO REQ	Lighting switch OFF		OFF
	Lighting switch 2ND HI or AUTO (Light is illuminated)		ON
HL HI REQ	Lighting switch OFF		OFF
	Lighting switch HI		ON
FR FOG REQ*	Lighting switch 2ND or AUTO (Light is illuminated)	Front fog lamp switch OFF	OFF
		<ul style="list-style-type: none"> Front fog lamp switch ON Daytime light activated (Canada only) 	ON
FR WIP REQ	Ignition switch ON	Front wiper switch OFF	STOP
		Front wiper switch INT	1LOW
		Front wiper switch LO	LOW
		Front wiper switch HI	HI
WIP AUTO STOP	Ignition switch ON	Front wiper stop position	STOP P
		Any position other than front wiper stop position	ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally	OFF
		Front wiper stops at fail-safe operation	BLOCK
ST RLY REQ	Ignition switch OFF or ACC		OFF
	Ignition switch START		ON
IGN RLY	Ignition switch OFF or ACC		OFF
	Ignition switch ON		ON
RR DEF REQ*	Rear defogger switch OFF		OFF
	Rear defogger switch ON		ON
OIL P SW	Ignition switch OFF, ACC or engine running		OPEN
	Ignition switch ON		CLOSE
DTRL REQ	Daytime light system requested OFF with CONSULT-III.		OFF
	Daytime light system requested ON with CONSULT-III.		ON
THFT HRN REQ	Not operated		OFF
	<ul style="list-style-type: none"> Panic alarm is activated Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM 		ON
HORN CHIRP	Not operated		OFF
	Door locking with keyfob (horn chirp mode)		ON

*: If equipped


IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

Terminal Layout

INFOID:000000005683125

TERMINAL LAYOUT —TYPE A

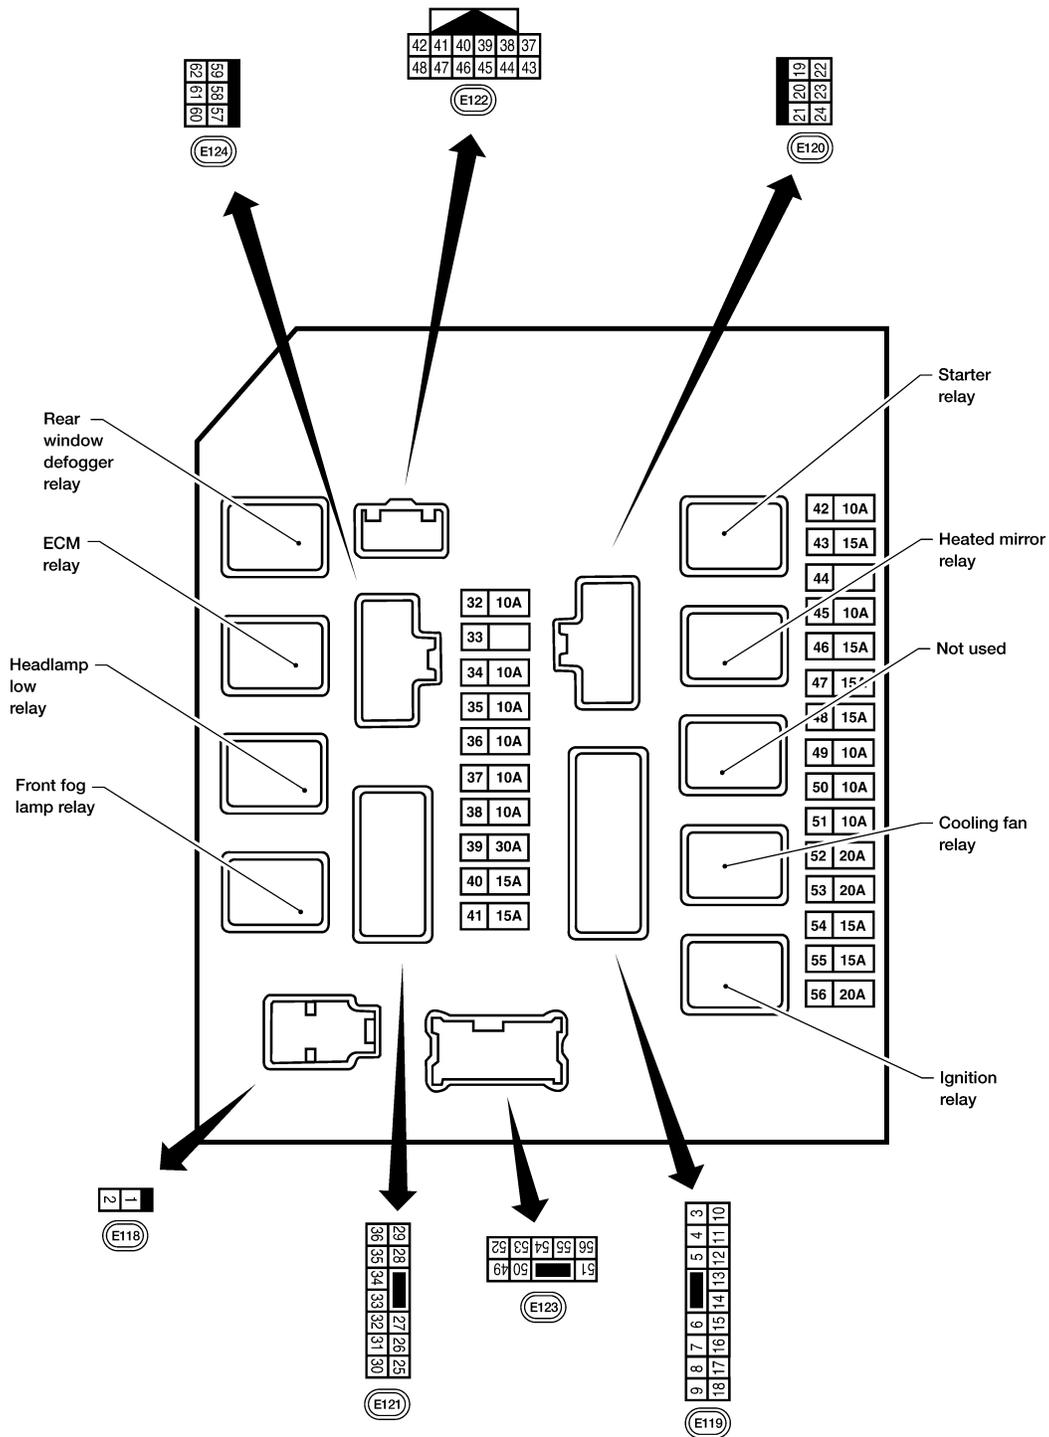


WKIA5852E

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

TERMINAL LAYOUT —TYPE B

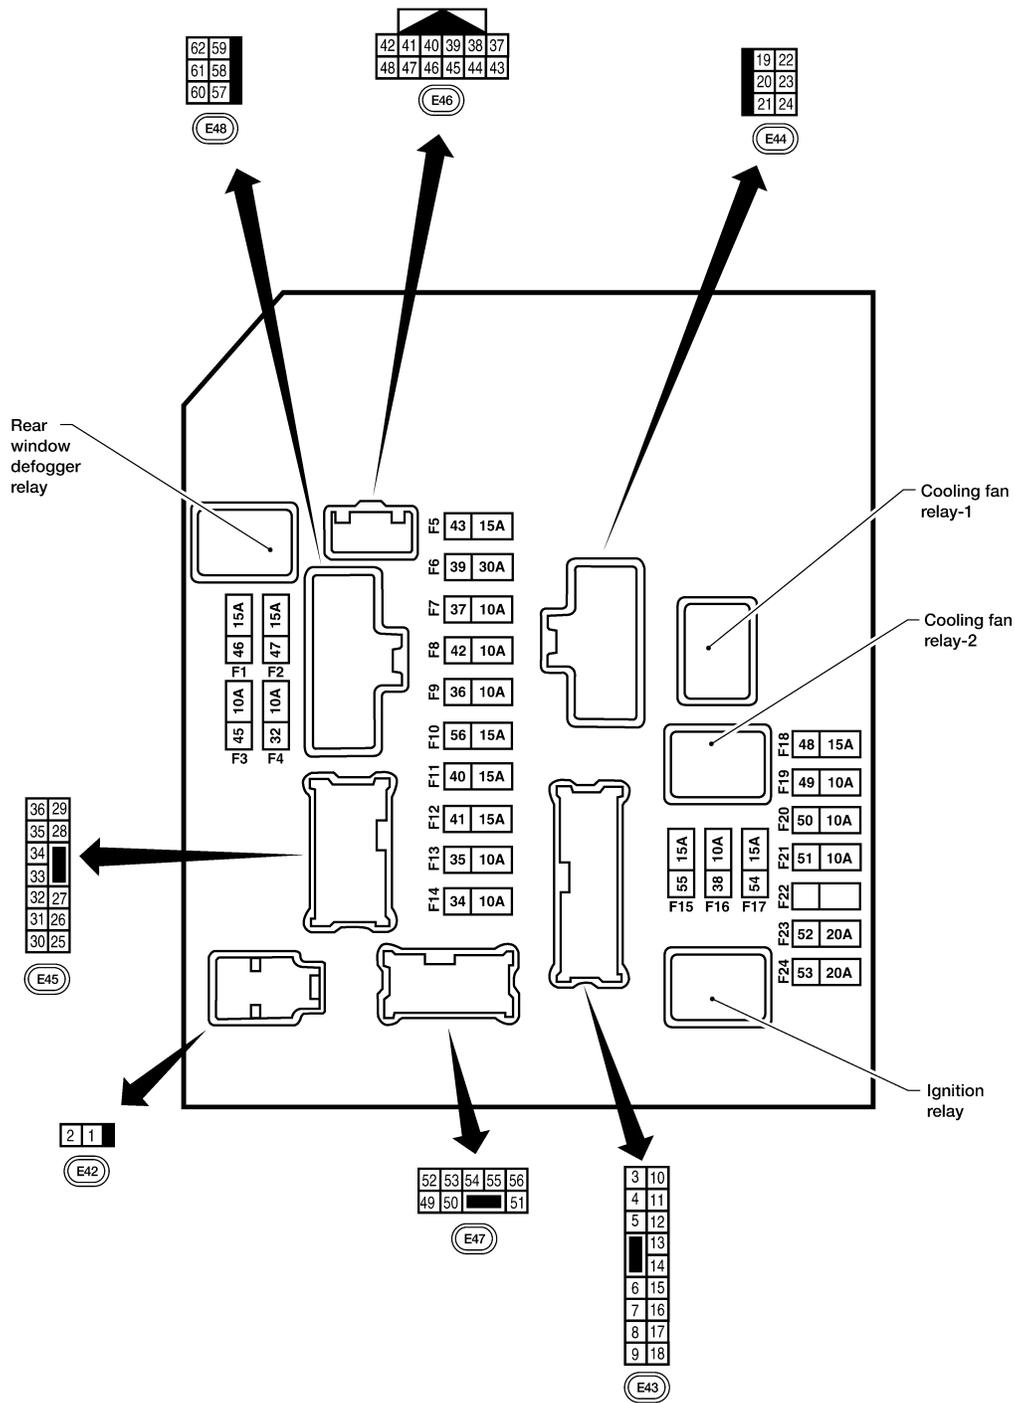

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

Physical Values

PHYSICAL VALUES

AAMIA0364GB

INFOID:000000005683126




IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)	
				Ignition switch	Operation or condition		
1	B/Y	Battery power supply	Input	OFF	—	Battery voltage	
2	R	Battery power supply	Input	OFF	—	Battery voltage	
3	BR	ECM relay	Output	—	Ignition switch ON or START	Battery voltage	
					Ignition switch OFF or ACC	0V	
4	W/L	ECM relay	Output	—	Ignition switch ON or START	Battery voltage	
					Ignition switch OFF or ACC	0V	
6	L	Throttle control motor relay	Output	—	Ignition switch ON or START	Battery voltage	
					Ignition switch OFF or ACC	0V	
7	W/B	ECM relay control	Input	—	Ignition switch ON or START	0V	
					Ignition switch OFF or ACC	Battery voltage	
8	R/B	Fuse 54	Output	—	Ignition switch ON or START	Battery voltage	
					Ignition switch OFF or ACC	0V	
10	G	Fuse 45 (Canada only)	Output	ON	Daytime light system active	0V	
					Daytime light system inactive	Battery voltage	
11	Y/B	A/C compressor	Output	ON or START	A/C switch ON or defrost A/C switch	Battery voltage	
					A/C switch OFF or defrost A/C switch	0V	
12	L/W	Ignition switch supplied power	Input	—	OFF or ACC	0V	
					ON or START	Battery voltage	
13	B/Y	Fuel pump relay	Output	—	Ignition switch ON or START	Battery voltage	
					Ignition switch OFF or ACC	0V	
14	Y/R	Fuse 49	Output	—	Ignition switch ON or START	Battery voltage	
					Ignition switch OFF or ACC	0V	
15	LG/B	Fuse 50	Output	—	Ignition switch ON or START	Battery voltage	
					Ignition switch OFF or ACC	0V	
16	G	Fuse 51	Output	—	Ignition switch ON or START	Battery voltage	
					Ignition switch OFF or ACC	0V	
17	W	Fuse 55	Output	—	Ignition switch ON or START	Battery voltage	
					Ignition switch OFF or ACC	0V	
19	W/R	Starter motor	Output	START	—	Battery voltage	
21	BR	Ignition switch supplied power	Input	—	OFF or ACC	0V	
					START	Battery voltage	
22	G	Battery power supply	Output	OFF	—	Battery voltage	
23	GR/W	Door mirror defogger output signal (if equipped)	Output	—	When rear defogger switch is ON	Battery voltage	
					When rear defogger switch is OFF	0V	
27	W/B	Fuse 38 (With trailer tow)	Output	—	Ignition switch ON or START	Battery voltage	
					Ignition switch OFF or ACC	0V	
30	W	Fuse 53	Output	—	Ignition switch ON or START	Battery voltage	
					Ignition switch OFF or ACC	0V	
32	L	Wiper low speed signal	Output	ON or START	Wiper switch	OFF	Battery voltage
						LO or INT	0V

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

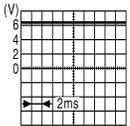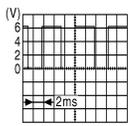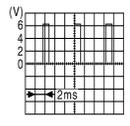Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)				
				Ignition switch	Operation or condition					
35	L/B	Wiper high speed signal	Output	ON or START	Wiper switch	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%;">OFF, LO, INT</td> <td>Battery voltage</td> </tr> <tr> <td>HI</td> <td>0V</td> </tr> </table>	OFF, LO, INT	Battery voltage	HI	0V
OFF, LO, INT	Battery voltage									
HI	0V									
37	Y	Power generation command signal	Output	—	Ignition switch ON	 <p style="text-align: right; margin-right: 50px;">JPMIA0001GB 6.3 V</p>				
					40% is set on "Active test," "ALTERNATOR DUTY" of "ENGINE"	 <p style="text-align: right; margin-right: 50px;">JPMIA0002GB 3.8 V</p>				
					40% is set on "Active test," "ALTERNATOR DUTY" of "ENGINE"	 <p style="text-align: right; margin-right: 50px;">JPMIA0003GB 1.4 V</p>				
38	B	Ground	Input	—	—	0V				
39	L	CAN-H	—	ON	—	—				
40	P	CAN-L	—	ON	—	—				
42	GR	Oil pressure switch	Input	—	Engine running	Battery voltage				
					Engine stopped	0V				
43	L/Y	Wiper auto stop signal	Input	ON or START	Wiper switch	OFF, LO, INT Battery voltage				
44	BR	Daytime light relay control (Canada only)	Input	ON	Daytime light system active	0V				
					Daytime light system inactive	Battery voltage				
45	G/W	Horn relay control	Input	ON	When door locks are operated using keyfob (OFF → ON)*	Battery voltage → 0V				
46	GR	Fuel pump relay control	Input	—	Ignition switch ON or START	0V				
					Ignition switch OFF or ACC	Battery voltage				
47	O	Throttle control motor relay control	Input	—	Ignition switch ON or START	0V				
					Ignition switch OFF or ACC	Battery voltage				
48	B/R	Starter relay (inhibit switch)	Input	ON or START	Selector lever in "P" or "N"	0V				
					Selector lever any other position	Battery voltage				

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

EXL

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)	
				Ignition switch	Operation or condition		
49	R/L	Trailer tow relay (With trailer tow) Illumination (Without trailer tow)	Output	ON	Lighting switch must be in the 1st position	OFF	0V
						ON	Battery voltage
50	W/R	Front fog lamp (LH) (if equipped)	Output	ON or START	Lighting switch must be in the 2nd position (LOW beam is ON) and the front fog lamp switch	OFF	0V
						ON	Battery voltage
51	W/R	Front fog lamp (RH) (if equipped)	Output	ON or START	Lighting switch must be in the 2nd position (LOW beam is ON) and the front fog lamp switch	OFF	0V
						ON	Battery voltage
52	L	LH low beam head-lamp	Output	—	Lighting switch in 2nd position	Battery voltage	
54	R/Y	RH low beam head-lamp	Output	—	Lighting switch in 2nd position	Battery voltage	
55	G	LH high beam head-lamp	Output	—	Lighting switch in 2nd position and placed in HIGH or PASS position	Battery voltage	
56	Y (With DTRL) L/W (Without DTRL)	RH high beam head-lamp	Output	—	Lighting switch in 2nd position and placed in HIGH or PASS position	Battery voltage	
57	R/L	Parking, license, tail lamp and rear audio remote control unit	Output	ON	Lighting switch 1st position	OFF	0V
						ON	Battery voltage
59	B	Ground	Input	—	—	0V	
60	B/W	Rear window defogger relay (if equipped)	Output	ON or START	Rear defogger switch ON	Battery voltage	
					Rear defogger switch OFF	0V	
61	BR	Fuse 32 (With trailer tow)	Output	OFF	—	Battery voltage	


*: When horn reminder is ON

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

Wiring Diagram

INFOID:000000005683127

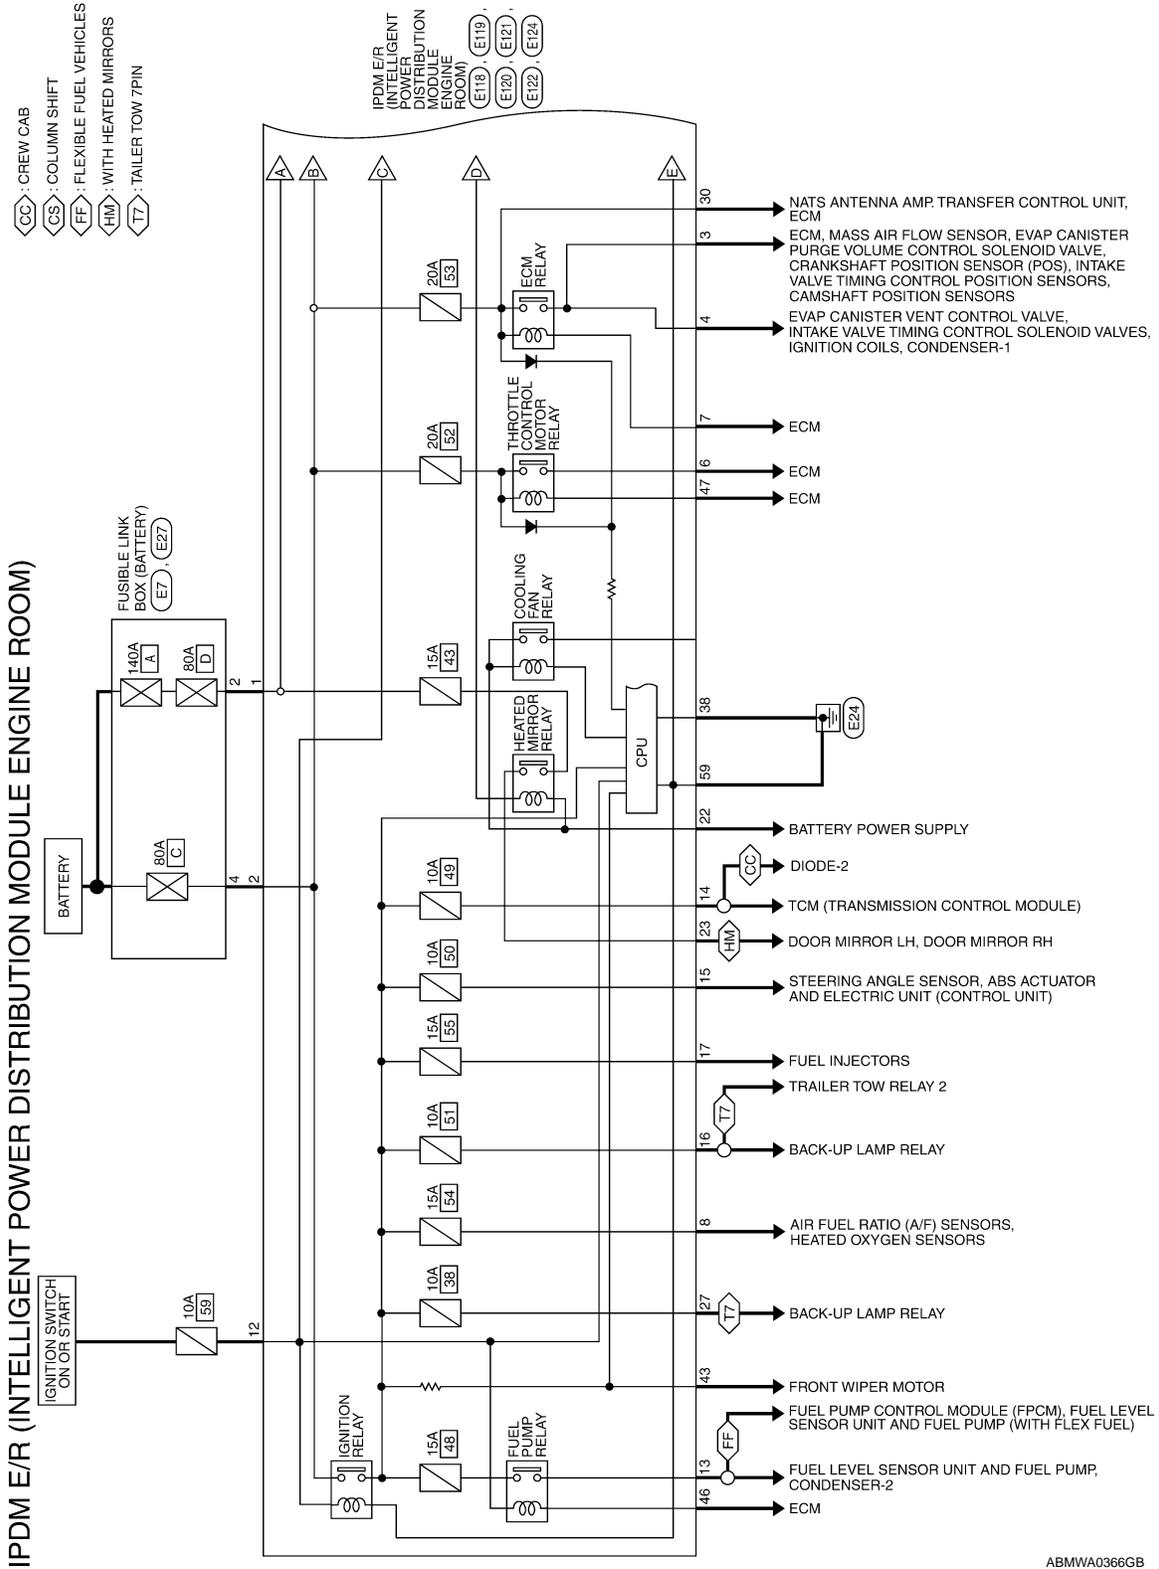

ABMWA0366GB


A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

- CC: CREW CAB
- FL: WITH FRONT FOG LAMP
- N: FOR CANADA
- RR: WITH REAR AUDIO REMOTE CONTROL UNIT
- T: TRAILER TOW 7PIN

IPDM E/R
(INTELLIGENT
POWER DISTRIBUTION
MODULE
ENGINE
ROOM)
(E19), (E120),
(E121), (E122),
(E123)

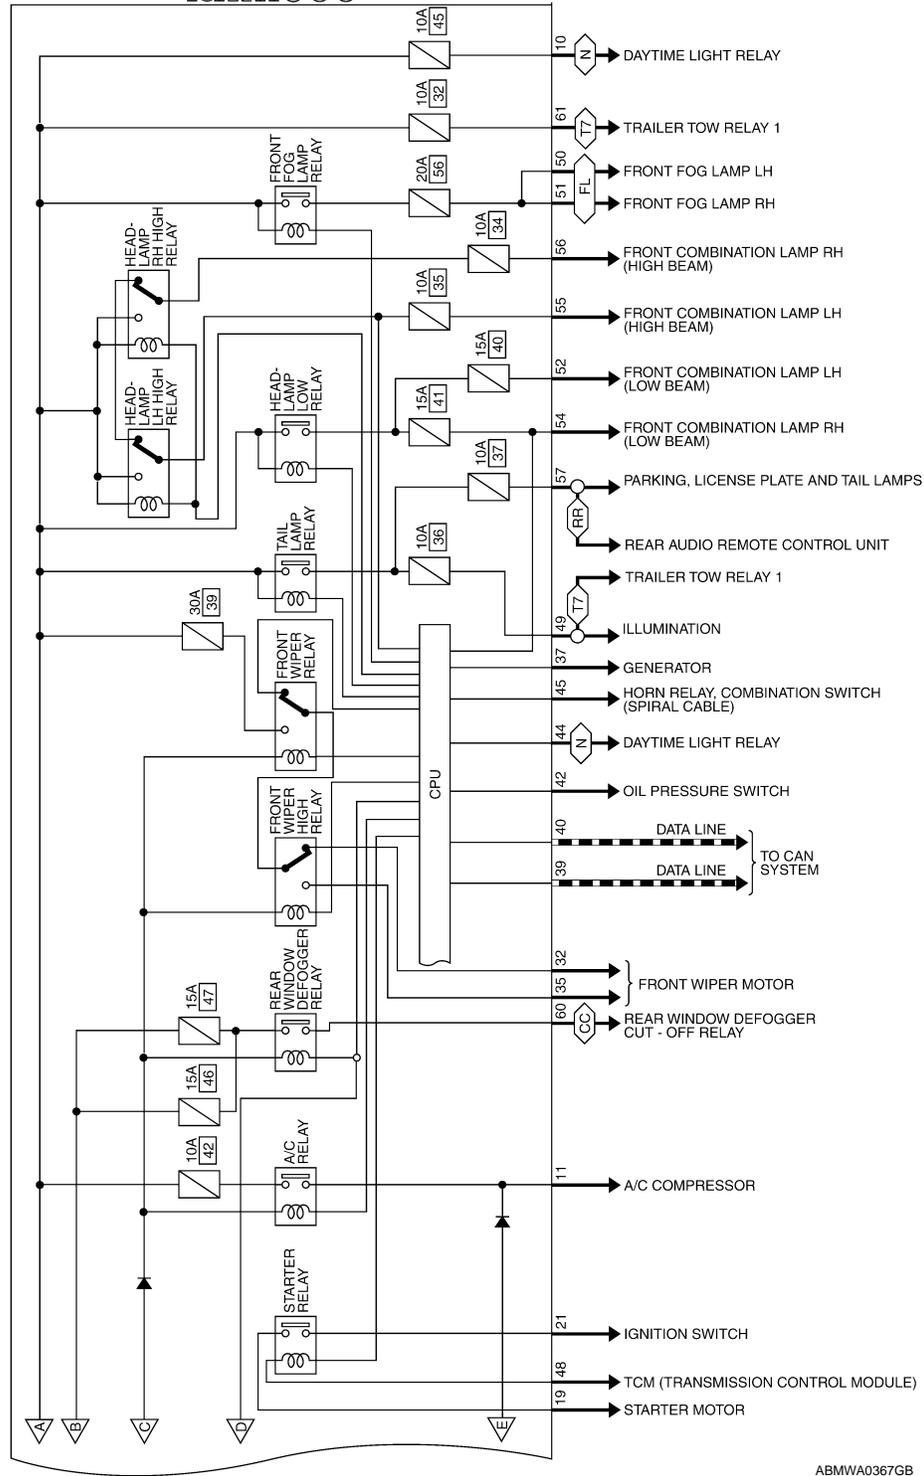

ABMWA0367GB

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) CONNECTORS

Connector No.	E7
Connector Name	FUSIBLE LINK BOX (BATTERY)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
4	R	-

Connector No.	E27
Connector Name	FUSIBLE LINK BOX (BATTERY)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
2	B/Y	-

Connector No.	E118
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	B/Y	F/L USM
2	R	F/L MAIN

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	BR	IGN COIL
4	W/L	ECM
5	-	-
6	L	ETC
7	W/B	ECM RLY CONT

Terminal No.	Color of Wire	Signal Name
8	R/B	O2 SENSOR
9	-	-
10	G	DTRL RLY SUPPLY
11	Y/B	A/C COMPRESSOR
12	L/W	IGN SW (IG)
13	B/Y	FUEL PUMP
14	Y/R	A/T CU IGN SUPPLY
15	LG/B	ABS IGN SUPPLY
16	G	REVERSE LAMP
17	W	INJECTOR
18	-	-

Connector No.	E120
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
19	W/R	STARTER MTR
20	-	-
21	BR	IGN SW(ST)
22	G	F/L MOTOR FAN
23	GR/W	HEATED MIRROR
24	-	-

ABMIA1046GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

Connector No.	E123
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN

51	50	49
56	55	54
53	52	51



Terminal No.	Color of Wire	Signal Name
49	R/L	ILLUMINATION
50	W/R	FR FOG LAMP LH
51	W/R	FR FOG LAMP RH
52	L	H/LAMP LO LH
53	-	-
54	R/Y	H/LAMP LO RH
55	G	H/LAMP HI LH
56	L/W	H/LAMP HI RH (WITHOUT DAYTIME LIGHT)
56	Y	H/LAMP HI RH (WITH DAYTIME LIGHT)

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

42	41	40	39	38	37
48	47	46	45	44	43



Terminal No.	Color of Wire	Signal Name
37	Y	ALT-C CONT
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L
41	-	-
42	GR	OIL PRESSURE SW
43	L/Y	AUTO STOP SW
44	BR	DTRL RLY CONT
45	G/W	ANT THEFT HORN
46	GR	FUEL PUMP RLY CONT
47	O	ETC RLY CONT
48	B/R	INHIBIT SW

Connector No.	E121
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN

29	28	27	26	25
36	35	34	33	32
31	30	29	28	27



Terminal No.	Color of Wire	Signal Name
25	-	-
26	-	-
27	W/B	T TOW REV LAMP
28	-	-
29	-	-
30	W	ECM BAT
31	-	-
32	L	FR WIPER LO
33	-	-
34	-	-
35	L/B	FR WIPER HI
36	-	-

Terminal No.	Color of Wire	Signal Name
57	R/L	TAIL LAMP
58	-	-
59	B	GND (POWER)
60	B/W	RR DEF
61	BR	TRAIL RLY SUPPLY
62	-	-

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK

59	58	57
62	61	60



ABMIA1559GB

INFOID:000000005683128

Fail Safe

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With BCM

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

Control part	Fail-safe in operation
Headlamp	<ul style="list-style-type: none"> • Turns ON the headlamp low relay when the ignition switch is turned ON • Turns OFF the headlamp low relay when the ignition switch is turned OFF • Headlamp high LH/RH relays OFF
<ul style="list-style-type: none"> • Parking lamps • License plate lamps • Tail lamps 	<ul style="list-style-type: none"> • Turns ON the tail lamp relay when the ignition switch is turned ON • Turns OFF the tail lamp relay when the ignition switch is turned OFF
Front wiper	<ul style="list-style-type: none"> • The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed. • The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.
Rear window defogger (if equipped)	Rear window defogger relay OFF
A/C compressor	A/C relay OFF
Front fog lamps (if equipped)	Front fog lamp relay OFF

IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

Ignition switch	Ignition relay	Tail lamp relay
ON	ON	—
OFF	OFF	—

NOTE:

The tail lamp turns OFF when the ignition switch is turned ON.

FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper auto stop signal.

When a front wiper auto stop signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 second activation and 20 second stop five times.

Ignition switch	Front wiper switch	Auto stop signal
ON	OFF	Front wiper stop position signal cannot be input 10 seconds.
	ON	The signal does not change for 10 seconds.

NOTE:

This operation status can be confirmed on the IPDM E/R "DATA MONITOR" that displays "Block" for the item "WIP PROT" while the wiper is stopped.

STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

DTC Index

INFOID:000000005683129

CONSULT-III display	Fail-safe	TIME ^{NOTE}		Refer to
No DTC is detected. further testing may be required.	—	—	—	—
U1000: CAN COMM CIRCUIT	×	CRNT	1 – 39	PCS-15

NOTE:

The details of TIME display are as follows.

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

- CRNT: The malfunctions that are detected now
- 1 - 39: The number is indicated when it is normal at present and a malfunction was detected in the past. It increases like 0 → 1 → 2 ... 38 → 39 after returning to the normal condition whenever IGN OFF → ON. It is fixed to 39 until the self-diagnosis results are erased if it is over 39. It returns to 0 when a malfunction is detected again in the process.

EXTERIOR LIGHTING SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

EXTERIOR LIGHTING SYSTEM SYMPTOMS

Symptom Table

INFOID:000000005387316

CAUTION:

Perform the self-diagnosis with CONSULT-III before the symptom diagnosis. Perform the trouble diagnosis if any DTC is detected.

Symptom		Possible cause	Inspection item	
Headlamp does not switch to the high beam.	One side	<ul style="list-style-type: none"> Fuse Harness between IPDM E/R and the front combination lamp Front combination lamp (High beam relay) IPDM E/R 	Headlamp (HI) circuit Refer to EXL-36 .	
	Both sides	Symptom diagnosis "BOTH SIDE HEADLAMPS DO NOT SWITCH TO HIGH BEAM" Refer to EXL-134 .		
High beam indicator lamp is not turned ON. (Headlamp switches to the high beam.)		<ul style="list-style-type: none"> Combination meter BCM 	<ul style="list-style-type: none"> Combination meter. Data monitor "HI-BEAM IND". BCM (HEAD LAMP) Active test "HEADLAMP". 	
Headlamp does not switch to the low beam.	One side	Front combination lamp (Low beam relay)	—	
	Both sides	<ul style="list-style-type: none"> Combination switch (lighting and turn signal switch) Harness between the combination switch (lighting and turn signal switch) and BCM BCM 	Combination switch (lighting and turn signal switch) Refer to BCS-34 .	
		High beam request signal	IPDM E/R	IPDM E/R Data monitor "HL HI REQ".
		IPDM E/R	—	—
Headlamp does not turn ON.	One side	<ul style="list-style-type: none"> Fuse Bulb Harness between IPDM E/R and the front combination lamp Front combination lamp IPDM E/R 	Headlamp (LO) circuit. Refer to EXL-39 .	
	Both sides	Symptom diagnosis "BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON" Refer to EXL-135 , "Description".		
Headlamp does not turn OFF.	When the ignition switch is turned ON	<ul style="list-style-type: none"> BCM Combination switch (lighting and turn signal switch) 	Combination switch (lighting and turn signal switch). Refer to BCS-34 .	
Headlamp is not turned ON/OFF with the lighting switch AUTO.	<ul style="list-style-type: none"> Combination switch (lighting and turn signal switch) Harness between the combination switch (lighting and turn signal switch) and BCM BCM 		Combination switch (lighting and turn signal switch). Refer to BCS-34 .	
	<ul style="list-style-type: none"> Optical sensor Harness between the optical sensor and BCM BCM 		Optical sensor. Refer to EXL-56 .	

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

EXTERIOR LIGHTING SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

Symptom	Possible cause	Inspection item	
Daytime light system does not activate.	<ul style="list-style-type: none"> • Either high beam bulb • Parking brake switch • Combination switch (lighting and turn signal switch) • BCM • IPDM E/R • Daytime light relay • Harness between IPDM E/R and daytime light relay. 	Daytime light system description. Refer to EXL-11. "System Diagram" .	
Front fog lamp is not turned ON.	One side	<ul style="list-style-type: none"> • Front fog lamp bulb • Harness between IPDM E/R and the front combination lamp • Front combination lamp • IPDM E/R 	Front fog lamp circuit. Refer to EXL-42 .
	Both side	Symptom diagnosis "BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON" Refer to EXL-137 .	
Parking lamp is not turned ON.	One side	<ul style="list-style-type: none"> • Fuse • Parking lamp bulb • Harness between IPDM E/R and the front/rear combination lamp • Front/rear combination lamp • IPDM E/R 	Parking lamp circuit. Refer to EXL-44 .
	Both sides	Symptom diagnosis "PARKING, LICENSE PLATE AND TAIL LAMPS ARE NOT TURNED ON" Refer to EXL-136 .	
Turn signal lamp does not blink.	Indicator lamp is normal. (The applicable side performs the high flasher activation).	<ul style="list-style-type: none"> • Harness between BCM and each turn signal lamp • Turn signal lamp bulb • Door mirror (if equipped with turn signals in the door mirrors) 	Turn signal lamp circuit. Refer to EXL-50 .
Turn signal indicator lamp does not blink.	One side	Combination meter	—
	Both sides (Always)	<ul style="list-style-type: none"> • Turn signal indicator lamp signal • Combination meter • BCM 	<ul style="list-style-type: none"> • Combination meter. Data monitor "TURN IND". • BCM (FLASHER) Active test "FLASHER".
	Both sides (Does blink when activating the hazard warning lamp with the ignition switch OFF)	<ul style="list-style-type: none"> • The combination meter power supply and the ground circuit • Combination meter 	Combination meter. Power supply and the ground circuit Refer to MWI-33 .

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

NORMAL OPERATING CONDITION

Description

INFOID:000000005387317

AUTO LIGHT SYSTEM

The auto light system may not turn the headlamp ON/OFF immediately after passing a dark area or a bright area (short tunnel, sky bridge, shadowed area etc.). This is normal.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

BOTH SIDE HEADLAMPS DO NOT SWITCH TO HIGH BEAM

< SYMPTOM DIAGNOSIS >

BOTH SIDE HEADLAMPS DO NOT SWITCH TO HIGH BEAM

Description

INFOID:000000005683109

The headlamps (both sides) do not switch to high beam when the combination switch (lighting and turn signal switch) is in the HI or PASS setting.

Diagnosis Procedure

INFOID:000000005683110

1.COMBINATION SWITCH (LIGHTING AND TURN SIGNAL SWITCH) INSPECTION

Check the combination switch (lighting and turn signal switch). Refer to [BCS-34. "Diagnosis Procedure"](#).

Is the combination switch (lighting and turn signal switch) normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning part.

2.CHECK HEADLAMP (HI) REQUEST SIGNAL INPUT

CONSULT-III DATA MONITOR

1. Select "HL HI REQ" of IPDM E/R DATA MONITOR item.

2. With operating the combination switch (lighting and turn signal switch), check the monitor status.

Monitor item	Condition		Monitor status
HL HI REQ	Combination switch (lighting and turn signal switch) (2ND)	HI or PASS	ON
		Except for HI or PASS	OFF

Is the item status normal?

YES >> GO TO 3.

NO >> Replace BCM. Refer to [BCS-53. "Removal and Installation"](#).

3.HEADLAMP (HI) CIRCUIT INSPECTION

Check the headlamp (HI) circuit. Refer to [EXL-36. "Description"](#).

Is the headlamp (HI) circuit normal?

YES >> Replace IPDM E/R. Refer to [PCS-30. "Removal and Installation of IPDM E/R"](#).

NO >> Repair or replace the malfunctioning part.

BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON

Description

INFOID:000000005683111

The headlamps (both sides) do not turn ON in any combination switch (lighting and turn signal switch) setting.

Diagnosis Procedure

INFOID:000000005683112

1.COMBINATION SWITCH (LIGHTING AND TURN SIGNAL SWITCH) INSPECTION

Check the combination switch (lighting and turn signal switch). Refer to [BCS-34, "Description"](#).

Is the combination switch (lighting and turn signal switch) normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning part.

2.CHECK HEADLAMP (LO) REQUEST SIGNAL INPUT

CONSULT-III DATA MONITOR

1. Select "HL LO REQ" of IPDM E/R DATA MONITOR item.

2. With operating the combination switch (lighting and turn signal switch), check the monitor status.

Monitor item	Condition	Monitor status	
HL LO REQ	Combination switch (lighting and turn signal switch)	2ND	ON
		OFF	OFF

Is the item status normal?

YES >> GO TO 3.

NO >> Replace BCM. Refer to [BCS-53, "Removal and Installation"](#).

3.HEADLAMP (LO) CIRCUIT INSPECTION

Check the headlamp (LO) circuit. Refer to [EXL-39, "Description"](#).

Is the headlamp (LO) circuit normal?

YES >> Replace IPDM E/R. Refer to [PCS-30, "Removal and Installation of IPDM E/R"](#).

NO >> Repair or replace the malfunctioning part.

A
B
C
D
E
F
G
H
I
J
K

EXL

M
N
O
P

PARKING, LICENSE PLATE AND TAIL LAMPS ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

PARKING, LICENSE PLATE AND TAIL LAMPS ARE NOT TURNED ON

Description

INFOID:000000005683113

The parking, license plate and tail lamps do not turn ON in with any combination switch (lighting and turn signal switch) setting.

Diagnosis Procedure

INFOID:000000005683114

1.COMBINATION SWITCH (LIGHTING AND TURN SIGNAL SWITCH) INSPECTION

Check the combination switch (lighting and turn signal switch). Refer to [BCS-34. "Description"](#).

Is the combination switch (lighting and turn signal switch) normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning part.

2.CHECK TAIL LAMP RELAY REQUEST SIGNAL INPUT

CONSULT-III DATA MONITOR

1. Select "TAIL & CLR REQ" of IPDM E/R DATA MONITOR item.

2. With operating the combination switch (lighting and turn signal switch), check the monitor status.

Monitor item	Condition	Monitor status	
TAIL & CLR REQ	Combination switch (lighting and turn signal switch)	1ST	ON
		OFF	OFF

Is the item status normal?

YES >> GO TO 3.

NO >> Replace BCM. Refer to [BCS-53. "Removal and Installation"](#).

3.PARK LAMP CIRCUIT INSPECTION

Check the parking lamp circuit. Refer to [EXL-44. "Description"](#).

Is the tail lamp circuit normal?

YES >> Replace IPDM E/R. Refer to [PCS-30. "Removal and Installation of IPDM E/R"](#).

NO >> Repair or replace the malfunctioning part.

BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON

Description

INFOID:000000005683115

The front fog lamps do not turn ON in any combination switch (lighting and turn signal switch) setting.

Diagnosis Procedure

INFOID:000000005683116

1.COMBINATION SWITCH (LIGHTING AND TURN SIGNAL SWITCH) INSPECTION

Check the combination switch (lighting and turn signal switch). Refer to [BCS-34, "Description"](#).

Is the combination switch (lighting and turn signal switch) normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning part.

2.CHECK FRONT FOG LAMP REQUEST SIGNAL INPUT

CONSULT-III DATA MONITOR

1. Select "FR FOG REQ" of IPDM E/R DATA MONITOR item.

2. With operating the combination switch (lighting and turn signal switch), check the monitor status.

Monitor item	Condition	Monitor status	
FR FOG REQ	Combination switch (lighting and turn signal switch) (2ND)	ON	ON
		OFF	OFF

Is the item status normal?

YES >> GO TO 3.

NO >> Replace BCM. Refer to [BCS-53, "Removal and Installation"](#).

3.FRONT FOG LAMP CIRCUIT INSPECTION

Check the front fog lamp circuit. Refer to [EXL-42, "Description"](#).

Is the front fog lamp circuit normal?

YES >> Replace IPDM E/R. Refer to [PCS-30, "Removal and Installation of IPDM E/R"](#).

NO >> Repair or replace the malfunctioning part.

A
B
C
D
E
F
G
H
I
J
K

EXL

M
N
O
P

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005708572

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

HEADLAMP


< ON-VEHICLE REPAIR >

ON-VEHICLE REPAIR

HEADLAMP

Aiming Adjustment

INFOID:000000005387326

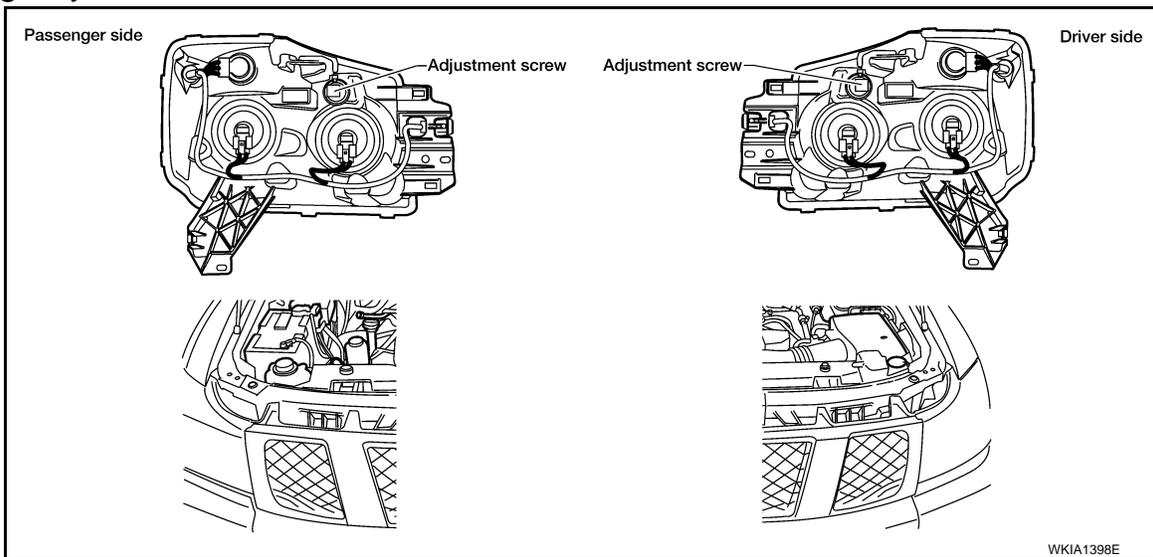

NOTE:

- For details, refer to the regulations in your area.
- If vehicle front body has been repaired and /or the headlamp assembly has been replaced, check headlamp aiming.
- Place vehicle and screen on level surface.
 - Before performing aiming adjustment, check the following:
 - Ensure all tires are inflated to correct pressure.
 - Ensure there is no load in vehicle other than the driver (or equivalent weight placed in driver's position). Coolant and engine oil filled to correct level, and fuel tank full.
 - Confirm spare tire, jack and tools are properly stowed.
 - Aim each headlamp individually and ensure other headlamp beam pattern is blocked from screen.
 - Use adjusting screw to perform aiming adjustment.

HEADLAMP AIMING


A
B
C
D
E
F
G
H
I
J
K

EXL

M
N
O
P

HEADLAMP

< ON-VEHICLE REPAIR >

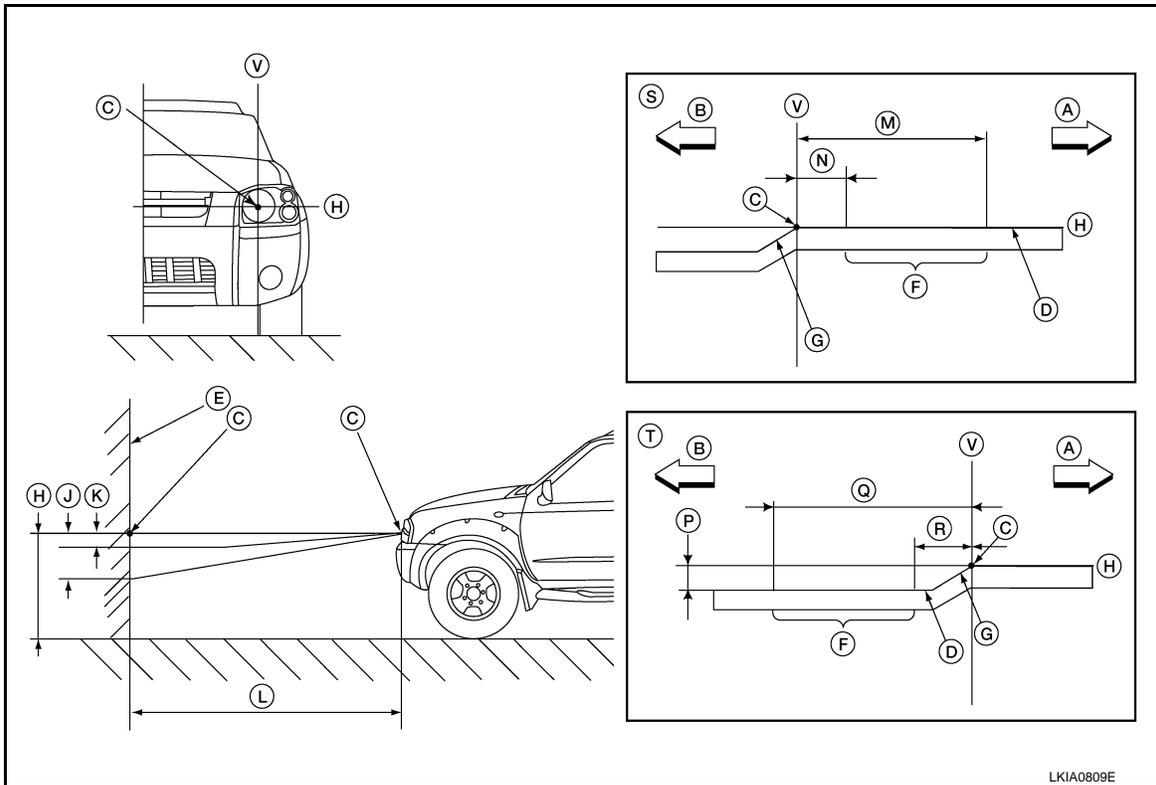

- | | | |
|-------------------------------------|---------------------------------------|--|
| A. Right | B. Left | C. Center of headlamp bulb (H-V point) |
| D. Cutoff line | E. Screen | F. Aim evaluation segment |
| G. Step | H. Horizontal center line of headlamp | J. 103 mm (4.06 in.) |
| K. 37 mm (1.46 in.) | L. 7.62 m (25 ft.) | M. 399 mm (15.71 in.) |
| N. 133 mm (5.24 in.) | P. 53.2 mm (2.09 in.) | Q. 466 mm (18.35 in.) |
| R. 200 mm (7.87 in.) | S. RH headlamp aiming screen | T. LH headlamp aiming screen |
| V. Vertical center line of headlamp | | |

NOTE:

Basic illuminating area for adjustment should be within the range shown on the aiming chart. Adjust headlamps accordingly.

LOW BEAM AND HIGH BEAM

1. Turn headlamp low beam on.
2. Use adjusting screw to perform aiming adjustment.

Bulb Replacement

INFOID:000000005387327

WARNING:

Do not touch bulb by hand right after being turned off. Burning may result.

CAUTION:

- Turn headlamp switch OFF before disconnecting headlamp harness connector.
- Do not touch the glass of bulb directly by hand. Keep grease and other oily substances away from it.
- Do not leave bulb out of front combination lamp assembly for a long time because dust, moisture, smoke, etc. may affect the performance of the lamp. When replacing headlamp bulb, be sure to replace it with a new one.

HEADLAMP (OUTER SIDE), FOR LOW BEAM

Removal

1. Remove the combination lamp assembly. Refer to [EXL-141, "Removal and Installation"](#).
2. Turn the bulb socket counterclockwise and remove bulb.

HEADLAMP

< ON-VEHICLE REPAIR >

Installation

Installation is in the reverse order of removal.

HEADLAMP (INNER SIDE), FOR HIGH BEAM

Removal

1. Remove the combination lamp assembly. Refer to [EXL-141, "Removal and Installation"](#).
2. Turn the bulb socket counterclockwise and remove bulb.

Installation

Installation is in the reverse order of removal.

TURN SIGNAL/PARKING LAMP (FRONT)

Removal

1. Remove the combination lamp assembly. Refer to [EXL-141, "Removal and Installation"](#).
2. Turn the bulb socket counterclockwise to unlock.
3. Pull the bulb to remove from the socket.

Installation

Installation is in the reverse order of removal.

SIDE MARKER LAMP (FRONT)

Removal

1. Remove the combination lamp assembly. Refer to [EXL-141, "Removal and Installation"](#).
2. Turn the side marker lamp (front) bulb socket counterclockwise and remove side marker lamp (front) bulb socket.
3. Pull to remove side marker lamp (front) from the side marker lamp (front) bulb socket.

Installation

Installation is in the reverse order of removal.

Removal and Installation

INFOID:000000005387328

COMBINATION LAMP ASSEMBLY (FRONT)

WARNING:


- Do not touch bulb by hand right after being turned off. Burning may result.

CAUTION:

- Turn headlamp switch OFF before disconnecting headlamp harness connector.
- Do not touch the glass of bulb directly by hand. Keep grease and other oily substances away from it.
- Do not leave bulb out of combination lamp assembly (front) for a long time because dust, moisture, smoke, etc. may affect the performance of the lamp. When replacing bulb, be sure to replace it with a new one.

Removal

1. Remove the front grille. Refer to [EXT-17, "Removal and Installation"](#).
2. Remove the bolts (A), disconnect the electrical connectors, and remove the front combination lamp assembly (1).

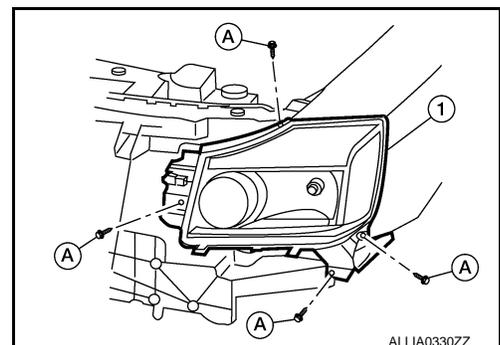

Installation

Installation is in the reverse order of removal.


HEADLAMP

< ON-VEHICLE REPAIR >

Disassembly and Assembly

INFOID:000000005387329

FRONT COMBINATION LAMP ASSEMBLY

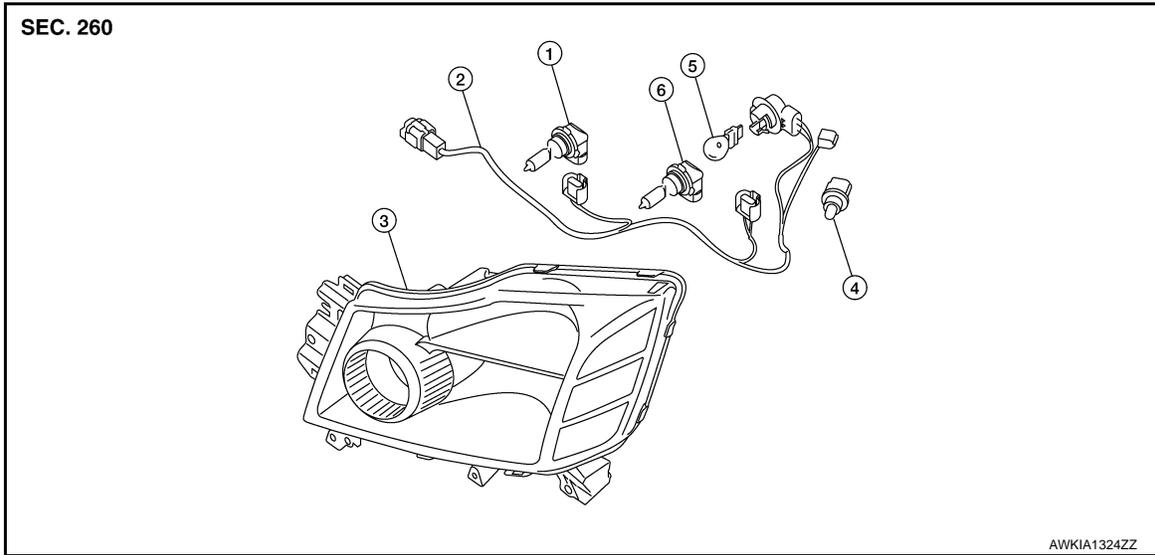

- | | | |
|----------------------------------|--|------------------------------|
| 1. Headlamp bulb (high beam) | 2. Wiring harness assembly (inner) | 3. Combination lamp assembly |
| 4. Side marker lamp (front) bulb | 5. Turn signal/parking lamp (front) bulb | 6. Headlamp bulb (low beam) |

Disassembly

1. Turn high beam bulb counterclockwise to unlock and remove high beam bulb.
2. Turn low beam bulb counterclockwise to unlock and remove low beam bulb.
3. Turn turn signal/parking lamp (front) bulb socket counterclockwise to unlock and remove turn signal/parking lamp (front) bulb.
4. Turn side marker lamp (front) bulb socket counterclockwise to unlock and remove side marker lamp (front) bulb.

Assembly

Assembly is in the reverse order of disassembly.

AUTO LIGHT SYSTEM

< ON-VEHICLE REPAIR >

AUTO LIGHT SYSTEM


Removal and Installation

INFOID:000000005387330

OPTICAL SENSOR

Removal

1. Remove defroster grille. Refer to [VTL-24, "Component"](#).
2. Disconnect the optical sensor connector.
3. Turn the optical sensor counterclockwise to remove it from defroster grille.

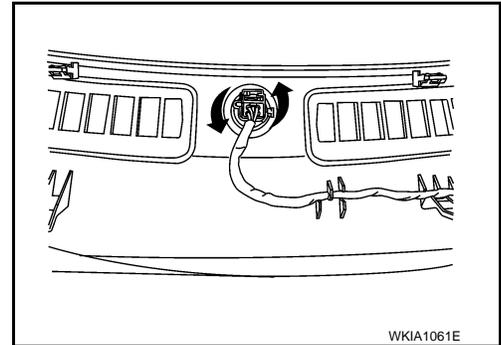

Installation

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

FRONT FOG LAMP

< ON-VEHICLE REPAIR >

FRONT FOG LAMP

Aiming Adjustment

INFOID:000000005387331


The fog lamp is a semi-sealed beam type which uses a replaceable halogen bulb. Before performing aiming adjustment, make sure of the following.

- Keep all tires inflated to correct pressure.
- Place vehicle on level ground.
- See that vehicle is unloaded (except for full levels of coolant, engine oil and fuel, and spare tire, jack, and tools). Have the driver or equivalent weight placed in driver seat.


Adjust aiming in the vertical direction by turning the adjustment screw.

NOTE:


Access adjustment screw from underneath front bumper. Use a T-3 (3 mm) Torx® bit or a 3 mm allen wrench to adjust. Turn screw clockwise to raise pattern and counterclockwise to lower pattern.

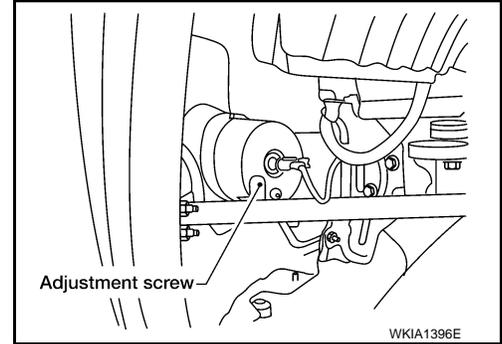

1. Set the distance between the screen and the center of the fog lamp lens as shown.
2. Turn front fog lamps ON.

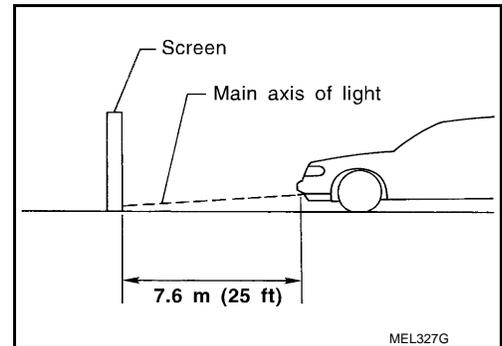

3. Adjust front fog lamps using adjusting screw so that the top edge of the high intensity zone is 100 mm (4 in) below the height of the fog lamp centers as shown.
 - When performing adjustment, if necessary, cover the headlamps and opposite fog lamp.

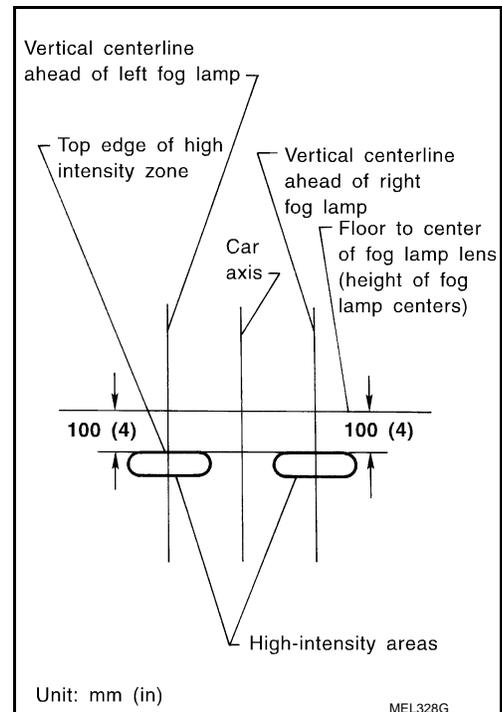

FRONT FOG LAMP

< ON-VEHICLE REPAIR >

Bulb Replacement


INFOID:000000005387332

Removal

1. Disconnect electrical connector.
2. Turn the bulb counterclockwise to remove it.

CAUTION:

- Do not touch the glass of bulb directly by hand. Keep grease and other oily substances away from it. Do not touch bulb by hand while it is lit or right after being turned off. Burning may result.
- Do not leave bulb out of fog lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of fog lamp. When replacing bulb, be sure to replace it with new one.

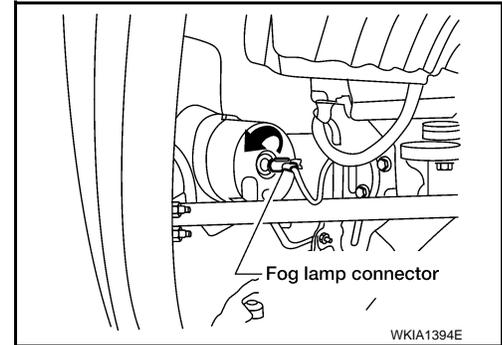

Installation

Installation is in the reverse order of removal.

Removal and Installation

INFOID:000000005387333


The fog lamp is a semi-sealed beam type which uses a replaceable halogen bulb.

CAUTION:

- Do not leave fog lamp assembly without bulb for a long period of time. Dust, moisture, smoke, etc. entering the fog lamp body may affect the performance. Remove the bulb from the headlamp assembly just before replacement bulb is installed.
- Grasp only the plastic base when handling the bulb. Never touch the glass envelope. Touching the glass could significantly affect the bulb life and/or fog lamp performance.

Removal

1. Disconnect electrical connector.
2. Remove nut and pull fog lamp out of front fascia.

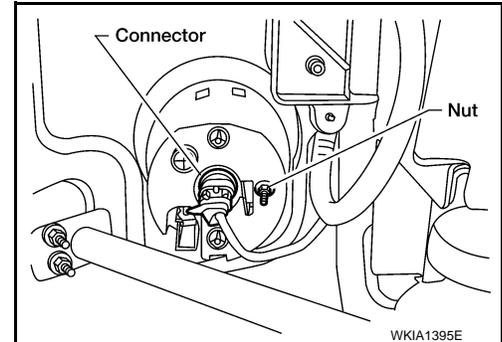

Installation

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

LIGHTING & TURN SIGNAL SWITCH

< ON-VEHICLE REPAIR >


LIGHTING & TURN SIGNAL SWITCH

Removal and Installation

INFOID:000000005387334

REMOVAL

1. Remove lower instrument panel LH and the steering column cover. Refer to [IP-10, "Exploded View"](#).
2. While pressing tabs, pull lighting and turn signal switch toward driver door and disconnect from the base.

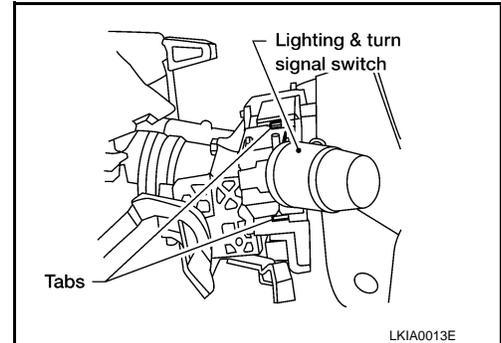

INSTALLATION

Installation is in the reverse order of removal.

HAZARD SWITCH

< ON-VEHICLE REPAIR >


HAZARD SWITCH

Removal and Installation

INFOID:000000005387335

Removal

1. Remove cluster lid C. Refer to [IP-13. "Removal and Installation"](#).
2. While pressing the tab, push out the hazard switch.

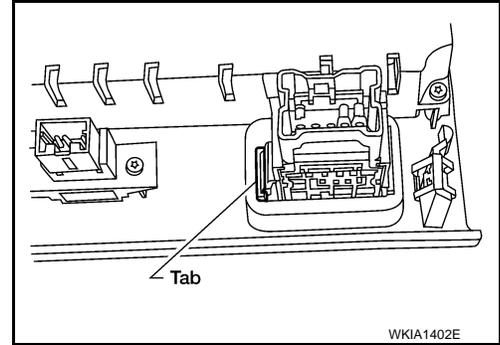

Installation

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

HIGH-MOUNTED STOP LAMP

< ON-VEHICLE REPAIR >

HIGH-MOUNTED STOP LAMP

Bulb Replacement

INFOID:000000005387336

HIGH-MOUNTED STOP LAMP

Removal

1. Remove the high-mounted stop lamp. Refer to [EXL-148. "Removal and Installation"](#).
2. Turn bulb socket counter clockwise to remove it from lamp housing.
3. Pull bulb from socket.

Installation

Installation is in the reverse order of removal.


Removal and Installation

INFOID:000000005387337

HIGH-MOUNTED STOP LAMP

Removal

1. Remove high-mounted stop lamp access covers(3).
2. Disconnect high-mounted stop lamp electrical connector.
3. Remove high-mounted stop lamp nuts(2).
4. Remove high-mounted stop lamp(1).

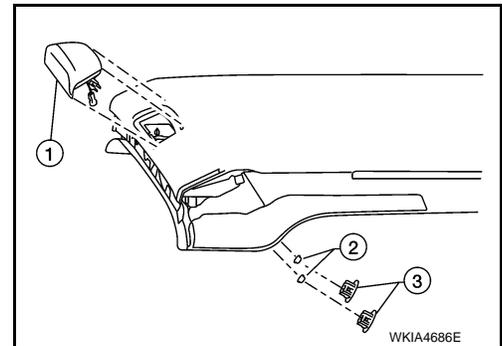

Installation

Installation is in the reverse order of removal.

REAR COMBINATION LAMP

< ON-VEHICLE REPAIR >


REAR COMBINATION LAMP

Bulb Replacement

INFOID:000000005387338

REMOVAL

1. Open the tail gate.
2. Remove rear combination lamp bolts.
3. Pull rear combination lamp to remove from the vehicle.
4. Turn the bulb socket counterclockwise and remove bulb.

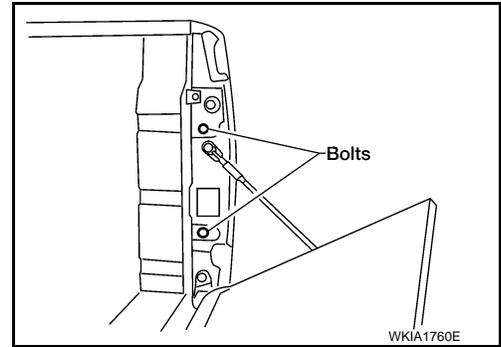

INSTALLATION


Installation is in the reverse order of removal.

Removal and Installation

INFOID:000000005387339

Removal

1. Open the tail gate.
2. Remove rear combination lamp bolts.
3. Pull rear combination lamp to remove from the vehicle.
4. Disconnect rear combination lamp connector.

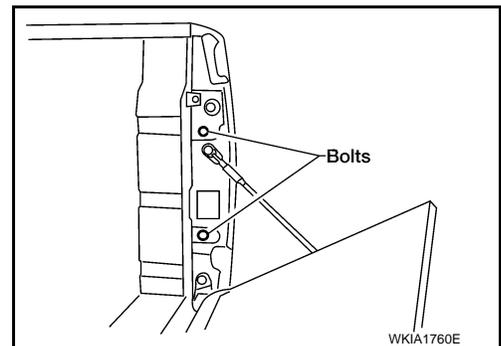

Installation

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Headlamp

INFOID:000000005387340

Item	Wattage (W)*
Low	51/55
High	60/65

*: Always check with the Parts Department for the latest parts information.

Exterior Lamp

INFOID:000000005387341

Item	Wattage (W)*	
Front combination lamp	Turn signal/parking lamp (front)	27/8
	Side marker (front)	3.8
Rear combination lamp	Stop/tail lamp	27/7
	Turn signal lamp	27
	Back-up lamp	16
Cargo lamp (tailgate)	16	
Fog lamp	37.5	
License plate lamp	5	
High-mounted stop lamp / Cargo lamp	12.8	
Side turn signal	LED	
Puddle lamp	8	

*: Always check with the Parts Department for the latest parts information.