

SECTION **BRC**

BRAKE CONTROL SYSTEM

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

CONTENTS

VDC/TCS/ABS	
BASIC INSPECTION	4
DIAGNOSIS AND REPAIR WORKFLOW	4
Work Flow	4
Diagnostic Work Sheet	7
INSPECTION AND ADJUSTMENT	8
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT	8
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description	8
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement	8
ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION	8
ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description	8
ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement	8
CALIBRATION OF DECEL G SENSOR	9
CALIBRATION OF DECEL G SENSOR : Description	9
CALIBRATION OF DECEL G SENSOR : Special Repair Requirement	9
SYSTEM DESCRIPTION	11
VDC	11
System Diagram	11
Hydraulic Circuit Diagram	12
System Description	12
Component Parts Location	13
Component Description	14
TCS	15
System Diagram	15
System Description	15
Component Parts Location	16
Component Description	17
ABS	18
System Diagram	18
System Description	18
Component Parts Location	19
Component Description	20
EBD	21
System Diagram	21
System Description	21
Component Parts Location	22
Component Description	23
DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]	24
CONSULT Function (ABS)	24
DTC/CIRCUIT DIAGNOSIS	29
C1101, C1102, C1103, C1104 WHEEL SENSOR	29
DTC Logic	29
Diagnosis Procedure	29
C1105, C1106, C1107, C1108 WHEEL SENSOR	34
DTC Logic	34
Diagnosis Procedure	34
C1109 POWER AND GROUND SYSTEM	36
DTC Logic	36
Diagnosis Procedure	36
C1110, C1170 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)	38
DTC Logic	38
Diagnosis Procedure	38
Special Repair Requirement	38

C1111 ABS MOTOR, MOTOR RELAY SYSTEM	39	C1155 BR FLUID LEVEL LOW	63
Description	39	DTC Logic	63
DTC Logic	39	Diagnosis Procedure	63
Diagnosis Procedure	39	Component Inspection	64
Component Inspection	40	C1156 ST ANG SEN COM CIR	65
Special Repair Requirement	40	Description	65
C1113, C1145, C1146 YAW RATE/SIDE/DECEL G SENSOR	41	DTC Logic	65
Description	41	Diagnosis Procedure	65
DTC Logic	41	C1160 DECEL G SEN SET	66
Diagnosis Procedure	41	Description	66
Component Inspection	42	DTC Logic	66
Special Repair Requirement	42	Diagnosis Procedure	66
C1115 ABS SENSOR [ABNORMAL SIGNAL] ..	43	C1163 ST ANGLE SEN SAFE	67
DTC Logic	43	Description	67
Diagnosis Procedure	43	DTC Logic	67
C1116 STOP LAMP SWITCH	46	Diagnosis Procedure	67
DTC Logic	46	C1164, C1165, C1166, C1167 CV/SV SYSTEM	68
Diagnosis Procedure	46	Description	68
C1120, C1122, C1124, C1126 IN ABS SOL	48	DTC Logic	68
Description	48	Diagnosis Procedure	68
DTC Logic	48	Component Inspection	69
Diagnosis Procedure	48	Special Repair Requirement	70
Component Inspection	49	C1178, C1181, C1184, C1189 ABS ACTIVE BOOSTER	71
Special Repair Requirement	49	Description	71
C1121, C1123, C1125, C1127 OUT ABS SOL ..	51	DTC Logic	71
Description	51	Diagnosis Procedure	71
DTC Logic	51	Component Inspection	72
Diagnosis Procedure	51	Special Repair Requirement	72
Component Inspection	52	C1179 ABS DELTA S SEN NG	74
Special Repair Requirement	52	Description	74
C1130, C1131, C1132, C1133, C1136 ENGINE SIGNAL	54	DTC Logic	74
DTC Logic	54	Diagnosis Procedure	74
Diagnosis Procedure	54	Component Inspection	75
C1140 ACTUATOR RLY	56	Special Repair Requirement	75
Description	56	C1187 DIFFERENTIAL LOCK CONTROL UNIT	76
DTC Logic	56	Description	76
Diagnosis Procedure	56	DTC Logic	76
Component Inspection	57	Diagnosis Procedure	76
Special Repair Requirement	57	U1000 CAN COMM CIRCUIT	77
C1142 PRESS SENSOR	58	Description	77
DTC Logic	58	DTC Logic	77
Diagnosis Procedure	58	Diagnosis Procedure	77
C1143, C1144 STEERING ANGLE SENSOR ...	60	VDC OFF SWITCH	78
Description	60	Description	78
DTC Logic	60	Component Function Check	78
Diagnosis Procedure	60	Diagnosis Procedure	78
Component Inspection	61	Component Inspection	79
Special Repair Requirement	61	Special Repair Requirement	79

ABS WARNING LAMP	80	Diagnosis Procedure	104	
Description	80			A
Component Function Check	80	ABS FUNCTION DOES NOT OPERATE	105	
Diagnosis Procedure	80	Diagnosis Procedure	105	
Special Repair Requirement	80			B
BRAKE WARNING LAMP	81	PEDAL VIBRATION OR ABS OPERATION		
Description	81	SOUND OCCURS	106	
Component Function Check	81	Diagnosis Procedure	106	
Diagnosis Procedure	81			C
Special Repair Requirement	81	VEHICLE JERKS DURING VDC/TCS/ABS		
VDC OFF INDICATOR LAMP	82	CONTROL	107	
Description	82	Diagnosis Procedure	107	
Component Function Check	82			D
Diagnosis Procedure	82	NORMAL OPERATING CONDITION	108	
Special Repair Requirement	83	Description	108	
SLIP INDICATOR LAMP	84	PRECAUTION	109	
Description	84	PRECAUTIONS	109	
Component Function Check	84	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	109	
Diagnosis Procedure	84	Precaution for Brake System	109	
Special Repair Requirement	84	Precaution for Brake Control	110	
ECU DIAGNOSIS INFORMATION	85	Precaution for Procedure without Cowl Top Cover	110	
ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)	85	Precaution for CAN System	110	
Reference Value	85	PREPARATION	112	
Fail-Safe	89	PREPARATION	112	
DTC No. Index	90	Special Service Tool	112	
WIRING DIAGRAM	92	Commercial Service Tool	112	
BRAKE CONTROL SYSTEM - VDC	92	UNIT REMOVAL AND INSTALLATION ...	113	
Wiring Diagram	92	WHEEL SENSORS	113	
SYMPTOM DIAGNOSIS	101	Removal and Installation	113	
VDC/TCS/ABS	101	SENSOR ROTOR	115	
Symptom Table	101	Removal and Installation	115	
EXCESSIVE ABS FUNCTION OPERATION FREQUENCY	102	ACTUATOR AND ELECTRIC UNIT (ASSEMBLY)	116	
Diagnosis Procedure	102	Removal and Installation	116	
UNEXPECTED PEDAL REACTION	103	STEERING ANGLE SENSOR	118	
Diagnosis Procedure	103	Removal and Installation	118	
THE BRAKING DISTANCE IS LONG	104	YAW RATE/SIDE G SENSOR	119	
		Removal and Installation	119	

BRC

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000011562553

PRECAUTIONS FOR DIAGNOSIS


If steering angle sensor, steering system parts, suspension system parts, ABS actuator and electric unit (control unit) have been replaced, or if wheel alignment has been adjusted, be sure to adjust neutral position of steering angle sensor before driving. Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[VDC/TCS/ABS]

OVERALL SEQUENCE

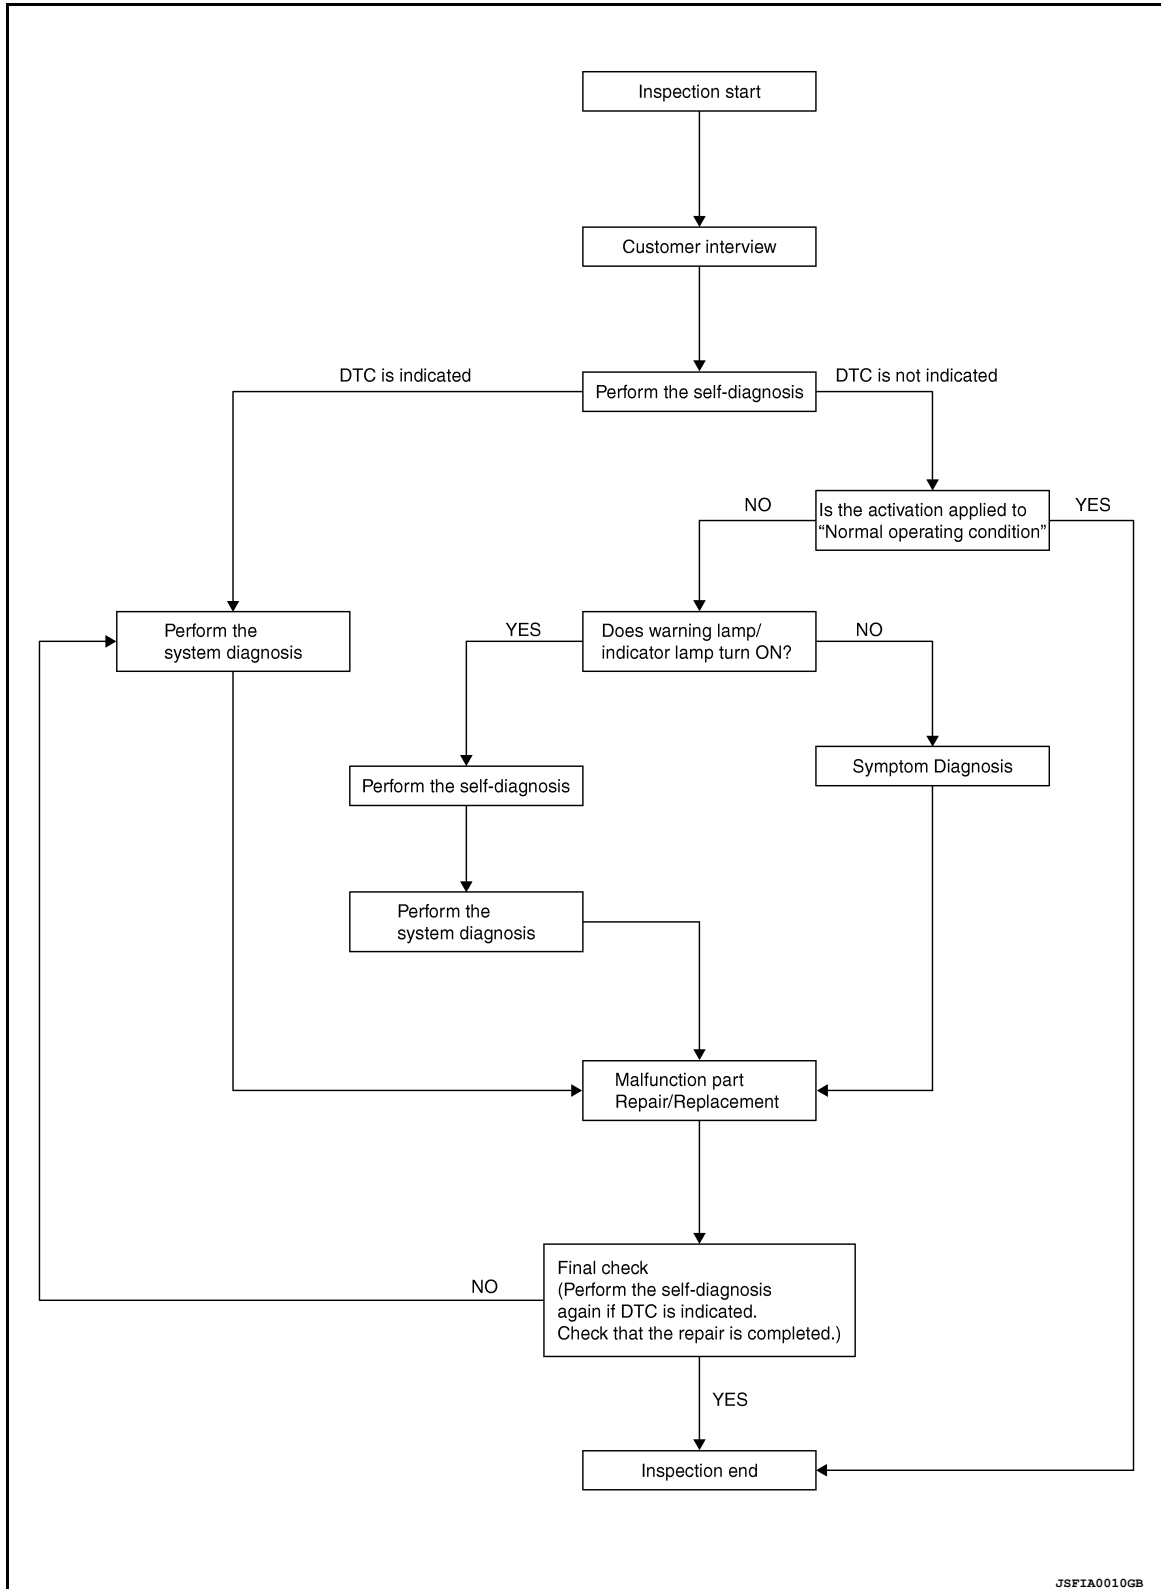

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

DETAILED FLOW

1. COLLECT THE INFORMATION FROM THE CUSTOMER

Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred) using the diagnosis work sheet. Refer to [BRC-7, "Diagnostic Work Sheet"](#).

>> GO TO 2

DIAGNOSIS AND REPAIR WORKFLOW

[VDC/TCS/ABS]

< BASIC INSPECTION >

2. PERFORM THE SELF-DIAGNOSIS

Check the DTC display with the self-diagnosis function. Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).

Is there any DTC displayed?

YES >> GO TO 3

NO >> GO TO 4

3. PERFORM THE SYSTEM DIAGNOSIS

Perform the diagnosis applicable to the displayed DTC. Refer to [BRC-90, "DTC No. Index"](#).

>> GO TO 7

4. CHECK THE SYMPTOM THAT IS NOT CONSIDERED A SYSTEM MALFUNCTION

Check that the symptom is a normal operation that is not considered a system malfunction. Refer to [BRC-108, "Description"](#).

Is the symptom a normal operation?

YES >> Inspection End

NO >> GO TO 5

5. CHECK THE WARNING LAMP AND INDICATOR LAMP FOR ILLUMINATION

Check that the warning lamp and indicator lamp illuminate.

- ABS warning lamp: Refer to [BRC-80, "Description"](#).
- Brake warning lamp: Refer to [BRC-81, "Description"](#).
- VDC OFF indicator lamp: Refer to [BRC-82, "Description"](#).
- SLIP indicator lamp: Refer to [BRC-84, "Description"](#).

Is ON/OFF timing normal?

YES >> GO TO 6

NO >> GO TO 2

6. PERFORM THE DIAGNOSIS BY SYMPTOM

Perform the diagnosis applicable to the symptom.

>> GO TO 7

7. REPAIR OR REPLACE THE MALFUNCTIONING PARTS

Repair or replace the specified malfunctioning parts.

>> GO TO 8

8. FINAL CHECK

Perform the self-diagnosis again, and check that the malfunction is repaired completely. After checking, erase the self-diagnosis memory. Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).

Is no other DTC present and the repair completed?

YES >> Inspection End

NO >> GO TO 3

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[VDC/TCS/ABS]

Diagnostic Work Sheet

INFOID:000000011562554

Customer name MR/MS	Model & Year	VIN	
Engine #	Trans.	Mileage	
Incident Date	Manuf. Date	In Service Date	
Symptoms	<input type="checkbox"/> Noise and vibration (from engine compartment) <input type="checkbox"/> Noise and vibration (from axle)	<input type="checkbox"/> Warning/Indicator activate	<input type="checkbox"/> Firm pedal operation Large stroke pedal operation
	<input type="checkbox"/> TCS dose not work (Drive wheels slip when accelerating)	<input type="checkbox"/> ABS dose not work (Wheels lock when braking)	<input type="checkbox"/> lack of sense of acceleration
Engine conditions	<input type="checkbox"/> When starting <input type="checkbox"/> After starting		
Road conditions	<input type="checkbox"/> Low friction road (<input type="checkbox"/> Snow <input type="checkbox"/> Gravel <input type="checkbox"/> Other) <input type="checkbox"/> Bumps / potholes		
Driving conditions	<input type="checkbox"/> Full-acceleration <input type="checkbox"/> High speed cornering <input type="checkbox"/> Vehicle speed: Greater than 10 km/h (6 MPH) <input type="checkbox"/> Vehicle speed: 10 km/h (6 MPH) or less <input type="checkbox"/> Vehicle is stopped		
Applying brake conditions	<input type="checkbox"/> Suddenly <input type="checkbox"/> Gradually		
Other conditions	<input type="checkbox"/> Operation of electrical equipment <input type="checkbox"/> Shift change <input type="checkbox"/> Other descriptions		

AWFIA1029GB

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[VDC/TCS/ABS]

INSPECTION AND ADJUSTMENT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description

INFOID:0000000011562555

After replacing the ABS actuator and electric unit (control unit), perform the following procedures:

- Neutral position adjustment for the steering angle sensor
- Calibration of the decel G sensor

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement

INFOID:0000000011562556

1. PERFORM THE NEUTRAL POSITION ADJUSTMENT FOR THE STEERING ANGLE SENSOR

Perform the neutral position adjustment for the steering angle sensor.

>> Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#), GO TO 2

2. PERFORM CALIBRATION OF THE DECEL G SENSOR

Perform calibration of the decel G sensor.

>> Refer to [BRC-9. "CALIBRATION OF DECEL G SENSOR : Special Repair Requirement"](#).

ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description

INFOID:0000000011562557

Refer to the table below to determine if adjustment of steering angle sensor neutral position is required.

x: Required –: Not required

Situation	Adjustment of steering angle sensor neutral position
Removing/Installing ABS actuator and electric unit (control unit)	—
Replacing ABS actuator and electric unit (control unit)	x
Removing/Installing steering angle sensor	x
Replacing steering angle sensor	x
Removing/Installing steering components	x
Replacing steering components	x
Removing/Installing suspension components	x
Replacing suspension components	x
Change tires to new ones	—
Tire rotation	—
Adjusting wheel alignment	x

ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement

INFOID:0000000011562558

ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

CAUTION:

To adjust neutral position of steering angle sensor, make sure to use CONSULT (Adjustment cannot be done without CONSULT)

1. ALIGN THE VEHICLE STATUS

Stop vehicle with front wheels in straight-ahead position.

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[VDC/TCS/ABS]

>> GO TO 2

2. PERFORM THE NEUTRAL POSITION ADJUSTMENT FOR THE STEERING ANGLE SENSOR

1. On the CONSULT screen, touch "WORK SUPPORT" and "ST ANGLE SENSOR ADJUSTMENT" in order.
2. Touch "START".

CAUTION:

Do not touch steering wheel while adjusting steering angle sensor.

3. After approximately 10 seconds, touch "END".

NOTE:

After approximately 60 seconds, it ends automatically.

4. Turn ignition switch OFF, then turn it ON again.

CAUTION:

Be sure to perform above operation.

>> GO TO 3

3. CHECK DATA MONITOR

1. Run vehicle with front wheels in straight-ahead position, then stop.
2. Select "DATA MONITOR". Then make sure "STR ANGLE SIG" is within $0 \pm 2.5^\circ$.

Is the steering angle within the specified range?

YES >> GO TO 4

NO >> Perform the neutral position adjustment for the steering angle sensor again, GO TO 1

4. ERASE THE SELF-DIAGNOSIS MEMORY

Erase the self-diagnosis memory of the ABS actuator and electric unit (control unit) and ECM.

- ABS actuator and electric unit (control unit): Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).
- ECM: Refer to [EC-49, "CONSULT Function"](#).

Are the memories erased?

YES >> Inspection End

NO >> Check the items indicated by the self-diagnosis.

CALIBRATION OF DECEL G SENSOR

CALIBRATION OF DECEL G SENSOR : Description

INFOID:000000011562559

Refer to the table below to determine if calibration of the decel G sensor is required.

x: Required –: Not required

Situation	Calibration of decel G sensor
Removing/Installing ABS actuator and electric unit (control unit)	—
Replacing ABS actuator and electric unit (control unit)	x
Removing/Installing steering components	—
Replacing steering components	—
Removing/Installing suspension components	—
Replacing suspension components	—
Change tires to new ones	—
Tire rotation	—
Adjusting wheel alignment	—
Removing/Installing yaw rate/side/decel G sensor	x
Replacing yaw rate/side/decel G sensor	x

CALIBRATION OF DECEL G SENSOR : Special Repair Requirement

INFOID:000000011562560

CALIBRATION OF DECEL G SENSOR

CAUTION:

To calibrate the decel G sensor, make sure to use CONSULT (Calibration cannot be done without CONSULT)

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[VDC/TCS/ABS]

1. ALIGN THE VEHICLE STATUS

Stop vehicle with front wheels in straight-ahead position.

>> GO TO 2

2. PERFORM CALIBRATION OF DECEL G SENSOR

1. On the CONSULT screen, touch "WORK SUPPORT" and "DECEL G SEN CALIBRATION" in order.
2. Touch "START".
3. After approximately 10 seconds, touch "END".

NOTE:

After approximately 60 seconds, it ends automatically.

4. Turn ignition switch OFF, then turn it ON again.

CAUTION:

Be sure to perform above operation.

>> GO TO 3

3. CHECK DATA MONITOR

1. Run vehicle with front wheels in straight-ahead position, then stop.
2. Select "DATA MONITOR". Then make sure "DECEL G-SEN" is within $\pm 0.08G$.

Is the inspection result normal?

YES >> GO TO 4

NO >> Perform calibration of decel G sensor again, GO TO 1

4. ERASE THE SELF-DIAGNOSIS MEMORY

Erase the self-diagnosis memory of the ABS actuator and electric unit (control unit) and ECM.

- ABS actuator and electric unit (control unit): Refer to [BRC-24. "CONSULT Function \(ABS\)"](#).
- ECM: Refer to [EC-49. "CONSULT Function"](#).

Are the memories erased?

YES >> Inspection End


NO >> Check the items indicated by the self-diagnosis.

SYSTEM DESCRIPTION

VDC

System Diagram


INFOID:000000011562561

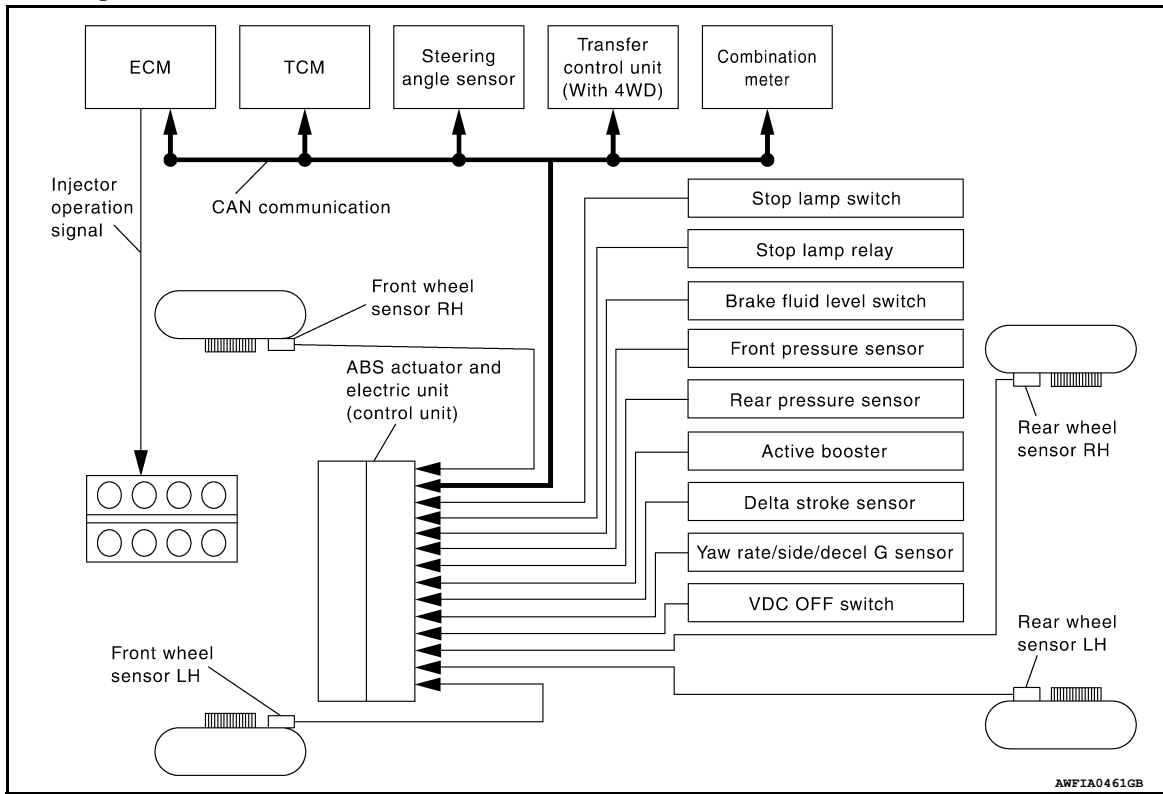

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

Hydraulic Circuit Diagram

INFOID:000000011562562

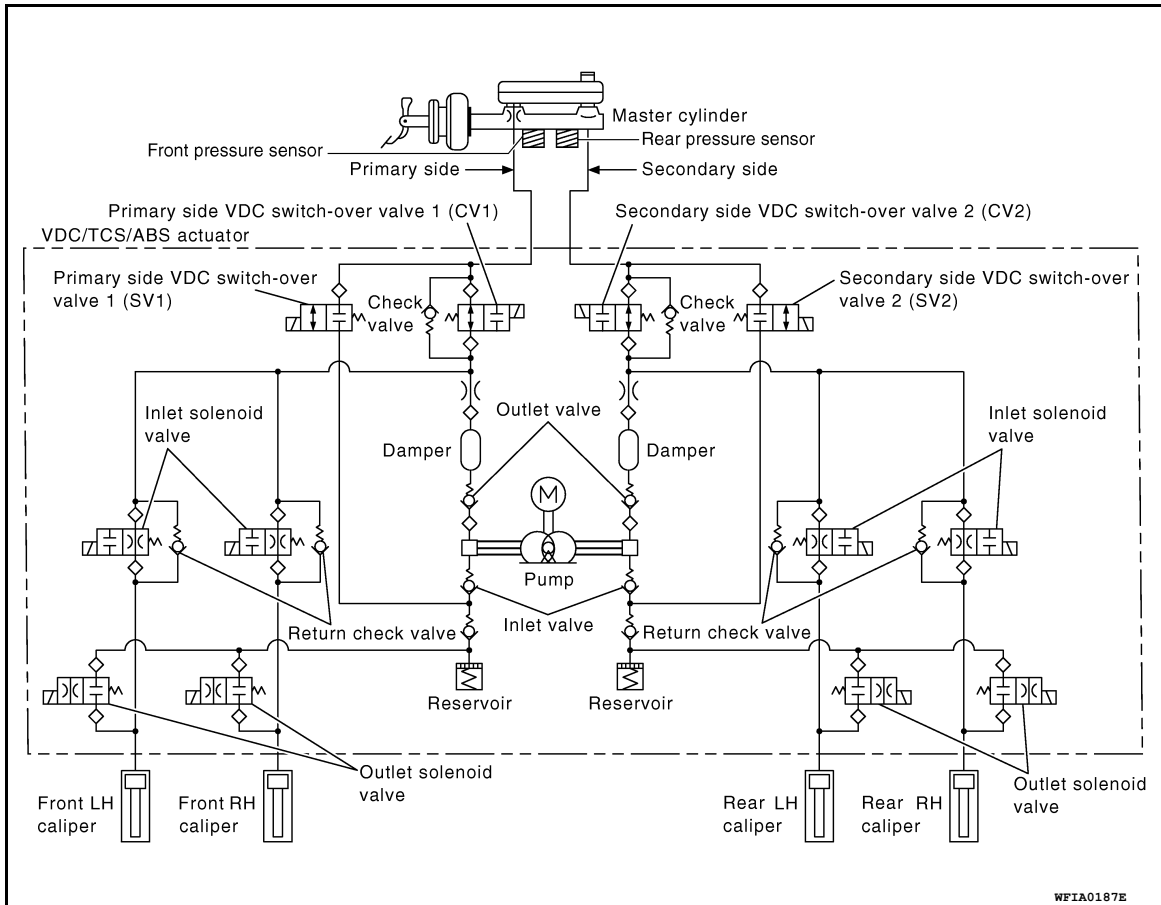











System Description

INFOID:000000011562563

- Vehicle Dynamics Control system detects driver's steering operation amount and brake pedal travel from steering angle sensor and pressure sensors. Using information from yaw rate/side/decel G sensor and wheel sensor, VDC judges driving condition (conditions of under steer and over steer) to improve vehicle driving stability by controlling brake application to 4 wheels and engine output.
- During VDC operation, it informs driver of system operation by flashing SLIP indicator lamp.
- Electrical system diagnosis by CONSULT is available.

Component Parts Location

INFOID:000000011562564

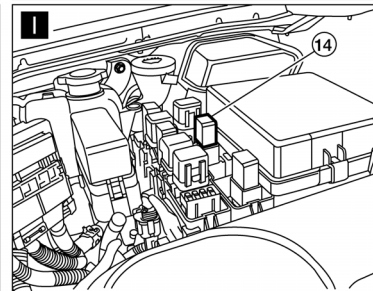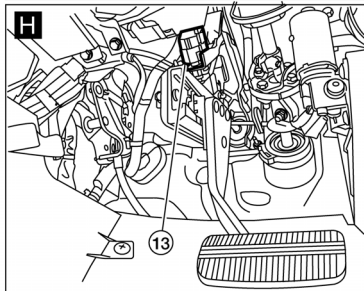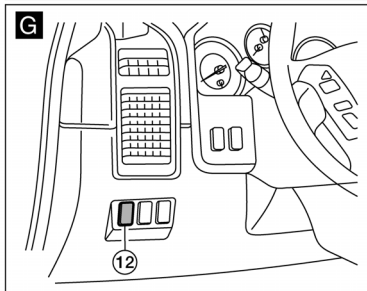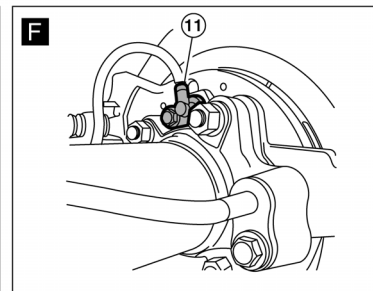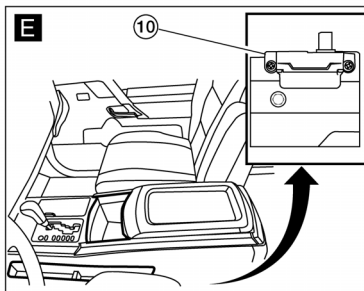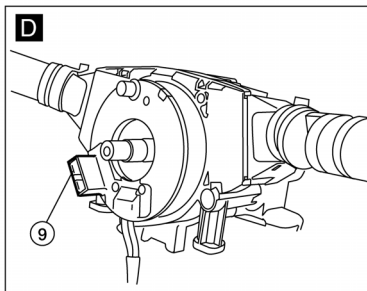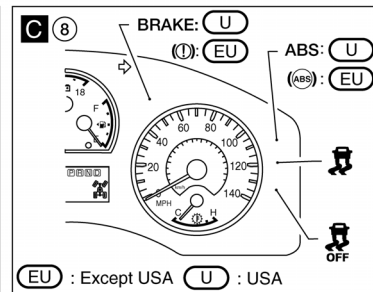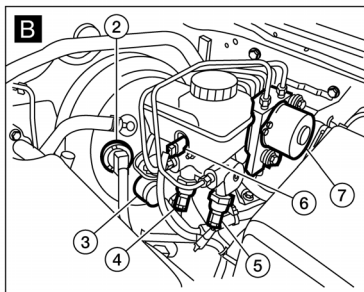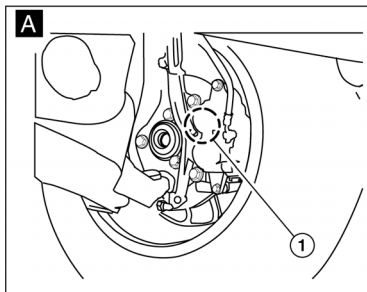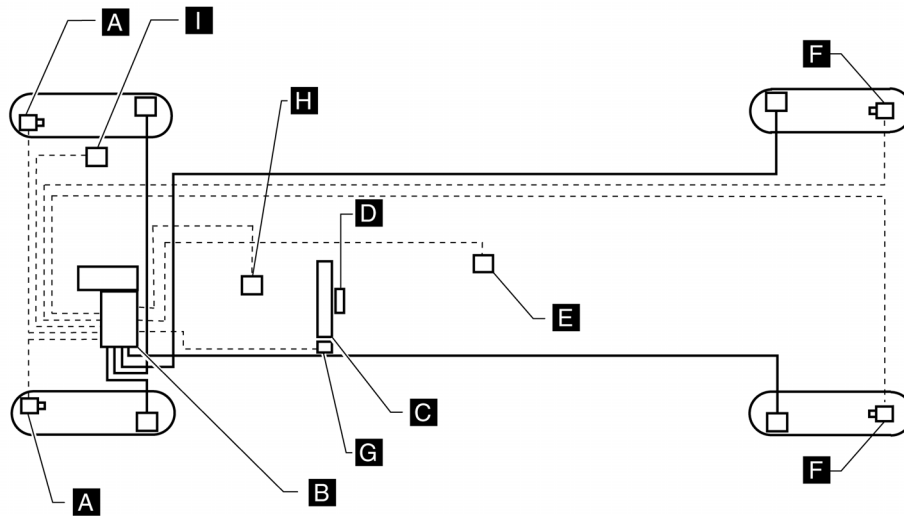

1. Front wheel sensor LH E18
Front wheel sensor RH E117

4. Front pressure sensor E31

7. ABS actuator and electric unit (control unit) E125

2. Delta stroke sensor E114

5. Rear pressure sensor E32

8. Combination meter M24

3. Active booster E49

6. Brake fluid level switch E21

9. Steering angle sensor M17 (view with steering wheel removed)

AWFIA0950GB

- 10. Yaw rate/side/decel G sensor M108
- 11. Rear wheel sensor LH C11
Rear wheel sensor RH C10
- 12. VDC OFF switch M148
- 13. Stop lamp switch E38 (column shift),
E42 (floor shift)
- 14. Stop lamp relay E12

Component Description


INFOID:000000011562565

Component parts		Reference
ABS actuator and electric unit (control unit)	Pump	BRC-39. "Description"
	Motor	
	Actuator relay	BRC-56. "Description"
	Solenoid valve	BRC-48. "Description"
	VDC switch-over valve (CV1, CV2, SV1, SV2)	BRC-68. "Description"
Wheel sensor	BRC-29. "Diagnosis Procedure"	
Yaw rate/side/decel G sensor	BRC-41. "Description"	
Stop lamp switch	BRC-46. "Diagnosis Procedure"	
Front pressure sensor	BRC-58. "Diagnosis Procedure"	
Rear pressure sensor		
Steering angle sensor	BRC-60. "Description"	
Brake fluid level switch	BRC-63. "Diagnosis Procedure"	
Active booster	BRC-71. "Description"	
Delta stroke sensor	BRC-74. "Description"	
VDC OFF switch	BRC-78. "Description"	
ABS warning lamp	BRC-80. "Description"	
Brake warning lamp	BRC-81. "Description"	
VDC OFF indicator lamp	BRC-82. "Description"	
SLIP indicator lamp	BRC-84. "Description"	

TCS

System Diagram

INFOID:000000011562566


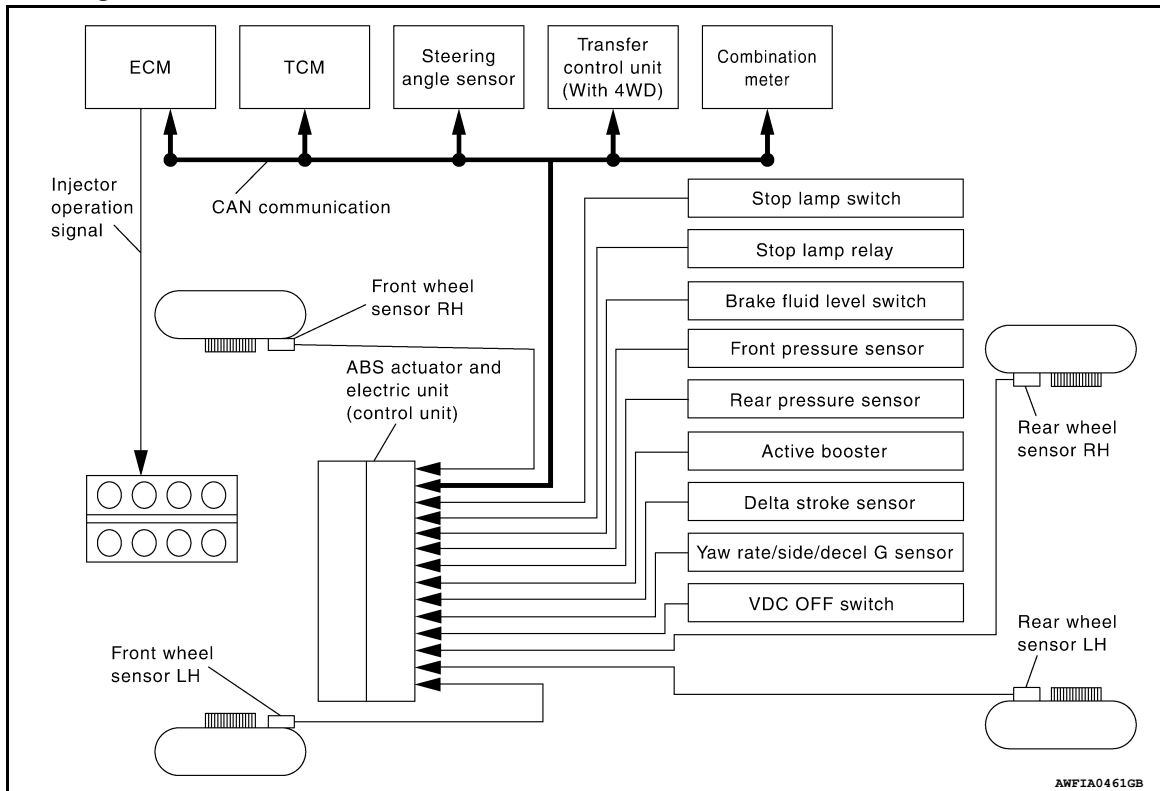


A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

System Description

INFOID:000000011562567

- Traction Control System is a function that electronically controls engine torque, brake fluid pressure and A/T gear position to ensure the optimum slippage ratio at drive wheels by computing wheel speed signals from 4 wheel sensors. When ABS actuator and electric unit (control unit) detects a spin at drive wheels (rear wheels), it compares wheel speed signals from all 4 wheels. At this time, LH and RH rear brake fluid pressure are controlled, while fuel being cut to engine and throttle valve being closed to reduce engine torque by the control unit. Further more, throttle position is continuously controlled to ensure the optimum engine torque at all times.
- During TCS operation, it informs driver of system operation by flashing SLIP indicator lamp.
- Electrical system diagnosis by CONSULT is available.

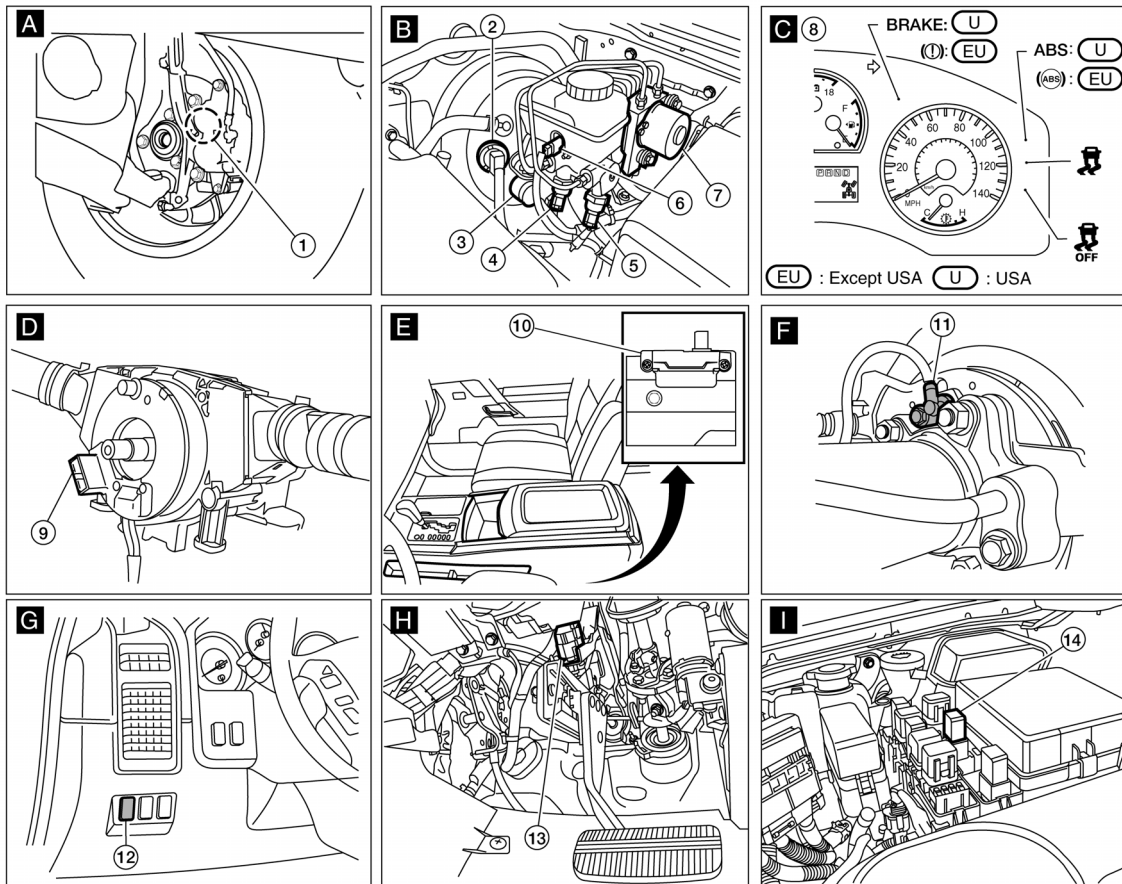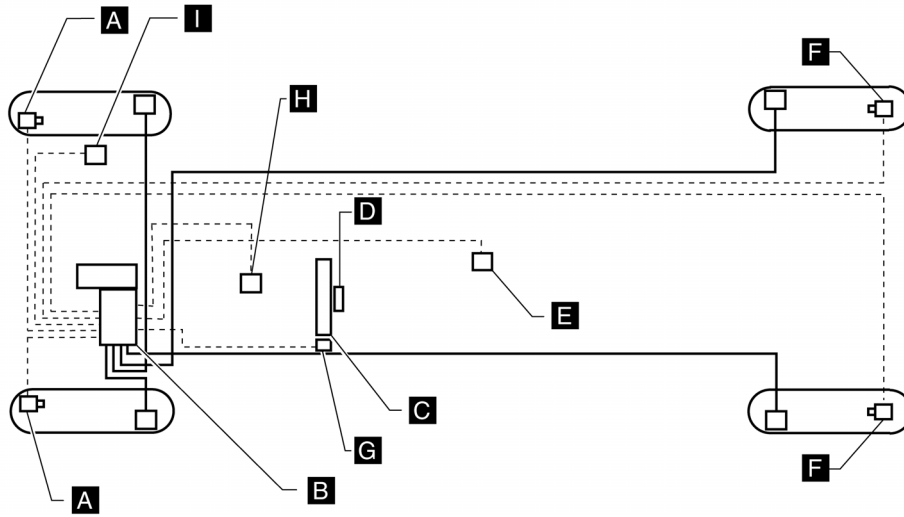

AWF1A0950GB

- | | | |
|--|-----------------------------|---|
| 1. Front wheel sensor LH E18
Front wheel sensor RH E117 | 2. Delta stroke sensor E114 | 3. Active booster E49 |
| 4. Front pressure sensor E31 | 5. Rear pressure sensor E32 | 6. Brake fluid level switch E21 |
| 7. ABS actuator and electric unit (control unit) E125 | 8. Combination meter M24 | 9. Steering angle sensor M17 (view with steering wheel removed) |

< SYSTEM DESCRIPTION >

- 10. Yaw rate/side/decel G sensor M108
- 11. Rear wheel sensor LH C11
Rear wheel sensor RH C10
- 12. VDC OFF switch M148
- 13. Stop lamp switch E38 (column shift),
E42 (floor shift)
- 14. Stop lamp relay E12

Component Description

INFOID:000000011562569


Component parts		Reference
ABS actuator and electric unit (control unit)	Pump	BRC-39, "Description"
	Motor	
	Actuator relay	BRC-56, "Description"
	Solenoid valve	BRC-48, "Description"
	VDC switch-over valve (CV1, CV2, SV1, SV2)	BRC-68, "Description"
Wheel sensor	BRC-29, "Diagnosis Procedure"	
Yaw rate/side/decel G sensor	BRC-41, "Description"	
Stop lamp switch	BRC-46, "Diagnosis Procedure"	
Front pressure sensor	BRC-58, "Diagnosis Procedure"	
Rear pressure sensor		
Steering angle sensor	BRC-60, "Description"	
Brake fluid level switch	BRC-63, "Diagnosis Procedure"	
Active booster	BRC-71, "Description"	
Delta stroke sensor	BRC-74, "Description"	
VDC OFF switch	BRC-78, "Description"	
ABS warning lamp	BRC-80, "Description"	
Brake warning lamp	BRC-81, "Description"	
VDC OFF indicator lamp	BRC-82, "Description"	
SLIP indicator lamp	BRC-84, "Description"	

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

ABS

System Diagram











INFOID:000000011562570

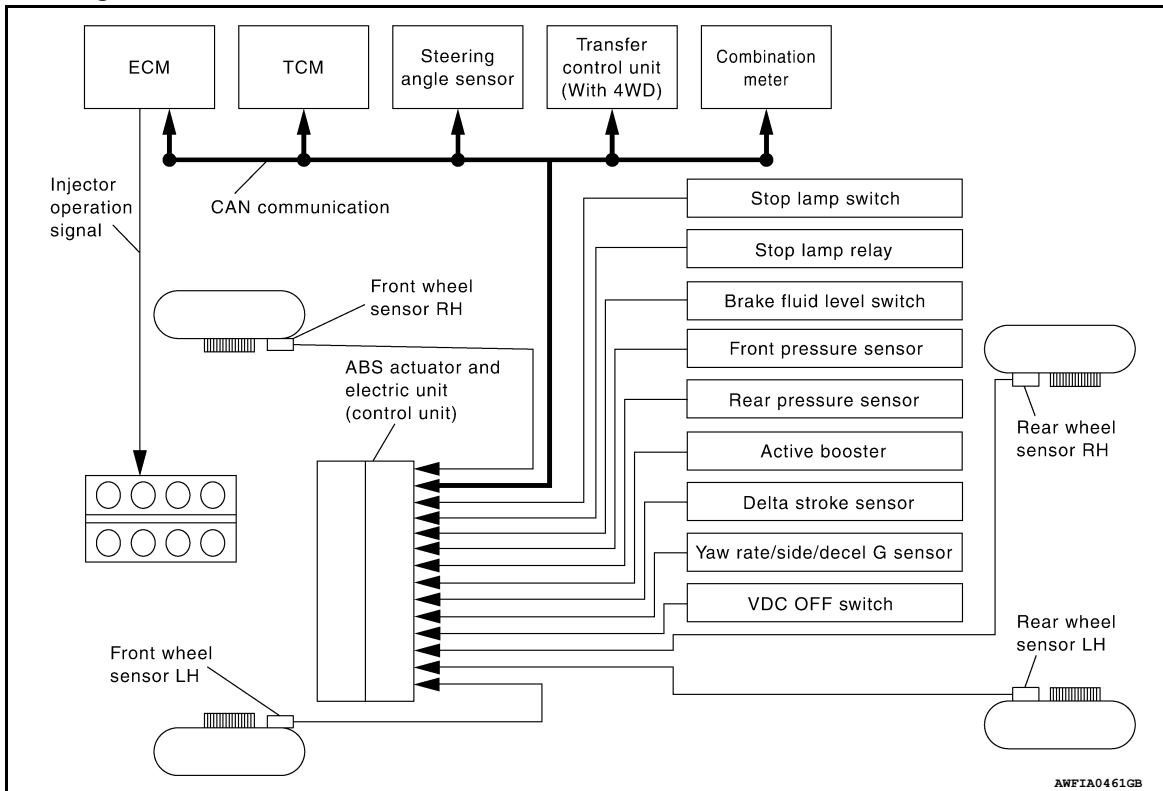

System Description

INFOID:000000011562571

- Anti-Lock Braking System is a function that detects wheel revolution while braking, electronically controls braking force, and prevents wheel locking during sudden braking. It improves handling stability and maneuverability for avoiding obstacles.
- Electrical system diagnosis by CONSULT is available.

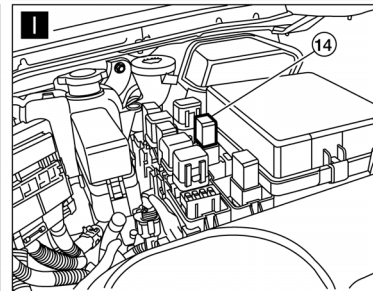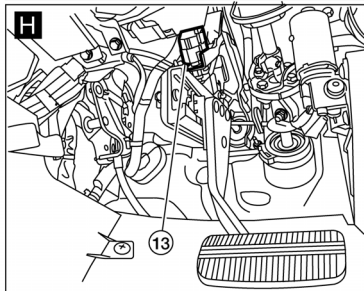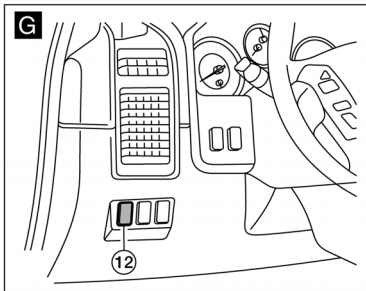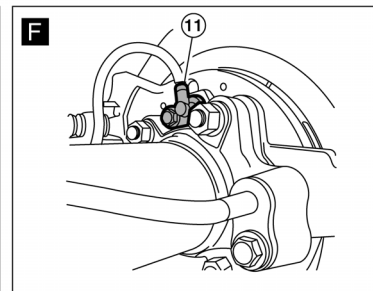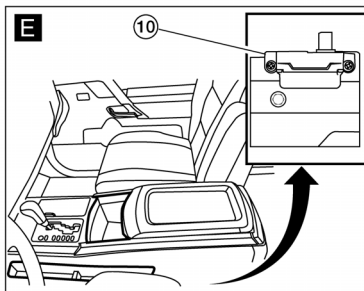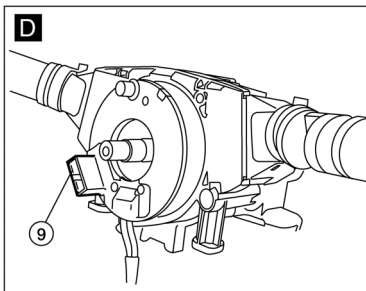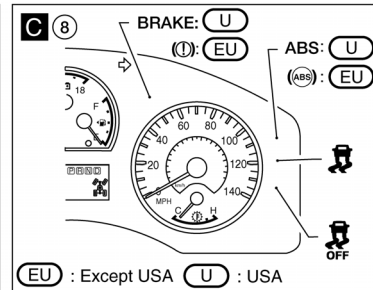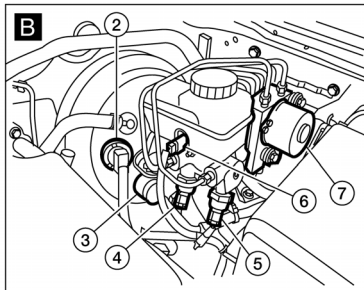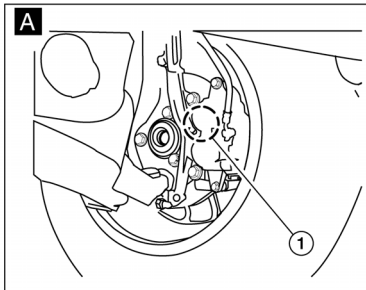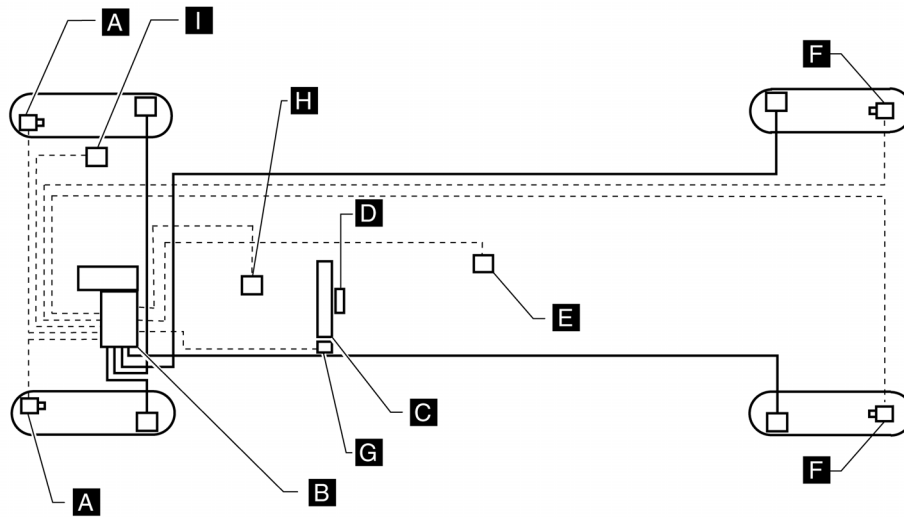

1. Front wheel sensor LH E18
Front wheel sensor RH E117

4. Front pressure sensor E31

7. ABS actuator and electric unit (control unit) E125

2. Delta stroke sensor E114

5. Rear pressure sensor E32

8. Combination meter M24

3. Active booster E49

6. Brake fluid level switch E21

9. Steering angle sensor M17 (view with steering wheel removed)

AWFIA0950GB

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

ABS

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

- | | | |
|---|--|-------------------------|
| 10. Yaw rate/side/decel G sensor M108 | 11. Rear wheel sensor LH C11
Rear wheel sensor RH C10 | 12. VDC OFF switch M148 |
| 13. Stop lamp switch E38 (column shift),
E42 (floor shift) | 14. Stop lamp relay E12 | |

Component Description


INFOID:000000011562573

Component parts	Reference	
ABS actuator and electric unit (control unit)	Pump	BRC-39. "Description"
	Motor	
	Actuator relay	BRC-56. "Description"
	Solenoid valve	BRC-48. "Description"
	VDC switch-over valve (CV1, CV2, SV1, SV2)	BRC-68. "Description"
Wheel sensor	BRC-29. "Diagnosis Procedure"	
Yaw rate/side/decel G sensor	BRC-41. "Description"	
Stop lamp switch	BRC-46. "Diagnosis Procedure"	
Front pressure sensor	BRC-58. "Diagnosis Procedure"	
Rear pressure sensor		
Steering angle sensor	BRC-60. "Description"	
Brake fluid level switch	BRC-63. "Diagnosis Procedure"	
Active booster	BRC-71. "Description"	
Delta stroke sensor	BRC-74. "Description"	
VDC OFF switch	BRC-78. "Description"	
ABS warning lamp	BRC-80. "Description"	
Brake warning lamp	BRC-81. "Description"	
VDC OFF indicator lamp	BRC-82. "Description"	
SLIP indicator lamp	BRC-84. "Description"	

EBD

System Diagram

INFOID:000000011562574










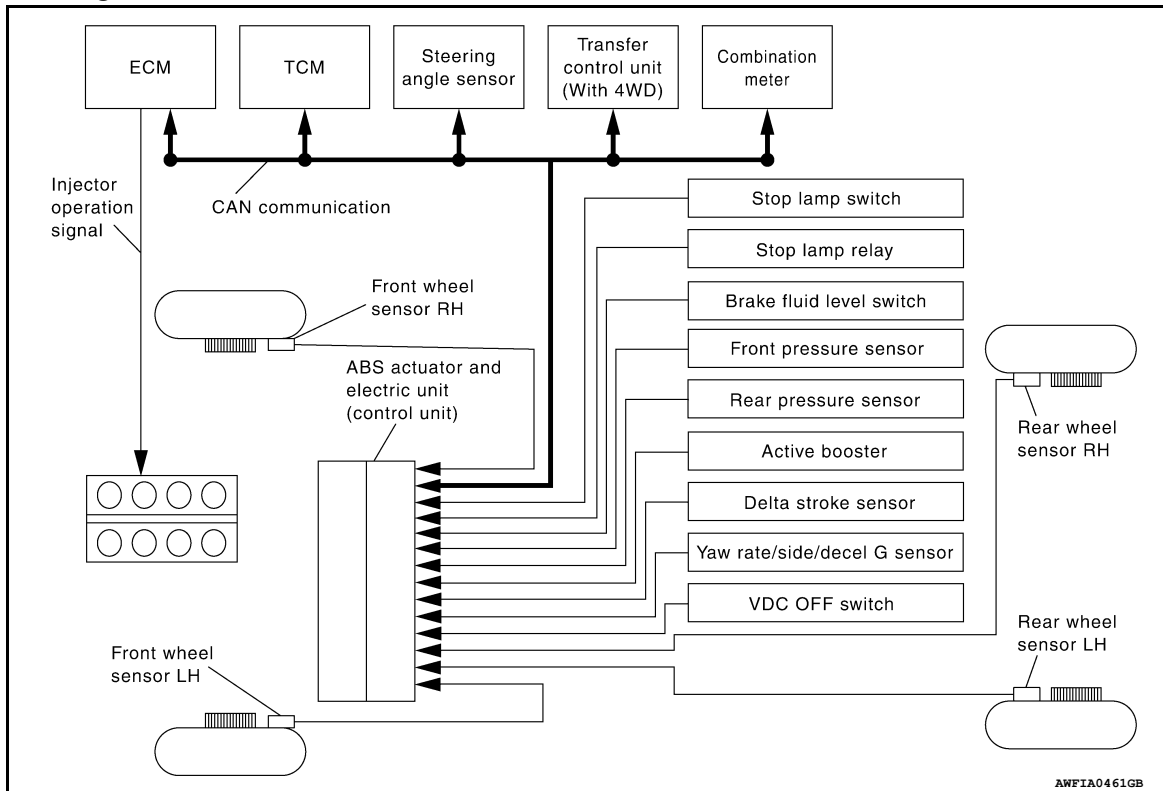


A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

System Description

INFOID:000000011562575

- Electric Brake force Distribution is a following function. ABS actuator and electric unit (control unit) detects subtle slippages between the front and rear wheels during braking. Then it electronically controls the rear braking force (brake fluid pressure) to reduce rear wheel slippage. Accordingly, it improves vehicle stability.
- Electrical system diagnosis by CONSULT is available.

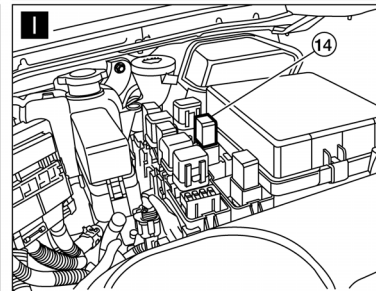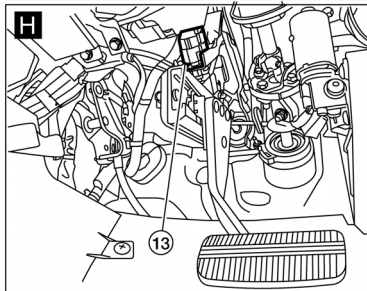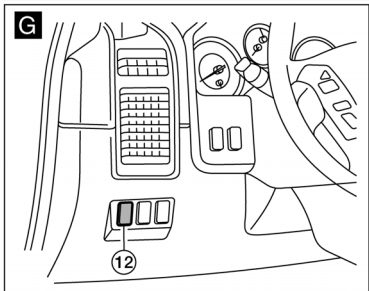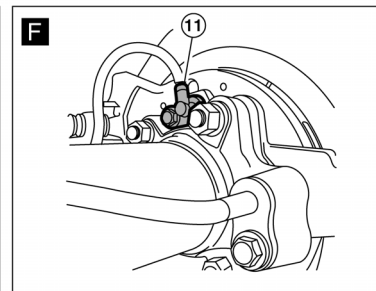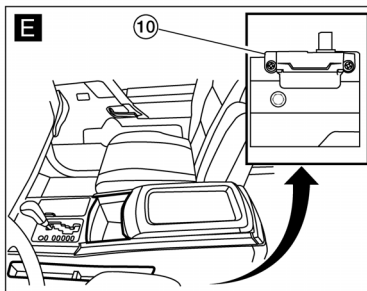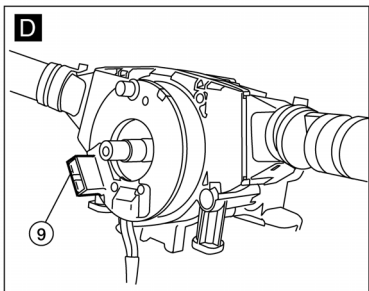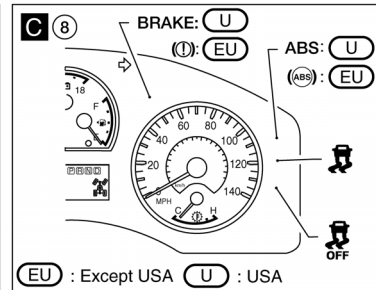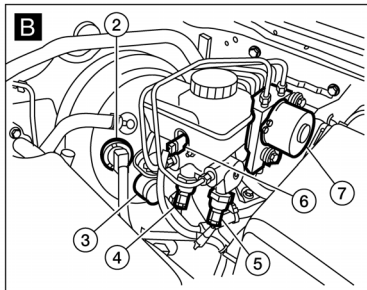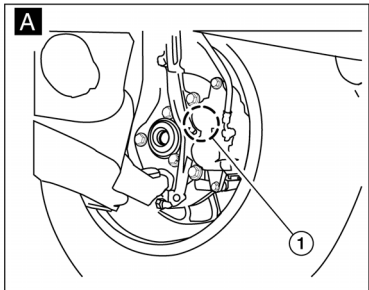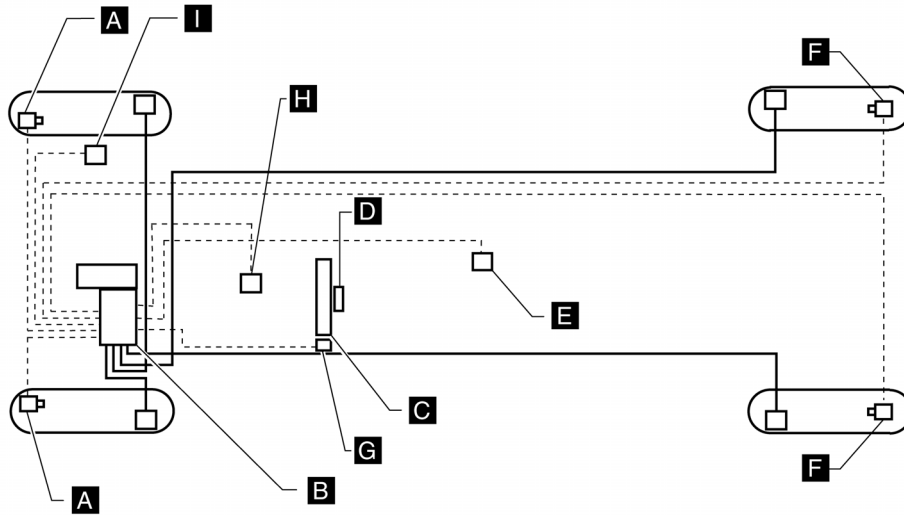

AWF1A0950GB

- | | | |
|--|-----------------------------|---|
| 1. Front wheel sensor LH E18
Front wheel sensor RH E117 | 2. Delta stroke sensor E114 | 3. Active booster E49 |
| 4. Front pressure sensor E31 | 5. Rear pressure sensor E32 | 6. Brake fluid level switch E21 |
| 7. ABS actuator and electric unit (control unit) E125 | 8. Combination meter M24 | 9. Steering angle sensor M17 (view with steering wheel removed) |

< SYSTEM DESCRIPTION >

- 10. Yaw rate/side/decel G sensor M108
- 11. Rear wheel sensor LH C11
Rear wheel sensor RH C10
- 12. VDC OFF switch M148
- 13. Stop lamp switch E38 (column shift),
E42 (floor shift)
- 14. Stop lamp relay E12

Component Description

INFOID:0000000011562577

Component parts		Reference
ABS actuator and electric unit (control unit)	Pump	BRC-39, "Description"
	Motor	
	Actuator relay	BRC-56, "Description"
	Solenoid valve	BRC-48, "Description"
	VDC switch-over valve (CV1, CV2, SV1, SV2)	BRC-68, "Description"
Wheel sensor	BRC-29, "Diagnosis Procedure"	
Yaw rate/side/decel G sensor	BRC-41, "Description"	
Stop lamp switch	BRC-46, "Diagnosis Procedure"	
Front pressure sensor	BRC-58, "Diagnosis Procedure"	
Rear pressure sensor		
Steering angle sensor	BRC-60, "Description"	
Brake fluid level switch	BRC-63, "Diagnosis Procedure"	
Active booster	BRC-71, "Description"	
Delta stroke sensor	BRC-74, "Description"	
VDC OFF switch	BRC-78, "Description"	
ABS warning lamp	BRC-80, "Description"	
Brake warning lamp	BRC-81, "Description"	
VDC OFF indicator lamp	BRC-82, "Description"	
SLIP indicator lamp	BRC-84, "Description"	

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

CONSULT Function (ABS)

INFOID:000000011562578

FUNCTION

CONSULT can display each diagnostic item using the following direct diagnostic modes.

Direct Diagnostic Mode	Description
ECU Identification	The ABS actuator and electric unit (control unit) part number is displayed.
Self Diagnostic Result	The ABS actuator and electric unit (control unit) self diagnostic results are displayed.
Data Monitor	The ABS actuator and electric unit (control unit) input/output data is displayed in real time.
Active Test	The ABS actuator and electric unit (control unit) activates outputs to test components.
Work support	The settings for ABS actuator and electric unit (control unit) functions can be changed.
CAN Diag Support Monitor	The result of transmit/receive diagnosis of CAN communication is displayed.

SELF DIAGNOSTIC RESULT

Operation Procedure

1. Before performing the self-diagnosis, start engine and drive vehicle at 30 km/h (19 MPH) or more for approximately 1 minute.

How to Erase Self-diagnostic Result

1. After erasing DTC memory, start engine and drive vehicle at 30 km/h (19 MPH) or more for approximately 1 minute as the final inspection, and make sure that the ABS warning lamp, VDC OFF indicator lamp, SLIP indicator lamp and brake warning lamp turn OFF.

CAUTION:

If memory cannot be erased, perform applicable diagnosis.

NOTE:

- When the wheel sensor malfunctions, after inspecting the wheel sensor system, the ABS warning lamp, SLIP indicator lamp and brake warning lamp will not turn OFF even when the system is normal unless the vehicle is driving at approximately 30 km/h (19 MPH) or more for approximately 1 minute.
- Brake warning lamp will turn ON in case of parking brake operation (when switch is ON) or of brake fluid level switch operation (when brake fluid is insufficient).
- VDC OFF switch should not stay "ON" position.

Display Item List

Refer to [BRC-90. "DTC No. Index"](#).

DATA MONITOR

Item (Unit)	Data monitor item selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
FR LH SENSOR (km/h, mph)	×	×	×	Wheel speed (km/h, mph) calculated by front LH wheel sensor signal is displayed.
FR RH SENSOR (km/h, mph)	×	×	×	Wheel speed (km/h, mph) calculated by front RH wheel sensor signal is displayed.
RR LH SENSOR (km/h, mph)	×	×	×	Wheel speed (km/h, mph) calculated by rear LH wheel sensor signal is displayed.
RR RH SENSOR (km/h, mph)	×	×	×	Wheel speed (km/h, mph) calculated by rear RH wheel sensor signal is displayed.
DECEL G-SEN (G)	×	×	×	Longitudinal acceleration (G) detected by decel G-sensor is displayed.

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

Item (Unit)	Data monitor item selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
FR RH IN SOL (On/Off)	-	×	×	Front RH IN ABS solenoid (On/Off) status is displayed.
FR RH OUT SOL (On/Off)	-	×	×	Front RH OUT ABS solenoid (On/Off) status is displayed.
FR LH IN SOL (On/Off)	-	×	×	Front LH IN ABS solenoid (On/Off) status is displayed.
FR LH OUT SOL (On/Off)	-	×	×	Front LH OUT ABS solenoid (On/Off) status is displayed.
RR RH IN SOL (On/Off)	-	×	×	Rear RH IN ABS solenoid (On/Off) status is displayed.
RR RH OUT SOL (On/Off)	-	×	×	Rear RH OUT ABS solenoid (On/Off) status is displayed.
RR LH IN SOL (On/Off)	-	×	×	Rear LH IN ABS solenoid (On/Off) status is displayed.
RR LH OUT SOL (On/Off)	-	×	×	Rear LH OUT ABS solenoid (On/Off) status is displayed.
EBD WARN LAMP (On/Off)	-	-	×	Brake warning lamp (On/Off) status is displayed.
STOP LAMP SW (On/Off)	×	×	×	Stop lamp switch (On/Off) status is displayed.
MOTOR RELAY (On/Off)	-	×	×	ABS motor relay signal (On/Off) status is displayed.
ACTUATOR RLY (On/Off)	-	×	×	ABS actuator relay signal (On/Off) status is displayed.
ABS WARN LAMP (On/Off)	-	×	×	ABS warning lamp (On/Off) status is displayed.
OFF LAMP (On/Off)	-	×	×	VDC OFF Lamp (On/Off) status is displayed.
OFF SW (On/Off)	×	×	×	VDC OFF switch (On/Off) status is displayed.
SLIP LAMP (On/Off)	-	×	×	SLIP indicator lamp (On/Off) status is displayed.
BATTERY VOLT (V)	×	×	×	Voltage (V) supplied to ABS actuator and electric unit (control unit) is displayed.
GEAR (1, 2, 3, 4, 5)	×	×	×	Gear position (1, 2, 3, 4, 5) judged by transmission range switch signal is displayed.
SLCT LVR POSI (P, N, D)	×	×	×	Shift position (P, N, D) judged by transmission range switch signal.
ENGINE SPEED (rpm)	×	×	×	Engine speed (rpm) judged by CAN communication signal is displayed.
YAW RATE SEN (d/s)	×	×	×	Yaw rate (d/s) detected by yaw rate sensor is displayed.
R POSI SIG (On/Off)	-	-	×	Reverse shift position (On/Off) judged by transmission range switch signal.
N POSI SIG (On/Off)	-	-	×	Shift position judged by transmission range switch signal.
P POSI SIG (On/Off)	-	-	×	Shift position judged by transmission range switch signal.
CV1 (On/Off)	-	-	×	Front side switch-over solenoid valve (cut valve) (On/Off) status is displayed.

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

Item (Unit)	Data monitor item selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
CV2 (On/Off)	-	-	×	Rear side switch-over solenoid valve (cut-valve) (On/Off) status is displayed.
SV1 (On/Off)	-	-	×	Front side switch-over solenoid valve (suction valve) (On/Off) status is displayed.
SV2 (On/Off)	-	-	×	Rear side switch-over solenoid valve (suction valve) (On/Off) status is displayed.
2WD/4WD (2WD/4WD)	-	-	×	It recognizes on software whether it is 2WD and whether it is in 4WD state.
ACCEL POS SIG (%)	×	-	×	Throttle valve open/close status judged by CAN communication signal is displayed.
SIDE G-SENSOR (m/s ²)	×	-	×	Transverse acceleration detected by side G-sensor is displayed.
STR ANGLE SIG (deg)	×	-	×	Steering angle detected by steering angle sensor is displayed.
BST OPER SIG (On/Off)	-	-	×	Active booster operation (On/Off) status is displayed.
PRESS SENSOR (bar)	×	-	×	Brake pressure detected by pressure sensor is displayed.
EBD SIGNAL (On/Off)	-	-	×	EBD operation (On/Off) status is displayed.
ABS SIGNAL (On/Off)	-	-	×	ABS operation (On/Off) status is displayed.
TCS SIGNAL (On/Off)	-	-	×	TCS operation (On/Off) status is displayed.
VDC SIGNAL (On/Off)	-	-	×	VDC operation (On/Off) status is displayed.
ABS FAIL SIG (On/Off)	-	-	×	ABS fail signal (On/Off) status is displayed.
TCS FAIL SIG (On/Off)	-	-	×	TCS fail signal (On/Off) status is displayed.
VDC FAIL SIG (On/Off)	-	-	×	VDC fail signal (On/Off) status is displayed.
CRANKING SIG (On/Off)	-	-	×	The input state of the key SW START position signal is displayed.
FLUID LEV SW (On/Off)	×	-	×	Brake fluid level switch (On/Off) status is displayed.
PRESS SEN2 (bar)	-	-	×	Brake pressure detected by pressure sensor is displayed.
DELTA S SEN (mm)	-	-	×	The amount of stroke sensor movements in the active booster detected by DELTA S SEN is displayed.
RELEASE SW NO (On/Off)	-	-	×	Release switch signal (On/Off) status is displayed. "On" indicates that the brake pedal is depressed. "Off" indicates that the brake pedal is released.
RELEASE SW NC (On/Off)	-	-	×	Release switch signal (On/Off) status is displayed. "Off" indicates that the brake pedal is depressed. "On" indicates that the brake pedal is released.
OHB FAIL (On/Off)	-	-	×	OHB fail status is displayed.
HBA FAIL (On/Off)	-	-	×	HBA fail status is displayed.

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

Item (Unit)	Data monitor item selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
OHB SIG (On/Off)	-	-	×	OHB operation (On/Off) status is displayed.
HBA SIG (On/Off)	-	-	×	HBA operation (On/Off) status is displayed.
STP OFF RLY (On/Off)	-	-	×	Stop lamp relay signal (On/Off) status is displayed.
DLOCK SW (ON/OFF)	-	-	×	Condition of differential lock mode switch (ON/OFF) is displayed.
DLOCK CHG SW (ON/OFF)	-	-	×	Condition of differential lock position switch (ON/OFF) is displayed.

×: Applicable

-: Not applicable

WORK SUPPORT

Conditions	Description
ST ANGLE SENSOR ADJUSTMENT	Steering angle sensor neutral position adjustment can be performed. Refer to BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description" .
DECEL G SEN CALIBRATION	Decel G sensor calibration can be performed. Refer to BRC-9, "CALIBRATION OF DECEL G SENSOR : Description" .

ACTIVE TEST

CAUTION:

- Do not perform active test while driving vehicle.
- Make sure to completely bleed air from brake system.
- The active test cannot be performed with the ABS warning lamp, VDC OFF indicator lamp, SLIP indicator lamp or brake warning lamp on.
- ABS warning lamp, VDC OFF indicator lamp, SLIP indicator lamp and brake warning lamp are on during active test.

NOTE:

- When active test is performed while depressing the pedal, the pedal depression amount will change. This is normal. (Only solenoid valve and ABS motor.)
- "TEST IS STOPPED" is displayed 10 seconds after operation start.
- After "TEST IS STOPPED" is displayed, to perform test again, touch BACK.

Test Item

SOLENOID VALVE

- When performing an active test of the ABS function, select "MAIN SIGNALS" for each test item.
- For ABS solenoid valve, touch "Up", "Keep", and "Down" on the display screen. For ABS solenoid valve (ACT), touch "Up", "ACT UP", "ACT KEEP" and confirm that solenoid valves operate as shown in the table below.

Operation		ABS solenoid valve			ABS solenoid valve (ACT)		
		Up	Keep	Down	Up	ACT UP	ACT KEEP
FR RH SOL	FR RH IN SOL	Off	On	On	—	—	—
	FR RH OUT SOL	Off	Off	On*	—	—	—
FR LH SOL	FR LH IN SOL	Off	On	On	—	—	—
	FR LH OUT SOL	Off	Off	On*	—	—	—
RR RH SOL	RR RH IN SOL	Off	On	On	—	—	—
	RR RH OUT SOL	Off	Off	On*	—	—	—

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

Operation		ABS solenoid valve			ABS solenoid valve (ACT)		
		Up	Keep	Down	Up	ACT UP	ACT KEEP
RR LH SOL	RR LH IN SOL	Off	On	On	—	—	—
	RR LH OUT SOL	Off	Off	On*	—	—	—
REAR SOL	RR RH IN SOL	Off	On	On	Off	Off	Off
	RR RH OUT SOL	Off	Off	On*	Off	Off	Off
	RR LH IN SOL	Off	On	On	Off	Off	Off
	RR LH OUT SOL	Off	Off	On*	Off	Off	Off
FR RH ABS SOLENOID (ACT)	FR RH IN SOL	—	—	—	Off	Off	Off
	FR RH OUT SOL	—	—	—	Off	Off	Off
	CV1	—	—	—	Off	On	On
	SV1	—	—	—	Off	On*	Off
FR LH ABS SOLENOID (ACT)	FR LH IN SOL	—	—	—	Off	Off	Off
	FR LH OUT SOL	—	—	—	Off	Off	Off
	CV1	—	—	—	Off	On	On
	SV1	—	—	—	Off	On*	Off
RR RH ABS SOLENOID (ACT)	RR RH IN SOL	—	—	—	Off	Off	Off
	RR RH OUT SOL	—	—	—	Off	Off	Off
	CV2	—	—	—	Off	On	On
	SV2	—	—	—	Off	On*	Off
RR LH ABS SOLENOID (ACT)	RR LH IN SOL	—	—	—	Off	Off	Off
	RR LH OUT SOL	—	—	—	Off	Off	Off
	CV2	—	—	—	Off	On	On
	SV2	—	—	—	Off	On*	Off

*: On for 1 to 2 seconds after the touch, and then Off

ABS MOTOR

- Touch “On” and “Off” on screen. Make sure motor relay and actuator relay operates as shown in table below.

Operation	On	Off
MOTOR RELAY	On	Off
ACTUATOR RLY	On	On

BOOSTER DRIVE

- Touch “Up” and “Down” on the screen. Check that booster drive operates as shown in table below.

CAUTION:

Perform active test subject to the conditions below.

- **Do not operate brake pedal during active test.**
- **Make sure the engine revolution is over 500 rpm.**
- **Make sure the vehicle is not moving.**

Operation	Up	Down
BST OPER SIG	On	Off
PRESS SENSOR	50 ± 5 bar	0 bar
PRESS SEN2	50 ± 5 bar	0 bar
STOP LAMP SW	On	Off
STP OFF RLY	Off	Off

C1101, C1102, C1103, C1104 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

DTC/CIRCUIT DIAGNOSIS

C1101, C1102, C1103, C1104 WHEEL SENSOR

DTC Logic

INFOID:000000011885441

NOTE:

Before performing Diagnosis Procedure, confirm if DTC is PAST or CURRENT. If DTC is CURRENT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace ABS actuator and electric unit (control unit) or wheel sensor for a PAST DTC.

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause	
			Past DTC	Current DTC
C1101	RR RH SENSOR-1	<ul style="list-style-type: none">When power supply voltage of rear wheel sensor RH is low.When an open or shorted circuit is detected in rear wheel sensor RH circuit.	<ul style="list-style-type: none">Low battery voltageHarness or connector	<ul style="list-style-type: none">Low battery voltageHarness or connectorWheel sensorABS actuator and electric unit (control unit)
C1102	RR LH SENSOR-1	<ul style="list-style-type: none">When power supply voltage of rear wheel sensor LH is low.When an open or shorted circuit is detected in rear wheel sensor LH circuit.		
C1103	FR RH SENSOR-1	<ul style="list-style-type: none">When power supply voltage of front wheel sensor RH is low.When an open or shorted circuit is detected in front wheel sensor RH circuit.		
C1104	FR LH SENSOR-1	<ul style="list-style-type: none">When power supply voltage of front wheel sensor LH is low.When an open or shorted circuit is detected in front wheel sensor LH circuit.		

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAG RESULT

- Start engine and drive vehicle at approximately 21 km/h (13 MPH) or more for approximately 5 minutes.
- Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [BRC-29, "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.

NO >> Refer to [BRC-29, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000011885442

Regarding Wiring Diagram information, refer to [BRC-92, "Wiring Diagram"](#).

CAUTION:

Do not check between wheel sensor terminals.

C1101, C1102, C1103, C1104 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

1. CONFIRM DTC

④ With CONSULT

1. Perform "Self Diagnostic Result" of "ABS" and record all active DTCs.
2. Clear all DTCs.
3. Perform DTC confirmation procedure. Refer to [BRC-29. "DTC Logic"](#).

Does DTC C1101, C1102, C1103 or C1104 reset?

YES >> GO TO 2.

NO >> Refer to [GI-44. "Intermittent Incident"](#).

2. INSPECT WHEEL SENSOR

Inspect the suspect wheel sensor for damage or deformation.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace as necessary.

3. HARNESS AND CONNECTOR INSPECTION

1. Disconnect ABS actuator and electric unit (control unit) connector E125 and wheel sensor connector of suspect wheel.
2. Check harness, connectors and terminals for corrosion, deformation, disconnection, looseness or damage.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace as necessary.

4. CHECK WHEEL SENSOR OUTPUT SIGNAL

1. Connect ABS active wheel sensor tester (J-45741) to wheel sensor using appropriate adapter.
2. Turn on the ABS active wheel sensor tester power switch.

NOTE:

The green POWER indicator should illuminate. If the POWER indicator does not illuminate, replace the battery in the ABS active wheel sensor tester before proceeding.

3. Spin the wheel of the vehicle by hand and observe the red SENSOR indicator on the ABS active wheel sensor tester. The red SENSOR indicator should flash on and off to indicate an output signal.

NOTE:

If the red SENSOR indicator illuminates but does not flash, reverse the polarity of the tester leads and retest.

Does the ABS active wheel sensor tester detect a signal?

YES >> GO TO 5.

NO >> Replace the wheel sensor. Refer to [BRC-113. "Removal and Installation"](#).

5. CHECK WIRING HARNESS FOR SHORT TO VOLTAGE

1. Turn ignition switch ON.
2. Check voltage between wheel sensor harness connector terminals of suspect wheel and ground.

Wheel Sensor			Ground	Voltage
Wheel	Connector	Terminal		
Front LH	E18	1	—	0V
		2		
Front RH	E117	1		
		2		
Rear LH	C11	1		
		2		
Rear RH	C10	1		
		2		

Is the inspection result normal?

C1101, C1102, C1103, C1104 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

- YES >> GO TO 6.
 NO >> Repair the circuit.

6. CHECK WIRING HARNESS FOR SHORT TO GROUND

1. Turn ignition switch OFF.
2. Check continuity between wheel sensor harness connector terminals of suspect wheel and ground.

Wheel Sensor			Ground	Continuity
Wheel	Connector	Terminal		
Front LH	E18	1	—	No
		2		
Front RH	E117	1		
		2		
Rear LH	C11	1		
		2		
Rear RH	C10	1		
		2		

Is the inspection result normal?

- YES >> GO TO 7.
 NO >> Repair the circuit.

7. CHECK WIRING HARNESS FOR SHORT BETWEEN CIRCUITS

Check continuity between wheel sensor harness connector terminals of suspect wheel.

Wheel Sensor		(+)	(-)	Continuity
Wheel	Connector	Terminal	Terminal	
Front LH	E18	1	2	No
Front RH	E117			
Rear LH	C11			
Rear RH	C10			

Is the inspection result normal?

- YES >> GO TO 8.
 NO >> Repair the circuit.

8. CHECK WIRING HARNESS FOR OPEN CIRCUIT

Check continuity between ABS actuator and electric unit (control unit) connector E125 and wheel sensor connector of wheel with DTC.

Wheel sensor	ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
	Connector	Terminal	Connector	Terminal	
Front LH	E125	45	E18	2	Yes
		46		1	
Front RH		34	E117	2	
		33		1	
Rear LH		36	C11	2	
		37		1	
Rear RH		43	C10	2	
		42		1	

Is the inspection result normal?

- YES >> GO TO 9.

C1101, C1102, C1103, C1104 WHEEL SENSOR

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

NO >> Repair the circuit.

9. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY CIRCUIT

1. Turn ignition switch ON.
2. Check voltage between ABS actuator and electric unit (control unit) harness connector E125 terminal and ground.

ABS actuator and electric unit (control unit)		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
E125	4	—	Ignition switch ON	Battery voltage
			Ignition switch OFF	0V

Is the inspection result normal?

YES >> GO TO 10.

NO >> Check the following:

- 10A fuse No. 50 located in the IPDM E/R
- Harness between ABS actuator and electric unit (control unit) and IPDM E/R

10. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between ABS actuator and electric unit (control unit) connector E125 terminals and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E125	16	Ground	Yes
	47		

Is the inspection result normal?

YES >> GO TO 11.

NO >> Repair or replace malfunctioning components.

11. CHECK WHEEL SENSOR INPUT VOLTAGE

1. Connect ABS actuator and electric unit (control unit) connector E125.
2. Turn ignition switch ON.
3. Check voltage between suspect wheel sensor harness connector terminals.

Wheel Sensor		(+)	(-)	Voltage (Approx.)
Wheel	Connector	Terminal	Terminal	
Front LH	E18	1	2	Battery voltage
Front RH	E117			
Rear LH	C11			
Rear RH	C10			

Is the inspection result normal?

YES >> Replace wheel sensor. Refer to [BRC-113, "Removal and Installation"](#). Then, GO TO 12.

NO >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-116, "Removal and Installation"](#).

12. CONFIRM REPAIR

Ⓜ With CONSULT

1. Clear all DTCs.
2. Perform DTC confirmation procedure. Refer to [BRC-29, "DTC Logic"](#).

Does DTC C1101, C1102, C1103 or C1104 reset?

C1101, C1102, C1103, C1104 WHEEL SENSOR

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

- YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-116. "Removal and Installation"](#).
- NO >> Inspection End.

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

C1105, C1106, C1107, C1108 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1105, C1106, C1107, C1108 WHEEL SENSOR

DTC Logic

INFOID:000000011885443

NOTE:

Before performing Diagnosis Procedure, confirm if DTC is PAST or CURRENT. If DTC is CURRENT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace ABS actuator and electric unit (control unit) or wheel sensor for a PAST DTC.

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause	
			Past DTC	Current DTC
C1105	RR RH SENSOR-2	<ul style="list-style-type: none"> When distance between rear wheel sensor RH and rear wheel sensor RH rotor is large. When installation of rear wheel sensor RH or rear wheel sensor RH rotor is not normal. 	<ul style="list-style-type: none"> Tire size Contamination on sensor rotor Position of sensor rotor and wheel sensor Harness or connector 	<ul style="list-style-type: none"> Tire size Contamination on sensor rotor Position of sensor rotor and wheel sensor Harness or connector Wheel sensor Sensor rotor ABS actuator and electric unit (control unit)
C1106	RR LH SENSOR-2	<ul style="list-style-type: none"> When distance between rear wheel sensor LH and rear wheel sensor LH rotor is large. When installation of rear wheel sensor LH or rear wheel sensor LH rotor is not normal. 		
C1107	FR RH SENSOR-2	<ul style="list-style-type: none"> When distance between front wheel sensor RH and front wheel sensor RH rotor is large. When installation of front wheel sensor RH or front wheel sensor RH rotor is not normal. 		
C1108	FR LH SENSOR-2	<ul style="list-style-type: none"> When distance between front wheel sensor LH and front wheel sensor LH rotor is large. When installation of front wheel sensor LH or front wheel sensor LH rotor is not normal. 		

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAG RESULT

- Start engine and drive vehicle at approximately 21 km/h (13 MPH) or more for approximately 5 minutes.
- Check for DTC using CONSULT.

Is the DTC detected?

- YES (Current DTC)>>Refer to [BRC-34, "Diagnosis Procedure"](#).
 YES (Past DTC)>>GO TO 2.
 NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

- YES >> Inspection End.
 NO >> Refer to [BRC-34, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000011885444

Regarding Wiring Diagram information, refer to [BRC-92, "Wiring Diagram"](#).

CAUTION:

C1105, C1106, C1107, C1108 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Do not check between wheel sensor terminals.

1. CONFIRM DTC

Ⓜ With CONSULT

1. Perform "Self Diagnostic Result" of "ABS" and record all active DTCs.
2. Clear all DTCs.
3. Perform DTC confirmation procedure. Refer to [BRC-34, "DTC Logic"](#).

Does DTC C1105, C1106, C1107 or C1108 reset?

YES >> GO TO 2.

NO >> Refer to [GI-44, "Intermittent Incident"](#).

2. CHECK TIRE PRESSURE AND TIRE WEAR

Check tires for excessive wear and proper inflation. Refer to [WT-50, "Inspection"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace as necessary.

3. CHECK WHEEL SENSOR

Check wheel sensor for the following:

- Proper installation
- Physical damage
- Contamination

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace as necessary.

4. CHECK SENSOR ROTOR

Check sensor rotor for the following:

- Contamination
- Physical damage (missing teeth, cracks, etc.)
- Foreign material
- Looseness

Is the inspection result normal?

YES >> Replace the wheel sensor. Refer to [BRC-113, "Removal and Installation"](#). Then, GO TO 5.

NO >> Repair or replace as necessary.

5. CONFIRM REPAIR

Ⓜ With CONSULT

1. Clear all DTCs.
2. Perform DTC confirmation procedure. Refer to [BRC-34, "DTC Logic"](#).

Does DTC C1105, C1106, C1107 or C1108 reset?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-116, "Removal and Installation"](#).

NO >> Inspection End.

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

C1109 POWER AND GROUND SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1109 POWER AND GROUND SYSTEM

DTC Logic

INFOID:000000011885445

NOTE:

Before performing Diagnosis Procedure, confirm if DTC is PAST or CURRENT. If DTC is CURRENT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace ABS actuator and electric unit (control unit) for a PAST DTC.

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause	
			Past DTC	Current DTC
C1109	BATTERY VOLTAGE [ABNORMAL]	<ul style="list-style-type: none"> When ignition voltage is 10 V or less. When ignition voltage is 16 V or more. 	<ul style="list-style-type: none"> Battery Harness or connector 	<ul style="list-style-type: none"> Fuse Battery Ignition power supply system Harness or connector ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAG RESULT

- Turn ignition switch ON.
- Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [BRC-36. "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.

NO >> Refer to [BRC-36. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000011885446

Regarding Wiring Diagram information, refer to [BRC-92. "Wiring Diagram"](#).

1. CONNECTOR INSPECTION

- Turn ignition switch OFF.
- Disconnect ABS actuator and electric unit (control unit) connectors.
- Check connectors and terminals for deformation, disconnection, looseness or damage.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace as necessary.

2. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) IGNITION POWER SUPPLY CIRCUIT

Check voltage between ABS actuator and electric unit (control unit) connector E125 terminal 4 and ground.

ABS actuator and electric unit (control unit)		Ground	Condition	Voltage
Connector	Terminal			

C1109 POWER AND GROUND SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

E125	4	—	Ignition switch ON	Battery voltage
			Ignition switch OFF	0V

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair or replace malfunctioning components.

3. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between ABS actuator and electric unit (control unit) connector E125 terminals 16, 47 and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E125	16	Ground	Yes
	47		

BRC

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Repair or replace malfunctioning components.

4. INTERMITTENT CHECK

Check for intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-116, "Removal and Installation"](#).
- NO >> Repair or replace malfunctioning components.

C1110, C1170 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1110, C1170 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

DTC Logic

INFOID:000000011562593

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1110	CONTROLLER FAILURE	When there is an internal malfunction in the ABS actuator and electric unit (control unit).	• ABS actuator and electric unit (control unit)
C1170	VARIANT CODING	In a case where VARIANT CODING is different.	

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
CONTROLLER FAILURE
VARIANT CODING

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-38, "Diagnosis Procedure"](#).
NO >> Inspection End

Diagnosis Procedure

INFOID:000000011562594

1. REPLACE ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

>> Replace ABS actuator and electric unit (control unit). Refer to [BRC-116, "Removal and Installation"](#).

Special Repair Requirement

INFOID:000000011562595

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

2. CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

C1111 ABS MOTOR, MOTOR RELAY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1111 ABS MOTOR, MOTOR RELAY SYSTEM

Description

INFOID:0000000011562596

PUMP

The pump returns the brake fluid stored in the reservoir to the master cylinder by reducing the pressure.

MOTOR

The motor drives the pump according to the signals transmitted by the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:0000000011562597

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1111	PUMP MOTOR	During the actuator motor operating with ON, when the actuator motor turns OFF, or when the control line for actuator motor relay is open.	<ul style="list-style-type: none">• Harness or connector• ABS actuator and electric unit (control unit)
		During the actuator motor operating with OFF, when the actuator motor turns ON, or when the control line for relay is shorted to ground.	

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
PUMP MOTOR

Is above displayed on the self-diagnosis display?

YES >> Proceed to diagnosis procedure. Refer to [BRC-39, "Diagnosis Procedure"](#).

NO >> Inspection End

Diagnosis Procedure

INFOID:0000000011562598

Regarding Wiring Diagram information, refer to [BRC-92, "Wiring Diagram"](#).

1. CONNECTOR INSPECTION

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check terminals for deformation, disconnect, looseness, and so on. If any malfunction is found, repair or replace terminals.
4. Reconnect connectors and then perform the self-diagnosis. Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).

Is any item indicated on the self-diagnosis display?

YES >> GO TO 2

NO >> Poor connection of connector terminals. Repair or replace connector.

2. CHECK ABS MOTOR AND MOTOR RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check voltage between the ABS actuator and electric unit (control unit) connector E125 terminal 1 and ground.

C1111 ABS MOTOR, MOTOR RELAY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E125	1	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace malfunctioning components.

3.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) GROUND CIRCUIT

Check continuity between ABS actuator and electric unit (control unit) connector E125 terminals 16, 47 and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E125	16, 47	Ground	Yes

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-116, "Removal and Installation"](#).

NO >> Repair or replace malfunctioning components.

Component Inspection

INFOID:000000011562599

1.CHECK ACTIVE TEST

1. On "ACTIVE TEST", select "ABS MOTOR".

2. Touch On and Off on screen. Make sure motor relay and actuator relay operates as shown in table below.

Operation	On	Off
MOTOR RELAY	On	Off
ACTUATOR RLY	On	On

Is the inspection result normal?

YES >> Inspection End

NO >> Go to diagnosis procedure. Refer to [BRC-39, "Diagnosis Procedure"](#).

Special Repair Requirement

INFOID:000000011562600

1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

2.CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

C1113, C1145, C1146 YAW RATE/SIDE/DECEL G SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1113, C1145, C1146 YAW RATE/SIDE/DECEL G SENSOR

Description

INFOID:0000000011562601

The yaw rate/side/decel G sensor detects the yaw rate/side/decel G affecting the vehicle, and transmits the data to the ABS actuator and electric unit (control unit) as an analog voltage signal.

DTC Logic

INFOID:0000000011562602

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1113	G-SENSOR	Longitudinal G-sensor is malfunctioning, or signal line of longitudinal G-sensor is open or shorted.	• Harness or connector • ABS actuator and electric unit (control unit) • Yaw rate/side/decel G sensor
C1145	YAW RATE SENSOR	Yaw rate sensor is malfunctioning, or the yaw rate sensor signal line is open or shorted.	
C1146	SIDE G-SEN CIRCUIT	Side G sensor is malfunctioning, or circuit of side G sensor is open or shorted.	

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
G-SENSOR
YAW RATE SENSOR
SIDE G-SEN CIRCUIT

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-41. "Diagnosis Procedure"](#).
NO >> Inspection End

Diagnosis Procedure

INFOID:0000000011562603

Regarding Wiring Diagram information, refer to [BRC-92. "Wiring Diagram"](#).

CAUTION:

- Sudden turns (such as spin turns, acceleration turns), drifting, etc. when VDC function is OFF may cause the yaw rate/side/decel G sensor system to indicate a malfunction. This is not a malfunction if normal operation can be resumed after restarting the engine.
- If vehicle is on turn table at entrance to parking garage, or on other moving surface, SLIP indicator lamp may illuminate and CONSULT self-diagnosis may indicate yaw rate sensor system malfunction. However, in this case there is no malfunction in yaw rate sensor system. Take vehicle off of turn table or other moving surface, and start engine. Results will return to normal.

1. CONNECTOR INSPECTION

1. Disconnect the ABS actuator and electric unit (control unit) and yaw rate/side/decel G sensor connectors.
2. Check the terminals for deformation, disconnection, looseness or damage.

Is the inspection result normal?

- YES >> GO TO 2
NO >> Repair or replace as necessary.

2. YAW RATE/SIDE/DECEL G SENSOR HARNESS INSPECTION

Check continuity between the ABS actuator and electric unit (control unit) connector E125 and the yaw rate/side/decel G sensor connector M108.

C1113, C1145, C1146 YAW RATE/SIDE/DECEL G SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

ABS actuator and electric unit (control unit)		Yaw rate/side/decel G sensor		Continuity
Connector	Terminal	Connector	Terminal	
E125	6	M108	4	Yes
	24		1	
	25		2	
	29		3	

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace as necessary.

3. YAW RATE/SIDE/DECEL G SENSOR INSPECTION

1. Connect the yaw rate/side/decel G sensor and ABS actuator and electric unit (control unit) connectors.
2. Perform the yaw rate/side/decel G sensor component inspection. Refer to [BRC-42. "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-116. "Removal and Installation"](#).

NO >> Replace the yaw rate/side/decel G sensor and perform calibration of decel G-sensor. Refer to [BRC-119. "Removal and Installation"](#).

Component Inspection

INFOID:000000011562604

1. CHECK DATA MONITOR

Select "YAW RATE SEN", "SIDE G-SENSOR", "DECEL G-SEN" in "DATA MONITOR" and check yaw rate/side/decel G sensor signal.

Vehicle condition	YAW RATE SEN (DATA MONITOR)	SIDE G-SENSOR (DATA MONITOR)	DECEL G-SEN (DATA MONITOR)
Stopped	-4 to +4 deg/s	-1.1 to +1.1 m/s	-0.11 G to +0.11 G
Turning right	Negative value	Negative value	-
Turning left	Positive value	Positive value	-
Speed up	-	-	Negative value
Speed down	-	-	Positive value

Is the inspection result normal?

YES >> Inspection End

NO >> Go to diagnosis procedure. Refer to [BRC-41. "Diagnosis Procedure"](#).

Special Repair Requirement

INFOID:000000011562605

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

2. CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-9. "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

C1115 ABS SENSOR [ABNORMAL SIGNAL]

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1115 ABS SENSOR [ABNORMAL SIGNAL]

DTC Logic

INFOID:000000011885447

NOTE:

Before performing Diagnosis Procedure, confirm if DTC is PAST or CURRENT. If DTC is CURRENT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace ABS actuator and electric unit (control unit) or wheel sensor for a PAST DTC.

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause	
			Past DTC	Current DTC
C1115	ABS SENSOR [ABNORMAL SIGNAL]	When difference in wheel speed between any wheel and others is detected while the vehicle is driven, because of installation of tires other than specified.	<ul style="list-style-type: none">• Low battery voltage• Tire size• Contamination on sensor rotor• Position of sensor rotor and wheel sensor	<ul style="list-style-type: none">• Low battery voltage• Tire size• Contamination on sensor rotor• Position of sensor rotor and wheel sensor• Harness or connector• Wheel sensor• Sensor rotor• ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAG RESULT

1. Start engine and drive vehicle at approximately 21 km/h (13 MPH) or more for approximately 5 minutes.
2. Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [BRC-43, "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.

NO >> Refer to [BRC-43, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000011885448

Regarding Wiring Diagram information, refer to [BRC-92, "Wiring Diagram"](#).

CAUTION:

Do not check between wheel sensor terminals.

1. CONNECTOR INSPECTION

1. Disconnect ABS actuator and electric unit (control unit) connector E125 and wheel sensor connector of wheel with DTC.
2. Check terminals for deformation, disconnection, looseness or damage.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace as necessary.

2. CHECK WHEEL SENSOR OUTPUT SIGNAL

1. Connect ABS active wheel sensor tester (J-45741) to wheel sensor using appropriate adapter.

C1115 ABS SENSOR [ABNORMAL SIGNAL]

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

2. Turn on the ABS active wheel sensor tester power switch.

NOTE:

The green POWER indicator should illuminate. If the POWER indicator does not illuminate, replace the battery in the ABS active wheel sensor tester before proceeding.

3. Spin the wheel of the vehicle by hand and observe the red SENSOR indicator on the ABS active wheel sensor tester. The red SENSOR indicator should flash on and off to indicate an output signal.

NOTE:

If the red SENSOR indicator illuminates but does not flash, reverse the polarity of the tester leads and retest.

Does the ABS active wheel sensor tester detect a signal?

YES >> GO TO 5.

NO >> GO TO 3.

3.CHECK WHEEL SENSOR

Check wheel sensor for the following:

- Proper installation
- Physical damage
- Contamination

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace as necessary.

4.CHECK SENSOR ROTOR

Check sensor rotor for the following:

- Contamination
- Physical damage (missing teeth, cracks, etc.)
- Foreign material
- Looseness

Is the inspection result normal?

YES >> Replace the wheel sensor. Refer to [BRC-113, "Removal and Installation"](#).

NO >> Repair or replace as necessary.

5.CHECK TIRES

Check the inflation pressure, wear and size of each tire.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Adjust tire pressure, or replace tire(s).

6.CHECK WIRING HARNESS FOR SHORT CIRCUIT

Check continuity between wheel sensor connector terminals and ground of wheel with DTC.

Wheel Sensor			Ground	Continuity
Wheel	Connector	Terminal		
Front LH	E18	1	—	No
		2		
Front RH	E117	1		
		2		
Rear LH	C11	1		
		2		
Rear RH	C10	1		
		2		

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair the circuit.

C1115 ABS SENSOR [ABNORMAL SIGNAL]

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

7. CHECK WIRING HARNESS FOR OPEN CIRCUIT

Check continuity between ABS actuator and electric unit (control unit) connector E125 and wheel sensor connector of wheel with DTC.

Wheel sensor	ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
	Connector	Terminal	Connector	Terminal	
Front LH	E125	45	E18	2	Yes
		46		1	
Front RH		31	E117	2	
		33		1	
Rear LH		36	C11	2	
		37		1	
Rear RH		43	C10	2	
		42		1	

Is the inspection result normal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-116. "Removal and Installation"](#).

NO >> Repair the circuit.

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

C1116 STOP LAMP SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1116 STOP LAMP SWITCH

DTC Logic

INFOID:000000011885449

NOTE:

Before performing Diagnosis Procedure, confirm if DTC is PAST or CURRENT. If DTC is CURRENT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace ABS actuator and electric unit (control unit) for a PAST DTC.

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause	
			Past DTC	Current DTC
C1116	STOP LAMP SW	When stop lamp switch circuit is open or stop lamp switch is out of adjustment.	<ul style="list-style-type: none">• Harness or connector• Stop lamp switch	<ul style="list-style-type: none">• Harness or connector• Stop lamp switch• Stop lamp relay• ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [BRC-46, "Diagnosis Procedure"](#).
YES (Past DTC)>>GO TO 2.
NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.
NO >> Refer to [BRC-46, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000011885450

Regarding Wiring Diagram information, refer to [BRC-92, "Wiring Diagram"](#).

1. CONNECTOR INSPECTION

1. Disconnect stop lamp relay connector and ABS actuator and electric unit (control unit) connector.
2. Check terminals for deformation, disconnection, looseness or damage.

Is the inspection result normal?

YES >> GO TO 2.
NO >> Repair or replace as necessary.

2. CHECK STOP LAMP SWITCH CIRCUIT

1. Connect stop lamp relay connector.
2. Check voltage between ABS actuator and electric unit (control unit) connector E125 terminal 41 and ground.

ABS actuator and electric unit (control unit)		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
E125	41	—	Brake pedal depressed	Battery voltage
			Brake pedal released	0V

C1116 STOP LAMP SWITCH

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> Adjust stop lamp switch. Refer to [BR-14, "Inspection and Adjustment - Standard Pedal"](#).

NO >> GO TO 3.

3. CHECK STOP LAMP RELAY CIRCUIT FOR OPEN

1. Disconnect stop lamp relay connector.
2. Check continuity between ABS actuator and electric unit (control unit) connector E125 terminal 41 and stop lamp relay connector E12 terminal 4.

ABS actuator and electric unit (control unit)		Stop lamp relay		Continuity
Connector	Terminal	Connector	Terminal	
E125	41	E12	4	Yes

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace as necessary.

4. CHECK STOP LAMP RELAY CIRCUIT FOR SHORT

Check continuity between ABS actuator and electric unit (control unit) connector E125 terminal 41 and ground.

ABS actuator and electric unit (control unit)		Ground	Continuity
Connector	Terminal		
E125	41	—	No

Is the inspection result normal?

YES >> Refer to [EXL-4, "Work Flow"](#).

NO >> Repair harness or connectors.

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

C1120, C1122, C1124, C1126 IN ABS SOL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1120, C1122, C1124, C1126 IN ABS SOL

Description

INFOID:000000011562615

The solenoid valve increases, holds or decreases the fluid pressure of each brake caliper according to the signals transmitted by the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000011562616

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1120	FR LH IN ABS SOL	When the control unit detects a malfunction in the front LH inlet solenoid circuit.	• ABS actuator and electric unit (control unit)
C1122	FR RH IN ABS SOL	When the control unit detects a malfunction in the front RH inlet solenoid circuit.	
C1124	RR LH IN ABS SOL	When the control unit detects a malfunction in the rear LH inlet solenoid circuit.	
C1126	RR RH IN ABS SOL	When the control unit detects a malfunction in the rear RH inlet solenoid circuit.	

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
FR LH IN ABS SOL
FR RH IN ABS SOL
RR LH IN ABS SOL
RR RH IN ABS SOL

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-48. "Diagnosis Procedure"](#).
NO >> Inspection End

Diagnosis Procedure

INFOID:000000011562617

Regarding Wiring Diagram information, refer to [BRC-92. "Wiring Diagram"](#).

1. CONNECTOR INSPECTION

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check terminals for deformation, disconnection, looseness, and so on. If any malfunction is found, repair or replace terminals.
4. Reconnect connectors and then perform the self-diagnosis. Refer to [BRC-24. "CONSULT Function \(ABS\)"](#).

Is any item indicated on the self-diagnosis display?

- YES >> GO TO 2
NO >> Poor connection of connector terminals. Repair or replace connector.

2. CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.

C1120, C1122, C1124, C1126 IN ABS SOL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

- Check voltage between ABS actuator and electric unit (control unit) connector E125 terminal 32 and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E125	32	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3
 NO >> Repair or replace malfunctioning components.

3.CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY GROUND CIRCUIT

Check continuity between ABS actuator and electric unit (control unit) connector E125 terminals 16, 47 and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E125	16, 47	Ground	Yes

Is the inspection result normal?

- YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-116. "Removal and Installation"](#).
 NO >> Repair or replace malfunctioning components.

Component Inspection

INFOID:0000000011562618

1.CHECK ACTIVE TEST

- Select each test menu item on "ACTIVE TEST".
- On the display, touch "Up", "Keep", and "Down", and check that the system operates as shown in the table below.

Operation		ABS solenoid valve		
		Up	Keep	Down
FR RH SOL	FR RH IN SOL	Off	On	On
	FR RH OUT SOL	Off	Off	On*
FR LH SOL	FR LH IN SOL	Off	On	On
	FR LH OUT SOL	Off	Off	On*
RR RH SOL	RR RH IN SOL	Off	On	On
	RR RH OUT SOL	Off	Off	On*
RR LH SOL	RR LH IN SOL	Off	On	On
	RR LH OUT SOL	Off	Off	On*

*: On for 1 to 2 seconds after the touch, and then Off

Is the inspection result normal?

- YES >> Inspection End
 NO >> Go to diagnosis procedure. Refer to [BRC-48. "Diagnosis Procedure"](#).

Special Repair Requirement

INFOID:0000000011562619

1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

C1120, C1122, C1124, C1126 IN ABS SOL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

2. CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit).
Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

C1121, C1123, C1125, C1127 OUT ABS SOL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1121, C1123, C1125, C1127 OUT ABS SOL

Description

INFOID:0000000011562620

The solenoid valve increases, holds or decreases the fluid pressure of each brake caliper according to the signals transmitted by the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:0000000011562621

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1121	FR LH OUT ABS SOL	When the control unit detects a malfunction in the front LH outlet solenoid circuit.	• ABS actuator and electric unit (control unit)
C1123	FR RH OUT ABS SOL	When the control unit detects a malfunction in the front RH outlet solenoid circuit.	
C1125	RR LH OUT ABS SOL	When the control unit detects a malfunction in the rear LH outlet solenoid circuit.	
C1127	RR RH OUT ABS SOL	When the control unit detects a malfunction in the rear RH outlet solenoid circuit.	

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
FR LH OUT ABS SOL
FR RH OUT ABS SOL
RR LH OUT ABS SOL
RR RH OUT ABS SOL

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-51. "Diagnosis Procedure"](#).
NO >> Inspection End

Diagnosis Procedure

INFOID:0000000011562622

Regarding Wiring Diagram information, refer to [BRC-92. "Wiring Diagram"](#).

1. CONNECTOR INSPECTION

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check terminals for deformation, disconnection, looseness, and so on. If any malfunction is found, repair or replace terminals.
4. Reconnect connectors and then perform the self-diagnosis. Refer to [BRC-24. "CONSULT Function \(ABS\)"](#).

Is any item indicated on the self-diagnosis display?

- YES >> GO TO 2
NO >> Poor connection of connector terminals. Repair or replace connector.

2. CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.

C1121, C1123, C1125, C1127 OUT ABS SOL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

3. Check voltage between ABS actuator and electric unit (control unit) connector E125 terminal 32 and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E125	32	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3
NO >> Repair or replace malfunctioning components.

3.CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY GROUND CIRCUIT

Check continuity between ABS actuator and electric unit (control unit) connector E125 terminals 16, 47 and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E125	16, 47	Ground	Yes

Is the inspection result normal?

- YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-116. "Removal and Installation"](#).
NO >> Repair or replace malfunctioning components.

Component Inspection

INFOID:0000000011562623

1.CHECK ACTIVE TEST

1. Select each test menu item on "ACTIVE TEST".
2. On the display, touch "Up", "Keep", and "Down", and check that the system operates as shown in the table below.

Operation		ABS solenoid valve		
		Up	Keep	Down
FR RH SOL	FR RH IN SOL	Off	On	On
	FR RH OUT SOL	Off	Off	On*
FR LH SOL	FR LH IN SOL	Off	On	On
	FR LH OUT SOL	Off	Off	On*
RR RH SOL	RR RH IN SOL	Off	On	On
	RR RH OUT SOL	Off	Off	On*
RR LH SOL	RR LH IN SOL	Off	On	On
	RR LH OUT SOL	Off	Off	On*

*: On for 1 to 2 seconds after the touch, and then Off

Is the inspection result normal?

- YES >> Inspection End
NO >> Go to diagnosis procedure. Refer to [BRC-68. "Diagnosis Procedure"](#).

Special Repair Requirement

INFOID:0000000011562624

1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

C1121, C1123, C1125, C1127 OUT ABS SOL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

2. CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit).
Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

C1130, C1131, C1132, C1133, C1136 ENGINE SIGNAL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1130, C1131, C1132, C1133, C1136 ENGINE SIGNAL

DTC Logic

INFOID:000000011885453

NOTE:

Before performing Diagnosis Procedure, confirm if DTC is PAST or CURRENT. If DTC is CURRENT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace ABS actuator and electric unit (control unit) for a PAST DTC.

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause	
			Past DTC	Current DTC
C1130	ENGINE SIGNAL 1	When a malfunction is detected in ECM system.	• Low battery voltage • Harness or connector • CAN communication line	• Low battery voltage • CAN communication line • ECM • ABS actuator and electric unit (control unit)
C1131	ENGINE SIGNAL 2			
C1132	ENGINE SIGNAL 3			
C1133	ENGINE SIGNAL 4			
C1136	ENGINE SIGNAL 6			

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [BRC-54, "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.

NO >> Refer to [BRC-54, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000011885454

1. CHECK SELF DIAGNOSTIC RESULT FOR ENGINE SYSTEM

ⓂWith CONSULT.

Perform "Self Diagnostic Result". Refer to [EC-49, "CONSULT Function"](#).

Are any ECM DTCs detected?

YES >> Refer to [EC-76, "DTC Index"](#).

NO >> GO TO 2.

2. CHECK SELF DIAGNOSTIC RESULT FOR ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

ⓂWith CONSULT.

1. Perform "Self Diagnostic Result" and erase DTCs.
2. Turn ignition switch OFF.
3. Start engine and drive vehicle for a short period of time.
4. Check that malfunction indicator lamp (MIL) turns OFF.
5. Stop vehicle and perform "Self Diagnostic Result".

Is DTC C1130 detected?

YES >> GO TO 3.

NO >> Inspection End.

3. CHECK TERMINALS

Check pin terminals and connection of connectors for abnormal conditions.

C1130, C1131, C1132, C1133, C1136 ENGINE SIGNAL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace malfunctioning components.

4. CHECK SELF DIAGNOSTIC RESULT FOR ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Ⓜ With CONSULT.

1. Perform "Self Diagnostic Result" and erase DTCs.
2. Turn ignition switch OFF.
3. Start engine and drive vehicle for a short period of time.
4. Check that malfunction indicator lamp (MIL) turns OFF.
5. Stop vehicle and perform "Self Diagnostic Result".

Is DTC C1130 detected?

YES (Past DTC)>>Inspection End.

YES (Current DTC)>>Replace ABS actuator and electric unit (control unit). Refer to [BRC-116. "Removal and Installation"](#).

NO >> Inspection End.

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

C1140 ACTUATOR RLY

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1140 ACTUATOR RLY

Description

INFOID:000000011562628

Activates or deactivates each solenoid valve according to the signals transmitted by the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000011562629

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1140	ACTUATOR RLY	ABS actuator relay or circuit malfunction.	<ul style="list-style-type: none">• Harness or connector• ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1.CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
ACTUATOR RLY

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-56. "Diagnosis Procedure"](#).
NO >> Inspection End

Diagnosis Procedure

INFOID:000000011562630

Regarding Wiring Diagram information, refer to [BRC-92. "Wiring Diagram"](#).

1.CONNECTOR INSPECTION

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check terminals for deformation, disconnection, looseness, and so on. If any malfunction is found, repair or replace terminals.
4. Reconnect connectors and then perform the self-diagnosis. Refer to [BRC-24. "CONSULT Function \(ABS\)"](#).

Is any item indicated on the self-diagnosis display?

- YES >> GO TO 2
NO >> Poor connection of connector terminals. Repair or replace connector.

2.CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check voltage between ABS actuator and electric unit (control unit) connector E125 terminal 32 and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E125	32	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3
NO >> Repair or replace malfunctioning components.

C1140 ACTUATOR RLY

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

3.CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY GROUND CIRCUIT

Check continuity between ABS actuator and electric unit (control unit) connector E125 terminals 16, 47 and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E125	16, 47	Ground	Yes

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-116. "Removal and Installation"](#).

NO >> Repair or replace malfunctioning components.

Component Inspection

INFOID:000000011562631

1.CHECK ACTIVE TEST

1. On "ACTIVE TEST", select "ABS MOTOR".
2. Touch On and Off on screen. Make sure motor relay and actuator relay operates as shown in table below.

Operation	On	Off
MOTOR RELAY	On	Off
ACTUATOR RLY	On	On

Is the inspection result normal?

YES >> Inspection End

NO >> Go to diagnosis procedure. Refer to [BRC-39. "Diagnosis Procedure"](#).

Special Repair Requirement

INFOID:000000011562632

1.ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

2.CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-9. "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

C1142 PRESS SENSOR

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

C1142 PRESS SENSOR

DTC Logic

INFOID:000000011885451

NOTE:

Before performing Diagnosis Procedure, confirm if DTC is PAST or CURRENT. If DTC is CURRENT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace ABS actuator and electric unit (control unit) for a PAST DTC.

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause	
			Past DTC	Current DTC
C1142	PRESS SEN CIRCUIT	When a malfunction is detected in master cylinder pressure sensor.	<ul style="list-style-type: none">• Harness or connector• Stop lamp switch system• Trapped air in hydraulic brake system	<ul style="list-style-type: none">• Stop lamp switch system• Brake system• Trapped air in hydraulic brake system• ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [BRC-58. "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.

NO >> Refer to [BRC-58. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000011885452

1. CHECK STOP LAMP SWITCH SYSTEM

Check stop lamp switch system. Refer to [BRC-46. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace malfunctioning components.

2. CHECK BRAKE FLUID LEAKAGE

Check brake fluid leakage. Refer to [BR-17. "On Board Inspection"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace malfunctioning components.

3. CHECK BRAKE PEDAL AND ADJUST STOP LAMP SWITCH

Check brake pedal and adjust stop lamp switch. Refer to [BR-14. "Inspection and Adjustment - Standard Pedal"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace malfunctioning components.

4. CHECK SELF DIAGNOSTIC RESULT

C1142 PRESS SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

④ With CONSULT.

1. Turn ignition switch ON.
2. Perform "Self Diagnostic Result".
3. Erase DTCs.
4. Start engine and drive vehicle for a short period of time.
5. Turn ignition switch ON.
6. Perform "Self Diagnostic Result".

Is DTC C1142 detected?

- YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-116, "Removal and Installation"](#).
- NO >> Inspection End.

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

C1143, C1144 STEERING ANGLE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1143, C1144 STEERING ANGLE SENSOR

Description

INFOID:000000011562640

The steering angle sensor detects the rotation amount, angular velocity and direction of the steering wheel, and transmits the data to the ABS actuator and electric unit (control unit) via CAN communication.

DTC Logic

INFOID:000000011562641

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1143	ST ANG SEN CIRCUIT	Neutral position of steering angle sensor is dislocated, or the steering angle sensor is malfunctioning.	• Harness or connector • Steering angle sensor • ABS actuator and electric unit (control unit)
C1144	ST ANG SEN SIGNAL	Neutral position of steering angle sensor is not finished.	

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
ST ANG SEN CIRCUIT
ST ANG SEN SIGNAL

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-60, "Diagnosis Procedure"](#).
NO >> Inspection End

Diagnosis Procedure

INFOID:000000011562642

Regarding Wiring Diagram information, refer to [BRC-92, "Wiring Diagram"](#).

1. CONNECTOR INSPECTION

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) and steering angle sensor connectors.
3. Check terminals for deformation, disconnection, looseness, and so on. If any malfunction is found, repair or replace terminals.
4. Reconnect connectors and then perform the self-diagnosis. Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).

Is any item indicated on the self-diagnosis display?

- YES >> GO TO 2
NO >> Poor connection of connector terminals. Repair or replace connector.

2. CHECK STEERING ANGLE SENSOR HARNESS

1. Turn ignition switch OFF.
2. Disconnect steering angle sensor connector.


C1143, C1144 STEERING ANGLE SENSOR

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >


- Check continuity between steering angle sensor connector M17 terminal 2 and ground.

Steering angle sensor		—	Continuity
Connector	Terminal		
M17	2	Ground	Yes

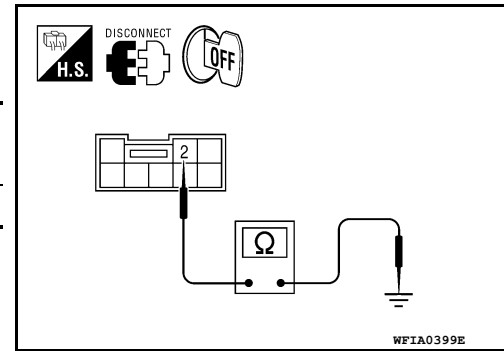

- Turn ignition switch ON.
- Check voltage between steering angle sensor connector M17 terminal 3 and ground.

Steering angle sensor		—	Voltage
Connector	Terminal		
M17	3	Ground	Battery voltage

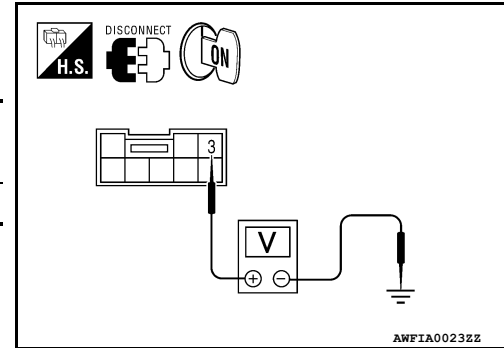

Is the inspection result normal?

- YES >> GO TO 3
- NO >> Repair or replace malfunctioning components.

3.CHECK DATA MONITOR

- Connect the steering angle sensor and ABS actuator and electric unit (control unit) connectors.
- Perform the steering angle sensor component inspection. Refer to [BRC-61. "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-116. "Removal and Installation"](#).
- NO >> Replace steering angle sensor and adjust neutral position of steering angle sensor. Refer to [BRC-118. "Removal and Installation"](#).

Component Inspection

INFOID:000000011562643

1.CHECK DATA MONITOR

Select "STR ANGLE SIG" in "DATA MONITOR" and check steering angle sensor signal.

Steering condition	STR ANGLE SIG (DATA MONITOR)
Driving straight	$\pm 2.5^\circ$
Turn 90° to right	Approx. +90°
Turn 90° to left	Approx. -90°

Is the inspection result normal?

- YES >> Inspection End
- NO >> Go to diagnosis procedure. Refer to [BRC-60. "Diagnosis Procedure"](#).

Special Repair Requirement

INFOID:000000011562644

1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

C1143, C1144 STEERING ANGLE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

2. CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit).
Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

C1155 BR FLUID LEVEL LOW

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1155 BR FLUID LEVEL LOW

DTC Logic

INFOID:0000000011885455

NOTE:

- Check brake fluid level in brake reservoir tank before starting inspection.
- Before performing Diagnosis Procedure, confirm if DTC is PAST or CURRENT. If DTC is CURRENT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace ABS actuator and electric unit (control unit) for a PAST DTC.

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause	
			Past DTC	Current DTC
C1155	BR FLUID LEVEL LOW	Brake fluid level is low or communication line between the ABS actuator and electric unit (control unit) and brake fluid level switch is open or shorted.	<ul style="list-style-type: none">• Brake fluid level• Harness or connector• Brake fluid level switch	<ul style="list-style-type: none">• Brake fluid level• Harness or connector• Brake fluid level switch

DTC CONFIRMATION PROCEDURE

1. CHECK BRAKE FLUID LEVEL

Check brake fluid level. Refer to [BR-17. "On Board Inspection"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Fill brake fluid to proper level. Refer to [BR-17. "Drain and Refill"](#). GO TO 2.

2. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [BRC-63. "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 3.

NO >> Inspection End.

3. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.

NO >> Refer to [BRC-63. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000011885456

Regarding Wiring Diagram information, refer to [BRC-92. "Wiring Diagram"](#).

1. CONNECTOR INSPECTION

1. Turn ignition switch OFF.
2. Disconnect combination meter and brake fluid level switch connectors.
3. Check connectors and terminals for deformation, disconnection, looseness or damage.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace as necessary.

2. CHECK BRAKE FLUID LEVEL SWITCH

Perform the brake fluid level switch component inspection. Refer to [BRC-64. "Component Inspection"](#).

C1155 BR FLUID LEVEL LOW

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace brake fluid level switch. Refer to [BR-26, "Exploded View"](#).

3. CHECK BRAKE FLUID LEVEL SWITCH HARNESS

1. Check continuity between combination meter connector M24 terminal 18 and brake fluid level switch connector E21 terminal 1.

Combination meter		Brake fluid level switch		Continuity
Connector	Terminal	Connector	Terminal	
M24	18	E21	1	Yes

2. Check continuity between combination meter connector and ground.

Combination meter		—	Continuity
Connector	Terminal		
M24	18	Ground	No

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace malfunctioning components.

4. CHECK BRAKE FLUID LEVEL SWITCH GROUND CIRCUIT

Check continuity between brake fluid level switch connector E21 terminal 2 and ground.

Brake fluid level switch		—	Continuity
Connector	Terminal		
E21	2	Ground	Yes

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-116, "Removal and Installation"](#)

NO >> Repair or replace malfunctioning components.

Component Inspection

INFOID:000000011885457

1. CHECK BRAKE FLUID LEVEL SWITCH


1. Turn ignition switch OFF.
2. Disconnect brake fluid level switch connector.
3. Check continuity between brake fluid level switch terminals 1 and 2.

Brake fluid level switch terminals	Condition	Continuity
1—2	Brake fluid reservoir full	No
	Brake fluid reservoir empty	Yes

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace brake fluid level switch. Refer to [BR-26, "Exploded View"](#).

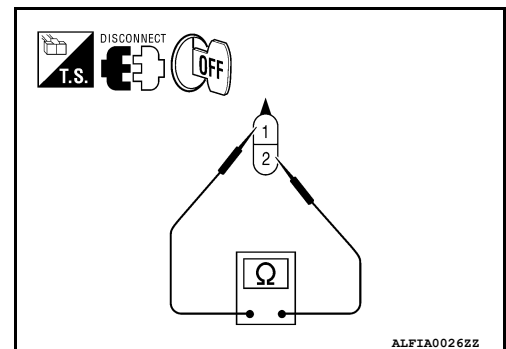

C1156 ST ANG SEN COM CIR

Description

INFOID:0000000011562650

The steering angle sensor is connected to the ABS actuator and electric unit (control unit) in addition to CAN lines. CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

INFOID:0000000011562651

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1156	ST ANG SEN COM CIR	When steering angle sensor is not transmitting CAN communication signal to the ABS actuator and electric unit (control unit).	<ul style="list-style-type: none"> • Harness or connector • CAN communication line • Steering angle sensor • ABS actuator and electric unit (control unit)

BRC

DTC CONFIRMATION PROCEDURE

1.CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
ST ANG SEN COM CIR

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-65, "Diagnosis Procedure"](#).
- NO >> Inspection End

Diagnosis Procedure

INFOID:0000000011562652

1.CONNECTOR INSPECTION

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check terminals for deformation, disconnection, looseness, and so on. If any malfunction is found, repair or replace terminals.
4. Reconnect connector and perform self-diagnosis. Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).

Self-diagnosis results
CAN COMM CIRCUIT
ST ANG SEN COM CIR

Is above displayed on the self-diagnosis display?

- YES >> Refer to [LAN-14, "Trouble Diagnosis Flow Chart"](#).
- NO >> Inspection End

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

C1160 DECEL G SEN SET

Description

INFOID:000000011562653

The yaw rate/side/decel G sensor detects the yaw rate/side/decel G affecting the vehicle, and transmits the data to the ABS actuator and electric unit (control unit) as an analog voltage signal.

DTC Logic

INFOID:000000011562654

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1160	DECEL G SEN SET	ABS decel G sensor adjustment is incomplete.	<ul style="list-style-type: none"> Decel G sensor calibration Yaw rate/side/decel G sensor ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
DECEL G SEN SET

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-66. "Diagnosis Procedure"](#).
 NO >> Inspection End

Diagnosis Procedure

INFOID:000000011562655

1. PERFORM SELF-DIAGNOSIS

Perform ABS actuator and electric unit (control unit) self-diagnosis. Refer to [BRC-24. "CONSULT Function \(ABS\)"](#).

Self-diagnosis results
DECEL G SEN SET

Do self-diagnosis results indicate anything other than shown above?

- YES >> Perform repair or replacement for the item indicated.
 NO >> Perform calibration of decel G sensor. Refer to [BRC-9. "CALIBRATION OF DECEL G SENSOR : Description"](#). GO TO 2

2. PERFORM SELF-DIAGNOSIS AGAIN

1. Turn the ignition switch to OFF and then to ON and erase self-diagnosis results. Refer to [BRC-24. "CONSULT Function \(ABS\)"](#).
2. Perform ABS actuator and electric unit (control unit) self-diagnosis again. Refer to [BRC-24. "CONSULT Function \(ABS\)"](#).

Are any self-diagnosis results displayed?

- YES >> Replace yaw rate/side/decel G sensor. Refer to [BRC-119. "Removal and Installation"](#).
 NO >> Inspection End

C1163 ST ANGLE SEN SAFE

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1163 ST ANGLE SEN SAFE

Description

INFOID:0000000011562656

The steering angle sensor detects the rotation amount, angular velocity and direction of the steering wheel, and transmits the data to the ABS actuator and electric unit (control unit) via CAN communication.

DTC Logic

INFOID:0000000011562657

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1163	ST ANGL SEN SAFE	When steering angle sensor is in safe mode.	• Adjust steering angle sensor neutral position

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
ST ANGL SEN SAFE

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-67. "Diagnosis Procedure"](#).
NO >> Inspection End

Diagnosis Procedure

INFOID:0000000011562658

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Adjust steering angle sensor neutral position. Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

2. INDICATOR LAMP CHECK

Check that VDC OFF indicator lamp is off.

Is VDC OFF indicator lamp off?

- YES >> Inspection End
NO >> Perform ABS actuator and electric unit (control unit) self-diagnosis. Refer to [BRC-24. "CONSULT Function \(ABS\)"](#).

C1164, C1165, C1166, C1167 CV/SV SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1164, C1165, C1166, C1167 CV/SV SYSTEM

Description

INFOID:000000011562659

CV1, CV2 (CUT VALVE)

The cut valve shuts off the normal brake fluid path from the master cylinder, when VDC/TCS is activated.

SV1, SV2 (SUCTION VALVE)

The suction valve supplies the brake fluid from the master cylinder to the pump, when VDC/TCS is activated.

DTC Logic

INFOID:000000011562660

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1164	CV1	VDC switch-over solenoid valve (CV1) on the primary side is open circuit or shorted, or the control line is open or shorted to the power supply or the ground.	<ul style="list-style-type: none">• Harness or connector• ABS actuator and electric unit (control unit)
C1165	CV2	VDC switch-over solenoid valve (CV2) on the primary side is open circuit or shorted, or the control line is open or shorted to the power supply or the ground.	
C1166	SV1	VDC switch-over solenoid valve (SV1) on the primary side is open circuit or shorted, or the control line is open or shorted to the power supply or the ground.	
C1167	SV2	VDC switch-over solenoid valve (SV2) on the primary side is open circuit or shorted, or the control line is open or shorted to the power supply or the ground.	

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
CV1
CV2
SV1
SV2

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-68. "Diagnosis Procedure"](#).
NO >> Inspection End

Diagnosis Procedure

INFOID:000000011562661

Regarding Wiring Diagram information, refer to [BRC-92. "Wiring Diagram"](#).

1. CONNECTOR INSPECTION

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check terminals for deformation, disconnection, looseness, and so on. If any malfunction is found, repair or replace terminals.
4. Reconnect connectors and then perform the self-diagnosis. Refer to [BRC-24. "CONSULT Function \(ABS\)"](#).

Is any item indicated on the self-diagnosis display?

C1164, C1165, C1166, C1167 CV/SV SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

YES >> GO TO 2

NO >> Poor connection of connector terminals. Repair or replace connector.

2. CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check voltage between ABS actuator and electric unit (control unit) connector E125 terminal 32 and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E125	32	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace malfunctioning components.

3. CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY GROUND CIRCUIT

Check continuity between ABS actuator and electric unit (control unit) connector E125 terminals 16, 47 and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E125	16, 47	Ground	Yes

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-116, "Removal and Installation"](#).

NO >> Repair or replace malfunctioning components.

Component Inspection

INFOID:0000000011562662

1. CHECK ACTIVE TEST

1. Select each test menu item on "ACTIVE TEST".
2. On the display, touch "Up", "ACT UP", and "ACT KEEP", and check that the system operates as shown in the table below.

Operation		ABS solenoid valve (ACT)		
		Up	ACT UP	ACT KEEP
FR RH ABS SOLENOID (ACT)	FR RH IN SOL	Off	Off	Off
	FR RH OUT SOL	Off	Off	Off
	CV1	Off	On	On
	SV1	Off	On*	Off
FR LH ABS SOLENOID (ACT)	FR LH IN SOL	Off	Off	Off
	FR LH OUT SOL	Off	Off	Off
	CV1	Off	On	On
	SV1	Off	On*	Off
RR RH ABS SOLENOID (ACT)	RR RH IN SOL	Off	Off	Off
	RR RH OUT SOL	Off	Off	Off
	CV2	Off	On	On
	SV2	Off	On*	Off

C1164, C1165, C1166, C1167 CV/SV SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Operation		ABS solenoid valve (ACT)		
		Up	ACT UP	ACT KEEP
RR LH ABS SOLENOID (ACT)	RR LH IN SOL	Off	Off	Off
	RR LH OUT SOL	Off	Off	Off
	CV2	Off	On	On
	SV2	Off	On*	Off

*: On for 1 to 2 seconds after the touch, and then Off

Is the inspection result normal?

YES >> Inspection End

NO >> Go to diagnosis procedure. Refer to [BRC-68, "Diagnosis Procedure"](#).

Special Repair Requirement

INFOID:000000011562663

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

2. CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

C1178, C1181, C1184, C1189 ABS ACTIVE BOOSTER

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1178, C1181, C1184, C1189 ABS ACTIVE BOOSTER

Description

INFOID:000000011562664

The active brake booster consists of a vacuum booster, an active booster control group and a delta stroke sensor. If a brake booster system malfunction occurs due to loss of vacuum, the delta stroke sensor will signal the ABS actuator and electric unit (control unit) that a booster malfunction has occurred. The active booster then applies supplemental force to the master cylinder relative to the amount of force exerted on the brake pedal.

DTC Logic

INFOID:000000011562665

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1178	ABS ACTIVE BOOSTER SV NG	Active booster solenoid is malfunctioning, or signal line of active booster servo is open or shorted.	<ul style="list-style-type: none">• Harness or connector• Active booster• ABS actuator and electric unit (control unit)
C1181	ABS ACTIVE BOOSTER RESPONSE NG	Active booster response is malfunctioning, or signal line of active booster response is open or shorted.	
C1184	ABS BRAKE RELEASE SW NG	Brake release switch is malfunctioning, or signal line of brake release switch is open or shorted.	
C1189	ABS BRAKE BOOSTER DEFECT	Brake booster is defective or malfunctioning.	

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
ABS ACTIVE BOOSTER SV NG
ABS ACTIVE BOOSTER RESPONSE NG
ABS BRAKE RELEASE SW NG
ABS BRAKE BOOSTER DEFECT

Is above displayed on the self-diagnosis display?

YES >> Proceed to diagnosis procedure. Refer to [BRC-71, "Diagnosis Procedure"](#).

NO >> Inspection End

Diagnosis Procedure

INFOID:000000011562666

Regarding Wiring Diagram information, refer to [BRC-92, "Wiring Diagram"](#).

1. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the active booster and ABS actuator and electric unit (control unit) connectors.
3. Inspect the terminals for deformation, disconnection, looseness, or damage.

Is the inspection result normal?

YES >> GO TO 2

NO >> Repair connector.

2. ACTIVE BOOSTER CIRCUIT INSPECTION

1. Measure the continuity between ABS actuator and electric unit (control unit) connector E125 and active booster connector E49 .

C1178, C1181, C1184, C1189 ABS ACTIVE BOOSTER

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

ABS actuator and electric unit (control unit)		Active booster		Continuity
Connector	Terminal	Connector	Terminal	
E125	17	E49	3	Yes
	27		1	
	28		5	
	30		2	
	31		4	

2. Measure the continuity between ABS actuator and electric unit (control unit) connector E125 and body ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E125	17	Ground	No
	27		
	28		
	30		
	31		

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace harness or connector.

3. ACTIVE BOOSTER INSPECTION

1. Reconnect the active booster and ABS actuator and electric unit (control unit) connectors.
2. Perform the active booster component inspection. Refer to [BRC-72, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-116, "Removal and Installation"](#).

NO >> Replace the active booster. Refer to [BR-28, "Removal and Installation"](#).

Component Inspection

INFOID:000000011562667

1. CHECK DATA MONITOR

Use "DATA MONITOR" to check if the status of "RELEASE SWITCH NO" and "RELEASE SWITCH NC" is normal.

Condition	RELEASE SWITCH NO (DATA MONITOR)	RELEASE SWITCH NC (DATA MONITOR)
When brake pedal is depressed.	ON	OFF
When brake pedal is released.	OFF	ON

Is the inspection result normal?

YES >> Inspection End

NO >> Go to diagnosis procedure. Refer to [BRC-71, "Diagnosis Procedure"](#).

Special Repair Requirement

INFOID:000000011562668

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

C1178, C1181, C1184, C1189 ABS ACTIVE BOOSTER

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

>> GO TO 2

2. CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit).
Refer to [BRC-9. "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

A

B

C

D

E

BRC

G

H

I

J

K

L

M

N

O

P

C1179 ABS DELTA S SEN NG

Description

INFOID:000000011562669

The active brake booster consists of a vacuum booster, an active booster control group and a delta stroke sensor. If a brake booster system malfunction occurs due to loss of vacuum, the delta stroke sensor will signal the ABS actuator and electric unit (control unit) that a booster malfunction has occurred. The active booster then applies supplemental force to the master cylinder relative to the amount of force exerted on the brake pedal.

DTC Logic

INFOID:000000011562670

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1179	ABS DELTA S SEN NG	Delta stroke sensor is malfunctioning, or signal line of delta stroke sensor is open or shorted.	<ul style="list-style-type: none"> Harness or connector Delta stroke sensor ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
ABS DELTA S SEN NG

Is above displayed on the self-diagnosis display?

YES >> Proceed to diagnosis procedure. Refer to [BRC-74, "Diagnosis Procedure"](#).

NO >> Inspection End

Diagnosis Procedure

INFOID:000000011562671

Regarding Wiring Diagram information, refer to [BRC-92, "Wiring Diagram"](#).

1. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the delta stroke sensor and ABS actuator and electric unit (control unit) connectors.
3. Inspect the terminals for deformation, disconnection, looseness, or damage.

Is the inspection result normal?

YES >> GO TO 2

NO >> Repair connector.

2. DELTA STROKE SENSOR CIRCUIT INSPECTION

1. Measure the continuity between ABS actuator and electric unit (control unit) connector E125 and delta stroke sensor connector E114.

ABS actuator and electric unit (control unit)		Delta stroke sensor		Continuity
Connector	Terminal	Connector	Terminal	
E125	26	E114	1	Yes
	39		3	
	40		5	

C1179 ABS DELTA S SEN NG

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

2. Measure the continuity between ABS actuator and electric unit (control unit) connector E125 and body ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E125	26	Ground	No
	39		
	40		

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace harness or connector.

3.DELTA STROKE SENSOR INSPECTION

1. Reconnect the delta stroke sensor and ABS actuator and electric unit (control unit) connectors.
2. Perform the delta stroke sensor component inspection. Refer to [BRC-75. "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-116. "Removal and Installation"](#).

NO >> Replace the delta stroke sensor.

Component Inspection

INFOID:000000011562672

1.CHECK DATA MONITOR

Use "DATA MONITOR" to check if the status of "DELTA S SEN" is normal.

Condition	DELTA S SEN (DATA MONITOR)
When brake pedal is depressed.	1.05–1.80 mm
When brake pedal is released.	0.00 mm (+0.6/-0.4)

Is the inspection result normal?

YES >> Inspection End

NO >> Go to diagnosis procedure. Refer to [BRC-74. "Diagnosis Procedure"](#).

Special Repair Requirement

INFOID:000000011562673

1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

2.CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-9. "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

C1187 DIFFERENTIAL LOCK CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1187 DIFFERENTIAL LOCK CONTROL UNIT

Description

INFOID:000000011562674

The differential lock control unit is connected to the ABS actuator and electric unit (control unit) via CAN lines. CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

INFOID:000000011562675

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1187	ABS DIFLOCK CONTROL- LER NG	Differential lock controller malfunction.	<ul style="list-style-type: none">• Harness or connector• CAN communication line• Differential lock control unit• ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results

ABS DIFLOCK CONTROLLER NG

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-76, "Diagnosis Procedure"](#).
NO >> Inspection End

Diagnosis Procedure

INFOID:000000011562676

1. CONNECTOR INSPECTION

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check terminal for deformation, disconnection, looseness, and so on. If any malfunction is found, repair or replace terminal.
4. Reconnect connector and perform self-diagnosis. Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).

Self-diagnosis results

ABS DIFLOCK CONTROLLER NG

Is above displayed on the self-diagnosis display?

- YES >> Refer to [LAN-14, "Trouble Diagnosis Flow Chart"](#).
NO >> Inspection End

U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

U1000 CAN COMM CIRCUIT

Description

INFOID:0000000011562677

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

INFOID:0000000011562678

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
U1000	CAN COMM CIRCUIT	When ABS actuator and electric unit (control unit) is not transmitting or receiving CAN communication signal for 2 seconds or more.	<ul style="list-style-type: none">CAN communication lineABS actuator and electric unit (control unit)

BRC

Diagnosis Procedure

INFOID:0000000011562679

1. CONNECTOR INSPECTION

- Turn ignition switch OFF.
- Disconnect the ABS actuator and electric unit (control unit) connector
- Check the terminals for deformation, disconnection, looseness, and so on. If there is a malfunction, repair or replace the terminal.
- Reconnect connector and perform self-diagnosis. Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).
Is "CAN COMM CIRCUIT" displayed in self-diagnosis display items?
YES >> Print out the self-diagnostic results, and refer to [LAN-14, "Trouble Diagnosis Flow Chart"](#).
NO >> Connector terminal is loose, damaged, open, or shorted.

VDC OFF SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

VDC OFF SWITCH

Description

INFOID:000000011562680

VDC OFF switch can deactivate (turn OFF) the VDC/TCS function by pressing the VDC OFF switch.

Component Function Check

INFOID:000000011562681

1.CHECK VDC OFF SWITCH OPERATION

Turn ON/OFF the VDC OFF switch and check that the VDC OFF indicator lamp in the combination meter turns ON/OFF correctly.

Condition	VDC OFF indicator lamp illumination status
VDC OFF switch: ON	ON
VDC OFF switch: OFF	OFF

Is the inspection result normal?

YES >> Inspection End

NO >> Go to diagnosis procedure. Refer to [BRC-78. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000011562682

Regarding Wiring Diagram information, refer to [BRC-92. "Wiring Diagram"](#).

1.CHECK VDC OFF SWITCH

Perform the VDC OFF switch component inspection. Refer to [BRC-79. "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 2

NO >> Replace VDC OFF switch.

2.CHECK VDC OFF SWITCH HARNESS

1. Disconnect ABS actuator and electric unit (control unit) connector.
2. Check continuity between ABS actuator and electric unit (control unit) connector E125 terminal 38 and VDC OFF switch connector M148 terminal 1.

ABS actuator and electric unit (control unit)		VDC OFF switch		Continuity
Connector	Terminal	Connector	Terminal	
E125	38	M148	1	Yes

3. Check continuity between ABS actuator and electric unit (control unit) connector E125 terminal 38 and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E125	38	Ground	No

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace harness.

3.CHECK VDC OFF SWITCH GROUND

VDC OFF SWITCH

[VDC/TCS/ABS]


< DTC/CIRCUIT DIAGNOSIS >

Check continuity between VDC OFF switch connector M148 terminal 2 and ground.

VDC OFF switch		—	Continuity
Connector	Terminal		
M148	2	Ground	Yes

Is the inspection result normal?

- YES >> GO TO 4
- NO >> Repair or replace harness.

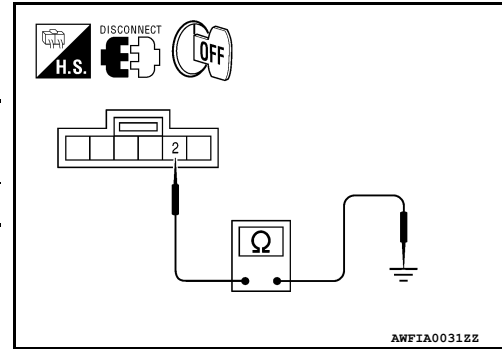

4. CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-27, "Diagnosis Description"](#).

Is the inspection result normal?

- YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-116, "Removal and Installation"](#).
- NO >> Replace combination meter. Refer to [MWI-95, "Removal and Installation"](#).

Component Inspection

INFOID:000000011562683


1. CHECK VDC OFF SWITCH

1. Turn ignition switch OFF.
2. Disconnect VDC OFF switch connector.
3. Check continuity between VDC OFF switch terminals.

VDC OFF switch terminals	Condition	Continuity
1 - 2	When VDC OFF switch is pressed.	Yes
	When VDC OFF switch is released.	No

Is the inspection result normal?

- YES >> Inspection End
- NO >> Replace VDC OFF switch.

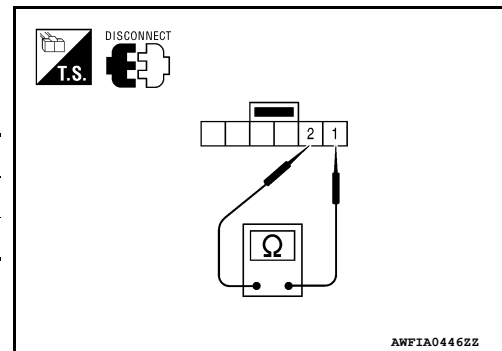

Special Repair Requirement

INFOID:000000011562684

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

2. CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

ABS WARNING LAMP

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

ABS WARNING LAMP

Description

INFOID:0000000011562685

x: ON –: OFF

Condition	ABS warning lamp
Ignition switch OFF	–
For 2 seconds after turning ON ignition switch	x
2 seconds later after turning ON ignition switch	–
ABS function is malfunctioning.	x
EBD function is malfunctioning.	x

Component Function Check

INFOID:0000000011562686

1. CHECK ABS WARNING LAMP OPERATION

Check that the lamp illuminates for approximately 2 seconds after the ignition switch is turned ON.

Is the inspection result normal?

YES >> Inspection End

NO >> Go to diagnosis procedure. Refer to [BRC-80, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000011562687

1. CHECK SELF-DIAGNOSIS

Perform ABS actuator and electric unit (control unit) self-diagnosis. Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).

Is the inspection result normal?

YES >> GO TO 2

NO >> Check items displayed by self-diagnosis.

2. CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-27, "Diagnosis Description"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-116, "Removal and Installation"](#).

NO >> Replace combination meter. Refer to [MWI-95, "Removal and Installation"](#).

Special Repair Requirement

INFOID:0000000011562688

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

2. CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

BRAKE WARNING LAMP

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

BRAKE WARNING LAMP

Description

INFOID:0000000011562689

x: ON –: OFF

Condition	Brake warning lamp (Note 1)
Ignition switch OFF	–
Ignition switch ON	× (Note 2)
EBD function is malfunctioning.	×

NOTE:

- 1: Brake warning lamp will turn on in case of parking brake operation (when switch is ON) or of brake fluid level switch operation (when brake fluid is insufficient).
- 2: After starting engine, brake warning lamp is turned off.

Component Function Check

INFOID:0000000011562690

1. BRAKE WARNING LAMP OPERATION CHECK

Check that the lamp illuminates after the ignition switch is turned ON, and turns OFF after the engine is started.

Is the inspection result normal?

YES >> Inspection End

NO >> Go to diagnosis procedure. Refer to [BRC-81, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000011562691

1. CHECK SELF-DIAGNOSIS

Perform ABS actuator and electric unit (control unit) self-diagnosis. Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).

Is the inspection result normal?

YES >> GO TO 2

NO >> Check items displayed by self-diagnosis.

2. CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-27, "Diagnosis Description"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-116, "Removal and Installation"](#).

NO >> Replace combination meter. Refer to [MWI-95, "Removal and Installation"](#).

Special Repair Requirement

INFOID:0000000011562692

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

2. CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

VDC OFF INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

VDC OFF INDICATOR LAMP

Description

INFOID:000000011562693

x: ON –: OFF

Condition	VDC OFF indicator lamp
Ignition switch OFF	–
For 2 seconds after turning ON ignition switch	x
2 seconds later after turning ON ignition switch	–
VDC OFF switch turned ON. (VDC function is OFF.)	x
VDC/TCS function is malfunctioning.	–
ABS function is malfunctioning.	–
EBD function is malfunctioning.	–

Component Function Check

INFOID:000000011562694

1.VDC OFF INDICATOR LAMP OPERATION CHECK 1

Check that the lamp illuminates for approximately 2 seconds after the ignition switch is turned ON.

Is the inspection result normal?

YES >> GO TO 2

NO >> Go to diagnosis procedure. Refer to [BRC-82, "Diagnosis Procedure"](#).

2.VDC OFF INDICATOR LAMP OPERATION CHECK 2

Check that the VDC OFF indicator lamp in the combination meter turns ON/OFF correctly when operating the VDC OFF switch.

Is the inspection result normal?

YES >> Inspection End

NO >> Check VDC OFF switch. Refer to [BRC-78, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000011562695

1.CHECK VDC OFF SWITCH

Check that the VDC OFF indicator lamp in the combination meter turns ON/OFF correctly when operating the VDC OFF switch.

Is the inspection result normal?

YES >> GO TO 2

NO >> Check VDC OFF switch. Refer to [BRC-78, "Diagnosis Procedure"](#).

2.CHECK SELF-DIAGNOSIS

Perform ABS actuator and electric unit (control unit) self-diagnosis. Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).

Is the inspection result normal?

YES >> GO TO 3

NO >> Check items displayed by self-diagnosis.

3.CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-27, "Diagnosis Description"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-116, "Removal and Installation"](#).

NO >> Replace combination meter. Refer to [MWI-95, "Removal and Installation"](#).

VDC OFF INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Special Repair Requirement

INFOID:000000011562696

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

2. CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

SLIP INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

SLIP INDICATOR LAMP

Description

INFOID:000000011562697

x: ON –: OFF

Condition	SLIP indicator lamp
Ignition switch OFF	–
For 2 seconds after turning ON ignition switch	x
2 seconds later after turning ON ignition switch	–
VDC/TCS function is malfunctioning.	x
ABS function is malfunctioning.	x
EBD function is malfunctioning.	x

Component Function Check

INFOID:000000011562698

1. CHECK SLIP INDICATOR LAMP OPERATION

Check that the lamp illuminates for approximately 2 seconds after the ignition switch is turned ON.

Is the inspection result normal?

YES >> Inspection End

NO >> Go to diagnosis procedure. Refer to [BRC-84. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000011562699

1. CHECK SELF-DIAGNOSIS

Perform ABS actuator and electric unit (control unit) self-diagnosis. Refer to [BRC-24. "CONSULT Function \(ABS\)"](#).

Is the inspection result normal?

YES >> GO TO 2

NO >> Check items displayed by self-diagnosis.

2. CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-27. "Diagnosis Description"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-116. "Removal and Installation"](#).

NO >> Replace combination meter. Refer to [MWI-95. "Removal and Installation"](#).

Special Repair Requirement

INFOID:000000011562700

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

2. CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-9. "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

ECU DIAGNOSIS INFORMATION

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Reference Value

INFOID:0000000011562701

VALUES ON THE DIAGNOSIS TOOL

CAUTION:

The display shows the control unit calculation data, so a normal value might be displayed even in the event the output circuit (harness) is open or short-circuited.

CONSULT MONITOR ITEM

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
FR LH SENSOR	Wheel speed	0 [km/h (MPH)]	Vehicle stopped
		Nearly matches the speed meter display (± 10% or less)	Vehicle running (Note 1)
FR RH SENSOR	Wheel speed	0 [km/h (MPH)]	Vehicle stopped
		Nearly matches the speed meter display (± 10% or less)	Vehicle running (Note 1)
RR LH SENSOR	Wheel speed	0 [km/h (MPH)]	Vehicle stopped
		Nearly matches the speed meter display (± 10% or less)	Vehicle running (Note 1)
RR RH SENSOR	Wheel speed	0 [km/h (MPH)]	Vehicle stopped
		Nearly matches the speed meter display (± 10% or less)	Vehicle running (Note 1)
DECEL G-SEN	Longitudinal acceleration detected by Decel G-Sensor	Vehicle stopped	Approx. 0 G
		Vehicle running	-1.7 to 1.7 G
FR RH IN SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (in fail-safe mode)	ON
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	OFF
FR RH OUT SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (in fail-safe mode)	ON
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	OFF
FR LH IN SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (in fail-safe mode)	ON
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	OFF
FR LH OUT SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (in fail-safe mode)	ON
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	OFF

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
RR RH IN SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (in fail-safe mode)	ON
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	OFF
RR RH OUT SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (in fail-safe mode)	ON
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	OFF
RR LH IN SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (in fail-safe mode)	ON
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	OFF
RR LH OUT SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (in fail-safe mode)	ON
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	OFF
EBD WARN LAMP	EBD warning lamp (Note 2)	When EBD warning lamp is ON	ON
		When EBD warning lamp is OFF	OFF
STOP LAMP SW	Stop lamp switch signal status	When brake pedal is depressed	ON
		When brake pedal is released	OFF
MOTOR RELAY	Motor and motor relay operation	When the motor relay and motor are operating	ON
		When the motor relay and motor are not operating	OFF
ACTUATOR RLY	Actuator relay operation	When the actuator relay is operating	ON
		When the actuator relay is not operating	OFF
ABS WARN LAMP	ABS warning lamp (Note 2)	When ABS warning lamp is ON	ON
		When ABS warning lamp is OFF	OFF
OFF LAMP	VDC OFF indicator lamp (Note 2)	When VDC OFF indicator lamp is ON	ON
		When VDC OFF indicator lamp is OFF	OFF
OFF SW	VDC OFF switch ON/OFF	VDC OFF switch ON (When VDC OFF indicator lamp is ON)	ON
		VDC OFF switch OFF (When VDC OFF indicator lamp is OFF)	OFF
SLIP LAMP	SLIP indicator lamp (Note 2)	When SLIP indicator lamp is ON	ON
		When SLIP indicator lamp is OFF	OFF
BATTERY VOLT	Battery voltage supplied to the ABS actuator and electric unit (control unit)	Ignition switch ON	10 – 16 V
GEAR	Gear position determined by TCM	1st gear	1
		2nd gear	2
		3rd gear	3
		4th gear	4
		5th gear	5

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
SLCT LVR POSI	A/T selector lever position	P position R position N position D position	P R N D
ENGINE SPEED	With engine running	With engine stopped	0 rpm
		Engine running	Almost in accordance with tachometer display
YAW RATE SEN	Yaw rate detected by yaw rate/side/decel G sensor	When vehicle is stopped	Approx. 0 d/s
		When vehicle turning	-75 to 75 d/s
R POSI SIG	Transmission range switch signal ON/OFF condition	A/T shift position = R position	ON
		A/T shift position = other than R position	OFF
N POSI SIG	Transmission range switch signal ON/OFF condition	A/T shift position = N position	ON
		A/T shift position = other than N position	OFF
P POSI SIG	Transmission range switch signal ON/OFF condition	A/T shift position = P position	ON
		A/T shift position = other than P position	OFF
CV1	VDC switch-over valve	When actuator (switch-over valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (when in fail-safe mode)	ON
		When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON)	OFF
CV2	VDC switch-over valve	When actuator (switch-over valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (when in fail-safe mode)	ON
		When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON)	OFF
SV1	VDC switch-over valve	When actuator (switch-over valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (when in fail-safe mode)	ON
		When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON)	OFF
SV2	VDC switch-over valve	When actuator (switch-over valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (when in fail-safe mode)	ON
		When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON)	OFF
2WD/4WD	Drive axle	2WD model	2WD
		4WD model	4WD
ACCEL POS SIG	Throttle actuator opening/closing is displayed (linked with accelerator pedal)	Accelerator pedal not depressed (ignition switch is ON)	0 %
		Accelerator pedal depressed (ignition switch is ON)	0 - 100 %

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
SIDE G-SENSOR	Transverse G detected by side G sensor	Vehicle stopped	Approx. 0 m/s ²
		Vehicle turning right	Negative value (m/s ²)
		Vehicle turning left	Positive value (m/s ²)
STR ANGLE SIG	Steering angle detected by steering angle sensor	Straight-ahead	Approx. 0±2.5°
		Steering wheel turned	-720 to +720°
BST OPER SIG	Brake booster operation is displayed	Brake booster is active	ON
		Brake booster is inactive	OFF
PRESS SENSOR	Brake fluid pressure detected by front pressure sensor	With ignition switch turned ON and brake pedal released	Approx. 0 bar
		With ignition switch turned ON and brake pedal depressed	-40 to 300 bar
EBD SIGNAL	EBD operation	EBD is active	ON
		EBD is inactive	OFF
ABS SIGNAL	ABS operation	ABS is active	ON
		ABS is inactive	OFF
TCS SIGNAL	TCS operation	TCS is active	ON
		TCS is inactive	OFF
VDC SIGNAL	VDC operation	VDC is active	ON
		VDC is inactive	OFF
ABS FAIL SIG	ABS fail-safe signal	In ABS fail-safe	ON
		ABS is normal	OFF
TCS FAIL SIG	TCS fail-safe signal	In TCS fail-safe	ON
		TCS is normal	OFF
VDC FAIL SIG	VDC fail-safe signal	In VDC fail-safe	ON
		VDC is normal	OFF
CRANKING SIG	Crank operation	Crank is active	ON
		Crank is inactive	OFF
FLUID LEV SW	Brake fluid level switch signal status	When brake fluid level switch ON	ON
		When brake fluid level switch OFF	OFF
PRESS SEN2	Brake fluid pressure detected by rear pressure sensor	With ignition switch turned ON and brake pedal released	Approx. 0 bar
		With ignition switch turned ON and brake pedal depressed	-40 to 300 bar
DELTA S SEN	Value detected by delta stroke sensor	When brake pedal is depressed	1.05 - 1.80 mm
		When brake pedal is released	0.00 mm (+0.6/-0.4)
RELEASE SW NO	Active booster signal status	When brake pedal is depressed	ON
		When brake pedal is released	OFF
RELEASE SW NC	Active booster signal status	When brake pedal is depressed	OFF
		When brake pedal is released	ON
OHB FAIL	OHB fail safe signal	OHB is active	ON
		OHB is inactive	OFF

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >


[VDC/TCS/ABS]

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
HBA FAIL	HBA fail safe signal	HBA is active	ON
		HBA is inactive	OFF
OHB SIG	OHB operation	In OHB fail-safe	ON
		OHB is normal	OFF
HBA SIG	HBA operation	In HBA fail-safe	ON
		HBA is normal	OFF
STP OFF RLY	Stop lamp relay signal	When stop lamp relay is ON	ON
		When stop lamp relay is OFF	OFF
DLOCK SW	Differential lock switch ON/OFF	Differential lock switch ON	ON
		Differential lock switch OFF	OFF
DLOCK CHG SW	Differential lock mode switch signal status	When differential lock mode switch is engaged	ON
		When differential lock mode switch is dis-engaged	OFF

NOTE:

- 1: Confirm tire pressure is normal.
- 2: On and off timing for warning lamp and indicator lamp.
- ABS warning lamp: Refer to [BRC-80, "Description"](#).
- Brake warning lamp: Refer to [BRC-81, "Description"](#).
- VDC OFF indicator lamp: Refer to [BRC-82, "Description"](#).
- SLIP indicator lamp: Refer to [BRC-84, "Description"](#).

TERMINAL LAYOUT

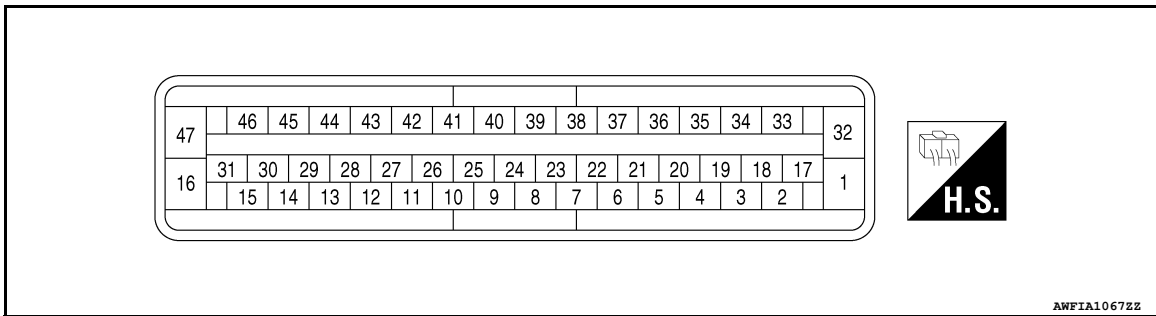

Fail-Safe

INFOID:0000000011562702

CAUTION:

If the Fail-Safe function is activated, perform Self Diagnosis for ABS/TCS/VDC system.

ABS/EBD SYSTEM

In case of an electrical malfunction with the ABS, the ABS warning lamp and SLIP indicator lamp will turn on. In case of an electrical malfunction with the EBD system, the BRAKE warning lamp, ABS warning lamp and SLIP indicator lamp will turn on.

The system will revert to one of the following conditions of the Fail-Safe function.

1. For ABS malfunction, only the EBD is operative and the condition of the vehicle is the same condition of vehicles without ABS/TCS/VDC system.
2. For EBD malfunction, the EBD and ABS become inoperative, and the condition of the vehicle is the same as the condition of vehicles without ABS/TCS/VDC or EBD system.

VDC/TCS SYSTEM

In case of TCS/VDC system malfunction, the SLIP indicator lamp is turned on and the condition of the vehicle is the same as the condition of vehicles without TCS/VDC system. In case of an electrical malfunction with the TCS/VDC system, the ABS control continues to operate normally without TCS/VDC control.

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

DTC No. Index

INFOID:000000011562703

DTC	Items (CONSULT screen terms)	Reference
C1101	RR RH SENSOR-1	BRC-29, "Diagnosis Procedure"
C1102	RR LH SENSOR-1	
C1103	FR RH SENSOR-1	
C1104	FR LH SENSOR-1	
C1105	RR RH SENSOR-2	BRC-34, "Diagnosis Procedure"
C1106	RR LH SENSOR-2	
C1107	FR RH SENSOR-2	
C1108	FR LH SENSOR-2	
C1109	BATTERY VOLTAGE [ABNORMAL]	BRC-36, "Diagnosis Procedure"
C1110	CONTROLLER FAILURE	BRC-38, "DTC Logic"
C1111	PUMP MOTOR	BRC-39, "Description"
C1113	G-SENSOR	BRC-41, "Description"
C1115	ABS SENSOR [ABNORMAL SIGNAL]	BRC-43, "Diagnosis Procedure"
C1116	STOP LAMP SW	BRC-46, "Diagnosis Procedure"
C1120	FR LH IN ABS SOL	BRC-48, "Description"
C1121	FR LH OUT ABS SOL	BRC-51, "Description"
C1122	FR RH IN ABS SOL	BRC-48, "Description"
C1123	FR RH OUT ABS SOL	BRC-51, "Description"
C1124	RR LH IN ABS SOL	BRC-48, "Description"
C1125	RR LH OUT ABS SOL	BRC-51, "Description"
C1126	RR RH IN ABS SOL	BRC-48, "Description"
C1127	RR RH OUT ABS SOL	BRC-51, "Description"
C1130	ENGINE SIGNAL 1	BRC-54, "Diagnosis Procedure"
C1131	ENGINE SIGNAL 2	
C1132	ENGINE SIGNAL 3	
C1133	ENGINE SIGNAL 4	
C1136	ENGINE SIGNAL 6	
C1140	ACTUATOR RLY	
C1142	PRESS SEN CIRCUIT	BRC-58, "Diagnosis Procedure"
C1143	ST ANG SEN CIRCUIT	BRC-60, "Description"
C1144	ST ANG SEN SIGNAL	
C1145	YAW RATE SENSOR	BRC-41, "Description"
C1146	SIDE G-SEN CIRCUIT	
C1155	BR FLUID LEVEL LOW	BRC-63, "Diagnosis Procedure"
C1156	ST ANG SEN COM CIR	BRC-65, "Description"
C1160	DECEL G SEN SET	BRC-66, "Description"
C1163	ST ANGL SEN SAFE	BRC-67, "Description"
C1164	CV1	BRC-68, "Description"
C1165	CV2	
C1166	SV1	
C1167	SV2	
C1170	VARIANT CODING	BRC-38, "DTC Logic"

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

DTC	Items (CONSULT screen terms)	Reference
C1178	ABS ACTIVE BOOSTER SV NG	BRC-71, "Description"
C1179	ABS DELTA S SEN NG	BRC-74, "Description"
C1181	ABS ACTIVE BOOSTER RESPONSE NG	BRC-71, "Description"
C1184	ABS BRAKE RELEASE SW NG	
C1187	ABS DIFLOCK CONTROLLER NG	BRC-76, "Description"
C1189	ABS BRAKE BOOSTER DEFECT	BRC-71, "Description"
U1000	CAN COMM CIRCUIT	BRC-77, "Description"

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

BRAKE CONTROL SYSTEM - VDC

[VDC/TCS/ABS]


< WIRING DIAGRAM >

WIRING DIAGRAM

BRAKE CONTROL SYSTEM - VDC

Wiring Diagram

INFOID:000000011562704

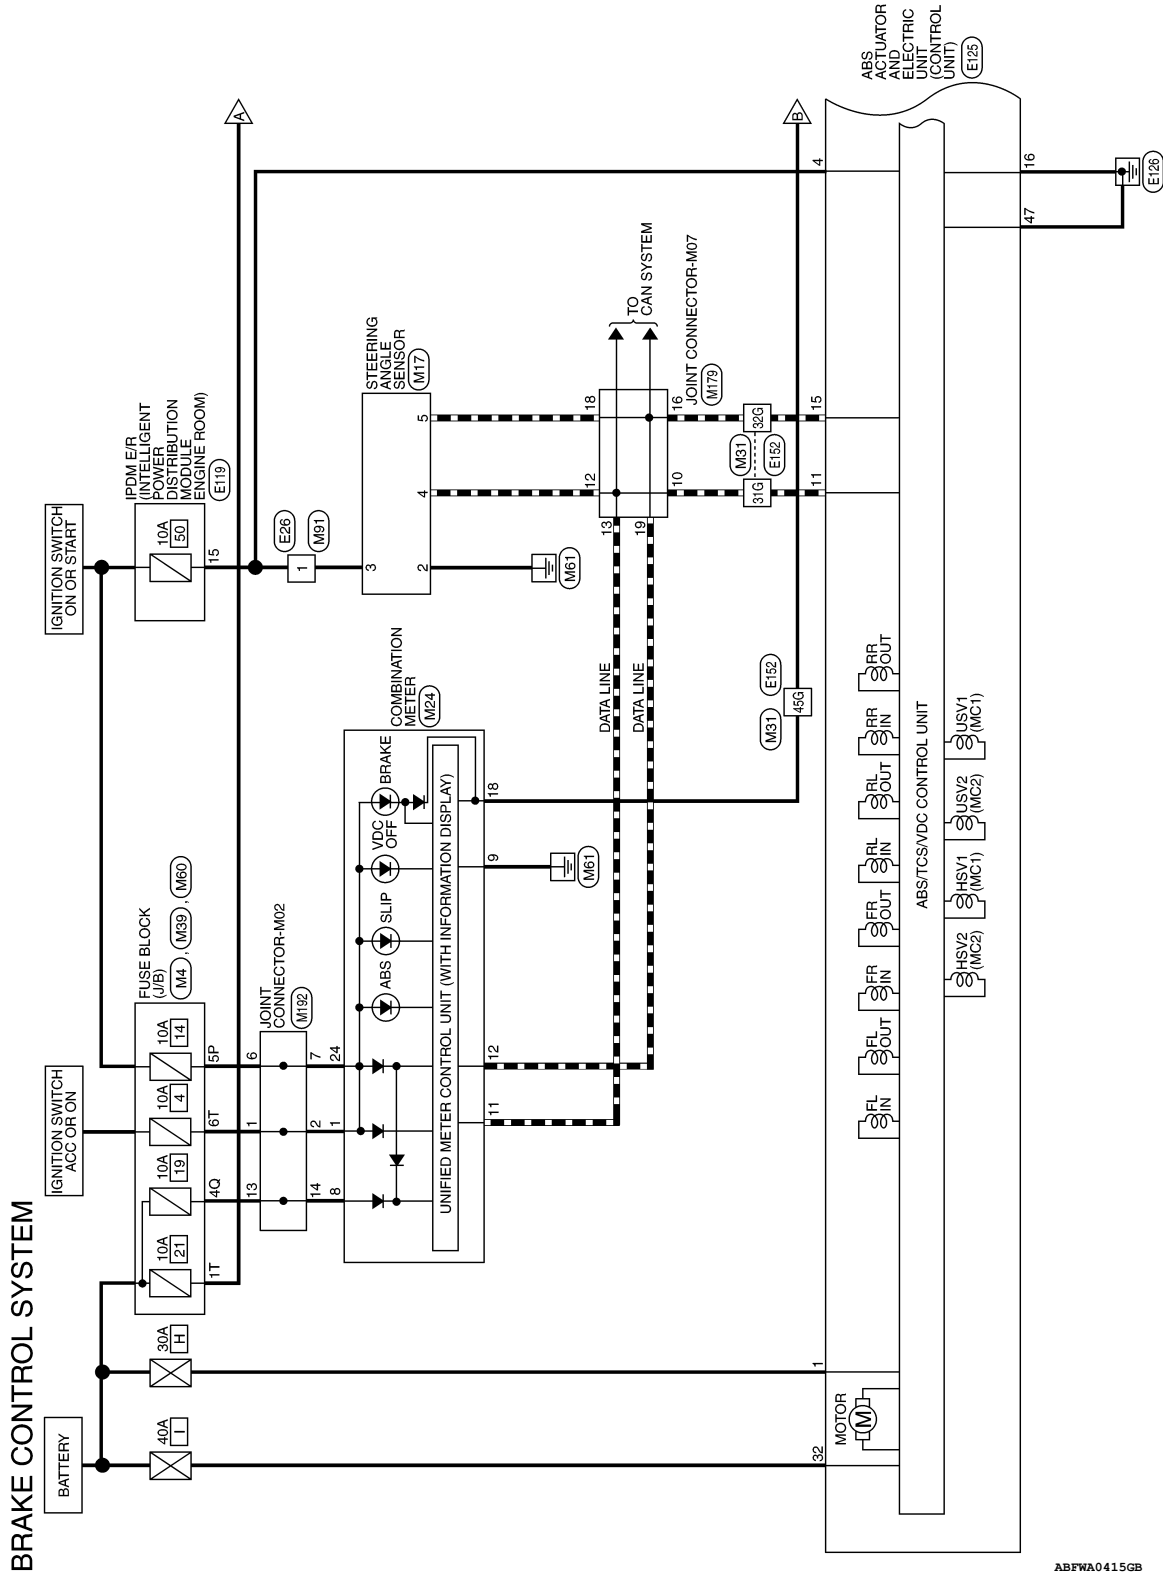


ABFWA0415GB

BRAKE CONTROL SYSTEM - VDC

< WIRING DIAGRAM >

[VDC/TCS/ABS]

CS: COLUMN SHIFT
FS: FLOOR SHIFT

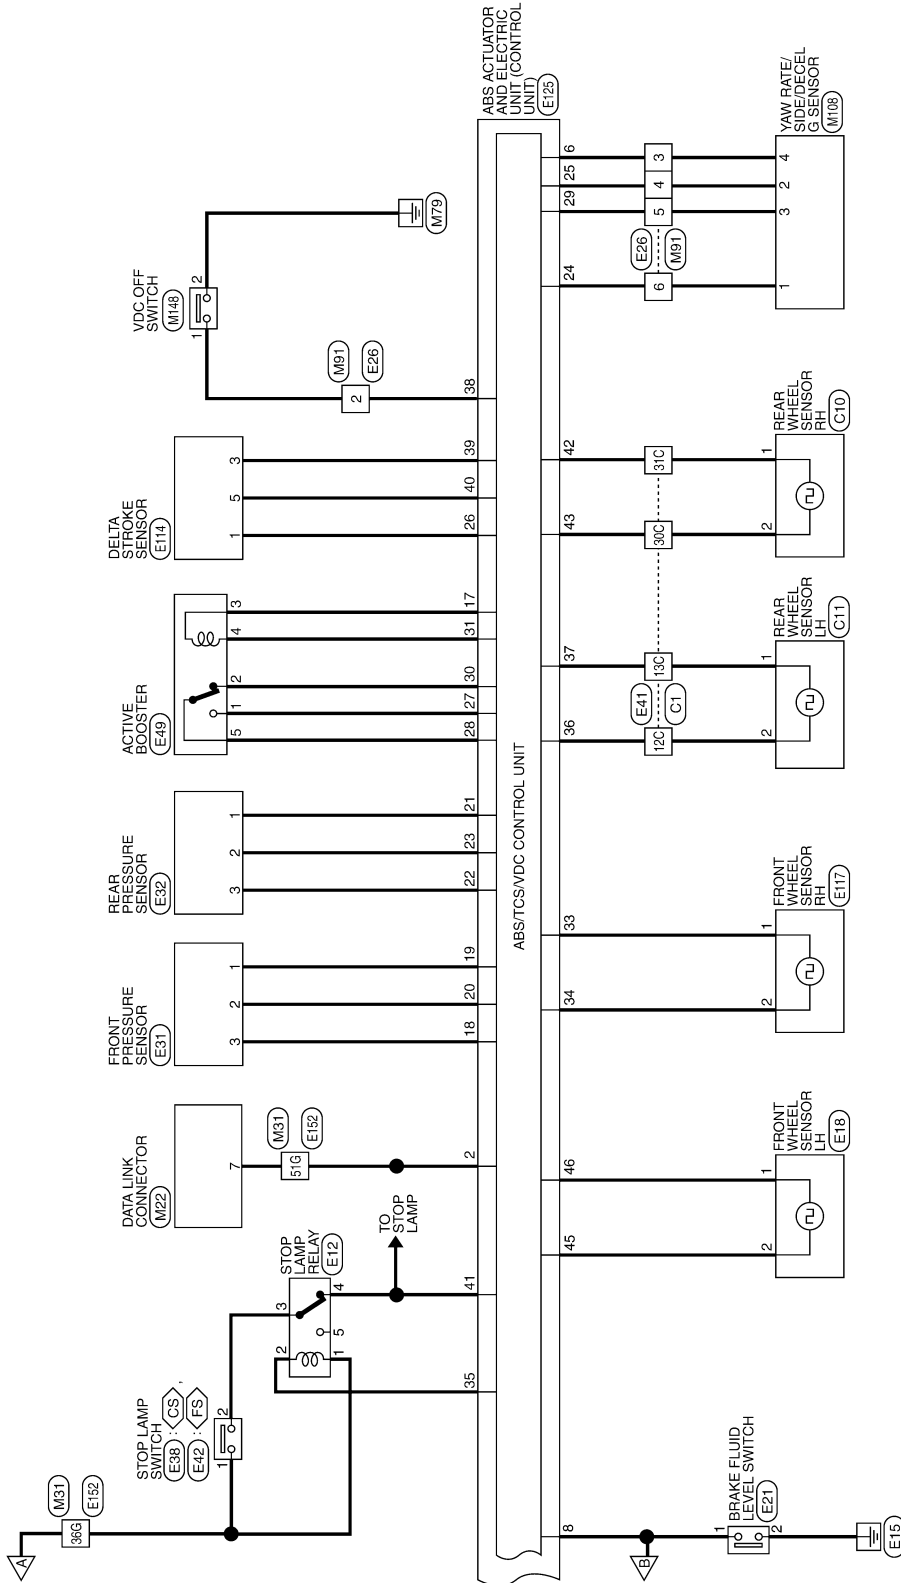

ABFWA0311GB

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

BRAKE CONTROL SYSTEM - VDC

< WIRING DIAGRAM >

[VDC/TCS/ABS]


BRAKE CONTROL SYSTEM CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
5P	O/L	-

Connector No.	M17
Connector Name	STEERING ANGLE SENSOR
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	B	-
3	G/W	-
4	L	-
5	P	-

Connector No.	M22
Connector Name	DATA LINK CONNECTOR
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
7	G/W	-

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE

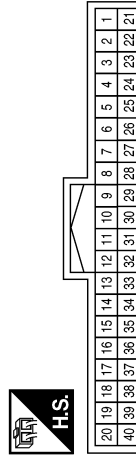

Terminal No.	Color of Wire	Signal Name
1	O	ACCESSORY
8	Y/R	BATTERY
9	B	GND
11	L	CAN-H
12	P	CAN-L
18	P/B	BRAKE FLUID
24	O/L	RUN/START

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

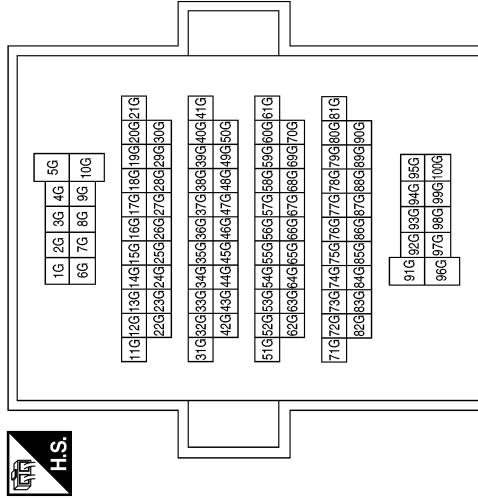


Terminal No.	Color of Wire	Signal Name
31G	L	-
32G	P	-
36G	R/Y	-
45G	P/B	-
51G	G/W	-

BRAKE CONTROL SYSTEM - VDC

< WIRING DIAGRAM >

[VDC/TCS/ABS]

Connector No.	M91
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	G/W	-
2	R/W	-
3	Y/R	-
4	G/R	-
5	G/W	-
6	P	-

Connector No.	M60
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1T	R/Y	-
6T	O	-

Connector No.	M39
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
4Q	Y/R	-

Connector No.	M179
Connector Name	JOINT CONNECTOR-M07
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
10	L	-
12	L	-
13	L	-
16	P	-
18	P	-
19	P	-

Connector No.	M148
Connector Name	VDC OFF SWITCH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	R/W	-
2	B	-

Connector No.	M108
Connector Name	YAW RATE/SIDE/DECEL G SENSOR
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	P	-
2	G/R	-
3	G/W	-
4	Y/R	-

ABFIA0616GB

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

BRAKE CONTROL SYSTEM - VDC

< WIRING DIAGRAM >

[VDC/TCS/ABS]

Connector No.	E18
Connector Name	FRONT WHEEL SENSOR LH
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
1	BR/W	-
2	G/O	-

Connector No.	E12
Connector Name	STOP LAMP RELAY
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	R/Y	-
2	L/W	-
3	R/G	-
4	R/B	-
5	-	-

Connector No.	M192
Connector Name	JOINT CONNECTOR-M02
Connector Color	GREEN




Terminal No.	Color of Wire	Signal Name
1	O	-
2	O	-
6	O/L	-
7	O/L	-
13	Y/R	-
14	Y/R	-

Connector No.	E31
Connector Name	FRONT PRESSURE SENSOR
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	SB	-
2	R/L	-
3	LG	-

Connector No.	E26
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	LG/B	-
2	R/W	-
3	Y/R	-
4	G/R	-
5	G/W	-
6	P	-

Connector No.	E21
Connector Name	BRAKE FLUID LEVEL SWITCH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	P/B	-
2	B	-


ABFIA0617GB

BRAKE CONTROL SYSTEM - VDC

< WIRING DIAGRAM >

[VDC/TCS/ABS]

Connector No.	E32
Connector Name	REAR PRESSURE SENSOR
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
1	R/G	-
2	W/O	-
3	W/L	-

Connector No.	E38
Connector Name	STOP LAMP SWITCH (COLUMN SHIFT)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R/Y	-
2	R/G	-

Connector No.	E41
Connector Name	WIRE TO WIRE
Connector Color	GRAY

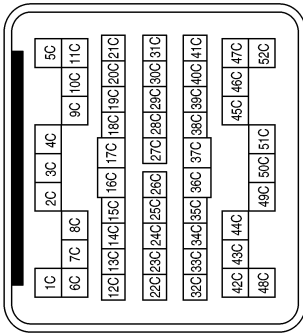


Terminal No.	Color of Wire	Signal Name
12C	L	-
13C	P	-
30C	G/Y	-
31C	V	-

Connector No.	E42
Connector Name	STOP LAMP SWITCH (FLOOR SHIFT)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	R/Y	-
2	R/G	-

Connector No.	E49
Connector Name	ACTIVE BOOSTER
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	L/B	-
2	LG/R	-
3	W/R	-
4	W/G	-
5	Y/B	-

Connector No.	E114
Connector Name	DELTA STROKE SENSOR
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	W/V	-
3	G/B	-
5	R/Y	-


A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

BRAKE CONTROL SYSTEM - VDC

< WIRING DIAGRAM >

[VDC/TCS/ABS]

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
15	LG/B	ABS IGN SUPPLY

Connector No.	E117
Connector Name	FRONT WHEEL SENSOR RH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	BR	-
2	B/R	-

Connector No.	E125
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	Y	MOTOR SUPPLY
2	V	DIAG K
3	-	-
4	LG/B	IGN
5	-	-
6	Y/R	CLUSTER SUPPLY
7	-	-
8	P/B	FLUID LEVEL SW
9	-	-

Terminal No.	Color of Wire	Signal Name
28	Y/B	BST SIG
29	G/W	CAN2 H
30	LG/R	BST NC
31	W/G	BST GND
32	B/Y	VALVE ECU SUPPLY
33	BR	WSS FR SIG
34	B/R	WSS FR PWR
35	L/W	BRL OUT
36	L	WSS RL PWR
37	P	WSS RL SIG
38	R/W	VDC OFF SW
39	G/B	DEL S GND
40	R/Y	DEL S SIGNAL
41	R/B	BLS
42	V	WSS RR SIG
43	G/Y	WSS RR PWR
44	-	-
45	G/O	WSS FL PWR
46	BR/W	WSS FL SIG
47	B	MOTOR GND

Terminal No.	Color of Wire	Signal Name
10	-	-
11	L	CAN-H
12	-	-
13	-	-
14	-	-
15	P	CAN-L
16	B	VALVE ECU GND
17	W/R	BST SUPPLY
18	LG	PS1 SUPPLY
19	SB	PS1 GND
20	R/L	PS1 SIGNAL
21	R/G	PS2 GND
22	W/L	PS2 SUPPLY
23	W/O	PS2 SIGNAL
24	P	CLUSTER GND
25	G/R	CAN2 L
26	W/V	DEL S SUPPLY
27	L/B	BST NO

ABFIA0868GB


BRAKE CONTROL SYSTEM - VDC

< WIRING DIAGRAM >

[VDC/TCS/ABS]

Terminal No.	Color of Wire	Signal Name
31G	L	-
32G	P	-
36G	R/Y	-
45G	P/B	-
51G	G/W	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

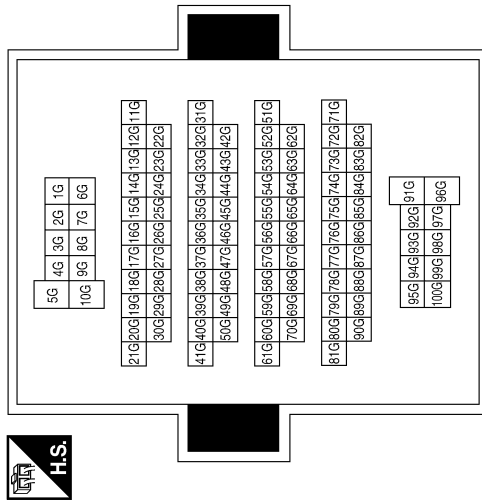


Connector No.	C10
Connector Name	REAR WHEEL SENSOR RH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	V	-
2	G/Y	-

Terminal No.	Color of Wire	Signal Name
12C	L	-
13C	P	-
30C	G/Y	-
31C	V	-

Connector No.	C1
Connector Name	WIRE TO WIRE
Connector Color	GRAY

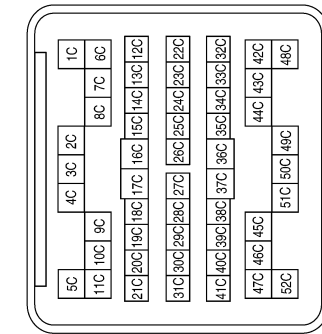

ABFIA0620GB

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

BRAKE CONTROL SYSTEM - VDC

< WIRING DIAGRAM >

[VDC/TCS/ABS]

Connector No.	C11
Connector Name	REAR WHEEL SENSOR LH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	P	-
2	L	-

ABFIA0621GB

SYMPTOM DIAGNOSIS

VDC/TCS/ABS

Symptom Table

INFOID:0000000011562705

If ABS warning lamp and SLIP indicator lamp turn ON, perform self-diagnosis.

Symptom	Check item	Reference
Excessive ABS function operation frequency	Brake force distribution	BRC-102. "Diagnosis Procedure"
	Looseness of front and rear axle	
	Wheel sensor and rotor system	
Unexpected pedal reaction	Brake pedal stroke	BRC-103. "Diagnosis Procedure"
	Make sure the braking force is sufficient when the ABS is not operating.	
The braking distance is long	Check stopping distance when the ABS is not operating.	BRC-104. "Diagnosis Procedure"
ABS function does not operate (Note 1)	ABS actuator and electric unit (control unit)	BRC-105. "Diagnosis Procedure"
Pedal vibration or ABS operation sound occurs (Note 2)	Brake pedal	BRC-106. "Diagnosis Procedure"
	ABS actuator and electric unit (control unit)	
Vehicle jerks during VDC/TCS/ABS control	ABS actuator and electric unit (control unit)	BRC-107. "Diagnosis Procedure"
	TCM	
	ECM	

NOTE:

- 1: The ABS does not operate when the speed is 10 km/h (6 MPH) or less.
- 2: Under the following conditions, ABS is activated and vibration is felt when brake pedal is lightly depressed. However, this is normal.
 - When shifting gears
 - When driving on slippery road
 - During cornering at high speed
 - When passing over bumps or grooves [at approximately 50 mm (1.97 in) or more]
 - When pulling away just after starting engine [at approximately 10 km/h (6 MPH) or higher]

EXCESSIVE ABS FUNCTION OPERATION FREQUENCY

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

EXCESSIVE ABS FUNCTION OPERATION FREQUENCY

Diagnosis Procedure

INFOID:000000011562706

1.CHECK START

Check front and rear brake force distribution using a brake tester.

Is the inspection result normal?

YES >> GO TO 2

NO >> Check brake system.

2.CHECK FRONT AND REAR AXLE

Make sure that there is no excessive play in the front and rear axles. Refer to front: [FAX-5. "On-Vehicle Inspection and Service"](#), Rear: [RAX-5. "On-Vehicle Inspection"](#).

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace malfunctioning components.

3.CHECK WHEEL SENSOR AND SENSOR ROTOR

Check the following.

- Wheel sensor installation for damage.
- Sensor rotor installation for damage.
- Wheel sensor connector connection.
- Wheel sensor harness inspection.

Is the inspection result normal?

YES >> GO TO 4

NO >> • Replace wheel sensor or sensor rotor. Refer to [BRC-113. "Removal and Installation"](#) or [BRC-115. "Removal and Installation"](#).
• Repair harness.

4.CHECK ABS WARNING LAMP DISPLAY

Make sure that the ABS warning lamp is turned off after the ignition switch is turned ON or when driving.

Is the ABS warning lamp illuminated?

YES >> Perform self-diagnosis. Refer to [BRC-24. "CONSULT Function \(ABS\)"](#).

NO >> Inspection End.

UNEXPECTED PEDAL REACTION

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

UNEXPECTED PEDAL REACTION

Diagnosis Procedure

INFOID:000000011562707

1.CHECK BRAKE PEDAL STROKE

Check brake pedal stroke. Refer to [BR-14, "Inspection and Adjustment - Standard Pedal"](#) or [BR-15, "Inspection and Adjustment - Adjustable Pedal"](#).

Is the stroke too large?

- YES >> • Bleed air from brake tube and hose. Refer to [BR-17, "Bleeding Brake System"](#).
• Check brake pedal, brake booster, and master cylinder for mount play, looseness, brake system fluid leakage, etc. Refer to [BR-14, "Inspection and Adjustment - Standard Pedal"](#) or [BR-15, "Inspection and Adjustment - Adjustable Pedal"](#) (brake pedal), [BR-26, "Removal and Installation"](#) (master cylinder), [BR-9, "Inspection"](#) (brake booster).

NO >> GO TO 2

2.CHECK FUNCTION

Disconnect ABS actuator and electric unit (control unit) connector to deactivate ABS. Check if braking force is normal in this condition. Connect connector after inspection.

Is the inspection result normal?

- YES >> Inspection End.
NO >> Check brake system.

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

THE BRAKING DISTANCE IS LONG

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

THE BRAKING DISTANCE IS LONG

Diagnosis Procedure

INFOID:000000011562708

CAUTION:

The stopping distance on slippery road surfaces might be longer with the ABS operating than when the ABS is not operating.

1.CHECK FUNCTION

Turn ignition switch OFF and disconnect ABS actuator and electric unit (control unit) connector to deactivate ABS. In this condition, check stopping distance. After inspection, connect connector.

Is the inspection result normal?

- YES >> Inspection End.
- NO >> Check brake system.

ABS FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

ABS FUNCTION DOES NOT OPERATE

Diagnosis Procedure

INFOID:0000000011562709

CAUTION:

ABS does not operate when speed is 10 km/h (6 MPH) or lower.

1.CHECK ABS WARNING LAMP DISPLAY

Make sure that the ABS warning lamp turns OFF after ignition switch is turned ON or when driving.

Is the inspection result normal?

YES >> Inspection End.

NO >> Perform self-diagnosis. Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

PEDAL VIBRATION OR ABS OPERATION SOUND OCCURS

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

PEDAL VIBRATION OR ABS OPERATION SOUND OCCURS

Diagnosis Procedure

INFOID:000000011562710

CAUTION:

Under the following conditions, ABS is activated and vibration is felt when brake pedal is lightly depressed. However, this is normal.

- When shifting gears
- When driving on slippery road
- During cornering at high speed
- When passing over bumps or grooves [at approximately 50 mm (1.97 in) or more]
- When pulling away just after starting engine [at approximately 10 km/h (6 MPH) or higher]

1. SYMPTOM CHECK 1

Check that there are pedal vibrations when the engine is started.

Do vibrations occur?

- YES >> GO TO 2
NO >> Inspect the brake pedal.

2. SYMPTOM CHECK 2

Check that there are ABS operation noises when the engine is started.

Do the operation noises occur?

- YES >> GO TO 3
NO >> Perform self -diagnosis. Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).

3. SYMPTOM CHECK 3

Check symptoms when electrical component (headlamps, etc.) switches are operated.

Do symptoms occur?

- YES >> Check if there is a radio, antenna, antenna lead wire, or wiring close to the control unit. If there is, move it farther away.
NO >> Inspection End.

VEHICLE JERKS DURING VDC/TCS/ABS CONTROL

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

VEHICLE JERKS DURING VDC/TCS/ABS CONTROL

Diagnosis Procedure

INFOID:000000011562711

1.SYMPTOM CHECK

Check if the vehicle jerks during VDC/TCS/ABS control.

Is the inspection result normal?

- YES >> Inspection End.
- NO >> GO TO 2

2.CHECK SELF-DIAGNOSIS RESULTS

Perform self-diagnosis of ABS actuator and electric unit (control unit). Refer to [BRC-24. "CONSULT Function \(ABS\)"](#).

Are self-diagnosis results indicated?

- YES >> Check corresponding items, make repairs, and perform ABS actuator and electric unit (control unit) self-diagnosis. Refer to [BRC-24. "CONSULT Function \(ABS\)"](#).
- NO >> GO TO 3

3.CHECK CONNECTOR

- Turn ignition switch OFF and disconnect ABS actuator and electric unit (control unit) connector and check terminal for deformation, disconnection, looseness, etc.
- Securely connect connectors and perform ABS actuator and electric unit (control unit) self-diagnosis.

Are self-diagnosis results indicated?

- YES >> If poor contact, damage, open or short circuit of connector terminal is found, repair or replace.
- NO >> GO TO 4

4.CHECK ECM AND TCM SELF-DIAGNOSIS RESULTS

Perform ECM and TCM self-diagnosis.

Are self-diagnosis results indicated?

- YES >> Check the corresponding items.
 - ECM: Refer to [EC-49. "CONSULT Function"](#).
 - TCM: Refer to [TM-38. "CONSULT Function \(TRANSMISSION\)"](#).
- NO >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-116. "Removal and Installation"](#).

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

NORMAL OPERATING CONDITION

Description

INFOID:0000000011562712

Symptom	Result
Slight vibrations are felt on the brake pedal and the operation noises occur, when VDC, TCS or ABS is activated.	This is a normal condition due to the VDC, TCS or ABS activation.
Stopping distance is longer than that of vehicles without ABS when the vehicle drives on rough, gravel, or snow-covered (fresh, deep snow) roads.	
The brake pedal moves and generates noises, when TCS or VDC is activated due to rapid acceleration or sharp turn.	
The brake pedal vibrates and motor operation noises occur from the engine room, after the engine starts and just after the vehicle starts.	This is normal, and it is caused by the ABS operation check.
Depending on the road conditions, the driver may experience a sluggish feel.	This is normal, because TCS places the highest priority on the optimum traction (stability).
TCS may activate momentarily if wheel speed changes when driving over location where friction coefficient varies, when downshifting, or when fully depressing accelerator pedal.	
The ABS warning lamp and SLIP indicator lamp may turn ON when the vehicle is subject to strong shaking or large vibration, such as when the vehicle is rotating on a turntable or located on a ship while the engine is running.	In this case, restart the engine on a normal road. If the normal condition is restored, there is no malfunction. At that time, erase the self-diagnosis memory.
VDC may not operate normally or the ABS warning lamp and SLIP indicator lamp may illuminate, when running on a special road that is extremely slanted (e.g. bank in a circuit course).	
A malfunction may occur in the yaw rate/side/decel G sensor system, when the vehicle turns sharply, such as during a spin turn, axle turn, or drift driving, while the VDC function is off (VDC OFF indicator lamp illuminated).	
The vehicle speed will not increase even though the accelerator pedal is depressed, when inspecting the speedometer on a 2-wheel chassis dynamometer.	Normal (Deactivate the VDC/TCS function before performing an inspection on a chassis dynamometer.)
SLIP indicator lamp may simultaneously turn on when low tire pressure warning lamp turns on.	This is not a VDC system error but results from characteristic change of tire.

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000011562713

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

Precaution for Brake System

INFOID:000000011562714

WARNING:

Clean any dust from the front brake and rear brake with a vacuum dust collector. Never blow with compressed air.

CAUTION:

- Brake fluid use refer to [MA-15, "FOR NORTH AMERICA : Fluids and Lubricants"](#) (United States and Canada) or [MA-17, "FOR MEXICO : Fluids and Lubricants"](#) (Mexico).
- Do not reuse drained brake fluid.
- Do not spill or splash brake fluid on painted surfaces. Brake fluid may seriously damage paint. Wipe it off immediately and wash with water if it gets on a painted surface.
- Always clean with new brake fluid when cleaning the master cylinder, brake caliper and other components.
- Do not use mineral oils such as gasoline or light oil to clean. They may damage rubber parts and cause improper operation.
- Always loosen the brake tube flare nut with a flare nut wrench.


A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

PRECAUTIONS

[VDC/TCS/ABS]

< PRECAUTION >

- Tighten the brake tube flare nut to the specified torque with crowfoot (A) and torque wrench (B).
- Always confirm the specified tightening torque when installing the brake pipes.
- Turn the ignition switch OFF and disconnect the ABS actuator and electric unit (control unit) connector or the battery negative terminal before performing the work.
- Check that no brake fluid leakage is present after replacing the parts.
- Burnish the brake contact surfaces after refinishing or replacing rotors, after replacing pads, or if a soft pedal occurs at very low mileage.
- Front brake: refer to [BR-32, "Brake Burnishing Procedure"](#).
- Rear brake: refer to [BR-37, "Brake Burnishing Procedure"](#).

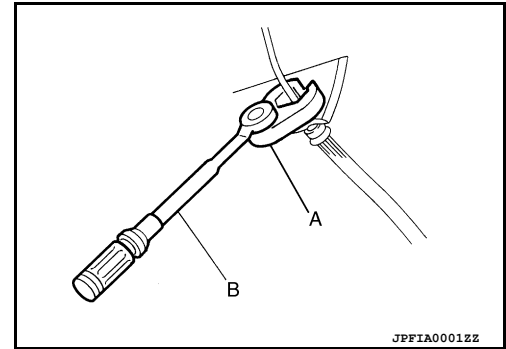

Precaution for Brake Control


INFOID:0000000011562715

- Just after starting vehicle after ignition switch is ON, brake pedal may vibrate or motor operating noise may be heard from engine compartment. This is a normal condition.
- When an error is indicated by ABS or another warning lamp, collect all necessary information from customer (what symptoms are present under what conditions) and check for simple causes before starting diagnostic servicing. Besides electrical system inspection, check brake booster operation, brake fluid level and oil leaks.
- If tire size and type are used in an improper combination or brake pads are not Genuine NISSAN parts, stopping distance or steering stability may deteriorate.
- ABS might be out of order or malfunctions by putting a radio (wiring inclusive), an antenna and a lead-in wire near the control unit.
- If aftermarket parts (car stereo, CD player, etc.) have been installed, check for incidents such as harness pinches, open circuits, and improper wiring.
- VDC system may not operate normally or a VDC OFF indicator lamp or SLIP indicator lamp may light.
- When replacing the following parts with parts other than genuine parts or making modifications: Suspension-related parts (shock absorber, spring, bushing, etc.), tires, wheels (other than specified sizes), brake-related parts (pad, rotor, caliper, etc.), engine-related parts (muffler, ECM, etc.) and body reinforcement-related parts (roll bar, tower bar, etc.).
- When driving with worn or deteriorated suspension, tires and brake-related parts.

Precaution for Procedure without Cowl Top Cover

INFOID:0000000011874883

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc. to prevent damage to windshield.

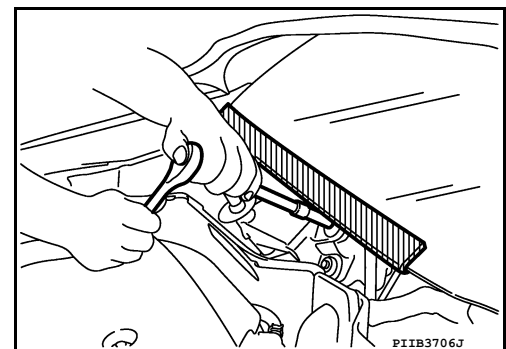

Precaution for CAN System

INFOID:0000000011562716


- Do not apply voltage of 7.0V or higher to terminal to be measured.
- Maximum open terminal voltage of tester in use must be less than 7.0V.
- Before checking harnesses, turn ignition switch OFF and disconnect battery negative cable.

PRECAUTIONS


[VDC/TCS/ABS]

< PRECAUTION >

- Area to be repaired must be soldered and wrapped with tape. Make sure that fraying of twisted wire is within 110 mm (4.33 in).

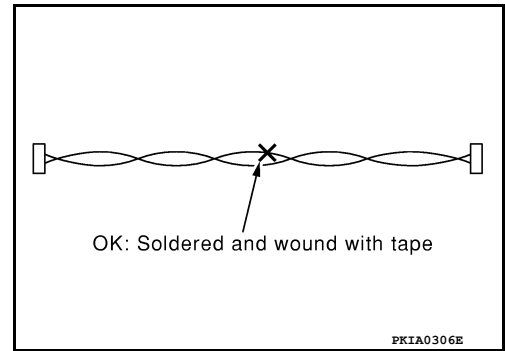

- Do not make a bypass connection to repaired area. (If the circuit is bypassed, characteristics of twisted wire will be lost.)

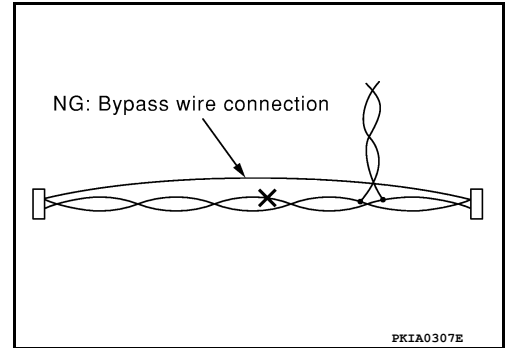

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

PREPARATION

< PREPARATION >

[VDC/TCS/ABS]

PREPARATION


PREPARATION

Special Service Tool

INFOID:000000011562717

The actual shape of the tools may differ from those illustrated here.



Tool number (TechMate No.) Tool name	Description
KV991J0080 (J-45741) ABS active wheel sensor tester	Checking operation of ABS active wheel sensors

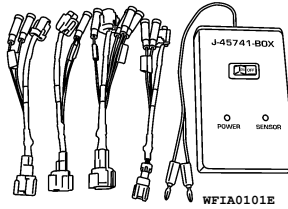

Commercial Service Tool

INFOID:000000011562718

Tool name	Description
1. Flare nut crowfoot 2. Torque wrench	Tightening brake tube flare nuts a: 10 mm (0.39 in)/12 mm (0.47 in)
Power tool	Loosening nuts, screws and bolts

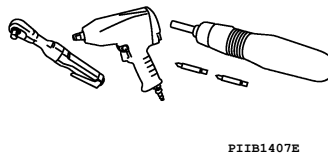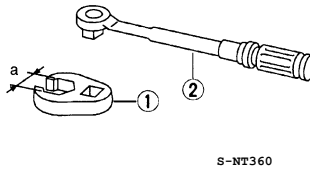


UNIT REMOVAL AND INSTALLATION

WHEEL SENSORS

Removal and Installation

INFOID:000000011562719

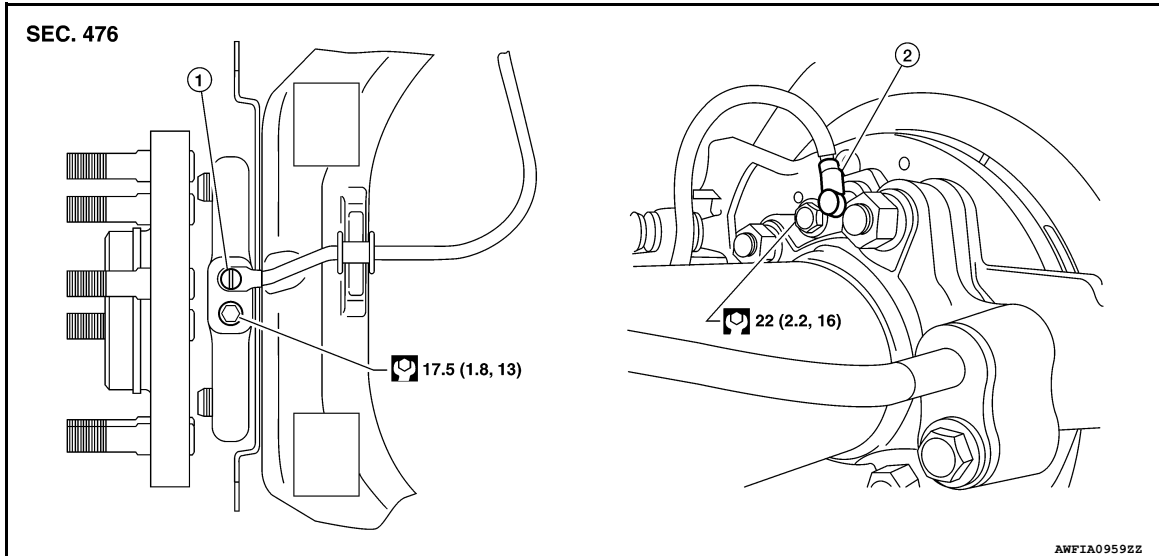

1. Front wheel sensor 2. Rear wheel sensor

FRONT WHEEL SENSOR

Removal

1. Remove wheel sensor bolt.
 - When removing the front wheel sensor, first remove the disc rotor to gain access to the front wheel sensor bolt. Refer to [BR-33, "Removal and Installation of Brake Caliper and Rotor"](#).
2. Pull out the sensor, being careful to turn it as little as possible.

CAUTION:

 - **Be careful not to damage sensor edge and sensor rotor teeth.**
 - **Do not pull on the sensor harness.**
3. Disconnect wheel sensor harness connector, then remove harness from attaching points.

Installation

Installation is in the reverse order of removal.

CAUTION:

- **Inspect wheel sensor O-ring, replace sensor assembly if damaged.**
- **Clean wheel sensor hole and mating surface with brake cleaner and a lint-free shop rag.**
- **Apply a coat of suitable grease to the wheel sensor O-ring and hole.**

REAR WHEEL SENSOR

Removal

1. Remove wheel sensor bolt.
2. Pull out the sensor, being careful to turn it as little as possible.

CAUTION:

 - **Be careful not to damage sensor edge and sensor rotor teeth.**
 - **Do not pull on the sensor harness.**
3. Disconnect wheel sensor harness connector, then remove harness from attaching points.

Installation

1. Installation is in the reverse order of removal.

CAUTION:

- **Inspect wheel sensor O-ring, replace sensor assembly if damaged.**

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

WHEEL SENSORS

< UNIT REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

-
- Clean wheel sensor hole and mating surface with brake cleaner and a lint-free shop rag. Be careful that dirt and debris do not enter the axle.
 - Apply a coat of suitable grease to the wheel sensor O-ring and hole.

SENSOR ROTOR

< UNIT REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

SENSOR ROTOR

Removal and Installation

INFOID:0000000011562720

FRONT WHEEL SENSOR ROTOR

Removal

The front wheel sensor rotor is built into the front wheel hub and bearing assembly and is not removable. If damaged, replace the front wheel hub and bearing assembly. Refer to [FAX-6, "Removal and Installation"](#).

REAR WHEEL SENSOR ROTOR

Removal

Remove the rear axle shaft assembly. Refer to [RAX-9, "Removal and Installation"](#).

NOTE:

It is necessary to disassemble the rear axle shaft assembly to replace the rear wheel sensor rotor.

Installation

Installation is in the reverse order of removal.

CAUTION:

- Do not reuse the old rear wheel sensor rotor.
- Do not reuse the rear axle oil seal. The rear axle oil seal must be replaced every time the rear axle shaft assembly is removed from the rear axle shaft housing.

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

ACTUATOR AND ELECTRIC UNIT (ASSEMBLY)


< UNIT REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

ACTUATOR AND ELECTRIC UNIT (ASSEMBLY)

Removal and Installation

INFOID:000000011562721

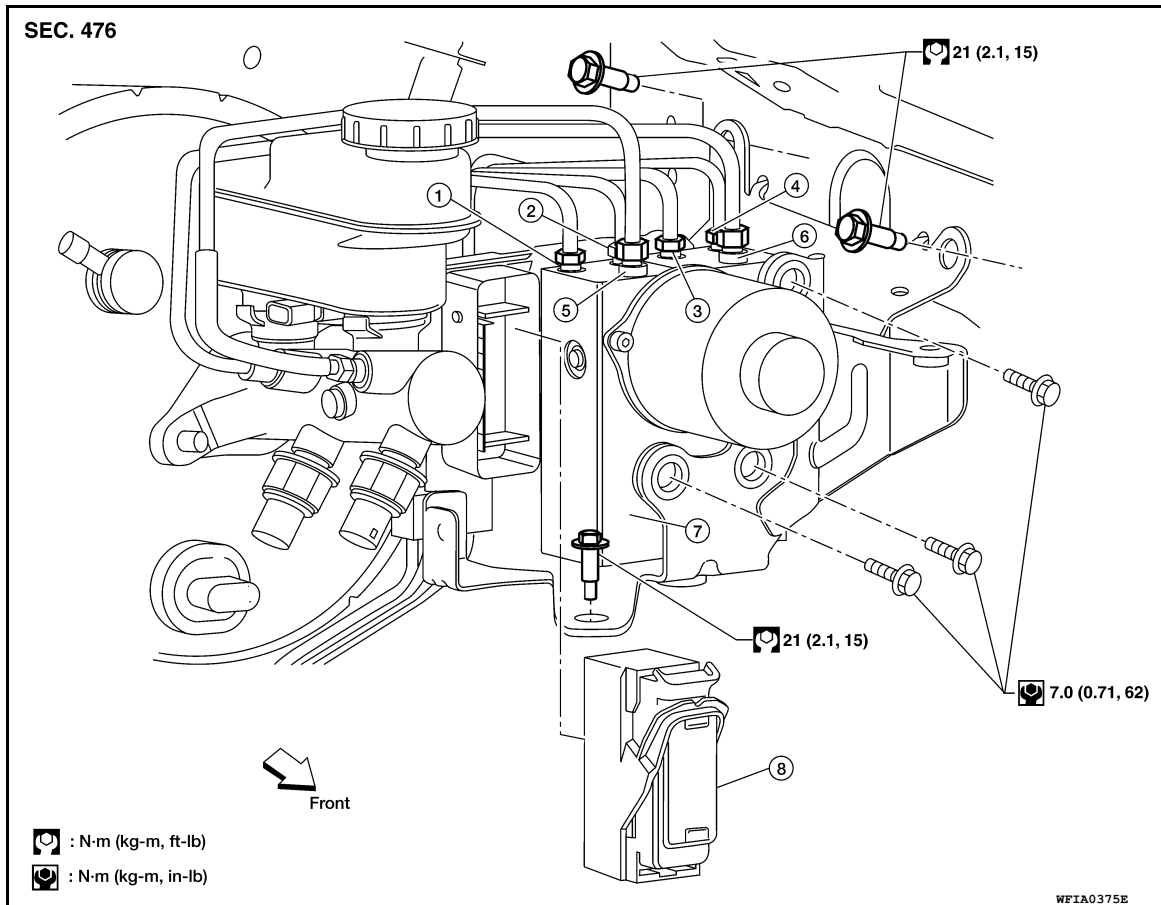

- | | | |
|---|---|---|
| 1. To rear caliper (LH)
13.0 N·m (1.3 kg-m, 10 ft-lb) | 2. To rear caliper (RH)
13.0 N·m (1.3 kg-m, 10 ft-lb) | 3. To front caliper (LH)
13.0 N·m (1.3 kg-m, 10 ft-lb) |
| 4. To front caliper (RH)
13.0 N·m (1.3 kg-m, 10 ft-lb) | 5. From the master cylinder secondary side
18.2 N·m (1.9 kg-m, 13 ft-lb) | 6. From the master cylinder primary side
18.2 N·m (1.9 kg-m, 13 ft-lb) |
| 7. ABS actuator and electric unit
(control unit) | 8. Actuator harness connector | |

NOTE:

When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.

REMOVAL

1. Disconnect the battery negative and positive terminals and wait at least three minutes. Refer to [PG-85, "Removal and Installation"](#).
2. Remove the air cleaner and duct resonator assembly. Refer to [EM-25, "Removal and Installation"](#).
3. Partially drain brake fluid. Refer to [BR-17, "Drain and Refill"](#).
4. Disconnect the actuator harness connector from the ABS actuator and electric unit (control unit).
5. Disconnect the brake tubes.

CAUTION:

- To remove the brake tubes, use a flare nut wrench to prevent the flare nuts and brake tubes from being damaged.
 - Be careful not to splash brake fluid on painted areas; it may cause paint damage. If brake fluid is splashed on painted areas, wash it away with water immediately.
6. Remove the three bolts and remove the ABS actuator and electric unit (control unit).

ACTUATOR AND ELECTRIC UNIT (ASSEMBLY)

< UNIT REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- To install, use a flare nut crowfoot and torque wrench.
- Always tighten brake tubes to specification when installing.
- Do not reuse drained brake fluid.
- After installation of the ABS actuator and electric unit (control unit), perform the following.
- Refill brake system with new brake fluid. Then bleed the air from the system. Refer to [BRC-17, "Bleeding Brake System"](#).
- Adjust the steering angle sensor. Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).
- Calibrate the yaw rate/side/decel G sensor. Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Special Repair Requirement"](#).

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

STEERING ANGLE SENSOR

< UNIT REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

STEERING ANGLE SENSOR

Removal and Installation

INFOID:000000011562722

REMOVAL

1. Remove spiral cable. Refer to [SR-13, "Removal and Installation"](#).
2. Remove the screws and remove the steering angle sensor.

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

After installation of spiral cable, adjust steering angle sensor. Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

YAW RATE/SIDE G SENSOR


< UNIT REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

YAW RATE/SIDE G SENSOR

Removal and Installation

INFOID:000000011562723

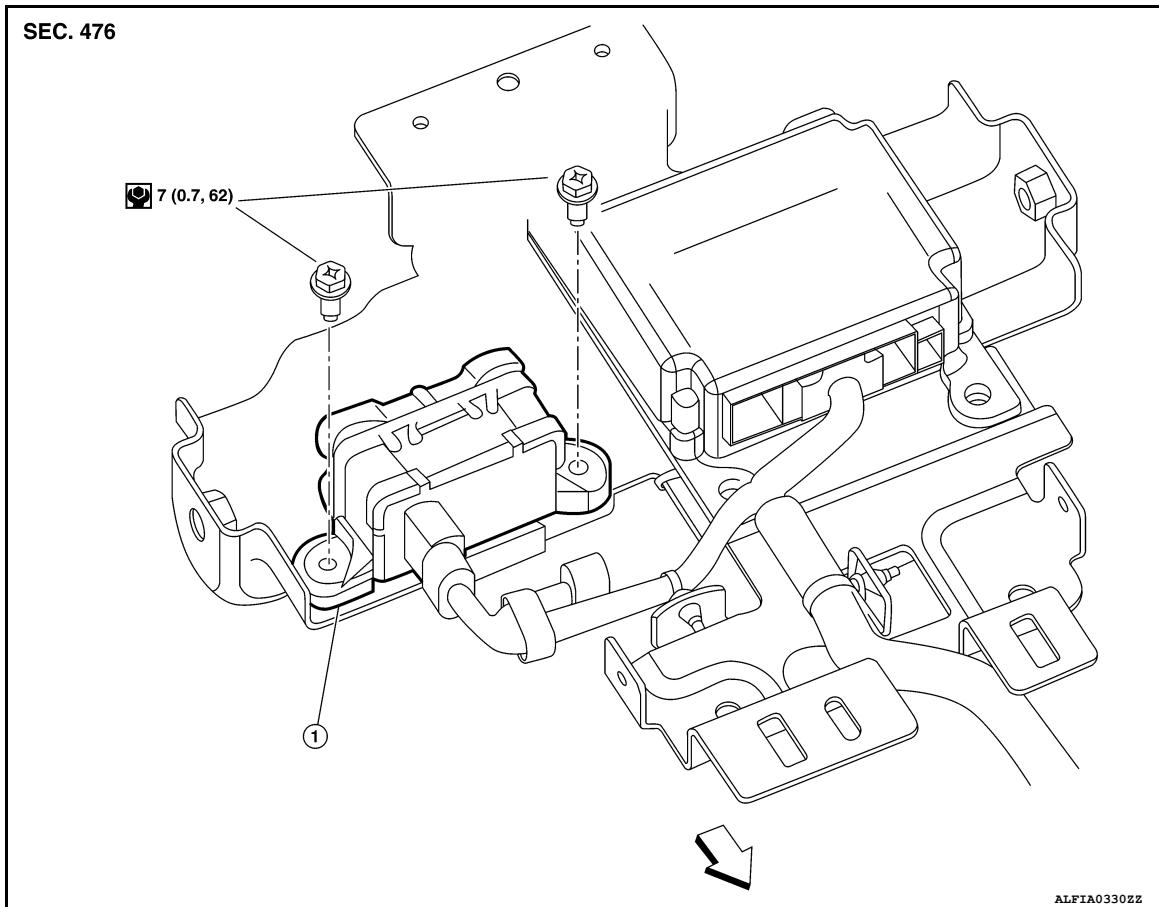

1. Yaw rate/side/decel G sensor ← Front

REMOVAL

1. Remove center console (if equipped). Refer to [IP-25, "Disassembly and Assembly"](#).
2. Remove the front center seat (if equipped). Refer to [SE-34, "Removal and Installation - Front Seat Assembly"](#).
3. Remove yaw rate/side/decel G sensor nuts.
CAUTION:
 - Do not use power tools to remove the yaw rate/side/decel G sensor.
 - Do not drop or strike the yaw rate/side/decel G sensor.
4. Disconnect harness connector and remove the yaw rate/side/decel G sensor.

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- Do not drop or strike the yaw rate/side/decel G sensor.
- After installation, calibrate the yaw rate/side/decel G sensor. Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Description"](#).