

SECTION **AV**

AUDIO, VISUAL & NAVIGATION SYSTEM

CONTENTS

BASE AUDIO		
BASIC INSPECTION	7	
DIAGNOSIS AND REPAIR WORKFLOW	7	
Work Flow	7	
FUNCTION DIAGNOSIS	9	
AUDIO SYSTEM	9	
System Diagram	9	
System Description	9	
Component Parts Location	10	
Component Description	10	
COMPONENT DIAGNOSIS	12	
POWER SUPPLY AND GROUND CIRCUIT	12	
AUDIO UNIT	12	
AUDIO UNIT : Diagnosis Procedure	12	
FRONT DOOR SPEAKER	13	
Description	13	
Diagnosis Procedure	13	
FRONT TWEETER	15	
Description	15	
Diagnosis Procedure	15	
REAR DOOR SPEAKER	17	
Description	17	
Diagnosis Procedure	17	
REAR DOOR TWEETER	19	
Description	19	
Diagnosis Procedure	19	
ECU DIAGNOSIS	21	
AUDIO UNIT	21	
Reference Value	21	
Wiring Diagram	23	
SYMPTOM DIAGNOSIS	30	
AUDIO SYSTEM	30	
Symptom Table	30	
NORMAL OPERATING CONDITION	31	
Description	31	
PRECAUTION	32	
PRECAUTIONS	32	
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	32	
PREPARATION	33	
PREPARATION	33	
Commercial Service Tools	33	
ON-VEHICLE REPAIR	34	
AUDIO UNIT	34	
Removal and Installation	34	
FRONT TWEETER	35	
Removal and Installation	35	
FRONT DOOR SPEAKER	36	
Removal and Installation	36	
REAR DOOR SPEAKER	37	
Removal and Installation	37	
AUDIO ANTENNA	38	
Location of Antenna	38	
MID AUDIO		
BASIC INSPECTION	39	
DIAGNOSIS AND REPAIR WORKFLOW	39	
Work Flow	39	

A
B
C
D
E
F
G
H
I
J
K
L
M

AV

O
P

FUNCTION DIAGNOSIS	41	PREPARATION	69
AUDIO SYSTEM	41	Commercial Service Tools	69
System Diagram	41	ON-VEHICLE REPAIR	70
System Description	41	AUDIO UNIT	70
Component Parts Location	42	Removal and Installation	70
Component Description	42	FRONT TWEETER	71
DIAGNOSIS SYSTEM (AUDIO UNIT)	44	Removal and Installation	71
AV SWITCH	44	FRONT DOOR SPEAKER	72
AV SWITCH : Component Function Check	44	Removal and Installation	72
COMPONENT DIAGNOSIS	45	REAR DOOR SPEAKER	73
POWER SUPPLY AND GROUND CIRCUIT	45	Removal and Installation	73
AUDIO UNIT	45	STEERING SWITCH	74
AUDIO UNIT : Diagnosis Procedure	45	Removal and Installation	74
FRONT DOOR SPEAKER	46	AUDIO ANTENNA	75
Description	46	Location of Antenna	75
Diagnosis Procedure	46	PREMIUM WITHOUT NAVIGATION	
FRONT TWEETER	48	BASIC INSPECTION	76
Description	48	DIAGNOSIS AND REPAIR WORKFLOW	76
Diagnosis Procedure	48	Work Flow	76
REAR DOOR SPEAKER	50	FUNCTION DIAGNOSIS	78
Description	50	AUDIO SYSTEM	78
Diagnosis Procedure	50	System Diagram	78
REAR DOOR TWEETER	52	System Description	78
Description	52	Component Parts Location	80
Diagnosis Procedure	52	Component Description	81
STEERING SWITCH	54	HANDS-FREE PHONE SYSTEM	82
Description	54	System Diagram	82
Diagnosis Procedure	54	System Description	82
ECU DIAGNOSIS	56	Component Parts Location	83
AUDIO UNIT	56	Component Description	84
Reference Value	56	DIAGNOSIS SYSTEM (AUDIO UNIT)	85
Wiring Diagram	58	AV SWITCH	85
SYMPTOM DIAGNOSIS	66	AV SWITCH : Component Function Check	85
AUDIO SYSTEM	66	DIAGNOSIS SYSTEM (BLUETOOTH CON-	
Symptom Table	66	TROL UNIT)	86
NORMAL OPERATING CONDITION	67	Diagnosis Description	86
Description	67	Work Flow	86
PRECAUTION	68	COMPONENT DIAGNOSIS	87
PRECAUTIONS	68	POWER SUPPLY AND GROUND CIRCUIT	87
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER"	68	AUDIO UNIT	87
PREPARATION	69	AUDIO UNIT : Diagnosis Procedure	87
		AV SWITCH	87
		AV SWITCH : Diagnosis Procedure	87

SATELLITE RADIO TUNER	88	ECU DIAGNOSIS	120	A
SATELLITE RADIO TUNER : Diagnosis Procedure	88	AUDIO UNIT	120	B
AUDIO AMP	89	Reference Value	120	
AUDIO AMP : Diagnosis Procedure	89	Wiring Diagram	124	
BLUETOOTH CONTROL UNIT	90	SATELLITE RADIO TUNER	144	C
BLUETOOTH CONTROL UNIT : Diagnosis Procedure	90	Reference Value	144	
MICROPHONE	91	AUDIO AMP	146	D
MICROPHONE : Diagnosis Procedure	91	Reference Value	146	
FRONT DOOR SPEAKER	93	BLUETOOTH CONTROL UNIT	149	E
Description	93	Reference Value	149	
Diagnosis Procedure	93	SYMPTOM DIAGNOSIS	151	F
FRONT TWEETER	96	AUDIO SYSTEM	151	
Description	96	Symptom Table	151	
Diagnosis Procedure	96	NORMAL OPERATING CONDITION	152	G
CENTER SPEAKER	99	Description	152	
Description	99	PRECAUTION	153	H
Diagnosis Procedure	99	PRECAUTIONS	153	I
REAR DOOR SPEAKER	101	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	153	J
Description	101	PREPARATION	154	
Diagnosis Procedure	101	PREPARATION	154	K
REAR DOOR TWEETER	104	Commercial Service Tools	154	L
Description	104	ON-VEHICLE REPAIR	155	
Diagnosis Procedure	104	AUDIO UNIT	155	M
SUBWOOFER	107	Removal and Installation	155	
Description	107	FRONT TWEETER	156	
Diagnosis Procedure	107	Removal and Installation	156	
AMP ON SIGNAL CIRCUIT	110	CENTER SPEAKER	157	
Description	110	Removal and Installation	157	
Diagnosis Procedure	110	FRONT DOOR SPEAKER	158	
STEERING SWITCH	111	Removal and Installation	158	
Description	111	REAR DOOR SPEAKER	159	
Diagnosis Procedure	111	Removal and Installation	159	
COMMUNICATION SIGNAL CIRCUIT	113	SUBWOOFER	160	
SATELLITE RADIO TUNER	113	Removal and Installation	160	
SATELLITE RADIO TUNER : Description	113	STEERING SWITCH	161	
SATELLITE RADIO TUNER : Diagnosis Procedure	113	Removal and Installation	161	
SOUND SIGNAL CIRCUIT	116	REAR AUDIO REMOTE CONTROL UNIT	162	
SATELLITE RADIO TUNER	116	Removal and Installation	162	
SATELLITE RADIO TUNER : Description	116	AUDIO AMP.	163	
SATELLITE RADIO TUNER : Diagnosis Procedure	116	Removal and Installation	163	
MICROPHONE SIGNAL CIRCUIT	118			
Description	118			
Diagnosis Procedure	118			

AUDIO ANTENNA	164	DIAGNOSIS SYSTEM (BLUETOOTH CONTROL UNIT)	200
Location of Antenna	164	Diagnosis Description	200
SATELLITE RADIO ANTENNA	165	Work Flow	200
Removal and Installation	165	COMPONENT DIAGNOSIS	201
SATELLITE RADIO TUNER	166	POWER SUPPLY AND GROUND CIRCUIT ...	201
Removal and Installation	166	AUDIO UNIT	201
MICROPHONE	167	AUDIO UNIT : Diagnosis Procedure	201
Removal and Installation	167	NAVI CONTROL UNIT	201
TEL ANTENNA	168	NAVI CONTROL UNIT : Diagnosis Procedure ...	201
Removal and Installation	168	DISPLAY UNIT	202
BLUETOOTH CONTROL UNIT	169	DISPLAY UNIT : Diagnosis Procedure	202
Removal and Installation	169	DISPLAY CONTROL UNIT	203
PREMIUM WITH NAVIGATION		DISPLAY CONTROL UNIT : Diagnosis Procedure	203
BASIC INSPECTION	170	. 203	
DIAGNOSIS AND REPAIR WORKFLOW	170	AV SWITCH	204
Work Flow	170	AV SWITCH : Diagnosis Procedure	204
FUNCTION DIAGNOSIS	172	SATELLITE RADIO TUNER	205
AUDIO SYSTEM	172	SATELLITE RADIO TUNER : Diagnosis Procedure	205
System Diagram	172	. 205	
System Description	172	DVD PLAYER	206
Component Parts Location	174	DVD PLAYER : Diagnosis Procedure	206
Component Description	175	VIDEO MONITOR	207
NAVIGATION SYSTEM	176	VIDEO MONITOR : Diagnosis Procedure	207
System Diagram	176	AUDIO AMP	208
System Description	176	AUDIO AMP : Diagnosis Procedure	208
Component Parts Location	179	BLUETOOTH CONTROL UNIT	209
Component Description	180	BLUETOOTH CONTROL UNIT : Diagnosis Procedure	209
DVD PLAYER	181	. 209	
System Diagram	181	MICROPHONE	210
System Description	181	MICROPHONE : Diagnosis Procedure	210
Component Parts Location	182	RGB (R: RED) SIGNAL CIRCUIT	212
Component Description	182	Description	212
HANDS-FREE PHONE SYSTEM	184	Diagnosis Procedure	212
System Diagram	184	RGB (G: GREEN) SIGNAL CIRCUIT	213
System Description	184	Description	213
Component Parts Location	185	Diagnosis Procedure	213
Component Description	186	RGB (B: BLUE) SIGNAL CIRCUIT	214
DIAGNOSIS SYSTEM (AUDIO UNIT)	187	Description	214
AUDIO UNIT	187	Diagnosis Procedure	214
AUDIO UNIT : Diagnosis Description	187	RGB SYNCHRONIZING SIGNAL CIRCUIT	215
AV SWITCH	187	Description	215
AV SWITCH : Component Function Check	187	Diagnosis Procedure	215
DIAGNOSIS SYSTEM (NAVI CONTROL UNIT)	188	RGB AREA (YS) SIGNAL CIRCUIT	216
Diagnosis Description	188	Description	216
Work Flow	188	Diagnosis Procedure	216

HORIZONTAL SYNCHRONIZING (HP) SIGNAL CIRCUIT	217	Reference Value	246	
Description	217	Wiring Diagram	251	A
Diagnosis Procedure	217	NAVI CONTROL UNIT	280	
VERTICAL SYNCHRONIZING (VP) SIGNAL CIRCUIT	218	Reference Value	280	B
Description	218	DISPLAY UNIT	282	
Diagnosis Procedure	218	Reference Value	282	C
FRONT DOOR SPEAKER	219	SATELLITE RADIO TUNER	284	
Description	219	Reference Value	284	D
Diagnosis Procedure	219	DVD PLAYER	286	
FRONT TWEETER	222	Reference Value	286	E
Description	222	AUDIO AMP	288	
Diagnosis Procedure	222	Reference Value	288	F
CENTER SPEAKER	225	BLUETOOTH CONTROL UNIT	291	
Description	225	Reference Value	291	G
Diagnosis Procedure	225	SYMPTOM DIAGNOSIS	293	
REAR DOOR SPEAKER	227	AUDIO SYSTEM	293	
Description	227	Symptom Table	293	H
Diagnosis Procedure	227	NORMAL OPERATING CONDITION	295	
REAR DOOR TWEETER	230	Description	295	I
Description	230	PRECAUTION	303	
Diagnosis Procedure	230	PRECAUTIONS	303	J
SUBWOOFER	233	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	303	K
Description	233	Precaution for Trouble Diagnosis	303	
Diagnosis Procedure	233	Precaution for Harness Repair	303	L
AMP ON SIGNAL CIRCUIT	236	PREPARATION	305	
Description	236	PREPARATION	305	M
Diagnosis Procedure	236	Commercial Service Tools	305	
STEERING SWITCH	237	ON-VEHICLE REPAIR	306	
Description	237	AUDIO UNIT	306	
Diagnosis Procedure	237	Removal and Installation	306	AV
COMMUNICATION SIGNAL CIRCUIT	239	DISPLAY UNIT	307	
SATELLITE RADIO TUNER	239	Removal and Installation	307	O
SATELLITE RADIO TUNER : Description	239	FRONT TWEETER	308	
SATELLITE RADIO TUNER : Diagnosis Procedure	239	Removal and Installation	308	P
SOUND SIGNAL CIRCUIT	242	CENTER SPEAKER	309	
SATELLITE RADIO TUNER	242	Removal and Installation	309	
SATELLITE RADIO TUNER : Description	242	FRONT DOOR SPEAKER	310	
SATELLITE RADIO TUNER : Diagnosis Procedure	242	Removal and Installation	310	
MICROPHONE SIGNAL CIRCUIT	244	REAR DOOR SPEAKER	311	
Description	244	Removal and Installation	311	
Diagnosis Procedure	244	SUBWOOFER	312	
ECU DIAGNOSIS	246			
AUDIO UNIT	246			

Removal and Installation	312	DVD ENTERTAINMENT SYSTEM	319
		Removal and Installation	319
STEERING SWITCH	313	MICROPHONE	320
Removal and Installation	313	Removal and Installation	320
REAR AUDIO REMOTE CONTROL UNIT	314	TEL ANTENNA	321
Removal and Installation	314	Removal and Installation	321
AUDIO AMP.	315	BLUETOOTH CONTROL UNIT	322
Removal and Installation	315	Removal and Installation	322
AUDIO ANTENNA	316	GPS ANTENNA	323
Location of Antenna	316	Removal and Installation	323
SATELLITE RADIO ANTENNA	317	NAVI CONTROL UNIT	324
Removal and Installation	317	Removal and Installation	324
SATELLITE RADIO TUNER	318		
Removal and Installation	318		


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000005387529

OVERALL SEQUENCE

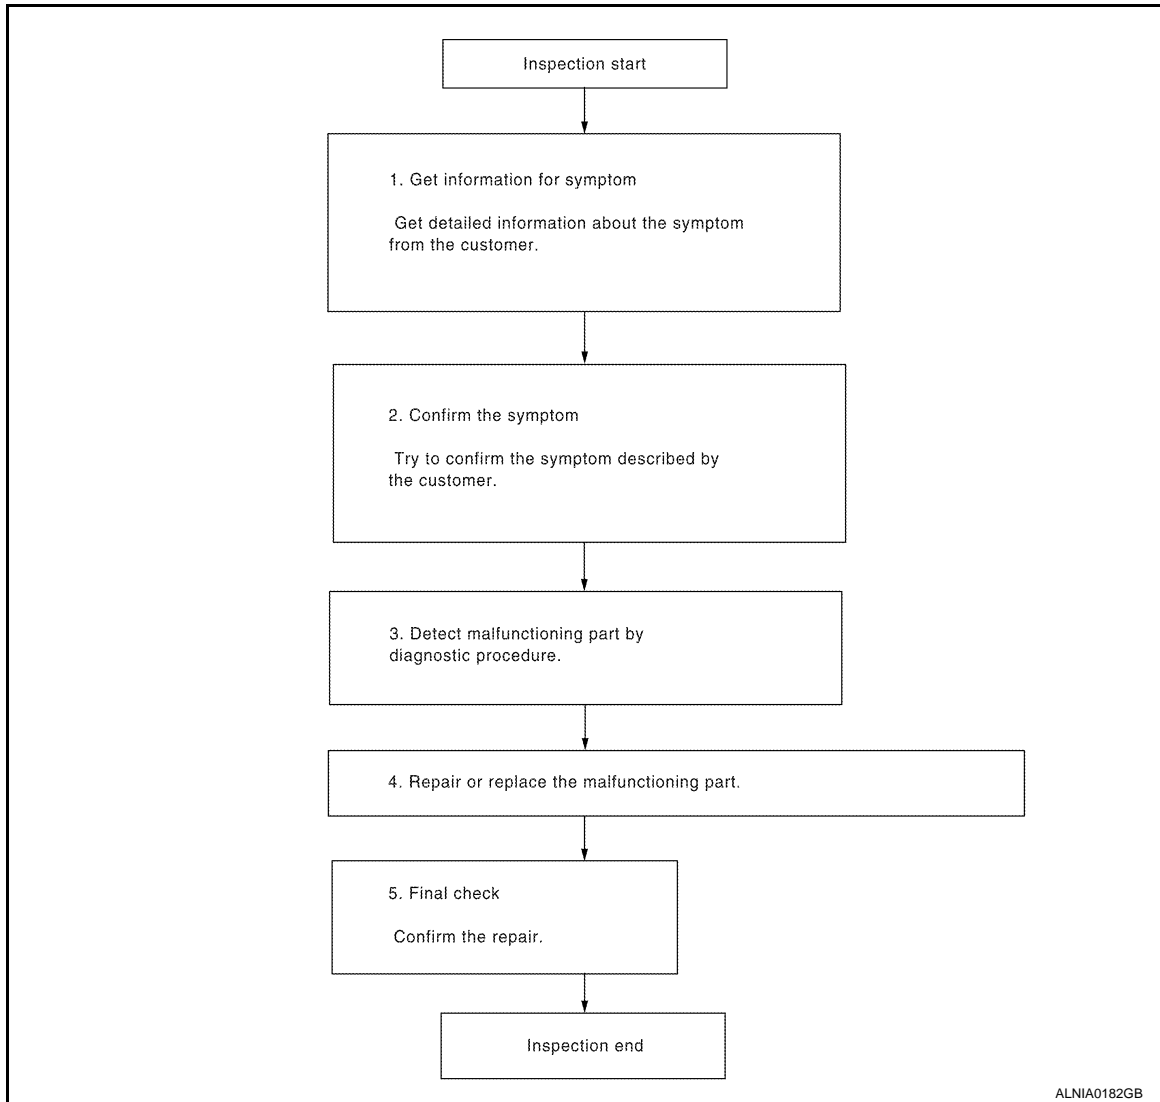

DETAILED FLOW

1.GET INFORMATION FOR SYMPTOM

Get detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred).

>> GO TO 2.

2.CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer. Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 3.

3.DETECT MALFUNCTIONING PART BY DIAGNOSTIC PROCEDURE

Inspect according to Diagnostic Procedure of the system.

A
B
C
D
E
F
G
H
I
J
K
L
M

AV

O
P

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[BASE AUDIO]

Is malfunctioning part detected?

YES >> GO TO 4.

NO >> GO TO 2.

4.REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnostic Procedure.

>> GO TO 5.


5.FINAL CHECK

Refer to confirmed symptom in step 2, and make sure that the symptom is not detected.

Has the symptom been repaired?

YES >> Inspection End.

NO >> GO TO 2.

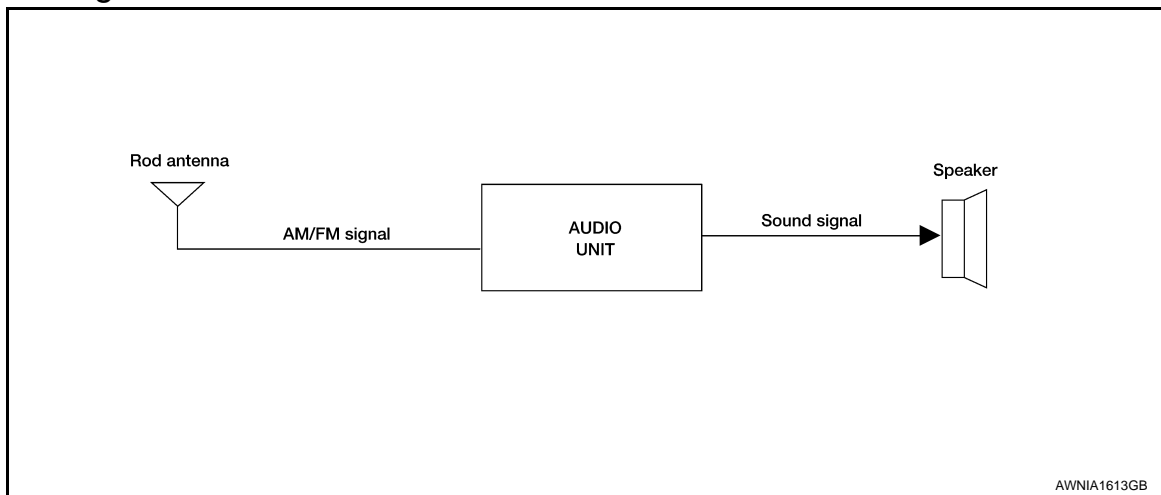FUNCTION DIAGNOSIS**AUDIO SYSTEM****System Diagram****System Description**

INFOID:0000000005387531

AUDIO SYSTEM

The audio system consists of the following components

- Audio unit
- Rod antenna
- Front door speakers
- Front tweeters
- Rear door speakers
- Rear door tweeters (crew cab)

When the audio system is on, radio signals are received by the rod antenna. The audio unit then sends audio signals to the front door speakers, front tweeters, rear door speakers and rear door tweeters (crew cab).

Refer to Owner's Manual for audio system operating instructions.


AUDIO SYSTEM

< FUNCTION DIAGNOSIS >

[BASE AUDIO]

Component Parts Location

INFOID:000000005387532

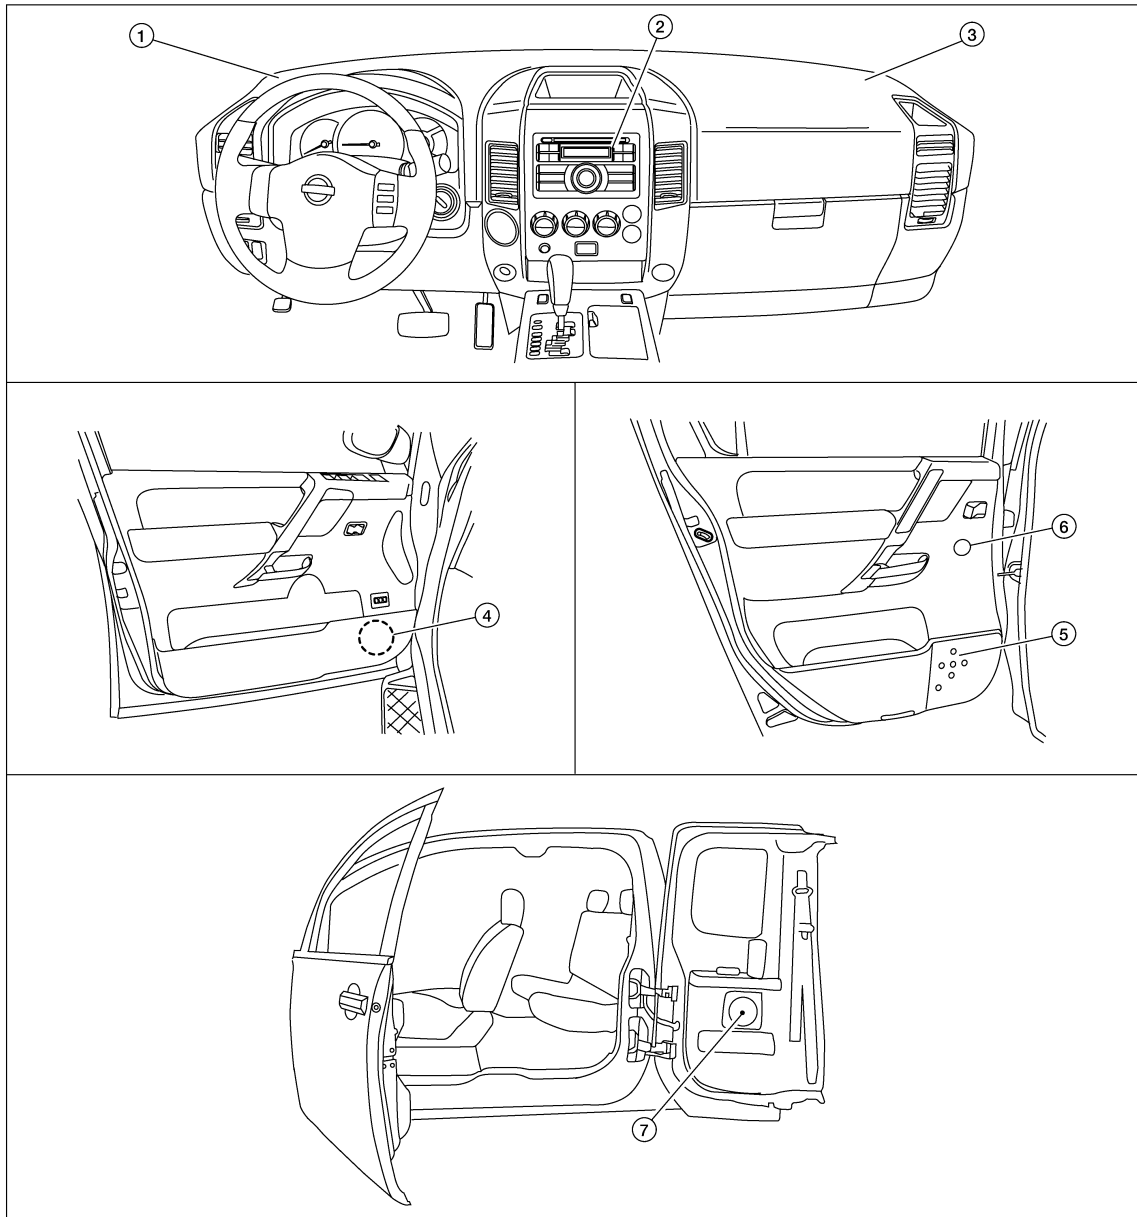

AWNIA15S7ZZ

- | | | |
|--|---|---|
| 1. Front tweeter LH M109 | 2. Audio unit M168 | 3. Front tweeter RH M111 |
| 4. Front door speaker
LH D12
RH D112 | 5. Rear door speaker (crew cab)
LH D207
RH D307 | 6. Rear door tweeter (crew cab)
LH D208
RH D308 |
| 7. Rear door speaker (king cab)
LH B76
RH B159 | | |

Component Description

INFOID:000000005387533

Part name	Description
Audio unit	Controls audio system functions
Front door speakers	<ul style="list-style-type: none"> Outputs audio signal from audio unit Outputs high, mid and low range sounds

AUDIO SYSTEM

< FUNCTION DIAGNOSIS >

[BASE AUDIO]

Part name	Description	
Front tweeters	<ul style="list-style-type: none">• Outputs audio signal from audio unit• Outputs high range sounds	A
Rear door speakers	<ul style="list-style-type: none">• Outputs audio signal from audio unit• Outputs high, mid and low range sounds	B
Rear door tweeters (crew cab)	<ul style="list-style-type: none">• Outputs audio signal from audio unit• Outputs high range sounds	C

A

B

C

D

E

F

G

H

I

J

K

L

M

AV

O

P

COMPONENT DIAGNOSIS

**POWER SUPPLY AND GROUND CIRCUIT
AUDIO UNIT**

AUDIO UNIT : Diagnosis Procedure

INFOID:000000005387534

Regarding Wiring Diagram information, refer to [AV-23, "Wiring Diagram"](#).

1.CHECK FUSES

Check that the following fuses of the audio unit are not are not blown.

Unit	Terminals	Signal name	Fuse No.
Audio unit	19	Battery power	31
	7	Ignition switch ACC or ON	4

Are the fuses OK?


YES >> GO TO 2.

NO >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse.

2.POWER SUPPLY CIRCUIT CHECK

1. Disconnect audio unit connector M168.
2. Check voltage between the audio unit connector M168 ground.

(+)		(-)	OFF	ACC	ON
Connector	Terminal				
M168	7	Ground	0V	Battery voltage	Battery voltage
	19	Ground	Battery voltage	Battery voltage	Battery voltage

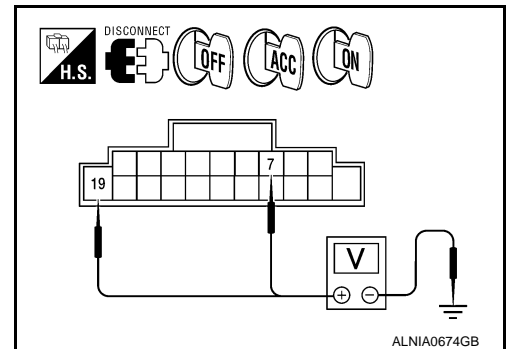

Are the voltage results as specified?

YES >> Inspection end.

NO >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.

3.GROUND CIRCUIT CHECK

Inspect audio unit case ground.

Does case ground pass inspection?

YES >> Inspection end.

NO >> Repair audio unit case ground.

FRONT DOOR SPEAKER

< COMPONENT DIAGNOSIS >

[BASE AUDIO]

FRONT DOOR SPEAKER

Description

INFOID:000000005387535

The audio unit sends audio signals to the front door speakers using the front door speaker circuits.

Diagnosis Procedure

INFOID:000000005387536

Regarding Wiring Diagram information, refer to [AV-23, "Wiring Diagram"](#).

1. HARNESS CHECK

1. Disconnect audio unit connector M168 and suspect speaker connector.
2. Check continuity between audio unit harness connector M168 (A) terminal and suspect speaker harness connector (B) terminal.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M168	2	D12	1	Yes
	3		2	
	11	D112	1	
	12		2	

3. Check continuity between audio unit harness connector M168 (A) terminal and ground.


A		—	Continuity
Connector	Terminal		
M168	2	Ground	No
	3		
	11		
	12		

Are continuity results as specified?

YES >> GO TO 2.

- NO >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.

2. FRONT SPEAKER SIGNAL CHECK

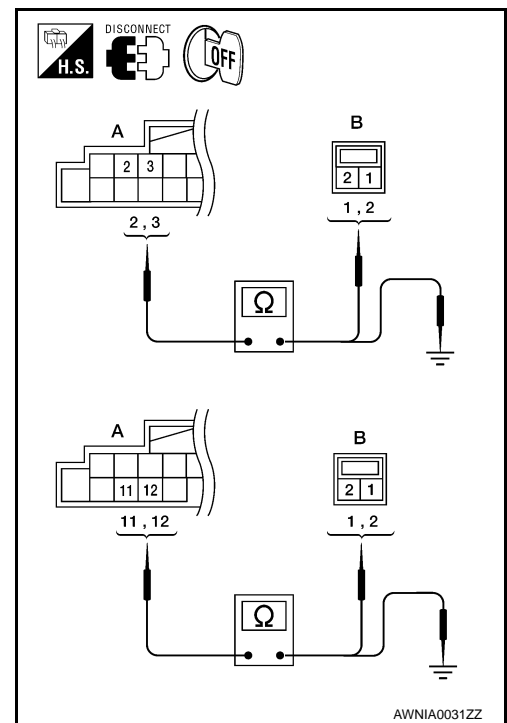

AWNIA0031ZZ


A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

FRONT DOOR SPEAKER

[BASE AUDIO]


< COMPONENT DIAGNOSIS >

1. Connect audio unit connector M168 and front speaker connector.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio unit harness connector M168 terminals with CONSULT-III or oscilloscope.

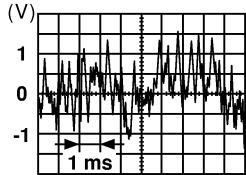Con- nector	(+)		(-)		Condition	Reference signal
	Terminal	Terminal	Terminal	Terminal		
M168	2	3	11	12	Receive audio signal	 <p style="text-align: right; font-size: small;">SKIA0177E</p>
	11	12				

Is the audio signal voltage as specified?

- YES >> Replace speaker. Refer to [AV-36, "Removal and Installation"](#).
- NO >> Replace audio unit. Refer to [AV-34, "Removal and Installation"](#).

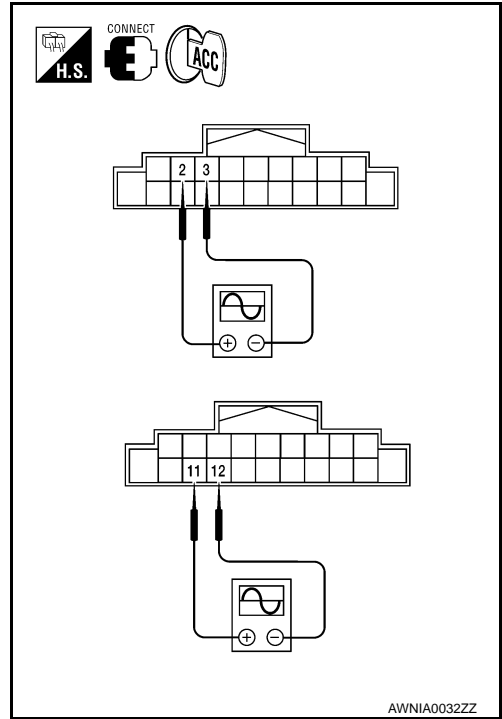

FRONT TWEETER

< COMPONENT DIAGNOSIS >

[BASE AUDIO]

FRONT TWEETER

Description

INFOID:000000005387537

The audio unit sends audio signals to the front tweeters using the front tweeter circuits.

Diagnosis Procedure

INFOID:000000005387538

Regarding Wiring Diagram information, refer to [AV-23, "Wiring Diagram"](#).


1. HARNESS CHECK

1. Disconnect audio unit connector M168 and suspect front tweeter connector.
2. Check continuity between audio unit harness connector M168 (A) and suspect front tweeter harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M168	2	M109	1	Yes
	3		2	
	11	M111	1	
	12		2	

3. Check continuity between audio unit harness connector M168 (A) and ground.

A		—	Continuity
Connector	Terminal		
M168	2	Ground	No
	3		
	11		
	12		

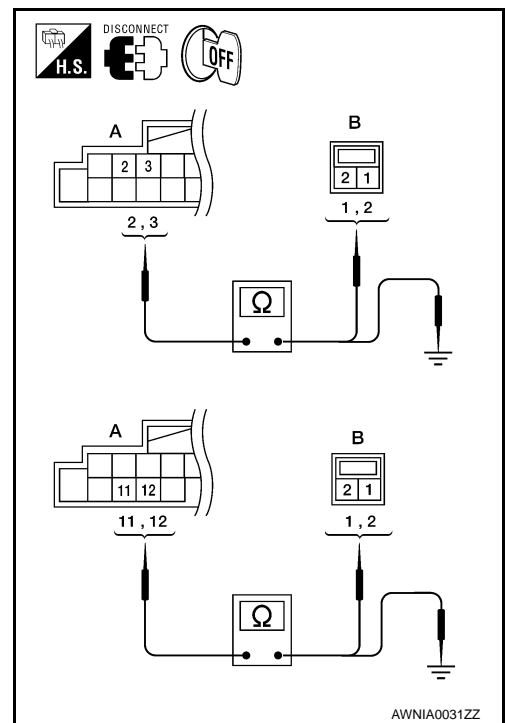

Are the continuity results as specified?

YES >> GO TO 2.

- NO >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.

2. FRONT TWEETER SIGNAL CHECK


A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

FRONT TWEETER

[BASE AUDIO]


< COMPONENT DIAGNOSIS >

1. Connect audio unit connector M168 and front tweeter connector.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio unit harness connector M168 terminals with CONSULT-III or oscilloscope.

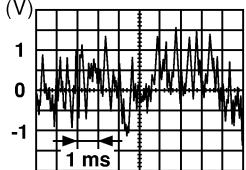Con- nector	(+)		(-)		Condition	Reference signal
	Terminal	Terminal	Terminal	Terminal		
M168	2	3	11	12	Receive audio signal	 <p style="text-align: center; font-size: small;">SKIA0177E</p>
	11	12				

Is the audio signal voltage as specified?

- YES >> Replace the suspect front tweeter. Refer to [AV-35, "Removal and Installation"](#).
- NO >> Replace audio unit. Refer to [AV-34, "Removal and Installation"](#).

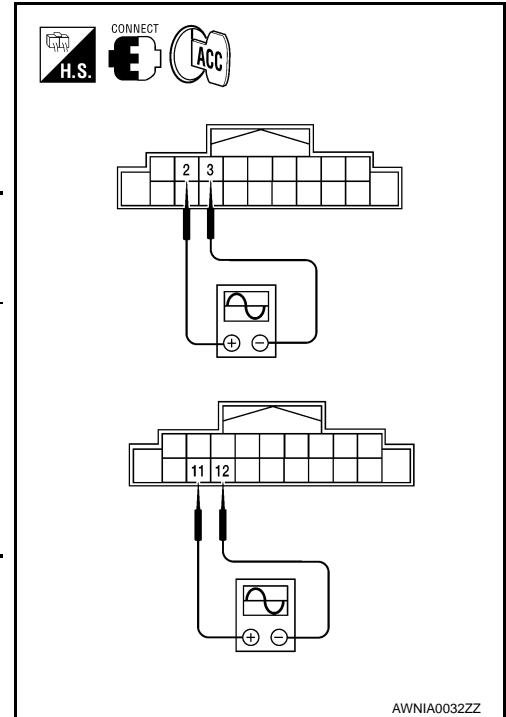

REAR DOOR SPEAKER

< COMPONENT DIAGNOSIS >

[BASE AUDIO]

REAR DOOR SPEAKER

Description

INFOID:000000005387539

The audio unit sends audio signals to the rear door speakers using the rear door speaker circuits.

Diagnosis Procedure

INFOID:000000005387540

Regarding Wiring Diagram information, refer to [AV-23, "Wiring Diagram"](#).


1. HARNESS CHECK

1. Disconnect audio unit connector M168 and suspect rear door speaker connector.
2. Check continuity between audio unit harness connector M168 (A) and suspect rear door speaker harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M168	4	D207 (crew cab) B76 (king cab)	1	Yes
	5		2	
	13	D307 (crew cab) B159 (king cab)	1	
	14		2	

3. Check continuity between audio unit harness connector M168 (A) and ground.

A		—	Continuity
Connector	Terminal		
M168	4	Ground	No
	5		
	13		
	14		

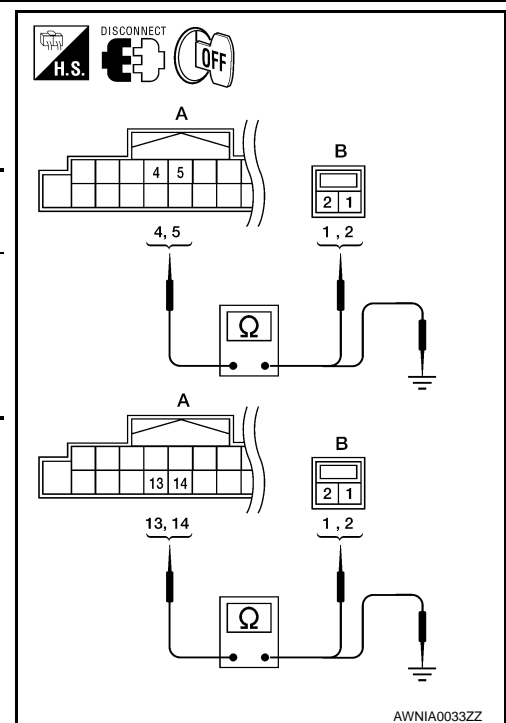

Are the continuity results as specified?

YES >> GO TO 2.

- NO >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.

2. REAR DOOR SPEAKER SIGNAL CHECK


AV

REAR DOOR SPEAKER

[BASE AUDIO]

< COMPONENT DIAGNOSIS >

1. Connect audio unit connector and rear door speaker connector.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio unit harness connector M168 terminals with CONSULT-III or oscilloscope.

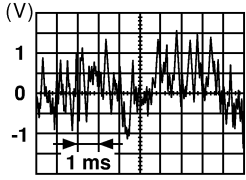
(+)		(-)		Condition	Reference signal
Connector	Terminal	Terminal	Terminal		
M168	4	5	14	Receive audio signal	
	13	14			

SKIA0177E

Is the audio signal voltage as specified?

YES >> Replace the suspect rear door speaker. Refer to [AV-36. "Removal and Installation"](#).

NO >> Replace audio unit. Refer to [AV-34. "Removal and Installation"](#).

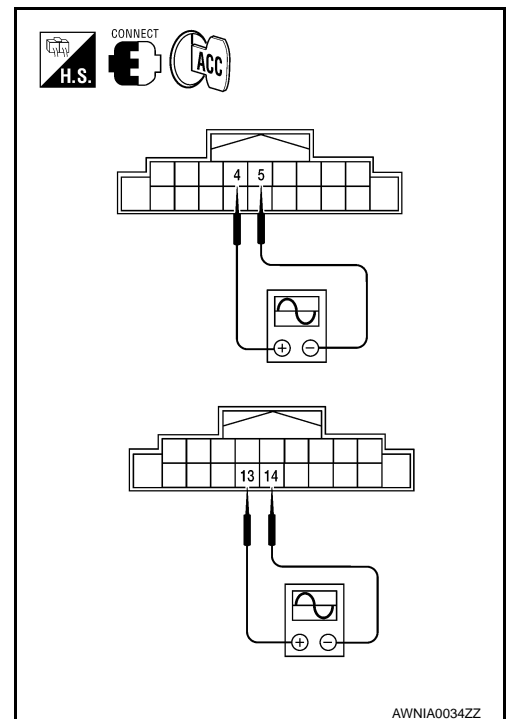

AWNIA0034ZZ

REAR DOOR TWEETER

< COMPONENT DIAGNOSIS >

[BASE AUDIO]

REAR DOOR TWEETER

Description

INFOID:000000005387541

The audio unit sends audio signals to the rear door tweeters using the audio signal circuits.

Diagnosis Procedure

INFOID:000000005387542

Regarding Wiring Diagram information, refer to [AV-23, "Wiring Diagram"](#).


1. HARNESS CHECK

1. Disconnect audio unit connector M168 and suspect rear door tweeter connector.
2. Check continuity between audio unit harness connector M168 (A) and suspect rear door tweeter harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M168	4	D208	1	Yes
	5		2	
	13	D308	1	
	14		2	

3. Check continuity between audio unit harness connector M168 (A) and ground.

A		—	Continuity
Connector	Terminal		
M168	4	Ground	No
	5		
	13		
	14		

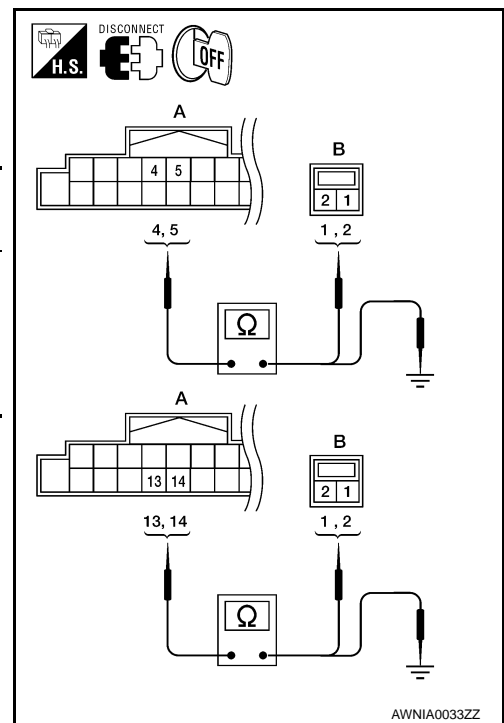

Are the continuity results as specified?

YES >> GO TO 2.

- NO >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.

2. REAR DOOR TWEETER SIGNAL CHECK


A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

REAR DOOR TWEETER

[BASE AUDIO]

< COMPONENT DIAGNOSIS >


1. Connect audio unit connector and rear door tweeter connector.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio unit harness connector M168 terminals with CONSULT-III or oscilloscope.

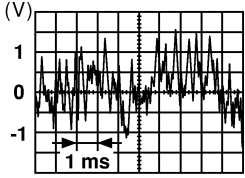Connector	(+)		(-)		Condition	Reference signal
	Terminal	Terminal	Terminal	Terminal		
M168	4	5	13	14	Receive audio signal	
	13	14				

SKIA0177E

Is the audio signal voltage as specified?

- YES >> Replace the suspect rear door tweeter. Refer to [AV-37, "Removal and Installation"](#).
- NO >> Replace audio unit. Refer to [AV-34, "Removal and Installation"](#).

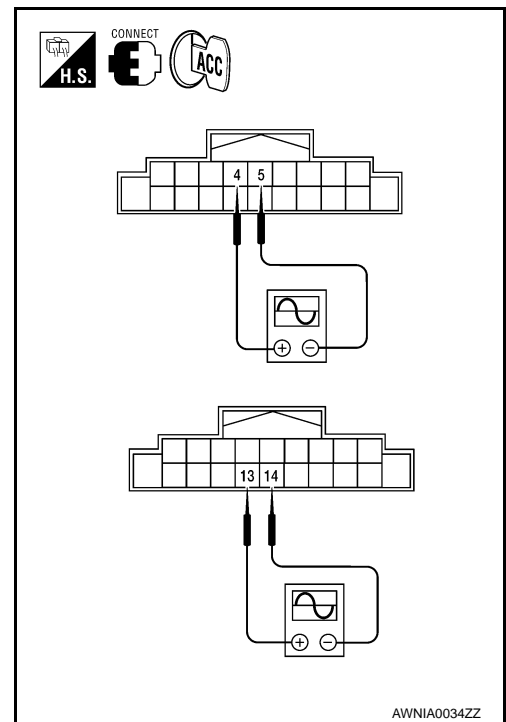

AWNIA0034ZZ

AUDIO UNIT

< ECU DIAGNOSIS >

[BASE AUDIO]


ECU DIAGNOSIS

AUDIO UNIT

Reference Value

INFOID:000000005387543

TERMINAL LAYOUT

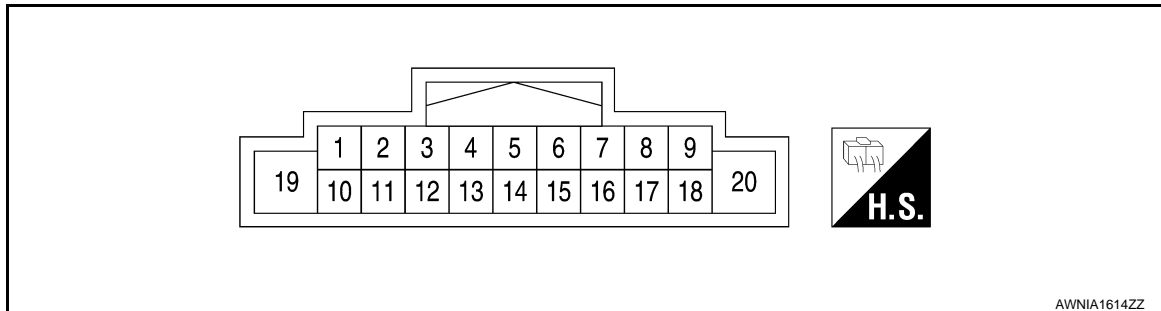


PHYSICAL VALUES

Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output			
2 (L/W)	3 (L/R)	Sound signal front door speaker and front tweeter LH (if equipped)	Output	Ignition switch ON	Audio output	
4 (SB)	5 (B/Y)	Sound signal rear door speaker and rear tweeter LH (if equipped)	Output	Ignition switch ON	Audio output	
7 (V)	Ground	ACC power supply	Input	Ignition switch ACC or ON	—	Battery voltage
9 (R/L)	8 (BR)	Illumination	Input	Ignition switch ACC or ON	Exterior lights ON	Battery voltage
11 (W/B)	12 (L/B)	Sound signal front door speaker and front tweeter RH (if equipped)	Output	Ignition switch ON	Voice output	

AUDIO UNIT

< ECU DIAGNOSIS >

[BASE AUDIO]

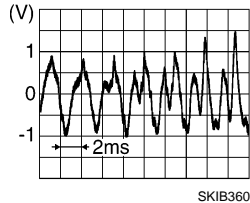Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output			
13 (O/L)	14 (R/L)	Sound signal rear door speaker and rear tweeter RH (if equipped)	Output	Ignition switch ON	Voice output	
19 (Y)	Ground	Battery power supply	Input	Ignition switch OFF	—	Battery voltage

AUDIO UNIT

< ECU DIAGNOSIS >


[BASE AUDIO]

INFOID:000000005387544

Wiring Diagram

CC : CREW CAB
KC : KING CAB

BASE AUDIO SYSTEM

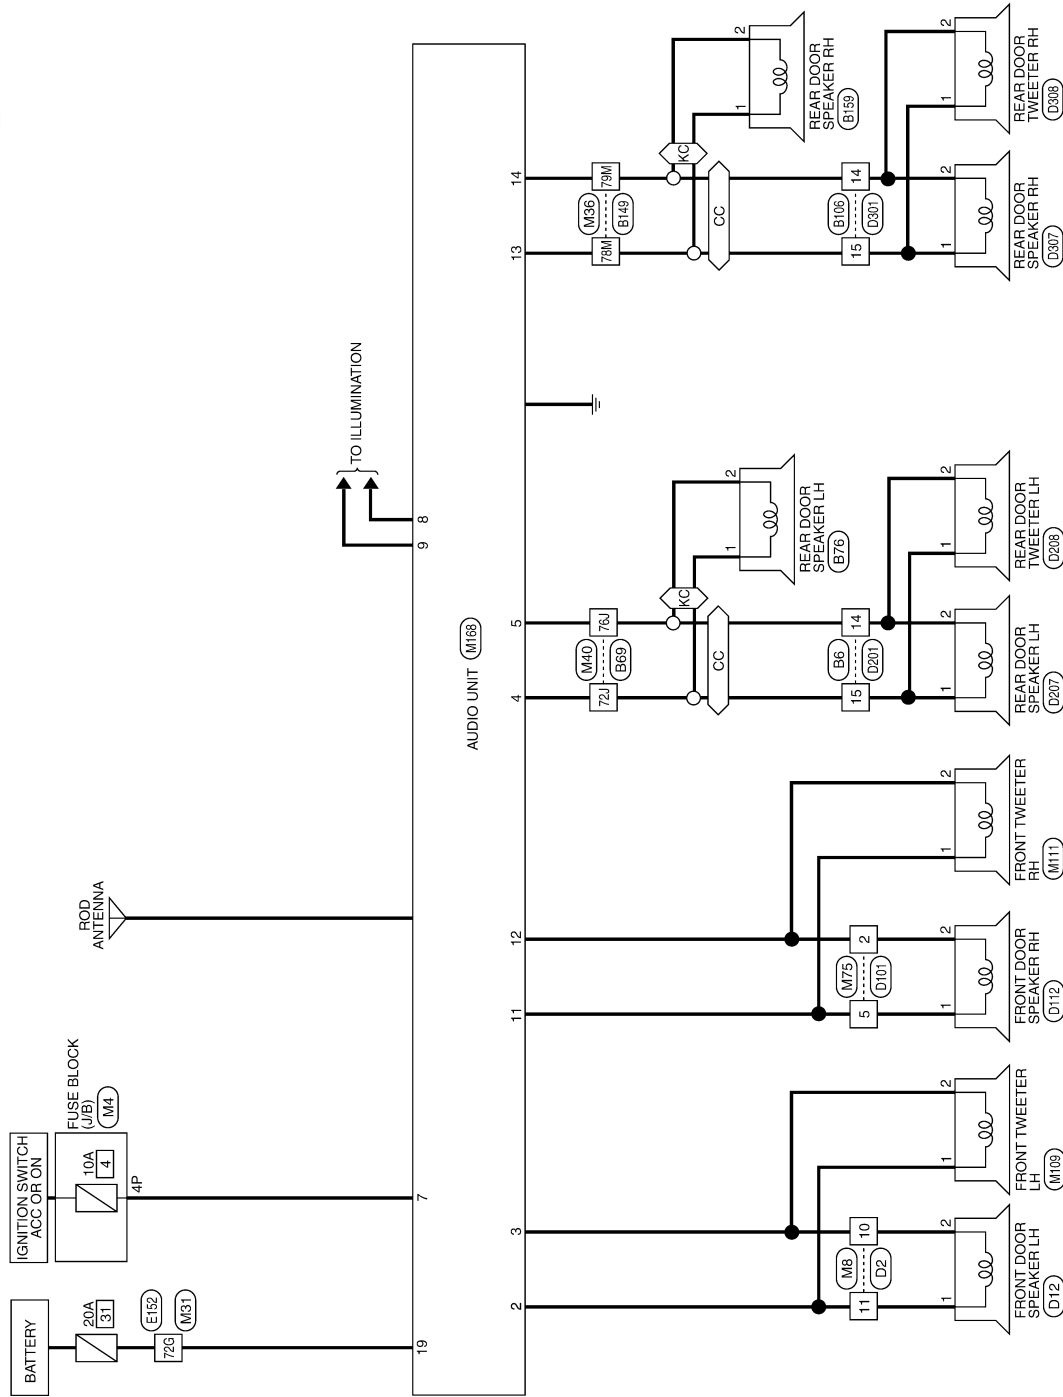

ABNWA0373GB

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P


BASE AUDIO SYSTEM CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
4P	V	-

Connector No.	M8
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
10	L/R	-
11	L/W	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

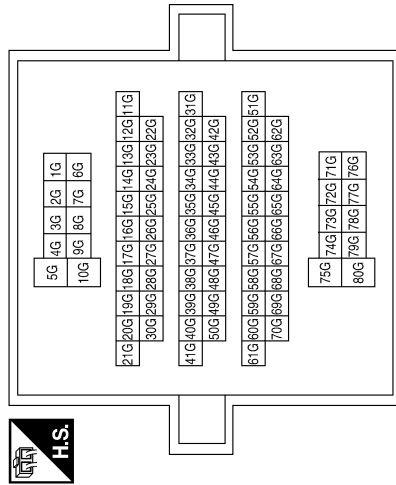

Terminal No.	Color of Wire	Signal Name
72G	Y	-


AANIA0016GB

AUDIO UNIT

< ECU DIAGNOSIS >



[BASE AUDIO]

Connector No.	M75
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	L/B	-
5	W/B	-

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	WHITE

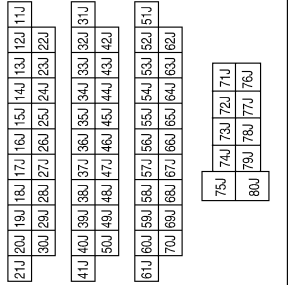



Terminal No.	Color of Wire	Signal Name
72J	SB	-
76J	B/Y	-

Connector No.	M111
Connector Name	FRONT TWEETER RH
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	W/B	-
2	L/B	-

Connector No.	M36
Connector Name	WIRE TO WIRE
Connector Color	WHITE

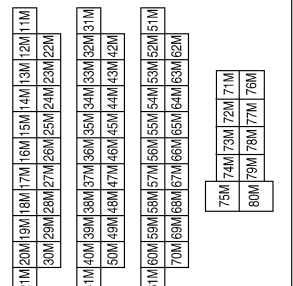

Terminal No.	Color of Wire	Signal Name
78M	O/L	-
79M	R/L	-

Connector No.	M109
Connector Name	FRONT TWEETER LH
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	L/W	-
2	L/R	-

AANIA0017GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

AV

AUDIO UNIT


< ECU DIAGNOSIS >

[BASE AUDIO]

Terminal No.	Color of Wire	Signal Name
16	-	-
17	-	-
18	-	-
19	Y	-
20	-	-


Terminal No.	Color of Wire	Signal Name
5	B/Y	-
6	-	-
7	V	-
8	BR	-
9	R/L	-
10	-	-
11	W/B	-
12	L/B	-
13	O/L	-
14	R/L	-
15	-	-

Connector No.	M168
Connector Name	AUDIO UNIT (WITH BASE AUDIO SYSTEM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	-	-
2	L/W	-
3	L/R	-
4	SB	-

Connector No.	B6
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
72G	Y	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

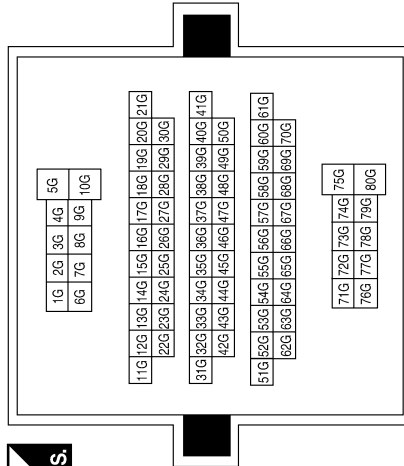

Terminal No.	Color of Wire	Signal Name
14	B/Y	-
15	SB	-

AUDIO UNIT

< ECU DIAGNOSIS >


[BASE AUDIO]

Connector No.	B76
Connector Name	REAR DOOR SPEAKER LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	Y	-


Terminal No.	Color of Wire	Signal Name
72J	L	-(KING CAB)
72J	SB	-(CREW CAB)
76J	Y	-(KING CAB)
76J	B/Y	-(CREW CAB)

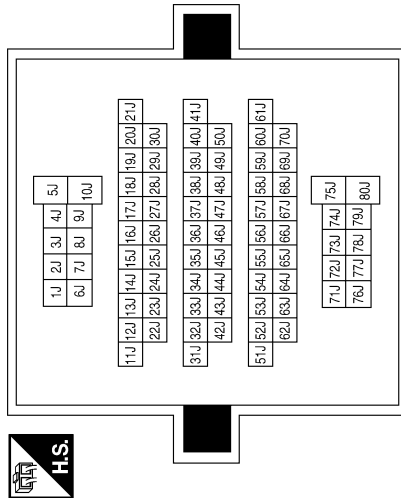

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE


Terminal No.	Color of Wire	Signal Name
78M	L	-(KING CAB)
78M	O/L	-(CREW CAB)
79M	R/L	-

Connector No.	B149
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Connector No.	B106
Connector Name	WIRE TO WIRE
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
14	R/L	-
15	O/L	-

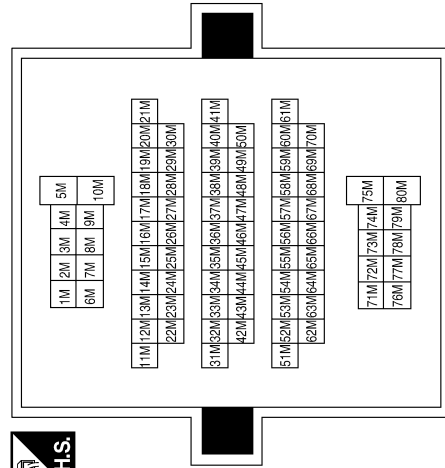

ABNIA1152GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

AV

AUDIO UNIT

< ECU DIAGNOSIS >


[BASE AUDIO]

Connector No.	D12
Connector Name	FRONT DOOR SPEAKER LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L/W	-
2	L/R	-

Connector No.	D2
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
10	L/R	-
11	L/W	-

Connector No.	B159
Connector Name	REAR DOOR SPEAKER RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	R/L	-

Connector No.	D201
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
14	B/Y	-
15	SB	-

Connector No.	D112
Connector Name	FRONT DOOR SPEAKER RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W/B	-
2	L/B	-

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	L/B	-
5	W/B	-


ABNIA1153GB

AUDIO UNIT

< ECU DIAGNOSIS >

[BASE AUDIO]

Connector No.	D301
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
14	R/L	-
15	O/L	-

Connector No.	D208
Connector Name	REAR DOOR TWEETER LH
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	SB	-
2	B/Y	-

Connector No.	D207
Connector Name	REAR DOOR SPEAKER LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	SB	-
2	B/Y	-

Connector No.	D308
Connector Name	REAR DOOR TWEETER RH
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	O/L	-
2	R/L	-

Connector No.	D307
Connector Name	REAR DOOR SPEAKER RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	O/L	-
2	R/L	-

ABNIA1154GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

AV

SYMPTOM DIAGNOSIS

AUDIO SYSTEM

Symptom Table

INFOID:000000005387545

AUDIO SYSTEM

Symptom	Possible cause	Reference page
Inoperative	<ul style="list-style-type: none"> • Audio unit power circuit • Audio unit 	<ul style="list-style-type: none"> • AV-12
All speakers do not sound	<ul style="list-style-type: none"> • Audio unit • Audio unit power circuit 	<ul style="list-style-type: none"> • AV-12
One or several speakers do not sound	<ul style="list-style-type: none"> • Front door speaker • Front tweeter • Rear door tweeter (crew cab) • Rear door speaker 	<ul style="list-style-type: none"> • AV-13 • AV-15 • AV-17 • AV-19

CD

Symptom	Possible cause	Reference page
CD cannot be inserted.	Audio unit	AV-12
CD cannot be ejected.		
The CD cannot be played.		
The sound skips, stops suddenly, or is distorted.		

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[BASE AUDIO]

NORMAL OPERATING CONDITION

Description

INFOID:000000005387546

The majority of the audio concerns are the result of outside causes (bad CD, electromagnetic interference, etc.).

NOISE

The following noise results from variations in field strength, such as fading noise and multi-path noise, or external noise from trains and other sources. It is not a malfunction.

- Fading noise: This noise occurs because of variations in the field strength in a narrow range due to mountains or buildings blocking the signal.
- Multi-path noise: This noise results from the waves sent directly from the broadcast station arriving at the antenna at a different time from the waves which reflect off mountains or buildings.

The vehicle itself can be a source of noise if noise prevention parts or electrical equipment is malfunctioning. Check if noise is caused and/or changed by engine speed, ignition switch turned to each position, and operation of each piece of electrical equipment, and determine the cause.

NOTE:

The source of the noise can be found easily by listening to the noise while removing the fuses of electrical components, one by one.

Type of Noise and Possible Cause

Occurrence condition		Possible cause
Occurs only when engine is ON.	A continuous growling noise occurs. The speed of the noise varies with changes in the engine speed.	<ul style="list-style-type: none"> • Ignition components
The occurrence of the noise is linked with the operation of the fuel pump.		<ul style="list-style-type: none"> • Fuel pump condenser
Noise only occurs when various electrical components are operating.	A cracking or snapping sound occurs with the operation of various switches.	<ul style="list-style-type: none"> • Relay malfunction, audio unit malfunction
	The noise occurs when various motors are operating.	<ul style="list-style-type: none"> • Motor case ground • Motor
The noise occurs constantly, not just under certain conditions.		<ul style="list-style-type: none"> • Rear defogger coil malfunction • Open circuit in printed heater • Poor ground of antenna feeder line
A cracking or snapping sound occurs while the vehicle is being driven, especially when it is vibrating excessively.		<ul style="list-style-type: none"> • Ground wire of body parts • Ground due to improper part installation • Wiring connections or a short circuit

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005387547

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:


- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

PREPARATION

PREPARATION

Commercial Service Tools

INFOID:000000005387548

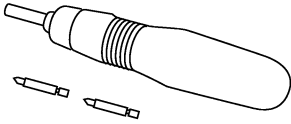Tool name	Description
<p>Power tool</p>  <p>PBIC0191E</p>	<p>Loosening bolts and nuts</p>

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P


AV

ON-VEHICLE REPAIR**AUDIO UNIT****Removal and Installation**

INFOID:000000005387549

AUDIO UNIT**Removal**

1. Remove the cluster lid C. Refer to [JP-14. "Removal and Installation"](#).
2. Remove the audio unit screws (A), using power tool.
3. Pull out the audio unit (1) and disconnect the audio unit connectors.

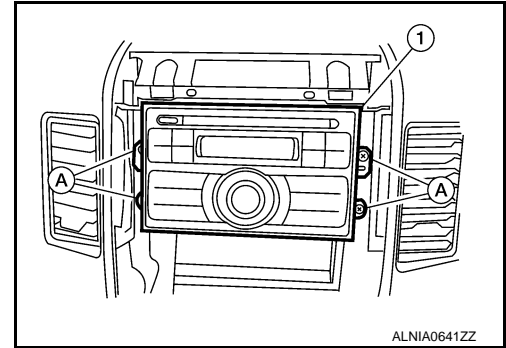**Installation**

Installation is in the reverse order of removal.

FRONT TWEETER


Removal and Installation

INFOID:000000005387550

FRONT TWEETER

Removal

1. Remove the front tweeter grille. Refer to [IP-11. "Removal and Installation"](#).
2. Remove the front tweeter clips (C103) (A).
3. Disconnect the front tweeter connector and remove the front tweeter (1).

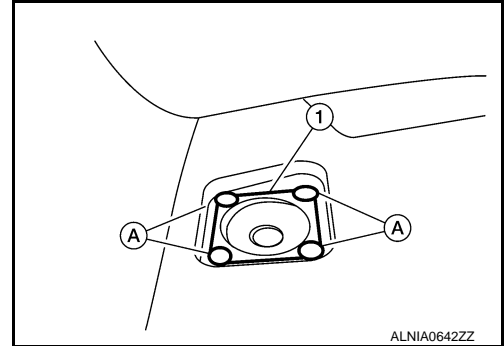

Installation

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M

AV

O
P

FRONT DOOR SPEAKER


Removal and Installation

INFOID:000000005387551

FRONT DOOR SPEAKER

Removal

1. Remove the front door finisher. Refer to [INT-10, "Removal and Installation"](#).
2. Remove the four front door speaker screws.
3. Disconnect the front door speaker connector and remove the front door speaker.

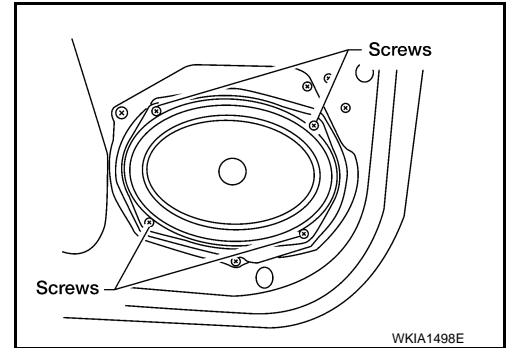

Installation

Installation is in the reverse order of removal.

REAR DOOR SPEAKER

< ON-VEHICLE REPAIR >

[BASE AUDIO]

REAR DOOR SPEAKER


Removal and Installation

INFOID:000000005387552

REAR DOOR SPEAKER

Removal

1. Remove the rear door finisher. Refer to [INT-10, "Removal and Installation"](#) (Crew Cab) or [INT-10, "Removal and Installation"](#) (King Cab).
2. Remove the three rear door speaker screws and remove the rear door speaker.

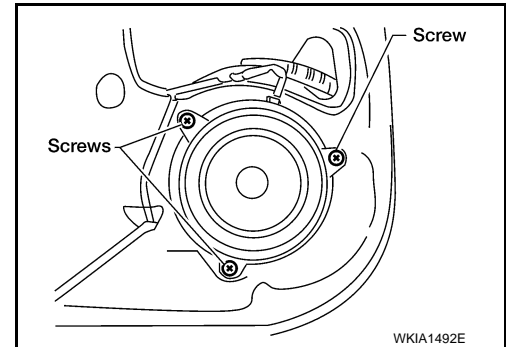


Installation

Installation is in the reverse order of removal.

REAR DOOR TWEETER

Removal

1. Remove the rear door finisher. Refer to [INT-10, "Removal and Installation"](#).
2. Remove the rear door tweeter screws and remove the rear door tweeter.
3. Disconnect the rear door tweeter connector.

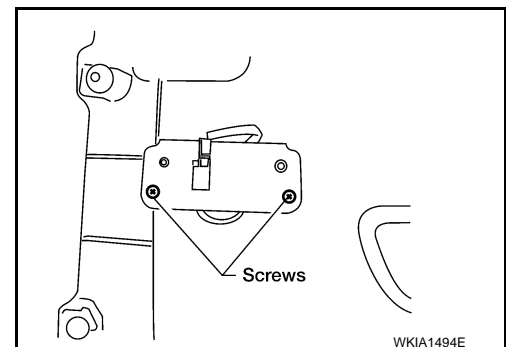

Installation

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

AUDIO ANTENNA


< ON-VEHICLE REPAIR >

[BASE AUDIO]

AUDIO ANTENNA

Location of Antenna

INFOID:000000005387553

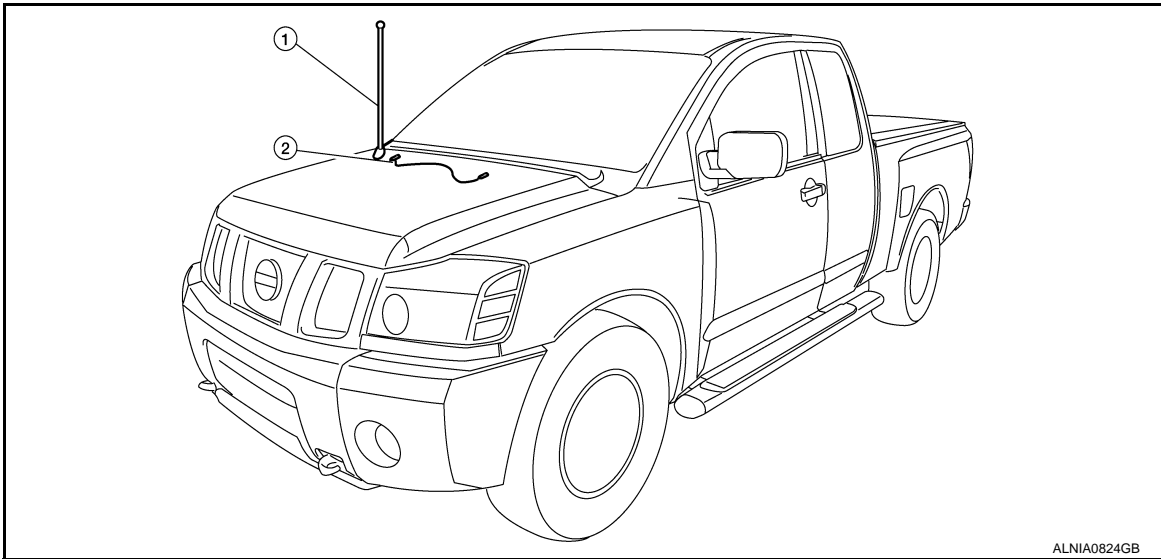

ALNIA0824GB

1. Antenna

2. Main feeder cable


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000005387554

OVERALL SEQUENCE

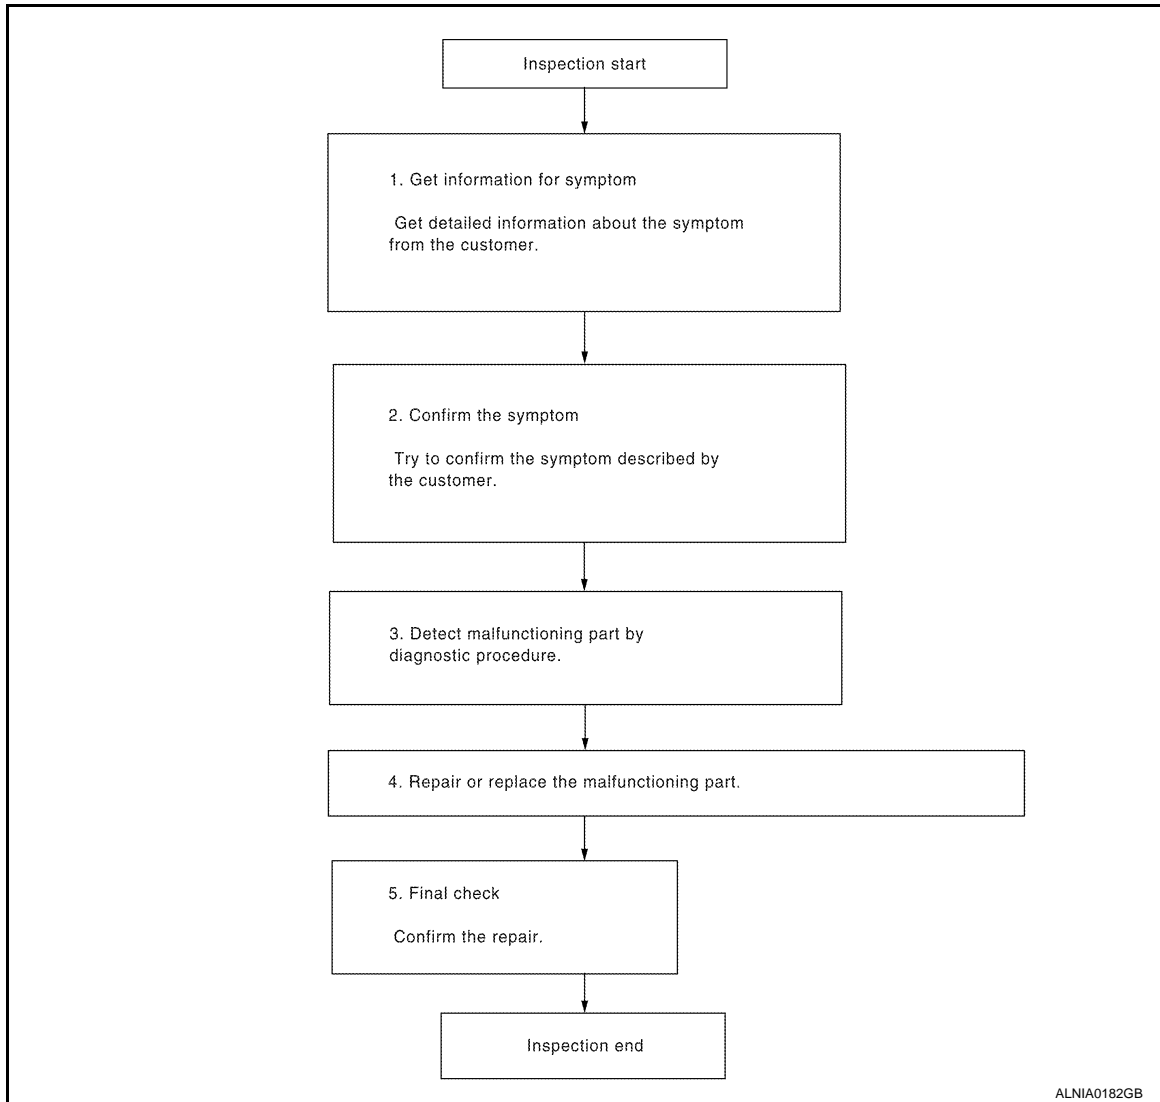

DETAILED FLOW

1.GET INFORMATION FOR SYMPTOM

Get detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred).

>> GO TO 2.

2.CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer. Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 3.

3.DETECT MALFUNCTIONING PART BY DIAGNOSTIC PROCEDURE

Inspect according to Diagnostic Procedure of the system.

A
B
C
D
E
F
G
H
I
J
K
L
M

AV

O
P

DIAGNOSIS AND REPAIR WORKFLOW

[MID AUDIO]

< BASIC INSPECTION >

Is malfunctioning part detected?

YES >> GO TO 4.

NO >> GO TO 2.

4.REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnostic Procedure.

>> GO TO 5.

5.FINAL CHECK

Refer to confirmed symptom in step 2, and make sure that the symptom is not detected.

Was the repair confirmed?


YES >> Inspection End.

NO >> GO TO 2.

FUNCTION DIAGNOSIS

AUDIO SYSTEM

System Diagram

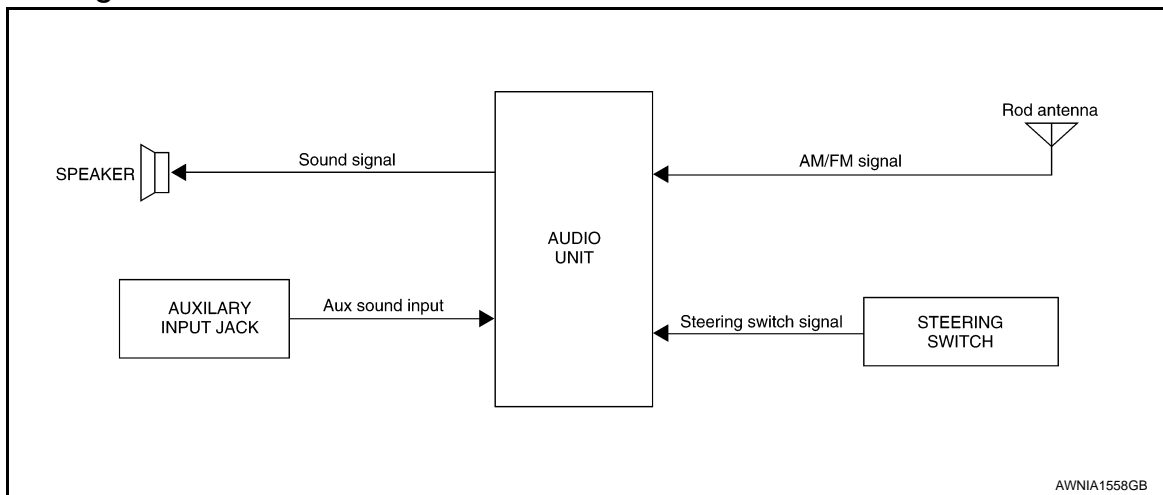

System Description

AUDIO SYSTEM

The audio system consists of the following components

- Audio unit
- Rod antenna
- Steering wheel audio control switches
- Front door speakers
- Front tweeters
- Rear door speakers
- Rear door tweeters (crew cab)

When the audio system is on, radio signals are received by the rod antenna. The audio unit then sends audio signals to the front door speakers, front tweeters, rear door speakers and rear door tweeters (crew cab). Refer to Owner's Manual for audio system operating instructions.

A
B
C
D
E
F
G
H
I
J
K
L
M

AV

O
P


AUDIO SYSTEM

< FUNCTION DIAGNOSIS >

[MID AUDIO]

Component Parts Location

INFOID:000000005387557

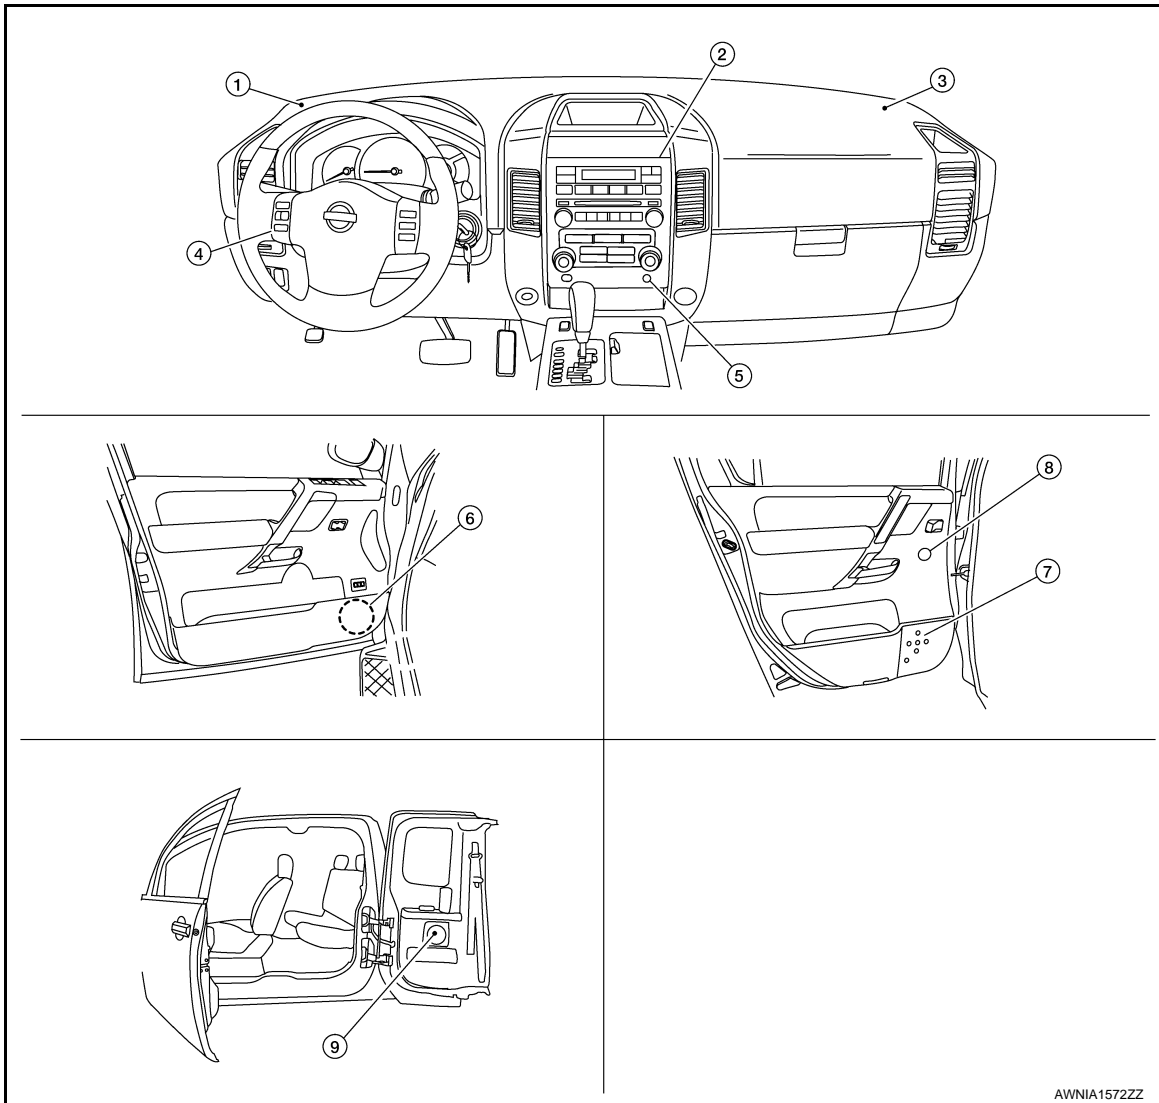

AWNIA1572ZZ

- | | | |
|---|---|--|
| 1. Front tweeter LH M109 | 2. Audio unit M165, M166, M167 | 3. Front tweeter RH M111 |
| 4. Steering wheel audio control switches | 5. Aux jack M104 | 6. Front door speaker
LH D12
RH D112 |
| 7. Rear door speaker (crew cab)
LH D207
RH D307 | 8. Rear door tweeter (crew cab)
LH D208
RH D308 | 9. Rear door speaker (king cab)
LH B76
RH B159 |

Component Description

INFOID:000000005387558

Part name	Description
Audio unit	Controls audio system and satellite radio system functions
Steering wheel audio control switches	<ul style="list-style-type: none"> • Audio operation can be operated • Steering switch signal is output to the audio unit
Front door speakers	<ul style="list-style-type: none"> • Outputs audio signal from audio unit • Outputs high, mid and low range sounds
Front tweeters	<ul style="list-style-type: none"> • Outputs audio signal from audio unit • Outputs high range sounds

AUDIO SYSTEM

< FUNCTION DIAGNOSIS >

[MID AUDIO]

Part name	Description
Rear door speakers	<ul style="list-style-type: none">• Outputs audio signal from audio unit• Outputs high, mid and low range sounds
Rear door tweeters (crew cab)	<ul style="list-style-type: none">• Outputs audio signal from audio unit• Outputs high range sounds

A

B

C

D

E

F

G

H

I

J

K

L

M

AV

O

P

DIAGNOSIS SYSTEM (AUDIO UNIT)

< FUNCTION DIAGNOSIS >

[MID AUDIO]

DIAGNOSIS SYSTEM (AUDIO UNIT)


AV SWITCH

AV SWITCH : Component Function Check

INFOID:000000005387559

STARTING THE SELF-DIAGNOSIS MODE

1. Turn ignition switch from OFF to ACC.
2. Press and hold the "DISP/CLOCK" switch and turn the volume control dial clockwise or counterclockwise for 30 clicks or more.

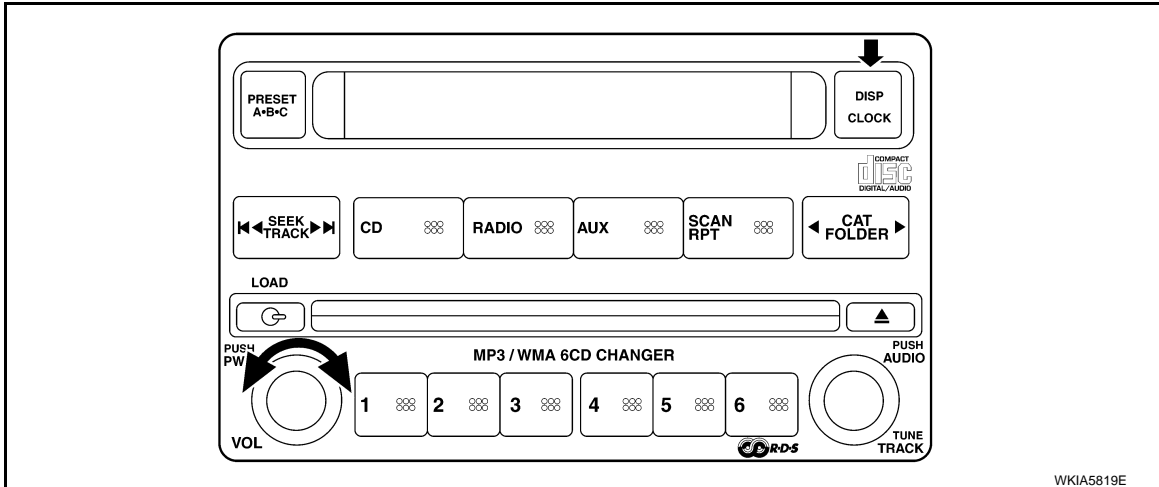

Then the self-diagnosis operates. A single beep indicates self-diagnosis mode is active.

3. Initially, all display segments will be illuminated.
4. Press each switch. When each switch is pressed, its name and communication code will be displayed

NOTE:

CD player LOAD and EJECT buttons are not included in this test and will not change the display when pressed.

DIAGNOSIS FUNCTION

- It can check for continuity of the switches by sounding the beep when each audio unit switch and steering switch is pressed.
- It can check for continuity of harness between audio unit switch and steering switch.

EXITING THE SELF-DIAGNOSIS MODE

Turn ignition switch OFF. Then the self-diagnosis ends.

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

[MID AUDIO]

COMPONENT DIAGNOSIS

POWER SUPPLY AND GROUND CIRCUIT AUDIO UNIT

AUDIO UNIT : Diagnosis Procedure

INFOID:000000005387560

Regarding Wiring Diagram information, refer to [AV-58, "Wiring Diagram"](#).

1. CHECK FUSES

Check that the following fuses of the audio unit are not are not blown.

Unit	Terminals	Signal name	Fuse No.
Audio unit	6	Battery power	31
	10	Ignition switch ACC or ON	4

Are the fuses OK?


YES >> GO TO 2.

NO >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse.

2. POWER SUPPLY CIRCUIT CHECK

1. Disconnect audio unit connector M165.
2. Check voltage between the audio unit connector M165 and ground.

(+) Connector		(-) Terminal	OFF	ACC	ON
M165	6	Ground	0V	Battery voltage	Battery voltage
	10	Ground	Battery voltage	Battery voltage	Battery voltage

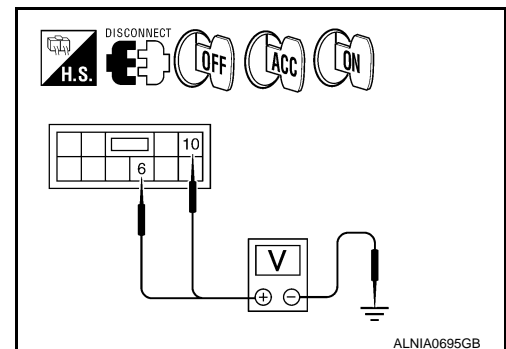

Are the voltage results as specified?

YES >> GO TO 3.

NO >> • Check connector housing for disconnected or loose terminals.
• Repair harness or connector.

3. GROUND CIRCUIT CHECK

Inspect audio unit case ground.

Does case ground pass inspection?

YES >> Inspection End.

NO >> Repair audio unit case ground.

FRONT DOOR SPEAKER

< COMPONENT DIAGNOSIS >

[MID AUDIO]

FRONT DOOR SPEAKER

Description

INFOID:000000005387561

The audio unit sends audio signals to the front door speakers using the audio signal circuits.

Diagnosis Procedure

INFOID:000000005387562

Regarding Wiring Diagram information, refer to [AV-58, "Wiring Diagram"](#).


1. HARNESS CHECK

1. Disconnect audio unit connector M165 and suspect speaker connector.
2. Check continuity between audio unit harness connector M165 (A) and suspect speaker harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M165	1	D12	2	Yes
	2		1	
	3	D112	2	
	4		1	

3. Check continuity between audio unit harness connector M165 (A) and ground.

A		—	Continuity
Connector	Terminal		
M165	1	Ground	No
	2		
	3		
	4		

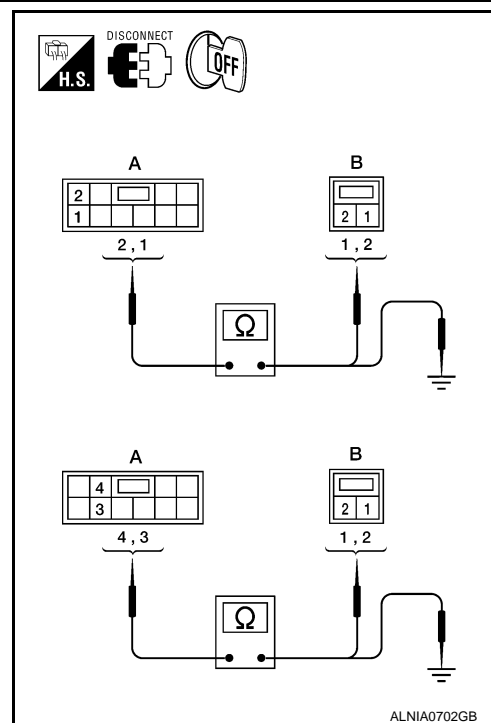

Are continuity test results as specified?

- YES >> GO TO 2.
 NO >> • Check connector housings for disconnected or loose terminals.
 • Repair harness or connector.


2. FRONT SPEAKER SIGNAL CHECK

FRONT DOOR SPEAKER

[MID AUDIO]


< COMPONENT DIAGNOSIS >

1. Connect audio unit connector M165 and suspect speaker connector.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio unit harness connector M165 terminals with CONSULT-III or oscilloscope.

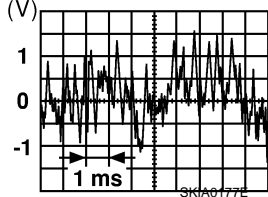Connector	Terminal		Condition	Reference signal
	(+)	(-)		
M165	2	1	Receive audio signal	
	4	3		

Is audio signal voltage as specified?

- YES >> Replace suspect speaker. Refer to [AV-72, "Removal and Installation"](#).
- NO >> Replace the audio unit. Refer to [AV-70, "Removal and Installation"](#).

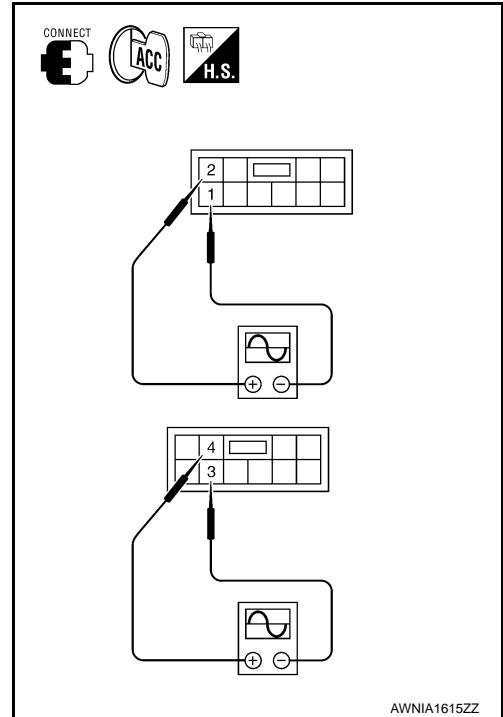

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

FRONT TWEETER

Description

INFOID:000000005387563

The audio unit sends audio signals to the front tweeters using the audio signal circuits.

Diagnosis Procedure

INFOID:000000005387564

Regarding Wiring Diagram information, refer to [AV-58, "Wiring Diagram"](#).


1. HARNESS CHECK

1. Disconnect audio unit connector M165 and suspect tweeter connector.
2. Check continuity between audio unit harness connector M165 (A) and suspect tweeter harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M165	1	M109	2	Yes
	2		1	
	3	M111	2	
	4		1	

3. Check continuity between audio unit harness connector M165 (A) and ground.

A		—	Continuity
Connector	Terminal		
M165	1	Ground	No
	2		
	3		
	4		

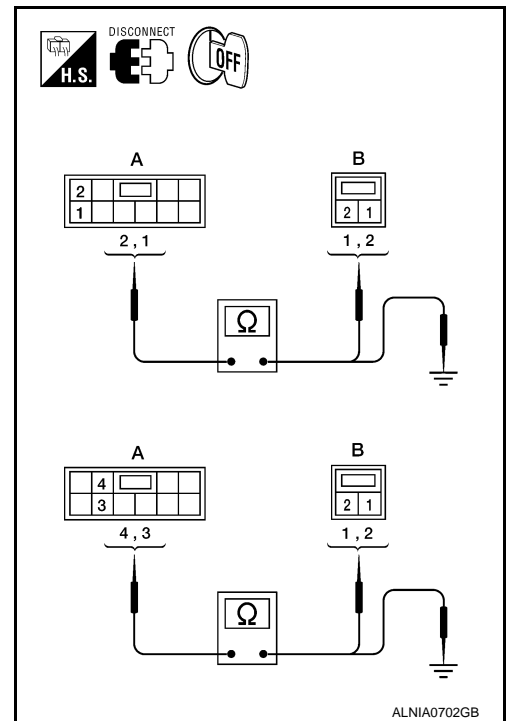

Are continuity test results as specified?

YES >> GO TO 2.

- NO >> • Check connector housings for disconnected or loose terminals.
 • Repair harness or connector.


2. FRONT TWEETER SIGNAL CHECK

FRONT TWEETER

[MID AUDIO]


< COMPONENT DIAGNOSIS >

1. Connect audio unit connector M165 and suspect tweeter connector.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio unit harness connector M165 terminals with CONSULT-III or oscilloscope.

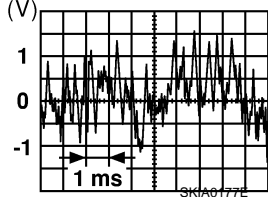Connector	Terminal		Condition	Reference signal
	(+)	(-)		
M165	2	1	Receive audio signal	
	4	3		

Is audio signal voltage as specified?

- YES >> Replace suspect tweeter. Refer to [AV-71. "Removal and Installation"](#).
- NO >> Replace the audio unit. Refer to [AV-70. "Removal and Installation"](#).

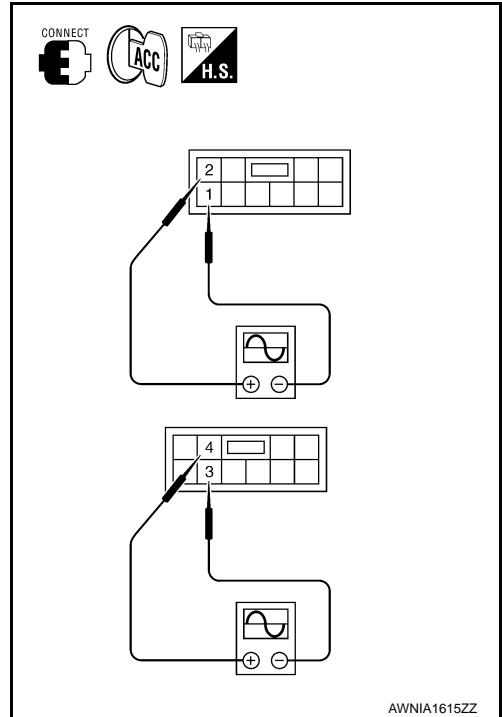

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

REAR DOOR SPEAKER

< COMPONENT DIAGNOSIS >

[MID AUDIO]

REAR DOOR SPEAKER

Description

INFOID:000000005387565

The audio unit sends audio signals to the rear door speakers using the audio signal circuits.

Diagnosis Procedure

INFOID:000000005387566

Regarding Wiring Diagram information, refer to [AV-58, "Wiring Diagram"](#).


1. HARNESS CHECK

1. Disconnect audio unit connector M166 and suspect speaker connector.
2. Check continuity between audio unit harness connectors M166 (A) and suspect speaker harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M166	13	D207 (crew cab) B76 (king cab)	2	Yes
	14		1	
	15	D307 (crew cab) B159 (king cab)	2	
	16		1	

3. Check continuity between audio unit harness connectors M166 (A) and ground.

Connector	Terminal	-	Continuity
M166	13	Ground	No
	14		
	15		
	16		

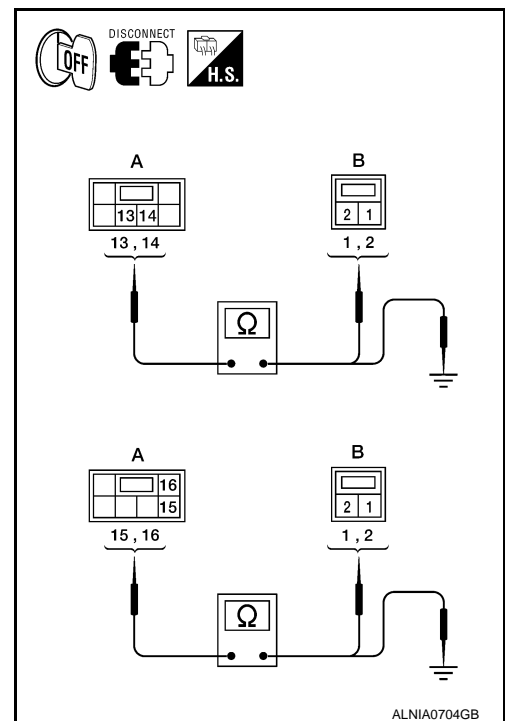

Are the continuity test results as specified?

- YES >> GO TO 2.
 NO >> • Check connector housings for disconnected or loose terminals.
 • Repair harness or connector.


2. REAR DOOR SPEAKER SIGNAL CHECK

REAR DOOR SPEAKER

[MID AUDIO]

< COMPONENT DIAGNOSIS >


1. Connect audio unit connectors and suspect speaker connector.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio unit harness connectors M166 terminals with CONSULT-III or oscilloscope.

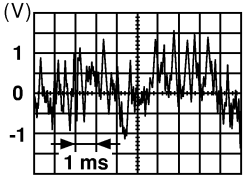Connector	Terminals		Condition	Reference signal
	(+)	(-)		
M166	14	13	Receive audio signal	
	16	15		

SKIA0177E

Are audio signal voltage readings as specified?

- YES >> Replace suspect speaker. Refer to [AV-73, "Removal and Installation"](#).
- NO >> Replace audio unit. Refer to [AV-70, "Removal and Installation"](#).

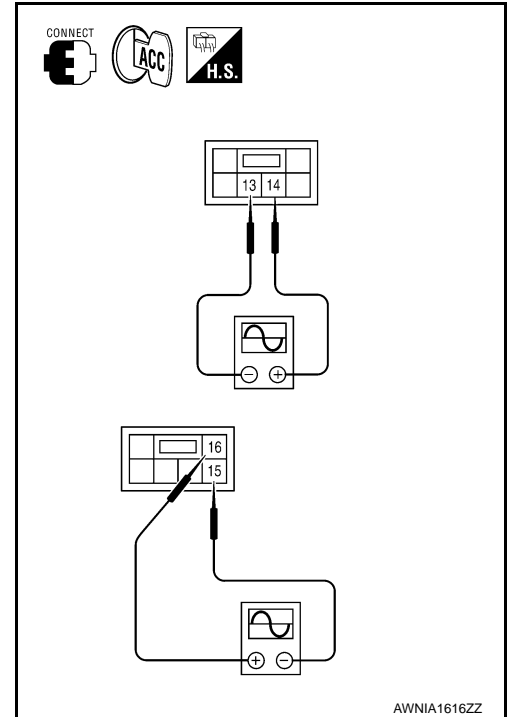

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

REAR DOOR TWEETER

< COMPONENT DIAGNOSIS >

[MID AUDIO]

REAR DOOR TWEETER

Description

INFOID:000000005387567

The audio unit sends audio signals to the rear door tweeters using the audio signal circuits.

Diagnosis Procedure

INFOID:000000005387568

Regarding Wiring Diagram information, refer to [AV-58, "Wiring Diagram"](#).


1. HARNESS CHECK

1. Disconnect audio unit connector M166 and suspect tweeter connector.
2. Check continuity between audio unit harness connectors M166 (A) and suspect tweeter harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M166	13	D208	2	Yes
	14		1	
	15	D308	2	
	16		1	

3. Check continuity between audio unit harness connectors M166 (A) and ground.

Connector	Terminal	-	Continuity
M166	13	Ground	No
	14		
	15		
	16		

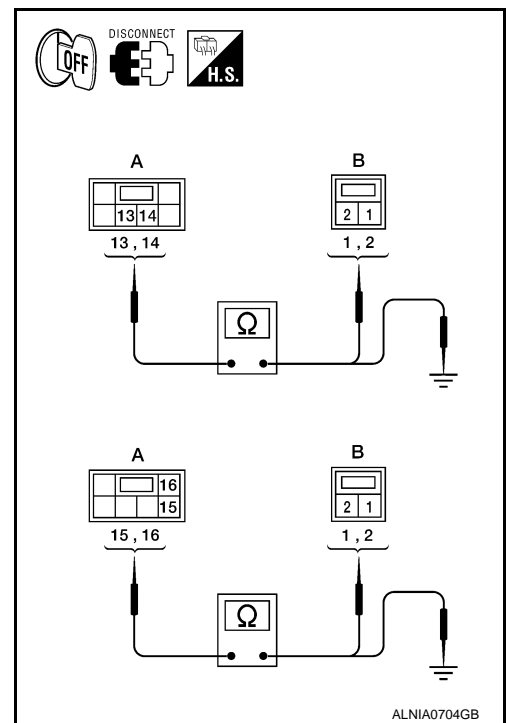

Are the continuity test results as specified?

YES >> GO TO 2.

- NO >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.


2. REAR DOOR TWEETER SIGNAL CHECK

REAR DOOR TWEETER

[MID AUDIO]

< COMPONENT DIAGNOSIS >

1. Connect audio unit connectors and suspect tweeter connector.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio unit harness connectors M166 terminals with CONSULT-III or oscilloscope.

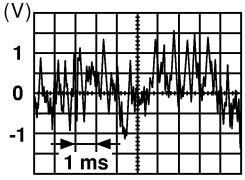
Connector	Terminals		Condition	Reference signal
	(+)	(-)		
M166	14	13	Receive audio signal	
	16	15		

SKIA0177E

Are audio signal voltage readings as specified?

YES >> Replace suspect tweeter. Refer to [AV-73, "Removal and Installation"](#).

NO >> Replace audio unit. Refer to [AV-70, "Removal and Installation"](#).

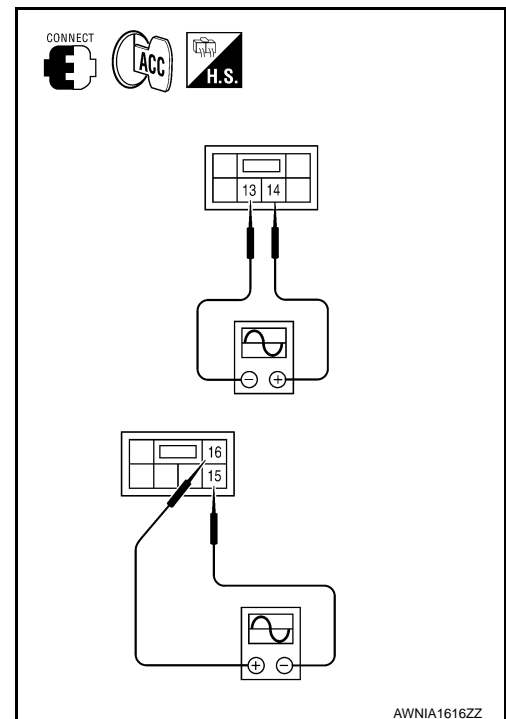

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

STEERING SWITCH

< COMPONENT DIAGNOSIS >

[MID AUDIO]

STEERING SWITCH

Description

INFOID:000000005387569

When one of the steering wheel audio control switches is pushed, the resistance in the steering wheel audio control switch circuit changes depending on which button is pushed.


Diagnosis Procedure

INFOID:000000005387570

Regarding Wiring Diagram information, refer to [AV-58, "Wiring Diagram"](#).

1. CHECK STEERING WHEEL AUDIO CONTROL SWITCH RESISTANCE

1. Turn ignition switch OFF.
2. Disconnect steering wheel audio control switch connector M102.
3. Check resistance between steering switch connector terminals.

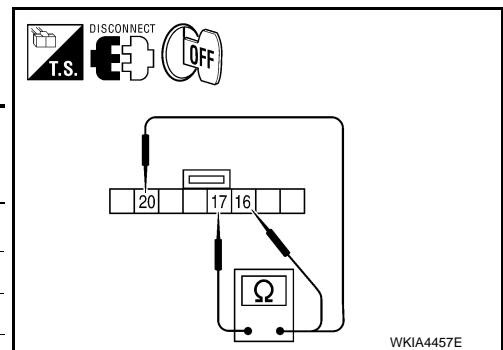

Terminal	Signal name	Condition	Resistance (Ω) (Approx.)	
16	17	Seek (down)	Depress ▽ switch.	165
		Volume (down)	Depress VOL down switch.	487
		Power	Depress PWR switch.	0
20	17	Seek (up)	Depress △ switch.	165
		Volume (up)	Depress VOL up switch.	487
		Mode	Depress MODE switch.	0


Do the steering wheel audio control switches check OK?

YES >> GO TO 2.

NO >> Replace steering wheel audio control switch. Refer to [AV-74, "Removal and Installation"](#).

2. CHECK HARNESS

1. Disconnect audio unit connector M167 and spiral cable connector M169.
2. Check continuity between audio unit harness connector M167 (A) and spiral cable harness connector M169 (B).

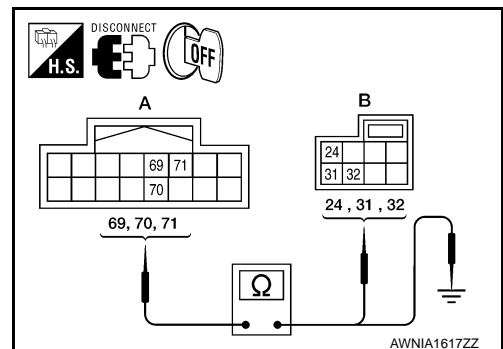

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M167	69	M169	24	Yes
	70		32	
	71		31	

3. Check continuity between audio unit connector M167 (A) and ground.

A		—	Continuity
Connector	Terminal		
M167	69	Ground	No
	70		
	71		

Are the continuity results as specified?

YES >> GO TO 3.

STEERING SWITCH

[MID AUDIO]


< COMPONENT DIAGNOSIS >

NO >> Repair harness.

3. SPIRAL CABLE CHECK

1. Disconnect spiral cable connector M102.
2. Check continuity between spiral cable harness connector M169 (A) and M102 (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M169	24	M102	20	Yes
	31		17	
	32		16	

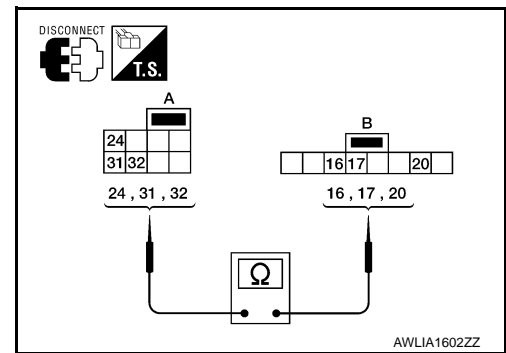

Does the spiral cable check OK?

YES >> Inspection End.

NO >> Replace spiral cable. Refer to [SR-6, "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M

AV

O
P

AUDIO UNIT

< ECU DIAGNOSIS >

[MID AUDIO]


ECU DIAGNOSIS

AUDIO UNIT

Reference Value

INFOID:000000005387571

TERMINAL LAYOUT

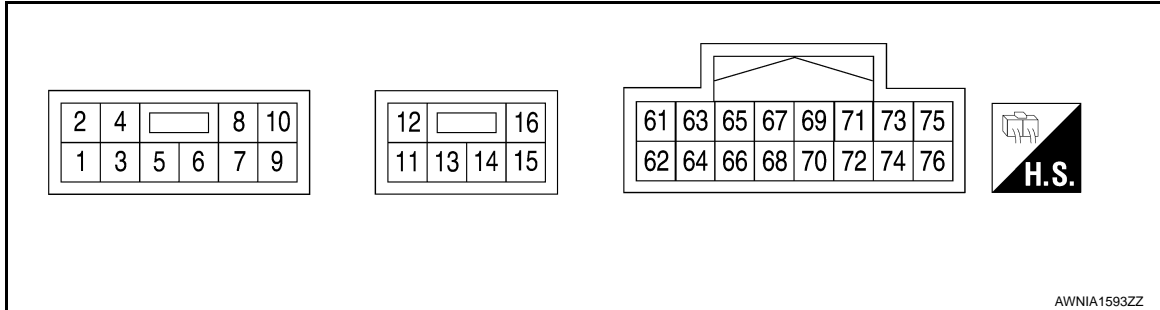






PHYSICAL VALUES

Terminal (Wire color)		Item	Signal input/ output	Condition		Reference value (Approx.)
+	-					
2 (L/W)	1 (L/R)	Audio sound signal front LH	Output	Ignition switch ON	Receive audio sig- nal	 SKIA0177E
4 (W/B)	3 (L/B)	Audio sound signal front RH	Output	Ignition switch ON	Receive audio sig- nal	 SKIA0177E
6 (Y)	Ground	Battery power	Input	-	-	Battery voltage
7 (BR)	Ground	Illumination control signal	Input	Ignition switch ON	Illumination control switch is operated by lighting switch in 1st position.	Changes between 0 and 12V
8 (R/L)	Ground	Illumination signal	Input	OFF	Lighting switch is in 1st position.	Battery voltage
					Lighting switch is OFF.	0V
10 (V)	Ground	ACC signal	Input	Ignition switch ON	-	Battery voltage

AUDIO UNIT

< ECU DIAGNOSIS >

[MID AUDIO]

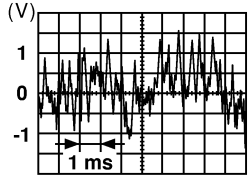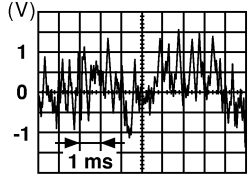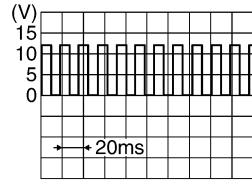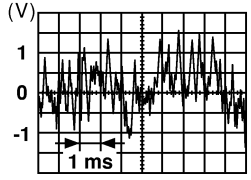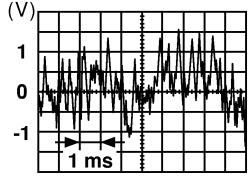Terminal (Wire color)		Item	Signal input/ output	Condition		Reference value (Approx.)
+	-					
14 (SB)	13 (B/Y)	Audio sound signal rear LH	Output	Ignition switch ON	Receive audio sig- nal	 SKIA0177E
16 (O/L)	15 (R/L)	Audio sound signal rear RH	Output	Ignition switch ON	Receive audio sig- nal	 SKIA0177E
67	-	Shield	-	Ignition switch ON	-	0V
69 (R)	Ground	Remote control A	Output	Ignition switch ON	Audio unit ON	5V
70 (G)	Ground	Remote control B	Output	Ignition switch ON	Audio unit ON	5V
71 (L)	Ground	Remote control ground	-	-	-	0V
73 (W/R)	Ground	Vehicle speed sig- nal (8-pulse)	Input	Ignition switch ON	When vehicle speed is approx. 40 km/h (25 mph)	 PKIA1935E
74 (W)	Ground	Auxiliary audio in- put RH (+)	Input	Ignition switch ON	Receive audio sig- nal (AUX input)	 SKIA0177E
75 (R)	Ground	Auxiliary audio in- put LH (+)	Input	Ignition switch ON	Receive audio sig- nal (AUX input)	 SKIA0177E
76 (B)	-	Shield	-	-	-	0V

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

AUDIO UNIT


< ECU DIAGNOSIS >

Wiring Diagram

[MID AUDIO]

INFOID:000000005387572

CC : CREW CAB
KC : KING CAB

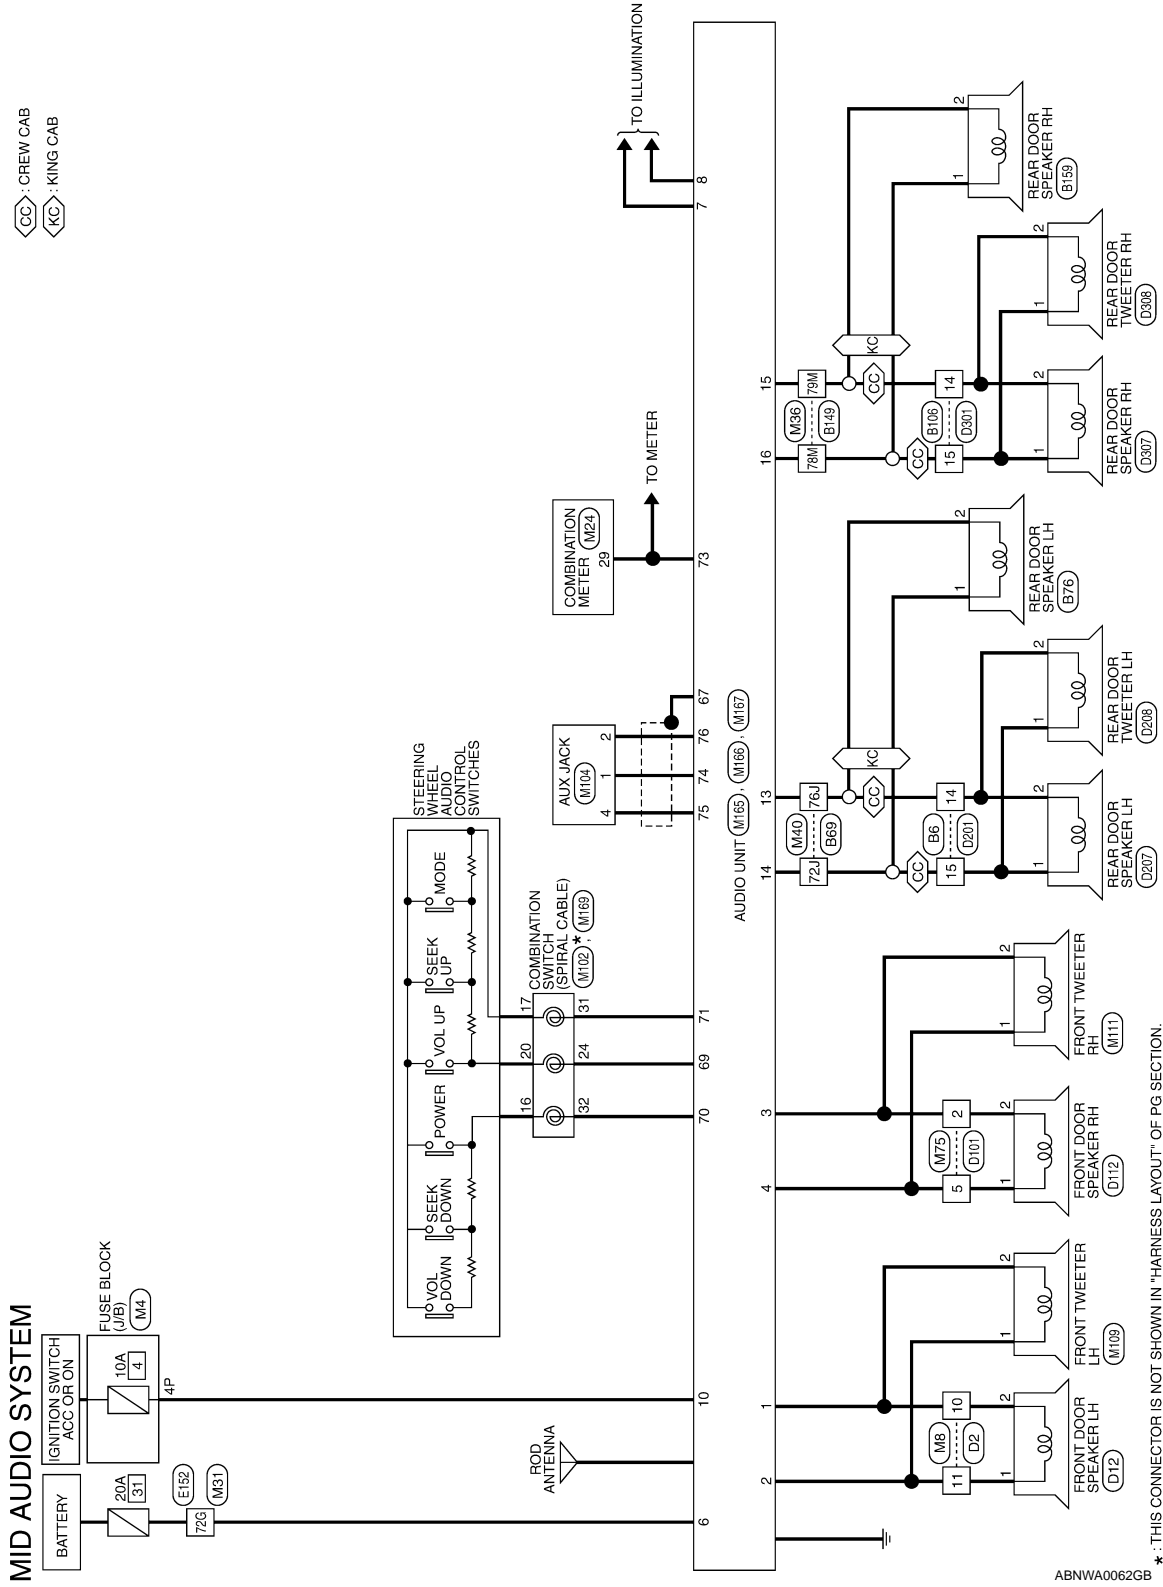

MID AUDIO SYSTEM CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	4P	Color of Wire	V	Signal Name	-
--------------	----	---------------	---	-------------	---

Connector No.	M8
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	10	Color of Wire	L/R	Signal Name	-
Terminal No.	11	Color of Wire	L/W	Signal Name	-

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE



Terminal No.	29	Color of Wire	W/R	Signal Name	SPEED OUT
--------------	----	---------------	-----	-------------	-----------

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

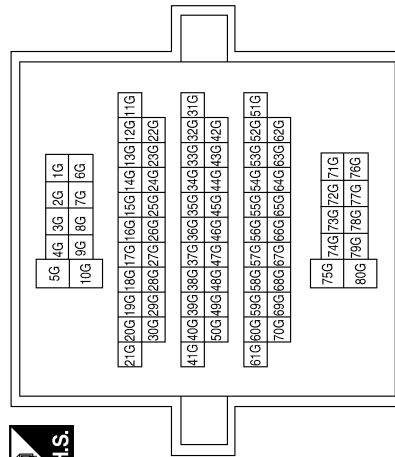

ABNIA0293GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P




AUDIO UNIT

< ECU DIAGNOSIS >



[MID AUDIO]

Connector No.	M75
Connector Name	WIRE TO WIRE
Connector Color	WHITE





Terminal No.	Color of Wire	Signal Name
2	L/B	-
5	W/B	-

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	WHITE

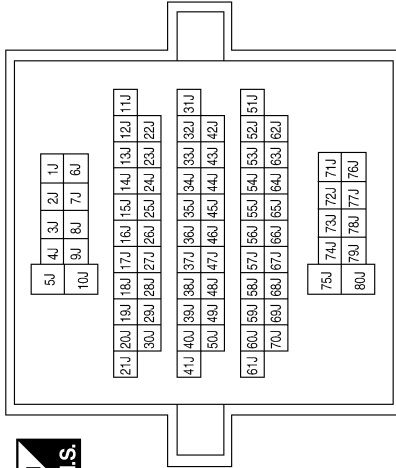

Terminal No.	Color of Wire	Signal Name
72J	SB	-
76J	B/Y	-

Connector No.	M36
Connector Name	WIRE TO WIRE
Connector Color	WHITE

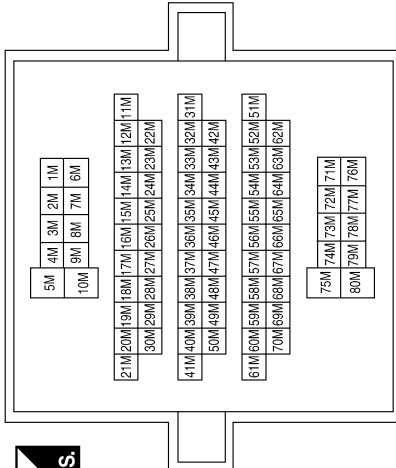


Terminal No.	Color of Wire	Signal Name
78M	O/L	-
79M	R/L	-

Connector No.	M109
Connector Name	FRONT TWEETER LH
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	LW	-
2	L/R	-

Connector No.	M104
Connector Name	AUX JACK
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W	AUX AUDIO RH +
2	B	AUX GND
4	R	AUX AUDIO LH +

Connector No.	M102
Connector Name	COMBINATION SWITCH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
16	R	-
17	BR	-
20	W	-


ABNIA1155GB

AUDIO UNIT

< ECU DIAGNOSIS >


[MID AUDIO]

Connector No.	M166
Connector Name	AUDIO UNIT (WITH MID AUDIO SYSTEM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
11	-	-
12	-	-
13	B/Y	RR SP LH-
14	SB	RR SP LH+
15	R/L	RR SP RH-
16	O/L	RR SP RH+

Connector No.	M165
Connector Name	AUDIO UNIT (WITH MID AUDIO SYSTEM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	L/R	FR SP LH-
2	L/W	FR SP LH+
3	L/B	FR SP RH-
4	W/B	FR SP RH+
5	-	-
6	Y	BACK UP
7	BR	ILL CONT
8	R/L	LIGHT SW
9	-	-
10	V	ACC

Connector No.	M111
Connector Name	FRONT TWEETER RH
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	W/B	-
2	L/R	-


Connector No.	M169
Connector Name	COMBINATION SWITCH (WITHOUT BLUETOOTH)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
24	R	STRG SW A (UP)
31	L	STRG SW C (GND)
32	G	STRG SW B (DOWN)

Terminal No.	Color of Wire	Signal Name
67	SHIELD	AUX JACK SHIELD
68	-	-
69	R	REMOTE CONT A
70	G	REMOTE CONT B
71	L	REMOTE CONT GND
72	-	-
73	W/R	SPEED SIG SSV
74	W	AUX R+
75	R	AUX L+
76	B	AUX GND

Connector No.	M167
Connector Name	AUDIO UNIT (WITH MID AUDIO SYSTEM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
61	-	-
62	-	-
63	-	-
64	-	-
65	-	-
66	-	-

ABNIA1156GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


AV

AUDIO UNIT

< ECU DIAGNOSIS >


[MID AUDIO]

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

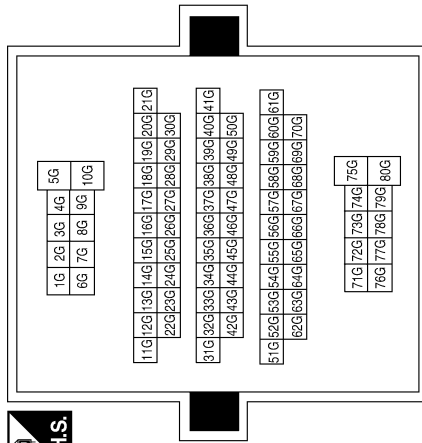


Terminal No.	Color of Wire	Signal Name
72G	Y	-

Connector No.	B6
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
14	B/Y	-
15	SB	-

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

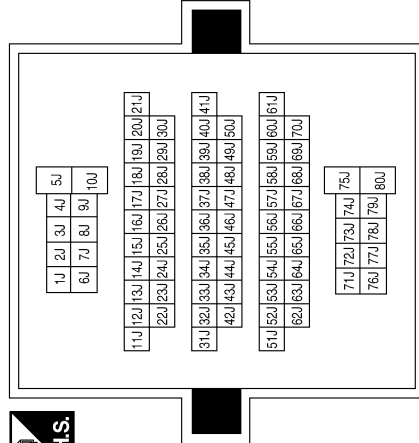

Terminal No.	Color of Wire	Signal Name
72J	SB	- (CREW CAB)
72J	L	- (KING CAB)
76J	Y	- (KING CAB)
76J	B/Y	- (CREW CAB)

Connector No.	B76
Connector Name	REAR DOOR SPEAKER LH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	L	-
2	Y	-

ABNIA1157GB

Terminal No.	Color of Wire	Signal Name
78M	O/L	-(CREW CAB)
78M	L	-(KING CAB)
79M	R/L	-

Connector No.	B149
Connector Name	WIRE TO WIRE
Connector Color	WHITE

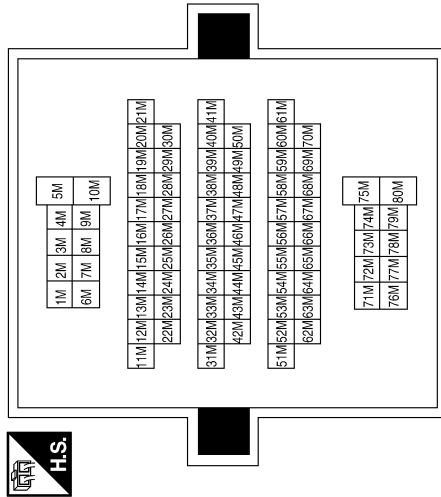

Connector No.	B106
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
14	R/L	-
15	O/L	-

Connector No.	D12
Connector Name	FRONT DOOR SPEAKER LH
Connector Color	WHITE



Connector No.	D2
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Connector No.	B159
Connector Name	REAR DOOR SPEAKER RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L/W	-
2	L/R	-

Terminal No.	Color of Wire	Signal Name
10	L/R	-
11	L/W	-

Terminal No.	Color of Wire	Signal Name
1	L	-
2	R/L	-

ABNIA1158GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


AV

AUDIO UNIT

< ECU DIAGNOSIS >

[MID AUDIO]

Connector No.	D201
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
14	B/Y	-
15	SB	-

Connector No.	D112
Connector Name	FRONT DOOR SPEAKER RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W/B	-
2	L/B	-

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	L/B	-
5	W/B	-

Connector No.	D301
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
14	R/L	-
15	O/L	-

Connector No.	D208
Connector Name	REAR DOOR TWEETER LH
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	SB	-
2	B/Y	-

Connector No.	D207
Connector Name	REAR DOOR SPEAKER LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	SB	-
2	B/Y	-

ABNIA1159GB

AUDIO UNIT

< ECU DIAGNOSIS >

[MID AUDIO]

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

Connector No.	D308
Connector Name	REAR DOOR TWEETER RH
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	O/L	-
2	R/L	-

Connector No.	D307
Connector Name	REAR DOOR SPEAKER RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	O/L	-
2	R/L	-

ABNIA1160GB

SYMPTOM DIAGNOSIS

AUDIO SYSTEM

Symptom Table

INFOID:000000005387573

AUDIO SYSTEM

Symptom	Possible cause	Reference page
Inoperative	<ul style="list-style-type: none"> • Audio unit power circuit • Audio unit 	<ul style="list-style-type: none"> • AV-45 • AV-70
Steering switch does not operate	<ul style="list-style-type: none"> • Steering switch • Audio unit 	<ul style="list-style-type: none"> • AV-54 • AV-70
All speakers do not sound	<ul style="list-style-type: none"> • Audio unit • Audio unit power circuit 	<ul style="list-style-type: none"> • AV-70 • AV-45
One or several speakers do not sound	<ul style="list-style-type: none"> • Front door speaker • Front tweeter • Rear door speaker • Rear door tweeter (crew cab) 	<ul style="list-style-type: none"> • AV-46 • AV-48 • AV-50 • AV-52

CD

Symptom	Possible cause	Reference page
CD cannot be inserted.	Audio unit	AV-70
CD cannot be ejected.		
The CD cannot be played.		
The sound skips, stops suddenly, or is distorted.		

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[MID AUDIO]

NORMAL OPERATING CONDITION

Description

INFOID:000000005387574

The majority of the audio concerns are the result of outside causes (bad CD, electromagnetic interference, etc.).

NOISE

The following noise results from variations in field strength, such as fading noise and multi-path noise, or external noise from trains and other sources. It is not a malfunction.

- Fading noise: This noise occurs because of variations in the field strength in a narrow range due to mountains or buildings blocking the signal.
- Multi-path noise: This noise results from the waves sent directly from the broadcast station arriving at the antenna at a different time from the waves which reflect off mountains or buildings.

The vehicle itself can be a source of noise if noise prevention parts or electrical equipment is malfunctioning. Check if noise is caused and/or changed by engine speed, ignition switch turned to each position, and operation of each piece of electrical equipment, and determine the cause.

NOTE:

The source of the noise can be found easily by listening to the noise while removing the fuses of electrical components, one by one.

Type of Noise and Possible Cause

Occurrence condition		Possible cause
Occurs only when engine is ON.	A continuous growling noise occurs. The speed of the noise varies with changes in the engine speed.	• Ignition components
The occurrence of the noise is linked with the operation of the fuel pump.		• Fuel pump condenser
Noise only occurs when various electrical components are operating.	A cracking or snapping sound occurs with the operation of various switches.	• Relay malfunction, Audio unit malfunction
	The noise occurs when various motors are operating.	• Motor case ground • Motor
The noise occurs constantly, not just under certain conditions.		• Rear defogger coil malfunction (crew cab) • Open circuit in printed heater • Poor ground of antenna feeder line
A cracking or snapping sound occurs while the vehicle is being driven, especially when it is vibrating excessively.		• Ground wire of body parts • Ground due to improper part installation • Wiring connections or a short circuit

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005387575

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:


- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

PREPARATION

PREPARATION

Commercial Service Tools

INFOID:000000005387576

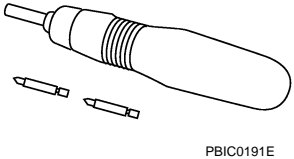Tool name	Description
<p>Power tool</p>  <p>PBIC0191E</p>	<p>Loosening bolts and nuts</p>

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

AV

ON-VEHICLE REPAIR

AUDIO UNIT


Removal and Installation

INFOID:000000005387577

AUDIO UNIT

Removal

1. Disconnect the battery negative terminal.
2. Remove the cluster lid C. Refer to [JP-14. "Removal and Installation"](#).
3. Remove the audio unit screws (A), using power tool.
4. Pull out the audio unit (1) and disconnect the audio unit connectors.

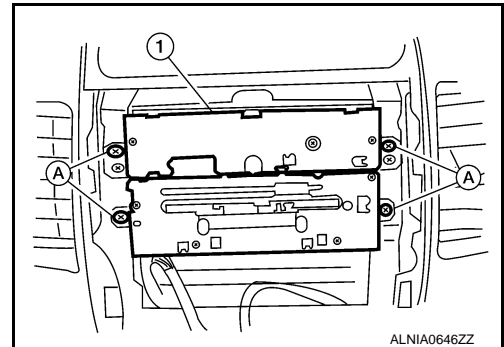


Installation

Installation is in the reverse order of removal.

AV SWITCH

Removal

1. Disconnect battery negative terminal.
2. Remove the cluster lid C. Refer to [JP-14. "Removal and Installation"](#).
3. Remove the AV switch screws.
4. Carefully remove the AV switch.

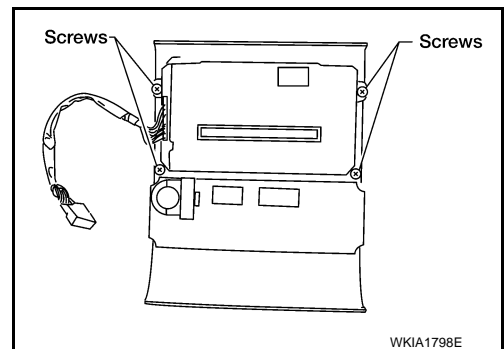

Installation

Installation is in the reverse order of removal.

FRONT TWEETER

< ON-VEHICLE REPAIR >

[MID AUDIO]

FRONT TWEETER


Removal and Installation

INFOID:000000005387578

FRONT TWEETER

Removal

1. Remove the front tweeter grille. Refer to [IP-11. "Removal and Installation"](#).
2. Remove the front tweeter clips (C103) (A).
3. Disconnect the front tweeter connector and remove the front tweeter (1).

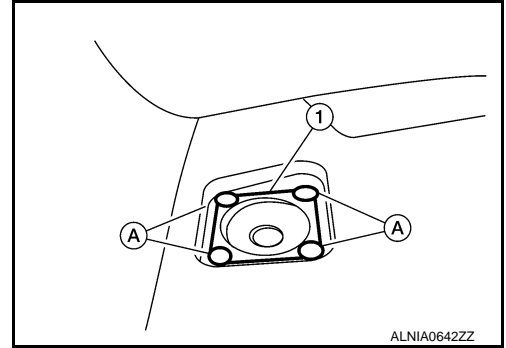

Installation

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

FRONT DOOR SPEAKER

< ON-VEHICLE REPAIR >

[MID AUDIO]

FRONT DOOR SPEAKER


Removal and Installation

INFOID:000000005387579

FRONT DOOR SPEAKER

Removal

1. Remove the front door finisher. Refer to [INT-10, "Removal and Installation"](#).
2. Remove the four front door speaker screws.
3. Disconnect the front door speaker connector and remove the front door speaker.

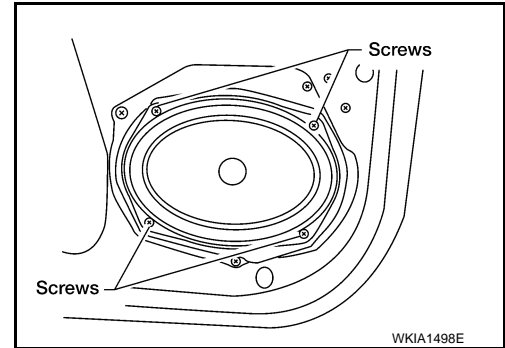

Installation

Installation is in the reverse order of removal.

REAR DOOR SPEAKER

< ON-VEHICLE REPAIR >

[MID AUDIO]

REAR DOOR SPEAKER


Removal and Installation

INFOID:000000005387580

REAR DOOR SPEAKER

Removal

1. Remove the rear door finisher. Refer to [INT-10, "Removal and Installation"](#) (Crew Cab) or [INT-10, "Removal and Installation"](#) (King Cab).
2. Remove the three rear door speaker screws and remove the rear door speaker.

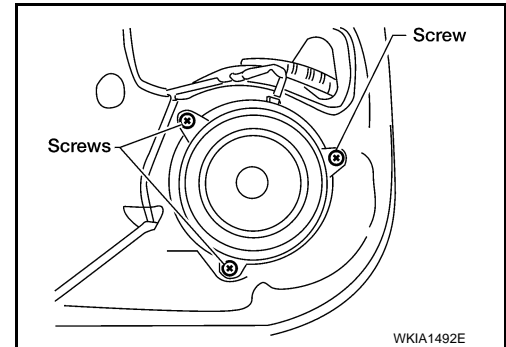


Installation

Installation is in the reverse order of removal.

REAR DOOR TWEETER

Removal

1. Remove the rear door finisher. Refer to [INT-10, "Removal and Installation"](#).
2. Remove the rear door tweeter screws and remove the rear door tweeter.
3. Disconnect the rear door tweeter connector.

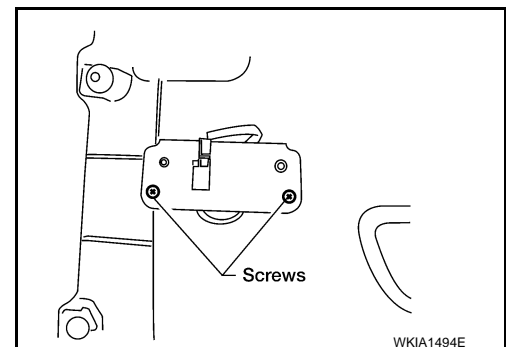

Installation

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

STEERING SWITCH


Removal and Installation

INFOID:000000005387581

STEERING WHEEL AUDIO CONTROL SWITCHES

Removal

1. Remove the steering wheel. Refer to [ST-11, "Removal and Installation"](#).
2. Remove the steering wheel rear cover screws and remove the steering wheel rear cover.
3. Remove the steering wheel switch assembly screws and remove the steering wheel switches.

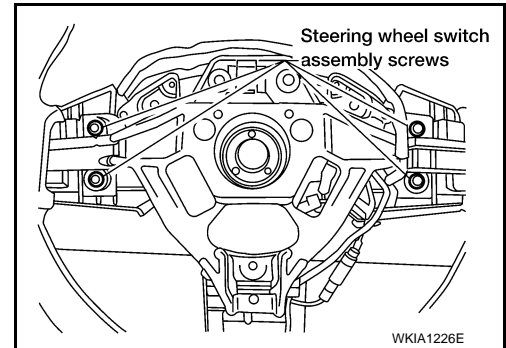

Installation

Installation is in the reverse order of removal.

AUDIO ANTENNA


< ON-VEHICLE REPAIR >

[MID AUDIO]

AUDIO ANTENNA

Location of Antenna

INFOID:000000005387582

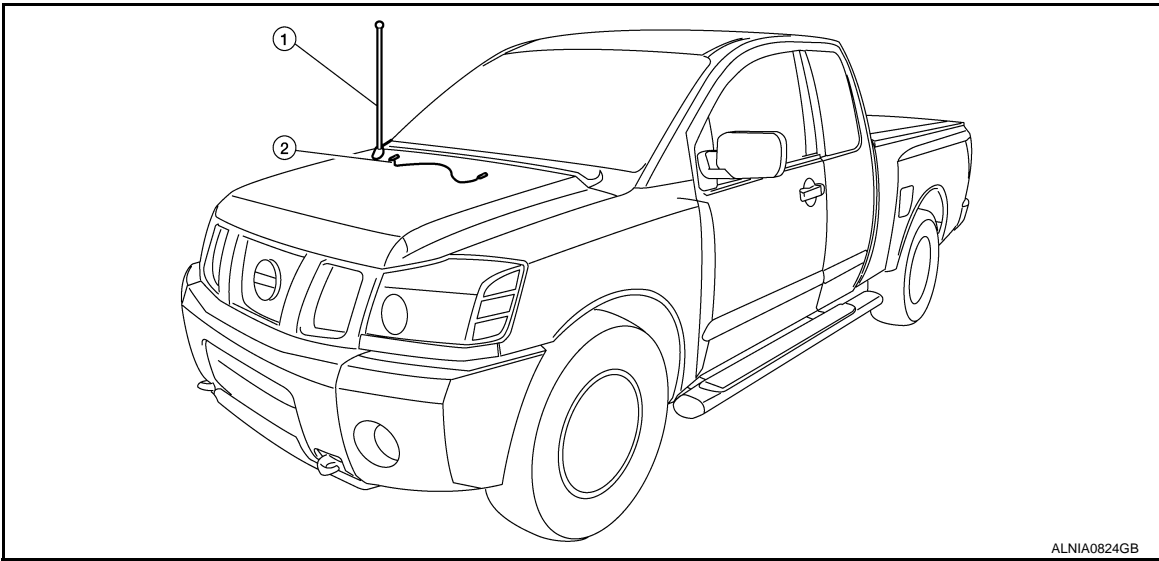

1. Antenna

2. Main feeder cable

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000005387583

OVERALL SEQUENCE

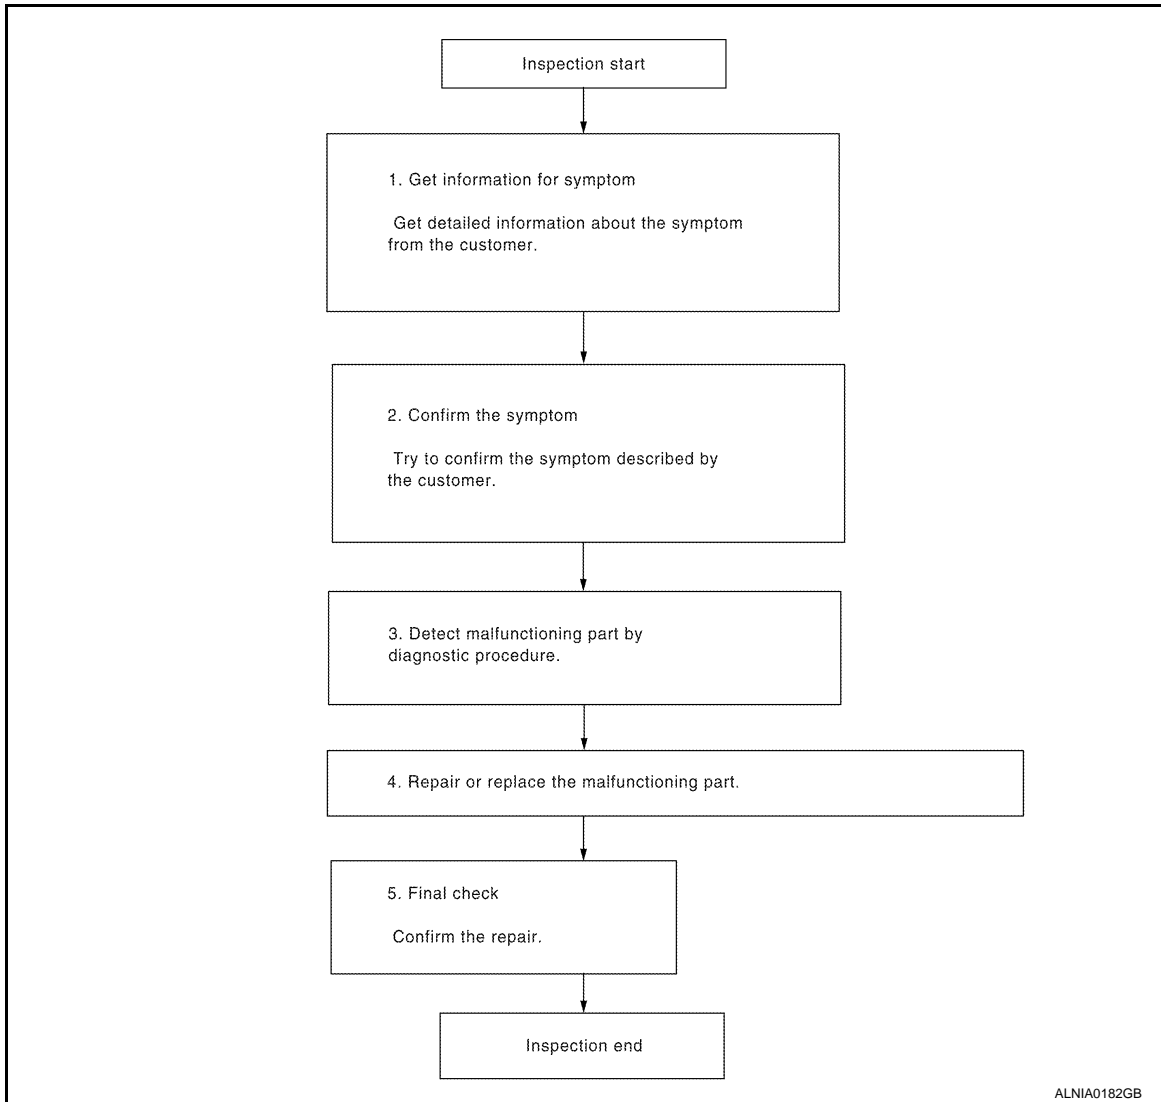

DETAILED FLOW

1.GET INFORMATION FOR SYMPTOM

Get detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred).

>> GO TO 2.

2.CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer. Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 3.

3.DETECT MALFUNCTIONING PART BY DIAGNOSTIC PROCEDURE

Inspect according to Diagnostic Procedure of the system.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[PREMIUM WITHOUT NAVIGATION]

Is malfunctioning part detected?

YES >> GO TO 4.

NO >> GO TO 2.

4.REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnostic Procedure.

>> GO TO 5.

5.FINAL CHECK

Refer to confirmed symptom in step 2, and make sure that the symptom is not detected.

Was the repair confirmed?

YES >> Inspection End.

NO >> GO TO 2.

A

B

C

D

E

F

G

H

I

J

K

L

M

AV

O


P

FUNCTION DIAGNOSIS

AUDIO SYSTEM

System Diagram

INFOID:000000005387584

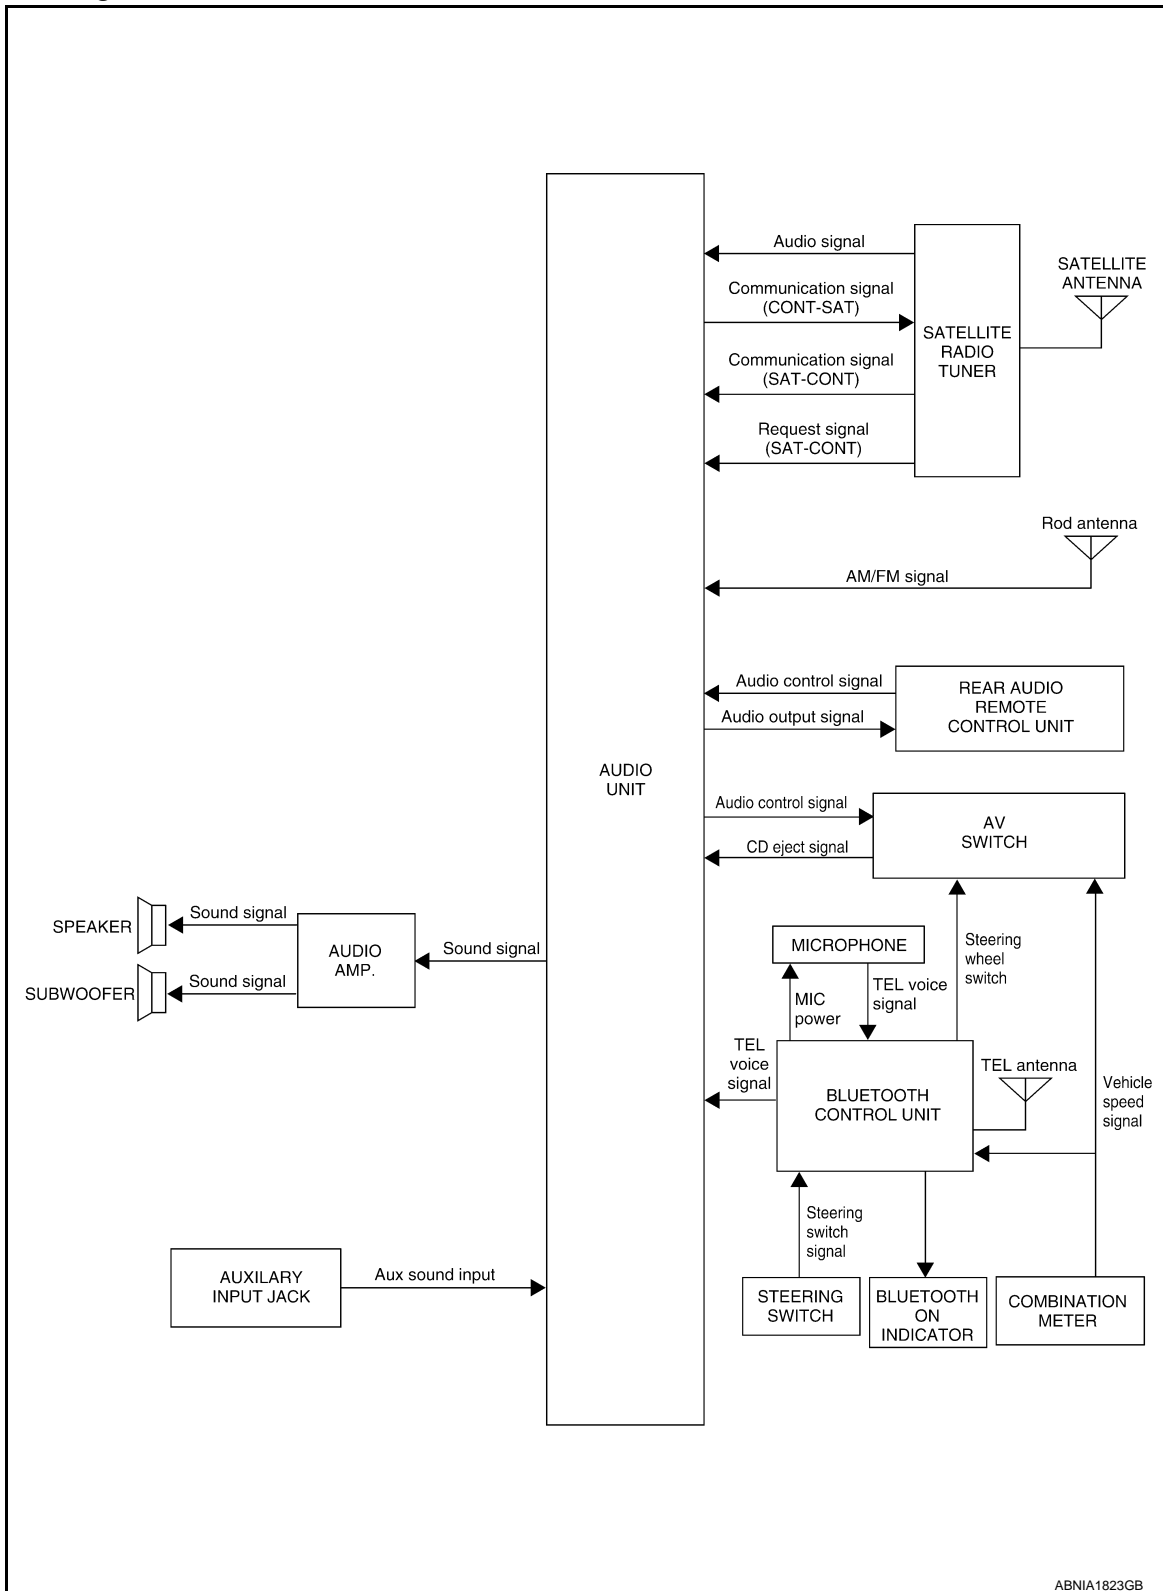

ABNIA1823GB

System Description

INFOID:000000005387585

AUDIO SYSTEM

AUDIO SYSTEM

< FUNCTION DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

The audio system consists of the following components

- Audio unit
- Audio amp.
- Rod antenna
- Steering wheel audio control switches
- AV switch
- Rear audio remote control unit
- Front door speakers
- Front tweeters
- Center speaker
- Rear door speakers
- Rear door tweeters (crew cab)
- Subwoofer

When the audio system is on, radio signals are received by the rod antenna. The audio unit then sends audio signals to the audio amp. The audio amp. amplifies the audio signals before sending them to the front door speakers, front tweeters, center speaker, rear door speakers, rear door tweeters (crew cab) and the subwoofer.

Refer to Owner's Manual for audio system operating instructions.

SATELLITE RADIO SYSTEM

The satellite radio system consists of the following components

- Satellite antenna
- Satellite radio tuner

When the satellite radio system is on, radio signals are supplied to the satellite radio tuner from the satellite antenna. The satellite radio tuner then sends audio signals to the audio unit.

Refer to Owner's Manual for satellite radio system operating instructions.

SPEED SENSITIVE VOLUME SYSTEM

Volume level of this system goes up and down automatically in proportion to the vehicle speed. The control level can be selected by the customer. Refer to Owner's Manual for operating instructions.

A

B

C

D

E

F

G

H

I

J

K

L

M

AV

O

P


AUDIO SYSTEM

< FUNCTION DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

Component Parts Location

INFOID:000000005387586

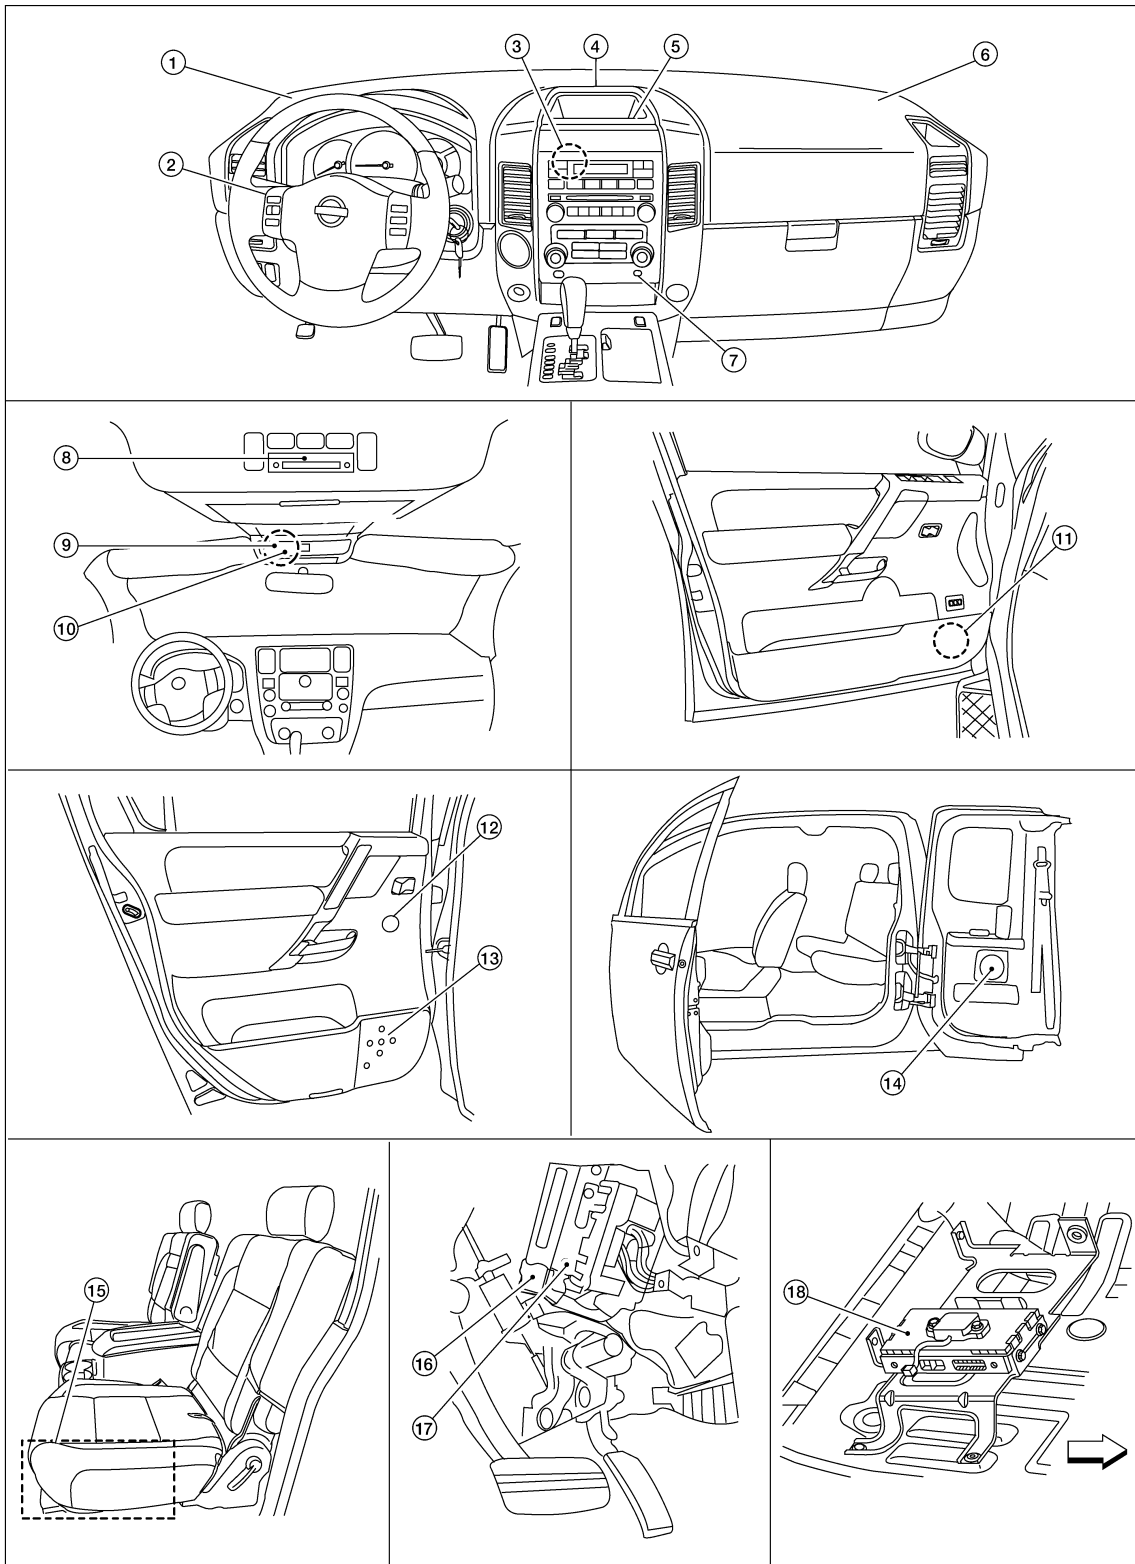

AWNIA1561GB

←:FRONT

- | | | |
|--------------------------|--|--|
| 1. Front tweeter LH M109 | 2. Steering wheel audio control switches | 3. Audio unit M170, M171, M172, M173 (crew cab), M174, M175 (king cab) |
| 4. Center speaker M110 | 5. AV switch M98 | 6. Front tweeter RH M111 |
| 7. Aux jack M104 | 8. Rear audio remote control unit R204 | 9. Microphone R109 |

AUDIO SYSTEM

< FUNCTION DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

- | | | |
|---|---|--|
| 10. Bluetooth ON indicator R105 | 11. Front door speaker
LH D12
RH D112 | 12. Rear door tweeter (crew cab)
LH D208
RH D308 |
| 13. Rear door speaker (crew cab)
LH D207
RH D307 | 14. Rear door speaker (king cab)
LH B76
RH B159 | 15. Subwoofer B72 (under driver's seat) |
| 16. Audio amp M112, M113 (view behind instrument panel above accelerator pedal) | 17. Satellite radio tuner M41, M129 | 18. Bluetooth control unit B142, B143 (view with passenger front seat removed) |

A
B
C

Component Description

INFOID:000000005387587

Part name	Description
Audio unit	Controls audio system and satellite radio system functions
Audio amp.	Receives power (amp ON) and audio signals from Audio unit and outputs audio signals to each speaker.
Steering wheel audio control switches	<ul style="list-style-type: none"> • Audio operation can be operated • Steering switch signal is output to audio unit
Front door speakers	<ul style="list-style-type: none"> • Outputs audio signal from audio amp. • Outputs high, mid and low range sounds
Front tweeters	<ul style="list-style-type: none"> • Outputs audio signal from audio amp. • Outputs high range sounds
Center speaker	<ul style="list-style-type: none"> • Outputs audio signal from audio amp. • Outputs high range sounds
Rear door speakers	<ul style="list-style-type: none"> • Outputs audio signal from audio amp. • Outputs high, mid and low range sounds
Rear door tweeters (crew cab)	<ul style="list-style-type: none"> • Outputs audio signal from audio amp. • Outputs high range sounds
Subwoofer	<ul style="list-style-type: none"> • Outputs audio signal from audio amp. • Outputs low range sounds
Satellite radio tuner	<ul style="list-style-type: none"> • Receives radio signals from satellite antenna • Sends audio signals to Audio unit
Satellite antenna	Audio signal (satellite radio) is received and output to Audio unit.

D
E
F
G
H
I
J
K


L
M

AV

O
P

HANDS-FREE PHONE SYSTEM

System Diagram

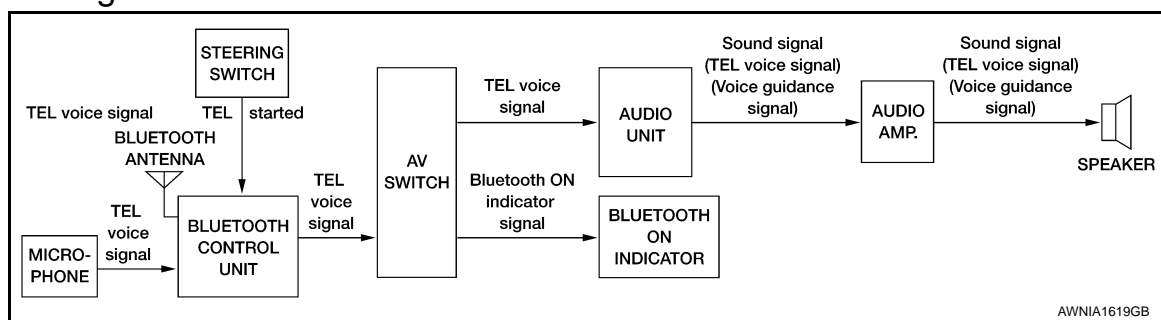

System Description

INFOID:000000005387593

Refer to the Owner's Manual for Bluetooth telephone system operating instructions.

NOTE:

Cellular telephones must have their wireless connection set up (paired) before using the Bluetooth telephone system.

Bluetooth telephone system allows users who have a Bluetooth equipped cellular telephone to make a wireless connection between their cellular telephone and the Bluetooth control unit. Hands-free cellular telephone calls can be sent and received. Personal memos can be created using the Nissan Voice Recognition system. Some Bluetooth cellular telephones may not be recognized by the Bluetooth control unit. When a cellular telephone or the Bluetooth control unit is replaced, the telephone must be paired with the Bluetooth control unit. Different cellular telephones may have different pairing procedures. Refer to the cellular telephone operating manual.

BLUETOOTH CONTROL UNIT

When the ignition switch is turned to ACC or ON, the Bluetooth control unit will power up. During power up, the Bluetooth control unit is initialized and performs various self checks. Initialization may take up to 10 seconds. If a phone is present in the vehicle and paired with the Bluetooth control unit, Nissan Voice Recognition will then become active. Bluetooth telephone functions can be turned off using the Nissan Voice Recognition system.

STEERING WHEEL AUDIO CONTROL SWITCHES

When buttons on the steering wheel audio control switch are pushed, the resistance in steering wheel audio control switch circuit changes depending on which button is pushed. The Bluetooth control unit uses this signal to perform various functions while navigating through the voice recognition system.

The following functions can be performed using the steering wheel audio control switch:

- Initiate Self Diagnosis of the Bluetooth telephone system
- Start a voice recognition session
- Answer and end telephone calls
- Adjust the volume of calls
- Record memos

MICROPHONE

The microphone is located in the roof console assembly. The microphone sends a signal to the Bluetooth control unit. The microphone can be actively tested during self-diagnosis.

AUDIO UNIT

The audio unit receives signals from the Bluetooth control unit and sends audio signals to the audio amp. then on to the speakers.


HANDS-FREE PHONE SYSTEM

[PREMIUM WITHOUT NAVIGATION]

< FUNCTION DIAGNOSIS >

Component Parts Location

INFOID:000000005387594

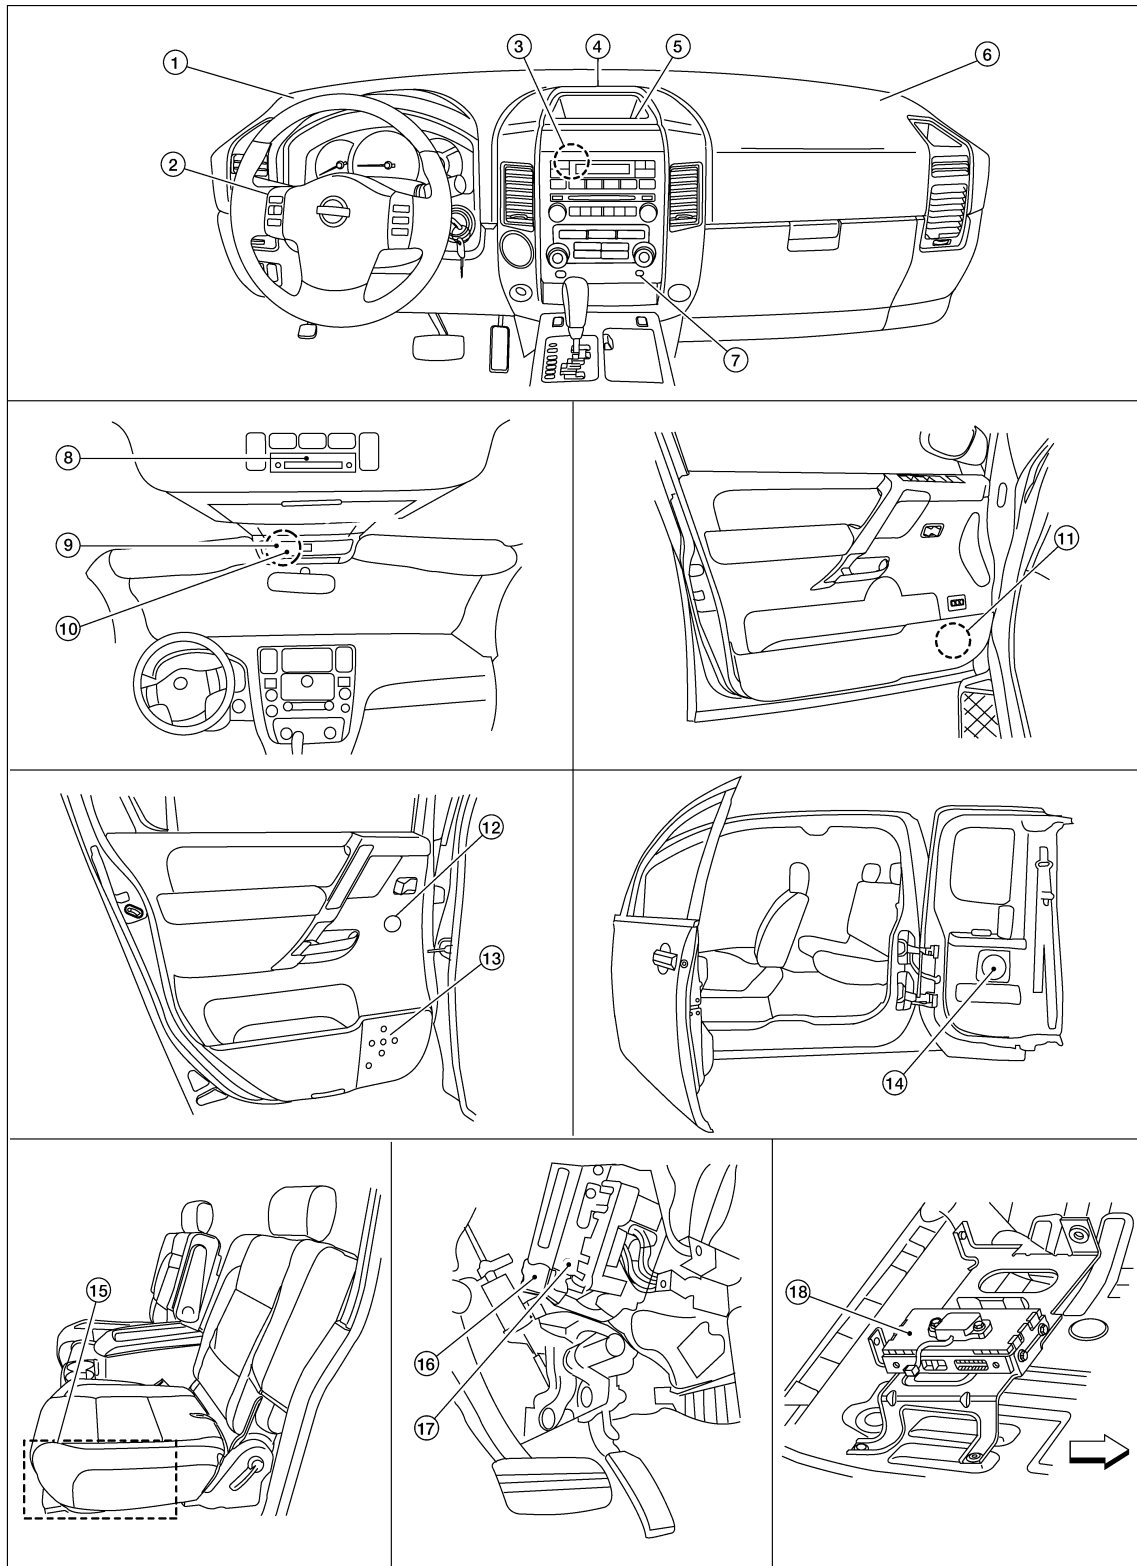

←:FRONT

- | | | |
|--------------------------|--|--|
| 1. Front tweeter LH M109 | 2. Steering wheel audio control switches | 3. Audio unit M170, M171, M172, M173 (crew cab), M174, M175 (king cab) |
| 4. Center speaker M110 | 5. AV switch M98 | 6. Front tweeter RH M111 |
| 7. Aux jack M104 | 8. Rear audio remote control unit R204 | 9. Microphone R109 |

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

HANDS-FREE PHONE SYSTEM

< FUNCTION DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

- | | | |
|---|---|--|
| 10. Bluetooth ON indicator R105 | 11. Front door speaker
LH D12
RH D112 | 12. Rear door tweeter (crew cab)
LH D208
RH D308 |
| 13. Rear door speaker (crew cab)
LH D207
RH D307 | 14. Rear door speaker (king cab)
LH B76
RH B159 | 15. Subwoofer B72 (under driver's seat) |
| 16. Audio amp M112, M113 (view behind instrument panel above accelerator pedal) | 17. Satellite radio tuner M41, M129 | 18. Bluetooth control unit B142, B143 (view with passenger front seat removed) |

Component Description

INFOID:000000005387595

Part name	Description
Audio unit	<ul style="list-style-type: none">• Receives telephone voice signal from Bluetooth control unit• Sends telephone voice and voice guidance signals to the speakers
Audio amp.	<ul style="list-style-type: none">• Receives audio signals from the audio unit• Outputs amplified audio signals to the speakers.
Front door speaker	Receives telephone voice and voice guidance signals from the audio amp.
Front tweeter	
Center speaker	
Steering wheel audio control switches	<ul style="list-style-type: none">• Start a voice recognition session• Answer and end telephone calls• Adjust the volume level
Microphone	Sends voice signals to Bluetooth control unit
Bluetooth control unit	Controls hands-free phone functions
Bluetooth antenna	Sends telephone voice signal to Bluetooth control unit
Bluetooth ON indicator	Controlled by the Bluetooth control unit

DIAGNOSIS SYSTEM (AUDIO UNIT)

< FUNCTION DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

DIAGNOSIS SYSTEM (AUDIO UNIT)


AV SWITCH

AV SWITCH : Component Function Check

INFOID:000000005387596

STARTING THE SELF-DIAGNOSIS MODE

1. Turn ignition switch from OFF to ACC.
2. Press and hold the "SCAN" switch and turn the volume control dial clockwise or counterclockwise for 30 clicks or more.

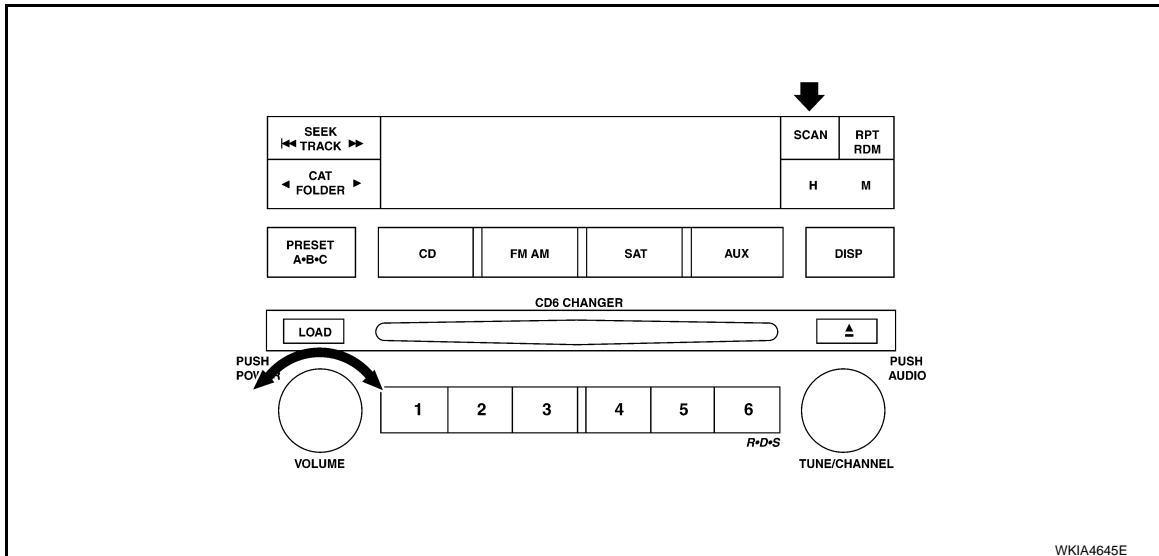

Then the self-diagnosis operates. A single beep indicates self-diagnosis mode is active.

3. Initially, all display segments will be illuminated.
4. Press each switch. When each switch is pressed, its name and communication code will be displayed

NOTE:

CD player LOAD and EJECT buttons are not included in this test and will not change the display when pressed.

DIAGNOSIS FUNCTION

- It can check for continuity of the switches by sounding the beep when each AV switch and steering switch is pressed.
- It can check for continuity of harness between AV switch and steering switch.

EXITING THE SELF-DIAGNOSIS MODE

Turn ignition switch OFF. Then the self-diagnosis ends.

A
B
C
D
E
F
G
H
I
J
K
L
M

AV

DIAGNOSIS SYSTEM (BLUETOOTH CONTROL UNIT)

< FUNCTION DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

DIAGNOSIS SYSTEM (BLUETOOTH CONTROL UNIT)

Diagnosis Description


INFOID:000000005387597


The Bluetooth control unit has two diagnostic checks. The first diagnostic check is performed automatically every ignition cycle during control unit initialization. The second diagnostic check is performed by the technician using the steering wheel audio control switches prior to trouble diagnosis.



BLUETOOTH CONTROL UNIT INITIALIZATION CHECKS


- Internal control unit failure
- Bluetooth antenna connection open or shorted
- Steering wheel audio control switches [SEND(☎)/END(MODE)] stuck closed
- Vehicle speed pulse count
- Microphone connection test (with playback to operator)
- Bluetooth inquiry check

OPERATION PROCEDURE

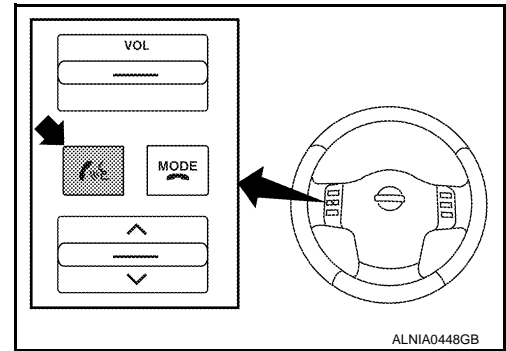1. Turn ignition switch to ACC or ON.
2. Wait for the Bluetooth system to complete initialization. This may take up to 10 seconds.
3. Press and hold the steering wheel audio control switch  button for at least 5 seconds. The Bluetooth system will begin to play a verbal prompt.



4. While the prompt is playing, press and hold the steering wheel audio control switch  button until you hear the “Diagnostics mode” prompt. The Bluetooth system will sound a 5 second beep.
5. While the beep is sounding, press and hold the steering wheel audio control switch  button again until you hear prompts.
6. The Bluetooth system has now entered into the diagnostic mode. Results of the diagnostic checks will be verbalized to the technician. Refer to [AV-86. "Work Flow"](#).
7. After the failure records are reported, an interactive microphone test will be performed. Follow the voice prompt. If the microphone test fails refer to [AV-86. "Work Flow"](#).
8. Self-diagnosis mode is complete when the voice prompt says “All diagnostic functions completed”.

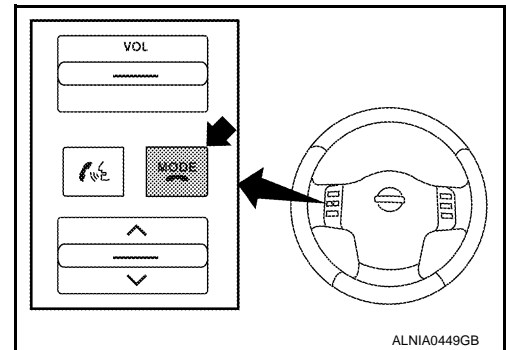

Work Flow

INFOID:000000005387598

Failure Message	Action
“Internal failure”	Replace Bluetooth control unit. Refer to AV-169. "Removal and Installation" .
“Bluetooth antenna open”	1. Inspect harness connection.
“Bluetooth antenna shorted”	2. Replace Bluetooth antenna. Refer to AV-168. "Removal and Installation" .
“Phone/Send for Hands Free System is stuck”	Check steering wheel audio control switches. Refer to AV-111. "Description" .
“Phone/End for the Hands Free System is stuck”	
“Microphone test” (failed interactive test)	1. Inspect harness between Bluetooth control unit and microphone. 2. Replace microphone. Refer to AV-167. "Removal and Installation" .

COMPONENT DIAGNOSIS

POWER SUPPLY AND GROUND CIRCUIT AUDIO UNIT

AUDIO UNIT : Diagnosis Procedure

INFOID:000000005387599

Regarding Wiring Diagram information, refer to [AV-124, "Wiring Diagram"](#).

1.CHECK FUSES

Check that the following fuses of the audio unit are not are not blown.

Unit	Terminals	Signal name	Fuse No.
Audio unit	6	Battery power	31
	10	Ignition switch ACC or ON	4

Are the fuses OK?


YES >> GO TO 2.

NO >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse.

2.POWER SUPPLY CIRCUIT CHECK

1. Disconnect audio unit connector M171.
2. Check voltage between the audio unit connector M171 and ground.

(+) Connector		(-)	OFF	ACC	ON
Terminal					
M171	6	Ground	0V	Battery voltage	Battery voltage
	10	Ground	Battery voltage	Battery voltage	Battery voltage

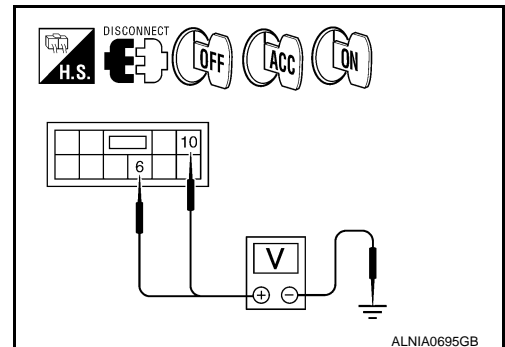

Are the voltage results as specified?

YES >> GO TO 3.

NO >> • Check connector housing for disconnected or loose terminals.
• Repair harness or connector.

3.GROUND CIRCUIT CHECK

Inspect audio unit case ground.

Does case ground pass inspection?

YES >> Inspection End.

NO >> Repair audio unit case ground.

AV SWITCH

AV SWITCH : Diagnosis Procedure

INFOID:000000005387600

Regarding Wiring Diagram information, refer to [AV-124, "Wiring Diagram"](#).

1.CHECK FUSE

Check that the fuses for the AV switch are not blown.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

Unit	Terminal	Signal name	Fuse No.
AV switch	1	Battery	31
	2	Ignition switch ACC or ON	4

Are the fuses OK?


YES >> GO TO 2.

NO >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse.

2. POWER SUPPLY CIRCUIT CHECK

1. Disconnect AV switch connector M98.
2. Check voltage between the AV switch connector M98 and ground.

(+)		(-)	OFF	ACC	ON
Connector	Terminal				
M98	1	Ground	Battery voltage	Battery voltage	Battery voltage
	2	Ground	0V	Battery voltage	Battery voltage

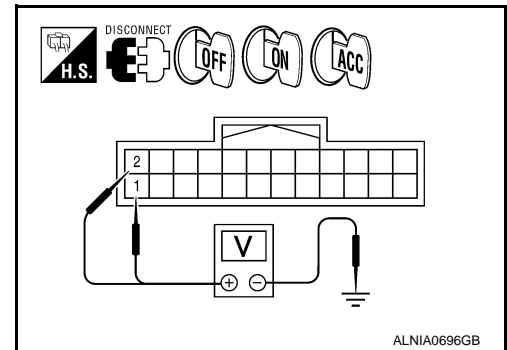

Are the voltage results as specified?


YES >> GO TO 3.

NO >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.

3. GROUND CIRCUIT CHECK

1. Turn ignition switch OFF.
2. Check continuity between AV switch harness connector M98 and ground.

Connector	Terminal	—	Continuity
M98	5	Ground	Yes

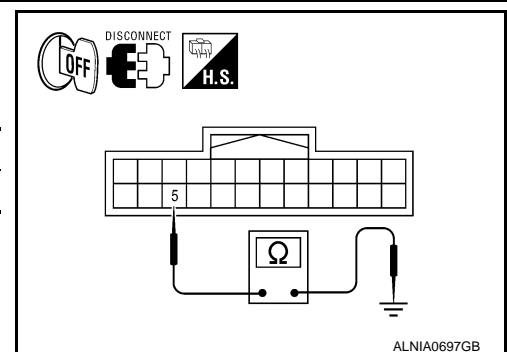

Are the continuity results as specified?

YES >> Inspection End.

NO >> Repair harness or ground.

SATELLITE RADIO TUNER

SATELLITE RADIO TUNER : Diagnosis Procedure

INFOID:000000005387601

Regarding Wiring Diagram information, refer to [AV-124. "Wiring Diagram"](#).

1. CHECK FUSES

Check that the following fuses of the satellite radio tuner (factory installed) are not blown.

Unit	Terminals	Signal name	Fuse No.
Satellite radio tuner (factory installed)	32	Battery power	31
	36	Ignition switch ACC or ON	4

Are the fuses OK?

YES >> GO TO 2.

NO >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse.

POWER SUPPLY AND GROUND CIRCUIT


< COMPONENT DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

2. POWER SUPPLY CIRCUIT CHECK

1. Turn ignition switch OFF.
2. Disconnect satellite radio tuner (factory installed) connector M41.
3. Check voltage between the satellite radio tuner (factory installed) and ground.

(+)		(-)	OFF	ACC	ON
Connector	Terminal				
M41	32	Ground	Battery voltage	Battery voltage	Battery voltage
	36		0V	Battery voltage	Battery voltage

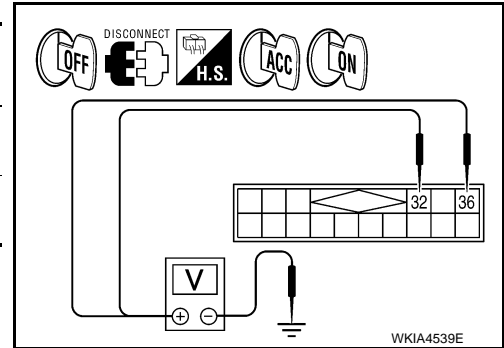

Are the voltage readings as specified?

- YES >> GO TO 3.
 NO >> • Check connector housings for disconnected or loose terminals.
 • Repair harness or connector.

3. GROUND CIRCUIT CHECK

Inspect satellite radio tuner (factory installed) case ground.

Does case ground pass inspection?

- YES >> Inspection End.
 NO >> Repair satellite radio tuner (factory installed) case ground.

AUDIO AMP

AUDIO AMP : Diagnosis Procedure

INFOID:000000005387604

Regarding Wiring Diagram information, refer to [AV-124. "Wiring Diagram"](#).

1. CHECK FUSE

Check that the audio amp. fuses are not blown.

Unit	Terminal	Signal name	Fuse No.
Audio amp.	1	Battery power	31
	17		17


Are the fuses OK?

- YES >> GO TO 2.
 NO >> Be sure to eliminate cause of malfunction before installing new fuse.

2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect audio amp. connector.
3. Check voltage between audio amp. harness connector M112 and ground.

(+)		(-)	Voltage (approx.)
Connector	Terminal		
M112	1	Ground	Battery voltage
	17		

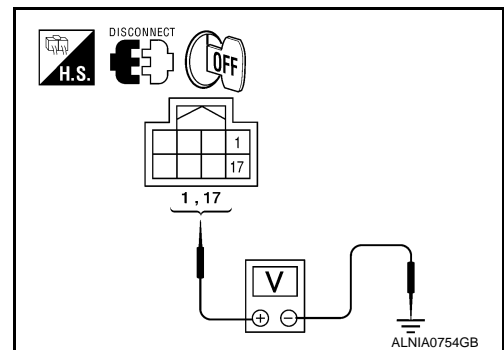

Is battery voltage present?

- YES >> GO TO 3.
 NO >> Check harness between audio amp. and fuse.

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

3. CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect audio amp. connector.
3. Check continuity between audio amp. harness connector M112 and ground.

Connector	Terminal	—	Continuity
M112	4	Ground	Yes
	20		

Does continuity exist?

- YES >> Inspection End.
 NO >> Repair harness or connector.

BLUETOOTH CONTROL UNIT

BLUETOOTH CONTROL UNIT : Diagnosis Procedure

INFOID:000000005387605

Regarding Wiring Diagram information, refer to [AV-124. "Wiring Diagram"](#).

1. CHECK FUSE

Check that the following fuses for the Bluetooth control unit are not blown.

Unit	Terminal	Signal name	Fuse No.
Bluetooth control unit	1	Battery power	31
	2	Ignition switch ACC or ON	4
	3	Ignition switch ON or START	12

Is inspection result OK?

- YES >> GO TO 2.
 NO >> Be sure to eliminate cause of malfunction before installing new fuse.

2. CHECK POWER SUPPLY CIRCUIT



Check voltage between Bluetooth control unit harness connector B142 and ground.

Connector	Terminal	Ignition switch position	Value (Approx.)
B142	1	OFF	Battery voltage
	2	ACC	
	3	ON	

Is battery voltage present as specified?

- YES >> GO TO 3.
 NO >> Check harness between Bluetooth control unit and fuse.

3. CHECK GROUND CIRCUIT

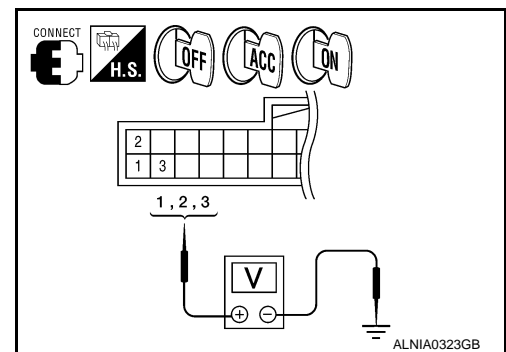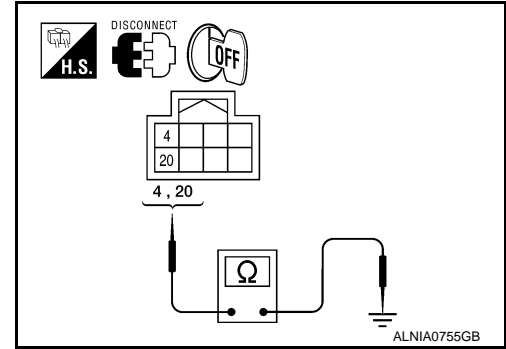

POWER SUPPLY AND GROUND CIRCUIT

[PREMIUM WITHOUT NAVIGATION]

< COMPONENT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect Bluetooth control unit connector.
3. Check continuity between Bluetooth control unit harness connector B142 and ground.

Connector	Terminal	—	Continuity
B142	4	Ground	Yes
	20		
	23		

Are continuity results as specified?

- YES >> Inspection End.
 NO >> Repair harness or connector.

MICROPHONE

MICROPHONE : Diagnosis Procedure

INFOID:000000005387606

Regarding Wiring Diagram information, refer to [AV-124. "Wiring Diagram"](#).

1. CHECK POWER SUPPLY CIRCUIT (MICROPHONE SIDE)

1. Turn ignition switch ON.
2. Check voltage between microphone harness connector R109 terminal 4 and ground.

(+)		(-)	Value (Approx.)
Connector	Terminal		
R109	4	Ground	5V

Is approximately 5V present?

- YES >> GO TO 3.
 NO >> GO TO 2.

2. CHECK POWER SUPPLY CIRCUIT (CONTINUITY)

1. Turn ignition switch OFF.
2. Disconnect microphone and Bluetooth control unit harness connectors.
3. Check continuity between microphone harness connector R109 (A) terminal 4 and Bluetooth control unit harness connector B142 (B) terminal 29.




A		B		Continuity
Connector	Terminal	Connector	Terminal	
R109	4	B142	29	Yes

4. Check continuity between microphone harness connector R109 (A) terminal 4 and ground.

A		—	Continuity
Connector	Terminal		
R109	4	Ground	No

Are the continuity test results as specified?

- YES >> Replace the Bluetooth control unit. Refer to [AV-169. "Removal and Installation"](#).
 NO >> Repair harness or connector.

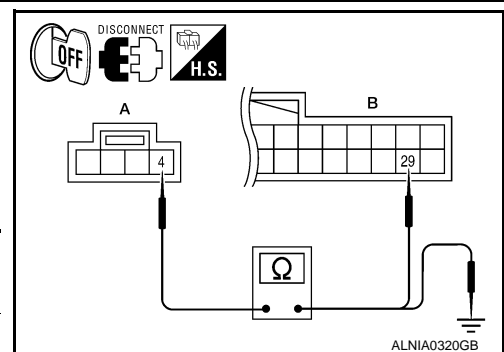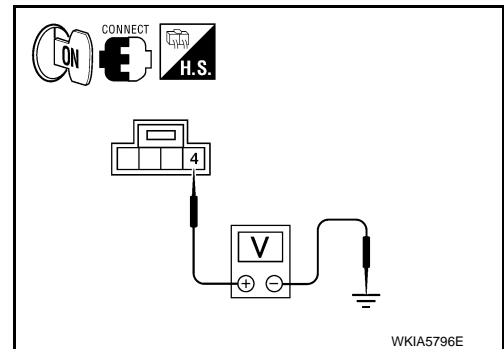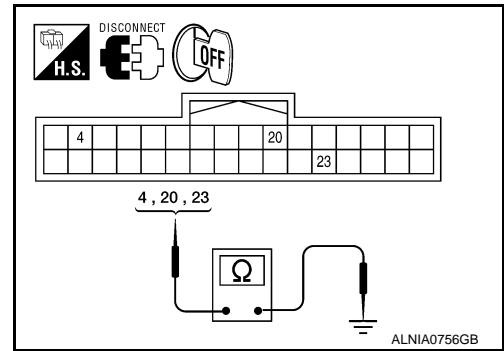

POWER SUPPLY AND GROUND CIRCUIT


< COMPONENT DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

3. CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect microphone harness connector R109 and Bluetooth control unit harness connector B142.
3. Check continuity between microphone harness connector R109 (A) terminal 2 and Bluetooth control unit harness connector B142 (B) terminal 8.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
R109	2	B142	8	Yes

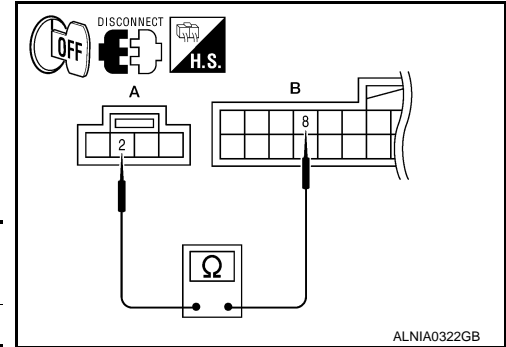

ALNIA0322GB

Does continuity exist?

- YES >> Inspection End.
NO >> Repair harness or connector.

FRONT DOOR SPEAKER

< COMPONENT DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

FRONT DOOR SPEAKER

Description

INFOID:000000005387607

The audio unit sends audio signals to the audio amp. The audio amp. amplifies the audio signals before sending them to the front door speakers using the audio signal circuits.

Diagnosis Procedure

INFOID:000000005387608

Regarding Wiring Diagram information, refer to [AV-124, "Wiring Diagram"](#).


1. SPEAKER HARNESS CHECK

1. Disconnect audio amp. connector M113 and suspect speaker connector.
2. Check continuity between audio amp. harness connector M113 (A) and suspect speaker harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M113	15	D12	1	Yes
	31		2	
	16	D112	1	
	32		2	

3. Check continuity between audio amp. harness connector M113 (A) and ground.

A		—	Continuity
Connector	Terminal		
M113	15	Ground	No
	31		
	16		
	32		

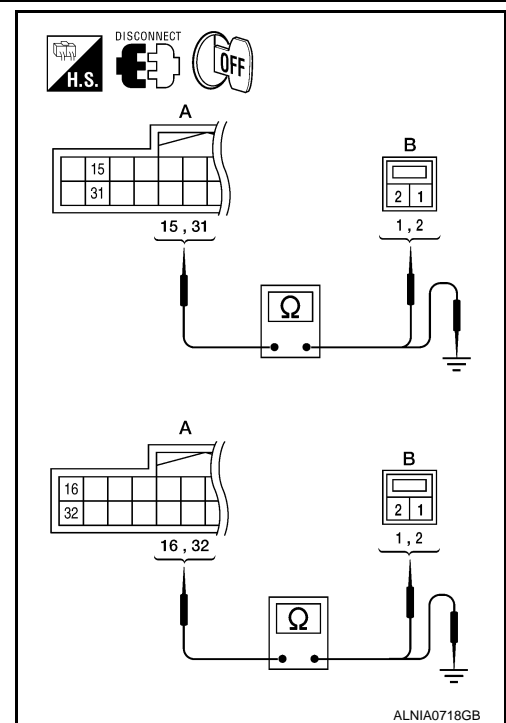

Are continuity test results as specified?

YES >> GO TO 2.

- NO >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.

2. FRONT DOOR SPEAKER SIGNAL CHECK


FRONT DOOR SPEAKER

[PREMIUM WITHOUT NAVIGATION]

< COMPONENT DIAGNOSIS >

1. Connect audio amp. connector M113 and suspect speaker connector.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio amp. harness connector M113 terminals with CONSULT-III or oscilloscope.

Connector	Terminal		Condition	Reference signal
	(+)	(-)		
M113	15	31	Receive audio signal	
	16	32		

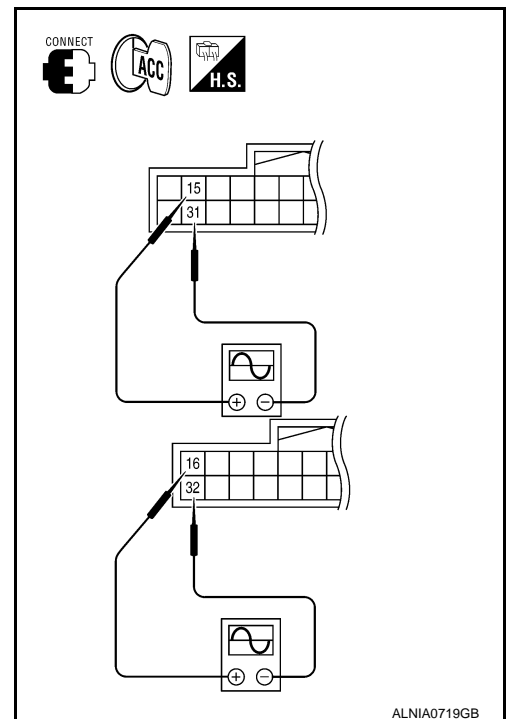

Is audio signal voltage as specified?

YES >> Replace suspect speaker. Refer to [AV-158. "Removal and Installation"](#).

NO >> GO TO 3.


3. PRE-AMP HARNESS CHECK

1. Disconnect audio unit connector M171 and audio amp. connector M113.
2. Check continuity between audio unit harness connector M171 (A) and audio amp. harness connector M113 (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M171	1	M113	6	Yes
	2		22	
	3		5	
	4		21	

3. Check continuity between audio unit harness connector M171 (A) and ground.

A		—	Continuity
Connector	Terminal		
M171	1	Ground	No
	2		
	3		
	4		

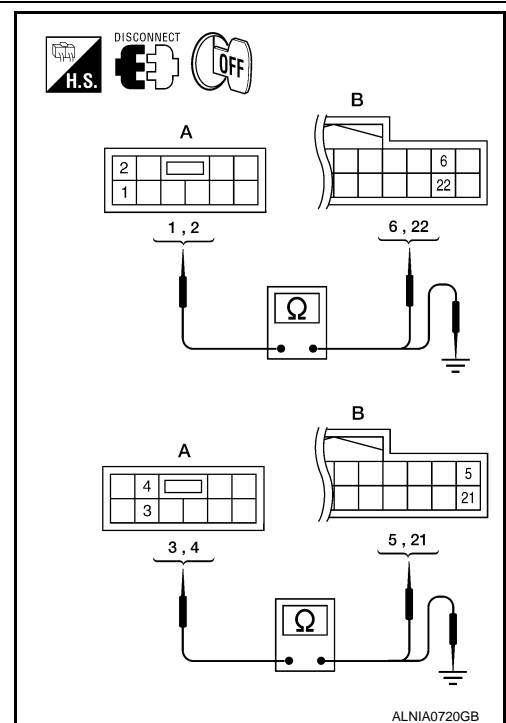

Are continuity test results as specified?

YES >> GO TO 4.

NO >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.


4. PRE-AMP SIGNAL CHECK

FRONT DOOR SPEAKER

[PREMIUM WITHOUT NAVIGATION]

< COMPONENT DIAGNOSIS >

1. Connect audio unit connector and audio amp. connector.
2. Turn ignition switch ACC.
3. Push "POWER" switch.
4. Check the signal between audio unit harness connector M171 terminals with CONSULT-III or oscilloscope.

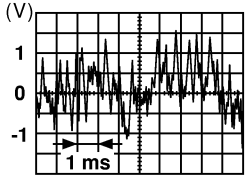
Connector	Terminals		Condition	Reference signal
	(+)	(-)		
M171	2	1	Receive audio signal	
	4	3		

SKIA0177E

Are the audio signal voltage readings as specified?

YES >> Replace audio amp. Refer to [AV-163, "Removal and Installation"](#).

NO >> Replace audio unit. Refer to [AV-155, "Removal and Installation"](#).

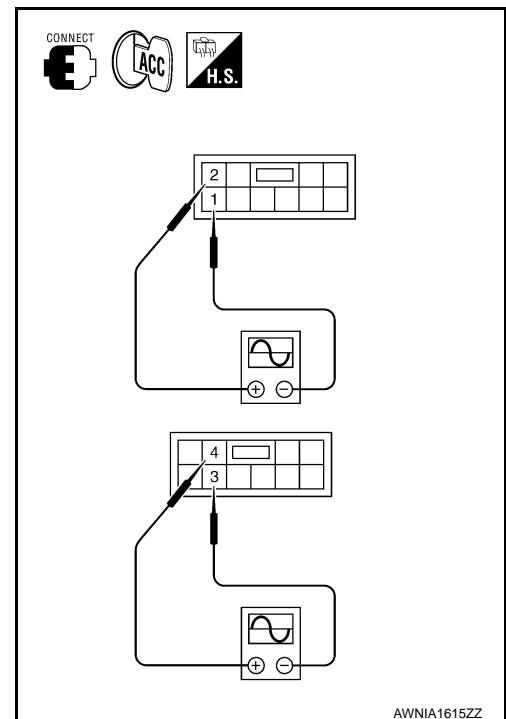

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

FRONT TWEETER

Description

INFOID:000000005387609

The audio unit sends audio signals to the audio amp. The audio amp. amplifies the audio signals before sending them to the tweeters using the audio signal circuits.

Diagnosis Procedure

INFOID:000000005387610

Regarding Wiring Diagram information, refer to [AV-124, "Wiring Diagram"](#).


1. HARNESS CHECK

1. Disconnect audio amp. connector M113 and suspect tweeter connector.
2. Check continuity between audio amp. harness connector M113 (A) and suspect tweeter harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M113	14	M109	1	Yes
	30		2	
	13	M111	1	
	29		2	

3. Check continuity between audio amp. harness connector M113 (A) and ground.

A		—	Continuity
Connector	Terminal		
M113	14	Ground	No
	30		
	13		
	29		

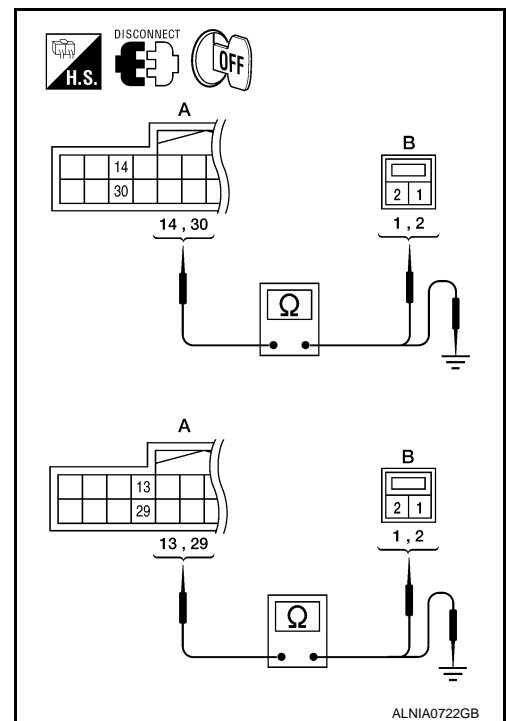

Are continuity test results as specified?

YES >> GO TO 2.

- NO >> • Check connector housings for disconnected or loose terminals.
 • Repair harness or connector.

2. FRONT TWEETER SIGNAL CHECK


FRONT TWEETER

[PREMIUM WITHOUT NAVIGATION]

< COMPONENT DIAGNOSIS >

1. Connect audio amp. connector M113 and suspect tweeter connector.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio amp. harness connector M113 terminals with CONSULT-III or oscilloscope.

Connector	Terminal		Condition	Reference signal
	(+)	(-)		
M113	14	30	Receive audio signal	
	13	29		

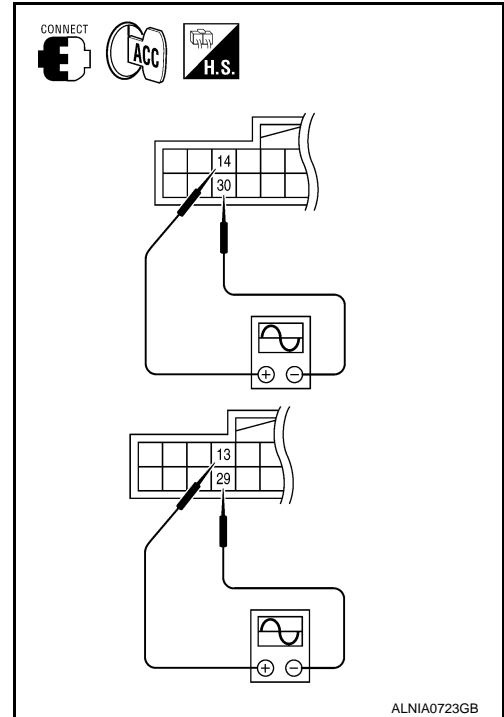

Is audio signal voltage as specified?

YES >> Replace suspect tweeter. Refer to [AV-156. "Removal and Installation"](#).

NO >> GO TO 3.


3. PRE-AMP HARNESS CHECK

1. Disconnect audio unit connector M171 and audio amp. connector M113.
2. Check continuity between audio unit harness connector M171 (A) and audio amp. harness connector M113 (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M171	1	M113	6	Yes
	2		22	
	3		5	
	4		21	

3. Check continuity between audio unit harness connector M171 (A) and ground.

A		—	Continuity
Connector	Terminal		
M171	1	Ground	No
	2		
	3		
	4		

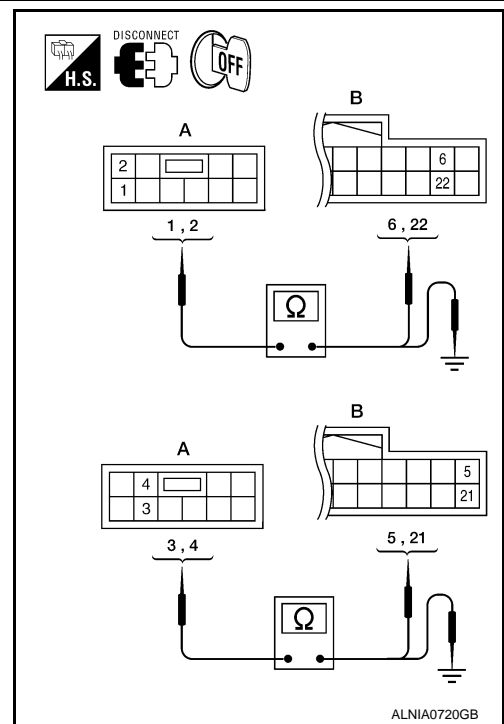

Are continuity test results as specified?

YES >> GO TO 4.

NO >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.


4. PRE-AMP SIGNAL CHECK

FRONT TWEETER

< COMPONENT DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]


1. Connect audio unit connector and audio amp. connector.
2. Turn ignition switch ACC.
3. Push "POWER" switch.
4. Check the signal between audio unit harness connector M171 terminals with CONSULT-III or oscilloscope.

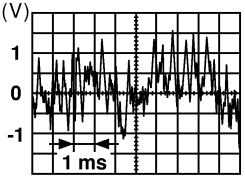Connector	Terminals		Condition	Reference signal
	(+)	(-)		
M171	2	1	Receive audio signal	 <p style="text-align: right; font-size: small;">SKIA0177E</p>
	4	3		

Are the audio signal voltage readings as specified?

YES >> Replace audio amp. Refer to [AV-163, "Removal and Installation"](#).

NO >> Replace audio unit. Refer to [AV-155, "Removal and Installation"](#).

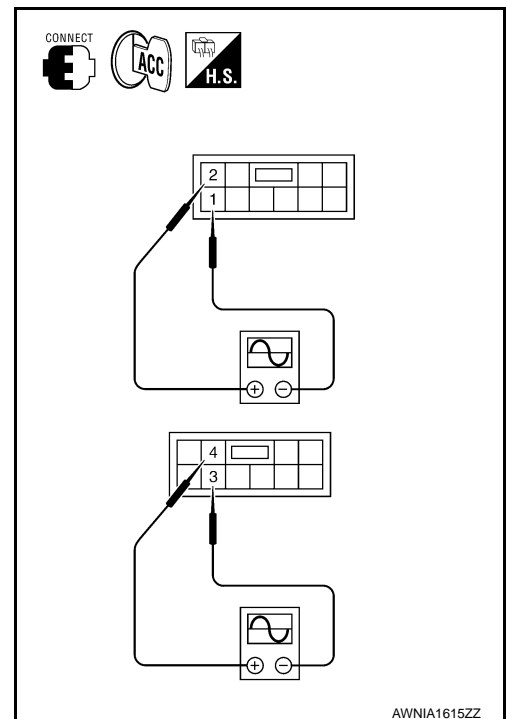

CENTER SPEAKER

< COMPONENT DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

CENTER SPEAKER

Description

INFOID:000000005387611

The audio unit sends audio signals to the audio amp. The audio amp. amplifies the audio signals before sending them to the center speaker using the audio signal circuits.

Diagnosis Procedure


INFOID:000000005387612

Regarding Wiring Diagram information, refer to [AV-124, "Wiring Diagram"](#).

1. CENTER SPEAKER HARNESS CHECK

1. Disconnect audio amp. connector M113 and center speaker connector M110.
2. Check continuity between audio amp. harness connector M113 (A) and center speaker harness connector M110 (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M113	10	M110	1	Yes
	26		2	

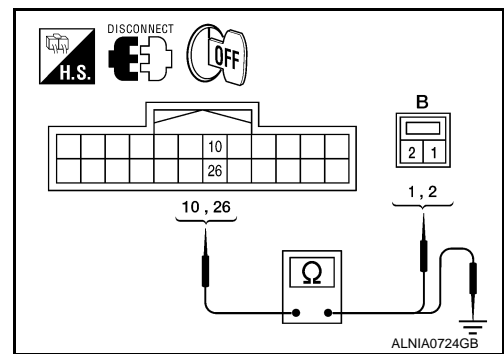

3. Check continuity between audio amp. harness connector M113 (A) and ground.

A		—	Continuity
Connector	Terminal		
M113	10	Ground	No
	26		


Are continuity test results as specified?

YES >> GO TO 2.

- NO >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.

2. CENTER SPEAKER SIGNAL CHECK

1. Connect audio amp. connector M113 and center speaker connector M110.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio amp. harness connector M113 terminals with CONSULT-III or oscilloscope.

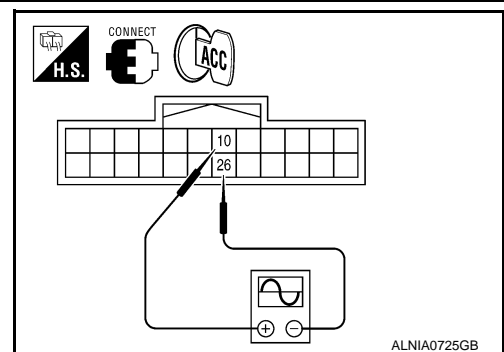

Connector	Terminals		Condition	Reference signal
	(+)	(-)		
M113	10	26	Receive audio signal	<p>SKIA0177E</p>

Is the audio signal voltage reading as specified?

CENTER SPEAKER

< COMPONENT DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

- YES >> Replace center speaker. Refer to [AV-157, "Removal and Installation"](#).
 NO >> GO TO 3.

3. PRE-AMP HARNESS CHECK

- Disconnect audio unit connector M171 and audio amp. connector M113.
- Check continuity between audio unit harness connector M171 (A) and audio amp. harness connector M113 (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M171	1	M113	6	Yes
	2		22	
	3		5	
	4		21	

- Check continuity between audio unit harness connector M171 (A) and ground.


A		—	Continuity
Connector	Terminal		
M171	1	Ground	No
	2		
	3		
	4		

Are continuity test results as specified?

- YES >> GO TO 4.
 NO >> • Check connector housings for disconnected or loose terminals.
 • Repair harness or connector.

4. PRE-AMP SIGNAL CHECK



- Connect audio unit connector and audio amp. connector.
- Turn ignition switch ACC.
- Push "POWER" switch.
- Check the signal between audio unit harness connector M171 terminals with CONSULT-III or oscilloscope.

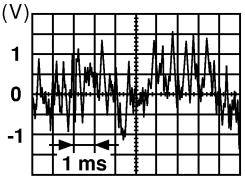Connector	Terminals		Condition	Reference signal
	(+)	(-)		
M171	2	1	Receive audio signal	
	4	3		

SKIA0177E

Are the audio signal voltage readings as specified?

- YES >> Replace audio amp. Refer to [AV-163, "Removal and Installation"](#).
 NO >> Replace audio unit. Refer to [AV-155, "Removal and Installation"](#).

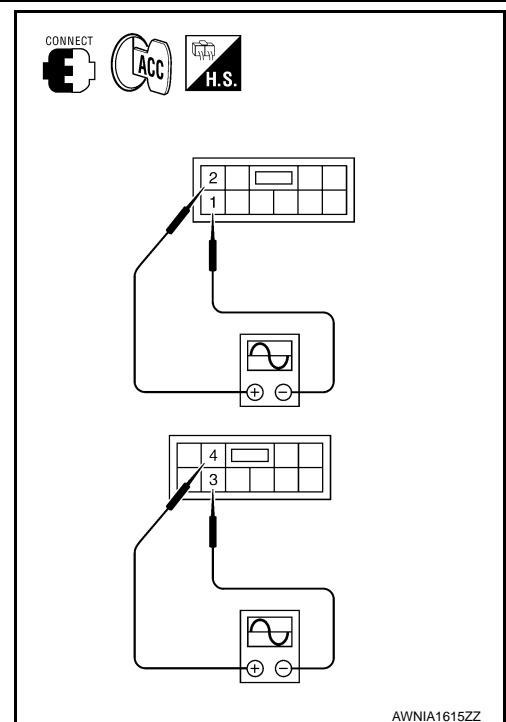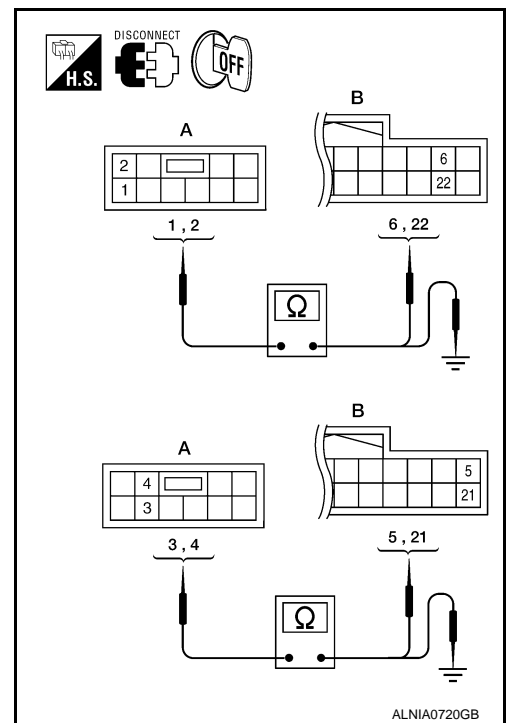

REAR DOOR SPEAKER

< COMPONENT DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

REAR DOOR SPEAKER

Description

INFOID:000000005387613

The audio unit sends audio signals to the audio amp. The audio amp. amplifies the audio signals before sending them to the rear door speakers using the audio signal circuits.

Diagnosis Procedure

INFOID:000000005387614

Regarding Wiring Diagram information, refer to [AV-124, "Wiring Diagram"](#).


1. SPEAKER HARNESS CHECK

1. Disconnect audio amp. connectors M113 and suspect speaker connector.
2. Check continuity between audio amp. harness connectors M113 (A) and suspect speaker harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M113	11	D207 (crew cab) B76 (king cab)	1	Yes
	27		2	
	12	D307 (crew cab) B159 (king cab)	1	
	28		2	

3. Check continuity between audio amp. harness connectors M113 (A) and ground.

Connector	Terminal	-	Continuity
M113	11	Ground	No
	27		
	12		
	28		

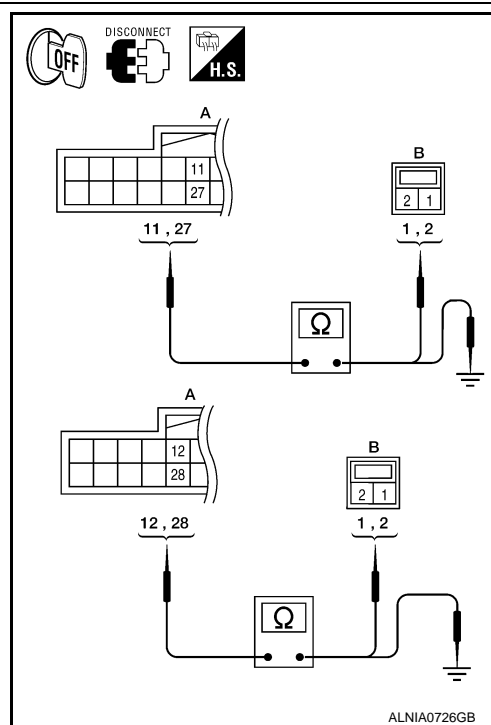

Are the continuity test results as specified?

YES >> GO TO 2.

- NO >>
- Check connector housings for disconnected or loose terminals.
 - Repair harness or connector.

2. SPEAKER SIGNAL CHECK


A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P


REAR DOOR SPEAKER

[PREMIUM WITHOUT NAVIGATION]

< COMPONENT DIAGNOSIS >

1. Connect audio amp. connectors and suspect speaker connector.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio amp. harness connectors M113 terminals with CONSULT-III or oscilloscope.

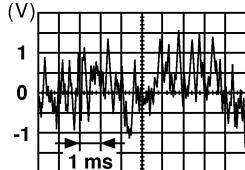Connector	Terminals		Condition	Reference signal
	(+)	(-)		
M113	11	27	Receive audio signal	 <small>SKIA0177E</small>
	12	28		

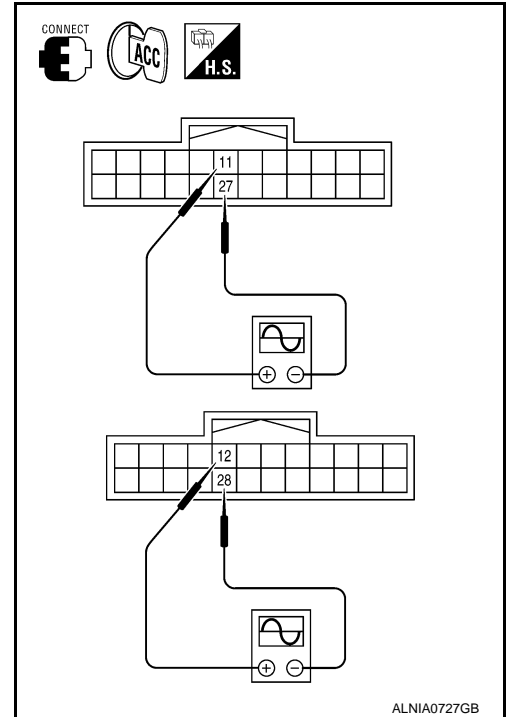

Are audio signal voltage readings as specified?

YES >> Replace suspect speaker. Refer to [AV-159, "Removal and Installation"](#).

NO >> GO TO 3.


3. PRE-AMP HARNESS CHECK

1. Disconnect audio unit connector M172 and audio amp. connector M113.
2. Check continuity between audio unit harness connector M172 (A) and audio amp. harness connector M113 (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M172	13	M113	8	Yes
	14		24	
	15		7	
	16		23	

3. Check continuity between audio unit harness connector M172 (A) and ground.

A		—	Continuity
Connector	Terminal		
M172	13	Ground	No
	14		
	15		
	16		

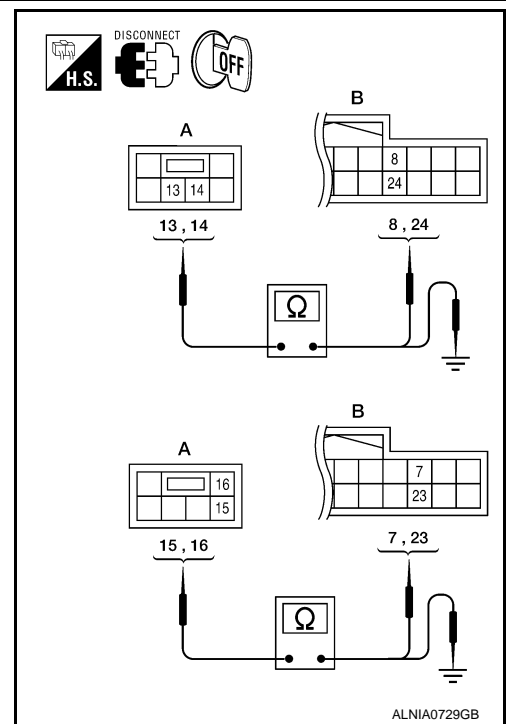

Are the continuity test results as specified?

YES >> GO TO 4.

NO >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.


4. PRE-AMP SIGNAL CHECK

REAR DOOR SPEAKER

[PREMIUM WITHOUT NAVIGATION]


< COMPONENT DIAGNOSIS >

1. Connect audio unit connector M172 and audio amp. connector M113.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio unit harness connector M172 terminals with CONSULT-III or oscilloscope.

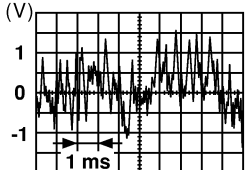Connector	Terminals		Condition	Reference signal
	(+)	(-)		
M172	14	13	Receive audio signal	 <p>SKIA0177E</p>
	16	15		

Is the audio signal voltage reading as specified?

- YES >> Replace audio amp. Refer to [AV-163. "Removal and Installation"](#).
- NO >> Replace audio unit. Refer to [AV-155. "Removal and Installation"](#).

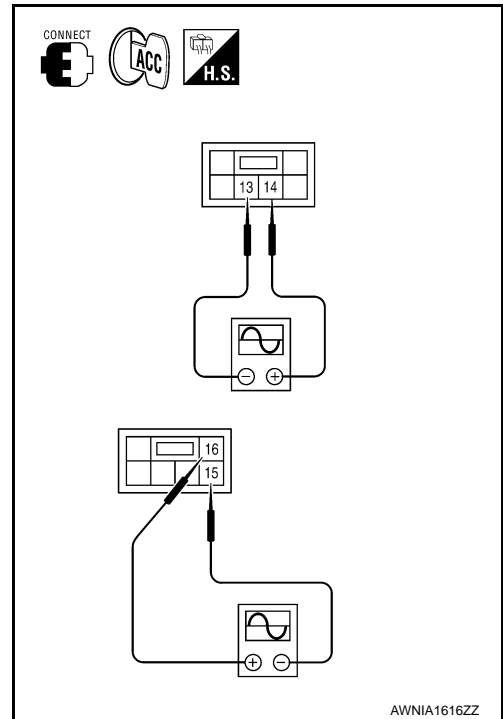

A
B
C
D
E
F
G
H
I
J
K
L
M

AV

O
P

REAR DOOR TWEETER

Description

INFOID:000000005387615

The audio unit sends audio signals to the audio amp. The audio amp. amplifies the audio signals before sending them to the rear door tweeters using the audio signal circuits.

Diagnosis Procedure

INFOID:000000005387616

Regarding Wiring Diagram information, refer to [AV-124, "Wiring Diagram"](#).


1. TWEETER HARNESS CHECK

1. Disconnect audio amp. connectors M113 and suspect tweeter connector.
2. Check continuity between audio amp. harness connectors M113 (A) and suspect tweeter harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M113	11	D208	1	Yes
	27		2	
	12	D308	1	
	28		2	

3. Check continuity between audio amp. harness connectors M113 (A) and ground.

A		-	Continuity
Connector	Terminal		
M113	11	Ground	No
	27		
	12		
	28		

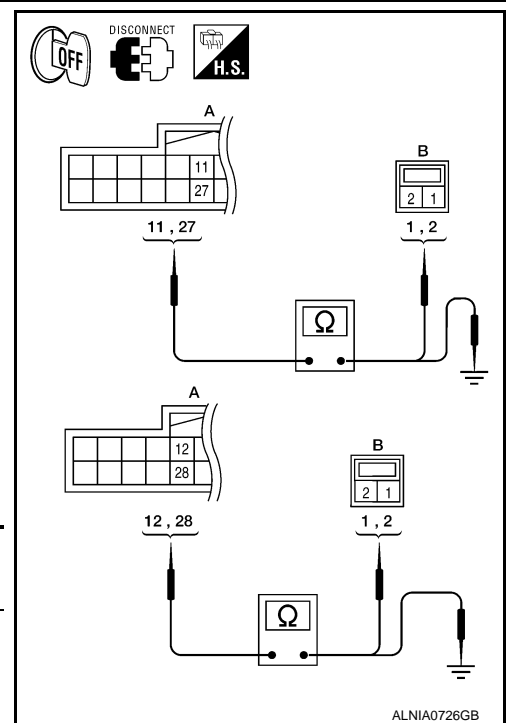

Are the continuity test results as specified?

YES >> GO TO 2.

- NO >> • Check connector housings for disconnected or loose terminals.
 • Repair harness or connector.

2. TWEETER SIGNAL CHECK

REAR DOOR TWEETER


[PREMIUM WITHOUT NAVIGATION]

< COMPONENT DIAGNOSIS >

1. Connect audio amp. connectors and suspect tweeter connector.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio amp. harness connectors M113 terminals with CONSULT-III or oscilloscope.

Connector	Terminals		Condition	Reference signal
	(+)	(-)		
M113	11	27	Receive audio signal	
	12	28		

SKIA0177E

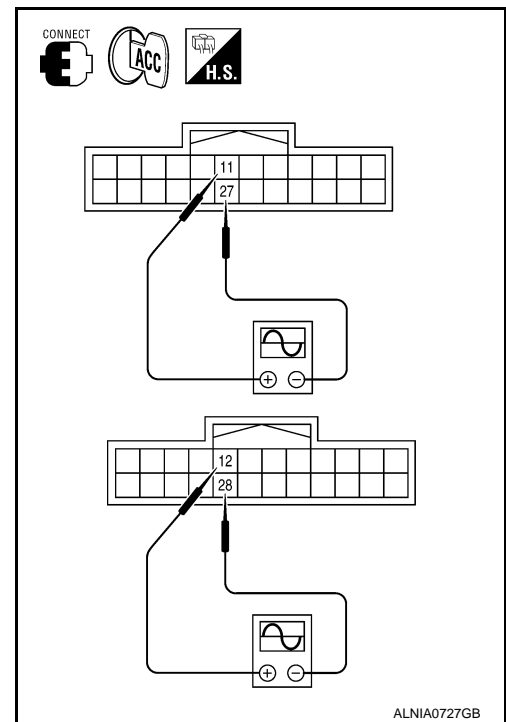

Are audio signal voltage readings as specified?

- YES >> Replace suspect tweeter. Refer to [AV-159, "Removal and Installation"](#).
- NO >> GO TO 3.


3. PRE-AMP HARNESS CHECK

1. Disconnect audio unit connector M172 and audio amp. connector M113.
2. Check continuity between audio unit harness connector M172 (A) and audio amp. harness connector M113 (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M172	13	M113	8	Yes
	14		24	
	15		7	
	16		23	

3. Check continuity between audio unit harness connector M172 (A) and ground.

A		—	Continuity
Connector	Terminal		
M172	13	Ground	No
	14		
	15		
	16		

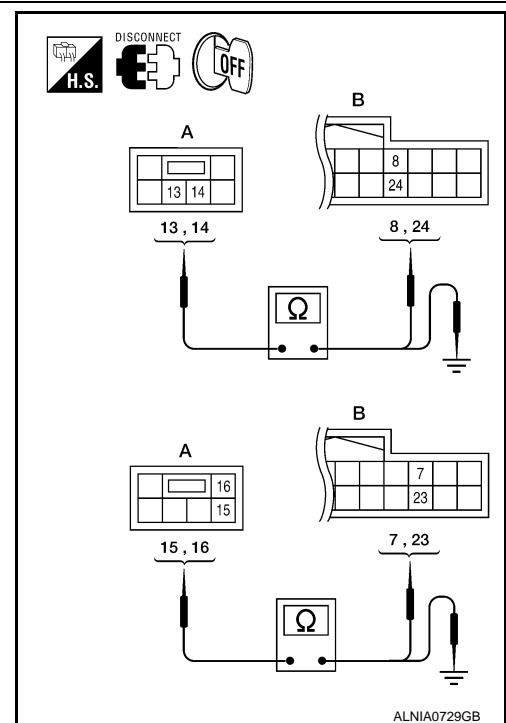

Are the continuity test results as specified?

- YES >> GO TO 4.
- NO >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.


4. PRE-AMP SIGNAL CHECK

REAR DOOR TWEETER

[PREMIUM WITHOUT NAVIGATION]


< COMPONENT DIAGNOSIS >

1. Connect audio unit connector M172 and audio amp. connector M113.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio unit harness connector M172 terminals with CONSULT-III or oscilloscope.

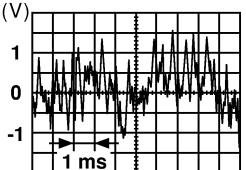Connector	Terminals		Condition	Reference signal
	(+)	(-)		
M172	14	13	Receive audio signal	 <p style="text-align: center;">SKIA0177E</p>
	16	15		

Is the audio signal voltage reading as specified?

- YES >> Replace audio amp. Refer to [AV-163, "Removal and Installation"](#).
- NO >> Replace audio unit. Refer to [AV-155, "Removal and Installation"](#).

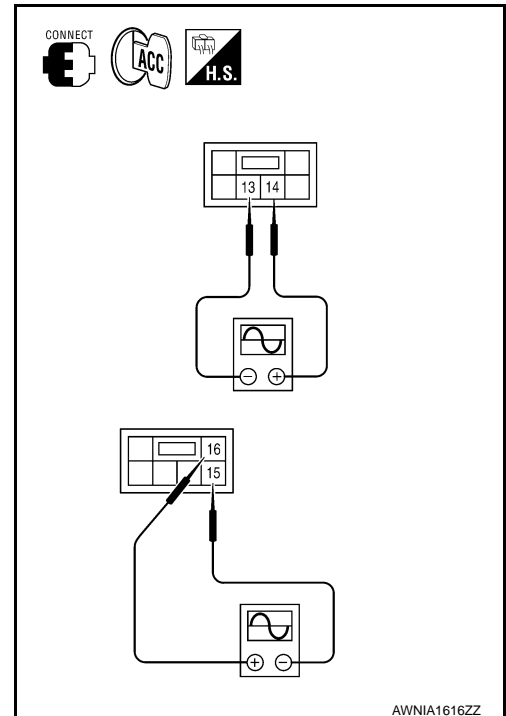

SUBWOOFER

< COMPONENT DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

SUBWOOFER

Description

INFOID:000000005387617

The audio unit sends audio signals to the audio amp. The audio amp. amplifies the audio signals before sending them to the subwoofer using the audio signal circuits.


Diagnosis Procedure

INFOID:000000005387618

Regarding Wiring Diagram information, refer to [AV-124, "Wiring Diagram"](#).

1.SUBWOOFER HARNESS CHECK

1. Disconnect audio amp. connector M112 and subwoofer connector B72.
2. Check continuity between audio amp. harness connector M112 (A) and subwoofer harness connector B72 (B).

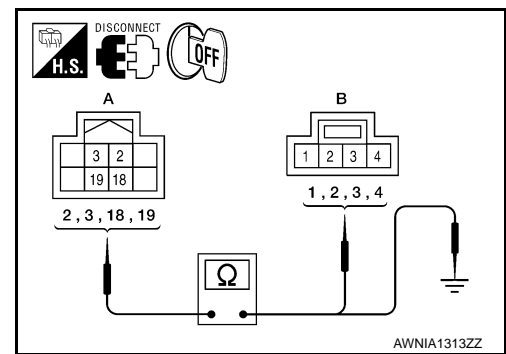

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M112	2	B72	1	Yes
	3		3	
	18		2	
	19		4	

3. Check continuity between audio amp. harness connector M112 (A) and ground.

A		—	Continuity
Connector	Terminal		
M112	2	Ground	No
	3		
	18		
	19		

Are the continuity test results as specified?

YES >> GO TO 2.

- NO >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.

2.SUBWOOFER SIGNAL CHECK

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

SUBWOOFER


< COMPONENT DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

1. Connect audio amp. connector M112 and subwoofer connector B72.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio amp. harness connector M112 terminals with CONSULT-III or oscilloscope.

Connector	Terminals		Condition	Reference signal
	(+)	(-)		
M112	2	18	Receive audio signal	
	3	19		

SKIA0177E

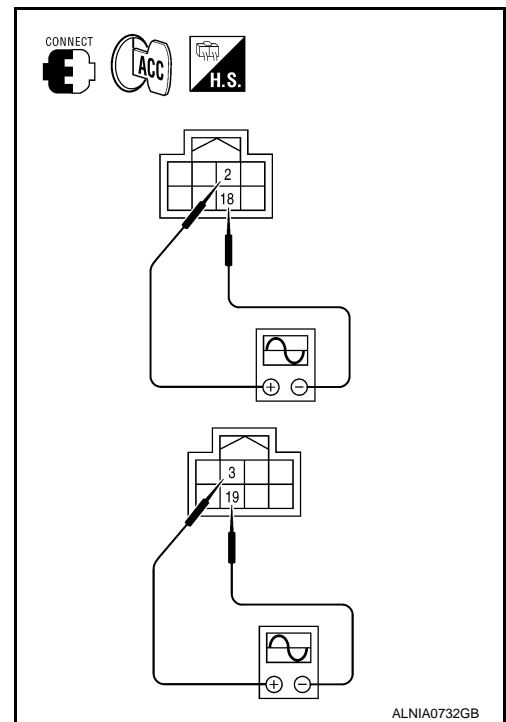

Is the audio signal voltage as specified?

YES >> Replace subwoofer. Refer to [AV-160. "Removal and Installation"](#).

NO >> GO TO 3.


3. PRE-AMP HARNESS CHECK

1. Disconnect audio unit connector M172 and audio amp. connector M113.
2. Check continuity between audio unit harness connector M172 (A) and audio amp. harness connector M113 (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M172	13	M113	8	Yes
	14		24	
	15		7	
	16		23	

3. Check continuity between audio unit harness connector M172 (A) and ground.

A		—	Continuity
Connector	Terminal		
M172	13	Ground	No
	14		
	15		
	16		

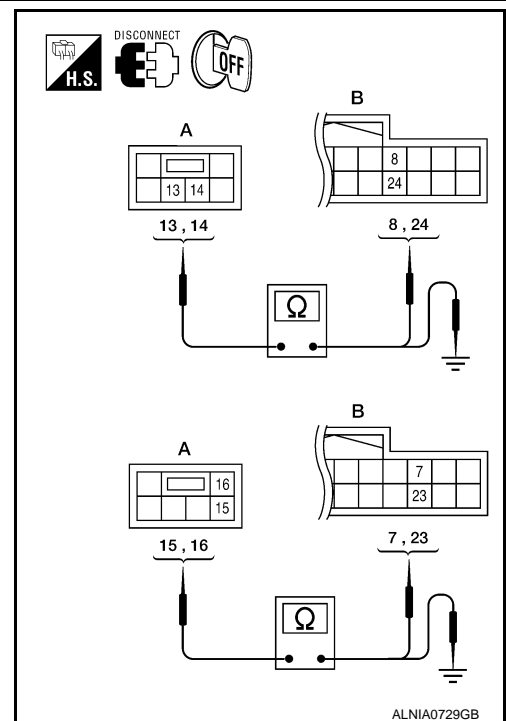

Are the continuity test results as specified?

YES >> GO TO 4.

NO >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.


4. PRE-AMP SIGNAL CHECK

SUBWOOFER

< COMPONENT DIAGNOSIS >


[PREMIUM WITHOUT NAVIGATION]

1. Connect audio unit connector M172 and audio amp. connector M113.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio unit harness connector M172 terminals with CONSULT-III or oscilloscope.

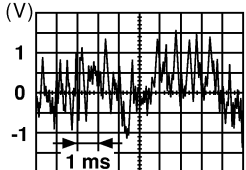Connector	Terminals		Condition	Reference signal
	(+)	(-)		
M172	14	13	Receive audio signal	 <p style="text-align: center; font-size: small;">SKIA0177E</p>
	16	15		

Is the audio signal voltage reading as specified?

- YES >> Replace audio amp. Refer to [AV-163. "Removal and Installation"](#).
- NO >> Replace audio unit. Refer to [AV-155. "Removal and Installation"](#).

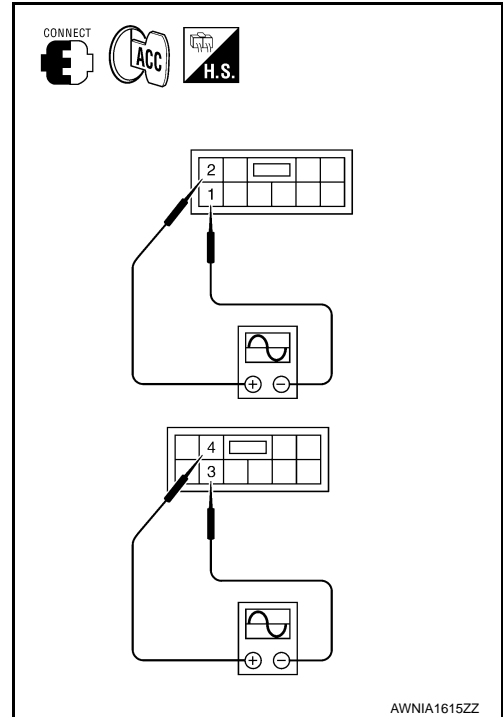

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

AMP ON SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

AMP ON SIGNAL CIRCUIT

Description

INFOID:000000005387619

When the audio system is turned on, a voltage signal is supplied from the audio unit to the audio amp. When this signal is received, the audio amp. will turn on.

Diagnosis Procedure

INFOID:000000005387620

Regarding Wiring Diagram information, refer to [AV-124, "Wiring Diagram"](#).


1.CHECK AMP ON SIGNAL

1. Turn audio system ON.
2. Check voltage between audio amp. harness connector M113 terminal 9 and ground.

(+)		(-)	Voltage (approx.)
Connector	Terminal		
M113	9	Ground	More than 6.5V

Is inspection result normal?

- YES >> Inspection End.
NO >> GO TO 2.

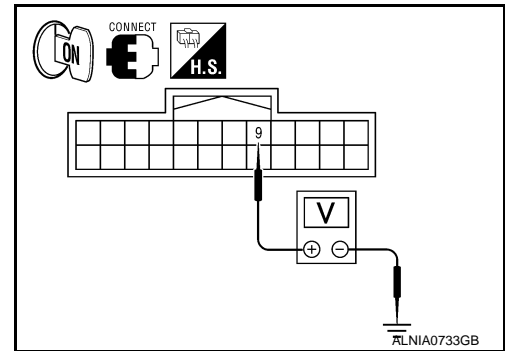


2.CHECK AMP ON SIGNAL (AUDIO UNIT)

Check voltage between audio unit harness connector M172 terminal 12 and ground.

(+)		(-)	Voltage (approx.)
Connector	Terminal		
M172	12	Ground	More than 6.5V

Is inspection result normal?

- YES >> Repair harness or connector.
NO >> Replace audio unit. Refer to [AV-155, "Removal and Installation"](#).

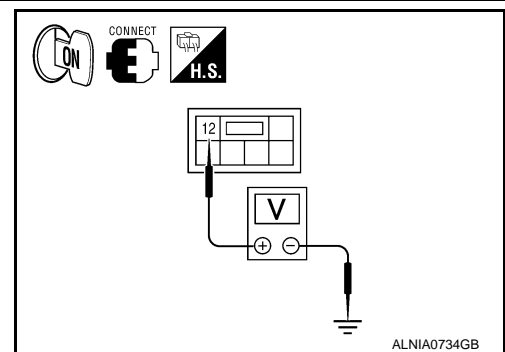

STEERING SWITCH

< COMPONENT DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

STEERING SWITCH

Description

INFOID:000000005387621

When one of the steering wheel audio control switches is pushed, the resistance in the steering wheel audio control switch circuit changes depending on which button is pushed.

Diagnosis Procedure


INFOID:000000005387622

Regarding Wiring Diagram information, refer to [AV-124, "Wiring Diagram"](#).

1. CHECK STEERING WHEEL AUDIO CONTROL SWITCH RESISTANCE

1. Turn ignition switch OFF.
2. Disconnect steering wheel audio control switch connector M102.
3. Check resistance between steering switch connector terminals.

Terminal	Signal name	Condition	Resistance (Ω) (Approx.)	
16	17	Seek (down)	Depress ▽ switch.	165
		Volume (down)	Depress VOL down switch.	487
		Phone/Send	Depress MODE switch.	0
20	17	Seek (up)	Depress △ switch.	165
		Volume (up)	Depress VOL up switch.	487
		Mode/End (with Bluetooth)	Depress switch.	0

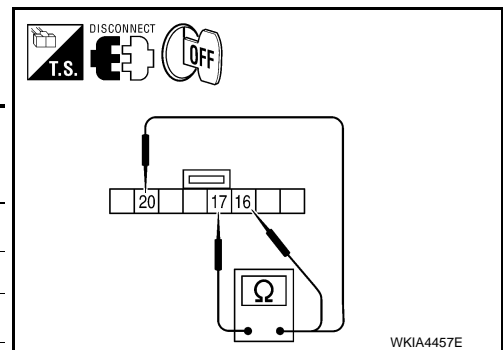

Do the steering wheel audio control switches check OK?


YES >> GO TO 2.

NO >> Replace steering wheel audio control switch. Refer to [AV-161, "Removal and Installation"](#).

2. CHECK HARNESS

1. Disconnect Bluetooth control unit connector B142 and spiral cable connector M30.
2. Check continuity between Bluetooth control unit harness connector B142 (A) and spiral cable harness connector M30 (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
B142	12	M30	24	Yes
	13		32	
	14		31	

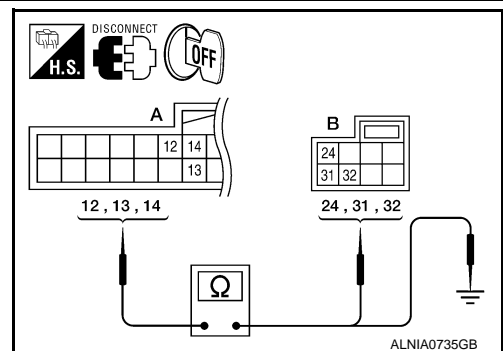

3. Check continuity between Bluetooth control unit connector B142 (A) and ground.

A		—	Continuity
Connector	Terminal		
B142	12	Ground	No
	13		
	14		

Are the continuity results as specified?

STEERING SWITCH

[PREMIUM WITHOUT NAVIGATION]

< COMPONENT DIAGNOSIS >

- YES >> GO TO 3.
- NO >> Repair harness.


3. SPIRAL CABLE CHECK

Check continuity between spiral cable harness connector M30 (A) and M102 (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M30	24	M102	20	Yes
	31		17	
	32		16	

Does the spiral cable check OK?

- YES >> Inspection End.
- NO >> Replace spiral cable. Refer to [SR-6, "Removal and Installation"](#).

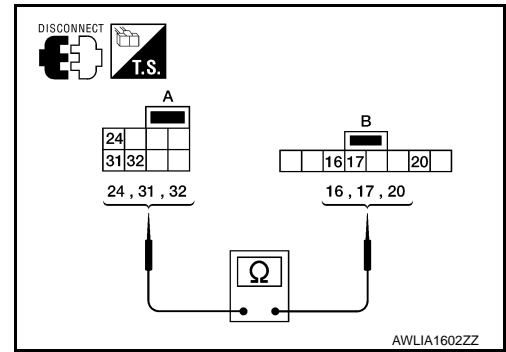

COMMUNICATION SIGNAL CIRCUIT
SATELLITE RADIO TUNER

SATELLITE RADIO TUNER : Description

INFOID:000000005387623

Communication signals are exchanged between the audio unit and satellite radio tuner using the communication circuits.


SATELLITE RADIO TUNER : Diagnosis Procedure

INFOID:000000005387624

Regarding Wiring Diagram information, refer to [AV-124, "Wiring Diagram"](#).

1.CHECK HARNESS - REQ1

1. Turn ignition switch OFF.
2. Disconnect satellite radio tuner (factory installed) connector M41 and audio unit connector M170.
3. Check continuity between satellite radio tuner (factory installed) harness connector M41 (A) terminal 28 and audio unit harness connector M170 (B) terminal 48.

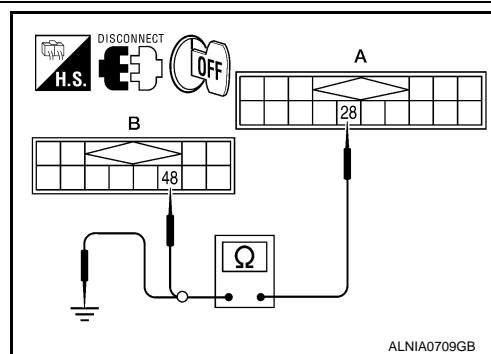

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M41	28	M170	48	Yes

4. Check continuity between satellite radio tuner (factory installed) harness connector M41 (A) terminal 28 and ground.


A		—	Continuity
Connector	Terminal		
M41	28	Ground	No

Are continuity results as specified?

- YES >> GO TO 2.
NO >> Repair harness or connector.

2.CHECK HARNESS - TXD

1. Check continuity between satellite radio tuner (factory installed) harness connector M41 (A) terminal 29 and audio unit harness connector M170 (B) terminal 49.

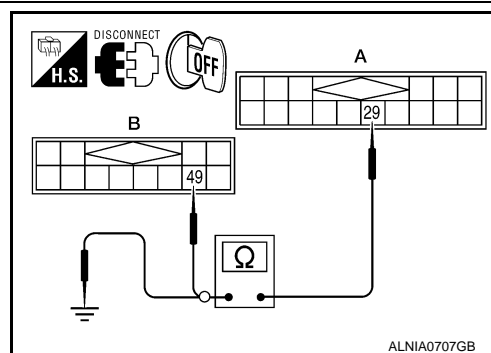

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M41	29	M170	49	Yes

2. Check continuity between satellite radio tuner (factory installed) harness connector M41 (A) terminal 29 and ground.

A		—	Continuity
Connector	Terminal		
M41	29	Ground	No

Are continuity results as specified?

- YES >> GO TO 3.
NO >> Repair harness or connector.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

COMMUNICATION SIGNAL CIRCUIT

[PREMIUM WITHOUT NAVIGATION]

< COMPONENT DIAGNOSIS >

3. CHECK HARNESS - RXD

1. Check continuity between satellite radio tuner (factory installed) harness connector M41 (A) terminal 30 and audio unit harness connector M170 (B) terminal 50.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M41	30	M170	50	Yes

2. Check continuity between satellite radio tuner (factory installed) harness connector M41 (A) terminal 30 and ground.

A		—	Continuity
Connector	Terminal		
M41	30	Ground	No


Are continuity results as specified?

YES >> GO TO 4.

NO >> Repair harness or connector.

4. CHECK REQ1 SIGNAL

1. Connect satellite radio tuner (factory installed) connector and audio unit connector.
2. Turn ignition switch to ACC
3. Check signal between satellite radio tuner (factory installed) harness connector M41 terminal 28 and ground with CONSULT-III or oscilloscope.

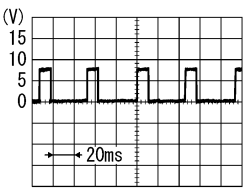(+)		(-)	Reference signal
Connector	Terminal		
M41	28	Ground	 <p>SKIB3825E</p>


Are voltage readings as specified?




YES >> GO TO 5.

NO >> Replace audio unit. Refer to [AV-155. "Removal and Installation"](#).

5. CHECK TXD SIGNAL

Check signal between satellite radio tuner (factory installed) harness connector M41 terminal 29 and ground with CONSULT-III or oscilloscope.

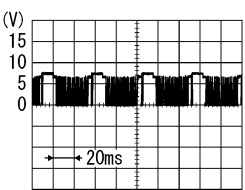(+)		(-)	Reference signal
Connector	Terminal		
M41	29	Ground	 <p>SKIB3824E</p>

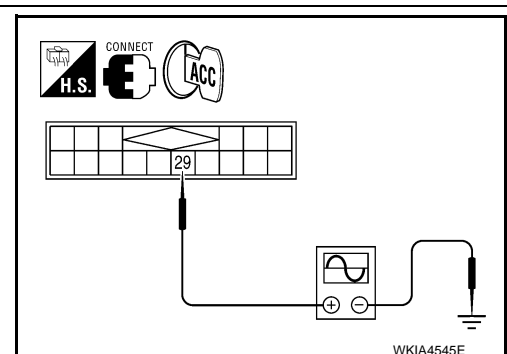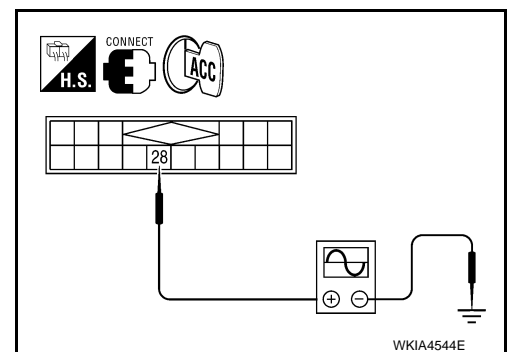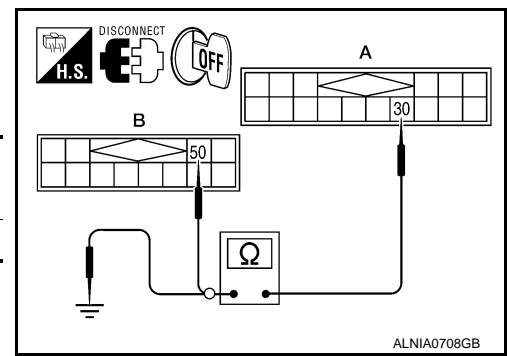

COMMUNICATION SIGNAL CIRCUIT

[PREMIUM WITHOUT NAVIGATION]

< COMPONENT DIAGNOSIS >

Are the voltage readings as specified?


YES >> GO TO 6.

NO >> Replace satellite radio tuner. Refer to [AV-166. "Removal and Installation"](#).

6. CHECK RXD SIGNAL

Check signal between satellite radio tuner (factory installed) harness connector M41 terminal 30 and ground with CONSULT-III or oscilloscope.

(+)		(-)	Reference signal
Connector	Terminal		
M41	30	Ground	

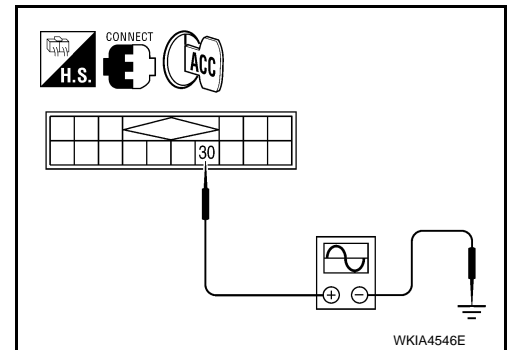

Are the voltage readings as specified?

YES >> Replace satellite radio tuner. Refer to [AV-166. "Removal and Installation"](#).

NO >> Replace audio unit. Refer to [AV-155. "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

SOUND SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

SOUND SIGNAL CIRCUIT SATELLITE RADIO TUNER

SATELLITE RADIO TUNER : Description

INFOID:000000005387625

Left and right channel audio signals are supplied from the satellite radio tuner to the audio unit through the sound signal circuits.

SATELLITE RADIO TUNER : Diagnosis Procedure

INFOID:000000005387626


Regarding Wiring Diagram information, refer to [AV-124, "Wiring Diagram"](#).

LEFT CHANNEL

1. CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect satellite radio tuner (factory installed) connector M41 and audio unit connector M170.
3. Check continuity between satellite radio tuner (factory installed) connector M41 (A) and audio unit connector M170 (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M41	21	M170	41	Yes
	22		42	

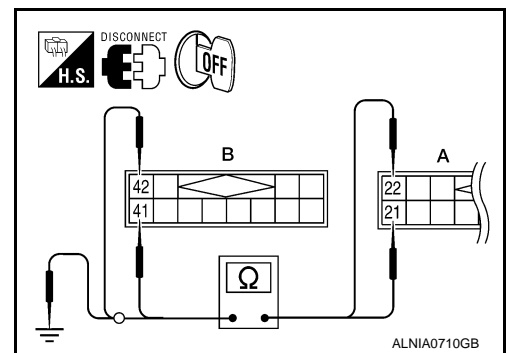

4. Check continuity between satellite radio tuner (factory installed) connector M41 (A) and ground.

A		—	Continuity
Connector	Terminal		
M41	21	Ground	No
	22		

Are continuity results as specified?


YES >> GO TO 2.

NO >> Repair harness or connector.

2. CHECK LEFT CHANNEL AUDIO SIGNAL

1. Connect satellite radio tuner (factory installed) and audio unit.
2. Turn ignition switch ON.
3. Check signal between satellite radio tuner (factory installed) connector M41 terminals 21 and 22 with CONSULT-III or oscilloscope.

Connector	(+)	(-)	Reference signal
	Terminals		
M41	22	21	

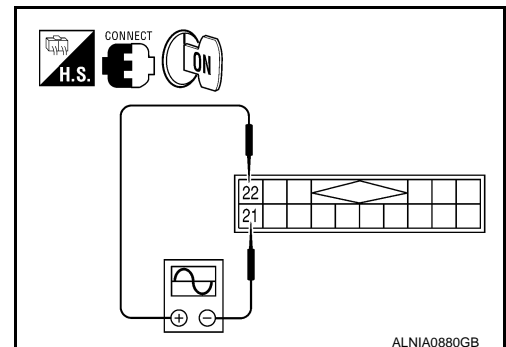

Are voltage readings as specified?

SOUND SIGNAL CIRCUIT

[PREMIUM WITHOUT NAVIGATION]


< COMPONENT DIAGNOSIS >

- YES >> Replace audio unit. Refer to [AV-155. "Removal and Installation"](#).
 NO >> Replace satellite radio tuner. Refer to [AV-166. "Removal and Installation"](#).

RIGHT CHANNEL

1. CHECK HARNESS

- Turn ignition switch OFF.
- Disconnect satellite radio tuner (factory installed) connector M41 and audio unit connector M170.
- Check continuity between satellite radio tuner (factory installed) M41 (A) and audio unit M170 (B).

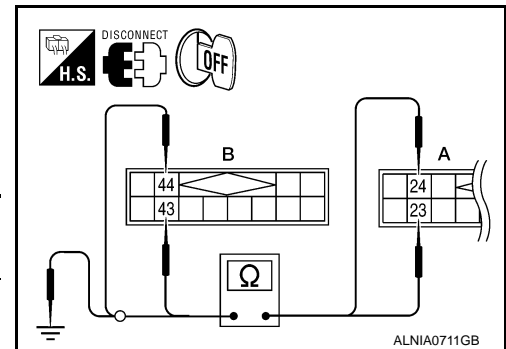

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M41	23	M170	43	Yes
	24		44	

- Check continuity between satellite radio tuner (factory installed) connector M41 (A) and ground.


A		—	Continuity
Connector	Terminal		
M41	23	Ground	No
	24		

Are continuity results as specified?

- YES >> GO TO 2.
 NO >> Repair harness or connector.

2. CHECK RIGHT CHANNEL AUDIO SIGNAL

- Connect satellite radio tuner (factory installed) and audio unit.
- Turn ignition switch ON.
- Check signal between satellite radio tuner (factory installed) connector M41 terminals 23 and 24 with CONSULT-III or oscilloscope.

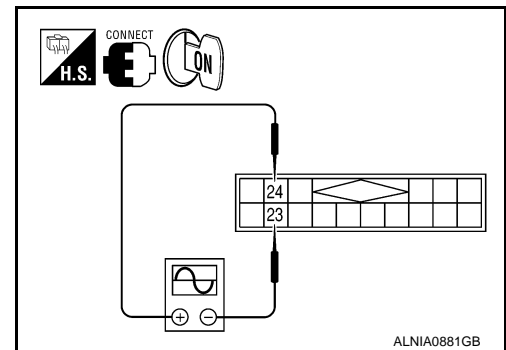

Connector	(+)	(-)	Reference signal
	Terminals		
M41	24	23	<p>SKIB3609E</p>

Are voltage readings as specified?

- YES >> Replace audio unit. Refer to [AV-155. "Removal and Installation"](#).
 NO >> Replace satellite radio tuner. Refer to [AV-166. "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

MICROPHONE SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

MICROPHONE SIGNAL CIRCUIT

Description

INFOID:000000005387627

Voice signals are transmitted from the microphone to the Bluetooth control unit using the microphone signal circuits.

Diagnosis Procedure


INFOID:000000005387628

Regarding Wiring Diagram information, refer to [AV-124, "Wiring Diagram"](#).

1. CHECK HARNESS BETWEEN BLUETOOTH CONTROL UNIT AND MICROPHONE

1. Turn ignition switch OFF.
2. Disconnect Bluetooth control unit connector and microphone connector.
3. Check continuity between Bluetooth control unit harness connector B142 (A) and microphone harness connector R109 (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
B142	7	R109	1	Yes
	8		2	
	29		4	

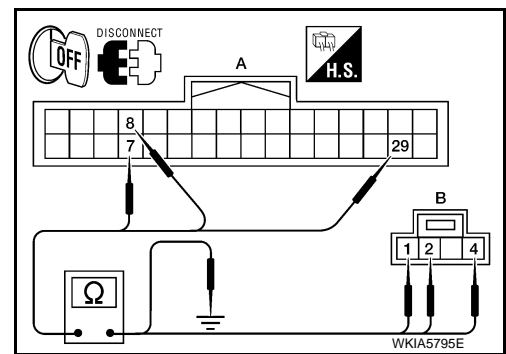

4. Check continuity between Bluetooth control unit harness connector B142 (A) and ground.

A		—	Continuity
Connector	Terminal		
B142	7	Ground	No
	8		
	29		

Are the continuity test results as specified?

YES >> GO TO 2.

NO >> Repair harness or connector.

2. CHECK MICROPHONE POWER SUPPLY

1. Connect Bluetooth control unit connector and microphone connector.
2. Turn ignition switch ON.
3. Check voltage between microphone harness connector R109 terminal 4 and ground.


(+)		(-)	Value (Approx.)
Connector	Terminal		
R109	4	Ground	5V

Is voltage reading approx. 5 volts?

YES >> GO TO 3.

NO >> Replace Bluetooth control unit. Refer to [AV-169, "Removal and Installation"](#).

3. CHECK MICROPHONE SIGNAL

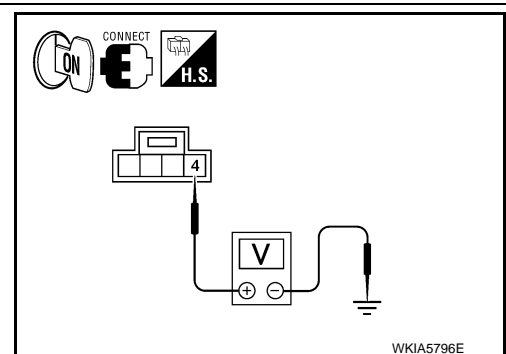



MICROPHONE SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

Check signal between Bluetooth control unit harness connector B142 terminals 7 and 8 with CONSULT-III or and oscilloscope.

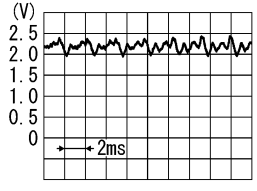Connector	(+)	(-)	Reference signal
	Terminal	Terminal	
B142	7	8	<p>While speaking into MIC</p>  <p>PKIB5037J</p>

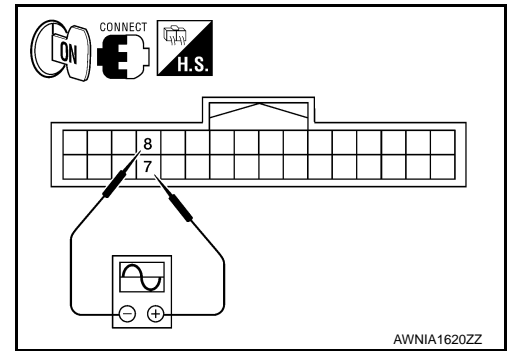

Are voltage readings as specified?

- YES >> Replace Bluetooth control unit. Refer to [AV-169, "Removal and Installation"](#).
- NO >> Replace microphone. Refer to [AV-167, "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M

AV

O
P

AUDIO UNIT

< ECU DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]


ECU DIAGNOSIS

AUDIO UNIT



Reference Value

INFOID:000000005387629

TERMINAL LAYOUT

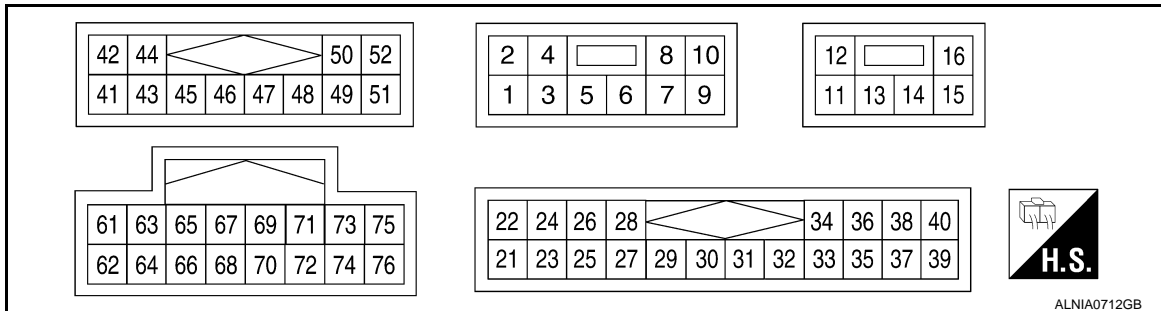





PHYSICAL VALUES

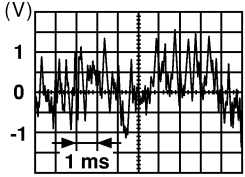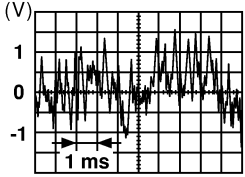Terminal (Wire color)		Item	Signal input/ output	Condition		Reference value (Approx.)
+	-					
2 (W)	1 (B)	Audio sound signal front LH	Output	Ignition switch ON	Receive audio sig- nal	 SKIA0177E
4 (Y)	3 (BR)	Audio sound signal front RH	Output	Ignition switch ON	Receive audio sig- nal	 SKIA0177E
6 (Y)	Ground	Battery power	Input	-	-	Battery voltage
7 (BR)	Ground	Illumination control signal	Input	Ignition switch ON	Illumination control switch is operated by lighting switch in 1st position.	Changes between 0 and 12V
8 (R/L)	Ground	Illumination signal	Input	OFF	Lighting switch is in 1st position.	Battery voltage
					Lighting switch is OFF.	0V
9	-	Shield	-	-	-	0V
10 (V)	Ground	ACC signal	Input	Ignition switch ON	-	Battery voltage
12 (G/W)	Ground	Amp ON signal	Output	Ignition switch ON	-	More than 6.5V

AUDIO UNIT

< ECU DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

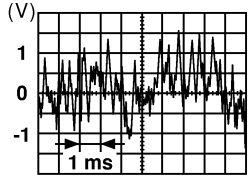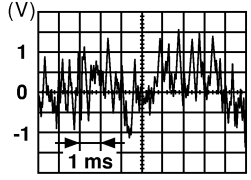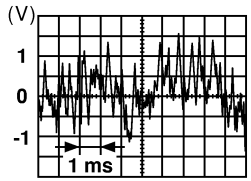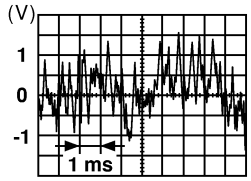Terminal (Wire color)		Item	Signal input/ output	Condition		Reference value (Approx.)
+	-					
14 (BR)	13 (B/R)	Audio sound signal rear LH	Output	Ignition switch ON	Receive audio sig- nal	 <p style="text-align: right; font-size: small;">SKIA0177E</p>
16 (L)	15 (B/W)	Audio sound signal rear RH	Output	Ignition switch ON	Receive audio sig- nal	 <p style="text-align: right; font-size: small;">SKIA0177E</p>
21 (V)	Ground	Remote control A	Output	Ignition switch ON	Audio unit ON	5V
22 (P)	Ground	Remote control B	Output	Ignition switch ON	Audio unit ON	5V
23 (BR/Y)	Ground	Remote control C	Output	Ignition switch ON	Audio unit ON	5V
24 (L)	Ground	Remote control D	Output	Ignition switch ON	Audio unit ON	5V
25 (LG)	Ground	Remote control ground	-	-	-	0V
27 (O/L)	26 (O)	Audio sound signal LH	Output	Ignition switch ON	Receive audio sig- nal	 <p style="text-align: right; font-size: small;">SKIA0177E</p>
29 (W)	28 (W/L)	Audio sound signal RH	Output	Ignition switch ON	Receive audio sig- nal	 <p style="text-align: right; font-size: small;">SKIA0177E</p>
30	-	Shield	-	-	-	0V
31 (O)	Ground	Remote control en- able signal	Output	Ignition switch ON	Audio unit ON	5V
32 (V)	Ground	Remote control switch power sup- ply	Output	Ignition switch ON	Audio unit ON	12V

A
B
C
D
E
F
G
H
I
J
K
L
M





AV

O
P

AUDIO UNIT

< ECU DIAGNOSIS >




[PREMIUM WITHOUT NAVIGATION]

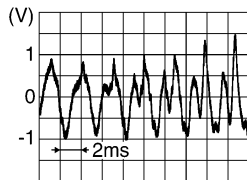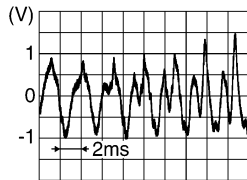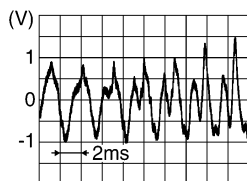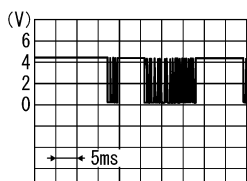Terminal (Wire color)		Item	Signal input/ output	Condition		Reference value (Approx.)
+	-					
42 (R)	41 (G)	Satellite radio au- dio signal LH	Input	Ignition switch ON	Satellite radio tuner operating	 <p style="text-align: right; font-size: small;">SKIB3609E</p>
44 (W)	43 (B)	Satellite radio au- dio signal RH	Input	Ignition switch ON	Satellite radio tuner operating	 <p style="text-align: right; font-size: small;">SKIB3609E</p>
45	-	Ground	-	-	-	0V
46	-	Data ground	-	-	-	0V
48 (L)	-	REQ (SAT→AV control unit)	Input	Ignition switch ON	-	—
49 (O/L)	-	RX (SAT→AV con- trol unit)	Input	Ignition switch ON	-	—
50 (W/L)	-	TX (AV control unit→SAT)	Input	Ignition switch ON	-	—
62 (G)	61 (Y)	Tel audio sig	Input	Ignition switch ON	Bluetooth control unit sends audio signal	 <p style="text-align: right; font-size: small;">SKIB3609E</p>
63 (R)	-	Mute control	-	-	-	-
64	-	Shield	-	Ignition switch ON	-	0V
65 (O/L)	Ground	Audio RX	Input	Ignition switch ON	Operate audio vol- ume	 <p style="text-align: right; font-size: small;">SKIA4403E</p>

AUDIO UNIT

< ECU DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

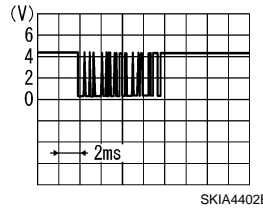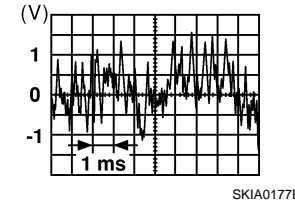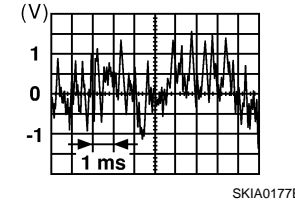Terminal (Wire color)		Item	Signal input/ output	Condition		Reference value (Approx.)
+	-					
66 (W/L)	Ground	Audio TX	Output	Ignition switch ON	Operate audio vol- ume	
67	-	Shield	-	Ignition switch ON	-	0V
72 (W/B)	Ground	CD eject signal	Input	Ignition switch ON	Operate EJECT but- ton	0V → 5V
73 (Y/B)	Ground	CD load signal	Input	Ignition switch ON	Operate LOAD but- ton	0V → 5V
74 (W)	Ground	Auxiliary audio in- put RH (+)	Input	Ignition switch ON	Receive audio sig- nal (AUX input)	
75 (R)	Ground	Auxiliary audio in- put LH (+)	Input	Ignition switch ON	Receive audio sig- nal (AUX input)	
76 (B)	-	Shield	-	-	-	0V


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

AV

< ECU DIAGNOSIS >

Wiring Diagram

PREMIUM AUDIO SYSTEM - WITHOUT NAVIGATION SYSTEM

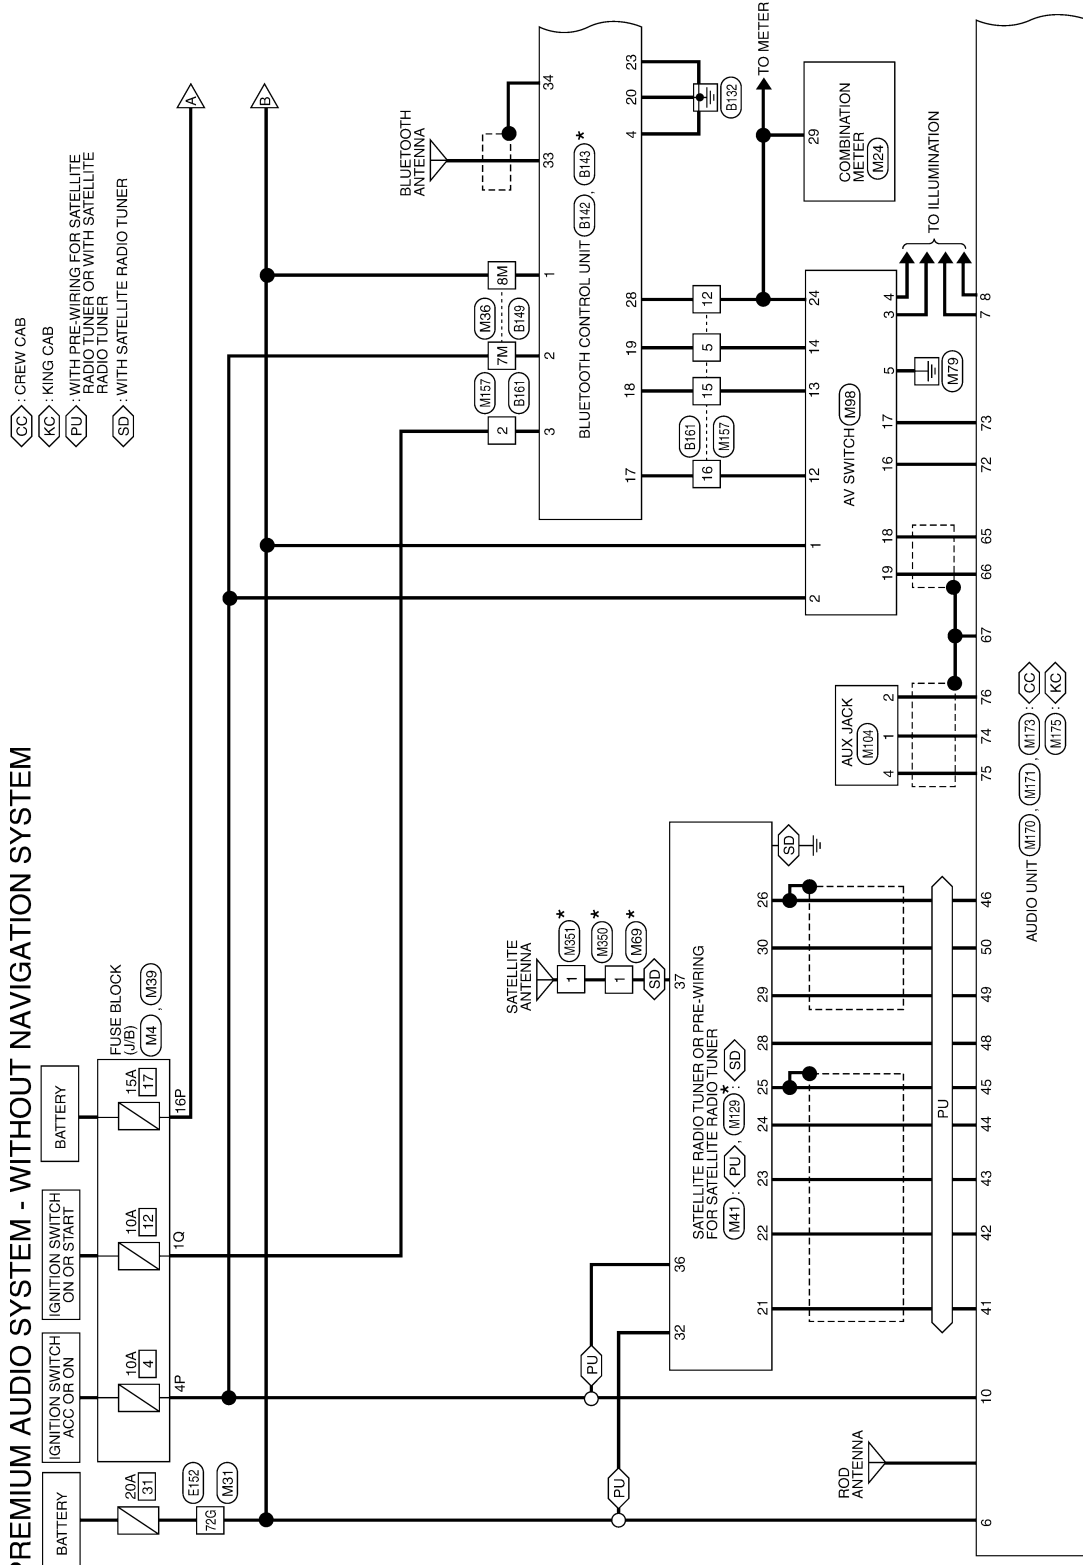

* : THIS CONNECTOR IS NOT SHOWN IN "HARNES LAYOUT" OF PG SECTION.


ABNWA0374GB

AUDIO UNIT

[PREMIUM WITHOUT NAVIGATION]

< ECU DIAGNOSIS >

- ◊ CC : CREW CAB
- ◊ KC : KING CAB
- ◊ RR : WITH REAR AUDIO REMOTE CONTROL UNIT
- *1 ◊ CC : 63 *2 ◊ CC : 61
- ◊ KC : 61 ◊ KC : 63

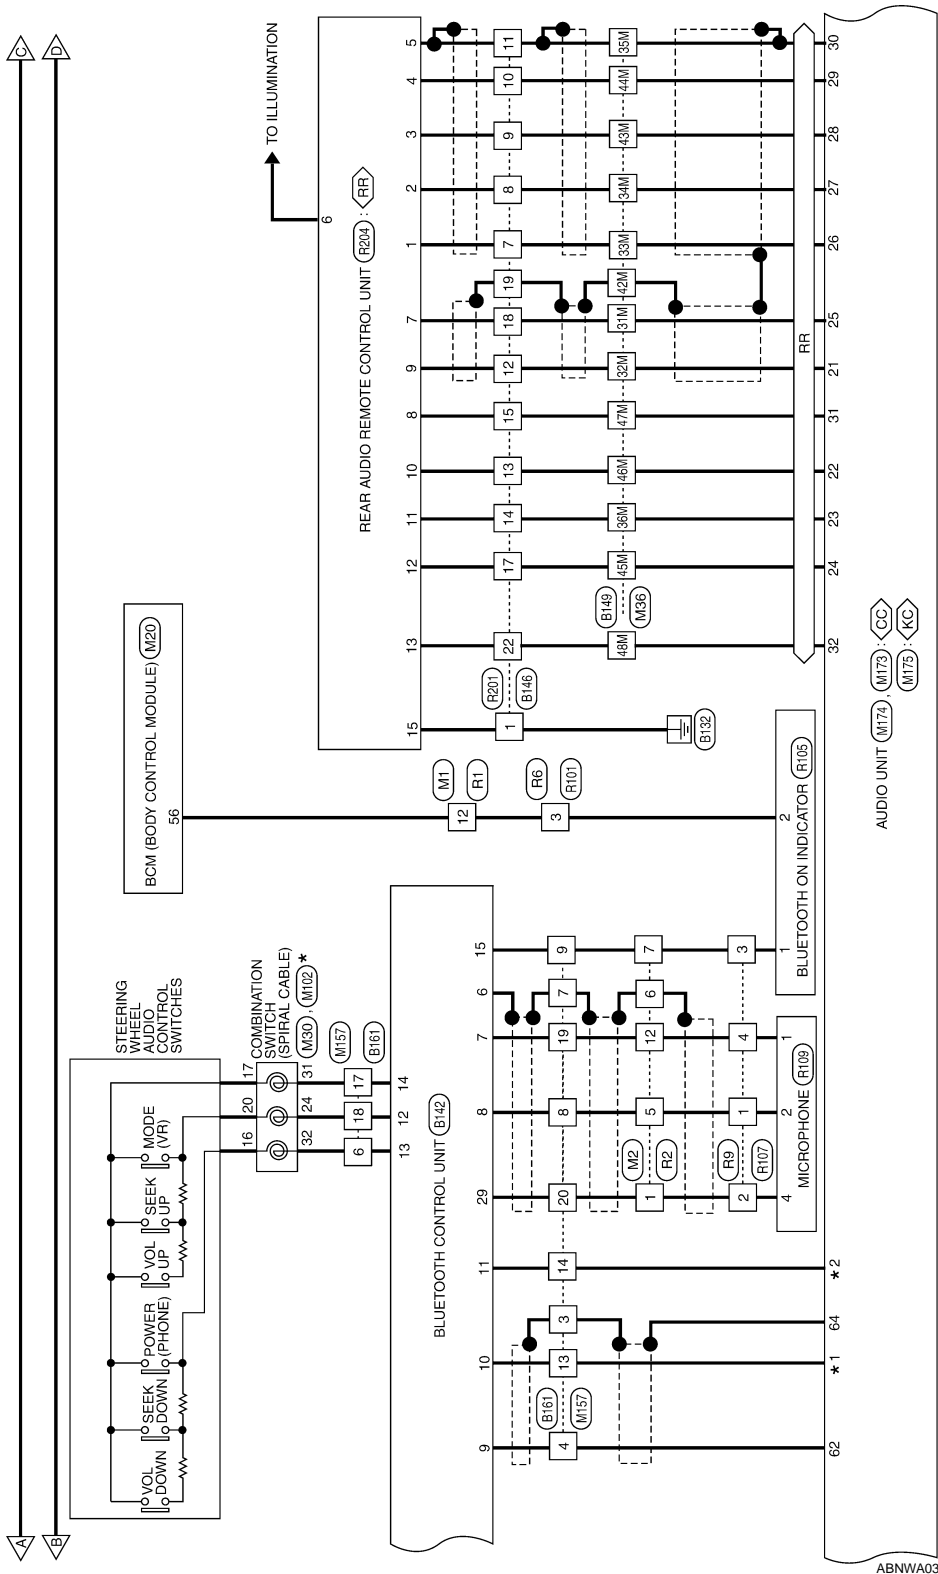

* : THIS CONNECTOR IS NOT SHOWN IN "HARNES LAYOUT" OF PG SECTION.

ABNWA0375GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


AV

AUDIO UNIT

< ECU DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

CC: CREW CAB
KC: KING CAB

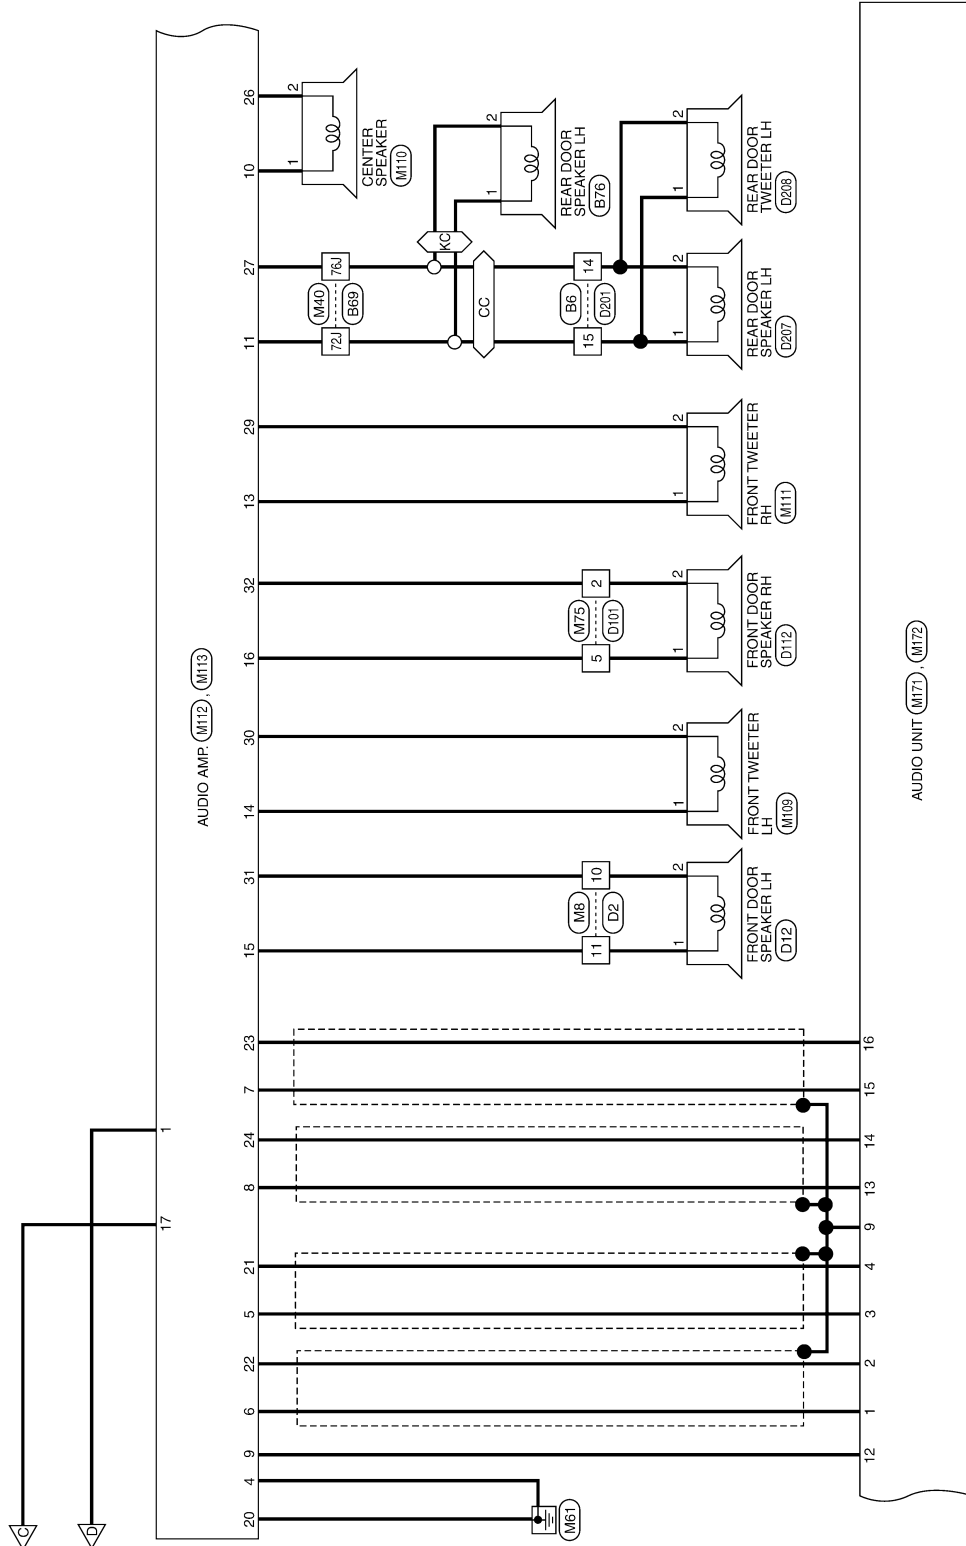


ABNWA0376GB

AUDIO UNIT

< ECU DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

CC : CREW CAB
KC : KING CAB

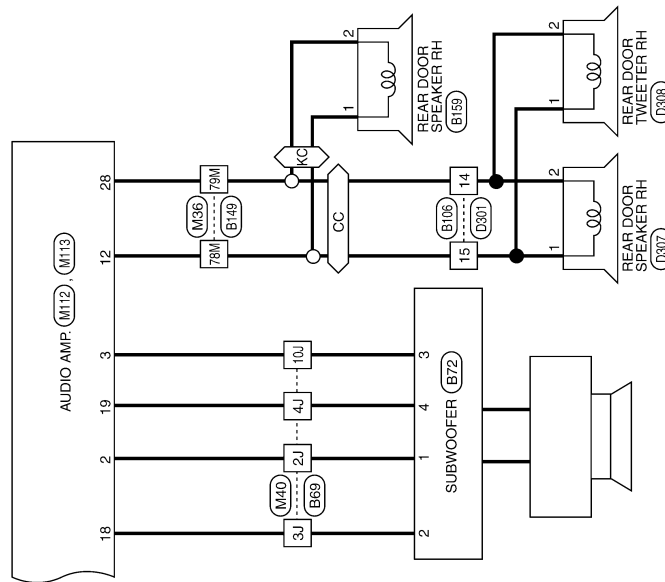


A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

ABNWA0377GB


PREMIUM AUDIO SYSTEM CONNECTORS - WITHOUT NAVIGATION SYSTEM

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
12	R/G	-

Connector No.	M2
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R/W	-
5	R/L	-
6	SHIELD	-
7	GR	-
12	B	-

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
4P	V	-
16P	Y/G	-

Connector No.	M8
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
10	L/R	-
11	L/W	-

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
56	R/G	BATTERY SAVER OUTPUT


Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
29	W/R	SPEED_OUT

Terminal No.	Color of Wire	Signal Name
72G	Y	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

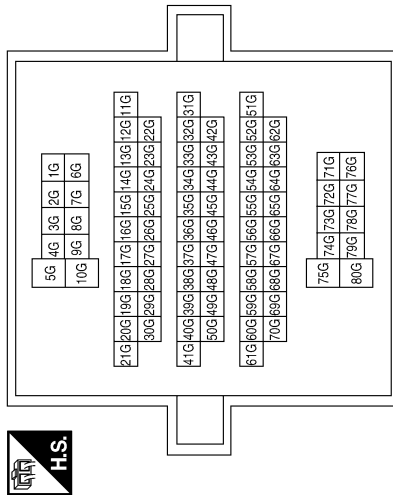

Connector No.	M30
Connector Name	COMBINATION SWITCH (WITH BLUETOOTH)
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
24	R/G	STRG SW A (UP)
31	Y/R	STRG SW C (GND)
32	G/W	STRG SW B (DOWN)

Terminal No.	Color of Wire	Signal Name
48M	V	-
78M	O/L	-
79M	R/L	-

Terminal No.	Color of Wire	Signal Name
7M	V	-
8M	Y	-
31M	LG	-
32M	V	-
33M	O	-
34M	O/L	-
35M	SHIELD	-
36M	BR/Y	-
42M	SHIELD	-
43M	W/L	-
44M	W	-
45M	L	-
46M	P	-
47M	O	-

Connector No.	M36
Connector Name	WIRE TO WIRE
Connector Color	WHITE

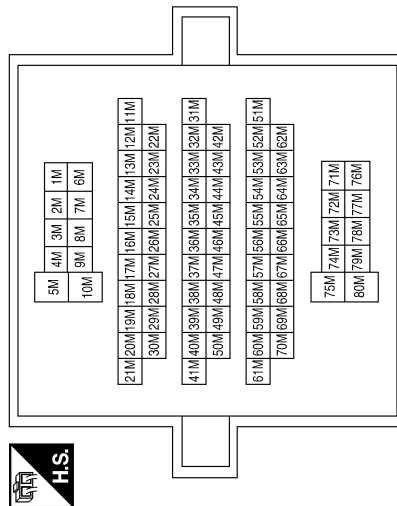


ABN1A1161GB


A B C D E F G H I J K L M AV O P

Terminal No.	Color of Wire	Signal Name
2J	W	-
3J	B	-
4J	BR	-
10J	BR/W	-
72J	SB	-
76J	B/Y	-

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	WHITE

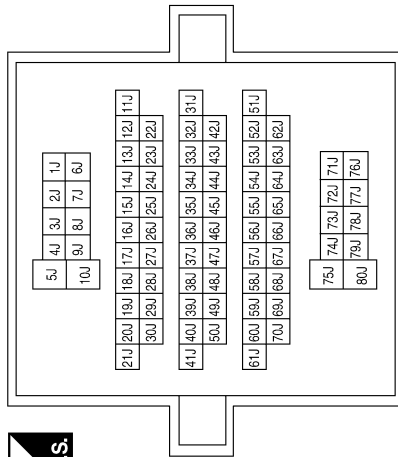

Connector No.	M39
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1Q	G/R	-

Terminal No.	Color of Wire	Signal Name
21	G	SAT LCH(-)
22	R	SAT LCH(+)
23	B	SAT RCH(-)
24	W	SAT RCH(+)
25	SHIELD	EARTH SIG
26	SHIELD	DATA EARTH
28	L	REQ1 (SAT-COMBI)
29	O/L	TXD (SAT-COMBI)
30	W/L	RXD (COMBI-SAT)
32	Y	BACKUP
36	V	ACC

Connector No.	M41
Connector Name	SATELLITE RADIO TUNER OR PRE-WIRING FOR SATELLITE RADIO TUNER
Connector Color	WHITE




ABNIA1162GB

AUDIO UNIT

< ECU DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

Connector No.	M75
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	L/B	-
5	W/B	-

Connector No.	M69
Connector Name	WIRE TO WIRE
Connector Color	VIOLET



Terminal No.	Color of Wire	Signal Name
1	B	-


Connector No.	M102
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
16	R	-
17	BR	-
20	W	-

Terminal No.	Color of Wire	Signal Name
12	V	REMOTE CONT A
13	G/O	REMOTE CONT B
14	R/B	REMOTE CONT C
16	W/B	EJECT
17	Y/B	LOAD
18	O/L	TX
19	W/L	RX
24	W/R	8 PULSE

Connector No.	M98
Connector Name	AV SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	Y	+B
2	V	ACC
3	R/L	ILL+
4	BR	ILL CONTROL
5	B	GND

ABN1A1163GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

AV

AUDIO UNIT

< ECU DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

Connector No.	M110
Connector Name	CENTER SPEAKER
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
1	L/W	-
2	L/B	-

Connector No.	M109
Connector Name	FRONT TWEETER LH
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
1	L/W	-
2	L/R	-

Connector No.	M104
Connector Name	AUX JACK
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W	AUX AUDIO RH +
2	B	AUX GND
4	R	AUX AUDIO LH +

Connector No.	M112
Connector Name	AUDIO AMP.
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	Y	BAT
2	W	WOOFER+1
3	BR/W	WOOFER+2
4	B	GND
17	Y/G	BAT
18	B	WOOFER-1
19	BR	WOOFER-2
20	B	GND

Connector No.	M111
Connector Name	FRONT TWEETER RH
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	W/B	-
2	L/B	-

ABNIA1164GB

AUDIO UNIT


< ECU DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

Terminal No.	Color of Wire	Signal Name
23	L	RR RH IN+
24	BR	RR LH IN+
25	-	-
26	L/B	CTR OUT-
27	B/Y	RR LH OUT-
28	R/L	RR RH OUT-
29	L/B	FR RH TW-
30	L/R	FR LH TW-
31	L/R	FR LH OUT-
32	L/B	FR RH OUT-

Terminal No.	Color of Wire	Signal Name
9	G/W	AMP ON
10	L/W	CTR OUT+
11	SB	RR LH OUT+
12	O/L	RR RH OUT+
13	W/B	FR RH TW+
14	L/W	FR LH TW+
15	L/W	FR LH OUT+
16	W/B	FR RH OUT+
21	Y	FR RH IN+
22	W	FR LH IN+


Connector No.	M113
Connector Name	AUDIO AMP.
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
5	BR	FR RH IN-
6	B	FR LH IN-
7	BW	RR RH IN-
8	B/R	RR LH IN-

Terminal No.	Color of Wire	Signal Name
13	R	-
14	Y	-
15	G/O	-
16	V	-
17	Y/R	-
18	R/G	-
19	B	-
20	R/W	-

Connector No.	M157
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	G/R	-
3	SHIELD	-
4	G	-
5	R/B	-
6	G/W	-
7	SHIELD	-
8	R/L	-
9	GR	-
12	W/R	-

Connector No.	M129
Connector Name	SATELLITE RADIO TUNER
Connector Color	VIOLET



Terminal No.	Color of Wire	Signal Name
37	B	-

ABNIA1165GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


AV

AUDIO UNIT

< ECU DIAGNOSIS >


[PREMIUM WITHOUT NAVIGATION]

Connector No.	M172
Connector Name	AUDIO UNIT (WITH PREMIUM AUDIO SYSTEM, WITHOUT NAVI)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
11	-	-
12	G/W	AMP ON
13	B/R	RR SP LH-
14	BR	RR SP LH+
15	B/W	RR SP RH-
16	L	RR SP RH+

Connector No.	M171
Connector Name	AUDIO UNIT (WITH PREMIUM AUDIO SYSTEM, WITHOUT NAVI)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B	FR SP LH-
2	W	FR SP LH+
3	BR	FR SP RH-
4	Y	FR SP RH+
5	-	-
6	Y	BACK UP
7	BR	ILL CONT
8	R/L	LIGHT SW
9	SHIELD	CASE GND
10	V	ACC

Connector No.	M170
Connector Name	AUDIO UNIT (WITH PREMIUM AUDIO SYSTEM, WITHOUT NAVI)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
41	G	L(-)
42	R	L(+)
43	B	R(-)
44	W	R(+)
45	SHIELD	EARTH
46	SHIELD	DATA EARTH
47	-	-
48	L	REQ (CD-COMBI)
49	O/L	RX (CD-COMBI)
50	W/L	TX (COMBI-CD)
51	-	-
52	-	-

Terminal No.	Color of Wire	Signal Name
69	W	NAVI VOICE-
70	SHIELD	NAVI VOICE GND
71	B	NAVI VOICE+
72	W/B	EJECT
73	Y/B	LOAD
74	W	AUX R+
75	R	AUX L+
76	B	AUX EARTH

Terminal No.	Color of Wire	Signal Name
61	Y	TEL SIG INPUT (-)
62	G	TEL SIG INPUT (+)
63	R	TEL SIG ON TRIG
64	SHIELD	TEL SIG GND
65	O/L	RX (DCU-H/U)
66	W/L	TX (H/U-DCU)
67	SHIELD	SHIELD
68	-	-

Connector No.	M173
Connector Name	AUDIO UNIT (WITH PREMIUM AUDIO SYSTEM, WITHOUT NAVI, CREW CAB)
Connector Color	WHITE



ABN1A1166GB

AUDIO UNIT


< ECU DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

Terminal No.	Color of Wire	Signal Name
30	SHIELD	SHIELD
31	O	ENABLE
32	V	SWITCH B (+)
33	-	-
34	-	-
35	-	-
36	-	-
37	-	-
38	-	-
39	-	-
40	-	-

Terminal No.	Color of Wire	Signal Name
21	V	REMOTE A
22	P	REMOTE B
23	BR/Y	REMOTE C
24	L	REMOTE D
25	LG	REMOTE GND
26	O	L CH OUTPUT (-)
27	O/L	L CH OUTPUT (+)
28	W/L	R CH OUTPUT (-)
29	W	R CH OUTPUT (+)


Connector No.	M174
Connector Name	AUDIO UNIT (WITH PREMIUM AUDIO SYSTEM, WITHOUT NAVI)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
69	-	-
70	-	-
71	-	-
72	W/B	EJECT
73	Y/B	LOAD
74	W	AUX R+
75	R	AUX L+
76	B	AUX EARTH

Terminal No.	Color of Wire	Signal Name
61	R	TEL SIG ON TRIG
62	G	TEL SIG INPUT (+)
63	Y	TEL SIG INPUT (-)
64	SHIELD	TEL SIG GND
65	O/L	RX (DCU-H/U)
66	W/L	TX (H/U-DCU)
67	SHIELD	SHIELD
68	-	-

Connector No.	M175
Connector Name	AUDIO UNIT (WITH PREMIUM AUDIO SYSTEM, WITHOUT NAVI, KING CAB)
Connector Color	WHITE



ABNIA1167GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

AV

AUDIO UNIT

< ECU DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

Connector No.	M350
Connector Name	WIRE TO WIRE
Connector Color	VIOLET



Terminal No.	1	Color of Wire	B	Signal Name	-
--------------	---	---------------	---	-------------	---

Connector No.	M351
Connector Name	SATELLITE RADIO ANTENNA
Connector Color	BROWN



Terminal No.	1	Color of Wire	B	Signal Name	-
--------------	---	---------------	---	-------------	---

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1G	2G	3G	4G	5G
6G	7G	8G	9G	10G

11G	12G	13G	14G	15G	16G	17G	18G	19G	20G	21G
22G	23G	24G	25G	26G	27G	28G	29G	30G		
31G	32G	33G	34G	35G	36G	37G	38G	39G	40G	41G
42G	43G	44G	45G	46G	47G	48G	49G	50G		
51G	52G	53G	54G	55G	56G	57G	58G	59G	60G	61G
62G	63G	64G	65G	66G	67G	68G	69G	70G		

71G	72G	73G	74G	75G
76G	77G	78G	79G	80G




10	9	8	7	6	5	4	3	2	1
18	17	16	15	14	13	12	11		

Terminal No.	72G	Color of Wire	Y	Signal Name	-
--------------	-----	---------------	---	-------------	---


Connector No.	B6
Connector Name	WIRE TO WIRE
Connector Color	WHITE

Terminal No.	14	Color of Wire	B/Y	Signal Name	-
	15		SB		-

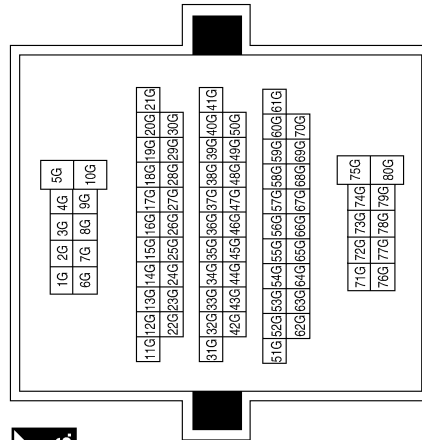

ABNIA1168GB


Connector No.	B72
Connector Name	SUBWOOFER
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	W	WOOFER+1
2	B	WOOFER-1
3	BR/W	WOOFER+2
4	BR	WOOFER-2

Terminal No.	Color of Wire	Signal Name
2J	W	-
3J	B	-
4J	BR	-
10J	BR/W	-
72J	L	-(KING CAB)
72J	SB	-(CREW CAB)
76J	Y	-(KING CAB)
76J	B/Y	-(CREW CAB)

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

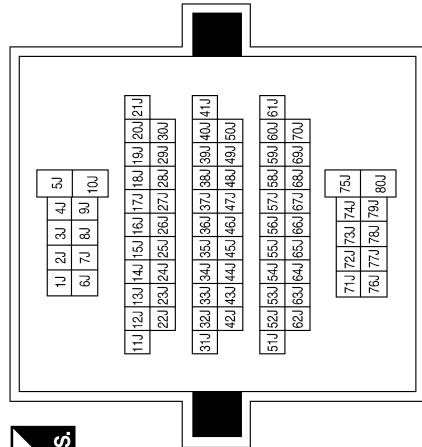

Connector No.	B106
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
14	R/L	-
15	O/L	-

Connector No.	B76
Connector Name	REAR DOOR SPEAKER LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	Y	-

ABNIA1169GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


AV

AUDIO UNIT

< ECU DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

Connector No.	B142
Connector Name	BLUETOOTH CONTROL UNIT
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	Y	BATT
2	V	ACC
3	G/R	IGN
4	B/W	GND
5	-	-
6	SHIELD	MIC SHIELD
7	B	MIC IN+
8	R/L	MIC IN-
9	G	AUDIO OUT+
10	R	AUDIO OUT-
11	Y	MUTE CONTROL
12	R/G	LADDER IN 1


Terminal No.	Color of Wire	Signal Name
13	G/W	LADDER IN 2
14	Y/R	LADDER IN GND
15	GR	LED IND 1
16	-	-
17	V	LADDER OUT 1
18	G/O	LADDER OUT 2
19	R/B	LADDER OUT GND
20	B	CONT1
21	-	-
22	-	-
23	B	CONT4
24	-	-
25	-	-
26	-	-
27	-	-
28	W/R	SPEED SIGNAL
29	R/W	MIC POWER
30	-	-
31	-	-
32	-	-

Connector No.	B143
Connector Name	BLUETOOTH ANTENNA
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
33	B	BT ANTENNA
34	SHIELD	BT ANTENNA SHIELD

Connector No.	B146
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	B	-
7	B	-
8	G	-
9	R	-
10	W	-
11	SHIELD	-
12	V	-

Terminal No.	Color of Wire	Signal Name
13	B	-
14	B	-
15	G	-
17	R	-
18	W	-
19	SHIELD	-
22	V	-

Terminal No.	Color of Wire	Signal Name
78M	L	— (KING CAB)
78M	O/L	— (CREW CAB)
79M	R/L	—


Terminal No.	Color of Wire	Signal Name
7M	V	—
8M	Y	—
31M	LG	—
32M	V	—
33M	B	—
34M	G	—
35M	SHIELD	—
36M	BR/Y	—
42M	SHIELD	—
43M	R	—
44M	W	—
45M	L	—
46M	P	—
47M	O	—
48M	V	—

Connector No.	B149
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
6	G/W	—
7	SHIELD	—
8	R/L	—
9	GR	—
12	W/R	—
13	R	—
14	Y	—
15	G/O	—
16	V	—
17	Y/R	—
18	R/G	—
19	B	—
20	R/W	—

Connector No.	B161
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	G/R	—
3	SHIELD	—
4	G	—
5	R/B	—

Connector No.	B159
Connector Name	REAR DOOR SPEAKER RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	—
2	R/L	—

ABNIA1171GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


AV

AUDIO UNIT

< ECU DIAGNOSIS >


[PREMIUM WITHOUT NAVIGATION]

Connector No.	R6
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
3	R/G	-

Connector No.	R2
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R/W	-
5	R/L	-
6	SHIELD	-
7	GR	-
12	B	-

Connector No.	R1
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
12	R/G	-

Connector No.	R105
Connector Name	BLUETOOTH ON INDICATOR
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	GR	LED 1 (AMBER)
2	R/G	LED POWER
3	R/L	DAYNIGHT ILL SIG

Connector No.	R101
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	R/G	-

Connector No.	R9
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R/L	-
2	R/W	-
3	GR	-
4	B	-


ABNIA1172GB

AUDIO UNIT

< ECU DIAGNOSIS >


[PREMIUM WITHOUT NAVIGATION]

Connector No.	R107
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	R/L	-
2	R/W	-
3	GR	-
4	B	-

Connector No.	R109
Connector Name	MICROPHONE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	B	MIC OUT (+)
2	R/L	MIC OUT (-)
4	R/W	MIC POWER

Connector No.	R201
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	B	-
7	B	-
8	G	-
9	R	-
10	W	-
11	SHIELD	-
12	V	-
13	P	-
14	BR/Y	-
15	O	-
17	L	-
18	LG	-
19	SHIELD	-
22	V	-

Connector No.	R204
Connector Name	REAR AUDIO REMOTE CONTROL UNIT
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B	L CH INPUT-
2	G	L CH INPUT+
3	R	R CH INPUT-
4	W	R CH INPUT+
5	SHIELD	SHIELD
6	R/L	ILL
7	LG	REMOTE GND
8	O	ENABLE

Terminal No.	Color of Wire	Signal Name
9	V	REMOTE A
10	P	REMOTE B
11	BR/Y	REMOTE C
12	L	REMOTE D
13	V	SWITCH +B
14	-	-
15	B	GND
16	-	-

ABNIA1173GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P




AUDIO UNIT

< ECU DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	L/B	-
5	W/B	-

Connector No.	D12
Connector Name	FRONT DOOR SPEAKER LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L/W	-
2	L/R	-

Connector No.	D2
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
10	L/R	-
11	L/W	-

Connector No.	D207
Connector Name	REAR DOOR SPEAKER LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	SB	-
2	B/Y	-

Connector No.	D201
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
14	B/Y	-
15	SB	-

Connector No.	D112
Connector Name	FRONT DOOR SPEAKER RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W/B	-
2	L/B	-

ABNIA1174GB

AUDIO UNIT

< ECU DIAGNOSIS >


[PREMIUM WITHOUT NAVIGATION]

Connector No.	D307
Connector Name	REAR DOOR SPEAKER RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	O/L	-
2	R/L	-

Connector No.	D301
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
14	R/L	-
15	O/L	-

Connector No.	D208
Connector Name	REAR DOOR TWEETER LH
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	SB	-
2	B/Y	-

Connector No.	D308
Connector Name	REAR DOOR TWEETER RH
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	O/L	-
2	R/L	-

ABN1A1175GB

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

SATELLITE RADIO TUNER


< ECU DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

SATELLITE RADIO TUNER

Reference Value

INFOID:000000005387631

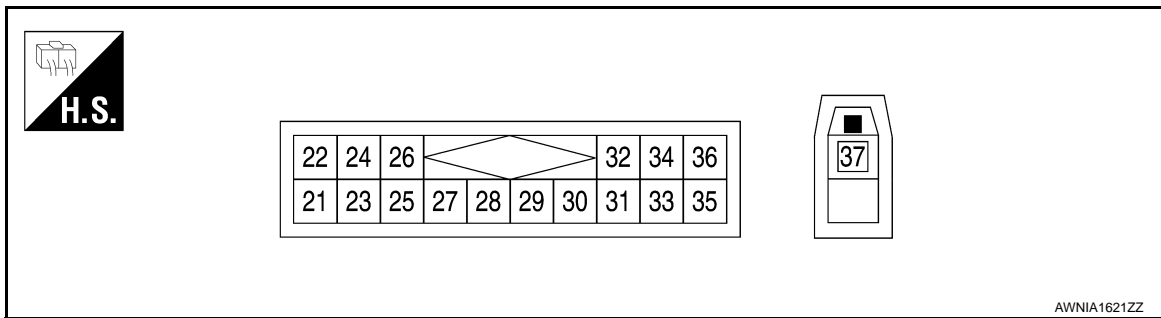


PHYSICAL VALUES

Terminal		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/Output			
22 (R)	21 (G)	Satellite radio sound signal LH	Output	Ignition switch ON	When satellite radio mode is selected	 <small>SKIB3609E</small>
24 (W)	23 (B)	Satellite radio sound signal RH	Output	Ignition switch ON	When satellite radio mode is selected	 <small>SKIB3609E</small>
25	—	Shield	—	—	—	—
26	—	Shield	—	—	—	—
28 (L)	Ground	Request signal (SAT→CONT)	Output	Ignition switch ON	When satellite radio mode is selected	 <small>SKIA9299J</small>
29 (O/L)	Ground	Communication signal (SAT→CONT)	Output	Ignition switch ON	When satellite radio mode is selected	 <small>SKIA9300J</small>

SATELLITE RADIO TUNER

< ECU DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

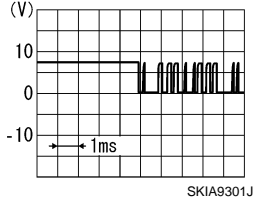Terminal		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/Output			
30 (W/L)	Ground	Communication signal (CONT→SAT)	Input	Ignition switch ON	When satellite radio mode is selected	
32 (Y)	Ground	Battery power supply	Input	Ignition switch OFF	—	Battery voltage
36 (V)	Ground	ACC power supply	Input	Ignition switch ACC	—	Battery voltage
37 (B)	—	Satellite antenna	Input	—	—	—

A
B
C
D
E
F
G
H
I
J
K
L
M

AV

O
P

AUDIO AMP

< ECU DIAGNOSIS >


[PREMIUM WITHOUT NAVIGATION]

AUDIO AMP

Reference Value

INFOID:000000005387633

TERMINAL LAYOUT

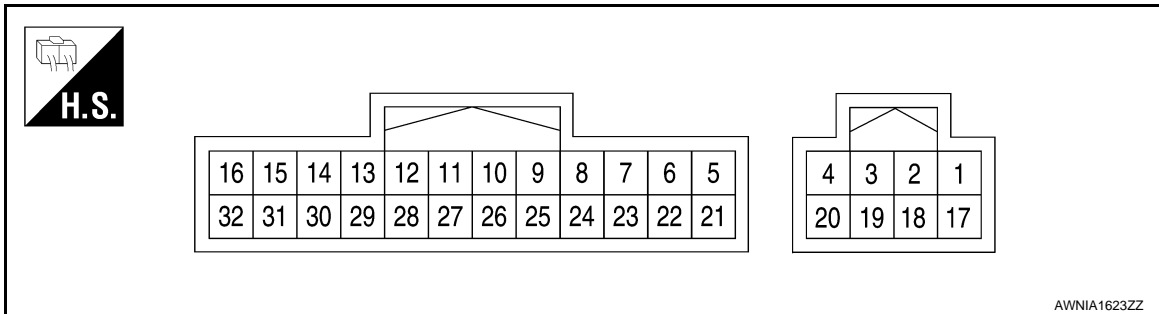







PHYSICAL VALUES

Terminal (wire color)		Item	Signal input/ output	Condition		Reference value (Approx.)
+	-					
1 (Y)	Ground	Battery	Input	-	-	Battery voltage
2 (W)	18 (B)	Subwoofer	Output	Ignition switch ON	Receive audio sig- nal	
3 (BR/W)	19 (BR)	Subwoofer	Output	Ignition switch ON	Receive audio sig- nal	
4 (B)	Ground	Ground	-	Ignition switch ON	-	-
9 (G/W)	Ground	Amp. ON signal	Input	Ignition switch ON	-	More than 6.5V
10 (L/W)	26 (L/B)	Center speaker	Output	Ignition switch ON	Receive audio sig- nal	

AUDIO AMP

< ECU DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

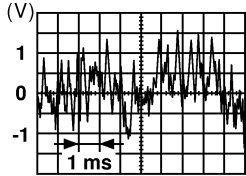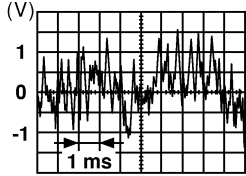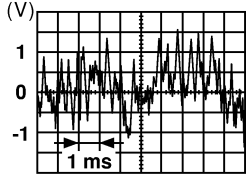
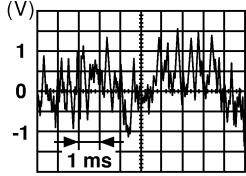
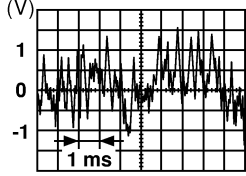
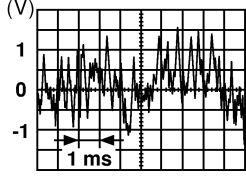
Terminal (wire color)		Item	Signal input/ output	Condition		Reference value (Approx.)
+	-					
11 (SB)	27 (B/Y)	Rear door speaker LH and rear door tweeter LH	Output	Ignition switch ON	Receive audio signal	 <p style="text-align: right; font-size: small;">SKIA0177E</p>
12 (O/L)	28 (R/L)	Rear door speaker RH and rear door tweeter RH	Output	Ignition switch ON	Receive audio signal	 <p style="text-align: right; font-size: small;">SKIA0177E</p>
13 (W/B)	29 (L/B)	Front door tweeter RH	Output	Ignition switch ON	Receive audio signal	 <p style="text-align: right; font-size: small;">SKIA0177E</p>
14 (L/W)	30 (L/R)	Front tweeter LH	Output	Ignition switch ON	Receive audio signal	 <p style="text-align: right; font-size: small;">SKIA0177E</p>
15 (L/W)	31 (L/R)	Front door speaker LH	Output	Ignition switch ON	Receive audio signal	 <p style="text-align: right; font-size: small;">SKIA0177E</p>
16 (W/B)	32 (L/B)	Front door speaker RH	Output	Ignition switch ON	Receive audio signal	 <p style="text-align: right; font-size: small;">SKIA0177E</p>
17 (Y/G)	Ground	Battery	Input	-	-	Battery voltage
20 (B)	Ground	Ground	-	Ignition switch ON	-	-

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

AUDIO AMP

< ECU DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

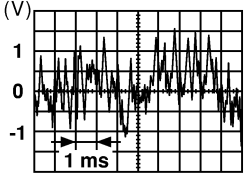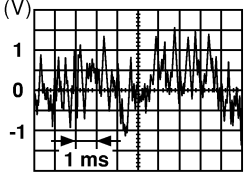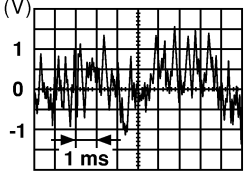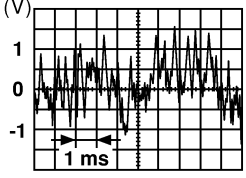Terminal (wire color)		Item	Signal input/ output	Condition		Reference value (Approx.)
+	-					
21 (Y)	5 (BR)	Audio sound sig- nal front RH	Input	Ignition switch ON	Receive audio sig- nal	 <p style="text-align: right; font-size: small;">SKIA0177E</p>
22 (W)	6 (B)	Audio sound sig- nal front LH	Input	Ignition switch ON	Receive audio sig- nal	 <p style="text-align: right; font-size: small;">SKIA0177E</p>
23 (L)	7 (B/W)	Audio sound sig- nal rear RH	Input	Ignition switch ON	Receive audio sig- nal	 <p style="text-align: right; font-size: small;">SKIA0177E</p>
24 (BR)	8 (B/R)	Audio sound sig- nal rear LH	Input	Ignition switch ON	Receive audio sig- nal	 <p style="text-align: right; font-size: small;">SKIA0177E</p>

BLUETOOTH CONTROL UNIT

< ECU DIAGNOSIS >


[PREMIUM WITHOUT NAVIGATION]

BLUETOOTH CONTROL UNIT

Reference Value

INFOID:000000005387634

TERMINAL LAYOUT

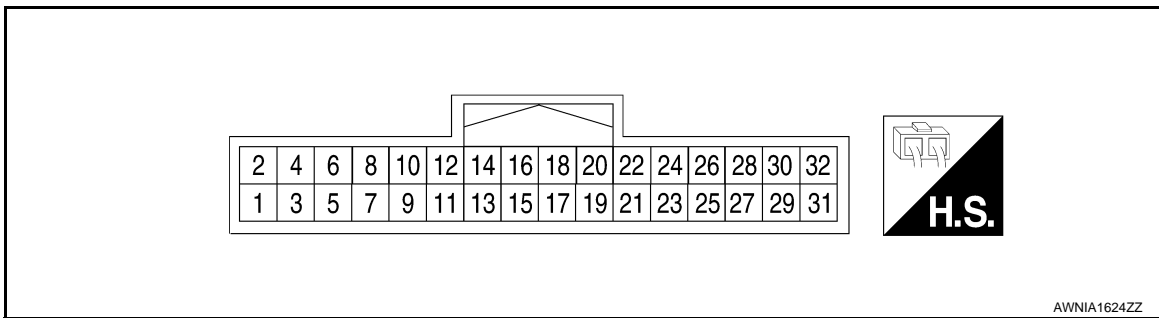








PHYSICAL VALUES

Terminal (wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/output			
1 (Y)	Ground	Battery power	Input	-	-	Battery voltage
2 (V)	Ground	ACC power	Input	Ignition switch ACC/ON	-	Battery voltage
3 (G/R)	Ground	IGN power	Input	Ignition switch ON/ START	-	Battery voltage
4 (B/W)	Ground	Ground	-	Ignition switch ON	-	0V
6	-	Shield	-	-	-	-
7 (B)	8 (R/L)	MIC in signal	Input	-	-	-
9 (G)	10 (R)	Audio out	Output	Ignition switch ACC/ON	Bluetooth control unit sends audio signal	<p>SKIB3609E</p>
11 (Y)	-	Mute control	-	-	-	-
12 (R/G)	14 (Y/R)	Steering switch signal A	Input	Ignition switch ON	Pressing switch	0V
					Pressing switch	0.75
					Pressing VOL up switch	2V
					Except for above	5V

BLUETOOTH CONTROL UNIT

[PREMIUM WITHOUT NAVIGATION]

< ECU DIAGNOSIS >

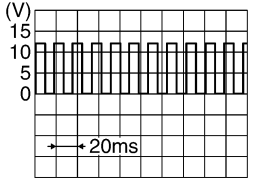Terminal (wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ output			
13 (G/W)	14 (Y/R)	Steering switch signal B	Input	Ignition switch ON	Pressing  switch	0V
					Pressing  switch	0.75V
					Pressing VOL down switch	2V
					Except for above	5 V
15 (GR)	Ground	LED power	Output	Ignition switch ON	-	Battery voltage
17 (V)	19 (R/B)	Steering switch signal A	Output	Ignition switch ON	Pressing  switch	0V
					Pressing  switch	0.75
					Pressing VOL up switch	2V
					Except for above	5V
18 (G/O)	19 (R/B)	Steering switch signal B	Output	Ignition switch ON	Pressing  switch	0V
					Pressing  switch	0.75V
					Pressing VOL down switch	2V
					Except for above	5V
20 (B)	Ground	Ground	-	-	-	0V
23 (B)	Ground	Ground	-	-	-	0V
28 (W/R)	Ground	Vehicle speed sig- nal (8-pulse)	Input	Ignition switch ON	When vehicle speed is approx. 40 km/h (25 MPH)	 <p style="text-align: right; font-size: small;">PKIA1935E</p>
29 (R/W)	Ground	Microphone power	Output	Ignition switch ON	-	5V

AUDIO SYSTEM

< SYMPTOM DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

SYMPTOM DIAGNOSIS

AUDIO SYSTEM

Symptom Table

INFOID:000000005387635

AUDIO SYSTEM

Symptom	Possible cause	Reference page
Inoperative	<ul style="list-style-type: none"> Audio unit power circuit Audio unit 	<ul style="list-style-type: none"> AV-87 AV-155
Steering switch does not operate	<ul style="list-style-type: none"> Steering switch Audio unit 	<ul style="list-style-type: none"> AV-111 AV-87
All speakers do not sound	<ul style="list-style-type: none"> Audio unit Audio unit power circuit Audio amp. ON signal Audio amp. power/ground circuit Audio amp. 	<ul style="list-style-type: none"> AV-87 AV-87 AV-110 AV-89 AV-163
One or several speakers do not sound	<ul style="list-style-type: none"> Front door speaker Front tweeter Center speaker Rear door speaker Rear door tweeter (crew cab) Subwoofer 	<ul style="list-style-type: none"> AV-93 AV-96 AV-99 AV-101 AV-104 AV-107

CD

Symptom	Possible cause	Reference page
CD cannot be inserted.	Audio unit	AV-87
CD cannot be ejected.		
The CD cannot be played.		
The sound skips, stops suddenly, or is distorted.		

SATELLITE RADIO

Symptom	Possible cause	Reference page
Inoperative	<ul style="list-style-type: none"> Satellite radio tuner power or ground circuit Satellite radio tuner communication circuit Satellite radio tuner 	<ul style="list-style-type: none"> AV-88 AV-113 AV-155
Right or left channel does not sound	<ul style="list-style-type: none"> Satellite radio tuner right channel audio signal circuit Satellite radio tuner left channel audio signal circuit Satellite radio tuner 	<ul style="list-style-type: none"> AV-155

HANDS-FREE PHONE

Symptom	Possible cause	Reference page
Inoperative	<ul style="list-style-type: none"> Bluetooth control unit power and ground circuit Bluetooth control unit 	<ul style="list-style-type: none"> AV-90 AV-86
Steering switch does not operate	<ul style="list-style-type: none"> Steering switch Bluetooth control unit 	<ul style="list-style-type: none"> AV-111 AV-86
Voice activated control does not operate	<ul style="list-style-type: none"> Microphone Steering switch Bluetooth control unit 	<ul style="list-style-type: none"> AV-118 AV-111 AV-86

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[PREMIUM WITHOUT NAVIGATION]

NORMAL OPERATING CONDITION

Description

INFOID:000000005387636

The majority of the audio concerns are the result of outside causes (bad CD, electromagnetic interference, etc.).

NOISE

The following noise results from variations in field strength, such as fading noise and multi-path noise, or external noise from trains and other sources. It is not a malfunction.

- Fading noise: This noise occurs because of variations in the field strength in a narrow range due to mountains or buildings blocking the signal.
- Multi-path noise: This noise results from the waves sent directly from the broadcast station arriving at the antenna at a different time from the waves which reflect off mountains or buildings.

The vehicle itself can be a source of noise if noise prevention parts or electrical equipment is malfunctioning. Check if noise is caused and/or changed by engine speed, ignition switch turned to each position, and operation of each piece of electrical equipment, and determine the cause.

NOTE:

The source of the noise can be found easily by listening to the noise while removing the fuses of electrical components, one by one.

Type of Noise and Possible Cause

Occurrence condition		Possible cause
Occurs only when engine is ON.	A continuous growling noise occurs. The speed of the noise varies with changes in the engine speed.	<ul style="list-style-type: none">• Ignition components
The occurrence of the noise is linked with the operation of the fuel pump.		<ul style="list-style-type: none">• Fuel pump condenser
Noise only occurs when various electrical components are operating.	A cracking or snapping sound occurs with the operation of various switches.	<ul style="list-style-type: none">• Relay malfunction, audio unit malfunction
	The noise occurs when various motors are operating.	<ul style="list-style-type: none">• Motor case ground• Motor
The noise occurs constantly, not just under certain conditions.		<ul style="list-style-type: none">• Rear defogger coil malfunction (crew cab)• Open circuit in printed heater• Poor ground of antenna feeder line
A cracking or snapping sound occurs while the vehicle is being driven, especially when it is vibrating excessively.		<ul style="list-style-type: none">• Ground wire of body parts• Ground due to improper part installation• Wiring connections or a short circuit

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005387637

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P


AV

PREPARATION

PREPARATION

Commercial Service Tools

INFOID:000000005387638

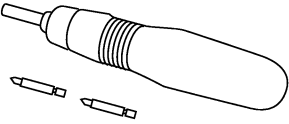Tool name	Description
<p>Power tool</p>  <p>PBIC0191E</p>	<p>Loosening bolts and nuts</p>

ON-VEHICLE REPAIR

AUDIO UNIT


Removal and Installation

INFOID:000000005387639

AUDIO UNIT

Removal

1. Disconnect the battery negative terminal.
2. Remove the cluster lid C. Refer to [JP-14. "Removal and Installation"](#).
3. Remove the audio unit screws (A), using power tool.
4. Pull out the audio unit (1) and disconnect the audio unit connectors.

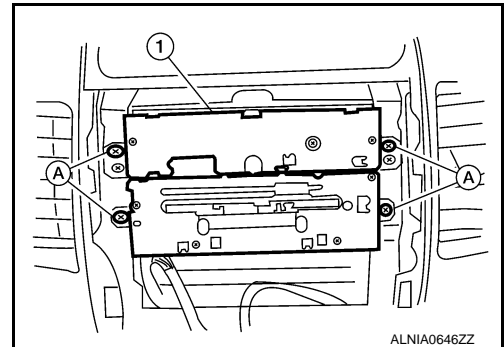


Installation

Installation is in the reverse order of removal.

AV SWITCH

Removal

1. Disconnect battery negative terminal.
2. Remove the cluster lid C. Refer to [JP-14. "Removal and Installation"](#).
3. Remove the AV switch screws.
4. Carefully remove the AV switch.

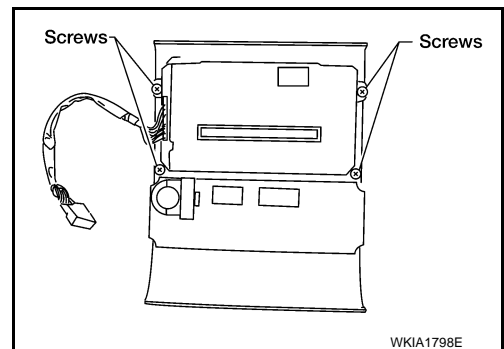

Installation

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M

AV

O
P

FRONT TWEETER


Removal and Installation

INFOID:000000005387640

FRONT TWEETER

Removal

1. Remove the front tweeter grille. Refer to [IP-11, "Removal and Installation"](#).
2. Remove the front tweeter clips (C103) (A).
3. Disconnect the front tweeter connector and remove the front tweeter (1).

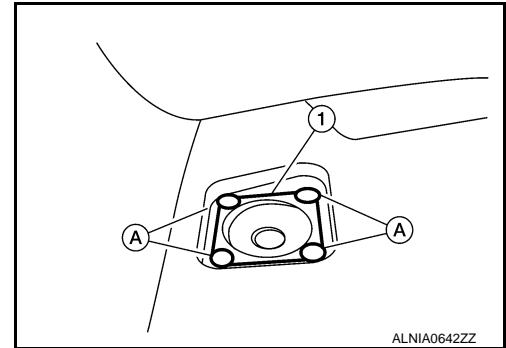

Installation

Installation is in the reverse order of removal.

CENTER SPEAKER

< ON-VEHICLE REPAIR >

[PREMIUM WITHOUT NAVIGATION]

CENTER SPEAKER


Removal and Installation

INFOID:000000005714031

CENTER SPEAKER

Removal

1. Remove the center console. Refer to [IP-18, "Removal and Installation"](#).
2. Remove the cluster lid D. Refer to [IP-14, "Removal and Installation"](#).
3. Remove the center speaker screws and remove the center speaker.

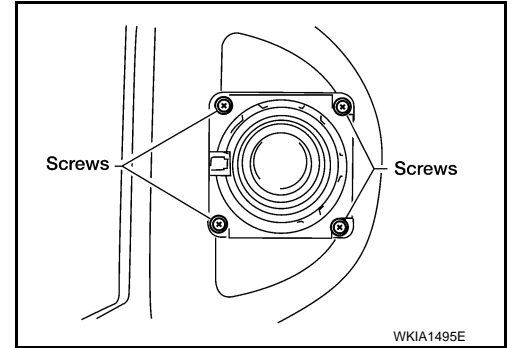

Installation

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

FRONT DOOR SPEAKER

< ON-VEHICLE REPAIR >

[PREMIUM WITHOUT NAVIGATION]

FRONT DOOR SPEAKER


Removal and Installation

INFOID:000000005387642

FRONT DOOR SPEAKER

Removal

1. Remove the front door finisher. Refer to [INT-10, "Removal and Installation"](#).
2. Remove the four front door speaker screws.
3. Disconnect the front door speaker connector and remove the front door speaker.

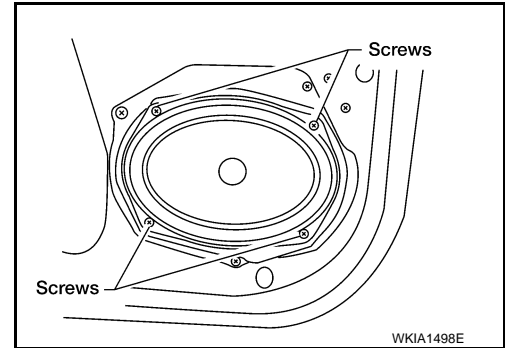

Installation

Installation is in the reverse order of removal.

REAR DOOR SPEAKER

< ON-VEHICLE REPAIR >

[PREMIUM WITHOUT NAVIGATION]

REAR DOOR SPEAKER


Removal and Installation

INFOID:000000005387643

REAR DOOR SPEAKER

Removal

1. Remove the rear door finisher. Refer to [INT-10, "Removal and Installation"](#) (Crew Cab) or [INT-10, "Removal and Installation"](#) - King Cab.
2. Remove the three rear door speaker screws and remove the rear door speaker.

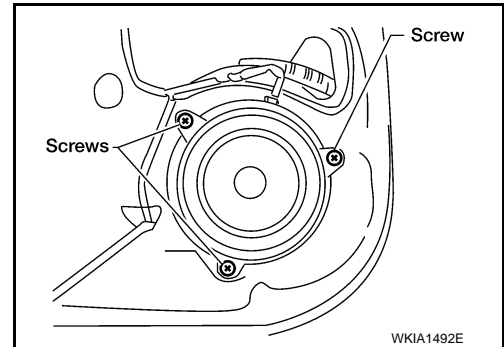


Installation

Installation is in the reverse order of removal.

REAR DOOR TWEETER

Removal

1. Remove the rear door finisher. Refer to [INT-10, "Removal and Installation"](#).
2. Remove the rear door tweeter screws and remove the rear door tweeter.
3. Disconnect the rear door tweeter connector.

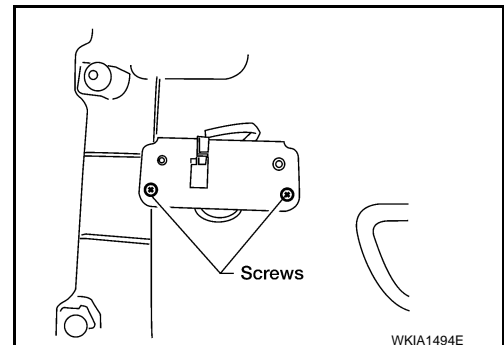

Installation

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

SUBWOOFER

< ON-VEHICLE REPAIR >

[PREMIUM WITHOUT NAVIGATION]

SUBWOOFER


Removal and Installation

INFOID:000000005387644

SUBWOOFER

Removal

1. Remove the front seat LH. Refer to [SE-30, "Removal and Installation"](#).
2. Disconnect the subwoofer connector (B).
 - ⇐: Vehicle front
3. Remove the subwoofer bolts (A).
4. Remove the subwoofer (1).

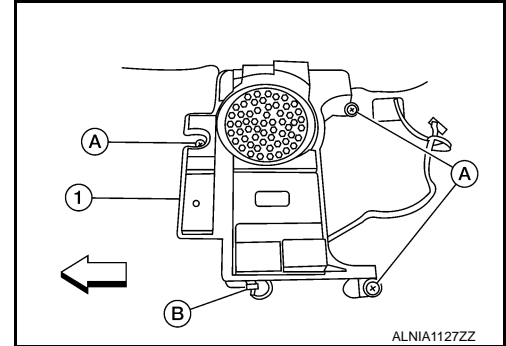

Installation

Installation is in the reverse order of removal.

STEERING SWITCH

< ON-VEHICLE REPAIR >

[PREMIUM WITHOUT NAVIGATION]

STEERING SWITCH


Removal and Installation

INFOID:000000005387645

STEERING WHEEL AUDIO CONTROL SWITCHES

Removal

1. Remove the steering wheel. Refer to [ST-11, "Removal and Installation"](#).
2. Remove the steering wheel rear cover screws and remove the steering wheel rear cover.
3. Remove the steering wheel switch assembly screws and remove the steering wheel switches.

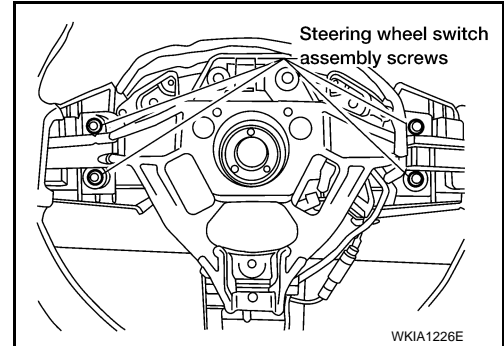

Installation

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

REAR AUDIO REMOTE CONTROL UNIT

< ON-VEHICLE REPAIR >

[PREMIUM WITHOUT NAVIGATION]

REAR AUDIO REMOTE CONTROL UNIT


Removal and Installation

INFOID:000000005387646

REAR AUDIO REMOTE CONTROL UNIT

Removal

1. Carefully remove the rear audio remote control unit from the rear roof console assembly.
CAUTION:
Wrap removal tool with clean shop cloth to prevent damage to the headliner.
2. Disconnect the connector and remove the rear audio remote control unit.

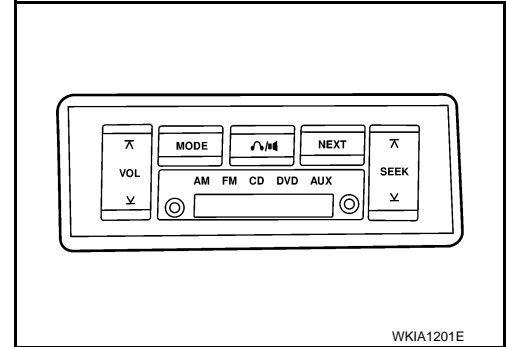

Installation

Installation is in the reverse order of removal.

AUDIO AMP.

< ON-VEHICLE REPAIR >

[PREMIUM WITHOUT NAVIGATION]


AUDIO AMP.

Removal and Installation


INFOID:000000005387648

REMOVAL

1. Remove the accelerator pedal. Refer to [ACC-3, "Removal and Installation"](#).
2. Remove the BCM. Refer to [BCS-53, "Removal and Installation"](#).
3. Disconnect the audio amp. speaker amp. connectors.
4. Remove the audio amp. speaker amp. and bracket assembly screws and slide the audio amp. speaker amp. bracket assembly down.

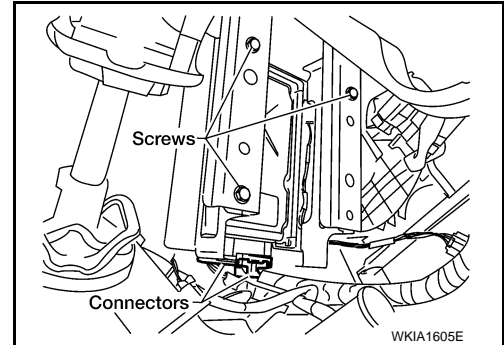

5. Remove the audio amp. speaker amp. screws (A), then remove the audio amp. speaker amp. (1).

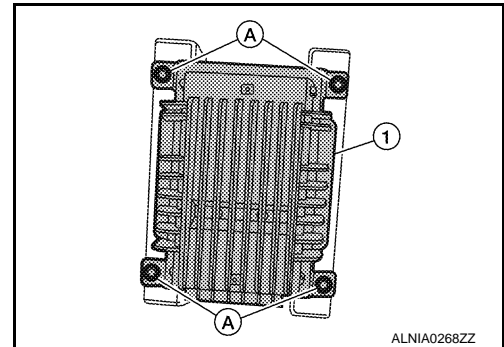

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

AUDIO ANTENNA


< ON-VEHICLE REPAIR >

[PREMIUM WITHOUT NAVIGATION]

AUDIO ANTENNA

Location of Antenna

INFOID:000000005387649

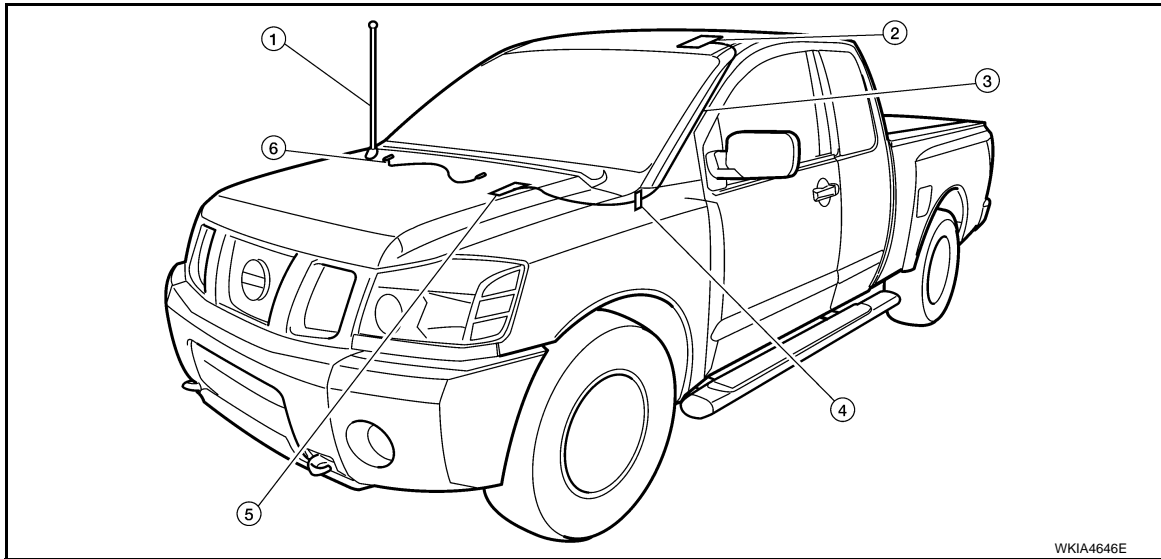

WKIA4646E

- | | | |
|--------------|--|-----------------------------|
| 1. Antenna | 2. Satellite antenna (if equipped, factory installed) M351 | 3. Satellite antenna feeder |
| 4. M69, M350 | 5. Satellite radio tuner M129 | 6. Main feeder cable |

SATELLITE RADIO ANTENNA

< ON-VEHICLE REPAIR >

[PREMIUM WITHOUT NAVIGATION]

SATELLITE RADIO ANTENNA


Removal and Installation

INFOID:000000005387650

SATELLITE RADIO ANTENNA

Removal

1. Lower the headliner. Refer to [INT-21, "Removal and Installation"](#).
2. Disconnect the satellite radio antenna connector.
3. Remove the satellite radio antenna nut.
4. Remove the satellite radio antenna.

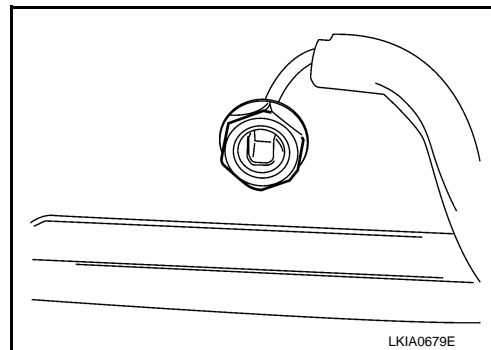

Installation

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M

AV

O
P

SATELLITE RADIO TUNER

< ON-VEHICLE REPAIR >

[PREMIUM WITHOUT NAVIGATION]

SATELLITE RADIO TUNER


Removal and Installation

INFOID:000000005387651


SATELLITE RADIO TUNER

Removal

1. Remove the accelerator pedal assembly. Refer to [ACC-3. "Removal and Installation"](#).
2. Remove the BCM. Refer to [BCS-53. "Removal and Installation"](#).
3. Disconnect the audio amp. and the satellite radio tuner connectors.
4. Remove the audio amp./satellite radio tuner bracket screws and slide the audio amp./satellite radio tuner bracket down.

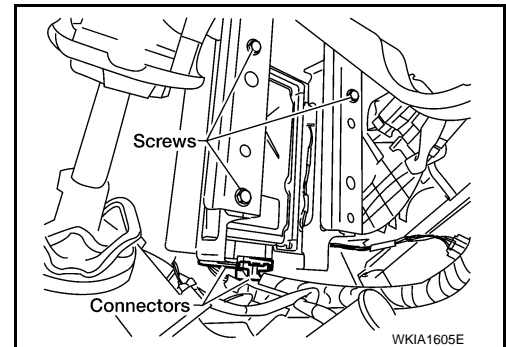

5. Remove the satellite radio tuner screws (A) and remove the satellite radio tuner from the audio amp./satellite radio tuner bracket (1).

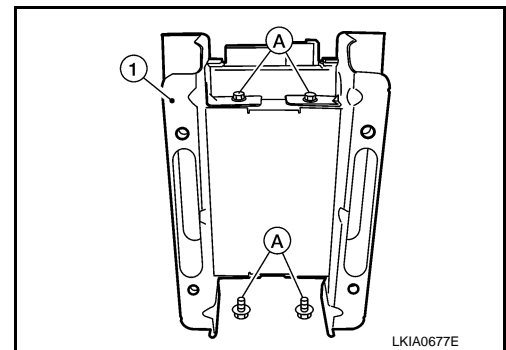

Installation

Installation is in the reverse order of removal.

MICROPHONE

< ON-VEHICLE REPAIR >

[PREMIUM WITHOUT NAVIGATION]


MICROPHONE

Removal and Installation

INFOID:000000005387652

REMOVAL

1. Remove the front roof console finisher. Refer to [IP-11. "Removal and Installation"](#).
2. Disconnect the Bluetooth microphone connector (A).
3. Detach the Bluetooth microphone (1) from the front roof console finisher and remove the Bluetooth microphone (1).

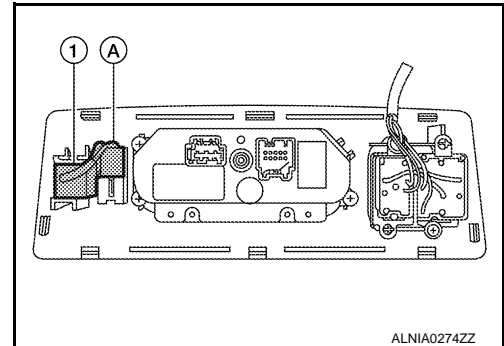

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P


TEL ANTENNA

Removal and Installation

INFOID:000000005387653

REMOVAL

1. Disconnect the battery negative terminal.
2. Slide the front passenger seat fully forward.
3. Remove the Bluetooth control unit kick shield screws and remove the Bluetooth control unit kick shield.
4. Remove the Bluetooth antenna screws (A), disconnect the Bluetooth antenna connector (B) and remove the Bluetooth antenna (1).
 - Bluetooth control unit screws (C)
 - Bluetooth control unit (2)
 - ←:Front of vehicle

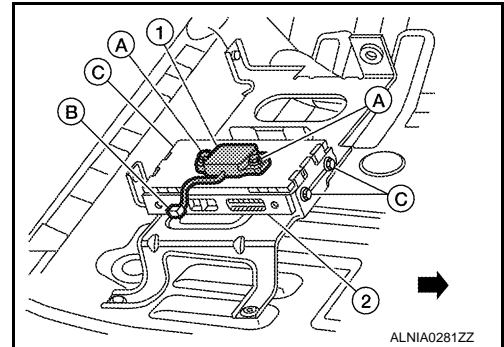

INSTALLATION

Installation is in the reverse order of removal.

BLUETOOTH CONTROL UNIT

< ON-VEHICLE REPAIR >

[PREMIUM WITHOUT NAVIGATION]


BLUETOOTH CONTROL UNIT

Removal and Installation

INFOID:000000005387654

REMOVAL

1. Disconnect the negative battery terminal.
2. Slide the front passenger seat fully forward.
3. Remove the Bluetooth control unit kick shield screws and remove the Bluetooth control unit kick shield.
4. Remove the Bluetooth control unit screws (C), disconnect the Bluetooth control unit connectors and remove the Bluetooth control unit (2).
 - Bluetooth antenna (1)
 - Bluetooth antenna screws (A)
 - Bluetooth antenna connector (B)
 - ←:Front of vehicle

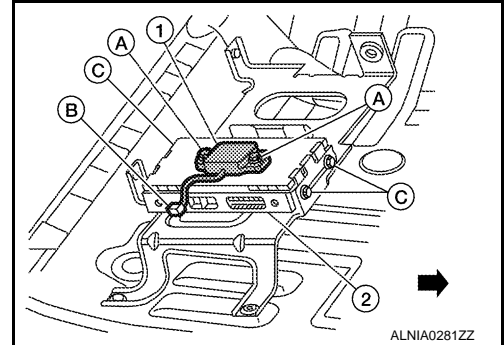

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M

AV

O
P


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000005387655

OVERALL SEQUENCE

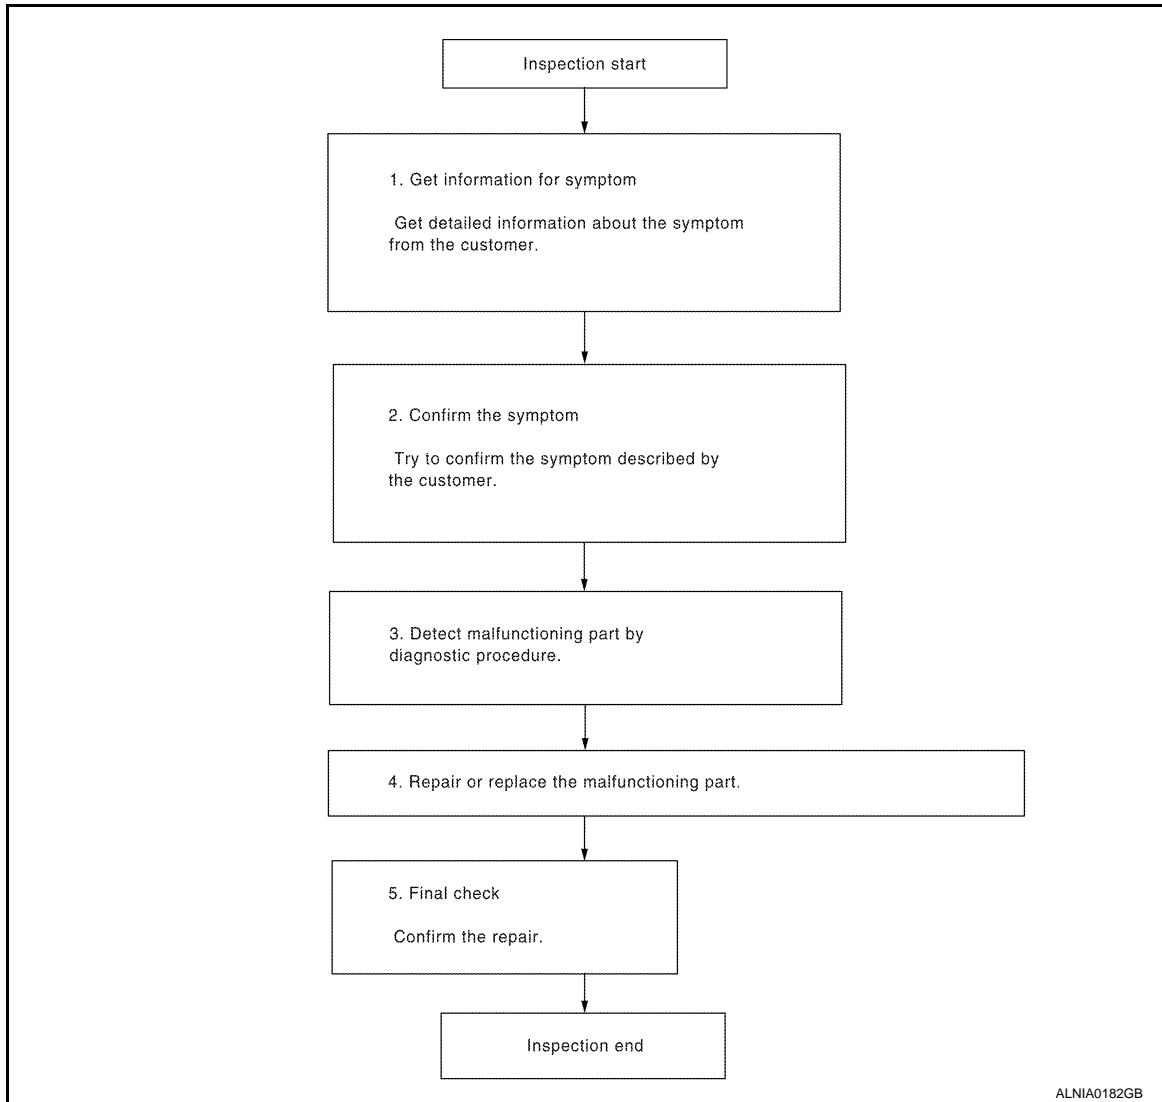

DETAILED FLOW

1.GET INFORMATION FOR SYMPTOM

Get detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred).

>> GO TO 2.

2.CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer. Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 3.

3.DETECT MALFUNCTIONING PART BY DIAGNOSTIC PROCEDURE

Inspect according to Diagnostic Procedure of the system.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[PREMIUM WITH NAVIGATION]

Is malfunctioning part detected?

YES >> GO TO 4.

NO >> GO TO 2.

4.REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnostic Procedure.

>> GO TO 5.

5.FINAL CHECK

Refer to confirmed symptom in step 2, and make sure that the symptom is not detected.

Was the repair confirmed?

YES >> Inspection End.

NO >> GO TO 2.

A

B

C

D

E

F

G

H

I

J

K

L

M

AV

O


P

FUNCTION DIAGNOSIS

AUDIO SYSTEM

System Diagram

INFOID:000000005387656

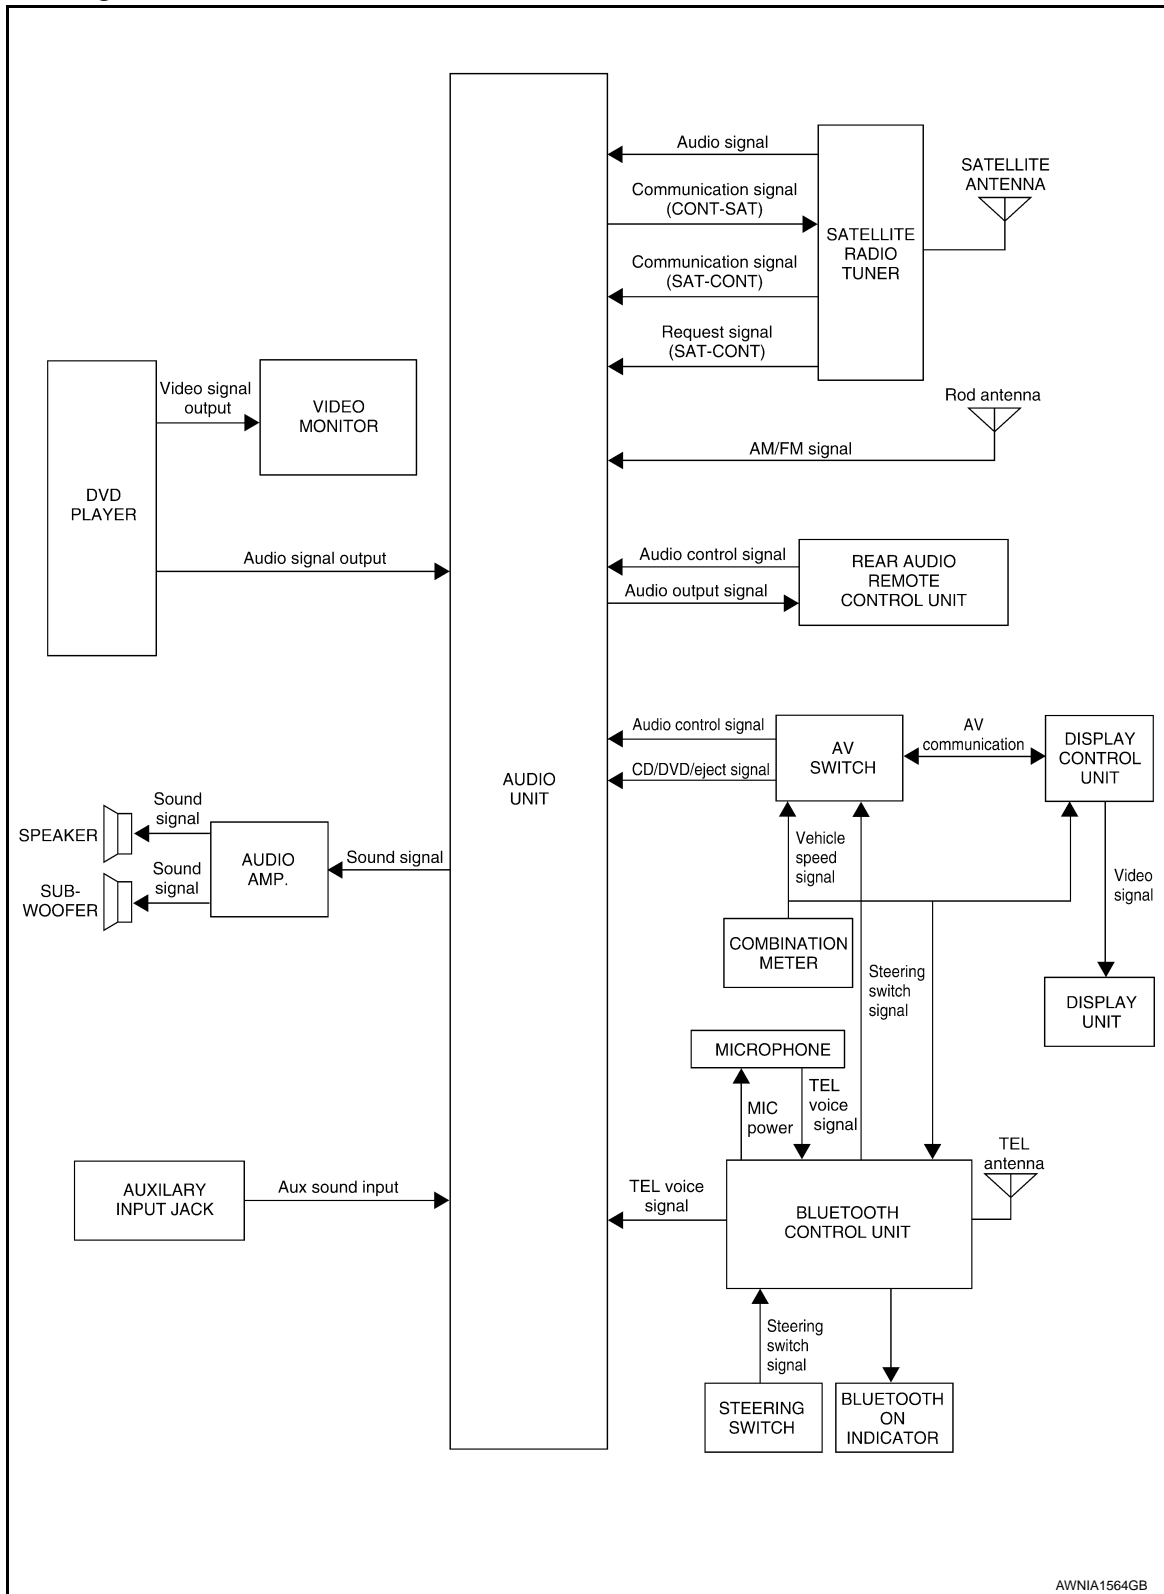

AWNIA1564GB

System Description

INFOID:000000005387657

AUDIO SYSTEM

AUDIO SYSTEM

[PREMIUM WITH NAVIGATION]

< FUNCTION DIAGNOSIS >

The audio system consists of the following components

- Audio unit
- Display unit
- Display control unit
- Audio amp.
- Rod antenna
- Steering wheel audio control switches
- AV switch
- Rear audio remote control unit
- Front door speakers
- Front tweeters
- Center speaker
- Rear door speakers
- Rear door tweeters (crew cab)
- Subwoofer

When the audio system is on, radio signals are received by the rod antenna. The audio unit then sends audio signals to the audio amp. The audio amp. amplifies the audio signals before sending them to the front door speakers, front tweeters, center speaker, rear door speakers, rear door tweeters (crew cab) and the subwoofer.

Refer to Owner's Manual for audio system operating instructions.

SATELLITE RADIO SYSTEM

The satellite radio system consists of the following components

- Satellite antenna
- Satellite radio tuner

When the satellite radio system is on, radio signals are supplied to the satellite radio tuner from the satellite antenna. The satellite radio tuner then sends audio signals to the audio unit.

Refer to Owner's Manual for satellite radio system operating instructions.

SPEED SENSITIVE VOLUME SYSTEM

Volume level of this system goes up and down automatically in proportion to the vehicle speed. The control level can be selected by the customer. Refer to Owner's Manual for operating instructions.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV


AUDIO SYSTEM

< FUNCTION DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

Component Parts Location

INFOID:00000005387658

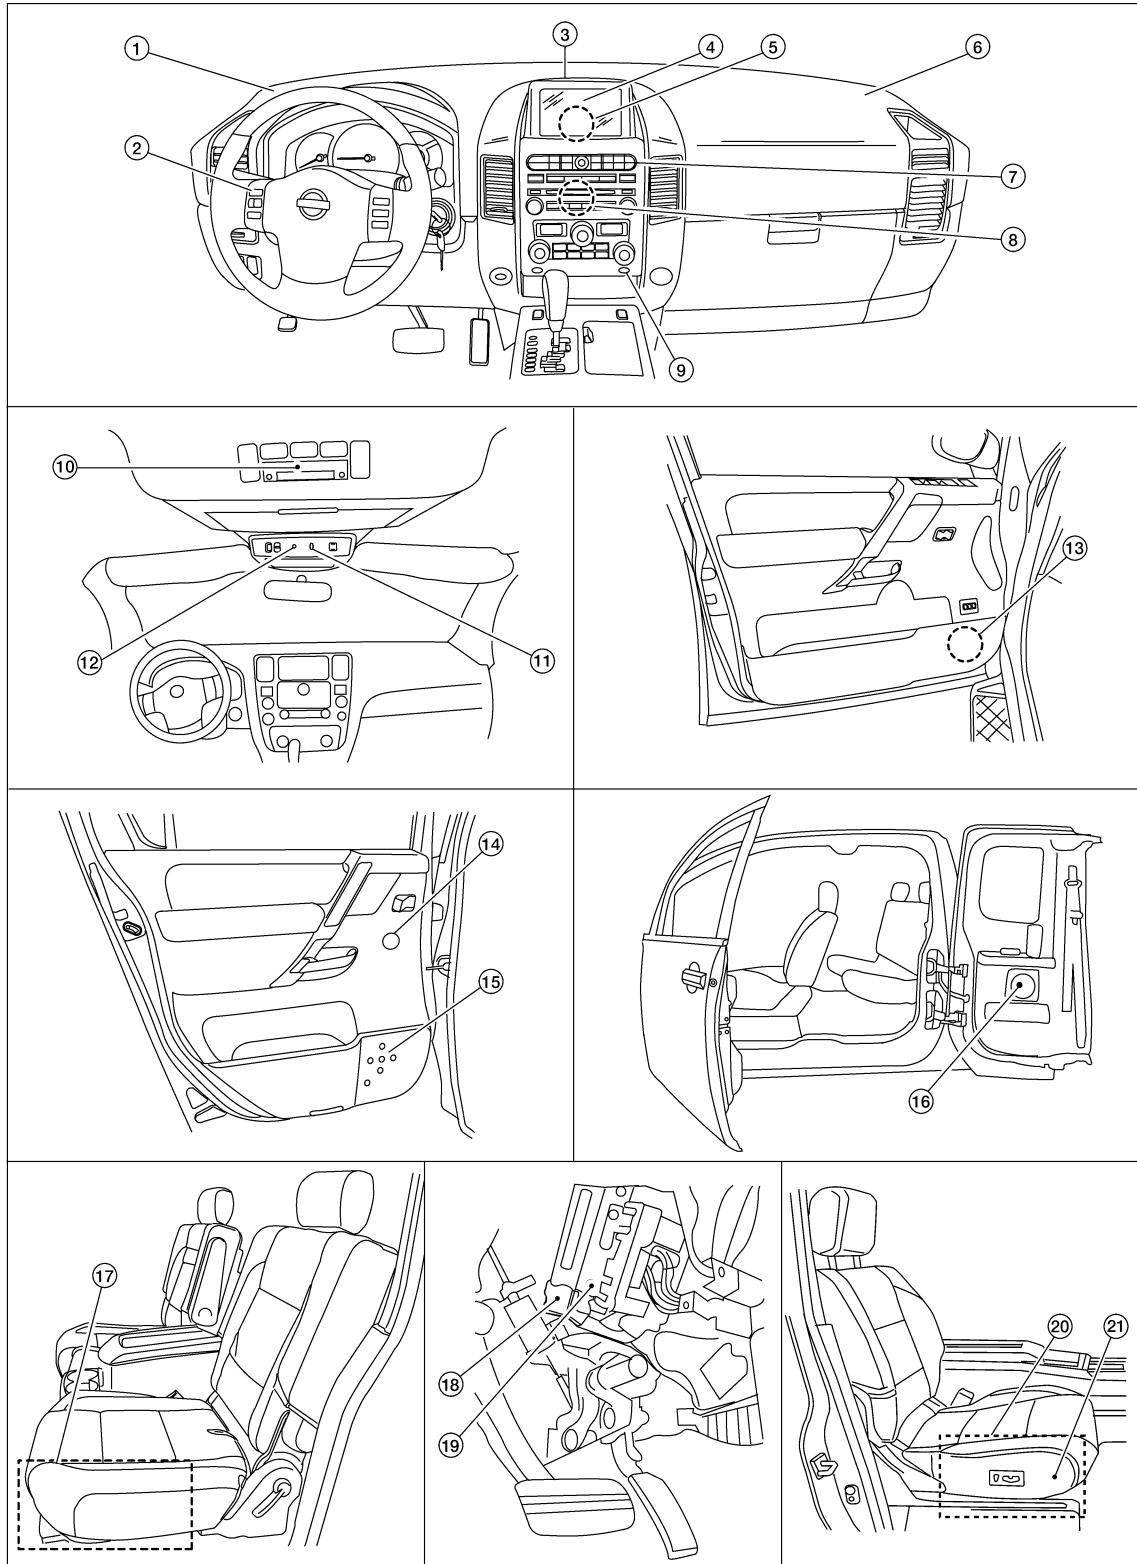

AWNIA1565ZZ

←:FRONT

- | | | |
|--------------------------|---|--------------------------|
| 1. Front tweeter LH M109 | 2. Steering wheel audio control switches | 3. Center speaker M110 |
| 4. Display unit M93 | 5. Display control unit M94, M95 | 6. Front tweeter RH M111 |
| 7. AV switch M98 | 8. Audio unit M42, M43, M44, M45 (crew cab), M46, M164 (king cab) | 9. Aux jack M104 |

AUDIO SYSTEM

< FUNCTION DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

- | | | |
|--|--|--|
| 10. Rear audio remote control unit R204
13. Front door speaker
LH D12
RH D112
16. Rear door speaker (king cab)
LH B76
RH B159
19. Satellite radio tuner M41, M129 | 11. Bluetooth ON indicator R105
14. Rear door tweeter (crew cab)
LH D208
RH D308
17. Subwoofer B72 (under driver's seat)
20. NAVI control unit B151, B152, B160
(located under passenger front seat) | 12. Microphone R109
15. Rear door speaker (crew cab)
LH D207
RH D307
18. Audio amp. M112, M113 (view behind
instrument panel above accelerator
pedal)
21. Bluetooth control unit B142, B143
(with Bluetooth) |
|--|--|--|

Component Description

INFOID:000000005387659


Part name	Description
Audio unit	Controls audio system and satellite radio system functions
Display unit	Displays all audio and navigation related information received from the display control unit
Display control unit	Receives audio and navigation related information and outputs that information to the display unit
Audio amp.	Receives power (amp ON) and audio signals from audio unit and outputs audio signals to each speaker.
Steering switches	<ul style="list-style-type: none"> • Audio operation can be operated • Steering switch signal is output to audio unit
Front door speakers	<ul style="list-style-type: none"> • Outputs audio signal from audio amp. • Outputs high, mid and low range sounds
Front tweeters	<ul style="list-style-type: none"> • Outputs audio signal from audio amp. • Outputs high range sounds
Center speaker	<ul style="list-style-type: none"> • Outputs audio signal from audio amp. • Outputs high range sounds
Rear door speakers	<ul style="list-style-type: none"> • Outputs audio signal from audio amp. • Outputs high, mid and low range sounds
Rear door tweeters (crew cab)	<ul style="list-style-type: none"> • Outputs audio signal from audio amp. • Outputs high range sounds
Subwoofer	<ul style="list-style-type: none"> • Outputs audio signal from audio amp. • Outputs low range sounds
Satellite radio tuner	<ul style="list-style-type: none"> • Receives radio signals from satellite antenna • Sends audio signals to audio unit
Satellite antenna	Audio signal (satellite radio) is received and output to audio unit.

A
B
C
D
E
F
G
H
I
J
K
L
M

AV

NAVIGATION SYSTEM

System Diagram

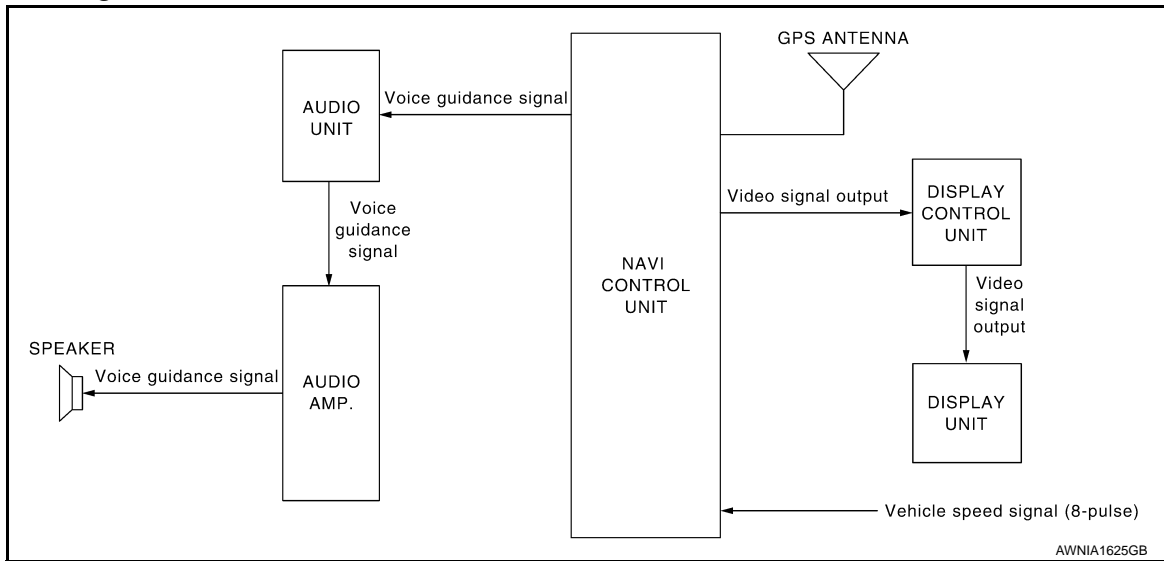

System Description

INFOID:000000005387661

NOTE:


Refer to NAVI System Owner's Manual for system operation.

The navigation system periodically calculates the vehicle's current position according to the following three signals: Travel distance of the vehicle as determined by the vehicle speed sensor, turning angle of the vehicle as determined by the gyroscope (angular velocity sensor), and the direction of vehicle travel as determined by the GPS antenna (GPS information).

The current position of the vehicle is then identified by comparing the calculated vehicle position with map data read from the map DVD-ROM, which is stored in the DVD-ROM drive (map-matching), and indicated on the screen with a current-location mark.

By comparing the vehicle position detection results found by the GPS and by map-matching, more accurate vehicle position data can be used.

The current vehicle position will be calculated by detecting the distance the vehicle moved from the previous calculation point and its direction.

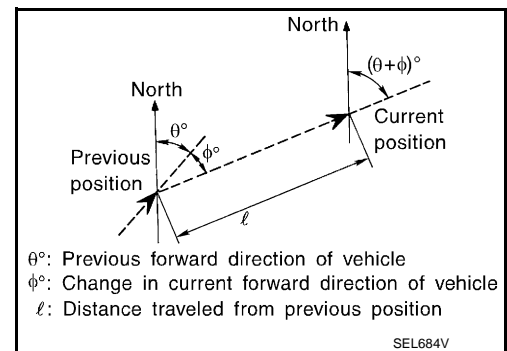

TRAVEL DISTANCE

Travel distance calculations are based on the vehicle speed input signal. Therefore, the calculation may become incorrect as the tires wear down. To prevent this, an automatic distance fine adjustment function has been adopted.

TRAVEL DIRECTION

Change in the travel direction of the vehicle is calculated by a gyroscope (angular velocity sensor) and a GPS antenna (GPS information). As the gyroscope and GPS antenna have both merit and demerit, input signals from them are prioritized in each situation. However, this order of priority may change in accordance with more detailed travel conditions so that the travel direction is detected more accurately.

Type	Advantage	Disadvantage
Gyroscope (angular velocity sensor)	<ul style="list-style-type: none"> Can detect the vehicle's turning angle quite accurately. 	<ul style="list-style-type: none"> Direction errors may accumulate when the vehicle is driven for long distances without stopping.
GPS antenna (GPS information)	<ul style="list-style-type: none"> Can detect the vehicle's travel direction (North/South/East/West). 	<ul style="list-style-type: none"> Correct direction cannot be detected when the vehicle speed is low.

MAP-MATCHING

Map-matching is a function that repositions the vehicle on the road map when a new location is judged to be the most accurate. This is done by comparing the current vehicle position, calculated by the method described in the position detection principle, with the road map data around the vehicle, read from the map DVD-ROM stored on the DVD-ROM drive.

Therefore, the vehicle position may not be corrected after the vehicle is driven over a certain distance or time in which GPS information is hard to receive. In this case, the current-location mark on the display must be corrected manually.

CAUTION:

The road map data is based on data stored on the HDD.

- In map-matching, alternative routes to reach the destination will be shown and prioritized, after the road on which the vehicle is currently driven has been judged and the current-location mark has been repositioned.

If there is an error in distance and/or direction, the alternative routes will be shown in different order of priority, and the wrong road can be avoided.

If two roads are running in parallel, they are of the same priority. Therefore, the current-location mark may appear on either of them alternately, depending on maneuvering of the steering wheel and configuration of the road.





- Map-matching does not function correctly when the road on which the vehicle is driving is new and not recorded in the DVD-ROM, or when the road pattern stored in the map data and the actual road pattern are different due to repair.

When driving on a road not present in the map, the map-matching function may find another road and position the current-location mark on it. Then, when the correct road is detected, the current-location mark may leap to it.

- Effective range for comparing the vehicle position and travel direction calculated by the distance and direction with the road data read from the DVD-ROM is limited. Therefore, when there is an excessive gap between the current vehicle position and the position on the map, correction by map-matching is not possible.

GPS (GLOBAL POSITIONING SYSTEM)

GPS (Global Positioning System) has been developed and controlled by the US Department of Defense. The system utilizes GPS satellite (NAVSTAR), sending out radio waves while flying on an orbit around the earth at the height of approx. 21,000 km (13,000 miles). The GPS receiver calculates the vehicle's position in three dimensions (latitude/longitude/altitude) according to the time lag of the radio waves received from four or more GPS satellites (three-dimensional positioning). If radio waves were received only from three GPS satellites, the GPS receiver calculates the vehicle's position in two dimensions (latitude/longitude), utilizing the altitude data calculated previously by using radio waves from four or more GPS satellites (two-dimensional positioning).

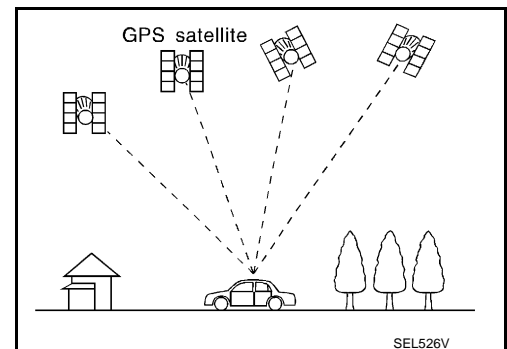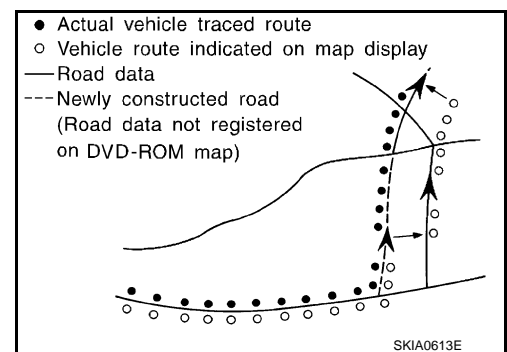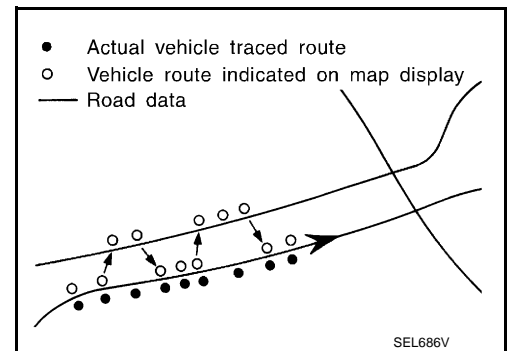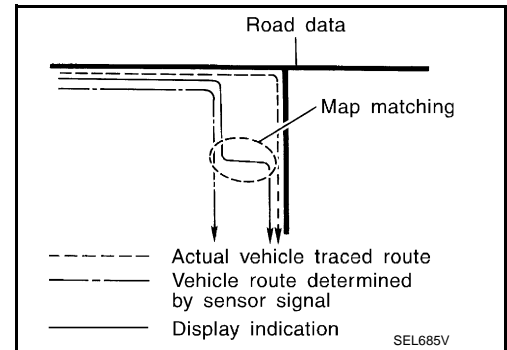

NAVIGATION SYSTEM

[PREMIUM WITH NAVIGATION]

< FUNCTION DIAGNOSIS >


Accuracy of the GPS will deteriorate under the following conditions.

- In two-dimensional positioning, the GPS accuracy will deteriorate when the altitude of the vehicle position changes.
- There may be an error of approximately 10 m (30 ft.) in position detected by three-dimensional positioning, which is more accurate than two-dimensional positioning. The accuracy can be even lower depending on the arrangement of the GPS satellites utilized for the positioning.
- Position detection is not possible when the vehicle is in an area where radio waves from the GPS satellite do not reach, such as in a tunnel, parking lot in a building, and under an elevated highway. Radio waves from the GPS satellites may not be received when some object is located over the GPS antenna.
- Position correction by GPS is not available while the vehicle is stopped.

COMPONENT DESCRIPTION

NAVI Control Unit

- The gyro (angular speed sensor) and the DVD-ROM drive are built-in units that control the navigation functions.
- Signals are received from the gyro, the vehicle speed sensor, and the GPS antenna. Vehicle location is determined by combining this data with the data contained in the DVD-ROM map. Location information is shown on liquid crystal display (display unit).
- Maps, traffic control regulations, and other pertinent information can be easily read from the DVD-ROM disc.
- The oscillator gyro sensor is used to detect changes in vehicle steering angle.

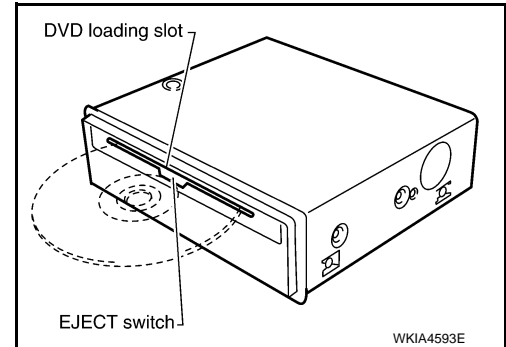

Map DVD-ROM

- The map DVD-ROM has maps, traffic control regulations, and other pertinent information.
- To improve DVD-ROM map matching and route determination functions, the DVD-ROM uses an exclusive Nissan format. Therefore, the use of a DVD-ROM provided by other manufacturers cannot be used.

Display Control Unit

The display control unit coordinates audio and video signals between the NAVI control unit and the display unit.

Display Unit

Displays NAVI system information.

AV Switch

AV switch allows user to input NAVI display settings. Self diagnostics are initiated using AV switch.

GPS Antenna

GPS antenna sends signals to NAVI control unit.


NAVIGATION SYSTEM

< FUNCTION DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

Component Parts Location

INFOID:000000005387662

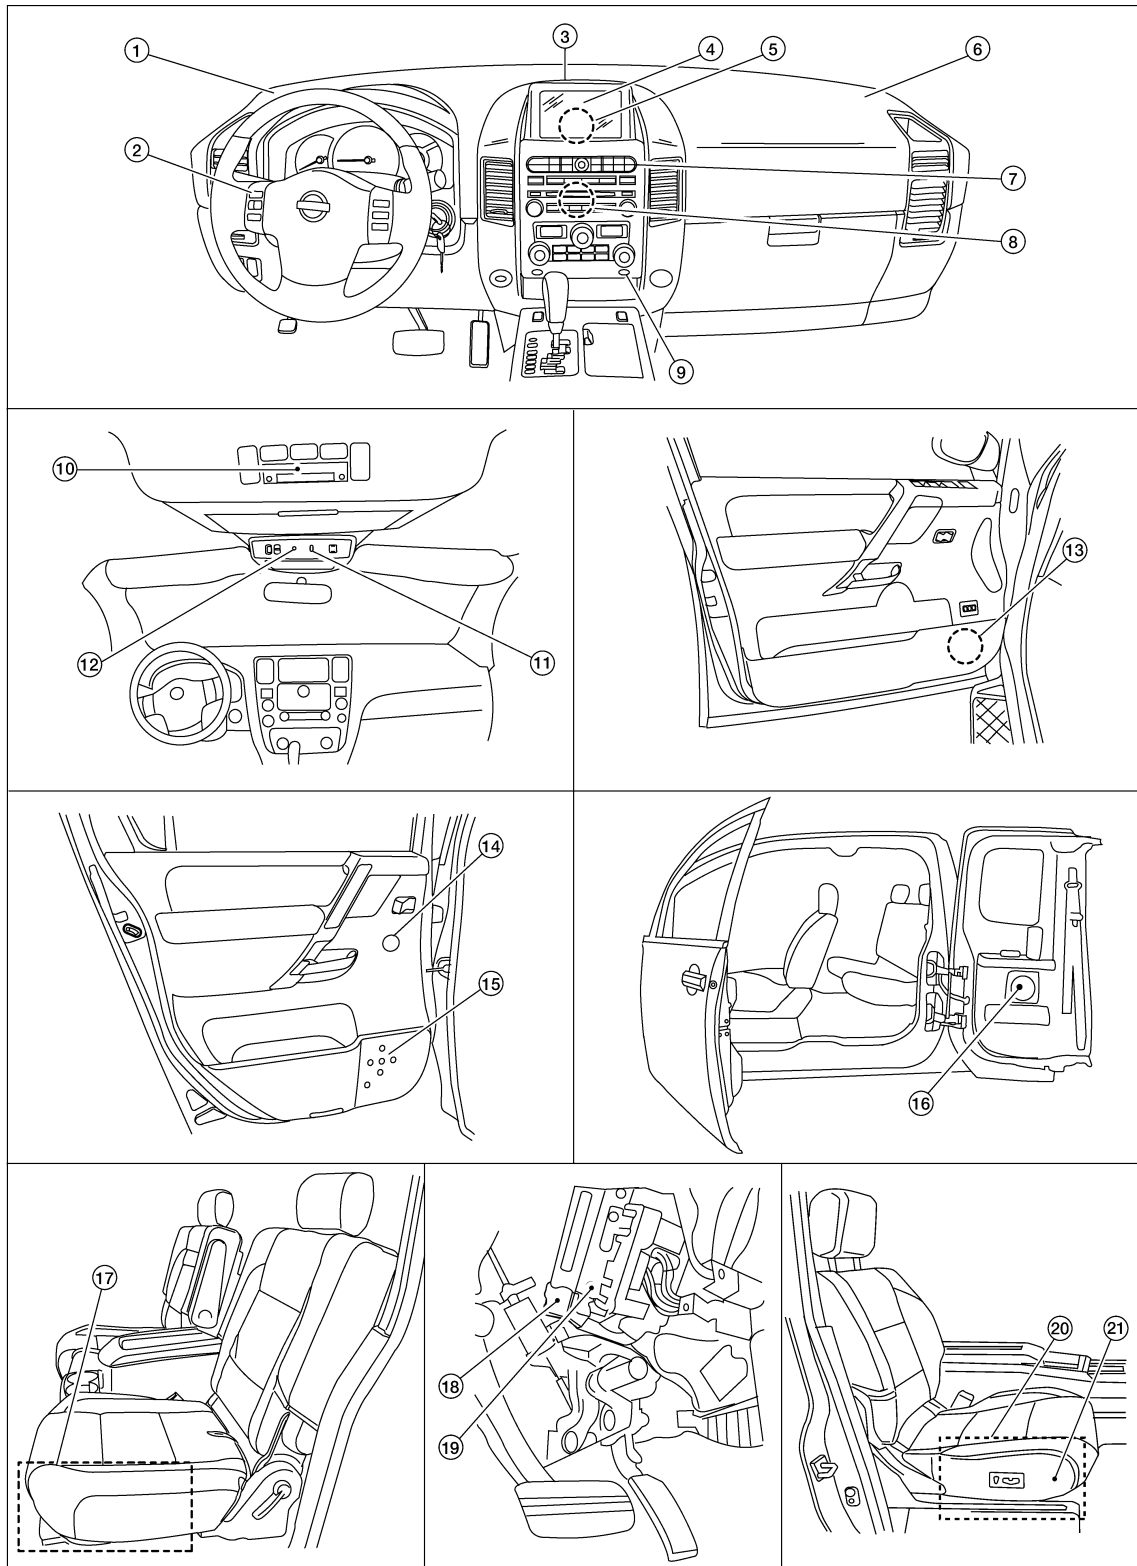

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

←:FRONT

- | | | |
|--------------------------|---|--------------------------|
| 1. Front tweeter LH M109 | 2. Steering wheel audio control switches | 3. Center speaker M110 |
| 4. Display unit M93 | 5. Display control unit M94, M95 | 6. Front tweeter RH M111 |
| 7. AV switch M98 | 8. Audio unit M42, M43, M44, M45 (crew cab), M46, M164 (king cab) | 9. Aux jack M104 |

AVN1A1565ZZ

NAVIGATION SYSTEM

< FUNCTION DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

- | | | |
|--|--|--|
| 10. Rear audio remote control unit R204
13. Front door speaker
LH D12
RH D112
16. Rear door speaker (king cab)
LH B76
RH B159
19. Satellite radio tuner M41, M129 | 11. Bluetooth ON indicator R105
14. Rear door tweeter (crew cab)
LH D208
RH D308
17. Subwoofer B72 (under driver's seat)
20. NAVI control unit B151, B152, B160
(located under passenger front seat) | 12. Microphone R109
15. Rear door speaker (crew cab)
LH D207
RH D307
18. Audio amp. M112, M113 (view behind
instrument panel above accelerator
pedal)
21. Bluetooth control unit B142, B143
(with Bluetooth) |
|--|--|--|


Component Description

INFOID:000000005387663

Part name	Description
Audio unit	<ul style="list-style-type: none"> Controls each operation of the navigation system Voice guidance signal is output to audio amp.
BOSE speaker amp.	Voice guidance signal is input from audio unit, and it is output to speakers.
Tweeter	Voice guidance signal from audio amp. is output.
Steering switches	<ul style="list-style-type: none"> Each operation of navigation system can be performed Switch operating signal is output to audio unit
Microphone	Sends voice signals to audio unit
GPS antenna	GPS signal is received and is output to audio unit.

DVD PLAYER

System Diagram

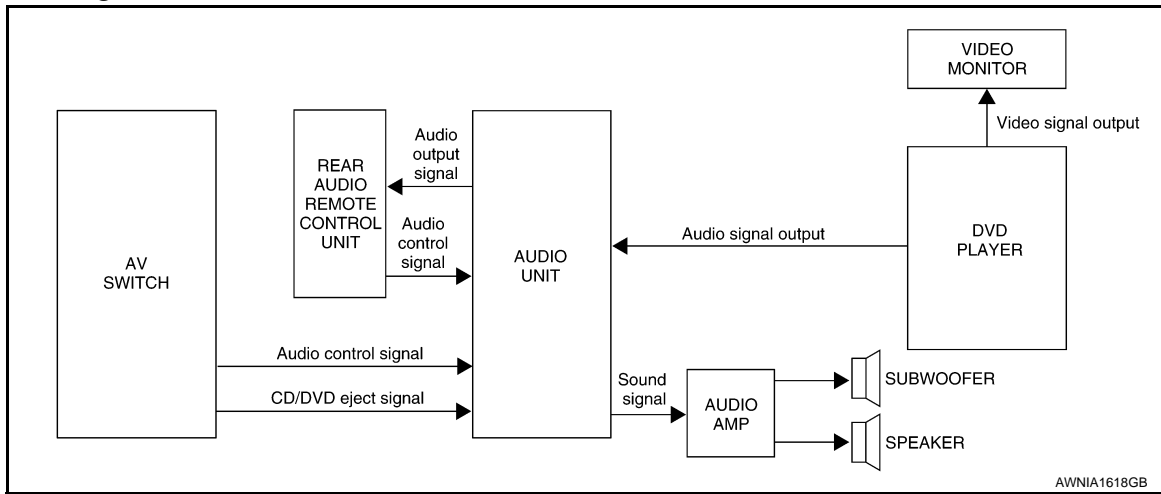

System Description

INFOID:000000005387665

The DVD entertainment system consists of the following components

- Audio unit
- DVD player
- Video monitor
- AV switch
- Steering wheel audio control switches
- Rear audio remote control unit
- Audio amp.
- Front tweeters
- Front door speakers
- Center speaker
- Rear door tweeters (crew cab)
- Rear door speakers
- Subwoofer

When the DVD entertainment system is on, video signals are sent from the DVD player to the video monitor. Audio signals are sent to the Audio unit. Audio signals can be directed through the wireless infrared headphones or through the audio amp. to the vehicle speakers. Refer to the Owner's Manual for complete DVD entertainment system operating instructions.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

AV


DVD PLAYER

< FUNCTION DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

Component Parts Location

INFOID:000000005387666

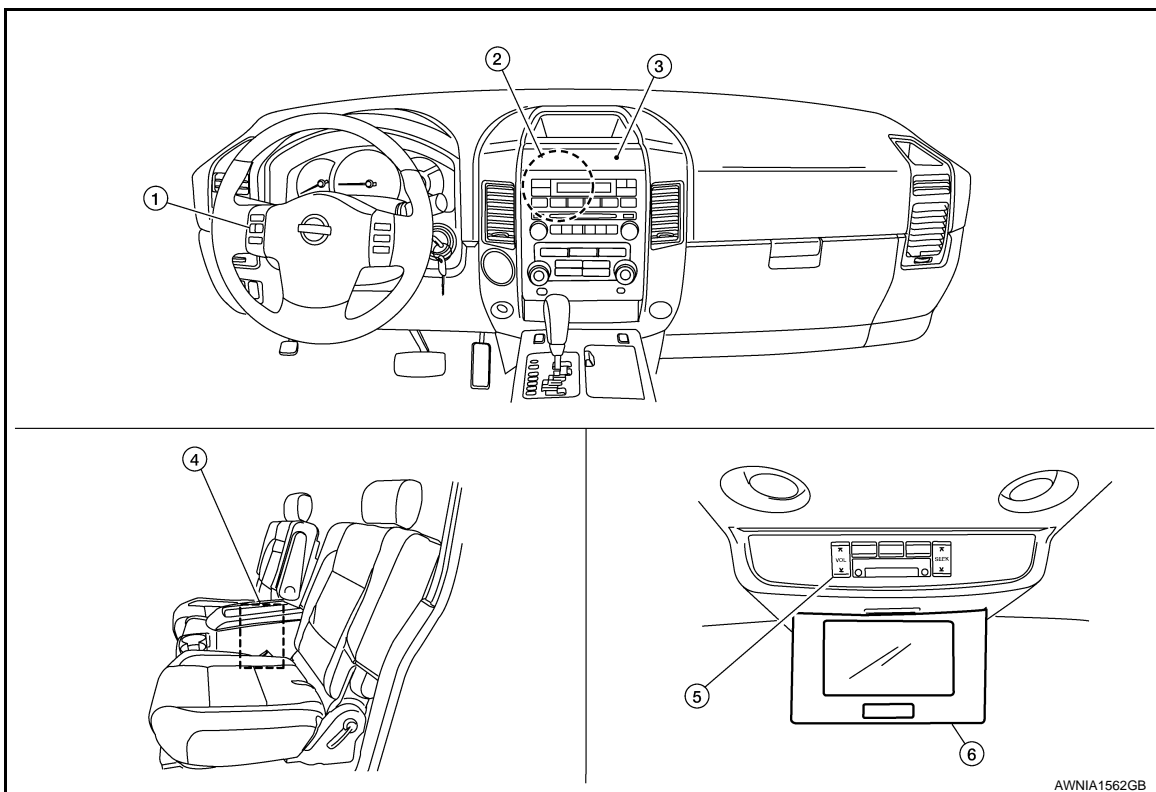

AWNIA1562GB

- | | | |
|--|---|-----------------------|
| 1. Steering wheel audio control switches | 2. Audio unit M42, M43, M44, M45 (crew cab), M46, M164 (king cab) | 3. AV switch M98 |
| 4. DVD player M205, M206 (located in center console) | 5. Rear audio remote control unit R204 | 6. Video monitor R202 |

Component Description

INFOID:000000005387667

Part name	Description
DVD player	<ul style="list-style-type: none"> Outputs DVD video to video monitor Outputs DVD audio to the audio unit
Video monitor	<ul style="list-style-type: none"> Receives and displays the DVD video signal
Audio unit	<ul style="list-style-type: none"> Controls audio system and DVD entertainment system functions
Audio amp.	<ul style="list-style-type: none"> Receives audio signals from the audio unit Outputs amplified audio signals to the speakers
AV switch	<ul style="list-style-type: none"> All audio operations can be operated Switch signal is output to the audio unit
Rear audio remote control unit	<ul style="list-style-type: none"> Audio and DVD functions can be operated Switch signal is output to the audio unit Receives audio signal from audio unit for headphones
Steering wheel audio control switches	<ul style="list-style-type: none"> Audio operation can be operated Steering switch signal (operation signal) is output to audio unit
Front door speakers	<ul style="list-style-type: none"> Outputs audio signal from audio amp. Outputs high, mid and low range sounds
Front tweeters	<ul style="list-style-type: none"> Outputs audio signal from audio amp. Outputs high range sounds
Center speaker	<ul style="list-style-type: none"> Outputs audio signal from audio amp. Outputs high, mid and low range sounds

DVD PLAYER

< FUNCTION DIAGNOSIS >


[PREMIUM WITH NAVIGATION]

Part name	Description
Rear door tweeters (crew cab)	<ul style="list-style-type: none">• Outputs audio signal from audio amp.• Outputs high range sounds
Rear door speakers	<ul style="list-style-type: none">• Outputs audio signal from audio amp.• Outputs high, mid and low range sounds
Subwoofer	<ul style="list-style-type: none">• Outputs audio signal from audio amp.• Outputs low range sounds

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

HANDS-FREE PHONE SYSTEM

System Diagram

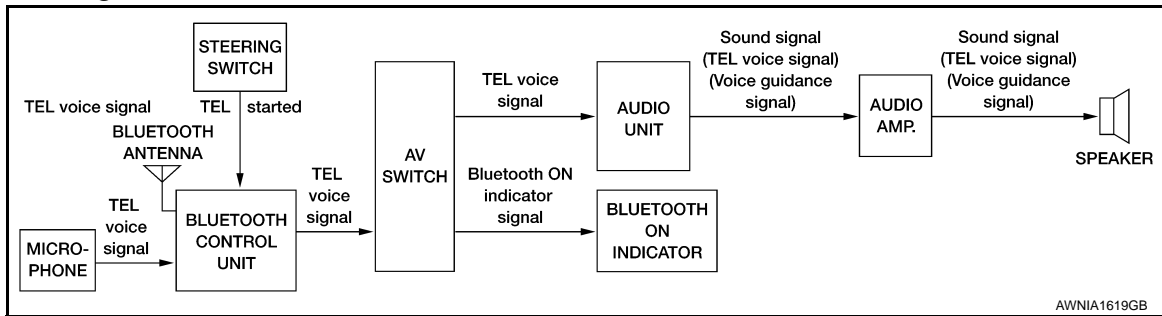

System Description

INFOID:000000005387669

Refer to the Owner's Manual for Bluetooth telephone system operating instructions.

NOTE:

Cellular telephones must have their wireless connection set up (paired) before using the Bluetooth telephone system.

Bluetooth telephone system allows users who have a Bluetooth equipped cellular telephone to make a wireless connection between their cellular telephone and the Bluetooth control unit. Hands-free cellular telephone calls can be sent and received. Personal memos can be created using the Nissan Voice Recognition system. Some Bluetooth cellular telephones may not be recognized by the Bluetooth control unit. When a cellular telephone or the Bluetooth control unit is replaced, the telephone must be paired with the Bluetooth control unit. Different cellular telephones may have different pairing procedures. Refer to the cellular telephone operating manual.

BLUETOOTH CONTROL UNIT

When the ignition switch is turned to ACC or ON, the Bluetooth control unit will power up. During power up, the Bluetooth control unit is initialized and performs various self checks. Initialization may take up to 10 seconds. If a phone is present in the vehicle and paired with the Bluetooth control unit, Nissan Voice Recognition will then become active. Bluetooth telephone functions can be turned off using the Nissan Voice Recognition system.

STEERING WHEEL AUDIO CONTROL SWITCHES

When buttons on the steering wheel audio control switch are pushed, the resistance in steering wheel audio control switch circuit changes depending on which button is pushed. The Bluetooth control unit uses this signal to perform various functions while navigating through the voice recognition system.

The following functions can be performed using the steering wheel audio control switch:

- Initiate Self Diagnosis of the Bluetooth telephone system
- Start a voice recognition session
- Answer and end telephone calls
- Adjust the volume of calls
- Record memos

MICROPHONE

The microphone is located in the roof console assembly. The microphone sends a signal to the Bluetooth control unit. The microphone can be actively tested during self-diagnosis.

AV CONTROL UNIT

The AV control unit receives signals from the Bluetooth control unit and sends audio signals to the audio amp, then on to the speakers.


HANDS-FREE PHONE SYSTEM

[PREMIUM WITH NAVIGATION]

< FUNCTION DIAGNOSIS >

Component Parts Location

INFOID:000000005387670

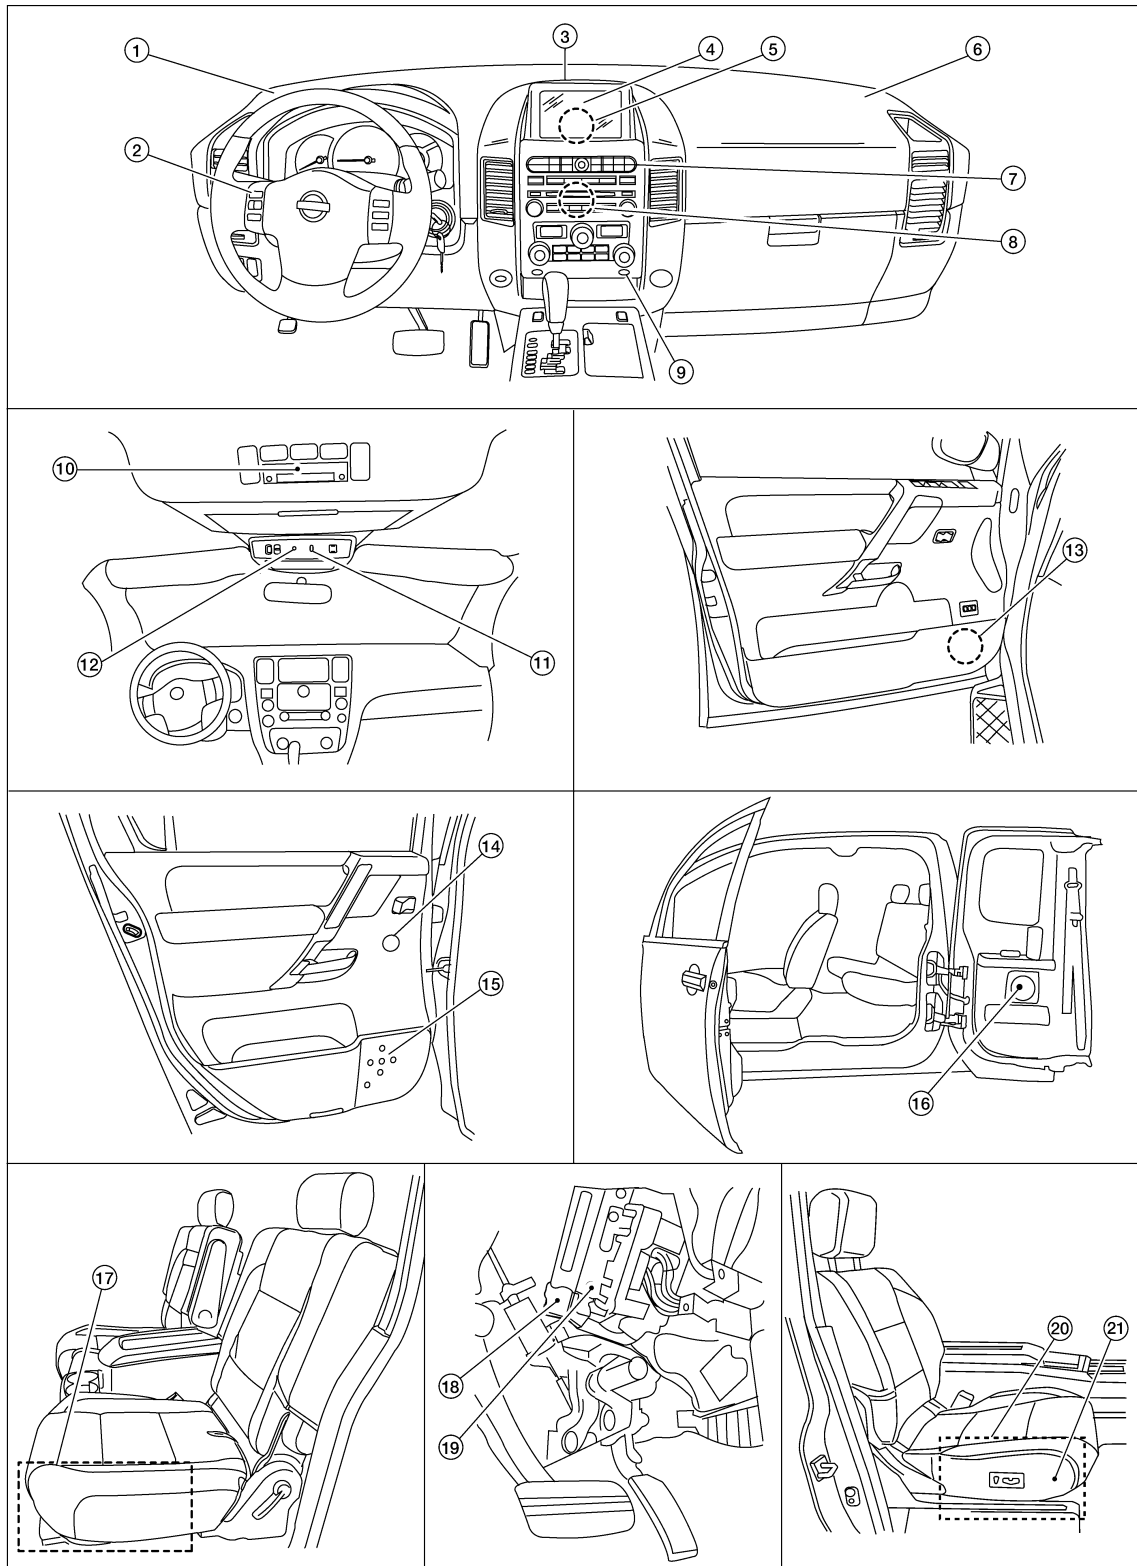

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

←:FRONT

- | | | |
|--------------------------|---|--------------------------|
| 1. Front tweeter LH M109 | 2. Steering wheel audio control switches | 3. Center speaker M110 |
| 4. Display unit M93 | 5. Display control unit M94, M95 | 6. Front tweeter RH M111 |
| 7. AV switch M98 | 8. Audio unit M42, M43, M44, M45 (crew cab), M46, M164 (king cab) | 9. Aux jack M104 |

HANDS-FREE PHONE SYSTEM

< FUNCTION DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

- | | | |
|---|--|--|
| 10. Rear audio remote control unit R204 | 11. Bluetooth ON indicator R105 | 12. Microphone R109 |
| 13. Front door speaker
LH D12
RH D112 | 14. Rear door tweeter (crew cab)
LH D208
RH D308 | 15. Rear door speaker (crew cab)
LH D207
RH D307 |
| 16. Rear door speaker (king cab)
LH B76
RH B159 | 17. Subwoofer B72 (under driver's seat) | 18. Audio amp. M112, M113 (view behind instrument panel above accelerator pedal) |
| 19. Satellite radio tuner M41, M129 | 20. NAVI control unit B151, B152, B160
(located under passenger front seat) | 21. Bluetooth control unit B142, B143
(with Bluetooth) |

Component Description

INFOID:000000005387671

Part name	Description
Audio unit	<ul style="list-style-type: none"> Receives telephone voice signal from Bluetooth control unit Sends telephone voice and voice guidance signals to the speakers
Audio amp.	<ul style="list-style-type: none"> Receives audio signals from the audio unit Outputs amplified audio signals to the speakers.
Front door speaker	Receives telephone voice and voice guidance signals from the audio amp.
Front tweeter	
Center speaker	
Steering wheel audio control switches	<ul style="list-style-type: none"> Start a voice recognition session Answer and end telephone calls Adjust the volume level
Microphone	Sends voice signals to Bluetooth control unit
Bluetooth control unit	Controls hands-free phone functions
Bluetooth antenna	Sends telephone voice signal to Bluetooth control unit
Bluetooth ON indicator	Controlled by the Bluetooth control unit

DIAGNOSIS SYSTEM (AUDIO UNIT)

AUDIO UNIT

AUDIO UNIT : Diagnosis Description

INFOID:000000005387672

For self-diagnosis function information, refer to [AV-188, "Diagnosis Description"](#).

AV SWITCH

AV SWITCH : Component Function Check


INFOID:000000005387673

STARTING THE SELF-DIAGNOSIS MODE

1. Turn ignition switch from OFF to ACC.
2. Within 10 seconds press and hold the switches "MEMORY 1" and "MEMORY 6" simultaneously for 3 seconds.
Then the self-diagnosis operates. A single beep indicates self-diagnosis mode is active.
3. Press each switch and listen for beep.

NOTE:

CD player LOAD and EJECT buttons are not included in this test and will not beep when pressed.

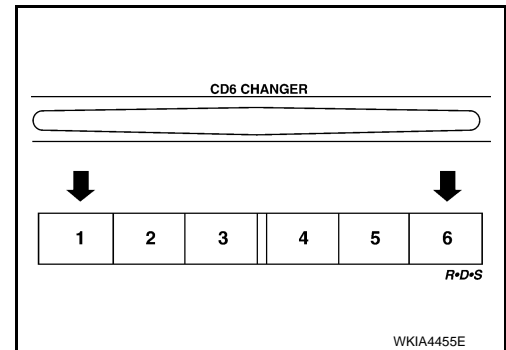

DIAGNOSIS FUNCTION

- It can check for continuity of the switches by sounding the beep when each AV switch and steering switch is pressed.
- It can check for continuity of harness between AV switch and steering switch.

EXITING THE SELF-DIAGNOSIS MODE

Turn ignition switch OFF. Then the self-diagnosis ends.

A
B
C
D
E
F
G
H
I
J
K
L
M

AV

O
P

DIAGNOSIS SYSTEM (NAVI CONTROL UNIT)

< FUNCTION DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

DIAGNOSIS SYSTEM (NAVI CONTROL UNIT)

Diagnosis Description

INFOID:000000005387674

DESCRIPTION

- Diagnosis function consists of the self-diagnosis mode performed automatically and the CONFIRMATION/ADJUSTMENT mode operated manually.
- Self-diagnosis mode checks for connections between the units constituting this system, analyzes each individual unit at the same time, and displays the results on the LCD screen.
- CONFIRMATION/ADJUSTMENT mode is used to perform trouble diagnosis that require operation and judgment by an operator (trouble that cannot be automatically judged by the system), to check/change the set value, and to display the Error History of the navigation system.

Work Flow

INFOID:000000005387675

ON BOARD SELF-DIAGNOSIS FUNCTION

Diagnosis Item

Mode		Description	
Self-diagnosis (DCU)		Display control unit diagnosis.	
Self-diagnosis (NAVI)		<ul style="list-style-type: none"> • NAVI Control unit diagnosis (DVD-ROM drive) will not be diagnosed when no map DVD-ROM is in it. • Analyzes connection between the NAVI control unit and the GPS antenna and operation of each unit. 	
CONFIRMATION/ ADJUSTMENT	Display diagnosis	On display control unit mode, color tone and shading of the screen can be checked by the display of a color bar and a gray scale.	
	Vehicle signals	On display control unit mode, analyzes the following vehicle signals: Vehicle speed signal, light signal ^{NOTE} , ignition switch signal, and reverse signal.	
	Auto Climate Control (if equipped)	A/C self-diagnosis of A/C system.	
	Navigation	Display diagnosis	On NAVI C/U mode, color tone and shading of the screen can be checked by the display of a color bar and a gray scale.
		Vehicle signals	On NAVI C/U mode, analyzes the following vehicle signals: Vehicle speed signal, light signal, ignition switch signal, and reverse signal.
		Error History	Diagnosis results previously stored in the memory (before turning ignition switch ON) are displayed in this mode. Time and location when/where the errors occurred are also displayed.
		Navigation	Speed Calibration
Steering Angle Adjustment	Corrects difference between actual turning angle of a vehicle and turning angle of the car mark on the display.		
CAN DIAG SUPPORT MONITOR		Display status of CAN communication.	

NOTE:

Make the status that is set by D/N function be shown.

SELF-DIAGNOSIS MODE (DCU)


1. Start the engine.
2. Turn the audio system off.

DIAGNOSIS SYSTEM (NAVI CONTROL UNIT)


[PREMIUM WITH NAVIGATION]

< FUNCTION DIAGNOSIS >


- While pressing the “MEMORY 4” button, turn the volume control dial clockwise or counterclockwise for 30 clicks or more. (When the self-diagnosis mode is started, a short beep will be heard.)
 - Shifting from current screen to previous screen is performed by pressing “BACK” button.

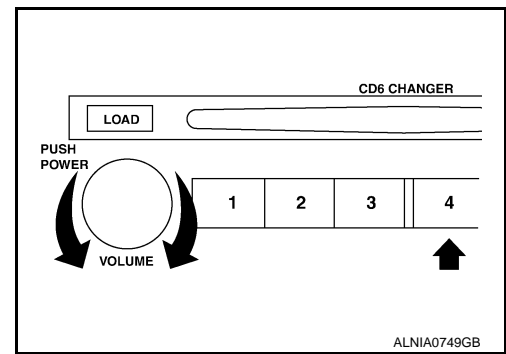


- The initial self-diagnosis screen will be shown, and items “Self-Diagnosis (DCU)”, “Self-Diagnosis (NAVI)”, “Confirmation/Adjustment” and “CAN DIAG SUPPORT MONITOR” will become selective.

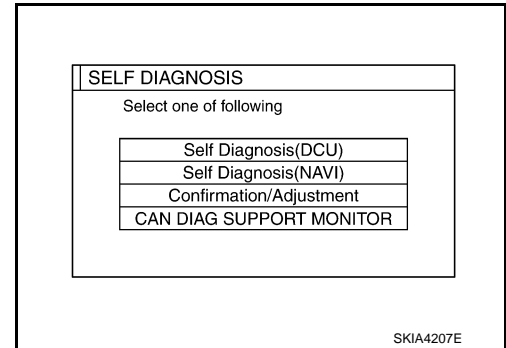

- Perform self-diagnosis by selecting the “Self-Diagnosis”.
 - Self-diagnosis subdivision screen will be shown and the operation enters the self-diagnosis mode.
 - A bar graph shown below the self-diagnosis subdivision screen indicates progress of the diagnosis.

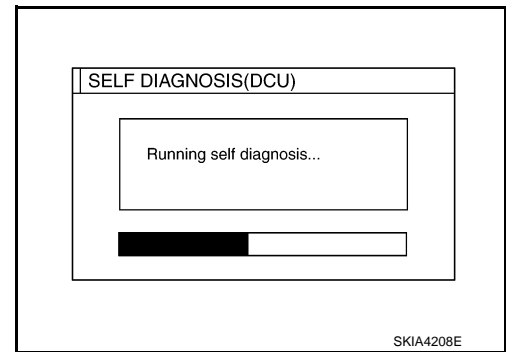


- When the self-diagnosis completes, optional part confirmation screen will be shown.
 - When connection of an optional part is judged error, a screen to check if the optional part is actually fitted on the vehicle or not will be shown. When fitted, select the switch of the part on the screen and press “End”. Then the “SELF DIAGNOSIS” screen will be shown.
 - When the optional part is connected normally, the switch for the part will not appear on the screen.

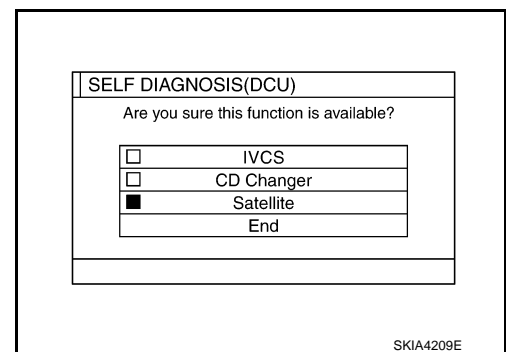

- On the “SELF DIAGNOSIS” screen, each unit name will be colored according to the diagnosis result, as follows.

- Green** : Not malfunctioning.
- Yellow** : Cannot be judged by self-diagnosis results.
- Red** : Unit is malfunctioning.
- Gray** : Diagnosis has not been done.

- If several malfunctions are present in a unit, color of its switch on the screen will be either red, yellow, or gray, determined by the malfunction of the highest priority.

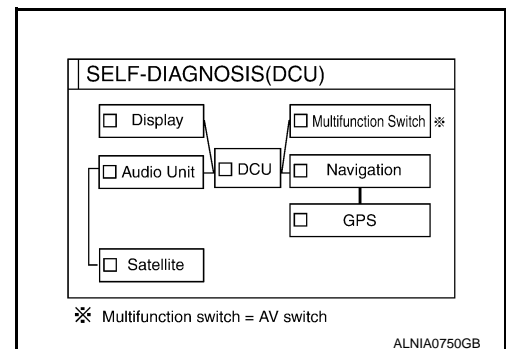


A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

DIAGNOSIS SYSTEM (NAVI CONTROL UNIT)

[PREMIUM WITH NAVIGATION]

< FUNCTION DIAGNOSIS >

8. Select a switch on the "SELF DIAGNOSIS" screen and comments for the diagnosis results will be shown.
 - When the switch is green, the following comment will be shown. "Self-diagnosis was successful. Further diagnosis and adjustments are recommended. Follow the "confirmation/adjustment" menu or refer to the service manual."
 - When the switch is yellow, the following comment will be shown. "Connection to the following unit is abnormal. See the service manual for further details".
 - When the switch is red, the following comment will be shown. "DCU is abnormal".

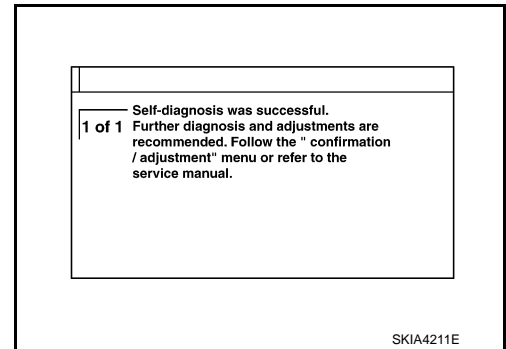

SELF-DIAGNOSIS RESULT

Quick reference table

1. Select a malfunctioning diagnosis No. in the diagnosis result quick reference table.
2. Find estimated malfunctioning system in the diagnosis No. table and perform check.
3. Turn the ignition switch OFF and perform self-diagnosis again.

Switch color	Screen switch					Diagnosis No.
	DCU*	DISPLAY	Audio unit	Navigation	GPS antenna	
Red	×					1
Gray	×	x				2
	x		x			3
	×			×	×	4

*: DCU = Display control unit

CAUTION:


- When AV switch has a malfunction, you cannot start. Refer to [AV-187, "AV SWITCH : Component Function Check"](#) .
- When display unit has a malfunction, you cannot start. Refer to [AV-203, "DISPLAY CONTROL UNIT : Diagnosis Procedure"](#) .

Self-Diagnosis Codes

Diagnosis No.	Possible cause	Reference page
1	Display control unit malfunction	Refer to AV-203 .
2	Display communication line between display control unit and display unit	Refer to AV-282 .
3	Audio unit power supply and ground circuit Audio communication line between display control unit and audio unit	Refer to AV-201 .
4	NAVI control unit power supply and ground circuit AV communication line between display control unit and NAVI control unit	Refer to AV-201 .

SELF-DIAGNOSIS MODE (NAVI)

1. Start the engine.
2. Turn the audio system off.
3. While pressing the "MEMORY 4" button, turn the volume control dial clockwise or counterclockwise for 30 clicks or more. (When the self-diagnosis mode is started, a short beep will be heard.)
 - Shifting from current screen to previous screen is performed by pressing "BACK" button.

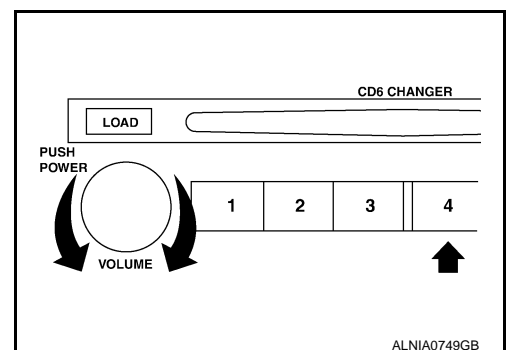


DIAGNOSIS SYSTEM (NAVI CONTROL UNIT)


[PREMIUM WITH NAVIGATION]

< FUNCTION DIAGNOSIS >

4. The initial self-diagnosis screen will be shown, and items “Self-Diagnosis (DCU)”, “Self-Diagnosis (NAVI)”, “Confirmation/Adjustment” and “CAN DIAG SUPPORT MONITOR” will become selective.

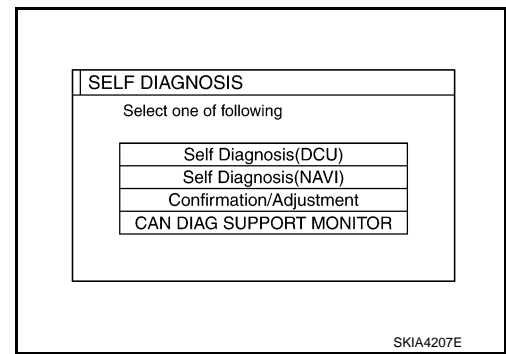


5. Perform self-diagnosis by selecting the “Self-diagnosis (NAVI)”.
- Self-diagnosis subdivision screen will be shown and the operation enters the self-diagnosis mode.
 - A bar graph will be shown on the screen to indicate progress of the diagnosis.

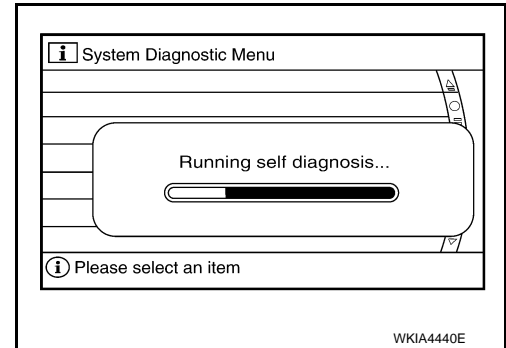


6. On the “SELF DIAGNOSIS” screen, each unit name will be colored according to the diagnosis result, as follows.

- Green** : Not malfunctioning.
- Yellow** : Cannot be judged by self-diagnosis results.
- Red** : Unit is malfunctioning.
- Gray** : Diagnosis has not been done.

- If several malfunctions are present in a unit, color of its switch on the screen will be either red, yellow, or gray, determined by the malfunction of the highest priority.

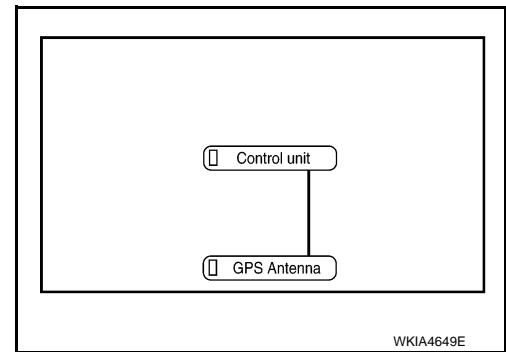

7. Select a switch on the “SELF DIAGNOSIS” screen and comments for the diagnosis results will be shown.
- When the switch is green, the following comment will be shown. “Self diagnosis did not detect any error. Please refer to the Confirmation / Adjustment function or service manual for more detailed diagnosis information.”
 - When the switch is yellow, the following comment will be shown. “Connection to the following unit is abnormal. See the service manual for further details”.
 - When the switch is red, the following comment will be shown. “Center Control Unit is abnormal”.
 - When the switch is gray, the following comment will be shown. “Detected connection error(s) are the following. Please refer to the confirmation/adjustment function or service manual for more detailed diagnosis information.”

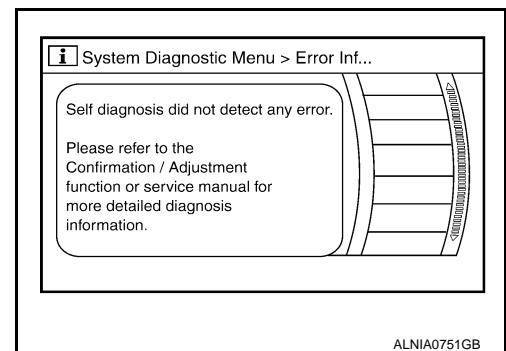

SELF-DIAGNOSIS RESULT

Quick reference table

1. Select an malfunctioning diagnosis No. in the diagnosis result quick reference table.
2. Find estimated malfunctioning system in the diagnosis No. table and perform check.
3. Turn the ignition switch OFF and perform self-diagnosis again.

DIAGNOSIS SYSTEM (NAVI CONTROL UNIT)

< FUNCTION DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

Screen switch			Diagnosis No.
Switch color	Control unit*	GPS antenna	
Red	×		1
Gray	×		2
Yellow	×		3
	×		4
	×	×	5

*: Control unit = NAVI control unit

CAUTION:


- When AV switch has a malfunction, you cannot start. Refer to [AV-187, "AV SWITCH : Component Function Check"](#) .
- When display unit has a malfunction, you cannot start. Refer to [AV-202, "DISPLAY UNIT : Diagnosis Procedure"](#) .

Self-diagnosis codes

Diagnosis No.	Possible cause	Reference page
1	NAVI control unit malfunction.	Refer to AV-201
2	No map DVD-ROM is inserted in the NAVI control unit.	Refer to AV-176
3	When "DVD-ROM error. Please check disc." is shown. 1. Eject map DVD-ROM and check if it is compatible with the system. 2. Check ejected DVD-ROM for dirt, damage, and warpage. 3. If no error is found, insert a known good map DVD-ROM of the same type and perform self-diagnosis again. If same result is shown, the NAVI control unit is malfunctioning. If result is normal, the map DVD-ROM is malfunctioning.	Refer to AV-176
4	If "Error found in DVD-ROM or DVD-ROM driver in control unit. Please perform diagnosis in accordance with service manual" is shown, carry out same inspection as diagnosis No. 3.	Refer to AV-176
5	GPS antenna system. 1. Visually check for a broken wire in the GPS antenna coaxial cable. 2. Disconnect GPS antenna connector, and make sure approximately 5V is supplied from the NAVI control unit. If not, the NAVI control unit is malfunctioning. If 5V is supplied, replace the GPS antenna. If the connection is still malfunction after the replacement of the GPS antenna, the NAVI control unit is malfunctioning.	Refer to AV-324

CONFIRMATION/ADJUSTMENT MODE

1. Start the engine.
2. Turn the audio system off.
3. While pressing the "MEMORY 4" button, turn the volume control dial clockwise or counterclockwise for 30 clicks or more. (When the self-diagnosis mode is started, a short beep will be heard.)
 - Shifting from current screen to previous screen is performed by pressing "BACK" button.

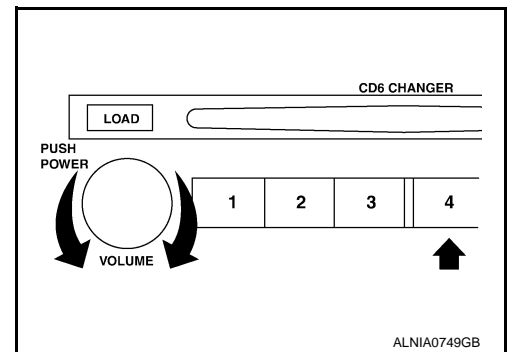


DIAGNOSIS SYSTEM (NAVI CONTROL UNIT)


[PREMIUM WITH NAVIGATION]

< FUNCTION DIAGNOSIS >


- The initial self-diagnosis screen will be shown, and items "Self-Diagnosis (DCU)", "Self-Diagnosis (NAVI)", "Confirmation/Adjustment" and "CAN DIAG SUPPORT MONITOR" will become selective.

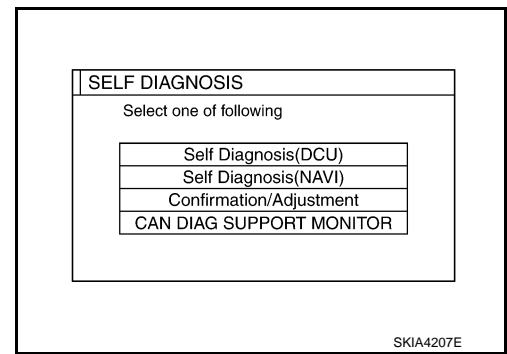

- When "Confirmation/Adjustment" is selected on the initial self-diagnosis screen, the operation will enter the CONFIRMATION/ADJUSTMENT mode. In this mode, check and adjustment of each item will become possible.
- The initial trouble diagnosis screen will be shown, and items "Display Diagnosis", "Vehicle Signals", "Auto Climate Control" and "Navigation" will become selective.
- Select each switch on "CONFIRMATION/ADJUSTMENT" screen to display the relevant diagnosis screen.

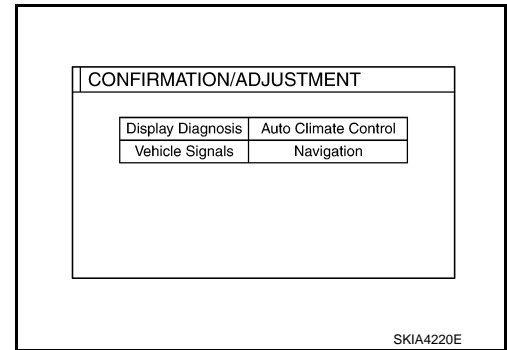

DISPLAY DIAGNOSIS

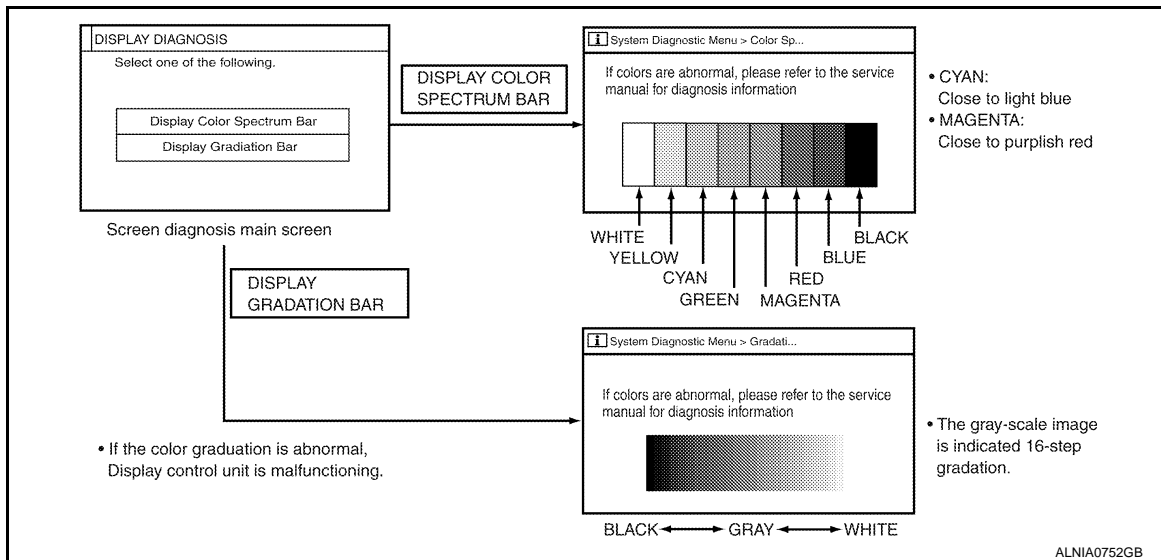

- When RGB signal error occurred in the RGB system, tone of the color bar will change as follows.

- R (red) signal error** : Screen looks bluish
- G (green) signal error** : Screen looks reddish
- B (blue) signal error** : Screen looks yellowish

- When the color of the screen looks unusual, refer to [AV-212. "Description"](#) , [AV-213. "Description"](#) and [AV-214. "Description"](#) .

VEHICLE SIGNALS

DIAGNOSIS SYSTEM (NAVI CONTROL UNIT)

[PREMIUM WITH NAVIGATION]

< FUNCTION DIAGNOSIS >

- A comparison check can be made of each actual vehicle signal and the signals recognized by the system.

CAUTION:

In case of confirming light signal, set D/N mode to ON/OFF of lighting switch (normal setting).

- OFF: D (Day mode)
- ON: N (Night mode)

Unless above setting, light signal (ON/OFF) may not be accurately displayed.

VEHICLE SIGNALS	
Vehicle Speed	OFF
IGN	ON
Reverse	OFF
IVCS	OFF
Light	OFF

WKIA4306E

Diagnosis item	Display	Condition	Remarks
Vehicle speed	ON	Vehicle speed > 0 km/h (0 MPH)	Changes in indication may be delayed by approx. 1.5 seconds. This is normal.
	OFF	Vehicle speed = 0 km/h (0 MPH)	
	-	Ignition switch in ACC position	
Light	ON	Lighting switch ON	-
	OFF	Lighting switch OFF	
IGN	ON	Ignition switch ON	-
	OFF	Ignition switch ACC	
Reverse	ON	Selector lever in R position	Changes in indication may be delayed by approx. 1.5 seconds. This is normal.
	OFF	Selector lever in other than R position	
	-	Ignition switch in ACC position	

NAVIGATION

- The initial confirmation/adjustment screen will be shown, and items "Display Diagnosis", "Vehicle Signals", "Navigation", "Error History" and "Delete Unit Connection Log" will become selective.
- Select each switch on "CONFIRMATION/ADJUSTMENT" screen to display the relevant diagnosis screen.

System Diagnostic Menu > Confirm...	
Display Diagnosis	
Vehicle Signals	
Navigation	
Error History	
Delete Unit Connection Log	1/5
Please select an item	


WKIA4311E

DIAGNOSIS SYSTEM (NAVI CONTROL UNIT)

< FUNCTION DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

DISPLAY DIAGNOSIS

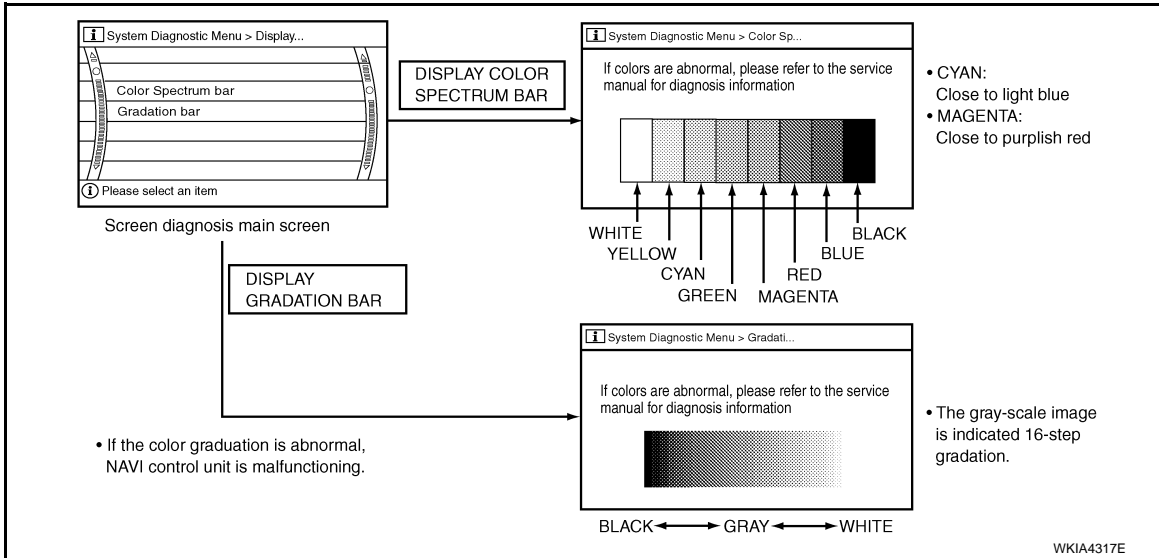

- When RGB signal error occurred in the RGB system, tone of the color bar will change as follows.

R (red) signal error : Screen looks bluish
G (green) signal error : Screen looks reddish
B (blue) signal error : Screen looks yellowish

- When the color of the screen looks unusual, refer to [AV-212, "Description"](#) , [AV-213, "Description"](#) and [AV-214, "Description"](#) .

VEHICLE SIGNALS


- A comparison check can be made of each actual vehicle signal and the signals recognized by the system.

CAUTION:

In case of confirming light signal, set D/N mode to ON/OFF of light switch (normal setting).

- OFF: D (Day mode)
- ON: N (Night mode)

Unless mode is in above setting, light signal (ON/OFF) may not be accurately displayed.

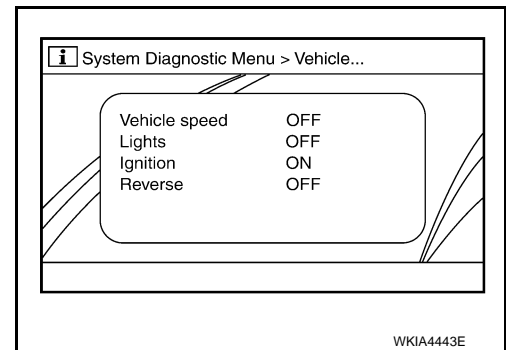

Diagnosis item	Display	Condition	Remarks
Vehicle speed	ON	Vehicle speed > 0 km/h (0 MPH)	Changes in indication may be delayed by approx. 1.5 seconds. This is normal.
	OFF	Vehicle speed = 0 km/h (0 MPH)	
	–	Ignition switch in ACC position	
Lights	ON	Lighting switch ON	–
	OFF	Lighting switch OFF	
Ignition	ON	Ignition switch ON	–
	OFF	Ignition switch ACC	
Reverse	ON	Selector lever in R position	Changes in indication may be delayed by approx. 1.5 seconds. This is normal.
	OFF	Selector lever in other than R position	
	–	Ignition switch in ACC position	


NAVIGATION

DIAGNOSIS SYSTEM (NAVI CONTROL UNIT)

[PREMIUM WITH NAVIGATION]


< FUNCTION DIAGNOSIS >

1. The navigation screen will be shown, and items “Speed Calibration” and “Steering Angle Adjustment” will become selective.
2. Select each switch on “NAVIGATION” screen to display the relevant diagnosis screen.

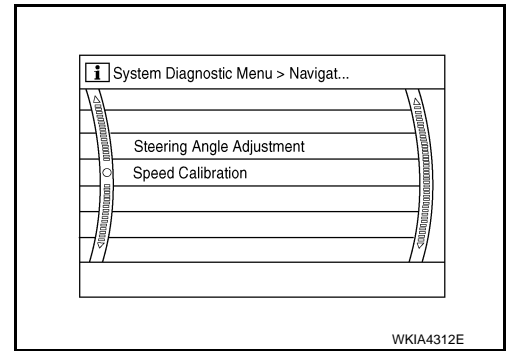


Steering Angle Adjustment

- Adjusts turning angle output detected by the gyroscope.

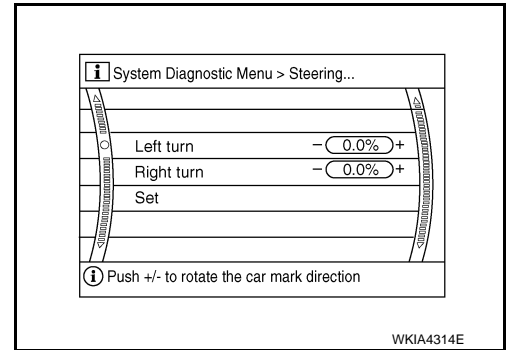


Speed Calibration

- During normal driving, distance error caused by tire wear and tire pressure change is automatically adjusted for by the automatic distance correction function. This function, on the other hand, is for immediate adjustment, in cases such as driving with tire chain fitted on tires.

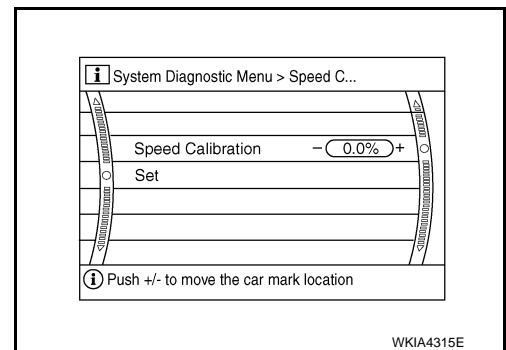

ERROR HISTORY

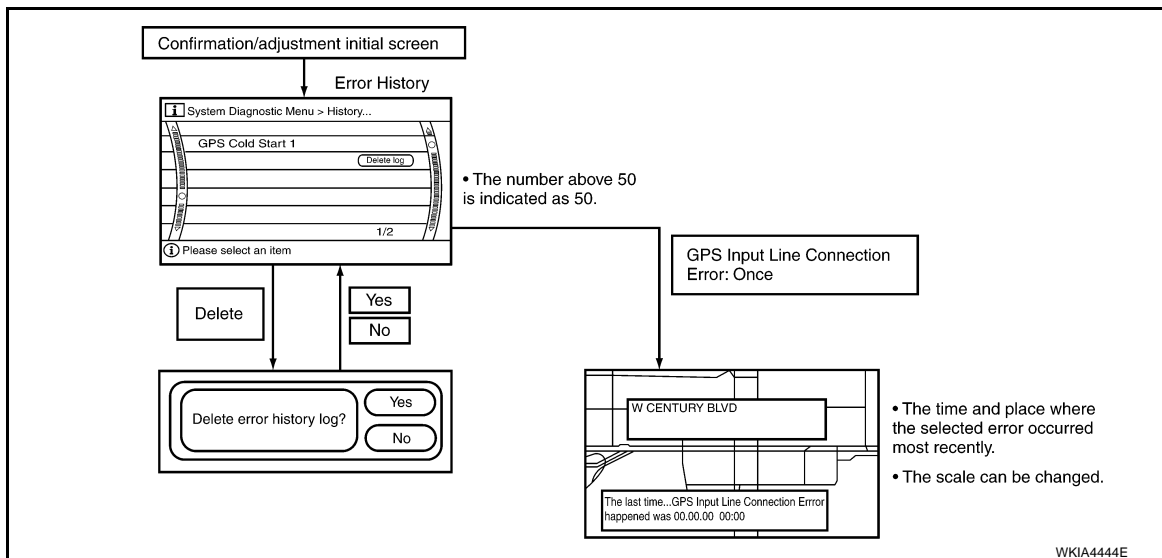

DIAGNOSIS BY ERROR HISTORY

The “Self-diagnosis” results indicate whether an error occurred during the period from when the ignition switch is turned to ON until “Self-diagnosis” is completed.

DIAGNOSIS SYSTEM (NAVI CONTROL UNIT)

[PREMIUM WITH NAVIGATION]

< FUNCTION DIAGNOSIS >

If an error occurred before the ignition switch was turned to ON and does not occur again until the “Self-diagnosis” is completed, the diagnosis result will be judged normal. Therefore, those errors in the past which cannot be found by the “Self-diagnosis” must be found by diagnosing the “Error History”.

The Error History displays the time and place of the most recent occurrence of that error. However, take note of the following points.

- Correct time of the error occurrence may not be displayed when the GPS antenna substrate within the NAVI control unit has malfunctioned.
- Place of the error occurrence is represented by the position of the current-location mark at the time when the error occurred. If the current-location mark has deviated from the correct position, then the place of the error occurrence may be located correctly.
- The maximum number of occurrences which can be stored is 50. For the 51st and later occurrences, the displayed number remains 50.

When a reproducible malfunction occurred but its cause cannot be identified because several errors are present, record the item, number and place (longitude/latitude) of error occurrence (or delete the Error History), then turn the ignition switch from OFF to ON to reproduce the malfunction. Check the Error History to find the items which show an increased number of occurrences, and diagnose the item.

Error item	Possible causes	Example of symptom
	Action/symptom	
Gyro sensor disconnected	Communications malfunction between NAVI control unit and internal gyro.	<ul style="list-style-type: none"> • Navigation location detection performance has deteriorated. (Angular velocity cannot be detected.)
	<ul style="list-style-type: none"> • Perform self-diagnosis. • When the NAVI control unit is judged normal by self-diagnosis, the symptom may be intermittent, caused by strong radio interference. 	
GPS disconnected	Communication error between NAVI control unit and internal GPS substrate.	<ul style="list-style-type: none"> • Navigation location detection performance has deteriorated. (Location correction using GPS is not performed.) • GPS receiving status remains gray.
	<ul style="list-style-type: none"> • Perform self-diagnosis. • When the NAVI control unit is judged normal by self-diagnosis, the symptom may be intermittent, caused by strong radio interference. 	
GPS transmission cable malfunction	Malfunctioning transmission wires to NAVI control unit and internal GPS substrate.	<ul style="list-style-type: none"> • During self-diagnosis, GPS diagnosis is not performed.
	<ul style="list-style-type: none"> • Perform self-diagnosis. • When the NAVI control unit is judged normal by self-diagnosis, the symptom may be intermittent, caused by strong radio interference. 	
GPS input line connection error	Malfunctioning receiving wires to NAVI control unit and internal GPS substrate.	<ul style="list-style-type: none"> • Navigation location detection performance has deteriorated. (Location correction using GPS is not performed.) • GPS receiving status remains gray.
	<ul style="list-style-type: none"> • Perform self-diagnosis. • When the NAVI control unit is judged normal by self-diagnosis, the symptom may be intermittent, caused by strong radio interference. 	
GPS TCX0 over GPS TCX0 under	Oscillating frequency of the GPS substrate frequency synchronizing oscillation circuit exceeded (or below) the specification	<ul style="list-style-type: none"> • Navigation location detection performance has deteriorated. (Location correction using GPS is not performed.) • GPS receiving status remains gray.
	<ul style="list-style-type: none"> • Perform self-diagnosis. • When the NAVI control unit is judged normal by self-diagnosis, the symptom may be intermittent, caused by strong radio interference, or the control unit may have been subjected to excessively high or low temperatures. 	
GPS ROM malfunction GPS RAM malfunction	Contents of ROM (or RAM) in GPS substrate are malfunctioning.	<ul style="list-style-type: none"> • Location detection accuracy of the navigation system will deteriorate, depending on the error area in the memory, because GPS cannot make correct positioning. (Location correction using GPS is not performed.)
	<ul style="list-style-type: none"> • Perform self-diagnosis. • When the NAVI control unit is judged normal by self-diagnosis, the symptom may be intermittent, caused by strong radio interference. 	

DIAGNOSIS SYSTEM (NAVI CONTROL UNIT)



[PREMIUM WITH NAVIGATION]

< FUNCTION DIAGNOSIS >

Error item	Possible causes	Example of symptom
	Action/symptom	
GPS RTC malfunction	Clock IC in GPS substrate is malfunctioning.	<ul style="list-style-type: none"> • Correct time may not be displayed. • After the power is turned on, the system always takes some time until GPS positioning becomes possible. (The GPS receiver starts positioning without re-collecting the whole satellite information when it judged the data stored in the receiver is correct.) • Correct time of error occurrence may not be stored in the "Error History".
	<ul style="list-style-type: none"> • Perform self-diagnosis. • When the NAVI control unit is judged normal by self-diagnosis, the symptom may be intermittent, caused by strong radio interference. 	
GPS antenna disconnected	Malfunctioning connection between GPS substrate in NAVI control unit and GPS antenna.	<ul style="list-style-type: none"> • Navigation location detection performance has deteriorated. (Location correction using GPS is not performed.) • GPS receiving status remains gray.
	<ul style="list-style-type: none"> • Perform self-diagnosis. • When connection between NAVI control unit and GPS antenna is judged normal by self-diagnosis, the symptom may be intermittent, caused by impact or vibration. 	
Low voltage of GPS	The power voltage supplied to the GPS circuit board has decreased.	<ul style="list-style-type: none"> • Navigation location detection performance has deteriorated. (Location correction using GPS is not performed.) • GPS receiving status remains gray.
	<ul style="list-style-type: none"> • Perform self-diagnosis. • When connection between NAVI control unit and GPS antenna is judged normal by self-diagnosis, the symptom may be intermittent, caused by impact or vibration. 	
DVD-ROM Malfunction DVD-ROM Read error DVD-ROM Response Error	Malfunctioning NAVI control unit.	-
	Dedicated map DVD-ROM is in the system, but the data cannot be read.	<ul style="list-style-type: none"> • The map of a particular location cannot be displayed. • Specific guidance information cannot be displayed. • Map display is slow. • Guidance information display is slow. • System has been affected by vibration.
	<ul style="list-style-type: none"> • Is map DVD-ROM damaged, warped, or dirty? - If damaged or warped, the map DVD-ROM is malfunctioning. - If dirty, wipe the DVD-ROM clean with a soft cloth. • Perform self-diagnosis. • When NAVI control unit is judged normal by self-diagnosis, the symptom is judged intermittent, caused by vibration. 	

CAN DIAG SUPPORT MONITOR

1. Start the engine.
2. Turn the audio system off.
3. While pressing the "MEMORY 4" button, turn the volume control dial clockwise or counterclockwise for 30 clicks or more. (When the self-diagnosis mode is started, a short beep will be heard.)
 - Shifting from current screen to previous screen is performed by pressing "BACK" button.
4. The initial self-diagnosis screen will be shown, and items "Self-Diagnosis (DCU)", "Self-Diagnosis (NAVI)", "Confirmation/Adjustment" and "CAN DIAG SUPPORT MONITOR" will become selective.
5. Select "CAN DIAG SUPPORT MONITOR".

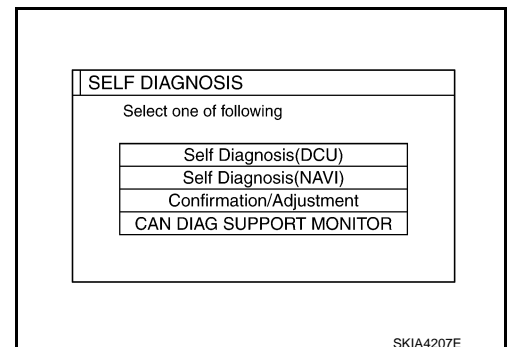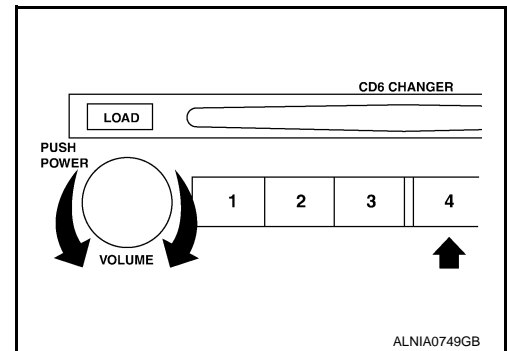


DIAGNOSIS SYSTEM (NAVI CONTROL UNIT)

< FUNCTION DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

6. Display status of CAN communication.

Item	Content	Error counter
CAN_COMM	OK/NG	0-50
CAN_CIRC_1	OK/UNKWN	0-50
CAN_CIRC_2	OK/UNKWN	0-50
CAN_CIRC_3	OK/UNKWN	0-50
CAN_CIRC_4	OK/UNKWN	0-50
CAN_CIRC_5	OK/UNKWN	0-50
CAN_CIRC_6	OK/UNKWN	0-50
CAN_CIRC_7	OK/UNKWN	0-50
CAN_CIRC_8	OK/UNKWN	0-50
CAN_CIRC_9	OK/UNKWN	0-50

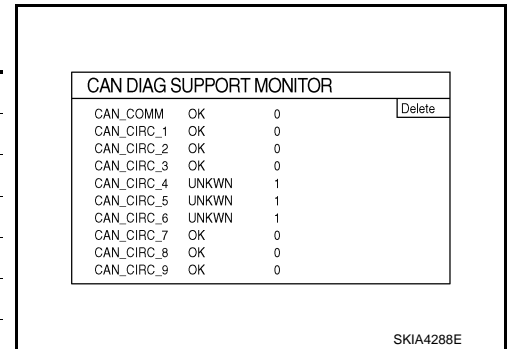

- If the ignition is turned on and UNKWN is shown on the screen, the value of the counter will be up. (MAX50)
- The value of the counter does not change if the ignition changes to OFF. (MAX50)
- If the counter shows the value of 50 and UNKWN is shown, the value of 50 will not be changed.

A
B
C
D
E
F
G
H
I
J
K
L
M

AV

O
P

DIAGNOSIS SYSTEM (BLUETOOTH CONTROL UNIT)

< FUNCTION DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

DIAGNOSIS SYSTEM (BLUETOOTH CONTROL UNIT)

Diagnosis Description


INFOID:000000005387676


The Bluetooth control unit has two diagnostic checks. The first diagnostic check is performed automatically every ignition cycle during control unit initialization. The second diagnostic check is performed by the technician using the steering wheel audio control switches prior to trouble diagnosis.



BLUETOOTH CONTROL UNIT INITIALIZATION CHECKS


- Internal control unit failure
- Bluetooth antenna connection open or shorted
- Steering wheel audio control switches [SEND(📞)/END(MODE)] stuck closed
- Vehicle speed pulse count
- Microphone connection test (with playback to operator)
- Bluetooth inquiry check

OPERATION PROCEDURE

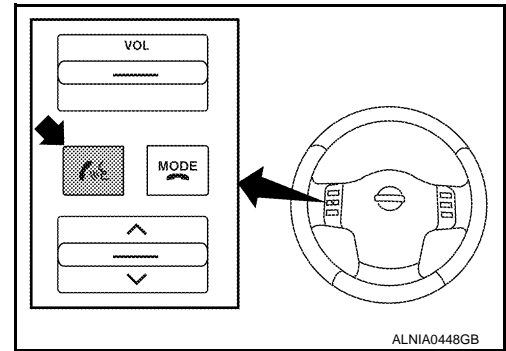1. Turn ignition switch to ACC or ON.
2. Wait for the Bluetooth system to complete initialization. This may take up to 10 seconds.
3. Press and hold the steering wheel audio control switch  button for at least 5 seconds. The Bluetooth system will begin to play a verbal prompt.



4. While the prompt is playing, press and hold the steering wheel audio control switch  button until you hear the “Diagnostics mode” prompt. The Bluetooth system will sound a 5 second beep.
5. While the beep is sounding, press and hold the steering wheel audio control switch  button again until you hear prompts.
6. The Bluetooth system has now entered into the diagnostic mode. Results of the diagnostic checks will be verbalized to the technician. Refer to [AV-188. "Work Flow"](#).
7. After the failure records are reported, an interactive microphone test will be performed. Follow the voice prompt. If the microphone test fails refer to [AV-188. "Work Flow"](#).
8. Self-diagnosis mode is complete when the voice prompt says “All diagnostic functions completed”.

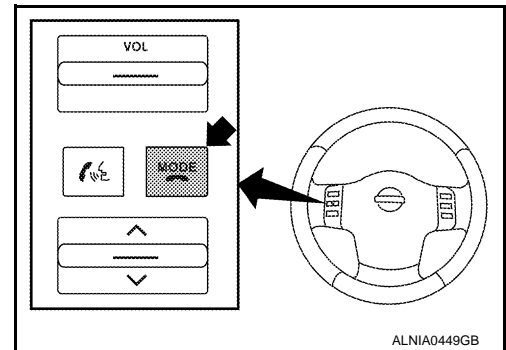

Work Flow

INFOID:000000005387677

Failure Message	Action
“Internal failure”	Replace Bluetooth control unit. Refer to AV-169. "Removal and Installation" .
“Bluetooth antenna open”	1. Inspect harness connection.
“Bluetooth antenna shorted”	2. Replace Bluetooth antenna. Refer to AV-168. "Removal and Installation" .
“Phone/Send for Hands Free System is stuck”	Check steering wheel audio control switches. Refer to AV-111. "Description" .
“Phone/End for the Hands Free System is stuck”	
“Microphone test” (failed interactive test)	1. Inspect harness between Bluetooth control unit and microphone. 2. Replace microphone. Refer to AV-167. "Removal and Installation" .

COMPONENT DIAGNOSIS

POWER SUPPLY AND GROUND CIRCUIT AUDIO UNIT

AUDIO UNIT : Diagnosis Procedure

INFOID:000000005387678

Regarding Wiring Diagram information, refer to [AV-251, "Wiring Diagram"](#).

1. CHECK FUSES

Check that the following fuses of the audio unit are not are not blown.

Unit	Terminals	Signal name	Fuse No.
Audio unit	6	Battery power	31
	10	Ignition switch ACC or ON	4

Are the fuses OK?


YES >> GO TO 2.

NO >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse.

2. POWER SUPPLY CIRCUIT CHECK

1. Disconnect audio unit connector M43.
2. Check voltage between the audio unit connector M43 and ground.

(+)		(-)	OFF	ACC	ON
Connector	Terminal				
M43	6	Ground	0V	Battery voltage	Battery voltage
	10	Ground	Battery voltage	Battery voltage	Battery voltage

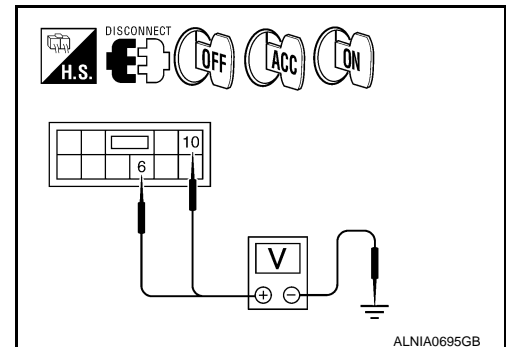

Are the voltage results as specified?

YES >> GO TO 3.

NO >> • Check connector housing for disconnected or loose terminals.
• Repair harness or connector.

3. GROUND CIRCUIT CHECK

Inspect audio unit case ground.

Does case ground pass inspection?

YES >> Inspection End.

NO >> Repair audio unit case ground.

NAVI CONTROL UNIT

NAVI CONTROL UNIT : Diagnosis Procedure

INFOID:000000005387679

Regarding Wiring Diagram information, refer to [AV-251, "Wiring Diagram"](#).

1. CHECK FUSE

Make sure the following fuses of the NAVI control unit are not blown.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

Connector	Terminal	Signal name	Fuse No.
B151	2	Battery	31
	5	ACC/ON	4
B152	63	ON/START	12

Are the fuses OK?

YES >> GO TO 2.

NO >> If fuse is blown, be sure to eliminate cause of blown fuse before installing new fuse.

2.CHECK POWER SUPPLY CIRCUIT

1. Disconnect NAVI control unit connectors B151 and B152.
2. Check voltage between connectors and ground.

(+)		(-)	OFF	ACC	ON
Connector	Terminal				
B151	2	Ground	Battery voltage	Battery voltage	Battery voltage
	5		0V	Battery voltage	Battery voltage
B152	63		0V	0V	Battery voltage

Are the voltage readings as specified?

YES >> GO TO 3.

NO >> Check harness for open between NAVI control unit and fuse.

3.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between the following NAVI control unit connector B151 and ground.

Connector	Terminal	—	Continuity
B151	1	Ground	Yes

Is continuity present?

YES >> Inspection End.

NO >> Repair or replace harness.

DISPLAY UNIT

DISPLAY UNIT : Diagnosis Procedure

INFOID:000000005387680

Regarding Wiring Diagram information, refer to [AV-251. "Wiring Diagram"](#).

1. CHECK POWER SUPPLY AND GROUND CIRCUIT FOR DISPLAY CONTROL UNIT


Check power supply and ground circuit for display control unit. Refer to [AV-203. "DISPLAY CONTROL UNIT : Diagnosis Procedure"](#).

Did the power/ground supply check good?

YES >> GO TO 2.

NO >> Repair malfunctioning part.

2. CHECK POWER SUPPLY CIRCUIT FOR DISPLAY UNIT

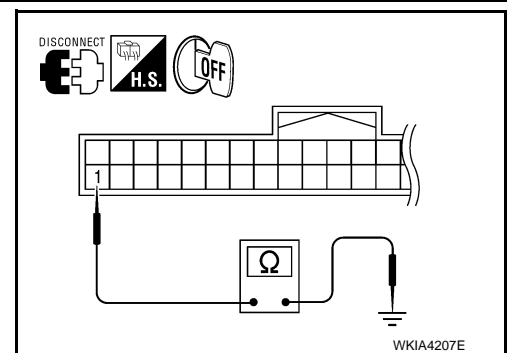

WKIA4207E

POWER SUPPLY AND GROUND CIRCUIT

[PREMIUM WITH NAVIGATION]

< COMPONENT DIAGNOSIS >

1. Disconnect display unit connector M93.
2. Turn ignition switch ON.
3. Check voltage between display unit harness connector M93 terminals 2, 3 and ground.

(+)		(-)	Value (Approx.)
Connector	Terminal		
M93	2	Ground	9V
	3		

Are voltage readings as specified?

YES >> GO TO 4.

NO >> GO TO 3.

3.CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect display control unit connector M94.
3. Check continuity between display unit harness connector M93 (A) terminals 2, 3 and display control unit harness connector M94 (B) terminals 2, 4 .

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M93	2	M94	2	Yes
	3		4	

4. Check continuity between display unit connector M93 and ground.

A		—	Continuity
Connector	Terminal		
M93	2	Ground	No
	3		

Are continuity test results as specified?

YES >> Replace display control unit. Refer to [AV-307, "Removal and Installation"](#) .

NO >> Repair harness.

4.CHECK GROUND CIRCUIT




Check continuity between display unit and ground as follows.

Connector	Terminal	—	Continuity
M93	1	Ground	Yes

Is continuity present?

YES >> Inspection End.

NO >> Repair harness.

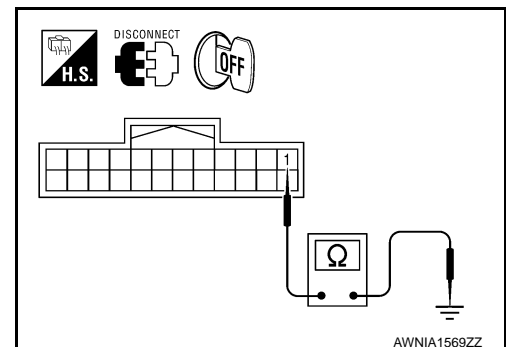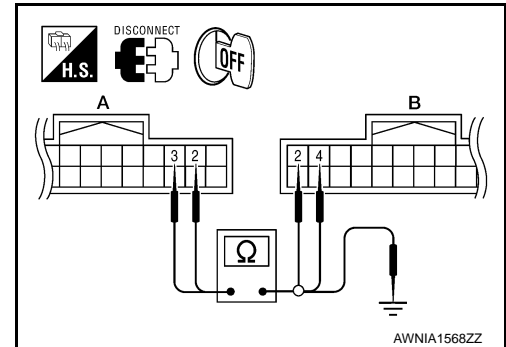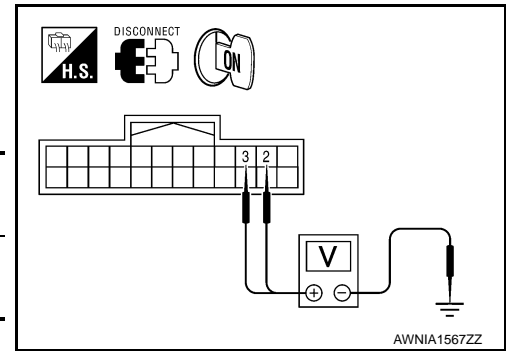

DISPLAY CONTROL UNIT

DISPLAY CONTROL UNIT : Diagnosis Procedure

INFOID:000000005387681

Regarding Wiring Diagram information, refer to [AV-251, "Wiring Diagram"](#).

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

1.CHECK FUSE

Make sure the following fuses of the display control unit are not blown.

Connector	Terminal	Signal name	Fuse No.
M94	1	Battery	31
	10	ACC/ON	4
	12	ON/START	4

Are fuses OK?


YES >> GO TO 2.

NO >> If fuse is blown, be sure to eliminate cause of blown fuse before installing new fuse.

2.CHECK POWER SUPPLY CIRCUIT

1. Disconnect display control unit connector M94.
2. Check voltage between connector terminals and ground as follows.

(+)		(-)	OFF	ACC	ON
Connector	Terminal				
M94	1	Ground	Battery voltage	Battery voltage	Battery voltage
	10		0V	Battery voltage	Battery voltage
	12		0V	0V	Battery voltage

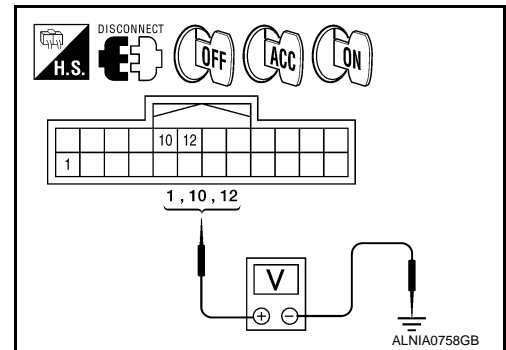

Are voltage readings as specified?

YES >> GO TO 3.

NO >> Check harness for open between display control unit and fuse.

3.CHECK GROUND CIRCUIT


Check continuity between the following display control unit connector terminals and ground.

Connector	Terminal	—	Continuity
M94	3	Ground	Yes

Is continuity present?

YES >> Inspection End.

NO >> Repair or replace harness.

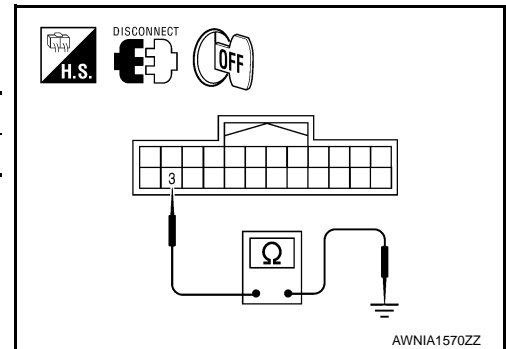

AV SWITCH

AV SWITCH : Diagnosis Procedure

INFOID:000000005387682

Regarding Wiring Diagram information, refer to [AV-251. "Wiring Diagram"](#).

1.CHECK FUSE

Check that the fuses for the AV switch are not blown.

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

Unit	Terminal	Signal name	Fuse No.
AV switch	1	Battery	31
	2	Ignition switch ACC or ON	4

Are the fuses OK?


YES >> GO TO 2.

NO >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse.

2. POWER SUPPLY CIRCUIT CHECK

1. Disconnect AV switch connector M98.
2. Check voltage between the AV switch connector M98 and ground.

(+)		(-)	OFF	ACC	ON
Connector	Terminal				
M98	1	Ground	Battery voltage	Battery voltage	Battery voltage
	2	Ground	0V	Battery voltage	Battery voltage

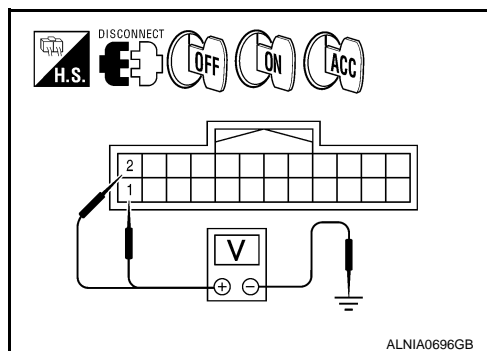

Are the voltage results as specified?


YES >> GO TO 3.

NO >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.

3. GROUND CIRCUIT CHECK

1. Turn ignition switch OFF.
2. Check continuity between AV switch harness connector M98 and ground.

Connector	Terminal	—	Continuity
M98	5	Ground	Yes

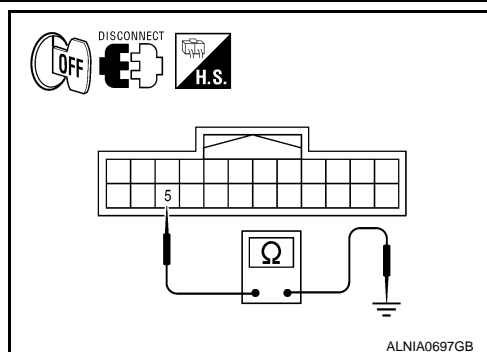

Are the continuity results as specified?

YES >> Inspection End.

NO >> Repair harness or ground.

SATELLITE RADIO TUNER

SATELLITE RADIO TUNER : Diagnosis Procedure

INFOID:000000005387683

Regarding Wiring Diagram information, refer to [AV-251, "Wiring Diagram"](#).

1. CHECK FUSES

Check that the following fuses of the satellite radio tuner (factory installed) are not blown.

Unit	Terminals	Signal name	Fuse No.
Satellite radio tuner (factory installed)	32	Battery power	31
	36	Ignition switch ACC or ON	4

Are the fuses OK?

YES >> GO TO 2.

NO >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse.

POWER SUPPLY AND GROUND CIRCUIT


< COMPONENT DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

2. POWER SUPPLY CIRCUIT CHECK

1. Turn ignition switch OFF.
2. Disconnect satellite radio tuner (factory installed) connector M41.
3. Check voltage between the satellite radio tuner (factory installed) and ground.

(+)		(-)	OFF	ACC	ON
Connector	Terminal				
M41	32	Ground	Battery voltage	Battery voltage	Battery voltage
	36		0V	Battery voltage	Battery voltage

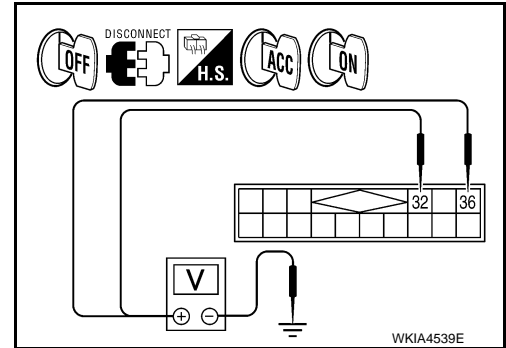

Are the voltage readings as specified?

- YES >> GO TO 3.
 NO >> • Check connector housings for disconnected or loose terminals.
 • Repair harness or connector.

3. GROUND CIRCUIT CHECK

Inspect satellite radio tuner (factory installed) case ground.

Does case ground pass inspection?

- YES >> Inspection End.
 NO >> Repair satellite radio tuner (factory installed) case ground.

DVD PLAYER

DVD PLAYER : Diagnosis Procedure

INFOID:000000005387684

Regarding Wiring Diagram information, refer to [AV-251. "Wiring Diagram"](#).

1. CHECK FUSE

Check that the following fuses for the DVD player are not blown.

Unit	Terminal	Signal name	Fuse No.
DVD player	16	Battery power	31
	15	Ignition switch ACC or ON	4


Is the fuse OK?

- YES >> GO TO 2.
 NO >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse.

2. POWER SUPPLY CIRCUIT CHECK

1. Disconnect DVD player connector M205.
2. Check voltage between the DVD player connector M205 and ground.

(+)		(-)	OFF	ACC	ON
Connector	Terminal				
M205	16	Ground	Battery voltage	Battery voltage	Battery voltage
	15		0V	Battery voltage	Battery voltage

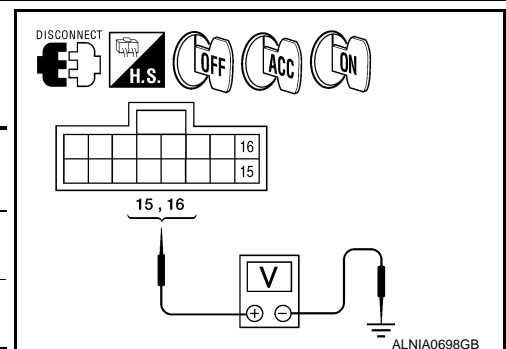

Are the voltage results as specified?

- YES >> GO TO 3.

POWER SUPPLY AND GROUND CIRCUIT

[PREMIUM WITH NAVIGATION]

< COMPONENT DIAGNOSIS >

- NO >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.


3. GROUND CIRCUIT CHECK

- Turn ignition switch OFF.
- Check continuity between DVD player harness connector M206 terminal 22 and ground.

Connector	Terminal	—	Continuity
M206	22	Ground	Yes

Are the continuity results as specified?

- YES >> Inspection End.
NO >> Repair DVD player ground.

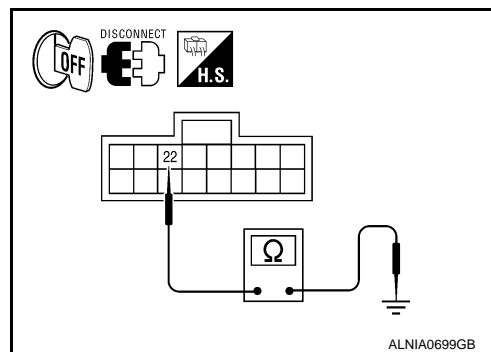

VIDEO MONITOR

VIDEO MONITOR : Diagnosis Procedure

INFOID:000000005387685

Regarding Wiring Diagram information, refer to [AV-251, "Wiring Diagram"](#).


1. CHECK POWER SUPPLY CIRCUIT

- Turn ignition switch to ACC.
- Check voltage between video monitor harness connector R202 and ground.

(+)		(-)	Value (Approx.)
Connector	Terminal		
R202	11	Ground	12V
	12		

Does specified voltage exist?


- YES >> GO TO 3.
NO >> GO TO 2.

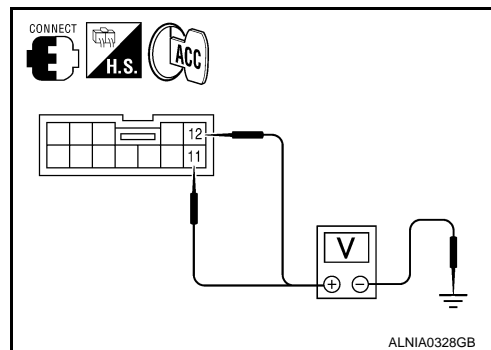

2. CHECK POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect the video monitor connector R202 and the DVD player connector M206.
- Check continuity between the video monitor harness connector R202 (A) and the DVD player connector M206 (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
R202	11	M206	31	Yes
	12		32	

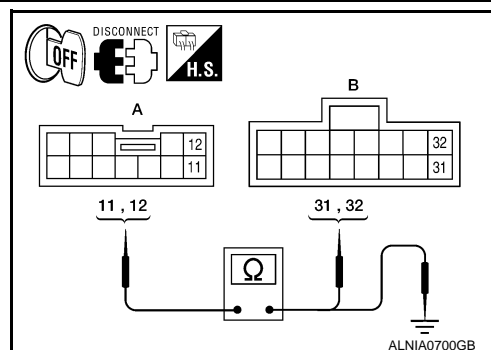

- Check continuity between video monitor harness connector R202 (A) and ground.

A		—	Continuity
Connector	Terminal		
R202	11	Ground	No
	12		

Are continuity test results as specified?

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

POWER SUPPLY AND GROUND CIRCUIT

[PREMIUM WITH NAVIGATION]

< COMPONENT DIAGNOSIS >

- YES >> Check DVD player power and ground supply. Refer to [AV-206. "DVD PLAYER : Diagnosis Procedure"](#).
 NO >> Repair harness or connector.


3.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect video monitor connector.
3. Check continuity between video monitor harness connector R202 and ground.

Connector	Terminal	—	Continuity
R202	3	Ground	Yes

Does continuity exist?

- YES >> Inspection End.
 NO >> Repair harness or connector.

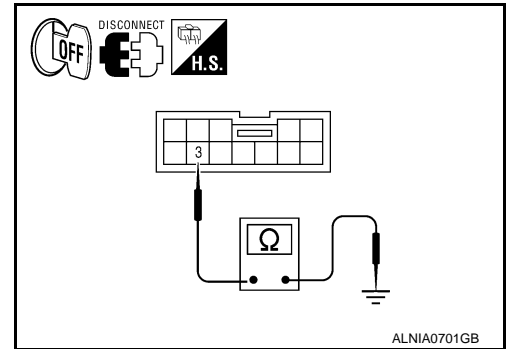

ALNIA0701GB

AUDIO AMP

AUDIO AMP : Diagnosis Procedure

INFOID:000000005387686

Regarding Wiring Diagram information, refer to [AV-251. "Wiring Diagram"](#).

1.CHECK FUSE

Check that the audio amp. fuses are not blown.

Unit	Terminal	Signal name	Fuse No.
Audio amp.	1	Battery power	31
	17		17

Are the fuses OK?

- YES >> GO TO 2.
 NO >> Be sure to eliminate cause of malfunction before installing new fuse.

2.CHECK POWER SUPPLY CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect audio amp. connector.
3. Check voltage between audio amp. harness connector M112 and ground.

(+)		(-)	Voltage (approx.)
Connector	Terminal		
M112	1	Ground	Battery voltage
	17		

Is battery voltage present?

- YES >> GO TO 3.
 NO >> Check harness between audio amp. and fuse.

3.CHECK GROUND CIRCUIT

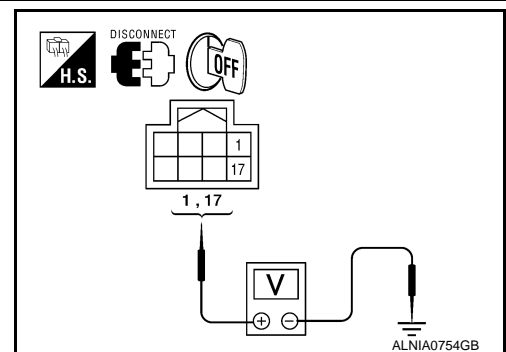

ALNIA0754GB

POWER SUPPLY AND GROUND CIRCUIT

[PREMIUM WITH NAVIGATION]

< COMPONENT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect audio amp. connector.
3. Check continuity between audio amp. harness connector M112 and ground.

(+)		(-)	Continuity
Connector	Terminal		
M112	4	Ground	Yes
	20		

Does continuity exist?

YES >> Inspection End.

NO >> Repair harness or connector.

BLUETOOTH CONTROL UNIT

BLUETOOTH CONTROL UNIT : Diagnosis Procedure

INFOID:000000005387687

Regarding Wiring Diagram information, refer to [AV-251. "Wiring Diagram"](#).

1.CHECK FUSE

Check that the following fuses for the Bluetooth control unit are not blown.

Unit	Terminal	Signal name	Fuse No.
Bluetooth control unit	1	Battery power	31
	2	Ignition switch ACC or ON	4
	3	Ignition switch ON or START	12

Is inspection result OK?

YES >> GO TO 2.

NO >> Be sure to eliminate cause of malfunction before installing new fuse.

2.CHECK POWER SUPPLY CIRCUIT

Check voltage between Bluetooth control unit harness connector B142 and ground.



Connector	Terminal	Ignition switch position	Value (Approx.)
B142	1	OFF	Battery voltage
	2	ACC	
	3	ON	

Is battery voltage present as specified?

YES >> GO TO 3.

NO >> Check harness between Bluetooth control unit and fuse.

3.CHECK GROUND CIRCUIT

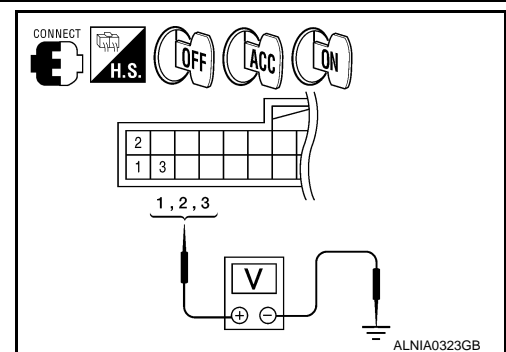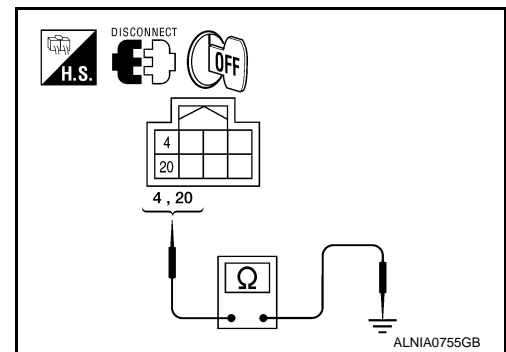

POWER SUPPLY AND GROUND CIRCUIT

[PREMIUM WITH NAVIGATION]

< COMPONENT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect Bluetooth control unit connector.
3. Check continuity between Bluetooth control unit harness connector B142 and ground.

Connector	Terminal	—	Continuity
B142	4	Ground	Yes
	20		
	23		

Are continuity results as specified?

- YES >> Inspection End.
 NO >> Repair harness or connector.

MICROPHONE

MICROPHONE : Diagnosis Procedure

INFOID:000000005387688

Regarding Wiring Diagram information, refer to [AV-251. "Wiring Diagram"](#).

1. CHECK POWER SUPPLY CIRCUIT (MICROPHONE SIDE)

1. Turn ignition switch ON.
2. Check voltage between microphone harness connector R109 terminal 4 and ground.

(+)		(-)	Value (Approx.)
Connector	Terminal		
R109	4	Ground	5V

Is approximately 5V present?

- YES >> GO TO 3.
 NO >> GO TO 2.

2. CHECK POWER SUPPLY CIRCUIT (CONTINUITY)

1. Turn ignition switch OFF.
2. Disconnect microphone and Bluetooth control unit harness connectors.
3. Check continuity between microphone harness connector R109 (A) terminal 4 and Bluetooth control unit harness connector B142 (B) terminal 29.




A		B		Continuity
Connector	Terminal	Connector	Terminal	
R109	4	B142	29	Yes

4. Check continuity between microphone harness connector R109 (A) terminal 4 and ground.

A		—	Continuity
Connector	Terminal		
R109	4	Ground	No

Are the continuity test results as specified?

- YES >> Replace the Bluetooth control unit. Refer to [AV-169. "Removal and Installation"](#).
 NO >> Repair harness or connector.

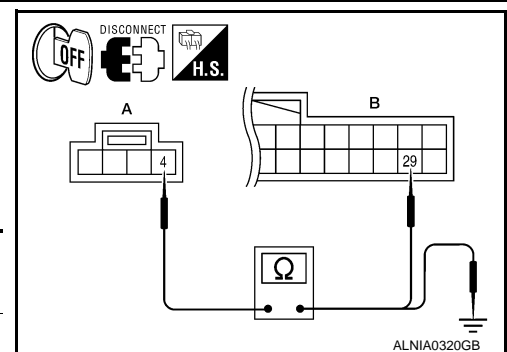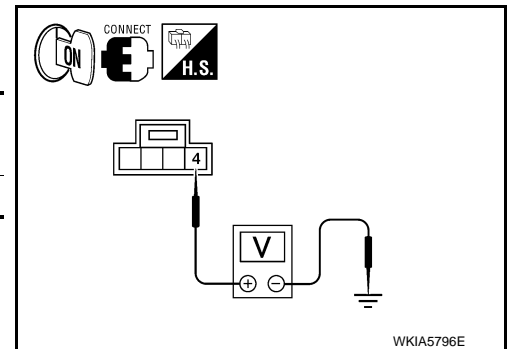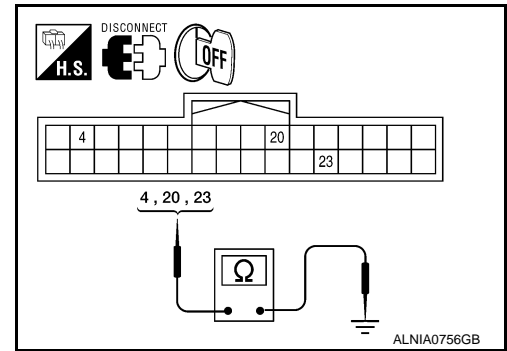

POWER SUPPLY AND GROUND CIRCUIT


< COMPONENT DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

3. CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect microphone harness connector R109 and Bluetooth control unit harness connector B142.
3. Check continuity between microphone harness connector R109 (A) terminal 2 and Bluetooth control unit harness connector B142 (B) terminal 8.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
R109	2	B142	8	Yes

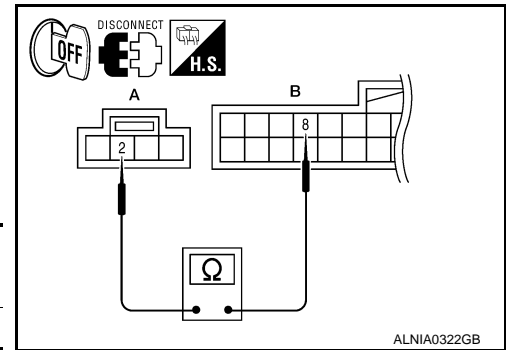

ALNIA0322GB

Does continuity exist?

YES >> Inspection End.

NO >> Repair harness or connector.

A
B
C
D
E
F
G
H
I
J
K
L
M

AV

O
P

RGB (R: RED) SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

RGB (R: RED) SIGNAL CIRCUIT

Description

INFOID:000000005387689

Transmit the image displayed with display control unit with RGB signal to the display unit.

Diagnosis Procedure

INFOID:000000005387690

Regarding Wiring Diagram information, refer to [AV-251, "Wiring Diagram"](#).

1. CHECK CONTINUITY RGB (R: RED) SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect display unit connector M93 and display control unit connector M95.
3. Check continuity between display unit harness connector M93 (A) terminal 17 and display control unit harness connector M95 (B) terminal 50.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M93	17	M95	50	Yes

4. Check continuity between display unit harness connector M93 (A) terminal 17 and ground.


A		—	Continuity
Connector	Terminal		
M93	17	Ground	No

Are the continuity results as specified?

- YES >> GO TO 2.
 NO >> Repair harness or connector.



2. CHECK RGB (R: RED) SIGNAL

1. Connect display unit connector M93 and display control unit connector M95.
2. Turn ignition switch ON.
3. Check signal between display unit harness connector M93 terminal 17 and ground.

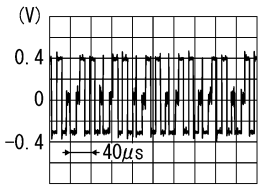(+)		(-)	Condition	Reference signal
Connector	Terminal			
M93	17	Ground	Receive audio signal	 <p>SKIB2238J</p>

Are the voltage readings as specified?

- YES >> Replace display unit. Refer to [AV-307, "Removal and Installation"](#).
 NO >> Replace display control unit. Refer to [AV-307, "Removal and Installation"](#).

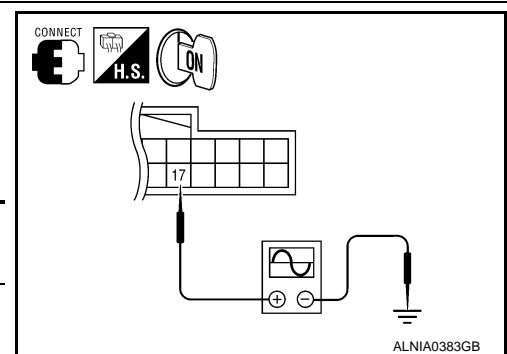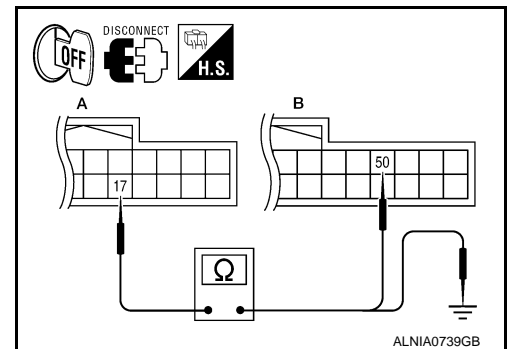

RGB (G: GREEN) SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

RGB (G: GREEN) SIGNAL CIRCUIT

Description

INFOID:000000005387691

Transmit the image displayed with display control unit with RGB signal to the display unit.


Diagnosis Procedure

INFOID:000000005387692

Regarding Wiring Diagram information, refer to [AV-251, "Wiring Diagram"](#).

1. CHECK CONTINUITY RGB (G: GREEN) SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect display unit connector M93 and display control unit connector M95.
3. Check continuity between display unit harness connector M93 (A) terminal 6 and display control unit harness connector M95 (B) terminal 52.

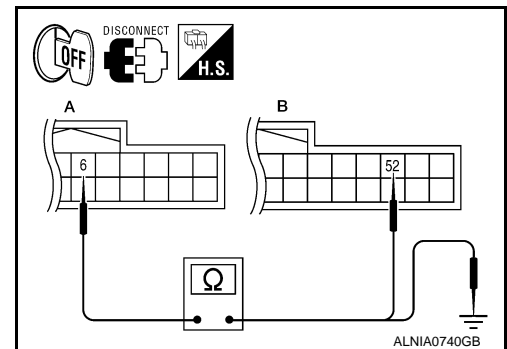

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M93	6	M95	52	Yes

4. Check continuity between display unit harness connector M93 (A) terminal 6 and ground.

A		—	Continuity
Connector	Terminal		
M93	6	Ground	No


Are the continuity results as specified?

YES >> GO TO 2.

NO >> Repair harness or connector.

2. CHECK RGB (G: GREEN) SIGNAL

1. Connect display unit connector M93 and display control unit connector M95.
2. Turn ignition switch ON.
3. Check signal between display unit harness connector M93 terminal 6 and ground.

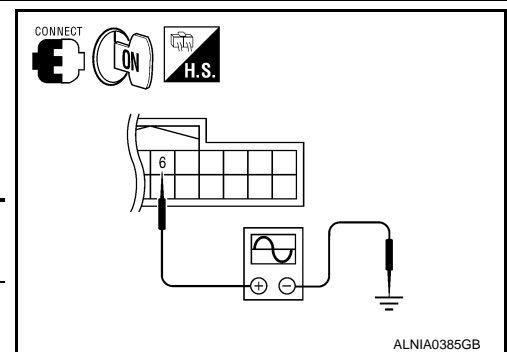

(+)		(-)	Condition	Reference signal
Connector	Terminal			
M93	6	Ground	Receive audio signal	<p>SKIB2236J</p>

Are voltage readings as specified?

YES >> Replace display unit. Refer to [AV-307, "Removal and Installation"](#).

NO >> Replace display control unit. Refer to [AV-307, "Removal and Installation"](#).

RGB (B: BLUE) SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

RGB (B: BLUE) SIGNAL CIRCUIT

Description

INFOID:000000005387693

Transmit the image displayed with display control unit with RGB signal to the display unit.

Diagnosis Procedure

INFOID:000000005387694

Regarding Wiring Diagram information, refer to [AV-251, "Wiring Diagram"](#).

1. CHECK CONTINUITY RGB (B: BLUE) SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect display unit connector M93 and display control unit connector M95.
3. Check continuity between display unit harness connector M93 (A) terminal 18 and display control unit harness connector M95 (B) terminal 54.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M93	18	M95	54	Yes

4. Check continuity between display unit harness connector M93 (A) terminal 18 and ground.


A		—	Continuity
Connector	Terminal		
M93	18	Ground	No

Are continuity results as specified?

- YES >> GO TO 2.
 NO >> Repair harness or connector.



2. CHECK RGB (B: BLUE) SIGNAL

1. Connect display unit connector M93 and display control unit connector M95.
2. Turn ignition switch ON.
3. Check signal between display unit harness connector M93 terminal 18 and ground.

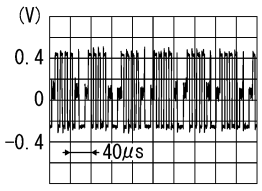(+)		(-)	Condition	Reference signal
Connector	Terminal			
M93	18	Ground	Receive audio signal	 <p>SKIB2237J</p>

Are voltage readings as specified?

- YES >> Replace display unit. Refer to [AV-307, "Removal and Installation"](#).
 NO >> Replace display control unit. Refer to [AV-307, "Removal and Installation"](#).

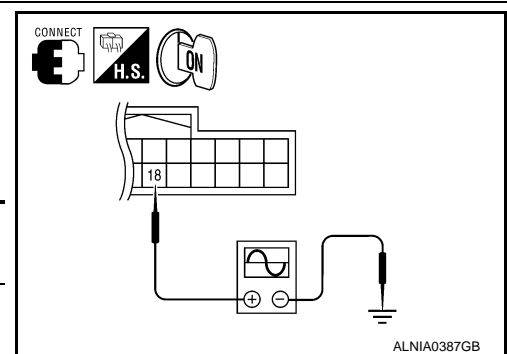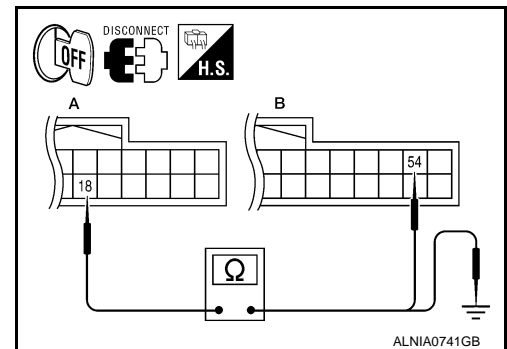

RGB SYNCHRONIZING SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

RGB SYNCHRONIZING SIGNAL CIRCUIT

Description

INFOID:000000005387695

Transmit the RGB synchronizing signal to the display unit so as to synchronize the RGB image displayed with display control unit.

Diagnosis Procedure


INFOID:000000005387696

Regarding Wiring Diagram information, refer to [AV-251, "Wiring Diagram"](#).

1. CHECK CONTINUITY RGB SYNCHRONIZING SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect display unit connector M93 and display control unit connector M95.
3. Check continuity between display unit harness connector M93 (A) terminal 19 and display control unit harness connector M95 (B) terminal 56.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M93	19	M95	56	Yes

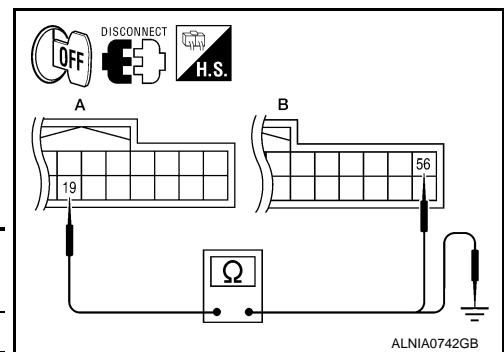

4. Check continuity between display unit harness connector M93 (A) terminal 19 and ground.

A		—	Continuity
Connector	Terminal		
M93	19	Ground	No

Are continuity results as specified?


YES >> GO TO 2.

NO >> Repair harness or connector.

2. CHECK RGB SYNCHRONIZING SIGNAL

1. Connect display unit connector M93 and display control unit connector M95.
2. Turn ignition switch ON.
3. Check signal between display unit harness connector M93 terminal 19 and ground.

(+)		(-)	Condition	Reference signal
Connector	Terminal			
M93	19	Ground	Receive audio signal	<p>SKIB3603E</p>

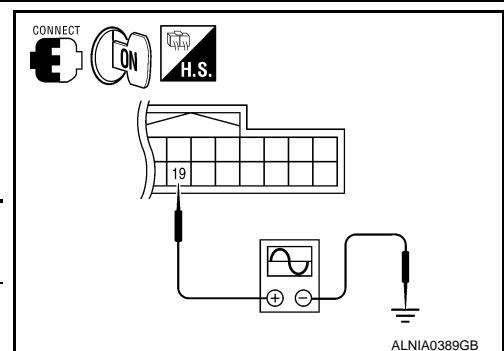

Are voltage readings as specified?

YES >> Replace display unit. Refer to [AV-307, "Removal and Installation"](#).

NO >> Replace display control unit. Refer to [AV-307, "Removal and Installation"](#).

RGB AREA (YS) SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

RGB AREA (YS) SIGNAL CIRCUIT

Description

INFOID:000000005387697

Transmits the display area of RGB image displayed by display control unit with RGB area (YS) signal to display unit.


Diagnosis Procedure

INFOID:000000005387698

Regarding Wiring Diagram information, refer to [AV-251, "Wiring Diagram"](#).

1. CHECK CONTINUITY RGB AREA (YS) SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect display unit connector M93 and display control unit connector M95.
3. Check continuity between display unit harness connector M93 (A) terminal 9 and display control unit harness connector M95 (B) terminal 51.

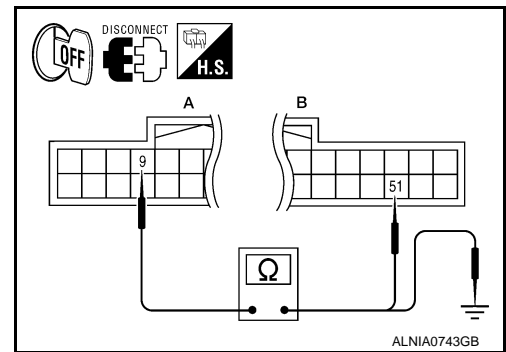

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M93	9	M95	51	Yes

4. Check continuity between display unit harness connector M93 (A) terminal 9 and ground.

A		—	Continuity
Connector	Terminal		
M93	9	Ground	No


Are continuity results as specified?

YES >> GO TO 2.

NO >> Repair harness or connector.

2. CHECK RGB SYNCHRONIZING SIGNAL

1. Connect display unit connector M93 and display control unit connector M95.
2. Turn ignition switch ON.
3. Check signal between display unit harness connector M93 terminal 9 and ground.

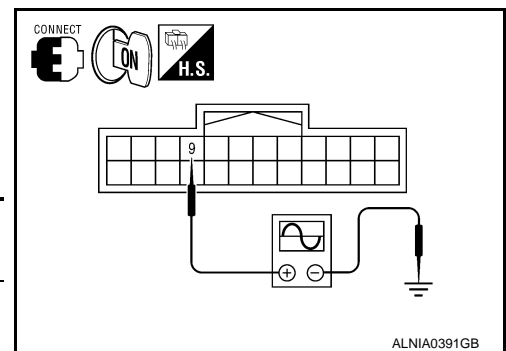

(+)		(-)	Condition	Reference signal
Connector	Terminal			
M93	9	Ground	Receive audio signal	<p>PK1B4948J</p>

Are voltage readings as specified?

YES >> Replace display unit. Refer to [AV-307, "Removal and Installation"](#).

NO >> Replace display control unit. Refer to [AV-307, "Removal and Installation"](#).

HORIZONTAL SYNCHRONIZING (HP) SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

HORIZONTAL SYNCHRONIZING (HP) SIGNAL CIRCUIT

Description

INFOID:000000005387699

In composite image (AUX image, camera image), transmit the vertical synchronizing (VP) signal and horizontal synchronizing (HP) signal from display unit to display control unit so as to synchronize the RGB images displayed with display control unit such as the image quality adjusting menu, etc.


Diagnosis Procedure

INFOID:000000005387700

Regarding Wiring Diagram information, refer to [AV-251. "Wiring Diagram"](#).

1. CHECK CONTINUITY HORIZONTAL SYNCHRONIZING (HP) SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect display unit connector M93 and display control unit connector M95.
3. Check continuity between display unit harness connector M93 (A) terminal 8 and display control unit harness connector M95 (B) terminal 55.

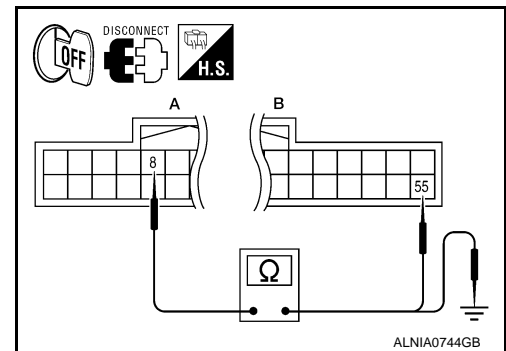

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M93	8	M95	55	Yes

4. Check continuity between display unit harness connector M93 (A) terminal 8 and ground.

A		—	Continuity
Connector	Terminal		
M93	8	Ground	No


Are continuity results as specified?

YES >> GO TO 2.

NO >> Repair harness or connector.

2. CHECK HORIZONTAL SYNCHRONIZING (HP) SIGNAL

1. Connect display unit connector M93 and display control unit connector M95.
2. Turn ignition switch ON.
3. Check signal between display unit harness connector M93 terminal 8 and ground.

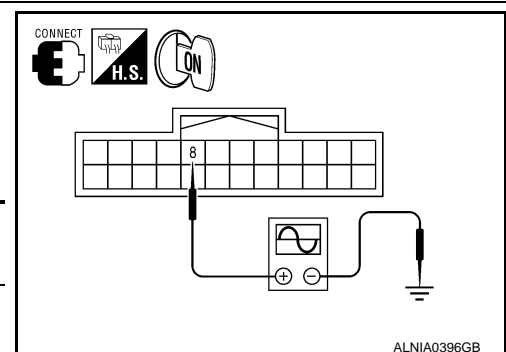

(+)		(-)	Condition	Reference signal
Connector	Terminal			
M93	8	Ground	Receive audio signal	<p>SKIB3601E</p>

Are voltage readings as specified?

YES >> Replace display control unit. Refer to [AV-307. "Removal and Installation"](#).

NO >> Replace display unit. Refer to [AV-307. "Removal and Installation"](#).

VERTICAL SYNCHRONIZING (VP) SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

VERTICAL SYNCHRONIZING (VP) SIGNAL CIRCUIT

Description

INFOID:000000005387701

In composite image (AUX image, camera image), transmit the vertical synchronizing (VP) signal and horizontal synchronizing (HP) signal from display unit to display control unit so as to synchronize the RGB images displayed with display control unit such as the image quality adjusting menu, etc.

Diagnosis Procedure


INFOID:000000005387702

Regarding Wiring Diagram information, refer to [AV-251, "Wiring Diagram"](#).

1. CHECK CONTINUITY VERTICAL SYNCHRONIZING (VP) SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect display unit connector M93 and display control unit connector M95.
3. Check continuity between display unit harness connector M93 (A) terminal 20 and display control unit harness connector M95 (B) terminal 53.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M93	20	M95	53	Yes

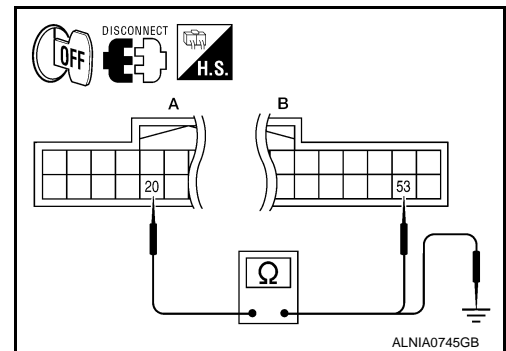

4. Check continuity between display unit harness connector M93 (A) terminal 20 and ground.

A		—	Continuity
Connector	Terminal		
M93	20	Ground	No


Are continuity results as specified?

- YES >> GO TO 2.
 NO >> Repair harness or connector.

2. CHECK VERTICAL SYNCHRONIZING (VP) SIGNAL

1. Connect display unit connector M93 and display control unit connector M95.
2. Turn ignition switch ON.
3. Check signal between display unit harness connector M93 terminal 20 and ground.

(+)		(-)	Condition	Reference signal
Connector	Terminal			
M93	20	Ground	Receive audio signal	<p style="text-align: right; font-size: small;">SKIB3598E</p>

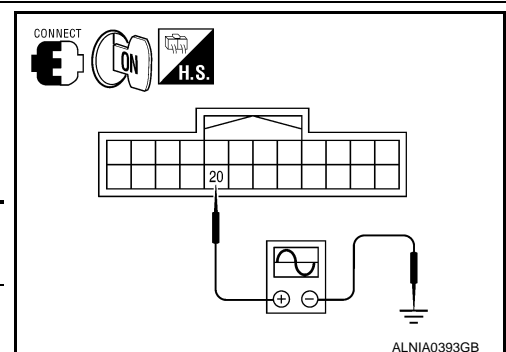

Are voltage readings as specified?

- YES >> Replace display control unit. Refer to [AV-307, "Removal and Installation"](#).
 NO >> Replace display unit. Refer to [AV-307, "Removal and Installation"](#).

FRONT DOOR SPEAKER

< COMPONENT DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

FRONT DOOR SPEAKER

Description

INFOID:000000005387703

The audio unit sends audio signals to the audio amp. The audio amp. amplifies the audio signals before sending them to the front door speakers using the audio signal circuits.

Diagnosis Procedure

INFOID:000000005387704

Regarding Wiring Diagram information, refer to [AV-251, "Wiring Diagram"](#).


1. SPEAKER HARNESS CHECK

1. Disconnect audio amp. connector M113 and suspect speaker connector.
2. Check continuity between audio amp. harness connector M113 (A) and suspect speaker harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M113	15	D12	1	Yes
	31		2	
	16	D112	1	
	32		2	

3. Check continuity between audio amp. harness connector M113 (A) and ground.

A		—	Continuity
Connector	Terminal		
M113	15	Ground	No
	31		
	16		
	32		

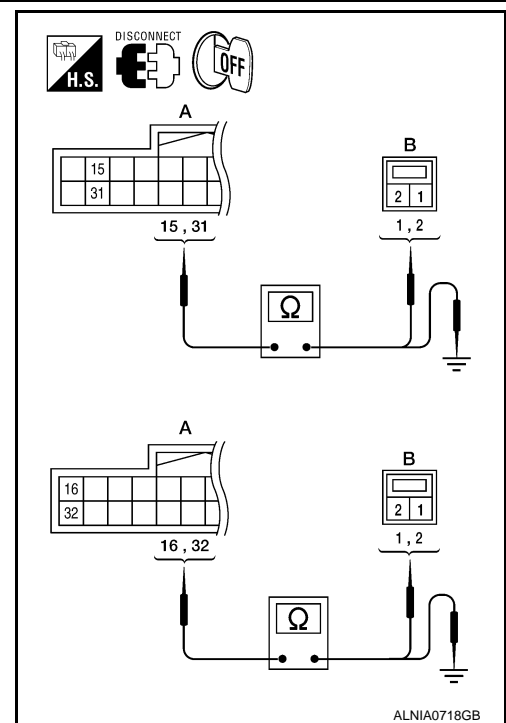

Are continuity test results as specified?

YES >> GO TO 2.

- NO >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.

2. FRONT DOOR SPEAKER SIGNAL CHECK

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P


FRONT DOOR SPEAKER

[PREMIUM WITH NAVIGATION]

< COMPONENT DIAGNOSIS >

1. Connect audio amp. connector M113 and suspect speaker connector.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio amp. harness connector M113 terminals with CONSULT-III or oscilloscope.

Connector	Terminal		Condition	Reference signal
	(+)	(-)		
M113	15	31	Receive audio signal	
	16	32		

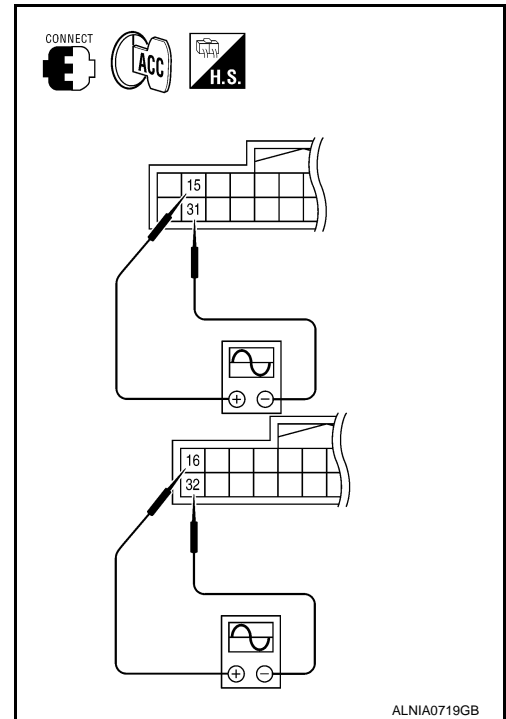

Is audio signal voltage as specified?

YES >> Replace suspect speaker. Refer to [AV-310. "Removal and Installation"](#).

NO >> GO TO 3.


3. PRE-AMP HARNESS CHECK

1. Disconnect audio unit connector M43 and audio amp. connector M113.
2. Check continuity between audio unit harness connector M43 (A) and audio amp. harness connector M113 (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M43	1	M113	6	Yes
	2		22	
	3		5	
	4		21	

3. Check continuity between audio unit harness connector M43 (A) and ground.

A		—	Continuity
Connector	Terminal		
M43	1	Ground	No
	2		
	3		
	4		

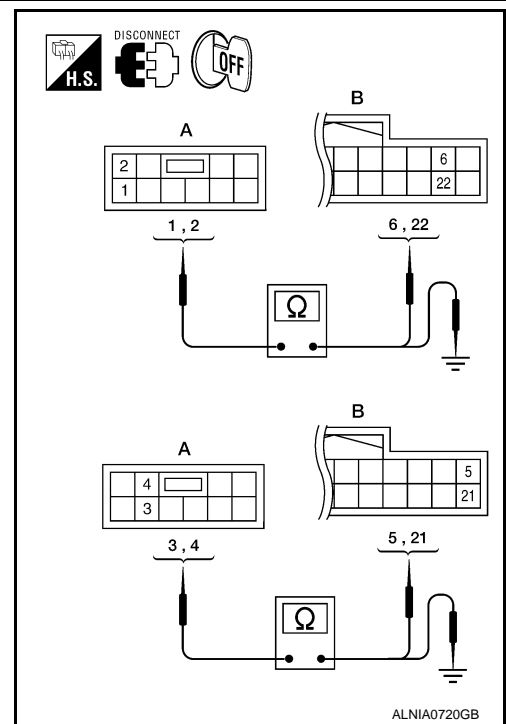

Are continuity test results as specified?

YES >> GO TO 4.

NO >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.


4. PRE-AMP SIGNAL CHECK

FRONT DOOR SPEAKER

[PREMIUM WITH NAVIGATION]

< COMPONENT DIAGNOSIS >

1. Connect audio unit connector and audio amp. connector.
2. Turn ignition switch ACC.
3. Push "POWER" switch.
4. Check the signal between audio unit harness connector M43 terminals with CONSULT-III or oscilloscope.

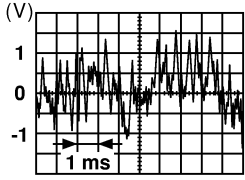
Connector	Terminals		Condition	Reference signal
	(+)	(-)		
M43	2	1	Receive audio signal	
	4	3		

SKIA0177E

Are the audio signal voltage readings as specified?

YES >> Replace audio amp. Refer to [AV-315, "Removal and Installation"](#).

NO >> Replace audio unit. Refer to [AV-306, "Removal and Installation"](#).

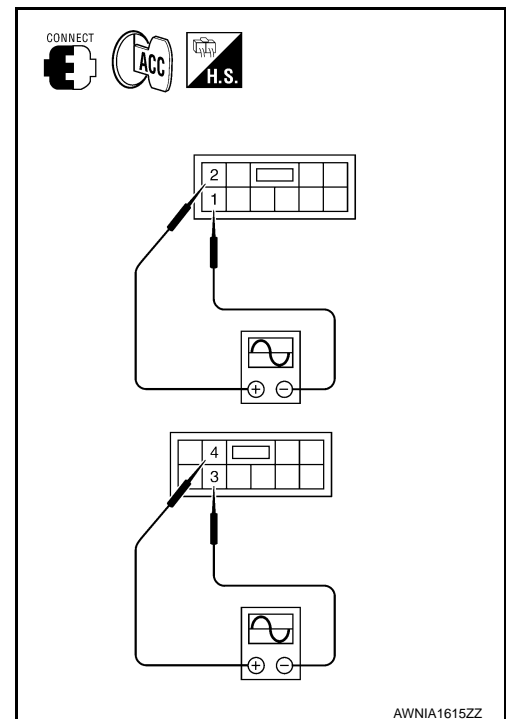

AWNIA1615ZZ

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

FRONT TWEETER

Description

INFOID:000000005387705

The audio unit sends audio signals to the audio amp. The audio amp. amplifies the audio signals before sending them to the tweeters using the audio signal circuits.

Diagnosis Procedure

INFOID:000000005387706

Regarding Wiring Diagram information, refer to [AV-251, "Wiring Diagram"](#).


1. HARNESS CHECK

1. Disconnect audio amp. connector M113 and suspect tweeter connector.
2. Check continuity between audio amp. harness connector M113 (A) and suspect tweeter harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M113	14	M109	1	Yes
	30		2	
	13	M111	1	
	29		2	

3. Check continuity between audio amp. harness connector M113 (A) and ground.

A		—	Continuity
Connector	Terminal		
M113	14	Ground	No
	30		
	13		
	29		

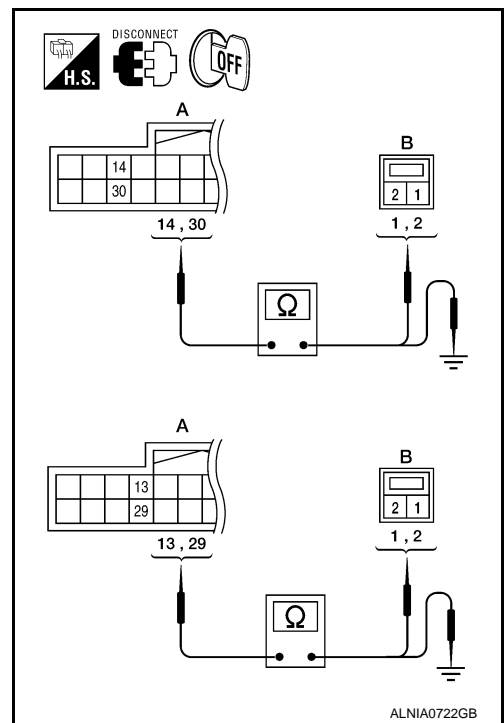

Are continuity test results as specified?

YES >> GO TO 2.

- NO >> • Check connector housings for disconnected or loose terminals.
 • Repair harness or connector.

2. FRONT TWEETER SIGNAL CHECK

FRONT TWEETER

[PREMIUM WITH NAVIGATION]

< COMPONENT DIAGNOSIS >

1. Connect audio amp. connector M113 and suspect tweeter connector.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio amp. harness connector M113 terminals with CONSULT-III or oscilloscope.

Connector	Terminal		Condition	Reference signal
	(+)	(-)		
M113	14	30	Receive audio signal	
	13	29		

Is audio signal voltage as specified?

YES >> Replace suspect tweeter. Refer to [AV-308. "Removal and Installation"](#).

NO >> GO TO 3.

3. PRE-AMP HARNESS CHECK

1. Disconnect audio unit connector M43 and audio amp. connector M113.
2. Check continuity between audio unit harness connector M43 (A) and audio amp. harness connector M113 (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M43	1	M113	6	Yes
	2		22	
	3		5	
	4		21	

3. Check continuity between audio unit harness connector M43 (A) and ground.



A		—	Continuity
Connector	Terminal		
M43	1	Ground	No
	2		
	3		
	4		

Are continuity test results as specified?

YES >> GO TO 4.

- NO >>
- Check connector housings for disconnected or loose terminals.
 - Repair harness or connector.

4. PRE-AMP SIGNAL CHECK

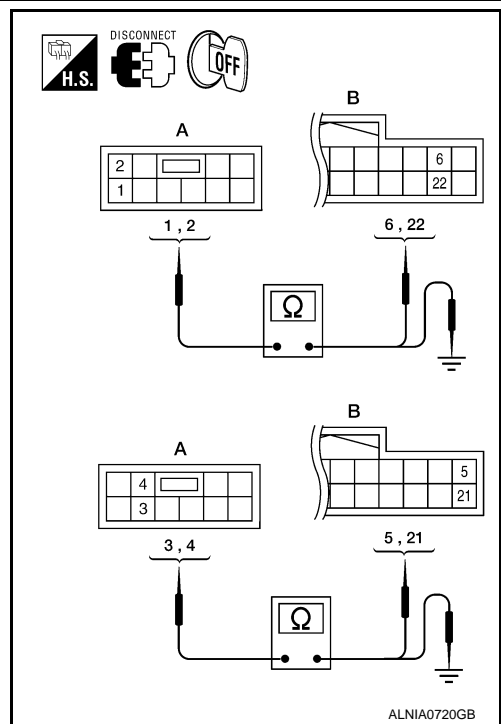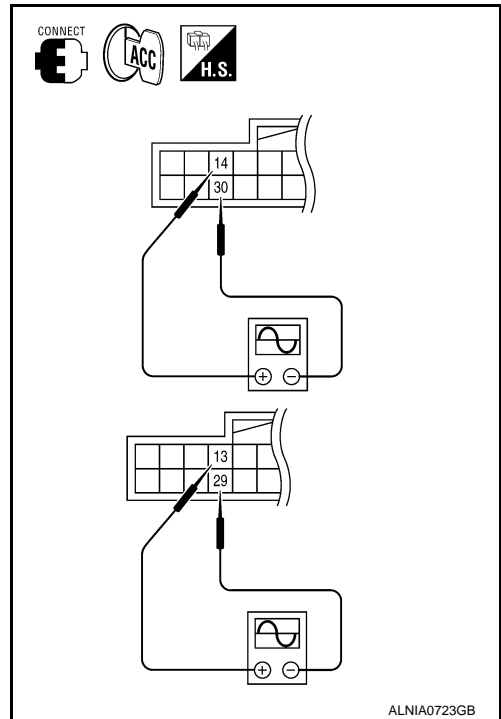

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P


AV

FRONT TWEETER

[PREMIUM WITH NAVIGATION]


< COMPONENT DIAGNOSIS >

1. Connect audio unit connector and audio amp. connector.
2. Turn ignition switch ACC.
3. Push "POWER" switch.
4. Check the signal between audio unit harness connector M43 terminals with CONSULT-III or oscilloscope.

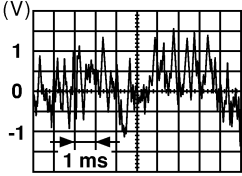Connector	Terminals		Condition	Reference signal
	(+)	(-)		
M43	2	1	Receive audio signal	 <p style="text-align: right; font-size: small;">SKIA0177E</p>
	4	3		

Are the audio signal voltage readings as specified?

- YES >> Replace audio amp. Refer to [AV-315, "Removal and Installation"](#).
- NO >> Replace audio unit. Refer to [AV-306, "Removal and Installation"](#).

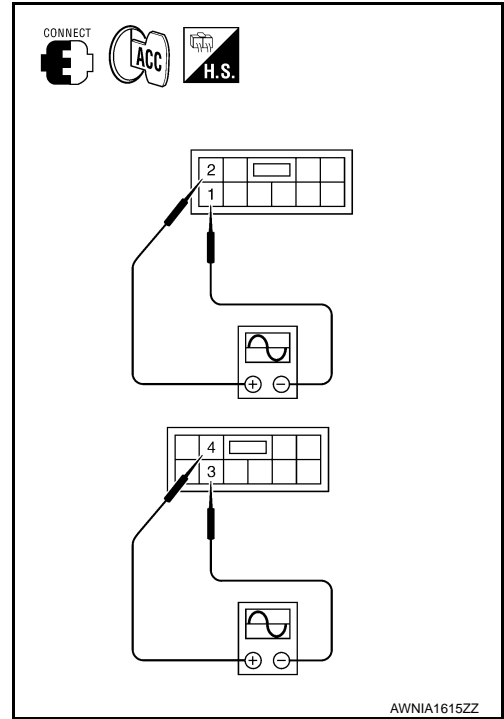

CENTER SPEAKER

Description

INFOID:000000005387707

The audio unit sends audio signals to the audio amp. The audio amp. amplifies the audio signals before sending them to the center speaker using the audio signal circuits.

Diagnosis Procedure


INFOID:000000005387708

Regarding Wiring Diagram information, refer to [AV-251, "Wiring Diagram"](#).

1. CENTER SPEAKER HARNESS CHECK

1. Disconnect audio amp. connector M113 and center speaker connector M110.
2. Check continuity between audio amp. harness connector M113 (A) and center speaker harness connector M110 (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M113	10	M110	1	Yes
	26		2	

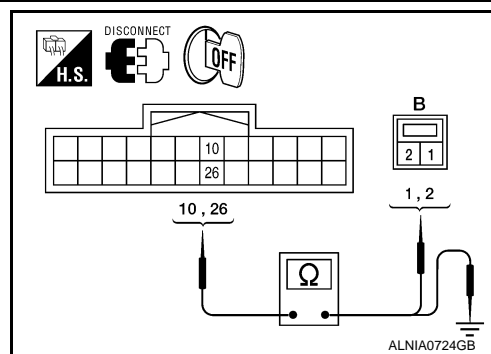

3. Check continuity between audio amp. harness connector M113 (A) and ground.

A		—	Continuity
Connector	Terminal		
M113	10	Ground	No
	26		


Are continuity test results as specified?

YES >> GO TO 2.

- NO >> • Check connector housings for disconnected or loose terminals.
 • Repair harness or connector.

2. CENTER SPEAKER SIGNAL CHECK

1. Connect audio amp. connector M113 and center speaker connector M110.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio amp. harness connector M113 terminals with CONSULT-III or oscilloscope.

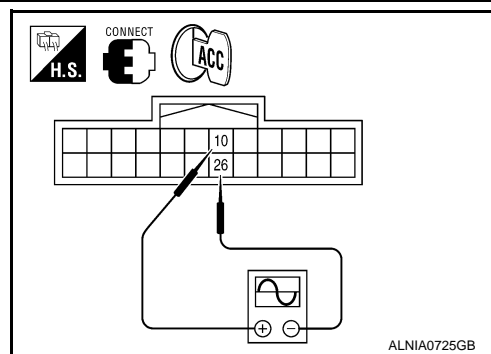

Connector	Terminals		Condition	Reference signal
	(+)	(-)		
M113	10	26	Receive audio signal	<p style="text-align: right; font-size: small;">SKIA0177E</p>

Is the audio signal voltage reading as specified?

CENTER SPEAKER

[PREMIUM WITH NAVIGATION]

< COMPONENT DIAGNOSIS >

- YES >> Replace center speaker. Refer to [AV-309, "Removal and Installation"](#).
 NO >> GO TO 3.

3. PRE-AMP HARNESS CHECK

1. Disconnect audio unit connector M43 and audio amp. connector M113.
2. Check continuity between audio unit harness connector M43 (A) and audio amp. harness connector M113 (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M43	1	M113	6	Yes
	2		22	
	3		5	
	4		21	

3. Check continuity between audio unit harness connector M43 (A) and ground.


A		—	Continuity
Connector	Terminal		
M43	1	Ground	No
	2		
	3		
	4		

Are continuity test results as specified?

- YES >> GO TO 4.
 NO >> • Check connector housings for disconnected or loose terminals.
 • Repair harness or connector.

4. PRE-AMP SIGNAL CHECK



1. Connect audio unit connector and audio amp. connector.
2. Turn ignition switch ACC.
3. Push "POWER" switch.
4. Check the signal between audio unit harness connector M43 terminals with CONSULT-III or oscilloscope.

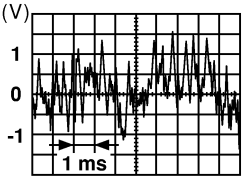Connector	Terminals		Condition	Reference signal
	(+)	(-)		
M43	2	1	Receive audio signal	
	4	3		

SKIA0177E

Are the audio signal voltage readings as specified?

- YES >> Replace audio amp. Refer to [AV-315, "Removal and Installation"](#).
 NO >> Replace audio unit. Refer to [AV-306, "Removal and Installation"](#).

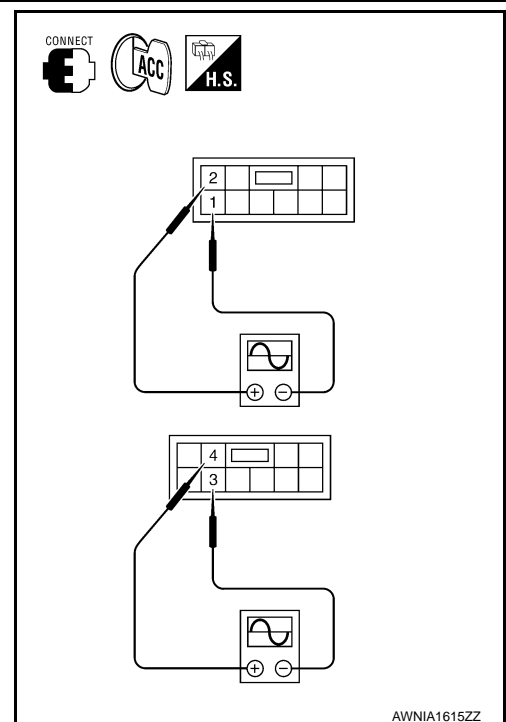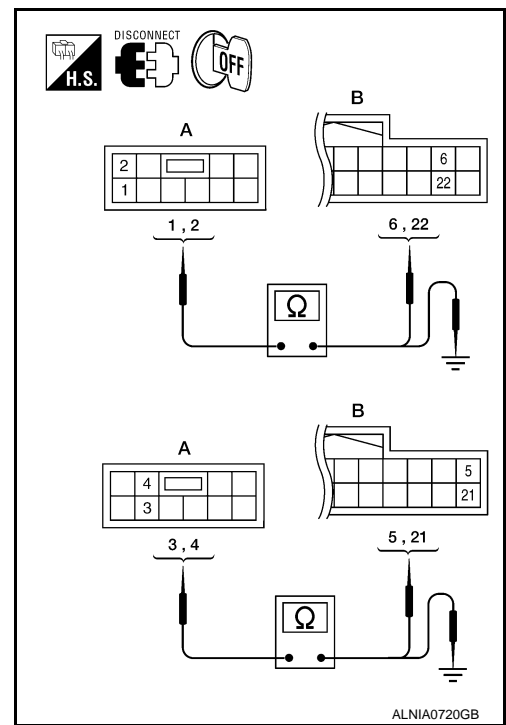

REAR DOOR SPEAKER

< COMPONENT DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

REAR DOOR SPEAKER

Description

INFOID:000000005387709

The audio unit sends audio signals to the audio amp. The audio amp. amplifies the audio signals before sending them to the rear door speakers using the audio signal circuits.

Diagnosis Procedure

INFOID:000000005387710

Regarding Wiring Diagram information, refer to [AV-251, "Wiring Diagram"](#).


1. SPEAKER HARNESS CHECK

1. Disconnect audio amp. connector M113 and suspect speaker connector.
2. Check continuity between audio amp. harness connector M113 (A) and suspect speaker harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M113	11	D207 (crew cab) B76 (king cab)	1	Yes
	27		2	
	12	D307 (crew cab) B159 (king cab)	1	
	28		2	

3. Check continuity between audio amp. harness connector M113 (A) and ground.

A		-	Continuity
Connector	Terminal		
M113	11	Ground	No
	27		
	12		
	28		

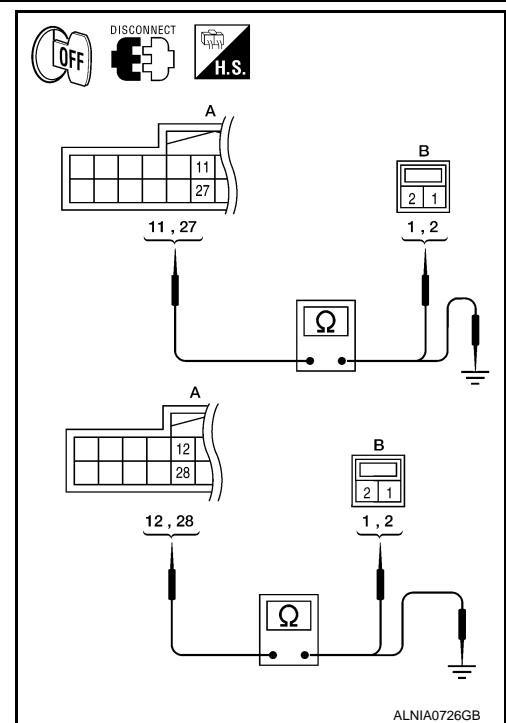

Are the continuity test results as specified?

YES >> GO TO 2.

- NO >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.

2. SPEAKER SIGNAL CHECK

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

REAR DOOR SPEAKER


[PREMIUM WITH NAVIGATION]

< COMPONENT DIAGNOSIS >

1. Connect audio amp. connector and suspect speaker connector.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio amp. harness connector M113 terminals with CONSULT-III or oscilloscope.

Connector	Terminals		Condition	Reference signal
	(+)	(-)		
M113	11	27	Receive audio signal	
	12	28		

SKIA0177E

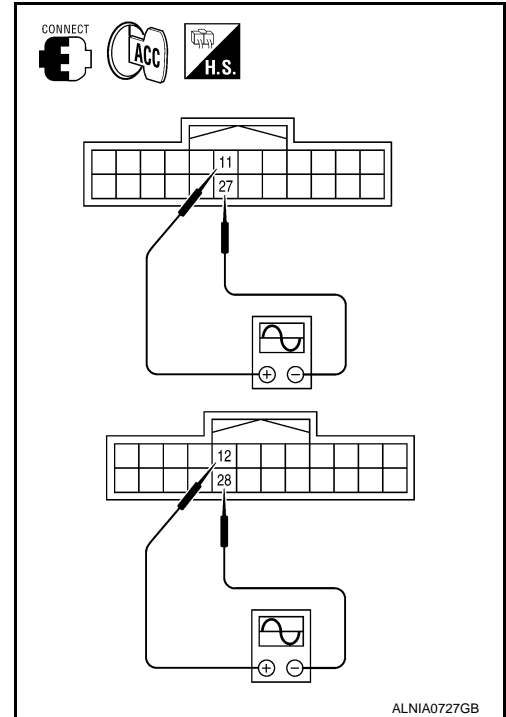

Are audio signal voltage readings as specified?

- YES >> Replace suspect speaker. Refer to [AV-311, "Removal and Installation"](#).
- NO >> GO TO 3.


3. PRE-AMP HARNESS CHECK

1. Disconnect audio unit connector M44 and audio amp. connector M113.
2. Check continuity between audio unit harness connector M44 (A) and audio amp. harness connector M113 (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M44	13	M113	8	Yes
	14		24	
	15		7	
	16		23	

3. Check continuity between audio unit harness connector M44 (A) and ground.

A		—	Continuity
Connector	Terminal		
M44	13	Ground	No
	14		
	15		
	16		

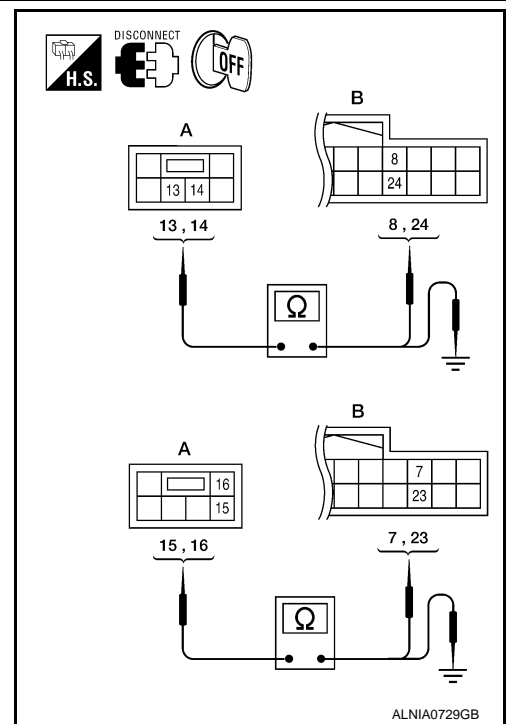

Are the continuity test results as specified?

- YES >> GO TO 4.
- NO >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.


4. PRE-AMP SIGNAL CHECK

REAR DOOR SPEAKER

[PREMIUM WITH NAVIGATION]


< COMPONENT DIAGNOSIS >

1. Connect audio unit connector M44 and audio amp. connector M113.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio unit harness connector M44 terminals with CONSULT-III or oscilloscope.

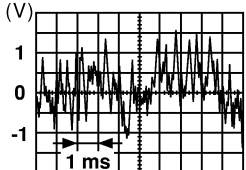Connector	Terminals		Condition	Reference signal
	(+)	(-)		
M44	14	13	Receive audio signal	 <p style="text-align: right; font-size: small;">SKIA0177E</p>
	16	15		

Is the audio signal voltage reading as specified?

- YES >> Replace audio amp. Refer to [AV-315. "Removal and Installation"](#).
- NO >> Replace audio unit. Refer to [AV-306. "Removal and Installation"](#).

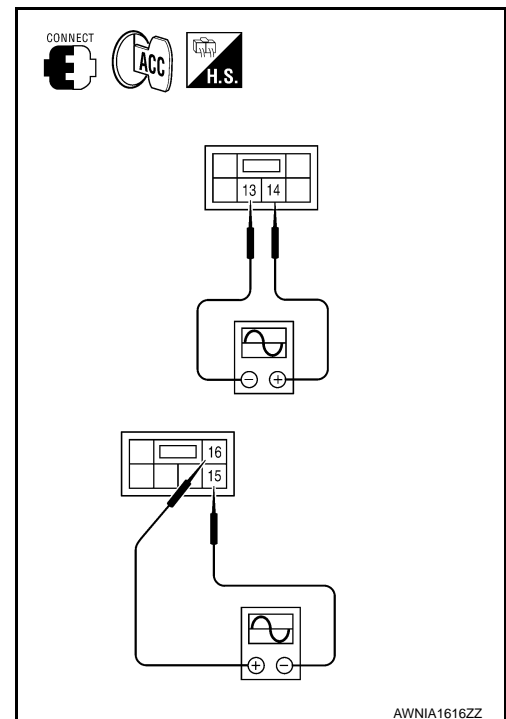

A
B
C
D
E
F
G
H
I
J
K
L
M

AV

O
P

REAR DOOR TWEETER

Description

INFOID:000000005387711

The audio unit sends audio signals to the audio amp. The audio amp. amplifies the audio signals before sending them to the rear door tweeters using the audio signal circuits.

Diagnosis Procedure

INFOID:000000005387712

Regarding Wiring Diagram information, refer to [AV-251, "Wiring Diagram"](#).


1. TWEETER HARNESS CHECK

1. Disconnect audio amp. connector M113 and suspect tweeter connector.
2. Check continuity between audio amp. harness connector M113 (A) and suspect tweeter harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M113	11	D208	1	Yes
	27		2	
	12	D308	1	
	28		2	

3. Check continuity between audio amp. harness connector M113 (A) and ground.

A		-	Continuity
Connector	Terminal		
M113	11	Ground	No
	27		
	12		
	28		

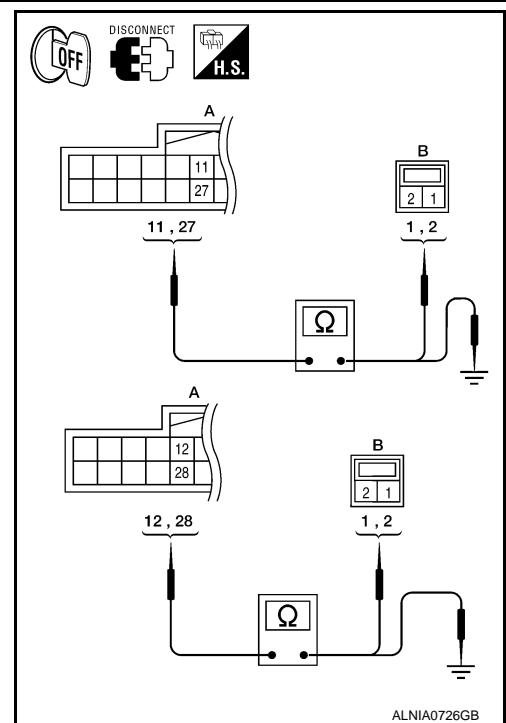

Are the continuity test results as specified?

YES >> GO TO 2.

- NO >> • Check connector housings for disconnected or loose terminals.
 • Repair harness or connector.

2. TWEETER SIGNAL CHECK

REAR DOOR TWEETER

[PREMIUM WITH NAVIGATION]


< COMPONENT DIAGNOSIS >

1. Connect audio amp. connectors and suspect tweeter connector.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio amp. harness connectors M113 terminals with CONSULT-III or oscilloscope.

Connector	Terminals		Condition	Reference signal
	(+)	(-)		
M113	11	27	Receive audio signal	
	12	28		

Are audio signal voltage readings as specified?

- YES >> Replace suspect tweeter. Refer to [AV-311, "Removal and Installation"](#).
- NO >> GO TO 3.

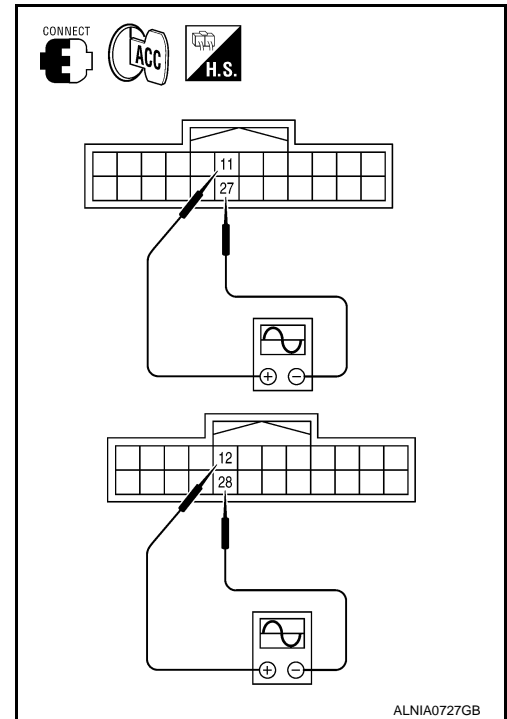

3. PRE-AMP HARNESS CHECK

1. Disconnect audio unit connector M44 and audio amp. connector M113.
2. Check continuity between audio unit harness connector M44 (A) and audio amp. harness connector M113 (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M44	13	M113	8	Yes
	14		24	
	15		7	
	16		23	


3. Check continuity between audio unit harness connector M44 (A) and ground.

A		—	Continuity
Connector	Terminal		
M44	13	Ground	No
	14		
	15		
	16		

Are the continuity test results as specified?

- YES >> GO TO 4.
- NO >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.

4. PRE-AMP SIGNAL CHECK

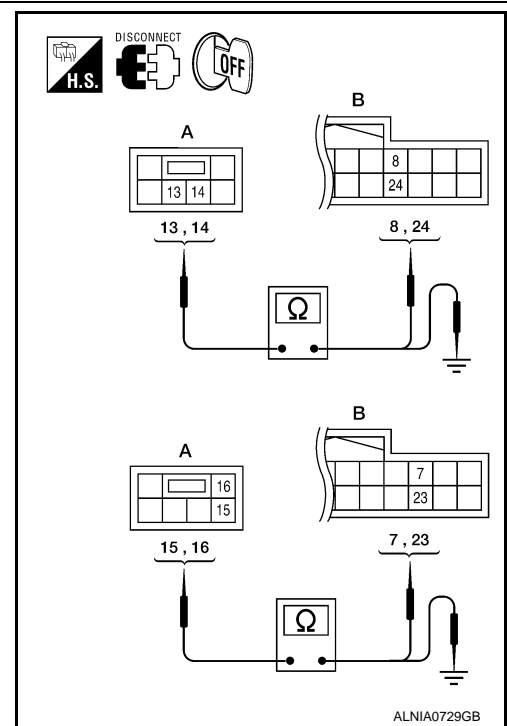


REAR DOOR TWEETER

[PREMIUM WITH NAVIGATION]


< COMPONENT DIAGNOSIS >

1. Connect audio unit connector M44 and audio amp. connector M113.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio unit harness connector M44 terminals with CONSULT-III or oscilloscope.

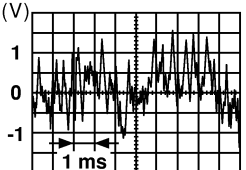Connector	Terminals		Condition	Reference signal
	(+)	(-)		
M44	14	13	Receive audio signal	 <p style="text-align: center;">SKIA0177E</p>
	16	15		

Is the audio signal voltage reading as specified?

- YES >> Replace audio amp. Refer to [AV-315, "Removal and Installation"](#).
- NO >> Replace audio unit. Refer to [AV-306, "Removal and Installation"](#).

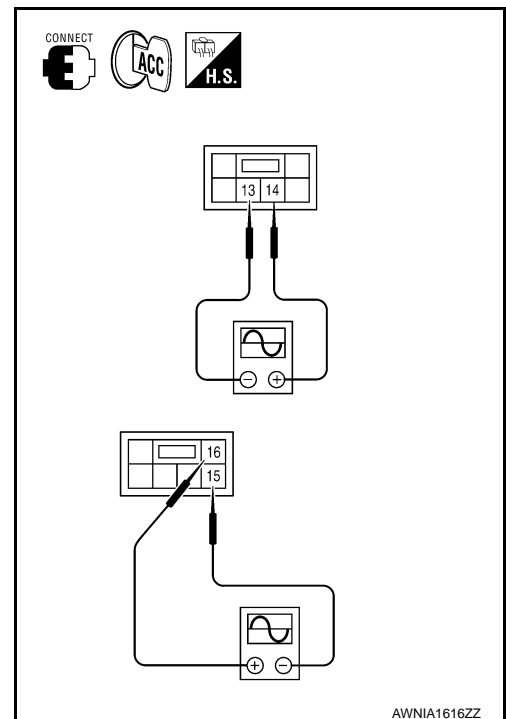

SUBWOOFER

< COMPONENT DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

SUBWOOFER

Description

INFOID:000000005387713

The audio unit sends audio signals to the audio amp. The audio amp. amplifies the audio signals before sending them to the subwoofer using the audio signal circuits.


Diagnosis Procedure

INFOID:000000005387714

Regarding Wiring Diagram information, refer to [AV-251, "Wiring Diagram"](#).

1.SUBWOOFER HARNESS CHECK

1. Disconnect audio amp. connector M112 and subwoofer connector B72.
2. Check continuity between audio amp. harness connector M112 (A) and subwoofer harness connector B72 (B).

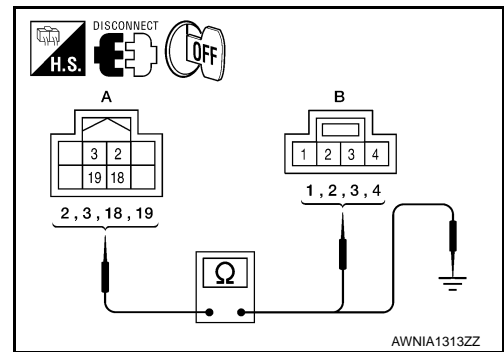

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M112	2	B72	1	Yes
	3		3	
	18		2	
	19		4	

3. Check continuity between audio amp. harness connector M112 (A) and ground.

A		—	Continuity
Connector	Terminal		
M112	2	Ground	No
	3		
	18		
	19		

Are the continuity test results as specified?

YES >> GO TO 2.

- NO >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.

2.SUBWOOFER SIGNAL CHECK

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

SUBWOOFER

< COMPONENT DIAGNOSIS >

1. Connect audio amp. connector M112 and subwoofer connector B72.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio amp. harness connector M112 terminals with CONSULT-III or oscilloscope.

Connector	Terminals		Condition	Reference signal
	(+)	(-)		
M112	2	18	Receive audio signal	
	3	19		

SKIA0177E

Is the audio signal voltage as specified?

YES >> Replace subwoofer. Refer to [AV-312. "Removal and Installation"](#).

NO >> GO TO 3.

3. PRE-AMP HARNESS CHECK

1. Disconnect audio unit connector M44 and audio amp. connector M113.
2. Check continuity between audio unit harness connector M44 (A) and audio amp. harness connector M113 (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M44	13	M113	8	Yes
	14		24	
	15		7	
	16		23	

3. Check continuity between audio unit harness connector M44 (A) and ground.

A		—	Continuity
Connector	Terminal		
M44	13	Ground	No
	14		
	15		
	16		



Are the continuity test results as specified?

YES >> GO TO 4.

NO >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.

4. PRE-AMP SIGNAL CHECK

[PREMIUM WITH NAVIGATION]

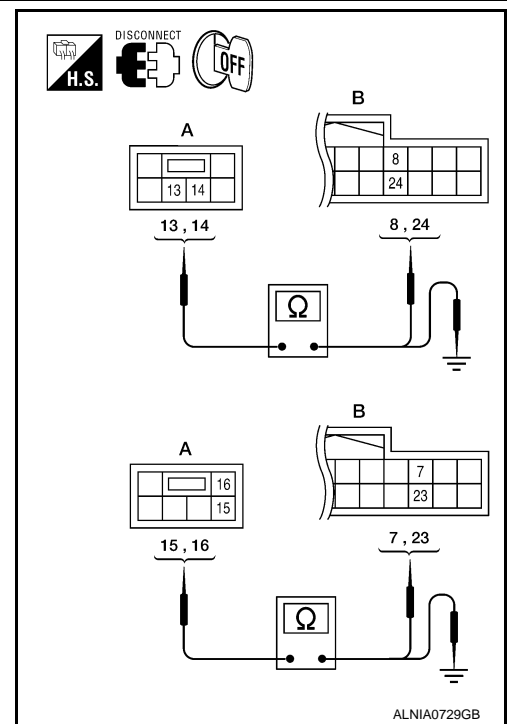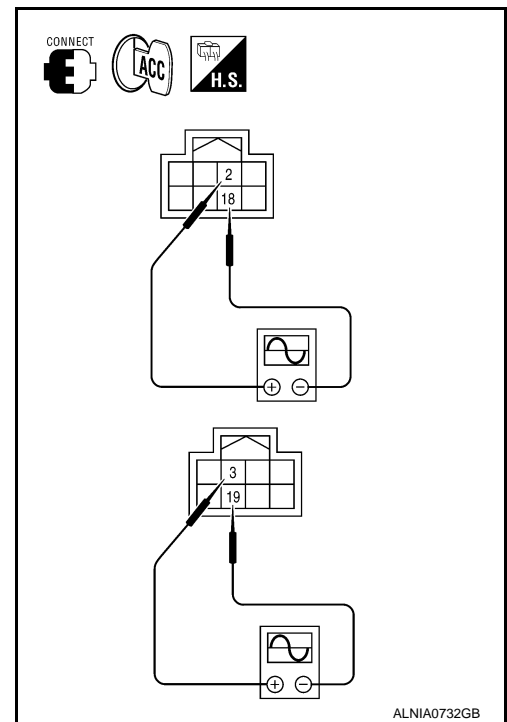


SUBWOOFER

< COMPONENT DIAGNOSIS >


[PREMIUM WITH NAVIGATION]

1. Connect audio unit connector M44 and audio amp. connector M113.
2. Turn ignition switch to ACC.
3. Push "POWER" switch.
4. Check the signal between audio unit harness connector M44 terminals with CONSULT-III or oscilloscope.

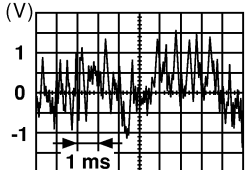Connector	Terminals		Condition	Reference signal
	(+)	(-)		
M44	14	13	Receive audio signal	 <p style="text-align: center; font-size: small;">SKIA0177E</p>
	16	15		

Is the audio signal voltage reading as specified?

- YES >> Replace audio amp. Refer to [AV-315. "Removal and Installation"](#).
- NO >> Replace audio unit. Refer to [AV-306. "Removal and Installation"](#).

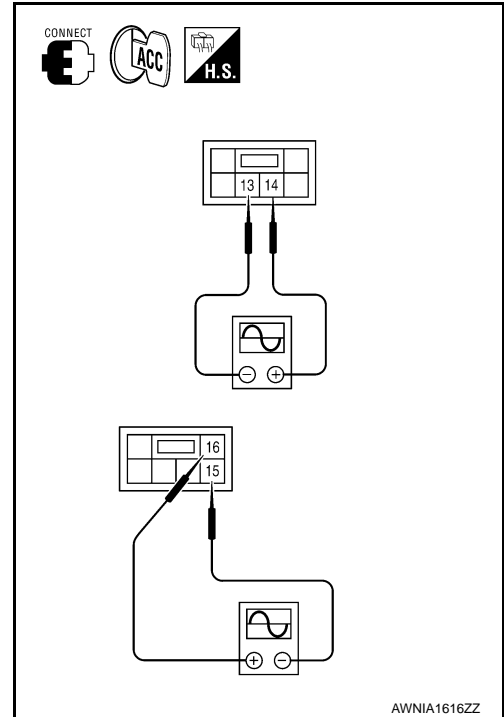

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

AMP ON SIGNAL CIRCUIT

Description

INFOID:000000005387715

When the audio system is turned on, a voltage signal is supplied from the audio unit to the audio amp. When this signal is received, the audio amp. will turn on.

Diagnosis Procedure

INFOID:000000005387716

Regarding Wiring Diagram information, refer to [AV-251, "Wiring Diagram"](#).


1. CHECK AMP ON SIGNAL

1. Turn audio system ON.
2. Check voltage between audio amp. harness connector M113 terminal 9 and ground.

(+)		(-)	Voltage (approx.)
Connector	Terminal		
M113	9	Ground	More than 6.5V

Is inspection result normal?

- YES >> Inspection End.
 NO >> GO TO 2.

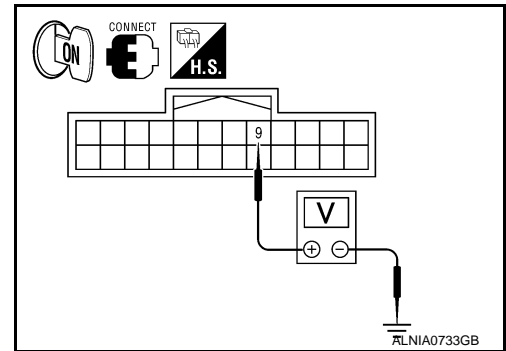


2. CHECK AMP ON SIGNAL (AUDIO UNIT)

Check voltage between audio unit harness connector M44 terminal 12 and ground.

(+)		(-)	Voltage (approx.)
Connector	Terminal		
M44	12	Ground	More than 6.5V

Is inspection result normal?

- YES >> Repair harness or connector.
 NO >> Replace audio unit. Refer to [AV-306, "Removal and Installation"](#).

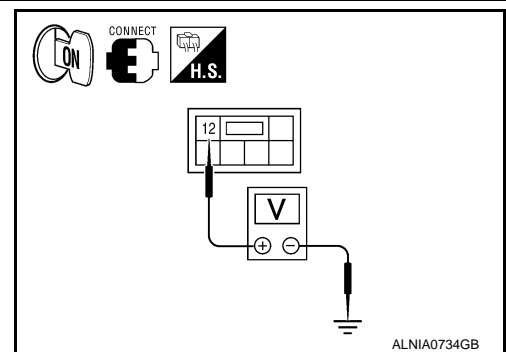

STEERING SWITCH

< COMPONENT DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

STEERING SWITCH

Description

INFOID:000000005387717

When one of the steering wheel audio control switches is pushed, the resistance in the steering wheel audio control switch circuit changes depending on which button is pushed.

Diagnosis Procedure


INFOID:000000005387718

Regarding Wiring Diagram information, refer to [AV-251, "Wiring Diagram"](#).

1. CHECK STEERING WHEEL AUDIO CONTROL SWITCH RESISTANCE

1. Turn ignition switch OFF.
2. Disconnect steering wheel audio control switch connector M102.
3. Check resistance between steering switch connector terminals.

Terminal	Signal name	Condition	Resistance (Ω) (Approx.)	
16	17	Seek (down)	Depress ▽ switch.	165
		Volume (down)	Depress VOL down switch.	487
		Phone/Send	Depress MODE switch.	0
20	17	Seek (up)	Depress △ switch.	165
		Volume (up)	Depress VOL up switch.	487
		Mode/End (with Bluetooth)	Depress switch.	0

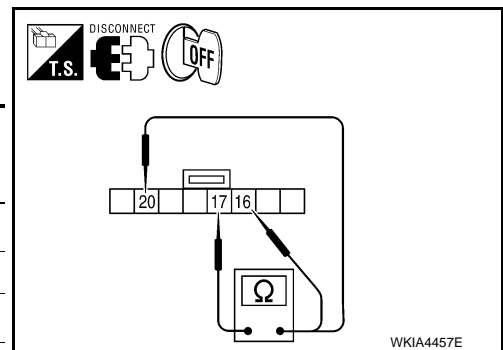

Do the steering wheel audio control switches check OK?


YES >> GO TO 2.

NO >> Replace steering wheel audio control switch. Refer to [AV-313, "Removal and Installation"](#).

2. CHECK HARNESS

1. Disconnect Bluetooth control unit connector B142 and spiral cable connector M30.
2. Check continuity between Bluetooth control unit harness connector B142 (A) and spiral cable harness connector M30 (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
B142	12	M30	24	Yes
	13		32	
	14		31	

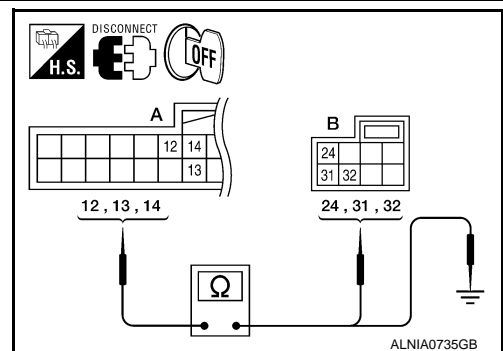

3. Check continuity between Bluetooth control unit connector B142 (A) and ground.

A		—	Continuity
Connector	Terminal		
B142	12	Ground	No
	13		
	14		

Are the continuity results as specified?

STEERING SWITCH

[PREMIUM WITH NAVIGATION]

< COMPONENT DIAGNOSIS >

- YES >> GO TO 3.
- NO >> Repair harness.


3. SPIRAL CABLE CHECK

Check continuity between spiral cable harness connector M30 (A) and M102 (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M30	24	M102	20	Yes
	31		17	
	32		16	

Does the spiral cable check OK?

- YES >> Inspection End.
- NO >> Replace spiral cable. Refer to [SR-6, "Removal and Installation"](#).

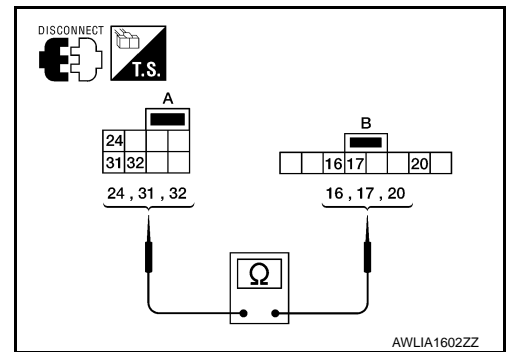

AWLIA1602ZZ

COMMUNICATION SIGNAL CIRCUIT

[PREMIUM WITH NAVIGATION]

< COMPONENT DIAGNOSIS >

COMMUNICATION SIGNAL CIRCUIT SATELLITE RADIO TUNER

SATELLITE RADIO TUNER : Description

INFOID:000000005387719

Communication signals are exchanged between the audio unit and satellite radio tuner using the communication circuits.


SATELLITE RADIO TUNER : Diagnosis Procedure

INFOID:000000005387720

Regarding Wiring Diagram information, refer to [AV-251, "Wiring Diagram"](#).

1. CHECK HARNESS - REQ1

1. Turn ignition switch OFF.
2. Disconnect satellite radio tuner (factory installed) connector M41 and audio unit connector M42.
3. Check continuity between satellite radio tuner (factory installed) harness connector M41 (A) terminal 28 and audio unit harness connector M42 (B) terminal 48.

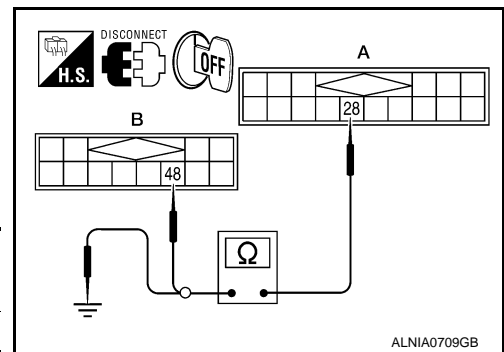

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M41	28	M42	48	Yes

4. Check continuity between satellite radio tuner (factory installed) harness connector M41 (A) terminal 28 and ground.

A		—	Continuity
Connector	Terminal		
M41	28	Ground	No


Are continuity results as specified?

YES >> GO TO 2.

NO >> Repair harness or connector.

2. CHECK HARNESS - TXD

1. Check continuity between satellite radio tuner (factory installed) harness connector M41 (A) terminal 29 and audio unit harness connector M42 (B) terminal 49.

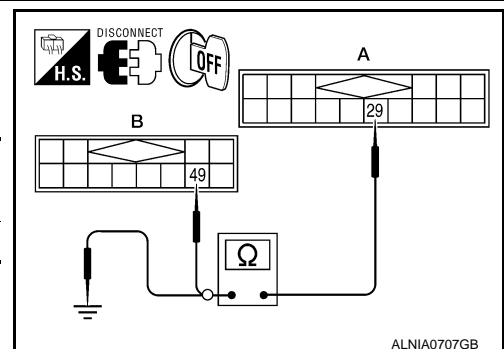

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M41	29	M42	49	Yes

2. Check continuity between satellite radio tuner (factory installed) harness connector M41 (A) terminal 29 and ground.

A		—	Continuity
Connector	Terminal		
M41	29	Ground	No

Are continuity results as specified?

YES >> GO TO 3.

NO >> Repair harness or connector.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

COMMUNICATION SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

3. CHECK HARNESS - RXD

1. Check continuity between satellite radio tuner (factory installed) harness connector M41 (A) terminal 30 and audio unit harness connector M42 (B) terminal 50.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M41	30	M42	50	Yes

2. Check continuity between satellite radio tuner (factory installed) harness connector M41 (A) terminal 30 and ground.

A		—	Continuity
Connector	Terminal		
M41	30	Ground	No


Are continuity results as specified?

YES >> GO TO 4.

NO >> Repair harness or connector.

4. CHECK REQ1 SIGNAL

1. Connect satellite radio tuner (factory installed) connector and audio unit connector.
2. Turn ignition switch to ACC
3. Check signal between satellite radio tuner (factory installed) harness connector M41 terminal 28 and ground with CONSULT-III or oscilloscope.

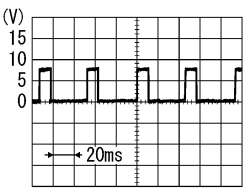(+)		(-)	Reference signal
Connector	Terminal		
M41	28	Ground	 <p>SKIB3825E</p>


Are voltage readings as specified?




YES >> GO TO 5.

NO >> Replace audio unit. Refer to [AV-306. "Removal and Installation"](#).

5. CHECK TXD SIGNAL

Check signal between satellite radio tuner (factory installed) harness connector M41 terminal 29 and ground with CONSULT-III or oscilloscope.

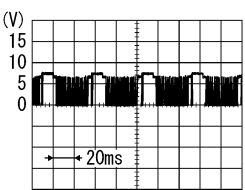(+)		(-)	Reference signal
Connector	Terminal		
M41	29	Ground	 <p>SKIB3824E</p>

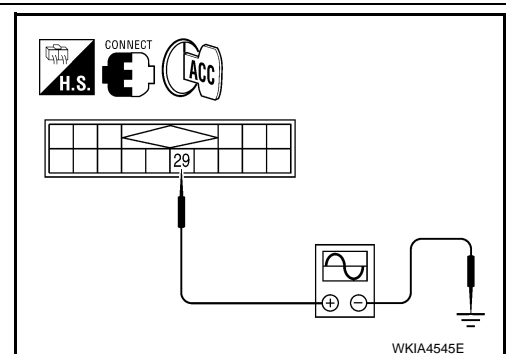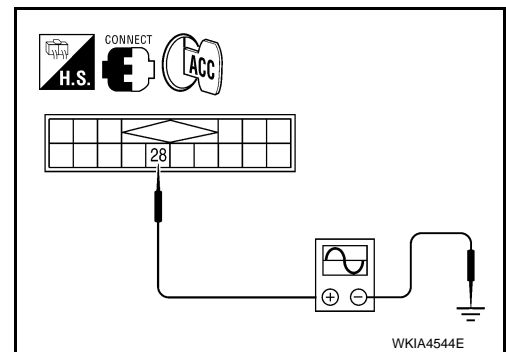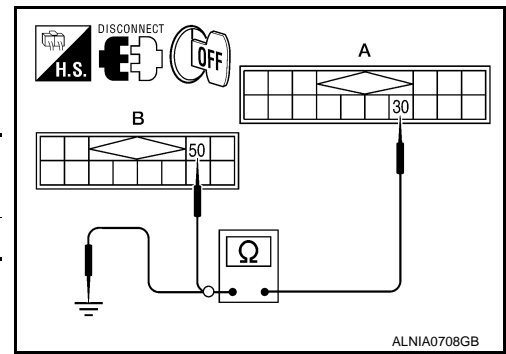

COMMUNICATION SIGNAL CIRCUIT

[PREMIUM WITH NAVIGATION]

< COMPONENT DIAGNOSIS >

Are the voltage readings as specified?


YES >> GO TO 6.

NO >> Replace satellite radio tuner. Refer to [AV-318. "Removal and Installation"](#).

6. CHECK RXD SIGNAL

Check signal between satellite radio tuner (factory installed) harness connector M41 terminal 30 and ground with CONSULT-III or oscilloscope.

(+)		(-)	Reference signal
Connector	Terminal		
M41	30	Ground	

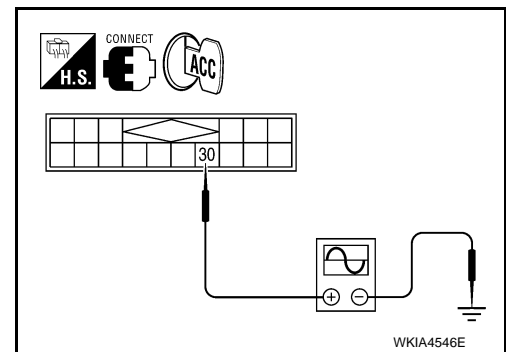

Are the voltage readings as specified?

YES >> Replace satellite radio tuner. Refer to [AV-318. "Removal and Installation"](#).

NO >> Replace audio unit. Refer to [AV-306. "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

SOUND SIGNAL CIRCUIT SATELLITE RADIO TUNER

SATELLITE RADIO TUNER : Description

INFOID:000000005387721

Left and right channel audio signals are supplied from the satellite radio tuner to the audio unit through the sound signal circuits.

SATELLITE RADIO TUNER : Diagnosis Procedure

INFOID:000000005387722


Regarding Wiring Diagram information, refer to [AV-251, "Wiring Diagram"](#).

LEFT CHANNEL

1. CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect satellite radio tuner (factory installed) connector M41 and audio unit connector M42.
3. Check continuity between satellite radio tuner (factory installed) connector M41 (A) and audio unit connector M42 (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M41	21	M42	41	Yes
	22		42	

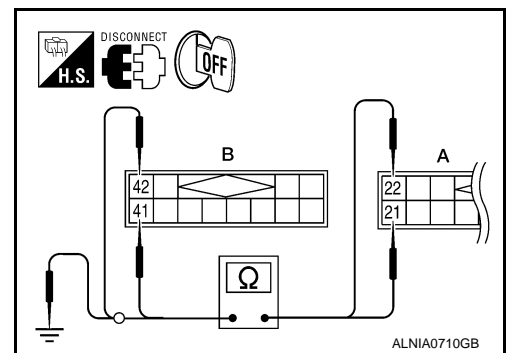

4. Check continuity between satellite radio tuner (factory installed) connector M41 (A) and ground.

A		—	Continuity
Connector	Terminal		
M41	21	Ground	No
	22		


Are continuity results as specified?

- YES >> GO TO 2.
NO >> Repair harness or connector.

2. CHECK LEFT CHANNEL AUDIO SIGNAL

1. Connect satellite radio tuner (factory installed) and audio unit.
2. Turn ignition switch ON.
3. Check signal between satellite radio tuner (factory installed) connector M41 terminals 21 and 22 with CONSULT-III or oscilloscope.

Connector	(+)	(-)	Reference signal
	Terminal	Terminal	
M41	22	21	<p style="font-size: x-small; text-align: right;">SKIB3609E</p>

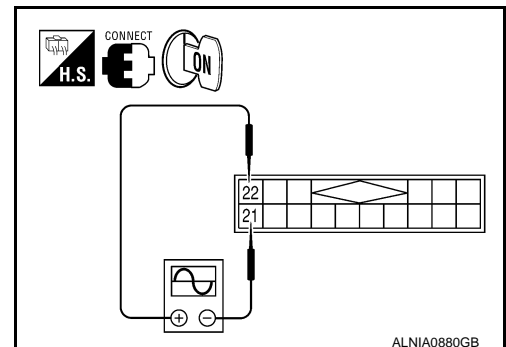

Are voltage readings as specified?

SOUND SIGNAL CIRCUIT

[PREMIUM WITH NAVIGATION]


< COMPONENT DIAGNOSIS >

- YES >> Replace audio unit. Refer to [AV-306. "Removal and Installation"](#).
 NO >> Replace satellite radio tuner. Refer to [AV-318. "Removal and Installation"](#).

RIGHT CHANNEL

1. CHECK HARNESS

1. Turn ignition switch OFF.
2. Disconnect satellite radio tuner (factory installed) connector M41 and audio unit connector M42.
3. Check continuity between satellite radio tuner (factory installed) M41 (A) and audio unit M42 (B).

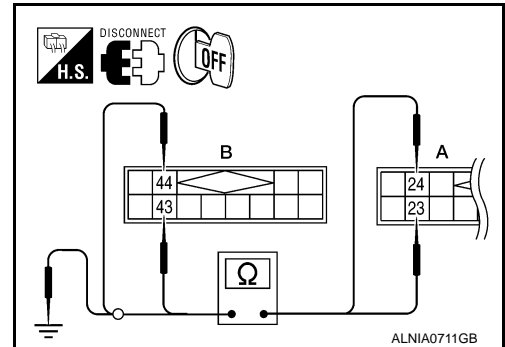

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M41	23	M42	43	Yes
	24		44	

4. Check continuity between satellite radio tuner (factory installed) connector M41 (A) and ground.


A		—	Continuity
Connector	Terminal		
M41	23	Ground	No
	24		

Are continuity results as specified?

- YES >> GO TO 2.
 NO >> Repair harness or connector.

2. CHECK RIGHT CHANNEL AUDIO SIGNAL

1. Connect satellite radio tuner (factory installed) and audio unit.
2. Turn ignition switch ON.
3. Check signal between satellite radio tuner (factory installed) connector M41 terminals 23 and 24 with CONSULT-III or oscilloscope.

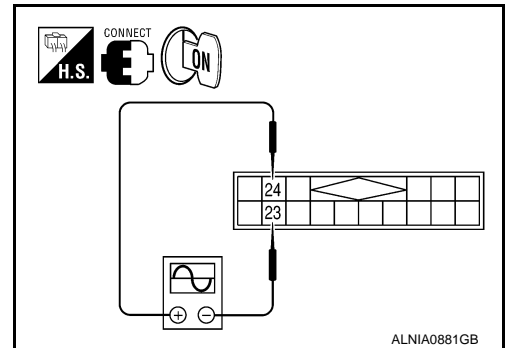

Connector	(+)	(-)	Reference signal
	Terminal	Terminal	
M41	24	23	<p>SKIB3609E</p>

Are voltage readings as specified?

- YES >> Replace audio unit. Refer to [AV-306. "Removal and Installation"](#).
 NO >> Replace satellite radio tuner. Refer to [AV-318. "Removal and Installation"](#).

MICROPHONE SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

MICROPHONE SIGNAL CIRCUIT

Description

INFOID:000000005387723

Voice signals are transmitted from the microphone to the Bluetooth control unit using the microphone signal circuits.

Diagnosis Procedure


INFOID:000000005387724

Regarding Wiring Diagram information, refer to [AV-251, "Wiring Diagram"](#).

1. CHECK HARNESS BETWEEN BLUETOOTH CONTROL UNIT AND MICROPHONE

1. Turn ignition switch OFF.
2. Disconnect Bluetooth control unit connector and microphone connector.
3. Check continuity between Bluetooth control unit harness connector B142 (A) and microphone harness connector R109 (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
B142	7	R109	1	Yes
	8		2	
	29		4	

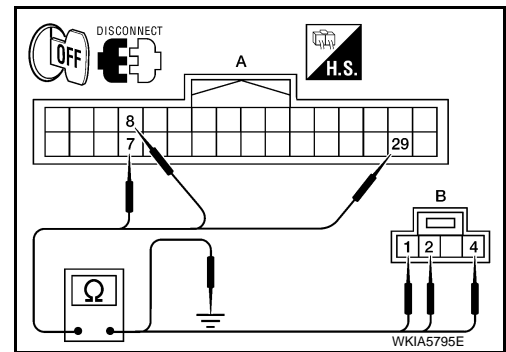

4. Check continuity between Bluetooth control unit harness connector B142 (A) and ground.

A		—	Continuity
Connector	Terminal		
B142	7	Ground	No
	8		
	29		

Are the continuity test results as specified?

- YES >> GO TO 2.
 NO >> Repair harness or connector.

2. CHECK MICROPHONE POWER SUPPLY


1. Connect Bluetooth control unit connector and microphone connector.
2. Turn ignition switch ON.
3. Check voltage between microphone harness connector R109 terminal 4 and ground.

(+)		(-)	Voltage (approx.)
Connector	Terminal		
R109	4	Ground	5V

Is voltage reading approx. 5 volts?

- YES >> GO TO 3.
 NO >> Replace Bluetooth control unit. Refer to [AV-169, "Removal and Installation"](#).

3. CHECK MICROPHONE SIGNAL

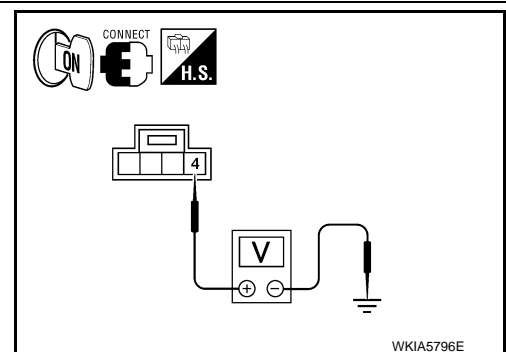



MICROPHONE SIGNAL CIRCUIT

[PREMIUM WITH NAVIGATION]

< COMPONENT DIAGNOSIS >

Check signal between Bluetooth control unit harness connector B142 terminals 7 and 8 with CONSULT-III or and oscilloscope.

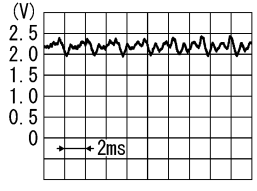Connector	(+)	(-)	Reference signal
	Terminal	Terminal	
B142	7	8	<p>While speaking into MIC</p>  <p>PKIB5037J</p>

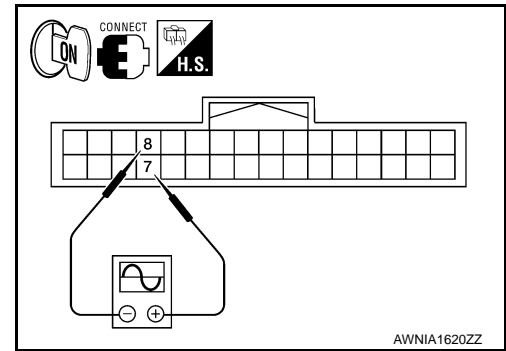

Are voltage readings as specified?

- YES >> Replace Bluetooth control unit. Refer to [AV-169, "Removal and Installation"](#).
- NO >> Replace microphone. Refer to [AV-167, "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

AUDIO UNIT

< ECU DIAGNOSIS >

[PREMIUM WITH NAVIGATION]


ECU DIAGNOSIS

AUDIO UNIT

Reference Value

INFOID:000000005387725

TERMINAL LAYOUT

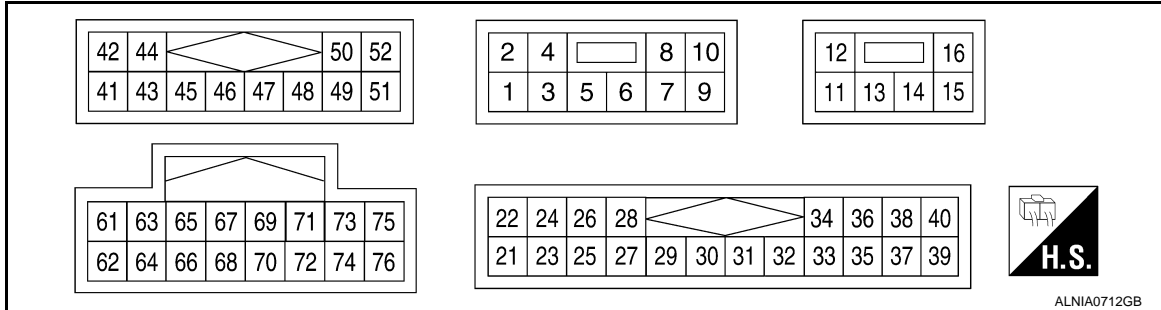





PHYSICAL VALUES

Terminal (Wire color)		Item	Signal input/ output	Condition		Reference value (Approx.)
+	-					
2 (W)	1 (B)	Audio sound signal front LH	Output	Ignition switch ON	Receive audio sig- nal	 SKIA0177E
4 (Y)	3 (BR)	Audio sound signal front RH	Output	Ignition switch ON	Receive audio sig- nal	 SKIA0177E
6 (Y)	Ground	Battery power	Input	-	-	Battery voltage
7 (BR)	Ground	Illumination control signal	Input	Ignition switch ON	Illumination control switch is operated by lighting switch in 1st position.	Changes between 0 and 12V
8 (R/L)	Ground	Illumination signal	Input	OFF	Lighting switch is in 1st position.	Battery voltage
					Lighting switch is OFF.	0V
9	-	Shield	-	-	-	0V
10 (V)	Ground	ACC signal	Input	Ignition switch ON	-	Battery voltage
12 (G/W)	Ground	Amp ON	Input	Ignition switch ON	Audio unit ON	More than 6.5V

AUDIO UNIT

< ECU DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

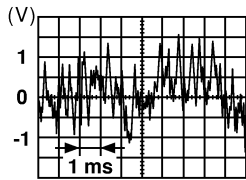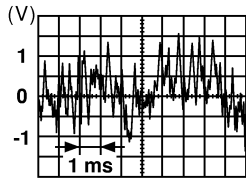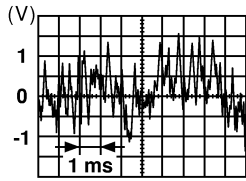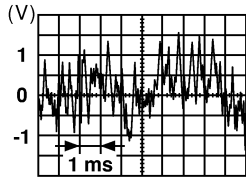Terminal (Wire color)		Item	Signal input/ output	Condition		Reference value (Approx.)
+	-					
14 (BR)	13 (B/R)	Audio sound signal rear LH	Output	Ignition switch ON	Receive audio sig- nal	 <p style="text-align: right; font-size: small;">SKIA0177E</p>
16 (L)	15 (B/W)	Audio sound signal rear RH	Output	Ignition switch ON	Receive audio sig- nal	 <p style="text-align: right; font-size: small;">SKIA0177E</p>
21 (V)	Ground	Remote control A	Output	Ignition switch ON	Audio unit ON	5V
22 (P)	Ground	Remote control B	Output	Ignition switch ON	Audio unit ON	5V
23 (BR/Y)	Ground	Remote control C	Output	Ignition switch ON	Audio unit ON	5V
24 (L)	Ground	Remote control D	Output	Ignition switch ON	Audio unit ON	5V
25 (LG)	Ground	Remote control ground	-	-	-	0V
27 (O/L)	26 (O)	Audio sound signal LH	Output	Ignition switch ON	Receive audio sig- nal	 <p style="text-align: right; font-size: small;">SKIA0177E</p>
29 (W)	28 (W/L)	Audio sound signal RH	Output	Ignition switch ON	Receive audio sig- nal	 <p style="text-align: right; font-size: small;">SKIA0177E</p>
30	-	Shield	-	-	-	0V
31 (O)	Ground	Remote control en- able signal	Output	Ignition switch ON	Audio unit ON	5V
32 (V)	Ground	Remote control switch power sup- ply	Output	Ignition switch ON	Audio unit ON	12V

A
B
C
D
E
F
G
H
I
J
K
L
M





AV

O
P

AUDIO UNIT

< ECU DIAGNOSIS >





[PREMIUM WITH NAVIGATION]

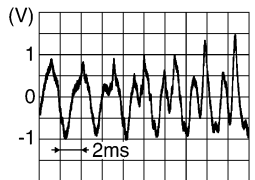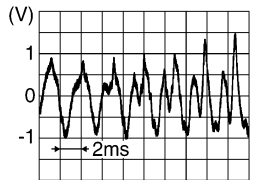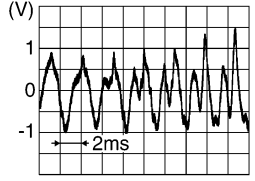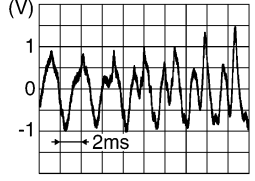Terminal (Wire color)		Item	Signal input/ output	Condition		Reference value (Approx.)
+	-					
35 (B)	34 (W)	Family entertain- ment system left channel audio input	Input	Ignition switch ON	DVD operating	 <small>SKIB3609E</small>
37 (R)	36 (G)	Family entertain- ment system right channel audio input	Input	Ignition switch ON	DVD operating	 <small>SKIB3609E</small>
39 (Y/L)	Ground	Family entertain- ment system en- able	Output	Ignition switch ON	DVD operating	12V
40 (L/W)	Ground	Audio ON	Input	Ignition switch ON	DVD operating	12V
42 (R)	41 (G)	Satellite radio au- dio signal LH	Input	Ignition switch ON	Satellite radio tuner operating	 <small>SKIB3609E</small>
44 (W)	43 (B)	Satellite radio au- dio signal RH	Input	Ignition switch ON	Satellite radio tuner operating	 <small>SKIB3609E</small>
45	-	Ground	-	-	-	0V
46	-	Data ground	-	-	-	0V
48 (L)	-	REQ (SAT→Audio unit)	Input	Ignition switch ON	-	—
49 (O/L)	-	RX (SAT→Audio unit)	Input	Ignition switch ON	-	—
50 (W/L)	-	TX (Audio unit→ SAT)	Input	Ignition switch ON	-	—

AUDIO UNIT

< ECU DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

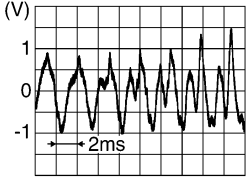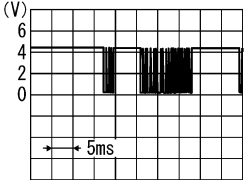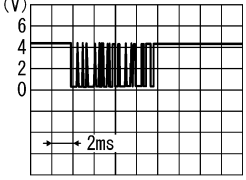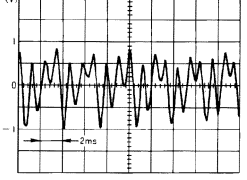Terminal (Wire color)		Item	Signal input/ output	Condition		Reference value (Approx.)
+	-					
62 (G)	61 (Y)	Tel audio sig	Input	Ignition switch ON	Bluetooth control unit sends audio signal	 <small>SKIB3609E</small>
63 (R)	-	Mute control	-	-	-	-
64	-	Shield	-	Ignition switch ON	-	0V
65 (O/L)	Ground	Audio RX	Input	Ignition switch ON	Operate audio vol- ume	 <small>SKIA4403E</small>
66 (W/L)	Ground	Audio TX	Output	Ignition switch ON	Operate audio vol- ume	 <small>SKIA4402E</small>
67	-	Shield	-	Ignition switch ON	-	0V
70	-	Shield	-	Ignition switch ON	-	0V
71 (B)	69 (W)	NAVI voice	Input	Ignition switch ON	NAVI system oper- ating	 <small>SKIA0171J</small>
72 (W/B)	Ground	CD eject signal	Input	Ignition switch ON	Operate EJECT but- ton	0V → 5V
73 (Y/B)	Ground	CD load signal	Input	Ignition switch ON	Operate LOAD but- ton	0V → 5V



A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

AUDIO UNIT


< ECU DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

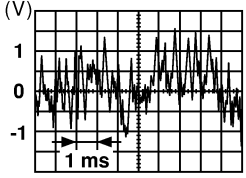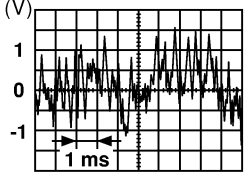Terminal (Wire color)		Item	Signal input/ output	Condition		Reference value (Approx.)
+	-					
74 (W)	Ground	Auxiliary audio input RH (+)	Input	Ignition switch ON	Receive audio signal (AUX input)	 <p style="text-align: right; font-size: small;">SKIA0177E</p>
75 (R)	Ground	Auxiliary audio input LH (+)	Input	Ignition switch ON	Receive audio signal (AUX input)	 <p style="text-align: right; font-size: small;">SKIA0177E</p>
76 (B)	-	Shield	-	-	-	0V

Wiring Diagram

INFOID:000000005387726

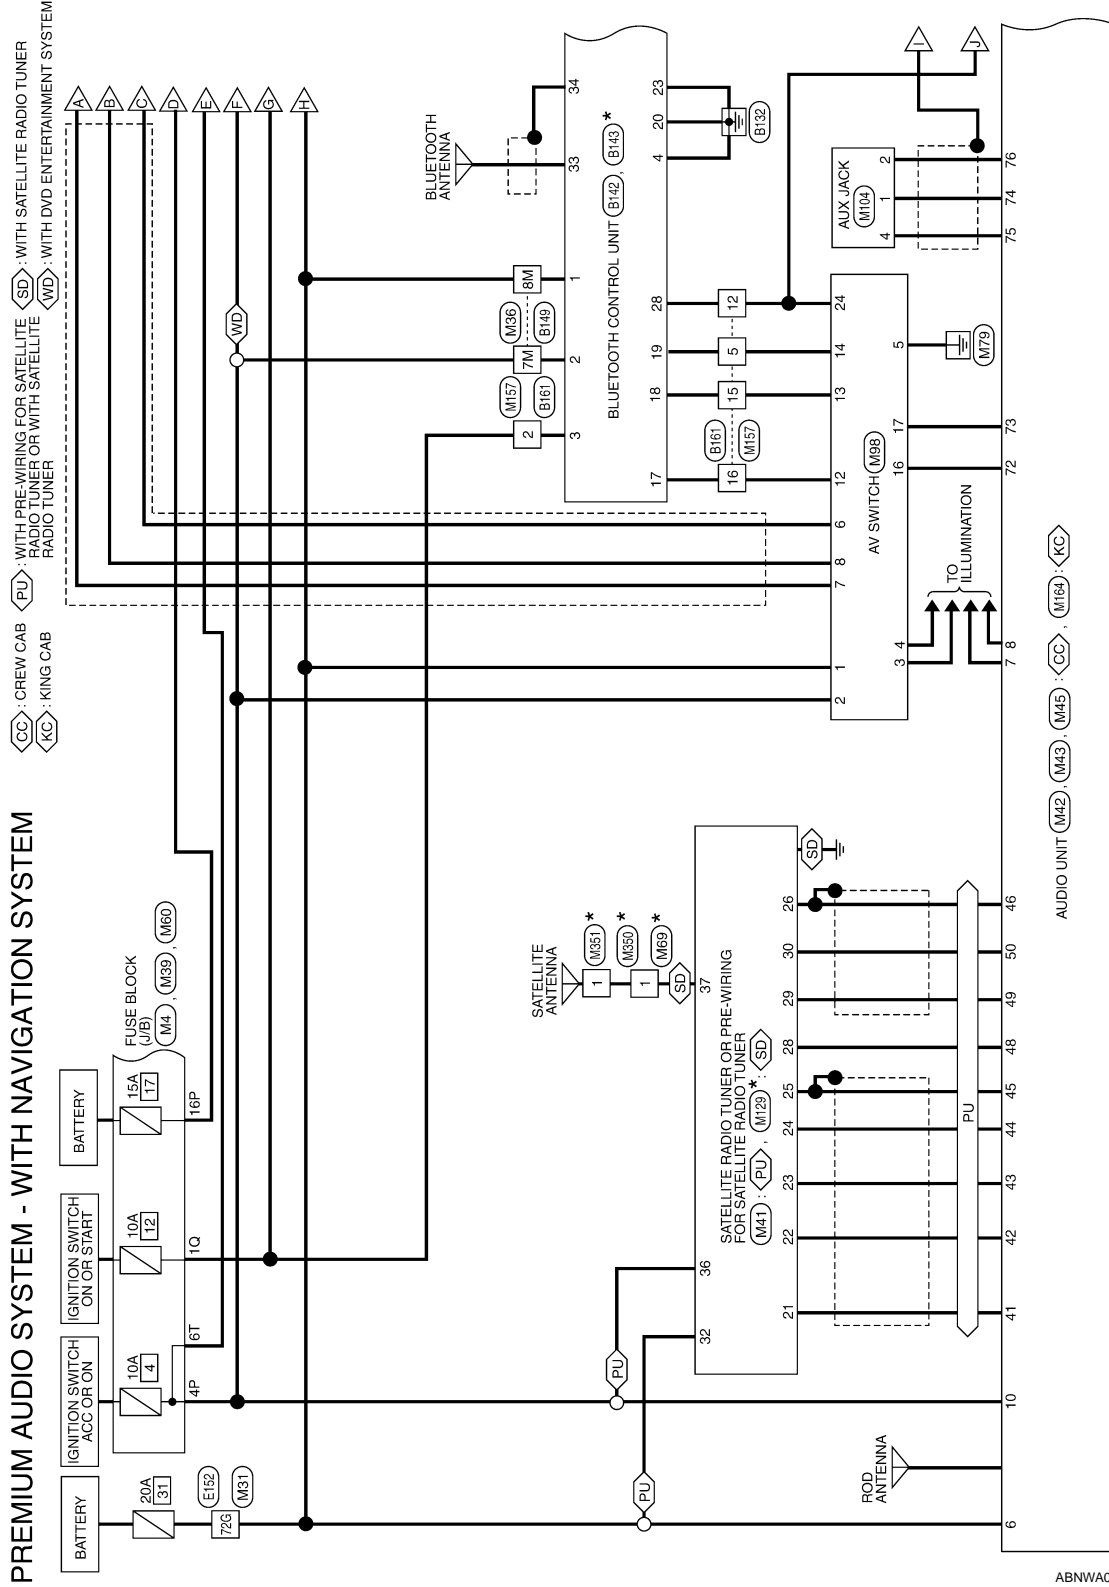

ABNWA0378GB

* : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.


A B C D E F G H I J K L M N O P

AV

AUDIO UNIT

< ECU DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

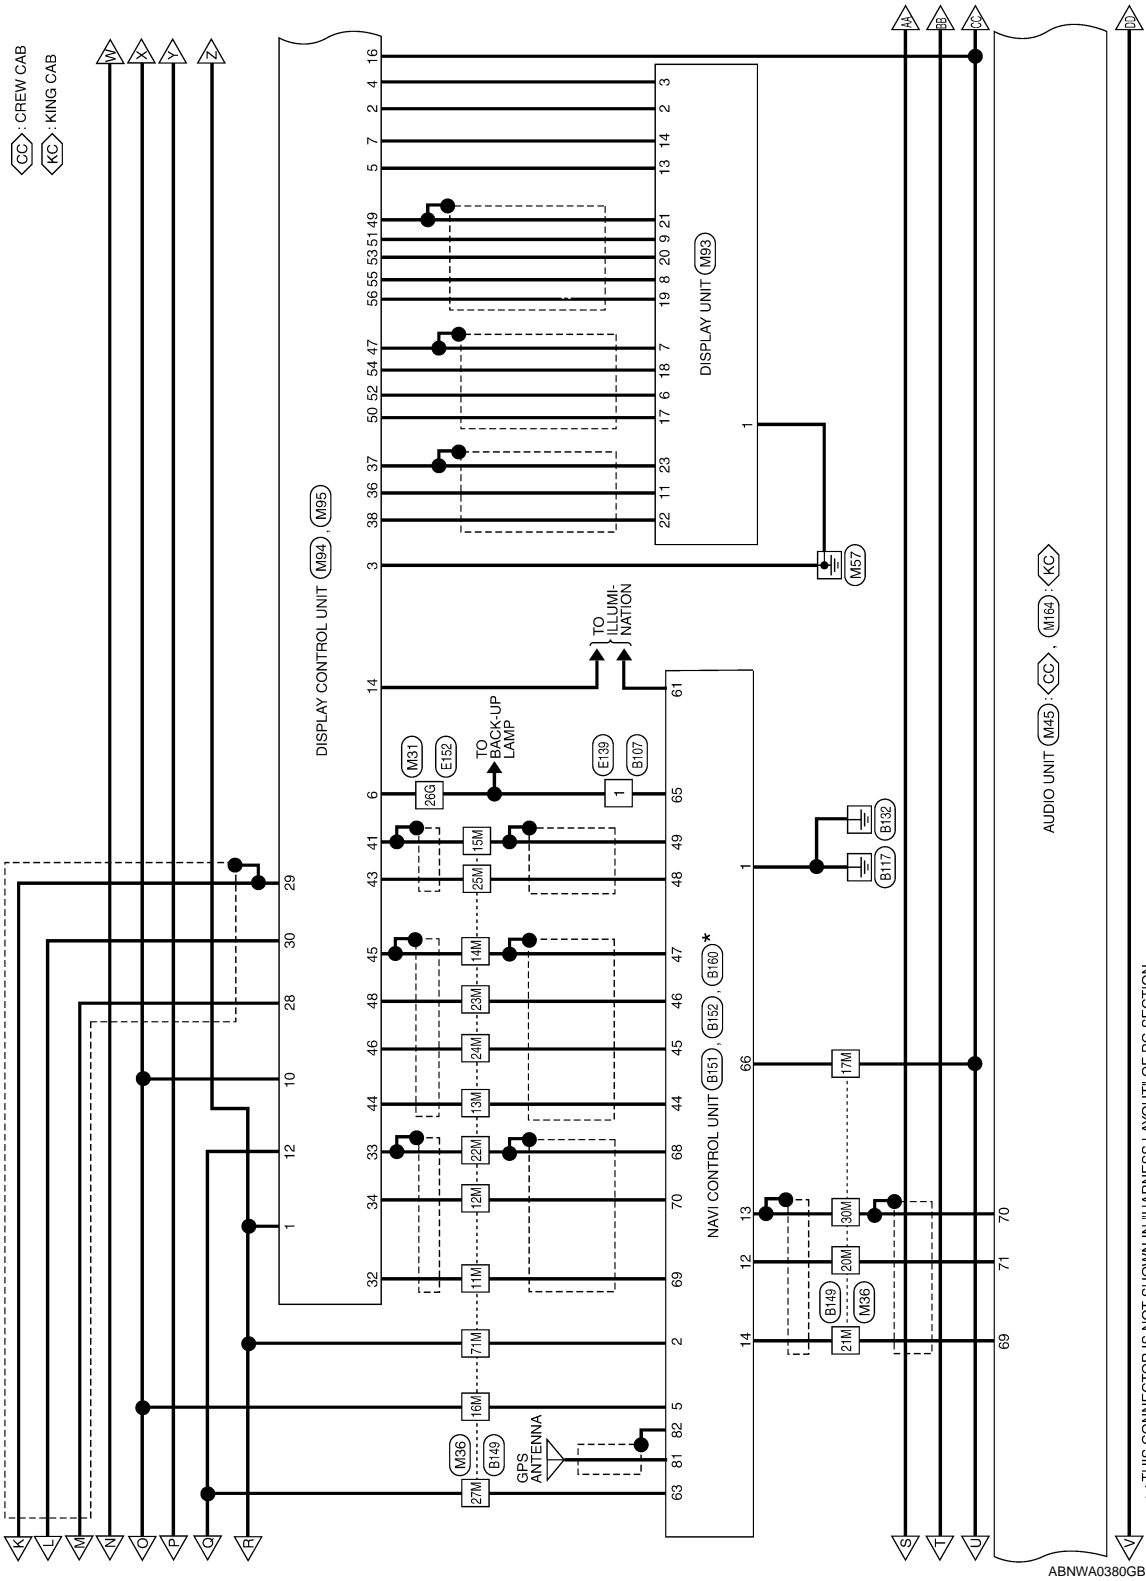

* : THIS CONNECTOR IS NOT SHOWN IN "HARNES LAYOUT" OF PG SECTION.

ABNWA0380GB


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

AV

AUDIO UNIT

< ECU DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

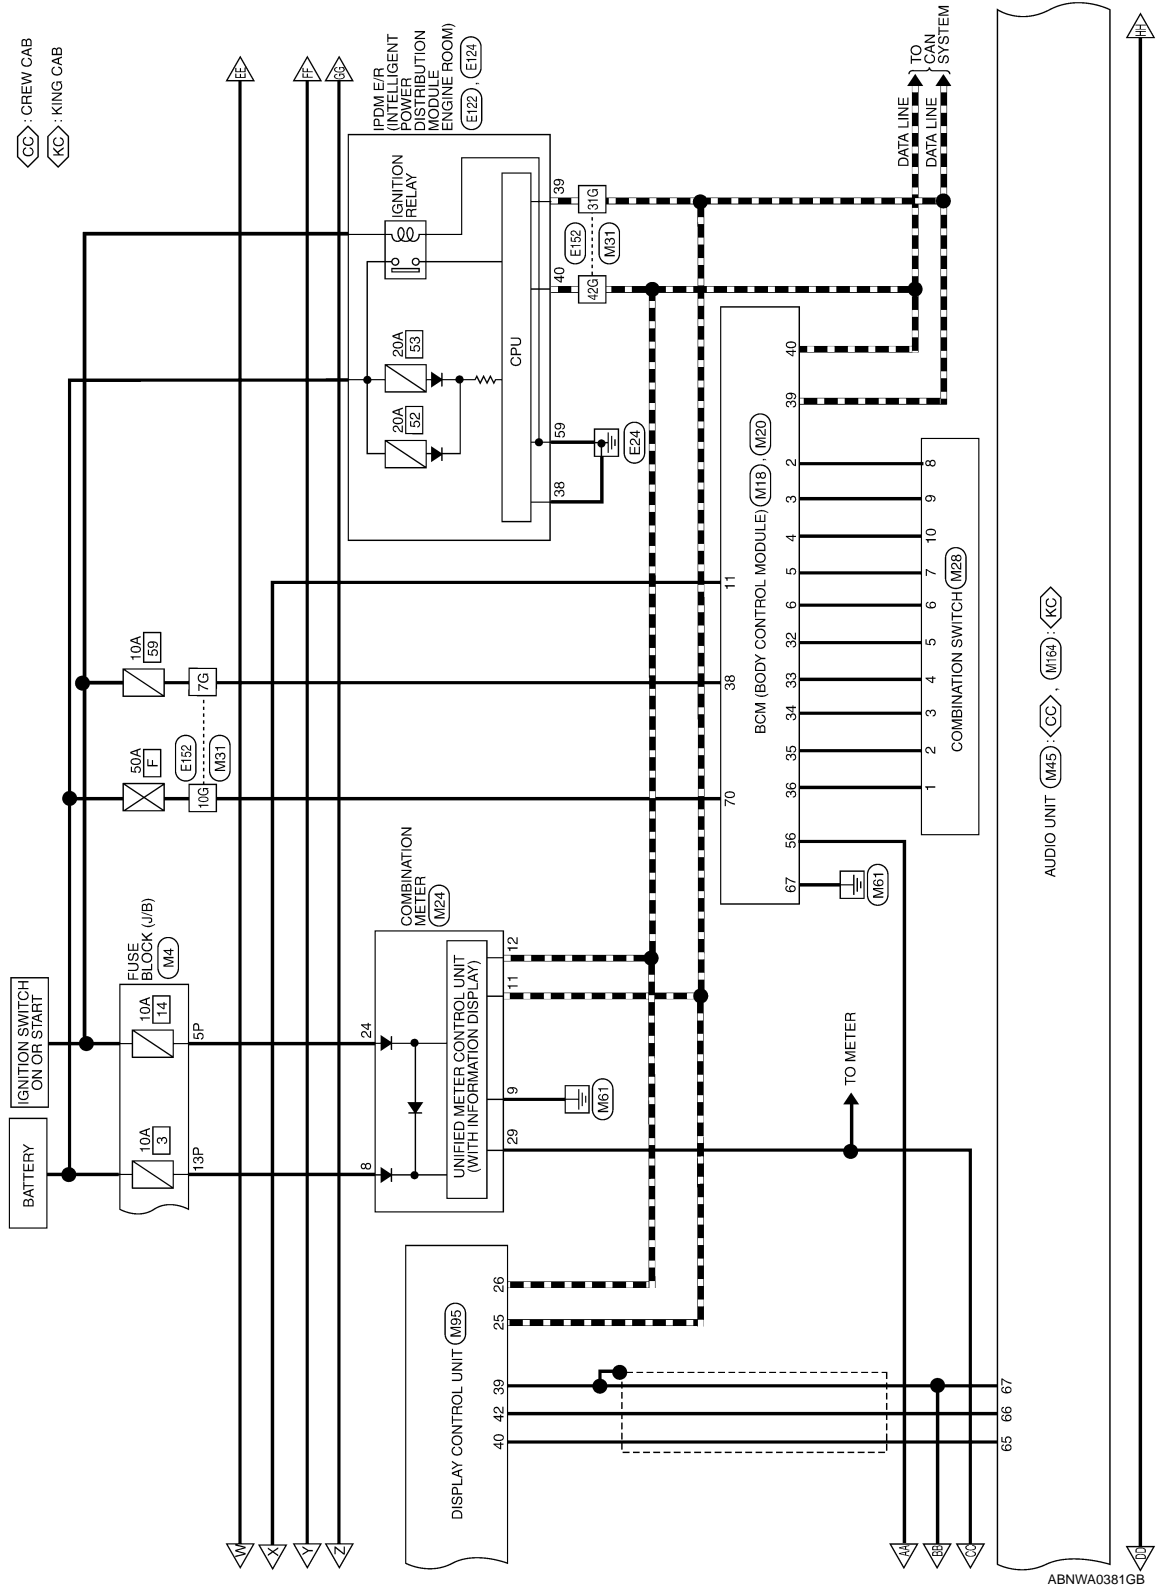


AUDIO UNIT

< ECU DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

- ◁ CC ▷ : CREW CAB
- ◁ KC ▷ : KING CAB
- ◁ WD ▷ : WITH DVD ENTERTAINMENT SYSTEM

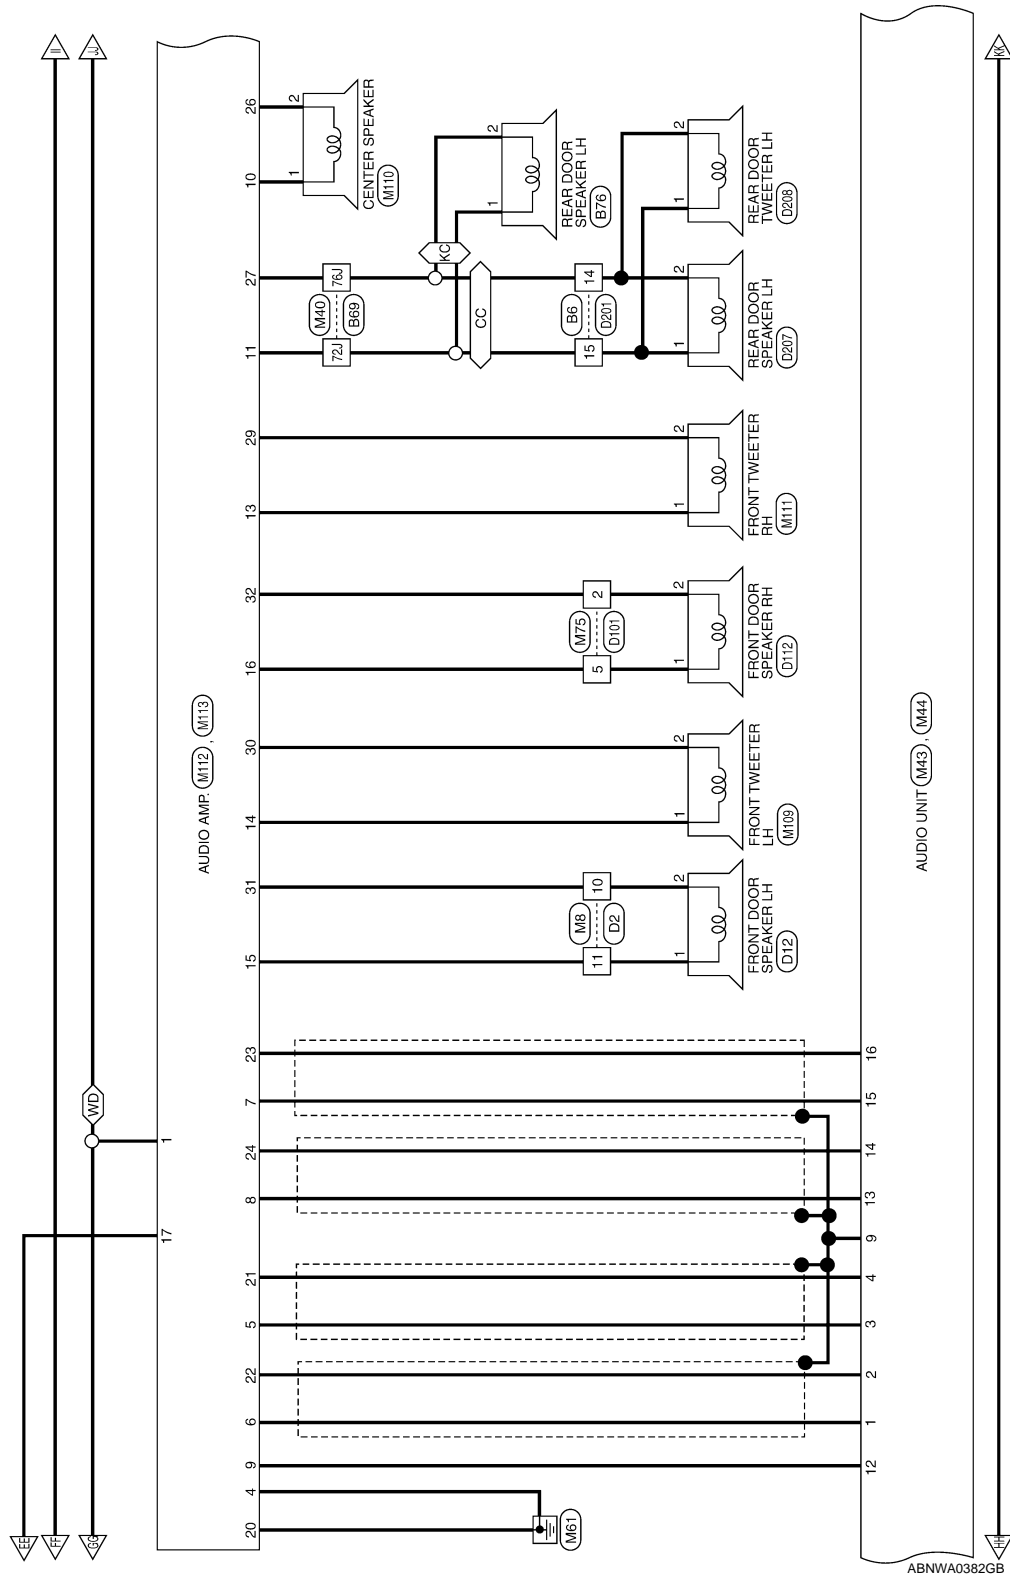


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

AV

AUDIO UNIT

< ECU DIAGNOSIS >


[PREMIUM WITH NAVIGATION]

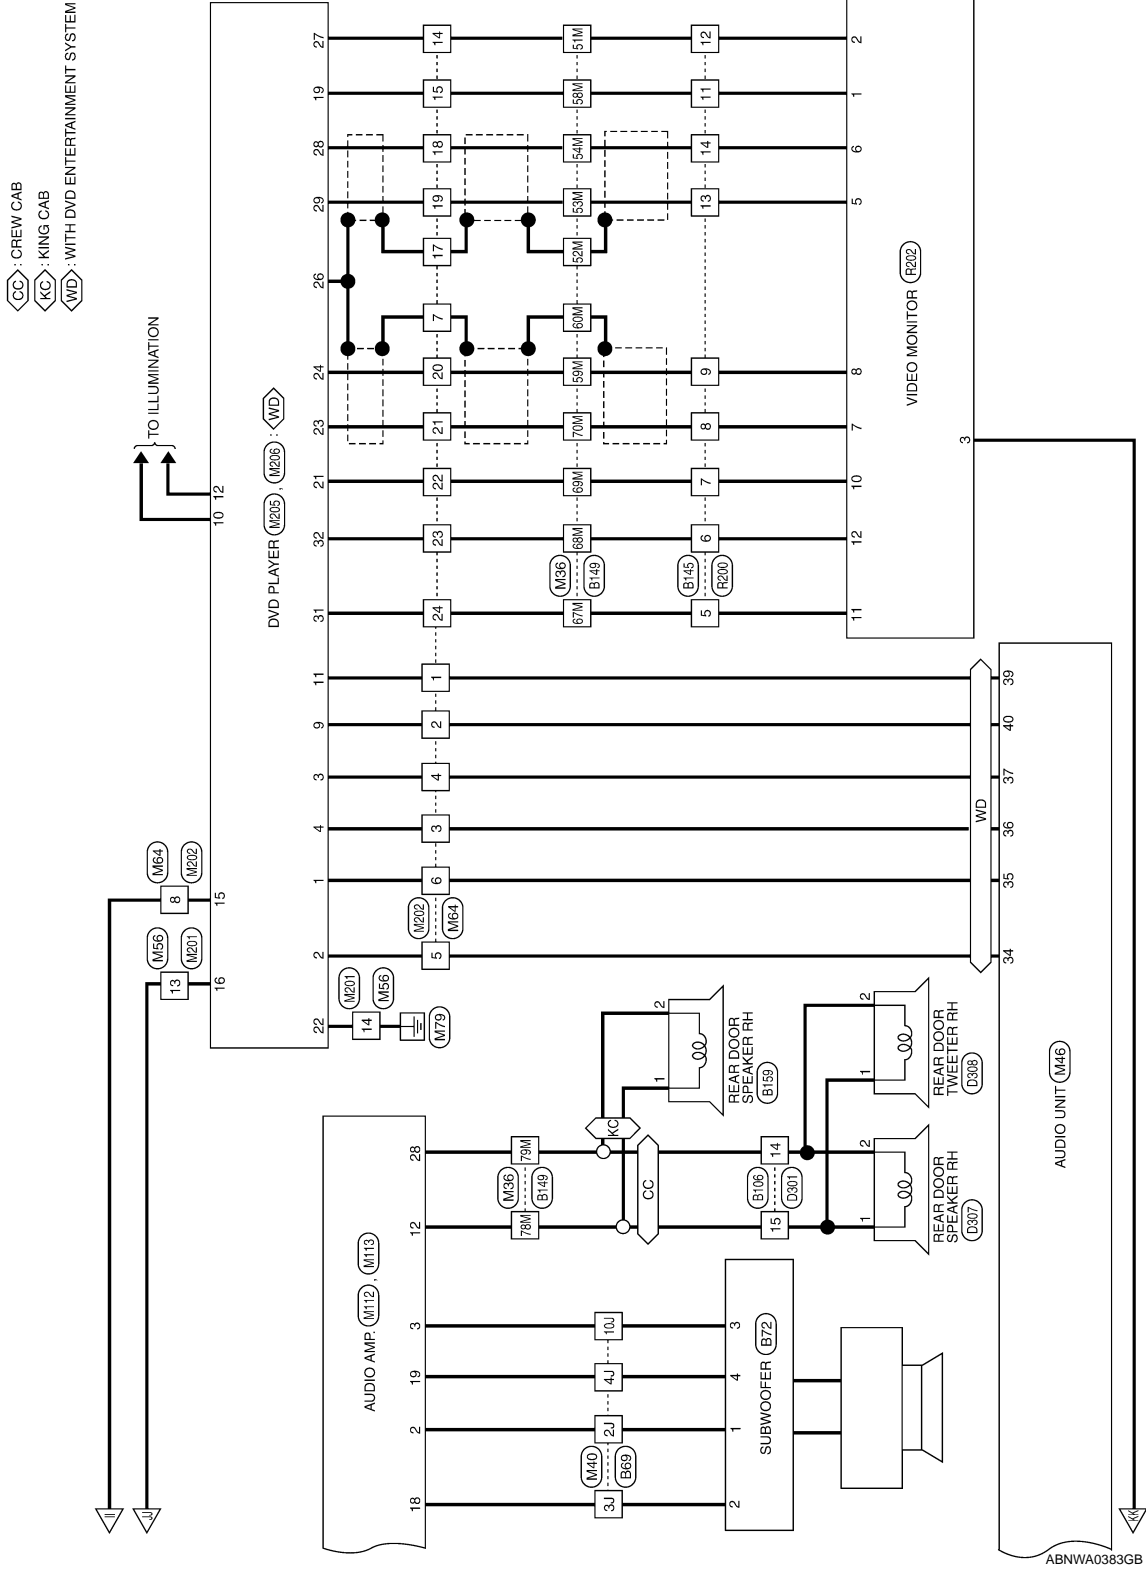

ABNWA0383GB


PREMIUM AUDIO SYSTEM CONNECTORS - WITH NAVIGATION SYSTEM

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
12	R/G	-

Connector No.	M2
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R/W	-
5	R/L	-
6	SHIELD	-
7	GR	-
12	B	-

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
4P	V	-
5P	O/L	-
13P	P	-
16P	Y/G	-

Connector No.	M8
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
10	L/R	-
11	L/W	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

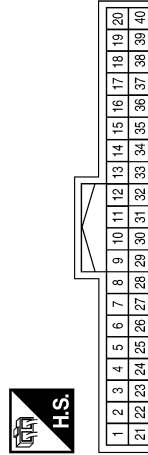


Terminal No.	Color of Wire	Signal Name
2	SB	INPUT 5
3	G/Y	INPUT 4
4	Y	INPUT 3
5	G/B	INPUT 2
6	V	INPUT 1

Terminal No.	Color of Wire	Signal Name
11	O	ACC SW
32	R/G	OUTPUT 5
33	R/Y	OUTPUT 4
34	L	OUTPUT 3
35	O/B	OUTPUT 2
36	R/W	OUTPUT 1
38	W/L	IGN SW
39	L	CAN-H
40	P	CAN-L


ABNIA0190GB

Terminal No.	Color of Wire	Signal Name
8	P	BATTERY
9	B	GND (POWER)
11	L	CAN-H
12	P	CAN-L
24	O/L	RUN/START
29	W/R	SPEED OUT

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE




Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
56	R/G	BATTERY SAVER OUTPUT
67	B	GND (POWER)
70	W/B	BATT (F/L)

Connector No.	M30
Connector Name	COMBINATION SWITCH (WITH BLUETOOTH)
Connector Color	GRAY



Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R/W	INPUT 1
2	O/B	INPUT 2
3	L	INPUT 3
4	R/Y	INPUT 4
5	R/G	INPUT 5
6	V	OUTPUT 1
7	G/B	OUTPUT 2
8	SB	OUTPUT 5
9	G/Y	OUTPUT 4
10	Y	OUTPUT 3

Terminal No.	Color of Wire	Signal Name
24	R/G	STRG SW A (UP)
31	Y/R	STRG SW C (GND)
32	G/W	STRG SW B (DOWN)

ABNIA1178GB


AUDIO UNIT

< ECU DIAGNOSIS >

[PREMIUM WITH NAVIGATION]


Terminal No.	Color of Wire	Signal Name
24M	R/W	-
25M	W	-
27M	G/R	-
30M	SHIELD	-
31M	LG	-
32M	V	-
33M	O	-
34M	O/L	-
35M	SHIELD	-
36M	BR/Y	-
42M	SHIELD	-
43M	W/L	-
44M	W	-
45M	L	-
46M	P	-
47M	O	-
48M	V	-
51M	B/Y	-
52M	SHIELD	-
53M	BR	-
54M	Y	-
58M	B/W	-
59M	L	-
60M	SHIELD	-
67M	SB	-
68M	BR	-
69M	G/Y	-
70M	B/W	-
71M	Y	-
78M	O/L	-
79M	R/L	-

Connector No.	M36
Connector Name	WIRE TO WIRE
Connector Color	WHITE

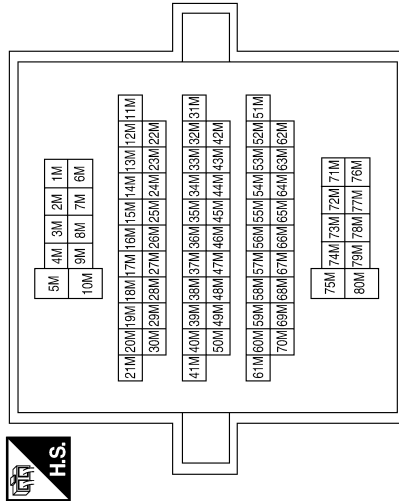

Terminal No.	Color of Wire	Signal Name
7M	V	-
8M	Y	-
11M	L	-
12M	P	-
13M	R/L	-
14M	SHIELD	-
15M	SHIELD	-
16M	O	-
17M	W/R	-
20M	B	-
21M	W	-
22M	SHIELD	-
23M	B	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

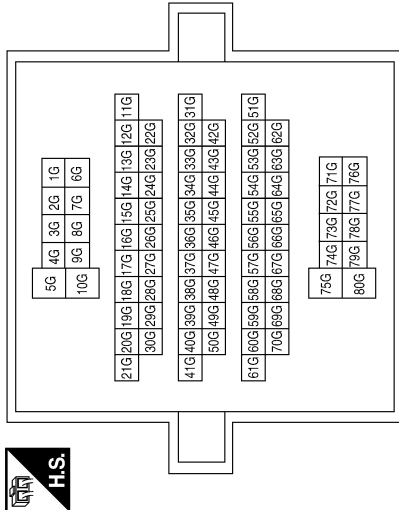

Terminal No.	Color of Wire	Signal Name
7G	W/L	-
10G	W/B	-
26G	GR	-
31G	L	-
42G	P	-
72G	Y	-

ABN1A1179GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


AV

AUDIO UNIT

< ECU DIAGNOSIS >


[PREMIUM WITH NAVIGATION]

Connector No.	M41
Connector Name	SATELLITE RADIO TUNER OR PRE-WIRING FOR SATELLITE RADIO TUNER
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
21	G	SAT LCH(-)
22	R	SAT LCH(+)
23	B	SAT RCH(-)
24	W	SAT RCH(+)
25	SHIELD	EARTH SIG
26	SHIELD	DATA EARTH
27	-	-
28	L	REQ1 (SAT-COMBI)
29	O/L	TXD (SAT-COMBI)
30	W/L	FXD (COMBI-SAT)
31	-	-
32	Y	BACKUP
33	-	-
34	-	-
35	-	-
36	V	ACC


Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	WHITE

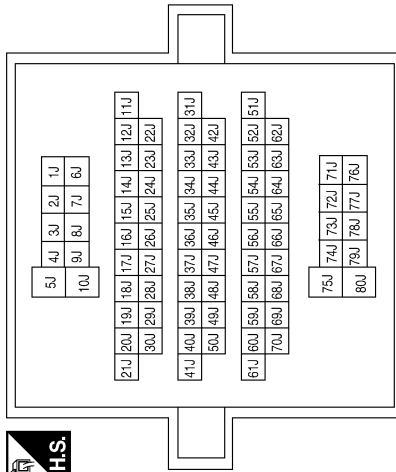

Terminal No.	Color of Wire	Signal Name
2J	W	-
3J	B	-
4J	BR	-
10J	BR/W	-
72J	SB	-
76J	B/Y	-


Terminal No.	Color of Wire	Signal Name
47	-	-
48	L	REQ (CD-COMBI)
49	O/L	RX (CD-COMBI)
50	W/L	TX (COMBI-CD)
51	-	-
52	-	-

Connector No.	M39
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1Q	G/R	-

Connector No.	M42
Connector Name	AUDIO UNIT (WITH PREMIUM AUDIO SYSTEM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
41	G	L(-)
42	R	L(+)
43	B	R(-)
44	W	R(+)
45	SHIELD	EARTH
46	SHIELD	DATA EARTH


ABNIA1180GB

AUDIO UNIT

< ECU DIAGNOSIS >


[PREMIUM WITH NAVIGATION]

Connector No.	M45
Connector Name	AUDIO UNIT (WITH PREMIUM AUDIO SYSTEM, CREW CAB)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
61	Y	TEL SIG INPUT (-)
62	G	TEL SIG INPUT (+)
63	R	TEL SIG ON TRIG
64	SHIELD	TEL SIG GND
65	O/L	RX (DCU-H/U)
66	W/L	TX (H/U-DCU)
67	SHIELD	SHIELD
68	-	-
69	W	NAVI VOICE-
70	SHIELD	NAVI VOICE GND
71	B	NAVI VOICE+
72	W/B	EJECT
73	Y/B	LOAD
74	W	AUX R+
75	R	AUX L+
76	B	AUX EARTH

Connector No.	M44
Connector Name	AUDIO UNIT (WITH PREMIUM AUDIO SYSTEM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
11	-	-
12	G/W	AMP ON
13	B/R	RR SP LH-
14	BR	RR SP LH+
15	B/W	RR SP RH-
16	L	RR SP RH+

Connector No.	M43
Connector Name	AUDIO UNIT (WITH PREMIUM AUDIO SYSTEM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	B	FR SP LH-
2	W	FR SP LH+
3	BR	FR SP RH-
4	Y	FR SP RH+
5	-	-
6	Y	BACK UP
7	BR	ILL CONT
8	R/L	LIGHT SW
9	SHIELD	CASE GND
10	V	ACC

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

AV

ABNIA1181GB


Connector No.	M46
Connector Name	AUDIO UNIT (WITH PREMIUM AUDIO SYSTEM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
21	V	REMOTE A
22	P	REMOTE B
23	BR/Y	REMOTE C
24	L	REMOTE D
25	LG	REMOTE GND
26	O	L CH OUTPUT (-)
27	O/L	L CH OUTPUT (+)
28	W/L	R CH OUTPUT (-)
29	W	R CH OUTPUT (+)


Terminal No.	Color of Wire	Signal Name
30	SHIELD	SHIELD
31	O	ENABLE
32	V	SWITCH B(+)
33	-	-
34	W	FES L CH IP (-)
35	B	FES L CH IP (+)
36	G	FES R CH IP (-)
37	R	FES R CH IP (+)
38	-	-
39	Y/L	FES ENABLE
40	L/W	AUDIO ON

Connector No.	M56
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
13	Y	-
14	B	-

Connector No.	M60
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
6T	O	-

Connector No.	M64
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	Y/L	-
2	L/W	-
3	G	-
4	R	-
5	W	-
6	B	-


Terminal No.	Color of Wire	Signal Name
7	SHIELD	-
8	V	-
14	B/Y	-
15	B/W	-
17	SHIELD	-
18	Y	-
19	BR	-
20	L	-
21	B/W	-
22	G/Y	-
23	BR	-
24	SB	-

AUDIO UNIT

< ECU DIAGNOSIS >


[PREMIUM WITH NAVIGATION]

Connector No.	M93
Connector Name	DISPLAY UNIT
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B	GND
2	L/W	INV VCC
3	L/R	SIGN VCC
4	-	-
5	-	-
6	R/W	G
7	SHIELD	RGB GND
8	R	HP
9	B	YS
10	-	-
11	B/W	DCU-DSP
12	-	-
13	P	INV GND
14	P/L	SIGN GND
15	-	-
16	-	-
17	R/L	R
18	B	B
19	G	RGB SYNC
20	W	VP
21	SHIELD	SYNC GND
22	L	DSP-DCU
23	SHIELD	BUS GND
24	-	-

Connector No.	M75
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	L/B	-
5	W/B	-

Connector No.	M69
Connector Name	WIRE TO WIRE
Connector Color	VIOLET




Terminal No.	Color of Wire	Signal Name
1	B	-

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

ABNIA1183GB


Connector No.	M94
Connector Name	DISPLAY CONTROL UNIT
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	Y	+B
2	L/W	INV VCC
3	B	GND
4	L/R	SIGN VCC
5	P	INV GND
6	GR	RV
7	P/L	SIGN GND
8	-	-
9	-	-
10	O	ACC
11	-	-
12	G/R	IGN

Terminal No.	Color of Wire	Signal Name
13	-	-
14	R/L	ILL
15	-	-
16	W/R	SPEED-8P
17	-	-
18	-	-
19	-	-
20	-	-
21	-	-
22	-	-
23	-	-
24	-	-

Connector No.	M95
Connector Name	DISPLAY CONTROL UNIT
Connector Color	WHITE

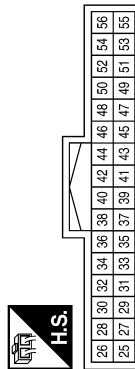

Terminal No.	Color of Wire	Signal Name
25	L	CAN-H
26	P	CAN-L
27	-	-
28	V	BUS+
29	SHIELD	SHIELD
30	LG	BUS-
31	-	-
32	L	BUS+
33	SHIELD	SHIELD
34	P	BUS-
35	-	-
36	B/W	DCU DSP
37	SHIELD	BUS GND
38	L	DSP-DCU
39	SHIELD	SHIELD
40	O/L	DCU-AUDIO

Terminal No.	Color of Wire	Signal Name
41	SHIELD	SHIELD
42	W/L	AUDIO-DCU
43	W	RGB SYNC
44	R/L	R
45	SHIELD	SHIELD
46	R/W	G
47	SHIELD	SHIELD
48	B	B
49	SHIELD	SHIELD
50	R/L	R
51	B	YS
52	R/W	G
53	W	VP
54	B	B
55	R	HP
56	G	RGB SYNC

ABNIA1184GB

AUDIO UNIT

< ECU DIAGNOSIS >

[PREMIUM WITH NAVIGATION]


Connector No.	M102
Connector Name	COMBINATION SWITCH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
16	R	-
17	BR	-
20	W	-

Terminal No.	Color of Wire	Signal Name
5	B	GND
6	V	M-CAN1 L BUS (+)
7	SHIELD	SHIELD-1
8	LG	BUS (-)
12	V	REMOTE CONT A
13	G/O	REMOTE CONT B
14	R/B	REMOTE CONT C
15	-	-
16	W/B	EJECT
17	Y/B	LOAD
24	W/R	8 PULSE

Connector No.	M98
Connector Name	AV SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	Y	+B
2	V	ACC
3	R/L	ILL+
4	BR	ILL CONTROL

Connector No.	M110
Connector Name	CENTER SPEAKER
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	L/W	-
2	L/B	-

Connector No.	M109
Connector Name	FRONT TWEETER LH
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	L/W	-
2	L/R	-

Connector No.	M104
Connector Name	AUX JACK
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W	AUX AUDIO RH +
2	B	AUX GND
4	R	AUX AUDIO LH +

ABNIA1185GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


AV

AUDIO UNIT

< ECU DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

Connector No.	M112
Connector Name	AUDIO AMP.
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	Y	BAT
2	W	WOOFER+1
3	BR/W	WOOFER+2
4	B	GND
17	Y/G	BAT
18	B	WOOFER-1
19	BR	WOOFER-2
20	B	GND

Connector No.	M111
Connector Name	FRONT TWEETER RH
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	W/B	-
2	L/B	-

Connector No.	M113
Connector Name	AUDIO AMP.
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
5	BR	FR RH IN-
6	B	FR LH IN-
7	BW	FR RH IN-
8	B/R	RR LH IN-

Terminal No.	Color of Wire	Signal Name
9	G/W	AMP ON
10	L/W	CTR OUT+
11	SB	RR LH OUT+
12	O/L	RR RH OUT+
13	W/B	FR RH TW+
14	L/W	FR LH TW+
15	L/W	FR LH OUT+
16	W/B	FR RH OUT+
21	Y	FR RH IN+
22	W	FR LH IN+

Terminal No.	Color of Wire	Signal Name
23	L	RR RH IN+
24	BR	RR LH IN+
25	-	-
26	L/B	CTR OUT-
27	B/Y	RR LH OUT-
28	R/L	RR RH OUT-
29	L/B	FR RH TW-
30	L/R	FR LH TW-
31	L/R	FR LH OUT-
32	L/B	FR RH OUT-

ABNIA1186GB


AUDIO UNIT

< ECU DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

Terminal No.	Color of Wire	Signal Name
13	R	-
14	Y	-
15	G/O	-
16	V	-
17	Y/R	-
18	R/G	-
19	B	-
20	R/W	-

Connector No.	M157
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	G/R	-
3	SHIELD	-
4	G	-
5	R/B	-
6	G/W	-
7	SHIELD	-
8	R/L	-
9	GR	-
12	W/R	-

Connector No.	M129
Connector Name	SATELLITE RADIO TUNER
Connector Color	VIOLET



Terminal No.	Color of Wire	Signal Name
37	B	-


Connector No.	M201
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
13	Y	-
14	B	-

Terminal No.	Color of Wire	Signal Name
69	W	NAVI VOICE-
70	SHIELD	NAVI VOICE GND
71	B	NAVI VOICE+
72	W/B	EJECT
73	Y/B	LOAD
74	W	AUX R+
75	R	AUX L+
76	B	AUX EARTH

Connector No.	M164
Connector Name	AUDIO UNIT (WITH PREMIUM AUDIO SYSTEM, KING CAB)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
61	R	TEL SIG ON TRIG
62	G	TEL SIG INPUT (+)
63	Y	TEL SIG INPUT (-)
64	SHIELD	TEL SIG GND
65	O/L	RX (DCU-H/U)
66	W/L	TX (H/U-DCU)
67	SHIELD	SHIELD
68	-	-

ABNIA1187GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


AV

AUDIO UNIT

< ECU DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

Connector No.	M202
Connector Name	WIRE TO WIRE
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
1	Y/L	-
2	LW	-
3	G	-
4	R	-
5	W	-
6	B	-
7	SHIELD	-
8	V	-
14	B/Y	-
15	B/W	-
17	SHIELD	-
18	Y	-
19	BR	-
20	L	-
21	B/W	-
22	G/Y	-
23	BR	-
24	SB	-



Connector No.	M350
Connector Name	WIRE TO WIRE
Connector Color	VIOLET

Terminal No.	Color of Wire	Signal Name
1	B	-

Connector No.	M205
Connector Name	DVD PLAYER
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
1	B	FES L+ OUTPUT
2	W	FES L- OUTPUT
3	R	FES R+ OUTPUT
4	G	FES R OUTPUT
5	-	-
6	-	-
7	-	-
8	-	-
9	LW	AUDIO ON
10	BR	ILL-
11	Y/L	FES ENABLE
12	R/L	LIGHTING SW
13	-	-
14	-	-
15	V	ACC
16	Y	B+



Connector No.	M351
Connector Name	SATELLITE RADIO ANTENNA
Connector Color	BROWN

Terminal No.	Color of Wire	Signal Name
1	B	-

Connector No.	M206
Connector Name	DVD PLAYER
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
17	-	-
18	-	-
19	B/W	GND
20	-	-
21	G/Y	SW POWER +5V
22	B	GND
23	B/W	VTR+
24	L	VTR-
25	-	-
26	SHIELD	SHIELD
27	B/Y	GND
28	Y	DATA RX
29	BR	DATA TX
30	-	-
31	SB	+B
32	BR	+B


ABNIA1188GB

AUDIO UNIT

< ECU DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

Connector No.	E139
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	G/W	-

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
59	B	GND (POWER)

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L


Connector No.	B6
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
14	B/Y	-
15	SB	-

Terminal No.	Color of Wire	Signal Name
7G	L/W	-
10G	W/B	-
26G	G/W	-
31G	L	-
42G	P	-
72G	Y	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

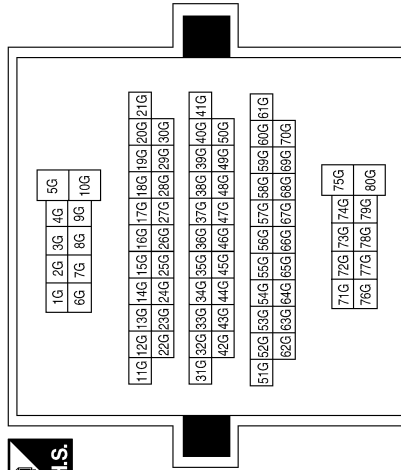

ABNIA1189GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


AV

AUDIO UNIT

< ECU DIAGNOSIS >

[PREMIUM WITH NAVIGATION]


Connector No.	B72
Connector Name	SUBWOOFER
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	W	WOOFER+1
2	B	WOOFER-1
3	BR/W	WOOFER+2
4	BR	WOOFER-2

Terminal No.	Color of Wire	Signal Name
2J	W	-
3J	B	-
4J	BR	-
10J	BR/W	-
72J	L	-(KING CAB)
72J	SB	-(CREW CAB)
76J	Y	-(KING CAB)
76J	B/Y	-(CREW CAB)

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

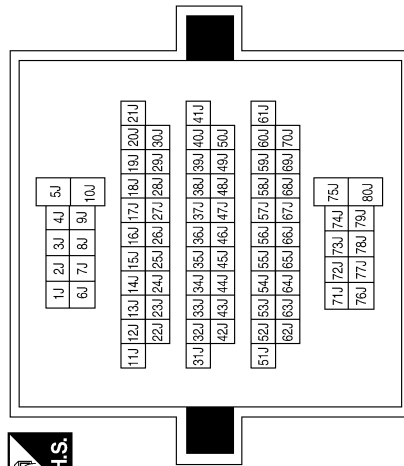

Connector No.	B107
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	1	Color of Wire	G/W	Signal Name	-
--------------	---	---------------	-----	-------------	---

Connector No.	B106
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	14	Color of Wire	R/L	Signal Name	-
Terminal No.	15	Color of Wire	O/L	Signal Name	-

Connector No.	B76
Connector Name	REAR DOOR SPEAKER LH
Connector Color	WHITE



Terminal No.	1	Color of Wire	L	Signal Name	-
Terminal No.	2	Color of Wire	Y	Signal Name	-


ABNIA1190GB

AUDIO UNIT

< ECU DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

Connector No.	B142
Connector Name	BLUETOOTH CONTROL UNIT
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	Y	BATT
2	V	ACC
3	G/R	IGN
4	B/W	GND
5	-	-
6	SHIELD	MIC SHIELD
7	B	MIC IN+

Terminal No.	Color of Wire	Signal Name
8	R/L	MIC IN-
9	G	AUDIO OUT+
10	R	AUDIO OUT-
11	Y	MUTE CONTROL
12	R/G	LADDER IN 1
13	G/W	LADDER IN 2
14	Y/R	LADDER IN GND
15	GR	LED IND 1
16	-	-
17	V	LADDER OUT 1
18	G/O	LADDER OUT 2
19	R/B	LADDER OUT GND
20	B	CONT1


Terminal No.	Color of Wire	Signal Name
21	-	-
22	-	-
23	B	CONT4
24	-	-
25	-	-
26	-	-
27	-	-
28	W/R	SPEED SIGNAL
29	R/W	MIC POWER
30	-	-
31	-	-
32	-	-

Connector No.	B143
Connector Name	BLUETOOTH ANTENNA
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
33	B	BT ANTENNA
34	SHIELD	BT ANTENNA SHIELD

Connector No.	B145
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
5	SB	-
6	BR	-
7	G/Y	-
8	W	-
9	L	-
11	B/W	-
12	B/Y	-
13	G	-
14	L	-

ABN1A191GB

A B C D E F G H I J K L M N O P AV


AUDIO UNIT

< ECU DIAGNOSIS >

[PREMIUM WITH NAVIGATION]


Terminal No.	Color of Wire	Signal Name
23M	B	-
24M	R/W	-
25M	BR	-
27M	G/R	-
30M	SHIELD	-
31M	LG	-
32M	V	-
33M	B	-
34M	G	-
35M	SHIELD	-
36M	BR/Y	-
42M	SHIELD	-
43M	R	-
44M	W	-
45M	L	-
46M	P	-
47M	O	-
48M	V	-
51M	B/Y	-
52M	SHIELD	-
53M	G	-
54M	L	-
58M	B/W	-
59M	L	-
60M	SHIELD	-
67M	SB	-
68M	BR	-
69M	G/Y	-
70M	W	-
71M	Y	-
78M	L	- (KING CAB)
78M	O/L	- (CREW CAB)
79M	R/L	-

Connector No.	B149
Connector Name	WIRE TO WIRE
Connector Color	WHITE

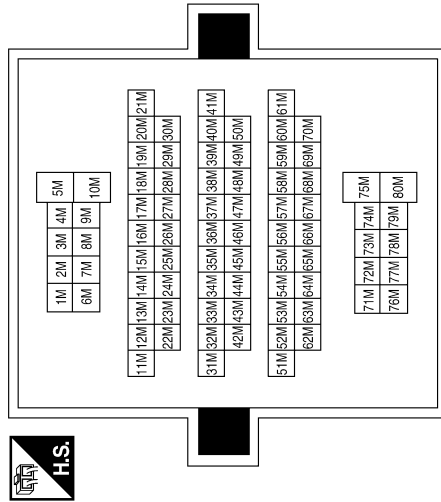

Terminal No.	Color of Wire	Signal Name
7M	V	-
8M	Y	-
11M	L	-
12M	P	-
13M	R	-
14M	SHIELD	-
15M	SHIELD	-
16M	O	-
17M	W/R	-
20M	B	-
21M	W	-
22M	SHIELD	-

Connector No.	B146
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	B	-
7	B	-
8	G	-
9	R	-
10	W	-
11	SHIELD	-
12	V	-
13	P	-
14	BR/Y	-
15	O	-
17	L	-
18	LG	-
19	SHIELD	-
22	V	-

ABNIA1192GB

AUDIO UNIT

< ECU DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

Connector No.	B151
Connector Name	NAVI CONTROL UNIT
Connector Color	WHITE



2	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36	38	40
1	3	5	7	9	11	13	15	17	19	21	23	25	27	29	31	33	35	37	39

Terminal No.	Color of Wire	Signal Name
1	B	GND
2	Y	BATT
3	-	-
4	-	-
5	O	ACC
6	-	-
7	-	-
8	-	-
9	-	-
10	-	-
11	-	-
12	B	GUIDE VOICE+
13	SHIELD	SHIELD
14	W	GUIDE VOICE-
15	-	-
16	-	-
17	-	-
18	-	-
19	-	-
20	-	-

Terminal No.	Color of Wire	Signal Name
21	-	-
22	-	-
23	-	-
24	-	-
25	-	-
26	-	-
27	-	-
28	-	-
29	-	-
30	-	-
31	-	-
32	-	-
33	-	-
34	-	-
35	-	-
36	-	-
37	-	-
38	-	-
39	-	-
40	-	-

ABNIA1193GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

AV

AUDIO UNIT

< ECU DIAGNOSIS >

[PREMIUM WITH NAVIGATION]


Connector No.	B159
Connector Name	REAR DOOR SPEAKER RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	R/L	-

Terminal No.	Color of Wire	Signal Name
50	-	-
51	-	-
52	-	-
53	-	-
54	-	-
55	-	-
56	-	-
57	-	-
58	-	-
59	-	-
60	-	-
61	R/L	ILL
62	-	-
63	G/R	IGN
64	-	-
65	G/W	RV
66	W/R	SPEED 8P
67	-	-
68	SHIELD	SHIELD
69	L	BUS+
70	P	BUS-
71	-	-
72	-	-

Connector No.	B152
Connector Name	NAVI CONTROL UNIT
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
41	-	-
42	-	-
43	-	-
44	R	R
45	R/W	G
46	B	B
47	SHIELD	RGB GND
48	BR	RGB SYNC
49	SHIELD	SYNC GND

ABNIA1194GB


AUDIO UNIT

< ECU DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

Terminal No.	Color of Wire	Signal Name
6	GW	-
7	SHIELD	-
8	R/L	-
9	GR	-
12	W/R	-
13	R	-
14	Y	-
15	G/O	-
16	V	-
17	Y/R	-
18	R/G	-
19	B	-
20	R/W	-

Connector No.	B161
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	G/R	-
3	SHIELD	-
4	G	-
5	R/B	-

Connector No.	B160
Connector Name	NAVI CONTROL UNIT
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
81	B	-
82	SHIELD	-

Connector No.	R6
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
3	R/G	-

Connector No.	R2
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R/W	-
5	R/L	-
6	SHIELD	-
7	GR	-
12	B	-

Connector No.	R1
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
12	R/G	-

ABNIA1195GB


A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

AUDIO UNIT

< ECU DIAGNOSIS >


[PREMIUM WITH NAVIGATION]

Connector No.	R105
Connector Name	BLUETOOTH ON INDICATOR
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	GR	LED 1 (AMBER)
2	R/G	LED POWER
3	R/L	DAY/NIGHT ILL SIG

Connector No.	R101
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	R/G	-

Connector No.	R9
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R/L	-
2	R/W	-
3	GR	-
4	B	-

Connector No.	R200
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
5	SB	-
6	BR	-
7	G/Y	-
8	W	-
9	L	-
11	B/W	-
12	B/Y	-
13	G	-
14	L	-

Connector No.	R109
Connector Name	MICROPHONE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B	MIC OUT (+)
2	R/L	MIC OUT (-)
4	R/W	MIC POWER

Connector No.	R107
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R/L	-
2	R/W	-
3	GR	-
4	B	-


ABN1A1196GB

AUDIO UNIT

< ECU DIAGNOSIS >


[PREMIUM WITH NAVIGATION]

Connector No.	R204
Connector Name	REAR AUDIO REMOTE CONTROL UNIT
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	B	L CH INPUT-
2	G	L CH INPUT+
3	R	R CH INPUT-
4	W	R CH INPUT+
5	SHIELD	SHIELD
6	R/L	ILL
7	LG	REMOTE GND
8	O	ENABLE
9	V	REMOTE A
10	P	REMOTE B
11	BR/Y	REMOTE C
12	L	REMOTE D
13	V	SWITCH +B
14	-	-
15	B	GND
16	-	-

Connector No.	R202
Connector Name	VIDEO MONITOR
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B/W	GND
2	B/Y	GND
3	B	ID
4	-	-
5	G	DATA RX
6	L	DATA TX
7	W	VIDEO IN+
8	L	VIDEO IN-
9	-	-
10	G/Y	SW POWER +5V
11	SB	FILTERED BAT
12	BR	FILTERED BAT

Connector No.	R201
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	B	-
7	B	-
8	G	-
9	R	-
10	W	-
11	SHIELD	-
12	V	-
13	P	-
14	BR/Y	-
15	O	-
17	L	-
18	LG	-
19	SHIELD	-
22	V	-

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

AV


ABNIA1197GB

AUDIO UNIT

< ECU DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	L/B	-
5	W/B	-

Connector No.	D12
Connector Name	FRONT DOOR SPEAKER LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L/W	-
2	L/R	-

Connector No.	D2
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
10	L/R	-
11	L/W	-

Connector No.	D207
Connector Name	REAR DOOR SPEAKER LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	SB	-
2	B/Y	-

Connector No.	D201
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
14	B/Y	-
15	SB	-

Connector No.	D112
Connector Name	FRONT DOOR SPEAKER RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W/B	-
2	L/B	-

ABNIA1198GB

AUDIO UNIT

< ECU DIAGNOSIS >


[PREMIUM WITH NAVIGATION]

Connector No.	D307
Connector Name	REAR DOOR SPEAKER RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	O/L	-
2	R/L	-

Connector No.	D301
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
14	R/L	-
15	O/L	-

Connector No.	D208
Connector Name	REAR DOOR TWEETER LH
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	SB	-
2	B/Y	-

Connector No.	D308
Connector Name	REAR DOOR TWEETER RH
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	O/L	-
2	R/L	-

ABNIA1199GB

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

NAVI CONTROL UNIT


< ECU DIAGNOSIS >

[PREMIUM WITH NAVIGATION]




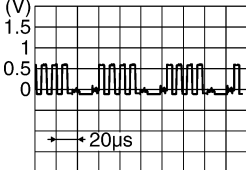
NAVI CONTROL UNIT

Reference Value

INFOID:000000005387727

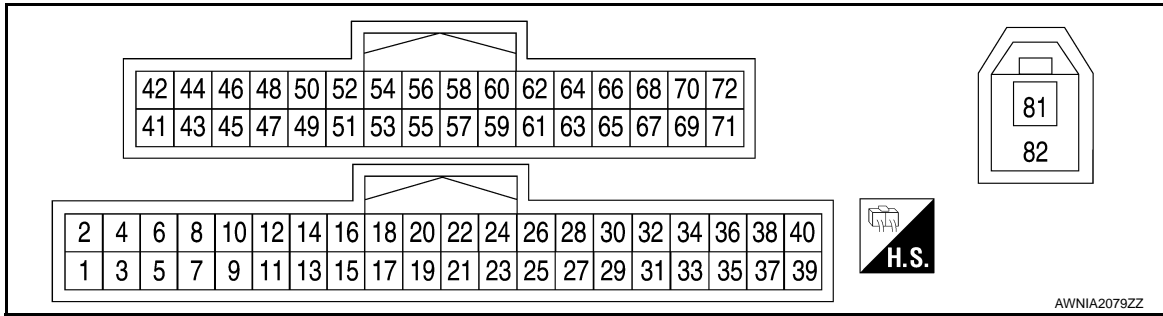






AWNIA2079ZZ

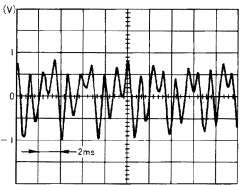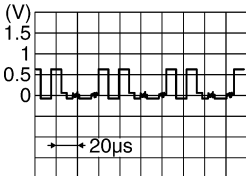Terminal No. (Wire color)		Item	Signal input/ output	Condition		Voltage (Approx.)
+	-			Ignition switch	Operation	
1 (B)	Ground	Ground	-	ON	-	0V
2 (Y)	Ground	Battery power	Input	OFF	-	Battery voltage
5 (O)	Ground	ACC signal	Input	ACC	-	Battery voltage
12 (B)	14 (W)	Voice guide signal	Output	ON	Press the "GUIDE/ VOICE" button.	 <p>SKIA0171J</p>
13	-	Shield ground	-	-	-	-
44 (R)	Ground	RGB signal (R: red)	Output	ON	Select "Display Diagnosis (NAVI)" of CONFIRMATION/ADJUSTMENT function.	 <p>SKIA4977E</p>
45 (R/W)	Ground	RGB signal (G: green)	Output	ON	Select "Display Diagnosis (NAVI)" of CONFIRMATION/ADJUSTMENT function.	 <p>SKIA4978E</p>
46 (B)	Ground	RGB signal (B: blue)	Output	ON	Select "Display Diagnosis (NAVI)" of CONFIRMATION/ADJUSTMENT function.	 <p>SKIA4979E</p>
47	-	Shield ground	-	-	-	-

NAVI CONTROL UNIT

< ECU DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

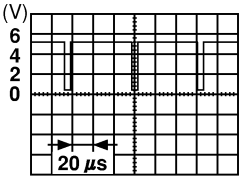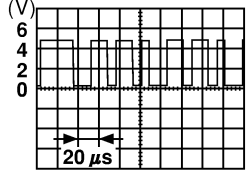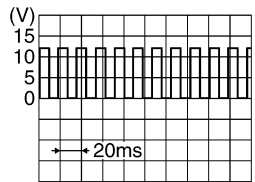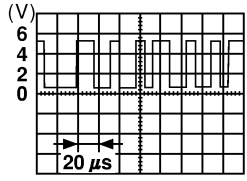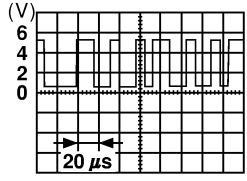Terminal No. (Wire color)		Item	Signal input/output	Condition		Voltage (Approx.)
+	-			Ignition switch	Operation	
48 (BR)	Ground	RGB synchronizing signal	Output	ON	Press the "MAP" button.	 <p style="text-align: right; font-size: small;">SKIA0164E</p>
49	-	Shield ground	-	-	-	-
61 (R/L)	Ground	Illumination signal	Input	ON	Lighting switch in 1st position	Battery voltage
					Lighting switch is OFF	3V or less
63 (G/R)	Ground	Ignition signal	Input	ON	-	Battery voltage
65 (G/W)	Ground	Reverse signal	Input	ON	A/T selector lever in R position	Battery voltage
					-	 <p style="text-align: right; font-size: small;">SKIA0175E</p>
					A/T selector lever not in R position	0V
66 (W/R)	Ground	Vehicle speed signal (8-pulse)	Input	ON	When vehicle speed is approx. 40 km/h (25 MPH)	 <p style="text-align: right; font-size: small;">PKIA1935E</p>
68	-	Shield ground	-	-	-	-
69 (L)	Ground	Communication signal (-)	Input/output	ON	-	 <p style="text-align: right; font-size: small;">SKIA0176E</p>
70 (P)	Ground	Communication signal (-)	Input/output	ON	-	 <p style="text-align: right; font-size: small;">SKIA0176E</p>
81 (B)	82	GPS signal	Input	ON	Connector is not connected.	5V

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

DISPLAY UNIT


< ECU DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

DISPLAY UNIT

Reference Value

INFOID:000000005387728

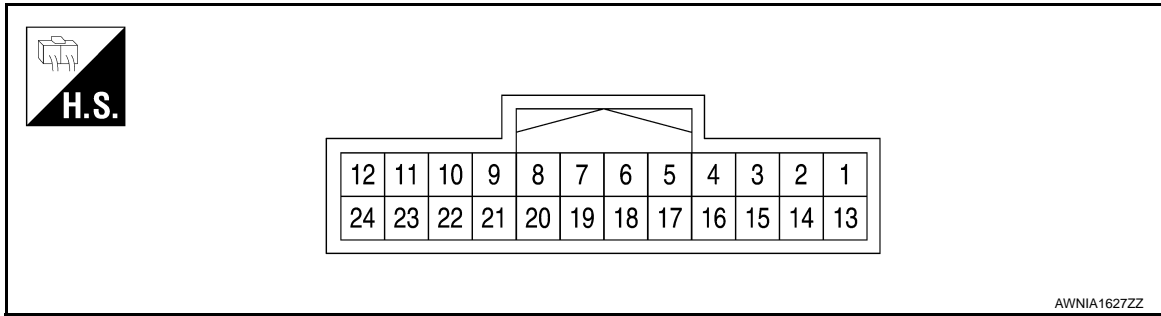






AWNIA1627ZZ

Terminal No. (Wire color)		Item	Signal input/output	Condition		Voltage (Approx.)
+	-			Ignition switch	Operation	
1 (B)	Ground	Ground	-	ON	-	0V
2 (L/W)	Ground	Power supply (Inverter)	Input	ON	-	9V
3 (L/R)	Ground	Power supply (Signal)	Input	ON	-	9V
6 (R/W)	Ground	RGB signal (G: green)	Input	ON	Select "Display Diagnosis (DCU)" of CONFIRMATION/ADJUSTMENT function.	<p>SKIA4981E</p>
7	-	Shield ground	-	-	-	-
8 (R)	Ground	Horizontal synchronizing (HP) signal	Output	ON	-	<p>SKIA4983E</p>
9 (B)	Ground	RGB area (YS) signal	Input	ON	Press the "TRIP" button.	<p>SKIA0162E</p>
11 (B/W)	Ground	Display communication signal (DCU-DSP)	Input	ON	-	<p>SKIA4364E</p>

DISPLAY UNIT

< ECU DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

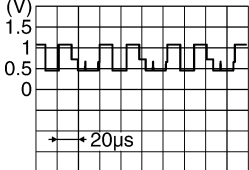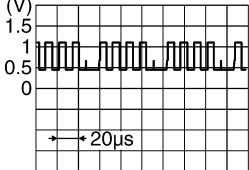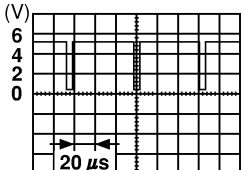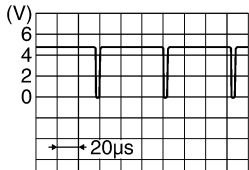Terminal No. (Wire color)		Item	Signal input/output	Condition		Voltage (Approx.)
+	-			Ignition switch	Operation	
13 (P)	Ground	(Inverter) Ground	-	ON	-	0V
14 (P/L)	Ground	(Signal) Ground	-	ON	-	0V
17 (R/L)	Ground	RGB signal (R: red)	Input	ON	Select "Display Diagnosis (DCU)" of CONFIRMATION/ADJUSTMENT function.	 <small>SKIA4980E</small>
18 (B)	Ground	RGB signal (B: blue)	Input	ON	Select "Display Diagnosis (DCU)" of CONFIRMATION/ADJUSTMENT function.	 <small>SKIA4982E</small>
19 (G)	Ground	RGB synchronizing signal	Input	ON	Press the "TRIP" button.	 <small>SKIA0164E</small>
20 (W)	Ground	Vertical synchronizing (VP) signal	Output	ON	-	 <small>SKIA4983E</small>
21	-	Shield ground	-	-	-	-
22 (L)	Ground	Display communication signal (DSP-DCU)	Output	ON	-	 <small>SKIA4363E</small>
23	-	Shield ground	-	-	-	-

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

SATELLITE RADIO TUNER


< ECU DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

SATELLITE RADIO TUNER

Reference Value

INFOID:000000005387729

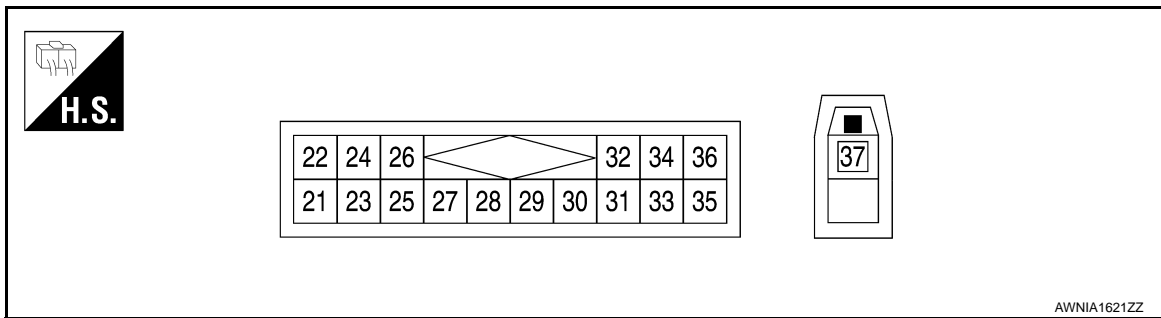

PHYSICAL VALUES

Terminal		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/Output			
22 (R)	21 (G)	Satellite radio sound signal LH	Output	Ignition switch ON	When satellite radio mode is selected	<p style="text-align: right;">SKIB3609E</p>
24 (W)	23 (B)	Satellite radio sound signal RH	Output	Ignition switch ON	When satellite radio mode is selected	<p style="text-align: right;">SKIB3609E</p>
25	—	Shield	—	—	—	—
26	—	Shield	—	—	—	—
28 (L)	Ground	Request signal (SAT→CONT)	Output	Ignition switch ON	When satellite radio mode is selected	<p style="text-align: right;">SKIA9299J</p>
29 (O/L)	Ground	Communication signal (SAT→CONT)	Output	Ignition switch ON	When satellite radio mode is selected	<p style="text-align: right;">SKIA9300J</p>

SATELLITE RADIO TUNER

< ECU DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

Terminal		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/Output			
30 (W/L)	Ground	Communication signal (CONT→SAT)	Input	Ignition switch ON	When satellite radio mode is selected	
32 (Y)	Ground	Battery power supply	Input	Ignition switch OFF	—	Battery voltage
36 (V)	Ground	ACC power supply	Input	Ignition switch ACC	—	Battery voltage
37 (B)	—	Satellite antenna	Input	—	—	—

A
B
C
D
E
F
G
H
I
J
K
L
M

AV

O
P

DVD PLAYER


< ECU DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

DVD PLAYER

Reference Value

INFOID:000000005387730

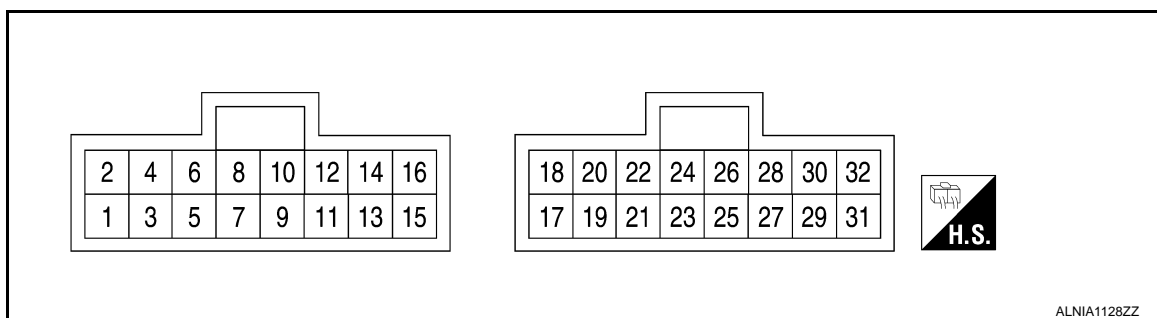

PHYSICAL VALUES

Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output			
1 (B)	2 (W)	DVD audio signal LH	Output	Ignition switch ON	With operation of the DVD player	 SKIB3609E
3 (R)	4 (G)	DVD audio signal RH	Output	Ignition switch ON	With DVD player operation	 SKIB3609E
9 (L/W)	Ground	Audio ON	Output	Ignition switch ON	With DVD player operation	Battery voltage
10 (BR)	Ground	Illumination control	Input	Ignition switch ON	With lighting switch in 1st or 2nd position	Varies between 0 and Battery voltage
11 (Y/L)	Ground	Family entertainment sys- tem enable	Input	Ignition switch ON	With DVD player operation	Battery voltage
12 (R/L)	Ground	Illumination power	Input	Ignition switch ON	With lighting switch in 1st or 2nd position	Battery voltage
15 (V)	Ground	ACC power	Input	Ignition switch ACC or ON	—	Battery voltage
16 (Y)	Ground	Battery power	Input	—	—	Battery voltage

DVD PLAYER

< ECU DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output			
19 (B/W)	Ground	Ground	—	Ignition switch ON	—	0V
21 (G/Y)	Ground	Switch power	Output	Ignition switch ON	With DVD player operation	5V
22 (B)	Ground	Ground	—	Ignition switch ON	—	0V
23 (B/W)	Ground	VTR (+)	Output	Ignition switch ON	With DVD player operation	—
24 (L)	Ground	VTR (-)	Output	Ignition switch ON	With DVD player operation	—
26	—	Shield	—	—	—	—
27 (B/Y)	Ground	Ground	—	Ignition switch ON	—	0V
28 (Y)	—	Data receive	Input	—	—	—
29 (BR)	—	Data transmit	Output	—	—	—
31 (SB)	Ground	Battery power	Output	—	—	Battery voltage
32 (BR)	Ground	Battery power	Output	—	—	Battery voltage

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

AUDIO AMP

< ECU DIAGNOSIS >


[PREMIUM WITH NAVIGATION]

AUDIO AMP

Reference Value

INFOID:000000005387731

TERMINAL LAYOUT

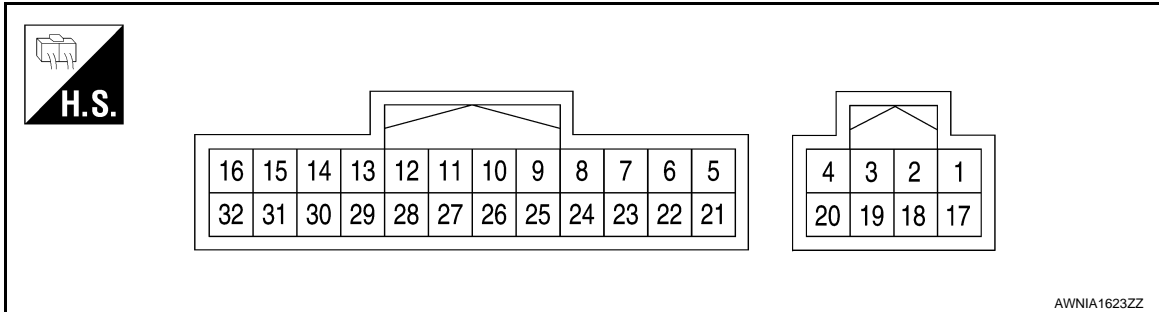







PHYSICAL VALUES

Terminal (wire color)		Item	Signal input/ output	Condition		Reference value (Approx.)
+	-					
1 (Y)	Ground	Battery	Input	-	-	Battery voltage
2 (W)	18 (B)	Subwoofer	Output	Ignition switch ON	Receive audio sig- nal	
3 (BR/W)	19 (BR)	Subwoofer	Output	Ignition switch ON	Receive audio sig- nal	
4 (B)	Ground	Ground	-	Ignition switch ON	-	-
9 (G/W)	Ground	Amp. ON signal	Input	Ignition switch ON	-	More than 6.5V
10 (L/W)	26 (L/B)	Center speaker	Output	Ignition switch ON	Receive audio sig- nal	

AUDIO AMP

< ECU DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

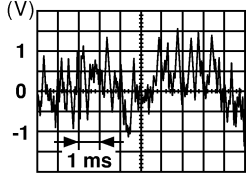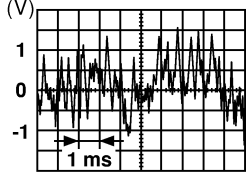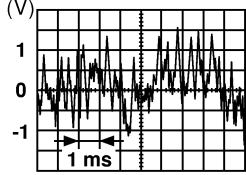
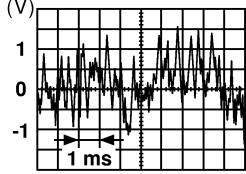
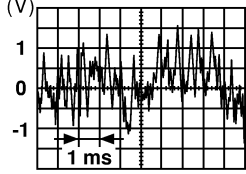
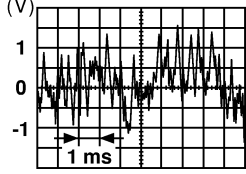
Terminal (wire color)		Item	Signal input/ output	Condition		Reference value (Approx.)
+	-					
11 (SB)	27 (B/Y)	Rear door speaker LH and rear door tweeter LH	Output	Ignition switch ON	Receive audio signal	 <p style="text-align: right; font-size: small;">SKIA0177E</p>
12 (O/L)	28 (R/L)	Rear door speaker RH and rear door tweeter RH	Output	Ignition switch ON	Receive audio signal	 <p style="text-align: right; font-size: small;">SKIA0177E</p>
13 (W/B)	29 (L/B)	Front door tweeter RH	Output	Ignition switch ON	Receive audio signal	 <p style="text-align: right; font-size: small;">SKIA0177E</p>
14 (L/W)	30 (L/R)	Front tweeter LH	Output	Ignition switch ON	Receive audio signal	 <p style="text-align: right; font-size: small;">SKIA0177E</p>
15 (L/W)	31 (L/R)	Front door speaker LH	Output	Ignition switch ON	Receive audio signal	 <p style="text-align: right; font-size: small;">SKIA0177E</p>
16 (W/B)	32 (L/B)	Front door speaker RH	Output	Ignition switch ON	Receive audio signal	 <p style="text-align: right; font-size: small;">SKIA0177E</p>
17 (Y/G)	Ground	Battery	Input	-	-	Battery voltage
20 (B)	Ground	Ground	-	Ignition switch ON	-	-

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

AUDIO AMP

< ECU DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

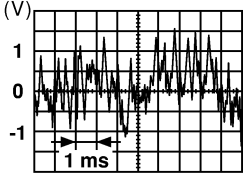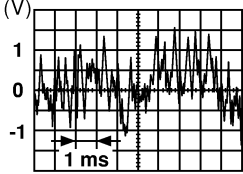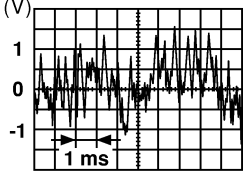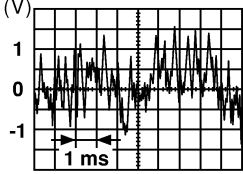Terminal (wire color)		Item	Signal input/ output	Condition		Reference value (Approx.)
+	-					
21 (Y)	5 (BR)	Audio sound sig- nal front RH	Input	Ignition switch ON	Receive audio sig- nal	 <small>SKIA0177E</small>
22 (W)	6 (B)	Audio sound sig- nal front LH	Input	Ignition switch ON	Receive audio sig- nal	 <small>SKIA0177E</small>
23 (L)	7 (B/W)	Audio sound sig- nal rear RH	Input	Ignition switch ON	Receive audio sig- nal	 <small>SKIA0177E</small>
24 (BR)	8 (B/R)	Audio sound sig- nal rear LH	Input	Ignition switch ON	Receive audio sig- nal	 <small>SKIA0177E</small>

BLUETOOTH CONTROL UNIT

< ECU DIAGNOSIS >


[PREMIUM WITH NAVIGATION]

BLUETOOTH CONTROL UNIT

Reference Value

INFOID:000000005387732

TERMINAL LAYOUT

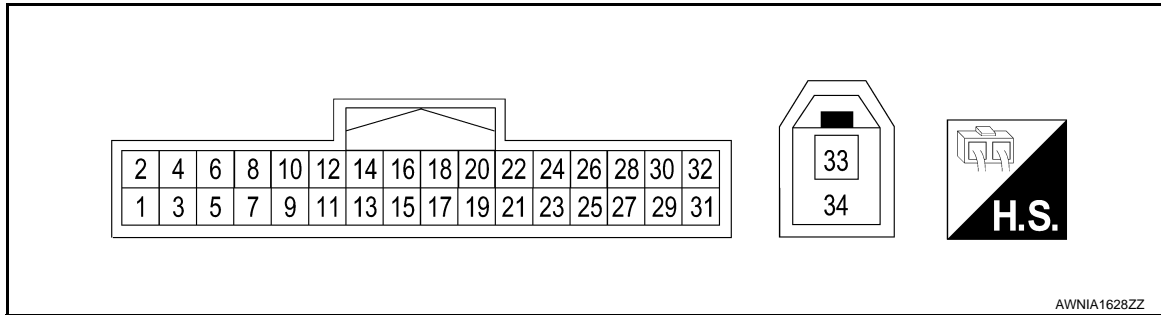

PHYSICAL VALUES

Terminal (wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/output			
1 (Y)	Ground	Battery power	Input	-	-	Battery voltage
2 (V)	Ground	ACC power	Input	Ignition switch ACC/ON	-	Battery voltage
3 (G/R)	Ground	IGN power	Input	Ignition switch ON/ START	-	Battery voltage
4 (B/W)	Ground	Ground	-	Ignition switch ON	-	0V
6	-	Shield	-	-	-	-
7 (B)	8 (R/L)	MIC in signal	Input	-	-	-
9 (G)	10 (R)	Audio out	Output	Ignition switch ACC/ON	Bluetooth control unit sends audio signal	<p style="text-align: right;">SKIB3609E</p>
11 (Y)	-	Mute control	-	-	-	-
12 (R/G)	14 (Y/R)	Steering switch signal A	Input	Ignition switch ON	Pressing switch	0V
					Pressing switch	0.75
					Pressing VOL up switch	2V
					Except for above	5V








A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

AV

BLUETOOTH CONTROL UNIT

< ECU DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

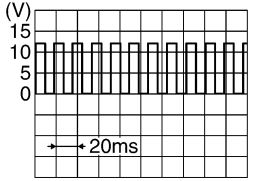Terminal (wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ output			
13 (G/W)	14 (Y/R)	Steering switch signal B	Input	Ignition switch ON	Pressing  switch	0V
					Pressing  switch	0.75V
					Pressing VOL down switch	2V
					Except for above	5 V
15 (GR)	Ground	LED power	Output	Ignition switch ON	-	Battery voltage
17 (V)	19 (R/B)	Steering switch signal A	Output	Ignition switch ON	Pressing  switch	0V
					Pressing  switch	0.75
					Pressing VOL up switch	2V
					Except for above	5V
18 (G/O)	19 (R/B)	Steering switch signal B	Output	Ignition switch ON	Pressing  switch	0V
					Pressing  switch	0.75V
					Pressing VOL down switch	2V
					Except for above	5V
20 (B)	Ground	Ground	-	-	-	0V
23 (B)	Ground	Ground	-	-	-	0V
28 (W/R)	Ground	Vehicle speed sig- nal (8-pulse)	Input	Ignition switch ON	When vehicle speed is approx. 40 km/h (25 MPH)	 <p style="text-align: right; font-size: small;">PKIA1935E</p>
29 (R/W)	Ground	Microphone power	Output	Ignition switch ON	-	5V

SYMPTOM DIAGNOSIS

AUDIO SYSTEM

Symptom Table

INFOID:000000005387733

AUDIO SYSTEM

Symptom	Possible cause	Reference page
Inoperative	<ul style="list-style-type: none"> • Audio unit power and ground circuit • Audio unit 	<ul style="list-style-type: none"> • AV-201
Steering switch does not operate	<ul style="list-style-type: none"> • Steering switch • Audio unit 	<ul style="list-style-type: none"> • AV-237 • AV-201
All speakers do not sound	<ul style="list-style-type: none"> • Audio unit power and ground circuit • Audio amp. ON signal • Audio amp. power and ground circuit 	<ul style="list-style-type: none"> • AV-201 • AV-236 • AV-208
One or several speakers do not sound	<ul style="list-style-type: none"> • Front door speaker • Front tweeter • Center speaker • Rear door tweeter (crew cab) • Rear door speaker • Subwoofer 	<ul style="list-style-type: none"> • AV-219 • AV-222 • AV-225 • AV-230 • AV-227 • AV-233

NAVIGATION SYSTEM

Symptom	Possible cause	Reference page
Inoperative	<ul style="list-style-type: none"> • Audio unit power and ground circuit • Audio unit 	<ul style="list-style-type: none"> • AV-201 • AV-201
Steering switch does not operate	<ul style="list-style-type: none"> • Steering switch • Audio unit 	<ul style="list-style-type: none"> • AV-237 • AV-246
Voice activated control does not operate	<ul style="list-style-type: none"> • Microphone • Steering switch • Audio unit 	<ul style="list-style-type: none"> • AV-210 • AV-237 • AV-201

HANDS-FREE PHONE SYSTEM

Symptom	Possible cause	Reference page
Inoperative	<ul style="list-style-type: none"> • Audio unit power and ground circuit • Audio unit 	<ul style="list-style-type: none"> • AV-201 • AV-246
Steering switch does not operate	<ul style="list-style-type: none"> • Steering switch • Audio unit 	<ul style="list-style-type: none"> • AV-237 • AV-246
Voice activated control does not operate	<ul style="list-style-type: none"> • Microphone • Steering switch • Audio unit 	<ul style="list-style-type: none"> • AV-244 • AV-237 • AV-246

DVD PLAYER

Symptom	Possible cause	Reference page
DVD player inoperative	<ul style="list-style-type: none"> • Power supply and ground circuits • DVD player 	<ul style="list-style-type: none"> • AV-206 • AV-286
No sound when playing a DVD	<ul style="list-style-type: none"> • Audio signal circuits • Audio unit • DVD player 	<ul style="list-style-type: none"> • AV-246 • AV-246 • AV-286
Video monitor is inoperative/does not display properly	<ul style="list-style-type: none"> • Power supply and ground circuits • Video out circuit • DVD player • Display monitor 	<ul style="list-style-type: none"> • AV-207 • AV-286 • AV-286 • AV-286

A
B
C
D
E
F
G
H
I
J
K
L
M
AV

AUDIO SYSTEM

< SYMPTOM DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

Symptom	Possible cause	Reference page
DVD remote control is inoperative/does not operate properly	<ul style="list-style-type: none">• DVD player• Rear audio remote control unit	<ul style="list-style-type: none">• AV-286• AV-286
Headphones inoperative	<ul style="list-style-type: none">• Headphone batteries• Headphone audio signal circuits from Audio unit• Audio unit• Rear audio remote control unit	<ul style="list-style-type: none">• AV-286• AV-246• AV-286

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

NORMAL OPERATING CONDITION

Description

INFOID:000000005387734

AUDIO SYSTEM

The majority of the audio troubles are the result of outside causes (bad CD, electromagnetic interference, etc.).

Noise

The following noise results from variations in field strength, such as fading noise and multi-path noise, or external noise from trains and other sources. It is not a malfunction.

- Fading noise: This noise occurs because of variations in the field strength in a narrow range due to mountains or buildings blocking the signal.
- Multi-path noise: This noise results from the waves sent directly from the broadcast station arriving at the antenna at a different time from the waves which reflect off mountains or buildings.

The vehicle itself can be a source of noise if noise prevention parts or electrical equipment is malfunctioning. Check if noise is caused and/or changed by engine speed, ignition switch turned to each position, and operation of each piece of electrical equipment, and determine the cause.

NOTE:

The source of the noise can be found easily by listening to the noise while removing the fuses of electrical components, one by one.

Type of Noise and Possible Cause

Occurrence condition		Possible cause
Occurs only when engine is ON.	A continuous growling noise occurs. The speed of the noise varies with changes in the engine speed.	<ul style="list-style-type: none"> • Ignition components
The occurrence of the noise is linked with the operation of the fuel pump.		<ul style="list-style-type: none"> • Fuel pump condenser
Noise only occurs when various electrical components are operating.	A cracking or snapping sound occurs with the operation of various switches.	<ul style="list-style-type: none"> • Relay malfunction, audio unit malfunction
	The noise occurs when various motors are operating.	<ul style="list-style-type: none"> • Motor case ground • Motor
The noise occurs constantly, not just under certain conditions.		<ul style="list-style-type: none"> • Rear defogger coil malfunction (if equipped) • Open circuit in printed heater • Poor ground of antenna feeder line
A cracking or snapping sound occurs while the vehicle is being driven, especially when it is vibrating excessively.		<ul style="list-style-type: none"> • Ground wire of body parts • Ground due to improper part installation • Wiring connections or a short circuit

NAVIGATION SYSTEM

Basic Operation

Symptom	Cause	Remedy
No image is shown.	Display brightness adjustment is set fully to DARK side.	Adjust the display brightness.
No guide sound is heard. Audio guide volume is too low or too high.	Volume control is set to OFF, MIN or MAX.	Adjust the audio guide volume.
	Audio guidance is not available while the vehicle is driving on a dark pink route.	System is not malfunctioning.
Screen is too dark. Motion of the image is too slow.	Temperature inside the vehicle is low.	Wait until the temperature inside the vehicle reaches the proper temperature.
Small black or bright spots appear on the screen.	Symptom peculiar to a liquid crystal display (display unit).	System is not malfunctioning.

Vehicle Mark

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

Symptom	Cause	Remedy
Map screen and BIRDVIEW™ Name of the place vary with the screen.	Some thinning of the character data is done to prevent the display becoming to complex. In some cases and in some locations, the display contents may differ. The same place name, street name, etc. may not be displayed every time on account of the data processing.	System is not malfunctioning.
Vehicle mark is not positioned correctly.	Vehicle is transferred by ferry or by towing after its ignition switch is turned to OFF.	Drive the vehicle for a while in the GPS satellite signal receiving condition.
Screen will not switch to nighttime mode after the lighting switch is turned ON.	The daytime screen is selected by the "SWITCH SCREENS" when the last time the screen dimming setting is done. Switching between daytime/nighttime screen may be inhibited by the automatic illumination adjustment function.	Perform screen dimming and select the nighttime screen by "SWITCH SCREENS".
Map screen will not scroll in accordance with the vehicle travel.	Current location is not displayed.	Press "MAP" button to display the current location.
Vehicle mark will not be shown.	Current location is not displayed.	Press "MAP" button to display the current location.
Accuracy indicator (GPS satellite mark) on the map screen stays gray.	GPS satellite signal is intercepted because the vehicle is in or behind a building.	Move the vehicle out to an open space.
	GPS satellite signal cannot be received because an obstacle is placed on top of the instrument panel.	Do not place anything on top of the meter display (instrument panel).
	GPS satellites are not visible from current location.	Wait until GPS satellites are visible by moving the vehicle.
Vehicle location accuracy is low.	Accuracy indicator (GPS satellite mark) on the map screen stays gray.	Current location is not determined.
	Vehicle speed setting by the vehicle speed pulse has been deviated (advanced or retarded) from the actual vehicle speed because tire chain is fitted or the system has been used on another vehicle.	Drive the vehicle for a while [for approx. 30 minutes at approx. 30 km/h (19 MPH)] and the deviation will be automatically adjusted. If advancement or retard still occur, perform the distance adjustment by CONFIRMATION/ADJUSTMENT mode of diagnosis function.
	Map data has error or omission. (Vehicle mark is always deviated to the same position.)	As a rule, an updated map DVD-ROM will be released once a year.

Destination, Passing Points and Menu Items Cannot be Selected/Set

Symptom	Cause	Remedy
Destination cannot be set.	Destination to be set is on an expressway.	Set the destination on an ordinary road.
Passing point is not searched when re-searching the route.	The vehicle has already passed the passing point, or the system judged so.	To include the passing points that have been passed into the route again, set the route again.
Route information will not be displayed.	Route searching has not been done.	Set the destination and perform route searching.
	Vehicle mark is not on the recommended route.	Drive on the recommended route.
	Route guide is turned OFF.	Turn route guide ON.
	Route information is not available on the dark pink route.	System is not malfunctioning.
After the route searching, no guide sign will appear as the vehicle goes near the entrance/exit to the toll road.	Vehicle mark is not on the recommended route. (On the display, only guide signs related to the recommended route will be shown.)	Drive on the recommended route.

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

Symptom	Cause	Remedy
Automatic route searching is not possible.	Vehicle is driving on a highway (gray route), or no recommended route is available.	Drive on a road to be searched. Or re-search the route manually. In this case, however, the whole route will be searched.
Performed automatic detour search (or detour search). However, the result is the same as that of the previous search.	Performed search with every conditions considered. However, the result is the same as that of the previous search.	System is not malfunctioning.
Passing points cannot be set.	More than five passing points were set.	Passing points can be set up to five. To stop at more than five points, perform sharing in several steps.
When setting the route, the starting point cannot be selected.	The current vehicle location is always set as the starting point of a route.	System is not malfunctioning.
Some menu items cannot be selected.	The vehicle is being driven.	Stop the vehicle at a safe place and then operate the system.

Voice Guide

Symptom	Cause	Remedy
Voice guide will not operate.	Note: Voice guide is only available at intersections that satisfy certain conditions (indicated by ● on the map). Therefore, guidance may not be given even when the route on the map changes direction.	System is not malfunctioning.
	The vehicle is not on the recommended route.	Return to the recommended route or re-search the route.
	Voice guide is turned OFF.	Turn voice guide ON.
	Route guide is turned OFF.	Turn route guide ON.
Voice guide does not match the actual road pattern.	Voice guide may vary with the direction to which the vehicle is turn and the connection of the road to other roads.	Drive in conformity to the actual traffic rules.

Route Search

Symptom	Cause	Remedy
No route is shown.	No road to be searched is found around the destination.	Find wider road (orange road or wider) nearby and reset the destination and passing points onto it. Take care of the traveling direction when there are separate up and down roads.
	Starting point and the destination are too close.	Set the destination at more distant point.
	Conditional traffic regulation (day of the week/ time of the day) is set at the area around the current location or the destination.	Turn the time-regulating search conditions OFF. Turn "Avoid regulation time" in the search conditions OFF.
Indicated route is intermittent.	In some areas, highways (gray routes) are not used for the search ^(Note) Therefore, the route to the current location or the passing points may be intermittent.	System is not malfunctioning.
When the vehicle has passed the recommended route, it is deleted from the screen.	A recommended route is controlled by each section. When the vehicle has passed the passing point 1, then the map data from the starting point up to the passing point 1 will be deleted. (The data may remain undeleted in some area.)	System is not malfunctioning.

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[PREMIUM WITH NAVIGATION]


Symptom	Cause	Remedy
Detouring route is recommended.	In some areas, highways (gray routes) are not used for the search. (Note). Therefore, detour route may be recommended.	Set the route closer to the basic route (gray route).
	A detour route may be shown when some traffic regulation (one-way traffic, etc.) is set at the area around the starting point or the destination.	Slightly move the starting point or the destination, or set the passing point on the route of your choice.
	In the area where highways (gray routes) are used for the search, left turn has priority around the current location and the destination (passing points). For this reason, the recommended route may be detouring.	System is not malfunctioning.
Landmarks on the map do not match the actual ones.	This can be happen due to omission or error in the map data.	As a rule, an updated map DVD-ROM will be released once a year. Wait until the latest map has become available.
Recommended route is far from the starting point, passing points, and destination.	Starting point, passing points, and destination of the route guide were set far from the desired points because route searching data around these area were not stored.	Reset the destination onto the road nearby. If this road is one of the highways (gray routes), an ordinary road nearby may be displayed as the recommended route.

NOTE:

Except for the ordinance-designated cities. (Malfunctioning areas may be changed in the updated map disc.)

Examples of Current-Location Mark Displacement







Vehicle's travel amount is calculated by reading its travel distance and turning angle. Therefore, if the vehicle is driven in the following manner, an error will occur in the vehicle's current location display. If correct location has not been restored after driving the vehicle for a while, perform location correction.

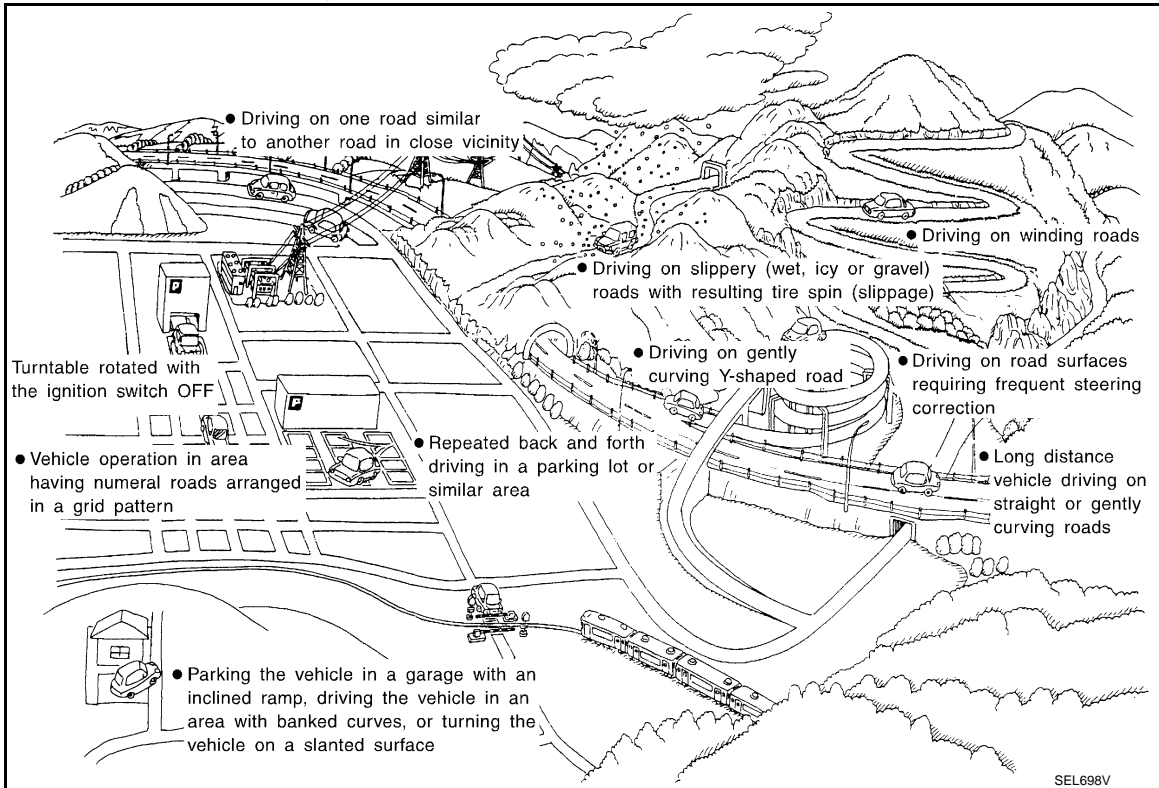

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

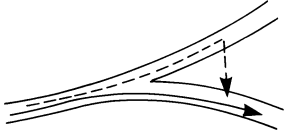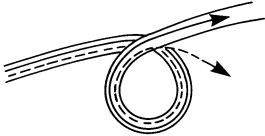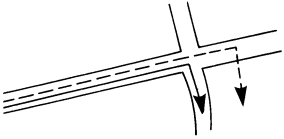
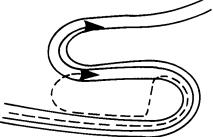
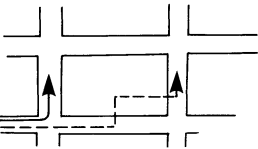
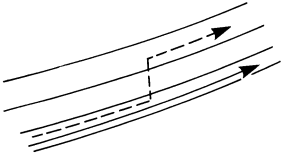
Cause (condition) –: While driving ooo: Display	Driving condition	Remarks (correction, etc.)
Y-intersections  <small>ELK0192D</small>	At a Y intersection or similar gradual division of roads, an error in the direction of travel deduced by the sensor may result in the current-location mark appearing on the wrong road.	If after travelling about 10 km (6 miles) the correct location has not been restored, perform location correction and, if necessary, direction correction.
Spiral roads  <small>ELK0193D</small>	When driving on a large, continuous spiral road (such as loop bridge), turning angle error is accumulated and the vehicle mark may deviate from the correct location.	
Straight roads  <small>ELK0194D</small>	When driving on a long, straight road and slow curve without stopping, map-matching does not work effectively enough and distance errors may accumulate. As a result, the vehicle mark may deviate from the correct location when the vehicle is turned at a corner.	
Zigzag roads  <small>ELK0195D</small>	When driving on a zigzag road, the map may be matched to other roads in the similar direction nearby at every turn, and the vehicle mark may deviate from the correct location.	
Roads laid out in a grid pattern  <small>ELK0196D</small>	When driving where roads are laid out in a grid pattern, or where many roads are running in the similar direction nearby, the map may be matched to them by mistake and the vehicle mark may deviate from the correct location.	
Parallel roads  <small>ELK0197D</small>	When two roads are running in parallel (such as highway and sideways), the map may be matched to the other road by mistake and the vehicle mark may deviate from the correct location.	

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >



[PREMIUM WITH NAVIGATION]

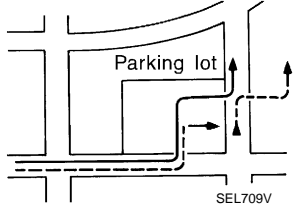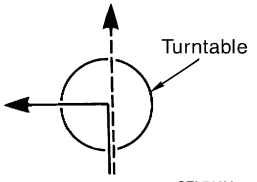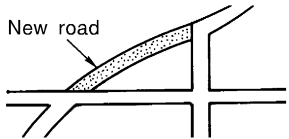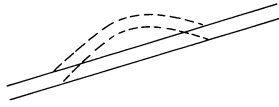Cause (condition) -: While driving ooo: Display		Driving condition	Remarks (correction, etc.)
Place	In a parking lot  SEL709V	When driving in a parking lot, or other location where there are no roads on the map, matching may place the vehicle mark on a nearby road. When the vehicle returns to the road, the vehicle mark may have deviated from the correct location. When driving in circle or turning the steering wheel repeatedly, direction errors accumulate, and the vehicle mark may deviate from the correct location.	If after travelling about 10 km (6 miles) the correct location has not been restored, perform location correction and, if necessary, direction correction.
	Turntable  SEL710V	When the ignition switch is OFF, the navigation system cannot get the signal from the gyroscope (angular speed sensor). Therefore, the displayed direction may be wrong and the correct road may not be easily returned to after rotating the vehicle on a turntable with the ignition OFF.	
	Slippery roads	On snow, wet roads, gravel, or other roads where tires may slip easily, accumulated mileage errors may cause the vehicle mark to deviate from the correct road.	
	Slopes	When parking in sloped garages, when travelling on banked roads, or in other cases where the vehicle turns when tilted, an error in the turning angle will occur, and the vehicle mark may deviate from the road.	
Map data	Road not displayed on the map screen  SEL699V	When driving on new roads or other roads not displayed on the map screen, map matching does not function correctly and matches the location to a nearby road. When the vehicle returns to a road which is on the map, the vehicle mark may deviate from the correct road.	
	Different road pattern (Changed due to repair)  ELK0201D	If the road pattern stored in the map data and the actual road pattern are different, map matching does not function correctly and matches the location to a nearby road. The vehicle mark may deviate from the correct road.	
Vehicle	Use of tire chains	When tire chains are used, the mileage is not correctly detected, and the vehicle mark may deviate from the correct road.	Drive the vehicle for a while. If the distance still deviates, adjust it by using the distance adjustment function. (If the tire chain is removed, recover the original value.)

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

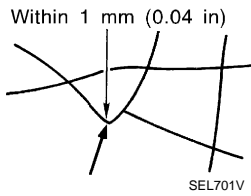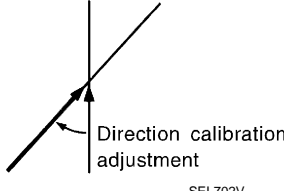Cause (condition) –: While driving ooo: Display	Driving condition	Remarks (correction, etc.)
Precautions for driving	Just after the engine is started	If the vehicle is driven just after the engine is started when the gyroscope (angular speed sensor) correction is not completed, the vehicle can lose its direction and may have deviated from the correct location. Wait for a short while before driving after starting the engine.
	Continuous driving without stopping	When driving long distances without stopping, direction errors may accumulate, and the current-location mark may deviate from the correct road. Stop and adjust the orientation.
	Abusive driving	Spinning the wheels or engaging in other kinds of abusive driving may result in the system being unable to perform correct detection, and may cause the vehicle mark to deviate from the correct road. If after travelling about 10 km (6 miles) the correct location has not been restored, perform location correction and, if necessary, direction correction.
How to correct location	Position correction accuracy 	If the accuracy of location settings is poor, accuracy may be reduced when the correct road cannot be found, particularly in places where there are many roads. Enter in the road displayed on the screen with an accuracy of approx. 1mm. Caution: Whenever possible, use detailed map for the correction.
	Direction when location is corrected 	If the accuracy of location settings during correction is poor, accuracy may be reduced afterwards. Perform direction correction.

Location Correction by Map-Matching is Slow

- The map-matching function needs to refer to the data of the surrounding area. It is necessary to drive some distance for the function to work.
- Because map-matching operates on this principle, when there are many roads running in similar directions in the surrounding area, no matching determination may be made. The location may not be corrected until some special feature is found.

Name of Road is Not Displayed

The current road name may not be displayed if there are no road names displayed on the map screen.

Contents of Display Differ for Birdview™ and the (Flat) Map Screen

Difference of the BIRDVUE™ screen from the flat map screen are as follows.

- The current place name displays names which are primarily in the direction of vehicle travel.
- The amount of time before the vehicle travel or turn angle is updated on the screen is longer than for the (flat) map display.
- The conditions for display of place names, roads, and other data are different for nearby areas and for more distant areas.
- Some thinning of the character data is done to prevent the display becoming too complex. In some cases and in some locations, the display contents may differ.
- The same place name, street name, etc. may be displayed multiple times.

Vehicle Mark Shows a Position Which is Completely Wrong

In the following cases, the vehicle mark may appear on completely different position in the map depending on the GPS satellite signal receiving conditions. In this case, perform location correction and direction correction.

- When location correction has not been done
- If the receiving conditions of the GPS satellite signal is poor, if the vehicle mark becomes out of place, it may move to a completely different location and not come back if location correction is not done. The position will be corrected if the GPS signal can be received.
- When the vehicle has traveled by ferry, or when the vehicle has been being towed

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[PREMIUM WITH NAVIGATION]

- Because calculation of the current location cannot be done when traveling with the ignition off, for example when traveling by ferry or when being towed, the location before travel is displayed. If the precise location can be detected with GPS, the location will be corrected.

Vehicle Mark Jumps

In the following cases, the vehicle mark may appear to jump as a result of automatic correction of the current location.

- When map matching has been done
 - If the current location and the vehicle mark are different when map matching is done, the vehicle mark may seem to jump. At this time, the location may be “corrected” to the wrong road or to a location which is not on a road.
- When GPS location correction has been done
 - If the current location and the vehicle mark are different when the location is corrected using GPS measurements, the vehicle mark may seem to jump. At this time, the location may be “corrected” to a location which is not on a road.

Vehicle Mark is in a River or Sea

The navigation system moves the vehicle mark with no distinction between land and rivers or sea. If the vehicle mark is somehow out of place, it may appear that the vehicle is driving in a river or the sea.

Vehicle Mark Automatically Rotates

The system wrongly memorizes the rotating status as stopping when the ignition switch is turned ON with the turntable rotating. That causes the vehicle mark to rotate when the vehicle is stopped.

When Driving on Same Road, Sometimes Vehicle Mark is in Right Place and Sometimes it is in Wrong Place

The conditions of the GPS antenna (GPS data) and gyroscope (angular speed sensor) change gradually. Depending on the road traveled and the operation of the steering wheel, the location detection results will be different. Therefore, even on a road on which the location has never been wrong, conditions may cause the vehicle mark to deviate.

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005387735

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution for Trouble Diagnosis

INFOID:000000005387736

AV COMMUNICATION SYSTEM


- Do not apply voltage of 7.0 V or higher to the measurement terminals.
- Use the tester with its open terminal voltage being 7.0 V or less.
- Be sure to turn ignition switch OFF and disconnect the battery cable from the negative terminal before checking the circuit.

Precaution for Harness Repair

INFOID:000000005387737

AV COMMUNICATION SYSTEM

- Solder the repaired parts, and wrap with tape. [Frays of twisted line must be within 110 mm (4.33 in).]

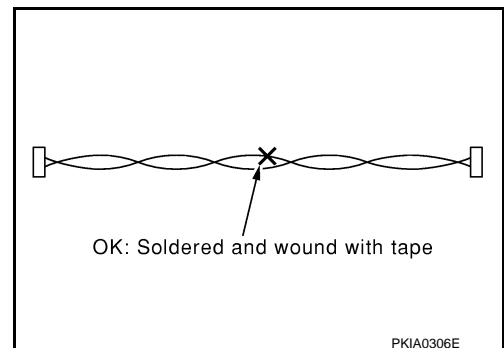

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P


AV

PRECAUTIONS

< PRECAUTION >

- Do not perform bypass wire connections for the repair parts. (The spliced wire will become separated and the characteristics of twisted line will be lost.)

[PREMIUM WITH NAVIGATION]

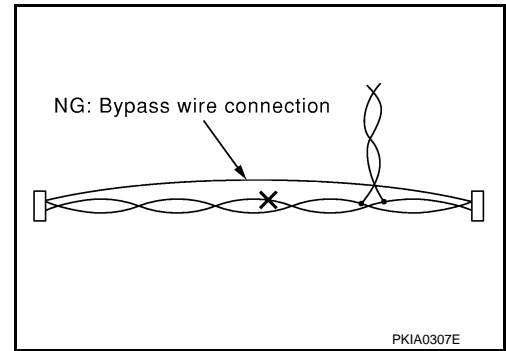


PREPARATION

PREPARATION

Commercial Service Tools

INFOID:000000005387738

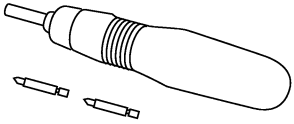Tool name	Description
<p>Power tool</p>  <p>PBIC0191E</p>	<p>Loosening bolts and nuts</p>

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

AV

ON-VEHICLE REPAIR

AUDIO UNIT


Removal and Installation

INFOID:000000005387739

AUDIO UNIT

Removal

1. Disconnect the battery negative terminal.
2. Remove the cluster lid C. Refer to [JP-14. "Removal and Installation"](#).
3. Remove the audio unit screws (A), using power tool.
4. Pull out the audio unit (1) and disconnect the audio unit connectors.

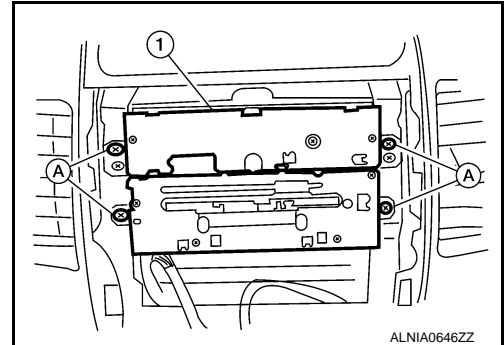


Installation

Installation is in the reverse order of removal.

AV SWITCH

Removal

1. Disconnect battery negative terminal.
2. Remove the cluster lid C. Refer to [JP-14. "Removal and Installation"](#).
3. Remove the AV switch screws.
4. Carefully remove the AV switch.

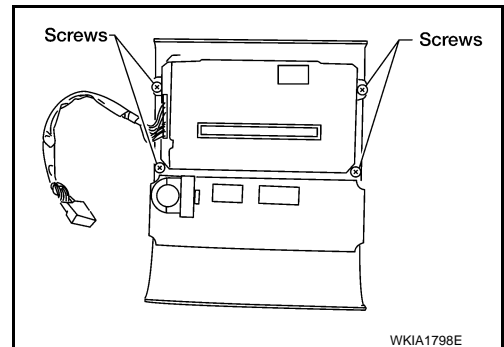

Installation

Installation is in the reverse order of removal.

DISPLAY UNIT


Removal and Installation

INFOID:000000005387740

DISPLAY UNIT

Removal

1. Remove the center console. Refer to [IP-18, "Removal and Installation"](#).
2. Remove the cluster lid D. Refer to [IP-13, "Removal and Installation"](#).
3. Remove the display control unit.
4. Disconnect the display unit connectors.

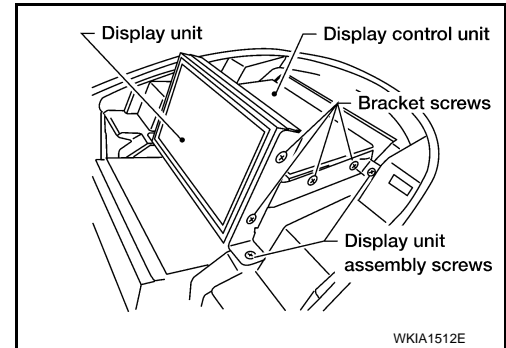

5. Remove the display unit.
6. Remove the display unit brackets.

Installation

Installation is in reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

AV

FRONT TWEETER


Removal and Installation

INFOID:000000005387741

FRONT TWEETER

Removal

1. Remove the front tweeter grille. Refer to [IP-11, "Removal and Installation"](#).
2. Remove the front tweeter clips (C103) (A).
3. Disconnect the front tweeter connector and remove the front tweeter (1).

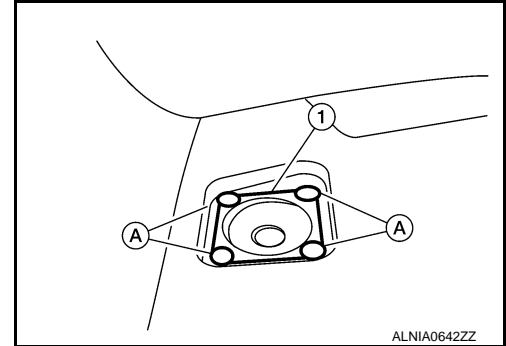

Installation

Installation is in the reverse order of removal.

CENTER SPEAKER


Removal and Installation

INFOID:000000005714039

CENTER SPEAKER

Removal

1. Remove the center console. Refer to [IP-18, "Removal and Installation"](#).
2. Remove the cluster lid D. Refer to [IP-14, "Removal and Installation"](#).
3. Remove the center speaker screws and remove the center speaker.

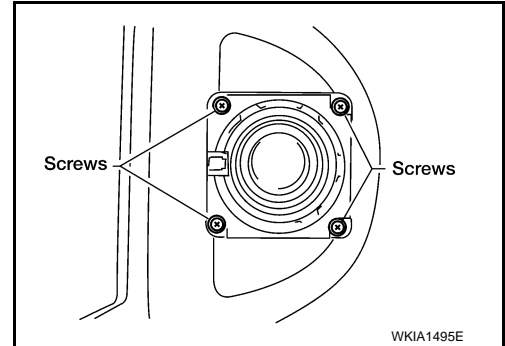

Installation

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

FRONT DOOR SPEAKER

< ON-VEHICLE REPAIR >

[PREMIUM WITH NAVIGATION]

FRONT DOOR SPEAKER


Removal and Installation

INFOID:000000005387743

FRONT DOOR SPEAKER

Removal

1. Remove the front door finisher. Refer to [INT-10, "Removal and Installation"](#).
2. Remove the four front door speaker screws.
3. Disconnect the front door speaker connector and remove the front door speaker.

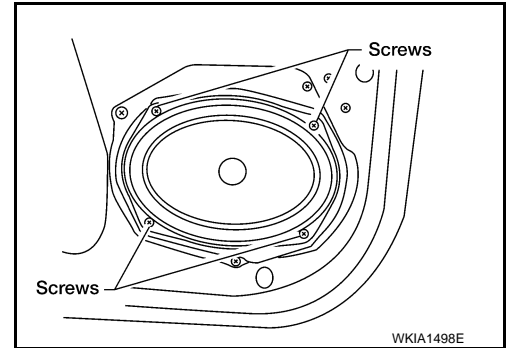

Installation

Installation is in the reverse order of removal.

REAR DOOR SPEAKER

< ON-VEHICLE REPAIR >

[PREMIUM WITH NAVIGATION]

REAR DOOR SPEAKER


Removal and Installation

INFOID:000000005387744

REAR DOOR SPEAKER

Removal

1. Remove the rear door finisher. Refer to [INT-10, "Removal and Installation"](#) (Crew Cab) or [INT-10, "Removal and Installation"](#) (King Cab).
2. Remove the three rear door speaker screws and remove the rear door speaker.

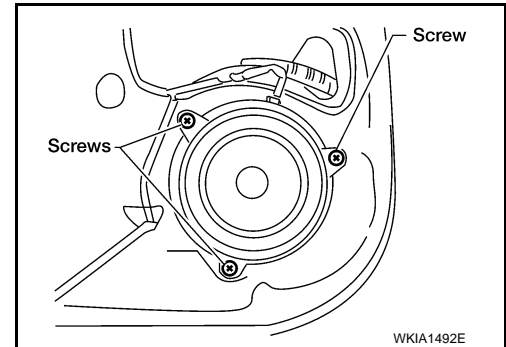


Installation

Installation is in the reverse order of removal.

REAR DOOR TWEETER

Removal

1. Remove the rear door finisher. Refer to [INT-10, "Removal and Installation"](#).
2. Remove the rear door tweeter screws and remove the rear door tweeter.
3. Disconnect the rear door tweeter connector.

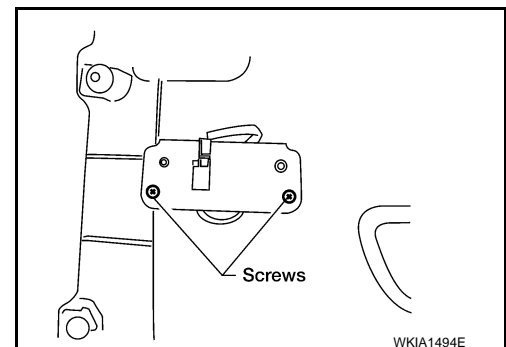

Installation

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

AV

SUBWOOFER

< ON-VEHICLE REPAIR >

[PREMIUM WITH NAVIGATION]

SUBWOOFER


Removal and Installation

INFOID:000000005387745

SUBWOOFER

Removal

1. Remove the front seat LH. Refer to [SE-30, "Removal and Installation"](#).
2. Disconnect the subwoofer connector (B).
 - ⇐: Vehicle front
3. Remove the subwoofer bolts (A).
4. Remove the subwoofer (1).

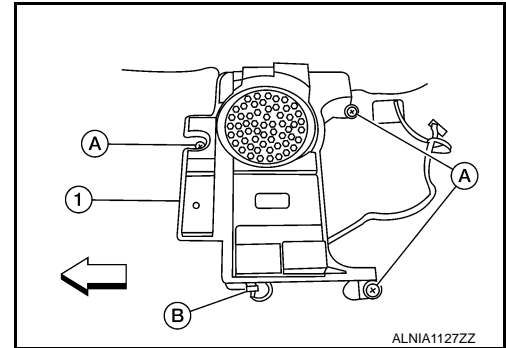

Installation

Installation is in the reverse order of removal.

STEERING SWITCH

< ON-VEHICLE REPAIR >

[PREMIUM WITH NAVIGATION]

STEERING SWITCH


Removal and Installation

INFOID:000000005387746

STEERING WHEEL AUDIO CONTROL SWITCHES

Removal

1. Remove the steering wheel. Refer to [ST-11, "Removal and Installation"](#).
2. Remove the steering wheel rear cover screws and remove the steering wheel rear cover.
3. Remove the steering wheel switch assembly screws and remove the steering wheel switches.

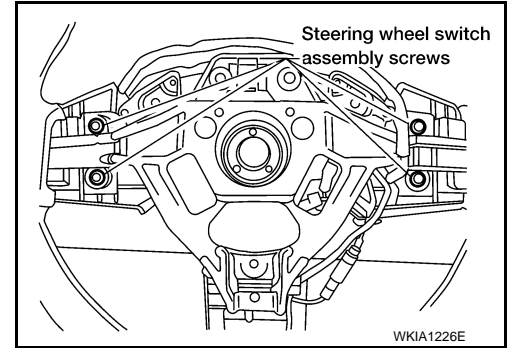

Installation

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

REAR AUDIO REMOTE CONTROL UNIT

< ON-VEHICLE REPAIR >

[PREMIUM WITH NAVIGATION]

REAR AUDIO REMOTE CONTROL UNIT


Removal and Installation

INFOID:000000005387747

REAR AUDIO REMOTE CONTROL UNIT

Removal

1. Carefully remove the rear audio remote control unit from the rear roof console assembly.
CAUTION:
Wrap removal tool with clean shop cloth to prevent damage to the headliner.
2. Disconnect the connector and remove the rear audio remote control unit.

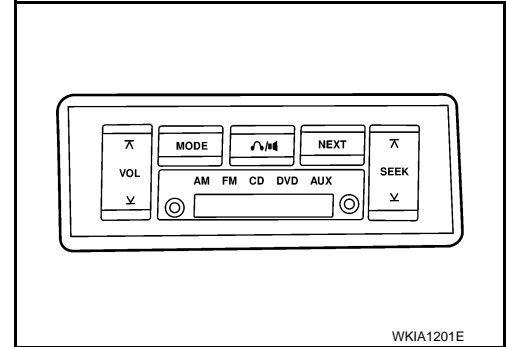

Installation

Installation is in the reverse order of removal.


AUDIO AMP.

Removal and Installation


INFOID:000000005387748

REMOVAL

1. Remove the accelerator pedal. Refer to [ACC-3, "Removal and Installation"](#).
2. Remove the BCM. Refer to [BCS-53, "Removal and Installation"](#).
3. Disconnect the audio amp. speaker amp. connectors.
4. Remove the audio amp. speaker amp. and bracket assembly screws and slide the audio amp. speaker amp. bracket assembly down.

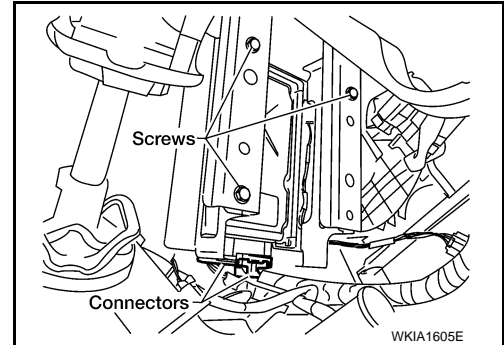

5. Remove the audio amp. speaker amp. screws (A), then remove the audio amp. speaker amp. (1).

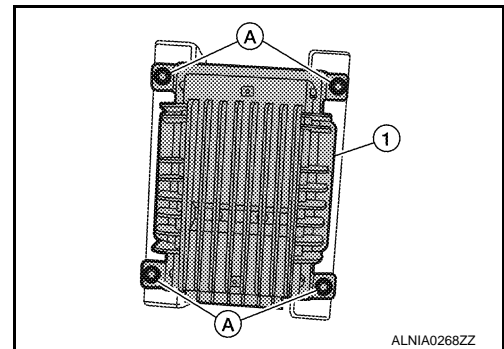

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

AUDIO ANTENNA


< ON-VEHICLE REPAIR >

[PREMIUM WITH NAVIGATION]

AUDIO ANTENNA

Location of Antenna

INFOID:000000005387749

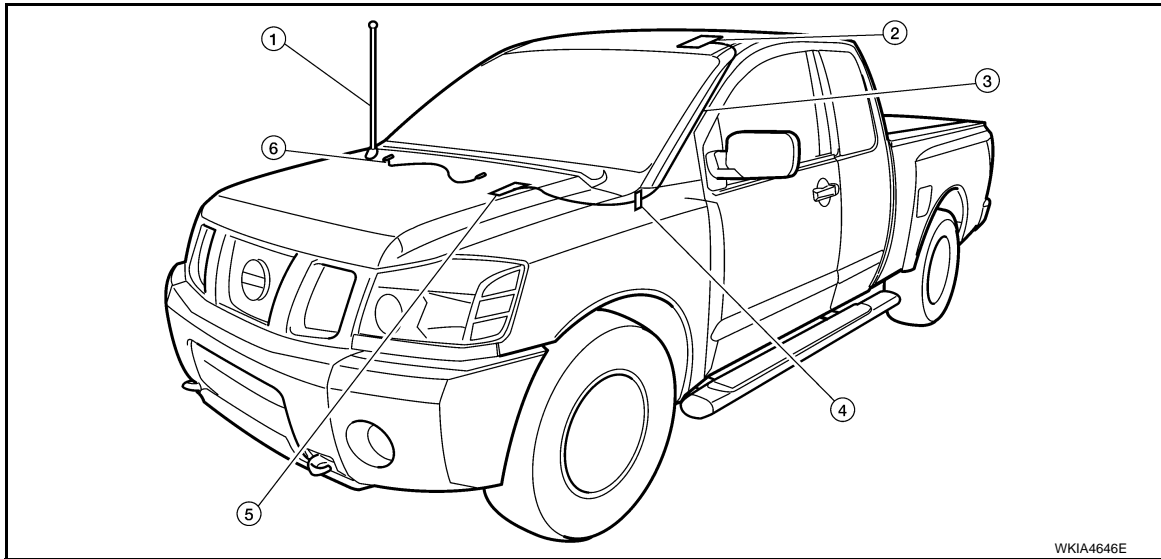

- | | | |
|--------------|--|-----------------------------|
| 1. Antenna | 2. Satellite antenna (if equipped, factory installed) M351 | 3. Satellite antenna feeder |
| 4. M69, M350 | 5. Satellite radio tuner M129 | 6. Main feeder cable |

SATELLITE RADIO ANTENNA

< ON-VEHICLE REPAIR >

[PREMIUM WITH NAVIGATION]

SATELLITE RADIO ANTENNA


Removal and Installation

INFOID:000000005387750

SATELLITE RADIO ANTENNA

Removal

1. Lower the headliner. Refer to [INT-21, "Removal and Installation"](#).
2. Disconnect the satellite radio antenna connector.
3. Remove the satellite radio antenna nut.
4. Remove the satellite radio antenna.

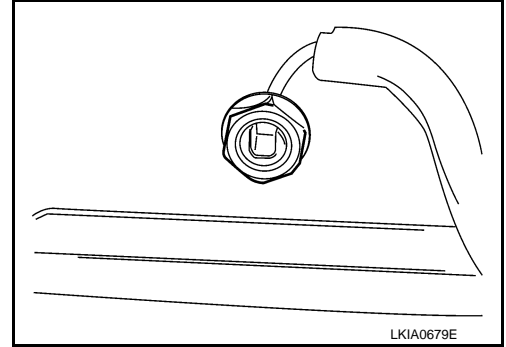

Installation

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

SATELLITE RADIO TUNER


Removal and Installation

INFOID:000000005387751


SATELLITE RADIO TUNER

Removal

1. Remove the accelerator pedal assembly. Refer to [ACC-3. "Removal and Installation"](#).
2. Remove the BCM. Refer to [BCS-53. "Removal and Installation"](#).
3. Disconnect the audio amp. and the satellite radio tuner connectors.
4. Remove the audio amp./satellite radio tuner bracket screws and slide the audio amp./satellite radio tuner bracket down.

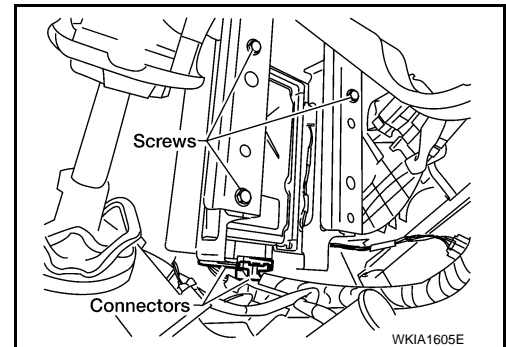

5. Remove the satellite radio tuner screws (A) and remove the satellite radio tuner from the audio amp./satellite radio tuner bracket (1).

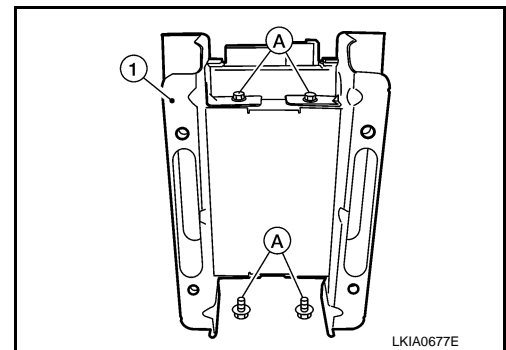

Installation

Installation is in the reverse order of removal.

DVD ENTERTAINMENT SYSTEM


Removal and Installation

INFOID:000000005387752

DVD PLAYER

Removal

1. Disconnect the battery negative terminal.
2. Remove the center console bin. Refer to [IP-18, "Removal and Installation"](#).
3. Remove the DVD player screws.

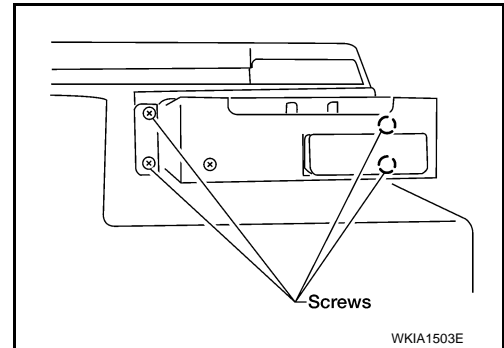

4. Remove the DVD player.


Installation

Installation is in reverse order of removal.


VIDEO MONITOR

Removal

1. Remove the rear roof console assembly. Refer to [INT-21, "Removal and Installation"](#).
2. Disconnect the video monitor connector.
3. Remove the video housing screws.

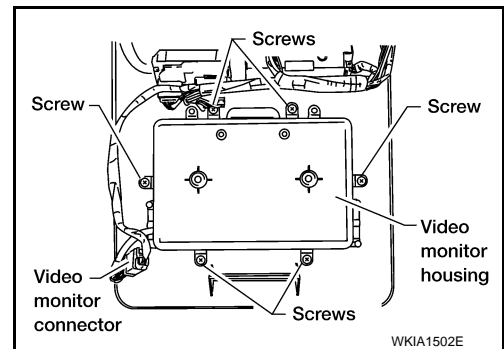

4. Remove the video monitor and housing.
5. Remove the video monitor hinge screws and remove the video monitor.

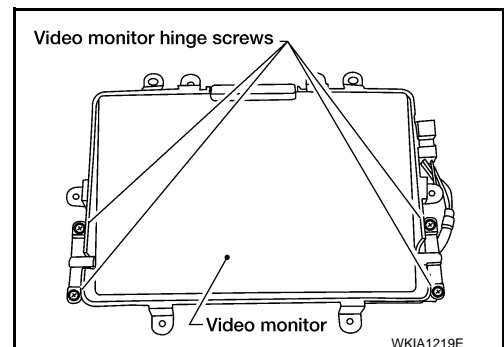

Installation

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M

AV

O
P

MICROPHONE

< ON-VEHICLE REPAIR >

[PREMIUM WITH NAVIGATION]


MICROPHONE

Removal and Installation

INFOID:000000005387753

REMOVAL

1. Remove the front roof console finisher. Refer to [IP-11. "Removal and Installation"](#).
2. Disconnect the Bluetooth microphone connector (A).
3. Detach the Bluetooth microphone (1) from the front roof console finisher and remove the Bluetooth microphone (1).

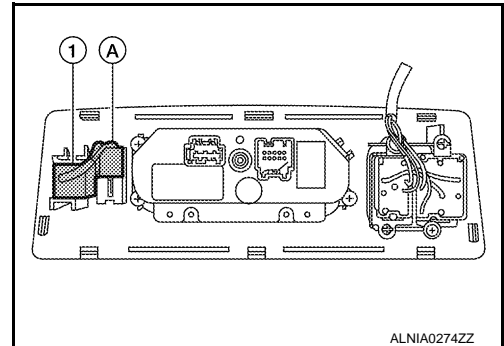

INSTALLATION

Installation is in the reverse order of removal.


TEL ANTENNA

Removal and Installation

INFOID:000000005714018

REMOVAL

1. Disconnect the battery negative terminal.
2. Slide the front passenger seat fully forward.
3. Remove the Bluetooth control unit kick shield screws and remove the Bluetooth control unit kick shield.
4. Remove the Bluetooth antenna screws (A), disconnect the Bluetooth antenna connector (B) and remove the Bluetooth antenna (1).
 - Bluetooth control unit screws (C)
 - Bluetooth control unit (2)
 - ←:Front of vehicle

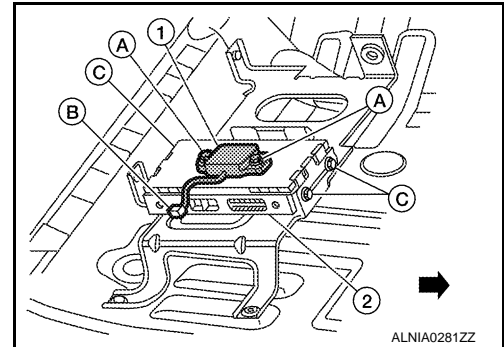

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M

AV

O
P

BLUETOOTH CONTROL UNIT

< ON-VEHICLE REPAIR >

[PREMIUM WITH NAVIGATION]


BLUETOOTH CONTROL UNIT

Removal and Installation

INFOID:000000005714019

REMOVAL

1. Disconnect the negative battery terminal.
2. Slide the front passenger seat fully forward.
3. Remove the Bluetooth control unit kick shield screws and remove the Bluetooth control unit kick shield.
4. Remove the Bluetooth control unit screws (C), disconnect the Bluetooth control unit connectors and remove the Bluetooth control unit (2).
 - Bluetooth antenna (1)
 - Bluetooth antenna screws (A)
 - Bluetooth antenna connector (B)
 - ←:Front of vehicle

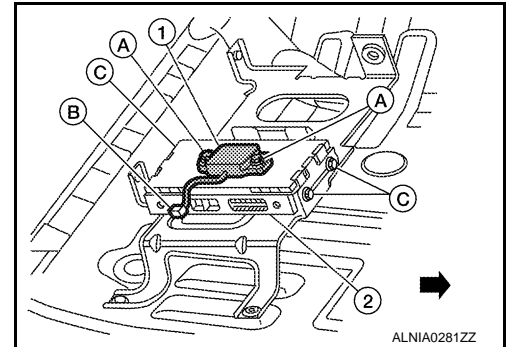

INSTALLATION

Installation is in the reverse order of removal.

GPS ANTENNA


Removal and Installation

INFOID:000000005387754


GPS ANTENNA

Removal

1. Remove the center console. Refer to [IP-18, "Removal and Installation"](#).
2. Remove the cluster lid D. Refer to [IP-13, "Removal and Installation"](#).
3. Remove the defroster grille. Refer to [IP-11, "Removal and Installation"](#).
4. Disconnect the GPS antenna connector.

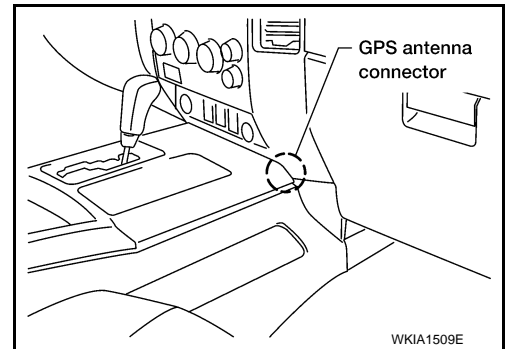

5. Remove the GPS antenna.

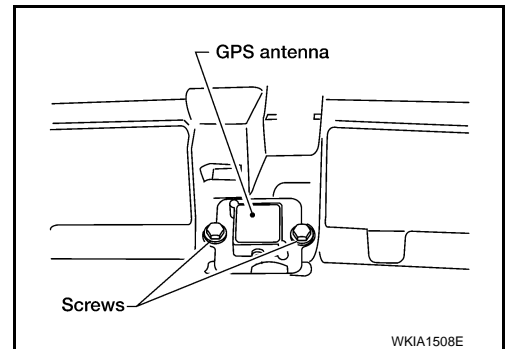

Installation

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

NAVI CONTROL UNIT

Removal and Installation

INFOID:000000005387755


NAVI CONTROL UNIT

Removal


CAUTION:

To avoid damage, eject map DVD-ROM before removing the NAVI control unit.

1. Disconnect the negative battery terminal.
2. Remove the Bluetooth control unit. Refer to [AV-169, "Removal and Installation"](#).
3. Remove the front passenger seat. Refer to [SE-30, "Removal and Installation"](#).
4. Remove the NAVI control unit kick shield screws (A).
 - NAVI control unit (2)
 - NAVI control unit screws (B)
5. Remove the NAVI control unit kick shield (1).

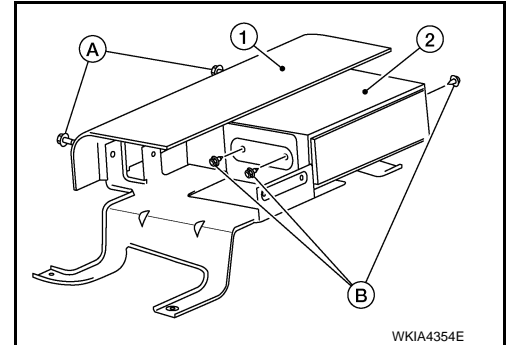

6. Disconnect the NAVI control unit connectors (B).
 - Bluetooth bracket rear bolts (C)
7. Remove the NAVI control unit screws.

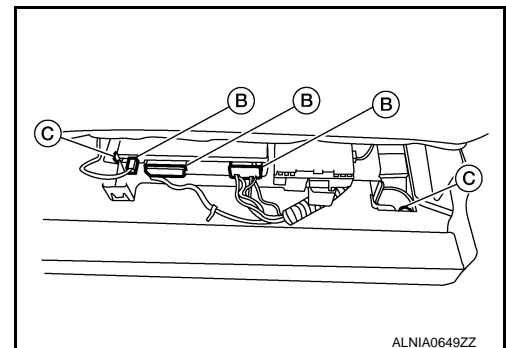

8. Remove the NAVI control unit.

Installation

Installation is in the reverse order of removal.