

A
B
C

EXL

SECTION EXL

EXTERIOR LIGHTING SYSTEM

D
E

CONTENTS

<p>BASIC INSPECTION 4</p> <p>DIAGNOSIS AND REPAIR WORKFLOW 4</p> <p style="padding-left: 20px;">Work Flow4</p> <p>SYSTEM DESCRIPTION 7</p> <p>HEADLAMP 7</p> <p style="padding-left: 20px;">System Diagram7</p> <p style="padding-left: 20px;">System Description7</p> <p style="padding-left: 20px;">Component Parts Location7</p> <p style="padding-left: 20px;">Component Description7</p> <p>AUTO LIGHT SYSTEM 9</p> <p style="padding-left: 20px;">System Diagram9</p> <p style="padding-left: 20px;">System Description9</p> <p style="padding-left: 20px;">Component Parts Location10</p> <p style="padding-left: 20px;">Component Description10</p> <p>DAYTIME RUNNING LIGHT SYSTEM11</p> <p style="padding-left: 20px;">System Diagram11</p> <p style="padding-left: 20px;">System Description11</p> <p style="padding-left: 20px;">Component Parts Location11</p> <p style="padding-left: 20px;">Component Description12</p> <p>FRONT FOG LAMP13</p> <p style="padding-left: 20px;">System Diagram13</p> <p style="padding-left: 20px;">System Description13</p> <p style="padding-left: 20px;">Component Parts Location13</p> <p style="padding-left: 20px;">Component Description13</p> <p>TURN SIGNAL AND HAZARD WARNING LAMPS14</p> <p style="padding-left: 20px;">System Diagram14</p> <p style="padding-left: 20px;">System Description14</p> <p style="padding-left: 20px;">Component Parts Location14</p> <p style="padding-left: 20px;">Component Description15</p> <p>PARKING, LICENSE PLATE AND TAIL LAMPS16</p> <p style="padding-left: 20px;">System Diagram16</p> <p style="padding-left: 20px;">System Description16</p>	<p style="padding-left: 20px;">Component Parts Location16</p> <p style="padding-left: 20px;">Component Description17</p> <p>COMBINATION SWITCH READING SYSTEM18</p> <p style="padding-left: 20px;">System Diagram18</p> <p style="padding-left: 20px;">System Description18</p> <p style="padding-left: 20px;">Component Parts Location21</p> <p>TRAILER TOW22</p> <p style="padding-left: 20px;">System Diagram22</p> <p style="padding-left: 20px;">System Description22</p> <p style="padding-left: 20px;">Component Parts Location23</p> <p style="padding-left: 20px;">Component Description23</p> <p>DIAGNOSIS SYSTEM (BCM)25</p> <p>COMMON ITEM25</p> <p style="padding-left: 20px;">COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)25</p> <p>HEADLAMP25</p> <p style="padding-left: 20px;">HEADLAMP : CONSULT Function (BCM - HEAD LAMP)26</p> <p>FLASHER27</p> <p style="padding-left: 20px;">FLASHER : CONSULT Function (BCM - FLASHER)27</p> <p>COMB SW27</p> <p style="padding-left: 20px;">COMB SW : CONSULT Function (BCM - COMB SW)27</p> <p>BATTERY SAVER28</p> <p style="padding-left: 20px;">BATTERY SAVER : CONSULT Function (BCM - BATTERY SAVER)28</p> <p>DIAGNOSIS SYSTEM (IPDM E/R)29</p> <p style="padding-left: 20px;">Diagnosis Description29</p> <p style="padding-left: 20px;">CONSULT Function (IPDM E/R)31</p> <p>DTC/CIRCUIT DIAGNOSIS33</p>
--	--

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

POWER SUPPLY AND GROUND CIRCUIT	33	Physical Values	63
BCM (BODY CONTROL MODULE)	33	Fail Safe	68
BCM (BODY CONTROL MODULE) : Diagnosis		DTC Inspection Priority Chart	68
Procedure	33	DTC Index	69
IPDM E/R (INTELLIGENT POWER DISTRIBUTION		IPDM E/R (INTELLIGENT POWER DISTRIBUTION	
MODULE ENGINE ROOM)	34	MODULE ENGINE ROOM)	71
IPDM E/R (INTELLIGENT POWER DISTRIBUTION		Reference Value	71
MODULE ENGINE ROOM) : Diagnosis Pro-		Terminal Layout	72
cedure	34	Physical Values	72
HEADLAMP (HI) CIRCUIT	36	Fail Safe	75
Description	36	DTC Index	76
Component Function Check	36	WIRING DIAGRAM	77
Diagnosis Procedure - Without Daytime Light Sys-		HEADLAMP	77
tem	36	Wiring Diagram	77
Diagnosis Procedure - With Daytime Light System		AUTO LIGHT SYSTEM	82
... 37	37	Wiring Diagram	82
Component Inspection	39	DAYTIME LIGHT SYSTEM	89
HEADLAMP (LO) CIRCUIT	41	Wiring Diagram	89
Description	41	FRONT FOG LAMP SYSTEM	95
Component Function Check	41	Wiring Diagram	95
Diagnosis Procedure - Without Daytime Light Sys-		TURN SIGNAL AND HAZARD WARNING	
tem	41	LAMP SYSTEM	99
Diagnosis Procedure - With Daytime Light System		Wiring Diagram	99
... 42	42	PARKING, LICENSE PLATE AND TAIL	
FRONT FOG LAMP CIRCUIT	44	LAMPS SYSTEM	107
Description	44	Wiring Diagram	107
Component Function Check	44	STOP LAMP	112
Diagnosis Procedure	44	Wiring Diagram	112
PARKING LAMP CIRCUIT	46	BACK-UP LAMP	116
Description	46	Wiring Diagram	116
Component Function Check	46	TRAILER TOW	120
Diagnosis Procedure - Without Daytime Light Sys-		Wiring Diagram	120
tem	46	SYMPTOM DIAGNOSIS	127
Diagnosis Procedure - With Daytime Light System		EXTERIOR LIGHTING SYSTEM SYMPTOMS.	127
... 49	49	Symptom Table	127
TURN SIGNAL LAMP CIRCUIT	52	NORMAL OPERATING CONDITION	129
Description	52	Description	129
Component Function Check	52	BOTH SIDE HEADLAMPS DO NOT SWITCH	
Diagnosis Procedure - Without Daytime Light Sys-		TO HIGH BEAM	130
tem	52	Description	130
Diagnosis Procedure - With Daytime Light System		Diagnosis Procedure	130
... 55	55	BOTH SIDE HEADLAMPS (LO) ARE NOT	
OPTICAL SENSOR	58	TURNED ON	131
Description	58	Description	131
Component Function Check	58	Diagnosis Procedure	131
Diagnosis Procedure	58		
ECU DIAGNOSIS INFORMATION	60		
BCM (BODY CONTROL MODULE)	60		
Reference Value	60		
Terminal Layout	63		

PARKING, LICENSE PLATE AND TAIL LAMPS ARE NOT TURNED ON	132	Disassembly and Assembly	140	A
Description	132	AUTO LIGHT SYSTEM	141	
Diagnosis Procedure	132	Removal and Installation	141	
BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON	133	FRONT FOG LAMP	142	B
Description	133	Bulb Replacement	142	
Diagnosis Procedure	133	Removal and Installation	142	
PRECAUTION	134	LIGHTING & TURN SIGNAL SWITCH	143	C
PRECAUTIONS	134	Removal and Installation	143	
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	134	HAZARD SWITCH	144	D
Precaution for Work	134	Removal and Installation	144	
PREPARATION	135	LICENSE PLATE LAMP	145	E
PREPARATION	135	Bulb Replacement	145	
Special Service Tool	135	Removal and Installation	145	
REMOVAL AND INSTALLATION	136	PUDDLE LAMP	146	F
ADJUSTMENT AND INSPECTION	136	Removal and Installation	146	
HEADLAMP	136	Bulb Replacement	146	
HEADLAMP : Aiming Adjustment	136	HIGH-MOUNTED STOP LAMP	148	G
HEADLAMP : Headlamp Aiming	136	Bulb Replacement	148	
FRONT FOG LAMP	137	Removal and Installation	148	
FRONT FOG LAMP : Aiming Adjustment	137	REAR COMBINATION LAMP	149	H
HEADLAMP	139	Bulb Replacement	149	
Bulb Replacement	139	Removal and Installation	149	I
Removal and Installation	139	SERVICE DATA AND SPECIFICATIONS (SDS)	150	J
		SERVICE DATA AND SPECIFICATIONS (SDS)	150	
		Bulb Specifications	150	K

EXL

M
N
O
P

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000009878468

OVERALL SEQUENCE

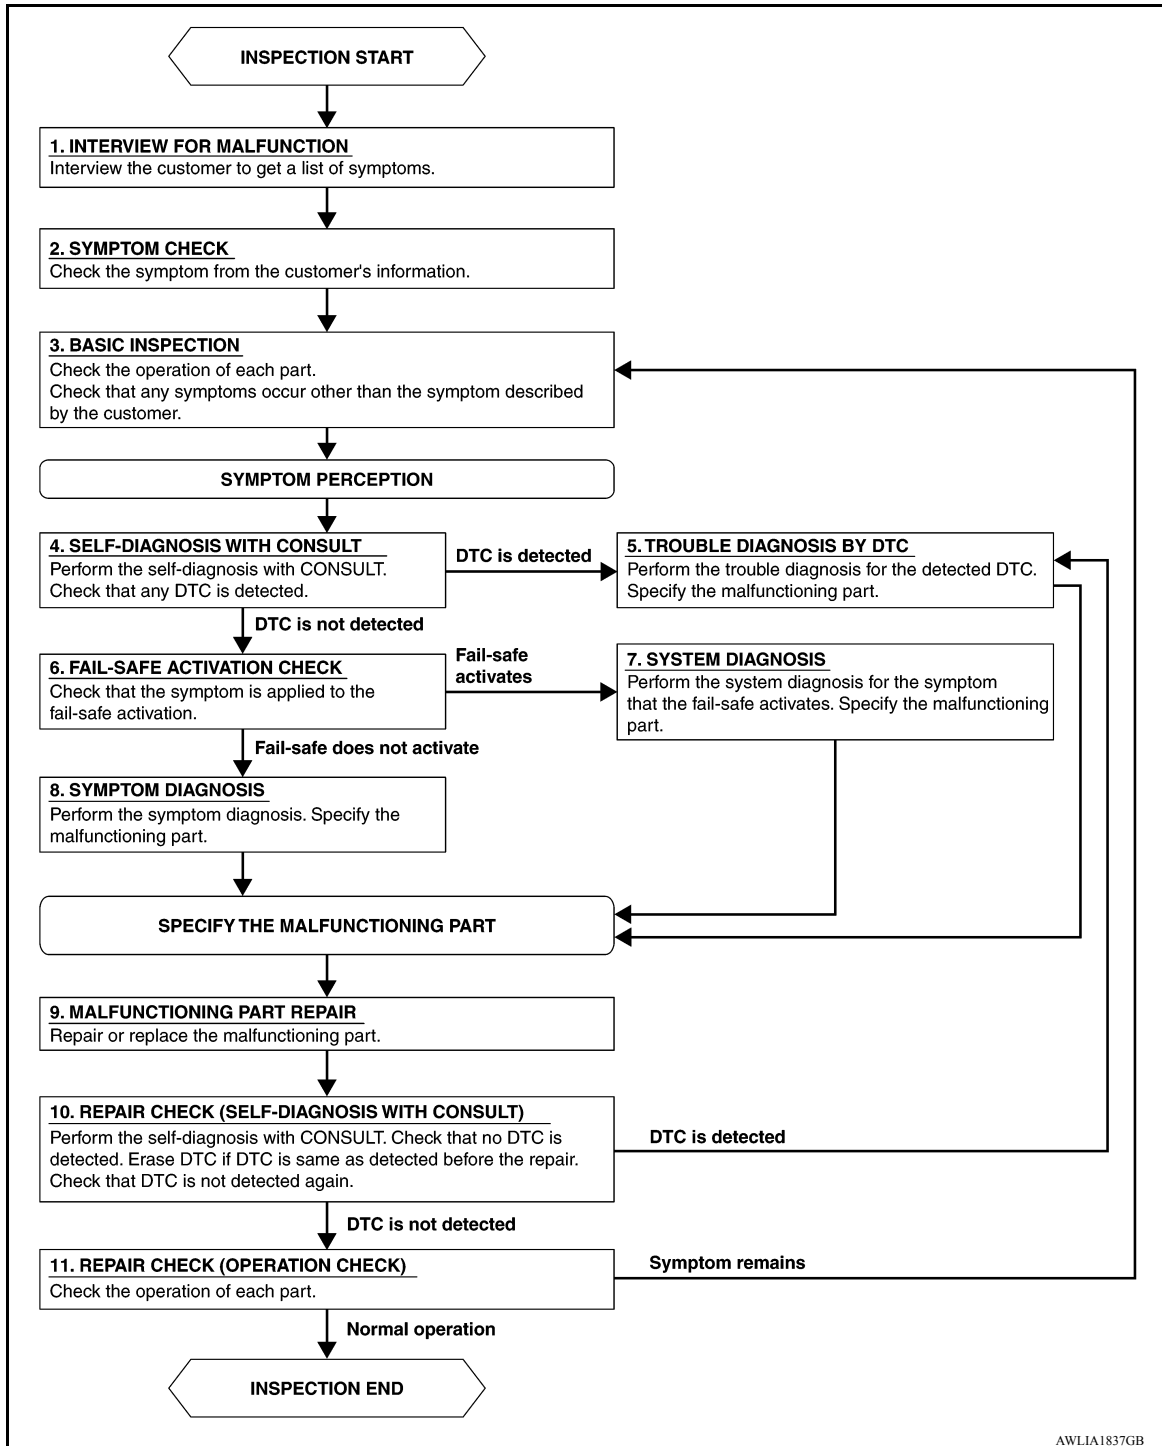

AWLIA1837GB

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

DETAILED FLOW

1. INTERVIEW FOR MALFUNCTION

Find out what the customer's concerns are.

>> GO TO 2.

2. SYMPTOM CHECK

Verify the symptom from the customer's information.

>> GO TO 3.

3. BASIC INSPECTION

Check the operation of each part. Check that any concerns occur other than those mentioned in the customer interview.

>> GO TO 4.

4. SELF-DIAGNOSIS WITH CONSULT

Perform the self diagnosis with CONSULT. Check that any DTC is detected.

Is any DTC detected?

YES >> GO TO 5.

NO >> GO TO 6.

5. TROUBLE DIAGNOSIS BY DTC

Perform the trouble diagnosis for the detected DTC. Specify the malfunctioning part.

>> GO TO 9.

6. FAIL-SAFE ACTIVATION CHECK

Determine if the customer's concern is related to fail-safe activation.

Does the fail-safe activate?

YES >> GO TO 7.

NO >> GO TO 8.

7. SYSTEM DIAGNOSIS

Perform the system diagnosis for the system in which the fail-safe activates. Specify the malfunctioning part.

>> GO TO 9.

8. SYMPTOM DIAGNOSIS

Perform the symptom diagnosis. Specify the malfunctioning part.

>> GO TO 9.

9. MALFUNCTION PART REPAIR

Repair or replace the malfunctioning part.

>> GO TO 10.

10. REPAIR CHECK (SELF-DIAGNOSIS WITH CONSULT)

Perform the self diagnosis with CONSULT. Verify that no DTCs are detected. Erase all DTCs detected prior to the repair. Verify that DTC is not detected again.

Is any DTC detected?

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

YES >> GO TO 5.

NO >> GO TO 11.

11. REPAIR CHECK (OPERATION CHECK)

Check the operation of each part.

Does it operate normally?

YES >> Inspection End.

NO >> GO TO 3.


HEADLAMP

< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

HEADLAMP

System Diagram

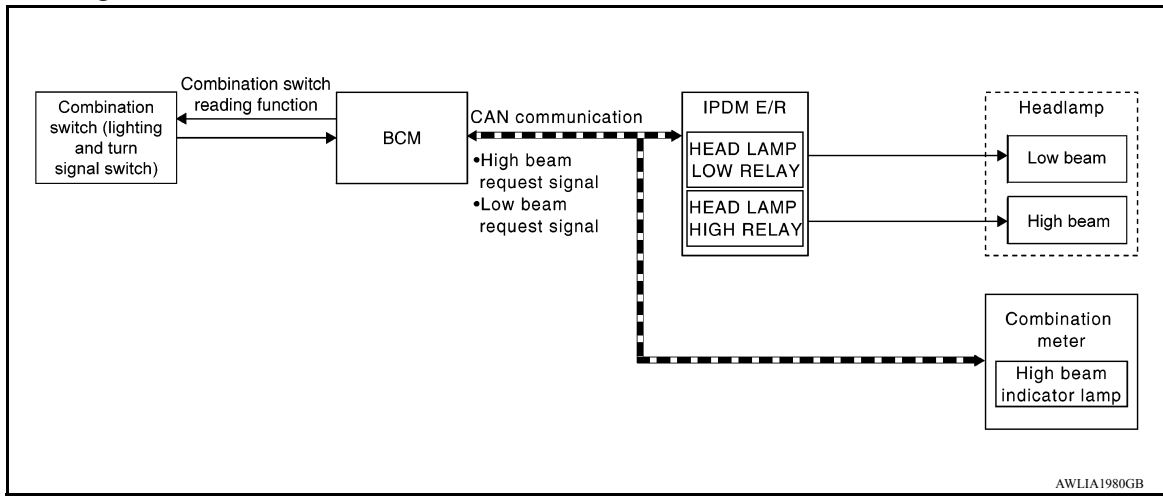


System Description

INFOID:000000009878470

Control of the headlamp system operation is dependent upon the position of the combination switch (lighting and turn signal switch). When the combination switch (lighting and turn signal switch) is placed in the 2nd position, the BCM (body control module) receives input requesting the headlamps and park lamps to illuminate. This input is communicated to the IPDM E/R (intelligent power distribution module engine room) via the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the headlamp high and headlamp low relay coils. When energized, these relays direct power to the respective headlamps, which then illuminate.

Component Parts Location

INFOID:000000009878471

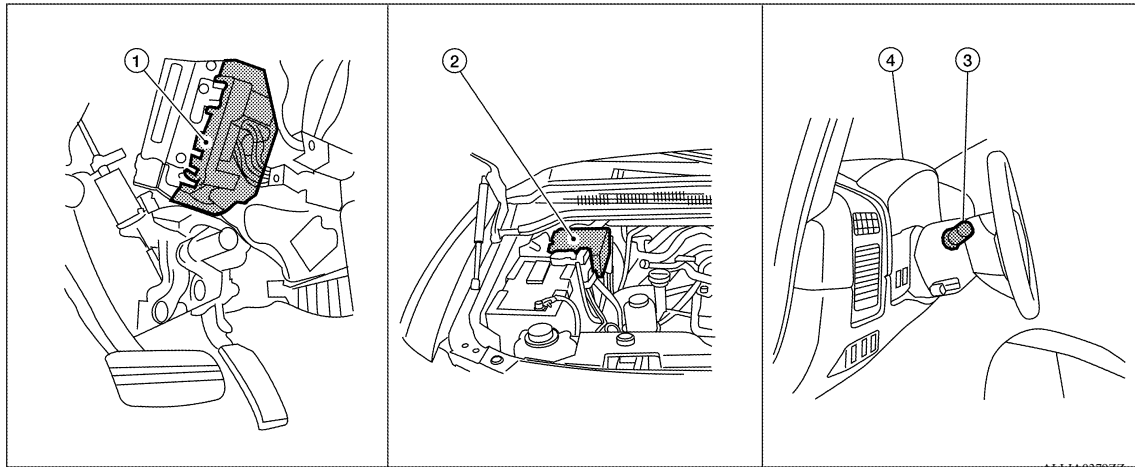

1. BCM M18, M20 (view with instrument panel removed)
2. IPDM E/R E122, E123, E124
3. Combination switch (lighting and turn-signal switch) M28
4. Combination meter M24

Component Description

INFOID:000000009878472

LOW BEAM OPERATION

HEADLAMP

< SYSTEM DESCRIPTION >

When the combination switch (lighting and turn signal switch) is in 2ND position, the BCM receives input requesting the headlamps to illuminate. This input is communicated to the IPDM E/R via the CAN communication lines. The CPU of the IPDM E/R controls the headlamp low relay coil which supplies power to the low beam headlamps.

HIGH BEAM OPERATION/FLASH-TO-PASS OPERATION

With the combination switch (lighting and turn signal switch) in the 2ND position and placed in HIGH position, the BCM receives input requesting the headlamp high beams to illuminate. The flash to pass feature can be used any time and also sends a signal to the BCM. This input is communicated to the IPDM E/R via the CAN communication lines. The CPU of the combination meter controls the ON/OFF status of the HIGH BEAM indicator. The CPU of the IPDM E/R controls the headlamp high relay coil which supplies power to the high beam headlamps.

The combination meter receives a high beam request signal (ON) via the CAN communication lines and turns the high beam indicator lamp ON.

EXTERIOR LAMP BATTERY SAVER CONTROL

With the combination switch (lighting and turn signal switch) in the 2ND position and the ignition switch is turned from ON or ACC to OFF, the battery saver feature is activated.

Under this condition, the headlamps remain illuminated for 45 seconds unless the lighting switch position is changed. If the lighting switch position is changed, then the headlamps are turned off.


This setting can be changed by CONSULT. Refer to [BCS-23, "BATTERY SAVER : CONSULT Function \(BCM - BATTERY SAVER\)"](#).

AUTO LIGHT SYSTEM

< SYSTEM DESCRIPTION >

AUTO LIGHT SYSTEM

System Diagram

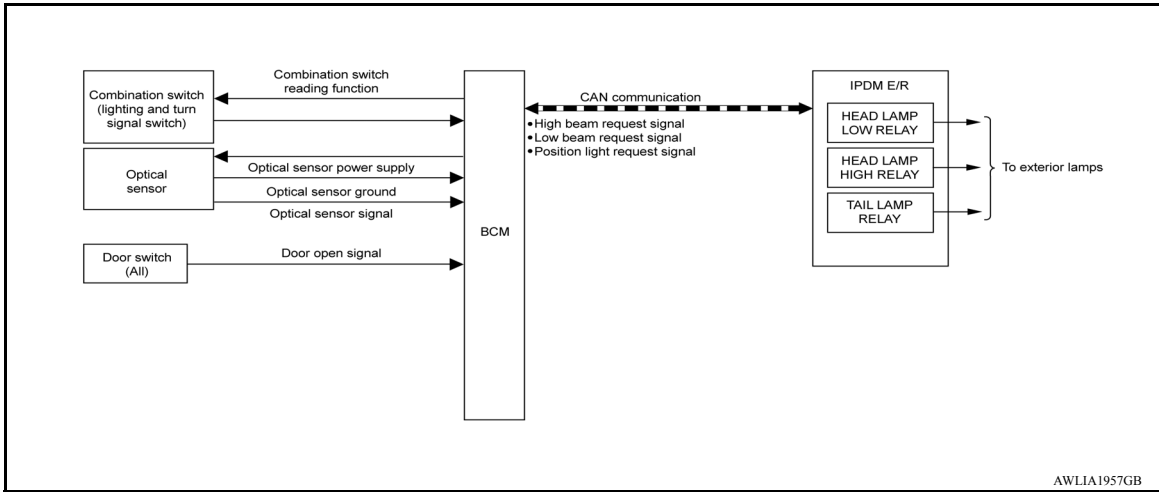

System Description

INFOID:000000009878474

- BCM (Body Control Module) controls auto light operation according to signals from optical sensor, combination switch (lighting and turn signal switch) and ignition switch.
- IPDM E/R (Intelligent Power Distribution Module Engine Room) operates parking, license plate, tail and headlamps according to CAN communication signals from BCM.
- Optical sensor detects ambient brightness of 800 to 2,500 lux. And optical sensor converts light (lux) to voltage, then sends the optical sensor signal to BCM.

OUTLINE

The auto light control system has an optical sensor that detects outside brightness.

When the combination switch (lighting and turn signal switch) is in AUTO position, it automatically turns ON/OFF the parking, license plate, tail and headlamps in accordance with the ambient light. Sensitivity can be adjusted in four steps. For the details of the setting, Refer to [BCS-19, "HEADLAMP : CONSULT Function \(BCM - HEAD LAMP\)"](#).


A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

AUTO LIGHT SYSTEM

< SYSTEM DESCRIPTION >

Component Parts Location

INFOID:000000009878475

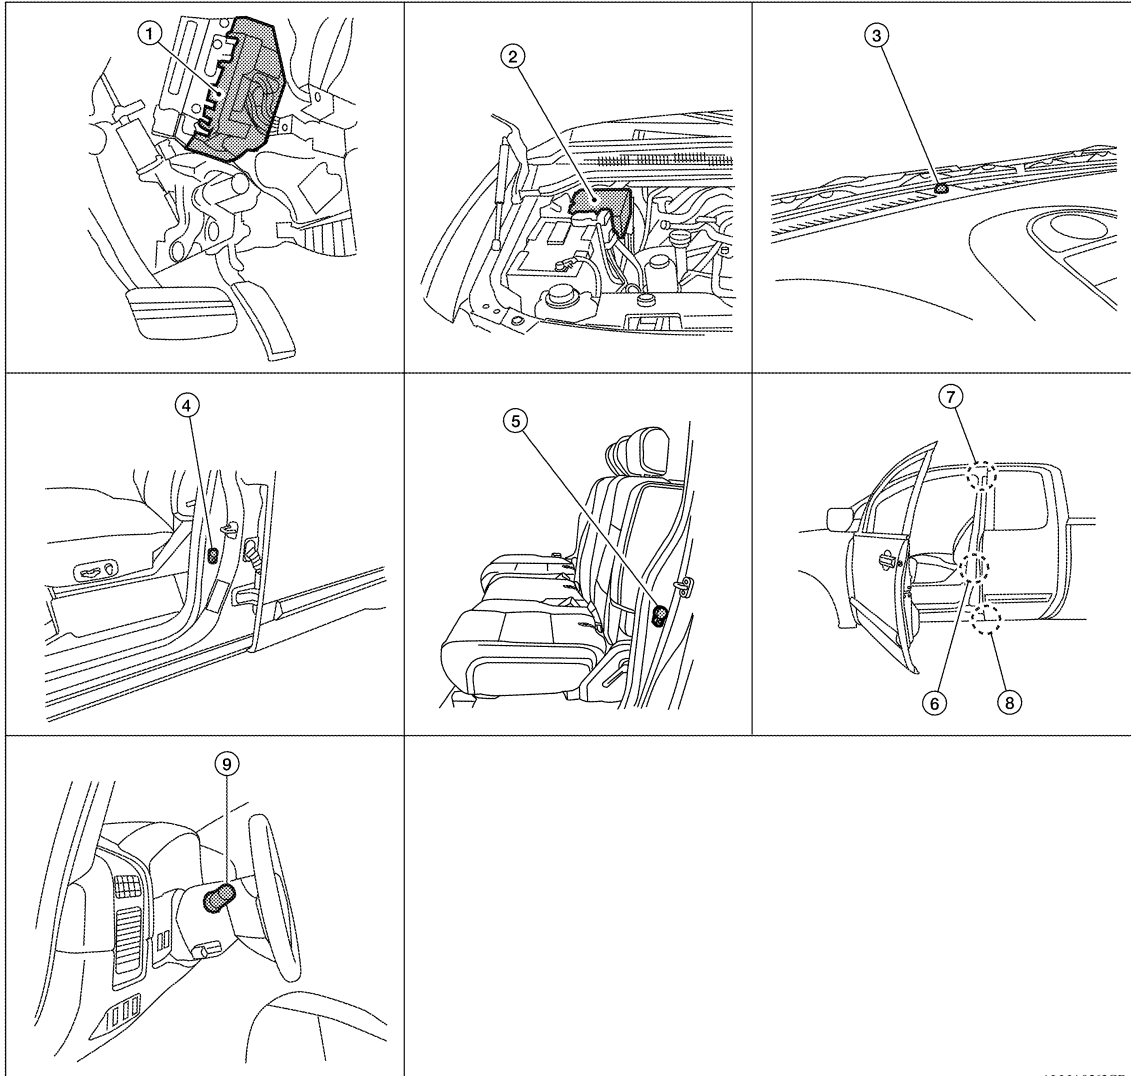

ALLIA0563GB

- | | | |
|---|---|---|
| 1. BCM M18, M19, M20 (view with instrument panel removed) | 2. IPDM E/R E122, E123, E124 | 3. Optical sensor M302 |
| 4. Front door switch (crew cab)
LH B8
RH B108 | 5. Rear door switch (crew cab)
LH B18
RH B116 | 6. Front door switch (king cab)
LH B8
RH B108 |
| 7. Rear door switch upper (king cab)
LH B73
RH B156 | 8. Rear door switch lower (king cab)
LH B74
RH B157 | 9. Combination switch (lighting and turn signal switch) M28 |

Component Description

INFOID:000000009878476

AUTO LIGHT OPERATION

The auto light system operates the low beam and high beam headlamps, parking lamps, tail lamps and license plate lamps. The BCM monitors the combination switch (lighting and turn signal switch) position as a part of the BCM combination switch reading function. When the combination switch (lighting and turn signal switch) is in the AUTO position, the BCM automatically turns the lamps ON/OFF according to ambient light brightness.

NOTE:


Timing for when lamps turn ON/OFF can be changed by the CONSULT. Refer to [BCS-19. "HEADLAMP : CONSULT Function \(BCM - HEAD LAMP\)".](#)

DAYTIME RUNNING LIGHT SYSTEM

< SYSTEM DESCRIPTION >

DAYTIME RUNNING LIGHT SYSTEM

System Diagram

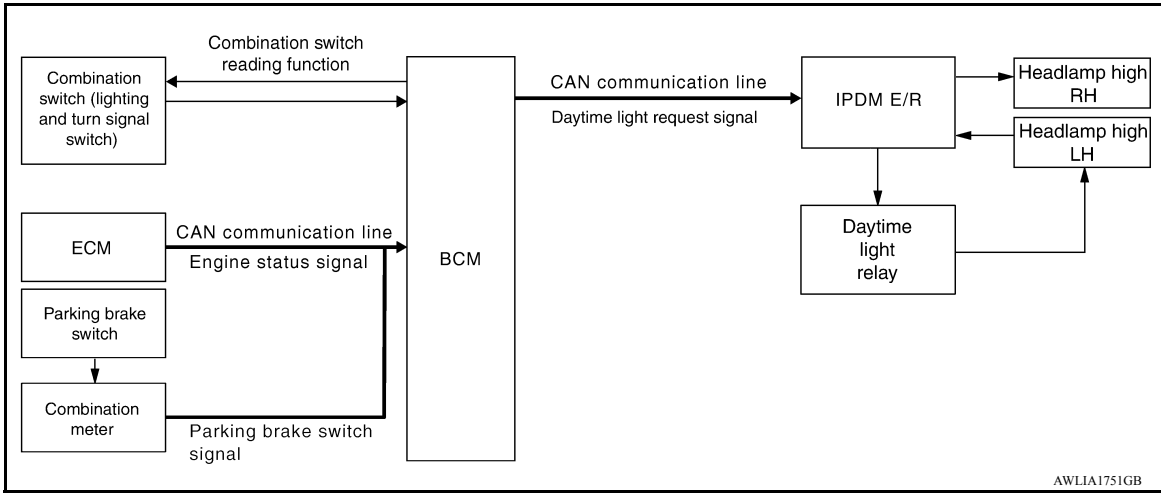


System Description

INFOID:000000009878478

The headlamp system for Canada vehicles is equipped with a daytime light relay that activates the high beam headlamps at approximately half illumination whenever the engine is operating. If the parking brake is applied before the engine is started the daytime lights will not be illuminated. The daytime lights will illuminate once the parking brake is released. Thereafter, the daytime lights will continue to operate when the parking brake is applied.

Component Parts Location

INFOID:000000009878479

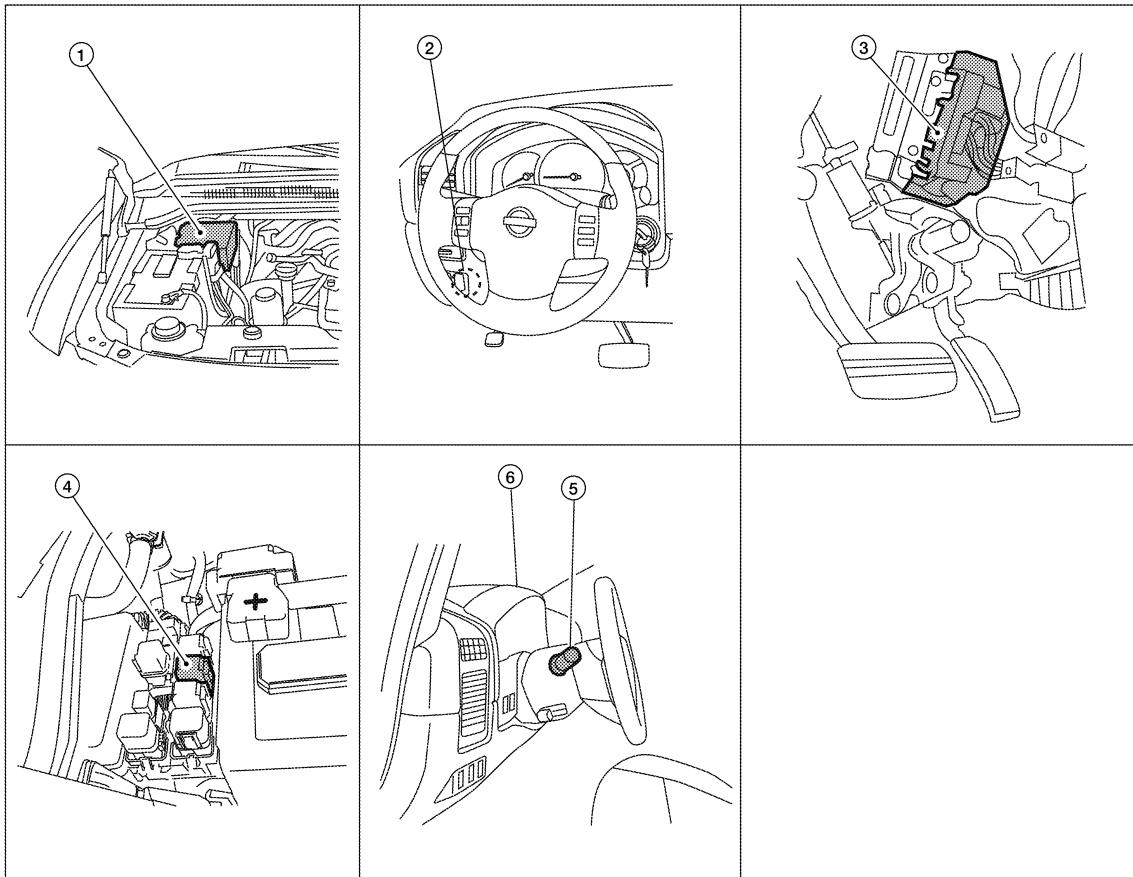

ALLIA0380ZZ

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

DAYTIME RUNNING LIGHT SYSTEM

< SYSTEM DESCRIPTION >

- | | | |
|-------------------------------------|---|--|
| 1. IPDM E/R E119, E122, E123, E124 | 2. Parking brake switch M11 | 3. BCM M18, M20 (view with instrument panel removed) |
| 4. Daytime running light relay E103 | 5. Combination switch (lighting and turn signal switch) M28 | 6. Combination meter M24 |

Component Description

INFOID:000000009878480

After starting the engine with the parking brake released and the combination switch (lighting and turn signal switch) in the OFF or 1ST position, the headlamp high beam automatically turns on at a reduced intensity. With the combination switch (lighting and turn signal switch) in the 2nd position or with autolamps ON, the headlamps function the same as conventional light systems.

OPERATION


The BCM monitors inputs from the parking brake switch and the combination switch (lighting and turn signal switch) to determine when to activate the daytime light system. The BCM sends a daytime light request to the IPDM E/R via the CAN communication lines. The IPDM E/R grounds the daytime light relay which in turn, provides power to the ground side of the LH high beam lamp. Power flows backward through the LH high beam lamp to the IPDM E/R, through the high beam fuses, through the RH high beam lamp circuit to the RH high beam lamp and on to ground. The high beam lamps are wired in series which causes them to illuminate at a reduced intensity.

FRONT FOG LAMP

< SYSTEM DESCRIPTION >

FRONT FOG LAMP

System Diagram

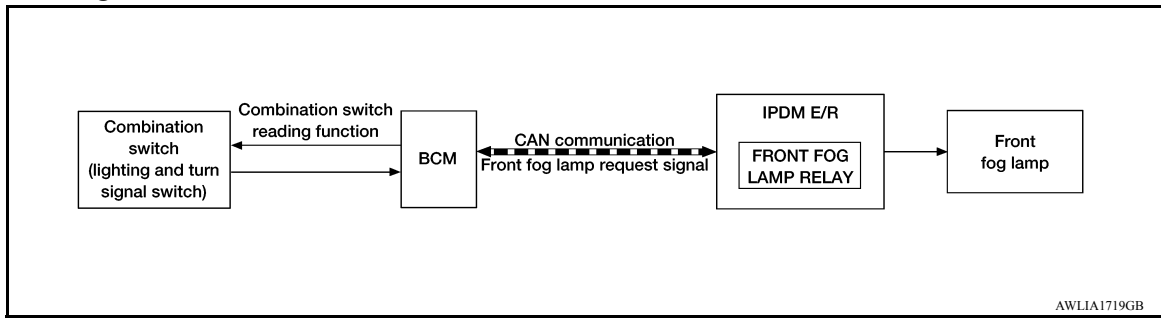


System Description

INFOID:000000009878482

The front fog lamps are activated with the combination switch (lighting and turn signal switch). The combination switch (lighting and turn signal switch) signal to the BCM is monitored with the BCM combination switch reading function. When the fog lamps are turned ON with the combination switch (lighting and turn signal switch), the BCM sends a front fog lamp request signal via CAN communication lines to the IPDM E/R. The IPDM E/R grounds the front fog lamp relay coil to activate the front fog lamps.

Component Parts Location

INFOID:000000009878483

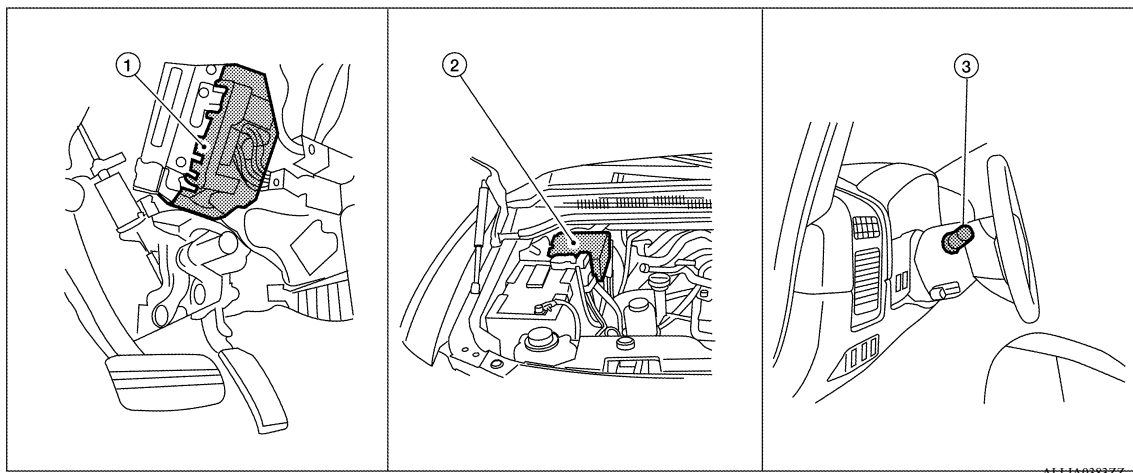

1. BCM M18, M20 (view with instrument panel removed)
2. IPDM E/R E122, E123, E124
3. Combination switch (lighting and turn signal switch) M28

Component Description

INFOID:000000009878484

FRONT FOG LAMP OPERATION


When the combination switch (lighting and turn signal switch) is in front fog lamp ON position and also in 1ST or 2ND position or AUTO position (headlamp is ON), the BCM detects FR FOG ON and the HEAD LAMP1, 2 ON or the AUTO LIGHT ON. The BCM sends a front fog lamp request ON signal via the CAN communication lines to the IPDM E/R. The IPDM E/R then turns ON the front fog lamp relay sending power to the front fog lamps.

TURN SIGNAL AND HAZARD WARNING LAMPS

< SYSTEM DESCRIPTION >

TURN SIGNAL AND HAZARD WARNING LAMPS

System Diagram

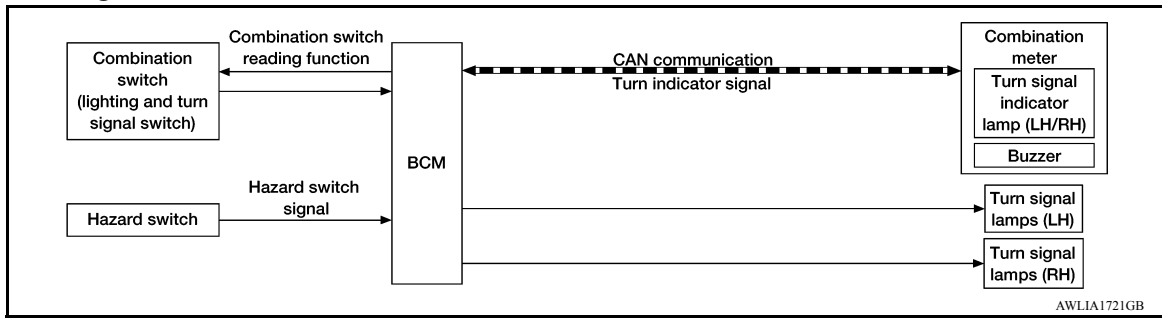

System Description

INFOID:000000009878486

TURN SIGNAL OPERATION

When the combination switch (lighting and turn signal switch) is in LH or RH position with the ignition switch in ON position, the BCM detects the TURN RH or TURN LH ON request. The BCM outputs the flasher signal to the respective turn signal lamp. The BCM also sends a turn indicator signal ON request via the CAN communication lines to the combination meter. The combination meter then activates the appropriate turn signal indicator and audible buzzer.

HAZARD LAMP OPERATION

When the hazard switch is in ON position, the BCM detects the hazard switch signal ON. The BCM outputs the flasher signal (right and left). The BCM sends a hazard indicator signal ON request via the CAN communication lines to the combination meter. The combination meter then activates the hazard indicator and audible buzzer.


REMOTE KEYLESS ENTRY OPERATION

The remote keyless entry receiver transmits a hazard request signal to the BCM, then BCM controls hazard lamps.

Refer to [DLK-13. "REMOTE KEYLESS ENTRY : System Diagram"](#).

Component Parts Location

INFOID:000000009878487

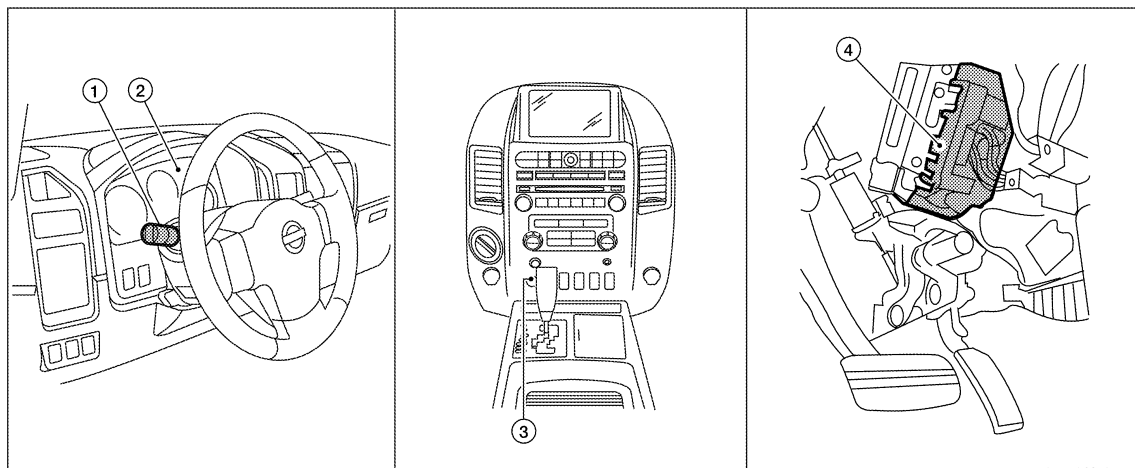

1. Combination switch (lighting and turn signal switch) M28
2. Combination meter M24
3. Hazard switch M55 (3 control dial system w/o auto A/C) or M47 (2 control dial system or auto A/C)
4. BCM M18, M20 (view with instrument panel removed)

TURN SIGNAL AND HAZARD WARNING LAMPS

< SYSTEM DESCRIPTION >

Component Description

INFOID:000000009878488

Part name	Description
BCM	Controls turn signal and hazard flasher operation.
Combination switch (lighting and turn signal switch)	Lighting and turn signal switch requests are output to the BCM.
Hazard switch	Hazard flasher request signal is output to the BCM.
Combination meter	Outputs turn and hazard indicator as requested by the BCM.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P


PARKING, LICENSE PLATE AND TAIL LAMPS

< SYSTEM DESCRIPTION >

PARKING, LICENSE PLATE AND TAIL LAMPS

System Diagram

INFOID:000000009878489

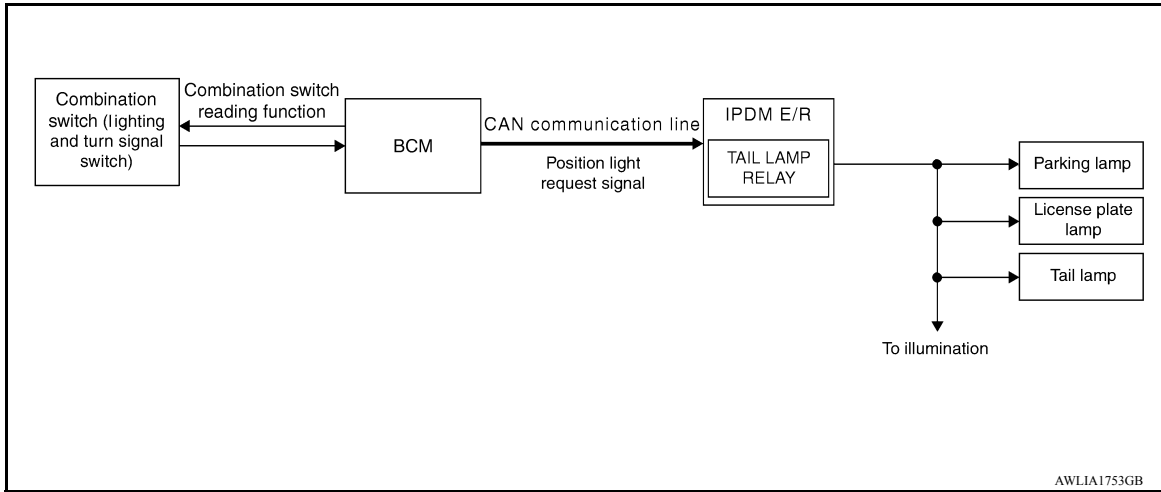

AWLIA1753GB

System Description

INFOID:000000009878490

PARKING, LICENCE PLATE AND TAIL LAMPS OPERATION

When the combination switch (lighting and turn signal switch) is in 1ST position, BCM detects the LIGHTING SWITCH 1ST POSITION ON. The BCM sends a parking light ON request via the CAN communication lines to the IPDM E/R. The IPDM E/R then activates the tail lamp relay which sends power to the parking and instrument illumination circuits.

EXTERIOR LAMP BATTERY SAVER CONTROL


With the combination switch (lighting and turn signal switch) in the 2nd position and the ignition switch is turned from ON or ACC to OFF, the battery saver feature is activated.

Under this condition, the headlamps remain illuminated for 45 seconds unless the combination switch (lighting and turn signal switch) position is changed. If the combination switch (lighting and turn signal switch) position is changed, then the headlamps are turned off.

This setting can be changed by CONSULT. Refer to [BCS-23. "BATTERY SAVER : CONSULT Function \(BCM - BATTERY SAVER\)"](#).

Component Parts Location

INFOID:000000009878491

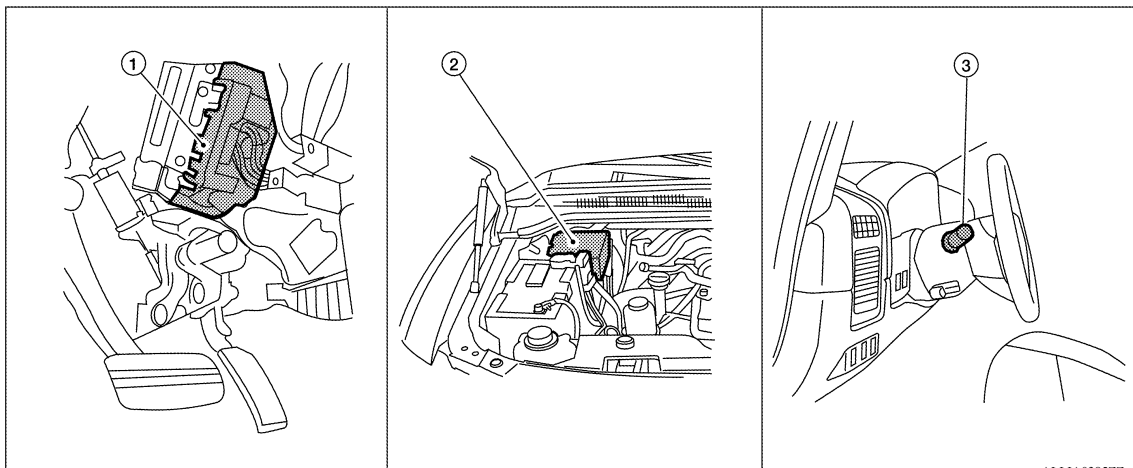

ALLIA0385ZZ

1. BCM M18, M20 (view with instrument panel removed) 2. IPDM E/R E122, E124

3. Combination switch (lighting and turn signal switch) M28

PARKING, LICENSE PLATE AND TAIL LAMPS

< SYSTEM DESCRIPTION >

Component Description

INFOID:000000009878492

Part name	Description
BCM	<ul style="list-style-type: none">• Receives lighting switch requests via BCM combination switch reading function.• Sends parking light request signal to the IPDM E/R.
IPDM E/R	Activates the tail lamp relay upon request of the BCM.
Combination switch (lighting and turn signal switch)	Outputs lighting requests to the BCM.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P


COMBINATION SWITCH READING SYSTEM

< SYSTEM DESCRIPTION >

COMBINATION SWITCH READING SYSTEM

System Diagram

INFOID:000000010619776

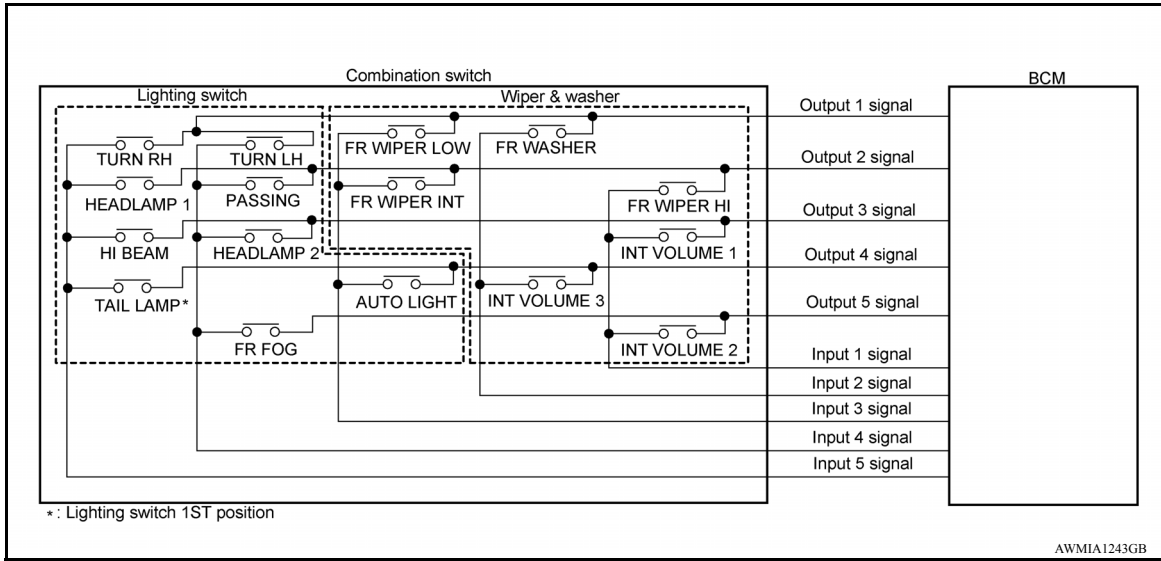

System Description


INFOID:000000010619781

OUTLINE

- BCM reads the status of the combination switch (light, turn signal, wiper and washer) and recognizes the status of each switch.
- BCM has a combination of 5 output terminals (OUTPUT 1 - 5) and 5 input terminals (INPUT 1 - 5) and reads a maximum of 20 switch states.

COMBINATION SWITCH MATRIX

Combination switch circuit

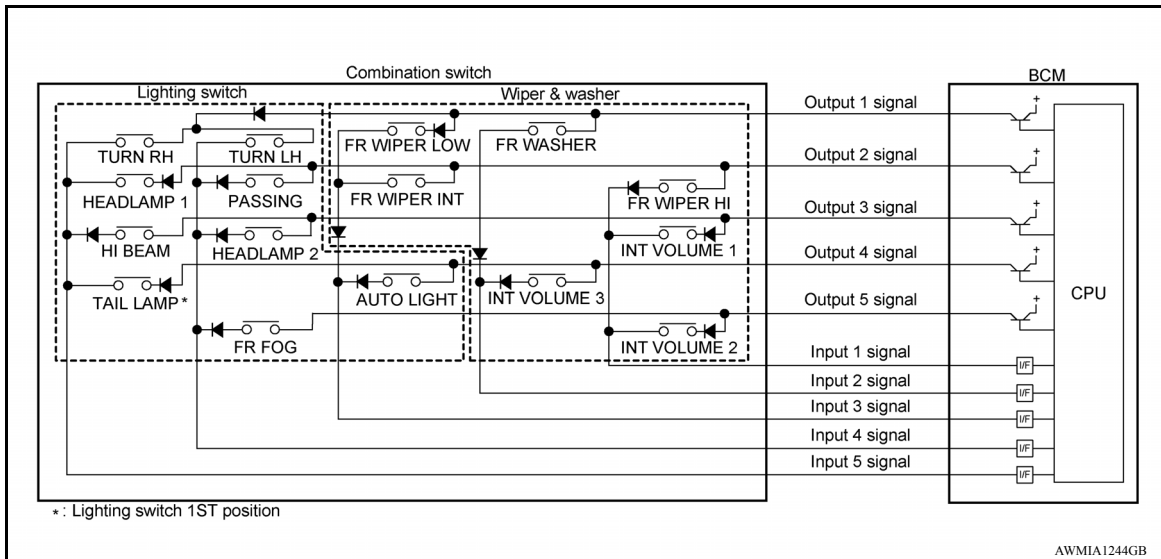

Combination switch INPUT-OUTPUT system list

System	INPUT 1	INPUT 2	INPUT 3	INPUT 4	INPUT 5
OUTPUT 1	—	FR WASHER	FR WIPER LOW	TURN LH	TURN RH
OUTPUT 2	FR WIPER HI	—	FR WIPER INT	PASSING	HEADLAMP 1
OUTPUT 3	INT VOLUME 1	—	—	HEADLAMP 2	HI BEAM

COMBINATION SWITCH READING SYSTEM


< SYSTEM DESCRIPTION >

System	INPUT 1	INPUT 2	INPUT 3	INPUT 4	INPUT 5
OUTPUT 4	—	INT VOLUME 3	AUTO LIGHT	—	TAIL LAMP
OUTPUT 5	INT VOLUME 2	—	—	FR FOG	—

COMBINATION SWITCH READING FUNCTION


Description

- BCM reads the status of the combination switch at 10 ms intervals normally.

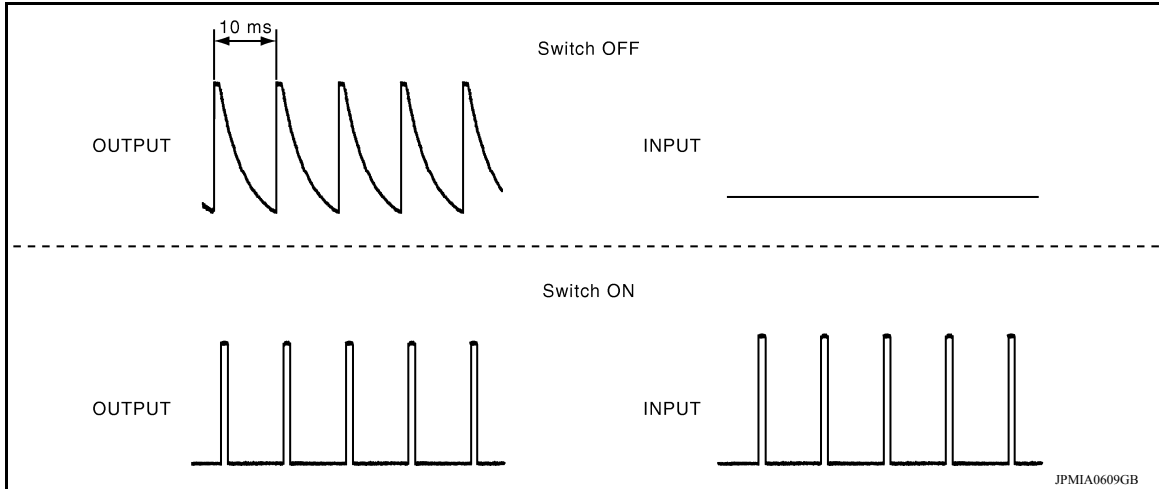

NOTE:

- BCM reads the status of the combination switch at 60 ms intervals when BCM is controlled at low power consumption control mode.
- BCM operates as follows and judges the status of the combination switch.
 - It operates the transistor on OUTPUT side in the following order: OUTPUT 1 → 2 → 3 → 4 → 5, and outputs voltage waveform.
 - The voltage waveform of OUTPUT corresponding to the formed circuit is input into the interface on INPUT side if any (1 or more) switches are ON.
 - It reads this change of the voltage as the status signal of the combination switch.

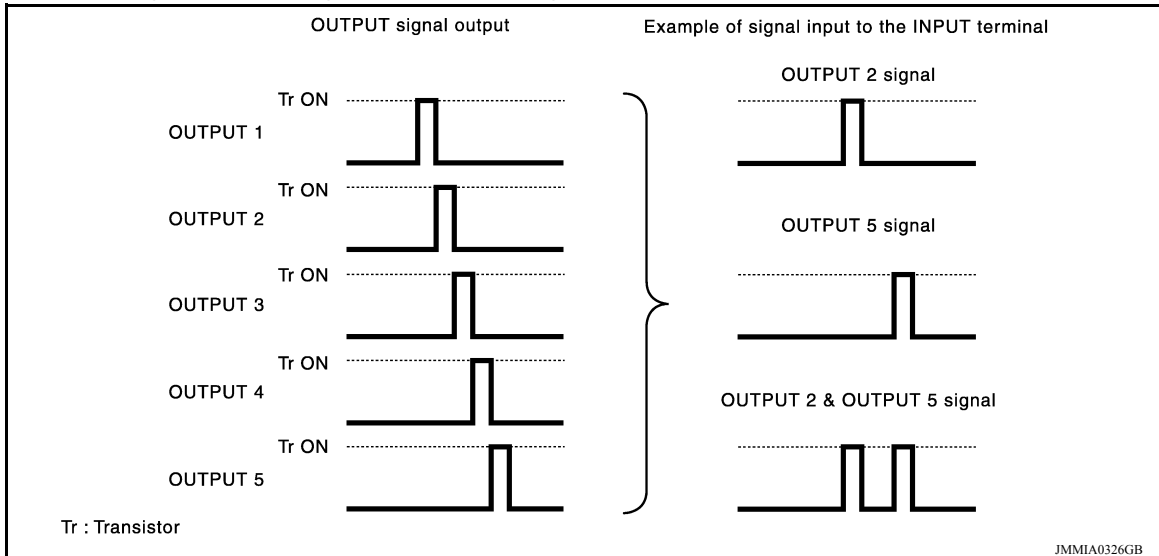

Operation Example


In the following operation example, the combination of the status signals of the combination switch is replaced as follows: INPUT 1 - 5 to "1 - 5" and OUTPUT 1 - 5 to "A - E".

Example 1: When a switch (TAIL LAMP) is turned ON

COMBINATION SWITCH READING SYSTEM

< SYSTEM DESCRIPTION >


- The circuit between OUTPUT 4 and INPUT 5 is formed when the TAIL LAMP switch is turned ON.

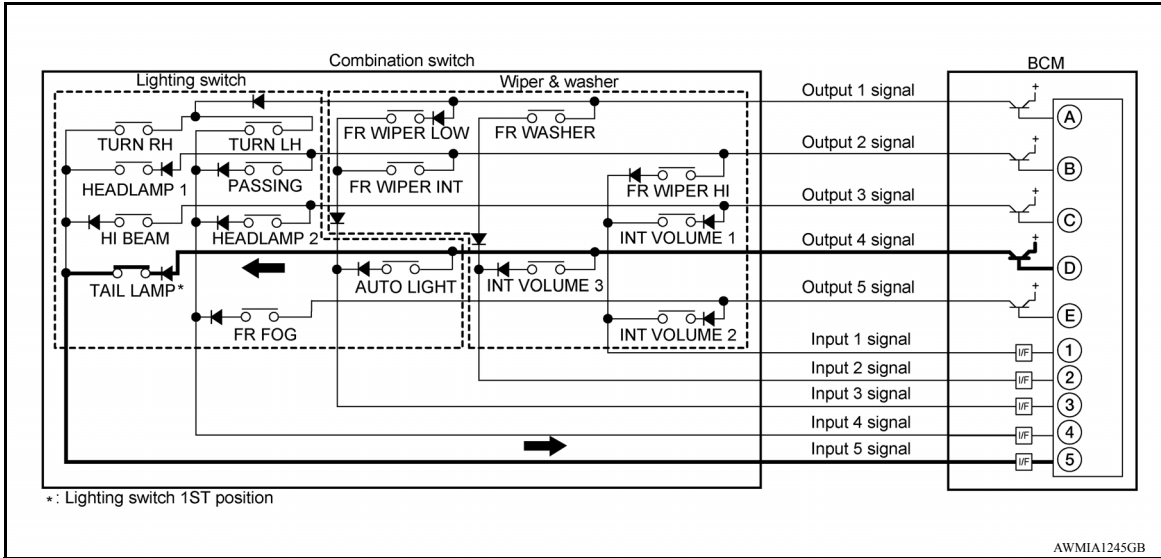

- BCM detects the combination switch status signal “5D” when the signal of OUTPUT 4 is input to INPUT 5.
- BCM judges that the TAIL LAMP switch is ON when the signal “5D” is detected.

Example 2: When some switches (TURN RH, TAIL LAMP) are turned ON

- The circuits between OUTPUT 1 and INPUT 5 and between OUTPUT 4 and INPUT 5 are formed when the TURN RH switch and TAIL LAMP switch are turned ON.

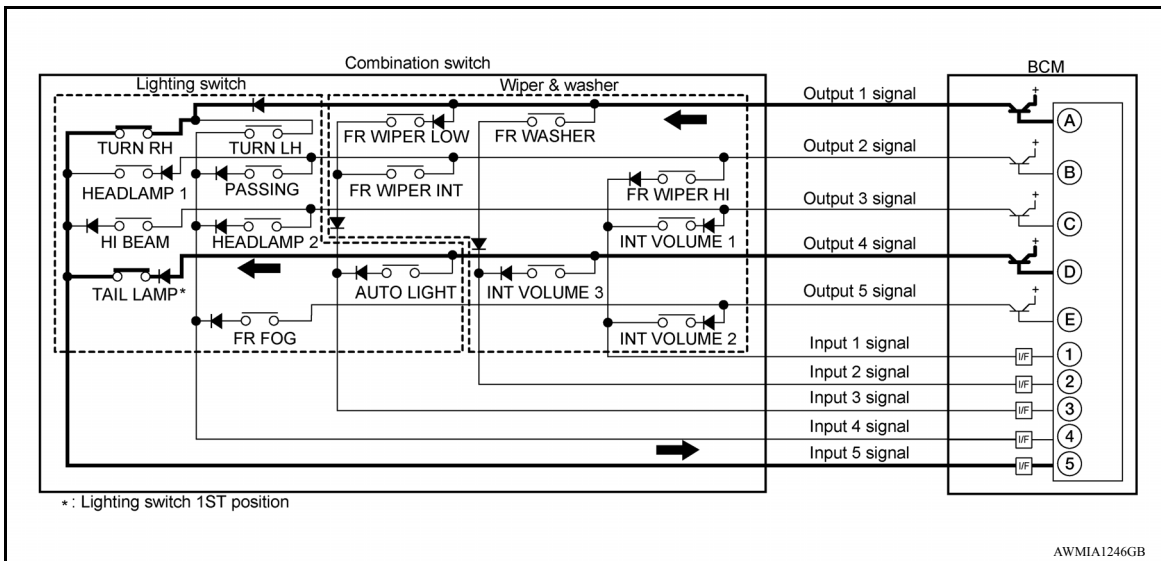

- BCM detects the combination switch status signal “5AD” when the signals of OUTPUT 1 and OUTPUT 4 are input to INPUT 5.
- BCM judges that the TURN RH switch and TAIL LAMP switch are ON when the signal “5AD” is detected.

WIPER INTERMITTENT DIAL POSITION SETTING (FRONT WIPER INTERMITTENT OPERATION)

BCM judges the wiper intermittent dial 1 - 7 by the status of INT VOLUME 1, 2, and 3 switches.


COMBINATION SWITCH READING SYSTEM

< SYSTEM DESCRIPTION >

Wiper intermittent dial position	Intermittent operation delay interval	INT VOLUME switch ON/OFF status		
		INT VOLUME 1	INT VOLUME 2	INT VOLUME 3
1	Short ↑	ON	ON	ON
2		ON	ON	OFF
3		ON	OFF	OFF
4		OFF	OFF	OFF
5	↓ Long	OFF	OFF	ON
6		OFF	ON	ON
7		OFF	ON	OFF

Component Parts Location

INFOID:000000010619782

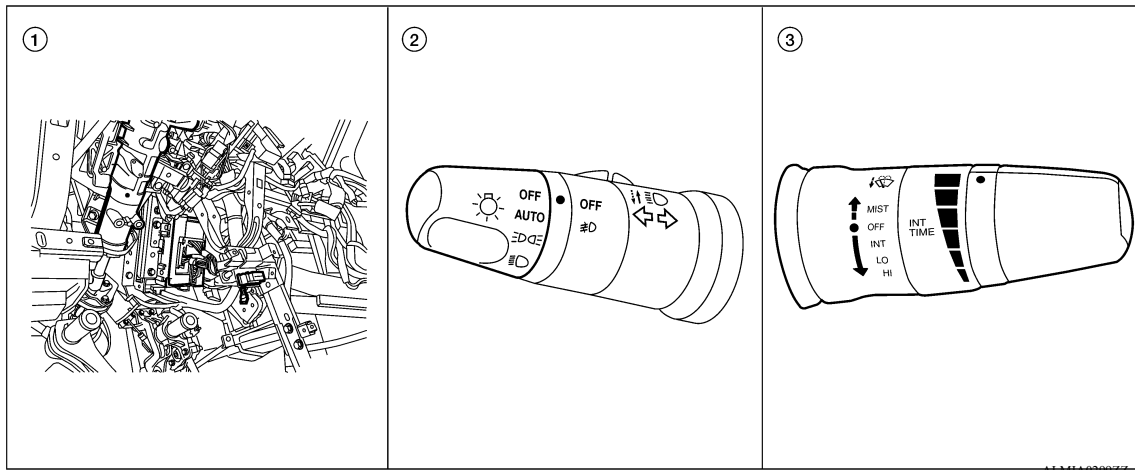

1. BCM M18, M19, M20 (view with instrument panel removed)
2. Combination switch (lighting and turn signal switch) M28
3. Combination switch (wiper and washer switch) M28

A
B
C
D
E
F
G
H
I
J
K


EXL

TRAILER TOW

< SYSTEM DESCRIPTION >

TRAILER TOW

System Diagram

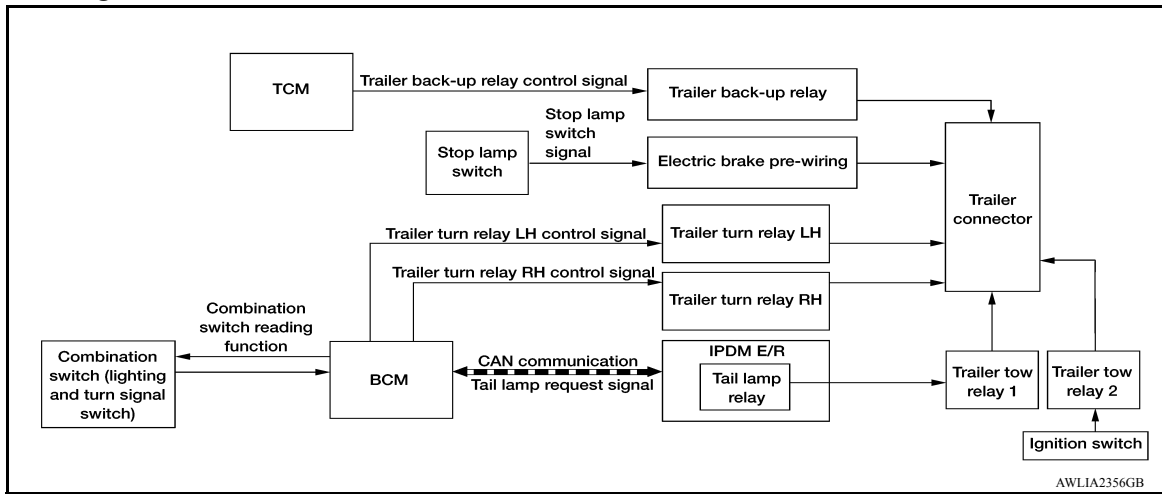

INFOID:000000009878496

System Description

INFOID:000000009878497

TRAILER TAIL LAMP OPERATION

The trailer tail lamps are controlled by the trailer tow relay 1 located in the IPDM E/R. With the combination switch (lighting and turn signal switch) in the 1st position, the BCM detects the LIGHTING SWITCH 1ST POSITION ON. The BCM sends a parking light ON request via the CAN communication lines to the IPDM E/R. The IPDM E/R then activates the tail lamp relay which activates the trailer tow relay 1 and sends power to the trailer connector.

TRAILER TURN SIGNAL LAMP OPERATION

The trailer turn signal lamps are controlled by the BCM. When the turn signal switch is in the LH or RH position with the ignition switch ON, the combination switch (lighting and turn signal switch) sends a signal to the BCM. The BCM detects the TURN RH or TURN LH ON request. The BCM sends a control signal to the respective trailer turn relay which sends power to the trailer connector.

TRAILER HAZARD LAMP OPERATION

The trailer hazard lamps are controlled by the BCM. When the hazard switch is pressed, the BCM detects the the hazard ON request. The BCM then sends a control signal to both trailer turn relays which sends power to the trailer connector.

TRAILER BRAKE LAMP OPERATION


The trailer brake lamps are controlled by the BCM. When the brake pedal is depressed, the combination meter receives a stop lamp switch signal from the stop lamp switch. The combination meter then sends the brake signal to the BCM via the CAN communication lines. The BCM then sends a control signal to both trailer turn relays which sends power to the trailer connector.

TRAILER TOW

< SYSTEM DESCRIPTION >

Component Parts Location

INFOID:000000009878498

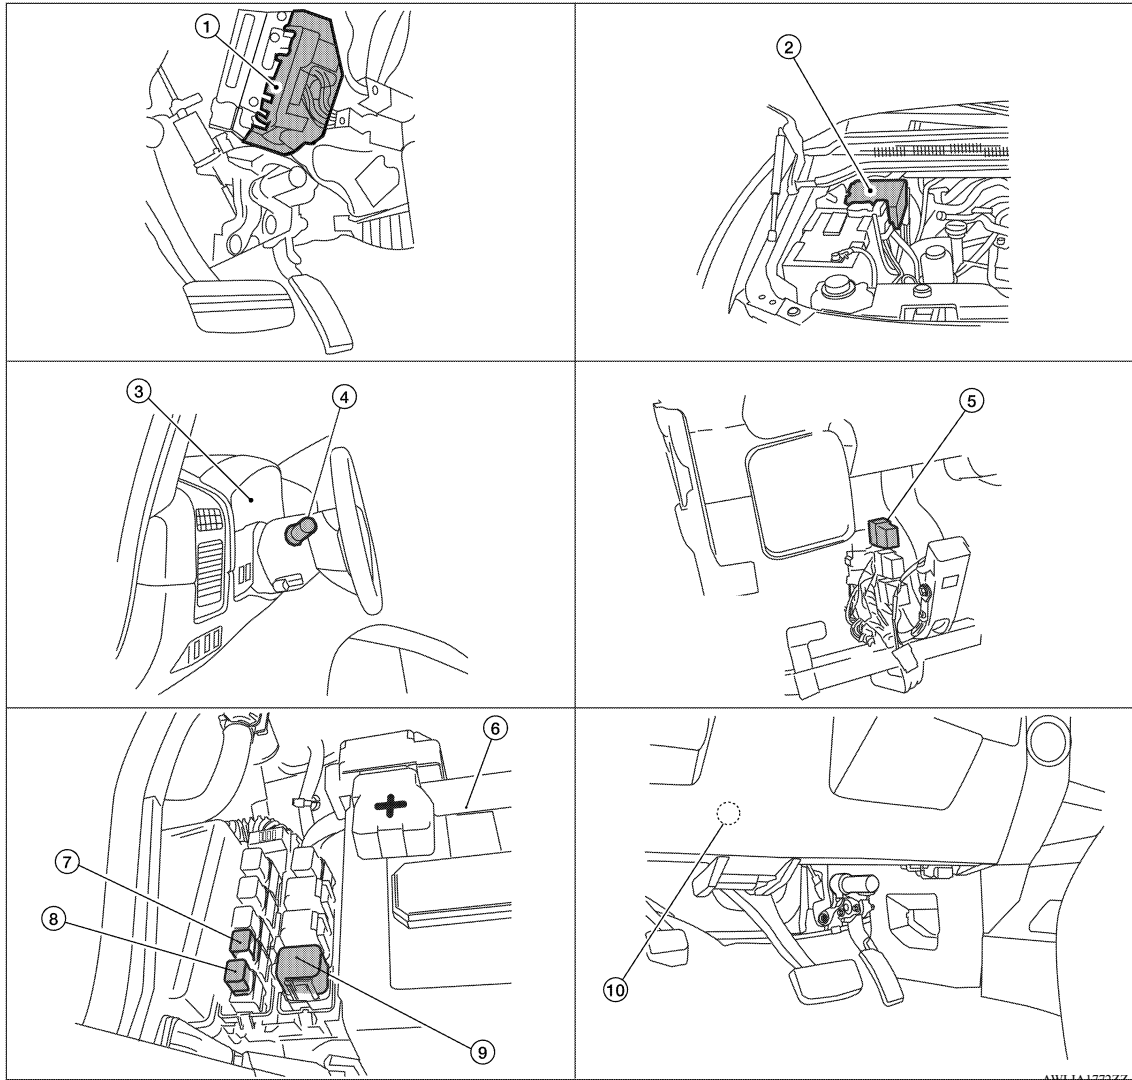

- | | | |
|---|--|-----------------------------|
| 1. BCM M18, M19, M20 (view with instrument panel removed) | 2. IPDM E/R E119, E122, E123, E124 | 3. Combination meter M24 |
| 4. Combination switch (lighting and turn signal switch) M28 | 5. Trailer tow relay 1 M51 (view with steering member removed) | 6. Battery |
| 7. Trailer turn relay LH E158 | 8. Trailer turn relay RH E159 | 9. Trailer tow relay 2 E140 |
| 10. Stop lamp switch E38 (column shift), E42 (floor shift) | | |

Component Description

INFOID:000000009878499

Part name	Description
BCM	<ul style="list-style-type: none"> Receives lighting and turn signal requests from combination switch. Receives stop lamp signal requests from combination meter via CAN communication. Sends lighting signal request to the IPDM E/R to control the tail lamp relay via CAN communication. Sends turn/hazard/brake control signal to the trailer turn relays.
IPDM E/R	Activates the tail lamp relay upon request from the BCM via CAN communication.

A
B
C
D
E
F
G
H
I
J
K

EXL

M

N

O

P

TRAILER TOW

< SYSTEM DESCRIPTION >

Combination meter	<ul style="list-style-type: none">• Receives stop lamp switch signal from stop lamp switch.• Sends stop lamp signal request to the BCM via CAN communication.
Combination switch (lighting and turn signal switch)	Outputs lighting and turn signal requests to the BCM.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:0000000010619783

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Direct Diagnostic Mode	Description
Ecu Identification	The BCM part number is displayed.
Self Diagnostic Result	The BCM self diagnostic results are displayed.
Data Monitor	The BCM input/output data is displayed in real time.
Active Test	The BCM activates outputs to test components.
Work support	The settings for BCM functions can be changed.
Configuration	<ul style="list-style-type: none"> The vehicle specification can be read and saved. The vehicle specification can be written when replacing BCM.
CAN Diag Support Mntr	The result of transmit/receive diagnosis of CAN communication is displayed.

SYSTEM APPLICATION

BCM can perform the following functions.

System	Sub System	Direct Diagnostic Mode						
		Ecu Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN Diag Support Mntr
Door lock	DOOR LOCK			x	x	x		
Rear window defogger	REAR DEFOGGER			x	x			
Warning chime	BUZZER			x	x			
Interior room lamp timer	INT LAMP			x	x	x		
Remote keyless entry system	MULTI REMOTE ENT			x	x	x		
Exterior lamp	HEADLAMP			x	x	x		
Wiper and washer	WIPER			x	x	x		
Turn signal and hazard warning lamps	FLASHER			x	x			
Air conditioner	AIR CONDITIONER			x				
Combination switch	COMB SW			x				
BCM	BCM	x	x			x	x	x
Immobilizer	IMMU		x	x	x			
Interior room lamp battery saver	BATTERY SAVER			x	x	x		
Vehicle security system	THEFT ALM			x	x	x		
RAP system	RETAINED PWR			x	x	x		
Signal buffer system	SIGNAL BUFFER			x	x			
TPMS	AIR PRESSURE MONITOR		x	x	x	x		
Panic alarm system	PANIC ALARM				x			

HEADLAMP

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

HEADLAMP : CONSULT Function (BCM - HEAD LAMP)

INFOID:000000010619784

DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.
ACC ON SW [On/Off]	Indicates condition of ignition switch ACC position.
HI BEAM SW [On/Off]	Indicates condition of combination switch.
HEAD LAMP SW 1 [On/Off]	
HEAD LAMP SW 2 [On/Off]	
LIGHT SW 1ST [On/Off]	
AUTO LIGHT SW [On/Off]	
PASSING SW [On/Off]	
FR FOG SW [On/Off]	
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
TURN SIGNAL R [On/Off]	Indicates condition of combination switch.
TURN SIGNAL L [On/Off]	
CARGO LAMP SW [On/Off]	Indicates condition of cargo lamp switch.
OPTICAL SENSOR [V]	Indicates voltage signal from optical sensor.

ACTIVE TEST

Test Item	Description
TAIL LAMP	This test is able to check tail lamp operation [Off/On].
HEAD LAMP	This test is able to check head lamp operation [Off/Lo/Hi].
FR FOG LAMP	This test is able to check front fog lamp operation [Off/On].
CARGO LAMP	This test is able to check cargo lamp operation [Off/On].

WORK SUPPORT

Support Item	Setting	Description
BATTERY SAVER SET	Off	Exterior lamp battery saver function OFF.
	On*	Exterior lamp battery saver function ON.
CUSTOM A/LIGHT SETTING	MODE4	Less sensitive setting than normal setting (Turns ON later than normal operation).
	MODE3	More sensitive setting than MODE 2 (Turns ON earlier than MODE 2).
	MODE2	More sensitive setting than normal setting (Turns ON earlier than normal operation).
	MODE1*	Normal.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Support Item	Setting		Description
ILL DELAY SET	MODE8	180 sec	Sets delay timer function operation time (All doors closed).
	MODE7	150 sec	
	MODE6	120 sec	
	MODE5	90 sec	
	MODE4	60 sec	
	MODE3	30 sec	
	MODE2	OFF	
	MODE1*	45 sec	

*: Initial setting

FLASHER

FLASHER : CONSULT Function (BCM - FLASHER)

INFOID:000000010619785

DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.
HAZARD SW [On/Off]	Indicates condition of hazard switch.
TURN SIGNAL R [On/Off]	Indicates condition of turn signal function of combination switch.
TURN SIGNAL L [On/Off]	
BRAKE SW [On/Off]	Indicates condition of brake switch.

ACTIVE TEST

Test Item	Description
FLASHER	This test is able to check turn signal lamp operation [Off/LH/RH].

COMB SW

COMB SW : CONSULT Function (BCM - COMB SW)

INFOID:000000010619786

DATA MONITOR

Monitor Item [Unit]	Description
TURN SIGNAL R [On/Off]	Indicates condition of turn signal operation of combination switch.
TURN SIGNAL L [On/Off]	
HI BEAM SW [On/Off]	Indicates condition of hi beam operation of combination switch.
HEAD LAMP SW 1 [On/Off]	Indicates condition of headlamp operation of combination switch.
HEAD LAMP SW 2 [On/Off]	
LIGHT SW 1ST [On/Off]	Indicates condition of lighting operation of combination switch.
PASSING SW [On/Off]	Indicates condition of passing switch operation of combination switch.
AUTO LIGHT SW [On/Off]	Indicates condition of auto light operation of combination switch.
FR FOG SW [On/Off]	Indicates condition of front fog light operation of combination switch.
FR WIPER HI [On/Off]	Indicates condition of front wiper operation of combination switch.
FR WIPER LOW [On/Off]	
FR WIPER INT [On/Off]	
FR WASHER SW [On/Off]	Indicates condition of front washer operation of combination switch.
INT VOLUME [1 - 7]	Indicates condition of intermittent wiper operation of combination switch.

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

BATTERY SAVER

BATTERY SAVER : CONSULT Function (BCM - BATTERY SAVER)

INFOID:0000000010619787

DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.
KEY ON SW [On/Off]	Indicates condition of key switch.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
KEY CYL LK SW [On/Off]	Indicates condition of lock signal from door key cylinder switch.
KEY CYL UN SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.
KEYLESS LOCK [On/Off]	Indicates condition of lock signal from keyfob.
KEYLESS UNLOCK [On/Off]	Indicates condition of unlock signal from keyfob.

ACTIVE TEST

Test item	Description
BATTERY SAVER	This test is able to check battery saver operation [Off/On].

WORK SUPPORT

Support Item	Setting	Description
ROOM LAMP TIMER SET	MODE2	60 min
	MODE1	15 min
		Sets the interior room lamp battery saver timer operating time.

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (IPDM E/R)

Diagnosis Description

INFOID:000000010619793

AUTO ACTIVE TEST

Description

In auto active test mode, the IPDM E/R sends a drive signal to the following systems to check their operation.

- Oil pressure low/coolant pressure high warning indicator
- Oil pressure gauge
- Rear window defogger (if equipped)
- Front wipers (HI, LO)
- Tail, license and parking lamps
- Front fog lamps (if equipped)
- Headlamps (HI, LO)
- A/C compressor (magnetic clutch)

Operation Procedure

1. Close the hood and front door RH, and lift the wiper arms from the windshield (to prevent windshield damage due to wiper operation).
NOTE:
When auto active test is performed with hood opened, sprinkle water on windshield before hand.
2. Turn ignition switch OFF.
3. Turn the ignition switch ON and, within 20 seconds, press the front door switch LH 10 times. Then turn the ignition switch OFF.
4. Turn the ignition switch ON within 10 seconds. After that the horn sounds once and the auto active test starts.
5. After a series of the following operations is repeated 3 times, auto active test is completed.

NOTE:


When auto active test mode has to be cancelled halfway through test, turn ignition switch OFF.

CAUTION:

- If auto active test mode cannot be actuated, check door switch system. Refer to [DLK-26. "KING CAB : Description"](#) (King Cab) or [DLK-27. "CREW CAB : Description"](#) (Crew Cab).
- Do not start the engine.

Inspection in Auto Active Test Mode

When auto active test mode is actuated, the following 6 steps are repeated 3 times.

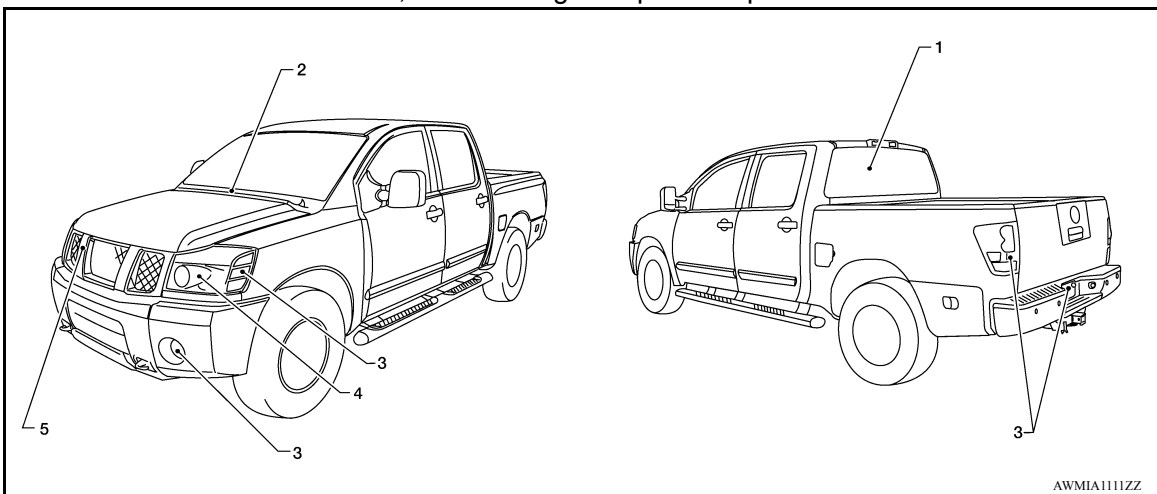

AWMIA1111ZZ

Operation sequence	Inspection Location	Operation
1	Rear window defogger (Crew Cab only)	10 seconds
2	Front wipers	LO for 5 seconds → HI for 5 seconds


A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

Operation sequence	Inspection Location	Operation
3	Tail, license, parking lamps and front fog lamps (if equipped)	10 seconds
4	Headlamps	LO for 10 seconds → HI on-off for 5 seconds
5	A/C compressor (magnetic clutch)	ON ↔ OFF 5 times

Concept of auto active test

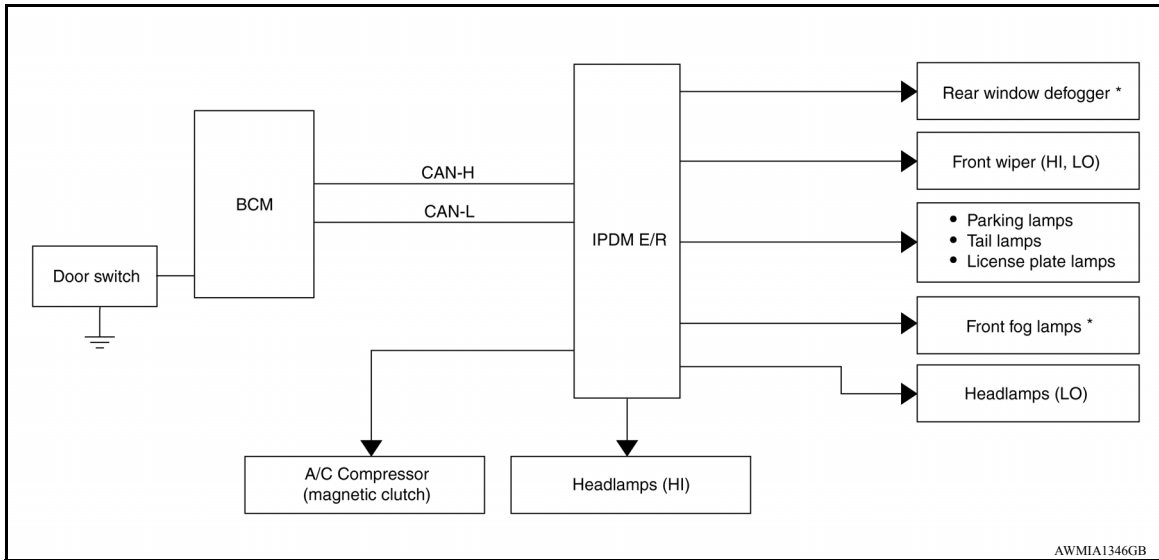

*: If equipped

- IPDM E/R starts the auto active test with the door switch signals transmitted by BCM via CAN communication. Therefore, the CAN communication line between IPDM E/R and BCM is considered normal if the auto active test starts successfully.
- The auto active test facilitates troubleshooting if any systems controlled by IPDM E/R cannot be operated.

Diagnosis chart in auto active test mode

Symptom	Inspection contents	Possible cause
Oil pressure low/coolant temperature high warning indicator does not operate	Perform auto active test. Does the oil pressure low/coolant temperature high warning indicator operate?	YES • IPDM E/R signal input circuit • ECM signal input circuit • CAN communication signal between ECM and combination meter
		NO CAN communication signal between IPDM E/R, BCM and combination meter
Oil pressure gauge does not operate	Perform auto active test. Does the oil pressure gauge operate?	YES IPDM E/R signal input circuit
		NO CAN communication signal between IPDM E/R, BCM and combination meter
Rear window defogger (if equipped) does not operate	Perform auto active test. Does the rear window defogger (if equipped) operate?	YES BCM signal input circuit
		NO CAN communication signal between BCM and IPDM E/R

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

Symptom	Inspection contents	Possible cause
Any of the following components do not operate <ul style="list-style-type: none"> • Front wipers (HI, LO) • Tail lamps • License plate lamps • Parking lamps • Front fog lamps (if equipped) • Headlamps (HI, LO) 	Perform auto active test. Does the applicable system operate?	YES BCM signal input system
		NO <ul style="list-style-type: none"> • Lamp or front wiper motor malfunction • Lamp or front wiper motor ground circuit • Harness or connector between IPDM E/R and applicable system • IPDM E/R (integrated relay malfunction)
A/C compressor does not operate	Perform auto active test. Does the A/C compressor operate?	YES <ul style="list-style-type: none"> • BCM signal input circuit • CAN communication signal between BCM and ECM • CAN communication signal between ECM and IPDM E/R
		NO <ul style="list-style-type: none"> • Magnetic clutch malfunction • Harness or connector between IPDM E/R and magnetic clutch • IPDM E/R (integrated relay malfunction)

CONSULT Function (IPDM E/R)

INFOID:000000010619794

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with IPDM E/R.

Direct Diagnostic Mode	Description
Self Diagnostic Result	The IPDM E/R self diagnostic results are displayed.
Data Monitor	The IPDM E/R input/output data is displayed in real time.
Active Test	The IPDM E/R activates outputs to test components.
CAN Diag Support Mntr	The result of transmit/receive diagnosis of CAN communication is displayed.

SELF DIAGNOSTIC RESULT

Refer to [PCS-22, "DTC Index"](#).

DATA MONITOR

Monitor Item [Unit]	Main Signals	Description
AC COMP REQ [On/Off]	×	Indicates A/C compressor request signal received from ECM on CAN communication line
TAIL&CLR REQ [On/Off]	×	Indicates position light request signal received from BCM on CAN communication line
HL LO REQ [On/Off]	×	Indicates low beam request signal received from BCM on CAN communication line
HL HI REQ [On/Off]	×	Indicates high beam request signal received from BCM on CAN communication line
FR FOG REQ [On/Off]	×	Indicates front fog light request signal received from BCM on CAN communication line
FR WIP REQ [Stop/1LOW/Low/Hi]	×	Indicates front wiper request signal received from BCM on CAN communication line
WIP AUTO STOP [STOP P/ACT P]	×	Indicates condition of front wiper auto stop signal
WIP PROT [Off/BLOCK]	×	Indicates condition of front wiper fail-safe operation
ST RLY REQ [On/Off]		Indicates starter request signal received from ECM on CAN communication line
IGN RLY [On/Off]	×	Indicates condition of ignition relay

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

Monitor Item [Unit]	Main Signals	Description
RR DEF REQ [On/Off]	×	Indicates rear defogger request signal received from AV control unit on CAN communication line
OIL P SW [Open/Close]		Indicates condition of oil pressure switch
DTRL REQ [Off]		Indicates daytime light request signal received from BCM on CAN communication line
THFT HRN REQ [On/Off]		Indicates theft warning horn request signal received from BCM on CAN communication line
HORN CHIRP [On/Off]		Indicates horn reminder signal received from BCM on CAN communication line

ACTIVE TEST

Test item	Description
REAR DEFOGGER	This test is able to check rear defogger operation [On/Off].
FRONT WIPER	This test is able to check wiper motor operation [Hi/Lo/Off].
EXTERNAL LAMPS	This test is able to check external lamp operation [Fog/Hi/Lo/TAIL/Off].
HORN	This test is able to check horn operation [On].

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

POWER SUPPLY AND GROUND CIRCUIT

BCM (BODY CONTROL MODULE)

BCM (BODY CONTROL MODULE) : Diagnosis Procedure

INFOID:000000010619795

Regarding Wiring Diagram information, refer to [BCS-44, "Wiring Diagram"](#).

1. CHECK FUSES AND FUSIBLE LINK

Check that the following fuses and fusible link are not blown.

Terminal No.	Signal name	Fuses and fusible link No.
57	Battery power supply	22 (15A)
70		F (50A)
11	Ignition ACC or ON	4 (10A)
38	Ignition ON or START	59 (10A)

Is the fuse blown?


YES >> Replace the blown fuse or fusible link after repairing the affected circuit.

NO >> GO TO 2

2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM.
3. Check voltage between BCM harness connector and ground.

Connector	Terminals		Power source	Condition	Voltage (V) (Approx.)
	(+)	(-)			
M18	11	Ground	ACC power supply	Ignition switch ACC or ON	Battery voltage
	38	Ground	Ignition power supply	Ignition switch ON or START	Battery voltage
M20	57	Ground	Battery power supply	Ignition switch OFF	Battery voltage
	70	Ground	Battery power supply	Ignition switch OFF	Battery voltage

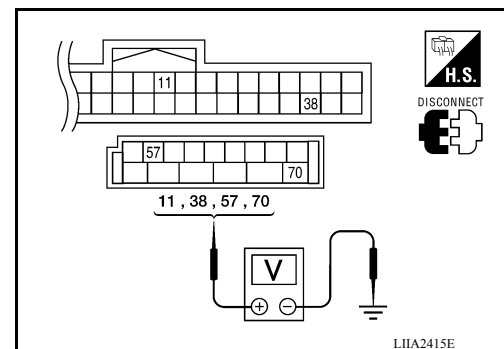

Is the measurement value normal?

YES >> GO TO 3

NO >> Repair or replace harness.

3. CHECK GROUND CIRCUIT

POWER SUPPLY AND GROUND CIRCUIT


< DTC/CIRCUIT DIAGNOSIS >

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M20	67		Yes

Does continuity exist?

- YES >> Inspection End.
 NO >> Repair or replace harness.

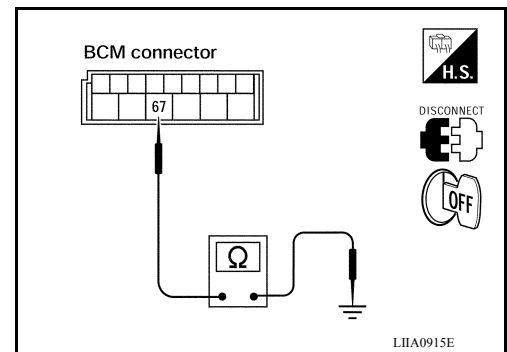

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) : Diagnosis Procedure

INFOID:000000010619796

Regarding Wiring Diagram information, refer to [PCS-23. "Wiring Diagram"](#).

1. CHECK FUSES AND FUSIBLE LINK

Check that the following IPDM E/R fuses or fusible link are not blown.

Terminal No.	Signal name	Fuses and fusible link No.
1	Battery	A (140A), D (80A)
2	Battery	C (80A)
12	Ignition switch ON or START	59 (10A)

Is the fuse blown?

- YES >> Replace the blown fuse or fusible link after repairing the affected circuit.
 NO >> GO TO 2

2. CHECK BATTERY POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect IPDM E/R.
- Check voltage between IPDM E/R harness connectors and ground.

Terminals		(-)	Ignition switch position		
(+)			OFF	ON	START
Connector	Terminal				
E118	1	Ground	Battery voltage	Battery voltage	Battery voltage
	2		Battery voltage	Battery voltage	Battery voltage
E119	12		0V	Battery voltage	Battery voltage

Is the measurement value normal?

- YES >> GO TO 3
 NO >> Repair or replace harness.

3. CHECK GROUND CIRCUIT

- Turn ignition switch OFF.

POWER SUPPLY AND GROUND CIRCUIT


< DTC/CIRCUIT DIAGNOSIS >

- Check continuity between IPDM E/R harness connectors and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E122 (A)	38		Yes
E124 (B)	59		

Does continuity exist?

- YES >> Inspection End.
- NO >> Repair or replace harness.

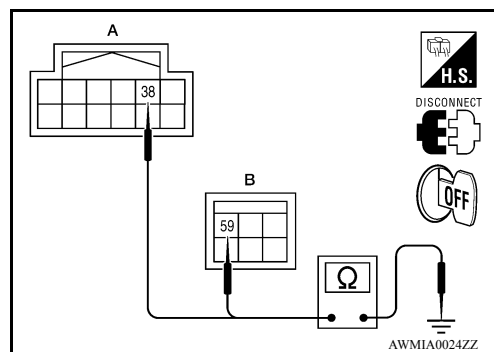

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

HEADLAMP (HI) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

HEADLAMP (HI) CIRCUIT

Description

INFOID:000000009878509

The IPDM E/R (intelligent power distribution module engine room) controls the headlamp high relay based on inputs from the BCM via the CAN communication lines. When the headlamp high relay is energized, power flows through fuses 34 and 35, located in the IPDM E/R. Power then flows to the front combination lamps to the headlamp high beam.

Component Function Check

INFOID:000000009878510

1. CHECK HEADLAMP (HI) OPERATION

⊗ WITHOUT CONSULT

1. Start IPDM E/R auto active test. Refer to [PCS-11, "Diagnosis Description"](#).
2. Check that the headlamp switches to the high beam.

NOTE:

HI/LO is repeated 1 second each when using the IPDM E/R auto active test.

Ⓟ WITH CONSULT

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With the test item operating, check that the headlamp switches to high beam.

HI : Headlamp switches to the high beam.

OFF : Headlamp OFF

Does the headlamp switch to high beam?

YES >> Headlamp (HI) circuit is normal.

NO >> Refer to [EXL-36, "Diagnosis Procedure - Without Daytime Light System"](#), [EXL-37, "Diagnosis Procedure - With Daytime Light System"](#).

Diagnosis Procedure - Without Daytime Light System

INFOID:000000009878511

Regarding Wiring Diagram information, refer to [EXL-77, "Wiring Diagram"](#).

1. CHECK HEADLAMP (HI) FUSES

1. Turn the ignition switch OFF.
2. Check that the following fuses are not open.

Unit	Location	Fuse No.	Capacity
Headlamp HI (LH)	IPDM E/R	35	10A
Headlamp HI (RH)	IPDM E/R	34	10A

Is the fuse open?

YES >> Repair the harness and replace the fuse.

NO >> GO TO 2.


2. CHECK HEADLAMP (HI) OUTPUT VOLTAGE

HEADLAMP (HI) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

1. Turn the ignition switch OFF.
2. Disconnect the front combination lamp connector E11 or E107.
3. Turn the ignition switch ON.
4. Turn the high beam headlamps ON.
5. With the high beam headlamps ON, check the voltage between the combination lamp connector and ground.

		(+)		(-)	Voltage
	Connector		Terminal		
LH	E11		2	Ground	Battery voltage
RH	E107		2		

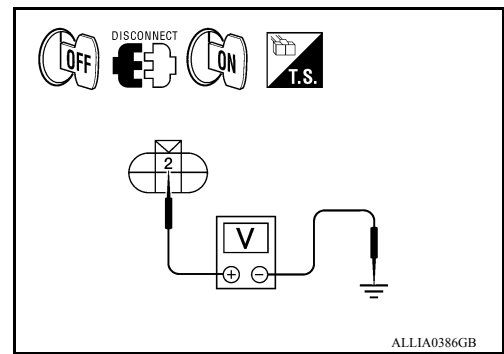


Are the voltage readings as specified?

- YES >> GO TO 4.
NO >> GO TO 3.

3. CHECK HEADLAMP (HI) CIRCUIT FOR OPEN

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector E123.
3. Check continuity between the IPDM E/R harness connector (A) and the front combination lamp harness connector (B).

		A		B		Continuity
	Connector		Terminal	Connector	Terminal	
LH	E123		55	E11	2	Yes
RH			56	E107	2	

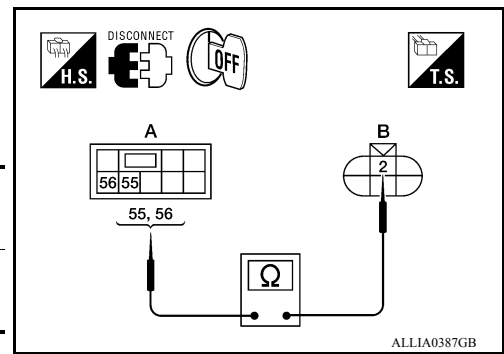


Does continuity exist?

- YES >> Replace IPDM E/R. Refer to [PCS-28, "Removal and Installation of IPDM E/R"](#)
NO >> Repair the harnesses or connectors.

4. CHECK FRONT COMBINATION LAMP (HI) GROUND CIRCUIT

Check continuity between the front combination lamp harness connector terminal and ground.

		Connector	Terminal	—	Continuity
LH	E11		3	Ground	Yes
RH	E107		3		

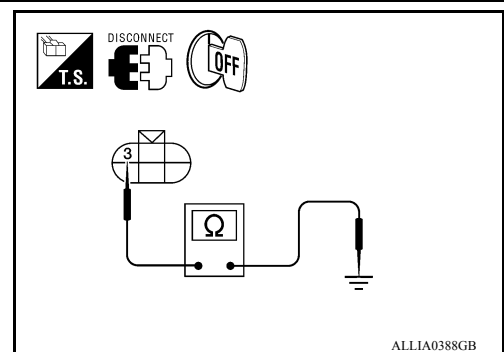

Does continuity exist?

- YES >> Inspect the headlamp bulb.
NO >> Repair the harness.

Diagnosis Procedure - With Daytime Light System

INFOID:000000009878512

Regarding Wiring Diagram information, refer to [EXL-89, "Wiring Diagram"](#).

1. CHECK HEADLAMP (HI) FUSES

1. Turn the ignition switch OFF.
2. Check that the following fuses are not open.

HEADLAMP (HI) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >


Unit	Location	Fuse No.	Capacity
Headlamp HI (LH)	IPDM E/R	35	10A
Headlamp HI (RH)	IPDM E/R	34	10A

Is the fuse open?

- YES >> Repair the harness and replace the fuse.
 NO >> GO TO 2.

2.CHECK HEADLAMP (HI) OUTPUT VOLTAGE

- Turn the ignition switch OFF.
- Disconnect the front combination lamp connector E6 or E108.
- Turn the ignition switch ON.
- Turn the high beam headlamps ON.
- With the high beam headlamps ON, check the voltage between the combination lamp connector and ground.

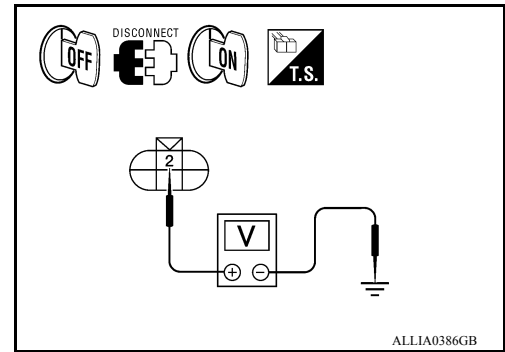


(+)		Terminal	(-)	Voltage
Connector				
LH	E6	2	Ground	Battery voltage
RH	E108	2		

Are the voltage readings as specified?

- YES >> GO TO 4.
 NO >> GO TO 3.

3.CHECK HEADLAMP (HI) CIRCUIT FOR OPEN

- Turn the ignition switch OFF.
- Disconnect IPDM E/R connector E123.
- Check continuity between the IPDM E/R harness connector (A) and the front combination lamp harness connector (B).

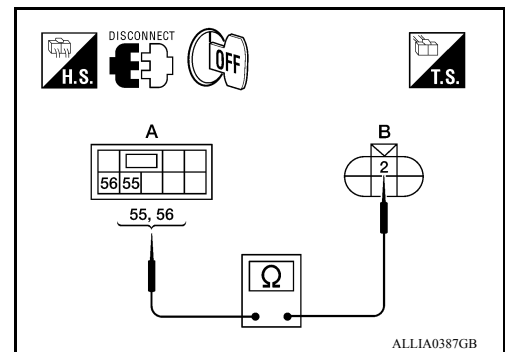

A		B		Continuity	
Connector	Terminal	Connector	Terminal		
LH	E123	E6	55	2	Yes
RH			56		

Does continuity exist?

- YES >> Replace IPDM E/R. Refer to [PCS-28. "Removal and Installation of IPDM E/R"](#)
 NO >> Repair the harnesses or connectors.


4.CHECK FRONT COMBINATION LAMP (HI) GROUND CIRCUIT

Check continuity between the front combination lamp harness connector terminal and ground.

Connector	Terminal	—	Continuity
LH	E6	Ground	Yes
RH	E108		

Does continuity exist?

- YES >> Inspect the headlamp bulb.
 NO (Except LH with DTRL)>>Repair the harness.
 NO (LH with DTRL)>>GO TO 5.

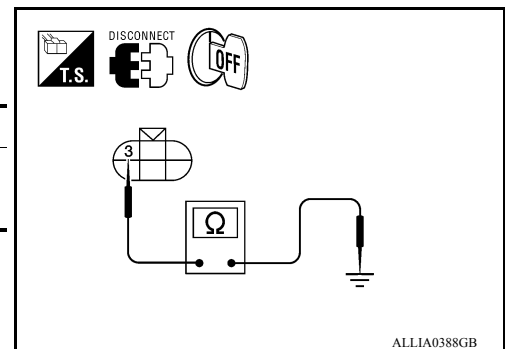

5.CHECK CONTINUITY BETWEEN FRONT COMBINATION LAMP LH (HI) AND DAYTIME LIGHT RELAY

- Disconnect daytime light relay connector.

HEADLAMP (HI) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

2. Check continuity between front combination lamp LH harness connector and daytime light relay harness connector.

Front combination lamp LH		Daytime light relay		Continuity
Connector	Terminal	Connector	Terminal	
E6	3	E103	3	Yes

Does continuity exist?

- YES >> GO TO 6.
NO >> Repair the harness or connector.

6.CHECK DAYTIME LIGHT RELAY GROUND CIRCUIT

Check continuity between daytime light relay harness connector and ground.

Daytime light relay		Ground	Continuity
Connector	Terminal		
E103	4		Yes

Does continuity exist?

- YES >> GO TO 7.
NO >> Repair the harness or connector.

7.CHECK DAYTIME LIGHT RELAY FUSE

Check that the following fuses are not open.

Unit	Location	Fuse No.	Capacity
Daytime light relay	IPDM E/R	45	10A

Is the fuse open?

- YES >> Replace the fuse after repairing the affected circuit.
NO >> GO TO 8.

8.CHECK DAYTIME LIGHT CIRCUIT FOR OPEN

1. Disconnect IPDM E/R connector E119 and E122.
2. Check continuity between the IPDM E/R harness connector and the daytime light relay harness connector.

IPDM E/R		Daytime light relay		Continuity
Connector	Terminal	Connector	Terminal	
E119	10	E103	2	Yes
			5	
E122	44		1	

Does continuity exist?

- YES >> GO TO 9
NO >> Repair the harnesses or connectors.

9.CHECK DAYTIME LIGHT RELAY

Check daytime light relay. Refer to [EXL-39, "Component Inspection"](#)

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-28, "Removal and Installation of IPDM E/R"](#)
NO >> Replace daytime light relay.

Component Inspection

INFOID:000000009878513

1. CHECK DAYTIME LIGHT RELAY

1. Turn ignition switch OFF.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

EXL

HEADLAMP (HI) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

2. Remove daytime light relay.
3. Check the continuity between daytime light relay terminals under the following conditions.

Terminals	Condition	Continuity
3 and 5	12V direct current supply between terminals 1 and 2	Yes
	No current supply	No
3 and 4	12V direct current supply between terminals 1 and 2	No
	No current supply	Yes

Is the inspection result normal?

- YES >> Inspection End.
NO >> Replace daytime light relay

HEADLAMP (LO) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

HEADLAMP (LO) CIRCUIT

Description

INFOID:000000009878514

The IPDM E/R (intelligent power distribution module engine room) controls the headlamp low relay based on inputs from the BCM via the CAN communication lines. When the headlamp low relay is energized, power flows through fuses 40 and 41, located in the IPDM E/R. Power then flows to the front combination lamps to the headlamp low beam.

Component Function Check

INFOID:000000009878515

1. CHECK HEADLAMP (LO) OPERATION

WITHOUT CONSULT

1. Start IPDM E/R auto active test. Refer to [PCS-11, "Diagnosis Description"](#).
2. Check that the headlamp is turned ON.

NOTE:

HI/LO is repeated 1 second each when using the IPDM E/R auto active test.

WITH CONSULT

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With the test items operating, check that the headlamp is turned ON.

LO : Headlamp ON

OFF : Headlamp OFF

Is the headlamp turned ON?

YES >> Headlamp (LO) is normal.

NO >> Refer to [EXL-41, "Diagnosis Procedure - Without Daytime Light System"](#), [EXL-42, "Diagnosis Procedure - With Daytime Light System"](#).

Diagnosis Procedure - Without Daytime Light System

INFOID:000000009878516

Regarding Wiring Diagram information, refer to [EXL-77, "Wiring Diagram"](#).

1. CHECK HEADLAMP (LO) FUSES

1. Turn the ignition switch OFF.
2. Check that the following fuses are not open.

Unit	Location	Fuse No.	Capacity
Headlamp LO (LH)	IPDM E/R	40	15A
Headlamp LO (RH)	IPDM E/R	41	15A

Is the fuse open?

YES >> Repair the harness and replace the fuse.

NO >> GO TO 2.

2. CHECK HEADLAMP (LO) OUTPUT VOLTAGE

HEADLAMP (LO) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

1. Turn the ignition switch OFF.
2. Disconnect the front combination lamp connector.
3. Turn the ignition switch ON.
4. Turn the low beam headlamps ON.
5. With the low beam headlamps ON, check the voltage between the combination lamp connector and ground.

(+)		Terminal	(-)	Voltage
Connector				
LH	E11	1	Ground	Battery voltage
RH	E107	1		

Is voltage reading as specified?

- YES >> GO TO 4.
NO >> GO TO 3.

3. CHECK HEADLAMP (LO) CIRCUIT FOR OPEN

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector E123.
3. Check continuity between the IPDM E/R harness connector (A) and the front combination lamp harness connector (B).

A		Terminal	B		Continuity
Connector			Connector	Terminal	
LH	E123	52	E11	1	Yes
RH		54	E107	1	

Does continuity exist?

- YES >> Replace IPDM E/R. Refer to [PCS-28. "Removal and Installation of IPDM E/R"](#).
NO >> Repair the harnesses or connectors.




4. CHECK FRONT COMBINATION LAMP (LO) GROUND CIRCUIT

Check continuity between the front combination lamp harness connector terminal and ground.

Connector	Terminal	—	Continuity
LH	E11	4	Yes
RH	E107	4	

Does continuity exist?

- YES >> Inspect the headlamp bulb.
NO >> Repair the harness.

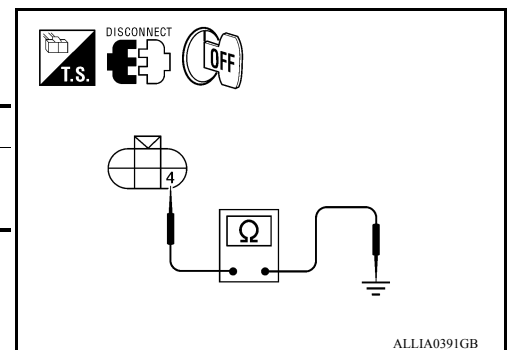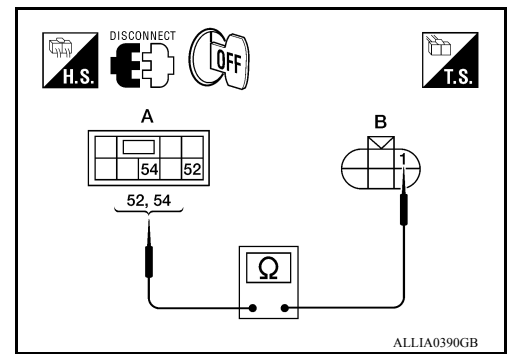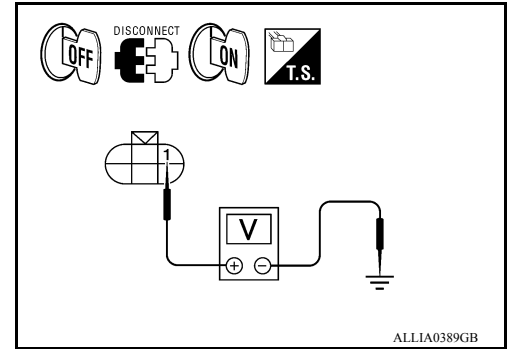

Diagnosis Procedure - With Daytime Light System

INFOID:000000009878517

Regarding Wiring Diagram information, refer to [EXL-89. "Wiring Diagram"](#).

1. CHECK HEADLAMP (LO) FUSES

1. Turn the ignition switch OFF.
2. Check that the following fuses are not open.

HEADLAMP (LO) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >


Unit	Location	Fuse No.	Capacity
Headlamp LO (LH)	IPDM E/R	40	15A
Headlamp LO (RH)	IPDM E/R	41	15A

Is the fuse open?

- YES >> Repair the harness and replace the fuse.
 NO >> GO TO 2.

2.CHECK HEADLAMP (LO) OUTPUT VOLTAGE

1. Turn the ignition switch OFF.
2. Disconnect the front combination lamp connector.
3. Turn the ignition switch ON.
4. Turn the low beam headlamps ON.
5. With the low beam headlamps ON, check the voltage between the combination lamp connector and ground.

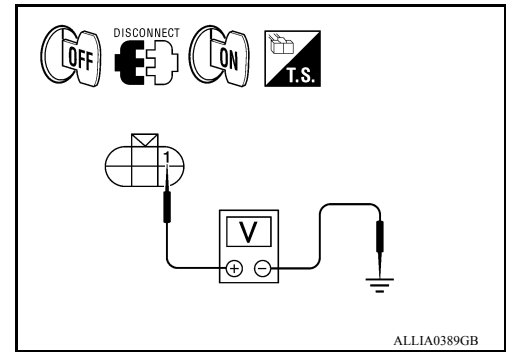


(+)		Terminal	(-)	Voltage
Connector	Terminal			
LH	E6	1	Ground	Battery voltage
RH	E108	1		

Is voltage reading as specified?

- YES >> GO TO 4.
 NO >> GO TO 3.

3.CHECK HEADLAMP (LO) CIRCUIT FOR OPEN

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector E123.
3. Check continuity between the IPDM E/R harness connector (A) and the front combination lamp harness connector (B).

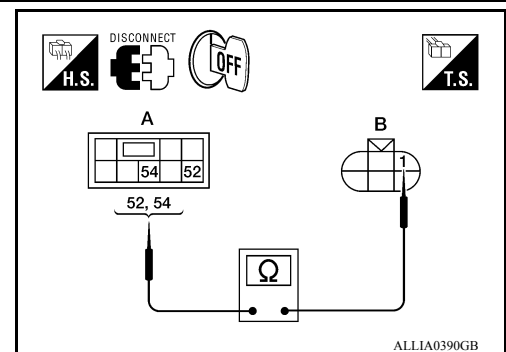

A		B		Continuity
Connector	Terminal	Connector	Terminal	
LH	E123	E6	52	Yes
RH			54	

Does continuity exist?

- YES >> Replace IPDM E/R. Refer to [PCS-28. "Removal and Installation of IPDM E/R"](#).
 NO >> Repair the harnesses or connectors.


4.CHECK FRONT COMBINATION LAMP (LO) GROUND CIRCUIT

Check continuity between the front combination lamp harness connector terminal and ground.

Connector	Terminal	—	Continuity
LH	E6	Ground	Yes
RH	E108		

Does continuity exist?

- YES >> Inspect the headlamp bulb.
 NO >> Repair the harness.

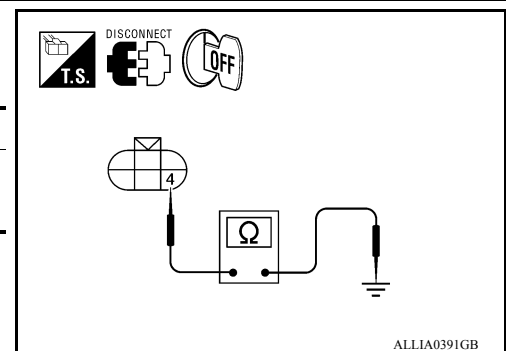

FRONT FOG LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

FRONT FOG LAMP CIRCUIT

Description

INFOID:000000009878518

The IPDM E/R (intelligent power distribution module engine room) controls the front fog lamp relay based on inputs from the BCM via the CAN communication lines. When the front fog lamp relay is energized, power flows from the front fog lamp relay in the IPDM E/R to the front fog lamps.

Component Function Check

INFOID:000000009878519

1. CHECK FRONT FOG LAMP OPERATION

⊗ WITHOUT CONSULT

1. Activate IPDM E/R auto active test. Refer to [PCS-11, "Diagnosis Description"](#).
2. Check that the front fog lamp is turned ON.

Ⓟ WITH CONSULT

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the test items, Check that the front fog lamp is turned ON.

FOG : Front fog lamp ON

OFF : Front fog lamp OFF

Is the front fog lamp turned ON?

- YES >> Front fog lamp circuit is normal.
 NO >> Refer to [EXL-44, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009878520

Regarding Wiring Diagram information, refer to [EXL-95, "Wiring Diagram"](#).

1. CHECK FRONT FOG LAMP FUSE

1. Turn the ignition switch OFF.
2. Check that the following fuses are not open.

Unit	Location	Fuse No.	Capacity
Front fog lamp	IPDM E/R	56	15A


Is the fuse open?

- YES >> Repair the harness and replace the fuse.
 NO >> GO TO 2.

2. CHECK FRONT FOG LAMP OUTPUT VOLTAGE

1. Turn the ignition switch OFF.
2. Disconnect the front fog lamp connector.
3. Turn the ignition switch ON.
4. Turn the front fog lamps ON.
5. Check the voltage between the fog lamp connector and ground.

(+) Connector		Terminal	(-) Ground	Voltage
LH	E101	1	Ground	Battery voltage
RH	E102	1		

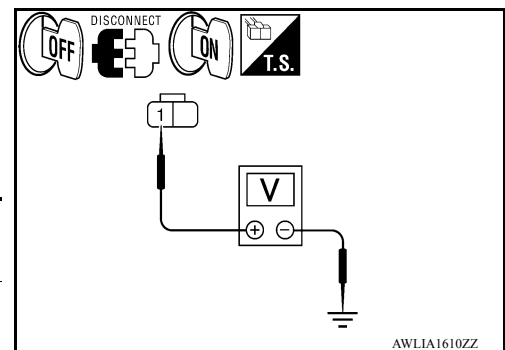

AWLIA1610ZZ

Are the voltage readings as specified?

- YES >> GO TO 4.
 NO >> GO TO 3.


FRONT FOG LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

3. CHECK FRONT FOG LAMP OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector E123.
3. Check continuity between the IPDM E/R harness connector and the front fog lamp harness connector.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
LH	E123	50	E101	Yes
RH		51	E102	

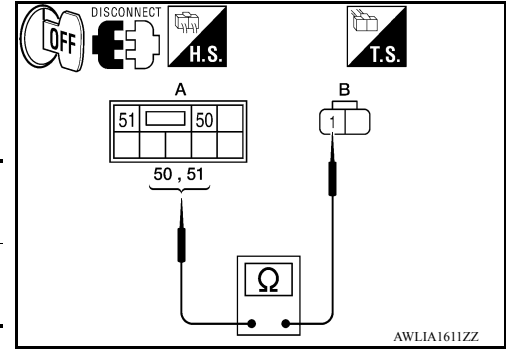

Does continuity exist?


YES >> Replace IPDM E/R. Refer to [PCS-28, "Removal and Installation of IPDM E/R"](#).

NO >> Repair the harnesses or connectors.

4. CHECK FRONT FOG LAMP GROUND CIRCUIT

1. Disconnect the front fog lamp connector.
2. Check continuity between the front fog lamp harness connector and ground.

Connector	Terminal	—	Continuity
LH	E101	Ground	Yes
RH	E102		

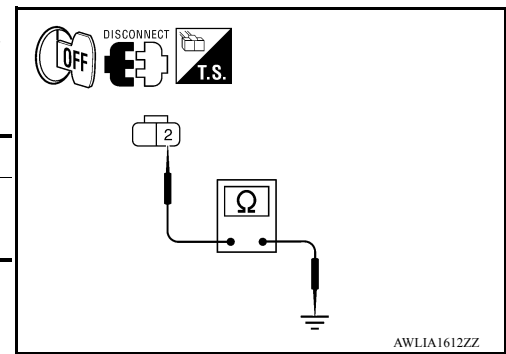

Does continuity exist?

YES >> Inspect the fog lamp bulb.

NO >> Repair the harness.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

PARKING LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

PARKING LAMP CIRCUIT

Description

INFOID:000000009878521

The IPDM E/R (intelligent power distribution module engine room) controls the tail lamp relay based on inputs from the BCM via the CAN communication lines. When the tail lamp relay is energized, power flows through fuse 37, located in the IPDM E/R. Power then flows to the front and rear combination lamps.

Component Function Check

INFOID:000000009878522

1. CHECK PARKING LAMP OPERATION

WITHOUT CONSULT

1. Activate IPDM E/R auto active test. Refer to [PCS-11, "Diagnosis Description"](#).
2. Check that the parking lamp is turned ON.

WITH CONSULT

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. While operating the test item, check that the parking lamp is turned ON.

TAIL : Parking lamp ON

OFF : Parking lamp OFF

Is the parking lamp turned ON?

YES >> Parking lamp circuit is normal.

NO >> Refer to [EXL-46, "Diagnosis Procedure - Without Daytime Light System"](#), [EXL-49, "Diagnosis Procedure - With Daytime Light System"](#).

Diagnosis Procedure - Without Daytime Light System

INFOID:000000009878523

Regarding Wiring Diagram information, refer to [EXL-107, "Wiring Diagram"](#).

1. CHECK PARKING LAMP FUSES

1. Turn the ignition switch OFF.
2. Check that the following fuses are not open.

Unit	Location	Fuse No.	Capacity
Parking lamps	IPDM E/R	37	10A

Is the fuse open?

YES >> Repair the harness and replace the fuse.

NO >> GO TO 2.

2. CHECK TAIL LAMP RELAY OUTPUT (VOLTAGE)


1. Turn the ignition switch OFF.
2. Disconnect the front combination lamp connector, rear combination lamp connector and license plate lamp connector.
3. Turn the ignition switch ON.
4. Turn the parking lamps ON.

PARKING LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >


5. With the parking lamps ON, check voltage between the front combination lamp connectors and ground.

		(+)		(-)	Voltage
		Connector	Terminal		
LH	E11	6		Ground	Battery voltage
RH	E107				

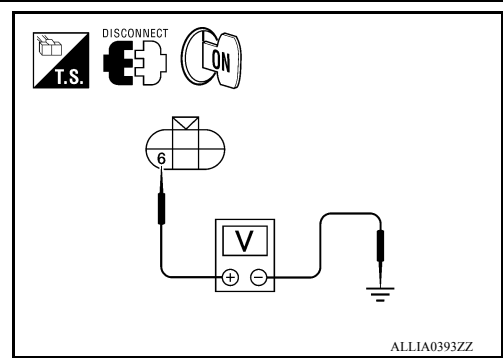


6. With the parking lamps ON, check voltage between the rear combination lamp connectors and ground.

		(+)		(-)	Voltage
		Connector	Terminal		
LH	C13	6		Ground	Battery voltage
RH	C14				

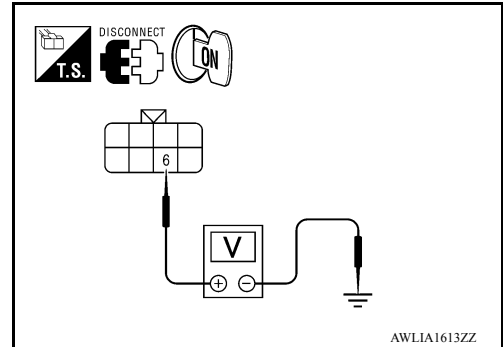

7. With the parking lamps ON, check voltage between the license plate lamp connector and ground.

		(+)		(-)	Voltage
		Connector	Terminal		
		C12	1	Ground	Battery voltage

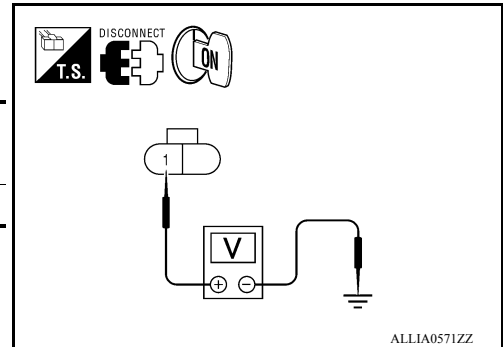


Are voltage readings as specified?

- YES >> GO TO 4.
NO >> GO TO 3.

3. CHECK PARKING, LICENSE PLATE AND TAIL LAMP CIRCUIT (OPEN)

- Turn the ignition switch OFF.
- Disconnect IPDM E/R connector E124.
- Check continuity between the IPDM E/R harness connector (A) and the front combination lamp harness connector (B).

A			B		Continuity
Connector	Terminal		Connector	Terminal	
LH	E124	57	E11	6	Yes
RH			E107		

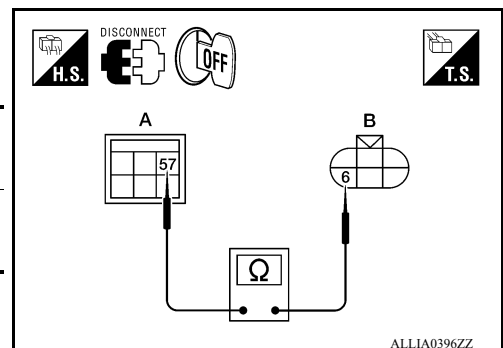


A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

PARKING LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >


4. Check continuity between the IPDM E/R harness connector (A) and the rear combination lamp harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
LH	E124	57	C13	Yes
RH			C14	

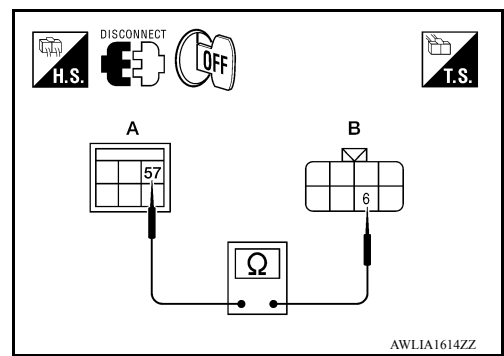

5. Check continuity between the IPDM E/R harness connector (A) and license plate lamp connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
E124	57	C12	1	Yes

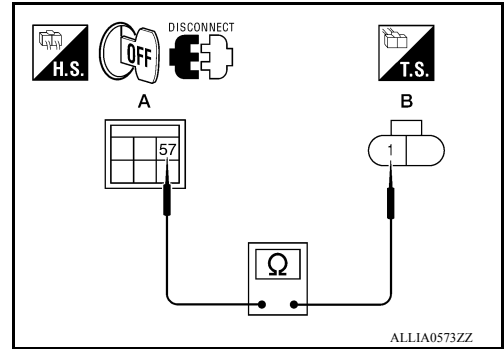

Are continuity test results as specified?


YES >> Replace IPDM E/R. Refer to [PCS-28, "Removal and Installation of IPDM E/R"](#).

NO >> Repair the harnesses or connectors.

4. CHECK PARKING, LICENSE AND TAIL LAMP GROUND CIRCUITS


1. Check continuity between the front combination lamp harness connectors E11 and E107 terminal 4 and ground.

Connector		Terminal	—	Continuity
LH	E11	4	Ground	Yes
RH	E107			

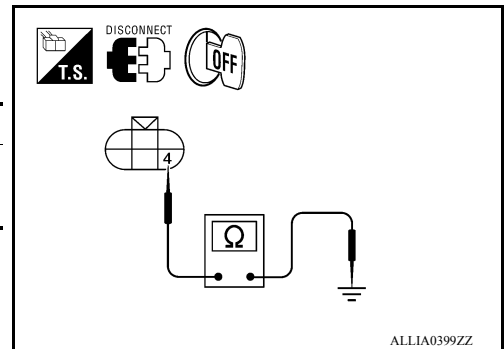

2. Check continuity between the rear combination lamp harness connectors and ground.

Connector		Terminal	—	Continuity
LH	C13	1	Ground	Yes
RH	C14			

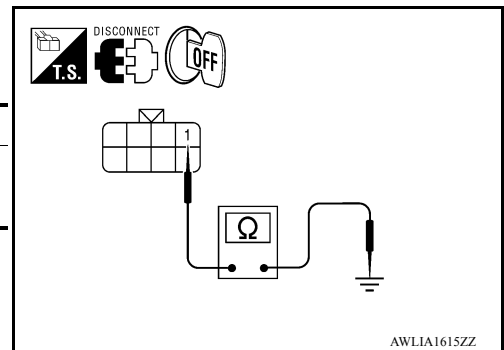

PARKING LAMP CIRCUIT


< DTC/CIRCUIT DIAGNOSIS >

- Check continuity between the license plate lamp harness connector and ground.

Connector	Terminal	—	Continuity
C12	2	Ground	Yes

Does continuity exist?

- YES >> Inspect the parking lamp bulb.
 NO >> Repair the harness.

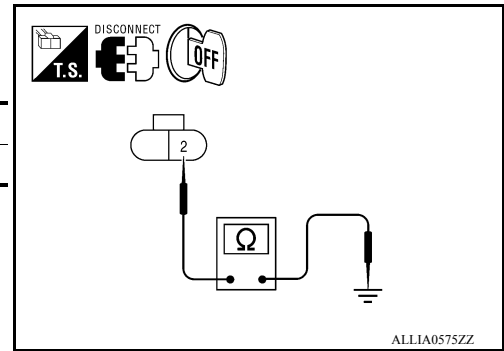

Diagnosis Procedure - With Daytime Light System

INFOID:000000009878524

Regarding Wiring Diagram information, refer to [EXL-107. "Wiring Diagram"](#).

1. CHECK PARKING LAMP FUSES

- Turn the ignition switch OFF.
- Check that the following fuses are not open.

Unit	Location	Fuse No.	Capacity
Parking lamps	IPDM E/R	37	10A


Is the fuse open?

- YES >> Repair the harness and replace the fuse.
 NO >> GO TO 2.

2. CHECK TAIL LAMP RELAY OUTPUT (VOLTAGE)


- Turn the ignition switch OFF.
- Disconnect the front combination lamp connector, rear combination lamp connector and license plate lamp connector.
- Turn the ignition switch ON.
- Turn the parking lamps ON.
- With the parking lamps ON, check voltage between the front combination lamp connectors and ground.

(+)		Terminal	(-)	Voltage
Connector				
LH	E6	6	Ground	Battery voltage
RH	E108			

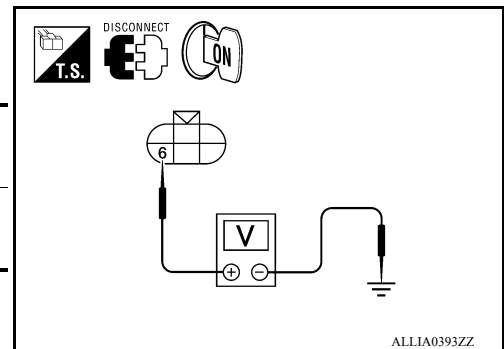

- With the parking lamps ON, check voltage between the rear combination lamp connectors and ground.

(+)		Terminal	(-)	Voltage
Connector				
LH	C13	6	Ground	Battery voltage
RH	C14			

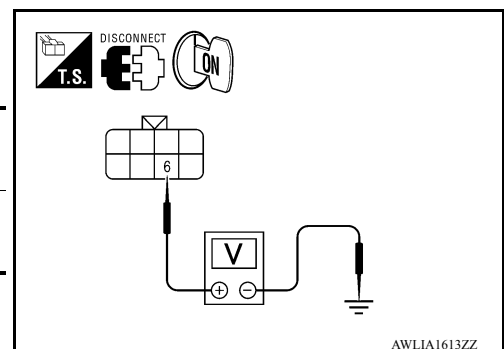

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

PARKING LAMP CIRCUIT


< DTC/CIRCUIT DIAGNOSIS >

7. With the parking lamps ON, check voltage between the license plate lamp connector and ground

(+)		(-)	Voltage
Connector	Terminal		
C12	1	Ground	Battery voltage

Are voltage readings as specified?


- YES >> GO TO 4.
NO >> GO TO 3.

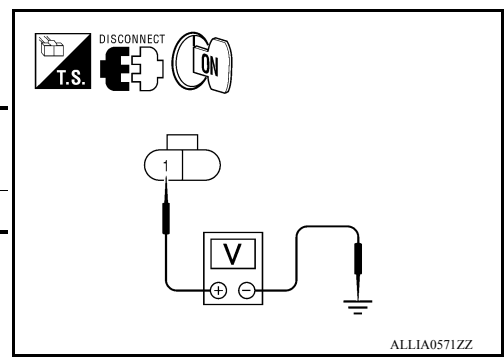

3. CHECK PARKING, LICENSE PLATE AND TAIL LAMP CIRCUIT (OPEN)


- Turn the ignition switch OFF.
- Disconnect IPDM E/R connector E124.
- Check continuity between the IPDM E/R harness connector (A) and the front combination lamp harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
LH	E124	57	E6	Yes
RH			E108	

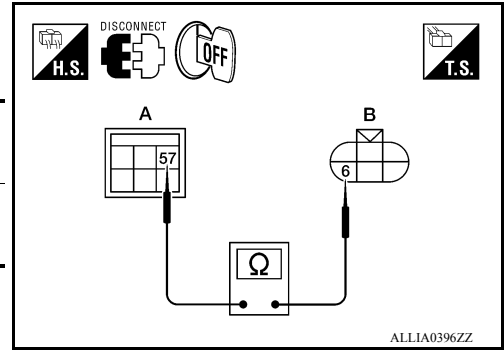

- Check continuity between the IPDM E/R harness connector (A) and the rear combination lamp harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
LH	E124	57	C13	Yes
RH			C14	

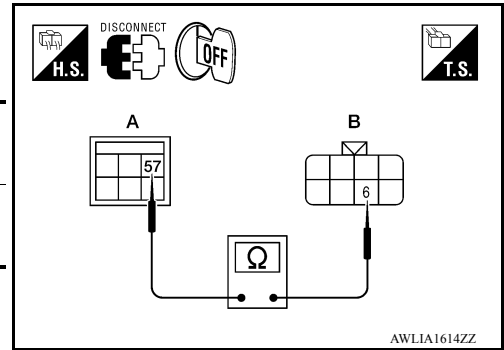


- Check continuity between the IPDM E/R harness connector (A) and license plate lamp connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
E124	57	C12	1	Yes

Are continuity test results as specified?

- YES >> Replace IPDM E/R. Refer to [PCS-28, "Removal and Installation of IPDM E/R"](#).
NO >> Repair the harnesses or connectors.

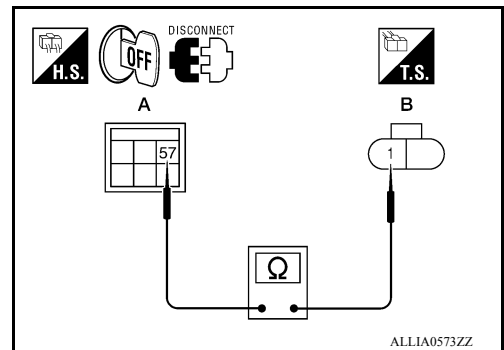


4. CHECK PARKING, LICENSE AND TAIL LAMP GROUND CIRCUITS

PARKING LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >


1. Check continuity between the front combination lamp harness connectors E6 and E108 terminal 4 and ground.

Connector		Terminal	—	Continuity
LH	E6	4	Ground	Yes
RH	E108			

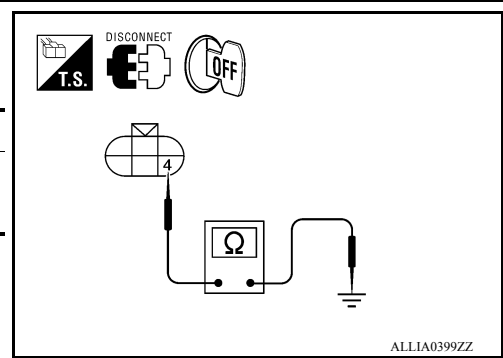

2. Check continuity between the rear combination lamp harness connectors and ground.

Connector		Terminal	—	Continuity
LH	C13	1	Ground	Yes
RH	C14			

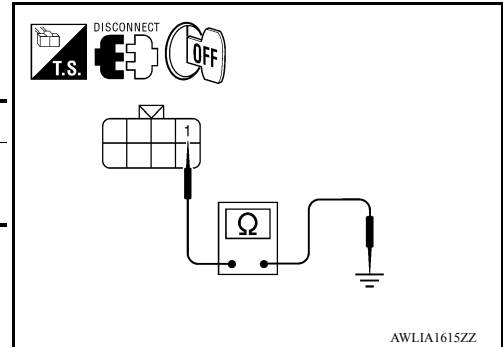


3. Check continuity between the license plate lamp harness connector and ground.

Connector		Terminal	—	Continuity
C12		2	Ground	Yes

Does continuity exist?

- YES >> Inspect the parking lamp bulb.
 NO >> Repair the harness.

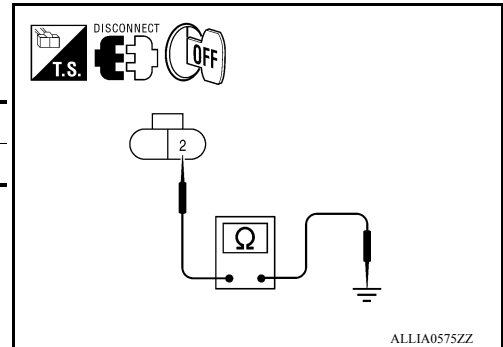

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

TURN SIGNAL LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

TURN SIGNAL LAMP CIRCUIT

Description

INFOID:000000009878525

The BCM monitors inputs from the combination switch (lighting and turn signal switch) to determine when to activate the turn signals. The BCM outputs voltage direction to the left and right turn signals during turn signal operation or both during hazard warning operation. The BCM sends a turn signal indicator request to the combination meter via the CAN communication lines.

The BCM performs the fast flasher operation (fail-safe) if any bulb or harness of the turn signal lamp circuit is open.

NOTE:

Turn signal lamp blinks at normal speed when using the hazard warning lamp.

Component Function Check

INFOID:000000009878526

1. CHECK TURN SIGNAL LAMP

Ⓜ WITH CONSULT

1. Select "FLASHER" of BCM (FLASHER) active test item.
2. With operating the test items, check that the turn signal lamp blinks.

LH : Turn signal lamp LH blinking

RH : Turn signal lamp RH blinking

OFF : The turn signal lamp OFF

Does the turn signal lamp blink?

YES >> Turn signal lamp circuit is normal.

NO >> Refer to [EXL-52, "Diagnosis Procedure - Without Daytime Light System"](#), [EXL-55, "Diagnosis Procedure - With Daytime Light System"](#).

Diagnosis Procedure - Without Daytime Light System

INFOID:000000009878527

Regarding Wiring Diagram information, refer to [EXL-99, "Wiring Diagram"](#).

1. CHECK TURN SIGNAL LAMP BULB

Check the applicable lamp bulb to be sure the proper bulb standard is in use and the bulb is not open.

Is the bulb OK?

YES >> GO TO 2.

NO >> Replace the bulb.


2. CHECK TURN SIGNAL LAMP OUTPUT VOLTAGE

1. Turn the ignition switch OFF.
2. Disconnect the front combination lamp connector, door mirror connector (if equipped with turn signals in the mirrors) and the rear combination lamp connector.
3. Turn the ignition switch ON.
4. With turn signal switch operating, check the voltage between the front combination lamp harness connector and ground.


(+)		(-)	Voltage
Connector	Terminal		

TURN SIGNAL LAMP CIRCUIT


< DTC/CIRCUIT DIAGNOSIS >

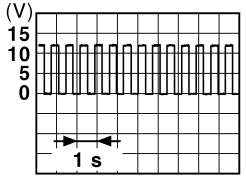E11	LH			
E107	RH	5	Ground	 <small>PKID0926E</small>

5. With turn signal switch operating, check the voltage between the rear combination lamp harness connector and ground.

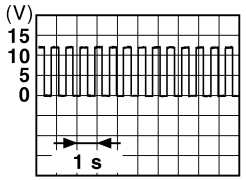(+)		Terminal	(-)	Voltage
Connector	Terminal			
C13	LH	8	Ground	 <small>PKID0926E</small>
C14	RH			

6. With turn signal switch operating, check the voltage between the door mirror (if equipped with turn signals in the mirrors) harness connector and ground.

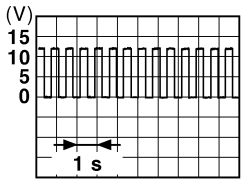(+)		Terminal	(-)	Voltage
Connector	Terminal			
D4	LH	15	Ground	 <small>PKID0926E</small>
D107	RH			

Is voltage reading as specified?

YES >> GO TO 5.

NO >> GO TO 3.

3. CHECK TURN SIGNAL LAMP CIRCUIT FOR OPEN

1. Turn the ignition switch OFF.
2. Disconnect BCM connector M20.
3. Check continuity between the BCM harness connector and the front combination lamp connector.

Connector	Terminal	Connector	Terminal	Continuity
Front LH	M20	60	E11	Yes
Front RH		61	E107	

4. Check continuity between the BCM harness connector and the rear combination lamp connector.

Connector	Terminal	Connector	Terminal	Continuity
Rear LH	M20	60	C13	Yes
Rear RH		61	C14	

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

EXL

TURN SIGNAL LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

5. Check continuity between the BCM harness connector and the door mirror connector (if equipped with turn signals in the mirrors).

Connector		Terminal	Connector	Terminal	Continuity
Door mirror LH	M20	60	D4	15	Yes
Door mirror RH		61	D107		

Are continuity test results as specified?

YES >> GO TO 4.

NO >> Repair the harnesses or connectors.

4. CHECK TURN SIGNAL LAMP SHORT CIRCUIT

Check continuity between the BCM harness connector M20 and ground.

Connector		Terminal	—	Continuity
LH	M20	60	Ground	No
RH		61		

Does continuity exist?


YES >> Repair the harnesses or connectors.

NO >> Replace BCM. Refer to [BCS-52. "Removal and Installation"](#).

5. CHECK TURN SIGNAL LAMP GROUND CIRCUIT


1. Check continuity between the front combination lamp harness connector and ground.

Connector		Terminal	—	Continuity
Front LH	E11	4	Ground	Yes
Front RH	E107			

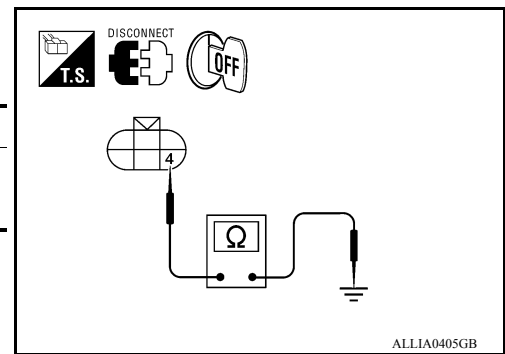


2. Check continuity between the rear combination lamp harness connector and ground.

Connector		Terminal	—	Continuity
Rear LH	C13	1	Ground	Yes
Rear RH	C14			

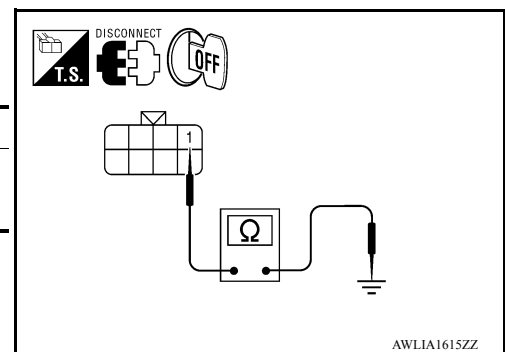

3. Check continuity between the door mirrors and ground (if equipped with turn signals in the mirrors).

Connector		Terminal	—	Continuity
Door mirror RH	D107	11	Ground	Yes
Door mirror LH	D4			

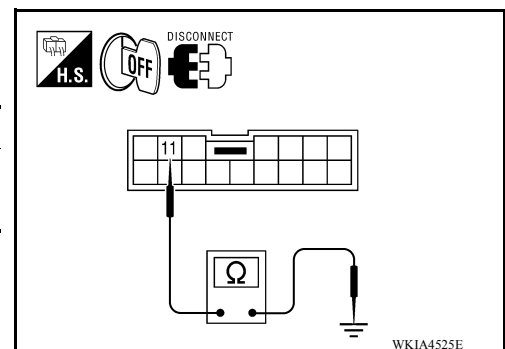

Are continuity test results as specified?

YES >> Replace the malfunctioning lamp.

NO >> Repair the harnesses or connectors.

TURN SIGNAL LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Diagnosis Procedure - With Daytime Light System

INFOID:00000009878528

Regarding Wiring Diagram information, refer to [EXL-99. "Wiring Diagram"](#).

1. CHECK TURN SIGNAL LAMP BULB

Check the applicable lamp bulb to be sure the proper bulb standard is in use and the bulb is not open.

Is the bulb OK?

YES >> GO TO 2.

NO >> Replace the bulb.

2. CHECK TURN SIGNAL LAMP OUTPUT VOLTAGE

1. Turn the ignition switch OFF.
2. Disconnect the front combination lamp connector, door mirror connector (if equipped with turn signals in the mirrors) and the rear combination lamp connector.
3. Turn the ignition switch ON.
4. With turn signal switch operating, check the voltage between the front combination lamp harness connector and ground.

(+)		Terminal	(-)	Voltage
Connector				
E6	LH	5	Ground	<p style="text-align: right; font-size: small;">PKID0926E</p>
E108	RH			

5. With turn signal switch operating, check the voltage between the rear combination lamp harness connector and ground.

(+)		Terminal	(-)	Voltage
Connector				
C13	LH	8	Ground	<p style="text-align: right; font-size: small;">PKID0926E</p>
C14	RH			


6. With turn signal switch operating, check the voltage between the door mirror (if equipped with turn signals in the mirrors) harness connector and ground.

(+)		Terminal	(-)	Voltage
Connector				

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

TURN SIGNAL LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

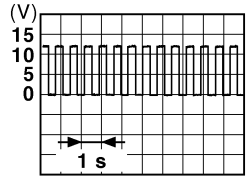D4	LH			
D107	RH	15	Ground	

PKID0926E

Is voltage reading as specified?

- YES >> GO TO 5.
 NO >> GO TO 3.

3. CHECK TURN SIGNAL LAMP CIRCUIT FOR OPEN

1. Turn the ignition switch OFF.
2. Disconnect BCM connector M20.
3. Check continuity between the BCM harness connector and the front combination lamp connector.

Connector		Terminal	Connector	Terminal	Continuity
Front LH	M20	60	E6	5	Yes
Front RH		61	E108		

4. Check continuity between the BCM harness connector and the rear combination lamp connector.

Connector		Terminal	Connector	Terminal	Continuity
Rear LH	M20	60	C13	8	Yes
Rear RH		61	C14		

5. Check continuity between the BCM harness connector and the door mirror connector (if equipped with turn signals in the mirrors).

Connector		Terminal	Connector	Terminal	Continuity
Door mirror LH	M20	60	D4	15	Yes
Door mirror RH		61	D107		

Are continuity test results as specified?

- YES >> GO TO 4.
 NO >> Repair the harnesses or connectors.

4. CHECK TURN SIGNAL LAMP SHORT CIRCUIT

Check continuity between the BCM harness connector M20 and ground.

Connector		Terminal	—	Continuity
LH	M20	60	Ground	No
RH		61		

Does continuity exist?

- YES >> Repair the harnesses or connectors.
 NO >> Replace BCM. Refer to [BCS-52. "Removal and Installation"](#).


5. CHECK TURN SIGNAL LAMP GROUND CIRCUIT

TURN SIGNAL LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >


1. Check continuity between the front combination lamp harness connector and ground.

Connector		Terminal	—	Continuity
Front LH	E6	4	Ground	Yes
Front RH	E108			

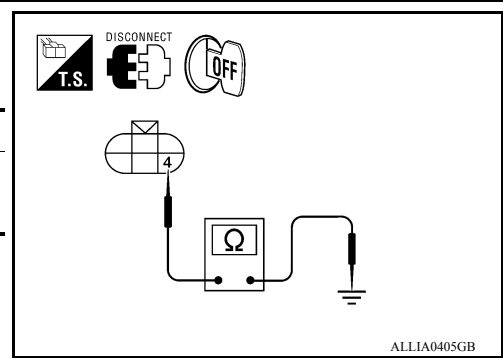


2. Check continuity between the rear combination lamp harness connector and ground.

Connector		Terminal	—	Continuity
Rear LH	C13	1	Ground	Yes
Rear RH	C14			

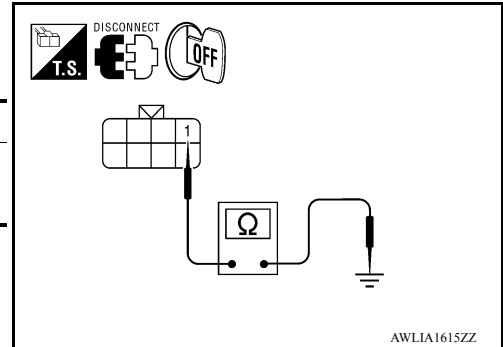

3. Check continuity between the door mirrors and ground (if equipped with turn signals in the mirrors).

Connector		Terminal	—	Continuity
Door mirror RH	D107	11	Ground	Yes
Door mirror LH	D4			

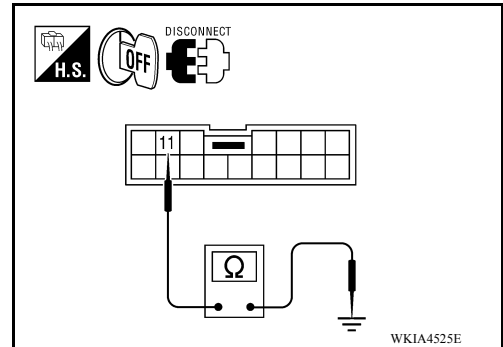

Are continuity test results as specified?

- YES >> Replace the malfunctioning lamp.
 NO >> Repair the harnesses or connectors.

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

OPTICAL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

OPTICAL SENSOR

Description

INFOID:000000009878529

The optical sensor converts the outside brightness (lux) to voltage and transmits the optical sensor signal to the BCM.

Component Function Check

INFOID:000000009878530

1. CHECK OPTICAL SENSOR SIGNAL BY CONSULT

Ⓟ WITH CONSULT

1. Turn the ignition switch ON.
2. Select OPTICAL SENSOR of BCM (HEAD LAMP) Data Monitor item.
3. Turn the lighting switch to AUTO.

Monitor item	Condition	Voltage
OPTICAL SENSOR	When outside of vehicle is bright	3.1V or more *
	When outside of vehicle is dark	0.6V or less

*: Illuminates the optical sensor. The value may be less than the standard value if brightness is weak.

Is the item status normal?

- YES >> Optical sensor is normal.
 NO >> Refer to [EXL-58, "Diagnosis Procedure"](#).

Diagnosis Procedure


INFOID:000000009878531

Regarding Wiring Diagram information, refer to [EXL-82, "Wiring Diagram"](#).

1. CHECK OPTICAL SENSOR GROUND CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect BCM connector M18 and optical sensor connector M302.
3. Check continuity between BCM harness connector M18 (A) terminal 18 and optical sensor harness connector M302 (B) terminal 3.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M18	18	M302	3	Yes

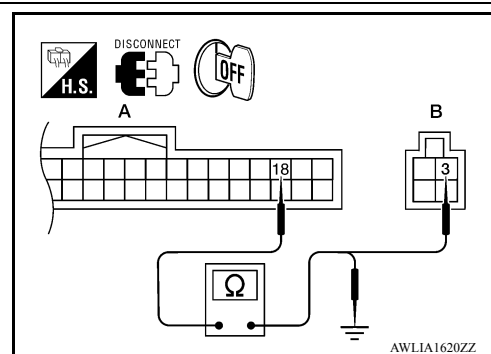

4. Check continuity between BCM harness connector M18 (A) terminal 18 and ground.

A		—	Continuity
Connector	Terminal		
M18	18	Ground	No

Are continuity test results as specified?

- YES >> GO TO 2.
 NO >> Repair harness or connector.

2. CHECK OPTICAL SENSOR SIGNAL CIRCUIT

OPTICAL SENSOR


< DTC/CIRCUIT DIAGNOSIS >

1. Check continuity between BCM harness connector M20 (A) terminal 58 and optical sensor harness connector M302 (B) terminal 4.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M20	58	M302	4	Yes

2. Check continuity between BCM harness connector M20 (A) terminal 58 and ground.

A		—	Continuity
Connector	Terminal		
M20	58	Ground	No

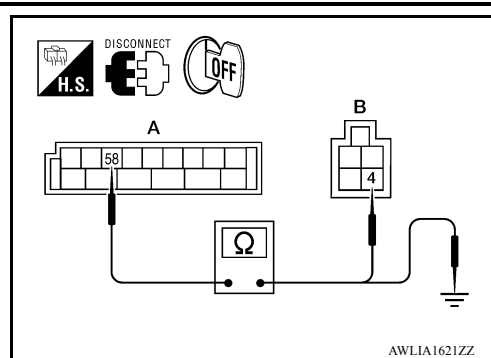

Are the continuity test results as specified?

- YES >> Replace the optical sensor. Refer to [EXL-141, "Removal and Installation"](#).
 NO >> Repair harness or connector.

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

ECU DIAGNOSIS INFORMATION

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:0000000010619802

NOTE:

The Signal Tech II Tool (J-50190) can be used to perform the following functions. Refer to the Signal Tech II User Guide for additional information.

- Activate and display TPMS transmitter IDs
- Display tire pressure reported by the TPMS transmitter
- Read TPMS DTCs
- Register TPMS transmitter IDs
- Test remote keyless entry keyfob relative signal strength

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition	Value/Status
ACC ON SW	Ignition switch OFF or ON	Off
	Ignition switch ACC	On
AIR COND SW	A/C switch OFF	Off
	A/C switch ON	On
AIR PRESS FL	Front left tire air pressure value	kPa, kg/cm ² , psi
AIR PRESS FR	Front right tire air pressure value	kPa, kg/cm ² , psi
AIR PRESS RL	Rear left tire air pressure value	kPa, kg/cm ² , psi
AIR PRESS RR	Rear right tire air pressure value	kPa, kg/cm ² , psi
AUTO LIGHT SW	Lighting switch OFF	Off
	Lighting switch AUTO	On
BRAKE SW	Brake pedal released	Off
	Brake pedal applied	On
BUCKLE SW	Seat belt buckle unfastened	Off
	Seat belt buckle fastened	On
BUZZER	Buzzer in combination meter OFF	Off
	Buzzer in combination meter ON	On
CARGO LAMP SW	Cargo lamp switch OFF	Off
	Cargo lamp switch ON	On
CDL LOCK SW	Door lock/unlock switch does not operate	Off
	Press door lock/unlock switch to the LOCK side	On
CDL UNLOCK SW	Door lock/unlock switch does not operate	Off
	Press door lock/unlock switch to the UNLOCK side	On
DOOR SW-AS	Front door RH closed	Off
	Front door RH opened	On
DOOR SW-DR	Front door LH closed	Off
	Front door LH opened	On
DOOR SW-RL	Rear door LH closed	Off
	Rear door LH opened	On
DOOR SW-RR	Rear door RH closed	Off
	Rear door RH opened	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status	
FAN ON SIG	Blower motor fan switch OFF	Off	A
	Blower motor fan switch ON	On	
FR FOG SW	Front fog lamp switch OFF	Off	B
	Front fog lamp switch ON	On	
FR WASHER SW	Front washer switch OFF	Off	C
	Front washer switch ON	On	
FR WIPER LOW	Front wiper switch OFF	Off	D
	Front wiper switch LO	On	
FR WIPER HI	Front wiper switch OFF	Off	E
	Front wiper switch HI	On	
FR WIPER INT	Front wiper switch OFF	Off	F
	Front wiper switch INT	On	
FR WIPER STOP	Any position other than front wiper stop position	Off	G
	Front wiper stop position	On	
HAZARD SW	When hazard switch is not pressed	Off	H
	When hazard switch is pressed	On	
HEAD LAMP SW1	Headlamp switch OFF	Off	I
	Headlamp switch 1st	On	
HEAD LAMP SW2	Headlamp switch OFF	Off	J
	Headlamp switch 1st	On	
HI BEAM SW	High beam switch OFF	Off	K
	High beam switch HI	On	
ID REGST FL1	ID registration of front left tire incomplete	YET	EXL
	ID registration of front left tire complete	DONE	
ID REGST FR1	ID registration of front right tire incomplete	YET	
	ID registration of front right tire complete	DONE	
ID REGST RL1	ID registration of rear left tire incomplete	YET	
	ID registration of rear left tire complete	DONE	
ID REGST RR1	ID registration of rear right tire incomplete	YET	
	ID registration of rear right tire complete	DONE	
IGN ON SW	Ignition switch OFF or ACC	Off	M
	Ignition switch ON	On	
IGN SW CAN	Ignition switch OFF or ACC	Off	N
	Ignition switch ON	On	
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	1 - 7	
KEY CYL LK-SW	Door key cylinder LOCK position	Off	O
	Door key cylinder other than LOCK position	On	
KEY CYL UN-SW	Door key cylinder UNLOCK position	Off	P
	Door key cylinder other than UNLOCK position	On	
KEY ON SW	Mechanical key is removed from key cylinder	Off	
	Mechanical key is inserted to key cylinder	On	
KEYLESS LOCK	LOCK button of key fob is not pressed	Off	
	LOCK button of key fob is pressed	On	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >


Monitor Item	Condition	Value/Status
KEYLESS PANIC	PANIC button of key fob is not pressed	Off
	PANIC button of key fob is pressed	On
KEYLESS UNLOCK	UNLOCK button of key fob is not pressed	Off
	UNLOCK button of key fob is pressed	On
LIGHT SW 1ST	Lighting switch OFF	Off
	Lighting switch 1st	On
OIL PRESS SW	• Ignition switch OFF or ACC • Engine running	Off
	Ignition switch ON	On
OPTICAL SENSOR	Bright outside of the vehicle	Close to 5V
	Dark outside of the vehicle	Close to 0V
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
REAR DEF SW	Rear window defogger switch OFF	Off
	Rear window defogger switch ON	On
TURN SIGNAL L	Turn signal switch OFF	Off
	Turn signal switch LH	On
TURN SIGNAL R	Turn signal switch OFF	Off
	Turn signal switch RH	On
VEHICLE SPEED	While driving	Equivalent to speedometer reading
WARNING LAMP	Low tire pressure warning lamp in combination meter OFF	Off
	Low tire pressure warning lamp in combination meter ON	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal Layout

INFOID:000000010619803

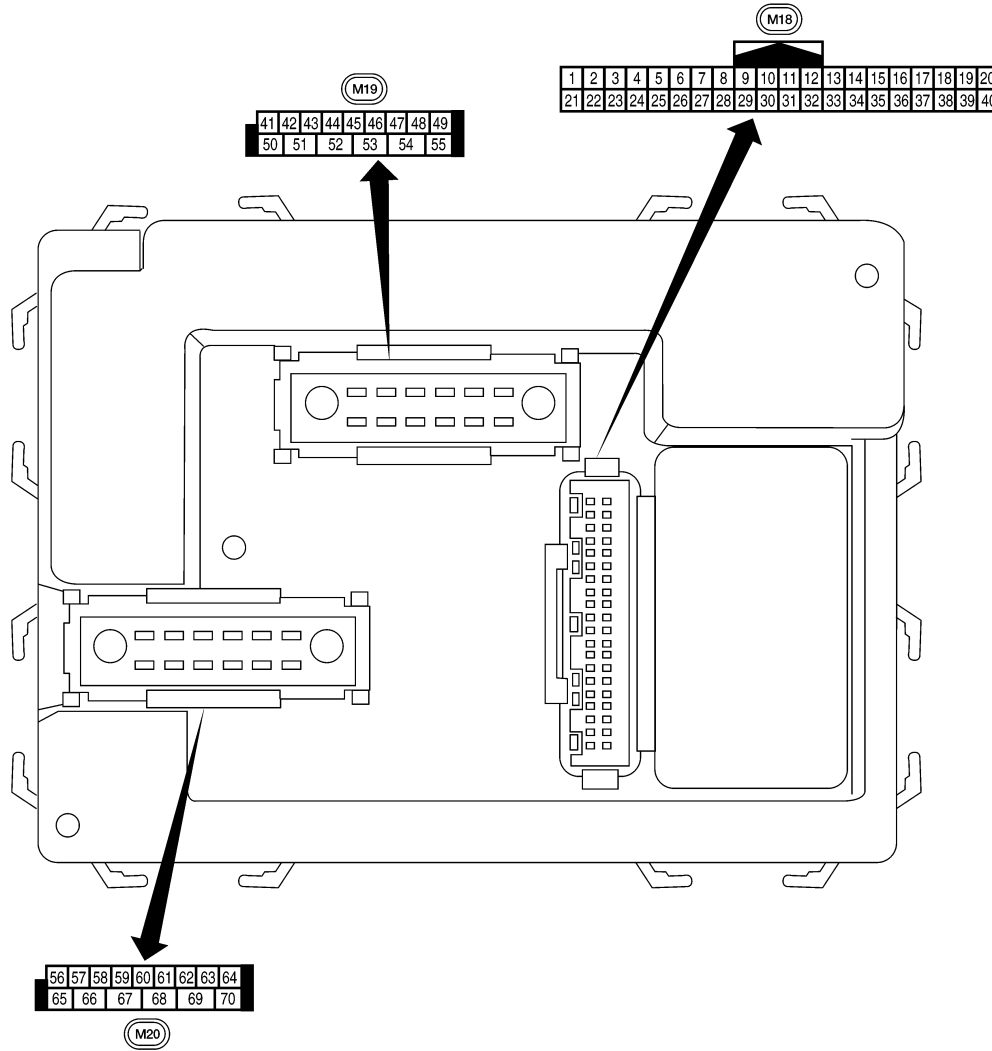

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P





Physical Values

AWMIA154ZZZ

INFOID:000000010619804





BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

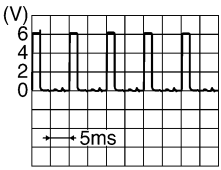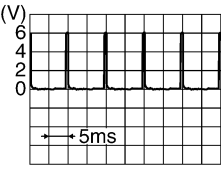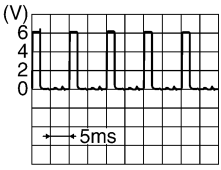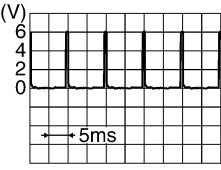Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
1	BR/W	Key ring output	Output	OFF	ON (driver door open)	0V
					OFF (driver door closed)	Battery voltage
2	SB	Combination switch input 5	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
3	G/Y	Combination switch input 4	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
4	Y	Combination switch input 3	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
5	G/B	Combination switch input 2	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
6	V	Combination switch input 1				
9	R/G	Brake switch	Input	ON	Brake pedal depressed	Battery voltage
					Brake pedal released	0V
11	O	Ignition switch (ACC or ON)	Input	ACC or ON	Ignition switch ACC or ON	Battery voltage
12	R/L	Front door switch RH (All)	Input	OFF	ON (open)	0V
		Rear door switch lower RH (King Cab)			OFF (closed)	Battery voltage
		Rear door switch upper RH (King Cab)				
13	GR	Rear door switch RH (Crew Cab)	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
15	L/W	Tire pressure warning check connector	Input	OFF	—	5V
18	P	Remote keyless entry receiver and optical sensor (ground)	Output	OFF	—	0V





BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

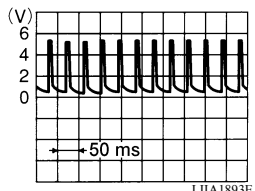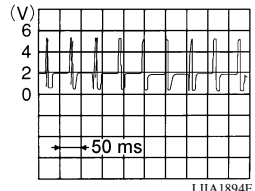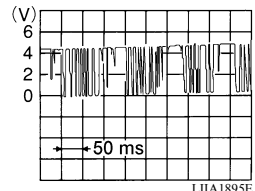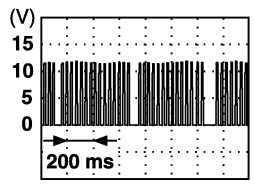Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
19	V/W	Remote keyless entry receiver (power supply)	Output	OFF	Ignition switch OFF	 <p style="text-align: right; font-size: small;">LHA1893E</p>
20	G/W	Remote keyless entry receiver (signal)	Input	OFF	Stand-by (keyfob buttons released)	 <p style="text-align: right; font-size: small;">LHA1894E</p>
					When remote keyless entry receiver receives signal from keyfob (keyfob buttons pressed)	 <p style="text-align: right; font-size: small;">LHA1895E</p>
21	G	NATS antenna amp.	Input	OFF → ON	Ignition switch (OFF → ON)	Just after turning ignition switch ON: Pointer of tester should move for approx. 1 second, then return to battery voltage.
22	G	BUS	—	—	Ignition switch ON or power window timer operates	 <p style="text-align: right; font-size: small;">PIIA2344E</p>
23	G/O	Security indicator lamp	Output	OFF	Goes OFF → illuminates (Every 2.4 seconds)	Battery voltage → 0V
25	BR	NATS antenna amp.	Input	OFF → ON	Ignition switch (OFF → ON)	Just after turning ignition switch ON: Pointer of tester should move for approx. 1 second, then return to battery voltage.
27	W/R	Compressor ON signal	Input	ON	A/C switch OFF	5V
					A/C switch ON	0V
28	L/R	Front blower monitor	Input	ON	Front blower motor OFF	Battery voltage
					Front blower motor ON	0V
29	W/B	Hazard switch	Input	OFF	ON	0V
					OFF	5V
31	P/L	Cargo lamp switch	Input	OFF	Cargo lamp switch ON	0
					Cargo lamp switch OFF	Battery voltage





BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

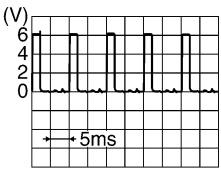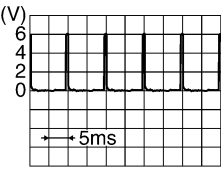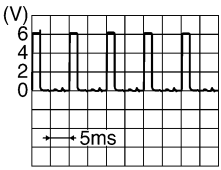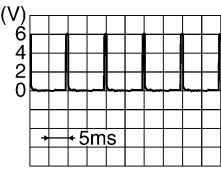Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
32	R/G	Combination switch output 5	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
33	R/Y	Combination switch output 4	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
34	L	Combination switch output 3	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
35	O/B	Combination switch output 2	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
36	R/W	Combination switch output 1				
37	B/R	Key switch and key lock solenoid	Input	OFF	Key inserted	Battery voltage
					Key removed	0V
38	W/L	Ignition switch (ON)	Input	ON	—	Battery voltage
39	L	CAN-H	—	—	—	—
40	P	CAN-L	—	—	—	—
41	Y/B	Rear defogger switch	Input	ON	Rear defogger switch ON	0V
					Rear defogger switch OFF	5V
47	SB	Front door switch LH (All)	Input	OFF	ON (open)	0V
		Rear door switch lower LH (King Cab)				
		Rear door switch upper LH (King Cab)				
48	R/Y	Rear door switch LH (Crew Cab)	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
50	R/Y	Cargo bed lamp control	Output	OFF	Cargo lamp switch (ON)	0V
					Cargo lamp switch (OFF)	Battery voltage

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

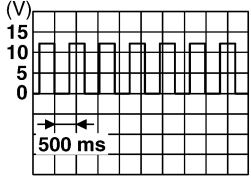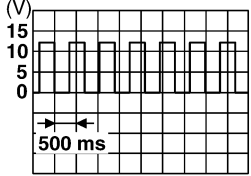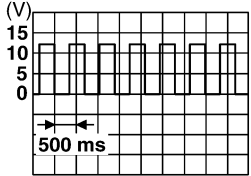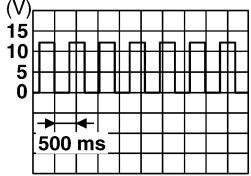Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
51	Y/B	Trailer turn signal (right)	Output	ON	Turn right ON	 <p style="text-align: right; font-size: small;">SKIA3009J</p>
52	G/B	Trailer turn signal (left)	Output	ON	Turn left ON	 <p style="text-align: right; font-size: small;">SKIA3009J</p>
56	R/G	Battery saver output	Output	OFF	15 minutes after ignition switch is turned OFF	0V
				ON	—	Battery voltage
57	Y/R	Battery power supply	Input	OFF	—	Battery voltage
58	W/R	Optical sensor	Input	ON	When optical sensor is illuminated	3.1V or more
					When optical sensor is not illuminated	0.6V or less
59	G	Front door lock assembly LH actuator (unlock)	Output	OFF	OFF (neutral)	0V
				ON	ON (unlock)	Battery voltage
60	G/B	Turn signal (left)	Output	ON	Turn left ON	 <p style="text-align: right; font-size: small;">SKIA3009J</p>
61	G/Y	Turn signal (right)	Output	ON	Turn right ON	 <p style="text-align: right; font-size: small;">SKIA3009J</p>
62	R/W	Step lamp LH and RH	Output	OFF	ON (any door open)	0V
					OFF (all doors closed)	Battery voltage
63	L	Interior room/map lamp	Output	OFF	Any door switch ON (open)	0V
					OFF (closed)	Battery voltage
65	V	All door lock actuators (lock)	Output	OFF	OFF (neutral)	0V
				ON	ON (lock)	Battery voltage
66	G/Y	Front door lock actuator RH and rear door lock actuators LH/RH (unlock)	Output	OFF	OFF (neutral)	0V
				ON	ON (unlock)	Battery voltage

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
67	B	Ground	Input	ON	—	0V
68	W/L	Power window power supply (RAP)	Output	—	Ignition switch ON	Battery voltage
					Within 45 seconds after ignition switch OFF	Battery voltage
					More than 45 seconds after ignition switch OFF	0V
					When front door LH or RH is open or power window timer operates	0V
69	W/R	Power window power supply	Output	—	—	Battery voltage
70	W/B	Battery power supply	Input	OFF	—	Battery voltage

Fail Safe

INFOID:000000010619805

Fail-safe index

BCM performs fail-safe control when any DTC listed below is detected.

Display contents of CONSULT	Fail-safe	Cancellation
U1000: CAN COMM CIRCUIT	Inhibit engine cranking	When the BCM re-establishes communication with the other modules.

DTC Inspection Priority Chart

INFOID:000000010619806

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	<ul style="list-style-type: none"> U1000: CAN COMM CIRCUIT
2	<ul style="list-style-type: none"> B2190: NATS ANTENNA AMP B2191: DIFFERENCE OF KEY B2192: ID DISCORD BCM-ECM B2193: CHAIN OF BCM-ECM

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Priority	DTC	
3	<ul style="list-style-type: none"> • C1729: VHCL SPEED SIG ERR • C1735: IGNITION SIGNAL 	A
4	<ul style="list-style-type: none"> • C1704: LOW PRESSURE FL • C1705: LOW PRESSURE FR • C1706: LOW PRESSURE RR • C1707: LOW PRESSURE RL • C1708: [NO DATA] FL • C1709: [NO DATA] FR • C1710: [NO DATA] RR • C1711: [NO DATA] RL • C1712: [CHECKSUM ERR] FL • C1713: [CHECKSUM ERR] FR • C1714: [CHECKSUM ERR] RR • C1715: [CHECKSUM ERR] RL • C1716: [PRESSDATA ERR] FL • C1717: [PRESSDATA ERR] FR • C1718: [PRESSDATA ERR] RR • C1719: [PRESSDATA ERR] RL • C1720: [CODE ERR] FL • C1721: [CODE ERR] FR • C1722: [CODE ERR] RR • C1723: [CODE ERR] RL • C1724: [BATT VOLT LOW] FL • C1725: [BATT VOLT LOW] FR • C1726: [BATT VOLT LOW] RR • C1727: [BATT VOLT LOW] RL 	B C D E F G H

DTC Index

INFOID:000000010619807

NOTE:

- Details of time display
- CRNT: Displays when there is a malfunction now or after returning to the normal condition until turning ignition switch OFF → ON again.
- 1 - 39: Displayed if any previous malfunction is present when current condition is normal. It increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The counter remains at 39 even if the number of cycles exceeds it. It is counted from 1 again when turning ignition switch OFF → ON after returning to the normal condition if the malfunction is detected again.

CONSULT display	Fail-safe	Tire pressure monitor warning lamp ON	Reference page
No DTC is detected. further testing may be required.	—	—	—
U1000: CAN COMM CIRCUIT	—	—	BCS-27
B2190: NATS ANTENA AMP	—	—	SEC-18
B2191: DIFFERENCE OF KEY	—	—	SEC-21
B2192: ID DISCORD BCM-ECM	—	—	SEC-22
B2193: CHAIN OF BCM-ECM	—	—	SEC-24
C1708: [NO DATA] FL	—	—	WT-15
C1709: [NO DATA] FR	—	—	WT-15
C1710: [NO DATA] RR	—	—	WT-15
C1711: [NO DATA] RL	—	—	WT-15
C1712: [CHECKSUM ERR] FL	—	—	WT-17
C1713: [CHECKSUM ERR] FR	—	—	WT-17
C1714: [CHECKSUM ERR] RR	—	—	WT-17
C1715: [CHECKSUM ERR] RL	—	—	WT-17

A
B
C
D
E
F
G
H
I
J
K

EXL

M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

CONSULT display	Fail-safe	Tire pressure monitor warning lamp ON	Reference page
C1716: [PRESSDATA ERR] FL	—	—	WT-19
C1717: [PRESSDATA ERR] FR	—	—	WT-19
C1718: [PRESSDATA ERR] RR	—	—	WT-19
C1719: [PRESSDATA ERR] RL	—	—	WT-19
C1720: [CODE ERR] FL	—	—	WT-17
C1721: [CODE ERR] FR	—	—	WT-17
C1722: [CODE ERR] RR	—	—	WT-17
C1723: [CODE ERR] RL	—	—	WT-17
C1724: [BATT VOLT LOW] FL	—	—	WT-17
C1725: [BATT VOLT LOW] FR	—	—	WT-17
C1726: [BATT VOLT LOW] RR	—	—	WT-17
C1727: [BATT VOLT LOW] RL	—	—	WT-17
C1729: VHCL SPEED SIG ERR	—	—	WT-21
C1735: IGNITION SIGNAL	—	—	WT-22

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Reference Value

INFOID:000000010619808

VALUES ON THE DIAGNOSIS TOOL


Monitor Item	Condition		Value/Status
A/C COMP REQ	A/C switch OFF		Off
	A/C switch ON		On
TAIL&CLR REQ	Lighting switch OFF		Off
	Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated)		On
HL LO REQ	Lighting switch OFF		Off
	Lighting switch 2ND HI or AUTO (Light is illuminated)		On
HL HI REQ	Lighting switch OFF		Off
	Lighting switch HI		On
FR FOG REQ	Lighting switch 2ND or AUTO (Light is illuminated)	Front fog lamp switch OFF	Off
		<ul style="list-style-type: none"> Front fog lamp switch ON Daytime light activated (Canada only) 	On
FR WIP REQ	Ignition switch ON	Front wiper switch OFF	Stop
		Front wiper switch INT	1LOW
		Front wiper switch LO	Low
		Front wiper switch HI	Hi
WIP AUTO STOP	Ignition switch ON	Front wiper stop position	STOP P
		Any position other than front wiper stop position	ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally	Off
		Front wiper stops at fail-safe operation	BLOCK
ST RLY REQ	Ignition switch OFF or ACC		Off
	Ignition switch START		On
IGN RLY	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
RR DEF REQ	Rear defogger switch OFF		Off
	Rear defogger switch ON		On
OIL P SW	Ignition switch OFF, ACC or engine running		Open
	Ignition switch ON		Close
DTRL REQ	Not operated		Off
	Daytime Running Lights ON		On
THFT HRN REQ	Not operated		Off
	<ul style="list-style-type: none"> Panic alarm is activated Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM 		On
HORN CHIRP	Not operated		Off
	Door locking with keyfob (horn chirp mode)		On

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Terminal Layout

INFOID:000000010619809

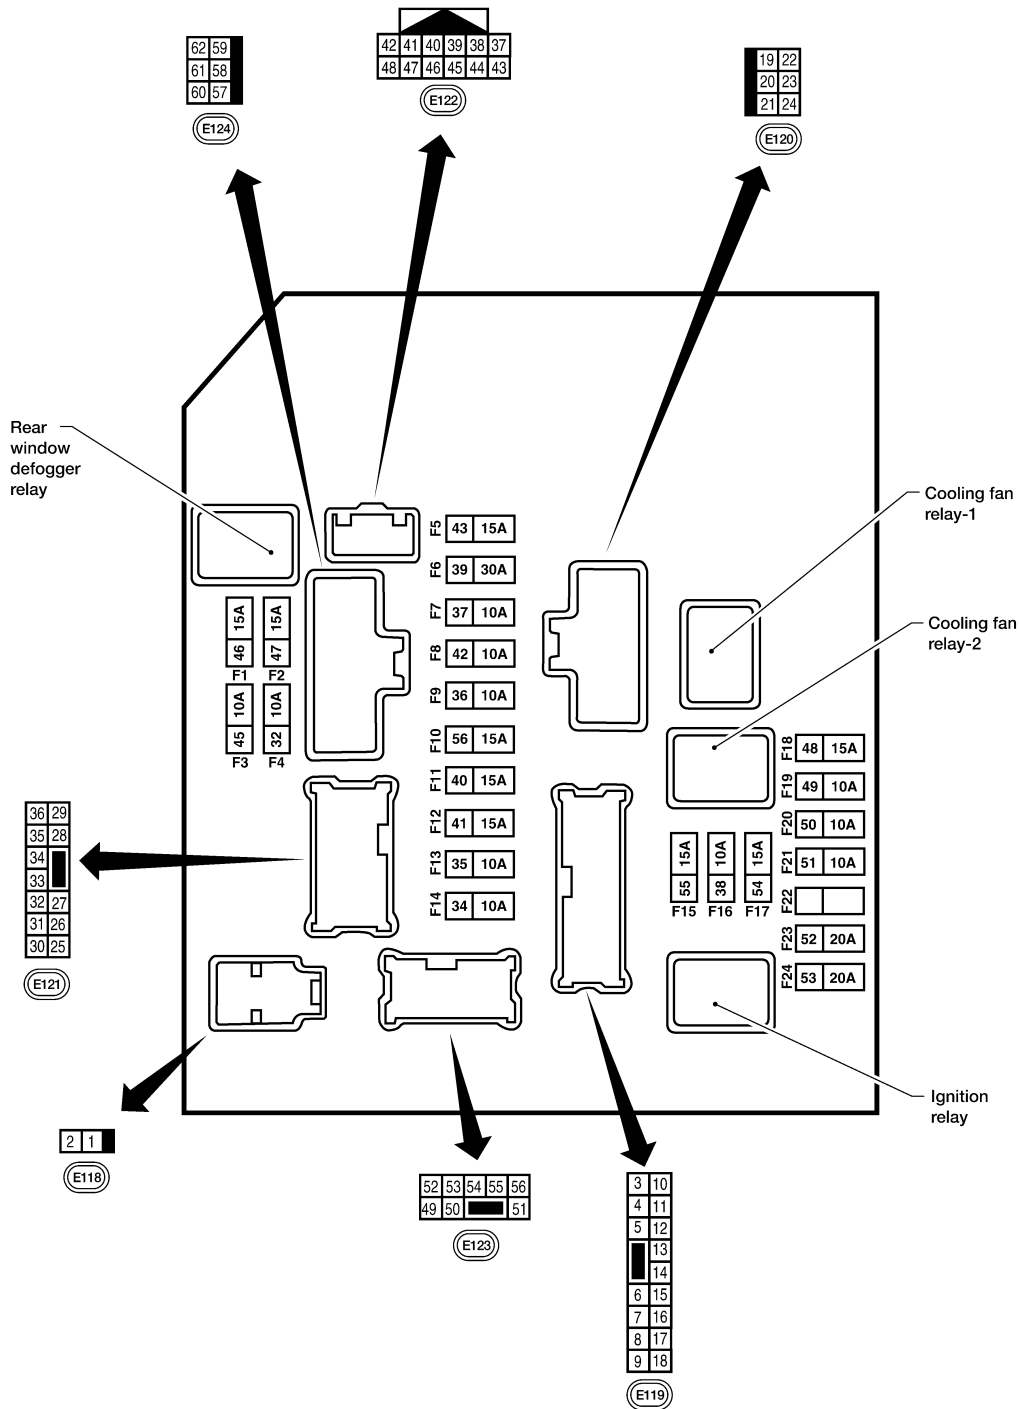

NOTE:

Numbers preceded by an "F" represent the fuse numbers imprinted on the IPDM E/R. The other numbers represent the fuse numbers as they appear in the wiring diagrams.

Physical Values

PHYSICAL VALUES

AAMIA0386GB

INFOID:000000010619810

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)




< ECU DIAGNOSIS INFORMATION >

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)	
				Ignition switch	Operation or condition		
1	B/Y	Battery power supply	Input	OFF	—	Battery voltage	
2	R	Battery power supply	Input	OFF	—	Battery voltage	
3	BR	ECM relay	Output	—	Ignition switch ON or START	Battery voltage	
					Ignition switch OFF or ACC	0V	
4	W/L	ECM relay	Output	—	Ignition switch ON or START	Battery voltage	
					Ignition switch OFF or ACC	0V	
6	L	Throttle control motor relay	Output	—	Ignition switch ON or START	Battery voltage	
					Ignition switch OFF or ACC	0V	
7	W/B	ECM relay control	Input	—	Ignition switch ON or START	0V	
					Ignition switch OFF or ACC	Battery voltage	
8	R/B	Fuse 54	Output	—	Ignition switch ON or START	Battery voltage	
					Ignition switch OFF or ACC	0V	
10	G	Fuse 45 (Canada only)	Output	ON	Daytime light system active	0V	
					Daytime light system inactive	Battery voltage	
11	Y/B	A/C compressor	Output	ON or START	A/C switch ON or defrost A/C switch	Battery voltage	
					A/C switch OFF or defrost A/C switch	0V	
12	L/W	Ignition switch supplied power	Input	—	OFF or ACC	0V	
					ON or START	Battery voltage	
13	B/Y	Fuel pump relay	Output	—	Ignition switch ON or START	Battery voltage	
					Ignition switch OFF or ACC	0V	
14	Y/R	Fuse 49	Output	—	Ignition switch ON or START	Battery voltage	
					Ignition switch OFF or ACC	0V	
15	LG/B	Fuse 50	Output	—	Ignition switch ON or START	Battery voltage	
					Ignition switch OFF or ACC	0V	
16	G	Fuse 51	Output	—	Ignition switch ON or START	Battery voltage	
					Ignition switch OFF or ACC	0V	
17	W	Fuse 55	Output	—	Ignition switch ON or START	Battery voltage	
					Ignition switch OFF or ACC	0V	
19	W/R	Starter motor	Output	START	—	Battery voltage	
21	BR	Ignition switch supplied power	Input	—	OFF or ACC	0V	
					START	Battery voltage	
22	G	Battery power supply	Output	OFF	—	Battery voltage	
23	GR/W	Door mirror defogger output signal (if equipped)	Output	—	When rear defogger switch is ON	Battery voltage	
					When rear defogger switch is OFF	0V	
27	W/B	Fuse 38	Output	—	Ignition switch ON or START	Battery voltage	
					Ignition switch OFF or ACC	0V	
30	W	Fuse 53	Output	—	Ignition switch ON or START	Battery voltage	
					Ignition switch OFF or ACC	0V	
32	L	Wiper low speed signal	Output	ON or START	Wiper switch	OFF	0V
						LO or INT	Battery voltage

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

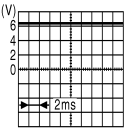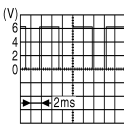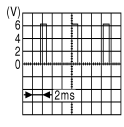Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)	
				Ignition switch	Operation or condition		
35	L/B	Wiper high speed signal	Output	ON or START	Wiper switch	OFF, LO, INT	0V
						HI	Battery voltage
37	Y	Power generation command signal	Output	—	Ignition switch ON	 <p style="text-align: right;">JPMIA0001GB</p>	6.3 V
						 <p style="text-align: right;">JPMIA0002GB</p>	3.8 V
						 <p style="text-align: right;">JPMIA0003GB</p>	1.4 V
38	B	Ground	Input	—	—	0V	
39	L	CAN-H	—	ON	—	—	
40	P	CAN-L	—	ON	—	—	
42	GR	Oil pressure switch	Input	—	Engine running	Battery voltage	
					Engine stopped	0V	
43	L/Y	Wiper auto stop signal	Input	ON or START	Wiper switch	OFF, LO, INT	Battery voltage
44	BR	Daytime light relay control (Canada only)	Input	ON	Daytime light system active	0V	
					Daytime light system inactive	Battery voltage	
45	G/W	Horn relay control	Input	ON	When door locks are operated using keyfob (OFF → ON)*	Battery voltage → 0V	
46	GR	Fuel pump relay control	Input	—	Ignition switch ON or START	0V	
					Ignition switch OFF or ACC	Battery voltage	
47	O	Throttle control motor relay control	Input	—	Ignition switch ON or START	0V	
					Ignition switch OFF or ACC	Battery voltage	
48	B/R	Starter relay (inhibit switch)	Input	ON or START	Selector lever in "P" or "N"	0V	
					Selector lever any other position	Battery voltage	
49	R/L	Trailer tow relay illumination	Output	ON	Lighting switch must be in the 1st position	OFF	0V
						ON	Battery voltage

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)
				Ignition switch	Operation or condition	
50	W/R	Front fog lamp (LH) (if equipped)	Output	ON or START	Lighting switch must be in the 2nd position (LOW beam is ON) and the front fog lamp switch	0V
					OFF	Battery voltage
51	W/R	Front fog lamp (RH) (if equipped)	Output	ON or START	Lighting switch must be in the 2nd position (LOW beam is ON) and the front fog lamp switch	0V
					OFF	Battery voltage
52	L	LH low beam headlamp	Output	—	Lighting switch in 2nd position	Battery voltage
54	R/Y	RH low beam headlamp	Output	—	Lighting switch in 2nd position	Battery voltage
55	G	LH high beam headlamp	Output	—	Lighting switch in 2nd position and placed in HIGH or PASS position	Battery voltage
56	Y (With DTRL) L/W (Without DTRL)	RH high beam headlamp	Output	—	Lighting switch in 2nd position and placed in HIGH or PASS position	Battery voltage
57	R/L	Parking, license and tail lamp	Output	ON	Lighting switch 1st position	0V
					OFF	Battery voltage
59	B	Ground	Input	—	—	0V
60	B/W	Rear window defogger relay (if equipped)	Output	ON or START	Rear defogger switch ON	Battery voltage
					Rear defogger switch OFF	0V
61	BR	Fuse 32	Output	OFF	—	Battery voltage

*: When horn reminder is ON

Fail Safe

INFOID:000000010619811

EXL

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With BCM

Control part	Fail-safe in operation
Headlamp	<ul style="list-style-type: none"> • Turns ON the headlamp low relay when the ignition switch is turned ON • Turns OFF the headlamp low relay when the ignition switch is turned OFF • Headlamp high relay OFF
<ul style="list-style-type: none"> • Parking lamps • License plate lamps • Tail lamps 	<ul style="list-style-type: none"> • Turns ON the tail lamp relay when the ignition switch is turned ON • Turns OFF the tail lamp relay when the ignition switch is turned OFF
Front wiper	<ul style="list-style-type: none"> • The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed. • The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.
Rear window defogger (if equipped)	Rear window defogger relay OFF

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Control part	Fail-safe in operation
A/C compressor	A/C relay OFF
Front fog lamps (if equipped)	Front fog lamp relay OFF

IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

Ignition switch	Ignition relay	Tail lamp relay
ON	ON	—
OFF	OFF	—

NOTE:

The tail lamp turns OFF when the ignition switch is turned ON.

FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper auto stop signal.

When a front wiper auto stop signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop five times.

Ignition switch	Front wiper switch	Auto stop signal
ON	OFF	Front wiper stop position signal cannot be input 10 seconds.
	ON	The signal does not change for 10 seconds.

NOTE:

This operation status can be confirmed on the IPDM E/R “DATA MONITOR” that displays “Block” for the item “WIP PROT” while the wiper is stopped.

STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

DTC Index

INFOID:0000000010619812

CONSULT display	Fail-safe	TIME ^{NOTE}		Refer to
No DTC is detected. further testing may be required.	—	—	—	—
U1000: CAN COMM CIRCUIT	×	CRNT	1 – 39	PCS-15

NOTE:

The details of TIME display are as follows.

- CRNT: The malfunctions that are detected now
- 1 - 39: The number is indicated when it is normal at present and a malfunction was detected in the past. It increases like 0 → 1 → 2 ... 38 → 39 after returning to the normal condition whenever IGN OFF → ON. It is fixed to 39 until the self-diagnosis results are erased if it is over 39. It returns to 0 when a malfunction is detected again in the process.

HEADLAMP


< WIRING DIAGRAM >

WIRING DIAGRAM

HEADLAMP

Wiring Diagram

INFOID:000000009878543

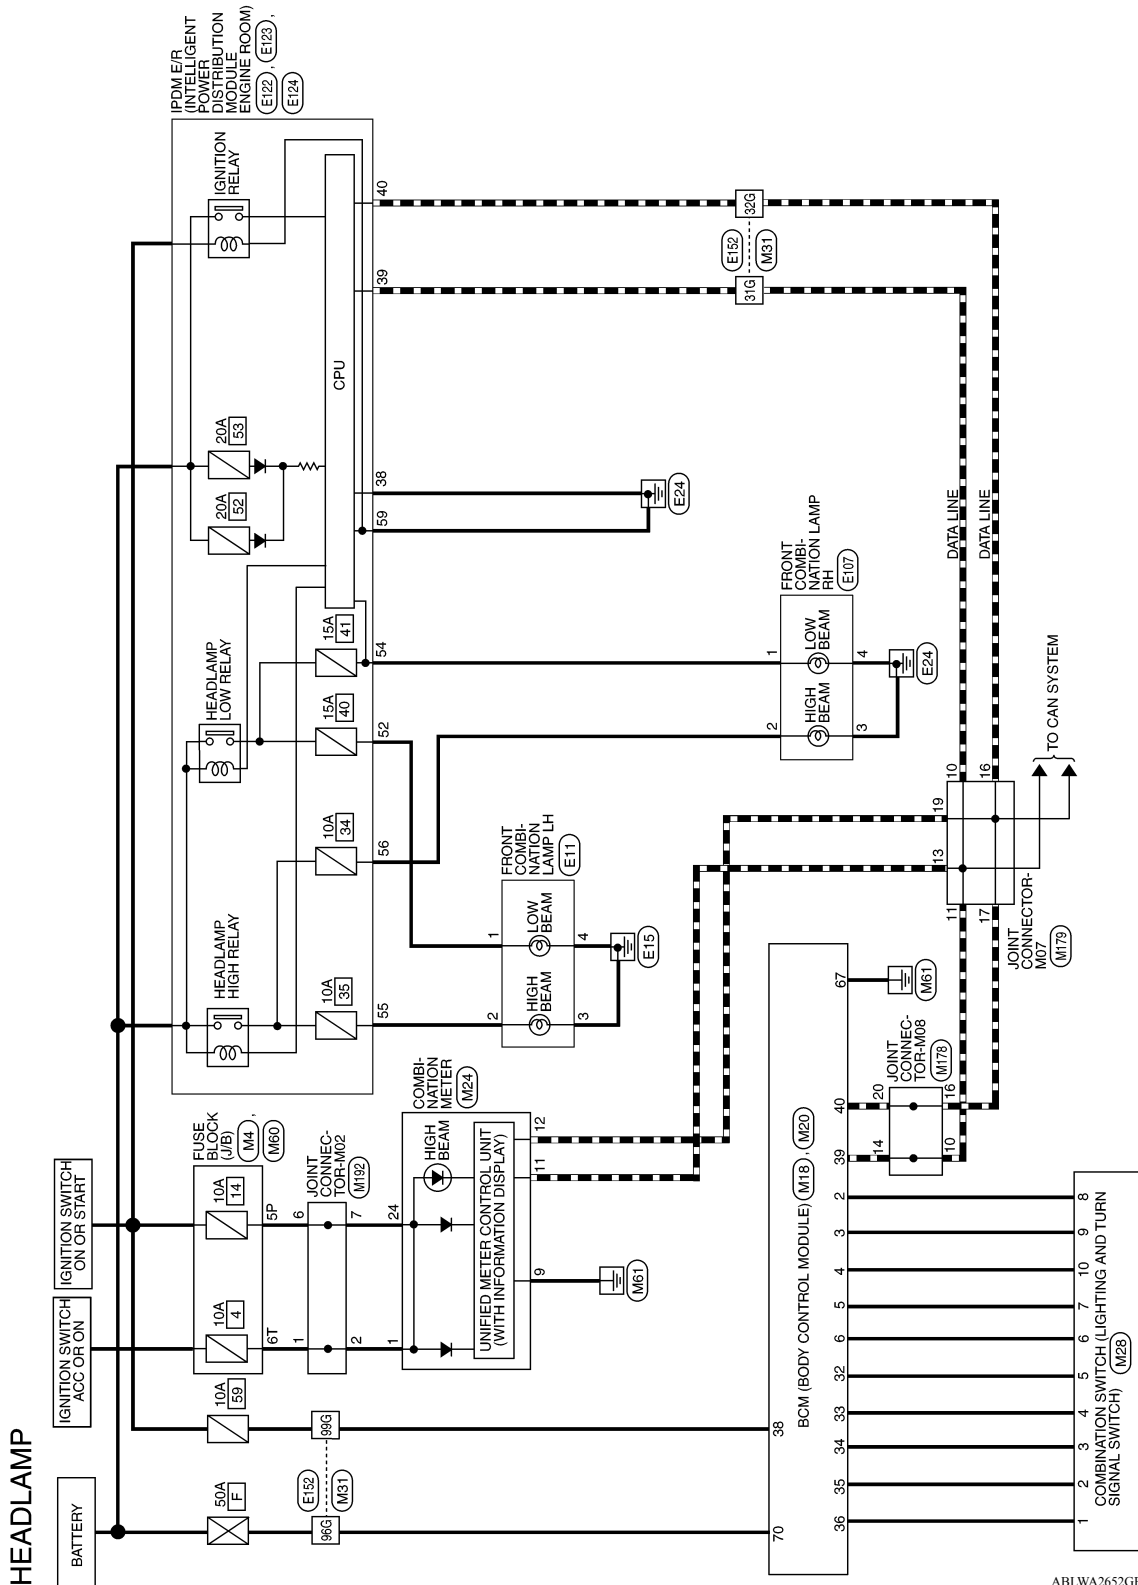

ABLWA2652GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

HEADLAMP

< WIRING DIAGRAM >


HEADLAMP CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
5P	O/L	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	SB	INPUT 5
3	G/Y	INPUT 4
4	Y	INPUT 3
5	G/B	INPUT 2
6	V	INPUT 1
32	R/G	OUTPUT 5
33	R/Y	OUTPUT 4
34	L	OUTPUT 3
35	O/B	OUTPUT 2
36	R/W	OUTPUT 1
38	W/L	IGN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
67	B	GND (POWER)
70	W/B	BAT (F/L)

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE



Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	R/W	-
2	O/B	-
3	L	-
4	R/Y	-
5	R/G	-
6	V	-
7	G/B	-
8	SB	-
9	G/Y	-
10	Y	-

HEADLAMP

< WIRING DIAGRAM >


Connector No.	M60
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	6T	Color of Wire	O	Signal Name	-
--------------	----	---------------	---	-------------	---

Terminal No.	Color of Wire	Signal Name
31G	L	-
32G	P	-
96G	W/B	-
99G	W/L	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

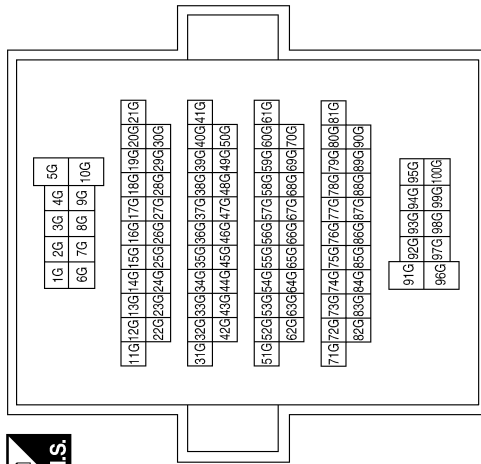


Connector No.	M192
Connector Name	JOINT CONNECTOR-M02
Connector Color	GREEN




Terminal No.	1	Color of Wire	O	Signal Name	-
2	2	O	-	-	
6	6	O/L	-	-	
7	7	O/L	-	-	

Connector No.	M179
Connector Name	JOINT CONNECTOR-M07
Connector Color	WHITE



Terminal No.	10	Color of Wire	L	Signal Name	-
11	11	L	-	-	
13	13	L	-	-	
16	16	P	-	-	
17	17	P	-	-	
19	19	P	-	-	

Connector No.	M178
Connector Name	JOINT CONNECTOR-M08
Connector Color	WHITE



Terminal No.	10	Color of Wire	L	Signal Name	-
14	14	L	-	-	
16	16	P	-	-	
20	20	P	-	-	


ABLI1A4204GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

HEADLAMP


< WIRING DIAGRAM >

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L

Connector No.	E107
Connector Name	FRONT COMBINATION LAMP RH (WITHOUT DAYTIME LIGHT SYSTEM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	R/Y	-
2	L/W	-
3	B	-
4	B	-

Connector No.	E11
Connector Name	FRONT COMBINATION LAMP LH (WITHOUT DAYTIME LIGHT SYSTEM)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	L	-
2	G	-
3	B	-
4	B	-

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
59	B	GND (POWER)

Connector No.	E123
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
52	L	H/LAMP LO LH
54	R/Y	H/LAMP LO RH
55	G	H/LAMP HI LH
56	L/W	H/LAMP HI RH (WITHOUT DAYTIME LIGHT SYSTEM)

ABLIA4205GB


HEADLAMP

< WIRING DIAGRAM >

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

Terminal No.	Color of Wire	Signal Name
31G	L	-
32G	P	-
96G	W/B	-
99G	L/W	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

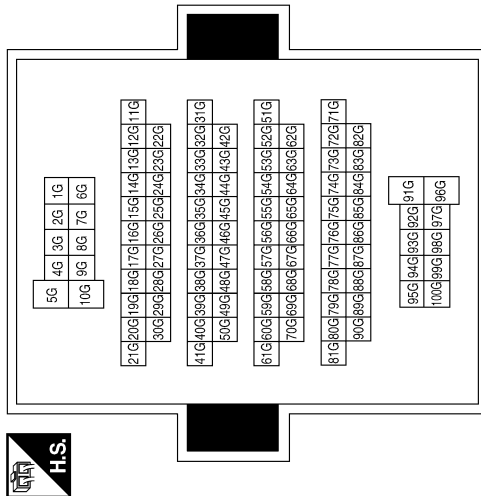

ABLI1A4206GB


AUTO LIGHT SYSTEM

< WIRING DIAGRAM >

AUTO LIGHT SYSTEM

Wiring Diagram

INFOID:000000009878544

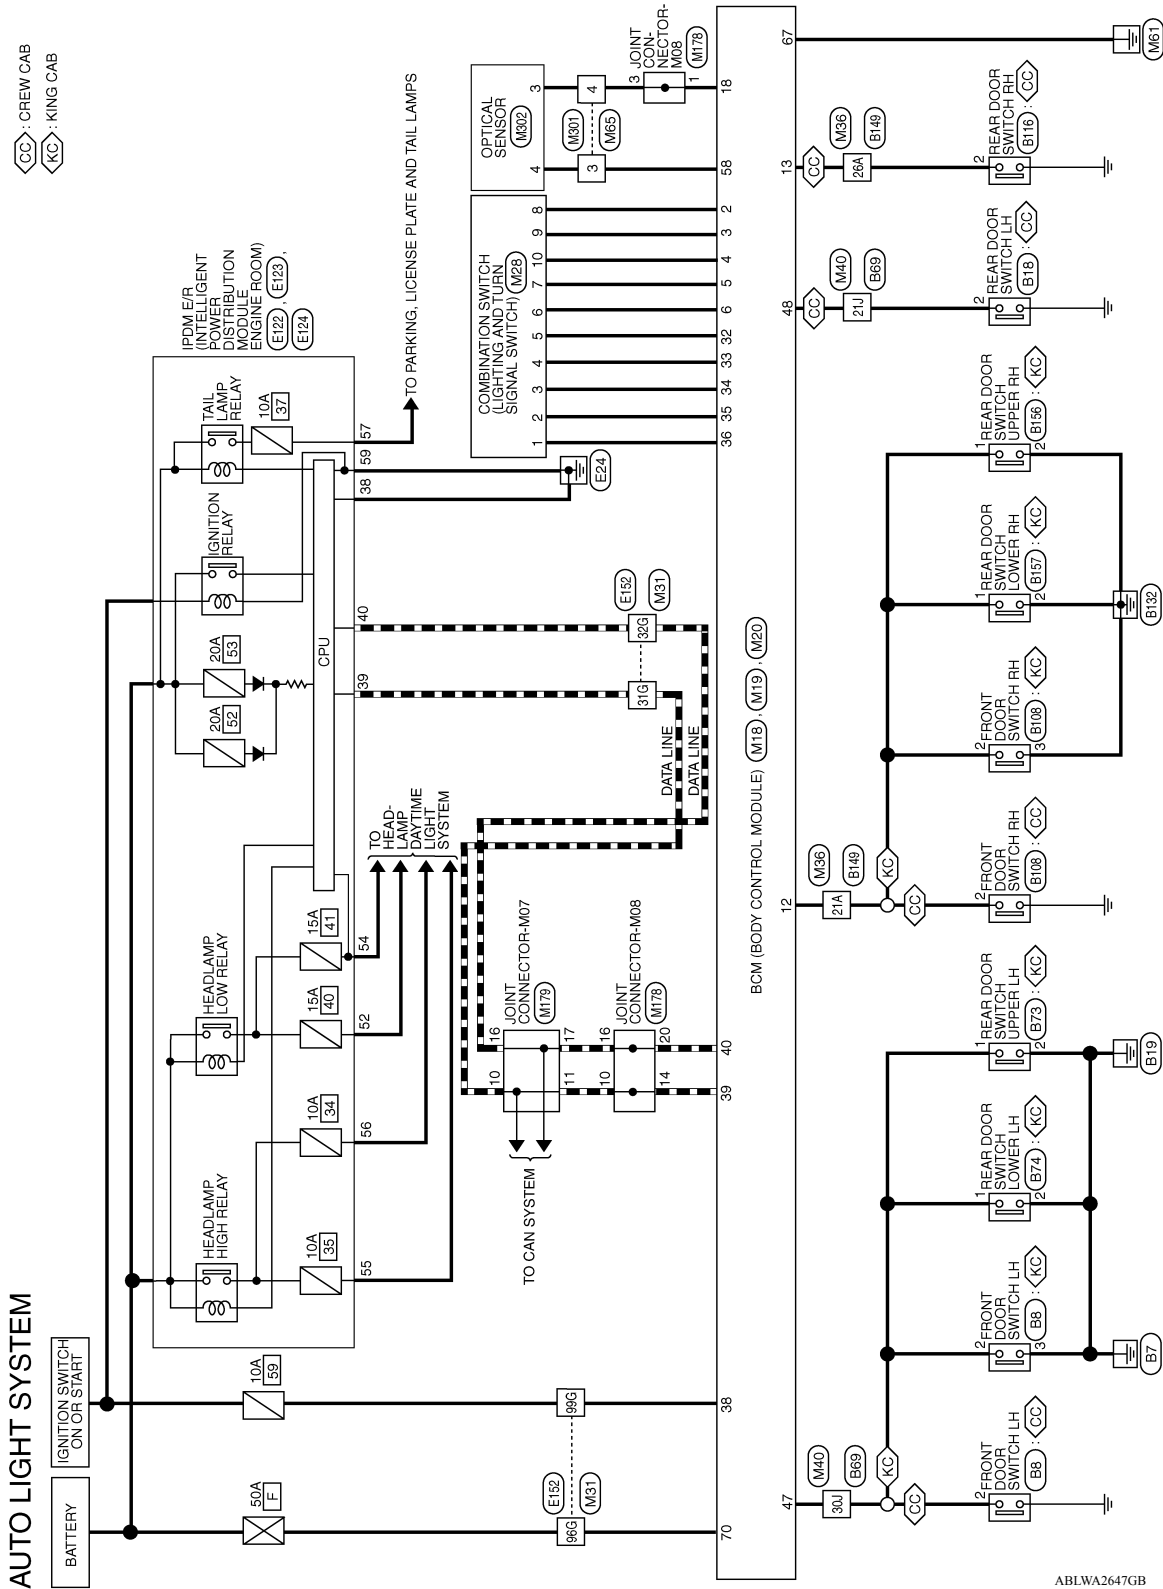


ABLWA2647GB

AUTO LIGHT SYSTEM

< WIRING DIAGRAM >


AUTO LIGHT SYSTEM CONNECTORS

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	SB	INPUT 5
3	G/Y	INPUT 4
4	Y	INPUT 3
5	G/B	INPUT 2
6	V	INPUT 1
12	R/L	DOOR SW (AS)
13	GR	DOOR SW (RR)
18	P	KEYLESS AND AUTO LIGHT SENSOR GND
32	R/G	OUTPUT 5
33	R/Y	OUTPUT 4
34	L	OUTPUT 3
35	O/B	OUTPUT 2
36	R/W	OUTPUT 1
38	W/L	IGN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
47	SB	DOOR SW (DR)
48	R/Y	DOOR SW (RL)

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
58	W/R	AUTO LIGHT SENSOR INPUT 2
67	B	GND (POWER)
70	W/B	BAT (F/L)

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	R/W	-
2	O/B	-
3	L	-
4	R/Y	-
5	R/G	-
6	V	-
7	G/B	-
8	SB	-
9	G/Y	-
10	Y	-

ABLI1A4189GB

A B C D E F G H I J K EXL M N O P

AUTO LIGHT SYSTEM


< WIRING DIAGRAM >

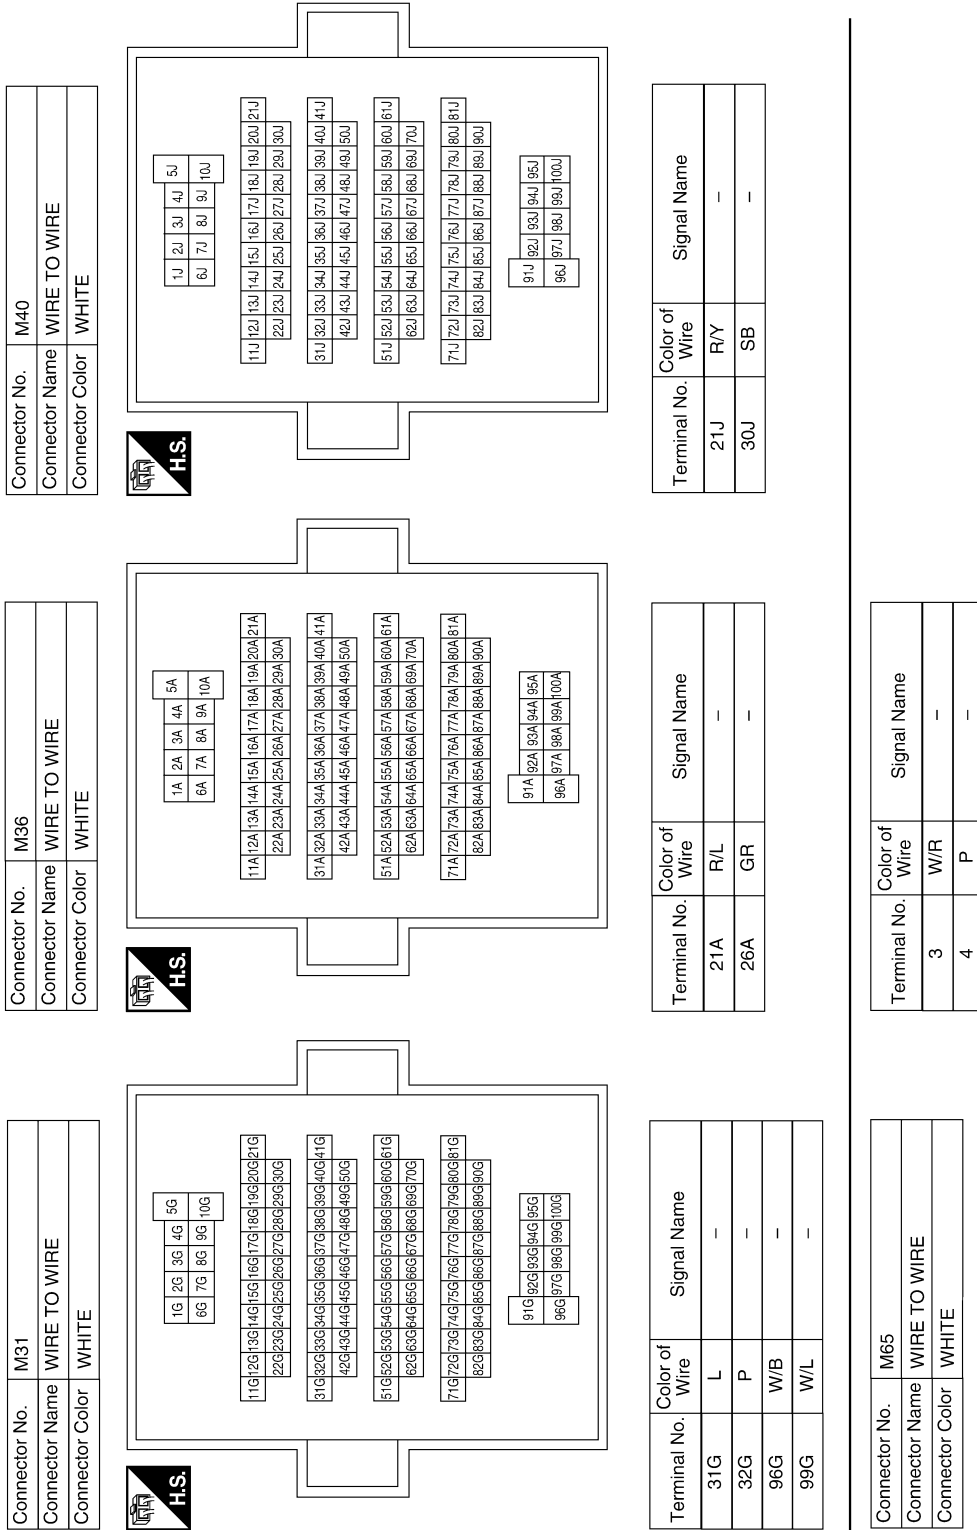

AUTO LIGHT SYSTEM


< WIRING DIAGRAM >

Connector No.	M301
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
3	W/R	-
4	P	-

Connector No.	M179
Connector Name	JOINT CONNECTOR-M07
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
10	L	-
11	L	-
16	P	-
17	P	-

Connector No.	M178
Connector Name	JOINT CONNECTOR-M08
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	P	-
3	P	-
10	L	-
14	L	-
16	P	-
20	P	-

Connector No.	E123
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
52	L	H/LAMP LO LH
54	R/Y	H/LAMP LO RH
55	G	H/LAMP HI LH
56	LW	H/LAMP HI RH (WITHOUT DAYTIME LIGHT SYSTEM)
56	Y	H/LAMP HI RH (WITH DAYTIME LIGHT SYSTEM)

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L

Connector No.	M302
Connector Name	OPTICAL SENSOR
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	P	-
4	W/R	-

ABLI1A4191GB


A B C D E F G H I J K EXL M N O P

AUTO LIGHT SYSTEM

< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
31G	L	-
32G	P	-
96G	W/B	-
99G	L/W	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

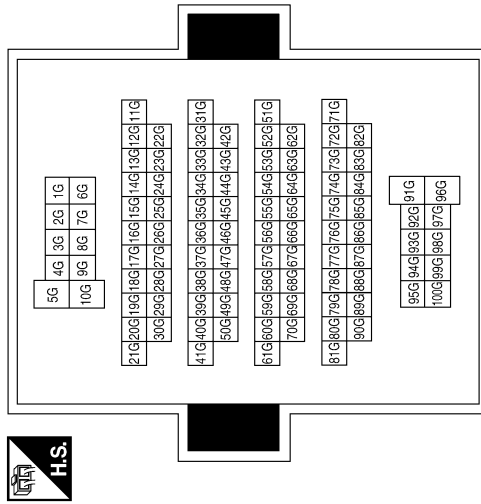


Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
57	R/L	TAIL LAMP
59	B	GND (POWER)

Connector No.	B18
Connector Name	REAR DOOR SWITCH LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	R/Y	-

Connector No.	B8
Connector Name	FRONT DOOR SWITCH LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	SB	-
3	B	-

ABLI4192GB

AUTO LIGHT SYSTEM

< WIRING DIAGRAM >


Connector No.	B73
Connector Name	REAR DOOR SWITCH UPPER LH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	SB	-
2	B	-

Terminal No.	Color of Wire	Signal Name
21J	R/Y	-
30J	SB	-

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

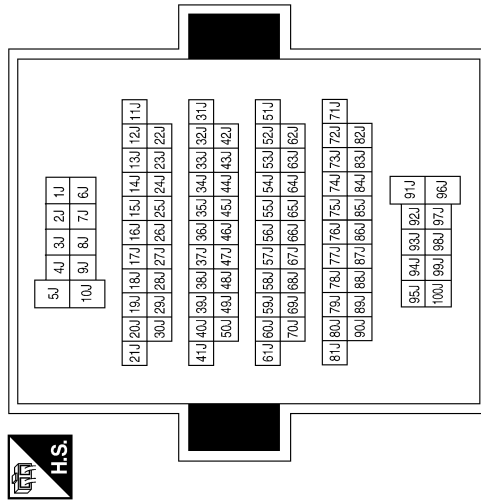


Connector No.	B116
Connector Name	REAR DOOR SWITCH RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	GR	-

Connector No.	B108
Connector Name	FRONT DOOR SWITCH RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	R/L	-
3	B	-

Connector No.	B74
Connector Name	REAR DOOR SWITCH LOWER LH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	SB	-
2	B	-

ABLI1A4193GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

AUTO LIGHT SYSTEM

< WIRING DIAGRAM >

Connector No.	B157
Connector Name	REAR DOOR SWITCH LOWER RH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	R/L	-
2	B	-

Connector No.	B156
Connector Name	REAR DOOR SWITCH UPPER RH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	R/L	-
2	B	-

Connector No.	B149
Connector Name	WIRE TO WIRE
Connector Color	WHITE

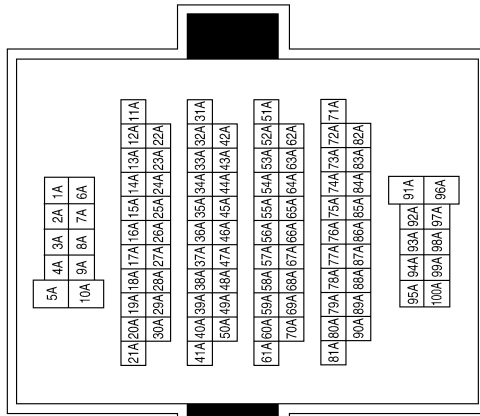

Terminal No.	Color of Wire	Signal Name
21A	R/L	-
26A	GR	-

ABLIA4194GB


DAYTIME LIGHT SYSTEM

< WIRING DIAGRAM >

DAYTIME LIGHT SYSTEM

Wiring Diagram

INFOID:00000009878545

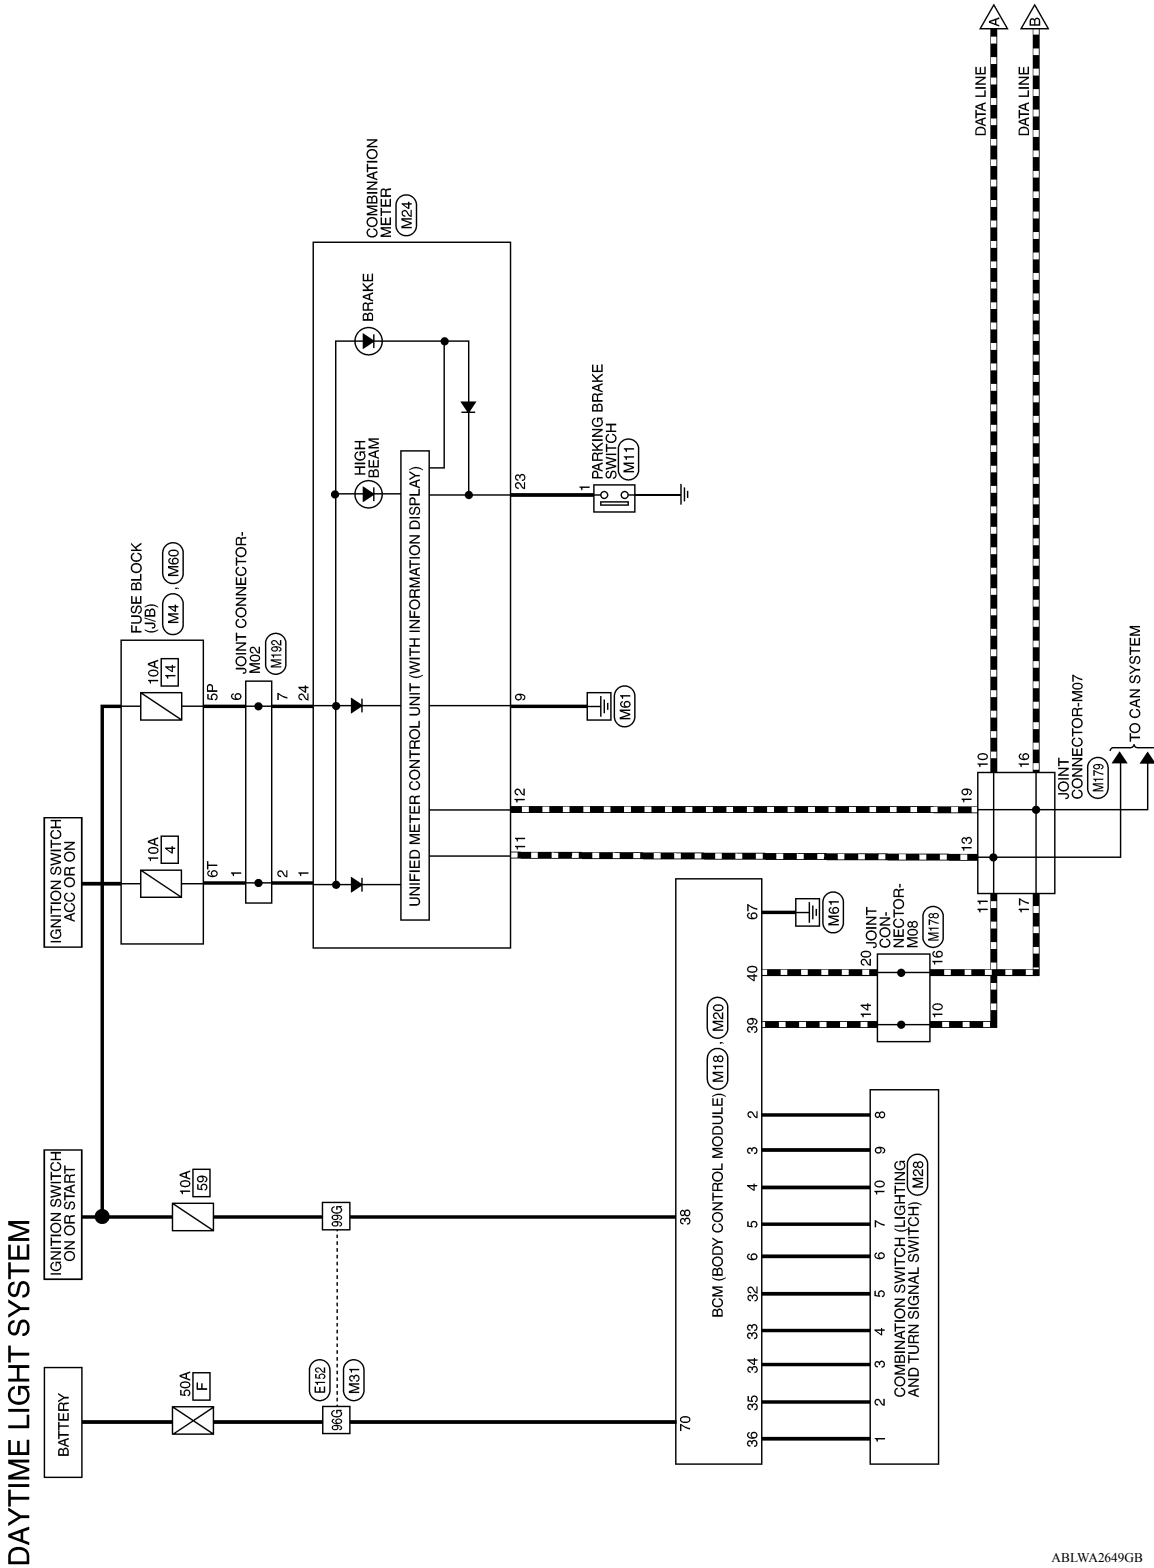


ABLWA2649GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

DAYTIME LIGHT SYSTEM

< WIRING DIAGRAM >

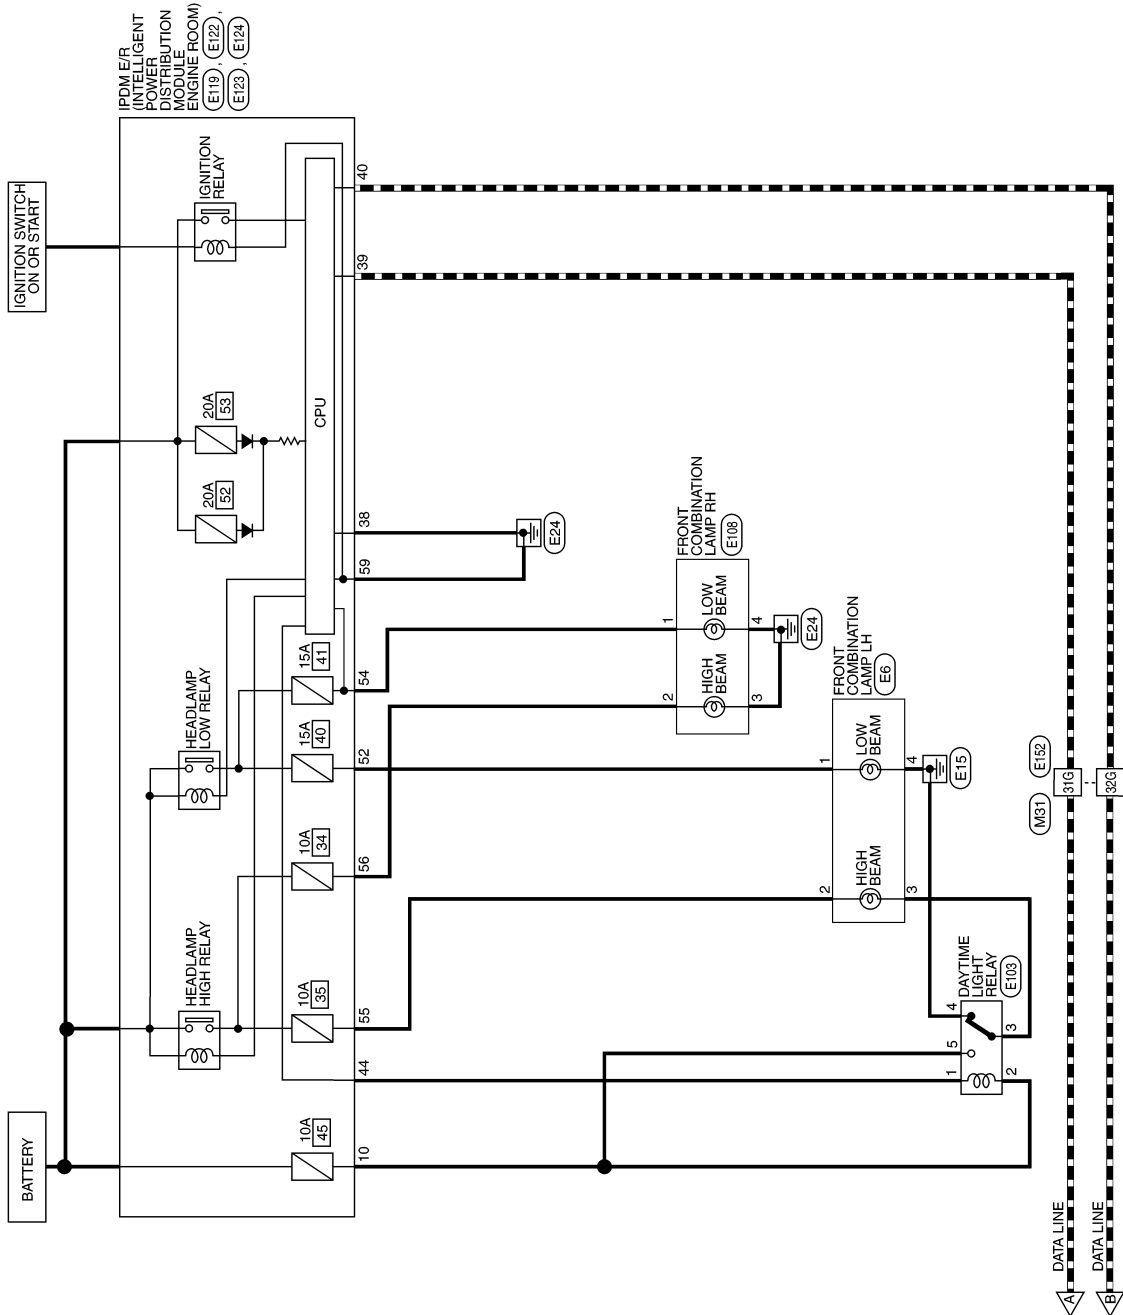

ABLWA2650GB

DAYTIME LIGHT SYSTEM

< WIRING DIAGRAM >

DAYTIME LIGHT SYSTEM CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



7P	6P	5P	4P	3P	2P	1P		
16P	15P	14P	13P	12P	11P	10P	9P	8P



1

Connector No.	M11
Connector Name	PARKING BRAKE SWITCH
Connector Color	BLACK

Terminal No.	Color of Wire	Signal Name
5P	O/L	-

Terminal No.	Color of Wire	Signal Name
1	G	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name
2	SB	INPUT 5
3	G/Y	INPUT 4
4	Y	INPUT 3
5	G/B	INPUT 2
6	V	INPUT 1
32	R/G	OUTPUT 5
33	R/Y	OUTPUT 4
34	L	OUTPUT 3
35	O/B	OUTPUT 2
36	R/W	OUTPUT 1
38	W/L	IGN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



56	57	58	59	60	61	62	63	64
65	66	67	68	69	70			

Terminal No.	Color of Wire	Signal Name
67	B	GND (POWER)
70	W/B	BAT (F/L)


ABL1A1340GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

DAYTIME LIGHT SYSTEM


< WIRING DIAGRAM >

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	O	ACCESSORY
9	B	GND
11	L	CAN-H
12	P	CAN-L
23	G	PARK BRAKE
24	O/L	RUN/START

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	R/W	-
2	O/B	-
3	L	-
4	R/Y	-
5	R/G	-
6	V	-
7	G/B	-
8	SB	-
9	G/Y	-
10	Y	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

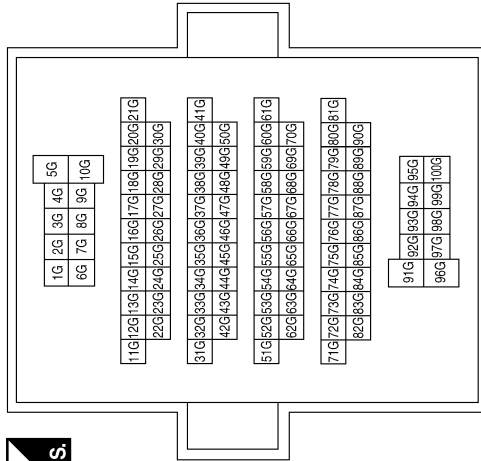

Terminal No.	Color of Wire	Signal Name
31G	L	-
32G	P	-
96G	W/B	-
99G	W/L	-

Connector No.	M60
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
6T	O	-

ABLI4197GB

DAYTIME LIGHT SYSTEM


< WIRING DIAGRAM >

Connector No.	M192
Connector Name	JOINT CONNECTOR-M02
Connector Color	GREEN




Terminal No.	Color of Wire	Signal Name
1	O	-
2	O	-
6	O/L	-
7	O/L	-

Connector No.	M179
Connector Name	JOINT CONNECTOR-M07
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
10	L	-
11	L	-
13	L	-
16	P	-
17	P	-
19	P	-

Connector No.	M178
Connector Name	JOINT CONNECTOR-M08
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
10	L	-
14	L	-
16	P	-
20	P	-

Connector No.	E108
Connector Name	FRONT COMBINATION LAMP RH (WITH DAYTIME LIGHT SYSTEM)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	R/Y	-
2	Y	-
3	B	-
4	B	-

Connector No.	E103
Connector Name	DAYTIME LIGHT RELAY
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	BR	-
2	G	-
3	Y/G	-
4	B	-
5	G	-

Connector No.	E6
Connector Name	FRONT COMBINATION LAMP LH (WITH DAYTIME LIGHT SYSTEM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	L	-
2	G	-
3	Y/G	-
4	B	-


ABLI1A4198GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

DAYTIME LIGHT SYSTEM

< WIRING DIAGRAM >

Connector No.	E123
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
52	L	H/LAMP LO LH
54	R/Y	H/LAMP LO RH
55	G	H/LAMP HI LH
56	Y	H/LAMP HI RH (WITH DAYTIME LIGHT SYSTEM)

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L
44	BR	DTRL RLY CONT

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
10	G	DTRL RLY SUPPLY

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
59	B	GND (POWER)

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

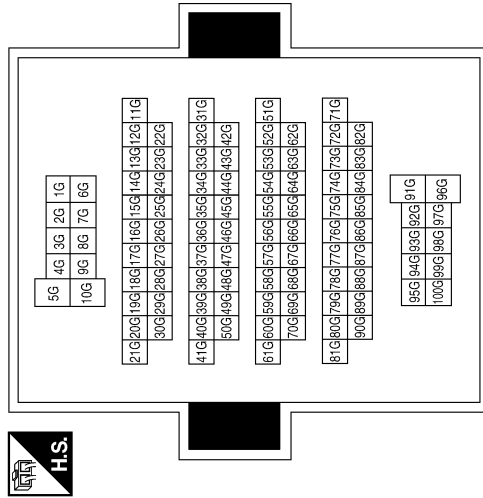

ABLLIA4199GB

FRONT FOG LAMP SYSTEM


< WIRING DIAGRAM >

FRONT FOG LAMP SYSTEM

Wiring Diagram

INFOID:000000009878546

FRONT FOG LAMP

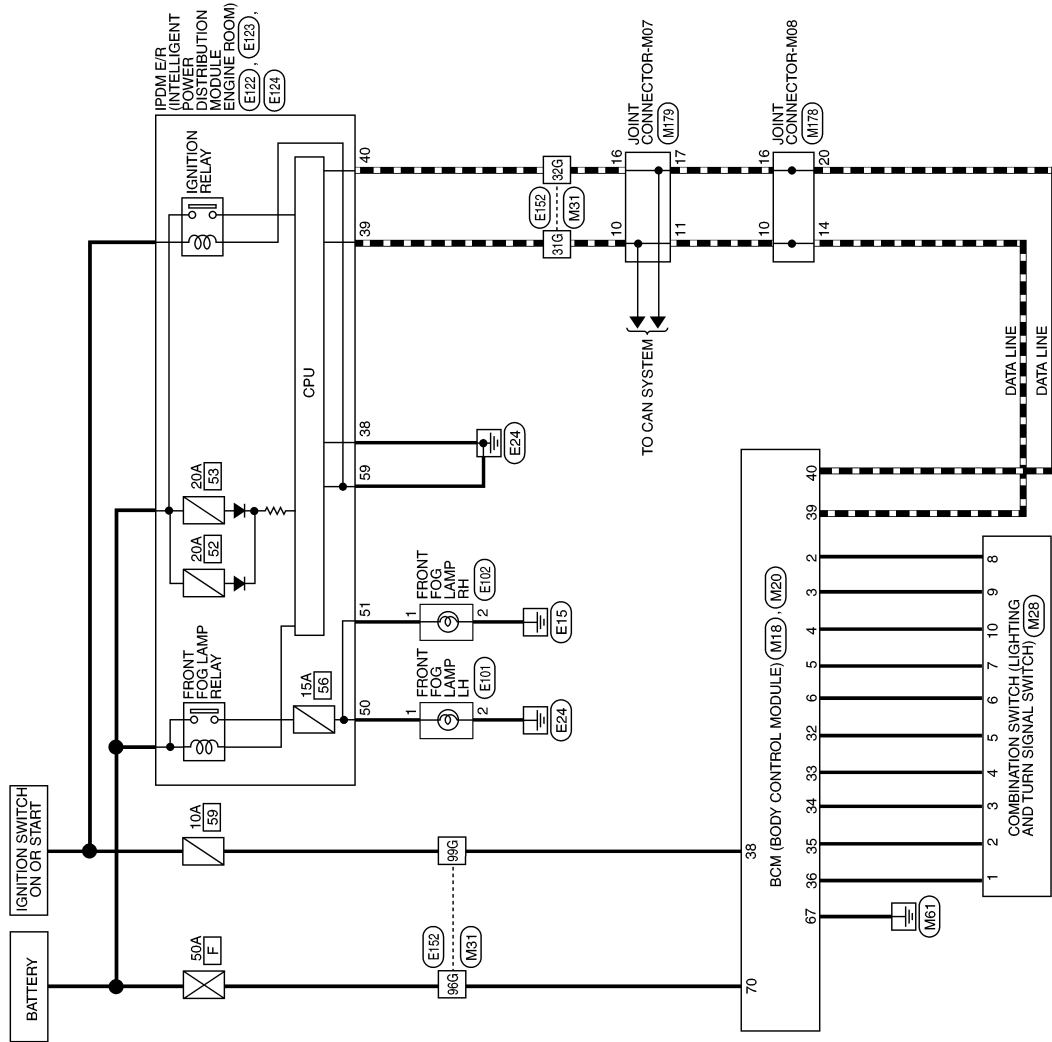

ABLWA2651GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


EXL

FRONT FOG LAMP SYSTEM

< WIRING DIAGRAM >

FRONT FOG LAMP CONNECTORS

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	SB	INPUT 5
3	G/Y	INPUT 4
4	Y	INPUT 3
5	G/B	INPUT 2
6	V	INPUT 1
32	R/G	OUTPUT 5
33	R/Y	OUTPUT 4
34	L	OUTPUT 3
35	O/B	OUTPUT 2
36	R/W	OUTPUT 1
38	W/L	IGN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
67	B	GND (POWER)
70	W/B	BAT (F/L)

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R/W	-
2	O/B	-
3	L	-
4	R/Y	-
5	R/G	-
6	V	-
7	G/B	-
8	SB	-
9	G/Y	-
10	Y	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

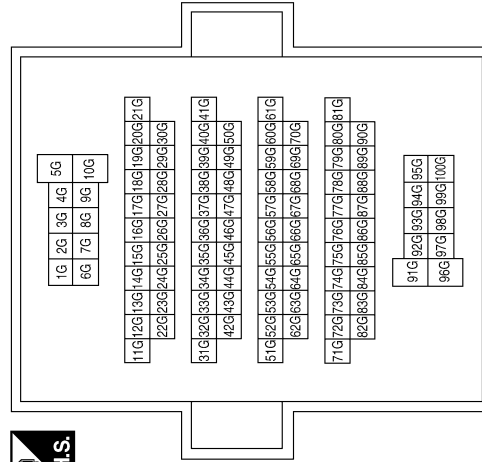

ABLIA4200GB

FRONT FOG LAMP SYSTEM


< WIRING DIAGRAM >

Connector No.	E101
Connector Name	FRONT FOG LAMP LH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	W/R	-
2	B	-

Connector No.	M179
Connector Name	JOINT CONNECTOR-M07
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
10	L	-
11	L	-
16	P	-
17	P	-

Connector No.	M178
Connector Name	JOINT CONNECTOR-M08
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
10	L	-
14	L	-
16	P	-
20	P	-

Connector No.	E123
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
50	W/R	FR FOG LAMP LH
51	W/R	FR FOG LAMP RH

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L

Connector No.	E102
Connector Name	FRONT FOG LAMP RH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	W/R	-
2	B	-


ABLI1A4201GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

FRONT FOG LAMP SYSTEM

< WIRING DIAGRAM >

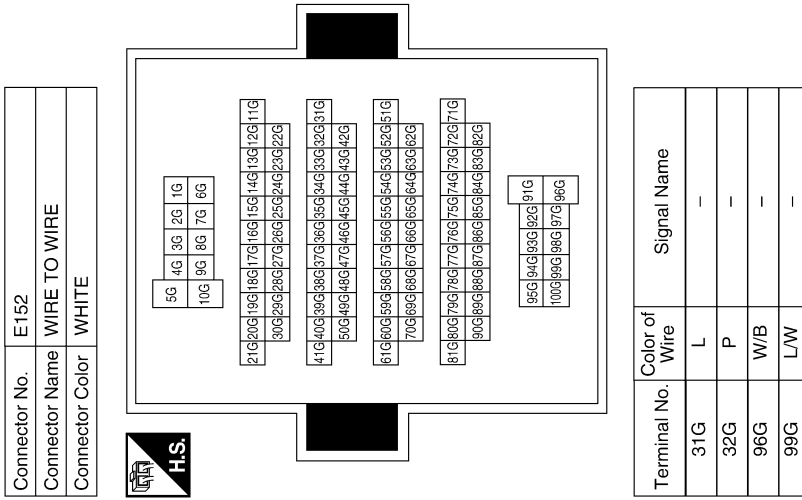

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM

< WIRING DIAGRAM >

TURN SIGNAL AND HAZARD WARNING LAMPS CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



7P	6P	5P	4P	3P	2P	1P		
16P	15P	14P	13P	12P	11P	10P	9P	8P

Connector No.	M8
Connector Name	WIRE TO WIRE
Connector Color	WHITE



7	6	5	4	3	2	1		
16	15	14	13	12	11	10	9	8

Terminal No.	5P	O/L	Signal Name	-
--------------	----	-----	-------------	---

Terminal No.	14	B	Signal Name	-
--------------	----	---	-------------	---

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name
2	SB	INPUT 5
3	G/Y	INPUT 4
4	Y	INPUT 3
5	G/B	INPUT 2
6	V	INPUT 1
29	W/B	HAZARD SW
32	R/G	OUTPUT 5
33	R/Y	OUTPUT 4
34	L	OUTPUT 3
35	O/B	OUTPUT 2
36	R/W	OUTPUT 1
38	W/L	IGN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK




56	57	58	59	60	61	62	63	64
65	66	67	68	69	70			

Terminal No.	Color of Wire	Signal Name
60	G/B	FLASHER OUTPUT (LEFT)
61	G/Y	FLASHER OUTPUT (RIGHT)
67	B	GND (POWER)
70	W/B	BAT (F/L)

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM


< WIRING DIAGRAM >

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	O	ACCESSORY
8	Y/R	BATTERY
9	B	GND
11	L	CAN-H
12	P	CAN-L
24	O/L	RUN/START

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R/W	-
2	O/B	-
3	L	-
4	R/Y	-
5	R/G	-
6	V	-
7	G/B	-
8	SB	-
9	G/Y	-
10	Y	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

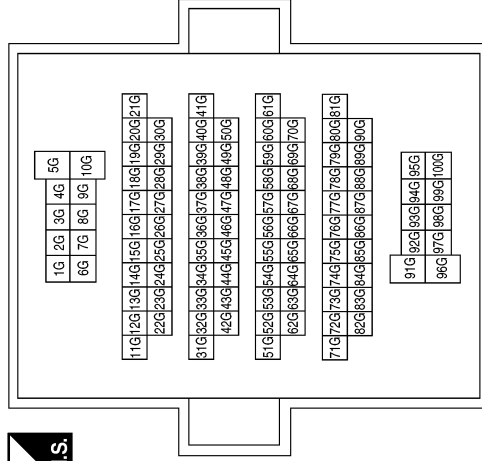

Terminal No.	Color of Wire	Signal Name
38G	G/B	-
39G	G/Y	-
96G	W/B	-
99G	W/L	-


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM


< WIRING DIAGRAM >

Connector No.	M39
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
4Q	Y/R	-

Connector No.	M47
Connector Name	HAZARD SWITCH (WITH 2 CONTROL DIAL SYSTEM OR AUTO A/C)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B	-
2	W/B	-

Connector No.	M55
Connector Name	HAZARD SWITCH (WITH 3 CONTROL DIAL SYSTEM WITHOUT AUTO A/C)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
4	W/B	-
5	B	-

Connector No.	M60
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
6T	O	-

Connector No.	M74
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
12	G/Y	-

Connector No.	M75
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
3	B	-

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM


< WIRING DIAGRAM >

Connector No.	M179
Connector Name	JOINT CONNECTOR-M07
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
11	L	-
13	L	-
17	P	-
19	P	-

Connector No.	M178
Connector Name	JOINT CONNECTOR-M08
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
10	L	-
14	L	-
16	P	-
20	P	-

Connector No.	M158
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	G/B	-

Connector No.	E11
Connector Name	FRONT COMBINATION LAMP LH (WITHOUT DAYTIME LIGHT SYSTEM)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
4	B	-
5	G/B	-

Connector No.	E6
Connector Name	FRONT COMBINATION LAMP LH (WITH DAYTIME LIGHT SYSTEM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
4	B	-
5	G/B	-

Connector No.	M192
Connector Name	JOINT CONNECTOR-M02
Connector Color	GREEN



Terminal No.	Color of Wire	Signal Name
1	O	-
2	O	-
6	O/L	-
7	O/L	-
13	Y/R	-
14	Y/R	-

ABL1A4222GB


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM


< WIRING DIAGRAM >

Connector No.	E41
Connector Name	WIRE TO WIRE
Connector Color	GRAY

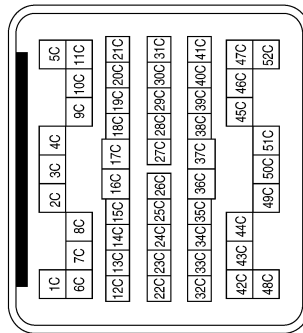


Terminal No.	Color of Wire	Signal Name
34C	G/Y	-
35C	G/B	-
45C	B	-

Connector No.	E107
Connector Name	FRONT COMBINATION LAMP RH (WITHOUT DAYTIME LIGHT SYSTEM)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
4	B	-
5	G/Y	-

Connector No.	E108
Connector Name	FRONT COMBINATION LAMP RH (WITH DAYTIME LIGHT SYSTEM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
4	B	-
5	G/Y	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

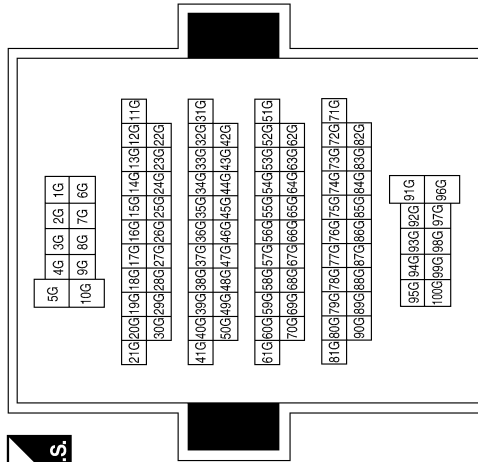

Terminal No.	Color of Wire	Signal Name
38G	G/B	-
39G	G/Y	-
96G	W/B	-
99G	L/W	-

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM

< WIRING DIAGRAM >

Connector No.	C14
Connector Name	REAR COMBINATION LAMP RH
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
1	B	-
8	G/Y	-

Connector No.	C13
Connector Name	REAR COMBINATION LAMP LH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	B	-
8	G/B	-

Connector No.	C1
Connector Name	WIRE TO WIRE
Connector Color	GRAY

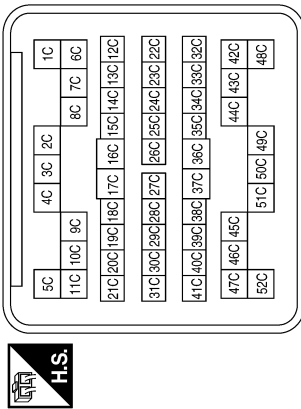

Terminal No.	Color of Wire	Signal Name
34C	G/Y	-
35C	G/B	-
45C	B	-

Connector No.	D4
Connector Name	DOOR MIRROR LH (WITH AUTOMATIC DRIVE POSITIONER)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
11	B	-
15	G/B	-

Connector No.	D3
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	G/B	-

Connector No.	D2
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
14	B	-

ABLI1A4224GB


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM


< WIRING DIAGRAM >

Connector No.	D107
Connector Name	DOOR MIRROR RH (WITH AUTOMATIC DRIVE POSITIONER)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
11	B	-
15	G/Y	-

Connector No.	D102
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
12	G/Y	-

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	B	-


ABLIA4253GB

PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM

< WIRING DIAGRAM >

PARKING, LICENSE PLATE AND TAIL LAMPS CONNECTORS

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	SB	INPUT 5
3	G/Y	INPUT 4
4	Y	INPUT 3
5	G/B	INPUT 2
6	V	INPUT 1
32	R/G	OUTPUT 5
33	R/Y	OUTPUT 4
34	L	OUTPUT 3
35	O/B	OUTPUT 2
36	R/W	OUTPUT 1
38	W/L	IGN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
67	B	GND (POWER)
70	W/B	BAT (F/L)

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R/W	-
2	O/B	-
3	L	-
4	R/Y	-
5	R/G	-
6	V	-
7	G/B	-
8	SB	-
9	G/Y	-
10	Y	-


Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

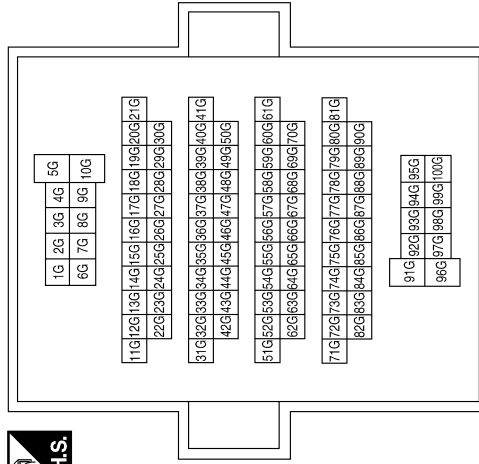

PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM


< WIRING DIAGRAM >

Connector No.	E6
Connector Name	FRONT COMBINATION LAMP LH (WITH DAYTIME LIGHT SYSTEM)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
4	B	-
6	R/L	-

Connector No.	M179
Connector Name	JOINT CONNECTOR-M07
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
10	L	-
11	L	-
16	P	-
17	P	-

Connector No.	M178
Connector Name	JOINT CONNECTOR-M08
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
10	L	-
14	L	-
16	P	-
20	P	-

Connector No.	E107
Connector Name	FRONT COMBINATION LAMP RH (WITHOUT DAYTIME LIGHT SYSTEM)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
4	B	-
6	R/L	-

Connector No.	E41
Connector Name	WIRE TO WIRE
Connector Color	GRAY

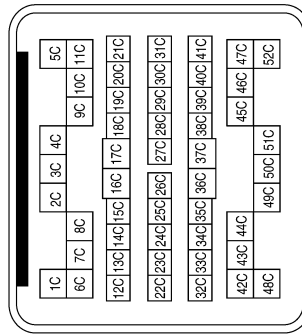

Terminal No.	Color of Wire	Signal Name
45C	B	-
46C	R/L	-

Connector No.	E11
Connector Name	FRONT COMBINATION LAMP LH (WITHOUT DAYTIME LIGHT SYSTEM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
4	B	-
6	R/L	-

ABLI1A4208GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM

< WIRING DIAGRAM >

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
57	R/L	TAIL LAMP
59	B	GND (POWER)

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L

Connector No.	E108
Connector Name	FRONT COMBINATION LAMP RH (WITH DAYTIME LIGHT SYSTEM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
4	B	-
6	R/L	-


Connector No.	C1
Connector Name	WIRE TO WIRE
Connector Color	GRAY

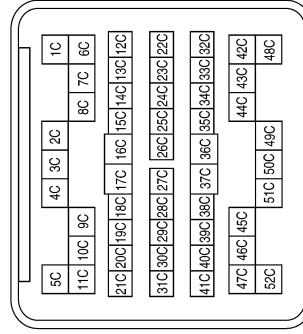

Terminal No.	Color of Wire	Signal Name
45C	B	-
46C	R/L	-

Terminal No.	Color of Wire	Signal Name
31G	L	-
32G	P	-
96G	W/B	-
99G	L/W	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

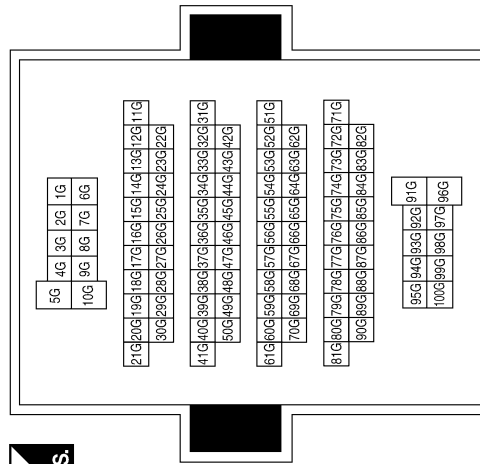


ABLIA4209GB

PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM


< WIRING DIAGRAM >

Connector No.	C14
Connector Name	REAR COMBINATION LAMP RH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	B	-
6	R/L	-

Connector No.	C13
Connector Name	REAR COMBINATION LAMP LH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	B	-
6	R/L	-

Connector No.	C12
Connector Name	LICENSE PLATE LAMPS
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R/L	-
2	B	-

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

ABL1A3258GB

STOP LAMP

< WIRING DIAGRAM >


STOP LAMP

Wiring Diagram

INFOID:000000009878549

CS : COLUMN SHIFT
FS : FLOOR SHIFT

STOP LAMP

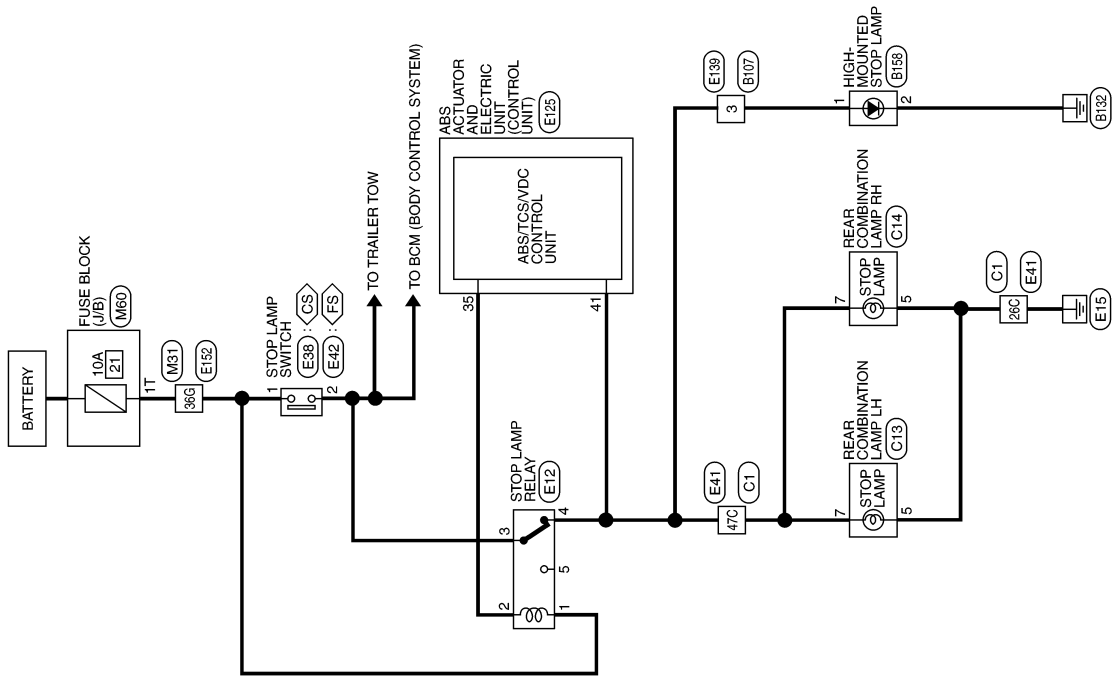


ABLWA2654GB

STOP LAMP

< WIRING DIAGRAM >


STOP LAMP CONNECTORS

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

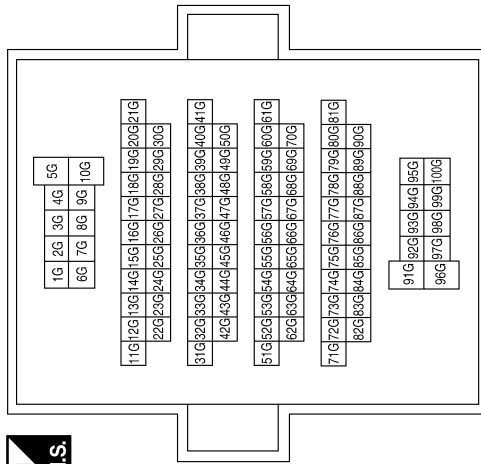

Terminal No.	Color of Wire	Signal Name
36G	R/Y	-

Connector No.	M60
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1T	R/Y	-

Connector No.	E12
Connector Name	STOP LAMP RELAY
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	R/Y	-
2	L/W	-
3	R/G	-
4	R/B	-
5	-	-

Connector No.	E38
Connector Name	STOP LAMP SWITCH (COLUMN SHIFT)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R/Y	-
2	R/G	-

ABL1A4210GB


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

STOP LAMP

< WIRING DIAGRAM >

Connector No.	E41
Connector Name	WIRE TO WIRE
Connector Color	GRAY

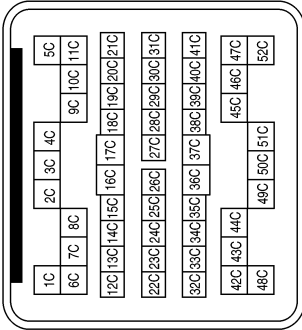


Terminal No.	Color of Wire	Signal Name
26C	B	-
47C	R/B	-

Connector No.	E42
Connector Name	STOP LAMP SWITCH (FLOOR SHIFT)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	R/Y	-
2	R/G	-

Connector No.	E125
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
35	L/W	BRL OUT
41	R/B	BLS

Connector No.	E139
Connector Name	WIRE TO WIRE
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
3	R/B	-


STOP LAMP

< WIRING DIAGRAM >

Connector No.	C13
Connector Name	REAR COMBINATION LAMP LH
Connector Color	GRAY




Connector No.	C1
Connector Name	WIRE TO WIRE
Connector Color	GRAY

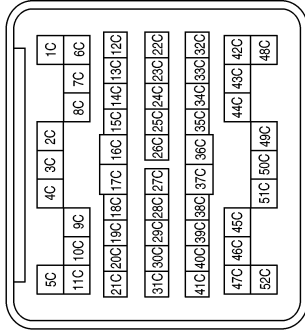

Terminal No.	Color of Wire	Signal Name
5	B	-
7	R/B	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

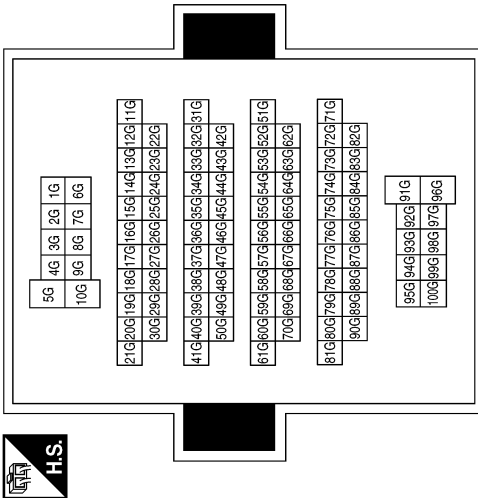


Terminal No.	Color of Wire	Signal Name
36G	R/Y	-

Connector No.	B158
Connector Name	HIGH-MOUNTED STOP LAMP
Connector Color	WHITE




Connector No.	B107
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	R/B	-
2	B	-

Connector No.	C14
Connector Name	REAR COMBINATION LAMP RH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
5	B	-
7	R/B	-

ABLL1A6481GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

BACK-UP LAMP

< WIRING DIAGRAM >


BACK-UP LAMP

Wiring Diagram

INFOID:000000009878550

BACK-UP LAMP

- ◊ AI : WITH AUTO ANTI-DAZZLING INSIDE MIRROR
- ◊ CS : COLUMN SHIFT
- ◊ FS : FLOOR SHIFT

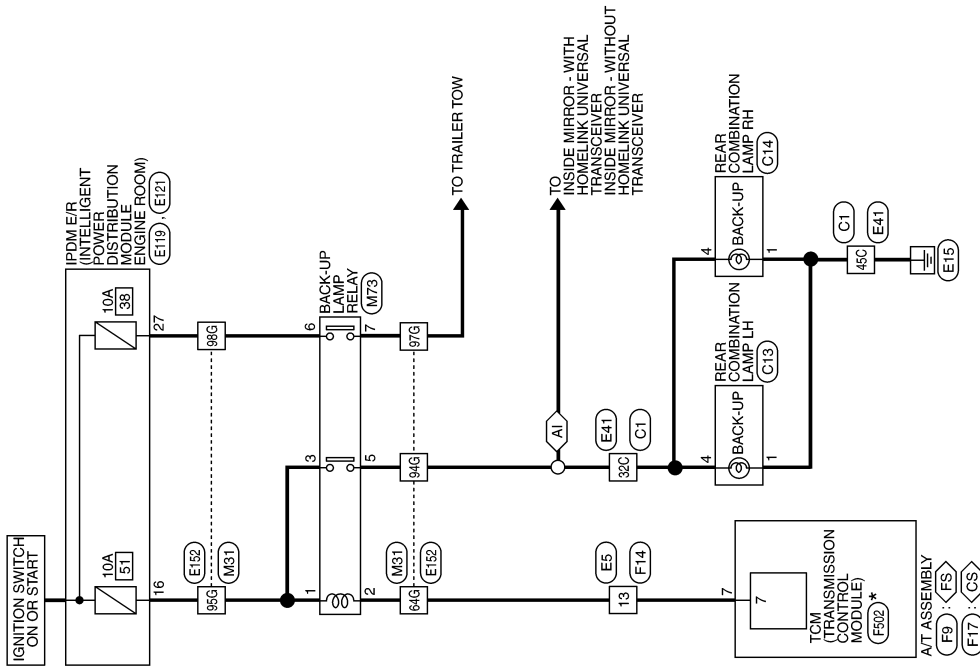

*: THIS CONNECTOR IS NOT SHOWN IN "HARNES LAYOUT" OF PG SECTION.


ABLWA2648GB

BACK-UP LAMP

< WIRING DIAGRAM >

BACK-UP LAMP CONNECTORS

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

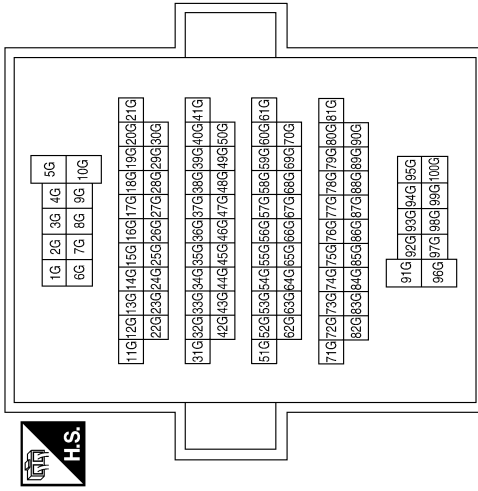


Terminal No.	Color of Wire	Signal Name
64G	R	-
94G	G/W	-
95G	G	-
97G	Y/R	-
98G	W/B	-

Connector No.	M73
Connector Name	BACK-UP LAMP RELAY
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
1	G	-
2	R	-
3	G	-
5	G/W	-
6	W/B	-
7	Y/R	-

Connector No.	E5
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
13	R	-

Connector No.	E41
Connector Name	WIRE TO WIRE
Connector Color	GRAY

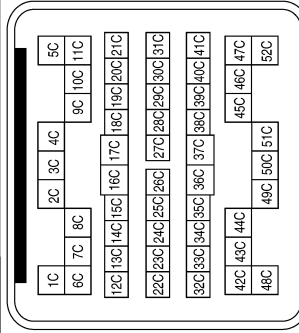

Terminal No.	Color of Wire	Signal Name
32C	G/W	-
45C	B	-

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
16	G	REVERSE LAMP

ABLI4195GB


A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

BACK-UP LAMP


< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
64G	R	-
94G	G/W	-
95G	G	-
97G	Y/R	-
98G	W/B	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

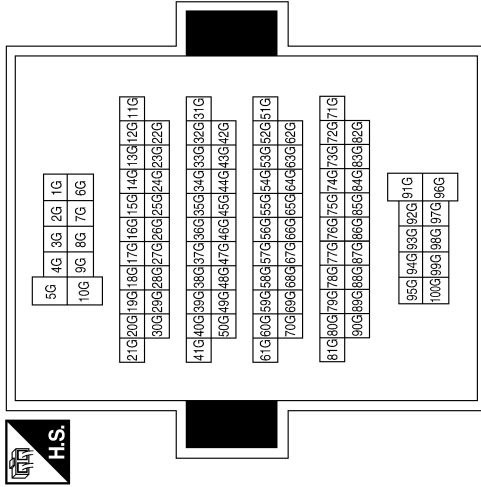


Connector No.	E121
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
27	W/B	T TOW REV LAMP


Connector No.	F17
Connector Name	A/T ASSEMBLY (COLUMN SHIFT)
Connector Color	GREEN



Connector No.	F14
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Connector No.	F9
Connector Name	A/T ASSEMBLY (FLOOR SHIFT)
Connector Color	GREEN



Terminal No.	Color of Wire	Signal Name
7	R	-

Terminal No.	Color of Wire	Signal Name
13	R	-

Terminal No.	Color of Wire	Signal Name
7	R	-


ABLIA4196GB

BACK-UP LAMP


< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
32C	G/W	-
45C	B	-

Connector No.	C1
Connector Name	WIRE TO WIRE
Connector Color	GRAY

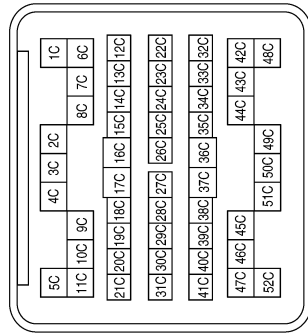


Connector No.	F502
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
7	O	REV LAMP RLY

Connector No.	C14
Connector Name	REAR COMBINATION LAMP RH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	B	-
4	G/W	-

Connector No.	C13
Connector Name	REAR COMBINATION LAMP LH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	B	-
4	G/W	-

AALIA0075GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL


TRAILER TOW

< WIRING DIAGRAM >

TRAILER TOW

Wiring Diagram

INFOID:000000009878551

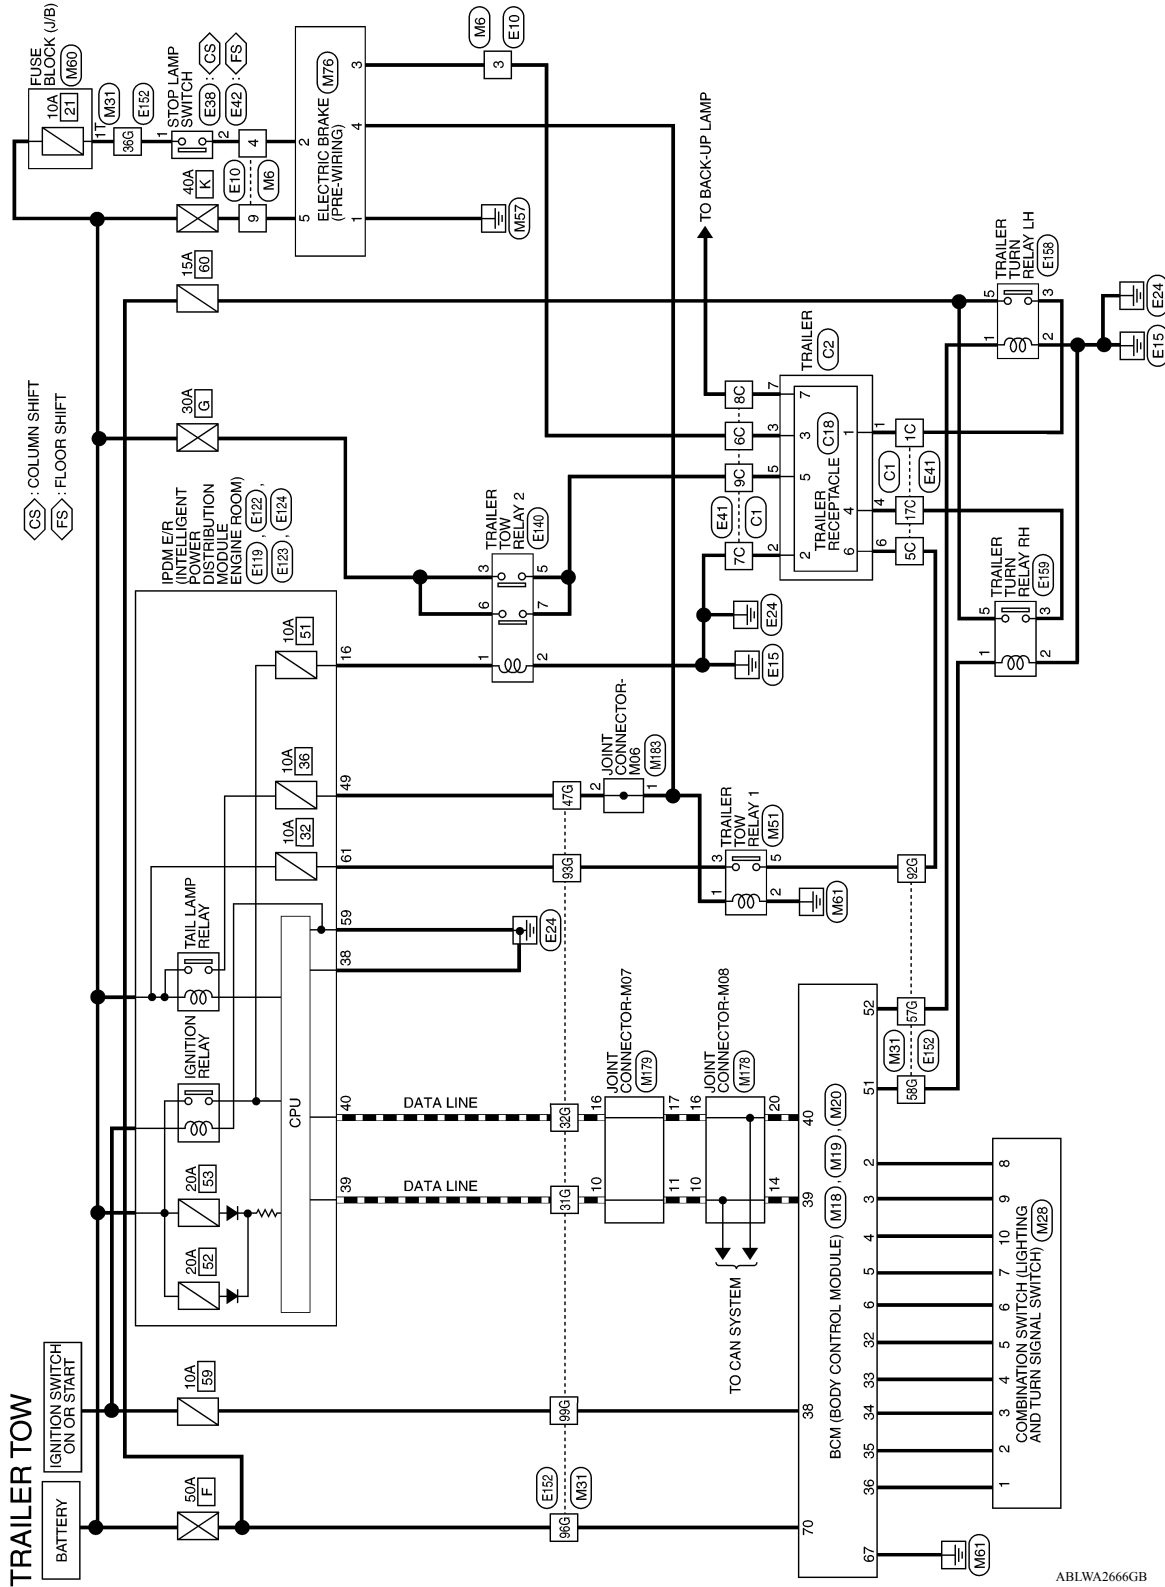

ABLWA2666GB

TRAILER TOW

< WIRING DIAGRAM >

TRAILER TOW CONNECTORS

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE

4	3	2	1
10	9	8	7
6	5		



Terminal No.	Color of Wire	Signal Name
3	BR/W	-
4	R/G	-
9	R	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name
2	SB	INPUT 5
3	G/Y	INPUT 4
4	Y	INPUT 3
5	G/B	INPUT 2
6	V	INPUT 1
32	R/G	OUTPUT 5
33	R/Y	OUTPUT 4
34	L	OUTPUT 3
35	O/B	OUTPUT 2
36	R/W	OUTPUT 1
38	W/L	IGN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

41	42	43	44	45	46	47	48	49
50	51	52	53	54	55			



Terminal No.	Color of Wire	Signal Name
51	Y/B	TRAILER FLASHER OUTPUT (RIGHT)
52	G/B	TRAILER FLASHER OUTPUT (LEFT)

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK

56	57	58	59	60	61	62	63	64
65	66	67	68	69	70			



Terminal No.	Color of Wire	Signal Name
67	B	GND (POWER)
70	W/B	BAT (F/L)

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE



12	13	10	9	8	7
14	11	1	2	3	4
5	6				

Terminal No.	Color of Wire	Signal Name
1	R/W	-
2	O/B	-
3	L	-
4	R/Y	-
5	R/G	-
6	V	-
7	G/B	-
8	SB	-
9	G/Y	-
10	Y	-

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

TRAILER TOW

< WIRING DIAGRAM >


Connector No.	M51
Connector Name	TRAILER TOW RELAY 1
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
1	R/L	-
2	B	-
3	BR	-
5	R	-

Terminal No.	Color of Wire	Signal Name
31G	L	-
32G	P	-
36G	R/Y	-
47G	R/L	-
57G	G/B	-
58G	Y/B	-
92G	R	-
93G	BR	-
96G	W/B	-
99G	W/L	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

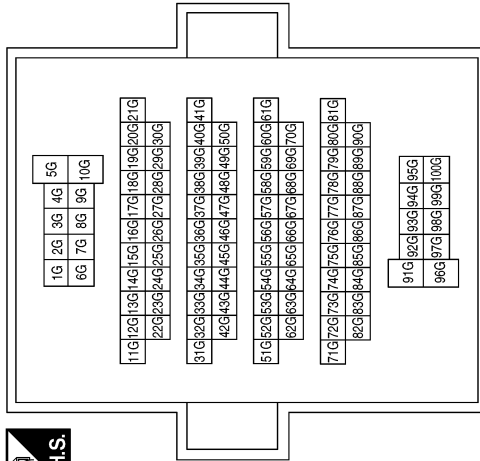


Connector No.	M178
Connector Name	JOINT CONNECTOR-M08
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
10	L	-
14	L	-
16	P	-
20	P	-

Connector No.	M76
Connector Name	ELECTRIC BRAKE (PRE-WIRING)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B	-
2	R/G	-
3	BR/W	-
4	R/L	-
5	R	-

Connector No.	M60
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1T	R/Y	-

ABLIA6483GB

TRAILER TOW


< WIRING DIAGRAM >

Connector No.	E10
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
3	BR/W	-
4	R/G	-
9	R	-

Connector No.	M183
Connector Name	JOINT CONNECTOR-M06
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	R/L	-
2	R/L	-


Connector No.	M179
Connector Name	JOINT CONNECTOR-M07
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
10	L	-
11	L	-
16	P	-
17	P	-

Terminal No.	Color of Wire	Signal Name
1C	G/B	-
5C	R	-
6C	BR/W	-
7C	B	-
8C	Y/R	-
9C	W/L	-
17C	Y/B	-

Connector No.	E41
Connector Name	WIRE TO WIRE
Connector Color	GRAY

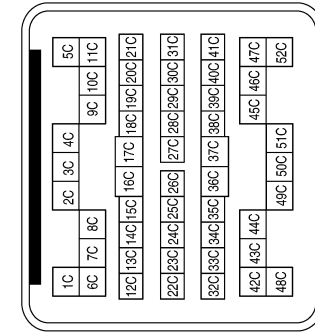

Connector No.	E38
Connector Name	STOP LAMP SWITCH (COLUMN SHIFT)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R/Y	-
2	R/G	-


ABL1A4215GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

TRAILER TOW


< WIRING DIAGRAM >

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
16	G	REVERSE LAMP

Connector No.	E42
Connector Name	STOP LAMP SWITCH (FLOOR SHIFT)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	R/Y	-
2	R/G	-

Connector No.	E140
Connector Name	TRAILER TOW RELAY 2
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
1	G	-
2	B	-
3	Y	-
5	W/L	-
6	Y	-
7	W/L	-

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
59	B	GND (POWER)
61	BR	TRAIL RLY SUPPLY

Connector No.	E123
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
49	R/L	ILLUMINATION

ABLIA4216GB

TRAILER TOW

< WIRING DIAGRAM >


Connector No.	E158
Connector Name	TRAILER TURN RELAY LH
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	G/B	-
2	B	-
3	G/B	-
5	L	-


Terminal No.	Color of Wire	Signal Name
31G	L	-
32G	P	-
36G	R/Y	-
47G	R/L	-
57G	G/B	-
58G	Y/B	-
92G	R	-
93G	BR	-
96G	W/B	-
99G	L/W	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

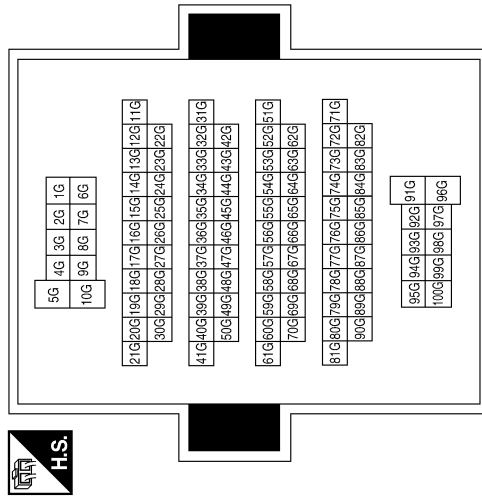

Terminal No.	Color of Wire	Signal Name
1C	G/B	-
5C	R	-
6C	BR/W	-
7C	B	-
8C	Y/R	-
9C	W/L	-
17C	Y/B	-

Connector No.	C1
Connector Name	WIRE TO WIRE
Connector Color	GRAY

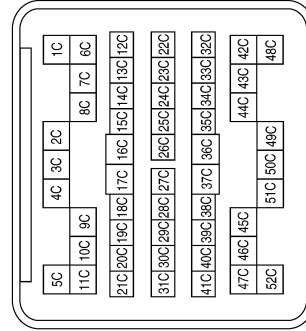

Connector No.	E159
Connector Name	TRAILER TURN RELAY RH
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	Y/B	-
2	B	-
3	Y/B	-
5	L	-

ABL1A4217GB


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

TRAILER TOW

< WIRING DIAGRAM >

Connector No.	C18
Connector Name	TRAILER RECEPTACLE
Connector Color	BLACK

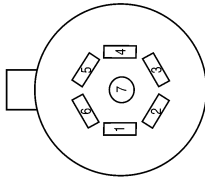

Terminal No.	Color of Wire	Signal Name
1	-	STOP/TURN LH
2	-	GROUND
3	-	ELECTRIC BRAKE
4	-	STOP/TURN RH
5	-	BATTERY
6	-	RUNNING LAMPS
7	-	BACK-UP LAMPS

Connector No.	C2
Connector Name	TRAILER
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	G/B	-
2	B	-
3	BR/W	-
4	Y/B	-
5	W/L	-
6	R	-
7	Y/R	-

ABLIA4218GB

EXTERIOR LIGHTING SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

EXTERIOR LIGHTING SYSTEM SYMPTOMS

Symptom Table

INFOID:000000009878552

CAUTION:

Perform the self-diagnosis with CONSULT before the symptom diagnosis. Perform the trouble diagnosis if any DTC is detected.

Symptom		Possible cause	Inspection item
Headlamp does not switch to the high beam.	One side	<ul style="list-style-type: none"> • Fuse • Harness between IPDM E/R and the front combination lamp • IPDM E/R 	Headlamp (HI) circuit Refer to EXL-36 .
	Both sides	Symptom diagnosis "BOTH SIDE HEADLAMPS DO NOT SWITCH TO HIGH BEAM" Refer to EXL-130 .	
High beam indicator lamp is not turned ON. (Headlamp switches to the high beam.)		<ul style="list-style-type: none"> • Combination meter • BCM 	<ul style="list-style-type: none"> • Combination meter. Data monitor "HI-BEAM IND". • BCM (HEAD LAMP) Active test "HEADLAMP".
Headlamp does not switch to the low beam.	Both sides	<ul style="list-style-type: none"> • Combination switch (lighting and turn signal switch) • Harness between the combination switch (lighting and turn signal switch) and BCM • BCM 	Combination switch (lighting and turn signal switch) Refer to BCS-50 .
		High beam request signal	IPDM E/R Data monitor "HL HI REQ".
Headlamp does not turn ON.	One side	<ul style="list-style-type: none"> • Fuse • Bulb • Harness between IPDM E/R and the front combination lamp • Front combination lamp • IPDM E/R 	Headlamp (LO) circuit. Refer to EXL-41 .
	Both sides	Symptom diagnosis "BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON" Refer to EXL-131 .	
Headlamp does not turn OFF.	When the ignition switch is turned ON	<ul style="list-style-type: none"> • BCM • Combination switch (lighting and turn signal switch) 	Combination switch (lighting and turn signal switch). Refer to BCS-50 .
Headlamp is not turned ON/OFF with the lighting switch AUTO.		<ul style="list-style-type: none"> • Combination switch (lighting and turn signal switch) • Harness between the combination switch (lighting and turn signal switch) and BCM • BCM 	Combination switch (lighting and turn signal switch). Refer to EXL-58 .
		<ul style="list-style-type: none"> • Optical sensor • Harness between the optical sensor and BCM • BCM 	Optical sensor. Refer to EXL-58 .

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

EXTERIOR LIGHTING SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

Symptom	Possible cause	Inspection item	
Daytime light system does not activate.	<ul style="list-style-type: none"> • Either high beam bulb • Parking brake switch • Combination switch (lighting and turn signal switch) • BCM • IPDM E/R • Daytime light relay • Harness between IPDM E/R and daytime light relay. 	Daytime light system description. Refer to EXL-11 .	
Front fog lamp is not turned ON.	One side	<ul style="list-style-type: none"> • Front fog lamp bulb • Harness between IPDM E/R and the front combination lamp • Front combination lamp • IPDM E/R 	Front fog lamp circuit. Refer to EXL-44 .
	Both side	Symptom diagnosis "BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON" Refer to EXL-133 .	
Parking lamp is not turned ON.	One side	<ul style="list-style-type: none"> • Fuse • Parking lamp bulb • Harness between IPDM E/R and the front/rear combination lamp • Front/rear combination lamp • IPDM E/R 	Parking lamp circuit. Refer to EXL-46 .
	Both sides	Symptom diagnosis "PARKING, LICENSE PLATE AND TAIL LAMPS ARE NOT TURNED ON" Refer to EXL-132 .	
Turn signal lamp does not blink.	Indicator lamp is normal. (The applicable side performs the high flasher activation).	<ul style="list-style-type: none"> • Harness between BCM and each turn signal lamp • Turn signal lamp bulb • Door mirror (if equipped with turn signals in the door mirrors) 	Turn signal lamp circuit. Refer to EXL-52 .
Turn signal indicator lamp does not blink.	One side	Combination meter	—
	Both sides (Always)	<ul style="list-style-type: none"> • Turn signal indicator lamp signal • Combination meter • BCM 	<ul style="list-style-type: none"> • Combination meter. Data monitor "TURN IND". • BCM (FLASHER) Active test "FLASHER".
	Both sides (Does blink when activating the hazard warning lamp with the ignition switch OFF)	<ul style="list-style-type: none"> • The combination meter power supply and the ground circuit • Combination meter 	Combination meter. Power supply and the ground circuit Refer to MWI-33 .

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

NORMAL OPERATING CONDITION

Description

INFOID:000000009878553

AUTO LIGHT SYSTEM

The auto light system may not turn the headlamp ON/OFF immediately after passing a dark area or a bright area (short tunnel, sky bridge, shadowed area etc.). This is normal.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

BOTH SIDE HEADLAMPS DO NOT SWITCH TO HIGH BEAM

< SYMPTOM DIAGNOSIS >

BOTH SIDE HEADLAMPS DO NOT SWITCH TO HIGH BEAM

Description

INFOID:000000009878554

The headlamps (both sides) do not switch to high beam when the combination switch (lighting and turn signal switch) is in the HI or PASS setting.

Diagnosis Procedure

INFOID:000000009878555

1.COMBINATION SWITCH (LIGHTING AND TURN SIGNAL SWITCH) INSPECTION

Check the combination switch (lighting and turn signal switch). Refer to [BCS-50. "Symptom Table"](#).

Is the combination switch (lighting and turn signal switch) normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning part.

2.CHECK HEADLAMP (HI) REQUEST SIGNAL INPUT

 WITH CONSULT DATA MONITOR

1. Select "HL HI REQ" of IPDM E/R DATA MONITOR item.

2. With operating the combination switch (lighting and turn signal switch), check the monitor status.

Monitor item	Condition		Monitor status
HL HI REQ	Combination switch (lighting and turn signal switch) (2ND)	HI or PASS	ON
		Except for HI or PASS	OFF

Is the item status normal?

YES >> GO TO 3.

NO >> Replace BCM. Refer to [BCS-52. "Removal and Installation"](#).

3.HEADLAMP (HI) CIRCUIT INSPECTION

Check the headlamp (HI) circuit. Refer to [EXL-36. "Diagnosis Procedure - Without Daytime Light System"](#) or [EXL-37. "Diagnosis Procedure - With Daytime Light System"](#).

Is the headlamp (HI) circuit normal?

YES >> Replace IPDM E/R. Refer to [PCS-28. "Removal and Installation of IPDM E/R"](#).

NO >> Repair or replace the malfunctioning part.

BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON

Description

INFOID:000000009878556

The headlamps (both sides) do not turn ON in any combination switch (lighting and turn signal switch) setting.

Diagnosis Procedure

INFOID:000000009878557

1.COMBINATION SWITCH (LIGHTING AND TURN SIGNAL SWITCH) INSPECTION

Check the combination switch (lighting and turn signal switch). Refer to [BCS-50, "Symptom Table"](#).

Is the combination switch (lighting and turn signal switch) normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning part.

2.CHECK HEADLAMP (LO) REQUEST SIGNAL INPUT

Ⓜ WITH CONSULT DATA MONITOR

1. Select "HL LO REQ" of IPDM E/R DATA MONITOR item.

2. With operating the combination switch (lighting and turn signal switch), check the monitor status.

Monitor item	Condition	Monitor status	
HL LO REQ	Combination switch (lighting and turn signal switch)	2ND	ON
		OFF	OFF

Is the item status normal?

YES >> GO TO 3.

NO >> Replace BCM. Refer to [BCS-52, "Removal and Installation"](#).

3.HEADLAMP (LO) CIRCUIT INSPECTION

Check the headlamp (LO) circuit. Refer to [EXL-41, "Description"](#).

Is the headlamp (LO) circuit normal?

YES >> Replace IPDM E/R. Refer to [PCS-28, "Removal and Installation of IPDM E/R"](#).

NO >> Repair or replace the malfunctioning part.

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

PARKING, LICENSE PLATE AND TAIL LAMPS ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

PARKING, LICENSE PLATE AND TAIL LAMPS ARE NOT TURNED ON

Description

INFOID:000000009878558

The parking, license plate and tail lamps do not turn ON in with any combination switch (lighting and turn signal switch) setting.

Diagnosis Procedure

INFOID:000000009878559

1.COMBINATION SWITCH (LIGHTING AND TURN SIGNAL SWITCH) INSPECTION

Check the combination switch (lighting and turn signal switch). Refer to [BCS-50. "Symptom Table"](#).

Is the combination switch (lighting and turn signal switch) normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning part.

2.CHECK TAIL LAMP RELAY REQUEST SIGNAL INPUT

 WITH CONSULT DATA MONITOR

1. Select "TAIL & CLR REQ" of IPDM E/R DATA MONITOR item.

2. With operating the combination switch (lighting and turn signal switch), check the monitor status.

Monitor item	Condition	Monitor status	
TAIL & CLR REQ	Combination switch (lighting and turn signal switch)	1ST	ON
		OFF	OFF

Is the item status normal?

YES >> GO TO 3.

NO >> Replace BCM. Refer to [BCS-52. "Removal and Installation"](#).

3.PARK LAMP CIRCUIT INSPECTION

Check the parking lamp circuit. Refer to [EXL-46. "Description"](#).

Is the tail lamp circuit normal?

YES >> Replace IPDM E/R. Refer to [PCS-28. "Removal and Installation of IPDM E/R"](#).

NO >> Repair or replace the malfunctioning part.

BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON

Description

INFOID:000000009878560

The front fog lamps do not turn ON in any combination switch (lighting and turn signal switch) setting.

Diagnosis Procedure

INFOID:000000009878561

1.COMBINATION SWITCH (LIGHTING AND TURN SIGNAL SWITCH) INSPECTION

Check the combination switch (lighting and turn signal switch). Refer to [BCS-50, "Symptom Table"](#).

Is the combination switch (lighting and turn signal switch) normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning part.

2.CHECK FRONT FOG LAMP REQUEST SIGNAL INPUT

Ⓜ WITH CONSULT DATA MONITOR

1. Select "FR FOG REQ" of IPDM E/R DATA MONITOR item.

2. With operating the combination switch (lighting and turn signal switch), check the monitor status.

Monitor item	Condition	Monitor status	
FR FOG REQ	Combination switch (lighting and turn signal switch) (2ND)	ON	ON
		OFF	OFF

Is the item status normal?

YES >> GO TO 3.

NO >> Replace BCM. Refer to [BCS-52, "Removal and Installation"](#).

3.FRONT FOG LAMP CIRCUIT INSPECTION

Check the front fog lamp circuit. Refer to [EXL-44, "Description"](#).

Is the front fog lamp circuit normal?

YES >> Replace IPDM E/R. Refer to [PCS-28, "Removal and Installation of IPDM E/R"](#).

NO >> Repair or replace the malfunctioning part.

A
B
C
D
E
F
G
H
I
J
K

EXL

M
N
O
P

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000010587034

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

Precaution for Work

INFOID:000000009878563

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and prevent them from being dropped.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with a new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After installation is complete, be sure to check that each part works properly.
- Follow the steps below to clean components:
 - Water soluble dirt:
 - Dip a soft cloth into lukewarm water, wring the water out of the cloth and wipe the dirty area.
 - Then rub with a soft, dry cloth.
 - Oily dirt:
 - Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%) and wipe the dirty area.
 - Then dip a cloth into fresh water, wring the water out of the cloth and wipe the detergent off.
 - Then rub with a soft, dry cloth.
 - Do not use organic solvent such as thinner, benzene, alcohol or gasoline.
 - For genuine leather seats, use a genuine leather seat cleaner.

PREPARATION

< PREPARATION >

PREPARATION


PREPARATION

Special Service Tool

INFOID:000000009878564

The actual shape of the tools may differ from those illustrated here.

Tool number (TechMate No.) Tool name	Description
— (J-46534) Trim Tool Set	Removing trim components

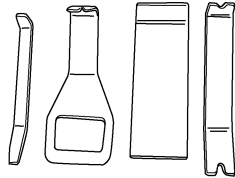

AWJIA0483ZZ

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

ADJUSTMENT AND INSPECTION

< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION

ADJUSTMENT AND INSPECTION

HEADLAMP

HEADLAMP : Aiming Adjustment

INFOID:000000009878565

CAUTION:


Do not use organic solvent (thinner, gasoline etc.)

NOTE:

- For details, refer to the regulations in your own country.
- Perform aiming if the vehicle front body has been repaired and/or the headlamp assembly has been replaced.

Before performing aiming adjustment, check the following:

- Keep all tires inflated to correct pressure.
- Place vehicle on level ground.
- See that the vehicle is unloaded (except for full levels of coolant, engine oil and fuel, and spare tire, jack, and tools). Have the driver or equivalent weight placed in drivers seat.
- Adjust aiming in the vertical direction by turning the adjustment screw.
- When performing adjustment, if necessary, cover the opposite headlamp.

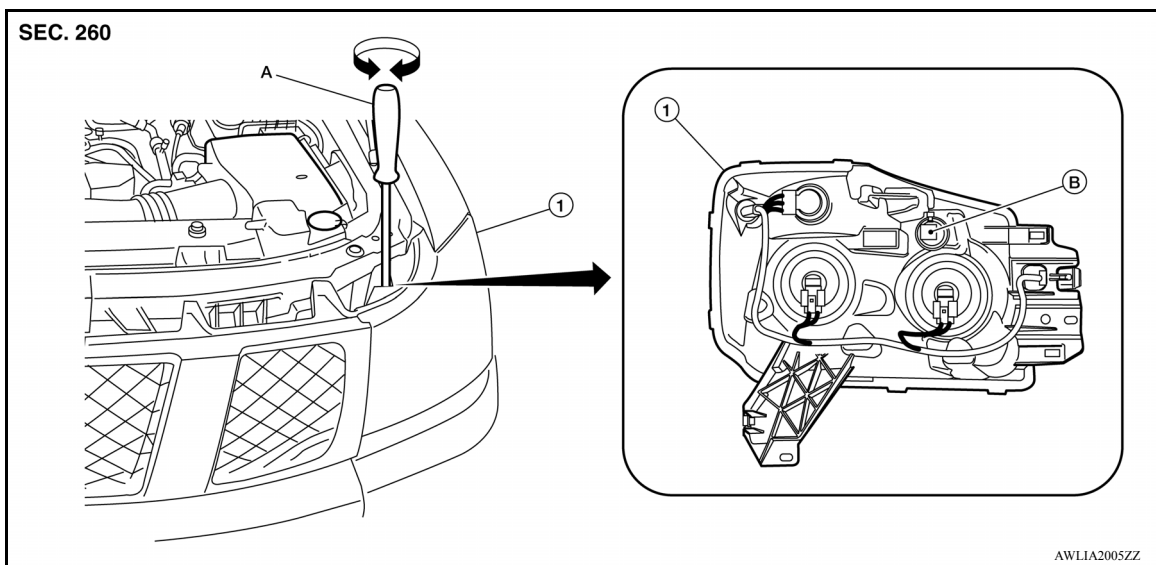

1. Front combination lamp

A. Suitable tool (for aiming adjustment) B. Adjusting screw

HEADLAMP : Headlamp Aiming

INFOID:000000009878566

NOTE:

Set the screen so that it is perpendicular to the road.

1. Position the screen.
2. Make the distance between the headlamp center and the screen 7.62 m (25 ft).
3. Start the engine and illuminate the headlamp (LO).

CAUTION:

Do not cover the lens surface with tape, etc. because it is made of plastic.


NOTE:

Block the light from the headlamp that is not being adjusted with a thick fabric or similar object, so that it does not reach the screen.

ADJUSTMENT AND INSPECTION

< REMOVAL AND INSTALLATION >

- Use the adjustment screw to adjust the low beams on the screen, so that it is within the aiming adjustment area.

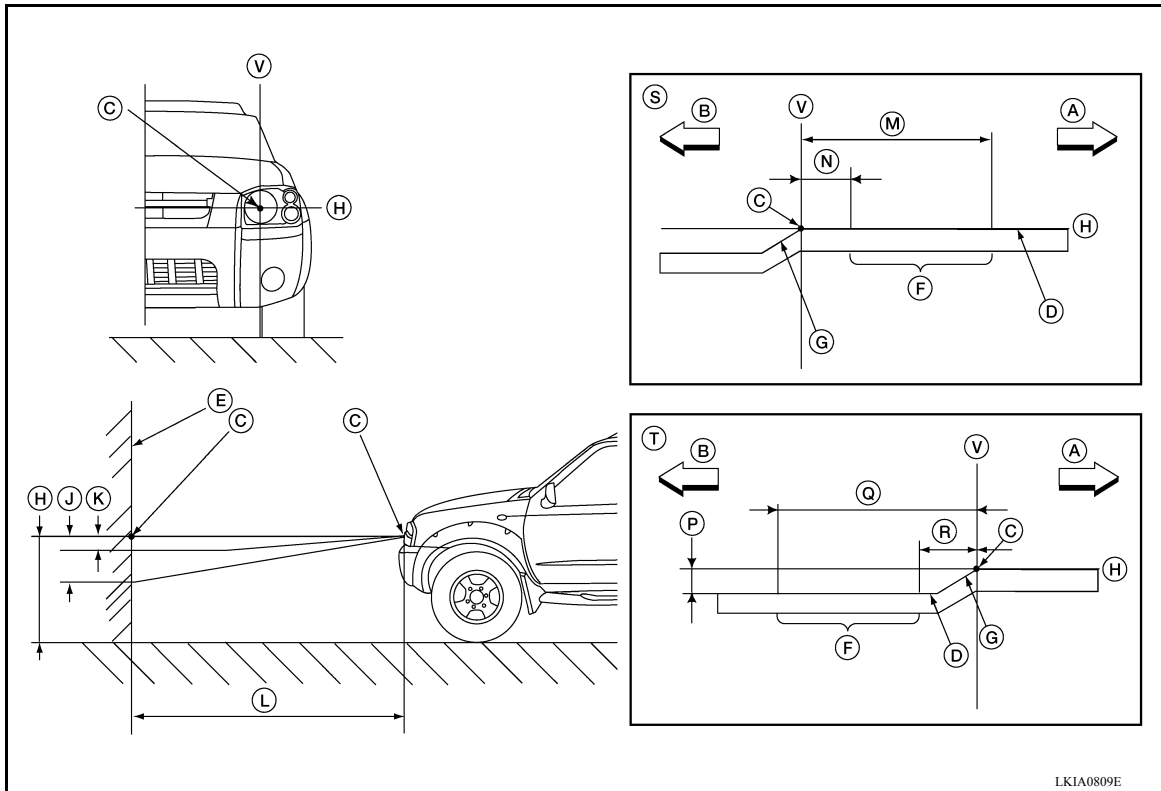

- | | | |
|-------------------------------------|---------------------------------------|--|
| A. Right | B. Left | C. Center of headlamp bulb (H-V point) |
| D. Cutoff line | E. Screen | F. Aim evaluation segment |
| G. Step | H. Horizontal center line of headlamp | J. 103 mm (4.06 in) |
| K. 37 mm (1.46 in) | L. 7.62 m (25 ft) | M. 399 mm (15.71 in) |
| N. 133 mm (5.24 in) | P. 53.2 mm (2.09 in) | Q. 466 mm (18.35 in) |
| R. 200 mm (7.87 in) | S. RH headlamp aiming screen | T. LH headlamp aiming screen |
| V. Vertical center line of headlamp | | |

FRONT FOG LAMP

FRONT FOG LAMP : Aiming Adjustment

INFOID:000000009878567


The fog lamp is a semi-sealed beam type which uses a replaceable halogen bulb.

Before performing aiming adjustment, check the following.

- Keep all tires inflated to correct pressure.
- Place vehicle on level ground.
- See that vehicle is unloaded (except for full levels of coolant, engine oil and fuel, and spare tire, jack, and tools). Have the driver or equivalent weight placed in driver seat.
- When performing adjustment, if necessary, cover the headlamps and opposite fog lamp.

NOTE:


Access adjustment screw from underneath front bumper. Using a suitable tool to adjust. Turn screw clockwise to raise pattern and counterclockwise to lower pattern.

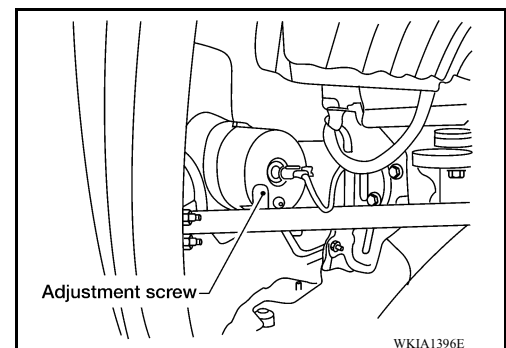


ADJUSTMENT AND INSPECTION

< REMOVAL AND INSTALLATION >

1. Set the distance between the screen and the center of the fog lamp lens as shown.
2. Turn front fog lamps ON.

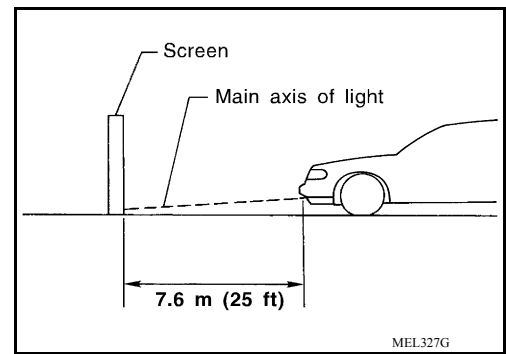

3. Adjust front fog lamps using adjusting screw so that the top edge of the high intensity zone is 100 mm (4 in) below the height of the fog lamp centers as shown.

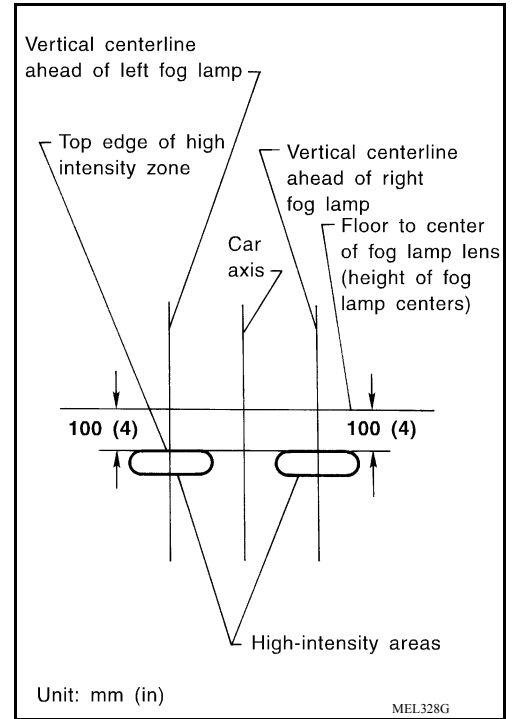

HEADLAMP

< REMOVAL AND INSTALLATION >

HEADLAMP

Bulb Replacement

INFOID:000000009878568

CAUTION:

- Disconnect the battery negative terminal or remove the fuse.
- Do not touch the glass surface of the bulb with bare hands or allow oil or grease to get on it to prevent damage to the bulb.
- Do not leave the bulb out of the lamp reflector for a long time because dust, moisture, smoke, etc. may affect the performance of the lamp.

HEADLAMP - LOW/HIGH BEAM

Removal

WARNING:

Do not touch bulb by hand while it is lit or right after being turned off. Burning may result.

1. Remove front combination lamp. Refer to [EXL-139, "Removal and Installation"](#).
2. Turn headlamp bulb counterclockwise and remove bulb.

Installation

Installation is in the reverse order of removal.

FRONT TURN SIGNAL/PARKING LAMP

Removal

1. Remove the front combination lamp. Refer to [EXL-139, "Removal and Installation"](#).
2. Turn the bulb socket counterclockwise.
3. Pull the bulb to remove it from the socket.

Installation

Installation is in the reverse order of removal.

FRONT SIDE MARKER LAMP

Removal

1. Remove the front combination lamp. Refer to [EXL-139, "Removal and Installation"](#).
2. Turn the bulb socket counterclockwise.
3. Pull to remove side marker bulb from the side marker bulb socket.

Installation

Installation is in the reverse order of removal.


Removal and Installation

INFOID:000000009878569

FRONT COMBINATION LAMP

Removal

1. Partially remove fender protector (front edge), refer to [EXT-24, "Removal and Installation"](#).
2. Remove front grille, refer to [EXT-20, "Removal and Installation"](#).
3. Remove the bolts (A), disconnect the harness connector from the front combination lamp (1) and remove.

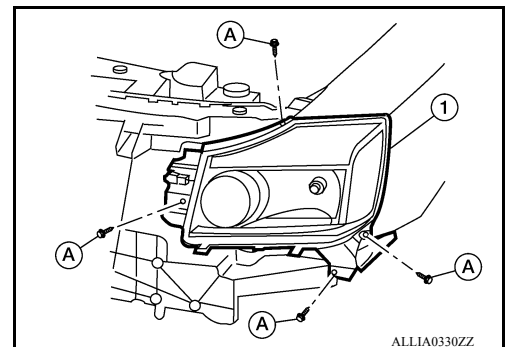

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

HEADLAMP

< REMOVAL AND INSTALLATION >

Installation

Installation is in the reverse order of removal.


NOTE:

After installation perform headlamp aiming adjustment. Refer to [EXL-136, "HEADLAMP : Aiming Adjustment"](#).

Disassembly and Assembly

INFOID:000000009878570

FRONT COMBINATION LAMP

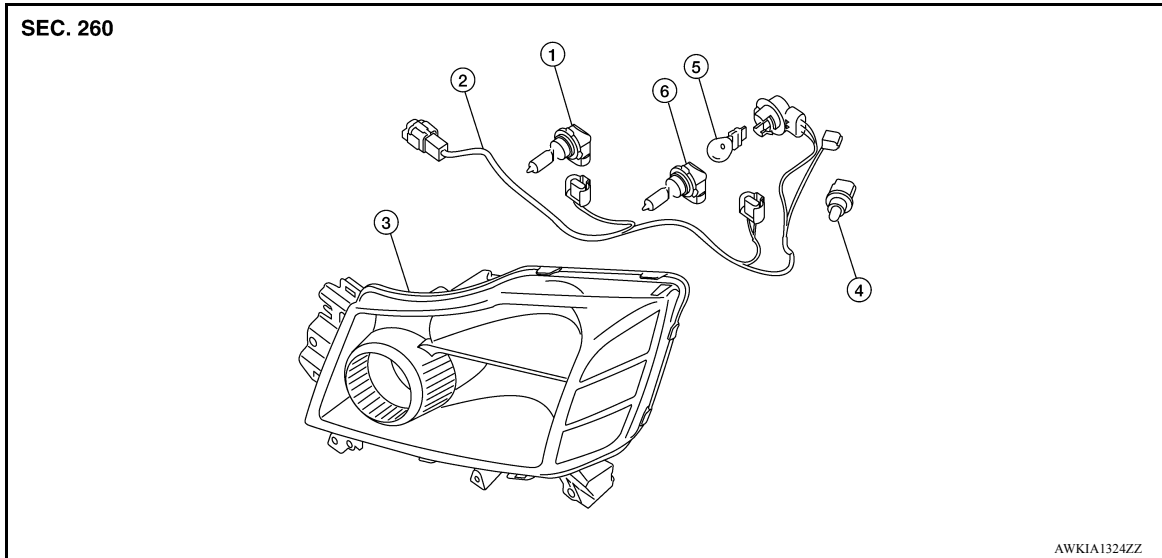

- | | | |
|------------------------------|-----------------------------------|-----------------------------|
| 1. Headlamp bulb (high beam) | 2. Front combination lamp harness | 3. Front combination lamp |
| 4. Side marker lamp bulb | 5. Turn signal/parking lamp bulb | 6. Headlamp bulb (low beam) |

Disassembly

1. Rotate high beam bulb counterclockwise and remove.
2. Rotate low beam bulb counterclockwise and remove.
3. Rotate turn signal/parking lamp bulb socket counterclockwise and remove.
4. Rotate side marker lamp bulb socket counterclockwise and remove.

Assembly

Assembly is in the reverse order of disassembly.

AUTO LIGHT SYSTEM

< REMOVAL AND INSTALLATION >

AUTO LIGHT SYSTEM


Removal and Installation

INFOID:000000009878571

OPTICAL SENSOR

Removal

1. Remove defroster grille. Refer to [VTL-25. "Removal and Installation"](#).
2. Disconnect the harness connector from the optical sensor.
3. Rotate the optical sensor counterclockwise and remove from defroster grille.

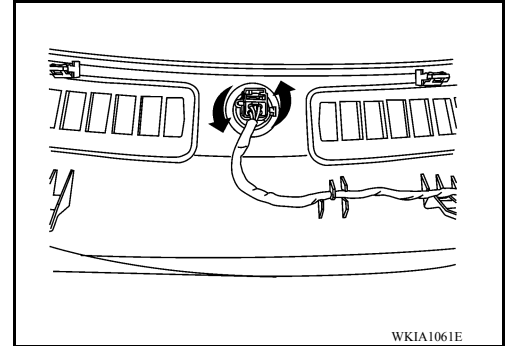

Installation

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

FRONT FOG LAMP

< REMOVAL AND INSTALLATION >

FRONT FOG LAMP

Bulb Replacement

INFOID:000000009878572

FRONT FOG LAMP

Removal


WARNING:

Do not touch bulb by hand while it is lit or right after being turned off. Burning may result.

CAUTION:

- Do not touch the glass surface of the bulb with bare hands or allow oil or grease to get on it to prevent damage to the bulb.
- Do not leave the bulb out of the lamp reflector for a long time because dust, moisture, smoke, etc. may affect the performance of the lamp.

1. Disconnect the harness connector from the front fog lamp.
2. Rotate front fog lamp socket counterclockwise and remove.

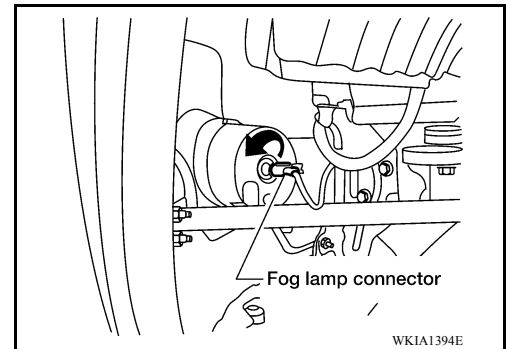

Installation

Installation is in the reverse order of removal.


Removal and Installation

INFOID:000000009878573

FRONT FOG LAMP

Removal

1. Disconnect the harness connector from the front fog lamp bulb (1).
2. Remove the bolts (A) and the front fog lamp (2).

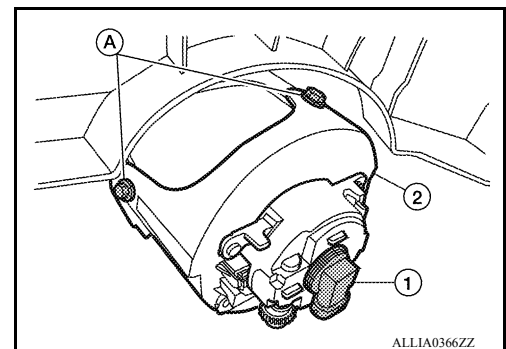

Installation

Installation is in the reverse order of removal.

NOTE:

After installation perform front fog lamp aiming adjustment. Refer to [EXL-137, "FRONT FOG LAMP : Aiming Adjustment"](#).

LIGHTING & TURN SIGNAL SWITCH

< REMOVAL AND INSTALLATION >


LIGHTING & TURN SIGNAL SWITCH

Removal and Installation

INFOID:000000009878574

REMOVAL

1. Remove steering column cover. Refer to [IP-13. "Removal and Installation"](#).
2. While pressing tabs, pull lighting and turn signal switch toward driver door and disconnect from the base.

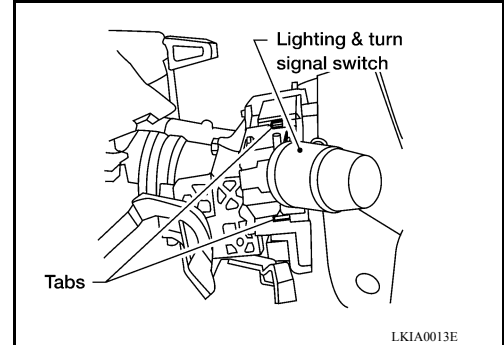

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

HAZARD SWITCH

< REMOVAL AND INSTALLATION >


HAZARD SWITCH

Removal and Installation

INFOID:000000009878575

REMOVAL

1. Remove cluster lid C. Refer to [IP-14. "Removal and Installation"](#).
2. While pressing the tab, push out the hazard switch.

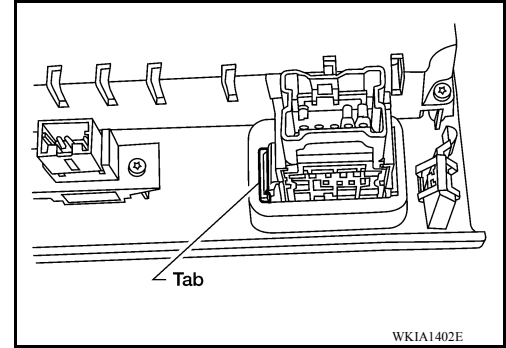

INSTALLATION

Installation is in the reverse order of removal.

LICENSE PLATE LAMP

< REMOVAL AND INSTALLATION >

LICENSE PLATE LAMP

Bulb Replacement

INFOID:000000009878576

LICENSE PLATE LAMP

Removal

WARNING:

Do not touch bulb by hand while it is lit or right after being turned off. Burning may result.

CAUTION:

- **Do not touch glass surface of the bulb with bare hands or allow oil or grease to get on it to prevent damage to bulb.**
- **Do not leave the bulb out of the lamp reflector for a long time because dust, moisture, smoke, etc. may affect the performance of the lamp.**

1. Remove license plate lamp. Refer to [EXL-145, "Removal and Installation"](#).
2. Rotate bulb socket counterclockwise and remove.
3. Pull bulb from socket.

Installation

Installation is in the reverse order of removal.

Removal and Installation

INFOID:000000009878577

LICENSE PLATE LAMP

Removal

1. Using a suitable tool, first release the tab which is forward in vehicle, then pry outward to release the second tab.
2. Disconnect the harness connector and remove the license plate lamp from the rear bumper.

Installation

Installation is in the reverse order of removal.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

PUDDLE LAMP

< REMOVAL AND INSTALLATION >


PUDDLE LAMP

Removal and Installation


INFOID:000000009878578

REMOVAL

1. Depress tab (1) on outer edge of puddle lamp housing.

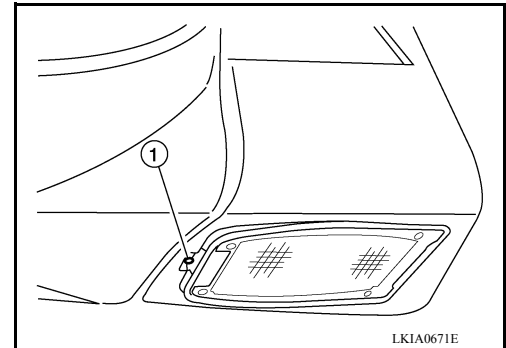

2. Lower outer edge and slide puddle lamp housing out of door mirror.
3. Twist puddle lamp socket (1) counterclockwise to remove from puddle lamp housing (2).

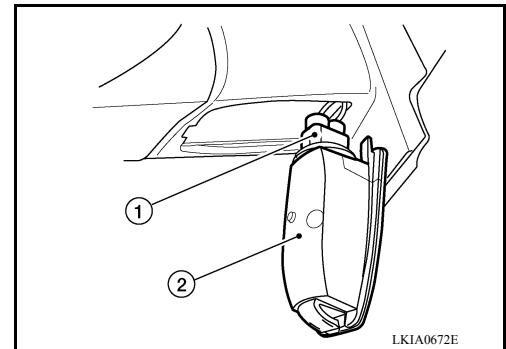

INSTALLATION

Installation is in the reverse order of removal.

Bulb Replacement

INFOID:000000009878579

REMOVAL


WARNING:

Do not touch bulb by hand while it is lit or right after being turned off. Burning may result.

CAUTION:

- Do not touch the glass surface of the bulb with bare hands or allow oil or grease to get on it to prevent damage to the bulb.
- Do not leave the bulb out of the lamp reflector for a long time because dust, moisture, smoke, etc. may affect the performance of the lamp.

1. Remove puddle lamp housing. Refer to [EXL-146, "Removal and Installation"](#).
2. Pull puddle lamp bulb (2) straight out from puddle lamp socket (1) to remove.

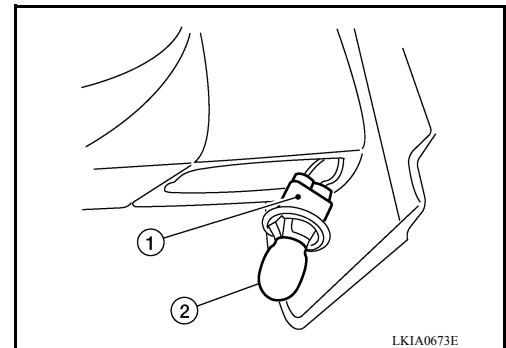

INSTALLATION

PUDDLE LAMP

< REMOVAL AND INSTALLATION >

Installation is in the reverse order of removal.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

HIGH-MOUNTED STOP LAMP

< REMOVAL AND INSTALLATION >

HIGH-MOUNTED STOP LAMP

Bulb Replacement

INFOID:000000009878580

HIGH-MOUNTED STOP LAMP

Removal

1. Remove the high-mounted stop lamp. Refer to [EXL-148. "Removal and Installation"](#).
2. Rotate bulb socket counterclockwise and remove.
3. Pull bulb from socket.

Installation

Installation is in the reverse order of removal.


Removal and Installation

INFOID:000000009878581

HIGH-MOUNTED STOP LAMP

Removal

1. Remove high-mounted stop lamp nuts access covers (3).
2. Disconnect the harness connector from the high-mounted stop lamp.
3. Remove high-mounted stop lamp nuts (2).
4. Remove high-mounted stop lamp (1).

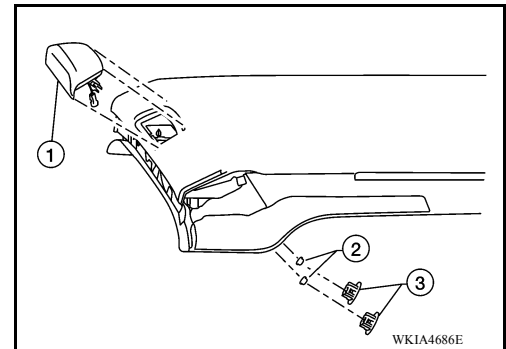

Installation

Installation is in the reverse order of removal.

REAR COMBINATION LAMP

< REMOVAL AND INSTALLATION >

REAR COMBINATION LAMP

Bulb Replacement

INFOID:000000009878582

REMOVAL

WARNING:

Do not touch bulb by hand while it is lit or right after being turned off. Burning may result.

CAUTION:

- Do not touch the glass surface of the bulb with bare hands or allow oil or grease to get on it to prevent damage to the bulb.
- Do not leave the bulb out of the lamp reflector for a long time because dust, moisture, smoke, etc. may affect the performance of the lamp.

1. Remove the rear combination lamp. Refer to [EXL-149, "Removal and Installation"](#).
2. Rotate the bulb socket counterclockwise and remove.

INSTALLATION


Installation is in the reverse order of removal.

Removal and Installation

INFOID:000000009878583

REMOVAL

1. Open the tail gate.
2. Remove rear combination lamp bolts.
3. Pull rear combination lamp to remove.
4. Disconnect the harness connector from the rear combination lamp.

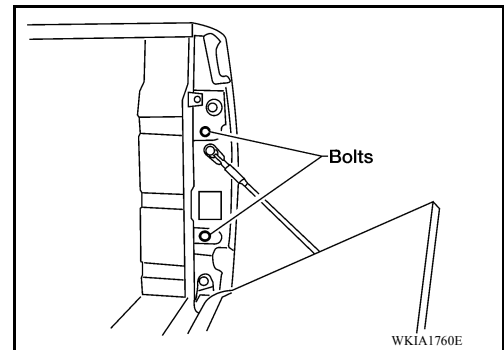

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Bulb Specifications

INFOID:000000009878584

Item		Wattage (W)*
Front combination lamp	Headlamp (HI/LO)	65/55
	Parking lamp/Turn signal	28/8
	Side marker lamp	3.8
Front fog lamp (if equipped)		27.5
Rear combination lamp	Tail lamp/Stop lamp	27/8
	Turn signal lamp	27
	Backup lamp	18
Cargo lamp (tail gate) (if equipped)		18
License plate lamp		5
High-mounted stop lamp/Cargo lamp		12.8
Side turn signal (if equipped)		—
Puddle lamp (if equipped)		9

- *Always check with the parts department for the latest information.