

SECTION **EC**

ENGINE CONTROL SYSTEM

CONTENTS

| | | | | |
|--|-----------|--|-----------|----|
| SERVICE INFORMATION | 9 | How to Detect Fuel Vapor Leakage | 35 | A |
| INDEX FOR DTC | 9 | ON BOARD REFUELING VAPOR RECOVERY (ORVR) | 38 | EC |
| DTC No. Index | 9 | System Description | 38 | C |
| Alphabetical Index | 12 | Diagnosis Procedure | 38 | D |
| PRECAUTIONS | 16 | Component Inspection | 40 | E |
| Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" | 16 | POSITIVE CRANKCASE VENTILATION | 43 | F |
| Precaution for Procedure without Cowl Top Cover... .. | 16 | Description | 43 | G |
| On Board Diagnosis (OBD) System of Engine and A/T, CVT | 16 | Component Inspection | 43 | H |
| Precaution | 17 | NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS) | 45 | I |
| PREPARATION | 20 | Description | 45 | J |
| Special Service Tool | 20 | ON BOARD DIAGNOSTIC (OBD) SYSTEM | 46 | K |
| Commercial Service Tool | 21 | Introduction | 46 | L |
| ENGINE CONTROL SYSTEM | 22 | Two Trip Detection Logic | 46 | M |
| Schematic | 22 | Emission-related Diagnostic Information | 47 | N |
| Multiport Fuel Injection (MFI) System | 22 | Malfunction Indicator Lamp (MIL) | 60 | O |
| Electronic Ignition (EI) System | 25 | OBD System Operation Chart | 63 | P |
| Fuel Cut Control (at No Load and High Engine Speed) | 25 | BASIC SERVICE PROCEDURE | 69 | |
| AIR CONDITIONING CUT CONTROL | 27 | Basic Inspection | 69 | |
| Input/Output Signal Chart | 27 | Idle Speed and Ignition Timing Check | 73 | |
| System Description | 27 | Procedure After Replacing ECM | 75 | |
| AUTOMATIC SPEED CONTROL DEVICE (ASCD) | 28 | VIN Registration | 75 | |
| System Description | 28 | Accelerator Pedal Released Position Learning | 76 | |
| Component Description | 29 | Throttle Valve Closed Position Learning | 76 | |
| CAN COMMUNICATION | 30 | Idle Air Volume Learning | 76 | |
| System Description | 30 | Fuel Pressure Check | 78 | |
| EVAPORATIVE EMISSION SYSTEM | 31 | TROUBLE DIAGNOSIS | 81 | |
| Description | 31 | Trouble Diagnosis Introduction | 81 | |
| Component Inspection | 33 | DTC Inspection Priority Chart | 86 | |
| Removal and Installation | 35 | Fail-Safe Chart | 87 | |
| | | Symptom Matrix Chart | 88 | |
| | | Engine Control Component Parts Location | 93 | |
| | | Vacuum Hose Drawing | 99 | |
| | | Circuit Diagram | 100 | |
| | | ECM Harness Connector Terminal Layout | 102 | |

| | | | |
|--|------------|--|------------|
| ECM Terminal and Reference Value | 102 | DTC P0037, P0038 HO2S2 HEATER | 156 |
| CONSULT-II Function (ENGINE) | 109 | Description | 156 |
| Generic Scan Tool (GST) Function | 119 | CONSULT-II Reference Value in Data Monitor | |
| CONSULT-II Reference Value in Data Monitor | | Mode | 156 |
| Mode | 121 | On Board Diagnosis Logic | 156 |
| Major Sensor Reference Graph in Data Monitor | | DTC Confirmation Procedure | 156 |
| Mode | 124 | Wiring Diagram | 158 |
| TRUBLE DIAGNOSIS - SPECIFICATION | | Diagnosis Procedure | 159 |
| VALUE | 127 | Component Inspection | 160 |
| Description | 127 | Removal and Installation | 161 |
| Testing Condition | 127 | DTC P0075 IVT CONTROL SOLENOID | |
| Inspection Procedure | 127 | VALUE | 162 |
| Diagnosis Procedure | 127 | Component Description | 162 |
| TRUBLE DIAGNOSIS FOR INTERMITTENT | | CONSULT-II Reference Value in Data Monitor | |
| INCIDENT | 136 | Mode | 162 |
| Description | 136 | On Board Diagnosis Logic | 162 |
| Diagnosis Procedure | 136 | DTC Confirmation Procedure | 162 |
| POWER SUPPLY AND GROUND CIRCUIT .. | 137 | Wiring Diagram | 163 |
| Wiring Diagram | 137 | Diagnosis Procedure | 164 |
| Diagnosis Procedure | 138 | Component Inspection | 165 |
| Ground Inspection | 142 | Removal and Installation | 166 |
| DTC U1000, U1001 CAN COMMUNICATION | | DTC P0101 MAF SENSOR | 167 |
| LINE | 143 | Component Description | 167 |
| Description | 143 | CONSULT-II Reference Value in Data Monitor | |
| On Board Diagnosis Logic | 143 | Mode | 167 |
| DTC Confirmation Procedure | 143 | On Board Diagnosis Logic | 167 |
| Wiring Diagram | 144 | DTC Confirmation Procedure | 167 |
| Diagnosis Procedure | 144 | Overall Function Check | 169 |
| DTC U1010 CAN COMMUNICATION | 145 | Wiring Diagram | 170 |
| Description | 145 | Diagnosis Procedure | 171 |
| On Board Diagnosis Logic | 145 | Component Inspection | 173 |
| DTC Confirmation Procedure | 145 | Removal and Installation | 174 |
| Diagnosis Procedure | 145 | DTC P0102, P0103 MAF SENSOR | 175 |
| DTC P0011 IVT CONTROL | 147 | Component Description | 175 |
| Description | 147 | CONSULT-II Reference Value in Data Monitor | |
| CONSULT-II Reference Value in Data Monitor | | Mode | 175 |
| Mode | 147 | On Board Diagnosis Logic | 175 |
| On Board Diagnosis Logic | 148 | DTC Confirmation Procedure | 175 |
| DTC Confirmation Procedure | 148 | Wiring Diagram | 177 |
| Diagnosis Procedure | 149 | Diagnosis Procedure | 178 |
| Component Inspection | 150 | Component Inspection | 180 |
| Removal and Installation | 150 | Removal and Installation | 181 |
| DTC P0031, P0032 A/F SENSOR 1 HEATER. | 151 | DTC P0112, P0113 IAT SENSOR | 182 |
| Description | 151 | Component Description | 182 |
| CONSULT-II Reference Value in Data Monitor | | On Board Diagnosis Logic | 182 |
| Mode | 151 | DTC Confirmation Procedure | 182 |
| On Board Diagnosis Logic | 151 | Wiring Diagram | 184 |
| DTC Confirmation Procedure | 151 | Diagnosis Procedure | 184 |
| Wiring Diagram | 152 | Component Inspection | 186 |
| Diagnosis Procedure | 153 | Removal and Installation | 186 |
| Component Inspection | 154 | DTC P0117, P0118 ECT SENSOR | 187 |
| Removal and Installation | 155 | Component Description | 187 |
| | | On Board Diagnosis Logic | 187 |
| | | DTC Confirmation Procedure | 188 |
| | | Wiring Diagram | 189 |

| | | | | |
|---|------------|---|------------|----|
| Diagnosis Procedure | 189 | Component Description | 219 | A |
| Component Inspection | 191 | CONSULT-II Reference Value in Data Monitor Mode | 219 | EC |
| Removal and Installation | 191 | On Board Diagnosis Logic | 219 | C |
| DTC P0122, P0123 TP SENSOR | 192 | DTC Confirmation Procedure | 219 | |
| Component Description | 192 | Wiring Diagram | 221 | |
| CONSULT-II Reference Value in Data Monitor Mode | 192 | Diagnosis Procedure | 222 | |
| On Board Diagnosis Logic | 192 | Removal and Installation | 224 | |
| DTC Confirmation Procedure | 192 | DTC P0133 A/F SENSOR 1 | 225 | |
| Wiring Diagram | 194 | Component Description | 225 | D |
| Diagnosis Procedure | 195 | CONSULT-II Reference Value in Data Monitor Mode | 225 | |
| Component Inspection | 197 | On Board Diagnosis Logic | 225 | E |
| Removal and Installation | 197 | DTC Confirmation Procedure | 225 | |
| DTC P0125 ECT SENSOR | 198 | Wiring Diagram | 228 | |
| Description | 198 | Diagnosis Procedure | 229 | F |
| On Board Diagnosis Logic | 198 | Removal and Installation | 232 | |
| DTC Confirmation Procedure | 198 | DTC P0137 HO2S2 | 233 | |
| Diagnosis Procedure | 199 | Component Description | 233 | G |
| Component Inspection | 200 | CONSULT-II Reference Value in Data Monitor Mode | 233 | |
| Removal and Installation | 200 | On Board Diagnosis Logic | 233 | H |
| DTC P0127 IAT SENSOR | 201 | DTC Confirmation Procedure | 233 | |
| Component Description | 201 | Overall Function Check | 234 | I |
| On Board Diagnosis Logic | 201 | Wiring Diagram | 235 | |
| DTC Confirmation Procedure | 201 | Diagnosis Procedure | 236 | |
| Diagnosis Procedure | 202 | Component Inspection | 238 | |
| Component Inspection | 202 | Removal and Installation | 239 | |
| Removal and Installation | 203 | DTC P0138 HO2S2 | 240 | J |
| DTC P0128 THERMOSTAT FUNCTION | 204 | Component Description | 240 | |
| On Board Diagnosis Logic | 204 | CONSULT-II Reference Value in Data Monitor Mode | 240 | K |
| DTC Confirmation Procedure | 204 | On Board Diagnosis Logic | 240 | |
| Diagnosis Procedure | 204 | DTC Confirmation Procedure | 241 | |
| Component Inspection | 204 | Overall Function Check | 242 | L |
| Removal and Installation | 205 | Wiring Diagram | 243 | |
| DTC P0130 A/F SENSOR 1 | 206 | Diagnosis Procedure | 244 | |
| Component Description | 206 | Component Inspection | 247 | M |
| CONSULT-II Reference Value in Data Monitor Mode | 206 | Removal and Installation | 248 | |
| On Board Diagnosis Logic | 206 | DTC P0139 HO2S2 | 250 | |
| DTC Confirmation Procedure | 206 | Component Description | 250 | N |
| Overall Function Check | 208 | CONSULT-II Reference Value in Data Monitor Mode | 250 | |
| Wiring Diagram | 209 | On Board Diagnosis Logic | 250 | |
| Diagnosis Procedure | 210 | DTC Confirmation Procedure | 250 | O |
| Removal and Installation | 212 | Overall Function Check | 251 | |
| DTC P0131 A/F SENSOR 1 | 213 | Wiring Diagram | 252 | |
| Component Description | 213 | Diagnosis Procedure | 253 | P |
| CONSULT-II Reference Value in Data Monitor Mode | 213 | Component Inspection | 255 | |
| On Board Diagnosis Logic | 213 | Removal and Installation | 256 | |
| DTC Confirmation Procedure | 213 | DTC P0171 FUEL INJECTION SYSTEM FUNCTION | 257 | |
| Wiring Diagram | 215 | On Board Diagnosis Logic | 257 | |
| Diagnosis Procedure | 216 | DTC Confirmation Procedure | 257 | |
| Removal and Installation | 218 | Wiring Diagram | 259 | |
| DTC P0132 A/F SENSOR 1 | 219 | | | |

| | | | |
|--|------------|---|------------|
| Diagnosis Procedure | 260 | Diagnosis Procedure | 298 |
| DTC P0172 FUEL INJECTION SYSTEM | | Component Inspection | 301 |
| FUNCTION | 264 | Removal and Installation | 301 |
| On Board Diagnosis Logic | 264 | DTC P0340 CMP SENSOR (PHASE) | 302 |
| DTC Confirmation Procedure | 264 | Component Description | 302 |
| Wiring Diagram | 266 | CONSULT-II Reference Value in Data Monitor | |
| Diagnosis Procedure | 267 | Mode | 302 |
| DTC P0181 FTT SENSOR | 270 | On Board Diagnosis Logic | 302 |
| Component Description | 270 | DTC Confirmation Procedure | 302 |
| On Board Diagnosis Logic | 270 | Wiring Diagram | 304 |
| DTC Confirmation Procedure | 270 | Diagnosis Procedure | 305 |
| Wiring Diagram | 271 | Component Inspection | 307 |
| Diagnosis Procedure | 271 | Removal and Installation | 307 |
| Component Inspection | 273 | DTC P0420 THREE WAY CATALYST FUNC- | |
| Removal and Installation | 273 | TION | 308 |
| DTC P0182, P0183 FTT SENSOR | 274 | On Board Diagnosis Logic | 308 |
| Component Description | 274 | DTC Confirmation Procedure | 308 |
| On Board Diagnosis Logic | 274 | Overall Function Check | 309 |
| DTC Confirmation Procedure | 274 | Diagnosis Procedure | 310 |
| Wiring Diagram | 275 | DTC P0441 EVAP CONTROL SYSTEM | 313 |
| Diagnosis Procedure | 275 | System Description | 313 |
| Component Inspection | 277 | On Board Diagnosis Logic | 313 |
| Removal and Installation | 277 | DTC Confirmation Procedure | 313 |
| DTC P0222, P0223 TP SENSOR | 278 | Overall Function Check | 314 |
| Component Description | 278 | Diagnosis Procedure | 315 |
| CONSULT-II Reference Value in Data Monitor | | DTC P0442 EVAP CONTROL SYSTEM | 318 |
| Mode | 278 | On Board Diagnosis Logic | 318 |
| On Board Diagnosis Logic | 278 | DTC Confirmation Procedure | 318 |
| DTC Confirmation Procedure | 278 | Diagnosis Procedure | 320 |
| Wiring Diagram | 280 | DTC P0443 EVAP CANISTER PURGE VOL- | |
| Diagnosis Procedure | 281 | UME CONTROL SOLENOID VALVE | 325 |
| Component Inspection | 283 | Description | 325 |
| Removal and Installation | 283 | CONSULT-II Reference Value in Data Monitor | |
| DTC P0300 - P0304 MULTIPLE CYLINDER | | Mode | 325 |
| MISFIRE, NO. 1 - 4 CYLINDER MISFIRE | 284 | On Board Diagnosis Logic | 326 |
| On Board Diagnosis Logic | 284 | DTC Confirmation Procedure | 326 |
| DTC Confirmation Procedure | 284 | Wiring Diagram | 327 |
| Diagnosis Procedure | 285 | Diagnosis Procedure | 328 |
| DTC P0327, P0328 KS | 291 | Component Inspection | 331 |
| Component Description | 291 | Removal and Installation | 331 |
| On Board Diagnosis Logic | 291 | DTC P0444, P0445 EVAP CANISTER PURGE | |
| DTC Confirmation Procedure | 291 | VOLUME CONTROL SOLENOID VALVE | 332 |
| Wiring Diagram | 292 | Description | 332 |
| Diagnosis Procedure | 293 | CONSULT-II Reference Value in Data Monitor | |
| Component Inspection | 294 | Mode | 332 |
| Removal and Installation | 294 | On Board Diagnosis Logic | 333 |
| DTC P0335 CKP SENSOR (POS) | 295 | DTC Confirmation Procedure | 333 |
| Component Description | 295 | Wiring Diagram | 334 |
| CONSULT-II Reference Value in Data Monitor | | Diagnosis Procedure | 335 |
| Mode | 295 | Component Inspection | 337 |
| On Board Diagnosis Logic | 295 | Removal and Installation | 337 |
| DTC Confirmation Procedure | 295 | DTC P0447 EVAP CANISTER VENT CON- | |
| Wiring Diagram | 297 | TROL VALVE | 338 |

| | | | | |
|--|------------|---|------------|----|
| Component Description | 338 | Overall Function Check | 378 | |
| CONSULT-II Reference Value in Data Monitor Mode | 338 | Diagnosis Procedure | 379 | A |
| On Board Diagnosis Logic | 338 | DTC P0460 FUEL LEVEL SENSOR | 385 | |
| DTC Confirmation Procedure | 338 | Component Description | 385 | EC |
| Wiring Diagram | 340 | On Board Diagnosis Logic | 385 | |
| Diagnosis Procedure | 341 | DTC Confirmation Procedure | 385 | |
| Component Inspection | 343 | Diagnosis Procedure | 386 | C |
| | | Removal and Installation | 386 | |
| DTC P0448 EVAP CANISTER VENT CONTROL VALVE | 345 | DTC P0461 FUEL LEVEL SENSOR | 387 | |
| Component Description | 345 | Component Description | 387 | D |
| CONSULT-II Reference Value in Data Monitor Mode | 345 | On Board Diagnosis Logic | 387 | |
| On Board Diagnosis Logic | 345 | Overall Function Check | 387 | |
| DTC Confirmation Procedure | 345 | Diagnosis Procedure | 388 | E |
| Wiring Diagram | 347 | Removal and Installation | 388 | |
| Diagnosis Procedure | 348 | DTC P0462, P0463 FUEL LEVEL SENSOR .. | 389 | |
| Component Inspection | 349 | Component Description | 389 | F |
| | | On Board Diagnosis Logic | 389 | |
| DTC P0451 EVAP CONTROL SYSTEM PRESSURE SENSOR | 351 | DTC Confirmation Procedure | 389 | G |
| Component Description | 351 | Diagnosis Procedure | 390 | |
| CONSULT-II Reference Value in Data Monitor Mode | 351 | Removal and Installation | 390 | |
| On Board Diagnosis Logic | 351 | DTC P0500 VSS | 391 | |
| DTC Confirmation Procedure | 351 | Description | 391 | H |
| Diagnosis Procedure | 352 | On Board Diagnosis Logic | 391 | |
| Component Inspection | 353 | DTC Confirmation Procedure | 391 | |
| | | Overall Function Check | 392 | I |
| | | Diagnosis Procedure | 392 | |
| DTC P0452 EVAP CONTROL SYSTEM PRESSURE SENSOR | 355 | DTC P0506 ISC SYSTEM | 393 | |
| Component Description | 355 | Description | 393 | J |
| CONSULT-II Reference Value in Data Monitor Mode | 355 | On Board Diagnosis Logic | 393 | |
| On Board Diagnosis Logic | 355 | DTC Confirmation Procedure | 393 | K |
| DTC Confirmation Procedure | 355 | Diagnosis Procedure | 393 | |
| Wiring Diagram | 357 | DTC P0507 ISC SYSTEM | 395 | |
| Diagnosis Procedure | 358 | Description | 395 | L |
| Component Inspection | 361 | On Board Diagnosis Logic | 395 | |
| | | DTC Confirmation Procedure | 395 | |
| | | Diagnosis Procedure | 395 | M |
| DTC P0453 EVAP CONTROL SYSTEM PRESSURE SENSOR | 362 | DTC P0605 ECM | 397 | |
| Component Description | 362 | Component Description | 397 | N |
| CONSULT-II Reference Value in Data Monitor Mode | 362 | On Board Diagnosis Logic | 397 | |
| On Board Diagnosis Logic | 362 | DTC Confirmation Procedure | 397 | |
| DTC Confirmation Procedure | 362 | Diagnosis Procedure | 398 | |
| Wiring Diagram | 364 | DTC P0643 SENSOR POWER SUPPLY | 400 | O |
| Diagnosis Procedure | 365 | On Board Diagnosis Logic | 400 | |
| Component Inspection | 369 | DTC Confirmation Procedure | 400 | |
| | | Wiring Diagram | 401 | P |
| | | Diagnosis Procedure | 402 | |
| DTC P0455 EVAP CONTROL SYSTEM | 370 | DTC P0850 PNP SWITCH | 405 | |
| On Board Diagnosis Logic | 370 | Component Description | 405 | |
| DTC Confirmation Procedure | 370 | CONSULT-II Reference Value in Data Monitor Mode | 405 | |
| Diagnosis Procedure | 372 | On Board Diagnosis Logic | 405 | |
| | | DTC Confirmation Procedure | 405 | |
| DTC P0456 EVAP CONTROL SYSTEM | 377 | | | |
| On Board Diagnosis Logic | 377 | | | |
| DTC Confirmation Procedure | 378 | | | |

| | | | |
|---|------------|---|------------|
| Overall Function Check | 406 | On Board Diagnosis Logic | 447 |
| Wiring Diagram | 407 | DTC Confirmation Procedure | 447 |
| Diagnosis Procedure | 408 | Diagnosis Procedure | 448 |
| DTC P1148 CLOSED LOOP CONTROL | 411 | DTC P1715 INPUT SPEED SENSOR (TUR- | 449 |
| On Board Diagnosis Logic | 411 | BINE REVOLUTION SENSOR) | 449 |
| DTC P1217 ENGINE OVER TEMPERATURE. 412 | | Description | 449 |
| System Description | 412 | CONSULT-II Reference Value in Data Monitor | |
| CONSULT-II Reference Value in Data Monitor | | Mode | 449 |
| Mode | 413 | On Board Diagnosis Logic | 449 |
| On Board Diagnosis Logic | 413 | Diagnosis Procedure | 449 |
| Overall Function Check | 413 | DTC P1715 INPUT SPEED SENSOR (PRIMA- | 450 |
| Wiring Diagram | 416 | RY SPEED SENSOR) | 450 |
| Diagnosis Procedure | 417 | Description | 450 |
| Main 13 Causes of Overheating | 424 | CONSULT-II Reference Value in Data Monitor | |
| Component Inspection | 424 | Mode | 450 |
| DTC P1225 TP SENSOR | 426 | On Board Diagnosis Logic | 450 |
| Component Description | 426 | DTC Confirmation Procedure | 450 |
| On Board Diagnosis Logic | 426 | Diagnosis Procedure | 451 |
| DTC Confirmation Procedure | 426 | DTC P1805 BRAKE SWITCH | 452 |
| Diagnosis Procedure | 426 | Description | 452 |
| Removal and Installation | 427 | CONSULT-II Reference Value in Data Monitor | |
| DTC P1226 TP SENSOR | 428 | Mode | 452 |
| Component Description | 428 | On Board Diagnosis Logic | 452 |
| On Board Diagnosis Logic | 428 | DTC Confirmation Procedure | 452 |
| DTC Confirmation Procedure | 428 | Wiring Diagram | 453 |
| Diagnosis Procedure | 428 | Diagnosis Procedure | 454 |
| Removal and Installation | 429 | Component Inspection | 455 |
| DTC P1421 COLD START CONTROL | 430 | DTC P2100, P2103 THROTTLE CONTROL | 456 |
| Description | 430 | MOTOR RELAY | 456 |
| On Board Diagnosis Logic | 430 | Component Description | 456 |
| DTC Confirmation Procedure | 430 | CONSULT-II Reference Value in Data Monitor | |
| Diagnosis Procedure | 430 | Mode | 456 |
| DTC P1564 ASCD STEERING SWITCH | 432 | On Board Diagnosis Logic | 456 |
| Component Description | 432 | DTC Confirmation Procedure | 456 |
| CONSULT-II Reference Value in Data Monitor | | Wiring Diagram | 458 |
| Mode | 432 | Diagnosis Procedure | 459 |
| On Board Diagnosis Logic | 432 | DTC P2101 ELECTRIC THROTTLE CON- | 461 |
| DTC Confirmation Procedure | 433 | TROL FUNCTION | 461 |
| Wiring Diagram | 434 | Description | 461 |
| Diagnosis Procedure | 435 | On Board Diagnosis Logic | 461 |
| Component Inspection | 437 | DTC Confirmation Procedure | 461 |
| DTC P1572 ASCD BRAKE SWITCH | 438 | Wiring Diagram | 462 |
| Component Description | 438 | Diagnosis Procedure | 463 |
| CONSULT-II Reference Value in Data Monitor | | Component Inspection | 466 |
| Mode | 438 | Removal and Installation | 466 |
| On Board Diagnosis Logic | 438 | DTC P2118 THROTTLE CONTROL MOTOR.. | 467 |
| DTC Confirmation Procedure | 439 | Component Description | 467 |
| Wiring Diagram | 440 | On Board Diagnosis Logic | 467 |
| Diagnosis Procedure | 441 | DTC Confirmation Procedure | 467 |
| Component Inspection | 445 | Wiring Diagram | 468 |
| DTC P1574 ASCD VEHICLE SPEED SEN- | 447 | Diagnosis Procedure | 469 |
| SOR | 447 | Component Inspection | 470 |
| Component Description | 447 | Removal and Installation | 470 |

| | | | | |
|---|------------|---|------------|----|
| DTC P2119 ELECTRIC THROTTLE CONTROL ACTUATOR | 472 | ASCD BRAKE SWITCH | 508 | |
| Component Description | 472 | Component Description | 508 | A |
| On Board Diagnosis Logic | 472 | CONSULT-II Reference Value in Data Monitor Mode | 508 | |
| DTC Confirmation Procedure | 472 | Wiring Diagram | 509 | EC |
| Diagnosis Procedure | 473 | Diagnosis Procedure | 510 | |
| DTC P2122, P2123 APP SENSOR | 474 | Component Inspection | 514 | |
| Component Description | 474 | ASCD INDICATOR | 516 | C |
| CONSULT-II Reference Value in Data Monitor Mode | 474 | Component Description | 516 | |
| On Board Diagnosis Logic | 474 | CONSULT-II Reference Value in Data Monitor Mode | 516 | D |
| DTC Confirmation Procedure | 474 | Wiring Diagram | 517 | |
| Wiring Diagram | 476 | Diagnosis Procedure | 517 | |
| Diagnosis Procedure | 477 | ELECTRICAL LOAD SIGNAL | 519 | E |
| Component Inspection | 479 | CONSULT-II Reference Value in Data Monitor Mode | 519 | |
| Removal and Installation | 479 | Diagnosis Procedure | 519 | F |
| DTC P2127, P2128 APP SENSOR | 480 | FUEL INJECTOR | 521 | |
| Component Description | 480 | Component Description | 521 | G |
| CONSULT-II Reference Value in Data Monitor Mode | 480 | CONSULT-II Reference Value in Data Monitor Mode | 521 | |
| On Board Diagnosis Logic | 480 | Wiring Diagram | 522 | H |
| DTC Confirmation Procedure | 481 | Diagnosis Procedure | 523 | |
| Wiring Diagram | 482 | Component Inspection | 525 | |
| Diagnosis Procedure | 483 | Removal and Installation | 525 | I |
| Component Inspection | 485 | FUEL PUMP | 526 | |
| Removal and Installation | 486 | Description | 526 | J |
| DTC P2135 TP SENSOR | 487 | CONSULT-II Reference Value in Data Monitor Mode | 526 | |
| Component Description | 487 | Wiring Diagram | 527 | |
| CONSULT-II Reference Value in Data Monitor Mode | 487 | Diagnosis Procedure | 528 | K |
| On Board Diagnosis Logic | 487 | Component Inspection | 530 | |
| DTC Confirmation Procedure | 487 | Removal and Installation | 530 | |
| Wiring Diagram | 489 | IGNITION SIGNAL | 531 | L |
| Diagnosis Procedure | 490 | Component Description | 531 | |
| Component Inspection | 492 | Wiring Diagram | 532 | |
| Removal and Installation | 492 | Diagnosis Procedure | 535 | M |
| DTC P2138 APP SENSOR | 493 | Component Inspection | 538 | |
| Component Description | 493 | Removal and Installation | 540 | |
| CONSULT-II Reference Value in Data Monitor Mode | 493 | REFRIGERANT PRESSURE SENSOR | 541 | N |
| On Board Diagnosis Logic | 493 | Component Description | 541 | |
| DTC Confirmation Procedure | 494 | Wiring Diagram | 542 | |
| Wiring Diagram | 495 | Diagnosis Procedure | 543 | O |
| Diagnosis Procedure | 496 | Removal and Installation | 545 | |
| Component Inspection | 499 | MIL AND DATA LINK CONNECTOR | 546 | P |
| Removal and Installation | 499 | Wiring Diagram | 546 | |
| DTC P2A00 A/F SENSOR 1 | 500 | SERVICE DATA AND SPECIFICATIONS (SDS) | 548 | |
| Component Description | 500 | Fuel Pressure | 548 | |
| CONSULT-II Reference Value in Data Monitor Mode | 500 | Idle Speed and Ignition Timing | 548 | |
| On Board Diagnosis Logic | 500 | Calculated Load Value | 548 | |
| DTC Confirmation Procedure | 500 | Mass Air Flow Sensor | 548 | |
| Wiring Diagram | 502 | Intake Air Temperature Sensor | 548 | |
| Diagnosis Procedure | 503 | | | |
| Removal and Installation | 507 | | | |

| | | | |
|--|-----|--|-----|
| Engine Coolant Temperature Sensor | 548 | Camshaft Position Sensor (PHASE) | 549 |
| Air Fuel Ratio (A/F) Sensor 1 Heater | 549 | Throttle Control Motor | 549 |
| Heated Oxygen sensor 2 Heater | 549 | Fuel Injector | 549 |
| Crankshaft Position Sensor (POS) | 549 | Fuel Pump | 549 |

INDEX FOR DTC

< SERVICE INFORMATION >

SERVICE INFORMATION

INDEX FOR DTC

DTC No. Index

INFOID:000000001702546

NOTE:

- If DTC U1000 or U1001 is displayed with other DTC, first perform the trouble diagnosis for DTC U1000, U1001. Refer to [EC-143](#).
- If DTC U1010 is displayed with other DTC, first perform the trouble diagnosis for DTC U1010. Refer to [EC-145](#).

| DTC*1 | | Items (CONSULT-II screen terms) | Reference page |
|---------------------|-------------|---|------------------------|
| CONSULT-II GST*2 | ECM*3 | | |
| U1000 | 1000*4 | CAN COMM CIRCUIT | EC-143 |
| U1001 | 1001*4 | CAN COMM CIRCUIT | EC-143 |
| U1010 | 1010 | CONTROL UNIT(CAN) | EC-145 |
| P0000 | 0000 | NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED. | — |
| P0011 | 0011 | INT/V TIM CONT-B1 | EC-147 |
| P0031 | 0031 | A/F SEN1 HTR (B1) | EC-151 |
| P0032 | 0032 | A/F SEN1 HTR (B1) | EC-151 |
| P0037 | 0037 | HO2S2 HTR (B1) | EC-156 |
| P0038 | 0038 | HO2S2 HTR (B1) | EC-156 |
| P0075 | 0075 | INT/V TIM V/CIR-B1 | EC-162 |
| P0101 | 0101 | MAF SEN/CIRCUIT | EC-167 |
| P0102 | 0102 | MAF SEN/CIRCUIT | EC-175 |
| P0103 | 0103 | MAF SEN/CIRCUIT | EC-175 |
| P0112 | 0112 | IAT SEN/CIRCUIT | EC-182 |
| P0113 | 0113 | IAT SEN/CIRCUIT | EC-182 |
| P0117 | 0117 | ECT SEN/CIRC | EC-187 |
| P0118 | 0118 | ECT SEN/CIRC | EC-187 |
| P0122 | 0122 | TP SEN 2/CIRC | EC-192 |
| P0123 | 0123 | TP SEN 2/CIRC | EC-192 |
| P0125 | 0125 | ECT SENSOR | EC-198 |
| P0127 | 0127 | IAT SENSOR | EC-201 |
| P0128 | 0128 | THERMSTAT FNCTN | EC-204 |
| P0130 | 0130 | A/F SENSOR1 (B1) | EC-206 |
| P0131 | 0131 | A/F SENSOR1 (B1) | EC-213 |
| P0132 | 0132 | A/F SENSOR1 (B1) | EC-219 |
| P0133 | 0133 | A/F SENSOR1 (B1) | EC-225 |
| P0137 | 0137 | HO2S2 (B1) | EC-233 |
| P0138 | 0138 | HO2S2 (B1) | EC-240 |
| P0139 | 0139 | HO2S2 (B1) | EC-250 |
| P0171 | 0171 | FUEL SYS-LEAN-B1 | EC-257 |
| P0172 | 0172 | FUEL SYS-RICH-B1 | EC-264 |
| P0181 | 0181 | FTT SENSOR | EC-270 |

INDEX FOR DTC

< SERVICE INFORMATION >

| DTC*1 | | Items (CONSULT-II screen terms) | Reference page |
|---------------------|-------|------------------------------------|--|
| CONSULT-II GST*2 | ECM*3 | | |
| P0182 | 0182 | FTT SEN/CIRCUIT | EC-274 |
| P0183 | 0183 | FTT SEN/CIRCUIT | EC-274 |
| P0222 | 0222 | TP SEN 1/CIRC | EC-278 |
| P0223 | 0223 | TP SEN 1/CIRC | EC-278 |
| P0300 | 0300 | MULTI CYL MISFIRE | EC-284 |
| P0301 | 0301 | CYL 1 MISFIRE | EC-284 |
| P0302 | 0302 | CYL 2 MISFIRE | EC-284 |
| P0303 | 0303 | CYL 3 MISFIRE | EC-284 |
| P0304 | 0304 | CYL 4 MISFIRE | EC-284 |
| P0327 | 0327 | KNOCK SEN/CIRC-B1 | EC-291 |
| P0328 | 0328 | KNOCK SEN/CIRC-B1 | EC-291 |
| P0335 | 0335 | CKP SEN/CIRCUIT | EC-295 |
| P0340 | 0340 | CMP SEN/CIRC-B1 | EC-302 |
| P0420 | 0420 | TW CATALYST SYS-B1 | EC-308 |
| P0441 | 0441 | EVAP PURG FLOW/MON | EC-313 |
| P0442 | 0442 | EVAP SMALL LEAK | EC-318 |
| P0443 | 0443 | PURG VOLUME CONT/V | EC-325 |
| P0444 | 0444 | PURG VOLUME CONT/V | EC-332 |
| P0445 | 0445 | PURG VOLUME CONT/V | EC-332 |
| P0447 | 0447 | VENT CONTROL VALVE | EC-338 |
| P0448 | 0448 | VENT CONTROL VALVE | EC-345 |
| P0451 | 0451 | EVAP SYS PRES SEN | EC-351 |
| P0452 | 0452 | EVAP SYS PRES SEN | EC-355 |
| P0453 | 0453 | EVAP SYS PRES SEN | EC-362 |
| P0455 | 0455 | EVAP GROSS LEAK | EC-370 |
| P0456 | 0456 | EVAP VERY SML LEAK | EC-377 |
| P0460 | 0460 | FUEL LEV SEN SLOSH | EC-385 |
| P0461 | 0461 | FUEL LEVEL SENSOR | EC-387 |
| P0462 | 0462 | FUEL LEVL SEN/CIRC | EC-389 |
| P0463 | 0463 | FUEL LEVL SEN/CIRC | EC-389 |
| P0500 | 0500 | VEH SPEED SEN/CIRC*5 | EC-391 |
| P0506 | 0506 | ISC SYSTEM | EC-393 |
| P0507 | 0507 | ISC SYSTEM | EC-395 |
| P0605 | 0605 | ECM | EC-397 |
| P0643 | 0643 | SENSOR POWER/CIRC | EC-400 |
| P0705 | 0705 | PNP SW/CIRC | AT-86 (A/T), CVT-65 (CVT) |
| P0710 | 0710 | ATF TEMP SEN/CIRC | AT-91 (A/T), CVT-71 (CVT) |
| P0715 | 0715 | INPUT SPD SEN/CIRC | CVT-76 |
| P0720 | 0720 | VEH SPD SEN/CIR AT*5 | AT-96 (A/T), CVT-80 (CVT) |
| P0725 | 0725 | ENGINE SPEED SIG | AT-101 |

INDEX FOR DTC

< SERVICE INFORMATION >

| DTC*1 | | Items (CONSULT-II screen terms) | Reference page | |
|---------------------|-------------|------------------------------------|---|----|
| CONSULT-II GST*2 | ECM*3 | | | |
| P0731 | 0731 | A/T 1ST GR FNCTN | AT-105 | A |
| P0732 | 0732 | A/T 2ND GR FNCTN | AT-108 | EC |
| P0733 | 0733 | A/T 3RD GR FNCTN | AT-111 | |
| P0734 | 0734 | A/T 4TH GR FNCTN | AT-114 | C |
| P0740 | 0740 | TCC SOLENOID/CIRC | AT-119 | |
| P0744 | 0744 | A/T TCC S/V FNCTN | AT-124 (A/T), CVT-93 (CVT) | D |
| P0745 | 0745 | L/PRESS SOL/CIRC | AT-129 | |
| P0746 | 0746 | PRS CNT SOL/A FCTN | CVT-100 | E |
| P0750 | 0750 | SFT SOL A/CIRC | AT-134 | |
| P0755 | 0755 | SFT SOL B/CIRC | AT-139 | |
| P0776 | 0776 | PRS CNT SOL/B FCTN | CVT-102 | F |
| P0778 | 0778 | PRS CNT SOL/B CIRC | CVT-104 | |
| P0840 | 0840 | TR PRS SENS/A CIRC | CVT-109 | G |
| P0845 | 0845 | TR PRS SENS/B CIRC | CVT-115 | |
| P0850 | 0850 | P-N POS SW/CIRCUIT | EC-405 | |
| P1148 | 1148 | CLOSED LOOP-B1 | EC-411 | H |
| P1217 | 1217 | ENG OVER TEMP | EC-412 | |
| P1225 | 1225 | CTP LEARNING | EC-426 | I |
| P1226 | 1226 | CTP LEARNING | EC-428 | |
| P1421 | 1421 | COLD START CONTROL | EC-430 | |
| P1564 | 1564 | ASCD SW | EC-432 | J |
| P1572 | 1572 | ASCD BRAKE SW | EC-438 | |
| P1574 | 1574 | ASCD VHL SPD SEN | EC-447 | |
| P1610 - P1615 | 1610 - 1615 | NATS MALFUNCTION | BL-210 | K |
| P1705 | 1705 | TP SEN/CIRC CVT | CVT-125 | |
| P1715 | 1715 | IN PULY SPEED | EC-449 (A/T), EC-450 (CVT) | L |
| P1740 | 1740 | LU-SLCT SOL/CIRC | CVT-132 | |
| P1760 | 1760 | O/R CLTCH SOL/CIRC | AT-144 | M |
| P1777 | 1777 | STEP MOTR CIRC | CVT-137 | |
| P1778 | 1778 | STEP MOTR FNC | CVT-141 | |
| P1805 | 1805 | BRAKE SW/CIRCUIT | EC-452 | N |
| P2100 | 2100 | ETC MOT PWR | EC-456 | |
| P2101 | 2101 | ETC FUNCTION/CIRC | EC-461 | O |
| P2103 | 2103 | ETC MOT PWR | EC-456 | |
| P2118 | 2118 | ETC MOT | EC-467 | |
| P2119 | 2119 | ETC ACTR | EC-472 | P |
| P2122 | 2122 | APP SEN 1/CIRC | EC-474 | |
| P2123 | 2123 | APP SEN 1/CIRC | EC-474 | |
| P2127 | 2127 | APP SEN 2/CIRC | EC-480 | |
| P2128 | 2128 | APP SEN 2/CIRC | EC-480 | |
| P2135 | 2135 | TP SENSOR | EC-487 | |

INDEX FOR DTC

< SERVICE INFORMATION >

| DTC*1 | | Items (CONSULT-II screen terms) | Reference page |
|---------------------|-------|------------------------------------|------------------------|
| CONSULT-II GST*2 | ECM*3 | | |
| P2138 | 2138 | APP SENSOR | EC-493 |
| P2A00 | 2A00 | A/F SENSOR1 (B1) | EC-500 |

*1: 1st trip DTC No. is the same as DTC No.

*2: This number is prescribed by SAE J2012.

*3: In Diagnostic Test Mode II (Self-diagnostic results), this number is controlled by NISSAN.

*4: The troubleshooting for this DTC needs CONSULT-II.

*5: When the fail-safe operations for both self-diagnoses occur, the MIL illuminates.

Alphabetical Index

INFOID:000000001702547

NOTE:

- If DTC U1000 or U1001 is displayed with other DTC, first perform the trouble diagnosis for DTC U1000, U1001. Refer to [EC-143](#).
- If DTC U1010 is displayed with other DTC, first perform the trouble diagnosis for DTC U1010. Refer to [EC-145](#).

| Items (CONSULT-II screen terms) | DTC*1 | | Reference page |
|------------------------------------|---------------------|--------|---|
| | CONSULT-II GST*2 | ECM*3 | |
| A/F SENSOR1 (B1) | P0130 | 0130 | EC-206 |
| A/F SENSOR1 (B1) | P0131 | 0131 | EC-213 |
| A/F SENSOR1 (B1) | P0132 | 0132 | EC-219 |
| A/F SENSOR1 (B1) | P0133 | 0133 | EC-225 |
| A/F SENSOR1 (B1) | P2A00 | 2A00 | EC-500 |
| A/F SEN1 HTR (B1) | P0031 | 0031 | EC-151 |
| A/F SEN1 HTR (B1) | P0032 | 0032 | EC-151 |
| A/T 1ST GR FNCTN | P0731 | 0731 | AT-105 |
| A/T 2ND GR FNCTN | P0732 | 0732 | AT-108 |
| A/T 3RD GR FNCTN | P0733 | 0733 | AT-111 |
| A/T 4TH GR FNCTN | P0734 | 0734 | AT-114 |
| A/T TCC S/V FNCTN | P0744 | 0744 | AT-124 (A/T), CVT-93 (CVT) |
| APP SEN 1/CIRC | P2122 | 2122 | EC-474 |
| APP SEN 1/CIRC | P2123 | 2123 | EC-474 |
| APP SEN 2/CIRC | P2127 | 2127 | EC-480 |
| APP SEN 2/CIRC | P2128 | 2128 | EC-480 |
| APP SENSOR | P2138 | 2138 | EC-493 |
| ASCD BRAKE SW | P1572 | 1572 | EC-438 |
| ASCD SW | P1564 | 1564 | EC-432 |
| ASCD VHL SPD SEN | P1574 | 1574 | EC-447 |
| ATF TEMP SEN/CIRC | P0710 | 0710 | AT-91 (A/T), CVT-71 (CVT) |
| BRAKE SW/CIRCUIT | P1805 | 1805 | EC-452 |
| CAN COMM CIRCUIT | U1000 | 1000*4 | EC-143 |
| CAN COMM CIRCUIT | U1001 | 1001*4 | EC-143 |
| CKP SEN/CIRCUIT | P0335 | 0335 | EC-295 |

INDEX FOR DTC

< SERVICE INFORMATION >

| Items (CONSULT-II screen terms) | DTC*1 | | Reference page | |
|------------------------------------|---------------------|-------|------------------------|----|
| | CONSULT-II GST*2 | ECM*3 | | |
| CLOSED LOOP-B1 | P1148 | 1148 | EC-411 | A |
| CMP SEN/CIRC-B1 | P0340 | 0340 | EC-302 | EC |
| COLD START CONTROL | P1421 | 1421 | EC-430 | |
| CONTROL UNIT(CAN) | U1010 | 1010 | EC-145 | C |
| CTP LEARNING | P1225 | 1225 | EC-426 | |
| CTP LEARNING | P1226 | 1226 | EC-428 | D |
| CYL 1 MISFIRE | P0301 | 0301 | EC-284 | |
| CYL 2 MISFIRE | P0302 | 0302 | EC-284 | |
| CYL 3 MISFIRE | P0303 | 0303 | EC-284 | E |
| CYL 4 MISFIRE | P0304 | 0304 | EC-284 | |
| ECM | P0605 | 0605 | EC-397 | |
| ECT SEN/CIRC | P0117 | 0117 | EC-187 | F |
| ECT SEN/CIRC | P0118 | 0118 | EC-187 | |
| ECT SENSOR | P0125 | 0125 | EC-198 | G |
| ENG OVER TEMP | P1217 | 1217 | EC-412 | |
| ENGINE SPEED SIG | P0725 | 0725 | AT-101 | H |
| ETC ACTR | P2119 | 2119 | EC-472 | |
| ETC FUNCTION/CIRC | P2101 | 2101 | EC-461 | |
| ETC MOT | P2118 | 2118 | EC-467 | I |
| ETC MOT PWR | P2100 | 2100 | EC-456 | |
| ETC MOT PWR | P2103 | 2103 | EC-456 | |
| EVAP GROSS LEAK | P0455 | 0455 | EC-370 | J |
| EVAP PURG FLOW/MON | P0441 | 0441 | EC-313 | |
| EVAP SMALL LEAK | P0442 | 0442 | EC-318 | |
| EVAP SYS PRES SEN | P0451 | 0451 | EC-351 | K |
| EVAP SYS PRES SEN | P0452 | 0452 | EC-355 | |
| EVAP SYS PRES SEN | P0453 | 0453 | EC-362 | L |
| EVAP VERY SML LEAK | P0456 | 0456 | EC-377 | |
| FTT SEN/CIRCUIT | P0182 | 0182 | EC-274 | |
| FTT SEN/CIRCUIT | P0183 | 0183 | EC-274 | M |
| FTT SENSOR | P0181 | 0181 | EC-270 | |
| FUEL LEV SEN SLOSH | P0460 | 0460 | EC-385 | N |
| FUEL LEVEL SENSOR | P0461 | 0461 | EC-387 | |
| FUEL LEVL SEN/CIRC | P0462 | 0462 | EC-389 | |
| FUEL LEVL SEN/CIRC | P0463 | 0463 | EC-389 | O |
| FUEL SYS-LEAN-B1 | P0171 | 0171 | EC-257 | |
| FUEL SYS-RICH-B1 | P0172 | 0172 | EC-264 | P |
| HO2S2 (B1) | P0137 | 0137 | EC-233 | |
| HO2S2 (B1) | P0138 | 0138 | EC-240 | |
| HO2S2 (B1) | P0139 | 0139 | EC-250 | |
| HO2S2 HTR (B1) | P0037 | 0037 | EC-156 | |
| HO2S2 HTR (B1) | P0038 | 0038 | EC-156 | |

INDEX FOR DTC

< SERVICE INFORMATION >

| Items (CONSULT-II screen terms) | DTC*1 | | Reference page |
|---|---------------------|-------------|---|
| | CONSULT-II GST*2 | ECM*3 | |
| IAT SEN/CIRCUIT | P0112 | 0112 | EC-182 |
| IAT SEN/CIRCUIT | P0113 | 0113 | EC-182 |
| IAT SENSOR | P0127 | 0127 | EC-201 |
| INPUT SPD SEN/CIRC | P0715 | 0715 | EC-450 |
| IN PULY SPEED | P1715 | 1715 | EC-449 (A/T), EC-450 (CVT) |
| INT/V TIM CONT-B1 | P0011 | 0011 | EC-147 |
| INT/V TIM V/CIR-B1 | P0075 | 0075 | EC-162 |
| ISC SYSTEM | P0506 | 0506 | EC-393 |
| ISC SYSTEM | P0507 | 0507 | EC-395 |
| KNOCK SEN/CIRC-B1 | P0327 | 0327 | EC-291 |
| KNOCK SEN/CIRC-B1 | P0328 | 0328 | EC-291 |
| LU-SLCT SOL/CIRC | P1740 | 1740 | CVT-132 |
| L/PRESS SOL/CIRC | P0745 | 0745 | AT-129 |
| MAF SEN/CIRCUIT | P0101 | 0101 | EC-167 |
| MAF SEN/CIRCUIT | P0102 | 0102 | EC-175 |
| MAF SEN/CIRCUIT | P0103 | 0103 | EC-175 |
| MULTI CYL MISFIRE | P0300 | 0300 | EC-284 |
| NATS MALFUNCTION | P1610 - P1615 | 1610 - 1615 | BL-210 |
| NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED. | P0000 | 0000 | — |
| O/R CLTCH SOL/CIRC | P1760 | 1760 | AT-144 |
| P-N POS SW/CIRCUIT | P0850 | 0850 | EC-405 |
| PNP SW/CIRC | P0705 | 0705 | AT-86 (A/T), CVT-65 (CVT) |
| PRS CNT SOL/A FCTN | P0746 | 0746 | CVT-100 |
| PRS CNT SOL/B CIRC | P0778 | 0778 | CVT-104 |
| PRS CNT SOL/B FCTN | P0776 | 0776 | CVT-102 |
| PURG VOLUME CONT/V | P0443 | 0443 | EC-325 |
| PURG VOLUME CONT/V | P0444 | 0444 | EC-332 |
| PURG VOLUME CONT/V | P0445 | 0445 | EC-332 |
| SENSOR POWER/CIRC | P0643 | 0643 | EC-400 |
| SFT SOL A/CIRC | P0750 | 0750 | AT-134 |
| SFT SOL B/CIRC | P0755 | 0755 | AT-139 |
| STEP MOTR CIRC | P1777 | 1777 | CVT-137 |
| STEP MOTR FNC | P1778 | 1778 | CVT-141 |
| TCC SOLENOID/CIRC | P0740 | 0740 | AT-119 |
| THERMSTAT FNCTN | P0128 | 0128 | EC-204 |
| TP SEN 1/CIRC | P0222 | 0222 | EC-278 |
| TP SEN 1/CIRC | P0223 | 0223 | EC-278 |
| TP SEN 2/CIRC | P0122 | 0122 | EC-192 |
| TP SEN 2/CIRC | P0123 | 0123 | EC-192 |
| TP SENSOR | P2135 | 2135 | EC-487 |

INDEX FOR DTC

< SERVICE INFORMATION >

| Items (CONSULT-II screen terms) | DTC*1 | | Reference page | |
|------------------------------------|---------------------|-------|--|----|
| | CONSULT-II GST*2 | ECM*3 | | |
| TP SEN/CIRC A/T | P1705 | 1705 | CVT-125 | A |
| TR PRS SENS/A CIRC | P0840 | 0840 | CVT-109 | EC |
| TR PRS SENS/B CIRC | P0845 | 0845 | CVT-115 | |
| TW CATALYST SYS-B1 | P0420 | 0420 | EC-308 | C |
| VEH SPD SEN/CIR AT*5 | P0720 | 0720 | AT-96 (A/T). CVT-80 (CVT) | |
| VEH SPEED SEN/CIRC*5 | P0500 | 0500 | EC-391 | D |
| VENT CONTROL VALVE | P0447 | 0447 | EC-338 | |
| VENT CONTROL VALVE | P0448 | 0448 | EC-345 | E |

*1: 1st trip DTC No. is the same as DTC No.

*2: This number is prescribed by SAE J2012.

*3: In Diagnostic Test Mode II (Self-diagnostic results), this number is controlled by NISSAN.

*4: The troubleshooting for this DTC needs CONSULT-II.

*5: When the fail-safe operations for both self-diagnoses occur, the MIL illuminates.

A
EC
C
D
E
F
G
H
I
J
K
L
M
N
O
P

PRECAUTIONS

< SERVICE INFORMATION >

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000001702548

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.


WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Precaution for Procedure without Cowl Top Cover

INFOID:000000001702549

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc.

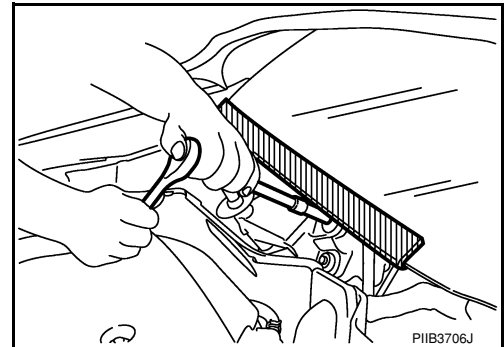

On Board Diagnosis (OBD) System of Engine and A/T, CVT

INFOID:000000001702550

The ECM has an on board diagnostic system. It will light up the malfunction indicator lamp (MIL) to warn the driver of a malfunction causing emission deterioration.

CAUTION:

- Be sure to turn the ignition switch OFF and disconnect the battery ground cable before any repair or inspection work. The open/short circuit of related switches, sensors, solenoid valves, etc. will cause the MIL to light up.
- Be sure to connect and lock the connectors securely after work. A loose (unlocked) connector will cause the MIL to light up due to the open circuit. (Be sure the connector is free from water, grease, dirt, bent terminals, etc.)
- Certain systems and components, especially those related to OBD, may use a new style slide-locking type harness connector. For description and how to disconnect, refer to [PG-65](#).
- Be sure to route and secure the harnesses properly after work. The interference of the harness with a bracket, etc. may cause the MIL to light up due to the short circuit.
- Be sure to connect rubber tubes properly after work. A misconnected or disconnected rubber tube may cause the MIL to light up due to the malfunction of the fuel injection system, etc.
- Be sure to erase the unnecessary malfunction information (repairs completed) from the ECM and TCM (Transmission control module) before returning the vehicle to the customer.


PRECAUTIONS

< SERVICE INFORMATION >


Precaution

INFOID:000000001702551


- Always use a 12 volt battery as power source.
- Do not attempt to disconnect battery cables while engine is running.
- Before connecting or disconnecting the ECM harness connector, turn ignition switch OFF and disconnect negative battery cable. Failure to do so may damage the ECM because battery voltage is applied to ECM even if ignition switch is turned OFF.
- Before removing parts, turn ignition switch OFF and then disconnect negative battery cable.

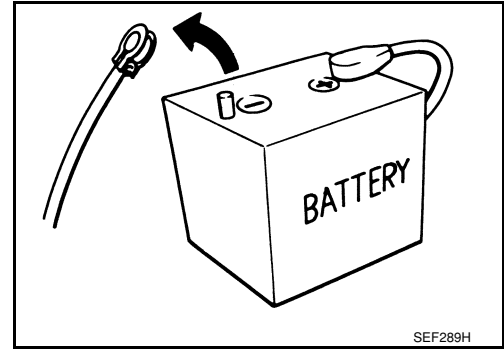


- Do not disassemble ECM.
- If battery cable is disconnected, the memory will return to the initial ECM values.
The ECM will now start to self-control at its initial values. Engine operation can vary slightly when the cable is disconnected. However, this is not an indication of a malfunction. Do not replace parts because of a slight variation.
- If the battery is disconnected, the following emission-related diagnostic information will be lost within 24 hours.
 - Diagnostic trouble codes
 - 1st trip diagnostic trouble codes
 - Freeze frame data
 - 1st trip freeze frame data
 - System readiness test (SRT) codes
 - Test values

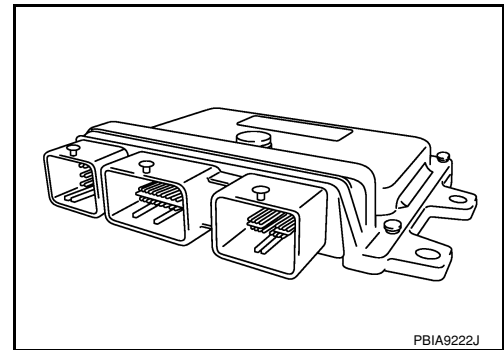

- When connecting ECM harness connector, fasten (B) it securely with a lever (1) as far as it will go as shown in the figure.
 - ECM (2)
 - Loosen (A)

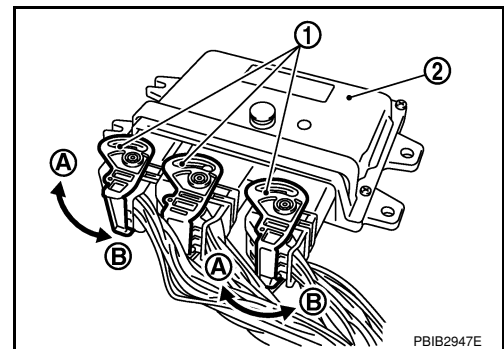

- When connecting or disconnecting pin connectors into or from ECM, take care not to damage pin terminals (bend or break).
Make sure that there are not any bends or breaks on ECM pin terminal, when connecting pin connectors.
- Securely connect ECM harness connectors.
A poor connection can cause an extremely high (surge) voltage to develop in coil and condenser, thus resulting in damage to ICs.
- Keep engine control system harness at least 10 cm (4 in) away from adjacent harness, to prevent engine control system malfunctions due to receiving external noise, degraded operation of ICs, etc.
- Keep engine control system parts and harness dry.


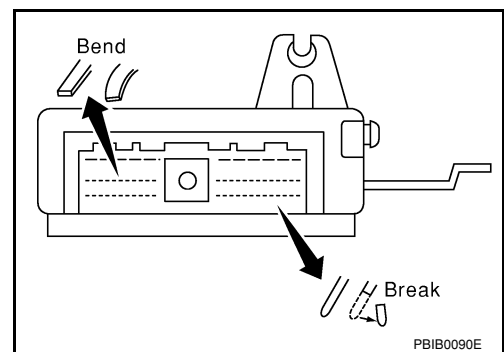


A
EC
C
D
E
F
G
H
I
J
K
L
M
N
O
P


PRECAUTIONS

< SERVICE INFORMATION >


- Before replacing ECM, perform “ECM Terminals and Reference Value” inspection and make sure ECM functions properly. Refer to **EC-102, “ECM Terminal and Reference Value”**.
- Handle mass air flow sensor carefully to avoid damage.
- Do not disassemble mass air flow sensor.
- Do not clean mass air flow sensor with any type of detergent.
- Do not disassemble electric throttle control actuator.
- Even a slight leak in the air intake system can cause serious incidents.
- Do not shock or jar the camshaft position sensor (PHASE), crankshaft position sensor (POS).
- After performing each TROUBLE DIAGNOSIS, perform DTC Confirmation Procedure or Overall Function Check. The DTC should not be displayed in the DTC Confirmation Procedure if the repair is completed. The Overall Function Check should be a good result if the repair is completed.

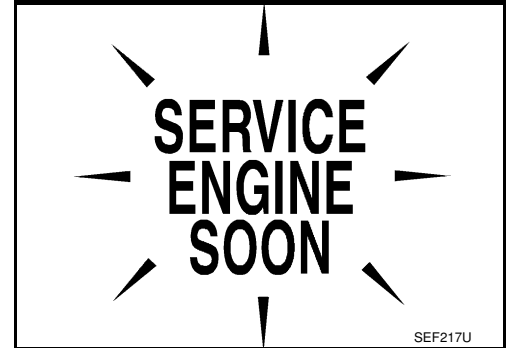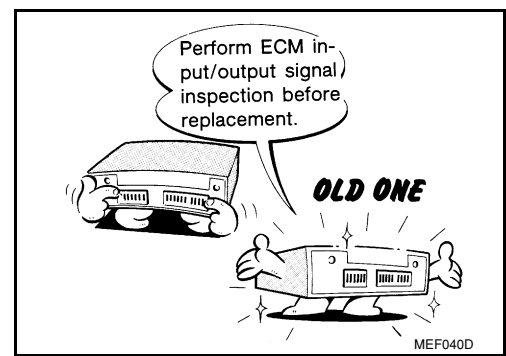

- When measuring ECM signals with a circuit tester, never allow the two tester probes to contact. Accidental contact of probes will cause a short circuit and damage the ECM power transistor.
- Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

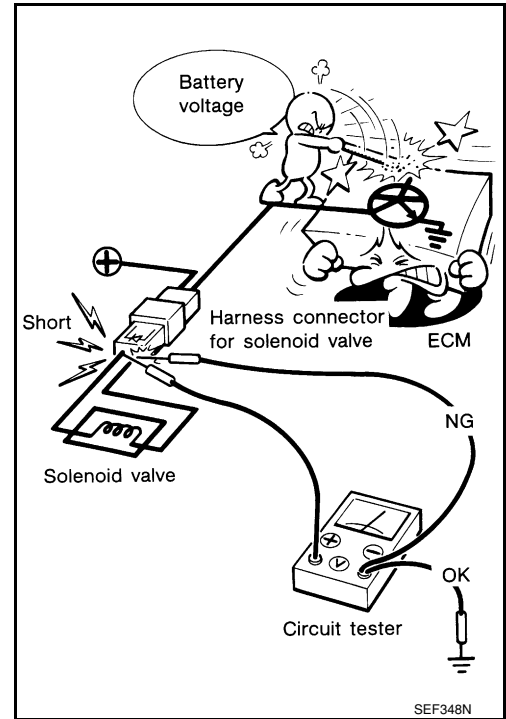


- Do not operate fuel pump when there is no fuel in lines.
- Tighten fuel hose clamps to the specified torque.
 - Fuel level sensor unit and fuel pump (1)
 - Fuel pressure regulator (2)
 - Fuel level sensor (3)
 - Fuel tank temperature sensor (4)

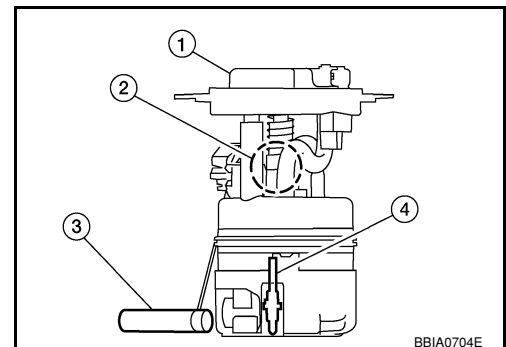


PRECAUTIONS

< SERVICE INFORMATION >

- Do not depress accelerator pedal when starting.
- Immediately after starting, do not rev up engine unnecessarily.
- Do not rev up engine just prior to shutdown.

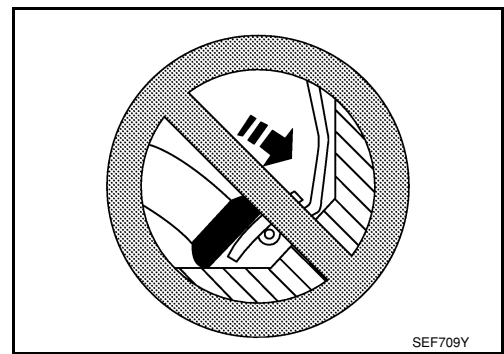

- When installing C.B. ham radio or a mobile phone, be sure to observe the following as it may adversely affect electronic control systems depending on installation location.
 - Keep the antenna as far as possible from the electronic control units.
 - Keep the antenna feeder line more than 20 cm (8 in) away from the harness of electronic controls. Do not let them run parallel for a long distance.
 - Adjust the antenna and feeder line so that the standing-wave ratio can be kept smaller.
 - Be sure to ground the radio to vehicle body.

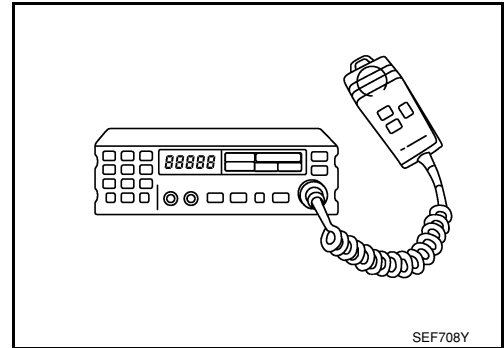

A

EC

C

D

E

F

G

H

I

J

K

L

M

N

O

P

PREPARATION






< SERVICE INFORMATION >

PREPARATION

Special Service Tool

INFOID:000000001702552

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.
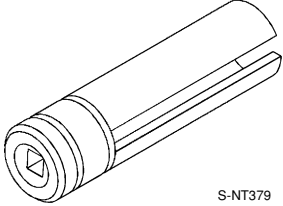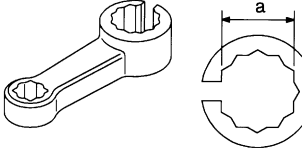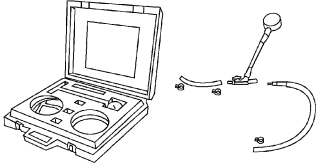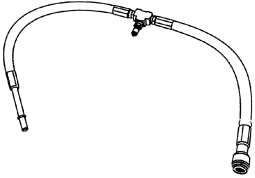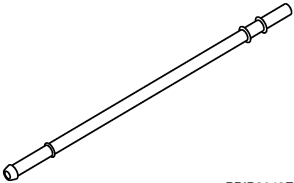
| Tool number (Kent-Moore No.) Tool name | Description |
|---|--|
| KV10117100 (J-36471-A) Heated oxygen sensor wrench  S-NT379 | Loosening or tightening heated oxygen sensor with 22 mm (0.87 in) hexagon nut |
| KV10114400 (J-38365) Heated oxygen sensor wrench  S-NT636 | Loosening or tightening heated oxygen sensor a: 22 mm (0.87 in) |
| (J-44321) Fuel pressure gauge Kit  LEC642 | Checking fuel pressure |
| (J-44321-6) Fuel pressure adapter  LBIA0376E | Connecting fuel pressure gauge to quick connector type fuel lines. |
| KV10118400 Fuel tube adapter  PBIB3043E | Measuring fuel pressure |





PREPARATION

< SERVICE INFORMATION >

Commercial Service Tool

INFOID:000000001702553

| Tool number (Kent-Moore No.) Tool name | Description | EC |
|---|--|-------------|
| Leak detector i.e.: (J-41416) | Locating the EVAP leak | A C D |
| EVAP service port adapter i.e.: (J-41413-OBDD) | Applying positive pressure through EVAP service port | E F G |
| Fuel filler cap adapter i.e.: (MLR-8382) | Checking fuel tank vacuum relief valve opening pressure | H I |
| Socket wrench | Removing and installing engine coolant temperature sensor | J K L |
| Oxygen sensor thread cleaner i.e.: (J-43897-18) (J-43897-12) | Reconditioning the exhaust system threads before installing a new oxygen sensor. Use with anti-seize lubricant shown below. a: 18 mm diameter with pitch 1.5 mm for Zirconia Oxygen Sensor b: 12 mm diameter with pitch 1.25 mm for Titanium Oxygen Sensor | M N |
| Anti-seize lubricant i.e.: (Permatex™ 133AR or equivalent meeting MIL specification MIL-A-907) | Lubricating oxygen sensor thread cleaning tool when reconditioning exhaust system threads. | O P |

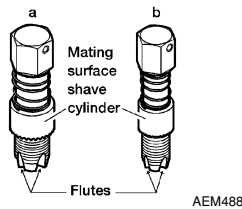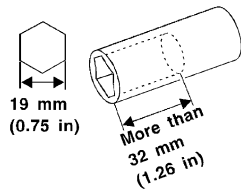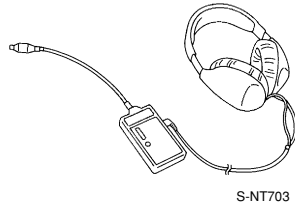


ENGINE CONTROL SYSTEM

< SERVICE INFORMATION >

ENGINE CONTROL SYSTEM

Schematic

INFOID:000000001702554

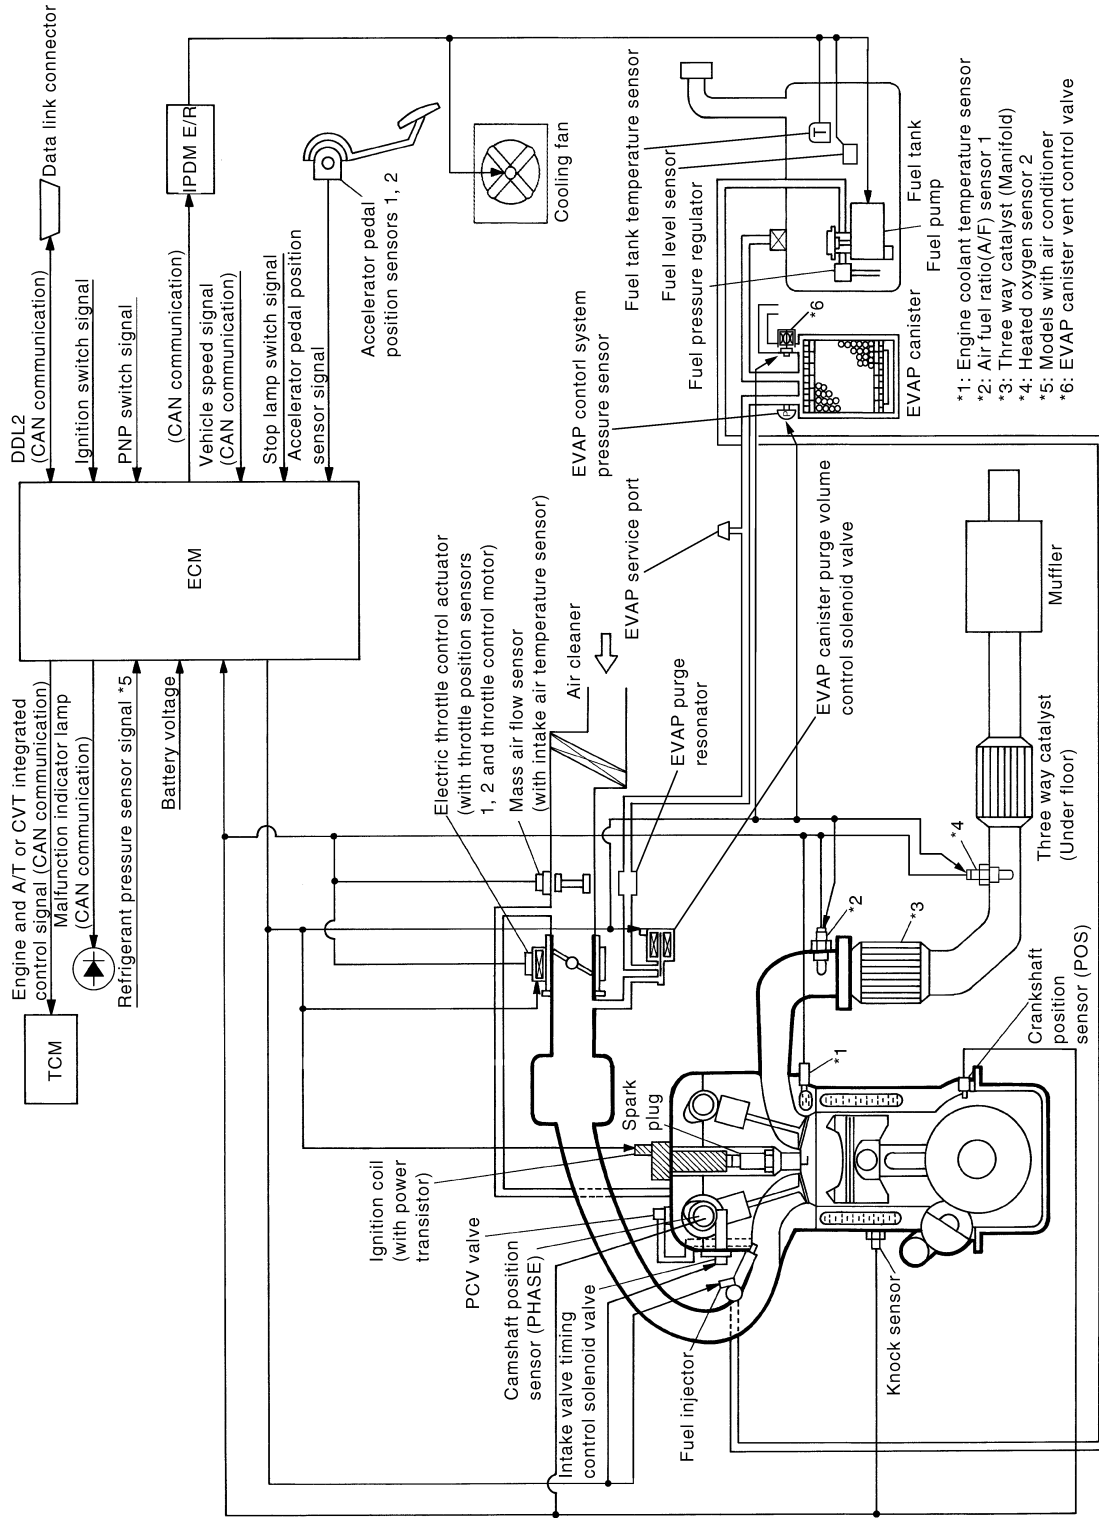

PBIB3331E

Multiport Fuel Injection (MFI) System

INFOID:000000001702555

INPUT/OUTPUT SIGNAL CHART

ENGINE CONTROL SYSTEM

< SERVICE INFORMATION >

| Sensor | Input Signal to ECM | ECM function | Actuator |
|------------------------------------|-----------------------------------|--|---------------|
| Crankshaft position sensor (POS) | Engine speed*3 Piston position | Fuel injection & mixture ratio control | Fuel injector |
| Camshaft position sensor (PHASE) | | | |
| Mass air flow sensor | Amount of intake air | | |
| Engine coolant temperature sensor | Engine coolant temperature | | |
| Air fuel ratio (A/F) sensor 1 | Density of oxygen in exhaust gas | | |
| Throttle position sensor | Throttle position | | |
| Accelerator pedal position sensor | Accelerator pedal position | | |
| Park/neutral position (PNP) switch | Gear position | | |
| Battery | Battery voltage*3 | | |
| Knock sensor | Engine knocking condition | | |
| EPS control unit | Power steering operation*2 | | |
| Heated oxygen sensor 2*1 | Density of oxygen in exhaust gas | | |
| Air conditioner switch | Air conditioner operation*2 | | |
| Wheel sensor | Vehicle speed*2 | | |

*1: This sensor is not used to control the engine system under normal conditions.

*2: This signal is sent to the ECM through CAN communication line.

*3: ECM determines the start signal status by the signals of engine speed and battery voltage.

SYSTEM DESCRIPTION

The amount of fuel injected from the fuel injector is determined by the ECM. The ECM controls the length of time the valve remains open (injection pulse duration). The amount of fuel injected is a program value in the ECM memory. The program value is preset by engine operating conditions. These conditions are determined by input signals (for engine speed and intake air) from the crankshaft position sensor (POS), camshaft position sensor (PHASE) and the mass air flow sensor.

VARIOUS FUEL INJECTION INCREASE/DECREASE COMPENSATION

In addition, the amount of fuel injected is compensated to improve engine performance under various operating conditions as listed below.


<Fuel increase>

- During warm-up
- When starting the engine
- During acceleration
- Hot-engine operation
- When selector lever is changed from N to D (A/T and CVT models)
- High-load, high-speed operation

<Fuel decrease>

- During deceleration
- During high engine speed operation

MIXTURE RATIO FEEDBACK CONTROL (CLOSED LOOP CONTROL)

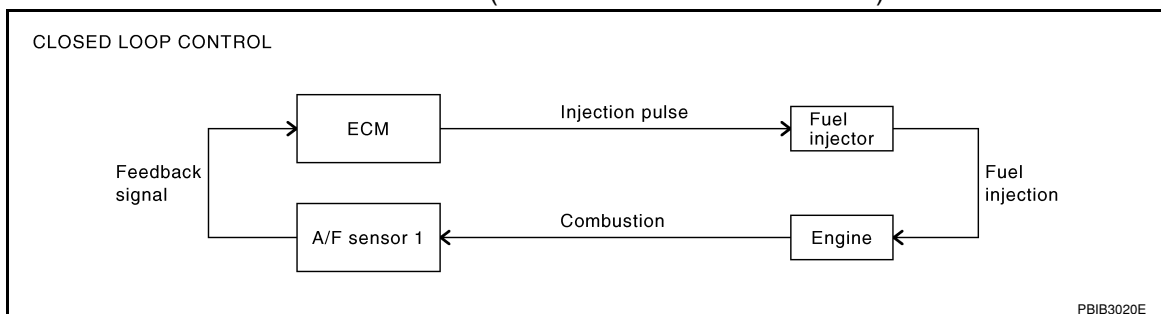

The mixture ratio feedback system provides the best air/fuel mixture ratio for driveability and emission control. The three way catalyst (manifold) can then better reduce CO, HC and NOx emissions. This system uses air

ENGINE CONTROL SYSTEM

< SERVICE INFORMATION >

fuel ratio (A/F) sensor 1 in the exhaust manifold to monitor whether the engine operation is rich or lean. The ECM adjusts the injection pulse width according to the sensor voltage signal. For more information about air fuel ratio (A/F) sensor 1, refer to [EC-213](#). This maintains the mixture ratio within the range of stoichiometric (ideal air/fuel mixture).

This stage is referred to as the closed loop control condition.

Heated oxygen sensor 2 is located downstream of the three way catalyst (manifold). Even if the switching characteristics of air fuel ratio (A/F) sensor 1 shift, the air/fuel ratio is controlled to stoichiometric by the signal from heated oxygen sensor 2.

Open Loop Control

The open loop system condition refers to when the ECM detects any of the following conditions. Feedback control stops in order to maintain stabilized fuel combustion.

- Deceleration and acceleration
- High-load, high-speed operation
- Malfunction of air fuel ratio (A/F) sensor 1 or its circuit
- Insufficient activation of air fuel ratio (A/F) sensor 1 at low engine coolant temperature
- High engine coolant temperature
- During warm-up
- After shifting from N to D (A/T and CVT models)
- When starting the engine

MIXTURE RATIO SELF-LEARNING CONTROL

The mixture ratio feedback control system monitors the mixture ratio signal transmitted from air fuel ratio (A/F) sensor 1. This feedback signal is then sent to the ECM. The ECM controls the basic mixture ratio as close to the theoretical mixture ratio as possible. However, the basic mixture ratio is not necessarily controlled as originally designed. Both manufacturing differences (i.e., mass air flow sensor hot wire) and characteristic changes during operation (i.e., fuel injector clogging) directly affect mixture ratio.


Accordingly, the difference between the basic and theoretical mixture ratios is monitored in this system. This is then computed in terms of “injection pulse duration” to automatically compensate for the difference between the two ratios.

“Fuel trim” refers to the feedback compensation value compared against the basic injection duration. Fuel trim includes short term fuel trim and long term fuel trim.

“Short term fuel trim” is the short-term fuel compensation used to maintain the mixture ratio at its theoretical value. The signal from air fuel ratio (A/F) sensor 1 indicates whether the mixture ratio is RICH or LEAN compared to the theoretical value. The signal then triggers a reduction in fuel volume if the mixture ratio is rich, and an increase in fuel volume if it is lean.

“Long term fuel trim” is overall fuel compensation carried out long-term to compensate for continual deviation of the short term fuel trim from the central value. Such deviation will occur due to individual engine differences, wear over time and changes in the usage environment.

FUEL INJECTION TIMING

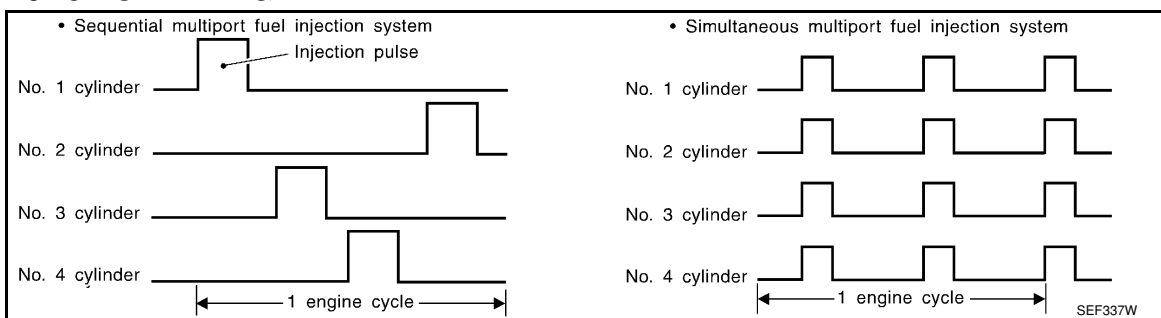

Two types of systems are used.

Sequential Multiport Fuel Injection System

Fuel is injected into each cylinder during each engine cycle according to the firing order. This system is used when the engine is running.

Simultaneous Multiport Fuel Injection System

Fuel is injected simultaneously into all four cylinders twice each engine cycle. In other words, pulse signals of the same width are simultaneously transmitted from the ECM.

The four fuel injectors will then receive the signals two times for each engine cycle.

This system is used when the engine is being started and/or if the fail-safe system (CPU) is operating.

ENGINE CONTROL SYSTEM

< SERVICE INFORMATION >

FUEL SHUT-OFF

Fuel to each cylinder is cut off during deceleration, operation of the engine at excessively high speeds or operation of the vehicle at excessively high speeds.

Electronic Ignition (EI) System

INFOID:000000001702556

INPUT/OUTPUT SIGNAL CHART

| Sensor | Input Signal to ECM | ECM function | Actuator |
|------------------------------------|---|-------------------------|------------------|
| Crankshaft position sensor (POS) | Engine speed* ² Piston position | Ignition timing control | Power transistor |
| Camshaft position sensor (PHASE) | | | |
| Mass air flow sensor | Amount of intake air | | |
| Engine coolant temperature sensor | Engine coolant temperature | | |
| Throttle position sensor | Throttle position | | |
| Accelerator pedal position sensor | Accelerator pedal position | | |
| Battery | Battery voltage* ² | | |
| Knock sensor | Engine knocking | | |
| Park/neutral position (PNP) switch | Gear position | | |
| Wheel sensor | Vehicle speed* ¹ | | |

*1: This signal is sent to the ECM through CAN communication line.

*2: ECM determines the start signal status by the signals of engine speed and battery voltage.

SYSTEM DESCRIPTION

Firing order: 1 - 3 - 4 - 2

The ignition timing is controlled by the ECM to maintain the best air-fuel ratio for every running condition of the engine. The ignition timing data is stored in the ECM.

The ECM receives information such as the injection pulse width and camshaft position sensor (PHASE) signal. Computing this information, ignition signals are transmitted to the power transistor.

During the following conditions, the ignition timing is revised by the ECM according to the other data stored in the ECM.

- At starting
- During warm-up
- At idle
- At low battery voltage
- During acceleration

The knock sensor retard system is designed only for emergencies. The basic ignition timing is programmed within the anti-knocking zone, if recommended fuel is used under dry conditions. The retard system does not operate under normal driving conditions. If engine knocking occurs, the knock sensor monitors the condition. The signal is transmitted to the ECM. The ECM retards the ignition timing to eliminate the knocking condition.

Fuel Cut Control (at No Load and High Engine Speed)

INFOID:000000001702557

INPUT/OUTPUT SIGNAL CHART

| Sensor | Input Signal to ECM | ECM function | Actuator |
|--|----------------------------|------------------|---------------|
| Park/neutral position (PNP) switch | Neutral position | Fuel cut control | Fuel injector |
| Accelerator pedal position sensor | Accelerator pedal position | | |
| Engine coolant temperature sensor | Engine coolant temperature | | |
| Crankshaft position sensor (POS) Camshaft position sensor (PHASE) | Engine speed | | |
| Wheel sensor | Vehicle speed* | | |

*: This signal is sent to the ECM through CAN communication line.

SYSTEM DESCRIPTION

ENGINE CONTROL SYSTEM

< SERVICE INFORMATION >

If the engine speed is above 2,000 rpm under no load [for example, the shift lever position is P or N (A/T, CVT), Neutral (M/T) and engine speed is over 2,000 rpm] fuel will be cut off after some time. The exact time when the fuel is cut off varies based on engine speed.

Fuel cut will be operated until the engine speed reaches 1,500 rpm, then fuel cut will be cancelled.

NOTE:

This function is different from deceleration control listed under [EC-22. "Multiport Fuel Injection \(MFI\) System"](#).

AIR CONDITIONING CUT CONTROL

< SERVICE INFORMATION >

AIR CONDITIONING CUT CONTROL

Input/Output Signal Chart

INFOID:000000001702558

| Sensor | Input Signal to ECM | ECM function | Actuator |
|--|---|-----------------------------|-----------------------|
| Air conditioner switch | Air conditioner ON signal* ¹ | Air conditioner cut control | Air conditioner relay |
| Accelerator pedal position sensor | Accelerator pedal position | | |
| Crankshaft position sensor (POS) Camshaft position sensor (PHASE) | Engine speed* ² | | |
| Engine coolant temperature sensor | Engine coolant temperature | | |
| Battery | Battery voltage* ² | | |
| Refrigerant pressure sensor | Refrigerant pressure | | |
| EPS control unit | Power steering operation* ¹ | | |
| Wheel sensor | Vehicle speed* ¹ | | |

*1: This signal is sent to the ECM through CAN communication line.

*2: ECM determines the start signal status by the signals of engine speed and battery voltage.

System Description

INFOID:000000001702559

This system improves engine operation when the air conditioner is used.

Under the following conditions, the air conditioner is turned off.

- When the accelerator pedal is fully depressed.
- When cranking the engine.
- At high engine speeds.
- When the engine coolant temperature becomes excessively high.
- When operating power steering during low engine speed or low vehicle speed.
- When engine speed is excessively low.
- When refrigerant pressure is excessively low or high.

AUTOMATIC SPEED CONTROL DEVICE (ASCD)

< SERVICE INFORMATION >

AUTOMATIC SPEED CONTROL DEVICE (ASCD)

System Description

INFOID:000000001702560

INPUT/OUTPUT SIGNAL CHART

| Sensor | Input signal to ECM | ECM function | Actuator |
|------------------------------------|--------------------------------|----------------------------|------------------------------------|
| ASCD brake switch | Brake pedal operation | ASCD vehicle speed control | Electric throttle control actuator |
| Stop lamp switch | Brake pedal operation | | |
| ASCD clutch switch (M/T models) | Clutch pedal operation | | |
| ASCD steering switch | ASCD steering switch operation | | |
| Park/neutral position (PNP) switch | Gear position | | |
| Combination meter | Vehicle speed* | | |
| TCM (A/T and CVT models) | Powertrain revolution* | | |

*: This signal is sent to the ECM through CAN communication line.

BASIC ASCD SYSTEM

Refer to Owner's Manual for ASCD operating instructions.

Automatic Speed Control Device (ASCD) allows a driver to keep vehicle at predetermined constant speed without depressing accelerator pedal. Driver can set vehicle speed in advance between approximately 40 km/h (25 MPH) and 144 km/h (89 MPH).

ECM controls throttle angle of electric throttle control actuator to regulate engine speed.

Operation status of ASCD is indicated by CRUISE indicator and SET indicator in combination meter. If any malfunction occurs in ASCD system, it automatically deactivates control.

NOTE:

Always drive vehicle in safe manner according to traffic conditions and obey all traffic laws.

SET OPERATION

Press MAIN switch. (The CRUISE indicator in combination meter illuminates.)

When vehicle speed reaches a desired speed between approximately 40 km/h (25 MPH) and 144 km/h (89 MPH), press SET/COAST switch. (Then SET indicator in combination meter illuminates.)

ACCELERATE OPERATION

If the RESUME/ACCELERATE switch is depressed during cruise control driving, increase the vehicle speed until the switch is released or vehicle speed reaches maximum speed controlled by the system.

And then ASCD will keep the new set speed.

CANCEL OPERATION

When any of following conditions exist, cruise operation will be canceled.

- CANCEL switch is pressed
- More than two switches at ASCD steering switch are pressed at the same time (Set speed will be cleared)
- Brake pedal is depressed
- Clutch pedal is depressed or gear position is changed to the neutral position (M/T models)
- Selector lever is changed to N, P, R position (A/T and CVT models)
- Vehicle speed decreased to 13 km/h (8 MPH) lower than the set speed

When the ECM detects any of the following conditions, the ECM will cancel the cruise operation and inform the driver by blinking indicator lamp.

- Engine coolant temperature is slightly higher than the normal operating temperature, CRUISE lamp may blink slowly.

When the engine coolant temperature decreases to the normal operating temperature, CRUISE lamp will stop blinking and the cruise operation will be able to work by pressing SET/COAST switch or RESUME/ACCELERATE switch.

- Malfunction for some self-diagnoses regarding ASCD control: SET lamp will blink quickly.

If MAIN switch is turned to OFF during ASCD is activated, all of ASCD operations will be canceled and vehicle speed memory will be erased.

COAST OPERATION

When the SET/COAST switch is depressed during cruise control driving, decrease vehicle set speed until the switch is released. And then ASCD will keep the new set speed.

AUTOMATIC SPEED CONTROL DEVICE (ASCD)

< SERVICE INFORMATION >

RESUME OPERATION

When the RESUME/ACCELERATE switch is depressed after cancel operation other than depressing MAIN switch is performed, vehicle speed will return to last set speed. To resume vehicle set speed, vehicle condition must meet following conditions.

- Brake pedal is released.
- Clutch pedal is released (M/T models)
- Selector lever is in other than P and N positions (A/T and CVT models)
- Vehicle speed is greater than 40 km/h (25 MPH) and less than 144 km/h (89 MPH)

Component Description

INFOID:000000001702561

ASCD STEERING SWITCH

Refer to [EC-432](#).

ASCD BRAKE SWITCH

Refer to [EC-438](#) and [EC-508](#).

ASCD CLUTCH SWITCH

Refer to [EC-438](#) and [EC-508](#).

STOP LAMP SWITCH

Refer to [EC-438](#), [EC-452](#) and [EC-508](#).

ELECTRIC THROTTLE CONTROL ACTUATOR

Refer to [EC-456](#), [EC-461](#), [EC-467](#) and [EC-472](#).

ASCD INDICATOR

Refer to [EC-516](#).

A

EC

C

D

E

F

G

H

I

J

K

L

M

N

O

P

CAN COMMUNICATION

< SERVICE INFORMATION >

CAN COMMUNICATION

System Description

INFOID:000000001702562

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

Refer to [LAN-23. "CAN System Specification Chart"](#), about CAN communication for detail.

EVAPORATIVE EMISSION SYSTEM


< SERVICE INFORMATION >

EVAPORATIVE EMISSION SYSTEM

Description

INFOID:000000001702563

SYSTEM DESCRIPTION

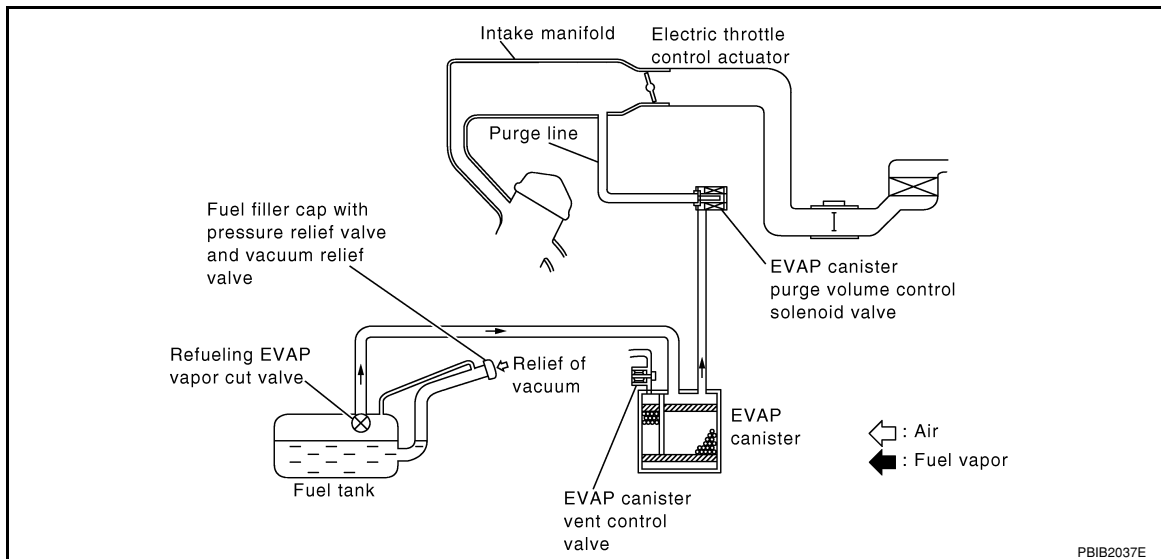

The evaporative emission system is used to reduce hydrocarbons emitted into the atmosphere from the fuel system. This reduction of hydrocarbons is accomplished by activated charcoals in the EVAP canister.

The fuel vapor in the sealed fuel tank is led into the EVAP canister which contains activated carbon and the vapor is stored there when the engine is not operating or when refueling to the fuel tank.


The vapor in the EVAP canister is purged by the air through the purge line to the intake manifold when the engine is operating. EVAP canister purge volume control solenoid valve is controlled by ECM. When the engine operates, the flow rate of vapor controlled by EVAP canister purge volume control solenoid valve is proportionally regulated as the air flow increases.

EVAP canister purge volume control solenoid valve also shuts off the vapor purge line during decelerating and idling.

EVAPORATIVE EMISSION LINE DRAWING

EVAPORATIVE EMISSION SYSTEM

< SERVICE INFORMATION >

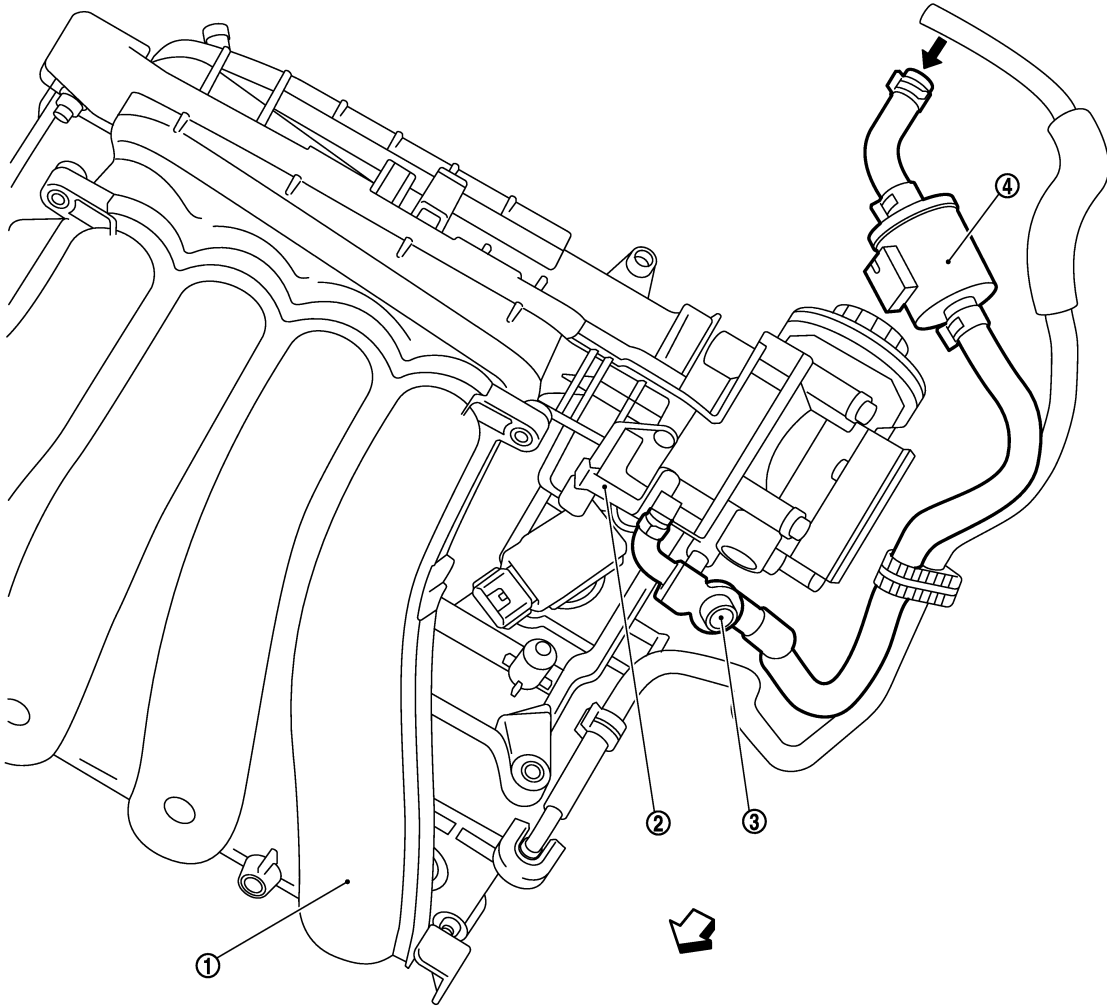

PBIB3330E

↔: Vehicle front

←: From next page

1. Intake manifold collector

2. EVAP canister purge volume control solenoid valve

3. EVAP service port

4. EVAP purge resonator


NOTE: Do not use soapy water or any type of solvent while installing vacuum hose or purge hoses.

EVAPORATIVE EMISSION SYSTEM

< SERVICE INFORMATION >

A

EC

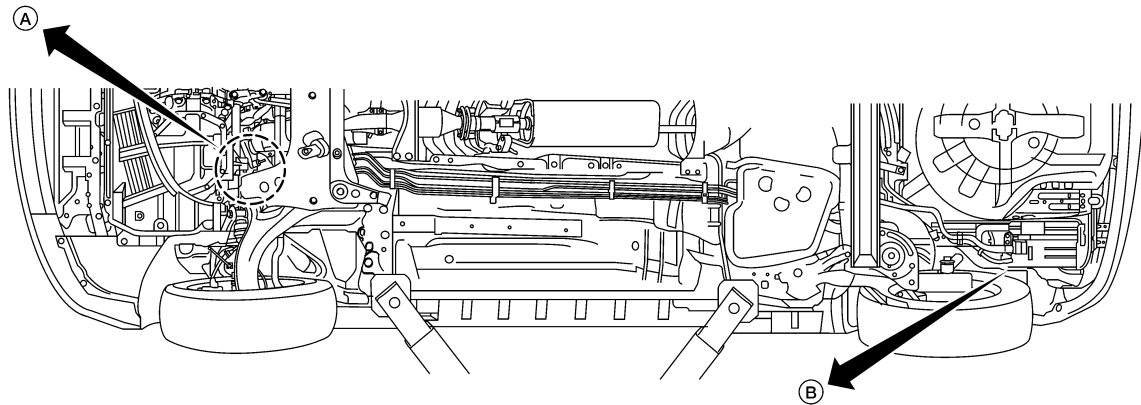

C

D

E

F

G


H

I

J

K

L

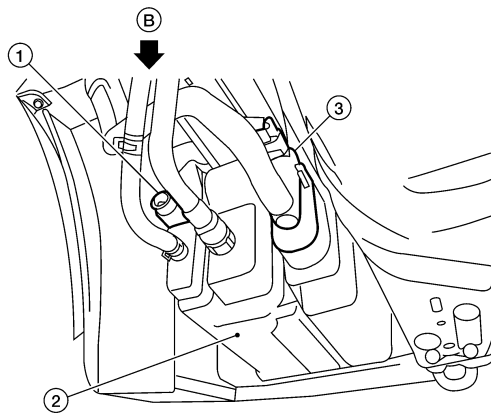

M

N

O

P

BBIA0692E

← To previous page

1. EVAP control system pressure sensor 2. EVAP canister 3. EVAP canister vent control valve

NOTE: Do not use soapy water or any type of solvent while installing vacuum hose or purge hoses.

Component Inspection

INFOID:000000001702564


EVAP CANISTER

EVAPORATIVE EMISSION SYSTEM

< SERVICE INFORMATION >


Check EVAP canister as follows:

1. Block port **B**.
2. Blow air into port **A** and check that it flows freely out of port **C**.
3. Release blocked port **B**.
4. Apply vacuum pressure to port **B** and check that vacuum pressure exists at the ports **A** and **C**.
5. Block port **A** and **B**.
6. Apply pressure to port **C** and check that there is no leakage.

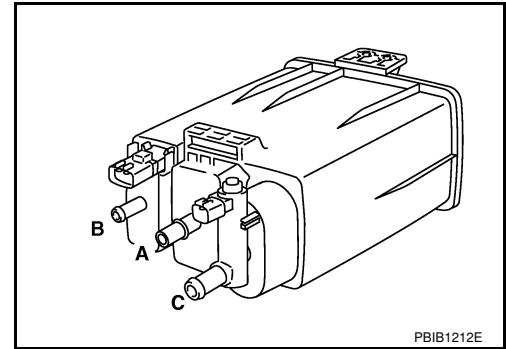

FUEL TANK VACUUM RELIEF VALVE (BUILT INTO FUEL FILLER CAP)

1. Wipe clean valve housing.

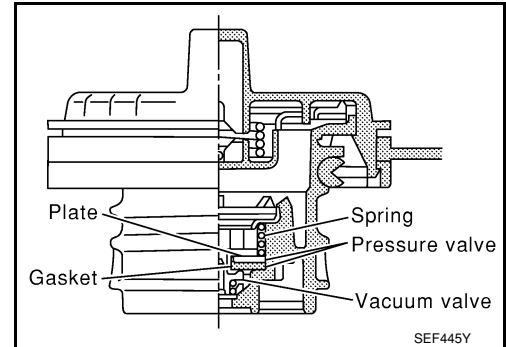

2. Check valve opening pressure and vacuum.


Pressure: 15.3 - 20.0 kPa
(0.156 - 0.204 kg/cm², 2.22 - 2.90 psi)

Vacuum: -6.0 to -3.4 kPa
(-0.061 to -0.035 kg/cm², -0.87 to -0.48 psi)

3. If out of specification, replace fuel filler cap as an assembly.

CAUTION:

Use only a genuine fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may come on.

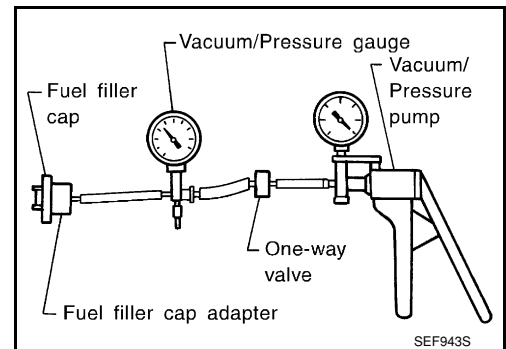

EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Refer to [EC-337, "Component Inspection"](#).

FUEL TANK TEMPERATURE SENSOR

Refer to [EC-277, "Component Inspection"](#).

EVAP CANISTER VENT CONTROL VALVE

Refer to [EC-343, "Component Inspection"](#).

EVAP CONTROL SYSTEM PRESSURE SENSOR


Refer to [EC-361, "Component Inspection"](#).

EVAP SERVICE PORT

EVAPORATIVE EMISSION SYSTEM

< SERVICE INFORMATION >

Positive pressure is delivered to the EVAP system through the EVAP service port. If fuel vapor leakage in the EVAP system occurs, use a leak detector to locate the leak.

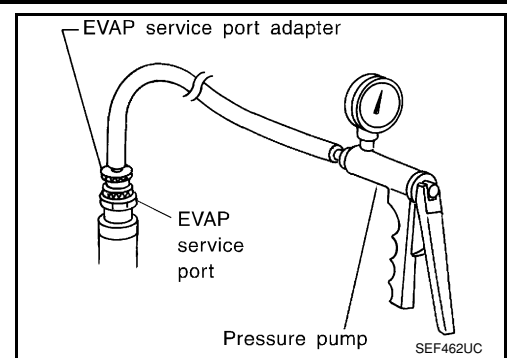


Removal and Installation

INFOID:000000001702565

EVAP CANISTER


Tighten EVAP canister as shown in the figure.

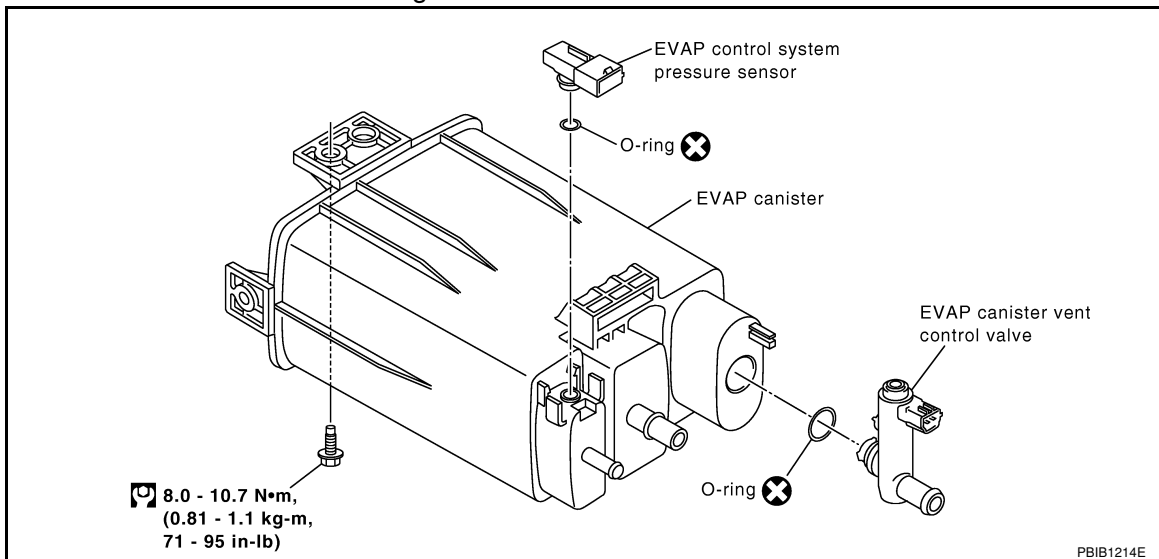

EVAP CANISTER VENT CONTROL VALVE

1. Turn EVAP canister vent control valve counterclockwise.
 - Lock (A)
 - Unlock (B)
2. Remove the EVAP canister vent control valve.

Always replace O-ring with a new one.

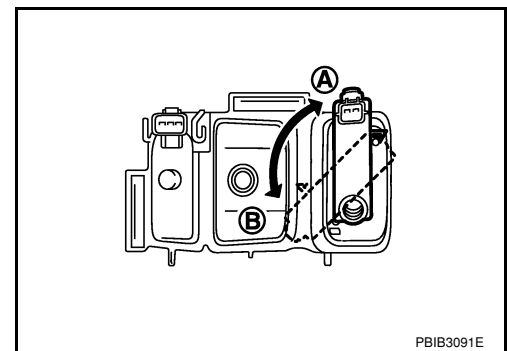

How to Detect Fuel Vapor Leakage

INFOID:000000001702566

CAUTION:

- Never use compressed air or a high pressure pump.
- Do not exceed 4.12 kPa (0.042 kg/cm², 0.6 psi) of pressure in EVAP system.

NOTE:

- Do not start engine.
- Improper installation of EVAP service port adapter to the EVAP service port may cause a leak.


WITH CONSULT-II

1. Attach the EVAP service port adapter securely to the EVAP service port.
2. Also attach the pressure pump and hose to the EVAP service port adapter.


EVAPORATIVE EMISSION SYSTEM

< SERVICE INFORMATION >


3. Turn ignition switch ON.
4. Select the "EVAP SYSTEM CLOSE" of "WORK SUPPORT" mode with CONSULT-II.
5. Touch "START". A bar graph (Pressure indicating display) will appear on the screen.

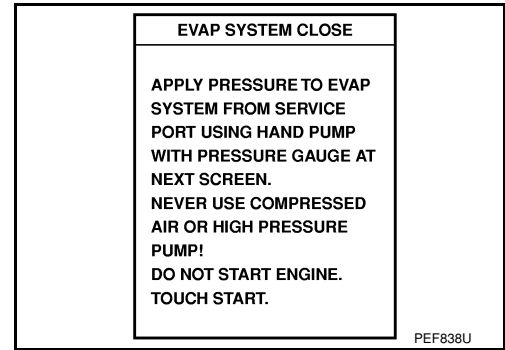

6. Apply positive pressure to the EVAP system until the pressure indicator reaches the middle of the bar graph.
7. Remove EVAP service port adapter and hose with pressure pump.

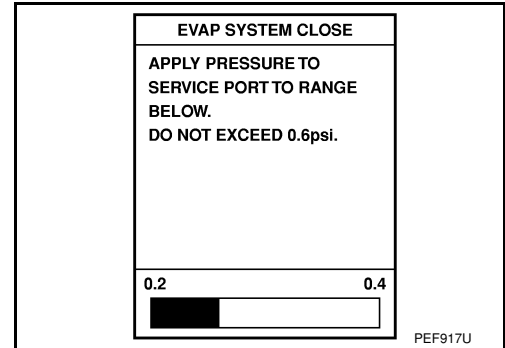


8. Locate the leak using a leak detector. Refer to [EC-31. "Description"](#).

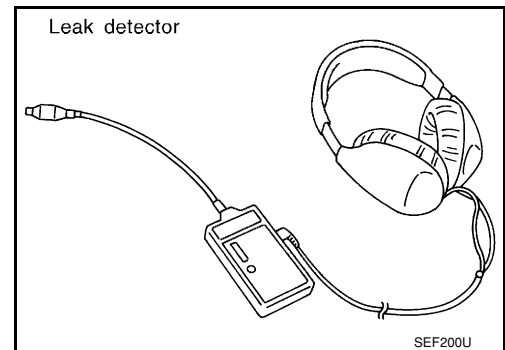

⊗ WITHOUT CONSULT-II


1. Attach the EVAP service port adapter securely to the EVAP service port.
2. Also attach the pressure pump with pressure gauge to the EVAP service port adapter.

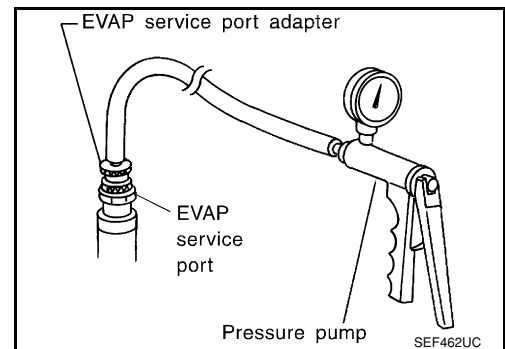

EVAPORATIVE EMISSION SYSTEM

< SERVICE INFORMATION >

3. Apply battery voltage to the terminal of EVAP canister vent control valve (3) to make a closed EVAP system.
 - EVAP control system pressure sensor (1)
 - EVAP canister (2)

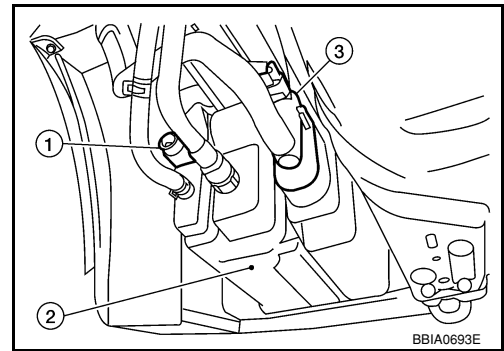

4. To locate the leak, deliver positive pressure to the EVAP system until pressure gauge points reach 1.38 to 2.76 kPa (0.014 to 0.028 kg/cm², 0.2 to 0.4 psi).
5. Remove EVAP service port adapter and hose with pressure pump.
6. Locate the leak using a leak detector. Refer to [EC-31, "Description"](#).

A

EC

C

D

E

F

G

H

I

J

K

L

M

N

O

P


ON BOARD REFUELING VAPOR RECOVERY (ORVR)

< SERVICE INFORMATION >

ON BOARD REFUELING VAPOR RECOVERY (ORVR)

System Description

INFOID:000000001702567

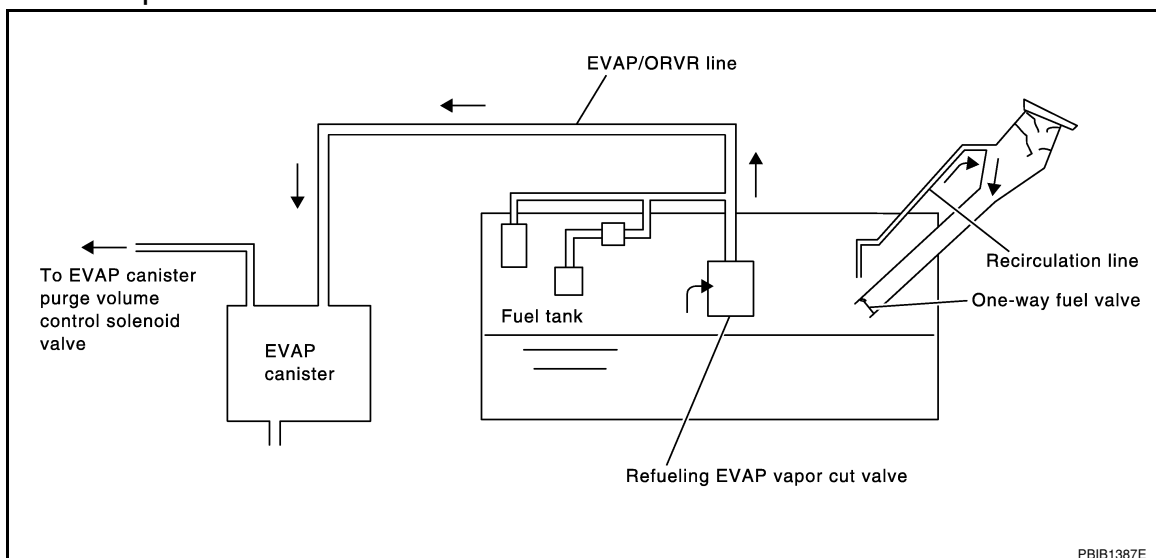

PBIB1387E

From the beginning of refueling, the air and vapor inside the fuel tank go through refueling EVAP vapor cut valve and EVAP/ORVR line to the EVAP canister. The vapor is absorbed by the EVAP canister and the air is released to the atmosphere.

When the refueling has reached the full level of the fuel tank, the refueling EVAP vapor cut valve is closed and refueling is stopped because of auto shut-off. The vapor which was absorbed by the EVAP canister is purged during driving.

WARNING:

When conducting inspections below, be sure to observe the following:

- Put a "CAUTION: FLAMMABLE" sign in workshop.
- Do not smoke while servicing fuel system. Keep open flames and sparks away from work area.
- Be sure to furnish the workshop with a CO₂ fire extinguisher.

CAUTION:

- Before removing fuel line parts, carry out the following procedures:
 - Put drained fuel in an explosion-proof container and put lid on securely.
 - Release fuel pressure from fuel line. Refer to [EC-78, "Fuel Pressure Check"](#).
 - Disconnect negative battery cable.
- Always replace O-ring when the fuel gauge retainer is removed.
- Do not kink or twist hose and tube when they are installed.
- Do not tighten hose and clamps excessively to avoid damaging hoses.
- After installation, run engine and check for fuel leaks at connection.
- Do not attempt to top off the fuel tank after the fuel pump nozzle shuts off automatically. Continued refueling may cause fuel overflow, resulting in fuel spray and possibly a fire.

Diagnosis Procedure

INFOID:000000001702568

SYMPTOM: FUEL ODOR FROM EVAP CANISTER IS STRONG.

1. CHECK EVAP CANISTER

1. Remove EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.
2. Weigh the EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.

The weight should be less than 1.9 kg (4.2 lb).

OK or NG

- OK >> GO TO 2.
- NG >> GO TO 3.

2. CHECK IF EVAP CANISTER SATURATED WITH WATER


ON BOARD REFUELING VAPOR RECOVERY (ORVR)

< SERVICE INFORMATION >

Does water drain from the EVAP canister?

Yes or No

- Yes >> GO TO 3.
- No >> GO TO 5.

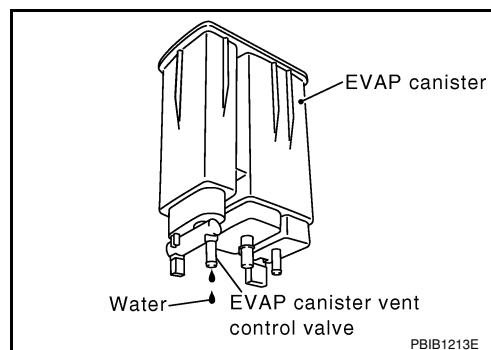

3. REPLACE EVAP CANISTER

Replace EVAP canister with a new one.

>> GO TO 4.

4. DETECT MALFUNCTIONING PART

Check the EVAP hose between EVAP canister and vehicle frame for clogging or poor connection.

>> Repair or replace EVAP hose.

5. CHECK REFUELING EVAP VAPOR CUT VALVE

Refer to [EC-40. "Component Inspection"](#).

OK or NG

- OK >> **INSPECTION END**
- NG >> Replace refueling EVAP vapor cut valve with fuel tank.

SYMPTOM: CANNOT REFUEL/FUEL ODOR FROM THE FUEL FILLER OPENING IS STRONG WHILE REFUELING.

1. CHECK EVAP CANISTER

1. Remove EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.
2. Weigh the EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.

The weight should be less than 1.9 kg (4.2 lb).

OK or NG


- OK >> GO TO 2.
- NG >> GO TO 3.

2. CHECK IF EVAP CANISTER SATURATED WITH WATER

Does water drain from the EVAP canister?

Yes or No

- Yes >> GO TO 3.
- No >> GO TO 5.

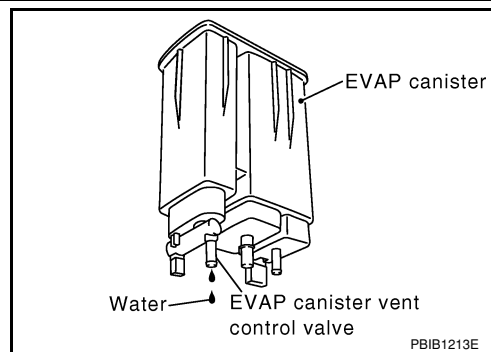

3. REPLACE EVAP CANISTER

Replace EVAP canister with a new one.

ON BOARD REFUELING VAPOR RECOVERY (ORVR)

< SERVICE INFORMATION >

>> GO TO 4.

4. DETECT MALFUNCTIONING PART

Check the EVAP hose between EVAP canister and vehicle frame for clogging or poor connection.

>> Repair or replace EVAP hose.

5. CHECK VENT HOSES AND VENT TUBES

Check hoses and tubes between EVAP canister and refueling EVAP vapor cut valve for clogging, kink, looseness and improper connection.

OK or NG

OK >> GO TO 6.

NG >> Repair or replace hoses and tubes.

6. CHECK FILLER NECK TUBE

Check recirculation line for clogging, dents and cracks.

OK or NG

OK >> GO TO 7.

NG >> Replace filler neck tube.

7. CHECK REFUELING EVAP VAPOR CUT VALVE

Refer to [EC-40. "Component Inspection"](#).

OK or NG

OK >> GO TO 8.

NG >> Replace refueling EVAP vapor cut valve with fuel tank.

8. CHECK FUEL FILLER TUBE

Check filler neck tube and hose connected to the fuel tank for clogging, dents and cracks.

OK or NG

OK >> GO TO 9.

NG >> Replace fuel filler tube.

9. CHECK ONE-WAY FUEL VALVE-I

Check one-way valve for clogging.

OK or NG

OK >> GO TO 10.

NG >> Repair or replace one-way fuel valve with fuel tank.

10. CHECK ONE-WAY FUEL VALVE-II


1. Make sure that fuel is drained from the tank.
2. Remove fuel filler tube and hose.
3. Check one-way fuel valve for operation as follows.
When a stick is inserted, the valve should open, when removing stick it should close.

Do not drop any material into the tank.

OK or NG

OK >> **INSPECTION END**

NG >> Replace fuel filler tube or replace one-way fuel valve with fuel tank.

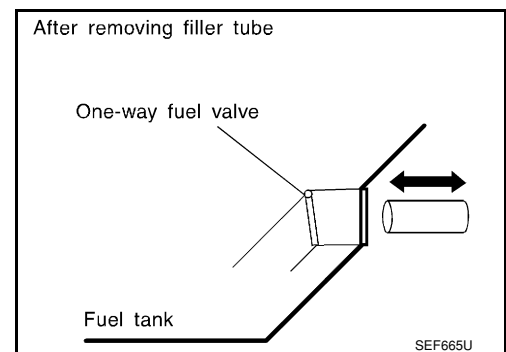

Component Inspection


REFUELING EVAP VAPOR CUT VALVE

Ⓟ With CONSULT-II

ON BOARD REFUELING VAPOR RECOVERY (ORVR)

< SERVICE INFORMATION >

1. Remove fuel tank. Refer to [FL-9](#).
2. Drain fuel from the tank as follows:
 - a. Remove fuel feed hose located on the fuel gauge retainer.
 - b. Connect a spare fuel hose, one side to fuel gauge retainer where the hose was removed and the other side to a fuel container.
 - c. Drain fuel using "FUEL PUMP RELAY" in "ACTIVE TEST" mode with CONSULT-II.
3. Check refueling EVAP vapor cut valve for being stuck to close as follows.
Blow air into the refueling EVAP vapor cut valve (from the end of EVAP/ORVR line hose), and check that the air flows freely into the tank.
4. Check refueling EVAP vapor cut valve for being stuck to open as follows.
 - a. Connect vacuum pump to hose end.
 - b. Remove fuel gauge retainer with fuel gauge unit.
Always replace O-ring with new one.
 - c. Put fuel tank upside down.
 - d. Apply vacuum pressure to hose end [-13.3 kPa (-100 mmHg, -3.94 inHg)] with fuel gauge retainer remaining open and check that the pressure is applicable.

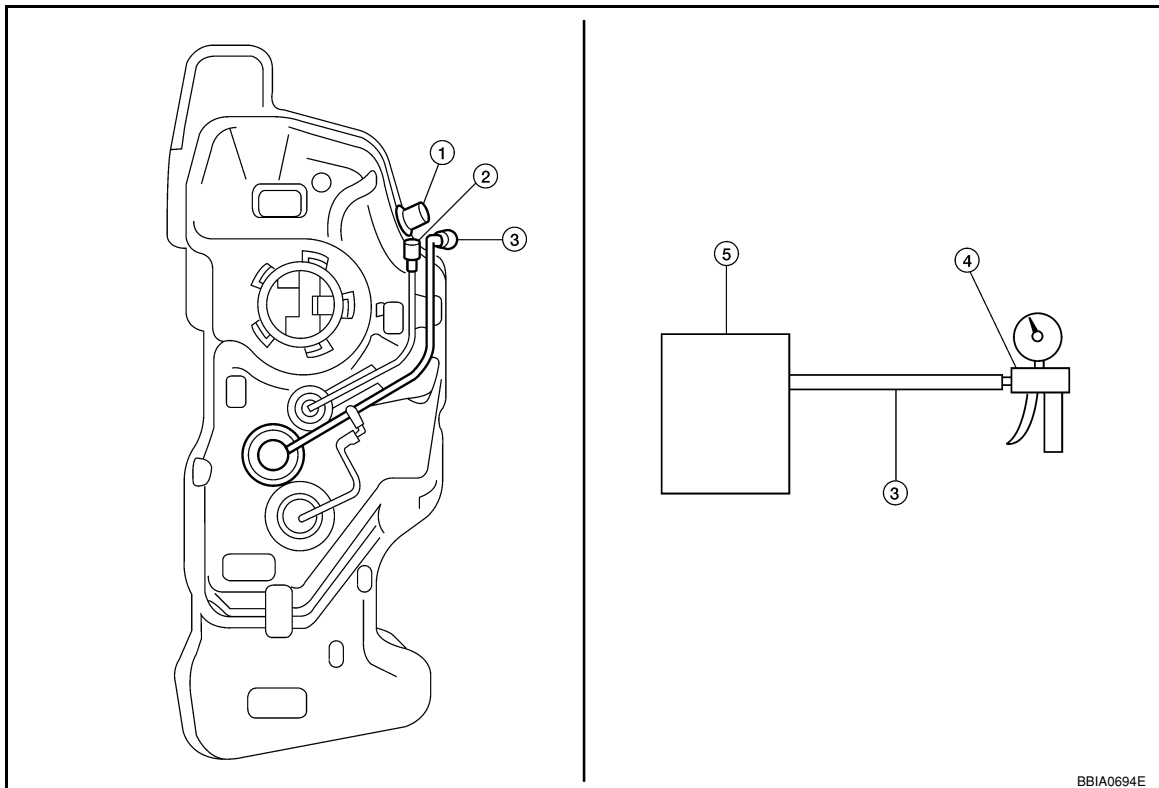

- | | | |
|-------------------------------|-----------------------|-------------------|
| 1. Filler tube | 2. Recirculation line | 3. EVAP/ORVR line |
| 4. Vacuum/pressure handy pump | 5. Fuel tank | |


⊗ Without CONSULT-II

1. Remove fuel tank. Refer to [FL-9](#).
2. Drain fuel from the tank as follows:
 - a. Remove fuel gauge retainer.
 - b. Drain fuel from the tank using a handy pump into a fuel container.
3. Check refueling EVAP vapor cut valve for being stuck to close as follows.
Blow air into the refueling EVAP vapor cut valve (from the end of EVAP/ORVR line hose), and check that the air flows freely into the tank.
4. Check refueling EVAP vapor cut valve for being stuck to open as follows.
 - a. Connect vacuum pump to hose end.

ON BOARD REFUELING VAPOR RECOVERY (ORVR)

< SERVICE INFORMATION >

- b. Remove fuel gauge retainer with fuel gauge unit.
Always replace O-ring with new one.
- c. Put fuel tank upside down.
- d. Apply vacuum pressure to hose end [-13.3 kPa (-100 mmHg, -3.94 inHg)] with fuel gauge retainer remaining open and check that the pressure is applicable.

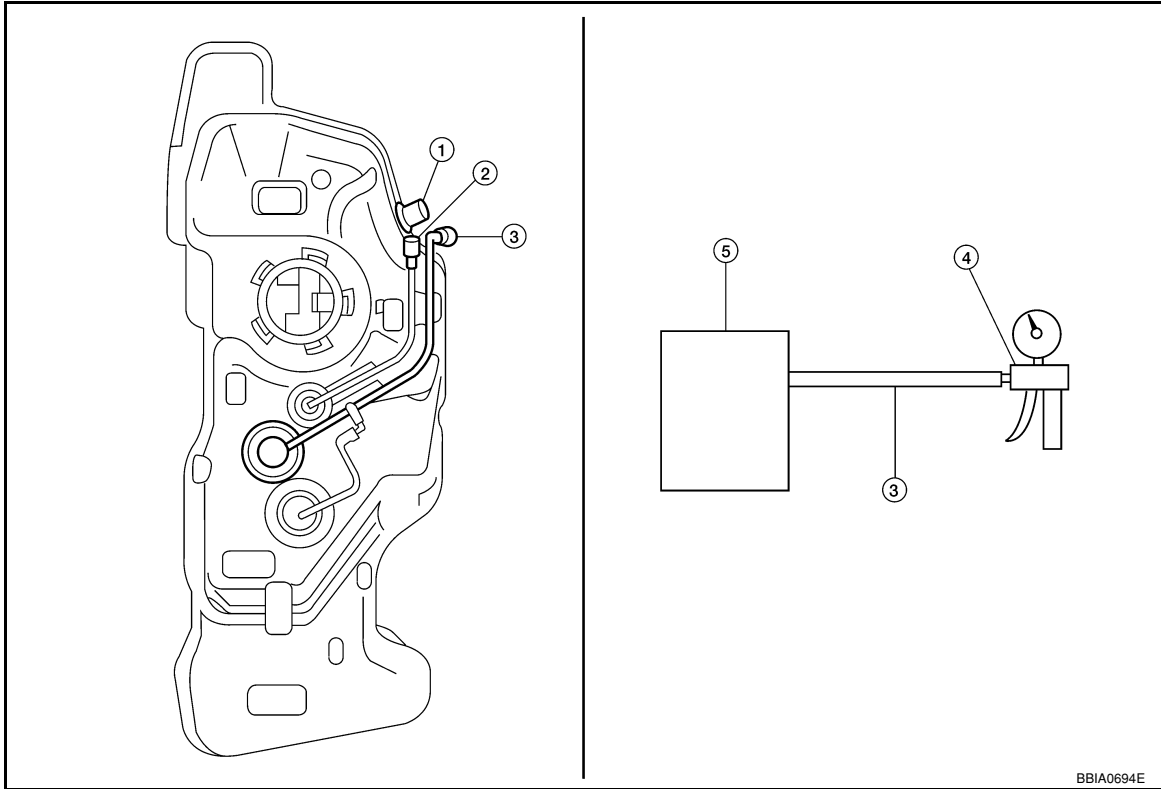

BBI A0694E

- | | | |
|-------------------------------|-----------------------|-------------------|
| 1. Filler tube | 2. Recirculation line | 3. EVAP/ORVR line |
| 4. Vacuum/pressure handy pump | 5. Fuel tank | |

POSITIVE CRANKCASE VENTILATION


< SERVICE INFORMATION >

POSITIVE CRANKCASE VENTILATION

Description

INFOID:000000001702570

SYSTEM DESCRIPTION

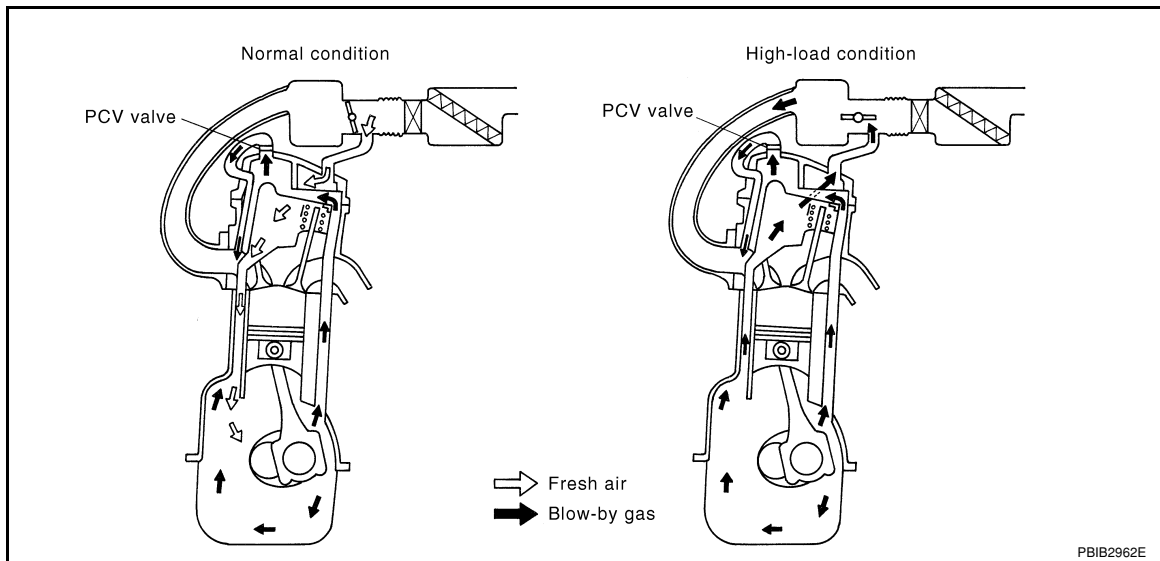


This system returns blow-by gas to the intake manifold.

The positive crankcase ventilation (PCV) valve is provided to conduct crankcase blow-by gas to the intake manifold. During partial throttle operation of the engine, the intake manifold sucks the blow-by gas through the PCV valve. Normally, the capacity of the valve is sufficient to handle any blow-by and a small amount of ventilating air. The ventilating air is then drawn from the air inlet tubes into the crankcase. In this process the air passes through the hose connecting air inlet tubes to rocker cover.

Under full-throttle condition, the manifold vacuum is insufficient to draw the blow-by flow through the valve. The flow goes through the hose connection in the reverse direction.

On vehicles with an excessively high blow-by, the valve does not meet the requirement. This is because some of the flow will go through the hose connection to the air inlet tubes under all conditions.

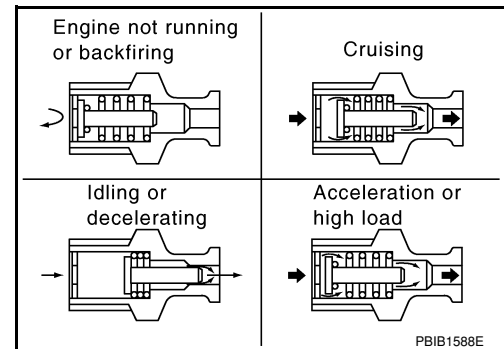


Component Inspection

INFOID:000000001702571

PCV (POSITIVE CRANKCASE VENTILATION) VALVE

With engine running at idle, remove PCV valve from rocker cover. A properly working valve makes a hissing noise as air passes through it. A strong vacuum should be felt immediately when a finger is placed over valve inlet.

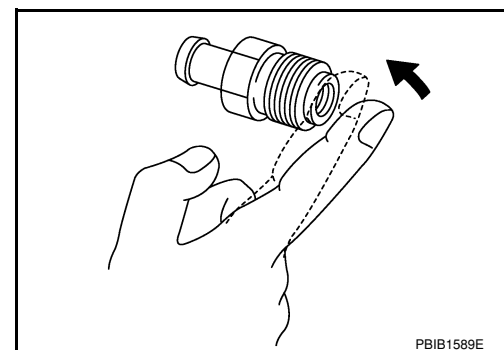


POSITIVE CRANKCASE VENTILATION

< SERVICE INFORMATION >

PCV VALVE VENTILATION HOSE

1. Check hoses and hose connections for leaks.
2. Disconnect all hoses and clean with compressed air. If any hose cannot be freed of obstructions, replace.

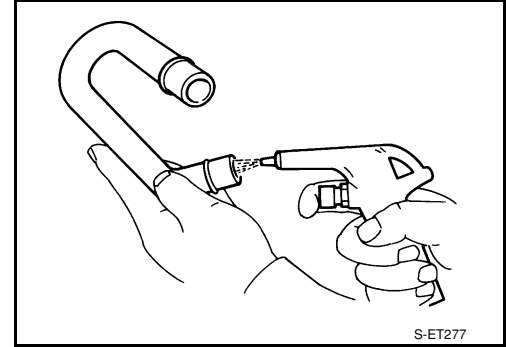

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)

< SERVICE INFORMATION >

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)

Description

INFOID:000000001702572

- If the security indicator lights up with the ignition switch in the ON position or “NATS MALFUNCTION” is displayed on “SELF-DIAG RESULTS” screen, perform self-diagnostic results mode with CONSULT-II using NATS program card. Refer to [BL-210](#).
- Confirm no self-diagnostic results of NVIS (NATS) is displayed before touching “ERASE” in “SELF-DIAG RESULTS” mode with CONSULT-II.
- When replacing ECM, initialization of NVIS (NATS) system and registration of all NVIS (NATS) ignition key IDs must be carried out with CONSULT-II using NATS program card. Therefore, be sure to receive all keys from vehicle owner. Regarding the procedures of NVIS (NATS) initialization and all NVIS (NATS) ignition key ID registration, refer to CONSULT-II Operation Manual, IVIS/NVIS.

| SELF DIAG RESULTS | |
|-----------------------------|------|
| DTC RESULTS | TIME |
| NATS MALFUNCTION [P1610] | 0 |
| | |
| | |

SEF543X

A

EC

C

D

E

F

G

H

I

J

K

L

M

N

O

P

ON BOARD DIAGNOSTIC (OBD) SYSTEM

< SERVICE INFORMATION >

ON BOARD DIAGNOSTIC (OBD) SYSTEM

Introduction

INFOID:000000001702573

The ECM has an on board diagnostic system, which detects malfunctions related to engine sensors or actuators. The ECM also records various emission-related diagnostic information including:

| Emission-related diagnostic information | Diagnostic service |
|---|---------------------------|
| Diagnostic Trouble Code (DTC) | Service \$03 of SAE J1979 |
| Freeze Frame data | Service \$02 of SAE J1979 |
| System Readiness Test (SRT) code | Service \$01 of SAE J1979 |
| 1st Trip Diagnostic Trouble Code (1st Trip DTC) | Service \$07 of SAE J1979 |
| 1st Trip Freeze Frame data | |
| Test values and Test limits | Service \$06 of SAE J1979 |
| Calibration ID | Service \$09 of SAE J1979 |

The above information can be checked using procedures listed in the table below.

×: Applicable —: Not applicable

| | DTC | 1st trip DTC | Freeze Frame data | 1st trip Freeze Frame data | SRT code | SRT status | Test value |
|------------|-----|--------------|-------------------|----------------------------|----------|------------|------------|
| CONSULT-II | × | × | × | × | × | × | — |
| GST | × | × | × | — | × | × | × |
| ECM | × | ×* | — | — | — | × | — |

*: When DTC and 1st trip DTC simultaneously appear on the display, they cannot be clearly distinguished from each other.

The malfunction indicator lamp (MIL) on the instrument panel lights up when the same malfunction is detected in two consecutive trips (Two trip detection logic), or when the ECM enters fail-safe mode.

(Refer to [EC-87, "Fail-Safe Chart"](#).)

Two Trip Detection Logic

INFOID:000000001702574

When a malfunction is detected for the first time, 1st trip DTC and 1st trip Freeze Frame data are stored in the ECM memory. The MIL will not light up at this stage. <1st trip>

If the same malfunction is detected again during the next drive, the DTC and Freeze Frame data are stored in the ECM memory, and the MIL lights up. The MIL lights up at the same time when the DTC is stored. <2nd trip> The "trip" in the "Two Trip Detection Logic" means a driving mode in which self-diagnosis is performed during vehicle operation. Specific on board diagnostic items will cause the ECM to light up or blink the MIL, and store DTC and Freeze Frame data, even in the 1st trip, as shown below.

×: Applicable —: Not applicable

| Items | MIL | | | | DTC | | 1st trip DTC | |
|--|----------|-------------|----------|-------------|---------------------|---------------------|---------------------|---------------------|
| | 1st trip | | 2nd trip | | 1st trip displaying | 2nd trip displaying | 1st trip displaying | 2nd trip displaying |
| | Blinking | Lighting up | Blinking | Lighting up | | | | |
| Misfire (Possible three way catalyst damage) — DTC: P0300 - P0304 is being detected | × | — | — | — | — | — | × | — |
| Misfire (Possible three way catalyst damage) — DTC: P0300 - P0304 is being detected | — | — | × | — | — | × | — | — |
| One trip detection diagnoses (Refer to EC-47, "Emission-related Diagnostic Information" .) | — | × | — | — | × | — | — | — |
| Except above | — | — | — | × | — | × | × | — |

When there is an open circuit on MIL circuit, the ECM cannot warn the driver by MIL lighting up when there is malfunction on engine control system.

ON BOARD DIAGNOSTIC (OBD) SYSTEM

< SERVICE INFORMATION >

Therefore, when electrical controlled throttle and part of ECM related diagnoses are continuously detected as NG for 5 trips, ECM warns the driver that engine control system malfunctions and MIL circuit is open by means of operating fail-safe function.

The fail-safe function also operates when above diagnoses except MIL circuit are detected, and demands the driver to repair the malfunction.

| | |
|--|--|
| Engine operating condition in fail-safe mode | Engine speed will not rise more than 2,500 rpm due to the fuel cut |
|--|--|

Emission-related Diagnostic Information

INFOID:000000001702575

EMISSION-RELATED DIAGNOSTIC INFORMATION ITEMS

×: Applicable —: Not applicable

| Items (CONSULT-II screen terms) | DTC*1 | | SRT code | Test value/ Test limit (GST only) | Trip | MIL lighting up | Reference page |
|---|---------------------|-------------|----------|---|-------------------------------|-------------------------------|------------------------|
| | CONSULT-II GST*2 | ECM*3 | | | | | |
| CAN COMM CIRCUIT | U1000 | 1000*4 | — | — | 1 (CVT) 1 (A/T) 2 (M/T) | × (CVT) × (A/T) — (M/T) | EC-143 |
| CAN COMM CIRCUIT | U1001 | 1001*4 | — | — | 2 | — | EC-143 |
| CONTROL UNIT(CAN) | U1010 | 1010 | — | — | 1 (CVT) 1 (A/T) 2 (M/T) | × (CVT) × (A/T) — (M/T) | EC-145 |
| NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED. | P0000 | 0000 | — | — | — | Flashing*5 | EC-60 |
| INT/V TIM CONT-B1 | P0011 | 0011 | — | — | 2 | × | EC-147 |
| A/F SEN1 HTR (B1) | P0031 | 0031 | — | × | 2 | × | EC-151 |
| A/F SEN1 HTR (B1) | P0032 | 0032 | — | × | 2 | × | EC-151 |
| HO2S2 HTR (B1) | P0037 | 0037 | — | × | 2 | × | EC-156 |
| HO2S2 HTR (B1) | P0038 | 0038 | — | × | 2 | × | EC-156 |
| INT/V TIM V/CIR-B1 | P0075 | 0075 | — | — | 2 | × | EC-162 |
| MAF SEN/CIRCUIT | P0101 | 0101 | — | — | 2 | × | EC-167 |
| MAF SEN/CIRCUIT | P0102 | 0102 | — | — | 1 | × | EC-175 |
| MAF SEN/CIRCUIT | P0103 | 0103 | — | — | 1 | × | EC-175 |
| IAT SEN/CIRCUIT | P0112 | 0112 | — | — | 2 | × | EC-182 |
| IAT SEN/CIRCUIT | P0113 | 0113 | — | — | 2 | × | EC-182 |
| ECT SEN/CIRC | P0117 | 0117 | — | — | 1 | × | EC-187 |
| ECT SEN/CIRC | P0118 | 0118 | — | — | 1 | × | EC-187 |
| TP SEN 2/CIRC | P0122 | 0122 | — | — | 1 | × | EC-192 |
| TP SEN 2/CIRC | P0123 | 0123 | — | — | 1 | × | EC-192 |
| ECT SENSOR | P0125 | 0125 | — | — | 1 | × | EC-198 |
| IAT SENSOR | P0127 | 0127 | — | — | 2 | × | EC-201 |
| THERMSTAT FNCTN | P0128 | 0128 | — | — | 2 | × | EC-204 |
| A/F SENSOR1 (B1) | P0130 | 0130 | — | × | 2 | × | EC-206 |
| A/F SENSOR1 (B1) | P0131 | 0131 | — | × | 2 | × | EC-213 |
| A/F SENSOR1 (B1) | P0132 | 0132 | — | × | 2 | × | EC-219 |
| A/F SENSOR1 (B1) | P0133 | 0133 | × | × | 2 | × | EC-225 |
| HO2S2 (B1) | P0137 | 0137 | × | × | 2 | × | EC-233 |
| HO2S2 (B1) | P0138 | 0138 | × | × | 2 | × | EC-240 |
| HO2S2 (B1) | P0139 | 0139 | × | × | 2 | × | EC-250 |

ON BOARD DIAGNOSTIC (OBD) SYSTEM

< SERVICE INFORMATION >

| Items (CONSULT-II screen terms) | DTC*1 | | SRT code | Test value/ Test limit (GST only) | Trip | MIL lighting up | Reference page |
|------------------------------------|---------------------|-------|----------|---|--------|--------------------|---|
| | CONSULT-II GST*2 | ECM*3 | | | | | |
| FUEL SYS-LEAN-B1 | P0171 | 0171 | — | — | 2 | × | EC-257 |
| FUEL SYS-RICH-B1 | P0172 | 0172 | — | — | 2 | × | EC-264 |
| FTT SENSOR | P0181 | 0181 | — | — | 2 | × | EC-270 |
| FTT SEN/CIRCUIT | P0182 | 0182 | — | — | 2 | × | EC-274 |
| FTT SEN/CIRCUIT | P0183 | 0183 | — | — | 2 | × | EC-274 |
| TP SEN 1/CIRC | P0222 | 0222 | — | — | 1 | × | EC-278 |
| TP SEN 1/CIRC | P0223 | 0223 | — | — | 1 | × | EC-278 |
| MULTI CYL MISFIRE | P0300 | 0300 | — | — | 2 | × | EC-284 |
| CYL 1 MISFIRE | P0301 | 0301 | — | — | 2 | × | EC-284 |
| CYL 2 MISFIRE | P0302 | 0302 | — | — | 2 | × | EC-284 |
| CYL 3 MISFIRE | P0303 | 0303 | — | — | 2 | × | EC-284 |
| CYL 4 MISFIRE | P0304 | 0304 | — | — | 2 | × | EC-284 |
| KNOCK SEN/CIRC-B1 | P0327 | 0327 | — | — | 2 | — | EC-291 |
| KNOCK SEN/CIRC-B1 | P0328 | 0328 | — | — | 2 | — | EC-291 |
| CKP SEN/CIRCUIT | P0335 | 0335 | — | — | 2 | × | EC-295 |
| CMP SEN/CIRC-B1 | P0340 | 0340 | — | — | 2 | × | EC-302 |
| TW CATALYST SYS-B1 | P0420 | 0420 | × | × | 2 | × | EC-308 |
| EVAP PURG FLOW/MON | P0441 | 0441 | × | × | 2 | × | EC-313 |
| EVAP SMALL LEAK | P0442 | 0442 | × | × | 2 | × | EC-318 |
| PURG VOLUME CONT/V | P0443 | 0443 | — | — | 2 | × | EC-325 |
| PURG VOLUME CONT/V | P0444 | 0444 | — | — | 2 | × | EC-332 |
| PURG VOLUME CONT/V | P0445 | 0445 | — | — | 2 | × | EC-332 |
| VENT CONTROL VALVE | P0447 | 0447 | — | — | 2 | × | EC-338 |
| VENT CONTROL VALVE | P0448 | 0448 | — | — | 2 | × | EC-345 |
| EVAP SYS PRES SEN | P0451 | 0451 | — | — | 2 | × | EC-351 |
| EVAP SYS PRES SEN | P0452 | 0452 | — | — | 2 | × | EC-355 |
| EVAP SYS PRES SEN | P0453 | 0453 | — | — | 2 | × | EC-362 |
| EVAP GROSS LEAK | P0455 | 0455 | — | — | 2 | × | EC-370 |
| EVAP VERY SML LEAK | P0456 | 0456 | ×*6 | × | 2 | × | EC-377 |
| FUEL LEV SEN SLOSH | P0460 | 0460 | — | — | 2 | × | EC-385 |
| FUEL LEVEL SENSOR | P0461 | 0461 | — | — | 2 | × | EC-387 |
| FUEL LEVL SEN/CIRC | P0462 | 0462 | — | — | 2 | × | EC-389 |
| FUEL LEVL SEN/CIRC | P0463 | 0463 | — | — | 2 | × | EC-389 |
| VEH SPEED SEN/CIRC*7 | P0500 | 0500 | — | — | 2 | × | EC-391 |
| ISC SYSTEM | P0506 | 0506 | — | — | 2 | × | EC-393 |
| ISC SYSTEM | P0507 | 0507 | — | — | 2 | × | EC-395 |
| ECM | P0605 | 0605 | — | — | 1 or 2 | — or × | EC-397 |
| SENSOR POWER/CIRC | P0643 | 0643 | — | — | 1 | × | EC-400 |
| PNP SW/CIRC | P0705 | 0705 | — | — | 2 | × | AT-86 (A/T), CVT-65 (CVT) |
| ATF TEMP SEN/CIRC | P0710 | 0710 | — | — | 2 | × | AT-91 (A/T), CVT-71 (CVT) |
| INPUT SPD SEN/CIRC | P0715 | 0715 | — | — | 2 | × | CVT-76 |

ON BOARD DIAGNOSTIC (OBD) SYSTEM

< SERVICE INFORMATION >

| Items (CONSULT-II screen terms) | DTC*1 | | SRT code | Test value/ Test limit (GST only) | Trip | MIL lighting up | Reference page |
|------------------------------------|---------------------|-------------|----------|---|------|--------------------|---|
| | CONSULT-II GST*2 | ECM*3 | | | | | |
| VEH SPD SEN/CIR AT*7 | P0720 | 0720 | — | — | 2 | × | AT-96 (A/T), CVT-80 (CVT) |
| ENGINE SPEED SIG | P0725 | 0725 | — | — | 2 | × | AT-101 |
| A/T 1ST GR FNCTN | P0731 | 0731 | — | — | 2 | × | AT-105 |
| A/T 2ND GR FNCTN | P0732 | 0732 | — | — | 2 | × | AT-108 |
| A/T 3RD GR FNCTN | P0733 | 0733 | — | — | 2 | × | AT-111 |
| A/T 4TH GR FNCTN | P0734 | 0734 | — | — | 2 | × | AT-114 |
| TCC SOLENOID/CIRC | P0740 | 0740 | — | — | 2 | × | AT-119 |
| A/T TCC S/V FNCTN | P0744 | 0744 | — | — | 2 | × | AT-124 (A/T), CVT-93 (CVT) |
| L/PRESS SOL/CIRC | P0745 | 0745 | — | — | 2 | × | AT-129 |
| PRS CNT SOL/A FCTN | P0746 | 0746 | — | — | 1 | × | CVT-100 |
| SFT SOL A/CIRC | P0750 | 0750 | — | — | 1 | × | AT-134 |
| SFT SOL B/CIRC | P0755 | 0755 | — | — | 1 | × | AT-139 |
| PRS CNT SOL/B FCTN | P0776 | 0776 | — | — | 2 | × | CVT-102 |
| PRS CNT SOL/B CIRC | P0778 | 0778 | — | — | 2 | × | CVT-104 |
| TR PRS SENS/A CIRC | P0840 | 0840 | — | — | 2 | × | CVT-109 |
| TR PRS SENS/B CIRC | P0845 | 0845 | — | — | 2 | × | CVT-115 |
| P-N POS SW/CIRCUIT | P0850 | 0850 | — | — | 2 | × | EC-405 |
| CLOSED LOOP-B1 | P1148 | 1148 | — | — | 1 | × | EC-411 |
| ENG OVER TEMP | P1217 | 1217 | — | — | 1 | × | EC-412 |
| CTP LEARNING | P1225 | 1225 | — | — | 2 | — | EC-426 |
| CTP LEARNING | P1226 | 1226 | — | — | 2 | — | EC-428 |
| COLD START CONTROL | P1421 | 1421 | — | — | 2 | × | EC-430 |
| ASCD SW | P1564 | 1564 | — | — | 1 | — | EC-432 |
| ASCD BRAKE SW | P1572 | 1572 | — | — | 1 | — | EC-438 |
| ASCD VHL SPD SEN | P1574 | 1574 | — | — | 1 | — | EC-447 |
| NATS MALFUNCTION | P1610 - P1615 | 1610 - 1615 | — | — | 2 | — | BL-210 |
| TP SEN/CIRC A/T | P1705 | 1705 | — | — | 1 | × | CVT-125 |
| IN PULY SPEED | P1715 | 1715 | — | — | 2 | — | EC-449 (A/T), EC-450 (CVT) |
| LU-SLCT SOL/CIRC | P1740 | 1740 | — | — | 2 | × | CVT-132 |
| O/R CLTCH SOL/CIRC | P1760 | 1760 | — | — | 2 | × | AT-144 |
| STEP MOTR CIRC | P1777 | 1777 | — | — | 1 | × | CVT-137 |
| STEP MOTR FNC | P1778 | 1778 | — | — | 2 | × | CVT-141 |
| BRAKE SW/CIRCUIT | P1805 | 1805 | — | — | 2 | — | EC-452 |
| ETC MOT PWR | P2100 | 2100 | — | — | 1 | × | EC-456 |
| ETC FUNCTION/CIRC | P2101 | 2101 | — | — | 1 | × | EC-461 |
| ETC MOT PWR | P2103 | 2103 | — | — | 1 | × | EC-456 |
| ETC MOT | P2118 | 2118 | — | — | 1 | × | EC-467 |
| ETC ACTR | P2119 | 2119 | — | — | 1 | × | EC-472 |
| APP SEN 1/CIRC | P2122 | 2122 | — | — | 1 | × | EC-474 |
| APP SEN 1/CIRC | P2123 | 2123 | — | — | 1 | × | EC-474 |

ON BOARD DIAGNOSTIC (OBD) SYSTEM

< SERVICE INFORMATION >

| Items (CONSULT-II screen terms) | DTC*1 | | SRT code | Test value/ Test limit (GST only) | Trip | MIL lighting up | Reference page |
|------------------------------------|---------------------|-------|----------|---|------|--------------------|------------------------|
| | CONSULT-II GST*2 | ECM*3 | | | | | |
| APP SEN 2/CIRC | P2127 | 2127 | — | — | 1 | × | EC-480 |
| APP SEN 2/CIRC | P2128 | 2128 | — | — | 1 | × | EC-480 |
| TP SENSOR | P2135 | 2135 | — | — | 1 | × | EC-487 |
| APP SENSOR | P2138 | 2138 | — | — | 1 | × | EC-493 |
| A/F SENSOR1 (B1) | P2A00 | 2A00 | — | × | 2 | × | EC-500 |

*1: 1st trip DTC No. is the same as DTC No.

*2: This number is prescribed by SAE J2012.

*3: In Diagnostic Test Mode II (Self-diagnostic results), this number is controlled by NISSAN.

*4: The troubleshooting for this DTC needs CONSULT-II.

*5: When the ECM in the mode of displaying SRT status, MIL may flash. For the details, refer to "How to Display SRT Status".

*6: SRT code will not be set if the self-diagnostic result is NG.

*7: When the fail-safe operations for both self-diagnoses occur, the MIL illuminates.

DTC AND 1ST TRIP DTC

The 1st trip DTC (whose number is the same as the DTC number) is displayed for the latest self-diagnostic result obtained. If the ECM memory was cleared previously, and the 1st trip DTC did not reoccur, the 1st trip DTC will not be displayed.

If a malfunction is detected during the 1st trip, the 1st trip DTC is stored in the ECM memory. The MIL will not light up (two trip detection logic). If the same malfunction is not detected in the 2nd trip (meeting the required driving pattern), the 1st trip DTC is cleared from the ECM memory. If the same malfunction is detected in the 2nd trip, both the 1st trip DTC and DTC are stored in the ECM memory and the MIL lights up. In other words, the DTC is stored in the ECM memory and the MIL lights up when the same malfunction occurs in two consecutive trips. If a 1st trip DTC is stored and a non-diagnostic operation is performed between the 1st and 2nd trips, only the 1st trip DTC will continue to be stored. For malfunctions that blink or light up the MIL during the 1st trip, the DTC and 1st trip DTC are stored in the ECM memory.

Procedures for clearing the DTC and the 1st trip DTC from the ECM memory are described in "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION".

For malfunctions in which 1st trip DTCs are displayed, refer to "EMISSION-RELATED DIAGNOSTIC INFORMATION ITEMS". These items are required by legal regulations to continuously monitor the system/component. In addition, the items monitored non-continuously are also displayed on CONSULT-II.

1st trip DTC is specified in Service \$07 of SAE J1979. 1st trip DTC detection occurs without lighting up the MIL and therefore does not warn the driver of a malfunction. However, 1st trip DTC detection will not prevent the vehicle from being tested, for example during Inspection/Maintenance (I/M) tests.

When a 1st trip DTC is detected, check, print out or write down and erase (1st trip) DTC and Freeze Frame data as specified in Work Flow procedure Step 2, refer to [EC-81. "Trouble Diagnosis Introduction"](#). Then perform DTC Confirmation Procedure or Overall Function Check to try to duplicate the malfunction. If the malfunction is duplicated, the item requires repair.

How to Read DTC and 1st Trip DTC

DTC and 1st trip DTC can be read by the following methods.

WITH CONSULT-II

WITH GST

CONSULT-II or GST (Generic Scan Tool) Examples: P0340, P0850, P1148, etc.

These DTCs are prescribed by SAE J2012.

(CONSULT-II also displays the malfunctioning component or system.)

NO TOOLS

The number of blinks of the MIL in the Diagnostic Test Mode II (Self-Diagnostic Results) indicates the DTC. Example: 0340, 0850, 1148, etc.

These DTCs are controlled by NISSAN.

- **1st trip DTC No. is the same as DTC No.**

- **Output of a DTC indicates a malfunction. However, GST or the Diagnostic Test Mode II do not indicate whether the malfunction is still occurring or has occurred in the past and has returned to normal. CONSULT-II can identify malfunction status as shown below. Therefore, using CONSULT-II (if available) is recommended.**

ON BOARD DIAGNOSTIC (OBD) SYSTEM

< SERVICE INFORMATION >

A sample of CONSULT-II display for DTC and 1st trip DTC is shown below. DTC or 1st trip DTC of a malfunction is displayed in SELF-DIAGNOSTIC RESULTS mode of CONSULT-II. Time data indicates how many times the vehicle was driven after the last detection of a DTC.

If the DTC is being detected currently, the time data will be [0].

If a 1st trip DTC is stored in the ECM, the time data will be [1t].

| | | | | | |
|-------------|-------------------------|------|----------------------|-------------------------|------|
| DTC display | SELF DIAG RESULTS | | 1st trip DTC display | SELF DIAG RESULTS | |
| | DTC RESULTS | TIME | | DTC RESULTS | TIME |
| | CKP SEN/CIRCUIT [P0335] | 0 | | CKP SEN/CIRCUIT [P0335] | 1t |
| | | | | | |
| | | | | | |

PBIB0911E

FREEZE FRAME DATA AND 1ST TRIP FREEZE FRAME DATA

The ECM records the driving conditions such as fuel system status, calculated load value, engine coolant temperature, short term fuel trim, long term fuel trim, engine speed, vehicle speed, absolute throttle position, base fuel schedule and intake air temperature at the moment a malfunction is detected.

Data which are stored in the ECM memory, along with the 1st trip DTC, are called 1st trip freeze frame data. The data, stored together with the DTC data, are called freeze frame data and displayed on CONSULT-II or GST. The 1st trip freeze frame data can only be displayed on the CONSULT-II screen, not on the GST. For details, see [EC-109. "CONSULT-II Function \(ENGINE\)".](#)

Only one set of freeze frame data (either 1st trip freeze frame data or freeze frame data) can be stored in the ECM. 1st trip freeze frame data is stored in the ECM memory along with the 1st trip DTC. There is no priority for 1st trip freeze frame data and it is updated each time a different 1st trip DTC is detected. However, once freeze frame data (2nd trip detection/MIL on) is stored in the ECM memory, 1st trip freeze frame data is no longer stored. Remember, only one set of freeze frame data can be stored in the ECM. The ECM has the following priorities to update the data.

| Priority | Items | |
|----------|----------------------------|--|
| 1 | Freeze frame data | Misfire — DTC: P0300 - P0304 Fuel Injection System Function — DTC: P0171, P0172 |
| 2 | | Except the above items (Includes A/T or CVT related items) |
| 3 | 1st trip freeze frame data | |

For example, the EGR malfunction (Priority: 2) was detected and the freeze frame data was stored in the 2nd trip. After that when the misfire (Priority: 1) is detected in another trip, the freeze frame data will be updated from the EGR malfunction to the misfire. The 1st trip freeze frame data is updated each time a different malfunction is detected. There is no priority for 1st trip freeze frame data. However, once freeze frame data is stored in the ECM memory, 1st trip freeze data is no longer stored (because only one freeze frame data or 1st trip freeze frame data can be stored in the ECM). If freeze frame data is stored in the ECM memory and freeze frame data with the same priority occurs later, the first (original) freeze frame data remains unchanged in the ECM memory.

Both 1st trip freeze frame data and freeze frame data (along with the DTCs) are cleared when the ECM memory is erased. Procedures for clearing the ECM memory are described in "EMISSION-RELATED DIAGNOSTIC INFORMATION ITEMS".

SYSTEM READINESS TEST (SRT) CODE

System Readiness Test (SRT) code is specified in Service \$01 of SAE J1979.

As part of an enhanced emissions test for Inspection & Maintenance (I/M), certain states require the status of SRT be used to indicate whether the ECM has completed self-diagnosis of major emission systems and components. Completion must be verified in order for the emissions inspection to proceed.

If a vehicle is rejected for a State emissions inspection due to one or more SRT items indicating "INCMP", use the information in this Service Manual to set the SRT to "CMPLT".

In most cases the ECM will automatically complete its self-diagnosis cycle during normal usage, and the SRT status will indicate "CMPLT" for each application system. Once set as "CMPLT", the SRT status remains "CMPLT" until the self-diagnosis memory is erased.

Occasionally, certain portions of the self-diagnostic test may not be completed as a result of the customer's normal driving pattern; the SRT will indicate "INCMP" for these items.

ON BOARD DIAGNOSTIC (OBD) SYSTEM

< SERVICE INFORMATION >

NOTE:

The SRT will also indicate "INCMP" if the self-diagnosis memory is erased for any reason or if the ECM memory power supply is interrupted for several hours.

If, during the state emissions inspection, the SRT indicates "CMPLT" for all test items, the inspector will continue with the emissions test. However, if the SRT indicates "INCMP" for one or more of the SRT items the vehicle is returned to the customer untested.

NOTE:

If MIL is ON during the state emissions inspection, the vehicle is also returned to the customer untested even though the SRT indicates "CMPLT" for all test items. Therefore, it is important to check SRT ("CMPLT") and DTC (No DTCs) before the inspection.

SRT Item

The table below shows required self-diagnostic items to set the SRT to "CMPLT".

| SRT item (CONSULT-II indication) | Performance Priority* | Required self-diagnostic items to set the SRT to "CMPLT" | Corresponding DTC No. |
|-------------------------------------|--------------------------|--|-----------------------|
| CATALYST | 2 | Three way catalyst function | P0420 |
| EVAP SYSTEM | 2 | EVAP control system purge flow monitoring | P0441 |
| | 1 | EVAP control system | P0442 |
| | 2 | EVAP control system | P0456 |
| HO2S | 2 | Air fuel ratio (A/F) sensor 1 | P0133 |
| | | Heated oxygen sensor 2 | P0137 |
| | | Heated oxygen sensor 2 | P0138 |
| | | Heated oxygen sensor 2 | P0139 |

*: If completion of several SRTs is required, perform driving patterns (DTC confirmation procedure), one by one based on the priority for models with CONSULT-II.

SRT Set Timing

SRT is set as "CMPLT" after self-diagnosis has been performed one or more times. Completion of SRT is done regardless of whether the result is OK or NG. The set timing is different between OK and NG results and is shown in the table below.

| Self-diagnosis result | | Example | | | | | | | |
|-----------------------|--------|----------------|----------------|---------|---------|---------|--------------|---------|--------------|
| | | Diagnosis | Ignition cycle | | | | | | |
| | | | ← ON → | OFF | ← ON → | OFF | ← ON → | OFF | ← ON → |
| All OK | Case 1 | P0400 | OK (1) | — (1) | OK (2) | — (2) | OK (2) | — (2) | OK (2) |
| | | P0402 | OK (1) | — (1) | — (1) | — (1) | OK (2) | — (2) | OK (2) |
| | | P1402 | OK (1) | OK (2) | — (2) | — (2) | OK (2) | — (2) | OK (2) |
| | | SRT of EGR | "CMPLT" | "CMPLT" | "CMPLT" | "CMPLT" | "CMPLT" | "CMPLT" | "CMPLT" |
| | Case 2 | P0400 | OK (1) | — (1) | — (1) | — (1) | OK (2) | — (2) | OK (2) |
| | | P0402 | — (0) | — (0) | OK (1) | — (1) | OK (2) | — (2) | OK (2) |
| | | P1402 | OK (1) | OK (2) | — (2) | — (2) | OK (2) | — (2) | OK (2) |
| | | SRT of EGR | "INCMP" | "INCMP" | "CMPLT" | "CMPLT" | "CMPLT" | "CMPLT" | "CMPLT" |
| NG exists | Case 3 | P0400 | OK | OK | — | — | OK (2) | — (2) | OK (2) |
| | | P0402 | — | — | — | — | OK (2) | — (2) | OK (2) |
| | | P1402 | NG | — | — | — | OK (2) | — (2) | OK (2) |
| | | (1st trip) DTC | 1st trip DTC | — | — | — | 1st trip DTC | — (2) | 1st trip DTC |
| | | SRT of EGR | "INCMP" | "INCMP" | "INCMP" | "INCMP" | "CMPLT" | "CMPLT" | "CMPLT" |

OK: Self-diagnosis is carried out and the result is OK.

NG: Self-diagnosis is carried out and the result is NG.

ON BOARD DIAGNOSTIC (OBD) SYSTEM

< SERVICE INFORMATION >

—: Self-diagnosis is not carried out.

When all SRT related self-diagnoses showed OK results in a single cycle (Ignition OFF-ON-OFF), the SRT will indicate “CMPLT”. → Case 1 above

When all SRT related self-diagnoses showed OK results through several different cycles, the SRT will indicate “CMPLT” at the time the respective self-diagnoses have at least one OK result. → Case 2 above

If one or more SRT related self-diagnoses showed NG results in 2 consecutive cycles, the SRT will also indicate “CMPLT”. → Case 3 above

The table above shows that the minimum number of cycles for setting SRT as “INCMP” is one (1) for each self-diagnosis (Case 1 & 2) or two (2) for one of self-diagnoses (Case 3). However, in preparation for the state emissions inspection, it is unnecessary for each self-diagnosis to be executed twice (Case 3) for the following reasons:

- The SRT will indicate “CMPLT” at the time the respective self-diagnoses have one (1) OK result.
- The emissions inspection requires “CMPLT” of the SRT only with OK self-diagnosis results.
- When, during SRT driving pattern, 1st trip DTC (NG) is detected prior to “CMPLT” of SRT, the self-diagnosis memory must be erased from ECM after repair.
- If the 1st trip DTC is erased, all the SRT will indicate “INCMP”.

NOTE:

SRT can be set as “CMPLT” together with the DTC(s). Therefore, DTC check must always be carried out prior to the state emission inspection even though the SRT indicates “CMPLT”.


SRT Service Procedure

If a vehicle has failed the state emissions inspection due to one or more SRT items indicating “INCMP”, review the flowchart diagnostic sequence on the next page.

A
EC
C
D
E
F
G
H
I
J
K
L
M
N
O
P

ON BOARD DIAGNOSTIC (OBD) SYSTEM

< SERVICE INFORMATION >

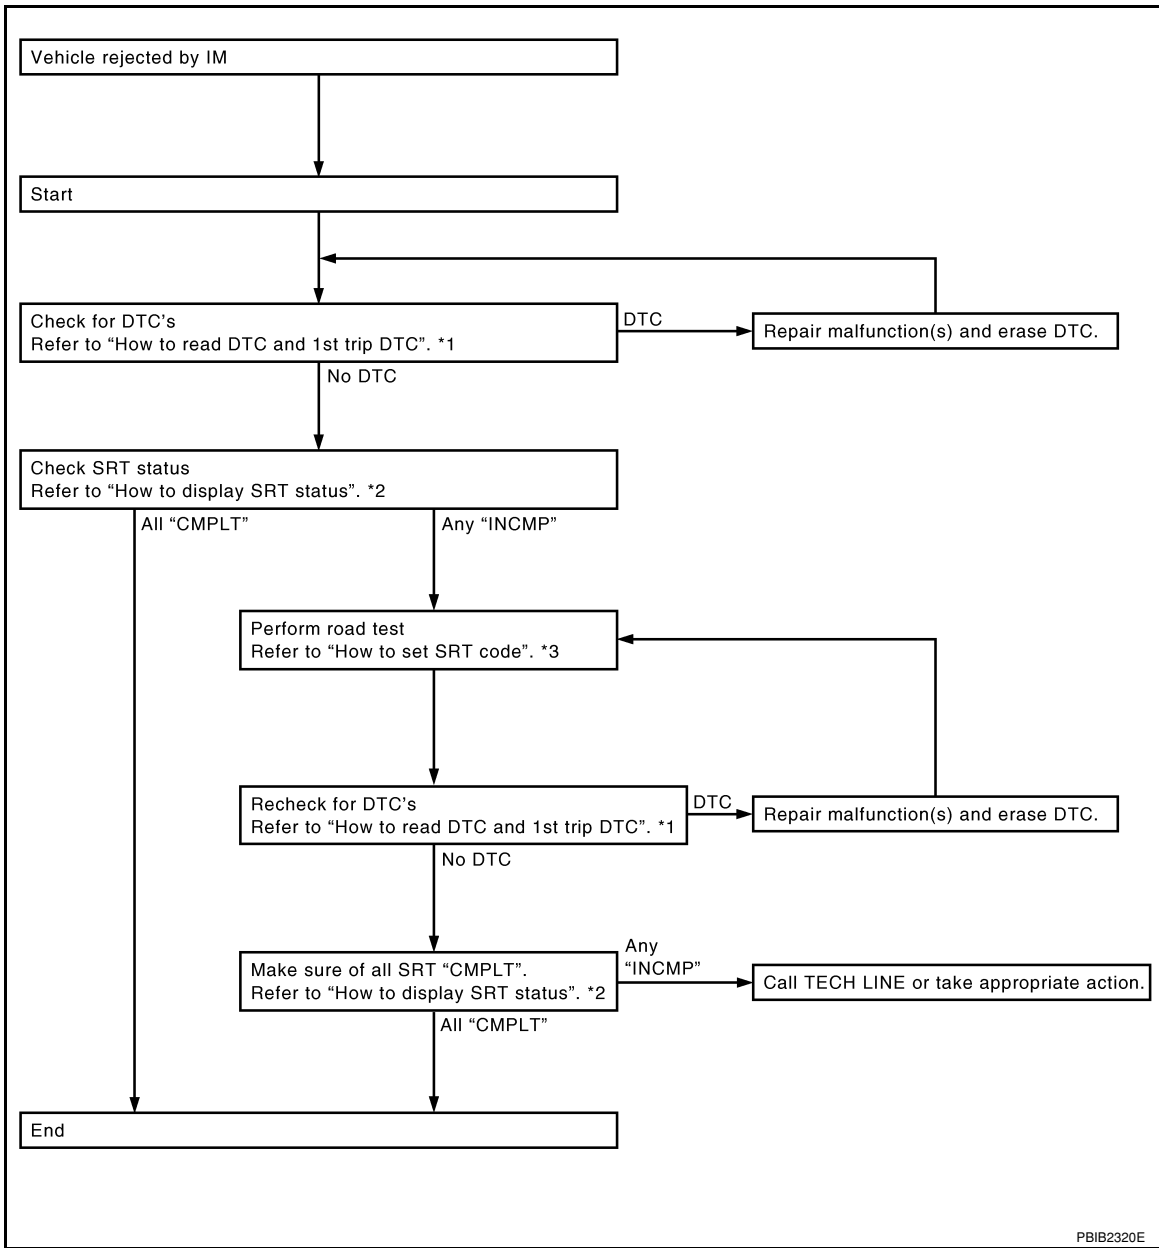

PBIB2320E

*1 "How to Read DTC and 1st Trip DTC" *2 "How to Display SRT Status"

*3 "How to Set SRT Code"

How to Display SRT Status

WITH CONSULT-II

Selecting "SRT STATUS" in "DTC CONFIRMATION" mode with CONSULT-II.

For items whose SRT codes are set, a "CMPLT" is displayed on the CONSULT-II screen; for items whose SRT codes are not set, "INCMP" is displayed.

A sample of CONSULT-II display for SRT code is shown at right.

"INCMP" means the self-diagnosis is incomplete and SRT is not set.

"CMPLT" means the self-diagnosis is complete and SRT is set.

NOTE:

Though displayed on the CONSULT-II screen, "HO2S HTR" is not SRT item.

WITH GST

Selecting Service \$01 with GST (Generic Scan Tool)

NO TOOLS

| SRT STATUS | |
|-------------|-------|
| CATALYST | CMPLT |
| EVAP SYSTEM | INCMP |
| HO2S HTR | CMPLT |
| HO2S | CMPLT |


SEF949Z

ON BOARD DIAGNOSTIC (OBD) SYSTEM

< SERVICE INFORMATION >

A SRT code itself can not be displayed while only SRT status can be.

1. Turn ignition switch ON and wait 20 seconds.
2. SRT status is indicated as shown below.
 - When all SRT codes are set, MIL lights up continuously.
 - When any SRT codes are not set, MIL will flash periodically for 10 seconds.

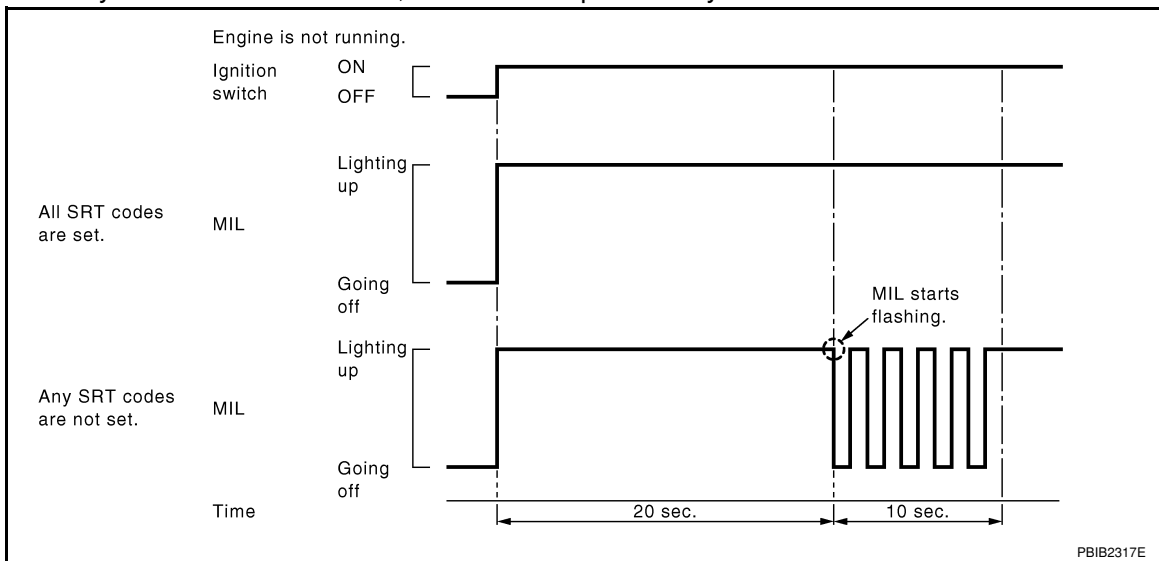

How to Set SRT Code

To set all SRT codes, self-diagnosis for the items indicated above must be performed one or more times. Each diagnosis may require a long period of actual driving under various conditions.

WITH CONSULT-II

Perform corresponding DTC Confirmation Procedure one by one based on Performance Priority in the table on "SRT Item".

WITHOUT CONSULT-II


The most efficient driving pattern in which SRT codes can be properly set is explained on the next page. The driving pattern should be performed one or more times to set all SRT codes.

ON BOARD DIAGNOSTIC (OBD) SYSTEM

< SERVICE INFORMATION >

Driving Pattern

Note: Always drive vehicle in safe manner according to traffic conditions and obey all traffic laws. Refer to next page for more information and explanation of chart.

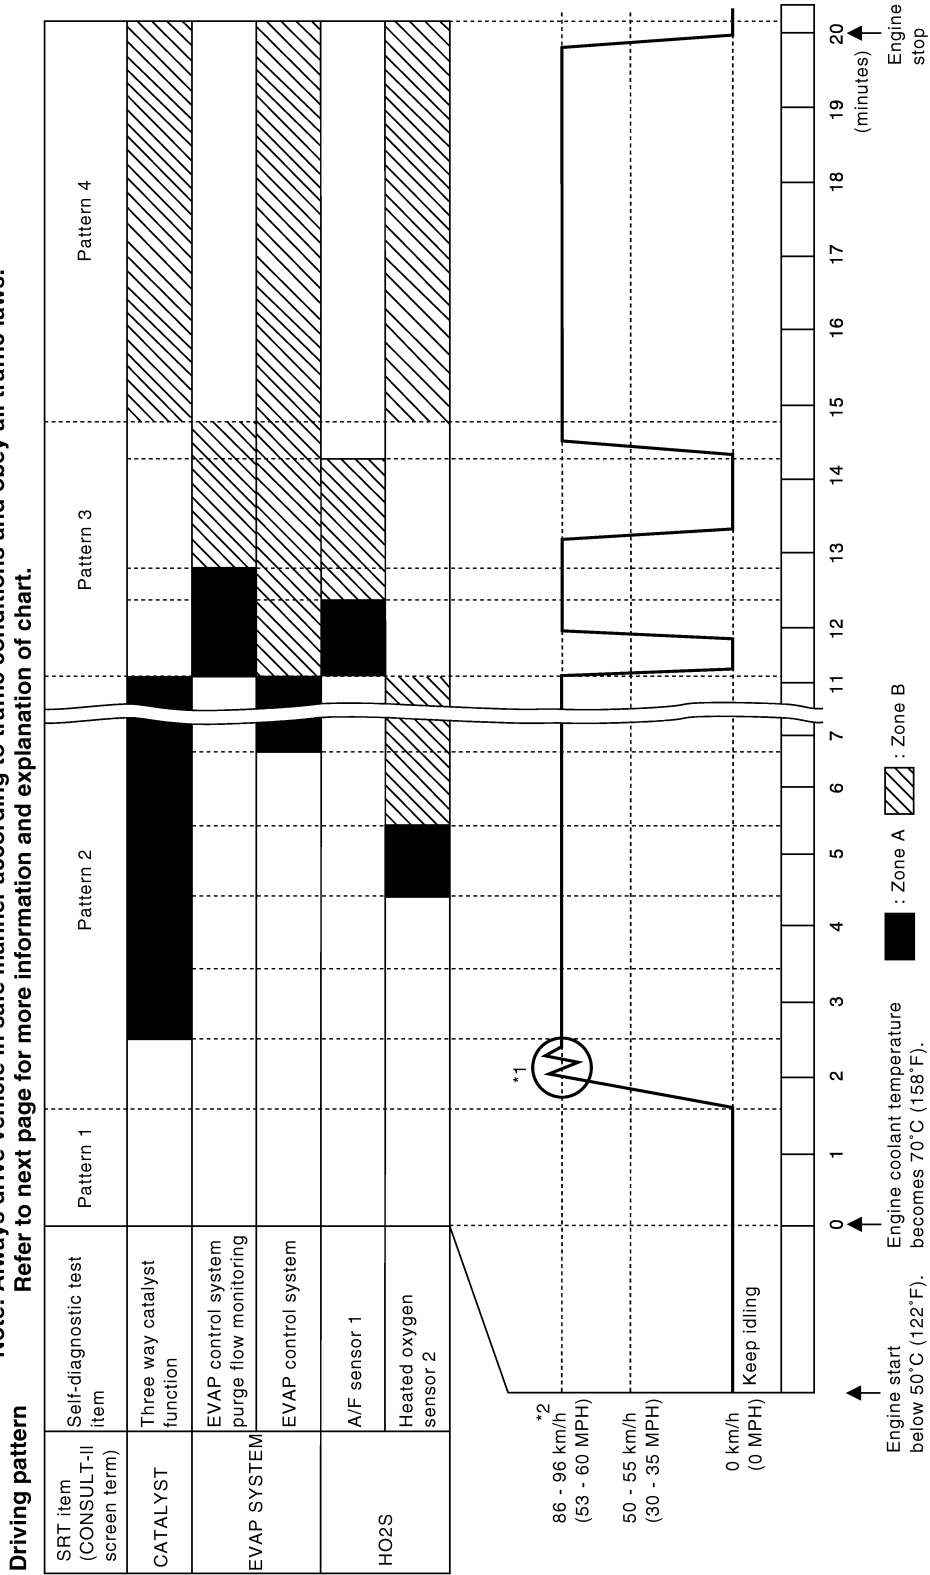

PBIB2906E

- The time required for each diagnosis varies with road surface conditions, weather, altitude, individual driving habits, etc.
- Zone A refers to the range where the time, required for the diagnosis under normal conditions*, is the shortest.
- Zone B refers to the range where the diagnosis can still be performed if the diagnosis is not completed within zone A.

*: Normal conditions refer to the following:

ON BOARD DIAGNOSTIC (OBD) SYSTEM

< SERVICE INFORMATION >

- Sea level
- Flat road
- Ambient air temperature: 20 - 30°C (68 - 86°F)
- Diagnosis is performed as quickly as possible under normal conditions.
Under different conditions [For example: ambient air temperature other than 20 - 30°C (68 - 86°F)], diagnosis may also be performed.

Pattern 1:

- **The engine is started at the engine coolant temperature of -10 to 35°C (14 to 95°F) (where the voltage between the ECM terminal 38 and ground is 3.0 - 4.3V).**
- **The engine must be operated at idle speed until the engine coolant temperature is greater than 70°C (158°F) (where the voltage between the ECM terminal 38 and ground is lower than 1.4V).**
- **The engine is started at the fuel tank temperature of warmer than 0°C (32°F) (where the voltage between the ECM terminal 43 and ground is less than 4.1V).**

Pattern 2:

- When steady-state driving is performed again even after it is interrupted, each diagnosis can be conducted. In this case, the time required for diagnosis may be extended.

Pattern 3:


- Operate vehicle following the driving pattern shown in the figure.
- Release the accelerator pedal during decelerating vehicle speed from 90 km/h (56 MPH) to 0 km/h (0 MPH).

Pattern 4:

- The accelerator pedal must be held very steady during steady-state driving.
- If the accelerator pedal is moved, the test must be conducted all over again.

*1: Depress the accelerator pedal until vehicle speed is 90 km/h (56 MPH), then release the accelerator pedal and keep it released for more than 10 seconds. Depress the accelerator pedal until vehicle speed is 90 km/h (56 MPH) again.

*2: Checking the vehicle speed with GST is advised.

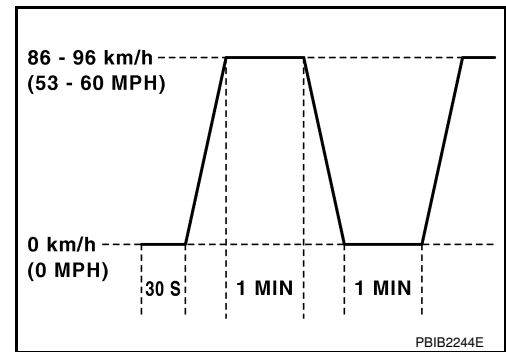

Suggested Transmission Gear Position for A/T and CVT Models

Set the selector lever in the D position (CVT), D position with the overdrive switch turned ON (A/T).

Suggested upshift speeds for M/T models

Shown below are suggested vehicle speeds for shifting into a higher gear. These suggestions relate to fuel economy and vehicle performance. Actual upshift speeds will vary according to road conditions, the weather and individual driving habits.

| | For normal acceleration in low altitude areas [less than 1,219 m (4,000 ft)]: | For quick acceleration in low altitude areas | For high altitude areas [over 1,219m (4,000 ft)]: |
|-------------|--|--|--|
| Gear change | ACCEL shift point km/h (MPH) | km/h (MPH) | km/h (MPH) |
| 1st to 2nd | 13 (8) | 24 (15) | 24 (15) |
| 2nd to 3rd | 27 (17) | 40 (25) | 40 (25) |
| 3rd to 4th | 40 (25) | 53 (33) | 65 (40) |
| 4th to 5th | 58 (36) | 71 (44) | 73 (45) |
| 5th to 6th | 82 (51) | 82 (51) | 82 (51) |

Suggested Maximum Speed in Each Gear

Downshift to a lower gear if the engine is not running smoothly, or if you need to accelerate.

Do not exceed the maximum suggested speed (shown below) in any gear. For level road driving, use the highest gear suggested for that speed. Always observe posted speed limits and drive according to the road conditions to ensure safe operation. Do not over-rev the engine when shifting to a lower gear as it may cause engine damage or loss of vehicle control.

ON BOARD DIAGNOSTIC (OBD) SYSTEM

< SERVICE INFORMATION >

| Gear | km/h (MPH) |
|------|------------|
| 1st | 50 (30) |
| 2nd | 90 (55) |
| 3rd | — |
| 4th | — |
| 5th | — |
| 6th | — |

TEST VALUE AND TEST LIMIT (GST ONLY — NOT APPLICABLE TO CONSULT-II)

The following is the information specified in Service \$06 of SAE J1979.

The test value is a parameter used to determine whether a system/circuit diagnostic test is OK or NG while being monitored by the ECM during self-diagnosis. The test limit is a reference value which is specified as the maximum or minimum value and is compared with the test value being monitored.

These data (test value and test limit) are specified by Test ID (TID) and Component ID (CID) and can be displayed on the GST screen.

| Item | Self-diagnostic test item | DTC | Test value (GST display) | | Test limit | Conversion |
|-------------|---|-------|--------------------------|-----|------------|-----------------------|
| | | | TID | CID | | |
| CATALYST | Three way catalyst function | P0420 | 01H | 81H | Min. | 1/128 |
| | | P0420 | 02H | 81H | Min. | 1 |
| EVAP SYSTEM | EVAP control system (Small leak) | P0442 | 05H | 03H | Max. | 1/128 mm ² |
| | EVAP control system purge flow monitoring | P0441 | 06H | 83H | Min. | 20 mV |
| | EVAP control system (Very small leak) | P0456 | 07H | 03H | Max. | 1/128 mm ² |
| HO2S | Air fuel ratio (A/F) sensor 1 | P0131 | 41H | 8EH | Min. | 5 mV |
| | | P0132 | 42H | 0EH | Max. | 5 mV |
| | | P2A00 | 43H | 0EH | Max. | 0.002 |
| | | P2A00 | 44H | 8EH | Min. | 0.002 |
| | | P0130 | 46H | 0EH | Max. | 5 mV |
| | | P0130 | 47H | 8EH | Min. | 5 mV |
| | | P0133 | 45H | 8EH | Min. | 0.004 |
| | | P0133 | 48H | 8EH | Min. | 0.004 |
| | Heated oxygen sensor 2 | P0139 | 19H | 86H | Min. | 10mV/500 ms |
| | | P0137 | 1AH | 86H | Min. | 10 mV |
| | | P0138 | 1BH | 06H | Max. | 10 mV |
| | | P0138 | 1CH | 06H | Max. | 10 mV |
| HO2S HTR | Air fuel ratio (A/F) sensor 1 heater | P0032 | 57H | 10H | Max. | 5 mV |
| | | P0031 | 58H | 90H | Min. | 5 mV |
| | Heated oxygen sensor 2 heater | P0038 | 2DH | 0AH | Max. | 20 mV |
| | | P0037 | 2EH | 8AH | Min. | 20 mV |

HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION

How to Erase DTC

With CONSULT-II

The emission related diagnostic information in the ECM can be erased by selecting “ERASE” in the “SELF-DIAG RESULTS” mode with CONSULT-II.

If DTCs are displayed for both ECM and TCM (Transmission control module), they need to be erased individually from the ECM and TCM (Transmission control module).


NOTE:

If the DTC is not for A/T or CVT related items (see [EC-9](#)), skip steps 2 through 4.

ON BOARD DIAGNOSTIC (OBD) SYSTEM

< SERVICE INFORMATION >

1. If the ignition switch stays ON after repair work, be sure to turn ignition switch OFF once. Wait at least 10 seconds and then turn it ON (engine stopped) again.
2. Turn CONSULT-II ON and touch "TRANSMISSION".
3. Touch "SELF-DIAG RESULTS".
4. Touch "ERASE". [The DTC in the TCM (Transmission control module) will be erased.] Then touch "BACK" twice.
5. Touch "ENGINE".
6. Touch "SELF-DIAG RESULTS".
7. Touch "ERASE". (The DTC in the ECM will be erased.)

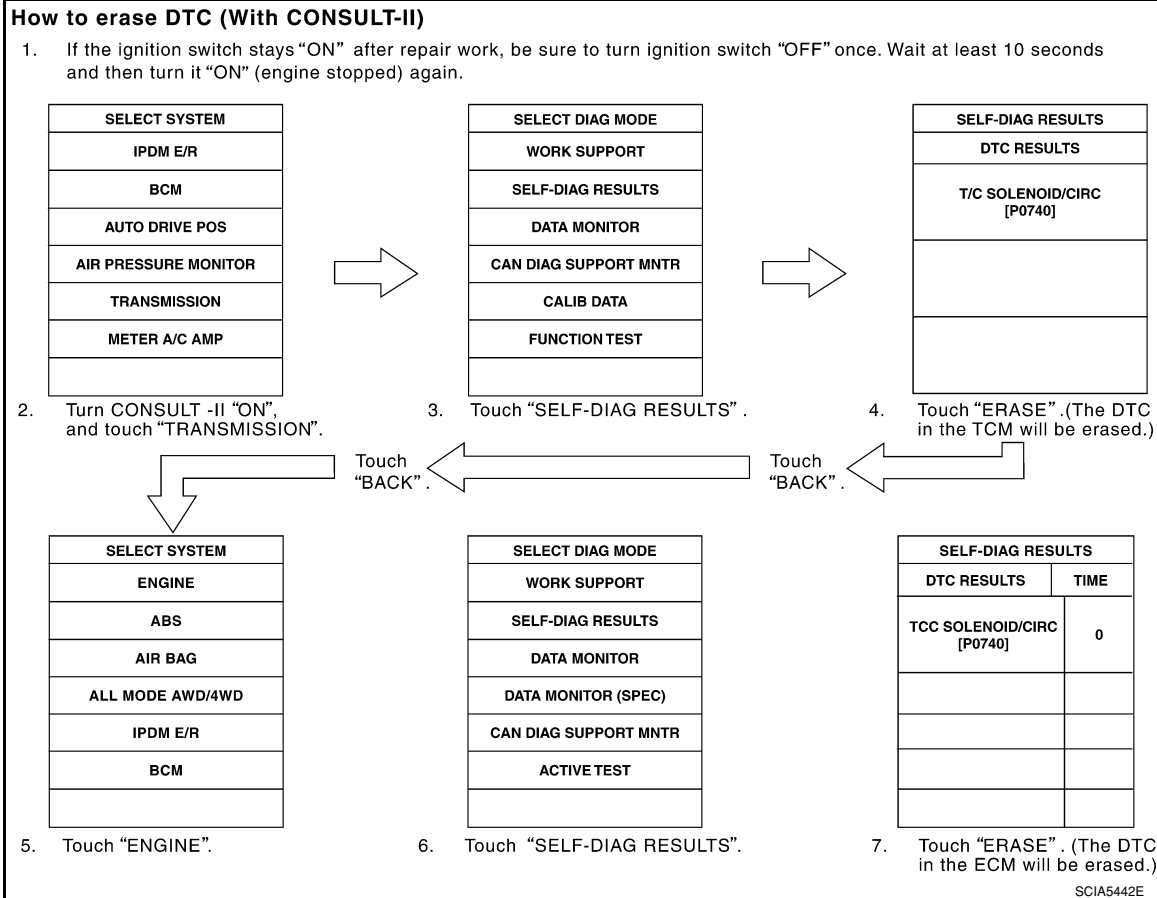

With GST

The emission related diagnostic information in the ECM can be erased by selecting Service \$04 with GST.

NOTE:

If the DTC is not for A/T or CVT related items (see EC-9), skip step 2.

1. If the ignition switch stays ON after repair work, be sure to turn ignition switch OFF once. Wait at least 10 seconds and then turn it ON (engine stopped) again.
2. Perform [AT-36. "OBD-II Diagnostic Trouble Code \(DTC\)"](#) or [CVT-26. "OBD-II Diagnostic Trouble Code \(DTC\)"](#) (The DTC in the TCM will be erased.)
3. Select Service \$04 with GST (Generic Scan Tool).

No Tools

NOTE:

If the DTC is not for A/T or CVT related items (see EC-9), skip step 2.

1. If the ignition switch stays ON after repair work, be sure to turn ignition switch OFF once. Wait at least 10 seconds and then turn it ON (engine stopped) again.

ON BOARD DIAGNOSTIC (OBD) SYSTEM

< SERVICE INFORMATION >

2. Perform [AT-36. "OBD-II Diagnostic Trouble Code \(DTC\)"](#) or "How to Erase DTC". (The DTC in the TCM will be erased.)
 3. Change the diagnostic test mode from Mode II to Mode I by depressing the accelerator pedal. Refer to [EC-60. "Malfunction Indicator Lamp \(MIL\)"](#).
- **If the battery is disconnected, the emission-related diagnostic information will be lost within 24 hours.**
 - **The following data are cleared when the ECM memory is erased.**
 - Diagnostic trouble codes
 - 1st trip diagnostic trouble codes
 - Freeze frame data
 - 1st trip freeze frame data
 - System readiness test (SRT) codes
 - Test values

Actual work procedures are explained using a DTC as an example. Be careful so that not only the DTC, but all of the data listed above, are cleared from the ECM memory during work procedures.


Malfunction Indicator Lamp (MIL)

INFOID:000000001702576

DESCRIPTION

The MIL is located on the instrument panel.

1. The MIL will light up when the ignition switch is turned ON without the engine running. This is a bulb check. If the MIL does not light up, refer to [DI-21](#) or see [EC-546](#).
2. When the engine is started, the MIL should go off. If the MIL remains on, the on board diagnostic system has detected an engine system malfunction.

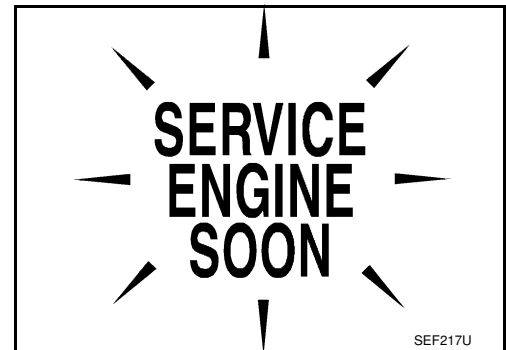





ON BOARD DIAGNOSTIC SYSTEM FUNCTION

The on board diagnostic system has the following three functions.

ON BOARD DIAGNOSTIC (OBD) SYSTEM

< SERVICE INFORMATION >

| Diagnostic Test Mode | KEY and ENG. Status | Function | Explanation of Function |
|----------------------|---|-------------------------|---|
| Mode I | Ignition switch in ON position  Engine stopped | BULB CHECK | This function checks the MIL bulb for damage (blown, open circuit, etc.). If the MIL does not come on, check MIL circuit. |
| | Engine running  | MALFUNCTION WARNING | This is a usual driving condition. When a malfunction is detected twice in two consecutive driving cycles (two trip detection logic), the MIL will light up to inform the driver that a malfunction has been detected. The following malfunctions will light up or blink the MIL in the 1st trip. <ul style="list-style-type: none"> • Misfire (Possible three way catalyst damage) • One trip detection diagnoses |
| Mode II | Ignition switch in ON position  Engine stopped  | SELF-DIAGNOSTIC RESULTS | This function allows DTCs and 1st trip DTCs to be read. |

When there is an open circuit on MIL circuit, the ECM cannot warn the driver by MIL lighting up when there is malfunction on engine control system.

Therefore, when electrical controlled throttle and part of ECM related diagnoses are continuously detected as NG for 5 trips, ECM warns the driver that engine control system malfunctions and MIL circuit is open by means of operating fail-safe function.

The fail-safe function also operates when above diagnoses except MIL circuit are detected, and demands the driver to repair the malfunction.

| | |
|--|--|
| Engine operating condition in fail-safe mode | Engine speed will not rise more than 2,500 rpm due to the fuel cut |
|--|--|

MIL Flashing Without DTC

When any SRT codes are not set, MIL may flash without DTC. For the details, refer to [EC-47. "Emission-related Diagnostic Information"](#).

HOW TO SWITCH DIAGNOSTIC TEST MODE

NOTE:

- It is better to count the time accurately with a clock.
- It is impossible to switch the diagnostic mode when an accelerator pedal position sensor circuit has a malfunction.
- Always ECM returns to Diagnostic Test Mode I after ignition switch is turned OFF.


How to Set Diagnostic Test Mode II (Self-diagnostic Results)

1. Confirm that accelerator pedal is fully released, turn ignition switch ON and wait 3 seconds.
2. Repeat the following procedure quickly five times within 5 seconds.
 - a. Fully depress the accelerator pedal.
 - b. Fully release the accelerator pedal.
3. Wait 7 seconds, fully depress the accelerator pedal and keep it for approx. 10 seconds until the MIL starts blinking.
4. Fully release the accelerator pedal.

ON BOARD DIAGNOSTIC (OBD) SYSTEM

< SERVICE INFORMATION >

ECM has entered to Diagnostic Test Mode II (Self-diagnostic results).

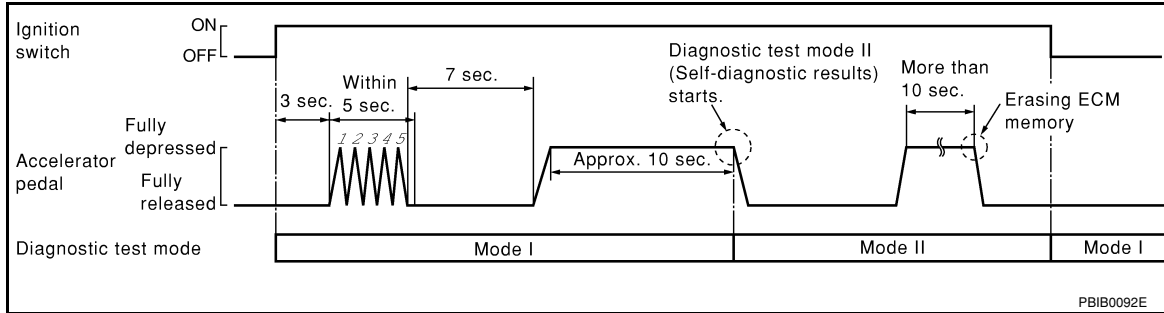

How to Erase Diagnostic Test Mode II (Self-diagnostic Results)

1. Set ECM in Diagnostic Test Mode II (Self-diagnostic results). Refer to "How to Set Diagnostic Test Mode II (Self-diagnostic Results)".
2. Fully depress the accelerator pedal and keep it for more than 10 seconds. The emission-related diagnostic information has been erased from the backup memory in the ECM.
3. Fully release the accelerator pedal, and confirm the DTC 0000 is displayed.

DIAGNOSTIC TEST MODE I — BULB CHECK

In this mode, the MIL on the instrument panel should stay ON. If it remains OFF, check the bulb. Refer to [DI-21](#) or [EC-546](#).

DIAGNOSTIC TEST MODE I — MALFUNCTION WARNING

| MIL | Condition |
|-----|-----------------------------------|
| ON | When the malfunction is detected. |
| OFF | No malfunction |

These DTC numbers are clarified in Diagnostic Test Mode II (SELF-DIAGNOSTIC RESULTS)


DIAGNOSTIC TEST MODE II — SELF-DIAGNOSTIC RESULTS

In this mode, the DTC and 1st trip DTC are indicated by the number of blinks of the MIL as shown below. The DTC and 1st trip DTC are displayed at the same time. If the MIL does not illuminate in diagnostic test mode I (Malfunction warning), all displayed items are 1st trip DTCs. If only one code is displayed when the MIL illuminates in diagnostic test mode II (SELF-DIAGNOSTIC RESULTS), it is a DTC; if two or more codes are displayed, they may be either DTCs or 1st trip DTCs. DTC No. is same as that of 1st trip DTC. These uniden-

ON BOARD DIAGNOSTIC (OBD) SYSTEM

< SERVICE INFORMATION >

tified codes can be identified by using the CONSULT-II or GST. A DTC will be used as an example for how to read a code.

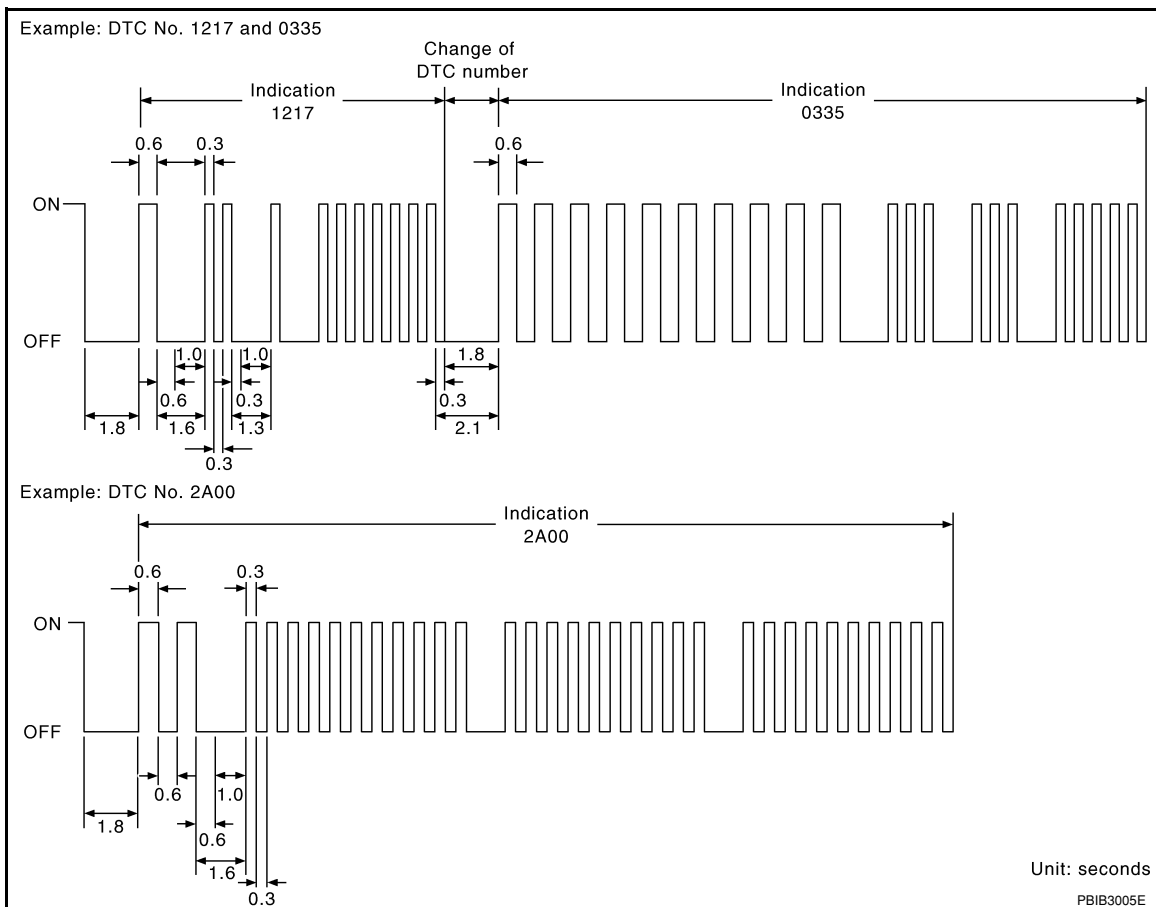

A particular trouble code can be identified by the number of four-digit numeral flashes. The “zero” is indicated by the number of ten flashes. The “A” is indicated by the number of eleven flash. The length of time the 1,000th-digit numeral flashes on and off is 1.2 seconds consisting of an ON (0.6-second) - OFF (0.6-second) cycle. The 100th-digit numeral and lower digit numerals consist of a 0.3-second ON and 0.3-second OFF cycle. A change from one digit numeral to another occurs at an interval of 1.0-second OFF. In other words, the later numeral appears on the display 1.3 seconds after the former numeral has disappeared.

A change from one trouble code to another occurs at an interval of 1.8-second OFF.

In this way, all the detected malfunctions are classified by their DTC numbers. The DTC 0000 refers to no malfunction. (See [EC-9](#))

How to Erase Diagnostic Test Mode II (Self-diagnostic Results)

The DTC can be erased from the back-up memory in the ECM by depressing accelerator pedal.

Refer to "How to Erase Diagnostic Test Mode II (Self-diagnostic Results)".

- If the battery is disconnected, the DTC will be lost from the backup memory within 24 hours.
- Be careful not to erase the stored memory before starting trouble diagnoses.

OBD System Operation Chart

INFOID:0000000001702577

RELATIONSHIP BETWEEN MIL, 1ST TRIP DTC, DTC, AND DETECTABLE ITEMS

- When a malfunction is detected for the first time, the 1st trip DTC and the 1st trip freeze frame data are stored in the ECM memory.
- When the same malfunction is detected in two consecutive trips, the DTC and the freeze frame data are stored in the ECM memory, and the MIL will come on. For details, refer to [EC-46, "Two Trip Detection Logic"](#).
- The MIL will go off after the vehicle is driven 3 times (driving pattern B) with no malfunction. The drive is counted only when the recorded driving pattern is met (as stored in the ECM). If another malfunction occurs while counting, the counter will reset.
- The DTC and the freeze frame data will be stored until the vehicle is driven 40 times (driving pattern A) without the same malfunction recurring (except for Misfire and Fuel Injection System). For Misfire and Fuel Injection System, the DTC and freeze frame data will be stored until the vehicle is driven 80 times (driving pattern

ON BOARD DIAGNOSTIC (OBD) SYSTEM

< SERVICE INFORMATION >

C) without the same malfunction recurring. The "TIME" in "SELF-DIAGNOSTIC RESULTS" mode of CONSULT-II will count the number of times the vehicle is driven.

- The 1st trip DTC is not displayed when the self-diagnosis results in OK for the 2nd trip.

SUMMARY CHART

| Items | Fuel Injection System | Misfire | Other |
|-------------------------------------|-----------------------|-------------------|----------------|
| MIL (goes off) | 3 (pattern B) | 3 (pattern B) | 3 (pattern B) |
| DTC, Freeze Frame Data (no display) | 80 (pattern C) | 80 (pattern C) | 40 (pattern A) |
| 1st Trip DTC (clear) | 1 (pattern C), *1 | 1 (pattern C), *1 | 1 (pattern B) |
| 1st Trip Freeze Frame Data (clear) | *1, *2 | *1, *2 | 1 (pattern B) |

For details about patterns B and C under "Fuel Injection System" and "Misfire", see "EXPLANATION FOR DRIVING PATTERNS FOR "MISFIRE <EXHAUST QUALITY DETERIORATION>", "FUEL INJECTION SYSTEM".

For details about patterns A and B under "Other", see "EXPLANATION FOR DRIVING PATTERNS FOR "MISFIRE <EXHAUST QUALITY DETERIORATION>", "FUEL INJECTION SYSTEM".


*1: Clear timing is at the moment OK is detected.

*2: Clear timing is when the same malfunction is detected in the 2nd trip.

RELATIONSHIP BETWEEN MIL, DTC, 1ST TRIP DTC AND DRIVING PATTERNS FOR "MISFIRE <EXHAUST QUALITY DETERIORATION>", "FUEL INJECTION SYSTEM"

ON BOARD DIAGNOSTIC (OBD) SYSTEM

< SERVICE INFORMATION >

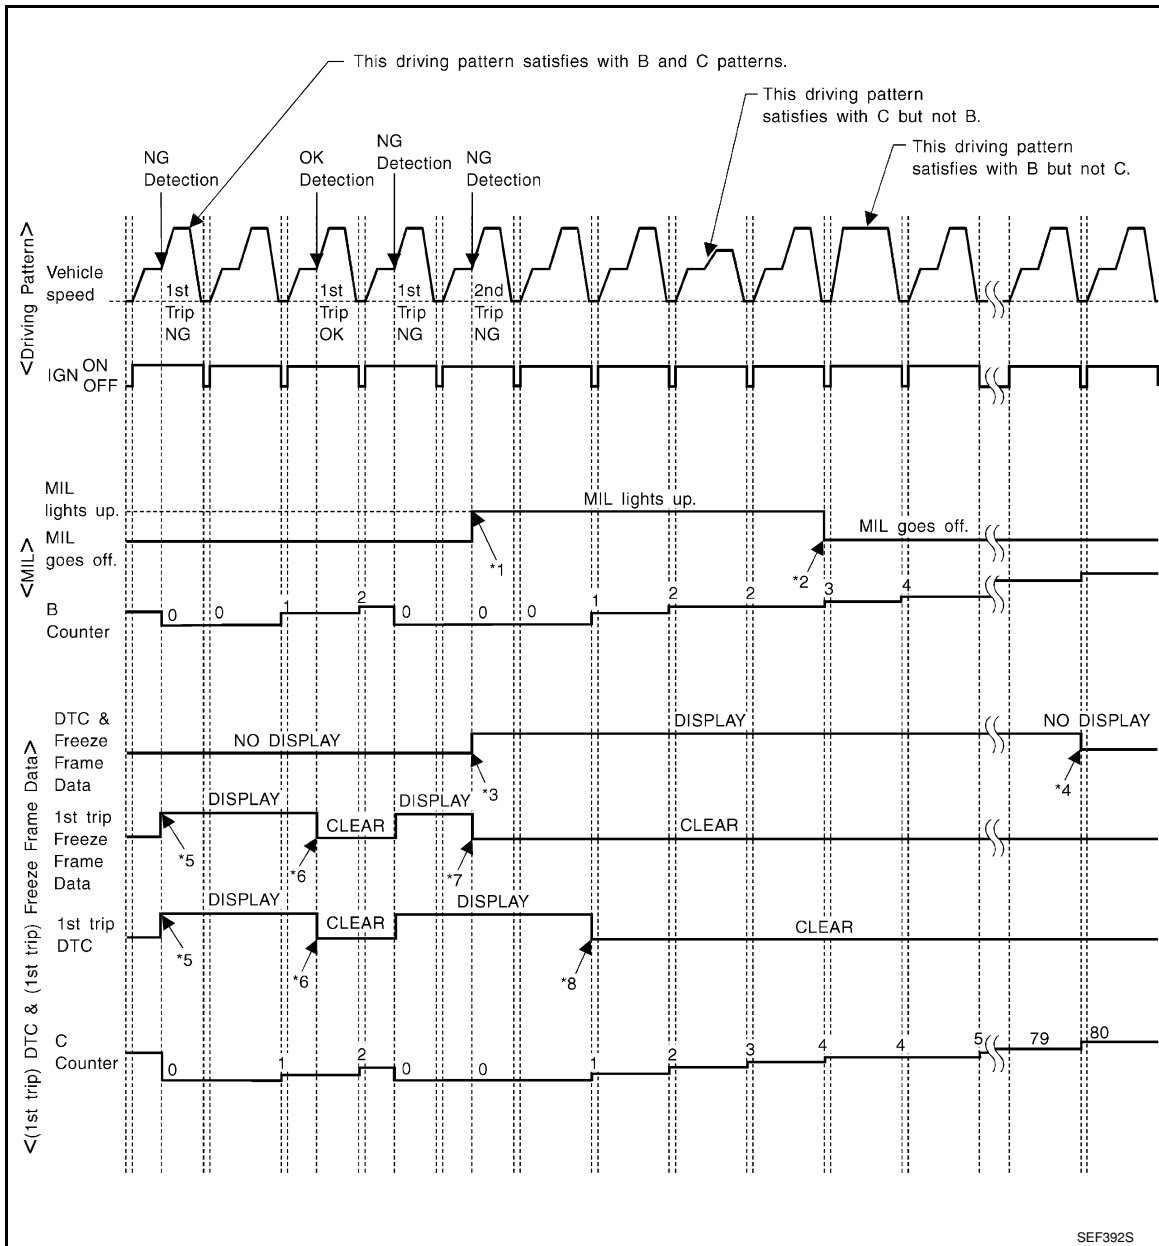

*1: When the same malfunction is detected in two consecutive trips, MIL will light up.

*2: MIL will go off after vehicle is driven 3 times (pattern B) without any malfunctions.

*3: When the same malfunction is detected in two consecutive trips, the DTC and the freeze frame data will be stored in ECM.

*4: The DTC and the freeze frame data will not be displayed any longer after vehicle is driven 80 times (pattern C) without the same malfunction. (The DTC and the freeze frame data still remain in ECM.)

*5: When a malfunction is detected for the first time, the 1st trip DTC and the 1st trip freeze frame data will be stored in ECM.

*6: The 1st trip DTC and the 1st trip freeze frame data will be cleared at the moment OK is detected.

*7: When the same malfunction is detected in the 2nd trip, the 1st trip freeze frame data will be cleared.

*8: 1st trip DTC will be cleared when vehicle is driven once (pattern C) without the same malfunction after DTC is stored in ECM.

EXPLANATION FOR DRIVING PATTERNS FOR "MISFIRE <EXHAUST QUALITY DETERIORATION>", "FUEL INJECTION SYSTEM"

<Driving Pattern B>

Driving pattern B means the vehicle operation as follows:

ON BOARD DIAGNOSTIC (OBD) SYSTEM

< SERVICE INFORMATION >

All components and systems should be monitored at least once by the OBD system.

- The B counter will be cleared when the malfunction is detected once regardless of the driving pattern.
- The B counter will be counted up when driving pattern B is satisfied without any malfunction.
- The MIL will go off when the B counter reaches 3. (*2 in "OBD SYSTEM OPERATION CHART")

<Driving Pattern C>

Driving pattern C means the vehicle operation as follows:

The following conditions should be satisfied at the same time:

Engine speed: (Engine speed in the freeze frame data) ± 375 rpm

Calculated load value: (Calculated load value in the freeze frame data) $\times (1 \pm 0.1)$ [%]

Engine coolant temperature (T) condition:

- When the freeze frame data shows lower than 70°C (158°F), "T" should be lower than 70°C (158°F).
- When the freeze frame data shows higher than or equal to 70°C (158°F), "T" should be higher than or equal to 70°C (158°F).

Example:

If the stored freeze frame data is as follows:

Engine speed: 850 rpm, Calculated load value: 30%, Engine coolant temperature: 80°C (176°F)

To be satisfied with driving pattern C, the vehicle should run under the following conditions:


Engine speed: 475 - 1,225 rpm, Calculated load value: 27 - 33%, Engine coolant temperature: more than 70°C (158°F)

- The C counter will be cleared when the malfunction is detected regardless of vehicle conditions above.
- The C counter will be counted up when vehicle conditions above is satisfied without the same malfunction.
- The DTC will not be displayed after C counter reaches 80.
- The 1st trip DTC will be cleared when C counter is counted once without the same malfunction after DTC is stored in ECM.

RELATIONSHIP BETWEEN MIL, DTC, 1ST TRIP DTC AND DRIVING PATTERNS EXCEPT FOR "MISFIRE <EXHAUST QUALITY DETERIORATION>", "FUEL INJECTION SYSTEM"

ON BOARD DIAGNOSTIC (OBD) SYSTEM

< SERVICE INFORMATION >

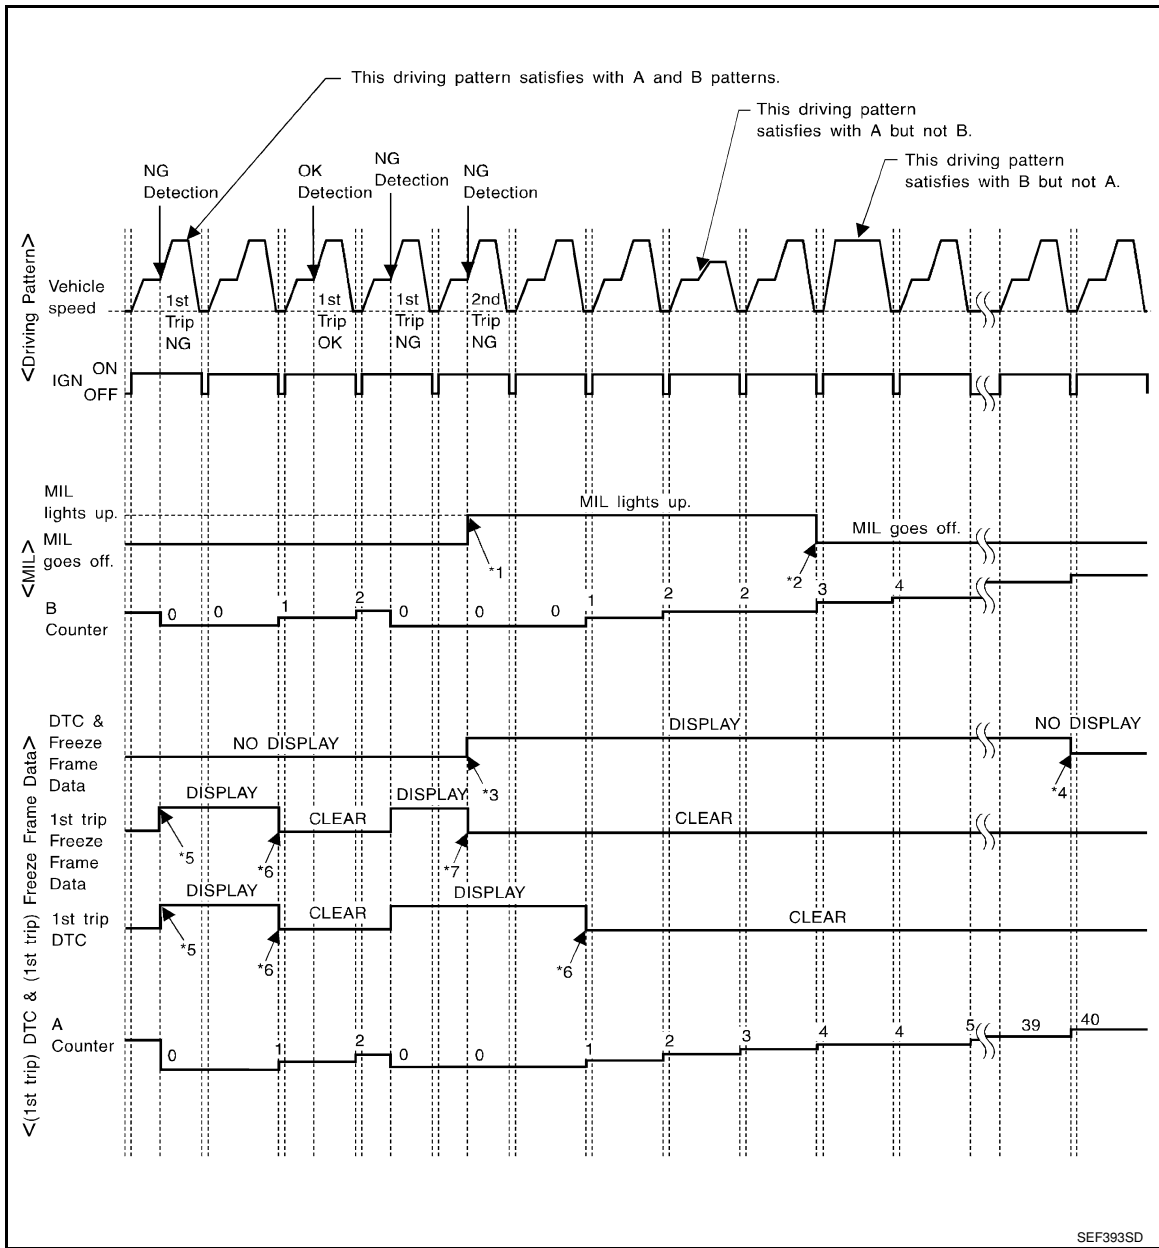

*1: When the same malfunction is detected in two consecutive trips, MIL will light up.

*2: MIL will go off after vehicle is driven 3 times (pattern B) without any malfunctions.

*3: When the same malfunction is detected in two consecutive trips, the DTC and the freeze frame data will be stored in ECM.

*4: The DTC and the freeze frame data will not be displayed any longer after vehicle is driven 40 times (pattern A) without the same malfunction. (The DTC and the freeze frame data still remain in ECM.)

*5: When a malfunction is detected for the first time, the 1st trip DTC and the 1st trip freeze frame data will be stored in ECM.

*6: 1st trip DTC will be cleared after vehicle is driven once (pattern B) without the same malfunction.


*7: When the same malfunction is detected in the 2nd trip, the 1st trip freeze frame data will be cleared.

EXPLANATION FOR DRIVING PATTERNS EXCEPT FOR "MISFIRE <EXHAUST QUALITY DETERIORATION>", "FUEL INJECTION SYSTEM"

ON BOARD DIAGNOSTIC (OBD) SYSTEM

< SERVICE INFORMATION >

<Driving Pattern A>

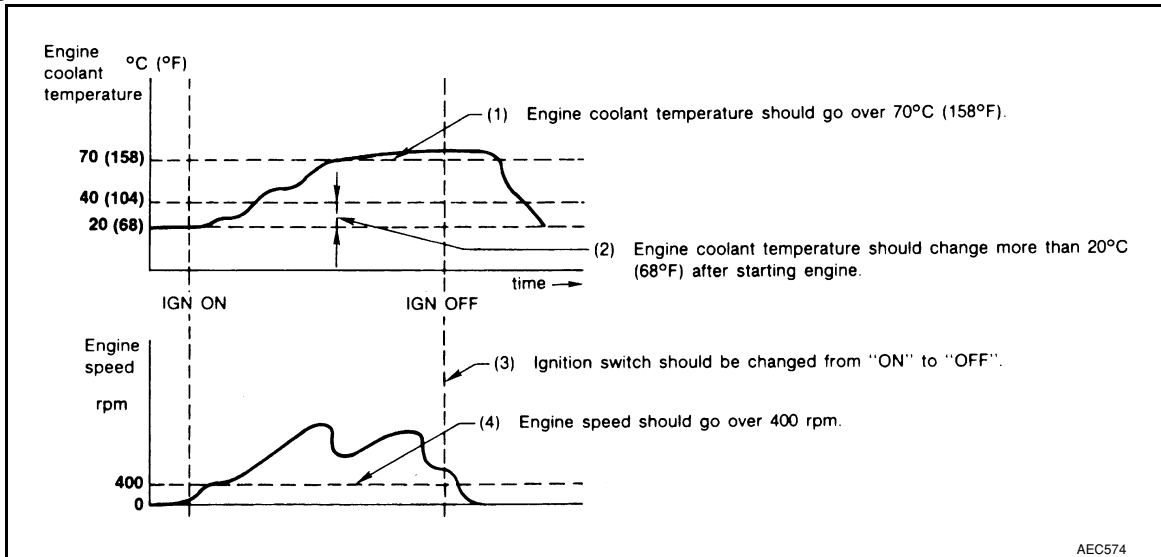

- The A counter will be cleared when the malfunction is detected regardless of (1) - (4).
- The A counter will be counted up when (1) - (4) are satisfied without the same malfunction.
- The DTC will not be displayed after the A counter reaches 40.

<Driving Pattern B>

Driving pattern B means the vehicle operation as follows:

All components and systems should be monitored at least once by the OBD system.

- The B counter will be cleared when the malfunction is detected once regardless of the driving pattern.
- The B counter will be counted up when driving pattern B is satisfied without any malfunctions.
- The MIL will go off when the B counter reaches 3 (*2 in "OBD SYSTEM OPERATION CHART").

BASIC SERVICE PROCEDURE

< SERVICE INFORMATION >



BASIC SERVICE PROCEDURE

Basic Inspection

INFOID:000000001702578

1. INSPECTION START


1. Check service records for any recent repairs that may indicate a related malfunction, or a current need for scheduled maintenance.
2. Open engine hood and check the following:
 - Harness connectors for improper connections
 - Wiring harness for improper connections, pinches and cut
 - Vacuum hoses for splits, kinks and improper connections
 - Hoses and ducts for leaks
 - Air cleaner clogging
 - Gasket
3. Confirm that electrical or mechanical loads are not applied.
 - Headlamp switch is OFF.
 - Air conditioner switch is OFF.
 - Rear window defogger switch is OFF.
 - Steering wheel is in the straight-ahead position, etc.
4. Start engine and warm it up until engine coolant temperature indicator points the middle of gauge. Ensure engine stays below 1,000 rpm.

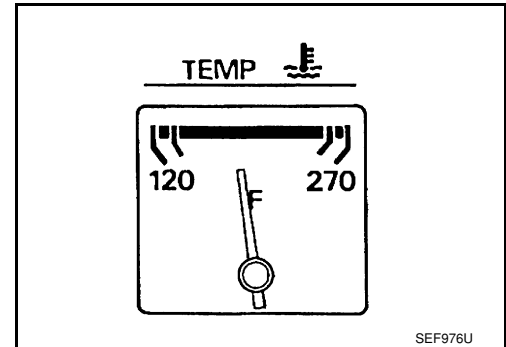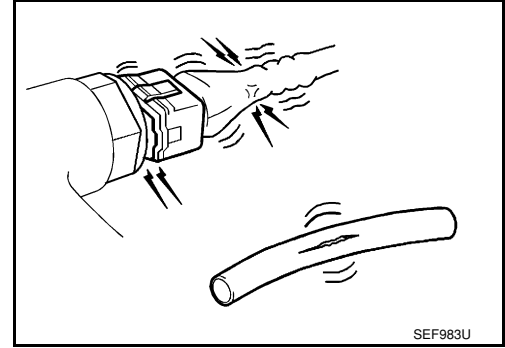

5. Run engine at about 2,000 rpm for about 2 minutes under no load.
6. Make sure that no DTC is displayed with CONSULT-II or GST.

OK or NG

- OK >> GO TO 3.
NG >> GO TO 2.

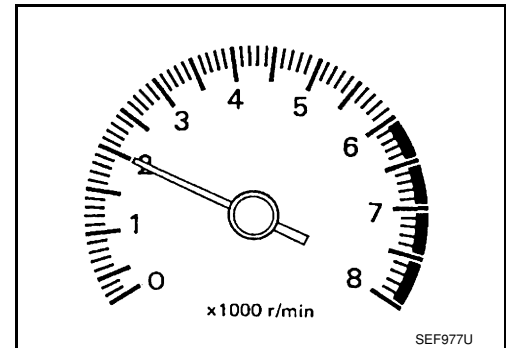

2. REPAIR OR REPLACE

Repair or replace components as necessary according to corresponding Diagnostic Procedure.

>> GO TO 3.

3. CHECK TARGET IDLE SPEED


Ⓜ With CONSULT-II

1. Run engine at about 2,000 rpm for about 2 minutes under no load.

BASIC SERVICE PROCEDURE

< SERVICE INFORMATION >

- Rev engine (2,000 to 3,000 rpm) two or three times under no load, then run engine at idle speed for about 1 minute.

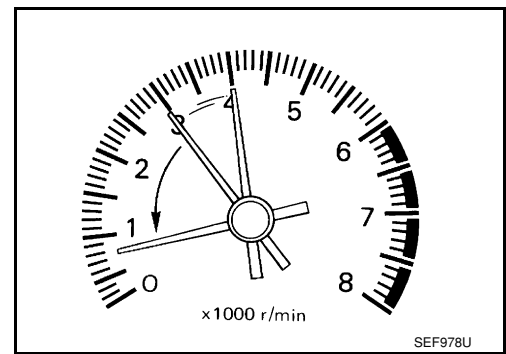


- Read idle speed in "DATA MONITOR" mode with CONSULT-II. Refer to [EC-73. "Idle Speed and Ignition Timing Check"](#).

M/T: 700 ± 50 rpm (in Neutral position)

A/T: 700 ± 50 rpm (in P or N position)

CVT: 700 ± 50 rpm (in P or N position)

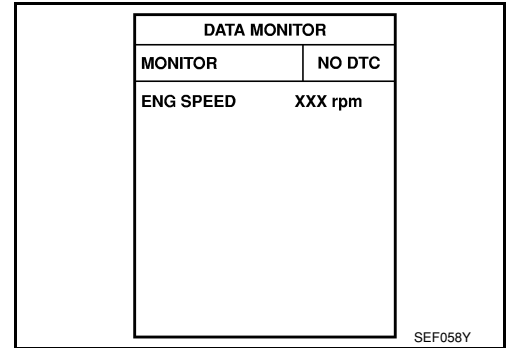

⊗ Without CONSULT-II

- Run engine at about 2,000 rpm for about 2 minutes under no load.
- Rev engine (2,000 to 3,000 rpm) two or three times under no load, then run engine at idle speed for about 1 minute.
- Check idle speed. Refer to [EC-73. "Idle Speed and Ignition Timing Check"](#).

M/T: 700 ± 50 rpm (in Neutral position)

A/T: 700 ± 50 rpm (in P or N position)

CVT: 700 ± 50 rpm (in P or N position)

OK or NG

- OK >> GO TO 10.
- NG >> GO TO 4.

4. PERFORM ACCELERATOR PEDAL RELEASED POSITION LEARNING

- Stop engine.
- Perform [EC-76. "Accelerator Pedal Released Position Learning"](#).

>> GO TO 5.

5. PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Perform [EC-76. "Throttle Valve Closed Position Learning"](#).

>> GO TO 6.

6. PERFORM IDLE AIR VOLUME LEARNING

Refer to [EC-76. "Idle Air Volume Learning"](#).

Is Idle Air Volume Learning carried out successfully?

Yes or No

- Yes >> GO TO 7.
- No >> 1. Follow the instruction of Idle Air Volume Learning.
2. GO TO 4.

7. CHECK TARGET IDLE SPEED AGAIN

BASIC SERVICE PROCEDURE

< SERVICE INFORMATION >

④ With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Read idle speed in "DATA MONITOR" mode with CONSULT-II.
Refer to [EC-73, "Idle Speed and Ignition Timing Check"](#).

M/T: 700 ± 50 rpm (in Neutral position)

A/T: 700 ± 50 rpm (in P or N position)

CVT: 700 ± 50 rpm (in P or N position)

⊗ Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Check idle speed. Refer to [EC-73, "Idle Speed and Ignition Timing Check"](#).

M/T: 700 ± 50 rpm (in Neutral position)

A/T: 700 ± 50 rpm (in P or N position)

CVT: 700 ± 50 rpm (in P or N position)

| DATA MONITOR | |
|----------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |
| COOLANT TEMP/S | XXX °C |

SEF174Y

OK or NG

OK >> GO TO 10.

NG >> GO TO 8.

8. DETECT MALFUNCTIONING PART

Check the following.

- Check crankshaft position sensor (POS) and circuit.
Refer to [EC-295](#).
- Check camshaft position sensor (PHASE) and circuit.
Refer to [EC-302](#).

OK or NG

OK >> GO TO 9.

NG >> 1. Repair or replace.
2. GO TO 4.

9. CHECK ECM FUNCTION

1. Substitute another known-good ECM to check ECM function. (ECM may be the cause of an incident, but this is a rare case.)
2. Perform initialization of NVIS (NATS) system and registration of all NVIS (NATS) ignition key IDs.
Refer to [BL-211, "ECM Re-communicating Function"](#).

>> GO TO 4.

10. CHECK IGNITION TIMING

1. Run engine at idle.
 2. Check ignition timing with a timing light.
Refer to [EC-73, "Idle Speed and Ignition Timing Check"](#).
- Timing indicator (1)

M/T: 13 ± 5° BTDC (in Neutral position)


A/T: 13 ± 5° BTDC (in P or N position)

CVT: 13 ± 5° BTDC (in P or N position)

OK or NG

OK >> GO TO 19.

NG >> GO TO 11.

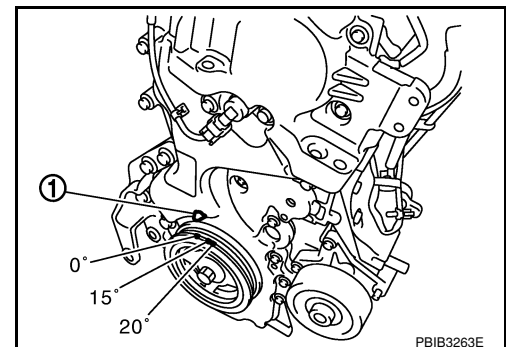

11. PERFORM ACCELERATOR PEDAL RELEASED POSITION LEARNING

1. Stop engine.
2. Perform [EC-76, "Accelerator Pedal Released Position Learning"](#).

BASIC SERVICE PROCEDURE

< SERVICE INFORMATION >

>> GO TO 12.

12. PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Perform [EC-76. "Throttle Valve Closed Position Learning"](#).

>> GO TO 13.

13. PERFORM IDLE AIR VOLUME LEARNING

Refer to [EC-76. "Idle Air Volume Learning"](#).

Is Idle Air Volume Learning carried out successfully?

Yes or No

Yes >> GO TO 14.

No >> 1. Follow the instruction of Idle Air Volume Learning.
2. GO TO 4.

14. CHECK TARGET IDLE SPEED AGAIN

Ⓟ **With CONSULT-II**

1. Start engine and warm it up to normal operating temperature.
2. Read idle speed in "DATA MONITOR" mode with CONSULT-II.
Refer to [EC-73. "Idle Speed and Ignition Timing Check"](#).

M/T: 700 ± 50 rpm (in Neutral position)

A/T: 700 ± 50 rpm (in P or N position)

CVT: 700 ± 50 rpm (in P or N position)

ⓧ **Without CONSULT-II**

1. Start engine and warm it up to normal operating temperature.
2. Check idle speed. Refer to [EC-73. "Idle Speed and Ignition Timing Check"](#).

M/T: 700 ± 50 rpm (in Neutral position)

A/T: 700 ± 50 rpm (in P or N position)

CVT: 700 ± 50 rpm (in P or N position)

OK or NG

OK >> GO TO 15.

NG >> GO TO 17.

15. CHECK IGNITION TIMING AGAIN

1. Run engine at idle.
 2. Check ignition timing with a timing light.
Refer to [EC-73. "Idle Speed and Ignition Timing Check"](#).
- Timing indicator (1)

M/T: 13 ± 5° BTDC (in Neutral position)

A/T: 13 ± 5° BTDC (in P or N position)

CVT: 13 ± 5° BTDC (in P or N position)

OK or NG

OK >> GO TO 19

NG >> GO TO 16.

16. CHECK TIMING CHAIN INSTALLATION

Check timing chain installation. Refer to [EM-37](#).


OK or NG

OK >> GO TO 17.

NG >> 1. Repair the timing chain installation.

| DATA MONITOR | |
|---------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |
| COOLAN TEMP/S | XXX °C |

SEF174Y

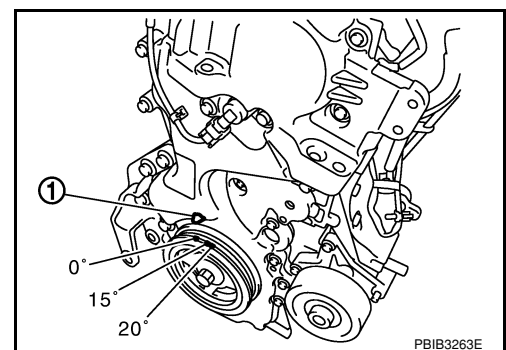

BASIC SERVICE PROCEDURE

< SERVICE INFORMATION >

2. GO TO 4.

17. DETECT MALFUNCTIONING PART

Check the following.

- Check crankshaft position sensor (POS) and circuit.
Refer to [EC-295](#).
- Check camshaft position sensor (PHASE) and circuit.
Refer to [EC-302](#).

OK or NG

- OK >> GO TO 18.
NG >> 1. Repair or replace.
2. GO TO 4.

18. CHECK ECM FUNCTION

1. Substitute another known-good ECM to check ECM function. (ECM may be the cause of an incident, but this is a rare case.)
2. Perform initialization of NVIS (NATS) system and registration of all NVIS (NATS) ignition key IDs.
Refer to [BL-211, "ECM Re-communicating Function"](#).

>> GO TO 4.

19. INSPECTION END

Did you replace ECM, referring this Basic Inspection procedure?

Yes or No

- Yes >> 1. Perform [EC-75, "VIN Registration"](#).
2. **INSPECTION END**
No >> **INSPECTION END**

Idle Speed and Ignition Timing Check

INFOID:000000001702579

IDLE SPEED

 With CONSULT-II

Check idle speed in "DATA MONITOR" mode with CONSULT-II.

| DATA MONITOR | |
|--------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |

SEF058Y

 With GST

Check idle speed in Service \$01 with GST.

IGNITION TIMING


Any of following two methods may be used.

Method A


BASIC SERVICE PROCEDURE

< SERVICE INFORMATION >

1. Attach timing light to loop wire (1) as shown.
 - ⇐: Vehicle front

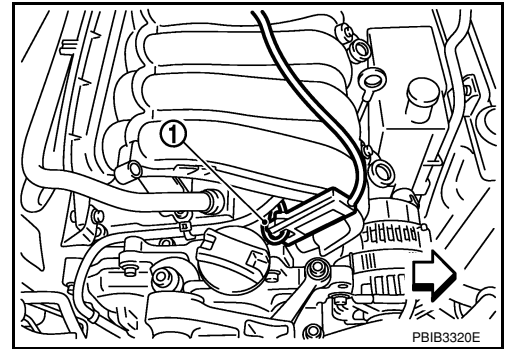


2. Check ignition timing.
 - Timing indicator (1)

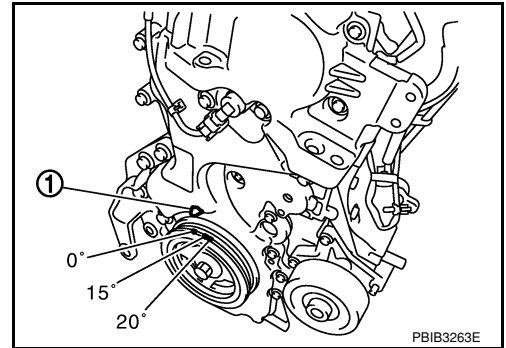


Method B

1. Remove No. 4 ignition coil (1).
 - ⇐: Vehicle front

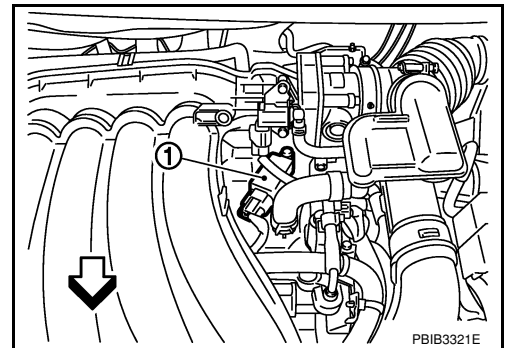


2. Connect No. 4 ignition coil (1) and No. 4 spark plug with suitable high-tension wire (A) as shown, and attach timing light clamp (B) to this wire.

- ⇐: Vehicle front

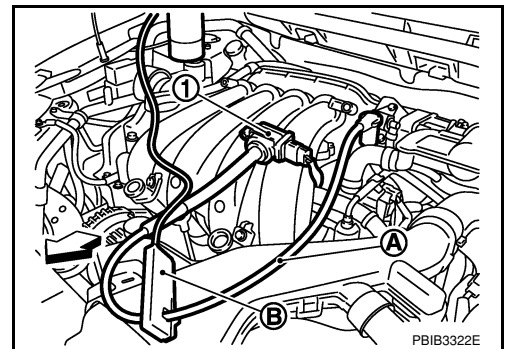


BASIC SERVICE PROCEDURE

< SERVICE INFORMATION >

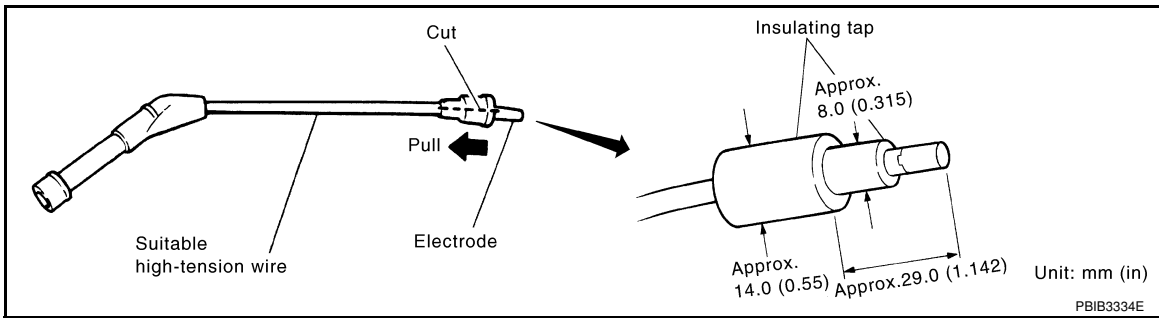

3. Check ignition timing.
 - Timing indicator (1)

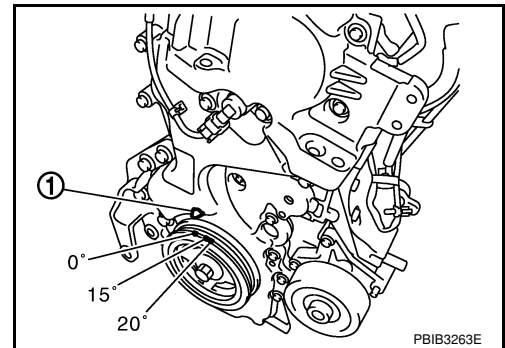

Procedure After Replacing ECM

INFOID:000000001702580

When replacing ECM, the following procedure must be performed.

1. Perform initialization of NVIS (NATS) system and registration of all NVIS (NATS) ignition key IDs. Refer to [BL-211. "ECM Re-communicating Function"](#).
2. Perform [EC-75. "VIN Registration"](#).
3. Perform [EC-76. "Accelerator Pedal Released Position Learning"](#).
4. Perform [EC-76. "Throttle Valve Closed Position Learning"](#).
5. Perform [EC-76. "Idle Air Volume Learning"](#).

VIN Registration

INFOID:000000001702581

DESCRIPTION

VIN Registration is an operation to registering VIN in ECM. It must be performed each time ECM is replaced.


NOTE:

Accurate VIN which is registered in ECM may be required for Inspection & Maintenance (I/M).

OPERATION PROCEDURE

Ⓟ With CONSULT-II

1. Check the VIN of the vehicle and note it. Refer to [GI-43](#).
2. Turn ignition switch ON and engine stopped.
3. Select "VIN REGISTRATION" in "WORK SUPPORT" mode.
4. Follow the instruction of CONSULT-II display.

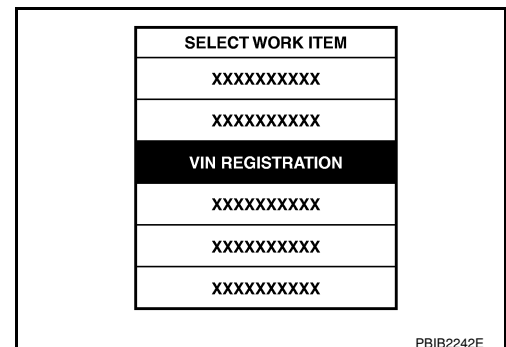

PBIB2242E

BASIC SERVICE PROCEDURE

< SERVICE INFORMATION >

Accelerator Pedal Released Position Learning

INFOID:000000001702582

DESCRIPTION

Accelerator Pedal Released Position Learning is an operation to learn the fully released position of the accelerator pedal by monitoring the accelerator pedal position sensor output signal. It must be performed each time harness connector of accelerator pedal position sensor or ECM is disconnected.

OPERATION PROCEDURE

1. Make sure that accelerator pedal is fully released.
2. Turn ignition switch ON and wait at least 2 seconds.
3. Turn ignition switch OFF and wait at least 10 seconds.
4. Turn ignition switch ON and wait at least 2 seconds.
5. Turn ignition switch OFF and wait at least 10 seconds.

Throttle Valve Closed Position Learning

INFOID:000000001702583

DESCRIPTION

Throttle Valve Closed Position Learning is an operation to learn the fully closed position of the throttle valve by monitoring the throttle position sensor output signal. It must be performed each time harness connector of electric throttle control actuator or ECM is disconnected.

OPERATION PROCEDURE

1. Make sure that accelerator pedal is fully released.
2. Turn ignition switch ON.
3. Turn ignition switch OFF and wait at least 10 seconds.
Make sure that throttle valve moves during above 10 seconds by confirming the operating sound.

Idle Air Volume Learning

INFOID:000000001702584

DESCRIPTION

Idle Air Volume Learning is an operation to learn the idle air volume that keeps each engine within the specific range. It must be performed under any of the following conditions:

- Each time electric throttle control actuator or ECM is replaced.
- Idle speed or ignition timing is out of specification.

PREPARATION

Before performing Idle Air Volume Learning, make sure that all of the following conditions are satisfied. Learning will be cancelled if any of the following conditions are missed for even a moment.

- Battery voltage: More than 12.9V (At idle)
- Engine coolant temperature: 70 - 95°C (158 - 203°F)
- Park/neutral position (PNP) switch: ON
- Electric load switch: OFF
[Air conditioner, headlamp, rear window defogger]
On vehicles equipped with daytime light systems, if the parking brake is applied before the engine is started the headlamp will not be illuminated.
- Steering wheel: Neutral (Straight-ahead position)
- Vehicle speed: Stopped
- Transmission: Warmed-up
- Models with CONSULT-II (A/T and CVT models)
- Drive vehicle until "FLUID TEMP SE" in "DATA MONITOR" mode of "A/T" or "CVT" system indicates less than 0.9V.
- Models without CONSULT-II (A/T and CVT models) and M/T models
- Drive vehicle for 10 minutes.

OPERATION PROCEDURE


Ⓛ With CONSULT-II

1. Perform [EC-76, "Accelerator Pedal Released Position Learning"](#).
2. Perform [EC-76, "Throttle Valve Closed Position Learning"](#).


BASIC SERVICE PROCEDURE

< SERVICE INFORMATION >


3. Start engine and warm it up to normal operating temperature.
4. Check that all items listed under the topic PREPARATION (previously mentioned) are in good order.
5. Select "IDLE AIR VOL LEARN" in "WORK SUPPORT" mode.

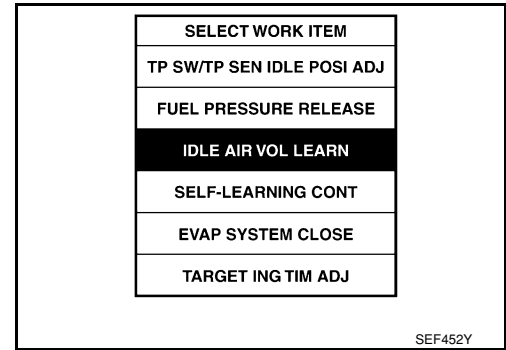

6. Touch "START" and wait 20 seconds.

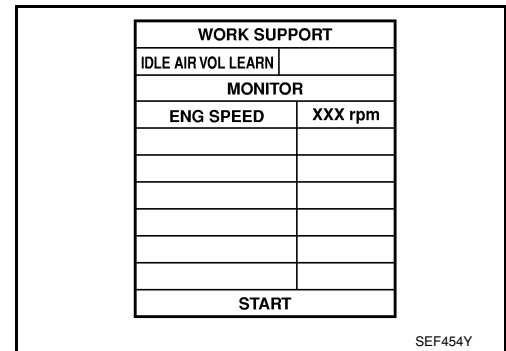

7. Make sure that "CMPLT" is displayed on CONSULT-II screen. If "CMPLT" is not displayed, Idle Air Volume Learning will not be carried out successfully. In this case, find the cause of the incident by referring to the DIAGNOSTIC PROCEDURE below.
8. Rev up the engine two or three times and make sure that idle speed and ignition timing are within the specifications. Refer to [EC-69, "Basic Inspection"](#).

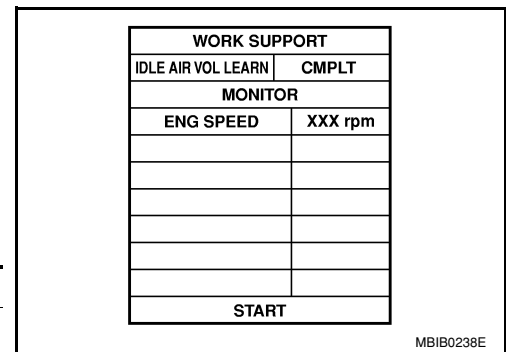

| ITEM | SPECIFICATION |
|-----------------|---|
| Idle speed | M/T: 700 ± 50 rpm (in Neutral position) A/T: 700 ± 50 rpm (in P or N position) CVT: 700 ± 50 rpm (in P or N position) |
| Ignition timing | M/T: 13 ± 5° BTDC (in Neutral position) A/T: 13 ± 5° BTDC (in P or N position) CVT: 13 ± 5° BTDC (in P or N position) |

⊗ Without CONSULT-II

NOTE:


- It is better to count the time accurately with a clock.
- It is impossible to switch the diagnostic mode when an accelerator pedal position sensor circuit has a malfunction.

1. Perform [EC-76, "Accelerator Pedal Released Position Learning"](#).
2. Perform [EC-76, "Throttle Valve Closed Position Learning"](#).
3. Start engine and warm it up to normal operating temperature.
4. Check that all items listed under the topic PREPARATION (previously mentioned) are in good order.
5. Turn ignition switch OFF and wait at least 10 seconds.
6. Confirm that accelerator pedal is fully released, turn ignition switch ON and wait 3 seconds.
7. Repeat the following procedure quickly five times within 5 seconds.
 - a. Fully depress the accelerator pedal.

BASIC SERVICE PROCEDURE

< SERVICE INFORMATION >

- b. Fully release the accelerator pedal.
8. Wait 7 seconds, fully depress the accelerator pedal and keep it for approx. 20 seconds until the MIL stops blinking and turned ON.
9. Fully release the accelerator pedal within 3 seconds after the MIL turned ON.
10. Start engine and let it idle.
11. Wait 20 seconds.

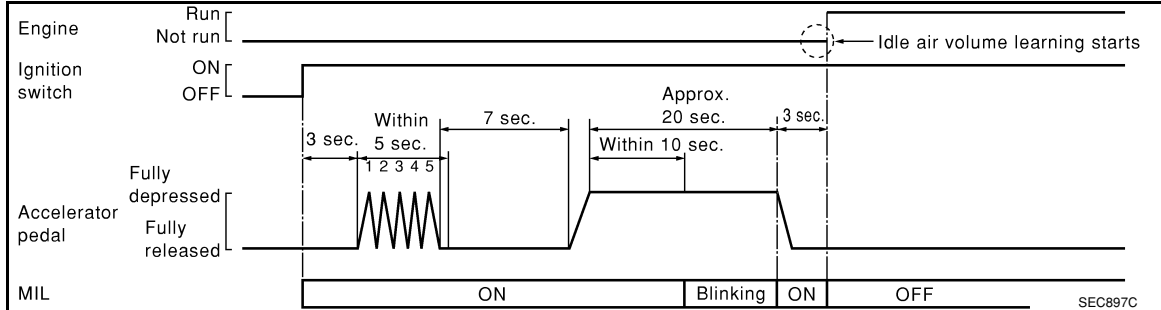

12. Rev up the engine two or three times and make sure that idle speed and ignition timing are within the specifications. Refer to [EC-69, "Basic Inspection"](#).

| ITEM | SPECIFICATION |
|-----------------|---|
| Idle speed | M/T: 700 ± 50 rpm (in Neutral position) A/T: 700 ± 50 rpm (in P or N position) CVT: 700 ± 50 rpm (in P or N position) |
| Ignition timing | M/T: 13 ± 5° BTDC (in Neutral position) A/T: 13 ± 5° BTDC (in P or N position) CVT: 13 ± 5° BTDC (in P or N position) |

13. If idle speed and ignition timing are not within the specification, Idle Air Volume Learning will not be carried out successfully. In this case, find the cause of the incident by referring to the DIAGNOSTIC PROCEDURE below.

DIAGNOSTIC PROCEDURE

If idle air volume learning cannot be performed successfully, proceed as follows:

1. Check that throttle valve is fully closed.
2. Check PCV valve operation.
3. Check that downstream of throttle valve is free from air leakage.
4. When the above three items check out OK, engine component parts and their installation conditions are questionable. Check and eliminate the cause of the incident.
It is useful to perform [EC-127](#).
5. If any of the following conditions occur after the engine has started, eliminate the cause of the incident and perform Idle Air Volume Learning all over again:
 - Engine stalls.
 - Erroneous idle.

Fuel Pressure Check

INFOID:000000001702585

FUEL PRESSURE RELEASE


Ⓟ With CONSULT-II

1. Turn ignition switch ON.

BASIC SERVICE PROCEDURE


< SERVICE INFORMATION >

2. Perform "FUEL PRESSURE RELEASE" in "WORK SUPPORT" mode with CONSULT-II.
3. Start engine.
4. After engine stalls, crank it two or three times to release all fuel pressure.
5. Turn ignition switch OFF.

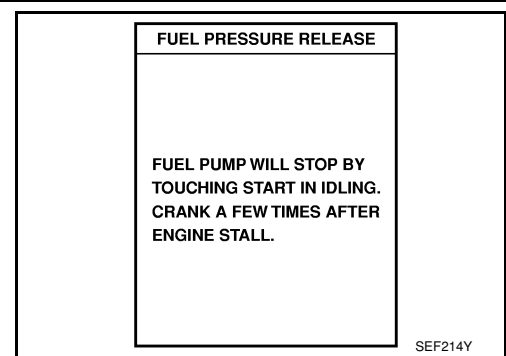

⊗ Without CONSULT-II

1. Remove fuel pump fuse (1) located in IPDM E/R (2).
 - ←: Vehicle front
2. Start engine.
3. After engine stalls, crank it two or three times to release all fuel pressure.
4. Turn ignition switch OFF.
5. Reinstall fuel pump fuse after servicing fuel system.

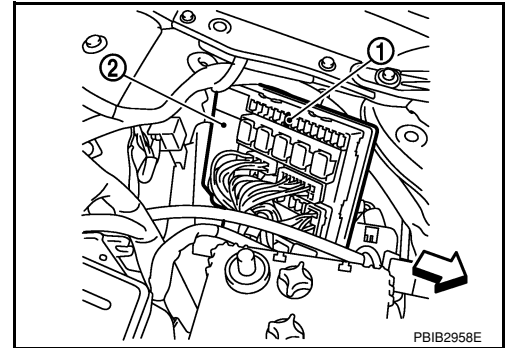

FUEL PRESSURE CHECK

CAUTION:

Before disconnecting fuel line, release fuel pressure from fuel line to eliminate danger.


NOTE:

- Prepare pans or saucers under the disconnected fuel line because the fuel may spill out. The fuel pressure cannot be completely released because C11 models do not have fuel return system.
- The fuel hose connection method used when taking fuel pressure check must not be used for other purposes.
- Be careful not to scratch or put debris around connection area when servicing, so that the quick connector maintains sealability with O-rings inside.
- Do not perform fuel pressure check with electrical systems operating (i.e. lights, rear defogger, A/C, etc.) Fuel pressure gauge may indicate false readings due to varying engine load and changes in manifold vacuum.

1. Release fuel pressure to zero. Refer to "FUEL PRESSURE RELEASE".

2. Prepare fuel hose for fuel pressure check B and fuel tube adapter (KV10118400) D, then connect fuel pressure gauge A.

- ←: To quick connector
- ←: To fuel tube (engine side)
- C: Clamp
- Use suitable fuel hose for fuel pressure check (genuine NISSAN fuel hose without quick connector).
- To avoid unnecessary force or tension to hose, use moderately long fuel hose for fuel pressure check.
- Do not use the fuel hose for checking fuel pressure with damage or cracks on it.
- Use Pressure Gauge to check fuel pressure.

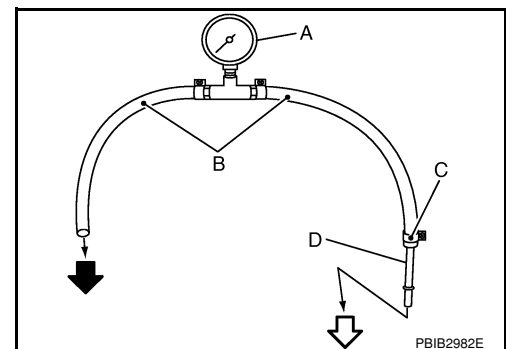


3. Remove fuel hose. Refer to [EM-18](#).
 - Do not twist or kink fuel hose because it is plastic hose.

BASIC SERVICE PROCEDURE


< SERVICE INFORMATION >

4. Connect fuel hose for fuel pressure check (1) to fuel tube (engine side) with clamp (2) as shown in the figure.
 - No.2 spool (5)
 - Wipe off oil or dirt from hose insertion part using cloth moistened with gasoline.
 - Apply proper amount of gasoline between top of the fuel tube (3) and No.1 spool (4).
 - Insert fuel hose for fuel pressure check until it touches the No.1 spool on fuel tube.
 - Use NISSAN genuine hose clamp (part number: 16439 N4710 or 16439 40U00).
 - When reconnecting fuel line, always use new clamps.
 - Use a torque driver to tighten clamps.
 - Install hose clamp to the position within 1 - 2 mm (0.04 - 0.08 in).

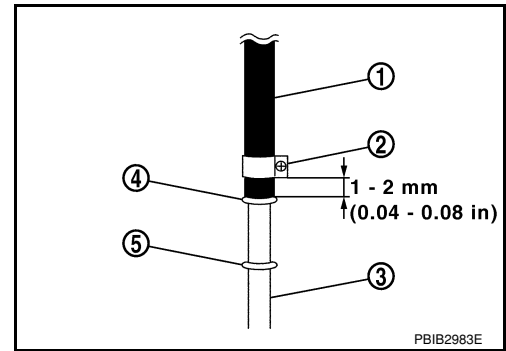

Tightening torque: 1 - 1.5 N·m (0.1 - 0.15 kg-m, 9 - 13 in-lb)

- Make sure that clamp screw does not contact adjacent parts.
5. Connect fuel tube adapter to quick connector.
 - A: Fuel pressure gauge
 - B: Fuel hose for fuel pressure check
 6. After connecting fuel hose for fuel pressure check, pull the hose with a force of approximately 98 N (10 kg, 22 lb) to confirm fuel tube does not come off.
 7. Turn ignition switch ON and check for fuel leakage.
 8. Start engine and check for fuel leakage.
 9. Read the indication of fuel pressure gauge.
 - Do not perform fuel pressure check with system operating. Fuel pressure gauge may indicate false readings.
 - During fuel pressure check, confirm for fuel leakage from fuel connection every 3 minutes.

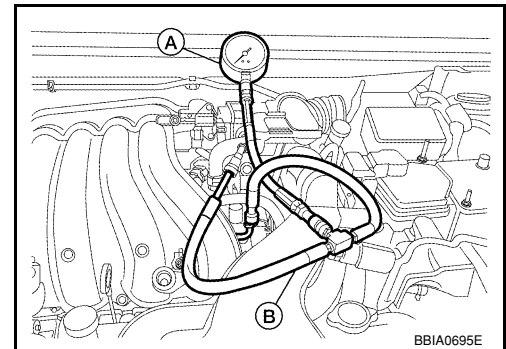

At idling: Approximately 350 kPa (3.57 kg/cm², 51 psi)

10. If result is unsatisfactory, go to next step.
11. Check the following.
 - Fuel hoses and fuel tubes for clogging
 - Fuel filter for clogging
 - Fuel pump
 - Fuel pressure regulator for cloggingIf OK, replace fuel pressure regulator.
If NG, repair or replace.
12. Check the following.
 - Fuel hoses and fuel tubes for clogging
 - Fuel filter for clogging
 - Fuel pump
 - Fuel pressure regulator for cloggingIf OK, replace fuel pressure regulator.
If NG, repair or replace.
13. Before disconnecting Fuel Pressure Gauge and Fuel Pressure Adapter J-44321-6, release fuel pressure to zero. Refer to "FUEL PRESSURE RELEASE".

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >


TROUBLE DIAGNOSIS

Trouble Diagnosis Introduction


INFOID:000000001702586

INTRODUCTION

The engine has an ECM to control major systems such as fuel control, ignition control, idle air control system, etc. The ECM accepts input signals from sensors and instantly drives actuators. It is essential that both input and output signals are proper and stable. At the same time, it is important that there are no malfunctions such as vacuum leaks, fouled spark plugs, or other malfunctions with the engine.

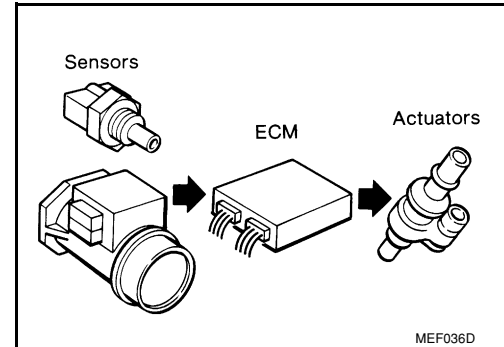


It is much more difficult to diagnose an incident that occurs intermittently rather than continuously. Most intermittent incidents are caused by poor electric connections or improper wiring. In this case, careful checking of suspected circuits may help prevent the replacement of good parts.

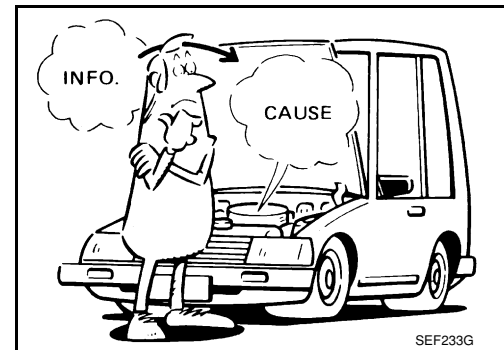

A visual check only may not find the cause of the incidents. A road test with CONSULT-II (or GST) or a circuit tester connected should be performed. Follow the Work Flow on "WORK FLOW".

Before undertaking actual checks, take a few minutes to talk with a customer who approaches with a driveability complaint. The customer can supply good information about such incidents, especially intermittent ones. Find out what symptoms are present and under what conditions they occur. A Diagnostic Worksheet like the example on "Worksheet Sample" should be used.

Start your diagnosis by looking for conventional malfunctions first. This will help troubleshoot driveability malfunctions on an electronically controlled engine vehicle.

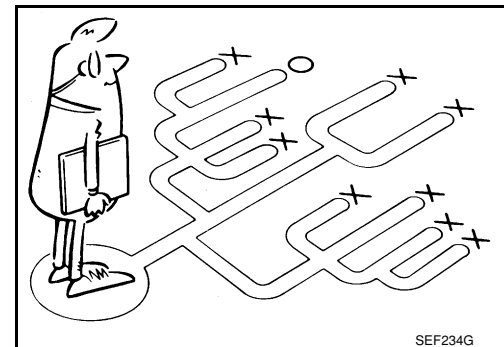


WORK FLOW

A
EC
C
D
E
F
G
H
I
J
K
L
M
N
O
P

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

Overall Sequence

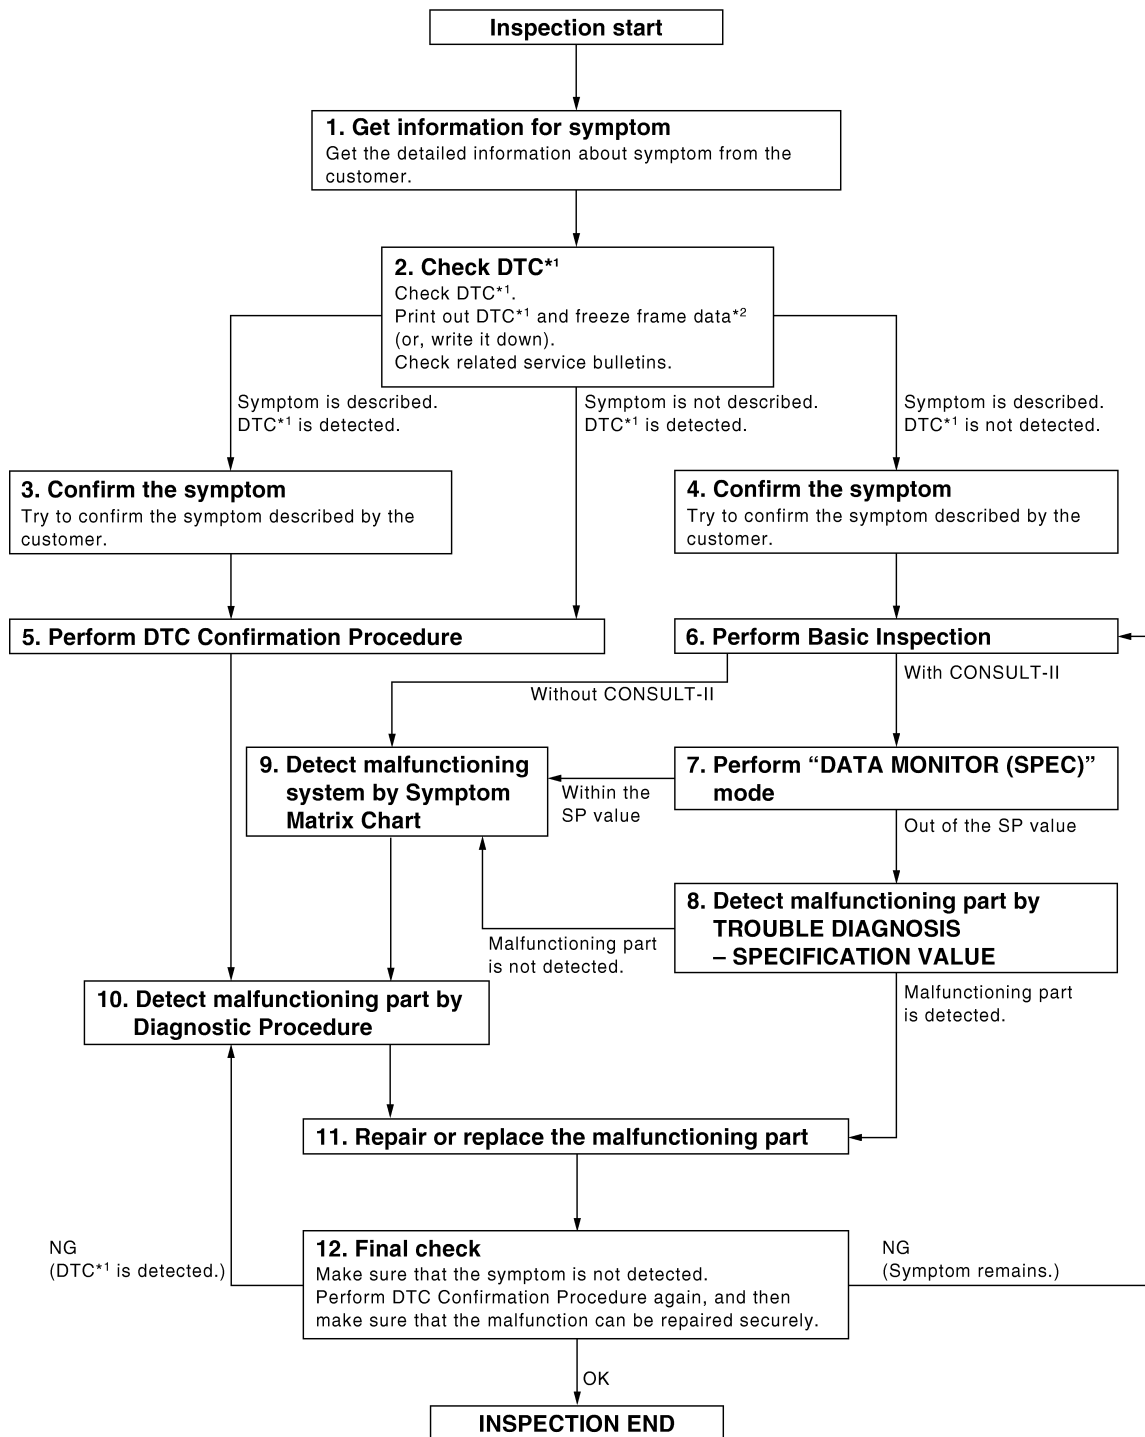

*1: Include 1st trip DTC.

*2: Include 1st trip freeze frame data.

PBIB2267E

Detailed Flow

1. GET INFORMATION FOR SYMPTOM

Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred) using the "DIAGNOSTIC WORKSHEET".

>> GO TO 2.

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

2. CHECK DTC*¹

1. Check DTC*¹.
2. Perform the following procedure if DTC*¹ is displayed.
 - Record DTC*¹ and freeze frame data*². (Print them out with CONSULT-II or GST.)
 - Erase DTC*¹. (Refer to [EC-47, "Emission-related Diagnostic Information"](#))
 - Study the relationship between the cause detected by DTC*¹ and the symptom described by the customer. (Symptom Matrix Chart is useful. Refer to [EC-88, "Symptom Matrix Chart"](#).)
3. Check related service bulletins for information.

Is any symptom described and any DTC detected?

Symptom is described, DTC*¹ is displayed>>GO TO 3.

Symptom is described, DTC*¹ is not displayed>>GO TO 4.

Symptom is not described, DTC*¹ is displayed>>GO TO 5.

3. CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer (except MIL ON).

DIAGNOSIS WORK SHEET is useful to verify the incident.

Connect CONSULT-II to the vehicle in "DATA MONITOR (AUTO TRIG)" mode and check real time diagnosis results.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5.

4. CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

DIAGNOSIS WORK SHEET is useful to verify the incident.

Connect CONSULT-II to the vehicle in "DATA MONITOR (AUTO TRIG)" mode and check real time diagnosis results.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6.

5. PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC Confirmation Procedure for the displayed DTC*¹, and then make sure that DTC*¹ is detected again.

At this time, always connect CONSULT-II to the vehicle, and check diagnostic results in real time on "DATA MONITOR (AUTO TRIG)".

If two or more DTCs*¹ are detected, refer to [EC-86, "DTC Inspection Priority Chart"](#) and determine trouble diagnosis order.

NOTE:

- Freeze frame data*² is useful if the DTC*¹ is not detected.
- Perform Overall Function Check if DTC Confirmation Procedure is not included on Service Manual. This simplified check procedure is an effective alternative though DTC*¹ cannot be detected during this check. If the result of Overall Function Check is NG, it is the same as the detection of DTC*¹ by DTC Confirmation Procedure.

Is DTC*¹ detected?

Yes >> GO TO 10.

No >> Check according to [EC-136](#).

6. PERFORM BASIC INSPECTION

Perform [EC-69, "Basic Inspection"](#).

With CONSULT-II>>GO TO 7.

Without CONSULT-II>>GO TO 9.

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >


7. PERFORM DATA MONITOR (SPEC) MODE

④ With CONSULT-II

Make sure that "MAS A/F SE-B1", "B/FUEL SCHDL", and "A/F ALPHA-B1" are within the SP value using CONSULT-II "DATA MONITOR (SPEC)" mode. Refer to [EC-127. "Inspection Procedure"](#).

Are they within the SP value?

- Yes >> GO TO 9.
- No >> GO TO 8.

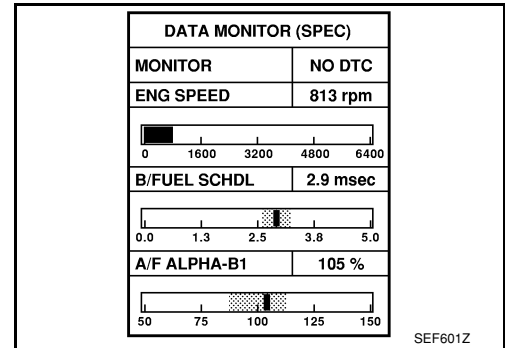

8. DETECT MALFUNCTIONING PART BY TROUBLE DIAGNOSIS - SPECIFICATION VALUE

Detect malfunctioning part according to [EC-127. "Diagnosis Procedure"](#).

Is malfunctioning part detected?

- Yes >> GO TO 11.
- No >> GO TO 9.

9. DETECT MALFUNCTIONING SYSTEM BY SYMPTOM MATRIX CHART

Detect malfunctioning system according to [EC-88. "Symptom Matrix Chart"](#) based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

>> GO TO 10.

10. DETECT MALFUNCTIONING PART BY DIAGNOSTIC PROCEDURE

Inspect according to Diagnostic Procedure of the system.

NOTE:

The Diagnostic Procedure in EC section described based on open circuit inspection. A short circuit inspection is also required for the circuit check in the Diagnostic Procedure. For details, refer to Circuit Inspection in [GI-25. "How to Perform Efficient Diagnosis for an Electrical Incident"](#).

Is malfunctioning part detected?

- Yes >> GO TO 11.
- No >> Monitor input data from related sensors or check voltage of related ECM terminals using CONSULT-II. Refer to [EC-102. "ECM Terminal and Reference Value"](#), [EC-121. "CONSULT-II Reference Value in Data Monitor Mode"](#).

11. REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnostic Procedure again after repair and replacement.
3. Check DTC. If DTC is displayed, erase it, refer to [EC-47. "Emission-related Diagnostic Information"](#).

>> GO TO 12.

12. FINAL CHECK

When DTC was detected in step 2, perform DTC Confirmation Procedure or Overall Function Check again, and then make sure that the malfunction have been repaired securely.

When symptom was described from the customer, refer to confirmed symptom in step 3 or 4, and make sure that the symptom is not detected.

OK or NG

- NG (DTC*¹ is detected) >> GO TO 10.
- NG (Symptom remains) >> GO TO 6.

OK >> 1. Before returning the vehicle to the customer, make sure to erase unnecessary DTC*¹ in ECM and TCM (Transmission Control Module). (Refer to [EC-47. "Emission-related Diagnostic Information"](#))

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

[Information](#) and [AT-36. "OBD-II Diagnostic Trouble Code \(DTC\)", CVT-26. "OBD-II Diagnostic Trouble Code \(DTC\)".](#)

2. If the completion of SRT is needed, drive vehicle under the specific driving pattern. Refer to [EC-47. "Emission-related Diagnostic Information"](#).

3. INSPECTION END

*1: Include 1st trip DTC.

*2: Include 1st trip freeze frame data.

DIAGNOSTIC WORKSHEET

Description

There are many operating conditions that lead to the malfunction of engine components. A good grasp of such conditions can make troubleshooting faster and more accurate.

In general, each customer feels differently about a incident. It is important to fully understand the symptoms or conditions for a customer complaint.

Utilize a diagnostic worksheet like the one on the next page in order to organize all the information for troubleshooting.

Some conditions may cause the MIL to come on steady or blink and DTC to be detected. Examples:

- Vehicle ran out of fuel, which caused the engine to misfire.
- Fuel filler cap was left off or incorrectly screwed on, allowing fuel to evaporate into the atmosphere.

KEY POINTS

WHAT Vehicle & engine model

WHEN Date, Frequencies

WHERE..... Road conditions

HOW Operating conditions,
Weather conditions,
Symptoms

SEF907L

A

EC

C

D

E

F

G

H

I

J

K

L

M

N

O

P

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

| Priority | Detected items (DTC) | |
|----------|--|--|
| 1 | <ul style="list-style-type: none"> • U1000 U1001 CAN communication line • U1010 CAN communication • P0101 P0102 P0103 Mass air flow sensor • P0112 P0113 P0127 Intake air temperature sensor • P0117 P0118 P0125 Engine coolant temperature sensor • P0122 P0123 P0222 P0223 P1225 P1226 P2135 Throttle position sensor • P0128 Thermostat function • P0181 P0182 P0183 Fuel tank temperature sensor • P0327 P0328 Knock sensor • P0335 Crankshaft position sensor (POS) • P0340 Camshaft position sensor (PHASE) • P0460 P0461 P0462 P0463 Fuel level sensor • P0500 Vehicle speed sensor • P0605 ECM • P0643 Sensor power supply • P0705 P0850 Park/neutral position (PNP) switch • P1610 - P1615 NATS • P2122 P2123 P2127 P2128 P2138 Accelerator pedal position sensor | A EC C D E F |
| 2 | <ul style="list-style-type: none"> • P0031 P0032 Air fuel ratio (A/F) sensor 1 heater • P0037 P0038 Heated oxygen sensor 2 heater • P0075 Intake valve timing control solenoid valve • P0130 P0131 P0132 P0133 P2A00 Air fuel ratio (A/F) sensor 1 • P0137 P0138 P0139 Heated oxygen sensor 2 • P0441 EVAP control system purge flow monitoring • P0443 P0444 P0445 EVAP canister purge volume control solenoid valve • P0447 P0448 EVAP canister vent control valve • P0451 P0452 P0453 EVAP control system pressure sensor • P1217 Engine over temperature (OVERHEAT) • P1805 Brake switch • P2100 P2103 Throttle control motor relay • P2101 Electric throttle control function • P2118 Throttle control motor | G H I J |
| 3 | <ul style="list-style-type: none"> • P0011 Intake valve timing control • P0171 P0172 Fuel injection system function • P0300 - P0304 Misfire • P0420 Three way catalyst function • P0442 P0456 EVAP control system (SMALL LEAK, VERY SMALL LEAK) • P0455 EVAP control system (GROSS LEAK) • P0506 P0507 Idle speed control system • P0710 P0715 P0720 P0725 P0731 P0732 P0733 P0734 P0740 P0744 P0745 P0746 P0750 P0755 P0776 P0778 P0840 P0845 P1705 P1740 P1760 P1777 P1778 A/T or CVT related sensors, solenoid valves and switches • P1148 Closed loop control • P1421 Cold start control • P1564 ASCD steering switch • P1572 ASCD brake switch • P1574 ASCD vehicle speed sensor • P1715 Turbine revolution sensor (A/T), Primary speed sensor (CVT) • P2119 Electric throttle control actuator | K L M N |

Fail-Safe Chart

INFOID:000000001702588

When the DTC listed below is detected, the ECM enters fail-safe mode and the MIL lights up.

| DTC No. | Detected items | Engine operating condition in fail-safe mode |
|----------------|------------------------------|---|
| P0102 P0103 | Mass air flow sensor circuit | Engine speed will not rise more than 2,400 rpm due to the fuel cut. |

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

| DTC No. | Detected items | Engine operating condition in fail-safe mode | |
|---|---|--|---|
| P0117 P0118 | Engine coolant temperature sensor circuit | Engine coolant temperature will be determined by ECM based on the time after turning ignition switch ON or START. CONSULT-II displays the engine coolant temperature decided by ECM. | |
| | | Condition | Engine coolant temperature decided (CONSULT-II display) |
| | | Just as ignition switch is turned ON or START | 40°C (104°F) |
| | | More than approx. 4 minutes after ignition ON or START | 80°C (176°F) |
| | | Except as shown above | 40 - 80°C (104 - 176°F) (Depends on the time) |
| | | When the fail-safe system for engine coolant temperature sensor is activated, the cooling fan operates while engine is running. | |
| P0122 P0123 P0222 P0223 P2135 | Throttle position sensor | The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor. | |
| P0643 | Sensor power supply | ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring. | |
| P2100 P2103 | Throttle control relay | ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring. | |
| P2101 | Electric throttle control function | ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring. | |
| P2118 | Throttle control motor | ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring. | |
| P2119 | Electric throttle control actuator | (When electric throttle control actuator does not function properly due to the return spring malfunction:) ECM controls the electric throttle actuator by regulating the throttle opening around the idle position. The engine speed will not rise more than 2,000 rpm. | |
| | | (When throttle valve opening angle in fail-safe mode is not in specified range:) ECM controls the electric throttle control actuator by regulating the throttle opening to 20 degrees or less. | |
| | | (When ECM detects the throttle valve is stuck open:) While the vehicle is driving, it slows down gradually by fuel cut. After the vehicle stops, the engine stalls. The engine can restart in N or P (A/T, CVT), Neutral (M/T) position, and engine speed will not exceed 1,000 rpm or more. | |
| P2122 P2123 P2127 P2128 P2138 | Accelerator pedal position sensor | The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor. | |

- When there is an open circuit on MIL circuit, the ECM cannot warn the driver by lighting up MIL when there is malfunction on engine control system.
Therefore, when electrical controlled throttle and part of ECM related diagnoses are continuously detected as NG for 5 trips, ECM warns the driver that engine control system malfunctions and MIL circuit is open by means of operating fail-safe function.
The fail-safe function also operates when above diagnoses except MIL circuit are detected and demands the driver to repair the malfunction.

| | |
|--|--|
| Engine operating condition in fail-safe mode | Engine speed will not rise more than 2,500 rpm due to the fuel cut |
|--|--|

Symptom Matrix Chart

INFOID:000000001702589

SYSTEM — BASIC ENGINE CONTROL SYSTEM

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

| | | SYMPTOM | | | | | | | | | | | | Reference page | |
|---|---------------------------------------|----------------------------------|--------------|------------------------------|------------------------|---------------------------------|--------------------|--------------------|------------------|------------------------|----------------------------------|----------------------------|---------------------------|----------------|--|
| | | HARD/NO START/RESTART (EXCP. HA) | ENGINE STALL | HESITATION/SURGING/FLAT SPOT | SPARK KNOCK/DETONATION | LACK OF POWER/POOR ACCELERATION | HIGH IDLE/LOW IDLE | ROUGH IDLE/HUNTING | IDLING VIBRATION | SLOW/NO RETURN TO IDLE | OVERHEATS/WATER TEMPERATURE HIGH | EXCESSIVE FUEL CONSUMPTION | EXCESSIVE OIL CONSUMPTION | | BATTERY DEAD (UNDER CHARGE) |
| Warranty symptom code | | AA | AB | AC | AD | AE | AF | AG | AH | AJ | AK | AL | AM | HA | |
| Fuel | Fuel pump circuit | 1 | 1 | 2 | 3 | 2 | | 2 | 2 | | | 3 | | 2 | EC-526 |
| | Fuel pressure regulator system | 3 | 3 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | | 4 | | | EC-78 |
| | Fuel injector circuit | 1 | 1 | 2 | 3 | 2 | | 2 | 2 | | | 2 | | | EC-521 |
| | Evaporative emission system | 3 | 3 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | | | EC-31 |
| Air | Positive crankcase ventilation system | 3 | 3 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | | 4 | 1 | | EC-43 |
| | Incorrect idle speed adjustment | | | | | | 1 | 1 | 1 | 1 | | 1 | | | EC-69 |
| | Electric throttle control actuator | 1 | 1 | 2 | 3 | 3 | 2 | 2 | 2 | 2 | | 2 | | 2 | EC-461 , EC-472 |
| Ignition | Incorrect ignition timing adjustment | 3 | 3 | 1 | 1 | 1 | | 1 | 1 | | | 1 | | | EC-69 |
| | Ignition circuit | 1 | 1 | 2 | 2 | 2 | | 2 | 2 | | | 2 | | | EC-531 |
| Main power supply and ground circuit | | 2 | 2 | 3 | 3 | 3 | | 3 | 3 | | 2 | 3 | | | EC-137 |
| Mass air flow sensor circuit | | 1 | | | 2 | | | | | | | | | | EC-167 , EC-175 |
| Engine coolant temperature sensor circuit | | | | | 3 | | | | | | | | | | 3 |
| Air fuel ratio (A/F) sensor 1 circuit | | | 1 | 2 | 3 | 2 | | 2 | 2 | | | 2 | | | EC-206 , EC-213 , EC-219 , EC-225 , EC-500 |
| Throttle position sensor circuit | | | | | | | 2 | | | 2 | | | | | EC-192 , EC-278 , EC-426 , EC-428 , EC-487 |
| Accelerator pedal position sensor circuit | | | | 3 | 2 | 1 | | | | | | | | | EC-400 , EC-474 , EC-480 , EC-493 |
| Knock sensor circuit | | | | 2 | | | | | | | | 3 | | | EC-291 |
| Crankshaft position sensor (POS) circuit | | 2 | 2 | | | | | | | | | | | | EC-295 |
| Camshaft position sensor (PHASE) circuit | | 3 | 2 | | | | | | | | | | | | EC-302 |
| Vehicle speed signal circuit | | | 2 | 3 | | 3 | | | | | | 3 | | | EC-391 |
| ECM | | 2 | 2 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | | | EC-397 |

A

EC

C

D

E

F

G

H

I

J

K

L

M

N

O

P

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

| | SYMPTOM | | | | | | | | | | | | | Reference page |
|--|----------------------------------|--------------|------------------------------|------------------------|---------------------------------|--------------------|--------------------|------------------|------------------------|----------------------------------|----------------------------|---------------------------|-----------------------------|------------------------|
| | HARD/NO START/RESTART (EXCP. HA) | ENGINE STALL | HESITATION/SURGING/FLAT SPOT | SPARK KNOCK/DETONATION | LACK OF POWER/POOR ACCELERATION | HIGH IDLE/LOW IDLE | ROUGH IDLE/HUNTING | IDLING VIBRATION | SLOW/NO RETURN TO IDLE | OVERHEATS/WATER TEMPERATURE HIGH | EXCESSIVE FUEL CONSUMPTION | EXCESSIVE OIL CONSUMPTION | BATTERY DEAD (UNDER CHARGE) | |
| Warranty symptom code | AA | AB | AC | AD | AE | AF | AG | AH | AJ | AK | AL | AM | HA | |
| Intake valve timing control solenoid valve circuit | | 3 | 2 | | 1 | 3 | 2 | 2 | 3 | | 3 | | | EC-162 |
| Park/neutral position (PNP) switch circuit | | | 3 | | 3 | | 3 | 3 | | | 3 | | | EC-405 |
| Refrigerant pressure sensor circuit | | 2 | | | | 3 | | | 3 | | 4 | | | EC-541 |
| Electrical load signal circuit | | | | | | | 3 | | | | | | | EC-519 |
| Air conditioner circuit | 2 | 2 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | | 3 | | 2 | MTC-22 |
| ABS actuator and electric unit (control unit) | | | 4 | | | | | | | | | | | BRC-8 |

1 - 6: The numbers refer to the order of inspection.

(continued on next page)

SYSTEM — ENGINE MECHANICAL & OTHER

| | SYMPTOM | | | | | | | | | | | | | Reference page | |
|-----------------------|---|--------------|------------------------------|------------------------|---------------------------------|--------------------|--------------------|------------------|------------------------|----------------------------------|----------------------------|---------------------------|-----------------------------|-----------------------|---|
| | HARD/NO START/RESTART (EXCP. HA) | ENGINE STALL | HESITATION/SURGING/FLAT SPOT | SPARK KNOCK/DETONATION | LACK OF POWER/POOR ACCELERATION | HIGH IDLE/LOW IDLE | ROUGH IDLE/HUNTING | IDLING VIBRATION | SLOW/NO RETURN TO IDLE | OVERHEATS/WATER TEMPERATURE HIGH | EXCESSIVE FUEL CONSUMPTION | EXCESSIVE OIL CONSUMPTION | BATTERY DEAD (UNDER CHARGE) | | |
| Warranty symptom code | AA | AB | AC | AD | AE | AF | AG | AH | AJ | AK | AL | AM | HA | | |
| Fuel | Fuel tank | 5 | | | | | | | | | | | | FL-9 | |
| | Fuel piping | | 5 | 5 | 5 | | 5 | 5 | | | 5 | | | EM-33 | |
| | Vapor lock | | | | | | | | | | | | | | — |
| | Valve deposit | | | | | | | | | | | | | | — |
| | Poor fuel (Heavy weight gasoline, Low octane) | | 5 | | 5 | 5 | 5 | | 5 | 5 | | | 5 | | — |

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

| | | SYMPTOM | | | | | | | | | | | | Reference page | |
|-----------------------|--|----------------------------------|--------------|------------------------------|------------------------|---------------------------------|--------------------|--------------------|------------------|------------------------|----------------------------------|----------------------------|---------------------------|-----------------------|---|
| | | HARD/NO START/RESTART (EXCP. HA) | ENGINE STALL | HESITATION/SURGING/FLAT SPOT | SPARK KNOCK/DETONATION | LACK OF POWER/POOR ACCELERATION | HIGH IDLE/LOW IDLE | ROUGH IDLE/HUNTING | IDLING VIBRATION | SLOW/NO RETURN TO IDLE | OVERHEATS/WATER TEMPERATURE HIGH | EXCESSIVE FUEL CONSUMPTION | EXCESSIVE OIL CONSUMPTION | | BATTERY DEAD (UNDER CHARGE) |
| Warranty symptom code | | AA | AB | AC | AD | AE | AF | AG | AH | AJ | AK | AL | AM | HA | |
| Air | Air duct | | | | | | | | | | | | | | EM-16 |
| | Air cleaner | | | | | | | | | | | | | | EM-16 |
| | Air leakage from air duct (Mass air flow sensor — electric throttle control actuator) | | 5 | 5 | | 5 | | 5 | 5 | | | 5 | | | EM-16 |
| | Electric throttle control actuator | 5 | | | 5 | | 5 | | | 5 | | | | | EM-18 |
| | Air leakage from intake manifold/ Collector/Gasket | | | | | | | | | | | | | | EM-18 |
| Cranking | Battery | 1 | 1 | 1 | | 1 | | | 1 | 1 | | | | 1 | SC-4 |
| | Generator circuit | | | | | | | | | | | | | | SC-20 |
| | Starter circuit | 3 | | | | | | | | | | | | | SC-8 |
| | Signal plate | 6 | | | | | | | | | | 1 | | | EM-76 |
| | Park/neutral position (PNP) switch | 4 | | | | | | | | | | | | | MT-12 , AT-86 or CVT-65 |
| Engine | Cylinder head | 5 | 5 | 5 | 5 | 5 | | 5 | 5 | | | 5 | | | EM-62 |
| | Cylinder head gasket | | | | | | | | | | 4 | | 3 | | |
| | Cylinder block | | | | | | | | | | | | | | |
| | Piston | | | | | | | | | | | | 4 | | |
| | Piston ring | | | | | | | | | | | | | | |
| | Connecting rod | 6 | 6 | 6 | 6 | 6 | | 6 | 6 | | | 6 | | | EM-76 |
| | Bearing | | | | | | | | | | | | | | |
| | Crankshaft | | | | | | | | | | | | | | |
| Valve mechanism | Timing chain | | | | | | | | | | | | | | EM-37 |
| | Camshaft | | | | | | | | | | | | | | EM-47 |
| | Intake valve timing control | 5 | 5 | 5 | 5 | 5 | | 5 | 5 | | | 5 | | EM-37 | |
| | Intake valve | | | | | | | | | | | | | | |
| | Exhaust valve | | | | | | | | | | | | 3 | | EM-62 |
| Exhaust | Exhaust manifold/Tube/Muffler/ Gasket | 5 | 5 | 5 | 5 | 5 | | 5 | 5 | | | 5 | | | EM-21 , EX-4 |
| | Three way catalyst | | | | | | | | | | | | | | |
| Lubrication | Oil pan/Oil strainer/Oil pump/Oil filter/Oil gallery | 5 | 5 | 5 | 5 | 5 | | 5 | 5 | | | 5 | | | EM-24 , LU-9 |
| | Oil level (Low)/Filthy oil | | | | | | | | | | | | | | LU-6 |

A

EC

C

D

E

F

G

H

I

J

K

L

M

N

O

P

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

| | | SYMPTOM | | | | | | | | | | | | Reference page | |
|---|--|----------------------------------|--------------|------------------------------|------------------------|---------------------------------|--------------------|--------------------|------------------|------------------------|----------------------------------|----------------------------|---------------------------|----------------|-----------------------------|
| | | HARD/NO START/RESTART (EXCP. HA) | ENGINE STALL | HESITATION/SURGING/FLAT SPOT | SPARK KNOCK/DETONATION | LACK OF POWER/POOR ACCELERATION | HIGH IDLE/LOW IDLE | ROUGH IDLE/HUNTING | IDLING VIBRATION | SLOW/NO RETURN TO IDLE | OVERHEATS/WATER TEMPERATURE HIGH | EXCESSIVE FUEL CONSUMPTION | EXCESSIVE OIL CONSUMPTION | | BATTERY DEAD (UNDER CHARGE) |
| Warranty symptom code | | AA | AB | AC | AD | AE | AF | AG | AH | AJ | AK | AL | AM | HA | |
| Cooling | Radiator/Hose/Radiator filler cap | | | | | | | | | | | | | | CO-11 |
| | Thermostat | | | | | | | | | 5 | | | | | CO-17 |
| | Water pump | | | | | | | | | | | | | | CO-16 |
| | Water gallery | 5 | 5 | 5 | 5 | 5 | | 5 | 5 | | 4 | 5 | | | CO-7 |
| | Cooling fan | | | | | | | | | | | | | | CO-14 |
| | Coolant level (Low)/Contaminated coolant | | | | | | | | | | 5 | | | | CO-8 |
| NVIS (NISSAN Vehicle Immobilizer System-NATS) | | 1 | 1 | | | | | | | | | | | | BL-210 |


1 - 6: The numbers refer to the order of inspection.

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

Engine Control Component Parts Location

INFOID:000000001702590






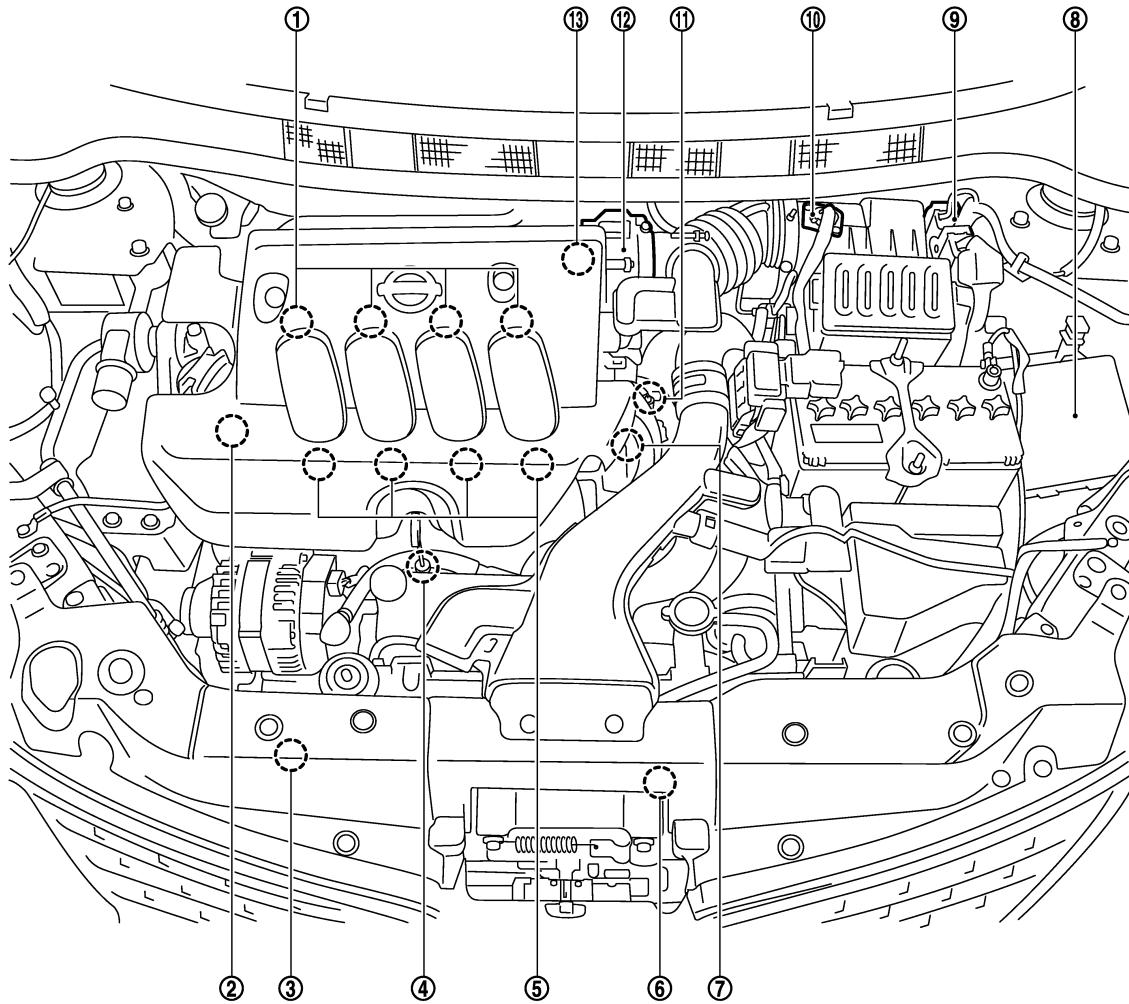


PBIB3261E

- | | | |
|---|---|---|
| 1. Ignition coil (with power transistor) and spark plug | 2. Intake valve timing control solenoid valve | 3. Refrigerant pressure sensor |
| 4. Knock sensor | 5. Fuel injector | 6. Cooling fan motor |
| 7. Camshaft position sensor (PHASE) | 8. IPDM E/R | 9. ECM |
| 10. Mass air flow sensor (with intake air temperature sensor) | 11. Engine coolant temperature sensor | 12. Electric throttle control actuator (with built-in throttle position sensor, throttle control motor) |
| 13. EVAP canister purge volume control solenoid valve | | |

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

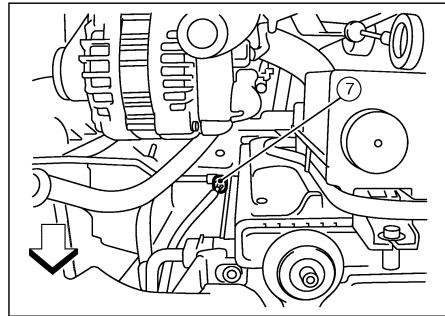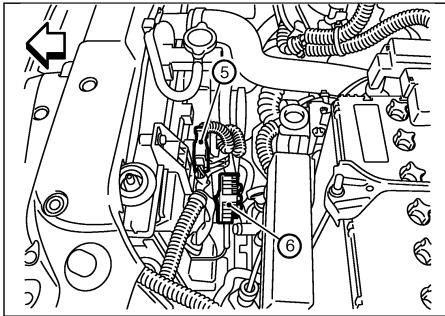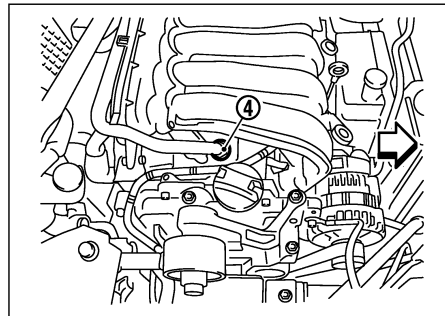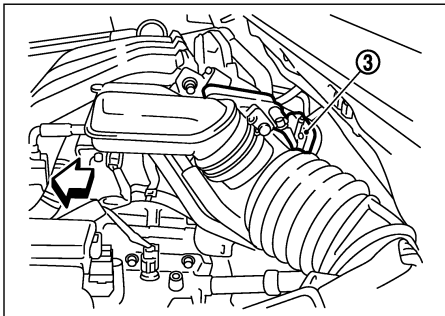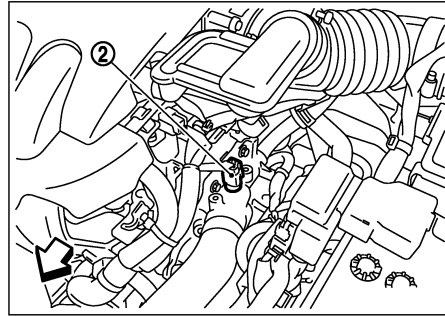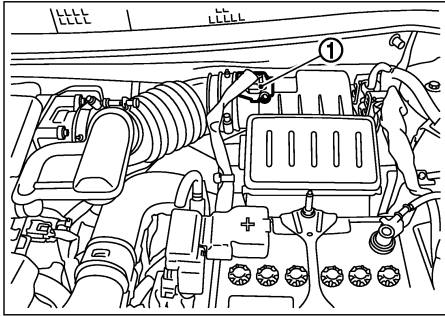

BBIA0724E

↶ : Vehicle front

- | | | |
|---|--------------------------------------|--|
| 1. Mass air flow sensor (with intake air temperature sensor) | 2. Engine coolant temperature sensor | 3. Electric throttle control actuator (with built in throttle position sensor, throttle control motor) |
| 4. PCV valve | 5. Cooling fan motor | 6. Resistor |
| 7. Refrigerant pressure sensor | | |

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

A

EC

C

D

E

F

G

H

I

J

K










L

M

N

O

P

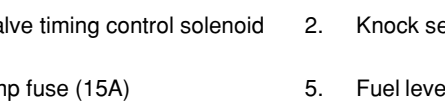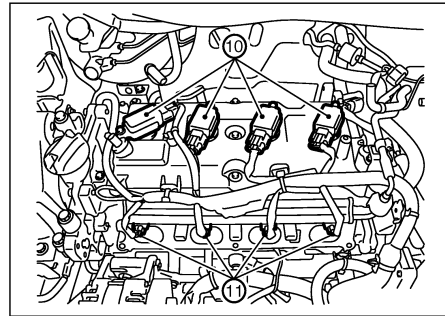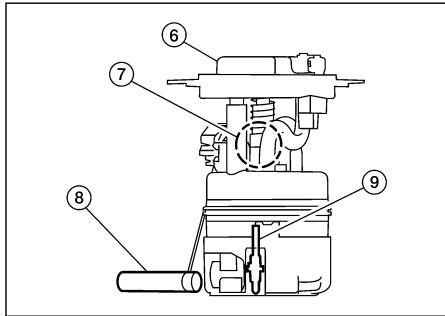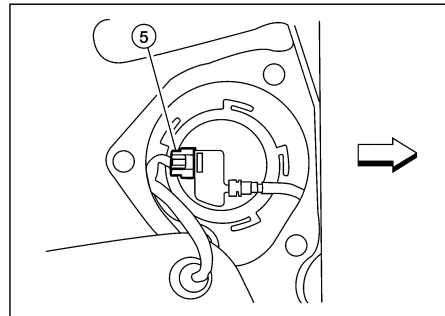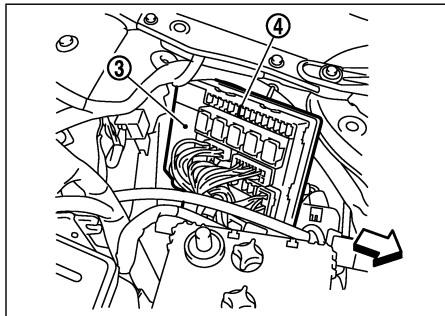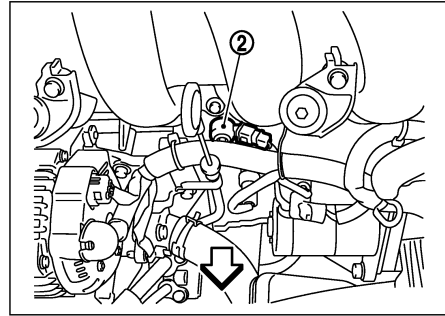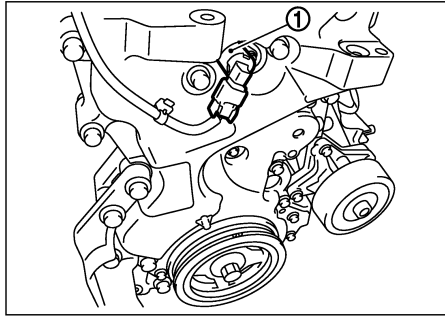

← : Vehicle front

- 1. Intake valve timing control solenoid valve
- 4. Fuel pump fuse (15A)
- 7. Fuel pressure regulator
- 10. Ignition coil (with power transistor) and spark plug









- 2. Knock sensor
- 5. Fuel level sensor unit and fuel pump harness connector (view with inspection hole cover removed)
- 8. Fuel level sensor
- 11. Fuel injector

- 3. IPDM E/R
- 6. Fuel level sensor unit and fuel pump harness connector (view with inspection hole cover removed)
- 9. Fuel tank temperature sensor

BBIA0725E

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

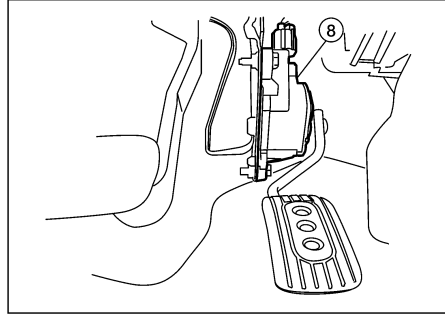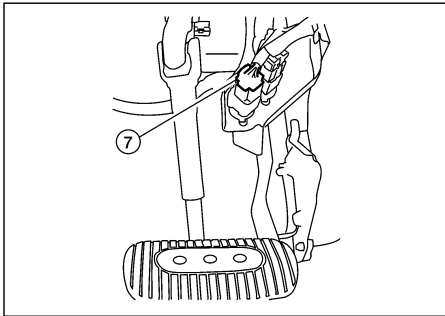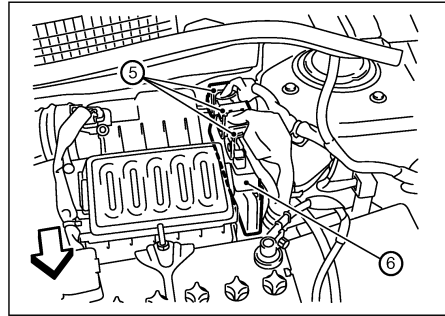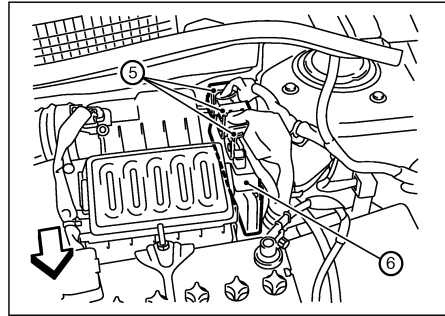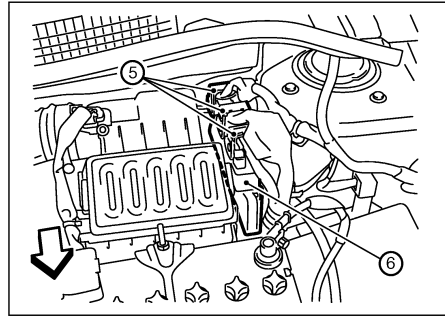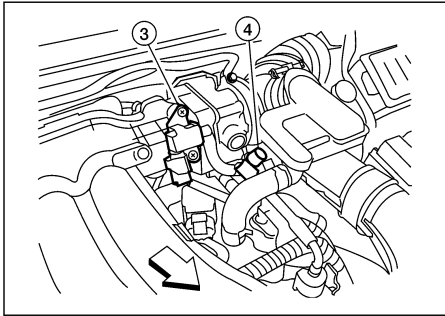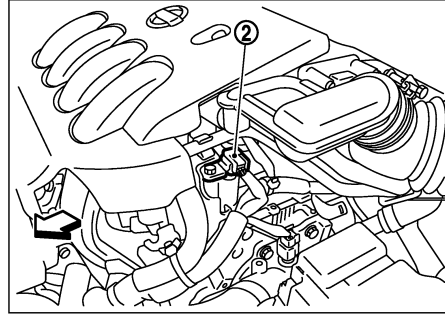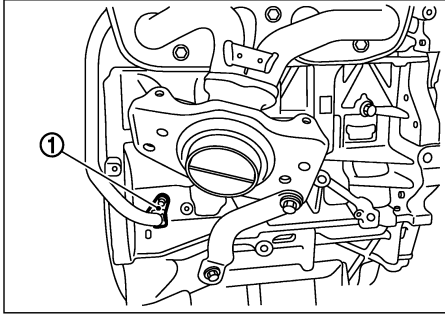

BBIA0727E

↩: Vehicle front

- | | | |
|-------------------------------------|--------------------------------------|--|
| 1. Crankshaft position sensor (POS) | 2. Camshaft position sensor (PHASE) | 3. EVAP canister purge volume control solenoid valve |
| 4. EVAP service port | 5. ECM harness connector | 6. ECM |
| 7. Stop lamp switch | 8. Accelerator pedal position sensor | |

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

A

EC

C

D

E

F

G

H

I

J

K



L

M

N

O

P

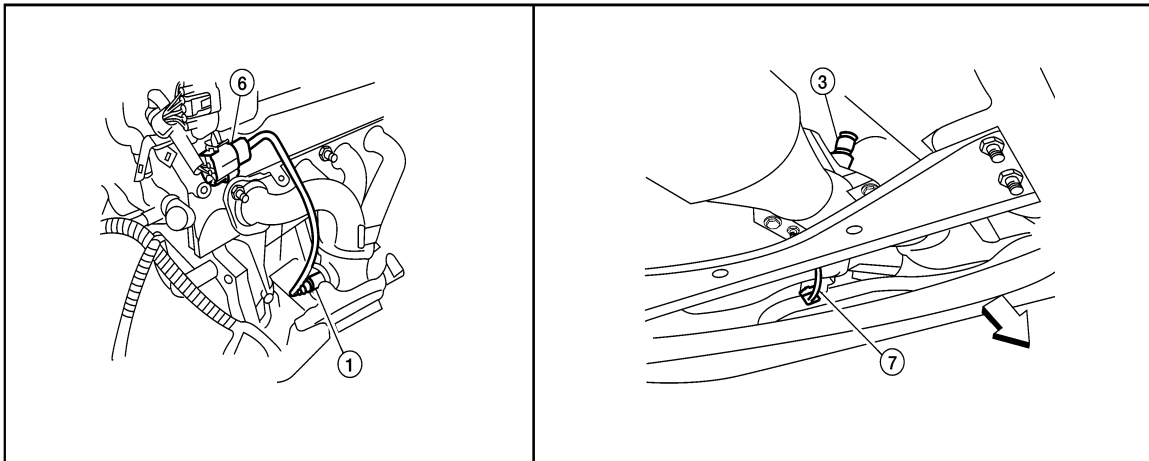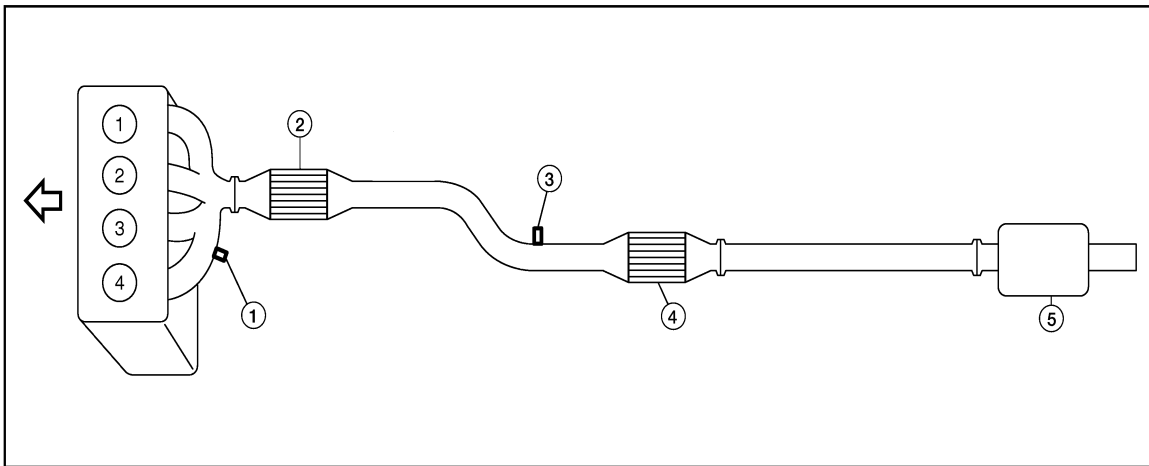





BBIA0726E

⇐ : Vehicle front

- | | | |
|---|----------------------------------|--|
| 1. Air fuel ratio (A/F) sensor 1 | 2. Three way catalyst (Manifold) | 3. Heated oxygen sensor 2 |
| 4. Three way catalyst (Under floor) | 5. Muffler | 6. Air fuel ratio (A/F) sensor 1 harness connector |
| 7. Heated oxygen sensor 2 harness connector | | |

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

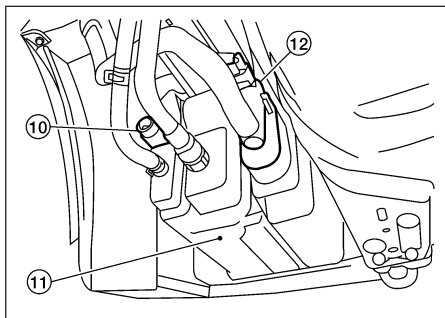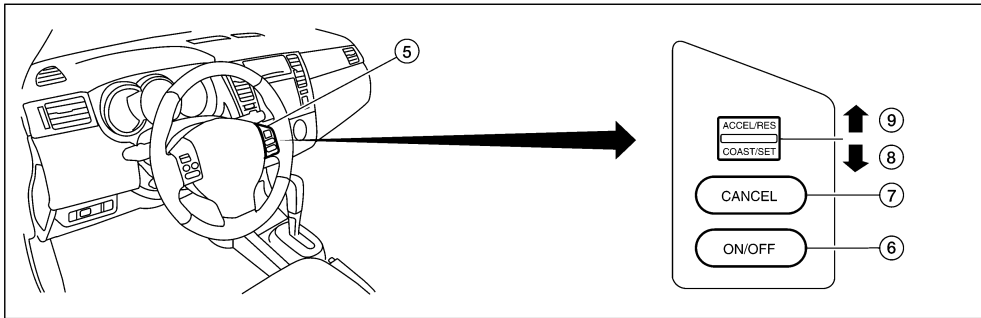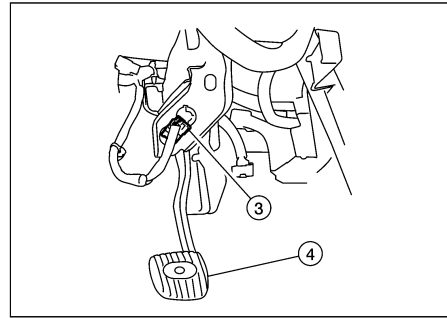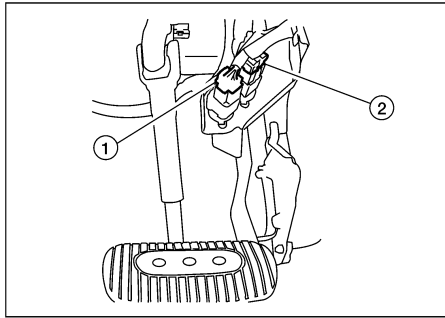

B8IA0728E


- | | | |
|---|-------------------------|--------------------------------------|
| 1. Stop lamp switch | 2. ASCD brake switch | 3. ASCD clutch switch |
| 4. Clutch pedal | 5. ASCD steering switch | 6. MAIN switch |
| 7. CANCEL switch | 8. SET/COAST switch | 9. RESUME/ACCELERATOR switch |
| 10. EVAP control system pressure sensor | 11. EVAP canister | 12. EVAP canister vent control valve |

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

Vacuum Hose Drawing

INFOID:000000001702591

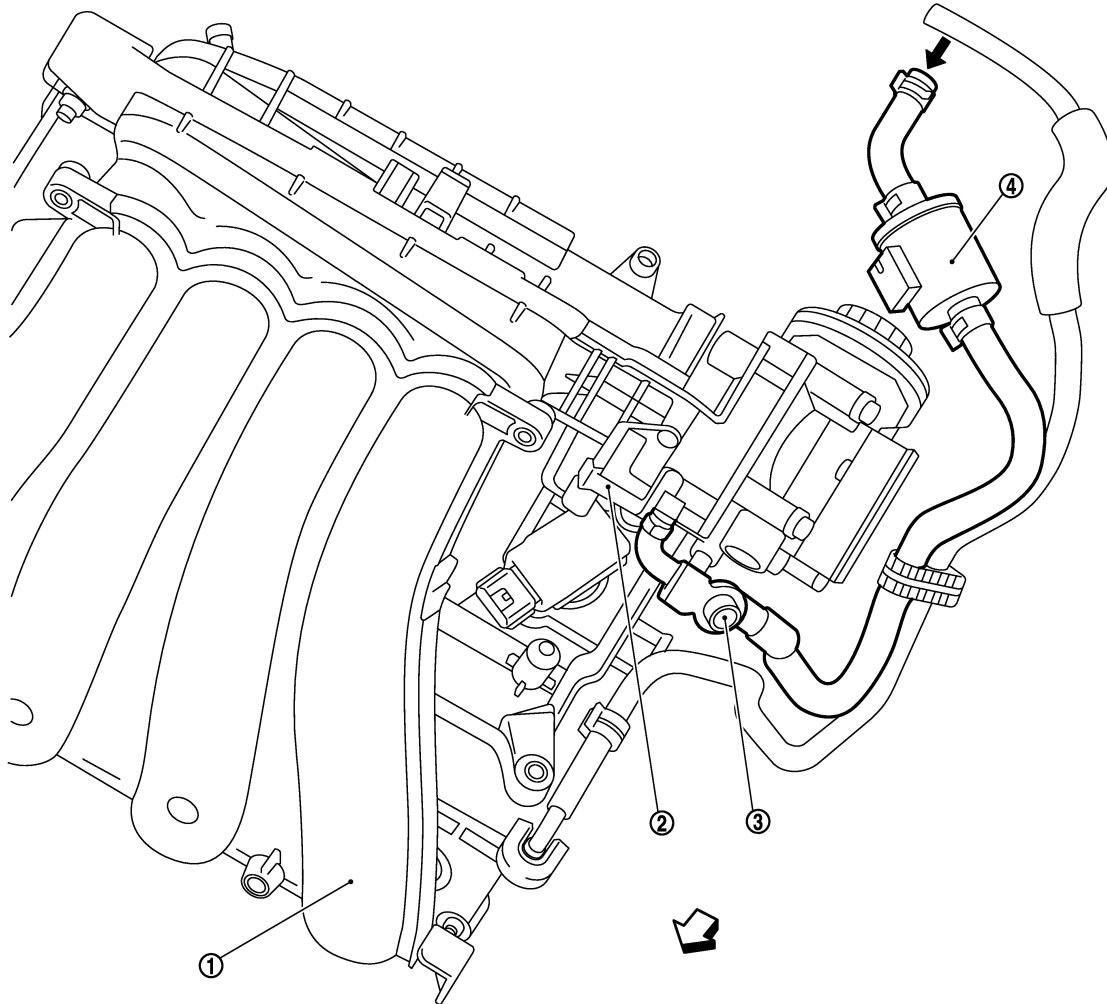

PBIB3330E

↔ : Vehicle front

← : From EVAP canister

1. Intake manifold

2. EVAP canister purge volume control solenoid valve

3. EVAP service port

4. EVAP purge resonator

NOTE:

Do not use soapy water or any type of solvent while installing vacuum hoses or purge hoses.

Refer to [EC-22, "Schematic"](#) for Vacuum Control System.

A

EC

C

D

E

F

G

H

I

J

K

L

M

N

O


P

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

Circuit Diagram


INFOID:000000001702592

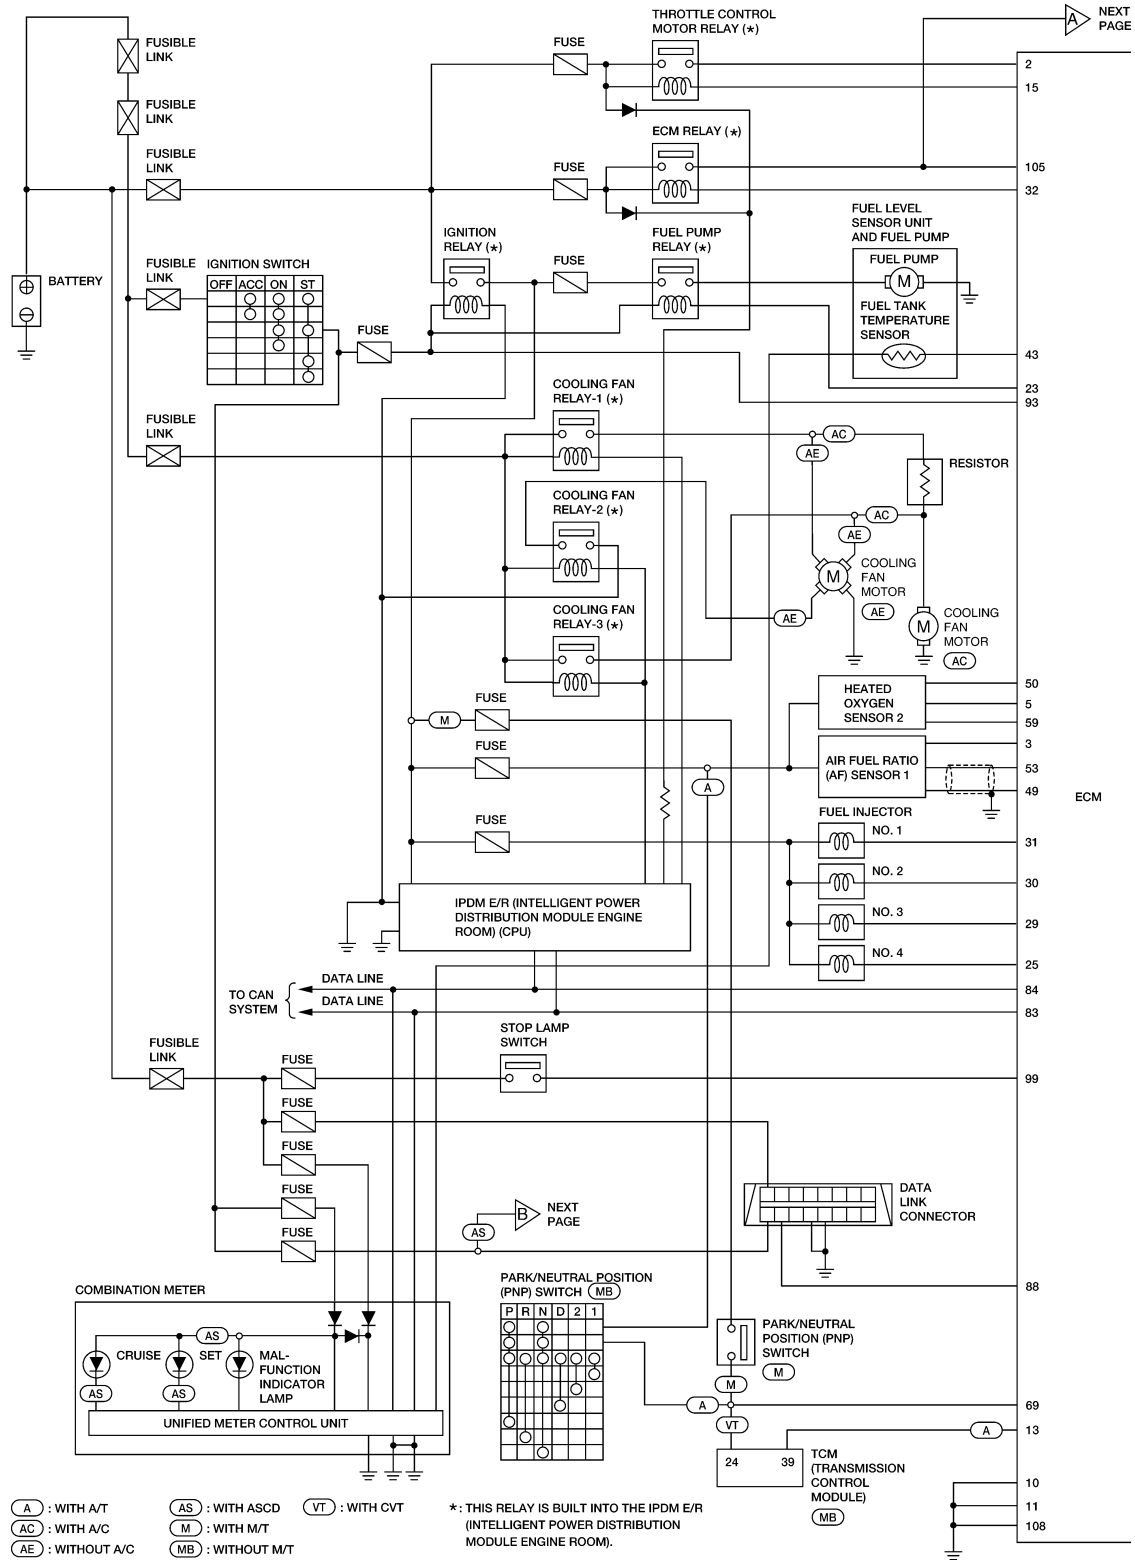

BBWA2996E

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

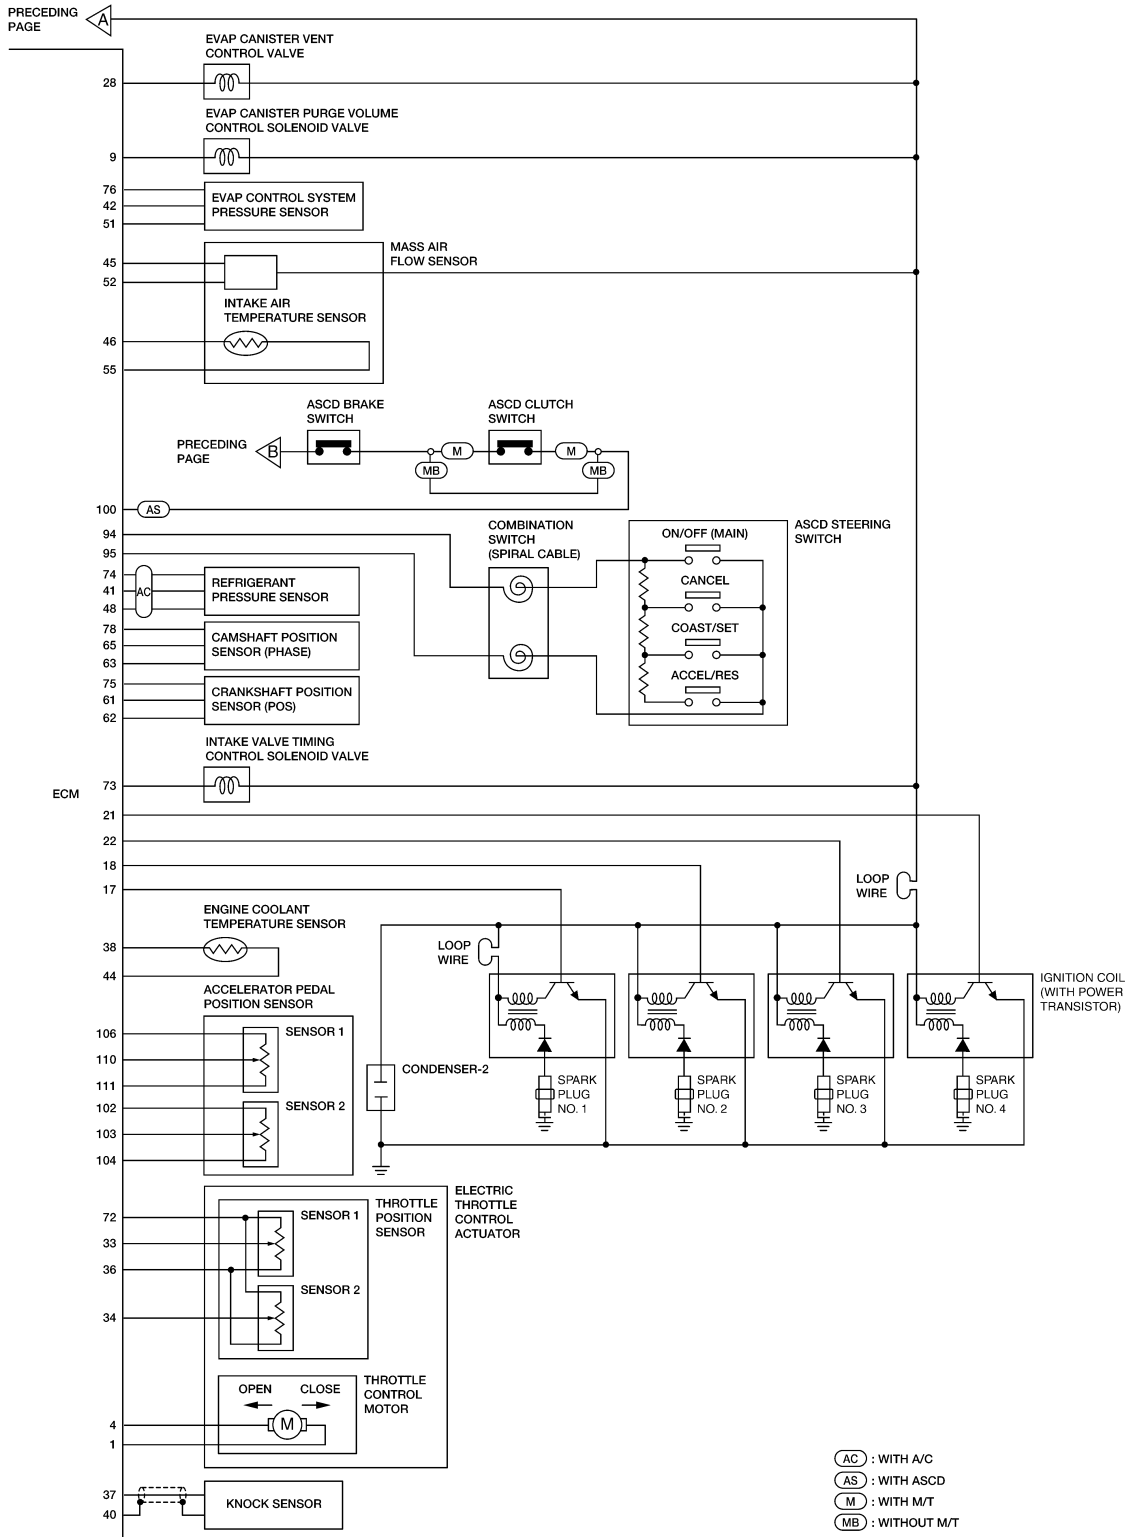

AWBWA0033G


A
EC
C
D
E
F
G
H
I
J
K
L
M
N
O
P

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

ECM Harness Connector Terminal Layout

INFOID:000000001702593

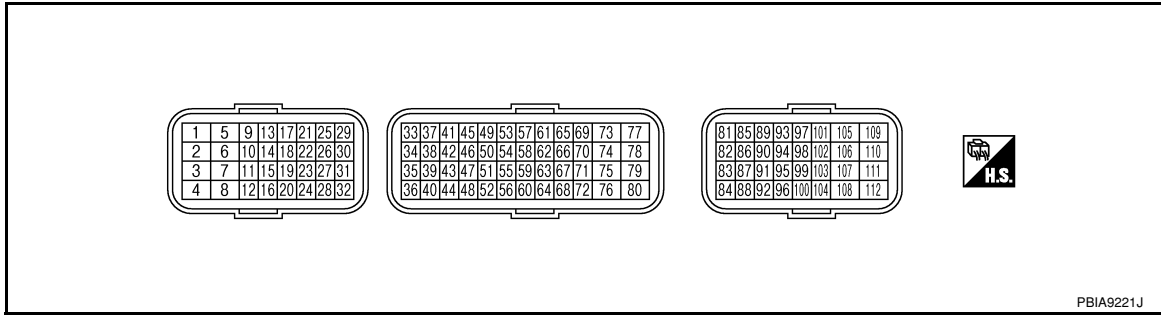


PBIA9221J

ECM Terminal and Reference Value

INFOID:000000001702594

PREPARATION

- ECM (1) is located in the engine room left side near battery.
 - ↔: Vehicle front

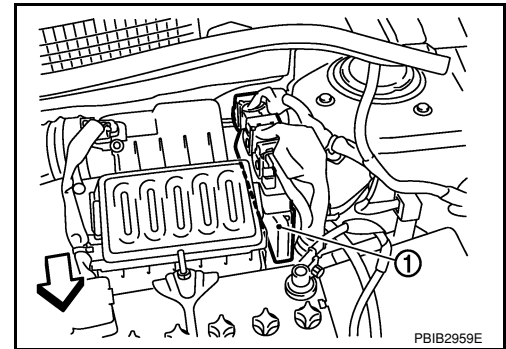

PBIB2959E

ECM INSPECTION TABLE

Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECMs transistor. Use a ground other than ECM terminals, such as the ground.







| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------------|---------------|-------------------------------------|---|--|
| 1 | L | Throttle control motor (Open) | [Ignition switch: ON] <ul style="list-style-type: none"> Engine stopped Shift lever: D (A/T, CVT), 1st (M/T) Accelerator pedal: Fully depressed | Approximately 3.2V★ <small>5V/Div 1ms/Div</small> |
| 2 | SB | Throttle control motor power supply | [Ignition switch: ON] | BATTERY VOLTAGE (11 - 14V) |
| 3 | G | A/F sensor 1 heater | [Engine is running] <ul style="list-style-type: none"> Warm-up condition Idle speed (More than 140 seconds after starting engine) | Approximately 2.9 - 8.8V★ <small>10.0V/Div 50ms/Div</small> |

PBIA8150J

PBIA8148J





TROUBLE DIAGNOSIS

< SERVICE INFORMATION >
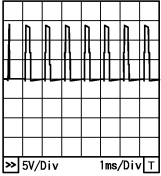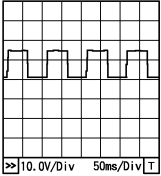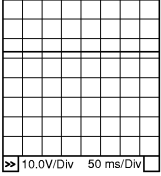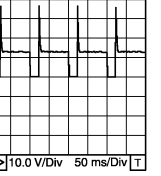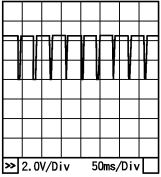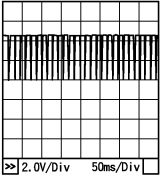
| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) | A |
|----------------------|---------------|---|--|--|----|
| 4 | P | Throttle control motor (Close) | <p>[Ignition switch: ON]</p> <ul style="list-style-type: none"> • Engine stopped • Shift lever: D (A/T, CVT), 1st (M/T) • Accelerator pedal: Fully released | <p>Approximately 1.8V★</p>  <p style="text-align: right;">PBI A8149J</p> | EC |
| 5 | G | Heated oxygen sensor 2 heater | <p>[Engine is running]</p> <ul style="list-style-type: none"> • Engine speed: Below 3,600 rpm after the following conditions are met. - Engine: After warming up - Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load. | <p>Approximately 10V★</p>  <p style="text-align: right;">PBI A8148J</p> | C |
| | | | <p>[Ignition switch: ON]</p> <ul style="list-style-type: none"> • Engine stopped <p>[Engine is running]</p> <ul style="list-style-type: none"> • Engine speed: Above 3,600 rpm. | <p>BATTERY VOLTAGE (11 - 14V)</p> | D |
| 9 | P | EVAP canister purge volume control solenoid valve | <p>[Engine is running]</p> <ul style="list-style-type: none"> • Idle speed • Accelerator pedal: Not depressed even slightly, after engine starting. | <p>BATTERY VOLTAGE (11 - 14V)★</p>  <p style="text-align: right;">PBI B0050E</p> | E |
| | | | <p>[Engine is running]</p> <ul style="list-style-type: none"> • Engine speed: About 2,000 rpm (More than 100 seconds after starting engine) | <p>Approximately 10V★</p>  <p style="text-align: right;">PBI B0520E</p> | F |
| 10 11 | B B | ECM ground | <p>[Engine is running]</p> <ul style="list-style-type: none"> • Idle speed | <p>BATTERY VOLTAGE (11 - 14V)★</p> | G |
| 13 | L | Tachometer signal | <p>[Engine is running]</p> <ul style="list-style-type: none"> • Warm-up condition • Idle speed <p>NOTE: The pulse cycle changes depending on rpm at idle.</p> | <p>3 - 5V★</p>  <p style="text-align: right;">PBI A8164J</p> | H |
| | | | <p>[Engine is running]</p> <ul style="list-style-type: none"> • Warm-up condition • Engine speed: 2,000 rpm. | <p>3 - 5V★</p>  <p style="text-align: right;">PBI A8165J</p> | I |

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >
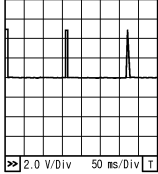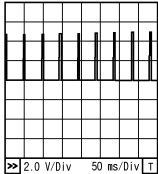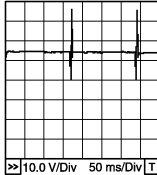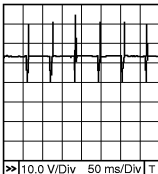
| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------------|--------------------|--|---|--|
| 15 | Y | Throttle control motor relay | [Ignition switch: OFF] | BATTERY VOLTAGE (11 - 14V) |
| | | | [Ignition switch: ON] | 0 - 1.0V |
| 17 18 21 22 | R LG G SB | Ignition signal No. 1 Ignition signal No. 2 Ignition signal No. 4 Ignition signal No. 3 | [Engine is running] • Warm-up condition • Idle speed NOTE: The pulse cycle changes depending on rpm at idle. | 0 - 0.3V★  PBIA9265J |
| | | | [Engine is running] • Warm-up condition • Engine speed: 2,500 rpm. | 0.2 - 0.5V★  PBIA9266J |
| 23 | GR | Fuel pump relay | [Ignition switch: ON] • For 1 second after turning ignition switch ON | 0 - 1.0V |
| | | | [Engine is running] • More than 1 second after turning ignition switch ON | BATTERY VOLTAGE (11 - 14V) |
| 25 29 30 31 | V Y O L | Fuel injector No. 4 Fuel injector No. 3 Fuel injector No. 2 Fuel injector No. 1 | [Engine is running] • Warm-up condition • Idle speed NOTE: The pulse cycle changes depending on rpm at idle. | BATTERY VOLTAGE (11 - 14V)★  PBIB0529E |
| | | | [Engine is running] • Warm-up condition • Engine speed: 2,000 rpm | BATTERY VOLTAGE (11 - 14V)★  PBIA4943J |
| 28 | W | EVAP canister vent control valve | [Ignition switch: ON] | BATTERY VOLTAGE (11 - 14V) |
| 32 | P | ECM relay (Self shut-off) | [Engine is running] [Ignition switch: OFF] • For a few seconds after turning ignition switch OFF | 0 - 1.0V |
| | | | [Ignition switch: OFF] • More than a few seconds after turning ignition switch OFF | BATTERY VOLTAGE (11 - 14V) |



TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) | A |
|----------------------|---------------|---|---|---|----|
| 33 | LG | Throttle position sensor 1 | [Ignition switch: ON] • Engine stopped • Shift lever: D (A/T, CVT), 1st (M/T) • Accelerator pedal: Fully released | More than 0.36V | EC |
| | | | [Ignition switch: ON] • Engine stopped • Shift lever: D (A/T, CVT), 1st (M/T) • Accelerator pedal: Fully depressed | Less than 4.75V | C |
| 34 | O | Throttle position sensor 2 | [Ignition switch: ON] • Engine stopped • Shift lever: D (A/T, CVT), 1st (M/T) • Accelerator pedal: Fully released | Less than 4.75V | D |
| | | | [Ignition switch: ON] • Engine stopped • Shift lever: D (A/T, CVT), 1st (M/T) • Accelerator pedal: Fully depressed | More than 0.36V | E |
| 36 | Y | Sensor ground (Throttle position sensor) | [Engine is running] • Warm-up condition • Idle speed | Approximately 0V | F |
| 37 | W | Knock sensor | [Engine is running] • Idle speed | Approximately 2.5V | G |
| 38 | P | Engine coolant temperature sensor | [Engine is running] | Approximately 0 - 4.8V Output voltage varies with en- gine coolant temperature. | H |
| 40 | — | Sensor ground (Knock sensor) | [Engine is running] • Warm-up condition • Idle speed | Approximately 0V | I |
| 41 | GR | Refrigerant pressure sensor | [Engine is running] • Warm-up condition • Both A/C switch and blower fan switch: ON (Compressor operates.) | 1.0 - 4.0V | J |
| 42 | V | EVAP control system pres- sure sensor | [Ignition switch: ON] | Approximately 1.8 - 4.8V | K |
| 43 | P | Fuel tank temperature sen- sor | [Engine is running] | Approximately 0 - 4.8V Output voltage varies with fuel tank temperature | L |
| 44 | B | Sensor ground (Engine coolant temperature sensor) | [Engine is running] • Warm-up condition • Idle speed | Approximately 0V | M |
| 45 | G | Mass air flow sensor | [Engine is running] • Warm-up condition • Idle speed | 0.8 - 1.1V | N |
| | | | [Engine is running] • Warm-up condition • Engine speed: 2,500 rpm | 1.4 - 1.7V | O |
| 46 | V | Intake air temperature sensor | [Engine is running] | Approximately 0 - 4.8V Output voltage varies with intake air temperature. | P |
| 48 | BR | Sensor ground (Refrigerant pressure sen- sor) | [Engine is running] • Warm-up condition • Idle speed | Approximately 0V | |
| 49 | W | A/F sensor 1 | [Engine is running] • Warm-up condition • Engine speed: 2,000 rpm | Approximately 1.8V Output voltage varies with air fuel ratio. | |




TROUBLE DIAGNOSIS
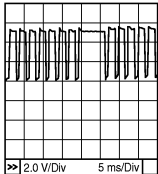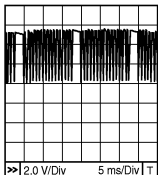
< SERVICE INFORMATION >

| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------------|---------------|---|---|--|
| 50 | W | Heated oxygen sensor 2 | [Engine is running] <ul style="list-style-type: none"> • Revving engine from idle to 3,000 rpm quickly after the following conditions are met. - Engine: After warming up - Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load. | 0 - Approximately 1.0V |
| 51 | O | Sensor ground (EVAP control system pres- sure sensor) | [Engine is running] <ul style="list-style-type: none"> • Warm-up condition • Idle speed | Approximately 0V |
| 52 | LG | Sensor ground (Mass air flow sensor) | [Engine is running] <ul style="list-style-type: none"> • Warm-up condition • Idle speed | Approximately 0V |
| 53 | B | A/F sensor 1 | [Ignition switch: ON] | Approximately 2.2V |
| 55 | O | Sensor ground (Intake air temperature sen- sor) | [Engine is running] <ul style="list-style-type: none"> • Warm-up condition • Idle speed | Approximately 0V |
| 59 | O | Sensor ground (Heated oxygen sensor 2) | [Engine is running] <ul style="list-style-type: none"> • Warm-up condition • Idle speed | Approximately 0V |
| 61 | W | Crankshaft position sensor (POS) | [Engine is running] <ul style="list-style-type: none"> • Warm-up condition • Idle speed NOTE: The pulse cycle changes depending on rpm at idle. | Approximately 4.0V★  <small>PBIB2998E</small> |
| | | | [Engine is running] <ul style="list-style-type: none"> • Engine speed: 2,000 rpm | Approximately 4.0V★  <small>PBIB2999E</small> |
| 62 | R | Sensor ground [Crankshaft position sensor (POS)] | [Engine is running] <ul style="list-style-type: none"> • Warm-up condition • Idle speed | Approximately 0V |
| 63 | BR | Sensor ground [Camshaft position sensor (PHASE)] | [Engine is running] <ul style="list-style-type: none"> • Warm-up condition • Idle speed | Approximately 0V |

TROUBLE DIAGNOSIS
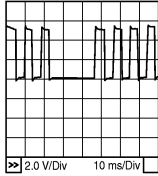
< SERVICE INFORMATION >

| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------------|---------------|--|--|--|
| 65 | G | Camshaft position sensor (PHASE) | [Engine is running] <ul style="list-style-type: none"> • Warm-up condition • Idle speed NOTE: The pulse cycle changes depending on rpm at idle. | 1.0 - 2.0V★  PBIB2986E |
| | | | [Engine is running] <ul style="list-style-type: none"> • Engine speed: 2,000 rpm. | 1.0 - 2.0V★  PBIB2987E |
| 69 | L | Park/neutral position (PNP) switch | [Ignition switch: ON] <ul style="list-style-type: none"> • Shift lever: P or N (A/T, CVT), Neutral (M/T) | BATTERY VOLTAGE (11 - 14V) |
| | | | [Ignition switch: ON] <ul style="list-style-type: none"> • Except above | Approximately 0V |
| 72 | V | Sensor power supply (Throttle position sensor) | [Ignition switch: ON] | Approximately 5V |
| 73 | P | Intake valve timing control solenoid valve | [Engine is running] <ul style="list-style-type: none"> • Warm-up condition • Idle speed | BATTERY VOLTAGE (11 - 14V) |
| | | | [Engine is running] <ul style="list-style-type: none"> • Warm-up condition • When revving engine up to 2,000 rpm quickly | 7 - 10V★  PBIA4937J |
| 74 | W | Sensor power supply (Refrigerant pressure sensor) | [Ignition switch: ON] | Approximately 5V |
| 75 | BR | Sensor power supply [Crankshaft position sensor (POS)] | [Ignition switch: ON] | Approximately 5V |
| 76 | W | EVAP control system pressure sensor power supply | [Ignition switch: ON] | Approximately 5V |
| 78 | O | Sensor power supply [Camshaft position sensor (PHASE)] | [Ignition switch: ON] | Approximately 5V |
| 83 | P | CAN communication line | — | — |
| 84 | L | CAN communication line | — | — |
| 88 | LG | DATA link connector | [Ignition switch: ON] <ul style="list-style-type: none"> • CONSULT-II or GST: Disconnected. | Approximately 10.5V |
| 93 | O | Ignition switch | [Ignition switch: OFF] | 0V |
| | | | [Ignition switch: ON] | BATTERY VOLTAGE (11 - 14V) |

A

EC

C

D

E

F

G

H

I

J

K

L

M

N

O

P

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------------|---------------|--|--|-------------------------------|
| 94 | R | ASCD steering switch | [Ignition switch: ON] • ASCD steering switch: OFF | Approximately 4V |
| | | | [Ignition switch: ON] • MAIN switch: Pressed | Approximately 0V |
| | | | [Ignition switch: ON] • CANCEL switch: Pressed | Approximately 1V |
| | | | [Ignition switch: ON] • RESUME/ACCELERATE switch: Pressed | Approximately 3V |
| | | | [Ignition switch: ON] • SET/COAST switch: Pressed | Approximately 2V |
| 95 | B | Sensor ground (ASCD steering switch) | [Engine is running] • Warm-up condition • Idle speed | Approximately 0V |
| 99 | R | Stop lamp switch | [Ignition switch: OFF] • Brake pedal: Fully released | Approximately 0V |
| | | | [Ignition switch: OFF] • Brake pedal: Slightly depressed | BATTERY VOLTAGE (11 - 14V) |
| 100 | G | ASCD brake switch | [Ignition switch: ON] • Brake pedal: Slightly depressed (A/T, CVT) • Brake pedal and/or clutch pedal: Slightly depressed (M/T) | Approximately 0V |
| | | | [Ignition switch: ON] • Brake pedal: Fully released (A/T, CVT) • Brake pedal and clutch pedal: Fully released (M/T) | BATTERY VOLTAGE (11 - 14V) |
| 102 | SB | Sensor power supply (Accelerator pedal position sensor 2) | [Ignition switch: ON] | Approximately 5V |
| 103 | GR | Accelerator pedal position sensor 2 | [Ignition switch: ON] • Engine stopped • Accelerator pedal: Fully released | 0.3 - 0.6V |
| | | | [Ignition switch: ON] • Engine stopped • Accelerator pedal: Fully depressed | 1.95 - 2.4V |
| 104 | Y | Sensor ground (Accelerator pedal position sensor 2) | [Engine is running] • Warm-up condition • Idle speed | Approximately 0V |
| 105 | G | Power supply for ECM | [Ignition switch: ON] | BATTERY VOLTAGE (11 - 14V) |
| 106 | P | Sensor power supply (Accelerator pedal position sensor 1) | [Ignition switch: ON] | Approximately 5V |
| 108 | B | ECM ground | [Engine is running] • Idle speed | Body ground |
| 110 | G | Accelerator pedal position sensor 1 | [Ignition switch: ON] • Engine stopped • Accelerator pedal: Fully released | 0.6 - 0.9V |
| | | | [Ignition switch: ON] • Engine stopped • Accelerator pedal: Fully depressed | 3.9 - 4.7V |
| 111 | R | Sensor ground (Accelerator pedal position sensor 1) | [Engine is running] • Warm-up condition • Idle speed | Approximately 0V |

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

CONSULT-II Function (ENGINE)

INFOID:000000001702595

FUNCTION

| Diagnostic test mode | Function |
|--------------------------------|--|
| Work support | This mode enables a technician to adjust some devices faster and more accurately by following the indications on the CONSULT-II unit. |
| Self-diagnostic results | Self-diagnostic results such as 1st trip DTC, DTCs and 1st trip freeze frame data or freeze frame data can be read and erased quickly.* |
| Data monitor | Input/Output data in the ECM can be read. |
| Data monitor (SPEC) | Input/Output of the specification for Basic fuel schedule, AFM, A/F feedback control value and the other data monitor items can be read. |
| CAN diagnostic support monitor | The results of transmit/receive diagnosis of CAN communication can be read. |
| Active test | Diagnostic Test Mode in which CONSULT-II drives some actuators apart from the ECMs and also shifts some parameters in a specified range. |
| Function test | This mode is used to inform customers when their vehicle condition requires periodic maintenance. |
| DTC & SRT confirmation | The status of system monitoring tests and the self-diagnosis status/result can be confirmed. |
| ECM part number | ECM part number can be read. |

*: The following emission-related diagnostic information is cleared when the ECM memory is erased.

- Diagnostic trouble codes
- 1st trip diagnostic trouble codes
- Freeze frame data
- 1st trip freeze frame data
- System readiness test (SRT) codes
- Test values

ENGINE CONTROL COMPONENT PARTS/CONTROL SYSTEMS APPLICATION

A
EC
C
D
E
F
G
H
I
J
K
L
M
N
O
P

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

| Item | | DIAGNOSTIC TEST MODE | | | | | | | |
|--------------------------------------|--|----------------------|-------------------------|---------------------|---------------|----------------------|-------------|------------------------|-------------------|
| | | WORK SUP-PORT | SELF-DIAGNOSTIC RESULTS | | DATA MONI-TOR | DATA MONI-TOR (SPEC) | ACTIVE TEST | DTC & SRT CONFIRMATION | |
| | | | DTC*1 | FREEZE FRAME DATA*2 | | | | SRT STATUS | DTC WORK SUP-PORT |
| ENGINE CONTROL COMPONENT PARTS INPUT | Crankshaft position sensor (POS) | | × | × | × | × | | | |
| | Camshaft position sensor (PHASE) | | × | × | × | × | | | |
| | Mass air flow sensor | | × | | × | × | | | |
| | Engine coolant temperature sensor | | × | × | × | × | × | | |
| | Air fuel ratio (A/F) sensor 1 | | × | | × | × | | × | × |
| | Heated oxygen sensor 2 | | × | | × | × | | × | × |
| | Wheel sensor | | × | × | × | × | | | |
| | Accelerator pedal position sensor | | × | | × | × | | | |
| | Throttle position sensor | | × | × | × | × | | | |
| | Fuel tank temperature sensor | | × | | × | × | × | | |
| | EVAP control system pressure sensor | | × | | × | × | | | |
| | Intake air temperature sensor | | × | × | × | × | | | |
| | Knock sensor | | × | | | | | | |
| | Refrigerant pressure sensor | | | | × | × | | | |
| | Closed throttle position switch (Accelerator pedal position sensor signal) | | | | × | × | | | |
| | Air conditioner switch | | | | × | × | | | |
| | Park/neutral position (PNP) switch | | × | | × | × | | | |
| | Stop lamp switch | | × | | × | × | | | |
| | Battery voltage | | | | × | × | | | |
| | Load signal | | | | × | × | | | |
| | Fuel level sensor | | × | | × | × | | | |
| ASCD steering switch | | × | | × | × | | | | |
| ASCD brake switch | | × | | × | × | | | | |
| ASCD clutch switch | | × | | × | × | | | | |
| EPS control unit | | | | × | × | | | | |

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

| Item | | DIAGNOSTIC TEST MODE | | | | | | | |
|--|---|----------------------|-------------------------|---------------------|---------------|----------------------|-------------|------------------------|-------------------|
| | | WORK SUP-PORT | SELF-DIAGNOSTIC RESULTS | | DATA MONI-TOR | DATA MONI-TOR (SPEC) | ACTIVE TEST | DTC & SRT CONFIRMATION | |
| | | | DTC*1 | FREEZE FRAME DATA*2 | | | | SRT STATUS | DTC WORK SUP-PORT |
| ENGINE CONTROL COMPONENT PARTS OUTPUT | Fuel injector | | | | × | × | × | | |
| | Power transistor (Ignition timing) | | | | × | × | × | | |
| | Throttle control motor relay | | × | | × | × | | | |
| | Throttle control motor | | × | | | | | | |
| | EVAP canister purge volume control solenoid valve | | × | | × | × | × | | × |
| | Air conditioner relay | | | | × | × | | | |
| | Fuel pump relay | × | | | × | × | × | | |
| | Cooling fan relay | | × | | × | × | × | | |
| | Air fuel ratio (A/F) sensor 1 heater | | × | | × | × | | ×*3 | |
| | Heated oxygen sensor 2 heater | | × | | × | × | | ×*3 | |
| | EVAP canister vent control valve | × | × | | × | × | × | | |
| | Intake valve timing control solenoid valve | | × | | × | × | × | | |
| | Calculated load value | | | × | × | × | | | |

X: Applicable

*1: This item includes 1st trip DTCs.

*2: This mode includes 1st trip freeze frame data or freeze frame data. The items appear on CONSULT-II screen in freeze frame data mode only if a 1st trip DTC or DTC is detected. For details, refer to [EC-47, "Emission-related Diagnostic Information"](#).

*3: Always "COMPLT" is displayed.

INSPECTION PROCEDURE

Refer to [LAN-8, "Description"](#).

WORK SUPPORT MODE

Work Item

| WORK ITEM | CONDITION | USAGE |
|-----------------------|---|--|
| FUEL PRESSURE RELEASE | <ul style="list-style-type: none"> FUEL PUMP WILL STOP BY TOUCHING "START" DURING IDLING. CRANK A FEW TIMES AFTER ENGINE STALLS. | When releasing fuel pressure from fuel line |
| IDLE AIR VOL LEARN | <ul style="list-style-type: none"> THE IDLE AIR VOLUME THAT KEEPS THE ENGINE WITHIN THE SPECIFIED RANGE IS MEMORIZED IN ECM. | When learning the idle air volume |
| SELF-LEARNING CONT | <ul style="list-style-type: none"> THE COEFFICIENT OF SELF-LEARNING CONTROL MIXTURE RATIO RETURNS TO THE ORIGINAL COEFFICIENT. | When clearing the coefficient of self-learning control value |

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

| WORK ITEM | CONDITION | USAGE |
|----------------------|---|---|
| EVAP SYSTEM CLOSE | <p>CLOSE THE EVAP CANISTER VENT CONTROL VALVE IN ORDER TO MAKE EVAP SYSTEM CLOSE UNDER THE FOLLOWING CONDITIONS.</p> <ul style="list-style-type: none"> • IGN SW "ON" • ENGINE NOT RUNNING • AMBIENT TEMPERATURE IS ABOVE 0°C (32°F). • NO VACUUM AND NO HIGH PRESSURE IN EVAP SYSTEM • FUEL TANK TEMP. IS MORE THAN 0°C (32°F). • WITHIN 10 MINUTES AFTER STARTING "EVAP SYSTEM CLOSE" • WHEN TRYING TO EXECUTE "EVAP SYSTEM CLOSE" UNDER THE CONDITION EXCEPT ABOVE, CONSULT-II WILL DISCONTINUE IT AND DISPLAY APPROPRIATE INSTRUCTION. <p>NOTE: WHEN STARTING ENGINE, CONSULT-II MAY DISPLAY "BATTERY VOLTAGE IS LOW. CHARGE BATTERY", EVEN IN USING CHARGED BATTERY.</p> | When detecting EVAP vapor leak point of EVAP system |
| TARGET IDLE RPM ADJ* | <ul style="list-style-type: none"> • IDLE CONDITION | When setting target idle speed |
| TARGET IGN TIM ADJ* | <ul style="list-style-type: none"> • IDLE CONDITION | When adjusting target ignition timing |
| VIN REGISTRATION | <ul style="list-style-type: none"> • IN THIS MODE, VIN IS REGISTERED IN ECM. | When registering VIN in ECM |

*: This function is not necessary in the usual service procedure.

SELF-DIAG RESULTS MODE

Self Diagnostic Item

Regarding items of DTC and 1st trip DTC, refer to [EC-47, "Emission-related Diagnostic Information"](#).

Freeze Frame Data and 1st Trip Freeze Frame Data

| Freeze frame data item* | Description |
|------------------------------|---|
| DIAG TROUBLE CODE [PXXXX] | <ul style="list-style-type: none"> • The engine control component part/control system has a trouble code, it is displayed as PXXXX. (Refer to EC-9) |
| FUEL SYS-B1 | <ul style="list-style-type: none"> • "Fuel injection system status" at the moment a malfunction is detected is displayed. • One mode in the following is displayed. Mode2: Open loop due to detected system malfunction Mode3: Open loop due to driving conditions (power enrichment, deceleration enrichment) Mode4: Closed loop - using oxygen sensor(s) as feedback for fuel control Mode5: Open loop - has not yet satisfied condition to go to closed loop |
| CAL/LD VALUE [%] | <ul style="list-style-type: none"> • The calculated load value at the moment a malfunction is detected is displayed. |
| COOLANT TEMP [°C] or [°F] | <ul style="list-style-type: none"> • The engine coolant temperature at the moment a malfunction is detected is displayed. |
| L-FUEL TRM-B1 [%] | <ul style="list-style-type: none"> • "Long-term fuel trim" at the moment a malfunction is detected is displayed. • The long-term fuel trim indicates much more gradual feedback compensation to the base fuel schedule than short-term fuel trim. |
| S-FUEL TRM-B1 [%] | <ul style="list-style-type: none"> • "Short-term fuel trim" at the moment a malfunction is detected is displayed. • The short-term fuel trim indicates dynamic or instantaneous feedback compensation to the base fuel schedule. |
| ENGINE SPEED [rpm] | <ul style="list-style-type: none"> • The engine speed at the moment a malfunction is detected is displayed. |
| VEHICL SPEED [km/h] or [mph] | <ul style="list-style-type: none"> • The vehicle speed at the moment a malfunction is detected is displayed. |
| ABSOL TH-P/S [%] | <ul style="list-style-type: none"> • The throttle valve opening angle at the moment a malfunction is detected is displayed. |
| B/FUEL SCHDL [msec] | <ul style="list-style-type: none"> • The base fuel schedule at the moment a malfunction is detected is displayed. |

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

| Freeze frame data item* | Description |
|----------------------------|---|
| INT/A TEMP SE [°C] or [°F] | <ul style="list-style-type: none"> The intake air temperature at the moment a malfunction is detected is displayed. |
| FUEL SYS-B2 | <ul style="list-style-type: none"> Always a certain value is displayed. These items can not efficiently for C11 models. |
| L-FUEL TRM-B2 [%] | |
| S-FUEL TRM-B2 [%] | |
| INT MANI PRES [kPa] | |
| FTFMCH1 | |

*: The items are the same as those of 1st trip freeze frame data.

DATA MONITOR MODE

Monitored Item

×: Applicable

| Monitored item [Unit] | ECM IN-PUT SIG-NALS | MAIN SIG-NALS | Description | Remarks |
|-------------------------------|---------------------|---------------|---|--|
| ENG SPEED [rpm] | × | × | <ul style="list-style-type: none"> Indicates the engine speed computed from the signals of the crankshaft position sensor (POS) and camshaft position sensor (PHASE). | <ul style="list-style-type: none"> Accuracy becomes poor if engine speed drops below the idle rpm. If the signal is interrupted while the engine is running, an abnormal value may be indicated. |
| MAS A/F SE-B1 [V] | × | × | <ul style="list-style-type: none"> The signal voltage of the mass air flow sensor is displayed. | <ul style="list-style-type: none"> When the engine is stopped, a certain value is indicated. |
| B/FUEL SCHDL [msec] | | × | <ul style="list-style-type: none"> "Base fuel schedule" indicates the fuel injection pulse width programmed into ECM, prior to any learned on board correction. | |
| A/F ALPHA-B1 [%] | | × | <ul style="list-style-type: none"> The mean value of the air-fuel ratio feedback correction factor per cycle is indicated. | <ul style="list-style-type: none"> When the engine is stopped, a certain value is indicated. This data also includes the data for the air/fuel ratio learning control. |
| COOLAN TEMP/S [°C] or [°F] | × | × | <ul style="list-style-type: none"> The engine coolant temperature (determined by the signal voltage of the engine coolant temperature sensor) is displayed. | <ul style="list-style-type: none"> When the engine coolant temperature sensor is open or short-circuited, ECM enters fail-safe mode. The engine coolant temperature determined by the ECM is displayed. |
| A/F SEN1 (B1) [V] | × | × | <ul style="list-style-type: none"> The A/F signal computed from the input signal of the A/F sensor 1 is displayed. | |
| HO2S2 (B1) [V] | × | | <ul style="list-style-type: none"> The signal voltage of the heated oxygen sensor 2 is displayed. | |
| HO2S2 MNTR (B1) [RICH/LEAN] | × | | <ul style="list-style-type: none"> Display of heated oxygen sensor 2 signal: RICH: means the amount of oxygen after three way catalyst is relatively small. LEAN: means the amount of oxygen after three way catalyst is relatively large. | <ul style="list-style-type: none"> When the engine is stopped, a certain value is indicated. |
| VHCL SPEED SE [km/h] or [mph] | × | × | <ul style="list-style-type: none"> The vehicle speed computed from the vehicle speed signal is displayed. | |
| BATTERY VOLT [V] | × | × | <ul style="list-style-type: none"> The power supply voltage of ECM is displayed. | |
| ACCEL SEN 1 [V] | × | × | <ul style="list-style-type: none"> The accelerator pedal position sensor signal voltage is displayed. | <ul style="list-style-type: none"> ACCEL SEN 2 signal is converted by ECM internally. Thus, it differs from ECM terminal voltage signal. |
| ACCEL SEN 2 [V] | × | | | |
| THRTL SEN 1 [V] | × | × | <ul style="list-style-type: none"> The throttle position sensor signal voltage is displayed. | <ul style="list-style-type: none"> THRTL SEN 2 signal is converted by ECM internally. Thus, it differs from ECM terminal voltage signal. |
| THRTL SEN 2 [V] | × | | | |

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

| Monitored item [Unit] | ECM INPUT SIGNALS | MAIN SIGNALS | Description | Remarks |
|----------------------------|-------------------|--------------|---|---|
| FUEL T/TMP SE [°C] or [°F] | × | | <ul style="list-style-type: none"> The fuel temperature (determined by the signal voltage of the fuel tank temperature sensor) is displayed. | |
| INT/A TEMP SE [°C] or [°F] | × | × | <ul style="list-style-type: none"> The intake air temperature (determined by the signal voltage of the intake air temperature sensor) is indicated. | |
| EVAP SYS PRES [V] | × | | <ul style="list-style-type: none"> The signal voltage of EVAP control system pressure sensor is displayed. | |
| FUEL LEVEL SE [V] | × | | <ul style="list-style-type: none"> The signal voltage of the fuel level sensor is displayed. | |
| START SIGNAL [ON/OFF] | × | × | <ul style="list-style-type: none"> Indicates start signal status [ON/OFF] computed by the ECM according to the signals of engine speed and battery voltage. | <ul style="list-style-type: none"> After starting the engine, [OFF] is displayed regardless of the starter signal. |
| CLSD THL POS [ON/OFF] | × | × | <ul style="list-style-type: none"> Indicates idle position [ON/OFF] computed by the ECM according to the accelerator pedal position sensor signal. | |
| AIR COND SIG [ON/OFF] | × | × | <ul style="list-style-type: none"> Indicates [ON/OFF] condition of the air conditioner switch as determined by the air conditioner signal. | |
| P/N POSI SW [ON/OFF] | × | × | <ul style="list-style-type: none"> Indicates [ON/OFF] condition from the park/neutral position (PNP) switch signal. | |
| PW/ST SIGNAL [ON/OFF] | × | × | <ul style="list-style-type: none"> [ON/OFF] condition of the power steering system (determined by the signal sent from EPS control unit) is indicated. | |
| LOAD SIGNAL [ON/OFF] | × | × | <ul style="list-style-type: none"> Indicates [ON/OFF] condition from the electrical load signal. ON: Rear window defogger switch is ON and/or lighting switch is in 2nd position. OFF: Both rear window defogger switch and lighting switch are OFF. | |
| IGNITION SW [ON/OFF] | × | | <ul style="list-style-type: none"> Indicates [ON/OFF] condition from ignition switch. | |
| HEATER FAN SW [ON/OFF] | × | | <ul style="list-style-type: none"> Indicates [ON/OFF] condition from the heater fan switch signal. | |
| BRAKE SW [ON/OFF] | × | | <ul style="list-style-type: none"> Indicates [ON/OFF] condition from the stop lamp switch signal. | |
| INJ PULSE-B1 [msec] | | × | <ul style="list-style-type: none"> Indicates the actual fuel injection pulse width compensated by ECM according to the input signals. | <ul style="list-style-type: none"> When the engine is stopped, a certain computed value is indicated. |
| IGN TIMING [BTDC] | | | <ul style="list-style-type: none"> Indicates the ignition timing computed by ECM according to the input signals. | <ul style="list-style-type: none"> When the engine is stopped, a certain value is indicated. |
| CAL/LD VALUE [%] | | | <ul style="list-style-type: none"> "Calculated load value" indicates the value of the current airflow divided by peak airflow. | |
| MASS AIRFLOW [g·m/s] | | | <ul style="list-style-type: none"> Indicates the mass airflow computed by ECM according to the signal voltage of the mass air flow sensor. | |
| PURG VOL C/V [%] | | | <ul style="list-style-type: none"> Indicates the EVAP canister purge volume control solenoid valve control value computed by the ECM according to the input signals. The opening becomes larger as the value increases. | |
| INT/V TIM (B1) [°CA] | | | <ul style="list-style-type: none"> Indicates [°CA] of intake camshaft advanced angle. | |

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

| Monitored item [Unit] | ECM IN-PUT SIG-NALS | MAIN SIG-NALS | Description | Remarks | |
|-------------------------------|---------------------|---------------|--|---------|---------|
| INT/V SOL (B1) [%] | | | <ul style="list-style-type: none"> The control value of the intake valve timing control solenoid valve (determined by ECM according to the input signal) is indicated. The advance angle becomes larger as the value increases | | A EC |
| AIR COND RLY [ON/OFF] | | × | <ul style="list-style-type: none"> The air conditioner relay control condition (determined by ECM according to the input signals) is indicated. | | C |
| FUEL PUMP RLY [ON/OFF] | | × | <ul style="list-style-type: none"> Indicates the fuel pump relay control condition determined by ECM according to the input signals. | | D |
| VENT CONT/V [ON/OFF] | | | <ul style="list-style-type: none"> The control condition of the EVAP canister vent control valve (determined by ECM according to the input signals) is indicated. ON: Closed OFF: Open | | E |
| THRTL RELAY [ON/OFF] | | × | <ul style="list-style-type: none"> Indicates the throttle control motor relay control condition determined by the ECM according to the input signals. | | F |
| COOLING FAN [HI/LOW/OFF] | | × | <ul style="list-style-type: none"> Indicates the condition of the cooling fan (determined by ECM according to the input signals). HI: High speed operation LOW: Low speed operation OFF: Stop | | G H |
| HO2S2 HTR (B1) [ON/OFF] | | | <ul style="list-style-type: none"> Indicates [ON/OFF] condition of heated oxygen sensor 2 heater determined by ECM according to the input signals. | | I |
| I/P PULLY SPD [rpm] | | | <ul style="list-style-type: none"> Indicates the engine speed computed from the turbine revolution sensor signal. | | J |
| VEHICLE SPEED [km/h] or [MPH] | × | | <ul style="list-style-type: none"> The vehicle speed computed from the vehicle speed signal sent from TCM is displayed. | | K |
| IDL A/V LEARN [YET/CMPLT] | | | <ul style="list-style-type: none"> Display the condition of idle air volume learning YET: Idle Air Volume Learning has not been performed yet. CMPLT: Idle Air Volume Learning has already been performed successfully. | | L |
| TRVL AFTER MIL [km] or [mile] | | | <ul style="list-style-type: none"> Distance traveled while MIL is activated. | | M |
| A/F S1 HTR (B1) [%] | | | <ul style="list-style-type: none"> Indicates A/F sensor 1 heater control value computed by ECM according to the input signals. The current flow to the heater becomes larger as the value increases. | | N |
| AC PRESS SEN [V] | × | | <ul style="list-style-type: none"> The signal voltage from the refrigerant pressure sensor is displayed. | | O |
| VHCL SPEED SE [km/h] or [MPH] | | | <ul style="list-style-type: none"> The vehicle speed computed from the vehicle speed signal sent from TCM is displayed. | | P |
| SET VHCL SPD [km/h] or [MPH] | | | <ul style="list-style-type: none"> The preset vehicle speed is displayed. | | |
| MAIN SW [ON/OFF] | | | <ul style="list-style-type: none"> Indicates [ON/OFF] condition from MAIN switch signal. | | |
| CANCEL SW [ON/OFF] | | | <ul style="list-style-type: none"> Indicates [ON/OFF] condition from CANCEL switch signal. | | |

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

| Monitored item [Unit] | ECM IN-PUT SIG-NALS | MAIN SIG-NALS | Description | Remarks |
|-------------------------------|---------------------|---------------|--|--|
| RESUME/ACC SW [ON/OFF] | | | • Indicates [ON/OFF] condition from RESUME/ACCELERATE switch signal. | |
| SET SW [ON/OFF] | | | • Indicates [ON/OFF] condition from SET/COAST switch signal. | |
| BRAKE SW1 [ON/OFF] | | | • Indicates [ON/OFF] condition from ASCD brake switch signal. | |
| BRAKE SW2 [ON/OFF] | | | • Indicates [ON/OFF] condition of stop lamp switch signal. | |
| VHCL SPD CUT [NON/CUT] | | | • Indicates the vehicle cruise condition. NON: Vehicle speed is maintained at the ASCD set speed. CUT: Vehicle speed increased to excessively high compared with the ASCD set speed, and ASCD operation is cut off. | |
| LO SPEED CUT [NON/CUT] | | | • Indicates the vehicle cruise condition. NON: Vehicle speed is maintained at the ASCD set speed. CUT: Vehicle speed decreased to excessively low compared with the ASCD set speed, and ASCD operation is cut off. | |
| AT OD MONITOR [ON/OFF] | | | • Indicates [ON/OFF] condition of A/T O/D according to the input signal from the TCM. | • For M/T models always "OFF" is displayed |
| AT OD CANCEL [ON/OFF] | | | • Indicates [ON/OFF] condition of A/T O/D cancel signal sent from the TCM. | • For M/T models always "OFF" is displayed |
| CRUISE LAMP [ON/OFF] | | | • Indicates [ON/OFF] condition of CRUISE lamp determined by the ECM according to the input signals. | |
| SET LAMP [ON/OFF] | | | • Indicates [ON/OFF] condition of SET lamp determined by the ECM according to the input signals. | |
| A/F ADJ-B1 | | | • Indicates the correction factor stored in ECM. The factor is calculated from the difference between the target air/fuel ratio stored in ECM and the air/fuel ratio calculated from air fuel ratio (A/F) sensor 1 signal. | |
| A/F ADJ-B2 | | | | |
| Voltage [V] | | | • Voltage, frequency, duty cycle or pulse width measured by the probe. | • Only "#" is displayed if item is unable to be measured. • Figures with "#"'s are temporary ones. They are the same figures as an actual piece of data which was just previously measured. |
| Frequency [msec], [Hz] or [%] | | | | |
| DUTY-HI | | | | |
| DUTY-LOW | | | | |
| PLS WIDTH-HI | | | | |
| PLS WIDTH-LOW | | | | |

NOTE:

Any monitored item that does not match the vehicle being diagnosed is deleted from the display automatically.

DATA MONITOR (SPEC) MODE

Monitored Item

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

| Monitored item [Unit] | ECM input signals | Main signals | Description | Remarks |
|-----------------------|-------------------|--------------|---|---|
| ENG SPEED [rpm] | × | × | <ul style="list-style-type: none"> Indicates the engine speed computed from the signal of the crankshaft position sensor (POS) and camshaft position sensor (PHASE). | |
| MAS A/F SE-B1 [V] | × | × | <ul style="list-style-type: none"> The signal voltage of the mass air flow sensor specification is displayed. | <ul style="list-style-type: none"> When engine is running specification range is indicated. |
| B/FUEL SCHDL [msec] | | × | <ul style="list-style-type: none"> “Base fuel schedule” indicates the fuel injection pulse width programmed into ECM, prior to any learned on board correction. | <ul style="list-style-type: none"> When engine is running specification range is indicated. |
| A/F ALPHA-B1 [%] | | × | <ul style="list-style-type: none"> The mean value of the air-fuel ratio feedback correction factor per cycle is indicated. | <ul style="list-style-type: none"> When engine is running specification range is indicated. This data also includes the data for the air-fuel ratio learning control. |

NOTE:

Any monitored item that does not match the vehicle being diagnosed is deleted from the display automatically.

ACTIVE TEST MODE

Test Item

| TEST ITEM | CONDITION | JUDGEMENT | CHECK ITEM (REMEDY) |
|------------------|--|--|---|
| FUEL INJECTION | <ul style="list-style-type: none"> Engine: Return to the original trouble condition Change the amount of fuel injection using CONSULT-II. | If trouble symptom disappears, see CHECK ITEM. | <ul style="list-style-type: none"> Harness and connectors Fuel injector Air fuel ratio (A/F) sensor 1 |
| IGNITION TIMING | <ul style="list-style-type: none"> Engine: Return to the original trouble condition Timing light: Set Retard the ignition timing using CONSULT-II. | If trouble symptom disappears, see CHECK ITEM. | <ul style="list-style-type: none"> Perform Idle Air Volume Learning. |
| POWER BALANCE | <ul style="list-style-type: none"> Engine: After warming up, idle the engine. A/C switch OFF Shift lever: P or N (A/T, CVT), Neutral (M/T) Cut off each fuel injector signal one at a time using CONSULT-II. | Engine runs rough or dies. | <ul style="list-style-type: none"> Harness and connectors Compression Fuel injector Power transistor Spark plug Ignition coil |
| COOLING FAN* | <ul style="list-style-type: none"> Ignition switch: ON Turn the cooling fan “LOW”, “HI” and “OFF” with CONSULT-II. | Cooling fan moves and stops. | <ul style="list-style-type: none"> Harness and connectors Cooling fan relay Cooling fan motor |
| ENG COOLANT TEMP | <ul style="list-style-type: none"> Engine: Return to the original trouble condition Change the engine coolant temperature using CONSULT-II. | If trouble symptom disappears, see CHECK ITEM. | <ul style="list-style-type: none"> Harness and connectors Engine coolant temperature sensor Fuel injector |
| FUEL PUMP RELAY | <ul style="list-style-type: none"> Ignition switch: ON (Engine stopped) Turn the fuel pump relay ON and OFF using CONSULT-II and listen to operating sound. | Fuel pump relay makes the operating sound. | <ul style="list-style-type: none"> Harness and connectors Fuel pump relay |
| PURG VOL CONT/V | <ul style="list-style-type: none"> Engine: After warming up, run engine at 1,500 rpm. Change the EVAP canister purge volume control solenoid valve opening percent using CONSULT-II. | Engine speed changes according to the opening percent. | <ul style="list-style-type: none"> Harness and connectors EVAP canister purge volume control solenoid valve |

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

| TEST ITEM | CONDITION | JUDGEMENT | CHECK ITEM (REMEDY) |
|------------------|---|--|--|
| FUEL/T TEMP SEN | <ul style="list-style-type: none"> Change the fuel tank temperature using CONSULT-II. | | |
| VENT CONTROL/V | <ul style="list-style-type: none"> Ignition switch: ON (Engine stopped) Turn solenoid valve "ON" and "OFF" with the CONSULT-II and listen to operating sound. | Solenoid valve makes an operating sound. | <ul style="list-style-type: none"> Harness and connectors EVAP canister vent control valve |
| V/T ASSIGN ANGLE | <ul style="list-style-type: none"> Engine: Return to the original trouble condition Change intake valve timing using CONSULT-II. | If trouble symptom disappears, see CHECK ITEM. | <ul style="list-style-type: none"> Harness and connectors Intake valve timing control solenoid valve |

*: Leaving cooling fan OFF with CONSULT-II while engine is running may cause the engine to overheat.

DTC & SRT CONFIRMATION MODE

SRT STATUS Mode

For details, refer to [EC-47, "Emission-related Diagnostic Information"](#).

SRT WORK SUPPORT Mode

This mode enables a technician to drive a vehicle to set the SRT while monitoring the SRT status.

DTC WORK SUPPORT Mode

| Test mode | Test item | Corresponding DTC No. | Reference page |
|--------------------|---------------------------|-----------------------|------------------------|
| EVAPORATIVE SYSTEM | PURG FLOW P0441 | P0441 | EC-313 |
| | EVP SML LEAK P0442/P1442* | P0442 | EC-318 |
| | | P0455 | EC-370 |
| | EVP V/S LEAK P0456/P1456* | P0456 | EC-377 |
| A/F SEN1 | PURG VOL CN/V P1444 | P0443 | EC-325 |
| | A/F SEN1 (B1) P1276 | P0130 | EC-206 |
| HO2S2 | A/F SEN1 (B1) P1278/P1279 | P0133 | EC-225 |
| | HO2S2 (B1) P0139 | P0139 | EC-250 |
| | HO2S2 (B1) P1146 | P0138 | EC-240 |
| | HO2S2 (B1) P1147 | P0137 | EC-233 |

*: DTC P1442 and P1456 does not apply to C11 models but appears in DTC Work Support Mode screens.

REAL TIME DIAGNOSIS IN DATA MONITOR MODE (RECORDING VEHICLE DATA)

Description

CONSULT-II has two kinds of triggers and they can be selected by touching "SETTING" in "DATA MONITOR" mode.

1. "AUTO TRIG" (Automatic trigger):

- The malfunction will be identified on the CONSULT-II screen in real time.

In other words, DTC/1st trip DTC and malfunction item will be displayed if the malfunction is detected by ECM.

At the moment a malfunction is detected by ECM, "MONITOR" in "DATA MONITOR" screen is changed to "Recording Data ... xx%" as shown at right, and the data after the malfunction detection is recorded. Then when the percentage reached 100%, "REAL-TIME DIAG" screen is displayed. If "STOP" is touched on the screen during "Recording Data ... xx%", "REAL-TIME DIAG" screen is also displayed.

| DATA MONITOR | |
|----------------------|----------|
| Recording Data...11% | NO DTC |
| ENG SPEED | XXX rpm |
| MAS A/F SE-B1 | XXX V |
| COOLAN TEMP/S | XXX °C |
| A/F SEN1 (B1) | XXX V |
| VHCL SPEED SE | XXX km/h |


PBIB1593E

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >


The recording time after the malfunction detection and the recording speed can be changed by "TRIGGER POINT" and "Recording Speed". Refer to CONSULT-II Operation Manual.

2. "MANU TRIG" (Manual trigger):
 - DTC/1st trip DTC and malfunction item will not be displayed automatically on CONSULT-II screen even though a malfunction is detected by ECM.
 - DATA MONITOR can be performed continuously even though a malfunction is detected.

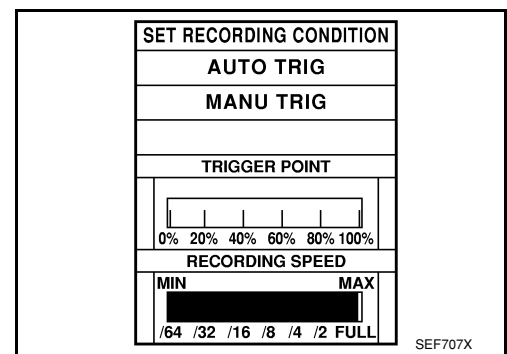

Operation

1. "AUTO TRIG"
 - While trying to detect the DTC/1st trip DTC by performing the DTC Confirmation Procedure, be sure to select to "DATA MONITOR (AUTO TRIG)" mode. You can confirm the malfunction at the moment it is detected.
 - While narrowing down the possible causes, CONSULT-II should be set in "DATA MONITOR (AUTO TRIG)" mode, especially in case the incident is intermittent. When you are inspecting the circuit by gently shaking (or twisting) the suspicious connectors, components and harness in the DTC Confirmation Procedure, the moment a malfunction is found the DTC/1st trip DTC will be displayed. (Refer to "INCIDENT SIMULATION TESTS" in [GI-25. "How to Perform Efficient Diagnosis for an Electrical Incident"](#).)
2. "MANU TRIG"
 - If the malfunction is displayed as soon as "DATA MONITOR" is selected, reset CONSULT-II to "MANU TRIG". By selecting "MANU TRIG" you can monitor and store the data. The data can be utilized for further diagnosis, such as a comparison with the value for the normal operating condition.

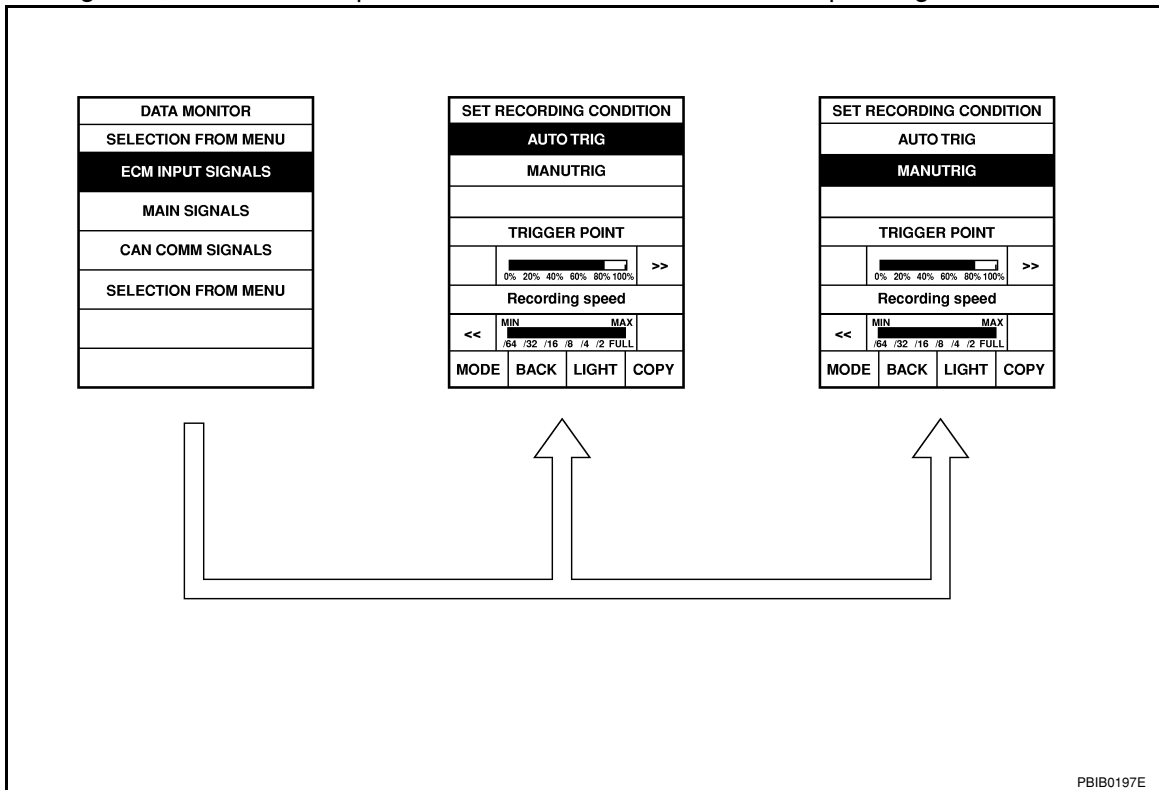

Generic Scan Tool (GST) Function


INFOID:000000001702596

DESCRIPTION

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

Generic Scan Tool (OBDII scan tool) complying with SAE J1978 has 8 different functions explained below. ISO9141 is used as the protocol. The name GST or Generic Scan Tool is used in this service manual.

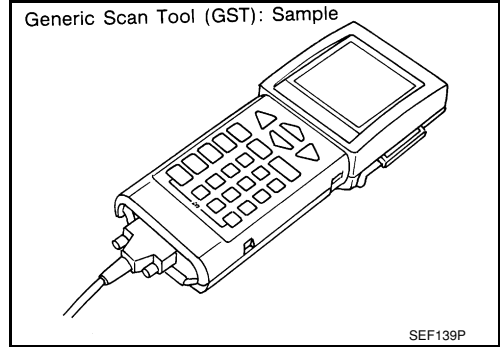


FUNCTION

| Diagnostic test mode | | Function |
|----------------------|------------------|--|
| Service \$01 | READINESS TESTS | This diagnostic service gains access to current emission-related data values, including analog inputs and outputs, digital inputs and outputs, and system status information. |
| Service \$02 | (FREEZE DATA) | This diagnostic service gains access to emission-related data value which were stored by ECM during the freeze frame. For details, refer to EC-109, "CONSULT-II Function (ENGINE)" . |
| Service \$03 | DTCs | This diagnostic service gains access to emission-related power train trouble codes which were stored by ECM. |
| Service \$04 | CLEAR DIAG INFO | This diagnostic service can clear all emission-related diagnostic information. This includes: <ul style="list-style-type: none"> • Clear number of diagnostic trouble codes (Service \$01) • Clear diagnostic trouble codes (Service \$03) • Clear trouble code for freeze frame data (Service \$01) • Clear freeze frame data (Service \$02) • Reset status of system monitoring test (Service \$01) • Clear on board monitoring test results (Service \$06 and \$07) |
| Service \$06 | (ON BOARD TESTS) | This diagnostic service accesses the results of on board diagnostic monitoring tests of specific components/systems that are not continuously monitored. |
| Service \$07 | (ON BOARD TESTS) | This diagnostic service enables the off board test drive to obtain test results for emission-related powertrain components/systems that are continuously monitored during normal driving conditions. |
| Service \$08 | — | This diagnostic service can close EVAP system in ignition switch ON position (Engine stopped). When this diagnostic service is performed, EVAP canister vent control valve can be closed. In the following conditions, this diagnostic service cannot function. <ul style="list-style-type: none"> • Low ambient temperature • Low battery voltage • Engine running • Ignition switch OFF • Low fuel temperature • Too much pressure is applied to EVAP system |
| Service \$09 | (CALIBRATION ID) | This diagnostic service enables the off-board test device to request specific vehicle information such as Vehicle Identification Number (VIN) and Calibration IDs. |

INSPECTION PROCEDURE


1. Turn ignition switch OFF.
2. Connect GST to data link connector (1), which is located under LH dash panel.

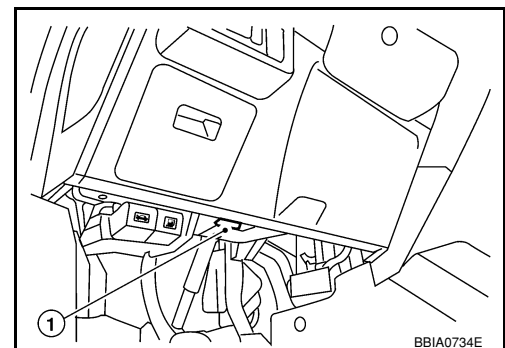


TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

3. Turn ignition switch ON.
4. Enter the program according to instruction on the screen or in the operation manual.
(*: Regarding GST screens in this section, sample screens are shown.)

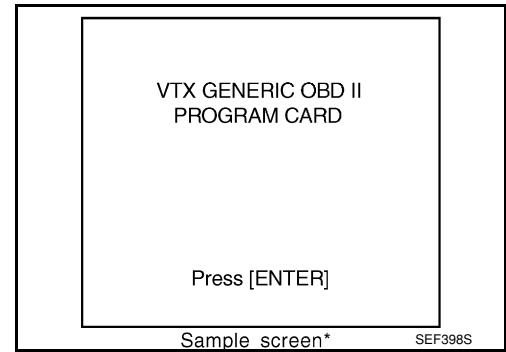

5. Perform each diagnostic service according to each service procedure.
For further information, see the GST Operation Manual of the tool maker.

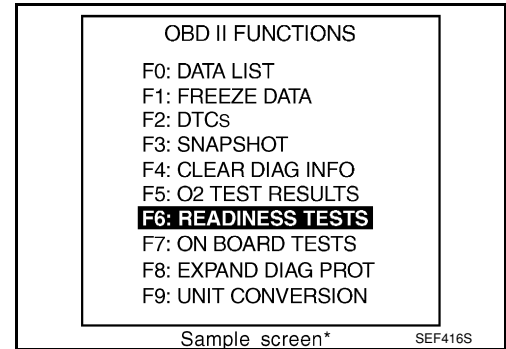

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702597

Remarks:

- Specification data are reference values.
- Specification data are output/input values which are detected or supplied by the ECM at the connector.
- * Specification data may not be directly related to their components signals/values/operations.

i.e. Adjust ignition timing with a timing light before monitoring IGN TIMING, because the monitor may show the specification data in spite of the ignition timing not being adjusted to the specification data. This IGN TIMING monitors the data calculated by the ECM according to the signals input from the camshaft position sensor and other ignition timing related sensors.

| MONITOR ITEM | CONDITION | | SPECIFICATION |
|-----------------------------|--|---------------------------------------|--|
| ENG SPEED | • Run engine and compare CONSULT-II value with the tachometer indication. | | Almost the same speed as the tachometer indication. |
| MAS A/F SE-B1 | See EC-127 . | | |
| B/FUEL SCHDL | See EC-127 . | | |
| A/F ALPHA-B1 | See EC-127 . | | |
| COOLAN TEMP/S | • Engine: After warming up | | More than 70°C (158°F) |
| A/F SEN1 (B1) | • Engine: After warming up | Maintaining engine speed at 2,000 rpm | Fluctuates around 2.2V |
| HO2S2 (B1) | • Revving engine from idle to 3,000 rpm quickly after the following conditions are met | | 0 - 0.3V ↔ Approx. 0.6 - 1.0V |
| HO2S2 MNTR (B1) | - Engine: After warming up - Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load | | |
| VHCL SPEED SE | • Turn drive wheels and compare CONSULT-II value with the speedometer indication. | | Almost the same speed as the speedometer indication. |
| BATTERY VOLT | • Ignition switch: ON (Engine stopped) | | 11 - 14V |
| ACCEL SEN 1 ACCEL SEN 2* | • Ignition switch: ON (Engine stopped) | Accelerator pedal: Fully released | 0.6 - 0.9V |
| | | Accelerator pedal: Fully depressed | 4.0 - 4.8V |
| EVAP SYS PRES | • Ignition switch: ON | | Approx. 1.8 - 4.8V |

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

| MONITOR ITEM | CONDITION | | SPECIFICATION |
|-----------------------------|---|--|-------------------|
| THRTL SEN 1 THRTL SEN 2* | <ul style="list-style-type: none"> Ignition switch: ON (Engine stopped) Shift lever: D (A/T, CVT), 1st (M/T) | Accelerator pedal: Fully released | More than 0.36V |
| | | Accelerator pedal: Fully depressed | Less than 4.75V |
| START SIGNAL | Ignition switch: ON → START → ON | | OFF → ON → OFF |
| CLSD THL POS | Ignition switch: ON | Accelerator pedal: Fully released | ON |
| | | Accelerator pedal: Slightly depressed | OFF |
| AIR COND SIG | Engine: After warming up, idle the engine | Air conditioner switch: OFF | OFF |
| | | Air conditioner switch: ON (Compressor operates.) | ON |
| P/N POSI SW | Ignition switch: ON | Shift lever: P or N (A/T, CVT), Neutral (M/T) | ON |
| | | Shift lever: Except above | OFF |
| PW/ST SIGNAL | Engine: After warming up, idle the engine | Steering wheel: Not being turned | OFF |
| | | Steering wheel: Being turned | ON |
| LOAD SIGNAL | Ignition switch: ON | Rear window defogger switch: ON and/or Lighting switch: 2nd | ON |
| | | Rear window defogger switch and lighting switch: OFF | OFF |
| IGNITION SW | Ignition switch: ON → OFF → ON | | ON → OFF → ON |
| HEATER FAN SW | Ignition switch: ON | Heater fan: Operating | ON |
| | | Heater fan: Not operating | OFF |
| BRAKE SW | Ignition switch: ON | Brake pedal: Fully released | OFF |
| | | Brake pedal: Slightly depressed | ON |
| INJ PULSE-B1 | <ul style="list-style-type: none"> Engine: After warming up Air conditioner switch: OFF Shift lever: P or N (A/T, CVT), Neutral (M/T) No load | Idle | 2.0 - 3.0 msec |
| | | 2,000 rpm | 1.9 - 2.9 msec |
| IGN TIMING | <ul style="list-style-type: none"> Engine: After warming up Air conditioner switch: OFF Shift lever: P or N (A/T, CVT), Neutral (M/T) No load | Idle | 8° - 18° BTDC |
| | | 2,000 rpm | 25° - 45° BTDC |
| CAL/LD VALUE | <ul style="list-style-type: none"> Engine: After warming up Air conditioner switch: OFF Shift lever: P or N (A/T, CVT), Neutral (M/T) No load | Idle | 10% - 35% |
| | | 2,500 rpm | 10% - 35% |
| MASS AIRFLOW | <ul style="list-style-type: none"> Engine: After warming up Air conditioner switch: OFF Shift lever: P or N (A/T, CVT), Neutral (M/T) No load | Idle | 1.0 - 4.0 g·m/s |
| | | 2,500 rpm | 2.0 - 10.0 g·m/s |
| PURG VOL C/V | <ul style="list-style-type: none"> Engine: After warming up Air conditioner switch: OFF Shift lever: P or N (A/T, CVT), Neutral (M/T) No load | Idle (Accelerator pedal is not depressed even slightly, after engine starting) | 0% |
| | | 2,000 rpm | 0 - 50% |
| INT/V TIM (B1) | <ul style="list-style-type: none"> Engine: After warming up Air conditioner switch: OFF Shift lever: P or N (A/T, CVT), Neutral (M/T) No load | Idle | -5° - 5°C |
| | | When revving engine up to 2,000 rpm quickly | Approx. 0° - 40°C |

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

| MONITOR ITEM | CONDITION | | SPECIFICATION | |
|-----------------|---|---|---|----|
| INT/V SOL (B1) | <ul style="list-style-type: none"> Engine: After warming up Air conditioner switch: OFF Shift lever: P or N (A/T, CVT), Neutral (M/T) No load | Idle | 0% - 2% | A |
| | | When revving engine up to 2,000 rpm quickly | Approx. 0% - 90% | EC |
| AIR COND RLY | <ul style="list-style-type: none"> Engine: After warming up, idle the engine | Air conditioner switch: OFF | OFF | |
| | | Air conditioner switch: ON (Compressor operates) | ON | C |
| FUEL PUMP RLY | <ul style="list-style-type: none"> For 1 second after turning ignition switch ON Engine running or cranking | | ON | |
| | | Except above conditions | OFF | D |
| VENT CONT/V | <ul style="list-style-type: none"> Ignition switch: ON | | OFF | |
| THRTL RELAY | <ul style="list-style-type: none"> Ignition switch: ON | | ON | E |
| COOLING FAN | <ul style="list-style-type: none"> Engine: After warming up, idle the engine Air conditioner switch: OFF | Engine coolant temperature: 97°C (207°F) or less | OFF | |
| | | Engine coolant temperature: Between 98°C (208°F) and 99°C (210°F) | LOW | F |
| | | Engine coolant temperature: 100°C (212°F) or more | HIGH | G |
| HO2S2 HTR (B1) | <ul style="list-style-type: none"> Below 3,600 rpm after the following conditions are met. <ul style="list-style-type: none"> Engine: After warming up Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load | | ON | H |
| | | Engine speed: Above 3,600 rpm | OFF | |
| I/P PULLY SPD | <ul style="list-style-type: none"> Vehicle speed: More than 20 km/h (12 MPH) | | Almost the same speed as the tachometer indication | I |
| VEHICLE SPEED | <ul style="list-style-type: none"> Turn drive wheels and compare CONSULT-II value with the speedometer indication. | | Almost the same speed as the speedometer indication | J |
| TRVL AFTER MIL | <ul style="list-style-type: none"> Ignition switch: ON | Vehicle has traveled after MIL has turned ON. | 0 - 65,535 km (0 - 40,723 mile) | |
| A/F S1 HTR (B1) | <ul style="list-style-type: none"> Engine: After warming up, idle the engine (More than 140 seconds after starting engine.) | | 4 - 100% | K |
| AC PRESS SEN | <ul style="list-style-type: none"> Engine: Idle Air conditioner switch: ON (Compressor operates) | | 1.0 - 4.0V | L |
| VHCL SPEED SE | <ul style="list-style-type: none"> Turn drive wheels and compare speedometer indication with the CONSULT-II value. | | Almost the same speed as the speedometer indication | |
| SET VHCL SPD | <ul style="list-style-type: none"> Engine: Running | ASCD: Operating | The preset vehicle speed is displayed. | M |
| MAIN SW | <ul style="list-style-type: none"> Ignition switch: ON | MAIN switch: Pressed | ON | |
| | | MAIN switch: Released | OFF | N |
| CANCEL SW | <ul style="list-style-type: none"> Ignition switch: ON | CANCEL switch: Pressed | ON | |
| | | CANCEL switch: Released | OFF | |
| RESUME/ACC SW | <ul style="list-style-type: none"> Ignition switch: ON | RESUME/ACCELERATE switch: Pressed | ON | O |
| | | RESUME/ACCELERATE switch: Released | OFF | P |
| SET SW | <ul style="list-style-type: none"> Ignition switch: ON | SET/COAST switch: Pressed | ON | |
| | | SET/COAST switch: Released | OFF | |

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

| MONITOR ITEM | CONDITION | | SPECIFICATION |
|--------------|--|---|---------------|
| BRAKE SW1 | • Ignition switch: ON | • Brake pedal: Fully released (A/T, CVT) • Brake pedal and clutch pedal: Fully released (M/T) | ON |
| | | • Brake pedal: Slightly depressed (A/T, CVT) • Brake pedal and/or clutch pedal: Slightly depressed (M/T) | OFF |
| BRAKE SW2 | • Ignition switch: ON | Brake pedal: Fully released | OFF |
| | | Brake pedal: Slightly depressed | ON |
| CRUISE LAMP | • Ignition switch: ON | MAIN switch: Pressed at the 1st time → at the 2nd time | ON → OFF |
| SET LAMP | • MAIN switch: ON • Vehicle speed: Between 40 km/h (25 MPH) and 144 km/h (89 MPH) | ACSD: Operating | ON |
| | | ASCD: Not operating | OFF |

*: Accelerator pedal position sensor 2 signal and throttle position sensor 2 signal are converted by ECM internally. Thus, they differ from ECM terminals voltage signal.

Major Sensor Reference Graph in Data Monitor Mode


INFOID:000000001702598

The following are the major sensor reference graphs in “DATA MONITOR” mode.

CLSD THL POS, ACCEL SEN 1, THRTL SEN 1

Below is the data for “CLSD THL POS”, “ACCEL SEN 1” and “THRTL SEN 1” when depressing the accelerator pedal with the ignition switch ON and with shift lever in D position (A/T, CVT), 1st position (M/T).

The signal of “ACCEL SEN 1” and “THRTL SEN 1” should rise gradually without any intermittent drop or rise after “CLSD THL POS” is changed from ON to OFF.

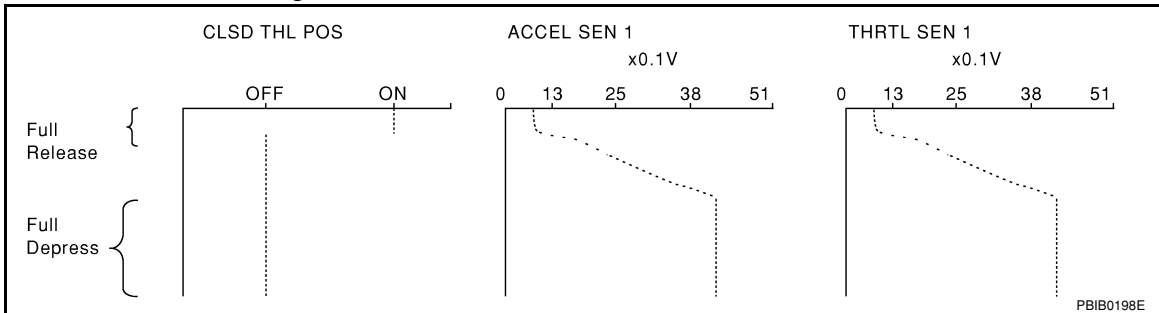


ENG SPEED, MAS A/F SE-B1, THRTL SEN 1, HO2S2 (B1), INJ PULSE-B1

Below is the data for “ENG SPEED”, “MAS A/F SE-B1”, “THRTL SEN 1”, “HO2S2 (B1)” and “INJ PULSE-B1” when revving engine quickly up to 4,800 rpm under no load after warming up engine sufficiently.

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

Each value is for reference, the exact value may vary.

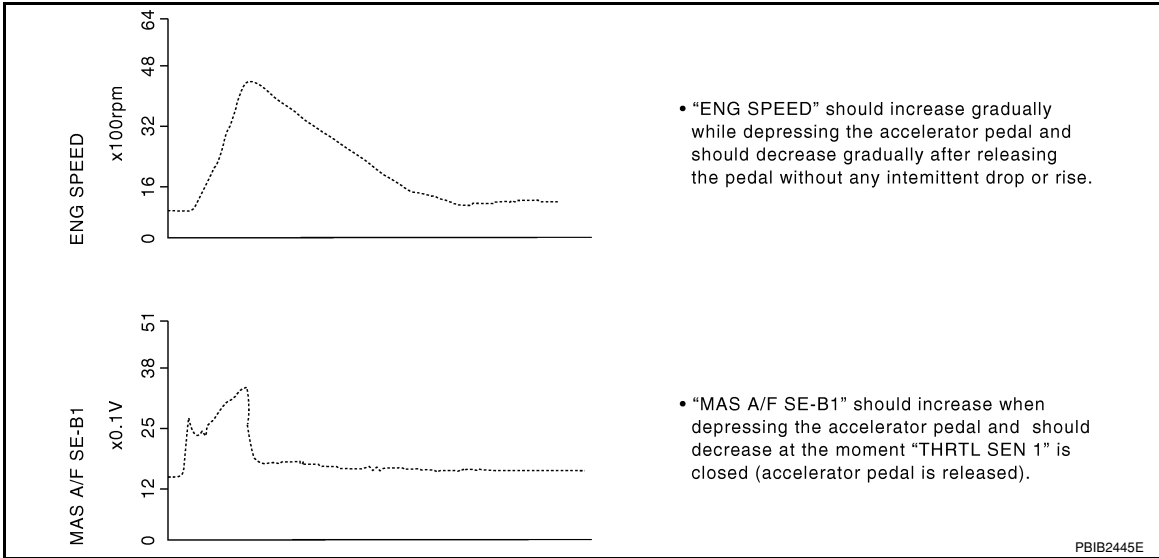

A

EC

C

D

E

F

G

H

I

J

K

L

M


N

O

P

TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

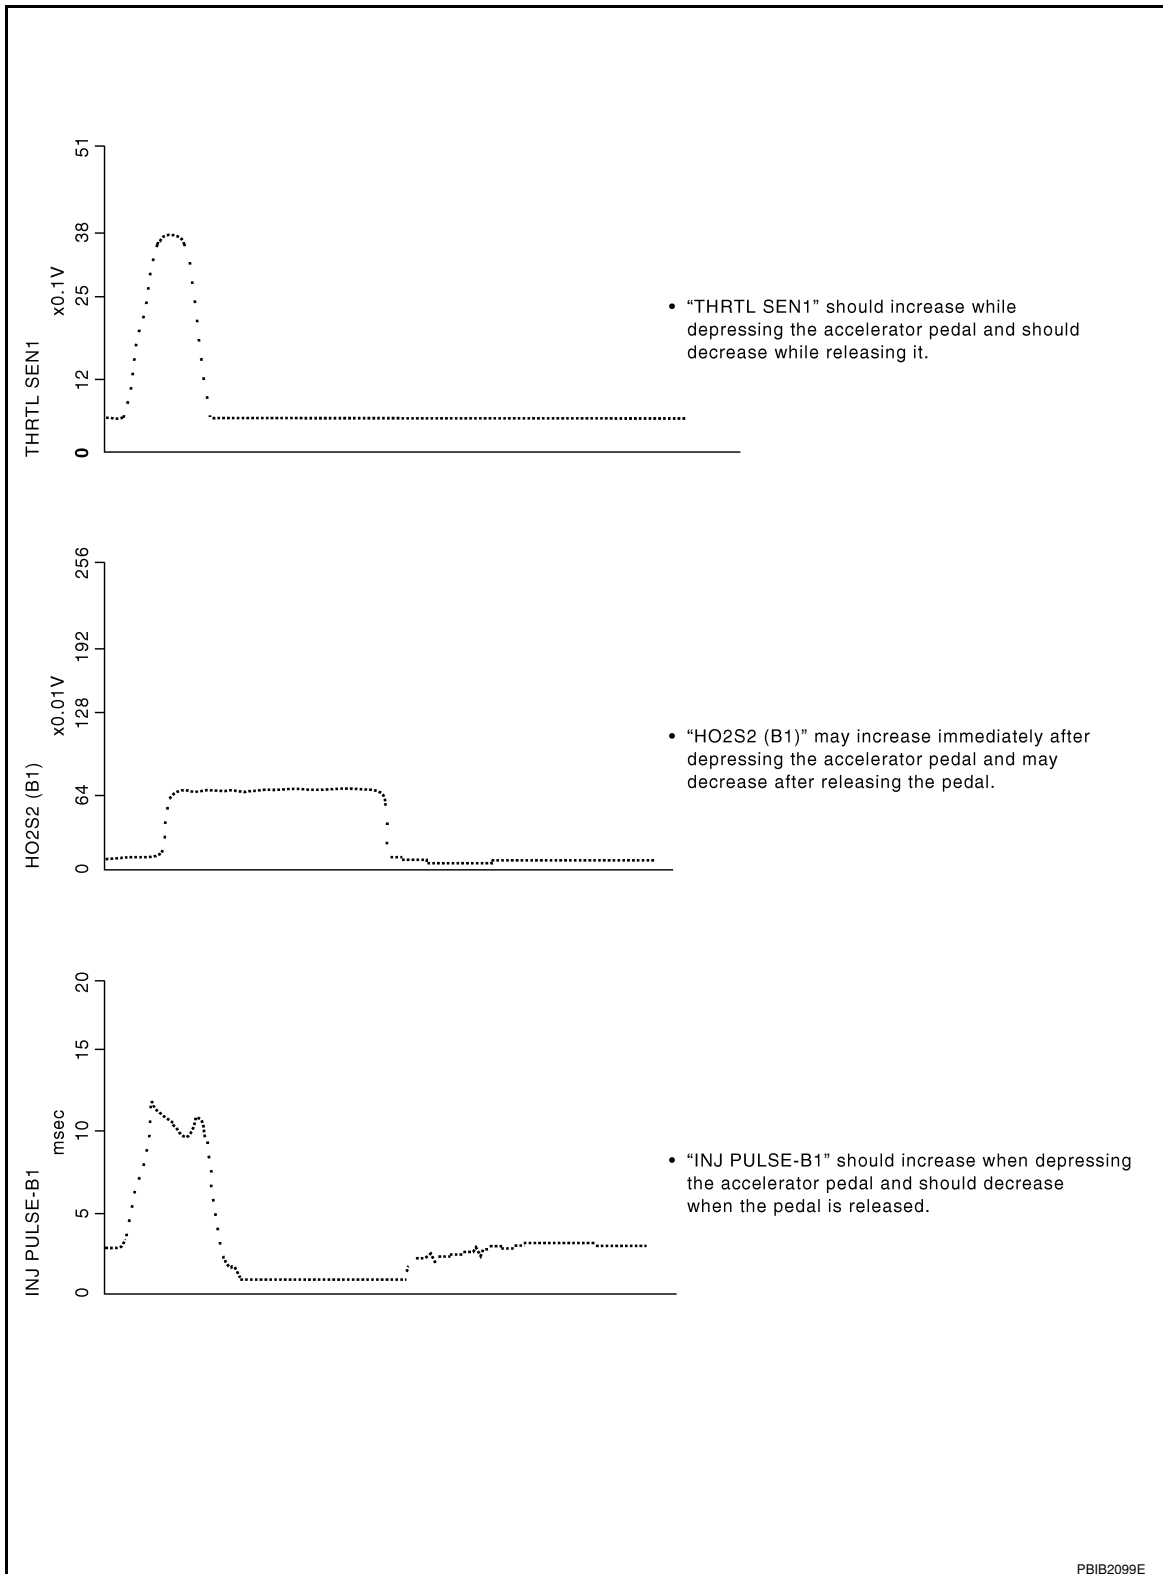

TROUBLE DIAGNOSIS - SPECIFICATION VALUE

< SERVICE INFORMATION >

EC TROUBLE DIAGNOSIS - SPECIFICATION VALUE

Description

INFOID:000000001702599

The specification (SP) value indicates the tolerance of the value that is displayed in "DATA MONITOR (SPEC)" mode of CONSULT-II during normal operation of the Engine Control System. When the value in "DATA MONITOR (SPEC)" mode is within the SP value, the Engine Control System is confirmed OK. When the value in "DATA MONITOR (SPEC)" mode is NOT within the SP value, the Engine Control System may have one or more malfunctions.

The SP value is used to detect malfunctions that may affect the Engine Control System, but will not light the MIL.

The SP value will be displayed for the following three items:

- B/FUEL SCHDL (The fuel injection pulse width programmed into ECM prior to any learned on board correction)
- A/F ALPHA-B1 (The mean value of air-fuel ratio feedback correction factor per cycle)
- MAS A/F SE-B1 (The signal voltage of the mass air flow sensor)

Testing Condition

INFOID:000000001702600

- Vehicle driven distance: More than 5,000 km (3,107 miles)
- Barometric pressure: 98.3 - 104.3 kPa (1.003 - 1.064 kg/cm², 14.25 - 15.12 psi)
- Atmospheric temperature: 20 - 30°C (68 - 86°F)
- Engine coolant temperature: 75 - 95°C (167 - 203°F)
- Transmission: Warmed-up
- A/T and CVT models: After the engine is warmed up to normal operating temperature, drive vehicle until "FLUID TEMP SE" (A/T or CVT) fluid temperature sensor signal) indicates more than 60°C (140°F).
- M/T models: After the engine is warmed up to normal operating temperature, drive vehicle for 5 minutes.
- Electrical load: Not applied
- Rear window defogger switch, air conditioner switch, lighting switch are OFF. Steering wheel is straight ahead.
- Engine speed: Idle


Inspection Procedure

INFOID:000000001702601

NOTE:

Perform "DATA MONITOR (SPEC)" mode in maximum scale display.

1. Perform [EC-69, "Basic Inspection"](#).
2. Confirm that the testing conditions indicated above are met.
3. Select "B/FUEL SCHDL", "A/F ALPHA-B1" and "MAS A/F SE-B1" in "DATA MONITOR (SPEC)" mode with CONSULT-II.
4. Make sure that monitor items are within the SP value.
5. If NG, go to [EC-127, "Diagnosis Procedure"](#).

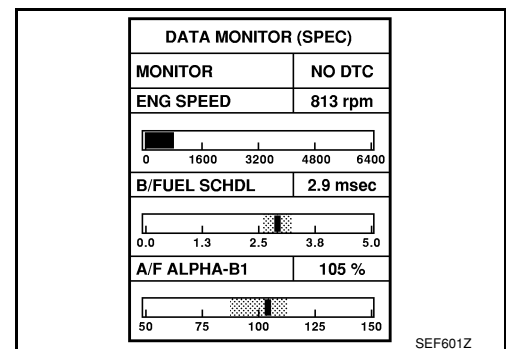


Diagnosis Procedure

INFOID:000000001702602

OVERALL SEQUENCE

TROUBLE DIAGNOSIS - SPECIFICATION VALUE


< SERVICE INFORMATION >

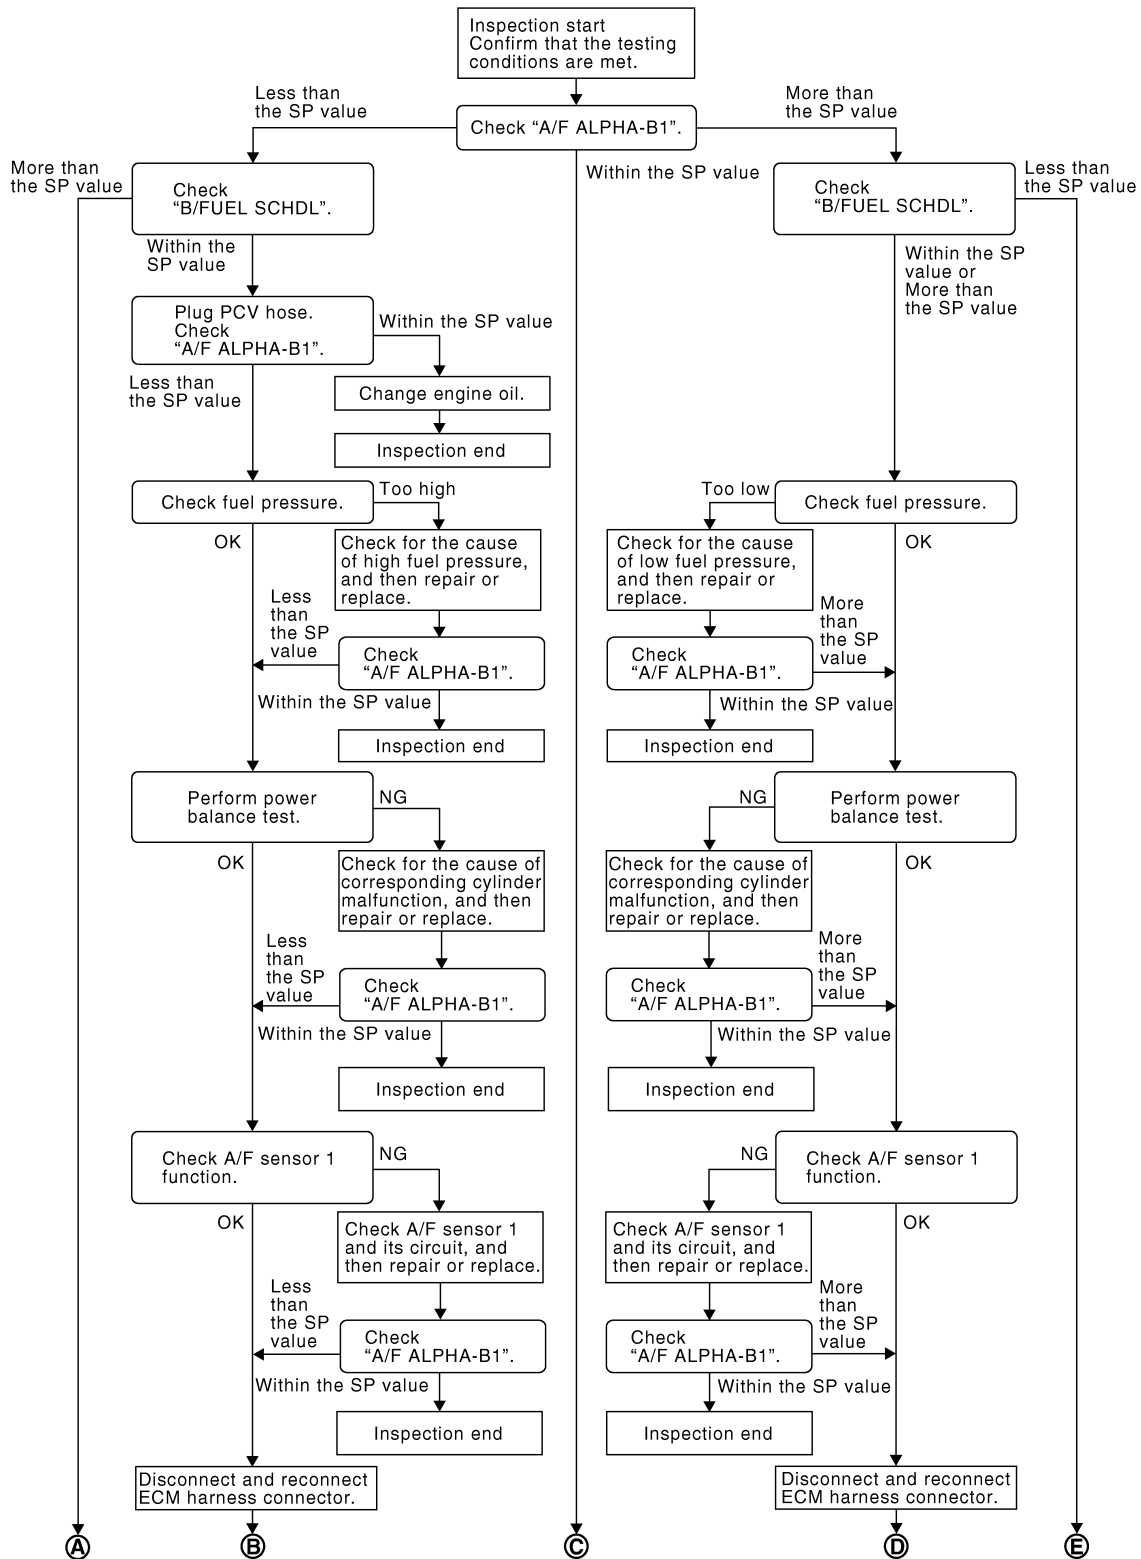

PBIB2318E

TROUBLE DIAGNOSIS - SPECIFICATION VALUE

< SERVICE INFORMATION >

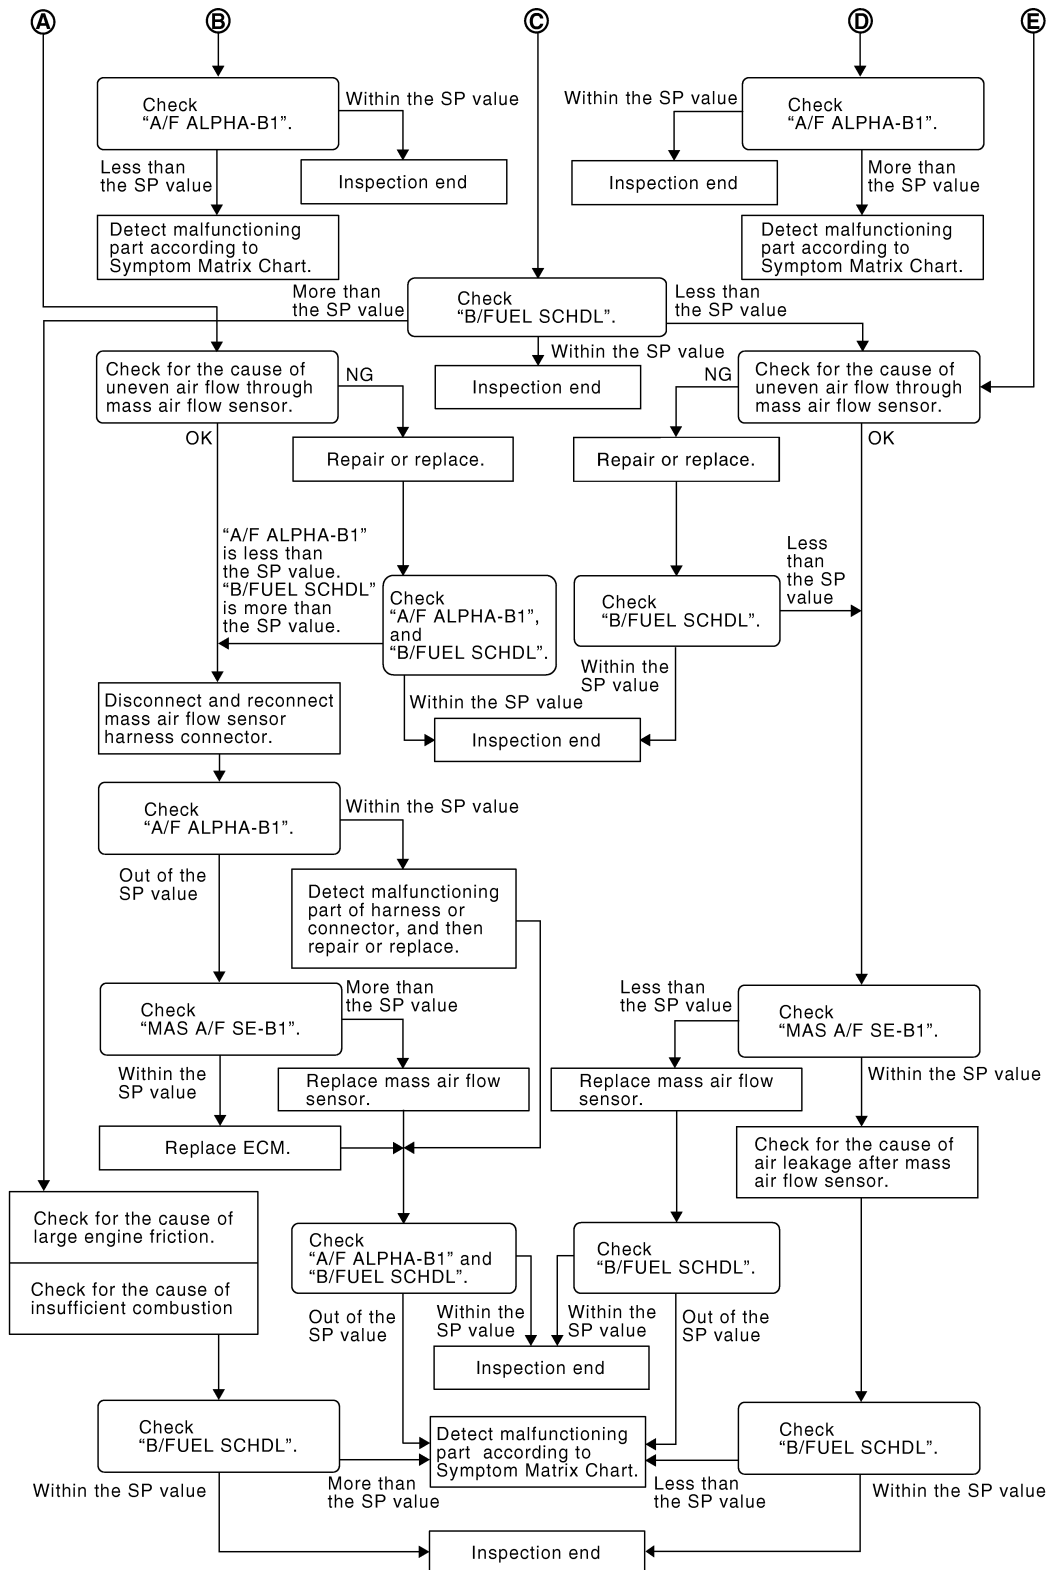

PBIB3213E

DETAILED PROCEDURE

1. CHECK "A/F ALPHA-B1"

1. Start engine.
2. Confirm that the testing conditions are met. Refer to [EC-127. "Testing Condition"](#).

TROUBLE DIAGNOSIS - SPECIFICATION VALUE

< SERVICE INFORMATION >


3. Select "A/F ALPHA-B1" in "DATA MONITOR (SPEC)" mode, and make sure that the indication is within the SP value.

NOTE:

Check "A/F ALPHA-B1" for approximately 1 minute because they may fluctuate. It is NG if the indication is out of the SP value even a little.

OK or NG

- OK >> GO TO 17.
- NG (Less than the SP value)>>GO TO 2.
- NG (More than the SP value)>>GO TO 3.

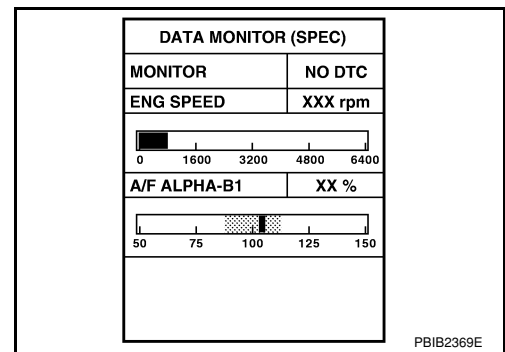


2.CHECK "B/FUEL SCHDL"

- Select "B/FUEL SCHDL" in "DATA MONITOR (SPEC)" mode, and make sure that the indication is within the SP value.

OK or NG

- OK >> GO TO 4.
- NG (More than the SP value)>>GO TO 19.

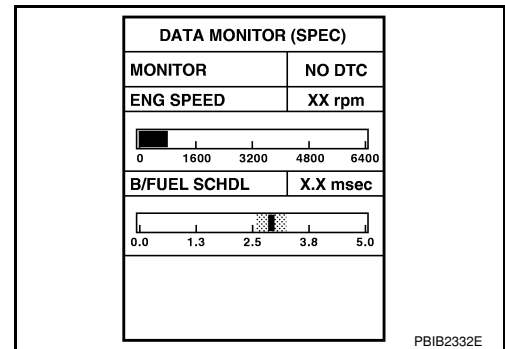


3.CHECK "B/FUEL SCHDL"

- Select "B/FUEL SCHDL" in "DATA MONITOR (SPEC)" mode, and make sure that the indication is within the SP value.

OK or NG

- OK >> GO TO 6.
- NG (More than the SP value)>>GO TO 6.
- NG (Less than the SP value)>>GO TO 25.

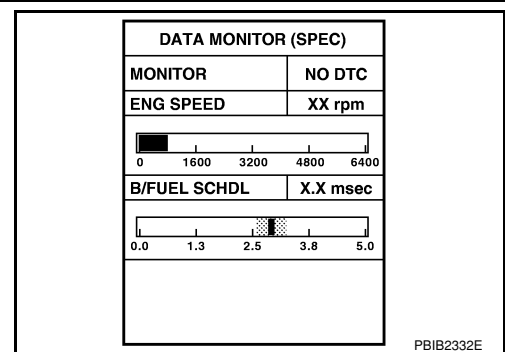

4.CHECK "A/F ALPHA-B1"

1. Stop the engine.
2. Disconnect PCV hose, and then plug it.
3. Start engine.
4. Select "A/F ALPHA-B1" in "DATA MONITOR (SPEC)" mode, and make sure that the indication is within the SP value.

OK or NG

- OK >> GO TO 5.
- NG >> GO TO 6.

5.CHANGE ENGINE OIL

1. Stop the engine.
2. Change engine oil. Refer to [LU-7, "Changing Engine Oil"](#).

NOTE:

This symptom may occur when a large amount of gasoline is mixed with engine oil because of driving conditions (such as when engine oil temperature does not rise enough since a journey distance is too short during winter). The symptom will not be detected after changing engine oil or changing driving condition.

>> INSPECTION END

TROUBLE DIAGNOSIS - SPECIFICATION VALUE

< SERVICE INFORMATION >

6. CHECK FUEL PRESSURE

Check fuel pressure. (Refer to [EC-78. "Fuel Pressure Check"](#).)

OK or NG

OK >> GO TO 9.

NG (Fuel pressure is too high)>>Replace fuel pressure regulator, refer to [EC-78. "Fuel Pressure Check"](#). GO TO 8.

NG (Fuel pressure is too low)>>GO TO 7.

7. DETECT MALFUNCTIONING PART

1. Check the following.
 - Clogged and bent fuel hose and fuel tube
 - Clogged fuel filter
 - Fuel pump and its circuit (Refer to [EC-526](#).)
2. If NG, repair or replace the malfunctioning part. (Refer to [EC-78. "Fuel Pressure Check"](#).)
If OK, replace fuel pressure regulator.

>> GO TO 8.

8. CHECK "A/F ALPHA-B1"

1. Start engine.
2. Select "A/F ALPHA-B1" in "DATA MONITOR (SPEC)" mode, and make sure that the indication is within the SP value.

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 9.

9. PERFORM POWER BALANCE TEST

1. Perform "POWER BALANCE" in "ACTIVE TEST" mode.
2. Make sure that the each cylinder produces a momentary engine speed drop.

OK or NG

OK >> GO TO 12.

NG >> GO TO 10.

| ACTIVE TEST | |
|---------------|---------|
| POWER BALANCE | |
| MONITOR | |
| ENG SPEED | XXX rpm |
| MAS A/F SE-B1 | XXX V |
| | |
| | |
| | |
| | |
| | |

PBIB0133E

10. DETECT MALFUNCTIONING PART

1. Check the following.
 - Ignition coil and its circuit (Refer to [EC-531](#).)
 - Fuel injector and its circuit (Refer to [EC-521](#).)
 - Intake air leakage
 - Low compression pressure (Refer to [EM-62. "On-Vehicle Service"](#).)
2. If NG, repair or replace the malfunctioning part.
If OK, replace fuel injector. (It may be caused by leakage from fuel injector or clogging.)

>> GO TO 11.

11. CHECK "A/F ALPHA-B1"

1. Start engine.
2. Select "A/F ALPHA-B1" in "DATA MONITOR (SPEC)" mode, and make sure that the indication is within the SP value.

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 12.

TROUBLE DIAGNOSIS - SPECIFICATION VALUE

< SERVICE INFORMATION >

12.CHECK A/F SENSOR 1 FUNCTION

Perform all DTC Confirmation Procedure related with A/F sensor 1.

- For DTC P0130, refer to [EC-206, "DTC Confirmation Procedure"](#).
- For DTC P0131, refer to [EC-213, "DTC Confirmation Procedure"](#).
- For DTC P0132, refer to [EC-219, "DTC Confirmation Procedure"](#).
- For DTC P0133, refer to [EC-225, "DTC Confirmation Procedure"](#).
- For DTC P2A00, refer to [EC-500, "DTC Confirmation Procedure"](#).

OK or NG

- OK >> GO TO 15.
- NG >> GO TO 13.

13.CHECK A/F SENSOR 1 CIRCUIT

Perform Diagnostic Procedure according to corresponding DTC.

>> GO TO 14.

14.CHECK "A/F ALPHA-B1"

1. Start engine.
2. Select "A/F ALPHA-B1" in "DATA MONITOR (SPEC)" mode, and make sure that the indication is within the SP value.

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 15.

15.DISCONNECT AND RECONNECT ECM HARNESS CONNECTOR

1. Stop the engine.
2. Disconnect ECM harness connector. Check pin terminal and connector for damage, and then reconnect it.

>> GO TO 16.

16.CHECK "A/F ALPHA-B1"

1. Start engine.
2. Select "A/F ALPHA-B1" in "DATA MONITOR (SPEC)" mode, and make sure that the indication is within the SP value.

OK or NG


- OK >> **INSPECTION END**
- NG >> Detect malfunctioning part according to [EC-88, "Symptom Matrix Chart"](#).

17.CHECK "B/FUEL SCHDL"

Select "B/FUEL SCHDL" in "DATA MONITOR (SPEC)" mode, and make sure that the indication is within the SP value.

OK or NG

- OK >> **INSPECTION END**
- NG (More than the SP value)>>GO TO 18.
- NG (Less than the SP value)>>GO TO 25.

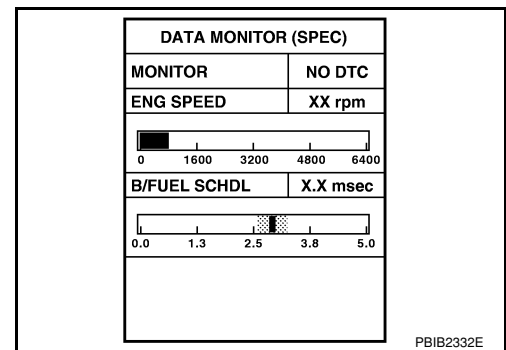

18.DETECT MALFUNCTIONING PART

1. Check for the cause of large engine friction. Refer to the following.
 - Engine oil level is too high
 - Engine oil viscosity
 - Belt tension of alternator, A/C compressor, etc. is excessive
 - Noise from engine

TROUBLE DIAGNOSIS - SPECIFICATION VALUE

< SERVICE INFORMATION >

- Noise from transmission, etc.
- 2. Check for the cause of insufficient combustion. Refer to the following.
 - Valve clearance malfunction
 - Intake valve timing control function malfunction
 - Camshaft sprocket installation malfunction, etc.

>> Repair or replace malfunctioning part, and then GO TO 30.

19. CHECK INTAKE SYSTEM

Check for the cause of uneven air flow through mass air flow sensor. Refer to the following.

- Crushed air ducts
- Malfunctioning seal of air cleaner element
- Uneven dirt of air cleaner element
- Improper specification of intake air system

OK or NG

OK >> GO TO 21.

NG >> Repair or replace malfunctioning part, and then GO TO 20.

20. CHECK "A/F ALPHA-B1" AND "B/FUEL SCHDL"

Select "A/F ALPHA-B1" and "B/FUEL SCHDL" in "DATA MONITOR (SPEC)" mode, and make sure that the each indication is within the SP value.

OK or NG

OK >> **INSPECTION END**

NG ("B/FUEL SCHDL" is more, "A/F ALPHA-B1" is less than the SP value)>>GO TO 21.

21. DISCONNECT AND RECONNECT MASS AIR FLOW SENSOR HARNESS CONNECTOR

1. Stop the engine.
2. Disconnect mass air flow sensor harness connector. Check pin terminal and connector for damage and then reconnect it again.

>> GO TO 22.

22. CHECK "A/F ALPHA-B1"

1. Start engine.
2. Select "A/F ALPHA-B1" in "DATA MONITOR (SPEC)" mode, and make sure that the indication is within the SP value.

OK or NG

OK >> 1. Detect malfunctioning part of mass air flow sensor circuit and repair it. Refer to [EC-167](#).
2. GO TO 29.

NG >> GO TO 23.


23. CHECK "MAS A/F SE-B1"

Select "MAS A/F SE-B1" in "DATA MONITOR (SPEC)" mode, and make sure that the indication is within the SP value.

OK or NG

OK >> GO TO 24.

NG (More than the SP value)>>Replace mass air flow sensor, and then GO TO 29.

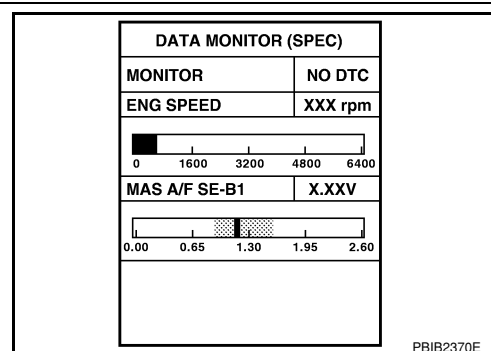

24. REPLACE ECM

1. Replace ECM.
2. Perform initialization of NVIS(NATS) system and registration of all NVIS(NATS) ignition key IDs. Refer to [BL-211, "ECM Re-communicating Function"](#).

TROUBLE DIAGNOSIS - SPECIFICATION VALUE

< SERVICE INFORMATION >

3. Perform [EC-75, "VIN Registration"](#).
4. Perform [EC-76, "Accelerator Pedal Released Position Learning"](#).
5. Perform [EC-76, "Throttle Valve Closed Position Learning"](#).
6. Perform [EC-76, "Idle Air Volume Learning"](#).

>> GO TO 29.

25.CHECK INTAKE SYSTEM

Check for the cause of uneven air flow through mass air flow sensor. Refer to the following.

- Crushed air ducts
- Malfunctioning seal of air cleaner element
- Uneven dirt of air cleaner element
- Improper specification of intake air system

OK or NG

OK >> GO TO 27.

NG >> Repair or replace malfunctioning part, and then GO TO 26.

26.CHECK "B/FUEL SCHDL"

Select "B/FUEL SCHDL" in "DATA MONITOR (SPEC)" mode, and make sure that the indication is within the SP value.

OK or NG

OK >> **INSPECTION END**

NG (Less than the SP value)>>GO TO 27.


27.CHECK "MAS A/F SE-B1"

Select "MAS A/F SE-B1" in "DATA MONITOR (SPEC)" mode, and make sure that the indication is within the SP value.

OK or NG

OK >> GO TO 28.

NG (Less than the SP value)>>Replace mass air flow sensor, and then GO TO 30.

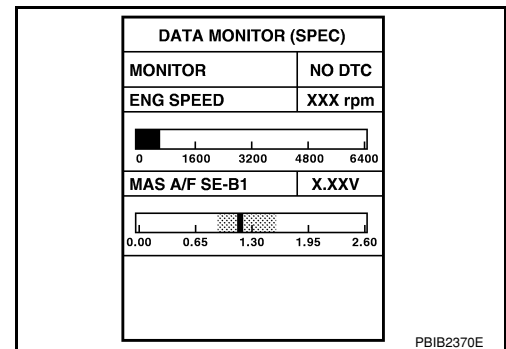

28.CHECK INTAKE SYSTEM

Check for the cause of air leak after the mass air flow sensor. Refer to the following.

- Disconnection, looseness, and cracks in air duct
- Looseness of oil filler cap
- Disconnection of oil level gauge
- Open stuck, breakage, hose disconnection, or cracks of PCV valve
- Disconnection or cracks of EVAP purge hose, open stuck of EVAP canister purge volume control solenoid valve
- Malfunctioning seal of rocker cover gasket
- Disconnection, looseness, or cracks of hoses, such as vacuum hose, connecting to intake air system parts
- Malfunctioning seal of intake air system, etc.

>> GO TO 30.

29.CHECK "A/F ALPHA-B1" AND "B/FUEL SCHDL"

Select "A/F ALPHA-B1" and "B/FUEL SCHDL" in "DATA MONITOR (SPEC)" mode, and make sure that the each indication is within the SP value.

OK or NG

OK >> **INSPECTION END**

NG >> Detect malfunctioning part according to [EC-88, "Symptom Matrix Chart"](#).

TROUBLE DIAGNOSIS - SPECIFICATION VALUE

< SERVICE INFORMATION >

30.CHECK "B/FUEL SCHDL"

Select "B/FUEL SCHDL" in "DATA MONITOR (SPEC)" mode, and then make sure that the indication is within the SP value.

OK or NG

OK >> **INSPECTION END**

NG >> Detect malfunctioning part according to [EC-88, "Symptom Matrix Chart"](#).

A

EC

C

D

E

F

G

H

I

J

K

L

M

N

O

P

TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT

< SERVICE INFORMATION >

TROUBLE DIAGNOSIS FOR INTERMITTENT INCIDENT

Description

INFOID:000000001702603

Intermittent incidents may occur. In many cases, the malfunction resolves itself (the part or circuit function returns to normal without intervention). It is important to realize that the symptoms described in the customer's complaint often do not recur on (1st trip) DTC visits. Realize also that the most frequent cause of Intermittent Incidents occurrences is poor electrical connections. Because of this, the conditions under which the incident occurred may not be clear. Therefore, circuit checks made as part of the standard diagnostic procedure may not indicate the specific malfunctioning area.

Common Intermittent Incidents Report Situations

| STEP in Work Flow | Situation |
|-------------------|--|
| 2 | The CONSULT-II is used. The SELF-DIAG RESULTS screen shows time data other than 0 or [1t]. |
| 3 or 4 | The symptom described by the customer does not recur. |
| 5 | (1st trip) DTC does not appear during the DTC Confirmation Procedure. |
| 10 | The Diagnostic Procedure for PXXXX does not indicate the malfunctioning area. |

Diagnosis Procedure

INFOID:000000001702604

1.INSPECTION START

Erase (1st trip) DTCs.

Refer to [EC-47, "Emission-related Diagnostic Information"](#).

>> GO TO 2.

2.CHECK GROUND TERMINALS

Check ground terminals for corroding or loose connection.

Refer to [EC-142, "Ground Inspection"](#).

OK or NG

OK >> GO TO 3.

NG >> Repair or replace.

3.SEARCH FOR ELECTRICAL INCIDENT

Perform [GI-25, "How to Perform Efficient Diagnosis for an Electrical Incident"](#), "INCIDENT SIMULATION TESTS".

OK or NG

OK >> GO TO 4.

NG >> Repair or replace.

4.CHECK CONNECTOR TERMINALS

Refer to [GI-22, "How to Check Terminal"](#), "HOW TO PROBE CONNECTORS", "How to Check Enlarged Contact Spring of Terminal".

OK or NG

OK >> **INSPECTION END**

NG >> Repair or replace connector.

POWER SUPPLY AND GROUND CIRCUIT

< SERVICE INFORMATION >

POWER SUPPLY AND GROUND CIRCUIT

Wiring Diagram



INFOID:000000001702605

EC-MAIN-01

A

EC

— : DETECTABLE LINE FOR DTC
 - - - : NON-DETECTABLE LINE FOR DTC

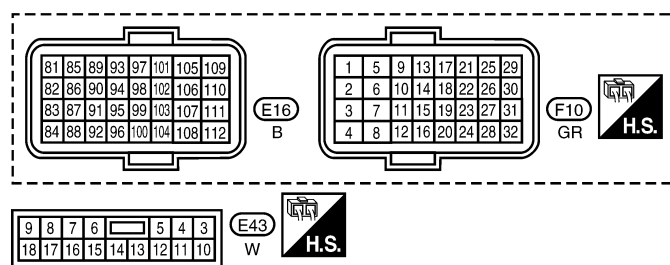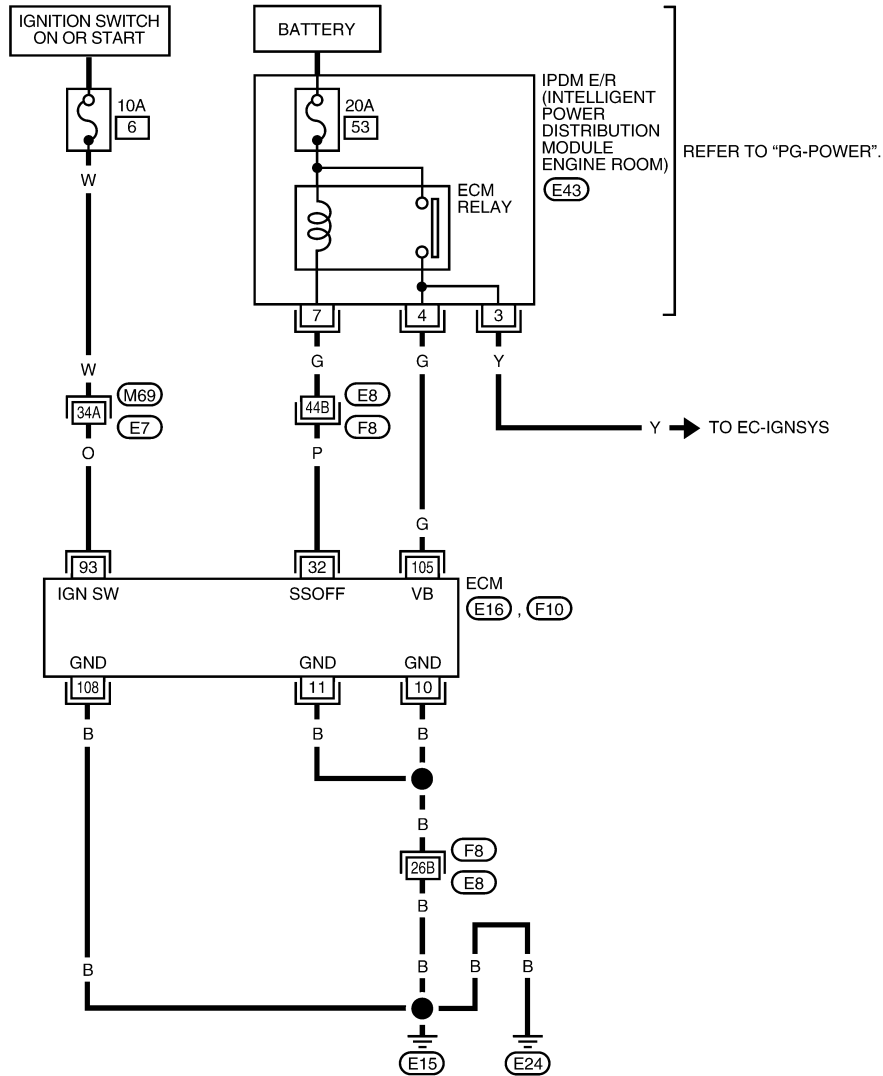

REFER TO THE FOLLOWING.
 (M69), (F8) - SUPER
 MULTIPLE JUNCTION (SMJ)

BBWA2625E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

C

D

E

F

G

H

I

J

K

L

M

N

O

P

POWER SUPPLY AND GROUND CIRCUIT

< SERVICE INFORMATION >

| TER-MI-NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------|------------|------------------------------|--|-------------------------------|
| 10 11 | B B | ECM ground | [Engine is running] • Idle speed | Body ground |
| 32 | P | ECM relay (Self shut-off) | [Engine is running] [Ignition switch: OFF] • For a few seconds after turning ignition switch OFF | 0 - 1.0V |
| | | | [Ignition switch: OFF] • More than a few seconds after turning ignition switch OFF | BATTERY VOLTAGE (11 - 14V) |
| 93 | O | Ignition switch | [Ignition switch: OFF] | 0V |
| | | | [Ignition switch: ON] | BATTERY VOLTAGE (11 - 14V) |
| 105 | G | Power supply for ECM | [Ignition switch: ON] | BATTERY VOLTAGE (11 - 14V) |
| 108 | B | ECM ground | [Engine is running] • Idle speed | Body ground |

Diagnosis Procedure

INFOID:000000001702606

1. INSPECTION START

Start engine.

Is engine running?

Yes or No

Yes >> GO TO 8.

No >> GO TO 2.

2. CHECK ECM POWER SUPPLY CIRCUIT-I


- Turn ignition switch OFF and then ON.
- Check voltage between ECM terminal 93 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

OK >> GO TO 4.

NG >> GO TO 3.

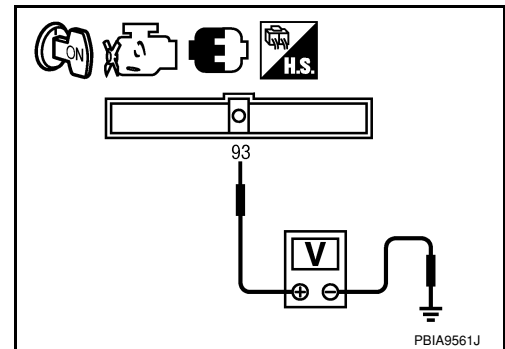

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M69, E7
- 10A fuse
- Harness for open or short between ECM and fuse


>> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK GROUND CONNECTIONS

- Turn ignition switch OFF.
- Loosen and retighten ground screw on the body.
Refer to [EC-142. "Ground Inspection"](#).

POWER SUPPLY AND GROUND CIRCUIT

< SERVICE INFORMATION >

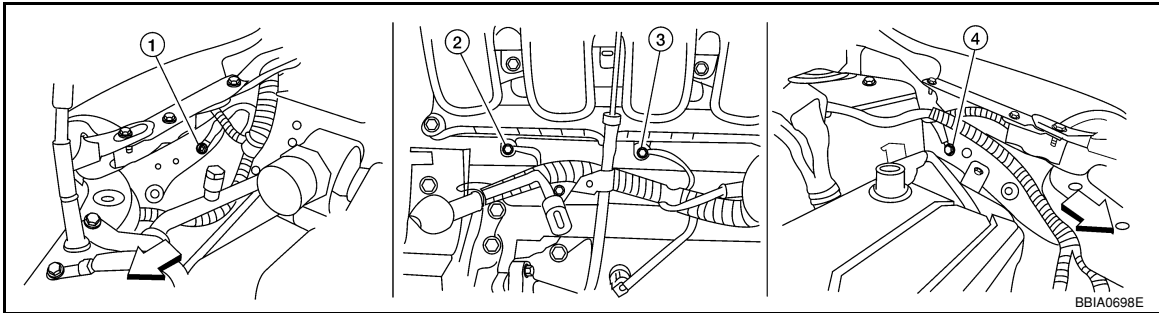

←: Vehicle front

- 1. Body ground E24
- 4. Body ground E15

- 2. Engine ground F9

- 3. Engine ground F16

OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace ground connections.

5. CHECK ECM GROUND CIRCUIT FOR OPEN AND SHORT-I

- 1. Disconnect ECM harness connector.
- 2. Check harness continuity between ECM terminals 10, 11, 108 and ground. Refer to Wiring Diagram.

Continuity should exist.

- 3. Also check harness for short to power.

OK or NG

- OK >> GO TO 7.
- NG >> GO TO 6.

6. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors F8, E8
- Harness for open or short between ECM and ground

>> Repair open circuit or short to power in harness or connectors.


7. CHECK ECM POWER SUPPLY CIRCUIT-II

- 1. Reconnect ECM harness connector.
- 2. Turn ignition switch ON.
- 3. Check voltage between IPDM E/R terminal 3 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

- OK >> Go to [EC-531](#).
- NG >> GO TO 8.

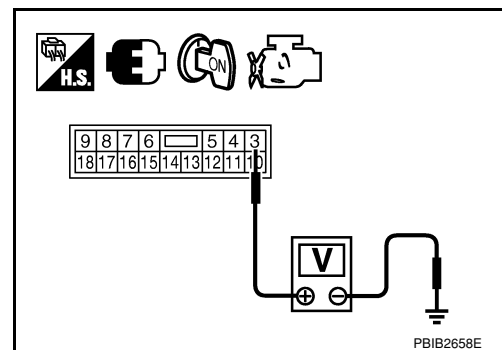

8. CHECK ECM POWER SUPPLY CIRCUIT-III

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON and then OFF.

POWER SUPPLY AND GROUND CIRCUIT

< SERVICE INFORMATION >

3. Check voltage between ECM terminal 105 and ground with CONSULT-II or tester.


Voltage: After turning ignition switch OFF, battery voltage will exist for a few seconds, then drop approximately 0V.

OK or NG

OK >> GO TO 14.

NG (Battery voltage does not exist.)>>GO TO 9.

NG (Battery voltage exists for more than a few seconds.)>>GO TO 11.

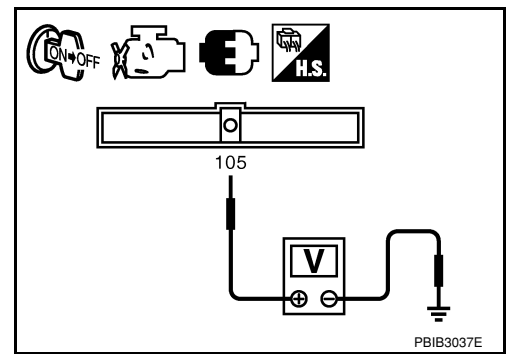

9. CHECK ECM POWER SUPPLY CIRCUIT-IV


1. Turn ignition switch OFF and wait at least 10 seconds.
2. Check voltage between ECM terminal 32 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

OK >> GO TO 10.

NG >> GO TO 11.

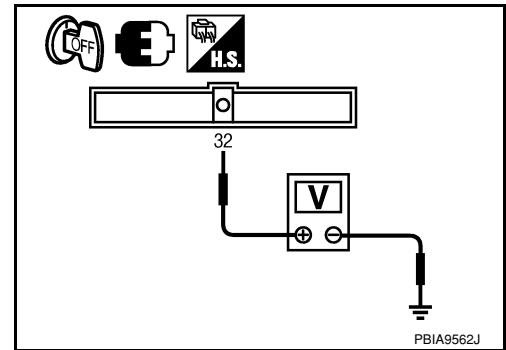

10. CHECK ECM POWER SUPPLY CIRCUIT-V

1. Disconnect ECM harness connector.
2. Disconnect IPDM E/R harness connector E43.
3. Check harness continuity between ECM terminal 105 and IPDM E/R terminal 4. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 17.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

11. CHECK ECM POWER SUPPLY CIRCUIT-VI

1. Disconnect ECM harness connector.
2. Disconnect IPDM E/R harness connector E43.
3. Check harness continuity between ECM terminal 32 and IPDM E/R terminal 7. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 13.

NG >> GO TO 12.

12. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness for open or short between ECM and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

POWER SUPPLY AND GROUND CIRCUIT

< SERVICE INFORMATION >

13.CHECK 20A FUSE


1. Disconnect 20A fuse from IPDM E/R.
2. Check 20A fuse.

OK or NG

- OK >> GO TO 17.
NG >> Replace 20A fuse.

14.CHECK GROUND CONNECTIONS

1. Loosen and retighten ground screw on the body.
Refer to [EC-142. "Ground Inspection"](#).

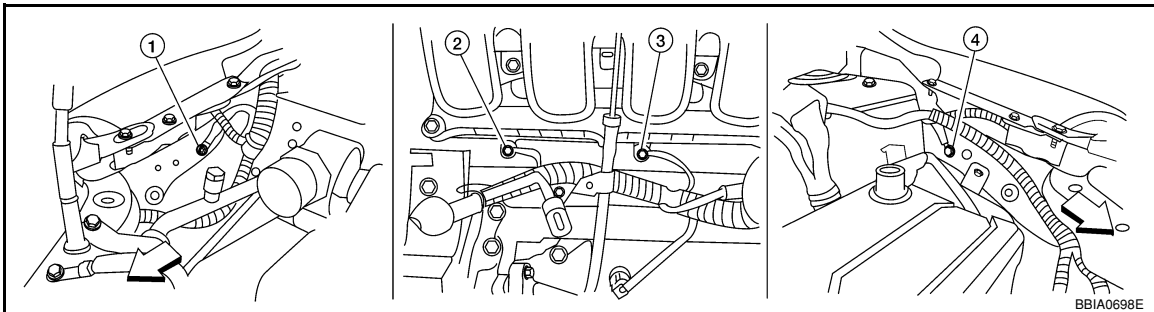

← Vehicle front

1. Body ground E24
2. Engine ground F9
3. Engine ground F16
4. Body ground E15

OK or NG

- OK >> GO TO 15.
NG >> Repair or replace ground connections.

15.CHECK ECM GROUND CIRCUIT FOR OPEN AND SHORT-II

1. Disconnect ECM harness connector.
2. Check harness continuity between ECM terminals 10, 11, 108 and ground.
Refer to Wiring Diagram.

Continuity should exist.

3. Also check harness for short to power.

OK or NG

- OK >> GO TO 17.
NG >> GO TO 16.

16.DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors F8, E8
- Harness for open or short between ECM and ground

>> Repair open circuit or short to power in harness or connectors.

17.CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-25. "IPDM E/R Power/Ground Circuit Inspection"](#).
NG >> Repair open circuit or short to power in harness or connectors.

POWER SUPPLY AND GROUND CIRCUIT

< SERVICE INFORMATION >

Ground Inspection

INFOID:000000001702607


Ground connections are very important to the proper operation of electrical and electronic circuits. Ground connections are often exposed to moisture, dirt and other corrosive elements. The corrosion (rust) can become an unwanted resistance. This unwanted resistance can change the way a circuit works.

Electronically controlled circuits are very sensitive to proper grounding. A loose or corroded ground can drastically affect an electronically controlled circuit. A poor or corroded ground can easily affect the circuit. Even when the ground connection looks clean, there can be a thin film of rust on the surface.

When inspecting a ground connection follow these rules:

- Remove the ground bolt or screw.
- Inspect all mating surfaces for tarnish, dirt, rust, etc.
- Clean as required to assure good contact.
- Reinstall bolt or screw securely.
- Inspect for "add-on" accessories which may be interfering with the ground circuit.
- If several wires are crimped into one ground eyelet terminal, check for proper crimps. Make sure all of the wires are clean, securely fastened and providing a good ground path. If multiple wires are cased in one eyelet make sure no ground wires have excess wire insulation.

For detailed ground distribution information, refer to [PG-28, "Ground Distribution"](#).

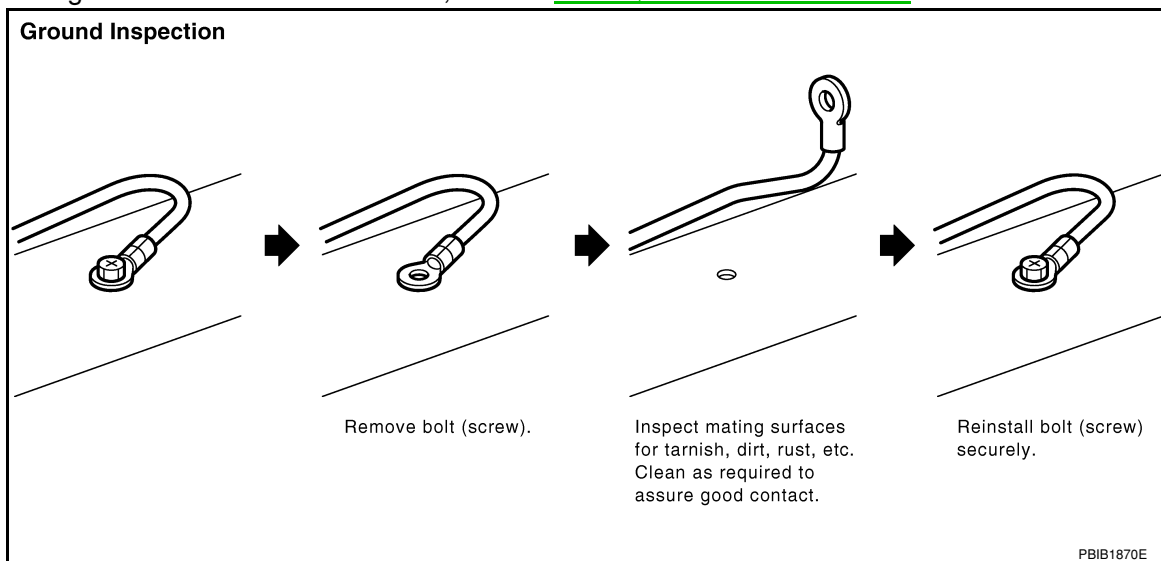

DTC U1000, U1001 CAN COMMUNICATION LINE

< SERVICE INFORMATION >

DTC U1000, U1001 CAN COMMUNICATION LINE

Description

INFOID:000000001702608

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

On Board Diagnosis Logic

INFOID:000000001702609

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|-------------------|------------------------|---|--|
| U1000*1 1000*1 | CAN communication line | When ECM is not transmitting or receiving CAN communication signal of OBD (emission related diagnosis) for 2 seconds or more. | • Harness or connectors (CAN communication line is open or shorted.) |
| U1001*2 1001*2 | | When ECM is not transmitting or receiving CAN communication signal other than OBD (emission-related diagnosis) for 2 seconds or more. | |

*1: This self-diagnosis has the one trip detection logic (A/T, CVT).

The MIL will not light up for this self-diagnosis (M/T).

*2: The MIL will not light up for this self-diagnosis.

DTC Confirmation Procedure

INFOID:000000001702610

1. Turn ignition switch ON and wait at least 3 seconds.
2. Select "DATA MONITOR" mode with CONSULT-II.
3. If 1st trip DTC is detected, go to [EC-144, "Diagnosis Procedure"](#).

DTC U1000, U1001 CAN COMMUNICATION LINE



< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001702611

EC-CAN-01

- : DETECTABLE LINE FOR DTC
- : NON-DETECTABLE LINE FOR DTC
- ▬ : DATA LINE

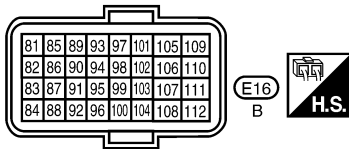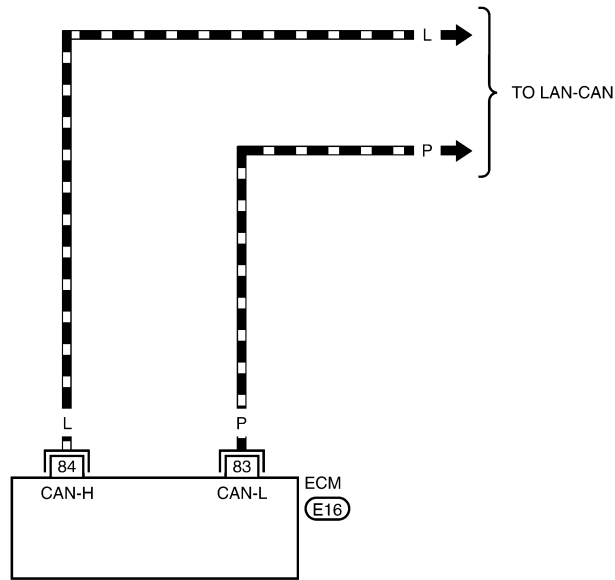

BBWA2626E

Diagnosis Procedure

INFOID:000000001702612

Go to [LAN-23, "CAN System Specification Chart"](#).

DTC U1010 CAN COMMUNICATION

< SERVICE INFORMATION >

DTC U1010 CAN COMMUNICATION

Description

INFOID:000000001702613

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

On Board Diagnosis Logic

INFOID:000000001702614

**This self-diagnosis has the one trip detection logic (A/T, CVT).
The MIL will not light up for this self-diagnosis (M/T).**


| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|------------------------|--|----------------|
| U1010 1010 | CAN communication bus | When detecting error during the initial diagnosis for CAN controller of each control unit. | • ECM |

DTC Confirmation Procedure

INFOID:000000001702615

① WITH CONSULT-II

1. Turn ignition switch ON.
2. Select "DATA MONITOR" mode with CONSULT-II.
3. If 1st trip DTC is detected, go to [EC-145. "Diagnosis Procedure"](#).

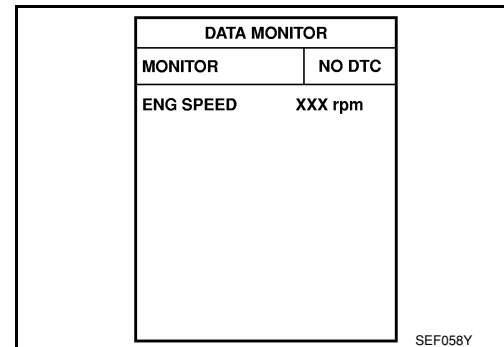

② WITH GST

Follow the procedure "WITH CONSULT-II" above.

Diagnosis Procedure

INFOID:000000001702616

1. INSPECTION START

① With CONSULT-II

1. Turn ignition switch ON.
2. Select "SELF-DIAG RESULTS" mode with CONSULT-II.
3. Touch "ERASE".
4. **Perform DTC Confirmation Procedure.**
See [EC-145. "DTC Confirmation Procedure"](#).
5. Is the 1st trip DTC U1010 displayed again?

② With GST

1. Turn ignition switch ON.
2. Select Service \$04 with GST.
3. **Perform DTC Confirmation Procedure.**
See [EC-145. "DTC Confirmation Procedure"](#).
4. Is the 1st trip DTC U1010 displayed again?

Yes or No

- Yes >> GO TO 2.
No >> **INSPECTION END**

DTC U1010 CAN COMMUNICATION

< SERVICE INFORMATION >

2. REPLACE ECM

1. Replace ECM.
2. Perform initialization of NVIS (NATS) system and registration of all NVIS (NATS) ignition key IDs.
Refer to [BL-211. "ECM Re-communicating Function"](#).
3. Perform [EC-75. "VIN Registration"](#).
4. Perform [EC-76. "Accelerator Pedal Released Position Learning"](#).
5. Perform [EC-76. "Throttle Valve Closed Position Learning"](#).
6. Perform [EC-76. "Idle Air Volume Learning"](#).

>> INSPECTION END

DTC P0011 IVT CONTROL

< SERVICE INFORMATION >

DTC P0011 IVT CONTROL


Description

INFOID:000000001702617

SYSTEM DESCRIPTION

| Sensor | Input signal to ECM | ECM function | Actuator |
|--|----------------------------------|-----------------------------|--|
| Crankshaft position sensor (POS) Camshaft position sensor (PHASE) | Engine speed and piston position | Intake valve timing control | Intake valve timing control solenoid valve |
| Engine coolant temperature sensor | Engine coolant temperature | | |
| Wheel sensor | Vehicle speed* | | |

*: This signal is sent to the ECM through CAN communication line.

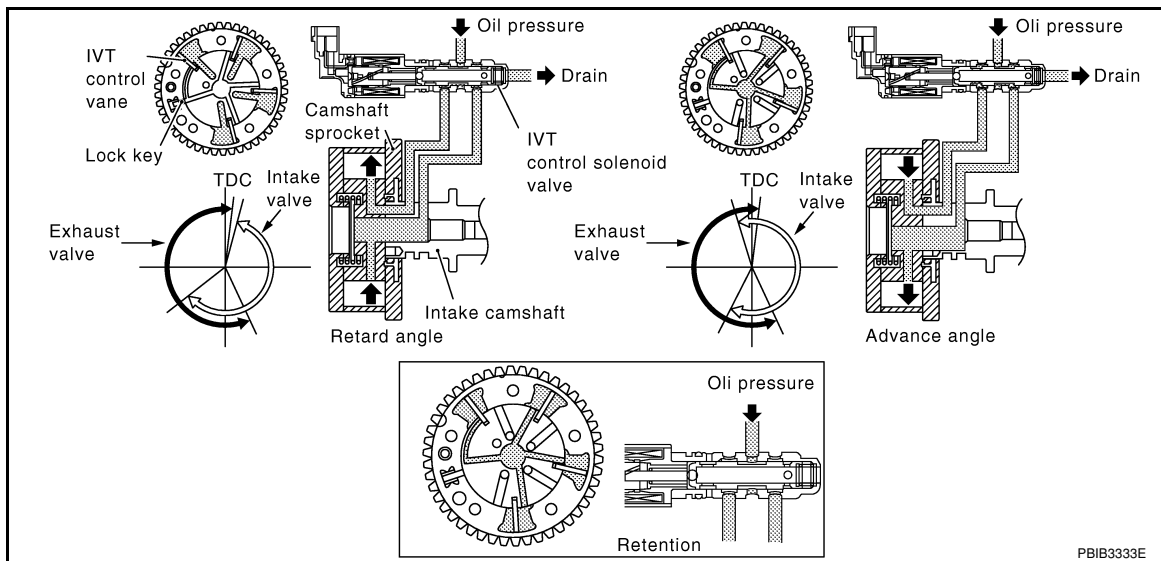

This mechanism hydraulically controls cam phases continuously with the fixed operating angle of the intake valve. The ECM receives signals such as crankshaft position, camshaft position, engine speed, and engine coolant temperature. Then, the ECM sends ON/OFF pulse duty signals to the intake valve timing control solenoid valve depending on driving status. This makes it possible to control the shut/open timing of the intake valve to increase engine torque in low/mid speed range and output in high-speed range.

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702618

Specification data are reference values.

| MONITOR ITEM | CONDITION | SPECIFICATION |
|----------------|---|--------------------|
| INT/V TIM (B1) | • Engine: After warming up • Air conditioner switch: OFF • Shift lever: P or N (A/T, CVT), Neutral (M/T) • No load | Idle |
| | When revving engine up to 2,000 rpm quickly | Approx. 0° - 40°CA |
| INT/V SOL (B1) | • Engine: After warming up • Air conditioner switch: OFF • Shift lever: P or N (A/T, CVT), Neutral (M/T) • No load | Idle |
| | When revving engine up to 2,000 rpm quickly | Approx. 0% - 90% |

DTC P0011 IVT CONTROL

< SERVICE INFORMATION >

On Board Diagnosis Logic

INFOID:000000001702619

| DTC No. | Trouble diagnosis name | Detecting condition | Possible cause |
|---------------|---|--|--|
| P0011 0011 | Intake valve timing control performance | There is a gap between angle of target and phase-control angle degree. | <ul style="list-style-type: none"> • Crankshaft position sensor (POS) • Camshaft position sensor (PHASE) • Intake valve timing control solenoid valve • Accumulation of debris to the signal pick-up portion of the camshaft • Timing chain installation • Foreign matter caught in the oil groove for intake valve timing control |

FAIL-SAFE MODE

ECM enters in fail-safe mode when the malfunction is detected.

| Detected items | Engine operating condition in fail-safe mode |
|-----------------------------|---|
| Intake valve timing control | The signal is not energized to the solenoid valve and the valve control does not function |

DTC Confirmation Procedure

INFOID:000000001702620

CAUTION:

Always drive at a safe speed.

NOTE:

- If DTC P0011 is displayed with DTC P0075, first perform trouble diagnosis for DTC P0075. See [EC-162](#).
- If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is between 10V and 16V at idle.

Ⓟ WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-II.
2. Start engine and warm it up to the normal operating temperature.
3. Maintain the following conditions for at least 6 consecutive seconds.
Hold the accelerator pedal as steady as possible.

| | |
|---------------|--|
| ENG SPEED | 2,000 rpm (A constant rotation is maintained.) |
| COOLAN TEMP/S | More than 60°C (140°F) |
| B/FUEL SCHDL | More than 3.87 msec |
| Shift lever | P or N position (A/T, CVT) Neutral position (M/T) |

| DATA MONITOR | |
|---------------|----------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |
| COOLAN TEMP/S | XXX °C |
| VHCL SPEED SE | XXX km/h |
| B/FUEL SCHDL | XXX msec |

PBIB0164E

4. Let engine idle for 10 seconds.
5. If 1st trip DTC is detected, go to [EC-149, "Diagnosis Procedure"](#).
If 1st trip DTC is not detected, go to next step.
6. Maintain the following conditions for at least 20 consecutive seconds.

| | |
|---------------|--|
| ENG SPEED | 1,200 - 3,175 rpm (A constant rotation is maintained.) |
| COOLAN TEMP/S | 70 - 105°C (158 - 221°F) |

DTC P0011 IVT CONTROL

< SERVICE INFORMATION >

| | |
|-------------------------|---|
| Shift lever | 1st or 2nd position |
| Driving location uphill | Driving vehicle uphill (Increased engine load will help maintain the driving conditions required for this test.) |

7. If 1st trip DTC is detected, go to [EC-149. "Diagnosis Procedure"](#).

WITH GST

Follow the procedure "WITH CONSULT-II" above.

Diagnosis Procedure


INFOID:000000001702621

1. CHECK OIL PRESSURE WARNING LAMP

1. Start engine.
2. Check oil pressure warning lamp and confirm it is not illuminated.

OK or NG

- OK >> GO TO 2.
NG >> Go to [LU-6. "Inspection"](#).

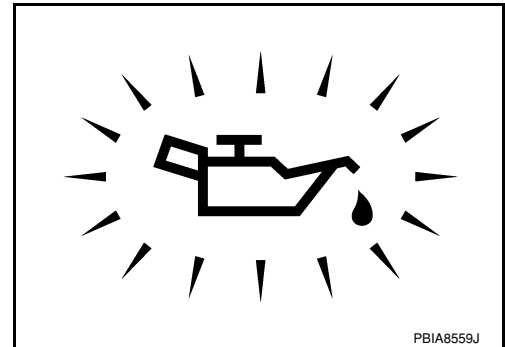

2. CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE

Refer to [EC-150. "Component Inspection"](#).

OK or NG

- OK >> GO TO 3.
NG >> Replace intake valve timing control solenoid valve.

3. CHECK CRANKSHAFT POSITION SENSOR (POS)

Refer to [EC-301. "Component Inspection"](#).

OK or NG

- OK >> GO TO 4.
NG >> Replace crankshaft position sensor (POS).

4. CHECK CAMSHAFT POSITION SENSOR (PHASE)

Refer to [EC-307. "Component Inspection"](#).

OK or NG

- OK >> GO TO 5.
NG >> Replace camshaft position sensor (PHASE).


5. CHECK CAMSHAFT (INTAKE)

Check the following.

- Accumulation of debris to the signal plate of camshaft (1) rear end
- Chipping signal plate of camshaft rear end

OK or NG

- OK >> GO TO 6.
NG >> Remove debris and clean the signal plate of camshaft rear end or replace camshaft.

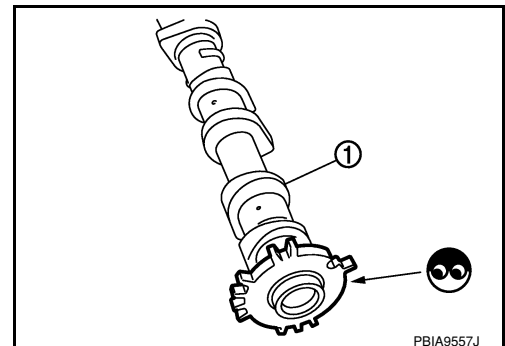

6. CHECK TIMING CHAIN INSTALLATION

Check service records for any recent repairs that may cause timing chain misaligned.

DTC P0011 IVT CONTROL

< SERVICE INFORMATION >

Are there any service records that may cause timing chain misaligned?

Yes or No

- Yes >> Check timing chain installation. Refer to [EM-37](#).
- No >> GO TO 7.

7. CHECK LUBRICATION CIRCUIT

Refer to [EM-47, "Removal and Installation"](#).

OK or NG

- OK >> GO TO 8.
- NG >> Clean lubrication line.

8. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

For Wiring Diagram, refer to [EC-297, "Wiring Diagram"](#) for CKP sensor (POS) and [EC-304, "Wiring Diagram"](#) for CMP sensor (PHASE).

>> **INSPECTION END**

Component Inspection

INFOID:000000001702622

INTAKE VALVE TIMING CONTROL SOLENOID VALVE

1. Disconnect intake valve timing control solenoid valve harness connector.
2. Check resistance between intake valve timing control solenoid valve as follows.

| Terminal | Resistance |
|-------------------|--------------------------------------|
| 1 and 2 | 6.7 - 7.7Ω [at 20°C (68°F)] |
| 1 or 2 and ground | ∞Ω (Continuity should not exist.) |

If NG, replace intake valve timing control solenoid valve.
If OK, go to next step.

3. Remove intake valve timing control solenoid valve.
4. Provide 12V DC between intake valve timing control solenoid valve terminals and then interrupt it. Make sure that the plunger moves as shown in the figure.


CAUTION:

Do not apply 12V DC continuously for 5 seconds or more. Doing so may result in damage to the coil in intake valve timing control solenoid valve.


If NG, replace intake valve timing control solenoid valve.

NOTE:

Always replace O-ring when intake valve timing control solenoid valve is removed.

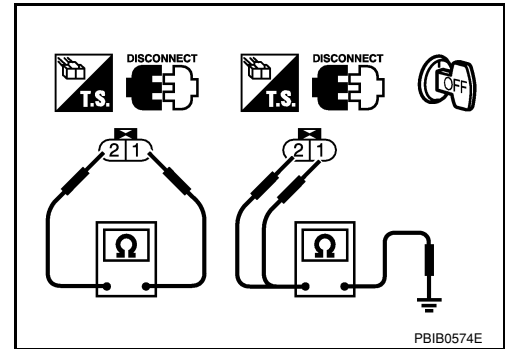

PBIB0574E

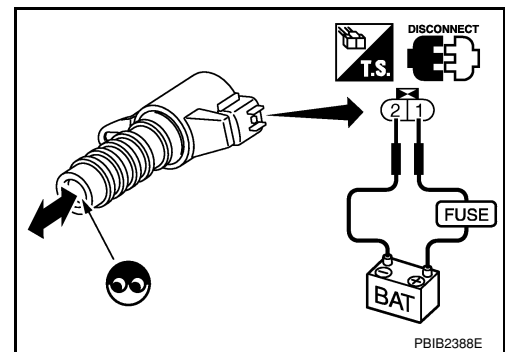

PBIB2388E

Removal and Installation

INFOID:000000001702623

INTAKE VALVE TIMING CONTROL SOLENOID VALVE

Refer to [EM-47](#).

DTC P0031, P0032 A/F SENSOR 1 HEATER

< SERVICE INFORMATION >

DTC P0031, P0032 A/F SENSOR 1 HEATER

Description

INFOID:000000001702624

SYSTEM DESCRIPTION

| Sensor | Input Signal to ECM | ECM function | Actuator |
|--|----------------------|--|--------------------------------------|
| Camshaft position sensor (PHASE) Crankshaft position sensor (POS) | Engine speed | Air fuel ratio (A/F) sensor 1 heater control | Air fuel ratio (A/F) sensor 1 heater |
| Mass air flow sensor | Amount of intake air | | |

The ECM performs ON/OFF duty control of the A/F sensor 1 heater corresponding to the engine operating condition to keep the temperature of A/F sensor 1 element at the specified range.

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702625

Specification data are reference values.

| MONITOR ITEM | CONDITION | SPECIFICATION |
|-----------------|--|---------------|
| A/F S1 HTR (B1) | • Engine: After warming up, idle the engine (More than 140 seconds after starting engine.) | 4 - 100% |

On Board Diagnosis Logic

INFOID:000000001702626

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|---|--|--|
| P0031 0031 | Air fuel ratio (A/F) sensor 1 heater control circuit low | The current amperage in the air fuel ratio (A/F) sensor 1 heater circuit is out of the normal range. [An excessively low voltage signal is sent to ECM through the air fuel ratio (A/F) sensor 1 heater.] | <ul style="list-style-type: none"> • Harness or connectors [Air fuel ratio (A/F) sensor 1 heater circuit is open or shorted.] • Air fuel ratio (A/F) sensor 1 heater |
| P0032 0032 | Air fuel ratio (A/F) sensor 1 heater control circuit high | The current amperage in the air fuel ratio (A/F) sensor 1 heater circuit is out of the normal range. [An excessively high voltage signal is sent to ECM through the air fuel ratio (A/F) sensor 1 heater.] | <ul style="list-style-type: none"> • Harness or connectors [Air fuel ratio (A/F) sensor 1 heater circuit is shorted.] • Air fuel ratio (A/F) sensor 1 heater |

DTC Confirmation Procedure

INFOID:000000001702627

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is between 10.5V and 16V at idle.

With CONSULT-II

WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-II.
2. Start engine and run it for at least 10 seconds at idle speed.
3. If 1st trip DTC is detected, go to [EC-153, "Diagnosis Procedure"](#).

| DATA MONITOR | |
|--------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |

SEF058Y

DTC P0031, P0032 A/F SENSOR 1 HEATER

< SERVICE INFORMATION >

WITH GST




Follow the procedure "WITH CONSULT-II" above.

Wiring Diagram

INFOID:000000001702628


EC-A/FH-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

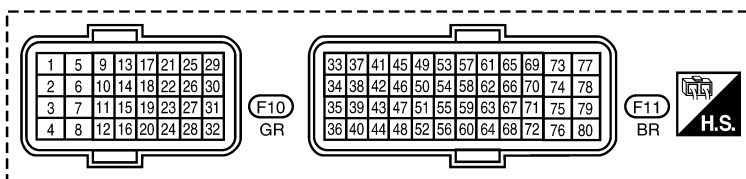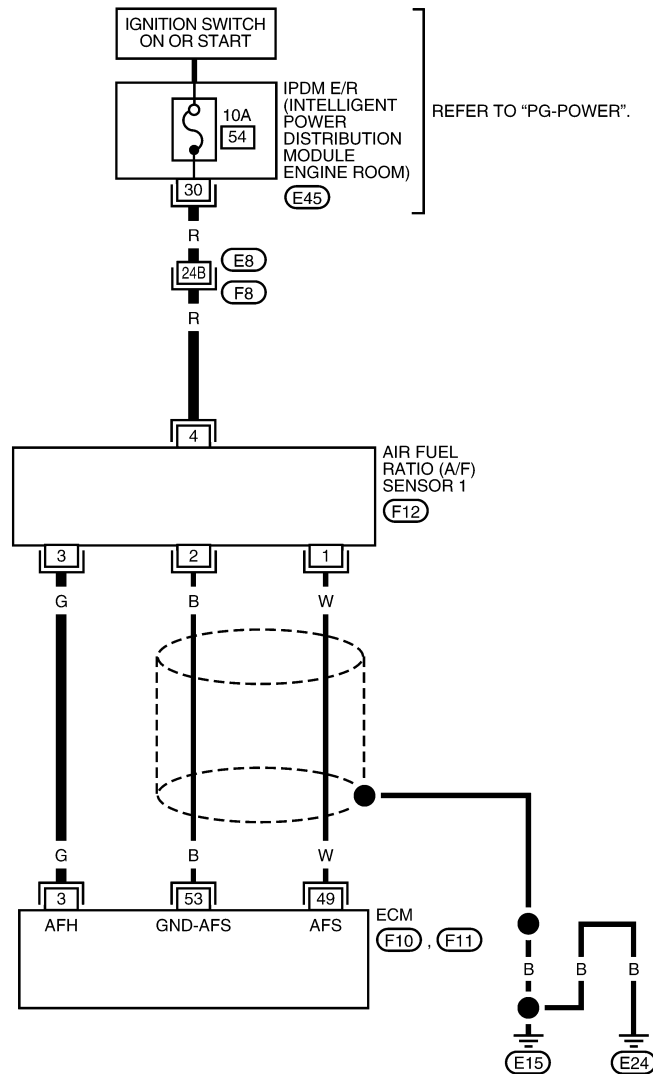

REFER TO THE FOLLOWING.

(F8) - SUPER MULTIPLE JUNCTION (SMJ)



BBWA2630E

Specification data are reference values and are measured between each terminal and ground.


DTC P0031, P0032 A/F SENSOR 1 HEATER

< SERVICE INFORMATION >

Pulse signal is measured by CONSULT-II.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.
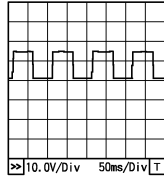
| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------------|---------------|---------------------|--|--|
| 3 | G | A/F sensor 1 heater | [Engine is running] • Warm-up condition • Idle speed (More than 140 seconds after starting engine) | Approximately 2.9 - 8.8V★  |
| 49 | W | A/F sensor 1 | [Engine is running] • Warm-up condition • Engine speed: 2,000 rpm | Approximately 1.8V Output voltage varies with air fuel ratio. |
| 53 | B | A/F sensor 1 | [Ignition switch: ON] | Approximately 2.2V |


★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnosis Procedure

INFOID:000000001702629

1. CHECK GROUND CONNECTIONS

- Turn ignition switch OFF.
- Loosen and retighten ground screw on the body.
Refer to [EC-142, "Ground Inspection"](#).

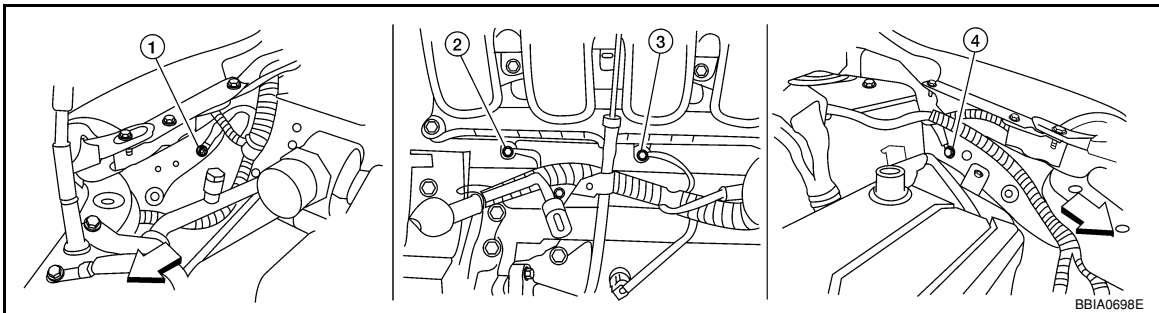

↔: Vehicle front

- | | | |
|--------------------|---------------------|----------------------|
| 1. Body ground E24 | 2. Engine ground F9 | 3. Engine ground F16 |
| 4. Body ground E15 | | |

OK or NG


- OK >> GO TO 2.
 NG >> Repair or replace ground connections.

2. CHECK AIR FUEL RATIO (A/F) SENSOR 1 POWER SUPPLY CIRCUIT

DTC P0031, P0032 A/F SENSOR 1 HEATER

< SERVICE INFORMATION >

1. Disconnect air fuel ratio (A/F) sensor 1 harness connector (1).
2. Turn ignition switch ON.
 - Air fuel ratio (A/F) sensor 1 (2)

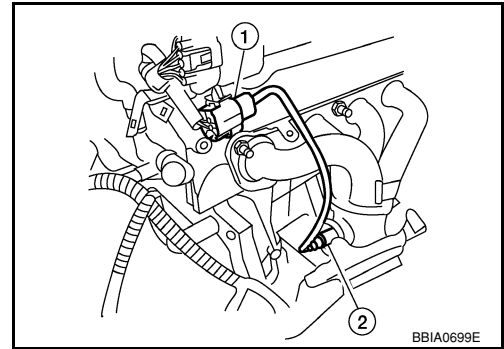


3. Check voltage between A/F sensor 1 terminal 4 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 3.

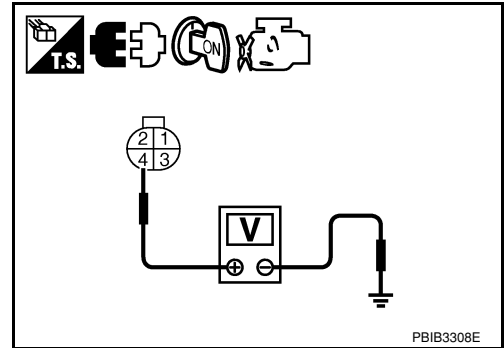

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness for open or short between A/F sensor 1 and fuse

>> Repair or replace harness or connectors.

4. CHECK A/F SENSOR 1 HEATER OUTPUT SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 3 and A/F sensor 1 terminal 3. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 5.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK A/F SENSOR 1 HEATER

Refer to [EC-154. "Component Inspection"](#).

OK or NG

- OK >> GO TO 6.
- NG >> Replace air fuel ratio (A/F) sensor 1.

6. CHECK INTERMITTENT INCIDENT

Perform [EC-136](#).

>> **INSPECTION END**

Component Inspection

AIR FUEL RATIO (A/F) SENSOR 1 HEATER

INFOID:000000001702630

DTC P0031, P0032 A/F SENSOR 1 HEATER

< SERVICE INFORMATION >


1. Check resistance between A/F sensor 1 terminals as follows.

| Terminal No. | Resistance |
|--------------|--------------------------------------|
| 3 and 4 | 1.8 - 2.44 Ω [at 25°C (77°F)] |
| 3 and 1, 2 | $\infty \Omega$ |
| 4 and 1, 2 | (Continuity should not exist) |

2. If NG, replace air fuel ratio (A/F) sensor 1.

CAUTION:

- Discard any A/F sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new A/F sensor, clean exhaust system threads using Heated Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

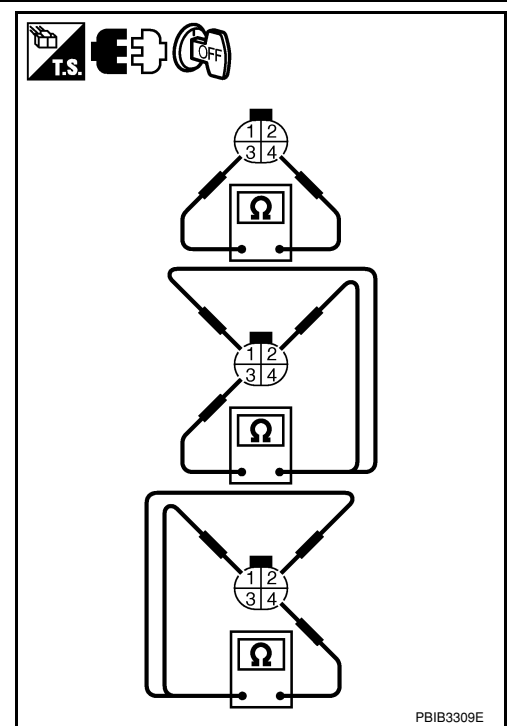

Removal and Installation

AIR FUEL RATIO SENSOR HEATER

Refer to [EM-21](#).

INFOID:000000001702631

A
EC
C
D
E
F
G
H
I
J
K
L
M
N
O
P

DTC P0037, P0038 HO2S2 HEATER

< SERVICE INFORMATION >

DTC P0037, P0038 HO2S2 HEATER

Description

INFOID:000000001702632

SYSTEM DESCRIPTION

| Sensor | Input Signal to ECM | ECM Function | Actuator |
|-----------------------------------|----------------------------|---------------------------------------|-------------------------------|
| Camshaft position sensor (PHASE) | Engine speed | Heated oxygen sensor 2 heater control | Heated oxygen sensor 2 heater |
| Crankshaft position sensor (POS) | | | |
| Engine coolant temperature sensor | Engine coolant temperature | | |
| Mass air flow sensor | Amount of intake air | | |

The ECM performs ON/OFF control of the heated oxygen sensor 2 heater corresponding to the engine speed, amount of intake air and engine coolant temperature.

OPERATION

| Engine speed rpm | Heated oxygen sensor 2 heater |
|---|-------------------------------|
| Above 3,600 | OFF |
| <ul style="list-style-type: none"> • Below 3,600 rpm after the following conditions are met. - Engine: After warming up - Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load | ON |

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702633

Specification data are reference values.

| MONITOR ITEM | CONDITION | SPECIFICATION |
|----------------|---|---------------|
| HO2S2 HTR (B1) | <ul style="list-style-type: none"> • Engine speed: Below 3,600 rpm after the following conditions are met - Engine: After warming up - Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load. | ON |
| | <ul style="list-style-type: none"> • Engine speed: Above 3,600 rpm | OFF |

On Board Diagnosis Logic

INFOID:000000001702634

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|--|--|--|
| P0037 0037 | Heated oxygen sensor 2 heater control circuit low | The current amperage in the heated oxygen sensor 2 heater circuit is out of the normal range. (An excessively low voltage signal is sent to ECM through the heated oxygen sensor 2 heater.) | <ul style="list-style-type: none"> • Harness or connectors (Heated oxygen sensor 2 heater circuit is open or shorted.) • Heated oxygen sensor 2 heater |
| P0038 0038 | Heated oxygen sensor 2 heater control circuit high | The current amperage in the heated oxygen sensor 2 heater circuit is out of the normal range. (An excessively high voltage signal is sent to ECM through the heated oxygen sensor 2 heater.) | <ul style="list-style-type: none"> • Harness or connectors (Heated oxygen sensor 2 heater circuit is shorted.) • Heated oxygen sensor 2 heater |

DTC Confirmation Procedure

INFOID:000000001702635

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is between 10.5V and 16V at idle.

 WITH CONSULT-II

DTC P0037, P0038 HO2S2 HEATER

< SERVICE INFORMATION >

1. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-II.
2. Start engine and warm it up to the normal operating temperature.
3. Turn ignition switch OFF and wait at least 10 seconds.
4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
5. Let engine idle for 1 minute.
6. If 1st trip DTC is detected, go to [EC-159. "Diagnosis Procedure"](#).

| DATA MONITOR | |
|---------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |
| COOLAN TEMP/S | XXX °C |

SEF174Y

WITH GST

Follow the procedure "WITH CONSULT-II" above.

A

EC

C

D

E

F

G

H

I

J

K

L

M

N

O

P

DTC P0037, P0038 HO2S2 HEATER




< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001702636

EC-HO2S2H-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

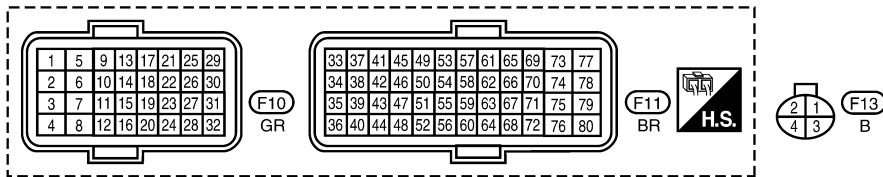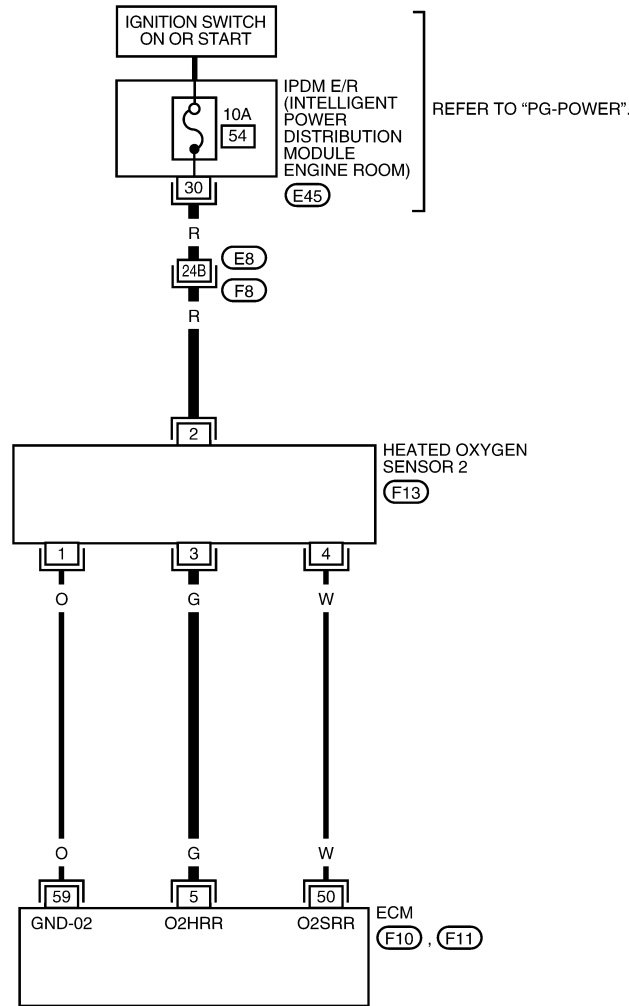

REFER TO THE FOLLOWING.

F8 - SUPER MULTIPLE JUNCTION (SMJ)

BBWA2628E


Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.

CAUTION:

DTC P0037, P0038 HO2S2 HEATER

< SERVICE INFORMATION >

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.
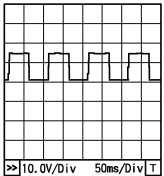
| TER-MI-NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------|------------|--|--|---|
| 5 | G | Heated oxygen sensor 2 heater | [Engine is running] <ul style="list-style-type: none"> Engine speed: Below 3,600 rpm after the following conditions are met. Engine: After warming up Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load. | Approximately 10V★  <small>PBIA8148J</small> |
| | | | [Ignition switch: ON] <ul style="list-style-type: none"> Engine stopped [Engine is running] <ul style="list-style-type: none"> Engine speed: Above 3,600 rpm. | BATTERY VOLTAGE (11 - 14V) |
| 50 | W | Heated oxygen sensor 2 | [Engine is running] <ul style="list-style-type: none"> Reving engine from idle to 3,000 rpm quickly after the following conditions are met. Engine: After warming up Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load. | 0 - Approximately 1.0V |
| 59 | O | Sensor ground (Heated oxygen sensor 2) | [Engine is running] <ul style="list-style-type: none"> Warm-up condition Idle speed | Approximately 0V |


★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnosis Procedure

INFOID:000000001702637

1. CHECK GROUND CONNECTIONS

- Turn ignition switch OFF.
- Loosen and retighten ground screw on the body.
Refer to [EC-142, "Ground Inspection"](#).

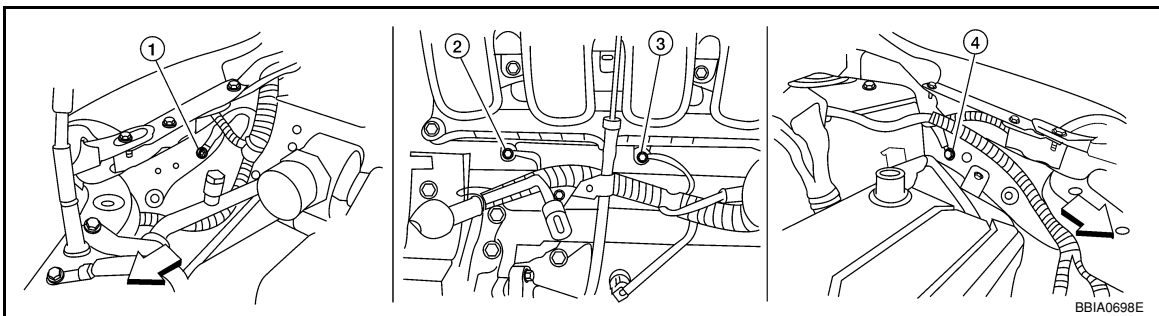

↶: Vehicle front

- Body ground E24
- Body ground E15

2. Engine ground F9

3. Engine ground F16

OK or NG


- OK >> GO TO 2.
 NG >> Repair or replace ground connections.

2. CHECK HO2S2 POWER SUPPLY CIRCUIT

DTC P0037, P0038 HO2S2 HEATER

< SERVICE INFORMATION >

1. Disconnect heated oxygen sensor 2 harness connector (2).
 - ⇐: Vehicle front
 - Heated oxygen sensor 2 (1)
2. Turn ignition switch ON.

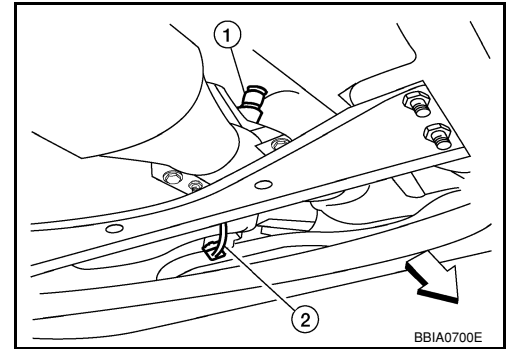


3. Check voltage between HO2S2 terminal 2 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 3.

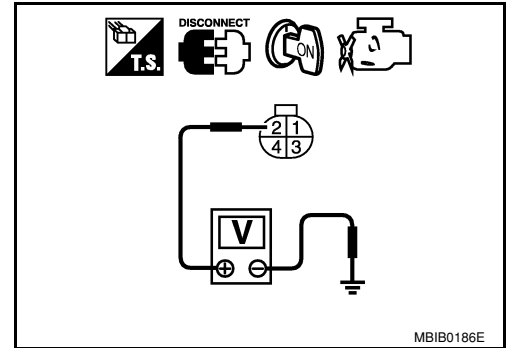

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness for open or short between heated oxygen sensor 2 and fuse

>> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK HO2S2 OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 5 and HO2S2 terminal 3.
Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 5.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK HEATED OXYGEN SENSOR 2 HEATER

Refer to [EC-160. "Component Inspection"](#).

OK or NG

- OK >> GO TO 6.
- NG >> Replace heated oxygen sensor 2.

6. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**

Component Inspection

HEATED OXYGEN SENSOR 2 HEATER

INFOID:000000001702638

DTC P0037, P0038 HO2S2 HEATER

< SERVICE INFORMATION >


1. Check resistance between HO2S2 terminals as follows.

| Terminal No. | Resistance |
|---------------|--|
| 2 and 3 | 3.4 - 4.4 Ω [at 25°C (77°F)] |
| 1 and 2, 3, 4 | $\infty \Omega$ (Continuity should not exist) |
| 4 and 1, 2, 3 | $\infty \Omega$ (Continuity should not exist) |

2. If NG, replace heated oxygen sensor 2.

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

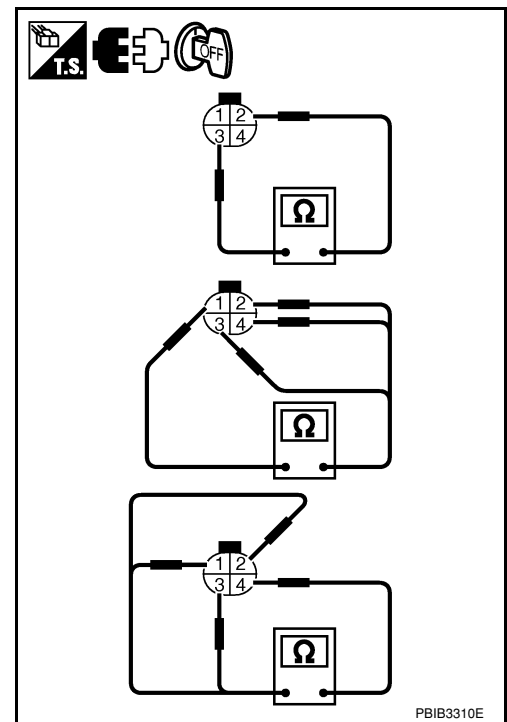

INFOID:000000001702639

Removal and Installation

HEATED OXYGEN SENSOR 2

Refer to [EM-21](#).

A
EC
C
D
E
F
G
H
I
J
K
L
M
N
O
P

DTC P0075 IVT CONTROL SOLENOID VALVE

< SERVICE INFORMATION >

DTC P0075 IVT CONTROL SOLENOID VALVE

Component Description

INFOID:000000001702640


Intake valve timing control solenoid valve is activated by ON/OFF pulse duty (ratio) signals from the ECM.

The intake valve timing control solenoid valve changes the oil amount and direction of flow through intake valve timing control unit or stops oil flow.

The longer pulse width advances valve angle.

The shorter pulse width retards valve angle.

When ON and OFF pulse widths become equal, the solenoid valve stops oil pressure flow to fix the intake valve angle at the control position.

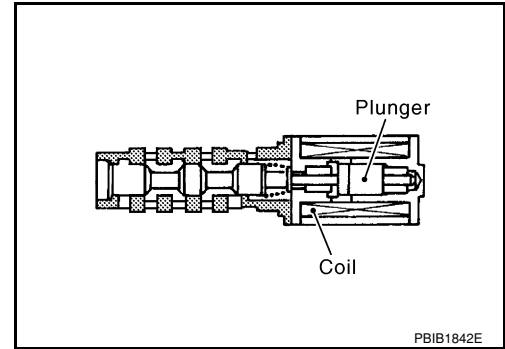

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702641

Specification data are reference values.

| MONITOR ITEM | CONDITION | SPECIFICATION |
|----------------|---|------------------|
| INT/V SOL (B1) | <ul style="list-style-type: none"> Engine: After warming up Air conditioner switch: OFF Shift lever: P or N (A/T, CVT), Neutral (M/T) No load | Idle |
| | When revving engine up to 2,000 rpm quickly | Approx. 0% - 90% |

On Board Diagnosis Logic

INFOID:000000001702642

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|--|--|--|
| P0075 0075 | Intake valve timing control solenoid valve circuit | An improper voltage is sent to the ECM through intake valve timing control solenoid valve. | <ul style="list-style-type: none"> Harness or connectors (Intake valve timing control solenoid valve circuit is open or shorted.) Intake valve timing control solenoid valve |

DTC Confirmation Procedure

INFOID:000000001702643

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

④ WITH CONSULT-II

- Turn ignition switch ON.
- Select "DATA MONITOR" mode with CONSULT-II.
- Start engine and let it idle for 5 seconds.
- If 1st trip DTC is detected, go to [EC-164, "Diagnosis Procedure"](#).

| DATA MONITOR | |
|--------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |

SEF058Y

④ WITH GST

Following the procedure "WITH CONSULT-II" above.

DTC P0075 IVT CONTROL SOLENOID VALVE


< SERVICE INFORMATION >

Wiring Diagram


INFOID:000000001702644

EC-IVC-01

— : DETECTABLE LINE FOR DTC
 - - - : NON-DETECTABLE LINE FOR DTC

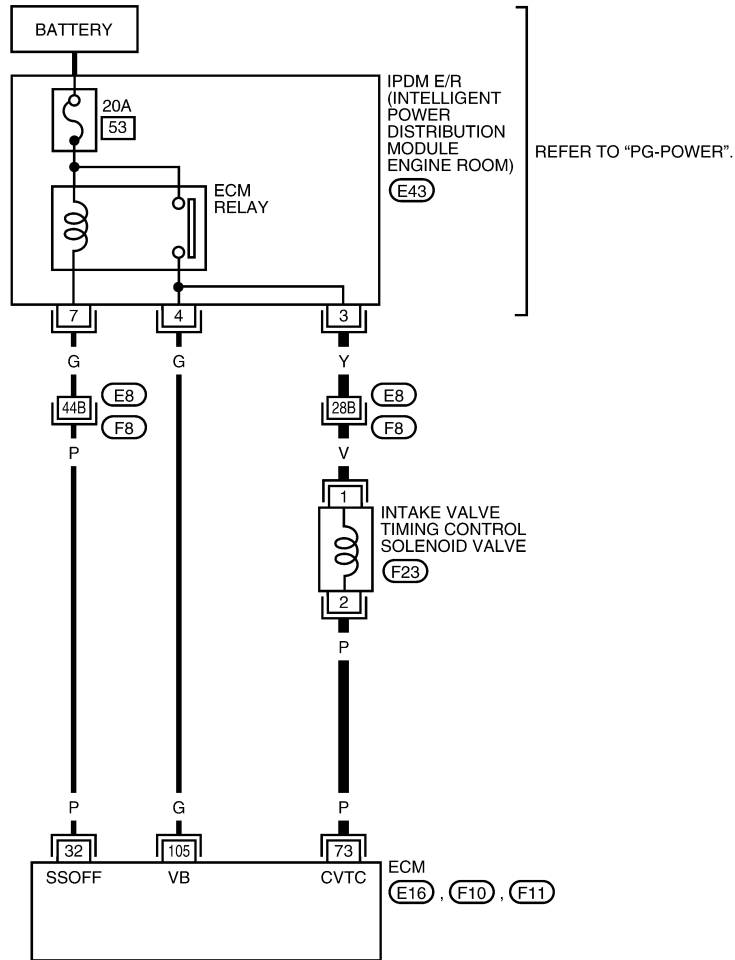

REFER TO THE FOLLOWING.
 (FB) - SUPER MULTIPLE JUNCTION (SMJ)

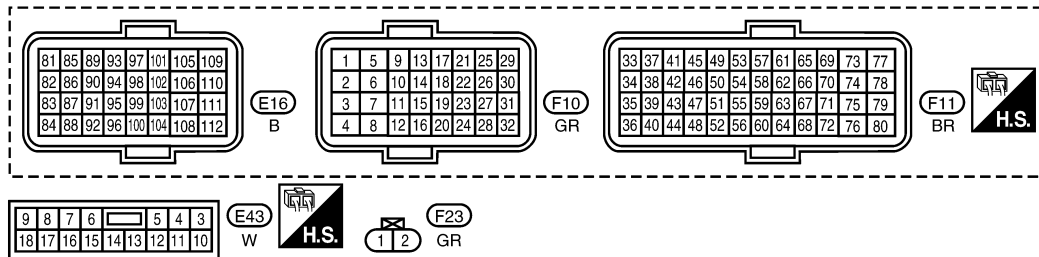

BBWA2627E


Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.

CAUTION:

DTC P0075 IVT CONTROL SOLENOID VALVE

< SERVICE INFORMATION >

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.
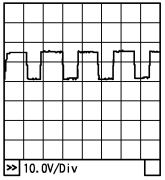
| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------------|---------------|--|--|---|
| 32 | P | ECM relay (Self shut-off) | [Engine is running] [Ignition switch: OFF] • For a few seconds after turning ignition switch OFF | 0 - 1.0V |
| | | | [Ignition switch: OFF] • More than a few seconds after turning ignition switch OFF | BATTERY VOLTAGE (11 - 14V) |
| 73 | P | Intake valve timing control solenoid valve | [Engine is running] • Warm-up condition • Idle speed | BATTERY VOLTAGE (11 - 14V) |
| | | | [Engine is running] • Warm-up condition • When revving engine up to 2,000 rpm quickly | 7 - 10V★  PBI4937J |
| 105 | G | Power supply for ECM | [Ignition switch: ON] | BATTERY VOLTAGE (11 - 14V) |


★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnosis Procedure

INFOID:000000001702645

1. CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect intake valve timing control solenoid valve (1) harness connector.
3. Turn ignition switch ON.

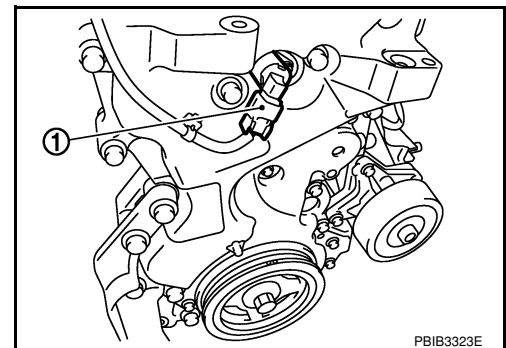


4. Check voltage between intake valve timing control solenoid valve terminal 1 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

- OK >> GO TO 3.
NG >> GO TO 2.

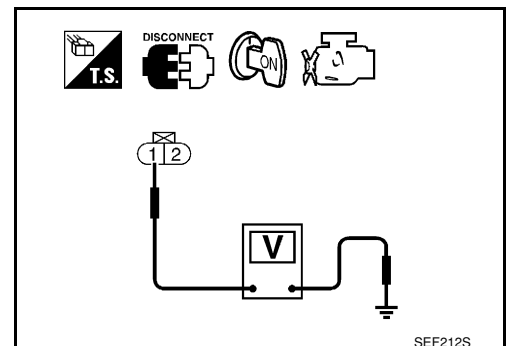

2. DETECT MALFUNCTION PART

Check the following.

DTC P0075 IVT CONTROL SOLENOID VALVE

< SERVICE INFORMATION >

- Harness connectors E8, F8
- Harness for open or short between intake valve timing control solenoid valve and IPDM E/R

>> Repair or replace harness or connectors.

3. CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 73 and intake valve timing control solenoid valve terminal 2. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE

Refer to [EC-165. "Component Inspection"](#).

OK or NG

OK >> GO TO 5.

NG >> Replace intake valve timing control solenoid valve.

5. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**

Component Inspection

INFOID:000000001702646

INTAKE VALVE TIMING CONTROL SOLENOID VALVE

1. Disconnect intake valve timing control solenoid valve harness connector.
2. Check resistance between intake valve timing control solenoid valve as follows.

| Terminal | Resistance |
|-------------------|--------------------------------------|
| 1 and 2 | 6.7 - 7.7Ω [at 20°C (68°F)] |
| 1 or 2 and ground | ∞Ω (Continuity should not exist.) |

If NG, replace intake valve timing control solenoid valve.

If OK, go to next step.

3. Remove intake valve timing control solenoid valve.
4. Provide 12V DC between intake valve timing control solenoid valve terminals and then interrupt it. Make sure that the plunger moves as shown in the figure.



CAUTION:

Do not apply 12V DC continuously for 5 seconds or more. Doing so may result in damage to the coil in intake valve timing control solenoid valve.

If NG, replace intake valve timing control solenoid valve.

NOTE:

Always replace O-ring when intake valve timing control solenoid valve is removed.

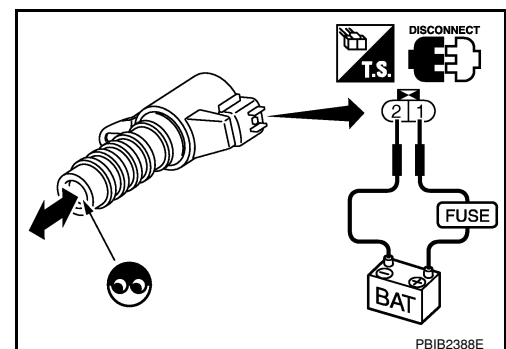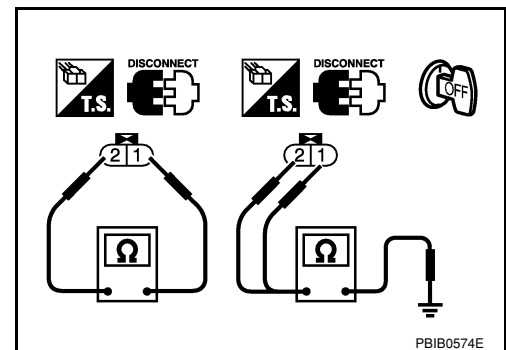

DTC P0075 IVT CONTROL SOLENOID VALVE

< SERVICE INFORMATION >

Removal and Installation

INFOID:000000001702647

INTAKE VALVE TIMING CONTROL SOLENOID VALVE

Refer to [EM-37](#).

DTC P0101 MAF SENSOR

< SERVICE INFORMATION >


DTC P0101 MAF SENSOR

Component Description

INFOID:000000001702648

The mass air flow sensor (1) is placed in the stream of intake air. It measures the intake flow rate by measuring a part of the entire intake flow. The mass air flow sensor controls the temperature of the hot wire to a certain amount. The heat generated by the hot wire is reduced as the intake air flows around it. The more air, the greater the heat loss.

Therefore, the electric current supplied to hot wire is changed to maintain the temperature of the hot wire as air flow increases. The ECM detects the air flow by means of this current change.

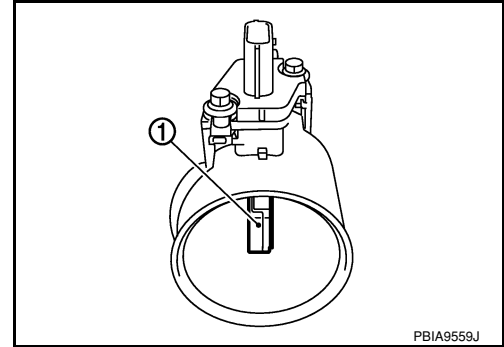

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702649

Specification data are reference values.

| MONITOR ITEM | CONDITION | SPECIFICATION |
|---------------|---|-------------------------------|
| MAS A/F SE-B1 | <ul style="list-style-type: none"> See EC-127. | |
| CAL/LD VALUE | <ul style="list-style-type: none"> Engine: After warming up Shift lever: P or N (A/T, CVT), Neutral (M/T) Air conditioner switch: OFF No load | Idle 10% - 35% |
| | | 2,500 rpm 10% - 35% |
| MASS AIRFLOW | <ul style="list-style-type: none"> Engine: After warming up Shift lever: P or N (A/T, CVT), Neutral (M/T) Air conditioner switch: OFF No load | Idle 1.0 - 4.0 g·m/s |
| | | 2,500 rpm 4.0 - 10.0 g·m/s |

On Board Diagnosis Logic

INFOID:000000001702650

| DTC No. | Trouble diagnosis name | DTC detecting condition | | Possible cause |
|---------------|--|-------------------------|---|--|
| P0101 0101 | Mass air flow sensor circuit range/performance | A) | A high voltage from the sensor is sent to ECM under light load driving condition. | <ul style="list-style-type: none"> Harness or connectors (Mass air flow sensor circuit is open or shorted.) Mass air flow sensor EVAP control system pressure sensor Intake air temperature sensor |
| | | B) | A low voltage from the sensor is sent to ECM under heavy load driving condition. | <ul style="list-style-type: none"> Harness or connectors (Mass air flow sensor circuit is open or shorted.) Intake air leaks Mass air flow sensor EVAP control system pressure sensor Intake air temperature sensor |

DTC Confirmation Procedure

INFOID:000000001702651

Perform PROCEDURE FOR MALFUNCTION A first.

If the DTC cannot be confirmed, perform PROCEDURE FOR MALFUNCTION B.

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

DTC P0101 MAF SENSOR

< SERVICE INFORMATION >

PROCEDURE FOR MALFUNCTION A

NOTE:

If engine will not start or stops soon, wait at least 10 seconds with engine stopped (Ignition switch ON) instead of running engine at idle speed.

④ With CONSULT-II

1. Turn ignition switch ON.
2. Select "DATA MONITOR" mode with CONSULT-II.
3. Start engine and warm it up to normal operating temperature.
4. Run engine for at least 10 seconds at idle speed.
5. If 1st trip DTC is detected, go to [EC-171, "Diagnosis Procedure"](#).

| DATA MONITOR | |
|---------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |
| COOLAN TEMP/S | XXX °C |

SEF174Y

④ With GST

Follow the procedure "With CONSULT-II" above.


PROCEDURE FOR MALFUNCTION B

CAUTION:

Always drive vehicle at a safe speed.

④ With CONSULT-II

1. Turn ignition switch ON.
2. Start engine and warm it up to normal operating temperature.
If engine cannot be started, go to [EC-171, "Diagnosis Procedure"](#).
3. Select "DATA MONITOR" mode with CONSULT-II.
4. Check the voltage of "MAS A/F SE-B1" with "DATA MONITOR".
5. Increases engine speed to about 4,000 rpm.
6. Monitor the linear voltage rise in response to engine speed increases.
If NG, go to [EC-171, "Diagnosis Procedure"](#).
If OK, go to following step.

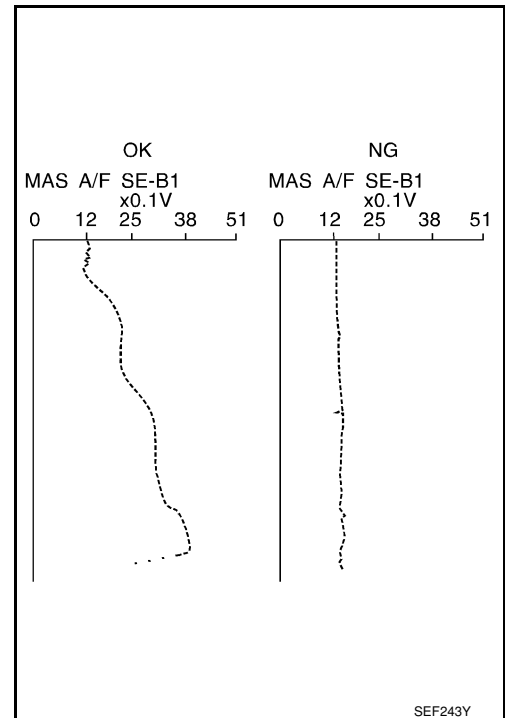

DTC P0101 MAF SENSOR

< SERVICE INFORMATION >

- Maintain the following conditions for at least 10 consecutive seconds.

| | |
|------------------|--|
| ENG SPEED | More than 2,000 rpm |
| THRTL SEN 1 | More than 3V |
| THRTL SEN 2 | More than 3V |
| Shift lever | Suitable position |
| Driving location | Driving vehicle uphill (Increased engine load) will help maintain the driving conditions required for this test. |

| DATA MONITOR | |
|---------------|----------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |
| VHCL SPEED SE | XXX km/h |
| THRTL SEN 1 | XXX V |
| THRTL SEN 2 | XXX V |

PBIB0199E

- If 1st trip DTC is detected, go to [EC-171, "Diagnosis Procedure"](#).

Overall Function Check

INFOID:000000001702652

PROCEDURE FOR MALFUNCTION B

Use this procedure to check the overall function of the mass air flow sensor circuit. During this check, a 1st DTC might not be confirmed.

 With GST

- Start engine and warm it up to normal operating temperature.
- Select Service \$01 with GST.
- Check the mass air flow sensor signal with Service \$01.
- Check for linear mass air flow sensor signal value rise in response to increases to about 4,000 rpm in engine speed.
- If NG, go to [EC-171, "Diagnosis Procedure"](#).

| | |
|--------------|-------------------|
| CALC LOAD | 20% |
| COOLANT TEMP | 95°C |
| SHORT FT #1 | 2% |
| LONG FT #1 | 0% |
| SHORT FT #2 | 4% |
| LONG FT #2 | 0% |
| ENGINE SPD | 2637RPM |
| VEHICLE SPD | 0MPH |
| IGN ADVANCE | 41.0° |
| INTAKE AIR | 41°C |
| MAF | 14.1gm/sec |
| THROTTLE POS | 3% |

SEF534P



DTC P0101 MAF SENSOR


< SERVICE INFORMATION >

Wiring Diagram


INFOID:000000001702653


EC-MAFS-01

 : DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

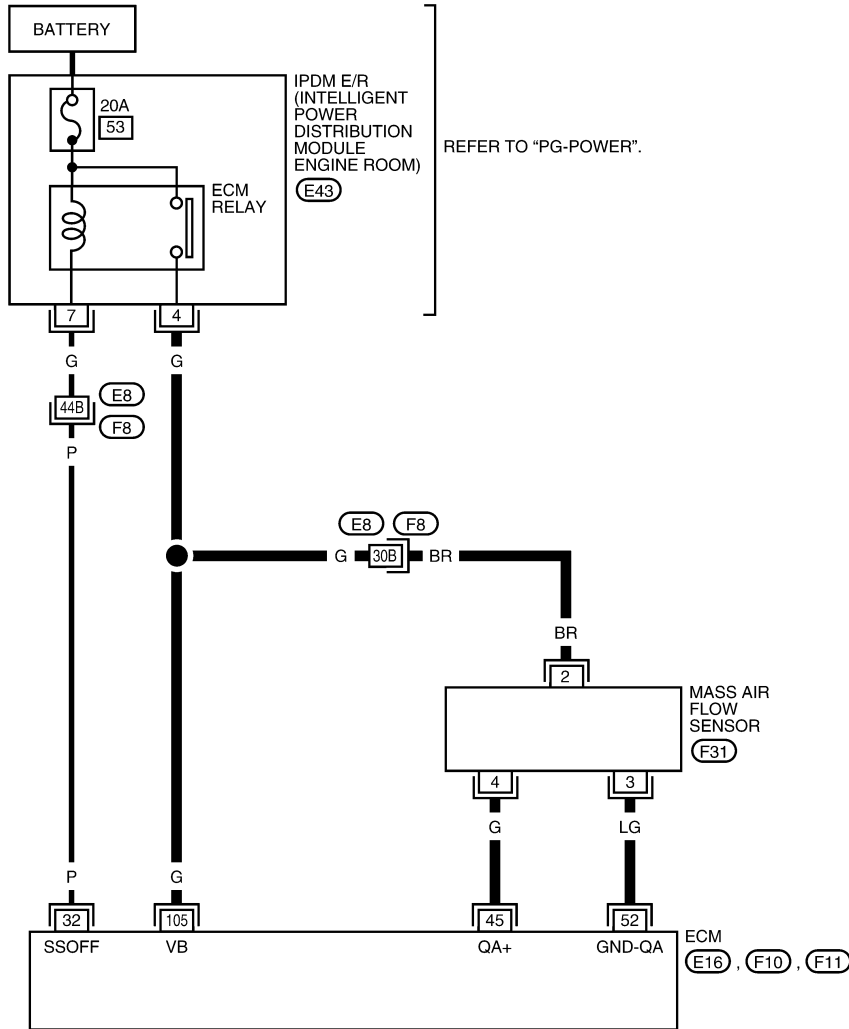

REFER TO THE FOLLOWING.

 - SUPER MULTIPLE JUNCTION (SMJ)

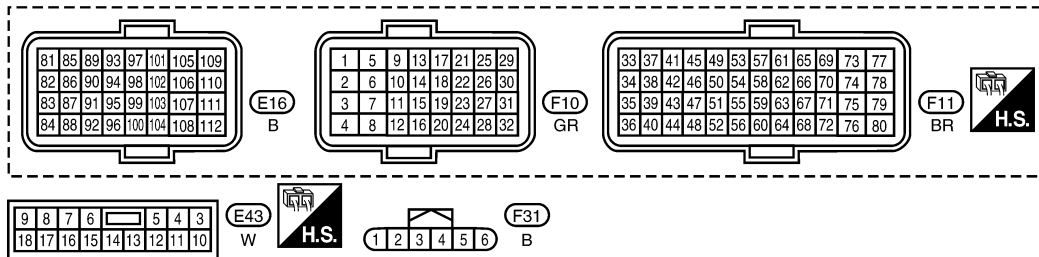

BBWA2632E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

DTC P0101 MAF SENSOR

< SERVICE INFORMATION >

| TER-MI-NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------|------------|--------------------------------------|--|----------------------------|
| 32 | P | ECM relay (Self shut-off) | [Engine is running] [Ignition switch: OFF] • For a few seconds after turning ignition switch OFF | 0 - 1.0V |
| | | | [Ignition switch: OFF] • More than a few seconds after turning ignition switch OFF | BATTERY VOLTAGE (11 - 14V) |
| 45 | G | Mass air flow sensor | [Engine is running] • Warm-up condition • Idle speed | 0.8 - 1.1V |
| | | | [Engine is running] • Warm-up condition • Engine speed: 2,500 rpm | 1.4 - 1.7V |
| 52 | LG | Sensor ground (Mass air flow sensor) | [Engine is running] • Warm-up condition • Idle speed | Approximately 0V |
| 105 | G | Power supply for ECM | [Ignition switch: ON] | BATTERY VOLTAGE (11 - 14V) |

Diagnosis Procedure

INFOID:000000001702654

1. INSPECTION START

Which malfunction (A or B) is duplicated?

A or B

- A >> GO TO 3.
- B >> GO TO 2.

2. CHECK INTAKE AIR LEAK

Check the following for connections.


- Air duct
- Vacuum hoses
- Intake air passage between air duct and intake manifold

OK or NG

- OK >> GO TO 3.
- NG >> Reconnect the parts.

3. CHECK GROUND CONNECTIONS

1. Turn ignition switch OFF.
2. Loosen and retighten ground screw on the body.
Refer to [EC-142, "Ground Inspection"](#).

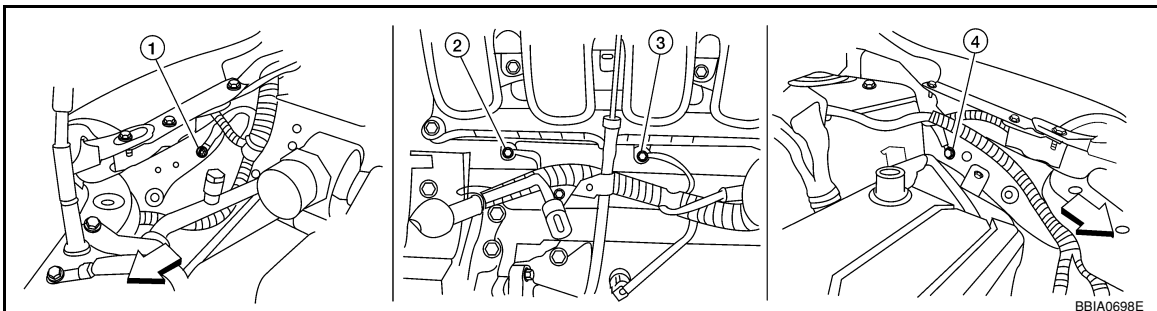

DTC P0101 MAF SENSOR

< SERVICE INFORMATION >

↶ Vehicle front


1. Body ground E24
2. Engine ground F9
3. Engine ground F16
4. Body ground E15

OK or NG

- OK >> GO TO 4.
NG >> Repair or replace ground connections.

4. CHECK MAF SENSOR POWER SUPPLY CIRCUIT

1. Disconnect mass air flow (MAF) sensor (1) harness connector.
2. Turn ignition switch ON.

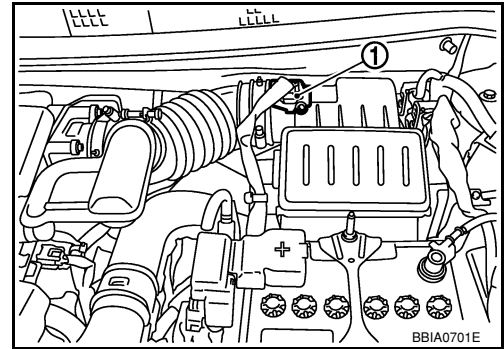


3. Check voltage between MAF sensor terminal 2 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

- OK >> GO TO 6.
NG >> GO TO 5.

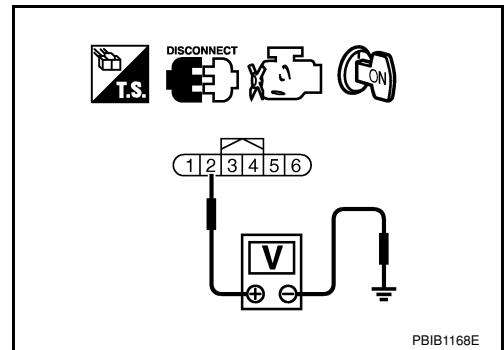

5. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness for open or short between mass air flow sensor and IPDM E/R
- Harness for open or short between mass air flow sensor and ECM

>> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK MAF SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between MAF sensor terminal 3 and ECM terminal 52.
Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 7.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

7. CHECK MAF SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between MAF sensor terminal 4 and ECM terminal 45.
Refer to Wiring Diagram.

DTC P0101 MAF SENSOR

< SERVICE INFORMATION >

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 8.

NG >> Repair open circuit or short to ground or short or short to power in harness or connectors.

8. CHECK INTAKE AIR TEMPERATURE SENSOR

Refer to [EC-202. "Component Inspection"](#).

OK or NG

OK >> GO TO 9.

NG >> Replace intake air temperature sensor.

9. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Refer to [EC-353. "Component Inspection"](#).

OK or NG

OK >> GO TO 10.

NG >> Replace EVAP control system pressure sensor.

10. CHECK MASS AIR FLOW SENSOR

Refer to [EC-173. "Component Inspection"](#).

OK or NG

OK >> GO TO 11.

NG >> Replace mass air flow sensor.

11. CHECK INTERMITTENT INCIDENT

Perform [EC-136](#).

>> INSPECTION END

Component Inspection

INFOID:000000001702655

MASS AIR FLOW SENSOR

Ⓟ With CONSULT-II

1. Reconnect all harness connectors disconnected.
2. Start engine and warm it up to normal operating temperature.
3. Connect CONSULT-II and select "DATA MONITOR" mode.
4. Select "MAS A/F SE-B1" and check indication under the following conditions.

| Condition | MAS A/F SE-B1 (V) |
|--|-------------------|
| Ignition switch ON (Engine stopped.) | Approx 0.4 |
| Idle (Engine is warmed-up to normal operating temperature.) | 0.8 - 1.1 |
| 2,500 rpm (Engine is warmed-up to normal operating temperature.) | 1.4 - 1.7 |
| Idle to about 4,000 rpm | 0.8 - 1.1 to 2.4* |

*: Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

5. If the voltage is out of specification, proceed the following.
 - a. Check for the cause of uneven air flow through mass air flow sensor. Refer to following.
 - Crushed air ducts
 - Malfunctioning seal of air cleaner element
 - Uneven dirt of air cleaner element
 - Improper specification of intake air system parts

| DATA MONITOR | |
|---------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |
| MAS A/F SE-B1 | XXX V |

PBIB2371E

DTC P0101 MAF SENSOR


< SERVICE INFORMATION >

- b. If NG, repair or replace malfunctioning part and perform step 2 to 4 again.
If OK, go to next step.
6. Turn ignition switch OFF.
7. Disconnect mass air flow sensor harness connector and reconnect it again.
8. Perform step 2 to 4 again.
9. If NG, clean or replace mass air flow sensor.

⊗ Without CONSULT-II

1. Reconnect all harness connectors disconnected.
2. Start engine and warm it up to normal operating temperature.
3. Check voltage between ECM terminal 45 (Mass air flow sensor signal) and ground.

| Condition | Voltage V |
|--|-------------------|
| Ignition switch ON (Engine stopped.) | Approx 0.4 |
| Idle (Engine is warmed-up to normal operating temperature.) | 0.8 - 1.1 |
| 2,500 rpm (Engine is warmed-up to normal operating temperature.) | 1.4 - 1.7 |
| Idle to about 4,000 rpm | 0.8 - 1.1 to 2.4* |

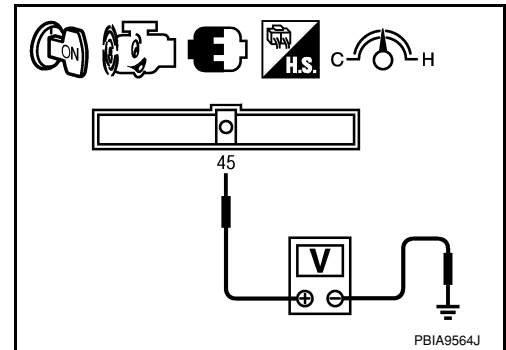

*: Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

4. If the voltage is out of specification, proceed the following.
 - a. Check for the cause of uneven air flow through mass air flow sensor. Refer to following.
 - Crushed air ducts
 - Malfunctioning seal of air cleaner element
 - Uneven dirt of air cleaner element
 - Improper specification of intake air system parts
 - b. If NG, repair or replace malfunctioning part and perform step 2 and 3 again.
If OK, go to next step.
5. Turn ignition switch OFF.
6. Disconnect mass air flow sensor harness connector and reconnect it again.
7. Perform step 2 and 3 again.
8. If NG, clean or replace mass air flow sensor.

Removal and Installation

INFOID:000000001702656

MASS AIR FLOW SENSOR

Refer to [EM-16](#).

DTC P0102, P0103 MAF SENSOR

< SERVICE INFORMATION >


DTC P0102, P0103 MAF SENSOR

Component Description

INFOID:000000001702657

The mass air flow sensor (1) is placed in the stream of intake air. It measures the intake flow rate by measuring a part of the entire intake flow. The mass air flow sensor controls the temperature of the hot wire to a certain amount. The heat generated by the hot wire is reduced as the intake air flows around it. The more air, the greater the heat loss.

Therefore, the electric current supplied to hot wire is changed to maintain the temperature of the hot wire as air flow increases. The ECM detects the air flow by means of this current change.

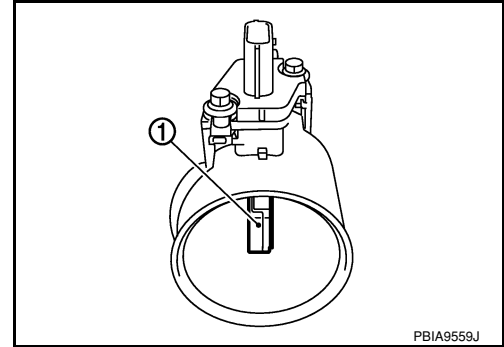

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702658

Specification data are reference values.

| MONITOR ITEM | CONDITION | | SPECIFICATION |
|---------------|---|-----------|------------------|
| MAS A/F SE-B1 | See EC-127 . | | |
| CAL/LD VALUE | <ul style="list-style-type: none"> Engine: After warming up Shift lever: P or N (A/T, CVT), Neutral (M/T) Air conditioner switch: OFF No load | Idle | 10% - 35% |
| | | 2,500 rpm | 10% - 35% |
| MASS AIRFLOW | <ul style="list-style-type: none"> Engine: After warming up Shift lever: P or N (A/T, CVT), Neutral (M/T) Air conditioner switch: OFF No load | Idle | 1.0 - 4.0 g·m/s |
| | | 2,500 rpm | 4.0 - 10.0 g·m/s |

On Board Diagnosis Logic

INFOID:000000001702659

These self-diagnoses have the one trip detection logic.

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|---|---|--|
| P0102 0102 | Mass air flow sensor circuit low input | An excessively low voltage from the sensor is sent to ECM. | <ul style="list-style-type: none"> Harness or connectors (Mass air flow sensor circuit is open or shorted.) Intake air leaks Mass air flow sensor |
| P0103 0103 | Mass air flow sensor circuit high input | An excessively high voltage from the sensor is sent to ECM. | <ul style="list-style-type: none"> Harness or connectors (Mass air flow sensor circuit is open or shorted.) Mass air flow sensor |

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MIL lights up.

| Detected items | Engine operating condition in fail-safe mode |
|------------------------------|---|
| Mass air flow sensor circuit | Engine speed will not rise more than 2,400 rpm due to the fuel cut. |

DTC Confirmation Procedure

INFOID:000000001702660

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

DTC P0102, P0103 MAF SENSOR

< SERVICE INFORMATION >

PROCEDURE FOR DTC P0102

④ With CONSULT-II

1. Turn ignition switch ON.
2. Select "DATA MONITOR" mode with CONSULT-II.
3. Start engine and wait at least 5 seconds.
4. If DTC is detected, go to [EC-178. "Diagnosis Procedure"](#).

| DATA MONITOR | |
|--------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |

SEF058Y

④ With GST

Follow the procedure "With CONSULT-II" above.

PROCEDURE FOR DTC P0103

④ With CONSULT-II

1. Turn ignition switch ON.
2. Select "DATA MONITOR" mode with CONSULT-II.
3. Wait at least 5 seconds.
4. If DTC is detected, go to [EC-178. "Diagnosis Procedure"](#).
If DTC is not detected, go to next step.
5. Start engine and wait at least 5 seconds.
6. If DTC is detected, go to [EC-178. "Diagnosis Procedure"](#).

| DATA MONITOR | |
|--------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |

SEF058Y

④ With GST

Follow the procedure "With CONSULT-II" above.

DTC P0102, P0103 MAF SENSOR


< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001702661


EC-MAFS-01

— : DETECTABLE LINE FOR DTC
 - - - : NON-DETECTABLE LINE FOR DTC

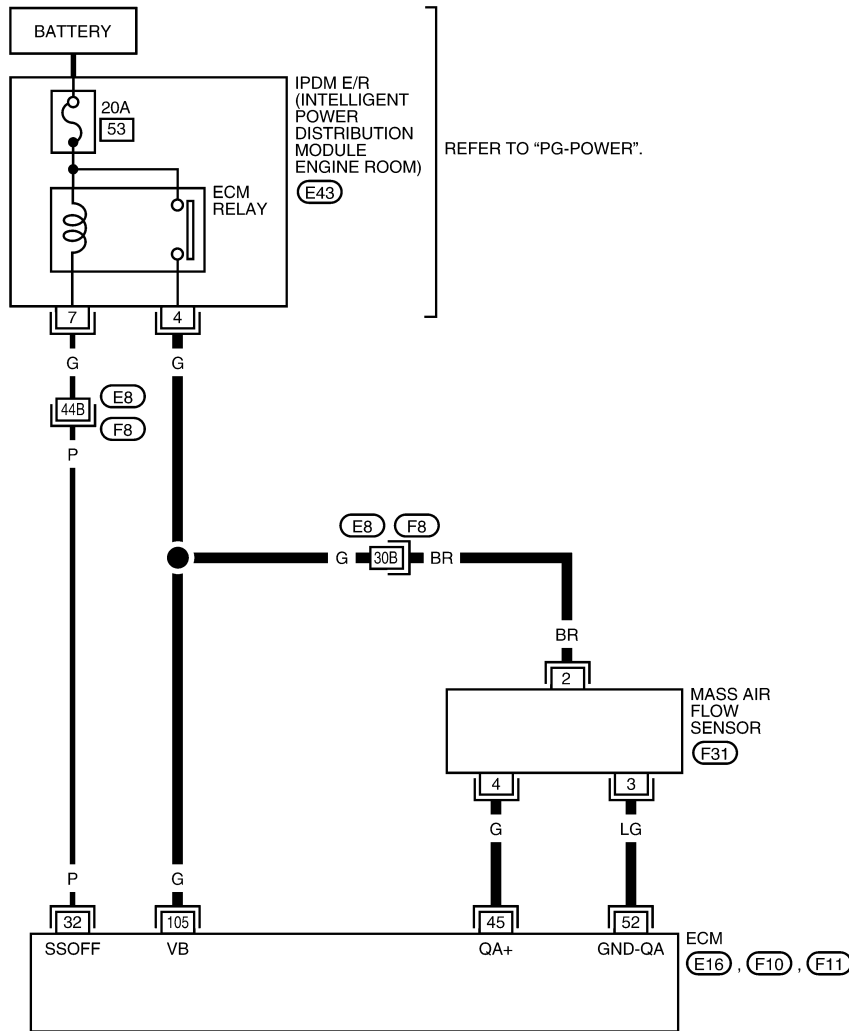

REFER TO THE FOLLOWING.

(F8) - SUPER MULTIPLE JUNCTION (SMJ)

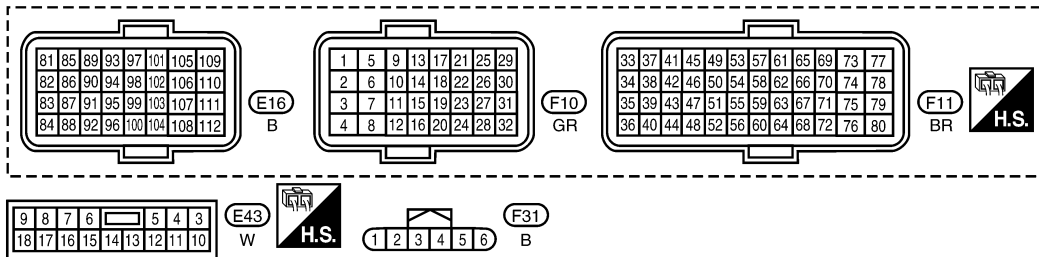

BBWA2632E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

DTC P0102, P0103 MAF SENSOR

< SERVICE INFORMATION >

| TER-MI-NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------|------------|--------------------------------------|--|----------------------------|
| 32 | P | ECM relay (Self shut-off) | [Engine is running] [Ignition switch: OFF] • For a few seconds after turning ignition switch OFF | 0 - 1.0V |
| | | | [Ignition switch: OFF] • More than a few seconds after turning ignition switch OFF | BATTERY VOLTAGE (11 - 14V) |
| 45 | G | Mass air flow sensor | [Engine is running] • Warm-up condition • Idle speed | 0.8 - 1.1V |
| | | | [Engine is running] • Warm-up condition • Engine speed: 2,500 rpm | 1.4 - 1.7V |
| 52 | LG | Sensor ground (Mass air flow sensor) | [Engine is running] • Warm-up condition • Idle speed | Approximately 0V |
| 105 | G | Power supply for ECM | [Ignition switch: ON] | BATTERY VOLTAGE (11 - 14V) |

Diagnosis Procedure

INFOID:000000001702662

1. INSPECTION START

Which malfunction (P0102 or P0103) is duplicated?

P0102 or P0103

P0102 >> GO TO 2.

P0103 >> GO TO 3.

2. CHECK INTAKE SYSTEM

Check the following for connection.

- Air duct
- Vacuum hoses
- Intake air passage between air duct and intake manifold


OK or NG

OK >> GO TO 3.

NG >> Reconnect the parts.

3. CHECK GROUND CONNECTIONS

1. Turn ignition switch OFF.
2. Loosen and retighten ground screw on the body.
Refer to [EC-142, "Ground Inspection"](#).

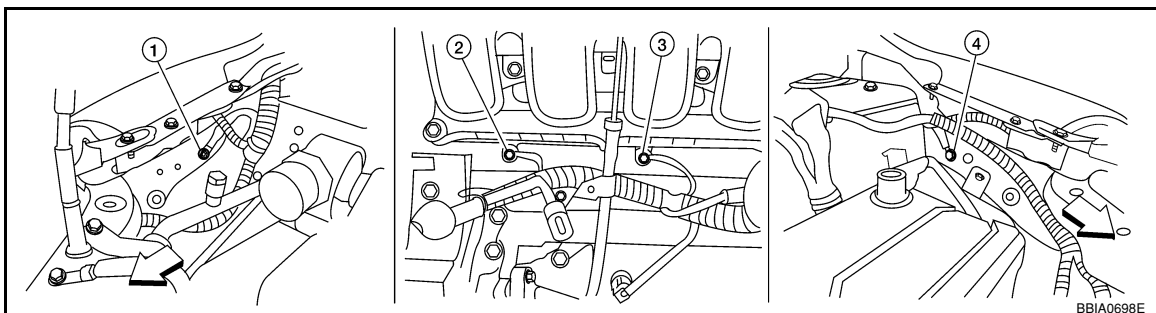

B8IA0698E

DTC P0102, P0103 MAF SENSOR

< SERVICE INFORMATION >

↔ Vehicle front


1. Body ground E24
2. Engine ground F9
3. Engine ground F16
4. Body ground E15

OK or NG

- OK >> GO TO 4.
NG >> Repair or replace ground connections.

4. CHECK MAF SENSOR POWER SUPPLY CIRCUIT

1. Disconnect mass air flow (MAF) sensor (1) harness connector.
2. Turn ignition switch ON.

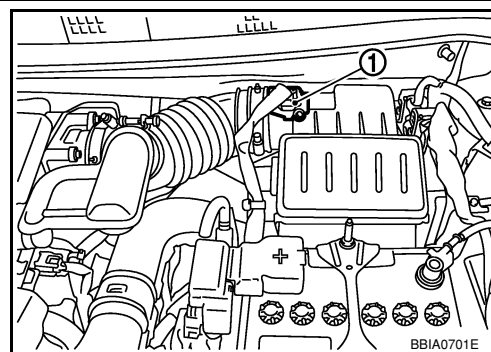


3. Check voltage between MAF sensor terminal 2 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

- OK >> GO TO 6.
NG >> GO TO 5.

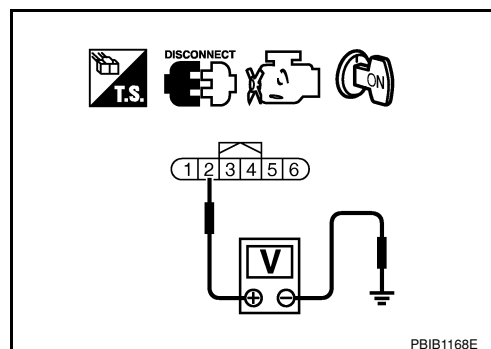

5. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness for open or short between mass air flow sensor and ECM
- Harness for open or short between mass air flow sensor and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK MAF SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between MAF sensor terminal 3 and ECM terminal 52.
Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 7.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

7. CHECK MAF SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between MAF sensor terminal 4 and ECM terminal 45.
Refer to Wiring Diagram.

DTC P0102, P0103 MAF SENSOR

< SERVICE INFORMATION >

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 8.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

8. CHECK MASS AIR FLOW SENSOR

Refer to [EC-180, "Component Inspection"](#).

OK or NG

OK >> GO TO 9.

NG >> Replace mass air flow sensor.

9. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> INSPECTION END

Component Inspection

INFOID:000000001702663

MASS AIR FLOW SENSOR

☐ With CONSULT-II

1. Reconnect all harness connectors disconnected.
2. Start engine and warm it up to normal operating temperature.
3. Connect CONSULT-II and select "DATA MONITOR" mode.
4. Select "MAS A/F SE-B1" and check indication under the following conditions.

| Condition | MAS A/F SE-B1 (V) |
|--|-------------------|
| Ignition switch ON (Engine stopped.) | Approx 0.4 |
| Idle (Engine is warmed-up to normal operating temperature.) | 0.8 - 1.1 |
| 2,500 rpm (Engine is warmed-up to normal operating temperature.) | 1.4 - 1.7 |
| Idle to about 4,000 rpm | 0.8 - 1.1 to 2.4* |

| DATA MONITOR | |
|---------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |
| MAS A/F SE-B1 | XXX V |

PBIB2371E

*: Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

5. If the voltage is out of specification, proceed the following.
 - a. Check for the cause of uneven air flow through mass air flow sensor. Refer to following.
 - Crushed air ducts
 - Malfunctioning seal of air cleaner element
 - Uneven dirt of air cleaner element
 - Improper specification of intake air system parts
 - b. If NG, repair or replace malfunctioning part and perform step 2 to 4 again.
If OK, go to next step.
6. Turn ignition switch OFF.
7. Disconnect mass air flow sensor harness connector and reconnect it again.
8. Perform step 2 to 4 again.
9. If NG, clean or replace mass air flow sensor.

☒ Without CONSULT-II


1. Reconnect all harness connectors disconnected.
2. Start engine and warm it up to normal operating temperature.

DTC P0102, P0103 MAF SENSOR

< SERVICE INFORMATION >

3. Check voltage between ECM terminal 45 (Mass air flow sensor signal) and ground.

| Condition | MAS A/F SE-B1 (V) |
|--|-------------------|
| Ignition switch ON (Engine stopped.) | Approx 0.4 |
| Idle (Engine is warmed-up to normal operating temperature.) | 0.8 - 1.1 |
| 2,500 rpm (Engine is warmed-up to normal operating temperature.) | 1.4 - 1.7 |
| Idle to about 4,000 rpm | 0.8 - 1.1 to 2.4* |

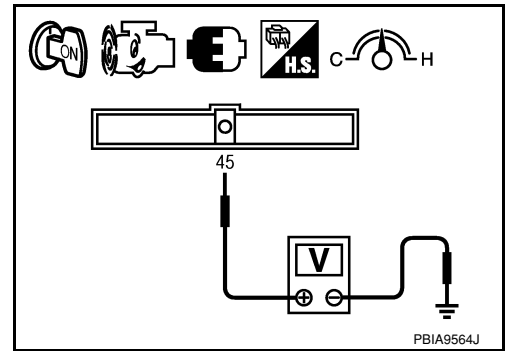

*: Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

4. If the voltage is out of specification, proceed the following.
- Check for the cause of uneven air flow through mass air flow sensor. Refer to following.
 - Crushed air ducts
 - Malfunctioning seal of air cleaner element
 - Uneven dirt of air cleaner element
 - Improper specification of intake air system parts
 - If NG, repair or replace malfunctioning part and perform step 2 and 3 again. If OK, go to next step.
5. Turn ignition switch OFF.
6. Disconnect mass air flow sensor harness connector and reconnect it again.
7. Perform step 2 and 3 again.
8. If NG, clean or replace mass air flow sensor.

Removal and Installation

INFOID:000000001702664

MASS AIR FLOW SENSOR

Refer to [EM-16](#).

DTC P0112, P0113 IAT SENSOR

< SERVICE INFORMATION >


DTC P0112, P0113 IAT SENSOR

Component Description

INFOID:000000001702665

The intake air temperature sensor is built-into mass air flow sensor (1). The sensor detects intake air temperature and transmits a signal to the ECM.

The temperature sensing unit uses a thermistor which is sensitive to the change in temperature. Electrical resistance of the thermistor decreases in response to the temperature rise.

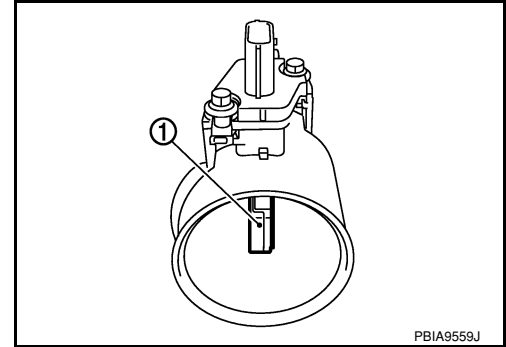

PBIA9559J


<Reference data>

| Intake air temperature °C (°F) | Voltage* V | Resistance kΩ |
|-----------------------------------|------------|---------------|
| 25 (77) | 3.3 | 1.800 - 2.200 |
| 80 (176) | 1.2 | 0.283 - 0.359 |

*: This data is reference value and is measured between ECM terminal 46 (Intake air temperature sensor) and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

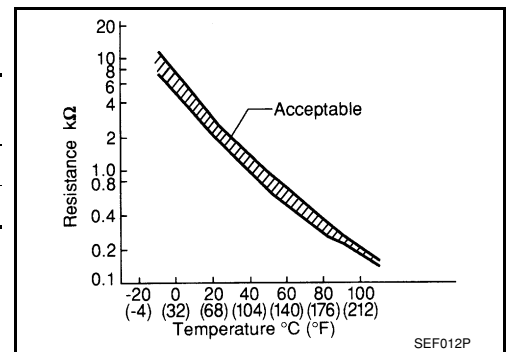

SEF012P

On Board Diagnosis Logic

INFOID:000000001702666

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|--|---|--|
| P0112 0112 | Intake air temperature sensor circuit low input | An excessively low voltage from the sensor is sent to ECM. | <ul style="list-style-type: none"> • Harness or connectors (Intake air temperature sensor circuit is open or shorted.) • Intake air temperature sensor |
| P0113 0113 | Intake air temperature sensor circuit high input | An excessively high voltage from the sensor is sent to ECM. | |

DTC Confirmation Procedure

INFOID:000000001702667

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

1. Turn ignition switch ON.

DTC P0112, P0113 IAT SENSOR

< SERVICE INFORMATION >

2. Select "DATA MONITOR" mode with CONSULT-II.
3. Wait at least 5 seconds.
4. If 1st trip DTC is detected, go to [EC-184. "Diagnosis Procedure"](#).

| DATA MONITOR | |
|--------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |

SEF058Y

WITH GST

Follow the procedure "WITH CONSULT-II" above.

A

EC

C

D

E

F

G

H

I

J

K

L

M

N

O

P



DTC P0112, P0113 IAT SENSOR



< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001702668

EC-IATS-01

 : DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

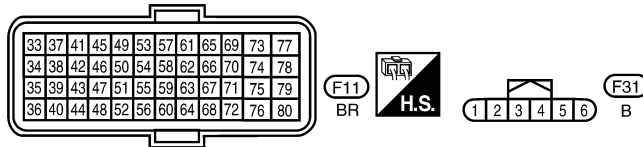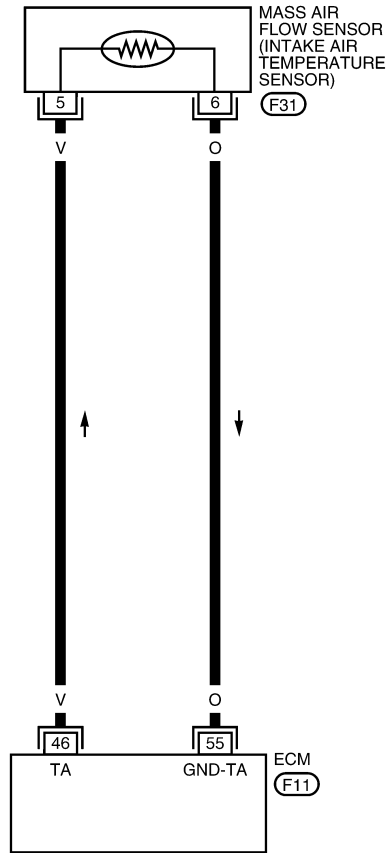

BBWA2633E

Diagnosis Procedure


INFOID:000000001702669

1. CHECK GROUND CONNECTIONS

1. Turn ignition switch OFF.
2. Loosen and retighten ground screw on the body.
Refer to [EC-142, "Ground Inspection"](#).

DTC P0112, P0113 IAT SENSOR

< SERVICE INFORMATION >

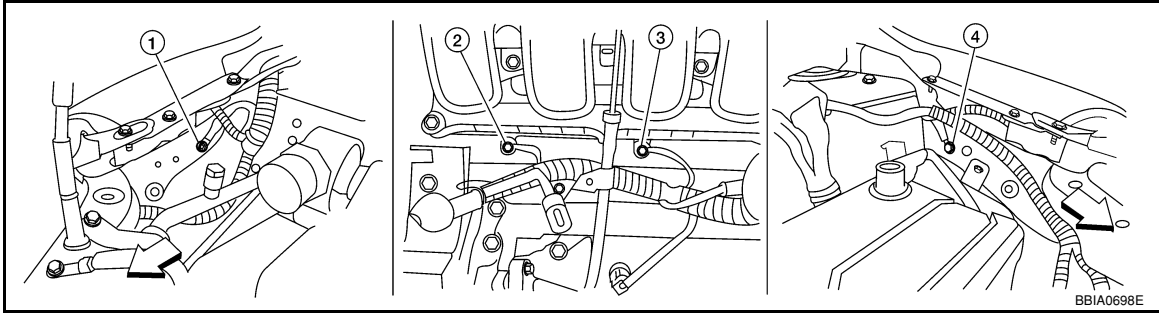

⇐: Vehicle front

1. Body ground E24

2. Engine ground F9

3. Engine ground F16

4. Body ground E15


OK or NG

OK >> GO TO 2.

NG >> Repair or replace ground connections.

2. CHECK INTAKE AIR TEMPERATURE SENSOR POWER SUPPLY CIRCUIT

1. Disconnect mass air flow sensor (with intake air temperature sensor) (1) harness connector.
2. Turn ignition switch ON.

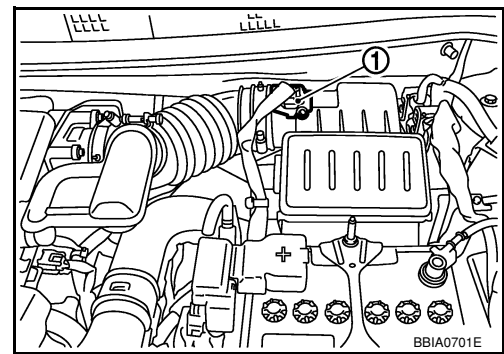


3. Check voltage between mass air flow sensor terminal 5 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

OK or NG

OK >> GO TO 3.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

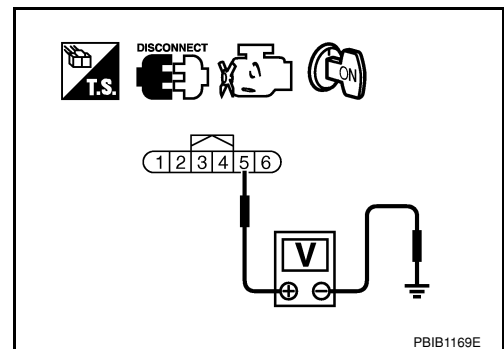

3. CHECK INTAKE AIR TEMPERATURE SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between mass air flow sensor terminal 6 and ECM terminal 55. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK INTAKE AIR TEMPERATURE SENSOR

A

EC

C

D

E

F

G

H

I

J

K

L

M

N

O

P

DTC P0112, P0113 IAT SENSOR

< SERVICE INFORMATION >

Refer to [EC-186. "Component Inspection"](#).

OK or NG

OK >> GO TO 5.

NG >> Replace mass air flow sensor (with intake air temperature sensor).

5. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**

Component Inspection



INFOID:000000001702670

INTAKE AIR TEMPERATURE SENSOR

1. Check resistance between mass air flow sensor (1) terminals 5 and 6 under the following conditions.

| Intake air temperature °C (°F) | Resistance kΩ |
|--------------------------------|---------------|
| 25 (77) | 1.800 - 2.200 |

2. If NG, replace mass air flow sensor (with intake air temperature sensor).

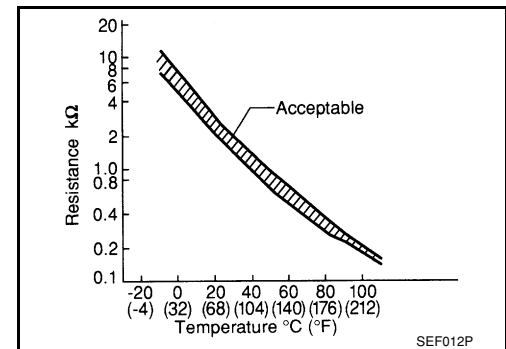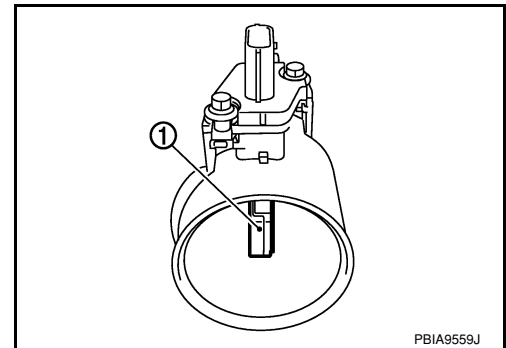

Removal and Installation

INFOID:000000001702671

MASS AIR FLOW SENSOR

Refer to [EM-16](#).

DTC P0117, P0118 ECT SENSOR


< SERVICE INFORMATION >

DTC P0117, P0118 ECT SENSOR

Component Description


INFOID:000000001702672

The engine coolant temperature sensor is used to detect the engine coolant temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the engine coolant temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

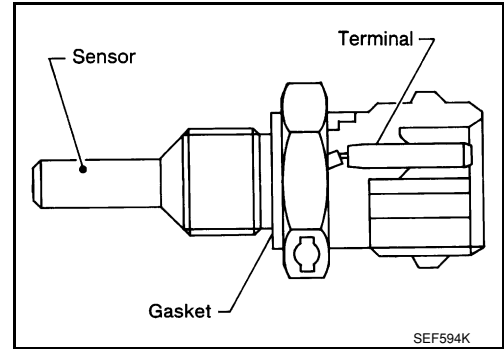

<Reference data>

| Engine coolant temperature °C (°F) | Voltage* V | Resistance kΩ |
|---------------------------------------|------------|---------------|
| -10 (14) | 4.4 | 7.0 - 11.4 |
| 20 (68) | 3.5 | 2.1 - 2.9 |
| 50 (122) | 2.2 | 0.68 - 1.00 |
| 90 (194) | 0.9 | 0.236 - 0.260 |

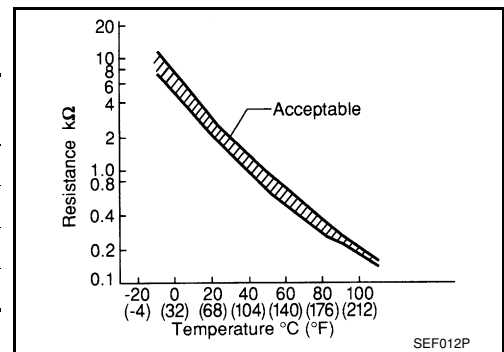

*: This data is reference value and is measured between ECM terminal 38 (Engine coolant temperature sensor) and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

On Board Diagnosis Logic

INFOID:000000001702673

These self-diagnoses have the one trip detection logic.

| DTC No. | Trouble Diagnosis Name | DTC Detecting Condition | Possible Cause |
|---------------|--|---|--|
| P0117 0117 | Engine coolant temperature sensor circuit low input | An excessively low voltage from the sensor is sent to ECM. | <ul style="list-style-type: none"> • Harness or connectors (Engine coolant temperature sensor circuit is open or shorted.) • Engine coolant temperature sensor |
| P0118 0118 | Engine coolant temperature sensor circuit high input | An excessively high voltage from the sensor is sent to ECM. | |

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MIL lights up.

DTC P0117, P0118 ECT SENSOR

< SERVICE INFORMATION >

| Detected items | Engine operating condition in fail-safe mode | |
|---|---|---|
| Engine coolant temperature sensor circuit | Engine coolant temperature will be determined by ECM based on the time after turning ignition switch ON or START. CONSULT-II displays the engine coolant temperature decided by ECM. | |
| | Condition | Engine coolant temperature decided (CONSULT-II display) |
| | Just as ignition switch is turned ON or START | 40°C (104°F) |
| | More than approx. 4 minutes after ignition ON or START | 80°C (176°F) |
| | Except as shown above | 40 - 80°C (104 - 176°F) (Depends on the time) |
| When the fail-safe system for engine coolant temperature sensor is activated, the cooling fan operates while engine is running. | | |

DTC Confirmation Procedure

INFOID:000000001702674

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

④ WITH CONSULT-II

1. Turn ignition switch ON.
2. Select "DATA MONITOR" mode with CONSULT-II.
3. Wait at least 5 seconds.
4. If DTC is detected, go to [EC-189, "Diagnosis Procedure"](#).

| DATA MONITOR | |
|--------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |

SEF058Y

④ WITH GST

Follow the procedure "WITH CONSULT-II" above.



DTC P0117, P0118 ECT SENSOR



< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001702675

EC-ECTS-01

 : DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

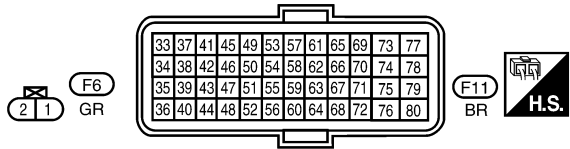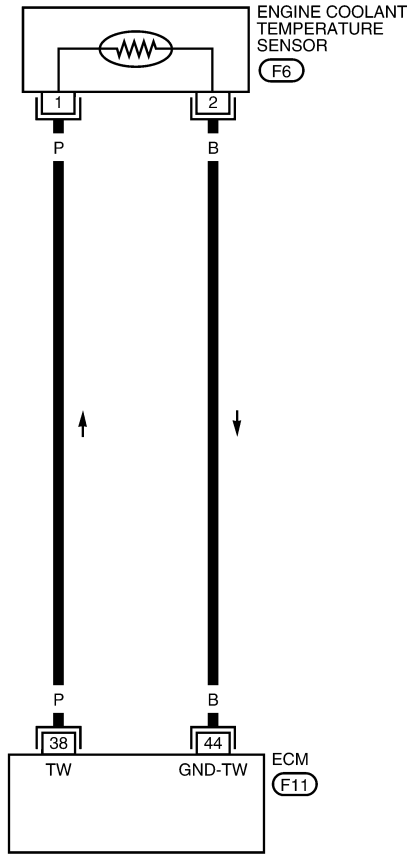

BBWA2634E

Diagnosis Procedure


INFOID:000000001702676

1. CHECK GROUND CONNECTIONS

1. Turn ignition switch OFF.
2. Loosen and retighten ground screw on the body.
Refer to [EC-142. "Ground Inspection"](#).

DTC P0117, P0118 ECT SENSOR

< SERVICE INFORMATION >

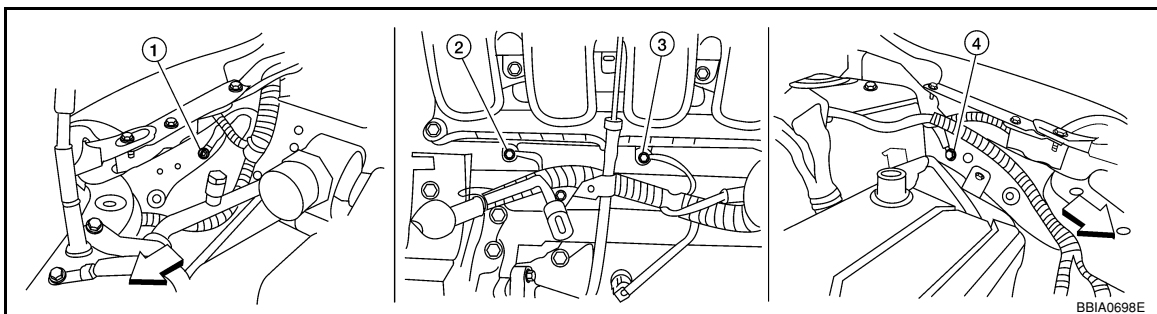

↵: Vehicle front

1. Body ground E24

2. Engine ground F9

3. Engine ground F16

4. Body ground E15

OK or NG

OK >> GO TO 2.


NG >> Repair or replace ground connections.

2. CHECK ECT SENSOR POWER SUPPLY CIRCUIT

1. Disconnect engine coolant temperature (ECT) sensor (1) harness connector.

- ↵: Vehicle front

2. Turn ignition switch ON.

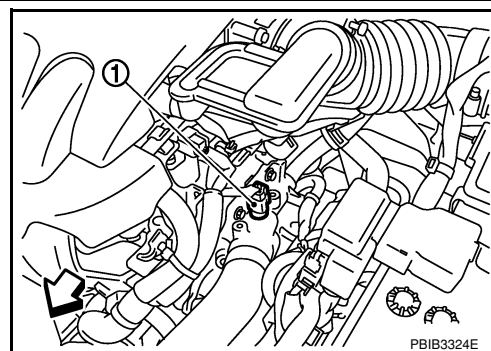


3. Check voltage between ECT sensor terminal 1 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

OK or NG

OK >> GO TO 3.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

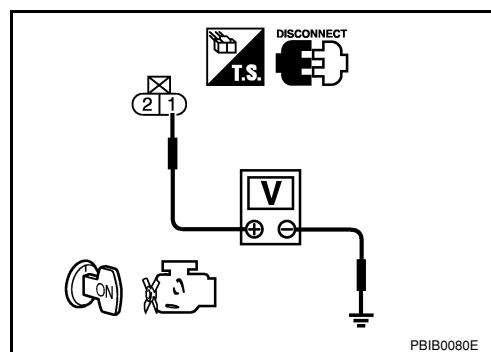

3. CHECK ECT SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.

2. Disconnect ECM harness connector.

3. Check harness continuity between ECM terminal 44 and ECT sensor terminal 2. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK ENGINE COOLANT TEMPERATURE SENSOR

DTC P0117, P0118 ECT SENSOR

< SERVICE INFORMATION >

Refer to [EC-191](#). "Component Inspection".

OK or NG

OK >> GO TO 5.

NG >> Replace engine coolant temperature sensor.

5. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).


>> INSPECTION END

Component Inspection

INFOID:000000001702677

ENGINE COOLANT TEMPERATURE SENSOR


1. Check resistance between engine coolant temperature sensor terminals 1 and 2 as shown in the figure.

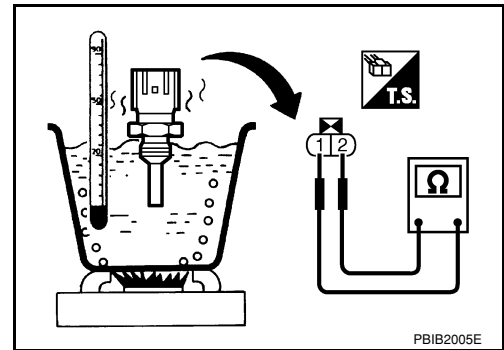

<Reference data>

| Temperature °C (°F) | Resistance k Ω |
|---------------------|-----------------------|
| 20 (68) | 2.1 - 2.9 |
| 50 (122) | 0.68 - 1.00 |
| 90 (194) | 0.236 - 0.260 |

2. If NG, replace engine coolant temperature sensor.

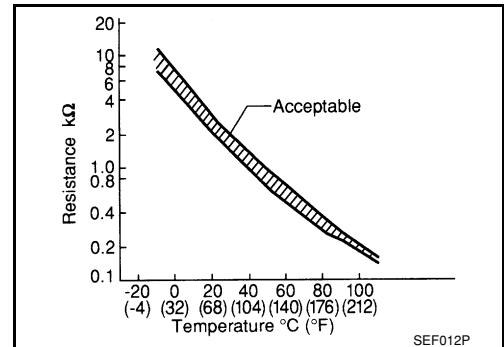

Removal and Installation

INFOID:000000001702678

ENGINE COOLANT TEMPERATURE SENSOR

Refer to [EM-62](#).

DTC P0122, P0123 TP SENSOR

< SERVICE INFORMATION >


DTC P0122, P0123 TP SENSOR

Component Description

INFOID:000000001702679

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.

The throttle position sensor has two sensors. These sensors are a kind of potentiometers which transform the throttle valve position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the throttle valve and feed the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and the ECM controls the throttle control motor to make the throttle valve opening angle properly in response to driving condition.

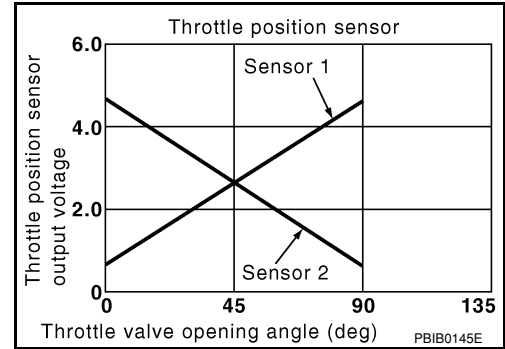

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702680

Specification data are reference values.

| MONITOR ITEM | CONDITION | SPECIFICATION |
|-----------------------------|--|------------------------------------|
| THRTL SEN 1 THRTL SEN 2* | • Ignition switch: ON (Engine stopped) • Shift lever: D (A/T, CVT), 1st (M/T) | Accelerator pedal: Fully released |
| | | Accelerator pedal: Fully depressed |
| | | More than 0.36V |
| | | Less than 4.75V |

*: Throttle position sensor 2 signal is converted by ECM internally. Thus, it differs from ECM terminal voltage signal.

On Board Diagnosis Logic

INFOID:000000001702681

These self-diagnoses have the one trip detection logic.

NOTE:

If DTC P0122 or P0123 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to [EC-400](#).

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|--|---|--|
| P0122 0122 | Throttle position sensor 2 circuit low input | An excessively low voltage from the TP sensor 2 is sent to ECM. | • Harness or connectors (TP sensor 2 circuit is open or shorted.) |
| P0123 0123 | Throttle position sensor 2 circuit high input | An excessively high voltage from the TP sensor 2 is sent to ECM. | • Electric throttle control actuator (TP sensor 2) |

FAIL-SAFE MODE

When the malfunction is detected, ECM enters fail-safe mode and the MIL lights up.

Engine operation condition in fail-safe mode

The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees.

The ECM regulates the opening speed of the throttle valve to be slower than the normal condition.

So, the acceleration will be poor.

DTC Confirmation Procedure

INFOID:000000001702682

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8V at idle.

① WITH CONSULT-II

1. Turn ignition switch ON.

DTC P0122, P0123 TP SENSOR

< SERVICE INFORMATION >

2. Select "DATA MONITOR" mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to [EC-195. "Diagnosis Procedure"](#).

| DATA MONITOR | |
|--------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |

SEF058Y

WITH GST

Follow the procedure "WITH CONSULT-II" above.

A

EC

C

D

E

F

G

H

I

J

K

L

M

N

O

P

DTC P0122, P0123 TP SENSOR



< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001702683

EC-TPS2-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

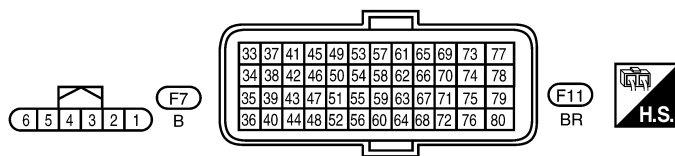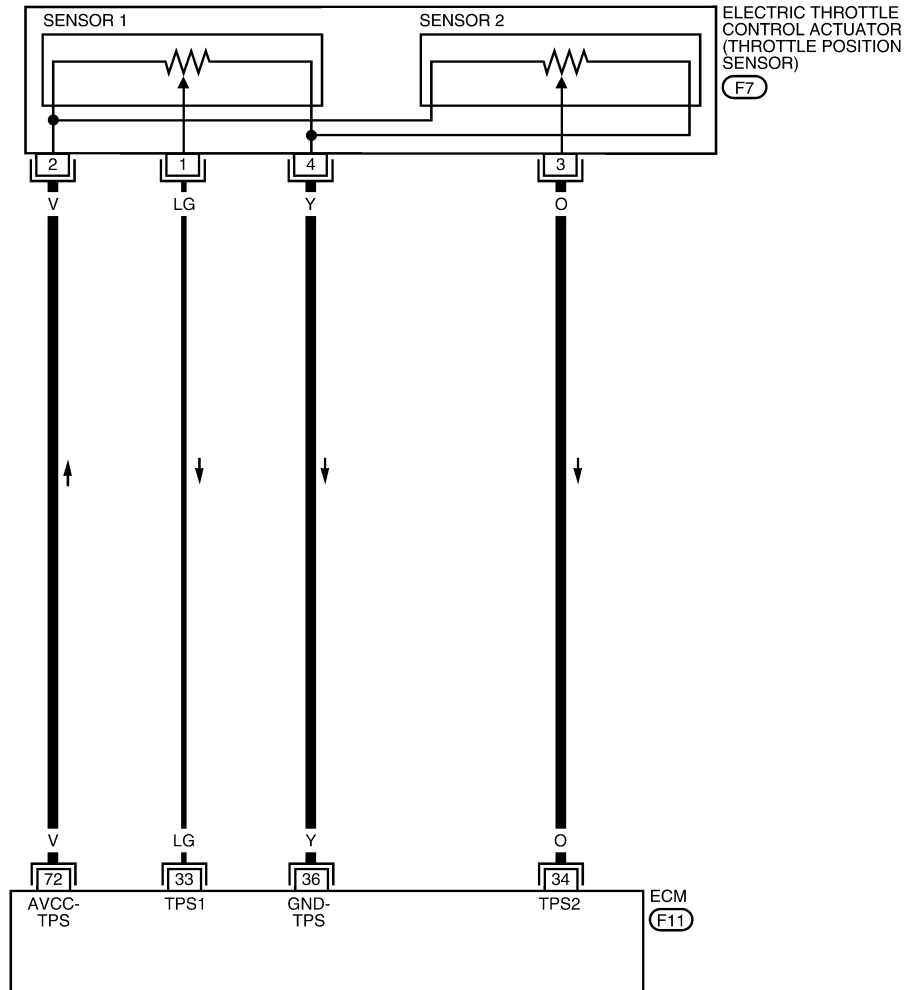

BBWA2656E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

DTC P0122, P0123 TP SENSOR

< SERVICE INFORMATION >


| TER-MI-NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------|------------|---|--|-------------------|
| 33 | LG | Throttle position sensor 1 | [Ignition switch: ON] • Engine stopped • Shift lever: D (A/T, CVT), 1st (M/T) • Accelerator pedal: Fully released | More than 0.36V |
| | | | [Ignition switch: ON] • Engine stopped • Shift lever: D (A/T, CVT), 1st (M/T) • Accelerator pedal: Fully depressed | Less than 4.75V |
| 34 | O | Throttle position sensor 2 | [Ignition switch: ON] • Engine stopped • Shift lever: D (A/T, CVT), 1st (M/T) • Accelerator pedal: Fully released | Less than 4.75V |
| | | | [Ignition switch: ON] • Engine stopped • Shift lever: D (A/T, CVT), 1st (M/T) • Accelerator pedal: Fully depressed | More than 0.36V |
| 36 | Y | Sensor ground (Throttle position sensor) | [Engine is running] • Warm-up condition • Idle speed | Approximately 0V |
| 72 | V | Sensor power supply (Throttle position sensor) | [Ignition switch: ON] | Approximately 5V |

Diagnosis Procedure

INFOID:000000001702684

1. CHECK GROUND CONNECTIONS

1. Turn ignition switch OFF.
2. Loosen and retighten ground screw on the body.
Refer to [EC-142. "Ground Inspection"](#).

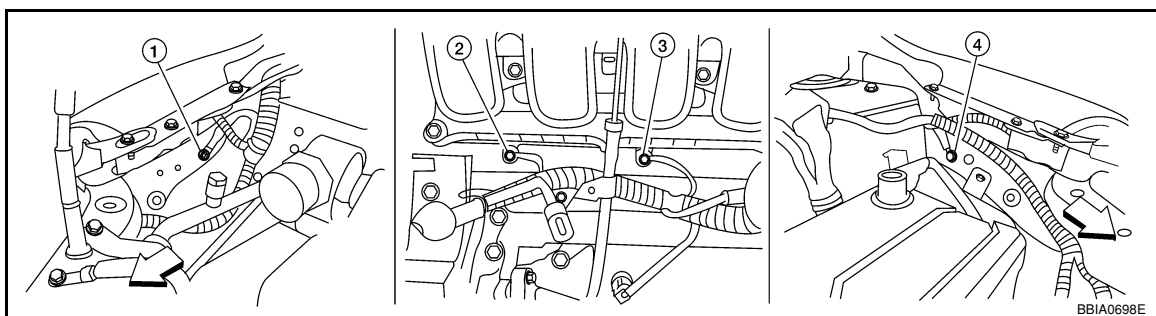

↔: Vehicle front

1. Body ground E24
2. Engine ground F9
3. Engine ground E16
4. Body ground E15

OK or NG


- OK >> GO TO 2.
NG >> Repair or replace ground connections.

2. CHECK THROTTLE POSITION SENSOR 2 POWER SUPPLY CIRCUIT

DTC P0122, P0123 TP SENSOR

< SERVICE INFORMATION >

1. Disconnect electric throttle control actuator (1) harness connector.
 - ⇐: Vehicle front
2. Turn ignition switch ON.

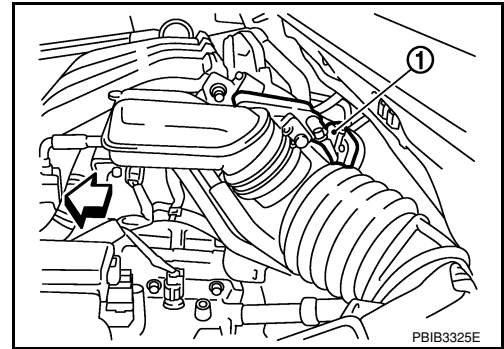


3. Check voltage between electric throttle control actuator terminal 2 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

OK or NG

- OK >> GO TO 3.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

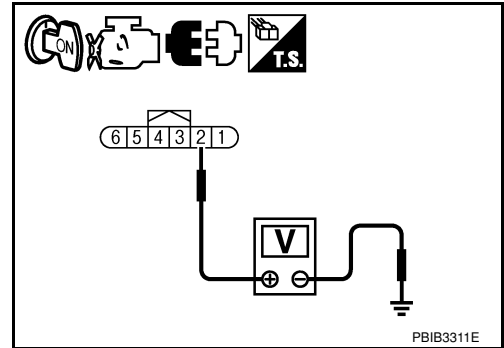

3. CHECK THROTTLE POSITION SENSOR 2 GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between electric throttle control actuator terminal 4 and ECM terminal 36. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 4.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK THROTTLE POSITION SENSOR 2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 34 and electric throttle control actuator terminal 3. Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 5.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK THROTTLE POSITION SENSOR

Refer to [EC-197. "Component Inspection"](#).

OK or NG

- OK >> GO TO 7.
- NG >> GO TO 6.

6. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace the electric throttle control actuator.
2. Perform [EC-76. "Throttle Valve Closed Position Learning"](#).
3. Perform [EC-76. "Idle Air Volume Learning"](#).

DTC P0122, P0123 TP SENSOR

< SERVICE INFORMATION >

>> **INSPECTION END**

7. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**

Component Inspection


INFOID:000000001702685

THROTTLE POSITION SENSOR

1. Reconnect all harness connectors disconnected.
2. Perform [EC-76. "Throttle Valve Closed Position Learning"](#).
3. Turn ignition switch ON.
4. Set shift lever to D position (A/T, CVT) or 1st position (M/T).
5. Check voltage between ECM terminals 33 (TP sensor 1 signal), 34 (TP sensor 2 signal) and ground under the following conditions.

| Terminal | Accelerator pedal | Voltage |
|------------------------------------|-------------------|-----------------|
| 33 (Throttle position sensor 1) | Fully released | More than 0.36V |
| | Fully depressed | Less than 4.75V |
| 34 (Throttle position sensor 2) | Fully released | Less than 4.75V |
| | Fully depressed | More than 0.36V |

6. If NG, replace electric throttle control actuator and go to the next step.
7. Perform [EC-76. "Throttle Valve Closed Position Learning"](#).
8. Perform [EC-76. "Idle Air Volume Learning"](#).

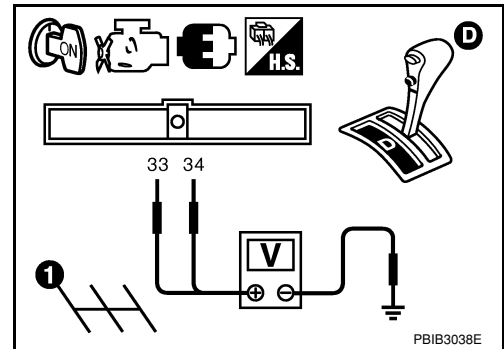

Removal and Installation

INFOID:000000001702686

ELECTRIC THROTTLE CONTROL ACTUATOR

Refer to [EM-18](#).

DTC P0125 ECT SENSOR

< SERVICE INFORMATION >

DTC P0125 ECT SENSOR

Description


INFOID:000000001702687

NOTE:

If DTC P0125 is displayed with P0117 or P0118, first perform the trouble diagnosis for DTC P0117 or P0118. Refer to [EC-187](#).

COMPONENT DESCRIPTION


The engine coolant temperature sensor is used to detect the engine coolant temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the engine coolant temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

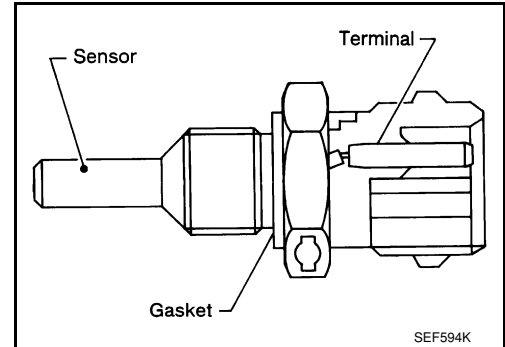

<Reference data>

| Engine coolant temperature °C (°F) | Voltage* V | Resistance kΩ |
|------------------------------------|------------|---------------|
| -10 (14) | 4.4 | 7.0 - 11.4 |
| 20 (68) | 3.5 | 2.1 - 2.9 |
| 50 (122) | 2.2 | 0.68 - 1.00 |
| 90 (194) | 0.9 | 0.236 - 0.260 |

*: This data is reference values and is measured between ECM terminal 38 (Engine coolant temperature sensor) and ground.

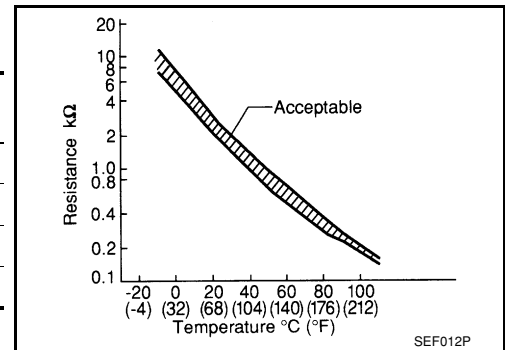

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

On Board Diagnosis Logic

INFOID:000000001702688

This self-diagnosis has one trip detection logic.

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|--|---|---|
| P0125 0125 | Insufficient engine coolant temperature for closed loop fuel control | <ul style="list-style-type: none"> Voltage sent to ECM from the sensor is not practical, even when some time has passed after starting the engine. Engine coolant temperature is insufficient for closed loop fuel control. | <ul style="list-style-type: none"> Harness or connectors (High resistance in the circuit) Engine coolant temperature sensor Thermostat |

DTC Confirmation Procedure

INFOID:000000001702689

CAUTION:

Be careful not to overheat engine.

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

Ⓜ WITH CONSULT-II

1. Turn ignition switch ON.

DTC P0125 ECT SENSOR

< SERVICE INFORMATION >

2. Select "DATA MONITOR" mode with CONSULT-II.
3. Check that "COOLAN TEMP/S" is above 10°C (50°F).
If it is above 10°C (50°F), the test result will be OK.
If it is below 10°C (50°F), go to following step.
4. Start engine and run it for 65 minutes at idle speed.
If "COOLAN TEMP/S" increases to more than 10°C (50°F) within 65 minutes, stop engine because the test result will be OK.
5. If DTC is detected, go to [EC-199, "Diagnosis Procedure"](#).

| DATA MONITOR | |
|--------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |

SEF058Y

WITH GST


Follow the procedure "WITH CONSULT-II" above.

Diagnosis Procedure

INFOID:000000001702690

1. CHECK GROUND CONNECTIONS

1. Turn ignition switch OFF.
2. Loosen and retighten ground screw on the body.
Refer to [EC-142, "Ground Inspection"](#).

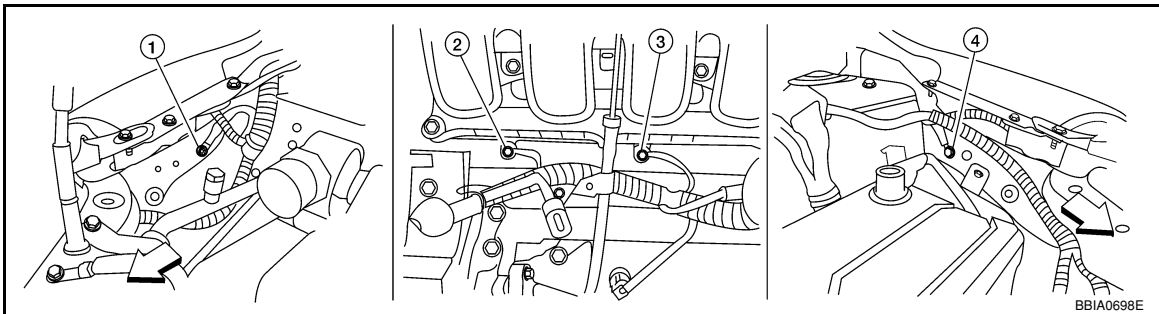

 Vehicle front

1. Body ground E24
2. Engine ground F9
3. Engine ground F16
4. Body ground E15

OK or NG

- OK >> GO TO 2.
NG >> Repair or replace ground connections.

2. CHECK ENGINE COOLANT TEMPERATURE SENSOR

Refer to [EC-200, "Component Inspection"](#).

OK or NG

- OK >> GO TO 3.
NG >> Replace engine coolant temperature sensor.

3. CHECK THERMOSTAT OPERATION

When the engine is cold [lower than 70°C (158°F)] condition, grasp lower radiator hose and confirm the engine coolant does not flow.

OK or NG

- OK >> GO TO 4.
NG >> Repair or replace thermostat. Refer to [CO-17](#).

4. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).
Refer to [EC-189, "Wiring Diagram"](#).

DTC P0125 ECT SENSOR

< SERVICE INFORMATION >


>> INSPECTION END

Component Inspection

INFOID:000000001702691

ENGINE COOLANT TEMPERATURE SENSOR


1. Check resistance between engine coolant temperature sensor terminals 1 and 2 as shown in the figure.

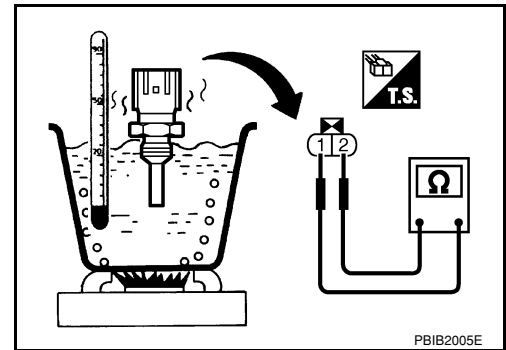

<Reference data>

| Engine coolant temperature °C (°F) | Resistance kΩ |
|------------------------------------|---------------|
| 20 (68) | 2.1 - 2.9 |
| 50 (122) | 0.68 - 1.00 |
| 90 (194) | 0.236 - 0.260 |

2. If NG, replace engine coolant temperature sensor.

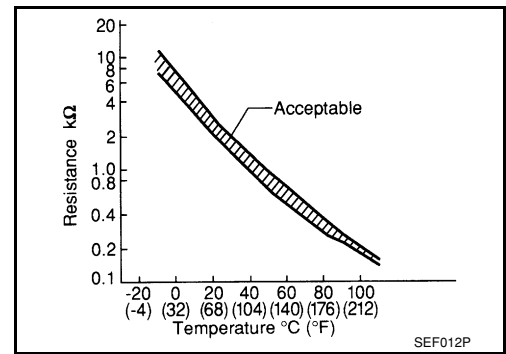

Removal and Installation

INFOID:000000001702692

ENGINE COOLANT TEMPERATURE SENSOR

Refer to [CO-17](#).

DTC P0127 IAT SENSOR

< SERVICE INFORMATION >


DTC P0127 IAT SENSOR

Component Description

INFOID:000000001702693

The intake air temperature sensor is built into mass air flow sensor (1). The sensor detects intake air temperature and transmits a signal to the ECM.

The temperature sensing unit uses a thermistor which is sensitive to the change in temperature. Electrical resistance of the thermistor decreases in response to the temperature rise.

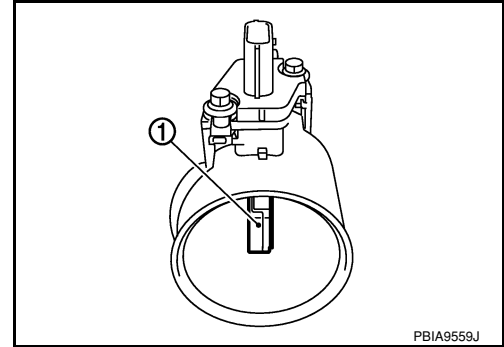


<Reference data>

| Intake air temperature °C (°F) | Voltage* V | Resistance K.Ω |
|-----------------------------------|------------|----------------|
| 25 (77) | 3.3 | 1.800 - 2.200 |
| 80 (176) | 1.2 | 0.283 - 0.359 |

*: This data is reference value and is measured between ECM terminal 46 (Intake air temperature sensor) and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

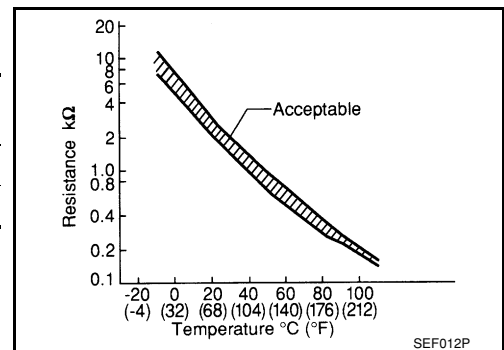

On Board Diagnosis Logic

INFOID:000000001702694

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|---------------------------------|---|---|
| P0127 0127 | Intake air temperature too high | Rationally incorrect voltage from the sensor is sent to ECM, compared with the voltage signal from engine coolant temperature sensor. | <ul style="list-style-type: none"> • Harness or connectors (Intake temperature sensor circuit is open or shorted) • Intake air temperature sensor |

DTC Confirmation Procedure

INFOID:000000001702695

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

This test may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

Ⓟ WITH CONSULT-II

1. Wait until engine coolant temperature is less than 90°C (194°F)
 - a. Turn ignition switch ON.

DTC P0127 IAT SENSOR

< SERVICE INFORMATION >

- b. Select "DATA MONITOR" mode with CONSULT-II.
- c. Check the engine coolant temperature.
- d. If the engine coolant temperature is not less than 90°C (194°F), turn ignition switch OFF and cool down engine.
 - Perform the following steps before engine coolant temperature is above 90°C (194°F).
2. Turn ignition switch ON.
3. Select "DATA MONITOR" mode with CONSULT-II.
4. Start engine.
5. Hold vehicle speed at more than 70 km/h (43 MPH) for 100 consecutive seconds.
6. If 1st trip DTC is detected, go to [EC-202, "Diagnosis Procedure"](#).

| DATA MONITOR | |
|---------------|----------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |
| COOLAN TEMP/S | XXX °C |
| VHCL SPEED SE | XXX km/h |
| B/FUEL SCHDL | XXX msec |

SEF189Y

WITH GST


Follow the procedure "With CONSULT-II" above.


Diagnosis Procedure

INFOID:000000001702696

1. CHECK GROUND CONNECTIONS

1. Turn ignition switch OFF.
2. Loosen and retighten ground screw on the body.
Refer to [EC-142, "Ground Inspection"](#).

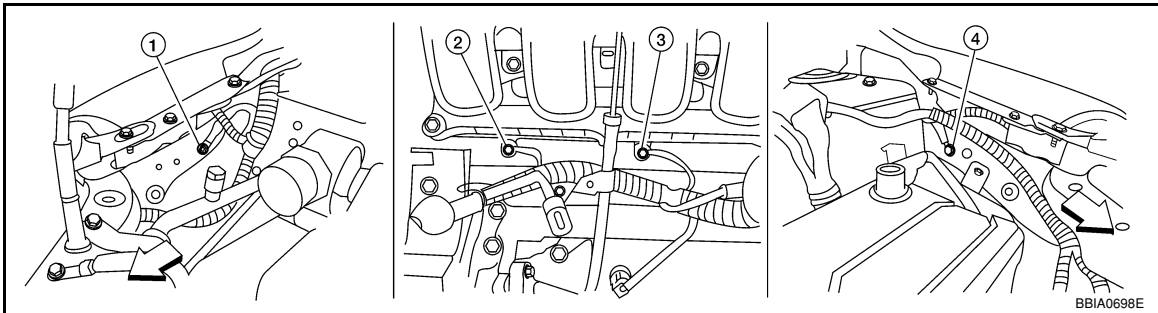

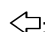 Vehicle front

1. Body ground E24
4. Body ground E15

2. Engine ground F9

3. Engine ground F16

OK or NG

OK >> GO TO 2.

NG >> Repair or replace ground connections.

2. CHECK INTAKE AIR TEMPERATURE SENSOR

Refer to [EC-202, "Component Inspection"](#).

OK or NG

OK >> GO TO 3.

NG >> Replace mass air flow sensor (with intake air temperature sensor).

3. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

Refer to [EC-184, "Wiring Diagram"](#).

>> **INSPECTION END**

Component Inspection

INFOID:000000001702697

INTAKE AIR TEMPERATURE SENSOR



DTC P0127 IAT SENSOR

< SERVICE INFORMATION >

1. Check resistance between intake air temperature sensor (1) terminals 5 and 6 under the following conditions.

| Intake air temperature °C (°F) | Resistance kΩ |
|--------------------------------|---------------|
| 25 (77) | 1.800 - 2.200 |

2. If NG, replace mass air flow sensor (with intake air temperature sensor).

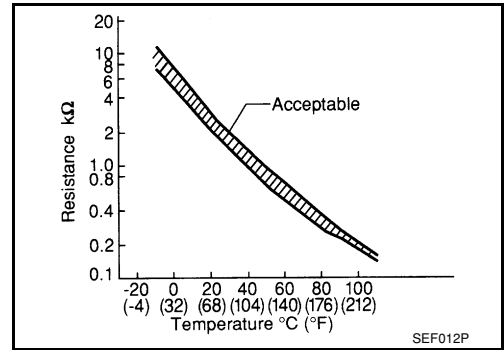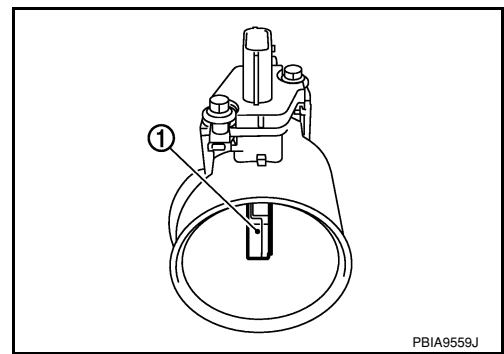

Removal and Installation

INFOID:000000001702698

MASS AIR FLOW SENSOR

Refer to [EM-16](#).

A
EC
C
D
E
F
G
H
I
J
K
L
M
N
O
P

DTC P0128 THERMOSTAT FUNCTION

< SERVICE INFORMATION >

DTC P0128 THERMOSTAT FUNCTION

On Board Diagnosis Logic

INFOID:000000001702699

Engine coolant temperature has not risen enough to open the thermostat even though the engine has run long enough. This is due to a leak in the seal or the thermostat stuck open.

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|------------------------|--|---|
| P0128 0128 | Thermostat function | The engine coolant temperature does not reach to specified temperature even though the engine has run long enough. | <ul style="list-style-type: none">• Thermostat• Leakage from sealing portion of thermostat• Engine coolant temperature sensor |

DTC Confirmation Procedure

INFOID:000000001702700

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

- For best results, perform at ambient temperature of -10°C (14°F) or higher.
- For best results, perform at engine coolant temperature of -10°C (14°F) to 71°C (160°F).

WITH CONSULT-II

1. Replace thermostat with new one. Refer to [CO-17](#). Use only a genuine NISSAN thermostat as a replacement. If an incorrect thermostat is used, the MIL may come on.
2. Turn ignition switch ON.
3. Select "COOLAN TEMP/S" in "DATA MONITOR" mode with CONSULT-II.
4. Check that the "COOLAN TEMP/S" is above 71°C (160°F).
If it is below 71°C (160°F), go to following step.
If it is above 71°C (160°F), cool down the engine to less than 71°C (160°F), then retry from step 1.
5. Drive vehicle for 10 consecutive minutes under the following conditions.

| | |
|---------------|-----------------------------|
| VHCL SPEED SE | 80 - 120 km/h (50 - 75 MPH) |
|---------------|-----------------------------|

If 1st trip DTC is detected, go to [EC-204](#), "Diagnosis Procedure".

| DATA MONITOR | |
|---------------|----------|
| MONITOR | NO DTC |
| COOLAN TEMP/S | XXX °C |
| VHCL SPEED SE | XXX km/h |

SEF176Y

WITH GST

Follow the procedure "WITH CONSULT-II" above.

Diagnosis Procedure

INFOID:000000001702701

1. CHECK ENGINE COOLANT TEMPERATURE SENSOR

Refer to [EC-204](#), "Component Inspection".

OK or NG

- OK >> **INSPECTION END**
- NG >> Replace engine coolant temperature sensor.

Component Inspection


INFOID:000000001702702

ENGINE COOLANT TEMPERATURE SENSOR

DTC P0128 THERMOSTAT FUNCTION

< SERVICE INFORMATION >


1. Check resistance between engine coolant temperature sensor terminals 1 and 2 as shown in the figure.

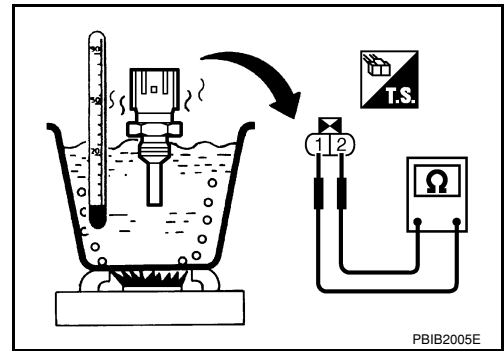

<Reference data>

| Engine coolant temperature °C (°F) | Resistance kΩ |
|------------------------------------|---------------|
| 20 (68) | 2.1 - 2.9 |
| 50 (122) | 0.68 - 1.00 |
| 90 (194) | 0.236 - 0.260 |

2. If NG, replace engine coolant temperature sensor.

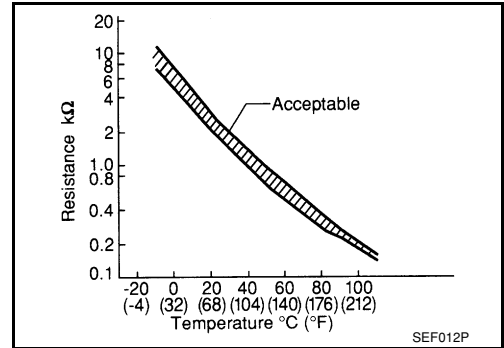

Removal and Installation

ENGINE COOLANT TEMPERATURE SENSOR

Refer to [CO-17](#).

INFOID:000000001702703

DTC P0130 A/F SENSOR 1



< SERVICE INFORMATION >

DTC P0130 A/F SENSOR 1

Component Description

INFOID:000000001702704

The air fuel ratio (A/F) sensor 1 is a planar one-cell limit current sensor. The sensor element of the A/F sensor 1 is composed an electrode layer, which transports ions. It has a heater in the element. The sensor is capable of precise measurement $\lambda = 1$, but also in the lean and rich range. Together with its control electronics, the sensor outputs a clear, continuous signal throughout a wide λ range. The exhaust gas components diffuse through the diffusion layer at the sensor cell. An electrode layer is applied voltage, and this current relative oxygen density in lean. Also this current relative hydrocarbon density in rich. Therefore, the A/F sensor 1 is able to indicate air fuel ratio by this electrode layer of current. In addition, a heater is integrated in the sensor to ensure the required operating temperature of about 800°C (1,472°F).

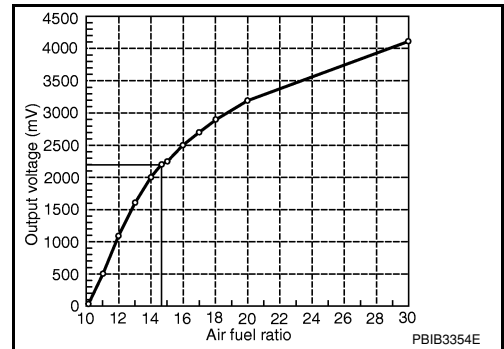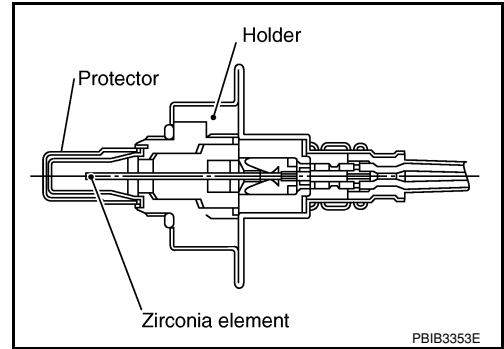

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702705

Specification data are reference values.

| MONITOR ITEM | CONDITION | | SPECIFICATION |
|---------------|----------------------------|---------------------------------------|------------------------|
| A/F SEN1 (B1) | • Engine: After warming up | Maintaining engine speed at 2,000 rpm | Fluctuates around 2.2V |

On Board Diagnosis Logic

INFOID:000000001702706

To judge the malfunction, the diagnosis checks that the A/F signal computed by ECM from the air fuel ratio (A/F) sensor 1 signal fluctuates according to fuel feedback control.

| DTC No. | Trouble diagnosis name | DTC detecting condition | | Possible Cause |
|---------------------------|---------------------------------------|-------------------------|---|--|
| P0130 0130 (Bank 1) | Air fuel ratio (A/F) sensor 1 circuit | A) | The A/F signal computed by ECM from the A/F sensor 1 signal is constantly in the range other than approx. 2.2V. | <ul style="list-style-type: none"> • Harness or connectors [Air fuel ratio (A/F) sensor 1 circuit is open or shorted.] • Air fuel ratio (A/F) sensor 1 |
| P0150 0150 (Bank 2) | | B) | The A/F signal computed by ECM from the A/F sensor 1 signal is constantly approx. 2.2V. | |

DTC Confirmation Procedure

INFOID:000000001702707

Perform PROCEDURE FOR MALFUNCTION A first.

If the DTC cannot be confirmed, perform PROCEDURE FOR MALFUNCTION B.

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11V at idle.

PROCEDURE FOR MALFUNCTION A

DTC P0130 A/F SENSOR 1

< SERVICE INFORMATION >

Ⓜ With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select "DATA MONITOR" mode with CONSULT-II.
3. Let engine idle for 2 minutes.
4. If 1st trip DTC is detected, go to [EC-210. "Diagnosis Procedure"](#).

| DATA MONITOR | |
|---------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |
| COOLAN TEMP/S | XXX °C |

SEF174Y

Ⓜ With GST

Follow the procedure "With CONSULT-II" above.

PROCEDURE FOR MALFUNCTION B

CAUTION:

Always drive vehicle at a safe speed.

Ⓜ With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select "A/F SEN1 (B1)" in "DATA MONITOR" mode with CONSULT-II.
3. Check "A/F SEN1 (B1)" indication.
If the indication is constantly approx. 2.2V and does not fluctuates, go to [EC-210. "Diagnosis Procedure"](#).
If the indication fluctuates around 2.2V, go to next step.
4. Select "A/F SEN1 (B1) P1276" (for DTC P0130) of "A/F SEN1" in "DTC WORK SUPPORT" mode with CONSULT-II.
5. Touch "START".
6. When the following conditions are met, "TESTING" will be displayed on the CONSULT-II screen.

| | |
|---------------|--|
| ENG SPEED | 1,600 - 3,200 rpm |
| VHCL SPEED SE | More than 64 km/h (40 MPH) |
| B/FUEL SCHDL | 1.0 - 8.0 msec |
| Shift lever | D position with OD OFF (A/T) D position (CVT) 5th position (M/T) |

If "TESTING" is not displayed after 20 seconds, retry from step 2.

| A/F SEN1 (B1) P1276 | |
|---------------------|----------|
| OUT OF CONDITION | |
| MONITOR | |
| ENG SPEED | XXX rpm |
| B/FUEL SCHDL | XXX msec |
| COOLAN TEMP/S | XXX °C |
| VHCL SPEED SE | XXX km/h |

SEF576Z

7. Release accelerator pedal fully.

NOTE:

Never apply brake during releasing the accelerator pedal.


| A/F SEN1 (B1) P1276 | |
|---|----------|
| TESTING | |
| SELECT 3RD GEAR AND THEN RELEASE ACCELERATOR PEDAL OFF | |
| MONITOR | |
| ENG SPEED | XXX rpm |
| B/FUEL SCHDL | XXX msec |
| COOLAN TEMP/S | XXX °C |
| VHCL SPEED SE | XXX km/h |

SEF577Z

DTC P0130 A/F SENSOR 1

< SERVICE INFORMATION >

8. Make sure that "TESTING" changes to "COMPLETED".
If "TESTING" changed to "OUT OF CONDITION", retry from step 6.
9. Make sure that "OK" is displayed after touching "SELF-DIAG RESULT".
If "NG" is displayed, go to [EC-210. "Diagnosis Procedure"](#).

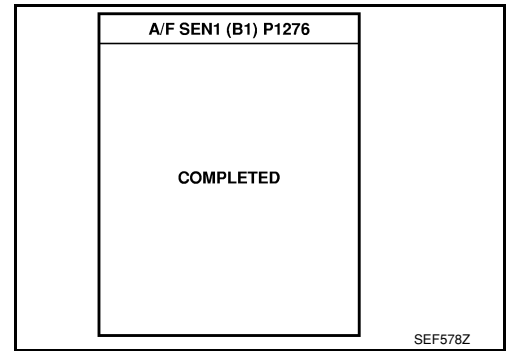

Overall Function Check

INFOID:000000001702708

PROCEDURE MALFUNCTION B

Use this procedure to check the overall function of the A/F sensor 1 circuit. During this check, a 1st trip DTC might not be confirmed.

With GST

1. Start engine and warm it up to normal operating temperature.
2. Drive the vehicle at a speed of 80 km/h (50 MPH) for a few minutes in the suitable gear position.
3. Set shift lever to D position with OD ON (A/T), D position (CVT) or 5th position (M/T), then release the accelerator pedal fully until the vehicle speed decreases to 50 km/h (30 MPH).

NOTE:

Never apply brake during releasing the accelerator pedal.

4. Repeat steps 2 and 3 for five times.
5. Stop the vehicle and turn ignition switch OFF.
6. Wait at least 10 seconds and restart engine.
7. Repeat steps 2 and 3 for five times.
8. Stop the vehicle and connect GST to the vehicle.
9. Make sure that no 1st trip DTC is displayed.
If the 1st trip DTC is displayed, go to [EC-210. "Diagnosis Procedure"](#).

DTC P0130 A/F SENSOR 1




< SERVICE INFORMATION >

Wiring Diagram


INFOID:000000001702709

EC-A/F-01

— : DETECTABLE LINE FOR DTC
 - - - : NON-DETECTABLE LINE FOR DTC

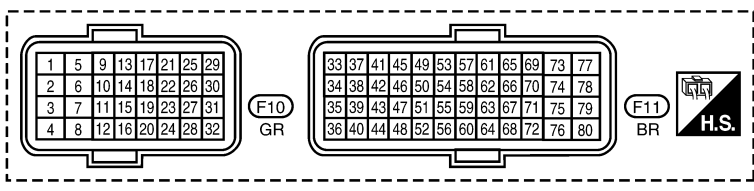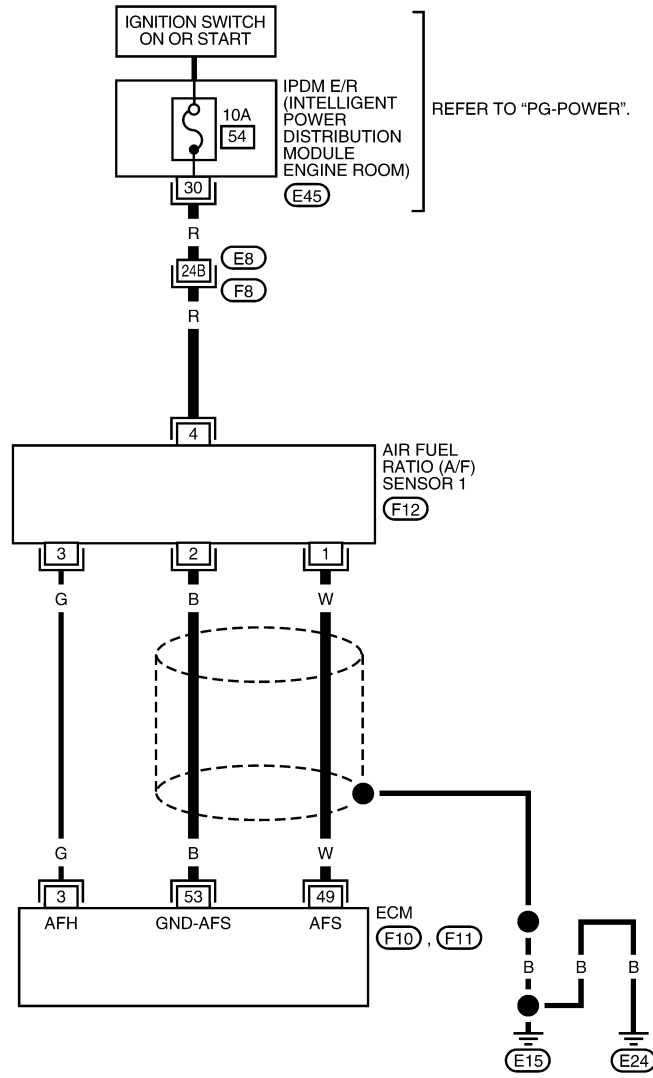

REFER TO THE FOLLOWING.
 (F8) - SUPER MULTIPLE JUNCTION (SMJ)



BBWA2631E


Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.

CAUTION:

DTC P0130 A/F SENSOR 1

< SERVICE INFORMATION >

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.
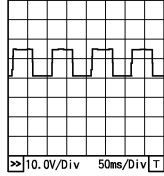
| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------------|---------------|---------------------|--|---|
| 3 | G | A/F sensor 1 heater | [Engine is running] • Warm-up condition • Idle speed (More than 140 seconds after starting engine) | Approximately 2.9 - 8.8V★  PBIAB148J |
| 49 | W | A/F sensor 1 | [Engine is running] • Warm-up condition • Engine speed: 2,000 rpm | Approximately 1.8V Output voltage varies with air fuel ratio. |
| 53 | B | A/F sensor 1 | [Ignition switch: ON] | Approximately 2.2V |


★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnosis Procedure

INFOID:000000001702710

1. CHECK GROUND CONNECTIONS

- Turn ignition switch OFF.
- Loosen and retighten ground screw on the body.
Refer to [EC-142. "Ground Inspection"](#).

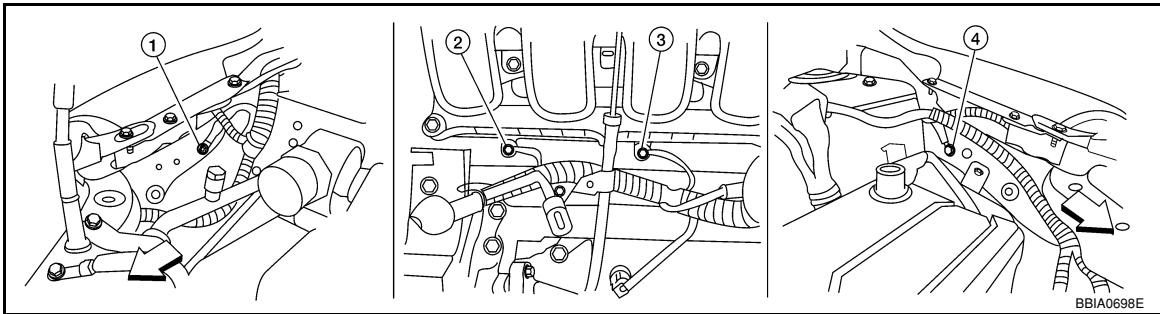

↙: Vehicle front

- Body ground E24
- Body ground E15

2. Engine ground F9

3. Engine ground F16


OK or NG

OK >> GO TO 2.

NG >> Repair or replace ground connections.

2. CHECK AIR FUEL RATIO (A/F) SENSOR 1 POWER SUPPLY CIRCUIT

- Disconnect A/F sensor 1 harness connector (1).
- Turn ignition switch ON.

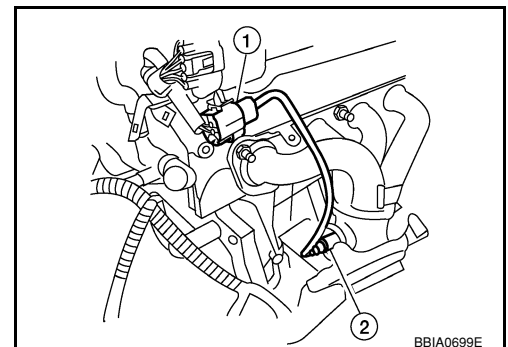

DTC P0130 A/F SENSOR 1


< SERVICE INFORMATION >

3. Check voltage between A/F sensor 1 terminal 4 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 3.

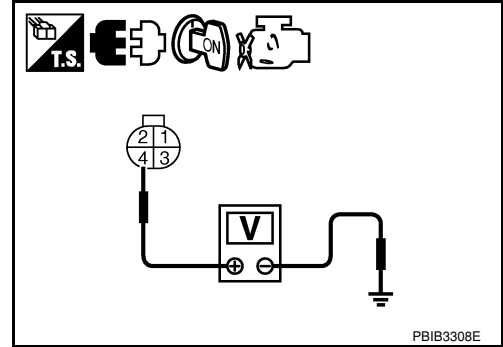

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness for open or short between A/F sensor 1 and fuse

>> Repair or replace harness or connectors.

4. CHECK A/F SENSOR 1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between the following terminals. Refer to Wiring Diagram.

| A/F sensor 1 terminal | ECM terminal |
|-----------------------|--------------|
| 1 | 49 |
| 2 | 53 |

Continuity should exist.

4. Check harness continuity between ECM terminals 49, 53 or A/F sensor 1 terminals 1, 2 and ground. Refer to Wiring Diagram.

Continuity should not exist.

5. Also check harness for short to power.

OK or NG

- OK >> GO TO 5.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK INTERMITTENT INCIDENT

Perform [EC-136](#).

OK or NG

- OK >> GO TO 6.
- NG >> Repair or replace.

6. REPLACE AIR FUEL RATIO (A/F) SENSOR 1

Replace air fuel ratio (A/F) sensor 1.

CAUTION:

- Discard any A/F sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new A/F sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

>> INSPECTION END

DTC P0130 A/F SENSOR 1

< SERVICE INFORMATION >

Removal and Installation

INFOID:000000001702711

AIR FUEL RATIO SENSOR

Refer to [EM-21](#).

DTC P0131 A/F SENSOR 1



< SERVICE INFORMATION >

DTC P0131 A/F SENSOR 1

Component Description

INFOID:000000001702712

The air fuel ratio (A/F) sensor 1 is a planar one-cell limit current sensor. The sensor element of the A/F sensor 1 is composed an electrode layer, which transports ions. It has a heater in the element. The sensor is capable of precise measurement $\lambda = 1$, but also in the lean and rich range. Together with its control electronics, the sensor outputs a clear, continuous signal throughout a wide λ range. The exhaust gas components diffuse through the diffusion layer at the sensor cell. An electrode layer is applied voltage, and this current relative oxygen density in lean. Also this current relative hydrocarbon density in rich. Therefore, the A/F sensor 1 is able to indicate air fuel ratio by this electrode layer of current. In addition, a heater is integrated in the sensor to ensure the required operating temperature of about 800°C (1,472°F).

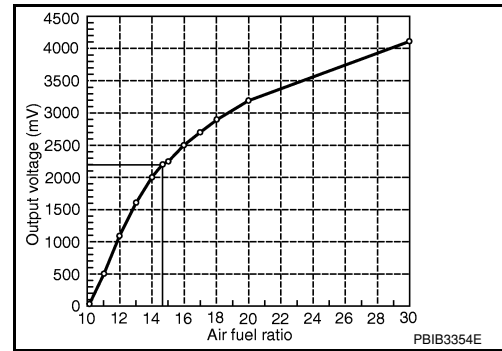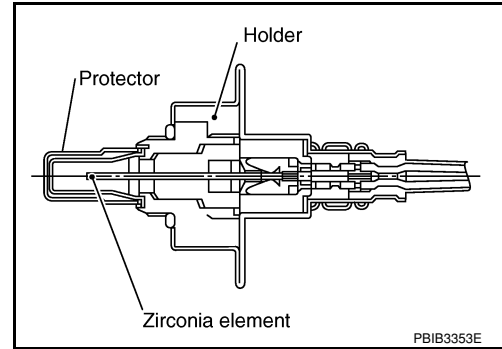

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702713

Specification data are reference values.

| MONITOR ITEM | CONDITION | | SPECIFICATION |
|---------------|----------------------------|---------------------------------------|------------------------|
| A/F SEN1 (B1) | • Engine: After warming up | Maintaining engine speed at 2,000 rpm | Fluctuates around 2.2V |

On Board Diagnosis Logic

INFOID:000000001702714

To judge the malfunction, the diagnosis checks that the A/F signal computed by ECM from the air fuel ratio (A/F) sensor 1 signal is not inordinately low.

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible Cause |
|------------|---|---|--|
| P0131 0131 | Air fuel ratio (A/F) sensor 1 circuit low voltage | The A/F signal computed by ECM from the A/F sensor 1 signal is constantly approx. 0V. | <ul style="list-style-type: none"> • Harness or connectors [Air fuel ratio (A/F) sensor circuit is open or shorted.] • Air fuel ratio (A/F) sensor 1 |

DTC Confirmation Procedure

INFOID:000000001702715

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11V at idle.

WITH CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select "A/F SEN1 (B1)" in "DATA MONITOR" mode with CONSULT-II.

DTC P0131 A/F SENSOR 1

< SERVICE INFORMATION >

3. Check "A/F SEN1 (B1)" indication.
If the indication is constantly approx. 0V, go to [EC-216. "Diagnosis Procedure"](#).
If the indication is not constantly approx. 0V, go to next step.
4. Turn ignition switch OFF, wait at least 10 seconds and then restart engine.
5. Drive and accelerate vehicle to more than 40 km/h (25 MPH) within 20 seconds after restarting engine.
6. Maintain the following conditions for about 20 consecutive seconds.

| DATA MONITOR | |
|---------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |
| COOLAN TEMP/S | XXX °C |
| A/F SEN1 (B1) | XXX V |

SEF581Z

| | |
|---------------|----------------------------|
| ENG SPEED | 1,000 - 3,200 rpm |
| VHCL SPEED SE | More than 40 km/h (25 MPH) |
| B/FUEL SCHDL | 1.5 - 9.0 msec |
| Shift lever | Suitable position |

NOTE:

- Keep the accelerator pedal as steady as possible during the cruising.
 - If this procedure is not completed within 1 minute after restarting engine at step 4, return to step 4.
7. If 1st trip DTC is displayed, go to [EC-216. "Diagnosis Procedure"](#).

WITH GST

Follow the procedure "WITH CONSULT-II" above.

DTC P0131 A/F SENSOR 1





< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001702716

EC-A/F-01

— : DETECTABLE LINE FOR DTC
 - - - : NON-DETECTABLE LINE FOR DTC

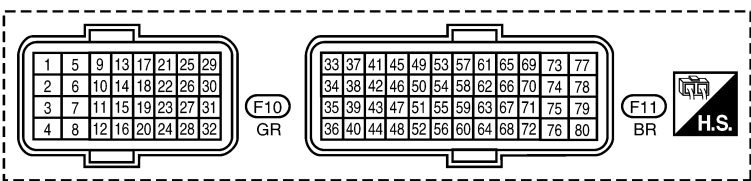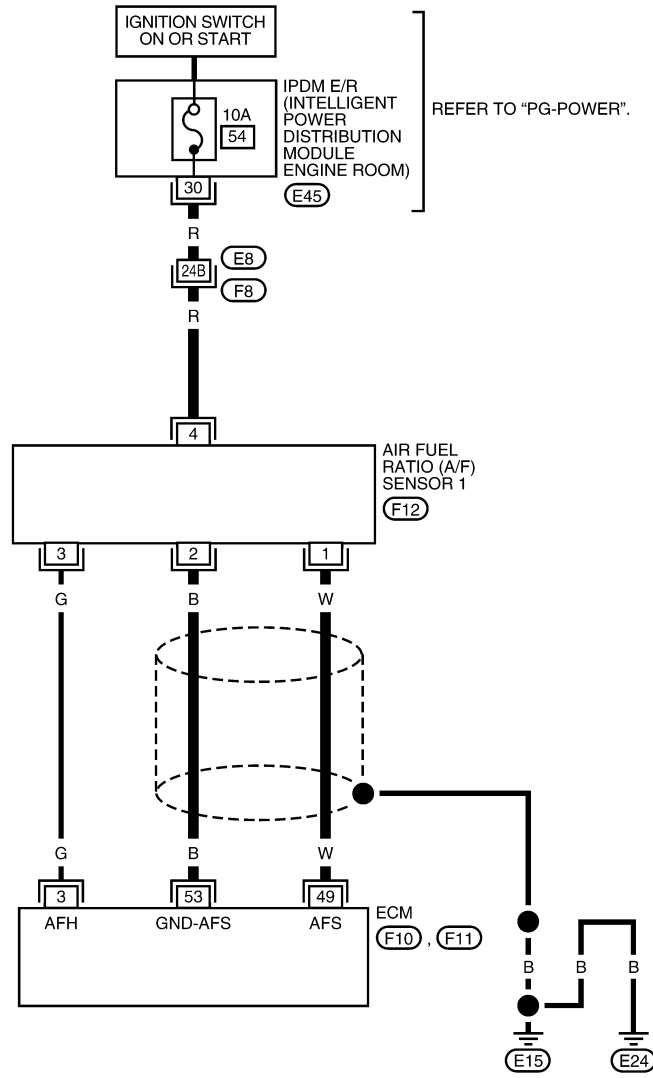

REFER TO THE FOLLOWING.
 (F8) - SUPER MULTIPLE JUNCTION (SMJ)

BBWA2631E

Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.


CAUTION:

A
 EC
 C
 D
 E
 F
 G
 H
 I
 J
 K
 L
 M
 N
 O
 P

DTC P0131 A/F SENSOR 1

< SERVICE INFORMATION >

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.
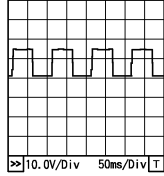
| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------------|---------------|---------------------|--|--|
| 3 | G | A/F sensor 1 heater | [Engine is running] • Warm-up condition • Idle speed (More than 140 seconds after starting engine) | Approximately 2.9 - 8.8V★  PBI A8148J |
| 49 | W | A/F sensor 1 | [Engine is running] • Warm-up condition • Engine speed: 2,000 rpm | Approximately 1.8V Output voltage varies with air fuel ratio. |
| 53 | B | A/F sensor 1 | [Ignition switch: ON] | Approximately 2.2V |


★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnosis Procedure

INFOID:000000001702717

1. CHECK GROUND CONNECTIONS

- Turn ignition switch OFF.
- Loosen and retighten ground screw on the body.
Refer to [EC-142. "Ground Inspection"](#).

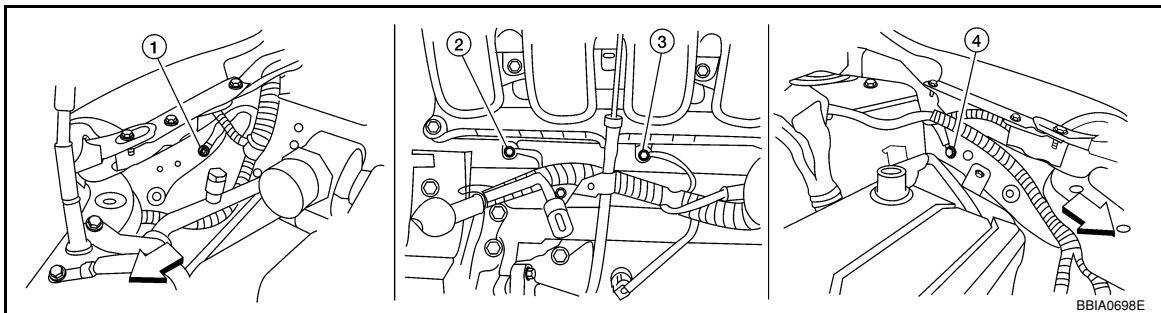

↙: Vehicle front

- Body ground E24
- Body ground E15

2. Engine ground F9

3. Engine ground F16


OK or NG

OK >> GO TO 2.

NG >> Repair or replace ground connections.

2. CHECK AIR FUEL RATIO (A/F) SENSOR 1 POWER SUPPLY CIRCUIT

- Disconnect A/F sensor 1 harness connector (1).
- Turn ignition switch ON.

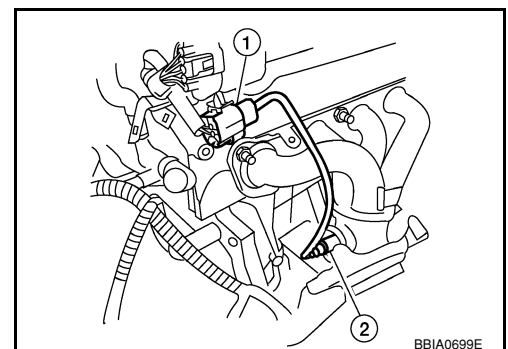

DTC P0131 A/F SENSOR 1


< SERVICE INFORMATION >

3. Check voltage between A/F sensor 1 terminal 4 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 3.

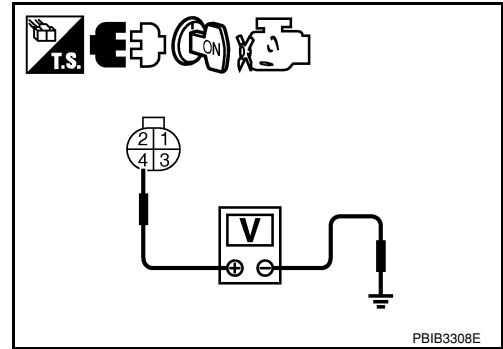

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness for open or short between A/F sensor 1 and fuse

>> Repair or replace harness or connectors.

4. CHECK A/F SENSOR 1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between the following terminals. Refer to Wiring Diagram.

| A/F sensor 1 terminal | ECM terminal |
|-----------------------|--------------|
| 1 | 49 |
| 2 | 53 |

Continuity should exist.

4. Check harness continuity between ECM terminals 49, 53 or A/F sensor 1 terminals 1, 2 and ground. Refer to Wiring Diagram.

Continuity should not exist.

5. Also check harness for short to power.

OK or NG

- OK >> GO TO 5.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK INTERMITTENT INCIDENT

Perform [EC-136](#).

OK or NG

- OK >> GO TO 6.
- NG >> Repair or replace.

6. REPLACE AIR FUEL RATIO (A/F) SENSOR 1

Replace air fuel ratio (A/F) sensor 1.

CAUTION:

- Discard any A/F sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new A/F sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

>> INSPECTION END

DTC P0131 A/F SENSOR 1

< SERVICE INFORMATION >

Removal and Installation

INFOID:000000001702718

AIR FUEL RATIO SENSOR

Refer to [EM-21](#).

DTC P0132 A/F SENSOR 1



< SERVICE INFORMATION >

DTC P0132 A/F SENSOR 1

Component Description

INFOID:000000001702719

The air fuel ratio (A/F) sensor 1 is a planar one-cell limit current sensor. The sensor element of the A/F sensor 1 is composed an electrode layer, which transports ions. It has a heater in the element. The sensor is capable of precise measurement $\lambda = 1$, but also in the lean and rich range. Together with its control electronics, the sensor outputs a clear, continuous signal throughout a wide λ range. The exhaust gas components diffuse through the diffusion layer at the sensor cell. An electrode layer is applied voltage, and this current relative oxygen density in lean. Also this current relative hydrocarbon density in rich. Therefore, the A/F sensor 1 is able to indicate air fuel ratio by this electrode layer of current. In addition, a heater is integrated in the sensor to ensure the required operating temperature of about 800°C (1,472°F).

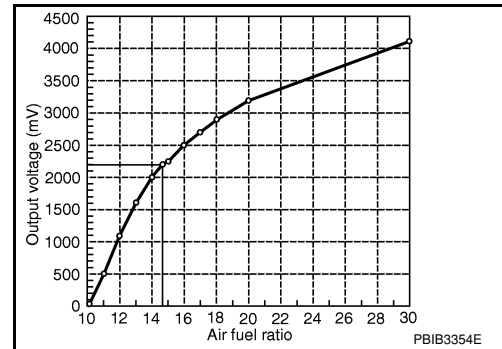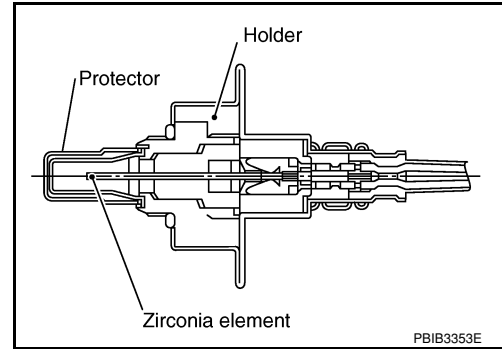

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702720

Specification data are reference values.

| MONITOR ITEM | CONDITION | | SPECIFICATION |
|---------------|----------------------------|---------------------------------------|------------------------|
| A/F SEN1 (B1) | • Engine: After warming up | Maintaining engine speed at 2,000 rpm | Fluctuates around 2.2V |

On Board Diagnosis Logic

INFOID:000000001702721

To judge the malfunction, the diagnosis checks that the A/F signal computed by ECM from the air fuel ratio (A/F) sensor 1 signal is not inordinately high.

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible Cause |
|------------|--|---|--|
| P0132 0132 | Air fuel ratio (A/F) sensor 1 circuit high voltage | The A/F signal computed by ECM from the A/F sensor 1 signal is constantly approx. 5V. | <ul style="list-style-type: none"> • Harness or connectors [Air fuel ratio (A/F) sensor circuit is open or shorted.] • Air fuel ratio (A/F) sensor 1 |

DTC Confirmation Procedure

INFOID:000000001702722

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11V at idle.

WITH CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select "A/F SEN1 (B1)" in "DATA MONITOR" mode with CONSULT-II.

DTC P0132 A/F SENSOR 1

< SERVICE INFORMATION >

3. Check "A/F SEN1 (B1)" indication.
If the indication is constantly approx. 5V, go to [EC-222, "Diagnosis Procedure"](#).
If the indication is not constantly approx. 5V, go to next step.
4. Turn ignition switch OFF, wait at least 10 seconds and then restart engine.
5. Drive and accelerate vehicle to more than 40 km/h (25 MPH) within 20 seconds after restarting engine.
6. Maintain the following conditions for about 20 consecutive seconds.

| DATA MONITOR | |
|---------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |
| COOLAN TEMP/S | XXX °C |
| A/F SEN1 (B1) | XXX V |

SEF581Z

| | |
|---------------|----------------------------|
| ENG SPEED | 1,000 - 3,200 rpm |
| VHCL SPEED SE | More than 40 km/h (25 MPH) |
| B/FUEL SCHDL | 1.5 - 9.0 msec |
| Shift lever | Suitable position |

NOTE:

- Keep the accelerator pedal as steady as possible during the cruising.
 - If this procedure is not completed within 1 minute after restarting engine at step 4, return to step 4.
7. If 1st trip DTC is displayed, go to [EC-222, "Diagnosis Procedure"](#).

WITH GST

Follow the procedure "WITH CONSULT-II" above.

DTC P0132 A/F SENSOR 1





< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001702723

EC-A/F-01

— : DETECTABLE LINE FOR DTC
 - - - : NON-DETECTABLE LINE FOR DTC

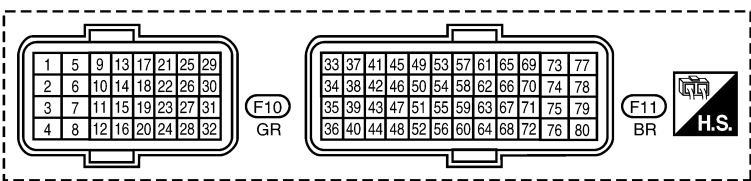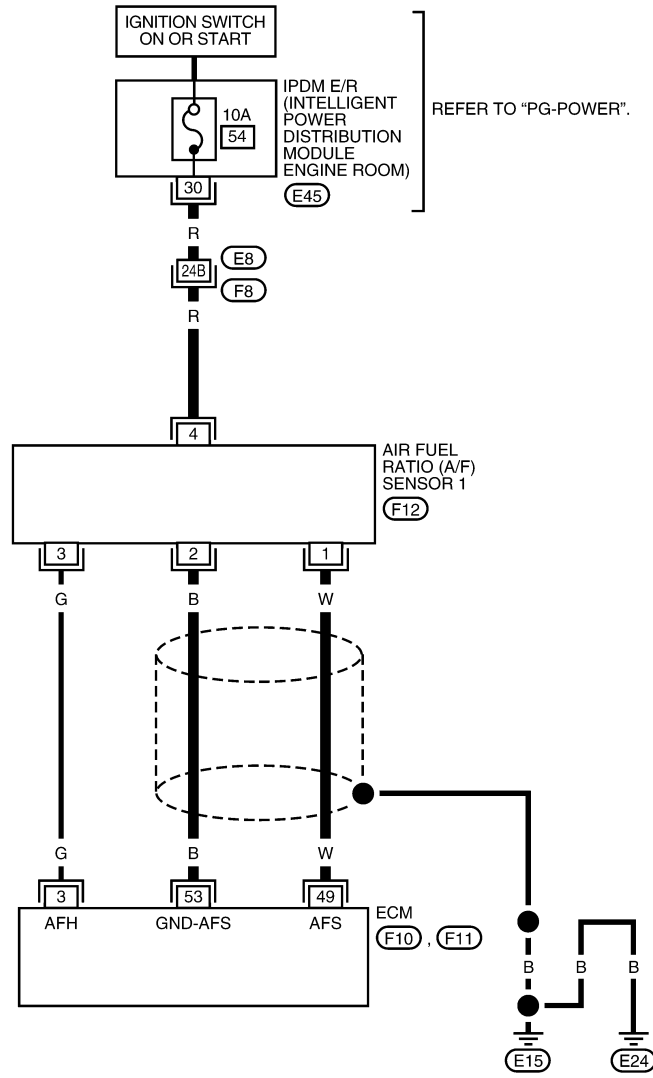

REFER TO THE FOLLOWING.
 (F8) - SUPER MULTIPLE JUNCTION (SMJ)

BBWA2631E


Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.

CAUTION:

DTC P0132 A/F SENSOR 1

< SERVICE INFORMATION >

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.
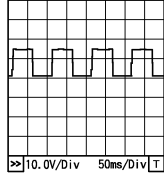
| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------------|---------------|---------------------|--|--|
| 3 | G | A/F sensor 1 heater | [Engine is running] • Warm-up condition • Idle speed (More than 140 seconds after starting engine) | Approximately 2.9 - 8.8V★  |
| 49 | W | A/F sensor 1 | [Engine is running] • Warm-up condition • Engine speed: 2,000 rpm | Approximately 1.8V Output voltage varies with air fuel ratio. |
| 53 | B | A/F sensor 1 | [Ignition switch: ON] | Approximately 2.2V |


★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnosis Procedure

INFOID:000000001702724

1. CHECK GROUND CONNECTIONS

- Turn ignition switch OFF.
- Loosen and retighten three ground screws on the body.
Refer to [EC-142. "Ground Inspection"](#).

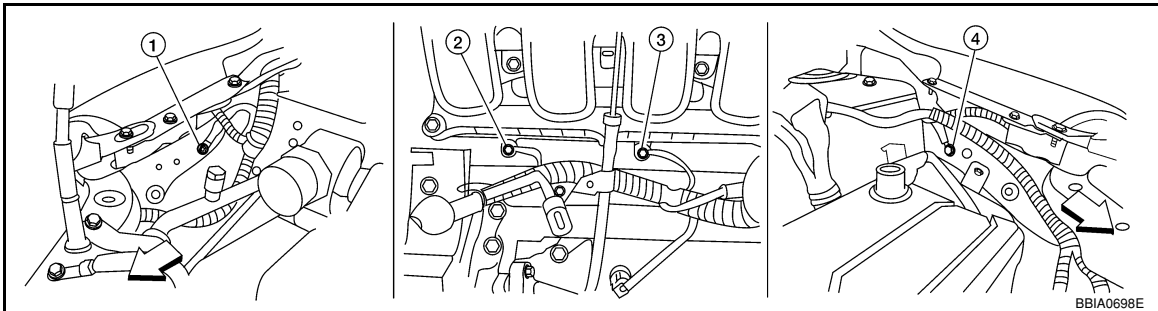

↙: Vehicle front


- Body ground E24
- Engine ground F9
- Engine ground F16
- Body ground E15

OK or NG

- OK >> GO TO 2.
NG >> Repair or replace ground connections.

2. CHECK AIR FUEL RATIO (A/F) SENSOR 1 POWER SUPPLY CIRCUIT

- Disconnect A/F sensor 1 harness connector (1).
- Turn ignition switch ON.

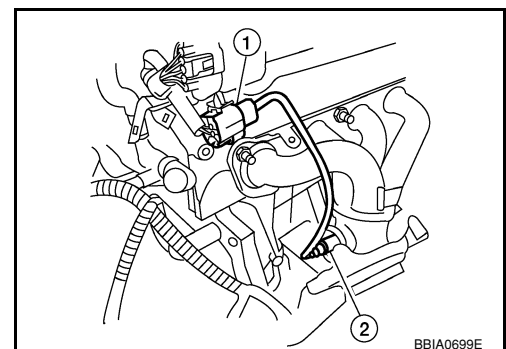

DTC P0132 A/F SENSOR 1


< SERVICE INFORMATION >

3. Check voltage between A/F sensor 1 terminal 4 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 3.

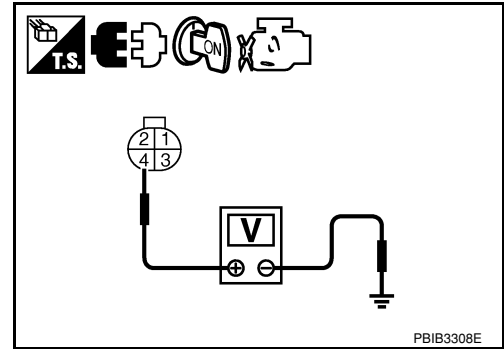

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness for open or short between A/F sensor 1 and fuse

>> Repair or replace harness or connectors.

4. CHECK A/F SENSOR 1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between the following terminals. Refer to Wiring Diagram.

| A/F sensor 1 terminal | ECM terminal |
|-----------------------|--------------|
| 1 | 49 |
| 2 | 53 |

Continuity should exist.

4. Check harness continuity between ECM terminals 49, 53 or A/F sensor 1 terminals 1, 2 and ground. Refer to Wiring Diagram.

Continuity should not exist.

5. Also check harness for short to power.

OK or NG

- OK >> GO TO 5.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK INTERMITTENT INCIDENT

Perform [EC-136](#).

OK or NG

- OK >> GO TO 6.
- NG >> Repair or replace.

6. REPLACE AIR FUEL RATIO (A/F) SENSOR 1

Replace air fuel ratio (A/F) sensor 1.

CAUTION:

- Discard any A/F sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new A/F sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

>> INSPECTION END

DTC P0132 A/F SENSOR 1

< SERVICE INFORMATION >

Removal and Installation

INFOID:000000001702725

AIR FUEL RATIO SENSOR

Refer to [EM-21](#).

DTC P0133 A/F SENSOR 1



< SERVICE INFORMATION >

DTC P0133 A/F SENSOR 1

Component Description

INFOID:000000001702726

The air fuel ratio (A/F) sensor 1 is a planar one-cell limit current sensor. The sensor element of the A/F sensor 1 is composed an electrode layer, which transports ions. It has a heater in the element. The sensor is capable of precise measurement $\lambda = 1$, but also in the lean and rich range. Together with its control electronics, the sensor outputs a clear, continuous signal throughout a wide λ range. The exhaust gas components diffuse through the diffusion layer at the sensor cell. An electrode layer is applied voltage, and this current relative oxygen density in lean. Also this current relative hydrocarbon density in rich. Therefore, the A/F sensor 1 is able to indicate air fuel ratio by this electrode layer of current. In addition, a heater is integrated in the sensor to ensure the required operating temperature of about 800°C (1,472°F).

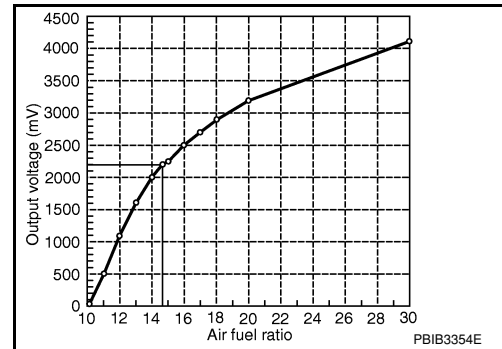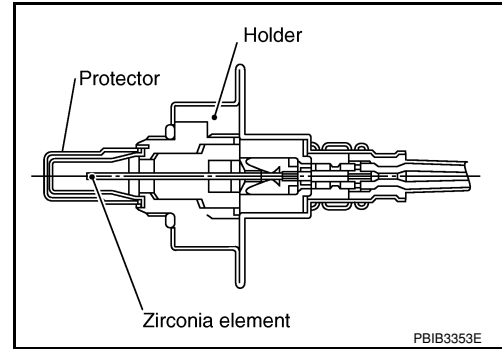

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702727

Specification data are reference values.

| MONITOR ITEM | CONDITION | | SPECIFICATION |
|---------------|----------------------------|---------------------------------------|------------------------|
| A/F SEN1 (B1) | • Engine: After warming up | Maintaining engine speed at 2,000 rpm | Fluctuates around 2.2V |

On Board Diagnosis Logic

INFOID:000000001702728

To judge the malfunction of air fuel ratio (A/F) sensor 1, this diagnosis measures response time of the A/F signal computed by ECM from the air fuel ratio (A/F) sensor 1 signal. The time is compensated by engine operating (speed and load), fuel feedback control constant, and the air fuel ratio (A/F) sensor 1 temperature index. Judgment is based on whether the compensated time (the A/F sensor 1 signal cycling time index) is inordinately long or not.

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible Cause |
|---------------|---|---|--|
| P0133 0133 | Air fuel ratio (A/F) sensor 1 circuit slow response | The response of the A/F signal computed by ECM from A/F sensor 1 signal takes more than the specified time. | <ul style="list-style-type: none"> • Harness or connectors [Air fuel ratio (A/F) sensor circuit is open or shorted.] • Air fuel ratio (A/F) sensor 1 • Air fuel ratio (A/F) sensor heater 1 • Fuel pressure • Fuel injector • Intake air leaks • Exhaust gas leaks • PCV • Mass air flow sensor |

DTC Confirmation Procedure

INFOID:000000001702729

NOTE:

DTC P0133 A/F SENSOR 1

< SERVICE INFORMATION >

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11V at idle.

WITH CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
4. Let engine idle for 1 minute.
5. Select "A/F SEN1(B1) P1278/P1279" of "A/F SEN1" in "DTC WORK SUPPORT" mode with CONSULT-II.
6. Touch "START".

If "COMPLETED" appears on CONSULT-II screen, go to step 10.

If "COMPLETED" does not appear on CONSULT-II screen, go to the following step.

| A/F SEN1 (B1) P1278/P1279 | |
|---------------------------|----------|
| OUT OF CONDITION | |
| MONITOR | |
| ENG SPEED | XXX rpm |
| B/FUEL SCHDL | XXX msec |
| COOLAN TEMP/S | XXX °C |
| VHCL SPEED SE | XXX km/h |

PBIB0756E

7. After perform the following procedure, "TESTING" will be displayed on the CONSULT-II screen.

- a. Increase the engine speed up to 4,000 to 5,000 rpm and keep it for 10 seconds.
- b. Fully release accelerator pedal and then let engine idle for about 10 seconds.

If "TESTING" is not displayed after 10 seconds, refer to [EC-127](#).

8. Wait for about 20 seconds at idle at under the condition that "TESTING" is displayed on the CONSULT-II screen.

| A/F SEN1 (B1) P1278/P1279 | |
|---------------------------|----------|
| TESTING | |
| MONITOR | |
| ENG SPEED | XXX rpm |
| B/FUEL SCHDL | XXX msec |
| COOLAN TEMP/S | XXX °C |
| VHCL SPEED SE | XXX km/h |

PBIB1925E

9. Make sure that "TESTING" changes to "COMPLETED".

If "TESTING" changed to "OUT OF CONDITION", refer to [EC-127](#).

10. Make sure that "OK" is displayed after touching "SELF-DIAG RESULT".

If "NG" is displayed, go to [EC-229, "Diagnosis Procedure"](#).

| A/F SEN1 (B1) P1278/P1279 | |
|---------------------------|--|
| COMPLETED | |

PBIB0758E

WITH GST

1. Start engine and warm it up to normal operating temperature.
2. Select Service \$01 with GST.
3. Calculate the total value of "Short term fuel trim" and "Long term fuel trim" indications.
Make sure that the total percentage should be within $\pm 15\%$.
If OK, go to the following step.
If NG, check the following.
 - Intake air leaks
 - Exhaust gas leaks
 - Incorrect fuel pressure

DTC P0133 A/F SENSOR 1

< SERVICE INFORMATION >

- Lack of fuel
 - Fuel injector
 - Incorrect PCV hose connection
 - PCV valve
 - Mass air flow sensor
4. Turn ignition switch OFF and wait at least 10 seconds.
 5. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
 6. Let engine idle for 1 minute.
 7. Increase the engine speed up to 4,000 to 5,000 rpm and keep it for 10 seconds.
 8. Fully release accelerator pedal and then let engine idle for about 1 minute.
 9. Select Service \$07 with GST.
If 1st trip DTC is detected, go to [EC-229, "Diagnosis Procedure"](#).

A

EC

C

D

E

F

G

H

I

J

K

L

M

N

O

P

DTC P0133 A/F SENSOR 1




< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001702730


EC-A/F-01

— : DETECTABLE LINE FOR DTC
 - - - : NON-DETECTABLE LINE FOR DTC

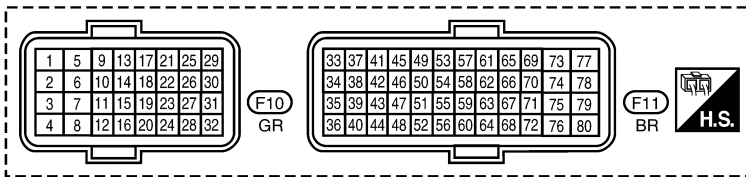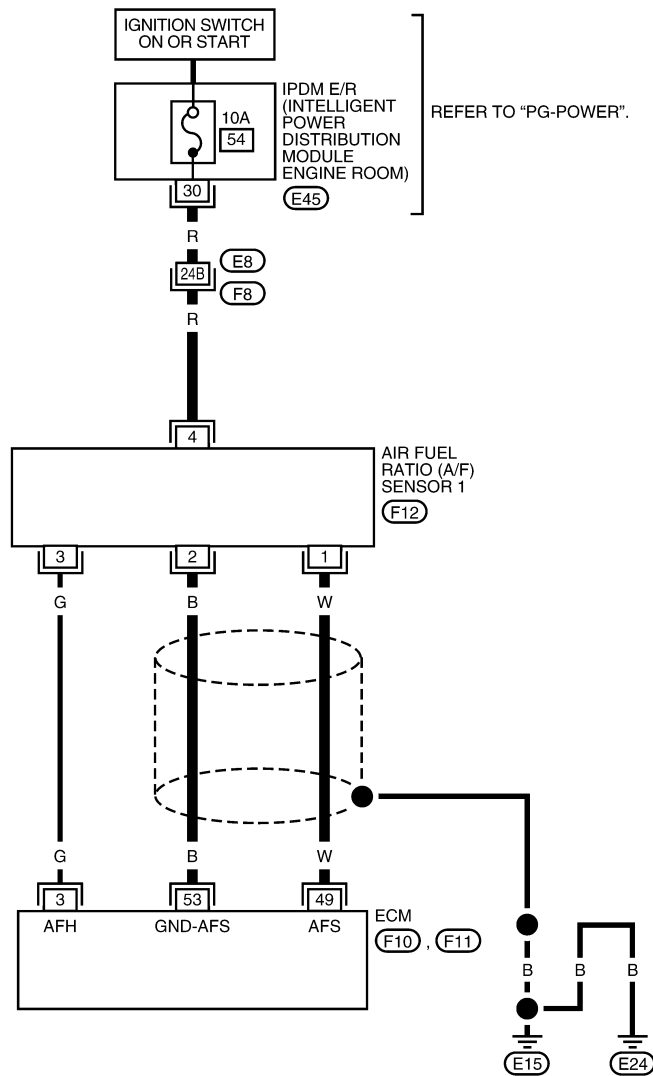

REFER TO THE FOLLOWING.

(F8) - SUPER MULTIPLE JUNCTION (SMJ)



BBWA2631E


Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.

CAUTION:

DTC P0133 A/F SENSOR 1

< SERVICE INFORMATION >

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.
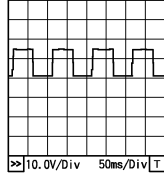
| TERMINAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|--------------|------------|---------------------|--|--|
| 3 | G | A/F sensor 1 heater | [Engine is running] • Warm-up condition • Idle speed (More than 140 seconds after starting engine) | Approximately 2.9 - 8.8V★  |
| 49 | W | A/F sensor 1 | [Engine is running] • Warm-up condition • Engine speed: 2,000 rpm | Approximately 1.8V Output voltage varies with air fuel ratio. |
| 53 | B | A/F sensor 1 | [Ignition switch: ON] | Approximately 2.2V |


★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnosis Procedure

INFOID:000000001702731

1. CHECK GROUND CONNECTIONS

- Turn ignition switch OFF.
- Loosen and retighten engine screw on the body.
Refer to [EC-142. "Ground Inspection"](#).

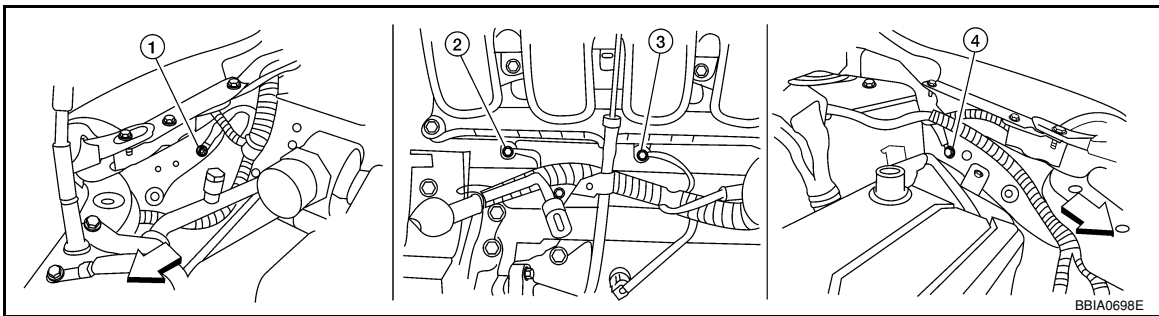

↩: Vehicle front

- Body ground E24
- Engine ground F9
- Engine ground F16
- Body ground E15

OK or NG


- OK >> GO TO 2.
 NG >> Repair or replace ground connections.

2. RETIGHTEN AIR FUEL RATIO (A/F) SENSOR 1

- Loosen and retighten the air fuel ratio (A/F) sensor 1 (2).
 • Air fuel ratio (A/F) sensor 1 harness connector (1)

Tightening torque: 50 N-m (5.1 kg-m, 37 ft-lb)

>> GO TO 3.

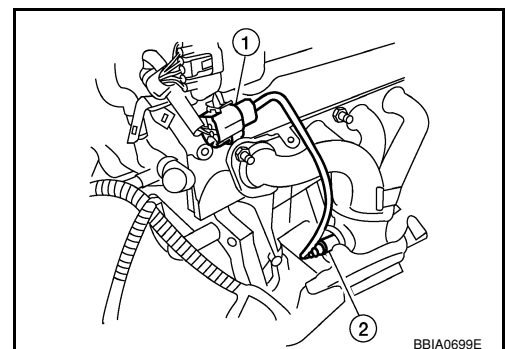


DTC P0133 A/F SENSOR 1

< SERVICE INFORMATION >

3. CHECK EXHAUST GAS LEAK

1. Start engine and run it at idle.
2. Listen for an exhaust gas leak before three way catalyst (manifold).

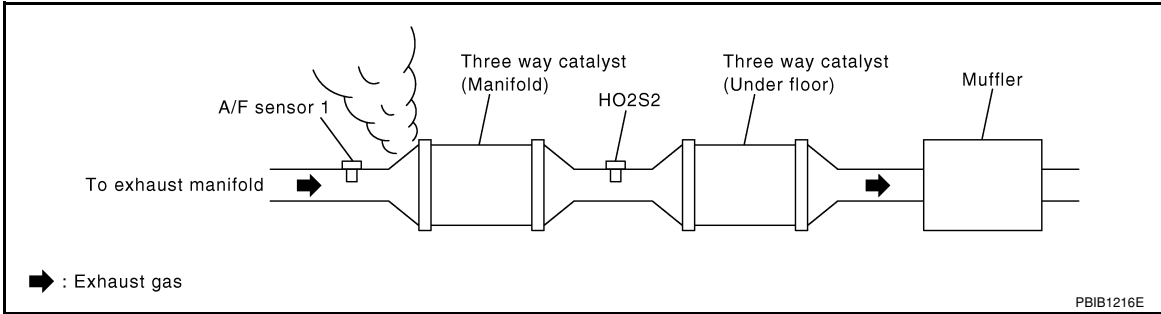

OK or NG

- OK >> GO TO 4.
- NG >> Repair or replace.

4. CHECK FOR INTAKE AIR LEAK

Listen for an intake air leak after the mass air flow sensor.


OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace.

5. CLEAR THE SELF-LEARNING DATA


Ⓜ With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select "SELF-LEARNING CONT" in "WORK SUPPORT" mode with CONSULT-II.
3. Clear the self-learning control coefficient by touching "CLEAR" or "START".
4. Run engine for at least 10 minutes at idle speed.
Is the 1st trip DTC P0171 or P0172 detected? Is it difficult to start engine?

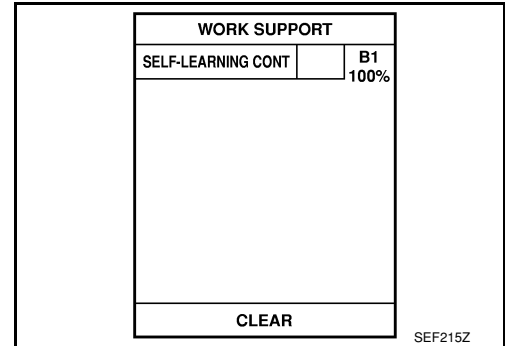

⊗ Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF.
3. Disconnect mass air flow sensor (1) harness connector, and restart and run engine for at least 5 seconds at idle speed.
4. Stop engine and reconnect mass air flow sensor harness connector.
5. Make sure DTC P0102 is displayed.
6. Erase the DTC memory. Refer to [EC-47, "Emission-related Diagnostic Information"](#).
7. Make sure DTC P0000 is displayed.
8. Run engine for at least 10 minutes at idle speed.
Is the 1st trip DTC P0171 or P0172 detected? Is it difficult to start engine?

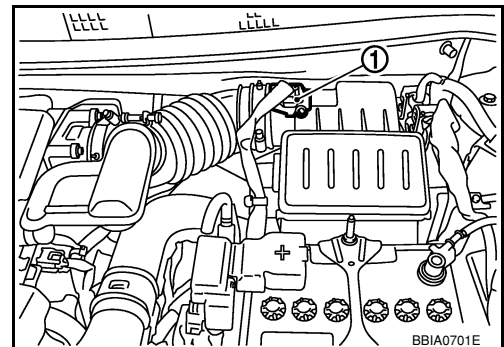

Yes or No


- Yes >> Perform trouble diagnosis for DTC P0171, P0172. Refer to [EC-257](#) or [EC-264](#).
- No >> GO TO 6.

DTC P0133 A/F SENSOR 1

< SERVICE INFORMATION >

6. CHECK AIR FUEL RATIO (A/F) SENSOR 1 POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect A/F sensor 1 harness connector (1).
 - Air fuel ratio (A/F) sensor (2)
3. Turn ignition switch ON.

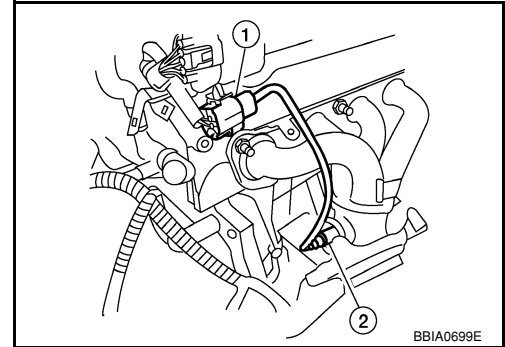


4. Check voltage between A/F sensor 1 terminal 4 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

- OK >> GO TO 8.
- NG >> GO TO 7.

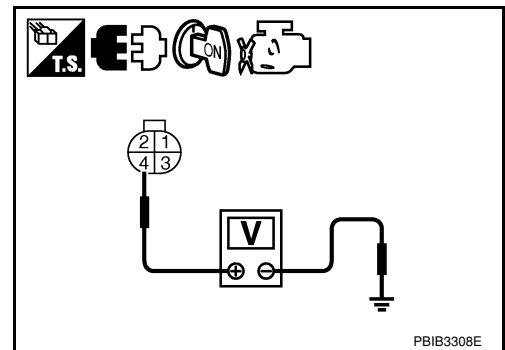

7. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness for open or short between A/F sensor 1 and fuse

>> Repair or replace harness or connectors.

8. CHECK A/F SENSOR 1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between the following terminals. Refer to Wiring Diagram.

| A/F sensor 1 terminal | ECM terminal |
|-----------------------|--------------|
| 1 | 49 |
| 2 | 53 |

Continuity should exist.

4. Check harness continuity between ECM terminals 49, 53 or A/F sensor 1 terminals 1, 2 and ground. Refer to Wiring Diagram.

Continuity should not exist.

5. Also check harness for short to power.

OK or NG

- OK >> GO TO 9.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

9. CHECK AIR FUEL RATIO (A/F) SENSOR 1 HEATER

Refer to [EC-154, "Component Inspection"](#).

OK or NG

DTC P0133 A/F SENSOR 1

< SERVICE INFORMATION >

OK >> GO TO 10.
NG >> GO TO 13.

10. CHECK MASS AIR FLOW SENSOR

Refer to [EC-173. "Component Inspection"](#).

OK or NG

OK >> GO TO 11.
NG >> Replace mass air flow sensor.

11. CHECK PCV VALVE

Refer to [EC-43. "Component Inspection"](#).

OK or NG

OK >> GO TO 12.
NG >> Repair or replace PCV valve.

12. CHECK INTERMITTENT INCIDENT

Perform [EC-136](#).

OK or NG

OK >> GO TO 13.
NG >> Repair or replace.

13. REPLACE AIR FUEL RATIO (A/F) SENSOR 1

Replace air fuel ratio (A/F) sensor 1.

CAUTION:

- Discard any A/F sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new A/F sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

>> **INSPECTION END**

Removal and Installation

INFOID:000000001702732

AIR FUEL RATIO SENSOR

Refer to [EM-21](#).

DTC P0137 HO2S2


< SERVICE INFORMATION >

DTC P0137 HO2S2

Component Description

INFOID:000000001702733

The heated oxygen sensor 2, after three way catalyst (manifold), monitors the oxygen level in the exhaust gas. Even if switching characteristics of the air fuel ratio (A/F) sensor 1 are shifted, the air/fuel ratio is controlled to stoichiometric, by the signal from the heated oxygen sensor 2. This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions. Under normal conditions the heated oxygen sensor 2 is not used for engine control operation.

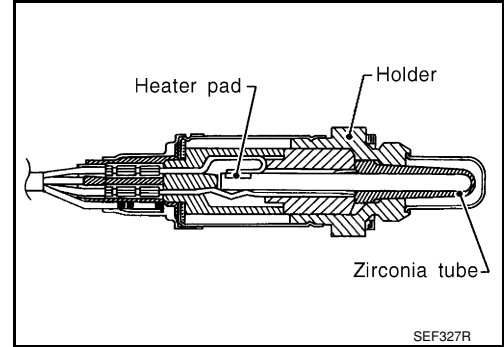

SEF327R

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702734


Specification data are reference values.

| MONITOR ITEM | CONDITION | SPECIFICATION |
|-----------------|---|-------------------------------|
| HO2S2 (B1) | <ul style="list-style-type: none"> Revsing engine from idle to 3,000 rpm quickly after the following conditions are met. Engine: After warming up Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load | 0 - 0.3V ↔ Approx. 0.6 - 1.0V |
| HO2S2 MNTR (B1) | | LEAN ↔ RICH |

On Board Diagnosis Logic

INFOID:000000001702735

The heated oxygen sensor 2 has a much longer switching time between rich and lean than the air fuel ratio (A/F) sensor 1. The oxygen storage capacity before the three way catalyst (manifold) causes the longer switching time. To judge the malfunctions of heated oxygen sensor 2, ECM monitors whether the maximum voltage of the sensor is sufficiently high during the various driving condition such as fuel-cut.

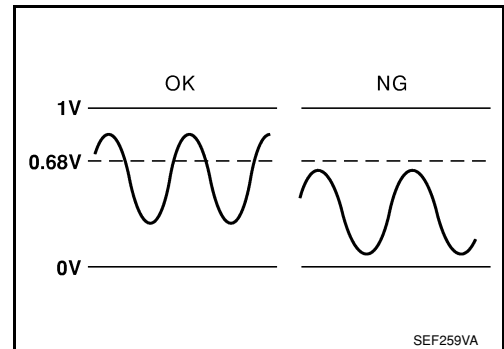

SEF259VA

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|--|--|---|
| P0137 0137 | Heated oxygen sensor 2 circuit low voltage | The maximum voltage from the sensor is not reached to the specified voltage. | <ul style="list-style-type: none"> Harness or connectors (Heated oxygen sensor 2 circuit open or shorted.) Heated oxygen sensor 2 Fuel pressure Fuel injector Intake air leaks |

DTC Confirmation Procedure

INFOID:000000001702736

NOTE:

If DTC confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

Ⓜ WITH CONSULT-II

TESTING CONDITION:

For the best results, perform DTC WORK SUPPORT at a temperature of 0 to 30°C (32 to 86°F).


DTC P0137 HO2S2

< SERVICE INFORMATION >

- Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-II.
- Start engine and warm it up to the normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- Let engine idle for 1 minute.
- Make sure that "COOLAN TEMP/S" indicates more than 70°C (158°F).
If not, warm up engine and go to next step when "COOLAN TEMP/S" indication reaches to 70°C (158°F).
- Open engine hood.
- Select "HO2S2 (B1) P1147" of "HO2S2" in "DTC WORK SUPPORT" mode with CONSULT-II.
- Start engine and following the instruction of CONSULT-II.

| DATA MONITOR | |
|---------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |
| COOLAN TEMP/S | XXX °C |

SEF174Y

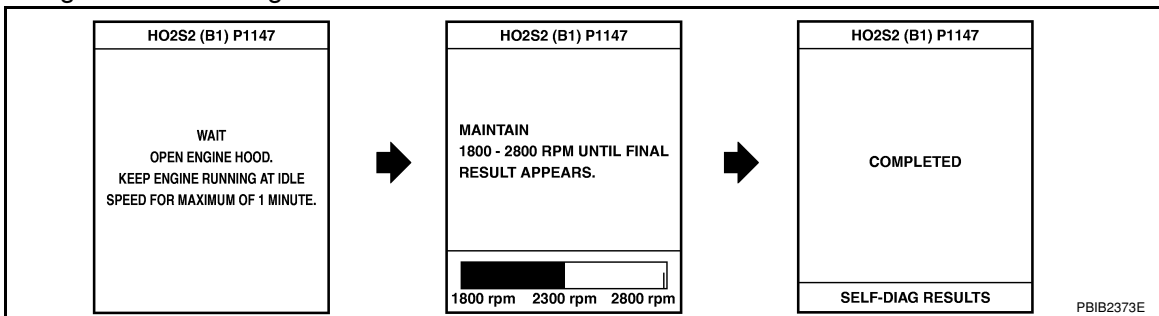

NOTE:

It will take at most 10 minutes until "COMPLETED" is displayed.

- Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS".
If "NG" is displayed, refer to [EC-236. "Diagnosis Procedure"](#).
If "CAN NOT BE DIAGNOSED" is displayed, perform the following.
 - Turn ignition switch OFF and leave the vehicle in a cool place (soak the vehicle).
 - Return to step 1.


Overall Function Check

INFOID:000000001702737

Use this procedure to check the overall function of the heated oxygen sensor 2 circuit. During this check, a 1st trip DTC might not be confirmed.

Ⓜ WITH GST

- Start engine and warm it up to the normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- Let engine idle 1 minute.
- Set voltmeter probes between ECM terminal 50 (HO2S2 signal) and ground.
- Check the voltage when revving up to 4,000 rpm under no load at least 10 times.
(Depress and release accelerator pedal as soon as possible.)
The voltage should be above 0.68V at least once during this procedure.
If the voltage can be confirmed in step 6, step 7 is not necessary.
- Keep vehicle idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in D position with OD OFF (A/T), D position (CVT) or 3rd gear position (M/T).
The voltage should be above 0.68V at least once during this procedure.

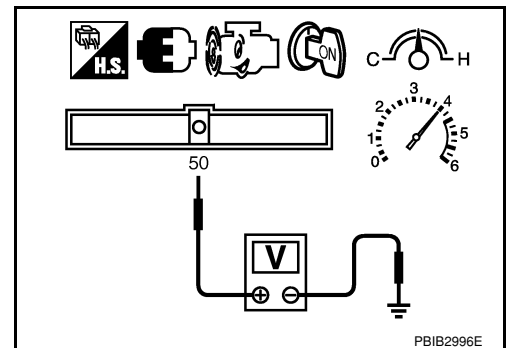

DTC P0137 HO2S2

< SERVICE INFORMATION >





8. If NG, go to [EC-236. "Diagnosis Procedure"](#).

Wiring Diagram

INFOID:000000001702738

EC-HO2S2-01

— : DETECTABLE LINE FOR DTC
 - - - : NON-DETECTABLE LINE FOR DTC

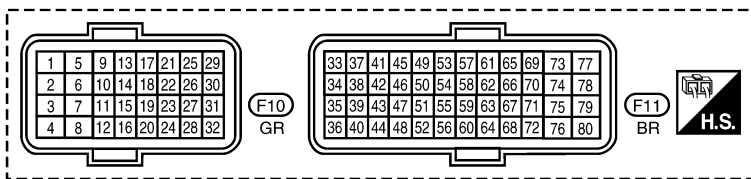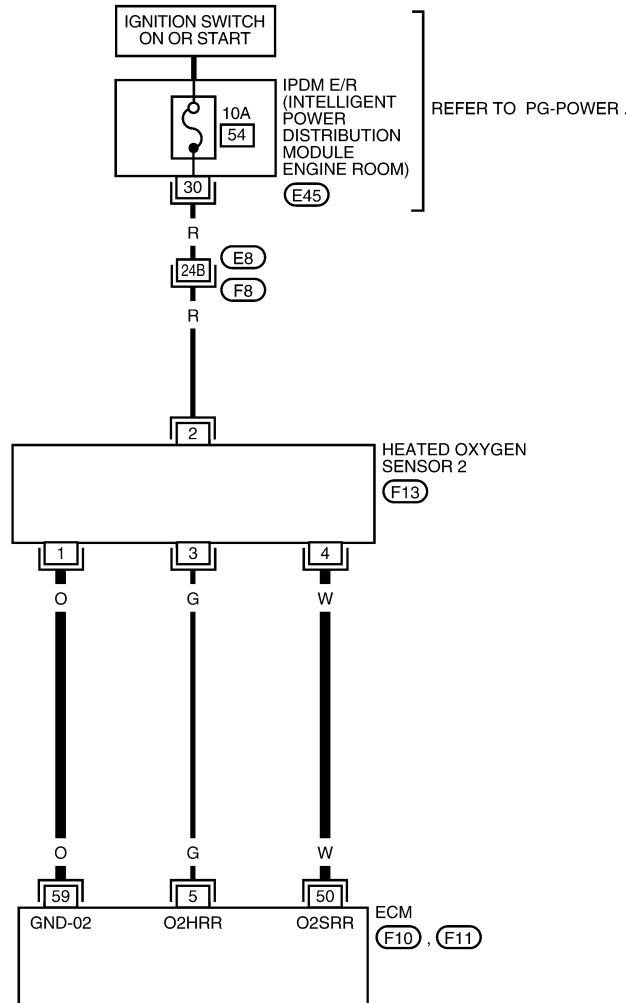

REFER TO THE FOLLOWING.
 (F8) - SUPER MULTIPLE JUNCTION (SMJ)

BBWA2629E


Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.

CAUTION:

DTC P0137 HO2S2

< SERVICE INFORMATION >

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.
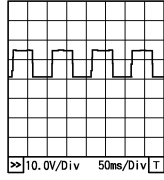
| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------------|---------------|--|--|--|
| 5 | G | Heated oxygen sensor 2 heater | [Engine is running] <ul style="list-style-type: none"> Engine speed: Below 3,600 rpm after the following conditions are met. <ul style="list-style-type: none"> - Engine: After warming up - Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load. | Approximately 10V★  PBIAB148J |
| | | | [Ignition switch: ON] <ul style="list-style-type: none"> Engine stopped [Engine is running] <ul style="list-style-type: none"> Engine speed: Above 3,600 rpm. | BATTERY VOLTAGE (11 - 14V) |
| 50 | W | Heated oxygen sensor 2 | [Engine is running] <ul style="list-style-type: none"> Revvng engine from idle to 3,000 rpm quickly after the following conditions are met. <ul style="list-style-type: none"> - Engine: After warming up - Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load. | 0 - Approximately 1.0V |
| 59 | O | Sensor ground (Heated oxygen sensor 2) | [Engine is running] <ul style="list-style-type: none"> Warm-up condition Idle speed | Approximately 0V |


★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnosis Procedure

INFOID:000000001702739

1. CHECK GROUND CONNECTIONS

- Turn ignition switch OFF.
- Loosen and retighten ground screw on the body.
Refer to [EC-142, "Ground Inspection"](#).

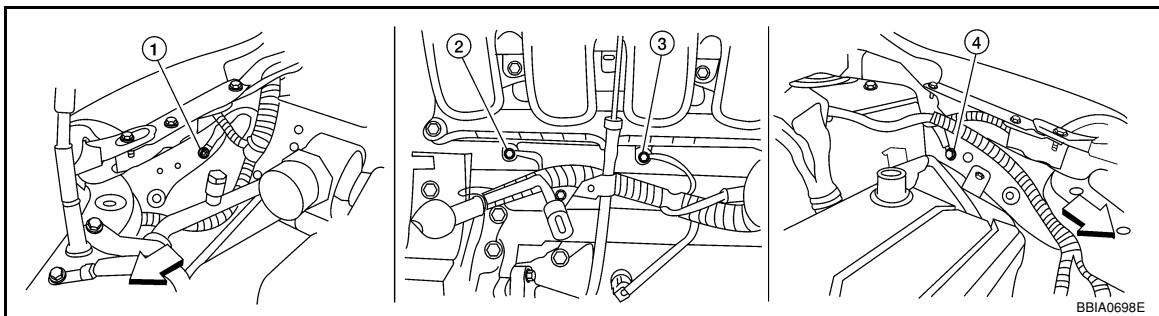

↙: Vehicle front

- Body ground E24
- Body ground E15

2. Engine ground F9

3. Engine ground F16

OK or NG

- OK >> GO TO 2.
 NG >> Repair or replace ground connections.

2. CLEAR THE SELF-LEARNING DATA


 With CONSULT-II

DTC P0137 HO2S2

< SERVICE INFORMATION >

1. Start engine and warm it up to normal operating temperature.
2. Select "SELF-LEARNING CONT" in "WORK SUPPORT" mode with CONSULT-II.
3. Clear the self-learning control coefficient by touching "CLEAR".
4. Run engine for at least 10 minutes at idle speed.


**Is the 1st trip DTC P0171 detected?
Is it difficult to start engine?**

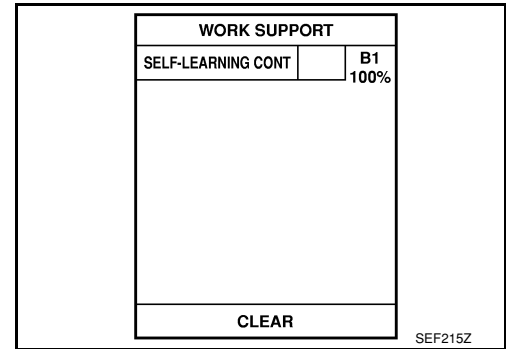

⊗ Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF.
3. Disconnect mass air flow sensor (1) harness connector, and restart and run engine for at least 5 seconds at idle speed.
4. Stop engine and reconnect mass air flow sensor harness connector.
5. Make sure DTC P0102 is displayed.
6. Erase the DTC memory. Refer to [EC-47. "Emission-related Diagnostic Information"](#).
7. Make sure DTC P0000 is displayed.
8. Run engine for at least 10 minutes at idle speed.

**Is the 1st trip DTC P0171 detected?
Is it difficult to start engine?**

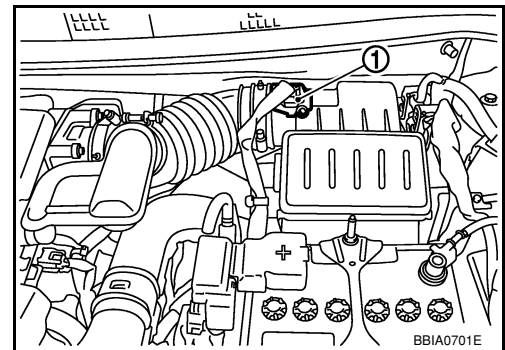

Yes or No

- Yes >> Perform trouble diagnosis for DTC P0171. Refer to [EC-257](#).
No >> GO TO 3.

3. CHECK HO2S2 GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect heated oxygen sensor 2 harness connector (2).
 - ⇐: Vehicle front
 - Heated oxygen sensor 2 (1)
3. Disconnect ECM harness connector.
4. Check harness continuity between ECM terminal 59 and HO2S2 terminal 1.
Refer to Wiring Diagram.

Continuity should exist.

5. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK HO2S2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 50 and HO2S2 terminal 4.
Refer to Wiring Diagram.

Continuity should exist.

2. Check harness continuity between ECM terminal 50 or HO2S2 terminal 4 and ground.
Refer to Wiring Diagram.

Continuity should not exist.

3. Also check harness for short to power.

DTC P0137 HO2S2

< SERVICE INFORMATION >

OK or NG

- OK >> GO TO 5.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK HEATED OXYGEN SENSOR 2

Refer to [EC-238. "Component Inspection"](#).

OK or NG

- OK >> GO TO 6.
- NG >> Replace heated oxygen sensor 2.

6. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**

Component Inspection

INFOID:000000001702740

HEATED OXYGEN SENSOR 2


Ⓟ With CONSULT-II

1. Start engine and warm it up to the normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
4. Let engine idle for 1 minute.
5. Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "HO2S2 (B1)" as the monitor item with CONSULT-II.

| ACTIVE TEST | |
|----------------|---------|
| FUEL INJECTION | 25 % |
| MONITOR | |
| ENG SPEED | XXX rpm |
| HO2S2 (B1) | XXX V |
| | |
| | |
| | |
| | |
| | |

PBIB1783E

6. Check "HO2S2 (B1)" at idle speed when adjusting "FUEL INJECTION" to $\pm 25\%$.

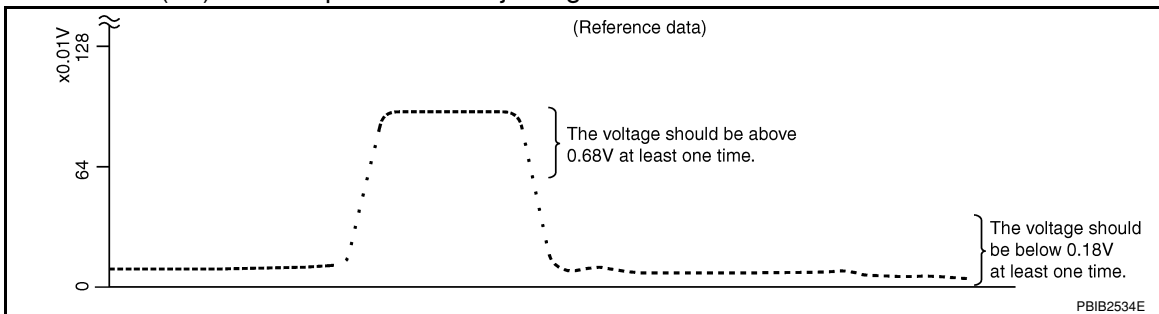

"HO2S2 (B1)" should be above 0.68V at least once when the "FUEL INJECTION" is +25%.
 "HO2S2 (B1)" should be below 0.18V at least once when the "FUEL INJECTION" is -25%.

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

ⓧ Without CONSULT-II

1. Start engine and warm it up to the normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.

DTC P0137 HO2S2

< SERVICE INFORMATION >

3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
4. Let engine idle for 1 minute.
5. Set voltmeter probes between ECM terminal 50 (HO2S2 signal) and ground.
6. Check the voltage when revving up to 4,000 rpm under no load at least 10 times.

(Depress and release accelerator pedal as soon as possible.)

The voltage should be above 0.68V at least once during this procedure.

If the voltage is above 0.68V at step 6, step 7 is not necessary.


7. Keep vehicle idling for 10 minutes, then check voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in D position with OD OFF (A/T), D position (CVT) or 3rd gear position (M/T).

The voltage should be below 0.18V at least once during this procedure.

8. If NG, replace heated oxygen sensor 2.

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

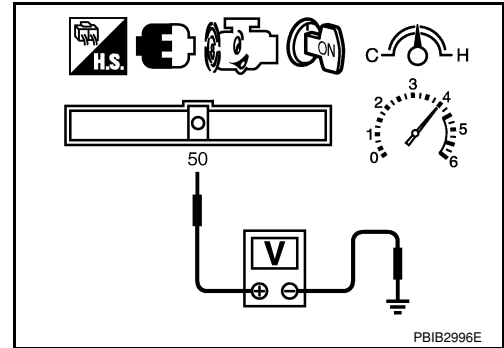

Removal and Installation

INFOID:000000001702741

HEATED OXYGEN SENSOR 2

Refer to [EM-21](#).

DTC P0138 HO2S2

< SERVICE INFORMATION >

DTC P0138 HO2S2

Component Description


INFOID:000000001702742

The heated oxygen sensor 2, after three way catalyst (manifold), monitors the oxygen level in the exhaust gas.

Even if switching characteristics of the air fuel ratio (A/F) sensor 1 are shifted, the air/fuel ratio is controlled to stoichiometric, by the signal from the heated oxygen sensor 2.

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions.

Under normal conditions the heated oxygen sensor 2 is not used for engine control operation.

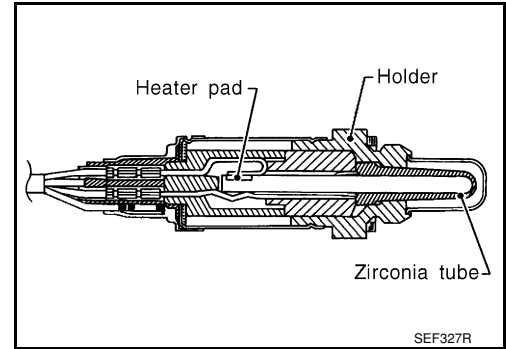

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702743

Specification data are reference values.

| MONITOR ITEM | CONDITION | SPECIFICATION |
|-----------------|--|--------------------------------|
| HO2S2 (B1) | <ul style="list-style-type: none"> Revvng engine from idle to 3,000 rpm quickly after the following conditions are met. Engine: After warming up Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load | 0 - 0.3V ←→ Approx. 0.6 - 1.0V |
| HO2S2 MNTR (B1) | | LEAN ←→ RICH |


On Board Diagnosis Logic

INFOID:000000001702744

The heated oxygen sensor 2 has a much longer switching time between rich and lean than the air fuel ratio (A/F) sensor 1. The oxygen storage capacity before the three way catalyst (manifold) causes the longer switching time.


MALFUNCTION A

To judge the malfunctions of rear heated oxygen sensor 2, ECM monitors whether the voltage is unusually high during the various driving condition such as fuel-cut.

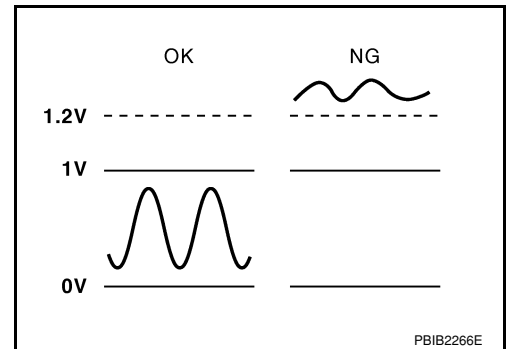

MALFUNCTION B

To judge the malfunctions of heated oxygen sensor 2, ECM monitors whether the minimum voltage of sensor is sufficiently low during the various driving condition such as fuel-cut.

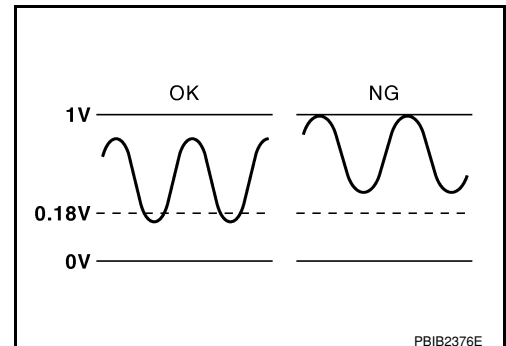

DTC P0138 HO2S2

< SERVICE INFORMATION >

| DTC No. | Trouble diagnosis name | DTC detecting condition | | Possible cause |
|---------------|--|-------------------------|--|--|
| P0138 0138 | Heated oxygen sensor 2 circuit high voltage | A) | An excessively high voltage from the sensor is sent to ECM. | <ul style="list-style-type: none"> • Harness or connectors (Heated oxygen sensor 2 circuit is open or shorted.) • Heated oxygen sensor 2 |
| | | B) | The minimum voltage from the sensor is not reached to the specified voltage. | <ul style="list-style-type: none"> • Harness or connectors (Heated oxygen sensor circuit is open or shorted.) • Heated oxygen sensor 2 • Fuel pressure • Fuel injector |

DTC Confirmation Procedure

INFOID:000000001702745

Perform PROCEDURE FOR MALFUNCTION A first.

If DTC cannot be confirmed, perform PROCEDURE FOR MALFUNCTION B.

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

PROCEDURE FOR MALFUNCTION A

④ With CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-II.
2. Start engine and warm it up to the normal operating temperature.
3. Turn ignition switch OFF and wait at least 10 seconds.
4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
5. Let engine idle for 2 minutes.
6. If 1st trip DTC is detected, go to [EC-244. "Diagnosis Procedure"](#).

| DATA MONITOR | |
|---------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |
| COOLAN TEMP/S | XXX °C |

SEF174Y

④ With GST

Follow the procedure "With CONSULT-II" above.

PROCEDURE FOR MALFUNCTION B

④ With CONSULT-II

TESTING CONDITION:

For the best results, perform DTC WORK SUPPORT at a temperature of 0 to 30°C (32 to 86°F).

1. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-II
2. Start engine and warm it up to the normal operating temperature.
3. Turn ignition switch OFF and wait at least 10 seconds.
4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
5. Let engine idle for 1 minute.
6. Make sure that "COOLAN TEMP/S" indicates more than 70°C (158°F).
If not, warm up engine and go to next step when "COOLAN TEMP/S" indication reaches to 70°C (158°F).


| DATA MONITOR | |
|---------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |
| COOLAN TEMP/S | XXX °C |

SEF174Y

DTC P0138 HO2S2

< SERVICE INFORMATION >

- Open engine hood.
- Select "HO2S2 (B1) P1146" of "HO2S2" in "DTC WORK SUPPORT" mode with CONSULT-II.
- Start engine and following the instruction of COSULT-II.

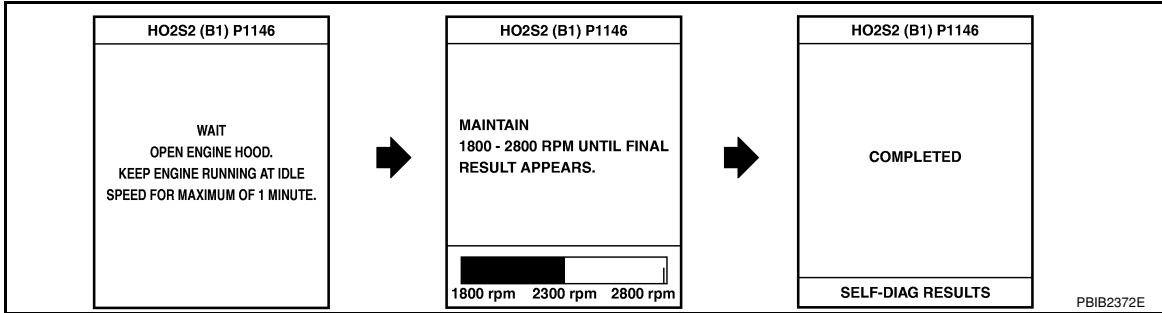

NOTE:

It will take at most 10 minutes until "COMPLETED" is displayed.

- Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS".
If "NG" is displayed, refer to [EC-244. "Diagnosis Procedure"](#).
If "CAN NOT BE DIAGNOSED" is displayed, perform the following.
 - Turn ignition switch OFF and leave the vehicle in a cool place (soak the vehicle).
 - Return to step 1.

Overall Function Check


INFOID:000000001702746

PROCEDURE FOR MALFUNCTION B

Use this procedure to check the overall function of the heated oxygen sensor 2 circuit. During this check, a 1st trip DTC might not be confirmed.

⑤ With GST

- Start engine and warm it up to the normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- Let engine idle 1 minute.
- Set voltmeter probes between ECM terminal 50 (HO2S2 signal) and ground.
- Check the voltage when revving up to 4,000 rpm under no load at least 10 times.
(Depress and release accelerator pedal as soon as possible.)
The voltage should be below 0.18V at least once during this procedure.
If the voltage can be confirmed in step 6, step 7 is not necessary.
- Keep vehicle at idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in D position with OD OFF (A/T), D position (CVT) or 3rd gear position (M/T).
The voltage should be below 0.18V at least once during this procedure.
- If NG, go to [EC-244. "Diagnosis Procedure"](#).

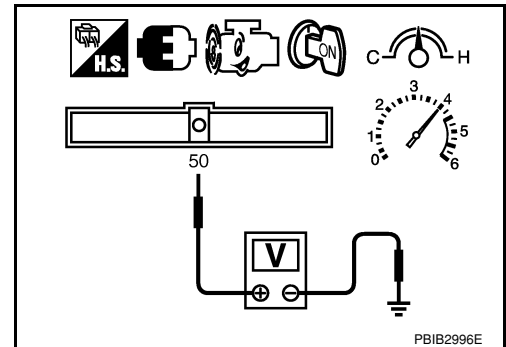

DTC P0138 HO2S2




< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001702747

EC-HO2S2-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

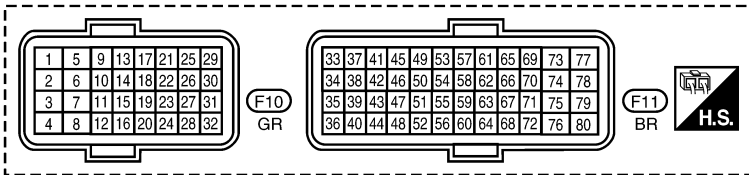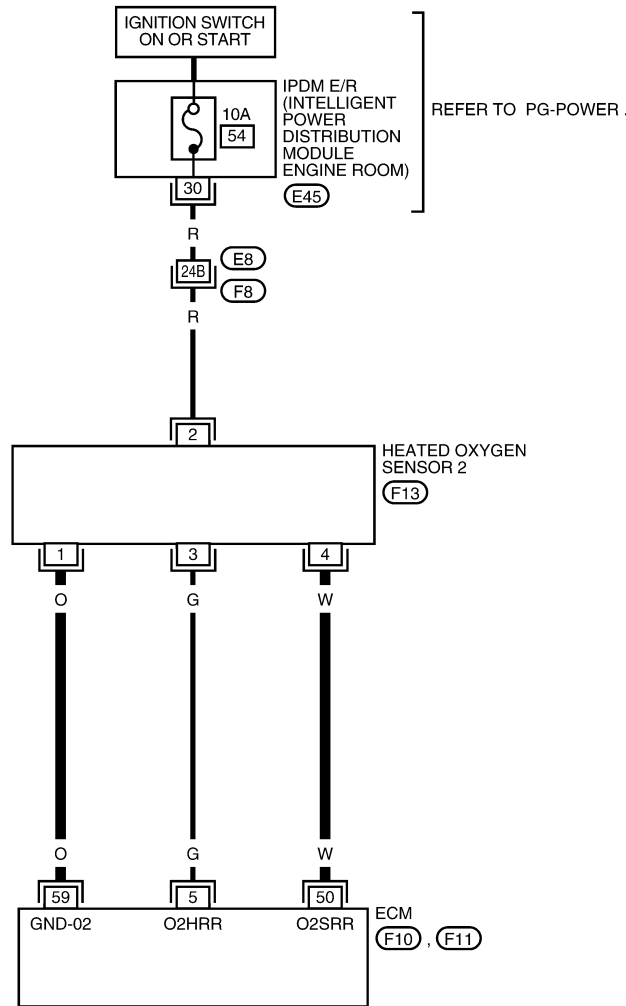

REFER TO THE FOLLOWING.
 (FB) - SUPER MULTIPLE JUNCTION (SMJ)



BBWA2629E

Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.

CAUTION:

DTC P0138 HO2S2

< SERVICE INFORMATION >

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------------|---------------|---|--|--|
| 5 | G | Heated oxygen sensor 2 heater | [Engine is running] <ul style="list-style-type: none"> Engine speed: Below 3,600 rpm after the following conditions are met. <ul style="list-style-type: none"> - Engine: After warming up - Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load. | Approximately 10V★ <small>PBIA8148J</small> |
| | | | [Ignition switch: ON] <ul style="list-style-type: none"> Engine stopped [Engine is running] <ul style="list-style-type: none"> Engine speed: Above 3,600 rpm. | BATTERY VOLTAGE (11 - 14V) |
| 50 | W | Heated oxygen sensor 2 | [Engine is running] <ul style="list-style-type: none"> Revvng engine from idle to 3,000 rpm quickly after the following conditions are met. <ul style="list-style-type: none"> - Engine: After warming up - Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load. | 0 - Approximately 1.0V |
| 59 | O | Sensor ground (Heated oxygen sensor 2) | [Engine is running] <ul style="list-style-type: none"> Warm-up condition Idle speed | Approximately 0V |

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)


Diagnosis Procedure

INFOID:000000001702748

PROCEDURE FOR MALFUNCTION A

1. CHECK GROUND CONNECTIONS

- Turn ignition switch OFF.
- Loosen and retighten engine screw on the body.
Refer to [EC-142, "Ground Inspection"](#).

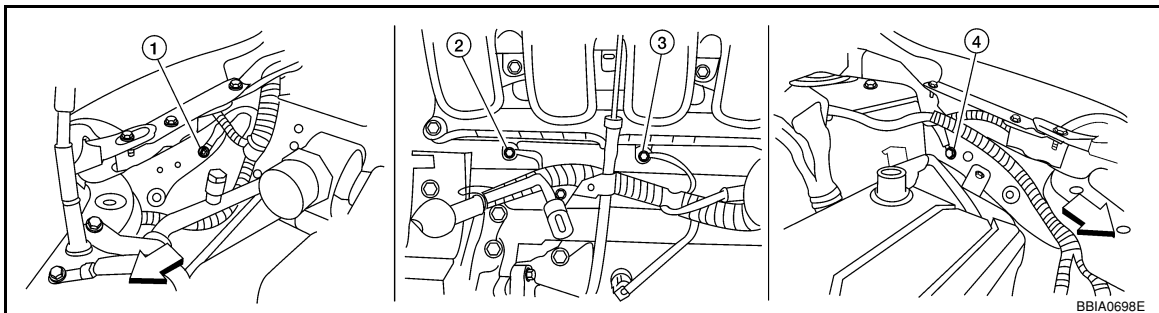

↶ Vehicle front

- body ground E24
- Body ground E15

2. Engine ground F9

3. Engine ground F16

OK or NG


- OK >> GO TO 2.
 NG >> Repair or replace ground connections.

DTC P0138 HO2S2

< SERVICE INFORMATION >

2. CHECK HO2S2 GROUND CIRCUIT FOR OPEN AND SHORT

1. Disconnect heated oxygen sensor 2 harness connector (2).
 - ⇐: Vehicle front
 - Heated oxygen sensor 2 (1)
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 59 and HO2S2 terminal 1. Refer to Wiring Diagram.

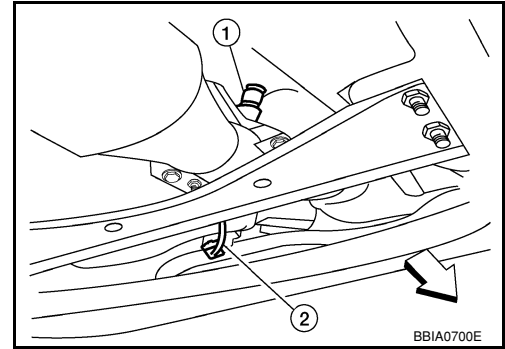

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 3.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

3. CHECK HO2S2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 50 and HO2S2 terminal 4. Refer to Wiring Diagram.

Continuity should exist.

2. Check harness continuity between ECM terminal 50 or HO2S2 terminal 4 and ground. Refer to Wiring Diagram.

Continuity should not exist.

3. Also check harness for short to power.

OK or NG

OK >> GO TO 4.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK HO2S2 CONNECTOR FOR WATER

Check connectors for water.

Water should not exist.

OK or NG

OK >> GO TO 5.

NG >> Repair or replace harness or connectors.

5. CHECK HEATED OXYGEN SENSOR 2

Refer to [EC-247, "Component Inspection"](#).

OK or NG

OK >> GO TO 6.

NG >> Replace heated oxygen sensor 2.

6. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**


PROCEDURE FOR MALFUNCTION B

1. CHECK GROUND CONNECTIONS

1. Turn ignition switch OFF.
2. Loosen and retighten engine screw on the body. Refer to [EC-142, "Ground Inspection"](#).

DTC P0138 HO2S2

< SERVICE INFORMATION >

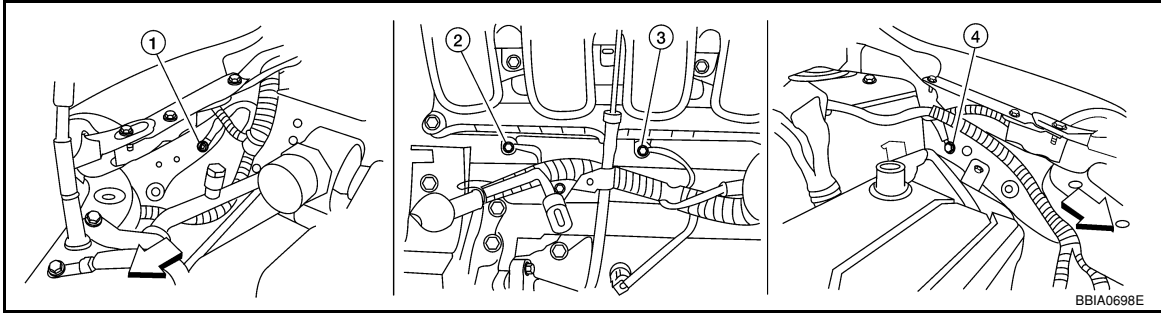

↶: Vehicle front

1. Body ground E24

2. Engine ground F9

3. Engine ground F16

4. Body ground E15

OK or NG

OK >> GO TO 2.


NG >> Repair or replace ground connections.

2. CLEAR THE SELF-LEARNING DATA

📄 With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select "SELF-LEARNING CONT" in "WORK SUPPORT" mode with CONSULT-II.
3. Clear the self-learning control coefficient by touching "CLEAR".
4. Run engine for at least 10 minutes at idle speed.


**Is the 1st trip DTC P0172 detected?
Is it difficult to start engine?**

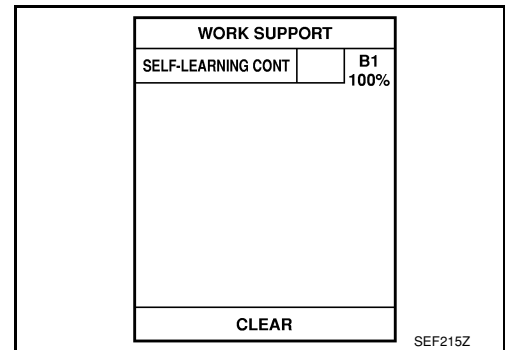

⊗ Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF.
3. Disconnect mass air flow sensor (1) harness connector, and restart and run engine for at least 5 seconds at idle speed.
4. Stop engine and reconnect mass air flow sensor harness connector.
5. Make sure that DTC P0102 is displayed.
6. Erase the DTC memory. Refer to [EC-47. "Emission-related Diagnostic Information"](#).
7. Make sure that DTC P0000 is displayed.
8. Run engine for at least 10 minutes at idle speed.

**Is the 1st trip DTC P0172 detected?
Is it difficult to start engine?**

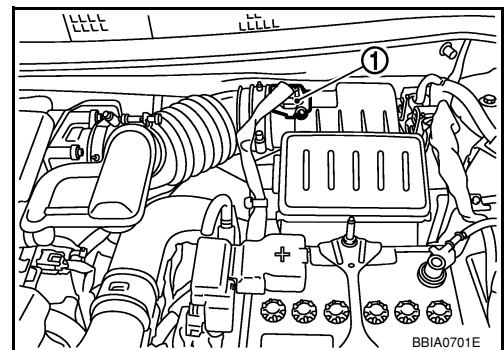

Yes or No

Yes >> Perform trouble diagnosis for DTC P0172. Refer to [EC-264](#).

No >> GO TO 3.


3. CHECK HO2S2 GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.

DTC P0138 HO2S2

< SERVICE INFORMATION >

2. Disconnect heated oxygen sensor 2 harness connector (2).
 - ⇐: Vehicle front
 - Heated oxygen sensor 2 (1)
3. Disconnect ECM harness connector.
4. Check harness continuity between ECM terminal 59 and HO2S2 terminal 1. Refer to Wiring Diagram.

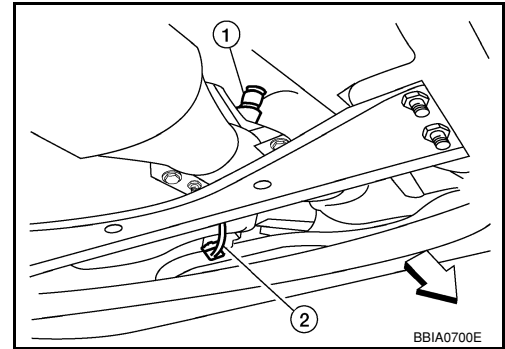

Continuity should exist.

5. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK HO2S2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 50 and HO2S2 terminal 4. Refer to Wiring Diagram.

Continuity should exist.

2. Check harness continuity between ECM terminal 50 or HO2S2 terminal 4 and ground. Refer to Wiring Diagram.

Continuity should not exist.

3. Also check harness for short to power.

OK or NG

OK >> GO TO 5.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK HEATED OXYGEN SENSOR 2

Refer to [EC-247. "Component Inspection"](#).

OK or NG

OK >> GO TO 6.

NG >> Replace heated oxygen sensor 2.

6. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**

Component Inspection

INFOID:000000001702749

HEATED OXYGEN SENSOR 2

④ With CONSULT-II

1. Start engine and warm it up to the normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
4. Let engine idle for 1 minute.

DTC P0138 HO2S2


< SERVICE INFORMATION >

- Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "HO2S2 (B1)" as the monitor item with CONSULT-II.

| ACTIVE TEST | |
|----------------|---------|
| FUEL INJECTION | 25 % |
| MONITOR | |
| ENG SPEED | XXX rpm |
| HO2S2 (B1) | XXX V |
| | |
| | |
| | |
| | |
| | |

PBIB1783E

- Check "HO2S2 (B1)" at idle speed when adjusting "FUEL INJECTION" to $\pm 25\%$.

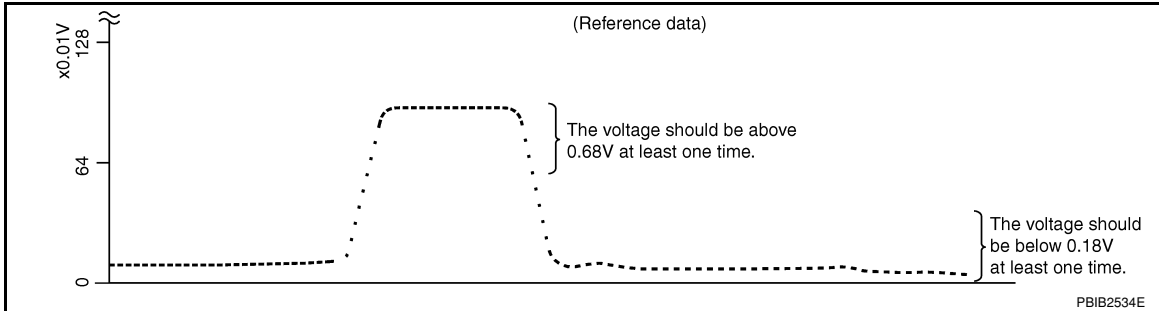

"HO2S2 (B1)" should be above 0.68V at least once when the "FUEL INJECTION" is +25%.

"HO2S2 (B1)" should be below 0.18V at least once when the "FUEL INJECTION" is -25%.

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

⊗ Without CONSULT-II

- Start engine and warm it up to the normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- Let engine idle for 1 minute.
- Set voltmeter probes between ECM terminal 50 (HO2S2 signal) and ground.


- Check the voltage when revving up to 4,000 rpm under no load at least 10 times.

(Depress and release accelerator pedal as soon as possible.)

The voltage should be above 0.68V at least once during this procedure.

If the voltage is above 0.68V at step 6, step 7 is not necessary.

- Keep vehicle idling for 10 minutes, then check voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in D position with OD OFF (A/T), D position (CVT) or 3rd gear position (M/T). **The voltage should be below 0.18V at least once during this procedure.**

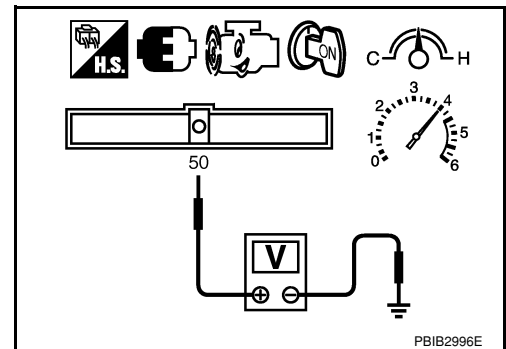

- If NG, replace heated oxygen sensor 2.

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

Removal and Installation

INFOID:000000001702750

HEATED OXYGEN SENSOR 2

DTC P0138 HO2S2

< SERVICE INFORMATION >

Refer to [EM-21](#).

A

EC

C

D

E

F

G

H

I

J

K

L

M

N

O

P

DTC P0139 HO2S2

< SERVICE INFORMATION >

DTC P0139 HO2S2

Component Description


INFOID:000000001702751

The heated oxygen sensor 2, after three way catalyst (manifold), monitors the oxygen level in the exhaust gas.

Even if switching characteristics of the air fuel ratio (A/F) sensor 1 are shifted, the air/fuel ratio is controlled to stoichiometric, by the signal from the heated oxygen sensor 2.

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1V in richer conditions to 0V in leaner conditions.

Under normal conditions the heated oxygen sensor 2 is not used for engine control operation.

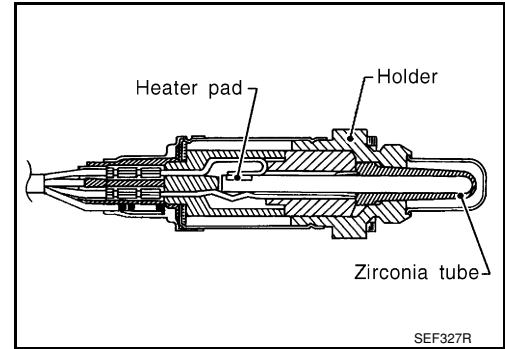

SEF327R

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702752


Specification data are reference values.

| MONITOR ITEM | CONDITION | SPECIFICATION |
|-----------------|---|-------------------------------|
| HO2S2 (B1) | <ul style="list-style-type: none"> • Revving engine from idle to 3,000 rpm quickly after the following conditions are met. - Engine: After warming up - Keep the engine speed between 3,500 rpm and 4,000 rpm for 1 minute and idle for 1 minute under no load | 0 - 0.3V ↔ Approx. 0.6 - 1.0V |
| HO2S2 MNTR (B1) | | LEAN ↔ RICH |

On Board Diagnosis Logic

INFOID:000000001702753

The heated oxygen sensor 2 has a much longer switching time between rich and lean than the air fuel ratio (A/F) sensor 1. The oxygen storage capacity before the three way catalyst (manifold) causes the longer switching time. To judge the malfunctions of heated oxygen sensor 2, ECM monitors whether the switching response of the sensor's voltage is faster than specified during the various driving condition such as fuel-cut.

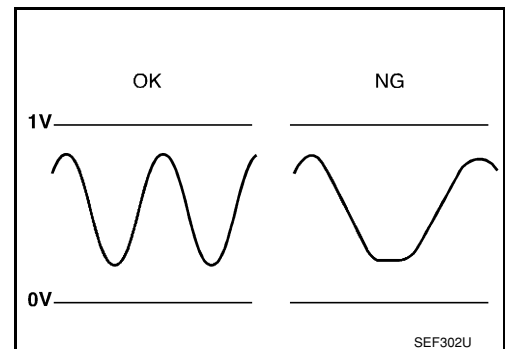

SEF302U

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|--|---|--|
| P0139 0139 | Heated oxygen sensor 2 circuit slow response | It takes more time for the sensor to respond between rich and lean than the specified time. | <ul style="list-style-type: none"> • Harness or connectors (Heated oxygen sensor circuit is open or shorted.) • Heated oxygen sensor 2 • Fuel pressure • Fuel injector • Intake air leaks |

DTC Confirmation Procedure

INFOID:000000001702754

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

Ⓜ WITH CONSULT-II

TESTING CONDITION:

For better results, perform "DTC WORK SUPPORT" at a temperature of 0 to 30 °C (32 to 86 °F).

DTC P0139 HO2S2


< SERVICE INFORMATION >

- Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-II.
- Start engine and warm it up to the normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- Let engine idle for 1 minute.
- Make sure that "COOLAN TEMP/S" indicates more than 70°C (158°F).
If not, warm up engine and go to next step when "COOLAN TEMP/S" indication reaches to 70°C (158°F).

| DATA MONITOR | |
|---------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |
| COOLAN TEMP/S | XXX °C |

SEF174Y

- Select "HO2S2 (B1) P0139" of "HO2S2" in "DTC WORK SUPPORT" mode with CONSULT-II.
- Start engine and following the instruction of CONSULT-II.

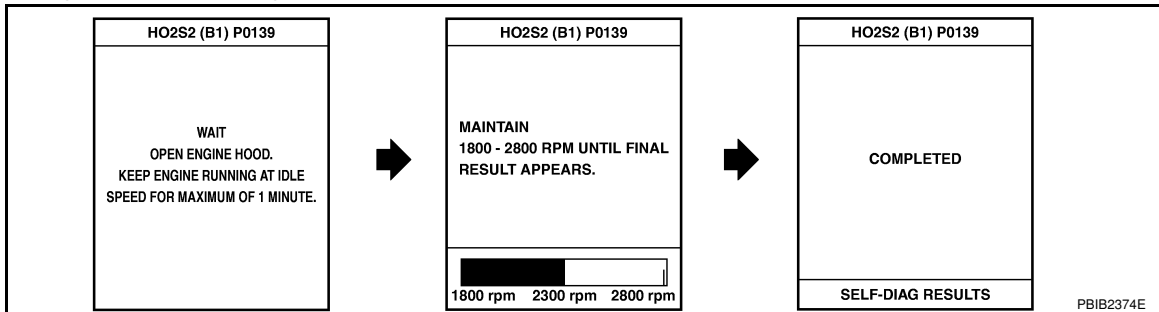

NOTE:

It will take at most 10 minutes until "COMPLETED" is displayed.

- Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS".
If "NG" is displayed, refer to [EC-253, "Diagnosis Procedure"](#).
If "CAN NOT BE DIAGNOSED" is displayed, perform the following.
 - Turn ignition switch OFF and leave the vehicle in a cool place (soak the vehicle).
 - Return to step 1.

Overall Function Check

INFOID:000000001702755

Use this procedure to check the overall function of the heated oxygen sensor 2 circuit. During this check, a 1st trip DTC might not be confirmed.

WITH GST

- Start engine and warm it up to the normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- Start engine and keep the engine between 3,500 and 4,000 rpm for at least 1 minute under no load.
- Let engine idle for 1 minute.
- Set voltmeter probes between ECM terminal 50 (HO2S2 signal) and ground.
- Check the voltage when revving up to 4,000 rpm under no load at least 10 times.

(Depress and release accelerator pedal as soon as possible.)


A change of voltage should be more than 0.24V for 1 second during this procedure.

If the voltage can be confirmed in step 6, step 7 is not necessary.

- Keep vehicle at idling for 10 minutes, then check the voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in D position with OD OFF (A/T), D position (CVT) or 3rd gear position (M/T).

A change of voltage should be more than 0.06V for 1 second during this procedure.

- If NG, go to [EC-253, "Diagnosis Procedure"](#).

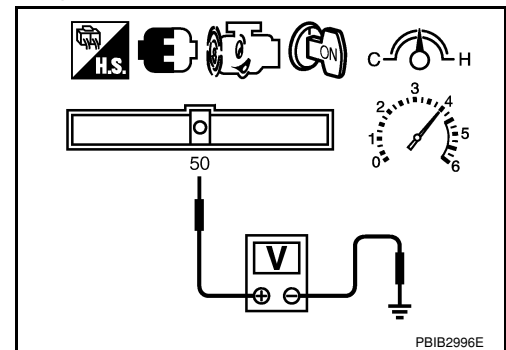

DTC P0139 HO2S2



< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001702756

EC-HO2S2-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

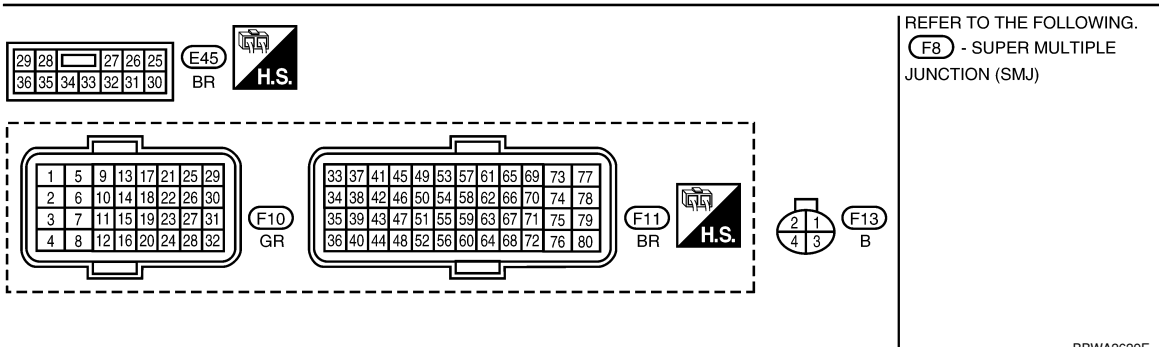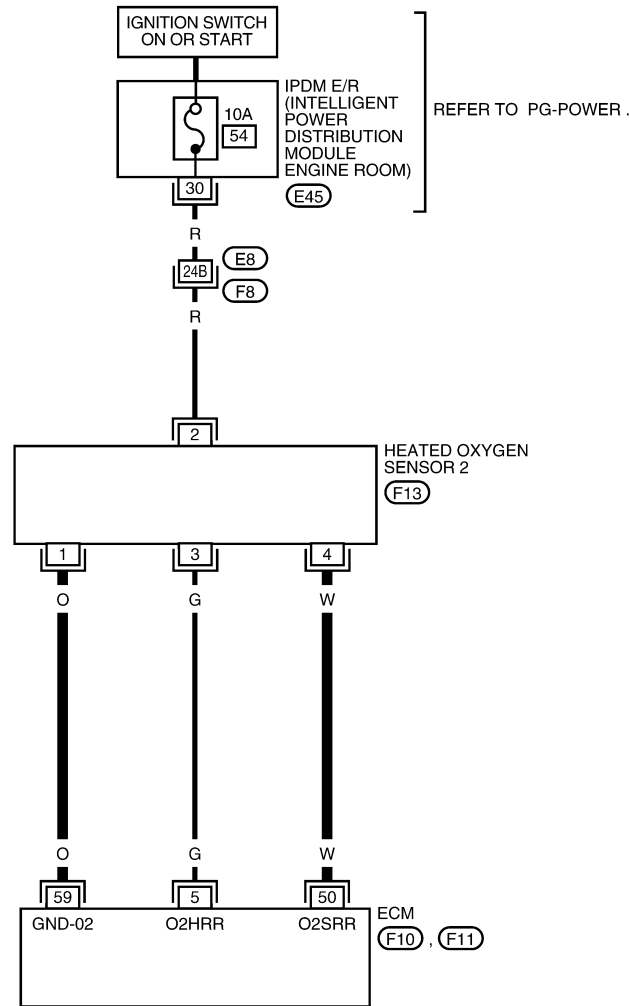

BBWA2629E


Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.

CAUTION:

DTC P0139 HO2S2

< SERVICE INFORMATION >

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.
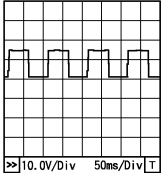
| TERMI-NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|---------------|------------|--|--|---|
| 5 | G | Heated oxygen sensor 2 heater | [Engine is running] <ul style="list-style-type: none"> Below 3,600 rpm after the following conditions are met. <ul style="list-style-type: none"> - Engine: After warming up - Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load | Approximately 10V★  PBI A8148J |
| | | | [Ignition switch: ON] <ul style="list-style-type: none"> Engine stopped [Engine is running] <ul style="list-style-type: none"> Engine speed: Above 3,600 rpm | BATTERY VOLTAGE (11 - 14V) |
| 50 | W | Heated oxygen sensor 2 | [Engine is running] <ul style="list-style-type: none"> Revvng engine from idle to 3,000 rpm quickly after the following conditions are met. <ul style="list-style-type: none"> - Engine: After warming up - Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load. | 0 - Approximately 1.0V |
| 59 | O | Sensor ground (Heated oxygen sensor 2) | [Engine is running] <ul style="list-style-type: none"> Warm-up condition Idle speed | Approximately 0V |


★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnosis Procedure

INFOID:000000001702757

1. CHECK GROUND CONNECTIONS

- Turn ignition switch OFF.
- Loosen and retighten ground screw on the body.
Refer to [EC-142, "Ground Inspection"](#).

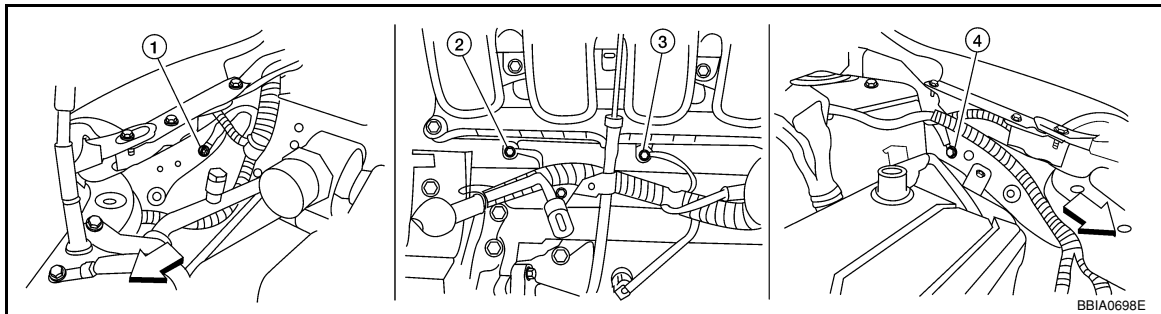

↶ Vehicle front

- Body ground E24
- Engine ground F9
- Engine ground F16
- Body ground E15

OK or NG

- OK >> GO TO 2.
 NG >> Repair or replace ground connections.


2. CLEAR THE SELF-LEARNING DATA

 With CONSULT-II

DTC P0139 HO2S2


< SERVICE INFORMATION >

1. Start engine and warm it up to normal operating temperature.
2. Select "SELF-LEARNING CONT" in "WORK SUPPORT" mode with CONSULT-II.
3. Clear the self-learning control coefficient by touching "CLEAR".
4. Run engine for at least 10 minutes at idle speed.
Is the 1st trip DTC P0171 or P0172 detected?
Is it difficult to start engine?

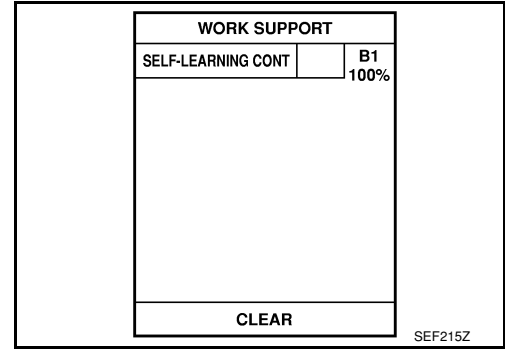

⊗ Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF.
3. Disconnect mass air flow sensor (1) harness connector, and restart and run engine for at least 5 seconds at idle speed.
4. Stop engine and reconnect mass air flow sensor harness connector.
5. Make sure that DTC P0102 is displayed.
6. Erase the DTC memory. Refer to [EC-47. "Emission-related Diagnostic Information"](#).
7. Make sure that DTC P0000 is displayed.
8. Run engine for at least 10 minutes at idle speed.
Is the 1st trip DTC P0171 or P0172 detected?
Is it difficult to start engine?

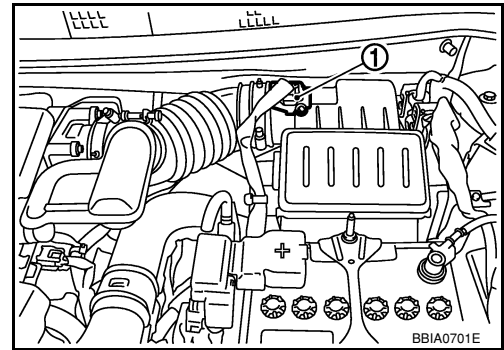

Yes or No

- Yes >> Perform trouble diagnosis for DTC P0171 or P0172. Refer to [EC-257](#) or [EC-264](#).
No >> GO TO 3.

3. CHECK HO2S2 GROUND CIRCUIT FOR OPEN AND SHORT


1. Turn ignition switch OFF.
2. Disconnect heated oxygen sensor 2 harness connector (2).
 - ⇐: Vehicle front
 - Heated oxygen sensor 2 (1)
3. Disconnect ECM harness connector.
4. Check harness continuity between HO2S2 terminal 1 and ECM terminal 59. Refer to Wiring Diagram.

Continuity should exist.

5. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

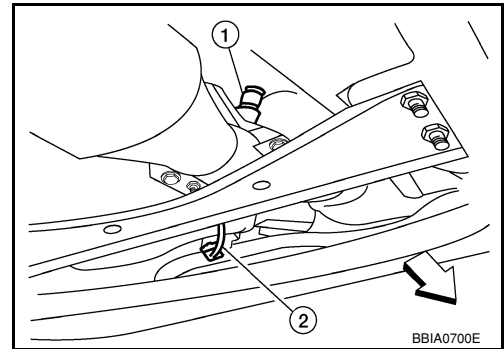

4. CHECK HO2S2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between HO2S2 terminal 4 and ECM terminal 50. Refer to Wiring Diagram.

Continuity should exist.

2. Check harness continuity between ECM terminal 50 or HO2S2 terminal 4 and ground. Refer to Wiring Diagram.

Continuity should not exist.

3. Also check harness for short to power.

OK or NG

DTC P0139 HO2S2

< SERVICE INFORMATION >

- OK >> GO TO 5.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK HEATED OXYGEN SENSOR 2

Refer to [EC-255](#). "Component Inspection".

OK or NG

- OK >> GO TO 6.
- NG >> Replace heated oxygen sensor 2.

6. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**

Component Inspection

INFOID:000000001702758

HEATED OXYGEN SENSOR 2


① With CONSULT-II

1. Start engine and warm it up to the normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
4. Let engine idle for 1 minute.
5. Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "HO2S2 (B1)" as the monitor item with CONSULT-II.

| ACTIVE TEST | |
|-----------------|---------|
| FUEL INJECTION | 25 % |
| MONITOR | |
| ENG SPEED | XXX rpm |
| HO2S1 (B1) | XXX V |
| HO2S2 (B1) | XXX V |
| HO2S1 MNTR (B1) | RICH |
| HO2S2 MNTR (B1) | RICH |
| | |
| | |

SEF662Y

6. Check "HO2S2 (B1)" at idle speed when adjusting "FUEL INJECTION" to $\pm 25\%$.

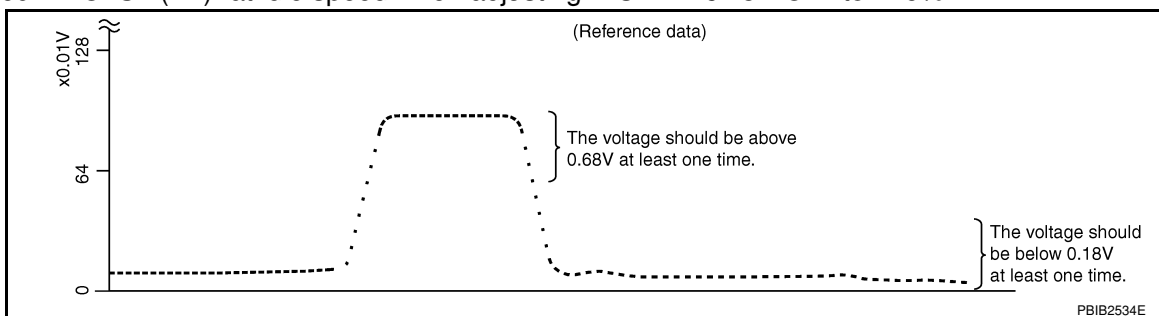

"HO2S2 (B1)" should be above 0.68V at least once when the "FUEL INJECTION" is +25%.

"HO2S2 (B1)" should be below 0.18V at least once when the "FUEL INJECTION" is -25%.

CAUTION:

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

⊗ Without CONSULT-II

1. Start engine and warm it up to the normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.

DTC P0139 HO2S2

< SERVICE INFORMATION >

- Let engine idle for 1 minute.
- Set voltmeter probes between ECM terminal 50 (HO2S2 signal) and ground.
- Check the voltage when revving up to 4,000 rpm under no load at least 10 times.

(Depress and release accelerator pedal as soon as possible.)

The voltage should be above 0.68V at least once during this procedure.

If the voltage is above 0.68V at step 6, step 7 is not necessary.

- Keep vehicle idling for 10 minutes, then check voltage. Or check the voltage when coasting from 80 km/h (50 MPH) in D position with OD OFF (A/T), D position (CVT) or 3rd gear position (M/T).

The voltage should be below 0.18V at least once during this procedure.

- If NG, replace heated oxygen sensor 2.

CAUTION:


- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

Removal and Installation

INFOID:000000001702759

HEATED OXYGEN SENSOR 2

Refer to [EM-21](#)

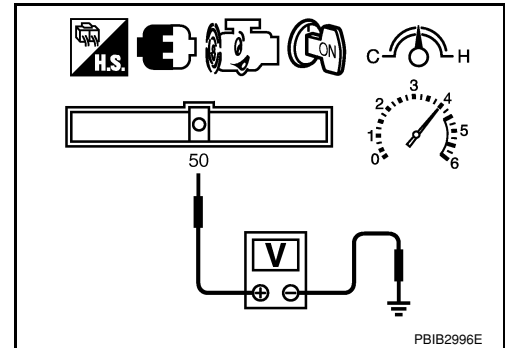

DTC P0171 FUEL INJECTION SYSTEM FUNCTION

< SERVICE INFORMATION >

DTC P0171 FUEL INJECTION SYSTEM FUNCTION

On Board Diagnosis Logic

INFOID:000000001702760

With the Air/Fuel Mixture Ratio Self-Learning Control, the actual mixture ratio can be brought closely to the theoretical mixture ratio based on the mixture ratio feedback signal from the air fuel ratio (A/F) sensor 1. The ECM calculates the necessary compensation to correct the offset between the actual and the theoretical ratios. In case the amount of the compensation value is extremely large (The actual mixture ratio is too lean.), the ECM judges the condition as the fuel injection system malfunction and lights up the MIL (2 trip detection logic).

| Sensor | Input Signal to ECM | ECM function | Actuator |
|-------------------------------|--|------------------------|---------------|
| Air fuel ratio (A/F) sensor 1 | Density of oxygen in exhaust gas (Mixture ratio feedback signal) | Fuel injection control | Fuel injector |

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|--------------------------------|---|---|
| P0171 0171 | Fuel injection system too lean | <ul style="list-style-type: none"> Fuel injection system does not operate properly. The amount of mixture ratio compensation is too large. (The mixture ratio is too lean.) | <ul style="list-style-type: none"> Intake air leaks Air fuel ratio (A/F) sensor 1 Fuel injector Exhaust gas leaks Incorrect fuel pressure Lack of fuel Mass air flow sensor Incorrect PCV hose connection |

DTC Confirmation Procedure

INFOID:000000001702761

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

- Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON and select "SELF-LEARNING CONT" in "WORK SUPPORT" mode with CONSULT-II.

- Clear the self-learning control coefficient by touching "CLEAR".
- Select "DATA MONITOR" mode with CONSULT-II.
- Start engine again and let it idle for at least 10 minutes. The 1st trip DTC P0171 should be detected at this stage, if a malfunction exists. If so, go to [EC-260. "Diagnosis Procedure"](#).

NOTE:


If 1st trip DTC is not detected during above procedure, performing the following procedure is advised.

- Turn ignition switch OFF and wait at least 10 seconds.
- Start engine and drive the vehicle under the similar conditions to (1st trip) Freeze Frame Data for 10 minutes. Refer to the table below.

Hold the accelerator pedal as steady as possible.

The similar conditions to (1st trip) Freeze Frame Data means the vehicle operation that the following conditions should be satisfied at the same time.

| | |
|---------------|--|
| Engine speed | Engine speed in the freeze frame data \pm 400 rpm |
| Vehicle speed | Vehicle speed in the freeze frame data \pm 10 km/h (6 MPH) |

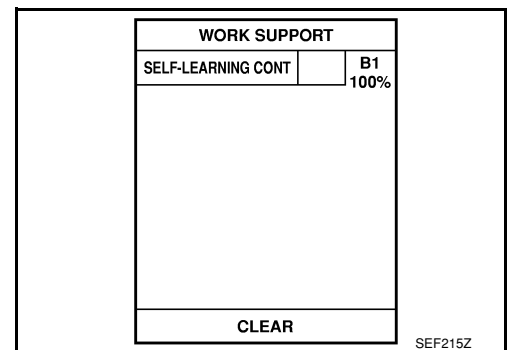

DTC P0171 FUEL INJECTION SYSTEM FUNCTION


< SERVICE INFORMATION >

| | |
|--|--|
| Engine coolant temperature (T) condition | When the freeze frame data shows lower than 70 °C (158 °F), T should be lower than 70 °C (158 °F). |
| | When the freeze frame data shows higher than or equal to 70 °C (158 °F), T should be higher than or equal to 70 °C (158 °F). |

7. If it is difficult to start engine at step 6, the fuel injection system has a malfunction, too.
8. Crank engine while depressing accelerator pedal. If engine starts, go to [EC-260. "Diagnosis Procedure"](#). If engine does not start, check exhaust and intake air leak visually.

⑤ WITH GST

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Disconnect mass air flow sensor (1) harness connector.
4. Restart engine and let idle for at least 5 seconds.
5. Stop engine and reconnect mass air flow sensor (1) harness connector.
6. Select Service \$03 with GST. Make sure DTC P0102 is detected.
7. Select Service \$04 with GST and erase the DTC P0102.
8. Start engine again and let it idle for at least 10 minutes.
9. Select Service \$07 with GST. The 1st trip DTC P0171 should be detected at this stage, if a malfunction exists. If so, go to [EC-260. "Diagnosis Procedure"](#).

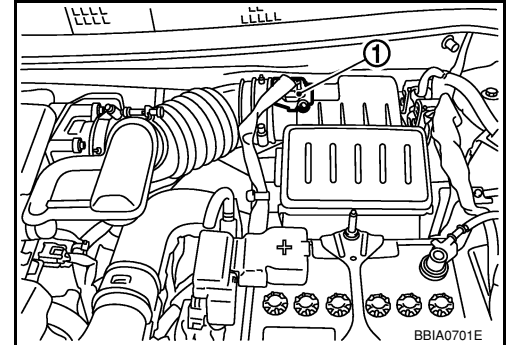

NOTE:

If 1st trip DTC is not detected during above procedure, performing the following procedure is advised.

- a. Turn ignition switch OFF and wait at least 10 seconds.
- b. Start engine and drive the vehicle under the similar conditions to (1st trip) Freeze Frame Data for 10 minutes. Refer to the table below.

Hold the accelerator pedal as steady as possible.

The similar conditions to (1st trip) Freeze Frame Data means the vehicle operation that the following conditions should be satisfied at the same time.

| | |
|--|--|
| Engine speed | Engine speed in the freeze frame data \pm 400 rpm |
| Vehicle speed | Vehicle speed in the freeze frame data \pm 10 km/h (6 MPH) |
| Engine coolant temperature (T) condition | When the freeze frame data shows lower than 70 °C (158 °F), T should be lower than 70 °C (158 °F). |
| | When the freeze frame data shows higher than or equal to 70 °C (158 °F), T should be higher than or equal to 70 °C (158 °F). |

10. If it is difficult to start engine at step 8, the fuel injection system has a malfunction.
11. Crank engine while depressing accelerator pedal. If engine starts, go to [EC-260. "Diagnosis Procedure"](#). If engine does not start, check exhaust and intake air leak visually.



DTC P0171 FUEL INJECTION SYSTEM FUNCTION

< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001702762

EC-FUEL-01

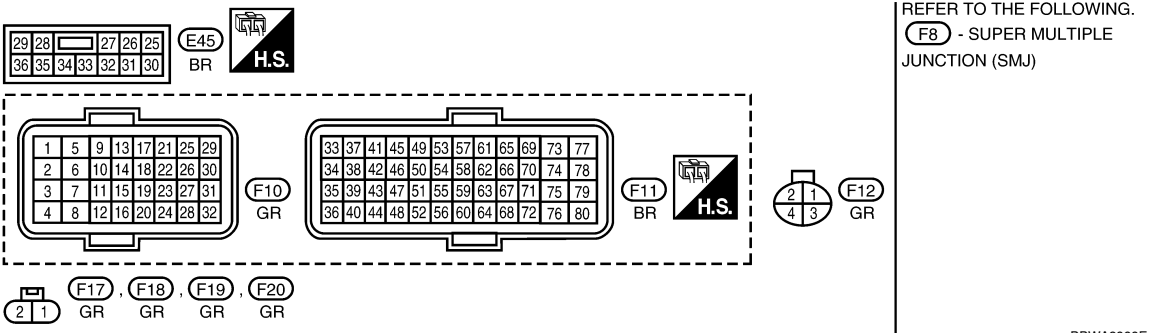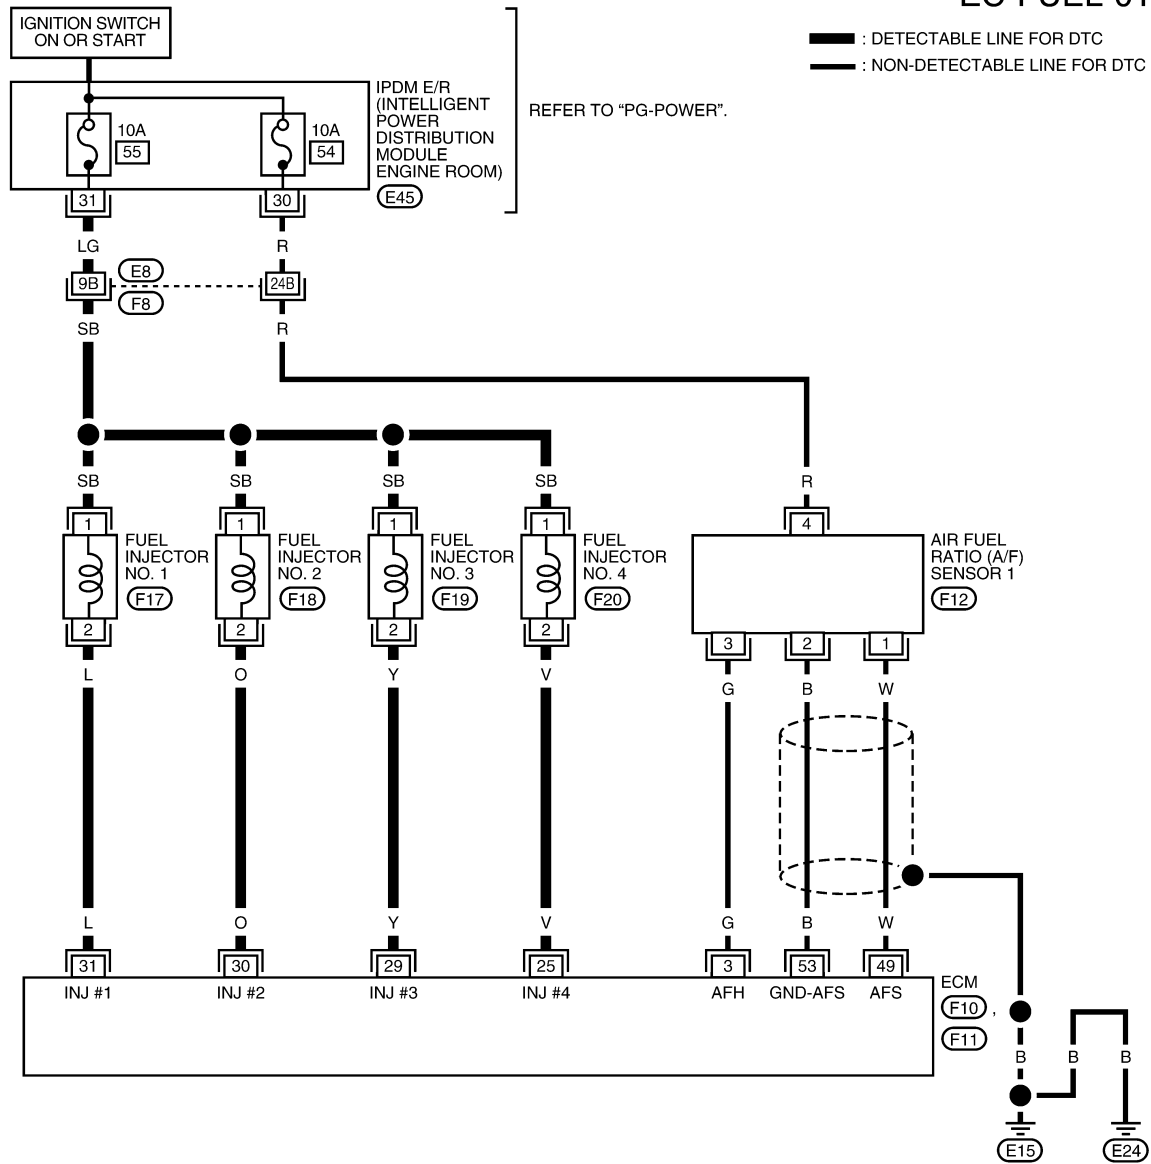

Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.




CAUTION:

BBWA2999E

DTC P0171 FUEL INJECTION SYSTEM FUNCTION

< SERVICE INFORMATION >

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.
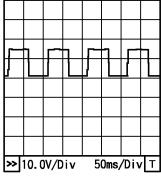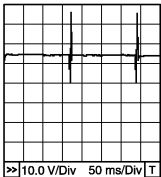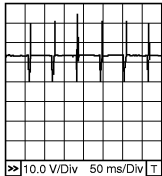
| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------------|------------------|--|---|---|
| 3 | G | A/F sensor 1 heater | [Engine is running] • Warm-up condition • Idle speed (More than 140 seconds after starting engine) | Approximately 2.9 - 8.8V★  PBI A8148J |
| 25 29 30 31 | V Y O L | Fuel injector No. 4 Fuel injector No. 3 Fuel injector No. 2 Fuel injector No. 1 | [Engine is running] • Warm-up condition • Idle speed NOTE: The pulse cycle changes depending on rpm at idle | BATTERY VOLTAGE (11 - 14V)★  PBI B0529E |
| | | | [Engine is running] • Warm-up condition • Engine speed: 2,000 rpm | BATTERY VOLTAGE (11 - 14V)★  PBI A4943J |
| 49 | W | A/F sensor 1 | [Engine is running] • Warm-up condition • Engine speed: 2,000 rpm | Approximately 1.8V Output voltage varies with air fuel ratio. |
| 53 | B | A/F sensor 1 | [Ignition switch: ON] | Approximately 2.2V |


★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnosis Procedure

INFOID:000000001702763

1. CHECK EXHAUST GAS LEAK

1. Start engine and run it at idle.
2. Listen for an exhaust gas leak before three way catalyst (manifold).

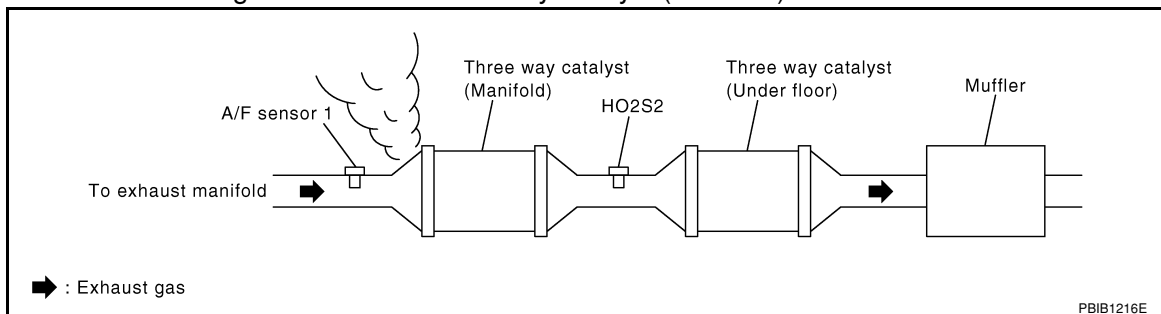

PBI B1216E

OK or NG

- OK >> GO TO 2.
NG >> Repair or replace.

2. CHECK FOR INTAKE AIR LEAK AND PCV HOSE

DTC P0171 FUEL INJECTION SYSTEM FUNCTION

< SERVICE INFORMATION >

1. Listen for an intake air leak after the mass air flow sensor.
2. Check PCV hose connection.


OK or NG

- OK >> GO TO 3.
NG >> Repair or replace.

3.CHECK AIR FUEL RATIO (A/F) SENSOR 1 CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect air fuel ratio (A/F) sensor 1 harness connector (1).
 - Air fuel ratio (A/F) sensor 1 (2)
3. Disconnect ECM harness connector.
4. Check harness continuity between the following terminals.
Refer to Wiring Diagram.

| A/F sensor 1 terminal | ECM terminal |
|-----------------------|--------------|
| 1 | 49 |
| 2 | 53 |

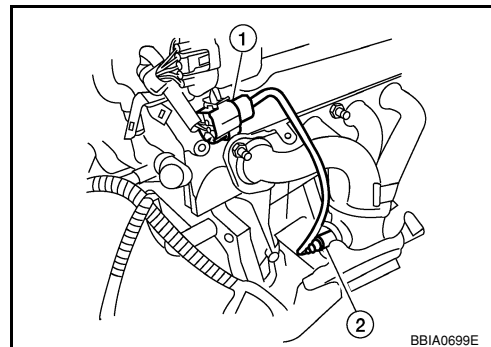

Continuity should exist.

5. Check harness continuity between ECM terminals 49, 53 or A/F sensor 1 terminals 1, 2 and ground.
Refer to Wiring Diagram.

Continuity should not exist.

6. Also check harness for short to power.

OK or NG

- OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4.CHECK FUEL PRESSURE

1. Release fuel pressure to zero. Refer to [EC-78. "Fuel Pressure Check"](#).
2. Install fuel pressure gauge and check fuel pressure. Refer to [EC-78. "Fuel Pressure Check"](#).

At idling: Approximately 350 kPa (3.57 kg/cm², 51 psi)

OK or NG

- OK >> GO TO 6.
NG >> GO TO 5.

5.DETECT MALFUNCTIONING PART

Check the following.

- Fuel pump and circuit (Refer to [EC-526](#).)
- Fuel pressure regulator (Refer to [EC-78. "Fuel Pressure Check"](#).)
- Fuel lines (Refer to [EM-33](#).)
- Fuel filter for clogging

>> Repair or replace.

6.CHECK MASS AIR FLOW SENSOR

With CONSULT-II

1. Install all removed parts.
2. Start engine and warm it up to normal operating temperature.
3. Check "MASS AIR FLOW" in "DATA MONITOR" mode with CONSULT-II.

at idling : 1.0 - 4.0 g·m/sec
at 2,500 rpm : 2.0 - 10.0 g·m/sec

With GST

DTC P0171 FUEL INJECTION SYSTEM FUNCTION

< SERVICE INFORMATION >

1. Install all removed parts.
2. Start engine and warm it up to normal operating temperature.
3. Check mass air flow sensor signal in Service \$01 with GST.

at idling : 1.0 - 4.0 g·m/sec

at 2,500 rpm : 2.0 - 10.0 g·m/sec

OK or NG

OK >> GO TO 7.

NG >> Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or ground. Refer to [EC-167](#).

7. CHECK FUNCTION OF FUEL INJECTORS

Ⓟ With CONSULT-II

1. Let engine idle.
2. Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT-II.
3. Make sure that each circuit produces a momentary engine speed drop.

| ACTIVE TEST | |
|---------------|---------|
| POWER BALANCE | |
| MONITOR | |
| ENG SPEED | XXX rpm |
| MAS A/F SE-B1 | XXX V |
| | |
| | |
| | |
| | |
| | |
| | |

PBIB0133E

⊗ Without CONSULT-II


1. Let engine idle.
2. Listen to each fuel injector operating sound.

Clicking noise should be heard.

OK or NG

OK >> GO TO 8.

NG >> Perform trouble diagnosis for [EC-521](#).

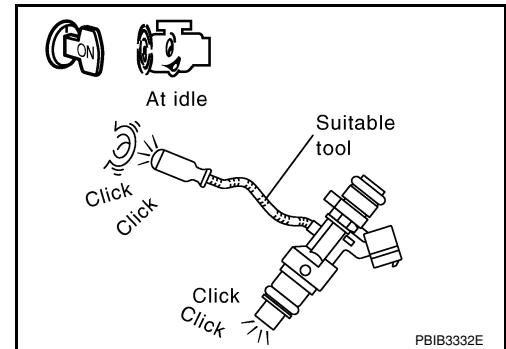

8. CHECK FUEL INJECTOR

1. Confirm that the engine is cooled down and there are no fire hazards near the vehicle.
2. Turn ignition switch OFF.
3. Reconnect all harness connectors disconnected.
4. Remove fuel tube assembly. Refer to [EM-33](#).
Keep fuel hose and all fuel injector connected to fuel tube.
The fuel injector harness connectors should remain connected.
5. Disconnect all ignition coil harness connectors.
6. Prepare pans or saucers under each fuel injector.

DTC P0171 FUEL INJECTION SYSTEM FUNCTION


< SERVICE INFORMATION >

7. Crank engine for about 3 seconds. Make sure that fuel sprays out from fuel injectors.

Fuel should be sprayed evenly for each fuel injector.

OK or NG

- OK >> GO TO 9.
- NG >> Replace fuel injectors from which fuel does not spray out. Always replace O-ring with new ones.

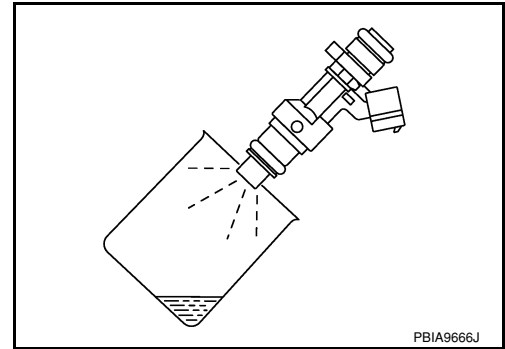

9. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**

A

EC

C

D

E

F

G

H

I

J

K

L

M

N

O

P

DTC P0172 FUEL INJECTION SYSTEM FUNCTION

< SERVICE INFORMATION >

DTC P0172 FUEL INJECTION SYSTEM FUNCTION

On Board Diagnosis Logic

INFOID:000000001702764

With the Air/Fuel Mixture Ratio Self-Learning Control, the actual mixture ratio can be brought closely to the theoretical mixture ratio based on the mixture ratio feedback signal from the air fuel ratio (A/F) sensor 1. The ECM calculates the necessary compensation to correct the offset between the actual and the theoretical ratios. In case the amount of the compensation value is extremely large (The actual mixture ratio is too rich.), the ECM judges the condition as the fuel injection system malfunction and lights up the MIL (2 trip detection logic).

| Sensor | Input Signal to ECM | ECM function | Actuator |
|-------------------------------|--|------------------------|---------------|
| Air fuel ratio (A/F) sensor 1 | Density of oxygen in exhaust gas (Mixture ratio feedback signal) | Fuel injection control | Fuel injector |

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|--------------------------------|---|--|
| P0172 0172 | Fuel injection system too rich | <ul style="list-style-type: none"> Fuel injection system does not operate properly. The amount of mixture ratio compensation is too large. (The mixture ratio is too rich.) | <ul style="list-style-type: none"> Air fuel ratio (A/F) sensor 1 Fuel injector Exhaust gas leaks Incorrect fuel pressure Mass air flow sensor |

DTC Confirmation Procedure

INFOID:000000001702765

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II


- Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON and select "SELF-LEARNING CONT" in "WORK SUPPORT" mode with CONSULT-II.
- Clear the self-learning control coefficient by touching "CLEAR".
- Select "DATA MONITOR" mode with CONSULT-II.
- Start engine again and let it idle for at least 10 minutes. The 1st trip DTC P0172 should be detected at this stage, if a malfunction exists. If so, go to [EC-267, "Diagnosis Procedure"](#).

NOTE:

If 1st trip DTC is not detected during above procedure, performing the following procedure is advised.

- Turn ignition switch OFF and wait at least 10 seconds.
- Start engine and drive the vehicle under the similar conditions to (1st trip) Freeze Frame Data for 10 minutes. Refer to the table below.

Hold the accelerator pedal as steady as possible.

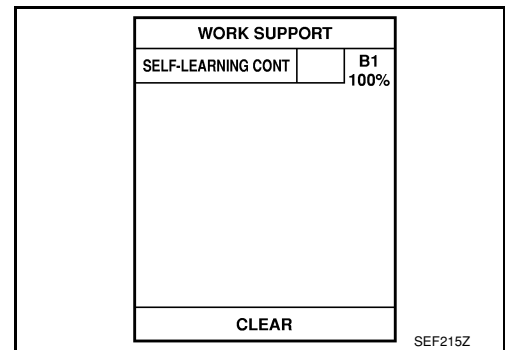

The similar conditions to (1st trip) Freeze Frame Data means the vehicle operation that the following conditions should be satisfied at the same time.

| | |
|---------------|--|
| Engine speed | Engine speed in the freeze frame data \pm 400 rpm |
| Vehicle speed | Vehicle speed in the freeze frame data \pm 10 km/h (6 MPH) |

DTC P0172 FUEL INJECTION SYSTEM FUNCTION


< SERVICE INFORMATION >

| | |
|--|--|
| Engine coolant temperature (T) condition | When the freeze frame data shows lower than 70 °C (158 °F), T should be lower than 70 °C (158 °F). |
| | When the freeze frame data shows higher than or equal to 70 °C (158 °F), T should be higher than or equal to 70 °C (158 °F). |

7. If it is difficult to start engine at step 6, the fuel injection system has a malfunction, too.
8. Crank engine while depressing accelerator pedal.
If engine starts, go to [EC-267, "Diagnosis Procedure"](#). If engine does not start, remove ignition plugs and check for fouling, etc.

WITH GST

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Disconnect mass air flow sensor (1) harness connector.
4. Restart engine and let idle for at least 5 seconds.
5. Stop engine and reconnect mass air flow sensor harness connector.
6. Select Service \$03 with GST. Make sure DTC P0102 is detected.
7. Select Service \$04 with GST and erase the DTC P0102.
8. Start engine again and let it idle for at least 10 minutes.
9. Select Service \$07 with GST. The 1st trip DTC P0172 should be detected at this stage, if a malfunction exists. If so, go to [EC-267, "Diagnosis Procedure"](#).

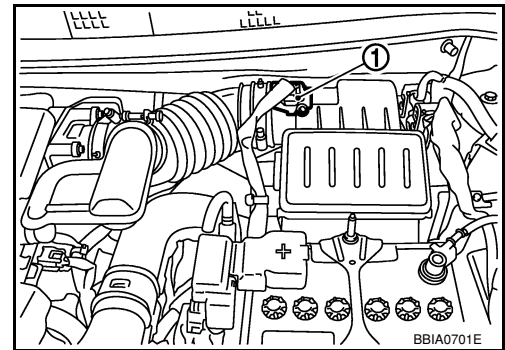

NOTE:

If 1st trip DTC is not detected during above procedure, performing the following procedure is advised.

- a. Turn ignition switch OFF and wait at least 10 seconds.
- b. Start engine and drive the vehicle under the similar conditions to (1st trip) Freeze Frame Data for 10 minutes. Refer to the table below.

Hold the accelerator pedal as steady as possible.

The similar conditions to (1st trip) Freeze Frame Data means the vehicle operation that the following conditions should be satisfied at the same time.

| | |
|--|--|
| Engine speed | Engine speed in the freeze frame data \pm 400 rpm |
| Vehicle speed | Vehicle speed in the freeze frame data \pm 10 km/h (6 MPH) |
| Engine coolant temperature (T) condition | When the freeze frame data shows lower than 70 °C (158 °F), T should be lower than 70 °C (158 °F). |
| | When the freeze frame data shows higher than or equal to 70 °C (158 °F), T should be higher than or equal to 70 °C (158 °F). |

10. If it is difficult to start engine at step 8, the fuel injection system has a malfunction.
11. Crank engine while depressing accelerator pedal.
If engine starts, go to [EC-267, "Diagnosis Procedure"](#). If engine does not start, remove ignition plugs and check for fouling, etc.





DTC P0172 FUEL INJECTION SYSTEM FUNCTION

< SERVICE INFORMATION >

INFOID:000000001702766


Wiring Diagram

EC-FUEL-01

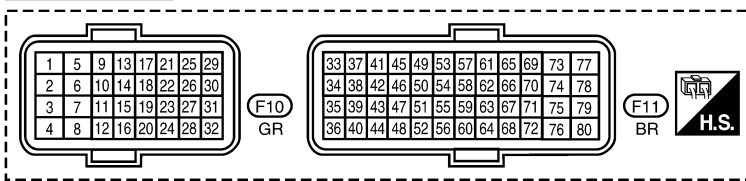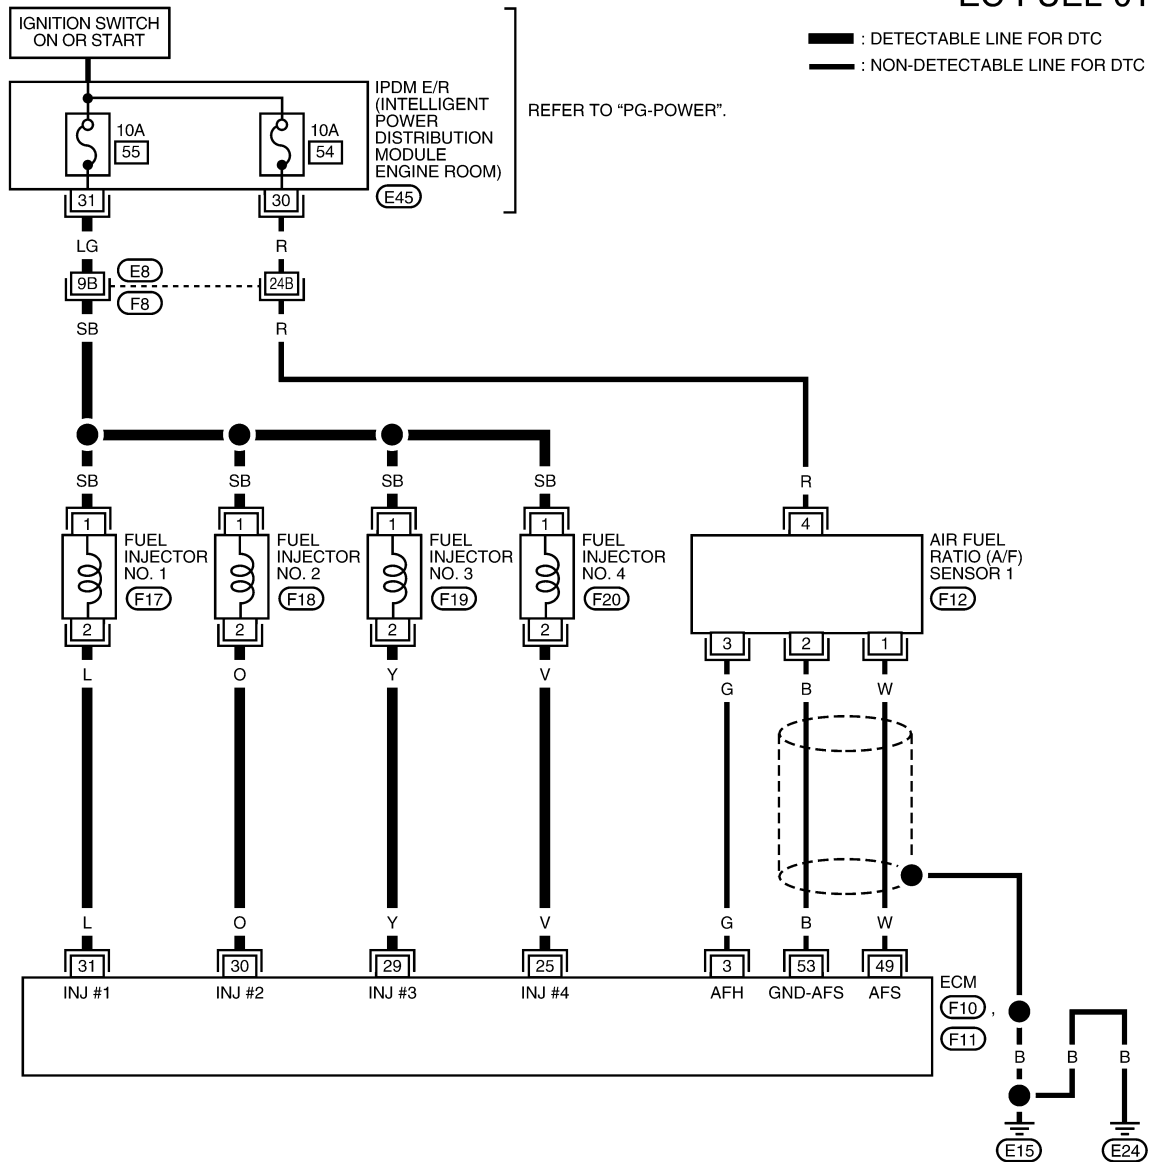

REFER TO THE FOLLOWING.

(F8) - SUPER MULTIPLE JUNCTION (SMJ)



BBWA2999E




Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.

CAUTION:

DTC P0172 FUEL INJECTION SYSTEM FUNCTION

< SERVICE INFORMATION >

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.
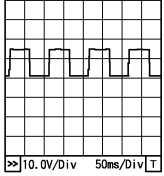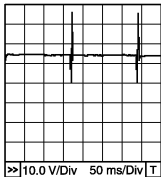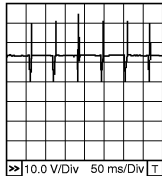
| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------------|------------------|--|---|---|
| 3 | G | A/F sensor 1 heater | [Engine is running] • Warm-up condition • Idle speed (More than 140 seconds after starting engine) | Approximately 2.9 - 8.8V★  PBI A8148J |
| 25 29 30 31 | V Y O L | Fuel injector No. 4 Fuel injector No. 3 Fuel injector No. 2 Fuel injector No. 1 | [Engine is running] • Warm-up condition • Idle speed NOTE: The pulse cycle changes depending on rpm at idle | BATTERY VOLTAGE (11 - 14V)★  PBI B0529E |
| | | | [Engine is running] • Warm-up condition • Engine speed: 2,000 rpm | BATTERY VOLTAGE (11 - 14V)★  PBI A4943J |
| 49 | W | A/F sensor 1 | [Engine is running] • Warm-up condition • Engine speed: 2,000 rpm | Approximately 1.8V Output voltage varies with air fuel ratio. |
| 53 | B | A/F sensor 1 | [Ignition switch: ON] | Approximately 2.2V |


★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnosis Procedure

INFOID:000000001702767

1. CHECK EXHAUST GAS LEAK

1. Start engine and run it at idle.
2. Listen for an exhaust gas leak before three way catalyst (manifold).

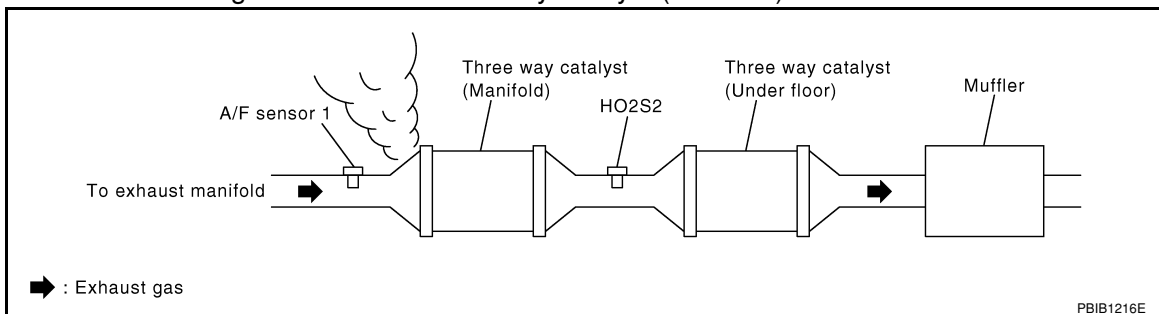

OK or NG

- OK >> GO TO 2.
NG >> Repair or replace.

2. CHECK FOR INTAKE AIR LEAK

DTC P0172 FUEL INJECTION SYSTEM FUNCTION

< SERVICE INFORMATION >

Listen for an intake air leak after the mass air flow sensor.


OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace.

3. CHECK AIR FUEL RATIO (A/F) SENSOR 1 CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect air fuel ratio (A/F) sensor 1 harness connector (1).
 - Air fuel ratio (A/F) sensor 1 (2)
3. Disconnect ECM harness connector.
4. Check harness continuity between the following terminals. Refer to Wiring Diagram.

| A/F sensor 1 terminal | ECM terminal |
|-----------------------|--------------|
| 1 | 49 |
| 2 | 53 |

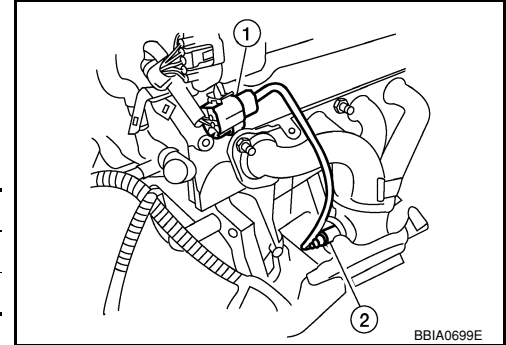

Continuity should exist.

5. Check harness continuity between ECM terminals 49, 53 or A/F sensor 1 terminals 1, 2 and ground. Refer to Wiring Diagram.

Continuity should not exist.

6. Also check harness for short to power.

OK or NG

- OK >> GO TO 4.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK FUEL PRESSURE

1. Release fuel pressure to zero. Refer to [EC-78, "Fuel Pressure Check"](#).
2. Install fuel pressure gauge and check fuel pressure. Refer to [EC-78, "Fuel Pressure Check"](#).

At idling: Approximately 350 kPa (3.57 kg/cm², 51 psi)

OK or NG

- OK >> GO TO 6.
- NG >> GO TO 5.

5. DETECT MALFUNCTIONING PART

Check the following.

- Fuel pump and circuit (Refer to [EC-526](#).)
- Fuel pressure regulator (Refer to [EC-78, "Fuel Pressure Check"](#).)

>> Repair or replace.

6. CHECK MASS AIR FLOW SENSOR

With CONSULT-II

1. Install all removed parts.
2. Start engine and warm it up to normal operating temperature.
3. Check "MASS AIR FLOW" in "DATA MONITOR" mode with CONSULT-II.

at idling : 1.0 - 4.0 g·m/sec

at 2,500 rpm : 2.0 - 10.0 g·m/sec

With GST

1. Install all removed parts.
2. Start engine and warm it up to normal operating temperature.
3. Check mass air flow sensor signal in Service \$01 with GST.

DTC P0172 FUEL INJECTION SYSTEM FUNCTION

< SERVICE INFORMATION >

at idling : 1.0 - 4.0 g·m/sec
at 2,500 rpm : 2.0 - 10.0 g·m/sec

OK or NG

OK >> GO TO 7.

NG >> Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or ground. Refer to [EC-167](#).

7. CHECK FUNCTION OF FUEL INJECTORS

With CONSULT-II

1. Let engine idle.
2. Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT-II.
3. Make sure that each circuit produces a momentary engine speed drop.

| ACTIVE TEST | |
|---------------|---------|
| POWER BALANCE | |
| MONITOR | |
| ENG SPEED | XXX rpm |
| MAS A/F SE-B1 | XXX V |
| | |
| | |
| | |
| | |
| | |
| | |

PBIB0133E

Without CONSULT-II


1. Let engine idle.
2. Listen to each fuel injector operating sound.

Clicking noise should be heard.

OK or NG

OK >> GO TO 8.

NG >> Perform trouble diagnosis for [EC-521](#).

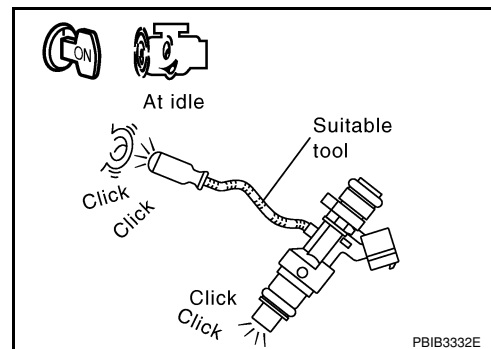

8. CHECK FUEL INJECTOR

1. Remove fuel injector assembly. Refer to [EM-33](#).
Keep fuel hose and all fuel injector connected to fuel tube.
2. Confirm that the engine is cooled down and there are no fire hazards near the vehicle.
3. Reconnect all harness connectors disconnected.
4. Disconnect all ignition coil harness connectors.
5. Prepare pans or saucers under each fuel injector.
6. Crank engine for about 3 seconds.
Make sure fuel does not drip from fuel injector.

OK or NG

OK (Does not drip.)>>GO TO 9.

NG (Drips.)>>Replace the fuel injectors from which fuel is dripping. Always replace O-ring with new one.

9. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> INSPECTION END

DTC P0181 FTT SENSOR

< SERVICE INFORMATION >


DTC P0181 FTT SENSOR

Component Description

INFOID:000000001702768

The fuel tank temperature sensor (4) is used to detect the fuel temperature inside the fuel tank. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the fuel temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

- Fuel level sensor unit and fuel pump (1)
- Fuel pressure regulator (2)
- Fuel level sensor (3)

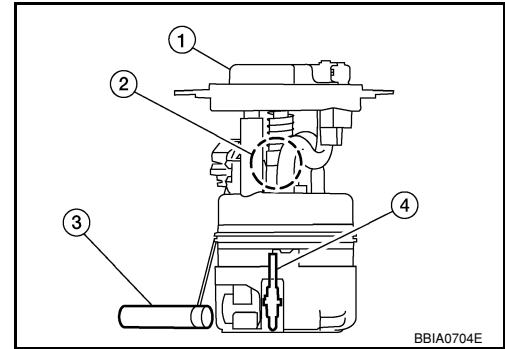


<Reference data>

| Fluid temperature °C (°F) | Voltage* V | Resistance kΩ |
|------------------------------|---------------|------------------|
| 20 (68) | 3.5 | 2.3 - 2.7 |
| 50 (122) | 2.2 | 0.79 - 0.90 |

*: This data is reference values and is measured between ECM terminal 43 (Fuel tank temperature sensor) and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result damage the ECM's transistor. Use ground other than ECM, such as ground.

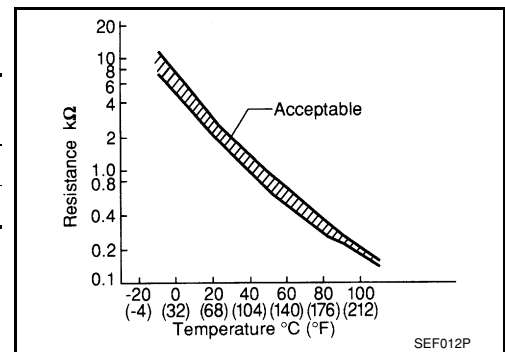

On Board Diagnosis Logic

INFOID:000000001702769

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|--|--|---|
| P0181 0181 | Fuel tank temperature sensor circuit range/performance | Rationally incorrect voltage from the sensor is sent to ECM, compared with the voltage signals from engine coolant temperature sensor and intake air temperature sensor. | <ul style="list-style-type: none"> • Harness or connectors (Fuel tank temperature sensor circuit is open or shorted) • Fuel tank temperature sensor |

DTC Confirmation Procedure

INFOID:000000001702770

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select "DATA MONITOR" mode with CONSULT-II.
3. Wait at least 10 seconds.
If the result is NG, go to [EC-271, "Diagnosis Procedure"](#).
If the result is OK, go to following step.
4. Check "COOLAN TEMP/S" value.
If the "COOLAN TEMP/S" is less than 60°C (140°F), the result will be OK.
If the "COOLAN TEMP/S" is above 60°C (140°F), go to the following step.
5. Cool engine down until "COOLAN TEMP/S" signal is less than 60°C (140°F).
6. Wait at least 10 seconds.
7. If 1st trip DTC is detected, go to [EC-271, "Diagnosis Procedure"](#).

| DATA MONITOR | |
|---------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |
| COOLAN TEMP/S | XXX °C |

SEF174Y

DTC P0181 FTT SENSOR

< SERVICE INFORMATION >

WITH GST



Follow the procedure "WITH CONSULT-II" above.

Wiring Diagram

INFOID:000000001702771

EC-FTTS-01

— : DETECTABLE LINE FOR DTC
— : NON-DETECTABLE LINE FOR DTC

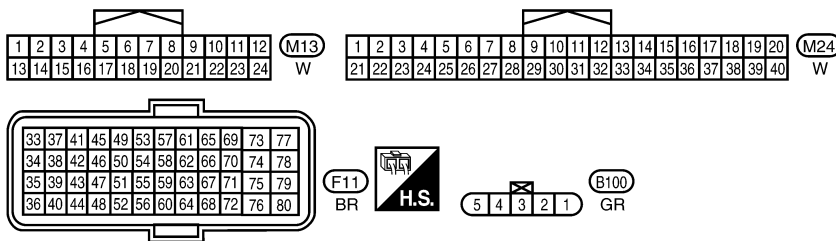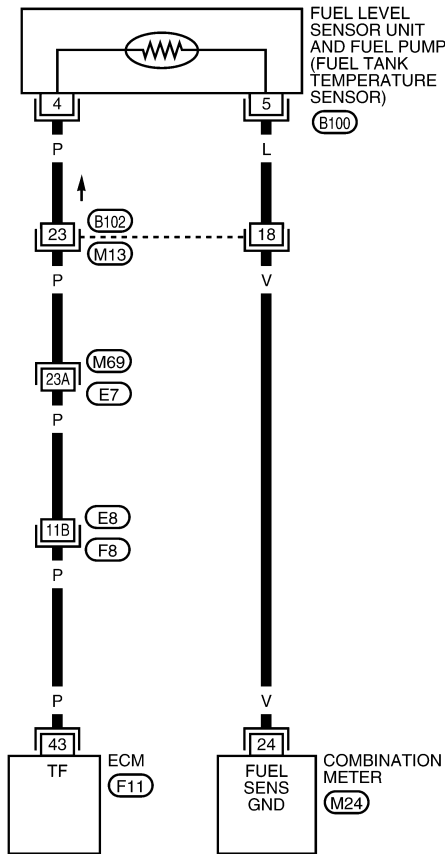

REFER TO THE FOLLOWING.
 (M69), (F8) - SUPER
 MULTIPLE JUNCTION (SMJ)

BBWA2636E

Diagnosis Procedure


1. CHECK GROUND CONNECTIONS

INFOID:000000001702772

DTC P0181 FTT SENSOR

< SERVICE INFORMATION >

1. Turn ignition switch OFF.
2. Loosen and retighten ground screw on the body.
Refer to [EC-142. "Ground Inspection"](#).

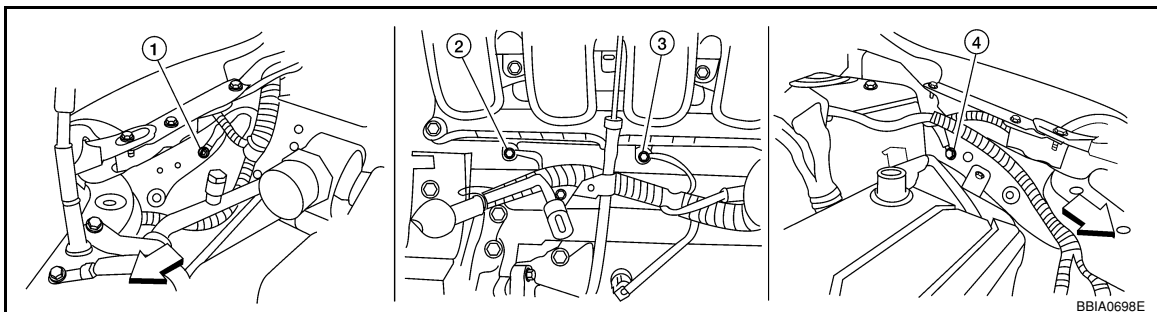

↵: Vehicle front

1. Body ground E24
4. Body ground E15

2. Engine ground F9

3. Engine ground F15


OK or NG

OK >> GO TO 2.

NG >> Repair or replace ground connections.

2. CHECK FUEL TANK TEMPERATURE SENSOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect "fuel level sensor unit and fuel pump" harness connector (1).
- ↵: Vehicle front
3. Turn ignition switch ON.

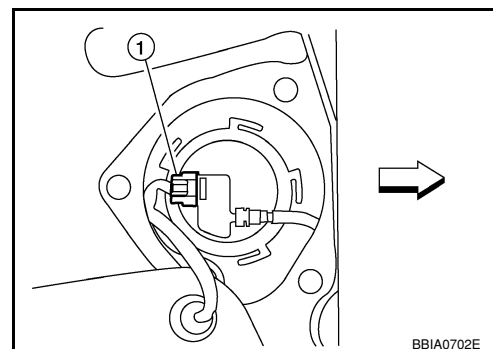


4. Check voltage between "fuel level sensor unit and fuel pump" terminal 4 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

OK or NG

OK >> GO TO 4.

NG >> GO TO 3.

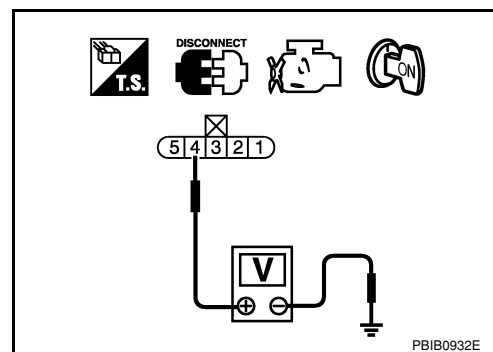

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness connectors M69, E7
- Harness connectors B102, M13
- Harness for open or short between ECM and "fuel level sensor unit and fuel pump"

>> Repair open circuit or short to ground or short to power in harness or connector.

4. CHECK FUEL TANK TEMPERATURE SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

DTC P0181 FTT SENSOR

< SERVICE INFORMATION >

1. Turn ignition switch OFF.
2. Check harness continuity between “fuel level sensor unit and fuel pump” terminal 5 and combination meter terminal 24. Refer to Wiring Diagram.

Continuity should exist.

3. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 6.
- NG >> GO TO 5.

5. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors B102, M13
- Harness for open or short between “fuel level sensor unit and fuel pump” and ground.

>> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK FUEL TANK TEMPERATURE SENSOR

Refer to, [EC-273. "Component Inspection"](#).

OK or NG

- OK >> GO TO 7.
- NG >> Replace “fuel level sensor unit and fuel pump”.

7. CHECK INTERMITTENT INCIDENT

Perform [EC-136](#).

>> **INSPECTION END**

Component Inspection


INFOID:000000001702773

FUEL TANK TEMPERATURE SENSOR

1. Check resistance between “fuel level sensor unit and fuel pump” terminal 4 and 5 by heating with hot water as shown in the figure.

| Temperature °C (°F) | Resistance kΩ |
|---------------------|---------------|
| 20 (68) | 2.3 - 2.7 |
| 50 (122) | 0.79 - 0.90 |

2. If NG, replace “fuel level sensor unit and fuel pump”.

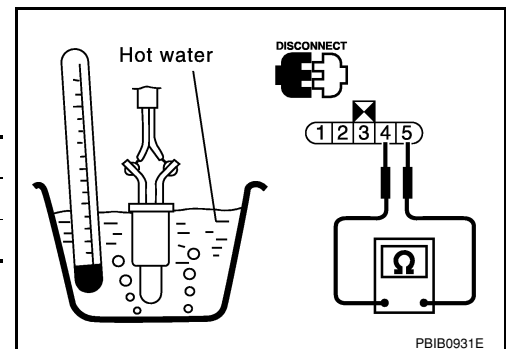

INFOID:000000001702774

Removal and Installation

FUEL TANK TEMPERATURE SENSOR

Refer to [FL-5](#).

DTC P0182, P0183 FTT SENSOR

< SERVICE INFORMATION >


DTC P0182, P0183 FTT SENSOR

Component Description

INFOID:000000001702775

The fuel tank temperature sensor (4) is used to detect the fuel temperature inside the fuel tank. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the fuel temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

- Fuel level sensor unit and fuel pump (1)
- Fuel pressure regulator (2)
- Fuel level sensor (3)

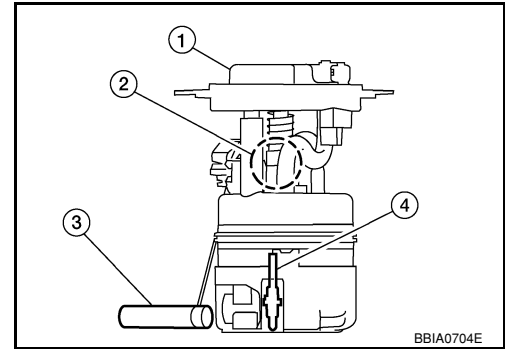


<Reference data>

| Fluid temperature °C (°F) | Voltage* V | Resistance kΩ |
|------------------------------|---------------|------------------|
| 20 (68) | 3.5 | 2.3 - 2.7 |
| 50 (122) | 2.2 | 0.79 - 0.90 |

*: This data is reference values and is measured between ECM terminal 43 (Fuel tank temperature sensor) and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result damage the ECM's transistor. Use ground other than ECM, such as ground.

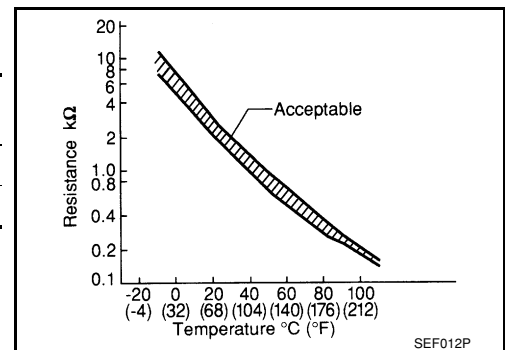

On Board Diagnosis Logic

INFOID:000000001702776

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|---|---|--|
| P0182 0182 | Fuel tank temperature sensor circuit low input | An excessively low voltage from the sensor is sent to ECM. | <ul style="list-style-type: none"> • Harness or connectors (Fuel tank temperature sensor circuit is open or shorted.) • Fuel tank temperature sensor |
| P0183 0183 | Fuel tank temperature sensor circuit high input | An excessively high voltage from the sensor is sent to ECM. | |

DTC Confirmation Procedure

INFOID:000000001702777

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select "DATA MONITOR" mode with CONSULT-II.
3. Wait at least 5 seconds.
4. If 1st trip DTC is detected, go to [EC-275. "Diagnosis Procedure"](#).

| DATA MONITOR | |
|---------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |
| COOLAN TEMP/S | XXX °C |

SEF174Y

DTC P0182, P0183 FTT SENSOR

< SERVICE INFORMATION >

WITH GST



Follow the procedure "WITH CONSULT-II" above.

Wiring Diagram

INFOID:000000001702778

EC-FTTS-01

— : DETECTABLE LINE FOR DTC
— : NON-DETECTABLE LINE FOR DTC

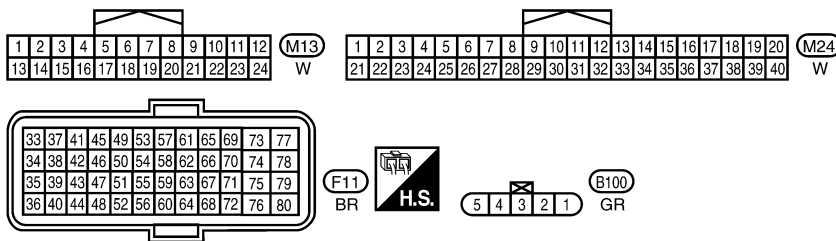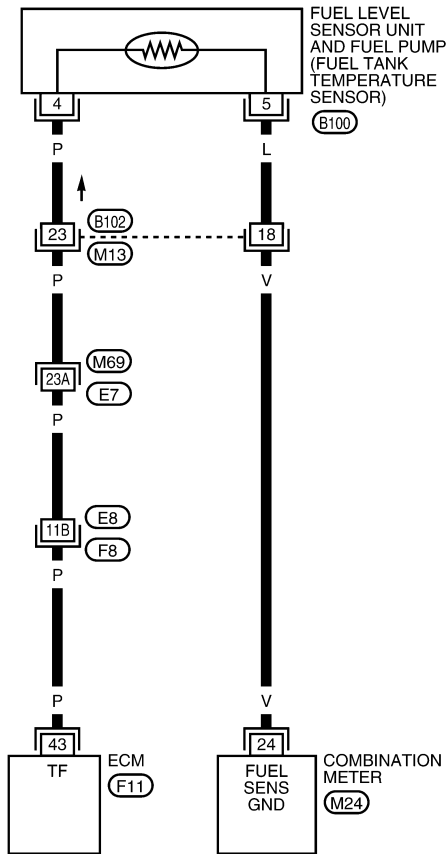

REFER TO THE FOLLOWING.
 (M69), (F8) - SUPER
 MULTIPLE JUNCTION (SMJ)

BBWA2636E

Diagnosis Procedure


1. CHECK GROUND CONNECTIONS

INFOID:000000001702779

DTC P0182, P0183 FTT SENSOR

< SERVICE INFORMATION >

1. Turn ignition switch OFF.
2. Loosen and retighten ground screw on the body.
Refer to [EC-142. "Ground Inspection"](#).

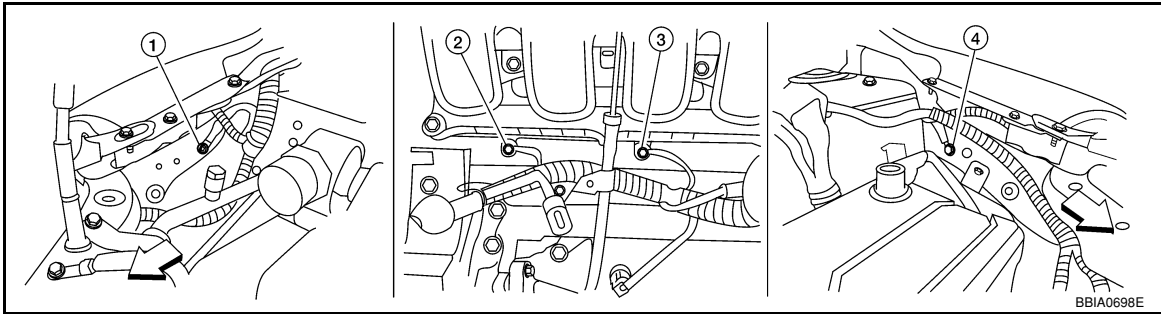

⇐: Vehicle front

1. Body ground E24
4. Body ground E15

2. Engine ground F9

3. Engine ground F16


OK or NG

OK >> GO TO 2.

NG >> Repair or replace ground connections.

2. CHECK FUEL TANK TEMPERATURE SENSOR POWER SUPPLY CIRCUIT

1. Disconnect "fuel level sensor unit and fuel pump" harness connector (1).
- ⇐: Vehicle front
2. Turn ignition switch ON.

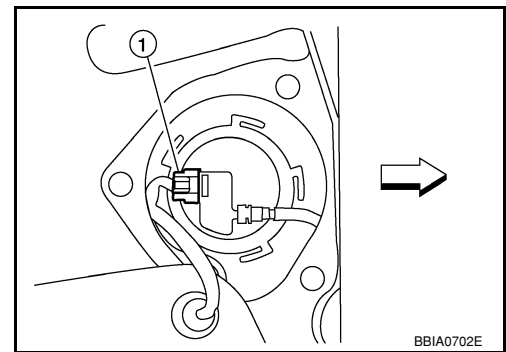


3. Check voltage between "fuel level sensor unit and fuel pump" terminal 4 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

OK or NG

OK >> GO TO 4.

NG >> GO TO 3.

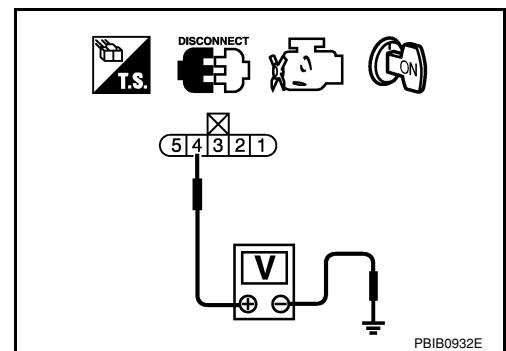

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness connectors M69, E7
- Harness connectors B102, M13
- Harness for open or short to ground or short between ECM and "fuel level sensor unit and fuel pump"

>> Repair open circuit or short to ground or short to power in harness or connector.

4. CHECK FUEL TANK TEMPERATURE SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.

DTC P0182, P0183 FTT SENSOR

< SERVICE INFORMATION >

2. Check harness continuity between “fuel level sensor unit and fuel pump” terminal 5 and combination meter terminal 24. Refer to Wiring Diagram.

Continuity should exist.

3. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 6.

NG >> GO TO 5.

5. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors B102, M13
- Harness for open or short between “fuel level sensor unit and fuel pump” and ground

>> Repair open circuit or short to ground or short to power in harness or connector.

6. CHECK FUEL TANK TEMPERATURE SENSOR

Refer to, [EC-277, "Component Inspection"](#).

OK or NG

OK >> GO TO 7.

NG >> Replace “fuel level sensor unit and fuel pump”.

7. CHECK INTERMITTENT INCIDENT

Perform [EC-136](#).

>> **INSPECTION END**

Component Inspection


INFOID:000000001702780

FUEL TANK TEMPERATURE SENSOR

1. Check resistance between “fuel level sensor unit and fuel pump” terminal 4 and 5 by heating with hot water as shown in the figure.

| Temperature °C (°F) | Resistance kΩ |
|---------------------|---------------|
| 20 (68) | 2.3 - 2.7 |
| 50 (122) | 0.79 - 0.90 |

2. If NG, replace “fuel level sensor unit and fuel pump”.

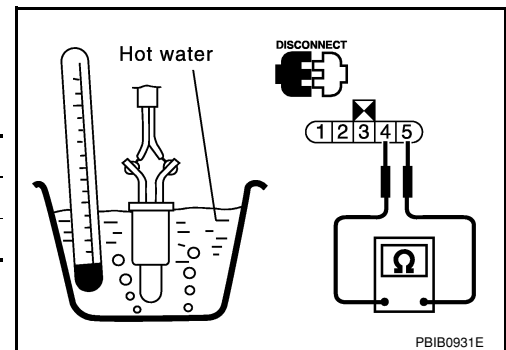

INFOID:000000001702781

Removal and Installation

FUEL TANK TEMPERATURE SENSOR

Refer to [FL-5](#).

DTC P0222, P0223 TP SENSOR

< SERVICE INFORMATION >


DTC P0222, P0223 TP SENSOR

Component Description

INFOID:000000001702782

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.

The throttle position sensor has two sensors. These sensors are a kind of potentiometers which transform the throttle valve position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the throttle valve and feed the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and the ECM controls the throttle control motor to make the throttle valve opening angle properly in response to driving condition.

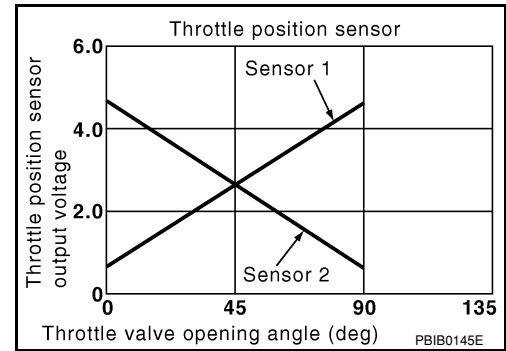

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702783

Specification data are reference values.

| MONITOR ITEM | CONDITION | | SPECIFICATION |
|-----------------------------|--|------------------------------------|-----------------|
| THRTL SEN 1 THRTL SEN 2* | <ul style="list-style-type: none"> Ignition switch: ON (Engine stopped) Shift lever: D (A/T, CVT), 1st (M/T) | Accelerator pedal: Fully released | More than 0.36V |
| | | Accelerator pedal: Fully depressed | Less than 4.75V |

*: Throttle position sensor 2 signal is converted by ECM internally. Thus, it differs from ECM terminal voltage signal.

On Board Diagnosis Logic

INFOID:000000001702784

These self-diagnoses have the one trip detection logic.

NOTE:

If DTC P0222 or P0223 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to [EC-400](#).

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|---|--|--|
| P0222 0222 | Throttle position sensor 1 circuit low input | An excessively low voltage from the TP sensor 1 is sent to ECM. | <ul style="list-style-type: none"> Harness or connectors (TP sensor 1 circuit is open or shorted.) (APP sensor 2 circuit is shorted.) Electric throttle control actuator (TP sensor 1) Accelerator pedal position sensor (APP sensor 2) |
| P0223 0223 | Throttle position sensor 1 circuit high input | An excessively high voltage from the TP sensor 1 is sent to ECM. | |

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MIL lights up.

Engine operation condition in fail-safe mode

The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees.

The ECM regulates the opening speed of the throttle valve to be slower than the normal condition.

So, the acceleration will be poor.

DTC Confirmation Procedure

INFOID:000000001702785

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8V at idle.

DTC P0222, P0223 TP SENSOR

< SERVICE INFORMATION >

Ⓜ WITH CONSULT-II

1. Turn ignition switch ON.
2. Select "DATA MONITOR" mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to [EC-281, "Diagnosis Procedure"](#).

| DATA MONITOR | |
|--------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |

SEF058Y

Ⓜ WITH GST

Follow the procedure "WITH CONSULT-II" above.

A

EC

C

D

E

F

G

H

I

J

K

L

M

N

O

P

DTC P0222, P0223 TP SENSOR



< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001702786

EC-TPS1-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

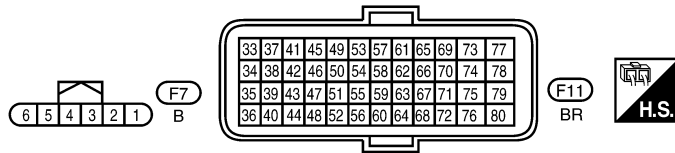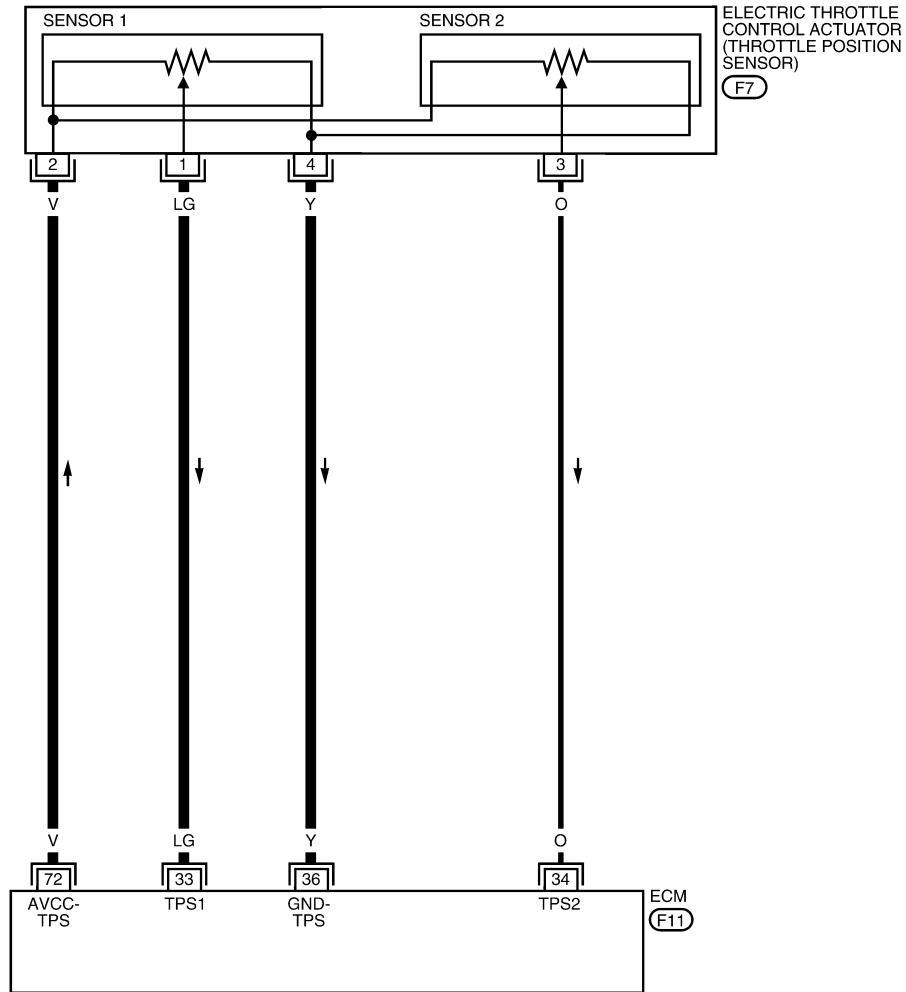

BBWA2655E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

DTC P0222, P0223 TP SENSOR

< SERVICE INFORMATION >


| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------------|---------------|---|--|-------------------|
| 33 | LG | Throttle position sensor 1 | [Ignition switch: ON] • Engine stopped • Shift lever: D (A/T, CVT), 1st (M/T) • Accelerator pedal: Fully released | More than 0.36V |
| | | | [Ignition switch: ON] • Engine stopped • Shift lever: D (A/T, CVT), 1st (M/T) • Accelerator pedal: Fully depressed | Less than 4.75V |
| 34 | O | Throttle position sensor 2 | [Ignition switch: ON] • Engine stopped • Shift lever: D (A/T, CVT), 1st (M/T) • Accelerator pedal: Fully released | Less than 4.75V |
| | | | [Ignition switch: ON] • Engine stopped • Shift lever: D (A/T, CVT), 1st (M/T) • Accelerator pedal: Fully depressed | More than 0.36V |
| 36 | Y | Sensor ground (Throttle position sensor) | [Engine is running] • Warm-up condition • Idle speed | Approximately 0V |
| 72 | V | Sensor power supply (Throttle position sensor) | [Ignition switch: ON] | Approximately 5V |

Diagnosis Procedure

INFOID:000000001702787

1. CHECK GROUND CONNECTIONS

1. Turn ignition switch OFF.
2. Loosen and retighten ground screw on the body.
Refer to [EC-142, "Ground Inspection"](#).

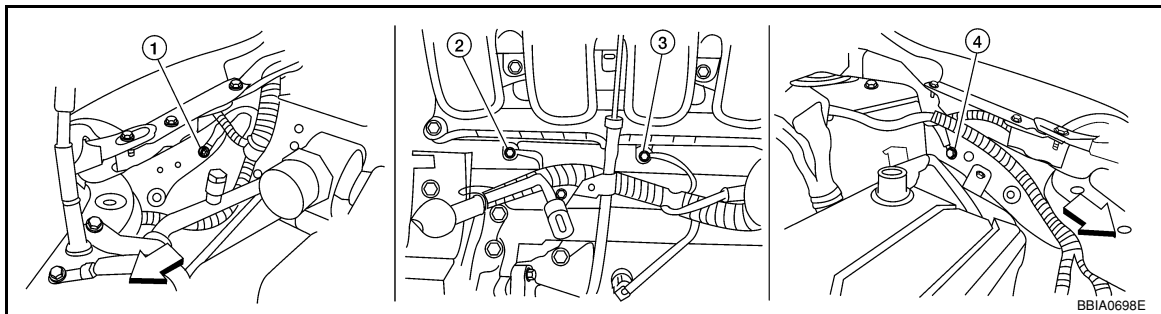

⇐: Vehicle front

1. Body ground E24
2. Engine ground F9
3. Engine ground F16
4. Body ground E15

OK or NG


- OK >> GO TO 2.
NG >> Repair or replace ground connections.

2. CHECK THROTTLE POSITION SENSOR 1 POWER SUPPLY CIRCUIT-I

DTC P0222, P0223 TP SENSOR

< SERVICE INFORMATION >

1. Disconnect electric throttle control actuator (1) harness connector.
 - ⇐: Vehicle front
2. Turn ignition switch ON.

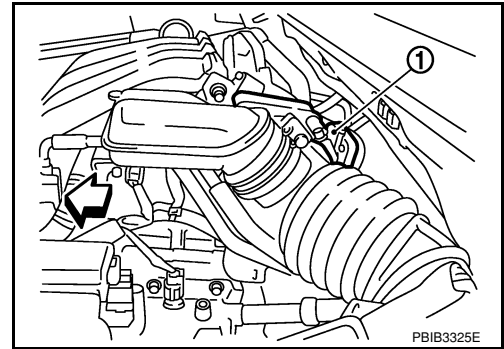


3. Check voltage between electric throttle control actuator terminal 2 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

OK or NG

- OK >> GO TO 3.
- NG >> Repair open circuit or short to ground or short to power in harness connectors.

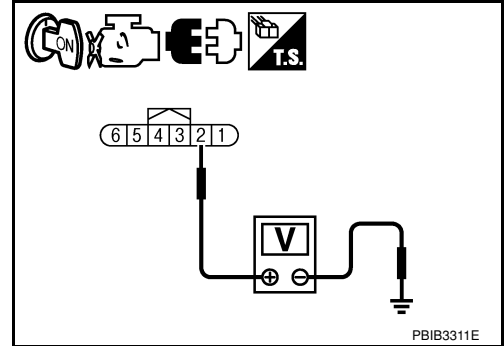

3. CHECK THROTTLE POSITION SENSOR 1 GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 36 and electric throttle control actuator terminal 4. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground or short to power.

OK or NG

- OK >> GO TO 4.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK THROTTLE POSITION SENSOR 1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 33 and electric throttle control actuator terminal 1. Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 5.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK THROTTLE POSITION SENSOR

Refer to [EC-283, "Component Inspection"](#).

OK or NG

- OK >> GO TO 7.
- NG >> GO TO 6.

6. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace the electric throttle control actuator.
2. Perform [EC-76, "Throttle Valve Closed Position Learning"](#).
3. Perform [EC-76, "Idle Air Volume Learning"](#).

DTC P0222, P0223 TP SENSOR

< SERVICE INFORMATION >

>> **INSPECTION END**

7. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**


Component Inspection

INFOID:000000001702788

THROTTLE POSITION SENSOR

1. Reconnect all harness connectors disconnected.
2. Perform [EC-76. "Throttle Valve Closed Position Learning"](#).
3. Turn ignition switch ON.
4. Set shift lever to D position (A/T, CVT) or 1st position (M/T).
5. Check voltage between ECM terminals 33 (TP sensor 1 signal), 34 (TP sensor 2 signal) and ground under the following conditions.

| Terminal | Accelerator pedal | Voltage |
|------------------------------------|-------------------|-----------------|
| 33 (Throttle position sensor 1) | Fully released | More than 0.36V |
| | Fully depressed | Less than 4.75V |
| 34 (Throttle position sensor 2) | Fully released | Less than 4.75V |
| | Fully depressed | More than 0.36V |

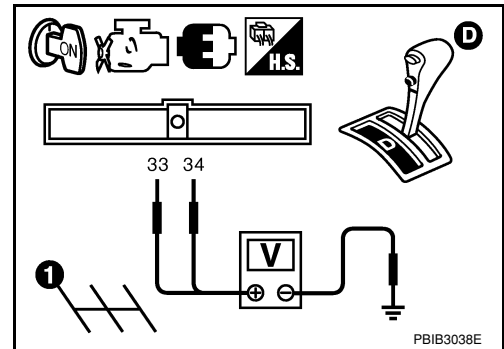

6. If NG, replace electric throttle control actuator and go to the next step.
7. Perform [EC-76. "Throttle Valve Closed Position Learning"](#).
8. Perform [EC-76. "Idle Air Volume Learning"](#).

Removal and Installation

INFOID:000000001702789

ELECTRIC THROTTLE CONTROL ACTUATOR

Refer to [EM-18](#).

DTC P0300 - P0304 MULTIPLE CYLINDER MISFIRE, NO. 1 - 4 CYLINDER MISFIRE

< SERVICE INFORMATION >

DTC P0300 - P0304 MULTIPLE CYLINDER MISFIRE, NO. 1 - 4 CYLINDER MISFIRE

On Board Diagnosis Logic

INFOID:000000001702790

When a misfire occurs, engine speed will fluctuate. If the engine speed fluctuates enough to cause the crankshaft position (CKP) sensor (POS) signal to vary, ECM can determine that a misfire is occurring.

| Sensor | Input Signal to ECM | ECM function |
|----------------------------------|---------------------|-------------------------------|
| Crankshaft position sensor (POS) | Engine speed | On board diagnosis of misfire |

The misfire detection logic consists of the following two conditions.

- One Trip Detection Logic (Three Way Catalyst Damage)**
 On the 1st trip that a misfire condition occurs that can damage the three way catalyst (TWC) due to overheating, the MIL will blink.
 When a misfire condition occurs, the ECM monitors the CKP sensor (POS) signal every 200 engine revolutions for a change.
 When the misfire condition decreases to a level that will not damage the TWC, the MIL will turn off.
 If another misfire condition occurs that can damage the TWC on a second trip, the MIL will blink.
 When the misfire condition decreases to a level that will not damage the TWC, the MIL will remain on.
 If another misfire condition occurs that can damage the TWC, the MIL will begin to blink again.
- Two Trip Detection Logic (Exhaust quality deterioration)**
 For misfire conditions that will not damage the TWC (but will affect vehicle emissions), the MIL will only light when the misfire is detected on a second trip. During this condition, the ECM monitors the CKP sensor signal every 1,000 engine revolutions.
 A misfire malfunction can be detected on any one cylinder or on multiple cylinders.

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|------------------------------------|----------------------------|---|
| P0300 0300 | Multiple cylinder misfire detected | Multiple cylinder misfire. | <ul style="list-style-type: none"> • Improper spark plug • Insufficient compression • Incorrect fuel pressure • Fuel injector circuit is open or shorted • Fuel injector • Intake air leak • The ignition signal circuit is open or shorted • Lack of fuel • Drive plate or flywheel • Air fuel ratio (A/F) sensor 1 • Incorrect PCV hose connection |
| P0301 0301 | No.1 cylinder misfire detected | No. 1 cylinder misfires. | |
| P0302 0302 | No. 2 cylinder misfire detected | No. 2 cylinder misfires. | |
| P0303 0303 | No. 3 cylinder misfire detected | No. 3 cylinder misfires. | |
| P0304 0304 | No. 4 cylinder misfire detected | No. 4 cylinder misfires. | |

DTC Confirmation Procedure

INFOID:000000001702791

CAUTION:

Always drive vehicle in safe manner according to traffic conditions and obey all traffic laws when driving.

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

 WITH CONSULT-II

DTC P0300 - P0304 MULTIPLE CYLINDER MISFIRE, NO. 1 - 4 CYLINDER MISFIRE

< SERVICE INFORMATION >

1. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-II.
2. Start engine and warm it up to normal operating temperature.
3. Turn ignition switch OFF and wait at least 10 seconds.
4. Restart engine and let it idle for about 15 minutes.
5. If 1st trip DTC is detected, go to [EC-285, "Diagnosis Procedure"](#).

| DATA MONITOR | |
|---------------|----------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |
| COOLAN TEMP/S | XXX °C |
| VHCL SPEED SE | XXX km/h |
| B/FUEL SCHDL | XXX msec |

PBIB0164E

NOTE:

If 1st trip DTC is not detected during above procedure, performing the following procedure is advised.

- a. Turn ignition switch OFF and wait at least 10 seconds.
- b. Start engine and drive the vehicle under the similar conditions to (1st trip) Freeze Frame Data for a certain time. Refer to table below.
Hold the accelerator pedal as steady as possible.

The similar conditions to (1st trip) Freeze Frame Data means the vehicle operation that the following condition should be satisfied at the same time:

| | |
|--|---|
| Engine speed | Engine speed in the freeze frame data ± 400 rpm |
| Vehicle speed | Vehicle speed in the freeze frame data ± 10 km/h (6 MPH) |
| Engine coolant temperature (T) condition | When the freeze frame data shows lower than 70°C (158°F), T should be lower than 70°C (158°F) |
| | When the freeze frame data shows higher than or equal to 70°C (158°F), T should be higher than or equal to 70°C (158°F) |

The time to driving varies according to the engine speed in the freeze frame data. Refer to the following table.

| Engine speed | Time |
|---------------------|---------------------------|
| Around 1,000 rpm | Approximately 10 minutes |
| Around 2,000 rpm | Approximately 5 minutes |
| More than 3,000 rpm | Approximately 3.5 minutes |

WITH GST

Follow the procedure "WITH CONSULT-II" above.

Diagnosis Procedure

INFOID:000000001702792

1. CHECK FOR INTAKE AIR LEAK AND PCV HOSE

1. Start engine and run it at idle speed.
2. Listen for the sound of the intake air leak.
3. Check PCV hose connection.

OK or NG

- OK >> GO TO 2.
NG >> Repair or replace.

2. CHECK FOR EXHAUST SYSTEM CLOGGING

Stop engine and visually check exhaust tube, three way catalyst and muffler for dents.

OK or NG

- OK >> GO TO 3.
NG >> Repair or replace.

3. PERFORM POWER BALANCE TEST

With CONSULT-II

DTC P0300 - P0304 MULTIPLE CYLINDER MISFIRE, NO. 1 - 4 CYLINDER MISFIRE

< SERVICE INFORMATION >


1. Perform "POWER BALANCE" in "ACTIVE TEST" mode.
2. Is there any cylinder which does not produce a momentary engine speed drop?

| ACTIVE TEST | |
|---------------|---------|
| POWER BALANCE | |
| MONITOR | |
| ENG SPEED | XXX rpm |
| MAS A/F SE-B1 | XXX V |
| | |
| | |
| | |
| | |
| | |

PBIB0133E

⊗ Without CONSULT-II

When disconnecting each fuel injector (1) harness connector one at a time, is there any cylinder which does not produce a momentary engine speed drop?

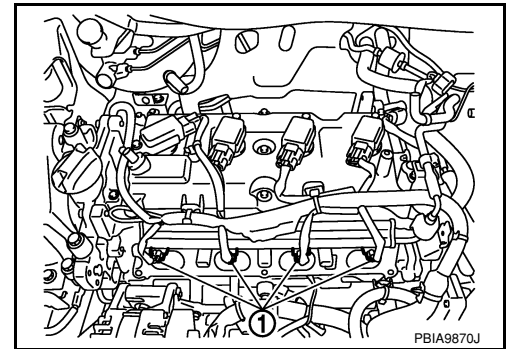

Yes or No


- Yes >> GO TO 4.
No >> GO TO 9.

4.CHECK FUEL INJECTOR

Does each fuel injector make an operating sound at idle?

Yes or No

- Yes >> GO TO 5.
No >> Check fuel injector(s) and circuit(s). Refer to [EC-521](#).

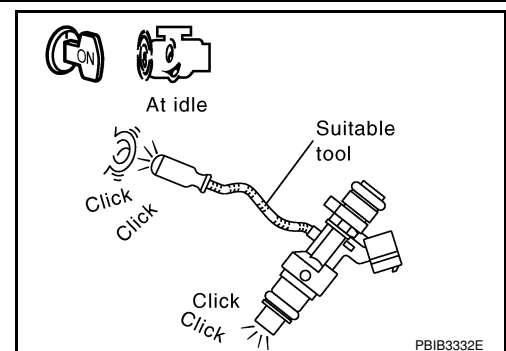

5.CHECK FUNCTION OF IGNITION COIL-I

CAUTION:


Do the following procedure in the place where ventilation is good without the combustible.

1. Turn ignition switch OFF.
2. Remove fuel pump fuse (1) in IPDM E/R (2) to release fuel pressure.

NOTE:

Do not use CONSULT-II to release fuel pressure, or fuel pressure applies again during the following procedure.

- ↙: Vehicle front
3. Start engine.
 4. After engine stalls, crank it two or three times to release all fuel pressure.
 5. Turn ignition switch OFF.
 6. Remove all ignition coil harness connectors to avoid the electrical discharge from the ignition coils.
 7. Remove ignition coil and spark plug of the cylinder to be checked.

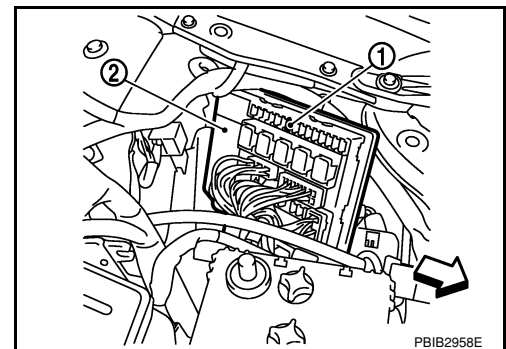

DTC P0300 - P0304 MULTIPLE CYLINDER MISFIRE, NO. 1 - 4 CYLINDER MISFIRE

< SERVICE INFORMATION >

8. Crank engine for 5 seconds or more to remove combustion gas in the cylinder.
9. Connect spark plug and harness connector to ignition coil.
10. Fix ignition coil using a rope etc. with gap of 13 - 17 mm between the edge of the spark plug and grounded metal portion as shown in the figure.
11. Crank engine for about 3 seconds, and check whether spark is generated between the spark plug and the grounded metal portion.

Spark should be generated.

CAUTION:

- Do not approach to the spark plug and the ignition coil within 50cm. Be careful not to get an electrical shock while checking, because the electrical discharge voltage becomes 20kV or more.
- It might cause to damage the ignition coil if the gap of more than 17 mm is taken.

NOTE:

When the gap is less than 13 mm, the spark might be generated even if the coil is malfunctioning.

OK or NG

OK >> GO TO 9.

NG >> GO TO 6.

6.CHECK FUNCTION OF IGNITION COIL-II

1. Turn ignition switch OFF.
2. Disconnect spark plug and connect a known-good spark plug.
3. Crank engine for about 3 seconds, and recheck whether spark is generated between the spark plug and the grounded metal portion.

Spark should be generated.

OK or NG

OK >> GO TO 7.

NG >> Check ignition coil, power transistor and their circuits. Refer to [EC-531](#).


7.CHECK SPARK PLUG

Check the initial spark plug for fouling, etc.

OK or NG

OK >> Replace spark plug(s) with standard type one(s). For spark plug type, refer to [MA-17. "Changing Spark Plugs"](#).

NG >> 1. Repair or clean spark plug.
2. GO TO 8.

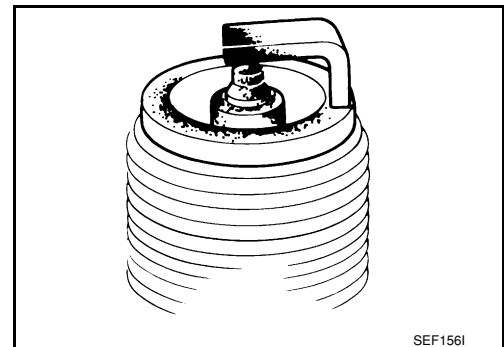

8.CHECK FUNCTION OF IGNITION COIL-III

1. Reconnect the initial spark plugs.
2. Crank engine for about three seconds, and recheck whether spark is generated between the spark plug and the grounded portion.

Spark should be generated.

OK or NG

OK >> **INSPECTION END**

NG >> Replace spark plug(s) with standard type one(s). For spark plug type, refer to [MA-17. "Changing Spark Plugs"](#).

9.CHECK COMPRESSION PRESSURE

A
EC
C
D
E
F
G
H
I
J
K
L
M
N
O
P

DTC P0300 - P0304 MULTIPLE CYLINDER MISFIRE, NO. 1 - 4 CYLINDER MISFIRE

< SERVICE INFORMATION >

Check compression pressure. Refer to [EM-62. "On-Vehicle Service"](#).

OK or NG

OK >> GO TO 10.

NG >> Check pistons, piston rings, valves, valve seats and cylinder head gaskets.

10. CHECK FUEL PRESSURE

1. Install all removed parts.
2. Release fuel pressure to zero. Refer to [EC-78. "Fuel Pressure Check"](#).
3. Install fuel pressure gauge and check fuel pressure. Refer to [EC-78. "Fuel Pressure Check"](#).

At idling: Approximately 350 kPa (3.57 kg/cm², 51 psi)

OK or NG

OK >> GO TO 12.

NG >> GO TO 11.

11. DETECT MALFUNCTIONING PART

Check the following.

- Fuel pump and circuit (Refer to [EC-526.](#))
- Fuel pressure regulator (Refer to [EC-78. "Fuel Pressure Check"](#).)
- Fuel lines (Refer to [EM-33.](#))
- Fuel filter for clogging

>> Repair or replace.

12. CHECK IGNITION TIMING

Check the following items. Refer to [EC-69. "Basic Inspection"](#).

| Items | Specifications |
|-------------------|---|
| Target idle speed | A/T: 700 ± 50 rpm (in P or N position) |
| | CVT: 700 ± 50 rpm (in P or N position) |
| | M/T: 700 ± 50 rpm (in Neutral position) |
| Ignition timing | A/T: 13 ± 5° BTDC (in P or N position) |
| | CVT: 13 ± 5° BTDC (in Neutral position) |
| | M/T: 13 ± 5° BTDC (in Neutral position) |

OK or NG


OK >> GO TO 13.

NG >> Follow the [EC-69. "Basic Inspection"](#).

13. CHECK AIR FUEL RATIO (A/F) SENSOR 1 CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect air fuel ratio (A/F) sensor 1 harness connector (1).
 - Air fuel ratio (A/F) sensor 1 (2)
3. Disconnect ECM harness connector.
4. Check harness continuity between the following terminals. Refer to Wiring Diagram.

| A/F sensor 1 terminal | ECM terminal |
|-----------------------|--------------|
| 1 | 49 |
| 2 | 53 |

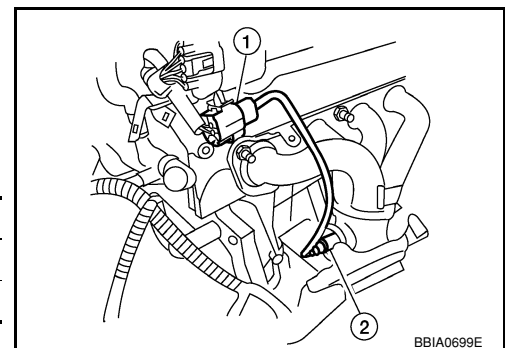

BBIA0699E

Continuity should exist.

5. Check harness continuity between ECM terminals 49, 53 or A/F sensor 1 terminals 1, 2 and ground. Refer to Wiring Diagram.

DTC P0300 - P0304 MULTIPLE CYLINDER MISFIRE, NO. 1 - 4 CYLINDER MISFIRE

< SERVICE INFORMATION >

Continuity should not exist.

6. Also check harness for short to power.

OK or NG

OK >> GO TO 14.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

14. CHECK AIR FUEL RATIO (A/F) SENSOR 1 HEATER

Refer to [EC-154, "Component Inspection"](#).

OK or NG

OK >> GO TO 16.

NG >> GO TO 15.

15. REPLACE AIR FUEL RATIO (A/F) SENSOR 1

Replace air fuel ratio (A/F) sensor 1.

CAUTION:

- Discard any A/F sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new A/F sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

>> INSPECTION END

16. CHECK MASS AIR FLOW SENSOR

 **With CONSULT-II**

1. Start engine and warm it up to normal operating temperature.
2. Check mass air flow sensor signal in "DATA MONITOR" mode with CONSULT-II.

at idling : 1.0 - 4.0 g·m/sec

at 2,500 rpm : 2.0 - 10.0 g·m/sec

 **With GST**

1. Start engine and warm it up to normal operating temperature.
2. Check mass air flow sensor signal in Service \$01 with GST.

at idling : 1.0 - 4.0 g·m/sec

at 2,500 rpm : 2.0 - 10.0 g·m/sec

OK or NG

OK >> GO TO 17.

NG >> Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or ground. Refer to [EC-167](#).

17. CHECK SYMPTOM MATRIX CHART

Check items on the rough idle symptom in [EC-88, "Symptom Matrix Chart"](#).

OK or NG

OK >> GO TO 18.

NG >> Repair or replace.

18. ERASE THE 1ST TRIP DTC

Some tests may cause a 1st trip DTC to be set.

Erase the 1st trip DTC from the ECM memory after performing the tests. Refer to [EC-47, "Emission-related Diagnostic Information"](#).

>> GO TO 19.

19. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

**DTC P0300 - P0304 MULTIPLE CYLINDER MISFIRE, NO. 1 - 4 CYLINDER MIS-
FIRE**

< SERVICE INFORMATION >

>> INSPECTION END

DTC P0327, P0328 KS

< SERVICE INFORMATION >


DTC P0327, P0328 KS

Component Description

INFOID:000000001702793

The knock sensor (1) is attached to the cylinder block. It senses engine knocking using a piezoelectric element. A knocking vibration from the cylinder block is sensed as vibrational pressure. This pressure is converted into a voltage signal and sent to the ECM.

- ↶: Vehicle front

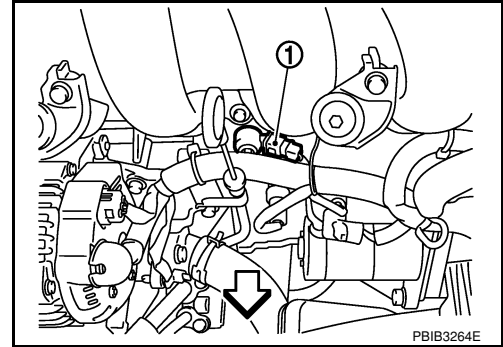

On Board Diagnosis Logic

INFOID:000000001702794

The MIL will not light up for these self-diagnoses.

| DTC No. | Trouble Diagnosis Name | DTC Detected Condition | Possible Cause |
|---------------|---------------------------------|---|--|
| P0327 0327 | Knock sensor circuit low input | An excessively low voltage from the sensor is sent to ECM. | <ul style="list-style-type: none"> • Harness or connectors (Knock sensor circuit is open or shorted.) • Knock sensor |
| P0328 0328 | Knock sensor circuit high input | An excessively high voltage from the sensor is sent to ECM. | |

DTC Confirmation Procedure

INFOID:000000001702795

NOTE:


If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

④ WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-II.
2. Start engine and run it for at least 5 seconds at idle speed.
3. If 1st trip DTC is detected, go to [EC-293. "Diagnosis Procedure"](#).

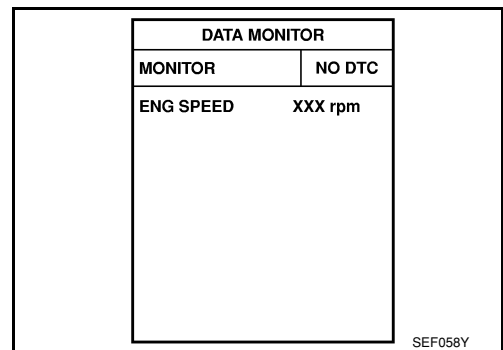

④ WITH GST

Follow the procedure "WITH CONSULT-II" above.

DTC P0327, P0328 KS



< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001702796

EC-KS-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

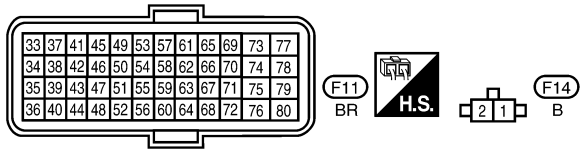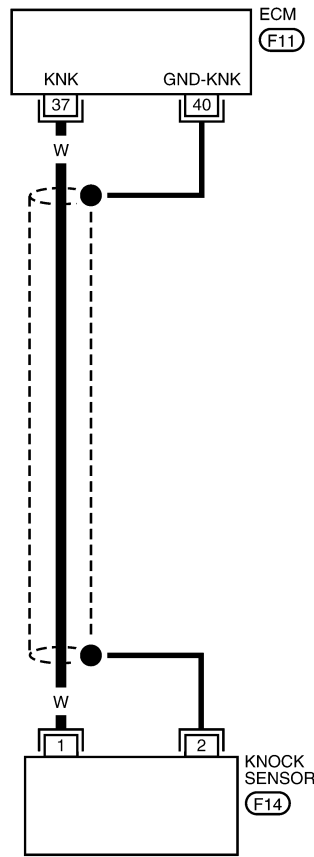

BBWA2637E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

DTC P0327, P0328 KS

< SERVICE INFORMATION >

| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------------|---------------|---------------------------------|--|--------------------|
| 37 | W | Knock sensor | [Engine is running] • Idle speed | Approximately 2.5V |
| 40 | — | Sensor ground (Knock sensor) | [Engine is running] • Warm-up condition • Idle speed | Approximately 0V |

Diagnosis Procedure

INFOID:000000001702797

1. CHECK KNOCK SENSOR INPUT SIGNAL CIRCUIT-I

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check resistance between ECM terminal 37 and ground. Refer to Wiring Diagram.

NOTE:

It is necessary to use an ohmmeter which can measure more than 10 MΩ.

Resistance: Approximately 532 - 588kΩ [at 20°C (68°F)]

4. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 2.

2. CHECK KNOCK SENSOR INPUT SIGNAL CIRCUIT-II


1. Disconnect knock sensor (1) harness connector.
- ⇐: Vehicle front
2. Check harness continuity between ECM terminal 37 and knock sensor terminal 1. Refer to Wiring Diagram.

Continuity should exist.

3. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 3.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

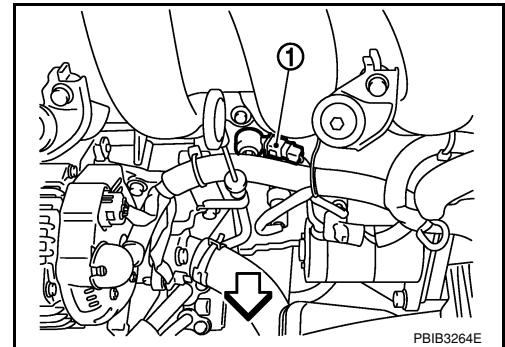

3. CHECK KNOCK SENSOR

Refer to [EC-294, "Component Inspection"](#).


OK or NG

- OK >> GO TO 6.
- NG >> Replace knock sensor.

4. CHECK GROUND CONNECTIONS

Loosen and retighten ground screws on the body.

Refer to [EC-142, "Ground Inspection"](#).

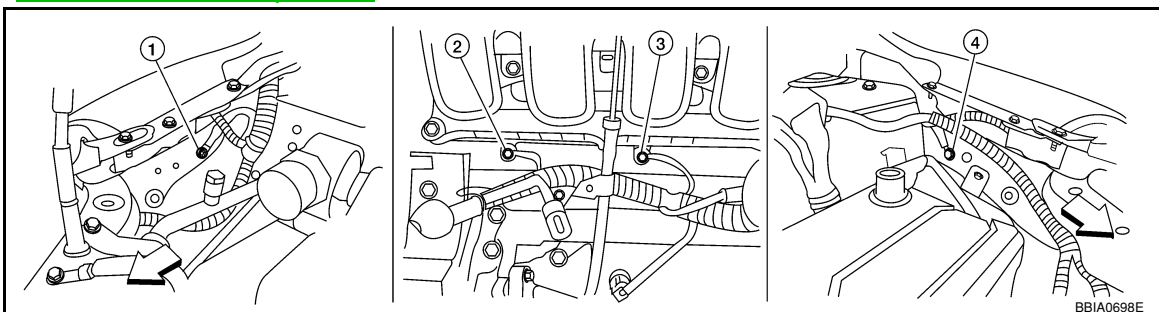

DTC P0327, P0328 KS

< SERVICE INFORMATION >

↶ Vehicle front

1. Body ground E24
2. Engine ground F9
3. Engine ground F16
4. Body ground E15

OK or NG

- OK >> GO TO 5.
NG >> Repair or replace ground connections.

5. CHECK KNOCK SENSOR SHIELD CIRCUIT FOR OPEN AND SHORT

1. Reconnect knock sensor harness connector.
2. Check harness continuity between ECM terminal 40 and knock sensor terminal 2.
Refer to Wiring Diagram.

Continuity should exist

3. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 6.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**

Component Inspection

INFOID:000000001702798

KNOCK SENSOR

1. Check resistance between knock sensor terminal 1 and ground.

NOTE:


It is necessary to use an ohmmeter which can measure more than 10 MΩ.

Resistance: Approximately 532 - 588kΩ [at 20°C (68°F)]

CAUTION:

Do not use any knock sensors that have been dropped or physically damaged. Use only new ones.

2. If NG, replace knock sensor.

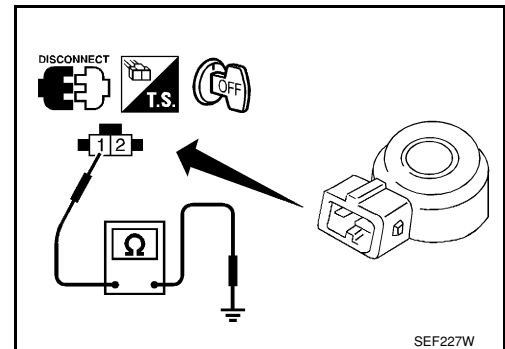

Removal and Installation

INFOID:000000001702799

KNOCK SENSOR

Refer to [EM-76](#).

DTC P0335 CKP SENSOR (POS)

< SERVICE INFORMATION >


DTC P0335 CKP SENSOR (POS)

Component Description


INFOID:000000001702800

The crankshaft position sensor (POS) is located on the cylinder block rear housing facing the gear teeth (cogs) of the signal plate at the end of the crankshaft. It detects the fluctuation of the engine revolution. The sensor consists of a permanent magnet and Hall IC. When the engine is running, the high and low parts of the teeth cause the gap with the sensor to change. The changing gap causes the magnetic field near the sensor to change. Due to the changing magnetic field, the voltage from the sensor changes. The ECM receives the voltage signal and detects the fluctuation of the engine revolution.

ECM receives the signals as shown in the figure.

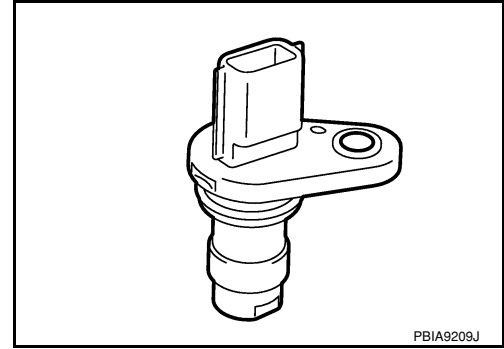

PBIA9209J

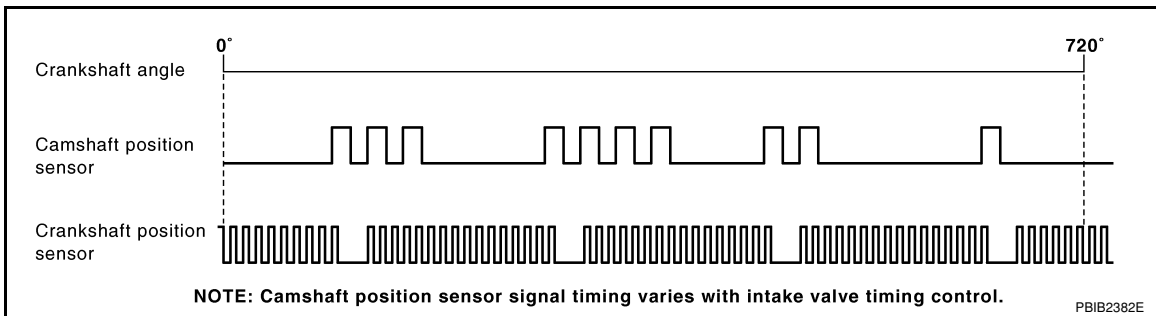

PBIB2382E

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702801

Specification data are reference values.

| MONITOR ITEM | CONDITION | SPECIFICATION |
|--------------|---|---|
| ENG SPEED | • Run engine and compare CONSULT-II value with the tachometer indication. | Almost the same speed as the tachometer indication. |

On Board Diagnosis Logic

INFOID:000000001702802

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|--|---|---|
| P0335 0335 | Crankshaft position sensor (POS) circuit | <ul style="list-style-type: none"> • The crankshaft position sensor (POS) signal is not detected by the ECM during the first few seconds of engine cranking. • The proper pulse signal from the crankshaft position sensor (POS) is not sent to ECM while the engine is running. • The crankshaft position sensor (POS) signal is not in the normal pattern during engine running. | <ul style="list-style-type: none"> • Harness or connectors [Crankshaft position sensor (POS) circuit is open or shorted.] (Accelerator pedal position sensor circuit is shorted.) (Refrigerant pressure sensor circuit is shorted.) (EVAP control system pressure sensor circuit is shorted.) • Crankshaft position sensor (POS) • Accelerator pedal position sensor • Refrigerant pressure sensor • EVAP control system pressure sensor • Signal plate |

DTC Confirmation Procedure

INFOID:000000001702803

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

DTC P0335 CKP SENSOR (POS)

< SERVICE INFORMATION >

Before performing the following procedure, confirm that battery voltage is more than 10.5V with ignition switch ON.

④ WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-II.
2. Crank engine for at least 2 seconds and run it for at least 5 seconds at idle speed.
3. If 1st trip DTC is detected, go to [EC-298, "Diagnosis Procedure"](#).

| DATA MONITOR | |
|--------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |

SEF058Y

④ WITH GST

Follow the procedure "WITH CONSULT-II" above.

DTC P0335 CKP SENSOR (POS)



< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001702804

EC-POS-01

— : DETECTABLE LINE FOR DTC
 - - - : NON-DETECTABLE LINE FOR DTC

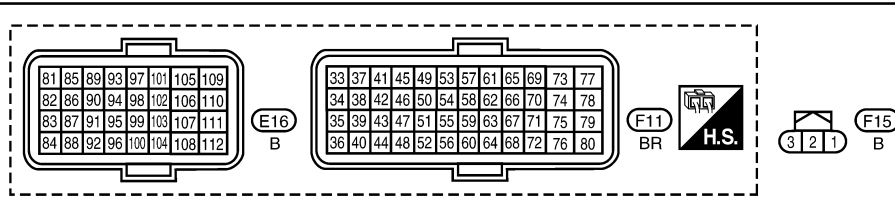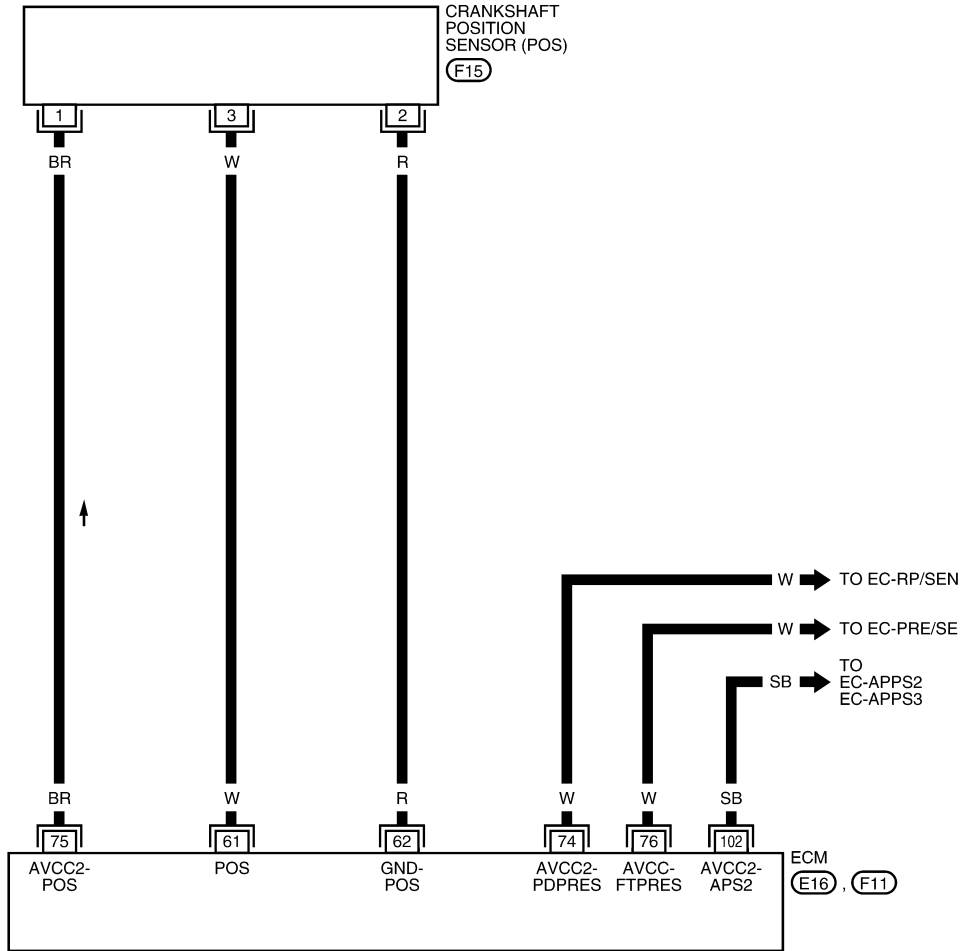

BBWA3071E



Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.

CAUTION:

DTC P0335 CKP SENSOR (POS)

< SERVICE INFORMATION >

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.
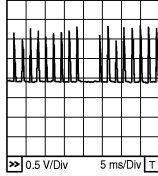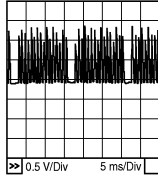
| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------------|---------------|--|---|--|
| 61 | W | Crankshaft position sensor (POS) | [Engine is running] <ul style="list-style-type: none"> • Warm-up condition • Idle speed NOTE: The pulse cycle changes depending on rpm at idle | 0 - 1.0V★  <small>MBIB1453E</small> |
| | | | [Engine is running] <ul style="list-style-type: none"> • Engine speed: 2,000 rpm | 0 - 1.0V★  <small>MBIB1454E</small> |
| 62 | R | Sensor ground [Crankshaft position sensor (POS)] | [Engine is running] <ul style="list-style-type: none"> • Warm-up condition • Idle speed | Approximately 0V |
| 74 | W | Sensor power supply (Refrigerant pressure sensor) | [Ignition switch: ON] | Approximately 5V |
| 75 | BR | Sensor power supply [Crankshaft position sensor (POS)] | [Ignition switch: ON] | Approximately 5V |
| 76 | W | EVAP control system pressure sensor power supply | [Ignition switch: ON] | Approximately 5V |
| 102 | SB | Sensor power supply (APP sensor 2) | [Ignition switch: ON] | Approximately 5V |


★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnosis Procedure

INFOID:000000001702805

1. CHECK GROUND CONNECTIONS

1. Turn ignition switch OFF.
2. Loosen and retighten ground screws on the body.
Refer to [EC-142. "Ground Inspection"](#).

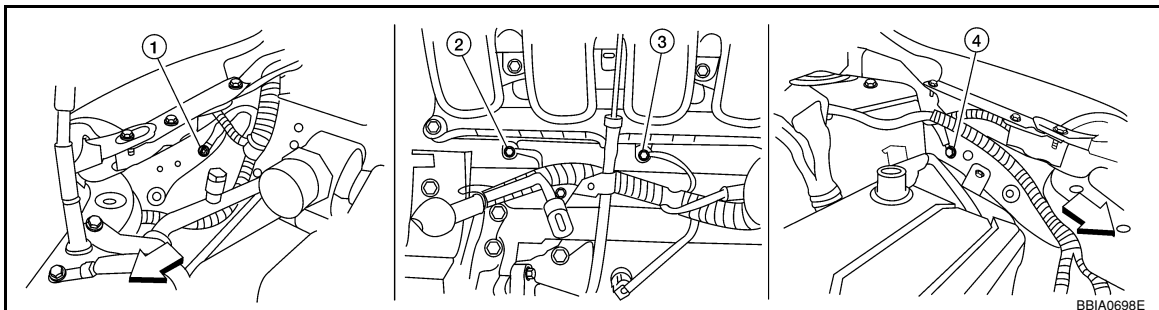

↶ Vehicle front

DTC P0335 CKP SENSOR (POS)

< SERVICE INFORMATION >


1. Body ground E24
2. Engine ground F9
3. Engine ground F16
4. Body ground E15

OK or NG

- OK >> GO TO 2.
 NG >> Repair or replace ground connections.

2. CHECK CRANKSHAFT POSITION (CKP) SENSOR (POS) POWER SUPPLY CIRCUIT-I

1. Disconnect crankshaft position (CKP) sensor (POS) (1) harness connector.
2. Turn ignition switch ON.

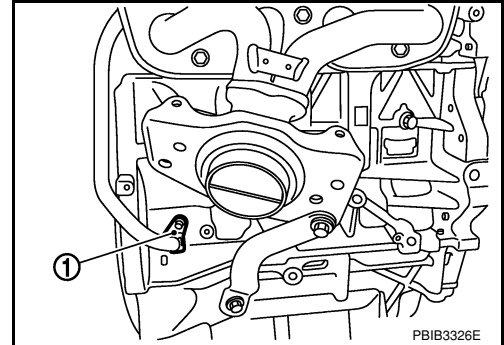


3. Check voltage between CKP sensor (POS) terminal 1 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

OK or NG

- OK >> GO TO 8.
 NG >> GO TO 3.

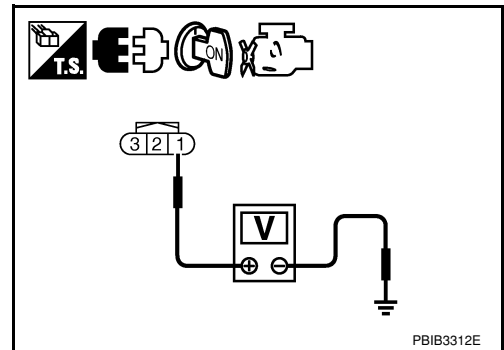

3. CHECK CKP SENSOR (POS) POWER SUPPLY CIRCUIT-II

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between CKP sensor (POS) terminal 1 and ECM terminal 75. Refer to Wiring Diagram.

Continuity should exist.

OK or NG

- OK >> GO TO 4.
 NG >> Repair open circuit.

4. CHECK COMPONENTS POWER SUPPLY

Check harness for short to power and short to ground, between the following terminals.

| ECM terminal | Sensor terminal | Reference Wiring Diagram |
|--------------|--|--|
| 74 | Refrigerant pressure sensor terminal 3 | EC-542. "Wiring Diagram" |
| 75 | Crankshaft position sensor (POS) terminal 1 | EC-297. "Wiring Diagram" |
| 76 | EVAP control system pressure sensor terminal 3 | EC-357. "Wiring Diagram" |
| 102 | APP sensor terminal 5 | EC-482. "Wiring Diagram" |

OK or NG

- OK >> GO TO 5.
 NG >> Repair short to ground or short to power in harness or connectors.

5. CHECK COMPONENTS

DTC P0335 CKP SENSOR (POS)

< SERVICE INFORMATION >

Check the following.

- Refrigerant pressure sensor. (Refer to [MTC-22](#).)
- EVAP control system pressure sensor. (Refer to [EC-361](#). "Component Inspection".)

OK or NG

- OK >> GO TO 6.
NG >> Replace malfunctioning components.

6. CHECK APP SENSOR

Refer to [EC-485](#). "Component Inspection".

OK or NG

- OK >> GO TO 8.
NG >> GO TO 7.

7. REPLACE ACCELERATOR PEDAL ASSEMBLY

1. Replace accelerator pedal assembly.
2. Perform [EC-76](#). "Accelerator Pedal Released Position Learning".
3. Perform [EC-76](#). "Throttle Valve Closed Position Learning".
4. Perform [EC-76](#). "Idle Air Volume Learning".

>> **INSPECTION END**

8. CHECK CKP SENSOR (POS) GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between CKP sensor (POS) terminal 2 and ECM terminal 62.
Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 9.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

9. CHECK CKP SENSOR (POS) INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between CKP sensor (POS) terminal 3 and ECM terminal 61.
Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 10.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

10. CHECK CRANKSHAFT POSITION SENSOR (POS)

Refer to [EC-301](#). "Component Inspection".

OK or NG

- OK >> GO TO 11.
NG >> Replace crankshaft position sensor (POS).

11. CHECK GEAR TOOTH

Visually check for chipping signal plate gear tooth.

OK or NG

- OK >> GO TO 12.
NG >> Replace the signal plate.

12. CHECK INTERMITTENT INCIDENT

DTC P0335 CKP SENSOR (POS)

< SERVICE INFORMATION >

Refer to [EC-136](#).


>> **INSPECTION END**

Component Inspection

INFOID:000000001702806


CRANKSHAFT POSITION SENSOR (POS)

1. Loosen the fixing bolt of the sensor.
2. Disconnect crankshaft position sensor (POS) harness connector.
3. Remove the sensor.
4. Visually check the sensor for chipping.

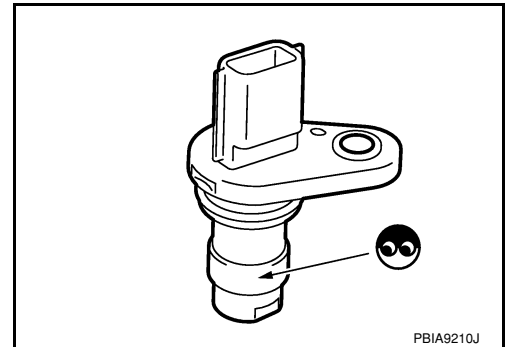

5. Check resistance as shown in the figure.

| Terminal No. (Polarity) | Resistance Ω [at 25°C (77°F)] |
|-------------------------|--------------------------------------|
| 1 (+) - 2 (-) | Except 0 or ∞ |
| 1 (+) - 3 (-) | |
| 2 (+) - 3 (-) | |

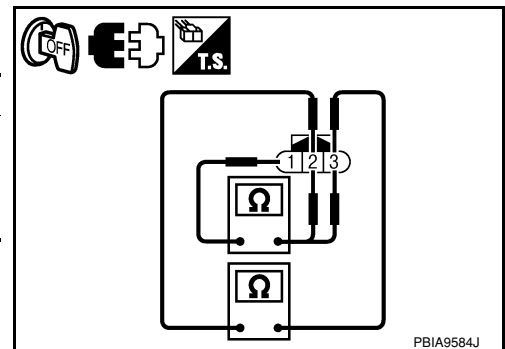

6. If NG, replace crankshaft position sensor (POS).

Removal and Installation

INFOID:000000001702807

CRANKSHAFT POSITION SENSOR (POS)

Refer to [EM-76](#).

DTC P0340 CMP SENSOR (PHASE)


< SERVICE INFORMATION >

DTC P0340 CMP SENSOR (PHASE)

Component Description


INFOID:000000001702808

The camshaft position sensor (PHASE) senses the protrusion of camshaft (INT) to identify a particular cylinder. The camshaft position sensor (PHASE) senses the piston position. When the crankshaft position sensor (POS) system becomes inoperative, the camshaft position sensor (PHASE) provides various controls of engine parts instead, utilizing timing of cylinder identification signals. The sensor consists of a permanent magnet and Hall IC. When engine is running, the high and low parts of the teeth cause the gap with the sensor to change. The changing gap causes the magnetic field near the sensor to change. Due to the changing magnetic field, the voltage from the sensor changes.

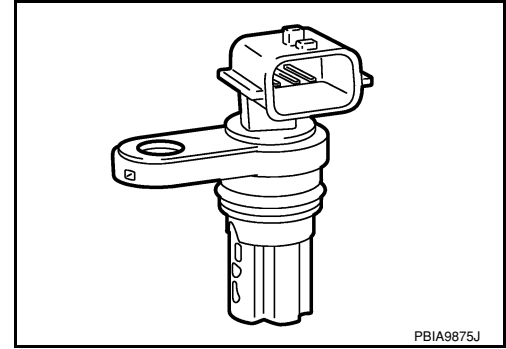

PBIA9875J

ECM receives the signals as shown in the figure.

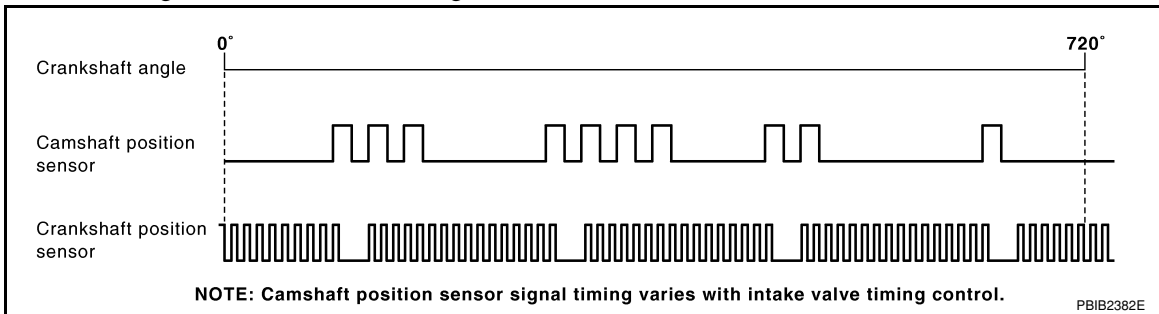

PBIB2382E

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702809

Specification data are reference values.

| MONITOR ITEM | CONDITION | SPECIFICATION |
|--------------|---|---|
| ENG SPEED | <ul style="list-style-type: none"> Run engine and compare CONSULT-II value with the tachometer indication. | Almost the same speed as the tachometer indication. |

On Board Diagnosis Logic

INFOID:000000001702810

NOTE:

If DTC P0340 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to [EC-400](#).

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|--|---|--|
| P0340 0340 | Camshaft position sensor (PHASE) circuit | <ul style="list-style-type: none"> The cylinder No. signal is not sent to ECM for the first few seconds during engine cranking. The cylinder No. signal is not set to ECM during engine running. The cylinder No. signal is not in the normal pattern during engine running. | <ul style="list-style-type: none"> Harness or connectors [Camshaft position sensor (PHASE) circuit is open or shorted.] Camshaft position sensor (PHASE) Camshaft (INT) Starter motor (Refer to SC-8.) Starting system circuit (Refer to SC-8) Dead (Weak) battery |

DTC Confirmation Procedure

INFOID:000000001702811

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10.5V with ignition switch ON.

Ⓟ WITH CONSULT-II

DTC P0340 CMP SENSOR (PHASE)

< SERVICE INFORMATION >

1. Turn ignition switch ON.
2. Select "DATA MONITOR" mode with CONSULT-II.
3. Crank engine for at least 2 seconds and run it for at least 5 seconds at idle speed.
4. If 1st trip DTC is detected, go to [EC-305, "Diagnosis Procedure"](#).
If 1st trip DTC is not detected, go to next step.
5. Maintain engine speed at more than 800 rpm for at least 5 seconds.
6. If 1st trip DTC is detected, go to [EC-305, "Diagnosis Procedure"](#).

| DATA MONITOR | |
|--------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |

SEF058Y

WITH GST

Follow the procedure "WITH CONSULT-II" above.

A

EC

C

D

E

F

G

H

I

J

K

L

M

N

O

P

DTC P0340 CMP SENSOR (PHASE)



< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001702812

EC-PHASE-01

— : DETECTABLE LINE FOR DTC
 - - - : NON-DETECTABLE LINE FOR DTC

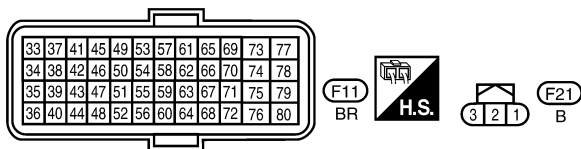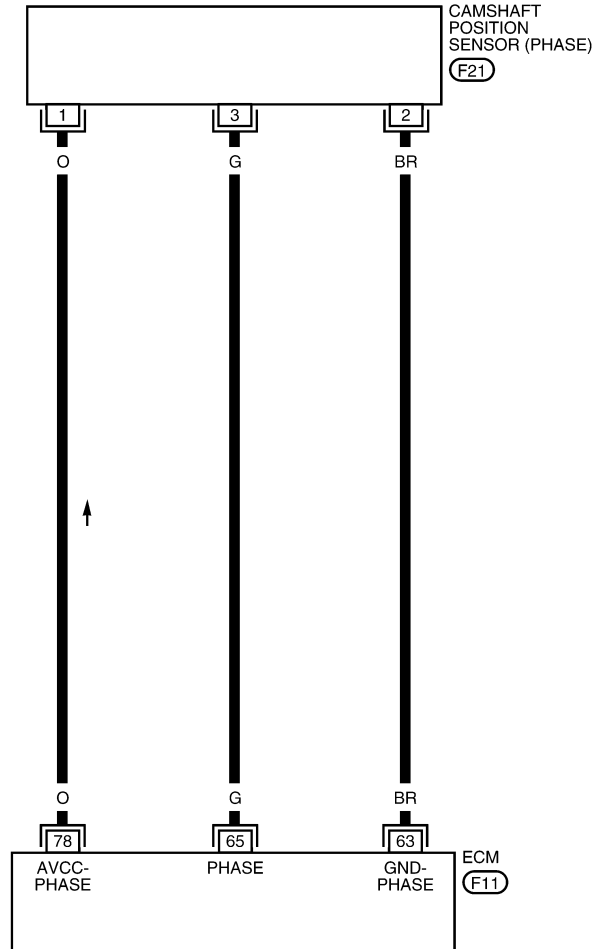

BBWA2639E



Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.

CAUTION:

DTC P0340 CMP SENSOR (PHASE)

< SERVICE INFORMATION >

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.
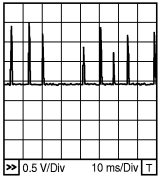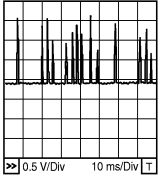
| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------------|---------------|--|---|--|
| 63 | BR | Sensor ground [Camshaft position sensor (PHASE)] | [Engine is running] • Warm-up condition • Idle speed | Approximately 0V |
| 65 | G | Camshaft position sensor (PHASE) | [Engine is running] • Warm-up condition • Idle speed NOTE: The pulse cycle changes depending on rpm at idle | 0 - 1.0V★  |
| | | | [Engine is running] • Engine speed: 2,000 rpm | 0 - 1.0V★  |
| 78 | O | Sensor power supply [Camshaft position sensor (PHASE)] | [Ignition switch: ON] | Approximately 5V |

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnosis Procedure

INFOID:000000001702813

1. CHECK STARTING SYSTEM

Turn ignition switch to START position.

Does the engine turn over?

Does the starter motor operate?


Yes or No

Yes >> GO TO 2.

No >> Check starting system. (Refer to [SC-8](#).)

2. CHECK GROUND CONNECTIONS

1. Turn ignition switch OFF.
2. Loosen and retighten ground screws on the body.
Refer to [EC-142](#), "Ground Inspection".

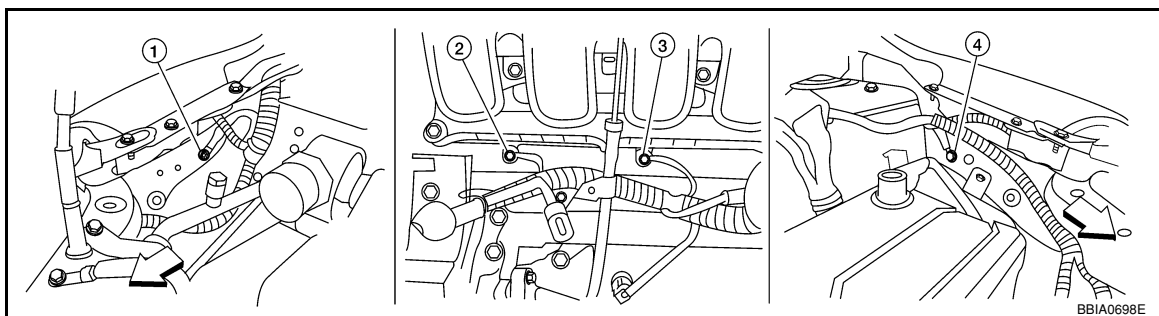

DTC P0340 CMP SENSOR (PHASE)

< SERVICE INFORMATION >

↩: Vehicle front


1. Body ground E24
2. Engine ground F9
3. Engine ground F16
4. Body ground E15

OK or NG

- OK >> GO TO 3.
NG >> Repair or replace ground connections.

3.CHECK CAMSHAFT POSITION (CMP) SENSOR (PHASE) POWER SUPPLY CIRCUIT

1. Disconnect camshaft position (CMP) sensor (PHASE) (1) harness connector.
- ↩: Vehicle front
2. Turn ignition switch ON.

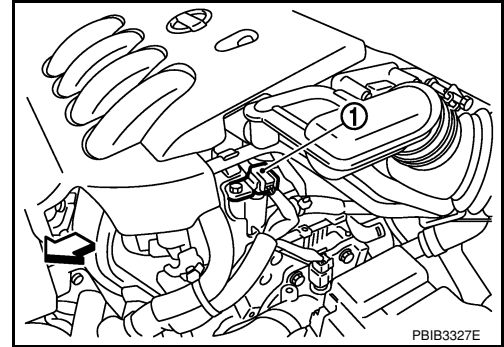


3. Check voltage between CMP sensor (PHASE) terminal 1 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

OK or NG

- OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

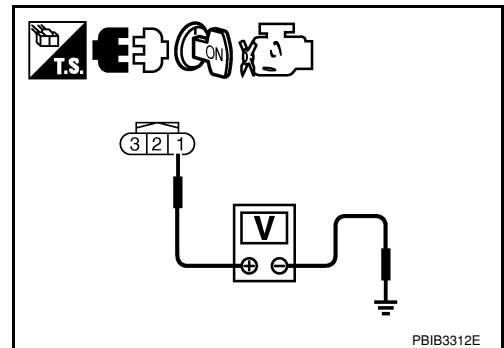

4.CHECK CMP SENSOR (PHASE) GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between CMP sensor (PHASE) terminal 2 and ECM terminal 63. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 5.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5.CHECK CMP SENSOR (PHASE) INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between CMP sensor (PHASE) terminal 3 and ECM terminal 65. Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 6.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

6.CHECK CAMSHAFT POSITION SENSOR (PHASE)

DTC P0340 CMP SENSOR (PHASE)

< SERVICE INFORMATION >

Refer to [EC-307](#). "Component Inspection".

OK or NG

- OK >> GO TO 7.
- NG >> Replace camshaft position sensor (PHASE).


7. CHECK CAMSHAFT (INTAKE)

Check the following.

- Accumulation of debris to the signal plate of camshaft (1) rear end
- Chipping signal plate of camshaft rear end

OK or NG

- OK >> GO TO 8.
- NG >> Remove debris and clean the signal plate of camshaft rear end or replace camshaft.

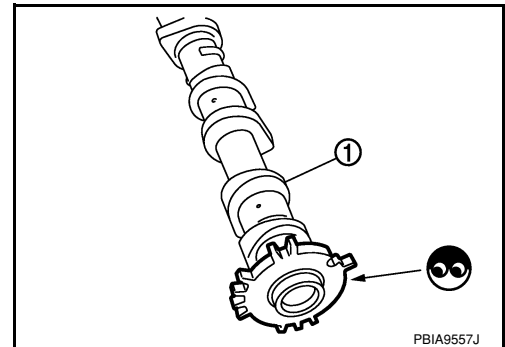

8. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).


>> **INSPECTION END**

Component Inspection

INFOID:000000001702814


CAMSHAFT POSITION SENSOR (PHASE)

1. Loosen the fixing bolt of the sensor.
2. Disconnect camshaft position sensor (PHASE) harness connector.
3. Remove the sensor.
4. Visually check the sensor for chipping.

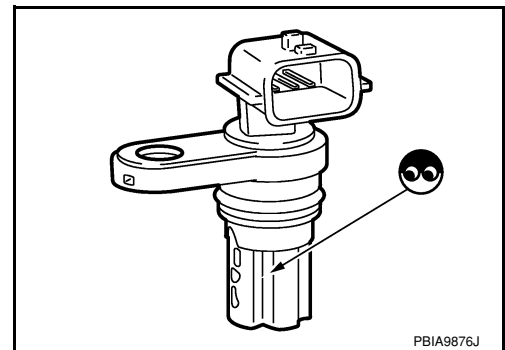

5. Check resistance as shown in the figure.

| Terminal No. (Polarity) | Resistance Ω [at 25°C (77°F)] |
|-------------------------|--------------------------------------|
| 1 (+) - 2 (-) | Except 0 or ∞ |
| 1 (+) - 3 (-) | |
| 2 (+) - 3 (-) | |

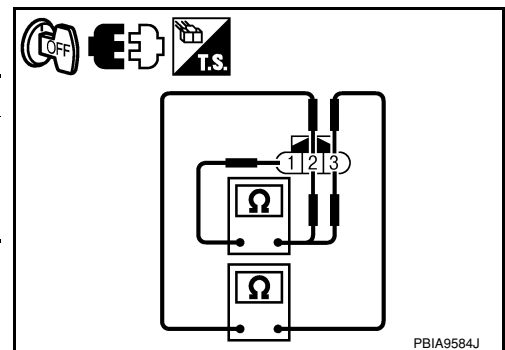

6. If NG, replace camshaft position sensor (PHASE).

Removal and Installation

INFOID:000000001702815

CAMSHAFT POSITION SENSOR (PHASE)

Refer to [EM-47](#).

DTC P0420 THREE WAY CATALYST FUNCTION

< SERVICE INFORMATION >

DTC P0420 THREE WAY CATALYST FUNCTION


On Board Diagnosis Logic

INFOID:000000001702816

The ECM monitors the switching frequency ratio of air fuel ratio (A/F) sensor 1 and heated oxygen sensor 2.

A three way catalyst (manifold) with high oxygen storage capacity will indicate a low switching frequency of heated oxygen sensor 2. As oxygen storage capacity decreases, the heated oxygen sensor 2 switching frequency will increase.

When the frequency ratio of air fuel ratio (A/F) sensor 1 and heated oxygen sensor 2 approaches a specified limit value, the three way catalyst (manifold) malfunction is diagnosed.

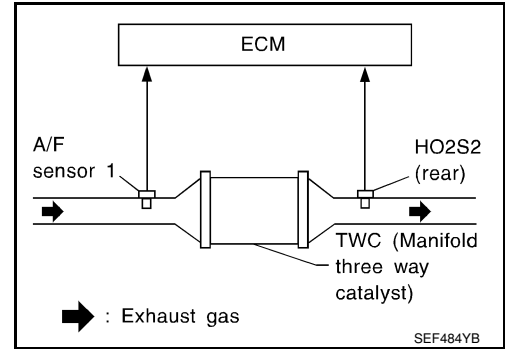

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|--|---|---|
| P0420 0420 | Catalyst system efficiency below threshold | <ul style="list-style-type: none"> Three way catalyst (manifold) does not operate properly. Three way catalyst (manifold) does not have enough oxygen storage capacity. | <ul style="list-style-type: none"> Three way catalyst (manifold) Exhaust tube Intake air leaks Fuel injector Fuel injector leaks Spark plug Improper ignition timing |

DTC Confirmation Procedure

INFOID:000000001702817

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

TESTING CONDITION:

Do not hold engine speed for more than the specified minutes below.

- Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-II.
- Start engine and warm it up to the normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- Let engine idle for 1 minute.
- Make sure that "COOLAN TEMP/S" indicates more than 70°C (158°F).
If not, warm up engine and go to next step when "COOLAN TEMP/S" indication reaches to 70°C (158°F).
- Open engine hood.

| DATA MONITOR | |
|---------------|----------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |
| COOLAN TEMP/S | XXX °C |
| VHCL SPEED SE | XXX km/h |
| B/FUEL SCHDL | XXX msec |

SEF189Y

DTC P0420 THREE WAY CATALYST FUNCTION

< SERVICE INFORMATION >

8. Select "DTC & SRT CONFIRMATION" then "SRT WORK SUPPORT" mode with CONSULT-II.
9. Rev engine up to 2,000 to 3,000 rpm and hold it for 3 consecutive minutes then release the accelerator pedal completely.
If "INCMP" of "CATALYST" changed to "CMPLT", go to step 12.
10. Wait 5 seconds at idle.

| SRT WORK SUPPORT | |
|------------------|----------|
| CATALYST | INCMP |
| EVAP SYSTEM | INCMP |
| HO2S HTR | CMPLT |
| HO2S | INCMP |
| EGR SYSTEM | INCMP |
| MONITOR | |
| ENG SPEED | XXX rpm |
| MAS A/F SE-B1 | XXX V |
| B/FUEL SCHDL | XXX msec |
| A/F ALPHA-B1 | XXX V |
| COOLAN TEMP/S | XX °C |
| A/F SEN1 (B1) | XXX V |

SEF533Z

11. Rev engine up to 2,000 to 3,000 rpm and maintain it until "INCMP" of "CATALYST" changes to "CMPLT" (It will take approximately 5 minutes).
If not "CMPLT", stop engine and cool it down to less than 70°C (158°F) and then retest from step 1.

| SRT WORK SUPPORT | |
|------------------|----------|
| CATALYST | CMPLT |
| EVAP SYSTEM | INCMP |
| HO2S HTR | CMPLT |
| HO2S | INCMP |
| EGR SYSTEM | INCMP |
| MONITOR | |
| ENG SPEED | XXX rpm |
| MAS A/F SE-B1 | XXX V |
| B/FUEL SCHDL | XXX msec |
| A/F ALPHA-B1 | XXX V |
| COOLAN TEMP/S | XX °C |
| A/F SEN1 (B1) | XXX V |

SEF534Z

12. Select "SELF-DIAG RESULTS" mode with CONSULT-II.
13. Confirm that 1st trip DTC is not detected.
If 1st trip DTC is detected, go to [EC-310. "Diagnosis Procedure"](#).

| SELF DIAG RESULTS | |
|--|------|
| DTC RESULTS | TIME |
| NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED. | |
| | |
| | |

SEF535Z

Overall Function Check

INFOID:000000001702818


Use this procedure to check the overall function of the three way catalyst (manifold). During this check, a 1st trip DTC might not be confirmed.

WITH GST

1. Start engine and warm it up to the normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
4. Let engine idle for 1 minute.
5. Open engine hood.
6. Set voltmeter probe between ECM terminals 50 (HO2S2 signal) and ground.
7. Keep engine speed at 2,500 rpm constant under no load.
8. Make sure that the voltage does not vary for more than 5 seconds.

If the voltage fluctuation cycle takes less than 5 seconds, go to [EC-310. "Diagnosis Procedure"](#).

- 1 cycle: 0.6 - 1.0 → 0 - 0.3 → 0.6 - 1.0

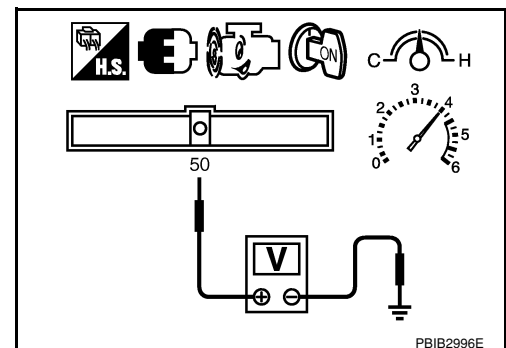

DTC P0420 THREE WAY CATALYST FUNCTION

< SERVICE INFORMATION >

Diagnosis Procedure

INFOID:000000001702819

1. CHECK EXHAUST SYSTEM


Visually check exhaust tubes and muffler for dent.

OK or NG

- OK >> GO TO 2.
- NG >> Repair or replace.

2. CHECK EXHAUST GAS LEAK

1. Start engine and run it at idle.
2. Listen for an exhaust gas leak before the three way catalyst (manifold).

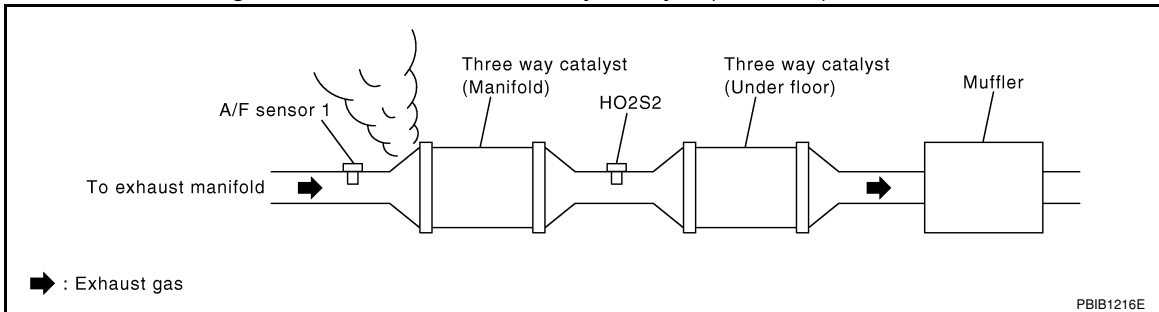

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace.

3. CHECK INTAKE AIR LEAK

Listen for an intake air leak after the mass air flow sensor.

OK or NG

- OK >> GO TO 4.
- NG >> Repair or replace.

4. CHECK IGNITION TIMING

Check the following items. Refer to [EC-69. "Basic Inspection"](#).

| Items | Specifications |
|-------------------|---|
| Target idle speed | A/T: 700 ± 50 rpm (in P or N position) |
| | CVT: 700 ± 50 rpm (in P or N position) |
| | M/T: 700 ± 50 rpm (in Neutral position) |
| Ignition timing | A/T: 13 ± 5° BTDC (in P or N position) |
| | CVT: 13 ± 5° BTDC (in P or N position) |
| | M/T: 13 ± 5° BTDC (in Neutral position) |

OK or NG

- OK >> GO TO 5.
- NG >> Follow the [EC-69. "Basic Inspection"](#).

5. CHECK FUEL INJECTOR

1. Stop engine and turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Turn ignition switch ON.
4. Check voltage between ECM terminals 25, 29, 30, 31 and ground with CONSULT-II or tester. Refer to Wiring Diagram for fuel injectors, [EC-522. "Wiring Diagram"](#).

Voltage: Battery voltage

OK or NG

DTC P0420 THREE WAY CATALYST FUNCTION

< SERVICE INFORMATION >

- OK >> GO TO 6.
NG >> Perform [EC-523, "Diagnosis Procedure"](#).

6. CHECK FUNCTION OF IGNITION COIL-I

CAUTION:



Do the following procedure in the place where ventilation is good without the combustible.

1. Turn ignition switch OFF.
2. Remove fuel pump (1) fuse in IPDM E/R (2) to release fuel pressure.

NOTE:

Do not use CONSULT-II to release fuel pressure, or fuel pressure applies again during the following procedure.

- ⇐: Vehicle front
3. Start engine.
 4. After engine stalls, crank it two or three times to release all fuel pressure.
 5. Turn ignition switch OFF.
 6. Remove all ignition coil harness connectors to avoid the electrical discharge from the ignition coils.
 7. Remove ignition coil and spark plug of the cylinder to be checked.
 8. Crank engine for 5 seconds or more to remove combustion gas in the cylinder.
 9. Connect spark plug and harness connector to ignition coil.
 10. Fix ignition coil using a rope etc. with gap of 13 - 17 mm between the edge of the spark plug and grounded metal portion as shown in the figure.
 11. Crank engine for about 3 seconds, and check whether spark is generated between the spark plug and the grounded metal portion.

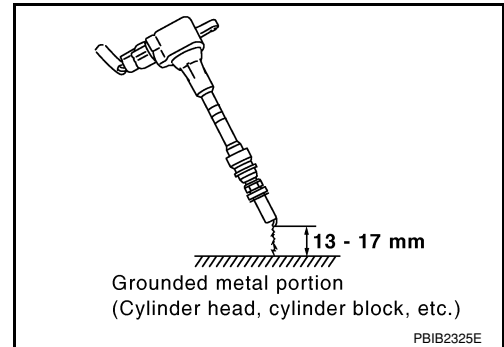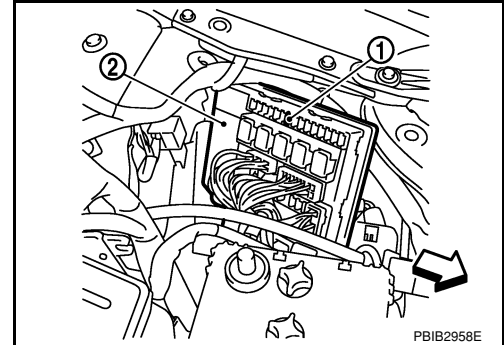

Spark should be generated.

CAUTION:

- Do not approach to the spark plug and the ignition coil within 50cm. Be careful not to get an electrical shock while checking, because the electrical discharge voltage becomes 20kV or more.
- It might cause to damage the ignition coil if the gap of more than 17 mm is taken.

NOTE:

When the gap is less than 13 mm, the spark might be generated even if the coil is malfunctioning.

OK or NG

- OK >> GO TO 10.
NG >> GO TO 7.

7. CHECK FUNCTION OF IGNITION COIL-II

1. Turn ignition switch OFF.
2. Disconnect spark plug and connect a known-good spark plug.
3. Crank engine for about 3 seconds, and recheck whether spark is generated between the spark plug and the grounded metal portion.

Spark should be generated.

OK or NG

- OK >> GO TO 8.
NG >> Check ignition coil, power transistor and their circuits. Refer to [EC-531](#).

8. CHECK SPARK PLUG


DTC P0420 THREE WAY CATALYST FUNCTION

< SERVICE INFORMATION >

Check the initial spark plug for fouling, etc.

OK or NG

- OK >> Replace spark plug(s) with standard type one(s). For spark plug type, refer to [MA-17. "Changing Spark Plugs"](#).
- NG >> 1. Repair or clean spark plug.
2. GO TO 9.

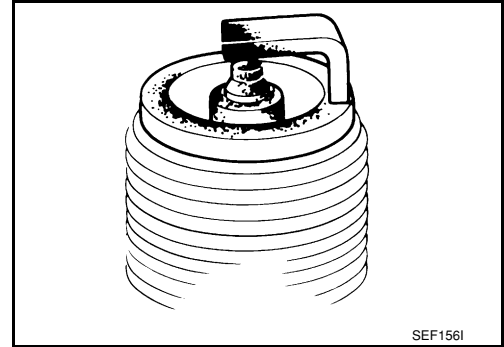

9. CHECK FUNCTION OF IGNITION COIL-III

1. Reconnect the initial spark plugs.
2. Crank engine for about 3 seconds, and recheck whether spark is generated between the spark plug and the grounded portion.

Spark should be generated.

OK or NG

- OK >> **INSPECTION END**
- NG >> Replace spark plug(s) with standard type one(s). For spark plug type, refer to [MA-17. "Changing Spark Plugs"](#).

10. CHECK FUEL INJECTOR

1. Turn ignition switch OFF.
2. Remove fuel injector assembly.
Refer to [EM-33](#).
Keep fuel hose and all fuel injectors connected to fuel tube.
3. Disconnect all ignition coil harness connectors.
4. Reconnect all fuel injector harness connectors disconnected.
5. Turn ignition switch ON.
Make sure fuel does not drip from fuel injector.

OK or NG

- OK (Does not drip.)>>GO TO 11.
- NG (Drips.)>>Replace the fuel injector(s) from which fuel is dripping.

11. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

- Trouble is fixed.>>**INSPECTION END**
- Trouble is not fixed.>>Replace three way catalyst (manifold).

DTC P0441 EVAP CONTROL SYSTEM

< SERVICE INFORMATION >


DTC P0441 EVAP CONTROL SYSTEM

System Description

INFOID:000000001702820

NOTE:

If DTC P0441 is displayed with other DTC such as P2122, P2123 P2127, P2128, P2138, first perform trouble diagnosis for other DTC.

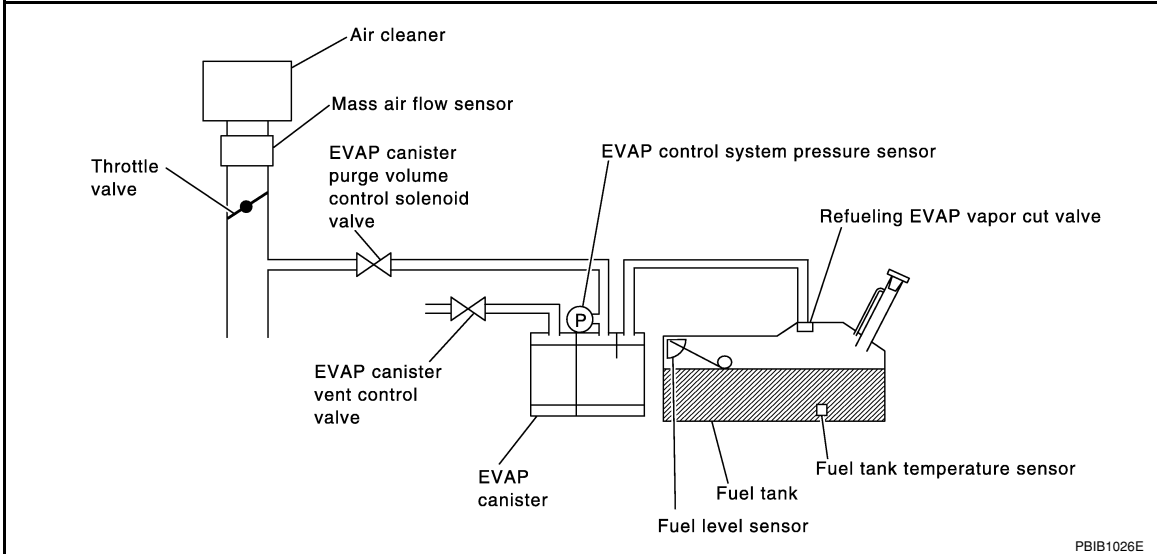

In this evaporative emission (EVAP) control system, purge flow occurs during non-closed throttle conditions. Purge volume is related to air intake volume. Under normal purge conditions (non-closed throttle), the EVAP canister purge volume control solenoid valve is open to admit purge flow. Purge flow exposes the EVAP control system pressure sensor to intake manifold vacuum.

On Board Diagnosis Logic

INFOID:000000001702821

Under normal conditions (non-closed throttle), sensor output voltage indicates if pressure drop and purge flow are adequate. If not, a malfunction is determined.

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|--|---|--|
| P0441 0441 | EVAP control system incorrect purge flow | <ul style="list-style-type: none"> EVAP control system does not operate properly. EVAP control system has a leak between intake manifold and EVAP control system pressure sensor. | <ul style="list-style-type: none"> EVAP canister purge volume control solenoid valve stuck closed EVAP control system pressure sensor and the circuit Loose, disconnected or improper connection of rubber tube Blocked rubber tube Cracked EVAP canister EVAP canister purge volume control solenoid valve circuit Accelerator pedal position sensor Blocked purge port EVAP canister vent control valve |

DTC Confirmation Procedure

INFOID:000000001702822

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Always perform test at a temperature of 5°C (41°F) or more.


WITH CONSULT-II

DTC P0441 EVAP CONTROL SYSTEM

< SERVICE INFORMATION >

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Start engine and let it idle for at least 70 seconds.
4. Select "PURG FLOW P0441" of "EVAPORATIVE SYSTEM" in "DTC CONFIRMATION" mode with CONSULT-II.
5. Touch "START".
If "COMPLETED" is displayed, go to step 7.
6. When the following conditions are met, "TESTING" will be displayed on the CONSULT-II screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take at least 35 seconds.)

| | |
|---------------|-----------------------------|
| Shift lever | Suitable position |
| VHCL SPEED SE | 32 - 120 km/h (20 - 75 MPH) |
| ENG SPEED | 500 - 3,800 rpm |
| B/FUEL SCHDL | 1.0 - 10.0 msec |
| COOLAN TEMP/S | More than 0°C |

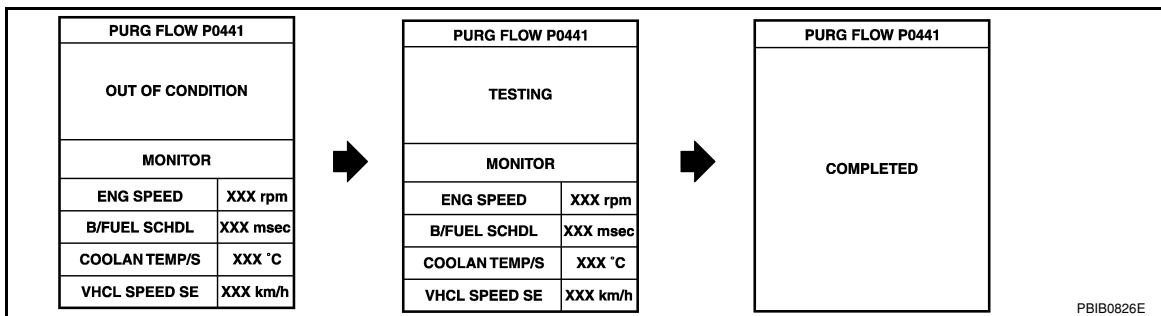

If **TESTING** is not changed for a long time, retry from step 2.

7. Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to [EC-315. "Diagnosis Procedure"](#).

Overall Function Check


INFOID:000000001702823

Use this procedure to check the overall monitoring function of the EVAP control system purge flow monitoring. During this check, a 1st trip DTC might not be confirmed.

WITH GST

1. Lift up drive wheels.
2. Start engine and warm it up to normal operating temperature.
3. Turn ignition switch OFF and wait at least 10 seconds.
4. Start engine and wait at least 70 seconds.
5. Set voltmeter probes to ECM terminals 42 (EVAP control system pressure sensor signal) and ground.
6. Check EVAP control system pressure sensor value at idle speed and note it.
7. Establish and maintain the following conditions for at least 1 minute.

| | |
|-----------------------------|-----------------------------------|
| Air conditioner switch | ON |
| Headlamp switch | ON |
| Rear window defogger switch | ON |
| Engine speed | Approx. 3,000 rpm |
| Shift lever | Any position other than P, N or R |

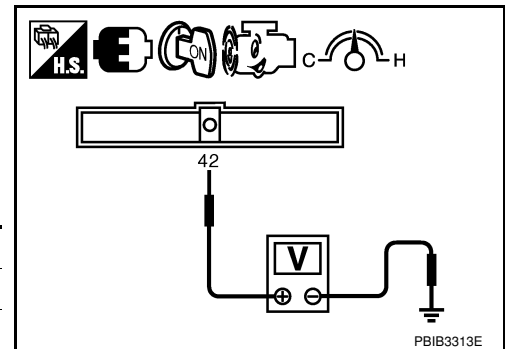

8. Verify that EVAP control system pressure sensor value stays 0.1V less than the value at idle speed (measured at step 6) for at least 1 second.
9. If NG, go to [EC-315. "Diagnosis Procedure"](#).

DTC P0441 EVAP CONTROL SYSTEM

< SERVICE INFORMATION >

Diagnosis Procedure

INFOID:000000001702824

1. CHECK EVAP CANISTER

1. Turn ignition switch OFF.
2. Check EVAP canister for cracks.

OK or NG

- OK (With CONSULT-II) >> GO TO 2.
- OK (Without CONSULT-II) >> GO TO 3.
- NG >> Replace EVAP canister.

2. CHECK PURGE FLOW

With CONSULT-II

1. Disconnect vacuum hose connected to EVAP canister purge volume control solenoid valve at EVAP service port and install vacuum gauge. For the location of EVAP service port, refer to [EC-31. "Description"](#).
2. Start engine and let it idle.
3. Select "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II.
4. Rev engine up to 2,000 rpm.
5. Touch "Qd" and "Qu" on CONSULT-II screen to adjust "PURG VOL CONT/V" opening and check vacuum existence.

| PURG VOL CONT/V | VACUUM |
|-----------------|-------------------|
| 100% | Should exist. |
| 0% | should not exist. |

| ACTIVE TEST | |
|-----------------|---------|
| PURG VOL CONT/V | XXX % |
| MONITOR | |
| ENG SPEED | XXX rpm |
| A/F ALPHA-B1 | XXX % |
| | |
| | |
| | |
| | |
| | |
| | |

PBIB1786E

OK or NG

- OK >> GO TO 7.
- NG >> GO TO 4.

3. CHECK PURGE FLOW

Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Stop engine.
3. Disconnect vacuum hose connected to EVAP canister purge volume control solenoid valve at EVAP service port and install vacuum gauge. For the location of EVAP service port, refer to [EC-31. "Description"](#).
4. Start engine and let it idle.
Do not depress accelerator pedal even slightly.
5. Check vacuum gauge indication before 60 seconds passed after starting engine.

Vacuum should not exist.

6. Revving engine up to 2,000 rpm after 100 seconds passed after starting engine.

Vacuum should exist.

OK or NG

- OK >> GO TO 7.
- NG >> GO TO 4.

4. CHECK EVAP PURGE LINE

1. Turn ignition switch OFF.
2. Check EVAP purge line for improper connection or disconnection.
Refer to [EC-31. "Description"](#).

OK or NG


- OK >> GO TO 5.
- NG >> Repair it.

5. CHECK EVAP PURGE HOSE AND PURGE PORT

DTC P0441 EVAP CONTROL SYSTEM

< SERVICE INFORMATION >

1. Disconnect purge hoses connected to EVAP service port **A** and EVAP canister purge volume control solenoid valve **B**.
2. Blow air into each hose and EVAP purge port **C**.

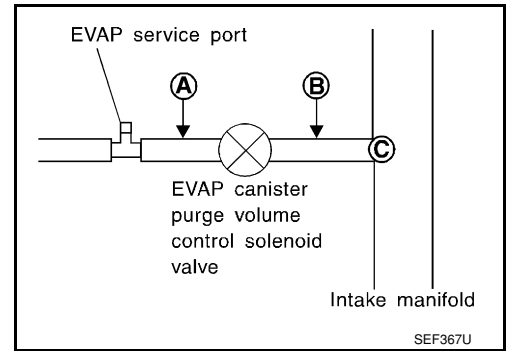


3. Check that air flows freely.

OK or NG

OK (With CONSULT-II)>>GO TO 6.

OK (Without CONSULT-II)>>GO TO 7.

NG >> Repair or clean hoses and/or purge port.

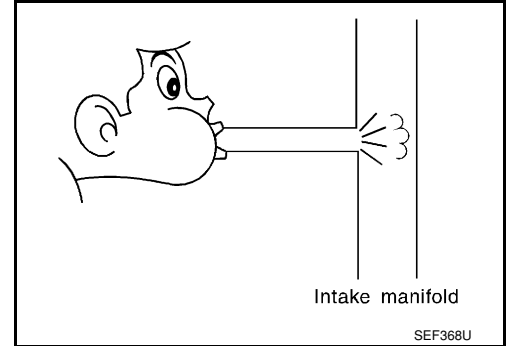

6. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

With CONSULT-II

1. Start engine.
2. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. Check that engine speed varies according to the valve opening.

OK or NG

OK >> GO TO 8.

NG >> GO TO 7.

| ACTIVE TEST | |
|-----------------|---------|
| PURG VOL CONT/V | XXX % |
| MONITOR | |
| ENG SPEED | XXX rpm |
| A/F ALPHA-B1 | XXX % |
| | |
| | |
| | |
| | |
| | |
| | |

PBIB1786E

7. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Refer to [EC-337, "Component Inspection"](#).

OK or NG

OK >> GO TO 8.

NG >> Replace EVAP canister purge volume control solenoid valve.

8. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR CONNECTOR

1. Disconnect EVAP control system pressure sensor harness connector.
2. Check connectors for water.

Water should not exist

OK or NG

OK >> GO TO 9.

NG >> Replace EVAP control system pressure sensor.

9. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR FUNCTION

Refer to [EC-355](#) or DTC P0452 and [EC-362](#) for DTC P0453.

OK or NG

DTC P0441 EVAP CONTROL SYSTEM

< SERVICE INFORMATION >

- OK >> GO TO 10.
NG >> Replace EVAP control system pressure sensor.

A

10.CHECK RUBBER TUBE FOR CLOGGING

1. Disconnect rubber tube connected to EVAP canister vent control valve.
2. Check the rubber tube for clogging.

EC

OK or NG

- OK >> GO TO 11.
NG >> Clean the rubber tube using an air blower.

C

11.CHECK EVAP CANISTER VENT CONTROL VALVE

Refer to [EC-343, "Component Inspection"](#).

D

OK or NG

- OK >> GO TO 12.
NG >> Replace EVAP canister vent control valve.

E

12.CHECK EVAP PURGE LINE

Inspect EVAP purge line (pipe and rubber tube). Check for evidence of leaks.

F

Refer to [EC-31, "Description"](#).

OK or NG

- OK >> GO TO 13.
NG >> Replace it.

G

13.CLEAN EVAP PURGE LINE

Clean EVAP purge line (pipe and rubber tube) using air blower.

H

>> GO TO 14.

14.CHECK INTERMITTENT INCIDENT

I

Refer to [EC-136](#).

J

>> **INSPECTION END**

K

L

M

N

O

P

DTC P0442 EVAP CONTROL SYSTEM


< SERVICE INFORMATION >

DTC P0442 EVAP CONTROL SYSTEM

On Board Diagnosis Logic

INFOID:000000001702825

This diagnosis detects leaks in the EVAP purge line using engine intake manifold vacuum. If pressure does not increase, the ECM will check for leaks in the line between the fuel tank and EVAP canister purge volume control solenoid valve, under the following Vacuum test conditions. The EVAP canister vent control valve is closed to shut the EVAP purge line off. The EVAP canister purge volume control solenoid valve will then be opened to depressurize the EVAP purge line using intake manifold vacuum. After this occurs, the EVAP canister purge volume control solenoid valve will be closed.

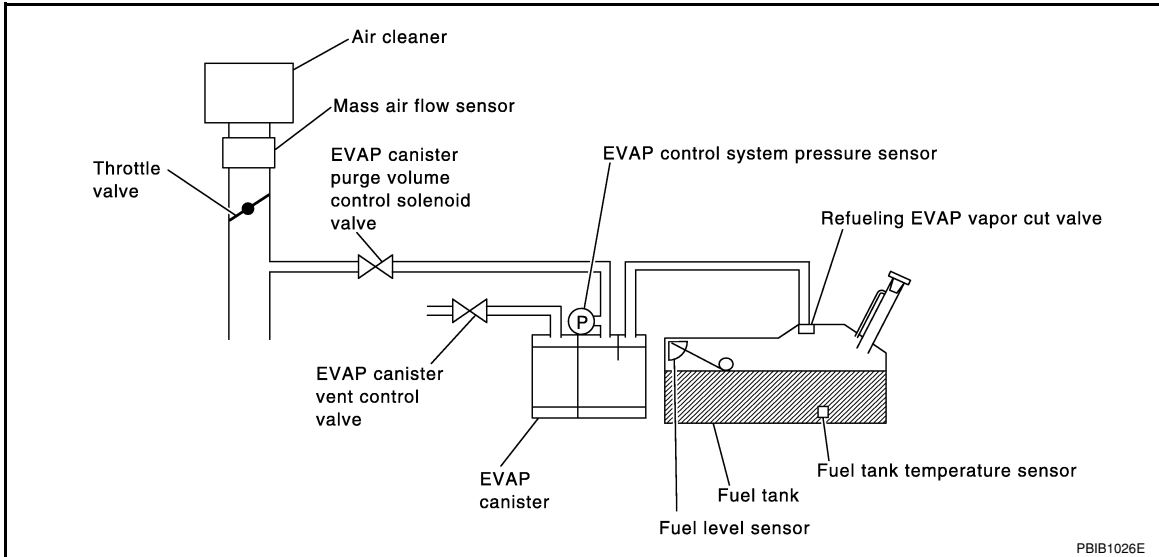

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|---|--|---|
| P0442 0442 | EVAP control system small leak detected (negative pressure) | EVAP control system has a leak, EVAP control system does not operate properly. | <ul style="list-style-type: none"> • Incorrect fuel tank vacuum relief valve • Incorrect fuel filler cap used • Fuel filler cap remains open or fails to close. • Foreign matter caught in fuel filler cap. • Leak is in line between intake manifold and EVAP canister purge volume control solenoid valve. • Foreign matter caught in EVAP canister vent control valve. • EVAP canister or fuel tank leaks • EVAP purge line (pipe and rubber tube) leaks • EVAP purge line rubber tube bent • Loose or disconnected rubber tube • EVAP canister vent control valve and the circuit • EVAP canister purge volume control solenoid valve and the circuit • Fuel tank temperature sensor • O-ring of EVAP canister vent control valve is missing or damaged • EVAP canister is saturated with water • EVAP control system pressure sensor • Fuel level sensor and the circuit • Refueling EVAP vapor cut valve • ORVR system leaks |

CAUTION:

- Use only a genuine NISSAN fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may come on.
- If the fuel filler cap is not tightened properly, the MIL may come on.
- Use only a genuine NISSAN rubber tube as a replacement.

DTC Confirmation Procedure

INFOID:000000001702826

NOTE:

DTC P0442 EVAP CONTROL SYSTEM

< SERVICE INFORMATION >

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:


- Perform “DTC WORK SUPPORT” when the fuel level is between 1/4 and 3/4 full, and vehicle is placed on flat level surface.
- Always perform test at a temperature of 0 to 30°C (32 to 86°F).
- Open engine hood before conducting following procedure.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Turn ignition switch ON and select “DATA MONITOR” mode with CONSULT-II.
4. Check the following conditions are met.
COOLAN TEMP/S: 0 - 70°C (32 - 158°F)
INT/A TEMP SE: 0 - 30°C (32 - 86°F)
5. Select “EVAP SML LEAK P0442/P1442” of “EVAPORATIVE SYSTEM” in “DTC WORK SUPPORT” mode with CONSULT-II. Follow the instruction displayed.

| DATA MONITOR | |
|---------------|---------|
| MONITOR | DTC |
| ENG SPEED | XXX rpm |
| COOLAN TEMP/S | XXX °C |
| INT/A TEMP SE | XXX °C |

PBIB2869E

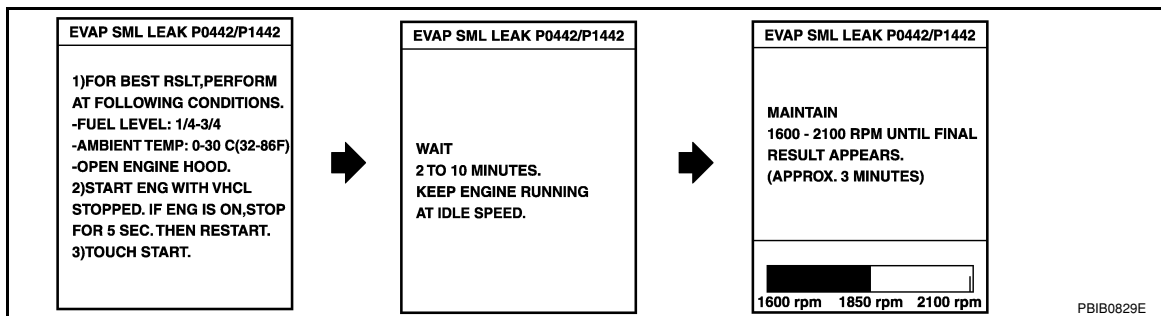

NOTE:

If the engine speed cannot be maintained within the range displayed on the CONSULT-II screen, go to [EC-69, "Basic Inspection"](#).

6. Make sure that “OK” is displayed. If “NG” is displayed, refer to [EC-320, "Diagnosis Procedure"](#).

NOTE:

Make sure that EVAP hoses are connected to the EVAP canister purge volume control solenoid valve properly.

| |
|---|
| EVAP SML LEAK P0442/P1442 |
| OK |
| SELF-DIAG RESULTS |
| NO DTC DETECTED. FURTHER TESTING MAY BE REQUIRED. |

SEC763C

WITH GST

NOTE:

Be sure to read the explanation of Driving Pattern on [EC-47, "Emission-related Diagnostic Information"](#) before driving vehicle.

1. Start engine.
2. Drive vehicle according to Driving Pattern, [EC-47, "Emission-related Diagnostic Information"](#).
3. Stop vehicle.
4. Turn ignition switch OFF and wait at least 10 seconds and then turn ignition switch ON.
5. Select Service \$07 with GST.
 - If P0442 is displayed on the screen, go to [EC-320, "Diagnosis Procedure"](#).
 - If P0441 is displayed on the screen, go to [EC-315, "Diagnosis Procedure"](#) for DTC P0441.

DTC P0442 EVAP CONTROL SYSTEM

< SERVICE INFORMATION >

Diagnosis Procedure


INFOID:000000001702827

1. CHECK FUEL FILLER CAP DESIGN

1. Turn ignition switch OFF.
2. Check for genuine NISSAN fuel filler cap design.

OK or NG

- OK >> GO TO 2.
NG >> Replace with genuine NISSAN fuel filler cap.

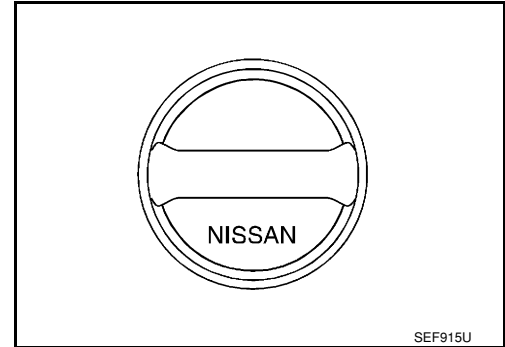

2. CHECK FUEL FILLER CAP INSTALLATION

Check that the cap is tightened properly by rotating the cap clockwise.

OK or NG

- OK >> GO TO 3.
NG >> 1. Open fuel filler cap, then clean cap and fuel filler neck threads using air blower.
2. Retighten until rereaching sound is heard.

3. CHECK FUEL FILLER CAP FUNCTION

Check for air releasing sound while opening the fuel filler cap.

OK or NG

- OK >> GO TO 5.
NG >> GO TO 4.

4. CHECK FUEL TANK VACUUM RELIEF VALVE

Refer to [EC-33, "Component Inspection"](#).

OK or NG

- OK >> GO TO 5.
NG >> Replace fuel filler cap with a genuine one.


5. INSTALL THE PRESSURE PUMP

To locate the EVAP leak, install EVAP service port adapter and pressure pump to EVAP service port securely. For the location of EVAP service port (2), refer to [EC-31, "Description"](#).

- EVAP canister purge volume control solenoid valve (1)
- ↵: Vehicle front


NOTE:

Improper installation of the EVAP service port adapter to the EVAP service port may cause leaking.

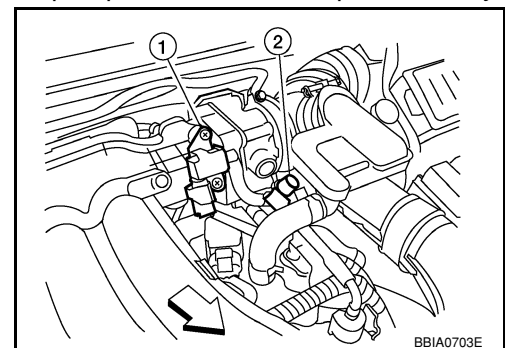

DTC P0442 EVAP CONTROL SYSTEM

< SERVICE INFORMATION >

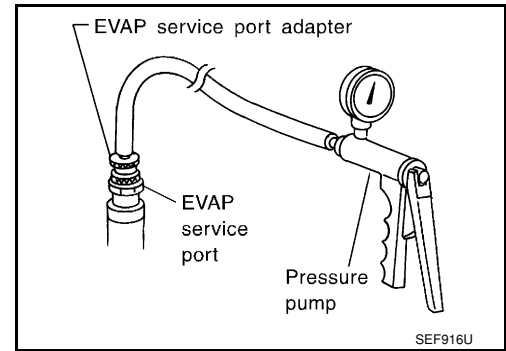

With CONSULT-II>>GO TO 6.
Without CONSULT-II>>GO TO 7.


6. CHECK FOR EVAP LEAK

With CONSULT-II

1. Turn ignition switch ON.
2. Select "EVAP SYSTEM CLOSE" of "WORK SUPPORT" mode with CONSULT-II.
3. Touch "START" and apply pressure into the EVAP line until the pressure indicator reaches the middle of the bar graph.

CAUTION:


- Never use compressed air or a high pressure pump.
- Do not exceed 4.12 kPa (0.042 kg/cm², 0.6 psi) of pressure in the system.

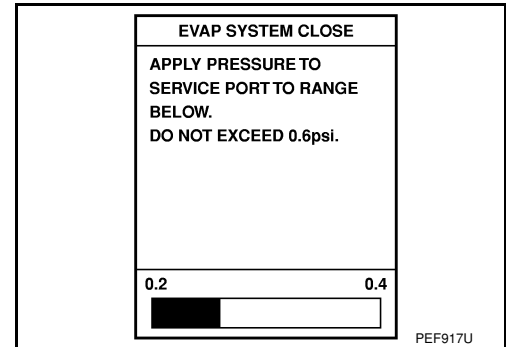

4. Using EVAP leak detector, locate the EVAP leak. For the leak detector, refer to the instruction manual for more details. Refer to [EC-31, "Description"](#).

OK or NG

- OK >> GO TO 8.
NG >> Repair or replace.

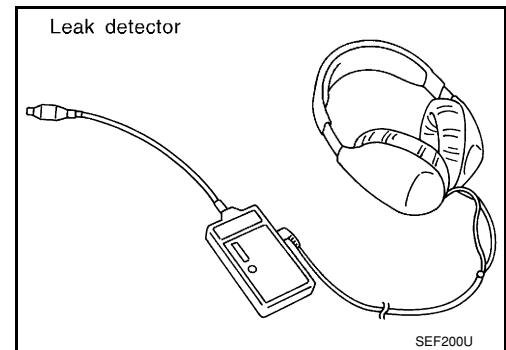


7. CHECK FOR EVAP LEAK

Without CONSULT-II

1. Turn ignition switch OFF.
2. Apply 12 volts DC to EVAP canister vent control valve. The valve will close. (Continue to apply 12 volts until the end of test.)
 - EVAP control system pressure sensor (1)
 - EVAP canister (2)
 - EVAP canister vent control valve (3)
3. Pressurize the EVAP line using pressure pump with 1.3 to 2.7 kPa (10 to 20 mmHg, 0.39 to 0.79 inHg), then remove pump and EVAP service port adapter.

CAUTION:

- Never use compressed air or a high pressure pump.
- Do not exceed 4.12 kPa (0.042 kg/cm², 0.6 psi) of pressure in the system.

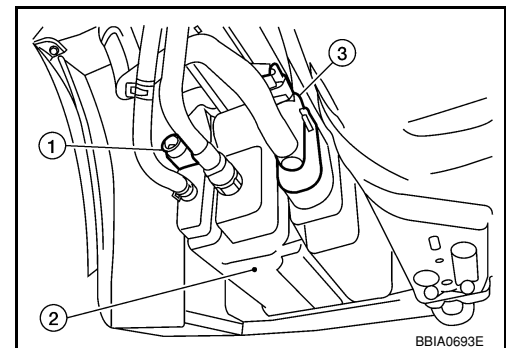


DTC P0442 EVAP CONTROL SYSTEM

< SERVICE INFORMATION >

- Using EVAP leak detector, locate the EVAP leak. For the leak detector, refer to the instruction manual for more details. Refer to [EC-31. "Description"](#).

OK or NG

- OK >> GO TO 8.
NG >> Repair or replace.

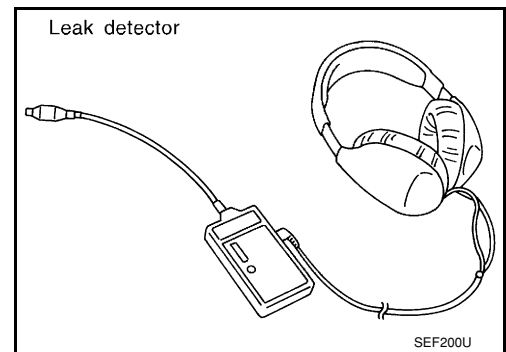

8. CHECK EVAP CANISTER VENT CONTROL VALVE

Check the following,

- EVAP canister vent control valve is installed properly.
Refer to [EC-35. "Removal and Installation"](#).
- EVAP canister vent control valve.
Refer to [EC-343. "Component Inspection"](#).

OK or NG


- OK >> GO TO 9.
NG >> Repair or replace EVAP canister vent control valve and O-ring.

9. CHECK IF EVAP CANISTER SATURATED WITH WATER

- Remove EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.
- Does water drain from the EVAP canister?

Yes or No

- Yes >> GO TO 10.
No (With CONSULT-II) >> GO TO 12.
No (Without CONSULT-II) >> GO TO 13.

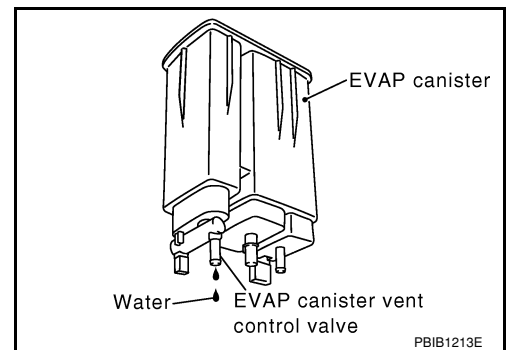

10. CHECK EVAP CANISTER

Weigh the EVAP canister with the EVAP canister vent control valve and EVAP control system pressure sensor attached.

The weight should be less than 1.9 kg (4.2 lb).

OK or NG

- OK (With CONSULT-II) >> GO TO 12.
OK (Without CONSULT-II) >> GO TO 13.
NG >> GO TO 11.

11. DETECT MALFUNCTIONING PART

Check the following.

- EVAP canister for damage
- EVAP hose connected to EVAP canister for clogging or poor connection

>> Repair hose or replace EVAP canister.

12. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION

Ⓟ With CONSULT-II

- Disconnect vacuum hose to EVAP canister purge volume control solenoid valve at EVAP service port.
- Start engine.
- Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode.
- Touch "Qu" on CONSULT-II screen to increase "PURG VOL CONT/V" opening to 100%.

DTC P0442 EVAP CONTROL SYSTEM

< SERVICE INFORMATION >

5. Check vacuum hose for vacuum.

Vacuum should exist.

OK or NG

- OK >> GO TO 15.
- NG >> GO TO 14.

| ACTIVE TEST | |
|-----------------|---------|
| PURG VOL CONT/V | XXX % |
| MONITOR | |
| ENG SPEED | XXX rpm |
| A/F ALPHA-B1 | XXX % |
| | |
| | |
| | |
| | |
| | |

PBIB1786E

13.CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION

⊗ Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Stop engine.
3. Disconnect vacuum hose to EVAP canister purge volume control solenoid valve at EVAP service port.
4. Start engine and let it idle for at least 80 seconds.
5. Check vacuum hose for vacuum when revving engine up to 2,000 rpm.

Vacuum should exist.

OK or NG

- OK >> GO TO 16.
- NG >> GO TO 14.

14.CHECK VACUUM HOSE

Check vacuum hoses for clogging or disconnection. Refer to [EC-99, "Vacuum Hose Drawing"](#).

OK or NG

- OK >> GO TO 15.
- NG >> Repair or reconnect the hose.

15.CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Refer to [EC-337, "Component Inspection"](#).

OK or NG

- OK >> GO TO 16.
- NG >> Replace EVAP canister purge volume control solenoid valve.

16.CHECK FUEL TANK TEMPERATURE SENSOR

Refer to [EC-273, "Component Inspection"](#).

OK or NG

- OK >> GO TO 17.
- NG >> Replace fuel level sensor unit.

17.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Refer to [EC-361, "Component Inspection"](#).

OK or NG

- OK >> GO TO 18.
- NG >> Replace EVAP control system pressure sensor.

18.CHECK EVAP PURGE LINE

Check EVAP purge line (pipe, rubber tube, fuel tank and EVAP canister) for cracks or improper connection. Refer to [EC-31](#).

OK or NG

- OK >> GO TO 19.
- NG >> Repair or reconnect the hose.

19.CLEAN EVAP PURGE LINE

DTC P0442 EVAP CONTROL SYSTEM

< SERVICE INFORMATION >

Clean EVAP purge line (pipe and rubber tube) using air blower.

>> GO TO 20.

20.CHECK EVAP/ORVR LINE

Check EVAP/ORVR line between EVAP canister and fuel tank for clogging, kink, looseness and improper connection. For location, refer to [EC-38](#).

OK or NG

OK >> GO TO 21.

NG >> Repair or replace hoses and tubes.

21.CHECK RECIRCULATION LINE

Check recirculation line between filler neck tube and fuel tank for clogging, kink, cracks, looseness and improper connection.

OK or NG

OK >> GO TO 22.

NG >> Repair or replace hoses, tubes or filler neck tube.

22.CHECK REFUELING EVAP VAPOR CUT VALVE

Refer to [EC-40, "Component Inspection"](#).

OK or NG

OK >> GO TO 23.

NG >> Replace refueling EVAP vapor cut valve with fuel tank.

23.CHECK FUEL LEVEL SENSOR

Refer to [FL-5](#).

OK or NG

OK >> GO TO 24.

NG >> Replace fuel level sensor unit.

24.CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**

DTC P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

< SERVICE INFORMATION >

DTC P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Description

INFOID:000000001702828

SYSTEM DESCRIPTION

| Sensor | Input Signal to ECM | ECM function | Actuator |
|--|--|----------------------------------|---|
| Crankshaft position sensor (POS) Camshaft position sensor (PHASE) | Engine speed*1 | EVAP canister purge flow control | EVAP canister purge volume control solenoid valve |
| Mass air flow sensor | Amount of intake air | | |
| Engine coolant temperature sensor | Engine coolant temperature | | |
| Battery | Battery voltage*1 | | |
| Throttle position sensor | Throttle position | | |
| Accelerator pedal position sensor | Accelerator pedal position | | |
| Air fuel ratio (A/F) sensor 1 | Density of oxygen in exhaust gas (Mixture ratio feedback signal) | | |
| Fuel tank temperature sensor | Fuel temperature in fuel tank | | |
| Wheel sensor | Vehicle speed*2 | | |


*1: ECM determines the start signal status by the signals of engine speed and battery voltage.

*2: This signal is sent to the ECM though CAN communication line.

This system controls flow rate of fuel vapor from the EVAP canister. The opening of the vapor by-pass passage in the EVAP canister purge volume control solenoid valve changes to control the flow rate. The EVAP canister purge volume control solenoid valve repeats ON/OFF operation according to the signal sent from the ECM. The opening of the valve varies for optimum engine control. The optimum value stored in the ECM is determined by considering various engine conditions. When the engine is operating, the flow rate of fuel vapor from the EVAP canister is regulated as the air flow changes.

COMPONENT DESCRIPTION

The EVAP canister purge volume control solenoid valve uses a ON/OFF duty to control the flow rate of fuel vapor from the EVAP canister. The EVAP canister purge volume control solenoid valve is moved by ON/OFF pulses from the ECM. The longer the ON pulse, the greater the amount of fuel vapor that will flow through the valve.

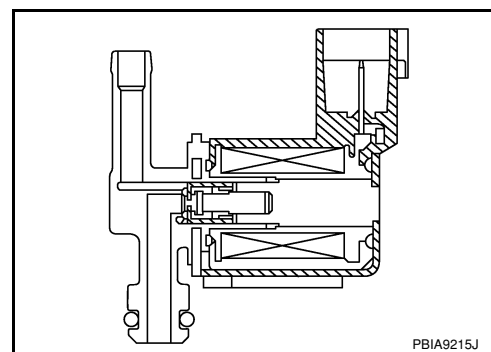

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702829

Specification data are reference values.

| MONITOR ITEM | CONDITION | SPECIFICATION |
|--------------|---|---|
| PURG VOL C/V | <ul style="list-style-type: none"> Engine: After warming up Shift lever: P or N (A/T, CVT), Neutral (M/T) Air conditioner switch: OFF No load | Idle (Accelerator pedal is not depressed even slightly, after engine starting) 0% |
| | 2,000 rpm | 0 - 50% |

DTC P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

< SERVICE INFORMATION >

On Board Diagnosis Logic

INFOID:000000001702830

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|---|--|---|
| P0443 0443 | EVAP canister purge volume control solenoid valve | The canister purge flow is detected during the specified driving conditions, even when EVAP canister purge volume control solenoid valve is completely closed. | <ul style="list-style-type: none"> • EVAP control system pressure sensor • EVAP canister purge volume control solenoid valve (EVAP canister purge volume control solenoid valve is stuck open.) • EVAP canister vent control valve • EVAP canister • Hoses (Hoses are connected incorrectly or clogged.) |

DTC Confirmation Procedure

INFOID:000000001702831

NOTE:


If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Always perform test at a temperature of 5°C (41°F) or more.

④ WITH CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Turn ignition switch ON.
4. Select "PURG VOL CN/V P1444" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT-II.
5. Touch "START".

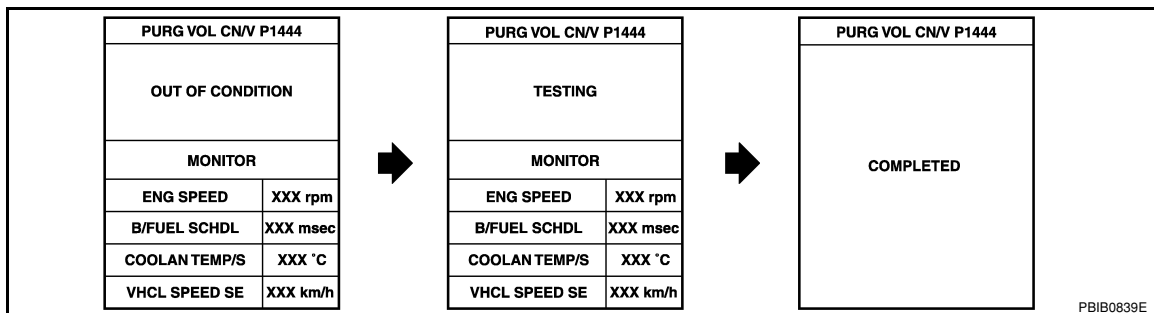

6. Start engine and let it idle until "TESTING" on CONSULT-II changes to "COMPLETED". (It will take approximately 10 seconds.)
If "TESTING" is not displayed after 5 minutes, retry from step 2.
7. Make sure that "OK" is displayed after touching "SELF-DIAG RESULTS". If "NG" is displayed, refer to [EC-328, "Diagnosis Procedure"](#).

④ WITH GST

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Start engine and let it idle for at least 20 seconds.
4. Select Service \$07 with GST.
5. If 1st trip DTC is detected, go to [EC-328, "Diagnosis Procedure"](#).

DTC P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE



< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001702832

EC-PGC/V-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

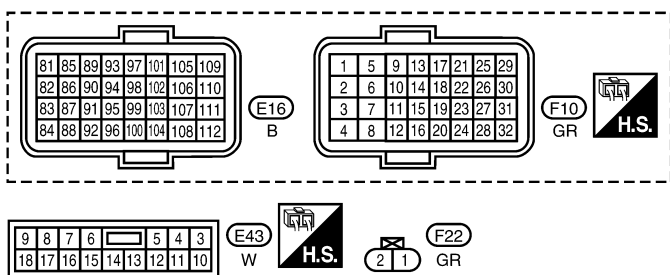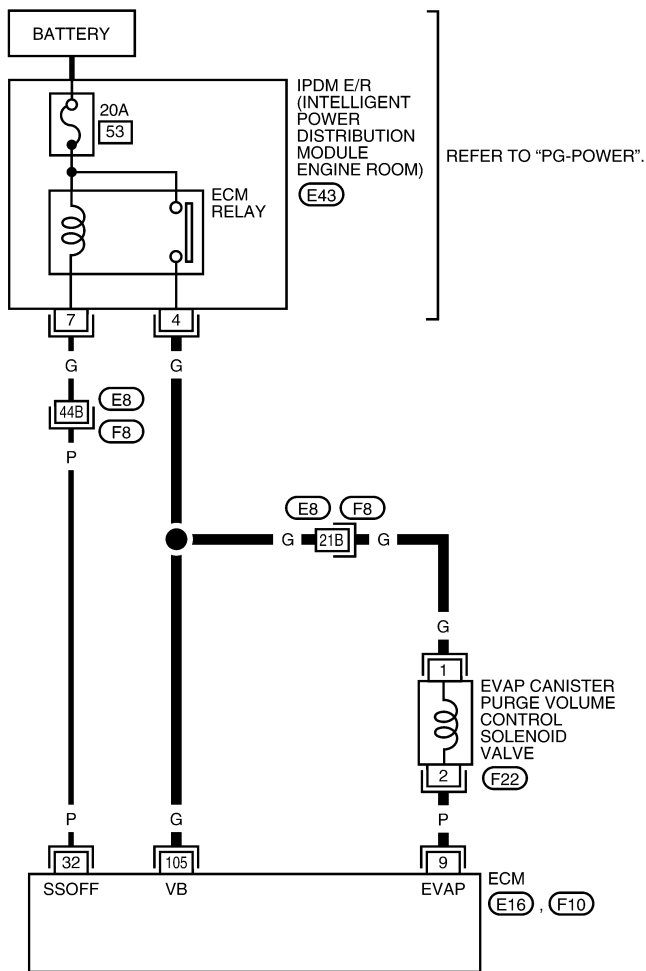

REFER TO THE FOLLOWING.
 (F8) - SUPER MULTIPLE JUNCTION (SMJ)

BBWA3000E



Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.

CAUTION:

DTC P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

< SERVICE INFORMATION >

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.
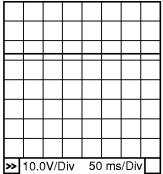
| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------------|---------------|---|---|---|
| 9 | P | EVAP canister purge volume control solenoid valve | [Engine is running] <ul style="list-style-type: none"> Idle speed Accelerator pedal: Not depressed even slightly, after engine starting. | BATTERY VOLTAGE (11 - 14V)★  <small>PBIB0050E</small> |
| | | | [Engine is running] <ul style="list-style-type: none"> Engine speed: About 2,000 rpm (More than 100 seconds after starting engine) | Approximately 10V★  <small>PBIB0520E</small> |
| 32 | P | ECM relay (Self shut-off) | [Engine is running] [Ignition switch: OFF] <ul style="list-style-type: none"> For a few seconds after turning ignition switch OFF | 0 - 1.0V |
| | | | [Ignition switch: OFF] <ul style="list-style-type: none"> More than a few seconds after turning ignition switch OFF | BATTERY VOLTAGE (11 - 14V) |
| 105 | G | Power supply for ECM | [Ignition switch: ON] | BATTERY VOLTAGE (11 - 14V) |


★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnosis Procedure

INFOID:000000001702833

1. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect EVAP canister purge volume control solenoid valve
 - harness connector.
 - EVAP service port (2)
 - ↔: Vehicle front
- Turn ignition switch ON.

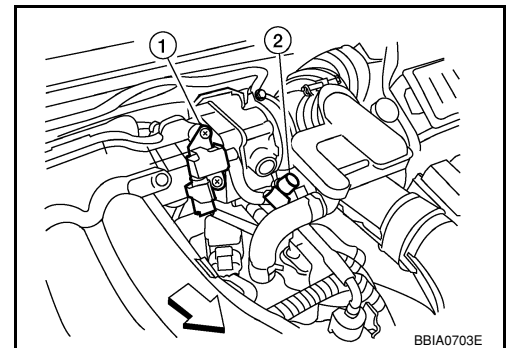

DTC P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE


< SERVICE INFORMATION >

4. Check voltage between EVAP canister purge volume control solenoid valve terminal 1 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 2.

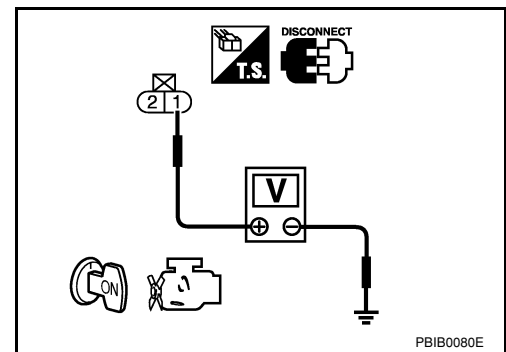

2. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness for open or short between EVAP canister purge volume control solenoid valve and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

3. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 9 and EVAP canister purge volume control solenoid valve terminal 2. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 4.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.


4. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR CONNECTOR

1. Disconnect EVAP control system pressure sensor harness connector.
 - EVAP control system pressure sensor (1)
 - EVAP canister (2)
 - EVAP canister vent control valve (3)
2. Check connectors for water.

Water should not exist.

OK or NG

- OK >> GO TO 5.
- NG >> Replace EVAP control system pressure sensor.

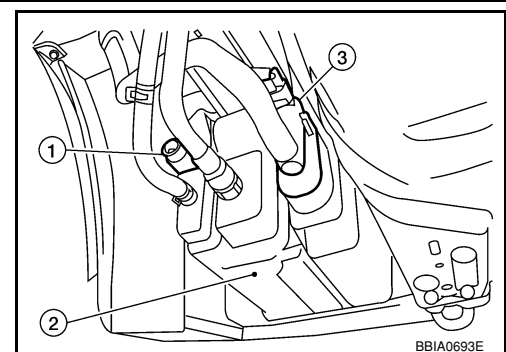

5. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Refer to [EC-361, "Component Inspection"](#).

OK or NG

- OK (With CONSULT-II) >> GO TO 6.
- OK (Without CONSULT-II) >> GO TO 7.
- NG >> Replace EVAP control system pressure sensor.

6. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

With CONSULT-II

1. Turn ignition switch OFF.
2. Reconnect harness connectors disconnected.
3. Start engine.

DTC P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

< SERVICE INFORMATION >

4. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. Check that engine speed varies according to the valve opening.

OK or NG

- OK >> GO TO 8.
NG >> GO TO 7.

| ACTIVE TEST | |
|-----------------|---------|
| PURG VOL CONT/V | XXX % |
| MONITOR | |
| ENG SPEED | XXX rpm |
| A/F ALPHA-B1 | XXX % |
| | |
| | |
| | |
| | |
| | |

PBIB1786E

7. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Refer to [EC-331, "Component Inspection"](#).

OK or NG

- OK >> GO TO 8.
NG >> Replace EVAP canister purge volume control solenoid valve.

8. CHECK RUBBER TUBE FOR CLOGGING

1. Disconnect rubber tube connected to EVAP canister vent control valve.
2. Check the rubber tube for clogging.

OK or NG

- OK >> GO TO 9.
NG >> Clean the rubber tube using an air blower.

9. CHECK EVAP CANISTER VENT CONTROL VALVE

Refer to [EC-343, "Component Inspection"](#).

OK or NG


- OK >> GO TO 10.
NG >> Replace EVAP canister vent control valve.

10. CHECK IF EVAP CANISTER SATURATED WITH WATER

1. Remove EVAP canister with EVAP canister vent control valve attached.
2. Does water drain from the EVAP canister?

YES or NO

- YES >> GO TO 11.
NO >> GO TO 13.

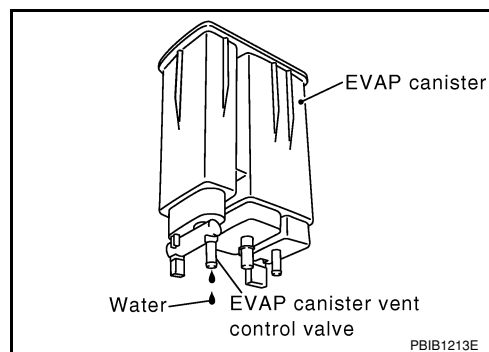

11. CHECK EVAP CANISTER

Weigh the EVAP canister with the EVAP canister vent control valve and EVAP control system pressure sensor attached.

The weight should be less than 1.9 kg (4.2 lb).

OK or NG

- OK >> GO TO 13.
NG >> GO TO 12.

12. DETECT MALFUNCTIONING PART

Check the following.

- EVAP canister for damage
- EVAP hose between EVAP canister and vehicle frame for clogging or poor connection

DTC P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

< SERVICE INFORMATION >

>> Repair hose or replace EVAP canister.

13. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**

Component Inspection


INFOID:000000001702834

EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

④ With CONSULT-II

Check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.


| Condition (PURG VOL CONT/V value) | Air passage continuity between A and B |
|--------------------------------------|---|
| 100% | Yes |
| 0% | No |

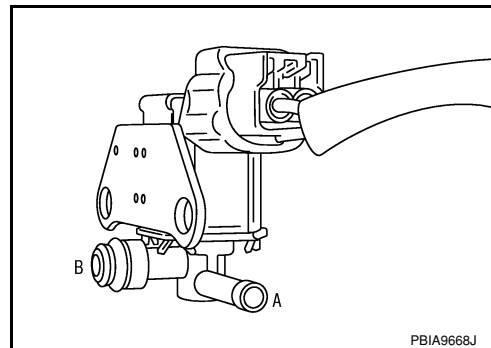

⊗ Without CONSULT-II

Check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.

| Condition | Air passage continuity between A and B |
|--|---|
| 12V direct current supply between terminals 1 and 2 | Yes |
| No supply | No |

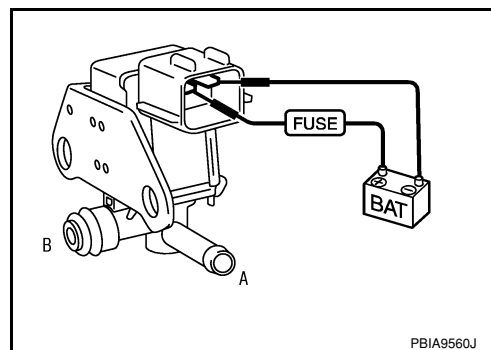

Removal and Installation

INFOID:000000001702835

EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Refer to [EM-18](#).

DTC P0444, P0445 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

< SERVICE INFORMATION >

DTC P0444, P0445 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Description

INFOID:000000001702836

SYSTEM DESCRIPTION

| Sensor | Input Signal to ECM | ECM function | Actuator |
|--|---|--|--|
| Crankshaft position sensor (POS) Camshaft position sensor (PHASE) | Engine speed* ¹ | EVAP canister purge flow control | EVAP canister purge volume control solenoid valve |
| Mass air flow sensor | Amount of intake air | | |
| Engine coolant temperature sensor | Engine coolant temperature | | |
| Battery | Battery voltage* ¹ | | |
| Throttle position sensor | Throttle position | | |
| Accelerator pedal position sensor | Accelerator pedal position | | |
| Air fuel ratio (A/F) sensor 1 | Density of oxygen in exhaust gas (Mixture ratio feedback signal) | | |
| Fuel tank temperature sensor | Fuel temperature in fuel tank | | |
| Wheel sensor | Vehicle speed* ² | | |


*1: The ECM determines the start signal status by the signal of engine speed and battery voltage.

*2: This signal is sent to the ECM through CAN communication line.

This system controls flow rate of fuel vapor from the EVAP canister. The opening of the vapor by-pass passage in the EVAP canister purge volume control solenoid valve changes to control the flow rate. The EVAP canister purge volume control solenoid valve repeats ON/OFF operation according to the signal sent from the ECM. The opening of the valve varies for optimum engine control. The optimum value stored in the ECM is determined by considering various engine conditions. When the engine is operating, the flow rate of fuel vapor from the EVAP canister is regulated as the air flow changes.

COMPONENT DESCRIPTION

The EVAP canister purge volume control solenoid valve uses a ON/OFF duty to control the flow rate of fuel vapor from the EVAP canister. The EVAP canister purge volume control solenoid valve is moved by ON/OFF pulses from the ECM. The longer the ON pulse, the greater the amount of fuel vapor that will flow through the valve.

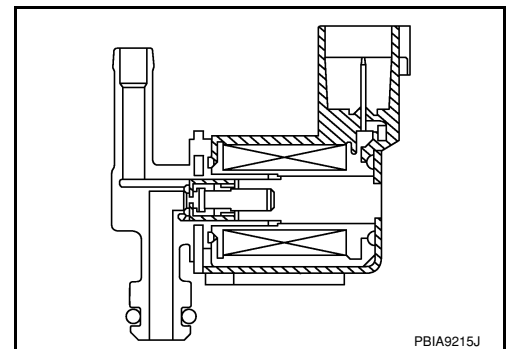

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702837

Specification data are reference values.

| MONITOR ITEM | CONDITION | SPECIFICATION |
|--------------|--|---|
| PURG VOL C/V | <ul style="list-style-type: none"> • Engine: After warming up • Shift lever: N (A/T, CVT), Neutral (M/T) • Air conditioner switch: OFF • No load | Idle (Accelerator pedal is not depressed even slightly, after engine starting) 0% |
| | | 2,000 rpm 0 - 50% |

DTC P0444, P0445 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

< SERVICE INFORMATION >

On Board Diagnosis Logic

INFOID:000000001702838

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|---|---|--|
| P0444 0444 | EVAP canister purge volume control solenoid valve circuit open | An excessively low voltage signal is sent to ECM through the valve | <ul style="list-style-type: none"> • Harness or connectors (EVAP canister purge volume control solenoid valve circuit is open or shorted.) • EVAP canister purge volume control solenoid valve |
| P0445 0445 | EVAP canister purge volume control solenoid valve circuit shorted | An excessively high voltage signal is sent to ECM through the valve | <ul style="list-style-type: none"> • Harness or connectors (EVAP canister purge volume control solenoid valve circuit is shorted.) • EVAP canister purge volume control solenoid valve |

DTC Confirmation Procedure

INFOID:000000001702839

NOTE:


If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm battery voltage is more than 11V at idle.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select "DATA MONITOR" mode with CONSULT-II.
3. Start engine and let it idle for at least 13 seconds.
4. If 1st trip DTC is detected, go to [EC-335. "Diagnosis Procedure"](#).

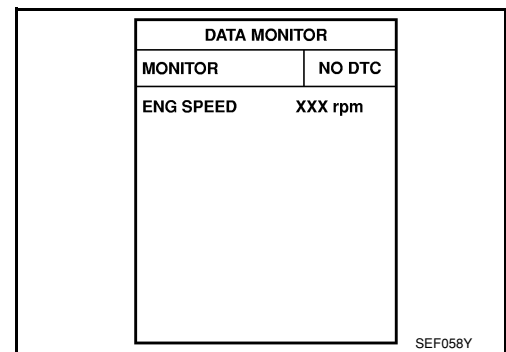

WITH GST

Follow the procedure "WITH CONSULT-II" above.

DTC P0444, P0445 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE



< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001702840

EC-PGC/V-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

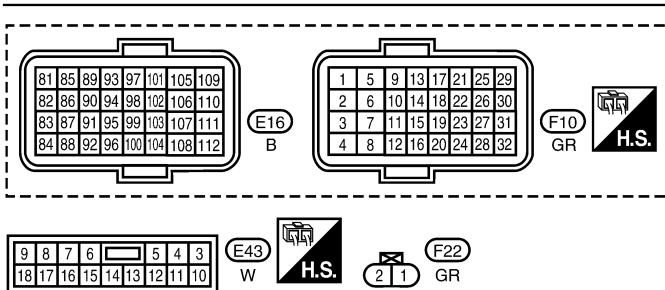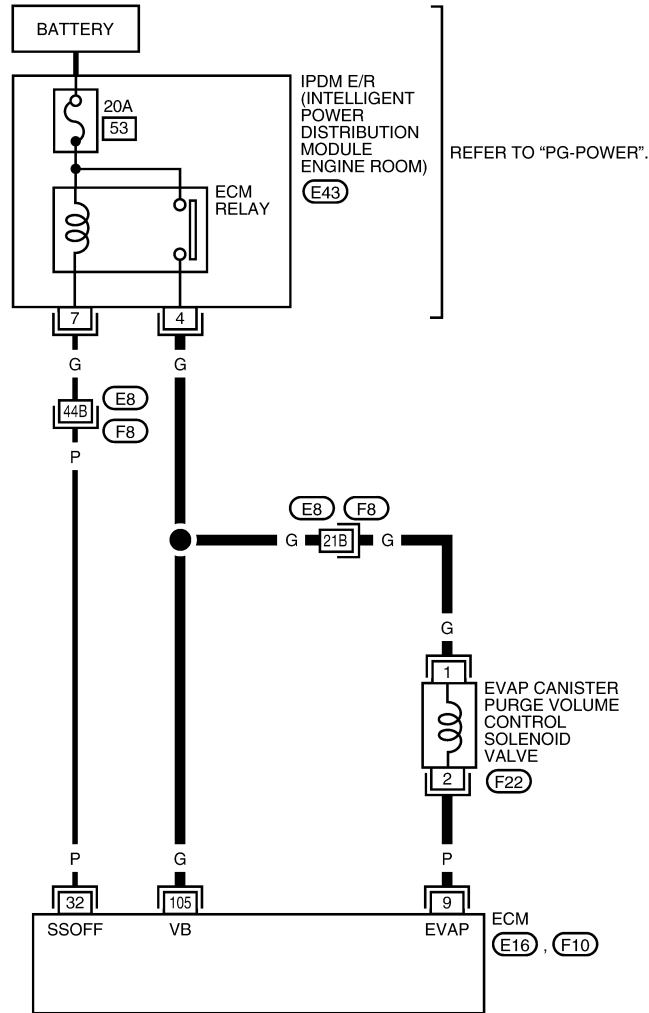

REFER TO THE FOLLOWING.

F8 - SUPER MULTIPLE
 JUNCTION (SMJ)

BBWA2640E



Specification data are reference values and are measured between each terminal and ground.
Pulse signal is measured by CONSULT-II.

CAUTION:

DTC P0444, P0445 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

< SERVICE INFORMATION >

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.
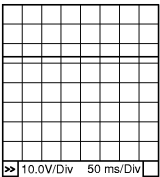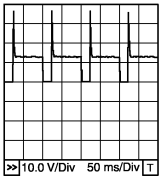
| TERMINAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|--------------|------------|---|---|--|
| 9 | P | EVAP canister purge volume control solenoid valve | [Engine is running] <ul style="list-style-type: none"> Idle speed Accelerator pedal: Not depressed even slightly, after engine starting. | BATTERY VOLTAGE (11 - 14V)★  <small>10.0V/Div 50 ms/Div</small> PBIB0050E |
| | | | [Engine is running] <ul style="list-style-type: none"> Engine speed: About 2,000 rpm (More than 100 seconds after starting engine) | Approximately 10V★  <small>10.0 V/Div 50 ms/Div</small> PBIB0520E |
| 32 | P | ECM relay (Self shut-off) | [Engine is running] [Ignition switch: OFF] <ul style="list-style-type: none"> For a few seconds after turning ignition switch OFF | 0 - 1.0V |
| | | | [Ignition switch: OFF] <ul style="list-style-type: none"> More than a few seconds after turning ignition switch OFF | BATTERY VOLTAGE (11 - 14V) |
| 105 | G | Power supply for ECM | [Ignition switch: ON] | BATTERY VOLTAGE (11 - 14V) |


★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnosis Procedure

INFOID:000000001702841

1. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect EVAP canister purge volume control solenoid valve (1) harness connector.
 - EVAP canister port (2)
3. Turn ignition switch ON.

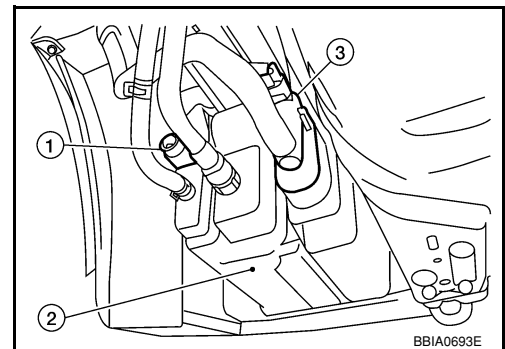

DTC P0444, P0445 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE


< SERVICE INFORMATION >

- Check voltage between EVAP canister purge volume control solenoid valve terminal 1 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 2.

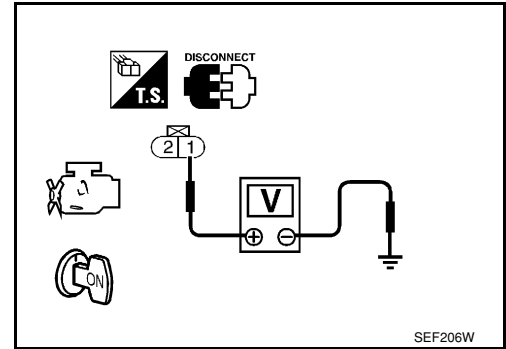

2. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness for open or short between EVAP canister purge volume control solenoid valve and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

3. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check harness continuity between ECM terminal 9 and EVAP canister purge volume control solenoid valve terminal 2. Refer to Wiring Diagram.

Continuity should exist.

- Also check harness for short to ground and short to power.

OK or NG

- OK (With CONSULT-II) >> GO TO 4.
- OK (Without CONSULT-II) >> GO TO 5.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION

With CONSULT-II

- Reconnect all harness connectors disconnected.
- Start engine.
- Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. Check that engine speed varies according to the valve opening.

OK or NG

- OK >> GO TO 6.
- NG >> GO TO 5.

| ACTIVE TEST | |
|-----------------|---------|
| PURG VOL CONT/V | XXX % |
| MONITOR | |
| ENG SPEED | XXX rpm |
| A/F ALPHA-B1 | XXX % |
| | |
| | |
| | |
| | |
| | |

PBIB1786E

5. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Refer to [EC-337, "Component Inspection"](#).

OK or NG

- OK >> GO TO 6.
- NG >> Replace EVAP canister purge volume control solenoid valve.

6. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

DTC P0444, P0445 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

< SERVICE INFORMATION >

>> INSPECTION END

Component Inspection


INFOID:000000001702842

EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

 With CONSULT-II

Check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.


| Condition (PURG VOL CONT/V value) | Air passage continuity between A and B |
|--------------------------------------|---|
| 100% | Yes |
| 0% | No |

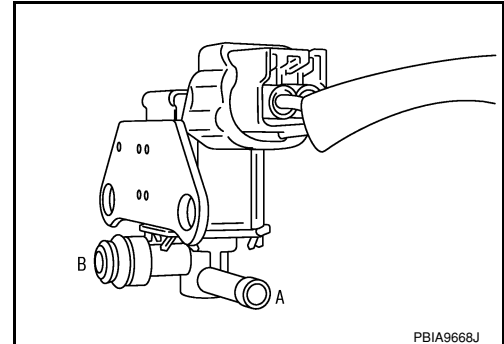

 Without CONSULT-II

Check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.

| Condition | Air passage continuity between A and B |
|--|---|
| 12V direct current supply between terminals 1 and 2 | Yes |
| No supply | No |

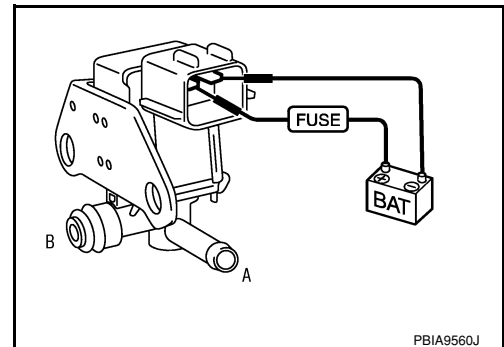

Removal and Installation

INFOID:000000001702843

EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Refer to [EM-18](#).

A
EC
C
D
E
F
G
H
I
J
K
L
M
N
O
P

DTC P0447 EVAP CANISTER VENT CONTROL VALVE

< SERVICE INFORMATION >

DTC P0447 EVAP CANISTER VENT CONTROL VALVE

Component Description

INFOID:000000001702844



The EVAP canister vent control valve (3) is located on the EVAP canister (2) and is used to seal the canister vent.

This solenoid valve responds to signals from the ECM. When the ECM sends an ON signal, the coil in the solenoid valve is energized. A plunger will then move to seal the canister vent. The ability to seal the vent is necessary for the on board diagnosis of other evaporative emission control system components.

This solenoid valve is used only for diagnosis, and usually remains opened.

When the vent is closed, under normal purge conditions, the evaporative emission control system is depressurized and allows EVAP control system diagnoses.

- EVAP control system pressure sensor (1)

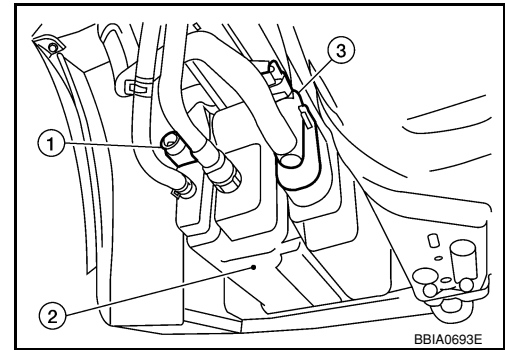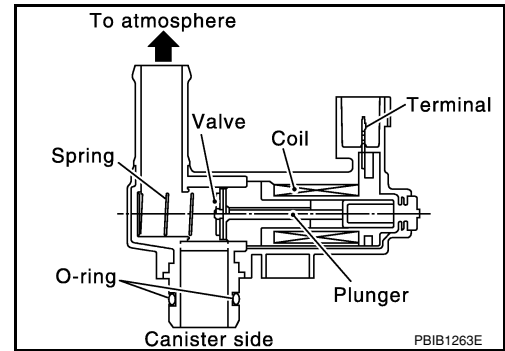

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702845

Specification data are reference values.

| MONITOR ITEM | CONDITION | SPECIFICATION |
|--------------|-----------------------|---------------|
| VENT CONT/V | • Ignition switch: ON | OFF |

On Board Diagnosis Logic

INFOID:000000001702846

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|---|---|--|
| P0447 0447 | EVAP canister vent control valve circuit open | An improper voltage signal is sent to ECM through EVAP canister vent control valve. | <ul style="list-style-type: none"> • Harness or connectors (EVAP canister vent control valve circuit is open or shorted.) • EVAP canister vent control valve |

DTC Confirmation Procedure

INFOID:000000001702847

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm battery voltage is more than 11V at idle.

① WITH CONSULT-II

1. Turn ignition switch ON.

DTC P0447 EVAP CANISTER VENT CONTROL VALVE

< SERVICE INFORMATION >

2. Select "DATA MONITOR" mode with CONSULT-II.
3. Start engine and wait at least 8 seconds.
4. If 1st trip DTC is detected, go to [EC-341. "Diagnosis Procedure"](#).

| DATA MONITOR | |
|--------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |

SEF058Y

WITH GST

Follow the procedure "WITH CONSULT-II" above.

A

EC

C

D

E

F

G

H

I

J

K

L

M

N

O



P

DTC P0447 EVAP CANISTER VENT CONTROL VALVE

< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001702848

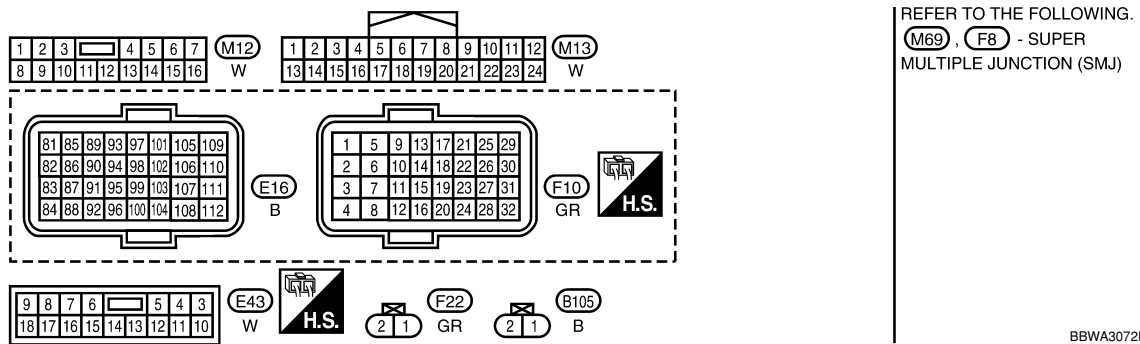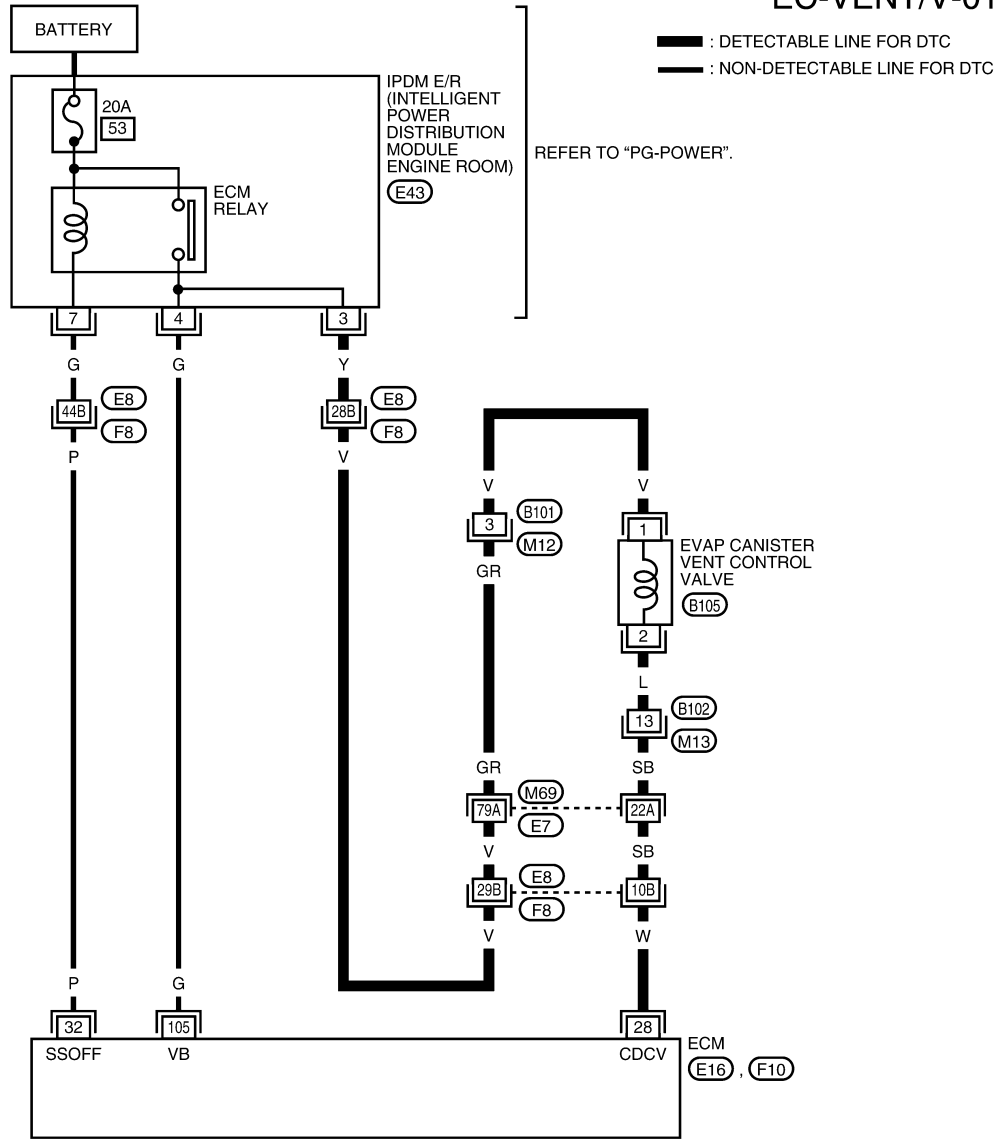

BBWA3072E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

DTC P0447 EVAP CANISTER VENT CONTROL VALVE

< SERVICE INFORMATION >

| TER-MI-NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------|------------|----------------------------------|--|-------------------------------|
| 28 | W | EVAP canister vent control valve | [Ignition switch: ON] | BATTERY VOLTAGE (11 - 14V) |
| 32 | P | ECM relay (Self shut-off) | [Engine is running] [Ignition switch: OFF] • For a few seconds after turning ignition switch OFF | 0 - 1.0V |
| | | | [Ignition switch: OFF] • More than a few seconds after turning ignition switch OFF | BATTERY VOLTAGE (11 - 14V) |
| 105 | G | Power supply for ECM | [Ignition switch: ON] | BATTERY VOLTAGE (11 - 14V) |

Diagnosis Procedure

INFOID:000000001702849

1. INSPECTION START

1. Do you have CONSULT-II?

Yes or No

Yes >> GO TO 2.

No >> GO TO 3.

2. CHECK EVAP CANISTER VENT CONTROL VALVE CIRCUIT

Ⓜ **With CONSULT-II**

- Turn ignition switch OFF and then turn ON.
- Select "VENT CONTROL/V" in "ACTIVE TEST" mode with CONSULT-II.
- Touch "ON/OFF" on CONSULT-II screen.
- Check for operating sound of the valve.

Clicking noise should be heard.

OK or NG

OK >> GO TO 8.


NG >> GO TO 3.

| ACTIVE TEST | |
|----------------|---------|
| VENT CONTROL/V | OFF |
| MONITOR | |
| ENG SPEED | XXX rpm |
| A/F ALPHA-B1 | XXX % |
| | |
| | |
| | |
| | |
| | |
| | |

PBIB1787E

3. CHECK EVAP CANISTER VENT CONTROL VALVE POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect EVAP canister vent control valve (3) harness connector.
 - EVAP control system pressure sensor (1)
 - EVAP canister (2)
- Turn ignition switch ON.

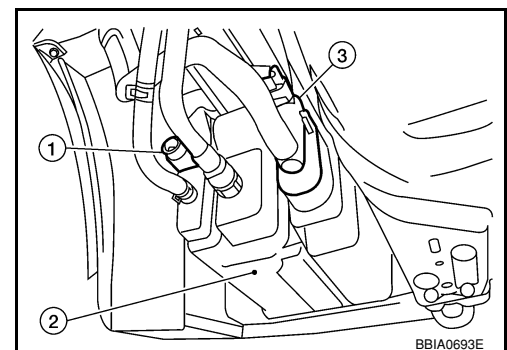

DTC P0447 EVAP CANISTER VENT CONTROL VALVE


< SERVICE INFORMATION >

4. Check voltage between EVAP canister vent control valve terminal 1 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

- OK >> GO TO 5.
- NG >> GO TO 4.

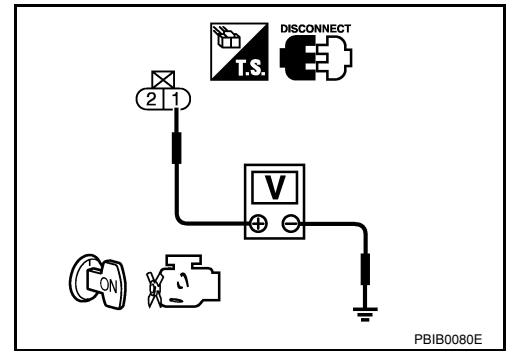

4. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness connectors E7, B69
- Harness connectors M12, B101
- Harness for open or short between EVAP canister vent control valve and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK EVAP CANISTER VENT CONTROL VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 28 and EVAP canister vent control valve terminal 2. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 7.
- NG >> GO TO 6.

6. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness connectors E7, B69
- Harness connectors M13, B102
- Harness for open or short between EVAP canister vent control valve and ECM

>> Repair open circuit or short to ground or short to power in harness or connectors.

7. CHECK RUBBER TUBE FOR CLOGGING

1. Disconnect rubber tube connected to EVAP canister vent control valve.
2. Check the rubber tube for clogging.

OK or NG

- OK >> GO TO 8.
- NG >> Clean the rubber tube using an air blower.

8. CHECK EVAP CANISTER VENT CONTROL VALVE

Refer to [EC-343, "Component Inspection"](#).

OK or NG

- OK >> GO TO 9.
- NG >> Replace EVAP canister vent control valve.

9. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

DTC P0447 EVAP CANISTER VENT CONTROL VALVE

< SERVICE INFORMATION >

>> INSPECTION END


Component Inspection

INFOID:000000001702850

EVAP CANISTER VENT CONTROL VALVE

④ With CONSULT-II

1. Remove EVAP canister vent control valve from EVAP canister.
2. Check portion **B** of EVAP canister vent control valve for being rusted.
If NG, replace EVAP canister vent control valve.
If OK, go to next step.
3. Reconnect harness connectors disconnected.
4. Turn ignition switch ON.

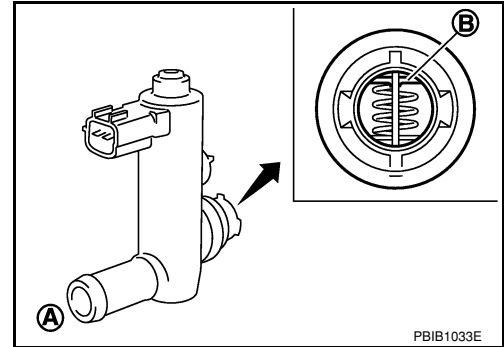

5. Perform "VENT CONTROL/V" in "ACTIVE TEST" mode.
6. Check air passage continuity and operation delay time.
Make sure new O-ring is installed properly.

| Condition VENT CONTROL/V | Air passage continuity between A and B |
|--------------------------|--|
| ON | No |
| OFF | Yes |

Operation takes less than 1 second.

If NG, replace EVAP canister vent control valve.
If OK, go to next step.


| ACTIVE TEST | |
|----------------|---------|
| VENT CONTROL/V | OFF |
| MONITOR | |
| ENG SPEED | XXX rpm |
| A/F ALPHA-B1 | XXX % |
| | |
| | |
| | |
| | |

PBIB1787E

7. Clean the air passage (Portion **A** to **B**) of EVAP canister vent control valve using an air blower.
8. Perform step 6 again.

⊗ Without CONSULT-II

1. Remove EVAP canister vent control valve from EVAP canister.
2. Check portion **B** of EVAP canister vent control valve for being rusted.

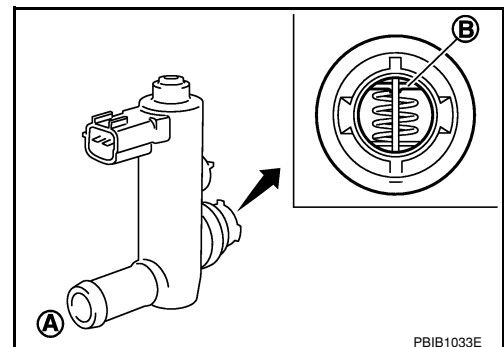

DTC P0447 EVAP CANISTER VENT CONTROL VALVE

< SERVICE INFORMATION >

3. Check air passage continuity and operation delay time under the following conditions.
Make sure new O-ring is installed properly.


| Condition | Air passage continuity between A and B |
|---|--|
| 12V direct current supply between terminals 1 and 2 | No |
| OFF | Yes |

Operation takes less than 1 second.

If NG, replace EVAP canister vent control valve.

If OK, go to next step.

4. Clean the air passage (Portion **A** to **B**) of EVAP canister vent control valve using an air blower.
5. Perform step 3 again.

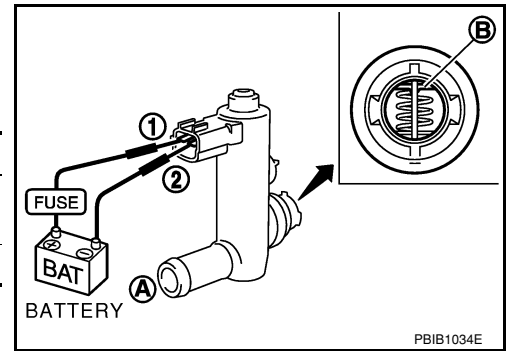

DTC P0448 EVAP CANISTER VENT CONTROL VALVE

< SERVICE INFORMATION >

DTC P0448 EVAP CANISTER VENT CONTROL VALVE

Component Description

INFOID:000000001702851



The EVAP canister vent control valve (3) is located on the EVAP canister (2) and is used to seal the canister vent.

This solenoid valve responds to signals from the ECM. When the ECM sends an ON signal, the coil in the solenoid valve is energized. A plunger will then move to seal the canister vent. The ability to seal the vent is necessary for the on board diagnosis of other evaporative emission control system components.

This solenoid valve is used only for diagnosis, and usually remains opened.

When the vent is closed, under normal purge conditions, the evaporative emission control system is depressurized and allows EVAP control system diagnoses.

- EVAP control system pressure sensor (1)

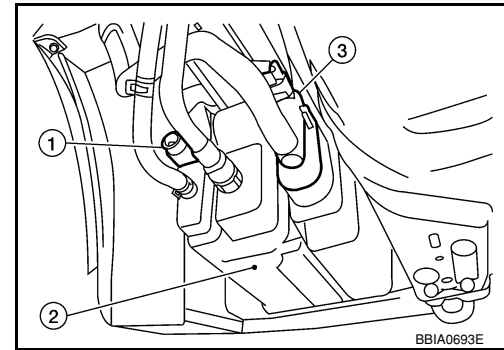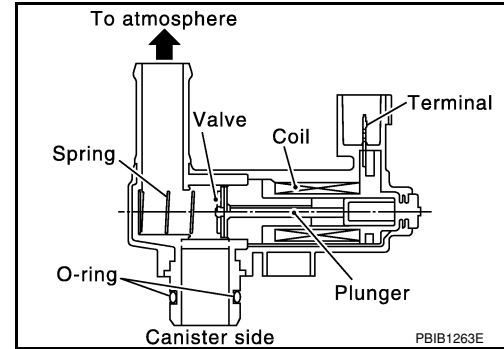

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702852

Specification data are reference values.

| MONITOR ITEM | CONDITION | SPECIFICATION |
|--------------|-----------------------|---------------|
| VENT CONT/V | • Ignition switch: ON | OFF |

On Board Diagnosis Logic

INFOID:000000001702853

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|--|---|---|
| P0448 0448 | EVAP canister vent control valve close | EVAP canister vent control valve remains closed under specified driving conditions. | <ul style="list-style-type: none"> • EVAP canister vent control valve • EVAP control system pressure sensor and the circuit • Blocked rubber tube to EVAP canister vent control valve • EVAP canister is saturated with water |

DTC Confirmation Procedure

INFOID:000000001702854

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

Ⓟ WITH CONSULT-II

1. Turn ignition switch ON and wait at least 5 seconds.
2. Turn ignition switch OFF and wait at least 10 seconds.


DTC P0448 EVAP CANISTER VENT CONTROL VALVE

< SERVICE INFORMATION >

3. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-II.
4. Start engine and let it idle for at least 1 minute.
5. Repeat next procedures three times.
 - a. Increase the engine speed up to 3,000 to 3,500 rpm and keep it for 2 minutes and 50 seconds to 3 minutes.
Never exceed 3 minutes.
 - b. Fully released accelerator pedal and keep engine idle for about 5 seconds.
6. If 1st trip DTC is detected, go to [EC-348. "Diagnosis Procedure"](#).
If 1st trip DTC is not detected, go to the next step.
7. Repeat next procedure 20 times.
 - a. Quickly increase the engine speed up to 4,000 to 4,500 rpm or more and keep it for 25 to 30 seconds.
 - b. Fully released accelerator pedal and keep engine idle for at least 35 seconds.

| DATA MONITOR | |
|--------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |

SEF058Y

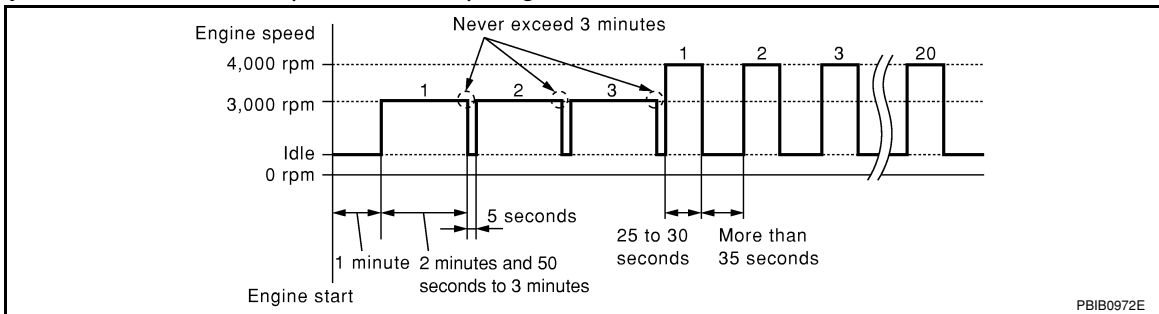

8. If 1st trip DTC is detected, go to [EC-348. "Diagnosis Procedure"](#).

Ⓢ WITH GST

Follow the procedure "WITH CONSULT-II" above.



DTC P0448 EVAP CANISTER VENT CONTROL VALVE

< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001702855

EC-VENT/V-01

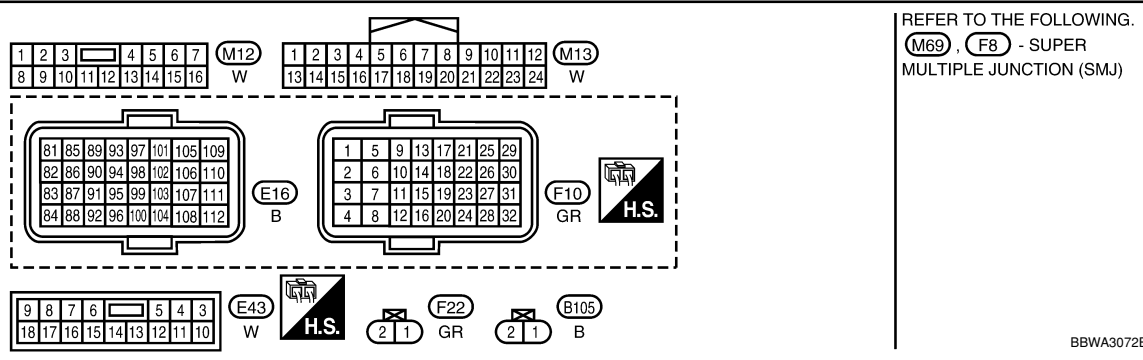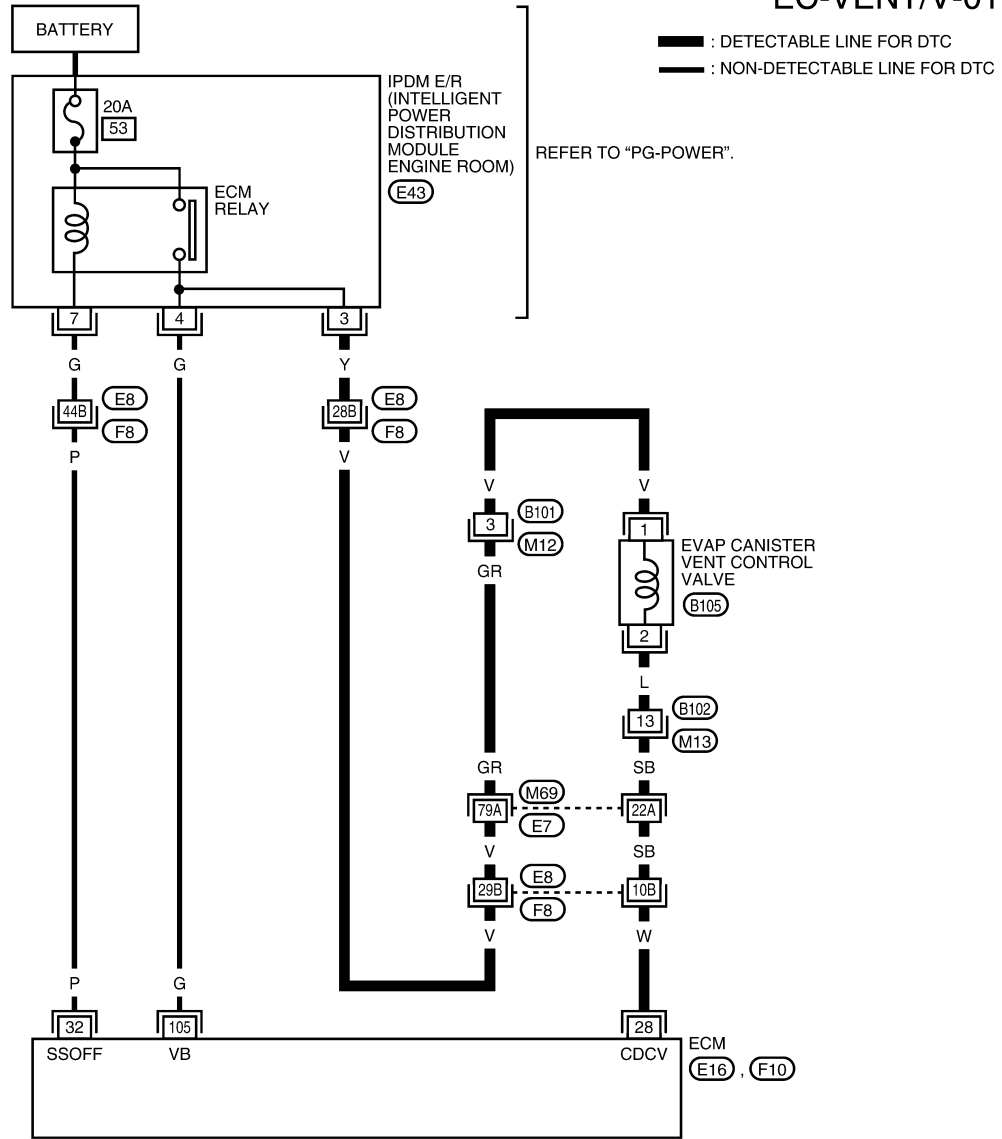

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

DTC P0448 EVAP CANISTER VENT CONTROL VALVE

< SERVICE INFORMATION >

| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------------|---------------|----------------------------------|--|-------------------------------|
| 28 | W | EVAP canister vent control valve | [Ignition switch: ON] | BATTERY VOLTAGE (11 - 14V) |
| 32 | P | ECM relay (Self shut-off) | [Engine is running] [Ignition switch: OFF] • For a few seconds after turning ignition switch OFF | 0 - 1.0V |
| | | | [Ignition switch: OFF] • More than a few seconds after turning ignition switch OFF | BATTERY VOLTAGE (11 - 14V) |
| 105 | G | Power supply for ECM | [Ignition switch: ON] | BATTERY VOLTAGE (11 - 14V) |

Diagnosis Procedure


INFOID:000000001702856

1. CHECK RUBBER TUBE

1. Turn ignition switch OFF.
2. Disconnect rubber tube connected to EVAP canister vent control valve (3).
3. Check the rubber tube for clogging.
 - EVAP control system pressure sensor (1)
 - EVAP canister (2)

OK or NG

- OK >> GO TO 2.
NG >> Clean rubber tube using an air blower.

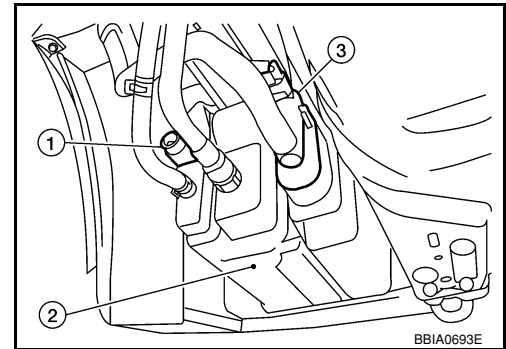

2. CHECK EVAP CANISTER VENT CONTROL VALVE

Refer to [EC-349, "Component Inspection"](#).

OK or NG


- OK >> GO TO 3.
NG >> Replace EVAP canister vent control valve.

3. CHECK IF EVAP CANISTER SATURATED WITH WATER

1. Remove EVAP canister with EVAP canister vent control valve attached.
2. Does water drain from the EVAP canister.

Yes or No

- Yes >> GO TO 4.
No >> GO TO 6.

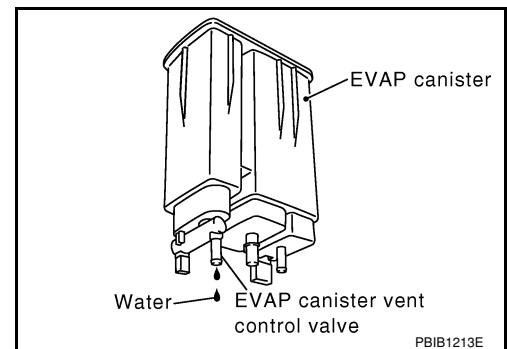

4. CHECK EVAP CANISTER

Weigh the EVAP canister with the EVAP canister vent control valve and EVAP control system pressure sensor attached.

The weight should be less than 1.9 kg (4.2 lb).

OK or NG

DTC P0448 EVAP CANISTER VENT CONTROL VALVE

< SERVICE INFORMATION >

- OK >> GO TO 6.
- NG >> GO TO 5.

5. DETECT MALFUNCTIONING PART


Check the following.

- EVAP canister for damage
- EVAP hose between EVAP canister and vehicle frame for clogging or poor connection

>> Repair hose or replace EVAP canister.

6. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR CONNECTOR

1. Disconnect EVAP control system pressure sensor (1) harness connector.
 - EVAP canister (2)
 - EVAP canister vent control valve (3)
2. Check connectors for water.

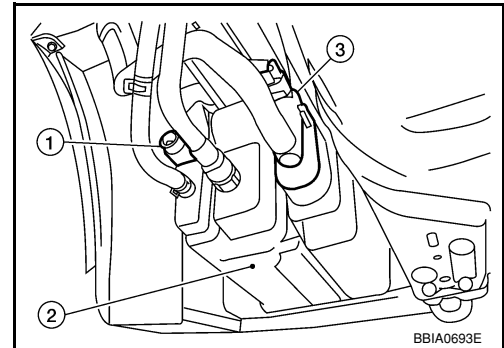

Water should not exist.

OK or NG

- OK >> GO TO 7.
- NG >> Replace EVAP control system pressure sensor.

7. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Refer to [EC-369, "Component Inspection"](#).

OK or NG

- OK >> GO TO 8.
- NG >> Replace EVAP control system pressure sensor.

8. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**


Component Inspection

INFOID:000000001702857

EVAP CANISTER VENT CONTROL VALVE

Ⓟ With CONSULT-II

1. Remove EVAP canister vent control valve from EVAP canister.
2. Check portion **B** of EVAP canister vent control valve for being rusted.
If NG, replace EVAP canister vent control valve.
If OK, go to next step.
3. Reconnect harness connectors disconnected.
4. Turn ignition switch ON.

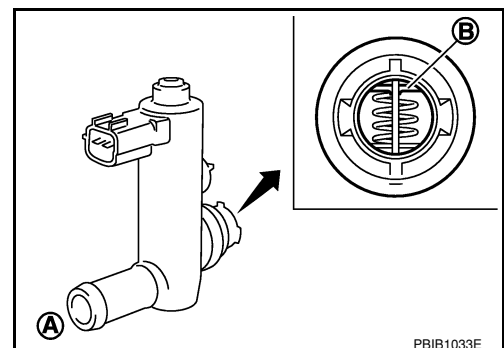

DTC P0448 EVAP CANISTER VENT CONTROL VALVE

< SERVICE INFORMATION >

- Perform "VENT CONTROL/V" in "ACTIVE TEST" mode.
- Check air passage continuity and operation delay time.

| Condition VENT CONTROL/V | Air passage continuity between A and B |
|--------------------------|--|
| ON | No |
| OFF | Yes |

Operation takes less than 1 second.

Make sure new O-ring is installed properly.

If NG, replace EVAP canister vent control valve.

If OK, go to next step.


- Clean the air passage (Portion **A** to **B**) of EVAP canister vent control valve using an air blower.
- Perform step 5 again.

⊗ Without CONSULT-II

- Remove EVAP canister vent control valve from EVAP canister.
- Check portion **B** of EVAP canister vent control valve for being rusted.

| ACTIVE TEST | |
|----------------|---------|
| VENT CONTROL/V | OFF |
| MONITOR | |
| ENG SPEED | XXX rpm |
| A/F ALPHA-B1 | XXX % |
| | |
| | |
| | |
| | |
| | |

PBIB1787E

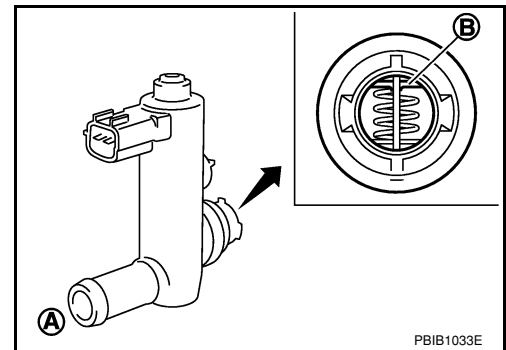

- Check air passage continuity and operation delay time under the following conditions.

| Condition | Air passage continuity between A and B |
|---|--|
| 12V direct current supply between terminals 1 and 2 | No |
| OFF | Yes |


Operation takes less than 1 second.

Make sure new O-ring is installed properly.

If NG, replace EVAP canister vent control valve.

If OK, go to next step.

- Clean the air passage (Portion **A** to **B**) of EVAP canister vent control valve using an air blower.
- Perform step 3 again.

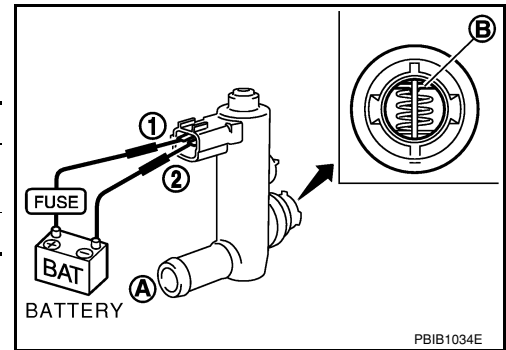

DTC P0451 EVAP CONTROL SYSTEM PRESSURE SENSOR

< SERVICE INFORMATION >



DTC P0451 EVAP CONTROL SYSTEM PRESSURE SENSOR

Component Description

INFOID:000000001702858

The EVAP control system pressure sensor (1) detects pressure in the purge line. The sensor output voltage to the ECM increases as pressure increases.

- EVAP canister (2)
- EVAP canister vent control valve (3)

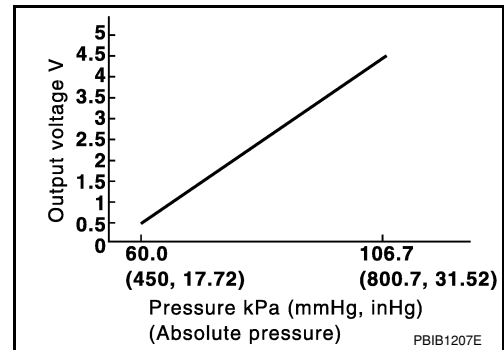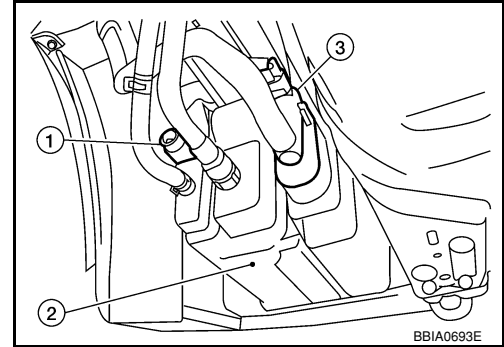

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702859

Specification data are reference values.

| MONITOR ITEM | CONDITION | SPECIFICATION |
|---------------|-----------------------|--------------------|
| EVAP SYS PRES | • Ignition switch: ON | Approx. 1.8 - 4.8V |

On Board Diagnosis Logic

INFOID:000000001702860

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|---|--|---|
| P0451 0451 | EVAP control system pressure sensor performance | ECM detects a sloshing signal from the EVAP control system pressure sensor | <ul style="list-style-type: none"> • Harness or connectors [Crankshaft position sensor (POS) circuit is shorted.] (Accelerator pedal position sensor circuit is shorted.) (Refrigerant pressure sensor circuit is shorted.) • EVAP control system pressure sensor • Crankshaft position sensor (POS) • Accelerator pedal position sensor • Refrigerant pressure sensor |

DTC Confirmation Procedure

INFOID:000000001702861

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

Ⓟ WITH CONSULT-II

1. Turn ignition switch OFF and wait at least 10 seconds.

DTC P0451 EVAP CONTROL SYSTEM PRESSURE SENSOR

< SERVICE INFORMATION >

2. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-II.

3. Start engine and wait at least 40 seconds.

NOTE:

Do not depress accelerator pedal even slightly.

If 1st trip DTC is detected, go to [EC-352, "Diagnosis Procedure"](#).

| DATA MONITOR | |
|----------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |
| COOLANT TEMP/S | XXX °C |
| FUEL T/TMP SE | XXX °C |

SEF194Y

WITH GST


Follow the procedure "WITH CONSULT-II" above.

Diagnosis Procedure

INFOID:000000001702862

1. CHECK GROUND CONNECTIONS

1. Turn ignition switch OFF.
2. Loosen and retighten ground screws on the body.
Refer to [EC-142, "Ground Inspection"](#).

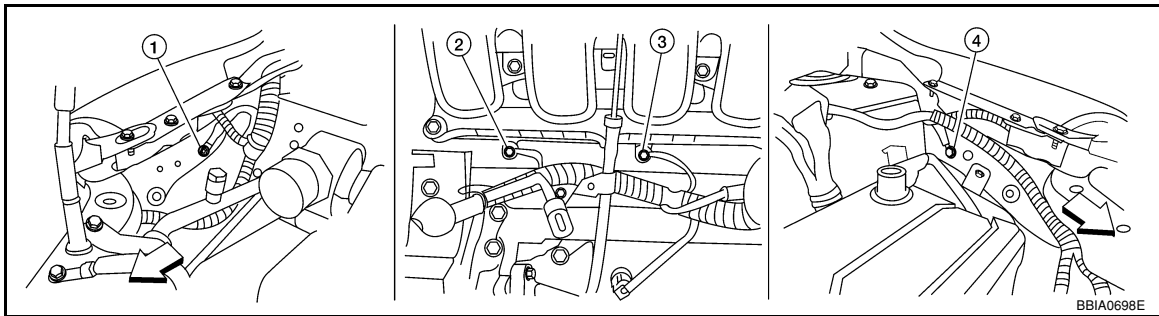

←: Vehicle front

1. Body ground E24

2. Engine ground F9

3. engine ground F16

4. Body ground E15

OK or NG

OK >> GO TO 2.

NG >> Repair or replace ground connections.

2. CHECK EVPA CONTROL SYSTEM PRESSURE SENSOR CONNECTOR FOR WATER


1. Disconnect EVAP control system pressure sensor (1) harness connector.
- EVAP canister (2)
- EVAP canister vent control valve (3)
2. Check sensor harness connector for water.

Water should not exist.

OK or NG

OK >> GO TO 3.

NG >> Repair or replace harness connector.

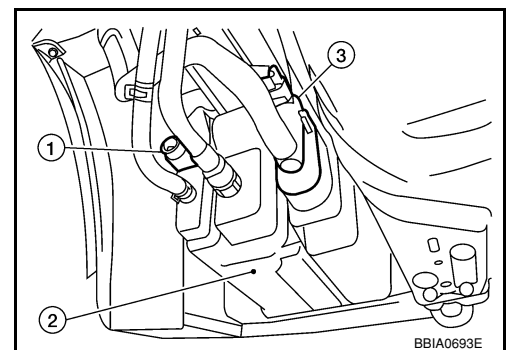

3. CHECK COMPONENTS POWER SUPPLY

Check harness for short to power and short to ground, between the following terminals.

DTC P0451 EVAP CONTROL SYSTEM PRESSURE SENSOR

< SERVICE INFORMATION >

| ECM terminal | Sensor terminal | Reference Wiring Diagram |
|--------------|--|--|
| 74 | Refrigerant pressure sensor terminal 3 | EC-542. "Wiring Diagram" |
| 75 | Crankshaft position sensor (POS) terminal 1 | EC-297. "Wiring Diagram" |
| 76 | EVAP control system pressure sensor terminal 3 | EC-357. "Wiring Diagram" |
| 102 | APP sensor terminal 5 | EC-482. "Wiring Diagram" |

OK or NG

OK >> GO TO 4.

NG >> Repair short to ground or short to power in harness or connectors.

4.CHECK COMPONENTS

Check the following.

- Refrigerant pressure sensor (Refer to [MTC-22.](#))
- Crankshaft position sensor (POS) (Refer to [EC-301. "Component Inspection"](#).)

OK or NG

OK >> GO TO 5.

NG >> Replace malfunctioning components.

5.CHECK APP SENSOR

Refer to [EC-485. "Component Inspection"](#).

OK or NG

OK >> GO TO 7.

NG >> GO TO 6.

6.REPLACE ACCELERATOR PEDAL ASSEMBLY

1. Replace accelerator pedal assembly.
2. Perform [EC-76. "Accelerator Pedal Released Position Learning"](#).
3. Perform [EC-76. "Throttle Valve Closed Position Learning"](#).
4. Perform [EC-76. "Idle Air Volume Learning"](#).

>> **INSPECTION END**

7.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Refer to [EC-353. "Component Inspection"](#).

OK or NG

OK >> GO TO 8.

NG >> Replace EVAP control system pressure sensor.

8.CHECK INTERMITTENT INCIDENT

Refer to [EC-136.](#)

For wiring diagram, refer to [EC-357. "Wiring Diagram"](#).

>> **INSPECTION END**

Component Inspection

INFOID:000000001702863

EVAP CONTROL SYSTEM PRESSURE SENSOR

1. Remove EVAP control system pressure sensor with its harness connector connected from EVAP canister.
Always replace O-ring with a new one.
2. Install a vacuum pump to EVAP control system pressure sensor.

DTC P0451 EVAP CONTROL SYSTEM PRESSURE SENSOR


< SERVICE INFORMATION >

3. Turn ignition switch ON and check output voltage between ECM terminal 42 (EVAP control system pressure sensor signal) and ground under the following conditions.

| Applied vacuum kPa (mmHg, inHg) | Voltage V |
|------------------------------------|------------------------------------|
| Not applied | 1.8 - 4.8 |
| -26.7 (-200, -7.87) | 2.1 to 2.5V lower than above value |

CAUTION:

- Always calibrate the vacuum pump gauge when using it.
 - Do not apply below -93.3 kPa (-700 mmHg, -27.56 inHg) or pressure over 101.3 kPa (760 mmHg, 29.92 inHg).
4. If NG, replace EVAP control system pressure sensor.

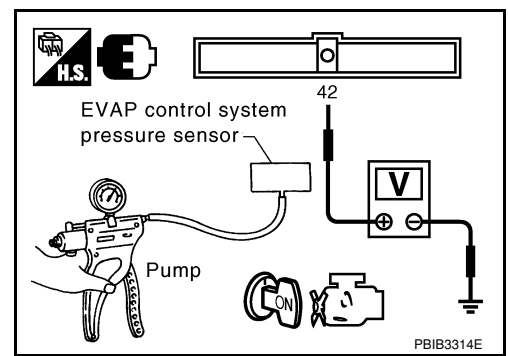

DTC P0452 EVAP CONTROL SYSTEM PRESSURE SENSOR

< SERVICE INFORMATION >



DTC P0452 EVAP CONTROL SYSTEM PRESSURE SENSOR

Component Description

INFOID:000000001702864

The EVAP control system pressure sensor (1) detects pressure in the purge line. The sensor output voltage to the ECM increases as pressure increases.

- EVAP canister (2)
- EVAP canister vent control valve (3)

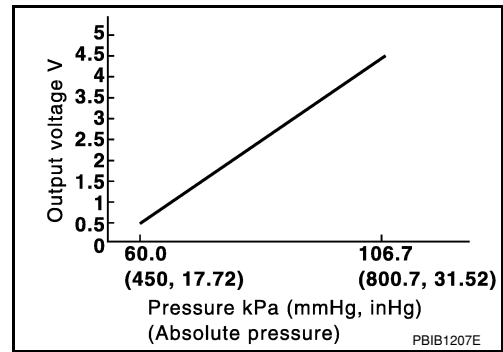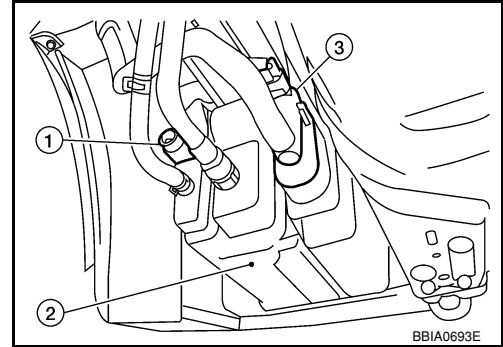

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702865

Specification data are reference values.

| MONITOR ITEM | CONDITION | SPECIFICATION |
|---------------|-----------------------|--------------------|
| EVAP SYS PRES | • Ignition switch: ON | Approx. 1.8 - 4.8V |

On Board Diagnosis Logic

INFOID:000000001702866

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|---|--|---|
| P0452 0452 | EVAP control system pressure sensor low input | An excessively low voltage from the sensor is sent to ECM. | <ul style="list-style-type: none"> • Harness or connectors (EVAP control system pressure sensor circuit is open or shorted.) [Crankshaft position sensor (POS) circuit is shorted.] (Accelerator pedal position sensor circuit is shorted.) (Refrigerant pressure sensor circuit is shorted.) • EVAP control system pressure sensor • Crankshaft position sensor (POS) • Accelerator pedal position sensor • Refrigerant pressure sensor |

DTC Confirmation Procedure

INFOID:000000001702867

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Always perform test at a temperature of 5°C (41°F) or more.

DTC P0452 EVAP CONTROL SYSTEM PRESSURE SENSOR

< SERVICE INFORMATION >

Ⓟ WITH CONSULT-II


1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Turn ignition switch ON.
4. Select "DATA MONITOR" mode with CONSULT-II.
5. Make sure that "FUEL T/TMP SE" is more than 0°C (32°F).
6. Start engine and wait at least 20 seconds.
If 1st trip DTC is detected, go to [EC-358, "Diagnosis Procedure"](#).

| DATA MONITOR | |
|---------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |
| COOLANTEMP/S | XXX °C |
| FUEL T/TMP SE | XXX °C |

SEF194Y

Ⓢ WITH GST

1. Start engine and warm it up to normal operating temperature.
2. Check that voltage between ECM terminal 43 (Fuel tank temperature sensor signal) and ground is less than 4.2V.
3. Turn ignition switch OFF and wait at least 10 seconds.
4. Start engine and wait at least 20 seconds.
5. Select Service \$07 with GST.
If 1st trip DTC is detected, go to [EC-358, "Diagnosis Procedure"](#).

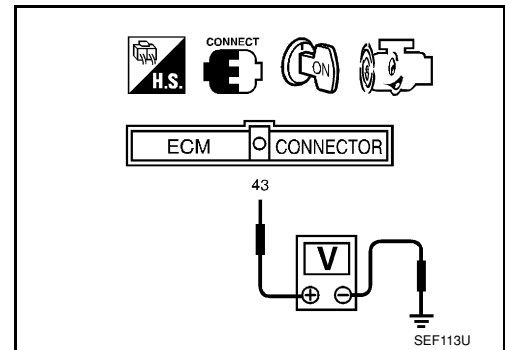

DTC P0452 EVAP CONTROL SYSTEM PRESSURE SENSOR



< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001702868

EC-PRE/SE-01

— : DETECTABLE LINE FOR DTC
 - - - : NON-DETECTABLE LINE FOR DTC

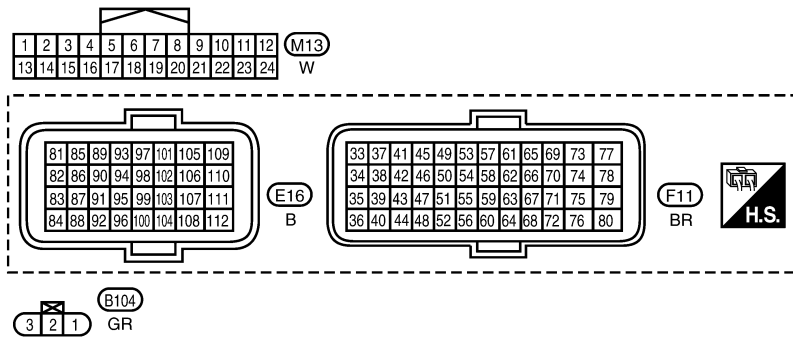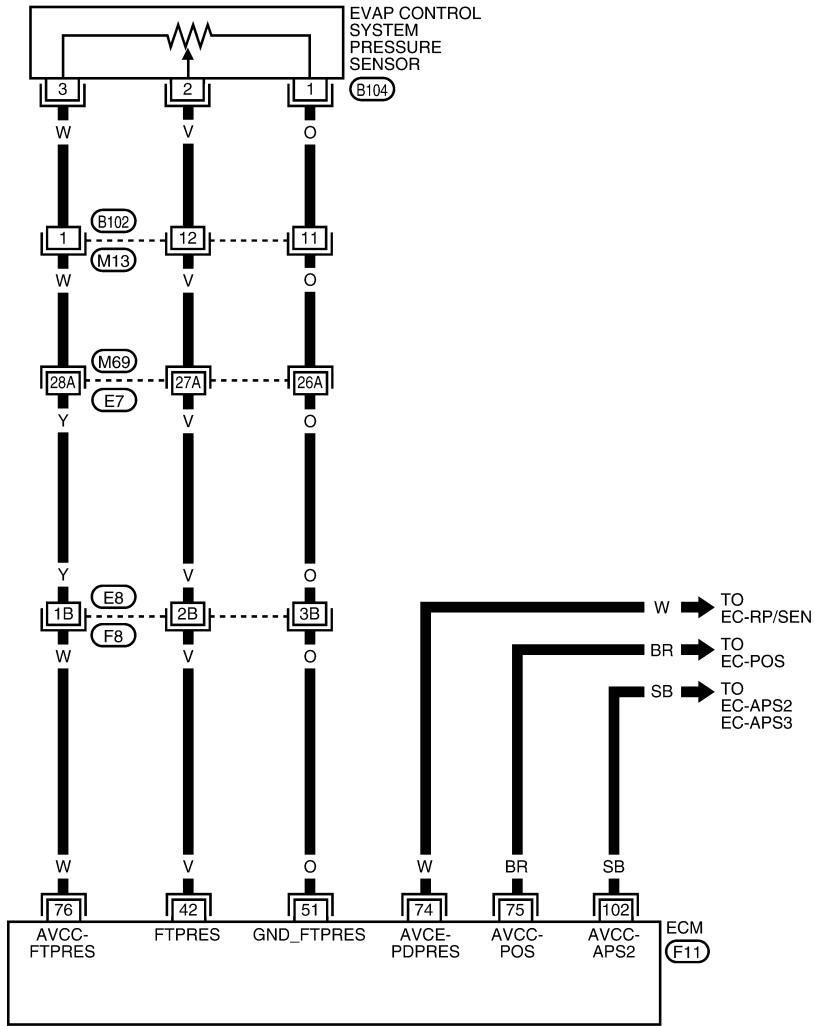

REFER TO THE FOLLOWING.
 (M69), (F8) - SUPER
 MULTIPLE JUNCTION (SMJ)

BBWA3073E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

DTC P0452 EVAP CONTROL SYSTEM PRESSURE SENSOR

< SERVICE INFORMATION >


| TER-MI-NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------|------------|---|---|--------------------------|
| 42 | V | EVAP control system pressure sensor | [Ignition switch: ON] | Approximately 1.8 - 4.8V |
| 51 | O | Sensor ground (EVAP control system pressure sensor) | [Engine is running] • Warm-up condition • Idle speed | Approximately 0V |
| 74 | W | Sensor power supply (Refrigerant pressure sensor) | [Ignition switch: ON] | Approximately 5V |
| 75 | BR | Sensor power supply [Crankshaft position sensor (POS)] | [Ignition switch: ON] | Approximately 5V |
| 76 | W | EVAP control system pressure sensor power supply | [Ignition switch: ON] | Approximately 5V |
| 102 | SB | Sensor power supply (Accelerator pedal position sensor 2) | [Ignition switch: ON] | Approximately 5V |

Diagnosis Procedure

INFOID:000000001702869

1. CHECK GROUND CONNECTIONS

1. Turn ignition switch OFF.
2. Loosen and retighten ground screws on the body.
Refer to [EC-142, "Ground Inspection"](#).

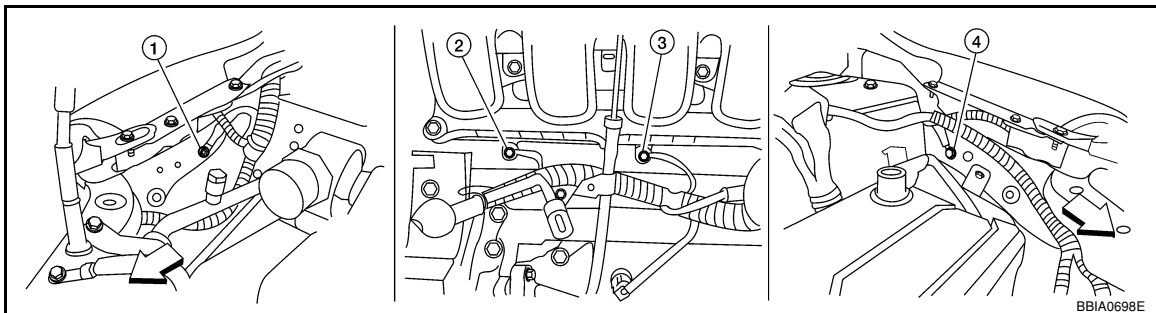

↙: Vehicle front

1. Body ground E24
4. Body ground E15

2. Engine ground F9

3. Engine ground F16

OK or NG


- OK >> GO TO 2.
NG >> Repair or replace ground connections.

2. CHECK CONNECTOR

DTC P0452 EVAP CONTROL SYSTEM PRESSURE SENSOR

< SERVICE INFORMATION >

1. Disconnect EVAP control system pressure sensor (1) harness connector.
 - EVAP canister (2)
 - EVAP canister vent control valve (3)
2. Check sensor harness connector for water.

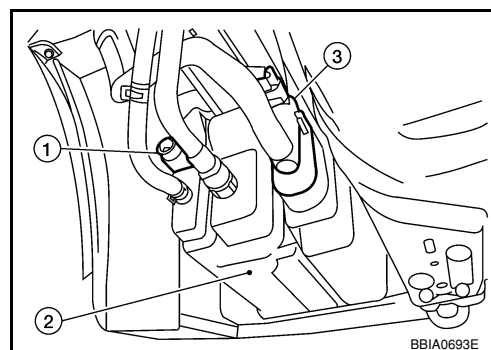


Water should not exist.

OK or NG

- OK >> GO TO 3.
NG >> Repair or replace harness connector.

3. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR POWER SUPPLY CIRCUIT-I

1. Turn ignition switch ON.
2. Check voltage between EVAP control system pressure sensor terminal 3 and ground with CONSULT-II or tester.

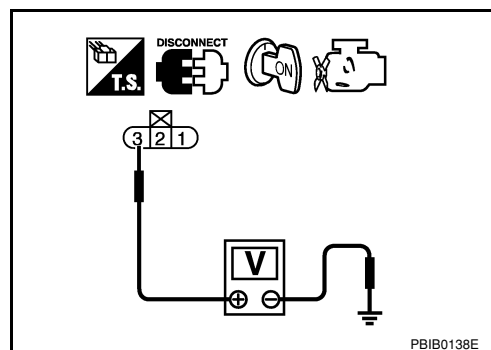

Voltage: Approximately 5V

OK or NG

- OK >> GO TO 5.
NG >> GO TO 4.

4. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness connectors M69, E7
- Harness connectors B102, M13
- Harness for open or short between EVAP control system pressure sensor and ECM

>> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR POWER SUPPLY CIRCUIT-II

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between EVAP control system pressure sensor terminal 3 and ECM terminal 76.

Continuity should exist.

OK or NG

- OK >> GO TO 7.
NG >> GO TO 6.

6. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness connectors M69, E7
- Harness connectors B102, M13
- Harness for open or short between EVAP control system pressure sensor and ECM

>> Repair open circuit or short to ground or short to power in harness or connectors.

7. CHECK COMPONENTS POWER SUPPLY

Check harness for short to power and short to ground, between the following terminals.

DTC P0452 EVAP CONTROL SYSTEM PRESSURE SENSOR

< SERVICE INFORMATION >

| ECM terminal | Sensor terminal | Reference Wiring Diagram |
|--------------|--|--|
| 74 | Refrigerant pressure sensor terminal 3 | EC-542. "Wiring Diagram" |
| 75 | Crankshaft position sensor (POS) terminal 1 | EC-297. "Wiring Diagram" |
| 76 | EVAP control system pressure sensor terminal 3 | EC-357. "Wiring Diagram" |
| 102 | APP sensor terminal 5 | EC-482. "Wiring Diagram" |

OK or NG

OK >> GO TO 8.

NG >> Repair short to ground or short to power in harness or connectors.

8. CHECK COMPONENTS

Check the following.

- Refrigerant pressure sensor (Refer to [MTC-22.](#))
- Crankshaft position sensor (POS) (Refer to [EC-301. "Component Inspection"](#).)

OK or NG

OK >> GO TO 9.

NG >> Replace malfunctioning components.

9. CHECK APP SENSOR

Refer to [EC-485. "Component Inspection"](#).

OK or NG

OK >> GO TO 11.

NG >> GO TO 10.

10. REPLACE ACCELERATOR PEDAL ASSEMBLY

1. Replace accelerator pedal assembly.
2. Perform [EC-76. "Accelerator Pedal Released Position Learning"](#).
3. Perform [EC-76. "Throttle Valve Closed Position Learning"](#).
4. Perform [EC-76. "Idle Air Volume Learning"](#).

>> **INSPECTION END**

11. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between EVAP control system pressure sensor terminal 1 and ECM terminal 51. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 13.

NG >> GO TO 12.

12. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness connectors M69, E7
- Harness connectors B102, M13
- Harness for open or short between EVAP control system pressure sensor and ECM

>> Repair open circuit or short to ground or short to power in harness or connectors.

13. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

DTC P0452 EVAP CONTROL SYSTEM PRESSURE SENSOR

< SERVICE INFORMATION >

1. Check harness continuity between ECM terminal 42 and EVAP control system pressure sensor terminal
2. Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 15.

NG >> GO TO 14.

14. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness connectors M69, E7
- Harness connectors B102, M13
- Harness for open or short between ECM and EVAP control system pressure sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

15. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Refer to [EC-361](#). "Component Inspection".

OK or NG

OK >> GO TO 16.

NG >> Replace EVAP control system pressure sensor.

16. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**

Component Inspection

INFOID:000000001702870

EVAP CONTROL SYSTEM PRESSURE SENSOR


1. Remove EVAP control system pressure sensor with its harness connector connected from EVAP canister.
Always replace O-ring with a new one.
2. Install a vacuum pump to EVAP control system pressure sensor.
3. Turn ignition switch ON and check output voltage between ECM terminal 42 (EVAP control system pressure sensor signal) and ground under the following conditions.

| Applied vacuum kPa (mmHg, inHg) | Voltage V |
|------------------------------------|------------------------------------|
| Not applied | 1.8 - 4.8 |
| -26.7 (-200, -7.87) | 2.1 to 2.5V lower than above value |

CAUTION:

- **Always calibrate the vacuum pump gauge when using it.**
- **Do not apply below -93.3 kPa (-700 mmHg, -27.56 inHg) or pressure over 101.3 kPa (760 mmHg, 29.92 inHg).**

4. If NG, replace EVAP control system pressure sensor.

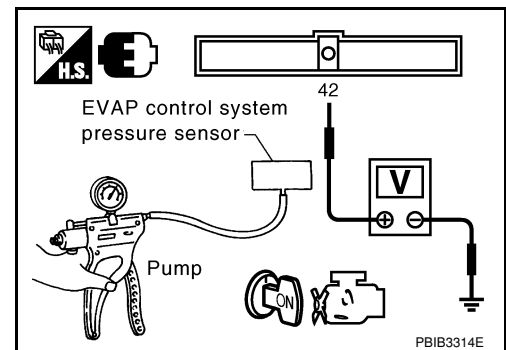

DTC P0453 EVAP CONTROL SYSTEM PRESSURE SENSOR

< SERVICE INFORMATION >



DTC P0453 EVAP CONTROL SYSTEM PRESSURE SENSOR

Component Description

INFOID:000000001702871

The EVAP control system pressure sensor (1) detects pressure in the purge line. The sensor output voltage to the ECM increases as pressure increases.

- EVAP canister (2)
- EVAP canister vent control valve (3)

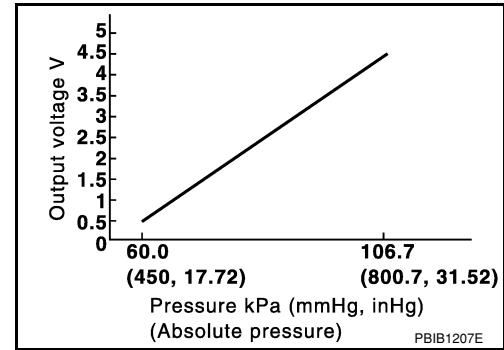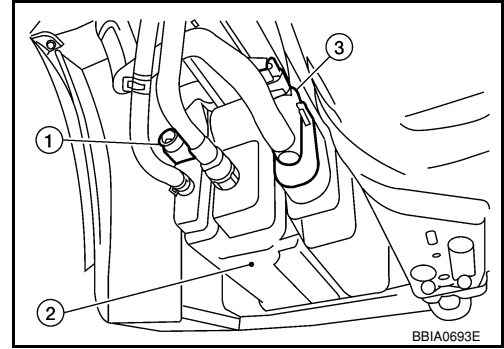

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702872

Specification data are reference values.

| MONITOR ITEM | CONDITION | SPECIFICATION |
|---------------|-----------------------|--------------------|
| EVAP SYS PRES | • Ignition switch: ON | Approx. 1.8 - 4.8V |

On Board Diagnosis Logic

INFOID:000000001702873

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|--|---|---|
| P0453 0453 | EVAP control system pressure sensor high input | An excessively high voltage from the sensor is sent to ECM. | <ul style="list-style-type: none"> • Harness or connectors (EVAP control system pressure sensor circuit is open or shorted.) [Crankshaft position sensor (POS) circuit is shorted.] (Accelerator pedal position sensor circuit is shorted.) (Refrigerant pressure sensor circuit is shorted.) • EVAP control system pressure sensor • Crankshaft position sensor (POS) • Accelerator pedal position sensor • Refrigerant pressure sensor • EVAP canister vent control valve • EVAP canister • Rubber hose to EVAP canister vent control valve |

DTC Confirmation Procedure

INFOID:000000001702874

NOTE:

DTC P0453 EVAP CONTROL SYSTEM PRESSURE SENSOR

< SERVICE INFORMATION >

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Always perform test at a temperature of 5°C (41°F) or more.

WITH CONSULT-II


1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.
3. Turn ignition switch ON.
4. Select "DATA MONITOR" mode with CONSULT-II.
5. Make sure that "FUEL T/TMP SE" is more than 0°C (32°F).
6. Wait at least 10 seconds.
If 1st trip DTC is detected, go to [EC-365, "Diagnosis Procedure"](#).

| DATA MONITOR | |
|---------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |
| COOLAN TEMP/S | XXX °C |
| FUEL T/TMP SE | XXX °C |

SEF194Y

WITH GST

1. Start engine and warm it up to normal operating temperature.
2. Check that voltage between ECM terminal 43 (Fuel tank temperature sensor signal) and ground is less than 4.2V.
3. Turn ignition switch OFF and wait at least 10 seconds.
4. Wait at least 10 seconds.
5. Select Service \$07 with GST.
If 1st trip DTC is detected, go to [EC-365, "Diagnosis Procedure"](#).

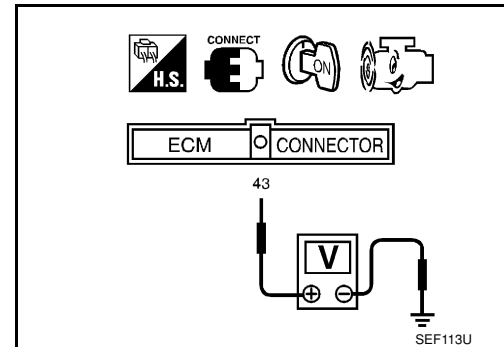

DTC P0453 EVAP CONTROL SYSTEM PRESSURE SENSOR



< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001702875

EC-PRE/SE-01

— : DETECTABLE LINE FOR DTC
 - - - : NON-DETECTABLE LINE FOR DTC

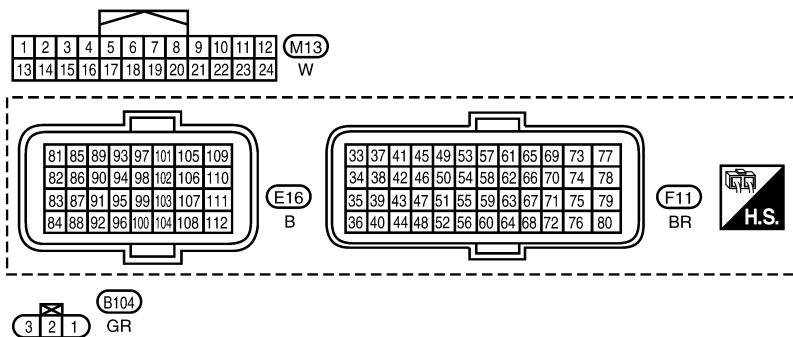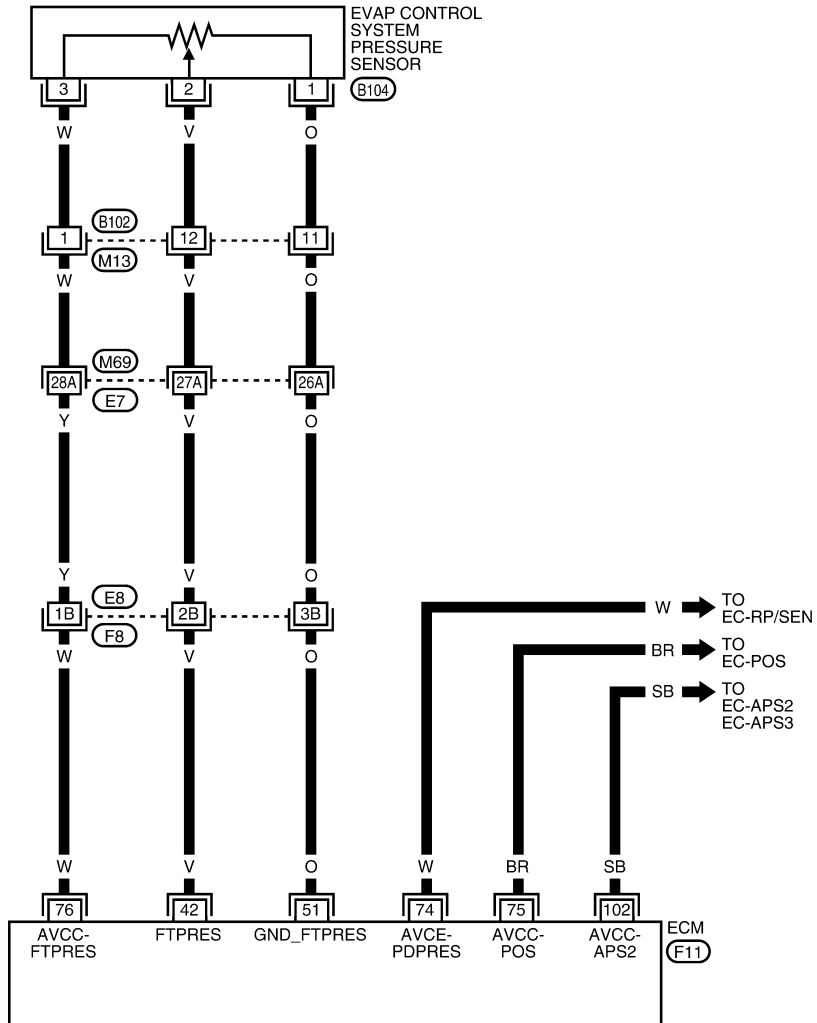

REFER TO THE FOLLOWING.
 (M69), (F8) - SUPER
 MULTIPLE JUNCTION (SMJ)

BBWA3073E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

DTC P0453 EVAP CONTROL SYSTEM PRESSURE SENSOR

< SERVICE INFORMATION >


| TER-MI-NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------|------------|---|---|--------------------------|
| 42 | V | EVAP control system pressure sensor | [Ignition switch: ON] | Approximately 1.8 - 4.8V |
| 51 | O | Sensor ground (EVAP control system pressure sensor) | [Engine is running] • Warm-up condition • Idle speed | Approximately 0V |
| 74 | W | Sensor power supply (Refrigerant pressure sensor) | [Ignition switch: ON] | Approximately 5V |
| 75 | BR | Sensor power supply [Crankshaft position sensor (POS)] | [Ignition switch: ON] | Approximately 5V |
| 76 | W | EVAP control system pressure sensor power supply | [Ignition switch: ON] | Approximately 5V |
| 102 | SB | Sensor power supply (Accelerator pedal position sensor 2) | [Ignition switch: ON] | Approximately 5V |

Diagnosis Procedure

INFOID:000000001702876

1. CHECK GROUND CONNECTIONS

1. Turn ignition switch OFF.
2. Loosen and retighten ground screws on the body.
Refer to [EC-142, "Ground Inspection"](#).

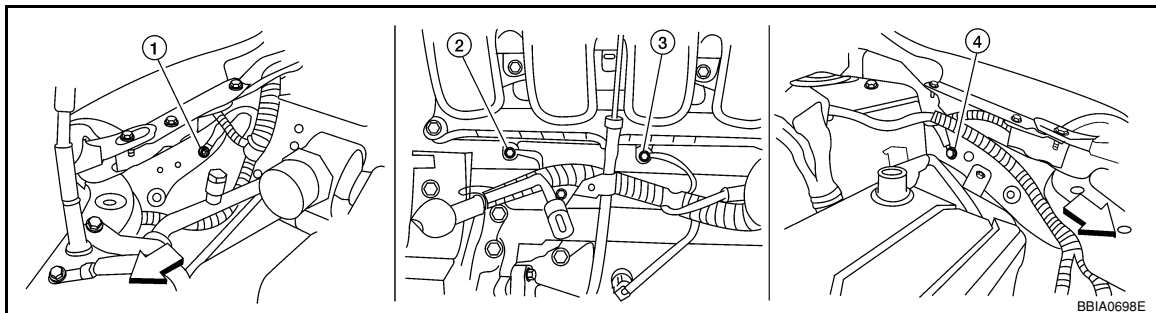

↔: Vehicle front

1. Engine ground E24
4. Body ground E15

2. Engine ground F9

3. Engine ground F16

OK or NG

OK >> GO TO 2.


NG >> Repair or replace ground connections.

2. CHECK CONNECTOR

DTC P0453 EVAP CONTROL SYSTEM PRESSURE SENSOR

< SERVICE INFORMATION >

1. Disconnect EVAP control system pressure sensor (1) harness connector.
 - EVAP canister (2)
 - EVAP canister vent control valve (3)
2. Check sensor harness connector for water.

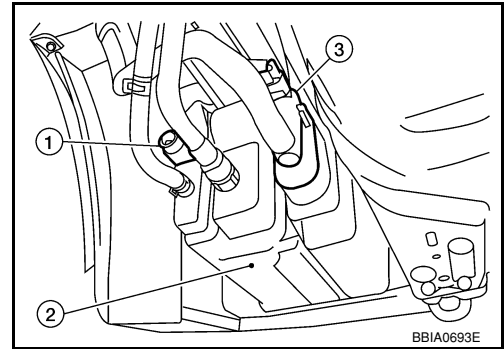

Water should not exist.

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace harness connector.


3. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR POWER SUPPLY CIRCUIT-I

1. Turn ignition switch ON.
2. Check voltage between EVAP control system pressure sensor terminal 3 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

OK or NG

- OK >> GO TO 5.
- NG >> GO TO 4.

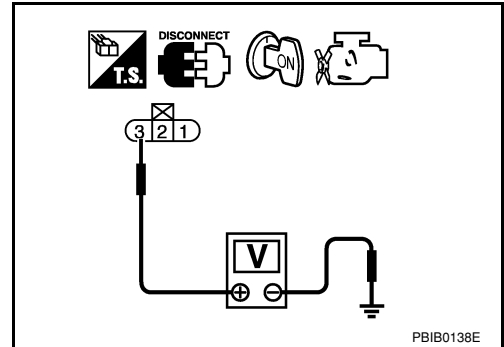

4. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness connectors M69, E7
- Harness connectors B102, M13
- Harness for open or short between EVAP control system pressure sensor and ECM

>> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR POWER SUPPLY CIRCUIT-II

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between EVAP control system pressure sensor terminal 3 and ECM terminal 76.

Continuity should exist.

OK or NG

- OK >> GO TO 7.
- NG >> GO TO 6.

6. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness connectors M69, E7
- Harness connectors B102, M13
- Harness for open or short between EVAP control system pressure sensor and ECM

>> Repair open circuit or short to ground or short to power in harness or connectors.

7. CHECK COMPONENTS POWER SUPPLY

Check harness for short to power and short to ground, between the following terminals.

DTC P0453 EVAP CONTROL SYSTEM PRESSURE SENSOR

< SERVICE INFORMATION >

| ECM terminal | Sensor terminal | Reference Wiring Diagram |
|--------------|--|--|
| 74 | Refrigerant pressure sensor terminal 3 | EC-542. "Wiring Diagram" |
| 75 | Crankshaft position sensor (POS) terminal 1 | EC-297. "Wiring Diagram" |
| 76 | EVAP control system pressure sensor terminal 3 | EC-357. "Wiring Diagram" |
| 102 | APP sensor terminal 5 | EC-482. "Wiring Diagram" |

OK or NG

OK >> GO TO 8.

NG >> Repair short to ground or short to power in harness or connectors.

8.CHECK COMPONENTS

Check the following.

- Refrigerant pressure sensor (Refer to [MTC-22.](#))
- Crankshaft position sensor (POS) (Refer to [EC-301. "Component Inspection"](#).)

OK or NG

OK >> GO TO 9.

NG >> Replace malfunctioning components.

9.CHECK APP SENSOR

Refer to [EC-485. "Component Inspection"](#).

OK or NG

OK >> GO TO 11.

NG >> GO TO 10.

10.REPLACE ACCELERATOR PEDAL ASSEMBLY

1. Replace accelerator pedal assembly.
2. Perform [EC-76. "Accelerator Pedal Released Position Learning"](#).
3. Perform [EC-76. "Throttle Valve Closed Position Learning"](#).
4. Perform [EC-76. "Idle Air Volume Learning"](#).

>> **INSPECTION END**

11.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between EVAP control system pressure sensor terminal 1 and ECM terminal 51. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 13.

NG >> GO TO 12.

12.DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E85, F8
- Harness connectors M69, E7
- Harness connectors B102, M13
- Harness for open or short between EVAP control system pressure sensor and ECM

>> Repair open circuit or short to ground or short to power in harness or connectors.

13.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

DTC P0453 EVAP CONTROL SYSTEM PRESSURE SENSOR

< SERVICE INFORMATION >

1. Check harness continuity between ECM terminal 42 and EVAP control system pressure sensor terminal
2. Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 15.

NG >> GO TO 14.

14. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness connectors M69, E7
- Harness connectors B102, M13
- Harness for open or short between ECM and EVAP control system pressure sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

15. CHECK RUBBER TUBE

1. Disconnect rubber tube connected to EVAP canister vent control valve.
2. Check the rubber tube for clogging, vent and kinked.

OK or NG

OK >> GO TO 16.

NG >> Clean the rubber tube using an air blower, repair or replace rubber tube.

16. CHECK EVAP CANISTER VENT CONTROL VALVE

Refer to [EC-343. "Component Inspection"](#).

OK or NG

OK >> GO TO 17.

NG >> Replace EVAP canister vent control valve.

17. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Refer to [EC-369. "Component Inspection"](#).

OK or NG

OK >> GO TO 18.

NG >> Replace EVAP control system pressure sensor.


18. CHECK IF EVAP CANISTER SATURATED WITH WATER

1. Remove EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.
2. Does water drain from the EVAP canister?

Yes or No

Yes >> GO TO 19.

No >> GO TO 21.

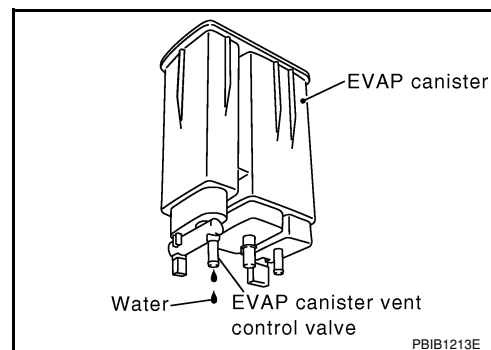

19. CHECK EVAP CANISTER

Weigh the EVAP canister with the EVAP canister vent control valve and EVAP control system pressure sensor attached.

The weight should be less than 1.9 kg (4.2 lb).

OK or NG

DTC P0453 EVAP CONTROL SYSTEM PRESSURE SENSOR

< SERVICE INFORMATION >

- OK >> GO TO 21.
- NG >> GO TO 20.

20. DETECT MALFUNCTIONING PART

Check the following.

- EVAP canister for damage
- EVAP hose connected to EVAP canister for clogging or poor connection

>> Repair hose or replace EVAP canister.

21. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**

Component Inspection

INFOID:000000001702877


EVAP CONTROL PRESSURE SENSOR

1. Remove EVAP control system pressure sensor with its harness connector connected from EVAP canister.
Always replace O-ring with a new one.
2. Install a vacuum pump to EVAP control system pressure sensor.
3. Turn ignition switch ON and check output voltage between ECM terminal 42 (EVAP control system pressure sensor signal) and ground under the following conditions.

| Applied vacuum kPa (mmHg, inHg) | Voltage V |
|------------------------------------|------------------------------------|
| Not applied | 1.8 - 4.8 |
| -26.7 (-200, -7.87) | 2.1 to 2.5V lower than above value |

CAUTION:

- **Always calibrate the vacuum pump gauge when using it.**
 - **Do not apply below -93.3 kPa (-700 mmHg, -27.56 inHg) or pressure over 101.3 kPa (760 mmHg, 29.92 inHg).**
4. If NG, replace EVAP control system pressure sensor.

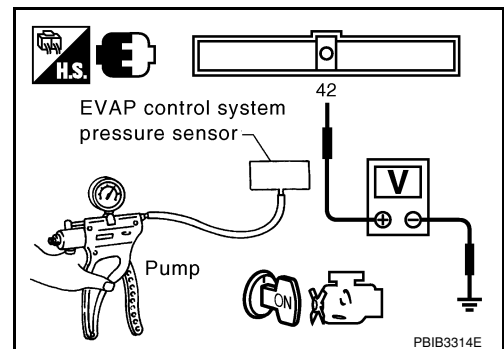

DTC P0455 EVAP CONTROL SYSTEM


< SERVICE INFORMATION >

DTC P0455 EVAP CONTROL SYSTEM

On Board Diagnosis Logic

INFOID:000000001702878

This diagnosis detects a very large leak (fuel filler cap fell off etc.) in EVAP system between the fuel tank and EVAP canister purge volume control solenoid valve.

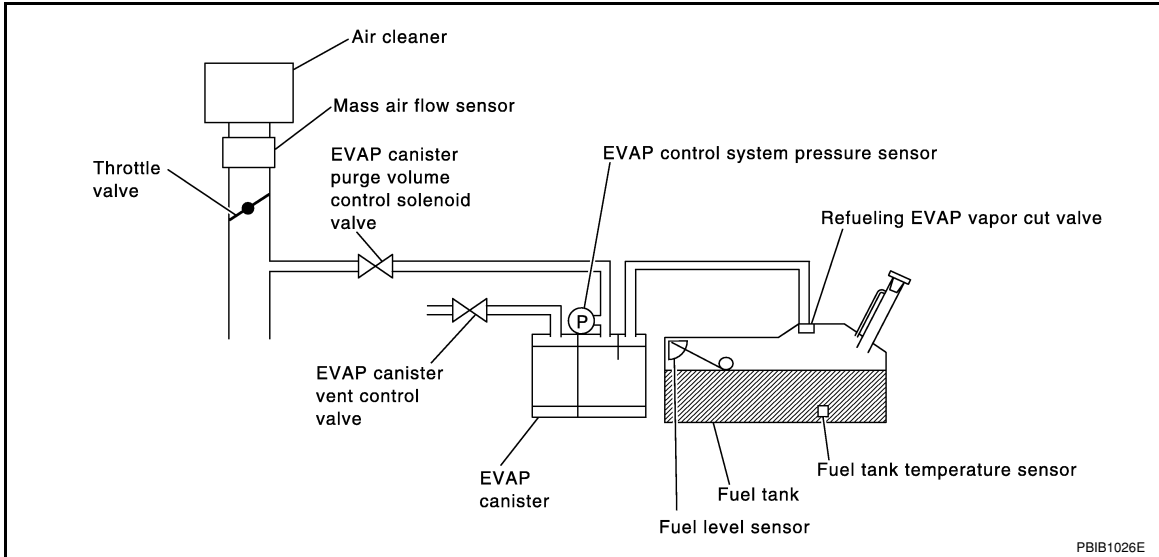

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|---|---|---|
| P0455 0455 | EVAP control system gross leak detected | <ul style="list-style-type: none"> • EVAP control system has a very large leak such as fuel filler cap fell off. • EVAP control system does not operate properly. | <ul style="list-style-type: none"> • Fuel filler cap remains open or fails to close. • Incorrect fuel tank vacuum relief valve • Incorrect fuel filler cap used • Foreign matter caught in fuel filler cap. • Leak is in line between intake manifold and EVAP canister purge volume control solenoid valve. • Foreign matter caught in EVAP canister vent control valve. • EVAP canister or fuel tank leaks • EVAP purge line (pipe and rubber tube) leaks • EVAP purge line rubber tube bent. • Loose or disconnected rubber tube • EVAP canister vent control valve and the circuit • EVAP canister purge volume control solenoid valve and the circuit • Fuel tank temperature sensor • O-ring of EVAP canister vent control valve is missing or damaged. • EVAP control system pressure sensor • Refueling EVAP vapor cut valve • ORVR system leaks |

CAUTION:

- Use only a genuine NISSAN fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may come on.
- If the fuel filler cap is not tightened properly, the MIL may come on.
- Use only a genuine NISSAN rubber tube as a replacement.

DTC Confirmation Procedure

INFOID:000000001702879

CAUTION:

Never remove fuel filler cap during the DTC Confirmation Procedure.

NOTE:

DTC P0455 EVAP CONTROL SYSTEM

< SERVICE INFORMATION >

- Make sure that EVAP hose are connected to EVAP canister purge volume control solenoid valve properly.
- If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:


- Perform “DTC WORK SUPPORT” when the fuel level is between 1/4 and 3/4 full, and vehicle is placed on flat level surface.
- Open engine hood before conducting the following procedure.

Ⓜ WITH CONSULT-II

1. Tighten fuel filler cap securely until reteaching sound is heard.
2. Turn ignition switch ON.
3. Turn ignition switch OFF and wait at least 10 seconds.
4. Turn ignition switch ON and select “DATA MONITOR” mode with CONSULT-II.
5. Make sure that the following conditions are met.
COOLAN TEMP/S: 0 - 70°C (32 - 158°F)
INT/A TEMP SE: 0 - 60°C (32 - 140°F)
6. Select “EVAP SML LEAK P0442/P1442” of “EVAPORATIVE SYSTEM” in “DTC WORK SUPPORT” mode with CONSULT-II. Follow the instruction displayed.

| DATA MONITOR | |
|---------------|---------|
| MONITOR | DTC |
| ENG SPEED | XXX rpm |
| COOLAN TEMP/S | XXX °C |
| INT/A TEMP SE | XXX °C |

PBIB2869E

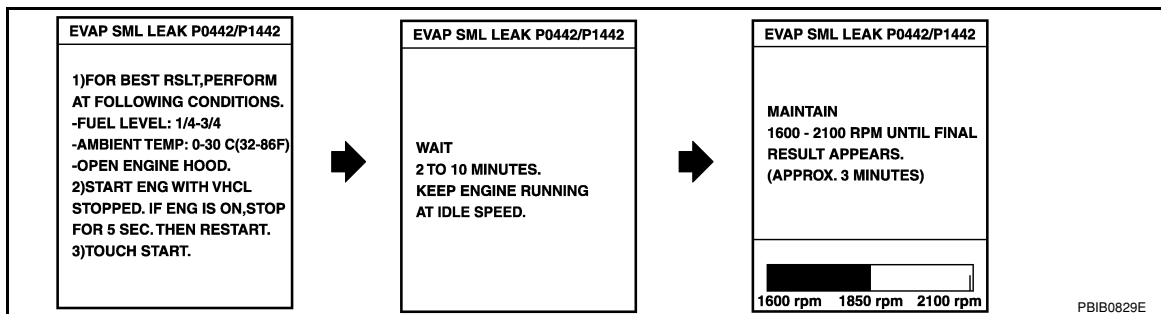

NOTE:

If the engine speed cannot be maintained within the range displayed on the CONSULT-II screen, go to [EC-69, "Basic Inspection"](#).

7. Make sure that “OK” is displayed.
 If “NG” is displayed, select “SELF-DIAG RESULTS” mode with CONSULT-II and make sure that “EVAP GROSS LEAK [P0455]” is displayed. If it is displayed, refer to [EC-372, "Diagnosis Procedure"](#).
 If P0442 is displayed, perform Diagnostic Procedure for DTC P0442, [EC-320, "Diagnosis Procedure"](#).

| EVAP SML LEAK P0442/P1442 |
|---|
| OK |
| SELF-DIAG RESULTS |
| NO DTC DETECTED. FURTHER TESTING MAY BE REQUIRED. |

SEC763C

Ⓜ WITH GST

NOTE:

Be sure to read the explanation of Driving Pattern on [EC-47, "Emission-related Diagnostic Information"](#) before driving vehicle.

1. Start engine.
2. Drive vehicle according to Driving Pattern, [EC-47, "Emission-related Diagnostic Information"](#).
3. Stop vehicle.
4. Turn ignition switch OFF, wait at least 10 seconds and then turn ignition switch ON.

DTC P0455 EVAP CONTROL SYSTEM

< SERVICE INFORMATION >

5. Select Service \$07 with GST.

- If P0441 is displayed on the screen, go to [EC-315. "Diagnosis Procedure"](#) for DTC P0441.
- If P0442 is displayed on the screen, go to [EC-320. "Diagnosis Procedure"](#) for DTC P0442.
- If P0455 is displayed on the screen, go to [EC-372. "Diagnosis Procedure"](#).

Diagnosis Procedure


INFOID:000000001702880

1. CHECK FUEL FILLER CAP DESIGN

1. Turn ignition switch OFF.
2. Check for genuine NISSAN fuel filler cap design.

OK or NG

- OK >> GO TO 2.
NG >> Replace with genuine NISSAN fuel filler cap.

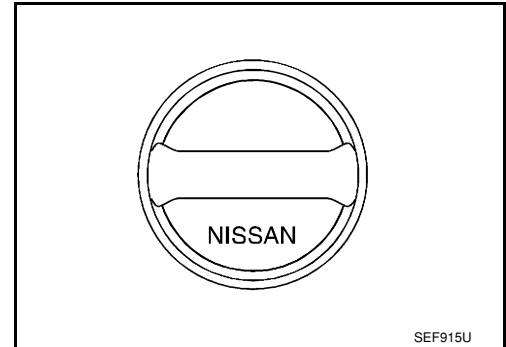

2. CHECK FUEL FILLER CAP INSTALLATION

Check that the cap is tightened properly by rotating the cap clockwise.

OK or NG

- OK >> GO TO 3.
NG >> 1. Open fuel filler cap, then clean cap and fuel filler neck threads using air blower.
2. Retighten until reteaching sound is heard.

3. CHECK FUEL FILLER CAP FUNCTION

Check for air releasing sound while opening the fuel filler cap.

OK or NG

- OK >> GO TO 5.
NG >> GO TO 4.

4. CHECK FUEL TANK VACUUM RELIEF VALVE

Refer to [EC-33. "Component Inspection"](#).

OK or NG

- OK >> GO TO 5.
NG >> Replace fuel filler cap with a genuine one.

5. CHECK EVAP PURGE LINE

Check EVAP purge line (pipe, rubber tube, fuel tank and EVAP canister) for cracks, improper connection or disconnection.

Refer to [EC-31](#).

OK or NG

- OK >> GO TO 6.
NG >> Repair or reconnect the hose.

6. CLEAN EVAP PURGE LINE

Clean EVAP purge line (pipe and rubber tube) using air blower.

>> GO TO 7.

7. CHECK EVAP CANISTER VENT CONTROL VALVE

Check the following.

- EVAP canister vent control is installed properly.
Refer to [EC-35. "Removal and Installation"](#).
- EVAP canister vent control valve.

DTC P0455 EVAP CONTROL SYSTEM

< SERVICE INFORMATION >

Refer to [EC-343. "Component Inspection"](#).

OK or NG

OK >> GO TO 8.

NG >> Repair or replace EVAP canister vent control valve and O-ring.



8. INSTALL THE PRESSURE PUMP

To locate the EVAP leak, install EVAP service port adapter and pressure pump to EVAP service port securely. For the location of EVAP service port (2), refer to [EC-31. "Description"](#).

- EVAP canister purge volume control solenoid valve (1)
- ↵: Vehicle front

NOTE:

Improper installation of the EVAP service port adapter to the EVAP service port may cause leaking.

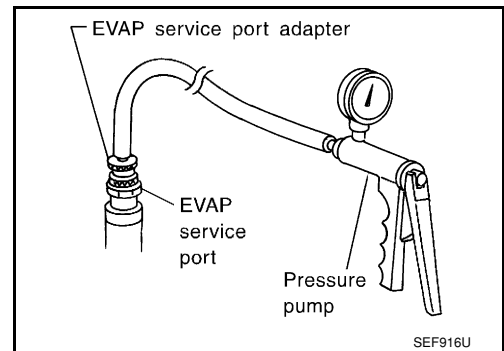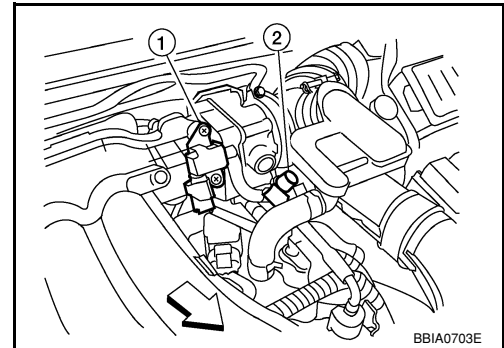

With CONSULT-II>>GO TO 9.

Without CONSULT-II>>GO TO 10.


9. CHECK FOR EVAP LEAK

With CONSULT-II

1. Turn ignition switch ON.
2. Select "EVAP SYSTEM CLOSE" of "WORK SUPPORT" mode with CONSULT-II.
3. Touch "START" and apply pressure into the EVAP line until the pressure indicator reaches the middle of the bar graph.

CAUTION:

- Never use compressed air or a high pressure pump.
- Do not exceed 4.12 kPa (0.042 kg/cm², 0.6 psi) of pressure in the system.

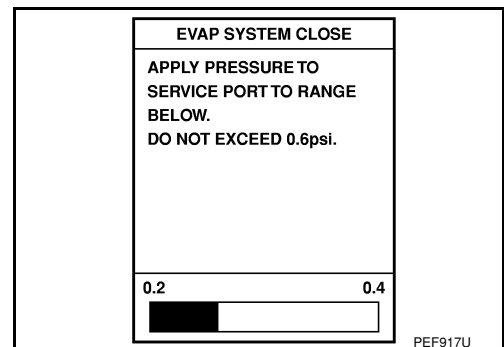


DTC P0455 EVAP CONTROL SYSTEM

< SERVICE INFORMATION >

- Using EVAP leak detector, locate the EVAP leak. For the leak detector, refer to the instruction manual for more details.
Refer to [EC-31. "Description"](#).

OK or NG


- OK >> GO TO 11.
NG >> Repair or replace.

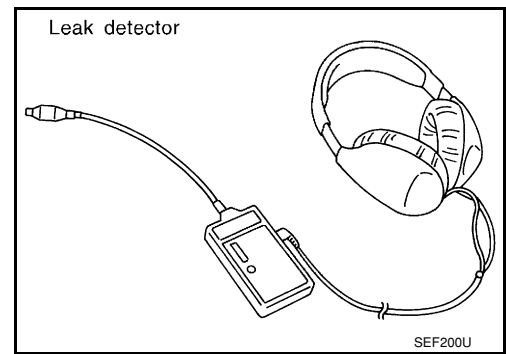

10. CHECK FOR EVAP LEAK

⊗ Without CONSULT-II

- Turn ignition switch OFF.
- Apply 12 volts DC to EVAP canister vent control valve (3). The valve will close. (Continue to apply 12 volts until the end of test.)
 - EVAP control system pressure sensor (1)
 - EVAP canister (2)

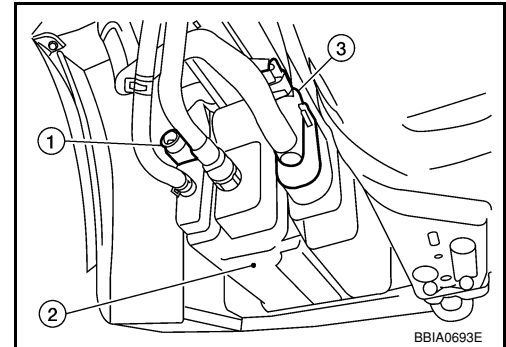

- Pressurize the EVAP line using pressure pump with 1.3 to 2.7 kPa (10 to 20 mmHg, 0.39 to 0.79 inHg), then remove pump and EVAP service port adapter.


CAUTION:

- Never use compressed air or a high pressure pump.
- Do not exceed 4.12 kPa (0.042 kg/cm², 0.6 psi) of pressure in the system.

- Using EVAP leak detector, locate the EVAP leak. For the leak detector, refer to the instruction manual for more details.
Refer to [EC-31. "Description"](#).

OK or NG

- OK >> GO TO 12.
NG >> Repair or replace.

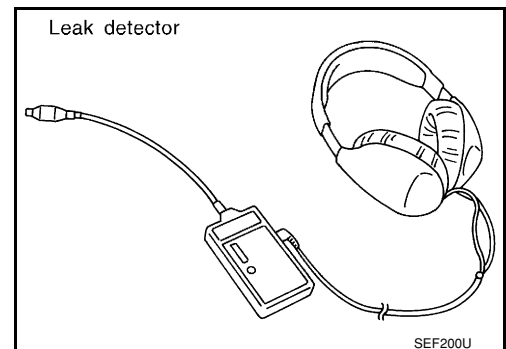

11. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION

Ⓟ With CONSULT-II

- Disconnect vacuum hose to EVAP canister purge volume control solenoid valve at EVAP service port.
- Start engine.

DTC P0455 EVAP CONTROL SYSTEM

< SERVICE INFORMATION >

3. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode.
4. Touch "Qu" on CONSULT-II screen to increase "PURG VOL CONT/V" opening to 100%.
5. Check vacuum hose for vacuum.

Vacuum should exist.

OK or NG

- OK >> GO TO 14.
- NG >> GO TO 13.

| ACTIVE TEST | |
|-----------------|---------|
| PURG VOL CONT/V | XXX % |
| MONITOR | |
| ENG SPEED | XXX rpm |
| A/F ALPHA-B1 | XXX % |
| | |
| | |
| | |
| | |
| | |

PBIB1786E

12. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION

⊗ Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Stop engine.
3. Disconnect vacuum hose to EVAP canister purge volume control solenoid valve at EVAP service port.
4. Start engine and let it idle for at least 80 seconds.
5. Check vacuum hose for vacuum when revving engine up to 2,000 rpm.

Vacuum should exist.

OK or NG

- OK >> GO TO 15.
- NG >> GO TO 13.

13. CHECK VACUUM HOSE

Check vacuum hoses for clogging or disconnection. Refer to [EC-99, "Vacuum Hose Drawing"](#).

OK or NG

- OK (With CONSULT-II) >> GO TO 14.
- OK (Without CONSULT-II) >> GO TO 15.
- NG >> Repair or reconnect the hose.

14. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Ⓜ With CONSULT-II

1. Start engine.
2. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT-II. Check that engine speed varies according to the valve opening.

OK or NG

- OK >> GO TO 16.
- NG >> GO TO 15.

| ACTIVE TEST | |
|-----------------|---------|
| PURG VOL CONT/V | XXX % |
| MONITOR | |
| ENG SPEED | XXX rpm |
| A/F ALPHA-B1 | XXX % |
| | |
| | |
| | |
| | |
| | |

PBIB1786E

15. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Refer to [EC-337, "Component Inspection"](#).

OK or NG

- OK >> GO TO 16.
- NG >> Replace EVAP canister purge volume control solenoid valve.

16. CHECK FUEL TANK TEMPERATURE SENSOR

Refer to [EC-273, "Component Inspection"](#).

OK or NG

- OK >> GO TO 17.

DTC P0455 EVAP CONTROL SYSTEM

< SERVICE INFORMATION >

NG >> Replace fuel level sensor unit.

17.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Refer to [EC-361, "Component Inspection"](#).

OK or NG

OK >> GO TO 18.

NG >> Replace EVAP control system pressure sensor.

18.CHECK EVAP/ORVR LINE

Check refueling EVAP/ORVR line between EVAP canister and fuel tank for clogging, kink, looseness and improper connection. For location, refer to [EC-38](#).

OK or NG

OK >> GO TO 19.

>> Repair or replace hoses and tubes.

19.CHECK RECIRCULATION LINE

Check recirculation line between filler neck tube and fuel tank for clogging, kink, cracks, looseness and improper connection.

OK or NG

OK >> GO TO 20.

>> Repair or replace hoses, tubes or filler neck tube.

20.CHECK REFUELING EVAP VAPOR CUT VALVE

Refer to [EC-40, "Component Inspection"](#).

OK or NG

OK >> GO TO 21.

>> Replace refueling EVAP vapor cut valve with fuel tank.

21.CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**

DTC P0456 EVAP CONTROL SYSTEM

< SERVICE INFORMATION >

DTC P0456 EVAP CONTROL SYSTEM

On Board Diagnosis Logic


INFOID:000000001702881

This diagnosis detects very small leaks in the EVAP line between fuel tank and EVAP canister purge volume control solenoid valve, using the intake manifold vacuum in the same way as conventional EVAP small leak diagnosis.

If ECM judges a leak which corresponds to a very small leak, the very small leak P0456 will be detected.

If ECM judges a leak equivalent to a small leak, EVAP small leak P0442 will be detected.

If ECM judges there are no leaks, the diagnosis will be OK.

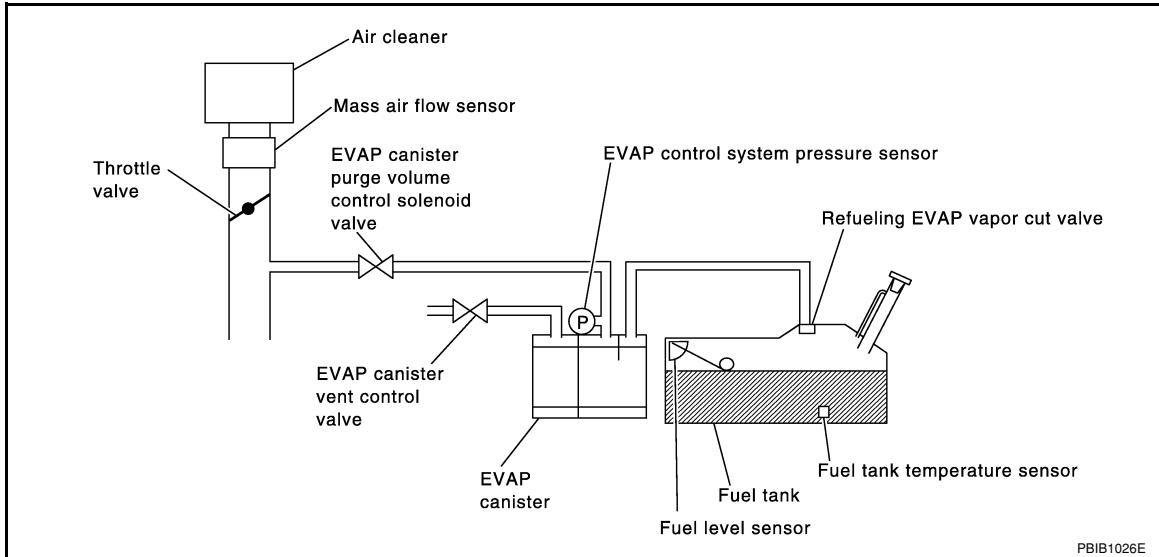

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|---|--|---|
| P0456 0456 | Evaporative emission control system very small leak (negative pressure check) | <ul style="list-style-type: none"> • EVAP system has a very small leak. • EVAP system does not operate properly. | <ul style="list-style-type: none"> • Incorrect fuel tank vacuum relief valve • Incorrect fuel filler cap used • Fuel filler cap remains open or fails to close. • Foreign matter caught in fuel filler cap. • Leak is in line between intake manifold and EVAP canister purge volume control solenoid valve. • Foreign matter caught in EVAP canister vent control valve. • EVAP canister or fuel tank leaks • EVAP purge line (pipe and rubber tube) leaks • EVAP purge line rubber tube bent • Loose or disconnected rubber tube • EVAP canister vent control valve and the circuit • EVAP canister purge volume control solenoid valve and the circuit • Fuel tank temperature sensor • O-ring of EVAP canister vent control valve is missing or damaged • EVAP canister is saturated with water • EVAP control system pressure sensor • Refueling EVAP vapor cut valve • ORVR system leaks • Fuel level sensor and the circuit • Foreign matter caught in EVAP canister purge volume control solenoid valve |

CAUTION:

- Use only a genuine NISSAN fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may come on.
- If the fuel filler cap is not tightened properly, the MIL may come on.
- Use only a genuine NISSAN rubber tube as a replacement.

DTC P0456 EVAP CONTROL SYSTEM

< SERVICE INFORMATION >

DTC Confirmation Procedure

INFOID:000000001702882

NOTE:

- If DTC P0456 is displayed with P0442, first perform trouble diagnosis for DTC P0456.
- After repair, make sure that the hoses and clips are installed properly.
- If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

- Open engine hood before conducting following procedure.
- If any of following conditions are met just before the DTC confirmation procedure, leave the vehicle for more than 1 hour.
 - Fuel filler cap is removed.
 - Refilled or drained the fuel.
 - EVAP component parts is/are removed.
- Before performing the following procedure, confirm that battery voltage is more than 11V at idle.


Ⓢ WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-II.
2. Make sure the following conditions are met.
 - FUEL LEVEL SE: 0.25 - 1.4V**
 - COOLAN TEMP/S: 0 - 32°C (32 - 90°F)**
 - FUEL T/TMP SE: 0 - 35°C (32 - 95°F)**
 - INT/A TEMP SE: More than 0°C (32°F)**
 If NG, turn ignition switch OFF and leave the vehicle in a cool place (soak the vehicle) or refilling/draining fuel until the output voltage condition of the "FUEL LEVEL SE" meets within the range above and leave the vehicle for more than 1 hour. Then start from step 1).
3. Turn ignition switch OFF and wait at least 10 seconds.
4. Turn ignition switch ON.
5. Select "EVAP V/S LEAK P0456" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT-II.

| DATA MONITOR | |
|---------------|---------|
| MONITOR | DTC |
| ENG SPEED | XXX rpm |
| COOLAN TEMP/S | XXX °C |
| INT/A TEMP SE | XXX °C |
| FUEL LEVEL SE | XXX V |
| FUEL T/TEMP/S | XXX °C |

PBIB2644E

Follow the instruction displayed.

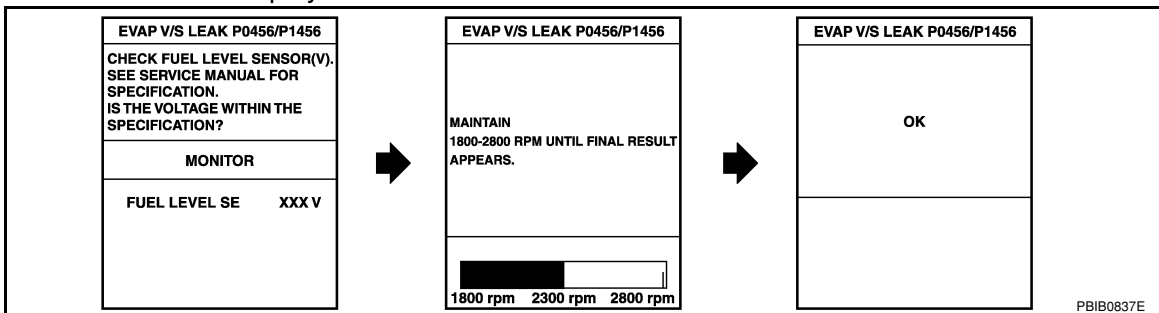

6. Make sure that "OK" is displayed. If "NG" is displayed, refer to [EC-379. "Diagnosis Procedure"](#).

NOTE:

- If the engine speed cannot be maintained within the range displayed on CONSULT-II screen, go to [EC-69. "Basic Inspection"](#).
- Make sure that EVAP hoses are connected to EVAP canister purge volume control solenoid valve properly.

Overall Function Check

INFOID:000000001702883

Ⓢ WITH GST

Use this procedure to check the overall function of the EVAP very small leak function. During this check, a 1st trip DTC might not be confirmed.


CAUTION:

- Never use compressed air, doing so may damage the EVAP system.
- Do not start engine.


DTC P0456 EVAP CONTROL SYSTEM

< SERVICE INFORMATION >

- Do not exceeded 4.12 kPa (0.042 kg/cm², 0.6 psi).
1. Attach the EVAP service port adapter securely to the EVAP service port (2).
 - EVAP canister purge volume control solenoid valve (1)
 - ↶: Vehicle front

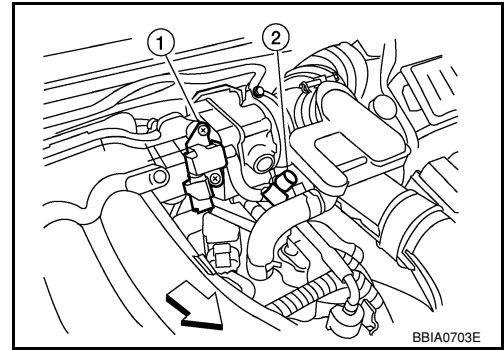

2. Set the pressure pump and a hose.
3. Also set the pressure pump with pressure gauge to the EVAP service port adapter.
4. Turn ignition switch ON.
5. Connect GST and select Service \$08.
6. Using Service \$08 control the EVAP canister vent control valve (close).
7. Apply pressure and make sure the following conditions are satisfied.

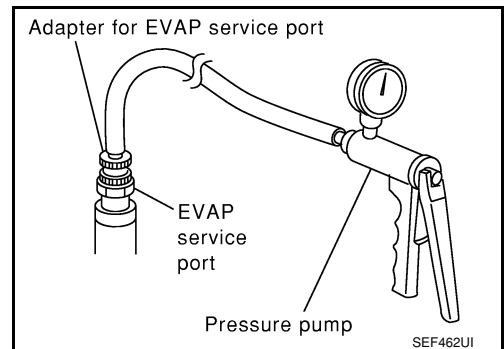

Pressure to be applied: 2.7 kPa (20 mmHg, 0.79 inHg)
Time to be waited after the pressure drawn in to the EVAP system and the pressure to be dropped: 60 seconds and the pressure should not be dropped more than 0.4 kPa (3 mmHg, 0.12 inHg).

If NG, go to [EC-379. "Diagnosis Procedure"](#).

If OK, go to next step.

8. Disconnect GST.
9. Start engine and warm it up to normal operating temperature.
10. Turn ignition switch OFF and wait at least 10 seconds.
11. Restart engine and let it idle for 90 seconds.
12. Keep engine speed at 2,000 rpm for 30 seconds.
13. Turn ignition switch OFF.

NOTE:

For more information, refer to GST Instruction Manual.

Diagnosis Procedure


INFOID:000000001702884

1. CHECK FUEL FILLER CAP DESIGN

1. Turn ignition switch OFF.
2. Check for genuine NISSAN fuel filler cap design.

OK or NG

- OK >> GO TO 2.
- NG >> Replace with genuine NISSAN fuel filler cap.

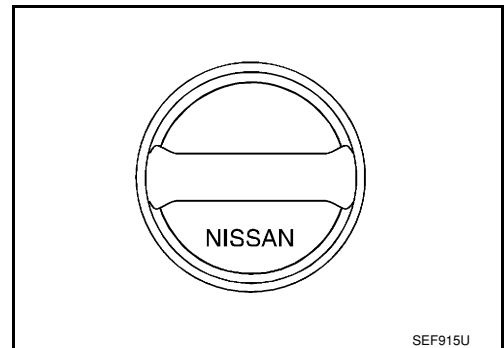

2. CHECK FUEL FILLER CAP INSTALLATION

Check that the cap is tightened properly by rotating the cap clockwise.

OK or NG

- OK >> GO TO 3.
- NG >> 1. Open fuel filler cap, then clean cap and fuel filler neck threads using air blower.
 2. Retighten until ratcheting sound is heard.

DTC P0456 EVAP CONTROL SYSTEM

< SERVICE INFORMATION >

3. CHECK FUEL FILLER CAP FUNCTION

Check for air releasing sound while opening the fuel filler cap.

OK or NG

- OK >> GO TO 5.
- NG >> GO TO 4.

4. CHECK FUEL TANK VACUUM RELIEF VALVE

Refer to [EC-33, "Component Inspection"](#).

OK or NG

- OK >> GO TO 5.
- NG >> Replace fuel filler cap with a genuine one.



5. INSTALL THE PRESSURE PUMP

To locate the EVAP leak, install EVAP service port adapter and pressure pump to EVAP service port securely. For the location of EVAP service port (2), refer to [EC-31, "Description"](#).

- EVAP canister purge volume control solenoid valve (1)
- ⇐: Vehicle front

NOTE:

Improper installation of the EVAP service port adapter to the EVAP service port may cause leaking.

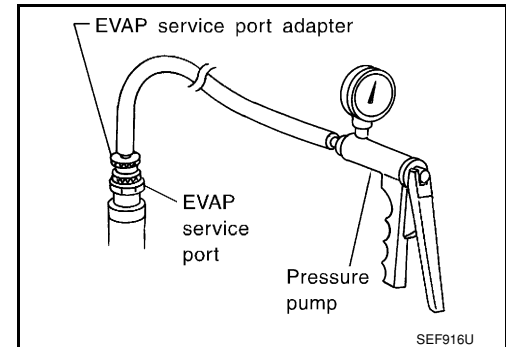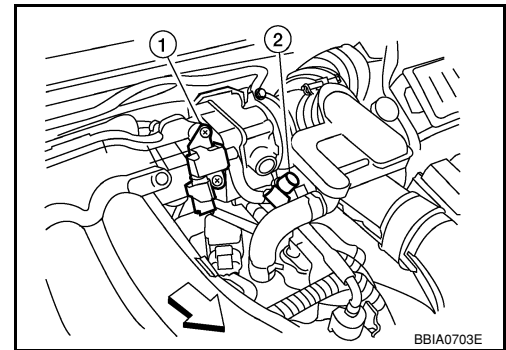

With CONSULT-II >> GO TO 6.

Without CONSULT-II >> GO TO 7.


6. CHECK FOR EVAP LEAK

With CONSULT-II

1. Turn ignition switch ON.
2. Select "EVAP SYSTEM CLOSE" of "WORK SUPPORT" mode with CONSULT-II.
3. Touch "START" and apply pressure into the EVAP line until the pressure indicator reaches the middle of the bar graph.

CAUTION:

- Never use compressed air or a high pressure pump.
- Do not exceed 4.12 kPa (0.042 kg/cm², 0.6 psi) of pressure in the system.

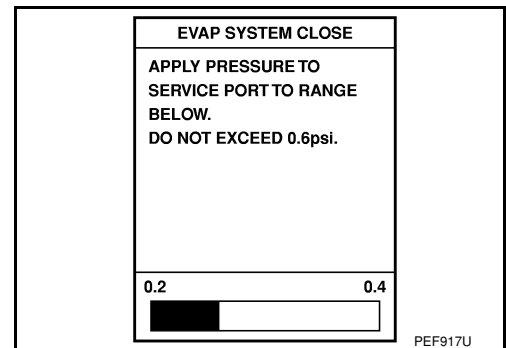


DTC P0456 EVAP CONTROL SYSTEM

< SERVICE INFORMATION >

- Using EVAP leak detector, locate the EVAP leak. For the leak detector, refer to the instruction manual for more details.
Refer to [EC-31. "Description"](#).

OK or NG


- OK >> GO TO 8.
- NG >> Repair or replace.

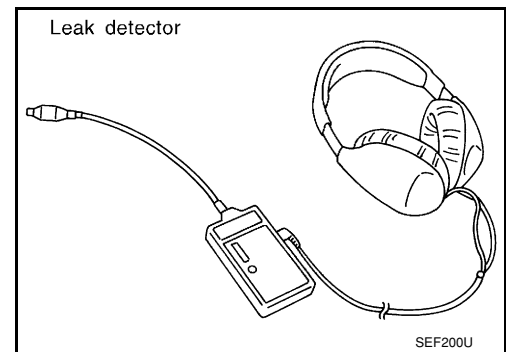

7. CHECK FOR EVAP LEAK

⊗ Without CONSULT-II

- Turn ignition switch OFF.
- Apply 12 volts DC to EVAP canister vent control valve (3). The valve will close. (Continue to apply 12 volts until the end of test.)
 - EVAP control system pressure sensor (1)
 - EVAP canister (2)

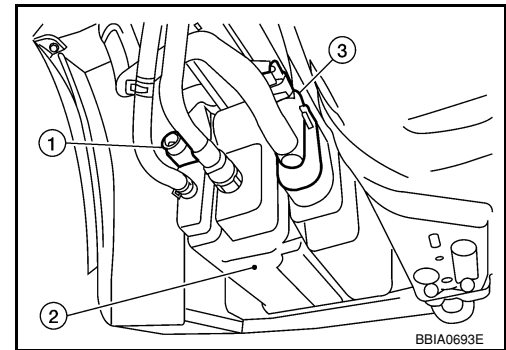

- Pressurize the EVAP line using pressure pump with 1.3 to 2.7 kPa (10 to 20 mmHg, 0.39 to 0.79 inHg), then remove pump and EVAP service port adapter.


CAUTION:

- Never use compressed air or a high pressure pump.
- Do not exceed 4.12 kPa (0.042 kg/cm², 0.6 psi) of pressure in the system.

- Using EVAP leak detector, locate the EVAP leak. For the leak detector, refer to the instruction manual for more details.
Refer to [EC-31. "Description"](#).

OK or NG

- OK >> GO TO 8.
- NG >> Repair or replace.

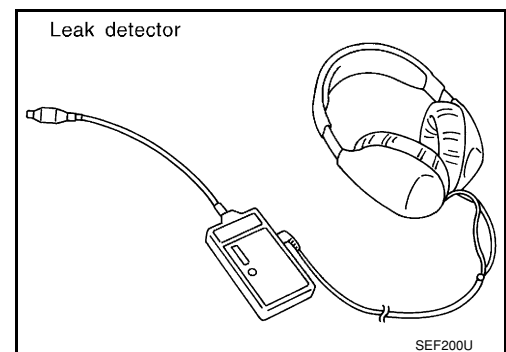

8. CHECK EVAP CANISTER VENT CONTROL VALVE

Check the following.

- EVAP canister vent control valve is installed properly.
Refer to [EC-35. "Removal and Installation"](#).
- EVAP canister vent control valve.
Refer to [EC-343. "Component Inspection"](#).

OK or NG

- OK >> GO TO 9.
- NG >> Repair or replace EVAP canister vent control valve and O-ring.

9. CHECK IF EVAP CANISTER SATURATED WITH WATER

- Remove EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.

DTC P0456 EVAP CONTROL SYSTEM

< SERVICE INFORMATION >


2. Does water drain from the EVAP canister?

Yes or No

Yes >> GO TO 10.

No (With CONSULT-II)>>GO TO 12.

No (Without CONSULT-II)>>GO TO 13.

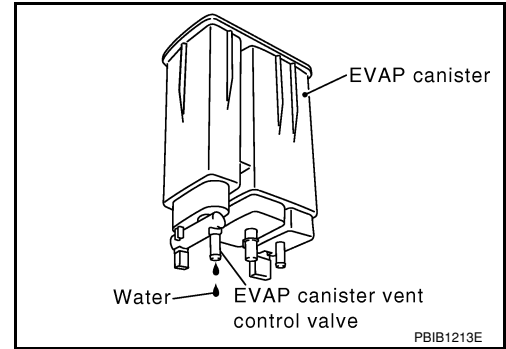

10. CHECK EVAP CANISTER

Weigh the EVAP canister with the EVAP canister vent control valve and EVAP control system pressure sensor attached.

The weight should be less than 1.9 kg (4.2 lb).

OK or NG

OK (With CONSULT-II)>>GO TO 12.

OK (Without CONSULT-II)>>GO TO 13.

NG >> GO TO 11.

11. DETECT MALFUNCTIONING PART

Check the following.

- EVAP canister for damage
- EVAP hose between EVAP canister and vehicle frame for clogging or poor connection

>> Repair hose or replace EVAP canister.

12. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION

Ⓟ With CONSULT-II

1. Disconnect vacuum hose to EVAP canister purge volume control solenoid valve at EVAP service port.
2. Start engine.
3. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode.
4. Touch "Qu" on CONSULT-II screen to increase "PURG VOL CONT/V" opening to 100%.
5. Check vacuum hose for vacuum.

Vacuum should exist.

OK or NG

OK >> GO TO 15.

NG >> GO TO 14.

| ACTIVE TEST | |
|-----------------|---------|
| PURG VOL CONT/V | XXX % |
| MONITOR | |
| ENG SPEED | XXX rpm |
| A/F ALPHA-B1 | XXX % |
| | |
| | |
| | |
| | |

PBIB1786E

13. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION

ⓧ Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Stop engine.
3. Disconnect vacuum hose to EVAP canister purge volume control solenoid valve at EVAP service port.
4. Start engine and let it idle for at least 80 seconds.
5. Check vacuum hose for vacuum when revving engine up to 2,000 rpm.

Vacuum should exist.

OK or NG

OK >> GO TO 16.

NG >> GO TO 14.

14. CHECK VACUUM HOSE

DTC P0456 EVAP CONTROL SYSTEM

< SERVICE INFORMATION >

Check vacuum hoses for clogging or disconnection. Refer to [EC-99. "Vacuum Hose Drawing"](#).

OK or NG

- OK >> GO TO 15.
- NG >> Repair or reconnect the hose.

15.CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Refer to [EC-337. "Component Inspection"](#).

OK or NG

- OK >> GO TO 16.
- NG >> Replace EVAP canister purge volume control solenoid valve.

16.CHECK FUEL TANK TEMPERATURE SENSOR

Refer to [EC-273. "Component Inspection"](#).

OK or NG

- OK >> GO TO 17.
- NG >> Replace fuel level sensor unit.

17.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Refer to [EC-361. "Component Inspection"](#).

OK or NG

- OK >> GO TO 18.
- NG >> Replace EVAP control system pressure sensor.

18.CHECK EVAP PURGE LINE

Check EVAP purge line (pipe, rubber tube, fuel tank and EVAP canister) for cracks or improper connection. Refer to [EC-31. "Description"](#).

OK or NG

- OK >> GO TO 19.
- NG >> Repair or reconnect the hose.

19.CLEAN EVAP PURGE LINE

Clean EVAP purge line (pipe and rubber tube) using air blower.

>> GO TO 20.

20.CHECK EVAP/ORVR LINE

Check EVAP/ORVR line between EVAP canister and fuel tank for clogging, kink, looseness and improper connection. For location, refer to [EC-38](#).

OK or NG

- OK >> GO TO 21.
- NG >> Repair or replace hoses and tubes.

21.CHECK RECIRCULATION LINE

Check recirculation line between filler neck tube and fuel tank for clogging, kink, cracks, looseness and improper connection.

OK or NG

- OK >> GO TO 22.
- NG >> Repair or replace hose, tube or filler neck tube.

22.CHECK REFUELING EVAP VAPOR CUT VALVE

Refer to [EC-40. "Component Inspection"](#).

OK or NG

- OK >> GO TO 23.
- NG >> Replace refueling EVAP vapor cut valve with fuel tank.

23.CHECK FUEL LEVEL SENSOR

Refer to [FL-5](#).

A

EC

C

D

E

F

G

H

I

J

K

L

M

N

O

P

DTC P0456 EVAP CONTROL SYSTEM

< SERVICE INFORMATION >

OK or NG

OK >> GO TO 24.

NG >> Replace fuel level sensor unit.

24.CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**

DTC P0460 FUEL LEVEL SENSOR

< SERVICE INFORMATION >

DTC P0460 FUEL LEVEL SENSOR


Component Description

INFOID:000000001702885

The fuel level sensor (3) is mounted in the fuel level sensor unit. The sensor detects a fuel level in the fuel tank and transmits a signal to the combination meter. The combination meter sends the fuel level sensor signal to the ECM through CAN communication line.

It consists of two parts, one is mechanical float and the other is variable resistor. Fuel level sensor output voltage changes depending on the movement of the fuel level mechanical float.

- Fuel level sensor unit and fuel pump (1)
- Fuel pressure regulator (2)
- Fuel tank temperature sensor (4)

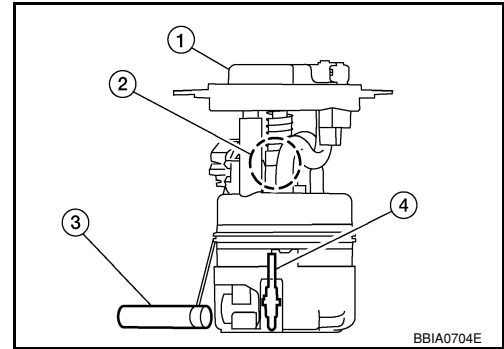

On Board Diagnosis Logic

INFOID:000000001702886

NOTE:

- If DTC P0460 is displayed with DTC U1000, U1001, first perform the trouble diagnosis for DTC U1000, U1001. Refer to [EC-143](#).
- If DTC P0460 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [EC-145](#).
- When the vehicle is parked, naturally the fuel level in the fuel tank is stable. It means that output signal of the fuel level sensor does not change. If ECM senses sloshing signal from the sensor, fuel level sensor malfunction is detected.

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|---------------------------------|---|---|
| P0460 0460 | Fuel level sensor circuit noise | Even though the vehicle is parked, a signal being varied is sent from the fuel level sensor to ECM. | <ul style="list-style-type: none"> • Harness or connectors (CAN communication line is open or shorted) • Harness or connectors (Fuel level sensor circuit is open or shorted) • Combination meter • Fuel level sensor |

DTC Confirmation Procedure

INFOID:000000001702887

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select "DATA MONITOR" mode with CONSULT-II.
3. Start engine and wait maximum of 2 consecutive minutes.
4. If 1st trip DTC is detected, go to [EC-386](#). "Diagnosis Procedure".

| DATA MONITOR | |
|---------------|--------|
| MONITOR | NO DTC |
| FUEL T/TMP SE | XXX °C |
| FUEL LEVEL SE | XXX V |

SEF195Y

WITH GST

Follow the procedure "WITH CONSULT-II" above.

DTC P0460 FUEL LEVEL SENSOR

< SERVICE INFORMATION >

Diagnosis Procedure

INFOID:000000001702888

1. CHECK FUEL GAUGE OPERATION

Refer to [DI-11, "Self-Diagnosis Mode of Combination Meter"](#).

OK or NG

OK >> GO TO 2.

NG >> Follow the instruction of [DI-11, "Self-Diagnosis Mode of Combination Meter"](#).

2. CHECK FUEL LEVEL SENSOR AND CIRCUIT

Refer to [DI-17, "Fuel Level Sensor Signal Inspection"](#).

OK or NG

OK >> GO TO 3.

NG >> Repair or replace malfunctioning parts.

3. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**

Removal and Installation

INFOID:000000001702889

FUEL LEVEL SENSOR

Refer to [FL-5](#).

DTC P0461 FUEL LEVEL SENSOR

< SERVICE INFORMATION >

DTC P0461 FUEL LEVEL SENSOR


Component Description

INFOID:000000001702890

The fuel level sensor (3) is mounted in the fuel level sensor unit. The sensor detects a fuel level in the fuel tank and transmits a signal to the combination meter. The combination meter sends the fuel level sensor signal to the ECM through CAN communication line.

It consists of two parts, one is mechanical float and the other is variable resistor. Fuel level sensor output voltage changes depending on the movement of the fuel level mechanical float.

- Fuel level sensor unit and fuel pump (1)
- Fuel pressure regulator (2)
- Fuel tank temperature sensor (4)

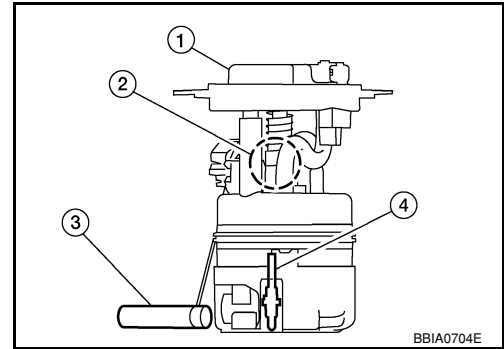

B8IA0704E

On Board Diagnosis Logic

INFOID:000000001702891

NOTE:

- If DTC P0461 is displayed with DTC U1000, U1001, first perform the trouble diagnosis for DTC U1000, U1001. Refer to [EC-143](#).
- If DTC P0461 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [EC-145](#).
- This diagnosis detects the fuel gauge malfunction of the gauge not moving even after a long distance has been driven. Driving long distances naturally affect fuel gauge level.

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|---|--|---|
| P0461 0461 | Fuel level sensor circuit range/performance | The output signal of the fuel level sensor does not change within the specified range even though the vehicle has been driven a long distance. | <ul style="list-style-type: none"> • Harness or connectors (CAN communication line is open or shorted) • Harness or connectors (Fuel level sensor circuit is open or shorted) • Combination meter • Fuel level sensor |

Overall Function Check

INFOID:000000001702892

Use this procedure to check the overall function of the fuel level sensor function. During this check, a 1st trip DTC might not be confirmed.

WARNING:

When performing following procedure, be sure to observe the handling of the fuel.

Refer to [FL-9](#).

TESTING CONDITION:

Before starting overall function check, preparation of draining fuel and refilling fuel is required.

① WITH CONSULT-II

NOTE:

Start from step 10, if it is possible to confirm that the fuel cannot be drained by 30 ℓ (7-7/8 US gal, 6-5/8 Imp gal) in advance.

1. Prepare a fuel container and a spare hose.
2. Release fuel pressure from fuel line, refer to [EC-78. "Fuel Pressure Check"](#).
3. Remove the fuel feed hose on the fuel level sensor unit.
4. Connect a spare fuel hose where the fuel feed hose was removed.

DTC P0461 FUEL LEVEL SENSOR

< SERVICE INFORMATION >

5. Turn ignition switch OFF and wait at least 10 seconds then turn ON.
6. Select "FUEL LEVEL SE" in "DATA MONITOR" mode with CONSULT-II.
7. Check "FUEL LEVEL SE" output voltage and note it.
8. Select "FUEL PUMP RELAY" in "ACTIVE TEST" mode with CONSULT-II.
9. Touch "ON" and drain fuel approximately 30 ℓ (7-7/8 US gal, 6-5/8 Imp gal) and stop it.
10. Check "FUEL LEVEL SE" output voltage and note it.
11. Fill fuel into the fuel tank for 30 ℓ (7-7/8 US gal, 6-5/8 Imp gal).
12. Check "FUEL LEVEL SE" output voltage and note it.
13. Confirm whether the voltage changes more than 0.03V during step 7 to 10 and 10 to 12.
If NG, go to [EC-388, "Diagnosis Procedure"](#).

| DATA MONITOR | |
|---------------|--------|
| MONITOR | NO DTC |
| FUEL T/TMP SE | XXX °C |
| FUEL LEVEL SE | XXX V |

SEF195Y

WITH GST

NOTE:

Start from step 8, if it is possible to confirm that the fuel cannot be drained by 30 ℓ (7-7/8 US gal, 6-5/8 Imp gal) in advance.

1. Prepare a fuel container and a spare hose.
2. Release fuel pressure from fuel line, refer to [EC-78, "Fuel Pressure Check"](#).
3. Remove the fuel feed hose on the fuel level sensor unit.
4. Connect a spare fuel hose where the fuel feed hose was removed.
5. Turn ignition switch ON.
6. Drain fuel by 30 ℓ (7-7/8 US gal, 6-5/8 Imp gal) from the fuel tank using proper equipment.
7. Confirm that the fuel gauge indication varies.
8. Fill fuel into the fuel tank for 30 ℓ (7-7/8 US gal, 6-5/8 Imp gal).
9. Confirm that the fuel gauge indication varies.
10. If NG, go to [EC-388, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000001702893

1. CHECK FUEL GAUGE OPERATION

Refer to [DI-11, "Self-Diagnosis Mode of Combination Meter"](#).

OK or NG

- OK >> GO TO 2.
- NG >> Follow the instruction of [DI-11, "Self-Diagnosis Mode of Combination Meter"](#).

2. CHECK FUEL LEVEL SENSOR AND CIRCUIT

Refer to [DI-17, "Fuel Level Sensor Signal Inspection"](#).

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace malfunctioning parts.

3. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**

Removal and Installation

INFOID:000000001702894

FUEL LEVEL SENSOR

Refer to [FL-5](#).

DTC P0462, P0463 FUEL LEVEL SENSOR

< SERVICE INFORMATION >


DTC P0462, P0463 FUEL LEVEL SENSOR

Component Description

INFOID:000000001702895

The fuel level sensor (3) is mounted in the fuel level sensor unit. The sensor detects a fuel level in the fuel tank and transmits a signal to the combination meter. The combination meter sends the fuel level sensor signal to the ECM through CAN communication line. It consists of two parts, one is mechanical float and the other is variable resistor. Fuel level sensor output voltage changes depending on the movement of the fuel level mechanical float.

- Fuel level sensor unit and fuel pump (1)
- Fuel pressure regulator (2)
- Fuel tank temperature sensor (4)

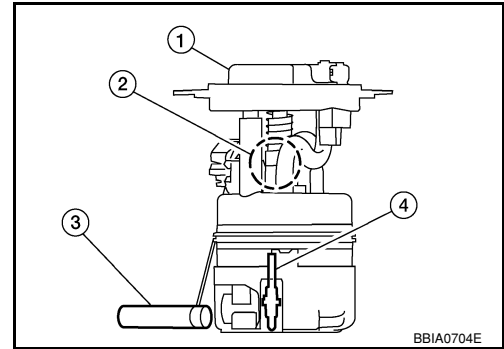

On Board Diagnosis Logic

INFOID:000000001702896

NOTE:

- If DTC P0462 or P0463 is displayed with DTC U1000, U1001, first perform the trouble diagnosis for DTC U1000, U1001. Refer to [EC-143](#).
- If DTC P0462 or P0463 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [EC-145](#).
- ECM receives two signals from the fuel level sensor circuit. One is fuel level sensor power supply circuit, and the other is fuel level sensor ground circuit. This diagnosis indicates the former, to detect open or short circuit malfunction.

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|--------------------------------------|---|---|
| P0462 0462 | Fuel level sensor circuit low input | An excessively low voltage from the sensor is sent to ECM. | <ul style="list-style-type: none"> • Harness or connectors (CAN communication line is open or shorted) • Harness or connectors (Fuel level sensor circuit is open or shorted) • Combination meter • Fuel level sensor |
| P0463 0463 | Fuel level sensor circuit high input | An excessively high voltage from the sensor is sent to ECM. | |

DTC Confirmation Procedure

INFOID:000000001702897

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11V at ignition switch ON.

Ⓟ WITH CONSULT-II

1. Turn ignition switch ON.
2. Select "DATA MONITOR" mode with CONSULT-II.
3. Wait at least 5 seconds.
4. If 1st trip DTC is detected, go to [EC-390. "Diagnosis Procedure"](#).

| DATA MONITOR | |
|---------------|--------|
| MONITOR | NO DTC |
| FUEL T/TMP SE | XXX °C |
| FUEL LEVEL SE | XXX V |

SEF195Y

Ⓟ WITH GST

DTC P0462, P0463 FUEL LEVEL SENSOR

< SERVICE INFORMATION >

Follow the procedure "WITH CONSULT-II" above.

Diagnosis Procedure

INFOID:000000001702898

1. CHECK FUEL GAUGE OPERATION

Refer to [DI-11, "Self-Diagnosis Mode of Combination Meter"](#).

OK or NG

OK >> GO TO 2.

NG >> Follow the instruction of [DI-11, "Self-Diagnosis Mode of Combination Meter"](#).

2. CHECK FUEL LEVEL SENSOR AND CIRCUIT

Refer to [DI-17, "Fuel Level Sensor Signal Inspection"](#).

OK or NG

OK >> GO TO 3.

NG >> Repair or replace malfunctioning parts.

3. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**

Removal and Installation

INFOID:000000001702899

FUEL LEVEL SENSOR

Refer to [FL-5](#).

DTC P0500 VSS

< SERVICE INFORMATION >

DTC P0500 VSS

Description

INFOID:000000001702900

NOTE:

- If DTC P0500 is displayed with DTC U1000 or U1001, first perform the trouble diagnosis for DTC U1000, U1001. Refer to [EC-143](#).
- If DTC P0500 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [EC-145](#).

The vehicle speed signal is sent to the combination meter from “ABS actuator and electric unit (control unit)” through CAN communication line. The combination meter then sends a signal to the ECM through CAN communication line.

On Board Diagnosis Logic

INFOID:000000001702901

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|------------------------|--|---|
| P0500 0500 | Vehicle speed sensor | The almost 0 km/h (0 MPH) signal from vehicle speed sensor is sent to ECM even when vehicle is being driven. | <ul style="list-style-type: none">• Harness or connectors (CAN communication line is open or shorted.)• Harness or connectors (Vehicle speed signal circuit is open or shorted)• ABS actuator and electric unit (control unit)• Wheel sensor• Combination meter |

FAIL-SAFE MODE

When the malfunction is detected, ECM enters fail-safe mode.

| Detected item | Engine operating condition in fail-safe mode |
|----------------------|---|
| Vehicle speed sensor | When the fail-safe system for vehicle speed sensor is activated, the cooling fan operates (High) while engine is running. |

DTC Confirmation Procedure

INFOID:000000001702902

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Steps 1 and 2 may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

④ WITH CONSULT-II

1. Start engine.
2. Read “VHCL SPEED SE” in “DATA MONITOR” mode with CONSULT-II. The vehicle speed on CONSULT-II should exceed 10 km/h (6 MPH) when rotating wheels with suitable gear position.
If NG, go to [EC-392, "Diagnosis Procedure"](#).
If OK, go to following step.
3. Select “DATA MONITOR” mode with CONSULT-II.

| DATA MONITOR | |
|----------------|----------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |
| COOLANT TEMP/S | XXX °C |
| B/FUEL SCHDL | XXX msec |
| PW/ST SIGNAL | OFF |
| VHCL SPEED SE | XXX km/h |

SEF196Y

DTC P0500 VSS

< SERVICE INFORMATION >

4. Warm engine up to normal operating temperature.
5. Maintain the following conditions for at least 60 consecutive seconds.

| | |
|---------------|------------------------|
| ENG SPEED | More than 1,600 rpm |
| COOLAN TEMP/S | More than 70°C (158°F) |
| B/FUEL SCHDL | 6.0 - 31.8 msec |
| Shift lever | Suitable position |
| PW/ST SIGNAL | OFF |

6. If 1st trip DTC is detected, go to [EC-392. "Diagnosis Procedure"](#).

Overall Function Check

INFOID:000000001702903

Use this procedure to check the overall function of the vehicle speed signal circuit. During this check, a 1st trip DTC might not be confirmed.

WITH GST

1. Lift up drive wheels.
2. Start engine.
3. Read vehicle speed signal in Service \$01 with GST.
The vehicle speed signal on GST should be able to exceed 10 km/h (6 MPH) when rotating wheels with suitable gear position.
4. If NG, go to [EC-392. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000001702904

1. CHECK DTC WITH "ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)"

Refer to [BRC-8](#).

OK or NG

- OK >> GO TO 2.
NG >> Repair or replace.

2. CHECK COMBINATION METER

Refer to [DI-4](#).

>> **INSPECTION END**

DTC P0506 ISC SYSTEM

< SERVICE INFORMATION >

DTC P0506 ISC SYSTEM

Description

INFOID:000000001702905

NOTE:

If DTC P0506 is displayed with other DTC, first perform the trouble diagnosis for the other DTC.

The ECM controls the engine idle speed to a specified level through the fine adjustment of the air, which is let into the intake manifold, by operating the electric throttle control actuator. The operating of the throttle valve is varied to allow for optimum control of the engine idling speed. The ECM calculates the actual engine speed from signals of crankshaft position sensor (POS) and camshaft position sensor (PHASE).

The ECM controls the electric throttle control actuator so that the engine speed coincides with the target value memorized in the ECM. The target engine speed is the lowest speed at which the engine can operate steadily. The optimum value stored in the ECM is determined by taking into consideration various engine conditions, such as during warming up, deceleration, and engine load (air conditioner, power steering and cooling fan operation, etc.).

On Board Diagnosis Logic

INFOID:000000001702906

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|---|---|--|
| P0506 0506 | Idle speed control system RPM lower than expected | The idle speed is less than the target idle speed by 100 rpm or more. | <ul style="list-style-type: none">• Electric throttle control actuator• Intake air leak |

DTC Confirmation Procedure

INFOID:000000001702907

NOTE:

- If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
- **If the target idle speed is out of the specified value, perform [EC-76, "Idle Air Volume Learning"](#), before conducting DTC Confirmation Procedure. For the target idle speed, refer to the [EC-548](#).**

TESTING CONDITION:

- **Before performing the following procedure, confirm that battery voltage is more than 11V at idle.**
- **Always perform the test at a temperature above -10°C (14°F).**

Ⓟ WITH CONSULT-II

1. Open engine hood.
2. Start engine and warm it up to normal operating temperature.
3. Turn ignition switch OFF and wait at least 10 seconds.
4. Turn ignition switch ON again and select "DATA MONITOR" mode with CONSULT-II.
5. Start engine and run it for at least 1 minute at idle speed.
6. If 1st trip DTC is detected, go to [EC-393, "Diagnosis Procedure"](#).

| DATA MONITOR | |
|----------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |
| COOLANT TEMP/S | XXX °C |

SEF174Y

Ⓢ WITH GST

Follow the procedure "WITH CONSULT-II" above.

Diagnosis Procedure

INFOID:000000001702908

1. CHECK INTAKE AIR LEAK

1. Start engine and let it idle.
2. Listen for an intake air leak after the mass air flow sensor.

DTC P0506 ISC SYSTEM

< SERVICE INFORMATION >

OK or NG

OK >> GO TO 2.

NG >> Discover air leak location and repair.

2.REPLACE ECM

1. Stop engine.
2. Replace ECM.
3. Perform initialization of NVIS (NATS) system and registration of all NVIS (NATS) ignition key IDs.
Refer to [BL-211. "ECM Re-communicating Function"](#).
4. Perform [EC-75. "VIN Registration"](#).
5. Perform [EC-76. "Accelerator Pedal Released Position Learning"](#).
6. Perform [EC-76. "Throttle Valve Closed Position Learning"](#).
7. Perform [EC-76. "Idle Air Volume Learning"](#).

>> **INSPECTION END**

DTC P0507 ISC SYSTEM

< SERVICE INFORMATION >

DTC P0507 ISC SYSTEM

Description

INFOID:000000001702909

NOTE:

If DTC P0507 is displayed with other DTC, first perform the trouble diagnosis for the other DTC.

The ECM controls the engine idle speed to a specified level through the fine adjustment of the air, which is let into the intake manifold, by operating the electric throttle control actuator. The operating of the throttle valve is varied to allow for optimum control of the engine idling speed. The ECM calculates the actual engine speed from signals of camshaft position sensor (POS) and camshaft position sensor (PHASE).

The ECM controls the electric throttle control actuator so that the engine speed coincides with the target value memorized in the ECM. The target engine speed is the lowest speed at which the engine can operate steadily. The optimum value stored in the ECM is determined by taking into consideration various engine conditions, such as during warming up, deceleration, and engine load (air conditioner, power steering and cooling fan operation, etc.).

On Board Diagnosis Logic

INFOID:000000001702910

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|--|---|---|
| P0507 0507 | Idle speed control system RPM higher than expected | The idle speed is more than the target idle speed by 200 rpm or more. | <ul style="list-style-type: none">• Electric throttle control actuator• Intake air leak• PCV system |

DTC Confirmation Procedure

INFOID:000000001702911

NOTE:

- If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
- **If the target idle speed is out of the specified value, perform [EC-76, "Idle Air Volume Learning"](#), before conducting DTC Confirmation Procedure. For the target idle speed, refer to the [EC-548](#).**

TESTING CONDITION:

- **Before performing the following procedure, confirm that battery voltage is more than 11V at idle.**
- **Always perform the test at a temperature above -10°C (14°F).**

Ⓟ WITH CONSULT-II

1. Open engine hood.
2. Start engine and warm it up to normal operating temperature.
3. Turn ignition switch OFF and wait at least 10 seconds.
4. Turn ignition switch ON again and select "DATA MONITOR" mode with CONSULT-II.
5. Start engine and run it for at least 1 minute at idle speed.
6. If 1st trip DTC is detected, go to [EC-395, "Diagnosis Procedure"](#).

| DATA MONITOR | |
|---------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |
| COOLAN TEMP/S | XXX °C |

SEF174Y

Ⓢ WITH GST

Follow the procedure "WITH CONSULT-II" above.

Diagnosis Procedure

INFOID:000000001702912

1. CHECK PCV HOSE CONNECTION

Confirm that PCV hose is connected correctly.

OK or NG

DTC P0507 ISC SYSTEM

< SERVICE INFORMATION >

- OK >> GO TO 2.
- NG >> Repair or replace.

2.CHECK INTAKE AIR LEAK

1. Start engine and let it idle.
2. Listen for an intake air leak after the mass air flow sensor.

OK or NG

- OK >> GO TO 3.
- NG >> Discover air leak location and repair.

3.REPLACE ECM

1. Stop engine.
2. Replace ECM.
3. Perform initialization of NVIS (NATS) system and registration of all NVIS (NATS) ignition key IDs.
Refer to [BL-211, "ECM Re-communicating Function"](#).
4. Perform [EC-75, "VIN Registration"](#).
5. Perform [EC-76, "Accelerator Pedal Released Position Learning"](#).
6. Perform [EC-76, "Throttle Valve Closed Position Learning"](#).
7. Perform [EC-76, "Idle Air Volume Learning"](#).

>> **INSPECTION END**

DTC P0605 ECM


< SERVICE INFORMATION >

DTC P0605 ECM

Component Description

INFOID:000000001702913

The ECM consists of a microcomputer and connectors for signal input and output and for power supply. The ECM controls the engine.

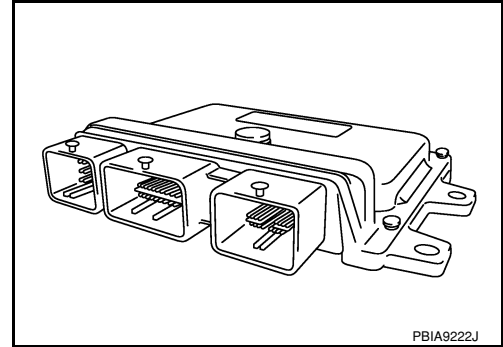

On Board Diagnosis Logic

INFOID:000000001702914

This self-diagnosis has one or two trip detection logic.

| DTC No. | Trouble diagnosis name | DTC detecting condition | | Possible cause |
|---------------|------------------------|-------------------------|---|----------------|
| P0605 0605 | Engine control module | A) | ECM calculation function is malfunctioning. | • ECM |
| | | B) | ECM EEP-ROM system is malfunctioning. | |
| | | C) | ECM self shut-off function is malfunctioning. | |

FAIL-SAFE MODE

ECM enters fail-safe mode when malfunction A is detected.

| Detected items | Engine operation condition in fail-safe mode |
|----------------|--|
| Malfunction A | <ul style="list-style-type: none"> ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring. ECM deactivates ASCD operation. |

DTC Confirmation Procedure

INFOID:000000001702915

Perform PROCEDURE FOR MALFUNCTION A first. If the 1st trip DTC cannot be confirmed, perform PROCEDURE FOR MALFUNCTION B. If there is no malfunction on PROCEDURE FOR MALFUNCTION B, perform PROCEDURE FOR MALFUNCTION C.


NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

PROCEDURE FOR MALFUNCTION A

① With CONSULT-II

- Turn ignition switch ON.
- Select "DATA MONITOR" mode with CONSULT-II.
- If 1st trip DTC is detected, go to [EC-398. "Diagnosis Procedure"](#).

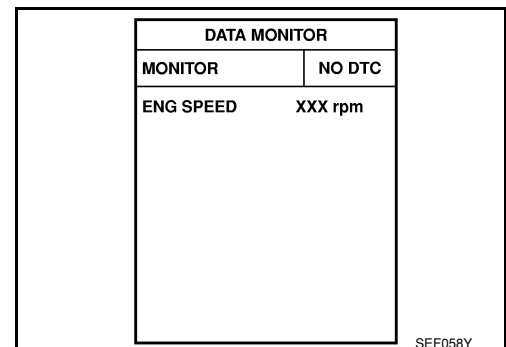

② With GST

DTC P0605 ECM

< SERVICE INFORMATION >

Follow the procedure "With CONSULT-II" above.

PROCEDURE FOR MALFUNCTION B

Ⓜ With CONSULT-II

1. Turn ignition switch ON and wait at least 1 second.
2. Select "DATA MONITOR" mode with CONSULT-II.
3. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
4. If 1st trip DTC is detected, go to [EC-398, "Diagnosis Procedure"](#).

| DATA MONITOR | |
|--------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |

SEF058Y

Ⓜ With GST

Follow the procedure "With CONSULT-II" above.

PROCEDURE FOR MALFUNCTION C

Ⓜ With CONSULT-II

1. Turn ignition switch ON and wait at least 1 second.
2. Select "DATA MONITOR" mode with CONSULT-II.
3. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
4. Repeat step 3 for 32 times.
5. If 1st trip DTC is detected, go to [EC-398, "Diagnosis Procedure"](#).

| DATA MONITOR | |
|--------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |

SEF058Y

Ⓜ With GST

Follow the procedure "With CONSULT-II" above.

Diagnosis Procedure

INFOID:000000001702916

1. INSPECTION START

Ⓜ With CONSULT-II

1. Turn ignition switch ON.
2. Select "SELF DIAG RESULTS" mode with CONSULT-II.
3. Touch "ERASE".
4. **Perform DTC Confirmation Procedure.**
See [EC-397, "DTC Confirmation Procedure"](#).
5. Is the 1st trip DTC P0605 displayed again?

Ⓜ With GST

1. Turn ignition switch ON.
2. Select Service \$04 with GST.
3. **Perform DTC Confirmation Procedure.**
See [EC-397, "DTC Confirmation Procedure"](#).
4. Is the 1st trip DTC P0605 displayed again?

Yes or No

- Yes >> GO TO 2.
No >> **INSPECTION END**

DTC P0605 ECM

< SERVICE INFORMATION >

2. REPLACE ECM

1. Replace ECM.
2. Perform initialization of NVIS(NATS) system and registration of all NVIS(NATS) ignition key IDs.
Refer to [BL-211. "ECM Re-communicating Function"](#).
3. Perform [EC-75. "VIN Registration"](#).
4. Perform [EC-76. "Accelerator Pedal Released Position Learning"](#).
5. Perform [EC-76. "Throttle Valve Closed Position Learning"](#).
6. Perform [EC-76. "Idle Air Volume Learning"](#).

>> INSPECTION END

A

EC

C

D

E

F

G

H

I

J

K

L

M

N

O

P

DTC P0643 SENSOR POWER SUPPLY

< SERVICE INFORMATION >

DTC P0643 SENSOR POWER SUPPLY

On Board Diagnosis Logic

INFOID:000000001702917

This self-diagnosis has the one trip detection logic.

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|-----------------------------------|--|--|
| P0643 0643 | Sensor power supply circuit short | ECM detects a voltage of power source for sensor is excessively low or high. | <ul style="list-style-type: none">• Harness or connectors (APP sensor 1 circuit is shorted.) (Throttle position sensor circuit is shorted.) [Camshaft position sensor (PHASE) circuit is shorted.]• Accelerator pedal position sensor• Throttle position sensor• Camshaft position sensor (PHASE) |

FAIL-SAFE MODE

When the malfunction is detected, ECM enters fail-safe mode and the MIL lights up.

Engine operation condition in fail-safe mode

ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring.

DTC Confirmation Procedure

INFOID:000000001702918

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8V at idle.

④ WITH CONSULT-II

1. Turn ignition switch ON.
2. Select "DATA MONITOR" mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to [EC-402. "Diagnosis Procedure"](#).

| DATA MONITOR | |
|--------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |

SEF058Y

④ WITH GST

Follow the procedure "WITH CONSULT-II" above.

DTC P0643 SENSOR POWER SUPPLY



< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001702919

EC-SEN/PW-01

— : DETECTABLE LINE FOR DTC
 - - - : NON-DETECTABLE LINE FOR DTC

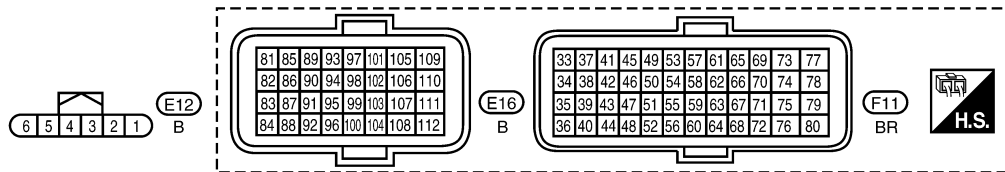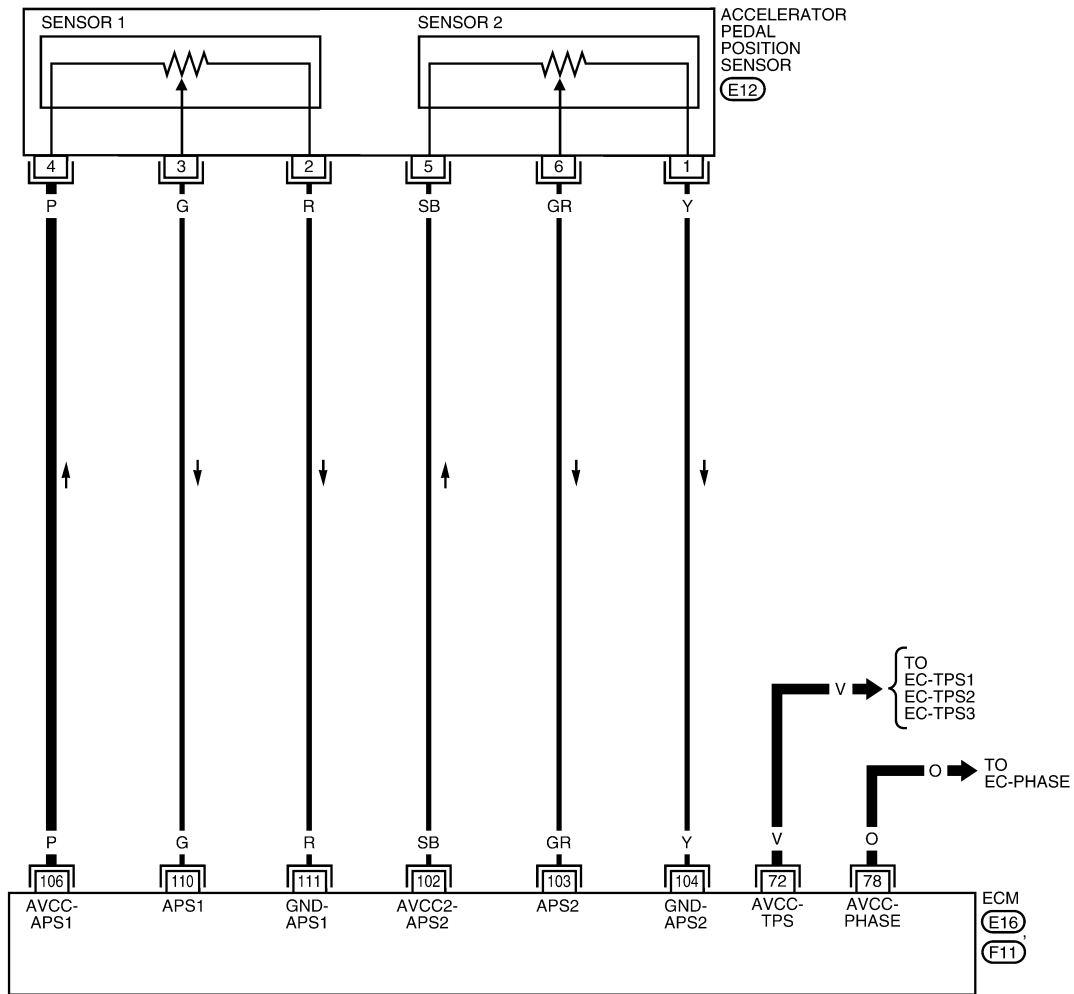

BBWA2649E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

DTC P0643 SENSOR POWER SUPPLY

< SERVICE INFORMATION >


| TER-MI-NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------|------------|--|--|-------------------|
| 72 | V | Sensor power supply (Throttle position sensor) | [Ignition switch: ON] | Approximately 5V |
| 78 | O | Sensor power supply [Camshaft position sensor (PHASE)] | [Ignition switch: ON] | Approximately 5V |
| 102 | SB | Sensor power supply (APP sensor 2) | [Ignition switch: ON] | Approximately 5V |
| 103 | GR | Accelerator pedal position sensor 2 | [Ignition switch: ON] • Engine stopped • Accelerator pedal: Fully released | 0.3 - 0.6V |
| | | | [Ignition switch: ON] • Engine stopped • Accelerator pedal: Fully depressed | 1.95 - 2.4V |
| 104 | Y | Sensor ground (APP sensor 2) | [Engine is running] • Warm-up condition • Idle speed | Approximately 0V |
| 106 | P | Sensor power supply (APP sensor 1) | [Ignition switch: ON] | Approximately 5V |
| 110 | G | Accelerator pedal position sensor 1 | [Ignition switch: ON] • Engine stopped • Accelerator pedal: Fully released | 0.6 - 0.9V |
| | | | [Ignition switch: ON] • Engine stopped • Accelerator pedal: Fully depressed | 3.9 - 4.7V |
| 111 | R | Sensor ground (APP sensor 1) | [Engine is running] • Warm-up condition • Idle speed | Approximately 0V |

Diagnosis Procedure

INFOID:000000001702920

1. CHECK GROUND CONNECTIONS

1. Turn ignition switch OFF.
2. Loosen and retighten ground screws on the body.
Refer to [EC-142. "Ground Inspection"](#).

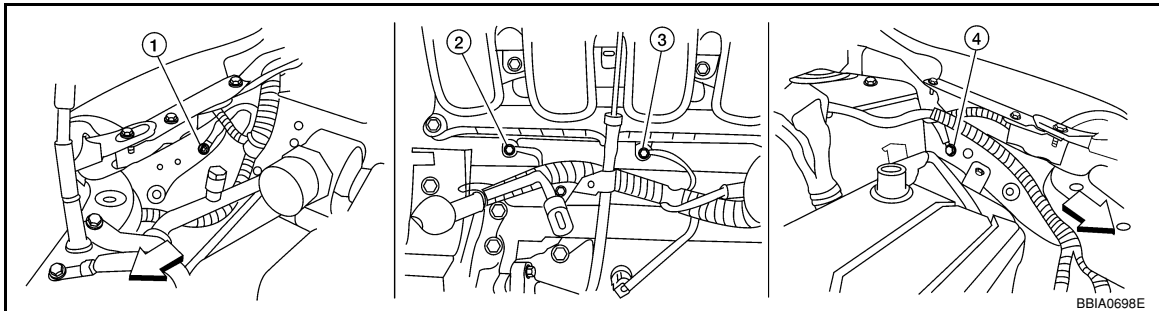

↶: Vehicle front

1. Body ground E24

2. Engine ground F9

3. Engine ground F16

4. Body ground E15

OK or NG

OK >> GO TO 2.


NG >> Repair or replace ground connections.

DTC P0643 SENSOR POWER SUPPLY

< SERVICE INFORMATION >

2.CHECK ACCELERATOR PEDAL POSITION SENSOR 1 POWER SUPPLY CIRCUIT

1. Disconnect accelerator pedal position (APP) sensor (1) harness connector.
2. Turn ignition switch ON.

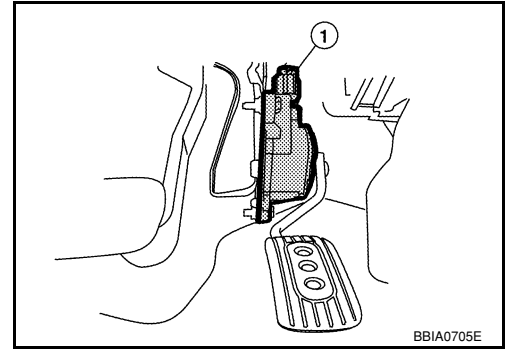


3. Check voltage between APP sensor terminal 4 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

OK or NG

- OK >> GO TO 8.
- NG >> GO TO 3.

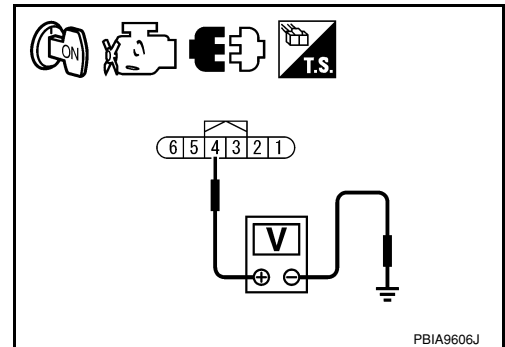

3.CHECK ACCELERATOR PEDAL POSITION SENSOR 1 POWER SUPPLY CIRCUIT-II

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between APP sensor terminal 4 and ECM terminal 106. Refer to Wiring Diagram.

Continuity should exist.

OK or NG

- OK >> GO TO 4.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4.CHECK SENSOR POWER SUPPLY CIRCUITS

Check harness for short to power and short to ground, between the following terminals.

| ECM terminal | Sensor terminal | Reference Wiring Diagram |
|--------------|---|--|
| 72 | Throttle position sensor terminal 1 | EC-489. "Wiring Diagram" |
| 78 | Camshaft position sensor (PHASE) terminal 1 | EC-304. "Wiring Diagram" |
| 106 | APP sensor terminal 4 | EC-401. "Wiring Diagram" |

OK or NG

- OK >> GO TO 5.
- NG >> Repair short to ground or short to power in harness or connectors.

5.CHECK CAMSHAFT POSITION SENSOR (PHASE)

Refer to [EC-307. "Component Inspection"](#).

OK or NG

- OK >> GO TO 6.
- NG >> Replace camshaft position sensor (PHASE).

6.CHECK THROTTLE POSITION SENSOR

Refer to [EC-492. "Component Inspection"](#).

DTC P0643 SENSOR POWER SUPPLY

< SERVICE INFORMATION >

OK or NG

- OK >> GO TO 8.
- NG >> GO TO 7.

7. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace the electric throttle control actuator.
2. Perform [EC-76, "Throttle Valve Closed Position Learning"](#).
3. Perform [EC-76, "Idle Air Volume Learning"](#).

>> **INSPECTION END**

8. CHECK APP SENSOR

Refer to [EC-499, "Component Inspection"](#).

OK or NG

- OK >> GO TO 9.
- NG >> GO TO 8.

9. REPLACE ACCELERATOR PEDAL ASSEMBLY

1. Replace accelerator pedal assembly.
2. Perform [EC-76, "Accelerator Pedal Released Position Learning"](#).
3. Perform [EC-76, "Throttle Valve Closed Position Learning"](#).
4. Perform [EC-76, "Idle Air Volume Learning"](#).

>> **INSPECTION END**

10. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**

DTC P0850 PNP SWITCH

< SERVICE INFORMATION >

DTC P0850 PNP SWITCH

Component Description

INFOID:000000001702921

When the shift lever position is P or N (A/T, CVT), Neutral (M/T), park/neutral position (PNP) switch is ON. ECM detects the position because the continuity of the line (the ON signal) exists.

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702922

Specification data are reference values.

| MONITOR ITEM | CONDITION | | SPECIFICATION |
|--------------|-----------------------|--|---------------|
| P/N POSI SW | • Ignition switch: ON | Shift lever: P or N (A/T, CVT), Neutral (M/T) | ON |
| | | Shift lever: Except above | OFF |

On Board Diagnosis Logic

INFOID:000000001702923

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|------------------------------|--|--|
| P0850 0850 | Park/neutral position switch | The signal of the park/neutral position (PNP) switch is not changed in the process of engine starting and driving. | <ul style="list-style-type: none"> • Harness or connectors [Park/neutral position (PNP) switch circuit is open or shorted.] • Park/neutral position (PNP) switch • TCM (CVT models) |

DTC Confirmation Procedure

INFOID:000000001702924

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select "P/N POSI SW" in "DATA MONITOR" mode with CONSULT-II. Then check the "P/N POSI SW" signal under the following conditions.

| Position (Shift lever) | Known-good signal |
|--|-------------------|
| N or P position (A/T, CVT) Neutral position (M/T) | ON |
| Except above | OFF |

If NG, go to [EC-408, "Diagnosis Procedure"](#).

If OK, go to following step.

3. Select "DATA MONITOR" mode with CONSULT-II.
4. Start engine and warm it up to normal operating temperature.

| DATA MONITOR | |
|--------------|--------|
| MONITOR | NO DTC |
| P/N POSI SW | ON |

SEF212Y

DTC P0850 PNP SWITCH

< SERVICE INFORMATION >

- Maintain the following conditions for at least 60 consecutive seconds.

| | |
|---------------|---------------------------|
| ENG SPEED | More than 1,100 rpm |
| COOLAN TEMP/S | More than 70°C (158°F) |
| B/FUEL SCHDL | 3.5 - 31.8 msec |
| VHCL SPEED SE | More than 64km/h (29 MPH) |
| Shift lever | Suitable position |

- If 1st trip DTC is detected, go to [EC-408. "Diagnosis Procedure"](#).

| DATA MONITOR | |
|---------------|----------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |
| COOLAN TEMP/S | XXX °C |
| VHCL SPEED SE | XXX km/h |
| P/N POSI SW | OFF |
| B/FUEL SCHDL | XXX msec |

SEF213Y

Overall Function Check

INFOID:000000001702925


Use this procedure to check the overall function of the park/neutral position (PNP) switch circuit. During this check, a 1st trip DTC might not be confirmed.

Ⓢ WITH GST

- Turn ignition switch ON.
- Check voltage between ECM terminal 69 (PNP switch signal) and ground under the following conditions.

| Condition (Shift lever) | Voltage V (Known-good data) |
|--|-------------------------------|
| P or N position (A/T, CVT) Neutral position (M/T) | Approx. 0 |
| Except above | BATTERY VOLTAGE (11 - 14V) |

- If NG, go to [EC-408. "Diagnosis Procedure"](#).

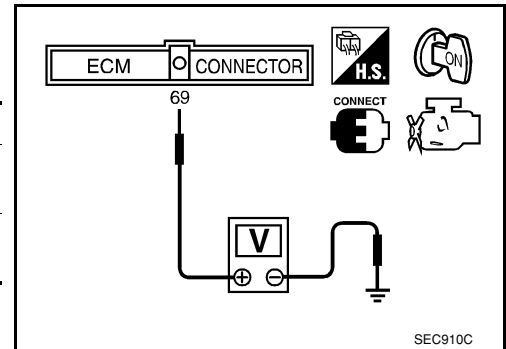

DTC P0850 PNP SWITCH

< SERVICE INFORMATION >


Wiring Diagram

INFOID:000000001702926

EC-PNP/SW-01


- : DETECTABLE LINE FOR DTC
- : NON-DETECTABLE LINE FOR DTC
- : WITH A/T
- : WITH M/T
- : WITH CVT

REFER TO "PG-POWER".

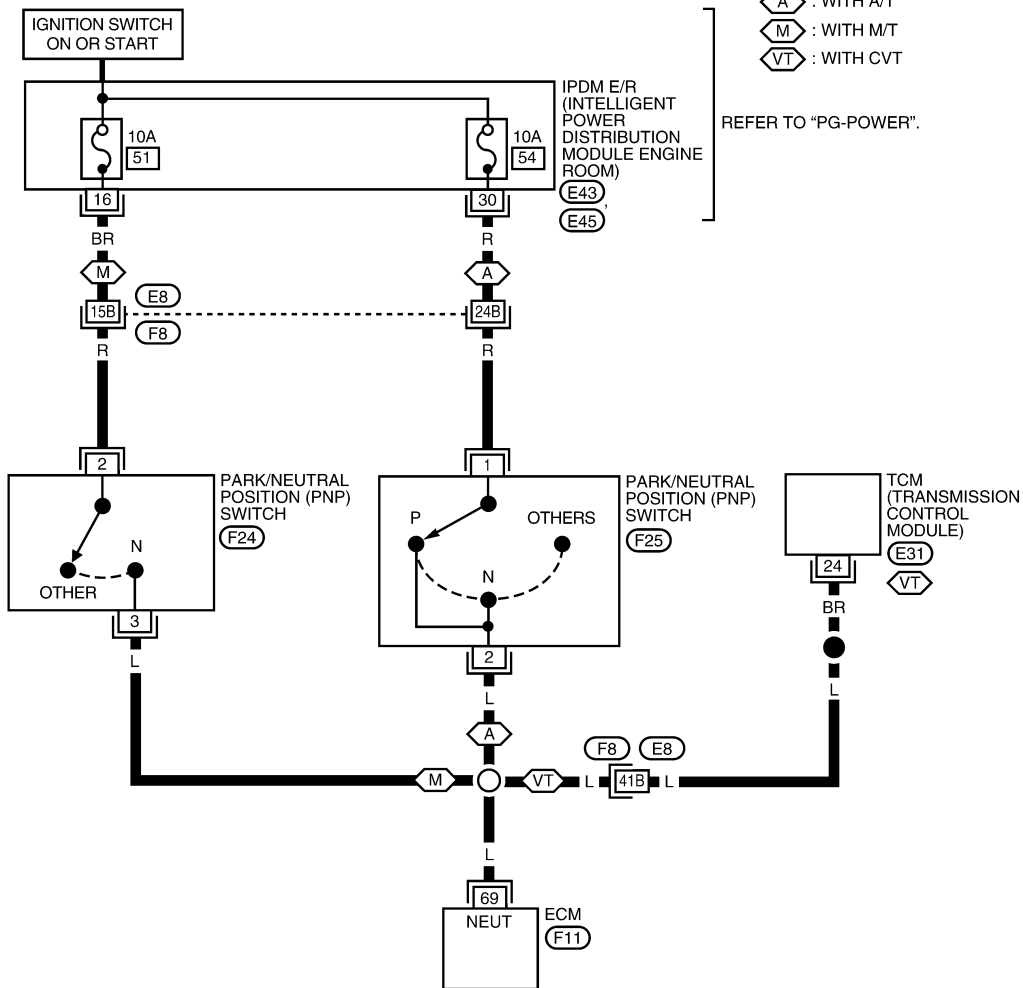

REFER TO THE FOLLOWING.

- SUPER MULTIPLE JUNCTION (SMJ)

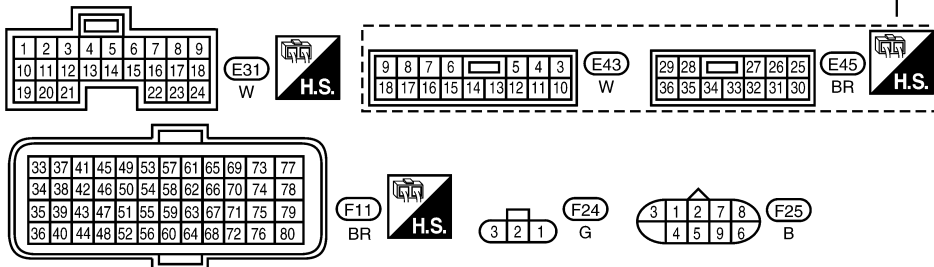

BBWA3002E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

DTC P0850 PNP SWITCH

< SERVICE INFORMATION >

| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------------|---------------|---------------------------------------|--|-------------------------------|
| 69 | L | Park/neutral position (PNP) switch | [Ignition switch: ON] <ul style="list-style-type: none">Shift lever: P or N (A/T, CVT), Neutral (M/T) | BATTERY VOLTAGE (11 - 14V) |
| | | | [Ignition switch: ON] <ul style="list-style-type: none">Except above | Approximately 0V |

Diagnosis Procedure

INFOID:000000001702927

A/T MODELS


1. CHECK PNP SWITCH POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect PNP switch harness connector.
3. Turn ignition switch ON.
4. Check voltage between PNP switch terminal 1 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

- OK >> GO TO 3.
NG >> GO TO 2.

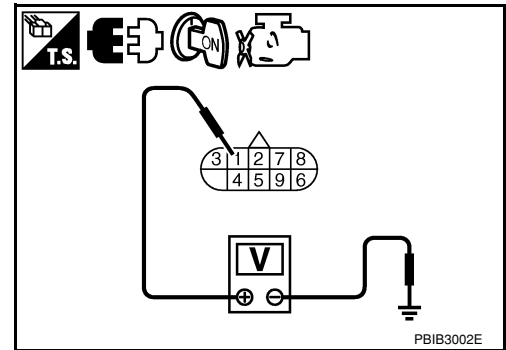

2. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness for open or short between PNP switch and fuse

>> Repair open circuit or short to ground or short to power in harness or connectors.

3. CHECK PNP SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between PNP switch terminal 2 and ECM terminal 69.
Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK PNP SWITCH

Refer to [AT-90, "Component Inspection"](#).

OK or NG

- OK >> GO TO 5.
NG >> Replace PNP switch.

5. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

DTC P0850 PNP SWITCH

< SERVICE INFORMATION >

>> **INSPECTION END**

M/T MODELS


1. CHECK PNP SWITCH POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect PNP switch harness connector.
3. Turn ignition switch ON.
4. Check voltage between PNP switch terminal 2 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

- OK >> GO TO 3.
NG >> GO TO 2.

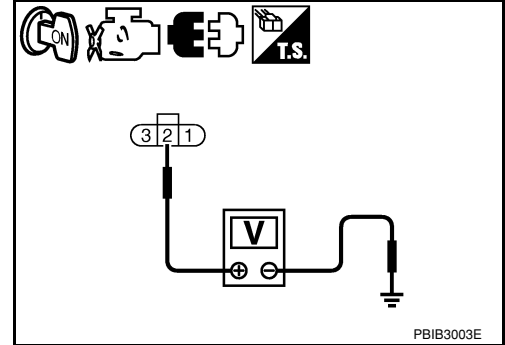

2. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness for open or short between PNP switch and fuse

>> Repair open circuit or short to ground or short to power in harness or connectors.

3. CHECK PNP SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between PNP switch terminal 3 and ECM terminal 69. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK PNP SWITCH

Refer to [MT-12](#).

OK or NG

- OK >> GO TO 5.
NG >> Replace PNP switch.

5. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**

CVT MODELS

1. CHECK DTC WITH TCM

Refer to [AT-36, "OBD-II Diagnostic Trouble Code \(DTC\)"](#).

OK or NG

- OK >> GO TO 2.
NG >> Repair or replace.

DTC P0850 PNP SWITCH

< SERVICE INFORMATION >

2. CHECK STARTING SYSTEM

Turn ignition switch OFF, then turn it to START.

Does starter motor operate?

Yes or No

Yes >> GO TO 3.

No >> Refer to [SC-8](#).

3. CHECK PNP SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT-I

1. Turn ignition switch OFF.
2. Disconnect ECM and TCM harness connectors.
3. Check harness continuity between TCM terminal 24 and ECM terminal 69.
Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 5.

NG >> GO TO 4.

4. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors F8, E8
- Harness for open or short between TCM and ECM.

>> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**

DTC P1148 CLOSED LOOP CONTROL

< SERVICE INFORMATION >

DTC P1148 CLOSED LOOP CONTROL

On Board Diagnosis Logic

INFOID:000000001702928

This self-diagnosis has the one trip detection logic.

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|---------------------------------|--|--|
| P1148 1148 | Closed loop control function | The closed loop control function does not operate even when vehicle is driving in the specified condition. | <ul style="list-style-type: none">• Harness or connectors [Air fuel ratio (A/F) sensor 1 circuit is open or shorted.]• Air fuel ratio (A/F) sensor 1• Air fuel ratio (A/F) sensor 1 heater |

NOTE:

DTC P1148 is displayed with another DTC for air fuel ratio (A/F) sensor 1. Perform the trouble diagnosis for the corresponding DTC.

A
EC
C
D
E
F
G
H
I
J
K
L
M
N
O
P

DTC P1217 ENGINE OVER TEMPERATURE

< SERVICE INFORMATION >

DTC P1217 ENGINE OVER TEMPERATURE

System Description

INFOID:000000001702929

SYSTEM DESCRIPTION

NOTE:

- If DTC P1217 is displayed with DTC U1000 or U1001, first perform the trouble diagnosis for DTC U1000, U1001. Refer to [EC-143](#).
- If DTC P1217 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [EC-145](#).

Cooling Fan Control

| Sensor | Input Signal to ECM | ECM function | Actuator |
|--|-----------------------------|---------------------|----------------------------------|
| Crankshaft position sensor (POS) Camshaft position sensor (PHASE) | Engine speed*1 | Cooling fan control | IPDM E/R (Cooling fan relays) |
| Battery | Battery voltage*1 | | |
| Wheel sensor | Vehicle speed*2 | | |
| Engine coolant temperature sensor | Engine coolant temperature | | |
| Air conditioner switch | Air conditioner ON signal*2 | | |
| Refrigerant pressure sensor | Refrigerant pressure | | |


*1: The ECM determines the start signal status by the signals of engine speed and battery voltage.

*2: This signal is sent to ECM through CAN communication line.


The ECM controls the cooling fan corresponding to the vehicle speed, engine coolant temperature, refrigerant pressure, and air conditioner ON signal. The control system has 3-step control [HIGH/LOW/OFF].

Cooling Fan Operation

Models with A/C

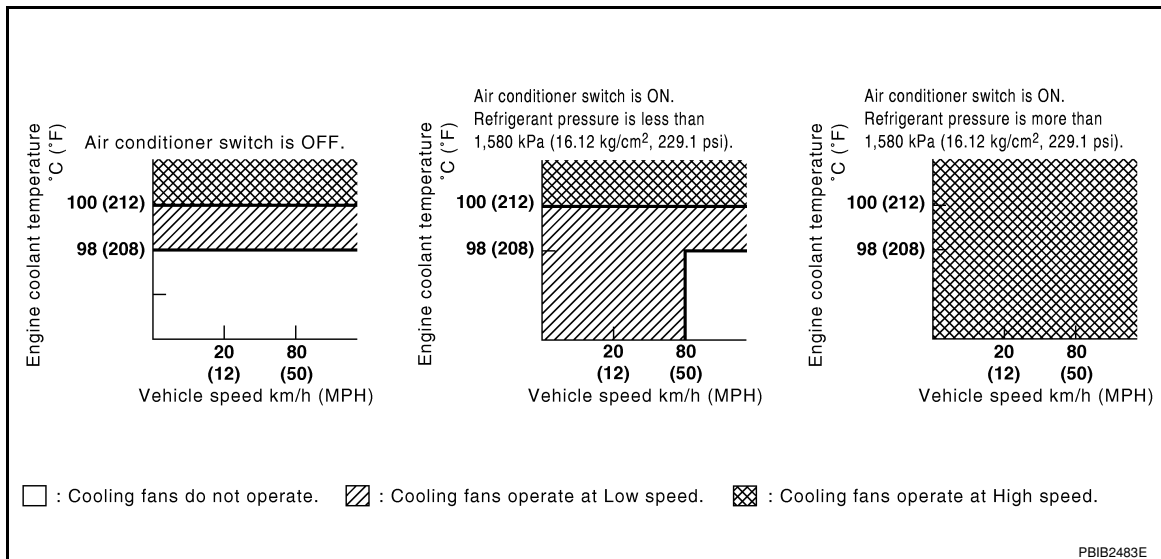

Models without A/C

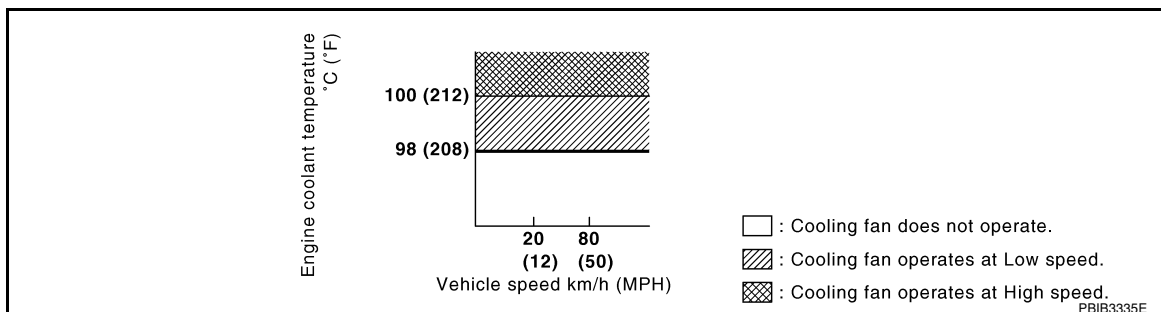

DTC P1217 ENGINE OVER TEMPERATURE

< SERVICE INFORMATION >

Cooling Fan Relay Operation

The ECM controls cooling fan relays in the IPDM E/R through CAN communication line.

| Cooling fan speed | Cooling fan relay | | |
|-------------------|-------------------|-----|-----|
| | 1 | 2 | 3 |
| Stop (OFF) | OFF | OFF | OFF |
| Low (LOW) | ON | OFF | OFF |
| High (HI) | OFF | ON | ON |

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702930

Specification data are reference values.

| MONITOR ITEM | CONDITION | SPECIFICATION |
|--------------|--|---------------|
| AIR COND SIG | • Engine: After warming up, idle the engine Air conditioner switch: OFF | OFF |
| | Air conditioner switch: ON (Compressor operates.) | ON |
| COOLING FAN | • Engine: After warming up, idle the engine Engine coolant temperature: 97°C (207°F) or less | OFF |
| | • Air conditioner switch: OFF Engine coolant temperature: Between 98°C (208°F) and 99°C (210°F) or more | LOW |
| | Engine coolant temperature: 100°C (212°F) or more | HIGH |

On Board Diagnosis Logic

INFOID:000000001702931

If the cooling fan or another component in the cooling system malfunctions, engine coolant temperature will rise. When the engine coolant temperature reaches an abnormally high temperature condition, a malfunction is indicated.

This self-diagnosis has the one trip detection logic.

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|------------------------------------|---|--|
| P1217 1217 | Engine over temperature (Overheat) | <ul style="list-style-type: none"> Cooling fan does not operate properly (Overheat). Cooling fan system does not operate properly (Overheat). Engine coolant was not added to the system using the proper filling method. Engine coolant is not within the specified range. | <ul style="list-style-type: none"> Harness or connectors (Cooling fan circuit is open or shorted.) Cooling fan IPDM E/R (Cooling fan relays) Radiator hose Radiator Reservoir tank Radiator cap Water pump Thermostat Water control valve <p>For more information, refer to EC-424, "Main 13 Causes of Overheating".</p> |

CAUTION:

When a malfunction is indicated, be sure to replace the coolant. Refer to [CO-8](#), "[Changing Engine Coolant](#)". Also, replace the engine oil. Refer to [LU-7](#), "[Changing Engine Oil](#)".

- Fill radiator with coolant up to specified level with a filling speed of 2 liters per minute. Be sure to use coolant with the proper mixture ratio. Refer to [MA-11](#), "[Anti-freeze Coolant Mixture Ratio](#)".
- After refilling coolant, run engine to ensure that no water-flow noise is emitted.

Overall Function Check

INFOID:000000001702932

Use this procedure to check the overall function of the cooling fan. During this check, a DTC might not be confirmed.

WARNING:


DTC P1217 ENGINE OVER TEMPERATURE

< SERVICE INFORMATION >

Never remove the radiator cap when the engine is hot. Serious burns could be caused by high pressure fluid escaping from the reservoir tank or the radiator.
Wrap a thick cloth around cap. Carefully remove the cap by turning it a quarter turn to allow built-up pressure to escape. Then turn the cap all the way off.

WITH CONSULT-II

1. Check the coolant level in the reservoir tank and radiator.
Allow engine to cool before checking coolant level.
If the coolant level in the reservoir tank and/or radiator is below the proper range, skip the following steps and go to [EC-417, "Diagnosis Procedure"](#) or [EC-417, "Diagnosis Procedure"](#).
2. Confirm whether customer filled the coolant or not. If customer filled the coolant, skip the following steps and go to [EC-417, "Diagnosis Procedure"](#) or [EC-417, "Diagnosis Procedure"](#).
3. Turn ignition switch ON.
4. Perform "COOLING FAN" in "ACTIVE TEST" mode with CONSULT-II.
5. If the results are NG, go to [EC-417, "Diagnosis Procedure"](#) or [EC-417, "Diagnosis Procedure"](#).

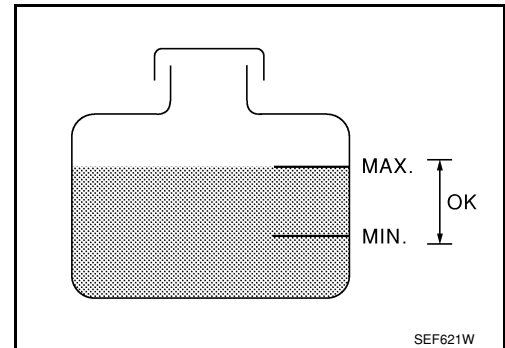


| ACTIVE TEST | |
|---------------|--------|
| COOLING FAN | OFF |
| MONITOR | |
| COOLAN TEMP/S | XXX °C |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

SEF646X

WITH GST

Models with A/C


1. Check the coolant level in the reservoir tank and radiator.
Allow engine to cool before checking coolant level.
If the coolant level in the reservoir tank and/or radiator is below the proper range, skip the following steps and go to [EC-417, "Diagnosis Procedure"](#).
2. Confirm whether customer filled the coolant or not. If customer filled the coolant, skip the following steps and go to [EC-417, "Diagnosis Procedure"](#).
3. Start engine.
CAUTION:
Be careful not to overheat engine.
4. Set temperature control switch to full cold position.
5. Turn air conditioner switch ON.
6. Turn blower fan switch ON.
7. Run engine at idle for a few minutes with air conditioner operating.
CAUTION:
Be careful not to overheat engine.

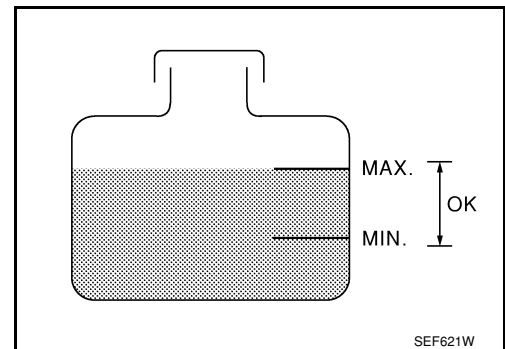


DTC P1217 ENGINE OVER TEMPERATURE

< SERVICE INFORMATION >

8. Make sure that cooling fans operates at low speed.
If NG, go to [EC-417, "Diagnosis Procedure"](#).
If OK, go to the following step.
9. Turn ignition switch OFF.
10. Turn air conditioner switch and blower fan switch OFF.
11. Disconnect engine coolant temperature sensor harness connector.
12. Connect 150Ω resistor to engine coolant temperature sensor harness connector.


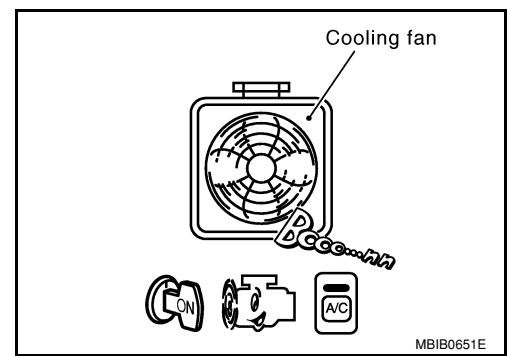


13. Restart engine and make sure that cooling fan operates at higher speed than low speed.
CAUTION:
Be careful not to overheat engine.
14. If NG, go to [EC-417, "Diagnosis Procedure"](#).

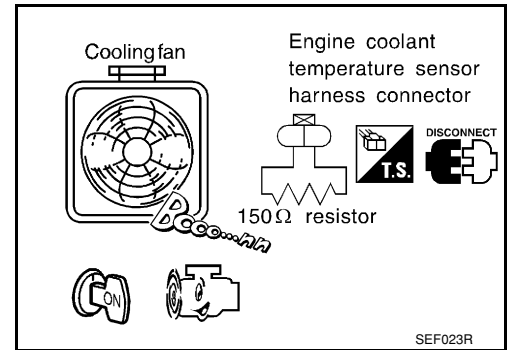

Models without A/C

1. Check the coolant level in the reservoir tank and radiator.
Allow engine to cool before checking coolant level.
If the coolant level in the reservoir tank and/or radiator is below the proper range, skip the following steps and go to [EC-417, "Diagnosis Procedure"](#).
2. Confirm whether customer filled the coolant or not. If customer filled the coolant, skip the following steps and go to [EC-417, "Diagnosis Procedure"](#).
3. Perform IPDM E/R auto active test and check cooling fan motor operation, refer to [PG-19, "Auto Active Test"](#).
4. Make sure that cooling fan operate at low speed.
If NG, go to [EC-417, "Diagnosis Procedure"](#).
5. Turn ignition switch OFF.
6. Disconnect engine coolant temperature sensor harness connector.
7. Connect 150Ω resistor to engine coolant temperature sensor harness connector.
8. Start engine and make that cooling fan operates. Be careful not to overheat engine.
9. If NG, go to [EC-417, "Diagnosis Procedure"](#).

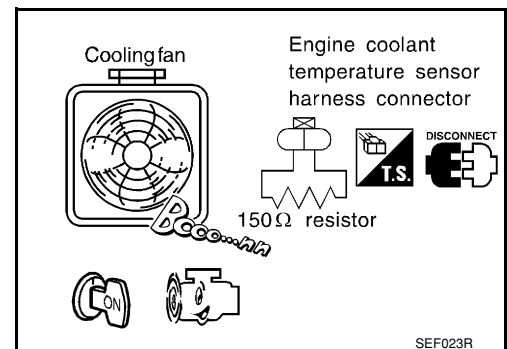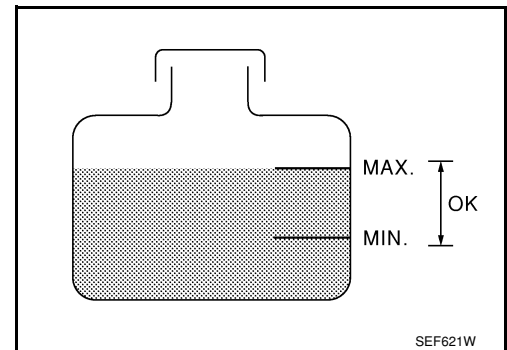




DTC P1217 ENGINE OVER TEMPERATURE




< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001702933

EC-COOL/F-01

-  : DETECTABLE LINE FOR DTC
-  : NON-DETECTABLE LINE FOR DTC
-  : DATA LINE

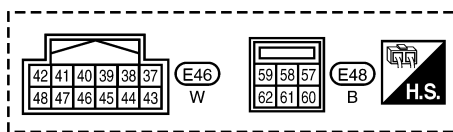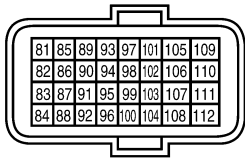
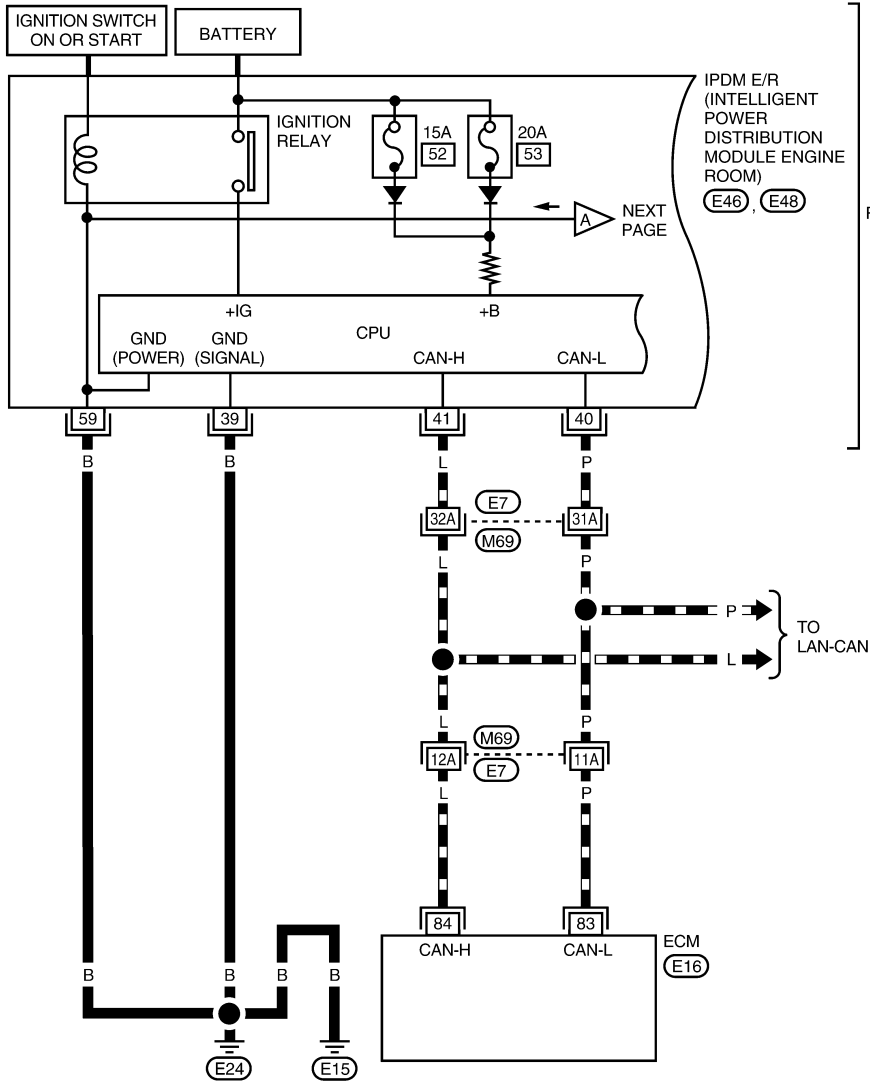


REFER TO THE FOLLOWING.
 (M69) - SUPER MULTIPLE JUNCTION (SMJ)

BBWA2997E

DTC P1217 ENGINE OVER TEMPERATURE

< SERVICE INFORMATION >

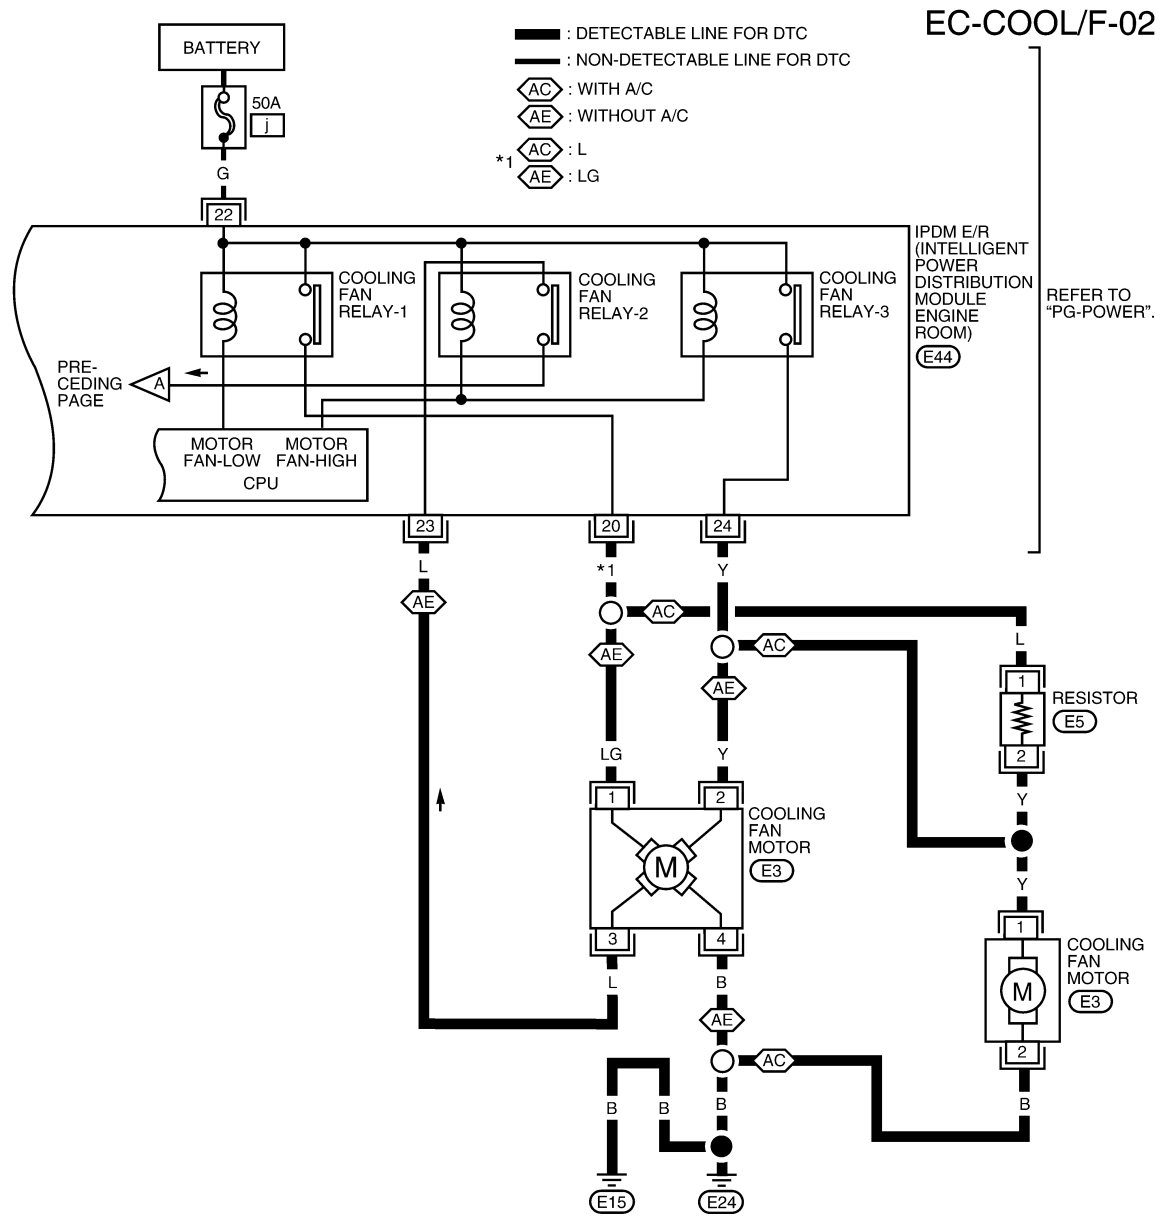

Diagnosis Procedure

PROCEDURE FOR MODELS WITH A/C

1. INSPECTION START

Do you have CONSULT-II?

Yes or No

Yes >> GO TO 2.

BBWA3001E

INFOID:000000001702934

DTC P1217 ENGINE OVER TEMPERATURE

< SERVICE INFORMATION >

No >> GO TO 4.

2. CHECK COOLING FAN LOW SPEED OPERATION

With CONSULT-II

1. Turn ignition switch ON.
2. Perform "COOLING FAN" in "ACTIVE TEST" mode with CONSULT-II and touch "LOW" on the CONSULT-II screen.
3. Make sure that cooling fan operate at low speed.

OK or NG

- OK >> GO TO 3.
NG >> Check cooling fan control circuit. (Go to "PROCEDURE A".)

| ACTIVE TEST | |
|---------------|--------|
| COOLING FAN | LOW |
| MONITOR | |
| COOLAN TEMP/S | XXX °C |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

SEF784Z

3. CHECK COOLING FAN HIGH SPEED OPERATION

With CONSULT-II

1. Touch "HIGH" on the CONSULT-II screen.
2. Make sure that cooling fan operate at higher speed than low speed.

OK or NG

- OK >> GO TO 6.
NG >> Check cooling fan control circuit. (Go to "PROCEDURE A".)

| ACTIVE TEST | |
|---------------|--------|
| COOLING FAN | HIGH |
| MONITOR | |
| COOLAN TEMP/S | XXX °C |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

SEF785Z


4. CHECK COOLING FAN LOW SPEED OPERATION

Without CONSULT-II

1. Start engine and let it idle.
2. Turn air conditioner switch ON.
3. Turn blower fan switch ON.
4. Make sure that cooling fan operate at low speed.

OK or NG

- OK >> GO TO 5.
NG >> Check cooling fan low speed control circuit. (Go to "PROCEDURE A".)

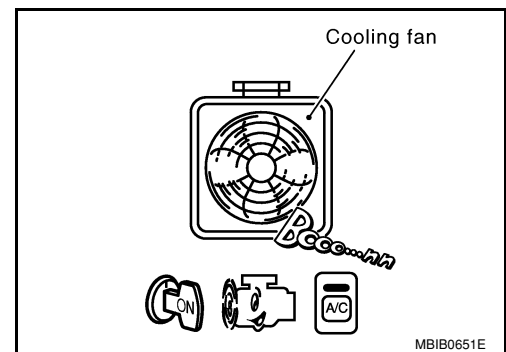

5. CHECK COOLING FAN HIGH SPEED OPERATION

Without CONSULT-II

1. Turn ignition switch OFF.
2. Turn air conditioner switch and blower fan switch OFF.
3. Disconnect engine coolant temperature sensor harness connector.
4. Connect 150Ω resistor to engine coolant temperature sensor harness connector.


DTC P1217 ENGINE OVER TEMPERATURE

< SERVICE INFORMATION >

5. Restart engine and make sure that cooling fan operate at higher speed than low speed.

OK or NG

- OK >> GO TO 6.
NG >> Check cooling fan high speed control circuit. (Go to "PROCEDURE A".)

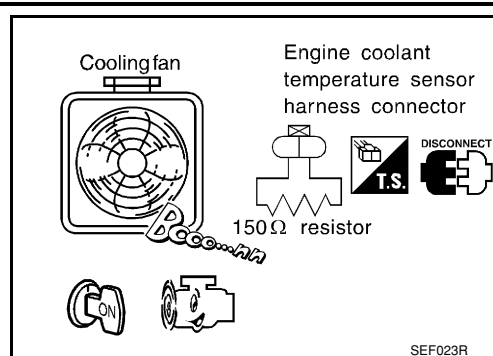

6. CHECK COOLING SYSTEM FOR LEAK

Refer to [CO-8](#).

OK or NG

- OK >> GO TO 8.
NG >> GO TO 7.

7. DETECT MALFUNCTIONING PART

Check the following for leak.

- Hose
- Radiator
- Water pump (Refer to [CO-16](#).)

>> Repair or replace.

8. CHECK RADIATOR CAP

Refer to [CO-11](#).

OK or NG

- OK >> GO TO 9.
NG >> Replace radiator cap.

9. CHECK COMPONENT PARTS

Check the following;

- Thermostat. (Refer to [CO-16](#).)
- Water control valve. (Refer to [CO-19](#).)
- Engine coolant temperature sensor. (Refer to [EC-191](#), "Component Inspection".)

OK or NG

- OK >> GO TO 10.
NG >> Replace malfunctioning component.

10. CHECK MAIN 13 CAUSES

If the cause cannot be isolated, go to [EC-424](#), "Main 13 Causes of Overheating".

>> **INSPECTION END**

PROCEDURE A

1. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R harness connector E44.

DTC P1217 ENGINE OVER TEMPERATURE


< SERVICE INFORMATION >

3. Check voltage between IPDM E/R terminal 22 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 2.

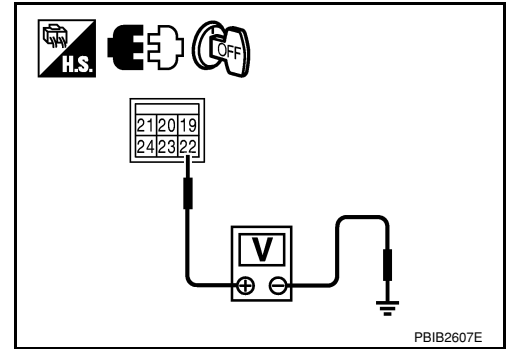

2. DETECT MALFUNCTIONING PART

Check the following.

- 50A fusible link
- Harness for open or short between IPDM E/R and battery

>> Repair open circuit or short to ground or short to power in harness or connectors.

3. CHECK COOLING FAN MOTOR CIRCUIT

1. Disconnect cooling fan motor harness connector (1).
 - ⇐: Vehicle front
 - Resistor (2)
2. Disconnect IPDM E/R harness connectors E46 and E48.
3. Check harness continuity between the following;
 - cooling fan motor terminal 1 and IPDM E/R terminal 24,
 - cooling fan motor terminal 2 and ground.Refer to wiring diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.
5. Check harness continuity between IPDM E/R terminal 20 and cooling fan motor terminal 1.
Refer to wiring diagram.

Continuity should exist.

6. Also check harness for short to ground and short to power.
7. Check harness continuity between IPDM E/R terminals 39, 59 and ground.
Refer to Wiring Diagram.

Continuity should exist.

8. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 5.
- NG >> GO TO 4.

4. DETECT MALFUNCTIONING PART

Check the following.


- Harness for open or short between cooling fan motor and IPDM E/R
- Harness for open or short between cooling fan motor and ground
- Resistor E5

>> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK COOLING FAN MOTOR

Refer to [EC-424, "Component Inspection"](#).

OK or NG

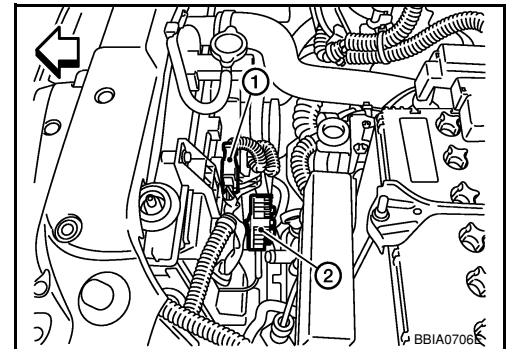

DTC P1217 ENGINE OVER TEMPERATURE

< SERVICE INFORMATION >

- OK >> GO TO 6.
- NG >> Replace cooling fan motor.

6.CHECK INTERMITTENT INCIDENT

Perform [EC-136](#).

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-26. "Removal and Installation of IPDM E/R"](#).
- NG >> Repair or replace harness or connector.

PROCEDURE FOR MODELS WITHOUT A/C

1.INSPECTION START

Do you have CONSULT-II?

Yes or No

- Yes >> GO TO 2.
- No >> GO TO 4.

2.CHECK COOLING FAN LOW SPEED OPERATION

With CONSULT-II

1. Turn ignition switch ON.
2. Perform "COOLING FAN" in "ACTIVE TEST" mode with CONSULT-II and touch "LOW" on the CONSULT-II screen.
3. Make sure that cooling fan operate at low speed.

OK or NG

- OK >> GO TO 3.
- NG >> Check cooling fan control circuit. (Go to "PROCEDURE B".)

| ACTIVE TEST | |
|----------------|--------|
| COOLING FAN | LOW |
| MONITOR | |
| COOLANT TEMP/S | XXX °C |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

SEF784Z

3.CHECK COOLING FAN HIGH SPEED OPERATION

With CONSULT-II

1. Touch "HIGH" on the CONSULT-II screen.
2. Make sure that cooling fan operates at higher speed than low speed.

OK or NG

- OK >> GO TO 6.
- NG >> Check cooling fan control circuit. (Go to "PROCEDURE A".)

| ACTIVE TEST | |
|----------------|--------|
| COOLING FAN | HIGH |
| MONITOR | |
| COOLANT TEMP/S | XXX °C |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

SEF785Z

4.CHECK COOLING FAN LOW SPEED OPERATION

Without CONSULT-II

1. Perform IPDM E/R auto active test and check cooling fan motor operation. Refer to [PG-19. "Auto Active Test"](#).
2. Make sure that cooling fan operate at low speed.

OK or NG

- OK >> GO TO 5.
- NG >> Check cooling fan speed control circuit. (Go to "PROCEDURE B".)

5.CHECK COOLING FAN HIGH SPEED OPERATION

Without CONSULT-II

1. Turn ignition switch OFF.


DTC P1217 ENGINE OVER TEMPERATURE

< SERVICE INFORMATION >

2. Disconnect engine coolant temperature sensor harness connector.
3. Connect 150Ω resistor to engine coolant temperature sensor harness connector.
4. Restart engine and make sure that cooling fan operates at higher speed than low speed.

OK or NG

- OK >> GO TO 6.
NG >> Check cooling fan high speed control circuit. (Go to "PROCEDURE A")

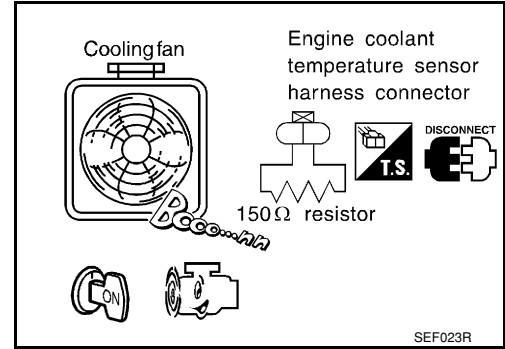

6. CHECK COOLING SYSTEM FOR LEAK

Refer to [CO-8](#).

OK or NG

- OK >> GO TO 8.
NG >> GO TO 7.

7. DETECT MALFUNCTIONING PART

Check the following for leak.

- Hose
- Radiator
- Water pump (Refer to [CO-16](#).)

>> Repair or replace.

8. CHECK RADIATOR CAP

Refer to [CO-11](#).

OK or NG

- OK >> GO TO 9.
NG >> Replace radiator cap.

9. CHECK THERMOSTAT

Refer to [CO-17](#).

OK or NG

- OK >> GO TO 10.
NG >> Replace thermostat.

10. CHECK ENGINE COOLANT TEMPERATURE SENSOR

Refer to [EC-191](#), "Component Inspection".

OK or NG

- OK >> GO TO 11.
NG >> Replace engine coolant temperature sensor.

11. CHECK MAIN 13 CAUSES

If the cause cannot be isolated, go to [EC-424](#), "Main 13 Causes of Overheating".

>> **INSPECTION END**

PROCEDURE B

1. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R harness connector E44.

DTC P1217 ENGINE OVER TEMPERATURE


< SERVICE INFORMATION >

3. Check voltage between IPDM E/R terminal 22 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 2.

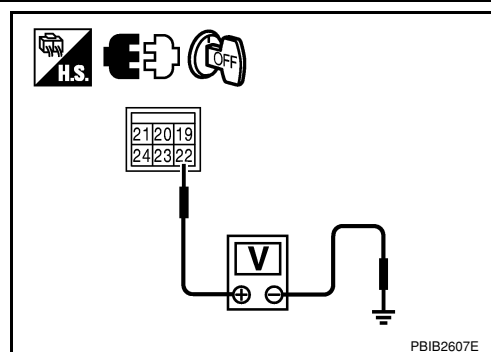

2. DETECT MALFUNCTIONING PART

Check the following.

- 50A fusible link
- Harness for open or short between IPDM E/R and battery

>> Repair open circuit or short to ground or short to power in harness or connectors.

3. CHECK COOLING FAN MOTOR CIRCUIT

1. Disconnect cooling fan motor harness connector (1).
 - ⇐: Vehicle front
 - Resistor (2)
2. Disconnect IPDM E/R harness connectors E46 and E48.
3. Check harness continuity between the following; cooling fan motor terminal 1 and IPDM E/R terminal 20, cooling fan motor terminal 4 and ground. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.
5. Check harness continuity between the following; cooling fan motor terminal 2 and IPDM E/R terminal 24, cooling fan motor terminal 3 and IPDM E/R terminal 23. Refer to Wiring Diagram.

Continuity should exist.

6. Also check harness for short to ground and short to power.
7. Check harness continuity between IPDM E/R terminals 39, 59 and ground. Refer to Wiring Diagram.

Continuity should exist.

8. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 5.
- NG >> GO TO 4.

4. DETECT MALFUNCTIONING PART

Check the following.


- Harness for open or short between cooling fan motor and IPDM E/R
- Harness for open or short between cooling fan motor and ground

>> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK COOLING FAN MOTOR

Refer to [EC-424, "Component Inspection"](#).

OK or NG

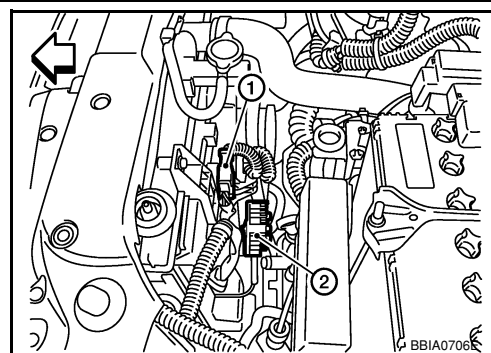

DTC P1217 ENGINE OVER TEMPERATURE

< SERVICE INFORMATION >

- OK >> GO TO 6.
 NG >> Replace cooling fan motor.

6. CHECK INTERMITTENT INCIDENT

Perform [EC-136](#).

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-26, "Removal and Installation of IPDM E/R"](#).
 NG >> Repair or replace harness or connector.

Main 13 Causes of Overheating

INFOID:000000001702935

| Engine | Step | Inspection item | Equipment | Standard | Reference page |
|--------|------|--|--|--|--|
| OFF | 1 | <ul style="list-style-type: none"> Blocked radiator Blocked condenser Blocked radiator grille Blocked bumper | <ul style="list-style-type: none"> Visual | No blocking | — |
| | 2 | <ul style="list-style-type: none"> Coolant mixture | <ul style="list-style-type: none"> Coolant tester | 50 - 50% coolant mixture | See MA-11, "Anti-freeze Coolant Mixture Ratio" . |
| | 3 | <ul style="list-style-type: none"> Coolant level | <ul style="list-style-type: none"> Visual | Coolant up to MAX level in reservoir tank and radiator filler neck | See CO-8, "Inspection" . |
| | 4 | <ul style="list-style-type: none"> Radiator cap | <ul style="list-style-type: none"> Pressure tester | 59 - 98 kPa (0.6 - 1.0 kg/cm ² , 9 - 14 psi) (Limit) | See CO-13, "Checking Radiator Cap" . |
| ON*2 | 5 | <ul style="list-style-type: none"> Coolant leaks | <ul style="list-style-type: none"> Visual | No leaks | See CO-8, "Inspection" . |
| ON*2 | 6 | <ul style="list-style-type: none"> Thermostat | <ul style="list-style-type: none"> Touch the upper and lower radiator hoses | Both hoses should be hot | See CO-17 , and CO-11 |
| ON*1 | 7 | <ul style="list-style-type: none"> Cooling fan | <ul style="list-style-type: none"> CONSULT-II | Operating | See trouble diagnosis for DTC P1217 (EC-417, "Diagnosis Procedure"). |
| OFF | 8 | <ul style="list-style-type: none"> Combustion gas leak | <ul style="list-style-type: none"> Color checker chemical tester 4 Gas analyzer | Negative | — |
| ON*3 | 9 | <ul style="list-style-type: none"> Coolant temperature gauge | <ul style="list-style-type: none"> Visual | Gauge less than 3/4 when driving | — |
| | | <ul style="list-style-type: none"> Coolant overflow to reservoir tank | <ul style="list-style-type: none"> Visual | No overflow during driving and idling | See CO-8, "Changing Engine Coolant" . |
| OFF*4 | 10 | <ul style="list-style-type: none"> Coolant return from reservoir tank to radiator | <ul style="list-style-type: none"> Visual | Should be initial level in reservoir tank | See CO-8, "Inspection" . |
| OFF | 11 | <ul style="list-style-type: none"> Water control valve | <ul style="list-style-type: none"> Remove and inspect the valve | Within the specified value | See CO-19, "Removal and Installation" |
| OFF | 12 | <ul style="list-style-type: none"> Cylinder head | <ul style="list-style-type: none"> Straight gauge feeler gauge | 0.1 mm (0.004 in) Maximum distortion (warping) | See EM-62 . |
| | 13 | <ul style="list-style-type: none"> Cylinder block and pistons | <ul style="list-style-type: none"> Visual | No scuffing on cylinder walls or piston | See EM-76 . |

*1: Turn the ignition switch ON.

*2: Engine running at 3,000 rpm for 10 minutes.

*3: Drive at 90 km/h (55 MPH) for 30 minutes and then let idle for 10 minutes.

*4: After 60 minutes of cool down time.

For more information, refer to [CO-5](#).

Component Inspection

INFOID:000000001702936

COOLING FAN MOTOR

Model with A/C

DTC P1217 ENGINE OVER TEMPERATURE

< SERVICE INFORMATION >

1. Disconnect cooling fan motor harness connectors.
2. Supply cooling fan motor terminals with battery voltage and check operation.

| | Terminals | |
|-------------------|-----------|-----|
| | (+) | (-) |
| Cooling fan motor | 1 | 2 |

Cooling fan motor should operate.

If NG, replace cooling fan motor.



Models without A/C

1. Disconnect cooling fan motor harness connectors.
2. Supply cooling fan motor terminals with battery voltage and check operation.

| | Speed | terminals | |
|-------------------|-------|-----------|---------|
| | | (+) | (-) |
| Cooling fan motor | Low | 1 | 4 |
| | | 2 | 3 |
| | High | 1 and 2 | 3 and 4 |

Cooling fan motor should operate.

If NG, replace cooling fan motor.

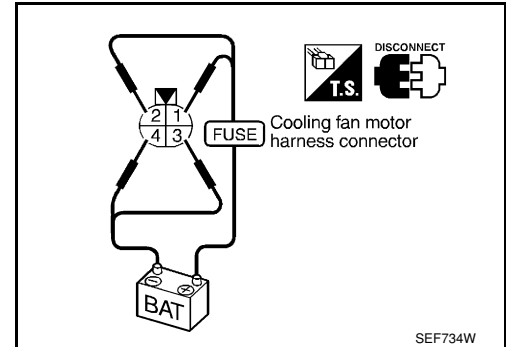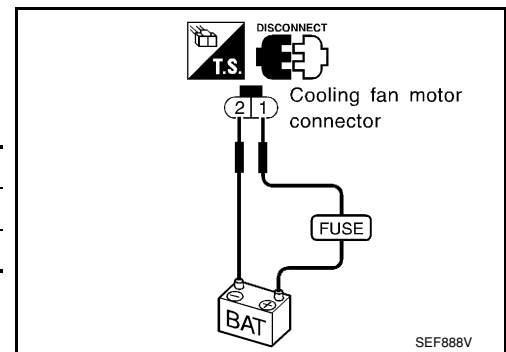

A

EC

C

D

E

F

G

H

I

J

K

L

M

N

O

P

DTC P1225 TP SENSOR

< SERVICE INFORMATION >


DTC P1225 TP SENSOR

Component Description

INFOID:000000001702937

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.

The throttle position sensor has two sensors. These sensors are a kind of potentiometers which transform the throttle valve position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the throttle valve and feed the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and the ECM controls the throttle control motor to make the throttle valve opening angle properly in response to driving condition.

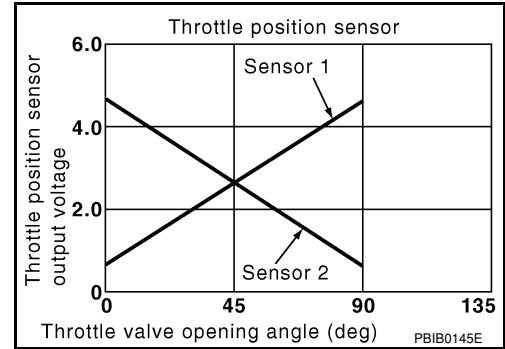

On Board Diagnosis Logic

INFOID:000000001702938

The MIL will not light up for this diagnosis.

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|---|---|--|
| P1225 1225 | Closed throttle position learning performance | Closed throttle position learning value is excessively low. | <ul style="list-style-type: none"> Electric throttle control actuator (TP sensor 1 and 2) |

DTC Confirmation Procedure

INFOID:000000001702939

NOTE:


If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

WITH CONSULT-II

- Turn ignition switch ON.
- Select "DATA MONITOR" mode with CONSULT-II.
- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- If 1st trip DTC is detected, go to [EC-426. "Diagnosis Procedure"](#).

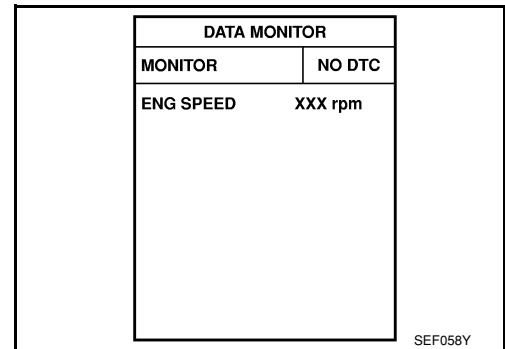

WITH GST

Follow the procedure "WITH CONSULT-II" above.

Diagnosis Procedure

INFOID:000000001702940

1. CHECK ELECTRIC THROTTLE CONTROL ACTUATOR VISUALLY

- Turn ignition switch OFF.
- Remove the intake air duct.


DTC P1225 TP SENSOR

< SERVICE INFORMATION >

3. Check if foreign matter is caught between the throttle valve (1) and the housing.
 - ⇐: Vehicle front

OK or NG

- OK >> GO TO 2.
- NG >> Remove the foreign matter and clean the electric throttle control actuator inside.

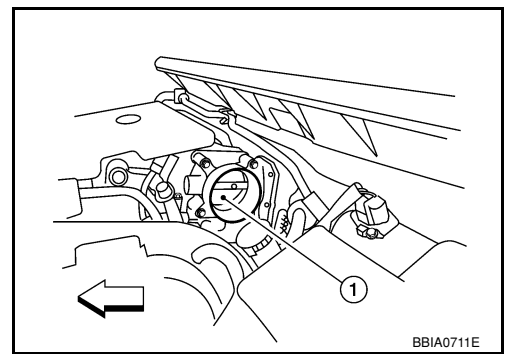

2. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace the electric throttle control actuator.
2. Perform [EC-76, "Throttle Valve Closed Position Learning"](#).
3. Perform [EC-76, "Idle Air Volume Learning"](#).

>> **INSPECTION END**

Removal and Installation

INFOID:000000001702941

ELECTRIC THROTTLE CONTROL ACTUATOR

Refer to [EM-18](#).

DTC P1226 TP SENSOR

< SERVICE INFORMATION >


DTC P1226 TP SENSOR

Component Description

INFOID:000000001702942

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.

The throttle position sensor has two sensors. These sensors are a kind of potentiometers which transform the throttle valve position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the throttle valve and feed the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and the ECM controls the throttle control motor to make the throttle valve opening angle properly in response to driving condition.

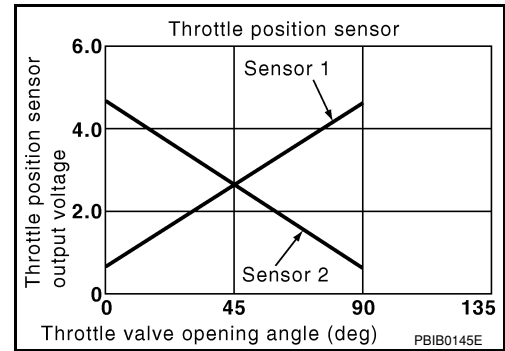

On Board Diagnosis Logic

INFOID:000000001702943

The MIL will not light up for this diagnosis.

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|---|--|--|
| P1226 1226 | Closed throttle position learning performance | Closed throttle position learning is not performed successfully, repeatedly. | <ul style="list-style-type: none"> Electric throttle control actuator (TP sensor 1 and 2) |

DTC Confirmation Procedure

INFOID:000000001702944

NOTE:


If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

Ⓜ WITH CONSULT-II

- Turn ignition switch ON.
- Select "DATA MONITOR" mode with CONSULT-II.
- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Repeat steps 3 and 4 for 32 times.
- If 1st trip DTC is detected, go to [EC-428, "Diagnosis Procedure"](#).

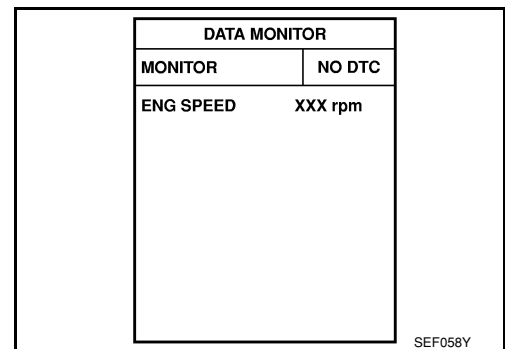

Ⓜ WITH GST

Follow the procedure "WITH CONSULT-II" above.

Diagnosis Procedure

INFOID:000000001702945

1. CHECK ELECTRIC THROTTLE CONTROL ACTUATOR VISUALLY

- Turn ignition switch OFF.
- Remove the intake air duct.


DTC P1226 TP SENSOR

< SERVICE INFORMATION >

3. Check if foreign matter is caught between the throttle valve (1) and the housing.
 - ⇐: Vehicle front

OK or NG

- OK >> GO TO 2.
- NG >> Remove the foreign matter and clean the electric throttle control actuator inside.

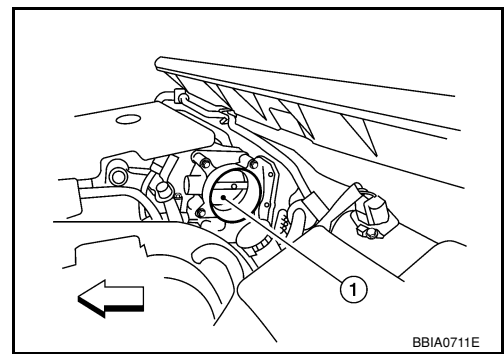

2. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace the electric throttle control actuator.
2. Perform [EC-76, "Throttle Valve Closed Position Learning"](#).
3. Perform [EC-76, "Idle Air Volume Learning"](#).

>> **INSPECTION END**

Removal and Installation

INFOID:000000001702946

ELECTRIC THROTTLE CONTROL ACTUATOR

Refer to [EM-18](#).

DTC P1421 COLD START CONTROL

< SERVICE INFORMATION >

DTC P1421 COLD START CONTROL

Description

INFOID:000000001702947

ECM controls ignition timing and engine idle speed when engine is started with prewarming up condition. This control promotes the activation of three way catalyst by heating the catalyst and reduces emissions.

On Board Diagnosis Logic

INFOID:000000001702948

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|---|--|---|
| P1421 1421 | Cold start emission reduction strategy monitoring | ECM does not control ignition timing and engine idle speed properly when engine is started with prewarming up condition. | <ul style="list-style-type: none">• Lack of intake air volume• Fuel injection system• ECM |

DTC Confirmation Procedure

INFOID:000000001702949

NOTE:

- If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
- **If DTC P1421 is displayed with other DTC, first perform the trouble diagnosis for other DTC.**

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11V at idle.

Ⓜ WITH CONSULT-II

1. Turn ignition switch OFF and wait at least 10 seconds.
2. Turn ignition switch ON.
3. Select "DATA MONITOR" mode with CONSULT-II.
4. Check that the "COOLAN TEMP/S" indication is between 4°C (39°F) and 36°C (97°F).
If "COOLAN TEMP/S" indication is within the specified value, go to the following step.
If "COOLAN TEMP/S" indication is out of the specified value, cool engine down or warm engine up and go to step 1.
5. Start engine and let it idle for 5 minutes.
6. If 1st trip DTC is detected, go to [EC-430. "Diagnosis Procedure"](#).

| DATA MONITOR | |
|---------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |
| COOLAN TEMP/S | XXX °C |

SEF174Y

Ⓜ WITH GST

Follow the procedure "WITH CONSULT-II" above.

Diagnosis Procedure

INFOID:000000001702950

1. PERFORM IDLE AIR VOLUME LEARNING

Perform [EC-76. "Idle Air Volume Learning"](#).

Is Idle Air Volume Learning carried out successfully?

Yes or No

- Yes >> GO TO 2.
- No >> Follow the instruction of Idle Air Volume Learning.

2. CHECK INTAKE SYSTEM

Check for the cause of intake air volume lacking. Refer to the following.

- Crushed intake air passage
- Intake air passage clogging

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace malfunctioning part

DTC P1421 COLD START CONTROL

< SERVICE INFORMATION >

3. CHECK FUEL INJECTION SYSTEM FUNCTION

Perform [EC-257, "DTC Confirmation Procedure"](#) for DTC P0171.

OK or NG

OK >> GO TO 4.

NG >> Go to [EC-260, "Diagnosis Procedure"](#) for DTC P0171.

4. PERFORM DTC CONFIRMATION PROCEDURE

With CONSULT-II

1. Turn ignition switch ON.
2. Select "SELF DIAG RESULTS" mode with CONSULT-II.
3. Touch "ERASE".
4. **Perform DTC Confirmation Procedure.**
See [EC-430, "DTC Confirmation Procedure"](#).
5. Is the 1st trip DTC P1421 displayed again?

With GST

1. Turn ignition switch ON.
2. Select Service \$04 with GST.
3. **Perform DTC Confirmation Procedure.**
See [EC-430, "DTC Confirmation Procedure"](#).
4. Is the 1st trip DTC P1421 displayed again?

Yes or No

Yes >> GO TO 5.

No >> **INSPECTION END**

5. REPLACE ECM

1. Replace ECM.
2. Perform initialization of NVIS (NATS) system and registration of all NVIS (NATS) ignition key IDs.
Refer to [BL-211, "ECM Re-communicating Function"](#).
3. Perform [EC-75, "VIN Registration"](#).
4. Perform [EC-76, "Accelerator Pedal Released Position Learning"](#).
5. Perform [EC-76, "Throttle Valve Closed Position Learning"](#).
6. Perform [EC-76, "Idle Air Volume Learning"](#).

>> **INSPECTION END**

A

EC

C

D

E

F

G

H

I

J

K

L

M

N

O

P

DTC P1564 ASCD STEERING SWITCH


< SERVICE INFORMATION >

DTC P1564 ASCD STEERING SWITCH

Component Description

INFOID:000000001702951

ASCD steering switch has variant values of electrical resistance for each button. ECM reads voltage variation of switch, and determines which button is operated.

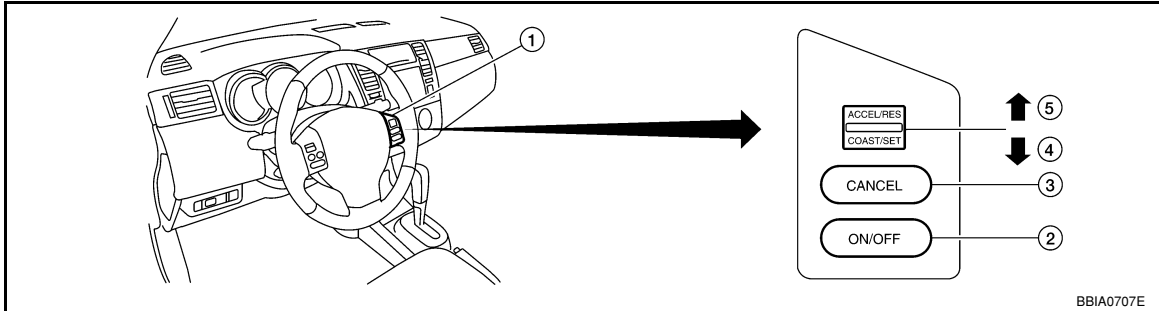

- 1. ASCD steering switch
- 2. MAIN switch
- 3. CANCEL switch
- 4. RESUME/ACCELERATE switch
- 5. SET/COAST switch

Refer to [EC-28](#) for the ASCD function.

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702952

Specification data are reference values.

| MONITOR ITEM | CONDITION | | SPECIFICATION |
|---------------|-----------------------|------------------------------------|---------------|
| MAIN SW | • Ignition switch: ON | MAIN switch: Pressed | ON |
| | | MAIN switch: Released | OFF |
| CANCEL SW | • Ignition switch: ON | CANCEL switch: Pressed | ON |
| | | CANCEL switch: Released | OFF |
| RESUME/ACC SW | • Ignition switch: ON | RESUME/ACCELERATE switch: Pressed | ON |
| | | RESUME/ACCELERATE switch: Released | OFF |
| SET SW | • Ignition switch: ON | SET/COAST switch: Pressed | ON |
| | | SET/COAST switch: Released | OFF |

On Board Diagnosis Logic

INFOID:000000001702953

This self-diagnosis has the one trip detection logic.

The MIL will not light up for this diagnosis.

NOTE:

If DTC P1564 is displayed with DTC P0605, first perform the trouble diagnosis for DTC P0605.

Refer to [EC-397](#).

| DTC No. | Trouble Diagnosis Name | DTC Detecting Condition | Possible Cause |
|---------------|------------------------|--|--|
| P1564 1564 | ASCD steering switch | <ul style="list-style-type: none"> • An excessively high voltage signal from the ASCD steering switch is sent to ECM. • ECM detects that input signal from the ASCD steering switch is out of the specified range. • ECM detects that the ASCD steering switch is stuck ON. | <ul style="list-style-type: none"> • Harness or connectors (ASCD switch circuit is open or shorted.) • ASCD steering switch • ECM |

DTC P1564 ASCD STEERING SWITCH

< SERVICE INFORMATION >

DTC Confirmation Procedure

INFOID:000000001702954

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

④ WITH CONSULT-II

1. Turn ignition switch ON.
2. Select "DATA MONITOR" mode with CONSULT-II.
3. Wait at least 10 seconds.
4. Press MAIN switch for at least 10 seconds, then release it and wait at least 10 seconds.
5. Press CANCEL switch for at least 10 seconds, then release it and wait at least 10 seconds.
6. Press RESUME/ACCELERATE switch for at least 10 seconds, then release it and wait at least 10 seconds.
7. Press SET/COAST switch for at least 10 seconds, then release it and wait at least 10 seconds.
8. If DTC is detected, go to [EC-435. "Diagnosis Procedure"](#).

| DATA MONITOR | |
|--------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |

SEF058Y

④ WITH GST

Follow the procedure "WITH CONSULT-II" above.

DTC P1564 ASCD STEERING SWITCH



< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001702955

EC-ASC/SW-01

— : DETECTABLE LINE FOR DTC
 - - - : NON-DETECTABLE LINE FOR DTC

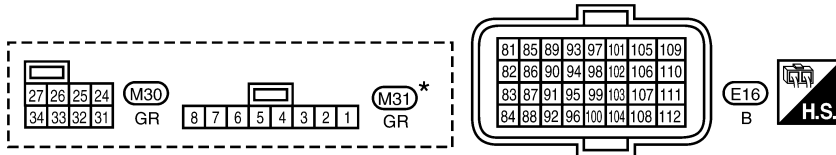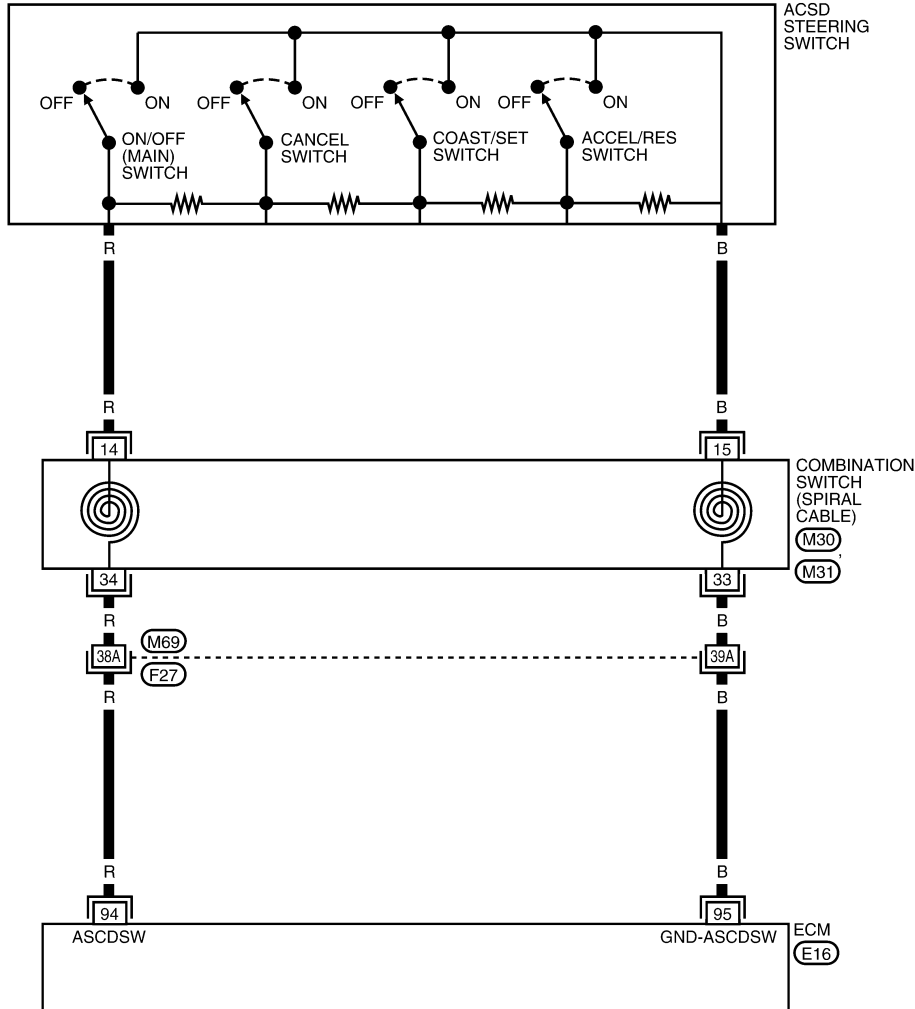

REFER TO THE FOLLOWING.
 (M69) - SUPER MULTIPLE JUNCTION (SMJ)

* : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

BBWA2663E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

DTC P1564 ASCD STEERING SWITCH

< SERVICE INFORMATION >


| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------------|---------------|----------------------|--|-------------------|
| 94 | R | ASCD steering switch | [Ignition switch: ON] • ASCD steering switch: OFF | Approximately 4V |
| | | | [Ignition switch: ON] • MAIN switch: Pressed | Approximately 0V |
| | | | [Ignition switch: ON] • CANCEL switch: Pressed | Approximately 1V |
| | | | [Ignition switch: ON] • RESUME/ACCELERATE switch: Pressed | Approximately 3V |
| | | | [Ignition switch: ON] • SET/COAST switch: Pressed | Approximately 2V |
| 95 | B | Sensor ground | [Engine is running] • Warm-up condition • Idle speed | Approximately 0V |

Diagnosis Procedure

INFOID:000000001702956

1. CHECK GROUND CONNECTIONS

- Turn ignition switch OFF.
- Loosen and retighten ground screw on the body.
Refer to [EC-142, "Ground Inspection"](#).

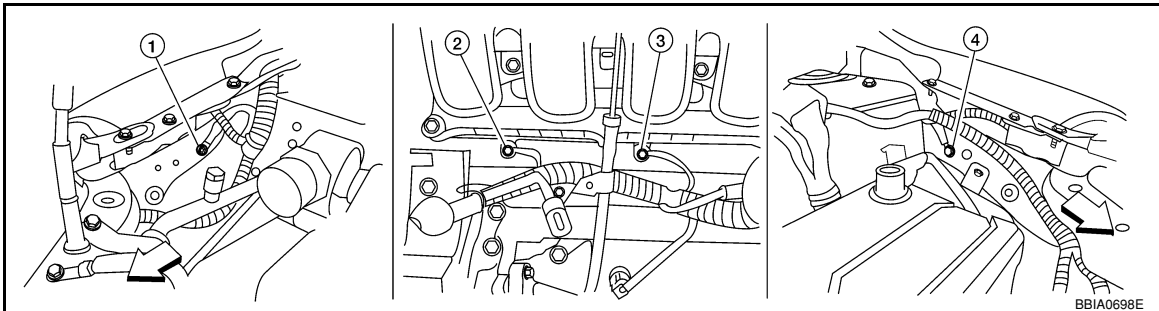

↔ Vehicle front

- Body ground E24
- Engine ground F9
- Engine ground F16
- Body ground E15

OK or NG

- OK >> GO TO 2.
NG >> Repair or replace ground connections.

2. CHECK ASCD STEERING SWITCH CIRCUIT

With CONSULT-II

- Turn ignition switch ON.
- Select "MAIN SW", "RESUME/ACC SW", "SET SW and "CANCEL SW" in "DATA MONITOR" mode with CONSULT-II.
- Check each item indication under the following conditions.

| Switch | Monitor item | Condition | Indication |
|---------------|--------------|-----------|------------|
| MAIN switch | MAIN SW | Pressed | ON |
| | | Released | OFF |
| CANCEL switch | CANCEL SW | Pressed | ON |
| | | Released | OFF |

| DATA MONITOR | |
|---------------|--------|
| MONITOR | NO DTC |
| MAIN SW | OFF |
| CANCEL SW | OFF |
| RESUME/ACC SW | OFF |
| SET SW | OFF |

SEC006D

DTC P1564 ASCD STEERING SWITCH


< SERVICE INFORMATION >

| Switch | Monitor item | Condition | Indication |
|--------------------------|---------------|-----------|------------|
| RESUME/ACCELERATE switch | RESUME/ACC SW | Pressed | ON |
| | | Released | OFF |
| SET/COAST switch | SET SW | Pressed | ON |
| | | Released | OFF |

⊗ Without CONSULT-II

- Turn ignition switch ON.
- Check voltage between ECM terminal 94 and ground with pressing each button.

| Switch | Condition | Voltage [V] |
|--------------------------|-----------|-------------|
| MAIN switch | Pressed | Approx. 0 |
| | Released | Approx. 4.0 |
| CANCEL switch | Pressed | Approx. 1.0 |
| | Released | Approx. 4.0 |
| RESUME/ACCELERATE switch | Pressed | Approx. 3.0 |
| | Released | Approx. 4.0 |
| SET/COAST switch | Pressed | Approx. 2.0 |
| | Released | Approx. 4.0 |

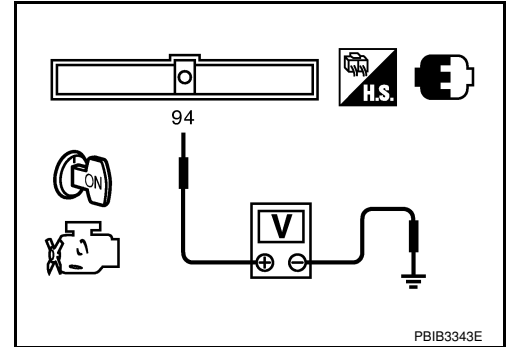

OK or NG

- OK >> GO TO 8.
 NG >> GO TO 3.

3. CHECK ASCD STEERING SWITCH GROUND CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- Disconnect combination switch harness connector M102.
- Disconnect ECM harness connector.
- Check harness continuity between combination switch terminal 15 and ECM terminal 95. Refer to Wiring Diagram.

Continuity should exist.

- Also check harness for short to ground or short to power.

OK or NG

- OK >> GO TO 5.
 NG >> GO TO 4.

4. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M69, E7
- Combination switch (spiral cable)
- Harness for open and short between ECM and combination switch

>> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK ASCD STEERING SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- Check harness continuity between ECM terminal 94 and combination switch terminal 14. Refer to Wiring Diagram.

Continuity should exist.

- Also check harness for short to ground and short to power.

OK or NG

DTC P1564 ASCD STEERING SWITCH

< SERVICE INFORMATION >

- OK >> GO TO 7.
- NG >> GO TO 6.

6. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M69, E7
- Combination switch (spiral cable)
- Harness for open and short between ECM and combination switch

>> Repair open circuit or short to ground or short to power in harness or connectors.

7. CHECK ASCD STEERING SWITCH

Refer to [EC-437. "Component Inspection"](#).

OK or NG

- OK >> GO TO 7.
- NG >> Replace ASCD steering switch.

8. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**

Component Inspection


INFOID:000000001702957

ASCD STEERING SWITCH

1. Disconnect combination switch (spiral cable) harness connector M102.
2. Check continuity between combination switch (spiral cable) terminals 14 and 15 with pushing each switch.

| Switch | Condition | Resistance [Ω] |
|--------------------------|-----------|-------------------------|
| MAIN switch | Pressed | Approx. 0 |
| | Released | Approx. 4,000 |
| CANCEL switch | Pressed | Approx. 250 |
| | Released | Approx. 4,000 |
| RESUME/ACCELERATE switch | Pressed | Approx. 1,480 |
| | Released | Approx. 4,000 |
| SET/COAST switch | Pressed | Approx. 660 |
| | Released | Approx. 4,000 |

If NG, replace ASCD steering switch.

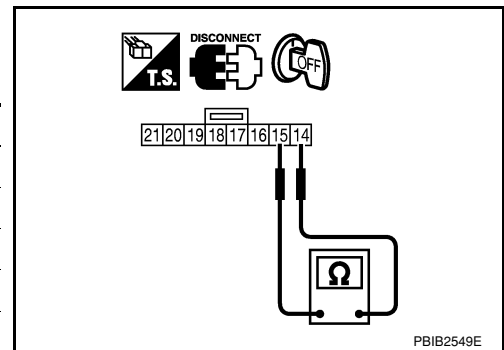

DTC P1572 ASCD BRAKE SWITCH


< SERVICE INFORMATION >

DTC P1572 ASCD BRAKE SWITCH

Component Description

INFOID:000000001702958

When the brake pedal is depressed, ASCD brake switch (2) is turned OFF and stop lamp switch (1) is turned ON. ECM detects the state of the brake pedal by this input of two kinds (ON/OFF signal). Refer to [EC-28](#) for the ASCD function.

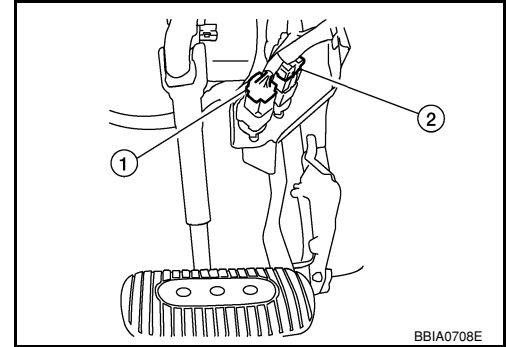

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702959

Specification data are reference values.

| MONITOR ITEM | CONDITION | SPECIFICATION |
|----------------------------------|---|---------------|
| BRAKE SW1 (ASCd brake switch) | <ul style="list-style-type: none"> Ignition switch: ON Brake pedal: Fully released (A/T, CVT) Brake pedal and clutch pedal: Fully released (M/T) | ON |
| | <ul style="list-style-type: none"> Brake pedal: Slightly depressed (A/T, CVT) Brake pedal and/or clutch pedal: Slightly depressed (M/T) | OFF |
| BRAKE SW2 (Stop lamp switch) | <ul style="list-style-type: none"> Ignition switch: ON Brake pedal: Fully released | OFF |
| | <ul style="list-style-type: none"> Brake pedal: Slightly depressed | ON |

On Board Diagnosis Logic

INFOID:000000001702960

This self-diagnosis has the one trip detection logic.

The MIL will not light up for this diagnosis.

NOTE:

- If DTC P1572 is displayed with DTC P0605, first perform the trouble diagnosis for DTC P0605. Refer to [EC-397](#).
- This self-diagnosis has the one trip detection logic. When malfunction A is detected, DTC is not stored in ECM memory. And in that case, 1st trip DTC and 1st trip freeze frame data are displayed. 1st trip DTC is erased when ignition switch OFF. And even when malfunction A is detected in two consecutive trips, DTC is not stored in ECM memory.

| DTC No. | Trouble Diagnosis Name | DTC Detecting Condition | | Possible Cause |
|---------------|------------------------|-------------------------|---|---|
| P1572 1572 | ASCd brake switch | A) | When the vehicle speed is above 30km/h (19 MPH), ON signals from the stop lamp switch and the ASCD brake switch are sent to ECM at the same time. | <ul style="list-style-type: none"> Harness or connectors (Stop lamp switch circuit is shorted.) Harness or connectors (ASCd brake switch circuit is shorted.) Harness or connectors (ASCd clutch switch circuit is shorted.) (M/T) Stop lamp switch ASCd brake switch ASCd clutch switch (M/T) Incorrect stop lamp switch installation Incorrect ASCd brake switch installation Incorrect ASCd clutch switch installation (M/T) ECM |
| | | B) | ASCd brake switch signal is not sent to ECM for extremely long time while the vehicle is driving | |

DTC P1572 ASCD BRAKE SWITCH

< SERVICE INFORMATION >

DTC Confirmation Procedure

INFOID:000000001702961

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

- If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.
- Procedure for malfunction B is not described here. It takes extremely long time to complete procedure for malfunction B. By performing procedure for malfunction A, the incident that causes malfunction B can be detected.

TESTING CONDITION:

Steps 4 and 5 may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

Ⓟ WITH CONSULT-II

1. Start engine.
2. Select "DATA MONITOR" mode with CONSULT-II.
3. Press MAIN switch and make sure that CRUISE indicator lights up.
4. Drive the vehicle for at least 5 consecutive seconds under the following condition.

| | |
|---------------|----------------------------|
| VHCL SPEED SE | More than 30 km/h (19 MPH) |
| Shift lever | Suitable position |

If 1st trip DTC is detected, go to [EC-441, "Diagnosis Procedure"](#).
If 1st trip DTC is not detected, go to the following step.

5. Drive the vehicle for at least 5 consecutive seconds under the following condition.

| | |
|------------------|---|
| VHCL SPEED SE | More than 30 km/h (19 MPH) |
| Shift lever | Suitable position |
| Driving location | Depress the brake pedal for more than 5 seconds so as not to come off from the above-mentioned vehicle speed. |

6. If 1st trip DTC is detected, go to [EC-441, "Diagnosis Procedure"](#).

Ⓟ WITH GST

Follow the procedure "WITH CONSULT-II" above.

| DATA MONITOR | |
|---------------|----------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |
| VHCL SPEED SE | XXX km/h |
| CRUISE LAMP | ON |
| BRAKE SW 1 | ON |
| BRAKE SW 2 | OFF |

PBIB2386E



DTC P1572 ASCD BRAKE SWITCH

< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001702962

EC-ASC/BS-01

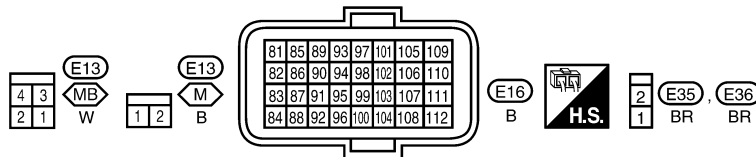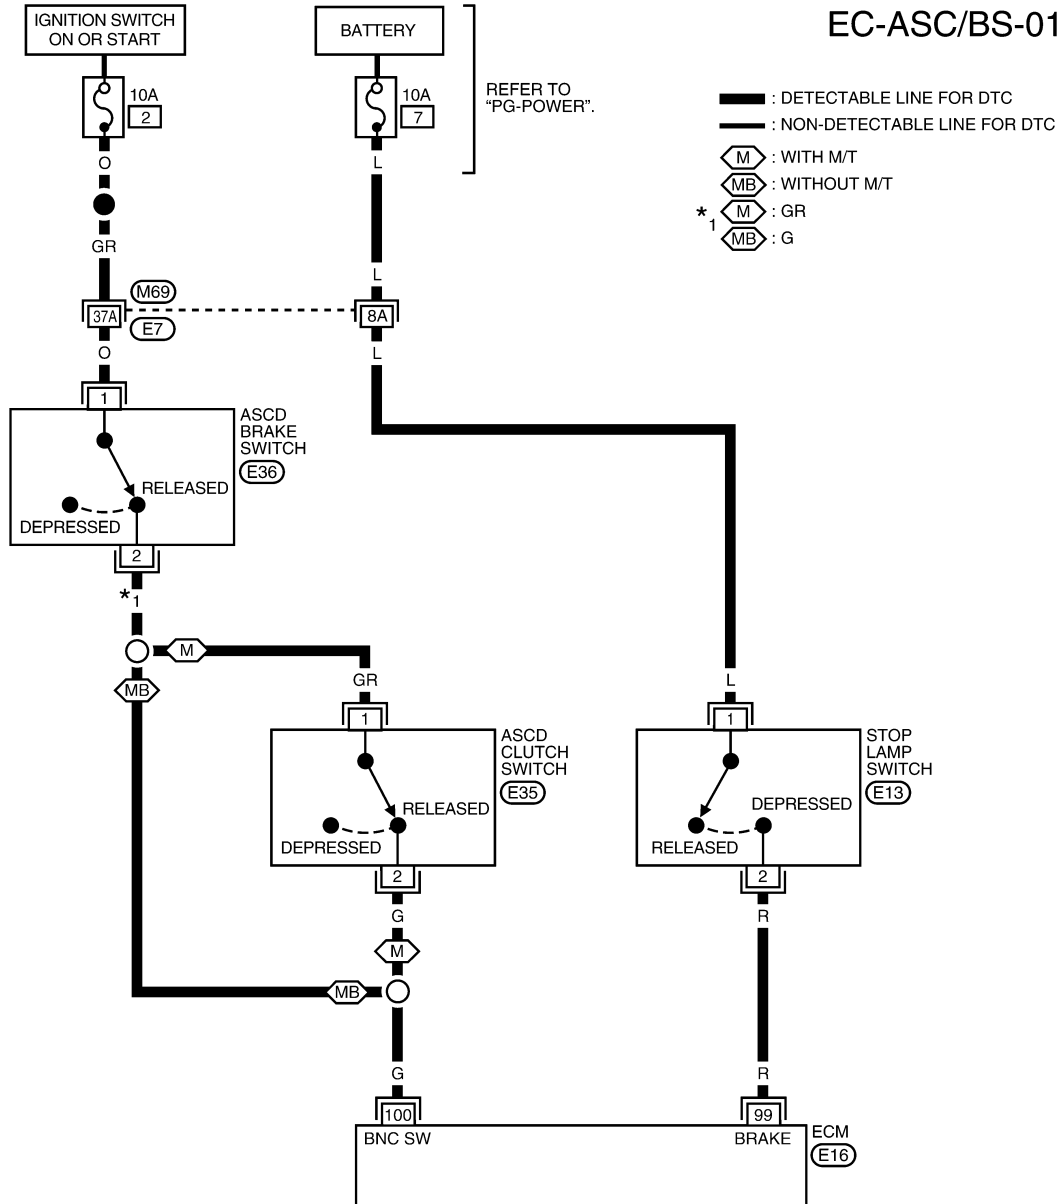

REFER TO THE FOLLOWING.
(M69) - SUPER MULTIPLE JUNCTION (SMJ)

BBWA2665E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

DTC P1572 ASCD BRAKE SWITCH

< SERVICE INFORMATION >

| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------------|---------------|-------------------|---|-------------------------------|
| 99 | R | Stop lamp switch | [Ignition switch: ON] • Brake pedal: Fully released | Approximately 0V |
| | | | [Ignition switch: ON] • Brake pedal: Slightly depressed | BATTERY VOLTAGE (11 - 14V) |
| 100 | G | ASCD brake switch | • Brake pedal: Slightly depressed (A/T, CVT) • Brake pedal and clutch pedal: Fully released (M/T) | Approximately 0V |
| | | | • Brake pedal: Slightly depressed (A/T, CVT) • Brake pedal and/or clutch pedal: Slightly depressed (M/T) | BATTERY VOLTAGE (11 - 14V) |

Diagnosis Procedure

INFOID:000000001702963

1. CHECK OVERALL FUNCTION-I


④ With CONSULT-II

- Turn ignition switch ON.
- Select "BRAKE SW1" in "DATA MONITOR" mode with CONSULT-II.
- Check "BRAKE SW1" indication under the following conditions.
M/T models

| CONDITION | INDICATION |
|---|------------|
| Clutch pedal and/or brake pedal: Slightly depressed | OFF |
| Clutch pedal and brake pedal: Fully released | ON |

A/T and CVT models

| CONDITION | INDICATION |
|---------------------------------|------------|
| Brake pedal: Slightly depressed | OFF |
| Brake pedal: Fully released | ON |

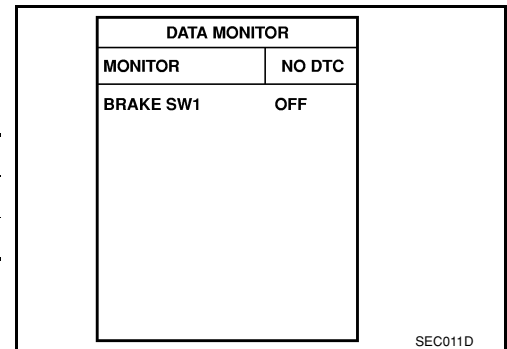


⊗ Without CONSULT-II

- Turn ignition switch ON.
- Check voltage between ECM terminal 100 and ground under the following conditions.
M/T models

| CONDITION | VOLTAGE |
|---|------------------|
| Clutch pedal and/or brake pedal: Slightly depressed | Approximately 0V |
| Clutch pedal and brake pedal: Fully released | Battery voltage |

A/T and CVT models

| CONDITION | VOLTAGE |
|---------------------------------|------------------|
| Brake pedal: Slightly depressed | Approximately 0V |
| Brake pedal: Fully released | Battery voltage |

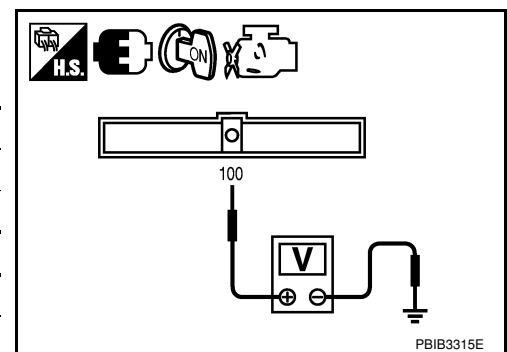

OK or NG

- OK >> GO TO 2.
- NG (M/T models) >>> GO TO 3.
- NG (A/T and CVT models) >>> GO TO 4.

2. CHECK OVERALL FUNCTION-II


④ With CONSULT-II

DTC P1572 ASCD BRAKE SWITCH

< SERVICE INFORMATION >

Check "BRAKE SW2" indication in "DATA MONITOR" mode.


| CONDITION | INDICATION |
|---------------------------------|------------|
| Brake pedal: Fully released | OFF |
| Brake pedal: Slightly depressed | ON |

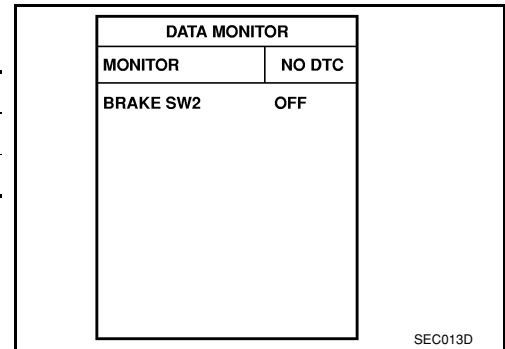

⊗ Without CONSULT-II

Check voltage between ECM terminal 99 and ground under the following conditions.

| CONDITION | VOLTAGE |
|---------------------------------|------------------|
| Brake pedal: Fully released | Approximately 0V |
| Brake pedal: Slightly depressed | Battery voltage |

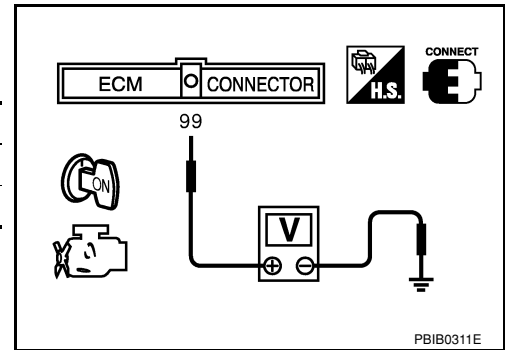


OK or NG

OK >> GO TO 15.

NG >> GO TO 11.

3. CHECK ASCD CLUTCH SWITCH POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect ASCD clutch switch (1) harness connector.
 - Clutch pedal (2)
3. Turn ignition switch ON.

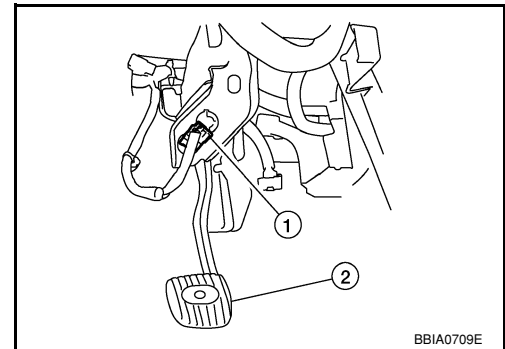


4. Check voltage between ASCD clutch switch terminal 1 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

OK >> GO TO 9.

NG >> GO TO 4.

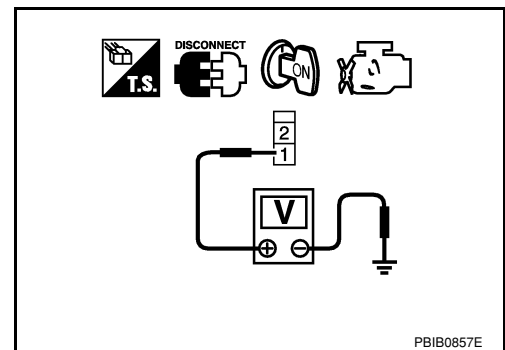


4. CHECK ASCD BRAKE SWITCH POWER SUPPLY

1. Turn ignition switch OFF.

DTC P1572 ASCD BRAKE SWITCH

< SERVICE INFORMATION >

2. Disconnect ASCD brake switch (2) harness connector.
 - Stop lamp switch (1)
3. Turn ignition switch ON.

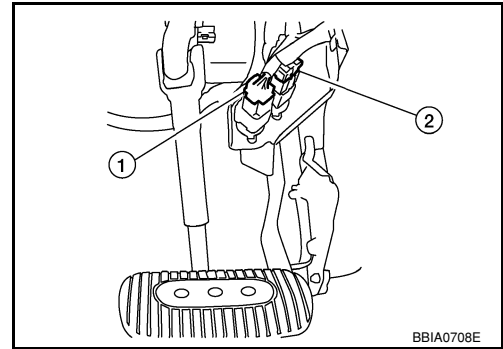

4. Check voltage between ASCD brake switch terminal 1 and ground under the following conditions with CONSULT-II or tester.

| CONDITION | VOLTAGE |
|----------------------------------|-----------------|
| Clutch pedal: Fully released | Battery voltage |
| Clutch pedal: Slightly depressed | Approx. 0V |

OK or NG

- OK (M/T models) >>GO TO 6.
- OK (A/T and CVT models) >>GO TO 7.
- NG >> GO TO 5.

5.DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M69, E7
- 10A fuse
- Harness for open or short between ASCD brake switch and fuse

>> Repair open circuit or short to ground or short to power in harness or connectors.

6.CHECK ASCD CLUTCH SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Check harness continuity between ASCD brake switch terminal 2 and ASCD clutch switch terminal 1. Refer to Wiring Diagram.

Continuity should exist.

3. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 8.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

7.CHECK ASCD BRAKE SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 100 and ASCD brake switch terminal 2. Refer to Wiring Diagram.


Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 8.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

8.CHECK ASCD BRAKE SWITCH

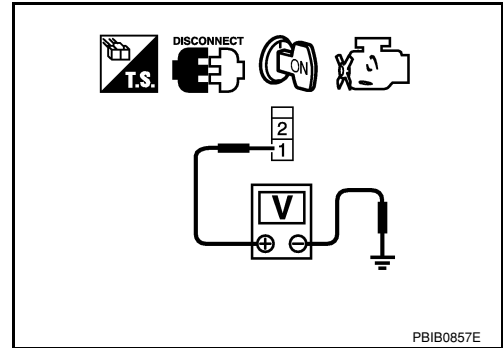

DTC P1572 ASCD BRAKE SWITCH

< SERVICE INFORMATION >

Refer to [EC-445. "Component Inspection"](#).

OK or NG

- OK >> GO TO 15.
- NG >> Replace ASCD brake switch.

9. CHECK ASCD CLUTCH SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 100 and ASCD clutch switch terminal 2.
Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 10.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

10. CHECK ASCD CLUTCH SWITCH


Refer to [EC-445. "Component Inspection"](#)

OK or NG


- OK >> GO TO 15.
- NG >> Replace ASCD clutch switch.

11. CHECK STOP LAMP SWITCH POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect stop lamp switch (1) harness connector.
- ASCD brake switch (2)

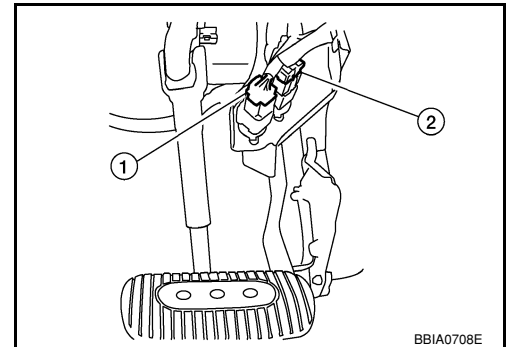

3. Check voltage between stop lamp switch terminal 1 and ground with CONSULT -II or tester.

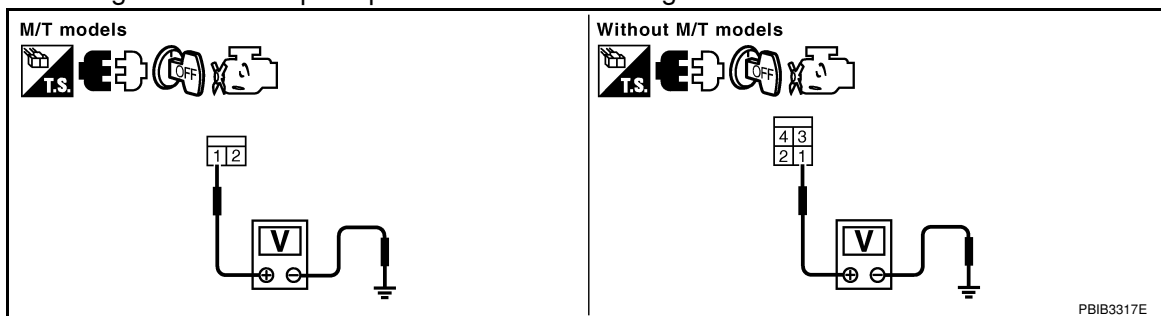

Voltage: Battery voltage

OK or NG

- OK >> GO TO 13.
- NG >> GO TO 12.

12. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M69, E7

DTC P1572 ASCD BRAKE SWITCH

< SERVICE INFORMATION >

- Harness for open or short between stop lamp switch and battery

>> Repair open circuit or short to ground or short to power in harness or connectors.

13. CHECK STOP LAMP SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Disconnect ECM harness connector.
2. Check harness continuity between ECM terminal 99 and stop lamp switch terminal 2. Refer to Wiring Diagram.

Continuity should exist.

3. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 14.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

14. CHECK STOP LAMP SWITCH

Refer to [EC-445. "Component Inspection"](#)

OK or NG

OK >> GO TO 15.

NG >> Replace stop lamp switch.

15. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**

Component Inspection


INFOID:000000001702964

ASCD BRAKE SWITCH

1. Turn ignition switch OFF.
2. Disconnect ASCD brake switch harness connector.
3. Check continuity between ASCD brake switch terminals 1 and 2 under the following conditions.

| Condition | Continuity |
|----------------------------------|-------------------|
| Brake pedal: Fully released. | Should exist. |
| Brake pedal: Slightly depressed. | Should not exist. |

If NG, adjust ASCD brake switch installation, refer to [BR-5](#), and perform step 3 again.

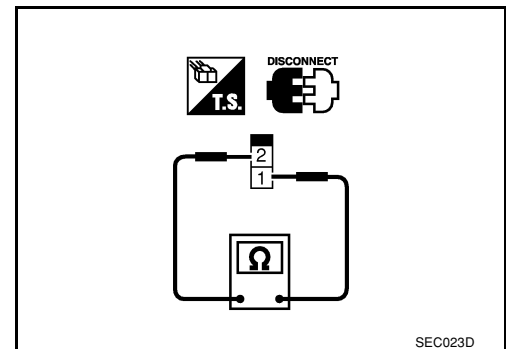

ASCD CLUTCH SWITCH

1. Turn ignition switch OFF.
2. Disconnect ASCD clutch switch harness connector.


DTC P1572 ASCD BRAKE SWITCH

< SERVICE INFORMATION >

3. Check continuity between ASCD clutch switch terminals 1 and 2 under the following conditions.


| Condition | Continuity |
|-----------------------------------|-------------------|
| Clutch pedal: Fully released. | Should exist. |
| Clutch pedal: Slightly depressed. | Should not exist. |

If NG, adjust ASCD clutch switch installation, refer to [CL-5](#), and perform step 3 again.

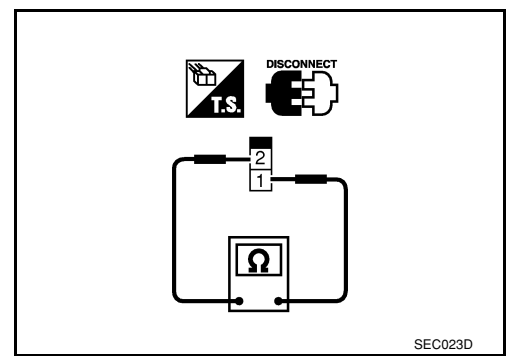

STOP LAMP SWITCH

1. Turn ignition switch OFF.
2. Disconnect stop lamp switch harness connector.
3. Check continuity between stop lamp switch terminals 1 and 2 under the following conditions.

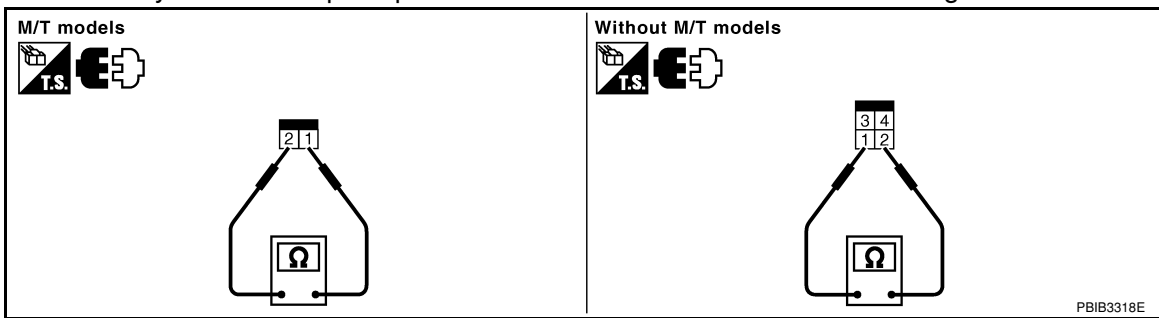

| Condition | Continuity |
|----------------------------------|-------------------|
| Brake pedal: Fully released. | Should not exist. |
| Brake pedal: Slightly depressed. | Should exist. |

If NG, adjust stop lamp switch installation, refer to [BR-5](#), and perform step 3 again.

DTC P1574 ASCD VEHICLE SPEED SENSOR

< SERVICE INFORMATION >

DTC P1574 ASCD VEHICLE SPEED SENSOR

Component Description

INFOID:000000001702965

The ECM receives two vehicle speed sensor signals via CAN communication line. One is sent from combination meter, and the other is from TCM (Transmission control module). The ECM uses these signals for ASCD control. Refer to [EC-28](#) for ASCD functions.

On Board Diagnosis Logic

INFOID:000000001702966

**This self-diagnosis has the one trip detection logic.
The MIL will not light up for this diagnosis.**

NOTE:

- If DTC P1574 is displayed with DTC U1000, U1001, first perform the trouble diagnosis for DTC U1000, U1001. Refer to [EC-143](#).
- If DTC P1574 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [EC-145](#).
- If DTC P1574 is displayed with DTC P0500, first perform the trouble diagnosis for DTC P0500. Refer to [EC-391](#).
- If DTC P1574 is displayed with DTC P0605, first perform the trouble diagnosis for DTC P0605. Refer to [EC-397](#).

| DTC No. | Trouble Diagnosis Name | DTC Detecting Condition | Possible Cause |
|---------------|---------------------------|---|---|
| P1574 1574 | ASCD vehicle speed sensor | ECM detects a difference between two vehicle speed signals is out of the specified range. | <ul style="list-style-type: none"> • Harness or connectors (CAN communication line is open or shorted.) • Harness or connectors (Combination meter circuit is open or shorted.) • TCM (A/T and CVT models) • Combination meter • Wheel sensor • ECM |

DTC Confirmation Procedure

INFOID:000000001702967

CAUTION:

Always drive vehicle at a safe speed.

NOTE:


If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Step 3 may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

Ⓟ WITH CONSULT-II

1. Start engine.
2. Select "DATA MONITOR" mode with CONSULT-II.
3. Drive the vehicle at more than 40 km/h (25MPH).
4. If DTC is detected, go to [EC-448. "Diagnosis Procedure"](#).

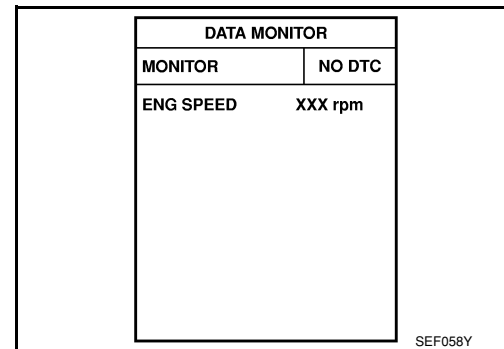

Ⓟ WITH GST

Follow the procedure "WITH CONSULT-II" above.

DTC P1574 ASCD VEHICLE SPEED SENSOR

< SERVICE INFORMATION >

Diagnosis Procedure

INFOID:000000001702968

1.CHECK DTC WITH TCM

Check DTC with TCM. Refer to [AT-36](#) (A/T) or [CVT-26](#) (CVT).

OK or NG

OK >> GO TO 2.

NG >> Perform trouble shooting relevant to DTC indicated.

2.CHECK DTC WITH “ABS ACTUATOR AND ELECTRIC UNIT”

Refer to [BRC-8](#).

OK or NG

OK >> GO TO 3.

NG >> Repair or replace.

3.CHECK COMBINATION METER

Check combination meter function.

Refer to [DI-4](#).

>> **INSPECTION END**

DTC P1715 INPUT SPEED SENSOR (TURBINE REVOLUTION SENSOR)

< SERVICE INFORMATION >

DTC P1715 INPUT SPEED SENSOR (TURBINE REVOLUTION SENSOR)

Description

INFOID:000000001702969

ECM receives turbine revolution sensor signal from TCM through CAN communication line. ECM uses this signal for engine control.

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702970

Specification data are reference values.

| MONITOR ITEM | CONDITION | SPECIFICATION |
|---------------|--|--|
| I/P PULLY SPD | • Vehicle speed: More than 20 km/h (12MPH) | Almost the same speed as the tachometer indication |

On Board Diagnosis Logic

INFOID:000000001702971

NOTE:

- If DTC P1715 is displayed with DTC U1000, U1001 first perform the trouble diagnosis for DTC U1000, U1001. Refer to [EC-143](#).
- If DTC P1715 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [EC-145](#).
- If DTC P1715 is displayed with DTC P0335, first perform the trouble diagnosis for DTC P0335. Refer to [EC-295](#).
- If DTC P1715 is displayed with DTC P0340 first perform the trouble diagnosis for DTC P0340. Refer to [EC-302](#).
- If DTC P1715 is displayed with DTC P0605, first perform the trouble diagnosis for DTC P0605. Refer to [EC-397](#).

The MIL will not light up for this diagnosis.

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|---|---|--|
| P1715 1715 | Input speed sensor (Turbine revolution sensor) (TCM output) | Turbine revolution sensor signal is different from the theoretical value calculated by ECM from revolution sensor signal and engine rpm signal. | <ul style="list-style-type: none">• Harness or connectors (CAN communication line is open or shorted)• Harness or connectors (Turbine revolution sensor circuit is open or shorted)• TCM |

Diagnosis Procedure

INFOID:000000001702972

1.CHECK DTC WITH TCM

Check DTC with TCM. Refer to [AT-36](#).

OK or NG

OK >> GO TO 2.

NG >> Perform trouble shooting relevant to DTC indicated.

2.REPLACE TCM

Replace TCM. Refer to [AT-39](#).

>> INSPECTION END

DTC P1715 INPUT SPEED SENSOR (PRIMARY SPEED SENSOR)

< SERVICE INFORMATION >

DTC P1715 INPUT SPEED SENSOR (PRIMARY SPEED SENSOR)

Description

INFOID:000000001702973

ECM receives primary speed sensor signal from TCM through CAN communication line.

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702974

Specification data are reference values.

| MONITOR ITEM | CONDITION | SPECIFICATION |
|---------------|--|--|
| I/P PULLY SPD | • Vehicle speed: More than 20 km/h (12MPH) | Almost the same speed as the tachometer indication |

On Board Diagnosis Logic

INFOID:000000001702975

NOTE:

- If DTC P1715 is displayed with DTC U1000 or U1001 first perform the trouble diagnosis for DTC U1000, U1001. Refer to [EC-143](#).
- If DTC P1715 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [EC-145](#).
- If DTC P1715 is displayed with DTC P0335, first perform the trouble diagnosis for DTC P0335. Refer to [EC-295](#).
- If DTC P1715 is displayed with DTC P0340 first perform the trouble diagnosis for DTC P0340. Refer to [EC-302](#).
- If DTC P1715 is displayed with DTC P0605, first perform the trouble diagnosis for DTC P0605. Refer to [EC-397](#).

The MIL will not light up for this diagnosis.

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|--|---|---|
| P1715 1715 | Input speed sensor (Primary speed sensor) (TCM output) | Primary speed sensor signal is different from the theoretical value calculated by ECM from secondary speed sensor signal and engine rpm signal. | <ul style="list-style-type: none"> • Harness or connectors (CAN communication line is open or shorted) • Harness or connectors (Primary speed sensor circuit is open or shorted) • TCM |

DTC Confirmation Procedure

INFOID:000000001702976

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

Ⓜ WITH CONSULT-II

1. Turn ignition switch ON.
2. Select "DATA MONITOR" mode with CONSULT-II.
3. Start engine.
4. Drive vehicle at a speed of more than 50 km/h (31 MPH) for at least 5 seconds.
5. If 1st trip DTC is detected, go to [EC-451](#). "Diagnosis Procedure".

| DATA MONITOR | |
|---------------|----------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |
| VHCL SPEED SE | XXX km/h |

PBIB2673E

Ⓜ WITH GST

Follow the procedure "WITH CONSULT-II" above.

DTC P1715 INPUT SPEED SENSOR (PRIMARY SPEED SENSOR)

< SERVICE INFORMATION >

Diagnosis Procedure

INFOID:000000001702977

1. CHECK DTC WITH TCM

Check DTC with TCM. Refer to [AT-36](#).

OK or NG

OK >> GO TO 2.

NG >> Perform trouble shooting relevant to DTC indicated.

2. REPLACE TCM

Replace TCM. Refer to [AT-202. "Removal and Installation"](#).

>> **INSPECTION END**

A

EC

C

D

E

F

G

H

I

J

K

L

M

N

O

P

DTC P1805 BRAKE SWITCH

< SERVICE INFORMATION >

DTC P1805 BRAKE SWITCH

Description

INFOID:000000001702978

Brake switch signal is applied to the ECM through the stop lamp switch when the brake pedal is depressed. This signal is used mainly to decrease the engine speed when the vehicle is driving.

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702979

Specification data are reference values.

| MONITOR ITEM | CONDITION | | SPECIFICATION |
|--------------|-----------------------|---------------------------------|---------------|
| BRAKE SW | • Ignition switch: ON | Brake pedal: Fully released | OFF |
| | | Brake pedal: Slightly depressed | ON |

On Board Diagnosis Logic

INFOID:000000001702980

The MIL will not light up for this self-diagnosis.

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|------------------------|--|--|
| P1805 1805 | Brake switch | A brake switch signal is not sent to ECM for extremely long time while the vehicle is driving. | <ul style="list-style-type: none"> • Harness or connectors (Stop lamp switch circuit is open or shorted.) • Stop lamp switch |

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters in fail-safe mode.

| Engine operation condition in fail-safe mode | |
|--|-------------------|
| ECM controls the electric throttle control actuator by regulating the throttle opening to a small range. Therefore, acceleration will be poor. | |
| Vehicle condition | Driving condition |
| Engine: Idling | Normal |
| Accelerating | Poor acceleration |

DTC Confirmation Procedure

INFOID:000000001702981

WITH CONSULT-II

1. Turn ignition switch ON.
2. Fully depress the brake pedal for at least 5 seconds.
3. Erase the DTC with CONSULT-II.
4. Select "DATA MONITOR" mode with CONSULT-II.
5. If 1st trip DTC is detected, go to [EC-454, "Diagnosis Procedure"](#).

| DATA MONITOR | |
|--------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |
| BRAKE SW | ON |

PBIB1952E

WITH GST

Follow the procedure "WITH CONSULT-II" above.





DTC P1805 BRAKE SWITCH


< SERVICE INFORMATION >

Wiring Diagram


INFOID:000000001702982

EC-BRK/SW-01

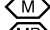-  : DETECTABLE LINE FOR DTC
-  : NON-DETECTABLE LINE FOR DTC
-  : WITH M/T
-  : WITHOUT M/T

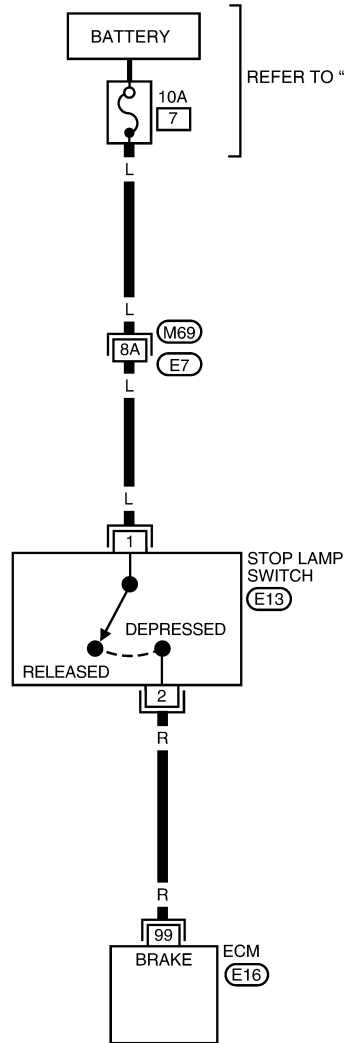

REFER TO "PG-POWER".

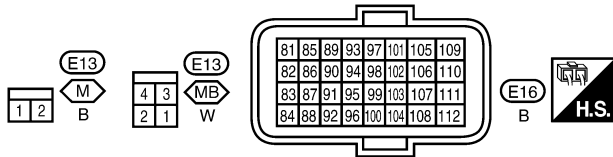

REFER TO THE FOLLOWING.

(M69) - SUPER MULTIPLE JUNCTION (SMJ)

BBWA2651E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

DTC P1805 BRAKE SWITCH

< SERVICE INFORMATION >

| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------------|---------------|------------------|---|-------------------------------|
| 99 | R | Stop lamp switch | [Ignition switch: OFF] • Brake pedal: Fully released | Approximately 0V |
| | | | [Ignition switch: OFF] • Brake pedal: Slightly depressed | BATTERY VOLTAGE (11 - 14V) |

Diagnosis Procedure

INFOID:000000001702983

1. CHECK STOP LAMP SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Check the stop lamp when depressing and releasing the brake pedal.


| | |
|--------------------|-----------------|
| Brake pedal | Stop lamp |
| Fully released | Not illuminated |
| Slightly depressed | Illuminated |

OK or NG

- OK >> GO TO 4.
NG >> GO TO 2.


2. CHECK STOP LAMP SWITCH POWER SUPPLY CIRCUIT

1. Disconnect stop lamp switch (1) harness connector.
 - Brake pedal (2)

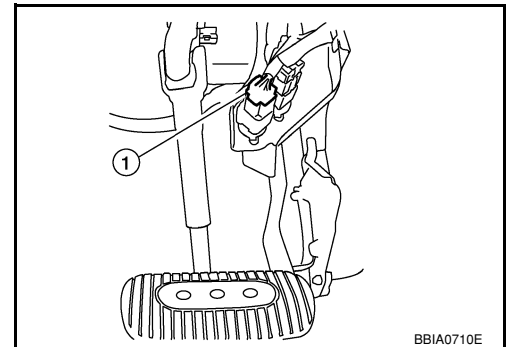

BBIA0710E

2. Check voltage between stop lamp switch terminal 1 and ground with CONSULT-II or tester.

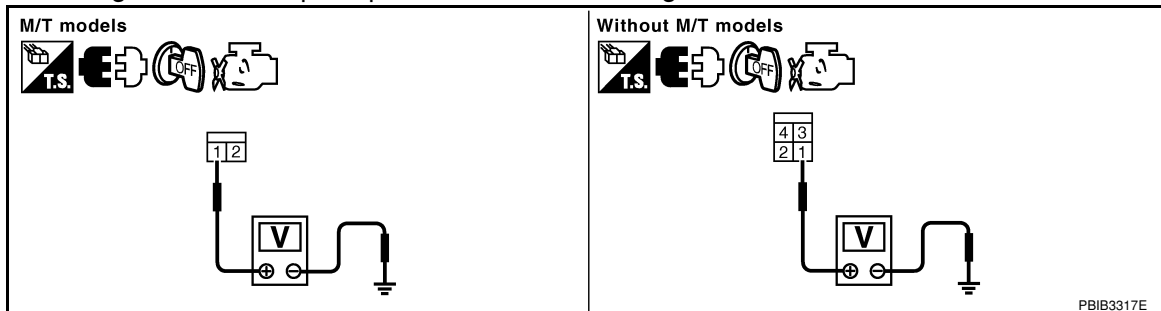

PBIB3317E

Voltage: Battery voltage

OK or NG

- OK >> GO TO 4.
NG >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M69, E7
- 10A fuse
- Harness for open and short between stop lamp switch and battery

DTC P1805 BRAKE SWITCH

< SERVICE INFORMATION >

>> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK STOP LAMP SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Disconnect stop lamp switch (1) harness connector.
2. Disconnect ECM harness connector.
3. Check harness continuity between stop lamp switch terminal 2 and ECM terminal 99.
Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 5.

NG >> Repair open circuit or short to ground or short to power in harness connectors.

5. CHECK STOP LAMP SWITCH

Refer to [EC-455. "Component Inspection"](#).

OK or NG

OK >> GO TO 6.

NG >> Replace stop lamp switch.

6. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).


>> **INSPECTION END**

Component Inspection

INFOID:000000001702984

STOP LAMP SWITCH

1. Turn ignition switch OFF.
2. Disconnect stop lamp switch harness connector.
3. Check continuity between stop lamp switch terminals 1 and 2 under the following conditions.

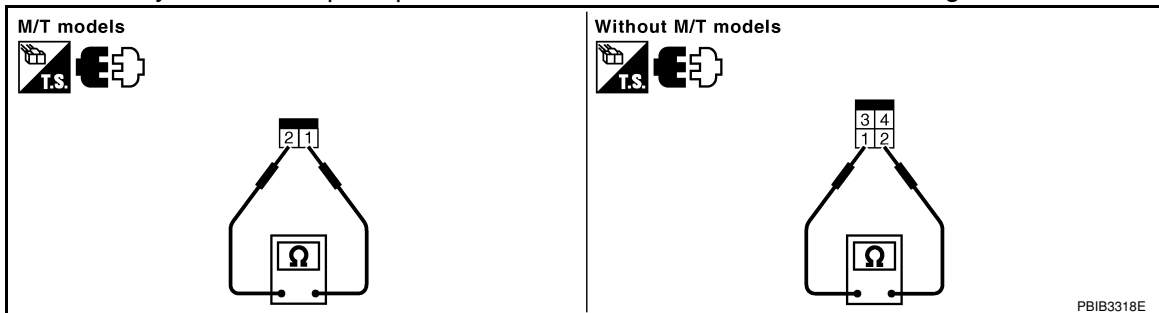

| Condition | Continuity |
|----------------------------------|-------------------|
| Brake pedal: Fully released. | Should not exist. |
| Brake pedal: Slightly depressed. | Should exist. |

If NG, adjust stop lamp switch installation, refer to [BR-5](#), and perform step 3 again.

DTC P2100, P2103 THROTTLE CONTROL MOTOR RELAY

< SERVICE INFORMATION >

DTC P2100, P2103 THROTTLE CONTROL MOTOR RELAY

Component Description

INFOID:000000001702985

Power supply for the throttle control motor is provided to the ECM via throttle control motor relay. The throttle control motor relay is ON/OFF controlled by the ECM. When the ignition switch is turned ON, the ECM sends an ON signal to throttle control motor relay and battery voltage is provided to the ECM. When the ignition switch is turned OFF, the ECM sends an OFF signal to throttle control motor relay and battery voltage is not provided to the ECM.

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001702986

Specification data are reference values.

| MONITOR ITEM | CONDITION | SPECIFICATION |
|--------------|-----------------------|---------------|
| THRTL RELAY | • Ignition switch: ON | ON |

On Board Diagnosis Logic

INFOID:000000001702987

These self-diagnoses have one trip detection logic.

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|--|--|--|
| P2100 2100 | Throttle control motor relay circuit open | ECM detects a voltage of power source for throttle control motor is excessively low. | <ul style="list-style-type: none">• Harness or connectors (Throttle control motor relay circuit is open)• Throttle control motor relay |
| P2103 2103 | Throttle control motor relay circuit short | ECM detects the throttle control motor relay is stuck ON. | <ul style="list-style-type: none">• Harness or connectors (Throttle control motor relay circuit is shorted)• Throttle control motor relay |

FAIL-SAFE MODE

When the malfunction is detected, ECM enters fail-safe mode and the MIL lights up.

Engine operating condition in fail-safe mode

ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring.

DTC Confirmation Procedure

INFOID:000000001702988

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

PROCEDURE FOR DTC P2100

④ With CONSULT-II

1. Turn ignition switch ON and wait at least 2 seconds.
2. Select "DATA MONITOR" mode with CONSULT-II.
3. Start engine and let it idle for 5 seconds.
4. If DTC is detected, go to [EC-459, "Diagnosis Procedure"](#).

| DATA MONITOR | |
|--------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |

SEF058Y

DTC P2100, P2103 THROTTLE CONTROL MOTOR RELAY

< SERVICE INFORMATION >

 With GST

Follow the procedure "With CONSULT-II" above.

PROCEDURE FOR DTC P2103

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10V at idle.

 With CONSULT-II

1. Turn ignition switch ON and wait at least 1 second.
2. Select "DATA MONITOR" mode with CONSULT-II.
3. If DTC is detected, go to [EC-459, "Diagnosis Procedure"](#).

| DATA MONITOR | |
|--------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |

SEF058Y

 With GST

Follow the procedure "With CONSULT-II" above.

A

EC

C

D

E

F

G

H

I

J

K

L

M

N

O

P

DTC P2100, P2103 THROTTLE CONTROL MOTOR RELAY



< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001702989

EC-ETC2-01

— : DETECTABLE LINE FOR DTC
 - - - : NON-DETECTABLE LINE FOR DTC

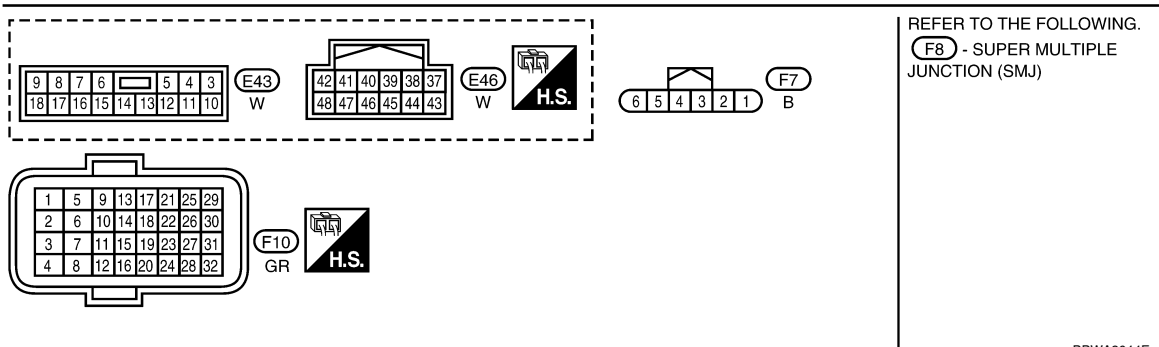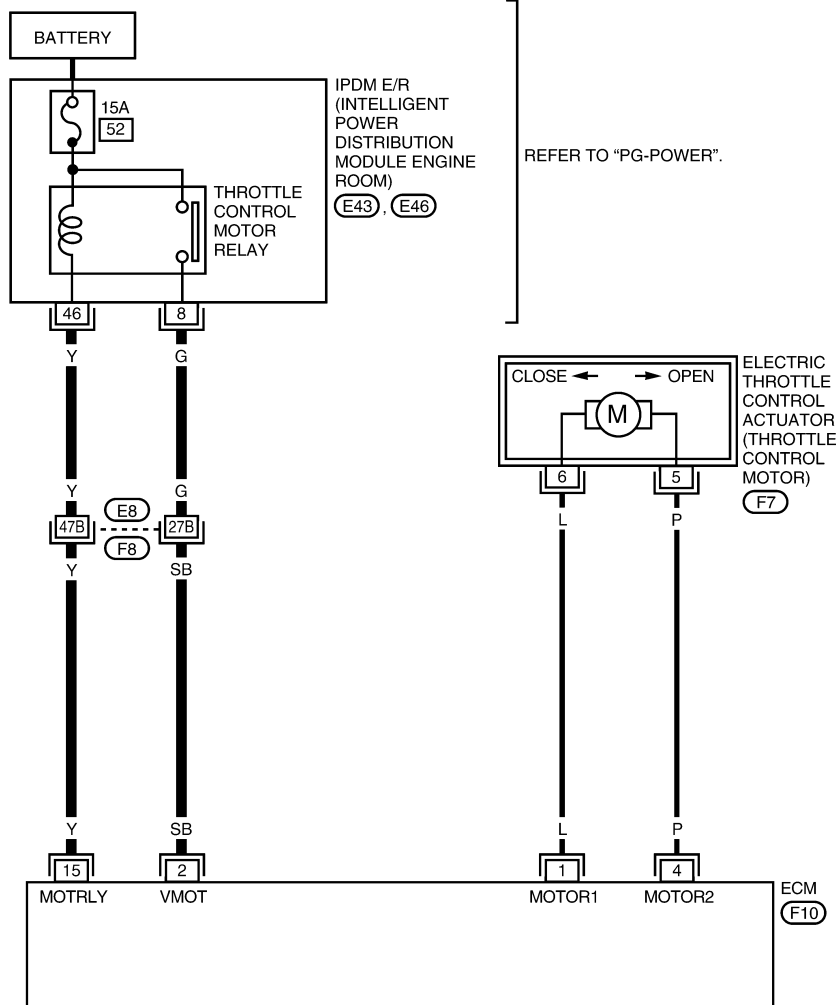

BBWA2644E



Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.

CAUTION:

DTC P2100, P2103 THROTTLE CONTROL MOTOR RELAY

< SERVICE INFORMATION >

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.
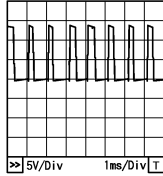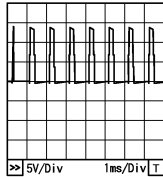
| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------------|---------------|-------------------------------------|--|--|
| 1 | L | Throttle control motor (Open) | [Ignition switch: ON] • Engine stopped • Shift lever: D (A/T, CVT), 1st (M/T) • Accelerator pedal: Fully depressed | Approximately 3.2V★  PBI A8150J |
| 2 | SB | Throttle control motor power supply | [Ignition switch: ON] | BATTERY VOLTAGE (11 - 14V) |
| 4 | P | Throttle control motor (Close) | [Ignition switch: ON] • Engine stopped • Shift lever: D (A/T, CVT), 1st (M/T) • Accelerator pedal: Fully released | Approximately 1.8V★  PBI A8149J |
| 15 | Y | Throttle control motor relay | [Ignition switch: OFF] | BATTERY VOLTAGE (11 - 14V) |
| | | | [Ignition switch: ON] | 0 - 1.0V |

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnosis Procedure

INFOID:000000001702990


1. CHECK THROTTLE CONTROL MOTOR RELAY POWER SUPPLY CIRCUIT-I

- Turn ignition switch OFF.
- Check voltage between ECM terminal 15 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

- OK >> GO TO 5.
NG >> GO TO 2.

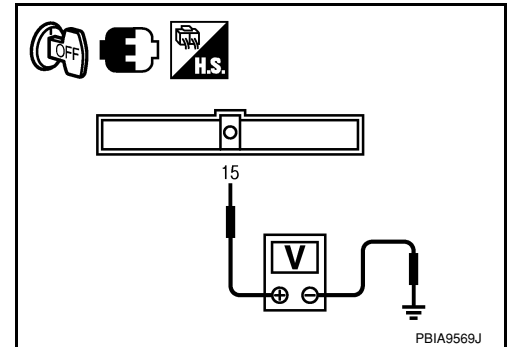

2. CHECK THROTTLE CONTROL MOTOR RELAY POWER SUPPLY CIRCUIT-II

- Disconnect ECM harness connector.
- Disconnect IPDM E/R harness connector E46.
- Check continuity between ECM terminal 15 and IPDM E/R terminal 46. Refer to Wiring Diagram.

Continuity should exist.

- Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 4.
NG >> GO TO 3.

DTC P2100, P2103 THROTTLE CONTROL MOTOR RELAY

< SERVICE INFORMATION >

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness for open or short between ECM and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK FUSE

1. Disconnect 15A fuse.
2. Check 15A fuse for blown.

OK or NG

- OK >> GO TO 8.
NG >> Replace 15A fuse.


5. CHECK THROTTLE CONTROL MOTOR RELAY INPUT SIGNAL CIRCUIT-I

Check voltage between ECM terminal 2 and ground under the following conditions with CONSULT-II or tester.

| Ignition switch | Voltage |
|-----------------|-------------------------------|
| OFF | Approximately 0V |
| ON | Battery voltage (11 - 14V) |

OK or NG

- OK >> GO TO 8.
NG >> GO TO 6.

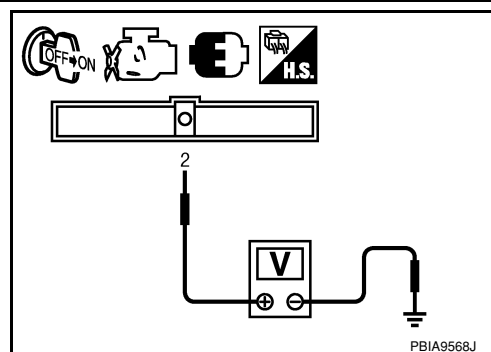

6. CHECK THROTTLE CONTROL MOTOR RELAY INPUT SIGNAL CIRCUIT-II

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Disconnect IPDM E/R harness connector E43.
4. Check continuity between ECM terminal 2 and IPDM E/R terminal 8.
Refer to Wiring Diagram.

Continuity should exist.

5. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 8.
NG >> GO TO 7.

7. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness for open or short between ECM and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

8. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-26. "Removal and Installation of IPDM E/R"](#).
NG >> Repair or replace harness or connectors.

DTC P2101 ELECTRIC THROTTLE CONTROL FUNCTION

< SERVICE INFORMATION >

DTC P2101 ELECTRIC THROTTLE CONTROL FUNCTION

Description

INFOID:000000001702991

NOTE:

If DTC P2101 is displayed with DTC P2100 or P2119, first perform the trouble diagnosis for DTC P2100 or P2119. Refer to [EC-456](#) or [EC-472](#).

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle control motor is operated by the ECM and it opens and closes the throttle valve. The current opening angle of the throttle valve is detected by the throttle position sensor and it provides feedback to the ECM to control the throttle control motor to make the throttle valve opening angle properly in response to driving condition.

On Board Diagnosis Logic

INFOID:000000001702992

This self-diagnosis has the one trip detection logic.

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|---------------------------------------|---|--|
| P2101 2101 | Electric throttle control performance | Electric throttle control function does not operate properly. | <ul style="list-style-type: none">Harness or connectors (Throttle control motor circuit is open or shorted)Electric throttle control actuator |

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MIL lights up.

Engine operating condition in fail-safe mode

ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring.

DTC Confirmation Procedure

INFOID:000000001702993

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11V when engine is running.

④ WITH CONSULT-II

- Turn ignition switch ON and wait at least 2 seconds.
- Select "DATA MONITOR" mode with CONSULT-II.
- Start engine and let it idle for 5 seconds.
- If DTC is detected, go to [EC-463](#). "Diagnosis Procedure".

| DATA MONITOR | |
|--------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |

SEF058Y

④ WITH GST

Follow the procedure "WITH CONSULT-II" above.

DTC P2101 ELECTRIC THROTTLE CONTROL FUNCTION



< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001702994

EC-ETC1-01

— : DETECTABLE LINE FOR DTC
 - - - : NON-DETECTABLE LINE FOR DTC

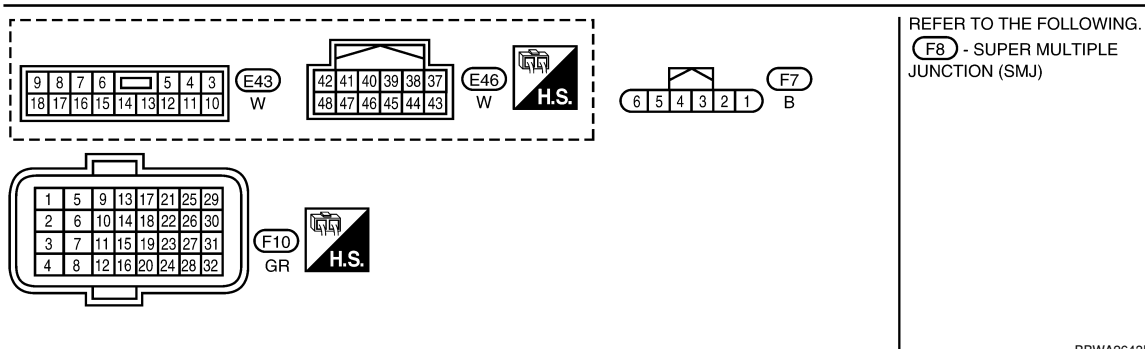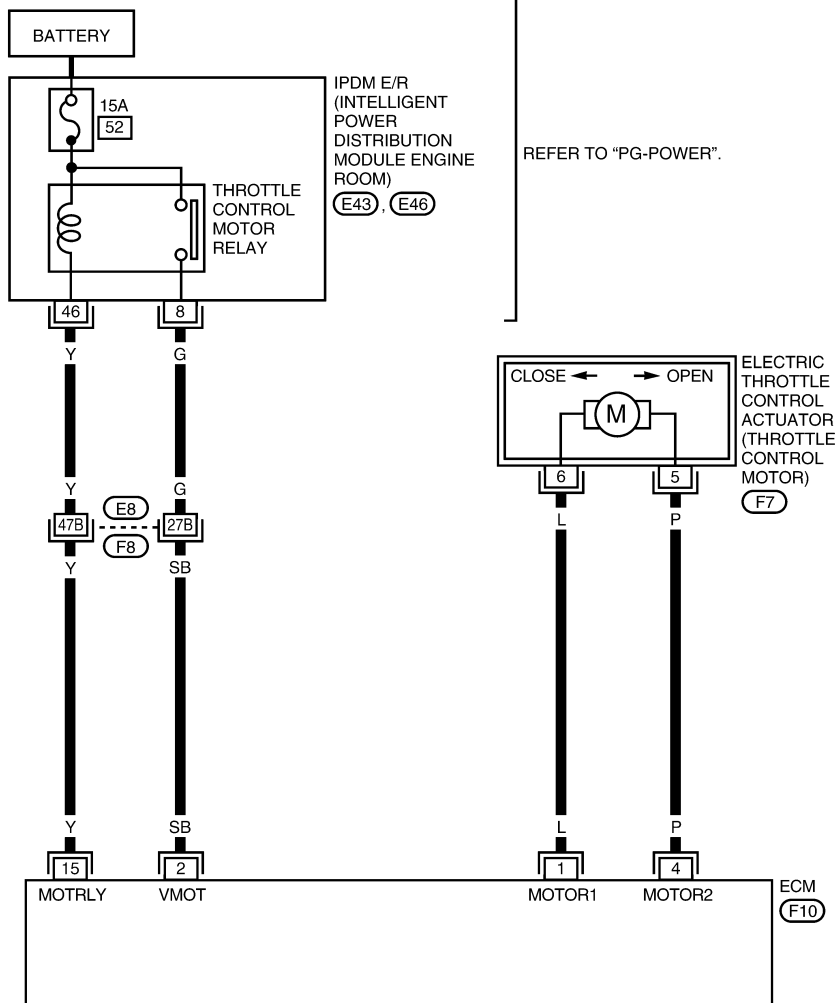

Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.



CAUTION:

BBWA2643E

DTC P2101 ELECTRIC THROTTLE CONTROL FUNCTION

< SERVICE INFORMATION >

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.
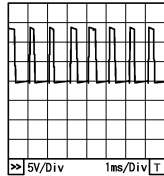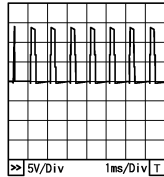
| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------------|---------------|-------------------------------------|--|--|
| 1 | L | Throttle control motor (Open) | [Ignition switch: ON] • Engine stopped • Shift lever: D (A/T, CVT), 1st (M/T) • Accelerator pedal: Fully depressed | Approximately 3.2V★  PBI A8150J |
| 2 | SB | Throttle control motor power supply | [Ignition switch: ON] | BATTERY VOLTAGE (11 - 14V) |
| 4 | P | Throttle control motor (Close) | [Ignition switch: ON] • Engine stopped • Shift lever: D (A/T, CVT), 1st (M/T) • Accelerator pedal: Fully released | Approximately 1.8V★  PBI A8149J |
| 15 | Y | Throttle control motor relay | [Ignition switch: OFF] | BATTERY VOLTAGE (11 - 14V) |
| | | | [Ignition switch: ON] | 0 - 1.0V |


★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnosis Procedure

INFOID:000000001702995

1. CHECK GROUND CONNECTIONS

1. Turn ignition switch OFF.
2. Loosen and retighten ground screw on the body.
Refer to [EC-142, "Ground Inspection"](#).

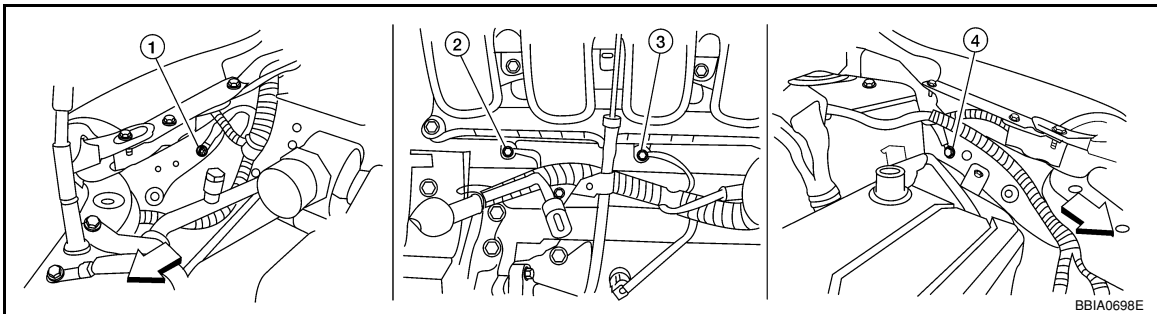

↔: Vehicle front

1. Body ground E24
4. Body ground E15

2. Engine ground F9

3. Engine ground F16

OK or NG

OK >> GO TO 2.

NG >> Repair or replace ground connections.

2. CHECK THROTTLE CONTROL MOTOR RELAY INPUT SIGNAL CIRCUIT-I

DTC P2101 ELECTRIC THROTTLE CONTROL FUNCTION


< SERVICE INFORMATION >

Check voltage between ECM terminal 2 and ground under the following conditions with CONSULT-II or tester.

| Ignition switch | Voltage |
|-----------------|-------------------------------|
| OFF | Approximately 0V |
| ON | Battery voltage (11 - 14V) |

OK or NG

- OK >> GO TO 10.
- NG >> GO TO 3.

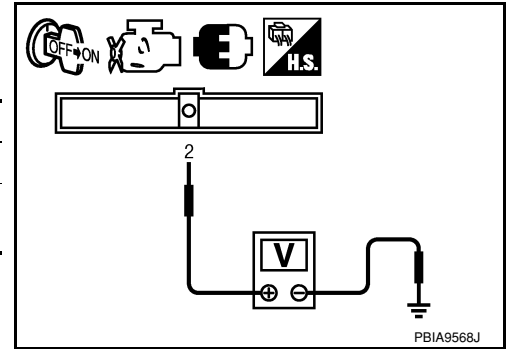

3. CHECK THROTTLE CONTROL MOTOR RELAY INPUT SIGNAL CIRCUIT-II

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Disconnect IPDM E/R harness connector E43.
4. Check continuity between ECM terminal 2 and IPDM E/R terminal 8. Refer to Wiring Diagram.

Continuity should exist.

5. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 5.
- NG >> GO TO 4.

4. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness for open or short between ECM and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.


5. CHECK THROTTLE CONTROL MOTOR RELAY POWER SUPPLY CIRCUIT-I

1. Reconnect all harness connectors disconnected.
2. Check voltage between ECM terminal 15 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

- OK >> GO TO 9.
- NG >> GO TO 6.

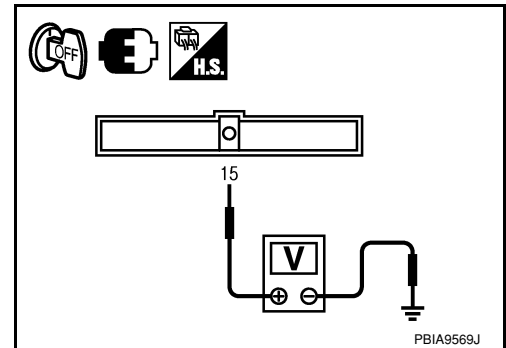

6. CHECK THROTTLE CONTROL MOTOR RELAY POWER SUPPLY CIRCUIT-II

1. Disconnect ECM harness connector.
2. Disconnect IPDM E/R harness connector E46.
3. Check harness continuity between ECM terminal 15 and IPDM E/R terminal 46. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 8.
- NG >> GO TO 7.

DTC P2101 ELECTRIC THROTTLE CONTROL FUNCTION

< SERVICE INFORMATION >

7. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness for open or short between ECM and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

8. CHECK FUSE

1. Disconnect 15A fuse.
2. Check 15A fuse for blown.

OK or NG

- OK >> GO TO 9.
- NG >> Replace 15A fuse.

9. CHECK INTERMITTENT INCIDENT


Refer to [EC-136](#).

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-26. "Removal and Installation of IPDM E/R"](#).
- NG >> Repair or replace harness or connectors.

10. CHECK THROTTLE CONTROL MOTOR OUTPUT SIGNAL CIRCUIT FOR OPEN OR SHORT

1. Turn ignition switch OFF.
2. Disconnect electric throttle control actuator (1) harness connector.
 - ⇨: Vehicle front
3. Disconnect ECM harness connector.
4. Check harness continuity between the following terminals. Refer to Wiring Diagram.

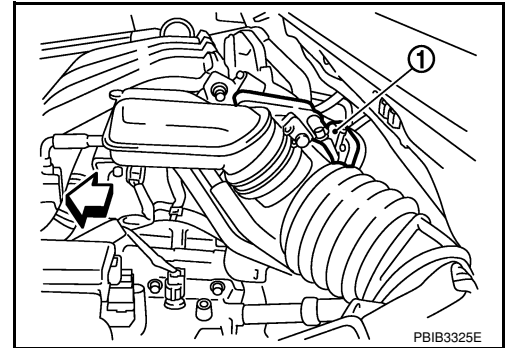

| Electric throttle control actuator terminal | ECM terminal | Continuity |
|---|--------------|-------------------|
| 5 | 1 | Should not exist. |
| | 4 | Should exist. |
| 6 | 1 | Should exist. |
| | 4 | Should not exist. |

5. Also check harness for short to ground and short to power.

OK or NG


- OK >> GO TO 11.
- NG >> Repair or replace.

11. CHECK ELECTRIC THROTTLE CONTROL ACTUATOR VISUALLY

1. Remove the intake air duct.
2. Check if foreign matter is caught between the throttle valve (1) and the housing.
 - ⇨: Vehicle front

OK or NG

- OK >> GO TO 12.
- NG >> Remove the foreign matter and clean the electric throttle control actuator inside.

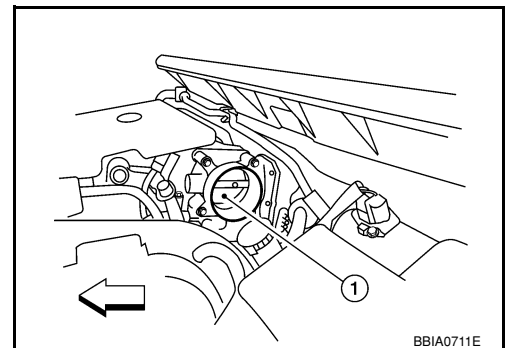

12. CHECK THROTTLE CONTROL MOTOR

DTC P2101 ELECTRIC THROTTLE CONTROL FUNCTION

< SERVICE INFORMATION >

Refer to [EC-466. "Component Inspection"](#).

OK or NG

- OK >> GO TO 13.
- NG >> GO TO 14.

13. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

OK or NG

- OK >> GO TO 14.
- NG >> Repair or replace harness or connectors.

14. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace the electric throttle control actuator.
2. Perform [EC-76. "Throttle Valve Closed Position Learning"](#).
3. Perform [EC-76. "Idle Air Volume Learning"](#).

>> **INSPECTION END**

Component Inspection


INFOID:000000001702996

THROTTLE CONTROL MOTOR

1. Disconnect electric throttle control actuator harness connector.
2. Check resistance between terminals 5 and 6.

Resistance: Approximately 1 - 15 Ω [at 25 °C (77°F)]

3. If NG, replace electric throttle control actuator and go to next step.
4. Perform [EC-76. "Throttle Valve Closed Position Learning"](#).
5. Perform [EC-76. "Idle Air Volume Learning"](#).

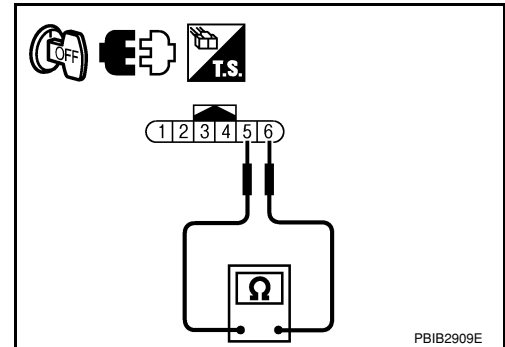

Removal and Installation

INFOID:000000001702997

ELECTRIC THROTTLE CONTROL ACTUATOR

Refer to [EM-18](#).

DTC P2118 THROTTLE CONTROL MOTOR

< SERVICE INFORMATION >

DTC P2118 THROTTLE CONTROL MOTOR

Component Description

INFOID:000000001702998

The throttle control motor is operated by the ECM and it opens and closes the throttle valve. The current opening angle of the throttle valve is detected by the throttle position sensor and it provides feedback to the ECM to control the throttle control motor to make the throttle valve opening angle properly in response to driving condition.

On Board Diagnosis Logic

INFOID:000000001702999

This self-diagnosis has the one trip detection logic.

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|--------------------------------------|--|--|
| P2118 2118 | Throttle control motor circuit short | ECM detects short in both circuits between ECM and throttle control motor. | <ul style="list-style-type: none">• Harness or connectors (Throttle control motor circuit is shorted.)• Electric throttle control actuator (Throttle control motor) |

FAIL-SAFE MODE

When the malfunction is detected, ECM enters fail-safe mode and the MIL lights up.

Engine operating condition in fail-safe mode

ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring.

DTC Confirmation Procedure

INFOID:000000001703000

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

Ⓟ WITH CONSULT-II

1. Turn ignition switch ON and wait at least 2 seconds.
2. Select "DATA MONITOR" mode with CONSULT-II.
3. Start engine and let it idle for 5 seconds.
4. If DTC is detected, go to [EC-469. "Diagnosis Procedure"](#).

| DATA MONITOR | |
|--------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |

SEF058Y

Ⓟ WITH GST

Follow the procedure "WITH CONSULT-II" above.

DTC P2118 THROTTLE CONTROL MOTOR



< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001703001

EC-ETC3-01

— : DETECTABLE LINE FOR DTC
 - - - : NON-DETECTABLE LINE FOR DTC

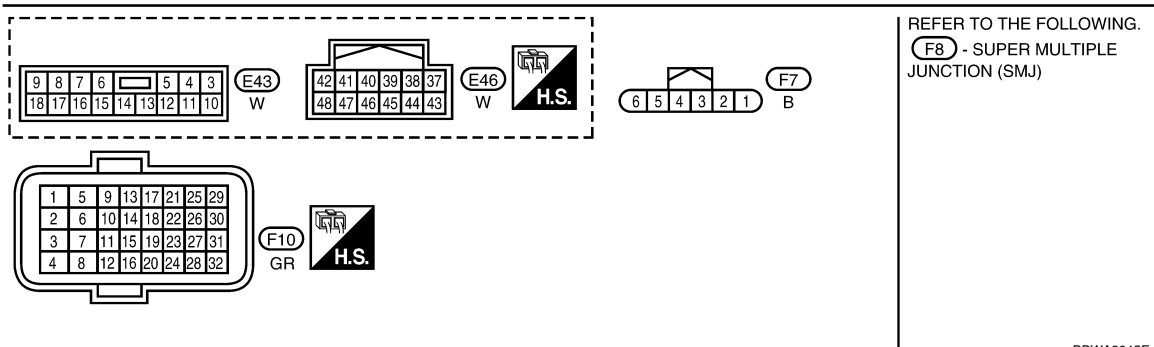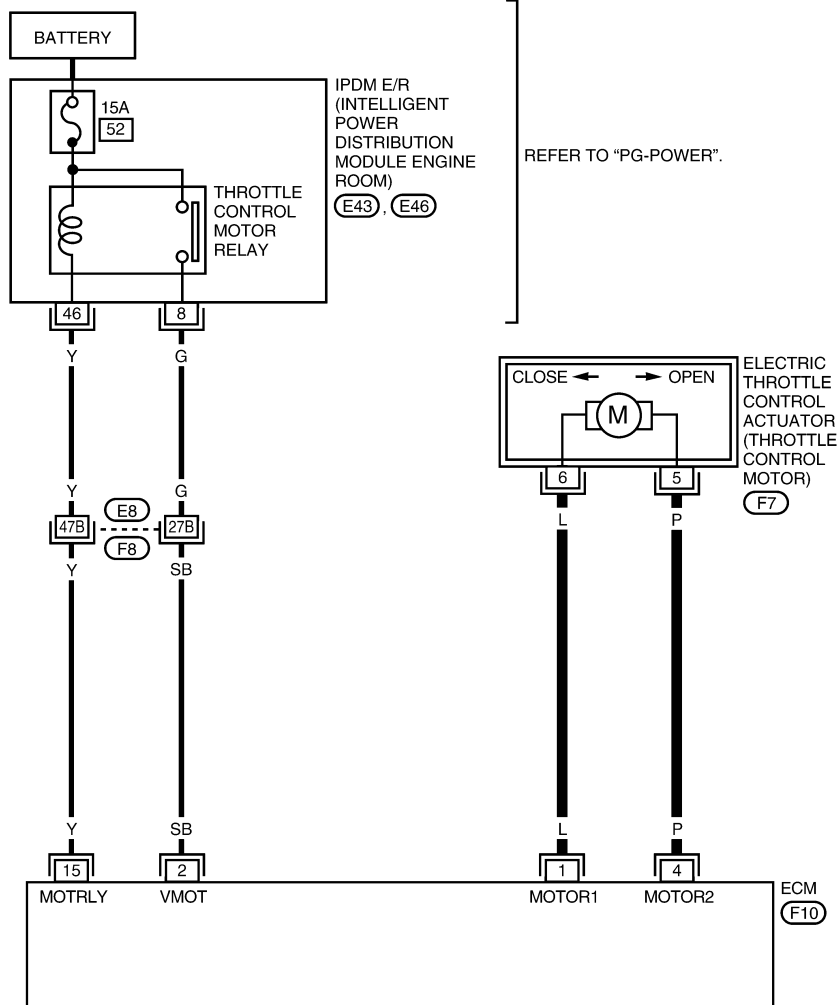

BBWA2645E



Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.

CAUTION:

DTC P2118 THROTTLE CONTROL MOTOR

< SERVICE INFORMATION >

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.
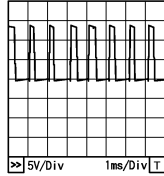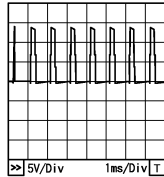
| TERMINAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|--------------|------------|-------------------------------------|---|--|
| 1 | L | Throttle control motor (Open) | [Ignition switch: ON] <ul style="list-style-type: none"> • Engine stopped • Shift lever: D (A/T, CVT), 1st (M/T) • Accelerator pedal: Fully depressed | Approximately 3.2V★  PBI A8150J |
| 2 | SB | Throttle control motor power supply | [Ignition switch: ON] | BATTERY VOLTAGE (11 - 14V) |
| 4 | P | Throttle control motor (Close) | [Ignition switch: ON] <ul style="list-style-type: none"> • Engine stopped • Shift lever: D (A/T, CVT), 1st (M/T) • Accelerator pedal: Fully released | Approximately 1.8V★  PBI A8149J |
| 15 | Y | Throttle control motor relay | [Ignition switch: OFF] | BATTERY VOLTAGE (11 - 14V) |
| | | | [Ignition switch: ON] | 0 - 1.0V |


★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnosis Procedure

INFOID:000000001703002

1. CHECK GROUND CONNECTIONS

1. Turn ignition switch OFF.
2. Loosen and retighten engine screw on the body.
Refer to [EC-142, "Ground Inspection"](#).

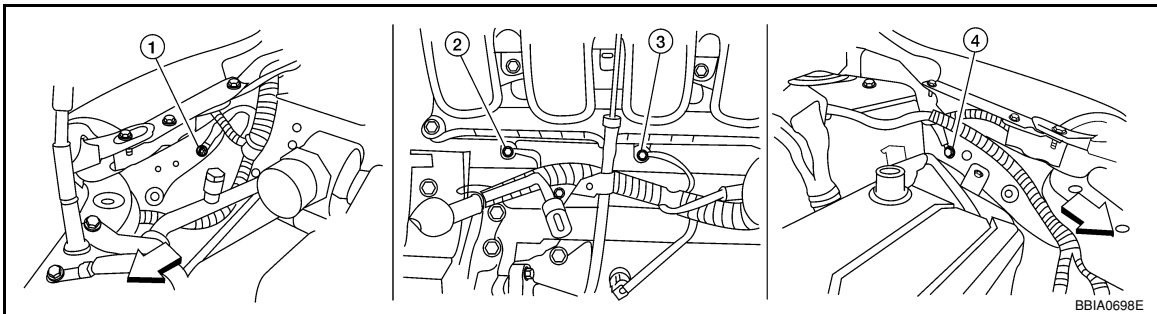

↔: Vehicle front

1. Body ground E24
4. Body ground E15

2. Engine ground F9

3. Engine ground F16

OK or NG


- OK >> GO TO 2.
 NG >> Repair or replace ground connections.

2. CHECK THROTTLE CONTROL MOTOR OUTPUT SIGNAL CIRCUIT FOR OPEN OR SHORT

DTC P2118 THROTTLE CONTROL MOTOR

< SERVICE INFORMATION >

1. Disconnect electric throttle control actuator (1) harness connector.
 - ⇐: Vehicle front
2. Disconnect ECM harness connector.
3. Check harness continuity between the following terminals. Refer to Wiring Diagram.

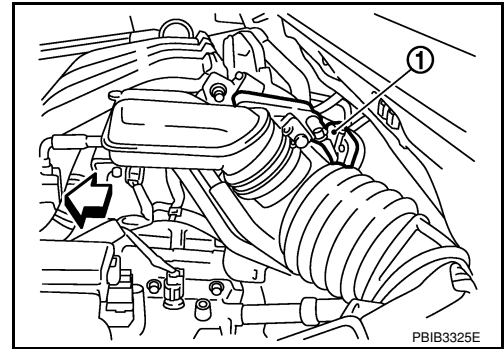

| Electric throttle control actuator terminal | ECM terminal | Continuity |
|---|--------------|-------------------|
| 5 | 1 | Should not exist. |
| | 4 | Should exist. |
| 6 | 1 | Should exist. |
| | 4 | Should not exist. |

4. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 3.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

3. CHECK THROTTLE CONTROL MOTOR

Refer to [EC-470, "Component Inspection"](#).

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 5.

4. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace harness or connectors.

5. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace the electric throttle control actuator.
2. Perform [EC-76, "Throttle Valve Closed Position Learning"](#).
3. Perform [EC-76, "Idle Air Volume Learning"](#).

>> **INSPECTION END**

Component Inspection


INFOID:000000001703003

THROTTLE CONTROL MOTOR

1. Disconnect electric throttle control actuator harness connector.
2. Check resistance between terminals 5 and 6.

Resistance: Approximately 1 - 15 Ω [at 25 °C (77°F)]

3. If NG, replace electric throttle control actuator and go to next step.
4. Perform [EC-76, "Throttle Valve Closed Position Learning"](#).
5. Perform [EC-76, "Idle Air Volume Learning"](#).

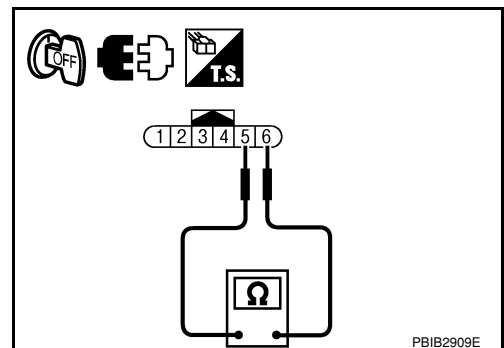

Removal and Installation

INFOID:000000001703004

ELECTRIC THROTTLE CONTROL ACTUATOR

DTC P2118 THROTTLE CONTROL MOTOR

< SERVICE INFORMATION >

Refer to [EM-18](#).

A

EC

C

D

E

F

G

H

I

J

K

L

M

N

O

P

DTC P2119 ELECTRIC THROTTLE CONTROL ACTUATOR

< SERVICE INFORMATION >

DTC P2119 ELECTRIC THROTTLE CONTROL ACTUATOR

Component Description

INFOID:000000001703005

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle control motor is operated by the ECM and it opens and closes the throttle valve. The throttle position sensor detects the throttle valve position, and the opening and closing speed of the throttle valve and feeds the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and the ECM controls the throttle control motor to make the throttle valve opening angle properly in response to driving condition.

On Board Diagnosis Logic

INFOID:000000001703006

This self-diagnosis has the one trip detection logic.

| DTC No. | Trouble diagnosis name | DTC detecting condition | | Possible cause |
|---------------|------------------------------------|-------------------------|---|--------------------------------------|
| P2119 2119 | Electric throttle control actuator | A) | Electric throttle control actuator does not function properly due to the return spring malfunction. | • Electric throttle control actuator |
| | | B) | Throttle valve opening angle in fail-safe mode is not in specified range. | |
| | | C) | ECM detects the throttle valve is stuck open. | |

FAIL-SAFE MODE

When the malfunction is detected, ECM enters fail-safe mode and the MIL lights up.

| Detected items | Engine operating condition in fail-safe mode |
|----------------|---|
| Malfunction A | ECM controls the electric throttle actuator by regulating the throttle opening around the idle position. The engine speed will not rise more than 2,000 rpm. |
| Malfunction B | ECM controls the electric throttle control actuator by regulating the throttle opening to 20 degrees or less. |
| Malfunction C | While the vehicle is driving, it slows down gradually by fuel cut. After the vehicle stops, the engine stalls. The engine can restart in N or P position (A/T, CVT), neutral (M/T), and engine speed will not exceed 1,000 rpm or more. |

DTC Confirmation Procedure

INFOID:000000001703007

NOTE:

- Perform **PROCEDURE FOR MALFUNCTION A AND B** first. If the DTC cannot be confirmed, perform **PROCEDURE FOR MALFUNCTION C**.
- If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

PROCEDURE FOR MALFUNCTION A AND B

④ With CONSULT-II

1. Turn ignition switch ON and wait at least 1 second.
2. Select "DATA MONITOR" mode with CONSULT-II.
3. Set shift lever to D position (A/T, CVT) or 1st position (M/T), and wait at least 3 seconds.
4. Set shift lever to P position (A/T, CVT) or Neutral position (M/T).
5. Turn ignition switch OFF and wait at least 10 seconds.
6. Turn ignition switch ON and wait at least 1 second.
7. Set shift lever to D position (A/T, CVT) or 1st position (M/T), and wait at least 3 seconds.
8. Set shift lever to P position (A/T, CVT) or Neutral position (M/T).
9. Turn ignition switch OFF, wait at least 10 seconds, and then turn ON.

| DATA MONITOR | |
|--------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |

SEF058Y

DTC P2119 ELECTRIC THROTTLE CONTROL ACTUATOR

< SERVICE INFORMATION >

10. If DTC is detected, go to [EC-473. "Diagnosis Procedure"](#).


 With GST

Follow the procedure "With CONSULT-II" above.

PROCEDURE FOR MALFUNCTION C

 With CONSULT-II

1. Turn ignition switch ON and wait at least 1 second.
2. Select "DATA MONITOR" mode with CONSULT-II.
3. Set shift lever to D position (A/T, CVT) or 1st position (M/T) and wait at least 3 seconds.
4. Set shift lever to N, P position (A/T, CVT) or Neutral (M/T) position.
5. Start engine and let it idle for 3 seconds.
6. If DTC is detected, go to [EC-473. "Diagnosis Procedure"](#).

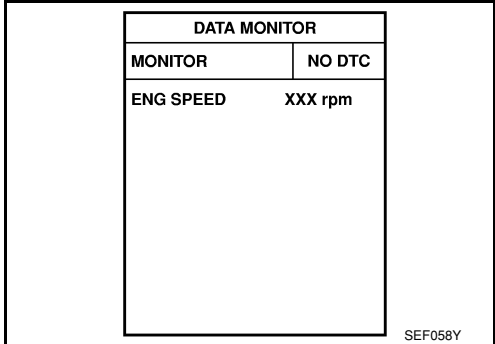

| DATA MONITOR | |
|--------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |

SEF058Y


 With GST

Follow the procedure "With CONSULT-II" above.

Diagnosis Procedure

INFOID:000000001703008


1. CHECK ELECTRIC THROTTLE CONTROL ACTUATOR VISUALLY

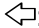1. Turn ignition switch OFF.
2. Remove the intake air duct.
3. Check if a foreign matter is caught between the throttle valve (1) and the housing.
 - : Vehicle front

OK or NG

OK >> GO TO 2.

NG >> Remove the foreign matter and clean the electric throttle control actuator inside.

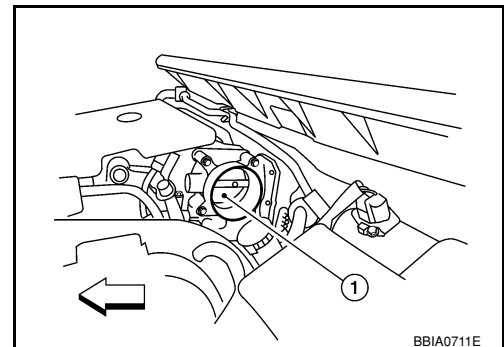

2. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace the electric throttle control actuator.
2. Perform [EC-76. "Throttle Valve Closed Position Learning"](#).
3. Perform [EC-76. "Idle Air Volume Learning"](#).

>> INSPECTION END

DTC P2122, P2123 APP SENSOR

< SERVICE INFORMATION >

DTC P2122, P2123 APP SENSOR


Component Description

INFOID:000000001703009

The accelerator pedal position sensor is installed on the upper end of the accelerator pedal assembly. The sensor detects the accelerator position and sends a signal to the ECM.

Accelerator pedal position sensor has two sensors. These sensors are a kind of potentiometers which transform the accelerator pedal position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the accelerator pedal and feed the voltage signals to the ECM. The ECM judges the current opening angle of the accelerator pedal from these signals and controls the throttle control motor based on these signals.

Idle position of the accelerator pedal is determined by the ECM receiving the signal from the accelerator pedal position sensor. The ECM uses this signal for the engine operation such as fuel cut.

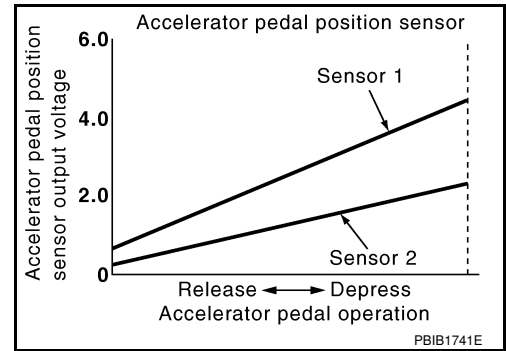

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001703010

Specification data are reference values.

| MONITOR ITEM | CONDITION | | SPECIFICATION |
|--------------|---|---------------------------------------|---------------|
| ACCEL SEN 1 | • Ignition switch: ON (Engine stopped) | Accelerator pedal: Fully released | 0.6 - 0.9V |
| | | Accelerator pedal: Fully depressed | 4.0 - 4.8V |
| ACCEL SEN 2* | • Ignition switch: ON (Engine stopped) | Accelerator pedal: Fully released | 0.6 - 0.9V |
| | | Accelerator pedal: Fully depressed | 3.9 - 4.8V |
| CLSD THL POS | • Ignition switch: ON (Engine stopped) | Accelerator pedal: Fully released | ON |
| | | Accelerator pedal: Slightly depressed | OFF |

*: Accelerator pedal position sensor 2 signal is converted by ECM internally. Thus, it differs from ECM terminal voltage.

On Board Diagnosis Logic

INFOID:000000001703011

These self-diagnoses have the one trip detection logic.

NOTE:

If DTC P2122 or P2123 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to [EC-400](#).

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|--|---|--|
| P2122 2122 | Accelerator pedal position sensor 1 circuit low input | An excessively low voltage from the APP sensor 1 is sent to ECM. | <ul style="list-style-type: none"> • Harness or connectors (APP sensor 1 circuit is open or shorted.) • Accelerator pedal position sensor (APP sensor 1) |
| P2123 2123 | Accelerator pedal position sensor 1 circuit high input | An excessively high voltage from the APP sensor 1 is sent to ECM. | |

FAIL-SAFE MODE

When the malfunction is detected, ECM enters fail-safe mode and the MIL lights up.

Engine operating condition in fail-safe mode

The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees.

The ECM regulates the opening speed of the throttle valve to be slower than the normal condition.

So, the acceleration will be poor.

DTC Confirmation Procedure

INFOID:000000001703012

NOTE:

DTC P2122, P2123 APP SENSOR

< SERVICE INFORMATION >

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8V at idle.

④ WITH CONSULT-II

1. Turn ignition switch ON.
2. Select "DATA MONITOR" mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to [EC-477. "Diagnosis Procedure"](#).

| DATA MONITOR | |
|--------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |

SEF058Y

④ WITH GST

Follow the procedure "WITH CONSULT-II" above.

A

EC

C

D

E

F

G

H

I

J

K

L

M

N

O

P

DTC P2122, P2123 APP SENSOR



< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001703013

EC-APPS1-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

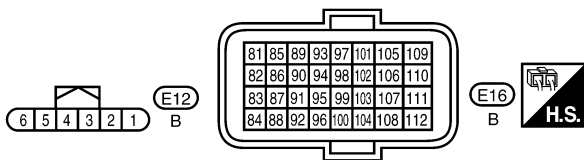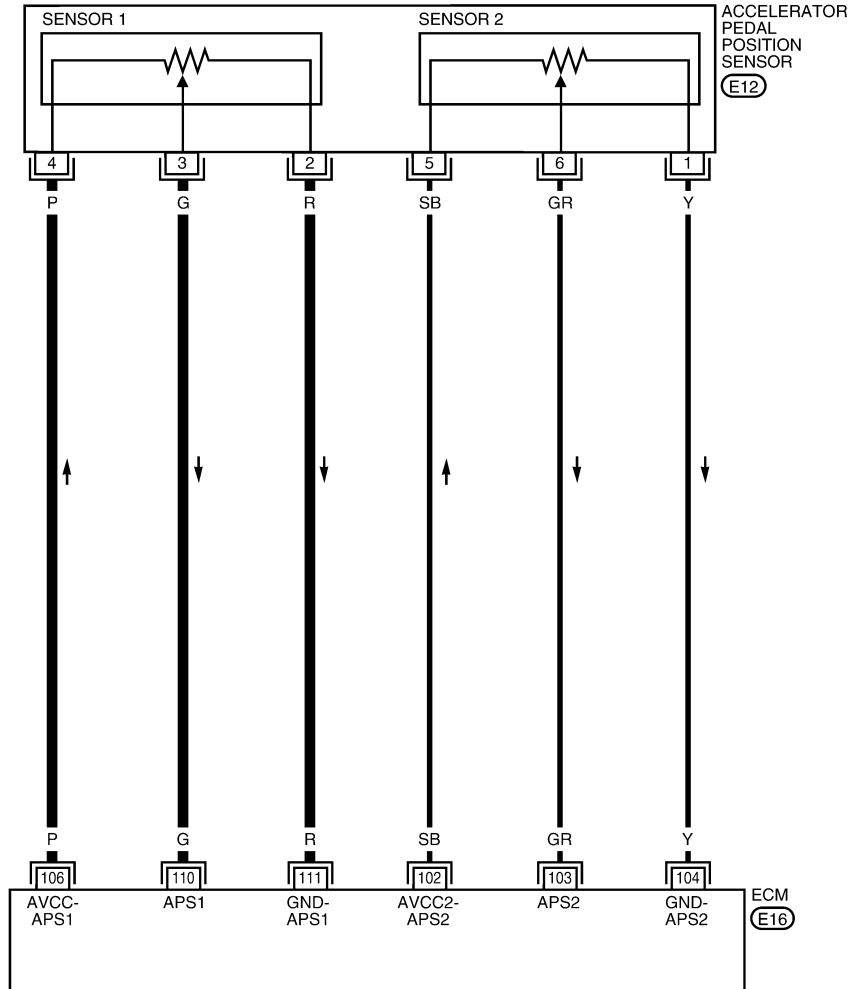

BBWA2652E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

DTC P2122, P2123 APP SENSOR

< SERVICE INFORMATION >


| TER-MI-NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------|------------|-------------------------------------|--|-------------------|
| 102 | SB | Sensor power supply (APP sensor 2) | [Ignition switch: ON] | Approximately 5V |
| 103 | GR | Accelerator pedal position sensor 2 | [Ignition switch: ON] • Engine stopped • Accelerator pedal: Fully released | 0.3 - 0.6V |
| | | | [Ignition switch: ON] • Engine stopped • Accelerator pedal: Fully depressed | 1.95 - 2.4V |
| 104 | Y | Sensor ground (APP sensor 2) | [Engine is running] • Warm-up condition • Idle speed | Approximately 0V |
| 106 | P | Sensor power supply (APP sensor 1) | [Ignition switch: ON] | Approximately 5V |
| 110 | G | Accelerator pedal position sensor 1 | [Ignition switch: ON] • Engine stopped • Accelerator pedal: Fully released | 0.6 - 0.9V |
| | | | [Ignition switch: ON] • Engine stopped • Accelerator pedal: Fully depressed | 3.9 - 4.7V |
| 111 | R | Sensor ground (APP sensor 1) | [Engine is running] • Warm-up condition • Idle speed | Approximately 0V |

Diagnosis Procedure

INFOID:000000001703014

1. CHECK GROUND CONNECTIONS

1. Turn ignition switch OFF.
2. Loosen and retighten ground screw on the body.
Refer to [EC-142, "Ground Inspection"](#).

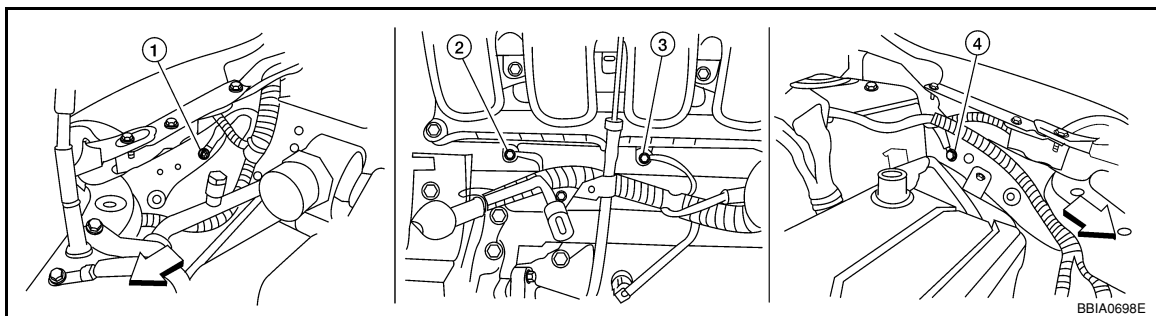

↔: Vehicle front

1. Body ground E24
2. Engine ground F9
3. Engine ground F16
4. Body ground E15

OK or NG


- OK >> GO TO 2.
NG >> Repair or replace ground connections.

2. CHECK APP SENSOR 1 POWER SUPPLY CIRCUIT

DTC P2122, P2123 APP SENSOR

< SERVICE INFORMATION >

1. Disconnect accelerator pedal position (APP) sensor (1) harness connector.
2. Turn ignition switch ON.

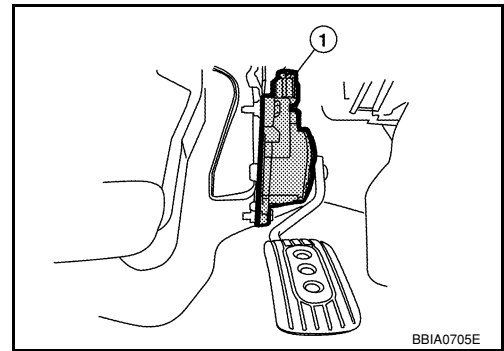


3. Check voltage between APP sensor terminal 4 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

OK or NG

- OK >> GO TO 3.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

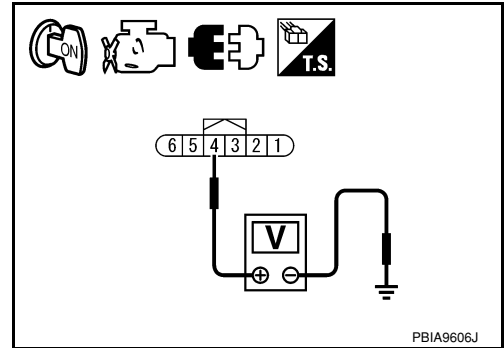

3. CHECK APP SENSOR 1 GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 111 and APP sensor terminal 2. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 4.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK APP SENSOR 1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 110 and APP sensor terminal 3. Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 5.
NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK APP SENSOR

Refer to [EC-479, "Component Inspection"](#).

OK or NG

- OK >> GO TO 7.
NG >> GO TO 6.

6. REPLACE ACCELERATOR PEDAL ASSEMBLY

1. Replace accelerator pedal assembly.
2. Perform [EC-76, "Accelerator Pedal Released Position Learning"](#).
3. Perform [EC-76, "Throttle Valve Closed Position Learning"](#).
4. Perform [EC-76, "Idle Air Volume Learning"](#).

DTC P2122, P2123 APP SENSOR

< SERVICE INFORMATION >

>> INSPECTION END

7. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> INSPECTION END


Component Inspection

INFOID:000000001703015

ACCELERATOR PEDAL POSITION SENSOR

1. Reconnect all harness connectors disconnected.
2. Turn ignition switch ON.
3. Check voltage between ECM terminals 110 (APP sensor 1 signal), 103 (APP sensor 2 signal) and ground under the following conditions.

| Terminal | Accelerator pedal | Voltage |
|--|-------------------|-------------|
| 110 (Accelerator pedal position sensor 1) | Fully released | 0.6 - 0.9V |
| | Fully depressed | 3.9 - 4.7V |
| 103 (Accelerator pedal position sensor 2) | Fully released | 0.3 - 0.6V |
| | Fully depressed | 1.95 - 2.4V |

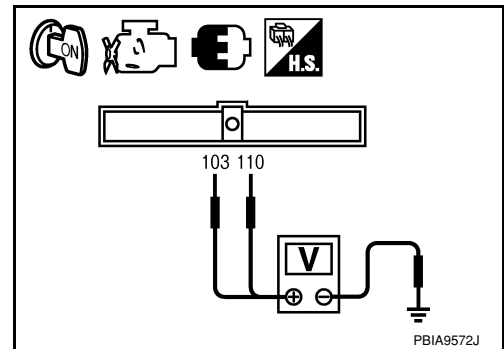

4. If NG, replace accelerator pedal assembly and go to next step.
5. Perform [EC-76. "Accelerator Pedal Released Position Learning"](#).
6. Perform [EC-76. "Throttle Valve Closed Position Learning"](#).
7. Perform [EC-76. "Idle Air Volume Learning"](#).

Removal and Installation

INFOID:000000001703016

ACCELERATOR PEDAL

Refer to [ACC-3](#).

DTC P2127, P2128 APP SENSOR

< SERVICE INFORMATION >

DTC P2127, P2128 APP SENSOR


Component Description

INFOID:000000001703017

The accelerator pedal position sensor is installed on the upper end of the accelerator pedal assembly. The sensor detects the accelerator position and sends a signal to the ECM.

Accelerator pedal position sensor has two sensors. These sensors are a kind of potentiometers which transform the accelerator pedal position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the accelerator pedal and feed the voltage signals to the ECM. The ECM judges the current opening angle of the accelerator pedal from these signals and controls the throttle control motor based on these signals.

Idle position of the accelerator pedal is determined by the ECM receiving the signal from the accelerator pedal position sensor. The ECM uses this signal for the engine operation such as fuel cut.

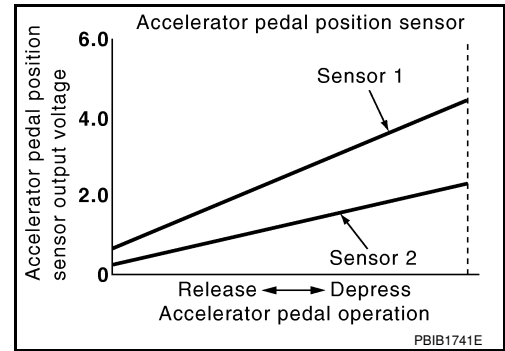

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001703018

Specification data are reference values.

| MONITOR ITEM | CONDITION | | SPECIFICATION |
|--------------|---|---------------------------------------|---------------|
| ACCEL SEN 1 | • Ignition switch: ON (Engine stopped) | Accelerator pedal: Fully released | 0.6 - 0.9V |
| | | Accelerator pedal: Fully depressed | 4.0 - 4.8V |
| ACCEL SEN 2* | • Ignition switch: ON (Engine stopped) | Accelerator pedal: Fully released | 0.6 - 0.9V |
| | | Accelerator pedal: Fully depressed | 3.9 - 4.8V |
| CLSD THL POS | • Ignition switch: ON (Engine stopped) | Accelerator pedal: Fully released | ON |
| | | Accelerator pedal: Slightly depressed | OFF |

*: Accelerator pedal position sensor 2 signal is converted by ECM internally. Thus, it differs from ECM terminal voltage.

On Board Diagnosis Logic

INFOID:000000001703019

These self-diagnoses have the one trip detection logic.

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|--|---|---|
| P2127 2127 | Accelerator pedal position sensor 2 circuit low input | An excessively low voltage from the APP sensor 2 is sent to ECM. | <ul style="list-style-type: none"> • Harness or connectors (APP sensor 2 circuit is open or shorted.) [Crankshaft position sensor (POS) circuit is shorted.] (EVAP control system pressure sensor circuit is shorted.) (Refrigerant pressure sensor circuit is shorted.) • EVAP control system pressure sensor • Accelerator pedal position sensor (APP sensor 2) • Crankshaft position sensor (POS) • Refrigerant pressure sensor |
| P2128 2128 | Accelerator pedal position sensor 2 circuit high input | An excessively high voltage from the APP sensor 2 is sent to ECM. | |

FAIL-SAFE MODE

When the malfunction is detected, ECM enters fail-safe mode and the MIL lights up.

Engine operating condition in fail-safe mode

The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees.

The ECM regulates the opening speed of the throttle valve to be slower than the normal condition.

So, the acceleration will be poor.

DTC P2127, P2128 APP SENSOR

< SERVICE INFORMATION >

DTC Confirmation Procedure

INFOID:000000001703020

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8V at idle.

④ WITH CONSULT-II

1. Turn ignition switch ON.
2. Select "DATA MONITOR" mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to [EC-483. "Diagnosis Procedure"](#).

| DATA MONITOR | |
|--------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |

SEF058Y

④ WITH GST

Follow the procedure "WITH CONSULT-II" above.

DTC P2127, P2128 APP SENSOR



< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001703021

EC-APPS2-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

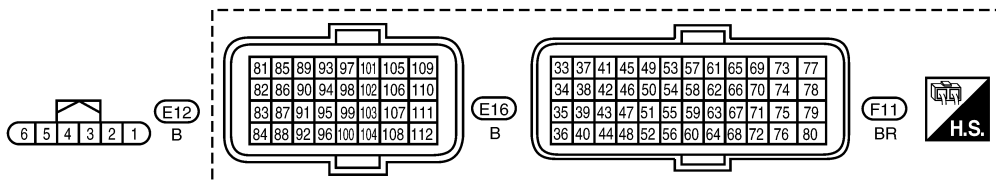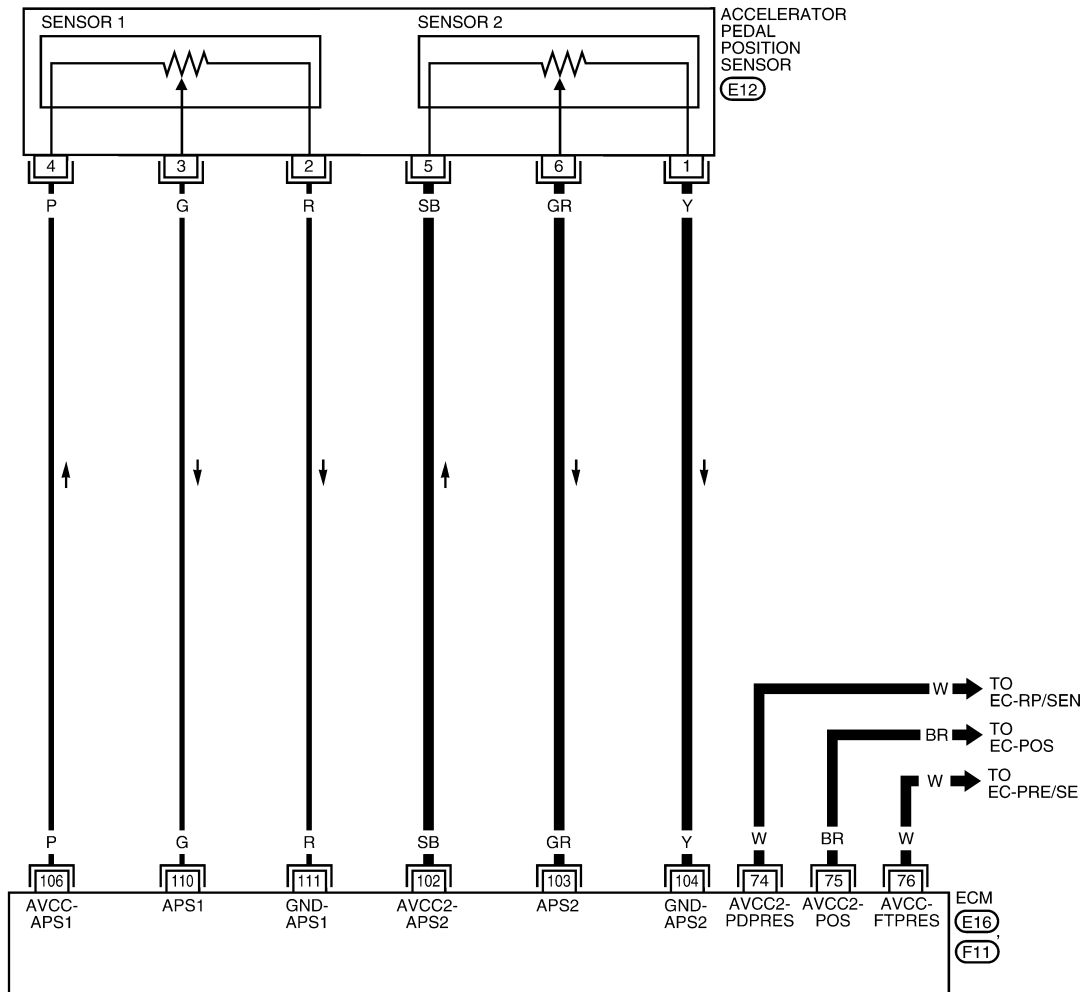

BBWA3074E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

DTC P2127, P2128 APP SENSOR

< SERVICE INFORMATION >


| TER-MI-NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------|------------|--|--|-------------------|
| 74 | W | Sensor power supply (Refrigerant pressure sensor) | [Ignition switch: ON] | Approximately 5V |
| 75 | BR | Sensor power supply [Crankshaft position sensor (POS)] | [Ignition switch: ON] | Approximately 5V |
| 76 | W | EVAP control system pressure sensor power supply | [Ignition switch: ON] | Approximately 5V |
| 102 | SB | Sensor power supply (APP sensor 2) | [Ignition switch: ON] | Approximately 5V |
| 103 | GR | Accelerator pedal position sensor 2 | [Ignition switch: ON] • Engine stopped • Accelerator pedal: Fully released | 0.3 - 0.6V |
| | | | [Ignition switch: ON] • Engine stopped • Accelerator pedal: Fully depressed | 1.95 - 2.4V |
| 104 | Y | Sensor ground (APP sensor 2) | [Engine is running] • Warm-up condition • Idle speed | Approximately 0V |
| 106 | P | Sensor power supply (APP sensor 1) | [Ignition switch: ON] | Approximately 5V |
| 110 | G | Accelerator pedal position sensor 1 | [Ignition switch: ON] • Engine stopped • Accelerator pedal: Fully released | 0.6 - 0.9V |
| | | | [Ignition switch: ON] • Engine stopped • Accelerator pedal: Fully depressed | 3.9 - 4.7V |
| 111 | R | Sensor ground (APP sensor 1) | [Engine is running] • Warm-up condition • Idle speed | Approximately 0V |

Diagnosis Procedure

INFOID:000000001703022

1. CHECK GROUND CONNECTIONS

1. Turn ignition switch OFF.
2. Loosen and retighten ground screws on the body.
Refer to [EC-142. "Ground Inspection"](#).

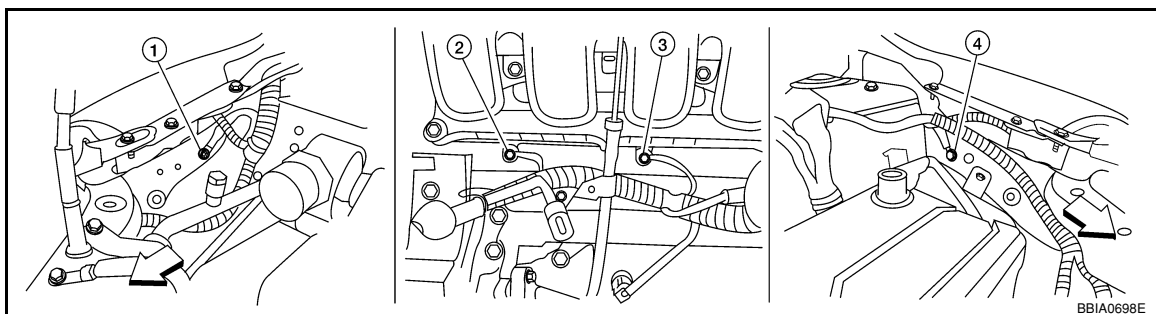

↶ Vehicle front

1. Body ground E24
4. Body ground E15

2. Engine ground F9

3. Engine ground F16

DTC P2127, P2128 APP SENSOR


< SERVICE INFORMATION >

OK or NG

- OK >> GO TO 2.
- NG >> Repair or replace ground connections.

2. CHECK APP SENSOR 2 POWER SUPPLY CIRCUIT-I

1. Disconnect accelerator pedal position (APP) sensor (1) harness connector.
2. Turn ignition switch ON.

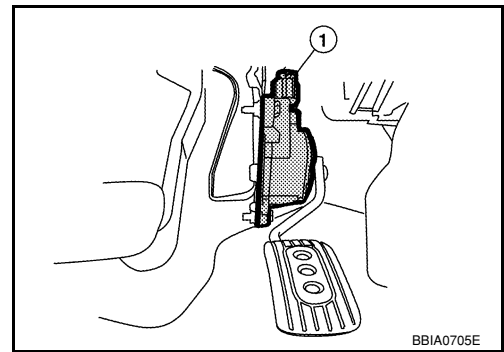


3. Check voltage between APP sensor terminal 5 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

OK or NG

- OK >> GO TO 6.
- NG >> GO TO 3.

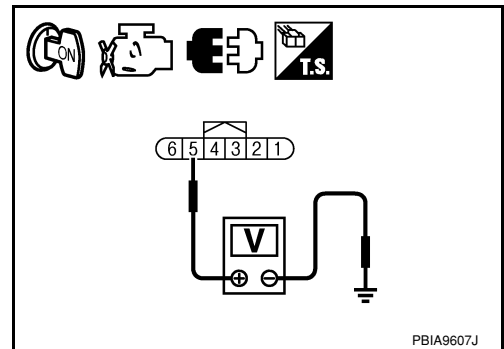

3. CHECK APP SENSOR 2 POWER SUPPLY CIRCUIT-II

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between APP sensor terminal 5 and ECM terminal 102. Refer to Wiring Diagram.

Continuity should exist.

OK or NG

- OK >> GO TO 4.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK COMPONENTS POWER SUPPLY CIRCUIT

Check harness for short to power and short to ground, between the following terminals.

| ECM terminal | Sensor terminal | Reference Wiring Diagram |
|--------------|--|--|
| 74 | Refrigerant pressure sensor terminal 3 | EC-542, "Wiring Diagram" |
| 75 | Crankshaft position sensor (POS) terminal 1 | EC-297, "Wiring Diagram" |
| 76 | EVAP control system pressure sensor terminal 3 | EC-357, "Wiring Diagram" |
| 102 | APP sensor terminal 5 | EC-482, "Wiring Diagram" |

OK or NG

- OK >> GO TO 5.
- NG >> Repair short to ground or short to power in harness or connectors.

5. CHECK COMPONENTS

Check the following.

- Crankshaft position sensor (POS) (Refer to [EC-301, "Component Inspection"](#).)
- EVAP control system pressure sensor (Refer to [EC-353, "Component Inspection"](#).)

DTC P2127, P2128 APP SENSOR

< SERVICE INFORMATION >

- Refrigerant pressure sensor (Refer to [MTC-22](#).)

OK or NG

- OK >> GO TO 10.
- NG >> Replace malfunctioning component.

6. CHECK APP SENSOR 2 GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 104 and APP sensor terminal 1.
Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 7.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

7. CHECK APP SENSOR 2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between ECM terminal 103 and APP sensor terminal 6.
Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 8.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

8. CHECK APP SENSOR

Refer to [EC-485](#). "[Component Inspection](#)".

OK or NG

- OK >> GO TO 10.
- NG >> GO TO 9.

9. REPLACE ACCELERATOR PEDAL ASSEMBLY

1. Replace accelerator pedal assembly.
2. Perform [EC-76](#). "[Accelerator Pedal Released Position Learning](#)".
3. Perform [EC-76](#). "[Throttle Valve Closed Position Learning](#)".
4. Perform [EC-76](#). "[Idle Air Volume Learning](#)".

>> **INSPECTION END**

10. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**

Component Inspection

INFOID:000000001703023

ACCELERATOR PEDAL POSITION SENSOR


1. Reconnect all harness connectors disconnected.
2. Turn ignition switch ON.

DTC P2127, P2128 APP SENSOR

< SERVICE INFORMATION >

3. Check voltage between ECM terminals 110 (APP sensor 1 signal), 103 (APP sensor 2 signal) and ground under the following conditions.

| Terminal | Accelerator pedal | Voltage |
|--|-------------------|-------------|
| 110 (Accelerator pedal position sensor 1) | Fully released | 0.6 - 0.9V |
| | Fully depressed | 3.9 - 4.7V |
| 103 (Accelerator pedal position sensor 2) | Fully released | 0.3 - 0.6V |
| | Fully depressed | 1.95 - 2.4V |

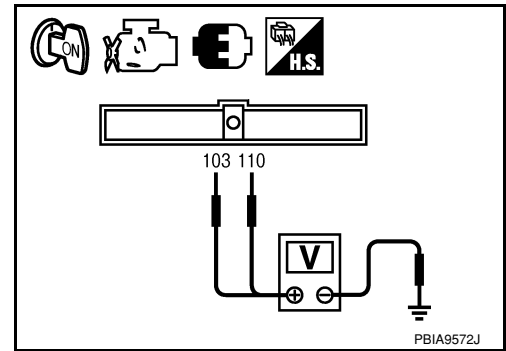

4. If NG, replace accelerator pedal assembly and go to next step.
5. Perform [EC-76. "Accelerator Pedal Released Position Learning"](#).
6. Perform [EC-76. "Throttle Valve Closed Position Learning"](#).
7. Perform [EC-76. "Idle Air Volume Learning"](#).

Removal and Installation

INFOID:000000001703024

ACCELERATOR PEDAL

Refer to [ACC-3](#).

DTC P2135 TP SENSOR

< SERVICE INFORMATION >


DTC P2135 TP SENSOR

Component Description

INFOID:000000001703025

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.

The throttle position sensor has two sensors. These sensors are a kind of potentiometers which transform the throttle valve position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the throttle valve and feed the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and the ECM controls the throttle control motor to make the throttle valve opening angle properly in response to driving condition.

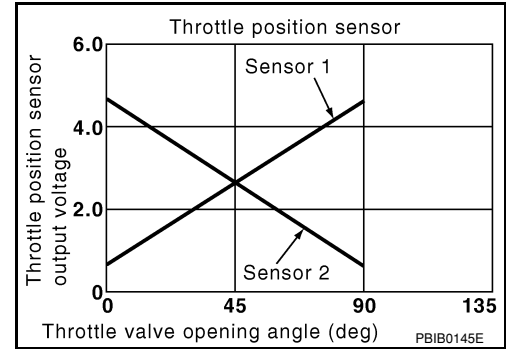

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001703026

Specification data are reference values.

| MONITOR ITEM | CONDITION | SPECIFICATION |
|-----------------------------|--|-----------------|
| THRTL SEN 1 THRTL SEN 2* | • Ignition switch: ON (Engine stopped) Accelerator pedal: Fully released | More than 0.36V |
| | • Shift lever: D (A/T, CVT), 1st (M/T) Accelerator pedal: Fully depressed | Less than 4.75V |

*: Throttle position sensor 2 signal is converted by ECM internally. Thus, it differs from ECM terminal voltage signal.

On Board Diagnosis Logic

INFOID:000000001703027

This self-diagnosis has the one trip detection logic.

NOTE:

If DTC P2135 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643.

Refer to [EC-400](#).

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|--|---|--|
| P2135 2135 | Throttle position sensor circuit range/performance | Rationally incorrect voltage is sent to ECM compared with the signals from TP sensor 1 and TP sensor 2. | <ul style="list-style-type: none"> Harness or connector (TP sensor 1 and 2 circuit is open or shorted.) Electric throttle control actuator (TP sensor 1 and 2) |

FAIL-SAFE MODE

When the malfunction is detected, the ECM enters fail-safe mode and the MIL lights up.

Engine operation condition in fail-safe mode

The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees.

The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor.

DTC Confirmation Procedure

INFOID:000000001703028

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8V at idle.

④ WITH CONSULT-II

1. Turn ignition switch ON.

DTC P2135 TP SENSOR

< SERVICE INFORMATION >

2. Select "DATA MONITOR" mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to [EC-490. "Diagnosis Procedure"](#).

| DATA MONITOR | |
|--------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |

SEF058Y

WITH GST

Follow the procedure "WITH CONSULT-II" above.

DTC P2135 TP SENSOR



< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001703029

EC-TPS3-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

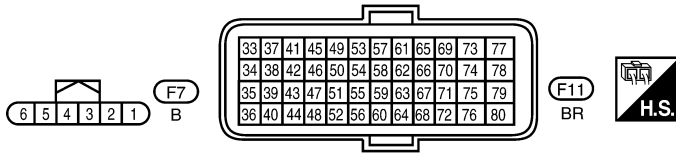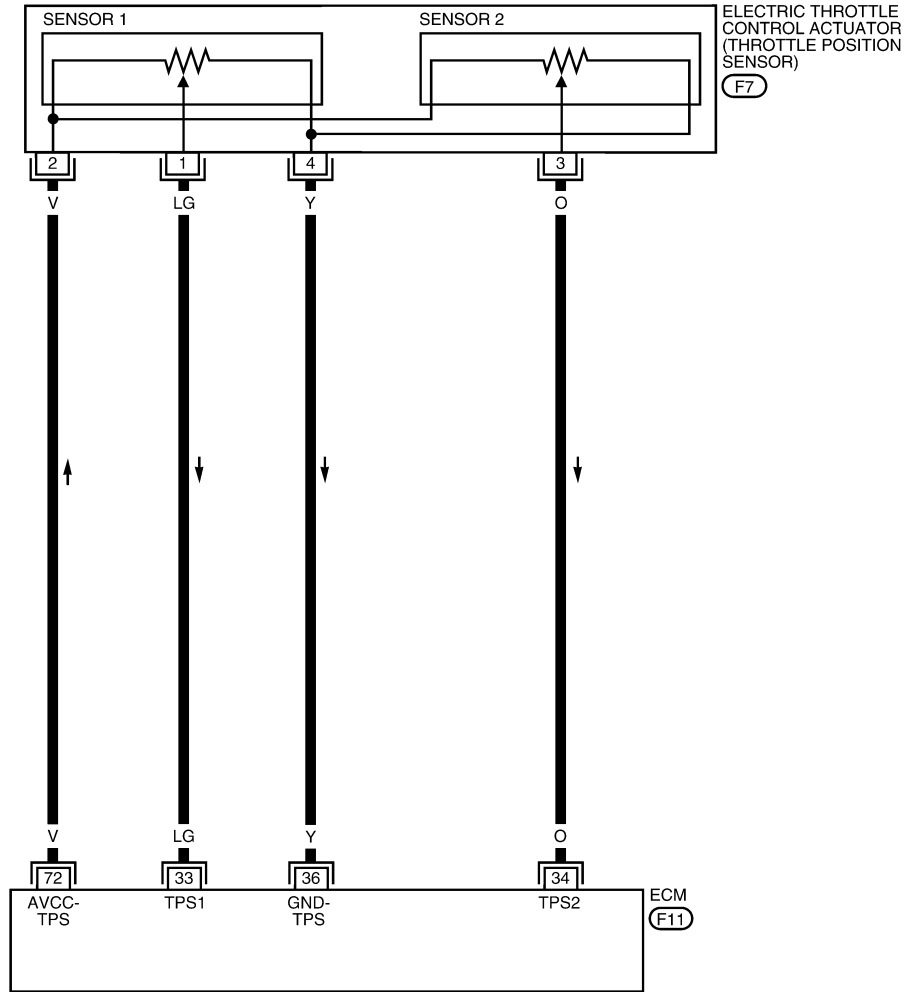

BBWA2657E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

DTC P2135 TP SENSOR

< SERVICE INFORMATION >


| TER-MI-NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------|------------|--|--|-------------------|
| 33 | LG | Throttle position sensor 1 | [Ignition switch: ON] • Engine stopped • Shift lever: D (A/T, CVT), 1st (M/T) • Accelerator pedal: Fully released | More than 0.36V |
| | | | [Ignition switch: ON] • Engine stopped • Shift lever: D (A/T, CVT), 1st (M/T) • Accelerator pedal: Fully depressed | Less than 4.75V |
| 34 | O | Throttle position sensor 2 | [Ignition switch: ON] • Engine stopped • Shift lever: D (A/T, CVT), 1st (M/T) • Accelerator pedal: Fully released | Less than 4.75V |
| | | | [Ignition switch: ON] • Engine stopped • Shift lever: D (A/T, CVT), 1st (M/T) • Accelerator pedal: Fully depressed | More than 0.36V |
| 36 | Y | Sensor ground (Throttle position sensor) | [Engine is running] • Warm-up condition • Idle speed | Approximately 0V |
| 72 | V | Sensor power supply (Throttle position sensor) | [Ignition switch: ON] | Approximately 5V |

Diagnosis Procedure

INFOID:000000001703030

1. CHECK GROUND CONNECTIONS

1. Turn ignition switch OFF.
2. Loosen and retighten ground screw on the body.
Refer to [EC-142. "Ground Inspection"](#).

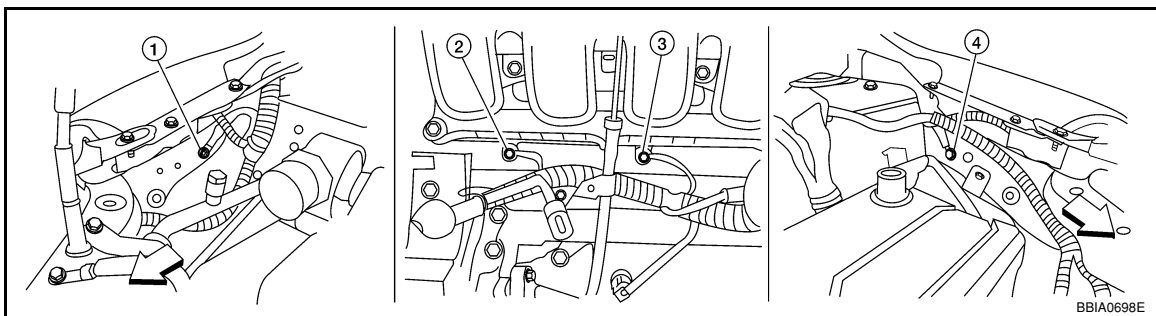

↙ Vehicle front

1. Body ground E24
4. Body ground E15

2. Engine ground F9

3. Engine ground F16

OK or NG

OK >> GO TO 2.


NG >> Repair or replace ground connections.

2. CHECK THROTTLE POSITION SENSOR POWER SUPPLY CIRCUIT

DTC P2135 TP SENSOR

< SERVICE INFORMATION >

1. Disconnect electric throttle control actuator (1) harness connector.
 - ⇐: Vehicle front
2. Turn ignition switch ON.

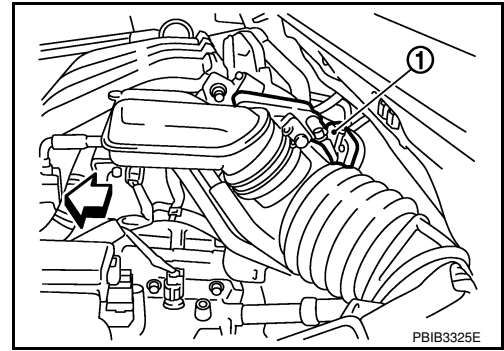


3. Check voltage between electric throttle control actuator terminal 2 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

OK or NG

- OK >> GO TO 3.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

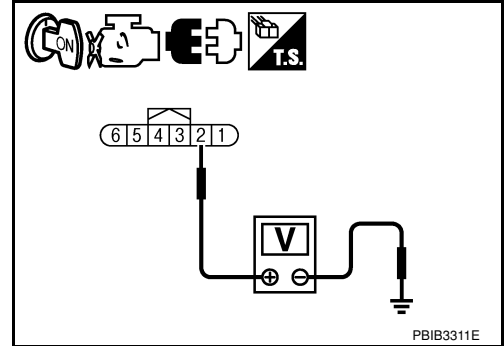

3. CHECK THROTTLE POSITION SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between electric throttle control actuator terminal 4 and ECM terminal 36. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 4.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK THROTTLE POSITION SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between the following;
 - electric throttle control actuator terminal 1 and ECM terminal 33,
 - electric throttle control actuator terminal 3 and ECM terminal 34.Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 5.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK THROTTLE POSITION SENSOR

Refer to [EC-492, "Component Inspection"](#).

OK or NG

- OK >> GO TO 7.
- NG >> GO TO 6.

6. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace the electric throttle control actuator.
2. Perform [EC-76, "Throttle Valve Closed Position Learning"](#).

DTC P2135 TP SENSOR

< SERVICE INFORMATION >

3. Perform [EC-76. "Idle Air Volume Learning"](#).

>> **INSPECTION END**

7. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**


Component Inspection

INFOID:000000001703031

THROTTLE POSITION SENSOR

1. Reconnect all harness connectors disconnected.
2. Perform [EC-76. "Throttle Valve Closed Position Learning"](#).
3. Turn ignition switch ON.
4. Set shift lever to D position (A/T, CVT) or 1st position (M/T).
5. Check voltage between ECM terminals 33 (TP sensor 1 signal), 34 (TP sensor 2 signal) and ground under the following conditions.

| Terminal | Accelerator pedal | Voltage |
|------------------------------------|-------------------|-----------------|
| 33 (Throttle position sensor 1) | Fully released | More than 0.36V |
| | Fully depressed | Less than 4.75V |
| 34 (Throttle position sensor 2) | Fully released | Less than 4.75V |
| | Fully depressed | More than 0.36V |

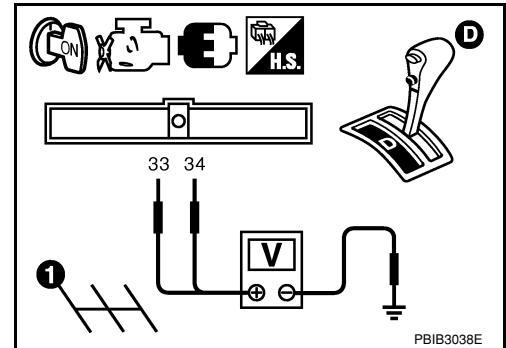

6. If NG, replace electric throttle control actuator and go to the next step.
7. Perform [EC-76. "Throttle Valve Closed Position Learning"](#).
8. Perform [EC-76. "Idle Air Volume Learning"](#).

Removal and Installation

INFOID:000000001703032

ELECTRIC THROTTLE CONTROL ACTUATOR

Refer to [EM-18](#).

DTC P2138 APP SENSOR

< SERVICE INFORMATION >

DTC P2138 APP SENSOR


Component Description

INFOID:000000001703033

The accelerator pedal position sensor is installed on the upper end of the accelerator pedal assembly. The sensor detects the accelerator position and sends a signal to the ECM.

Accelerator pedal position sensor has two sensors. These sensors are a kind of potentiometers which transform the accelerator pedal position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the accelerator pedal and feed the voltage signals to the ECM. The ECM judges the current opening angle of the accelerator pedal from these signals and controls the throttle control motor based on these signals.

Idle position of the accelerator pedal is determined by the ECM receiving the signal from the accelerator pedal position sensor. The ECM uses this signal for the engine operation such as fuel cut.

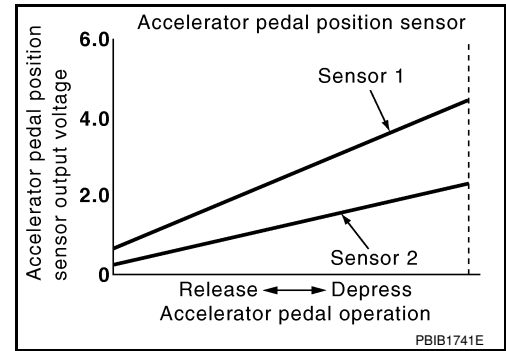

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001703034

Specification data are reference values.

| MONITOR ITEM | CONDITION | | SPECIFICATION |
|--------------|---|---------------------------------------|---------------|
| ACCEL SEN 1 | • Ignition switch: ON (Engine stopped) | Accelerator pedal: Fully released | 0.6 - 0.9V |
| | | Accelerator pedal: Fully depressed | 4.0 - 4.8V |
| ACCEL SEN 2* | • Ignition switch: ON (Engine stopped) | Accelerator pedal: Fully released | 0.6 - 0.9V |
| | | Accelerator pedal: Fully depressed | 3.9 - 4.8V |
| CLSD THL POS | • Ignition switch: ON (Engine stopped) | Accelerator pedal: Fully released | ON |
| | | Accelerator pedal: Slightly depressed | OFF |

*: Accelerator pedal position sensor 2 signal is converted by ECM internally. Thus, it differs from ECM terminal voltage.

On Board Diagnosis Logic

INFOID:000000001703035

This self-diagnosis has the one trip detection logic.

NOTE:

If DTC P2138 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643.

Refer to [EC-400](#).

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------------|---|---|--|
| P2138 2138 | Accelerator pedal position sensor circuit range/performance | Rationally incorrect voltage is sent to ECM compared with the signals from APP sensor 1 and APP sensor 2. | <ul style="list-style-type: none"> • Harness or connector (APP sensor 1 and 2 circuit is open or shorted.) [Crankshaft position sensor (POS) circuit is shorted.] (EVAP control system pressure sensor circuit is shorted.) (Refrigerant pressure sensor circuit is shorted.) • Accelerator pedal position sensor (APP sensor 1 and 2) • Crankshaft position sensor (POS) • EVAP control system pressure sensor • Refrigerant pressure sensor |

FAIL-SAFE MODE

When the malfunction is detected, ECM enters fail-safe mode and the MIL lights up.

DTC P2138 APP SENSOR

< SERVICE INFORMATION >

Engine operating condition in fail-safe mode

The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees.

The ECM regulates the opening speed of the throttle valve to be slower than the normal condition.

So, the acceleration will be poor.

DTC Confirmation Procedure

INFOID:000000001703036

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8V at idle.

Ⓟ WITH CONSULT-II

1. Turn ignition switch ON.
2. Select "DATA MONITOR" mode with CONSULT-II.
3. Start engine and let it idle for 1 second.
4. If DTC is detected, go to [EC-496, "Diagnosis Procedure"](#).

| DATA MONITOR | |
|--------------|---------|
| MONITOR | NO DTC |
| ENG SPEED | XXX rpm |

SEF058Y

Ⓟ WITH GST

Follow the procedure "WITH CONSULT-II" above.

DTC P2138 APP SENSOR



< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001703037

EC-APPS3-01

— : DETECTABLE LINE FOR DTC
 - - - : NON-DETECTABLE LINE FOR DTC

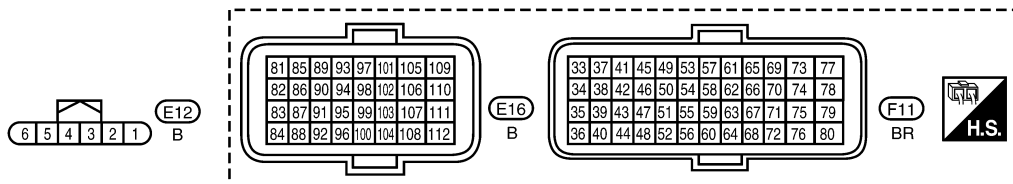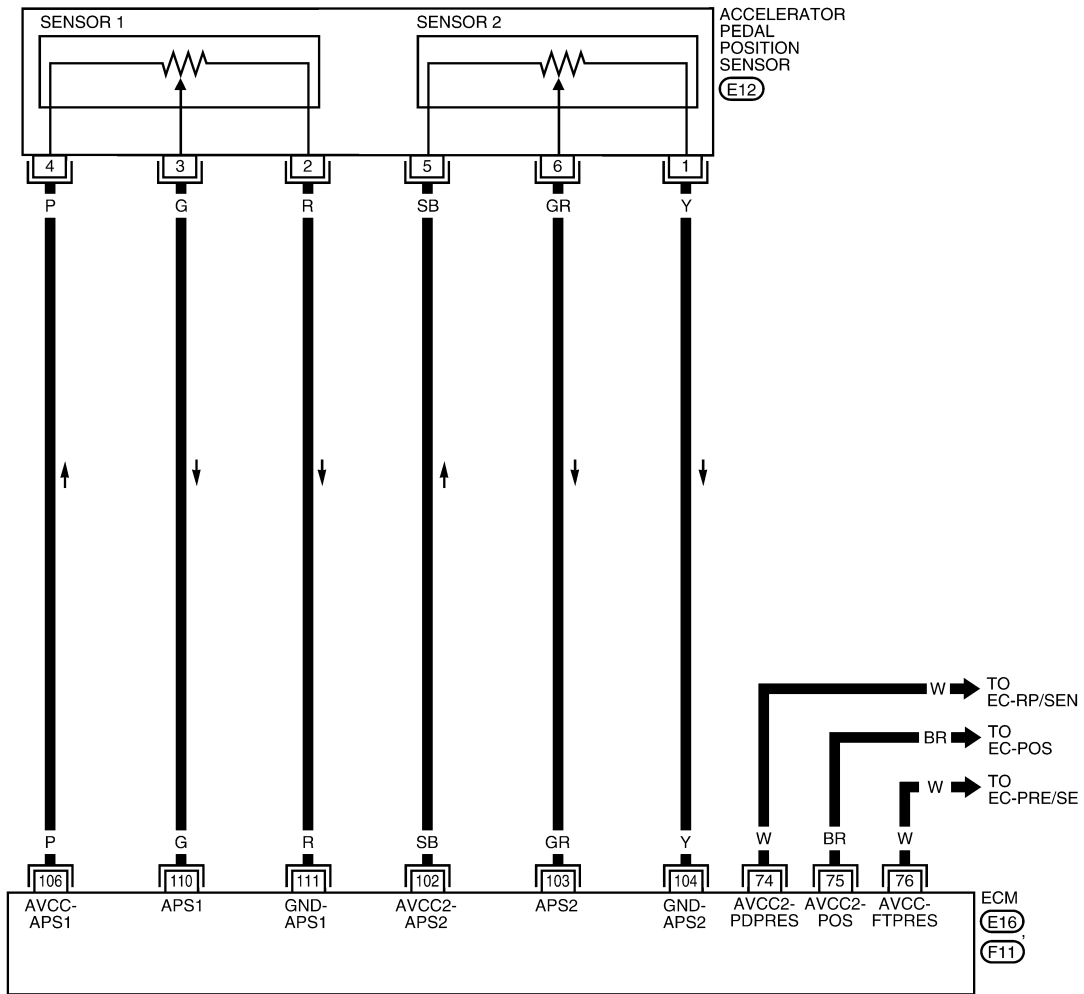

BBWA3075E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

DTC P2138 APP SENSOR

< SERVICE INFORMATION >


| TER-MI-NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------|------------|--|--|-------------------|
| 74 | W | Sensor power supply (Refrigerant pressure sensor) | [Ignition switch: ON] | Approximately 5V |
| 75 | BR | Sensor power supply [Crankshaft position sensor (POS)] | [Ignition switch: ON] | Approximately 5V |
| 76 | W | EVAP control system pressure sensor power supply | [Ignition switch: ON] | Approximately 5V |
| 102 | SB | Sensor power supply (APP sensor 2) | [Ignition switch: ON] | Approximately 5V |
| 103 | GR | Accelerator pedal position sensor 2 | [Ignition switch: ON] • Engine stopped • Accelerator pedal: Fully released | 0.3 - 0.6V |
| | | | [Ignition switch: ON] • Engine stopped • Accelerator pedal: Fully depressed | 1.95 - 2.4V |
| 104 | Y | Sensor ground (APP sensor 2) | [Engine is running] • Warm-up condition • Idle speed | Approximately 0V |
| 106 | P | Sensor power supply (APP sensor 1) | [Ignition switch: ON] | Approximately 5V |
| 110 | G | Accelerator pedal position sensor 1 | [Ignition switch: ON] • Engine stopped • Accelerator pedal: Fully released | 0.6 - 0.9V |
| | | | [Ignition switch: ON] • Engine stopped • Accelerator pedal: Fully depressed | 3.9 - 4.7V |
| 111 | R | Sensor ground (APP sensor 1) | [Engine is running] • Warm-up condition • Idle speed | Approximately 0V |

Diagnosis Procedure

INFOID:000000001703038

1. CHECK GROUND CONNECTIONS

1. Turn ignition switch OFF.
2. Loosen and retighten ground screws on the body.
Refer to [EC-142. "Ground Inspection"](#).

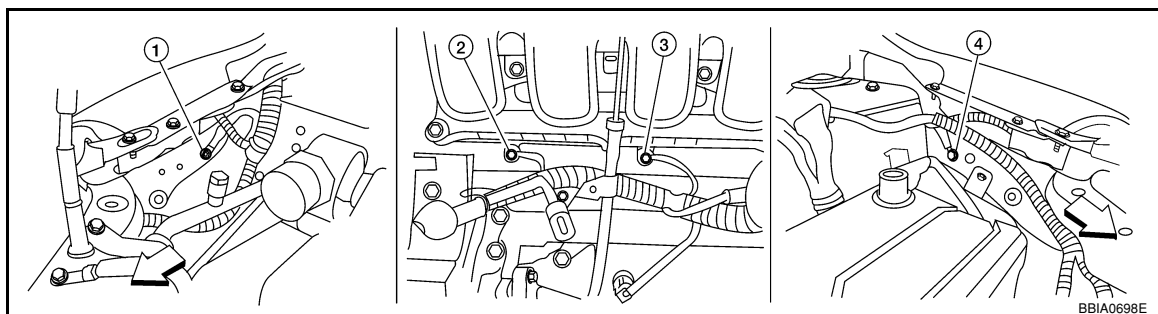

↶ Vehicle front

1. Body ground E24
4. Body ground E15

2. Engine ground F9

3. Engine ground F16

DTC P2138 APP SENSOR


< SERVICE INFORMATION >

OK or NG

- OK >> GO TO 2.
- NG >> Repair or replace ground connections.

2.CHECK APP SENSOR 1 POWER SUPPLY CIRCUIT

1. Disconnect accelerator pedal position (APP) sensor (1) harness connector.
2. Turn ignition switch ON.

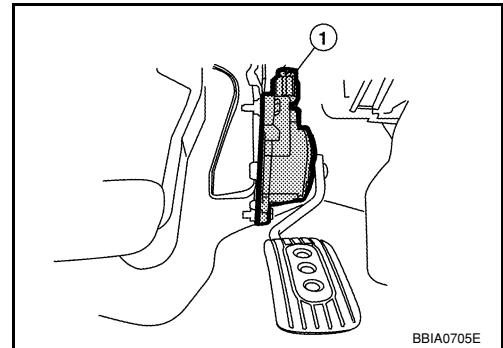


3. Check voltage between APP sensor terminal 4 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

OK or NG

- OK >> GO TO 3.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

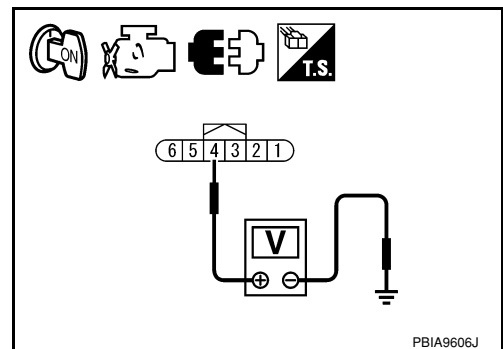


3.CHECK APP SENSOR 2 POWER SUPPLY CIRCUIT-I

1. Turn ignition switch ON.
2. Check voltage between APP sensor terminal 5 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

OK or NG

- OK >> GO TO 7.
- NG >> GO TO 4.

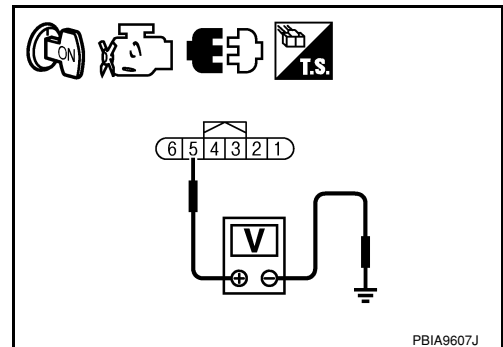

4.CHECK APP SENSOR 2 POWER SUPPLY CIRCUIT-II

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between APP sensor terminal 5 and ECM terminal 102. Refer to Wiring Diagram.

Continuity should exist.

OK or NG

- OK >> GO TO 5.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

5.CHECK APP SENSOR 2 POWER SUPPLY CIRCUIT-III

Check harness for short to power and short to ground, between the following terminals.

DTC P2138 APP SENSOR

< SERVICE INFORMATION >

| ECM terminal | Sensor terminal | Reference Wiring Diagram |
|--------------|--|--|
| 74 | Refrigerant pressure sensor terminal 3 | EC-542. "Wiring Diagram" |
| 75 | Crankshaft position sensor (POS) terminal 1 | EC-297. "Wiring Diagram" |
| 76 | EVAP control system pressure sensor terminal 3 | EC-357. "Wiring Diagram" |
| 102 | APP sensor terminal 5 | EC-495. "Wiring Diagram" |

OK or NG

OK >> GO TO 6.

NG >> Repair short to ground or short to power in harness or connectors.

6. CHECK COMPONENTS

Check the following.

- Crankshaft position sensor (POS) (Refer to [EC-301. "Component Inspection"](#).)
- EVAP control system pressure sensor (Refer to [EC-353. "Component Inspection"](#).)
- Refrigerant pressure sensor (Refer to [MTC-22](#).)

OK or NG

OK >> GO TO 11.

NG >> Replace malfunctioning component.

7. CHECK APP SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between the following;
ECM terminal 111 and APP sensor terminal 2,
ECM terminal 104 and APP sensor terminal 1.
Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 8.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

8. CHECK APP SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between the following;
ECM terminal 110 and APP sensor terminal 3,
ECM terminal 103 and APP sensor terminal 6.
Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 9.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

9. CHECK APP SENSOR

Refer to [EC-499. "Component Inspection"](#).

OK or NG

OK >> GO TO 11.

NG >> GO TO 10.

10. REPLACE ACCELERATOR PEDAL ASSEMBLY

1. Replace accelerator pedal assembly.
2. Perform [EC-76. "Accelerator Pedal Released Position Learning"](#).
3. Perform [EC-76. "Throttle Valve Closed Position Learning"](#).
4. Perform [EC-76. "Idle Air Volume Learning"](#).

DTC P2138 APP SENSOR

< SERVICE INFORMATION >

>> INSPECTION END

11. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> INSPECTION END


Component Inspection

INFOID:000000001703039

ACCELERATOR PEDAL POSITION SENSOR

1. Reconnect all harness connectors disconnected.
2. Turn ignition switch ON.
3. Check voltage between ECM terminals 110 (APP sensor 1 signal), 103 (APP sensor 2 signal) and ground under the following conditions.

| Terminal | Accelerator pedal | Voltage |
|--|-------------------|-------------|
| 110 (Accelerator pedal position sensor 1) | Fully released | 0.6 - 0.9V |
| | Fully depressed | 3.9 - 4.7V |
| 103 (Accelerator pedal position sensor 2) | Fully released | 0.3 - 0.6V |
| | Fully depressed | 1.95 - 2.4V |

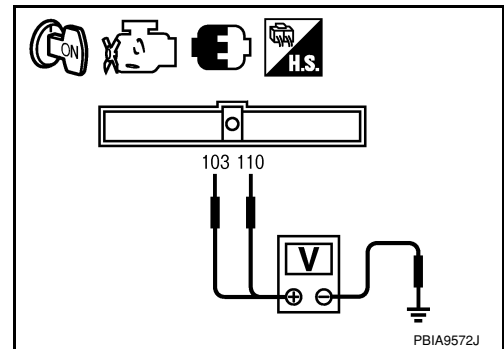

4. If NG, replace accelerator pedal assembly and go to next step.
5. Perform [EC-76. "Accelerator Pedal Released Position Learning"](#).
6. Perform [EC-76. "Throttle Valve Closed Position Learning"](#).
7. Perform [EC-76. "Idle Air Volume Learning"](#).

Removal and Installation

INFOID:000000001703040

ACCELERATOR PEDAL

Refer to [ACC-3](#).

DTC P2A00 A/F SENSOR 1



< SERVICE INFORMATION >

DTC P2A00 A/F SENSOR 1

Component Description

INFOID:000000001703041

The air fuel ratio (A/F) sensor 1 is a planar one-cell limit current sensor. The sensor element of the A/F sensor 1 is composed an electrode layer, which transports ions. It has a heater in the element. The sensor is capable of precise measurement $\lambda = 1$, but also in the lean and rich range. Together with its control electronics, the sensor outputs a clear, continuous signal throughout a wide λ range. The exhaust gas components diffuse through the diffusion layer at the sensor cell. An electrode layer is applied voltage, and this current relative oxygen density in lean. Also this current relative hydrocarbon density in rich. Therefore, the A/F sensor 1 is able to indicate air fuel ratio by this electrode layer of current. In addition, a heater is integrated in the sensor to ensure the required operating temperature of about 800°C (1,472°F).

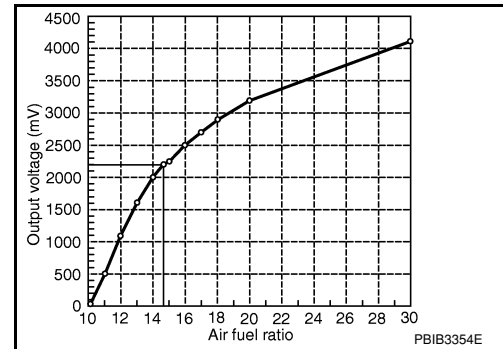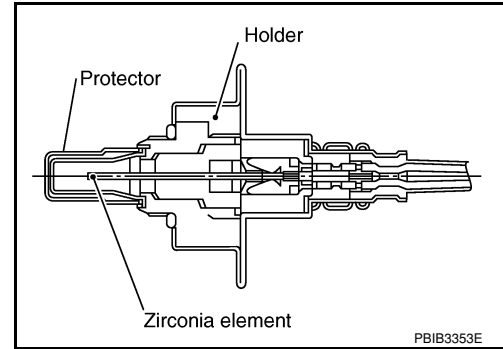

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001703042

Specification data are reference values.

| MONITOR ITEM | CONDITION | | SPECIFICATION |
|---------------|----------------------------|---------------------------------------|------------------------|
| A/F SEN1 (B1) | • Engine: After warming up | Maintaining engine speed at 2,000 rpm | Fluctuates around 2.2V |

On Board Diagnosis Logic

INFOID:000000001703043

To judge the malfunction, the A/F signal computed by ECM from the A/F sensor 1 signal is monitored not to be shifted to LEAN side or RICH side.

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible Cause |
|---------------|---|--|---|
| P2A00 2A00 | Air fuel ratio (A/F) sensor 1 circuit range/performance | <ul style="list-style-type: none"> The output voltage computed by ECM from the A/F sensor 1 signal is shifted to the lean side for a specified period. The A/F signal computed by ECM from the A/F sensor 1 signal is shifted to the rich side for a specified period. | <ul style="list-style-type: none"> Air fuel ratio (A/F) sensor 1 Air fuel ratio (A/F) sensor 1 heater Fuel pressure Fuel injector Intake air leaks |

DTC Confirmation Procedure

INFOID:000000001703044

NOTE:

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11V at idle.


WITH CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF and wait at least 10 seconds.

DTC P2A00 A/F SENSOR 1


< SERVICE INFORMATION >

- Turn ignition switch ON and select "SELF-LEARNING CONT" in "WORK SUPPORT" mode with CONSULT-II.
- Clear the self-learning coefficient by touching "CLEAR".
- Turn ignition switch OFF and wait at least 10 seconds.
- Start engine and keep the engine speed between 3,500 and 4,000 rpm for 1 minute under no load.
- Let engine idle for 1 minute.
- Keep engine speed between 2,500 and 3,000 rpm for 20 minutes.
- If 1st trip DTC is detected, go to [EC-503. "Diagnosis Procedure"](#).

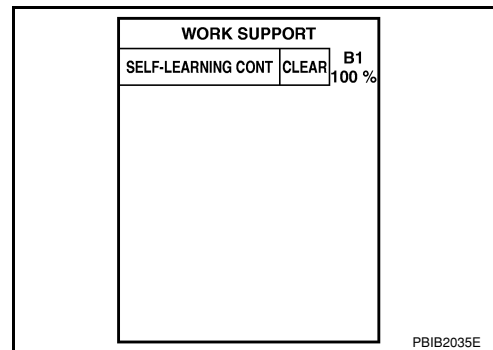

WITH GST

- Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- Disconnect mass air flow sensor harness connector.
- Start engine and let it idle for at least 5 seconds.
- Stop engine and reconnect mass air flow sensor (1) harness connector.
- Select Service \$03 with GST and make sure that DTC P0102 is detected.
- Select Service \$04 with GST and erase the DTC P0102.
- Start engine and keep the engine speed between 3,500 and 4,000 rpm for 1 minute under no load.
- Let engine idle for 1 minute.
- Keep engine speed between 2,500 and 3,000 rpm for 20 minutes.
- Select Service \$07 with GST.
If 1st trip DTC is detected, go to [EC-503. "Diagnosis Procedure"](#).

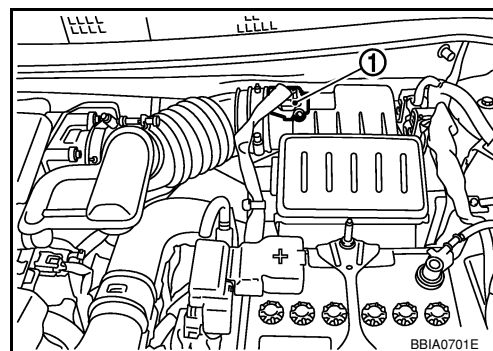

DTC P2A00 A/F SENSOR 1




< SERVICE INFORMATION >

Wiring Diagram


INFOID:000000001703045

EC-A/F-01

— : DETECTABLE LINE FOR DTC
 - - - : NON-DETECTABLE LINE FOR DTC

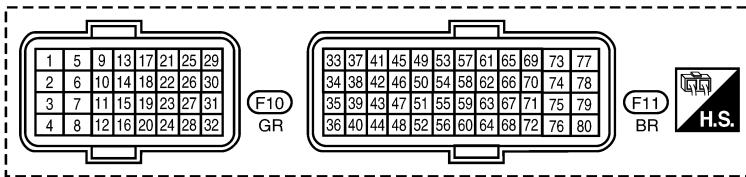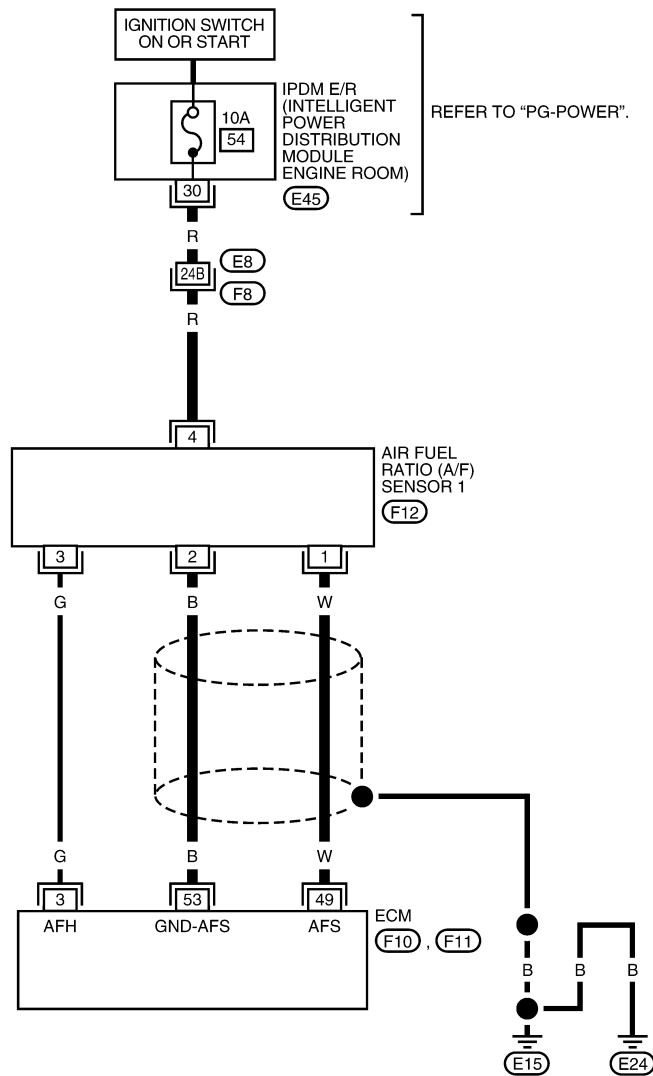

REFER TO THE FOLLOWING.
 (F8) - SUPER MULTIPLE JUNCTION (SMJ)



BBWA2631E


Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.

CAUTION:

DTC P2A00 A/F SENSOR 1

< SERVICE INFORMATION >

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.
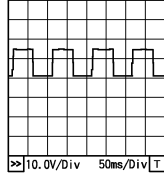
| TERMINAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|--------------|------------|---------------------|--|---|
| 3 | G | A/F sensor 1 heater | [Engine is running] • Warm-up condition • Idle speed (More than 140 seconds after starting engine) | Approximately 2.9 - 8.8V★  PBIA8148J |
| 49 | W | A/F sensor 1 | [Engine is running] • Warm-up condition • Engine speed: 2,000 rpm | Approximately 1.8V Output voltage varies with air fuel ratio. |
| 53 | B | A/F sensor 1 | [Ignition switch: ON] | Approximately 2.2V |


★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnosis Procedure

INFOID:000000001703046

1. CHECK GROUND CONNECTIONS

- Turn ignition switch OFF.
- Loosen and retighten ground screws on the body.
Refer to [EC-142. "Ground Inspection"](#).

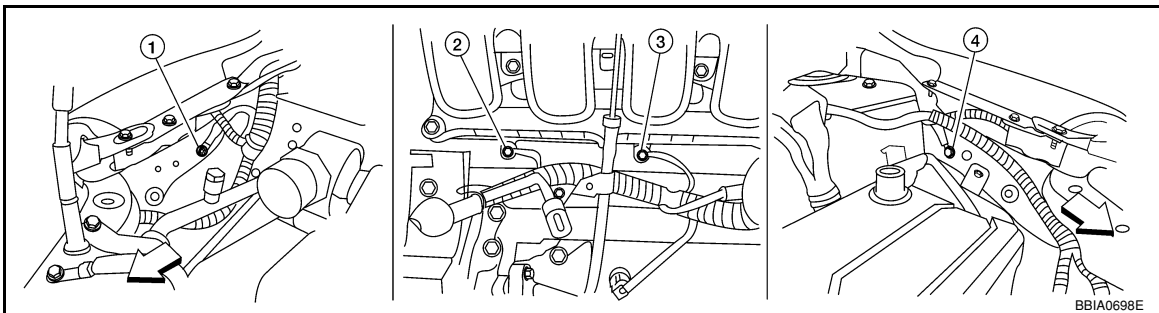

↩: Vehicle front

- Body ground E24
- Engine ground F9
- Engine ground F16
- Body ground E15

OK or NG


- OK >> GO TO 2.
 NG >> Repair or replace ground connections.

2. RETIGHTEN AIR FUEL RATIO (A/F) SENSOR 1

- Loosen and retighten the air fuel ratio (A/F) sensor 1 (2).
 • Air fuel ratio (A/F) sensor harness connector (1)

Tightening torque: 50 N-m (5.1 kg-m, 37 ft-lb)

>> GO TO 3.

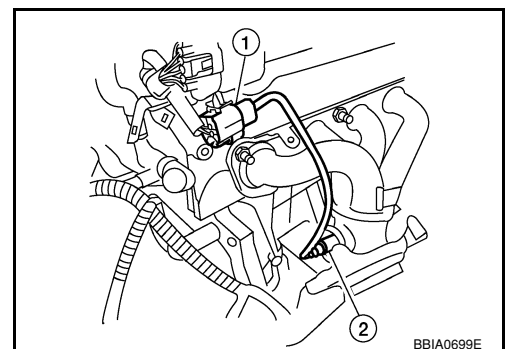

DTC P2A00 A/F SENSOR 1

< SERVICE INFORMATION >

3. CHECK FOR INTAKE AIR LEAK

1. Start engine and run it at idle.
2. Listen for an intake air leak after the mass air flow sensor.

OK or NG


- OK >> GO TO 4.
NG >> Repair or replace.

4. CLEAR THE SELF-LEARNING DATA

Ⓜ With CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Select "SELF-LEARNING CONT" in "WORK SUPPORT" mode with CONSULT-II.
3. Clear the self-learning control coefficient by touching "CLEAR".
4. Run engine for at least 10 minutes at idle speed.


**Is the 1st trip DTC P0171 and P0172 detected?
Is it difficult to start engine?**

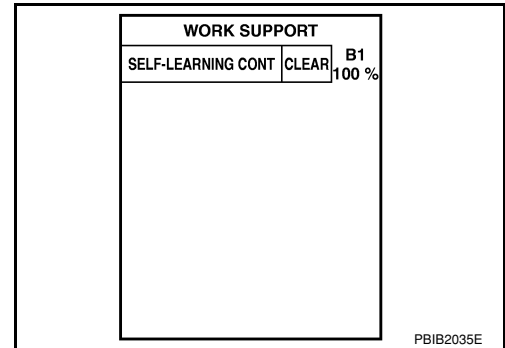

⊗ Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF.
3. Disconnect mass air flow sensor (1) harness connector.
4. Restart engine and let it idle for at least 5 seconds.
5. Stop engine and reconnect mass air flow sensor harness connector.
6. Make sure DTC P0102 is displayed.
7. Erase the DTC memory. Refer to [EC-47. "Emission-related Diagnostic Information"](#).
8. Make sure DTC P0000 is displayed.
9. Run engine for at least 10 minutes at idle speed.

**Is the 1st trip DTC P0171 and P0172 detected?
Is it difficult to start engine?**

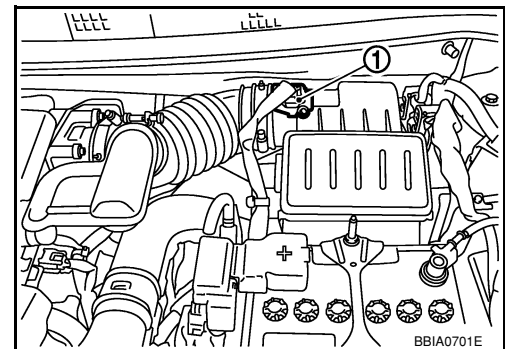

Yes or No

Yes >> Perform trouble diagnosis for DTC P0171 or P0172. Refer to [EC-257](#) or [EC-264](#).

No >> GO TO 5.


5. CHECK HARNESS CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect A/F sensor 1 harness connector (1).
- Air fuel ratio (A/F) sensor (2)
3. Check harness connector for water.

Water should no exist.

OK or NG

- OK >> GO TO 6.
NG >> Repair or replace harness connector.

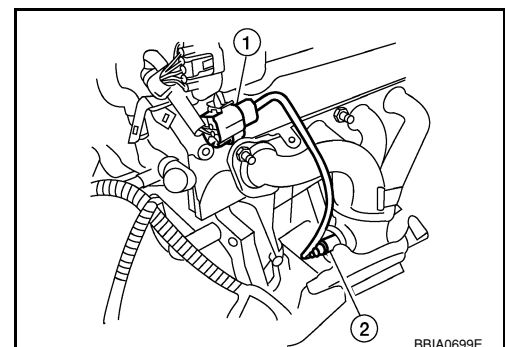

6. CHECK AIR FUEL RATIO (A/F) SENSOR 1 POWER SUPPLY CIRCUIT

1. Turn ignition switch ON.

DTC P2A00 A/F SENSOR 1


< SERVICE INFORMATION >

2. Check voltage between A/F sensor 1 terminal 4 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

- OK >> GO TO 8.
- NG >> GO TO 7.

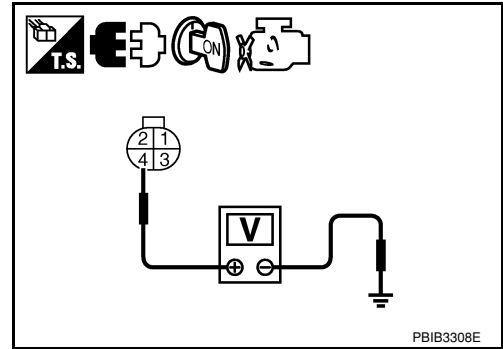

7. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness for open or short between A/F sensor 1 and fuse

>> Repair or replace harness or connectors.

8. CHECK A/F SENSOR 1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between the following terminals. Refer to Wiring Diagram.

| A/F sensor 1 terminal | ECM terminal |
|-----------------------|--------------|
| 1 | 49 |
| 2 | 53 |

Continuity should exist.

4. Check harness continuity between ECM terminals 49, 53 or A/F sensor 1 terminals 1, 2 and ground. Refer to Wiring Diagram.

Continuity should not exist.

5. Also check harness for short to power.

OK or NG

- OK >> GO TO 9.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

9. CHECK A/F SENSOR 1 HEATER

Refer to [EC-154, "Component Inspection"](#).

OK or NG

- OK >> GO TO 10.
- NG >> GO TO 11.

10. CHECK INTERMITTENT INCIDENT

Perform [EC-136](#).

OK or NG

- OK >> GO TO 11.
- NG >> Repair or replace.

11. REPLACE AIR FUEL RATIO (A/F) SENSOR 1

Replace air fuel ratio (A/F) sensor 1.

CAUTION:

- Discard any air fuel ratio (A/F) sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

DTC P2A00 A/F SENSOR 1

< SERVICE INFORMATION >

- Before installing new air fuel ratio (A/F) sensor, clean exhaust system threads using Heated Oxygen Sensor Thread Cleaner tool J-43897-18 or J-43897-12 and approved anti-seize lubricant.

>> GO TO 12.

12.CONFIRM A/F ADJUSTMENT DATA

1. Turn ignition switch ON.
2. Select "A/F ADJ-B1" in "DATA MONITOR" mode with CONSULT-II.
3. Make sure that "0.000" is displayed on CONSULT-II screen.

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 13.

| DATA MONITOR | |
|--------------|--------|
| MONITORING | NO DTC |
| A/F ADJ-B1 | 0.000 |

13.CLEAR THE SELF-LEARNGIN DATA

Ⓟ With CONSULT-II


1. Start engine and warm it up to normal operating temperature.
2. Select "SELF-LEARNING CONT" in "WORK SUPPORT" mode with CONSULT-II.
3. Clear the self-learning control coefficient by touching "CLEAR".

| WORK SUPPORT | |
|--------------------|-------|
| SELF-LEARNING CONT | CLEAR |
| B1 | 100% |

ⓧ Without CONSULT-II

1. Start engine and warm it up to normal operating temperature.
2. Turn ignition switch OFF.
3. Disconnect mass air flow sensor harness (1) connector.
4. Restart engine and let it idle for at least 5 seconds.
5. Stop engine and reconnect mass air flow sensor harness connector.
6. Make sure DTC P0102 is displayed.
7. Erase the DTC memory. Refer to [EC-47. "Emission-related Diagnostic Information"](#).
8. Make sure DTC P0000 is displayed.

>> GO TO 14.

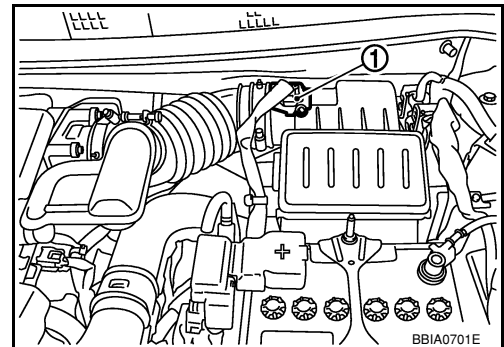

14.CONFIRM A/F ADJUSTMENT DATA

1. Turn ignition switch OFF and then ON.

DTC P2A00 A/F SENSOR 1

< SERVICE INFORMATION >

2. Select "A/F ADJ-B1" in "DATA MONITOR" mode with CONSULT-II.
3. Make sure that "0.000" is displayed on CONSULT-II screen.

>> **INSPECTION END**

| DATA MONITOR | |
|--------------|--------|
| MONITORING | NO DTC |
| A/F ADJ-B1 | 0.000 |

PBIB3201E

Removal and Installation

AIR FUEL RATIO SENSOR

Refer to [EM-21](#).

INFOID:000000001703047

A

EC

C

D

E

F

G

H

I

J

K

L

M

N

O

P

ASCD BRAKE SWITCH


< SERVICE INFORMATION >

ASCD BRAKE SWITCH

Component Description

INFOID:000000001703048

When depress on the brake pedal, ASCD brake switch (2) is turned OFF and stop lamp switch (1) is turned ON. ECM detects the state of the brake pedal by this input of two kinds (ON/OFF signal)
Refer to [EC-28](#) for the ASCD function.

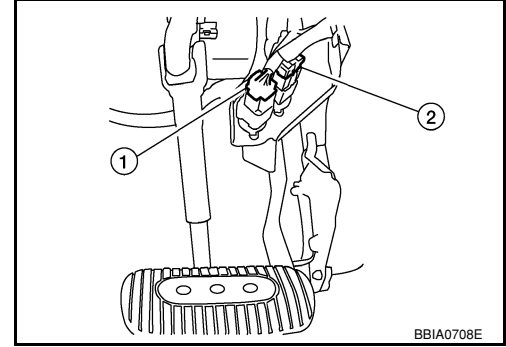

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001703049

Specification data are reference values.



| MONITOR ITEM | CONDITION | SPECIFICATION | |
|----------------------------------|-----------------------|---|-----|
| BRAKE SW1 (ASCD brake switch) | • Ignition switch: ON | • Brake pedal: Fully released (A/T, CVT) • Brake pedal and clutch pedal: Fully released (M/T) | ON |
| | | • Brake pedal: Slightly depressed (A/T, CVT) • Brake pedal and/or clutch pedal: Slightly depressed (M/T) | OFF |
| BRAKE SW2 (Stop lamp switch) | • Ignition switch: ON | Brake pedal: Fully released | OFF |
| | | Brake pedal: Slightly depressed | ON |

ASCD BRAKE SWITCH

< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001703050

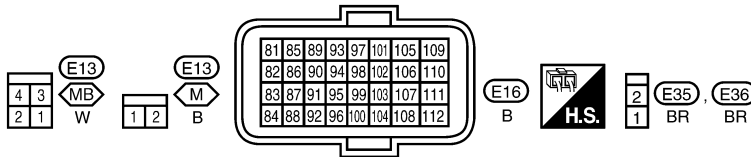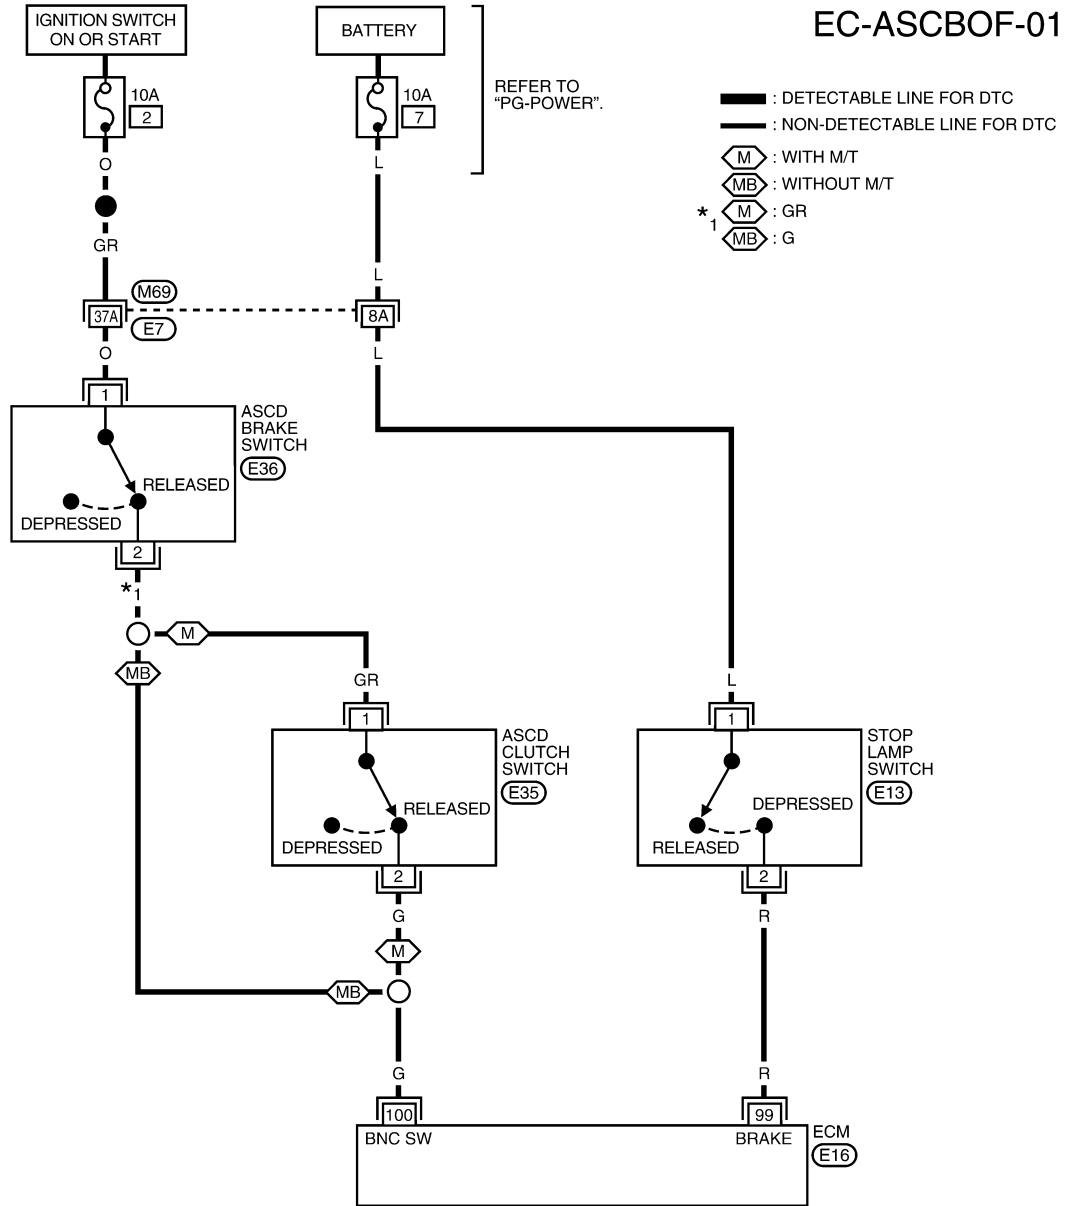

REFER TO THE FOLLOWING.
 (M69) - SUPER MULTIPLE JUNCTION (SMJ)

BBWA2666E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

ASCD BRAKE SWITCH

< SERVICE INFORMATION >

| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------------|---------------|-------------------|---|-------------------------------|
| 99 | R | Stop lamp switch | [Ignition switch: ON] • Brake pedal: Fully released | Approximately 0V |
| | | | [Ignition switch: ON] • Brake pedal: Slightly depressed | BATTERY VOLTAGE (11 - 14V) |
| 100 | G | ASCD brake switch | [Ignition switch: ON] • Brake pedal: Slightly depressed (A/T, CVT) • Brake pedal and/or clutch pedal: Slightly depressed (M/T) | Approximately 0V |
| | | | [Ignition switch: ON] • Brake pedal: Fully released (A/T, CVT) • Brake pedal and clutch pedal: Fully released (M/T) | BATTERY VOLTAGE (11 - 14V) |

Diagnosis Procedure

INFOID:000000001703051

1. CHECK OVERALL FUNCTION-I

With CONSULT-II


- Turn ignition switch ON.
- Select "BRAKE SW1" in "DATA MONITOR" mode with CONSULT-II.
- Check "BRAKE SW1" indication under the following conditions.

M/T models

| CONDITION | INDICATION |
|---|------------|
| Clutch pedal and/or brake pedal: Slightly depressed | OFF |
| Clutch pedal and brake pedal: Fully released | ON |

A/T and CVT models

| CONDITION | INDICATION |
|---------------------------------|------------|
| Brake pedal: Slightly depressed | OFF |
| Brake pedal: Fully released | ON |

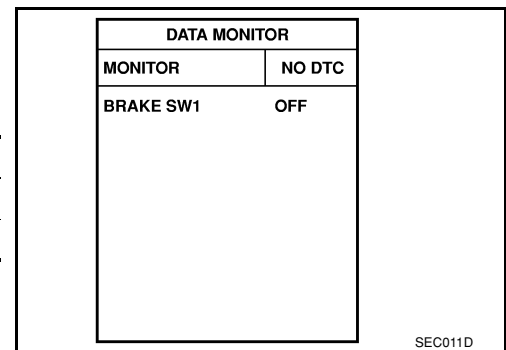

Without CONSULT-II


- Turn ignition switch ON.
- Check voltage between ECM terminal 100 and ground under the following conditions.

M/T models

| CONDITION | VOLTAGE |
|---|------------------|
| Clutch pedal and/or brake pedal: Slightly depressed | Approximately 0V |
| Clutch pedal and brake pedal: Fully released | Battery voltage |

A/T and CVT models

| CONDITION | VOLTAGE |
|---------------------------------|------------------|
| Brake pedal: Slightly depressed | Approximately 0V |
| Brake pedal: Fully released | Battery voltage |

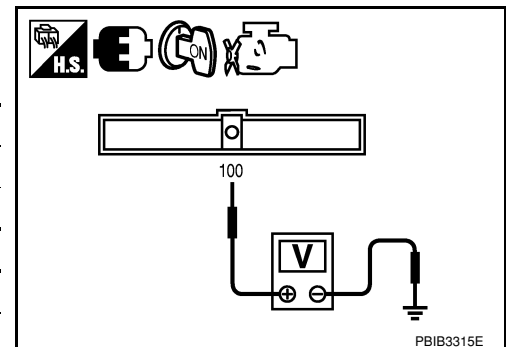

OK or NG

- OK >> GO TO 2.
- NG (M/T models) >>GO TO 3.
- NG (A/T and CVT models) >>GO TO 4.

2. CHECK OVERALL FUNCTION-II


With CONSULT-II

ASCD BRAKE SWITCH

< SERVICE INFORMATION >

Check "BRAKE SW2" indication in "DATA MONITOR" mode.


| CONDITION | INDICATION |
|---------------------------------|------------|
| Brake pedal: Fully released | OFF |
| Brake pedal: Slightly depressed | ON |

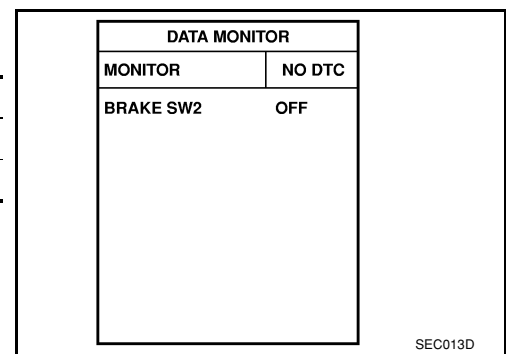

Without CONSULT-II

Check voltage between ECM terminal 99 and ground under the following conditions.

| CONDITION | VOLTAGE |
|---------------------------------|------------------|
| Brake pedal: Fully released | Approximately 0V |
| Brake pedal: Slightly depressed | Battery voltage |

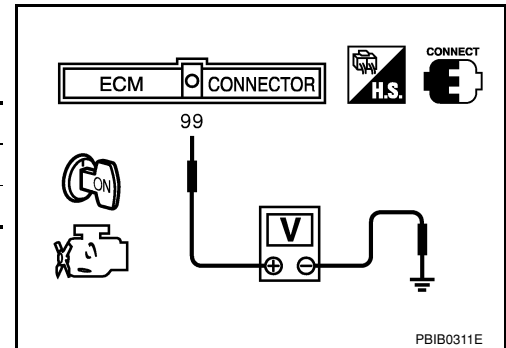


OK or NG

OK >> GO TO 15.

NG >> GO TO 11.

3. CHECK ASCD CLUTCH SWITCH POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect ASCD clutch switch (1) harness connector.
 - Clutch pedal (2)
3. Turn ignition switch ON.

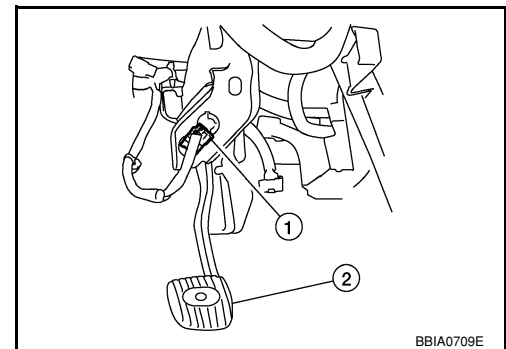


4. Check voltage between ASCD clutch switch terminal 1 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

OK >> GO TO 9.

NG >> GO TO 4.

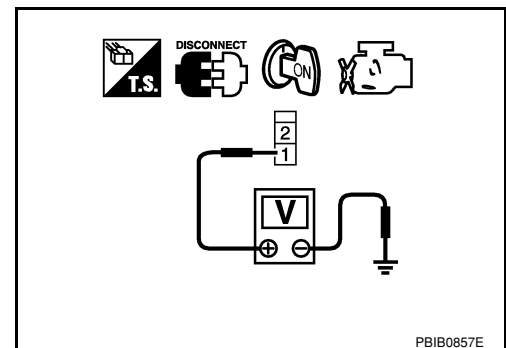


4. CHECK ASCD BRAKE SWITCH POWER SUPPLY

1. Turn ignition switch OFF.

ASCD BRAKE SWITCH

< SERVICE INFORMATION >

2. Disconnect ASCD brake switch (2) harness connector.
 - Stop lamp switch (1)
3. Turn ignition switch ON.

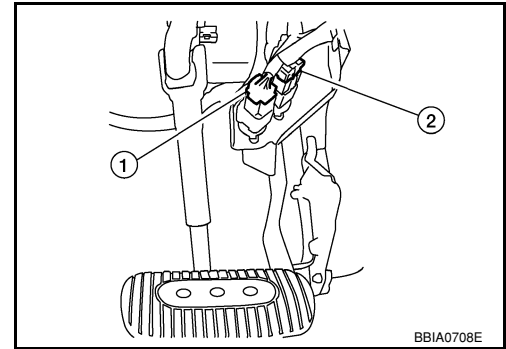

4. Check voltage between ASCD brake switch terminal 1 and ground under the following conditions with CONSULT-II or tester.

| CONDITION | VOLTAGE |
|----------------------------------|-----------------|
| Clutch pedal: Fully released | Battery voltage |
| Clutch pedal: Slightly depressed | Approx. 0V |

OK or NG

- OK (M/T models) >>GO TO 6.
- OK (A/T and CVT models) >>GO TO 7.
- NG >> GO TO 5.

5.DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M69, E7
- 10A fuse
- Harness for open or short between ASCD brake switch and fuse

>> Repair open circuit or short to ground or short to power in harness or connectors.

6.CHECK ASCD CLUTCH SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Check harness continuity between ASCD brake switch terminal 2 and ASCD clutch switch terminal 1. Refer to Wiring Diagram.

Continuity should exist.

3. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 8.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

7.CHECK ASCD BRAKE SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 100 and ASCD brake switch terminal 2. Refer to Wiring Diagram.


Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 8.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

8.CHECK ASCD BRAKE SWITCH

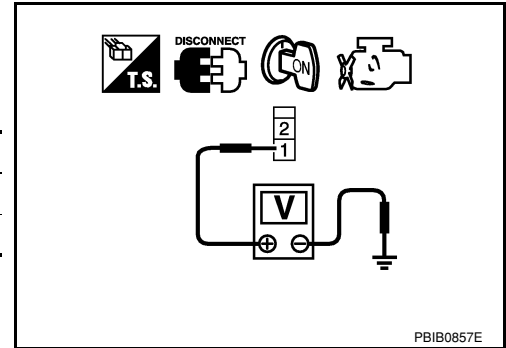

ASCD BRAKE SWITCH

< SERVICE INFORMATION >

Refer to [EC-445. "Component Inspection"](#).

OK or NG

- OK >> GO TO 15.
- NG >> Replace ASCD brake switch.

9. CHECK ASCD CLUTCH SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between ECM terminal 100 and ASCD clutch switch terminal 2.
Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 10.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

10. CHECK ASCD CLUTCH SWITCH


Refer to [EC-445. "Component Inspection"](#)

OK or NG


- OK >> GO TO 15.
- NG >> Replace ASCD clutch switch.

11. CHECK STOP LAMP SWITCH POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect stop lamp switch (1) harness connector.
 - ASCD brake switch (2)

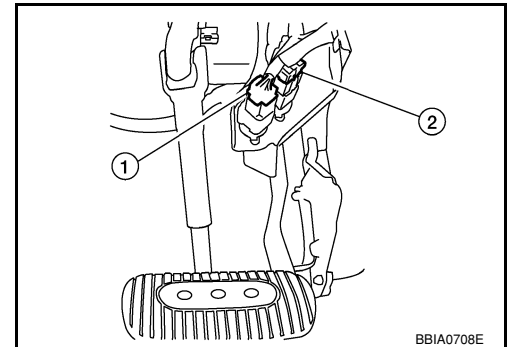

3. Check voltage between stop lamp switch terminal 1 and ground with CONSULT -II or tester.

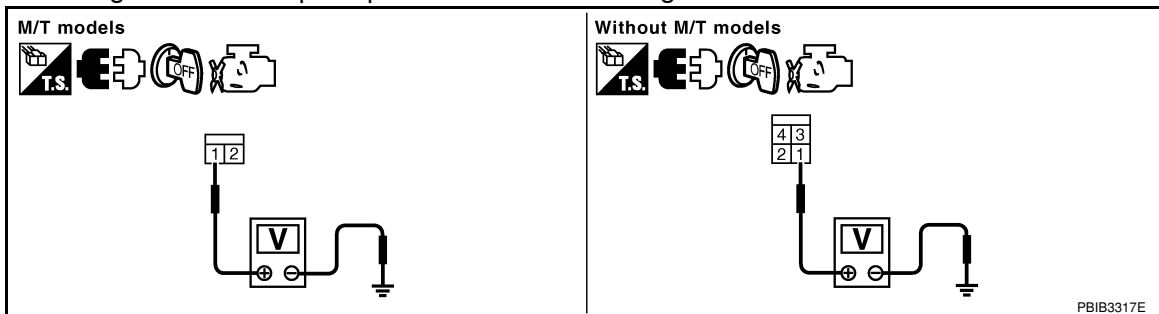

Voltage: Battery voltage

OK or NG

- OK >> GO TO 13.
- NG >> GO TO 12.

12. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M69, E7

ASCD BRAKE SWITCH

< SERVICE INFORMATION >

- Harness for open or short between stop lamp switch and battery

>> Repair open circuit or short to ground or short to power in harness or connectors.

13.CHECK STOP LAMP SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Disconnect ECM harness connector.
2. Check harness continuity between ECM terminal 99 and stop lamp switch terminal 2.
Refer to Wiring Diagram.

Continuity should exist.

3. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 14.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

14.CHECK STOP LAMP SWITCH

Refer to [EC-445. "Component Inspection"](#).

OK or NG

OK >> GO TO 15.

NG >> Replace stop lamp switch.

15.CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**

Component Inspection


INFOID:000000001703052

ASCD BRAKE SWITCH

1. Turn ignition switch OFF.
2. Disconnect ASCD brake switch harness connector.
3. Check continuity between ASCD brake switch terminals 1 and 2 under the following conditions.

| Condition | Continuity |
|----------------------------------|-------------------|
| Brake pedal: Fully released. | Should exist. |
| Brake pedal: Slightly depressed. | Should not exist. |

If NG, adjust ASCD brake switch installation, refer to [BR-5](#), and perform step 3 again.

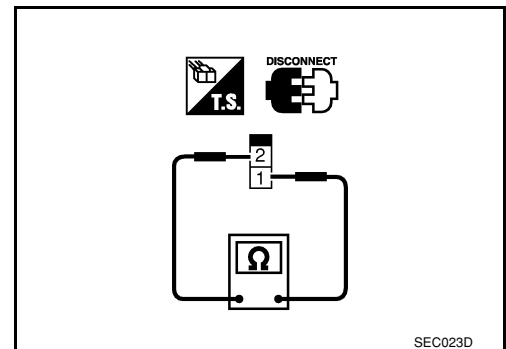

ASCD CLUTCH SWITCH

1. Turn ignition switch OFF.
2. Disconnect ASCD clutch switch harness connector.


ASCD BRAKE SWITCH

< SERVICE INFORMATION >

- Check continuity between ASCD clutch switch terminals 1 and 2 under the following conditions.


| Condition | Continuity |
|-----------------------------------|-------------------|
| Clutch pedal: Fully released. | Should exist. |
| Clutch pedal: Slightly depressed. | Should not exist. |

If NG, adjust ASCD clutch switch installation, refer to [CL-5](#), and perform step 3 again.

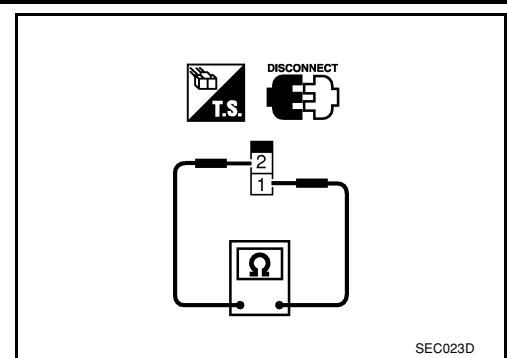

STOP LAMP SWITCH

- Turn ignition switch OFF.
- Disconnect stop lamp switch harness connector.
- Check continuity between stop lamp switch terminals 1 and 2 under the following conditions.

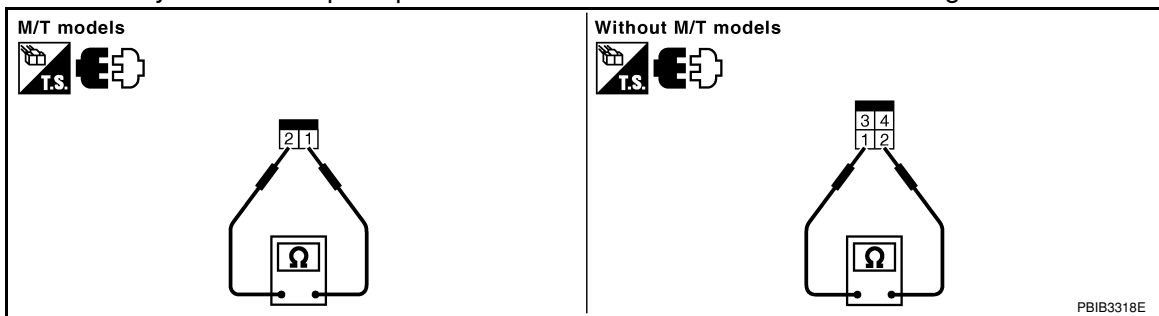

| Condition | Continuity |
|----------------------------------|-------------------|
| Brake pedal: Fully released. | Should not exist. |
| Brake pedal: Slightly depressed. | Should exist. |

If NG, adjust stop lamp switch installation, refer to [BR-5](#), and perform step 3 again.

A
EC
C
D
E
F
G
H
I
J
K
L
M
N
O
P

ASCD INDICATOR

< SERVICE INFORMATION >

ASCD INDICATOR

Component Description

INFOID:000000001703053

ASCD indicator lamp illuminates to indicate ASCD operation status. Lamp has two indicators, CRUISE and SET, and is integrated in combination meter.

CRUISE indicator illuminates when MAIN switch on ASCD steering switch is turned ON to indicate that ASCD system is ready for operation.

SET indicator illuminates when following conditions are met.

- CRUISE indicator is illuminated.
- SET/COAST switch on ASCD steering switch is turned ON while vehicle speed is within the range of ASCD setting.

SET indicator remains lit during ASCD control.

Refer to [EC-28](#) for the ASCD function.

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001703054

Specification data are reference value.

| MONITOR ITEM | CONDITION | | SPECIFICATION |
|--------------|--|---|---------------|
| CRUISE LAMP | • Ignition switch: ON | MAIN switch: Pressed at 1st time → 2nd | ON → OFF |
| SET LAMP | • MAIN switch: ON • Vehicle: Between 40 km/h (25 MPH) and 144 km/h (89 MPH) | ASCD: Operating | ON |
| | | ASCD: Not operating | OFF |



ASC D INDICATOR

< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001703055

EC-ASCIND-01

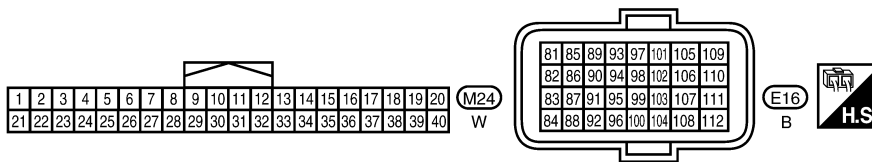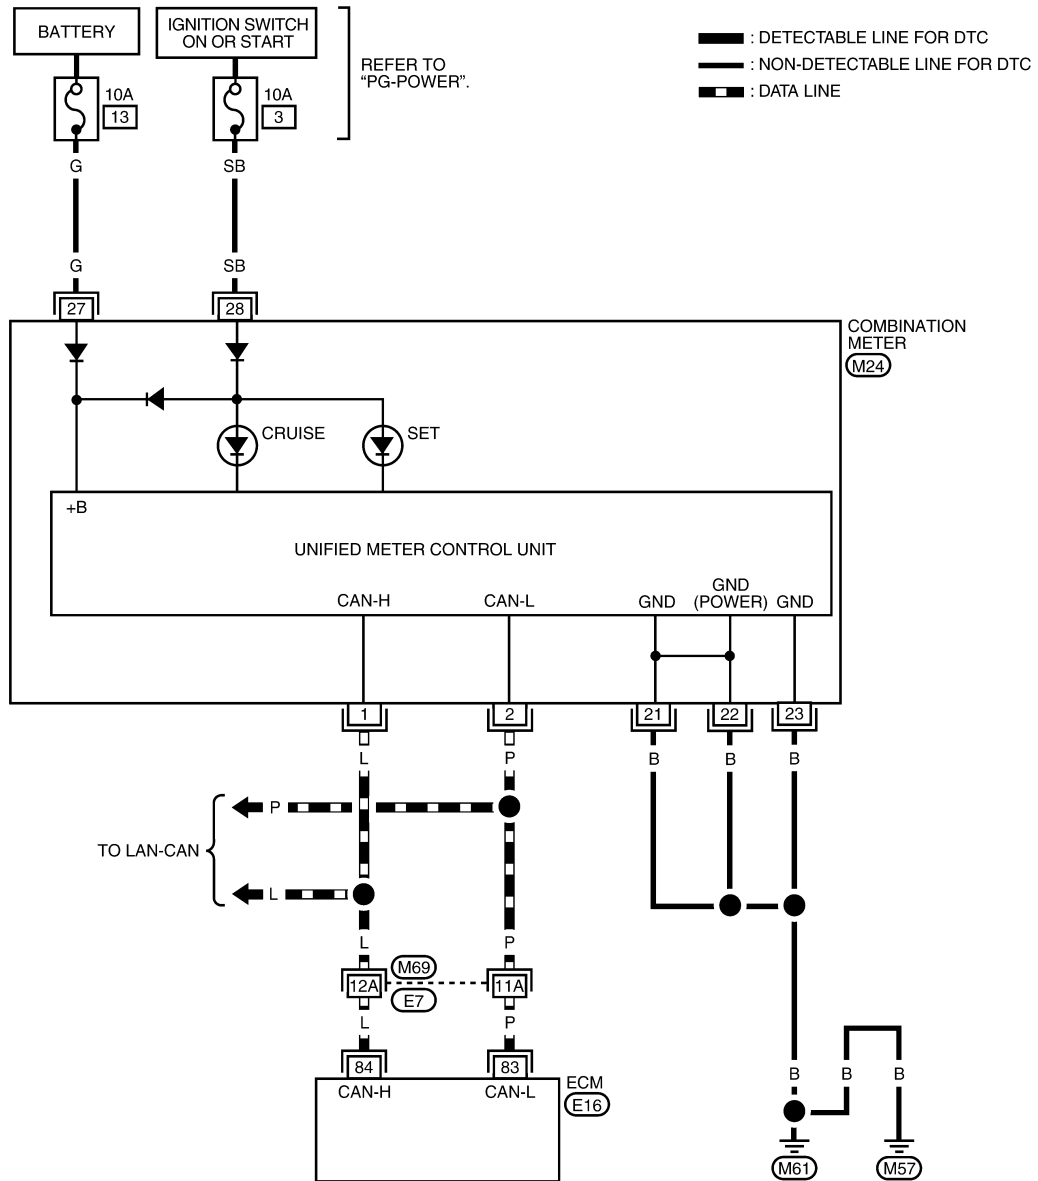

BBWA3005E

Diagnosis Procedure

1. CHECK OVERALL FUNCTION

Check ASCD indicator under the following conditions.

INFOID:000000001703056

ASCD INDICATOR

< SERVICE INFORMATION >

| ASCD INDICATOR | CONDITION | | SPECIFICATION |
|----------------|--|--|---------------|
| CRUISE LAMP | • Ignition switch: ON | MAIN switch: Pressed at 1st time → 2nd | ON → OFF |
| SET LAMP | • MAIN switch: ON • Vehicle: Between 40 km/h (25 MPH) and 144 km/h (89 MPH) | ASCD: Operating | ON |
| | | ASCD: Not operating | OFF |

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 2.

2.CHECK DTC

Check that DTC U1000 or U1001 is not displayed.

Yes or No

Yes >> Perform trouble diagnoses for DTC U1000, U1001, refer to [EC-143](#).

No >> GO TO 3.

3.CHECK COMBINATION METER OPERATION

Does combination meter operate normally?

Yes or No

Yes >> GO TO 4.

No >> Check combination meter circuit. Refer to [DI-4](#).

4.CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**

ELECTRICAL LOAD SIGNAL

< SERVICE INFORMATION >

ELECTRICAL LOAD SIGNAL

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001703057

Specification data are reference values.

| MONITOR ITEM | CONDITION | SPECIFICATION | |
|---------------|-----------------------|--|-----|
| LOAD SIGNAL | • Ignition switch: ON | Rear window defogger switch is ON and/or lighting switch is in 2nd position. | ON |
| | | Rear window defogger switch is OFF and lighting switch is OFF. | OFF |
| HEATER FAN SW | • Ignition switch: ON | Heater fan: Operating. | ON |
| | | Heater fan: Not operating. | OFF |

Diagnosis Procedure

INFOID:000000001703058

1. CHECK LOAD SIGNAL CIRCUIT OVERALL FUNCTION-I

- Turn ignition switch ON.
- Check "LOAD SIGNAL" in "DATA MONITOR" mode with CONSULT-II under the following conditions.

| Condition | LOAD SIGNAL |
|-------------------------------------|-------------|
| Lighting switch: ON at 2nd position | ON |
| Lighting switch: OFF | OFF |

OK or NG

- OK >> GO TO 2.
NG >> GO TO 4.

| DATA MONITOR | |
|--------------|--------|
| MONITORING | NO DTC |
| LOAD SIGNAL | ON |

PBIB0103E

2. CHECK LOAD SIGNAL CIRCUIT OVERALL FUNCTION-II

Check "LOAD SIGNAL" in "DATA MONITOR" mode with CONSULT-II under the following conditions.

| Condition | LOAD SIGNAL |
|----------------------------------|-------------|
| Rear window defogger switch: ON | ON |
| Rear window defogger switch: OFF | OFF |

OK or NG

- OK >> GO TO 3.
NG >> GO TO 5.

| DATA MONITOR | |
|--------------|--------|
| MONITORING | NO DTC |
| LOAD SIGNAL | ON |

PBIB0103E

3. CHECK HEATER FAN SIGNAL CIRCUIT OVERALL FUNCTION

Check "HEATER FAN SW" in "DATA MONITOR" mode with CONSULT-II under the following conditions.

| Condition | LOAD SIGNAL |
|--------------------------------|-------------|
| Heater fan control switch: ON | ON |
| Heater fan control switch: OFF | OFF |

OK or NG

- OK >> **INSPECTION END.**
NG >> GO TO 6.

| DATA MONITOR | |
|---------------|--------|
| MONITORING | NO DTC |
| HEATER FAN SW | ON |

PBIB1995E

4. CHECK HEADLAMP SYSTEM

Refer to [LT-4](#) or [LT-25](#).

A
EC
C
D
E
F
G
H
I
J
K
L
M
N
O
P

ELECTRICAL LOAD SIGNAL

< SERVICE INFORMATION >

>> **INSPECTION END**

5.CHECK REAR WINDOW DEFOGGER SYSTEM

Refer to [GW-49](#).

>> **INSPECTION END**

6.CHECK HEATER FAN CONTROL SYSTEM

Refer to [MTC-22](#).

>> **INSPECTION END**

FUEL INJECTOR


< SERVICE INFORMATION >

FUEL INJECTOR

Component Description

The fuel injector is a small, precise solenoid valve. When the ECM supplies a ground to the fuel injector circuit, the coil in the fuel injector is energized. The energized coil pulls the ball valve back and allows fuel to flow through the fuel injector into the intake manifold. The amount of fuel injected depends upon the injection pulse duration. Pulse duration is the length of time the fuel injector remains open. The ECM controls the injection pulse duration based on engine fuel needs.

INFOID:000000001703059

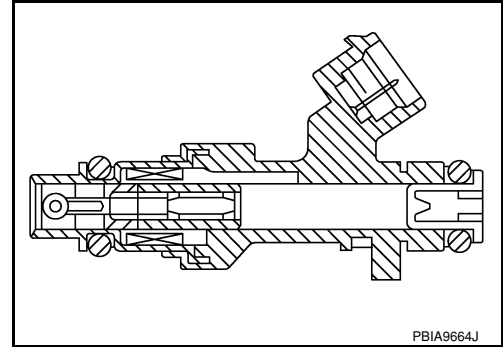

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001703060

Specification data are reference values.

| MONITOR ITEM | CONDITION | SPECIFICATION |
|--------------|--|----------------|
| B/FUEL SCHDL | See EC-127 . | |
| INJ PULSE-B1 | • Engine: After warming up • Air conditioner switch: OFF • Shift lever: P or N (A/T, CVT), Neutral (M/T) • No load | Idle |
| | | 2,000 rpm |
| | | 2.0 - 3.0 msec |
| | | 1.9 - 2.9 msec |


FUEL INJECTOR

< SERVICE INFORMATION >


Wiring Diagram

INFOID:000000001703061

EC-INJECT-01

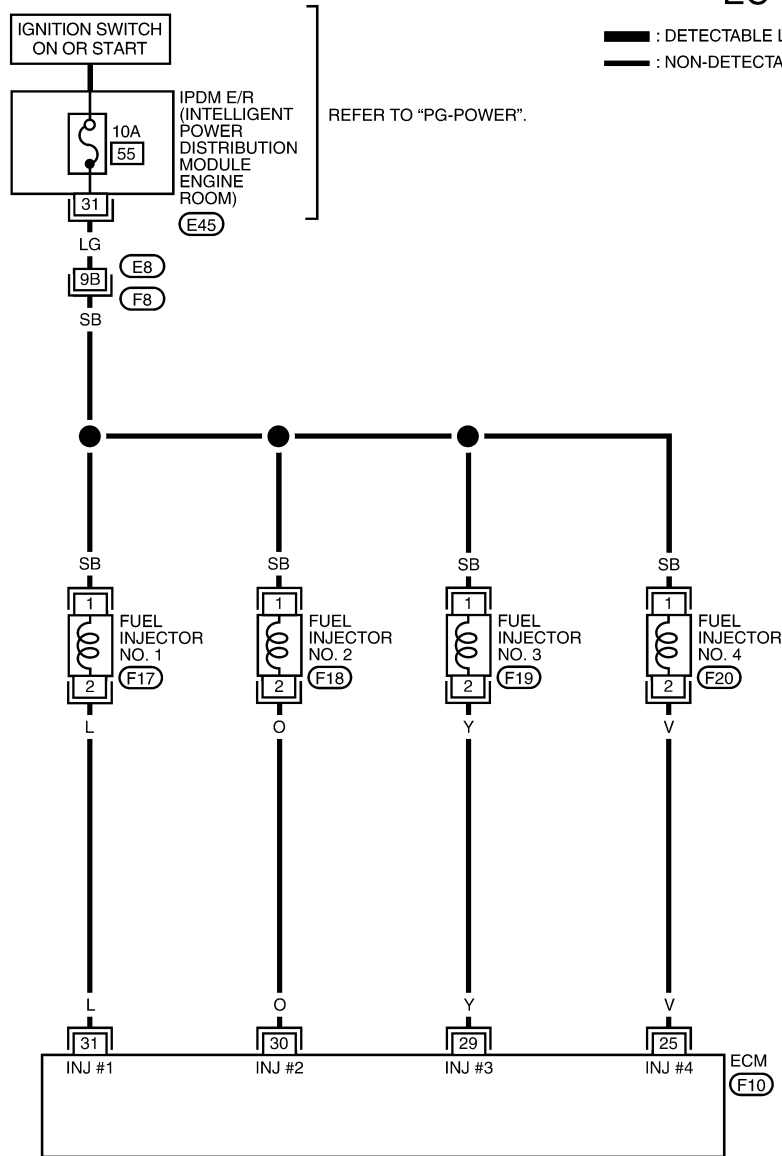

— : DETECTABLE LINE FOR DTC
— : NON-DETECTABLE LINE FOR DTC

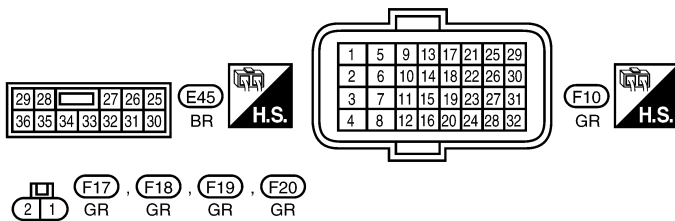

REFER TO THE FOLLOWING.

(F8) - SUPER MULTIPLE
JUNCTION (SMJ)

BBWA3003E



Specification data are reference values and are measured between each terminal and ground.
Pulse signal is measured by CONSULT-II.

CAUTION:

FUEL INJECTOR

< SERVICE INFORMATION >

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.
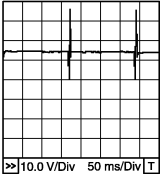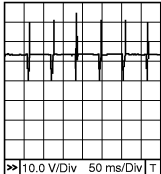
| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------------|------------------|--|--|---|
| 25 29 30 31 | V Y O L | Fuel injector No. 4 Fuel injector No. 3 Fuel injector No. 2 Fuel injector No. 1 | <p>[Engine is running]</p> <ul style="list-style-type: none"> • Warm-up condition • Idle speed <p>NOTE: The pulse cycle changes depending on rpm at idle</p> | <p>BATTERY VOLTAGE (11 - 14V)★</p>  <p>PBIB0529E</p> |
| | | | <p>[Engine is running]</p> <ul style="list-style-type: none"> • Warm-up condition • Engine speed: 2,000 rpm | <p>BATTERY VOLTAGE (11 - 14V)★</p>  <p>PBIA4943J</p> |

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnosis Procedure

INFOID:000000001703062

1. INSPECTION START

Turn ignition switch to START.

Is any cylinder ignited?

Yes or No

Yes >> GO TO 2.

No >> GO TO 3.

2. CHECK OVERALL FUNCTION

④ With CONSULT-II

1. Start engine.
2. Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT-II.
3. Make sure that each circuit produces a momentary engine speed drop.

| ACTIVE TEST | |
|---------------|---------|
| POWER BALANCE | |
| MONITOR | |
| ENG SPEED | XXX rpm |
| MAS A/F SE-B1 | XXX V |
| | |
| | |
| | |
| | |
| | |

PBIB0133E

⊗ Without CONSULT-II


1. Start engine.

FUEL INJECTOR

< SERVICE INFORMATION >

- Listen to each fuel injector operating sound.

Clicking noise should be heard.

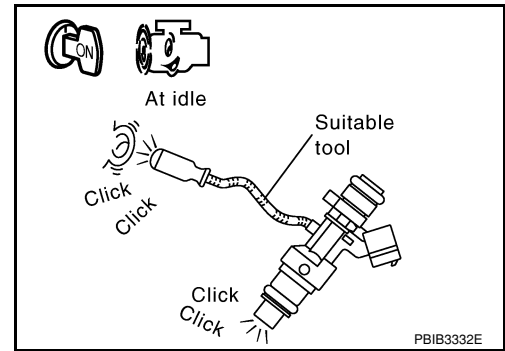


OK or NG

OK >> **INSPECTION END**

NG >> GO TO 3.

3. CHECK FUEL INJECTOR POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect fuel injector (1) harness connector.
- Turn ignition switch ON.

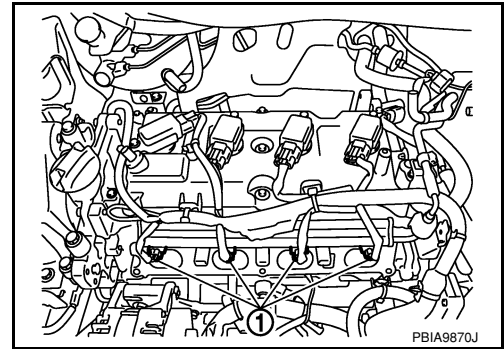


- Check voltage between fuel injector terminal 1 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

OK >> GO TO 5.

NG >> GO TO 4.

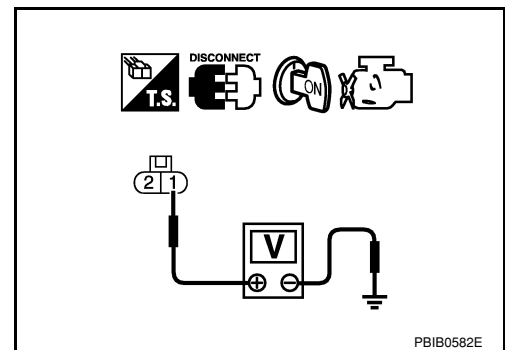

4. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- IPDM E/R harness connector E45
- 10A fuse
- Harness for open or short between fuel injector and fuse

>> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK FUEL INJECTOR OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check harness continuity between fuel injector terminal 2 and ECM terminals 25, 29, 30, 31. Refer to Wiring Diagram.

Continuity should exist.

FUEL INJECTOR

< SERVICE INFORMATION >

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 6.

NG >> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK FUEL INJECTOR

Refer to [EC-525, "Component Inspection"](#).

OK or NG

OK >> GO TO 7.

NG >> Replace fuel injector.

7. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**

Component Inspection


INFOID:000000001703063

FUEL INJECTOR

1. Disconnect fuel injector harness connector.
2. Check resistance between terminals as shown in the figure.

Resistance: 11.1 - 14.5Ω [at 10 - 60°C (50 - 140°F)]

3. If NG, replace fuel injector.

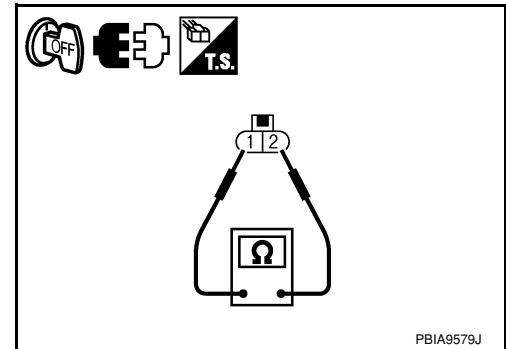

INFOID:000000001703064

Removal and Installation

FUEL INJECTOR

Refer to [EM-33](#).

FUEL PUMP

< SERVICE INFORMATION >

FUEL PUMP

Description

INFOID:000000001703065

SYSTEM DESCRIPTION

| Sensor | Input Signal to ECM | ECM Function | Actuator |
|--|---------------------|-------------------|-----------------|
| Crankshaft position sensor (POS) Camshaft position sensor (PHASE) | Engine speed* | Fuel pump control | Fuel pump relay |
| Battery | Battery voltage* | | |

*: ECM determines the start signal status by the signals of engine speed and battery voltage.


The ECM activates the fuel pump for several seconds after the ignition switch is turned ON to improve engine startability. If the ECM receives a engine speed signal from the crankshaft position sensor (POS) and camshaft position sensor (PHASE), it knows that the engine is rotating, and causes the pump to operate. If the engine speed signal is not received when the ignition switch is ON, the engine stalls. The ECM stops pump operation and prevents battery discharging, thereby improving safety. The ECM does not directly drive the fuel pump. It controls the ON/OFF fuel pump relay, which in turn controls the fuel pump.

| Condition | Fuel pump operation |
|---------------------------------|-----------------------|
| Ignition switch is turned to ON | Operates for 1 second |
| Engine running and cranking | Operates |
| Engine: Stopped | Stops in 1.5 seconds |
| Except as shown above | Stops |

COMPONENT DESCRIPTION

A turbine type design fuel pump is used in the fuel tank.

- Fuel level sensor unit and fuel pump (1)
- Fuel pressure regulator (2)
- Fuel level sensor (3)
- Fuel tank temperature sensor (4)

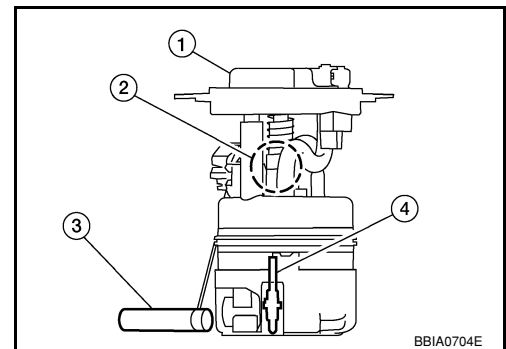

CONSULT-II Reference Value in Data Monitor Mode

INFOID:000000001703066

Specification data are reference values.

| MONITOR ITEM | CONDITION | SPECIFICATION |
|---------------|---|---------------|
| FUEL PUMP RLY | <ul style="list-style-type: none"> • For 1 second after turning ignition switch ON • Engine running or cranking | ON |
| | <ul style="list-style-type: none"> • Except above conditions | OFF |



FUEL PUMP

< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001703067

EC-F/PUMP-01

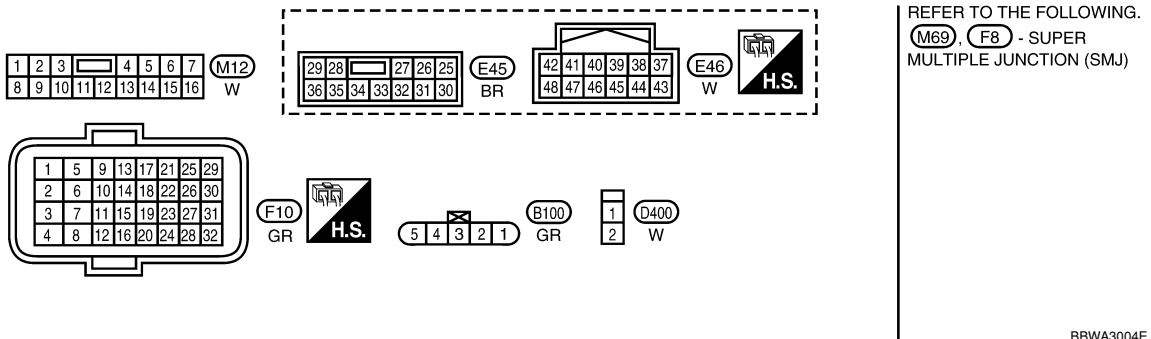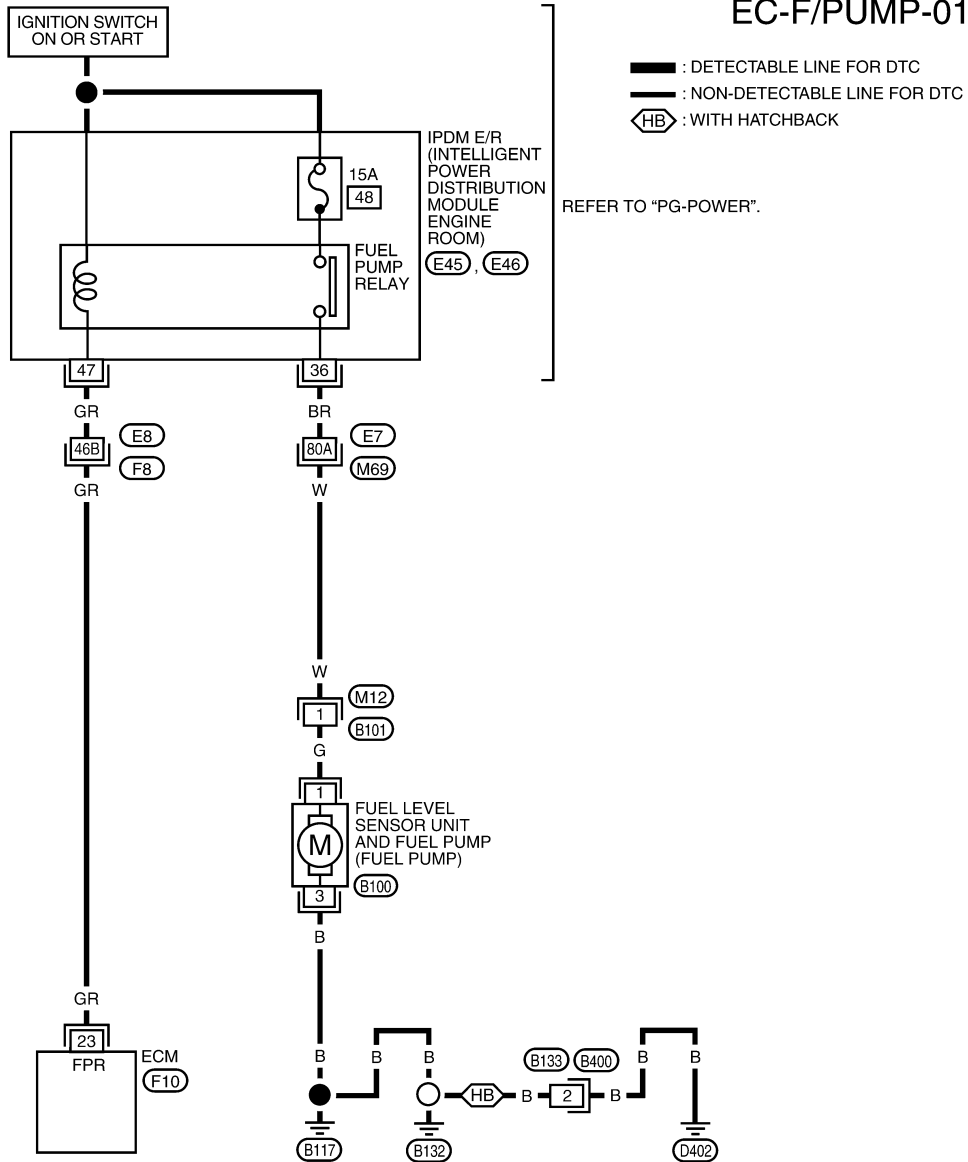

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

FUEL PUMP

< SERVICE INFORMATION >

| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------------|---------------|-----------------|---|-------------------------------|
| 23 | GR | Fuel pump relay | [Ignition switch: ON] • For 1 second after turning ignition switch ON [Engine is running] | 0 - 1.0V |
| | | | [Ignition switch: ON] • More than 1 second after turning ignition switch ON | BATTERY VOLTAGE (11 - 14V) |

Diagnosis Procedure

INFOID:000000001703068


1. CHECK OVERALL FUNCTION

- Turn ignition switch ON.
- Pinch fuel feed hose (1) with two fingers.
- Illustration shows the view with intake air duct removed.

Fuel pressure pulsation should be felt on the fuel feed hose for 1 second after ignition switch is turned ON.

OK or NG

- OK >> **INSPECTION END**
 NG >> GO TO 2.

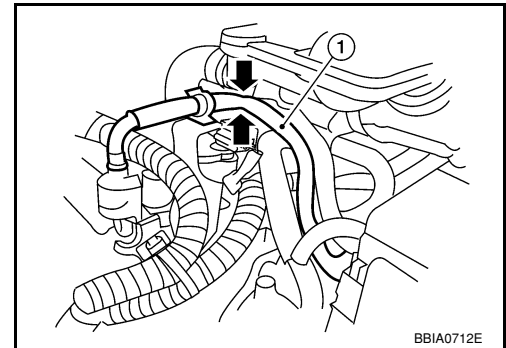

BBIA0712E


2. CHECK FUEL PUMP POWER SUPPLY CIRCUIT-I

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Turn ignition switch ON.
- Check voltage between ECM terminal 23 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

- OK >> GO TO 5.
 NG >> GO TO 3.

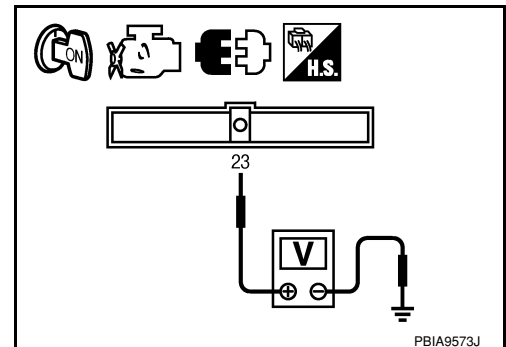

PBIA9573J


3. CHECK FUEL PUMP POWER SUPPLY CIRCUIT-II

- Turn ignition switch OFF.
- Disconnect IPDM E/R harness connector E46.
- Turn ignition switch ON.
- Check voltage between IPDM E/R terminal 47 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

- OK >> GO TO 4.
 NG >> GO TO 11.

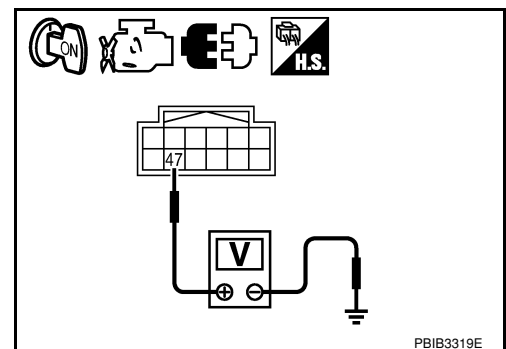

PBIB3319E

FUEL PUMP

< SERVICE INFORMATION >

4. DETECT MALFUNCTIONING PART


Check the following.

- Harness connectors E8, F8
- Harness for open or short between IPDM E/R and ECM

>> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK FUEL PUMP POWER SUPPLY CIRCUIT-III

1. Turn ignition switch OFF.
2. Reconnect all harness connectors disconnected.
3. Disconnect "fuel level sensor unit and fuel pump" harness connector (1).
- Illustration shows the view with inspection hole cover removed.
4. Turn ignition switch ON.

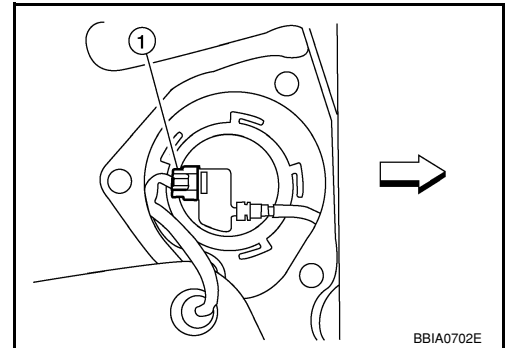


5. Check voltage between "fuel level sensor unit and fuel pump" terminal 1 and ground with CONSULT-II or tester.

Voltage: Battery voltage should exist for 1 second after ignition switch is turned ON.

OK or NG

- OK >> GO TO 9.
- NG >> GO TO 6.

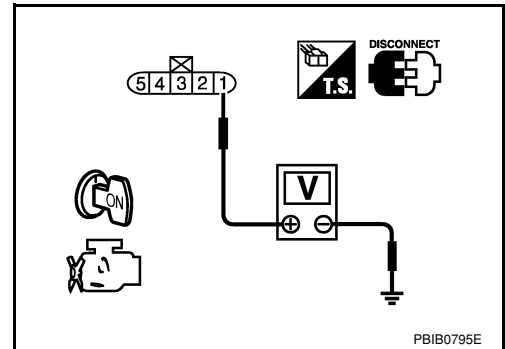

6. CHECK 15A FUSE

1. Turn ignition switch OFF.
2. Disconnect 15A fuse.
3. Check 15A fuse.

OK or NG

- OK >> GO TO 7.
- NG >> Replace fuse.

7. CHECK FUEL PUMP POWER SUPPLY CIRCUIT-IV

1. Disconnect IPDM E/R harness connector E45.
2. Check harness continuity between IPDM E/R terminal 36 and "fuel level sensor unit and fuel pump" terminal 1. Refer to Wiring Diagram.

Continuity should exist.

3. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 13.
- NG >> GO TO 8.

8. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M69, E7
- Harness connectors M12, B101

FUEL PUMP

< SERVICE INFORMATION >

- Harness for open or short between IPDM E/R and “fuel level sensor unit and fuel pump”

>> Repair open circuit or short to ground or short to power in harness or connectors.

9. CHECK FUEL PUMP GROUND CIRCUIT

1. Check harness continuity between “fuel level sensor unit and fuel pump” terminal 3 and ground. Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to power.

OK or NG

OK >> GO TO 10.

NG >> Repair or replace harness or connectors.

10. CHECK FUEL PUMP

Refer to [EC-530. "Component Inspection"](#).

OK or NG

OK >> GO TO 11.

NG >> Replace fuel pump.

11. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-26. "Removal and Installation of IPDM E/R"](#).

NG >> Repair or replace harness or connectors.

Component Inspection


INFOID:000000001703069

FUEL PUMP

1. Disconnect “fuel level sensor unit and fuel pump” harness connector.
2. Check resistance between “fuel level sensor unit and fuel pump” terminals 1 and 3.

Resistance: Approximately 0.2 - 5.0Ω [at 25°C (77°F)]

3. If NG, replace “fuel level sensor unit and fuel pump”.

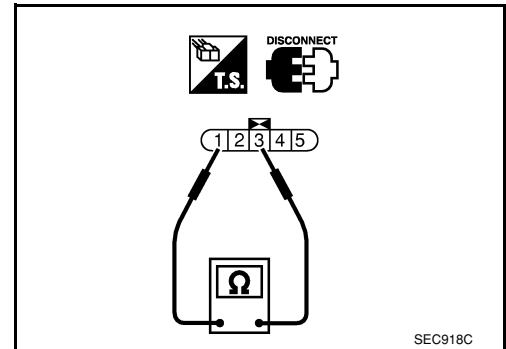

INFOID:000000001703070

Removal and Installation

FUEL PUMP

Refer to [FL-5](#).

IGNITION SIGNAL

< SERVICE INFORMATION >


IGNITION SIGNAL

Component Description

INFOID:000000001703071

IGNITION COIL & POWER TRANSISTOR

The ignition signal from the ECM is sent to and amplified by the power transistor. The power transistor turns ON and OFF the ignition coil (1) primary circuit. This ON/OFF operation induces the proper high voltage in the coil secondary circuit.

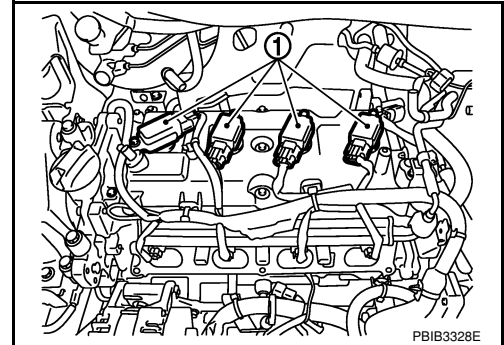

A

EC

C

D

E

F

G

H

I

J

K

L

M

N

O

P



IGNITION SIGNAL

< SERVICE INFORMATION >

INFOID:000000001703072

Wiring Diagram

EC-IGNSYS-01

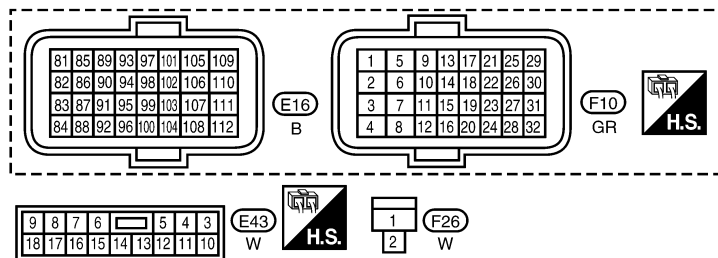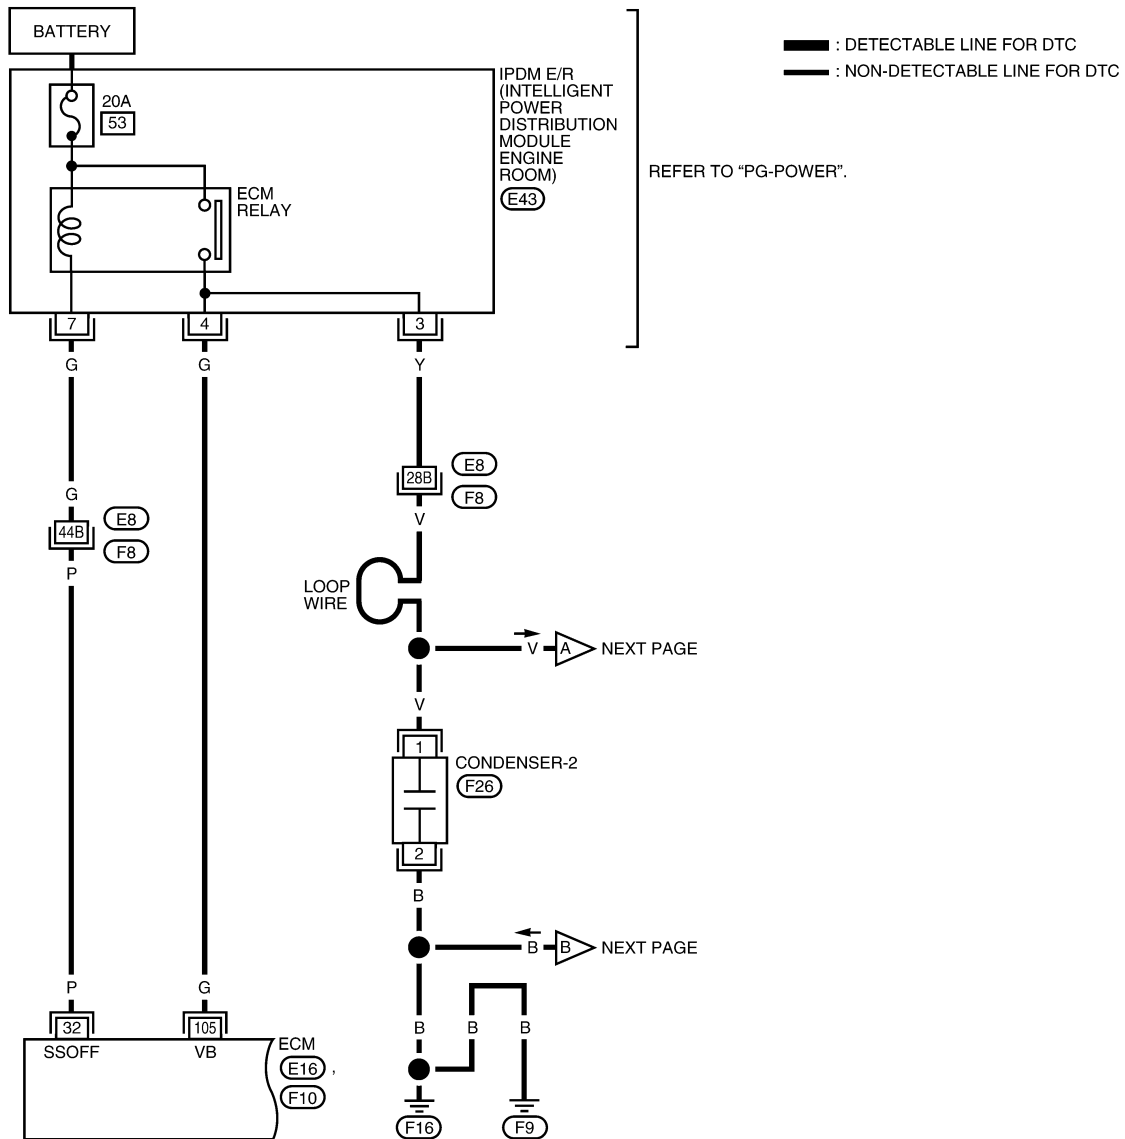

REFER TO THE FOLLOWING.

(F8) - SUPER MULTIPLE JUNCTION (SMJ)

BBWA2658E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

IGNITION SIGNAL

< SERVICE INFORMATION >

| TER- MI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|---------------------------|---------------|------------------------------|--|-------------------------------|
| 32 | P | ECM relay (Self shut-off) | [Engine is running] [Ignition switch: OFF] <ul style="list-style-type: none"> • For a few seconds after turning ignition switch OFF | 0 - 1.0V |
| | | | [Ignition switch: OFF] <ul style="list-style-type: none"> • More than a few seconds after turning ignition switch OFF | BATTERY VOLTAGE (11 - 14V) |
| 105 | G | Power supply for ECM | [Ignition switch: ON] | BATTERY VOLTAGE (11 - 14V) |

A

EC

C

D

E

F

G

H

I

J

K

L

M

N

O




P

IGNITION SIGNAL

< SERVICE INFORMATION >

EC-IGNSYS-02

— : DETECTABLE LINE FOR DTC
 - - - : NON-DETECTABLE LINE FOR DTC

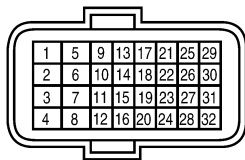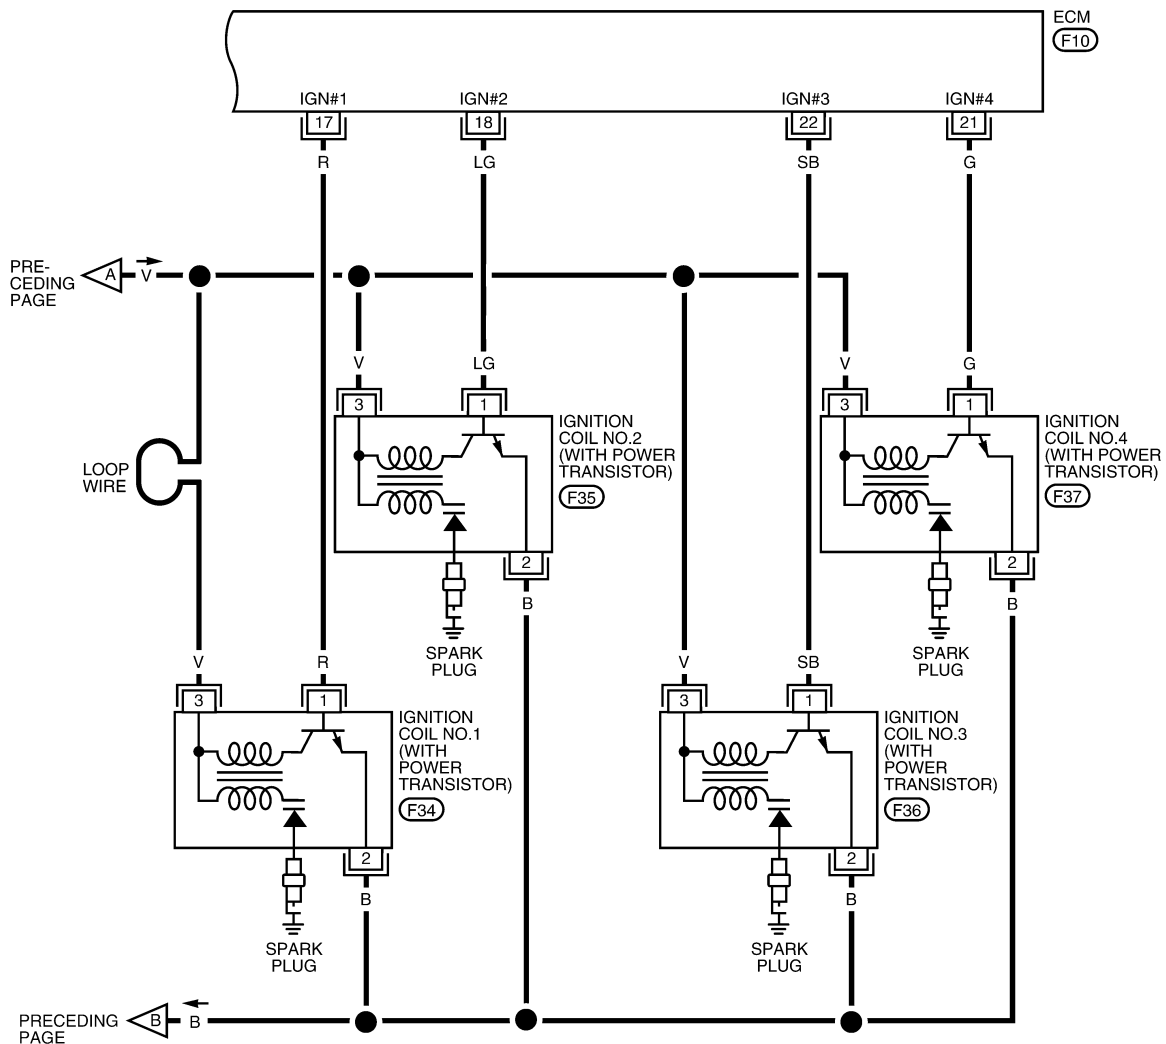

BBWA2659E



Specification data are reference values and are measured between each terminal and ground. Pulse signal is measured by CONSULT-II.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

IGNITION SIGNAL

< SERVICE INFORMATION >
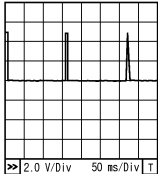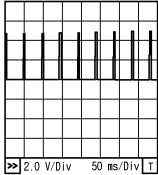
| TER-MI-NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------|------------|-----------------------|---|---|
| 17 | R | Ignition signal No. 1 | [Engine is running] • Warm-up condition • Idle speed NOTE: The pulse cycle changes depending on rpm at idle | 0 - 0.3V★  PBIA9265J |
| 18 | LG | Ignition signal No. 2 | | |
| 21 | G | Ignition signal No. 4 | | |
| 22 | SB | Ignition signal No. 3 | | 0.2 - 0.5V★  PBIA9266J |

★: Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Diagnosis Procedure

INFOID:000000001703073

1. CHECK ENGINE START

Turn ignition switch OFF, and restart engine.

Is engine running?

Yes or No

- Yes (With CONSULT-II)>>GO TO 2.
- Yes (Without CONSULT-II)>>GO TO 3.
- No >> GO TO 4.

2. CHECK OVERALL FUNCTION

With CONSULT-II

1. Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT-II.
2. Make sure that each circuit produces a momentary engine speed drop.

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 10.

| ACTIVE TEST | |
|---------------|---------|
| POWER BALANCE | |
| MONITOR | |
| ENG SPEED | XXX rpm |
| MAS A/F SE-B1 | XXX V |
| | |
| | |
| | |
| | |

PBIB0133E

3. CHECK OVERALL FUNCTION

Without CONSULT-II

1. Let engine idle.


IGNITION SIGNAL

< SERVICE INFORMATION >


- Read the voltage signal between ECM terminals 17, 18, 21, 22 and ground with an oscilloscope.
- Verify that the oscilloscope screen shows the signal wave as shown below.

NOTE:

The pulse cycle changes depending on rpm at idle.

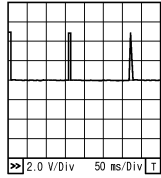

PBIA9265J

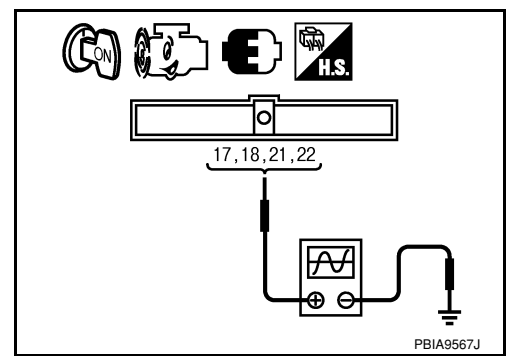

PBIA9567J

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 10.

4. CHECK IGNITION COIL POWER SUPPLY CIRCUIT-I


- Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
- Check voltage between ECM terminal 105 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

OK >> GO TO 5.


NG >> Go to [EC-137](#).

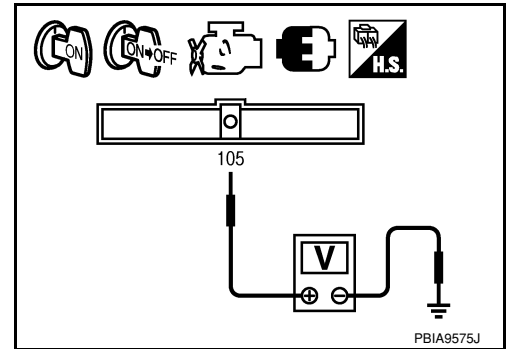

PBIA9575J

5. CHECK IGNITION COIL POWER SUPPLY CIRCUIT-II

- Turn ignition switch OFF.
- Disconnect condenser-2 (1) harness connector.
- Turn ignition switch ON.

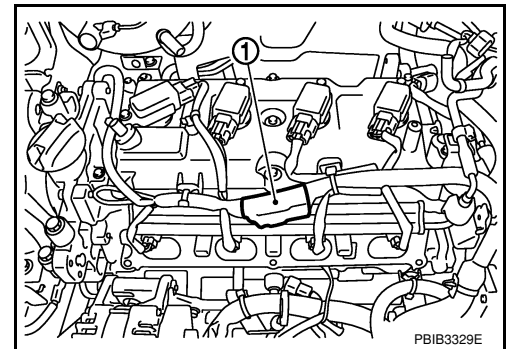

PBIB3329E


- Check voltage between condenser-2 terminal 1 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

OK >> GO TO 8.

NG >> GO TO 6.

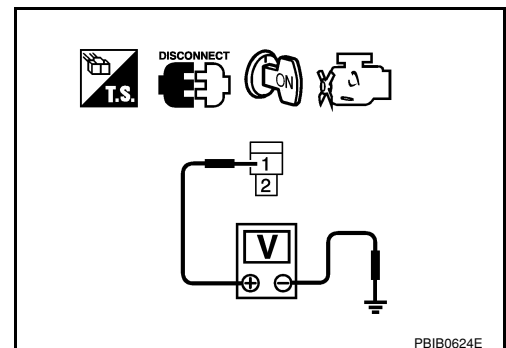

PBIB0624E

6. CHECK IGNITION COIL POWER SUPPLY CIRCUIT-III

- Turn ignition switch OFF.

IGNITION SIGNAL

< SERVICE INFORMATION >

2. Disconnect IPDM E/R harness connector E43.
3. Check harness continuity between IPDM E/R terminal 3 and condenser-2 terminal 1.
Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

OK >> Go to [EC-137](#).

NG >> GO TO 7.

7. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness for open or short between IPDM E/R and condenser-2

>> Repair open circuit or short to ground or short to power in harness or connectors.

8. CHECK CONDENSER-2 GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Check harness continuity between condenser-2 terminal 2 and ground.
Refer to Wiring Diagram.

Continuity should exist.

3. Also check harness for short to power.

OK or NG

OK >> GO TO 9.

NG >> Repair open circuit or short to power in harness or connectors.

9. CHECK CONDENSER-2

Refer to [EC-538. "Component Inspection"](#)


OK or NG

OK >> GO TO 10.

NG >> Replace condenser-2.

10. CHECK IGNITION COIL POWER SUPPLY CIRCUIT-IV

1. Turn ignition switch OFF.
2. Reconnect all harness connectors disconnected.
3. Disconnect ignition coil (1) harness connector.
4. Turn ignition switch ON.

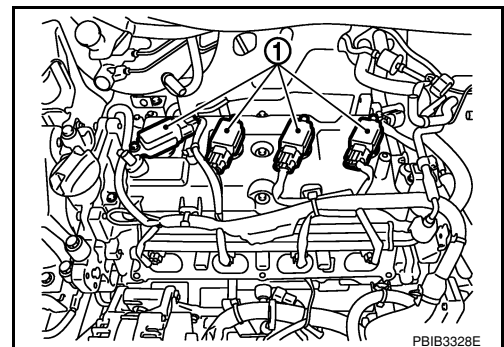

IGNITION SIGNAL


< SERVICE INFORMATION >

5. Check voltage between ignition coil terminal 3 and ground with CONSULT-II or tester.

Voltage: Battery voltage

OK or NG

- OK >> GO TO 12.
- NG >> GO TO 11.

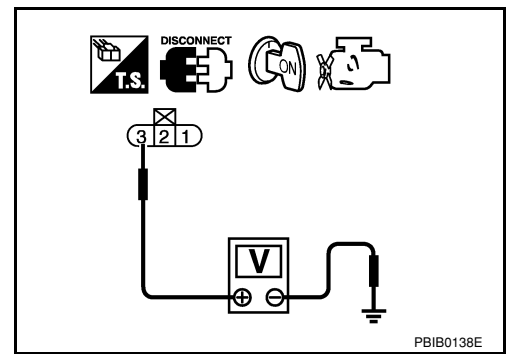

11. DETECT MALFUNCTIONING PART

Check the following.

- Harness connector F8
- Harness for open or short between ignition coil and harness connector F8

>> Repair or replace harness or connectors.

12. CHECK IGNITION COIL GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Check harness continuity between ignition coil terminal 2 and ground.
Refer to Wiring Diagram.

Continuity should exist.

3. Also check harness for short to power.

OK or NG

- OK >> GO TO 13.
- NG >> Repair open circuit or short to power in harness or connectors.

13. CHECK IGNITION COIL OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Disconnect ECM harness connector.
2. Check harness continuity between ECM terminals 17, 18, 21, 22 and ignition coil terminal 1.
Refer to Wiring Diagram.

Continuity should exist.

3. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 14.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

14. CHECK IGNITION COIL WITH POWER TRANSISTOR

Refer to [EC-538, "Component Inspection"](#).

OK or NG

- OK >> GO TO 15.
- NG >> Replace ignition coil with power transistor.

15. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

>> **INSPECTION END**

Component Inspection

INFOID:000000001703074

IGNITION COIL WITH POWER TRANSISTOR

CAUTION:

Do the following procedure in the place where ventilation is good without the combustible.

IGNITION SIGNAL

< SERVICE INFORMATION >

1. Turn ignition switch OFF.
2. Disconnect ignition coil harness connector.
3. Check resistance between ignition coil terminals as follows.

| Terminal No. (Polarity) | Resistance Ω [at 25°C (77°F)] |
|-------------------------|--------------------------------------|
| 1 and 2 | Except 0 or ∞ |
| 1 and 3 | Except 0 |
| 2 and 3 | |

4. If NG, replace ignition coil with power transistor.
If OK, go to next step.
5. Turn ignition switch OFF.
6. Reconnect all harness connectors disconnected.
7. Remove fuel pump fuse (1) in IPDM E/R (2) to release fuel pressure.

NOTE:

Do not use CONSULT-II to release fuel pressure, or fuel pressure applies again during the following procedure.

- \leftarrow : Vehicle front

8. Start engine.
9. After engine stalls, crank it two or three times to release all fuel pressure.
10. Turn ignition switch OFF.
11. Remove all ignition coil harness connectors to avoid the electrical discharge from the ignition coils.
12. Remove ignition coil and spark plug of the cylinder to be checked.
13. Crank engine for 5 seconds or more to remove combustion gas in the cylinder.
14. Connect spark plug and harness connector to ignition coil.
15. Fix ignition coil using a rope etc. with gap of 13 - 17 mm between the edge of the spark plug and grounded metal portion as shown in the figure.
16. Crank engine for about 3 seconds, and check whether spark is generated between the spark plug and the grounded metal portion.

Spark should be generated.

CAUTION:

- Do not approach to the spark plug and the ignition coil within 50cm. Be careful not to get an electrical shock while checking, because the electrical discharge voltage becomes 20kV or more.
- It might cause to damage the ignition coil if the gap of more than 17 mm is taken.




NOTE:

When the gap is less than 13 mm, the spark might be generated even if the coil is malfunctioning.

17. If NG, replace ignition coil with power transistor.

CONDENSER-2

1. Turn ignition switch OFF.
2. Disconnect condenser-2 harness connector.

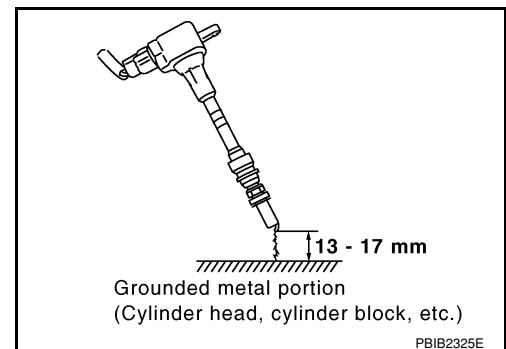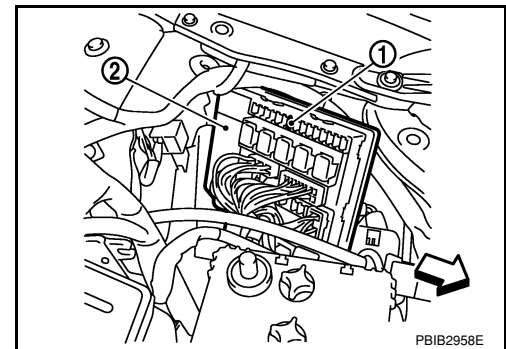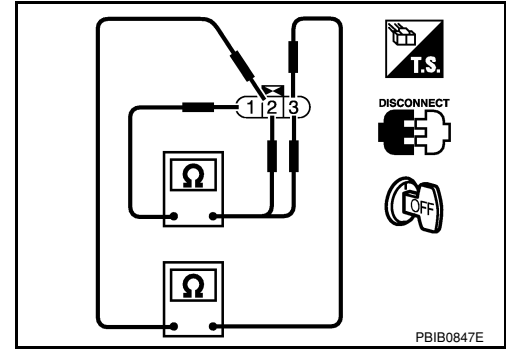

A
EC
C
D
E
F
G
H
I
J
K
L
M
N
O
P


IGNITION SIGNAL

< SERVICE INFORMATION >

3. Check resistance between condenser-2 terminals 1 and 2.

Resistance: Above 1 M Ω [at 25°C (77°F)]

4. If NG, replace condenser-2.

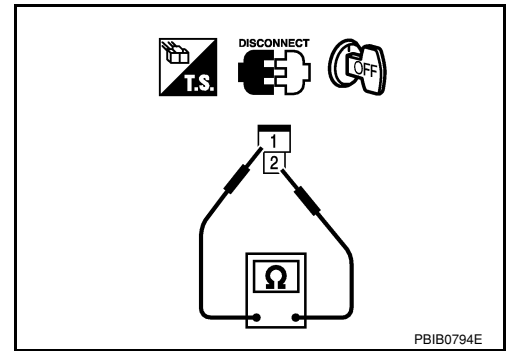

INFOID:000000001703075

Removal and Installation

IGNITION COIL WITH POWER TRANSISTOR

Refer to [EM-30](#).

REFRIGERANT PRESSURE SENSOR

< SERVICE INFORMATION >



REFRIGERANT PRESSURE SENSOR

Component Description

INFOID:000000001703076

The refrigerant pressure sensor (1) is installed at the condenser of the air conditioner system. The sensor uses an electrostatic volume pressure transducer to convert refrigerant pressure to voltage. The voltage signal is sent to ECM, and ECM controls cooling fan system.

- ↵: Vehicle front

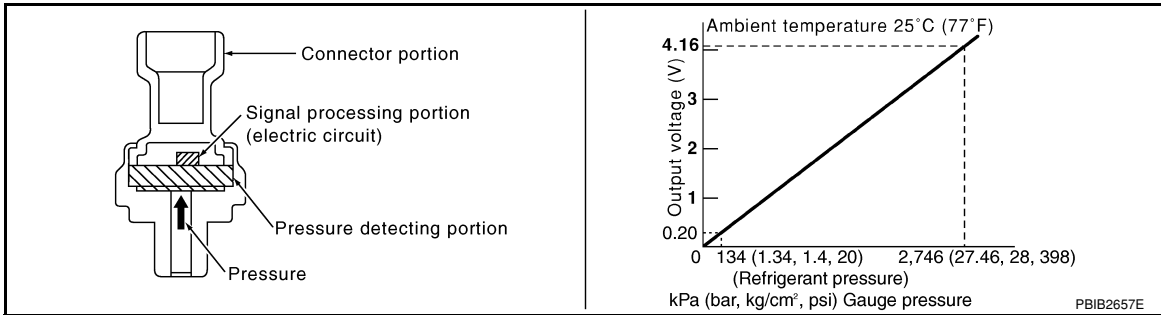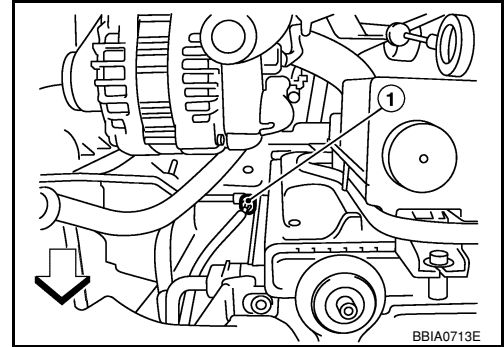

REFRIGERANT PRESSURE SENSOR



< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000001703077

EC-RP/SEN-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

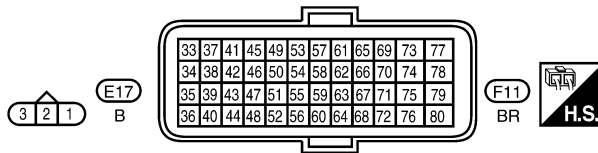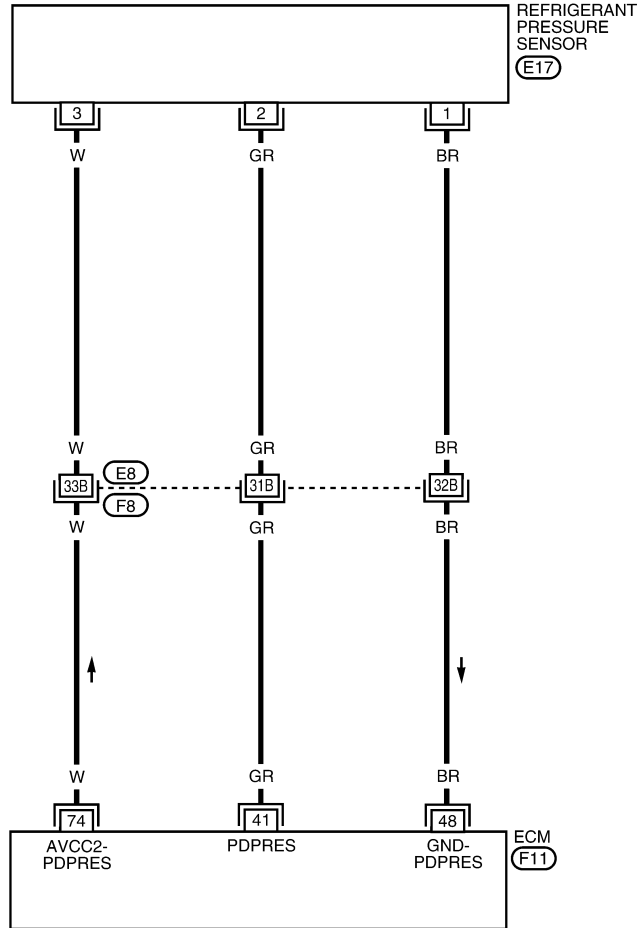

REFER TO THE FOLLOWING.

(F8) - SUPER MULTIPLE JUNCTION (SMJ)

BBWA2662E

Specification data are reference values and are measured between each terminal and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

REFRIGERANT PRESSURE SENSOR

< SERVICE INFORMATION >

| TERMI- NAL NO. | WIRE COLOR | ITEM | CONDITION | DATA (DC Voltage) |
|----------------------|---------------|--|--|-------------------|
| 41 | GR | Refrigerant pressure sensor | [Engine is running] • Warm-up condition • Both A/C switch and blower fan switch: ON (Compressor operates) | 1.0 - 4.0V |
| 48 | BR | Sensor ground (Refrigerant pressure sensor) | [Engine is running] • Warm-up condition • Idle speed | Approximately 0V |
| 74 | W | Sensor power supply (Refrigerant pressure sensor) | [Ignition switch: ON] | Approximately 5V |

Diagnosis Procedure

INFOID:000000001703078


1. CHECK REFRIGERANT PRESSURE SENSOR OVERALL FUNCTION

1. Start engine and warm it up to normal operating temperature.
2. Turn A/C switch and blower fan switch ON.
3. Check voltage between ECM terminal 41 and ground with CONSULT-II or tester.

Voltage: 1.0 - 4.0V


OK or NG

- OK >> **INSPECTION END**
 NG >> GO TO 2.

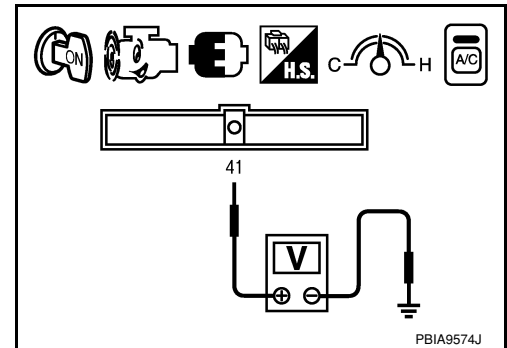

2. CHECK GROUND CONNECTIONS

1. Turn A/C switch and blower fan switch OFF.
2. Stop engine and turn ignition switch OFF.
3. Loosen and retighten ground screw on the body.
Refer to [EC-142. "Ground Inspection"](#).

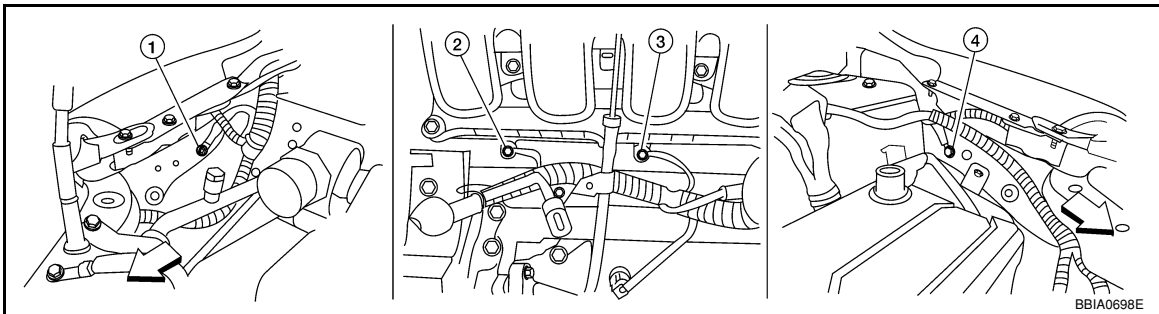

← Vehicle front

1. Body ground E24
2. Engine ground F9
3. Engine ground F16
4. Body ground E15

OK or NG


- OK >> GO TO 3.
 NG >> Repair or replace ground connections.

3. CHECK REFRIGERANT PRESSURE SENSOR POWER SUPPLY CIRCUIT

REFRIGERANT PRESSURE SENSOR

< SERVICE INFORMATION >

1. Disconnect refrigerant pressure sensor (1) harness connector.
 - ⇐: Vehicle front
2. Turn ignition switch ON.

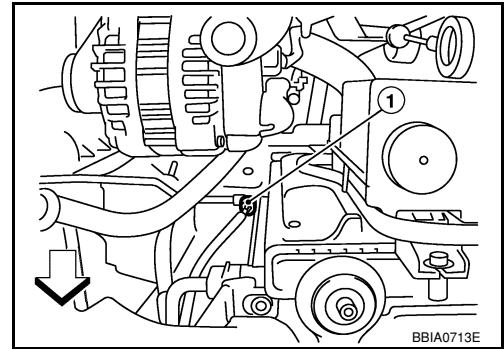


3. Check voltage between refrigerant pressure sensor terminal 3 and ground with CONSULT-II or tester.

Voltage: Approximately 5V

OK or NG

- OK >> GO TO 5.
- NG >> GO TO 4.

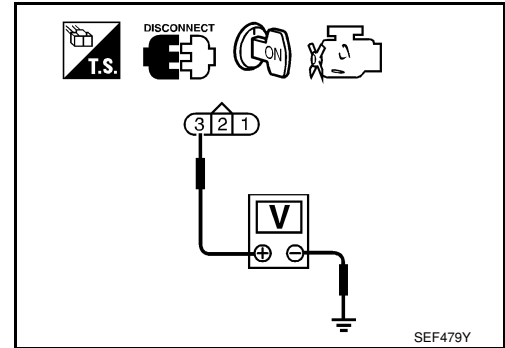

4. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness for open or short between refrigerant pressure sensor and ECM

>> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK REFRIGERANT PRESSURE SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect ECM harness connector.
3. Check harness continuity between refrigerant pressure sensor terminal 1 and ECM terminal 48. Refer to Wiring Diagram.

Continuity should exist.

4. Also check harness for short to ground and short to power.

OK or NG

- OK >> GO TO 7.
- NG >> GO TO 6.

6. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness for open or short between refrigerant pressure sensor and ECM

>> Repair open circuit or short to ground or short to power in harness or connectors.

7. CHECK REFRIGERANT PRESSURE SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check harness continuity between refrigerant pressure sensor terminal 2 and ECM terminal 41. Refer to Wiring Diagram.

Continuity should exist.

2. Also check harness for short to ground and short to power.

OK or NG

REFRIGERANT PRESSURE SENSOR

< SERVICE INFORMATION >

- OK >> GO TO 9.
- NG >> GO TO 8.

A

8. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness for open or short between refrigerant pressure sensor and ECM

EC

>> Repair open circuit or short to ground or short to power in harness or connectors.

C

9. CHECK INTERMITTENT INCIDENT

Refer to [EC-136](#).

D

OK or NG

- OK >> Replace refrigerant pressure sensor.
- NG >> Repair or replace.

E

Removal and Installation

INFOID:000000001703079

REFRIGERANT PRESSURE SENSOR

F

Refer to [MTC-81](#). "[Removal and Installation of Refrigerant Pressure Sensor](#)".

G

H

I

J

K

L

M

N

O



P

MIL AND DATA LINK CONNECTOR

< SERVICE INFORMATION >

EC-MIL/DL-02

A
EC
C
D
E
F
G
H
I
J
K
L
M
N
O
P

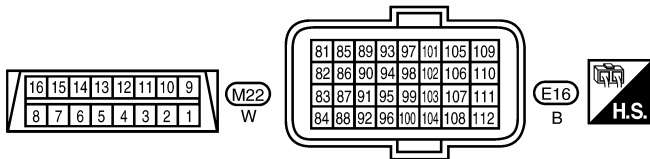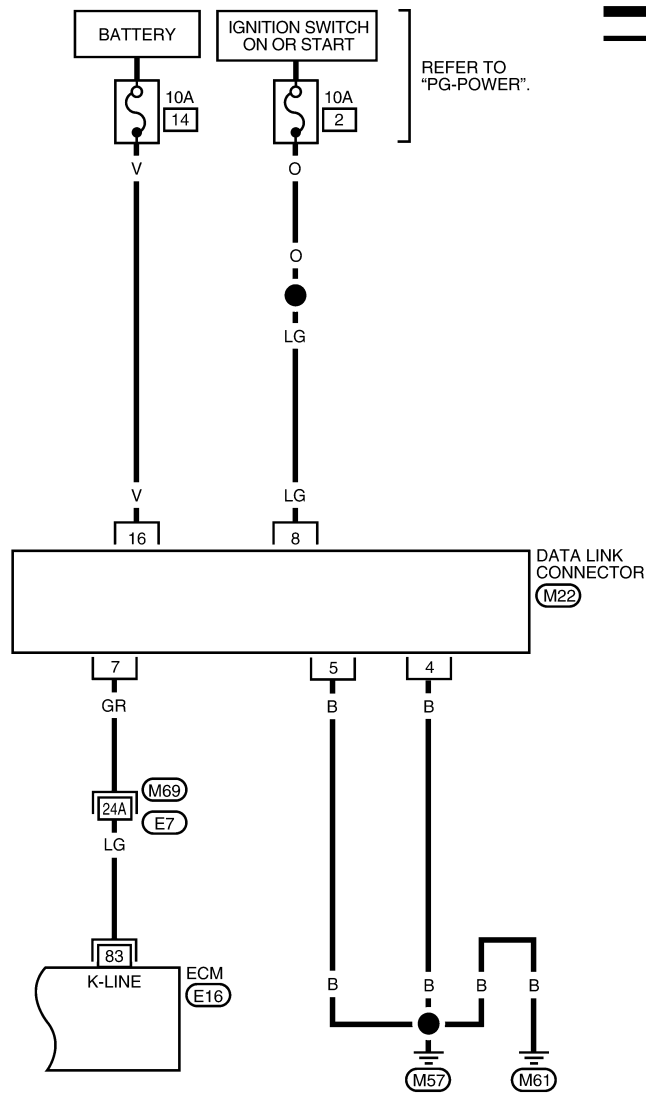

REFER TO THE FOLLOWING.

(M69) - SUPER MULTIPLE JUNCTION (SMJ)

BBWA2668E

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE INFORMATION >

SERVICE DATA AND SPECIFICATIONS (SDS)

Fuel Pressure

INFOID:000000001703081

| | |
|-----------------------|--|
| Fuel pressure at idle | Approximately 350 kPa (3.57 kg/cm ² , 51 psi) |
|-----------------------|--|

Idle Speed and Ignition Timing

INFOID:000000001703082

| Target idle speed | A/T | No load* (in P or N position) | 700 ± 50 rpm |
|---------------------|-----|--------------------------------|-----------------|
| | CVT | No load* (In P or N position) | |
| | M/T | No load* (in Neutral position) | |
| Air conditioner: ON | A/T | In P or N position | 850 rpm or more |
| | CVT | In P or N position | |
| | M/T | In Neutral position | |
| Ignition timing | A/T | In P or N position | 13 ± 5° BTDC |
| | CVT | In P or N position | |
| | M/T | In Neutral position | |

*: Under the following conditions:

- Air conditioner switch: OFF
- Electric load: OFF (Lights, heater fan & rear window defogger)
- Steering wheel: Kept in straight-ahead position

Calculated Load Value

INFOID:000000001703083

| | Calculated load value% (Using CONSULT-II or GST) |
|--------------|--|
| At idle | 10 - 35 |
| At 2,500 rpm | 10 - 35 |

Mass Air Flow Sensor

INFOID:000000001703084

| | |
|---|--|
| Supply voltage | Battery voltage (11 - 14V) |
| Output voltage at idle | 1.0 - 1.3*V |
| Mass air flow (Using CONSULT-II or GST) | 1.0 - 4.0 g·m/sec at idle* 2.0 - 10.0 g·m/sec at 2,500 rpm* |

*: Engine is warmed up to normal operating temperature and running under no load.

Intake Air Temperature Sensor

INFOID:000000001703085

| Temperature °C (°F) | Resistance kΩ |
|---------------------|---------------|
| 25 (77) | 1.800 - 2.200 |

Engine Coolant Temperature Sensor

INFOID:000000001703086

| Temperature °C (°F) | Resistance kΩ |
|---------------------|---------------|
| 20 (68) | 2.1 - 2.9 |
| 50 (122) | 0.68 - 1.00 |
| 90 (194) | 0.236 - 0.260 |

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE INFORMATION >

Air Fuel Ratio (A/F) Sensor 1 Heater

INFOID:000000001703087

A

| | |
|-----------------------------|-------------|
| Resistance [at 25°C (77°F)] | 1.8 - 2.44Ω |
|-----------------------------|-------------|

Heated Oxygen sensor 2 Heater

INFOID:000000001703088

EC

| | |
|-----------------------------|------------|
| Resistance [at 25°C (77°F)] | 3.4 - 4.4Ω |
|-----------------------------|------------|

C

Crankshaft Position Sensor (POS)

INFOID:000000001703089

Refer to [EC-301, "Component Inspection"](#).

D

Camshaft Position Sensor (PHASE)

INFOID:000000001703090

Refer to [EC-307, "Component Inspection"](#).

E

Throttle Control Motor

INFOID:000000001703091

F

| | |
|-----------------------------|-----------------------|
| Resistance [at 25°C (77°F)] | Approximately 1 - 15Ω |
|-----------------------------|-----------------------|

Fuel Injector

INFOID:000000001703092

G

| | |
|--|--------------|
| Resistance [at 10 - 60°C (50 - 140°F)] | 11.4 - 14.5Ω |
|--|--------------|

H

Fuel Pump

INFOID:000000001703093

| | |
|-----------------------------|--------------------------|
| Resistance [at 25°C (77°F)] | Approximately 0.2 - 5.0Ω |
|-----------------------------|--------------------------|

I

J

K

L

M

N

O

P