

SECTION HAC

HEATER & AIR CONDITIONING CONTROL SYSTEM

CONTENTS

MANUAL AIR CONDITIONING		
PRECAUTION	3	
PRECAUTIONS	3	
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	3	
Precaution for Work	3	
Working with HFC-134a (R-134a)	3	
Service Equipment	4	
PREPARATION	7	
PREPARATION	7	
Special Service Tool	7	
Commercial Service Tool	7	
SYSTEM DESCRIPTION	8	
COMPONENT PARTS	8	
Component Parts Location	8	
Component Description	9	
SYSTEM	10	
MANUAL AIR CONDITIONING SYSTEM	10	
MANUAL AIR CONDITIONING SYSTEM : System Diagram	10	
MANUAL AIR CONDITIONING SYSTEM : System Description	10	
MANUAL AIR CONDITIONING SYSTEM : Compressor Control	10	
MANUAL AIR CONDITIONING SYSTEM : Door Control	11	
OPERATION	14	
Switch Name and Function	14	
DIAGNOSIS SYSTEM (BCM)	15	
COMMON ITEM	15	
COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)	15	
AIR CONDITIONER	16	
AIR CONDITIONER : CONSULT Function (BCM - AIR CONDITIONER)	16	
ECU DIAGNOSIS INFORMATION	17	
BCM, ECM, IPDM E/R	17	
List of ECU Reference	17	
WIRING DIAGRAM	18	
MANUAL AIR CONDITIONING SYSTEM	18	
Wiring Diagram	18	
MANUAL HEATER SYSTEM	23	
Wiring Diagram	23	
BASIC INSPECTION	25	
DIAGNOSIS AND REPAIR WORKFLOW	25	
Workflow	25	
OPERATION INSPECTION	27	
Work Procedure	27	
DTC/CIRCUIT DIAGNOSIS	29	
A/C ON SIGNAL	29	
Component Function Check	29	
Diagnosis Procedure	29	
Component Inspection	30	
BLOWER FAN ON SIGNAL	32	
Component Function Check	32	
Diagnosis Procedure	32	
A/C INDICATOR	34	
Diagnosis Procedure	34	
FRONT BLOWER MOTOR	35	
Description	35	

A

B

C

D

E

F

G

H

HAC

J

K

L

M

N

O

P

Diagnosis Procedure	35	CONTROL PANEL	45
Component Inspection (Front Blower Motor)	37	Exploded View	45
Component Inspection (Blower Relay)	37	Removal and Installation	45
Component Inspection (Front Blower Motor Re-		THERMO CONTROL AMPLIFIER	46
sistor)	37	Exploded View	46
Component Inspection (Fan Switch)	37	Removal and Installation	46
MAGNET CLUTCH	39	REFRIGERANT PRESSURE SENSOR	47
Description	39	Removal and Installation for Refrigerant Pressure	
Component Function Check	39	Sensor	47
Diagnosis Procedure	39	BLOWER FAN RESISTOR	48
SYMPTOM DIAGNOSIS	41	Exploded View	48
MANUAL AIR CONDITIONING SYSTEM	41	Removal and Installation	48
Symptom Table	41	DOOR CABLE	49
INSUFFICIENT COOLING	42	Exploded View	49
Description	42	INTAKE DOOR CABLE	49
Diagnosis Procedure	42	INTAKE DOOR CABLE : Removal and Installation	
INSUFFICIENT HEATING	43	49
Description	43	INTAKE DOOR CABLE : Adjustment	49
Diagnosis Procedure	43	MODE DOOR CABLE	50
COMPRESSOR DOES NOT OPERATE	44	MODE DOOR CABLE : Removal and Installation...	50
Description	44	MODE DOOR CABLE : Adjustment	50
Diagnosis Procedure	44	AIR MIX DOOR CABLE	50
UNIT REMOVAL AND INSTALLATION	45	AIR MIX DOOR CABLE : Removal and Installation	
		50
		AIR MIX DOOR CABLE : Adjustment	51

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000007732969

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution for Work

INFOID:000000007733812

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and prevent them from being dropped.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After installation is complete, be sure to check that each part works properly.
- Follow the steps below to clean components.
 - Water soluble dirt: Dip a soft cloth into lukewarm water, and wring the water out of the cloth to wipe the dirty area. Then rub with a soft and dry cloth.
 - Oily dirt: Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%), and wipe the dirty area. Then dip a cloth into fresh water, and wring the water out of the cloth to wipe the detergent off. Then rub with a soft and dry cloth.
- Do not use organic solvent such as thinner, benzene, alcohol, or gasoline.
- For genuine leather seats, use a genuine leather seat cleaner.

Working with HFC-134a (R-134a)

INFOID:000000007732972

WARNING:

- CFC-12 (R-12) refrigerant and HFC-134a (R-134a) refrigerant are not compatible. If the refrigerants are mixed compressor failure is likely to occur. Refer to [HA-5. "Precautions For Refrigerant System"](#)

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

PRECAUTIONS

< PRECAUTION >

[MANUAL AIR CONDITIONING]

- Service".** To determine the purity of HFC-134a (R-134a) in the vehicle and recovery tank, use Refrigerant Recovery/Recycling Recharging equipment and Refrigerant Identifier.
- Use only specified oil for the HFC-134a (R-134a) A/C system and HFC-134a (R-134a) components. If oil other than that specified is used, compressor failure is likely to occur.
 - The specified HFC-134a (R-134a) oil rapidly absorbs moisture from the atmosphere. The following handling precautions must be observed:
 - When removing refrigerant components from a vehicle, immediately cap (seal) the component to minimize the entry of moisture from the atmosphere.
 - When installing refrigerant components to a vehicle, do not remove the caps (unseal) until just before connecting the components. Connect all refrigerant loop components as quickly as possible to minimize the entry of moisture into system.
 - Only use the specified oil from a sealed container. Immediately reseal containers of oil. Without proper sealing, oil will become moisture saturated and should not be used.
 - Avoid breathing A/C refrigerant and oil vapor or mist. Exposure may irritate eyes, nose and throat. Remove HFC-134a (R-134a) from the A/C system using certified service equipment meeting requirements of SAE J2210 [HFC-134a (R-134a) recycling equipment], or J2209 [HFC-134a (R-134a) recycling equipment]. If accidental system discharge occurs, ventilate work area before resuming service. Additional health and safety information may be obtained from refrigerant and oil manufacturers.
 - Do not allow A/C oil to come in contact with styrofoam parts. Damage may result.

CONTAMINATED REFRIGERANT

If a refrigerant other than pure HFC-134a (R-134a) is identified in a vehicle, your options are:

- Explain to the customer that environmental regulations prohibit the release of contaminated refrigerant into the atmosphere.
- Explain that recovery of the contaminated refrigerant could damage your service equipment and refrigerant supply.
- Suggest the customer return the vehicle to the location of previous service where the contamination may have occurred.
- If you choose to perform the repair, recover the refrigerant using only **dedicated equipment and containers. Do not recover contaminated refrigerant into your existing service equipment.** If your facility does not have dedicated recovery equipment, you may contact a local refrigerant product retailer for available service. This refrigerant must be disposed of in accordance with all federal and local regulations. In addition, replacement of all refrigerant system components on the vehicle is recommended.
- If the vehicle is within the warranty period, the air conditioner warranty is void. Please contact NISSAN Customer Affairs for further assistance.

Service Equipment

INFOID:000000007732973

RECOVERY/RECYCLING EQUIPMENT

Follow the manufacturer's instructions for machine operation and machine maintenance. Never introduce any refrigerant other than that specified into the machine.

ELECTRONIC LEAK DETECTOR

Follow the manufacturer's instructions for tester operation and tester maintenance.

VACUUM PUMP

PRECAUTIONS

< PRECAUTION >


The oil contained inside the vacuum pump is not compatible with the specified oil for HFC-134a (R-134a) A/C systems. The vent side of the vacuum pump is exposed to atmospheric pressure so the vacuum pump oil may migrate out of the pump into the service hose. This is possible when the pump is switched off after evacuation (vacuuming) and hose is connected to it.

To prevent this migration, use a manual valve situated near the hose-to-pump connection, as follows.

- Usually vacuum pumps have a manual isolator valve as part of the pump. Close this valve to isolate the service hose from the pump.
- For pumps without an isolator, use a hose equipped with a manual shut-off valve near the pump end. Close the valve to isolate the hose from the pump.
- If the hose has an automatic shut off valve, disconnect the hose from the pump: as long as the hose is connected, the valve is open and lubricating oil may migrate.


Some one-way valves open when vacuum is applied and close under a no vacuum condition. Such valves may restrict the pump's ability to pull a deep vacuum and are not recommended.

[MANUAL AIR CONDITIONING]

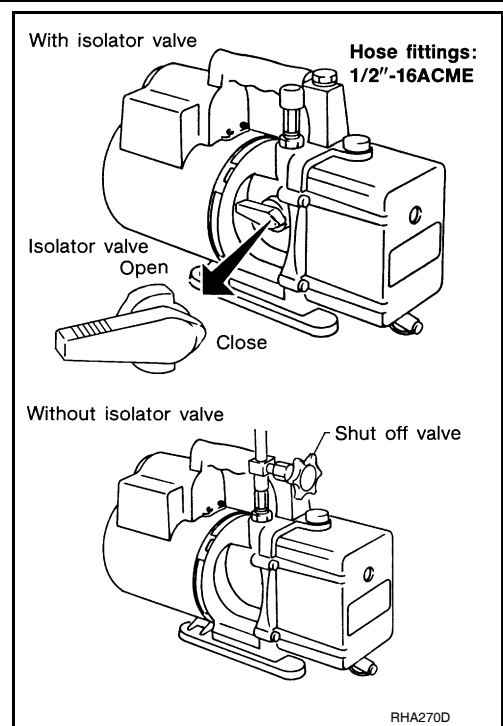


MANIFOLD GAUGE SET

Be certain that the gauge face indicates R-134a or 134a. Make sure the gauge set has 1/2"-16 ACME threaded connections for service hoses. Confirm the set has been used only with refrigerant HFC-134a (R-134a) along with specified oil.

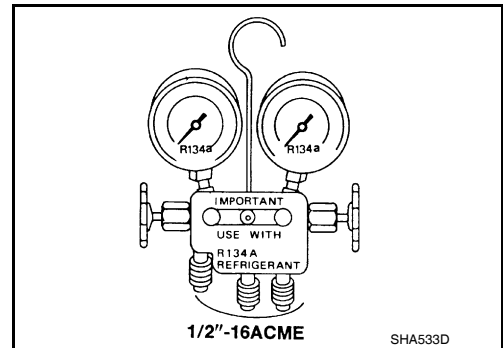

SERVICE HOSES

Be certain that the service hoses display the markings described (colored hose with black stripe). All hoses must include positive shut-off devices (either manual or automatic) near the end of the hoses opposite the manifold gauge.

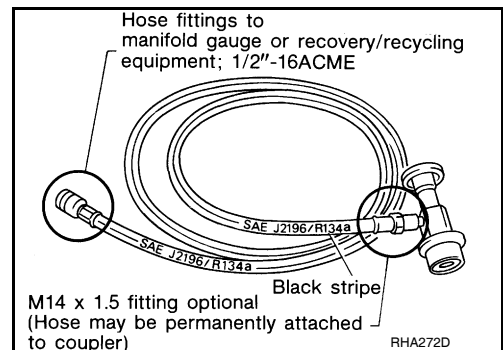

SERVICE COUPLERS

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P


PRECAUTIONS

< PRECAUTION >

Never attempt to connect HFC-134a (R-134a) service couplers to a CFC-12 (R-12) A/C system. The HFC-134a (R-134a) couplers will not properly connect to the CFC-12 (R-12) system. However, if an improper connection is attempted, discharging and contamination may occur.


Shut-off valve rotation	A/C service valve
Clockwise	Open
Counterclockwise	Close

[MANUAL AIR CONDITIONING]

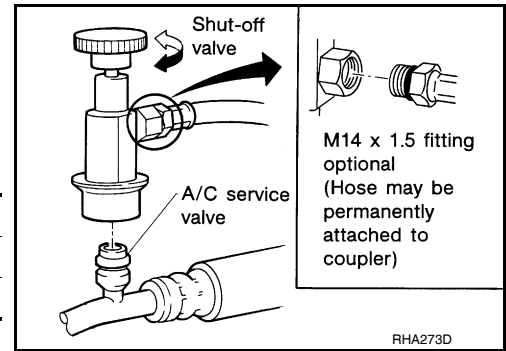

WEIGHT SCALE

Verify that no refrigerant other than HFC-134a (R-134a) and specified oils have been used with the weight scale. If the weight scale controls refrigerant flow electronically, the hose fitting must be 1/2"-16 ACME.

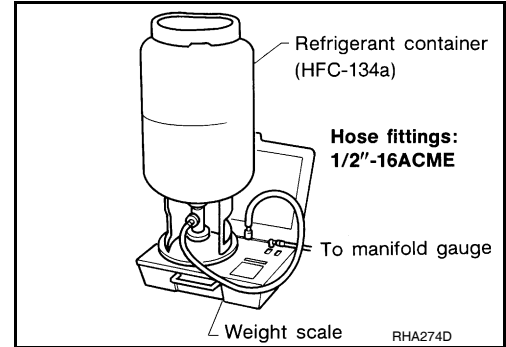

CHARGING CYLINDER

Using a charging cylinder is not recommended. Refrigerant may be vented into air from cylinder's top valve when filling the cylinder with refrigerant. Also, the accuracy of the cylinder is generally less than that of an electronic scale or of quality recycle/recharge equipment.

PREPARATION

< PREPARATION >

[MANUAL AIR CONDITIONING]


PREPARATION

PREPARATION

Special Service Tool


INFOID:000000007732970

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

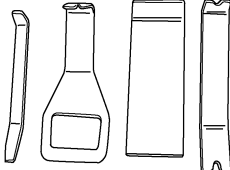Tool number (Kent-Moore No.) Tool name	Description
— (J-46534) Trim Tool Set <div style="text-align: center;">  <p>AWJIA0483ZZ</p> </div>	Removing trim components

Commercial Service Tool

INFOID:000000007732971

Tool name	Description
Power tool <div style="text-align: center;">  <p>PIIB1407E</p> </div>	Loosening bolts, screws and nuts

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P


HAC

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:000000007207651

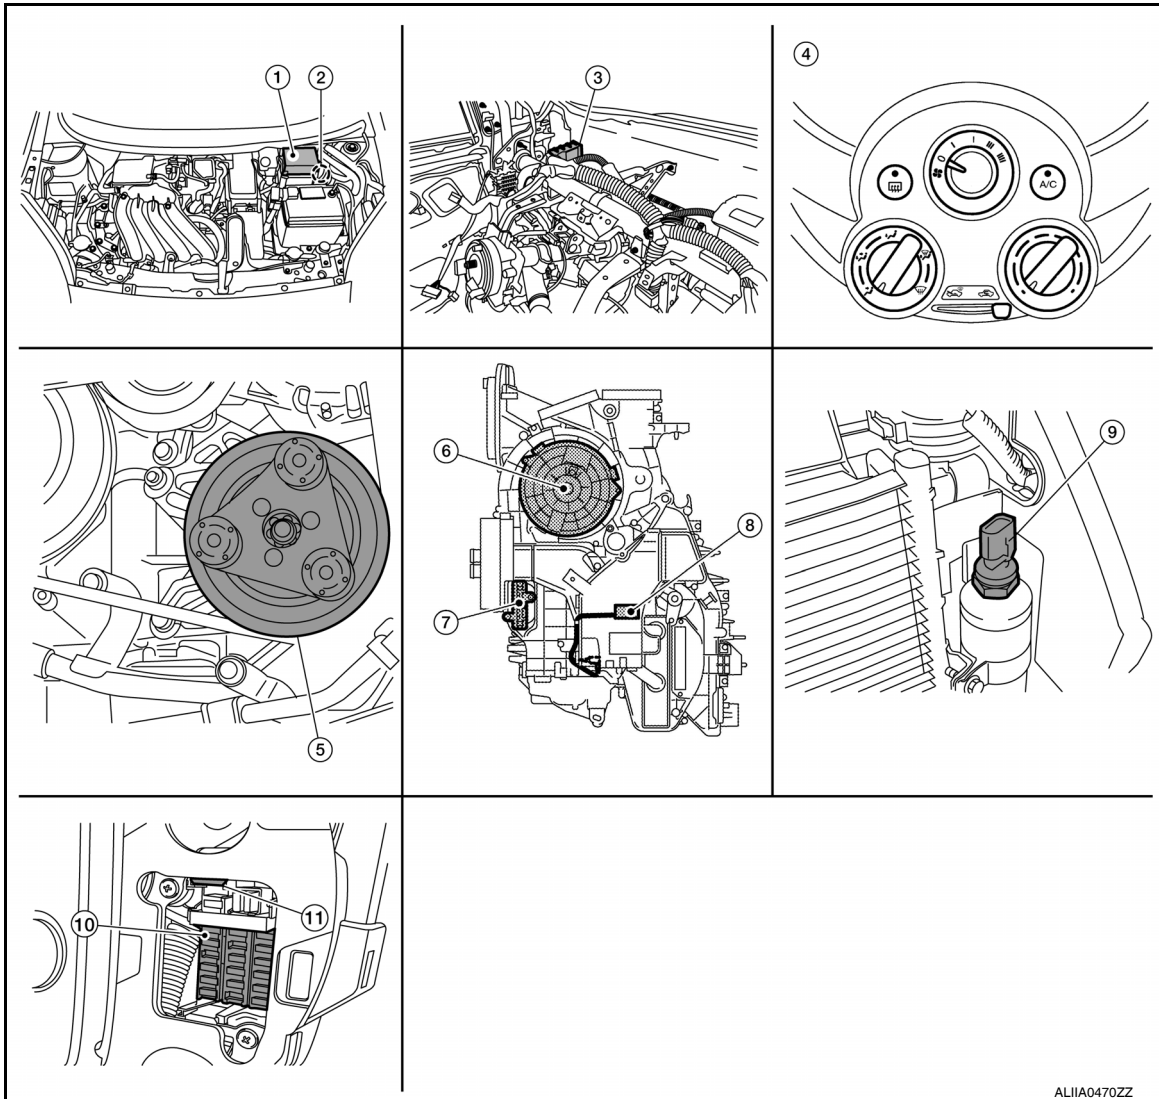

ALIA0470ZZ

- | | | |
|--|--|---|
| 1. IPDM E/R | 2. ECM | 3. BCM (view with instrument panel removed) |
| 4. Front air control | 5. A/C compressor | 6. Front blower motor (view with A/C unit assembly removed) |
| 7. Front blower motor resistor (view with A/C unit assembly removed) | 8. Thermo control amp. (view with A/C unit assembly removed) | 9. Refrigerant pressure sensor |
| 10. Fuse block (J/B) | 11. Blower relay | |

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[MANUAL AIR CONDITIONING]

Component Description

INFOID:000000007630818

Component	Description
A/C compressor	Vaporized refrigerant is drawn into the A/C compressor from the evaporator, where it is compressed to a high pressure, high temperature vapor. The hot, compressed vapor is then discharged to the condenser.
BCM	The BCM receives the fan ON and A/C ON signals from the front air control and sends a compressor ON request to the ECM.
ECM	The ECM sends a compressor ON request to the IPDM E/R based on the status of engine operation and load as well as refrigerant pressure information. If all the conditions are met for A/C operation, the ECM transmits the compressor ON request to the IPDM E/R.
Fuse Block (J/B)	Located in the passenger compartment, behind the left lower IP, the Fuse Block (J/B) contains the front blower motor relay and several fuses required for the air conditioner control system.
Front air control	The front air control controls the operation of the A/C and heating system.
Front blower motor	The front blower motor varies the speed at which the air flows through the ventilation system.
Front blower motor relay	The front blower motor relay controls the flow of current to fuse 20, 21 and 22 in the Fuse Block (J/B). The relay is connected directly to ground, and is energized when the ignition switch is in the ON or START position.
Front blower motor resistor	Ground for the blower is supplied through blower resistor and the blower speed switch. As the switch is moved from position 1 through 5, more current is allowed to flow through the motor, for a higher speed. This is because less resistors are in the path as the switch is moved to a higher position. When the switch is on the highest position, all resistors are bypassed.
IPDM E/R	A/C relay is integrated in IPDM E/R. IPDM E/R operates A/C relay when receiving A/C compressor request signal from ECM via CAN communication line.
Refrigerant pressure sensor	Refer to EC-26. "Refrigerant Pressure Sensor" .
Thermo control amp.	Thermo control amp. is composed of thermistor and amplifier. When the A/C switch signal is received from the front air control, the thermo control amp. transmits the A/C ON signal to the BCM according to evaporator fin temperature. When the thermistor detecting temperature of the air that passes through evaporator is extremely low, the thermo control amp. sends the A/C OFF signal to BCM, and stops the compressor.


A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

SYSTEM

MANUAL AIR CONDITIONING SYSTEM

MANUAL AIR CONDITIONING SYSTEM : System Diagram

INFOID:000000007630810

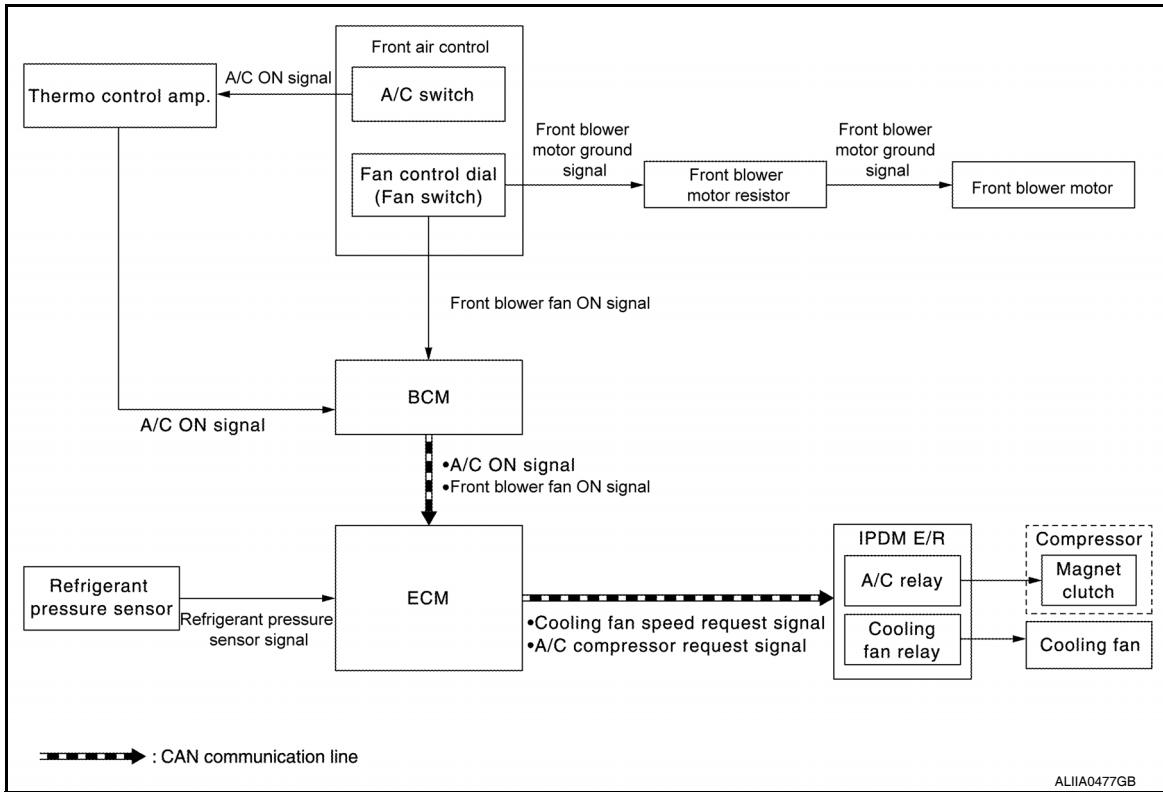

ALIIA0477GB

MANUAL AIR CONDITIONING SYSTEM : System Description

INFOID:000000007630811

- The manual air conditioning system is controlled by a sequence of functions from the front air control, BCM, ECM, and IPDM E/R.
- The fan speed of the front blower motor is changed by the combination of the fan control dial (fan switch) operation and blower resistor control.

Module/Function	Door control	A/C request signal	Compressor control	Cooling fan control
Front air control	HAC-11		HAC-10	
BCM		BCS-6		
ECM			HAC-10	EC-37
IPDM E/R			HAC-10	EC-37

MANUAL AIR CONDITIONING SYSTEM : Compressor Control

INFOID:000000007207662

DESCRIPTION

- When A/C switch signal is received from front air control, the thermo control amp. transmits A/C ON signal to the BCM according to evaporator fin temperature.
- When the front blower motor is operated, the front air control transmits blower fan ON signal to the BCM.
- BCM transmits the A/C ON signal and blower fan ON signal to ECM via CAN communication line. Refer to [EC-37. "CAN COMMUNICATION : System Description"](#)
- ECM judges the conditions of each sensor (Refrigerant pressure sensor signal, accelerator position signal, etc.), and transmits the A/C compressor request signal to IPDM E/R via CAN communication line.
- By receiving the A/C compressor request signal from ECM, IPDM E/R turns the A/C relay to ON, and activates the compressor. Refer to [PCS-5. "RELAY CONTROL SYSTEM : System Description"](#)

CONTROL BY THERMO CONTROL AMP.


SYSTEM

< SYSTEM DESCRIPTION >

[MANUAL AIR CONDITIONING]

Low Temperature Protection Control

- When thermo control amp. detects that evaporator fin temperature is 1.5°C (35°F) or less, thermo control amp. switches A/C ON signal to OFF and stops the compressor. When the evaporator fin temperature returns to 3°C (37°F) or more, the compressor is activated.

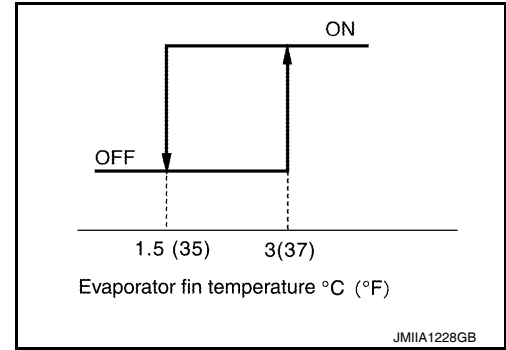

CONTROL BY ECM

Refrigerant Pressure Protection

The refrigerant system is protected against excessively high- or low-pressures by the refrigerant pressure sensor, located on the liquid tank on the condenser. The refrigerant pressure sensor detects the pressure inside the refrigerant line and sends a voltage signal to the ECM. If the system pressure rises above or falls below the following values, the ECM requests the IPDM E/R to de-energize the A/C relay and disengage the compressor.

- 3.12 MPa (31.82 kg/cm², 452.4 psi) or more (When the engine speed is less than 1,500 rpm)
- 2.74 MPa (27.95 kg/cm², 397.3 psi) or more (When the engine speed is 1,500 rpm or more)
- 0.14 MPa (1.43 kg/cm², 20.3 psi) or less

Compressor Oil Circulation Control

When the engine starts while the engine coolant temperature is 56°C (133°F) or less, ECM activates the compressor for approximately 6 seconds and circulates the compressor oil once.

Air Conditioning Cut Control

When the engine is under a high load condition, the ECM transmits an A/C relay OFF request to IPDM E/R, and stops the compressor. Refer to [EC-36. "AIR CONDITIONING CUT CONTROL : System Description"](#).

MANUAL AIR CONDITIONING SYSTEM : Door Control

INFOID:000000007207663


SWITCHES AND THEIR CONTROL FUNCTIONS

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

SYSTEM

< SYSTEM DESCRIPTION >

[MANUAL AIR CONDITIONING]

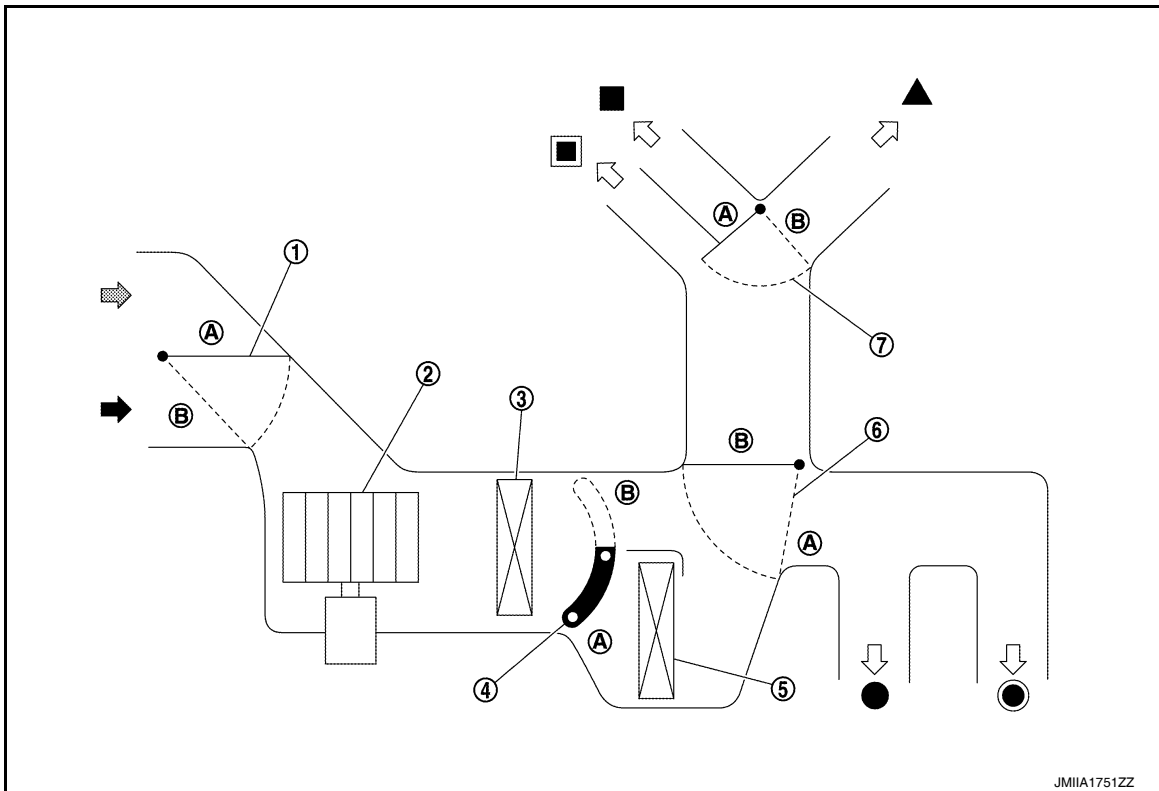

- | | | |
|----------------------------------|---------------------|---------------|
| 1. Intake door | 2. Blower motor | 3. Evaporator |
| 4. Air mix door | 5. Heater core | 6. Foot door |
| 7. Ventilator and defroster door | | |
| ↖ Fresh air intake | ← Recirculation air | ▲ Defroster |
| ■ Center ventilator | ■ Side ventilator | |
| ● Foot | ● Rear foot* | |

*: With rear foot duct

Switch/Dial position		Door position			
		Ventilator and defroster door	Foot door	Intake door	Air mix door
MODE dial		B	A	—	—
			A – B		
		A	A – B		
		A	A – B		
		A	A		
Air intake lever		—	—	A	—
				B	
Temperature control dial	Full cold	—	—	—	A
	Full hot				B






AIR DISTRIBUTION

With rear foot duct






SYSTEM

< SYSTEM DESCRIPTION >

[MANUAL AIR CONDITIONING]

Discharge air flow					
Mode position indication	Air outlet/distribution				
	Ventilator		Foot		Defroster
	Center	Side	Front	Rear	
	50%	50%	—	—	—
	29%	25%	28%	18%	—
	—	14%	47%	22%	17%
	—	14%	36%	20%	30%
	—	22%	—	—	78%

Without rear foot duct

Discharge air flow				
Mode position indication	Air outlet/distribution			
	Ventilator		Foot	Defroster
	Center	Side		
	50%	50%	—	—
	30%	30%	40%	—
	—	14%	66%	20%
	—	14%	51%	35%
	—	22%	—	78%


A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

OPERATION

Switch Name and Function

INFOID:000000007207666

CONTROLLER

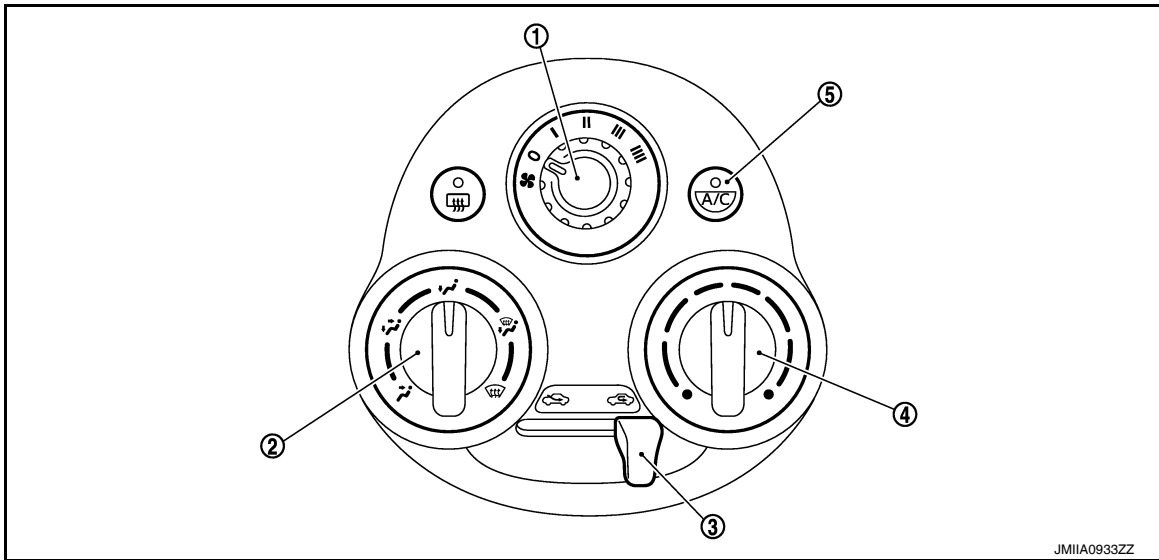

- | | | |
|----------------------------------|---------------|-----------------|
| 1. Fan control dial (fan switch) | 2. MODE dial | 3. Intake lever |
| 4. Temperature control dial | 5. A/C switch | |

SWITCH OPERATION

Fan control dial (fan switch)	Fan speed can be adjusted within a range from 1st to 4th.
MODE dial	Mode position is selected to an optimal position by operating this dial.
Intake lever	The air inlet changes REC ⇔ FRE each time by operation this lever.
Temperature control dial	The setting temperature can be selected to an optimum temperature by operating this dial.
A/C switch	The compressor control (switch indicator) is turned ON ⇔ OFF each time by pressing this switch while the blower motor is activated.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[MANUAL AIR CONDITIONING]

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000007630779

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Direct Diagnostic Mode	Description
ECU identification	The BCM part number is displayed.
Self Diagnostic Result	The BCM self diagnostic results are displayed.
Data Monitor	The BCM input/output data is displayed in real time.
Active Test	The BCM activates outputs to test components.
Work support	The settings for BCM functions can be changed.
Configuration	<ul style="list-style-type: none"> The vehicle specification can be read and saved. The vehicle specification can be written when replacing BCM.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication is displayed.

SYSTEM APPLICATION

BCM can perform the following functions.

System	Sub System	Direct Diagnostic Mode						
		ECU identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN DIAG SUPPORT MNTR
Door lock	DOOR LOCK		×	×	×	×		
Rear window defogger	REAR DEFOGGER			×	×			
Warning chime	BUZZER			×	×			
Interior room lamp timer	INT LAMP			×	×	×		
Remote keyless entry system	MULTI REMOTE ENT			×	×	×		
Exterior lamp	HEAD LAMP			×	×	×		
Wiper and washer	WIPER			×	×	×		
Turn signal and hazard warning lamps	FLASHER			×	×			
Air conditioner	AIR CONDITIONER			×				
Combination switch	COMB SW			×				
BCM	BCM	×	×			×	×	×
Immobilizer	IMMU		×		×	×		
Interior room lamp battery saver	BATTERY SAVER			×	×	×		
Trunk open	TRUNK			×				
RAP system	RETAINED PWR			×		×		
Signal buffer system	SIGNAL BUFFER			×				
TPMS	AIR PRESSURE MONITOR		×	×	×	×		
Panic alarm system	PANIC ALARM				×			

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[MANUAL AIR CONDITIONING]

AIR CONDITIONER

AIR CONDITIONER : CONSULT Function (BCM - AIR CONDITIONER)

INFOID:000000007630780

DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.
FAN ON SIG [On/Off]	Indicates condition of fan switch.
AIR COND SW [On/Off]	Indicates condition of A/C switch.
THERMO AMP [On/Off]	Indicates condition of thermo amp.
FR DEF SW [On/Off]	Indicates condition of front defrost switch.

ECU DIAGNOSIS INFORMATION

BCM, ECM, IPDM E/R

List of ECU Reference

INFOID:000000007630809

ECU	Reference
BCM	BCS-24. "Reference Value"
	BCS-35. "Fail-safe"
	BCS-35. "DTC Inspection Priority Chart"
	BCS-36. "DTC Index"
ECM	EC-68. "Reference Value"
	EC-79. "Fail Safe"
	EC-81. "DTC Inspection Priority Chart"
	EC-82. "DTC Index"
IPDM E/R	PCS-10. "Reference Value"
	PCS-14. "Fail-Safe"
	PCS-15. "DTC Index"

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

MANUAL AIR CONDITIONING SYSTEM

[MANUAL AIR CONDITIONING]


< WIRING DIAGRAM >

WIRING DIAGRAM

MANUAL AIR CONDITIONING SYSTEM

Wiring Diagram

INFOID:000000007630781

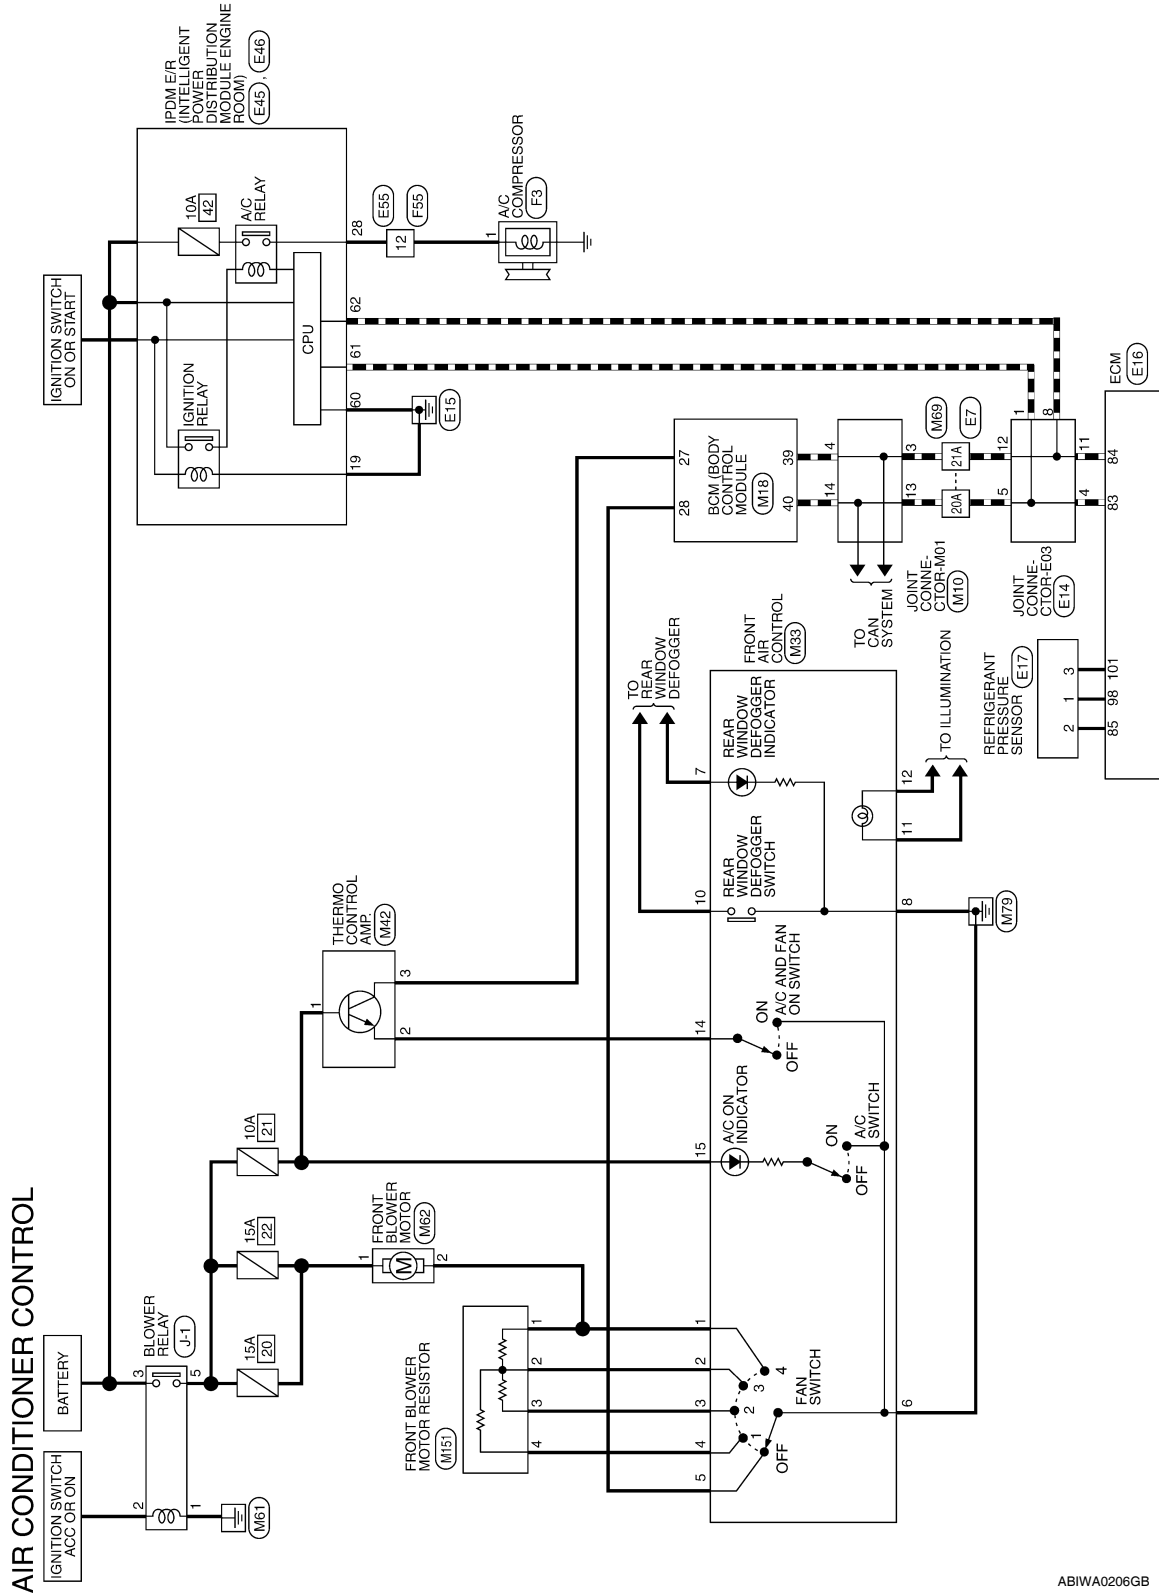

ABIWA0206GB


AIR CONDITIONER CONTROL CONNECTORS

Connector No.	M10
Connector Name	JOINT CONNECTOR-M01
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
3	L	-
4	L	-
13	P	-
14	P	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
27	W	AIR CON SW
28	SB	BLOWER FAN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M33
Connector Name	FRONT AIR CONTROL
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	L	FAN 4 SPEED
2	Y	FAN 3 SPEED
3	P	FAN 2 SPEED
4	W	FAN 1 SPEED
5	SB	FAN OFF
6	B	GND
7	R	R/DEF LED

Terminal No.	Color of Wire	Signal Name
8	B	GND
9	-	-
10	G	R/DEF SWITCH
11	W	ILL+
12	B	ILL-
13	-	-
14	V	A/C AND FAN ON
15	Y	IGN

Connector No.	M42
Connector Name	THERMO CONTROL AMP.
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	V	-
3	W	-

ABIIA0731GB

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P


MANUAL AIR CONDITIONING SYSTEM

< WIRING DIAGRAM >

[MANUAL AIR CONDITIONING]

Terminal No.	Color of Wire	Signal Name
20A	P	-
21A	L	-

Connector No.	M69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

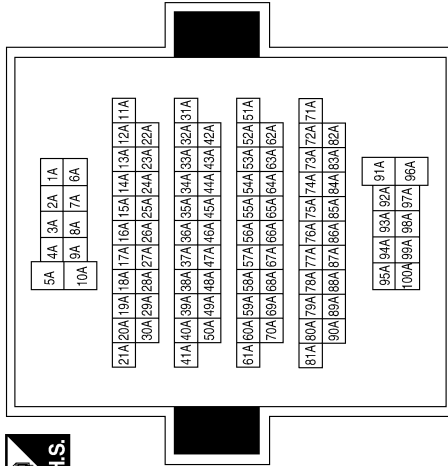

Connector No.	M62
Connector Name	FRONT BLOWER MOTOR
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	L	-

Connector No.	M151
Connector Name	FRONT BLOWER MOTOR RESISTOR
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	L	-
2	Y	-
3	P	-
4	W	-


ABIIA0732GB

MANUAL AIR CONDITIONING SYSTEM

< WIRING DIAGRAM >

[MANUAL AIR CONDITIONING]


Connector No.	E14
Connector Name	JOINT CONNECTOR-E03
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	P	-
4	P	-
5	P	-
8	L	-
11	L	-
12	L	-

Terminal No.	Color of Wire	Signal Name
20A	P	-
21A	L	-

Connector No.	E7
Connector Name	WIRE TO WIRE
Connector Color	WHITE

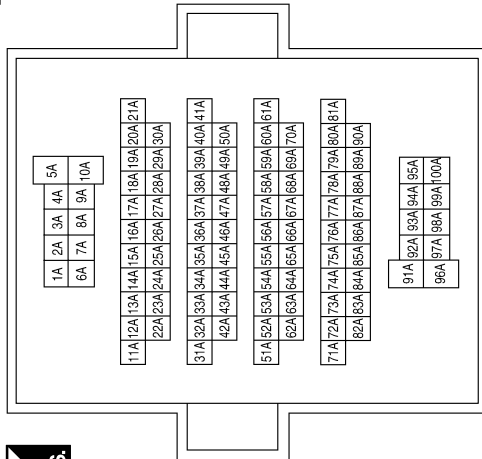


Connector No.	E17
Connector Name	REFRIGERANT PRESSURE SENSOR
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	LG	-
2	V	-
3	W	-

Terminal No.	Color of Wire	Signal Name
83	P	CAN-L
84	L	CAN-H
85	V	PDPRES
98	LG	GNDA - PDPRES
101	W	AVCC2 - PDPRES

Connector No.	E16
Connector Name	ECM
Connector Color	BLACK

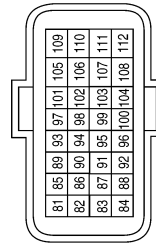

ABIIA0733GB


A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

MANUAL AIR CONDITIONING SYSTEM

< WIRING DIAGRAM >


[MANUAL AIR CONDITIONING]

Connector No.	E55
Connector Name	WIRE TO WIRE
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
12	V	-

Connector No.	E46
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
60	B	GND (SIGNAL)
61	P	CAN-L
62	L	CAN-H

Connector No.	E45
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
19	B	GND (POWER)
28	V	AC-COMP

Connector No.	J-1
Connector Name	FUSE BLOCK (J/B) (BLOWER RELAY)
Connector Color	-

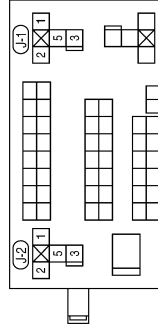

Terminal No.	Color of Wire	Signal Name
1	B/W	-
2	Y	-
3	W	-
5	-	-

Connector No.	F55
Connector Name	WIRE TO WIRE
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
12	V	-

Connector No.	F3
Connector Name	A/C COMPRESSOR
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	V	-

ABIIA0734GB

MANUAL HEATER SYSTEM

< WIRING DIAGRAM >


[MANUAL AIR CONDITIONING]

MANUAL HEATER SYSTEM

Wiring Diagram

INFOID:000000007630782

HEATER CONTROL

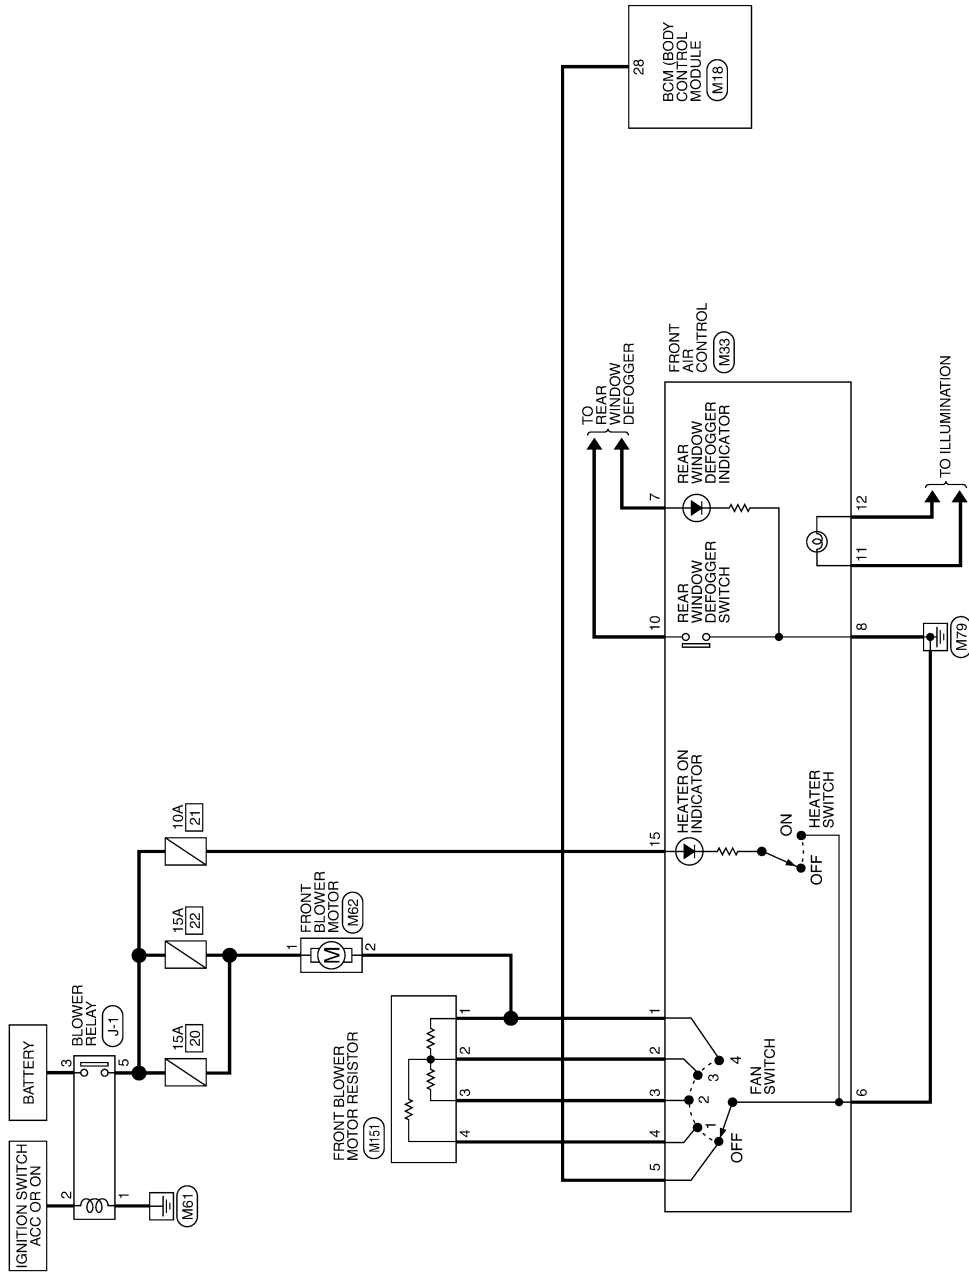


A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

ABIWA0207GB


HEATER CONTROL CONNECTORS

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
28	SB	BLOWER FAN SW

Connector No.	M33
Connector Name	FRONT AIR CONTROL
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	L	FAN 4 SPEED
2	Y	FAN 3 SPEED
3	P	FAN 2 SPEED
4	W	FAN 1 SPEED
5	SB	FAN OFF
6	B	GND
7	R	R/DEF LED

Terminal No.	Color of Wire	Signal Name
8	B	GND
9	-	-
10	G	R/DEF SWITCH
11	W	ILL+
12	B	ILL-
13	-	-
14	V	A/C AND FAN ON
15	Y	IGN

Connector No.	M62
Connector Name	FRONT BLOWER MOTOR
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	Y	-
2	L	-

Connector No.	M151
Connector Name	FRONT BLOWER MOTOR RESISTOR
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	L	-
2	Y	-
3	P	-
4	W	-

Connector No.	J-1
Connector Name	FUSE BLOCK (J/B) (BLOWER RELAY)
Connector Color	-

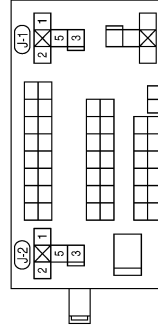

Terminal No.	Color of Wire	Signal Name
1	B/W	-
2	Y	-
3	W	-
5	-	-

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[MANUAL AIR CONDITIONING]


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Workflow

INFOID:000000007630799

OVERALL SEQUENCE

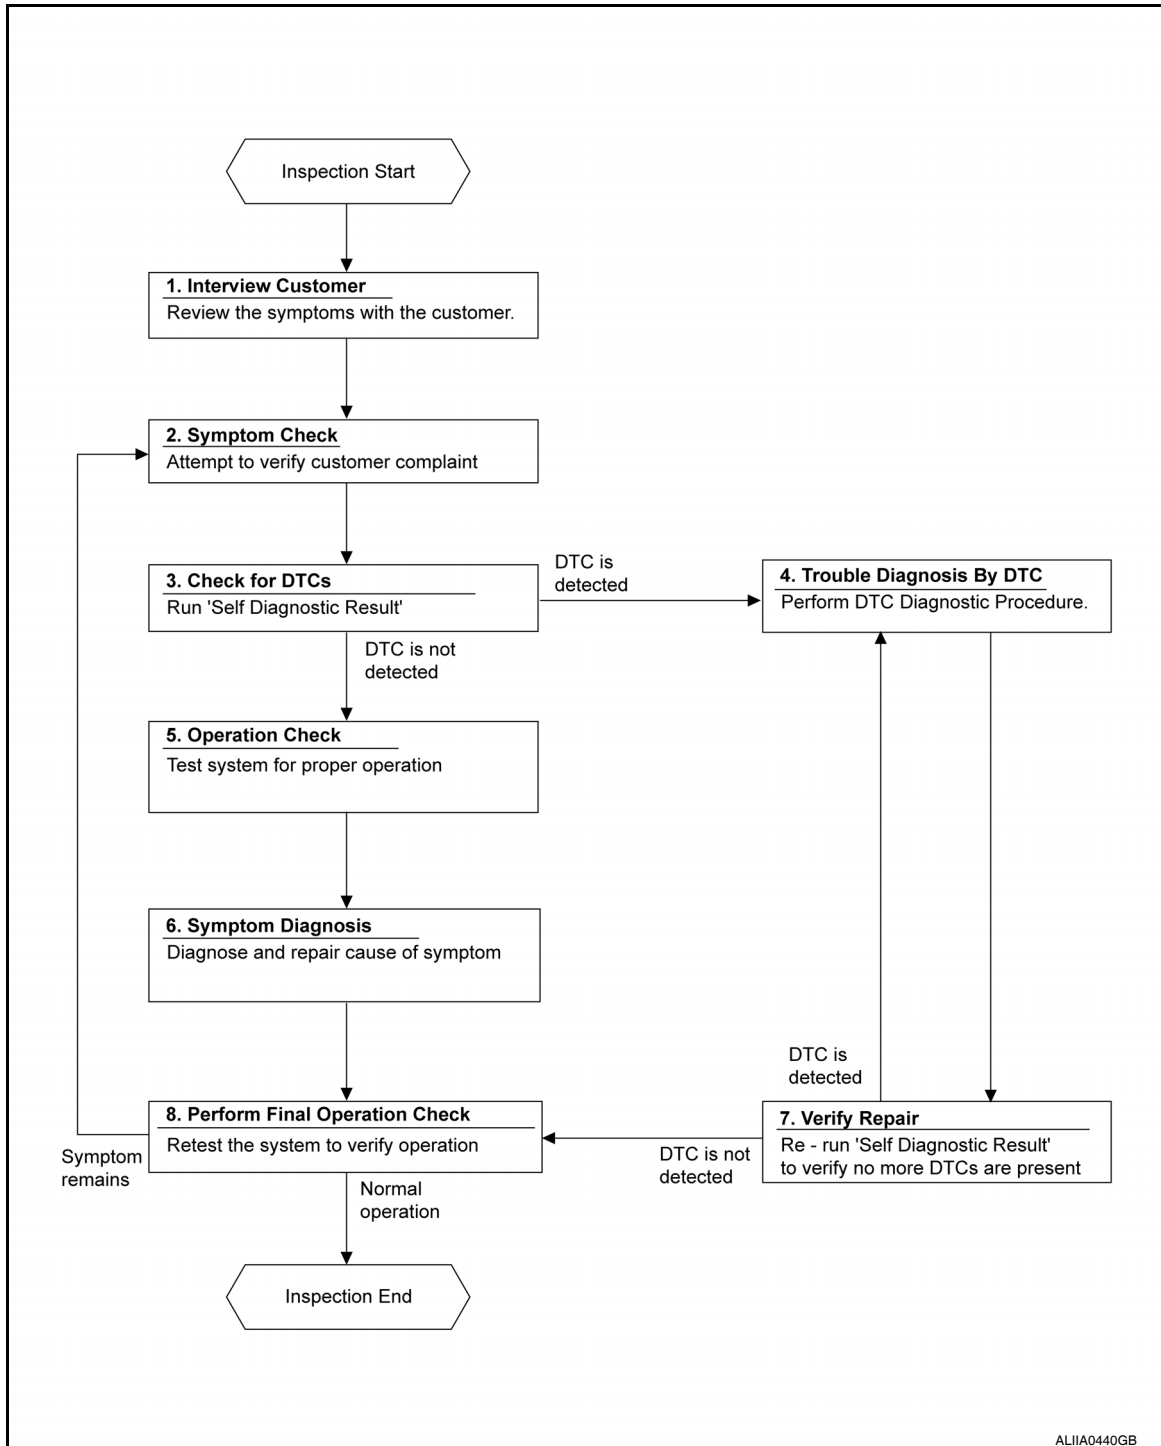

DETAILED FLOW

1. INTERVIEW CUSTOMER

Interview the customer to obtain as much information as possible about the conditions and environment under which the malfunction occurred.

A
B
C
D
E
F
G
H
HAC
J
K
L
M
N
O
P

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[MANUAL AIR CONDITIONING]

>> GO TO 2.

2. SYMPTOM CHECK

Verify symptoms.

>> GO TO 3.

3. CHECK FOR DTCS

Ⓜ With CONSULT

1. Turn ignition switch ON.
2. Select "Self Diagnostic Result" mode of "BCM" using CONSULT.
3. Check DTC.

Is any DTC detected?

YES >> GO TO 4.

NO >> GO TO 5.

4. PERFORM DTC DIAGNOSTIC PROCEDURE

Perform the diagnostic procedure for the detected DTC. Refer to [BCS-35, "DTC Inspection Priority Chart"](#).

>> GO TO 7.

5. OPERATION CHECK

Perform the operation check. Refer to [HAC-27, "Work Procedure"](#).

>> GO TO 6.

6. SYMPTOM DIAGNOSIS

Check the symptom diagnosis table. Refer to [HAC-41, "Symptom Table"](#).

>> GO TO 8.

7. VERIFY REPAIR.

Ⓜ With CONSULT

1. Turn ignition switch ON.
2. Select "Self Diagnostic Result" mode of "BCM" using CONSULT.
3. Check DTC.

Is any DTC detected?

YES >> GO TO 4.

NO >> GO TO 8.

8. PERFORM FINAL OPERATION CHECK

Perform the operation check. Refer to [HAC-27, "Work Procedure"](#).

Does it operate normally?

YES >> Inspection End.

NO >> GO TO 2.

OPERATION INSPECTION

Work Procedure

INFOID:000000007207674

The purpose of the operation inspection is to check that the individual system operates normally.

Check condition : Engine running at normal operating temperature.

1. CHECK FRONT BLOWER MOTOR

1. Operate fan control dial.
2. Check that fan speed changes. Check operation for all fan speeds.

Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 8.

2. CHECK DISCHARGE AIR

1. Operate fan control dial to set the fan speed to maximum speed.
2. Operate MODE dial to each position.
3. Check that air outlets change according to each indicated air outlet by placing a hand in front of the air outlets. Refer to [VTL-4, "VENTILATION SYSTEM \(FRONT AIR CONDITIONING\) : System Description"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 8.

3. CHECK INTAKE AIR

1. Operate intake lever to each position.
2. Listen to intake sound and confirm air inlets change.

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 8.

4. CHECK COMPRESSOR

1. Turn fan control dial ON.
2. Press A/C switch. The A/C switch indicator is turns ON.
3. Check visually and by sound that the compressor operates.
4. Press A/C switch again. The A/C switch indicator is turns OFF.
5. Check that compressor stops.

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 8.

5. CHECK DISCHARGE AIR TEMPERATURE

1. Operate temperature control dial.
2. Check that discharge air temperature changes.

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 8.

6. CHECK TEMPERATURE DECREASE

1. Operate compressor.
2. Turn temperature control dial to full cold position.
3. Check that cool air blows from the air outlets.

Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 8.

7. CHECK TEMPERATURE INCREASE

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

OPERATION INSPECTION

[MANUAL AIR CONDITIONING]

< BASIC INSPECTION >

1. Turn temperature control dial to full hot position.
2. Check that warm air blows from air outlets.

Is the inspection result normal?

- YES >> INSPECTION END
NO >> GO TO 8.

8.CHECK SELF-DIAGNOSIS WITH CONSULT

1. Perform self-diagnosis with CONSULT.
2. Check that any DTC is detected.

Is any DTC detected?

- YES >> Perform trouble diagnosis for the detected DTC.
NO >> Refer to [HAC-41. "Symptom Table"](#) and perform the appropriate diagnosis.

DTC/CIRCUIT DIAGNOSIS

A/C ON SIGNAL

Component Function Check

INFOID:000000007207676

1. CHECK A/C ON SIGNAL

Ⓜ With CONSULT

1. Turn ignition switch ON.
2. Operate front blower motor.
3. Select "AIR CONDITIONER" of "BCM" using CONSULT.
4. Select "AIR COND SW" in "DATA MONITOR" mode, and check status under the following condition.

Monitor item	Condition		Status
AIR COND SW	A/C switch	ON	On
		OFF	Off

Is the inspection result normal?

- YES >> Inspection End.
 NO >> Refer to [HAC-29, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007207677

Regarding Wiring Diagram information, refer to [HAC-18, "Wiring Diagram"](#).

1. CHECK FUSE

1. Turn ignition switch OFF.
2. Check 10A fuse (No. 21, located in fuse block (J/B)).

NOTE:
 Refer to [PG-58, "Terminal Arrangement"](#).

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Replace the blown fuse after repairing the affected circuit.

2. CHECK THERMO CONTROL AMP. POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect thermo control amp. connector.
3. Turn ignition switch ON.
4. Check voltage between thermo control amp. harness connector and ground.

+		-	Voltage (V) (Approx.)
Thermo control amp.			
Connector	Terminal		
M42	1	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> Repair harness or connector between thermo control amp. and fuse.

3. CHECK THERMO CONTROL AMP. GROUND CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect front air control connector.
3. Check continuity between thermo control amp. harness connector and front air control harness connector.

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

A/C ON SIGNAL

< DTC/CIRCUIT DIAGNOSIS >

[MANUAL AIR CONDITIONING]


Thermo control amp.		Front air control		Continuity
Connector	Terminal	Connector	Terminal	
M42	2	M33	14	Yes

Is the inspection result normal?

- YES >> GO TO 4.
 NO >> Repair harness or connector.

4.CHECK A/C ON SIGNAL

- Turn ignition switch ON.
- Check output waveform between thermo control amp. harness connector and ground with using oscilloscope.

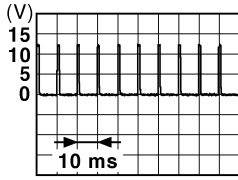+		-	Output waveform
Thermo control amp.			
Connector	Terminal		
M42	3	Ground	

Is the inspection result normal?

- YES >> GO TO 5.
 NO >> GO TO 6.

5.CHECK FRONT AIR CONTROL

- Turn ignition switch OFF.
- Check front air control. Refer to [HAC-30, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace thermo control amp. Refer to [HAC-46, "Removal and Installation"](#).
 NO >> Replace front air control. Refer to [HAC-45, "Removal and Installation"](#).

6.CHECK A/C ON SIGNAL CIRCUIT FOR OPEN

- Turn ignition switch OFF.
- Disconnect BCM connector.
- Check continuity between thermo control amp. harness connector and BCM harness connector.

Thermo control amp.		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M42	3	M18	27	Yes

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-52, "Removal and Installation"](#).
 NO >> Repair harness or connector.

Component Inspection

INFOID:000000007207678

1.CHECK A/C CONTROL

Check continuity front air control terminals.

A/C ON SIGNAL

< DTC/CIRCUIT DIAGNOSIS >

[MANUAL AIR CONDITIONING]

Terminal		Condition	Continuity
14	6	A/C switch: ON Fan control dial: Except OFF position	Yes

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace front air control. Refer to [HAC-45, "Removal and Installation"](#).

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

BLOWER FAN ON SIGNAL

< DTC/CIRCUIT DIAGNOSIS >

[MANUAL AIR CONDITIONING]

BLOWER FAN ON SIGNAL

Component Function Check

INFOID:000000007207679

1.CHECK BLOWER FAN ON SIGNAL

④ With CONSULT

1. Turn ignition switch ON.
2. Select "AIR CONDITIONER" of "BCM" using CONSULT.
3. Select "FAN ON SIG" in "DATA MONITOR" mode, and check status under the following condition.

Monitor item	Condition		Status
FAN ON SIG	Fan control dial	Except OFF position	On
		OFF position	Off

Is the inspection result normal?

- YES >> Inspection End.
 NO >> Refer to [HAC-32, "Diagnosis Procedure"](#).


Diagnosis Procedure

INFOID:000000007207680

Regarding Wiring Diagram information, refer to [HAC-18, "Wiring Diagram"](#) or [HAC-23, "Wiring Diagram"](#).

1.CHECK BLOWER FAN ON SIGNAL

1. Turn ignition switch OFF.
2. Disconnect front air control harness connector.
3. Turn ignition switch ON.
4. Check output waveform between front air control and ground with using oscilloscope.

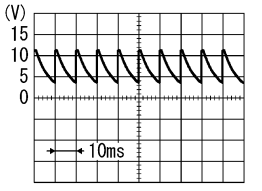+		-	Output waveform
Front air control			
Connector	Terminal		
M33	5	Ground	

Is the inspection result normal?

- YES >> Replace front air control. Refer to [HAC-45, "Removal and Installation"](#).
 NO >> GO TO 2.

2.CHECK BLOWER FAN ON SIGNAL CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity front air control harness connector and BCM harness connector.

Front air control		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M33	5	M18	28	Yes

Is the inspection result normal?

- YES >> GO TO 3.

BLOWER FAN ON SIGNAL

< DTC/CIRCUIT DIAGNOSIS >

[MANUAL AIR CONDITIONING]

NO >> Repair harness or connector.

3. CHECK BLOWER FAN ON SIGNAL CIRCUIT FOR SHORT

Check continuity between front air control harness connector and ground.

Front air control		—	Continuity
Connector	Terminal		
M33	5	Ground	No

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-52. "Removal and Installation"](#).

NO >> Repair harness or connector.

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

A/C INDICATOR

Diagnosis Procedure

INFOID:000000007207681

Regarding Wiring Diagram information, refer to [HAC-18. "Wiring Diagram"](#) or [HAC-23. "Wiring Diagram"](#).

1.CHECK A/C INDICATOR POWER SUPPLY

1. Turn ignition switch ON.
2. Check voltage between front air control harness connector and ground.

+		-	Voltage (V) (Approx.)
Front air control			
Connector	Terminal		
M33	15	Ground	Battery voltage

Is the inspection result normal?

- YES >> Replace front air control. Refer to [HAC-45. "Removal and Installation"](#).
 NO >> Repair harness or connector between front air control and fuse.

FRONT BLOWER MOTOR

Description

INFOID:000000007698245

The front blower motor utilizes a brush-less motor with a rotating magnet. Quietness is improved over previous motors where the brush was the point of contact and the coil rotated.

Diagnosis Procedure

INFOID:000000007207682

Regarding Wiring Diagram information, refer to [HAC-18, "Wiring Diagram"](#) or [HAC-23, "Wiring Diagram"](#).

1. CHECK SYMPTOM

Check symptom (A or B).

	Symptom
A	Front blower motor does not operate at any dial position
B	Front blower motor does not operate at any dial position other than 4th, or operation speed is not normal.

Which symptom is detected?

- A >> GO TO 2.
- B >> GO TO 7.

2. CHECK FUSE

1. Turn ignition switch OFF.
2. Check 15A fuses (Nos. 20 and 22, located in fuse block (J/B)).

NOTE:

Refer to [PG-58, "Terminal Arrangement"](#).

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Replace the blown fuse after repairing the affected circuit.

3. CHECK FRONT BLOWER MOTOR POWER SUPPLY

1. Disconnect front blower motor connector.
2. Turn ignition switch ON.
3. Check voltage between front blower motor harness connector and ground.

+		-	Voltage (V) (Approx.)
Front blower motor			
Connector	Terminal		
M62	1	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> GO TO 4.

4. CHECK BLOWER RELAY

1. Turn ignition switch OFF.
2. Check blower relay. Refer to [HAC-37, "Component Inspection \(Blower Relay\)"](#).

Is the inspection result normal?

- YES >> Repair harness or connector between front blower motor and fuse.
- NO >> Replace blower relay.

5. CHECK FAN SWITCH GROUND CIRCUIT FOR OPEN

1. Turn ignition switch OFF.

FRONT BLOWER MOTOR

[MANUAL AIR CONDITIONING]

< DTC/CIRCUIT DIAGNOSIS >

2. Disconnect front air control connector.
3. Check continuity between front air control harness connector and ground.

Front air control		—	Continuity
Connector	Terminal		
M33	6	Ground	Yes

Is the inspection result normal?

- YES >> GO TO 6.
 NO >> Repair harness or connector.

6. CHECK FAN SWITCH 4TH POSITION CIRCUIT FOR OPEN

Check continuity between front air control harness connector and front blower motor harness connector.

Front air control		Front blower motor		Continuity
Connector	Terminal	Connector	Terminal	
M33	1	M62	2	Yes

Is the inspection result normal?

- YES >> GO TO 10.
 NO >> Repair the harness or connector.

7. CHECK FRONT BLOWER MOTOR RESISTOR POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect front blower motor resistor connector.
3. Turn ignition switch ON.
4. Check voltage between front blower motor resistor harness connector and ground.

+		-	Voltage (V) (Approx.)
Front blower motor resistor			
Connector	Terminal		
M151	1	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 8.
 NO >> Repair harness or connector between front blower motor resistor and front blower motor.

8. CHECK FAN SWITCH 1ST, 2ND, AND 3RD POSITION CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect front air control.
3. Check continuity between front air control harness connector and front blower motor resistor.

Front air control		Front blower motor resistor		Continuity
Connector	Terminal	Connector	Terminal	
M33	2	M151	2	Yes
	3		3	
	4		4	

Is the inspection result normal?

- YES >> GO TO 9.
 NO >> Repair harness or connector.

9. CHECK FRONT BLOWER MOTOR RESISTOR

Check front blower motor resistor. Refer to [HAC-37, "Component Inspection \(Front Blower Motor Resistor\)"](#).

Is the inspection result normal?

- YES >> GO TO 10.

FRONT BLOWER MOTOR

[MANUAL AIR CONDITIONING]

< DTC/CIRCUIT DIAGNOSIS >

NO >> Replace front blower motor resistor. Refer to [HAC-48. "Removal and Installation"](#).

10.CHECK FAN SWITCH

Check fan switch. Refer to [HAC-37. "Component Inspection \(Fan Switch\)"](#).

Is the inspection result normal?

YES >> Replace front blower motor. Refer to [VTL-9. "FRONT BLOWER MOTOR : Removal and Installation"](#).

NO >> Replace front air control. Refer to [HAC-45. "Removal and Installation"](#).

Component Inspection (Front Blower Motor)

INFOID:000000007688854

1.CHECK FRONT BLOWER MOTOR

1. Connect battery voltage to terminal 1 of front blower motor.
2. Connect ground to terminal 2 of front blower motor.

Does the front blower motor operate?

YES >> Intermittent incident. Refer to [GI-38. "Intermittent Incident"](#).

NO >> Replace front blower motor. Refer to [VTL-9. "FRONT BLOWER MOTOR : Removal and Installation"](#).

Component Inspection (Blower Relay)

INFOID:000000007207684

1.CHECK BLOWER RELAY


1. Remove blower relay. Refer to [PG-58. "Terminal Arrangement"](#).
2. Check continuity between blower relay terminal 3 and 5 when the voltage is supplied between terminal 1 and 2.

Terminal		Voltage	Continuity
3	5	ON	Yes
		OFF	No

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace blower relay.

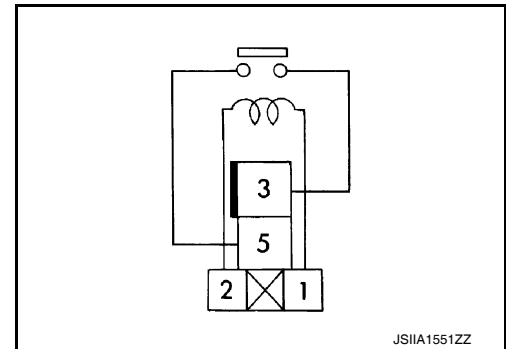

HAC

Component Inspection (Front Blower Motor Resistor)

INFOID:000000007207685

1.CHECK FRONT BLOWER MOTOR RESISTOR

1. Disconnect front blower motor resistor connector.
2. Check resistance between front blower motor resistor terminals. Refer to applicable table for the normal value.

Terminal		Resistance: Ω (Approx.)
1	2	0.54
	3	1.56
	4	3.07

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace front blower motor resistor. Refer to [HAC-48. "Removal and Installation"](#).

Component Inspection (Fan Switch)

INFOID:000000007207686

1.CHECK FAN SWITCH

1. Remove front air control. Refer to [HAC-45. "Removal and Installation"](#).
2. Check continuity between front air control terminals.

FRONT BLOWER MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[MANUAL AIR CONDITIONING]

Terminal		Condition	Continuity
		Fan control dial (fan switch) position	
6	4	1st	Yes
	3	2nd	
	2	3rd	
	1	4th	

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace front air control. Refer to [HAC-45. "Removal and Installation"](#).

MAGNET CLUTCH

Description

INFOID:000000007698244

SYSTEM DESCRIPTION

When the blower speed dial is in one of the fan speed positions, the front air control outputs a fan ON signal to the BCM. When the A/C switch is pressed, the A/C switch LED illuminates and the front air control outputs a compressor ON signal to the BCM. Any mode control button can be selected. As long as the BCM receives a compressor ON signal and a fan ON signal from the front air control, the conditions required for the BCM to transmit a compressor ON request to the ECM have been met.

The BCM sends a compressor ON signal to ECM, via CAN communication line.

The ECM judges whether the compressor can be turned ON, based on each sensor status (refrigerant pressure sensor signal, throttle angle sensor, etc.). If it judges the compressor can be turned ON, it sends a compressor ON signal to IPDM E/R, via CAN communication line.

Upon receipt of a compressor ON signal from ECM, IPDM E/R turns the A/C relay ON to operate the compressor.

Component Function Check

INFOID:000000007207687

1. CHECK MAGNET CLUTCH OPERATION

Perform auto active test of IPDM E/R. Refer to [PCS-8, "CONSULT Function \(IPDM E/R\)"](#).

Is the inspection result normal?

- YES >> Inspection End.
- NO >> Refer to [HAC-39, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007207688

Regarding Wiring Diagram information, refer to [HAC-18, "Wiring Diagram"](#).

1. CHECK FUSE

Check 10A fuse (No. 42, located in IPDM E/R).

NOTE:

Refer to [PG-60, "IPDM E/R Terminal Arrangement"](#).

Is the inspection result normal?

- YES >> GO TO 2.
- NO >> Replace the blown fuse after repairing the affected circuit.

2. CHECK MAGNET CLUTCH

1. Turn ignition switch OFF.
2. Disconnect compressor connector.
3. Directly apply battery voltage to the magnet clutch. Check for operation visually and by sound.

Does it operate normally?

- YES >> GO TO 3.
- NO >> Replace magnet clutch. Refer to [HA-28, "COMPRESSOR : Removal and Installation"](#).

3. CHECK MAGNET CLUTCH POWER SUPPLY CIRCUIT FOR OPEN

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and compressor harness connector.

IPDM E/R		Compressor		Continuity
Connector	Terminal	Connector	Terminal	
E45	28	F3	1	Yes

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC

MAGNET CLUTCH

< DTC/CIRCUIT DIAGNOSIS >

[MANUAL AIR CONDITIONING]

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-25, "Removal and Installation"](#).
- NO >> Repair harness or connector.

MANUAL AIR CONDITIONING SYSTEM

< SYMPTOM DIAGNOSIS >

[MANUAL AIR CONDITIONING]

SYMPTOM DIAGNOSIS

MANUAL AIR CONDITIONING SYSTEM

Symptom Table

INFOID:000000007630800

SYMPTOM TABLE

Symptom	Reference Page	
A/C system does not come on.	Go to Trouble Diagnosis Procedure for A/C System.	HAC-27
A/C system cannot be controlled.	Go to Self-diagnosis Function.	HA-14
Air outlet does not change.	Go to Adjustment Procedure for Mode Door.	HAC-50
Discharge air temperature does not change.	Go to Adjustment Procedure for Air Mix Door.	HAC-51
Intake door does not change.	Go to Adjustment Procedure for Intake Door.	HAC-49
Front blower motor operation is malfunctioning.	Go to Trouble Diagnosis Procedure for Front Blower Motor.	HAC-35
Magnet clutch does not engage.	Go to Trouble Diagnosis Procedure for Magnet Clutch.	HAC-39
Insufficient cooling.	Go to Trouble Diagnosis Procedure for Insufficient Cooling.	HAC-42
Insufficient heating.	Go to Trouble Diagnosis Procedure for Insufficient Heating.	HAC-43
Noise.	Go to Trouble Diagnosis Procedure for Noise.	HA-27
A/C switch LED does not illuminate.	Go to Trouble Diagnosis Procedure for A/C System.	HAC-34
Both high- and low-pressure sides are too high.	Go to Trouble Diagnosis Procedure for Abnormal Pressure.	HA-25
High-pressure side is too high and low pressure side is too low.	Go to Trouble Diagnosis Procedure for Abnormal Pressure.	HA-25
High-pressure side is too low and low-pressure side is too high.	Go to Trouble Diagnosis Procedure for Abnormal Pressure.	HA-25
Both high- and low-pressure side sometimes become negative.	Go to Trouble Diagnosis Procedure for Abnormal Pressure.	HA-25
Low-pressure side sometimes becomes negative.	Go to Trouble Diagnosis Procedure for Abnormal Pressure.	HA-25
Low-pressure side becomes negative.	Go to Trouble Diagnosis Procedure for Abnormal Pressure.	HA-25

INSUFFICIENT COOLING

Description

INFOID:000000007207695

Symptom

- Insufficient cooling
- No cool air comes out. (Air flow volume is normal.)

Diagnosis Procedure

INFOID:000000007207696

NOTE:

Perform self-diagnosis with CONSULT before performing symptom diagnosis. If any malfunction result or DTC is detected, perform the corresponding diagnosis.

1.CHECK MAGNET CLUTCH OPERATION

1. Turn ignition switch ON.
2. Turn fan control dial ON.
3. Press A/C switch.
4. Check that A/C indicator turns ON. Check visually and by sound that compressor operates.
5. Press A/C switch again.
6. Check that A/C indicator turns OFF. Check that compressor stops.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check compressor operation. Refer to [HAC-44. "Diagnosis Procedure"](#).

2.CHECK DRIVE BELT

Check tension of drive belt. Refer to [EM-17. "Inspection"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Adjust or replace drive belt depending on the inspection results.

3.CHECK REFRIGERANT CYCLE PRESSURE

Connect the recovery/recycling recharging equipment to the vehicle and perform the pressure inspection using gauge. Refer to [HA-25. "Symptom Table"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace parts depending on the inspection results.

4.CHECK AIR LEAKAGE FROM EACH DUCT

Check duct and nozzle, etc. of the air conditioner system for leakage.

Is the inspection result normal?

YES >> Check air mix door cable installation and air mix door operation.

NO >> Repair or replace parts depending on the inspection results.

INSUFFICIENT HEATING

Description

INFOID:000000007207697

Symptom

- Insufficient heating
- No warm air comes out. (Air flow volume is normal.)

Diagnosis Procedure

INFOID:000000007207698

NOTE:

Perform self-diagnosis with CONSULT before performing symptom diagnosis. If any malfunction result or DTC is detected, perform the corresponding diagnosis.

1.CHECK COOLING SYSTEM

1. Check engine coolant level and check for leakage. Refer to [CO-8, "Inspection"](#).
2. Check radiator cap. Refer to [CO-12, "RADIATOR CAP : Inspection"](#).
3. Check water flow sounds of the engine coolant. Refer to [CO-9, "Refilling Engine Coolant"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Refill engine coolant and repair or replace the parts depending on the inspection results.

2.CHECK HEATER HOSE

Check installation of heater hose by visually or touching.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace parts depending on the inspection results.

3.CHECK HEATER CORE

1. Check temperature of inlet hose and outlet hose of heater core.
2. Check that inlet side of heater core is hot and the outlet side is slightly lower than/almost equal to the inlet side.

CAUTION:

Always perform the temperature inspection in a short period of time because the engine coolant temperature is very hot.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace heater core. Refer to [HA-37, "HEATER CORE : Removal and Installation"](#).**4.CHECK AIR LEAKAGE FROM EACH DUCT**

Check duct and nozzle, etc. of air conditioning system for air leakage.

Is the inspection result normal?

YES >> Check air mix door cable installation and air mix door operation.

NO >> Repair or replace parts depending on the inspection results.

COMPRESSOR DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[MANUAL AIR CONDITIONING]

COMPRESSOR DOES NOT OPERATE

Description

INFOID:000000007207699

SYMPTOM

Compressor does not operate.

Diagnosis Procedure

INFOID:000000007207700

NOTE:

- Perform self-diagnosis with CONSULT before performing symptom diagnosis. If any malfunction result or DTC is detected, perform the corresponding diagnosis.
- Check that refrigerant system is fully charged. If the refrigerant charge is low, perform the inspection for refrigerant leakage

1. CHECK MAGNET CLUTCH OPERATION

Check magnet clutch. Refer to [HAC-39. "Component Function Check"](#).

Does it operate normally?

- YES >> GO TO 2.
NO >> Repair or replace malfunctioning parts.

2. CHECK REFRIGERANT PRESSURE SENSOR

Check refrigerant pressure sensor. Refer to [EC-429. "Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace malfunctioning parts.

3. CHECK A/C ON SIGNAL

Check A/C ON signal. Refer to [HAC-29. "Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair or replace malfunctioning parts.

4. CHECK BLOWER FAN ON SIGNAL

Check blower fan ON signal. Refer to [HAC-32. "Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Repair or replace malfunctioning parts

5. CHECK BCM OUTPUT SIGNAL

Ⓔ With CONSULT

1. Select "DATA MONITOR" mode of "ECM" using CONSULT.
2. Select "AIR COND SIG" and "HEATER FAN SW", and check status under the following conditions.

Monitor item	Condition	Status	
AIR COND SIG	A/C switch	OFF (A/C indicator: OFF)	Off
		ON (A/C indicator: ON)	On
HEATER FAN SW	Blower motor	OFF	Off
		ON	On

Is the inspection result normal?


- YES >> Replace IPDM E/R. Refer to [PCS-25. "Removal and Installation"](#).
NO >> Replace BCM. Refer to [BCS-52. "Removal and Installation"](#).

UNIT REMOVAL AND INSTALLATION

CONTROL PANEL

Exploded View

INFOID:000000007207701

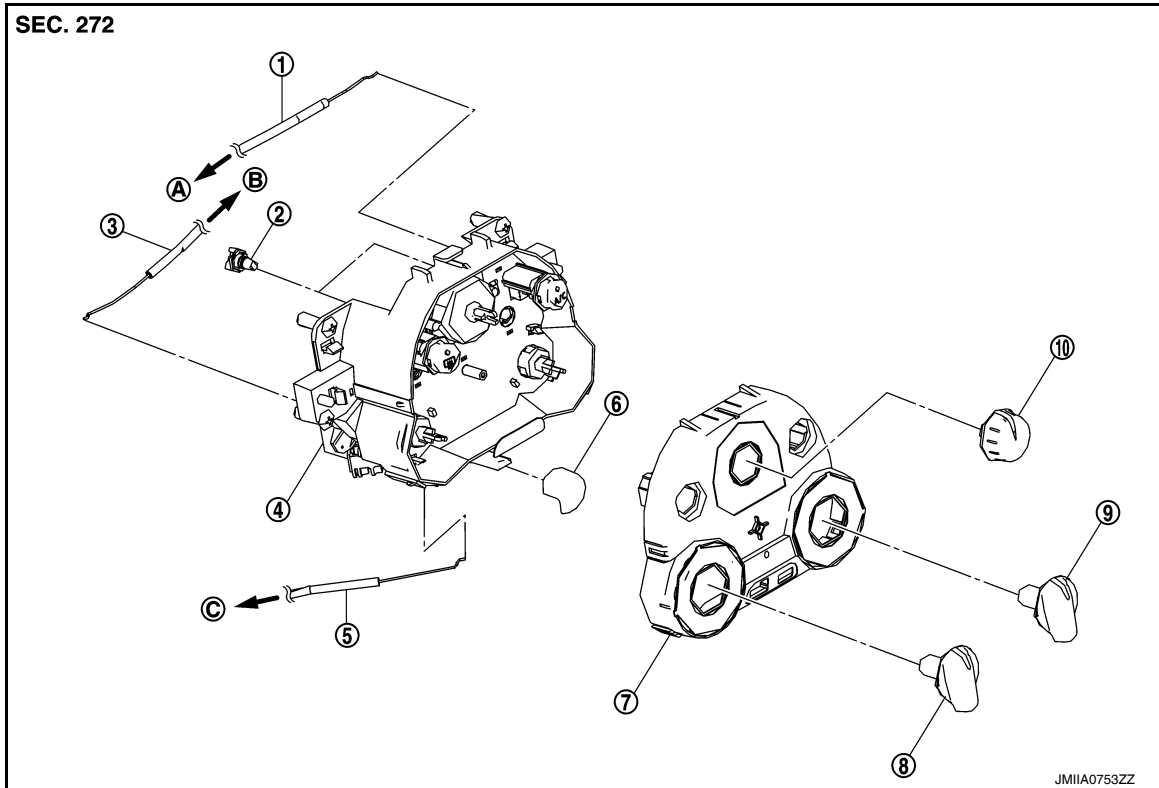

- | | | |
|----------------------|----------------------|---------------------------|
| 1. Mode door cable | 2. Illumination bulb | 3. Air mix door cable |
| 4. A/C Control | 5. Intake door cable | 6. Intake door lever knob |
| 7. Control panel | 8. Mode dial | 9. Temperature dial |
| 10. Fan control dial | A. To mode door link | B. To air mix door link |
| C. Intake door link | | |

Removal and Installation

INFOID:000000007207702

REMOVAL

1. Remove A/C finisher. Refer to [IP-15. "Removal and Installation"](#).
2. Remove the air mix door cable from the A/C unit assembly. Refer to [HAC-50. "AIR MIX DOOR CABLE : Removal and Installation"](#).
3. Remove the mode door cable from the A/C unit assembly. Refer to [HAC-50. "MODE DOOR CABLE : Removal and Installation"](#).
4. Remove the intake door cable from the A/C unit assembly. Refer to [HAC-49. "INTAKE DOOR CABLE : Removal and Installation"](#).
5. Remove the A/C control panel screws.
6. Remove the A/C control panel.

INSTALLATION

Installation is in the reverse order of removal.

THERMO CONTROL AMPLIFIER

< UNIT REMOVAL AND INSTALLATION >

[MANUAL AIR CONDITIONING]

THERMO CONTROL AMPLIFIER

Exploded View

INFOID:000000007207705

Refer to [HA-36. "Exploded View"](#).

Removal and Installation

INFOID:000000007207706

REMOVAL

1. Remove the evaporator. Refer to [HA-37. "EVAPORATOR : Removal and Installation"](#).
2. Remove the thermo control amplifier from the evaporator.

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- **Replace O-ring with new one. Then apply compressor oil to them when installing.**
- **When installing the thermo control amplifier, set to the same position as before replacement.**
- **When removing the thermo control amplifier, do not turn the bracket which is on the top of the thermo control amp.**
- **Check for the leakages when recharging refrigerant. Refer to [HA-16. "Leak Test"](#).**

REFRIGERANT PRESSURE SENSOR

< UNIT REMOVAL AND INSTALLATION >

[MANUAL AIR CONDITIONING]

REFRIGERANT PRESSURE SENSOR

Removal and Installation for Refrigerant Pressure Sensor


INFOID:000000007732998

REMOVAL

CAUTION:

- Do not damage the condenser fins.
- Perform lubricant return operation before each refrigeration system disassembly. However, if a large amount of refrigerant or lubricant is detected, never perform lubricant return operation. Refer to [HA-20, "Perform Oil Return Operation"](#).

1. Move air guide aside.
2. Disconnect the refrigerant pressure sensor connector.
3. Remove the refrigerant pressure sensor (1) from the liquid tank on the condenser.

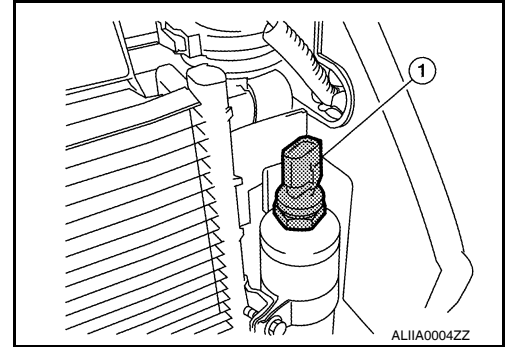

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- Replace O-ring with new one. Then apply compressor oil to them when installing.
- Check for leakages when recharging refrigerant. Refer to [HA-16, "Leak Test"](#)

A

B

C

D

E

F

G

H

HAC

J

K

L

M

N

O

P

BLOWER FAN RESISTOR


< UNIT REMOVAL AND INSTALLATION >

[MANUAL AIR CONDITIONING]

BLOWER FAN RESISTOR

Exploded View

INFOID:000000007733001

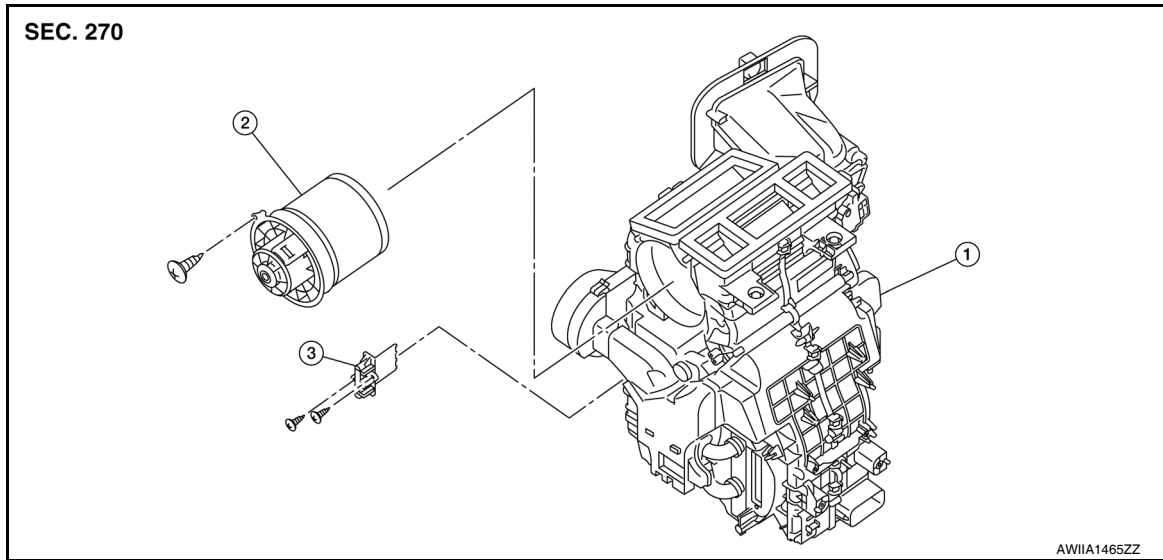

1. A/C unit assembly

2. Blower motor

3. Blower fan resistor

Removal and Installation

INFOID:000000007207710

REMOVAL

1. Remove instrument panel assembly. Refer to [IP-15. "Removal and Installation"](#).
2. Disconnect blower fan resistor connector.
3. Remove screws, and then remove blower fan resistor.

INSTALLATION

Installation is in the reverse order of removal.

DOOR CABLE


< UNIT REMOVAL AND INSTALLATION >

[MANUAL AIR CONDITIONING]

DOOR CABLE

Exploded View

INFOID:000000007207711

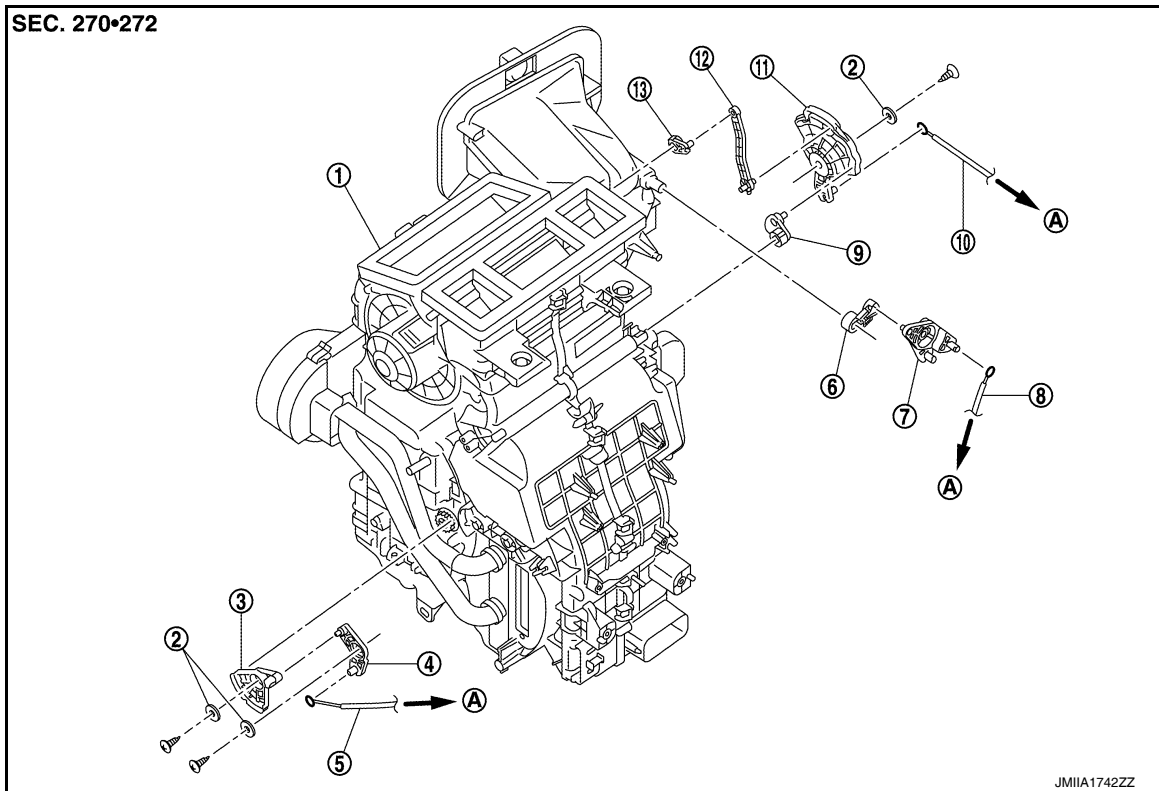

- | | | |
|---------------------------|-----------------------|-------------------------|
| 1. A/C unit assembly | 2. Plate | 3. Air mix door link 2 |
| 4. Air mix door link 1 | 5. Air mix door cable | 6. Intake door lever |
| 7. Intake door link | 8. Intake door cable | 9. Foot door lever |
| 10. Mode door cable | 11. Main link | 12. Ventilator door rod |
| 13. Ventilator door lever | A. To A/C control | |

INTAKE DOOR CABLE

INTAKE DOOR CABLE : Removal and Installation

INFOID:000000007207712

REMOVAL

1. Remove front passenger air bag module or instrument finisher D. Refer to [IP-15, "Removal and Installation"](#).
2. Disconnect intake door cable from A/C control.
3. Disconnect intake door cable from A/C unit assembly, and then remove intake door cable.

INSTALLATION

Installation is in the reverse order of removal.

INTAKE DOOR CABLE : Adjustment

INFOID:000000007207713


1. Remove front passenger air bag module or instrument finisher D. Refer to [IP-15, "Removal and Installation"](#).

DOOR CABLE

< UNIT REMOVAL AND INSTALLATION >

[MANUAL AIR CONDITIONING]

2. Disconnect intake door cable (1) from clamp (A).
3. Set intake door lever to REC position.
4. Push intake door link (2) in the direction as shown, and then carefully pulling outer cable to A/C control side, and connect clamp.

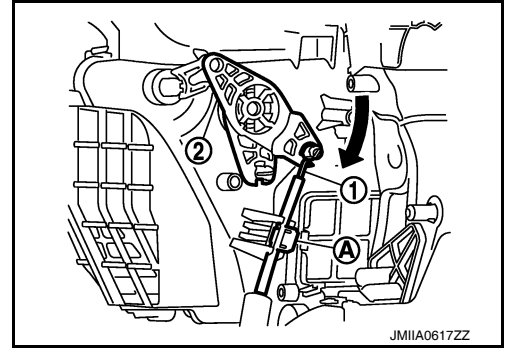

5. Operate intake door lever to insure that inner cable moves smoothly.

CAUTION:

When clamping the outer cable, never move the inner cable.

MODE DOOR CABLE

MODE DOOR CABLE : Removal and Installation

INFOID:000000007207714

REMOVAL

1. Remove A/C unit assembly. Refer to [HA-36. "A/C UNIT ASSEMBLY : Removal and Installation"](#).
2. Disconnect mode door cable from A/C control.
3. Disconnect mode door cable from A/C unit assembly, and then remove mode door cable.


INSTALLATION

Installation is in the reverse order of removal.

MODE DOOR CABLE : Adjustment

INFOID:000000007207715

1. Remove A/C unit assembly. Refer to [HA-36. "A/C UNIT ASSEMBLY : Removal and Installation"](#).
2. Disconnect mode door cable (1) from clamp (A).
3. Set mode dial to VENT position.
4. Push main link (2) in the direction as shown, and then carefully pulling outer cable to A/C control side, and connect clamp.

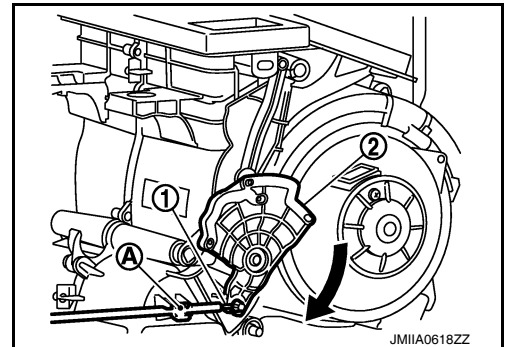

5. Operate mode dial to insure that inner cable moves smoothly.

CAUTION:

When clamping the outer cable, never move the inner cable.

AIR MIX DOOR CABLE

AIR MIX DOOR CABLE : Removal and Installation

INFOID:000000007207716

REMOVAL

1. Remove foot duct LH. Refer to [VTL-7. "FOOT DUCT : Removal and Installation"](#).
2. Disconnect air mix door cable from A/C control.
3. Disconnect air mix door cable from A/C unit assembly, and then remove air mix door cable.

INSTALLATION

Installation is in the reverse order of removal.

DOOR CABLE


< UNIT REMOVAL AND INSTALLATION >

[MANUAL AIR CONDITIONING]

AIR MIX DOOR CABLE : Adjustment

INFOID:000000007207717

1. Remove cluster lid "C". Refer to [IP-21. "Removal and Installation"](#).
2. Remove instrument panel finisher "B". Refer to [IP-20. "Removal and Installation"](#).
3. Remove glove box. Refer to [IP-22. "Removal and Installation"](#).
4. Disconnect air mix door cable (1) from clamp (A).
5. Set temperature control dial to full cold position.
6. Push air mix door link (2) in the direction as shown, and then carefully pulling outer cable to A/C control side, and connect clamp.

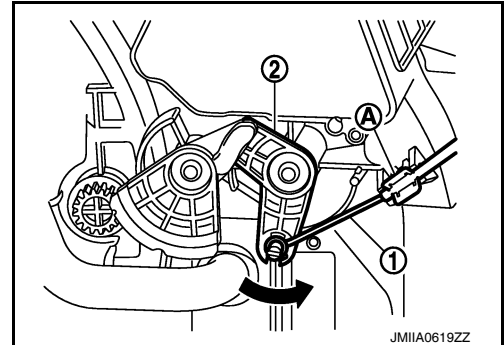

7. Operate temperature control dial to insure that inner cable moves smoothly.

CAUTION:

When clamping the outer cable, never move the inner cable.

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

HAC