

SECTION **WCS**

WARNING CHIME SYSTEM

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

CONTENTS

<p>PRECAUTION 3</p> <p>PRECAUTIONS 3</p> <p style="padding-left: 20px;">Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"3</p> <p>SYSTEM DESCRIPTION 4</p> <p>COMPONENT PARTS 4</p> <p style="padding-left: 20px;">Component Parts Location4</p> <p style="padding-left: 20px;">Combination Meter5</p> <p>SYSTEM 6</p> <p>WARNING CHIME SYSTEM6</p> <p style="padding-left: 20px;">WARNING CHIME SYSTEM : System Description6</p> <p style="padding-left: 20px;">WARNING CHIME SYSTEM : Fail-safe7</p> <p>LIGHT REMINDER WARNING CHIME7</p> <p style="padding-left: 20px;">LIGHT REMINDER WARNING CHIME : Light Reminder Warning7</p> <p>PARKING BRAKE RELEASE WARNING CHIME.....8</p> <p style="padding-left: 20px;">PARKING BRAKE RELEASE WARNING CHIME : Parking Brake Release Warning Chime8</p> <p>SEAT BELT REMINDER WARNING CHIME9</p> <p style="padding-left: 20px;">SEAT BELT REMINDER WARNING CHIME : Seat belt Warning9</p> <p>KEY WARNING CHIME 10</p> <p style="padding-left: 20px;">KEY WARNING CHIME : Key Warning Chime 10</p> <p>DIAGNOSIS SYSTEM (COMBINATION METER)12</p> <p style="padding-left: 20px;">On Board Diagnosis Function 12</p> <p style="padding-left: 20px;">CONSULT Function 13</p> <p>DIAGNOSIS SYSTEM (BCM) (WITH INTELLIGENT KEY SYSTEM)16</p>	<p>COMMON ITEM16</p> <p style="padding-left: 20px;">COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)16</p> <p>BUZZER17</p> <p style="padding-left: 20px;">BUZZER : CONSULT Function (BCM - BUZZER)...17</p> <p>DIAGNOSIS SYSTEM (BCM) (WITHOUT INTELLIGENT KEY SYSTEM) 18</p> <p>COMMON ITEM18</p> <p style="padding-left: 20px;">COMMON ITEM : CONSULT Function (BCM - COMMON ITEM) 18</p> <p>BUZZER19</p> <p style="padding-left: 20px;">BUZZER : CONSULT Function (BCM - BUZZER)...19</p> <p>ECU DIAGNOSIS INFORMATION20</p> <p>COMBINATION METER20</p> <p style="padding-left: 20px;">Reference Value20</p> <p style="padding-left: 20px;">Fail-safe22</p> <p style="padding-left: 20px;">DTC Index23</p> <p>BCM (BODY CONTROL MODULE)24</p> <p style="padding-left: 20px;">List of ECU Reference24</p> <p>WIRING DIAGRAM25</p> <p>WARNING CHIME SYSTEM25</p> <p style="padding-left: 20px;">Wiring Diagram25</p> <p>BASIC INSPECTION30</p> <p>DIAGNOSIS AND REPAIR WORK FLOW30</p> <p style="padding-left: 20px;">Work Flow30</p> <p>DTC/CIRCUIT DIAGNOSIS32</p> <p>POWER SUPPLY AND GROUND CIRCUIT32</p> <p>COMBINATION METER32</p> <p style="padding-left: 20px;">COMBINATION METER : Diagnosis Procedure32</p>
--	---

WCS

BCM (BODY CONTROL SYSTEM) (WITH INTELLIGENT KEY SYSTEM)	32	Description	40
BCM (BODY CONTROL SYSTEM) (WITH INTELLIGENT KEY SYSTEM) : Diagnosis Procedure	33	Component Function Check	40
BCM (BODY CONTROL SYSTEM) (WITHOUT INTELLIGENT KEY SYSTEM)	33	Diagnosis Procedure	40
BCM (BODY CONTROL SYSTEM) (WITHOUT INTELLIGENT KEY SYSTEM) : Diagnosis Procedure	33	Component Inspection	41
METER BUZZER CIRCUIT	35	SYMPTOM DIAGNOSIS	42
Component Function Check	35	THE PARKING BRAKE RELEASE WARNING CONTINUES SOUNDING, OR DOES NOT SOUND	42
Diagnosis Procedure	35	Description	42
SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT	36	Diagnosis Procedure	42
Description	36	THE SEAT BELT REMINDER WARNING CONTINUES SOUNDING, OR DOES NOT SOUND	43
Component Function Check	36	Description	43
Diagnosis Procedure	36	Diagnosis Procedure	43
Component Inspection	37	THE LIGHT REMINDER WARNING DOES NOT SOUND	44
PARKING BRAKE SWITCH SIGNAL CIRCUIT	38	Description	44
Component Function Check	38	Diagnosis Procedure	44
Diagnosis Procedure	38	THE KEY WARNING DOES NOT SOUND (WITHOUT INTELLIGENT KEY)	45
Component Inspection	39	Description	45
KEY SWITCH SIGNAL CIRCUIT (WITHOUT INTELLIGENT KEY)	40	Diagnosis Procedure	45

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000009681837

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

WCS

COMPONENT PARTS


< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:000000009654139

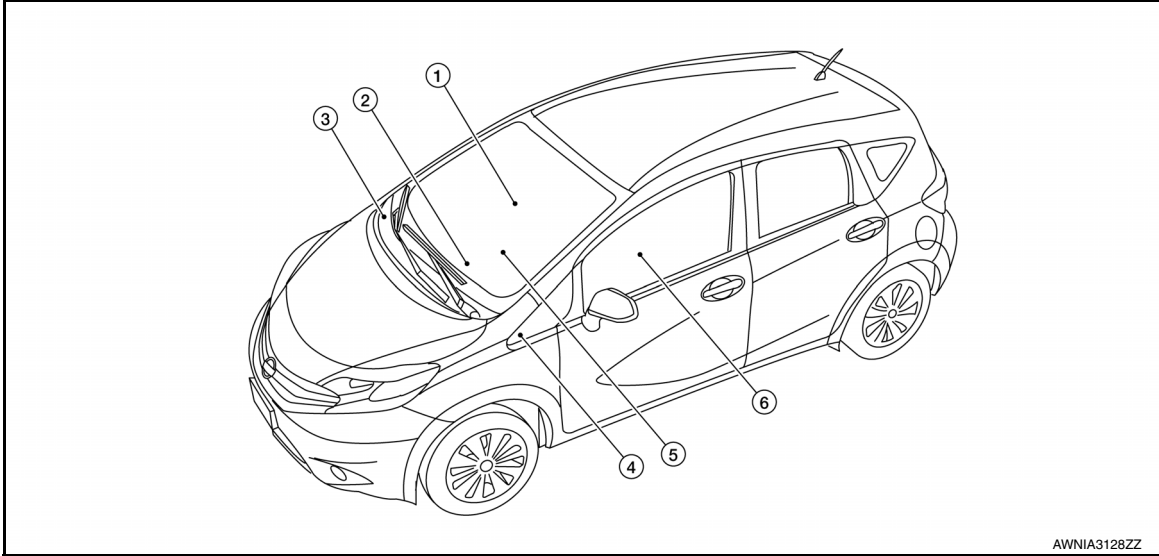

AWNIA3128ZZ

No.	Component	Function
1.	Parking brake switch	Transmits the parking brake switch signal to the combination meter.
2.	Key switch	Transmits the key switch signal to the BCM. Refer to SEC-131. "NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS : Component Parts Location" (without Intelligent Key) for detailed installation location.
3.	ABS actuator and electric unit (control unit)	Transmits the vehicle speed signal to the combination meter via CAN communication. Refer to BRC-7. "Component Parts Location" for detailed installation location.
4.	BCM	Based on the signals received from various units and switches, transmits the buzzer output signal to the combination meter via CAN communication. Refer to BCS-6. "BODY CONTROL SYSTEM : Component Parts Location" (with Intelligent Key) or BCS-73. "BODY CONTROL SYSTEM : Component Parts Location" (without Intelligent Key) for detailed installation location.
5.	Combination meter	<ul style="list-style-type: none"> • Receives a buzzer output signal from the BCM with CAN communication line and sounds the buzzer. • Controls the following with the vehicle speed signal received from ABS actuator and electric unit (control unit) via CAN communication and the signals from switches. <ul style="list-style-type: none"> - Seat belt reminder warning chime - Parking brake release warning chime - Key warning chime
6.	Seat belt buckle switch LH	Transmits a seat belt buckle switch signal LH to the combination meter.

COMPONENT PARTS


< SYSTEM DESCRIPTION >

Combination Meter

INFOID:000000009654140

The combination meter has a built-in buzzer (1) and sounds the following warnings, according to signals from each switch and unit.

- Light reminder warning
- Parking brake release warning chime
- Seat belt warning
- Key warning chime

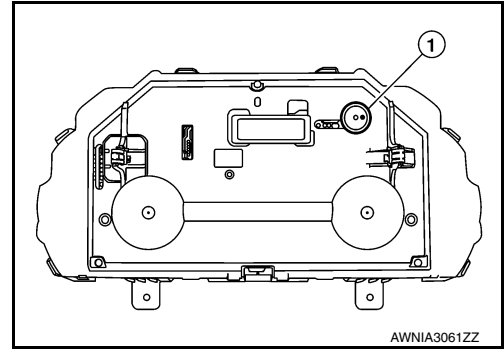

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

WCS

SYSTEM

< SYSTEM DESCRIPTION >


SYSTEM

WARNING CHIME SYSTEM


WARNING CHIME SYSTEM : System Description

INFOID:000000009654141

SYSTEM DIAGRAM (WITH INTELLIGENT KEY)

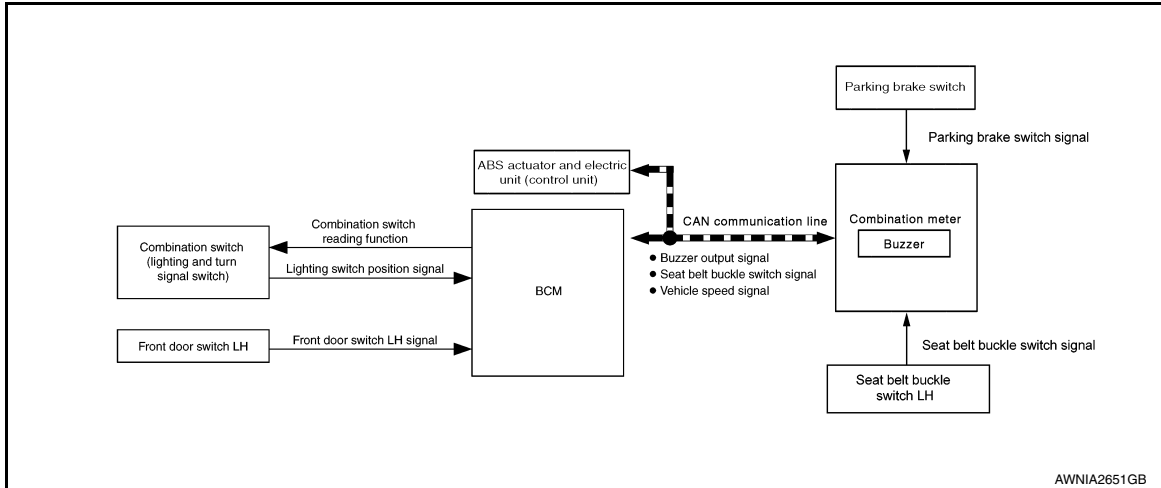

SYSTEM DIAGRAM (WITHOUT INTELLIGENT KEY)

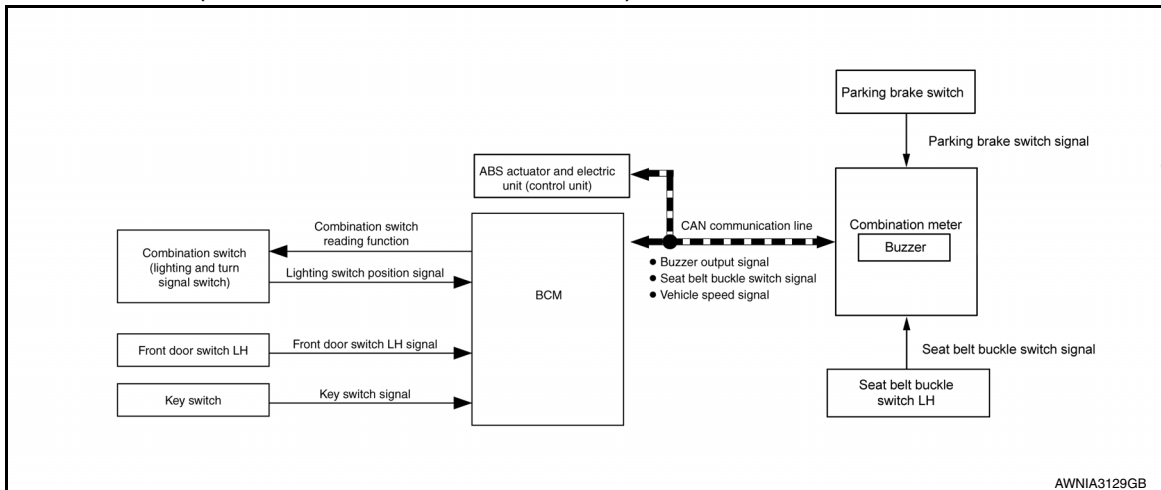

COMBINATION METER INPUT/OUTPUT SIGNAL (CAN COMMUNICATION SIGNAL)

Input signal

Signal name	Transmit unit
Vehicle speed signal	ABS actuator and electric unit (control unit)
Buzzer output signal	BCM

Output signal

Signal name	Reception unit
Vehicle speed signal	BCM

BCM INPUT/OUTPUT SIGNAL (CAN COMMUNICATION SIGNAL)

Input signal

SYSTEM

< SYSTEM DESCRIPTION >

Signal name	Transmit unit
Vehicle speed signal	Combination meter

Output signal

Signal name	Reception unit
Buzzer output signal	Combination meter

DESCRIPTION

Combination Meter

The combination meter sounds the alarm buzzer installed in the combination meter when receiving the buzzer output signal transmitted from each unit.

BCM

BCM receives signals from various units and transmits a buzzer output signal to the combination meter via CAN communication if it judges that the warning buzzer should be activated.

WARNING CHIME FUNCTION LIST

Warning functions	Refer to
Light reminder warning	WCS-7, "LIGHT REMINDER WARNING CHIME : Light Reminder Warning"
Parking brake release warning chime	WCS-8, "PARKING BRAKE RELEASE WARNING CHIME : Parking Brake Release Warning Chime"
Seat belt warning	WCS-9, "SEAT BELT REMINDER WARNING CHIME : Seat belt Warning"
Key warning chime (without Intelligent Key)	WCS-10, "KEY WARNING CHIME : Key Warning Chime"

WARNING CHIME SYSTEM : Fail-safe

INFOID:000000009654142


The combination meter activates the fail-safe control if CAN communication with each unit is malfunctioning.

Function	Specifications
Buzzer	The buzzer turns OFF by suspending communication.

LIGHT REMINDER WARNING CHIME

LIGHT REMINDER WARNING CHIME : Light Reminder Warning

INFOID:000000009654143

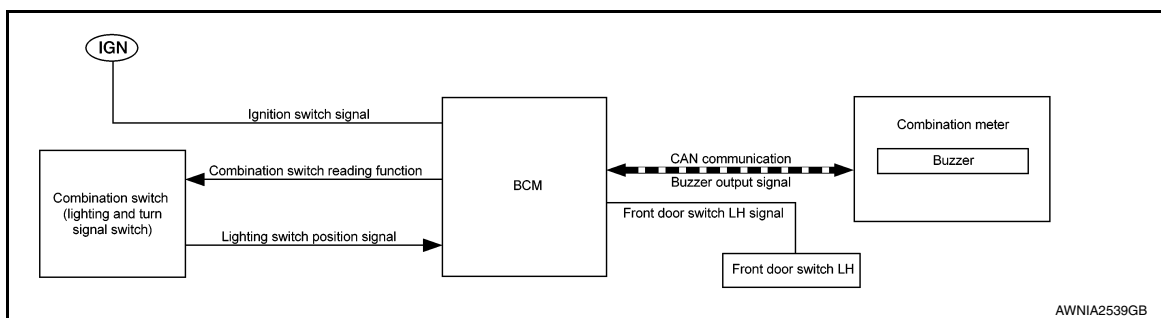

WARNING CHIME OPERATION CONDITIONS

If all of the following conditions are fulfilled.

SYSTEM

< SYSTEM DESCRIPTION >

Operation conditions	
Ignition switch	OFF or ACC position
Combination switch (Lighting switch)	1st or 2nd position
Driver side door	Open [front door switch LH ON]

WARNING CHIME CANCEL CONDITIONS

Warning is canceled if any of the following conditions is fulfilled.


Operation conditions	
Ignition switch	ON
Combination switch (Lighting switch)	OFF or AUTO position
Driver side door	Close [front door switch LH OFF]

SIGNAL PATH

1. BCM requires warning chime output to combination meter when it judges light reminder warning chime is necessary from signals below.

Signal name	Signal source
Ignition switch signal	—
Combination switch signal	Combination switch (Lighting switch) → BCM
Driver door switch signal	Front door switch LH → BCM

2. Combination meter sounds integrated buzzer, following the warning chime output requirement (below signal) from BCM.


Signal name	Signal source
Buzzer output signal	BCM  Combination meter

PARKING BRAKE RELEASE WARNING CHIME

PARKING BRAKE RELEASE WARNING CHIME : Parking Brake Release Warning Chime

INFOID:000000009654144

SYSTEM DIAGRAM

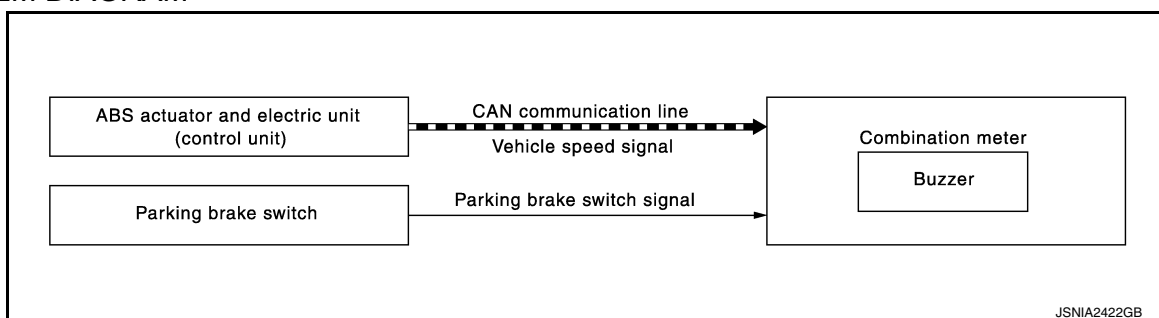

WARNING OPERATION CONDITIONS

If all of the following conditions are fulfilled.

Operation conditions	
Ignition switch	ON

SYSTEM

< SYSTEM DESCRIPTION >

Operation conditions	
Parking brake	During the operation (parking brake switch ON)
Vehicle speed	Approximately 4.3 MPH (7 km/h) or more

WARNING CANCEL CONDITIONS

Warning is canceled if any of the following conditions are fulfilled.

Operation conditions	
Ignition switch	OFF
Parking brake	Release condition (parking brake switch OFF)
Vehicle speed	Approximately 1.9 MPH (3 km/h) or less

SIGNAL PATH

Combination meter sounds integrated buzzer when it judges that parking brake release warning chime is necessary from signals below.


Signal name	Signal source
Ignition switch signal	—
Parking brake switch signal	Parking brake switch → Combination meter
Vehicle speed signal	ABS actuator and electric unit (control unit) ^{CAN} → Combination meter

SEAT BELT REMINDER WARNING CHIME

SEAT BELT REMINDER WARNING CHIME : Seat belt Warning

INFOID:000000009654145

SYSTEM DIAGRAM

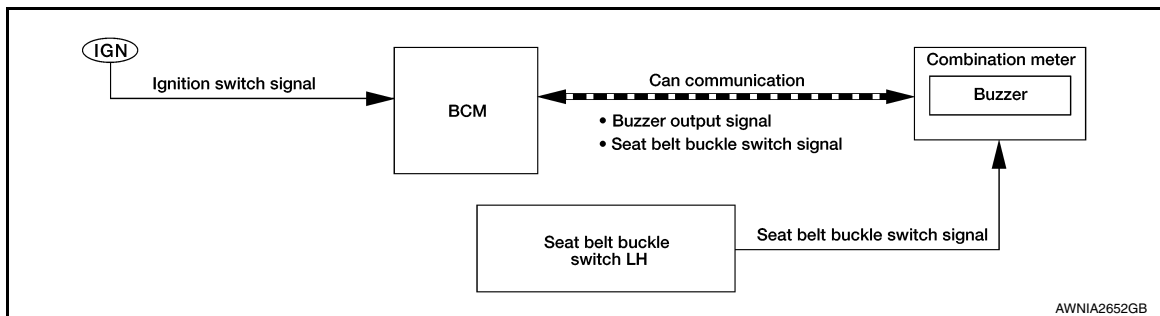

WARNING OPERATION CONDITIONS

If all of the following conditions are fulfilled.

Operation conditions	
Ignition switch	ON
Driver seat belt	Unfastened [seat belt buckle switch LH ON]

WARNING CANCEL CONDITIONS

Warning is canceled if any of the following conditions is fulfilled.

Operation conditions	
Ignition switch	OFF
Driver seat belt	Fastened (seat belt buckle switch LH OFF)
6 seconds after the start of warning sound	

SIGNAL PATH

A
B
C
D
E
F
G
H
I
J
K
L
M

WCS

O
P

SYSTEM

< SYSTEM DESCRIPTION >

1. BCM requires warning chime output to combination meter when it judges seat belt warning chime is necessary from signals below.

Signal name	Signal source
Ignition switch signal	—
Seat belt buckle switch signal (LH)	Seat belt buckle switch (LH) → Combination meter CAN → BCM

2. Combination meter sounds integrated buzzer, following the warning chime output requirement (below signal) from BCM.


Signal name	Signal source
Buzzer output signal	BCM CAN → Combination meter

KEY WARNING CHIME

KEY WARNING CHIME : Key Warning Chime

INFOID:000000009667997

SYSTEM DIAGRAM

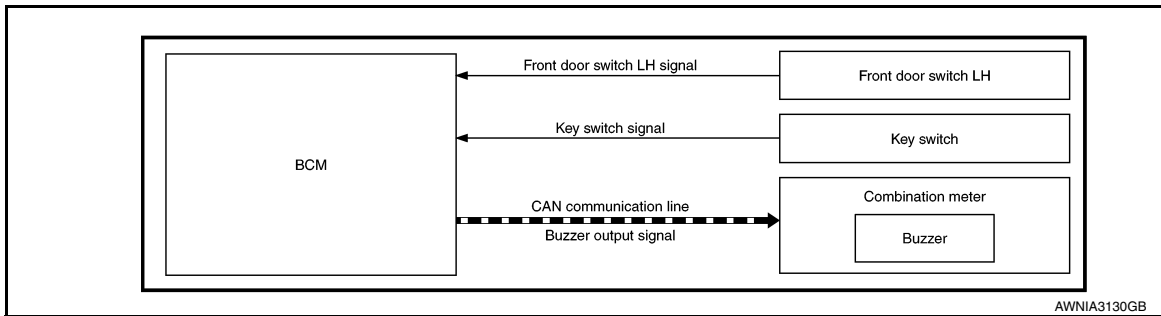

WARNING CHIME OPERATION CONDITIONS

If all of the following conditions are fulfilled.

Operation conditions	
Ignition switch	OFF or ACC position
Key switch	ON (key is in key cylinder)
Driver side door	Open [front door switch LH ON]

WARNING CHIME CANCEL CONDITIONS

Warning is canceled if any of the following conditions is fulfilled.

Operation conditions	
Ignition switch	ON
Key switch	ON (key is removed from key cylinder)
Driver side door	Close [front door switch LH OFF]

SIGNAL PATH

1. BCM detects key inserted into the ignition switch, and sends key warning signal to combination meter with CAN communication line.

Signal name	Signal source
Ignition switch signal	—

SYSTEM

< SYSTEM DESCRIPTION >

Signal name	Signal source
Key switch signal	Key switch → BCM
Driver door switch signal	Front door switch LH → BCM

2. Combination meter sounds integrated buzzer, when it receives a buzzer output signal from BCM.

Signal name	Signal source
Buzzer output signal	BCM ^{CAN} → Combination meter

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

WCS

DIAGNOSIS SYSTEM (COMBINATION METER)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (COMBINATION METER)

On Board Diagnosis Function

INFOID:000000009693749


ON BOARD DIAGNOSIS ITEM

Information display, speedometer and tachometer can be checked in self-diagnosis mode.


STARTING COMBINATION METER SELF-DIAGNOSIS MODE

METHOD OF STARTING

1. Turn ignition switch ON, and switch the trip meter to "trip A" or "trip B".
2. Turn ignition switch to OFF.
3. While pressing the meter control switch (1), turn the ignition switch ON.
4. Make sure that the trip meter displays "0000.0".
5. Press the meter control switch (1) at least 3 times. (Within 7 seconds after the ignition switch is turned ON).

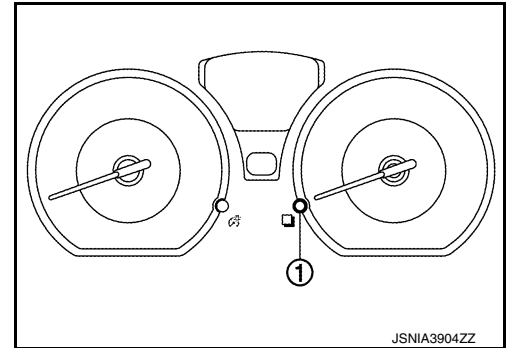


6. The combination meter is turned to self-diagnosis mode.
 - All segments of the information display and shift position indicator (A) for CVT models are displayed.

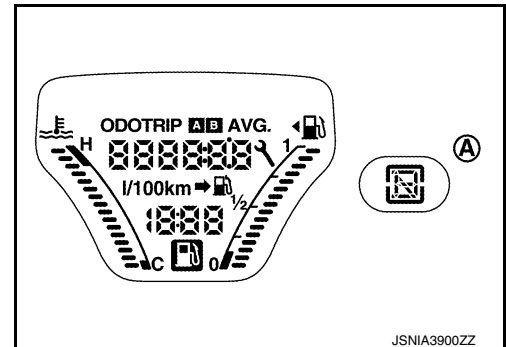

NOTE:

- Check combination meter power supply and ground circuit when the self-diagnosis mode of the combination meter does not start. replace combination meter if power supply and ground circuit are normal.
- If any of the segments are not displayed, replace combination meter.

7. Each meter activates by pressing the meter control switch.

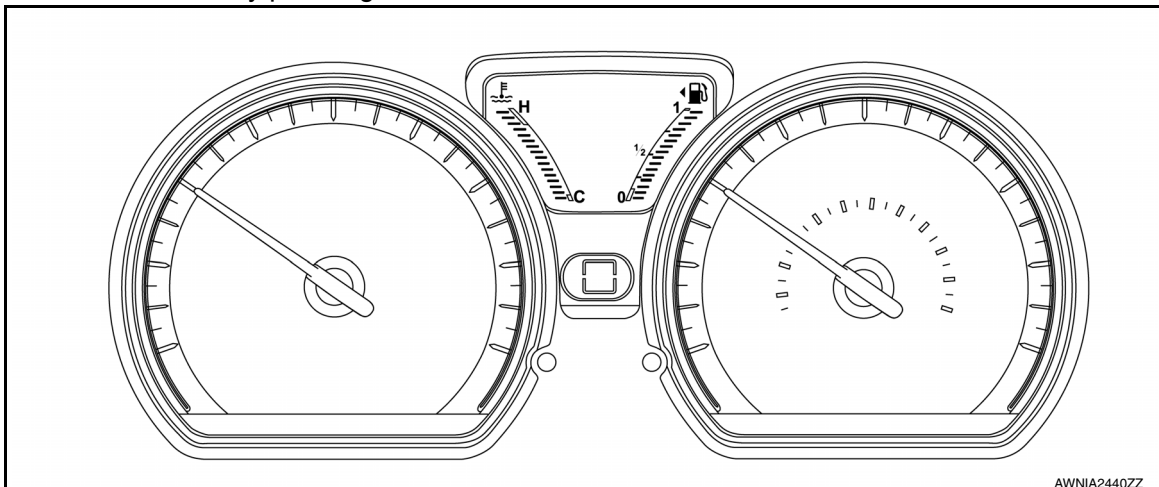

DIAGNOSIS SYSTEM (COMBINATION METER)

< SYSTEM DESCRIPTION >

NOTE:

- If any of the meters or gauges is not activated, replace combination meter.
- The figure is reference.

CONSULT Function

INFOID:000000009693750

APPLICATION ITEMS

CONSULT can display each diagnostic item using the diagnostic test modes shown.

METER/M&A Diagnosis mode	Description
Self Diagnostic Result	The combination meter self-diagnosis results.
Data Monitor	Displays combination meter input/output data in real time.
Work support	Supports combination meter diagnosis.
Warning History	Lighting history of the warning lamp and indicator lamp can be checked.

SELF DIAG RESULT

Refer to [MWI-21, "DTC Index"](#).

DATA MONITOR

Display Item List

X: Applicable

Display item [Unit]	MAIN SIGNALS	Description
SPEED METER [mph] or [km/h]	X	Displays the value of vehicle speed signal.
SPEED OUTPUT [mph] or [km/h]	X	Displays the value of vehicle speed signal, which is transmitted to each unit with CAN communication.
ODO OUTPUT [Mi] or [km]		Displays odometer signal value transmitted to other units via CAN communication.
TACHO METER [rpm]	X	Displays the value of engine speed signal, which is input from ECM.
FUEL METER [L]	X	Displays the fuel level.
W TEMP METER [°F] or [°C]	X	Displays the value of engine coolant temperature signal, which is input from ECM.
ABS W/L [ON/OFF]		Displays [ON/OFF] condition of ABS warning indicator
VDC/TCS IND [ON/OFF]		Displays [ON/OFF] condition of VDC OFF indicator lamp.
SLIP IND [ON/OFF]		Displays [ON/OFF] condition of SLIP indicator lamp.
BRAKE W/L [ON/OFF]		Displays [ON/OFF] condition of brake warning indicator.
DOOR W/L [ON/OFF]		Displays [ON/OFF] condition of door warning indicator.
HI-BEAM IND [ON/OFF]		Displays [ON/OFF] condition of high beam indicator.
TURN IND [ON/OFF]		Displays [ON/OFF] condition of turn indicator.
FR FOG IND [ON/OFF]		Displays [ON/OFF] condition of front fog lamp indicator.
LIGHT IND [ON/OFF]		Displays [ON/OFF] condition of light indicator.
OIL W/L [ON/OFF]		Displays [ON/OFF] condition of engine oil pressure warning indicator.

DIAGNOSIS SYSTEM (COMBINATION METER)

< SYSTEM DESCRIPTION >

Display item [Unit]	MAIN SIGNALS	Description
MIL [ON/OFF]		Displays [ON/OFF] condition of malfunction indicator.
CRUISE IND [Off]		Displays [ON/OFF] condition of CRUISE indicator.
O/D OFF IND [ON/OFF]		Displays [ON/OFF] condition of O/D OFF indicator.
FUEL W/L [ON/OFF]		Displays [ON/OFF] condition of low-fuel warning indicator.
AIR PRES W/L [ON/OFF]		Displays [ON/OFF] condition of tire pressure warning lamp.
KEY G/Y W/L [ON/OFF]		Displays [ON/OFF] condition of Intelligent Key warning lamp.
EPS W/L [ON/OFF]		Displays [ON/OFF] condition of EPS indicator.
CHAGE W/L [Off]		Displays [ON/OFF] condition of charge warning indicator.
SHIFT IND [P, R, N, D, L]		Displays shift selector position.
FUEL CAP W/L [Off]		Displays [ON/OFF] condition of loose fuel cap warning message.
O/D OFF SW [ON/OFF]		Displays [ON/OFF] condition of O/D OFF switch.
REAR DEF SW [ON/OFF]		Displays [ON/OFF] condition of rear window defogger switch.
PKB SW [ON/OFF]		Status of parking brake switch.
BUCKLE SW [ON/OFF]		Status of seat belt buckle switch LH.
BRAKE OIL SW [ON/OFF]		Status of brake fluid level switch.
DISTANCE [M] or [Mi]		Displays distance to empty.
FUEL LOW SIG [ON/OFF]		Displays [ON/OFF] condition of low-fuel warning signal.
BUZZER [ON/OFF]	X	Displays [ON/OFF] condition of buzzer.
TPMS PRESS L [ON/OFF]		Displays [ON/OFF] condition of check tire pressure warning message.

NOTE:

Some items are not available according to vehicle specification.

WARNING HISTORY

Display item	Description
W/L ON HISTORY	Lighting history of warning lamp and indicator lamp can be checked.

W/L ON HISTORY

- Stores histories when warning/indicator lamp is turned on.
- “W/L ON HISTORY” indicates the “TIME” when the warning/ indicator lamp is turned on.
- The “TIME” above is:
 - 0: The condition that the warning/indicator lamp has been turned on 1 or more times after starting the engine and waiting for 30 seconds.
 - 1 - 39: The number of times the engine was restarted after the 0 condition.
 - NO W/L ON HISTORY: Stores NO (0) turning on history of warning/indicator lamp.

DIAGNOSIS SYSTEM (COMBINATION METER)

< SYSTEM DESCRIPTION >

NOTE:

- W/L ON HISTORY is not stored for approximately 30 seconds after the engine starts.
- Brake warning lamp does not store any history when the parking brake is applied or the brake fluid level gets low.

A

B

C

D

E

F

G

H

I

J

K

L

M

WCS

O

P

DIAGNOSIS SYSTEM (BCM) (WITH INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM) (WITH INTELLIGENT KEY SYSTEM) COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000009693743

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Direct Diagnostic Mode	Description
ECU identification	The BCM part number is displayed.
Self Diagnostic Result	The BCM self diagnostic results are displayed.
Data Monitor	The BCM input/output data is displayed in real time.
Active Test	The BCM activates outputs to test components.
Work support	The settings for BCM functions can be changed.
Configuration	<ul style="list-style-type: none"> The vehicle specification can be read and saved. The vehicle specification can be written when replacing BCM.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication is displayed.

SYSTEM APPLICATION

BCM can perform the following functions.

System	Sub System	Direct Diagnostic Mode						
		ECU identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN DIAG SUPPORT MNTR
Door lock	DOOR LOCK		×	×	×	×		
Rear window defogger	REAR DEFOGGER			×	×			
Warning chime	BUZZER			×	×			
Interior room lamp timer	INT LAMP			×	×	×		
Exterior lamp	HEAD LAMP			×	×	×		
Wiper and washer	WIPER			×	×	×		
Turn signal and hazard warning lamps	FLASHER			×	×			
Air conditioner	AIR CONDITIONER			×				
Intelligent Key system	INTELLIGENT KEY		×	×	×	×		
Combination switch	COMB SW			×				
BCM	BCM	×	×			×	×	×
Immobilizer	IMMU		×		×	×		
Interior room lamp battery saver	BATTERY SAVER			×	×	×		
Vehicle security system	THEFT ALM			×	×	×		
RAP system	RETAINED PWR			×		×		
Signal buffer system	SIGNAL BUFFER			×				
TPMS	AIR PRESSURE MONITOR		×	×	×	×		
Panic alarm system	PANIC ALARM				×			

DIAGNOSIS SYSTEM (BCM) (WITH INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

BUZZER

BUZZER : CONSULT Function (BCM - BUZZER)

INFOID:000000009693744

DATA MONITOR

Monitor Item [Unit]	Description
PUSH -SW [On/Off]	Indicates condition of push-button ignition switch.
UNLK SEN -DR [On/Off]	Indicates condition of door unlock sensor.
VEH SPEED 1 [km/h]	Indicates vehicle speed signal received from ABS on CAN communication line.
TAIL LAMP SW [On/Off]	Indicates condition of combination switch.
FR FOG SW [On/Off]	Indicates condition of front fog lamp switch.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.

ACTIVE TEST

Test Item	Description
ID REGIST WARNING	This test is able to check TPMS transmitter ID regist warning chime operation [On/Off].
SEAT BELT WARN TEST	This test is able to check seat belt warning chime operation [On/Off].
LIGHT WARN ALM	This test is able to check light warning chime operation [On/Off].

A

B

C

D

E

F

G

H

I

J

K

L

M

WCS

O

P

DIAGNOSIS SYSTEM (BCM) (WITHOUT INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM) (WITHOUT INTELLIGENT KEY SYSTEM) COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000009693746

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Direct Diagnostic Mode	Description
ECU identification	The BCM part number is displayed.
Self Diagnostic Result	The BCM self diagnostic results are displayed.
Data Monitor	The BCM input/output data is displayed in real time.
Active Test	The BCM activates outputs to test components.
Work support	The settings for BCM functions can be changed.
Configuration	<ul style="list-style-type: none"> • The vehicle specification can be read and saved. • The vehicle specification can be written when replacing BCM.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication is displayed.

SYSTEM APPLICATION

BCM can perform the following functions.

System	Sub System	Direct Diagnostic Mode						
		ECU identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN DIAG SUPPORT MNTR
Door lock	DOOR LOCK		×	×	×	×		
Rear window defogger	REAR DEFOGGER			×	×			
Warning chime	BUZZER			×	×			
Interior room lamp timer	INT LAMP			×	×	×		
Remote keyless entry system	MULTI REMOTE ENT			×	×	×		
Exterior lamp	HEAD LAMP			×	×	×		
Wiper and washer	WIPER			×	×	×		
Turn signal and hazard warning lamps	FLASHER			×	×			
Air conditioner	AIR CONDITIONER			×				
Combination switch	COMB SW			×				
BCM	BCM	×	×			×	×	×
Immobilizer	IMMU		×		×	×		
Interior room lamp battery saver	BATTERY SAVER			×	×	×		
Vehicle security system	THEFT ALM			×	×	×		
RAP system	RETAINED PWR			×		×		
Signal buffer system	SIGNAL BUFFER			×	×			
TPMS	AIR PRESSURE MONITOR		×	×	×	×		
Panic alarm system	PANIC ALARM				×			

DIAGNOSIS SYSTEM (BCM) (WITHOUT INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

BUZZER

BUZZER : CONSULT Function (BCM - BUZZER)

INFOID:000000009693745

DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.
KEY ON SW [On/Off]	Indicates condition of key switch.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
REVERSE SW CAN [On/Off]	Indicates reverse switch signal received from TCM on CAN communication line.
TAIL LAMP SW [On/Off]	Indicates condition of combination switch.
FR FOG SW [On/Off]	Indicates condition of front fog lamp switch.
VEHICLE SPEED [km/h/mph]	Indicates vehicle speed signal received from combination meter on CAN communication line.

ACTIVE TEST

Test Item	Description
IGN KEY WARN ALM	This test is able to check key warning chime operation [On/Off].
SEAT BELT WARN TEST	This test is able to check seat belt warning chime operation [On/Off].
LIGHT WARN ALM	This test is able to check light warning chime operation [On/Off].

A

B

C

D

E

F

G

H

I

J

K

L

M

WCS

O

P

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

ECU DIAGNOSIS INFORMATION

COMBINATION METER

Reference Value

INFOID:000000009693751

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Display content	Data monitor	
		Condition	Reference value in normal operation
SPEED METER [mph or km/h]	Speed meter operation	While driving	Vehicle speed matches speed meter
SPEED OUTPUT [mph or km/h]	Vehicle speed	While driving	The speed output signal value via CAN communication is approx. value of vehicle speed.
ODO OUTPUT [mi or km]	ODO meter operation	Driving	Distance driven
TACHO METER [rpm]	Tacho meter operation	Engine running	The tacho meter is approx. value of engine speed via CAN communication.
FUEL METER [L]	Fuel level	Ignition ON	Fuel level is approx. value of fuel gauge.
W TEMP METER [°F] or [°C]	Engine coolant temperature	Engine running	Input value of engine coolant temperature signal via CAN communication.
ABS W/L	ABS warning lamp	When ABS warning lamp is ON	On
		When ABS warning lamp is OFF	Off
VDC/TCS IND	VDC indicator lamp	When VDC indicator lamp is ON	On
		When VDC indicator lamp is OFF	OFF
SLIP IND	Slip indicator lamp	When SLIP indicator lamp is ON	On
		When SLIP indicator lamp is OFF	Off
BRAKE W/L	Brake warning lamp	When Brake warning lamp is ON	On*
		When Brake warning lamp is OFF	Off
DOOR W/L	Door open warning lamp	When Door warning lamp is ON	On
		When Door warning lamp is OFF	Off
HI-BEAM IND	HI-Beam indicator lamp	When High-beam indicator lamp is ON	On
		When High-beam indicator lamp is OFF	Off
TURN IND	Turn signal indicator	When Turn signal indicator lamp is ON	On
		When Turn signal indicator lamp is OFF	Off
FR FOG IND	Front fog lamp indicator	Front fog lamp indicator lamp ON	On
		Front fog lamp indicator lamp OFF	Off
LIGHT IND	Light indicator	When Tail lamp indicator lamp is ON	On
		When Tail lamp indicator lamp is OFF	Off
OIL W/L	Engine oil pressure warning light	When engine oil pressure warning lamp is ON	On
		When engine oil pressure warning lamp is OFF	Off
MIL	MIL warning lamp	When Malfunction indicator lamp (MIL) is ON	On
		When Malfunction indicator lamp (MIL) is OFF	Off

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >


Monitor Item	Display content	Data monitor		
		Condition	Reference value in normal operation	
CRUISE IND	Cruise indicator lamp	When cruise indicator lamp is ON	On	A
		When cruise indicator lamp is OFF	Off	B
O/D OFF IND	O/D OFF indicator	When O/D OFF indicator lamp is OFF	Off	C
		When O/D OFF indicator lamp is ON	On	
FUEL W/L	Low fuel warning	When low fuel warning is ON	On	D
		When low fuel warning is Off	Off	
AIR PRES W/L	Tire pressure warning lamp operation	When tire pressure warning lamp is ON	ON	E
		When tire pressure warning lamp is OFF	Off	
KEY G/Y W/L	Intelligent Key warning lamp operation	When Intelligent Key warning lamp is ON	ON	F
		When Intelligent Key warning lamp is OFF	Off	
EPS W/L	EPS warning lamp	EPS warning lamp ON	On	G
		EPS warning lamp OFF	Off	
CHAGE W/L	Charge warning lamp	Engine running	Off	H
SHIFT IND	Shift position indicator	The position of the shift position selector	[P, R, N, D, L]	
FUEL CAP W/L	Loose fuel cap warning	Loose fuel filler cap warning is On	On	I
		Loose fuel filler cap warning is OFF	Off	
O/D OFF SW	O/D OFF switch	When O/D OFF switch is pressed to OFF	Off	J
		When O/D OFF switch is pressed to ON	On	
REAR DEF SW	Rear defogger switch	When rear defogger switch is pressed to ON	On	K
		When rear defogger is pressed to OFF	Off	
PKB SW	Parking brake switch	When parking brake is active	On	L
		When parking brake is inactive	Off	
BUCKLE SW	Seat belt buckle switch LH	When seat belt buckle LH is unfastened	On	M
		When seat belt buckle LH is fastened	Off	
BRAKE OIL SW	Brake fluid level switch	When brake fluid level switch ON	On	WCS
		When brake fluid level switch OFF	Off	
DISTANCE	Distance to empty	While driving	[mi or km]	O
FUEL LOW SIG	Low fuel warning	When low fuel warning is On	On	P
		When low fuel warning is Off	Off	
BUZZER	Buzzer operation	When Buzzer is ON	On	WCS
		When Buzzer is OFF	Off	
TPMS PRESS L	Low tire pressure warning	When check tire pressure warning message is On	On	WCS
		When check tire pressure warning message is OFF	Off	

*: Displays "Off" if the brake warning lamp is illuminated when the valve check starts, the parking brake switch is turned ON or the brake fluid level switch is turned ON.

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

TERMINAL LAYOUT

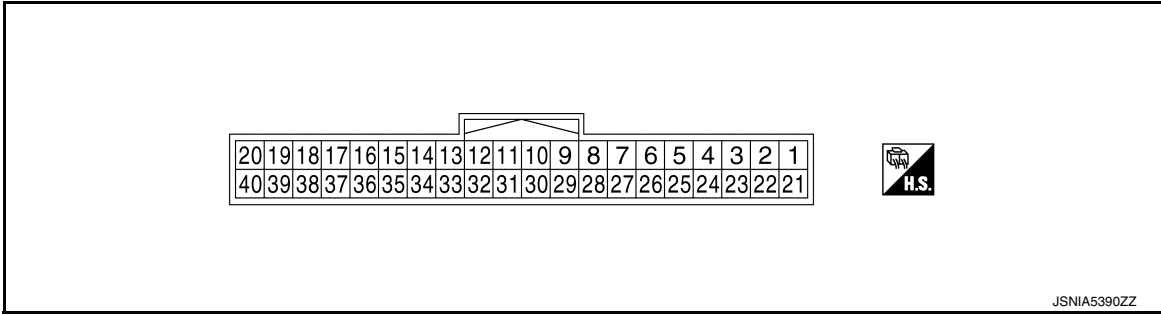

PHYSICAL VALUES

Terminal No.	Wire color	Item	Condition		Reference value (V) (Approx.)
			Ignition switch	Operation or condition	
1	L	CAN-H	—	—	—
2	P	CAN-L	—	—	—
3	SB	2P/R	—	—	—
4	LG	8P/R	—	—	—
6	W	Fuel level sensor signal (+)	—	—	Refer to MWI-46, "Component Inspection" .
7	V	Air bag	—	—	
8	P	O/D OFF switch	ON	O/D OFF switch pressed	0
				O/D OFF switch released	Battery voltage
9	V	Seat belt buckle switch LH	ON	Unfastened (ON)	0
				Fastened (OFF)	Battery voltage
10	SB	Parking Brake switch	ON	Parking brake is inactive	0
				Parking brake is active	Battery voltage
11	BR	Brake fluid level switch	ON	Brake fluid level low	0
				Brake fluid level normal	Battery voltage
13	B	Illumination control	—	—	—
15	R	Ignition switch ON or ACC	—	—	Battery voltage
17	V	Washer fluid level switch (Canada models)	ON	Washer fluid level low	0
				Washer fluid level normal	Battery voltage
18	R/Y	Security	—	—	—
21	B	Ground	—	—	0
22	B				
23	B				
24	GR	Fuel level sensor ground (-)	ON	—	0
27	R/W	Battery power supply	OFF	—	Battery voltage
28	GR	Ignition switch ON or START	ON	—	Battery voltage
29	G	Seat belt buckle switch RH	ON	Unfastened (ON)	0
				Fastened (OFF)	Battery voltage
38	Y	Generator	ON	Generator voltage low	0
				Generator voltage normal	Battery voltage

Fail-safe

INFOID:000000009693752

The combination meter activates the fail-safe control if CAN communication with each unit is malfunctioning.

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

Function		Specifications
Speedometer		Reset to zero by suspending communication.
Tachometer		
Illumination control		When suspending communication, changes to nighttime mode.
Shift position indicator		When suspending communication, not indicate.
Information display	Trip computer	Current fuel consumption
		Average fuel consumption
		Distance to empty
	Engine coolant temperature gauge	Reset to zero by suspending communication.
Odo/trip meter	An indicated value is maintained at communications blackout.	
Buzzer		The buzzer turns OFF by suspending communication.
Warning lamp/indicator lamp	ABS warning lamp	The lamp turns ON by suspending communication.
	Malfunction indicator lamp (MIL)	
	EPS warning lamp	
	Brake warning lamp	
	High beam indicator lamp	The lamp turns OFF by suspending communication.
	Turn signal indicator lamp	
	Door warning lamp	
	Light indicator lamp	
	Engine oil pressure warning lamp	
	Key warning lamp	
	O/D OFF indicator lamp	
	Shift P warning lamp	
	Engine start operation indicator lamp	

DTC Index

INFOID:000000009693753

Display contents of CONSULT	Diagnostic item is detected when...	Refer to
CAN COMM CIRCUIT [U1000]	When combination meter is not transmitting or receiving CAN communication signal for 2 seconds or more.	MWI-37
CONTROL UNIT (CAN) [U1010]	When detecting error during the initial diagnosis of the CAN controller of combination meter.	MWI-38
VEHICLE SPEED [B2205]	The abnormal vehicle speed signal is input from the ABS actuator and electric unit (control unit) for 2 seconds or more.	MWI-39
ENGINE SPEED [B2267]	If ECM continuously transmits abnormal engine speed signals for 2 seconds or more.	MWI-40
WATER TEMP [B2268]	If ECM continuously transmits abnormal engine coolant temperature signals for 60 seconds or more.	MWI-41

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)

List of ECU Reference

INFOID:000000008968435

ECU	Reference
BCM (with Intelligent Key)	BCS-28. "Reference Value"
	BCS-46. "Fail-safe"
	BCS-47. "DTC Inspection Priority Chart"
	BCS-48. "DTC Index"
BCM (without Intelligent Key)	BCS-95. "Reference Value"
	BCS-108. "Fail-safe"
	BCS-109. "DTC Inspection Priority Chart"
	BCS-109. "DTC Index"

WARNING CHIME SYSTEM


< WIRING DIAGRAM >

WIRING DIAGRAM

WARNING CHIME SYSTEM

Wiring Diagram

INFOID:000000009654150

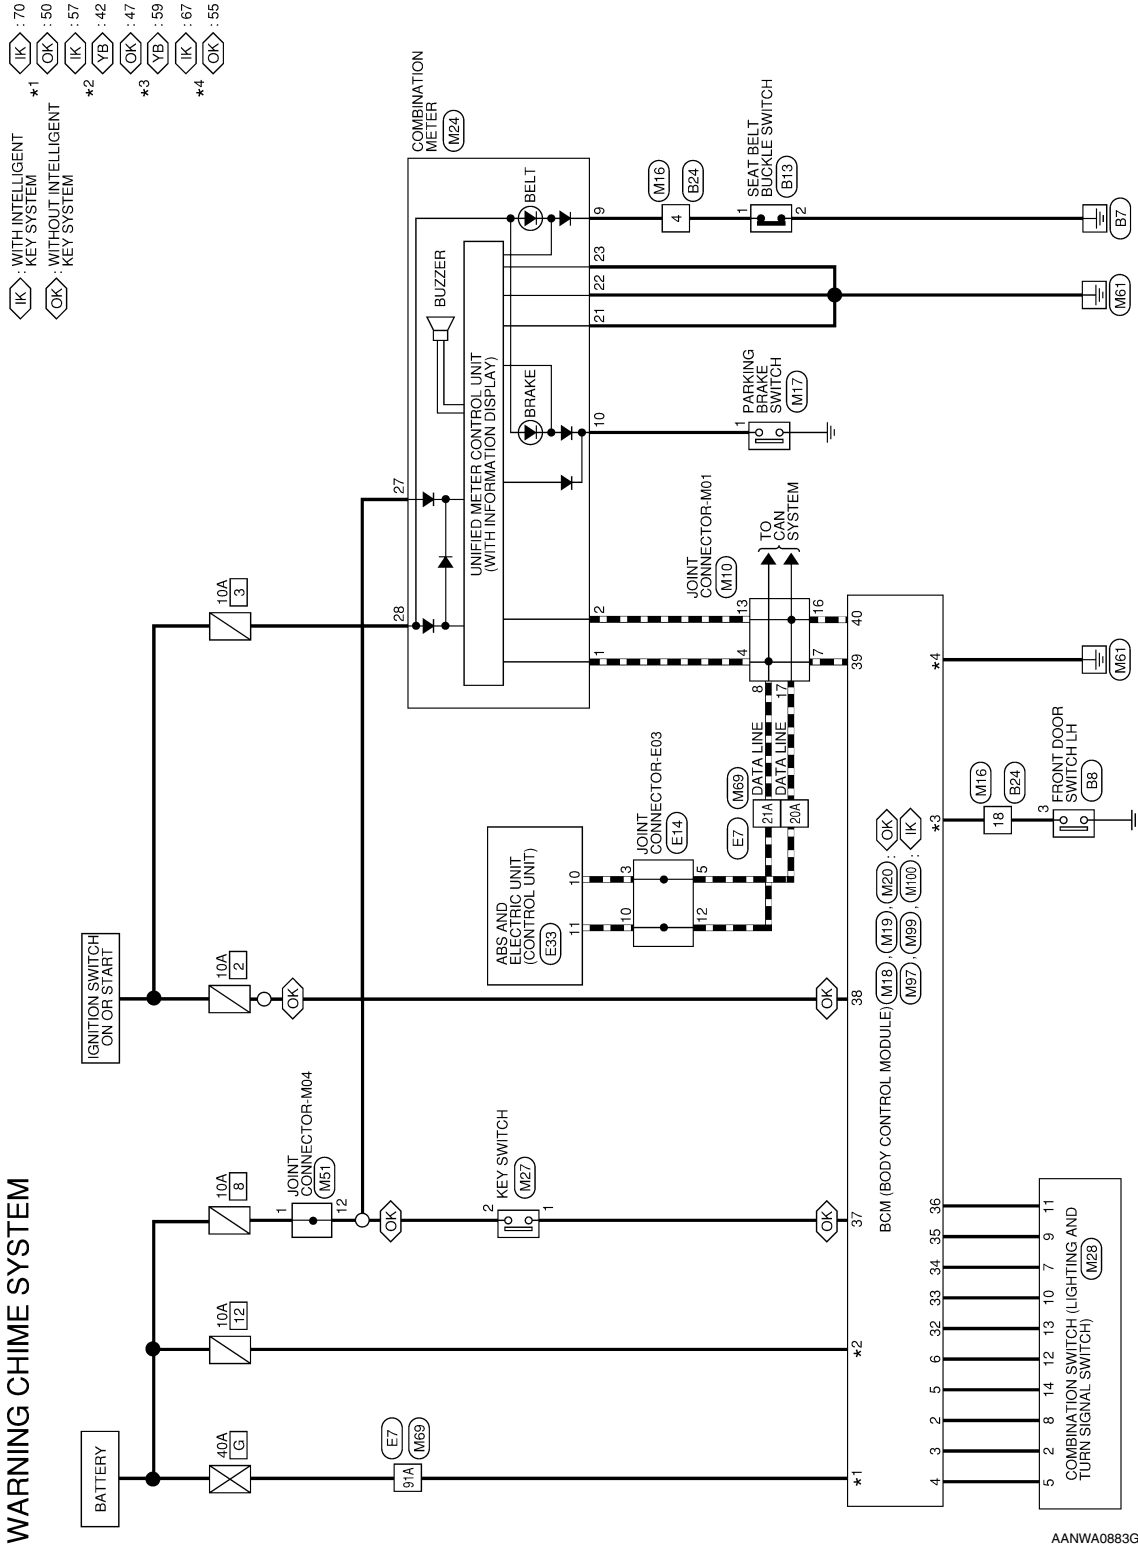

AANWA0883GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


WCS

WARNING CHIME SYSTEM

< WIRING DIAGRAM >


WARNING CHIME SYSTEM CONNECTORS

Connector No.	M10
Connector Name	JOINT CONNECTOR-M01
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
4	L	-
7	L	-
8	L	-
13	P	-
16	P	-
17	P	-

Connector No.	M16
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
4	V	-
18	SB	-

Connector No.	M17
Connector Name	PARKING BRAKE SWITCH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	SB	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY SYSTEM)
Connector Color	WHITE

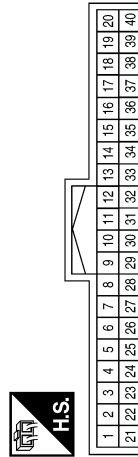

Terminal No.	Color of Wire	Signal Name
2	BR	INPUT 5
3	Y	INPUT 4
4	L	INPUT 3
5	G	INPUT 2
6	R	INPUT 1
32	P	OUTPUT 5
33	V	OUTPUT 4
34	W	OUTPUT 3

Terminal No.	Color of Wire	Signal Name
35	GR	OUTPUT 2
36	LG	OUTPUT 1
37	Y	KEY SW
38	O	IGN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY SYSTEM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
42	Y	BATTERY (FUSE)
50	G	BATTERY (F/L)
55	B	GND

WARNING CHIME SYSTEM


< WIRING DIAGRAM >

Connector No.	M27
Connector Name	KEY SWITCH
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	LG	-

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	L	CAN-H
2	P	CAN-L
9	V	BELT
10	SB	PKB SW
21	B	GND (ILLUMINATION)
22	B	GND (POWER)
23	B	GND (CIRCUIT)
27	R/W	BAT
28	GR	IGN

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY SYSTEM)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
59	SB	DOOR SWITCH DR

Connector No.	M51
Connector Name	JOINT CONNECTOR M04
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
10	V	-
11	LG	-
12	R	-
13	P	-
14	G	-

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	Y	-
5	L	-
7	W	-
8	BR	-
9	GR	-

AANIA1746GB


A
B
C
D
E
F
G
H
I
J
K
L
M
WCS
O
P

WARNING CHIME SYSTEM

< WIRING DIAGRAM >


Terminal No.	Color of Wire	Signal Name
36	LG	OUTPUT 1
39	L	CAN-H
40	P	CAN-L

Connector No.	M97
Connector Name	BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY SYSTEM)
Connector Color	BLACK

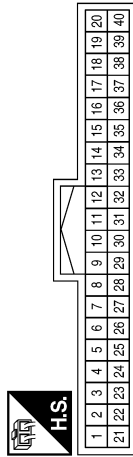


Terminal No.	Color of Wire	Signal Name
2	BR	INPUT 5
3	Y	INPUT 4
4	L	INPUT 3
5	G	INPUT 2
6	R	INPUT 1
32	P	OUTPUT 5
33	V	OUTPUT 4
34	W	OUTPUT 3
35	GR	OUTPUT 2

Connector No.	M69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

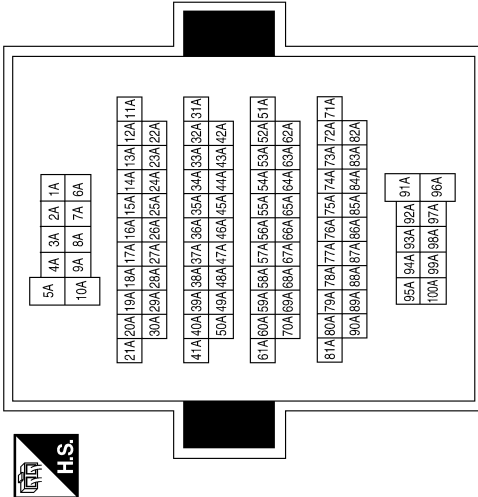


Terminal No.	Color of Wire	Signal Name
20A	P	-
21A	L	-
91A	G	-

Connector No.	M100
Connector Name	BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY SYSTEM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
57	Y	BATTERY (FUSE)
67	B	GND
70	G	BATTERY (F/L)

Connector No.	M99
Connector Name	BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY SYSTEM)
Connector Color	WHITE




AANIA1747GB

WARNING CHIME SYSTEM


< WIRING DIAGRAM >

Connector No.	E33
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Color	BLACK

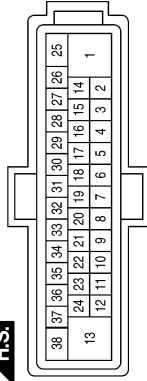


Terminal No.	Color of Wire	Signal Name
10	P	CAN-LO
11	L	CAN-H

Connector No.	E14
Connector Name	JOINT CONNECTOR-E03
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
2	P	-
5	P	-
10	L	-
12	L	-

Connector No.	E7
Connector Name	WIRE TO WIRE
Connector Color	WHITE

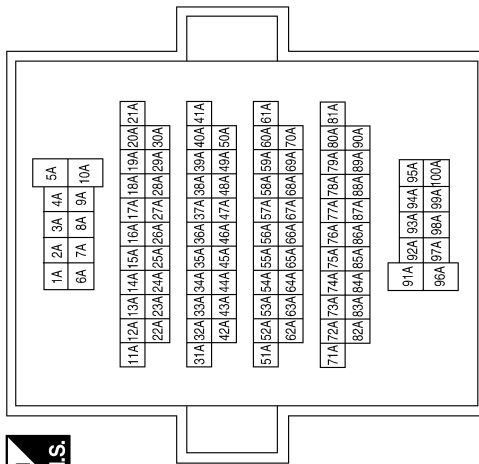

Terminal No.	Color of Wire	Signal Name
20A	P	-
21A	L	-
91A	Y	-

Connector No.	B24
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
4	O	-
18	LG	-

Connector No.	B13
Connector Name	SEAT BELT BUCKLE SWITCH LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	O	-
2	B	-

Connector No.	B8
Connector Name	FRONT DOOR SWITCH LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	LG	-

AANIA1748GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WCS

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:000000009654151

OVERALL SEQUENCE

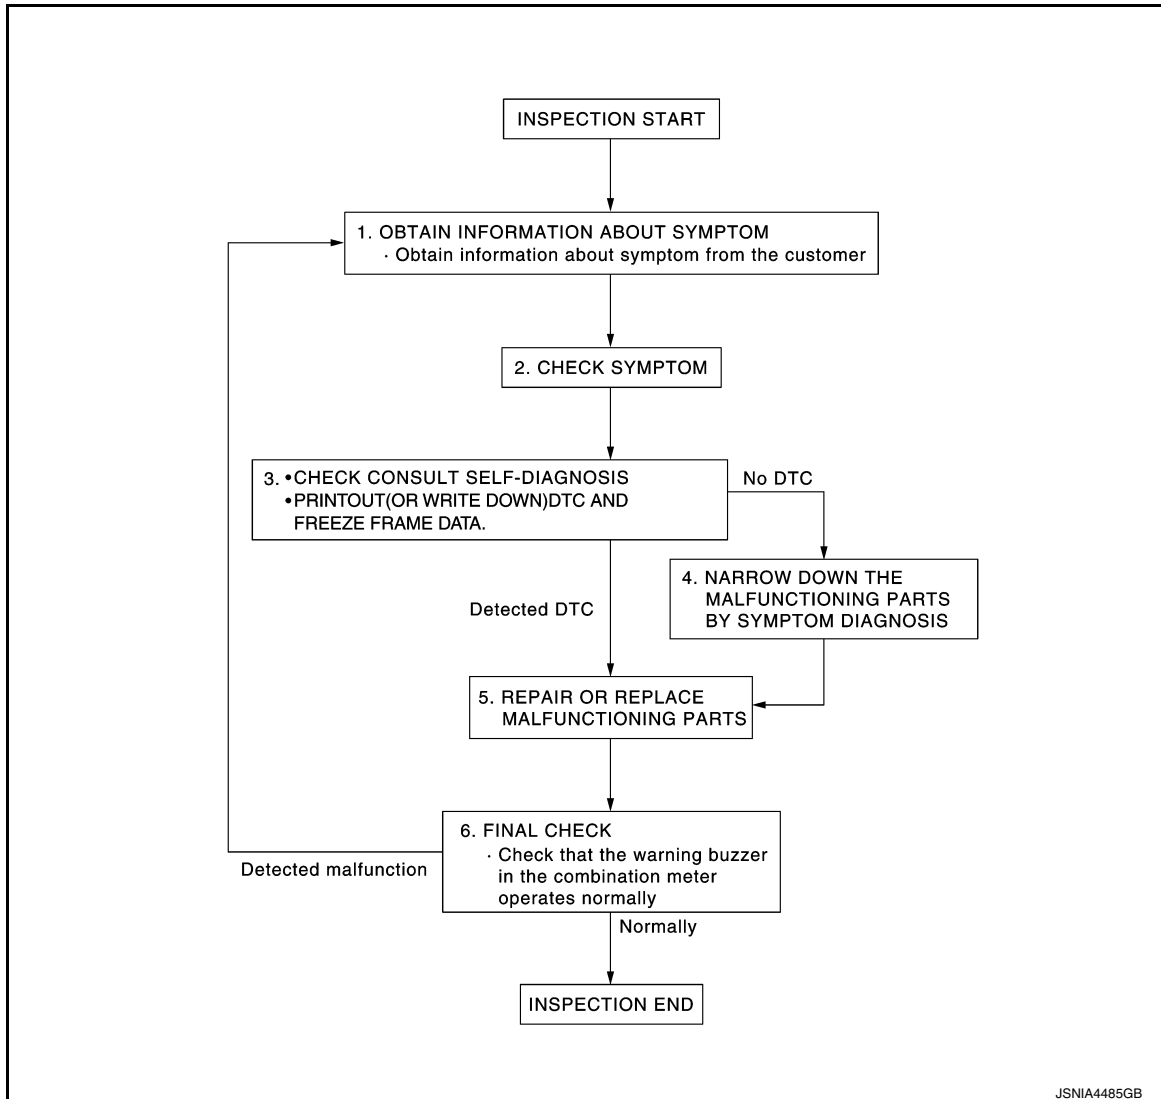

DETAILED FLOW

1.OBTAIN INFORMATION ABOUT SYMPTOM

Interview the customer to obtain as much information as possible about the conditions and environment under which the malfunction occurred.

>> GO TO 2.

2.CHECK SYMPTOM

- Check the symptom based on the information obtained from the customer.
- Check if any other malfunctions are present.

>> GO TO 3.

3.CHECK CONSULT SELF-DIAGNOSIS RESULTS

1. Connect CONSULT and perform self-diagnosis. Refer to [WCS-23. "DTC Index"](#).

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

2. When DTC is detected, follow the instructions below:

- Record DTC and Freeze Frame Data.

Are self-diagnosis results normal?

YES >> GO TO 4.

NO >> GO TO 5.

4.NARROW DOWN MALFUNCTIONING PARTS BY SYMPTOM DIAGNOSIS

Perform symptom diagnosis and narrow down the malfunctioning parts.

>> GO TO 5.

5.REPAIR OR REPLACE MALFUNCTIONING PARTS

Repair or replace malfunctioning parts.

NOTE:

If DTC is displayed, erase DTC after repairing or replacing malfunctioning parts.

>> GO TO 6.

6.FINAL CHECK

Check that the warning buzzer in the combination meter operates normally.

Does it operate normally?

YES >> Inspection End.

NO >> GO TO 1.

A

B

C

D

E

F

G

H

I

J

K

L

M

WCS

O

P

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

POWER SUPPLY AND GROUND CIRCUIT COMBINATION METER

COMBINATION METER : Diagnosis Procedure

INFOID:000000009695439

Regarding Wiring Diagram information, refer to [MWI-23, "Wiring Diagram"](#).

1. CHECK FUSE

Check that the following fuses are not blown.

Power source	Fuse No.
Battery	8
Ignition switch ON or START	3
Ignition switch ACC or ON	18

Is the fuse blown?

YES >> GO TO 2.

NO >> Replace the blown fuse after repairing the affected circuit.

2. POWER SUPPLY CIRCUIT CHECK

1. Disconnect combination meter connector.
2. Check voltage between combination meter harness connector M24, terminals 27, 28, 15 and ground.

Terminals		Ignition switch position				
(+)		(-)	OFF	ACC	ON	START
Connector	Terminal					
M24	27	Ground	Battery voltage	Battery voltage	Battery voltage	Battery voltage
	28		0V	0V	Battery voltage	Battery voltage
	15		0V	Battery voltage	Battery voltage	0V

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness or connector.

3. GROUND CIRCUIT CHECK

1. Turn ignition switch OFF.
2. Disconnect combination meter connector.
3. Check continuity between combination meter harness connector M24, terminals 21, 22, 23 and ground.

Terminals		Continuity	
(+)			(-)
Connector	Terminal		
M24	21	Ground	Yes
	22		
	23		

Is the inspection result normal?

YES >> Inspection End.

NO >> Repair or replace harness or connector.

BCM (BODY CONTROL SYSTEM) (WITH INTELLIGENT KEY SYSTEM)

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

BCM (BODY CONTROL SYSTEM) (WITH INTELLIGENT KEY SYSTEM) : Diagnosis Procedure

INFOID:000000009693747

Regarding Wiring Diagram information, refer to [BCS-51, "Wiring Diagram"](#).

1. CHECK FUSES AND FUSIBLE LINK

Check that the following fuses and fusible link are not blown.

Terminal No.	Signal name	Fuses and fusible link No.
57	Battery power supply	12 (10A)
70		G (40A)

Is the fuse blown?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit.

NO >> GO TO 2.

2. CHECK POWER SUPPLY CIRCUIT

1. Disconnect BCM connector M99.
2. Check voltage between BCM connector M99 and ground.

BCM		Ground	Voltage
Connector	Terminal		
M99	57	—	Battery voltage
	70		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3. CHECK GROUND CIRCUIT

Check continuity between BCM connector M99 and ground.

BCM		Ground	Continuity
Connector	Terminal		
M99	67	—	Yes

Is the inspection result normal?

YES >> Inspection End.

NO >> Repair harness or connector.

BCM (BODY CONTROL SYSTEM) (WITHOUT INTELLIGENT KEY SYSTEM)

WCS

BCM (BODY CONTROL SYSTEM) (WITHOUT INTELLIGENT KEY SYSTEM) : Diagnosis Procedure

INFOID:000000009693748

Regarding Wiring Diagram information, refer to [BCS-111, "Wiring Diagram"](#).

1. CHECK FUSES AND FUSIBLE LINK

Check that the following fuses and fusible link are not blown.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Terminal No.	Signal name	Fuses and fusible link No.
37	Battery power supply	8 (10A)
42		12 (10A)
50		G (40A)
11	Ignition switch ACC or ON	18 (10A)
38	Ignition switch ON or START	2 (10A)

Is the fuse blown?

- YES >> Replace the blown fuse or fusible link after repairing the affected circuit.
 NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM connector and ground.

BCM		Ground	Ignition switch position		
Connector	Terminal		OFF	ACC	ON
M18	11	—	0 V	Battery voltage	Battery voltage
	37		Battery voltage		
	38		0 V	0 V	
M19	42		Battery voltage	Battery voltage	
	50				

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> Repair harness or connector.

3.CHECK GROUND CIRCUIT

Check continuity between BCM connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M19	55	—	Yes

Is the inspection result normal?

- YES >> Inspection End.
 NO >> Repair harness or connector.

METER BUZZER CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

METER BUZZER CIRCUIT

Component Function Check

INFOID:000000009654160

1.CHECK OPERATION OF METER BUZZER

1. Select BUZZER of BCM(BUZZER) on CONSULT.
2. Perform LIGHT WARN ALM of Active Test.

Does meter buzzer beep?

- YES >> Inspection End.
NO >> GO TO 2.

2.CHECK COMBINATION METER INPUT SIGNAL

Select the DATA MONITOR for the METER/MA and check the BUZZER monitor value.

BUZZER
Under the condition of buzzer input : On
Except above : Off

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-54. "Removal and Installation"](#).
NO >> Replace BCM. Refer to [BCS-70. "Removal and Installation"](#) (with Intelligent Key) or [BCS-127. "Removal and Installation"](#) (without Intelligent Key).

Diagnosis Procedure

INFOID:000000009654161

Regarding Wiring Diagram information, refer to [WCS-25. "Wiring Diagram"](#).

1.CHECK POWER SUPPLY OF COMBINATION METER

Check power supply of combination meter. Refer to [MWI-42. "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> Inspection End.
NO >> Repair power supply circuit of combination meter.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

WCS

SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT

Description

INFOID:000000009654162

Transmits a seat belt buckle switch LH signal to the combination meter.

Component Function Check

INFOID:000000009654163

1. CHECK COMBINATION METER INPUT SIGNAL

Select DATA MONITOR for METER/M&A and check the SEAT BELT W/L monitor value.

Monitor Item	Condition	Status
BUCKLE SW	When seat belt LH (driver seat) is fastened	OFF
	When seat belt LH (driver seat) is unfastened	ON

Is the inspection result normal?

YES >> Inspection End.

NO >> Refer to [WCS-36, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009654164

Regarding Wiring Diagram information, refer to [WCS-25, "Wiring Diagram"](#).

1. CHECK COMBINATION METER INPUT SIGNAL

1. Turn ignition switch ON.
2. Check voltage between combination meter harness connector M24 terminal 9 and ground.

Combination meter		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
M24	9	—	When seat belt LH (driver seat) is fastened	Battery voltage
			When seat belt LH (driver seat) is unfastened	0 V

Is the inspection result normal?

YES >> Replace combination meter. Refer to [MWI-54, "Removal and Installation"](#).

NO >> GO TO 2.

2. CHECK SEAT BELT BUCKLE SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter harness connector M24 and seat belt buckle switch LH (driver seat) harness connector B16.
3. Check continuity between combination meter harness connector M24 terminal 9 and seat belt buckle switch LH (driver seat) harness connector B13 terminal 1.

Combination meter		Seat belt buckle switch LH (driver seat)		Continuity
Connector	Terminal	Connector	Terminal	
M24	9	B13	1	Yes

4. Check continuity between combination meter harness connector M24 terminal 9 and ground.

Combination meter		Ground	Continuity
Connector	Terminal		
M24	9	—	No

Is the inspection result normal?

YES >> GO TO 3.

SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

NO >> Repair or replace harness or connector.

3. CHECK SEAT BELT BUCKLE SWITCH GROUND CIRCUIT

Check continuity between seat belt buckle switch LH (driver seat) harness connector B13 terminal 2 and ground.

Seat belt buckle switch LH (driver seat)		Ground	Continuity
Connector	Terminal		
B13	2	—	Yes

Is the inspection result normal?

YES >> Check the seat belt buckle switch LH. Refer to [SR-33, "Removal and Installation"](#).

NO >> Repair or replace harness or connector.

Component Inspection

INFOID:000000009654165

1. CHECK SEAT BELT BUCKLE SWITCH LH

1. Turn ignition switch OFF.
2. Disconnect the seat belt buckle switch LH (driver seat).
3. Check continuity between the seat belt buckle switch LH (driver seat) terminals 1 and 2.

Terminal		Condition	Continuity
1	2	When seat belt is fastened	No
		When seat belt is unfastened	Yes

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace the seat belt buckle switch LH. Refer to [SR-33, "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

WCS

PARKING BRAKE SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

PARKING BRAKE SWITCH SIGNAL CIRCUIT

Component Function Check

INFOID:000000009654166

1. CHECK PARKING BRAKE SWITCH OPERATION

Check that brake warning lamp in combination meter turns ON/OFF when parking brake is actuated.

Is the inspection result normal?

YES >> Inspection End.

NO >> Proceed to diagnosis procedure. Refer to [WCS-38, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009654167

Regarding Wiring Diagram information, refer to [WCS-25, "Wiring Diagram"](#).

1. CONNECTOR INSPECTION

1. Turn ignition switch OFF.
2. Disconnect combination meter and parking brake switch connectors.
3. Check connectors and terminals for deformation, disconnection, looseness or damage.

Is the inspection result normal?

YES >> GO TO 2

NO >> Repair or replace as necessary.

2. CHECK PARKING BRAKE SWITCH

Check parking brake switch. Refer to [WCS-39, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace parking brake switch. Refer to [PB-9, "Removal and Installation"](#).

3. CHECK PARKING BRAKE SWITCH SIGNAL

 With CONSULT.

1. Connect combination meter connector and parking brake switch connectors.
2. Turn ignition switch ON.
3. In DATA MONITOR select PARK BRAKE SW and check parking brake switch signal.

Condition	DATA MONITOR
Actuate parking brake	On
Release parking brake	Off

Is the inspection result normal?

YES >> Refer to [WCS-30, "Work Flow"](#).

NO >> GO TO 4.

4. CHECK PARKING BRAKE SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter and parking brake switch connectors.
3. Check continuity between combination meter connector M24 terminal 10 and parking brake switch connector M17 terminal 1.

Combination meter		Parking brake switch		Continuity
Connector	Terminal	Connector	Terminal	
M24	10	M17	1	Yes

4. Check continuity between combination meter connector and ground.

PARKING BRAKE SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Combination meter		—	Continuity
Connector	Terminal		
M24	10	Ground	No

Is the inspection result normal?

YES >> Replace combination meter. Refer to [MWI-54, "Removal and Installation"](#).

NO >> Repair or replace malfunctioning components.

Component Inspection

INFOID:000000009654168

1. CHECK PARKING BRAKE SWITCH

1. Turn ignition switch OFF.
2. Disconnect parking brake switch connector.
3. Check continuity between parking brake switch terminal 1 and ground.

Parking brake switch terminal	—	Condition	Continuity
1	Ground	Parking brake actuated	Yes
		Parking brake released	No

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace parking brake switch. Refer to [PB-9, "Removal and Installation"](#).

WCS

KEY SWITCH SIGNAL CIRCUIT (WITHOUT INTELLIGENT KEY)

< DTC/CIRCUIT DIAGNOSIS >

KEY SWITCH SIGNAL CIRCUIT (WITHOUT INTELLIGENT KEY)

Description

INFOID:000000009654169

Transmits a key switch signal to the BCM.

Component Function Check

INFOID:000000009654170

1. CHECK BCM INPUT SIGNAL

Select Data Monitor for BCM and check the KEY ON SW monitor value.

Monitor Item	Condition	Status
KEY ON SW	When key is removed from key cylinder	OFF
	When key is inserted into key cylinder	ON

Is the inspection result normal?

YES >> Inspection End.

NO >> Refer to [WCS-40, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009654171

Regarding Wiring Diagram information, refer to [WCS-25, "Wiring Diagram"](#).

1. CHECK FUSE

Check if the key switch 10A fuse [No. 8, located in the fuse block (J/B)] is blown.

Is the fuse blown?

YES >> Replace the fuse after repairing the affected circuit.

NO >> GO TO 2.

2. CHECK BCM INPUT SIGNAL

Check voltage between BCM harness connector M18 terminal 37 and ground.

Terminals		Condition	Voltage (Approx.)
(+)	(-)		
BCM connector	Terminal		
M18	37	Key is inserted	Battery voltage
		Key is removed	0V

Is the inspection result normal?

YES >> Inspection End.

NO >> GO TO 3.

3. CHECK KEY SWITCH CIRCUIT

1. Disconnect BCM connector M18 and key switch.
2. Check continuity between BCM harness connector M18 terminal 37 and key switch harness connector M27 terminal 1.

BCM		Key switch		Continuity
Connector	Terminal	Connector	Terminal	
M18	37	M27	1	Yes

3. Check continuity between BCM harness connector M18 terminal 37 and ground.

KEY SWITCH SIGNAL CIRCUIT (WITHOUT INTELLIGENT KEY)

< DTC/CIRCUIT DIAGNOSIS >

BCM		Ground	Continuity
Connector	Terminal		
M18	37		No

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

4. CHECK KEY SWITCH POWER SUPPLY CIRCUIT

Check voltage between key switch harness connector M27 terminal 2 and ground.

Terminals			Voltage (Approx.)
(+)		(-)	
Key switch	Terminal		
M27	2	Ground	Battery voltage

Is the inspection result normal?

YES >> Replace key switch.

NO >> Repair or replace harness.

Component Inspection

INFOID:000000009654172

1. CHECK KEY SWITCH

1. Turn ignition switch OFF.
2. Disconnect key switch.
3. Check continuity between key switch terminals 1 and 2.

Terminal		Condition	Continuity
1	2	When key is removed from key cylinder	No
		When key is inserted into key cylinder	Yes

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace key switch.

WCS

THE PARKING BRAKE RELEASE WARNING CONTINUES SOUNDING, OR DOES NOT SOUND

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

THE PARKING BRAKE RELEASE WARNING CONTINUES SOUNDING, OR DOES NOT SOUND

Description

INFOID:000000009654152

- The parking brake warning buzzer sounds continuously during vehicle travel though the parking brake is released.
- The parking brake warning buzzer does not sound at all even though driving the vehicle with the parking brake applied.

Diagnosis Procedure

INFOID:000000009654153

1. CHECK PARKING BRAKE WARNING LAMP

1. Start the engine.
2. Check the operation of the brake warning lamp by operating the parking brake.

Combination meter	Condition	Status
Brake warning lamp	When parking brake is applied	ON
	When parking brake is released	OFF

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-54, "Removal and Installation"](#).
NO >> GO TO 2.

2. CHECK PARKING BRAKE SWITCH

Check the parking brake switch. Refer to [WCS-39, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Replace parking brake switch. Refer to [PB-9, "Removal and Installation"](#).

3. CHECK PARKING BRAKE SWITCH SIGNAL CIRCUIT

Check the parking brake switch signal circuit. Refer to [WCS-38, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-54, "Removal and Installation"](#).
NO >> Repair harness or connector.

THE SEAT BELT REMINDER WARNING CONTINUES SOUNDING, OR DOES NOT SOUND

< SYMPTOM DIAGNOSIS >

THE SEAT BELT REMINDER WARNING CONTINUES SOUNDING, OR DOES NOT SOUND

Description

INFOID:000000009654154

- Seat belt reminder warning does not sound.
- Seat belt reminder warning sounds continuously.

Diagnosis Procedure

INFOID:000000009654155

1. CHECK SEAT BELT WARNING LAMP

1. Turn ignition switch ON.
2. Check operation of seat belt warning lamp in combination meter.

Combination meter	Condition	Status
Seat belt warning lamp	When seat belt LH (driver seat) is fastened	OFF
	When seat belt LH (driver seat) is unfastened	ON

Is the inspection result normal?

YES >> Replace combination meter. Refer to [MWI-54, "Removal and Installation"](#).

NO >> GO TO 2.

2. CHECK SEAT BELT BUCKLE SWITCH LH SIGNAL CIRCUIT

Check the seat belt buckle switch LH signal circuit. Refer to [WCS-36, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3. CHECK SEAT BELT BUCKLE SWITCH LH

Check seat belt buckle switch LH. Refer to [WCS-37, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace combination meter. Refer to [MWI-54, "Removal and Installation"](#).

NO >> Replace seat belt buckle switch LH. Refer to [SR-33, "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

WCS

THE LIGHT REMINDER WARNING DOES NOT SOUND

< SYMPTOM DIAGNOSIS >

THE LIGHT REMINDER WARNING DOES NOT SOUND

Description

INFOID:000000009654156

Light reminder warning chime does not sound even though headlamps are illuminated.

Diagnosis Procedure

INFOID:000000009654157

1.CHECK COMBINATION METER INPUT SIGNAL

Select the Data Monitor for the METER/M&A and check the BUZZER monitor value.

Monitor Item	Condition	Status
BUZZER	Under the condition of buzzer input	ON
	Except above	OFF

Is the inspection result normal?

YES >> Replace combination meter. Refer to [MWI-54, "Removal and Installation"](#).

NO >> GO TO 2.

2.CHECK DRIVER SIDE DOOR SWITCH SIGNAL CIRCUIT

Check the driver side door switch signal circuit. Refer to [DLK-95, "Diagnosis Procedure"](#) (with Intelligent Key) or [DLK-225, "Diagnosis Procedure"](#) (without Intelligent Key).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness or connector.

3.CHECK DRIVER SIDE DOOR SWITCH

Check the driver side door switch. Refer to [DLK-96, "Component Inspection"](#) (with Intelligent Key) or [DLK-227, "Component Inspection"](#) (without Intelligent Key).

Is the inspection result normal?

YES >> Replace the BCM. Refer to [BCS-70, "Removal and Installation"](#) (with Intelligent Key) or [BCS-127, "Removal and Installation"](#) (without Intelligent Key).

NO >> Replace driver side door switch. Refer to [DLK-175, "Removal and Installation"](#) (with Intelligent Key) or [DLK-301, "Removal and Installation"](#) (without Intelligent Key).

THE KEY WARNING DOES NOT SOUND (WITHOUT INTELLIGENT KEY)

< SYMPTOM DIAGNOSIS >

THE KEY WARNING DOES NOT SOUND (WITHOUT INTELLIGENT KEY)

Description

INFOID:000000009654173

The key warning chime does not sound, when all of the following conditions are fulfilled.

- Key inserted into the key cylinder (key switch signal ON).
- Ignition switch is in ACC or OFF (ignition switch signal OFF).
- Driver side door is open (front door switch LH ON)

Diagnosis Procedure

INFOID:000000009654174

1. CHECK BCM INPUT SIGNAL

1. Connect CONSULT.
2. Select the DATA MONITOR of BCM(BUZZER) and check the KEY ON SW monitor value. Refer to [BCS-85. "BUZZER : CONSULT Function \(BCM - BUZZER\)".](#)

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-127. "Removal and Installation".](#)
NO >> GO TO 2.

2. CHECK KEY SWITCH SIGNAL CIRCUIT

Check the key switch signal circuit. Refer to [WCS-40. "Diagnosis Procedure".](#)

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-127. "Removal and Installation".](#)
NO >> Check applicable parts, and repair or replace corresponding parts.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

WCS