

# SECTION **BCS**

## BODY CONTROL SYSTEM

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

### CONTENTS

<p><b>WITH INTELLIGENT KEY SYSTEM</b></p> <p><b>PRECAUTION</b> ..... 5</p> <p><b>PRECAUTIONS</b> ..... 5</p> <p style="padding-left: 20px;">Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....5</p> <p><b>SYSTEM DESCRIPTION</b> ..... 6</p> <p><b>COMPONENT PARTS</b> ..... 6</p> <p><b>BODY CONTROL SYSTEM</b> .....6</p> <p style="padding-left: 20px;">BODY CONTROL SYSTEM : Component Parts Location .....6</p> <p><b>POWER CONSUMPTION CONTROL SYSTEM</b> .....6</p> <p style="padding-left: 20px;">POWER CONSUMPTION CONTROL SYSTEM : Component Parts Location .....6</p> <p><b>SYSTEM</b> ..... 7</p> <p><b>BODY CONTROL SYSTEM</b> .....7</p> <p style="padding-left: 20px;">BODY CONTROL SYSTEM : System Description.....7</p> <p><b>COMBINATION SWITCH READING SYSTEM</b> .....8</p> <p style="padding-left: 20px;">COMBINATION SWITCH READING SYSTEM : System Description .....8</p> <p><b>SIGNAL BUFFER SYSTEM</b> ..... 11</p> <p style="padding-left: 20px;">SIGNAL BUFFER SYSTEM : System Description... 12</p> <p><b>POWER CONSUMPTION CONTROL SYSTEM</b> ..... 12</p> <p style="padding-left: 20px;">POWER CONSUMPTION CONTROL SYSTEM : System Description ..... 12</p> <p><b>DIAGNOSIS SYSTEM (BCM)</b> .....15</p> <p><b>COMMON ITEM</b> ..... 15</p> <p style="padding-left: 20px;">COMMON ITEM : CONSULT Function (BCM - COMMON ITEM) ..... 15</p> <p><b>DOOR LOCK</b> ..... 16</p>	<p style="padding-left: 20px;">DOOR LOCK : CONSULT Function (BCM - DOOR LOCK) .....16</p> <p><b>REAR DEFOGGER</b> .....16</p> <p style="padding-left: 20px;">REAR DEFOGGER : CONSULT Function (BCM - REAR DEFOGGER) ..... 16</p> <p><b>BUZZER</b> .....17</p> <p style="padding-left: 20px;">BUZZER : CONSULT Function (BCM - BUZZER)...17</p> <p><b>INT LAMP</b> .....17</p> <p style="padding-left: 20px;">INT LAMP : CONSULT Function (BCM - INT LAMP) .....17</p> <p><b>HEADLAMP</b> .....18</p> <p style="padding-left: 20px;">HEADLAMP : CONSULT Function (BCM - HEAD LAMP) ..... 18</p> <p><b>WIPER</b> .....19</p> <p style="padding-left: 20px;">WIPER : CONSULT Function (BCM - WIPER) .....19</p> <p><b>FLASHER</b> .....20</p> <p style="padding-left: 20px;">FLASHER : CONSULT Function (BCM - FLASHER) .....20</p> <p><b>AIR CONDITIONER</b> .....20</p> <p style="padding-left: 20px;">AIR CONDITIONER : CONSULT Function (BCM - AIR CONDITIONER) ..... 20</p> <p><b>INTELLIGENT KEY</b> .....20</p> <p style="padding-left: 20px;">INTELLIGENT KEY : CONSULT Function (BCM - INTELLIGENT KEY) ..... 20</p> <p><b>COMB SW</b> .....23</p> <p style="padding-left: 20px;">COMB SW : CONSULT Function (BCM - COMB SW) .....23</p> <p><b>BCM</b> .....23</p> <p style="padding-left: 20px;">BCM : CONSULT Function (BCM - BCM) .....23</p> <p><b>IMMU</b> .....24</p> <p style="padding-left: 20px;">IMMU : CONSULT Function (BCM - IMMU) .....24</p> <p><b>BATTERY SAVER</b> .....24</p>
---	---

BCS

BATTERY SAVER : CONSULT Function (BCM - BATTERY SAVER) .....	24	<b>B2562 LOW VOLTAGE</b> .....	63
<b>THEFT ALM</b> .....	<b>25</b>	DTC Logic .....	63
THEFT ALM : CONSULT Function (BCM - THEFT) .....	25	Diagnosis Procedure .....	63
<b>RETAINED PWR</b> .....	<b>26</b>	<b>POWER SUPPLY AND GROUND CIRCUIT</b> ....	<b>64</b>
RETAINED PWR : CONSULT Function (BCM - RETAINED PWR) .....	26	Diagnosis Procedure .....	64
<b>SIGNAL BUFFER</b> .....	<b>26</b>	<b>COMBINATION SWITCH INPUT CIRCUIT</b> .....	<b>65</b>
SIGNAL BUFFER : CONSULT Function (BCM - SIGNAL BUFFER) .....	26	Diagnosis Procedure .....	65
<b>AIR PRESSURE MONITOR</b> .....	<b>26</b>	<b>COMBINATION SWITCH OUTPUT CIRCUIT</b> ...	<b>67</b>
AIR PRESSURE MONITOR : CONSULT Function (BCM - AIR PRESSURE MONITOR) .....	26	Diagnosis Procedure .....	67
<b>PANIC ALARM</b> .....	<b>27</b>	<b>SYMPTOM DIAGNOSIS</b> .....	<b>69</b>
PANIC ALARM : CONSULT Function (BCM - PANIC ALARM) .....	27	<b>COMBINATION SWITCH SYSTEM SYMPTOMS</b> .....	<b>69</b>
<b>ECU DIAGNOSIS INFORMATION</b> .....	<b>28</b>	Symptom Table .....	69
<b>BCM</b> .....	<b>28</b>	<b>REMOVAL AND INSTALLATION</b> .....	<b>70</b>
Reference Value .....	28	<b>BCM (BODY CONTROL MODULE)</b> .....	<b>70</b>
Fail-safe .....	46	Removal and Installation .....	70
DTC Inspection Priority Chart .....	47	<b>COMBINATION SWITCH</b> .....	<b>71</b>
DTC Index .....	48	Removal and Installation .....	71
<b>WIRING DIAGRAM</b> .....	<b>51</b>	<b>WITHOUT INTELLIGENT KEY SYSTEM</b>	
<b>BCM</b> .....	<b>51</b>	<b>PRECAUTION</b> .....	<b>72</b>
Wiring Diagram .....	51	<b>PRECAUTIONS</b> .....	<b>72</b>
<b>BASIC INSPECTION</b> .....	<b>57</b>	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	72
<b>ADDITIONAL SERVICE WHEN REPLACING BCM</b> .....	<b>57</b>	<b>SYSTEM DESCRIPTION</b> .....	<b>73</b>
Description .....	57	<b>COMPONENT PARTS</b> .....	<b>73</b>
Work Procedure .....	57	<b>BODY CONTROL SYSTEM</b> .....	<b>73</b>
<b>CONFIGURATION (BCM)</b> .....	<b>58</b>	BODY CONTROL SYSTEM : Component Parts Location .....	73
Description .....	58	<b>POWER CONSUMPTION CONTROL SYSTEM</b> .....	<b>73</b>
Work Procedure .....	58	POWER CONSUMPTION CONTROL SYSTEM : Component Parts Location .....	73
Configuration List .....	59	<b>SYSTEM</b> .....	<b>74</b>
<b>DTC/CIRCUIT DIAGNOSIS</b> .....	<b>60</b>	<b>BODY CONTROL SYSTEM</b> .....	<b>74</b>
<b>U1000 CAN COMM CIRCUIT</b> .....	<b>60</b>	BODY CONTROL SYSTEM : System Description... 74	
Description .....	60	<b>COMBINATION SWITCH READING SYSTEM</b> .....	<b>74</b>
DTC Logic .....	60	COMBINATION SWITCH READING SYSTEM : System Description .....	75
Diagnosis Procedure .....	60	<b>SIGNAL BUFFER</b> .....	<b>79</b>
<b>U1010 CONTROL UNIT (CAN)</b> .....	<b>61</b>	SIGNAL BUFFER : System Description .....	80
DTC Logic .....	61	<b>POWER CONSUMPTION CONTROL SYSTEM</b> .....	<b>80</b>
Diagnosis Procedure .....	61	POWER CONSUMPTION CONTROL SYSTEM : System Description .....	80
<b>U0415 VEHICLE SPEED</b> .....	<b>62</b>	<b>DIAGNOSIS SYSTEM (BCM)</b> .....	
DTC Logic .....	62		
Diagnosis Procedure .....	62		

<b>COMMON ITEM</b> .....	<b>83</b>	<b>AIR PRESSURE MONITOR</b> .....	<b>92</b>	
COMMON ITEM : CONSULT Function (BCM - COMMON ITEM) .....	83	AIR PRESSURE MONITOR : CONSULT Function (BCM - AIR PRESSURE MONITOR) .....	93	A
<b>DOOR LOCK</b> .....	<b>84</b>	<b>PANIC ALARM</b> .....	<b>93</b>	
DOOR LOCK : CONSULT Function (BCM - DOOR LOCK) .....	84	PANIC ALARM : CONSULT Function (BCM - PANIC ALARM) .....	93	B
<b>REAR DEFOGGER</b> .....	<b>84</b>	<b>ECU DIAGNOSIS INFORMATION</b> .....	<b>95</b>	
REAR DEFOGGER : CONSULT Function (BCM - REAR DEFOGGER) .....	84	<b>BCM</b> .....	<b>95</b>	C
<b>BUZZER</b> .....	<b>85</b>	Reference Value .....	95	
BUZZER : CONSULT Function (BCM - BUZZER)...	85	Fail-safe .....	108	D
<b>INT LAMP</b> .....	<b>85</b>	DTC Inspection Priority Chart .....	109	
INT LAMP : CONSULT Function (BCM - INT LAMP) .....	85	DTC Index .....	109	E
<b>MULTI REMOTE ENT</b> .....	<b>86</b>	<b>WIRING DIAGRAM</b> .....	<b>111</b>	
MULTI REMOTE ENT : CONSULT Function (BCM - MULTI REMOTE ENT) .....	86	<b>BCM</b> .....	<b>111</b>	F
<b>HEADLAMP</b> .....	<b>87</b>	Wiring Diagram .....	111	
HEADLAMP : CONSULT Function (BCM - HEAD LAMP) .....	87	<b>BASIC INSPECTION</b> .....	<b>115</b>	G
<b>WIPER</b> .....	<b>88</b>	<b>ADDITIONAL SERVICE WHEN REPLACING BCM</b> .....	<b>115</b>	
WIPER : CONSULT Function (BCM - WIPER) .....	88	Description .....	115	H
<b>FLASHER</b> .....	<b>89</b>	Work Procedure .....	115	
FLASHER : CONSULT Function (BCM - FLASHER) .....	89	<b>CONFIGURATION (BCM)</b> .....	<b>116</b>	I
<b>AIR CONDITIONER</b> .....	<b>89</b>	Description .....	116	
AIR CONDITIONER : CONSULT Function (BCM - AIR CONDITIONER) .....	89	Work Procedure .....	116	J
<b>COMB SW</b> .....	<b>90</b>	Configuration List .....	117	
COMB SW : CONSULT Function (BCM - COMB SW) .....	90	<b>DTC/CIRCUIT DIAGNOSIS</b> .....	<b>118</b>	K
<b>BCM</b> .....	<b>90</b>	<b>U1000 CAN COMM</b> .....	<b>118</b>	
BCM : CONSULT Function (BCM - BCM) .....	90	Description .....	118	L
<b>IMMU</b> .....	<b>90</b>	DTC Logic .....	118	
IMMU : CONSULT Function (BCM - IMMU) .....	90	Diagnosis Procedure .....	118	
<b>BATTERY SAVER</b> .....	<b>91</b>	<b>U1010 CONTROL UNIT (CAN)</b> .....	<b>119</b>	
BATTERY SAVER : CONSULT Function (BCM - BATTERY SAVER) .....	91	DTC Logic .....	119	
<b>THEFT ALM</b> .....	<b>91</b>	Diagnosis Procedure .....	119	
THEFT ALM : CONSULT Function (BCM - THEFT) .....	91	<b>POWER SUPPLY AND GROUND CIRCUIT</b> ..	<b>120</b>	BCS
<b>RETAINED PWR</b> .....	<b>92</b>	Diagnosis Procedure .....	120	
RETAINED PWR : CONSULT Function (BCM - RETAINED PWR) .....	92	<b>COMBINATION SWITCH INPUT CIRCUIT</b> ....	<b>121</b>	N
<b>SIGNAL BUFFER</b> .....	<b>92</b>	Diagnosis Procedure .....	121	
SIGNAL BUFFER : CONSULT Function (BCM - SIGNAL BUFFER) .....	92	<b>COMBINATION SWITCH OUTPUT CIRCUIT</b> .	<b>123</b>	O
		Diagnosis Procedure .....	123	
		<b>SYMPTOM DIAGNOSIS</b> .....	<b>125</b>	P
		<b>COMBINATION SWITCH SYSTEM SYMPTOMS</b> .....	<b>125</b>	
		Symptom Table .....	125	
		<b>REMOVAL AND INSTALLATION</b> .....	<b>127</b>	
		<b>BCM (BODY CONTROL MODULE)</b> .....	<b>127</b>	
		Removal and Installation .....	127	

---

<b>COMBINATION SWITCH</b> .....	<b>128</b>	Removal and Installation .....	128
---------------------------------	------------	--------------------------------	-----

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000009446831

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

**WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

**WARNING:**

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

BCS

# COMPONENT PARTS

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

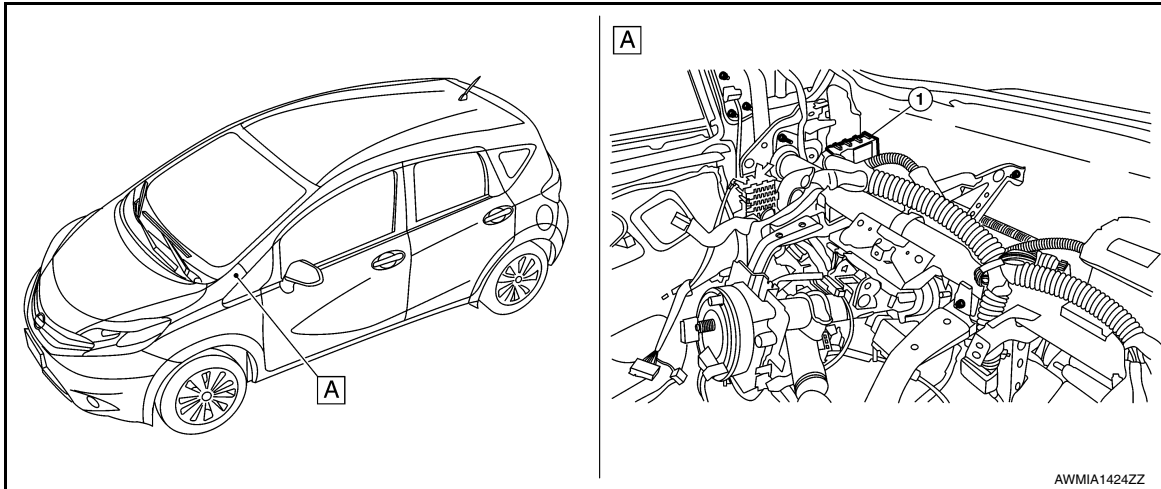
## SYSTEM DESCRIPTION

### COMPONENT PARTS

#### BODY CONTROL SYSTEM

#### BODY CONTROL SYSTEM : Component Parts Location

INFOID:000000009693553




1. BCM

A. View with instrument panel removed

### POWER CONSUMPTION CONTROL SYSTEM
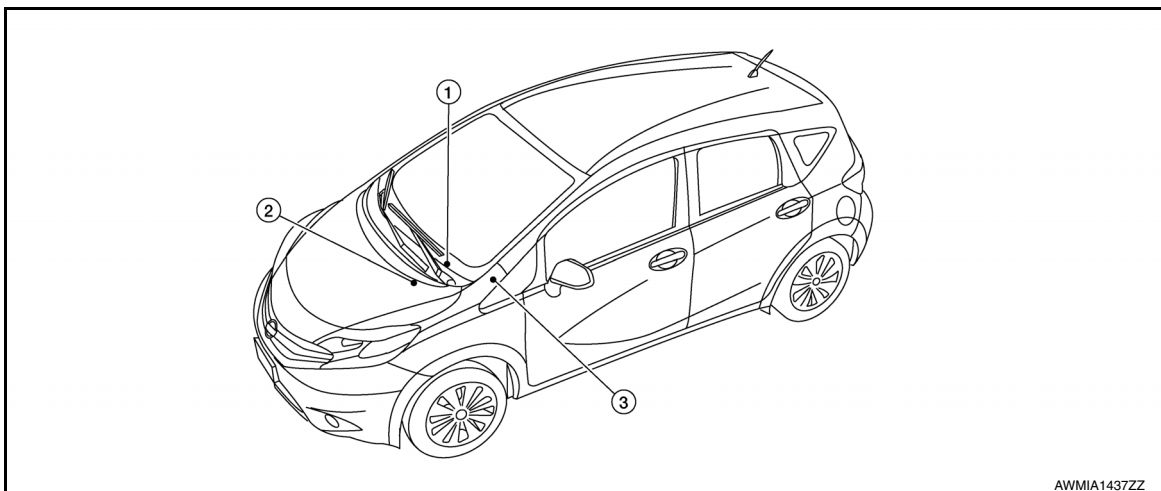
#### POWER CONSUMPTION CONTROL SYSTEM : Component Parts Location

INFOID:000000009693555



1 Combination meter  
Refer to [MWI-5. "METER SYSTEM : Component Parts Location"](#).

2 IPDM E/R  
Refer to [PCS-5. "Component Parts Location"](#).

3 BCM  
Refer to [BCS-6. "BODY CONTROL SYSTEM : Component Parts Location"](#).

# SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

## SYSTEM

### BODY CONTROL SYSTEM

#### BODY CONTROL SYSTEM : System Description

INFOID:000000009693556

#### OUTLINE

- BCM (Body Control Module) controls the various electrical components. It inputs the information required to the control from CAN communication and the signal received from each switch and sensor.
- BCM has combination switch reading function for reading the operation status of combination switches (light, turn signal, wiper and washer) in addition to a function for controlling the operation of various electrical components. It also has the signal transmission function as the passed point of signal and the power saving control function that reduces the power consumption with the ignition switch OFF.
- BCM is equipped with the diagnosis function that performs the diagnosis with CONSULT and various settings.

#### BCM CONTROL FUNCTION LIST

System	Reference
Combination switch reading system	<a href="#">BCS-8. "COMBINATION SWITCH READING SYSTEM : System Description"</a>
Signal buffer system	<a href="#">BCS-12. "SIGNAL BUFFER SYSTEM : System Description"</a>
Power consumption control system	<a href="#">BCS-12. "POWER CONSUMPTION CONTROL SYSTEM : System Description"</a>
Headlamp system	<a href="#">EXL-8. "HEADLAMP SYSTEM : System Description"</a>
Daytime light system	<a href="#">EXL-9. "DAYTIME RUNNING LIGHT SYSTEM : System Description"</a>
Turn signal and hazard warning lamp system	<a href="#">EXL-10. "TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM : System Description"</a>
Parking, license plate and tail lamps system	<a href="#">EXL-11. "PARKING, LICENSE PLATE AND TAIL LAMP SYSTEM : System Description"</a>
Front fog lamp system	<a href="#">EXL-9. "FRONT FOG LAMP SYSTEM : System Description"</a>
Exterior lamp battery saver system	<a href="#">EXL-8. "HEADLAMP SYSTEM : System Description"</a>
Interior room lamp control system	<a href="#">INL-7. "INTERIOR ROOM LAMP CONTROL SYSTEM : System Description"</a>
Interior room lamp battery saver system	<a href="#">INL-7. "INTERIOR ROOM LAMP CONTROL SYSTEM : System Description"</a>
Front wiper and washer system	<a href="#">WW-8. "FRONT WIPER AND WASHER SYSTEM : System Description"</a>
Rear wiper and washer system	<a href="#">WW-10. "REAR WIPER AND WASHER SYSTEM : System Description"</a>
Rear window defogger system	<a href="#">DEF-6. "System Description"</a>
Manual air conditioning system	<a href="#">HAC-13. "System Description"</a>
Warning chime system	<a href="#">WCS-6. "WARNING CHIME SYSTEM : System Description"</a>
Power door lock system	<a href="#">DLK-20. "System Description"</a>
Nissan vehicle immobilizer system (NVIS)	<a href="#">SEC-15. "NISSAN ANTI-THEFT SYSTEM : System Description"</a>
Vehicle security system	<a href="#">SEC-17. "VEHICLE SECURITY SYSTEM : System Description"</a>

# SYSTEM

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

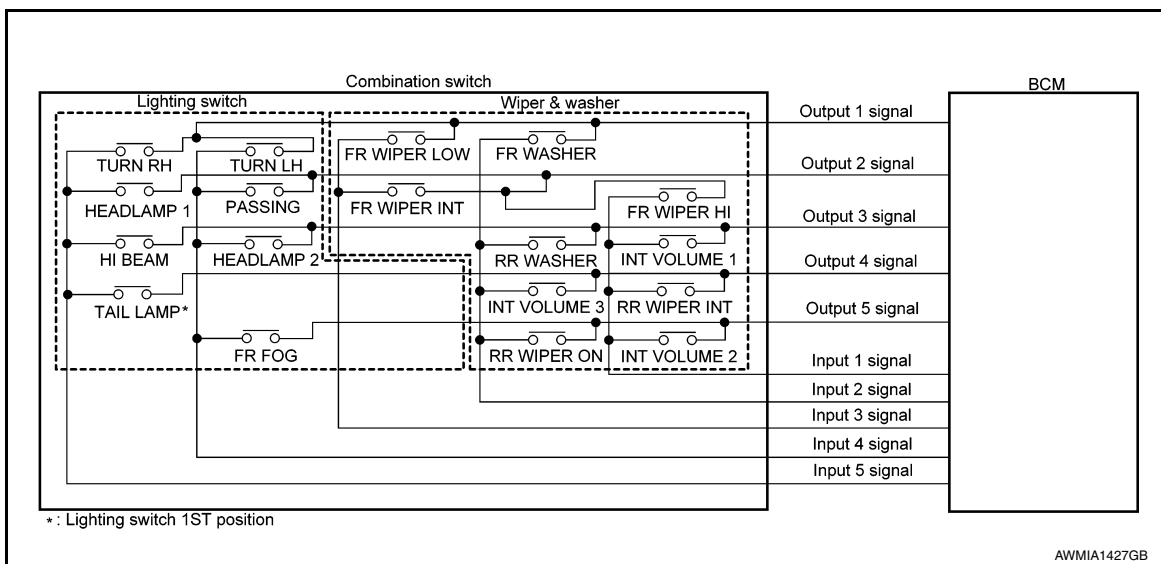
System	Reference	
Intelligent Key system/engine start system	Door lock function	<a href="#">DLK-23. "DOOR LOCK FUNCTION : System Description"</a>
	Warning function	<a href="#">DLK-27. "WARNING FUNCTION : System Description"</a>
	Key reminder function	<a href="#">DLK-27. "KEY REMINDER FUNCTION : System Description"</a>
	Engine start function	<a href="#">SEC-12. "INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION : System Description"</a>
Power window system	<a href="#">PWC-8. "System Description"</a>	
RAP (retained accessory power) system	<a href="#">BCS-26. "RETAINED PWR : CONSULT Function (BCM - RETAINED PWR)"</a>	

## COMBINATION SWITCH READING SYSTEM

### COMBINATION SWITCH READING SYSTEM : System Description

INFOID:000000009693558

#### SYSTEM DIAGRAM



#### OUTLINE

- BCM reads the status of the combination switch (light, turn signal, wiper and washer) and recognizes the status of each switch.
- BCM has a combination of 5 output terminals (OUTPUT 1 - 5) and 5 input terminals (INPUT 1 - 5). It reads a maximum of 20 switch states.

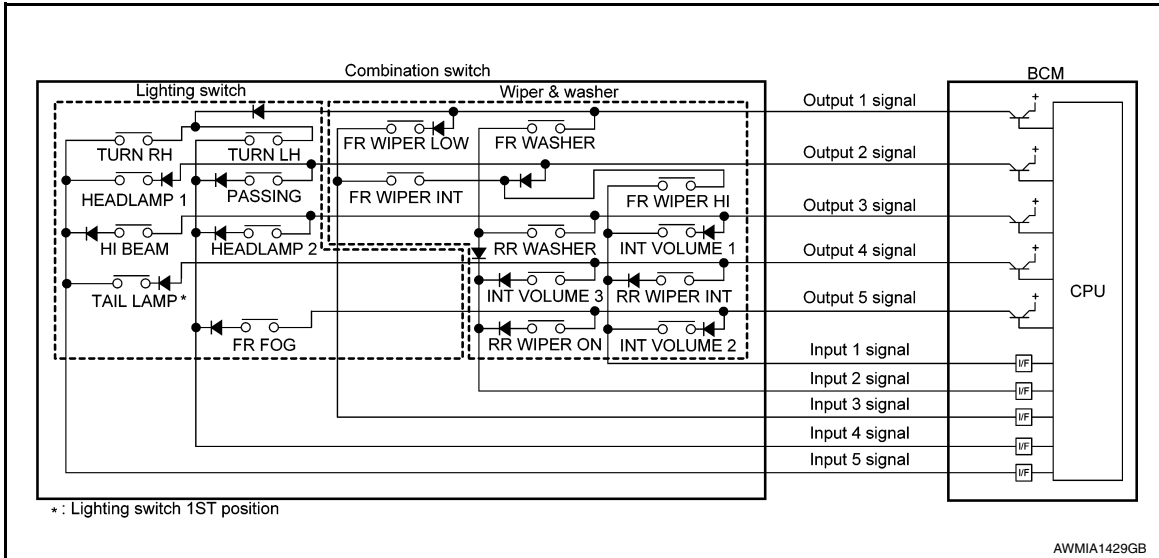


# SYSTEM

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

## COMBINATION SWITCH MATRIX




Combination switch INPUT-OUTPUT system list

System	INPUT 1	INPUT 2	INPUT 3	INPUT 4	INPUT 5
OUTPUT 1	—	FR WASHER	FR WIPER LOW	TURN LH	TURN RH
OUTPUT 2	FR WIPER HI	—	FR WIPER INT	PASSING	HEADLAMP 1
OUTPUT 3	INT VOLUME 1	RR WASHER	—	HEADLAMP 2	HI BEAM
OUTPUT 4	RR WIPER INT	INT VOLUME 3	—	—	TAIL LAMP
OUTPUT 5	INT VOLUME 2	RR WIPER ON	—	FR FOG	—

## COMBINATION SWITCH READING FUNCTION
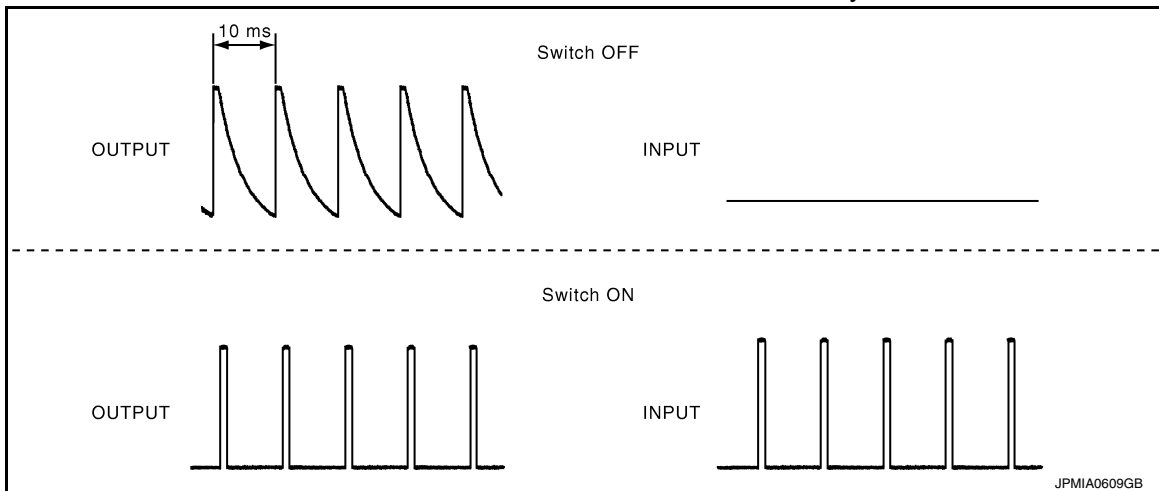
### Description

- BCM reads the status of the combination switch at 10 ms intervals normally.



### NOTE:

- BCM reads the status of the combination switch at 60 ms intervals when BCM is controlled at low power consumption control mode.
- BCM operates as follows and judges the status of the combination switch.
  - It operates the transistor on OUTPUT side in the following order: OUTPUT 1 → 2 → 3 → 4 → 5, and outputs voltage waveform.
  - The voltage waveform of OUTPUT corresponding to the formed circuit is input into the interface on INPUT side if any (1 or more) switches are ON.

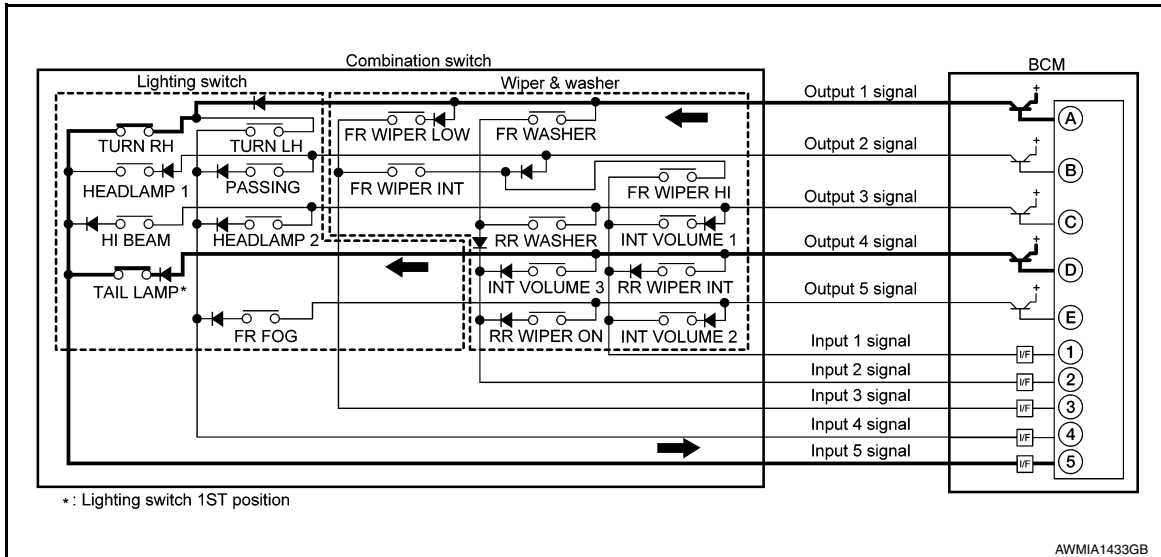


# SYSTEM

## < SYSTEM DESCRIPTION >

## [WITH INTELLIGENT KEY SYSTEM]

- The circuits between OUTPUT 1 and INPUT 5 and between OUTPUT 4 and INPUT 5 are formed when the TURN RH switch and TAIL LAMP switch are turned ON.



- BCM detects the combination switch status signal "5AD" when the signals of OUTPUT 1 and OUTPUT 4 are input to INPUT 5.
- BCM judges that the TURN RH switch and TAIL LAMP switch are ON when the signal "5AD" is detected.

### WIPER INTERMITTENT DIAL POSITION

BCM judges the wiper intermittent dial 1 - 7 by the status of INT VOLUME 1, 2 and 3 switches.

Wiper intermittent dial position	Switch status		
	INT VOLUME 1	INT VOLUME 2	INT VOLUME 3
1	ON	ON	ON
2	ON	ON	OFF
3	ON	OFF	OFF
4	OFF	OFF	OFF
5	OFF	OFF	ON
6	OFF	ON	ON
7	OFF	ON	OFF

#### NOTE:

For details of wiper intermittent dial position, refer to [WW-8, "FRONT WIPER AND WASHER SYSTEM : System Description"](#).

### SIGNAL BUFFER SYSTEM

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

BCS

# SYSTEM

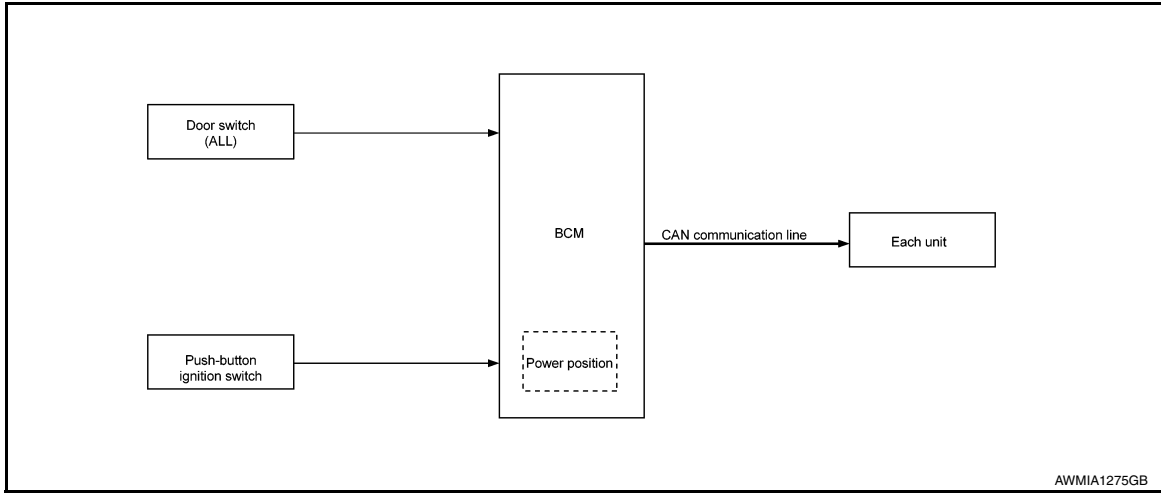
< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

## SIGNAL BUFFER SYSTEM : System Description

INFOID:000000009693560

### SYSTEM DIAGRAM



### OUTLINE

BCM has the signal transmission function that outputs/transmits each input/received signal to each unit.

### Signal transmission function list

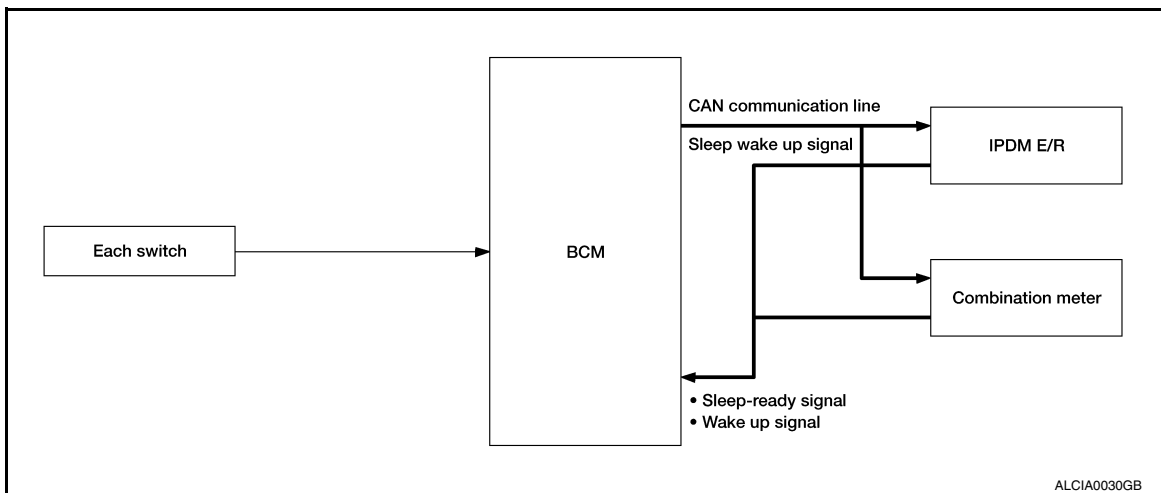
Signal name	Input	Output	Description
<ul style="list-style-type: none"> <li>Ignition switch ON signal</li> <li>Ignition switch signal</li> </ul>	Engine switch (push switch)	IPDM E/R (CAN)	Inputs the push-button ignition switch (push switch) signal and transmits the ignition switch status judged with BCM via CAN communication.
Door switch signal	Any door switch	<ul style="list-style-type: none"> <li>Combination meter (CAN)</li> <li>IPDM E/R (CAN)</li> </ul>	Inputs the door switch signal and transmits it via CAN communication.

## POWER CONSUMPTION CONTROL SYSTEM

### POWER CONSUMPTION CONTROL SYSTEM : System Description

INFOID:000000009693562

### SYSTEM DIAGRAM



### OUTLINE

• BCM incorporates a power saving control function that reduces the power consumption according to the vehicle status.

# SYSTEM

## [WITH INTELLIGENT KEY SYSTEM]

### < SYSTEM DESCRIPTION >

- BCM switches the status (control mode) by itself with the power saving control function. It performs the sleep request to each unit (IPDM E/R and combination meter) that operates with the ignition switch OFF.

#### Normal mode (wake-up)

- CAN communication is normally performed with other units
- Each control with BCM is operating properly

#### CAN communication sleep mode (CAN sleep)

- CAN transmission is stopped
- Control with BCM only is operating

#### Low power consumption mode (BCM sleep)

- Low power consumption control is active
- CAN transmission is stopped

### LOW POWER CONSUMPTION CONTROL WITH BCM

BCM reduces the power consumption with the following operation in the low power consumption mode.

- The reading interval of each switch changes from 10 ms interval to 60 ms interval.

#### Sleep mode activation

- BCM receives the sleep-ready signal (ready) from IPDM E/R and combination meter via CAN communication.
- BCM transmits the sleep wake up signal (sleep) to each unit when all of the CAN sleep conditions are fulfilled.
- Each unit stops the transmission of CAN communication with the sleep wakeup signal. BCM is in CAN communication sleep mode.
- BCM is in the low power consumption mode and performs the low power consumption control when all of the BCM sleep conditions are fulfilled with CAN sleep condition.

#### Sleep condition

CAN sleep condition	BCM sleep condition
<ul style="list-style-type: none"> <li>• Receiving the sleep-ready signal (ready) from all units</li> <li>• Ignition switch: OFF</li> <li>• Vehicle security system alarm: No operation</li> <li>• Warning lamp: Not operation</li> <li>• Intelligent Key system buzzer: No operation</li> <li>• Brake switch: OFF</li> <li>• Turn signal indicator lamp: No operation</li> <li>• Exterior lamp: OFF</li> <li>• Door lock status: No change</li> <li>• CONSULT communication status: No communication</li> <li>• Meter display signal: Non-transmission</li> <li>• Door switch status: No change</li> <li>• Rear window defogger: OFF</li> </ul>	<ul style="list-style-type: none"> <li>• Interior room lamp battery saver: Time out</li> <li>• RAP system: OFF</li> <li>• Push-button ignition switch (push switch) illumination: OFF</li> <li>• NATS: No operation</li> <li>• Remote keyless entry receiver communication status: No communication</li> </ul>

#### Wake-up operation

- BCM changes from the low power consumption mode to the CAN communication sleep mode when the any of the BCM wake-up conditions are fulfilled. Only the control with BCM is activated.
- BCM transmits the sleep wake up signal (wake up) to each unit when any of the CAN wake-up conditions are fulfilled. It changes from the low power consumption mode or the CAN communication sleep mode to the normal mode.
- Each unit starts the transmission of CAN communication with the sleep wake up signal. In addition, the combination meter transmits the wake up signal to BCM via CAN communication to report the CAN communication start.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

BCS

# SYSTEM

## < SYSTEM DESCRIPTION >

## [WITH INTELLIGENT KEY SYSTEM]

BCM wake-up condition	CAN wake-up condition
<ul style="list-style-type: none"><li>• Door lock assembly LH (key cylinder switch): Lock or unlock</li><li>• Door lock switch: OFF→ON</li><li>• Door unlock switch: OFF→ON</li><li>• Remote keyless entry receiver: Receiving valid keyfob</li></ul>	<ul style="list-style-type: none"><li>• Receiving the sleep-ready signal (Not-ready) from any units</li><li>• Push-button ignition switch (push switch): OFF→ON</li><li>• Hazard switch: OFF→ON</li><li>• PASSING switch: OFF→ON, ON→OFF</li><li>• TAIL LAMP switch: OFF→ON</li><li>• Driver door switch: OFF→ON, ON→OFF</li><li>• Passenger door switch: OFF → ON, ON → OFF</li><li>• Driver door request switch: OFF→ON</li><li>• Passenger door request switch: OFF→ON</li><li>• Stop lamp switch 2 signal: ON</li><li>• Remote keyless entry receiver: Receiving valid keyfob</li></ul>

# DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

## DIAGNOSIS SYSTEM (BCM)

### COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000009693563

### APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Direct Diagnostic Mode	Description
ECU identification	The BCM part number is displayed.
Self Diagnostic Result	The BCM self diagnostic results are displayed.
Data Monitor	The BCM input/output data is displayed in real time.
Active Test	The BCM activates outputs to test components.
Work support	The settings for BCM functions can be changed.
Configuration	<ul style="list-style-type: none"> <li>The vehicle specification can be read and saved.</li> <li>The vehicle specification can be written when replacing BCM.</li> </ul>
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication is displayed.

### SYSTEM APPLICATION

BCM can perform the following functions.

System	Sub System	Direct Diagnostic Mode						
		ECU identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN DIAG SUPPORT MNTR
Door lock	DOOR LOCK		×	×	×	×		
Rear window defogger	REAR DEFOGGER			×	×			
Warning chime	BUZZER			×	×			
Interior room lamp timer	INT LAMP			×	×	×		
Exterior lamp	HEAD LAMP			×	×	×		
Wiper and washer	WIPER			×	×	×		
Turn signal and hazard warning lamps	FLASHER			×	×			
Air conditioner	AIR CONDITIONER			×				
Intelligent Key system	INTELLIGENT KEY		×	×	×	×		
Combination switch	COMB SW			×				
BCM	BCM	×	×			×	×	×
Immobilizer	IMMU		×		×	×		
Interior room lamp battery saver	BATTERY SAVER			×	×	×		
Vehicle security system	THEFT ALM			×	×	×		
RAP system	RETAINED PWR			×		×		
Signal buffer system	SIGNAL BUFFER			×				
TPMS	AIR PRESSURE MONITOR		×	×	×	×		
Panic alarm system	PANIC ALARM				×			

# DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

## DOOR LOCK

### DOOR LOCK : CONSULT Function (BCM - DOOR LOCK)

INFOID:000000009693564

#### DATA MONITOR

Monitor Item [Unit]	Description
REQ SW-DR [On/Off]	Indicates condition of door request switch LH.
REQ SW-AS [On/Off]	Indicates condition of door request switch RH.
REQ SW -BD/TR [On/Off]	Indicates condition of back door request switch.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of back door switch.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.
KEY CYL LK-SW [On/Off]	Indicates condition of lock signal from door key cylinder switch.
KEY CYL UN-SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch.

#### ACTIVE TEST

Test Item	Description
DOOR LOCK	This test is able to check door lock operation [OTR ULK/AS UNLK/DR UNLK/ALL UNLK/ALL LOCK].

#### WORK SUPPORT

Support Item	Setting	Description
DOOR LOCK-UNLOCK SET	On*	Automatic door locks function ON.
	Off	Automatic door locks function OFF.
AUTOMATIC LOCK/UNLOCK SELECT	Lock/Unlock*	Automatic door locks function operates in lock and unlock.
	Lock Only	Automatic door locks function operates in lock only.
	Unlock Only	Automatic door locks function operates in unlock only.
	Off	Automatic door locks function OFF.
AUTOMATIC DOOR LOCK SELECT	P RANGE	Doors lock automatically when shifted out of Park (P).
	VH SPD*	Doors lock automatically when vehicle speed reaches 24 km/h (15 mph).
AUTOMATIC DOOR UNLOCK SELECT	MODE6*	Drivers door unlocks automatically when key is removed.
	MODE5	Drivers door unlocks automatically when shifted into Park (P).
	MODE4	Drivers door unlocks automatically when ignition is switched from ON to OFF.
	MODE3	Doors unlock automatically when key is removed.
	MODE2	Doors unlock automatically when shifted into Park (P).
	MODE1	Doors unlock automatically when ignition is switched from ON to OFF.

\*: Initial setting

## REAR DEFOGGER

### REAR DEFOGGER : CONSULT Function (BCM - REAR DEFOGGER)

INFOID:000000009693565

#### DATA MONITOR



# DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

Monitor Item [Unit]	Description
PUSH SW [On/Off]	Indicates condition of push-button ignition switch.
REAR DEF SW [On/Off]	Indicates condition of rear window defogger switch.

## ACTIVE TEST

Test Item	Description
REAR DEFOGGER	This test is able to check rear window defogger operation [Off/On].

## BUZZER

BUZZER : CONSULT Function (BCM - BUZZER)

INFOID:000000009693566

## DATA MONITOR

Monitor Item [Unit]	Description
PUSH -SW [On/Off]	Indicates condition of push-button ignition switch.
UNLK SEN -DR [On/Off]	Indicates condition of door unlock sensor.
VEH SPEED 1 [km/h]	Indicates vehicle speed signal received from ABS on CAN communication line.
TAIL LAMP SW [On/Off]	Indicates condition of combination switch.
FR FOG SW [On/Off]	Indicates condition of front fog lamp switch.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.

## ACTIVE TEST

Test Item	Description
ID REGIST WARNING	This test is able to check TPMS transmitter ID regist warning chime operation [On/Off].
SEAT BELT WARN TEST	This test is able to check seat belt warning chime operation [On/Off].
LIGHT WARN ALM	This test is able to check light warning chime operation [On/Off].

## INT LAMP

INT LAMP : CONSULT Function (BCM - INT LAMP)

INFOID:000000009693567

## DATA MONITOR

Monitor Item [Unit]	Description
REQ SW -DR [On/Off]	Indicates condition of door request switch LH.
REQ SW -AS [On/Off]	Indicates condition of door request switch RH.
PUSH -SW [On/Off]	Indicates condition of push-button ignition switch.
UNLK SEN -DR [On/Off]	Indicates condition of door unlock sensor.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of back door switch.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.
KEY CYL LK-SW [On/Off]	Indicates condition of lock signal from door key cylinder switch.
KEY CYL UN-SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch.

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

# DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

## < SYSTEM DESCRIPTION >

Monitor Item [Unit]	Description
RKE-LOCK [On/Off]	Indicates condition of lock signal from Intelligent Key.
RKE-UNLOCK [On/Off]	Indicates condition of unlock signal from Intelligent Key.

## ACTIVE TEST

Test Item	Description
INT LAMP	This test is able to check interior room lamp operation [On/Off].

## WORK SUPPORT

Support Item	Setting	Description
R LAMP TIMER LOGIC SET	MODE 2	Interior room lamp timer activates with all doors.
	MODE 1*	Interior room lamp timer activates with the driver door only.
SET I/L D-UNLCK INTCON	On*	Interior room lamp timer function ON.
	Off	Interior room lamp timer function OFF.
ROOM LAMP TIMER SET	MODE 4	Sets the interior room lamp ON time. (Timer operating time).
	30 sec.	
	MODE 3*	
	MODE 2	7.5 sec.

\*: Initial setting

## HEADLAMP

### HEADLAMP : CONSULT Function (BCM - HEAD LAMP)

INFOID:000000009693568

## DATA MONITOR

Monitor Item [Unit]	Description
PUSH SW [On/Off]	Indicates condition of push-button ignition switch.
ENGINE STATE [Stop/Stall/Crank/Run]	Indicates engine status received from ECM on CAN communication line.
VEH SPEED 1 [km/h]	Indicates vehicle speed signal received from ABS on CAN communication line.
TURN SIGNAL R [On/Off]	Indicates condition of combination switch.
TURN SIGNAL L [On/Off]	
TAIL LAMP SW [On/Off]	
HI BEAM SW [On/Off]	
HEAD LAMP SW 1 [On/Off]	
HEAD LAMP SW 2 [On/Off]	
PASSING SW [On/Off]	
FR FOG SW [On/Off]	
DOOR SW-DR [On/Off]	
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of back door switch.

## ACTIVE TEST

Test Item	Description
FR FOG LAMP	This test is able to check front fog lamp operation [On/Off].
HEAD LAMP	This test is able to check head lamp operation [Hi/Low/Off].

# DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

## < SYSTEM DESCRIPTION >

Test Item	Description
ILL DIM SIGNAL	This test is able to check head lamp illumination dimming operation [On/Off].
TAIL LAMP	This test is able to check tail lamp operation [On/Off].

## WORK SUPPORT

Support Item	Setting	Description
BATTERY SAVER SET	On*	Exterior lamp battery saver function ON.
	Off	Exterior lamp battery saver function OFF.
ILL DELAY SET	MODE 8	180 sec.
	MODE 7	150 sec.
	MODE 6	120 sec.
	MODE 4	60 sec.
	MODE 5	90 sec.
	MODE 3	30 sec.
	MODE 2	OFF
MODE 1*	45 sec.	Sets delay timer function operation time (All doors closed).

\*: Initial setting

## WIPER

### WIPER : CONSULT Function (BCM - WIPER)

INFOID:000000009693569

## DATA MONITOR

Monitor Item [Unit]	Description
PUSH SW [On/Off]	Indicates condition of push-button ignition switch.
VEH SPEED 1 [km/h]	Indicates vehicle speed signal received from ABS on CAN communication line.
FR WIPER HI [On/Off]	Indicates condition of wiper operation of combination switch.
FR WIPER LOW [On/Off]	
FR WASHER SW [On/Off]	
FR WIPER INT [On/Off]	
FR WIPER STOP [On/Off]	Indicates front wiper auto stop signal received from IPDM E/R on CAN communication line.
INT VOLUME [1 - 7]	Indicates condition of intermittent wiper operation of combination switch.
RR WIPER ON [On/Off]	Indicates condition of rear wiper operation of combination switch.
RR WIPER INT [On/Off]	
RR WASHER SW [On/Off]	
RR WIPER STOP [On/Off]	Indicates rear wiper motor auto stop input from rear wiper motor.

## ACTIVE TEST

Test Item	Description
FR WIPER	This test is able to check front wiper operation [INT/Lo/Hi/Off].
RR WIPER	This test is able to check rear wiper operation [On/Off].

## WORK SUPPORT

Support Item	Setting	Description
WIPER SPEED SETTING	On	Front wiper intermittent time linked with vehicle speed and wiper dial position.
	Off*	Front wiper intermittent time linked with wiper dial position.

# DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

\* : Initial setting

## FLASHER

FLASHER : CONSULT Function (BCM - FLASHER)

INFOID:000000009693570

### DATA MONITOR

Monitor Item [Unit]	Description
REQ SW -DR [On/Off]	Indicates condition of door request switch LH.
REQ SW -AS [On/Off]	Indicates condition of door request switch RH.
PUSH SW [On/Off]	Indicates condition of push-button ignition switch.
TURN SIGNAL R [On/Off]	Indicates condition of turn signal function of combination switch.
TURN SIGNAL L [On/Off]	
HAZARD SW [On/Off]	Indicates condition of hazard switch.
RKE-LOCK [On/Off]	Indicates condition of lock signal from Intelligent Key.
RKE-UNLOCK [On/Off]	Indicates condition of unlock signal from Intelligent Key.
RKE-PANIC [On/Off]	Indicates condition of panic alarm signal from Intelligent Key.

### ACTIVE TEST

Test Item	Description
FLASHER	This test is able to check turn signal lamp operation [Off/LH/RH].

### WORK SUPPORT

Support Item	Setting	Description
HAZARD ANSWER BACK	Lock/Unlock*	Hazard warning lamp activation when doors are locked or unlocked with Intelligent Key.
	Unlock Only	Hazard warning lamp activation when doors are unlocked with Intelligent Key.
	Lock Only	Hazard warning lamp activation when doors are locked with Intelligent Key.
	Off	No hazard warning lamp activation when doors are locked or unlocked with Intelligent Key.

\* : Initial setting

## AIR CONDITIONER

AIR CONDITIONER : CONSULT Function (BCM - AIR CONDITIONER)

INFOID:000000009693571

### DATA MONITOR

Monitor Item [Unit]	Description
FAN ON SIG [On/Off]	Indicates condition of fan switch.
AIR COND SW [On/Off]	Indicates condition of A/C switch.

## INTELLIGENT KEY

INTELLIGENT KEY : CONSULT Function (BCM - INTELLIGENT KEY)

INFOID:000000009693572

### SELF DIAGNOSTIC RESULT

Refer to [BCS-48, "DTC Index"](#).

### DATA MONITOR

# DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

## < SYSTEM DESCRIPTION >

Monitor Item [Unit]	Main	Description
REQ SW -DR [On/Off]	×	Indicates condition of door request switch LH.
REQ SW -AS [On/Off]	×	Indicates condition of door request switch RH.
REQ SW -BD/TR [On/Off]	×	Indicates condition of back door request switch.
PUSH SW [On/Off]		Indicates condition of push-button ignition switch.
CLUTCH SW [On/Off]	×	Indicates condition of clutch interlock switch.
BRAKE SW 1 [On/Off]	×	Indicates condition of brake switch.
BRAKE SW 2 [On/Off]		Indicates condition of brake switch.
DETE/CANCL SW [On/Off]	×	Indicates condition of P (park) position.
SFT PN/N SW [On/Off]	×	Indicates condition of P (park) or N (neutral) position.
UNLK SEN -DR [On/Off]	×	Indicates condition of door unlock sensor.
PUSH SW -IPDM [On/Off]		Indicates condition of push-button ignition switch received from IPDM E/R on CAN communication line.
IGN RLY1 -F/B [On/Off]		Indicates condition of ignition relay 1 received from IPDM E/R on CAN communication line.
DETE SW -IPDM [On/Off]		Indicates condition of detent switch received from TCM on CAN communication line.
SFT PN -IPDM [On/Off]		Indicates condition of P (park) or N (neutral) position from TCM on CAN communication line.
SFT P -MET [On/Off]		Indicates condition of P (park) position from TCM on CAN communication line.
SFT N -MET [On/Off]		Indicates condition of N (neutral) position from IPDM E/R on CAN communication line.
ENGINE STATE [Stop/Start/Crank/Run]	×	Indicates condition of engine state from ECM on CAN communication line.
VEH SPEED 1 [mph/km/h]	×	Indicates condition of vehicle speed signal received from ABS on CAN communication line.
VEH SPEED 2 [mph/km/h]	×	Indicates condition of vehicle speed signal received from combination meter on CAN communication line.
DOOR STAT -DR [LOCK/READY/UNLK]	×	Indicates condition of driver side door status.
DOOR STAT -AS [LOCK/READY/UNLK]	×	Indicates condition of passenger side door status.
ID OK FLAG [Set/Reset]		Indicates condition of Intelligent Key ID.
PRMT ENG STRT [Set/Reset]		Indicates condition of engine start possibility.
RKE OPE COUN1 [0-19]	×	When remote keyless entry receiver receives the signal transmitted while operating on Intelligent Key, the numerical value start changing.
RKE OPE COUN2 [0-19]	×	When remote keyless entry receiver receives the signal transmitted while operating on Intelligent Key, the numerical value start changing.
RKE-LOCK [On/Off]		Indicates condition of lock signal from Intelligent Key.
RKE-UNLOCK [On/Off]		Indicates condition of unlock signal from Intelligent Key.
RKE-PANIC [On/Off]		Indicates condition of panic signal from Intelligent Key.
RKE-MODE CHG [On/Off]		Indicates condition of mode change signal from Intelligent Key.

## ACTIVE TEST

Test Item	Description
INSIDE BUZZER	This test is able to check combination meter warning chime operation [Take Out/Knob/Key/Off].
LCD	This test is able to check combination meter display information [Off/LK WN/OUTKEY/NO KY/BATT/INSRT/SFT P/ROTAT/ID NG/B&P I/B&P N].
BATTERY SAVER	This test is able to check battery saver operation [On/Off].
ENGINE SW ILLUMI	This test is able to check push-button ignition switch START indicator operation [On/Off].

# DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

## < SYSTEM DESCRIPTION >

Test Item	Description
PUSH SWITCH INDICATOR	This test is able to check push-button ignition switch indicator operation [On/Off].
INT LAMP	This test is able to check interior room lamp operation [On/Off].
INDICATOR	This test is able to check combination meter warning lamp operation [KEY ON/KEY IND/Off].
FLASHER	This test is able to check hazard lamp operation [LH/RH/Off].
OUTSIDE BUZZER	This test is able to check Intelligent Key warning buzzer operation [On/Off].
HORN	This test is able to check horn operation [On].
P RANGE	This test is able to check CVT shift selector illumination operation [On/Off].

## WORK SUPPORT

Support Item	Setting	Description	
LOCK/UNLOCK BY I-KEY	On*	Door lock/unlock function from Intelligent Key ON.	
	Off	Door lock/unlock function from Intelligent Key OFF.	
ANTI KEY LOCK IN FUNCTI	On*	Anti lock out setting ON.	
	Off	Anti lock out setting OFF.	
ANS BACK I-KEY UNLOCK	Off	No buzzer reminder when doors are unlocked with request switch.	
	On*	Buzzer reminder when doors are unlocked with request switch.	
ANS BACK I-KEY LOCK	Horn Chirp	Horn chirp reminder when doors are locked with request switch.	
	Buzzer*	Buzzer reminder when doors are locked with request switch.	
	Off	No reminder when doors are locked with request switch.	
HORN WITH KEYLESS LOCK	Off	Horn chirp reminder when doors are locked with Intelligent Key.	
	On*	No horn chirp reminder when doors are locked with Intelligent Key.	
HAZARD ANSWER BACK	Lock/Unlock*	Hazard warning lamp activation when doors are locked/unlocked with Intelligent Key or request switch.	
	Unlock Only	Hazard warning lamp activation when doors are unlocked with Intelligent Key or request switch.	
	Lock Only	Hazard warning lamp activation when doors are locked with Intelligent Key or request switch.	
	Off	No hazard warning lamp activation when doors are locked/unlocked with Intelligent Key or request switch.	
INSIDE ANT DIAGNOSIS	—	This function allows inside key antenna self-diagnosis.	
CONFIRM KEY FOB ID	—	Intelligent Key ID code can be checked.	
SHORT CRANKING OUTPUT	Start	70 msec	Starter motor operation duration time setting.
		100 msec	
		200 msec	
End	—		
PANIC ALARM SET	MODE 3	1.5 sec	Intelligent Key panic alarm button setting.
	MODE 2	OFF	
	MODE 1*	0.5 sec	
LO- BATT OF KEY FOB WARN	On*	Intelligent Key low battery warning ON.	
	Off	Intelligent Key low battery warning OFF.	

# DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

Support Item	Setting		Description
AUTO LOCK SET	MODE7	5 min	Auto door lock time setting.
	MODE6	4 min	
	MODE5	3 min	
	MODE4	2 min	
	MODE3*	1 min	
	MODE2	30 sec	
	MODE1	Off	

\*: Initial Setting

## COMB SW

COMB SW : CONSULT Function (BCM - COMB SW)

INFOID:000000009693573

## DATA MONITOR

Monitor Item [Unit]	Description
FR WIPER HI [On/Off]	Indicates condition of wiper operation of combination switch.
FR WIPER LOW [On/Off]	
FR WASHER SW [On/Off]	
FR WIPER INT [On/Off]	
INT VOLUME [1 - 7]	Indicates condition of intermittent wiper operation of combination switch.
RR WIPER ON [On/Off]	Indicates condition of rear wiper operation of combination switch.
RR WIPER INT [On/Off]	
RR WASHER SW [On/Off]	
TURN SIGNAL R [On/Off]	Indicates condition of right turn signal operation of combination switch.
TURN SIGNAL L [On/Off]	Indicates condition of left turn signal operation of combination switch.
TAIL LAMP SW [On/Off]	Indicates condition of tail lamp switch operation of combination switch.
HI BEAM SW [On/Off]	Indicates condition of Hi beam switch operation of combination switch.
HEAD LAMP SW 1 [On/Off]	Indicates condition of head lamp switch 1 operation of combination switch.
HEAD LAMP SW 2 [On/Off]	Indicates condition of head lamp switch 2 operation of combination switch.
PASSING SW [On/Off]	Indicates condition of passing switch operation of combination switch.
FR FOG SW [On/Off]	Indicates condition of front fog lamp switch operation of combination switch.

## BCM

BCM : CONSULT Function (BCM - BCM)

INFOID:000000009693574

## ECU IDENTIFICATION

The BCM part number is displayed.

## SELF DIAGNOSTIC RESULT

Refer to [BCS-48, "DTC Index"](#).

## WORK SUPPORT

Support Item	Setting	Description
RESET SETTING VALUE	Reset	Returns BCM to initial value in factory shipment.
	Cancel	Cancels the reset function.

## CONFIGURATION

Refer to [BCS-58, "Description"](#).

# DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

CAN DIAG SUPPORT MNTR

Refer to [LAN-12. "CAN Diagnostic Support Monitor"](#).

IMMU

IMMU : CONSULT Function (BCM - IMMU)

INFOID:000000009693575

SELF DIAGNOSTIC RESULT

Refer to [BCS-48. "DTC Index"](#).

DATA MONITOR

Monitor Item [Unit]	Description
CONFIRM ID ALL [Yet/DONE]	Switches to DONE when an Intelligent Key is registered.
CONFIRM ID4 [Yet/DONE]	
CONFIRM ID3 [Yet/DONE]	
CONFIRM ID2 [Yet/DONE]	
CONFIRM ID1 [Yet/DONE]	
TP 4 [Yet/DONE]	DONE indicates the number of Intelligent Key ID which has been registered.
TP 3 [Yet/DONE]	
TP 2 [Yet/DONE]	
TP 1 [Yet/DONE]	
PUSH SW [On/Off]	Indicates condition of push-button ignition switch.

ACTIVE TEST

Test Item	Description
THEFT IND	This test is able to check security indicator operation [On/Off].

WORK SUPPORT

Support Item	Setting	Description
CONFIRM DONGLE ID	—	Dongle ID code can be read.

BATTERY SAVER

BATTERY SAVER : CONSULT Function (BCM - BATTERY SAVER)

INFOID:000000009693576

DATA MONITOR

Monitor Item [Unit]	Description
REQ SW -DR [On/Off]	Indicates condition of door request switch LH.
REQ SW -AS [On/Off]	Indicates condition of door request switch RH.
PUSH SW [On/Off]	Indicates condition push-button ignition switch.
UNLK SEN -DR [On/Off]	Indicates condition of door unlock sensor.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of back door switch.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.
KEY CYL LK-SW [On/Off]	Indicates condition of lock signal from door key cylinder switch.



# DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

## < SYSTEM DESCRIPTION >

Monitor Item [Unit]	Description
KEY CYL UN-SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch.
RKE-LOCK [On/Off]	Indicates condition of lock signal from Intelligent Key.
RKE-UNLOCK [On/Off]	Indicates condition of unlock signal from Intelligent Key.

## ACTIVE TEST

Test item	Description
BATTERY SAVER	This test is able to check battery saver operation [On/Off].

## WORK SUPPORT

Support Item	Setting	Description
BATTERY SAVER SET	ON*	Exterior lamp battery saver function ON.
	OFF	Exterior lamp battery saver function OFF.
ROOM LAMP TIMER SET	MODE 3*   10 min.	Sets interior room lamp battery saver timer operating time.
	MODE 2   60 min.	
	MODE 1   15 min.	

\*: Initial setting

## THEFT ALM

### THEFT ALM : CONSULT Function (BCM - THEFT)

INFOID:000000009693578

## DATA MONITOR

Monitored Item	Description
REQ SW -DR [On/Off]	Indicates condition of door request switch LH.
REQ SW -AS [On/Off]	Indicates condition of door request switch RH.
REQ SW -BD/TR [On/Off]	Indicates condition of back door request switch.
PUSH SW [On/Off]	Indicates condition of push-button ignition switch.
UNLK SEN -DR [On/Off]	Indicates condition of door unlock sensor.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of back door switch.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.
KEY CYL LK-SW [On/Off]	Indicates condition of lock signal from door key cylinder switch.
KEY CYL UN-SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch.
RKE-LOCK [On/Off]	Indicates condition of lock signal from Intelligent Key.
RKE-UNLOCK [On/Off]	Indicates condition of unlock signal from Intelligent Key.

## ACTIVE TEST

Test Item	Description
VEHICLE SECURITY HORN	This test is able to check vehicle security horn operation [On].
FLASHER	This test is able to check turn signal lamp operation [LH/RH/Off].
THEFT IND	This test is able to check security indicator lamp operation [On/Off].
HEADLAMP(HI)	This test is able to check vehicle security lamp operation [On].

# DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

## RETAINED PWR

RETAINED PWR : CONSULT Function (BCM - RETAINED PWR)

INFOID:000000009693579

### DATA MONITOR

Monitor Item [Unit]	Description
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.

## SIGNAL BUFFER

SIGNAL BUFFER : CONSULT Function (BCM - SIGNAL BUFFER)

INFOID:000000009693580

### DATA MONITOR

Monitor Item [Unit]	Description
PUSH SW [On/Off]	Indicates condition of the push-button ignition switch.

## AIR PRESSURE MONITOR

AIR PRESSURE MONITOR : CONSULT Function (BCM - AIR PRESSURE MONITOR)

INFOID:000000009693581

### NOTE:

The Signal Tech II Tool (J-50190) can be used to perform the following functions. Refer to the Signal Tech II User Guide for additional information.

- Activate and display TPMS transmitter IDs
- Display tire pressure reported by the TPMS transmitter
- Read TPMS DTCs
- Register TPMS transmitter IDs
- Check Intelligent Key relative signal strength
- Confirm vehicle Intelligent Key antenna signal strength

### SELF DIAGNOSTIC RESULT

#### NOTE:

Before performing self diagnostic result, be sure to register the ID, or else the actual malfunction may be different from that displayed on CONSULT.

Refer to [BCS-48, "DTC Index"](#).

### DATA MONITOR

Monitor Item [Unit]	Description
AIR PRESS FL [kPa, kg/cm <sup>2</sup> or Psi]	Indicates air pressure of front LH tire.
AIR PRESS FR [kPa, kg/cm <sup>2</sup> or Psi]	Indicates air pressure of front RH tire.
AIR PRESS RR [kPa, kg/cm <sup>2</sup> or Psi]	Indicates air pressure of rear RH tire.
AIR PRESS RL [kPa, kg/cm <sup>2</sup> or Psi]	Indicates air pressure of rear LH tire.
ID REGST FL1 [Done/Yet]	Indicates ID registration status of front LH transmitter.
ID REGST FR1 [Done/Yet]	Indicates ID registration status of front RH transmitter.
ID REGST RR1 [Done/Yet]	Indicates ID registration status of rear RH transmitter.
ID REGST RL1 [Done/Yet]	Indicates ID registration status of rear LH transmitter.
WARNING LAMP [Off/On]	Indicates condition of low tire pressure warning lamp in combination meter.
BUZZER [Off/On]	Indicates condition of buzzer in combination meter.

## ACTIVE TEST

# DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

Test Item	Description
HORN	This test is able to check horn operation [On].
FLASHER	This test is able to check turn signal lamp operation [Off/LH/RH].
ID REGIST WARNING	This test is able to check ID registration warning chime operation [On/Off].
WARNING LAMP	This test is able to check tire pressure warning lamp operation [On/Off].

## WORK SUPPORT

Support Item	Description
ID READ	The registered ID number is displayed.
ID REGIST	Refer to <a href="#">WT-22. "Description"</a> .

## PANIC ALARM

PANIC ALARM : CONSULT Function (BCM - PANIC ALARM)

INFOID:000000009693582

## ACTIVE TEST

Test Item	Description
VEHICLE SECURITY HORN	This test is able to check panic alarm operation [On].
HEAD LAMP (HI)	This test is able to check head lamp HI operation [On].

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

BCS

# ECU DIAGNOSIS INFORMATION

## BCM

### Reference Value

INFOID:000000009693583

**NOTE:**

The Signal Tech II Tool (J-50190) can be used to perform the following functions. Refer to the Signal Tech II User Guide for additional information.

- Activate and display TPMS transmitter IDs
- Display tire pressure reported by the TPMS transmitter
- Read TPMS DTCs
- Register TPMS transmitter IDs
- Check Intelligent Key relative signal strength
- Confirm vehicle Intelligent Key antenna signal strength

### VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition	Value/Status
AIR COND SW	A/C switch OFF	Off
	A/C switch ON	On
AIR PRESS FL	Front left tire air pressure value	kPa, kg/cm <sup>2</sup> , psi
AIR PRESS FR	Front right tire air pressure value	kPa, kg/cm <sup>2</sup> , psi
AIR PRESS RL	Rear left tire air pressure value	kPa, kg/cm <sup>2</sup> , psi
AIR PRESS RR	Rear right tire air pressure value	kPa, kg/cm <sup>2</sup> , psi
BRAKE SW 1	When the brake pedal is released	On
	When the brake pedal is depressed	Off
BRAKE SW2	Brake pedal released	Off
	Brake pedal depressed	On
BUZZER	Buzzer in combination meter OFF	Off
	Buzzer in combination meter ON	On
CDL LOCK SW	Door lock/unlock switch does not operate	Off
	Press door lock/unlock switch to the LOCK side	On
CDL UNLOCK SW	Door lock/unlock switch does not operate	Off
	Press door lock/unlock switch to the UNLOCK side	On
CONFIRM ID ALL	The key ID does not match any key ID registered to BCM.	Yet
	The key ID matches any key ID registered to BCM.	DONE
CONFIRM ID4	The key ID does not match the fourth key ID registered to BCM.	Yet
	The key ID matches the fourth key ID registered to BCM.	DONE
CONFIRM ID3	The key ID does not match the third key ID registered to BCM.	Yet
	The key ID matches the third key ID registered to BCM.	DONE
CONFIRM ID2	The key ID does not match the second key ID registered to BCM.	Yet
	The key ID matches the second key ID registered to BCM.	DONE
CONFIRM ID1	The key ID does not match the first key ID registered to BCM.	Yet
	The key ID matches the first key ID registered to BCM.	DONE
DETE SW -IPDM	When selector lever is in P position	Off
	When selector lever is in any position other than P	On
DETE/CANCL SW	When selector lever is in P position	Off
	When selector lever is in any position other than P	On

# BCM

## < ECU DIAGNOSIS INFORMATION >

## [WITH INTELLIGENT KEY SYSTEM]

Monitor Item	Condition	Value/Status	
DOOR STAT-AS	Passenger door LOCK status	LOCK	A
	Passenger door UNLOCK status	UNLK	
	Wait with selective UNLOCK operation (5 seconds)	READY	B
DOOR STAT-DR	Driver door LOCK status	LOCK	
	Driver door UNLOCK status	UNLK	C
	Wait with selective UNLOCK operation (5 seconds)	READY	
DOOR SW-AS	Front door RH closed	Off	
	Front door RH opened	On	D
DOOR SW-BK	Back door closed	Off	
	Back door opened	On	E
DOOR SW-DR	Front door LH closed	Off	
	Front door LH opened	On	F
DOOR SW-RL	Rear door LH closed	Off	
	Rear door LH opened	On	G
DOOR SW-RR	Rear door RH closed	Off	
	Rear door RH opened	On	H
ENGINE STATE	Engine stopped	Stop	
	While the engine stalls	Stall	
	At engine cranking	Crank	
	Engine running	Run	
FAN ON SIG	Blower motor fan switch OFF	Off	I
	Blower motor fan switch ON	On	
FR FOG SW	Front fog lamp switch OFF	Off	J
	Front fog lamp switch ON	On	
FR WASHER SW	Front washer switch OFF	Off	K
	Front washer switch ON	On	
FR WIPER LOW	Front wiper switch OFF	Off	L
	Front wiper switch LO	On	
FR WIPER HI	Front wiper switch OFF	Off	
	Front wiper switch HI	On	
FR WIPER INT	Front wiper switch OFF	Off	BCS
	Front wiper switch INT	On	
FR WIPER STOP	Any position other than front wiper stop position	Off	
	Front wiper stop position	On	N
HAZARD SW	When hazard switch is not pressed	Off	O
	When hazard switch is pressed	On	
HEAD LAMP SW 1	Headlamp switch OFF	Off	
	Headlamp switch 1st	On	
HEAD LAMP SW 2	Headlamp switch OFF	Off	P
	Headlamp switch 1st	On	
HI BEAM SW	High beam switch OFF	Off	
	High beam switch HI	On	
ID OK FLAG	Ignition switch ACC or ON	Reset	
	Ignition switch OFF	Set	

# BCM

## < ECU DIAGNOSIS INFORMATION >

## [WITH INTELLIGENT KEY SYSTEM]

Monitor Item	Condition	Value/Status
ID REGST FL1	ID registration of front left tire incomplete	YET
	ID registration of front left tire complete	DONE
ID REGST FR1	ID registration of front right tire incomplete	YET
	ID registration of front right tire complete	DONE
ID REGST RL1	ID registration of rear left tire incomplete	YET
	ID registration of rear left tire complete	DONE
ID REGST RR1	ID registration of rear right tire incomplete	YET
	ID registration of rear right tire complete	DONE
IGN RLY1 F/B	Ignition switch OFF or ACC	Off
	Ignition switch ON	On
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	1 - 7
KEY CYL LK-SW	Door key cylinder LOCK position	Off
	Door key cylinder other than LOCK position	On
KEY CYL UN-SW	Door key cylinder UNLOCK position	Off
	Door key cylinder other than UNLOCK position	On
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
PRMT ENG STRT	When the engine start is prohibited	Reset
	When the engine start is permitted	Set
PUSH SW	Return ignition switch to LOCK position	Off
	Press ignition switch	On
PUSH SW-IPDM	When engine switch (push switch) is not pressed	Off
	When engine switch (push switch) is pressed	On
REAR DEF SW	Rear window defogger switch OFF	Off
	Rear window defogger switch ON	On
REQ SW-AS	When passenger door request switch is not pressed	Off
	When passenger door request switch is pressed	On
REQ SW -BD/TR	When back door request switch is not pressed	Off
	When back door request switch is pressed	On
REQ SW-DR	When driver door request switch is not pressed	Off
	When driver door request switch is pressed	On
RKE-LOCK	When LOCK button of Intelligent Key is not pressed	Off
	When LOCK button of Intelligent Key is pressed	On
RKE-MODE CHG	When LOCK/UNLOCK button of Intelligent Key is not pressed and held simultaneously	Off
	When LOCK/UNLOCK button of Intelligent Key is pressed and held simultaneously	On
RKE OPE COUN1	Operation frequency of Intelligent Key	0-19
RKE OPE COUN2	Operation frequency of Intelligent Key	0-19
RKE-PANIC	When PANIC button of Intelligent Key is not pressed	Off
	When PANIC button of Intelligent Key is pressed	On
RKE-UNLOCK	When UNLOCK button of Intelligent Key is not pressed	Off
	When UNLOCK button of Intelligent Key is pressed	On
RR WASHER SW	Rear washer switch OFF	Off
	Rear washer switch ON	On

# BCM

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

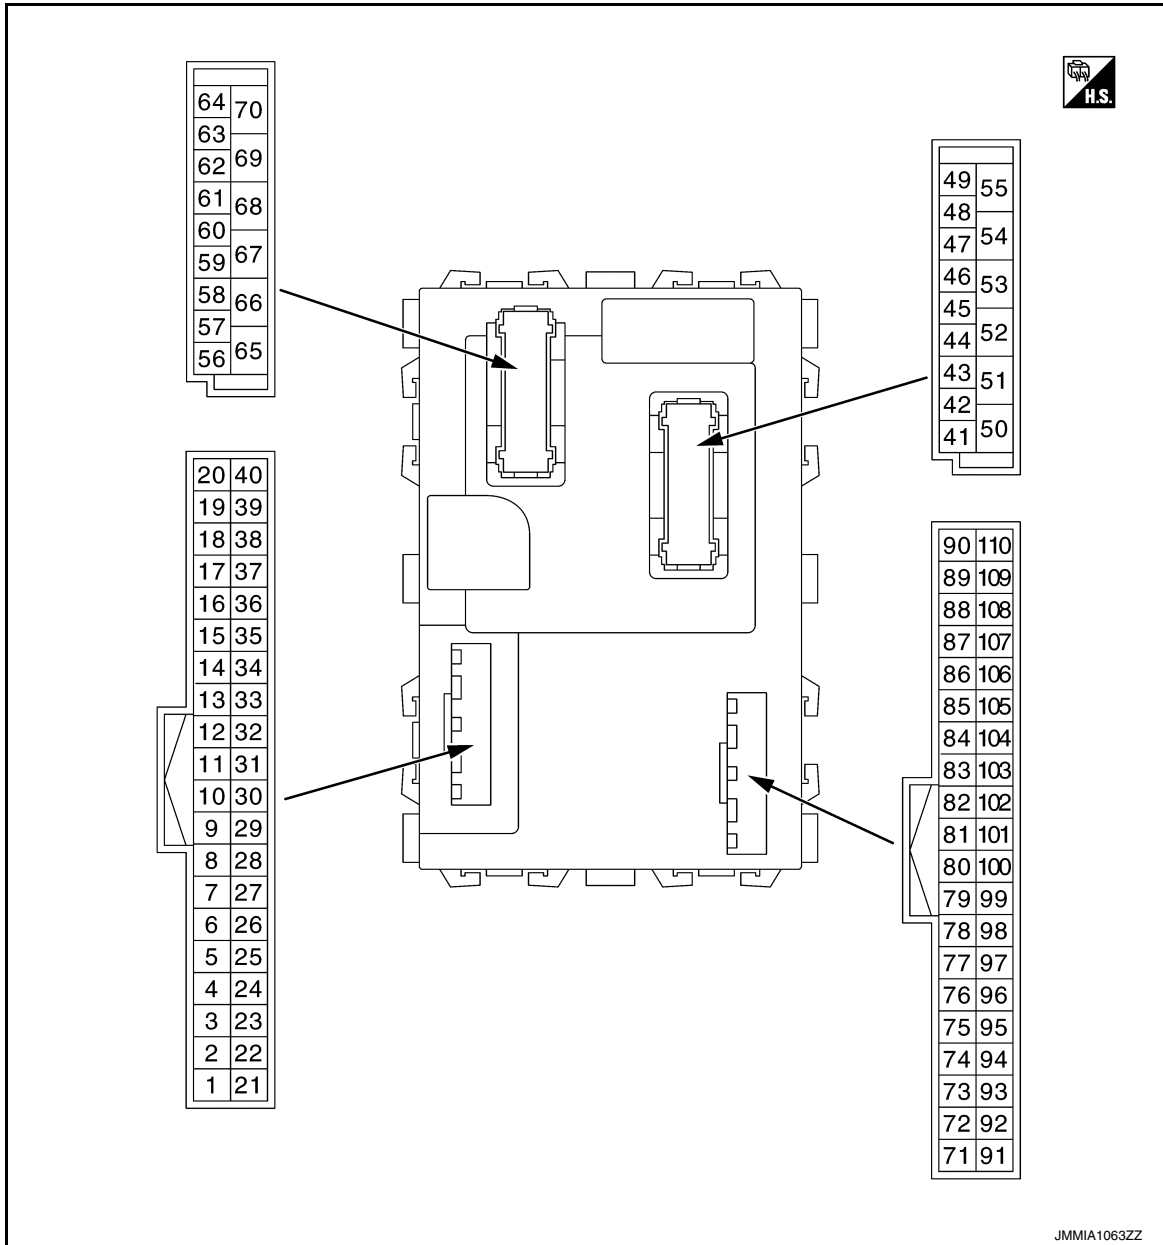
Monitor Item	Condition	Value/Status	
RR WIPER INT	Rear wiper switch OFF	Off	A
	Rear wiper switch INT	On	
RR WIPER ON	Rear wiper switch OFF	Off	B
	Rear wiper switch ON	On	
RR WIPER STOP	Any position other than rear wiper stop position	Off	C
	Rear wiper stop position	On	
SFT N-MET	When selector lever is in any position other than N	Off	D
	When selector lever is in N position	On	
SFT P-MET	When selector lever is in any position other than P	Off	E
	When selector lever is in P position	On	
SFT PN -IPDM	When selector lever is in any position other than P or N	Off	F
	When selector lever is in P or N position	On	
SFT PN/N SW	When selector lever is in any position other than P or N	Off	G
	When selector lever is in P or N position	On	
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	Off	H
	Lighting switch 1ST or 2ND	On	
TP 4	The ID of fourth key is not registered to BCM	Yet	I
	The ID of fourth key is registered to BCM	DONE	
TP 3	The ID of third key is not registered to BCM	Yet	J
	The ID of third key is registered to BCM	DONE	
TP 2	The ID of second key is not registered to BCM	Yet	K
	The ID of second key is registered to BCM	DONE	
TP 1	The ID of first key is not registered to BCM	Yet	L
	The ID of first key is registered to BCM	DONE	
TURN SIGNAL L	Turn signal switch OFF	Off	
	Turn signal switch LH	On	
TURN SIGNAL R	Turn signal switch OFF	Off	
	Turn signal switch RH	On	
UNLK SEN-DR	Driver door UNLOCK status	Off	
	Driver door LOCK status	On	
VEH SPEED 1	While driving, equivalent to speedometer reading	mph, km/h	BCS
VEH SPEED 2	While driving, equivalent to speedometer reading	mph, km/h	
WARNING LAMP	Low tire pressure warning lamp in combination meter OFF	Off	N
	Low tire pressure warning lamp in combination meter ON	On	

# BCM

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

## TERMINAL LAYOUT



## PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
1 (GR)	Ground	Rear window defogger relay control	Input	Rear window defogger switch	OFF: Battery voltage ON: 0 - 0.5 V
2 (BR)	Ground	INPUT 5 signal	Input	Combination switch	OFF: 0 V TURN RH HEADLAMP 1 HI BEAM TAIL LAMP

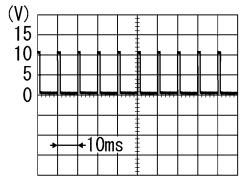
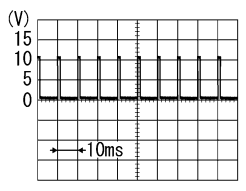
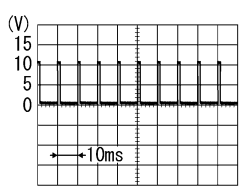
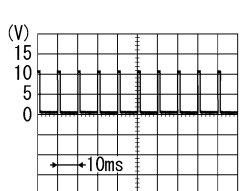
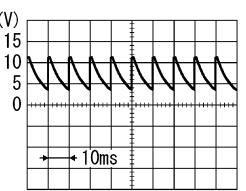
1.0 V



# BCM

## < ECU DIAGNOSIS INFORMATION >

## [WITH INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
3 (Y)	Ground	INPUT 4 signal	Input	Combination switch	OFF	0 V
					TURN LH	
					PASSING	
					HEADLAMP 2	
					FR FOG	
4 (L)	Ground	INPUT 3 signal	Input	Combination switch	OFF	0 V
					FR WIPER LO	
					FR WIPER INT (any intermittent position)	
5 (G)	Ground	INPUT 2 signal	Input	Combination switch	OFF	0 V
					FR WASHER	
					RR WASHER	
					Wiper intermittent dial 1	
					Wiper intermittent dial 5	
					Wiper intermittent dial 6	
RR WIPER ON	1.0 V					
6 (R)	Ground	INPUT 1 signal	Input	Combination switch	OFF	0 V
					FR WIPER HI	
					Wiper intermittent dial 1	
					Wiper intermittent dial 2	
					Wiper intermittent dial 3	
					Wiper intermittent dial 6	
					Wiper intermittent dial 7	
RR WIPER INT	1.0 V					
7 (W)	Ground	Key cylinder unlock sw signal	Input	Key cylinder switch	N position	 7.0 - 8.0 V
					UNLOCK position	0 V





A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

BCS

# BCM
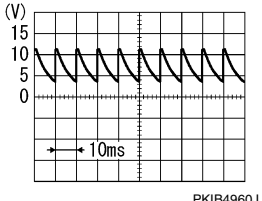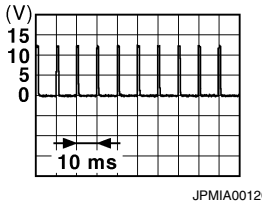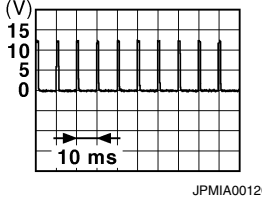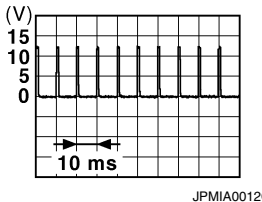
## < ECU DIAGNOSIS INFORMATION >







## [WITH INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
8 (GR)	Ground	Key cylinder lock sw signal	Input	Key cylinder switch	N position	 7.0 - 8.0 V
					LOCK position	0 V
9 (LG)	Ground	Stop lamp switch 1	Input	Stop lamp switch	OFF (Brake pedal released)	0 V
					ON (Brake pedal depressed)	Battery voltage
12 (GR)	Ground	Central door lock sw signal	Input	Door lock and unlock switch	NEUTRAL position	 1.0 - 1.5 V
					LOCK position	0 V
13 (BR)	Ground	Central door unlock sw signal	Input	Door lock and unlock switch	NEUTRAL position	 1.0 - 1.5 V
					UNLOCK position	0 V
15 (G)	Ground	Rear defogger switch signal	Input	Rear window defogger switch	Not pressed	 1.0 - 1.5 V
					Pressed	0 V
18 (V)	Ground	Keyless tuner ground	Input	Push-button ignition switch ON		0 V

# BCM
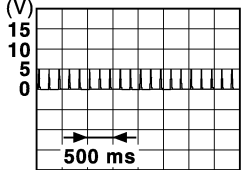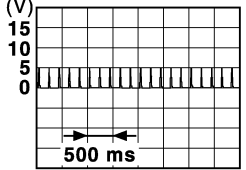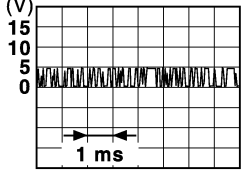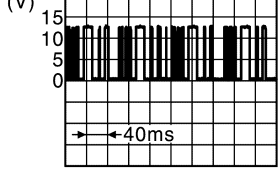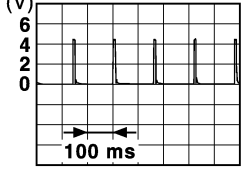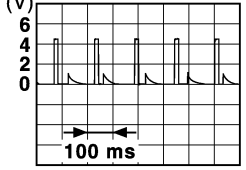
## < ECU DIAGNOSIS INFORMATION >

## [WITH INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
		Signal name	Input/ Output		
+	-				
19 (LG)	Ground	Keyless tuner power supply	Output	Push-button ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA3838GB</p>
				Push-button ignition switch ACC or ON	5 V
20 (G)	Ground	Keyless tuner signal	Input	Push-button ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA3838GB</p>
				When operating either button on Intelligent Key	 <p style="text-align: right; font-size: small;">JMKIA3841GB</p>
21 (P)	Ground	Immobilizer one way communication (CLOCK) signal	Input/ Output	Intelligent Key battery is removed	 <p style="text-align: right; font-size: small;">JMKIA6232JP</p>
				Brake pedal released	Battery voltage
22 (W)	Ground	Keyless tuner RSSI signal	Input	Push-button ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA5952GB</p>
				When pressing and holding either button on Intelligent Key	 <p style="text-align: right; font-size: small;">JMKIA5953GB</p>





A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

BCS

# BCM
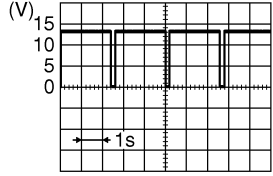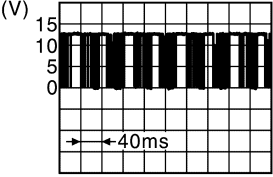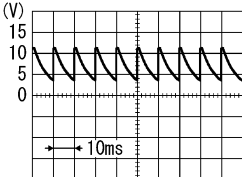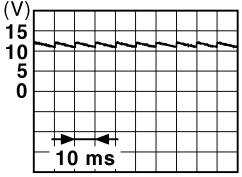
## < ECU DIAGNOSIS INFORMATION >







## [WITH INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
23 (R/Y)	Ground	Security indicator output	Output	Security indica- tor lamp	ON	0 – 0.5 V
					Blinking (push-button igni- tion switch OFF)	 <p style="text-align: right; font-size: small;">JPMIA0590GB</p>
					OFF	Battery voltage
24 (SB)	Ground	Dongle link (SERI- AL)	Input/ Output	Push-button ignition switch OFF		5 V
25 (LG)	Ground	Immobilizer two way communication sig- nal	Input/ Output	During waiting	Brake pedal depressed <b>NOTE:</b> Waveform varies each time when brake pedal is depressed	 <p style="text-align: right; font-size: small;">JMKIA6233JP</p>
				Brake pedal released	Battery voltage	
26 (O)	Ground	THERMO amp. sig- nal	Input	Push-button igni- tion switch ON and blower fan switch ON	A/C switch OFF	Battery voltage
					A/C switch ON	0 V
27 (W)	Ground	Air con sw signal	Input	Push-button igni- tion switch ON and blower fan switch ON	A/C switch OFF	Battery voltage
					A/C switch ON	0 V
28 (SB)	Ground	Blower fan sw signal	Input	Fan switch	OFF	0 V
					ON	 <p style="text-align: right; font-size: small;">PKIB4960J</p>
					7.0 - 8.0 V	
29 (O)	Ground	Hazard sw signal	Input	Hazard switch	OFF	Battery voltage
					ON	0 – 1.5 V
31 (Y)	Ground	Driver door lock sta- tus	Input	Front door LH	LOCK status	 <p style="text-align: right; font-size: small;">JPMIA0011GB</p>
					UNLOCK status	0V

# BCM
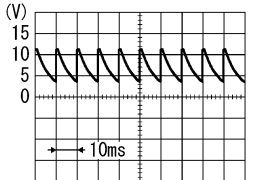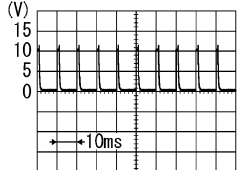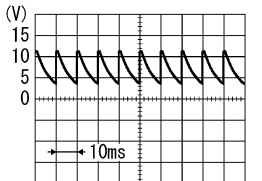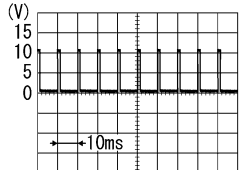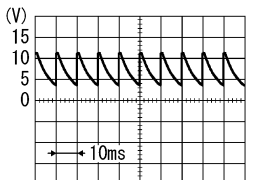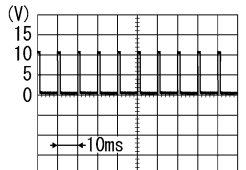
< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
32 (P)	Ground	OUTPUT 5	Output	Combination switch	OFF	 <p style="text-align: right; font-size: small;">PKIB4960J</p>
					FR FOG	 <p style="text-align: right; font-size: small;">PKIB4956J</p>
					RR WIPER ON	
					Wiper intermittent dial 1	
					Wiper intermittent dial 2	
					Wiper intermittent dial 6	
Wiper intermittent dial 7						
33 (V)	Ground	OUTPUT 4	Output	Combination switch	OFF	 <p style="text-align: right; font-size: small;">PKIB4960J</p>
					TAIL LAMP	 <p style="text-align: right; font-size: small;">PKIB4958J</p>
					Wiper intermittent dial 1	
					Wiper intermittent dial 5	
					Wiper intermittent dial 6	
RR WIPER INT						
34 (W)	Ground	OUTPUT 3	Output	Combination switch	OFF	 <p style="text-align: right; font-size: small;">PKIB4960J</p>
					HI BEAM	 <p style="text-align: right; font-size: small;">PKIB4958J</p>
					HEADLAMP 2	
					RR WASHER	
					Wiper intermittent dial 1	
					Wiper intermittent dial 2	
Wiper intermittent dial 3						





A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

BCS

# BCM
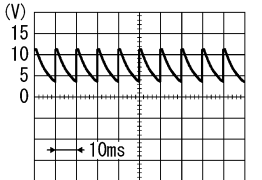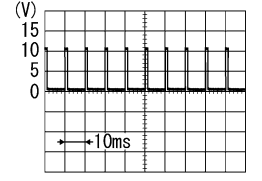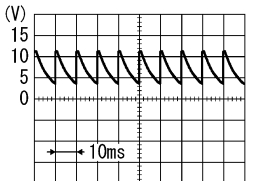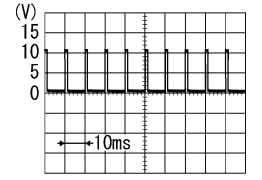
## < ECU DIAGNOSIS INFORMATION >






## [WITH INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
35 (GR)	Ground	OUTPUT 2	Output	Combination switch	OFF	 7.0 - 8.0 V
					HEADLAMP 1	 1.2 V
					PASSING	
					FR WIPER HI	
FR WIPER INT (any intermittent position)						
36 (LG)	Ground	OUTPUT 1	Output	Combination switch	OFF	 7.0 - 8.0 V
					TURN RH	 1.2 V
					TURN LH	
					FR WIPER LO	
FR WASHER						
37 <sup>1</sup> (R)	Ground	Park position switch signal	Input	Selector lever	P (Park) position	0 - 1.5 V
					Any position other than P (Park)	Battery voltage
37 <sup>2</sup> (GR)	Ground	Clutch pedal posi- tion switch signal	Input	Clutch pedal	Depressed	0 - 1.5 V
					Released	Battery voltage
38 (G)	Ground	Keyless intelligent tuner signal	Input	Push-button ig- nition switch	OFF or ACC	0 - 0.5 V
					ON	Battery voltage
39 (L)	Ground	CAN-H	Input/ Output	—	—	
40 (P)	Ground	CAN-L	Input/ Output	—	—	

# BCM
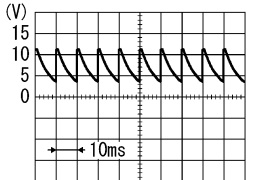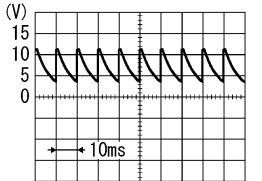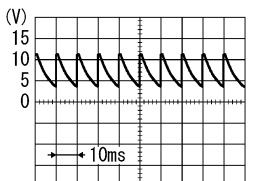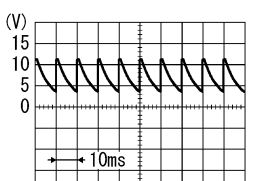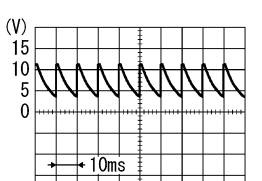
## < ECU DIAGNOSIS INFORMATION >

## [WITH INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
43 (P)	Ground	Door switch (Back) signal	Input	Back door switch	OFF (back door closed)	 <small>PKIB4960J</small> 7.0 - 8.0 V
				ON (back door open)	0 V	
44 (LG)	Ground	Rear wiper autostop switch	Input	Push-button ignition switch ON	Rear wiper stop position	Battery voltage
				Any position other than rear wiper stop position	0V	
45 (O)	Ground	Door switch (AS) signal	Input	Front door switch RH	OFF (front RH door closed)	 <small>PKIB4960J</small> 7.0 - 8.0 V
				ON (front RH door open)	0 V	
46 (BR)	Ground	Door switch (RR) signal	Input	Rear door switch RH	OFF (rear RH door closed)	 <small>PKIB4960J</small> 7.0 - 8.0 V
				ON (rear RH door open)	0 V	
47 (SB)	Ground	Door switch (DR) signal	Input	Front door switch LH	OFF (front LH door closed)	 <small>PKIB4960J</small> 7.0 - 8.0 V
				ON (front LH door open)	0 V	
48 (W)	Ground	Door switch (RL) signal	Input	Rear door switch LH	OFF (rear LH door closed)	 <small>PKIB4960J</small> 7.0 - 8.0 V
				ON (rear LH door open)	0 V	



A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

BCS

# BCM
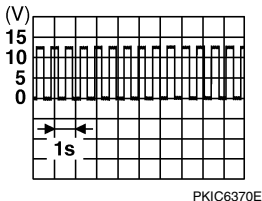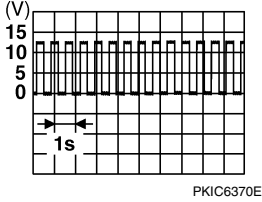
< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]





Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	-					
49 (L)	Ground	Cargo lamp control	Output	Back door is closed (cargo lamp turns OFF)		Battery voltage
				Back door is opened (cargo lamp turns ON)		0 – 1 V
50 (G)	Ground	Door unlock output (back)	Output	Back door	UNLOCK (Actuator is activated)	Battery voltage
					Actuator is not activated	0 V
51 (W)	Ground	Request sw (back door) signal	Input	Back door request switch	ON (Pressed)	0 – 1.5 V
					OFF (Not pressed)	Battery voltage
54 (R)	Ground	Rear wiper output	Output	Rear wiper	OFF (stopped)	0V
					ON (activated)	Battery voltage
55 (G)	Ground	Door unlock output (RR, RL)	Output	Rear doors	UNLOCK (Actuator is activated)	Battery voltage
					Actuator is not activated	0 V
56 (W)	Ground	Battery saver output	Output	Interior room lamp battery saver timed out		0 V
				Except when interior room lamp battery saver timed out		Battery voltage
57 (Y)	Ground	Battery power supply	Input	Push-button ignition switch OFF		Battery voltage
59 (G)	Ground	Door unlock output (AS)	Output	Front RH door	UNLOCK (Actuator is activated)	Battery voltage
					Actuator is not activated	0 V
60 (V)	Ground	Flasher output (LEFT)	Output	Push-button ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch LH	 <p style="text-align: center;">6.5 V</p>
61 (W)	Ground	Flasher output (RIGHT)	Output	Push-button ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch RH	 <p style="text-align: center;">6.5 V</p>
63 (R)	Ground	Room lamp control	Output	Interior room lamp	OFF	Battery voltage
					ON	0 – 1.0 V
65 (SB)	Ground	Door lock output	Output	All doors	LOCK (Actuator is activated)	Battery voltage
					Actuator is not activated	0 V
66 (G)	Ground	Door unlock output (DR)	Output	Front LH door	UNLOCK (Actuator is activated)	Battery voltage
					Actuator is not activated	0 V
67 (B)	Ground	Ground	Output	Push-button ignition switch ON		0 V



# BCM
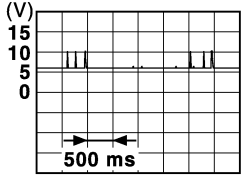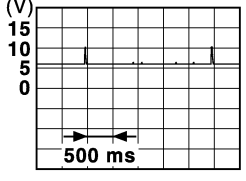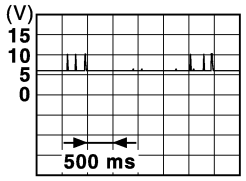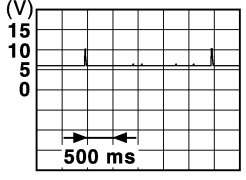
< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
		Signal name	Input/ Output		
+	-				
68 (L)	Ground	Power window power supply (IGN)	Output	Push-button ignition switch ON	Battery voltage
70 (G)	Ground	Battery power supply	Input	Push-button ignition switch OFF	Battery voltage
72 (L)	Ground	A/C indicator	Input	—	—
75 (GR)	Ground	Request sw (DR) signal	Input	Driver door request switch	ON (Pressed) 0 – 1.5 V
				OFF (Not pressed) Battery voltage	
76 (L)	Ground	Engine start sw	Input	Push-button ignition switch	START pressed 0 – 1.5 V
				Not pressed Battery voltage	
78 (P)	Ground	Door antenna (DR) +	Output	Push-button ignition switch ON Driver door request switch pressed	 <p style="text-align: right; font-size: small;">JMkia5954GB</p>
				Intelligent Key in antenna detection area (80 cm or less)	 <p style="text-align: right; font-size: small;">JMkia5955GB</p>
79 (V)	Ground	Door antenna (DR) -	Output	Push-button ignition switch ON Driver door request switch pressed	 <p style="text-align: right; font-size: small;">JMkia5954GB</p>
				Intelligent Key in antenna detection area (80 cm or less)	 <p style="text-align: right; font-size: small;">JMkia5955GB</p>




A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

BCS

# BCM
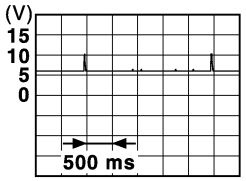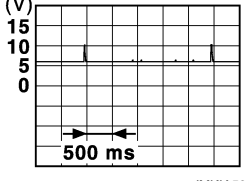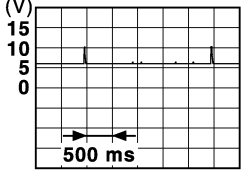
## < ECU DIAGNOSIS INFORMATION >

## [WITH INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
80 (LG)	Ground	Door antenna (AS) +	Output	Push-button ignition switch ON Passenger door request switch pressed	Intelligent Key not in antenna detection area (Approx. 2 m)
				Intelligent Key in antenna detection area (80 cm or less)	 <p style="text-align: right; font-size: small;">JMkia5955GB</p>
81 (Y)	Ground	Door antenna (AS) -	Output	Push-button ignition switch ON Passenger door request switch pressed	Intelligent Key not in antenna detection area (Approx. 2 m)
				Intelligent Key in antenna detection area (80 cm or less)	 <p style="text-align: right; font-size: small;">JMkia5955GB</p>
82 (W)	Ground	Outside key antenna (rear bumper) +	Output	Push-button ignition switch ON Trunk lid opener switch pressed	Intelligent Key not in antenna detection area (Approx. 2 m)
				Intelligent Key in antenna detection area (80 cm or less)	 <p style="text-align: right; font-size: small;">JMkia5955GB</p>


# BCM
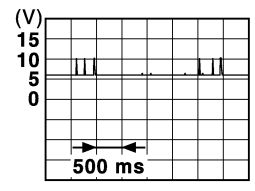
## < ECU DIAGNOSIS INFORMATION >


## [WITH INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
83 (B)	Ground	Outside key antenna (rear bumper) -	Output	When the trunk lid opener switch is operated with push-button ignition switch ON	Intelligent Key not in antenna detection area (Approx. 2 m)
				Intelligent Key in antenna detection area (80 cm or less)	
84 (P)	Ground	Inside key antenna (instrument center) +	Output	Push-button ignition switch ON	Intelligent Key not in antenna detection area (Approx. 2 m)
				Intelligent Key in antenna detection area (80 cm or less)	
85 (L)	Ground	Inside key antenna (instrument center) -	Output	Push-button ignition switch ON	Intelligent Key not in antenna detection area (Approx. 2 m)
				Intelligent Key in antenna detection area (80 cm or less)	


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P




JMKIA5954GB

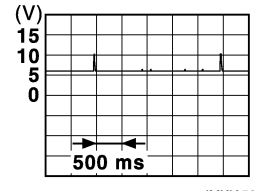


JMKIA5955GB

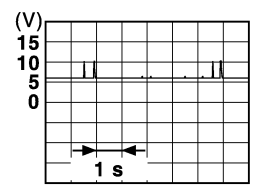


JMKIA5951GB

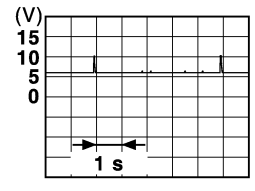

JMKIA3839GB

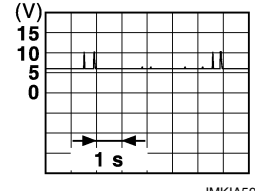

JMKIA5951GB

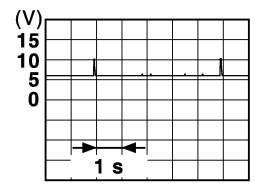







JMKIA3839GB

BCS

# BCM
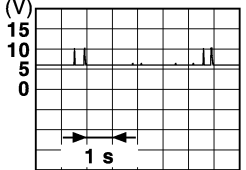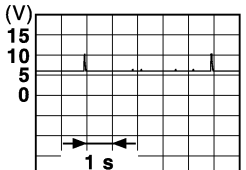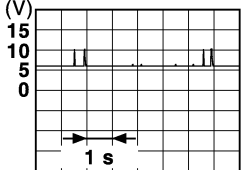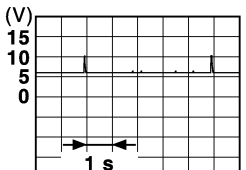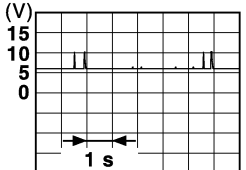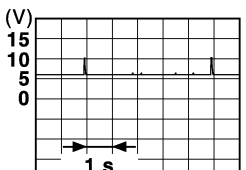
< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
86 (G)	Ground	Inside key antenna (console) +	Output	Push-button ignition switch ON	Intelligent Key not in antenna detection area (Approx. 2 m)  <p style="text-align: right; font-size: small;">JMKIA5951GB</p>
					Intelligent Key in antenna detection area (80 cm or less)  <p style="text-align: right; font-size: small;">JMKIA3839GB</p>
87 (R)	Ground	Inside key antenna (console) -	Output	Push-button ignition switch ON	Intelligent Key not in antenna detection area (Approx. 2 m)  <p style="text-align: right; font-size: small;">JMKIA5951GB</p>
					Intelligent Key in antenna detection area (80 cm or less)  <p style="text-align: right; font-size: small;">JMKIA3839GB</p>
88 (V)	Ground	Inside key antenna (trunk room) +	Output	Push-button ignition switch ON	Intelligent Key not in antenna detection area (Approx. 2 m)  <p style="text-align: right; font-size: small;">JMKIA5951GB</p>
					Intelligent Key in antenna detection area (80 cm or less)  <p style="text-align: right; font-size: small;">JMKIA3839GB</p>

# BCM

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
89 (LG)	Ground	Inside key antenna (trunk room) -	Output	Push-button ignition switch ON	
				Push-button ignition switch OFF	
90 (W)	Ground	Push-button ignition switch illumination power supply	Output	ON	Battery voltage
				OFF	0 – 1.5 V
91 (V)	Ground	ACC/ON indicator lamp	Output	OFF	Battery voltage
				ACC or ON	0 – 1.5 V
92 (B)	Ground	Push-button ignition switch illumination lamp	Output	ON	5.5 V
				OFF	0 – 1.5 V
93 (R)	Ground	Intelligent Key warning buzzer	Output	Sounding	0 – 1.5 V
				Not sounding	Battery voltage
96 (SB)	Ground	Accessory relay control	Output	OFF	0 – 0.5 V
				ACC or ON	Battery voltage
97 (R/Y)	Ground	Starter relay control	Output	Selector lever in P (Park) or N (Neutral) position	Battery voltage
				Selector lever not in P (Park) or N (Neutral) position	0 – 0.5 V
98 (O)	Ground	Ignition relay (IPDM E/R) control	Output	OFF or ACC	Battery voltage
				ON	0 – 0.5 V
99 (GR)	Ground	Ignition relay (F/B) control	Output	OFF or ACC	0 – 0.5 V
				ON	Battery voltage
100 (L)	Ground	Request sw (AS) signal	Input	ON (Pressed)	0 – 1.5 V
				OFF (Not pressed)	Battery voltage
101 (V)	Ground	Clutch interlock switch	Input	OFF (clutch pedal is not depressed)	0V
				ON (clutch pedal is depressed)	Battery voltage
102 (BR)	Ground	P/N position	Input	Selector lever in P (Park) or N (Neutral) position	Battery voltage
				Selector lever not in P (Park) or N (Neutral) position	0 – 1.5 V

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

BCS

# BCM

## < ECU DIAGNOSIS INFORMATION >

## [WITH INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	-					
103 (LG)	Ground	Front defrost switch	Input	—		—
104 (V)	Ground	CVT shift selector (park position switch) power supply	Output	Push-button ignition switch ON		9 – 16 V
105 (SB)	Ground	Stop lamp switch 2	Input	Push-button ignition switch OFF		Battery voltage
106 (Y)	Ground	Blower relay control	Output	Push-button ignition switch	OFF or ACC	0 – 0.5 V
					ON	Battery voltage

<sup>1</sup>: With CVT

<sup>2</sup>: With M/T

## Fail-safe

INFOID:000000009693584

BCM performs fail-safe control when the following DTCs are detected.

CONSULT Display	Fail-safe	Cancellation
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2195: ANTI SCANNING	Inhibit engine cranking	Ignition switch ON → OFF
B2196: DONGLE NG	Inhibit engine cranking	Erase DTC
B2198: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2557: VEHICLE SPEED	—	When the following CAN signal status (vehicle speed signal) becomes consistent <ul style="list-style-type: none"> <li>• Vehicle speed signal (ABS)</li> <li>• Vehicle speed signal (Meter)</li> </ul>
B2601: SHIFT P SIGNAL	—	500 ms after the following signal reception status becomes consistent <ul style="list-style-type: none"> <li>• Park position switch signal</li> <li>• P range signal (CAN)</li> </ul>
B2602: SHIFT P DIAG	—	5 seconds after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> <li>• Ignition switch is in the ON position</li> <li>• Park position switch signal: P position (push selector button) or except P position (9 – 16 V)</li> <li>• Vehicle speed: 4 km/h (2.5 MPH) or more</li> </ul>
B2603: SHIFT POSITION	—	500 ms after any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> <li>• Status 1 <ul style="list-style-type: none"> <li>- Ignition switch is in the ON position</li> <li>- Park position switch signal: P position (push selector button) or except P position (9 – 16 V)</li> </ul> </li> <li>• Status 2 <ul style="list-style-type: none"> <li>- Ignition switch is in the ON position</li> <li>- Park position switch signal: P position (release selector button) (0 – 1.5 V)</li> <li>- P/N position signal: P or N positions (9 – 16 V)</li> </ul> </li> </ul>

# BCM

## < ECU DIAGNOSIS INFORMATION >

## [WITH INTELLIGENT KEY SYSTEM]

CONSULT Display	Fail-safe	Cancellation
B2604: SHIFT PN DIAG CAN	—	500 ms after any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> <li>• Status 1</li> <li>- Ignition switch is in the ON position</li> <li>- P/N position signal: P or N position (9 – 16 V)</li> <li>- Shift position signal (CAN): P or N position</li> <li>• Status 2</li> <li>- Ignition switch is in the ON position</li> <li>- P/N position signal: Except P and N positions (0 – 1.5 V)</li> <li>- Shift position signal (CAN): Except P and N position</li> </ul>
B2605: SHIFT PN DIAG IPDM	—	500 ms after any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> <li>• Status 1</li> <li>- Ignition switch is in the ON position</li> <li>- P/N position signal: Except P and N positions (0 – 1.5 V)</li> <li>• Status 2</li> <li>- Ignition switch is in the ON position</li> <li>- P/N position signal: P or N position (9 – 16 V)</li> </ul>
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> <li>• Starter motor relay control signal</li> <li>• Starter relay status signal (CAN)</li> </ul>
B260F: ECM CAN COMM	Inhibit engine cranking	When any of the following conditions are fulfilled <ul style="list-style-type: none"> <li>• Ignition switch changes to ACC</li> <li>• Receives engine status signal (CAN)</li> </ul>
B26F1: IGN RELAY OFF	Inhibit engine cranking	When the following conditions are fulfilled <ul style="list-style-type: none"> <li>• Ignition switch ON signal (CAN: Transmitted from BCM): ON</li> <li>• Ignition switch ON signal (CAN: Transmitted from IPDM E/R): ON</li> </ul>
B26F2: IGN RELAY ON	Inhibit engine cranking	When the following conditions are fulfilled <ul style="list-style-type: none"> <li>• Ignition switch ON signal (CAN: Transmitted from BCM): OFF</li> <li>• Ignition switch ON signal (CAN: Transmitted from IPDM E/R): OFF</li> </ul>
B26F3: START CONT RLY ON	Inhibit engine cranking	When the following conditions are fulfilled <ul style="list-style-type: none"> <li>• Starter control relay signal (CAN: Transmitted from BCM): OFF</li> <li>• Starter control relay signal (CAN: Transmitted from IPDM E/R): OFF</li> </ul>
B26F4: START CONT RLY OFF	Inhibit engine cranking	When the following conditions are fulfilled <ul style="list-style-type: none"> <li>• Starter control relay signal (CAN: Transmitted from BCM): ON</li> <li>• Starter control relay signal (CAN: Transmitted from IPDM E/R): ON</li> </ul>
B26F7: BCM	Inhibit engine cranking by Intelligent Key system	When room antenna and luggage room antenna functions normally
U0415: VDC CAN CIR2	—	When vehicle speed signal (Meter) (CAN) is received normally

## DTC Inspection Priority Chart

INFOID:000000009693585

BCS

If more than one DTC is displayed at the same time, perform inspections based on the following priority chart.

Priority	DTC
1	B2562: LOW VOLTAGE
2	<ul style="list-style-type: none"> <li>• U1000: CAN COMM CIRCUIT</li> <li>• U1010: CONTROL UNIT (CAN)</li> </ul>
3	<ul style="list-style-type: none"> <li>• B2192: ID DISCORD BCM-ECM</li> <li>• B2193: CHAIN OF BCM-ECM</li> <li>• B2195: ANTI SCANNING</li> <li>• B2196: DONGLE NG</li> <li>• B2198: NATS ANTENNA AMP</li> </ul>

Priority	DTC
4	<ul style="list-style-type: none"> <li>• B2555: STOP LAMP CIRCUIT</li> <li>• B2556: ENG START SW</li> <li>• B2557: VEHICLE SPEED</li> <li>• B2562: LOW VOLTAGE</li> <li>• B2601: SHIFT P SIGNAL</li> <li>• B2602: SHIFT P DIAG</li> <li>• B2603: SHIFT POSITION</li> <li>• B2604: SHIFT PN DIAG CAN</li> <li>• B2605: SHIFT PN DIAG IPDM</li> <li>• B2608: STARTER RELAY</li> <li>• B260F: ECM CAN COMM</li> <li>• B2614: ACC RELAY REQ FB</li> <li>• B2615: IGN RELAY3 REQ FB</li> <li>• B2616: IGN RELAY2 REQ FB</li> <li>• B2618: IGN RELAY1 REQ FB</li> <li>• B261A: ENGINE SW</li> <li>• B261F: ASCD CANCEL SW</li> <li>• B2620: NEUTRAL SW</li> <li>• B26E8: CLUTCH SW</li> <li>• B26F1: IGN RELAY OFF</li> <li>• B26F2: IGN RELAY ON</li> <li>• B26F3: START CONT RLY ON</li> <li>• B26F4: START CONT RLY OFF</li> <li>• B26F6: BCM</li> <li>• B26F7: BCM</li> <li>• B26FB: CLUTCH SWITCH</li> <li>• B26FC: KEY REGISTRATION</li> <li>• U0415: VDC CAN CIR2</li> </ul>
5	<ul style="list-style-type: none"> <li>• B2621: INSIDE ANTENNA 1</li> <li>• B2622: INSIDE ANTENNA 2</li> <li>• B2623: INSIDE ANTENNA 3</li> </ul>
6	<ul style="list-style-type: none"> <li>• B2626: OUTSIDE 1 ANTENNA</li> <li>• B2627: OUTSIDE 2 ANTENNA</li> <li>• B2628: OUTSIDE 3 ANTENNA</li> </ul>
7	<ul style="list-style-type: none"> <li>• C1704: LOW PRESSURE FL</li> <li>• C1705: LOW PRESSURE FR</li> <li>• C1706: LOW PRESSURE RR</li> <li>• C1707: LOW PRESSURE RL</li> <li>• C1708: [NO DATA] FL</li> <li>• C1709: [NO DATA] FR</li> <li>• C1710: [NO DATA] RR</li> <li>• C1711: [NO DATA] RL</li> <li>• C1716: [PRESS DATA ERR] FL</li> <li>• C1717: [PRESS DATA ERR] FR</li> <li>• C1718: [PRESS DATA ERR] RR</li> <li>• C1719: [PRESS DATA ERR] RL</li> <li>• C1729: VHCL SPEED SIG ERR</li> </ul>

DTC Index

INFOID:000000009693586

**NOTE:**

The details of time display are as follows.

- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.

IGN counter is displayed on Freeze Frame Data.



# BCM

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page	
No DTC is detected. further testing may be required.	—	—	—	—	—	A
U1000: CAN COMM CIRCUIT	—	—	—	—	<a href="#">BCS-60</a>	B
U1010: CONTROL UNIT (CAN)	—	—	—	—	<a href="#">BCS-61</a>	C
U0415: VDC CAN CIR2	x	—	x	—	<a href="#">BCS-62</a>	D
B2192: ID DISCORD BCM-ECM	x	—	—	—	<a href="#">SEC-68</a>	E
B2193: CHAIN OF BCM-ECM	x	—	—	—	<a href="#">SEC-69</a>	F
B2195: ANTI SCANNING	x	—	—	—	<a href="#">SEC-70</a>	G
B2196: DONGLE NG	x	—	—	—	<a href="#">SEC-71</a>	H
B2198: NATS ANTENNA AMP	x	—	—	—	<a href="#">SEC-73</a>	I
B2555: STOP LAMP CIRCUIT	—	x	x	—	<a href="#">SEC-76</a>	J
B2556: ENG START SW	—	x	x	—	<a href="#">SEC-79</a>	K
B2557: VEHICLE SPEED	x	x	x	—	<a href="#">SEC-81</a>	L
B2562: LOW VOLTAGE	—	x	—	—	<a href="#">BCS-63</a>	A
B2601: SHIFT P SIGNAL	x	x	x	—	<a href="#">SEC-82</a>	B
B2602: SHIFT P DIAG	x	x	x	—	<a href="#">SEC-84</a>	C
B2603: SHIFT POSITION	x	x	x	—	<a href="#">SEC-87</a>	D
B2604: SHIFT PN DIAG CAN	x	x	x	—	<a href="#">SEC-91</a>	E
B2605: SHIFT PN DIAG IPDM	x	x	x	—	<a href="#">SEC-94</a>	F
B2608: STARTER RELAY	x	x	x	—	<a href="#">SEC-96</a>	G
B260F: ECM CAN COMM	x	x	x	—	<a href="#">SEC-98</a>	H
B2614: ACC RELAY REQ FB	—	x	x	—	<a href="#">PCS-84</a>	I
B2615: IGN RELAY3 REQ FB	—	x	x	—	<a href="#">PCS-86</a>	J
B2616: IGN RELAY2 REQ FB	—	x	x	—	<a href="#">PCS-88</a>	K
B2618: IGN RELAY1 REQ FB	—	x	x	—	<a href="#">PCS-90</a>	L
B261A: ENGINE SW	—	x	x	—	<a href="#">PCS-91</a>	A
B261F: ASCD CANCEL SW	—	x	x	—	<a href="#">SEC-99</a>	B
B2620: NEUTRAL SW	—	x	x	—	<a href="#">SEC-102</a>	C
B2621: INSIDE ANTENNA 1	—	x	—	—	<a href="#">DLK-64</a>	BCS
B2622: INSIDE ANTENNA 2	—	x	—	—	<a href="#">DLK-66</a>	D
B2623: INSIDE ANTENNA 3	—	x	—	—	<a href="#">DLK-68</a>	E
B2626: OUTSIDE 1 ANTENNA	—	x	—	—	<a href="#">DLK-70</a>	N
B2627: OUTSIDE 2 ANTENNA	—	x	—	—	<a href="#">DLK-72</a>	O
B2628: OUTSIDE 3 ANTENNA	—	x	—	—	<a href="#">DLK-74</a>	P
B26E8: CLUTCH SW	x	x	x	—	<a href="#">SEC-105</a>	A
B26F1: IGN RELAY OFF	x	x	x	—	<a href="#">PCS-93</a>	B
B26F2: IGN RELAY ON	x	x	x	—	<a href="#">PCS-94</a>	C
B26F3: START CONT RLY ON	x	x	x	—	<a href="#">SEC-108</a>	D
B26F4: START CONT RLY OFF	x	x	x	—	<a href="#">SEC-109</a>	E
B26F6: BCM	—	x	x	—	<a href="#">PCS-96</a>	F
B26F7: BCM	x	x	x	—	<a href="#">SEC-110</a>	G
B26FB: CLUTCH SWITCH	—	x	x	—	<a href="#">SEC-111</a>	H

# BCM

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
B26FC: KEY REGISTRATION	—	×	×	—	<a href="#">SEC-112</a>
C1704: LOW PRESSURE FL	—	—	—	×	<a href="#">WT-25</a>
C1705: LOW PRESSURE FR	—	—	—	×	
C1706: LOW PRESSURE RR	—	—	—	×	
C1707: LOW PRESSURE RL	—	—	—	×	
C1708: [NO DATA] FL	—	—	—	×	<a href="#">WT-26</a>
C1709: [NO DATA] FR	—	—	—	×	
C1710: [NO DATA] RR	—	—	—	×	
C1711: [NO DATA] RL	—	—	—	×	
C1716: [PRESS DATA ERR] FL	—	—	—	×	<a href="#">WT-28</a>
C1717: [PRESS DATA ERR] FR	—	—	—	×	
C1718: [PRESS DATA ERR] RR	—	—	—	×	
C1719: [PRESS DATA ERR] RL	—	—	—	×	
C1729: VHCL SPEED SIG ERR	—	—	—	×	<a href="#">WT-29</a>

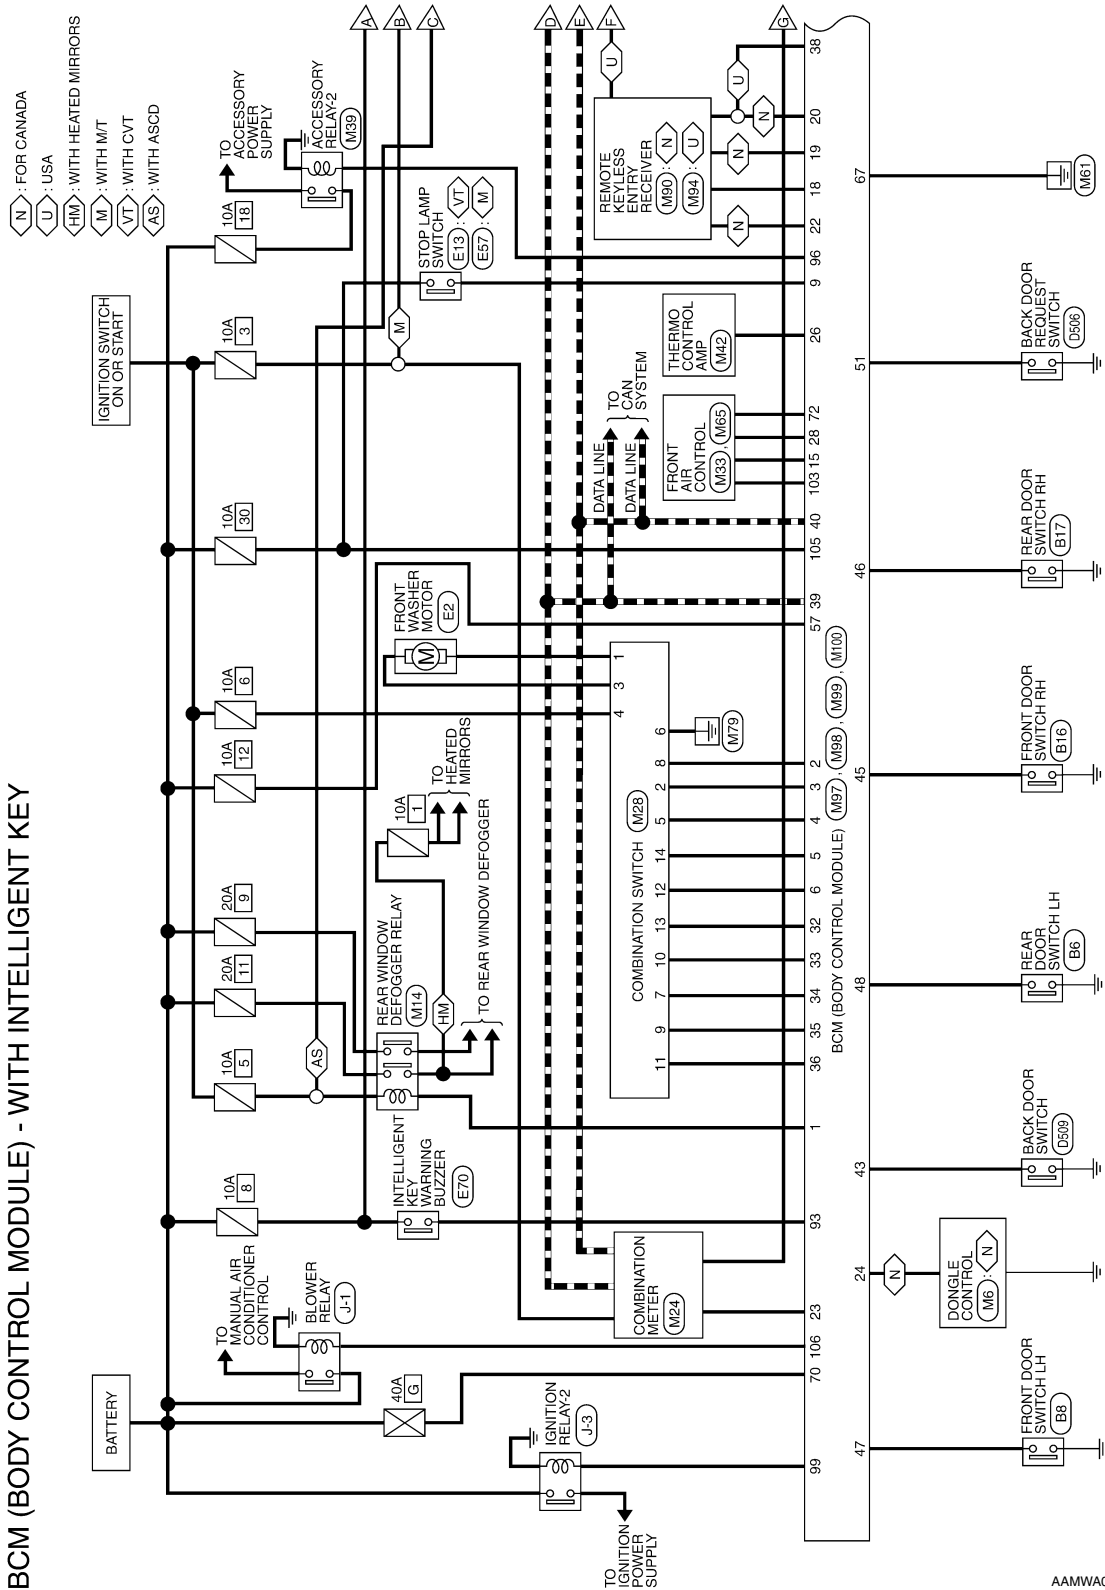
# WIRING DIAGRAM

## BCM

### Wiring Diagram

INFOID:000000009693587

BCM (BODY CONTROL MODULE) - WITH INTELLIGENT KEY



A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


BCS

AAMWA0792GB


# BCM
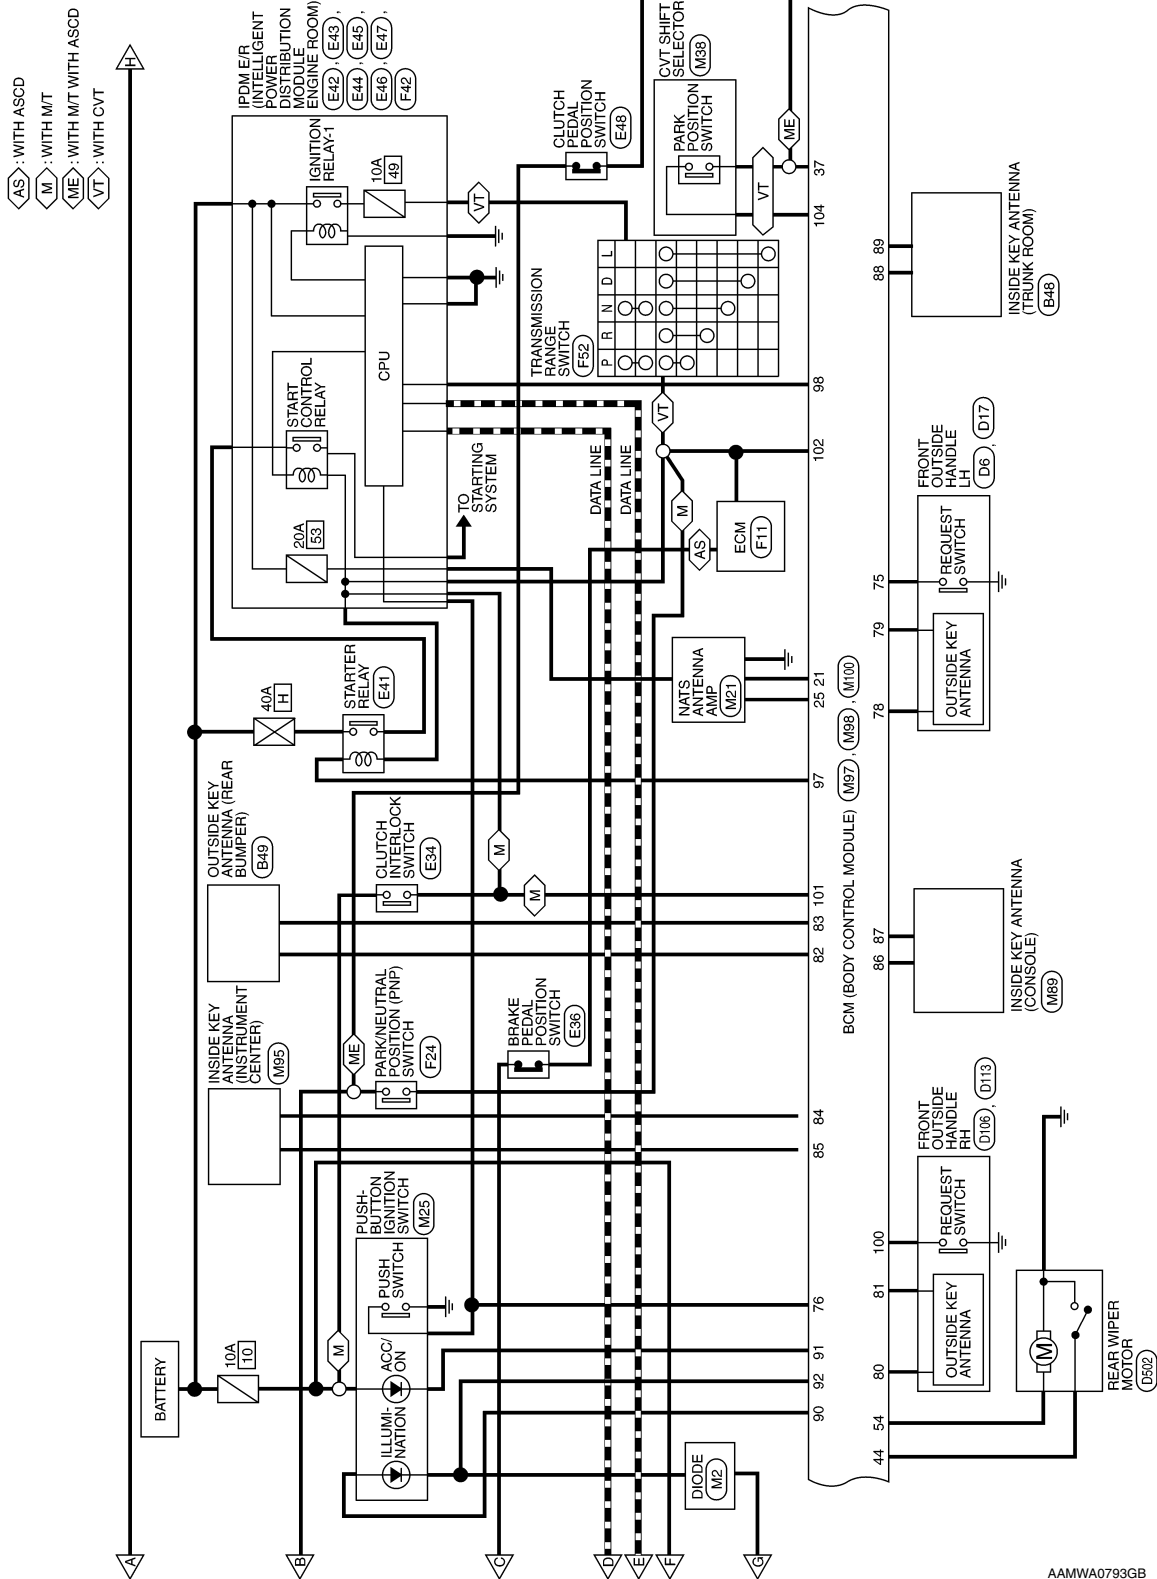
< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]



AAMWA0793GB

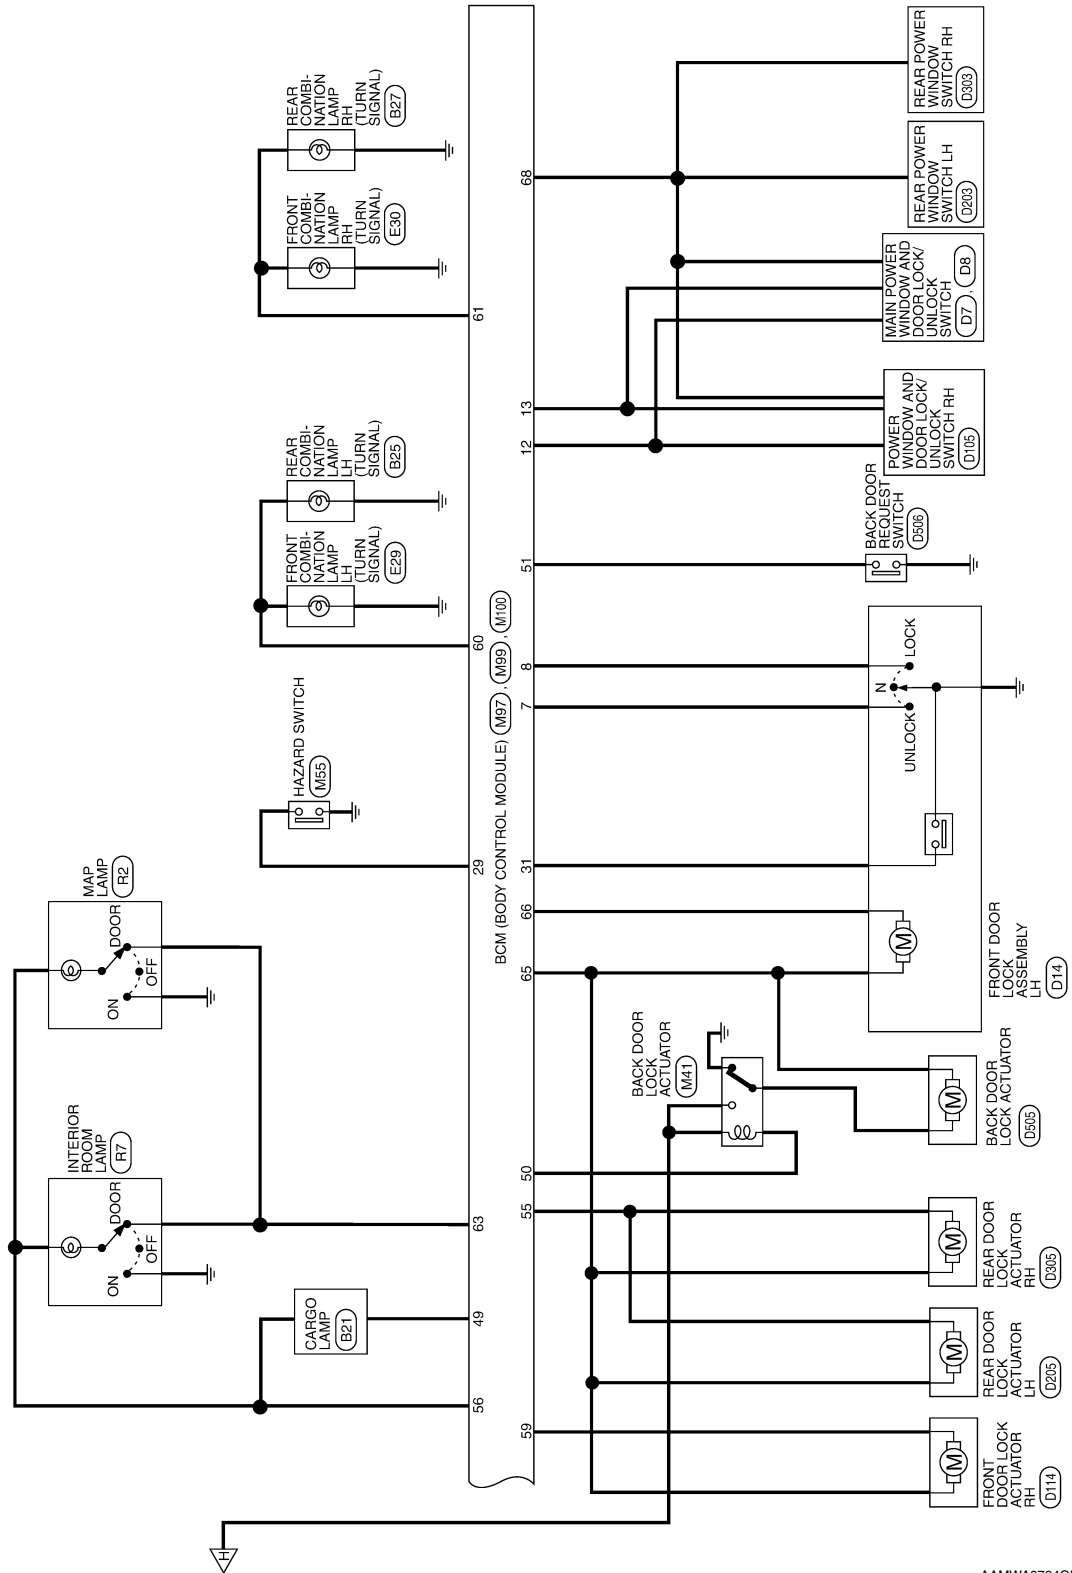


AAMWA0794GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

BCS

BCM (BODY CONTROL MODULE) CONNECTORS - WITH INTELLIGENT KEY SYSTEM


Connector No.	M97
Connector Name	BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY SYSTEM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	GR	REAR DEFOGGER RELAY OUTPUT
2	BR	COMBINATION SW INPUT 5
3	Y	COMBINATION SW INPUT 4
4	L	COMBINATION SW INPUT 3
5	G	COMBINATION SW INPUT 2
6	R	COMBINATION SW INPUT 1
7	W	KEY CYLINDER UNLOCK SW
8	GR	KEY CYLINDER LOCK SW
9	LG	BRAKE SW1
10	-	-
11	-	-
12	GR	CENTRAL DOOR LOCK SW
13	BR	CENTRAL DOOR UNLOCK SW
14	-	-
15	G	REAR DEFOGGER SW
16	-	-
17	-	-

Terminal No.	Color of Wire	Signal Name
18	V	KEYLESS TUNER AUTO LIGHT SENSOR GND
19	LG	KEYLESS TUNER POWER SUPPLY
20	G	KEYLESS TUNER SIGNAL
21	P	IMMOBILIZER ONE WAY COMMUNICATION (CLOCK)
22	W	KEYLESS TUNER RSSI
23	RY	SECURITY INDICATOR OUTPUT
24	SB	DONGLE LINK (SERIAL)
25	LG	IMMOBILIZER TWO WAY COMMUNICATION
26	O	THERMO AMP
27	W	AIR CON SW
28	SB	BLOWER FAN SW
29	O	HAZARD SW
30	-	-
31	Y	DOOR LOCK STATUS SW (DR)
32	P	COMBINATION SW OUTPUT 5
33	V	COMBINATION SW OUTPUT 4
34	W	COMBINATION SW OUTPUT 3
35	GR	COMBINATION SW OUTPUT 2
36	LG	COMBINATION SW OUTPUT 1
37	R	SHIFT P POSITION, PARKING POSITION SW
37	GR	CLUTCH PEDAL POSITION SWITCH
38	G	INTELLIGENT TUNER
39	L	CAN-H
40	P	CAN-L

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	O	-
2	Y	-
3	SB	-
4	LW	-
5	L	-
6	B	-
7	W	-
8	BR	-
9	GR	-
10	V	-
11	LG	-
12	R	-
13	P	-
14	G	-

AAMIA1727GB

Connector No.	M99
Connector Name	BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY SYSTEM)
Connector Color	WHITE

56	57	58	59	60	61	62	63	64
65	66	67	68	69	70			



Terminal No.	Color of Wire	Signal Name
56	W	BATTERY SAVER OUTPUT
57	Y	BATTERY (FUSE)
59	G	DOOR UNLOCK OUTPUT (AS)
60	V	FLASHER OUTPUT (LEFT)
61	W	FLASHER OUTPUT (RIGHT)
62	-	-
63	R	ROOM LAMP OUTPUT
64	-	-
65	SB	DOOR LOCK OUTPUT
66	G	DOOR UNLOCK COMMON (DR)
67	B	GND
68	L	POWER WINDOW POWER SUPPLY (IGN)
69	-	-
70	G	BATTERY (F/L)

Terminal No.	Color of Wire	Signal Name
92	B	LOW SIDE ENGINE START SW ILLUMINATION LED OUTPUT
93	R	SMART KEYLESS BUZZER OUTPUT
94	-	-
95	-	-
96	SB	ACC RELAY OUTPUT
97	R/Y	STARTER RELAY OUTPUT
98	O	IGN RELAY OUTPUT1 (USM)
99	GR	IGN RELAY OUTPUT2 (ELEC)
100	L	REQUEST SW (AS)
101	V	CLUTCH SW
102	BR	SHIFT N, P
103	LG	FR DEFROST SW
104	V	AT DEVICE OUTPUT
105	SB	BRAKE SW2
106	Y	BLOWER FAN MOTOR RELAY OUTPUT
107	-	-
108	-	-
109	-	-
110	-	-

Connector No.	M98
Connector Name	BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY SYSTEM)
Connector Color	WHITE



71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90
91	92	93	94	95	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110

Terminal No.	Color of Wire	Signal Name
71	-	-
72	L	AIRCON INDICATOR OUTPUT
73	-	-
74	-	-
75	GR	REQUEST SW (DR)
76	L	ENGINE START SW
77	-	-
78	P	DOOR ANTENNA (DR) +
79	V	DOOR ANTENNA (DR) -
80	LG	DOOR ANTENNA (AS) +
81	Y	DOOR ANTENNA (AS) -
82	W	BACK DOOR ANTENNA +
83	B	BACK DOOR ANTENNA -
84	P	ROOM ANTENNA 1 +
85	L	ROOM ANTENNA 1 -
86	G	ROOM ANTENNA 2 +
87	R	ROOM ANTENNA 2 -
88	V	ROOM ANTENNA 3 +
89	LG	ROOM ANTENNA 3 -
90	W	HIGH SIDE ENGINE START SW ILLUMINATION LED
91	V	POWER POSITION LED (LOCK POSITION LED)

AAMIA1728GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P



Connector No.	M100
Connector Name	BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY SYSTEM)
Connector Color	BLACK

41	42	43	44	45	46	47	48	49
50	51	52	53	54	55			



Terminal No.	Color of Wire	Signal Name
41	-	-
42	-	-
43	P	DOOR SWITCH BACK
44	LG	REAR WIPE AUTO STOP SW
45	O	DOOR SW (AS)
46	BR	DOOR SW (RR)
47	SB	DOOR SW (DR)
48	W	DOOR SW (RL)
49	L	LUGGAGE LAMP OUTPUT
50	G	DOOR UNLOCK OUTPUT (BACK)
51	W	REQUEST SW (TRUNK/BACK DOOR)
52	-	-
53	-	-
54	R	REAR WIPER MOTOR OUTPUT
55	G	DOOR UNLOCK OUTPUT (RR,RL)

AAMIA1729GB



# ADDITIONAL SERVICE WHEN REPLACING BCM

< BASIC INSPECTION >

[WITH INTELLIGENT KEY SYSTEM]

## BASIC INSPECTION

### ADDITIONAL SERVICE WHEN REPLACING BCM

#### Description

INFOID:000000008969261

#### BEFORE REPLACEMENT

When replacing BCM, save or print current vehicle specification with CONSULT configuration before replacement.

#### NOTE:

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual selection" after replacing BCM.

#### AFTER REPLACEMENT

#### CAUTION:

When replacing BCM, always perform "WRITE CONFIGURATION" with CONSULT. Or not doing so, BCM control function does not operate normally.

- Complete the procedure of "WRITE CONFIGURATION" in order.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.
- If you set incorrect "WRITE CONFIGURATION", incidents might occur.

#### NOTE:

When replacing BCM, perform the system initialization (NATS) (if equipped).

#### Work Procedure

INFOID:000000008969262

#### 1. SAVING VEHICLE SPECIFICATION

##### ⓂCONSULT Configuration

Perform "READ CONFIGURATION" to save or print current vehicle specification. Refer to [BCS-58. "Description"](#).

#### NOTE:

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual selection" after replacing BCM.

>> GO TO 2.

#### 2. REPLACE BCM

Replace BCM. Refer to [BCS-70. "Removal and Installation"](#).

>> GO TO 3.

#### 3. WRITING VEHICLE SPECIFICATION

##### ⓂCONSULT Configuration

Perform "WRITE CONFIGURATION - Config file" or "WRITE CONFIGURATION - Manual selection" to write vehicle specification. Refer to [BCS-58. "Work Procedure"](#).

>> GO TO 4.

#### 4. INITIALIZE BCM (NATS) (IF EQUIPPED)

Perform BCM initialization. (NATS)

>> WORK END

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

BCS

## CONFIGURATION (BCM)

### Description

INFOID:000000008969263

Vehicle specification needs to be written with CONSULT because it is not written after replacing BCM. Configuration has three functions as follows.

Function	Description
READ CONFIGURATION	<ul style="list-style-type: none"> <li>• Reads the vehicle configuration of current BCM.</li> <li>• Saves the read vehicle configuration.</li> </ul>
WRITE CONFIGURATION - Manual selection	Writes the vehicle configuration with manual selection.
WRITE CONFIGURATION - Config file	Writes the vehicle configuration with saved data.

**NOTE:**

Manual setting item: Items which need selection by vehicle specifications

Automatic setting item: Items which are written in automatically (Setting can not be changed)

For some models and specifications, the automatic setting item may not be displayed.

**CAUTION:**

**When replacing BCM, always perform “WRITE CONFIGURATION” with CONSULT. Or not doing so, BCM control function does not operate normally.**

- Complete the procedure of “WRITE CONFIGURATION” in order.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.
- Never perform “WRITE CONFIGURATION” except for new BCM.
- If you set incorrect “WRITE CONFIGURATION”, incidents might occur.

### Work Procedure

INFOID:000000008969264

#### 1. WRITING MODE SELECTION

ⓑCONSULT Configuration  
Select “CONFIGURATION” of BCM.

When writing saved data>>GO TO 2.  
When writing manually>>GO TO 3.

#### 2. PERFORM “WRITE CONFIGURATION - CONFIG FILE”

ⓑCONSULT Configuration  
Perform “WRITE CONFIGURATION - Config file”.

>> WORK END

#### 3. PERFORM “WRITE CONFIGURATION - MANUAL SELECTION”

- ⓑCONSULT Configuration
1. Select "WRITE CONFIGURATION - Manual selection".
  2. Identify the correct model and configuration list. Refer to [BCS-59, "Configuration List"](#).
  3. Confirm and/or change setting value for each item.

**CAUTION:**

**Thoroughly read and understand the vehicle specification. ECU control may not operate normally if the setting is not correct.**

**NOTE:**

If items are not displayed, touch “SETTING”. Refer to [BCS-59, "Configuration List"](#) for written items and setting value.

4. Select "SETTING".

**CAUTION:**

**Make sure to select “SETTING” even if the indicated configuration of brand new BCM is same as the desirable configuration. If not, configuration which is set automatically by selecting vehicle model can not be memorized.**

5. When "COMMAND FINISHED", select "END".

# CONFIGURATION (BCM)

[WITH INTELLIGENT KEY SYSTEM]

< BASIC INSPECTION >

>> GO TO 4.

## 4. OPERATION CHECK

Confirm that each function controlled by BCM operates normally.

>> WORK END

### Configuration List

INFOID:000000008969265

#### **CAUTION:**

Thoroughly read and understand the vehicle specification. ECU control may not operate normally if the setting is not correct.

SETTING ITEM		NOTE
Items	Setting value	
I-KEY SYS FREQUENCY TYPE	MODE1	—
TRANSIT MODE	WITH	—
STOP/START SYSTEM	MODE1	—
AUTO LIGHT	WITH ⇔ WITHOUT	—
BLOWE FAN SIG	MODE1 ⇔ MODE2	<ul style="list-style-type: none"><li>• MODE1: With automatic air conditioner</li><li>• MODE2: With manual air conditioner</li></ul>

⇔: Items which confirm vehicle specifications

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

BCS

N  
O  
P

# U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## DTC/CIRCUIT DIAGNOSIS

### U1000 CAN COMM CIRCUIT

#### Description

INFOID:000000009693593

Refer to [LAN-24, "CAN COMMUNICATION SYSTEM : System Description"](#).

#### DTC Logic

INFOID:000000009693594

#### DTC DETECTION LOGIC

##### NOTE:

U1000 can be set if a module harness was disconnected and reconnected, perhaps during a repair. Confirm that there are actual CAN diagnostic symptoms and a present DTC by performing the Self Diagnostic Result procedure.

CONSULT Display	DTC Detection Condition	Possible Cause
CAN COMM CIRCUIT [U1000]	When any listed module cannot communicate with CAN communication signal continuously for 2 seconds or more with ignition switch ON	In CAN communication system, any item (or items) of the following listed below is malfunctioning. <ul style="list-style-type: none"><li>• Transmission</li><li>• Receiving (ECM)</li><li>• Receiving (VDC/TCS/ABS)</li><li>• Receiving (METER/M&amp;A)</li><li>• Receiving (TCM)</li><li>• Receiving (IPDM E/R)</li></ul>

#### Diagnosis Procedure

INFOID:000000009693595

### 1. PERFORM SELF DIAGNOSTIC RESULT

1. Turn ignition switch ON and wait for 2 second or more.
2. Check "SELF- DIAG RESULTS".

Is "CAN COMM CIRCUIT" displayed?

- YES >> Perform CAN Diagnosis as described in DIAGNOSIS section of CONSULT Operation manual.  
NO >> Refer to [GI-41, "Intermittent Incident"](#).

# U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## U1010 CONTROL UNIT (CAN)

### DTC Logic

INFOID:000000009693596

### DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
CONTROL UNIT (CAN) [U1010]	BCM detected internal CAN communication circuit malfunction.	BCM

### Diagnosis Procedure

INFOID:000000009693597

#### 1. REPLACE BCM

When DTC "U1010" is detected, replace BCM.

>> Replace BCM. Refer to [BCS-70. "Removal and Installation"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

BCS

N  
O  
P

# U0415 VEHICLE SPEED

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## U0415 VEHICLE SPEED

### DTC Logic

INFOID:000000009693598

#### DTC DETECTION LOGIC

##### NOTE:

- If DTC U0415 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-60, "DTC Logic"](#).
- If DTC U0415 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-61, "DTC Logic"](#).

CONSULT Display	DTC Detection Condition	Probable Cause
VDC CAN CIR2 [U0415]	When the vehicle speed signal received from the ABS actuator and electric unit (control unit) remains abnormal for 2 seconds or more.	<ul style="list-style-type: none"><li>• ABS system</li><li>• Combination meter system</li><li>• CAN bus harness</li></ul>

#### DTC CONFIRMATION PROCEDURE

##### 1. DTC CONFIRMATION

1. Erase the DTC.
2. Turn ignition switch OFF.
3. Perform Self Diagnostic Result of BCM with CONSULT, after the ignition switch has been turned ON for 2 seconds or more.

##### Is any DTC detected?

- YES >> Refer to [BCS-48, "DTC Index"](#).  
NO >> Inspection End.

#### Diagnosis Procedure

INFOID:000000009693599

##### 1. ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF DIAGNOSTIC RESULT

Perform Self Diagnostic Result of ABS with CONSULT. Refer to [BRC-30, "CONSULT Function \(ABS\)"](#).

##### Is any DTC detected?

- YES >> Perform the trouble diagnosis related to the detected DTC. Refer to [BRC-41, "DTC Index"](#).  
NO >> GO TO 2.

##### 2. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Check ABS actuator and electric unit (control unit) power and ground. Refer to [BRC-61, "Diagnosis Procedure"](#).

##### Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair or replace harness or connectors.

##### 3. COMBINATION METER SELF DIAGNOSTIC RESULT

Perform Self Diagnostic Result of METER M&A with CONSULT. Refer to [MWI-15, "CONSULT Function"](#).

##### Is any DTC detected?

- YES >> Perform the trouble diagnosis related to the detected DTC. Refer to [MWI-21, "DTC Index"](#).  
NO >> Refer to [GI-41, "Intermittent Incident"](#).

# B2562 LOW VOLTAGE

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## B2562 LOW VOLTAGE

### DTC Logic

INFOID:000000009693600

### DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
LOW VOLTAGE [B2562]	When the power supply voltage to BCM remains less than 8.8 V for 120 seconds or more	<ul style="list-style-type: none"><li>• Harness or connector (power supply circuit)</li><li>• Vehicle battery</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. DTC CONFIRMATION

1. Erase DTC.
2. Turn ignition switch OFF.
3. Perform the Self Diagnostic Result of BCM with CONSULT, after the ignition switch has been turned ON for 120 seconds or more.

#### Is any DTC detected?

- YES >> Refer to [BCS-63, "Diagnosis Procedure"](#).  
NO >> Inspection End.

### Diagnosis Procedure

INFOID:000000009693601

#### 1. CHECK BATTERY VOLTAGE

Check battery voltage.

#### Is battery voltage less than 8.8V?

- YES >> Charge battery and retest. Refer to [PG-61, "Work Flow"](#).  
NO >> GO TO 2.

#### 2. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check BCM power supply and ground circuit. Refer to [BCS-64, "Diagnosis Procedure"](#).

#### Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair or replace harness or connectors.

#### 3. BCM SELF DIAGNOSTIC RESULT

Perform Self Diagnostic Result of BCM with CONSULT. Refer to [BCS-23, "BCM : CONSULT Function \(BCM - BCM\)"](#).

#### Is DTC B2562 CRNT?

- YES >> Replace BCM. Refer to [BCS-70, "Removal and Installation"](#).  
NO >> Refer to [GI-41, "Intermittent Incident"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

BCS

# POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## POWER SUPPLY AND GROUND CIRCUIT

### Diagnosis Procedure

INFOID:000000009693602

Regarding Wiring Diagram information, refer to [BCS-51. "Wiring Diagram"](#).

### 1. CHECK FUSES AND FUSIBLE LINK

Check that the following fuses and fusible link are not blown.

Terminal No.	Signal name	Fuses and fusible link No.
57	Battery power supply	12 (10A)
70		G (40A)

#### Is the fuse blown?

- YES >> Replace the blown fuse or fusible link after repairing the affected circuit.  
NO >> GO TO 2.

### 2. CHECK POWER SUPPLY CIRCUIT

1. Disconnect BCM connector M99.
2. Check voltage between BCM connector M99 and ground.

BCM		Ground	Voltage
Connector	Terminal		
M99	57	—	Battery voltage
	70		

#### Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair harness or connector.

### 3. CHECK GROUND CIRCUIT

Check continuity between BCM connector M99 and ground.

BCM		Ground	Continuity
Connector	Terminal		
M99	67	—	Yes

#### Is the inspection result normal?

- YES >> Inspection End.  
NO >> Repair harness or connector.



# COMBINATION SWITCH INPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## COMBINATION SWITCH INPUT CIRCUIT

### Diagnosis Procedure

INFOID:000000009693603

Regarding Wiring Diagram information, refer to [BCS-51, "Wiring Diagram"](#).

### 1. CHECK INPUT 1 - 5 CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect BCM and combination switch connectors.
3. Check continuity between BCM connector and combination switch connector.

Combination switch signal	BCM		Combination switch		Continuity
	Connector	Terminal	Connector	Terminal	
INPUT 1	M97	36	M28	11	Yes
INPUT 2		35		9	
INPUT 3		34		7	
INPUT 4		33		10	
INPUT 5		32		13	

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair harness or connectors.

### 2. CHECK INPUT 1 - 5 CIRCUIT FOR SHORT

Check for continuity between BCM connector and ground.

Combination switch signal	BCM		Ground	Continuity
	Connector	Terminal		
INPUT 1	M97	36		No
INPUT 2		35		
INPUT 3		34		
INPUT 4		33		
INPUT 5		32		

Is the inspection result normal?

- YES >> Repair harness or connectors.  
NO >> GO TO 3.

### 3. CHECK BCM OUTPUT VOLTAGE

1. Connect BCM connector.
2. Check voltage between BCM connector and ground.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

BCS

# COMBINATION SWITCH INPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

BCM signal	Terminals		Voltage	
	(+)			(-)
	BCM			Ground
	Connector	Terminal		
OUTPUT 1	M97	36	Refer to <a href="#">BCS-28, "Reference Value"</a> .	
OUTPUT 2		35		
OUTPUT 3		34		
OUTPUT 4		33		
OUTPUT 5		32		

Is the inspection result normal?

YES >> Replace combination switch.

NO >> Replace BCM. Refer to [BCS-70, "Removal and Installation"](#).

# COMBINATION SWITCH OUTPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## COMBINATION SWITCH OUTPUT CIRCUIT

### Diagnosis Procedure

INFOID:000000009693604

Regarding Wiring Diagram information, refer to [BCS-51, "Wiring Diagram"](#).

### 1. CHECK OUTPUT 1 - 5 CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect BCM and combination switch connectors.
3. Check continuity between BCM connector and combination switch connector.

Combination switch signal	BCM		Combination switch		Continuity
	Connector	Terminal	Connector	Terminal	
OUTPUT 1	M97	6	M28	12	Yes
OUTPUT 2		5		14	
OUTPUT 3		4		5	
OUTPUT 4		3		2	
OUTPUT 5		2		8	

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair harness or connectors.

### 2. CHECK OUTPUT 1 - 5 CIRCUIT FOR SHORT

Check for continuity between BCM connector and ground.

Combination switch signal	BCM		Ground	Continuity
	Connector	Terminal		
OUTPUT 1	M97	6		No
OUTPUT 2		5		
OUTPUT 3		4		
OUTPUT 4		3		
OUTPUT 5		2		

Is the inspection result normal?

- YES >> Repair harness or connectors.  
NO >> GO TO 3.

### 3. CHECK BCM INPUT SIGNAL

1. Connect BCM and combination switch connectors.
2. Turn ON any switch in the system that is malfunctioning.
3. Check voltage between BCM connector and ground.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

BCS

# COMBINATION SWITCH OUTPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

BCM signal	Terminals		Voltage	
	(+)			(-)
	BCM			
	Connector	Terminal		
INPUT 1	M97	6	Ground	
INPUT 2		5		
INPUT 3		4		
INPUT 4		3		
INPUT 5		2		

Is the inspection result normal?

- Yes >> Replace BCM. Refer to [BCS-70. "Removal and Installation"](#).
- No >> Replace combination switch.

# COMBINATION SWITCH SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## SYMPTOM DIAGNOSIS

### COMBINATION SWITCH SYSTEM SYMPTOMS

#### Symptom Table

INFOID:000000009693605

1. Perform the data monitor of CONSULT to check for any malfunctioning item.
2. Check the malfunction combinations.

Malfunction item: x

Malfunction combination	Data monitor item															
	FR WIPER HI	FR WIPER LOW	FR WASHER SW	FR WIPER INT	INT VOLUME	RR WIPER ON	RR WIPER INT	RR WASHER SW	TURN SIGNAL R	TURN SIGNAL L	TAIL LAMP SW	HI BEAM SW	HEAD LAMP SW 1	HEAD LAMP SW 2	PASSING SW	FR FOG SW
A		x	x						x	x						
B	x			x									x		x	
C					x			x				x		x		
D					x		x				x					
E					x	x										x
F	x				x		x									
G			x		x	x		x								
H		x		x												
I										x				x	x	x
J									x		x	x	x			
K	All Items															
L	If only one item is detected or the item is not applicable to the combinations A to K															

3. Identify the malfunctioning part from the agreed combination and repair or replace the part.

Malfunction combination	Malfunctioning part	Repair or replace
A	Combination switch INPUT 1 circuit	Inspect the combination switch input circuit applicable to the malfunctioning part. Refer to <a href="#">BCS-65, "Diagnosis Procedure"</a> .
B	Combination switch INPUT 2 circuit	
C	Combination switch INPUT 3 circuit	
D	Combination switch INPUT 4 circuit	
E	Combination switch INPUT 5 circuit	
F	Combination switch OUTPUT 1 circuit	Inspect the combination switch output circuit applicable to the malfunctioning part. Refer to <a href="#">BCS-67, "Diagnosis Procedure"</a> .
G	Combination switch OUTPUT 2 circuit	
H	Combination switch OUTPUT 3 circuit	
I	Combination switch OUTPUT 4 circuit	
J	Combination switch OUTPUT 5 circuit	
K	BCM	Replace BCM. Refer to <a href="#">BCS-70, "Removal and Installation"</a> .
L	Combination switch	Replace the combination switch. Refer to <a href="#">BCS-71, "Removal and Installation"</a> .

# BCM (BODY CONTROL MODULE)

< REMOVAL AND INSTALLATION >

[WITH INTELLIGENT KEY SYSTEM]

## REMOVAL AND INSTALLATION

### BCM (BODY CONTROL MODULE)

#### Removal and Installation

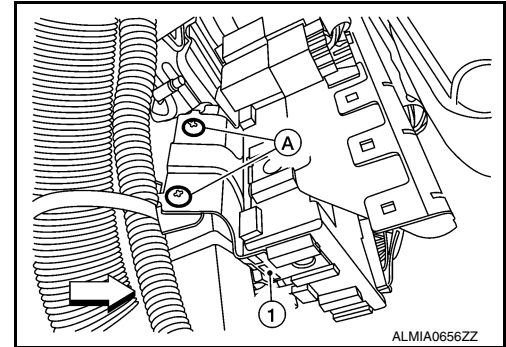
INFOID:000000009445770

#### REMOVAL

**CAUTION:**

Before replacing BCM, perform "READ CONFIGURATION" to save or print current vehicle specification. Refer to [BCS-58, "Description"](#).

1. Disconnect negative and positive battery terminals, then wait at least three minutes. Refer to [PG-67, "Removal and Installation \(Battery\)"](#).
2. Remove instrument lower panel LH. Refer to [IP-24, "Removal and Installation"](#).
3. Remove screws (A) and remove the BCM (1) from the steering member and position aside.  
↔: Front
4. Disconnect the harness connectors from the BCM.
5. Remove relays from relay bracket.
6. Remove relay bracket from BCM to transfer to new BCM.



#### INSTALLATION

Installation is in the reverse order of removal.

**CAUTION:**

- Perform "CONFIGURATION (BCM)" when replacing BCM. Refer to [BCS-58, "Description"](#).
- Make sure to perform the system initialization (NATS) (if equipped) when replacing BCM. Refer to [BCS-57, "Work Procedure"](#).
- When replacing BCM, if new BCM does not come with keyfobs attached, all existing keyfobs must be re-registered.

# COMBINATION SWITCH

< REMOVAL AND INSTALLATION >

[WITH INTELLIGENT KEY SYSTEM]

## COMBINATION SWITCH

### Removal and Installation

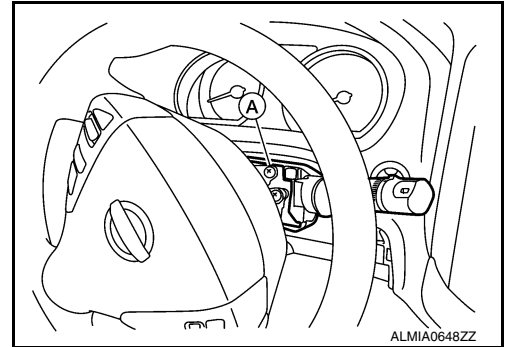
INFOID:000000009446797

#### CAUTION:


- Before servicing, turn the ignition switch OFF, disconnect both battery terminals and wait at least three minutes.
- Do not use air or electric tools when removing or installing the combination switch.

#### REMOVAL

1. Disconnect the negative and positive battery terminals, then wait at least three minutes. Refer to [PG-67, "Removal and Installation \(Battery\)"](#).
2. Remove the steering column covers. Refer to [IP-17, "Removal and Installation"](#).
3. Rotate steering wheel clockwise to access first combination switch screw (A) and remove.



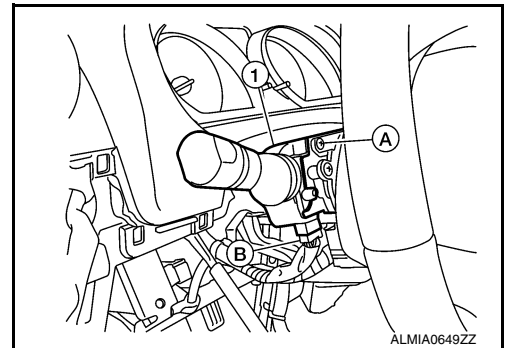4. Rotate steering wheel counter-clockwise to access second combination switch screw (A) and remove.
5. Disconnect the harness connector (B) from the combination switch (1) and remove.



#### INSTALLATION

Installation is in the reverse order of removal.

#### CAUTION:

- After the work is completed, make sure no system malfunction is detected by air bag warning lamp.
- In case a malfunction is detected by the air bag warning lamp, reset with the self-diagnosis function and delete the memory with CONSULT.
- If a malfunction is still detected after the above operation, perform self-diagnosis to repair malfunctions. Refer to [BCS-57, "Work Procedure"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

BCS

## PRECAUTIONS

< PRECAUTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

### PRECAUTION

#### PRECAUTIONS

##### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000009693684

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

**WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

##### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

**WARNING:**

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.



# COMPONENT PARTS

[WITHOUT INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

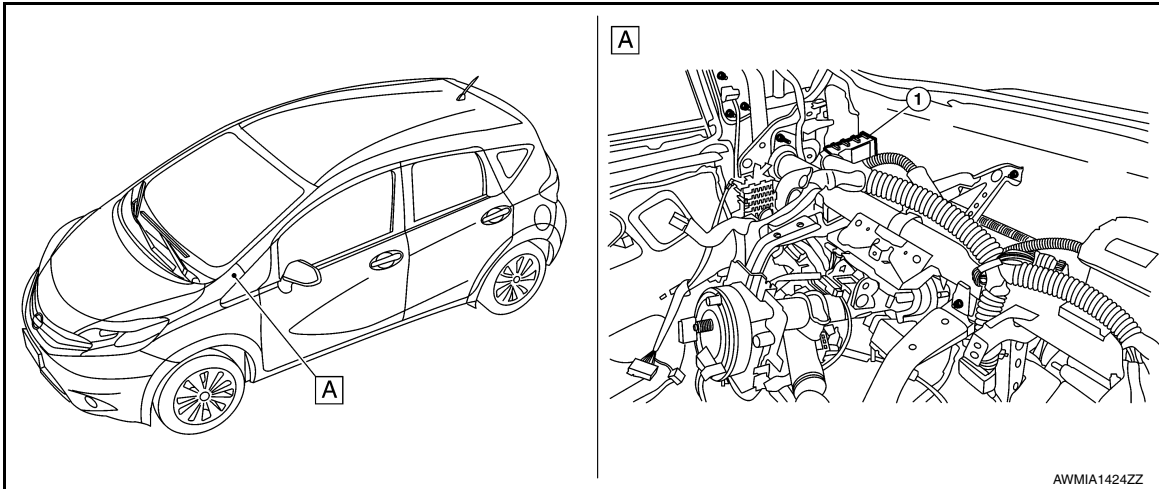
## SYSTEM DESCRIPTION

### COMPONENT PARTS

### BODY CONTROL SYSTEM

### BODY CONTROL SYSTEM : Component Parts Location

INFOID:000000009693610




1. BCM

A. View with instrument panel removed

### POWER CONSUMPTION CONTROL SYSTEM
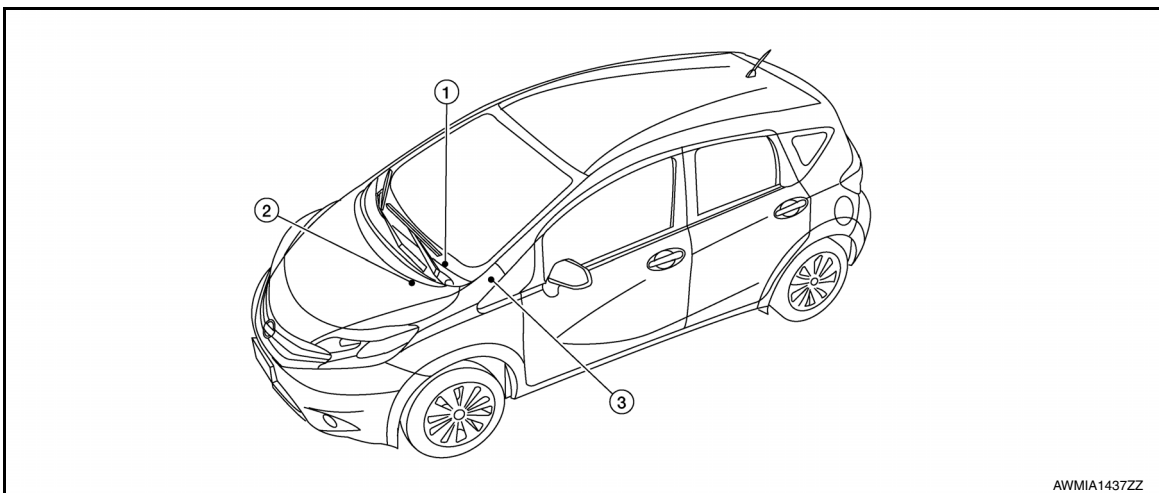
### POWER CONSUMPTION CONTROL SYSTEM : Component Parts Location

INFOID:000000009693612



1 Combination meter  
Refer to [MWI-5. "METER SYSTEM : Component Parts Location"](#).

2 IPDM E/R  
Refer to [PCS-34. "Component Parts Location"](#).

3 BCM  
Refer to [BCS-73. "BODY CONTROL SYSTEM : Component Parts Location"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

BCS

# SYSTEM

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

## SYSTEM

### BODY CONTROL SYSTEM

#### BODY CONTROL SYSTEM : System Description

INFOID:000000009693613

#### OUTLINE

- BCM (Body Control Module) controls the various electrical components. It inputs the information required to the control from CAN communication and the signal received from each switch and sensor.
- BCM has combination switch reading function for reading the operation status of combination switches (light, turn signal, wiper and washer) in addition to a function for controlling the operation of various electrical components. It also has the signal transmission function as the passed point of signal and the power saving control function that reduces the power consumption with the ignition switch OFF.
- BCM is equipped with the diagnosis function that performs the diagnosis with CONSULT and various settings.

#### BCM CONTROL FUNCTION LIST

System	Reference
Combination switch reading system	<a href="#">BCS-75, "COMBINATION SWITCH READING SYSTEM : System Description"</a>
Signal buffer system	<a href="#">BCS-80, "SIGNAL BUFFER : System Description"</a>
Power consumption control system	<a href="#">BCS-80, "POWER CONSUMPTION CONTROL SYSTEM : System Description"</a>
Headlamp system	<a href="#">EXL-8, "HEADLAMP SYSTEM : System Description"</a>
Daytime light system	<a href="#">EXL-9, "DAYTIME RUNNING LIGHT SYSTEM : System Description"</a>
Turn signal and hazard warning lamp system	<a href="#">EXL-10, "TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM : System Description"</a>
Parking, license plate and tail lamps system	<a href="#">EXL-11, "PARKING, LICENSE PLATE AND TAIL LAMP SYSTEM : System Description"</a>
Front fog lamp system	<a href="#">EXL-9, "FRONT FOG LAMP SYSTEM : System Description"</a>
Exterior lamp battery saver system	<a href="#">EXL-8, "HEADLAMP SYSTEM : System Description"</a>
Interior room lamp control system	<a href="#">INL-7, "INTERIOR ROOM LAMP CONTROL SYSTEM : System Description"</a>
Interior room lamp battery saver system	<a href="#">INL-7, "INTERIOR ROOM LAMP CONTROL SYSTEM : System Description"</a>
Front wiper and washer system	<a href="#">WW-8, "FRONT WIPER AND WASHER SYSTEM : System Description"</a>
Rear wiper and washer system	<a href="#">WW-10, "REAR WIPER AND WASHER SYSTEM : System Description"</a>
Rear window defogger system	<a href="#">DEF-6, "System Description"</a>
Manual air conditioning system	<a href="#">HAC-13, "System Description"</a>
Warning chime system	<a href="#">WCS-6, "WARNING CHIME SYSTEM : System Description"</a>
Power door lock system	<a href="#">DLK-192, "POWER DOOR LOCK SYSTEM : System Description"</a>
Nissan vehicle immobilizer system (NVIS)	<a href="#">SEC-135, "NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS : System Description"</a>
Vehicle security system	<a href="#">SEC-136, "VEHICLE SECURITY SYSTEM : System Description"</a>
Power window system	<a href="#">PWC-8, "System Description"</a>
RAP (retained accessory power) system	<a href="#">BCS-92, "RETAINED PWR : CONSULT Function (BCM - RETAINED PWR)"</a>

#### COMBINATION SWITCH READING SYSTEM

# SYSTEM

< SYSTEM DESCRIPTION >

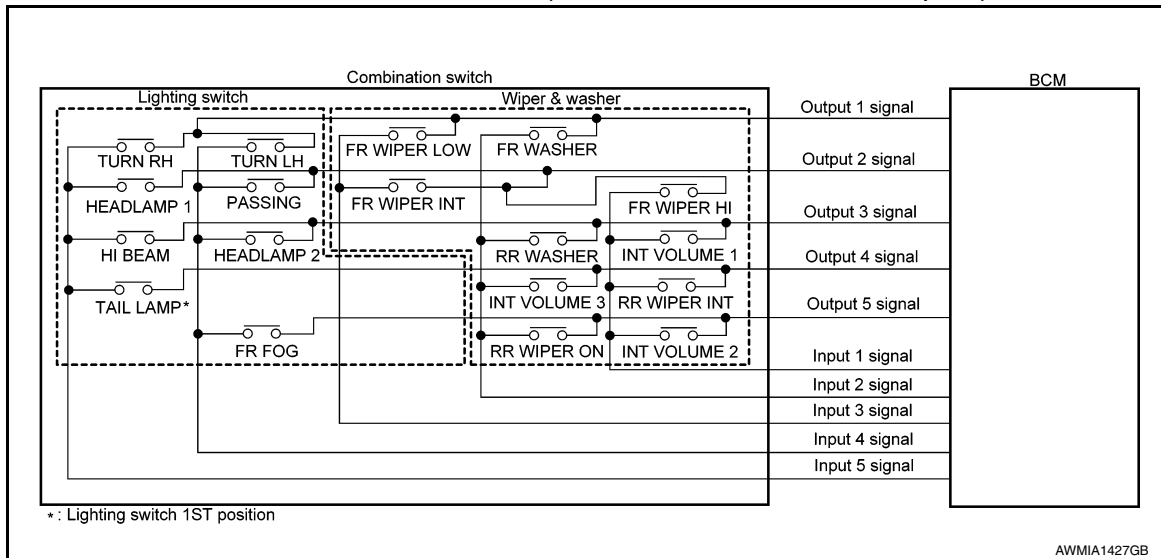
[WITHOUT INTELLIGENT KEY SYSTEM]

## COMBINATION SWITCH READING SYSTEM : System Description


INFOID:000000009693615

### SYSTEM DIAGRAM

Combination Switch Circuit (With Variable Intermittent Wipers)



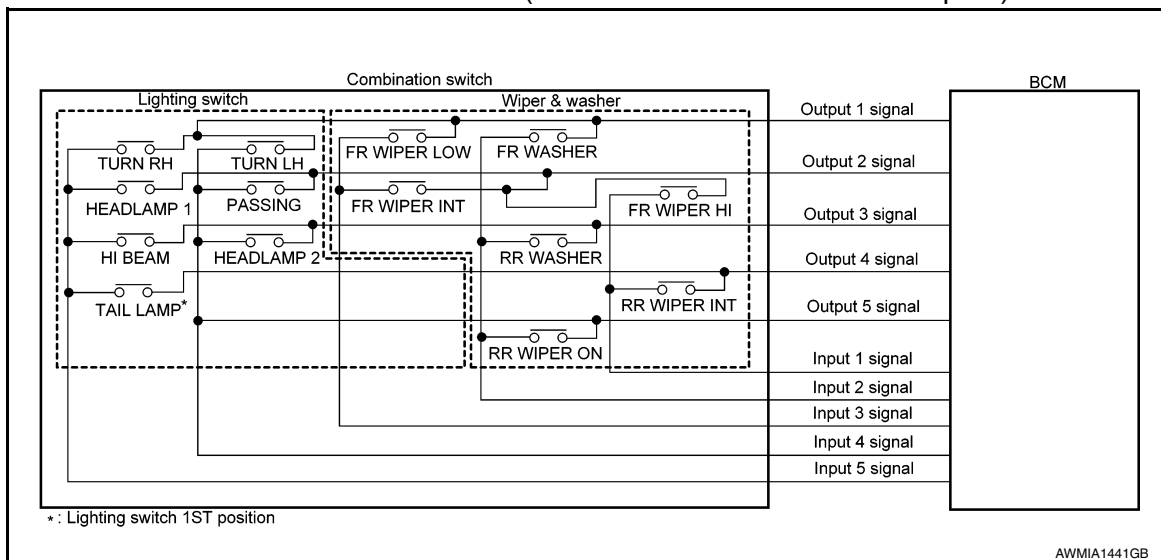Combination Switch Circuit (Without Variable Intermittent Wipers)



### OUTLINE

- BCM reads the status of the combination switch (light, turn signal, wiper and washer) and recognizes the status of each switch.
- BCM has a combination of 5 output terminals (OUTPUT 1 - 5) and 5 input terminals (INPUT 1 - 5). It reads a maximum of 20 switch states.

### COMBINATION SWITCH MATRIX (WITH VARIABLE INTERMITTENT WIPERS)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

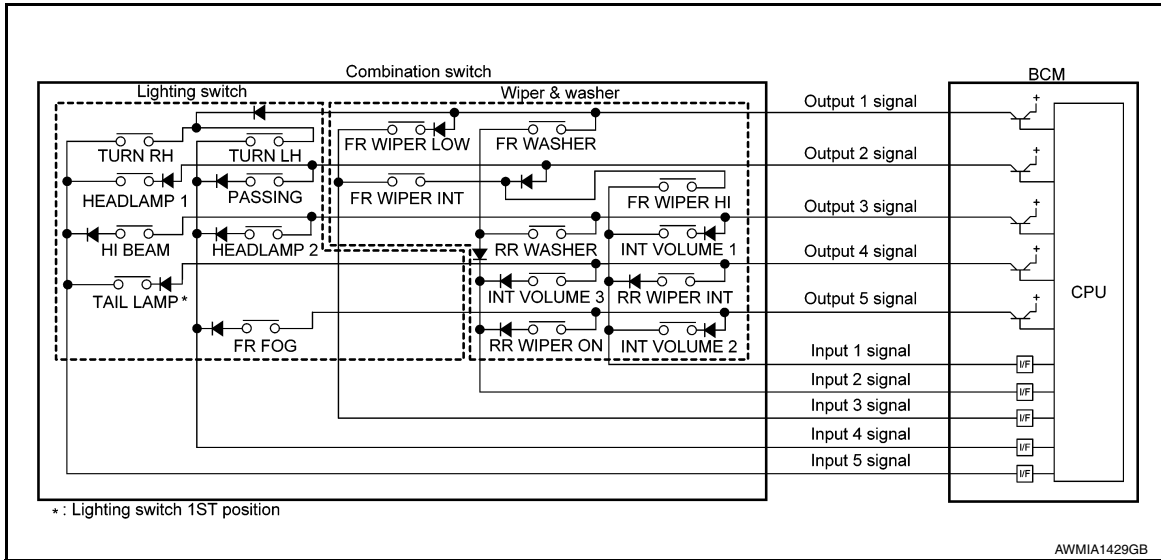
BCS

# SYSTEM

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

## Combination switch circuit (With Variable Intermittent Wipers)




Combination switch INPUT-OUTPUT system list

System	INPUT 1	INPUT 2	INPUT 3	INPUT 4	INPUT 5
OUTPUT 1	—	FR WASHER	FR WIPER LOW	TURN LH	TURN RH
OUTPUT 2	FR WIPER HI	—	FR WIPER INT	PASSING	HEADLAMP 1
OUTPUT 3	INT VOLUME 1	RR WASHER	—	HEADLAMP 2	HI BEAM
OUTPUT 4	RR WIPER INT	INT VOLUME 3	—	—	TAIL LAMP
OUTPUT 5	INT VOLUME 2	RR WIPER ON	—	FR FOG	—

## COMBINATION SWITCH MATRIX (WITHOUT VARIABLE INTERMITTENT WIPERS)
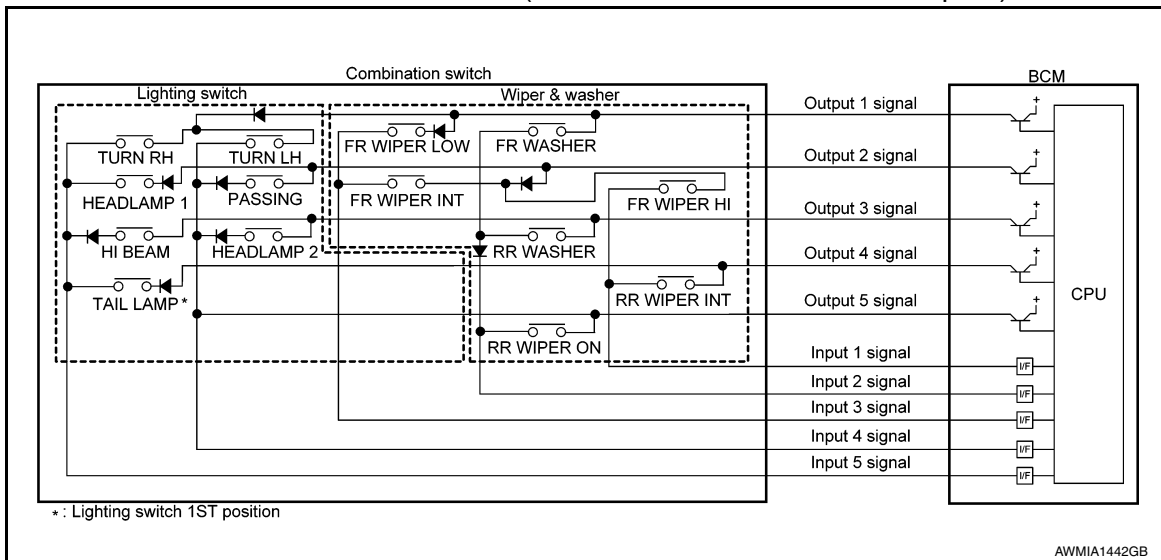
### Combination Switch Circuit (Without Variable Intermittent Wipers)




Combination switch INPUT-OUTPUT system list

System	INPUT 1	INPUT 2	INPUT 3	INPUT 4	INPUT 5
OUTPUT 1	—	FR WASHER	FR WIPER LOW	TURN LH	TURN RH
OUTPUT 2	FR WIPER HI	—	FR WIPER INT	PASSING	HEADLAMP 1
OUTPUT 3	—	RR WASHER	—	HEADLAMP 2	HI BEAM
OUTPUT 4	RR WIPER INT	—	—	—	TAIL LAMP
OUTPUT 5	—	RR WIPER ON	—	—	—

COMBINATION SWITCH READING FUNCTION


Description

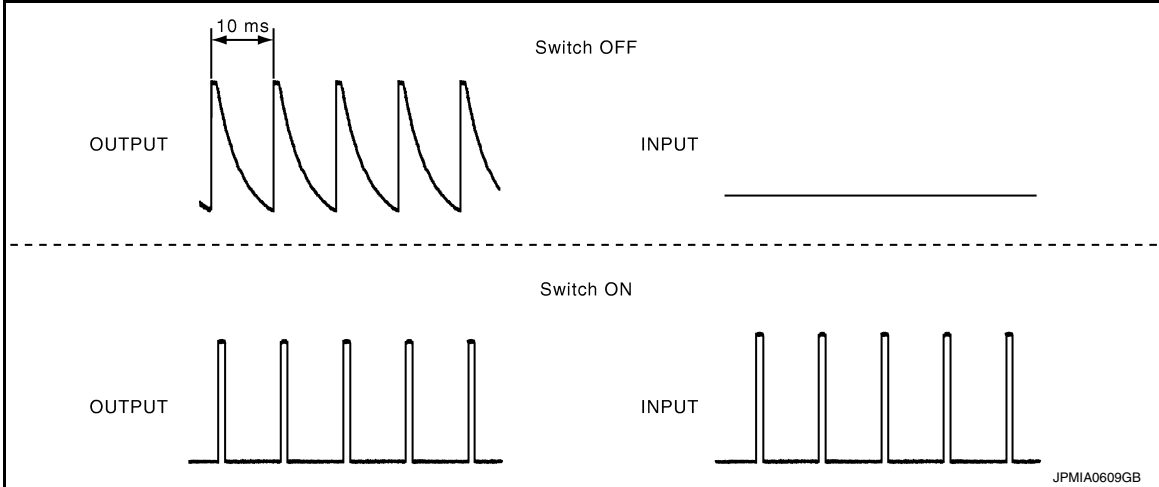- BCM reads the status of the combination switch at 10 ms intervals normally.



NOTE:

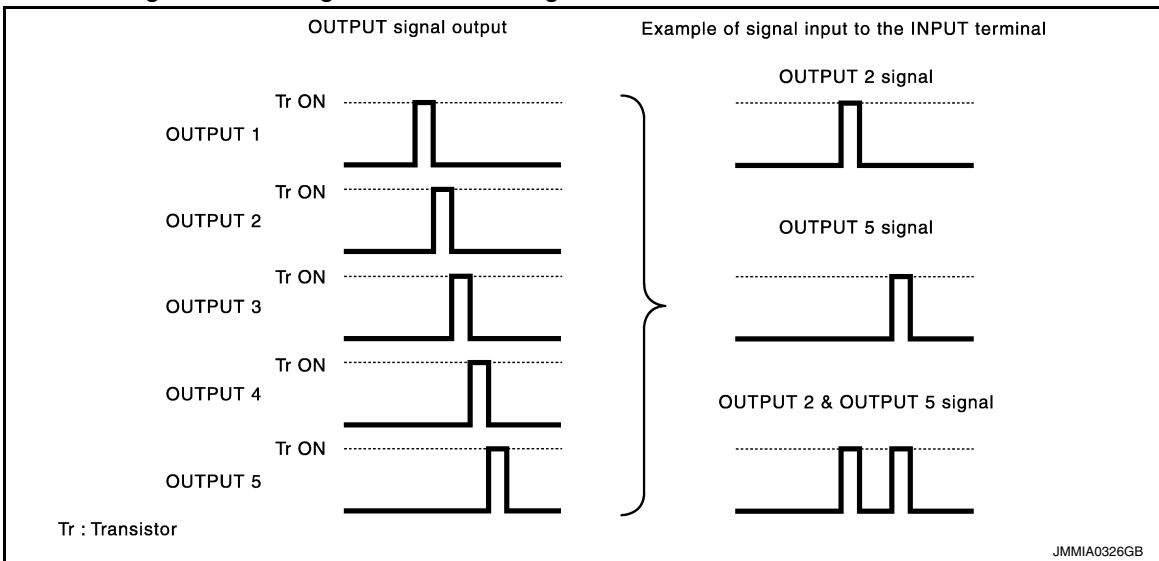- BCM reads the status of the combination switch at 60 ms intervals when BCM is controlled at low power consumption control mode.
- BCM operates as follows and judges the status of the combination switch.
  - It operates the transistor on OUTPUT side in the following order: OUTPUT 1 → 2 → 3 → 4 → 5, and outputs voltage waveform.
  - The voltage waveform of OUTPUT corresponding to the formed circuit is input into the interface on INPUT side if any (1 or more) switches are ON.
  - It reads this change of the voltage as the status signal of the combination switch.



Operation Example

In the following operation example, the combination of the status signals of the combination switch is replaced as follows: INPUT 1 - 5 to "1 - 5" and OUTPUT 1 - 5 to "A - E".

Example 1: When a switch (TAIL LAMP) is turned ON

- The circuit between OUTPUT 4 and INPUT 5 is formed when the TAIL LAMP switch is turned ON.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P


BCS

# SYSTEM

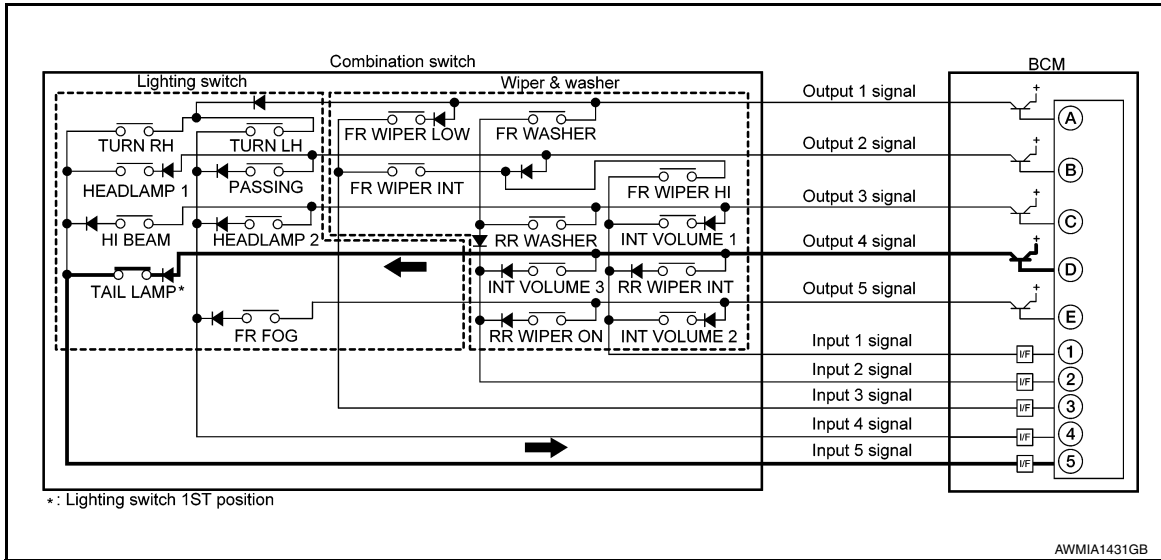
< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

Combination switch circuit (With Variable Intermittent Wipers)



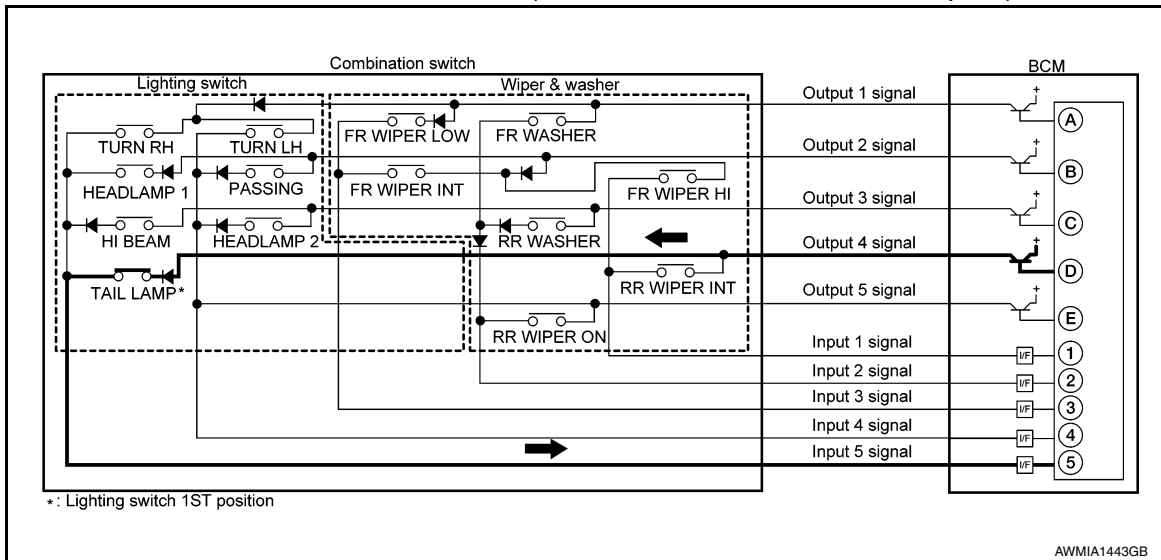Combination switch circuit (Without Variable Intermittent Wipers)



- BCM detects the combination switch status signal "5D" when the signal of OUTPUT 4 is input to INPUT 5.
- BCM judges that the TAIL LAMP switch is ON when the signal "5D" is detected.

Example 2: When some switches (TURN RH, TAIL LAMP) are turned ON


- The circuits between OUTPUT 1 and INPUT 5 and between OUTPUT 4 and INPUT 5 are formed when the TURN RH switch and TAIL LAMP switch are turned ON.

# SYSTEM

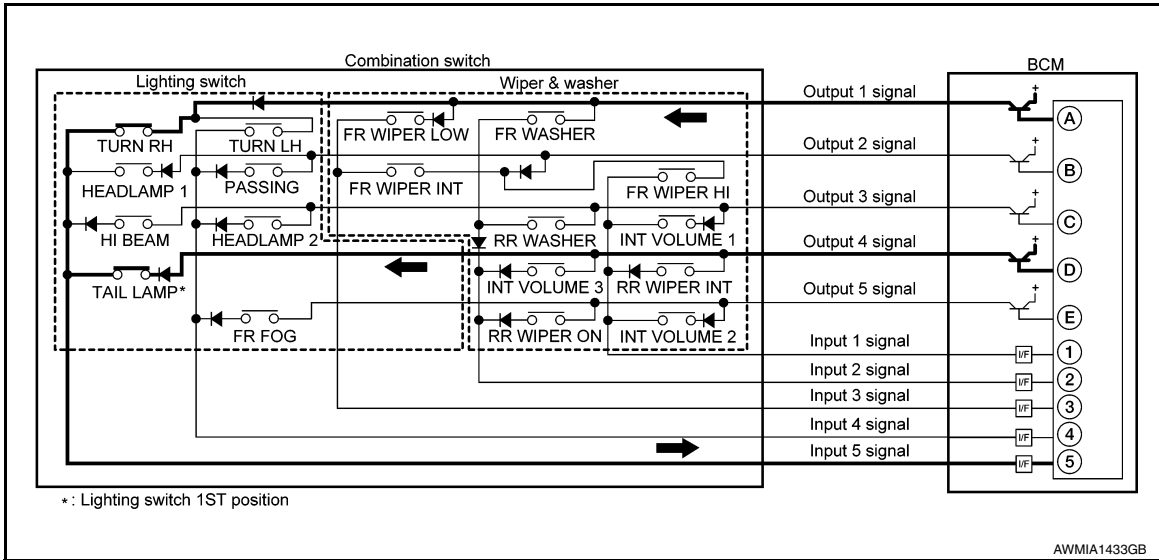
< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

Combination switch circuit (With Variable Intermittent Wipers)



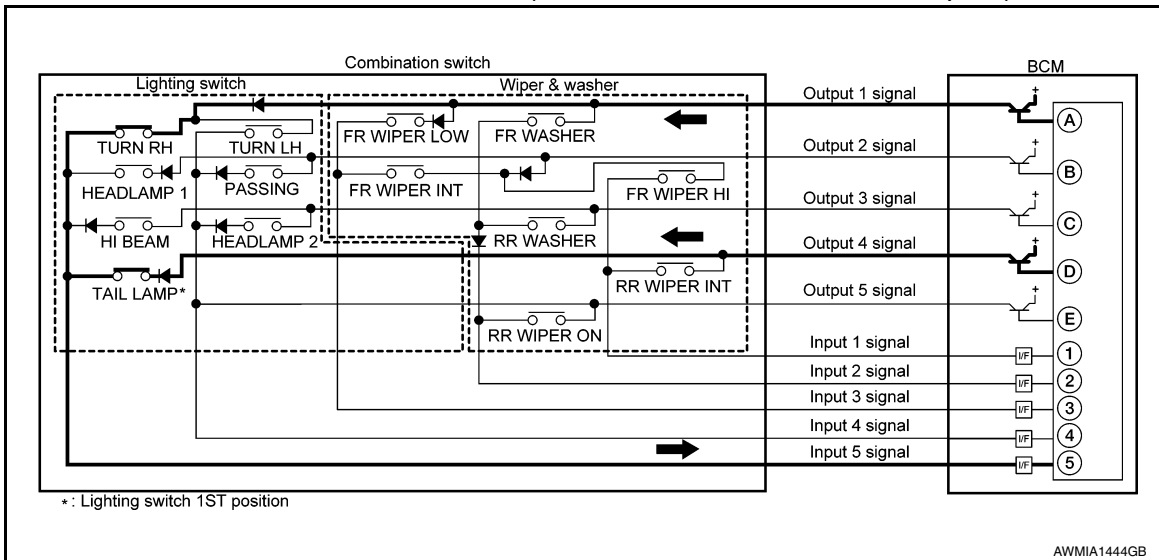Combination switch circuit (Without Variable Intermittent Wipers)



- BCM detects the combination switch status signal "5AD" when the signals of OUTPUT 1 and OUTPUT 4 are input to INPUT 5.
- BCM judges that the TURN RH switch and TAIL LAMP switch are ON when the signal "5AD" is detected.

## WIPER INTERMITTENT DIAL POSITION (WITH VARIABLE INTERMITTENT WIPERS)

BCM judges the wiper intermittent dial 1 - 7 by the status of INT VOLUME 1, 2 and 3 switches.

Wiper intermittent dial position	Switch status		
	INT VOLUME 1	INT VOLUME 2	INT VOLUME 3
1	ON	ON	ON
2	ON	ON	OFF
3	ON	OFF	OFF
4	OFF	OFF	OFF
5	OFF	OFF	ON
6	OFF	ON	ON
7	OFF	ON	OFF

**NOTE:**

For details of wiper intermittent dial position, refer to [WW-8, "FRONT WIPER AND WASHER SYSTEM : System Description"](#).

## SIGNAL BUFFER

# SYSTEM

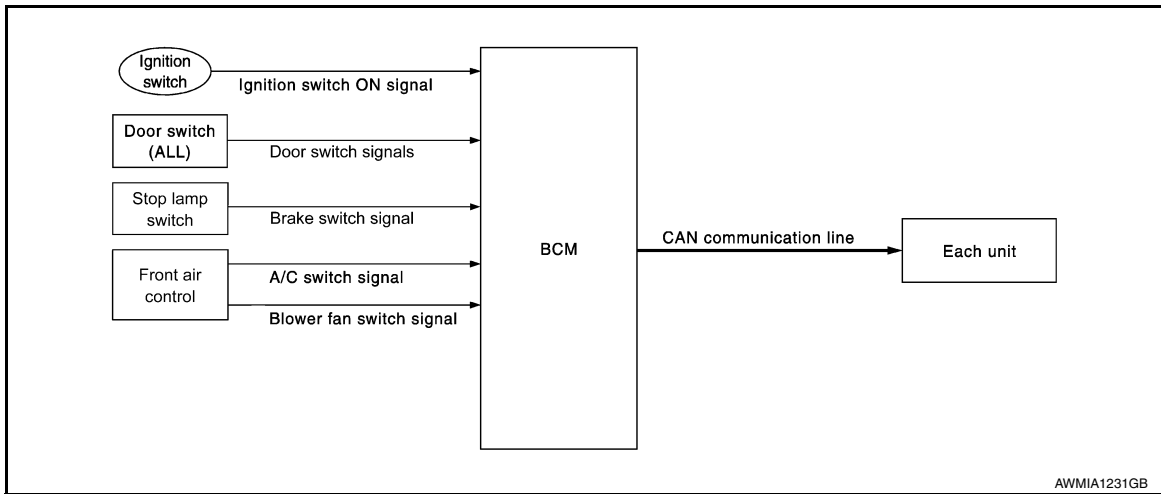
< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

## SIGNAL BUFFER : System Description

INFOID:000000009693617

### SYSTEM DIAGRAM



### OUTLINE

BCM has the signal transmission function that outputs/transmits each input/received signal to each unit.

### SIGNAL TRANSMISSION FUNCTION LIST

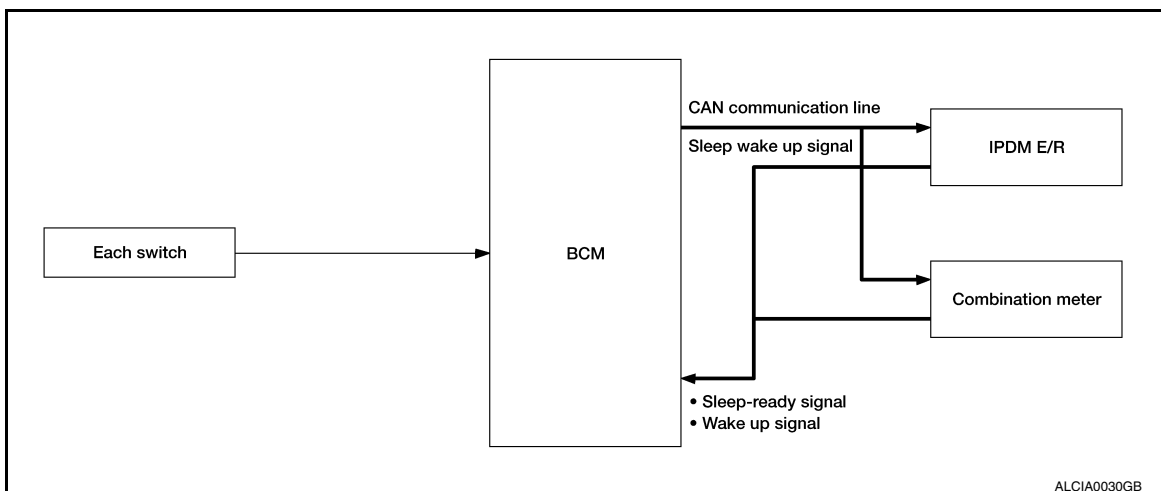
Signal name	Input	Output	Description
Ignition switch ON signal	Ignition switch	IPDM E/R (CAN)	Inputs the ignition switch signal and transmits it via CAN communication.
Brake switch signal	Stop lamp switch	IPDM E/R (CAN)	Inputs the brake switch signal and transmits it via CAN communication.
Door switch signal	Any door switch	<ul style="list-style-type: none"> <li>Combination meter (CAN)</li> <li>IPDM E/R (CAN)</li> </ul>	Inputs the door switch signal and transmits it via CAN communication.
Blower fan ON signal	Front air control	ECM (CAN)	Inputs each signal and transmits them via CAN communication.
A/C ON signal			

## POWER CONSUMPTION CONTROL SYSTEM

### POWER CONSUMPTION CONTROL SYSTEM : System Description

INFOID:000000009693619

### SYSTEM DIAGRAM





# SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]

## < SYSTEM DESCRIPTION >

### OUTLINE

- BCM incorporates a power saving control function that reduces the power consumption according to the vehicle status. A
- BCM switches the status (control mode) by itself with the power saving control function. It performs the sleep request to each unit (IPDM E/R and combination meter) that operates with the ignition switch OFF. B

#### Normal mode (wake-up)

- CAN communication is normally performed with other units
- Each control with BCM is operating properly C

#### CAN communication sleep mode (CAN sleep)

- CAN transmission is stopped
- Control with BCM only is operating D

#### Low power consumption mode (BCM sleep)

- Low power consumption control is active
- CAN transmission is stopped E

### LOW POWER CONSUMPTION CONTROL WITH BCM

BCM reduces the power consumption with the following operation in the low power consumption mode.

- The reading interval of each switch changes from 10 ms interval to 60 ms interval. F

### SLEEP MODE ACTIVATION

- BCM receives the sleep-ready signal (ready) from IPDM E/R and combination meter via CAN communication. G
- BCM transmits the sleep wake up signal (sleep) to each unit when all of the CAN sleep conditions are fulfilled. H
- Each unit stops the transmission of CAN communication with the sleep wake-up signal. BCM is in CAN communication sleep mode. H
- BCM is in the low power consumption mode and performs the low power consumption control when all of the BCM sleep conditions are fulfilled with CAN sleep condition. I

#### Sleep condition

CAN sleep condition	BCM sleep condition
<ul style="list-style-type: none"><li>• Receiving the sleep-ready signal (ready) from all units</li><li>• Ignition switch: OFF</li><li>• Vehicle security system alarm: No operation</li><li>• Warning lamp: Not operation</li><li>• Stop lamp switch: OFF</li><li>• Turn signal indicator lamp: No operation</li><li>• Exterior lamp: OFF</li><li>• Door lock status: No change</li><li>• CONSULT communication status: No communication</li><li>• Door switch status: No change</li><li>• Rear window defogger: OFF</li><li>• Driver door lock status: No change</li><li>• Key switch status: No change</li></ul>	<ul style="list-style-type: none"><li>• Interior room lamp battery saver: Time out</li><li>• RAP system: OFF</li><li>• Nissan Vehicle Immobilizer System (NVIS) - NATS: No operation</li><li>• Remote keyless entry receiver communication status: No communication</li></ul>

BCS

### WAKE-UP OPERATION

- BCM transmits the sleep wake up signal (wake up) to each unit when any of the wake-up conditions are fulfilled. It changes from the low power consumption mode to the normal mode. N
- Each unit starts the transmission of CAN communication with the sleep wake up signal. Each unit transmits the wake up signal to BCM via CAN communication to report the CAN communication start. O

P

# SYSTEM

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

---

## Wake-up condition

---

- Receiving the sleep-ready signal (Not-ready) from any unit
  - Hazard switch: OFF→ON
  - HI BEAM switch: OFF→ON, ON→OFF
  - PASSING switch: OFF→ON, ON→OFF
  - HEADLAMP 1 switch: OFF→ON, ON→OFF
  - HEADLAMP 2 switch: OFF→ON, ON→OFF
  - TAIL LAMP switch: OFF→ON
  - TURN LH: OFF→ON, ON→OFF
  - TURN RH: OFF→ON, ON→OFF
  - Front door switch LH: OFF→ON, ON→OFF
  - Front door switch RH: OFF → ON, ON → OFF
  - Rear door switch LH: OFF→ON, ON→OFF
  - Rear door switch RH: OFF → ON, ON → OFF
  - Stop lamp switch: ON
  - Door lock and unlock switch: NEUTRAL → LOCK, NEUTRAL → UNLOCK
  - Front door lock assembly LH (key cylinder switch): NEUTRAL → LOCK, NEUTRAL → UNLOCK
  - Remote keyless entry receiver: Receiving valid keyfob
-

# DIAGNOSIS SYSTEM (BCM)

[WITHOUT INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

## DIAGNOSIS SYSTEM (BCM)

### COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000009693620

### APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Direct Diagnostic Mode	Description
ECU identification	The BCM part number is displayed.
Self Diagnostic Result	The BCM self diagnostic results are displayed.
Data Monitor	The BCM input/output data is displayed in real time.
Active Test	The BCM activates outputs to test components.
Work support	The settings for BCM functions can be changed.
Configuration	<ul style="list-style-type: none"> <li>• The vehicle specification can be read and saved.</li> <li>• The vehicle specification can be written when replacing BCM.</li> </ul>
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication is displayed.

### SYSTEM APPLICATION

BCM can perform the following functions.

System	Sub System	Direct Diagnostic Mode						
		ECU identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN DIAG SUPPORT MNTR
Door lock	DOOR LOCK		×	×	×	×		
Rear window defogger	REAR DEFOGGER			×	×			
Warning chime	BUZZER			×	×			
Interior room lamp timer	INT LAMP			×	×	×		
Remote keyless entry system	MULTI REMOTE ENT			×	×	×		
Exterior lamp	HEAD LAMP			×	×	×		
Wiper and washer	WIPER			×	×	×		
Turn signal and hazard warning lamps	FLASHER			×	×			
Air conditioner	AIR CONDITIONER			×				
Combination switch	COMB SW			×				
BCM	BCM	×	×			×	×	×
Immobilizer	IMMU		×		×	×		
Interior room lamp battery saver	BATTERY SAVER			×	×	×		
Vehicle security system	THEFT ALM			×	×	×		
RAP system	RETAINED PWR			×		×		
Signal buffer system	SIGNAL BUFFER			×	×			
TPMS	AIR PRESSURE MONITOR		×	×	×	×		
Panic alarm system	PANIC ALARM				×			

# DIAGNOSIS SYSTEM (BCM)

[WITHOUT INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

## DOOR LOCK

### DOOR LOCK : CONSULT Function (BCM - DOOR LOCK)

INFOID:000000009693621

#### DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.
KEY ON SW [On/Off]	Indicates condition of key switch.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of back door switch.
ACC ON SW [On/Off]	Indicates condition of ignition switch ACC position.
KEYLESS LOCK [On/Off]	Indicates condition of lock signal from keyfob.
KEYLESS UNLOCK [On/Off]	Indicates condition of unlock signal from keyfob.
KEY CYL LK-SW [On/Off]	Indicates condition of lock signal from door key cylinder switch.
KEY CYL UN-SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch.
VEHICLE SPEED [km/h/mph]	Indicates vehicle speed signal received from combination meter on CAN communication line.

#### ACTIVE TEST

Test Item	Description
DOOR LOCK	This test is able to check door lock operation [OTR ULK/DR UNLK/ALL UNLK/ALL LCK].

#### WORK SUPPORT

Support Item	Setting	Description
AUTOMATIC DOOR LOCK SELECT	P RANGE	Doors lock automatically when shifted out of Park (P).
	VH SPD*	Doors lock automatically when vehicle speed reaches 24 km/h (15 mph).
AUTOMATIC DOOR UNLOCK SELECT	MODE6*	Drivers door unlocks automatically when key is removed.
	MODE5	Drivers door unlocks automatically when shifted into Park (P).
	MODE4	Drivers door unlocks automatically when ignition is switched from ON to OFF.
	MODE3	Doors unlock automatically when key is removed.
	MODE2	Doors unlock automatically when shifted into Park (P).
	MODE1	Doors unlock automatically when ignition is switched from ON to OFF.
AUTOMATIC LOCK/UNLOCK SELECT	Lock/Unlock*	Automatic door locks function operates in lock and unlock.
	Lock Only	Automatic door locks function operates in lock only.
	Unlock Only	Automatic door locks function operates in unlock only.
	Off	Automatic door locks function OFF.

\* : Initial setting

## REAR DEFOGGER

### REAR DEFOGGER : CONSULT Function (BCM - REAR DEFOGGER)

INFOID:000000009693622

#### DATA MONITOR

# DIAGNOSIS SYSTEM (BCM)

[WITHOUT INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.
ACC ON SW [On/Off]	Indicates condition of ignition switch ACC position.
REAR DEF SW [On/Off]	Indicates condition of rear window defogger switch.
RR DEF TIME [On/Off]	Indicates condition of rear window defogger switch timer.

## ACTIVE TEST

Test Item	Description
REAR DEFOGGER	This test is able to check rear window defogger operation [Off/On].

## BUZZER

### BUZZER : CONSULT Function (BCM - BUZZER)

INFOID:000000009693623

## DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.
KEY ON SW [On/Off]	Indicates condition of key switch.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
REVERSE SW CAN [On/Off]	Indicates reverse switch signal received from TCM on CAN communication line.
TAIL LAMP SW [On/Off]	Indicates condition of combination switch.
FR FOG SW [On/Off]	Indicates condition of front fog lamp switch.
VEHICLE SPEED [km/h/mph]	Indicates vehicle speed signal received from combination meter on CAN communication line.

## ACTIVE TEST

Test Item	Description
IGN KEY WARN ALM	This test is able to check key warning chime operation [On/Off].
SEAT BELT WARN TEST	This test is able to check seat belt warning chime operation [On/Off].
LIGHT WARN ALM	This test is able to check light warning chime operation [On/Off].

## INT LAMP

### INT LAMP : CONSULT Function (BCM - INT LAMP)

INFOID:000000009693624

## DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.
KEY ON SW [On/Off]	Indicates condition of key switch.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of back door switch.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.
KEYLESS LOCK [On/Off]	Indicates condition of lock signal from keyfob.
KEYLESS UNLOCK [On/Off]	Indicates condition of unlock signal from keyfob.

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

# DIAGNOSIS SYSTEM (BCM)

[WITHOUT INTELLIGENT KEY SYSTEM]

## < SYSTEM DESCRIPTION >

Monitor Item [Unit]	Description
KEY CYL LK-SW [On/Off]	Indicates condition of lock signal from door key cylinder switch.
KEY CYL UN-SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch.
ACC SW [On/Off]	Indicates condition of ignition switch ACC position.

## ACTIVE TEST

Test Item	Description
INT LAMP	This test is able to check interior room lamp operation [On/Off].

## WORK SUPPORT

Support Item	Setting	Description
SET I/L D-UNLCK INTCON	On*	Interior room lamp timer function ON.
	Off	Interior room lamp timer function OFF.
ROOM LAMP TIMER SET	MODE 4   30 sec.	Sets the interior room lamp ON time. (Timer operating time).
	MODE 3*   15 sec.	
	MODE 2   7.5 sec.	
	MODE 1   OFF	
ROOM LAMP ON TIME SET	MODE7   0 sec.	Sets the interior room lamp gradual brightening time.
	MODE6   5 sec.	
	MODE5   4 sec.	
	MODE4   3 sec.	
	MODE3   2 sec.	
	MODE2*   1 sec.	
	MODE1   0.5 sec.	
ROOM LAMP OFF TIME SET	MODE7   0 sec.	Sets the interior room lamp gradual dimming time.
	MODE6   5 sec.	
	MODE5   4 sec.	
	MODE4   3 sec.	
	MODE3   2 sec.	
	MODE2*   1 sec.	
	MODE1   0.5 sec.	
R LAMP TIMER LOGIC SET	MODE 2	Interior room lamp timer activates with all doors.
	MODE 1*	Interior room lamp timer activates with the driver door only.

\* : Initial setting

## MULTI REMOTE ENT

### MULTI REMOTE ENT : CONSULT Function (BCM - MULTI REMOTE ENT)

INFOID:000000009693625

## DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.
KEY ON SW [On/Off]	Indicates condition of key switch.
ACC ON SW [On/Off]	Indicates condition of ignition switch ACC position.
KEYLESS LOCK [On/Off]	Indicates condition of lock signal from keyfob.
KEYLESS UNLOCK [On/Off]	Indicates condition of unlock signal from keyfob.

# DIAGNOSIS SYSTEM (BCM)

[WITHOUT INTELLIGENT KEY SYSTEM]

## < SYSTEM DESCRIPTION >

Monitor Item [Unit]	Description
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of back door switch.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.
KEYLESS PANIC [On/Off]	Indicates condition of panic signal from keyfob.

## ACTIVE TEST

Test Item	Description
DOOR LOCK	This test is able to check door lock operation [ALL ULK/ALL LCK].
INT LAMP	This test is able to check interior room lamp operation [On/Off].
FLASHER	This test is able to check hazard reminder operation [Off/LH/RH].

## WORK SUPPORT

Support Item	Setting	Description
REMO CONT ID REGIST	—	Keyfob ID code can be registered.
REMO CONT ID ERASUR	—	Keyfob ID code can be erased.
REMO CONT ID CONFIR	—	Keyfob ID code registration is displayed.
HORN CHIRP SET	Off	Horn chirp function can be changed in this mode.
	On*	
HAZARD LAMP SET	MODE4* Lock and Unlock	Hazard warning lamp function can be changed in this mode.
	MODE3 Lock Only	
	MODE2 Unlock Only	
	MODE1 OFF	
PANIC ALRM SET	MODE3 1.5 sec	Panic alarm operation can be changed in this mode.
	MODE2 OFF	
	MODE1* 0.5 sec	
AUTO LOCK SET	MODE7 5 min	Auto locking function can be changed in this mode.
	MODE6 4 min	
	MODE5 3 min	
	MODE4 2 min	
	MODE3* 1 min	
	MODE2 30 sec	
	MODE1 OFF	

\*: Initial setting

## HEADLAMP

### HEADLAMP : CONSULT Function (BCM - HEAD LAMP)

INFOID:000000009693626

## DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.
ACC ON SW [On/Off]	Indicates condition of ignition switch ACC position.

# DIAGNOSIS SYSTEM (BCM)

[WITHOUT INTELLIGENT KEY SYSTEM]

## < SYSTEM DESCRIPTION >

Monitor Item [Unit]	Description
HI BEAM SW [On/Off]	Indicates condition of combination switch.
HEAD LAMP SW 1 [On/Off]	
HEAD LAMP SW 2 [On/Off]	
TAIL LAMP SW [On/Off]	
PASSING SW [On/Off]	
FR FOG SW [On/Off]	
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of back door switch.
TURN SIGNAL R [On/Off]	Indicates condition of combination switch.
TURN SIGNAL L [On/Off]	
KEY ON SW [On/Off]	Indicates condition of key switch.
KEYLESS LOCK [On/Off]	Indicates condition of lock signal from keyfob.
PKB SW [On/Off]	Indicates park brake switch signal received from combination meter on CAN communication line.
ENGINE RUN [On/Off]	Indicates engine run signal received from ECM on CAN communication line.
VEHICLE SPEED [km/h/mph]	Indicates vehicle speed signal received from combination meter on CAN communication line.

## ACTIVE TEST

Test Item	Description
TAIL LAMP	This test is able to check tail lamp operation [On/Off].
HEAD LAMP	This test is able to check head lamp operation [Hi/Low/Off].
FR FOG LAMP	This test is able to check front fog lamp operation [On/Off].
ILL DIM SIGNAL	This test is able to check head lamp illumination dimming operation [On/Off].

## WORK SUPPORT

Support Item	Setting	Description
BATTERY SAVER SET	On*	Exterior lamp battery saver function ON.
	Off	Exterior lamp battery saver function OFF.

\* : Initial setting

## WIPER

### WIPER : CONSULT Function (BCM - WIPER)

INFOID:000000009693627

## DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.
IGN SW CAN [On/Off]	Indicates ignition switch ON signal received from IPDM E/R on CAN communication line.
FR WIPER HI [On/Off]	Indicates condition of wiper operation of combination switch.
FR WIPER LOW [On/Off]	
FR WIPER INT [On/Off]	
FR WASHER SW [On/Off]	



# DIAGNOSIS SYSTEM (BCM)

[WITHOUT INTELLIGENT KEY SYSTEM]

## < SYSTEM DESCRIPTION >

Monitor Item [Unit]	Description
FR WIPER STOP [On/Off]	Indicates front wiper auto stop signal received from IPDM E/R on CAN communication line.
INT VOLUME [1 - 7]	Indicates condition of intermittent wiper operation of combination switch.
RR WIPER ON [On/Off]	Indicates condition of rear wiper operation of combination switch.
RR WIPER INT [On/Off]	
RR WASHER SW [On/Off]	
RR WIPER STOP [On/Off]	Indicates rear wiper motor auto stop input from rear wiper motor.
REVERSE SW CAN [On/Off]	Indicates reverse switch signal received from TCM on CAN communication line.
VEHICLE SPEED [km/h/mph]	Indicates vehicle speed signal received from combination meter on CAN communication line.

## ACTIVE TEST

Test Item	Description
FR WIPER	This test is able to check front wiper operation [INT/Lo/Hi/Off].
RR WIPER	This test is able to check rear wiper operation [On/Off].

## WORK SUPPORT

Support Item	Setting	Description
WIPER SPEED SETTING	On	Front wiper intermittent time linked with vehicle speed and wiper dial position.
	Off*	Front wiper intermittent time linked with wiper dial position.

\* : Initial setting

## FLASHER

### FLASHER : CONSULT Function (BCM - FLASHER)

INFOID:000000009693628

## DATA MONITOR

Monitor Item [Unit]	Description
HAZARD SW [On/Off]	Indicates condition of hazard switch.
TURN SIGNAL R [On/Off]	Indicates condition of turn signal function of combination switch.
TURN SIGNAL L [On/Off]	

## ACTIVE TEST

Test Item	Description
FLASHER	This test is able to check turn signal lamp operation [Off/LH/RH].

## AIR CONDITIONER

### AIR CONDITIONER : CONSULT Function (BCM - AIR CONDITIONER)

INFOID:000000009693629

## DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.
FAN ON SIG [On/Off]	Indicates condition of fan switch.
AIR COND SW [On/Off]	Indicates condition of A/C switch.
THERMO AMP [On/Off]	Indicates condition of thermo amp.
FR DEF SW [On/Off]	Indicates condition of front defrost switch.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

BCS

# DIAGNOSIS SYSTEM (BCM)

[WITHOUT INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

## COMB SW

COMB SW : CONSULT Function (BCM - COMB SW)

INFOID:000000009693630

### DATA MONITOR

Monitor Item [Unit]	Description
TURN SIGNAL R [On/Off]	Indicates condition of right turn signal operation of combination switch.
TURN SIGNAL L [On/Off]	Indicates condition of left turn signal operation of combination switch.
HI BEAM SW [On/Off]	Indicates condition of Hi beam switch operation of combination switch.
HEAD LAMP SW 1 [On/Off]	Indicates condition of head lamp switch 1 operation of combination switch.
HEAD LAMP SW 2 [On/Off]	Indicates condition of head lamp switch 2 operation of combination switch.
TAIL LAMP SW [On/Off]	Indicates condition of tail lamp switch operation of combination switch.
PASSING SW [On/Off]	Indicates condition of passing switch operation of combination switch.
FR FOG SW [On/Off]	Indicates condition of front fog lamp switch operation of combination switch.
FR WIPER HI [On/Off]	Indicates condition of front wiper operation of combination switch.
FR WIPER LOW [On/Off]	
FR WIPER INT [On/Off]	
FR WASHER SW [On/Off]	
INT VOLUME [1 - 7]	Indicates condition of intermittent front wiper operation of combination switch.
RR WIPER ON [On/Off]	Indicates condition of rear wiper operation of combination switch.
RR WIPER INT [On/Off]	
RR WASHER SW [On/Off]	

## BCM

BCM : CONSULT Function (BCM - BCM)

INFOID:000000009693631

### ECU IDENTIFICATION

The BCM part number is displayed.

### SELF DIAGNOSTIC RESULT

Refer to [BCS-109, "DTC Index"](#).

### WORK SUPPORT

Support Item	Setting	Description
RESET SETTING VALUE	Reset	Returns BCM to initial value in factory shipment.
	Cancel	Cancels the reset function.

### CONFIGURATION

Refer to [BCS-116, "Description"](#).

### CAN DIAG SUPPORT MNTR

Refer to [LAN-12, "CAN Diagnostic Support Monitor"](#).

## IMMU

IMMU : CONSULT Function (BCM - IMMU)

INFOID:000000009693632

### SELF DIAGNOSTIC RESULT

Refer to [BCS-109, "DTC Index"](#).

### ACTIVE TEST

# DIAGNOSIS SYSTEM (BCM)

[WITHOUT INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

Test Item	Description
THEFT IND	This test is able to check security indicator operation [On/Off].

## WORK SUPPORT

Support Item	Setting	Description
CONFIRM DONGLE ID	—	Dongle ID code can be read.

## BATTERY SAVER

### BATTERY SAVER : CONSULT Function (BCM - BATTERY SAVER)

INFOID:000000009693633

## DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.
KEY ON SW [On/Off]	Indicates condition of key switch.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of back door switch.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.
KEYLESS LOCK [On/Off]	Indicates condition of lock signal from keyfob.
KEYLESS UNLOCK [On/Off]	Indicates condition of unlock signal from keyfob.
KEY CYL LK-SW [On/Off]	Indicates condition of lock signal from door key cylinder switch.
KEY CYL UN-SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch.
ACC SW [On/Off]	Indicates condition of ignition switch ACC position.

## ACTIVE TEST

Test item	Description
BATTERY SAVER	This test is able to check battery saver operation [On/Off].

## WORK SUPPORT

Support Item	Setting	Description
ROOM LAMP TIMER SET	MODE 3*	10 min.
	MODE 2	60 min.
	MODE 1	15 min.
		Sets interior room lamp battery saver timer operating time.

\* : Initial setting

## THEFT ALM

### THEFT ALM : CONSULT Function (BCM - THEFT)

INFOID:000000009693635

## DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.
ACC ON SW [On/Off]	Indicates condition of ignition switch ACC position.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

BCS

# DIAGNOSIS SYSTEM (BCM)

[WITHOUT INTELLIGENT KEY SYSTEM]

## < SYSTEM DESCRIPTION >

Monitor Item [Unit]	Description
KEY ON SW [On/Off]	Indicates condition of key switch.
KEYLESS LOCK [On/Off]	Indicates condition of lock signal from keyfob.
KEYLESS UNLOCK [On/Off]	Indicates condition of unlock signal from keyfob.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of back door switch.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.
TRANSPONDER [On/Off]	Indicates condition of transponder.
AUTO RELOCK [On/Off]	Indicates condition of auto relock function.

## ACTIVE TEST

Test Item	Description
FLASHER	This test is able to check turn signal lamp operation [Off/LH/RH].
THEFT IND	This test is able to check security indicator lamp operation [On/Off].
VEHICLE SECURITY HORN	This test is able to check vehicle security horn operation [On].
HEADLAMP(HI)	This test is able to check vehicle security lamp operation [On].

## WORK SUPPORT

Support Item	Setting	Description
SECURITY ALARM SET	On*	Security alarm ON.
	Off	Security alarm OFF.
THEFT ALM TRG	Off/On	The switch which triggered vehicle security alarm is recorded.
SECURITY ALARM SET (Siren)	Off	Security alarm OFF.
	On*	Security alarm ON.

\*: Initial setting

## RETAINED PWR

RETAINED PWR : CONSULT Function (BCM - RETAINED PWR)

INFOID:000000009724731

## DATA MONITOR

Monitor Item [Unit]	Description
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.

## SIGNAL BUFFER

SIGNAL BUFFER : CONSULT Function (BCM - SIGNAL BUFFER)

INFOID:000000009693636

## DATA MONITOR

Monitor Item [Unit]	Description
BRAKE SW [On/Off]	Indicates condition of stop lamp switch signal received from ABS actuator and electric unit (control unit) on CAN communication line.

## AIR PRESSURE MONITOR

# DIAGNOSIS SYSTEM (BCM)

[WITHOUT INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

## AIR PRESSURE MONITOR : CONSULT Function (BCM - AIR PRESSURE MONITOR)

INFOID:000000009693637

### NOTE:

The Signal Tech II Tool (J-50190) can be used to perform the following functions. Refer to the Signal Tech II User Guide for additional information.

- Activate and display TPMS transmitter IDs
- Display tire pressure reported by the TPMS transmitter
- Read TPMS DTCs
- Register TPMS transmitter IDs
- Test remote keyless entry keyfob relative signal strength

### SELF DIAGNOSTIC RESULT

#### NOTE:

Before performing self diagnostic result, be sure to register the ID, or else the actual malfunction may be different from that displayed on CONSULT.

Refer to [BCS-109, "DTC Index"](#).

### DATA MONITOR

Monitor Item [Unit]	Description
AIR PRESS FL [kPa, kg/cm <sup>2</sup> or Psi]	Indicates air pressure of front LH tire.
AIR PRESS FR [kPa, kg/cm <sup>2</sup> or Psi]	Indicates air pressure of front RH tire.
AIR PRESS RR [kPa, kg/cm <sup>2</sup> or Psi]	Indicates air pressure of rear RH tire.
AIR PRESS RL [kPa, kg/cm <sup>2</sup> or Psi]	Indicates air pressure of rear LH tire.
ID REGST FL1 [Done/Yet]	Indicates ID registration status of front LH transmitter.
ID REGST FR1 [Done/Yet]	Indicates ID registration status of front RH transmitter.
ID REGST RR1 [Done/Yet]	Indicates ID registration status of rear RH transmitter.
ID REGST RL1 [Done/Yet]	Indicates ID registration status of rear LH transmitter.
WARNING LAMP [Off/On]	Indicates condition of low tire pressure warning lamp in combination meter.
BUZZER [Off/On]	Indicates condition of buzzer in combination meter.

### ACTIVE TEST

Test Item	Description
HORN	This test is able to check horn operation [On].
WARNING LAMP	This test is able to check tire pressure warning lamp operation [On/Off].
ID REGIST WARNING	This test is able to check ID registration warning chime operation [On/Off].
FLASHER	This test is able to check turn signal lamp operation [Off/LH/RH].

### WORK SUPPORT

Support Item	Description
ID READ	The registered ID number is displayed.
ID REGIST	Refer to <a href="#">WT-22, "Description"</a> .

### PANIC ALARM

## PANIC ALARM : CONSULT Function (BCM - PANIC ALARM)

INFOID:000000009693638

### ACTIVE TEST

## DIAGNOSIS SYSTEM (BCM)

[WITHOUT INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

Test Item	Description
VEHICLE SECURITY HORN	This test is able to check panic alarm operation [On].
HEAD LAMP (HI)	This test is able to check head lamp HI operation [On].

# ECU DIAGNOSIS INFORMATION

## BCM

### Reference Value

INFOID:000000009693639

**NOTE:**

The Signal Tech II Tool (J-50190) can be used to perform the following functions. Refer to the Signal Tech II User Guide for additional information.

- Activate and display TPMS transmitter IDs
- Display tire pressure reported by the TPMS transmitter
- Read TPMS DTCs
- Register TPMS transmitter IDs
- Test remote keyless entry keyfob relative signal strength

### VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition	Value/Status
ACC SW	Ignition switch OFF	Off
	Ignition switch ACC or ON	On
ACC ON SW	Ignition switch OFF	Off
	Ignition switch ACC or ON	On
AIR COND SW	A/C switch OFF	Off
	A/C switch ON	On
AIR PRESS FL	Front left tire air pressure value	kPa, kg/cm <sup>2</sup> , psi
AIR PRESS FR	Front right tire air pressure value	kPa, kg/cm <sup>2</sup> , psi
AIR PRESS RL	Rear left tire air pressure value	kPa, kg/cm <sup>2</sup> , psi
AIR PRESS RR	Rear right tire air pressure value	kPa, kg/cm <sup>2</sup> , psi
BRAKE SW	Brake pedal released	Off
	Brake pedal depressed	On
BUZZER	Buzzer in combination meter OFF	Off
	Buzzer in combination meter ON	On
CDL LOCK SW	Door lock/unlock switch neutral	Off
	Door lock/unlock switch LOCK	On
CDL UNLOCK SW	Door lock/unlock switch neutral	Off
	Door lock/unlock switch UNLOCK	On
DOOR SW-AS	Passenger door closed	Off
	Passenger door open	On
DOOR SW-BK	Back door closed	Off
	Back door open	On
DOOR SW-DR	Driver's door closed	Off
	Driver's door open	On
DOOR SW-RL	Rear LH door closed	Off
	Rear LH door open	On
DOOR SW-RR	Rear RH door closed	Off
	Rear RH door open	On
ENGINE RUN	Engine stopped	Off
	Engine running	On

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

BCS

# BCM

## < ECU DIAGNOSIS INFORMATION >

## [WITHOUT INTELLIGENT KEY SYSTEM]

Monitor Item	Condition	Value/Status
FAN ON SIG	Blower fan OFF	Off
	Blower fan ON	On
FR FOG SW	Front fog lamp switch OFF	Off
	Front fog lamp switch ON	On
FR WASHER SW	Front washer switch OFF	Off
	Front washer switch ON	On
FR WIPER LOW	Front wiper switch OFF	Off
	Front wiper switch LO	On
FR WIPER HI	Front wiper switch OFF	Off
	Front wiper switch HI	On
FR WIPER INT	Front wiper switch OFF	Off
	Front wiper switch INT	On
FR WIPER STOP	Any position other than front wiper stop position	Off
	Front wiper stop position	On
HAZARD SW	Hazard switch OFF	Off
	Hazard switch ON	On
HEAD LAMP SW 1	Lighting switch OFF	Off
	Lighting switch 1ST	On
HEAD LAMP SW 2	Lighting switch OFF	Off
	Lighting switch 2ND	On
HI BEAM SW	Lighting switch OFF	Off
	Lighting switch HI	On
ID REGST FL1	ID registration of front left tire incomplete	Yet
	ID registration of front left tire complete	Done
ID REGST FR1	ID registration of front right tire incomplete	Yet
	ID registration of front right tire complete	Done
ID REGST RL1	ID registration of rear left tire incomplete	Yet
	ID registration of rear left tire complete	Done
ID REGST RR1	ID registration of rear right tire incomplete	Yet
	ID registration of rear right tire complete	Done
IGN ON SW	Ignition switch OFF or ACC	Off
	Ignition switch ON	On
IGN SW CAN	Ignition switch OFF or ACC	Off
	Ignition switch ON	On
INT VOLUME	Intermittent front wiper position	1 - 7
KEY CYL LK-SW	Key cylinder switch in N position	Off
	Key cylinder switch in LOCK position	On
KEY CYL UN-SW	Key cylinder switch in N position	Off
	Key cylinder switch in UNLOCK position	On
KEY ON SW	Key removed from ignition key cylinder	Off
	Key inserted into ignition key cylinder	On
KEYLESS LOCK	LOCK button of keyfob not pressed	Off
	LOCK button of keyfob pressed	On



# BCM

## < ECU DIAGNOSIS INFORMATION >

## [WITHOUT INTELLIGENT KEY SYSTEM]

Monitor Item	Condition	Value/Status
KEYLESS PANIC	PANIC button of keyfob not pressed	Off
	PANIC button of keyfob pressed	On
KEYLESS UNLOCK	UNLOCK button of keyfob not pressed	Off
	UNLOCK button of keyfob pressed	On
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
PKB SW	Parking brake released	Off
	Parking brake engaged	On
REAR DEF SW	Rear window defogger switch OFF	Off
	Rear window defogger switch ON	On
REVERSE SW CAN	Reverse switch OFF	Off
	Reverse switch ON	On
RR WASHER SW	Rear washer switch OFF	Off
	Rear washer switch ON	On
RR WIPER INT	Rear wiper switch OFF	Off
	Rear wiper switch INT	On
RR WIPER ON	Rear wiper switch OFF	Off
	Rear wiper switch ON	On
RR WIPER STOP	Any position other than rear wiper stop position	Off
	Rear wiper stop position	On
TAIL LAMP SW	Lighting switch OFF	Off
	Lighting switch 1ST	On
THERMO AMP	A/C and fan ON switch OFF	Off
	A/C and fan ON switch ON	On
TURN SIGNAL L	Turn signal switch OFF	Off
	Turn signal switch LH	On
TURN SIGNAL R	Turn signal switch OFF	Off
	Turn signal switch RH	On
VEHICLE SPEED	While driving, equivalent to speedometer reading	mph, km/h
WARNING LAMP	Low tire pressure warning lamp in combination meter OFF	Off
	Low tire pressure warning lamp in combination meter ON	On

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

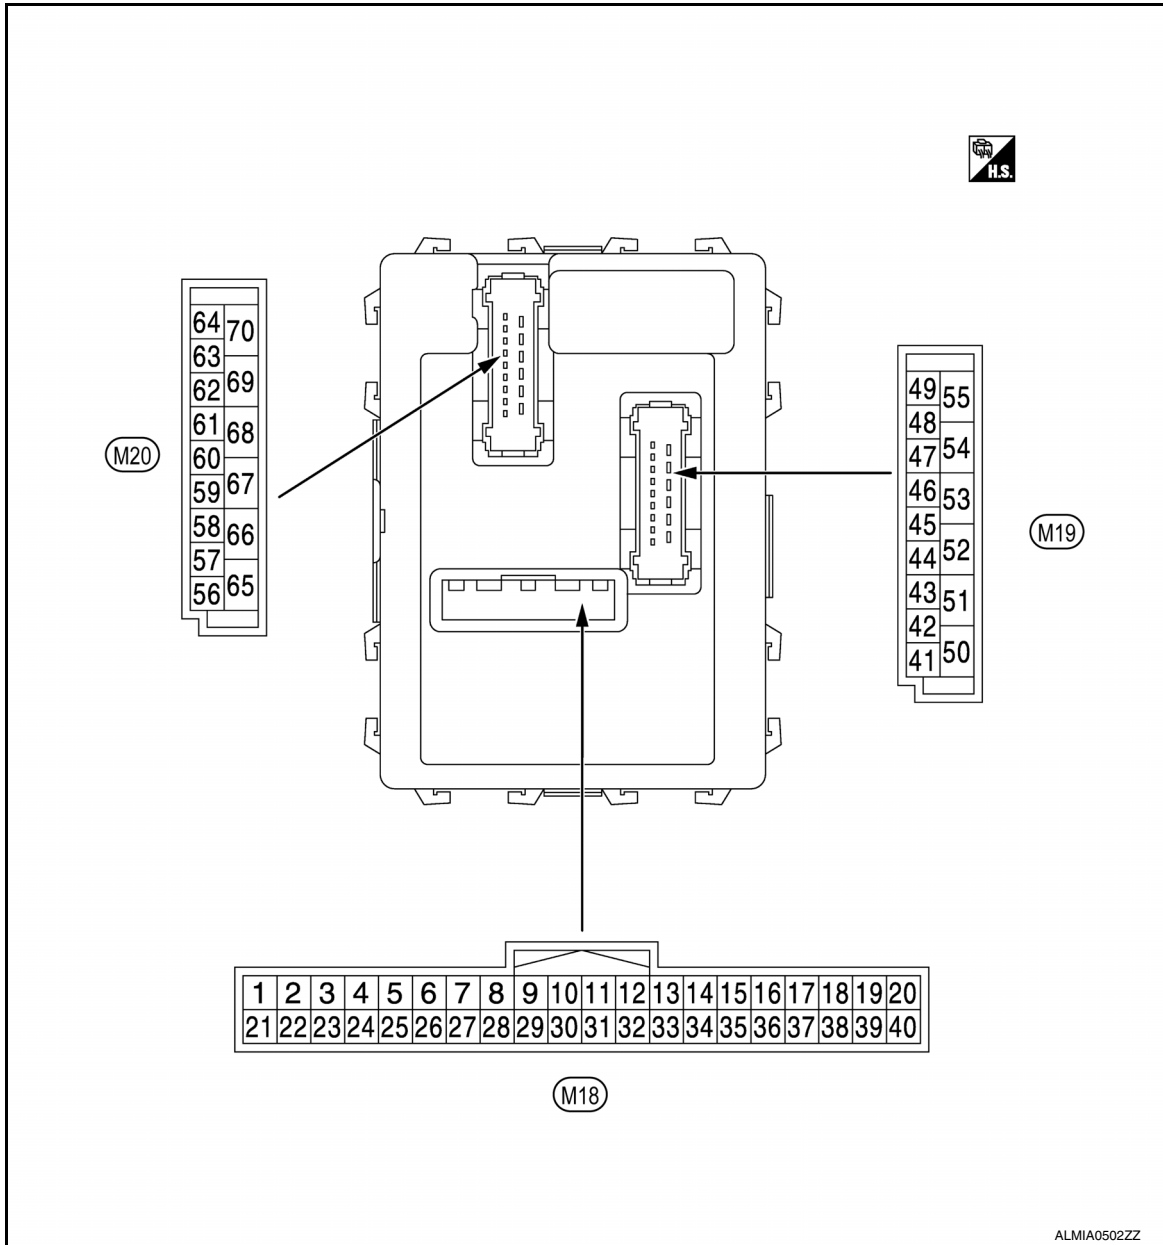
BCS

# BCM

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

## TERMINAL LAYOUT








## PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
2 (BR)	Ground	Input 5 signal	Input	Combination switch	0 V
				OFF	
				TURN RH	
				HEADLAMP 1	
				TAIL LAMP	1.0 V

# BCM

## < ECU DIAGNOSIS INFORMATION >
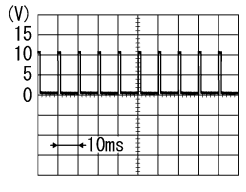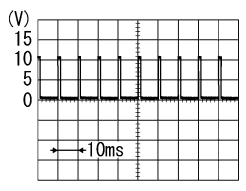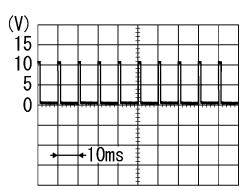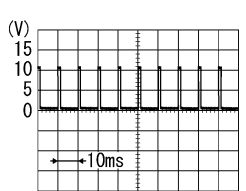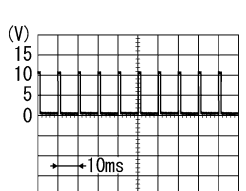
## [WITHOUT INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
3 <sup>1</sup> (Y)	Ground	Input 4 signal	Input	Combination switch	OFF	0 V
					TURN LH	
					PASSING	
					HEADLAMP 2	
					FR FOG	
3 <sup>2</sup> (Y)	Ground	Input 4 signal	Input	Combination switch	OFF	0 V
					TURN LH	
					PASSING	
					HEADLAMP 2	
4 <sup>1</sup> (L)	Ground	Input 3 signal	Input	Combination switch	OFF	0 V
					FR WIPER LOW	
					FR WIPER INT (any intermittent position)	
4 <sup>2</sup> (L)	Ground	Input 3 signal	Input	Combination switch	OFF	0 V
					FR WIPER LOW	
					FR WIPER INT	
5 <sup>1</sup> (G)	Ground	Input 2 signal	Input	Combination switch	OFF	0 V
					FR WASHER	
					RR WASHER	
					Wiper intermittent dial 1	
					Wiper intermittent dial 5	
					Wiper intermittent dial 6	
					RR WIPER ON	






A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

BCS

# BCM
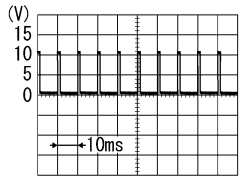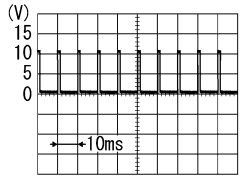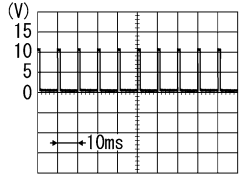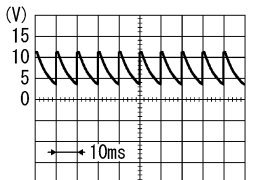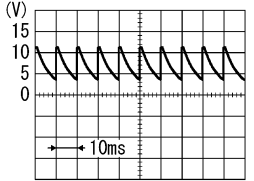
## < ECU DIAGNOSIS INFORMATION >




## [WITHOUT INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
5 <sup>2</sup> (G)	Ground	Input 2 signal	Input	Combination switch	OFF	0 V
					FR WASHER	
					RR WASHER	
					RR WIPER ON	
6 <sup>1</sup> (R)	Ground	Input 1 signal	Input	Combination switch	OFF	0 V
					FR WIPER HI	
					Wiper intermittent dial 1	
					Wiper intermittent dial 2	
					Wiper intermittent dial 3	
					Wiper intermittent dial 6	
					Wiper intermittent dial 7	
RR WIPER INT	1.0 V					
6 <sup>2</sup> (R)	Ground	Input 1 signal	Input	Combination switch	OFF	0 V
					FR WIPER HI	
					RR WIPER INT	
7 (W)	Ground	Key cylinder unlock sw signal	Input	Key cylinder switch	N position	 7.0 - 8.0 V
					UNLOCK position	0 V
8 (GR)	Ground	Key cylinder lock sw signal	Input	Key cylinder switch	N position	 7.0 - 8.0 V
					LOCK position	0 V
9 (LG)	Ground	Brake sw 1 signal	Input	Stop lamp switch	OFF (brake pedal re- leased)	0 V
					ON (brake pedal de- pressed)	Battery voltage

# BCM
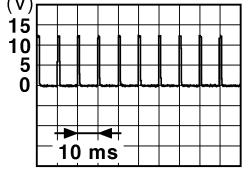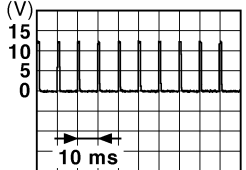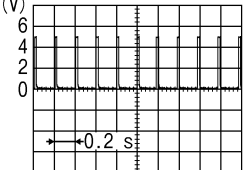
## < ECU DIAGNOSIS INFORMATION >

## [WITHOUT INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	-					
10 (G)	Ground	Rear defogger sw signal	Input	Rear window defogger switch	OFF	Battery voltage
					ON	0 V
11 (L)	Ground	ACC switch signal	Input	Ignition switch	OFF	0 V
					ACC or ON	Battery voltage
12 (GR)	Ground	Central door lock sw signal	Input	Door lock and unlock switch	N position	 1.0 - 1.5 V
					LOCK position	0 V
13 (BR)	Ground	Central door unlock sw signal	Input	Door lock and unlock switch	N position	 1.0 - 1.5 V
					UNLOCK position	0 V
18 (V)	Ground	Keyless gnd signal	Input	Ignition switch ON		0 V
19 (LG)	Ground	Keyless tuner power supply	Input	Ignition switch OFF	Key inserted into ignition key cylinder	0 V
					Key removed from ignition key cylinder (Any door open)	5 V
					Key removed from ignition key cylinder (Any door closed)	





A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

BCS

# BCM
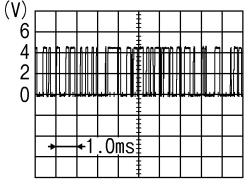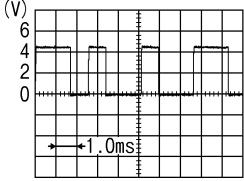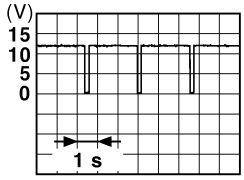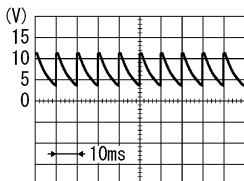
## < ECU DIAGNOSIS INFORMATION >





## [WITHOUT INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
20 (G)	Ground	Keyless tuner signal	Input	Ignition switch OFF	Key inserted into ignition key cylinder	0 V
					Waiting	 <p style="text-align: right; font-size: small;">PIIB7728J</p>
					Signal receiving	 <p style="text-align: right; font-size: small;">PIIB7729J</p>
21 (P)	Ground	Immobilizer one way communication (clock) signal	Input/ Output	While waiting	Turn ignition switch ON.	Turn ignition switch ON: Pointer of tester should move.
23 (R/Y)	Ground	Security indicator output signal	Input	Security indica- tor	ON	0 V
					Blinking (Ignition switch OFF)	 <p style="text-align: right; font-size: small;">JPMIA0014GB</p>
					OFF	11.3 V  Battery voltage
24 (SB)	Ground	Audio/dongle link (serial) signal	Input/ Output	Ignition switch OFF.		5 V
25 (LG)	Ground	Immobilizer two way communication sig- nal	Input/ Output	While waiting	Turn ignition switch ON.	Turn ignition switch ON: Pointer of tester should move.
26 (O)	Ground	THERMO amp. sig- nal	Input	Push-button ig- nition switch ON and blower fan switch ON	A/C switch OFF	Battery voltage
					A/C switch ON	0 V
27 (V)	Ground	Air conditioner switch signal	Input	A/C switch	OFF	9V - 12V
					ON	0 V
28 (SB)	Ground	Blower fan sw signal	Input	Fan switch	OFF	0 V
					I, II, III or IIII	 <p style="text-align: right; font-size: small;">PKIB4960J</p>
					7.0 - 8.0 V	

# BCM
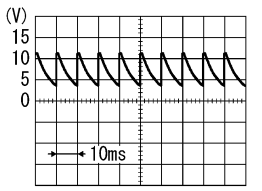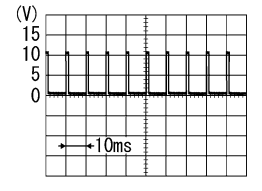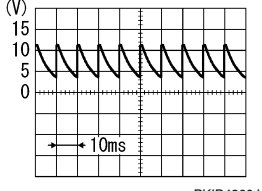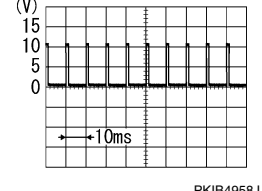
## < ECU DIAGNOSIS INFORMATION >

## [WITHOUT INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	-					
29 (O)	Ground	Hazard sw signal	Input	Hazard switch	OFF	Battery voltage
					ON	0 - 1.5 V
31 (LG)	Ground	Front defrost switch	Input	—		—
32 <sup>1</sup> (P)	Ground	Output 5 signal	Output	Combination switch	OFF	 <p style="text-align: right; font-size: small;">PKIB4960J</p> <p style="text-align: center;">7.0 - 8.0 V</p>
					FR FOG	 <p style="text-align: right; font-size: small;">PKIB4958J</p> <p style="text-align: center;">1.2 V</p>
					RR WIPER ON	
					Wiper intermittent dial 1	
					Wiper intermittent dial 2	
					Wiper intermittent dial 6	
Wiper intermittent dial 7						
32 <sup>2</sup> (P)	Ground	Output 5 signal	Output	Combination switch	OFF	 <p style="text-align: right; font-size: small;">PKIB4960J</p> <p style="text-align: center;">7.0 - 8.0 V</p>
					RR WIPER ON	 <p style="text-align: right; font-size: small;">PKIB4958J</p> <p style="text-align: center;">1.2 V</p>






A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

BCS

# BCM
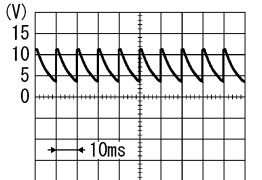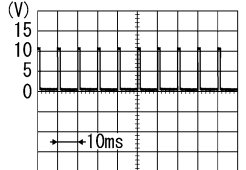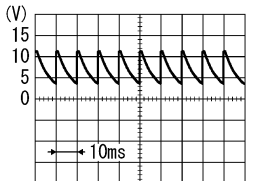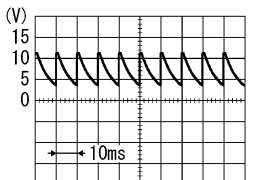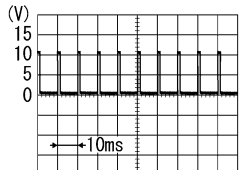
## < ECU DIAGNOSIS INFORMATION >

## [WITHOUT INTELLIGENT KEY SYSTEM]







Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
						Signal name
+	-					
33 <sup>1</sup> (V)	Ground	Output 4 signal	Output	Combination switch	OFF	 <p style="text-align: right; font-size: small;">PKIB4960J</p>
					TAIL LAMP	 <p style="text-align: right; font-size: small;">PKIB4958J</p>
					Wiper intermittent dial 1	
					Wiper intermittent dial 5	
				RR WIPER INT	1.2 V	
33 <sup>2</sup> (V)	Ground	Output 4 signal	Output	Combination switch	OFF	 <p style="text-align: right; font-size: small;">PKIB4960J</p>
					TAIL LAMP	RR WIPER INT
34 <sup>1</sup> (W)	Ground	Output 3 signal	Output	Combination switch	OFF	 <p style="text-align: right; font-size: small;">PKIB4960J</p>
					HI BEAM	 <p style="text-align: right; font-size: small;">PKIB4958J</p>
					HEADLAMP 2	
					RR WASHER	
					Wiper intermittent dial 1	
					Wiper intermittent dial 2	
	Wiper intermittent dial 3	1.2 V				



# BCM
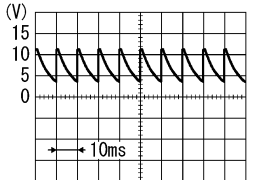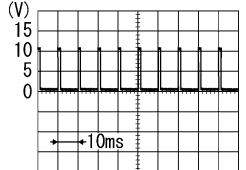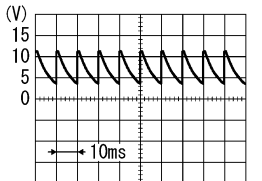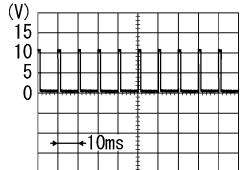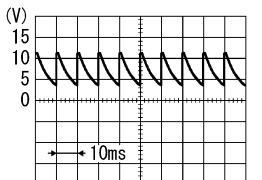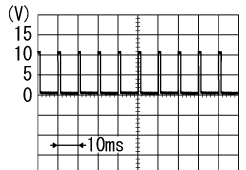
## < ECU DIAGNOSIS INFORMATION >

## [WITHOUT INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
34 <sup>2</sup> (W)	Ground	Output 3 signal	Output	Combination switch	OFF	 <small>PKIB4960J</small> 7.0 - 8.0 V
					HI BEAM	 <small>PKIB4958J</small> 1.2 V
					HEADLAMP 2	
				RR WASHER		
35 <sup>1</sup> (GR)	Ground	Output 2 signal	Output	Combination switch	OFF	 <small>PKIB4960J</small> 7.0 - 8.0 V
					FR WIPER HI	 <small>PKIB4958J</small> 1.2 V
					FR WIPER INT (any intermittent position)	
					PASSING	
				HEADLAMP 1		
35 <sup>2</sup> (GR)	Ground	Output 2 signal	Output	Combination switch	OFF	 <small>PKIB4960J</small> 7.0 - 8.0 V
					FR WIPER HI	 <small>PKIB4958J</small> 1.2 V
					FR WIPER INT	
					PASSING	
				HEADLAMP 1		



A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

BCS

# BCM
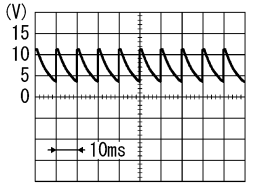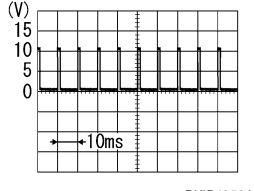
## < ECU DIAGNOSIS INFORMATION >





## [WITHOUT INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
36 (LG)	Ground	Output 1 signal	Output	Combination switch	OFF	 7.0 - 8.0 V
					FR WASHER	 1.2 V
					FR WIPER LOW	
					TURN LH	
					TURN RH	
37 (Y)	Ground	Key sw signal	Input	Ignition switch	Ignition key inserted into ignition key cylinder	Battery voltage
					Ignition key removed from ignition key cylinder	0 V
38 (O)	Ground	Ign sw signal	Input	Ignition switch	OFF or ACC	0 V
					ON or START	Battery voltage
39 (L)	Ground	CAN-H signal	Input/ Output	—		—
40 (P)	Ground	CAN-L signal	Input/ Output	—		—
41 (G)	Ground	Door unlock output (DR) signal	Output	Front door lock actuator LH	Actuated to UNLOCK po- sition	Battery voltage
					Other than actuated to UNLOCK position	0 V
42 (Y)	Ground	Battery (FUSE)	Input	Ignition switch OFF		Battery voltage
43 (W)	Ground	Battery saver output signal	Output	Interior room lamp battery saver activated		0 V
				Interior room lamp battery saver not activat- ed		Battery voltage
44 (GR)	Ground	Rear defogger relay output signal	Input	Rear window defogger switch	OFF	Battery voltage
					ON	0 - 0.5 V
45 (R)	Ground	Room lamp output signal	Output	Interior room lamp or map lamp	OFF	Battery voltage
					ON	Battery voltage
					DOOR	0 - 1 V
48 (L)	Ground	A/C indicator	Input	—		—
50 (G)	Ground	Battery (F/L)	Input	Ignition switch OFF		Battery voltage
52 (L)	Ground	Power window power supply (RAP) sig- nal	Output	Ignition switch ON		Battery voltage

# BCM
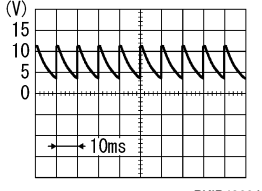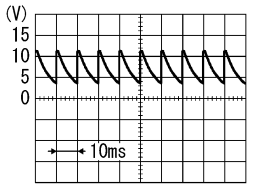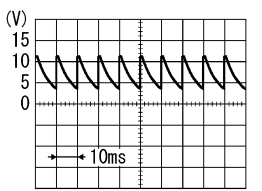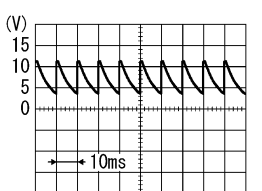
< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
53 (G)	Ground	Door unlock output (AS, RR, RL) signal	Output	Front door lock actuator RH, rear door lock actuator RH and rear door lock actuator LH	Actuated to UNLOCK po- sition	Battery voltage
					Other than actuated to UNLOCK position	0 V
54 (SB)	Ground	Door lock output sig- nal	Output	All door lock ac- tuators	Actuated to LOCK posi- tion	Battery voltage
					Other than actuated to LOCK position	0 V
55 (B)	Ground	Gnd	Output	Ignition switch ON		0 V
56 (LG)	Ground	Rear wiper output	Output	Rear wiper	OFF (stopped)	0V
					ON (activated)	Battery voltage
57 (LG)	Ground	Door sw (RR) signal	Input	Rear door switch RH	OFF (rear door RH closed)	 7.0 - 8.0 V
					ON (rear door RH open)	0 V
58 (W)	Ground	Door sw (RL) signal	Input	Rear door switch LH	OFF (rear door LH closed)	 7.0 - 8.0 V
					ON (rear door LH open)	0 V
59 (SB)	Ground	Door sw (DR) signal	Input	Front door switch LH	OFF (front door LH closed)	 7.0 - 8.0 V
					ON (front door LH open)	0 V
60 (O)	Ground	Door sw (AS) signal	Input	Front door switch RH	OFF (front door RH closed)	 7.0 - 8.0 V
					ON (front door RH open)	0 V




A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

BCS

# BCM
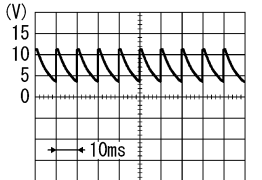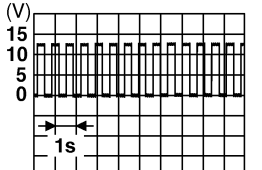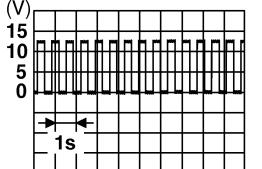
## < ECU DIAGNOSIS INFORMATION >

## [WITHOUT INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
62 (P)	Ground	Door switch (Back) signal	Input	Back door switch	OFF (back door closed)	 <small>PKIB4960J</small> 7.0 - 8.0 V
					ON (back door open)	0 V
63 (W)	Ground	Flasher output (RIGHT) signal	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch RH	 <small>PKIC6370E</small> 6.5 V (Turn signal lamp turn on: 9 - 16 V)
64 (V)	Ground	Flasher output (LEFT) signal	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch LH	 <small>PKIC6370E</small> 6.5 V (Turn signal lamp turn on: 9 - 16 V)
68 (R)	Ground	Rear wiper autostop switch	Input	Push-button ig- nition switch ON	Rear wiper stop position	Battery voltage
					Any position other than rear wiper stop position	0V
70 (L)	Ground	Cargo lamp output signal	Output	Back door	Closed (cargo lamp OFF)	Battery voltage
					Open (cargo lamp ON)	0 - 1 V

<sup>1</sup>: With variable intermittent wipers

<sup>2</sup>: Without variable intermittent wipers

### Fail-safe

INFOID:000000009693640

### FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC are detected.

Display contents of CONSULT	Fail-safe	Cancellation
B2190: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC

# BCM

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

Display contents of CONSULT	Fail-safe	Cancellation
B2195: ANTI SCANNING	Inhibit engine cranking	Ignition switch ON → OFF
B2196: DONGLE NG	Inhibit engine cranking	Erase DTC

## FAIL-SAFE CONTROL OF COMBINATION SWITCH READING FUNCTION CAUSED BY LOW POWER SUPPLY VOLTAGE

If voltage of battery power supply lower, BCM maintains combination switch reading to the status when input voltage is less than approximately 9 V.

### NOTE:

When voltage of battery power supply is approximately 9 V or more, combination switch reading function returns to normal operation.

## DTC Inspection Priority Chart

INFOID:000000009693641

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	<ul style="list-style-type: none"> <li>U1000: CAN COMM</li> <li>U1010: CONTROL UNIT (CAN)</li> </ul>
2	<ul style="list-style-type: none"> <li>B2190: NATS ANTENNA AMP</li> <li>B2191: DIFFERENCE OF KEY</li> <li>B2192: ID DISCORD BCM-ECM</li> <li>B2193: CHAIN OF BCM-ECM</li> <li>B2195: ANTI SCANNING</li> <li>B2196: DONGLE NG</li> </ul>
3	<ul style="list-style-type: none"> <li>C1704: LOW PRESSURE FL</li> <li>C1705: LOW PRESSURE FR</li> <li>C1706: LOW PRESSURE RR</li> <li>C1707: LOW PRESSURE RL</li> <li>C1708: [NO DATA] FL</li> <li>C1709: [NO DATA] FR</li> <li>C1710: [NO DATA] RR</li> <li>C1711: [NO DATA] RL</li> <li>C1716: [PRESS DATA ERR] FL</li> <li>C1717: [PRESS DATA ERR] FR</li> <li>C1718: [PRESS DATA ERR] RR</li> <li>C1719: [PRESS DATA ERR] RL</li> <li>C1729: VHCL SPEED SIG ERR</li> </ul>

## DTC Index

INFOID:000000009693642

### NOTE:

- Details of time display
- CRNT: Displays when there is a malfunction now or after returning to the normal condition until turning ignition switch OFF → ON again.
- 1 - 39: Displayed if any previous malfunction is present when current condition is normal. It increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The counter remains at 39 even if the number of cycles exceeds it. It is counted from 1 again when turning ignition switch OFF → ON after returning to the normal condition if the malfunction is detected again.

CONSULT display	Fail-safe	Tire pressure monitor warning lamp ON	Reference
U1000: CAN COMM	—	—	<a href="#">BCS-118</a>
U1010: CONTROL UNIT (CAN)	—	—	<a href="#">BCS-119</a>
B2190: NATS ANTENNA AMP	×	—	<a href="#">SEC-167</a>
B2191: DIFFERENCE OF KEY	×	—	<a href="#">SEC-170</a>
B2192: ID DISCORD BCM-ECM	×	—	<a href="#">SEC-171</a>
B2193: CHAIN OF BCM-ECM	×	—	<a href="#">SEC-173</a>

**BCM**

&lt; ECU DIAGNOSIS INFORMATION &gt;

**[WITHOUT INTELLIGENT KEY SYSTEM]**

CONSULT display	Fail-safe	Tire pressure monitor warning lamp ON	Reference
B2195: ANTI SCANNING	×	—	<a href="#">SEC-174</a>
B2196: DONGLE NG	×	—	<a href="#">SEC-175</a>
C1704: LOW PRESSURE FL	—	×	<a href="#">WT-25</a>
C1705: LOW PRESSURE FR	—	×	
C1706: LOW PRESSURE RR	—	×	
C1707: LOW PRESSURE RL	—	×	
C1708: [NO DATA] FL	—	×	<a href="#">WT-26</a>
C1709: [NO DATA] FR	—	×	
C1710: [NO DATA] RR	—	×	
C1711: [NO DATA] RL	—	×	
C1716: [PRESS DATA ERR] FL	—	×	<a href="#">WT-28</a>
C1717: [PRESS DATA ERR] FR	—	×	
C1718: [PRESS DATA ERR] RR	—	×	
C1719: [PRESS DATA ERR] RL	—	×	
C1729: VHCL SPEED SIG ERR	—	×	<a href="#">WT-29</a>

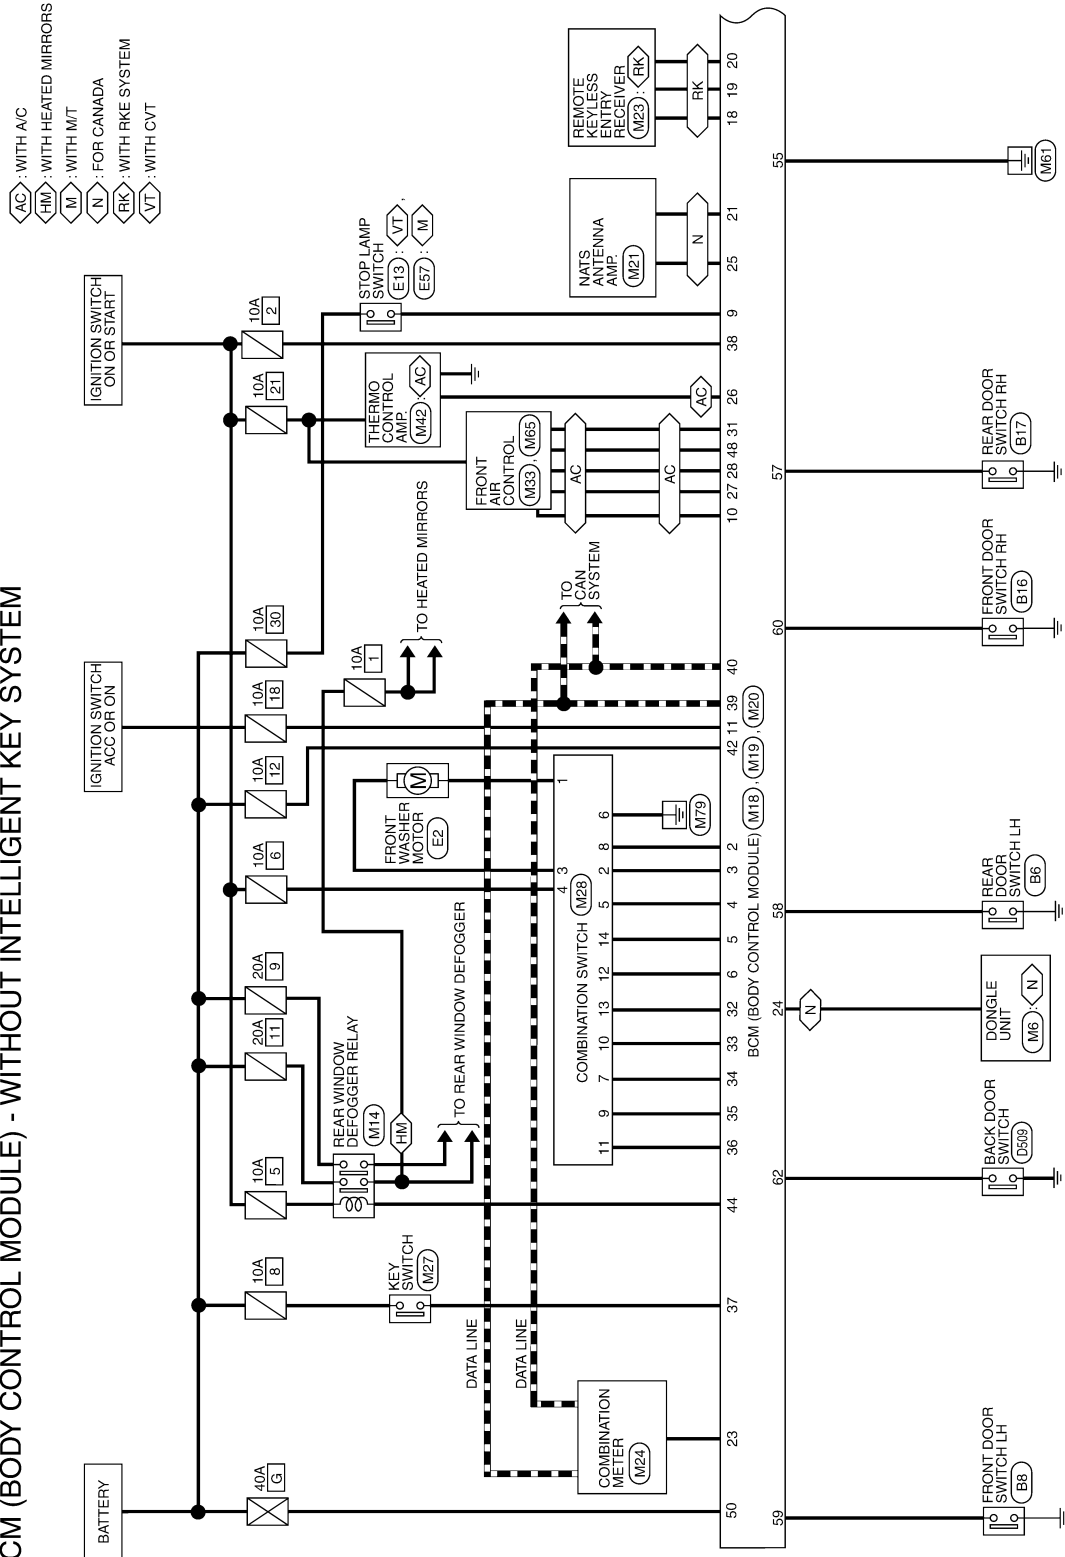
# WIRING DIAGRAM

## BCM

### Wiring Diagram

INFOID:000000009693643


#### BCM (BODY CONTROL MODULE) - WITHOUT INTELLIGENT KEY SYSTEM



AAMWA0799GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

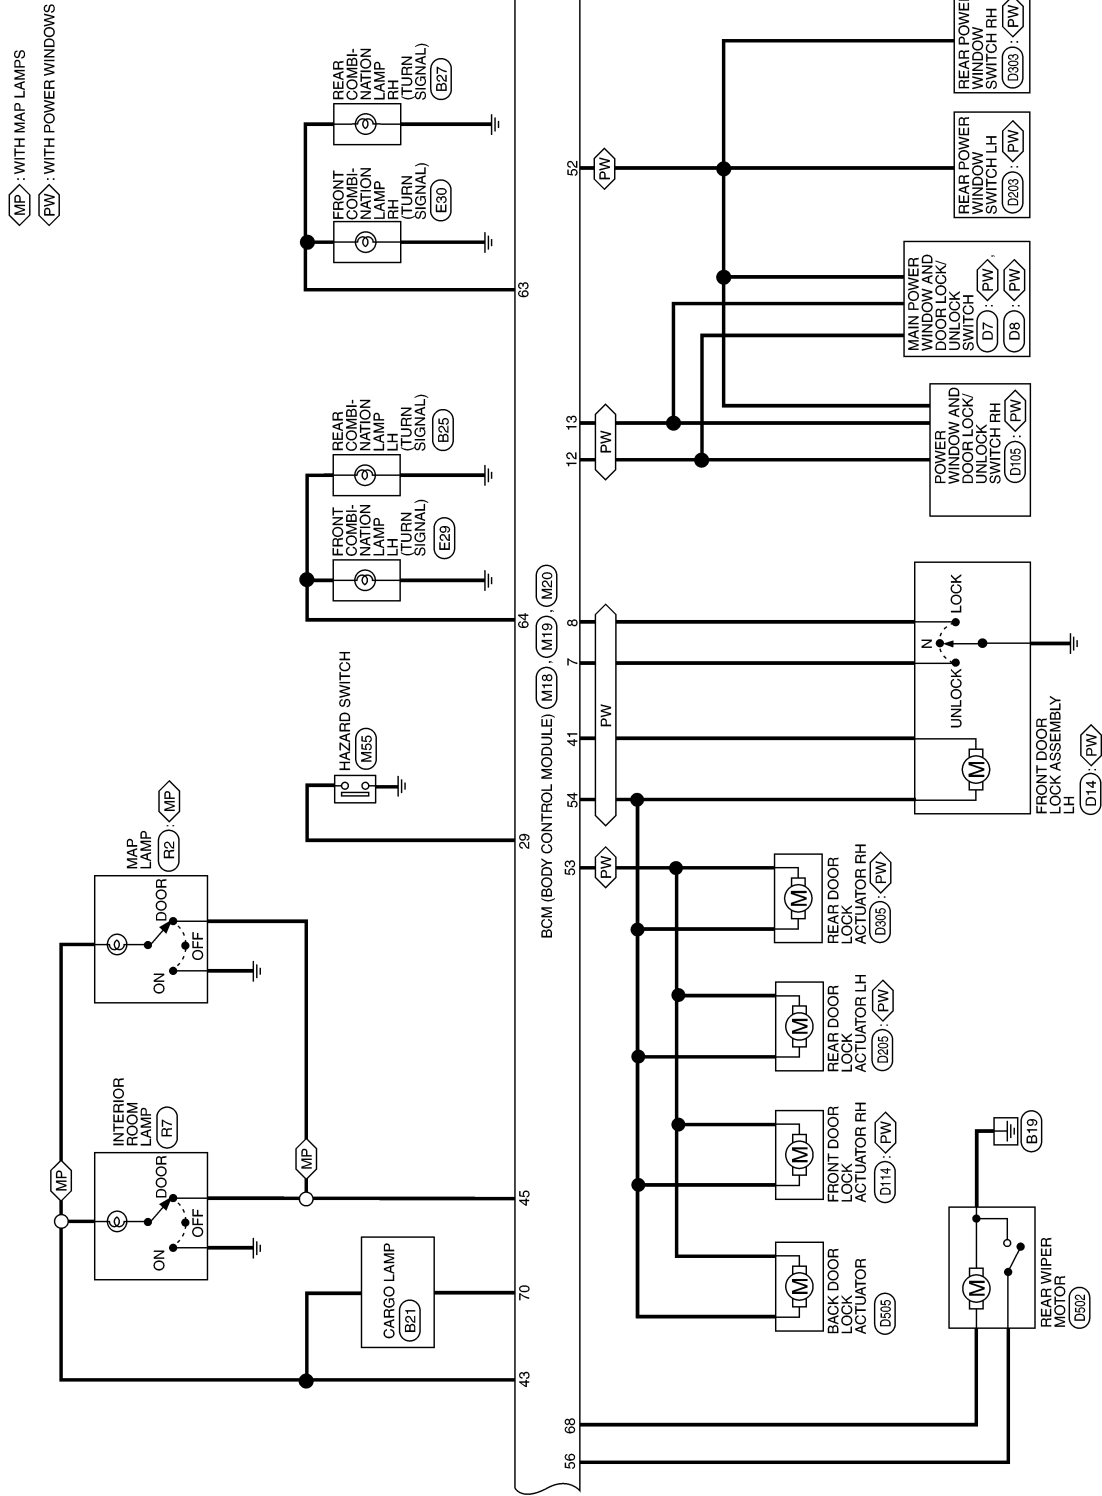BCS



AAMWA0800GB



BCM (BODY CONTROL MODULE) CONNECTORS - WITHOUT INTELLIGENT KEY SYSTEM

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY SYSTEM)
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name
1	-	-
2	BR	COMBINATION SW INPUT 5
3	Y	COMBINATION SW INPUT 4
4	L	COMBINATION SW INPUT 3
5	G	COMBINATION SW INPUT 2
6	R	COMBINATION SW INPUT 1
7	W	KEY CYLINDER UNLOCK SW
8	GR	KEY CYLINDER LOCK SW
9	LG	BRAKE SW 1
10	G	REAR DEFOGGER SW
11	L	ACC SW
12	GR	CENTRAL DOOR LOCK SW
13	BR	CENTRAL DOOR UNLOCK SW
14	-	-
15	-	-

Terminal No.	Color of Wire	Signal Name
16	-	-
17	-	-
18	V	KEYLESS & AUTO LIGHT SENSOR GND
19	LG	KEYLESS TUNER POWER SUPPLY
20	G	KEYLESS TUNER SIGNAL
21	P	IMMOBILIZER ONE WAY COMMUNICATION (CLOCK)
22	-	-
23	R/Y	SECURITY INDICATOR OUTPUT
24	SB	AUDIO/DONGLE LINK (SERIAL)
25	LG	IMMOBILIZER TWO WAY COMMUNICATION
26	O	THERMO AMP
27	V	AIR CON SW
28	SB	BLOWER FAN SW
29	O	HAZARD SW
30	-	-
31	-	-
32	P	COMBINATION SW INPUT 5
33	V	COMBINATION SW INPUT 4
34	W	COMBINATION SW INPUT 3
35	GR	COMBINATION SW INPUT 2
36	LG	COMBINATION SW INPUT 1
37	Y	KEY SW
38	O	IGN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY SYSTEM)
Connector Color	WHITE




41	42	43	44	46	47	48	49	50	51	52	53	54	55
----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color of Wire	Signal Name
41	G	DOOR UNLOCK OUTPUT (DR)
42	Y	BATTERY (FUSE)
43	W	BATTERY SAVER OUTPUT
44	GR	REAR DEFOGGER RELAY OUTPUT
45	R	ROOM LAMP OUTPUT
46	-	-
47	SB	DOOR SW (DR)
48	L	AIR CON INDICATOR OUTPUT
49	-	-
50	G	BATTERY (F/L)
51	-	-
52	L	POWER WINDOW POWER SUPPLY (RAP)
53	G	DOOR UNLOCK OUTPUT (AS, RR, RL)
54	SB	DOOR LOCK OUTPUT
55	B	GND

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P




Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	O	-
2	Y	-
5	L	-
6	B	-
7	W	-
8	BR	-
9	GR	-
10	V	-
11	LG	-
12	R	-
13	P	-
14	G	-

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY SYSTEM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
56	LG	REAR WIPER MOTOR
57	LG	DOOR SW (RR)
58	W	DOOR SW (RL)
59	SB	DOOR SW (DR)
60	O	DOOR SW (AS)
61	-	-
62	P	DOOR SW (BACK)
63	W	FLASHER OUTPUT (RIGHT)
64	V	FLASHER OUTPUT (LEFT)
65	-	-
66	-	-
67	-	-
68	R	REAR WIPER AUTO STOP SW
69	-	-
70	L	LUGGAGE LAMP OUTPUT

AAMIA1739GB

## ADDITIONAL SERVICE WHEN REPLACING BCM

< BASIC INSPECTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

# BASIC INSPECTION

## ADDITIONAL SERVICE WHEN REPLACING BCM

### Description

INFOID:000000009693685

#### BEFORE REPLACEMENT

When replacing BCM, save or print current vehicle specification with CONSULT configuration before replacement.

#### NOTE:

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual selection" after replacing BCM.

#### AFTER REPLACEMENT

#### CAUTION:

When replacing BCM, always perform "WRITE CONFIGURATION" with CONSULT. Or not doing so, BCM control function does not operate normally.

- Complete the procedure of "WRITE CONFIGURATION" in order.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.
- If you set incorrect "WRITE CONFIGURATION", incidents might occur.

#### NOTE:

When replacing BCM, perform the system initialization (NATS) (if equipped).

### Work Procedure

INFOID:000000009693686

#### 1. SAVING VEHICLE SPECIFICATION

##### ⓂCONSULT Configuration

Perform "READ CONFIGURATION" to save or print current vehicle specification. Refer to [BCS-116. "Description"](#).

#### NOTE:

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual selection" after replacing BCM.

>> GO TO 2.

#### 2. REPLACE BCM

Replace BCM. Refer to [BCS-127. "Removal and Installation"](#).

>> GO TO 3.

#### 3. WRITING VEHICLE SPECIFICATION

##### ⓂCONSULT Configuration

Perform "WRITE CONFIGURATION - Config file" or "WRITE CONFIGURATION - Manual selection" to write vehicle specification. Refer to [BCS-116. "Work Procedure"](#).

>> GO TO 4.

#### 4. INITIALIZE BCM (NATS) (IF EQUIPPED)

Perform BCM initialization. (NATS)

>> WORK END

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

BCS

## CONFIGURATION (BCM)

### Description

INFOID:000000009693687

Vehicle specification needs to be written with CONSULT because it is not written after replacing BCM. Configuration has three functions as follows.

Function	Description
READ CONFIGURATION	<ul style="list-style-type: none"> <li>• Reads the vehicle configuration of current BCM.</li> <li>• Saves the read vehicle configuration.</li> </ul>
WRITE CONFIGURATION - Manual selection	Writes the vehicle configuration with manual selection.
WRITE CONFIGURATION - Config file	Writes the vehicle configuration with saved data.

**NOTE:**

Manual setting item: Items which need selection by vehicle specifications

Automatic setting item: Items which are written in automatically (Setting can not be changed)

For some models and specifications, the automatic setting item may not be displayed.

**CAUTION:**

**When replacing BCM, always perform "WRITE CONFIGURATION" with CONSULT. Or not doing so, BCM control function does not operate normally.**

- Complete the procedure of "WRITE CONFIGURATION" in order.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.
- Never perform "WRITE CONFIGURATION" except for new BCM.
- If you set incorrect "WRITE CONFIGURATION", incidents might occur.

### Work Procedure

INFOID:000000009693688

#### 1. WRITING MODE SELECTION

ⓐCONSULT Configuration

Select "CONFIGURATION" of BCM.

When writing saved data>>GO TO 2.

When writing manually>>GO TO 3.

#### 2. PERFORM "WRITE CONFIGURATION - CONFIG FILE"

ⓐCONSULT Configuration

Perform "WRITE CONFIGURATION - Config file".

>> WORK END

#### 3. PERFORM "WRITE CONFIGURATION - MANUAL SELECTION"

ⓐCONSULT Configuration

1. Select "WRITE CONFIGURATION - Manual selection".
2. Identify the correct model and configuration list. Refer to [BCS-117, "Configuration List"](#).
3. Confirm and/or change setting value for each item.

**CAUTION:**

**Thoroughly read and understand the vehicle specification. ECU control may not operate normally if the setting is not correct.**

**NOTE:**

If items are not displayed, touch "SETTING". Refer to [BCS-117, "Configuration List"](#) for written items and setting value.

4. Select "SETTING".

**CAUTION:**

**Make sure to select "SETTING" even if the indicated configuration of brand new BCM is same as the desirable configuration. If not, configuration which is set automatically by selecting vehicle model can not be memorized.**

5. When "COMMAND FINISHED", select "END".

# CONFIGURATION (BCM)

[WITHOUT INTELLIGENT KEY SYSTEM]

< BASIC INSPECTION >

>> GO TO 4.

## 4. OPERATION CHECK

Confirm that each function controlled by BCM operates normally.

>> WORK END

## Configuration List

INFOID:000000009693689

### CAUTION:

Thoroughly read and understand the vehicle specification. ECU control may not operate normally if the setting is not correct.

SETTING ITEM		NOTE
Items	Setting value	
I-KEY SYS FREQUENCY TYPE	MODE1	—
TRANSIT MODE	WITH	—
STOP/START SYSTEM	MODE1	—
AUTO LIGHT	WITH ⇔ WITHOUT	—
BLOWE FAN SIG	MODE1 ⇔ MODE2	<ul style="list-style-type: none"><li>• MODE1: With automatic air conditioner</li><li>• MODE2: With manual air conditioner</li></ul>

⇔: Items which confirm vehicle specifications

BCS

# U1000 CAN COMM

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

## DTC/CIRCUIT DIAGNOSIS

### U1000 CAN COMM

#### Description

INFOID:000000009693649

Refer to [LAN-6, "CAN COMMUNICATION SYSTEM : System Description"](#).

#### DTC Logic

INFOID:000000009693650

#### DTC DETECTION LOGIC

##### NOTE:

U1000 can be set if a module harness was disconnected and reconnected, perhaps during a repair. Confirm that there are actual CAN diagnostic symptoms and a present DTC by performing the Self Diagnostic Result procedure.

CONSULT Display	DTC Detection Condition	Possible Cause
CAN COMM CIRCUIT [U1000]	When any listed module cannot communicate with CAN communication signal continuously for 2 seconds or more with ignition switch ON	In CAN communication system, any item (or items) of the following listed below is malfunctioning. <ul style="list-style-type: none"><li>• Transmission</li><li>• Receiving (ECM)</li><li>• Receiving (VDC/TCS/ABS)</li><li>• Receiving (METER/M&amp;A)</li><li>• Receiving (TCM)</li><li>• Receiving (IPDM E/R)</li></ul>

#### Diagnosis Procedure

INFOID:000000009693651

### 1. PERFORM SELF DIAGNOSTIC RESULT

1. Turn ignition switch ON and wait for 2 second or more.
2. Check "SELF- DIAG RESULTS".

Is "CAN COMM CIRCUIT" displayed?

- YES >> Perform CAN Diagnosis as described in DIAGNOSIS section of CONSULT Operation Manual.  
NO >> Refer to [GI-41, "Intermittent Incident"](#).

# U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

## U1010 CONTROL UNIT (CAN)

### DTC Logic

INFOID:000000009693652

### DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
CONTROL UNIT (CAN) [U1010]	BCM detected internal CAN communication circuit malfunction.	BCM

### Diagnosis Procedure

INFOID:000000009693653

#### 1. REPLACE BCM

When DTC "U1010" is detected, replace BCM.

>> Replace BCM. Refer to [BCS-70. "Removal and Installation"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

BCS

N  
O  
P

# POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

## POWER SUPPLY AND GROUND CIRCUIT

### Diagnosis Procedure

INFOID:000000009693654

Regarding Wiring Diagram information, refer to [BCS-111. "Wiring Diagram"](#).

### 1. CHECK FUSES AND FUSIBLE LINK

Check that the following fuses and fusible link are not blown.

Terminal No.	Signal name	Fuses and fusible link No.
37	Battery power supply	8 (10A)
42		12 (10A)
50		G (40A)
11	Ignition switch ACC or ON	18 (10A)
38	Ignition switch ON or START	2 (10A)

#### Is the fuse blown?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit.

NO >> GO TO 2.

### 2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM connector and ground.

BCM		Ground	Ignition switch position		
Connector	Terminal		OFF	ACC	ON
M18	11	—	0 V	Battery voltage	Battery voltage
	37		Battery voltage		
	38		0 V	0 V	
M19	42		Battery voltage	Battery voltage	
	50				

#### Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

### 3. CHECK GROUND CIRCUIT

Check continuity between BCM connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M19	55	—	Yes

#### Is the inspection result normal?

YES >> Inspection End.

NO >> Repair harness or connector.



# COMBINATION SWITCH INPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

## COMBINATION SWITCH INPUT CIRCUIT

### Diagnosis Procedure

INFOID:000000009693655

Regarding Wiring Diagram information, refer to [BCS-111, "Wiring Diagram"](#).

### 1. CHECK INPUT 1 - 5 CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect BCM and combination switch connectors.
3. Check continuity between BCM connector and combination switch connector.

Combination switch signal	BCM		Combination switch		Continuity
	Connector	Terminal	Connector	Terminal	
INPUT 1	M18	36	M28	11	Yes
INPUT 2		35		9	
INPUT 3		34		7	
INPUT 4		33		10	
INPUT 5		32		13	

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair harness or connectors.

### 2. CHECK INPUT 1 - 5 CIRCUIT FOR SHORT

Check for continuity between BCM connector and ground.

Combination switch signal	BCM		Ground	Continuity
	Connector	Terminal		
INPUT 1	M18	36		No
INPUT 2		35		
INPUT 3		34		
INPUT 4		33		
INPUT 5		32		

Is the inspection result normal?

- YES >> Repair harness or connectors.  
NO >> GO TO 3.

### 3. CHECK BCM OUTPUT VOLTAGE

1. Connect BCM connector.
2. Check voltage between BCM connector and ground.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

BCS

# COMBINATION SWITCH INPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

BCM signal	Terminals		Voltage	
	(+)			(-)
	BCM			Ground
	Connector	Terminal		
OUTPUT 1	M18	36	Refer to <a href="#">BCS-95, "Reference Value"</a> .	
OUTPUT 2		35		
OUTPUT 3		34		
OUTPUT 4		33		
OUTPUT 5		32		

Is the inspection result normal?

YES >> Replace combination switch.

NO >> Replace BCM. Refer to [BCS-70, "Removal and Installation"](#).

# COMBINATION SWITCH OUTPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

## COMBINATION SWITCH OUTPUT CIRCUIT

### Diagnosis Procedure

INFOID:000000009693656

Regarding Wiring Diagram information, refer to [BCS-111, "Wiring Diagram"](#).

### 1. CHECK OUTPUT 1 - 5 CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect BCM and combination switch connectors.
3. Check continuity between BCM connector and combination switch connector.

Combination switch signal	BCM		Combination switch		Continuity
	Connector	Terminal	Connector	Terminal	
OUTPUT 1	M18	6	M28	12	Yes
OUTPUT 2		5		14	
OUTPUT 3		4		5	
OUTPUT 4		3		2	
OUTPUT 5		2		8	

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair harness or connectors.

### 2. CHECK OUTPUT 1 - 5 CIRCUIT FOR SHORT

Check for continuity between BCM connector and ground.

Combination switch signal	BCM		Ground	Continuity
	Connector	Terminal		
OUTPUT 1	M18	6		No
OUTPUT 2		5		
OUTPUT 3		4		
OUTPUT 4		3		
OUTPUT 5		2		

Is the inspection result normal?

YES >> Repair harness or connectors.

NO >> GO TO 3.

### 3. CHECK BCM INPUT SIGNAL

1. Connect BCM and combination switch connectors.
2. Turn ON any switch in the system that is malfunctioning.
3. Check voltage between BCM connector and ground.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

BCS

# COMBINATION SWITCH OUTPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

BCM signal	Terminals		Voltage	
	(+)			(-)
	BCM			
	Connector	Terminal		
INPUT 1	M18	6	Ground	
INPUT 2		5		
INPUT 3		4		
INPUT 4		3		
INPUT 5		2		

Is the inspection result normal?

- Yes >> Replace BCM. Refer to [BCS-70. "Removal and Installation"](#).
- No >> Replace combination switch.

# COMBINATION SWITCH SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

## SYMPTOM DIAGNOSIS

### COMBINATION SWITCH SYSTEM SYMPTOMS

#### Symptom Table

INFOID:000000009693657

#### WITH VARIABLE INTERMITTENT FRONT WIPERS

1. Perform the data monitor of CONSULT to check for any malfunctioning item.
2. Check the malfunction combinations.

Malfunction item: x

Malfunction combination	Data monitor item															
	FR WIPER HI	FR WIPER LOW	FR WASHER SW	FR WIPER INT	INT VOLUME	RR WIPER ON	RR WIPER INT	RR WASHER SW	TURN SIGNAL R	TURN SIGNAL L	TAIL LAMP SW	HI BEAM SW	HEAD LAMP SW 1	HEAD LAMP SW 2	PASSING SW	FR FOG SW
A		x	x						x	x						
B	x			x									x		x	
C					x		x					x		x		
D					x		x				x					
E					x	x										x
F	x				x		x									
G			x		x	x		x								
H		x		x												
I										x				x	x	x
J									x		x	x	x			
K	All Items															
L	If only one item is detected or the item is not applicable to the combinations A to K															

3. Identify the malfunctioning part from the agreed combination and repair or replace the part.

Malfunction combination	Malfunctioning part	Repair or replace
A	Combination switch INPUT 1 circuit	Inspect the combination switch input circuit applicable to the malfunctioning part. Refer to <a href="#">BCS-121, "Diagnosis Procedure"</a> .
B	Combination switch INPUT 2 circuit	
C	Combination switch INPUT 3 circuit	
D	Combination switch INPUT 4 circuit	
E	Combination switch INPUT 5 circuit	
F	Combination switch OUTPUT 1 circuit	Inspect the combination switch output circuit applicable to the malfunctioning part. Refer to <a href="#">BCS-123, "Diagnosis Procedure"</a> .
G	Combination switch OUTPUT 2 circuit	
H	Combination switch OUTPUT 3 circuit	
I	Combination switch OUTPUT 4 circuit	
J	Combination switch OUTPUT 5 circuit	
K	BCM	Replace BCM. Refer to <a href="#">BCS-127, "Removal and Installation"</a> .
L	Combination switch	Replace the combination switch. Refer to <a href="#">BCS-128, "Removal and Installation"</a> .

#### WITHOUT VARIABLE INTERMITTENT FRONT WIPERS

1. Perform the data monitor of CONSULT to check for any malfunctioning item.

# COMBINATION SWITCH SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

2. Check the malfunction combinations.

Malfunction item: ×

Malfunction combination	Data monitor item													
	FR WIPER HI	FR WIPER LOW	FR WASHER SW	FR WIPER INT	RR WIPER ON	RR WIPER INT	RR WASHER SW	TURN SIGNAL R	TURN SIGNAL L	TAIL LAMP SW	HI BEAM SW	HEAD LAMP SW 1	HEAD LAMP SW 2	PASSING SW
A		×	×					×	×					
B	×			×								×		×
C							×				×		×	
D						×				×				
E					×									
F	×					×								
G			×		×		×							
H		×		×										
I								×					×	×
J							×			×	×	×		
K	All Items													
L	If only one item is detected or the item is not applicable to the combinations A to K													

3. Identify the malfunctioning part from the agreed combination and repair or replace the part.

Malfunction combination	Malfunctioning part	Repair or replace
A	Combination switch INPUT 1 circuit	Inspect the combination switch input circuit applicable to the malfunctioning part. Refer to <a href="#">BCS-121, "Diagnosis Procedure"</a> .
B	Combination switch INPUT 2 circuit	
C	Combination switch INPUT 3 circuit	
D	Combination switch INPUT 4 circuit	
E	Combination switch INPUT 5 circuit	
F	Combination switch OUTPUT 1 circuit	Inspect the combination switch output circuit applicable to the malfunctioning part. Refer to <a href="#">BCS-123, "Diagnosis Procedure"</a> .
G	Combination switch OUTPUT 2 circuit	
H	Combination switch OUTPUT 3 circuit	
I	Combination switch OUTPUT 4 circuit	
J	Combination switch OUTPUT 5 circuit	
K	BCM	Replace BCM. Refer to <a href="#">BCS-127, "Removal and Installation"</a> .
L	Combination switch	Replace the combination switch. Refer to <a href="#">BCS-128, "Removal and Installation"</a> .

# BCM (BODY CONTROL MODULE)

< REMOVAL AND INSTALLATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

## REMOVAL AND INSTALLATION

### BCM (BODY CONTROL MODULE)

#### Removal and Installation

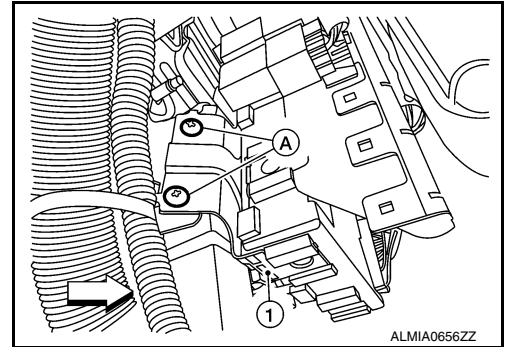
INFOID:000000009693690

#### REMOVAL

##### **CAUTION:**

Before replacing BCM, perform "READ CONFIGURATION" to save or print current vehicle specification. Refer to [BCS-116, "Description"](#).

1. Disconnect negative and positive battery terminals, then wait at least three minutes. Refer to [PG-67, "Removal and Installation \(Battery\)"](#).
2. Remove instrument lower panel LH. Refer to [IP-24, "Removal and Installation"](#).
3. Remove screws (A) and remove the BCM (1) from the steering member and position aside.  
⇐: Front
4. Disconnect the harness connectors from the BCM.
5. Remove relays from relay bracket.
6. Remove relay bracket from BCM to transfer to new BCM.



#### INSTALLATION

Installation is in the reverse order of removal.

##### **CAUTION:**

- Perform "CONFIGURATION (BCM)" when replacing BCM. Refer to [BCS-116, "Description"](#).
- Make sure to perform the system initialization (NATS) (if equipped) when replacing BCM. Refer to [BCS-115, "Work Procedure"](#).
- When replacing BCM, if new BCM does not come with keyfobs attached, all existing keyfobs must be re-registered.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

BCS

N  
O  
P

# COMBINATION SWITCH

< REMOVAL AND INSTALLATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

## COMBINATION SWITCH

### Removal and Installation

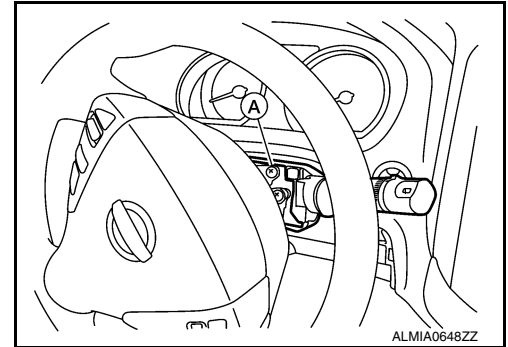
INFOID:000000009693691

#### CAUTION:


- Before servicing, turn the ignition switch OFF, disconnect both battery terminals and wait at least three minutes.
- Do not use air or electric tools when removing or installing the combination switch.

#### REMOVAL

1. Disconnect the negative and positive battery terminals, then wait at least three minutes. Refer to [PG-67, "Removal and Installation \(Battery\)"](#).
2. Remove the steering column covers. Refer to [IP-17, "Removal and Installation"](#).
3. Rotate steering wheel clockwise to access first combination switch screw (A) and remove.



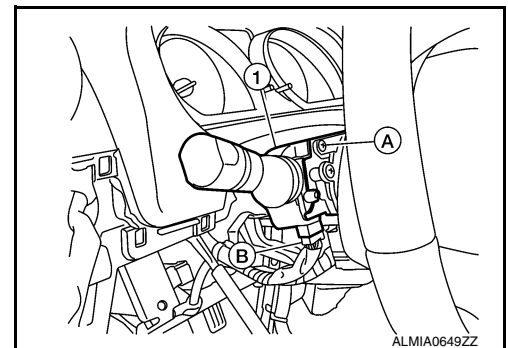4. Rotate steering wheel counter-clockwise to access second combination switch screw (A) and remove.
5. Disconnect the harness connector (B) from the combination switch (1) and remove.



#### INSTALLATION

Installation is in the reverse order of removal.

#### CAUTION:

- After the work is completed, make sure no system malfunction is detected by air bag warning lamp.
- In case a malfunction is detected by the air bag warning lamp, reset with the self-diagnosis function and delete the memory with CONSULT.
- If a malfunction is still detected after the above operation, perform self-diagnosis to repair malfunctions. Refer to [BCS-115, "Work Procedure"](#).