

WT
SECTION
ROAD WHEELS & TIRES

A
B
C
D

WT

CONTENTS

| | | |
|---|--|--|
| <p>BASIC INSPECTION 3</p> <p>DIAGNOSIS AND REPAIR WORKFLOW 3</p> <p style="padding-left: 20px;">Repair Work Flow3</p> <p>INSPECTION AND ADJUSTMENT 5</p> <p style="padding-left: 20px;">Preliminary Check5</p> <p style="padding-left: 20px;">Transmitter Wake Up Operation5</p> <p style="padding-left: 20px;">ID Registration Procedure6</p> <p>FUNCTION DIAGNOSIS 8</p> <p>TPMS 8</p> <p style="padding-left: 20px;">System Diagram8</p> <p style="padding-left: 20px;">System Description8</p> <p style="padding-left: 20px;">System Component10</p> <p>DIAGNOSIS SYSTEM (BCM)11</p> <p style="padding-left: 20px;">CONSULT-III Function (BCM)11</p> <p style="padding-left: 20px;">Self-Diagnosis (Without CONSULT-III)12</p> <p>COMPONENT DIAGNOSIS14</p> <p>C1708 - C1711 DATA FROM TRANSMITTER NOT BEING RECEIVED14</p> <p style="padding-left: 20px;">Description14</p> <p style="padding-left: 20px;">DTC Logic14</p> <p style="padding-left: 20px;">Diagnosis Procedure14</p> <p style="padding-left: 20px;">Special Repair Requirement15</p> <p>C1712 - C1715, C1720 - C1723, C1724 - C1727 TRANSMITTER MALFUNCTION16</p> <p style="padding-left: 20px;">Description16</p> <p style="padding-left: 20px;">DTC Logic16</p> <p style="padding-left: 20px;">Diagnosis Procedure16</p> <p style="padding-left: 20px;">Special Repair Requirement17</p> <p>C1716 - C1719 TRANSMITTER PRESSURE MALFUNCTION18</p> <p style="padding-left: 20px;">Description18</p> <p style="padding-left: 20px;">DTC Logic18</p> <p style="padding-left: 20px;">Diagnosis Procedure18</p> | <p style="padding-left: 20px;">Special Repair Requirement18</p> <p>C1729 VEHICLE SPEED SIGNAL19</p> <p style="padding-left: 20px;">Description19</p> <p style="padding-left: 20px;">DTC Logic19</p> <p style="padding-left: 20px;">Diagnosis Procedure19</p> <p style="padding-left: 20px;">Special Repair Requirement19</p> <p>C1735 IGNITION SIGNAL20</p> <p style="padding-left: 20px;">Description20</p> <p style="padding-left: 20px;">DTC Logic20</p> <p style="padding-left: 20px;">Diagnosis Procedure20</p> <p style="padding-left: 20px;">Special Repair Requirement20</p> <p>ECU DIAGNOSIS21</p> <p>BCM (BODY CONTROL MODULE)21</p> <p style="padding-left: 20px;">Reference Value21</p> <p style="padding-left: 20px;">Terminal Layout24</p> <p style="padding-left: 20px;">Physical Values24</p> <p style="padding-left: 20px;">Wiring Diagram - TIRE PRESSURE MONITORING SYSTEM -30</p> <p style="padding-left: 20px;">Self-Diagnosis (With CONSULT-III)32</p> <p style="padding-left: 20px;">Self-Diagnosis (Without CONSULT-III)33</p> <p>SYMPTOM DIAGNOSIS35</p> <p>TPMS35</p> <p style="padding-left: 20px;">Symptom Table35</p> <p>LOW TIRE PRESSURE WARNING LAMP DOES NOT TURN ON36</p> <p style="padding-left: 20px;">Low Tire Pressure Warning Lamp Does Not Come On When Ignition Switch Is Turned On36</p> <p>LOW TIRE PRESSURE WARNING LAMP STAYS ON37</p> <p style="padding-left: 20px;">Low Tire Pressure Warning Lamp Stays On When Ignition Switch Is Turned On37</p> <p>LOW TIRE PRESSURE WARNING LAMP BLINKS38</p> | <p>F G H I J K L M N O P</p> |
|---|--|--|

| | | | |
|--|-----------|---|-----------|
| Low Tire Pressure Warning Lamp Flashes When Ignition Switch Is Turned On | 38 | NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING | 43 |
| HAZARD WARNING LAMPS FLASH | 39 | NVH Troubleshooting Chart | 43 |
| Hazard Warning Lamps Flash When Ignition Switch Is Turned On | 39 | ON-VEHICLE MAINTENANCE | 44 |
| ID REGISTRATION CANNOT BE COMPLETED | 40 | WHEEL | 44 |
| ID Registration Cannot Be Completed | 40 | Inspection | 44 |
| PRECAUTION | 41 | ON-VEHICLE REPAIR | 45 |
| PRECAUTIONS | 41 | WHEEL AND TIRE ASSEMBLY | 45 |
| Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" | 41 | Balancing Wheels | 45 |
| Precaution for work | 41 | Rotation | 46 |
| PREPARATION | 42 | REMOVAL AND INSTALLATION | 48 |
| PREPARATION | 42 | REMOVAL AND INSTALLATION | 48 |
| Special Service Tool | 42 | Transmitter (Pressure Sensor) | 48 |
| Commercial Service Tool | 42 | SERVICE DATA AND SPECIFICATIONS (SDS) | 50 |
| SYMPTOM DIAGNOSIS | 43 | SERVICE DATA AND SPECIFICATIONS (SDS) | 50 |
| | | Road Wheel | 50 |
| | | Tire | 50 |

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Repair Work Flow

INFOID:000000005266473

WORK FLOW

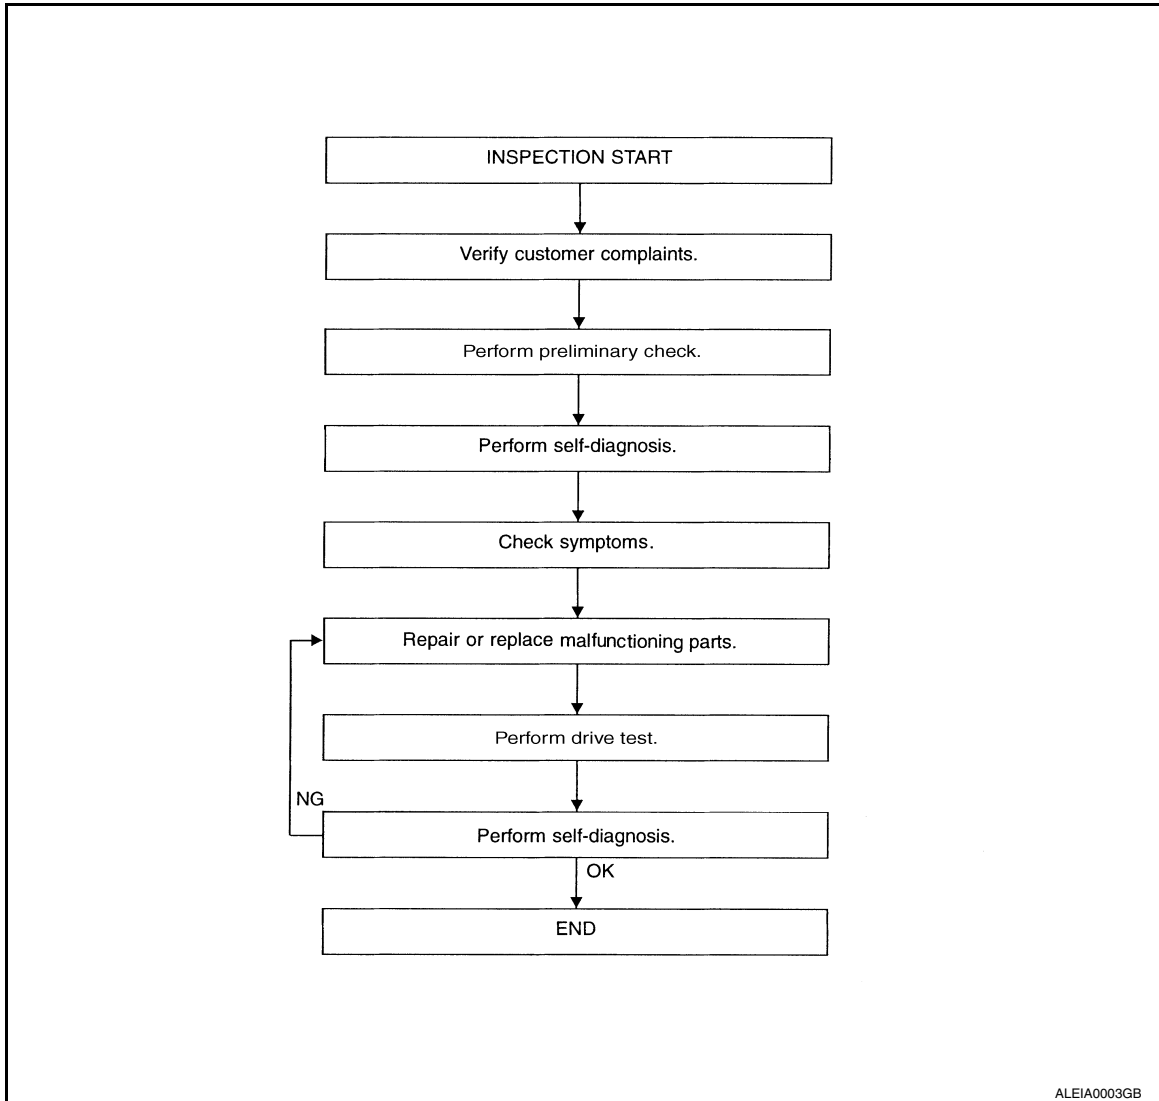

[WT-5. "Preliminary Check"](#)

[WT-32. "Self-Diagnosis \(With CONSULT-III\)"](#)
[WT-33. "Self-Diagnosis \(Without CONSULT-III\)"](#)

[WT-35. "Symptom Table"](#)

DETAILED FLOW

1. CUSTOMER INFORMATION

Interview the customer to obtain detailed information about the symptom.

>> GO TO 2

2. PRELIMINARY CHECK

Perform preliminary check. Refer to [WT-5. "Preliminary Check"](#).

>> GO TO 3

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WT

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

3.SELF-DIAGNOSIS

Perform SELF-DIAGNOSIS. Refer to [WT-32. "Self-Diagnosis \(With CONSULT-III\)"](#) or [WT-33. "Self-Diagnosis \(Without CONSULT-III\)"](#).

>> GO TO 4

4.SYMPTOM

Check for symptoms. Refer to [WT-35. "Symptom Table"](#).

>> GO TO 5

5.MALFUNCTIONING PARTS

Repair or replace the applicable parts.

>> GO TO 6

6.DRIVE TEST

1. Perform a drive test.
2. Check the low tire pressure warning lamp.

>> GO TO 7

7.SELF-DIAGNOSIS

Perform SELF-DIAGNOSIS. Refer to [WT-32. "Self-Diagnosis \(With CONSULT-III\)"](#) or [WT-33. "Self-Diagnosis \(Without CONSULT-III\)"](#).

Are any DTC's displayed?

- YES >> GO TO 5
NO >> Inspection End.

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

INSPECTION AND ADJUSTMENT

Preliminary Check

INFOID:000000005266474

1. TIRE PRESSURE

Check all tire pressures. Refer to [WT-50, "Tire"](#).

Do tire pressures match specification?

- YES >> GO TO 2.
- NO >> Adjust tire pressures to specified value.

2. LOW TIRE PRESSURE WARNING LAMP

Check low tire pressure warning lamp activation.

Does the low tire pressure warning lamp activate for one second when ignition switch is turned ON?

- YES >> GO TO 3.
- NO >> GO TO [WT-36, "Low Tire Pressure Warning Lamp Does Not Come On When Ignition Switch Is Turned On"](#).

3. BCM CONNECTOR

1. Disconnect BCM harness connectors.
2. Check terminals for damage or loose connections.
3. Reconnect harness connectors.

Are BCM connectors damaged or loose?

- YES >> Repair or replace damaged parts.
- NO >> GO TO 4.

4. TRANSMITTER ACTIVATION TOOL

Check battery in transmitter activation tool.

Is transmitter activation tool battery fully charged?

- YES >> Perform self-diagnosis. Refer to [WT-32, "Self-Diagnosis \(With CONSULT-III\)"](#) or [WT-33, "Self-Diagnosis \(Without CONSULT-III\)"](#).
- NO >> Replace battery in transmitter activation tool.

Transmitter Wake Up Operation


INFOID:000000005266475

NOTE:

This procedure must be done after replacement of a low tire pressure warning transmitter or BCM. New replacement transmitters are provided asleep and must first be woken up using Transmitter Activation Tool J-45295 before ID registration can be performed.

1. Turn ignition switch ON. Push the transmitter activation tool against the tire near the front left transmitter. Press the button for 5 seconds. The hazard warning lamps flash per the following diagram.

Tool number : (J-45295)

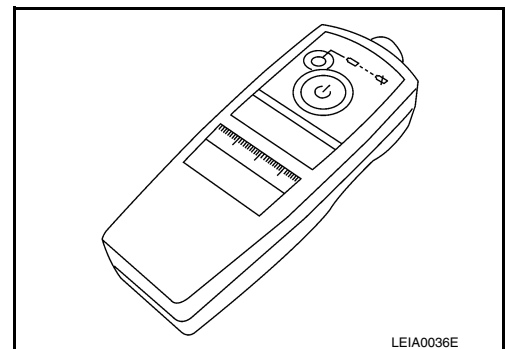


2. Repeat this procedure for each tire in the following order: FL, FR, RR, RL.

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

- When the BCM finishes assigning each tire ID, the BCM flashes the hazard warning lamps and sends flashing indicator status by CAN according to the following time chart.

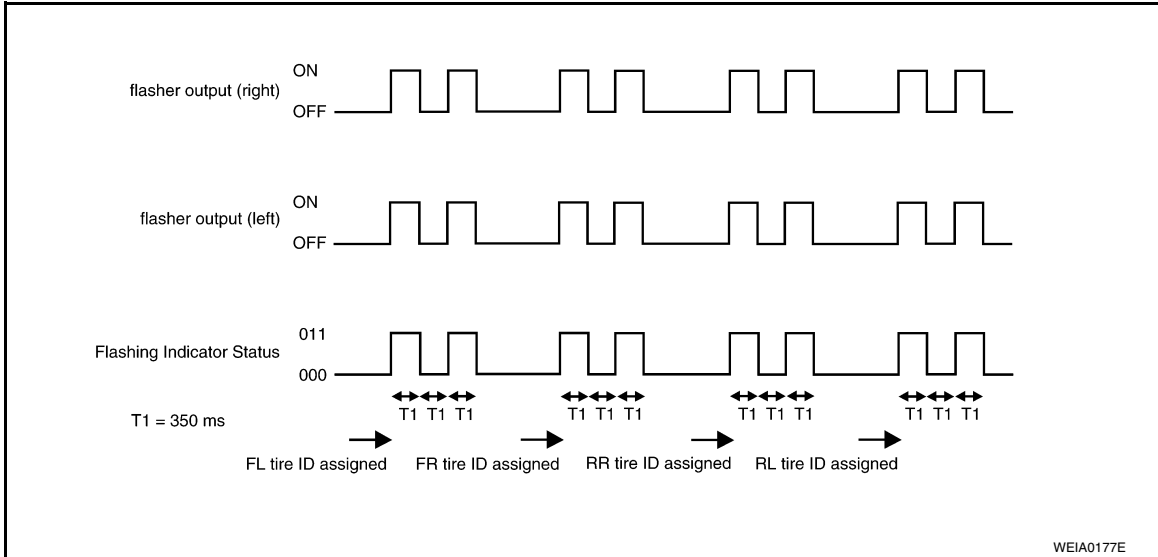

- After completing wake up of all transmitters, make sure low tire pressure warning lamp goes out.

ID Registration Procedure

INFOID:000000005266476


ID REGISTRATION WITH TRANSMITTER ACTIVATION TOOL

NOTE:

This procedure must be done after replacement of a low tire pressure warning transmitter or BCM. New replacement transmitters are provided asleep and must first be woken up using Transmitter Activation Tool J-45295 before ID registration can be performed.

- Connect CONSULT-III.
- Select ID REGIST under BCM.
- Push the transmitter activation tool against the tire near the front left transmitter. Press the button for 5 seconds.

Tool number : (J-45295)

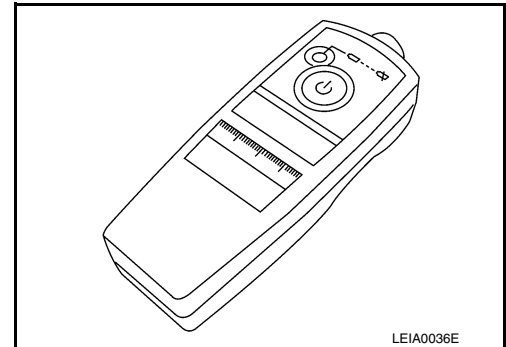

- Register the IDs in order from FR LH, FR RH, RR RH and RR LH. When ID registration of each wheel has been completed, the hazard warning lamps flash.

| Step | Activation tire position | Hazard warning lamp | CONSULT-III |
|------|--------------------------|---------------------|------------------|
| 1 | Front LH | 2 times flashing | YET ↓ DONE |
| 2 | Front RH | | |
| 3 | Rear RH | | |
| 4 | Rear LH | | |

- After completing all ID registrations, press END to complete the procedure.

NOTE:

Be sure to register all of the IDs in order from FR LH, FR RH, RR RH, to RR LH, or the self-diagnostic results display will not function properly.

ID REGISTRATION WITHOUT TRANSMITTER ACTIVATION TOOL

NOTE:

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

This procedure must be done after replacement of a low tire pressure warning transmitter or BCM. New replacement transmitters are provided asleep and must first be woken up using Transmitter Activation Tool J-45295 before ID registration can be performed.

1. Connect CONSULT-III.
2. Select ID REGIST under BCM.
3. Adjust the tire pressures to the values shown in the table and drive the vehicle at 40 km/h (25 MPH) or more for a few minutes.

| Tire position | Tire pressure kPa (kg/cm ² , psi) |
|---------------|--|
| Front LH | 250 (2.5, 36) |
| Front RH | 230 (2.3, 33) |
| Rear RH | 210 (2.1, 30) |
| Rear LH | 190 (1.9, 27) |

4. After completing all ID registrations, press END to complete the procedure.

| Activation tire position | CONSULT-III |
|--------------------------|------------------|
| Front LH | YET ↓ DONE |
| Front RH | |
| Rear RH | |
| Rear LH | |

5. Inflate all tires to proper pressure. Refer to [WT-50, "Tire"](#).

TPMS


< FUNCTION DIAGNOSIS >

FUNCTION DIAGNOSIS

TPMS

System Diagram

INFOID:000000005266477

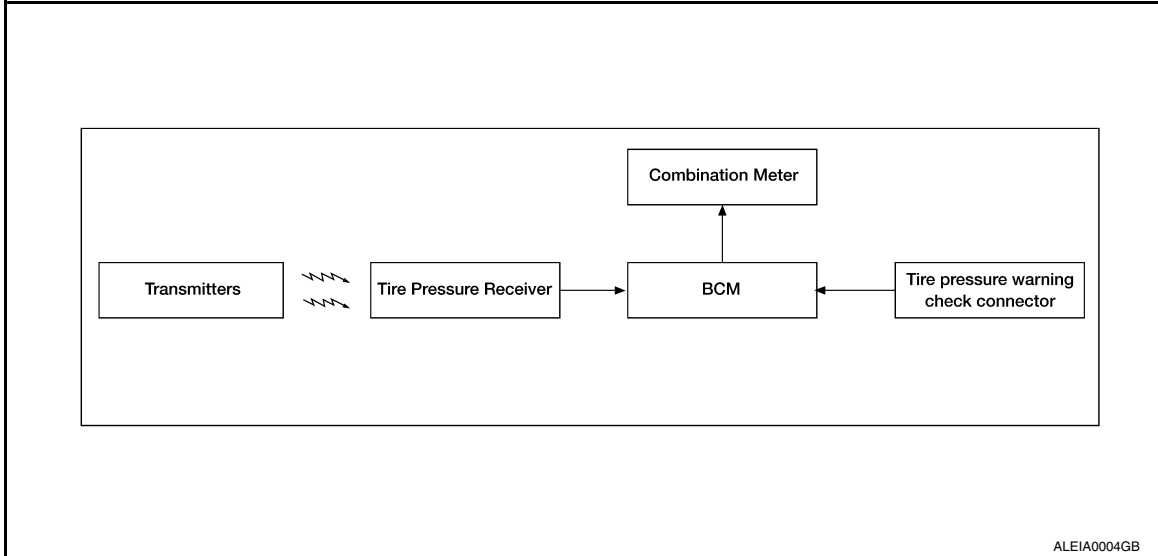


System Description

INFOID:000000005266478

BODY CONTROL MODULE (BCM)


The BCM (1) is shown with the lower instrument panel LH removed. The BCM reads the air pressure signal received by the remote keyless entry receiver, and controls the low tire pressure warning lamp as shown below. It also has a self-diagnosis function to detect a system malfunction.

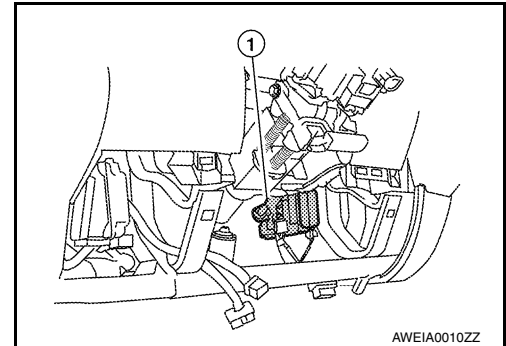

| Condition | Low tire pressure warning lamp |
|---|---|
| System normal | On for 1 second after ignition ON |
| Tire less than 193 kPa (2.0 kg/cm ² , 28 psi) [Flat tire] | ON |
| Low tire pressure warning system malfunction | After key ON, flashes once per second for 1 minute, then stays ON |

TRANSMITTER

A sensor-transmitter integrated with a valve is installed in each wheel, and transmits a detected air pressure signal in the form of a radio wave. The radio signal is received by the remote keyless entry receiver.

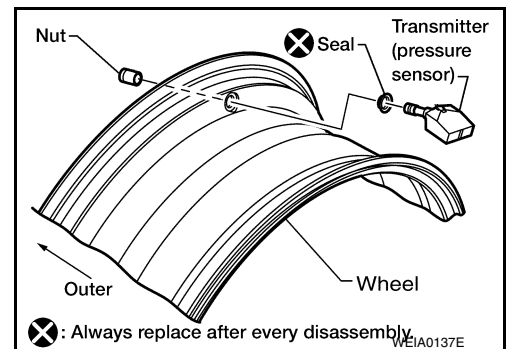


REMOTE KEYLESS ENTRY RECEIVER

TPMS


< FUNCTION DIAGNOSIS >

The remote keyless entry receiver is shown with the instrument panel RH removed. The remote keyless entry receiver receives the air pressure signal transmitted by the transmitter in each wheel.

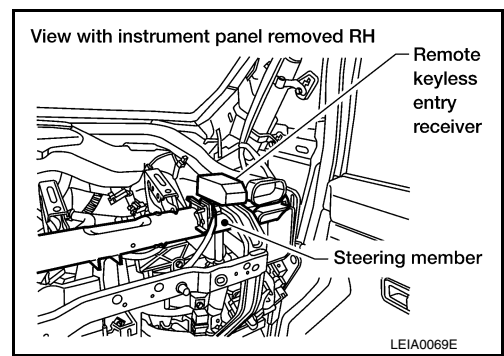


COMBINATION METER

The combination meter receives tire pressure status from the BCM using CAN communication. When a low tire pressure condition is sensed by the BCM, the combination meter low tire pressure warning lamp is activated.

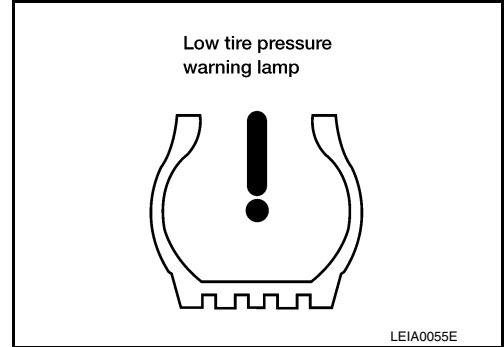

TIRE PRESSURE WARNING CHECK CONNECTOR

The tire pressure warning check connector can be grounded in order to initiate self-diagnosis without a CONSULT-III. Refer to [WT-33. "Self-Diagnosis \(Without CONSULT-III\)"](#). The tire pressure warning check connector (1) is located behind the lower portion of the instrument panel LH.

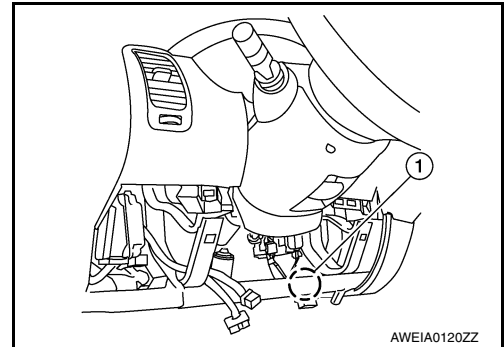


A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P

TPMS

< FUNCTION DIAGNOSIS >

System Component

INFOID:000000005266479

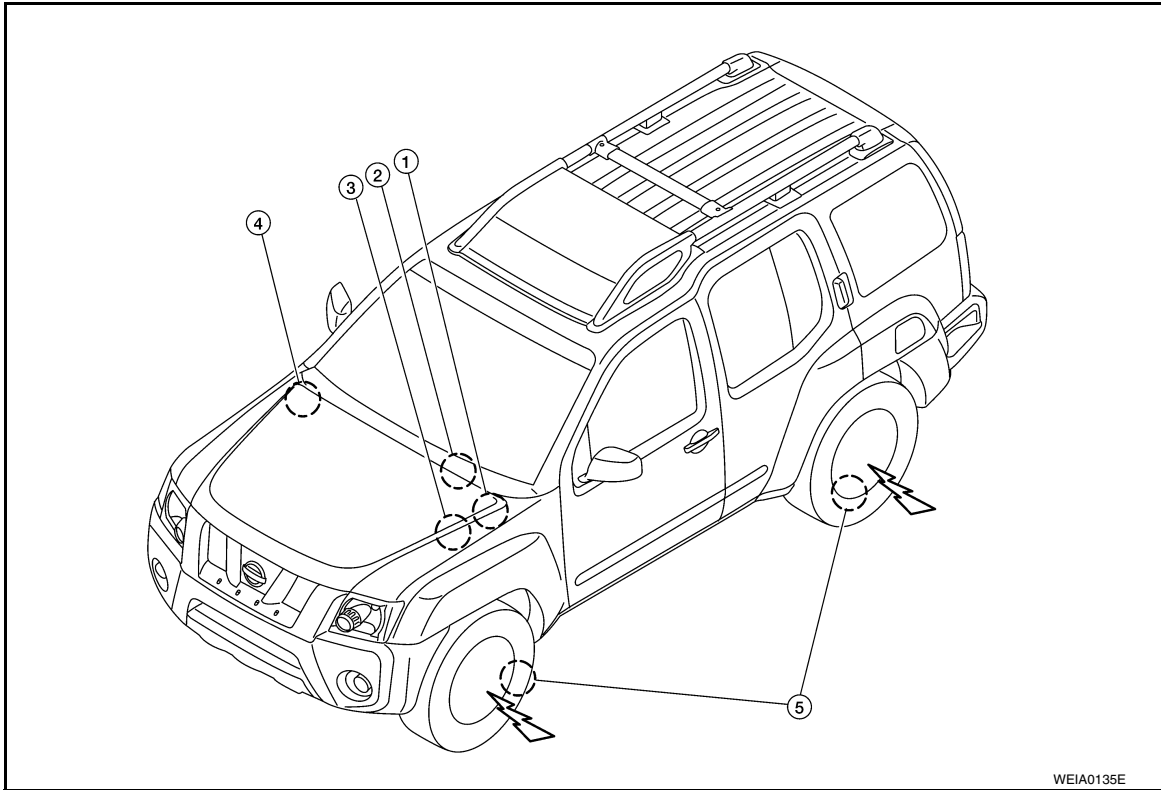

- | | | |
|---------------------------------------|--------------------------|---|
| 1. BCM M18, M20 | 2. Combination meter M24 | 3. Tire pressure warning check connector M123 |
| 4. Remote keyless entry receiver M120 | 5. Transmitters | |

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

DIAGNOSIS SYSTEM (BCM)

CONSULT-III Function (BCM)

INFOID:000000005266480

CONSULT-III DIAGNOSTIC MODES

CONSULT-III can display each diagnostic item using the diagnostic test modes shown following.

| Diagnostic mode | Description |
|------------------------|--|
| ECU Identification | BCM part number can be read. |
| Self Diagnostic Result | Displays BCM self-diagnosis results. |
| Data Monitor | Displays BCM input/output data in real time. |
| Active Test | Operation of electrical loads can be checked by sending drive signal to them. |
| Work support | Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed. |
| Configuration | Performs BCM configuration read/write functions. |
| CAN Diag Support Mntr | The result of transmit/receive diagnosis of CAN communication can be read. |

DESCRIPTION

During driving, the tire pressure monitoring system receives the signal transmitted from the transmitter installed in each wheel, and turns on the low tire pressure warning lamp when the tire pressure becomes low. The control unit (BCM) for this system has pressure judgement and self-diagnosis functions.

FUNCTION

When the tire pressure monitoring system detects low inflation pressure or an internal malfunction, the low tire pressure warning lamp in the combination meter comes on. The malfunction is indicated by the low tire pressure warning lamp flashing.

CONSULT-III Application to Tire Pressure Monitoring System

| ITEM | SELF-DIAGNOSTIC RESULTS | DATA MONITOR |
|---------------------------|-------------------------|--------------|
| Front - Left transmitter | x | x |
| Front - Right transmitter | x | x |
| Rear - Left transmitter | x | x |
| Rear - Right transmitter | x | x |
| Warning lamp | — | x |
| Vehicle speed | x | x |
| CAN Communication | x | x |

x : Applicable

— : Not applicable

Data Monitor Mode

| MONITOR | CONDITION | SPECIFICATION |
|---------------|--|---|
| VEHICLE SPEED | Drive vehicle. | Vehicle speed (km/h or MPH) |
| AIR PRESS FL | <ul style="list-style-type: none"> Drive vehicle for a few minutes. or Ignition switch ON and activation tool is transmitting activation signals. | Tire pressure (kPa or psi) |
| AIR PRESS FR | | |
| AIR PRESS RR | | |
| AIR PRESS RL | | |
| ID REGST FL1 | Ignition switch ON | ID not registered: YET ID registered: DONE |
| ID REGST FR1 | | |
| ID REGST RR1 | | |
| ID REGST RL1 | | |

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

| MONITOR | CONDITION | SPECIFICATION |
|--------------|--------------------|--|
| WARNING LAMP | Ignition switch ON | Low tire pressure warning lamp on: On Low tire pressure warning lamp off: Off |
| BUZZER | Ignition switch ON | Low tire pressure buzzer on: On Low tire pressure buzzer off: Off |

NOTE:

Before performing the self-diagnosis, be sure to register the ID, or the actual malfunction location may be different from that displayed on CONSULT-III.

Active Test

| Test item | Content |
|----------------------------|--|
| WARNING LAMP [On/Off] | Activates the low tire pressure warning lamp (On/Off). |
| ID REGIST WARNING [On/Off] | Activates the low tire pressure warning buzzer (On/Off). |
| FLAT TIRE WARNING [On/Off] | Activates the low tire pressure warning buzzer (On/Off). |

Work Support


| Test item | Content |
|-----------|---|
| ID REGIST | The identification number of the transmitter is registered in the BCM. |
| ID READ | The identification registration number of the transmitter is read by the BCM. |

Self-Diagnosis (Without CONSULT-III)

INFOID:000000005550170

SELF DIAGNOSTIC PROCEDURE (WITHOUT CONSULT-III)

1. Turn ignition switch ON.
2. Ground the tire pressure warning check connector to initiate self diagnosis.
3. Compare the flashing pattern with the flash code chart below.

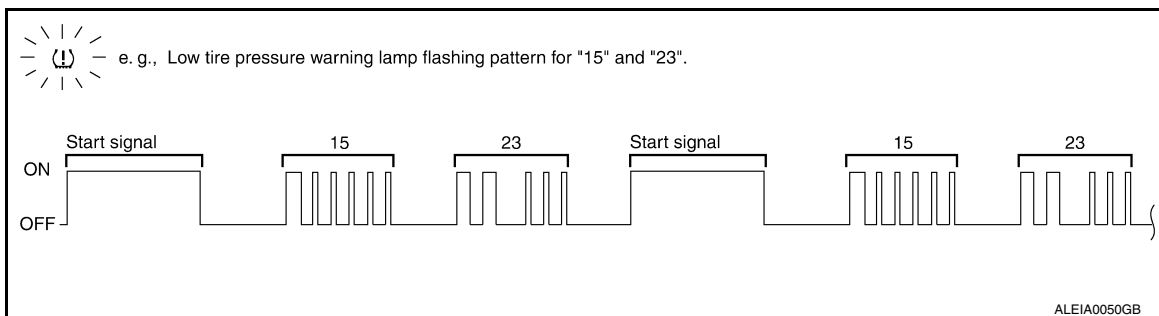

NOTE:

The system is normal when the low tire pressure warning lamp flashes 5 times and continues repeating. Self-diagnosis results are erased automatically by turning the ignition switch "OFF".

| Flash Code | Malfunction part | Reference page |
|----------------------|--|-----------------------|
| 15 16 17 18 | Tire pressure dropped below specified value. Refer to WT-8, "System Description" . | — |
| 21 22 23 24 | Transmitter no data (FL) Transmitter no data (FR) Transmitter no data (RR) Transmitter no data (RL) | WT-14 |
| 31 32 33 34 | Transmitter checksum error (FL) Transmitter checksum error (FR) Transmitter checksum error (RR) Transmitter checksum error (RL) | WT-16 |

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

| Flash Code | Malfunction part | Reference page | |
|------------|--------------------------------------|-----------------------|----|
| 35 | Transmitter pressure data error (FL) | WT-18 | A |
| 36 | Transmitter pressure data error (FR) | | |
| 37 | Transmitter pressure data error (RR) | | B |
| 38 | Transmitter pressure data error (RL) | | |
| 41 | Transmitter function code error (FL) | WT-16 | C |
| 42 | Transmitter function code error (FR) | | |
| 43 | Transmitter function code error (RR) | | |
| 44 | Transmitter function code error (RL) | | |
| 45 | Transmitter battery voltage low (FL) | WT-16 | D |
| 46 | Transmitter battery voltage low (FR) | | |
| 47 | Transmitter battery voltage low (RR) | | |
| 48 | Transmitter battery voltage low (RL) | | |
| 52 | Vehicle speed signal | WT-19 | WT |
| 54 | Vehicle ignition signal | WT-20 | |

F
G
H
I
J
K
L
M
N
O
P

C1708 - C1711 DATA FROM TRANSMITTER NOT BEING RECEIVED

< COMPONENT DIAGNOSIS >

COMPONENT DIAGNOSIS

C1708 - C1711 DATA FROM TRANSMITTER NOT BEING RECEIVED

Description

INFOID:000000005266482

Tire pressure data for one or more transmitters is not being received by the BCM.

DTC Logic

INFOID:000000005266483

DTC DETECTION LOGIC

| DTC | CONSULT-III | DTC detecting condition |
|-------|------------------|--|
| C1708 | [NO - DATA] - FL | Data from FL transmitter cannot be received. |
| C1709 | [NO - DATA] - FR | Data from FR transmitter cannot be received. |
| C1710 | [NO - DATA] - RR | Data from RR transmitter cannot be received. |
| C1711 | [NO - DATA] - RL | Data from RL transmitter cannot be received. |

DTC CONFIRMATION PROCEDURE

1. ID REGISTRATION AND VEHICLE DRIVING

1. Carry out ID registration of all transmitters.
2. Drive at a speed of 40 km/h (25 MPH) or more for 3 minutes, and then drive the vehicle at any speed for 10 minutes.
3. Check all tire pressures with CONSULT-III within 5 minutes.

Does DATA MONITOR ITEM display tire pressure as normal without any warning lamp?

- YES >> Inspection End.
NO >> Refer to [WT-14, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000005266484

MALFUNCTION CODE NO. 21, 22, 23 OR 24 (DTC C1708, C1709, C1710 OR C1711)

1. CHECK BCM

Drive for several minutes. Check all tire pressures with CONSULT-III.

Are all tire pressures displayed as 0 kPa?

- YES >> GO TO 2
NO >> GO TO 3

2. CHECK TIRE PRESSURE RECEIVER CONNECTOR

Check tire pressure receiver connector for damage or loose connection.

Is tire pressure receiver connector damaged or loose?

- YES >> Repair or replace tire pressure receiver connector.
NO >> Replace BCM, then GO TO 3. Refer to [BCS-56, "Removal and Installation"](#).

3. PERFORM ID REGISTRATION

Carry out ID registration of all transmitters. Refer to [WT-6, "ID Registration Procedure"](#).

Is there a tire that cannot register ID?

- YES >> Replace malfunctioning transmitter, then GO TO 5. Refer to [WT-48, "Transmitter \(Pressure Sensor\)"](#).
NO >> GO TO 4

4. DRIVE VEHICLE

1. Drive at a speed of 40 km/h (25 MPH) or more for several minutes without stopping.
2. Check all tire pressures with CONSULT-III within 15 minutes after vehicle speed becomes 17 km/h (11 MPH).

Does DATA MONITOR ITEM display tire pressure as normal without any warning lamp?

C1708 - C1711 DATA FROM TRANSMITTER NOT BEING RECEIVED

< COMPONENT DIAGNOSIS >

YES >> Inspection End.

NO >> GO TO 5

5.ID REGISTRATION AND VEHICLE DRIVING

1. Carry out ID registration of all transmitters.
2. Drive at a speed of 40 km/h (25 MPH) or more for 3 minutes, and then drive the vehicle at any speed for 10 minutes.
3. Check all tire pressures with CONSULT-III within 5 minutes.

Does DATA MONITOR ITEM display tire pressure as normal without any warning lamp?

YES >> Inspection End.

NO >> Proceed to the inspection applicable to DTC.

Special Repair Requirement

INFOID:000000005266485

Perform preliminary check. Refer to [WT-5. "Preliminary Check"](#).

A

B

C

D

WT

F

G

H

I

J

K

L

M

N

O

P

C1712 - C1715, C1720 - C1723, C1724 - C1727 TRANSMITTER MALFUNCTION

< COMPONENT DIAGNOSIS >

C1712 - C1715, C1720 - C1723, C1724 - C1727 TRANSMITTER MALFUNCTION

Description

INFOID:000000005266486

One or more transmitters are malfunctioning internally.

DTC Logic

INFOID:000000005266487

DTC DETECTION LOGIC

| DTC | CONSULT-III | DTC detecting condition |
|-------|--------------------------|---|
| C1712 | [CHECKSUM - ERR] - FL | Checksum data from FL transmitter is malfunctioning. |
| C1713 | [CHECKSUM - ERR] - FR | Checksum data from FR transmitter is malfunctioning. |
| C1714 | [CHECKSUM - ERR] - RR | Checksum data from RR transmitter is malfunctioning. |
| C1715 | [CHECKSUM - ERR] - RL | Checksum data from RL transmitter is malfunctioning. |
| C1720 | [CODE - ERR] - FL | Function code data from FL transmitter is malfunctioning. |
| C1721 | [CODE - ERR] - FR | Function code data from FR transmitter is malfunctioning. |
| C1722 | [CODE - ERR] - RR | Function code data from RR transmitter is malfunctioning. |
| C1723 | [CODE - ERR] - RL | Function code data from RL transmitter is malfunctioning. |
| C1724 | [BATT - VOLT - LOW] - FL | Battery voltage of FL transmitter drops. |
| C1725 | [BATT - VOLT - LOW] - FR | Battery voltage of FR transmitter drops. |
| C1726 | [BATT - VOLT - LOW] - RR | Battery voltage of RR transmitter drops. |
| C1727 | [BATT - VOLT - LOW] - RL | Battery voltage of RL transmitter drops. |

DTC CONFIRMATION PROCEDURE

1. DRIVE VEHICLE

1. Drive at a speed of 40 km/h (25 MPH) or more for 3 minutes, and then drive the vehicle at any speed for 10 minutes.
2. Check all tire pressures with CONSULT-III within 5 minutes.

Does DATA MONITOR ITEM display tire pressure as normal without any warning lamp?

YES >> Inspection End.

NO >> Refer to [WT-16, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000005266488

MALFUNCTION CODE NO. 31, 32, 33, 34, 41, 42, 43, 44, 45, 46, 47 OR 48 (DTC C1712, C1713, C1714, C1715, C1720, C1721, C1722, C1723, C1724, C1725, C1726 OR C1727)

1. PERFORM ID REGISTRATION

1. Carry out ID registration of all transmitters. Refer to [WT-6, "ID Registration Procedure"](#).
2. Drive at a speed of 40 km/h (25 MPH) or more for 3 minutes, and then drive the vehicle at any speed for 10 minutes.

>> GO TO 2

2. REPLACE TRANSMITTER

1. Check low tire pressure warning lamp again for flashing, replace malfunctioning transmitter. Refer to [WT-48, "Transmitter \(Pressure Sensor\)"](#).
2. Carry out ID registration of all transmitters.

Can ID registration of all transmitters be completed?

YES >> GO TO 3

NO >> GO TO [WT-14, "Diagnosis Procedure"](#).

C1712 - C1715, C1720 - C1723, C1724 - C1727 TRANSMITTER MALFUNCTION

< COMPONENT DIAGNOSIS >

3. DRIVE VEHICLE

1. Drive at a speed of 40 km/h (25 MPH) or more for 3 minutes, and then drive the vehicle at any speed for 10 minutes.
2. Check all tire pressures with CONSULT-III within 5 minutes.

Does DATA MONITOR ITEM display tire pressure as normal without any warning lamp?

YES >> Inspection End.

NO >> Replace malfunctioning transmitter, and perform Step 3 again.

Special Repair Requirement

INFOID:000000005550174

Perform preliminary check. Refer to [WT-5, "Preliminary Check"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WT

C1716 - C1719 TRANSMITTER PRESSURE MALFUNCTION

< COMPONENT DIAGNOSIS >

C1716 - C1719 TRANSMITTER PRESSURE MALFUNCTION

Description

INFOID:000000005266490

Air pressure data from one or more transmitters is out of range.

DTC Logic

INFOID:000000005266491

DTC DETECTION LOGIC

| DTC | CONSULT - III | DTC detecting condition |
|-------|----------------------|--|
| C1716 | [PRESSDATA - ERR] FL | Air pressure data from FL transmitter is malfunctioning. |
| C1717 | [PRESSDATA - ERR] FR | Air pressure data from FR transmitter is malfunctioning. |
| C1718 | [PRESSDATA - ERR] RR | Air pressure data from RR transmitter is malfunctioning. |
| C1719 | [PRESSDATA - ERR] RL | Air pressure data from RL transmitter is malfunctioning. |

DTC CONFIRMATION PROCEDURE

1.ID REGISTRATION AND VEHICLE DRIVING

1. Carry out ID registration of all transmitters.
2. Drive at a speed of 40 km/h (25 MPH) or more for 3 minutes, and then drive the vehicle at any speed for 10 minutes.
3. Check all tire pressures with CONSULT-III within 5 minutes.

Does DATA MONITOR ITEM display tire pressure as normal without any warning lamp?

- YES >> Inspection End.
NO >> Refer to [WT-18. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000005266492

MALFUNCTION CODE NO. 35, 36, 37 OR 38 (DTC C1716, C1717, C1718 OR C1719)

1.CHECK ALL TIRE PRESSURES

Check all tire pressures. Refer to [WT-50. "Tire"](#).

Are there any tires with pressure of 64 psi or more?

- YES >> Adjust tire pressure to specified value.
NO >> GO TO 2

2.ID REGISTRATION AND VEHICLE DRIVING

1. Carry out ID registration of all transmitters. Refer to [WT-6. "ID Registration Procedure"](#).
2. Drive at a speed of 40 km/h (25 MPH) or more for several minutes without stopping.
3. Check all tire pressures with CONSULT-III within 15 minutes after vehicle speed becomes 17 km/h (11 MPH).

Does DATA MONITOR ITEM display 64 psi or more?

- YES >> Replace transmitter. Refer to [WT-48. "Transmitter \(Pressure Sensor\)"](#). GO TO 3.
NO >> GO TO 3

3.ID REGISTRATION AND VEHICLE DRIVING

1. Carry out ID registration of all transmitters.
2. Drive at a speed of 40 km/h (25 MPH) or more for 3 minutes, and then drive the vehicle at any speed for 10 minutes.
3. Check all tire pressures with CONSULT-III within 5 minutes.

Does DATA MONITOR ITEM display tire pressure as normal without any warning lamp?

- YES >> Inspection End.
NO >> Proceed to the inspection applicable to DTC.

Special Repair Requirement

INFOID:000000005550175

Perform preliminary check. Refer to [WT-5. "Preliminary Check"](#).

C1729 VEHICLE SPEED SIGNAL

< COMPONENT DIAGNOSIS >

C1729 VEHICLE SPEED SIGNAL

Description

INFOID:000000005266494

The vehicle speed signal is not being detected by the BCM.

DTC Logic

INFOID:000000005266495

DTC DETECTION LOGIC

| DTC | CONSULT - III | DTC detecting condition |
|-------|--------------------|-----------------------------------|
| C1729 | VHCL SPEED SIG ERR | Vehicle speed signal is in error. |

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

1. On SELECT DIAG MODE, select the SELF-DIAG RESULT screen.
2. Check display contents on SELF DIAG RESULT screen.

Is the CAN COMM CIRCUIT displayed in the self-diagnosis display?

YES >> Refer to [WT-19, "Diagnosis Procedure"](#).

NO >> Inspection end.

Diagnosis Procedure

INFOID:000000005266496

MALFUNCTION CODE NO. 52 (DTC C1729)

1. CHECK SELF-DIAGNOSTIC RESULTS

1. On SELECT DIAG MODE, select the SELF-DIAG RESULT screen.
2. Check display contents on SELF DIAG RESULT screen.

Is the CAN COMM CIRCUIT displayed in the self-diagnosis display?

YES >> Perform trouble diagnosis for CAN communication system. Refer to [LAN-14, "Trouble Diagnosis Flow Chart"](#).

NO >> Check combination meter. Refer to [MWI-24, "CONSULT-III Function \(METER/M&A\)"](#).

Special Repair Requirement

INFOID:000000005550176

Perform preliminary check. Refer to [WT-5, "Preliminary Check"](#).

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P

C1735 IGNITION SIGNAL

< COMPONENT DIAGNOSIS >

C1735 IGNITION SIGNAL

Description

INFOID:000000005266498

The BCM monitors the IGN ON signal on the CAN line and compares it to its direct IGN ON signal. When these two signals do not match, the BCM sets C1735.

DTC Logic

INFOID:000000005266499

DTC DETECTION LOGIC

| DTC | CONSULT - III | DTC detecting condition |
|-------|---------------------------------|---|
| C1735 | IGNITION SIGNAL LINE - BCM/TPMS | BCM has detected a mismatch between IGN ON signals. |

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

1. On SELECT DIAG MODE, select the SELF-DIAG RESULT screen.
2. Check display contents on SELF DIAG RESULT screen.

Is C1735 displayed in the self-diagnosis display?

- YES >> Refer to [WT-20, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000005266500

MALFUNCTION CODE NO. 54 (DTC C1735)

1. CAN IGNITION SIGNAL

Check BCM IGN RLY signal with CONSULT-III. Refer to [WT-21, "Reference Value"](#).

Are the inspection results normal with the ignition switch ON?

- YES >> GO TO 2.
NO >> Check CAN system. Refer to [LAN-14, "Trouble Diagnosis Flow Chart"](#).

2. BCM POWER SUPPLY

Check BCM power supply (ignition ON). Refer to [BCS-31, "Diagnosis Procedure"](#).

Is the power supply with the ignition switch ON normal?

- YES >> GO TO 3.
NO >> Repair power supply as necessary.

3. DRIVE VEHICLE

Clear DTC and then test drive the vehicle and check the low tire pressure warning lamp.

Does the vehicle operate without any low tire pressure warning lamp?

- YES >> Inspection End.
NO >> Replace BCM. Refer to [BCS-56, "Removal and Installation"](#).

Special Repair Requirement

INFOID:000000005550177

Perform preliminary check. Refer to [WT-5, "Preliminary Check"](#).

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

ECU DIAGNOSIS

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:000000005550171

VALUES ON THE DIAGNOSIS TOOL

| Monitor Item | Condition | Value/Status |
|----------------|---|--------------|
| IGN ON SW | Ignition switch OFF or ACC | OFF |
| | Ignition switch ON | ON |
| KEY ON SW | Mechanical key is removed from key cylinder | OFF |
| | Mechanical key is inserted to key cylinder | ON |
| CDL LOCK SW | Door lock/unlock switch does not operate | OFF |
| | Press door lock/unlock switch to the lock side | ON |
| CDL UNLOCK SW | Door lock/unlock switch does not operate | OFF |
| | Press door lock/unlock switch to the unlock side | ON |
| DOOR SW-DR | Driver's door closed | OFF |
| | Driver's door opened | ON |
| DOOR SW-AS | Passenger door closed | OFF |
| | Passenger door opened | ON |
| DOOR SW-RR | Rear RH door closed | OFF |
| | Rear RH door opened | ON |
| DOOR SW-RL | Rear LH door closed | OFF |
| | Rear LH door opened | ON |
| BACK DOOR SW | Back door closed | OFF |
| | Back door opened | ON |
| KEY CYL LK-SW | Other than driver door key cylinder LOCK position | OFF |
| | Driver door key cylinder LOCK position | ON |
| KEY CYL UN-SW | Other than driver door key cylinder UNLOCK position | OFF |
| | Driver door key cylinder UNLOCK position | ON |
| KEYLESS LOCK | "LOCK" button of key fob is not pressed | OFF |
| | "LOCK" button of key fob is pressed | ON |
| KEYLESS UNLOCK | "UNLOCK" button of key fob is not pressed | OFF |
| | "UNLOCK" button of key fob is pressed | ON |
| ACC ON SW | Ignition switch OFF | OFF |
| | Ignition switch ACC or ON | ON |
| REAR DEF SW | Rear window defogger switch OFF | OFF |
| | Rear window defogger switch ON | ON |
| LIGHT SW 1ST | Lighting switch OFF | OFF |
| | Lighting switch 1ST | ON |
| BUCKLE SW | The seat belt (driver side) is unfastened. [Seat belt switch (driver side) OFF] | OFF |
| | The seat belt (driver side) is fastened. [Seat belt switch (driver side) ON] | ON |
| KEYLESS PANIC | PANIC button of key fob is not pressed | OFF |
| | PANIC button of key fob is pressed | ON |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

| Monitor Item | Condition | Value/Status |
|----------------|---|-----------------------------------|
| HI BEAM SW | Lighting switch OFF | OFF |
| | Lighting switch HI | ON |
| HEAD LAMP SW 1 | Lighting switch OFF | OFF |
| | Lighting switch 2ND | ON |
| HEAD LAMP SW 2 | Lighting switch OFF | OFF |
| | Lighting switch 2ND | ON |
| PASSING SW | Other than lighting switch PASS | OFF |
| | Lighting switch PASS | ON |
| FR FOG SW | Front fog lamp switch OFF | OFF |
| | Front fog lamp switch ON | ON |
| TURN SIGNAL R | Turn signal switch OFF | OFF |
| | Turn signal switch RH | ON |
| TURN SIGNAL L | Turn signal switch OFF | OFF |
| | Turn signal switch LH | ON |
| CARGO LAMP SW | Cargo lamp switch OFF | OFF |
| | Cargo lamp switch ON | ON |
| IGN SW CAN | Ignition switch OFF or ACC | OFF |
| | Ignition switch ON | ON |
| FR WIPER HI | Front wiper switch OFF | OFF |
| | Front wiper switch HI | ON |
| FR WIPER LOW | Front wiper switch OFF | OFF |
| | Front wiper switch LO | ON |
| FR WIPER INT | Front wiper switch OFF | OFF |
| | Front wiper switch INT | ON |
| FR WASHER SW | Front washer switch OFF | OFF |
| | Front washer switch ON | ON |
| INT VOLUME | Wiper intermittent dial is in a dial position 1 - 7 | 1 - 7 |
| FR WIPER STOP | Any position other than front wiper stop position | OFF |
| | Front wiper stop position | ON |
| VEHICLE SPEED | While driving | Equivalent to speedometer reading |
| RR WIPER ON | Rear wiper switch OFF | OFF |
| | Rear wiper switch ON | ON |
| RR WIPER INT | Rear wiper switch OFF | OFF |
| | Rear wiper switch INT | ON |
| RR WASHER SW | Rear washer switch OFF | OFF |
| | Rear washer switch ON | ON |
| RR WIPER STOP | Any position other than rear wiper stop position | OFF |
| | Rear wiper stop position | ON |
| HAZARD SW | Hazard switch OFF | OFF |
| | Hazard switch ON | ON |
| BRAKE SW | Brake pedal is not depressed | OFF |
| | Brake pedal is depressed | ON |
| FAN ON SIG | Blower fan motor switch OFF | OFF |
| | Blower fan motor switch ON (other than OFF) | ON |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >


| Monitor Item | Condition | Value/Status | |
|--------------|---|-------------------------------|----|
| AIR COND SW | Compressor ON is not requested from auto amp. (A/C indicator OFF, blower fan motor switch OFF or etc.) | OFF | A |
| | Compressor ON is requested from auto amp. (A/C indicator ON and blower fan motor switch ON). | ON | B |
| OIL PRESS SW | <ul style="list-style-type: none"> • Ignition switch OFF or ACC • Engine running | OFF | C |
| | Ignition switch ON | ON | |
| AIR PRESS FL | Ignition switch ON (Only when the signal from the transmitter is received) | Air pressure of front LH tire | D |
| AIR PRESS FR | Ignition switch ON (Only when the signal from the transmitter is received) | Air pressure of front RH tire | |
| AIR PRESS RR | Ignition switch ON (Only when the signal from the transmitter is received) | Air pressure of rear RH tire | WT |
| AIR PRESS RL | Ignition switch ON (Only when the signal from the transmitter is received) | Air pressure of rear LH tire | |
| ID REGST FL1 | ID of front LH tire transmitter is registered | DONE | F |
| | ID of front LH tire transmitter is not registered | YET | |
| ID REGST FR1 | ID of front RH tire transmitter is registered | DONE | G |
| | ID of front RH tire transmitter is not registered | YET | |
| ID REGST RR1 | ID of rear RH tire transmitter is registered | DONE | H |
| | ID of rear RH tire transmitter is not registered | YET | |
| ID REGST RL1 | ID of rear LH tire transmitter is registered | DONE | I |
| | ID of rear LH tire transmitter is not registered | YET | |
| WARNING LAMP | Tire pressure indicator OFF | OFF | J |
| | Tire pressure indicator ON | ON | |
| BUZZER | Tire pressure warning alarm is not sounding | OFF | K |
| | Tire pressure warning alarm is sounding | ON | |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal Layout

INFOID:000000005550172

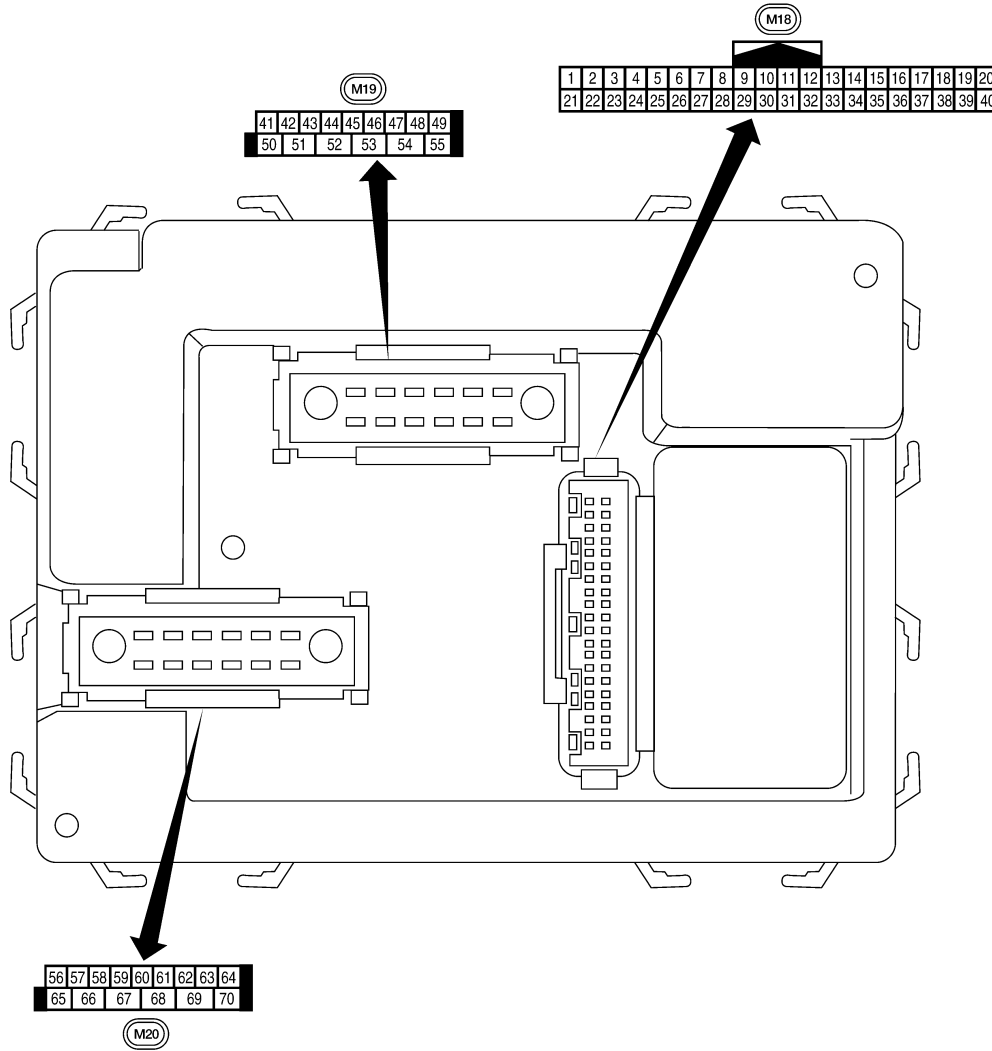


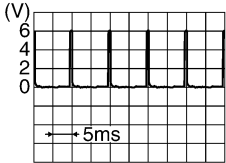

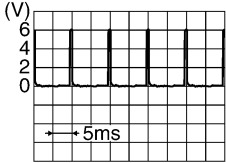
LIIA2443E

Physical Values

INFOID:000000005550173

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

| Terminal | Wire color | Signal name | Signal input/output | Measuring condition | | Reference value or waveform (Approx.) |
|----------|------------|--|---------------------|---------------------|--|---|
| | | | | Ignition switch | Operation or condition | |
| 1 | BR | Ignition keyhole illumination | Output | OFF | Door is locked (SW OFF) | Battery voltage |
| | | | | | Door is unlocked (SW ON) | 0V |
| 2 | P | Combination switch input 5 | Input | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5291E</p> |
| 3 | SB | Combination switch input 4 | Input | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5292E</p> |
| 4 | V | Combination switch input 3 | Input | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5291E</p> |
| 5 | L | Combination switch input 2 | Input | ON | Lighting, turn, wiper OFF Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5292E</p> |
| 6 | R | Combination switch input 1 | | | | |
| 7 | GR | Front door lock assembly LH (key cylinder switch) and back door key cylinder switch (unlock) | Input | OFF | ON (open, 2nd turn) | Momentary 1.5V |
| | | | | | OFF (closed) | 0V |
| 8 | SB | Front door lock assembly LH (key cylinder switch) and back door key cylinder switch (lock) | Input | OFF | ON (open) | Momentary 1.5V |
| | | | | | OFF (closed) | 0V |
| 9 | Y | Rear window defogger switch | Input | ON | Rear window defogger switch ON | 0V |
| | | | | | Rear window defogger switch OFF | 5V |
| 11 | G/B | Ignition switch (ACC or ON) | Input | ACC or ON | Ignition switch ACC or ON | Battery voltage |
| 12 | LG | Front door switch RH | Input | OFF | ON (open) | 0V |
| | | | | | OFF (closed) | Battery voltage |

A

B

C

D

WT

F

G

H

I

J

K

L

M




N

O

P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >
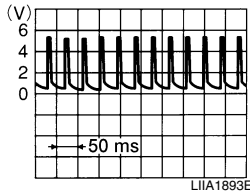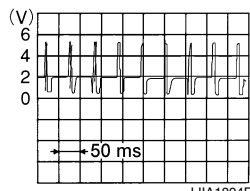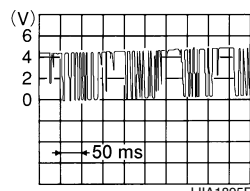
| Terminal | Wire color | Signal name | Signal input/output | Measuring condition | | Reference value or waveform (Approx.) |
|----------|------------|--|---------------------|---------------------|---|--|
| | | | | Ignition switch | Operation or condition | |
| 13 | L | Rear door switch RH | Input | OFF | ON (open) | 0V |
| | | | | | OFF (closed) | Battery voltage |
| 15 | W | Tire pressure warning check connector | Input | OFF | — | 5V |
| 18 | BR | Remote keyless entry receiver (ground) | Output | OFF | — | 0V |
| 19 | V | Remote keyless entry receiver (power supply) | Output | OFF | Ignition switch OFF |  |
| 20 | G | Remote keyless entry receiver (signal) | Input | OFF | Stand-by (keyfob buttons released) |  |
| | | | | | When remote keyless entry receiver receives signal from keyfob (keyfob buttons pressed) |  |
| 21 | GR | NATS antenna amp. | Input | OFF → ON | Ignition switch (OFF → ON) | Just after turning ignition switch ON: Pointer of tester should move for approx. 1 second, then return to battery voltage. |
| 23 | G | Security indicator lamp | Output | OFF | Goes OFF → illuminates (Every 2.4 seconds) | Battery voltage → 0V |
| 25 | BR | NATS antenna amp. | Input | OFF → ON | Ignition switch (OFF → ON) | Just after turning ignition switch ON: Pointer of tester should move for approx. 1 second, then return to battery voltage. |
| 27 | W | Compressor ON signal | Input | ON | A/C switch OFF | 5V |
| | | | | | A/C switch ON | 0V |
| 28 | R | Front blower monitor | Input | ON | Front blower motor OFF | Battery voltage |
| | | | | | Front blower motor ON | 0V |
| 29 | G | Hazard switch | Input | OFF | ON | 0V |
| | | | | | OFF | 5V |
| 31 | R | Off-road lamps switch | Input | ON | ON | 0V |
| | | | | | OFF | 5V |

BCM (BODY CONTROL MODULE)



< ECU DIAGNOSIS >

| Terminal | Wire color | Signal name | Signal input/output | Measuring condition | | Reference value or waveform (Approx.) |
|----------|------------|----------------------------------|---------------------|---------------------|--|---|
| | | | | Ignition switch | Operation or condition | |
| 32 | O | Combination switch output 5 | Output | ON | Lighting, turn, wiper OFF Wiper dial position 4 | <p style="text-align: right; font-size: small;">SKIA5291E</p> |
| 33 | GR | Combination switch output 4 | Output | ON | Lighting, turn, wiper OFF Wiper dial position 4 | <p style="text-align: right; font-size: small;">SKIA5292E</p> |
| 34 | G | Combination switch output 3 | Output | ON | Lighting, turn, wiper OFF Wiper dial position 4 | <p style="text-align: right; font-size: small;">SKIA5291E</p> |
| 35 | BR | Combination switch output 2 | Output | ON | Lighting, turn, wiper OFF Wiper dial position 4 | <p style="text-align: right; font-size: small;">SKIA5292E</p> |
| 36 | LG | Combination switch output 1 | | | | |
| 37 | B | Key switch and key lock solenoid | Input | OFF | Key inserted | Battery voltage |
| | | | | | Key inserted | 0V |
| 38 | W/R | Ignition switch (ON) | Input | ON | — | Battery voltage |
| 39 | L | CAN-H | — | — | — | — |
| 40 | P | CAN-L | — | — | — | — |
| 42 | L | Off-road lamps | Output | ON | Off-road lamps switch | ON: 0V OFF: Battery voltage |
| 43 | Y | Back door switch | Input | OFF | ON (open) | 0V |
| | | | | | OFF (closed) | Battery voltage |
| 44 | O | Rear wiper auto stop switch | Input | ON | Rise up position (rear wiper arm on stopper) | 0V |
| | | | | | A Position (full clockwise stop position) | Battery voltage |
| | | | | | Forward sweep (counterclockwise direction) | Fluctuating |
| | | | | | B Position (full counterclockwise stop position) | 0V |
| | | | | | Reverse sweep (clockwise direction) | Fluctuating |

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >
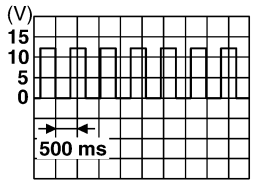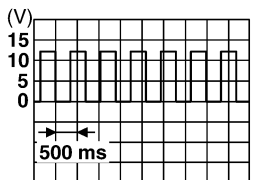
| Terminal | Wire color | Signal name | Signal input/output | Measuring condition | | Reference value or waveform (Approx.) | |
|----------|------------|---|---------------------|---------------------|--|---|----|
| | | | | Ignition switch | Operation or condition | | |
| 45 | V | Lock switch | Input | OFF | ON (lock) | 0V | |
| | | | | | OFF | Battery voltage | |
| 46 | LG | Unlock switch | Input | OFF | ON (unlock) | 0V | |
| | | | | | OFF | Battery voltage | |
| 47 | GR | Front door switch LH | Input | OFF | ON (open) | 0V | |
| | | | | | OFF (closed) | Battery voltage | |
| 48 | P | Rear door switch LH | Input | OFF | ON (open) | 0V | |
| | | | | | OFF (closed) | Battery voltage | |
| 49 | L | Cargo lamp | Output | OFF | Any door open (ON) | 0V | |
| | | | | | All doors closed (OFF) | Battery voltage | |
| 50 | W | Off-road lamps relay | Output | ON | Off-road lamps switch | ON | 0V |
| | | | | | OFF | Battery voltage | |
| 51 | O | Trailer turn signal (right) | Output | ON | Turn right ON |  <p style="text-align: right; font-size: small;">SKIA3009J</p> | |
| 52 | LG | Trailer turn signal (left) | Output | ON | Turn left ON |  <p style="text-align: right; font-size: small;">SKIA3009J</p> | |
| 55 | W | Rear wiper output circuit 1 | Output | ON | OFF | 0 | |
| | | | | | ON | Battery voltage | |
| 56 | R/Y | Battery saver output | Output | OFF | 30 minutes after ignition switch is turned OFF | 0V | |
| | | | | ON | — | Battery voltage | |
| 57 | R/Y | Battery power supply | Input | OFF | — | Battery voltage | |
| 59 | GR | Front door lock assembly LH actuator (unlock) | Output | OFF | OFF (neutral) | 0V | |
| | | | | | ON (unlock) | Battery voltage | |
| 60 | LG | Turn signal (left) | Output | ON | Turn left ON |  <p style="text-align: right; font-size: small;">SKIA3009J</p> | |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

| Terminal | Wire color | Signal name | Signal input/output | Measuring condition | | Reference value or waveform (Approx.) |
|----------|------------|--|---------------------|---------------------|---|---------------------------------------|
| | | | | Ignition switch | Operation or condition | |
| 61 | G | Turn signal (right) | Output | ON | Turn right ON | |
| 63 | BR | Interior room/map lamp | Output | OFF | Any door switch | ON (open) 0V |
| | | | | | | OFF (closed) Battery voltage |
| 65 | V | All door lock actuators (lock) | Output | OFF | OFF (neutral) | 0V |
| | | | | | ON (lock) | Battery voltage |
| 66 | L | Front door lock actuator RH, rear door lock actuators LH/RH and back door lock actuator (unlock) | Output | OFF | OFF (neutral) | 0V |
| | | | | | ON (unlock) | Battery voltage |
| 67 | B | Ground | Input | ON | — | 0V |
| 68 | O | Power window power supply (RAP) | Output | — | Ignition switch ON | Battery voltage |
| | | | | | Within 45 seconds after ignition switch OFF | Battery voltage |
| | | | | | More than 45 seconds after ignition switch OFF | 0V |
| | | | | | When front door LH or RH is open or power window timer operates | 0V |
| 70 | W | Battery power supply | Input | OFF | — | Battery voltage |

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P


BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Wiring Diagram - TIRE PRESSURE MONITORING SYSTEM -

INFOID:000000005266505

TIRE PRESSURE MONITORING SYSTEM

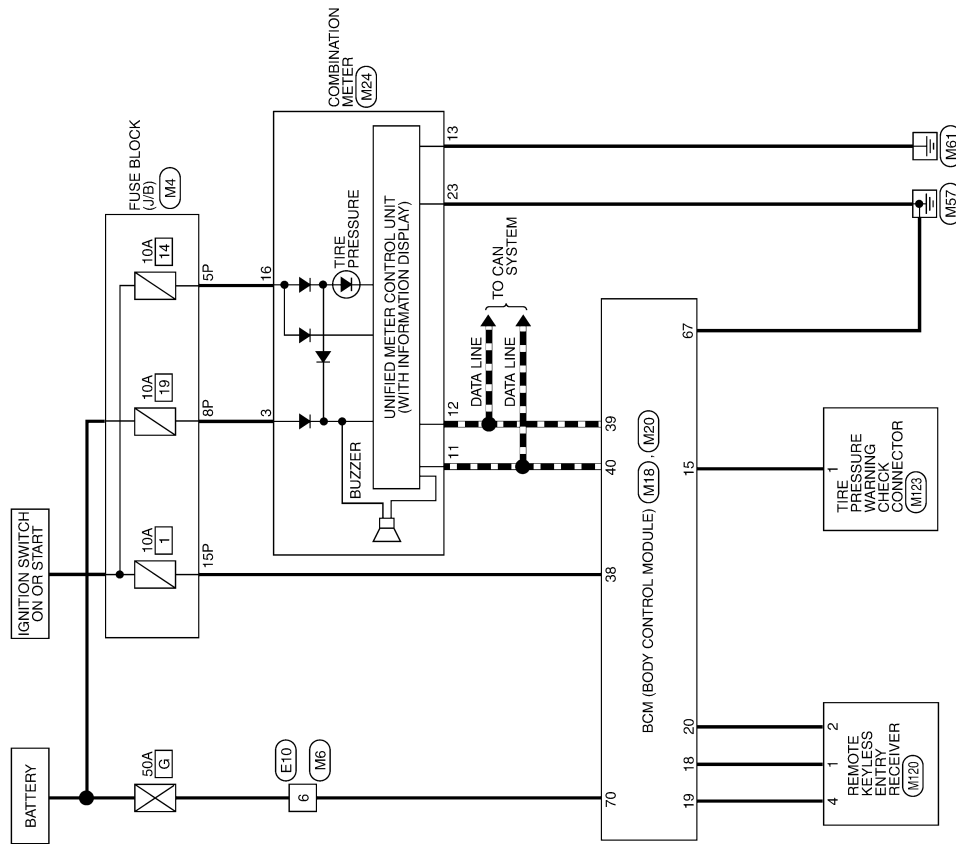

ABEWA0035GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

TIRE PRESSURE MONITORING SYSTEM CONNECTORS

| | |
|-----------------|------------------|
| Connector No. | M4 |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Color | WHITE |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 5P | W/G | - |
| 8P | R/Y | - |
| 15P | W/R | - |

| | |
|-----------------|--------------|
| Connector No. | M6 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 6 | W | - |

| | |
|-----------------|---------------------------|
| Connector No. | M18 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Color | WHITE |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-----------------------------------|
| 15 | W | TPMS MODE TRIGGER SW |
| 18 | BR | KEYLESS & AUTO LIGHT SENSOR GND |
| 19 | V | KEYLESS TUNER POWER SUPPLY OUTPUT |
| 20 | G | KEYLESS TUNER SIGNAL |
| 38 | W/R | IGN SW |
| 39 | L | CAN-H |
| 40 | P | CAN-L |

| | |
|-----------------|---------------------------|
| Connector No. | M20 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Color | BLACK |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 67 | B | GND (POWER) |
| 70 | W | BAT (F/L) |

| | |
|-----------------|-------------------|
| Connector No. | M24 |
| Connector Name | COMBINATION METER |
| Connector Color | WHITE |





| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 3 | R/Y | BATTERY |
| 11 | P | CAN-L |
| 12 | L | CAN-H |
| 13 | GR | GROUND |
| 16 | W/G | RUN START |
| 23 | B | POWER GND |

ABEIA0041GB

BCM (BODY CONTROL MODULE)



< ECU DIAGNOSIS >

| | |
|-----------------|--------------|
| Connector No. | E10 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |


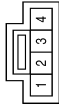
| | | | | | |
|--------------|---|---------------|---|-------------|---|
| Terminal No. | 6 | Color of Wire | W | Signal Name | - |
|--------------|---|---------------|---|-------------|---|

| | |
|-----------------|---------------------------------------|
| Connector No. | M123 |
| Connector Name | TIRE PRESSURE WARNING CHECK CONNECTOR |
| Connector Color | WHITE |

| | | | | | |
|--------------|---|---------------|---|-------------|----------|
| Terminal No. | 1 | Color of Wire | W | Signal Name | LOW TIRE |
|--------------|---|---------------|---|-------------|----------|

| | |
|-----------------|-------------------------------|
| Connector No. | M120 |
| Connector Name | REMOTE KEYLESS ENTRY RECEIVER |
| Connector Color | WHITE |

| | | | | | |
|--------------|---|---------------|----|-------------|-----|
| Terminal No. | 1 | Color of Wire | BR | Signal Name | GND |
| 2 | G | SIGNAL | | | |
| 4 | V | POWER | | | |

ABEIA0042GB

INFOID:000000005266506

Self-Diagnosis (With CONSULT-III)

FUNCTION

Self-Diagnostic Results Mode

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

| Diagnostic item | Diagnostic item is detected when ... | Reference page |
|--|--|-----------------------|
| LOW - PRESSURE - FL [C1704] LOW - PRESSURE - FR [C1705] LOW - PRESSURE - RR [C1706] LOW - PRESSURE - RL [C1707] | Tire pressures dropped below specified value. Refer to WT-8 , " System Description ". | — |
| [NO-DATA] - FL [C1708] [NO-DATA] - FR [C1709] [NO-DATA] - RR [C1710] [NO-DATA] - RL [C1711] | Data from FL transmitter cannot be received. Data from FR transmitter cannot be received. Data from RR transmitter cannot be received. Data from RL transmitter cannot be received. | WT-14 |
| [CHECKSUM- ERR] - FL [C1712] [CHECKSUM- ERR] - FR [C1713] [CHECKSUM- ERR] - RR [C1714] [CHECKSUM- ERR] - RL [C1715] | Checksum data from FL transmitter is malfunctioning. Checksum data from FR transmitter is malfunctioning. Checksum data from RR transmitter is malfunctioning. Checksum data from RL transmitter is malfunctioning. | WT-16 |
| [PRESSDATA- ERR] - FL [C1716] [PRESSDATA- ERR] - FR [C1717] [PRESSDATA- ERR] - RR [C1718] [PRESSDATA- ERR] - RL [C1719] | Air pressure data from FL transmitter is malfunctioning. Air pressure data from FR transmitter is malfunctioning. Air pressure data from RR transmitter is malfunctioning. Air pressure data from RL transmitter is malfunctioning. | WT-18 |
| [CODE- ERR] - FL [C1720] [CODE- ERR] - FR [C1721] [CODE- ERR] - RR [C1722] [CODE- ERR] - RL [C1723] | Function code data from FL transmitter is malfunctioning. Function code data from FR transmitter is malfunctioning. Function code data from RR transmitter is malfunctioning. Function code data from RL transmitter is malfunctioning. | WT-16 |
| [BATT - VOLT - LOW] - FL [C1724] [BATT - VOLT - LOW] - FR [C1725] [BATT - VOLT - LOW] - RR [C1726] [BATT - VOLT - LOW] - RL [C1727] | Battery voltage of FL transmitter drops. Battery voltage of FR transmitter drops. Battery voltage of RR transmitter drops. Battery voltage of RL transmitter drops. | WT-16 |
| VHCL_SPEED_SIG_ERR [C1729] | Vehicle speed signal is in error. | WT-19 |
| IGN_CIRCUIT_OPEN [C1735] | Vehicle ignition signal is in error. | WT-20 |

NOTE:


Before performing the self-diagnosis, be sure to register the ID or else the actual malfunction location may be different from that displayed on CONSULT-III.

Self-Diagnosis (Without CONSULT-III)

INFOID:000000005266507

SELF DIAGNOSTIC PROCEDURE (WITHOUT CONSULT-III)

1. Turn ignition switch ON.
2. Ground the tire pressure warning check connector to initiate self diagnosis.
3. Compare the flashing pattern with the flash code chart below.

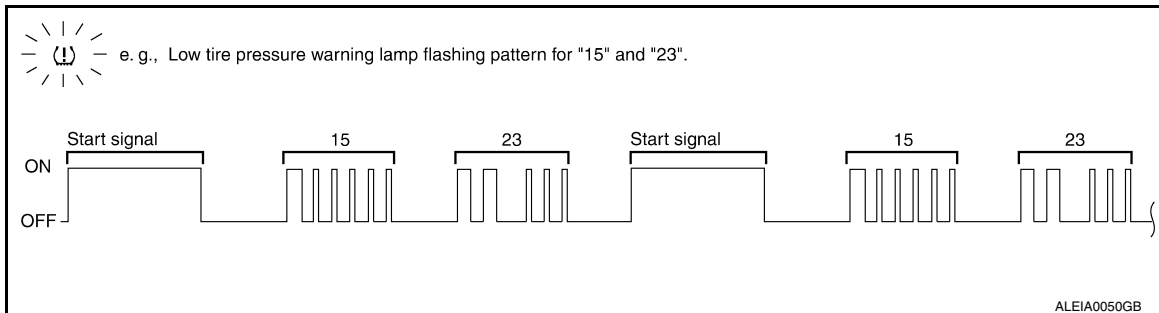

NOTE:

The system is normal when the low tire pressure warning lamp flashes 5 times and continues repeating. Self-diagnosis results are erased automatically by turning the ignition switch "OFF".

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

| Flash Code | Malfunction part | Reference page |
|----------------------|--|-----------------------|
| 15 16 17 18 | Tire pressure dropped below specified value. Refer to WT-8, "System Description" . | — |
| 21 22 23 24 | Transmitter no data (FL) Transmitter no data (FR) Transmitter no data (RR) Transmitter no data (RL) | WT-14 |
| 31 32 33 34 | Transmitter checksum error (FL) Transmitter checksum error (FR) Transmitter checksum error (RR) Transmitter checksum error (RL) | WT-16 |
| 35 36 37 38 | Transmitter pressure data error (FL) Transmitter pressure data error (FR) Transmitter pressure data error (RR) Transmitter pressure data error (RL) | WT-18 |
| 41 42 43 44 | Transmitter function code error (FL) Transmitter function code error (FR) Transmitter function code error (RR) Transmitter function code error (RL) | WT-16 |
| 45 46 47 48 | Transmitter battery voltage low (FL) Transmitter battery voltage low (FR) Transmitter battery voltage low (RR) Transmitter battery voltage low (RL) | WT-16 |
| 52 | Vehicle speed signal | WT-19 |
| 54 | Vehicle ignition signal | WT-20 |

TPMS

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

TPMS

Symptom Table

INFOID:000000005266508

| Symptom | Reference |
|--|-----------------------|
| Low tire pressure warning lamp does not come on when ignition switch is turned ON. | WT-36 |
| Low tire pressure warning lamp stays on when ignition switch is turned ON. | WT-37 |
| Low tire pressure warning lamp flashes when ignition switch is turned ON. | WT-38 |
| Hazard warning lamps flash when ignition switch is turned ON. | WT-39 |
| ID registration cannot be completed. | WT-40 |

A

B

C

D

WT

F

G

H

I

J

K

L

M

N

O

P

LOW TIRE PRESSURE WARNING LAMP DOES NOT TURN ON

< SYMPTOM DIAGNOSIS >

LOW TIRE PRESSURE WARNING LAMP DOES NOT TURN ON

Low Tire Pressure Warning Lamp Does Not Come On When Ignition Switch Is Turned On

INFOID:000000005266509

DIAGNOSTIC PROCEDURE

1.SELF-DIAGNOSTIC RESULT CHECK

Using CONSULT-III, check display contents of BCM in SELF-DIAGNOSIS.

Is CAN COMM CIRCUIT displayed in the self-diagnosis display items?

- YES >> Malfunction in CAN communication system.
- NO >> GO TO 2

2.CHECK COMBINATION METER

Check combination meter operation. Refer to [MWI-24, "CONSULT-III Function \(METER/M&A\)"](#).

Is the inspection result normal?

- YES >> GO TO 3
- NO >> Replace combination meter. Refer to [MWI-91, "Removal and Installation"](#).

3.CHECK LOW TIRE PRESSURE WARNING LAMP

Disconnect BCM harness connector.

Does the low tire pressure warning lamp activate?

- YES >> Replace BCM. Refer to [BCS-56, "Removal and Installation"](#).
- NO >> Check combination meter operation. Refer to [MWI-23, "Diagnosis Description"](#).

LOW TIRE PRESSURE WARNING LAMP STAYS ON

< SYMPTOM DIAGNOSIS >

LOW TIRE PRESSURE WARNING LAMP STAYS ON

Low Tire Pressure Warning Lamp Stays On When Ignition Switch Is Turned On

INFOID:000000005266510

DIAGNOSTIC PROCEDURE

1. BCM CONNECTORS

1. Turn ignition switch OFF.
2. Disconnect BCM harness connectors.
3. Check terminals for damage or loose connections.

Is the inspection result normal?

- YES >> GO TO 2
NO >> Repair or replace damaged parts.

2. BCM POWER SUPPLY AND GROUND CIRCUITS

Check BCM power supply and ground circuits. Refer to [BCS-31. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-56. "Removal and Installation"](#).
NO >> Repair BCM circuits.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WT

LOW TIRE PRESSURE WARNING LAMP BLINKS

< SYMPTOM DIAGNOSIS >

LOW TIRE PRESSURE WARNING LAMP BLINKS

Low Tire Pressure Warning Lamp Flashes When Ignition Switch Is Turned On

INFOID:000000005266511


Regarding Wiring Diagram information, refer to [WT-30, "Wiring Diagram - TIRE PRESSURE MONITORING SYSTEM -"](#).

NOTE:

If low tire pressure warning lamp flashes as shown, the system is normal.

Flash Mode A

- This mode shows transmitter status is OFF-mode.
Carry out transmitter wake up operation. Refer to [WT-5, "Transmitter Wake Up Operation"](#).

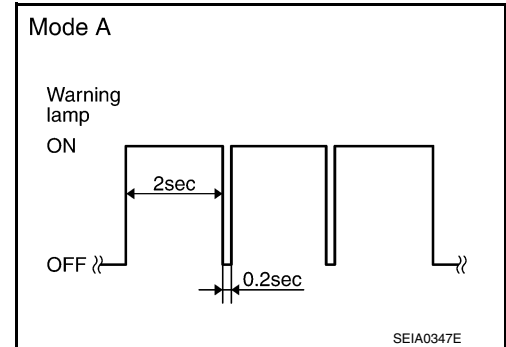

1. CHECK BCM CONNECTORS

1. Turn ignition switch OFF.
2. Disconnect BCM harness connectors.
3. Check terminals for damage or loose connections.

Is the inspection result normal?

YES >> GO TO 2

NO >> Repair or replace damaged parts.

2. CHECK TIRE PRESSURE WARNING CHECK CONNECTOR CIRCUIT


Check continuity between BCM harness connector M18 terminal 15 and ground.

Continuity should not exist.

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-56, "Removal and Installation"](#).

NO >> Repair circuit for short to ground.

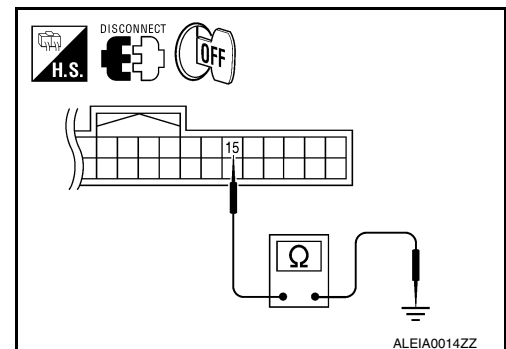

HAZARD WARNING LAMPS FLASH

< SYMPTOM DIAGNOSIS >

HAZARD WARNING LAMPS FLASH

Hazard Warning Lamps Flash When Ignition Switch Is Turned On

INFOID:000000005266512

DIAGNOSTIC PROCEDURE

1. CHECK BCM GROUND CIRCUIT

Check BCM ground circuit. Refer to [BCS-31, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-56, "Removal and Installation"](#).

NO >> Repair BCM ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WT

ID REGISTRATION CANNOT BE COMPLETED

< SYMPTOM DIAGNOSIS >

ID REGISTRATION CANNOT BE COMPLETED

ID Registration Cannot Be Completed

INFOID:000000005266513

DIAGNOSTIC PROCEDURE

1.PERFORM ID REGISTRATION OF ALL TRANSMITTERS

Carry out ID registration of all transmitters. Refer to [WT-6, "ID Registration Procedure"](#).

Can ID registration of all transmitters be completed?

YES >> Inspection End.

NO >> GO TO [WT-14, "Diagnosis Procedure"](#).

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005531985

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution for work

INFOID:000000005266515

- After removing and installing the opening/closing parts, be sure to carry out fitting adjustments to check their operation.
- Check the lubrication level, damage, and wear of each part. If necessary, grease or replace it.

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P

PREPARATION

< PREPARATION >


PREPARATION

PREPARATION

Special Service Tool


INFOID:000000005266516

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.
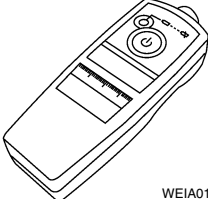
| Tool number (Kent-Moore No.) Tool name | Description |
|--|---|
| KV991B1000 (J-45295) Transmitter activation tool  WEIA0144E | <ul style="list-style-type: none">• Transmitter wake up operation• ID registration procedure |

Commercial Service Tool

INFOID:000000005266517
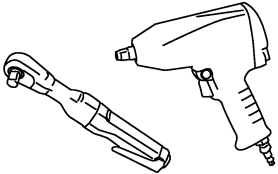
| Tool name | Description |
|---|---------------------|
| Power tool  PBIC0190E | Removing wheel nuts |

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

NVH Troubleshooting Chart

INFOID:000000005266518

Use chart below to help you find the cause of the symptom. If necessary, repair or replace these parts.

| Symptom | | Possible cause and SUSPECTED PARTS | | | | | | | | | | Reference page | | | | | |
|---------|------------|------------------------------------|-----------|-------------------------|------------------|-----------------------|----------------|---------------------|----------------------------|---------------------------------|-------------------------------|----------------|------------|-------|----------|---|---|
| | | Out-of-round | Imbalance | Incorrect tire pressure | Uneven tire wear | Deformation or damage | Non-uniformity | Incorrect tire size | FRONT AND REAR FINAL DRIVE | FRONT AXLE AND FRONT SUSPENSION | REAR AXLE AND REAR SUSPENSION | TIRES | ROAD WHEEL | BRAKE | STEERING | | |
| Noise | TIRES | × | × | × | × | × | × | | × | × | × | × | | × | × | WT-44 WT-45 WT-50 WT-46 — — WT-50 DLN-160, "NVH Troubleshooting Chart" , DLN-194, "NVH Troubleshooting Chart" , DLN-226, "NVH Troubleshooting Chart" , DLN-250, "NVH Troubleshooting Chart" FAX-4, "NVH Troubleshooting Chart" , FSU-4, "NVH Troubleshooting Chart" RAX-18, "NVH Troubleshooting Chart" , RAX-6, "NVH Troubleshooting Chart" , RSU-4, "NVH Troubleshooting Chart" Refer to TIRES in this chart. Refer to ROAD WHEEL in this chart. BR-5, "NVH Troubleshooting Chart" ST-5, "NVH Troubleshooting Chart" | |
| | | × | × | × | × | × | | × | | × | × | × | | × | × | | |
| | | | | × | | | | × | | × | × | × | | | | | × |
| | | × | × | × | × | × | × | × | | × | × | × | | × | × | | × |
| | | × | × | × | × | × | | × | | × | × | × | | × | × | | × |
| | | × | × | × | × | × | | × | | × | × | × | | | | | |
| | ROAD WHEEL | × | × | | | × | | | × | × | × | | × | × | × | | |
| | | × | × | | | × | | | | × | × | | × | × | × | | |
| | | × | × | | | × | | | | × | × | | × | × | × | | |
| | | × | × | | | × | | | | × | × | | × | | | | |

x: Applicable

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WT

WHEEL

< ON-VEHICLE MAINTENANCE >


ON-VEHICLE MAINTENANCE

WHEEL

Inspection

INFOID:000000005266519

1. Remove wheel and tire using power tool.
2. Check tires for wear and improper inflation.
3. Check wheels for deformation, cracks and other damage. If deformed, remove wheel and check wheel runout.
 - a. Remove tire from wheel and mount wheel on a tire balance machine.
 - b. Set dial indicator as shown in the illustration. Refer to [WT-50, "Road Wheel"](#).
4. Check front wheel bearings for looseness.
5. Check front suspension for looseness.
6. Install wheel and tire. Refer to [WT-46, "Rotation"](#).

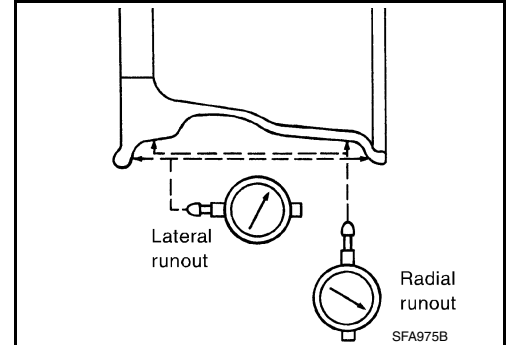

WHEEL AND TIRE ASSEMBLY

< ON-VEHICLE REPAIR >

ON-VEHICLE REPAIR

WHEEL AND TIRE ASSEMBLY

Balancing Wheels

INFOID:000000005266520

WHEEL BALANCE REMOVAL

1. Remove wheel and tire using power tool.
2. Using releasing agent, remove double-faced adhesive tape from the wheel.

CAUTION:

- Be careful not to scratch the wheel during removal.
- After removing double-faced adhesive tape, wipe clean traces of releasing agent from the wheel.

WHEEL BALANCE INSTALLATION AND ADJUSTMENT

- If a tire balance machine has adhesion balance weight mode settings and drive-in weight mode setting, select and adjust a drive-in weight mode suitable for wheels.

1. Set wheel on wheel balancer using the center hole as a guide. Start the tire balance machine.
2. When inner and outer imbalance values are shown on the wheel balancer indicator, multiply outer imbalance value by 1.6 to determine balance weight that should be used. Select the outer balance weight with a value closest to the calculated value and install it to the designated outer position of, or at the designated angle in relation to the road wheel.

CAUTION:

- Do not install the inner balance weight before installing the outer balance weight.
- Before installing the balance weight, be sure to clean the mating surface of the wheel.

Indicated imbalance value $\times 5/3 =$ balance weight to be installed

Calculation example:


23 g (0.81 oz) $\times 5/3 = 38.33$ g (1.35 oz) = 40 g (1.41 oz) balance weight (closer to calculated balance weight value)

Note that balance weight value must be closer to the calculated balance weight value.

Example:

37.4 g = 35 g (1.23 oz)

37.5 g = 40 g (1.41 oz)

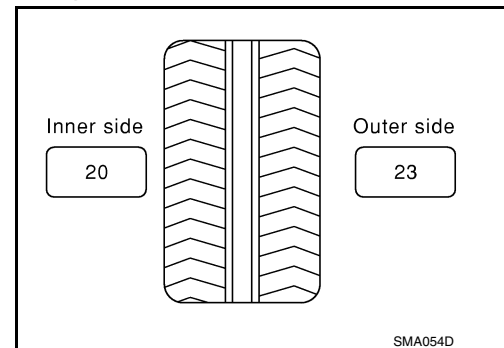

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P


WHEEL AND TIRE ASSEMBLY

< ON-VEHICLE REPAIR >

- Install balance weight in the position shown.
- When installing balance weight to wheels, set it into the grooved area on the inner wall of the wheel as shown so that the balance weight center is aligned with the wheel balancer indication position (angle).

CAUTION:

- Always use Genuine NISSAN adhesion balance weights.
- Balance weights are not reusable; always replace with new ones.
- Do not install more than three sheets of balance weights.

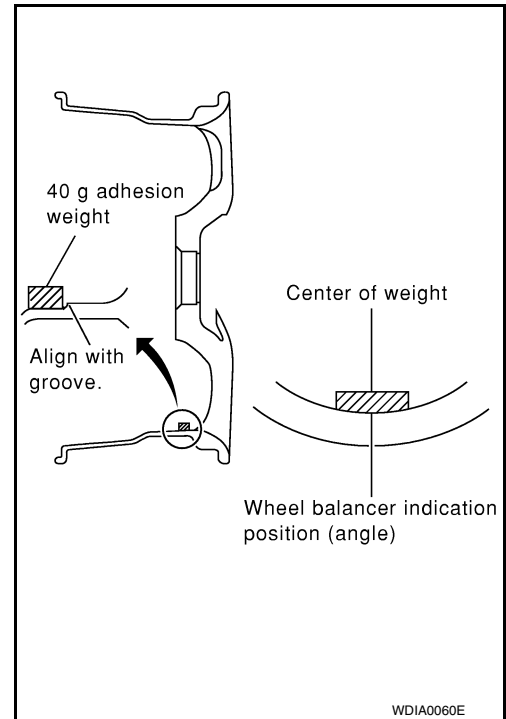

- If calculated balance weight value exceeds 50 g (1.76 oz), install two balance weight sheets in line with each other as shown.

CAUTION:

Do not install one balance weight sheet on top of another.


- Start wheel balancer again.
- Install drive-in balance weight on inner side of road wheel in the wheel balancer indication position (angle).

CAUTION:

Do not install more than two balance weights.

- Start wheel balancer. Make sure that inner and outer residual imbalance values are 5 g (0.18 oz) each or below.
 - If either residual imbalance value exceeds 5 g (0.18 oz), repeat installation procedures.

Wheel balance (Maximum allowable imbalance):

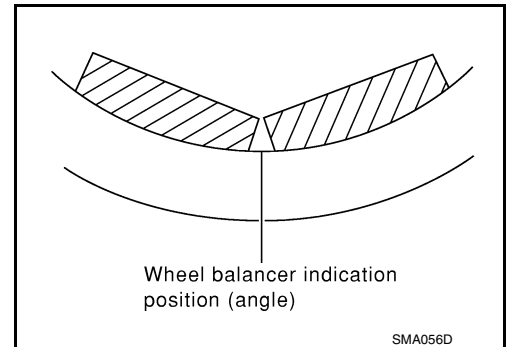

| | | |
|-----------------------------|-------------------------|--------------------------|
| Maximum allowable imbalance | Dynamic (At rim flange) | 5 g (0.18 oz) (one side) |
| | Static | 10 g (0.35 oz) |

Rotation

INFOID:000000005266521

NOTE:

Follow the maintenance schedule for tire rotation service intervals. Refer to [MA-8. "Schedule 1"](#).


- Remove wheels and tires.
- Rotate wheels and tires on each side from front to back as shown. Do not include the spare wheel and tire when rotating the wheels and tires.

Wheel nut : 133 N·m (14 kg-m, 98 ft-lb)

CAUTION:

When installing wheels and tires, tighten them diagonally by dividing the work two to three times in order to prevent the wheels from developing any distortion.

- Adjust the tire pressure to specification. Refer to [WT-50. "Tire"](#).

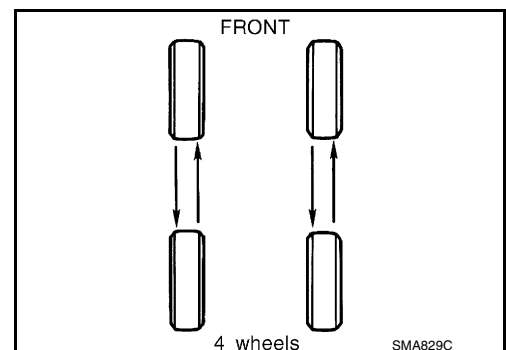

WHEEL AND TIRE ASSEMBLY

< ON-VEHICLE REPAIR >

4. After the wheel and tire rotation, retighten the wheel nuts after the vehicle has been driven for 1,000 km (600 miles), and also after any wheel and tire has been installed, such as after repairing a flat tire.

A

B

C

D

WT

F

G

H

I

J

K

L

M

N

O

P

REMOVAL AND INSTALLATION

< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION


REMOVAL AND INSTALLATION

Transmitter (Pressure Sensor)


INFOID:000000005266522

REMOVAL

1. Remove wheel and tire using power tool.
2. Deflate tire. Unscrew transmitter retaining nut and allow transmitter to fall into tire.
3. Gently bounce tire so that transmitter falls to bottom of tire. Place wheel and tire assembly on tire changing machine and break both tire beads. Ensure that the transmitter remains at the bottom of the tire while breaking the bead.

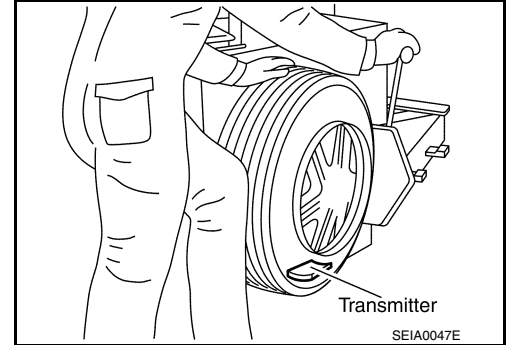


4. Turn tire so that valve hole is at bottom, and gently bounce the tire to ensure transmitter is near valve hole. Carefully lift tire onto turntable and position valve hole (and transmitter) 270 degrees from mounting/dismounting head.
5. Lubricate tire well, and remove top side of tire. Reach inside the tire and remove the transmitter.
6. Remove the second side of the tire as normal.

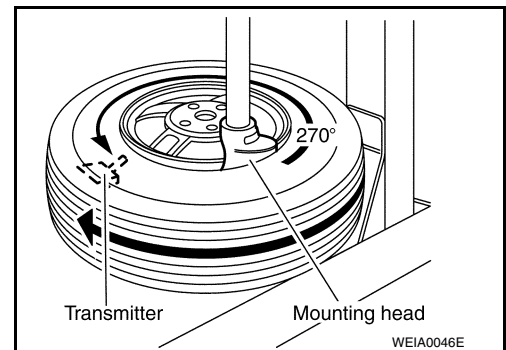

INSTALLATION

1. Place first side of tire onto wheel rim.

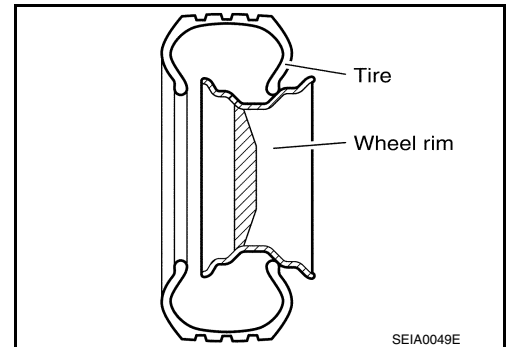

2. Apply suitable silicone lubricant to new transmitter seal then install seal on transmitter. Refer to [MA-12, "Fluids and Lubricants"](#).


NOTE:

Always replace the seal after every disassembly.

3. Mount transmitter on rim and tighten nut to specification.

NOTE:

Make sure no burrs exist in the valve stem hole of the wheel.

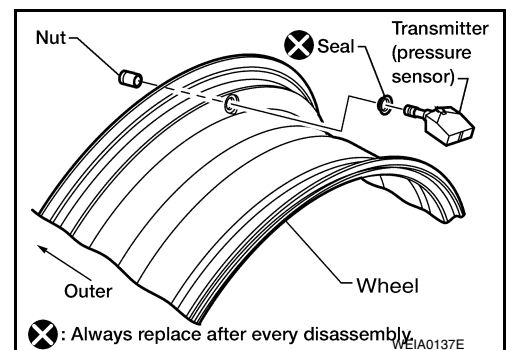

Transmitter nut : 7.7 N·m (0.79 kg-m, 68 in-lb)

REMOVAL AND INSTALLATION


< REMOVAL AND INSTALLATION >

- Place wheel on turntable of tire machine. Ensure that transmitter is 270 degrees from mounting/dismounting head.

NOTE:

Do not touch transmitter with mounting head.

- Lubricate tire well, and install second side of tire as normal. Ensure that tire does not rotate relative to rim.

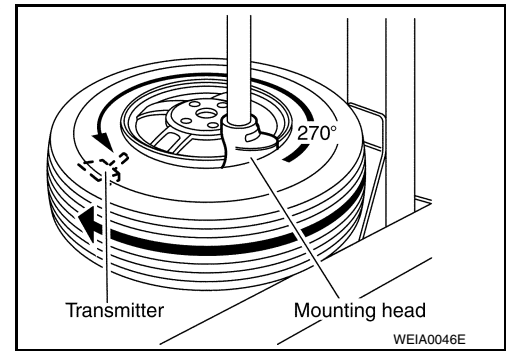

- Inflate tire and balance the wheel and tire assembly. Refer to [WT-45. "Balancing Wheels"](#).
- Install wheel and tire assembly in appropriate wheel position on vehicle.
NOTE:
If replacing transmitter, transmitter wake up operation must be performed. Refer to [WT-5. "Transmitter Wake Up Operation"](#).
- Adjust neutral position of steering angle sensor. Refer to [BRC-123. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Road Wheel

INFOID:000000005266523

| Wheel type | | Aluminum | Steel | |
|-----------------------------|-------------------------|------------------------------------|---------------------|---------------------|
| | | | Inside | Outside |
| Maximum radial runout limit | Lateral mm (in) | 0.3 (0.012) or less | 0.8 (0.031) or less | 0.8 (0.031) or less |
| | Radial mm (in) | 0.3 (0.012) or less | 0.6 (0.024) or less | 0.6 (0.024) or less |
| Maximum residual imbalance | Dynamic (at rim flange) | Less than 5 g (0.18 oz) (per side) | | |
| | Static (at rim flange) | Less than 10 g (0.35 oz) | | |

Tire

INFOID:000000005266524

Unit: kPa (kg/cm², psi)

| Tire size | Air pressure | |
|------------|-------------------|---------------|
| | Conventional tire | Spare tire |
| P265/70R16 | 240 (2.4, 35) | 240 (2.4, 35) |
| P265/75R16 | 240 (2.4, 35) | 240 (2.4, 35) |
| P265/65R17 | 240 (2.4, 35) | 240 (2.4, 35) |